



# JVC

# SERVICE MANUAL

DVD PLAYER

## XV-D701BK

Area Suffix	
B	U.K.
E	Continental Europe
EE	Russian Federation
EN	Northern Europe

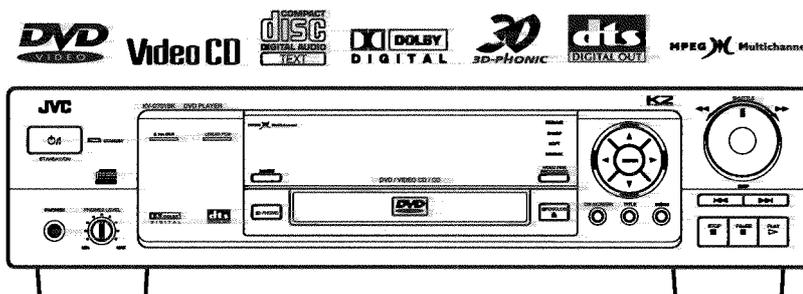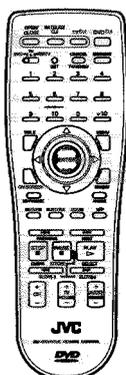

### Contents

Safety Precautions .....	1-2	Trouble shooting .....	2-39
Important for laser products .....	1-3	Check points for each error .....	2-45
Instruction book .....	1-4	Main adjustment .....	2-50
Description of major ICs .....	2-1	Block diagrams .....	2-53
Internal connection of FL display .....	2-25	Schematic diagrams .....	2-57
Removal of main parts .....	2-27	Printed circuit boards .....	2-63
Precautions for service .....	2-38	Parts list .....	3-1

## Safety Precautions

1. This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (⚠) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.

### 5. Leakage current check (Electrical shock hazard testing)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.


- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.)

- Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500Ω 10W resistor paralleled by a 0.15μ F AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now reverse the plug in the AC outlet and repeat each measurement voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

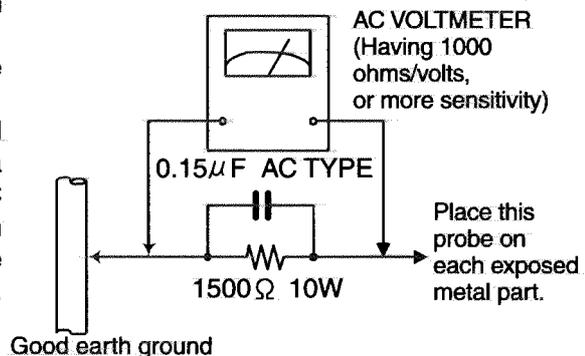

## Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

**⚠ CAUTION** Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of preforming repair of this system.

# Important for laser products

**1.CLASS 1 LASER PRODUCT**

**2.DANGER :** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

**3.CAUTION :** There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.

**4.CAUTION :** The compact disc player uses invisible laser radiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.

**5.CAUTION :** If safety switches malfunction, the laser is able to function.

**6.CAUTION :** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**WARNING :** Osynlig laserstråling i denna del är öppnad och spårren är urkopplad. Beträkta ej strålen.

**VARO :** Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömille lasersäteille. Katso säteeseen.


**ADVARSEL :** Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

**ADVARSEL :** Usynlig laserstråling ved åbning, når sikkerhedsbryteren er avsluttet. Undgå udsættelse for stråling.

## REPRODUCTION AND POSITION OF LABELS

### WARNING LABEL

<p>DANGER : Invisible laser radiation when open and interlock or defeated. AVOID DIRECT EXPOSURE TO BEAM (e)</p>	<p>VARO : Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömille lasersäteille. Katso säteeseen. (d)</p>	<p>WARNING : Osynlig laserstråling i denna del är öppnad och spårren är urkopplad. Beträkta ej strålen. (s)</p>	<p>ADVARSEL : Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling. (f)</p>
--	--	---	--

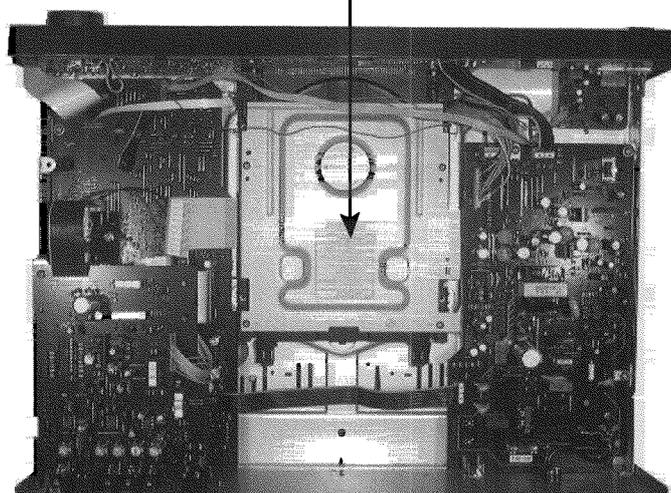


# Instructions




## DVD PLAYER XV-D701BK

Introduction	1
Preliminary knowledge	4
Getting started	12
Basic operations	20
Advanced operations	26
Setting and adjustment	50
Additional information	64

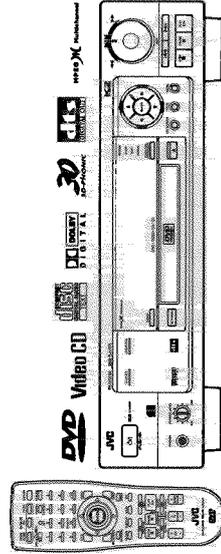

INSTRUCTIONS

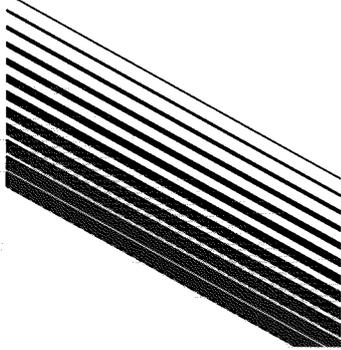


**For Customer Use:**  
Enter below the Model No. and Serial No. which are located on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

LET0141-003A  
[B, E]

Printed in Japan  
03987TMJBNPRI

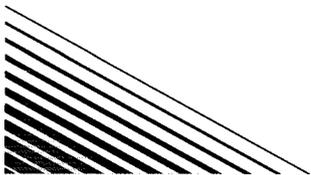

## Features

### Picture functions

- **Strobe function**  
The unit can display a list of still pictures on the TV screen.
- **Digest function**  
You can select the desired title from the opening scenes displayed on the TV screen.
- **Angle function\***  
You can enjoy variety of scene angles.
- **Zoom function**  
You can view scenes close-up.
- **VFP function**  
You can change the picture quality.
- **Parental lock\***  
When a movie which includes violent scenes is played back, the scenes are cut or replayed with other scenes so as not to be viewed by children.

### Compatible with a variety of sound formats

- **High quality digital sound**  
You can enjoy high quality sound with Dolby Digital, MPEG Audio or Linear-PCM.
- **Surround function\***  
The unit is compatible with Dolby Digital Surround, DTS surround, and MPEG Multichannel (DTS surround is available for digital output only).
- **3D PHONIC function**  
You can enjoy surround sound with your 2 channel system.

### Other functions

- **Multi-language subtitles and sound\***  
You can select the subtitle or sound language.
- **Multi-disc player**  
You can also enjoy Audio CD discs and Video CD discs.
- **Operation from the on-screen display**  
You can operate the unit from the on-screen display.

Functions with (\*) mark only work on a DVD disc that is compatible with each function.

## Table of contents


<b>Introduction</b> .....	Page 2	<b>Basic operations</b> .....	Page 20
<b>Features</b> .....		<b>Before operation</b> .....	20
<b>Notes on care and handling</b> .....		To turn on your TV and the unit.....	20
<b>Preliminary Knowledge</b> .....	Page 4	To select the source you want to operate.....	20
<b>Names of parts and controls</b> .....		<b>Inserting and removing discs</b> .....	21
Front panel.....	4	To insert or remove discs.....	21
Display window.....	5	<b>Playing a DVD VIDEO or CD disc</b> .....	22
Rear panel.....	5	To play a disc from the beginning.....	22
Remote control unit.....	6	To stop playback temporarily.....	23
<b>Display information</b> .....		To advance or reverse play rapidly while monitoring.....	23
On-screen displays.....	8	To locate the beginning of the scene or song.....	23
To prevent the monitor from burning out -		<b>Resuming Playback</b> .....	24
<b>SCREEN SAVER</b> .....	10	To store the point where you want to resume playback from - RESUME.....	24
On-screen guide icons.....	10	To resume playback from the stored point - RESUME.....	24
<b>Preliminary knowledge about discs</b> .....		<b>Summary of basic operations</b> .....	25
Playable disc types.....	11		
Disc construction.....	11		
<b>Getting started</b> .....	Page 12		
<b>Connections</b> .....		<b>Advanced operations</b> .....	Page 26
Before making any connections.....	12	<b>Playing from specific position on a disc</b> .....	26
To connect to a TV, monitor, or projector with the audio input and video input jacks.....	12	<b>Playing in slow-motion</b> .....	33
To connect to a TV, monitor, or projector with the SCART connector.....	13	<b>Playing a scene close-up</b> .....	34
To connect to an audio amplifier or receiver.....	13	<b>Changing the track order</b> .....	37
To connect to an amplifier/receiver equipped with 5-1-channel inputs.....	14	<b>Repeat playback</b> .....	37
<b>Turn on the unit</b> .....	15	<b>Sampling all tracks</b> .....	39
To connect to audio equipment with a digital input.....	15	<b>Viewing from multiple angles</b> .....	40
To connect the power cord.....	16	<b>Changing the language and sound</b> .....	42
To install batteries in the remote control unit.....	16	<b>Adjusting the picture to suit the preferences</b> .....	45
To turn on/off the unit.....	17	<b>Adjusting the surround sound</b> .....	46
<b>Using the remote control unit</b> .....	17	<b>Checking the disc time</b> .....	47
To use the remote control unit for TV operation.....	18	<b>Information about CD TEXT</b> .....	49
To use the remote control unit for satellite tuner operation.....	19	<b>Setting and adjustment</b> .....	Page 50
		<b>Selecting preferences</b> .....	50
		<b>Limiting playback by children</b> .....	60
		<b>Additional information</b> .....	Page 64
		<b>Care and handling of discs</b> .....	64
		<b>Troubleshooting</b> .....	65
		<b>Specifications</b> .....	66

<b>Table of languages and their abbreviations</b> .....	Appendix A
<b>Country code list for parental lock</b> .....	Appendix B

# Names of parts and controls

Refer to the corresponding pages indicated in ( ) for details.

## Front panel

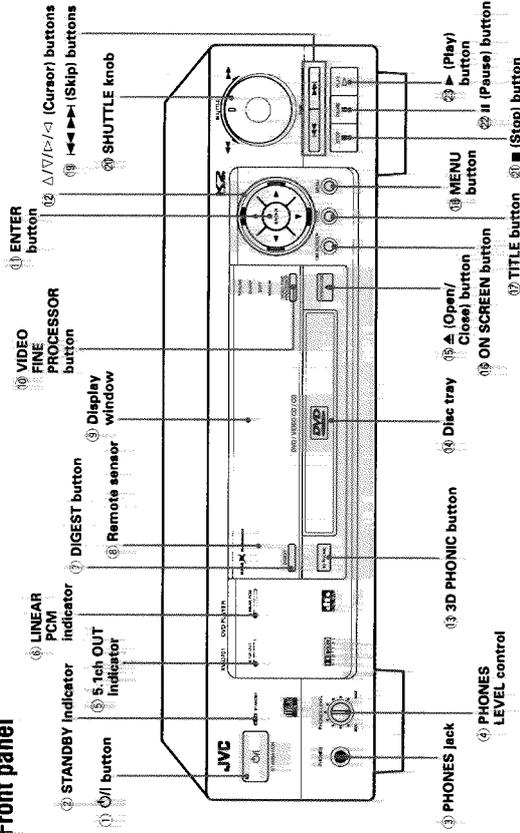

- Off (Standby/On) button (17)**  
Turns the unit on or off (standby).
- STANDBY indicator**  
Lights when the power cord is connected and the unit is on standby. When the unit is turned on, the STANDBY indicator goes off.
- PHONES jack**  
Connection jack for headphones.
- PHONES LEVEL control**  
Adjusts the volume level of headphones connected to the PHONES jack.
- 5.1ch OUT indicator**  
Lights when 5.1 channel output signals are fed from the analog audio output jacks.
- LINEAR PCM indicator**  
Lights when a Linear PCM audio disc is played back. This indicator also lights in stop mode for Audio CDs.
- DIGEST button (32)**  
Displays beginning scenes of each title, chapter, or track on the TV screen.
- Remote sensor**  
Receives the signal from the remote control unit.
- Display window**  
Indicates the current status of the unit.
- VIDEO FINE PROCESSOR button (45)**  
Change the picture quality.
- ENTER button**  
Executes a selected item in a menu or on-screen display.
- Off (Cursor) buttons (46)**  
Selects an item in on-screen displays or menus.
- 3D PHONIC button (48)**  
Produces a simulated surround effect.
- Disc tray (21)**  
Used to load discs.
- Open/Close button (21)**  
Opens and closes the disc tray.
- ON SCREEN button (8)**  
Displays an on-screen display of the unit on the TV screen or monitor.
- TITLE button (26)**  
Displays a title menu of DVD on the TV screen or monitor.
- MENU button (26)**  
Displays a menu of DVD on the TV screen or monitor.
- SHUTTLE knob (23, 33)**  
Performs fast forward/backward and slow motion playback.
- (Skip) buttons (23, 28)**  
Performs skipping or previous/next operation.
- (Step) button (22)**  
Stops playback.
- (Pause) button (23)**  
Pauses during playback.
- (Play) button (22)**  
Starts playback. Also, used as a SELECT button for PBC of Video CDs.

# Notes on care and handling

## Important cautions

- Installation of the unit**
  - Select a place which is level, dry, and neither too hot nor too cold (between 5°C and 35°C, 41°F and 95°F).
  - Leave sufficient distance between the unit and the TV.
  - Do not use the player in a place subject to vibrations.

### Power cord

- Do not handle the power cord with wet hands!
- A small amount of power (2 watts) is always consumed while the power cord is connected to the wall outlet.
- When unplugging the player from the wall outlet, always pull the plug, not the power cord.

### To prevent malfunction of the unit

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the unit.
- Do not use any non-standard shape disc available on the market, because it may damage the unit.
- Do not use a disc with tape, seals, or paste on it, because damage to the unit may result.

### Notes about copyright laws

- Please check the copyright laws in your country before recording from DVD VIDEO, Audio CD, and Video CD discs. Recording of copyrighted material may infringe copyright laws.

### Note about the copyright system

- The DVD VIDEO disc is protected by the copyright system. When you connect the unit to your VCR directly, the copyright system activates and the picture may not be played back correctly.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories.  
Confidential Unpublished Works.  
© 1992-1997 Dolby Laboratories, Inc. All rights reserved.

Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other world-wide patents issued and pending. "DTS", "DTS Digital Surround", are trademarks of Digital Theater System, Inc.  
© 1996 Digital Theater Systems, Inc. All Rights Reserved.

### Display window

① Disc indicator  
② Multi-information window  
③ Time select indicator  
④ Function indicator  
⑤ RESUME indicator  
⑥ Channel indicator  
⑦ Linear PCM indicator  
⑧ Chapter, title, track indicator  
⑨ Speaker indicator  
⑩ Picture quality indicators

① **Disc indicator**  
Lights when a disc is in the unit. "DVD" also appears when a DVD disc is in the unit.

② **Multi-information window**  
Displays time, text, and additional information.

③ **Time select indicator**  
Shows what the time information in the Multi-information window means.

④ **Function indicator**  
Activated function indicators light up.

⑤ **RESUME indicator**  
Lights when a point to be resumed from is stored.

⑥ **Channel indicator**  
Displays number of channels in the currently selected audio playback format.

⑦ **Linear PCM indicator**  
Lights only when the playback disc contains linear PCM data. This indicator also lights while an Audio CD is placed in the unit.

⑧ **Speaker indicator**  
Lights during disc playback. The display shows all possible audio output channels contained in the 5.1ch. format. Lights when signals are output from the corresponding audio output jacks. Lights when signals are output from the video output jacks. When the 3D PHONIC function is ON, this indicator also lights.

⑨ **Chapter, title, track indicator**  
Displays chapter, title, or track number.

⑩ **Picture quality indicators**  
Selected indicator of the picture quality lights up.

### Rear panel

① VIDEO OUT jack  
② S-VIDEO OUT jack  
③ AV OUT  
④ AUDIO OUT jacks (ANALOG)  
⑤ AUDIO OUT jacks (DIGITAL)  
⑥ AC power cord  
⑦ Region Code label

① **VIDEO OUT jack (12)**  
Outputs a composite video signal.

② **S-VIDEO OUT jack (12)**  
Outputs an S-video signal.

③ **AV OUT (12)**  
Standard 21-pin SCART connectors (feed the video and audio signals). The video output signal is selected from composite (COMP) and Y/C by the COMP-Y/C switch. The audio signal is same as AUDIO OUT.

④ **AUDIO OUT jacks (ANALOG)**  
FRONT (RIGHT and LEFT), REAR (RIGHT and LEFT), CENTER, and SUBWOOFER terminals output 5.1ch analog audio signals (Dolby Digital, MPEG Multichannel). FRONT terminals also OUTPUT Stereo analog audio signals.

⑤ **AUDIO OUT jacks (DIGITAL) (15)**  
Outputs digital audio signals. Both coaxial and optical connectors are provided.

⑥ **AC power cord (16)**  
Connects to the wall outlet.

⑦ **Region Code label (11)**  
Shows Region Code number.

### Remote control unit

① SATELLITE button  
② OPEN/CLOSE button  
③ DVD/TV/SAT switch  
④ SET button  
⑤ Numeric buttons  
⑥ TITLE button  
⑦ ON SCREEN button  
⑧ 3D PHONIC button  
⑨ RETURN button (for DVD/Video CD)  
⑩ SUBTITLE button (for DVD)  
⑪ (SKIP), PREVIOUS, NEXT buttons  
⑫ (STOP), CLEAR buttons  
⑬ SLOW buttons (for DVD/Video CD)  
⑭ CH button  
⑮ TV VOLUME button

⑯ Infrared signal-emitting window  
⑰ TV button  
⑱ DVD button  
⑲ RESUME button  
⑳ CANCEL button (TV/VIDEO)  
㉑ MENU button (for DVD)  
㉒ ENTER button (Cursor)  
㉓ DIGEST button (for DVD/Video CD)  
㉔ ANGLE button (for DVD)  
㉕ VFP button  
㉖ ZOOM button (for DVD/Video CD)  
㉗ (PAUSE), STROBE button  
㉘ (PLAY), SELECT button  
㉙ AUDIO VOLUME button

# Display information

The unit provides several on-screen displays and on-screen guide icons to help you operate the unit.

## On-screen displays

The unit provides several on-screen displays as shown below for choosing preferences for initial settings and functions which are not frequently used.

### To access on-screen displays

Press **OSD**. (Note that operation for accessing the "PARENTAL LOCK" on screen displays is different.). Depending on the type of disc inserted (or "no disc") and the player's mode, a proper on-screen display is accessed.

### Basic operations in on-screen displays

- **Cursor** appears at the on-screen display. You can move **Cursor** using **Left** and **Right** to select items you want to work with.
- With an item like **ENTER**, you can change the setting by placing **Cursor** on the item and press **ENTER**.
- **OK** - type item works when you place **Cursor** on the item and press **ENTER**.
- In the message box, this operation to be performed is displayed according to the item pointed by **Cursor**.
- Numbers are entered using **Number** to **0**.
- Some functions become effective by pressing **ENTER** after specifying necessary entries.
- Pressing **EXIT** again exits the on-screen display.

### Opening display




Appears when the unit turns on.

### Preference (1 and 2) and Speaker setting displays (see page 50)


You can set preferences and speaker setting via these displays.

### To display the Preference 1/Preference 2 / Speaker setting display

- 1 Press **OSD** to stop the unit.  
if the current disc is not a DVD disc, you have to remove the disc from the tray.
- 2 Press **OSD**.

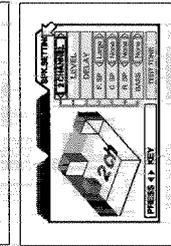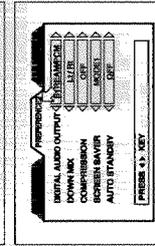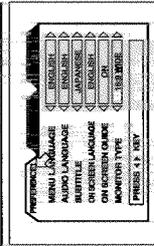

- 1 **SATELLITE** button (19)  
Turns the satellite tuner on or off.
- 2 **OPEN/CLOSE** button (21)  
Opens and closes the disc tray.
- 3 **DVD/TV/SAT switch** (18, 19, 20)  
Selects the function of the numeric buttons to control the corresponding device.
- 4 **SET** button (18, 19)  
Used to set the manufacturer's code for operating another manufacturer's TV, satellite tuner from the remote control unit.
- 5 **Numeric buttons** (18, 19, 25)  
Depending on the selection of the DVD/TV/SAT switch, they are used for entering a title, track or chapter number, or selecting a TV channel.
- 6 **TITLE** button (26)  
Displays a title menu of DVD on the TV screen or monitor. Switches the display in the display window (for Audio CD).
- 7 **ON SCREEN** button (6, 50)  
Displays an on-screen display of the player on the TV screen or monitor.
- 8 **3D PHONIC** button (46)  
Produces a simulated surround effect.
- 9 **RETURN** button (for DVD/Video CD)  
Returns to the previous menu.
- 10 **SUBTITLE** button (for DVD) (42)  
Turns subtitles on or off.
- 11 **Left/Right** (Skip), **PREVIOUS/NEXT** (for DVD/Video CD) buttons (23, 28, 27)  
Performs skipping a chapter, title or track.  
Also used for the page selection of a menu screen (for DVD/Video CD).
- 12 **Stop** button (22)  
Stops playback.  
Also used as a SELECT button in the PBC mode (for Video CD).
- 13 **Fast Forward/Backward** buttons (23, 33)  
Performs fast forward/backward playback operations.  
Also used for slow-motion playback of a picture (for DVD/Video CD).
- 14 **CH** button (18, 19)  
Changes the channels of TV or satellite tuner.
- 15 **TV VOLUME** button (18, 22)  
Adjusts the TV volume.
- 16 **Infrared signal-emitting window**  
Point this window toward the remote sensor on the front panel when pressing buttons.
- 17 **TV** button (18)  
Turns the TV on or off.
- 18 **DVD** button (17)  
Turns the unit on or off (standby).
- 19 **RESUME** button (24)  
Stores the location to resume playback from later.
- 20 **CANCEL, TV/VIDEO** button (18, 35)  
Cancels the previous settings.  
Also used to switch the input mode of TV.
- 21 **MENU** button (for DVD) (28)  
Displays a menu of DVD on the TV screen or monitor.
- 22 **ENTER, Up/Down** (Cursor) button  
Executes a selected item in a menu or on-screen display when pressing the button. Selects an item in the on-screen display or title menus or menus of DVD when tilting.
- 23 **DIGEST** button (for DVD/Video CD) (32)  
Displays beginning scenes of each title, chapter, or track on the TV screen.
- 24 **ANGLE** button (for DVD) (40)  
Changes camera angles during playback of a DVD containing multiple camera angles.
- 25 **VFP** button (46)  
Changes the picture quality.
- 26 **ZOOM** button (for DVD/Video CD) (34)  
Scene in a close-up view.
- 27 **Pause**, **STROBE** (for DVD/Video CD) button (23, 33)  
Pauses during playback.  
Also used to display nine continuous still pictures (for DVD/Video CD).
- 28 **Play**, **SELECT** button (22, 27)  
Starts playback.  
Also used as a SELECT button in the PBC mode (for Video CD).
- 29 **AUDIO VOLUME** button (22)  
Adjusts the volume of a JVC AV amplifier or receiver.

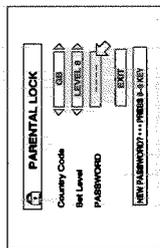


**Parental Lock on-screen display (see page 61)**

You can set the parental lock from this display.

To display the Parental Lock on-screen display

Press **STOP** while holding down **TV**.  
The Parental Lock on-screen display appears on the TV screen.

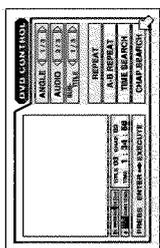

**The DVD on-screen display during playback**


You can select and set various function for DVD playback from this display.

To display the DVD on-screen display

During DVD playback, press **STOP**.

Current relative position the title (St: start, End: end),  
Current title number  
Current chapter number

Transmission rate  
Elapsed time from the beginning of the current title

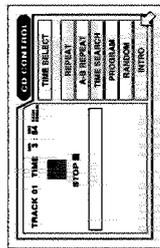


**The CD on-screen display**

You can select and set various function for Audio CD playback from this display.

To display the CD on-screen display

During Audio CD playback or stop mode, press **STOP**.

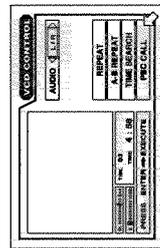

**The Video CD on-screen display during playback**

You can select and set various functions for Video CD playback on this display. When a Video CD disc is stopped, the same on-screen display which appears when an Audio CD disc is stopped appears.

To display the Video CD on-screen display


During Video CD playback or stop mode, press **STOP**.

Current relative position of the track (St: start, End: end),  
Current track number

Transmission rate  
Elapsed time from the beginning of the current track

**To prevent the monitor from burning out (SCREEN SAVER)**

A television monitor screen may be burned out if a static picture is displayed for a long time. To prevent this, the unit automatically activates the screen saver function if a static picture, such as an on-screen display or menu, is displayed for over 5 minutes.

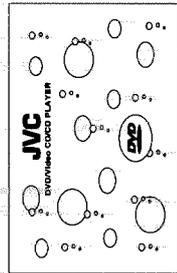

- Pressing any button on the unit or the remote control unit will release the screen saver function and return to the previous display.
- You can select one of several screen saver modes available (see page 56).
- When this function is set to "DIMMER", the display window on the panel always gets dark (FL Dimmer) in addition to the screen saver function (see page 56).

**On-screen guide icons**

During DVD playback, you may see icons displayed over the picture. These have the following meanings.

- : Displayed at the beginning of a scene recorded from multiple angles. (See page 40.)
- : Displayed at the beginning of a scene recorded with multiple audio languages. (See page 43.)
- : Displayed at the beginning of a scene recorded with multiple subtitles language. (See page 42.)

You can set the unit not to display on-screen icons above via the preference settings described on page 53.

**About invalid operation icon**

When you press a button, if the unit does not accept its operation, appears on your television screen. Operations are occasionally unacceptable even if is not displayed.

Note that some operations may not be accepted. For example, some discs may not allow fast forward, fast backward or slow-motion playback.

## Connections


Before using the unit, you have to connect the unit to a TV or amplifier. By connecting to an amplifier which has a digital terminal or Dolby digital capability, you can enhance the sound quality.

### Before making any connections

- Do not connect the AC power cord until all other connections have been made.
- Since different components often have different terminal names, carefully read the instructions supplied with the component you wish to connect.

### To connect to a TV, monitor, or projector with the audio input and video input jacks

You can enjoy using the unit by simply connecting it to a television set. To hear improved audio sound quality, connect the audio outputs to your audio equipment. (See the following pages.)

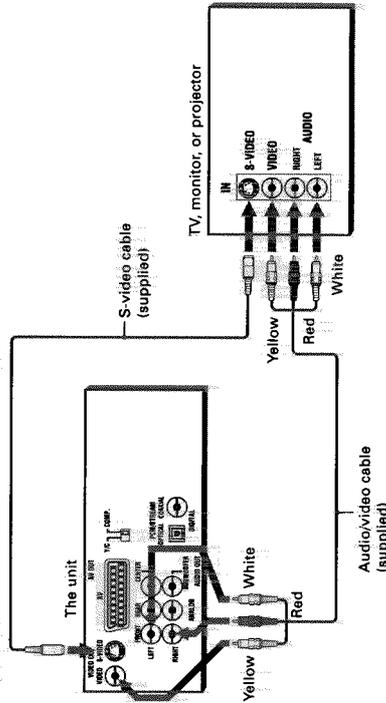

Connect the unit to a television set equipped with stereo audio input and video input jacks using the supplied audio/video cables.

- If your television set has a monaural audio input instead of stereo, you need to use an optional audio cable which converts stereo audio output to monaural.
- If your television set has an S-video input, you should connect it with the S-VIDEO output of the unit using the supplied S-video cable in addition to the (standard) video connection to get better picture quality.

**NOTE**

- Connect VIDEO OUT of the unit to the video input of a television set. Connecting VIDEO OUT of the unit to a TV via a VCR may cause a monitor problem when playing back a copy-protected disc.
- Do not connect the player to a NTSC system. Connect it to a PAL system.

## Preliminary knowledge about discs

### Playable disc types

Playable and non-playable disc types are as follows:

Playable discs	
DVD VIDEO	Video CD
DVD-ROM	DVD-Audio
CD-R	PHOTO CD
DVD-RAM	DVD-R
CD-ROM	CD-RW
	CD-EXTRA
	DVD-RW
	CD-G
	CD-EXTRA

### Notes on DVD VIDEO discs

- DVD players and DVD discs have their own Region Code numbers. This player only can play back DVD discs whose Region Code numbers include "2".




- This player accommodates discs for the PAL system.
- Playing back discs listed as "Non-playable discs" in the table above may generate noise and damage speakers.

### Disc construction

A DVD disc is comprised of "titles", while an Audio CD or Video CD is comprised of "tracks." Each title may be divided into some "chapters." For example, if a DVD disc contains some movies, each movie may have its own title number, and each movie may be divided into some chapters. In a DVD karaoke disc, each song usually has its own title number and does not have chapters. In general, each title has independent content, while each chapter in the same title has continuity.

(Example: DVD disc)

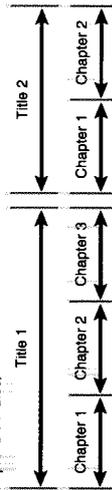

(Example: Audio CD/Video CD)




Getting started

English

**To connect to a TV, monitor, or projector with the SCART connector**

You can enjoy the unit by simply connecting it with your television set via a 21-pin SCART cable. To hear audio sound with better quality, connect the audio outputs with your audio equipment. (See the following pages.)

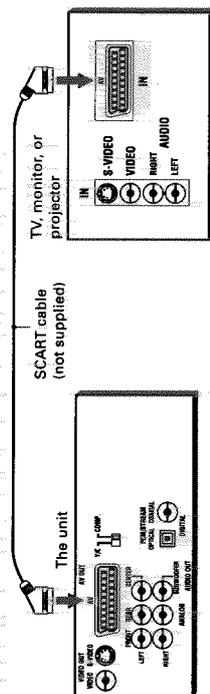

Connect the player's AV OUT connector with your TV's SCART connector using an optional SCART cable.

- If your TV's SCART connector is compatible only with the regular video signal, set the COMP-Y/C switch to "COMP".
- If your TV's SCART connector is compatible with the Y/C signal, set this switch to "Y/C". You will enjoy better-quality pictures.


**NOTES**

- Be sure not to plug in the power cord until all other connections have been made.
- Do not connect the player with a NTSC television. Connect it with a PAL television.

**To connect to an audio amplifier or receiver**

**Connection to an audio amplifier or receiver**

You can enjoy high-quality audio by connecting the unit's audio outputs to your amplifier or receiver.

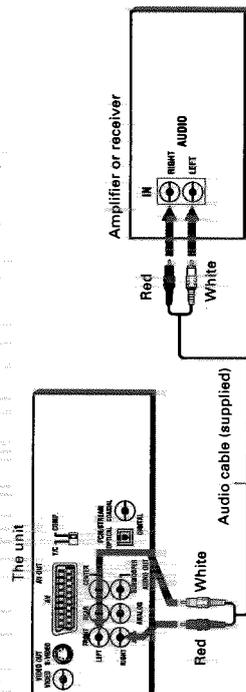

- Connect the unit's FRONT to any line-level inputs (such as AUX, DVD, CD, etc.) of an audio amplifier or receiver.


**NOTE**

- To playback a disc containing Dolby Digital 5.1-channel format with this connection, set the "DOWN MIX" in the "REFERENCE 2" on screen display to "Lr/Rr" or "Lr/Rb" according to the connected amplifier or receiver. See "DOWN MIX" on page 55.

Getting started

**To connect to an amplifier/receiver equipped with 5.1-channel inputs**

The Dolby Digital decoder and MPEG Multichannel decoder are built in the unit, so you can enjoy the Dolby digital and MPEG Multichannel surround sound without the need of an external decoder. Connect the unit's 5.1-channel outputs to the 5.1-channel inputs of an amplifier or receiver using the supplied audio cables.

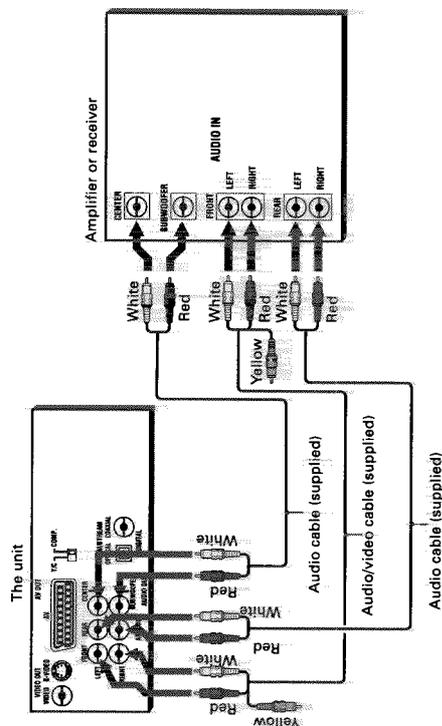

- Be sure to connect correctly between corresponding terminals. The order of the 5.1-channel terminals depend on units.
- An Audio/video cable is recommended for connection to the FRONT terminal (Yellow jack (for Video Signal) is not used in this connection).

**NOTE**


- When using the 5.1-channel outputs of the unit, set the "DOWN MIX" in the "REFERENCE 2" on-screen display to "OFF" and select "5.1 CHANNEL" or "EXPERT" in the "SPK.SETTING" on-screen display. If the "EXPERT" is selected, you can control the audio output balance of the speakers (see pages 55 and 57).

# Turn on the unit

## To connect to audio equipment with a digital input

Connection to a stereo amplifier/receiver (or a recording device such as DAT and MD recorders) which provides digital stereo inputs), a Dolby Digital decoder (or an amplifier with built-in Dolby Digital decoder), a DTS decoder (or an amplifier with built-in DTS decoder), or an MPEG multichannel decoder (or an amplifier with built-in MPEG multichannel decoder).

You can enhance the sound quality by connecting the unit's DIGITAL OUT (coaxial or optical) to the digital input of an amplifier, DAT or MD recorder by using an optional digital cable. The digital stereo audio signal from a disc is directly transferred. If you connect to a Dolby Digital decoder (or an amplifier with built-in Dolby Digital decoder), a DTS decoder (or an amplifier with built-in DTS decoder), or an MPEG multichannel decoder (or an amplifier with built-in MPEG multichannel decoder) by using an optional digital cable (coaxial or optical), you can enjoy high-quality audio and surround sound. When you make a digital connection, leave the stereo analog audio connection as it is. Otherwise, depending on the disc type, no audio may be reproduced.

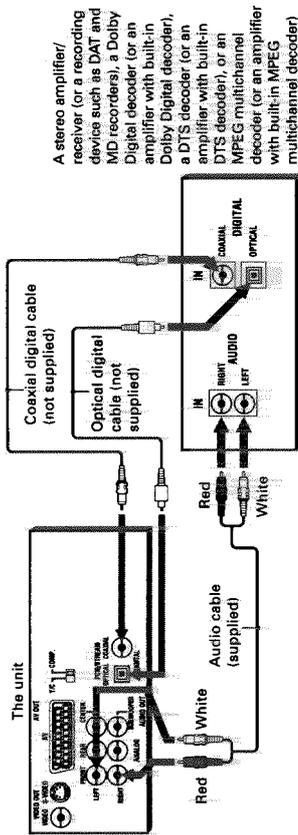

A stereo amplifier/receiver (or a recording device such as DAT and MD recorders), a Dolby Digital decoder (or an amplifier with built-in Dolby Digital decoder), a DTS decoder (or an amplifier with built-in Dolby Digital decoder), a DTS decoder (or an amplifier with built-in DTS decoder), or an MPEG multichannel decoder (or an amplifier with built-in MPEG multichannel decoder).

- For digital connection, connect the unit's DIGITAL out (coaxial or optical) to the digital input of a decoder or an amplifier with built-in Dolby Digital or DTS or MPEG Multichannel decoder using an optional digital cable.

### NOTES

- DTS (Digital Theater System) DTS is a newly-developed surround system which can handle more amount of data than Dolby Digital, providing better audio quality. Though the number of audio channels is 5.1 which is same as Dolby Digital, DTS provides fat sound and better signal-to-noise ratio, thanks to the lower audio compression ratio format. It also provides wide dynamic range and better separation, resulting magnificent sound.
- MPEG multichannel MPEG multichannel is a surround system format which can handle the augmentative 7.1-channel surround format, as well as the 5.1-channel format.
- When you connect the audio equipment with a digital input, before using, change the "DIGITAL AUDIO OUTPUT" setting in the "REFERENCE 2" on-screen display according to the connected audio equipment with a digital input. When the "DIGITAL AUDIO OUTPUT" setting is not set correctly, loud noise may be played back from speakers, and it cause of the breakdown of your speakers. See "DIGITAL AUDIO OUTPUT" on page 54.
- With this connection, the unit's settings for "COMPRESSION" and "DOWN MIX" in the "REFERENCE 2" on-screen display and the "SPK.SETTING" on screen display are invalid. Settings for these items must be made from the decoder.

## To connect the power cord

When all the connections have been made, insert the power plug into the wall outlet firmly. The STANDBY indicator lights and setup is completed.

### Warning

- Disconnect the power cord if you are not going to use the unit for a long time.
- Disconnect the power cord before cleaning the unit.
- Do not connect or disconnect the power cord with wet hands.
- Do not pull the power cord when disconnecting it, as this may damage the cord and cause fire, electric shock, or other accidents.

### Caution


- Do not damage, remodel, twist, or pull the power cord, as this may cause fire, electric shock, or other accidents.
- Contact a dealer and get a new power cord if the cord is damaged. A damaged cord may cause fire, electric shock, or other accidents.
- Do not put anything heavy, or the unit, on the power cord, as this may cause fire, electric shock, or other accidents.

## To install batteries in the remote control unit

The battery compartment is located on the back of the remote control unit.



- 1 Press down on the point shown by the arrow at the top of the compartment cover, and pull up the cover to open the compartment.

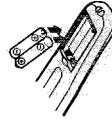

- 2 Place the two accessory R6P (SUM-3)/AA(15F) batteries in the remote control according to the polarity markings ("+" and "-") inside the compartment and on the batteries.



- 3 Place the cover over the compartment, and press down lightly.

- The batteries will last about six months with normal use. If the functions of the remote control become erratic, replace the batteries. See "Precautions for the safe use of batteries" below for more information.

Getting started

# Using the remote control unit

You can operate the unit with the remote control unit, and you can also operate your TV or other components with the remote control unit.

## To use the remote control unit for TV operation

You can operate a JVC TV with the remote control unit. To operate another manufacturer's TV, you have to change the remote control signal. Also refer to the manual supplied with your TV.

### Changing the remote control signal

- 1 Set **DOCTV SAT** on the remote control unit to TV.
- 2 Press and hold **TV**, then press **TV**. Do not release **TV**. Keep holding **TV** until the next step is completed.
- 3 Holding **TV**, enter the manufacturer code (two digits) using **0** to **9**. See the lists on the left to find the manufacturer code.
- 4 Release **TV**.

The following buttons can be used for operating the TV:

<b>TV</b>	Turns the TV on or off.
<b>TV</b>	Changes the TV channels. (with <b>DOCTV SAT</b> set to TV only)
<b>TV</b>	Adjusts the TV volume.
<b>TV</b> to <b>TV</b>	Selects the TV channels (with <b>DOCTV SAT</b> set to TV only)
<b>TV</b>	You can switch input mode (either TV or VIDEO). (with <b>DOCTV SAT</b> set to TV only)

- 5 Try to operate your TV by pressing **TV**. If your TV turns on or off, you have entered the correct code.

Manufacturer code list

No.	Manufacturer
01	JVC
02	JVC
03	JVC
04	JVC
05	BRANDT
06	AGROMENDE
07	SABA
08	TELEAVIA
09	TELEFUNKEN
10	THOMSON
11	FERGUSON
12	PHILIPS
13	BLAUPUNKT
14	GRUNDIG
15	SONY
16	PANASONIC
17	GRAETZ
18	ITT
19	LUXOR
20	SALORA
21	BELECO
22	MIVAR
23	HITACHI
24	TOSHIBA
25	MITSUBISHI
26	FINLUX
27	NOKIA
28	SHARP
29	SAMSUNG
30	FUJAL
31	GOLDSTAR
32	NEC

**NOTE**

- If there is more than one code listed for your brand of TV, try each one until the correct one is entered.

Getting started


### Precautions for the safe use of batteries

Observe the following precautions for the safe use of batteries. If they are used improperly, their life will be shortened, they may burst or their contents may leak.

- Precaution**
- Remove the batteries from the remote control if it is not going to be used for a long period of time.
  - Remove dead batteries and dispose of them properly.
  - Never leave dead batteries lying around, take them apart, mix them with other refuse, or throw them into an incinerator.
  - Never touch liquid that has leaked out of a battery.
  - Do not mix new and old batteries, or batteries of different types, when replacing them.

### To turn on/off the unit

Press **ON/OFF** on the front panel or press **DOCTV SAT** on the remote control unit.

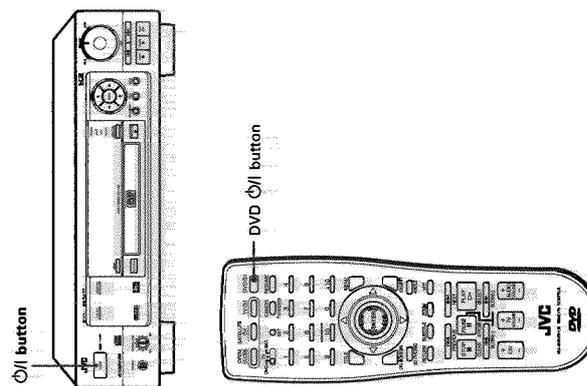

**Hints**

You can turn on the unit by pressing **ON/OFF** on the front panel or **DOCTV SAT** on the Remote control unit. In this operation, the unit starts playback when the disc is set. If not set, the disc tray opens.

You can also turn on the unit by pressing **DOCTV SAT** on the front panel or **DOCTV SAT** on the remote control unit. In this case, the disc tray opens.

**NOTE**

- Even if you press **ON/OFF** or **DOCTV SAT** to turn off the unit, the unit is not disconnected from the AC power source as long as it is connected to the wall outlet. This state is called the standby mode. In this state, the unit is designed to consume a very small quantity of power.

# Before operation

## To use the remote control unit for satellite tuner operation

You can operate the satellite tuner with the remote control unit. To operate it, you have to change the remote control signal. Also refer to the manual supplied with it.

### Changing the remote control signal

- 1 Set on the remote control unit to SAT.
- 2 Press and hold , then press . Keep holding until the next step is completed.
- 3 Holding , enter the manufacturer's code (two digits) using to .
- 4 Release .

Getting started

Manufacturer's code list

No.	Manufacturer
01	AMSTRAD
02	AMSTRAD
03	AMSTRAD
04	RETTANARO/QUADRAL/SKYMASTER
05	RFT
06	KATHREIN
07	KATHREIN
08	KATHREIN/MASPRO
09	KATHREIN/PHILIPS
10	NOKIA
11	NOKIA/GRUNDIG
12	GRUNDIG/SIEMENS
13	PAGE
14	TECHNISAT
15	WISI
16	WISI/RADIX
17	FLUBA/SEG
18	FTE

The following buttons can be used for operating the satellite tuner (with set to SAT.):

	Turns the satellite tuner on or off.
	Changes the channels.
	Selects the channels.

- 5 Try to operate the satellite tuner by pressing . If the satellite tuner turns on or off, you have entered the correct code.

### NOTE

- If there is more than one code listed for your brand of the satellite tuner, try each one until the correct one is entered.



## To turn on your TV and the unit

To operate your TV from the remote control unit, you have to set the remote control unit to operate your TV (see page 18).

- 1 Press to turn on your TV.
- 2 Press to turn on the unit.



## To select the source you want to operate

You can operate the unit with the remote control unit and operate some functions of your TV or the satellite tuner unit.

- To operate the unit, set on the remote control unit to DVD.  
To operate the unit, point the remote control unit at the remote sensor of the unit.
- To operate the TV, set on the remote control unit to TV.  
To operate the TV, point the remote control unit at the remote sensor of the TV.
- To operate the satellite tuner, set on the remote control unit to SAT.  
To operate the satellite tuner, point the remote control unit at the remote sensor of the remote sensor of satellite tuner unit.



- You can adjust the volume level, select the TV channel, and change the input source of your TV from the remote control unit (see page 18).
- You can select the channel of your satellite tuner from the remote control unit (see page 19).

Basic operations

# Playing a DVD VIDEO or CD disc

Now you can play a DVD VIDEO or a CD disc. First, let's enjoy simple playback according to following procedure.



## To play a disc from the beginning

- 1 Use to move to [0], then press .

### Short cuts

**Press** The unit starts playback from the beginning.

### Hints

When you play a Video CD disc with PBC function or DVD disc, the menu display may appear on the TV screen. In this case, you can operate some functions such as playback from the menu as displayed on the TV screen.

For the operation using the menu of DVD, see page 26. For the operation using the menu of Video CD, see page 27.



■ The unit starts playback from the beginning.

### To adjusting the volume level

- **For TV**  
Press to increase the volume, and to decrease the volume.
- **For a JVC amplifier**  
Press to increase the volume, and to decrease the volume.
- **For other amplifier or receiver**  
Adjust the volume level of the connected amplifier or receiver. See the instructions of the amplifier or receiver.
- **For headphones**  
To increase the volume, turn to the right. To decrease the volume, turn to the left.

## To stop playback completely

- 1 Press .

■ The unit stops playback.



Basic Operations

# Inserting and removing discs



## To insert or remove discs

- 1 Press to open the disc tray.
- 2 Place the disc in the tray.  
  
With the label side up.  
• To insert an 8-cm disc, place it fitting in the inner recess.
- 3 Press to close the disc tray.

### Hints

You can also insert and remove the disc from the on-screen display.


1. Use to move to then press to open the disc tray.
2. Place or remove the disc.
3. Use to move to then press to close the disc tray.

### Information about the opening display

When you insert a DVD VIDEO disc



When you insert an Audio CD disc

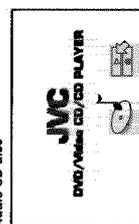

When you insert a Video CD disc



### NOTES

- The unit can playback DVD VIDEO, Audio CD, and Video CD discs only. Do not load other disc types. For details, see page 11.
- When loading a disc in the tray, be sure to position the disc inside the recess. Otherwise, the disc may be damaged when the tray is closed, and the disc may not be removable from the unit.

## Resuming playback

The unit stores the position on a disc where you want to interrupt playback at, and resumes playback from that position later.

### To store the point where you want to resume playback from [RESUME]

■ During playback

1 Press 

The unit stores the current playback position of the disc, and the RESUME indicator on the front panel lights.

The last stored memory overrides the previous memory.



#### Hints

You can store the position on a disc where you want to interrupt playback at by pressing  instead of .

### To resume playback from the stored point [RESUME]

■ During stop mode

1 Press 

The unit resumes playback from the stored position.



#### Hints

The unit also resumes playback by pressing  during standby mode.

#### NOTES

- When you resume playback during playback of a Video CD disc with PBC function, the unit may resume playback from a point slightly earlier than the point you stored.
- To clear the memory  
Take out the disc from the unit.

### To stop playback temporarily

1 Press 

■ The unit pauses playback. To continue playback, press .



### To advance or reverse play rapidly while monitoring


■ During playback

1 Press  or 

Press  to advance playback rapidly, and  to reverse playback rapidly. Each time you press the button, advance playback or reverse playback speed increases. To return to the normal playback, press .

You can also advance or reverse play rapidly with the SHUTTLE knob on the front panel. To advance play rapidly, turn the shuttle knob to the right and hold, and to reverse play rapidly, turn the shuttle knob to the left and hold. When you release the shuttle knob, the unit returns to normal playback. The playback speed changes according to the amount you turn the shuttle knob.

SHUTTLE knob

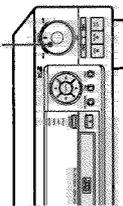

### To locate the beginning of the scene or song

■ During playback

1 Press  or 

Press  to locate the beginning of the current chapter, title, or track, and press  to locate the beginning of the next chapter, title, or track.

The unit locates the beginning of the track when you play a Video CD disc without the PBC function or Audio CD disc. When you play a Video CD disc with the PBC function or DVD VIDEO disc, the unit may locate different place, but mostly it locates on the beginning of the title or chapter or track.



Advanced Operations

## Playing from specific position on a disc

You can play a disc from the selected track, title or chapter, or from the specified time.



### To locate a desired scene from the menu


DVD discs generally have their own menus which show the disc contents. These menus contain various items such as titles of a movie, names of songs, or artist information, and display them on the TV screen. You can locate a desired scene by using the menu.

■ Insert the DVD disc.

#### 1 Press or .

The menu appears on the TV screen.

Example

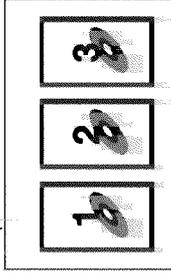

#### 2 Use to select a desired item, then press .

■ The unit starts playback of the selected item.



**Hints**  
About and   
A DVD disc which contains more than one title may have a menu which lists the title. In this case, the menu appears on the TV screen by pressing . On the other hand, a DVD disc which contains only one title may have a menu. In this case, the menu appears on the TV screen by pressing .



**Hints**  
With some discs, you can select items by entering the corresponding number using the numeric buttons, which causes the unit to automatically start playback.

Basic Operations

## Summary of basic operations

The basic operations and buttons for basic operations are shown in table below:

To	Press
Turn on/off the unit	
Play	
Stop	
Pause	
Advance or reverse play rapidly while monitoring	or  or turn the shuttle knob and hold.
Locate the beginning of a scene or song	until it clicks.

### How to use numeric buttons

The numeric buttons are used to select a track or title number.

To use to , (described as "press to , ").

#### 1. Set to DVD.

- To select a number between 1 and 10  
Press the corresponding button for the number.
- To select a number higher than 10

Use .

Example:

To select 13 →

To select 34 →

To select 40 →

To use to (usually used for time search and described as "press to ").

#### 1. Set to DVD.

#### 2. Select the time.

Example (for DVD VIDEO):

1 hour 20 minutes → → →

3 minutes 20 seconds → → →

Example (for Audio CD/Video CD):

3 minutes 20 seconds → → →

65 minutes 30 seconds → → →

English

Basic Operations



### To locate the desired scene from the menu of the Video CD with PBC

Some Video CD discs are compatible with the PBC function. PBC is an abbreviation of "PlayBack Control." Video CD disc recorded on PBC have own menus such as the list of the songs of the disc and items recorded in a disc. You can also locate the specific scene by using the menu.

- When the menu appears on the TV screen during playback with PBC

**1** Use to to select the desired number of the item.

Playback starts from the selected item.

You can return to the menu by pressing .

When "NEXT" or "PREVIOUS" appears on the TV screen, the unit generally works as follows:

- succeeding to the next page by pressing .
- return to the previous page by pressing .

\*The method of the operation is different depending on the disc.



When you play a Video CD disc using the PBC function, "PBC" appears in the display window on the front panel. When the PBC function is not activated, press , then press to activate the PBC function. You can also operate from the on-screen display as follows:

1. Press .
2. Use to move to [PBC CALL], then press .



When you want to set the PBC function to off, press the numeric buttons to play a disc. See page 28.



### To locate a desired scene or track directly

You can play the desired scene or track by specifying the title (for DVDs) or track (for CDs).

- For DVD: During stop mode  
During playback or stop mode
- For Audio CD: During playback without PBC function or stop mode
- For Video CD: During playback without PBC function or stop mode


**1** Use to to select the desired title or track number.

The selected title or track number appears in the display window on the front panel.

Example:

- To select title or track number 8: Press 8
- To select title or track number 37: Press 3 7

Display window

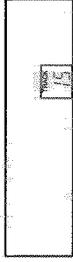

Selected title or track number

- The unit begins playback from the selected title or track.

#### NOTES

- When appears on the TV screen. The title or track you have selected is not contained in the disc.
- This function does not work during Video CD playback with PBC function



You can display the desired title or track number on the TV screen. In this case, press to display the on-screen display.

### To locate a desired track using or

- For Audio CD: During playback or stop mode
- For Video CD: During playback without PBC function

**1** Press or .

Display window

- To skip to a succeeding track, press once or repeatedly until the desired track appears in the display.

- To skip to beginning of the current track, press once.
- To skip to a preceding track, press repeatedly until the desired track appears in the display.

Selected track number

#### NOTE

- This function does not work during Video CD playback with PBC function



### To locate a desired scene by specifying the chapter number [CHAP. SEARCH]

Each chapter is usually assigned a chapter number on DVD discs (except Karaoke discs). You can play a desired chapter by selecting the chapter number from the on-screen display.


- During playback

#### 1 Press

The on-screen display appears on the TV screen.

#### 2 Use to move to [CHAP. SEARCH], then press .

<GO TO CHAPTER> appears in the message area.  
The color of [CHAP. SEARCH] changes.

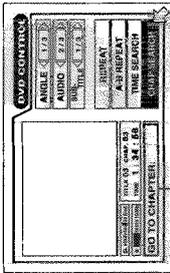

Message area



and are not used in this function.

#### 3 Use to select the desired chapter number, then press .

Selected chapter number appears in the message area.

Example:

- To select chapter number 8: Press , .
- To select chapter number 37: Press , , .

- The unit begins playback from the selected chapter.

#### NOTES

- When the chapter number is incorrect in step 3: Press to erase the number previously selected, and select the desired number using the numeric buttons.
- When is displayed in the TV screen in step 3: The chapter you have selected is not contained in the disc, or chapter search does not work on the disc.
- To return to the regular display: Press .



### To locate the desired scene or position by specifying the time [TIME SEARCH]

You can play a disc from the desired position by specifying the elapsed time from the beginning of the disc using the TIME SEARCH function. Note that some DVD discs does not contain time information and you cannot use the TIME SEARCH function.

- For DVD, Audio CD: During playback
- For Video CD: During playback without PBC function

#### 1 Press .


The on-screen display appears on the TV screen.

#### 2 Use to move to [TIME SEARCH], then press .


<GO TO> appears in the message area.  
The color of [TIME SEARCH] changes.

#### 3 Use to specify the time, then press .

Example 1 (for DVD):

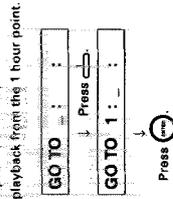


To playback from the 1 hour point.

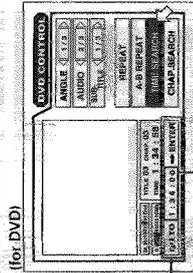

Message area Selected time


(for DVD)

Press .

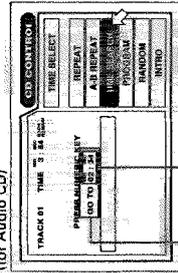

Message area Selected time


(for Audio CD)

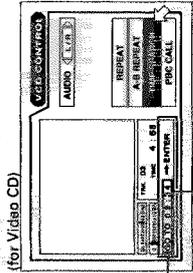

Message area Selected time

**Example 2 (for DVD):**

To playback from 2 hour 34 minutes:

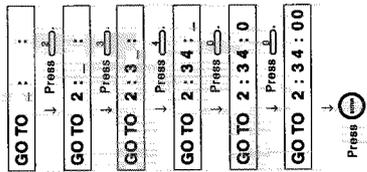


**Short cuts**

After pressing , press . You can input the time by pressing without pressing twice to input the second value.

**Example 3 (for Audio CD/Video CD):**

To playback from 2 minutes 34 seconds:

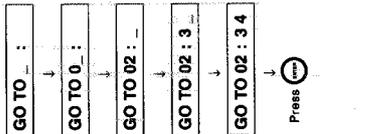

■ The unit starts playback from the selected time.



**To locate a desired scene by watching the opening scene digest display [DIGEST]**

The unit can display the opening scene of each title of DVD or each track of Video CD. You can select a desired title or track from the opening scenes displayed on the TV screen.

- For DVD: During stop mode
- For Video CD: During stop mode or playback without PBC function

- 1 Press .**

The opening scene of each title or track appears on the TV screen. Up to nine opening scenes are displayed.
- 2 Use to select the desired title.**

When the disc contains more than 9 titles or tracks, the digest screen have more than one page. In this case, pressing turns to the next page, while pressing returns to the previous page.

Selected title
- 3 Press .**

■ The unit begins playback from the selected title or track.

**Hints**

When you press during DVD playback, the unit displays the opening scene of each chapter and you can select the desired chapter. In this case, opening scenes are displayed from chapter 1.

**Hints**

- When the selected title or track is in the lower right-hand corner of the screen, press to check the additional scenes.
- When the selected title or track is in the upper left-hand corner of the screen, press to return to previous scenes.

**NOTES**

- **When you make a mistake in step 3:** Move the cursor to the incorrect value, then press the correct value to re-select the value.
- **When appears on the TV screen in step 2:** The time you have selected is not contained on the disc, or the time search function does not work on the disc. When you play a Video CD disc with the PBC function, there are some sections where the time search function does not work.
- **To return to the regular display:** Press .
- **The time search function does not work during Video CD playback with the PBC function**

**NOTES**

- With some discs, depending on the contents, it may take some time until all the scenes appear on the screen.

## Playing a scene close-up

The unit can zoom in a part of the scene. You can view any part of the scene close-up.






### To playback a scene close-up [ZOOM]

■ During playback or pause

#### 1 Press

[ZOOM] appears on the TV screen. The unit zooms in to the center part of the scene to produce a double-sized image.

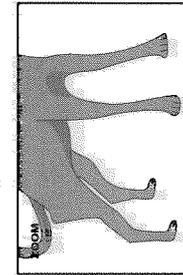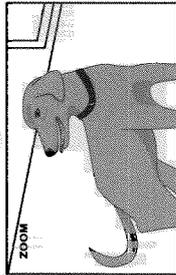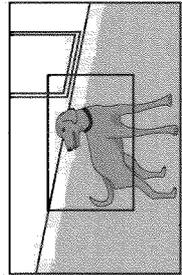

#### 2 Use to move the zoomed-in scene.

### To pause zoom play

Press .  
To resume zoom play, press .

#### NOTE

- To cancel zoom play Press .
- During zoom play, the picture may be garbled or noisy.

English

## Playing in slow-motion

The unit can display a list of the still pictures, and playback a disc in slow-motion. You can view video in more detail by using these functions.




### To display still pictures [STROBE]

■ During playback

#### 1 Press at the point you want to view as a continuous photograph.

#### 2 Press and hold for more than 1 second.

Nine still pictures appear on the TV screen and playback pauses.

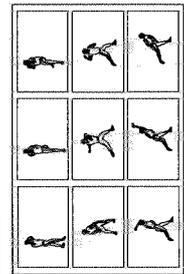

### To cancel strobe play

Press and hold for more than 1 second.

Advanced operations



### To playback in slow-motion [SLOW]

■ During playback

#### 1 Press , then press or .

To play in slow-motion, press , and to play reverse slow-motion (DVD only), press . First, the unit plays the slowest speed, and each time you press these buttons, the playback speed increases. To return to normal playback, press .

### To pause slow-motion play

Press .

#### Hints

You can enjoy advancing the picture frame-by-frame by pressing during pause. Each time you press , the picture advances one frame.

#### Hints

You can also use the SHUTTLE knob for slow-motion play.

1. Press to pause playback.
2. Turn the SHUTTLE knob to the right to play in slow-motion. Turn the SHUTTLE knob to the left to play in slow-motion in reverse (DVD only). You can adjust the playback speed by turning the SHUTTLE knob.

#### NOTES

- To cancel slow-motion play Press .
- The sound is muted during slow-motion play.
- Reverse slow-motion playback is not possible for a Video CD.

English

## Changing the track order

You can play tracks on a Audio CD or Video CD in the desired order or in random order.



### To playback in the desired order [PROGRAM]



By creating a program, you can enjoy listening to your favorite tracks in any order.


- During stop mode only

**1** Press .

The on-screen display appears on the TV screen.


**2** Use to [PROGRAM] and press .

The color of "PROGRAM" changes.

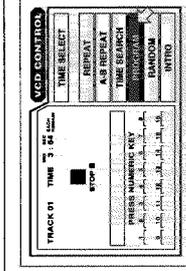

**3** Select the tracks in the desired order using and .

Up to 16 tracks can be programmed. You may select the same track more than once.

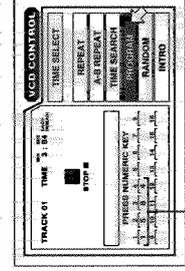

Selected track number

**4** Press to start program play.

#### NOTES

- When you make a mistake in step 3: Press . The last track programmed is erased.
- To clear program play: Press to stop playback, then press again. All the programmed tracks are erased.
- To quit program play: Move to [PROGRAM] in the display using and press . "PROGRAM" returns to its original color.



When all of the programmed tracks have finished playback, the unit stops but the program remains.



You can program tracks during playback.



### To playback tracks in random order [RANDOM]


The unit can play tracks in random order.

- During stop mode

**1** Press .

The on-screen display appears on the TV screen.

**2** Use to [RANDOM].

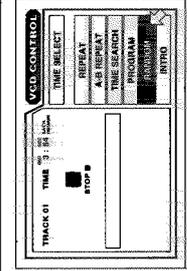

**3** Press .

The color of "RANDOM" changes.

- Random play begins.



- When all tracks have been played once, random play ends.
- The same track will not be played back more than once during random play.

#### NOTE

- To stop random play: Press .
- To quit random play (Audio CD only): Move to [RANDOM], then press . "RANDOM" returns to its original color.

# Repeat playback

The unit can repeat playback of the current title, chapter (for DVD) or all tracks or the current tracks (for Audio CD/Video CD) and you can also select the desired part for repeat playback.



## To repeat a title, chapter, or current or all track [REPEAT]

- For DVD, Audio CD: During Playback
- For Video CD: During playback without PBC function

### 1 Press

The on-screen display appears on the TV screen.

### 2 Use to move to [REPEAT], then press .

Each time you press the repeat mode changes as follows:

- (for DVD)
  - T. REPEAT (title repeat)
  - C. REPEAT (chapter repeat)
- No Indication (off)

The current title or chapter will be repeated.

### (for Audio CD/Video CD)

- REPEAT ALL
- REPEAT 1
- No Indication (off)

REPEAT ALL: All the tracks are played repeatedly.

REPEAT 1: The current track is played repeatedly.

The current track or all tracks is/are played repeatedly.

### NOTES

- Repeat play function cannot be used during Video CD playback with PBC function. To use this function, press to stop playback and then specify any track number by using the numeric buttons.
- To turn off the on-screen display Press .
- To stop repeat playback during Audio CD or Video CD playback Press . The unit stops but remains in repeat play mode.
- To quit repeat playback Move to [REPEAT] in the on-screen display and press repeatedly until [REPEAT] returns to its original color. You can also cancel repeat playback by pressing .
- If appears when pressing in step 2 during DVD playback You cannot repeat the title or chapter because of the disc contents.



## To repeat a desired part [A-B REPEAT]


- For DVD, Audio CD: During Playback
- For Video CD: During playback without PBC function

### 1 Press

The on-screen display appears on the TV screen.

### 2 Use to move to [A-B REPEAT], then press at the beginning of the part you want to repeat (point A). The color of "A-B REPEAT" changes.

### 3 Press at the end of the part you want to repeat (point B). (for DVD) The unit locates "A" and starts repeat playback between "A" and "B." (for Video CD) The selected portion will be repeated.

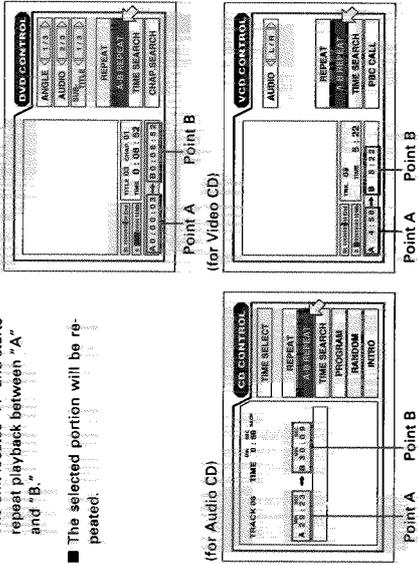

### NOTES

- To turn off the on screen display Press .
- To quit A-B repeat playback Move to [A-B REPEAT] in the on screen display and press until [A-B REPEAT] returns to its original color.
- To stop A-B repeat playback Press .
- If appears when pressing in step 2 during DVD playback You cannot repeat the selected portion because of the disc contents.

## Sampling all tracks

English

You can sample the tracks of an Audio CD or Video CD by playing back to a short segment of each track in order. The unit plays the first 10 seconds of each track.




### To playback only the beginning of each track [INTRO]

■ During stop mode

1 Press ON/RECALL.

The on-screen display appears on the TV screen.

2 Use to move to [INTRO].

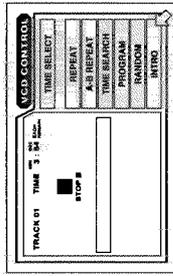

3 Press .

■ The first 10 seconds of each track on a disc are played back in numerical order from the first track.

**NOTE**

- To quit **INTRO scan** (Audio CD only): Move to [INTRO], then press . "INTRO" returns to its original color.
- To stop **INTRO scan**: Press .

## Viewing from multiple angles

You can enjoy a variety of scene angles if the DVD disc contains "multi angle" parts, where multiple cameras were used to shoot the same scene from different angles. You can select one of these viewing angles from the normal screen or on-screen display.



### To select a scene angle from the normal screen [ANGLE]

■ During playback

1 Press .

2 Press or to select the desired angle. Each time you press or , the scene changes.




### To select a scene angle from the on-screen display [ANGLE]

■ During playback

1 Press .

The on-screen display appears on the TV screen.


2 Use to move to [ANGLE].

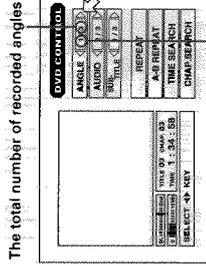

The total number of recorded angles

The current angle number

3 Use to select the desired angle number.

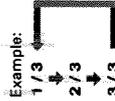

**NOTES**

- To turn off the on-screen display: Press .
- When appears on the TV screen: The current scene is not recorded from multiple angles.


## To select a scene angle from the angle list display [ANGLE]



■ During playback

- 1 Press and hold for more than 1 second.

Up to nine angle scenes recorded on a disc appear on the TV screen.

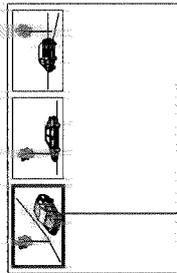

The selected scene angle

- 2 Use to select desired angle.

- 3 Press .

■ The selected angle appears on the TV screen.

Advanced Operations

**NOTE**

- When appears on the TV screen in step 1: The current scene is not recorded from multiple angles.

## Changing the language and sound

You can choose the subtitle or audio language from the languages included on a disc and select the sound from a variety of sounds included on a DVD disc.



## To select the subtitle language [SUBTITLE]

■ During playback



- 1 Press .
- The on-screen display appears on the TV screen.

- 2 Use to move to [SUBTITLE].

- 3 Use to select the desired subtitle.

Each time you use , the subtitle changes.

Example:

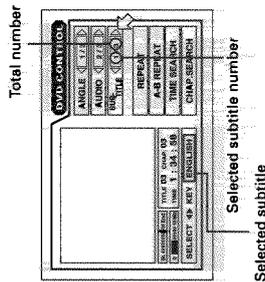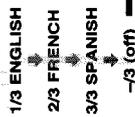

Selected subtitle

**NOTE**

- When appears on the TV screen: You cannot select the subtitle.




**To change the audio language or sound selection [AUDIO]**

■ During playback

**1** Press The on-screen display appears on the TV screen.


**2** Use to move to [AUDIO].

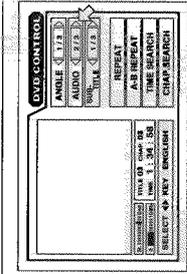

**3** Use to select the desired audio language or sound.

Each time you use , the audio language or sound changes.

Example:

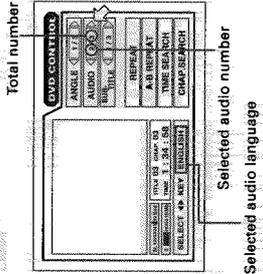


**To change the audio channel [AUDIO]**

In some karaoke Video CDs, one of the audio channels includes a vocal while the other does not. With such discs, you can choose to enjoy karaoke without the vocal or with the vocal by selecting the audio channel to be played back.

■ During playback

**1** Press The on-screen display appears on the TV screen.

**2** Use to move to [AUDIO].

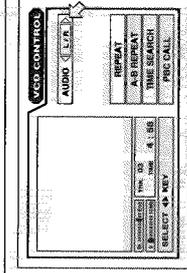


**3** Select the audio channel(s) to be played back using .

L/R: You hear normal stereo playback.

L: You hear the L (Left) channel signal played back from both the left and right speakers.

R: You hear the R (Right) channel signal played back from both the left and right speakers.

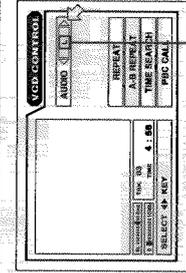

**NOTE**

- When appears on the TV screen: You cannot select the audio or sound.

**NOTE**

- To turn off the on-screen display: Press .

## Adjusting the picture to suit preferences

You can adjust the picture quality depending on the disc contents.




### To adjust the picture quality [VFP]

■ During playback


1 Press **STOP** or **PAUSE** on the front panel.

2 Within 10 seconds, select the desired picture quality by pressing **UP** or **DOWN** on the front panel.

Each time you press the button, the picture quality changes as follows:

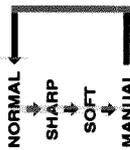

The selected picture quality tab lights up in yellow.

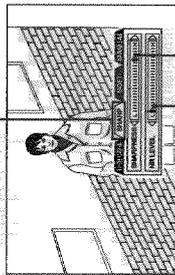

Adjusting bar



If you select [MANUAL], you can adjust the level of picture sharpness and noise reduction.

- Use **RIGHT** to select SHARPNESS or NR LEVEL.
- Use **UP** to adjust the level).  
Toward L: Reduce the effect.  
Toward H: Enhance the effect.

#### NOTES

- To turn off the VFP screen, press **STOP**.
- The VFP screen disappears if there are no operations for more than 10 seconds.

## Adjusting the surround sound

You can select a simulated surround effect depending on the disc contents. If you connect the unit to your stereo system, you can enhance sound quality and produce a greater surround effect.



### To simulate a surround sound [3D PHONIC]

■ During playback

1 Press **STOP**.

2 Within 10 seconds, select the desired effect mode by pressing **STOP**.

Each time you press **STOP**, the effect mode changes as follows:



Selected effect mode

When you play a DVD disc recorded in Dolby Digital which contains more than 3 channels, ACTION does not appear.

3 Press **STOP** to adjust the effect level.

You can adjust the effect level in 5 level.

Toward L: Reduce the effect  
Toward H: Enhance the effect



Effect level

#### NOTES

- The sound effect [3D PHONIC] works correctly when playing back discs recorded with Dolby Surround, Dolby Digital 5.1-CH or MPEG Multichannel 5.1-CH format.  
It also works when playing back discs other than those above, but does not provide the correct effect.
- The sound effect is not possible, and will not work even if set when the unit outputs a DTS or Dolby Digital or MPEG bitstream signal from the DIGITAL OUT jack.
- The sound effect will not be set or operate, even if **STOP** is pressed, on the sound of DVD discs recorded in Linear PCM.
- When you set the 3D PHONIC function to on, the DOWN MIX and COMPRESSION setting in the PREFERENCE 2 display and settings in the SPK.SETTING are disabled.

English

# Checking the disc time

You can choose the displayed time mode for an audio or video CD disc in the display on the front panel and in the on-screen display.



## To select the time display mode [TIME SELECT]

You can choose the time display mode for an Audio CD in the display on the front panel and in the on-screen display.

■ During playback


**1** Press **STOP**.

The on-screen display appears on the TV screen.

**2** Use to **[TIME SELECT]**.




When you select the time mode during stop mode, the time mode changes as follows:

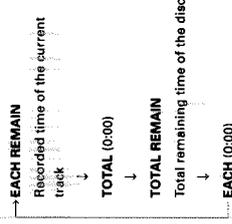

**3** Press .

Each time you press , the time mode changes as follows:

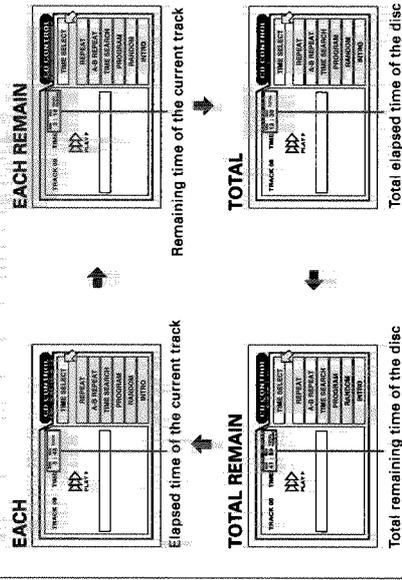

When you press repeatedly until [EACH REMAIN] appears on the TV screen, the recorded time of the displayed track appears on the TV screen. You can change the track by pressing or .



## To select the time display mode [TIME SELECT]


You can check the total and each time of a Video CD from the on-screen display on the TV screen or display window on the front panel.

■ During stop mode

**1** Press **STOP**.


The on-screen display appears on the TV screen.

**2** Use to **[TIME SELECT]**.

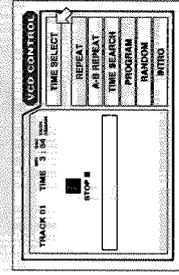

**3** Press until [TOTAL REMAIN] appears on the TV screen.

Total disc time appears on the TV screen.

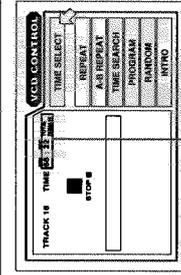

Total disc time of the disc

## Selecting preferences

You can set various preference for DVD via the Preference and Speaker setting display. Select desired items on the Preference 1, Preference 2 and Speaker setting displays, and set them appropriately.

### How to set preferences on the "PREFERENCE1/2" and "SPK.SETTING" display

- 1 Press **[STOP]** to stop the unit.  
If the current disc is not a DVD disc, you have to remove the disc from the tray before setting up.

**2 Press **[ON-SCREEN]****

The on-screen display appears on the TV screen. The Preference 1, Preference 2 and Speaker setting displays are available. Use **[LEFT]** to move **[RIGHT]** to the desired tab.

**Preference 2**

**Speaker setting**

**3 Move **[LEFT]** to select the item you want to set by using **[DOWN]**.**

Selected item

- 4 Press **[ENTER]** to select the setting you want.



For details about each setting, see the following pages:

- PREFERENCE 1**
- MENU LANGUAGE (51)
  - AUDIO LANGUAGE (51)
  - SUBTITLE (52)
  - ON-SCREEN LANGUAGE (52)
  - ON-SCREEN GUIDE (53)
  - MONITOR TYPE (53)
- PREFERENCE 2**
- DIGITAL AUDIO OUTPUT (54)
  - DOWN MIX (55)
  - COMPRESSION (55)
  - SCREEN SAVER (56)
  - AUTO STANDBY (56)
  - SPK.SETTING (57)



To return to the normal screen, press **[RETURN]**.

## Information about CD TEXT

The unit is compatible with the CD TEXT function. CD TEXT discs have information, such as the album title, artist names, and track names. If the played disc is a CD TEXT disc, CD text data appears on the TV screen.

CD TEXT

CD TEXT

CD TEXT



CD TEXT data also appears in the display window. In this case, each time you press **[TEXT]**, CD TEXT data and time appear alternately.

### What is CD TEXT?

CD TEXT, a new feature of audio CD discs, includes text information for such things as the album title, song titles, and artist names. In addition to audio information.



Advanced operations

### NOTES

- The album title, artist names, or track names may not be displayed with some CD TEXT discs.
- When you insert a CD TEXT disc which contains many tracks, the time before the unit is ready for playback is longer than usual. The time is necessary for the unit to read the CD TEXT information, and this is not a malfunction.

English

### To set the language and display preference items


PREFERENCE 1 can be set as follows:

#### MENU LANGUAGE

You can select a default "display" language to be displayed if it is contained on the disc.

Each time you press **↵**, the language setting changes in the following order:

- ENGLISH → SPANISH → FRENCH →
- CHINESE → GERMAN → ITALIAN →
- JAPANESE → language code from AA to ZU (See "Table of languages and their abbreviations" at the end of this instructions.)

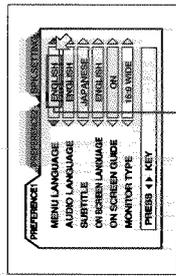

Selected language

Pressing **↵** changes the language setting in the reverse order of the above.


\* If the selected language is not recorded, the disc's default display language is displayed.

#### AUDIO LANGUAGE

You can select the default audio language to be played if it is contained on the disc.

Each time you press **↵**, the language setting changes in the following order:

- ENGLISH → SPANISH → FRENCH →
- CHINESE → GERMAN → ITALIAN →
- JAPANESE → language code from AA to ZU (See "Table of languages and their abbreviations" at the end of this instructions.)

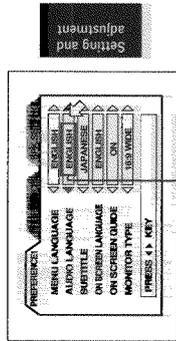

Selected language

Pressing **↵** changes the language setting in the reverse order of the above.


\* If the selected language is not recorded, the disc's default audio language is played.

#### SUBTITLE

You can select the default subtitle language to be displayed when it is contained on a playback disc.

Each time you press **↵**, the language setting changes in the following order:

- ENGLISH → SPANISH → FRENCH →
- CHINESE → GERMAN → ITALIAN →
- JAPANESE → language code from AA to ZU (See "Table of languages and their abbreviations" at the end of this instructions.)

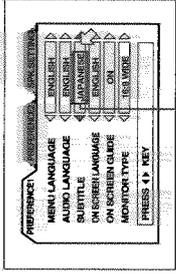

Selected language

Pressing **↵** changes the language setting in the reverse order of the above.


\* If the selected language is not recorded, the disc's default subtitle language is displayed.

#### ON SCREEN LANGUAGE


You can select the on-screen display language to be displayed.

Each time you press **↵**, the language setting changes as follows:

- ENGLISH
- ↓
- DEUTSCH (German)
- ↓
- FRANCAIS (French)

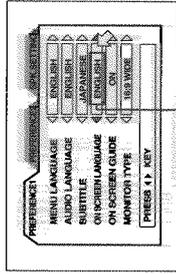

Selected language

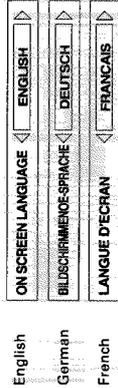

English  
German  
French


English  
0000000000

**ON SCREEN GUIDE**

The unit can display "on-screen guide" icons or characters on the picture, which show what is happening to the disc or the unit.

- **ON**  
The guide display turns on.
- **OFF**  
The guide display turns off.

Examples of "On-screen guide" icons or characters to be off:

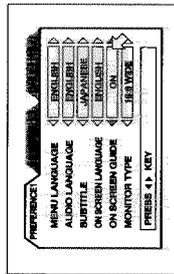

**To set other preference items**

PREFERENCE 2 can be set as follows:

**DIGITAL AUDIO OUTPUT**

To connect the unit's digital output to an external amplifier or receiver equipped with a digital input, this item must be set correctly.






- **PCM ONLY:**  
When you connect the DIGITAL OUT jack of the unit and the linear PCM digital input of a piece of audio equipment.
- **STREAM/PCM:**  
When you connect to the digital input of an amplifier with built-in DTS/Dolby Digital, and MPEG Audio decoder.
- **DOLBY DIGITAL/PCM:**  
When you connect to the digital input of a Dolby Digital decoder, or an amplifier with built-in Dolby Digital decoder.

**MONITOR TYPE**

You can select the monitor type to match your TV when you playback DVD discs recorded for wide screen televisions.

- **4:3 LB**  (Letter Box Conversion)  
When you connect a normal TV to the unit.  
When you play a wide picture recorded on a DVD VIDEO, the picture is displayed with bands across the upper and lower portions of the screen.
- **4:3 PS**  (Pan scan Conversion)  
When you connect a normal TV to the unit.  
When you play a wide picture recorded on a DVD VIDEO, a portion of the picture is automatically cut off from the left and right sides of the image. According to the disc, it may not be possible to playback on this mode. In this case, the picture is played back as in 4:3 LB  mode.
- **16:9 WIDE** (Wide Television screen)  
When you connect a wide-screen TV to the unit.

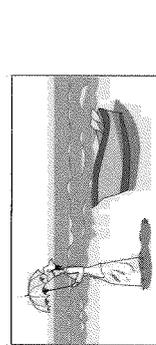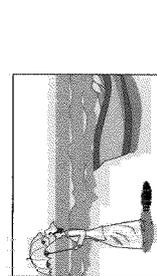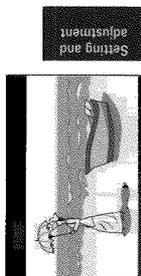

The following chart shows the relationship between types of playback discs and output signals.

Playback discs	Output		
	STREAM/PCM	DOLBY DIGITAL/PCM	PCM ONLY
DVD with 48-kHz, 16-bit linear PCM	48-kHz, 16-bit linear PCM	←	←
DVD with 48-kHz, 20-bit linear PCM	48-kHz, 20-bit linear PCM	←	←
DVD with 96-kHz, linear PCM	No output	←	←
DVD with DTS	DTS bitstream	No output	←
DVD with Dolby Digital	Dolby Digital bitstream	←	48-kHz, 16-bit linear PCM
DVD with MPEG audio	MPEG bitstream	48-kHz, 16-bit linear PCM	←
Video CD	44.1-kHz, 16-bit linear PCM	←	←
Audio CD	44.1-kHz, 16-bit linear PCM	←	←
Audio CD with DTS	DTS bitstream	←	←

**NOTES**

- The unit does not provide the DTS decoding function.
- When playing back an audio CD with DTS, only use a DTS decoder (or an amplifier with a built-in DTS decoder). Playing back such a disc outputs an incorrect signal from the analog output jacks, which may cause damage of speakers. If you connect the analog outputs and digital outputs simultaneously, be sure to select the source of the amplifier correctly, or set the level control of the amplifier connected to the analog outputs to minimum.

**DOWN MIX**


By setting DOWN MIX correctly, you can get the optimum stereo mix for your audio system from DVD discs recorded with Dolby Digital surround multichannel audio or MPEG Multichannel.

• **Lt/Rt (Dolby Digital disc only):**

You can monitor the unit's audio output signals via an amplifier with built-in Dolby Pro Logic Decoder.

- **Lt/Rt:** You can monitor the unit's audio output signals via a TV, an amplifier with no built-in Dolby Pro Logic Decoder, or the unit's headphone jack. Also for recording DVD audio output to a cassette tape, MD, etc.


- **OFF** When you monitor the unit's 5.1-channel audio output signals via an amplifier equipped with 5.1-channel inputs.

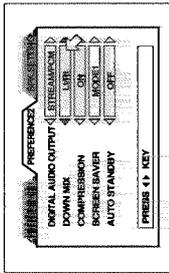

**COMPRESSION**

You can compress the dynamic range of the sound if you need. Using this function, you can listen to sound at low volumes easily.



- **ON** Audio is played back with the dynamic range compressed.
- **OFF** Audio is played back as it was recorded.

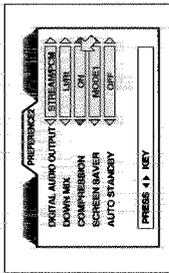

**SCREEN SAVER**

A television monitor screen may be burned out if a static picture is displayed for a long time. To prevent this, the unit automatically activates the screen saver function if a static picture, such as an on-screen display or menu, is displayed for over 5 minutes.

- **MODE 1** The picture is scrolled.
- **MODE 2** The picture is not scrolled.
- **DIMMER** The picture gets dark.
- **OFF** The screen saver function is off.

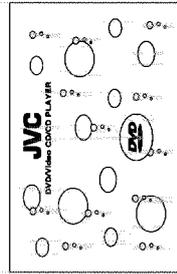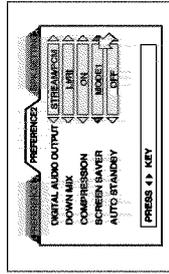


**NOTES**

- When the screen saver mode is set to DIMMER, the display window on the front panel also gets dark (FL Dimmer). To return to normal brightness, set to another mode.
- The monitor screen of a projector or projection TV is easily to burned out if a static picture is displayed for a long time. Be careful not to allow the monitor screen to be burned out when you set the screen saver mode to OFF.
- The TV screen may be garbled when you set the screen saver mode to MODE 1. In this case, set to another mode.

**AUTO STANDBY**

When the unit is in stop mode for more than 30 minutes or 60 minutes, the unit enters standby mode automatically.

- **60** Time is set to 60 minutes.
- **30** Time is set to 30 minutes.
- **OFF** The auto standby function is off.

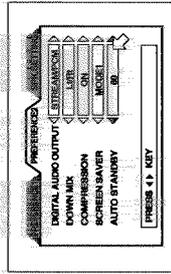

**NOTES**

- The compression function works only when playing back a disc recorded with DOLBY DIGITAL 1 CH or 2CH. The setting is not effective for other discs.
- The compression function is automatically set to ON when the downmix function is set to Lt/Rt or Lc/Rc.
- The compression function does not work when the 3D PHONIC function is activated.
- The downmix function does not work when the 3D PHONIC function is activated.

Front Panel




### Speaker setting

You can make speaker setting according to your system. Normally, simply select "5.1 CHANNEL" or "2 CHANNEL". However, if you select "EXPERT", you can set various settings to match your speakers.

#### SPEAKER CHANNELS

You can select the speaker channels according to the speaker system connected to

- **2 CHANNEL**  
When you connect to a 2-channel amplifier, or use 2 speakers.
- **5.1 CHANNEL**  
When you connect to a 5.1-channel amplifier and use the front, rear, center and sub-woofer speakers.

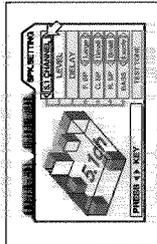


- **EXPERT**  
When you want to set the various settings to match your speakers. The following five setting items are available.

Setting and adjustment

### 1 Speaker size (available only when selecting EXPERT)

Sets the speaker size according to your speakers.

- 1 Select the speaker to be set using
  - **F.SP:** front speakers
  - **C.SP:** center speaker
  - **R.SP:** rear speakers

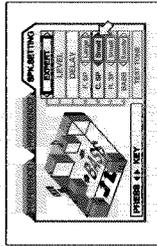


- 2 Select the size using
  - **Large:** large speaker(s) which can fully reproduce the low-frequency range.
  - **Small:** small speaker(s) which can not fully reproduce the low-frequency range.
  - **None:** No speaker(s) connected.

If you set the front speakers to "Small", you cannot set the other speakers to "Large".

### 2 Bass redirect (available only when selecting EXPERT)

When you use small speakers which do not fully reproduce the low-frequency range, you can boost up the low-frequency signals of the sub-woofer or front speakers

- 1 Select [BASS] using
  - **SUBWOOFER** or **L/R** using
- 2 Select Sub-woofer or L/R using
  - **S.WOOFER:** the low-frequency signals fed from the sub-woofer output are boosted up.
  - **L/R:** the low-frequency signals fed from the front speaker output are boosted up.

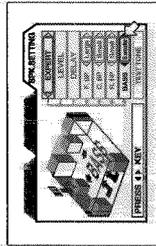

The "Bass redirect" setting is effective only when at least any one of the speaker sizes is set to "Small". If none of them is set to "Small", this setting is not activated ("None" appears in the setting field). Please note that when playing back a Dolby Digital disc, LFE (Low Frequency Effect) signals are fed from the SUBWOOFER output even if "BASS" shows "None" or "L/R". So you may use a sub-woofer even in such case. If the front speaker size is set to "Small", the Bass redirect setting is fixed to "S.woofer".


#### NOTES

- When selecting 5.1 CHANNEL or EXPERT, set DOWN MIX to OFF (see page 57).
- Dolby Digital LFE (Low Frequency Effect) signals are always fed from the SUBWOOFER output on the rear panel of the unit regardless of speaker setting.
- When playing back digital audio output signals of the unit using an external decoder, speaker setting above is invalid. Make setting of the external decoder properly.

**3 Speaker level (available only when selecting EXPERT)**

You can adjust the output level of each speaker.

- 1 Select [LEVEL] using then press . The color of "LEVEL" changes.
- 2 Select the desired speaker(s) to be set using .
  - **F.SP:** front speakers, the level is fixed to 0db.
  - **C.SP:** center speaker
  - **R.SP:** rear speakers
  - **S.WOOFER:** sub-woofer
 The setting range is -8 db to +6 db in 1 db units.

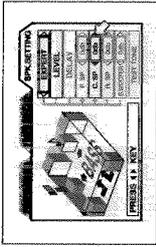


For the speakers whose size is set to "None", Speaker level and Delay cannot be set. ("—" appears in the setting field).  
However, when playing back a Dolby Digital disc, LFE signal is output from SUBWOOFER output even if S.WOOFER shows "—" allowing to activate a sub-woofer connected. In such case, adjust the output level using the level control on the sub-woofer.

**4 Delay (available only when selecting EXPERT)**

You can adjust the delay time of each speakers.

- 1 Select [DELAY] using then press . The color of "DELAY" changes.
- 2 Select the desired speaker(s) to be set using .
  - **F.SP:** front speakers, the delay is fixed to 0ms.
  - **C.SP:** center speaker (selectable from 0 to -5 mS in 1 mS units)
  - **R.SP:** rear speakers (selectable from 0 mS, -5mS, -10 mS, and -15 mS)
- 3 Set the delay time using .

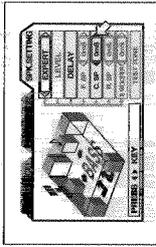


Delay of S.WOOFER cannot be set.

**5 Test tone (available only while setting LEVEL or DELAY)**

You can check the level or delay setting by monitoring the test tone.

- 1 Select [TEST TONE] using then press . The color of "TEST TONE" changes.
- 2 Select the desired speaker(s) using .
  - **F.SP:** front speakers
  - **R.SP:** rear speakers
 After selecting the Test tone, if you do not move the cursor, the test tone is output from each speaker one by one. In Test tone mode, if you move down from "R.SP" position, the test tone continues to output from the rear speakers as long as is any position other than "F.SP" and "C.SP". Similarly, if you move up from "F.SP" position, the test tone continues to output from the front speakers as long as is any position other than "C.SP" and "R.SP".
- 3 Set the level or delay using again, if necessary.

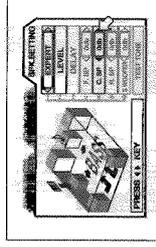

In Test tone mode, you hear pink noise, which includes all frequencies in the audible range, from the speakers. This is not a malfunction.



The test tone is not output from the SUBWOOFER output.

**NOTES**

- To exit the speaker level (or delay) setting mode Move to [LEVEL] (or [DELAY]) in the on-screen display and press until [LEVEL] (or [DELAY]) returns to its original color.

**NOTES**


- To exit the test tone mode Move to [TEST TONE] in the on-screen display and press until [TEST TONE] returns to its original color.

## Limiting playback by children

This function restricts playback of DVD discs which contain violent (and other) scenes according to the level set by the user. For example, if a movie which includes violent scenes supports the parental lock feature, such scenes which you do not want to let children view can be cut or replaced with other scenes.


### To set Parental Lock for the first time [PARENTAL LOCK] [DVD]

- 1 Press **ENTER** while holding down **DOWN**.  
If the current disc is not a DVD disc, you have to remove the disc from the tray before setting up.  
The Parental Lock on-screen display appears on the TV screen.  
(The parental lock function is only operated with the remote control unit.)

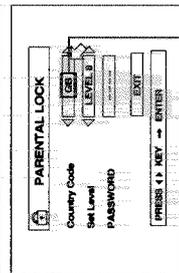


- 2 Use **LEFT** to select country code and press **ENTER**.  
(See "Country code list for parental lock" at the end of this instructions.)

**Hints**  
"LEVEL 1" is the strictest level.

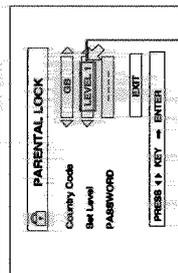

- 3 Use **LEFT** to select the parental lock level.  
Each time you press **RIGHT**, the parental level changes from LEVEL 1 to LEVEL 8.

- 4 Press **ENTER**.

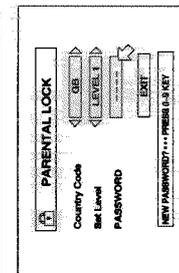

- 5 Enter your 4-digit password using **NUMBER** and press **ENTER**.


■ The parental level and password are set.

English




### To change the settings [PARENTAL LOCK] [DVD]

- 1 Press **ENTER** while holding down **DOWN**.  
If the current disc is not a DVD disc, you have to remove the disc from the tray before setting up.  
The Parental Lock on-screen display appears on the TV screen.

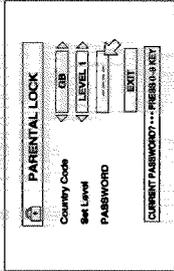

- 2 Enter your current 4-digit password using **NUMBER** to **ENTER**.  
If you enter the wrong password, -WRONG! RETRY .....> appears on the TV screen, and you cannot go to next step.

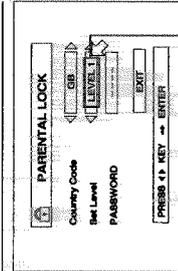

- 3 Use **LEFT** to move to [Set Level], then use **RIGHT** to select the parental lock level.

- 4 Press **ENTER**.

- 5 Enter your new 4-digit password using **NUMBER** to **ENTER** and press **ENTER**.

■ The new setting is effective.


#### NOTES

- When you enter the wrong password more than 3 times in step 2 above, **WRONG! RETRY** moves to -EXIT> automatically and **ENTER** does not work.
- If you forget your password in step 2 Enter "8888."

## Care and handling of discs

### How to handle discs

When handling a disc, do not touch the surface of the disc. Since discs are made of plastic, they are easily damaged. If a disc gets dirty, dusty, scratched or warped, the images and sound will not be picked up correctly, and such a disc may cause the player to malfunction.

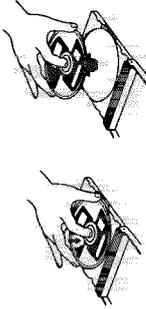

### Even on label side


Do not damage the label side, stick paper to or use any adhesive on its surface.

### Storage

Make sure that discs are kept in their cases. If discs are piled on top of one another without their protective cases, they can be damaged. Do not put discs in a location where they may be exposed to direct sunlight, or in a place where the humidity or temperature is high. Avoid leaving discs in your car!

### Maintenance of discs

If there are fingerprints or other dirt adhering to a disc, wipe with a soft dry cloth, moving from the center outwards. If a disc is difficult to clean, wipe with a cloth moistened with water. Never use record cleaners, petrol, alcohol or any anti-static agents.

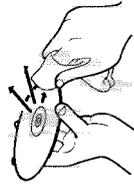

### CAUTION

Sometimes during play noise or images may be garbled. This is sometimes due to the disc. (It may not be up to industry standards.) These symptoms are caused by the discs, not by the malfunction of the unit.


## To temporarily release the Parental lock (PARENTAL LOCK)



When you set the parental level strictly, some discs may not be played back at all. When you insert such a disc and try to play it, the Parental Lock on-screen display appears on the TV screen, and the unit will ask you whether you want the parental lock to be temporarily released or not.

- 1 Use the to select [YES] or [NO], then press .

If you select [YES], moves to the PASSWORD field. When selecting [NO], press button to remove the disc.

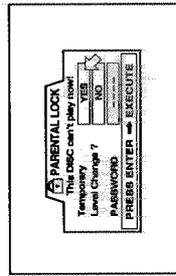

- 2 Enter your 4-digit password using to .

If you enter the wrong password, "WRONG! RETRY..." appears on the TV screen, and you cannot go to next step.

- The Parental lock is released, and the unit starts playback.

### NOTE

- When you enter the wrong password more than 3 times in step 2 above, moves to <NO> automatically and does not work.

Additional information

# Specifications

**General**  
 DVD VIDEO, Audio CD, Video CD  
 PAL

**Other**  
 Power requirements: AC 230V ~, 50Hz  
 Power consumption: 28 W (POWER ON), 2 W (STANDBY mode)  
 Mass: 4.5 kg (10.0 lbs)  
 Dimensions (W x H x D): 435 x 112 x 335 mm  
 17-3/16 x 4-7/16 x 13-1/4 inch

**Video output**  
 VIDEO OUT (pin jack): 1.0 Vp-p (75 ohms)  
 S-VIDEO OUT (S jack): 1.0 Vp-p (75 ohms)  
 Y Output: 286 mVp-p (75 ohms)  
 C Output: 500 Lines  
 Signal to noise ratio: 85 dB

**Audio output**  
 ANALOG OUT (pin jack):  
 FRONT: 2.0 Vrms (10 k ohms)  
 REAR: 2.0 Vrms (10 k ohms)  
 CENTER: 2.0 Vrms (10 k ohms)  
 SUB WOOFER: 1.0 Vrms (10 k ohms)  
 DIGITAL OUT:  
 OPTICAL: -21 to -15 dBm (Peak)  
 COAXIAL: 0.5 Vp-p (75 ohms Terminate)

**Audio characteristics**  
 Frequency response: CD (sampling frequency 44.1 kHz): 2 Hz to 20 kHz  
 DVD (sampling frequency 48 kHz): 2 Hz to 22 kHz  
 DVD (sampling frequency 96 kHz): 2 Hz to 44 kHz  
 Dynamic range: 16 bit: More than 99 dB  
 20 bit: More than 108 dB  
 24 bit: More than 108 dB  
 Wow and flutter: Unmeasurable (less than ± 0.002%)  
 Total harmonic distortion: Less than 0.002%

**Supplied accessories**  
 Audio/video cable: 1  
 S-video cable: 1  
 Audio cable: 2  
 Remote Control Unit: 1  
 R6P(SUM-3)/AA(15F) batteries: 2  
 Instructions: 1

\* Specifications and appearance are subject to change without prior notice.

Additional information

# Troubleshooting

What appears to be a malfunction may not always be serious. Please go through the following list before requesting service.

Symptom	Possible cause	Remedy
Power does not come on. Remote control does not work.	Power plug is not inserted securely. Too far from the unit. The tip of the remote unit is not pointed in the right direction. Batteries are exhausted. Battery polarity is incorrect.	Plug in securely. Move closer to the unit. Point the infrared light-emitting window toward the remote sensor on the front panel. Replace the batteries with new ones. Take out the batteries and insert them again in the correct direction. Connect the cable correctly.
No picture is displayed on the monitor.	Connection of video cable is incorrect. Input selection of TV is incorrect. Disc is not playable.	Select correctly. Use a playable disc. (See page 11.) Connect the unit so that the picture signal flows directly to the TV.
Picture is noisy.	The unit is connected to a VCR directly and the copyguard function is activated.	Check the connections. Select correctly.
No audio is reproduced.	Connection to stereo system is incorrect. Input selection of amplifier is incorrect.	Connect the unit using AUDIO OUT jack also. Adjust the PHONES LEVEL. Wipe the disc surface.
No sound from headphones. Sound is distorted or noise is generated.	The unit is connected only using DIGITAL OUT jack. PHONES LEVEL is too low. Disc is dirty.	Set the screen saver mode to the other mode. Select monitor type correctly. (See page 53). Set the television correctly. Turn off the power and unplug the power cord, then connect the power cord again. Turn off the power, then turn it on a few hours later.
Picture is garbled.	The screen saver mode is set to MODE 1, and the screen saver function is activated.	Set the screen saver mode to the other mode.
Picture does not fit the television screen. Operation is not possible	MONITOR TYPE is not correctly set. Television is not correctly set. Microcomputer malfunctions due to lightning or static electricity. Moisture condensation occurs by a sudden change of temperature or humidity.	Set the television correctly. Turn off the power and unplug the power cord, then connect the power cord again. Turn off the power, then turn it on a few hours later.

Additional information

### Appendix A: Table of languages and their abbreviations

When you select the subtitle language or sound, the languages shown below are displayed as abbreviations. To select the desired language, select the abbreviation corresponding to the language you want to.

AA	Afar	IK	Inupiak	RN	Kirundi
AB	Abkhazian	IN	Indonesian	RO	Rumanian
AF	Afrikaans	IS	Icelandic	RU	Russian
AM	American Hebrew	IW	Hebrew	RW	Kinyarwanda
AR	Arabic	J	Yiddish	SA	Sanskrit
AS	Assamese	JW	Javanese	SD	Sindhi
AV	Aymara	KA	Georgian	SG	Sango
AZ	Azerbaijani	KK	Kazakh	SH	Serbo-Croatian
BA	Bashkir	KL	Greenlandic	SI	Sinhalese
BE	Byelorussian	KM	Cambodian	SK	Slovak
BG	Bulgarian	KN	Kannada	SL	Slovenian
BH	Bihari	KO	Korean (KOR)	SM	Samoan
BI	Bislama	KS	Kashmiri	SN	Shona
BN	Bengali, Bangla	KU	Kurdish	SO	Somali
BO	Tibetan	KV	Kirghiz	SQ	Albanian
BR	Breton	LA	Latvian, Lettish	SR	Serbian
CA	Catalan	LN	Lingala	SS	Siswati
CO	Corean	LO	Loathian	ST	Sesotho
CS	Czech	LT	Lithuanian	SU	Sundanese
CV	Welsh	LV	Latvian, Lettish	SV	Swedish
DA	Danish	MG	Malagasy	SW	Swahili
DZ	Burani	MI	Maori	TA	Tamil
EL	Greek	MK	Macedonian	TE	Telugu
EO	Esperanto	ML	Malayalam	TG	Tajik
ET	Estonian	MN	Mongolian	TH	Thai
EU	Basque	MO	Moldavian	TI	Tigrinya
FA	Persian	MR	Marathi	TK	Turkmen
FI	Finnish	MS	Malay (MAY)	TL	Tagalog
FJ	Fiji	MT	Maltese	TN	Tswana
FO	Faroese	MY	Burmese	TO	Tonga
FY	Frisian	NA	Nauru	TR	Turkish
GA	Irish	NE	Nepali	TS	Tsonga
GD	Scots Gaelic	NL	Dutch	TT	Tatar
GL	Galician	NO	Norwegian	TW	Twi
GN	Guarani	OC	Occitan	UK	Ukrainian
GU	Gujarati	OM	(Afan) Oromo	UR	Urdu
HA	Hausa	OR	Oriya	UZ	Uzbek
HI	Hindi	PA	Panjabi	VI	Vietnamese
HR	Croatian	PL	Polish	VO	Volapuk
HU	Hungarian	PS	Pasito, Puelto	WO	Wolof
HY	Armenian	PT	Portuguese	XH	Xhosa
IA	Interlingua	QU	Quechua	YO	Yoruba
IE	Interlingue	RM	Rhaeto-Romanca	ZU	Zulu

### Appendix B: Country code list for parental lock

This list is used for the parental Lock operation. For details, see page 61.

AD	Andorra	CM	Cameroon	GR	Greece
AE	United Arab Emirates	CN	China	GS	South Georgia and the South Sandwich Islands
AF	Afghanistan	CO	Colombia	GT	Guatemala
AG	Antigua and Barbuda	CR	Costa Rica	GU	Guam
AI	Anguilla	CU	Cuba	GW	Guinea-Bissau
AL	Albania	CV	Cape Verde	GY	Guyana
AM	Armenia	CX	Christmas Island	HK	Hong Kong
AN	Netherlands Antilles	CY	Cyprus	HM	Heard Island and McDonald Islands
AO	Angola	CZ	Czech Republic	HN	Honduras
AQ	Antarctica	DE	Germany	HR	Croatia
AR	Argentina	DJ	Djibouti	HT	Haiti
AS	American Samoa	DK	Denmark	HU	Hungary
AT	Austria	DM	Dominica	ID	Indonesia
AU	Australia	DO	Dominican Republic	IE	Ireland
AW	Aruba	DZ	Algeria	IL	Israel
AZ	Azerbaijan	EC	Ecuador	IN	India
BA	Bosnia and Herzegovina	EE	Estonia	IO	British Indian Ocean Territory
BB	Barbados	EG	Egypt	IR	Iran (Islamic Republic of)
BD	Bangladesh	EH	Western Sahara	IS	Iceland
BE	Belgium	ER	Eritrea	IT	Italy
BF	Burkina Faso	ES	Spain	JM	Jamaica
BG	Bulgaria	ET	Ethiopia	JO	Jordan
BH	Bahrain	FI	Finland	JP	Japan
BI	Burundi	FJ	Fiji	KE	Kenya
BJ	Benin	FK	Falkland Islands (Malvinas)	KG	Kyrgyzstan
BM	Bermuda	FM	Micronesia (Federated States of)	KH	Cambodia
BN	Brunei Darussalam	FO	Faroe Islands	KI	Kiribati
BO	Bolivia	FR	France	KM	Comoros
BR	Brazil	FX	France, Metropolitan	KN	Saint Kitts and Nevis
BS	Bahamas	GA	Gabon	KP	Korea, Democratic
BT	Bhutan	GB	United Kingdom	KR	Korea, Republic of
BV	Bouvet Island	GD	Grenada	KW	Kuwait
BW	Botswana	GE	Georgia	KY	Cayman Islands
BY	Belarus	GF	French Guiana	KZ	Kazakhstan
BZ	Belize	GH	Ghana	LA	Lao People's Democratic Republic
CA	Canada	GI	Gibraltar	LB	Lebanon
CC	Cocos (Keeling) Islands	GL	Greenland	LC	Saint Lucia
CF	Central African Republic	GM	Gambia		
CG	Congo	GN	Guinea		
CH	Switzerland	GP	Guadeloupe		
CI	Côte d'Ivoire	GQ	Equatorial Guinea		
CK	Cook Islands				
CL	Chile				

LI	Liechtenstein
LK	Sri Lanka
LR	Liberia
LS	Lesotho
LT	Lithuania
LU	Luxembourg
LV	Latvia
LY	Libyan Arab Jamahiriya
MA	Morocco
MC	Monaco
MD	Moldova, Republic of
MG	Madagascar
MH	Marshall Islands
ML	Mali
MM	Myanmar
MN	Mongolia
MO	Macao
MP	Northern Mariana Islands
MQ	Martinique
MR	Mauritania
MS	Montserrat
MT	Malta
MU	Mauritius
MV	Maldives
MW	Malawi
MX	Mexico
MY	Malaysia
MZ	Mozambique
NA	Namibia
NC	New Caledonia
NE	Niger
NF	Norfolk Island
NG	Nigeria
NI	Nicaragua
NL	Netherlands
NO	Norway
NP	Nepal
NR	Nauru
NU	Niue
NZ	New Zealand
OM	Oman
PA	Panama

PE	Peru
PF	French Polynesia
PG	Pepua New Guinea
PH	Philippines
PK	Pakistan
PL	Poland
PM	Saint Pierre and Miquelon
PN	Pitcairn
PR	Puerto Rico
PT	Portugal
PW	Palau
PY	Paraguay
QA	Qatar
RE	Reunion
RO	Romania
RU	Russian Federation
RW	Rwanda
SA	Saudi Arabia
SB	Solomon Islands
SC	Seychelles
SD	Sudan
SE	Sweden
SG	Singapore
SH	Saint Helena
SI	Slovenia
SJ	Svalbard and Jan Mayen
SK	Slovakia
SL	Sierra Leone
SM	San Marino
SN	Senegal
SO	Somalia
SR	Suriname
ST	Sao Tome and Principe
SV	El Salvador
SY	Syrian Arab Republic
SZ	Swaziland
TC	Turks and Caicos Islands
TD	Chad
TF	French Southern Territories
TG	Togo
TH	Thailand

TJ	Tajikistan
TK	Tokelau
TM	Turkmenistan
TN	Tunisia
TO	Tonga
TP	East Timor
TR	Turkey
TT	Trinidad and Tobago
TV	Tuvalu
TW	Taiwan, Province of China
TZ	Tanzania, United Republic of
UA	Ukraine
UG	Uganda
UM	United States Minor Outlying Islands
US	United States
UY	Uruguay
UZ	Uzbekistan
VA	Vatican City State (Holy See)
VC	Saint Vincent and the Grenadines
VE	Venezuela
VG	Virgin Islands (British)
VI	Virgin Islands (U.S.)
VN	Vietnam
VU	Vanuatu
WF	Wallis and Futuna Islands
WS	Samoa
YE	Yemen
YT	Mayotte
YU	Yugoslavia
ZA	South Africa
ZM	Zambia
ZR	Zaire
ZW	Zimbabwe

XV-D701BK

**-MEMO-**


## Description of Major ICs

### ■ AN8825NFHQ(IC101):FRONT END PROCESSOR

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	LDONB	I	Laser ON signal input (CD)	51	VCC5	-	Power supply 5
2	LDONA	I	Laser ON signal input (DVD)	52	IDGT	I	Gate signal input for RAM of data slice address section
3	LPCOB	O	Laser drive signal output(CD)				
4	LPC2	I	Laser pin input(CD)	53	DTRD	I	Data slice,Data read signal input for RAM
5	LPCOA	O	Laser drive signal output(DVD)	54	CAPA	I	Data slice address signal input for RAM
6	LPC1	I	Laser pin input(DVD)	55	VCC4	-	Power supply 4
7	TGBAL	O	Tangential phase balance control	56	DSLFLT		Constant filter terminal when data sliced
8	POFLT		Truck detection threshold level	57	ITO		Ripple removal filter terminal
9	PTH		Truck detection threshold level	58	VCOIN	I	PLL VCO input terminal
10	TBAL	O	Tracking balance control	59	PLFLT		PLL high region filter terminal
11	TB	O	Tangential phase error signal output	60	PLFLT2		PLL low region filter terminal
12	FBAL	O	Focus balance control	61	PCPO		PLL phase gain setting terminal
13	FEOU	O	Focus error signal output	62	FCPO		PLL frequency gain setting terminal
14	VREFL	O	VREFL voltage output	63	GND4	-	Connect to GND 4
15	VREFH	O	VREFH voltage output	64	FUPON	I	PLL frequency control input
16	HDTYP	I	Input switch terminal of PD signal	65	VREF5	O	VREF 5 voltage output
17	XTRON	I	Tracking off hold input	66	JITOUT	O	Jitter detection signal output
18	PULIN		DSL.PLL drawing mode switch	67	FC		FC control for filter
19	BEN	I	Serial data input terminal(SEN)	68	BOOST		Boost control for filter
20	SCK	I	Serial data input terminal(SCK)	69	OFTR	O	OFTR output terminal
21	STD1	I	Serial data input terminal(STD1)	70	BDO	O	BDO output terminal
22	STANBY	O	Standby mode control terminal	71	RFENV	O	RF envelope output
23	NC	-	Non connect	72	BOTTOM	O	Bottom envelope detection output
24	RBCL		Standard current source	73	PEAK	O	Peak envelope detection output
25	NC	-	Non connect	74	AGCG		AGC amp.gain control terminal
26	NC	-	Non connect	75	AGCO		AGC amp.level control terminal
27	NC	-	Non connect	76	VCC2	-	Power supply 2
28	TEOUT	O	Tracking error signal output	77	VPTOFT		OFTR detection level setting
29	TKCFLT		Track count detection filter	78	VPTBD0		BDO detection level setting
30	TKCNT	O	Track count output	79	TESTSQ	I	TEST signal input terminal
31	MMPW		Mnaural/Multi control for BDO,OFTR	80	DCFLT		Capacitor connect terminal for RF amp.filter
32	DOF		Data slice offset adjustment	81	RFINP	I	RF signal forward input terminal
33	GND1	-	Connect to GND	82	RFINN	I	RF signal reversing input terminal
34	VREF1	O	VREF1 voltage output	83	RFON	O	All RF addition reversing output
35	VREF3	O	VREF3 voltage output	84	RFOP	O	All RF addition forward output
36	DFLTON	O	Filter amp.reversing output	85	VREF2	O	VREF 2 voltage output terminal
37	DFLTOP	O	Filter amp.forward output	86	GND2	-	Connect to GND 2
38	DSLIP	I	Data slice forward input	87	RFAS2	O	All addition signal output
39	DSLIN	I	Data slice reversing input	88	RFAS1		Addition signal of internal division into four
40	GND3	-	Connect to GND				
41	DSL0	O	Data slice single data output	89	VREF4	O	VREF 4 voltage output terminal
42	VCK8	O	Output of PLL single division CLK into eight	90	VCC1	-	Power supply 1
43	VCC3	-	Power supply 3	91	VIN8	I	3 beam sub input terminal2 (CD)
44	DTMONP	O	Edge signal monitor output	92	VIN7	I	3 beam sub input terminal1 (CD)
45	DTMONN	O	Edge signal monitor output	93	VIN6	I	External division into two of RF input2 (DVD)
46	GND5	-	Connect to GND 5				
47	RDTN	O	Synchronous PLL differential motion making RF signal reversing output	94	VIN5	I	External division into two of RF input1 (DVD)
48	RDTP	O	Synchronous PLL differential motion making RF signal forward output	95	VIN1	I	RF input1 (internal division into four DVD/CD)
				96	VIN2	I	RF input2 (internal division into four DVD/CD)
49	RDCKN	O	Synchronous PLL differential motion clock reversing output	97	VIN3	I	RF input3 (internal division into four DVD/CD)
				98	VIN4	I	RF input4 (internal division into four DVD/CD)
50	RDCKP	O	Synchronous PLL differential motion clock forward output	99	DIFP	O	RF signal output terminal P (RAM)
				100	DIFN	O	RF signal output terminal N (RAM)

■BA7652AF(IC623)

1. Block Diagrams

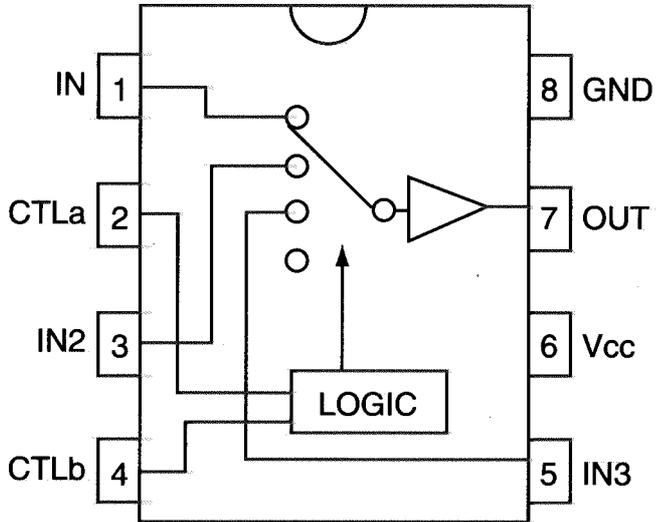

2. Pin Function


Pin No.	Symbol	I/O	Function
1	IN1	I	Input terminal 1
2	CTLa	I	Control terminal a
3	IN2	I	Input terminal 2
4	CTLb	I	Control terminal b
5	IN3	I	Input terminal 3
6	Vcc	-	Power supply
7	OUT	O	Output terminal
8	GND	-	Connect to GND

3. The control terminal truth value table

CTLa	CTLb	OUT
L	L	IN1
H	L	IN2
L	H	IN3
H	H	MUTE

■BU2092(IC642):PORT EXPANDER

1.Terminal Layout

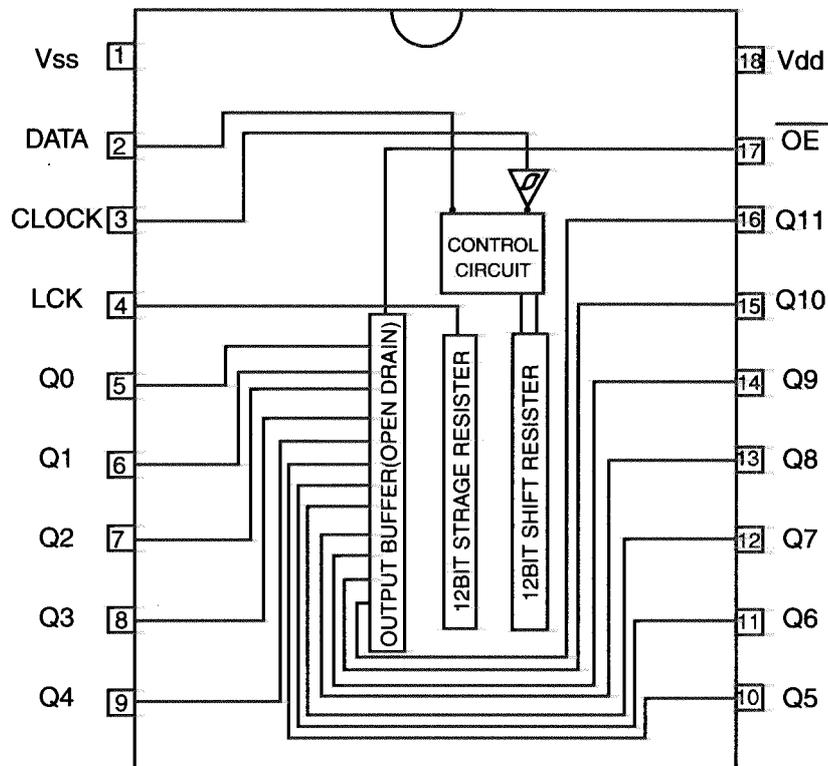

2.Pin Function

Pin No.	Symbol	I/O	Function						
1	Vss	-	Connect to GND						
2	DATA	I	Serial Data input						
3	CLOCK	I	Shift Clock of Data						
4	LCK	I	Latch Clock of Data						
5~16	Q0~Q11	O	Parallel Data Output <table border="1" style="margin-left: 20px;"> <tr> <td>Latch Data</td> <td>L</td> <td>H</td> </tr> <tr> <td>OUTPUT</td> <td>ON</td> <td>OFF</td> </tr> </table>	Latch Data	L	H	OUTPUT	ON	OFF
Latch Data	L	H							
OUTPUT	ON	OFF							
17	$\overline{\text{OE}}$	I	Output Enable						
18	Vdd	-	Power Supply						

■D4516161AG5-10(IC508,IC504):16M SDRAM

1.Terminal Layout

Vcc	1	50	Vss
DQ0	2	49	DQ15
DQ1	3	48	DQ14
VssQ	4	47	VssQ
DQ2	5	46	DQ13
DQ3	6	45	DQ12
VccQ	7	44	VccQ
DQ4	8	43	DQ11
DQ5	9	42	DQ10
VssQ	10	41	VssQ
DQ6	11	40	DQ9
DQ7	12	39	DQ8
VccQ	13	38	VccQ
LDQM	14	37	NC
$\overline{WE}$	15	36	UDQM
$\overline{CAS}$	16	35	CLK
$\overline{RAS}$	17	34	CKE
CS	18	33	NC
A11	19	32	A9
A10	20	31	A8
A0	21	30	A7
A1	22	29	A6
A2	23	28	A5
A3	24	27	A4
Vcc	25	26	Vss

2.Pin Function

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	Vcc	-	Supply voltage	26	Vss	-	Connect to GND
2,3	DQ0,1	I/O	Data bus I/O from IC501	27~32	A4~9	I	Address input from IC501
4	VssQ	-	Ground for DQ	33	NC	-	Non connect
5,6	DQ2,3	I/O	Data bus I/O from IC501	34	CKE	I	Clock enable
7	VccQ	-	Power supply for output circuit	35	CLK	I	System clock input
8,9	DQ4,5	I/O	Data bus I/O from IC501	36	UDQM	I	Upper DQ mask enable
10	VssQ	-	Ground for output circuit	37	NC	-	Non connect
11,12	DQ6,7	I/O	Data bus I/O from IC501	38	VccQ	-	Power supply for output circuit
13	VccQ	-	Power supply for output circuit	39,40	DQ8,9	I/O	Data bus I/O from IC501
14	LDQM	I	Lower DQ mask enable	41	VssQ	-	Ground for output circuit
15	$\overline{WE}$	I	Write enable	42,43	DQ10,11	I/O	Data bus I/O from IC501
16	$\overline{CAS}$	I	Column address strobe	44	VccQ	-	Power supply for output circuit
17	$\overline{RAS}$	I	Row address strobe	45,46	DQ12,13	I/O	Data bus I/O from IC501
18	CS	I	Chip select	47	VssQ	-	Ground for output circuit
19,20	A11,10	I	Address input from IC501	48,49	DQ14,15	I/O	Data bus I/O from IC501
21~24	A0~3	I	Address input from IC501	50	Vss	-	Connect to GND
25	Vcc	-	Supply voltage				

## ■ JCE8011(IC551):GRAPHIC CONTROLLER

Pin No.	Symbol	I/O	Function
1~8	VD0~7	I	DVD Image signal input (Multi plex data Y,Cr,Cb)
9	VCLKI	I	Dot clock signal input (27MHz)
10	HSYNCI	I	The horizontal synchronous signal input
11	VSYNCI	I	Vertical synchronous signal input
12	VCC	-	Power supply
13	VCLKD	O	Dot clock signal output (27MHz)
14	HSYNCO	O	'H' blanking output
15	VSYNCO	O	'V' blanking output
16~23	DOU0~7	O	Digital data output
24	TEST	-	Test terminal (Uses as GND usually)
25	RESETB	I	System reset signal
26	GND	-	Connect to GND
27	NTB	I	Mode switching NTSC(low) / PAL(high)
28	DTSF0	I	Taking timing shift of VD input
29	DTSF1	I	Taking timing shift of VD input
30	VIDEG	I	Taking edge specification of VD input (0:up , 1:down)
31	DOSF0	I	Timing shift input of output data
32	DOSF1	I	Timing shift input of output data
33	XVRST	O	Non connect
34	F1	O	Field Identification signal output
35	HBL	O	'H' blanking output
36	VBL	O	'V' blanking output
37	VOEDG	I	Output timing setting of DOU (0:up , 1:down)
38	VCC	-	Power supply
39~46	FRD7~0	I	Field memory read data input
47	GND	-	Connect to GND
48	FRCK	O	Field memory read clock
49	FWCK	O	Field memory write clock
50	FREB	O	Field memory read enable
51	FWEB	O	Field memory write enable
52	FRRSTB	O	Field memory read address reset
53	FWRSTB	O	Field memory write address reset
54~61	FWD7~0	O	Field memory write data output
62	VCC	-	Power supply
63~70	CHD7~0	I	Character ROM data
71	GND	-	Connect to GND
72	CHOEB	O	Character ROM output enable
73~82	CHA19~10	O	Character ROM address output
83	VCC	-	Power supply
84~93	CHA9~0	O	Character ROM address output
94	GND	-	Connect to GND
95	ACK	O	
96	CS1B	I	Serial data chip select for graphic control
97	CS2B	I	Serial data chip select for encoder control
98	SCK	I	Serial clock input
99	RXD	I	Serial input data
100	TXD	O	Serial output data

■M27C1602CZ(IC402):16M ROM

1.Terminal Layout

WE	1	44	WP
A19	2	43	A20
A18	3	42	A9
A8	4	41	A10
A7	5	40	A11
A6	6	39	A12
A5	7	38	A13
A4	8	37	A14
A3	9	36	A15
A2	10	35	A16
A1	11	34	A17
CE	12	33	BYTE
VSS	13	32	VSS
OE	14	31	A0
D0	15	30	D7
D8	16	29	D14
D1	17	28	D6
D9	18	27	D13
D2	19	26	D5
D10	20	25	D12
D3	21	24	D4
D11	22	23	VCC

2.Pin Function


Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	WE	I	Write enable	23	VCC	-	Power supply +3.3V
2	A19	I	Address bus 19	24	D4	O	Data bus 4
3	A18	I	Address bus 18	25	D12	O	Data bus 12
4	A8	I	Address bus 8	26	D5	O	Data bus 5
5	A7	I	Address bus 7	27	D13	O	Data bus 13
6	A6	I	Address bus 6	28	D6	O	Data bus 6
7	A5	I	Address bus 5	29	D14	O	Data bus 14
8	A4	I	Address bus 4	30	D7	O	Data bus 7
9	A3	I	Address bus 3	31	A0	I	Address bus 0
10	A2	I	Address bus 2	32	VSS	-	Connect to GND
11	A1	I	Address bus 1	33	BYTE	I	Data width selection input
12	CE	I	Chip enable	34	A17	I	Address bus 17
13	VSS	-	Connect to GND	35	A16	I	Address bus 16
14	OE	I	Output enable	36	A15	I	Address bus 15
15	D0	O	Data bus 0	37	A14	I	Address bus 14
16	D8	O	Data bus 8	38	A13	I	Address bus 13
17	D1	O	Data bus 1	39	A12	I	Address bus 12
18	D9	O	Data bus 9	40	A11	I	Address bus 11
19	D2	O	Data bus 2	41	A10	I	Address bus 10
20	D10	O	Data bus 10	42	A9	I	Address bus 9
21	D3	O	Data bus 3	43	A20	I	Address bus 20
22	D11	O	Data bus 11	44	WP	-	Non connect

**M54V16258B45TSK(IC303):4M DRAM**

**1. Terminal Layout**

VCC	1	44	VSS
I/O1	2	43	I/O16
I/O2	3	42	I/O15
I/O3	4	41	I/O14
I/O4	5	40	I/O13
VCC	6	39	VSS
I/O5	7	38	I/O12
I/O6	8	37	I/O11
I/O7	9	36	I/O10
I/O8	10	35	I/O9
	11	34	
	12	33	
NC	13	32	NC
NC	14	31	LCAS
WAITE	15	30	UCAS
RAS	16	29	OE
NC	17	28	A8
A1	18	27	A7
A1	19	26	A6
A2	20	25	A5
A3	21	24	A4
VCC	22	23	VSS

**2. Block Diagrams**

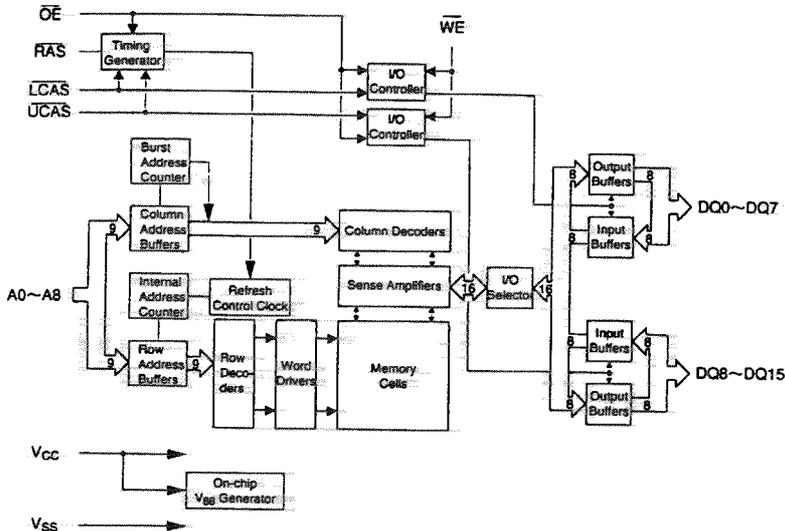

**3. Pin Function**

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	VCC	-	Power supply 3.3V	24~28	A4~A8	I	Address bus input
2~5	I/O1~4	I/O	Data bus I/O	29	OE	O	Output enable
6	VCC	-	Power supply 3.3V	30	UCAS	I	Column address strobe
7~10	I/O5~8	I/O	Data bus I/O	31	LCAS	I	Column address strobe
11~14		-	Non connect	32~34		-	Non connect
15	WAITE	I	Write enable	35~38	I/O9~012	I/O	Data bus I/O
16	RAS	I	Row address strobe	39	VSS	-	Connect to GND
17	NC	-	Non connect	40~43	I/O13~016	I/O	Data bus I/O
18~21	A0~3	I	Address bus input	44	VSS	-	Connect to GND
22	VCC	-	Power supply 3.3V				
23	VSS	-	Connect to GND				


**4. Function table**

Input Pin					DQ Pin		Operation Mode
RAS	LCAS	UCAS	WE	OE	DQ0~DQ7	DQ8~DQ15	
H	*	*	*	*	High-Z	High-Z	Standby
L	H	H	*	*	High-Z	High-Z	Refresh
L	L	H	H	L	Dout	High-Z	Low-ranking byte read
L	H	L	H	L	High-Z	Dout	High-ranking byte read
L	L	L	H	L	Dout	Dout	Word read
L	L	H	L	H	Din	Don't Care	Low-ranking byte write
L	H	L	L	H	Don't Care	Din	High-ranking byte write
L	L	L	L	H	Din	Din	word write
L	L	L	H	H	High-Z	High-Z	—————

\*: "H" or "L"

■M30622EC-FP(IC714):System control micon

1.Terminal Layout

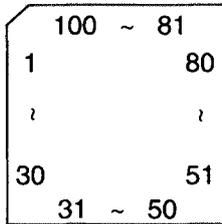

2.Key Matrix

	KEY IN 0	KEY IN 1	KEY IN 2	KEY IN 3	KEY IN 4	KEY IN 5
KEY OUT 0	DIGEST	3D PHONIC	VIDEO FINE PROCESSOR	EJECT	ON SCREEN	TITLE
KEY OUT 1	MENU	ENTER	▲	▼	▶	◀
KEY OUT 2	◀◀	▶▶	STOP	PAUSE	PLAY	_____
KEY OUT3	POWER	_____	_____	_____	_____	_____


3.Pin Function (1/2)

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	SDATA	O	FL driver data output	27	EECS	O	EEPROM Chip select signal
2	FLSCK	O	FL driver clock output	28	EECK	O	EEPROM Clock signal
3	CS4	O	VFPIIC chip select output	29	EEDI	I	EEPROM Data input
4	DIF0	-	Non connect	30	EEDO	O	EEPROM Data output
5	OSDDO	O	OSD set data output	31	JLIPO	O	JLIP Signal output
6	OSDDI	I	OSD set data input	32	JLIPI	I	JLIP Signal input
7	OSDCK	O	OSD clock signal output	33	P65	-	Non connect
8	BYTE	-	Connect to GND	34	CPURST	O	LSI Reset signal output
9	CNVSS	-	Connect to GND	35	S2UDT	O	Communication data output for unit micon
10	OSDCS2	O	OSD chip select	36	U2SDT	I	Communication data input From unit micon
11	POWERON	O	Power on signal output	37	SCLK	I	System clock signal input
12	RESET	I	Reset signal input	38	NTB	O	PAL/NT switch output
13	XOUT	O	Clock signal output	39	BANK	O	OSDROM switch output
14	VSS	-	Connect to GND	40	ACK	I	OSD active input
15	XIN	I	Clock signal input	41	TRAYOUT	I	Tray open detection signal
16	VCC	-	Power supply +5V	42	OSDCS1	O	OSD Chip select
17	MNI	-	Non connect	43	OSDCS3	O	Encoder Chip select
18	REQ	I	Request signal input	44	RSTE	O	Encoder reset
19	REMO	I	Remocon signal input	45	MICSW	I	Mic detection signal
20	VSYNC	I	Video sync input	46	VS1	O	S1 Switch output
21	TRAYIN	I	Tray close detection signal	47	VCD	O	Video mode switch output
22	BUSY	O	Busy signal output	48	NTSEL	O	PAL/NT switch output
23	NT	O	PAL/NT switch output	49	VS2	-	Non connect
24	HPIN	-	Non connect	50	DMUT1	O	Surround mute output
25	AVCI	I	AV Compulink input				
26	AVCO	O	AV Compulink output				


## 3.Pin Function (2/2)

Pin No.	Symbol	I/O	Function
51	DMUT2	O	Mute output for Center,Subwoofer
52	PBD2	O	DA Power down output for Center,Sub woofer
53	PBD1	O	DA Power down output for Surround
54	DEMP2	O	De-emphasis output for Center,Sub woofer
55	DEMP1	O	De-emphasis output for surround
56	DENA	O	Data enable signal output
57	MA	O	DA Set output A
58	MB	O	DA Set output B
59	FS2	O	FS Switch output
60	M1.M3	O	DA Set output
61	MD	O	DA Set output D
62	VCC	-	Power supply +5V
63	MC	O	DA Set output C
64	VSS	-	Connect to GND
65	GAIN2	-	Non connect
66	GAIN1	-	Non connect
67	HPMUT	O	Headphone mute output
68	LMUTE	O	Sub woofer mute output
69	CMUTE	O	Center mute output
70	SMUTE	O	Surround mute output
71	MUTE	O	Front mute output
72	VMANUIND	O	VFPMANUAL indicator control
73	VSHARPIND	O	VFP SHARP indicator control
74	ENTERIND	O	ENTER indicator control
75	CS	O	Chip select for FL driver
76	POR	O	Chip select for FL driver
77	STANDBYIND	O	STANDBY indicator control
78	RESUMEIND	O	RESUME indicator control
79	VSOFTIND	O	VFP SOFT indicator control
80	P10	-	Non connect
81	KEYO5	O	Key matrix output 5
82	KEYO4	O	Key matrix output 4
83	KEYO3	O	Key matrix output 3
84	KEYO2	O	Key matrix output 2
85	KEYO1	O	Key matrix output 1
86	KEYO0	O	Key matrix output 0
87	KEYI5	I	Key matrix input 5
88	KEYI4	I	Key matrix input 4
89	KEYI3	I	Key matrix input 3
90	KEYI2	I	Key matrix input 2
91	KEYI1	I	Key matrix input 1
92	KEYI0	I	Key matrix input 0
93	MCHIND	O	5.1CH indicator control
94	DAUDIOIND	O	LPCM indicator control
95	SHUT1	I	Shuttle input 1
96	AVSS	-	Connect to GND
97	SHUT0	-	Non connect
98	VREF	I	Internal AD reference input
99	AVCC	-	Power supply +5V
100	P97	-	Non connect

■ M56759BFP-X(IC271):4CH DRIVER

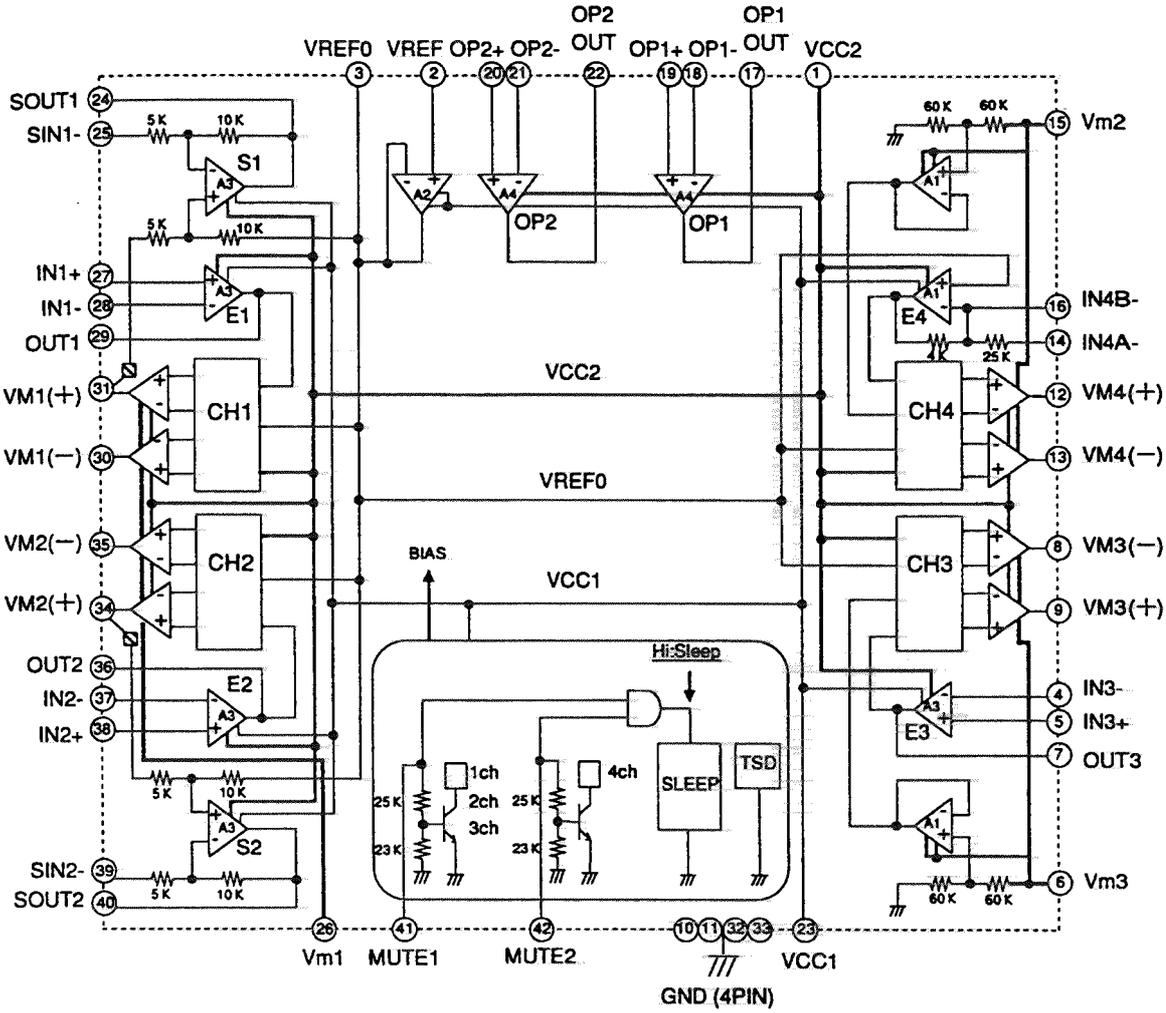


■ M56755AFP-X(IC251):SPINDLE DRIVER

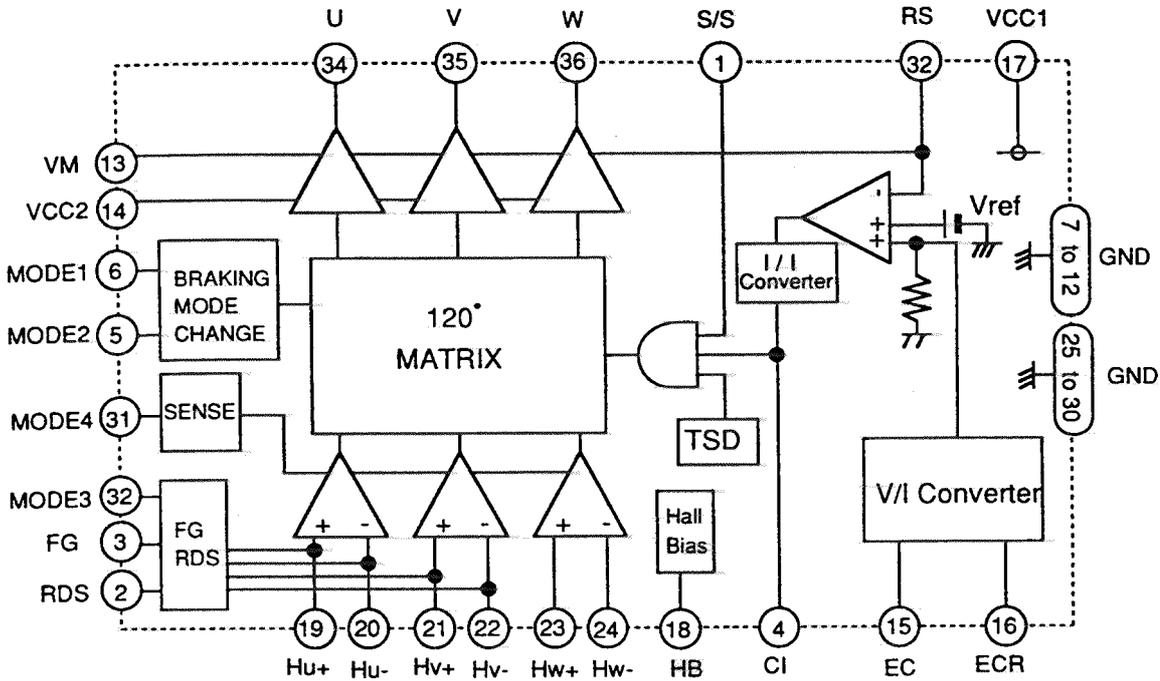

■ M66004SP(IC831):FL DRIVER

1. Block Diagram

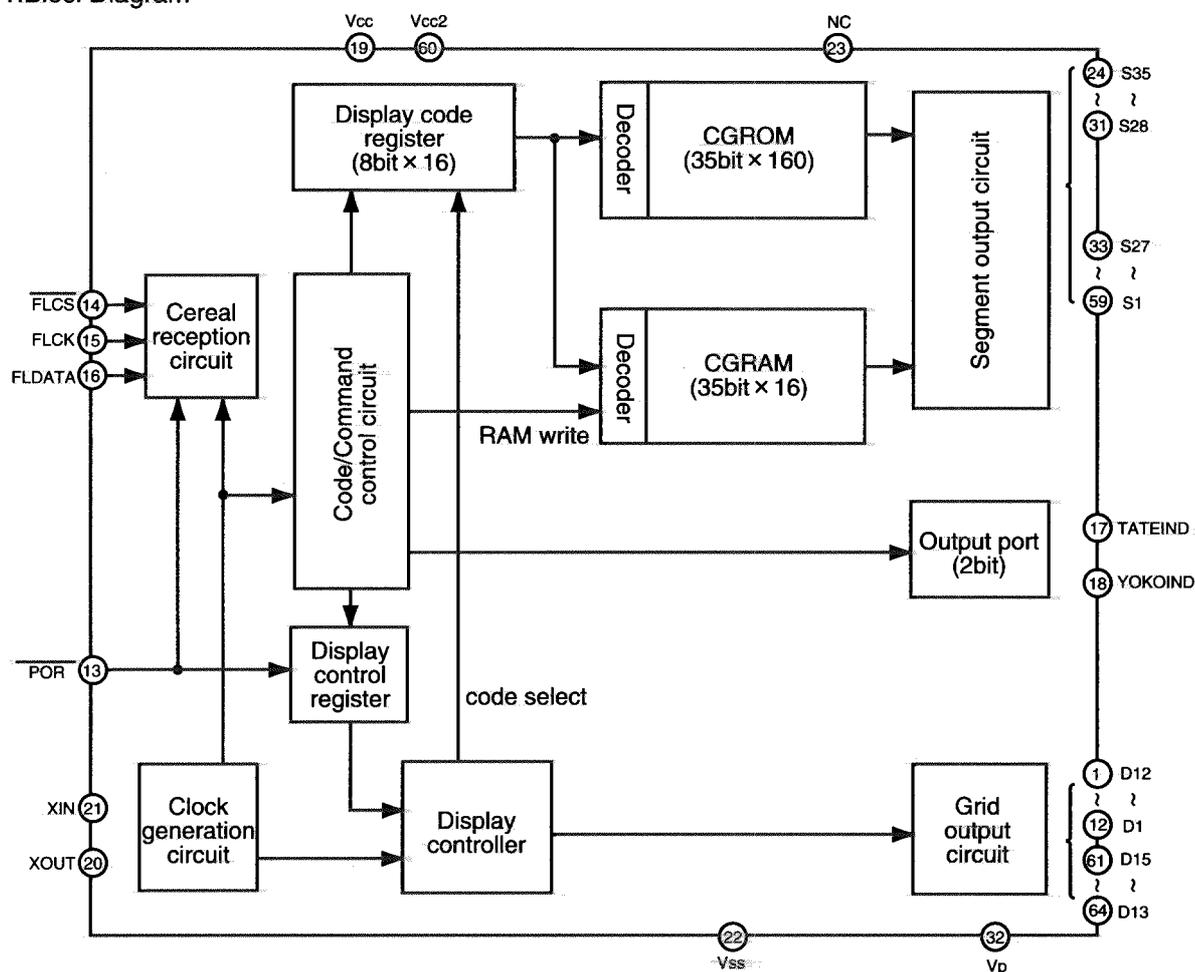


2. Pin function


Pin.No.	Symbol	I/O	Function
1	D11		Non connect
2~12	D10~D0	O	FL grid control signal output.
13	POR	I	FL Driver chip select.
14	FLCS	I	Chip select signal input.
15	FLCK	I	Shift clock signal input.
16	FLDATA	I	Serial data input.
17	TATEIND	O	Indicator control signal output.
18	YOKOIND	O	Indicator control signal output.
19	VCC1	-	Power supply for internal logic.
20	XOUT	O	Clock signal output.
21	XIN	I	Clock signal input.
22	VSS	-	Connect to GND.
23	S35	-	Non connect.
24~31	S34~S27	O	FL Segment control signal output.
32	VP	-	Power supply.
33~59	S26~S0	O	FL Segment control signal output.
60	VCC2	-	Power supply for grid output and segment output.
61~64	D15~D12	O	FL grid control signal output.

■MC44724AVFU(IC554):VIDEO ENCODER

1.Terminal Layout

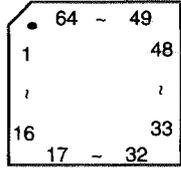

2.Block Diagrams

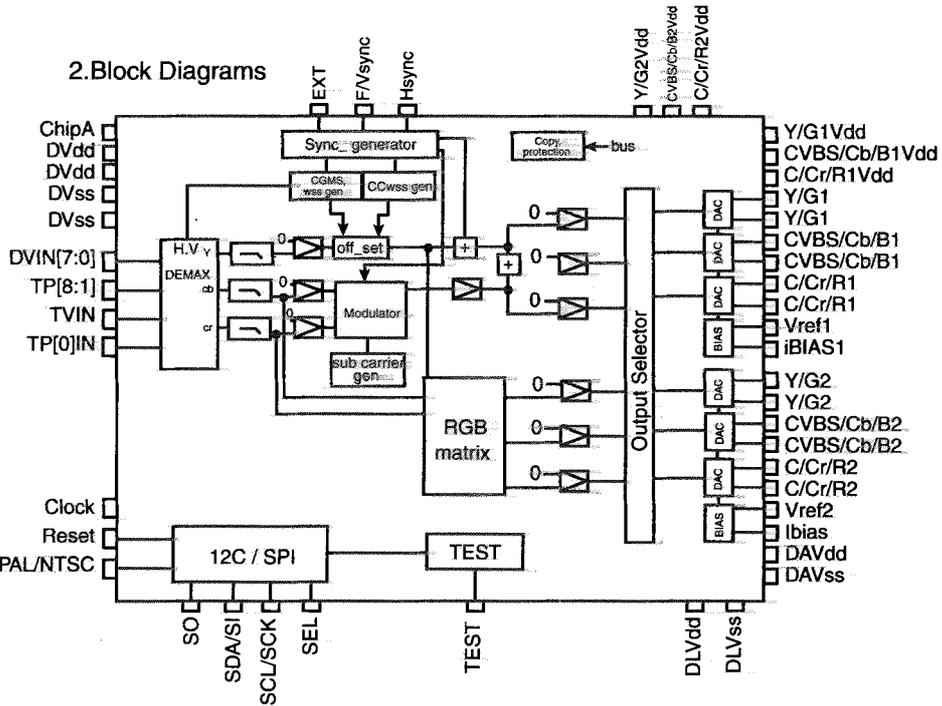

3.Pin function


No.	Symbol	I/O	Function	No.	Symbol	I/O	Function
1	CVBS/Cb/B1	O	Analog composite drive signal (+)	33	SO	-	Non connect
2	CVBS/Cb/B1	O	Analog composite drive signal (-)	34	SDA/SI	I	SPI Mode : Serial data input
3	CVBS/Cb/B1Vdd	-	Power supply for CVBS/Cb/B DAC1	35	SCL/SCK	I	Serial clock input
4	Y/G1	O	Analog brightness signal/G drive signal (+)	36	SEL	I	Power supply for serial data, chip select, digital
5	Y/G1	O	Analog brightness signal/G drive signal (-)	37	DVdd	--	Power supply for digital circuit
6	Y/G1Vdd	-	Power supply for Y/G DAC	38	DVss	--	Digital ground
7	C/Cr/R1	O	Analog chroma signal (+)	39	DVIN7	I/O	Y data input / test data I/O
8	C/Cr/R1	O	Analog chroma signal (-)	40	DVIN6	I/O	Y data input / test data I/O
9	C/Cr/R1Vdd	-	Power supply for C/Cr/RDAC	41	DVIN5	I/O	Y data input / test data I/O
10	DAVss	-	Connect to ground for DAC	42	DVIN4	I/O	Y data input / test data I/O
11	TBIAS1	O	Standard BIAS for DAC1	43	DVIN3	I/O	Y data input / test data I/O
12	Vref1	-	Standard voltage for DAC1	44	DVIN2	I/O	Y data input / test data I/O
13	DAVdd	-	Power supply for DAC	45	DVIN1	I/O	Y data input / test data I/O
14	Vref2	-	Standard voltage for DAC2	46	DVIN0	I/O	Y data input / test data I/O
15	TBIAS2	O	Standard BIAS for DAC2	47	TVIN	I	VIDEO mote on Reset(0:normal, 1:mute)
16	NC	-	Non connect	48	EXT	I/O	Frame output / VBI information input
17	CVBS/Cb/B2	O	Analog composite drive signal (+)	49	F/Vsync	I/O	Frame / Vertical, synchronous I/O
18	CVBS/Cb/B2	O	Analog composite drive signal (-)	50	Chsync	I/O	The horizontal, synchronous I/O
19	CVBS/Cb/B2Vdd	-	Power supply for CVBS/Cb/B DAC2	51	DATST	I	Data input
20	Y/G2	O	Analog brightness signal/G drive signal (+)	52	TP-8	I/O	Multiplex data input
21	Y/G2	O	Analog brightness signal/G drive signal (-)	53	TP7	I/O	Multiplex data input
22	Y/GVdd	-	Power supply for Y/G DAC	54	TP6	I/O	Multiplex data input
23	C/Cr/R2	O	Analog chroma signal (+)	55	TP5	I/O	Multiplex data input
24	C/Cr/R2	O	Analog chroma signal (-)	56	DVss	-	Ground for digital circuit
25	C/Cr/R2Vdd	-	Power supply for C/Cr/RDAC2	57	DVdd	-	Power supply for digital circuit
26	ChipA	-	Chip address selection	58	TP4	I/O	Data input / Test data I/O
27	TEST	I	Connect to test pin	59	TP3	I/O	Data input / Test data I/O
28	DVdd	-	Digital ground	60	TP2	I/O	Data input / Test data I/O
29	CLOCK	I	Clock signal input (27MHz)	61	TP1	I/O	Data input / Test data I/O
30	DVss	-	Power supply for digital circuit	62	TP0	I/O	Data input / Test data I/O
31	Reset	I	Reset signal input. L:ON	63	DLVdd	-	Power supply for D/A converter
32	PAL/NTSC	I	Selection NTSC/PAL NTSC:L PAL:H	64	DLVss	-	Ground for D/A converter

### ■ MN102LP25G-01(IC401):UNIT CPU


Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	WAIT	I	Micon wait signal input	51	SWCLOSE	I	Detection switch of tray close
2	RE	O	Read enable	52	SWOPEN	I	Detection switch of tray open
3	MUTE	O	Driver mute	53	ADSCEN	O	Serial enable signal for ADSC
4	WEM	O	Write enable	54	VDD	-	Non connect
5	CS0	O	Non connect	55	EFPEN	O	Serial enable signal for FEP
6	CS1	O	Chip select for ODC	56	SLEEP	O	Standby signal for FEP
7	CS2	O	Chip select for ZIVA	57	BUSY	I	Communication busy
8	CS3	O	Chip select for outer ROM	58	REQ	O	Communication Request
9	TCLOSE	O	Tray close signal output	59	WEROM	O	Non connect
10	TOPEN	O	Tray open signal output	60	WPROM	O	Non connect
11	LSIRST	I	LSI reset	61	VSS	-	Power supply
12	WORD	O	Bus selection input	62	EECS	O	Chip select signal for EEPROM
13	A0	O	Address bus 0 for CPU	63	EECK	O	Clock signal for EEPROM
14	A1	O	Address bus 1 for CPU	64	EEDI	I	Input data for EEPROM
15	A2	O	Address bus 2 for CPU	65	EEDO	O	Output data for EEPROM
16	A3	O	Address bus 3 for CPU	66	VDD	-	Power supply
17	VDD	-	Power supply	67	SCLK0	I	Communication clock
18	SYSCLK	O	System clock signal output	68	S2UDT	I	Communication input data
19	VSS	-	Power supply	69	S2SDT	O	Communication output data
20	XI	-	Non connect	70	CPSCK	O	Clock for ADSC serial
21	XO	-	Non connect	71	SDIN	I	ADSC serial data input
22	VDD	-	Power supply	72	SDOUT	O	ADSC serial data output
23	OSCI	I	Clock signal input(13.5MHz)	73	-	-	Non connect
24	OSCO	-	Non connect	74	-	-	Non connect
25	MODE	I	CPU Mode selection input	75	NMI	-	Non connect
26	A4	O	Address bus 4 for CPU	76	ADSCIRQ	I	Interrupt input of ADSC
27	A5	O	Address bus 5 for CPU	77	ODCIRQ	I	Interrupt input of ODC
28	A6	O	Address bus 6 for CPU	78	DECIRQ	I	Interrupt input of ZIVA
29	A7	O	Address bus 7 for CPU	79	WAKEUP	O	Non connect
30	A8	O	Address bus 8 for CPU	80	ODCIRQ2	I	Non connect
31	A9	O	Address bus 9 for CPU	81	ADSEP	I	Address data selection input
32	A10	O	Address bus 10 for CPU	82	RST	I	Reset input
33	A11	O	Address bus 11 for CPU	83	VDD	-	Power supply
34	VDD	-	Power supply	84	TEST1	I	Test signal 1 input
35	A12	O	Address bus 12 for CPU	85	TEST2	I	Test signal 2 input
36	A13	O	Address bus 13 for CPU	86	TEST3	I	Test signal 3 input
37	A14	O	Address bus 14 for CPU	87	TEST4	I	Test signal 4 input
38	A15	O	Address bus 15 for CPU	88	TEST5	I	Test signal 5 input
39	A16	O	Address bus 16 for CPU	89	TEST6	I	Test signal 6 input
40	A17	O	Address bus 17 for CPU	90	TEST7	I	Test signal 7 input
41	A18	O	Address bus 18 for CPU	91	TEST8	I	Test signal 8 input
42	A19	O	Address bus 19 for CPU	92	VSS	-	Power supply
43	VSS	-	Power supply	93	D0	I/O	Data bus 0 of CPU
44	A20	O	Address bus 20 for CPU	94	D1	I/O	Data bus 1 of CPU
45	-	-	Non connect	95	D2	I/O	Data bus 2 of CPU
46	STOP	-	Non connect	96	D3	I/O	Data bus 3 of CPU
47	ADPD	-	Non connect	97	D4	I/O	Data bus 4 of CPU
48	-	-	Non connect	98	D5	I/O	Data bus 5 of CPU
49	-	-	Non connect	99	D6	I/O	Data bus 6 of CPU
50	TRVSW	I	Detection switch of traverse inside	100	D7	I/O	Data bus 7 of CPU

■ MN103005AN2G(IC301):OPTICAL DISC CONTROLLER

1.Terminal Layout

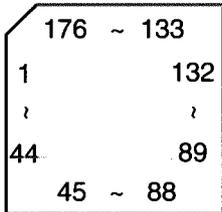

2.Block Diagrams

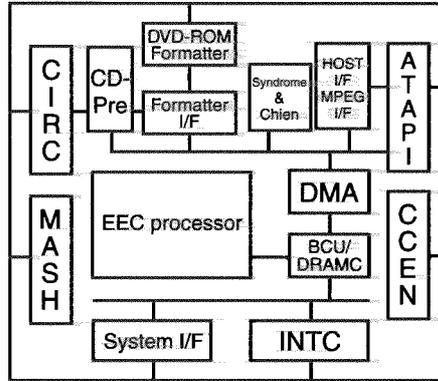

3.Pin Function (1/2)

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	HDD8	I/O	ATAPI data I/O	39	DRAMD2	I/O	DRAM data I/O
2	HDD7	I/O	ATAPI data I/O	40	DRAMD14	I/O	DRAM data I/O
3	5VDD	-	Connect to GND	41	DRAMD1	I/O	DRAM data I/O
4	RESET	I	Reset signal input for ATAPI	42	DRAMD15	I/O	DRAM data I/O
5	MASTER	I	Master/Slave Selection for ATAPI	43	DRAMD0	I/O	DRAM data I/O
6	VSS	-	Connect to GND	44	VDD	-	Power supply
7	DRAMA4	O	DRAM address data output	45	PVDD	-	Power supply
8	DRAMA3	O	DRAM address data output	46	PVSS	-	Connect to GND
9	DRAMA5	O	DRAM address data output	47	RST	I	System reset signal input
10	DRAMA2	O	DRAM address data output	48	MMOD	I	Test mode switching(connect VSS)
11	DRAMA6	O	DRAM address data output	49	OSCO1	-	Non connect
12	DRAMA1	O	DRAM address data output	50	OSCI1	I	Oscillation signal input (27MHz)
13	VDD	-	Power supply	51	VSS	-	Connect to GND
14	DRAMA7	O	DRAM address data output	52	MONI0	O	Internal signal monitor
15	DRAMA0	O	DRAM address data output	53	MONI1	O	Internal signal monitor
16	DRAMA8	O	DRAM address data output	54	MONI2	O	Internal signal monitor
17	DRAMA10	-	Non connect	55	MONI3	O	Internal signal monitor
18	DRAMA9	-	Non connect	56	SDATA	I/O	Debugging serial data (270ohm pull up)
19	DRAMA11	-	Non connect	57	SCLOCK	I/O	Debugging serial clock (270ohm pull up)
20	VSS	-	Connect to GND	58	VDD	-	Power supply
21	DRAMOE	O	DRAM data output	59	TEHLD	-	Non connect
22	RAS	O	DRAM RAS signal	60	DTRD	-	Non connect
23	CAS1	O	DRAM CAS signal	61	IDCT	-	Non connect
24	DRAMWE	O	DRAM memory write	62	VSS	-	Connect to GND
25	CAS0	O	DRAM CAS signal	63	RDCKP	I	PLL synchronous clock differential motion signal
26	DRAMD8	I/O	DRAM data I/O	64	RDCKN	I	PLL synchronous clock differential motion signal
27	DRAMD7	I/O	DRAM data I/O	65	RDTP	I	PLL synchronous RF data differential motion signal
28	VDD	-	Power supply	66	RDTN	I	PLL synchronous RF data differential motion signal
29	DRAMD9	I/O	DRAM data I/O	67	DSLO	I	Data slice
30	DRAMD6	I/O	DRAM data I/O	68	VDD	-	Power supply
31	DRAMD10	I/O	DRAM data I/O	69	PLLOK	O	Flame mark detection
32	DRAMD5	I/O	DRAM data I/O	70	IDHOLD	-	Non connect
33	DRAMD11	I/O	DRAM data I/O	71	JMPINH	-	Non connect
34	DRAMD4	I/O	DRAM data I/O	72	LG	-	Non connect
35	DRAMD12	I/O	DRAM data I/O	73	TRON	I	Tracking ON
36	VSS	-	Connect to GND	74	SPDT	O	CIRC spindle error serial data
37	DRAMD3	I/O	DRAM data I/O	75	SPCK	I	CIRC spindle error serial clock
38	DRAMD13	I/O	DRAM data I/O	76	SPEN	I/O	CIRC spindle error serial enable

## 3.Pin Function (2/2)


Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
77	CPUDR17	I	System control address input	127	BDO	I	RF drop out
78	CPUDR16	I	System control address input	128	WAITDOC	O	System control wait control
79	CPUDR15	I	System control address input	129	MRST	-	Non connect
80	VSS	-	Connect to GND	130	SPARI	I	FG input
81	AVDD	-	Power supply	131	TX	O	Digital audio
82	OUTLN	-	Non connect	132	CLKOUT2	O	Clock signal output (13.5/13.9344MHz)
83	OUTLP	-	Non connect	133	VSS	-	Connect to GND
84	OUTRN	-	Non connect	134	CLKOUT1	O	Clock signal output (13.5MHz)
85	OUTRP	-	Non connect	135	5VDD	-	Power supply VDD+5V
86	VCOF	I	VCO unit control voltage input	136	EJECT	I	Eject detection signal
87	TREF	I	VCO reference current input	137	TRYCL	I	Tray close detection signal
88	AVSS	-	Connect to GND	138	DASP	I/O	Non connect
89	VDD	-	Power supply	139	CS3FX	I	Host chip selection for ATAPI
90	OSX12	I	Oscillation terminal(33.8688MHz)	140	CS1FX	I	Host chip selection for ATAPI
91	OSCO2	O	Oscillation terminal(33.8688MHz)	141	VDD	-	Power supply
92	CPUADR14	I	System control address input	142	DA2	I	Host address for ATAPI
93	CPUADR13	I	System control address input	143	DA0	-	Non connect
94	CPUADR12	I	System control address input	144	PDIAG	-	Non connect
95	VSS	-	Connect to GND	145	VSS	-	Connect to GND
96	CPUADR11	I	System control address input	146	DA1	-	Non connect
97	CPUADR10	I	System control address input	147	IOXS16	-	Non connect
98	CPUADR9	I	System control address input	148	INTRO	O	Host interrupt output for ATAPI
99	CPUADR8	I	System control address input	149	DMACK	I	Host DMA response for ATAPI
100	CPUADR7	I	System control address input	150	5VDD	-	Power supply
101	CPUADR6	I	System control address input	151	IORDY	-	Non connect
102	CPUADR5	I	System control address input	152	IORD	I	Host read for ATAPI
103	CPUADR4	I	System control address input	153	IOWR	I	Host write for ATAPI
104	VDD	-	Power supply	154	VSS	-	Connect to GND
105	CPUADR3	I	System control address input	155	DMARQ	-	Non connect
106	CPUADR2	I	System control address input	156	HDD15	I/O	ATAPI data I/O
107	CPUADR1	I	System control address input	157	HDD0	I/O	ATAPI data I/O
108	CPUADR0	I	System control address input	158	VSS	-	Connect to GND
109	CS	I	System control chip select	159	HDD14	I/O	ATAPI data I/O
110	WR	I	System control write	160	5VDD	-	Power supply
111	RD	I	System control read	161	HDD1	I/O	ATAPI data I/O
112	CPUDT7	I/O	System control data I/O	162	HDD13	I/O	ATAPI data I/O
113	CPUDT6	I/O	System control data I/O	163	HDD2	I/O	ATAPI data I/O
114	VSS	-	Connect to GND	164	VSS	-	Connect to GND
115	CPUDT5	I/O	System control data I/O	165	HDD12	I/O	ATAPI data I/O
116	CPUDT4	I/O	System control data I/O	166	VDD	-	Power supply
117	CPUDT3	I/O	System control data I/O	167	HDD3	I/O	ATAPI data I/O
118	CPUDT2	I/O	System control data I/O	168	HDD11	I/O	ATAPI data I/O
119	CPUDT1	I/O	System control data I/O	169	VSS	-	Connect to GND
120	VDD	-	Power supply	170	HDD4	I/O	ATAPI data I/O
121	CPUDT0	I/O	System control data I/O	171	HDD10	I/O	ATAPI data I/O
122	INT0	O	System control interrupt 0	172	HDD5	I/O	ATAPI data I/O
123	INT1	O	System control interrupt 1	173	5VDD	-	Power supply
124	DASPST	I/O	DASP signal initializing	174	HDD9	I/O	ATAPI data I/O
125	CPDET2	I	Outer side capa detection	175	VSS	-	Connect to GND
126	CPDET1	I	Inner side capa detection	176	HDD6	I/O	ATAPI data I/O

■ MN35503 (IC702) : D/A CONVERTER

1. Terminal Layout

MA	1	28	RDO
DIN	2	27	MD
LRCK	3	26	MC
BCK	4	25	M3
MB	5	24	DVDD1
DVDD2	6	23	XIN
CKO	7	22	XOUT
DVSS2	8	21	DVSS1
M1	9	20	M2
OUT1C	10	19	OUT2C
NC	11	18	NC
AVDD1	12	17	AVDD2
OUT1D	13	16	OUT2D
AVSS1	14	15	AVSS2

2. Block Diagrams

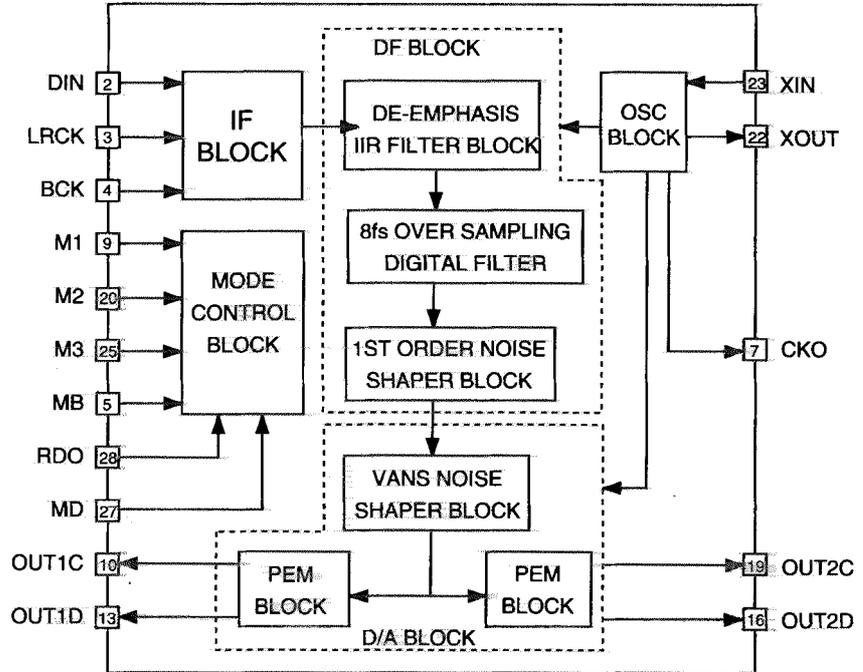

3. Pin Function

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	MA	-	Connected to ground	15	AVSS2	-	Analog ground 2
2	DIN	I	Data input	16	OUT2D	O	2D PEM output
3	LRCK	I	L/R clock input	17	AVDD2	-	Analog power supply 2
4	BCK	I	Bit clock input	18	NC	-	Non connection
5	MB	I	De-emphasis ON signal	19	OUT2C	O	2C PEM output
6	DVDD2	-	Digital power supply2	20	M2	-	Connected to ground
7	CKO	I	Clock output	21	DVSS1	-	Digital ground pin 1
8	DVSS2	-	Digital ground 2	22	XOUT	O	Crystal oscillator output
9	M1	-	Connected to ground	23	XIN	I	Crystal oscillator input
10	OUT1C	O	1C PEM output	24	DVDD1	-	Digital power supply 1
11	NC	-	Non connect	25	M3	-	Connected to ground
12	AVDD1	-	Analog power supply 1	26	MC	-	Connected to ground
13	OUT1D	O	1d PEM output	27	MD	I	Reset signal/Digital Att.control signal input
14	AVSS1	-	Analog ground 1	28	RDO	-	Not used

**■ MN67702VRZC3(IC201):Servo Controller**

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	PWM1B	O	Non connect	51	VDD	-	Power supply for digital circuit
2	VSS	-	Ground terminal for digital circuit	52	DSL0	I	Slice data input
3	TEST3	-	Non connect	53	VCK8	I	Input of PLL division CLK into eight
4	NC	-	Non connect	54	FUPDN	O	UP/DOWN Frequency
5	VDD	-	Power supply for digital circuit	55	VSS	-	Ground terminal for digital circuit
6	TEST4	-	Non connect	56	AVSS1	-	Ground terminal for analog circuit
7	TEST5	-	Non connect	57	VREFLA	I	AD Standard voltage(1.2V±0.1V)
8	TEST2	-	Non connect	58	VREFMA	I	AD Standard voltage(2.2V±0.1V)
9	MINTEST	-	Connect to GND	59	VREFHA	I	AD Standard voltage(3.2V±0.1V)
10	TEST6	-	Non connect	60	AVDD1	-	Power supply for analog circuit
11	NC	-	Non connect	61	AD10	-	Connect to capacitor (10pF)
12	LDONA	O	Laser drive control A (on/off)	62	VREF	I	Reference voltage input (FEP)
13	LDONB	O	Laser drive control B (on/off)	63	TKDOF	I	Tracking drive voltage input
14	TEST7	-	Non connect	64	VREFHD	I	Analog standard voltage(3.2V±0.1V)
15	TEST1	-	Non connect	65	VREFLD	I	Analog standard voltage(1.2V±0.1V)
16	TEST0	-	Non connect	66	VREF	I	Analog standard voltage(2.2V±0.1V)
17	/RESETIN	I	Reset signal input	67	AS1	I	AS1 signal (FEP)
18	VSS	-	Ground terminal for digital circuit	68	FE	I	Focus error signal (FEP)
19	CPUJRQ	O	Interrupt request to system control	69	REFNV	I	RF envelope signal (FEP)
20	CPSEN	I	Serial I/F chip selection of system control	70	TE	I	Tracking error signal (FEP)
21	CPSCK	I	Serial I/F clock input of system control	71	AS2	I	AS2 signal input (FEP)
22	CPSDTIN	I	Serial I/F data input of system control	72	TG	I	TG signal input (FEP)
23	CPSDTOT	O	Serial I/F data output of system control	73	AD7	-	Non connect
24	SPOT	I	Serial I/F data input of spindle error	74	AD8	-	Non connect
25	SPCK	O	Serial I/F clock output of spindle error	75	JITOUT	I	Jitter signal input (FEP)
26	NC	-	Non connect	76	AVDD2	-	Power supply for analog circuit
27	TRAY-OUT	I	Taking out detection of tray	77	AVSS2	-	Ground terminal for analog circuit
28	SPEN	O	Serial I/F enable signal	78	FBAL	O	Focus balance adjustment output
29	NC	-	Non connect	79	DOF1	O	Data slice offset adjustment for CD
30	NC	-	Non connect	80	BOOST	O	Boost amount (equalizer)
31	HAGUP2	O	Head amp.gain switch H:gain up	81	FC	O	Cut off frequency (equalizer)
32	VDD	-	Power supply for digital circuit	82	DOFO	O	Data slice offset adjustment for CD
33	TESTA	-	Connect to GND	83	TRSDRV	O	Traverse drive output
34	HFCLK	I	System clock input (13.5MHz)	84	TRDRV	O	Tracking drive output
35	TESTD	-	Connect to GND	85	FCDRV	O	Focus drive output
36	PULIN	O	DSL and PLL high boost signal	86	X4I	I	Clock input of four times
37	PLLOK	I	PLLOK signal input (ODC)	87	VSS	O	Ground terminal for digital circuit
38	VSS	-	Ground terminal for digital circuit	88	X4O	O	Clock output of four times
39	/TRON	O	Tracking ON (ODC/FEP)	89	FG	I	FG signal input
40	TRAYCN1	O	Tray control direction switch signal output	90	BDO	I	BDO signal input (FEP)
41	TRAYCN2	O	Tray control direction switch signal output	91	OFTR	I	Off track signal (FEP)
42	TRAY-IN	I	Tray insertion switch input	92	TKCRS1	I	Track loss signal (FEP)
43	MMPW	O	Off-track error detection pulse generation Mono Multi	93	NC	-	Non connect
44	GBAL	O	Tangential balance (FEP)	94	VDD	-	Power supply for digital circuit
45	OFTLVL	O	Off track slice level (FEP)	95	EC	O	Drive output of spindle motor
46	TBAL	O	Tracking balance (FEP)	96	TRVSW	I	Surroundings position detection in traverse
47	TRAY	O	Tray drive output	97	ST/SP	O	Spindle motor drive setting (start/stop)
48	BDOLVL	O	BDO slice level (FEP)	98	PWM0A	-	Non connect
49	NC	-	Non connect	99	PWM0B	-	Non connect
50	TSTSG	O	Calibration output	100	PWM1A	-	Non connect

■MX29F1610(IC553):8M ROM


1.Terminal Layout

WE	1	44	WP
A19	2	43	A20
A18	3	42	A9
A8	4	41	A10
A7	5	40	A11
A6	6	39	A12
A5	7	38	A13
A4	8	37	A14
A3	9	36	A15
A2	10	35	A16
A1	11	34	A17
CE	12	33	BYTE
VSS	13	32	VSS
OE	14	31	A0
D0	15	30	D7
D8	16	29	D14
D1	17	28	D6
D9	18	27	D13
D2	19	26	D5
D10	20	25	D12
D3	21	24	D4
D11	22	23	VCC

2.Pin function


Pin No.	I/O	Pin Function
1	I	Write enable
2~11	I	Address input
12	-	Connect to GND
13	-	Connect to GND
14	I	Output enable input
15~22	I/O	Data I/O
23	-	Power supply +5V
24~30	I/O	Data I/O
31	I	Address input
32	-	Connect to GND
33	-	Connect to GND
34~43	I	Address input
44	I	Write protect input

3.Block Diagrams

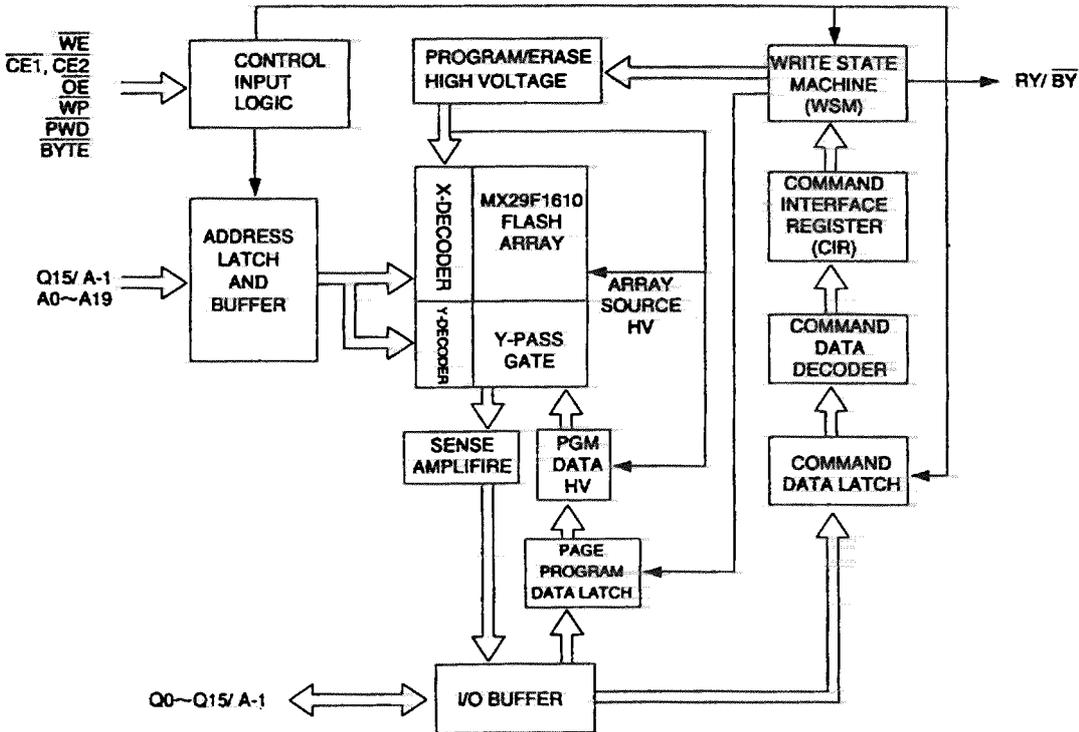

■STR-F6652(IC901)

1. Block Diagrams

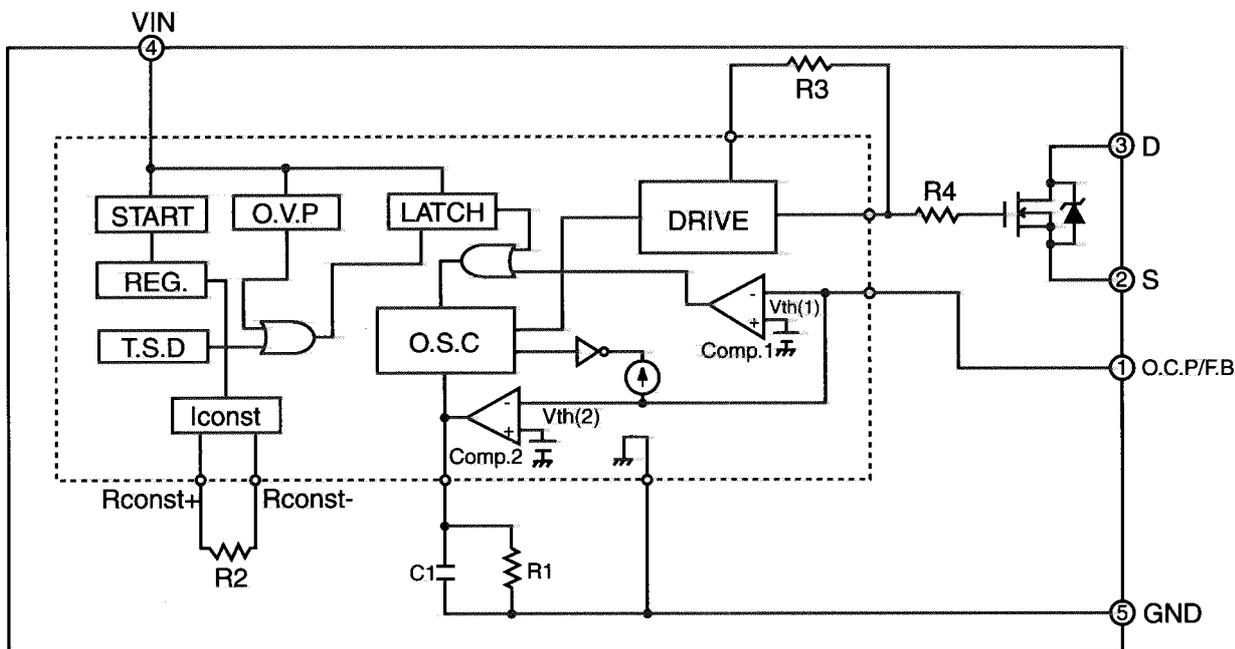

2. Pin Function


Pin No.	Symbol	I/O	Function
1	O.C.P/FB	I	Overcurrent/Feedback terminal Input of over current detection signal and constant voltage control signal
2	S	O	MOS FET source
3	D	O	MOS FET drain
4	VIN	-	Input of power supply for control circuit
5	GND	-	Connect to GND

3. Other Function

Symbol	Function
O.V.P	Built-in overvoltage protection circuit
T.S.D	Built-in terminal shutdown circuit

**TC74VHC74FS-X(IC509):FLIP FLOP/PRESET CLEAR**

1.Terminal Layout/Block diagrams

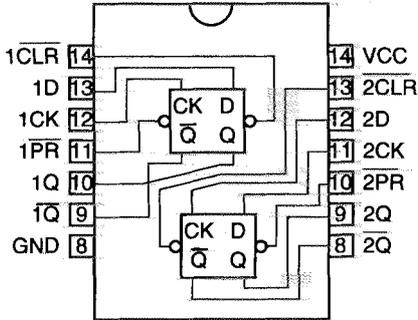


2.The truth value table

INPUTS				OUTPUTS		FUNCTION
CLR	PR	D	CK	Q	Q̄	
L	H	X	X	L	H	CLEAR
H	L	X	X	H	L	PRESET
L	L	X	X	H	H	—
H	H	L	↑	L	H	—
H	H	H	↑	H	L	—
H	H	X	↓	Qn	Q̄n	NO CHANGE

X : Don't care

**TC74VHC00FS-X(IC510)**

1.Block Diagrams

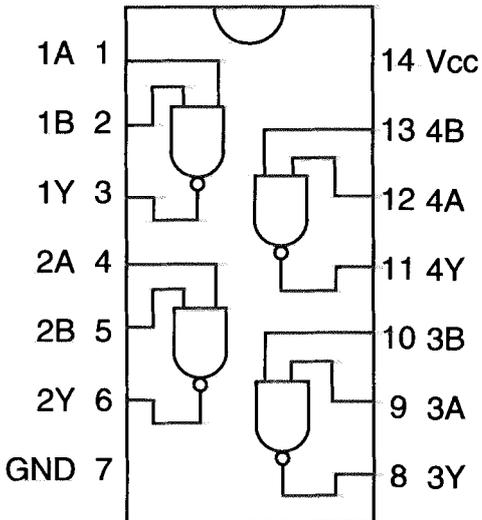


2.The truth value table


A	B	Y
L	L	H
L	H	H'
H	L	H
H	H	L

**ZIVA3-PA1(IC501):AV DECODER**

1. Terminal Layout

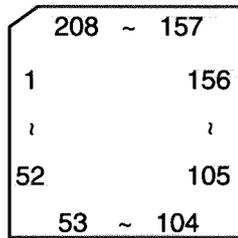

2. Block Diagrams

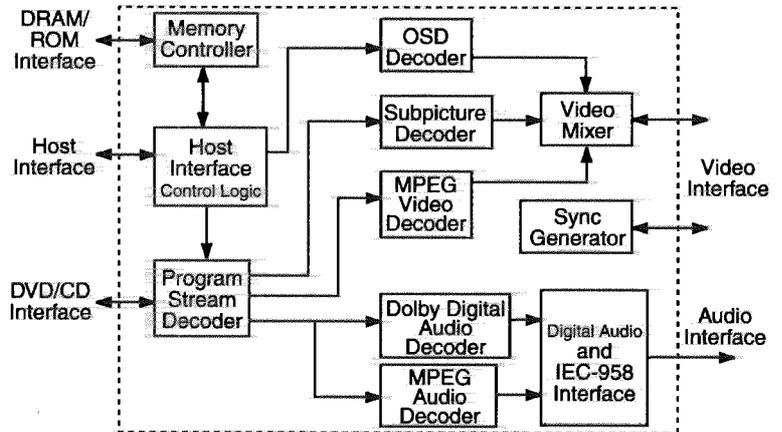

3. Pin Function (1/3)

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	TEST PINO	-	Test pin	26	ARAM-DATA5	I/O	Non used
2	HDATA0	I/O	System control data I/O (IC301)	27	E-VDD	-	Power supply
3	HDATA1	I/O	System control data I/O (IC301)	28	ARAM-DATA6	I/O	Non used
4	HDATA2	I/O	System control data I/O (IC301)	29	E-VSS	-	Connect to GND
5	E-VDD	-	Power supply	30	ARAM-DATA7	I/O	Non used
6	HDATA3	I/O	System control data I/O (IC301)	31	ARAM-ADDR0	-	Connect to TP550
7	E-VSS	-	Connect to GND	32	ARAM-ADDR1	-	Connect to TP551
8	HDATA4	I/O	System control data I/O (IC301)	33	ARAM-ADDR2	-	Connect to TP552
9	HDATA5	I/O	System control data I/O (IC301)	34	ARAM-ADDR3	-	Connect to TP553
10	HDATA6	I/O	System control data I/O (IC301)	35	ARAM-ADDR4	-	Connect to TP554
11	HDATA7	I/O	System control data I/O (IC301)	36	E-VDD	-	Power supply
12	I-VDD	-	Power supply	37	ARAM-ADDR5	-	Connect to TP555
13	RST	I	Reset signal input	38	E-VSS	-	Connect to GND
14	I-VSS	-	Connect to GND	39	ARAM-ADDR6	-	Connect to TP556
15	WAIT	I	Wait control for IC509	40	I-VDD	-	Power supply
16	INT	O	Host interrupt output for ATAPI	41	ARAM-ADDR7	-	Connect to TP557
17	E-VDD	-	Power supply	42	I-VSS	-	Connect to GND
18	ARAM-OE	-	Connect to TP540	43	ARAM-ADDR8	-	Connect to TP558
19	E-VSS	-	Connect to GND	44	ARAM-ADDR9	-	Connect to TP559
20	ARAM-WE	-	Connect to TP541	45	ARAM-ADDR10	-	Connect to TP560
21	ARAM-DATA0	I/O	Non used	46	ARAM-ADDR11	-	Connect to TP561
22	ARAM-DATA1	I/O	Non used	47	E-VDD	-	Power supply
23	ARAM-DATA2	I/O	Non used	48	ARAM-ADDR12	-	Connect to TP562
24	ARAM-DATA3	I/O	Non used	49	E-VSS	-	Connect to GND
25	ARAM-DATA4	I/O	Non used	50	ARAM-ADDR13	-	Connect to TP563

Pin Function (2/3)

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
51	ARAM-ADDR14	-	Connect to TP564	97	E-VSS	-	Connect to GND
52	TEST-PIN1	-	Test pin	98	M-ADDR11	O	Address output to IC508,504
53	M-DATA15	I/O	Data bus I/O to IC508,IC504	99	M-ADDR8	O	Address output to IC508,504
54	M-DATA0	I/O	Data bus I/O to IC508,IC504	100	M-ADDR10	O	Address output to IC508,504
55	E-VDD	-	Power supply	101	E-VDD	-	Power supply
56	M-DATA14	I/O	Data bus I/O to IC508,IC504	102	M-ADDR7	O	Address output to IC508,504
57	E-VSS	-	Connect to GND	103	E-VSS	-	Connect to GND
58	M-DATA1	I/O	Data bus I/O to IC508,IC504	104	M-ADDR0	O	Address output to IC508,504
59	M-DATA13	I/O	Data bus I/O to IC508,IC504	105	M-ADDR6	O	Address output to IC508,504
60	M-DATA2	I/O	Data bus I/O to IC508,IC504	106	M-ADDR1	O	Address output to IC508,504
61	E-VDD	-	Power supply	107	E-VDD	-	Power supply
62	M-DATA12	I/O	Data bus I/O to IC508,IC504	108	M-ADDR5	O	Address output to IC508,504
63	E-VSS	-	Connect to GND	109	E-VSS	-	Connect to GND
64	M-DATA3	I/O	Data bus I/O to IC508,IC504	110	M-ADDR2	O	Address output to IC508,504
65	I-VDD	-	Power supply	111	M-ADDR4	O	Address output to IC508,504
66	M-DATA11	I/O	Data bus I/O to IC508,IC504	112	M-ADDR3	O	Address output to IC508,504
67	I-VSS	-	Connect to GND	113	E-VDD	-	Power supply
68	M-DATA14	I/O	Data bus I/O to IC508,IC504	114	M-ADDR12	-	Connect to TP513
69	E-VDD	-	Power supply	115	E-VSS	-	Connect to GND
70	M-DATA10	I/O	Data bus I/O to IC508,IC504	116	M-ADDR13	-	Connect to TP514
71	E-VSS	-	Connect to GND	117	I-VDD	-	Power supply
72	M-DATA5	I/O	Data bus I/O to IC508,IC504	118	M-ADDR14	-	Connect to TP515
73	M-DATA9	I/O	Data bus I/O to IC508,IC504	119	I-VSS	-	Connect to GND
74	M-DATA6	I/O	Data bus I/O to IC508,IC504	120	M-ADDR15	-	Connect to TP516
75	E-VDD	-	Power supply	121	M-ADDR16	-	Connect to TP517
76	M-DATA8	I/O	Data bus I/O to IC508,IC504	122	M-ADDR17	-	Connect to TP518
77	E-VSS	-	Connect to GND	123	E-VDD	-	Power supply
78	M-DATA7	I/O	Data bus I/O to IC508,IC504	124	M-ADDR18	-	Connect to TP519
79	LDQM	O	Lower DQ mask enable	125	E-VSS	-	Connect to GND
80	UDQM	O	Upper DQ mask enable	126	M-ADDR19	-	Connect to TP520
81	E-VDD	-	Power supply	127	M-ADDR20	-	Connect to TP521
82	MWE	O	Write enable	128	ROM-CS	-	Connect to TP522
83	E-VSS	-	Connect to GND	129	TEST-PIN2	-	Test pin
84	SD-CLK	O	System clock signal output	130	OSD-CLK	-	Connect to TP523
85	SD-CAS	O	column address strobe	131	OSD-DATA0	-	Connect to TP525
86	SD-RAS	O	Row address strobe	132	OSD-DATA1	-	Connect to TP526
87	E-VDD	-	Power supply	133	TEST-PIN3	-	Test pin
88	SD-CS1	O	Chip select output to IC508	134	E-VDD	-	Power supply
89	E-VSS	-	Connect to GND	135	OSD-DATA2	-	Connect to TP528
90	SD-CS0	O	Chip select output to IC504	136	E-VSS	-	Connect to GND
91	I-VDD	-	Power supply	137	OSD-DATA3	-	Connect to TP529
92	EDO-CAS	-	Connect to TP511	138	TEST-PIN4	-	Test pin
93	I-VSS	-	Connect to GND	139	OSD-BLK1	-	Connect to TP531
94	EDO-RAS	-	Connect to TP512	140	OSDVC1	-	Connect to TP532
95	E-VDD	-	Power supply	141	TEST-PIN5	-	Test pin
96	M-ADDR9	O	Address output to IC508,504	142	VDATA0	O	DVD image signal output

## Pin Function (3/3)

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
143	VDATA1	O	DVD image signal output	176	A-VDD	-	Connect to TP507
144	I-VDD	-	Power supply	177	VCLK	I/O	Dot clock signal output (27MHz)
145	VDATA2	O	DVD image signal output	178	SYSCLK	-	Connect to TP505
146	I-VSS	-	Connect to GND	179	A-VSS	-	Connect to GND
147	TEST-PIN6	-	Test pin	180	DVD-DATA0	I	ATAPI data I/O to IC301
148	VDATA3	O	DVD image signal output	181	E-VDD	-	Power supply
149	E-VDD	-	Power supply	182	DVD-DATA1	I	ATAPI data I/O to IC301
150	VDATA4	O	DVD image signal output	183	E-VSS	-	Connect to GND
151	E-VSS	-	Connect to GND	184	DVD-DATA2	I	ATAPI data I/O to IC301
152	VDATA5	O	DVD image signal output	185	DVD-DATA3	I	ATAPI data I/O to IC301
153	TEST-PIN7	-	Test pin	186	DVD-DATA4	I	ATAPI data I/O to IC301
154	VDATA6	O	DVD image signal output	187	DVD-DATA5	I	ATAPI data I/O to IC301
155	VDATA7	O	DVD image signal output	188	DVD-DATA6	I	ATAPI data I/O to IC301
156	TEST-PIN8	-	Test pin	189	DVD-DATA7	I/O	ATAPI data I/O to IC301
157	HSYNC	I/O	Horizontal synchronous signal output	190	TEST-PIN10	-	Test pin
158	VS $\overline{\text{Y}}\text{NC}$	I/O	Vertical synchronous signal output	191	V-REQUEST	O	Master/Sleeve Selection for ATAPI
159	IEC-958	O	Digital audio data output	192	V-STROBE	I	Host address for ATAPI
160	E-VDD	-	Power supply	193	I-VDD	-	Power supply
161	DA-DATA0	O	Data output to IC702	194	A-REQUEST	-	Connect to TP539
162	E-VSS	-	Connect to GND	195	I-VSS	-	Connect to GND
163	DA-DATA1	O	Data output to IC702	196	V-DACK	I	Host interrupt input for ATAPI
164	DA-DATA2	O	Data output to IC702	197	E-VDD	-	Power supply
165	DA-DATA3	O	Data output to IC702	198	SECT-SYNC	I	Host write for ATAPI
166	DA-LRCK	O	L/R clock output to IC702	199	E-VSS	-	Connect to GND
167	DA-BCK	O	Bit clock output to IC702	200	ERROR	-	Connect to GND
168	I-VDD	-	Power supply	201	HOST-SEL	-	Connect to GND
169	DA-XCK	-	Non connect	202	HADDR0	I	System control address input
170	I-VSS	-	Connect to GND	203	HADDR1	I	System control address input
171	DAI-DATA	-	Connect to TP501	204	HADDR2	I	System control address input
172	DAI-LRCK	I	L/R clock input from IC702	205	DTACK-SEL	-	Connect to GND
173	DAI-BCK	I	Bit clock input from IC702	206	$\overline{\text{CS}}$	I	Chip select for ZIVA
174	TEST-PIN9	-	Test pin	207	$\overline{\text{R/W}}$	I	Write enable
175	CLK-SEL	-	Connect to GND	208	$\overline{\text{RD}}$	I	Read enable

■ UPD42280GU-30(IC552):2M RAM


1. Terminal Layout

DI0	1	28	DO0
DI1	2	27	DO1
DI2	3	26	DO2
DI3	4	25	DO3
WE	5	24	RE
GND	6	23	GND
TEST	7	22	OE
WRST	8	21	RRST
WCK	9	20	RCK
VDD	10	19	VDD
DI4	11	18	DO4
DI5	12	17	DO5
DI6	13	16	DO6
DI7	14	15	DO7

2. Pin Function


Pin No.	Symbol	I/O	Pin Function
1~4	DI0~3	I	Data input
5	WE	I	Write enable signal input
6	GND	-	Connect to GND
7	TEST	-	Connect to GND
8	WRST	I	Write reset signal input
9	WCK	I	Write clock signal input
10	VDD	-	Power supply +5V
11~14	DI4~7	I	Data input
15~18	DO7~4	O	Data output
19	VDD	-	Power supply +5V
20	RCK	I	Read clock signal input
21	RRST	I	Read reset signal input
22	OE	-	Connect to GND
23	GND	-	Connect to GND
24	RE	I	Read enable signal input
25~28	DO3~0	O	Data output

3. Block Diagrams

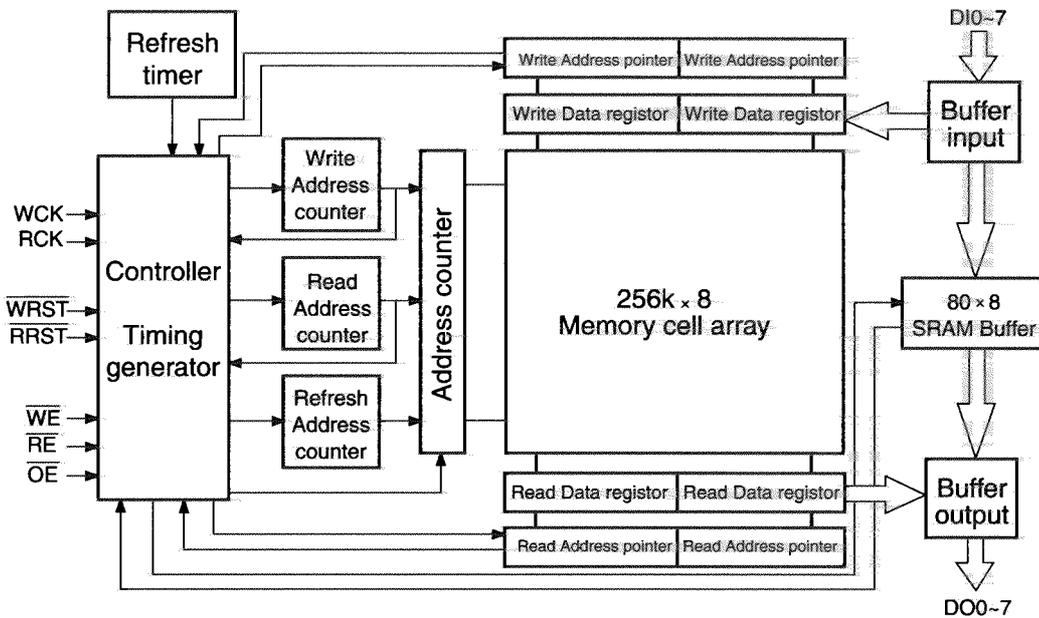

# Internal Connections for Display

## ■QLF0049-001(DI831):FL DISPLAY TUBE

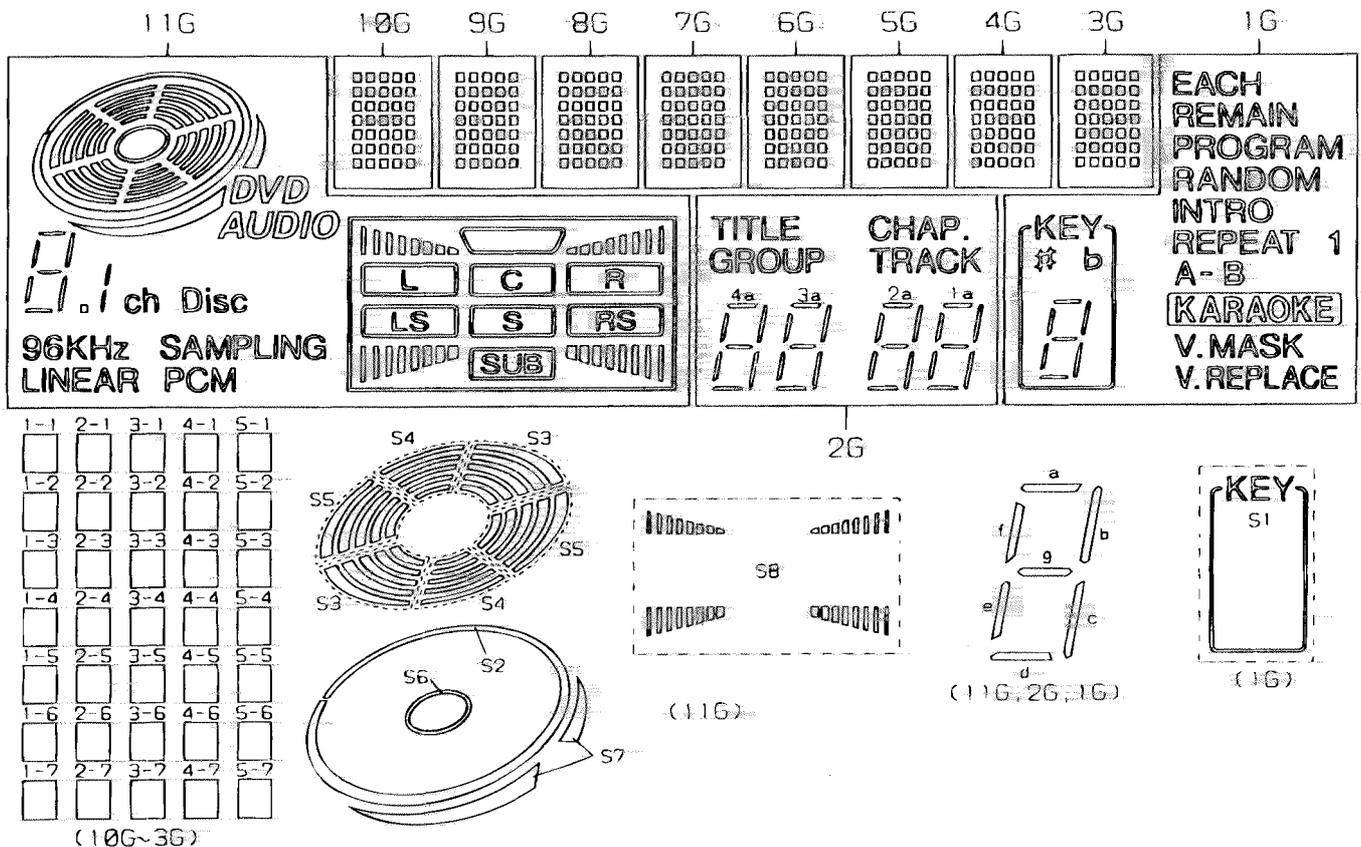

### PIN CONNECTION

PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35		
CONNECTION	F	F	F	N	N	N	N	N	N	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P

PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35		
CONNECTION	F	F	F	N	N	N	N	N	N	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P

- NOTE 1) F-, F+ ---- Filament                    5) 1G-11G ---- Grid  
 2) NP ---- No Pin                                6) IC ---- Internal connection  
 3) NC ---- No connection  
 4) DL ---- Datum Line

ANODE CONNECTION

	11G	10G~ 3G	2G	1G		11G	10G~ 3G	2G	1G
P1	S2	1-1	4d	-	P19	ch	4-4	2f	f
P2	S3	2-1	4e	-	P20	Disc	5-4	2b	b
P3	S4	3-1	4c	-	P21		1-5	2a	a
P4	S5	4-1	4g	-	P22		2-5	1d	V.MASK
P5	S6	5-1	4f	-	P23		3-5	1e	#
P6	S7	1-2	4b	-	P24		4-5	1c	b
P7	DVD	2-2	4a	-	P25		5-5	1g	SI
P8	AUDIO	3-2	3d	-	P26		1-6	1f	KARAOKE
P9	a	4-2	3e	-	P27		2-6	1b	A-
P10	b	5-2	3c	-	P28		3-6	1a	B
P11	f	1-3	3g	-	P29	S8	4-6	TRACK	1
P12	g	2-3	3f	-	P30		5-6	GROUP	REPEAT
P13	c	3-3	3b	-	P31	-	1-7	CHAP.	INTRO
P14	e	4-3	3a	V.REPLACE	P32	-	2-7	TITLE	RANDOM
P15	d	5-3	2d	d	P33	-	3-7	-	PROGRAM
P16		1-4	2e	e	P34	-	4-7	-	REMAIN
P17	96KHz SAMPLING	2-4	2c	c	P35	-	5-7	-	EACH
P18	LINER PCM	3-4	2g	g					

## Removal of main parts

### < Main body >

#### ■ Removing the Top Cover (See Fig.1)

1. Remove the four screws A attaching the top cover on both sides of the body.
2. Remove the two screws B attaching the top cover on the rear body.
3. Remove the top cover upward from the rear body while pulling lower parts of the both sides of the top cover.

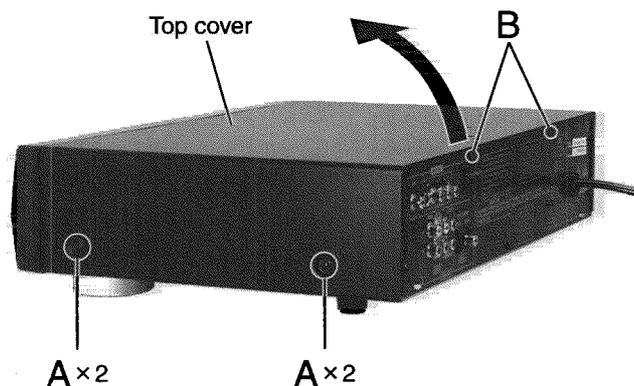


Fig.1

#### ■ Removing the Rear Panel and Power Cable (See Fig.2 and 3)

1. Remove the top cover.
2. Remove the thirteen screws C attaching the rear panel on.
3. Remove the cable stopper fixing the power cable by using a tool like a nipper.
4. Unsolder the power cable on the regulator board, then remove the power cable.

**CAUTION:** When soldering the power cable on the regulator board again, make sure to wind the power cable on the terminals several times

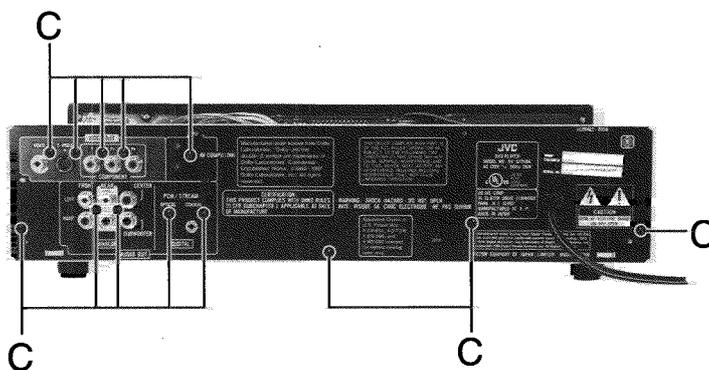


Fig. 2

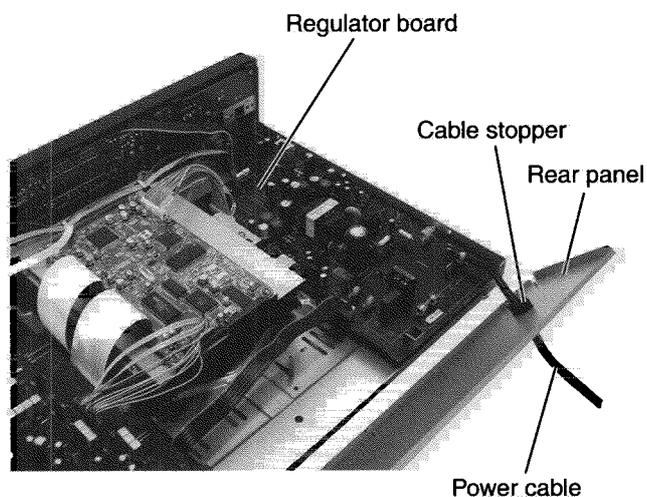


Fig. 3

■ Removing the Front Panel Assembly

(See Fig.4 to 6)

1. Remove the top cover.
2. Disconnect the harnesses connected to CN703 on the audio board and CN806, CN807 on the regulator board (Each harness is outgoing from the front panel assembly).
3. Disconnect connector CN851 on the headphone board.
4. Reverse the body, remove the four screws D fixing the front panel assembly.
5. Release joint A in the bottom side and two joint Bs on both sides of the body, then remove the front panel assembly toward the front.

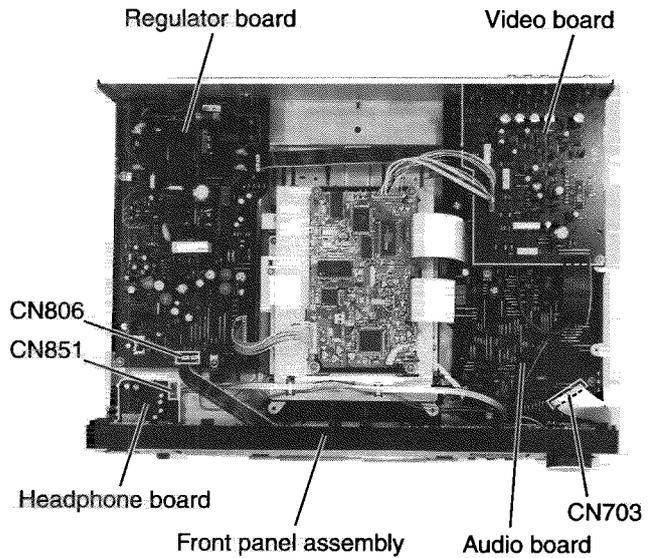


Fig.4

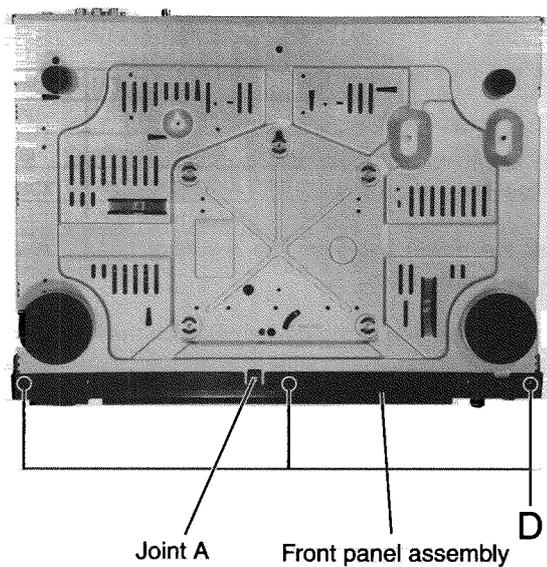


Fig.5

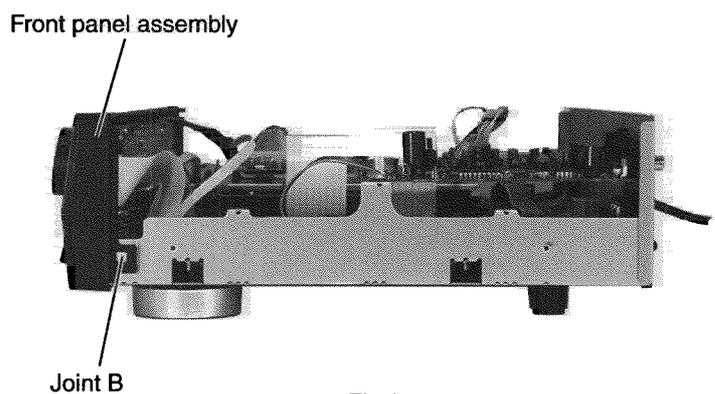


Fig.6

■ **Removing the DVD Mechanism (See Fig.7)**

1. Remove the top cover.
2. Remove the front panel assembly.
3. Disconnect the harnesses connected to connector CN501, CN502 and CN503 on the servo control board on top of the DVD mechanism.
4. Release the two harnesses from the harness stopper Cs on top of the DVD mechanism.
5. Remove the four screws E attaching the DVD mechanism.

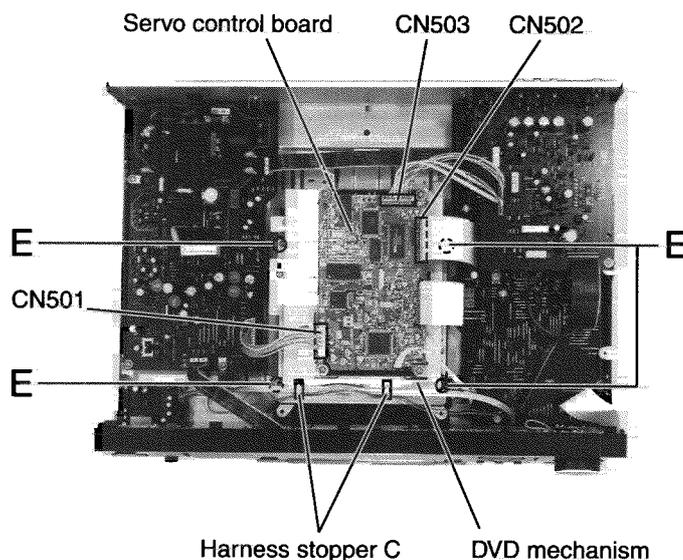


Fig.7

■ **Removing the Servo Control (See Fig.7 and 8)**

1. Remove the top cover.
2. Release the two harnesses from the harness stopper Cs on top of the DVD mechanism (See Fig.7).
3. Disconnect the harnesses connected to connector CN501, CN502, CN503, CN101 and CN102 on the servo control board.
4. Remove the four screws F attaching the DVD mechanism. Remove the servo control assembly from the DVD mechanism.

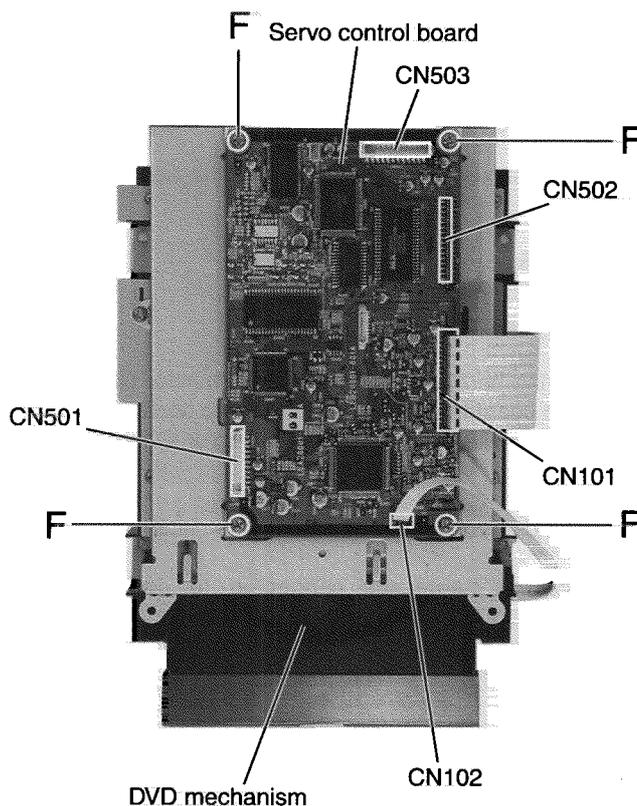


Fig.8

■ **Removing the Regulator Board (See Fig.9)**

\* The regulator board can be detached without removing the front panel assembly.

1. Remove the top cover.
2. Remove the rear cover.
3. Disconnect the harnesses connected to connector CN801 and CN806 on the regulator board. As for the harness outgoing from CN805, disconnect it from connector CN501 on the servo control board.
4. Remove the three screws G attaching the regulator board.

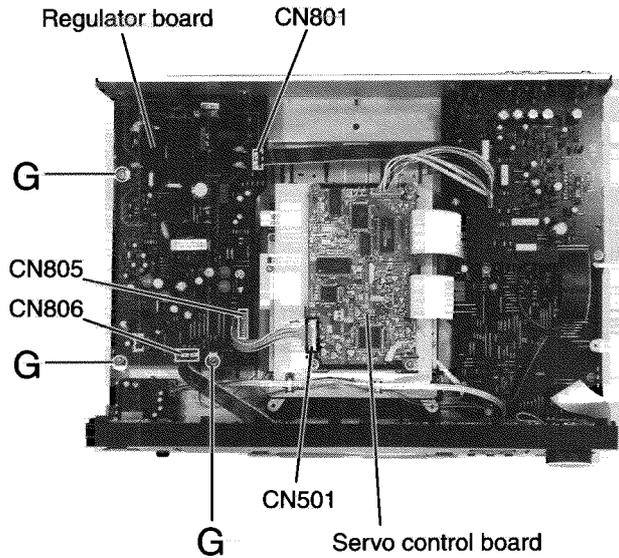


Fig. 9

■ **Removing the Video Board and Audio Board (See Fig.10)**

\* They can be detached without removing the front panel assembly.

1. Remove the top cover.
2. Remove the rear cover.
3. Disconnect the harness outgoing from connector CN601 on the video board from CN503 on the servo control. Disconnect the harness from the connector CN702 on the audio board.
4. Remove the one screw J attaching the video board.
5. Disconnect the harnesses connected to connector CN701 and CN703 on the audio board. As for the harness connected to CN704, disconnect it from connector CN851 on the headphone board on the front side.
6. Remove the three screws H attaching the audio board.

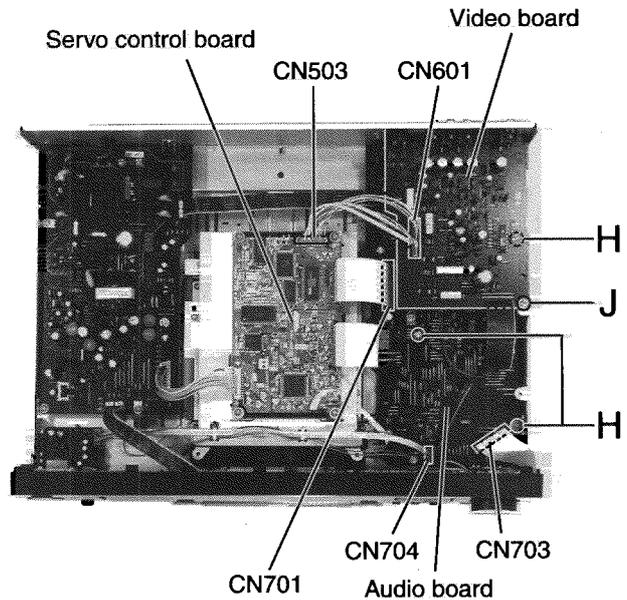


Fig.10

**■ Removing the Front Board and Headphone Board**  
(See Fig.11 to 14)

1. Remove the top cover.
2. Remove the front panel assembly.
3. Pull out the headphone level controller toward the front.
4. Remove the three screws I attaching the headphone board assembly.
5. Pull out the shuttle knob toward the front, and remove the nut (See Fig.12).
6. Remove the three screws J attaching the front board.
7. Remove the nine screws K retaining the front panel, then disconnect the harness connected to connector CN834.
8. Turn CN832 and CN833 90 degrees as shown in the Fig.14, then remove the front board 1 and the front board 2.

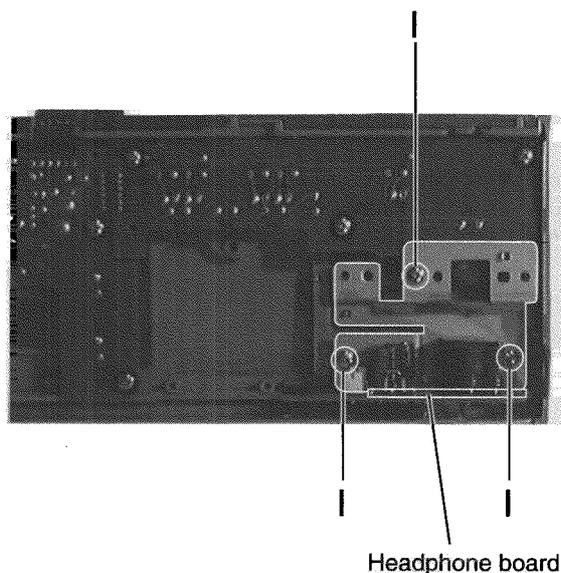


Fig.11

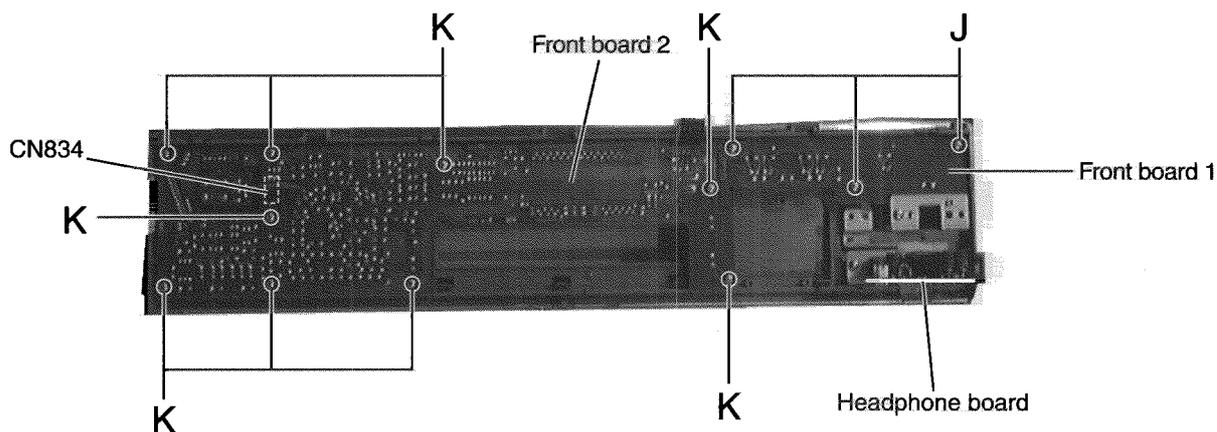


Fig.12

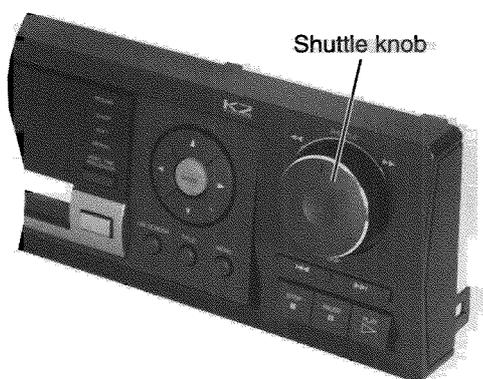


Fig.13

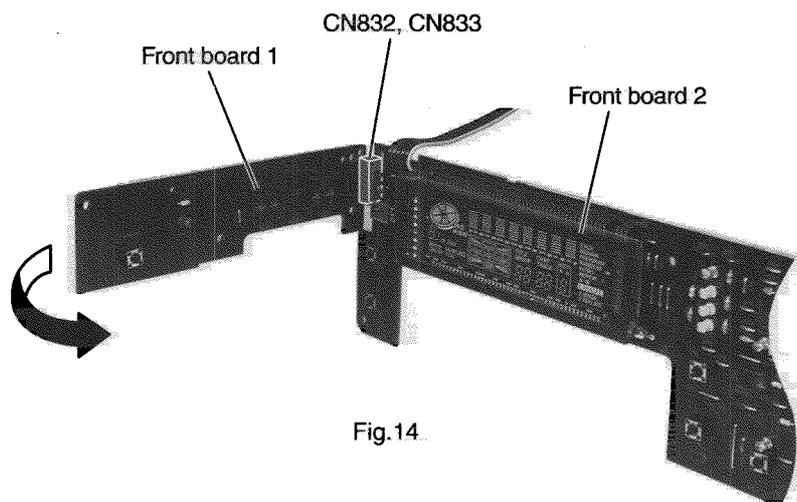


Fig.14

## XV-D701BK

< To eject the disc tray without turning  
on power >  
(See Fig.15 and 16)

1. Turn over the body, and shift a part of the rotary cam on the bottom of the loading base to "TRAY OPEN" as shown in the Fig.15 by using a tool like a pincette.
2. Pull out the disc tray toward the front.

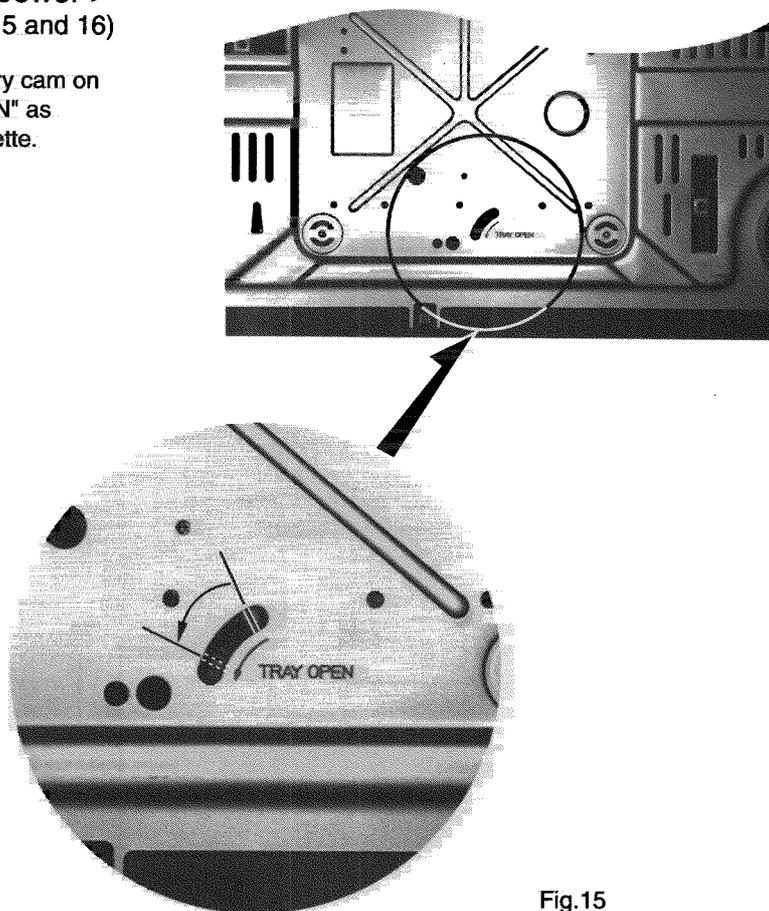


Fig.15

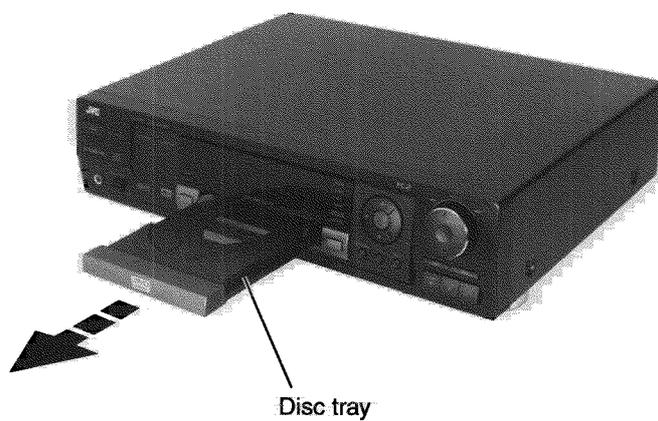


Fig.16

< Removal of DVD Mechanism Assembly >

■ Removing the Clamper Base (See Fig.1)

1. Remove the top cover.
2. Remove the DVD mechanism assembly.
3. Remove the four screws ① attaching the clamper base.

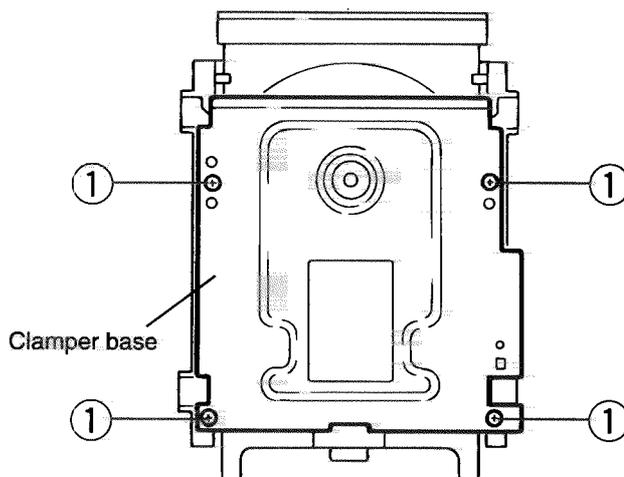


Fig. 1

■ Removing the Loading Tray (See Fig.2~5)

1. Remove the clamper base.
2. Shift a part of the rotary cam in the bottom of the loading base to the tray opening position by using a tool like a pincette.

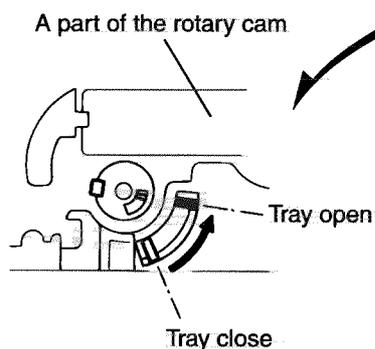


Fig. 3

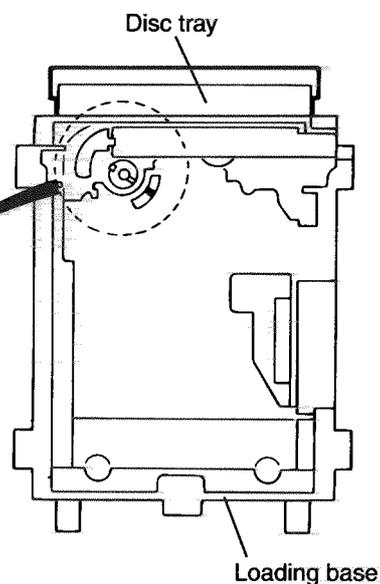


Fig. 2

3. Draw the tray to the opening position.
4. Release the tray lock on both sides of the loading base, then pull out the tray.

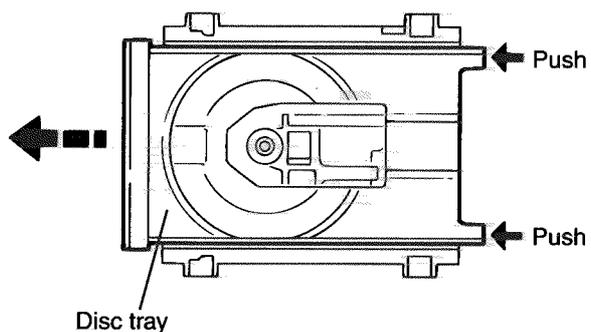


Fig. 4

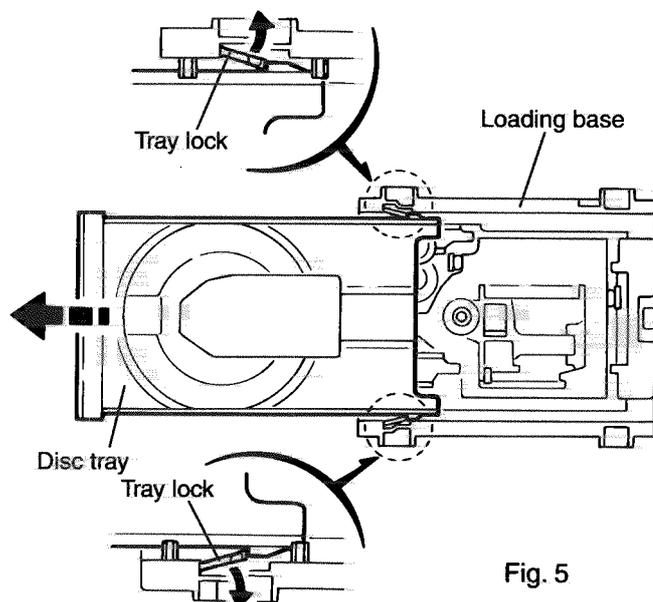


Fig. 5

■ **Removing the Traverse Unit (See Fig.6)**

1. Remove the disc tray.
2. Loosen the four screws ② attaching the traverse unit, and remove them together with the chassis stoppers / chassis holders.
3. Lift the rear part of the traverse unit (the leaf spring side), then remove the unit slowly while paying attention to the part connected to the rotary cam.

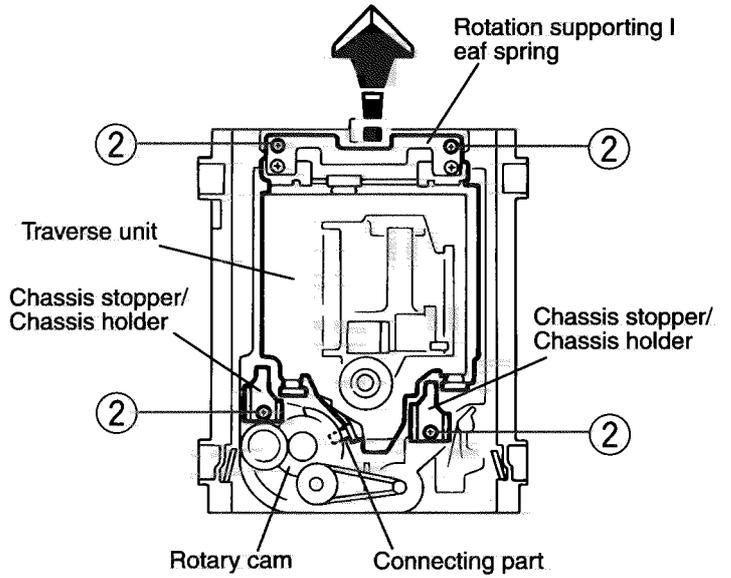


Fig. 6

■ **Removing the Pickup Control Board (See Fig.7 and 8)**

(See Fig.7 and 8)

1. Remove the traverse unit.
2. Remove the two screws ③ attaching the pickup control board on the bottom of the traverse unit.

Caution: Solder the pattern on the flexible harness to prevent static electricity damage to the laser diode. After reassembling, unsolder the pattern.

3. Disconnect the harness from connector FP0001 on the pickup control board, and card wire from connector FP0003, the harnesses from P0004 and P0005 respectively (To disconnect FP0001, open the lock as shown in Fig.8.).

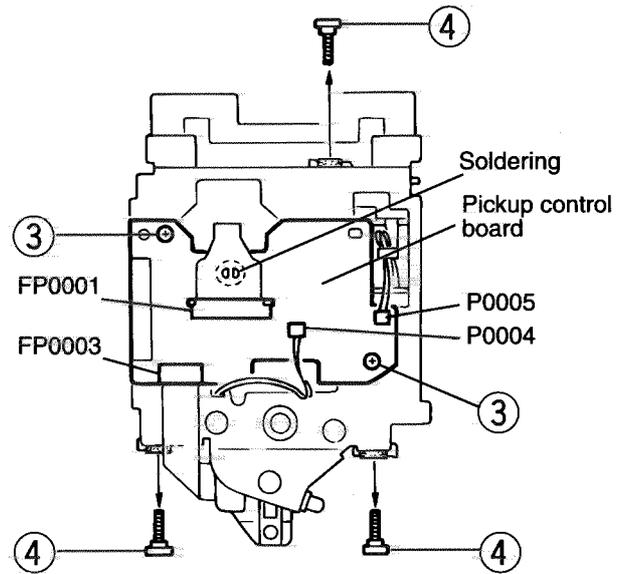


Fig. 7

■ **Removing the Chassis Flame (See Fig.7)**

1. Remove the traverse unit.
2. Remove the pickup control board.
3. Remove the three screws ④ attaching the chassis flame and the damper.

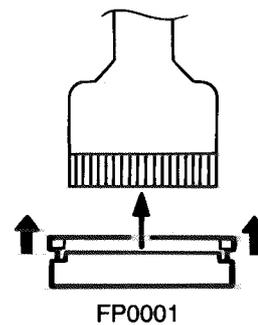


Fig. 8

**■ Removing the Turn Table / Spindle Motor Assembly**  
(See Fig.9)

1. Remove the traverse unit.
2. Remove the pickup control board.
3. Remove the chassis frame.
4. Remove the three screws ⑤ attaching the turn table/spindle motor assembly.

**■ Removing the Switch** (See Fig.9)

1. Remove the traverse unit.
2. Remove the pickup control board.
3. Remove the chassis frame.
4. Remove the screw ⑥ attaching the switch.

**■ Removing the Pickup unit** (See Fig.9)

1. Remove the traverse unit.
2. Remove the pickup control board.
3. Remove the chassis frame.
4. Loosen the two screws ⑦ attaching the shaft holder to fix the guide shaft A. Then, remove the screws ⑦ with the pickup unit while pulling out the pickup unit from the guide shaft B.

**■ Removing the Feed Motor Assembly**  
(See Fig.9 and 10)

1. Remove the traverse unit.
2. Remove the pickup control board.
3. Remove the chassis frame.
4. Remove the Pickup unit.
5. Remove the two screws ⑧ attaching the feed motor assembly, gear and lead screw.
6. Pull out the gear from the lead screw.
7. Remove the washer attaching the loading gear, then loading gear.
8. Remove the two screws ⑨ attaching the feed motor assembly.

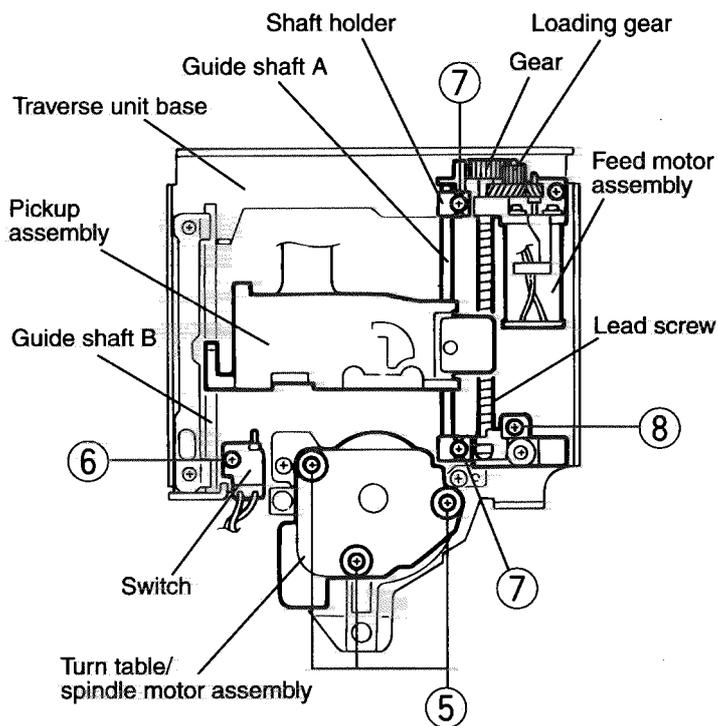


Fig. 9

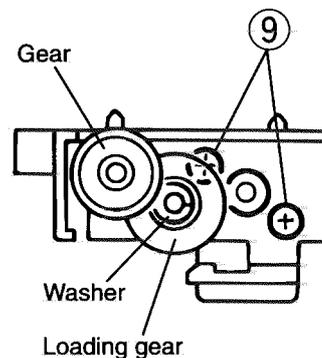


Fig. 10

■ **Removing the Parts for Loading (See Fig.11)**

1. Remove the clamper base.
  2. Remove the disc tray.
  3. The parts below can be removed without removing the traverse unit.
- ※ Pull out each part after removing the washer or releasing the tab.
- pulley gear, belt, tray gear, rotary gear and rotary cam

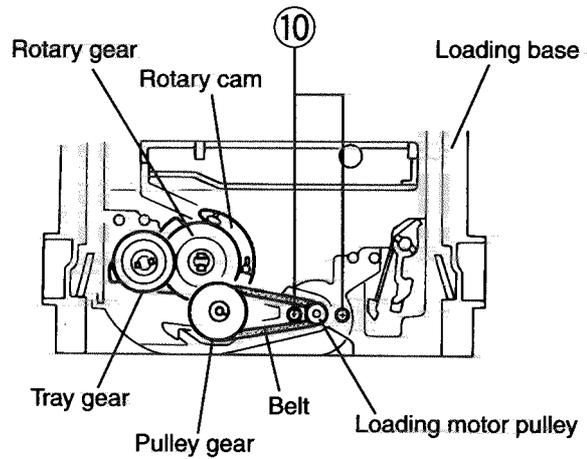


Fig. 11

■ **Removing the Loading Motor Board (See Fig.11 and 12)**

1. Remove the clamper base.
2. Remove the disc tray.
3. Remove the belt from the loading motor pulley on top of the loading base, then the two screws ⑩ attaching the loading motor.
4. Reverse the loading base, remove the screw ⑪ attaching the loading motor board and release tab A. Lift the loading motor board in the direction of the arrow to release tab B.

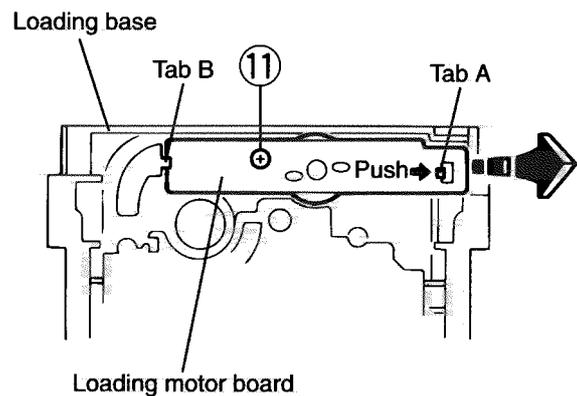


Fig. 12

## &lt; Reassemble of the Loading Base &gt;

## ■ Reassembling the Parts for Loading

(See Fig.11 and 12)

1. Attach the loading motor board, rotary cam, rotary gear, tray gear, pulley gear and belt in that order.

## ■ Reassembling the Traverse Unit

(See Fig.13 and 14)

1. Allow the flexible wire from traverse unit to extend out of the loading base.
2. Insert point C of the traverse unit into the groove of the rotary cam, then attach the unit.
3. Attach the four screw ⑫ with the chassis stopper and chassis holder, and tighten the screws.

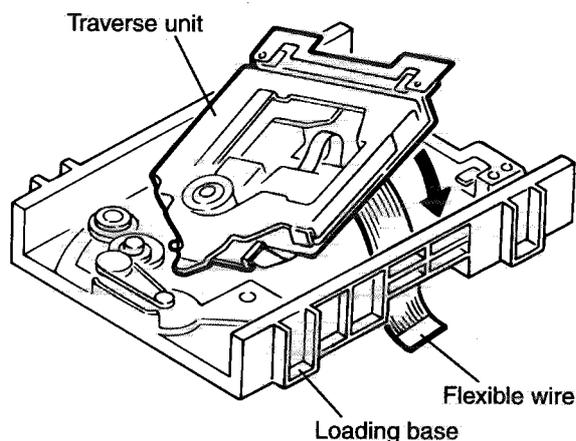


Fig. 13

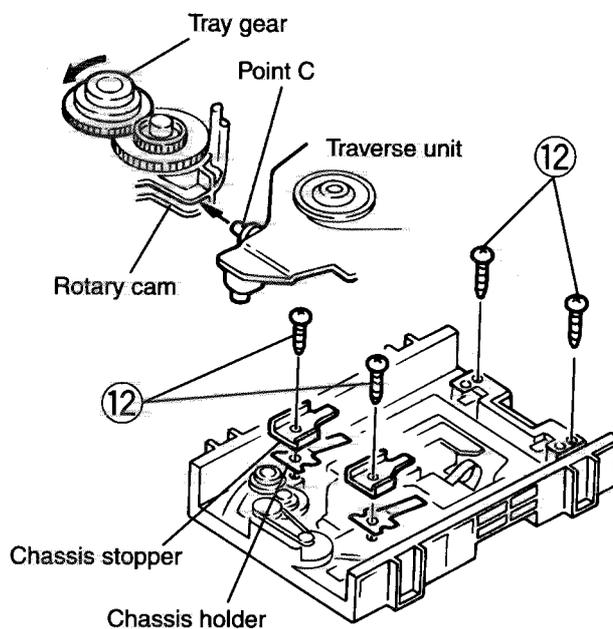


Fig. 14

## ■ Reassembling the Disc Tray (See Fig.15)

1. Turn the tray gear counterclockwise several times to move the traverse unit to the lowest position.
2. Push part D of the rotary cam in the direction of the arrow.
3. Make sure that the tab of the rotary cam is locked.
4. Insert the tray into the loading base horizontally.

## ■ Reassembling the Loading Base Assembly

(See Fig.1)

1. Attach the clumper base and tighten the four screws ① to fix it. Attach the loading base to the body.

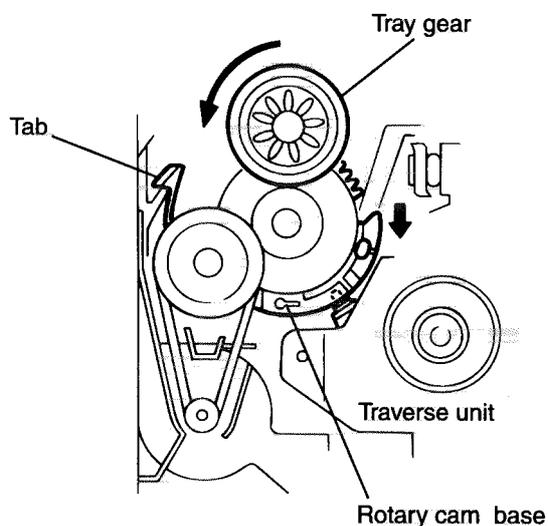


Fig. 15

## Precautions for service


### Handling of Traverse Unit and Laser Pickup

1. Do not touch any peripheral element of the pickup or the actuator.
2. The traverse unit and the pickup are precision devices and therefore must not be subjected to strong shock.
3. Do not use a tester to examine the laser diode. (The diode can easily be destroyed by the internal power supply of the tester.)
4. To replace the traverse unit, pull out the metal short pin for protection from charging.
5. When replacing the pickup, after mounting a new pickup, remove the solder on the short land which is provided at the center of the flexible wire to open the circuit.
6. Half-fixed resistors for laser power adjustment are adjusted in pairs at shipment to match the characteristics of the optical block.  
Do not change the setting of these half-fixed resistors for laser power adjustment.

### Destruction of Traverse Unit and Laser Pickup by Static Electricity


Laser diodes are easily destroyed by static electricity charged on clothing or the human body. Before repairing peripheral elements of the traverse unit or pickup, be sure to take the following electrostatic protection:

1. Wear an antistatic wrist wrap.
2. With a conductive sheet or a steel plate on the workbench on which the traverse unit or the pick up is to be repaired, ground the sheet or the plate.
3. After removing the flexible wire from the connector (CN101), short-circuit the flexible wire by the metal clip.
4. Short-circuit the laser diode by soldering the land which is provided at the center of the flexible wire for the pickup.  
After completing the repair, remove the solder to open the circuit.

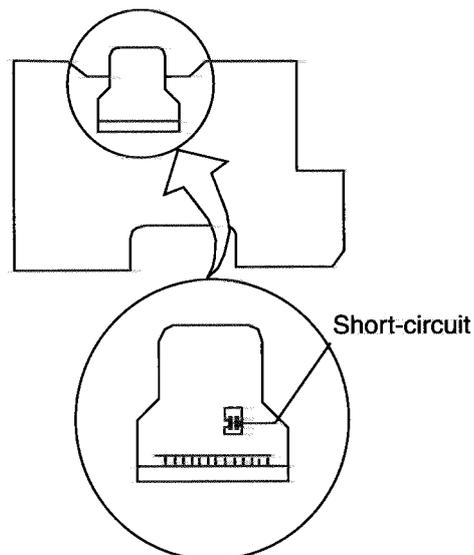

# Troubleshooting

## 1. Power-on processing

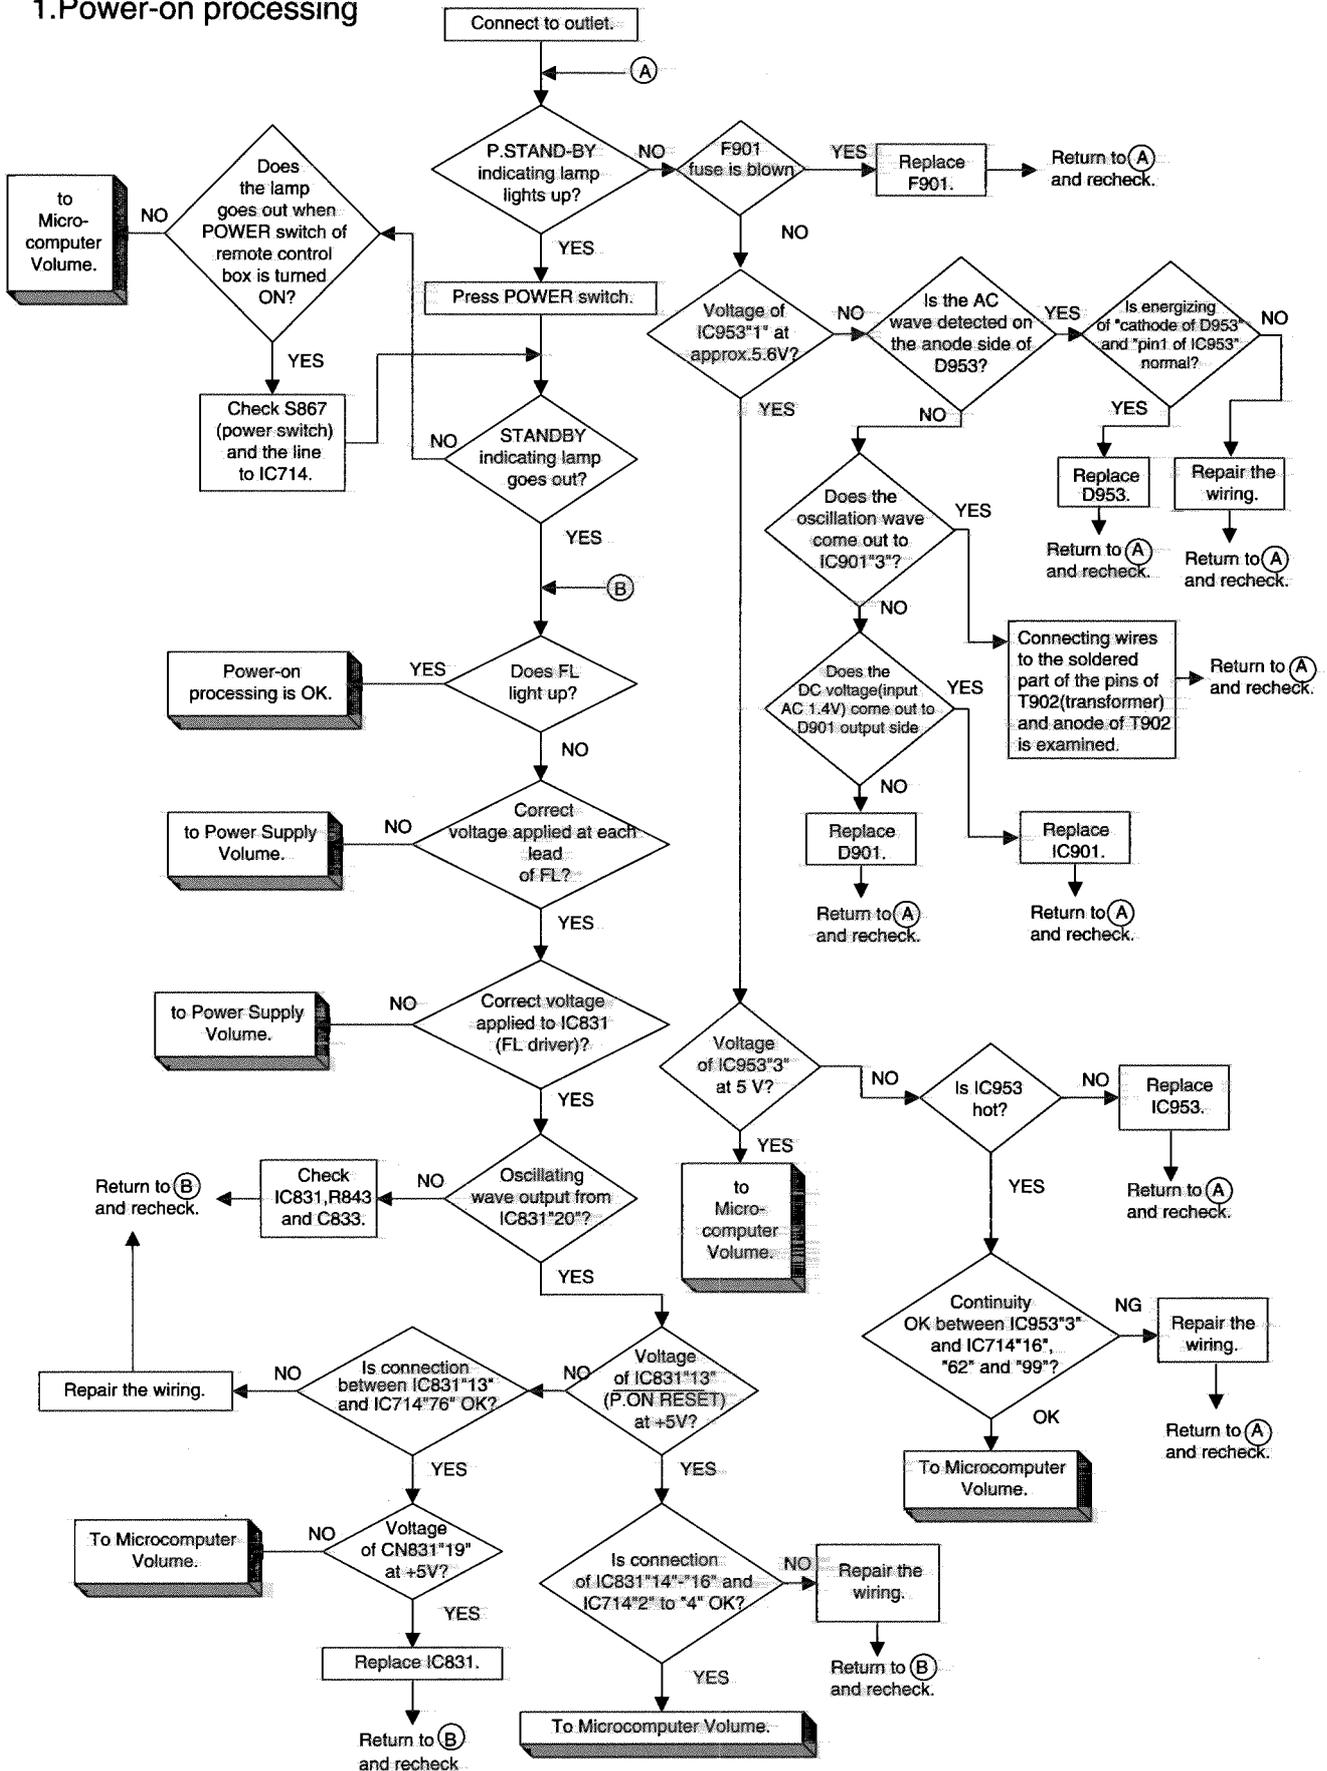

## 2. Power Supply Volume

With all the wiring removed, check unit power board.

- (1) Remove all flat wires and wire assemblies which are connected to CN801, CN805, CN806.
- (2) Short -circuit CN805"4" (POWER ON:B168) and "5" (B5V:B167). (Set each regulator to ON.)
- (3) The load resistance is connected between CN805"5"(B5V:B167) and "8,9"(D.GND:B164).
- (4) Connect to the outlet and check the voltage at each part.  
(For the voltage specification, see the wiring diagram.)


\* If the load resistance is not connected, the voltage is not output to "B167".

Then restore the connection of CN801, CN805, CN806 and check voltage.

- (1) Remove the wire short -circuiting CN805"4" and "5".
- (2) Remove the load resistance.
- (3) Restore the connection of CN801, CN805, CN806.
- (4) Connect to the outlet.
- (5) Turn the POWER switch on and check the voltage at each part.

If voltage abnormally drops when CN801, CN805, CN806 are connected (load is connected) though the voltage was at the normal level when CN801, CN805, CN806 were disconnected(load is connected), or if the protective element (fuse, etc.) is opened, the load which is supplied power may be defective or the wiring may be short-circuited.

## 3. Open/Close Operation

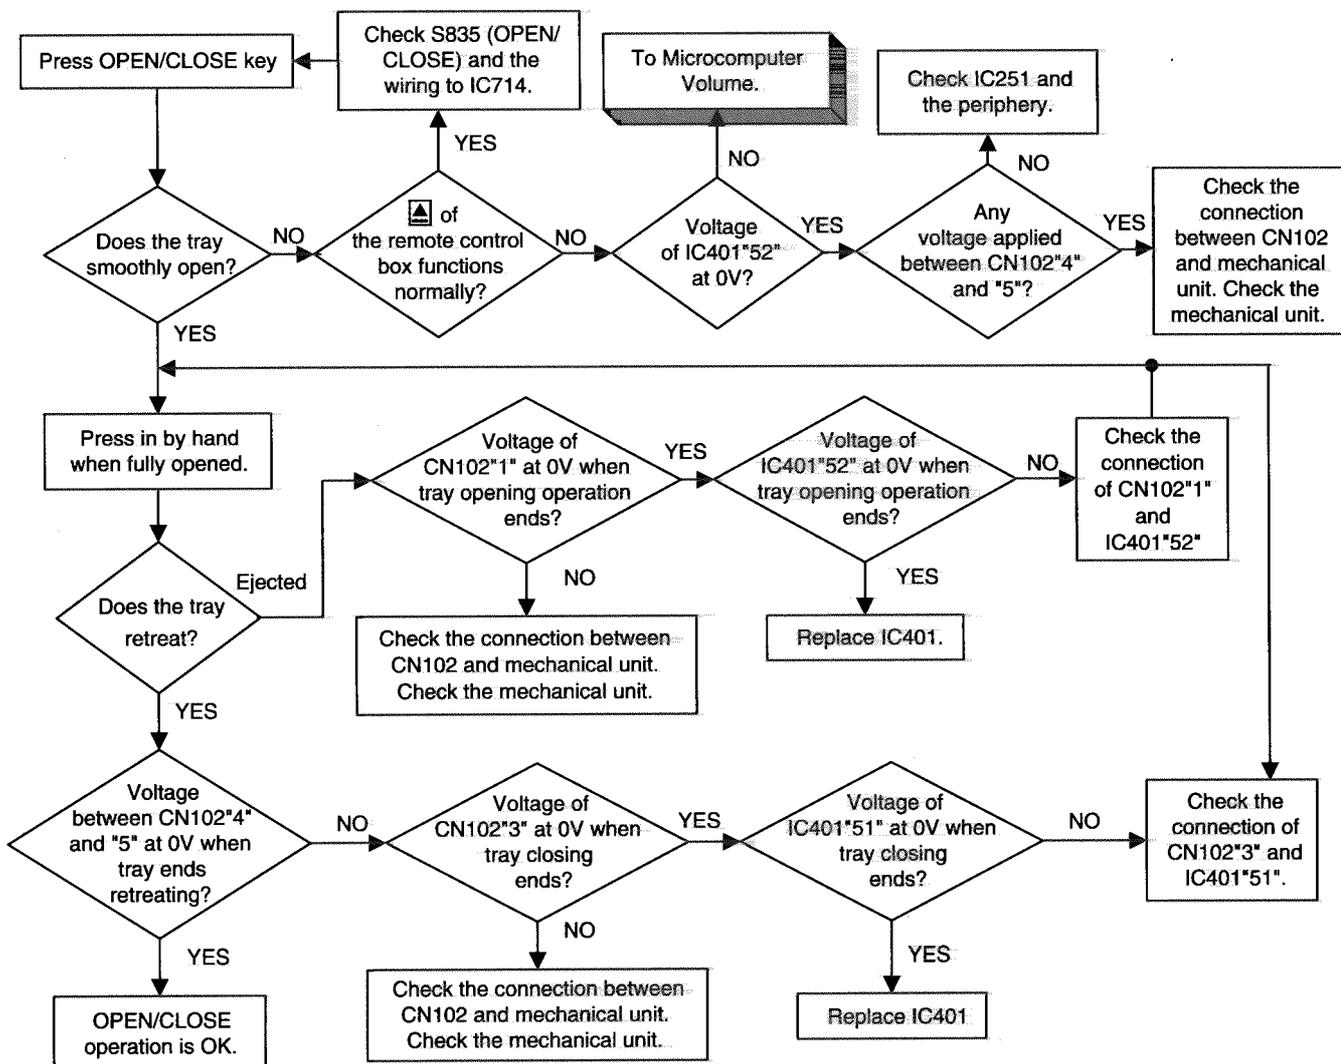

## 4. Microcomputer Volume

### Processing of Each Microcomputer

- \* IC714 System microcomputer (sub-microcomputer)  
After powering on, this microcomputer is continuously activated to control keys and remote control signals.  
According to key operations or remote control signals, it controls (turns on/off) the power for LSIs including IC401 (main microcomputer) and the audio/video output circuit.  
It also controls the resetting of the main microcomputer, FL driver IC (IC831) for FL display, and various LED displays.
  
- \* IC401 Main microcomputer  
This microcomputer controls a group of LSIs of servo and signal processing sections according to commands from the system microcomputer.  
After receiving time information from the signal processing section, it transmits the information together with the status to the system microcomputer.  
It controls the resetting of the LSIs of the servo and signal processing sections.  
It has IC402 (16Mbit ROM) as an external ROM.


### Normal Starting Conditions

- \* IC714 System microcomputer
  - (1) +5V must be applied to "16" and "62".
  - (2) Oscillators of "13" and "15" must be oscillating correctly.
  - (3) Input to "12" (RESET) must be at +5V (reset cancel).


If above (1) to (3) are not satisfied when the P.STANDBY indicating lamp does not light at power-on, IC714 may be defective.
  
- \* IC401 Main microcomputer
  - (1) +5V must be applied to "17", "22", "34", "54", "66"
  - (2) Clock signal (13.5MHz) must be input to "23" from IC301 (ODC LSI).
  - (3) Input to "82" (RST) must be at +5V (reset cancel).
  - (4) Communication line with IC714 ("57", "58", "67"~"69") and that with IC402 (external ROM) ("13"~"16", "26"~"33", "35"~"42", "44", "93"~"100") must work normally.

If above (1) to (3) are not satisfied when the P.STANDBY indicating lamp goes out but FL does not light when the POWER switch is turned on, IC401, IC714 or IC402 may be defective.

5. Audio Volume

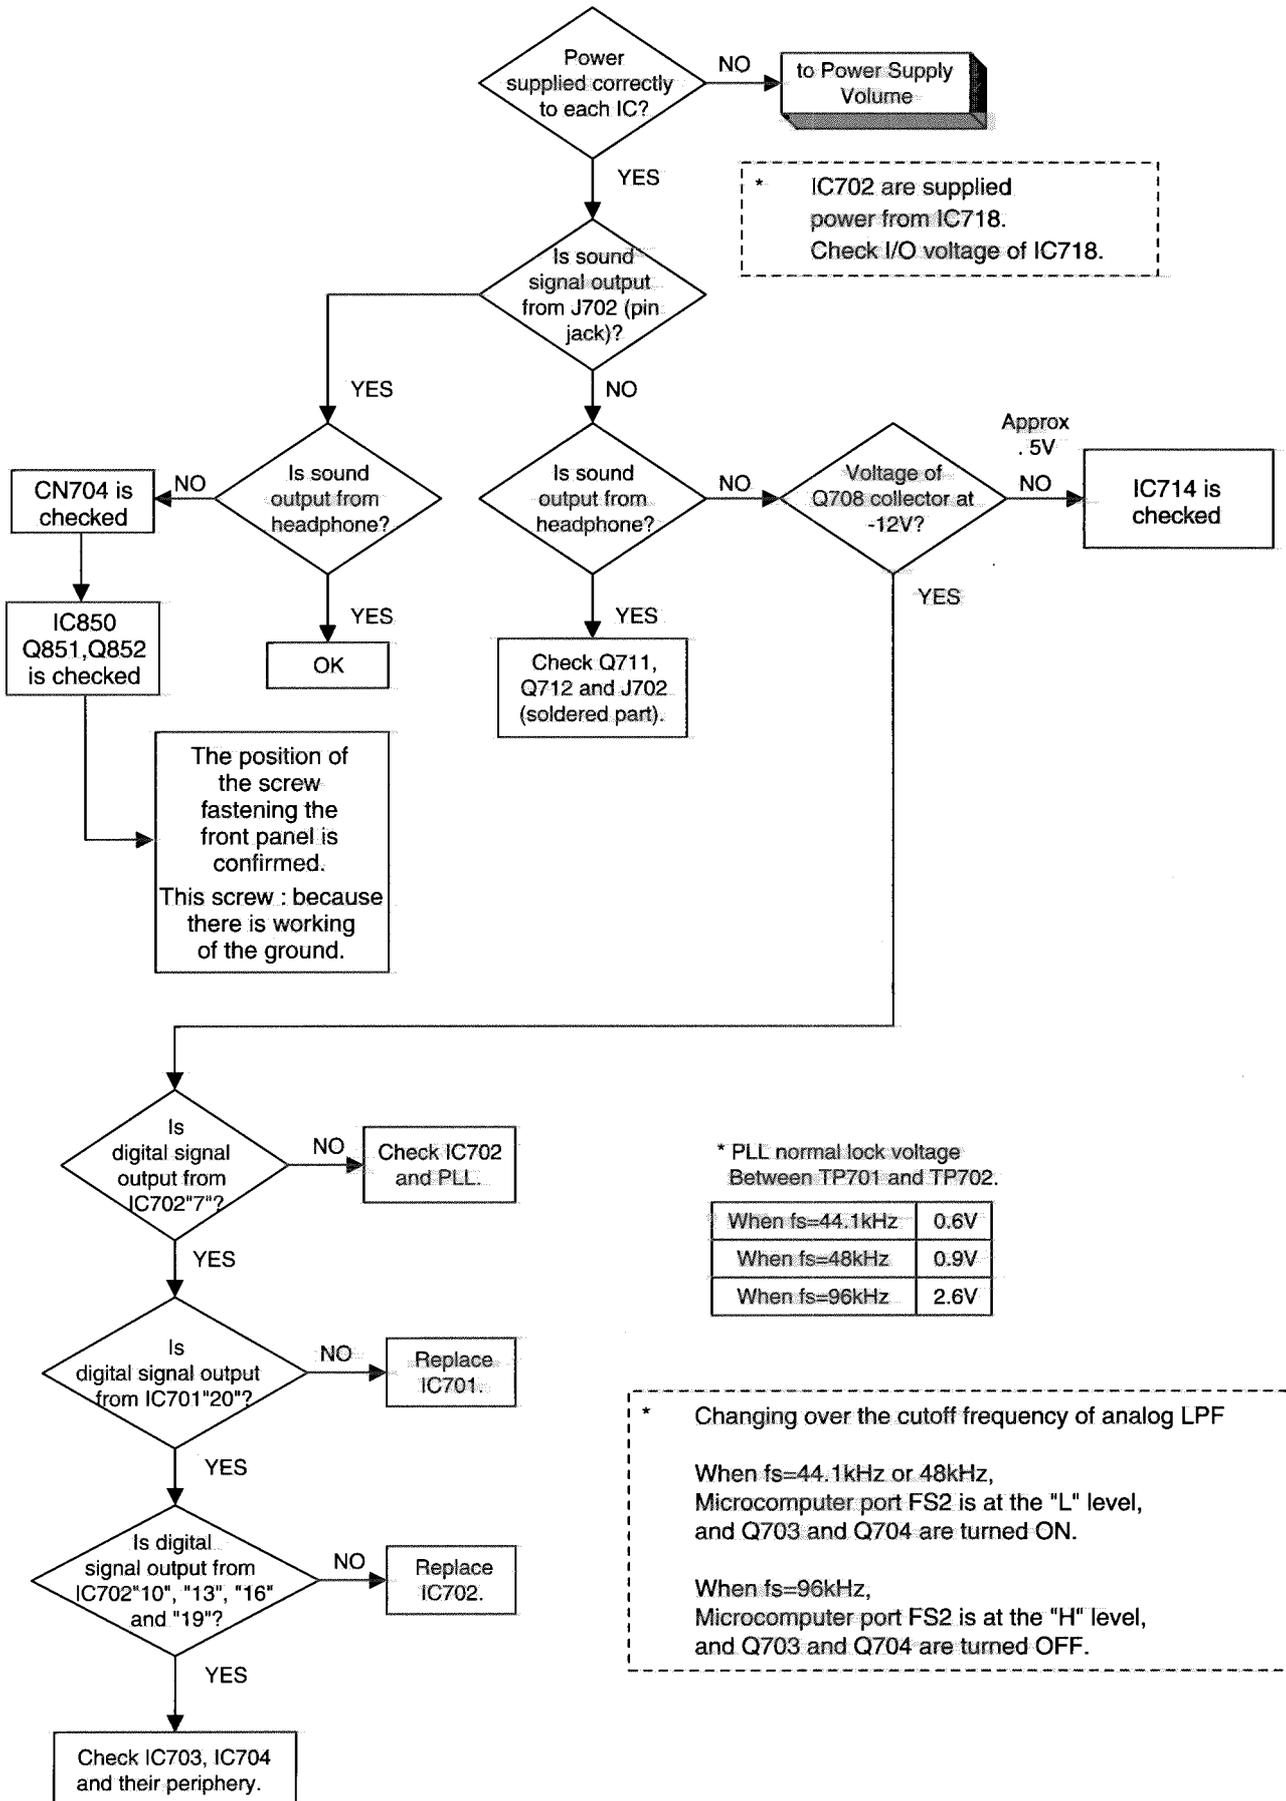


## 6. Video Volume

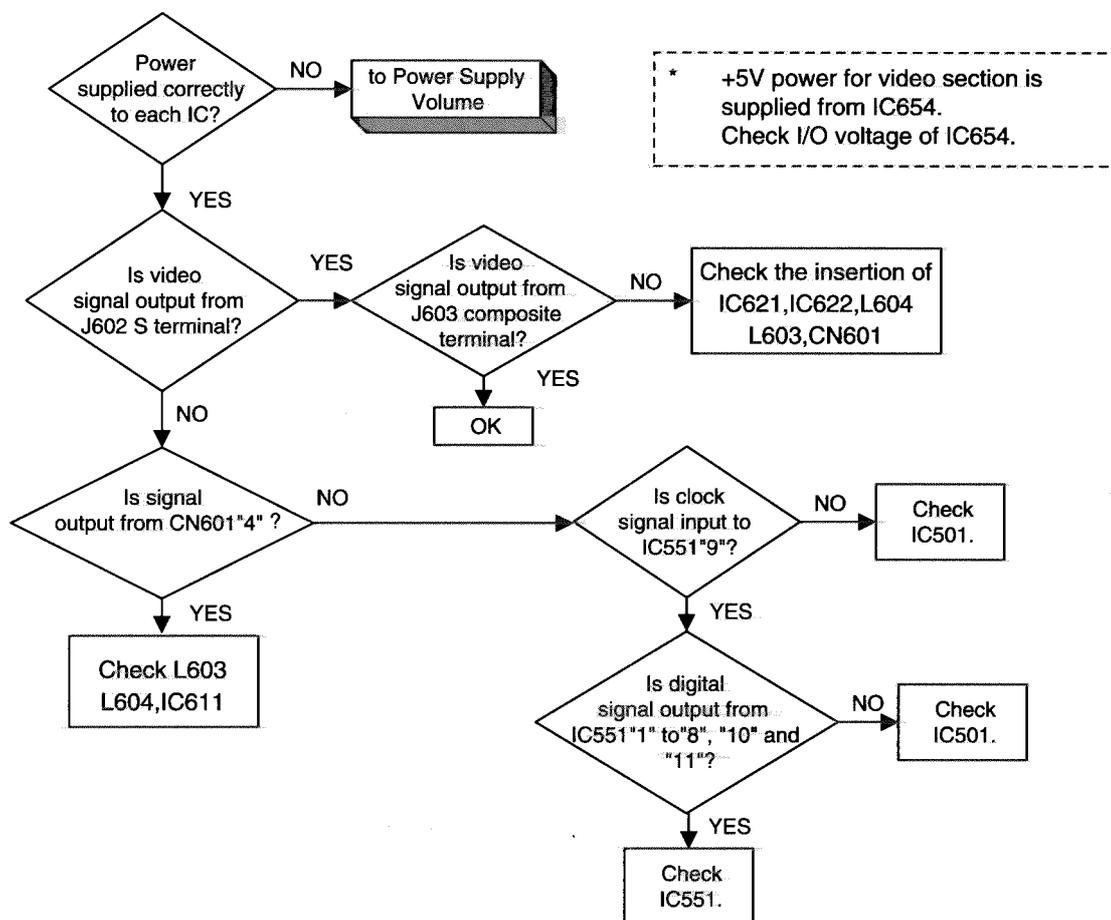


\* +5V power for video section is supplied from IC654. Check I/O voltage of IC654.

\* Service tips  
 (1) The disc playback screen is in the normal condition but graphics in the "ON SCREEN" mode are abnormal => Replace IC553.  
 (2) Only 1/4 compressed playback screen of DVD or video-CD is abnormal => Replace IC552.

## Signal flow of DISC media

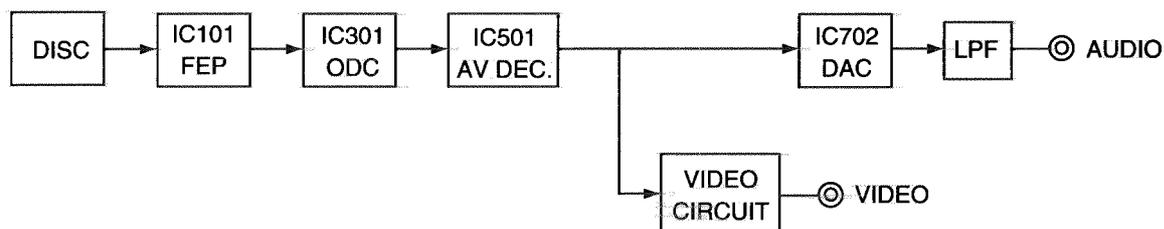

7.Servo volume

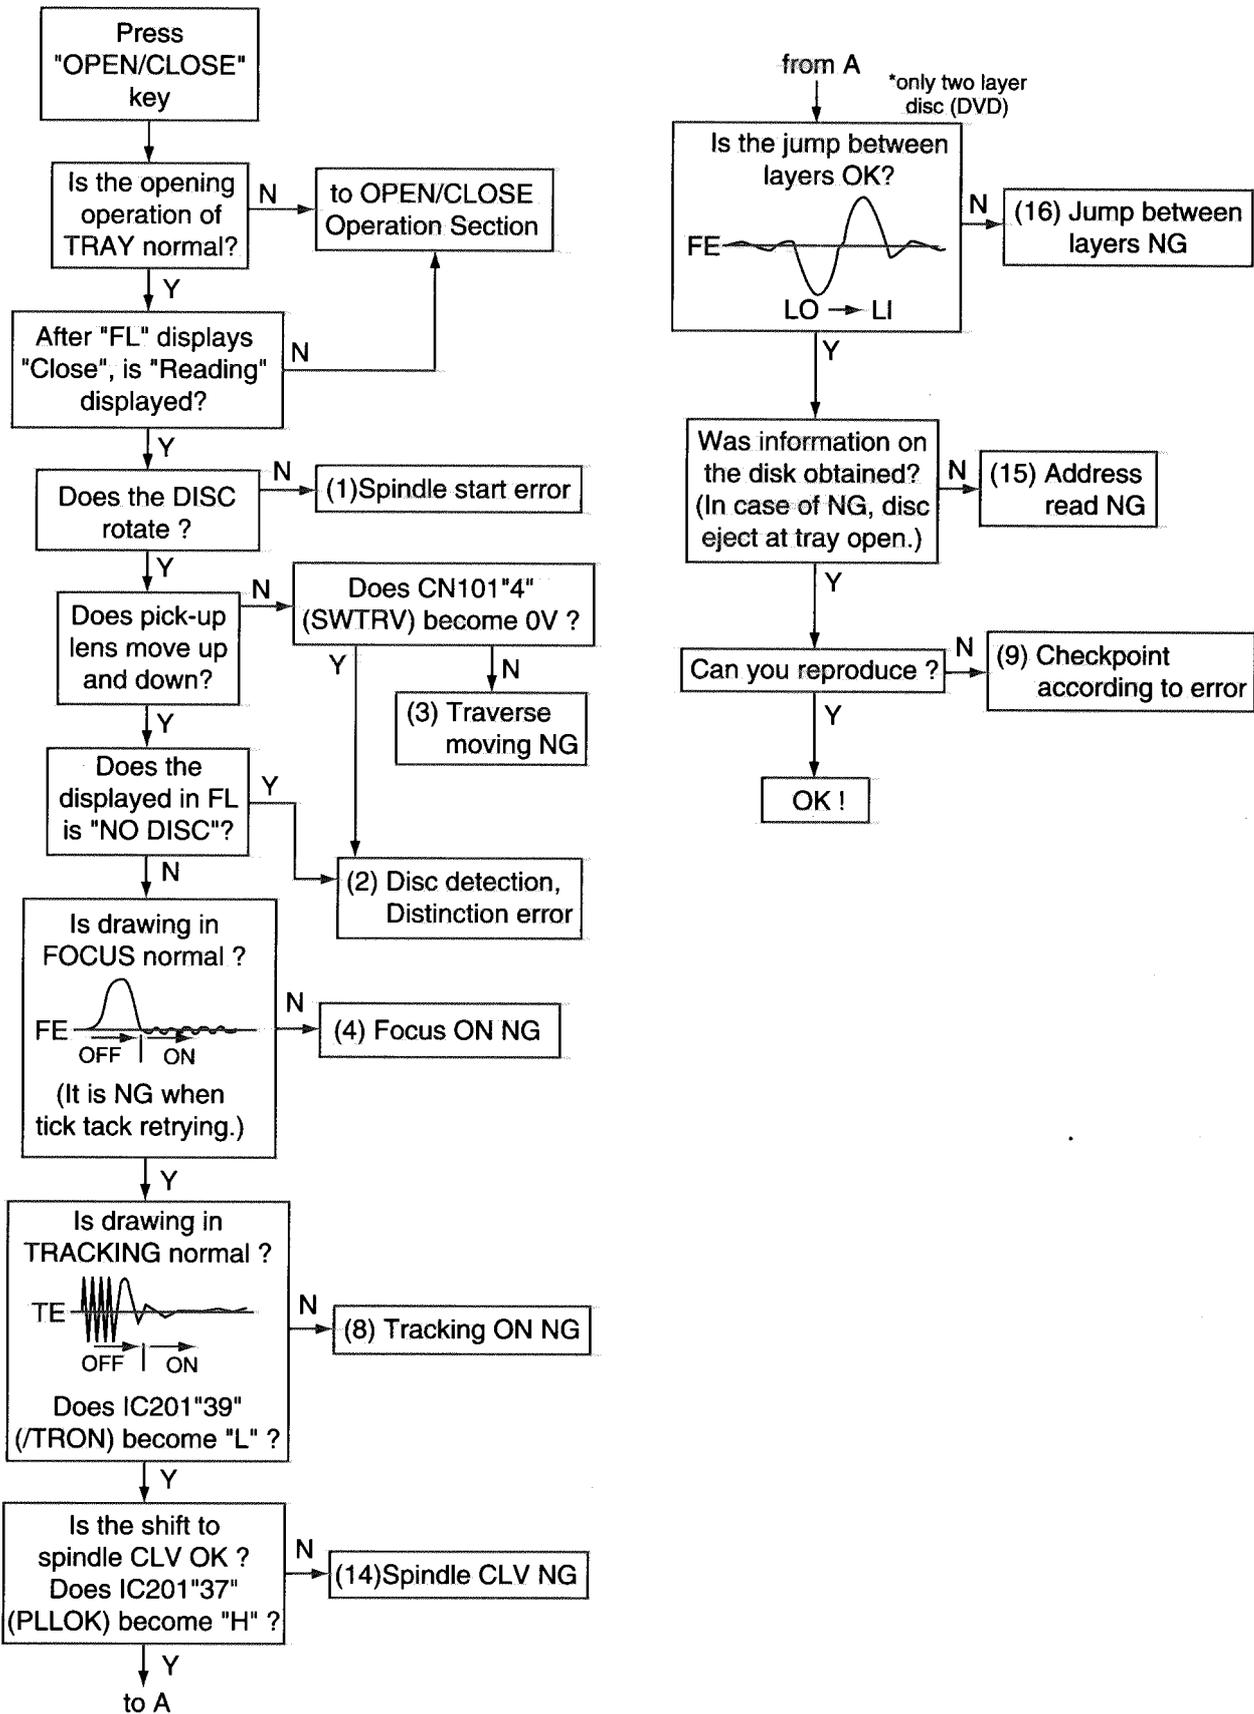

## Check points for each error

### (1) Spindle start error

\*Defective spindle motor

Are there 11ohms resistance between each pin of CN101 "33~35"?

(The power supply is turned off and measured.)

\*Hall element: Is sine wave output between CN101 "25" and "27", between "28" and "29", and between "30" and "31" during rotation?

In either case, replace the mechanical unit.

\*Defective spindle driver (IC251)

Is a driving wave output from CN101 "33~35" ?



Is IC251 "1" at "H" level (START)?

Servo IC --- Is control signal sent to the motor driver ?

IC201 "95" : Duty is 50% during stop, but varies during rotation (greatly varies at start).

--- If not sent, pattern or servo IC (IC201) is defective.

R259 : approx 2.5V during stop, but varies during rotation (greatly varies at start).

--- of not sent, pattern or servo IC (IC201) is defective.

Is FG input to servo IC ?

Observe FG wave from IC201 "89". --- If not output, pattern, IC251 or IC201 is defective.

### (2) Disc Detection, Distinction error (no disc, no REFNV)

\* Laser is defective.

\* Front End Processor is defective (IC101).

\* APC circuit is defective. --- Q101, R103, R104.

\* Pattern is defective. --- Lines for CN101 "15" and "17".

Lines for between IC201 "12" and IC101 "2"(LDONA),  
between IC201 "13" and IC101 "1" (LDONB).

\* Servo IC is defective (IC201).

\* Is signal sent to IC201(servo)"71" AS2 ?

\* IC101 --- For signal from IC101 to IC301, is signal output from IC101 "88" (RFAS1) and IC101 "71" REENV ?

## XV-D701BK


### (3) Traverse movement NG

\* For automatic adjustment, traverse movement occurs only when the position is changed to retry judging the disc type after the 1st judgment resulted in an error. Therefore, traverse movement rarely occurs because, in most cases, disc judgment at the current position (1st time judgment) is executed successfully. (Of course, NG rarely occurs in this step.)

Note: 1st time judgment of disc type resulted in NG. --- The re-judgment of disc type may not be successful. Therefore, after removing the cause of traverse movement, re-execute automatic adjustment and confirm that no problem exists.

#### \* Check point

- a) During stop  
Whether 50% duty pulse is output to R273  
Whether between R274 and C271 is at approx. 2.5VDC  
Offset voltage between CN101 "34" and "35" (scores mV if exists)
- b) When tray is opened or closed  
Check by oscilloscope whether a rectangular wave signal is output from CN101 "34" or "35".

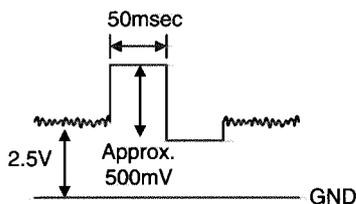

If checking a) or b) resulted in NG, IC201 maybe defective.

### (4) Focus ON NG

- \* Is FE output ? --- Pattern, IC101
- \* Is FCDRV signal sent ? (R286) --- Pattern, IC301
- \* Is driving voltage sent ?  
CN101 "20", "21" --- If NG, pattern, driver, mechanical unit (with the power turned off, measure the resistance between CN101 "20" and "21").
- \* Does CN101 "7"(SRF1) become "H" and is the focus drawing in done?  
--- Mechanical unit (laser power too low), IC101(defective gain)  
--- Moreover, It is thought that abnormality is found in the disk.
- \* Mechanical unit is defective.

### (5) Tracking ON NG

- \* When the tracking loop cannot be drawn in, IC201 "39" (/TRON) does not become "L".
- \* Mechanical unit is defective.  
Because the undermentioned adjustment value is abnormal, it is not possible to draw in normally.
- \* Periphery of driver (IC271)  
Constant or IC it self is defective.  
(When passing without becoming abnormal while adjusting the following.)
- \* Servo IC (IC201)  
When improperly adjusted due to defective IC.

[Focus position rough adjustment]  
[Phase difference cancellation rough adjustment]  
[Tracking balance adjustment]

## (6) Spindle CLV NG

- \* When the spindle cannot be shifted to CLV Servo, does not become "H" between IC301 "69" and IC201"37".
- \* IC201 Is signal output from CN103 "1" (RFOP)?
- \* IC201 Is signal output from CN103 "11" (DSLIP)?
- \* IC201 Is signal output from CN103 "6" to "9" (binary-coded clock and data)?
- \* IC201 Is "39" (/TRON) at "L" level ?
- \* IC301 "74" to "76" --- Is signal output to IC201 "24", "25", "28" (In case of only CD).  
(Serial communication of rotation information)
- \* Spindle motor driver is defective.  
Even when one of the three phases is defective, item (1) may be passed.  
--- Check the second item in (1) above.
- \* C260 to C263 Defective soldering  
If noise eliminating capacitors are not properly soldered, noise may ride on the waveform.
- \* Besides, the undermentioned cause is thought though specific of the cause is difficult because various factors are thought.  
Mechanism is defective.(jitter)  
IC101, IC201.

## (7) Address read NG

- \* Besides, the undermentioned cause is thought though specific of the cause is difficult because various factors are thought.  
Mechanism is defective. (jitter)  
IC201, IC301, IC401.  
The disc is dirty or the wound has adhered.

## (8) Between layers jump NG (double-layer disc only)


- \* When the focus flight is generated when jumps between layers.  
Because all adjustments for L1 layer must be successful, this error may rarely be due to a circuit defect.
- \* Crosstalk might occur from tracking to focus system. (See (11) ) --- Replace the mechanical unit.
- \* Driver surroundings.
- \* Defect of constant and IC.
- \* For double-layer discs, after checking CLV on layer L1, jumps to layer L0 after mode changes to FG. Then tracking is turned off, and adjustments are executed from the focus position coarse adjustment in order.
- \* When the jump between layers is done on the single-layer disk, the disk distinction error is thought.  
--- The laser power is low (RF level is confirmed by CN102 "1" (RFOP)).  
--- AS1, AS2, REFNV Is the signal sent to between IC101 and IC201 ?

(9) Neither picture nor sound is output

\* Cannot search


a) Can the feed system be driven?

Check the waveform of TRSDRV signal (R273). --- Waveform between R274 and C271.

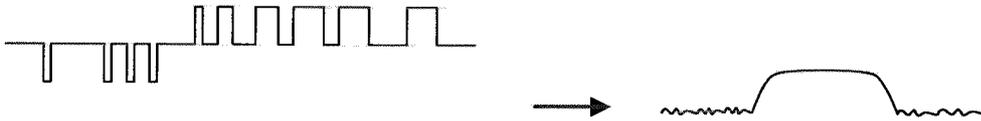

Search results in a change of duty  
(three values with 2.5V at the center)  
(The figure is exaggerated.)


Check the waveform of CN101 "1" and "2". --- After the driver (IC271)

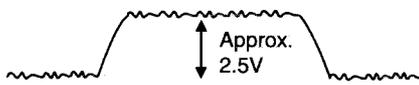

For short-distance search, the waveform becomes roundish, not trapezoidal, and voltage is low.


b) Is kick available?

Check the TRDRV signal waveform from R289.

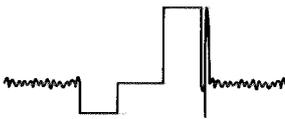


Check the waveform of CN101 "22" and "23" --- After the driver (IC271)

Although differs in amplitude and DC offset, the waveform is similar to that of R289

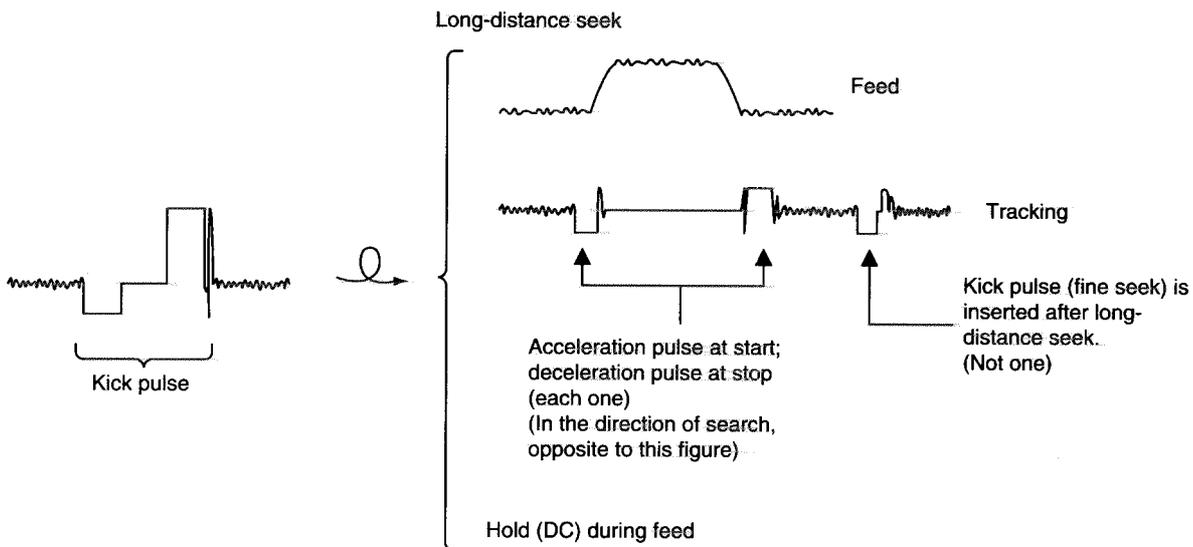

(10) Picture is distorted or abnormal sound occurs at intervals of several seconds.

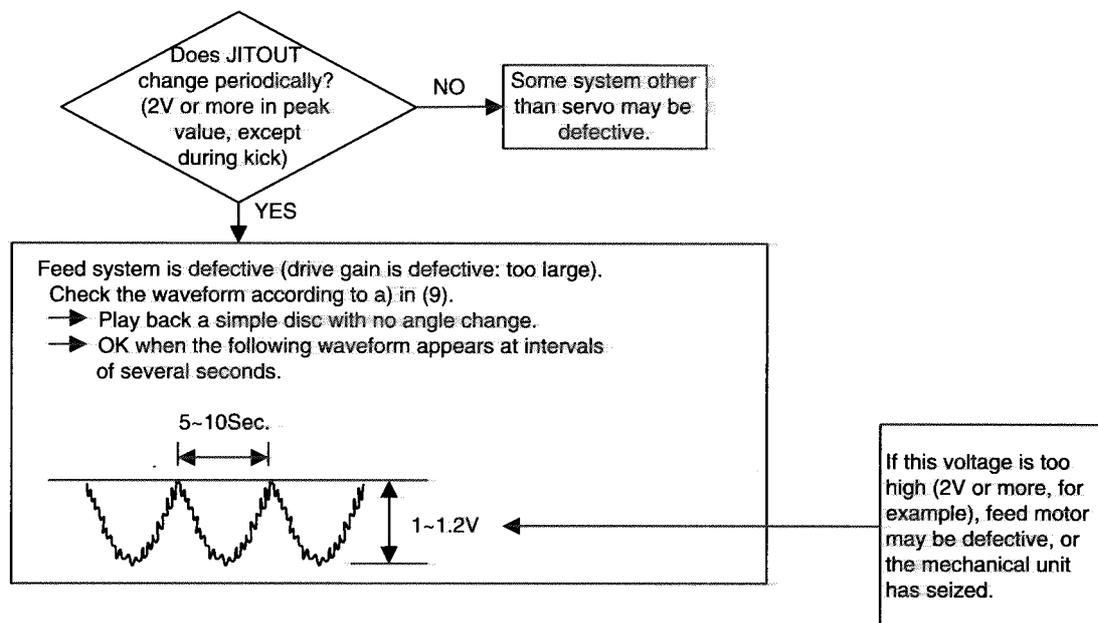

(11) Others (unusual events experienced to date)

- \* Problem occurs with double-layer discs although no problem occurs with single-layer DVD.  
(Error occurs, or search becomes unstable and takes longer.)  
Crosstalk might occur from tracking to focus system.
  - When FE was observed during search (skip, etc.), it was found that a wave resembling TE with an amplitude of 200mVp-p was riding on FE.
  - Mechanical unit was replaced.
- \* Error frequently occurred in the outer part of discs although no error occurred in the inner part.
  - Mechanical unit was replaced because tilt seemed to be defective.

(12) CD During normal playback operation

- a) Is TOC reading normal? NO → Please refer to "Servo Volume" flow.  
 Displays total time for CD-DA.  
 Shifts to double-speed mode for V-CD.  
↓ YES
- b) Playback possible? NO →
  - \*--:-- is displayed during FL serch.
  - According to [\*Cannot serch ] for DVD(9), check the feed and tracking systems.
  - \*No sound is output although the time is displayed.(CA-DA)
  - \*DAC, etc, other than servo.
  - \*The passage of time is not stable, or picture is abnormal.(V-CD)
  - \*The wound of the disc and dirt are confirmed.

(13) Others

V-CD : Frequent occurrence of error in inside and outer.  
(Even the disk without the wound : when generated.)

Waveform observation

- Is the oscillation frequency of about 700~900Hz output?  
(Borrow a pertinent disk for the complaint for the combination with the disk.)
- Exchanges mechanism for the mechanism resonance.

## Main adjustment

### Adjustment and confirmation matter

#### (1) Auto adjustment method


If microprocessor (IC401, IC402, IC714, IC716) or servo board (LEA20001) is replaced, initialize the DVD player in the following manner:

1. Initialize the DVD player in the following manner:

- 1) Make sure that no disc is on the tray.
  - 2) While pressing the "ON SCREEN" and "TITLE" keys simultaneously on the DVD player, connect to the outlet.
  - 3) Press the "POWER" key, then "TEST VC3" is displayed on the FL.
  - 4) Press the "ENTER" key to start initialization of EEPROM (takes approx. 3seconds).  
When indicator of "RESUME" lights, completes initialization.
  - 5) Press the "OPEN/CLOSE" key, and the tray comes out.  
This key is disabled during the initialization of EEPROM. When this key command is accepted to open the tray, the initialization of EEPROM has already ended.
2. Press the "DIGEST" key. (becomes a test disc reproduction mode)
  3. With the test disc supplied from JVC (DEMO1004 or VT-501) on the tray, press the "OPEN/CLOSE" key to let the tray retreat. (Do not push the tray in.)
  4. Press the "ON SCREEN" key. The disc rotates for a while and then stops.
  5. The disc is taken out of the tray, and the power supply is turned off.


#### (2) Confirmation of DVD RF level

1. The oscilloscope is connected between "1"(RFOP) of CN103 and "2"(GND).
2. Reproduction of the test disc (DEMO1004 or VT-501) made by JVC.
3. It is confirmed that RF LEVEL is 300mVp-p~600mVp-p.
4. When there is disorder in the waveform road cuts etc, test disk is exchanged and measured.

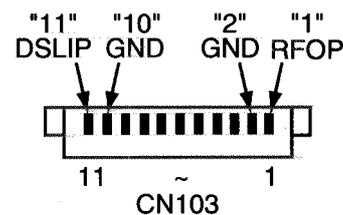

#### (3) Confirmation of CD jitter level and RF level

1. The CD jitter meter is connected between "10"(GND) of CN103 and "11"(DSLIP).  
The RF level is observed at the same time.  
(The monitor output terminal of CD jitter meter is connected with the oscilloscope.)
2. The first test disk(CTS-1000) made of JVC is reproduced.
3. It is confirmed that jitter value is below 26nsec with there not a road cutting in the waveform.
4. It is confirmed that RF LEVEL is 350~550mVp-p.
5. When there is disorder in the waveform road cuts etc, test disk is exchanged and measured.

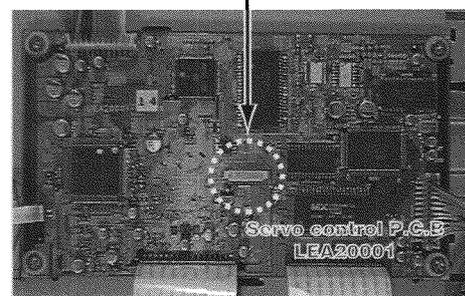


← FRONT SIDE


#### (4) Flap adjustment of disc motor

Equipment necessary for adjustment

- 1.Measurement machine  
Oscilloscope
2. D V D test disc  
VT-501
- 3.Video C D/CD-DA disc
- 4.Others  
General tool,Hex-head wrench(2mm)

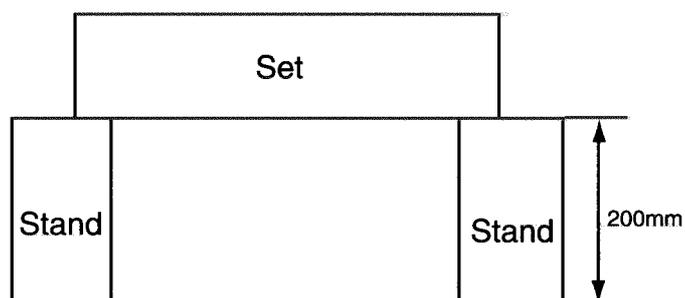

Position of flap adjustment machine screw

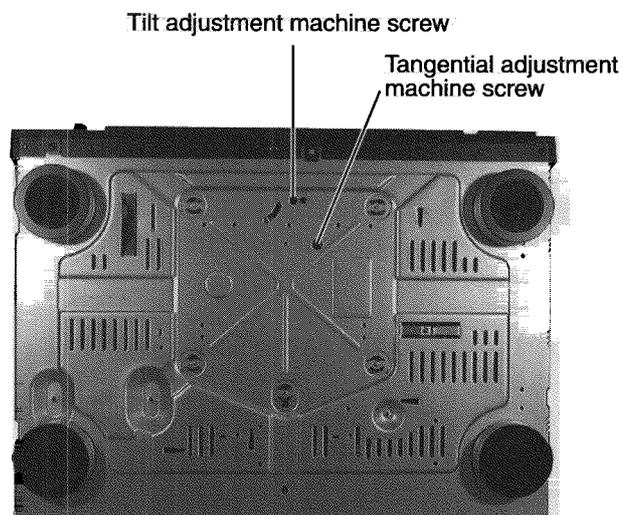

#### Point of adjustment

- \* Please execute the static electricity protection measures before starting the adjustment.
- \* When the following parts are exchanged,optical adjustment "Adjust the flap of the disc motor" is necessary.
  - 1.The disc motor was exchanged.
  - 2.The laser pick up was exchanged.
  - 3.The traverse motor unit was exchanged.

#### Note

Additionally, please adjust the flap of the disc motor when the picture quality deterioration is seen .The basic adjustment though, is unnecessary for part exchange in the traverse.  
An optical adjustment in the laser pick up cannot be done.  
Please adjust the flap of the disc motor after exchanging the laser pick up.

- \* When the traverse unit is exchanged, the adjustment is basically unnecessary.


Measurement	Adjustment part	Mode	Disc
CN103 pin"1" GND:Chassis	Flap adjustment screw	Reproduction part	VT-501
Measurement machine			
Oscilloscope			

"Flap adjustment" of the disc motor adjusts "Tangential adjustment machine screw" and "Tilt adjustment machine screw" from the main body bottom.

1. The part at the center on the DVD test disc is reproduced.
2. The flap adjustment screws is turned alternately and adjusted like clearly seeing the waveform of CN103"1" to the way.

**Note**

1. The tangential adjustment is done finish and, then, tilt is adjusted.
2. The repeat the adjustment 2-3 times, for best result.
3. The final adjustment should be tilt adjustment.

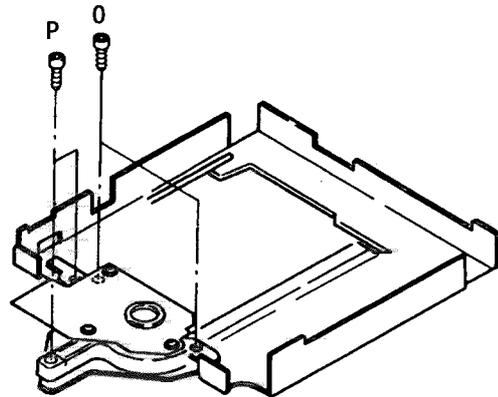

**Confirmation after adjustment.**

Confirm to reproduce video CD and CD-DA after the DVD test disc is adjusted and to find abnormality.


**(5) About keeping the disc**

As for the DVD test disc, plane accuracy is demanded. Please note the keeping place on the disc.


1. Please do not put the disc directly on the work desk etc. after uses .
2. To keep the planarity of the disc, politely handle ,and please put in a special case and keep the disc vertically after uses .  
Please keep keeping the disc in a cool place where direct sunshine and the air-conditioning wind do not drive.
3. When the disc curves, an accurate adjustment cannot be done.  
Please exchange for a new test disc and adjust optics.
- 4 Other discs might not be able to be reproduced when adjusting on a curved disc.

# Block diagrams


## ■ DVD SERVO CONTROL section

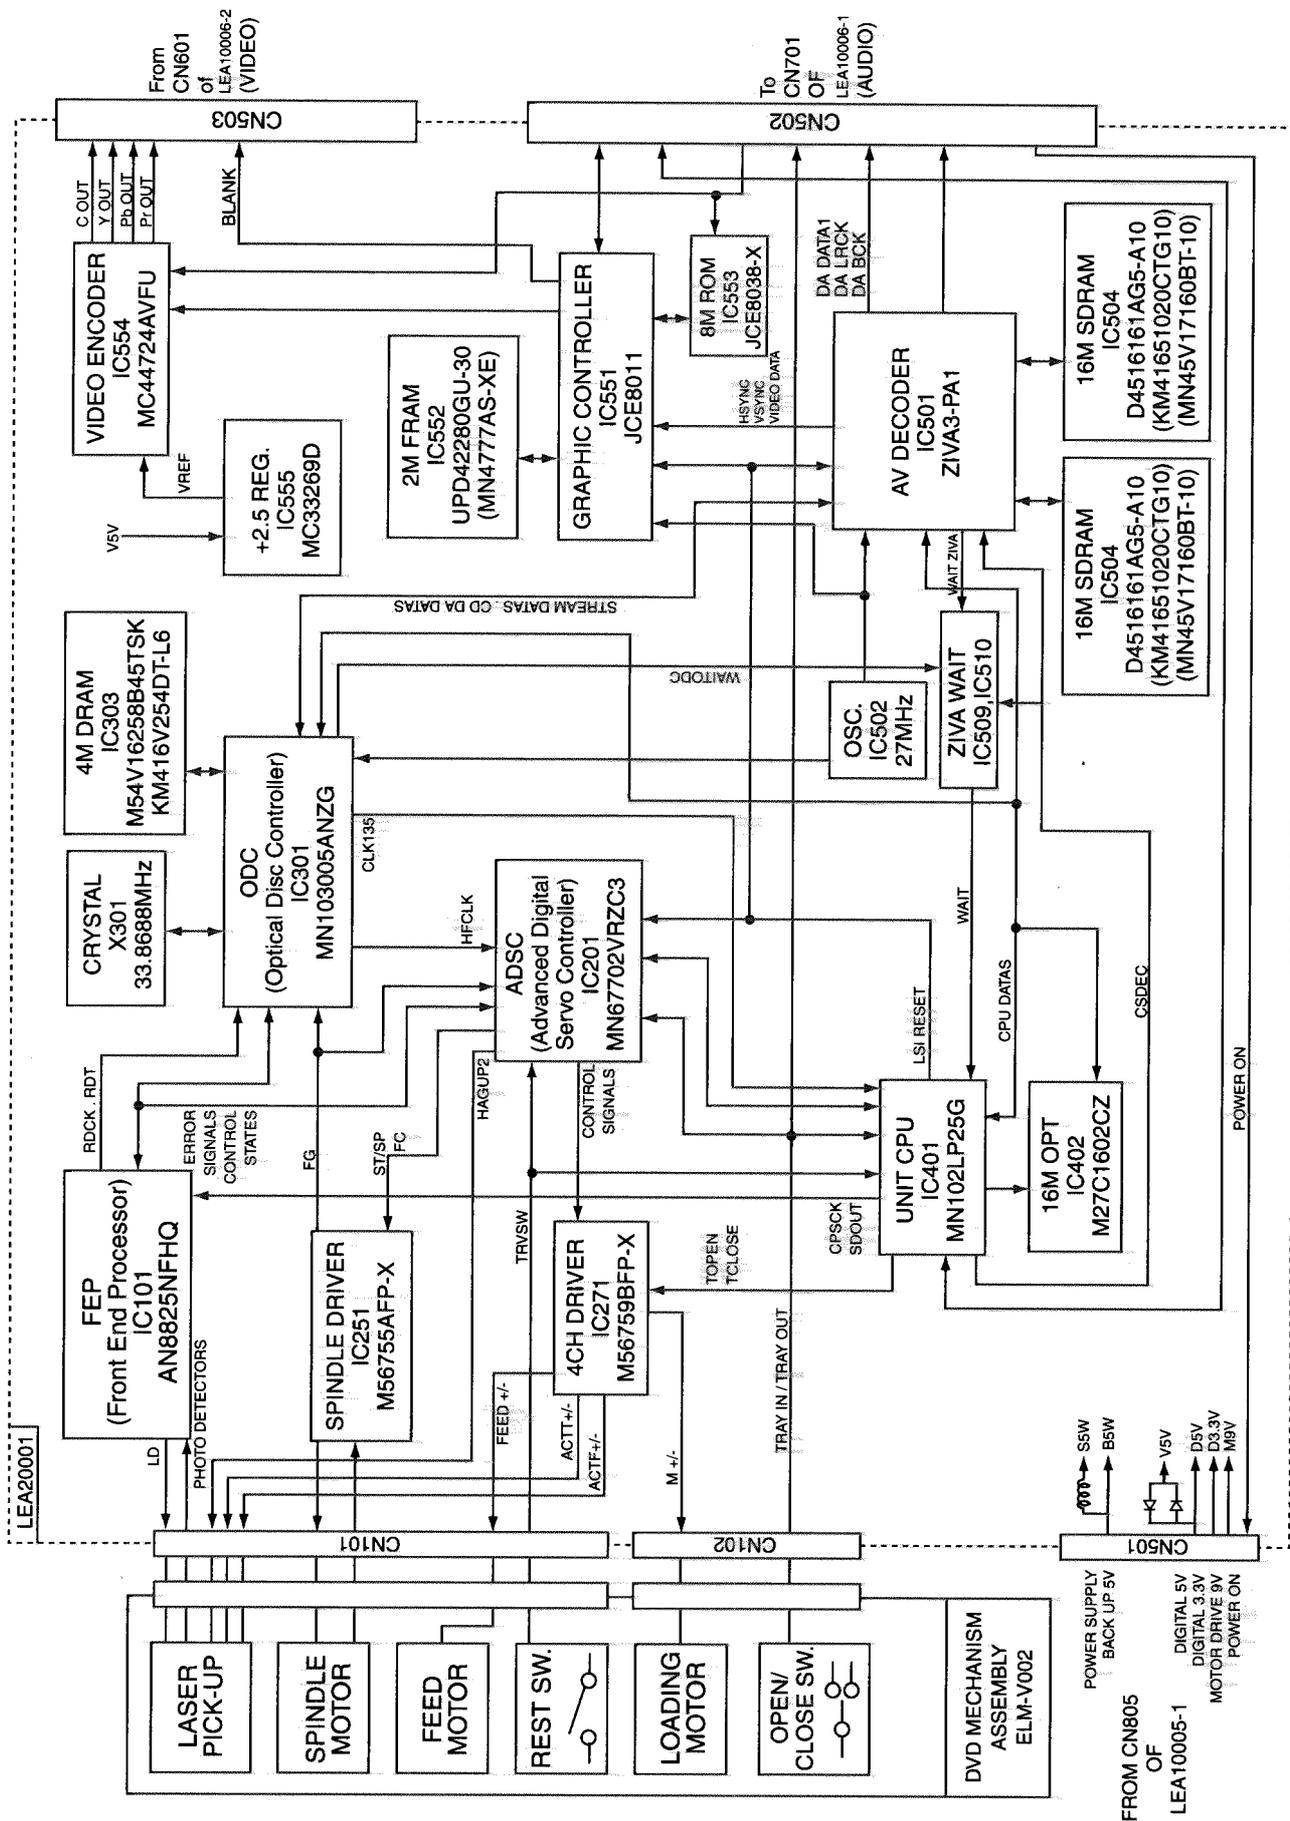

■ DC REGURATOR section

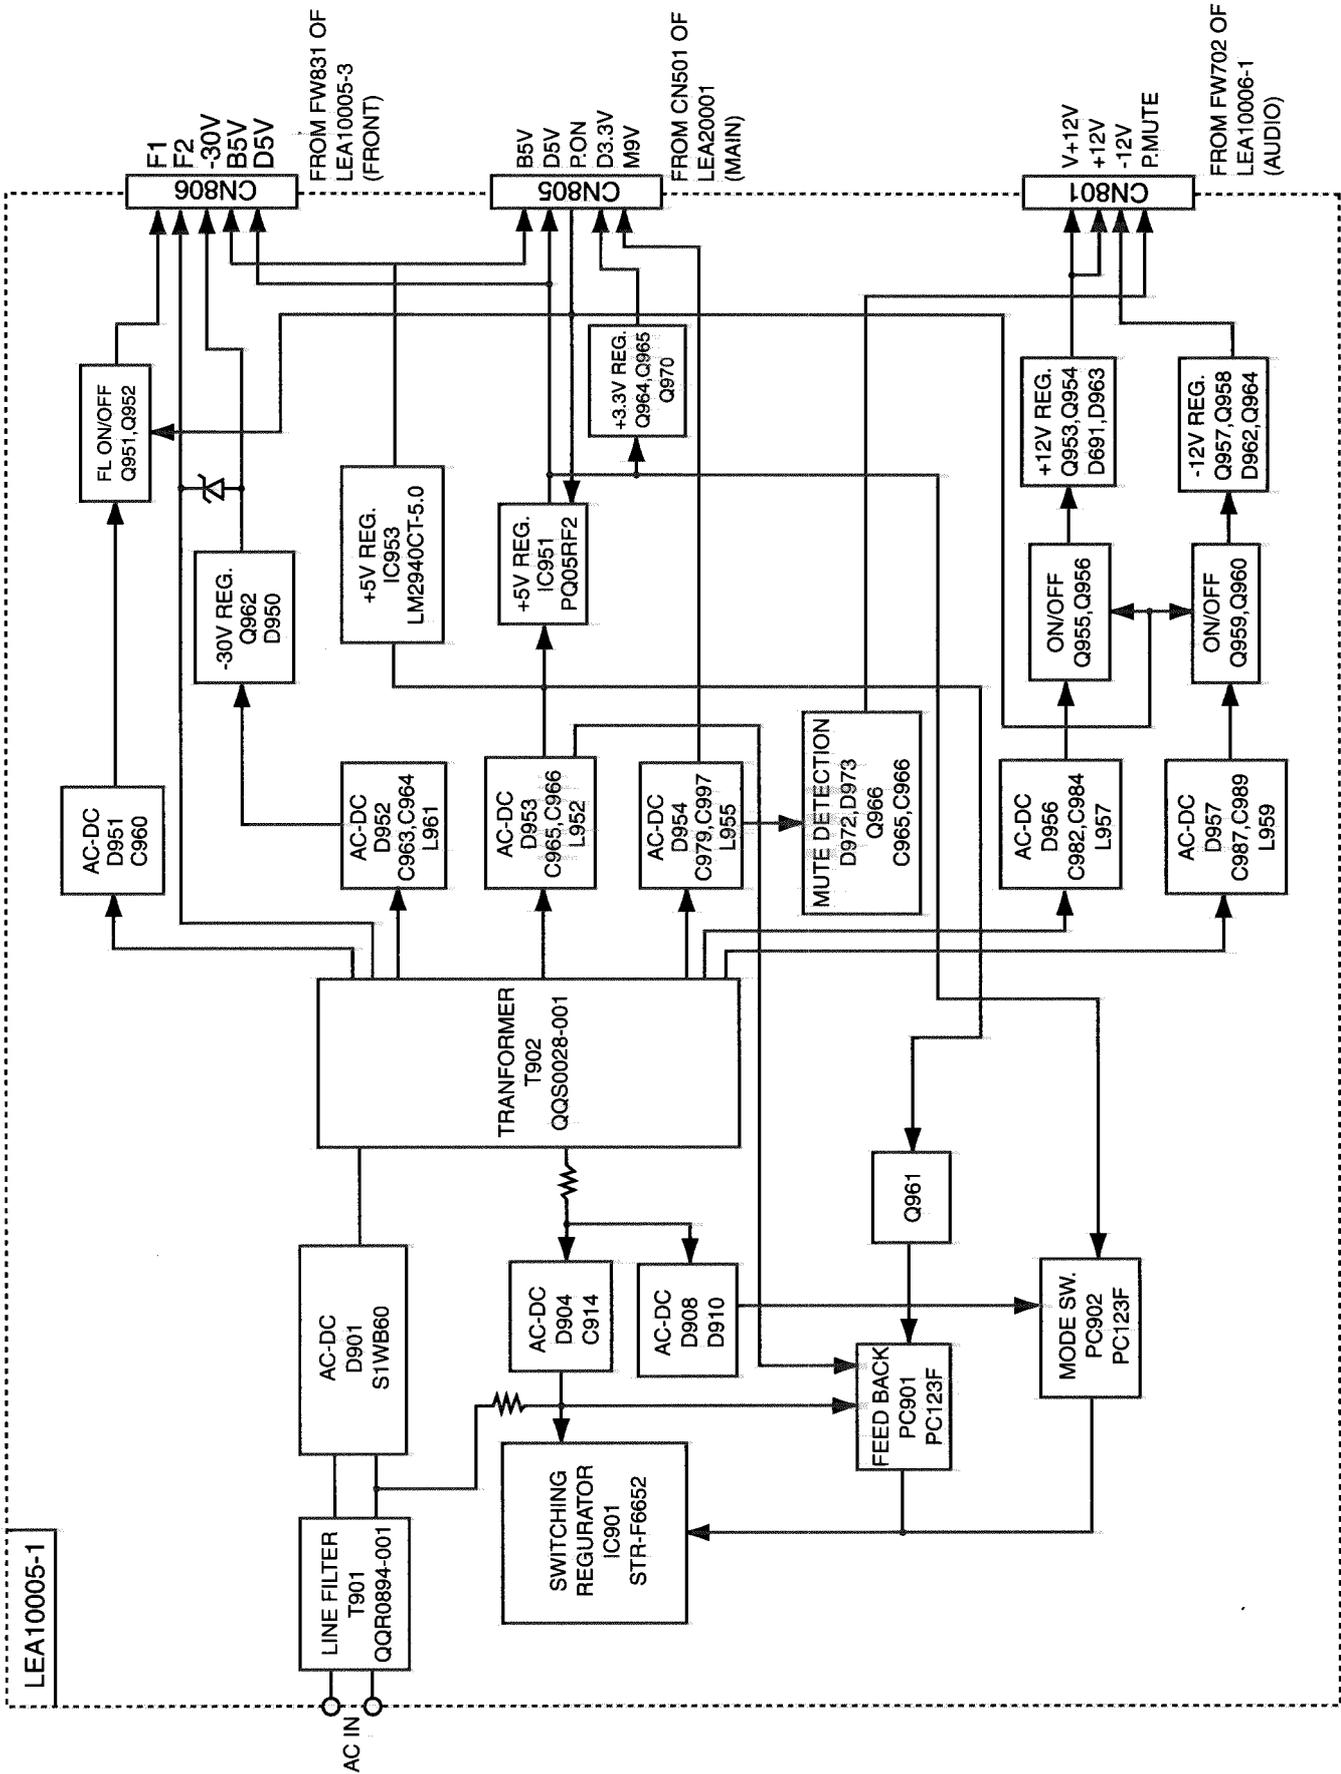

■ DC REGURATOR section

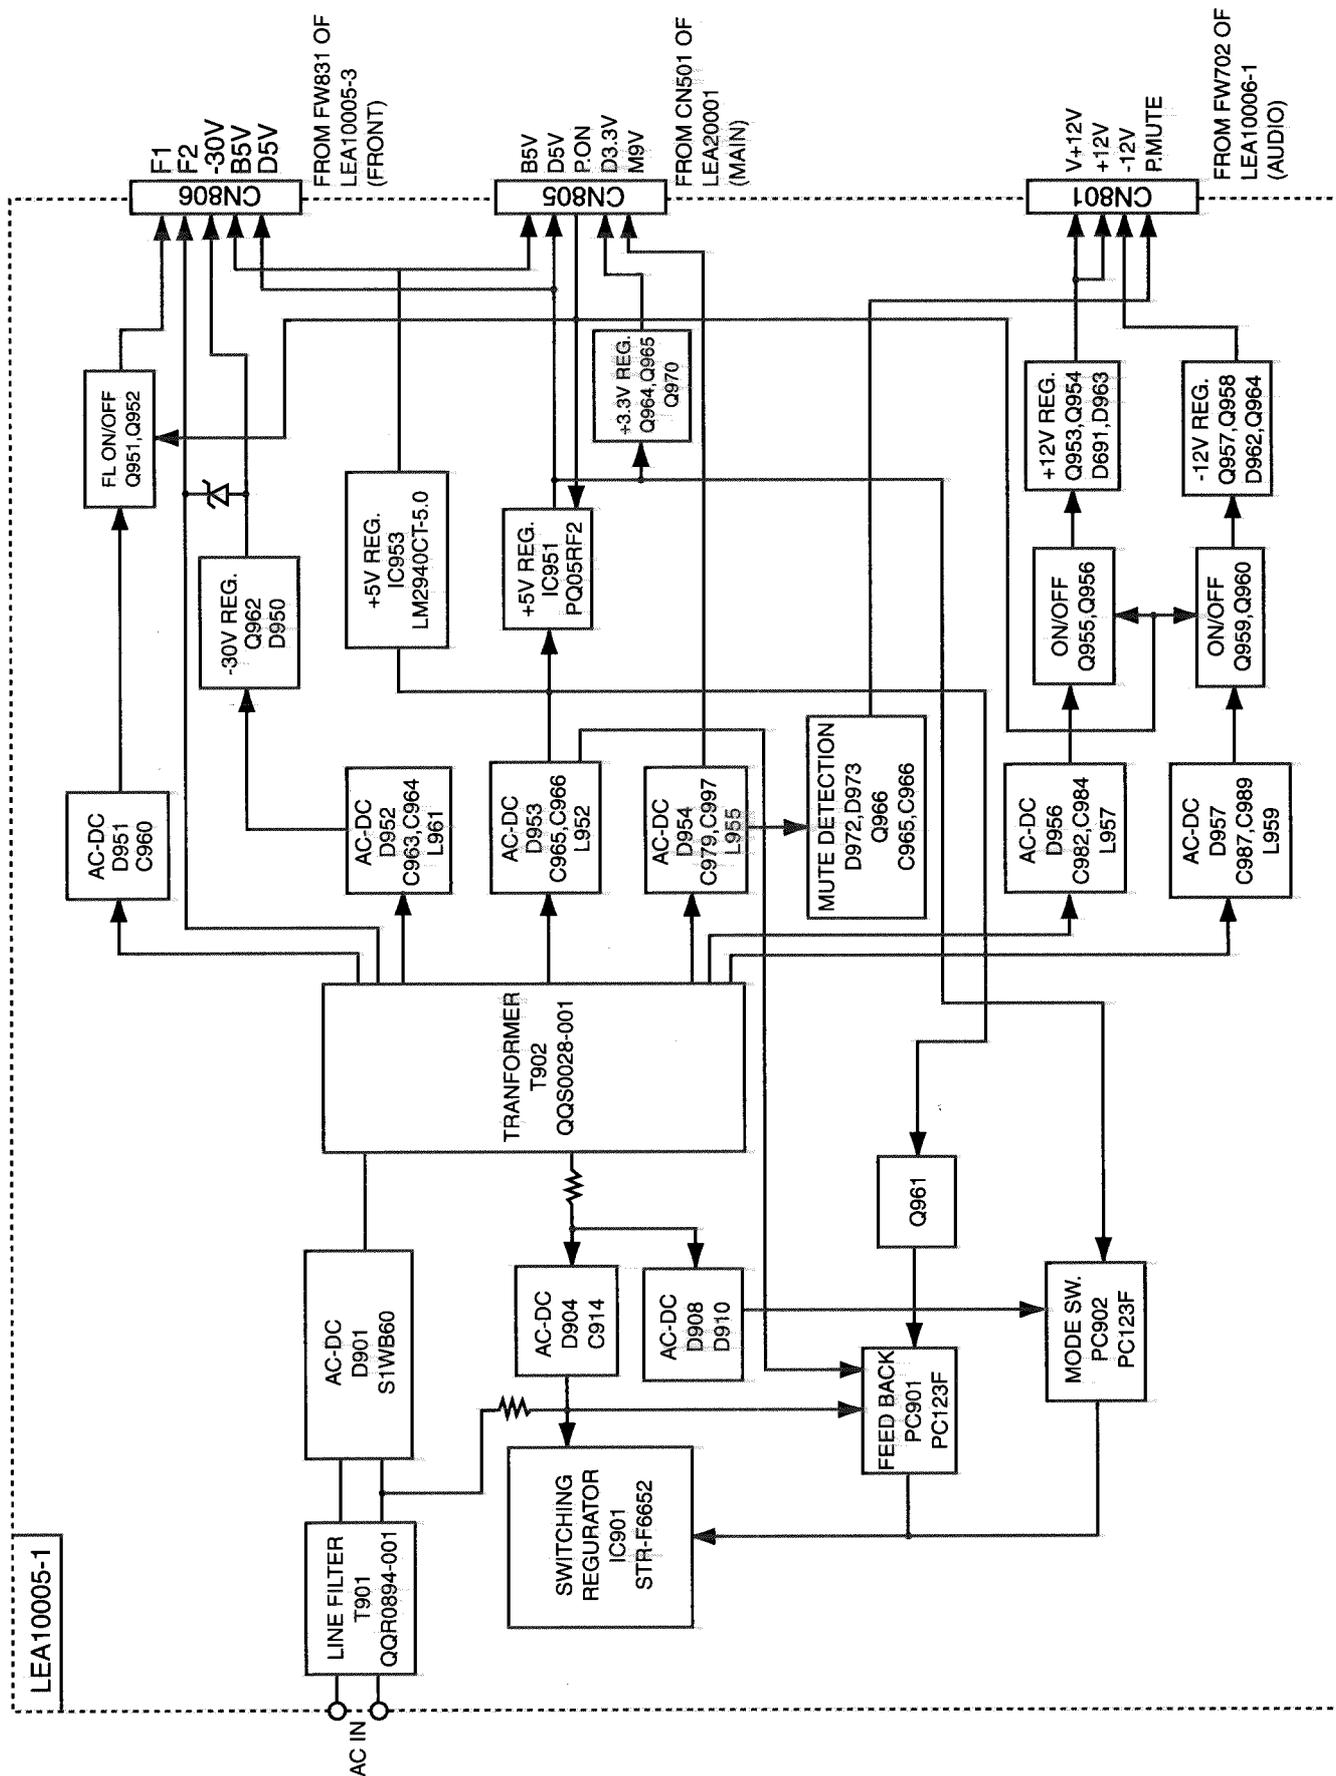



LEA10005-1

FROM FW831 OF  
LEA10005-3  
(FRONT)

FROM CN501 OF  
LEA20001  
(MAIN)

FROM FW702 OF  
LEA10006-1  
(AUDIO)

■ SYSTEM CONTROL & FL DRIVER section

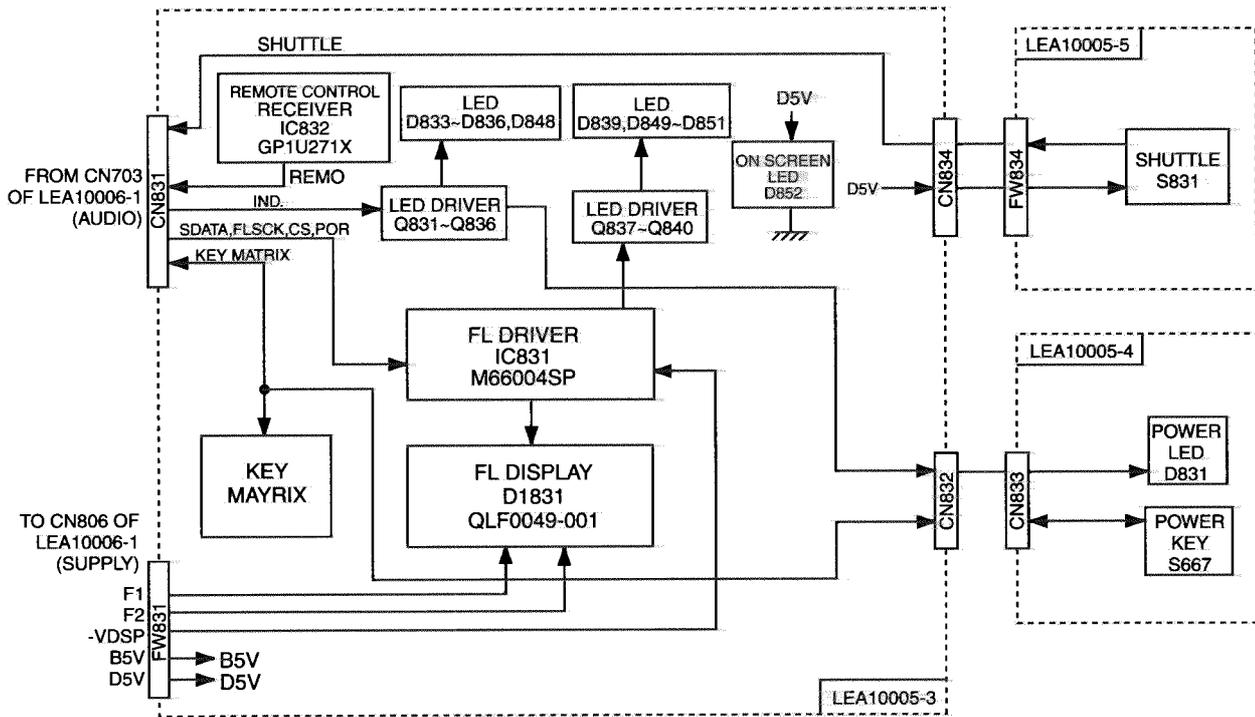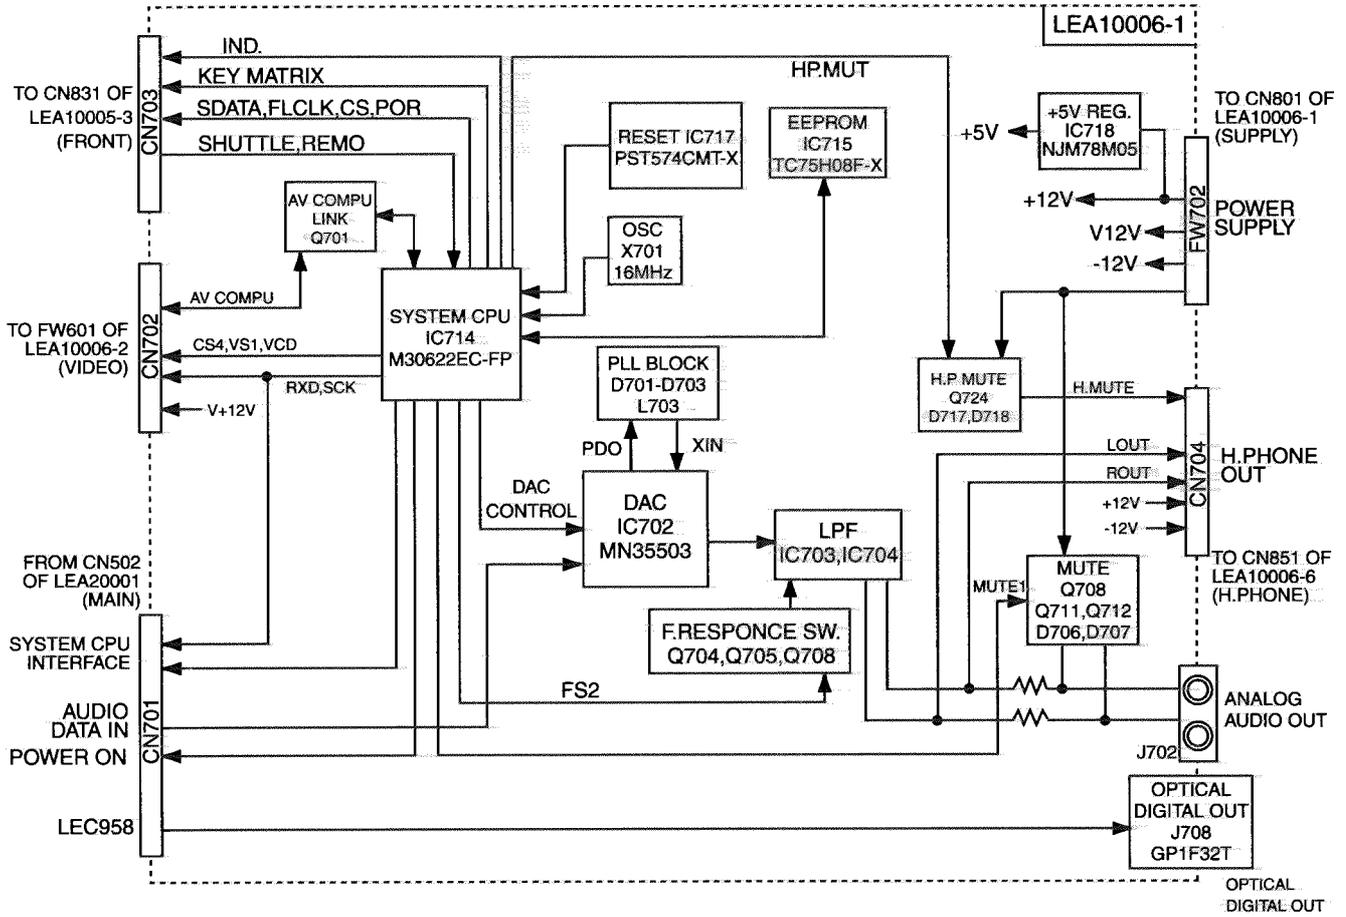



# Standard Schematic Diagrams

## FL Display & operation switch circuit

5

4

3



2

1

FROM CN703 OF  
LBA10007-A-1  
(SHBBT 4)

FROM CN806 OF  
LBA10005-A-1  
(SHBBT 2)

FROM CN704 OF  
LBA10007-A-1  
(SHBBT 4)

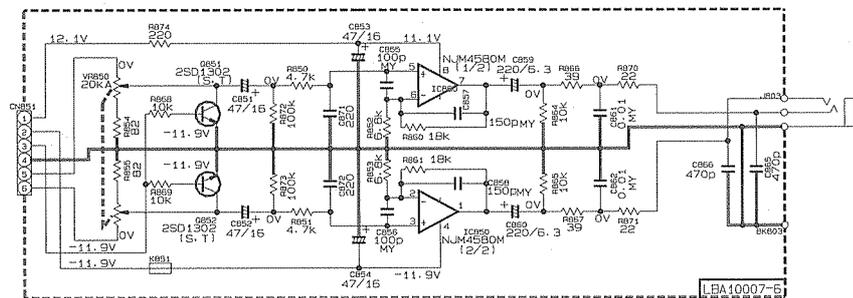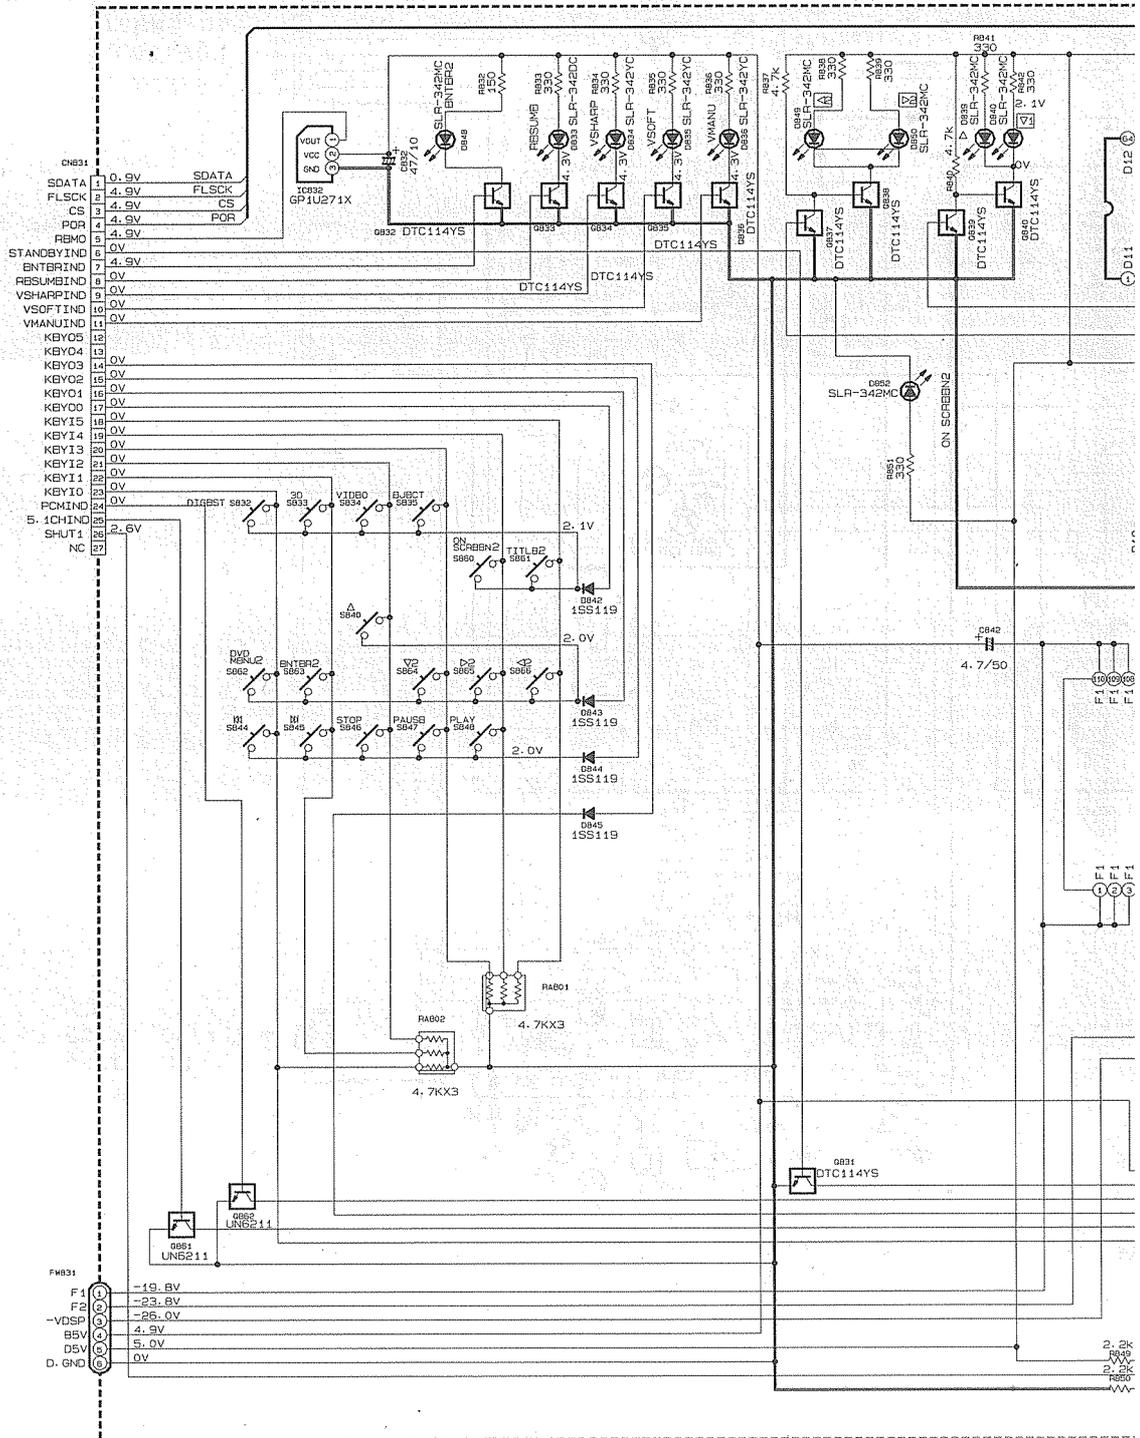


A

B


C


D

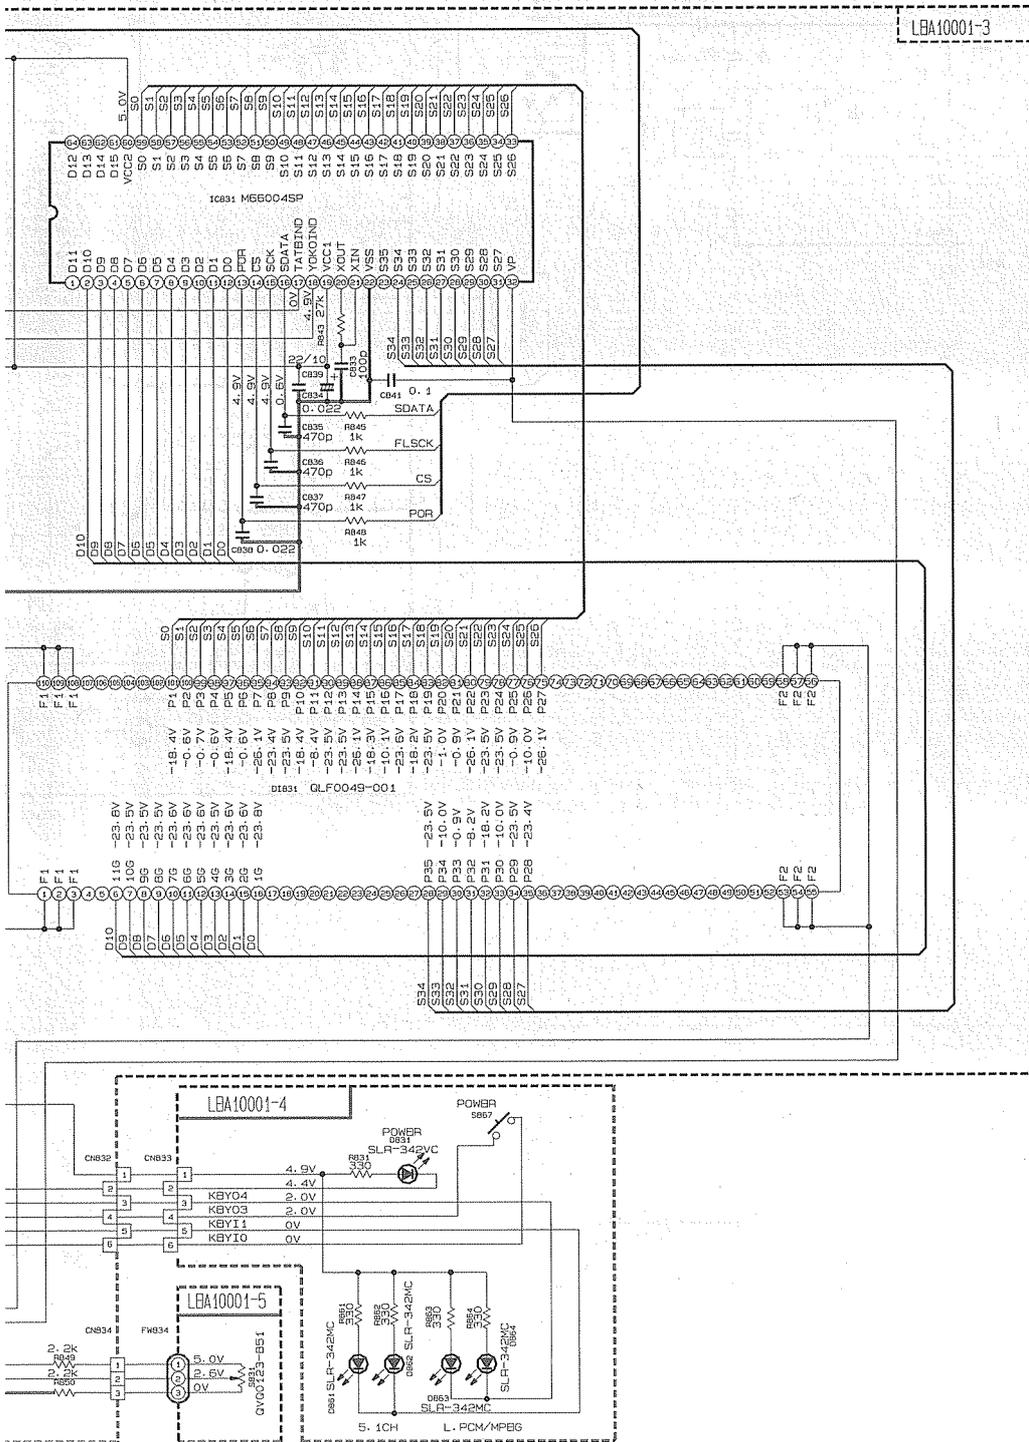

■ Power supply circuit

5  
4  
3  
2  
1

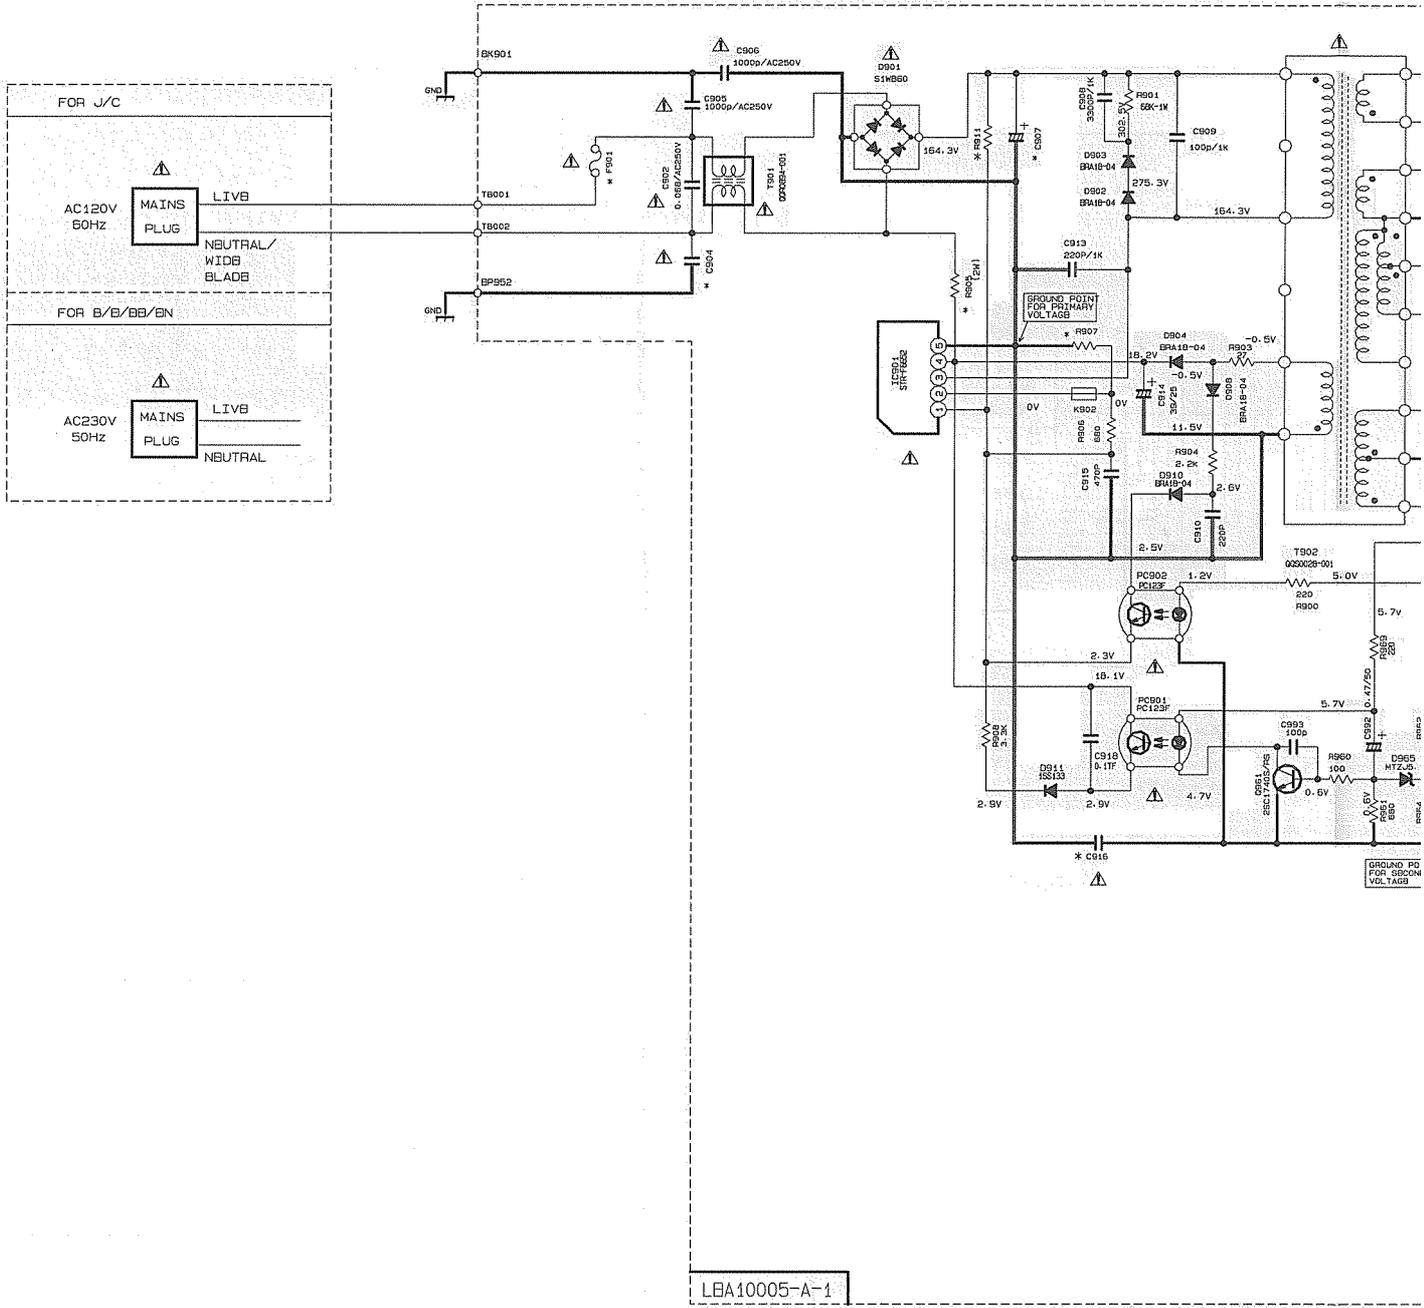

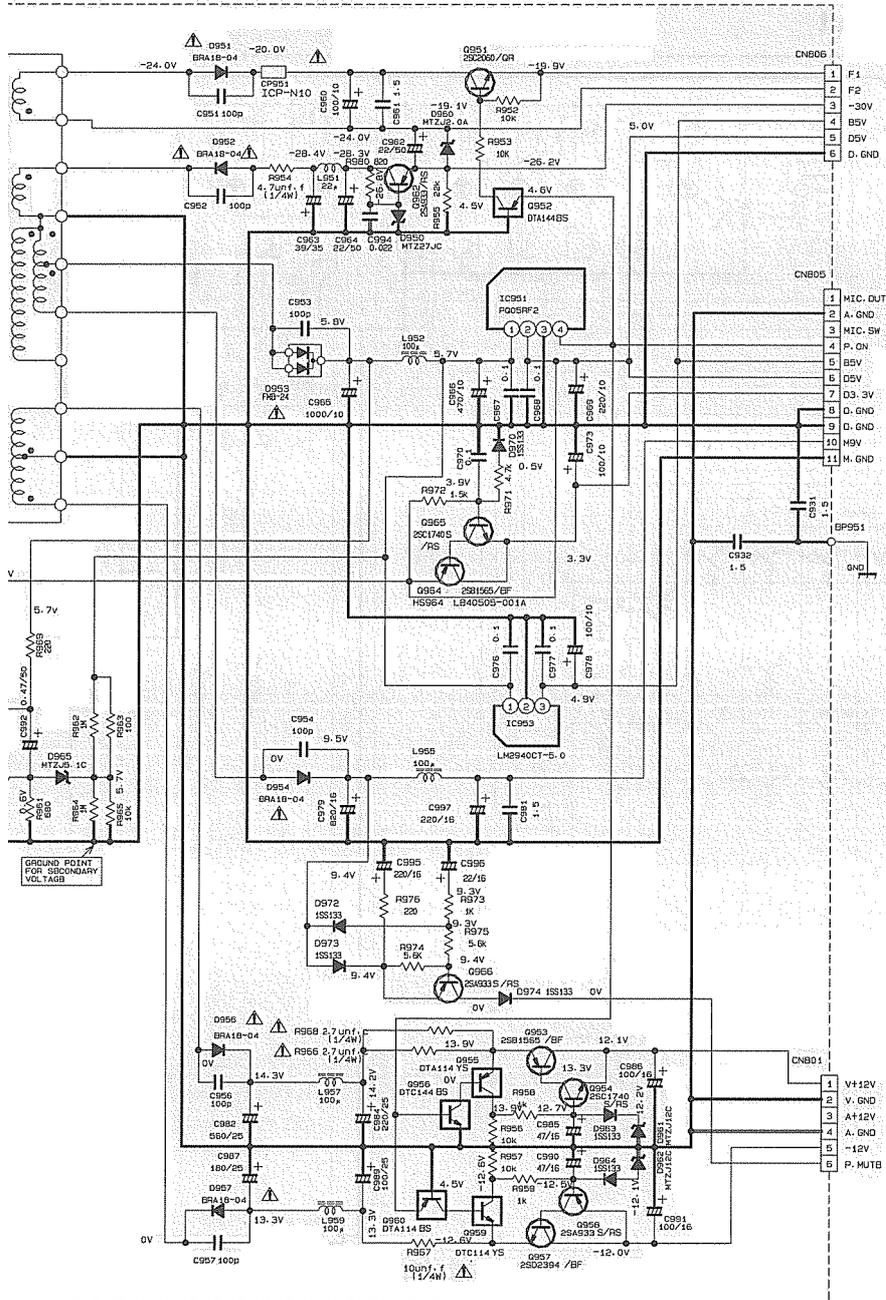

TO FWB31 OF  
LBA10005-3  
(SHBTT 1)

TO CN501 OF  
LBA20001-A  
(SHBTT 5)

TO FW702 OF  
LBA10006-1  
(SHBTT 4)

**\*MARK**

Symbol	Ver	J/C	B. B. DN
C904	1000p	/AC250V	NOT USB
R905	68k(2W)		100k(2W)
R907	0.47(2W)		0.56(2W)
C907	150/200		60/400
F901	1.6A-125V		7800mA
R911	1.5M		NOT USB
C916	4700p	/AC250V	

\*CAUTION  
LISTED VOLTAGE IS IN CASE OF AC INPUT 120V

# Signal demodulator & servo control circuit

5

4

3

2

1

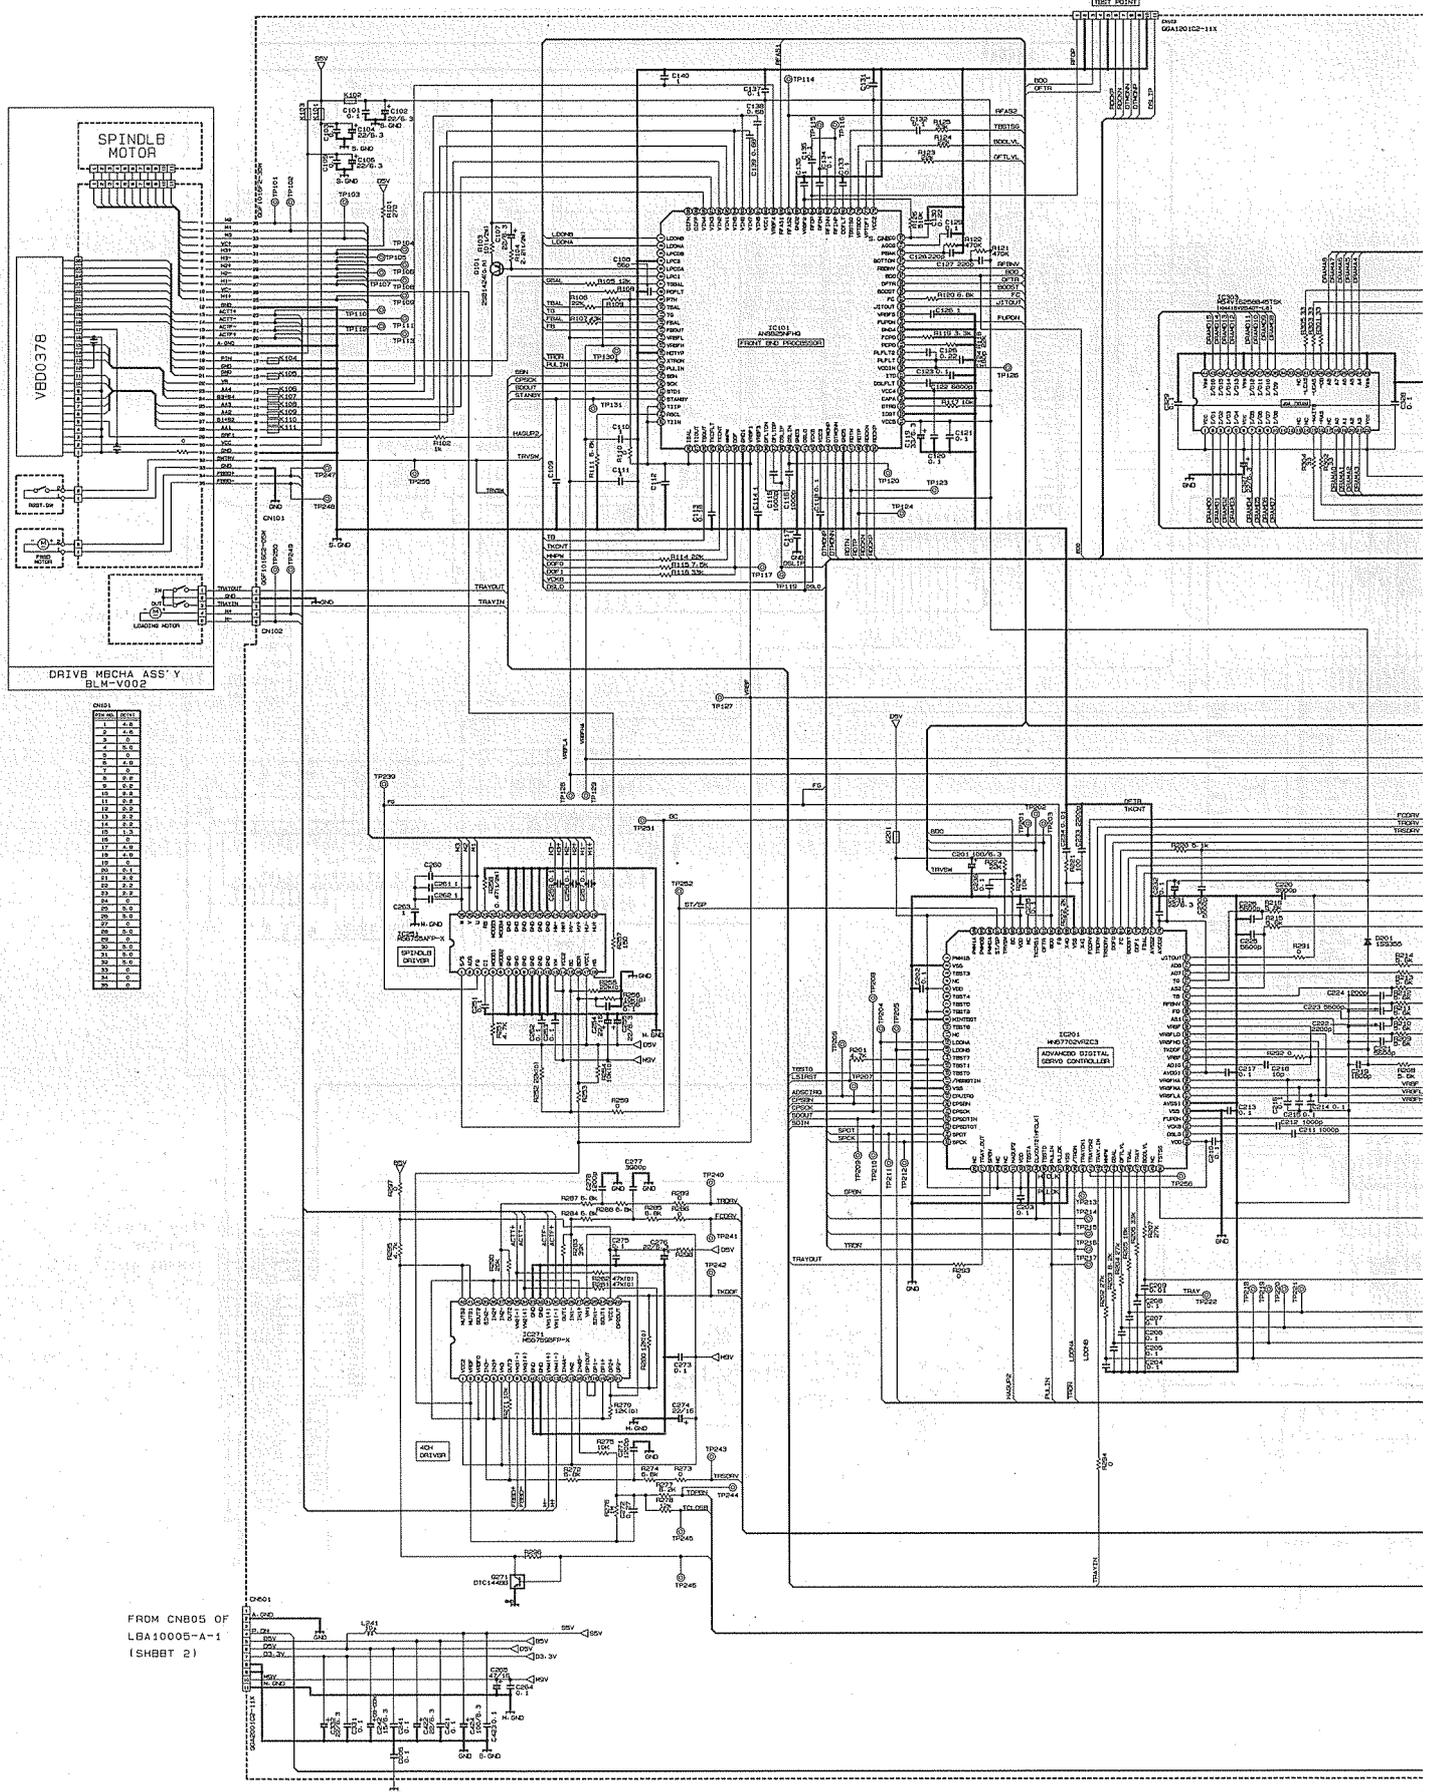



Table with 2 columns: CN01, and values for pins 1 through 30.

CN01	1	2.2
	2	2.2
	3	2.2
	4	2.2
	5	2.2
	6	2.2
	7	2.2
	8	2.2
	9	2.2
	10	2.2
	11	2.2
	12	2.2
	13	2.2
	14	2.2
	15	2.2
	16	2.2
	17	2.2
	18	2.2
	19	2.2
	20	2.2
	21	2.2
	22	2.2
	23	2.2
	24	2.2
	25	2.2
	26	2.2
	27	2.2
	28	2.2
	29	2.2
	30	2.2

FROM CNB05 OF  
LBA10005-A-1  
(SHBT 2)

LBA20001-A (1/2)

TO SHBBT6(3)

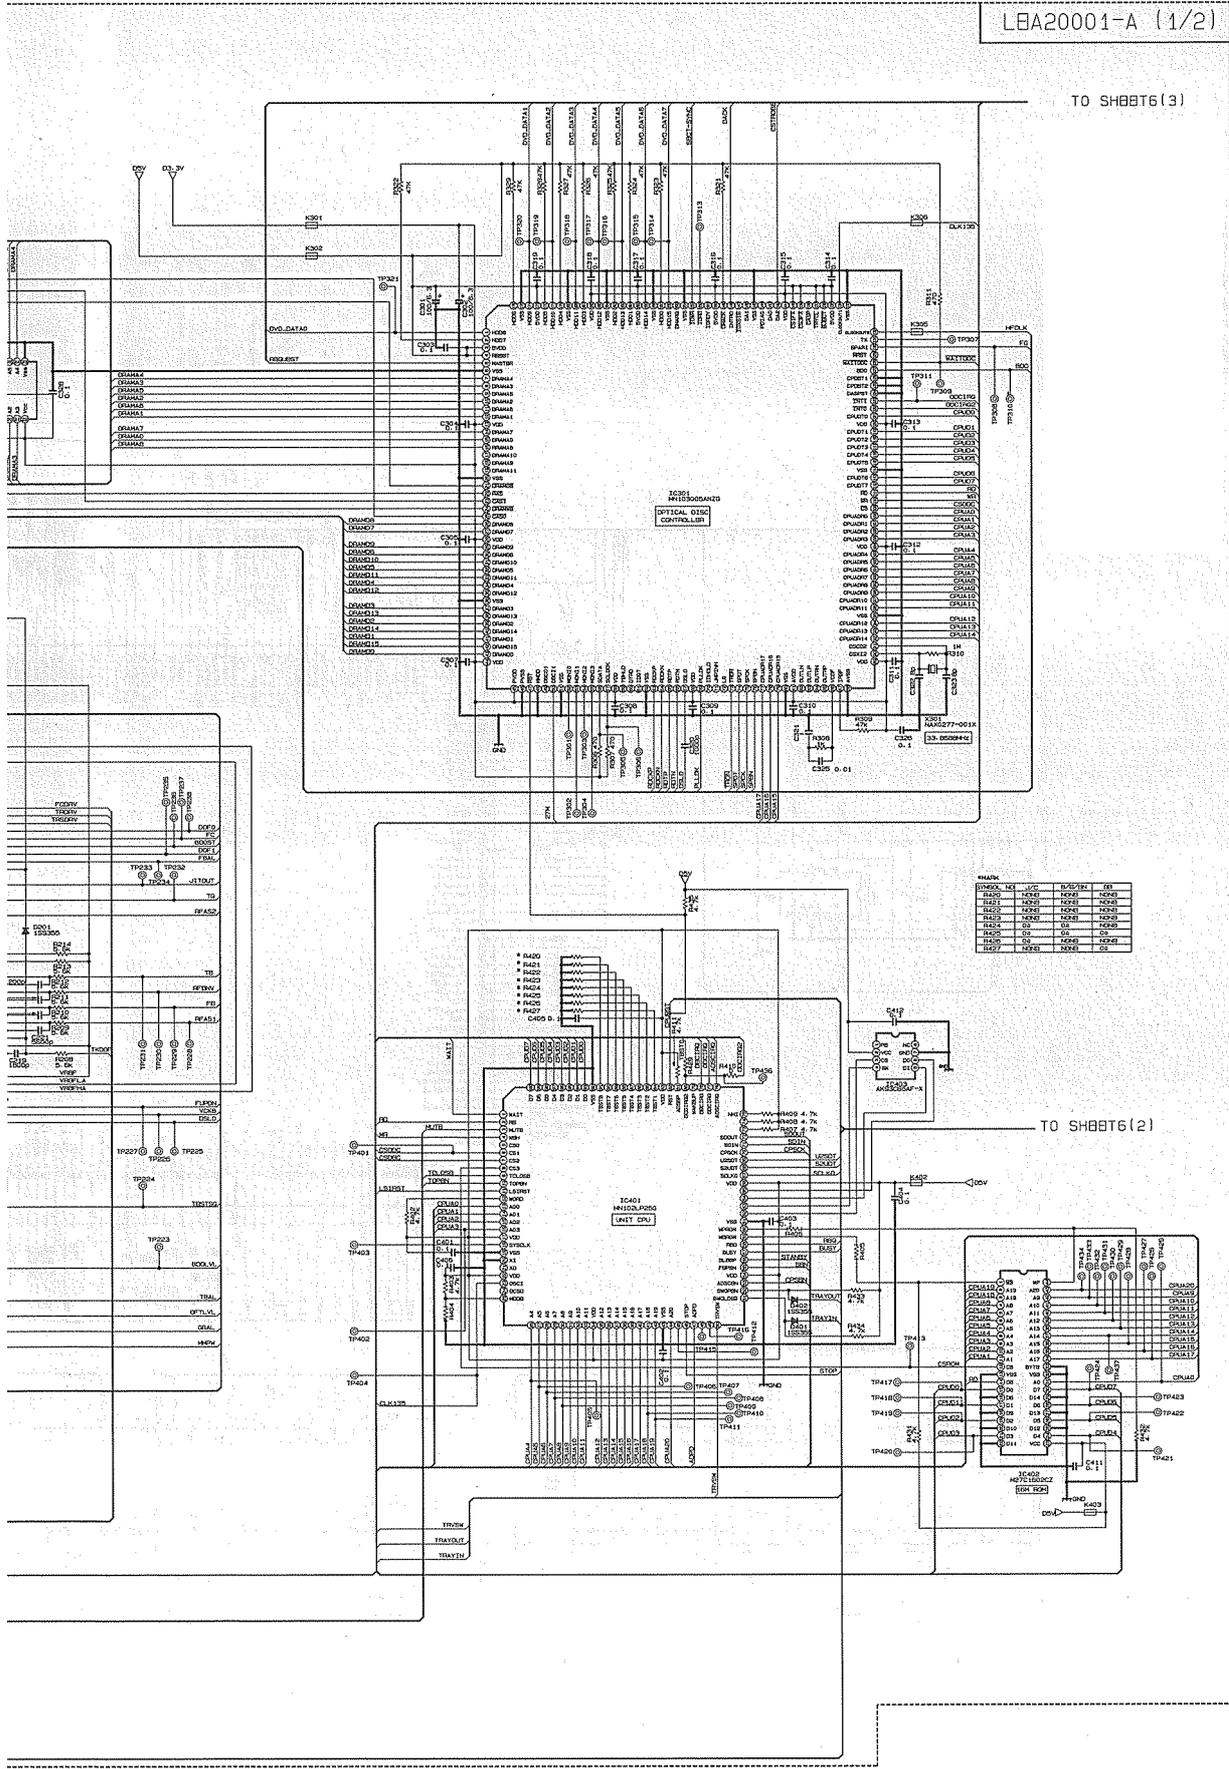

MARK	VAL	REF	VAL	REF
R100	10K	R101	10K	R102
R103	10K	R104	10K	R105
R106	10K	R107	10K	R108
R109	10K	R110	10K	R111
R112	10K	R113	10K	R114
R115	10K	R116	10K	R117
R118	10K	R119	10K	R120
R121	10K	R122	10K	R123
R124	10K	R125	10K	R126
R127	10K	R128	10K	R129
R130	10K	R131	10K	R132
R133	10K	R134	10K	R135
R136	10K	R137	10K	R138
R139	10K	R140	10K	R141
R142	10K	R143	10K	R144
R145	10K	R146	10K	R147
R148	10K	R149	10K	R150
R151	10K	R152	10K	R153
R154	10K	R155	10K	R156
R157	10K	R158	10K	R159
R160	10K	R161	10K	R162
R163	10K	R164	10K	R165
R166	10K	R167	10K	R168
R169	10K	R170	10K	R171
R172	10K	R173	10K	R174
R175	10K	R176	10K	R177
R178	10K	R179	10K	R180
R181	10K	R182	10K	R183
R184	10K	R185	10K	R186
R187	10K	R188	10K	R189
R190	10K	R191	10K	R192
R193	10K	R194	10K	R195
R196	10K	R197	10K	R198
R199	10K	R200	10K	R201

TO SHBBT6(2)

Decoder & Graphic controller circuit

LEA20001-A (2/2)

5

4


3

2

1

FROM SHBT5(2)

FROM SHBT5(3)

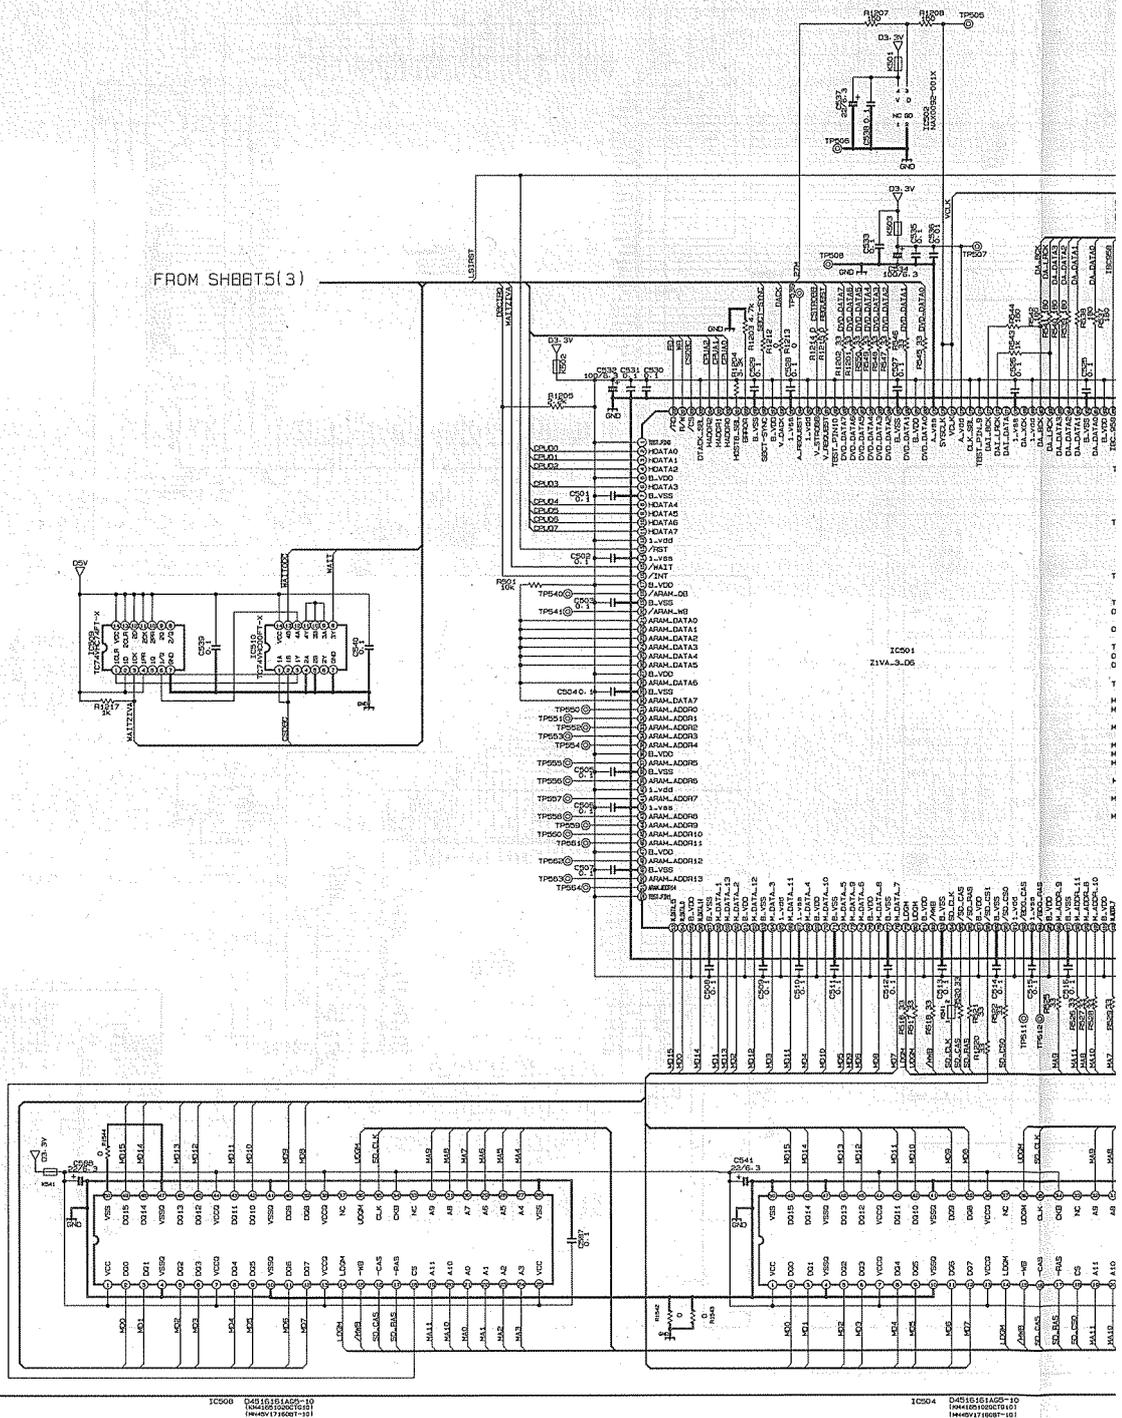


A

B

C

2-60

D

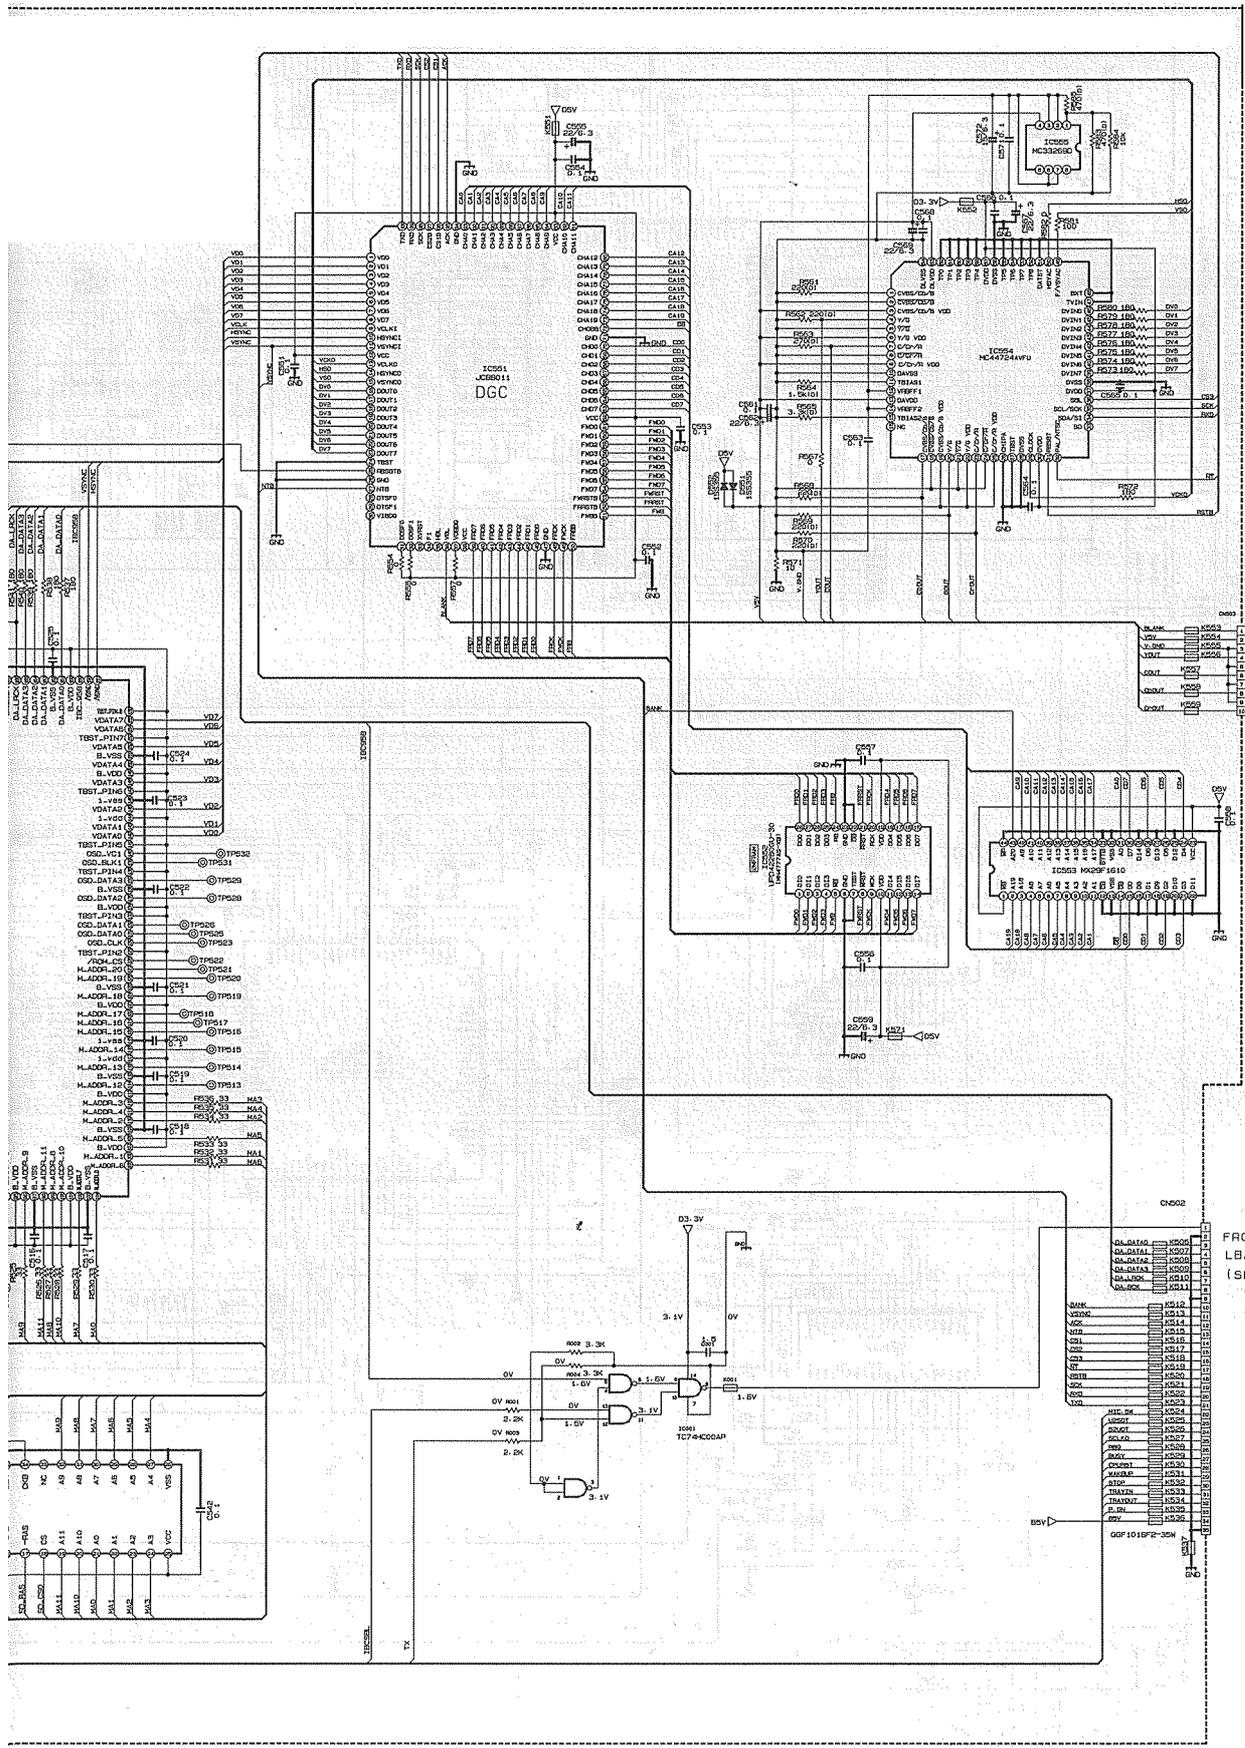

FROM CN501 OF  
LBA10006-2  
(SHBTT 3)


FROM CN701 OF  
LBA10006-A-1  
(SHBTT 4)

# Video Terminal circuit

5  
4  
3  
2  
1

FROM CN503 OF  
LEA20001-A  
(SHEET 6)


FROM CN702 OF  
LEA10007-1  
(SHEET 4)

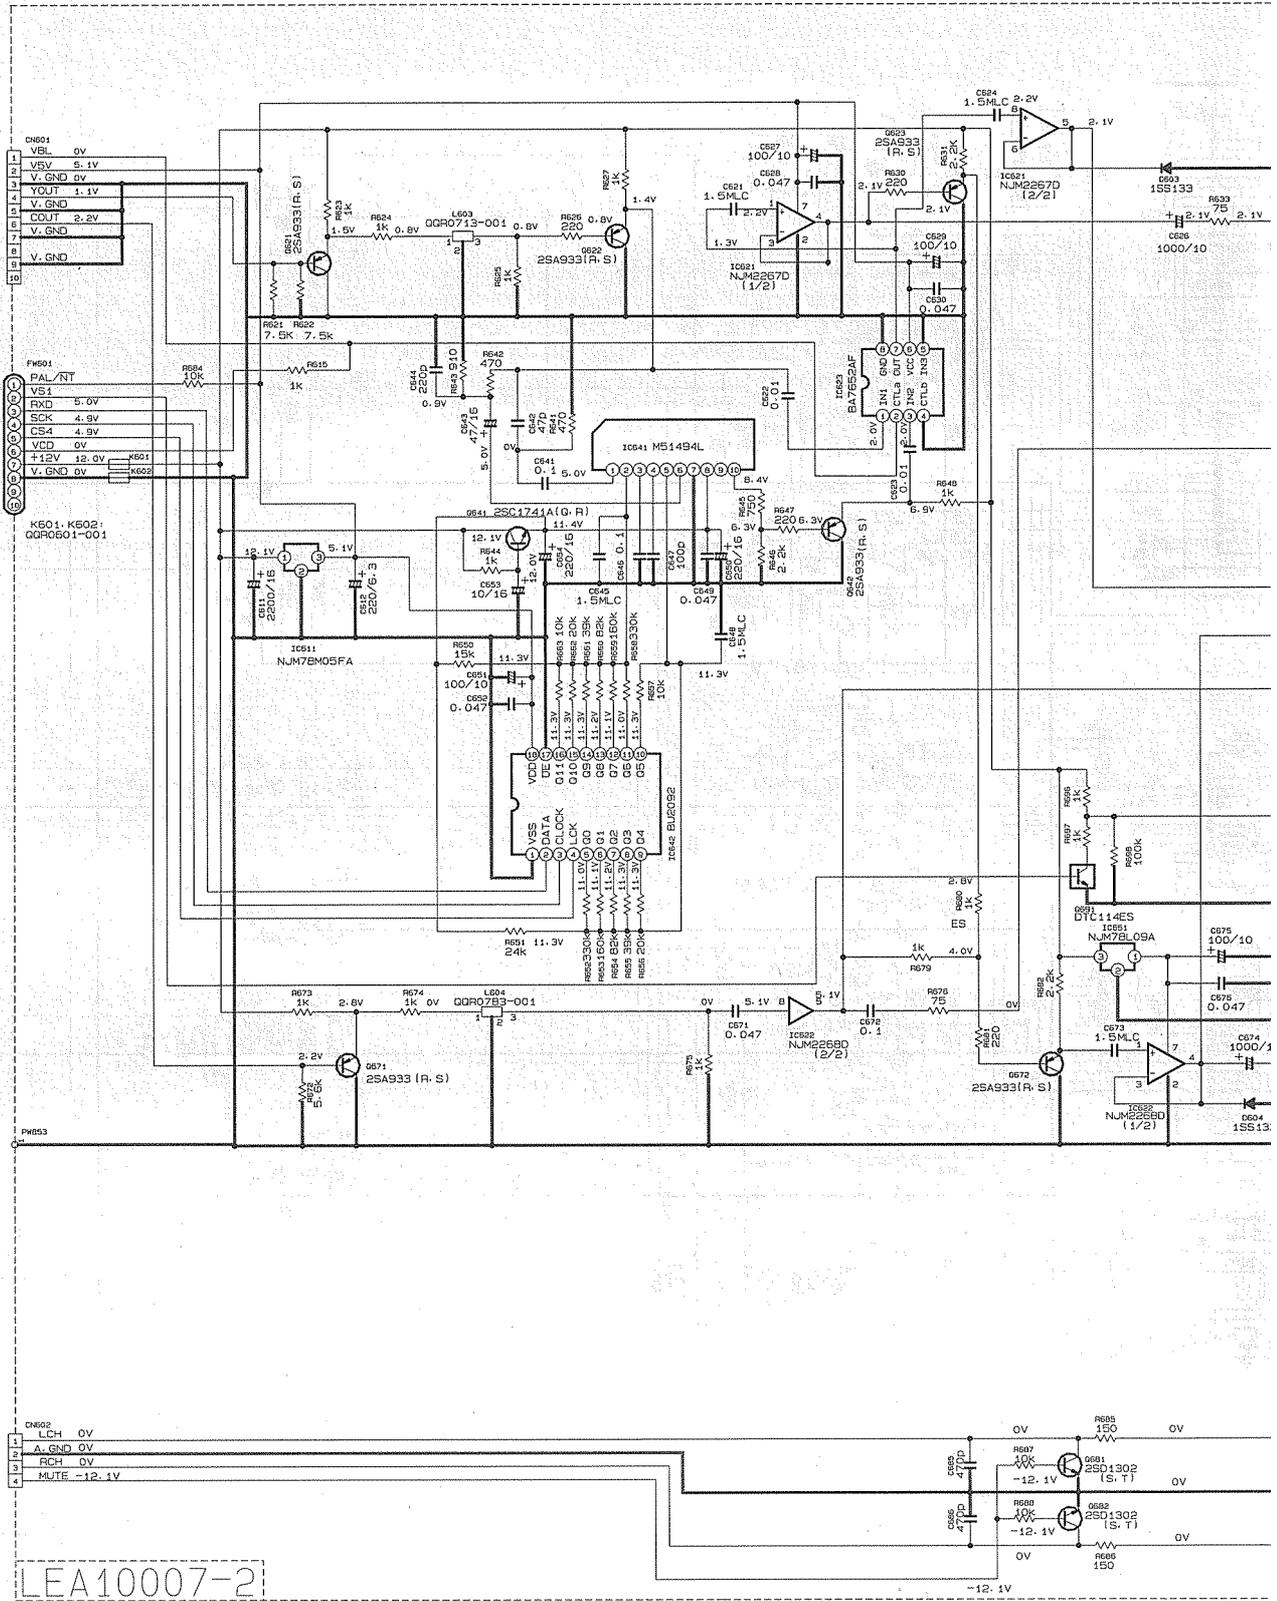

FROM FW703 OF  
LEA10007-1  
(SHEET 4)

LEA10007-2

A B C D

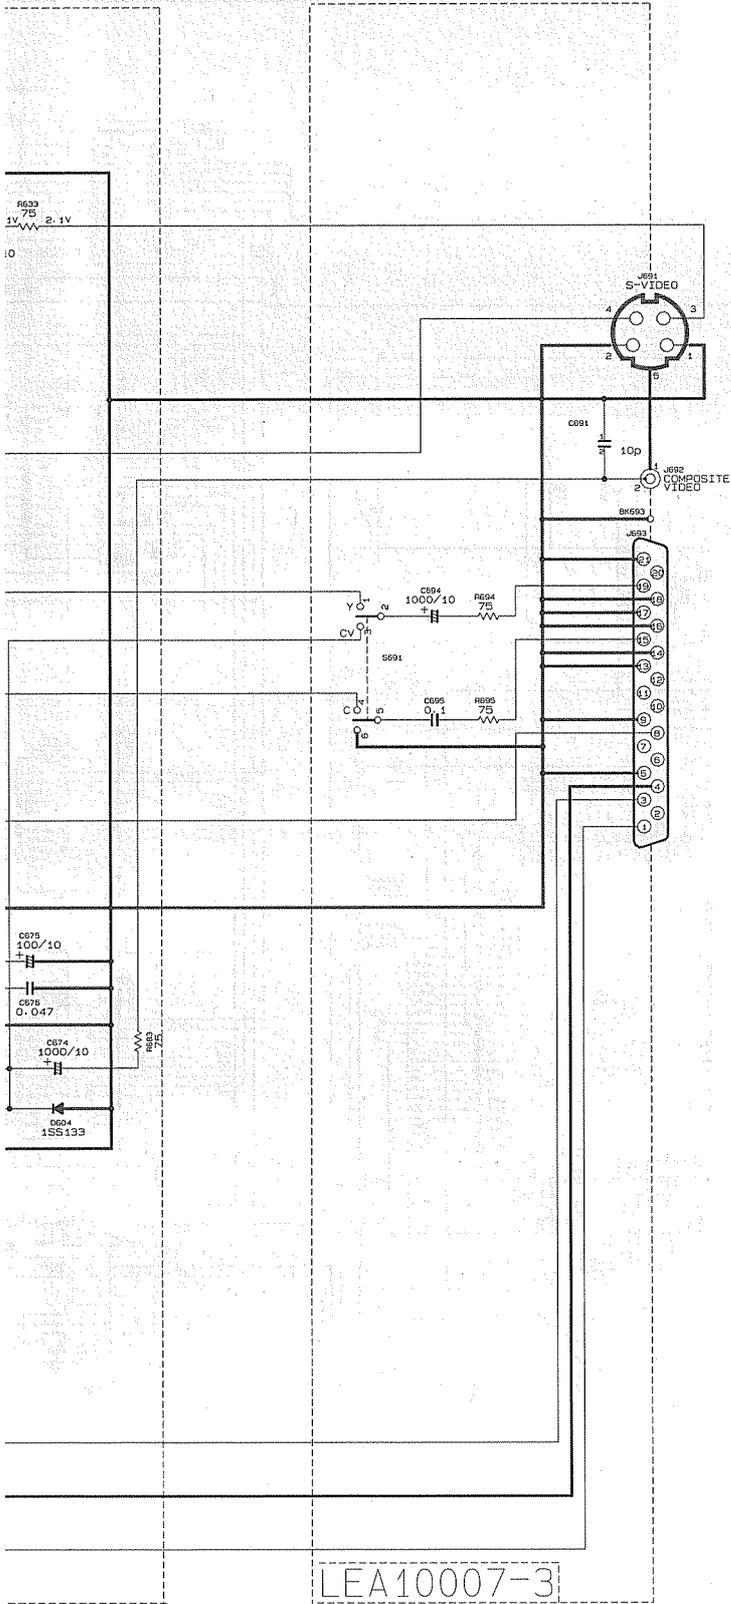

LEA10007-3

■ Audio circuit

5  
4  
3  
2  
1

TO CN502 OF LBA20001-A (SHBTT 5)

TO CN803 OF LBA10005-2 (SHBTT 2)


TO FW601 OF LBA10006-2 (SHBTT 3)


TO CN831 OF LBA10005-3 (SHBTT 4)

TO CN851 OF LBA10005-6 (SHBTT 1)

FROM CN802 OF LBA10005-2 (SHBTT 2)

LBA10007-A-1

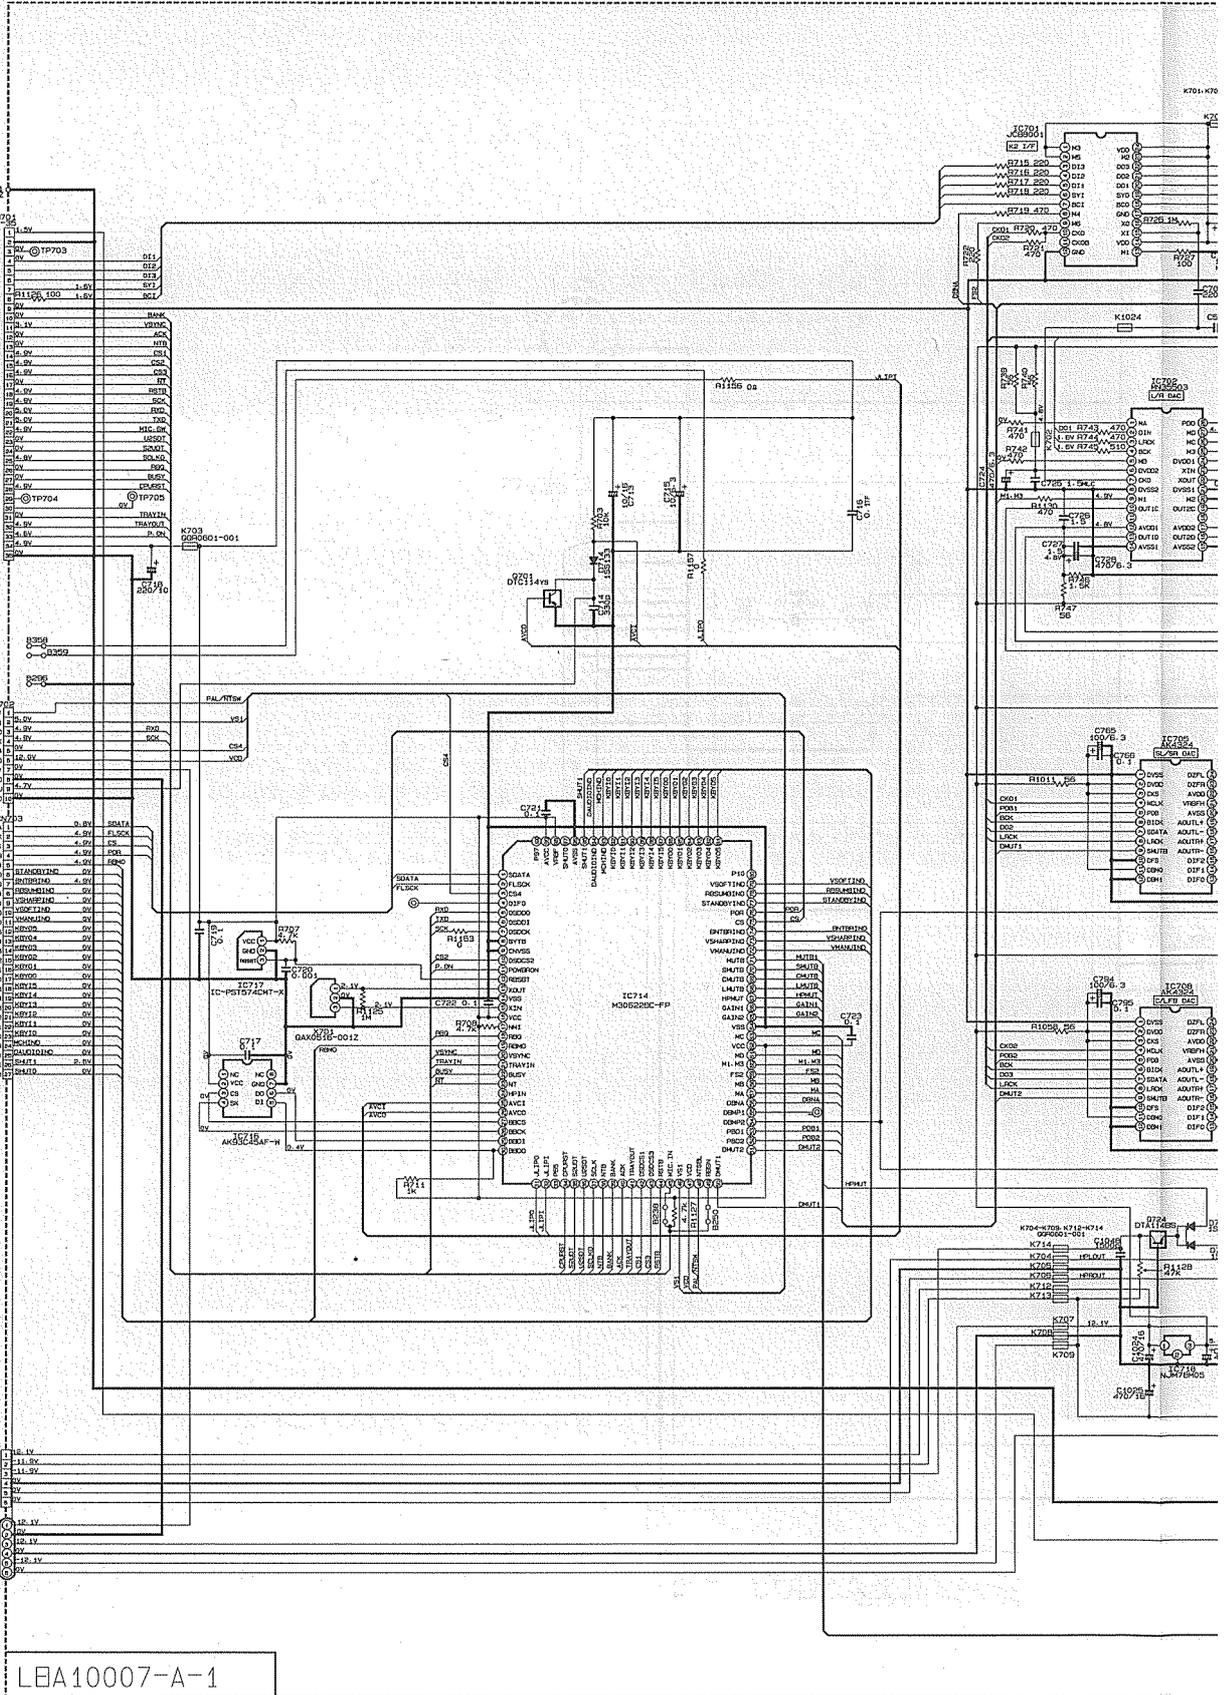

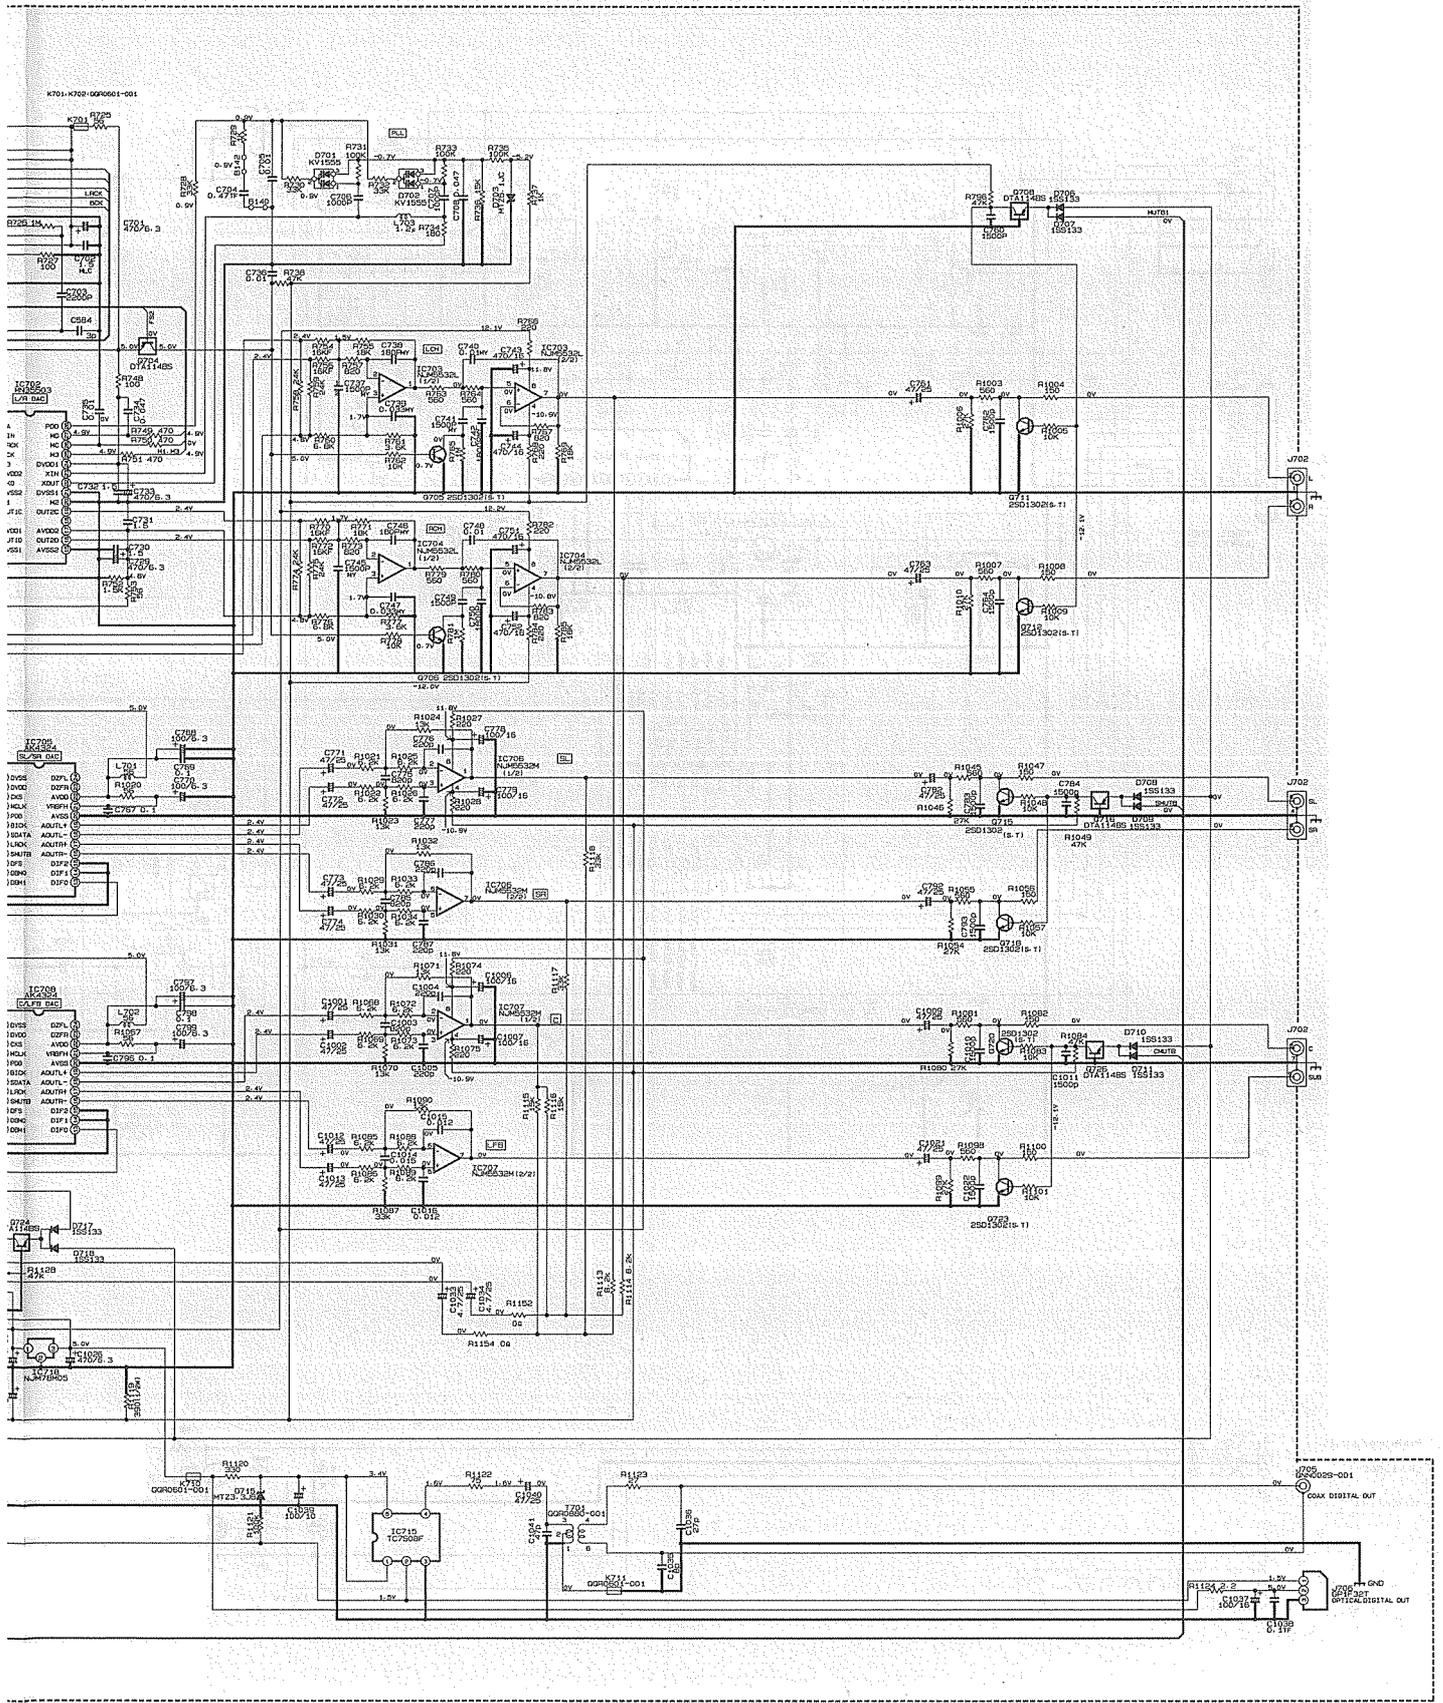

D | E | F | G | H

# Printed circuit boards

## ■ Audio & video board


5

4


3

2

1

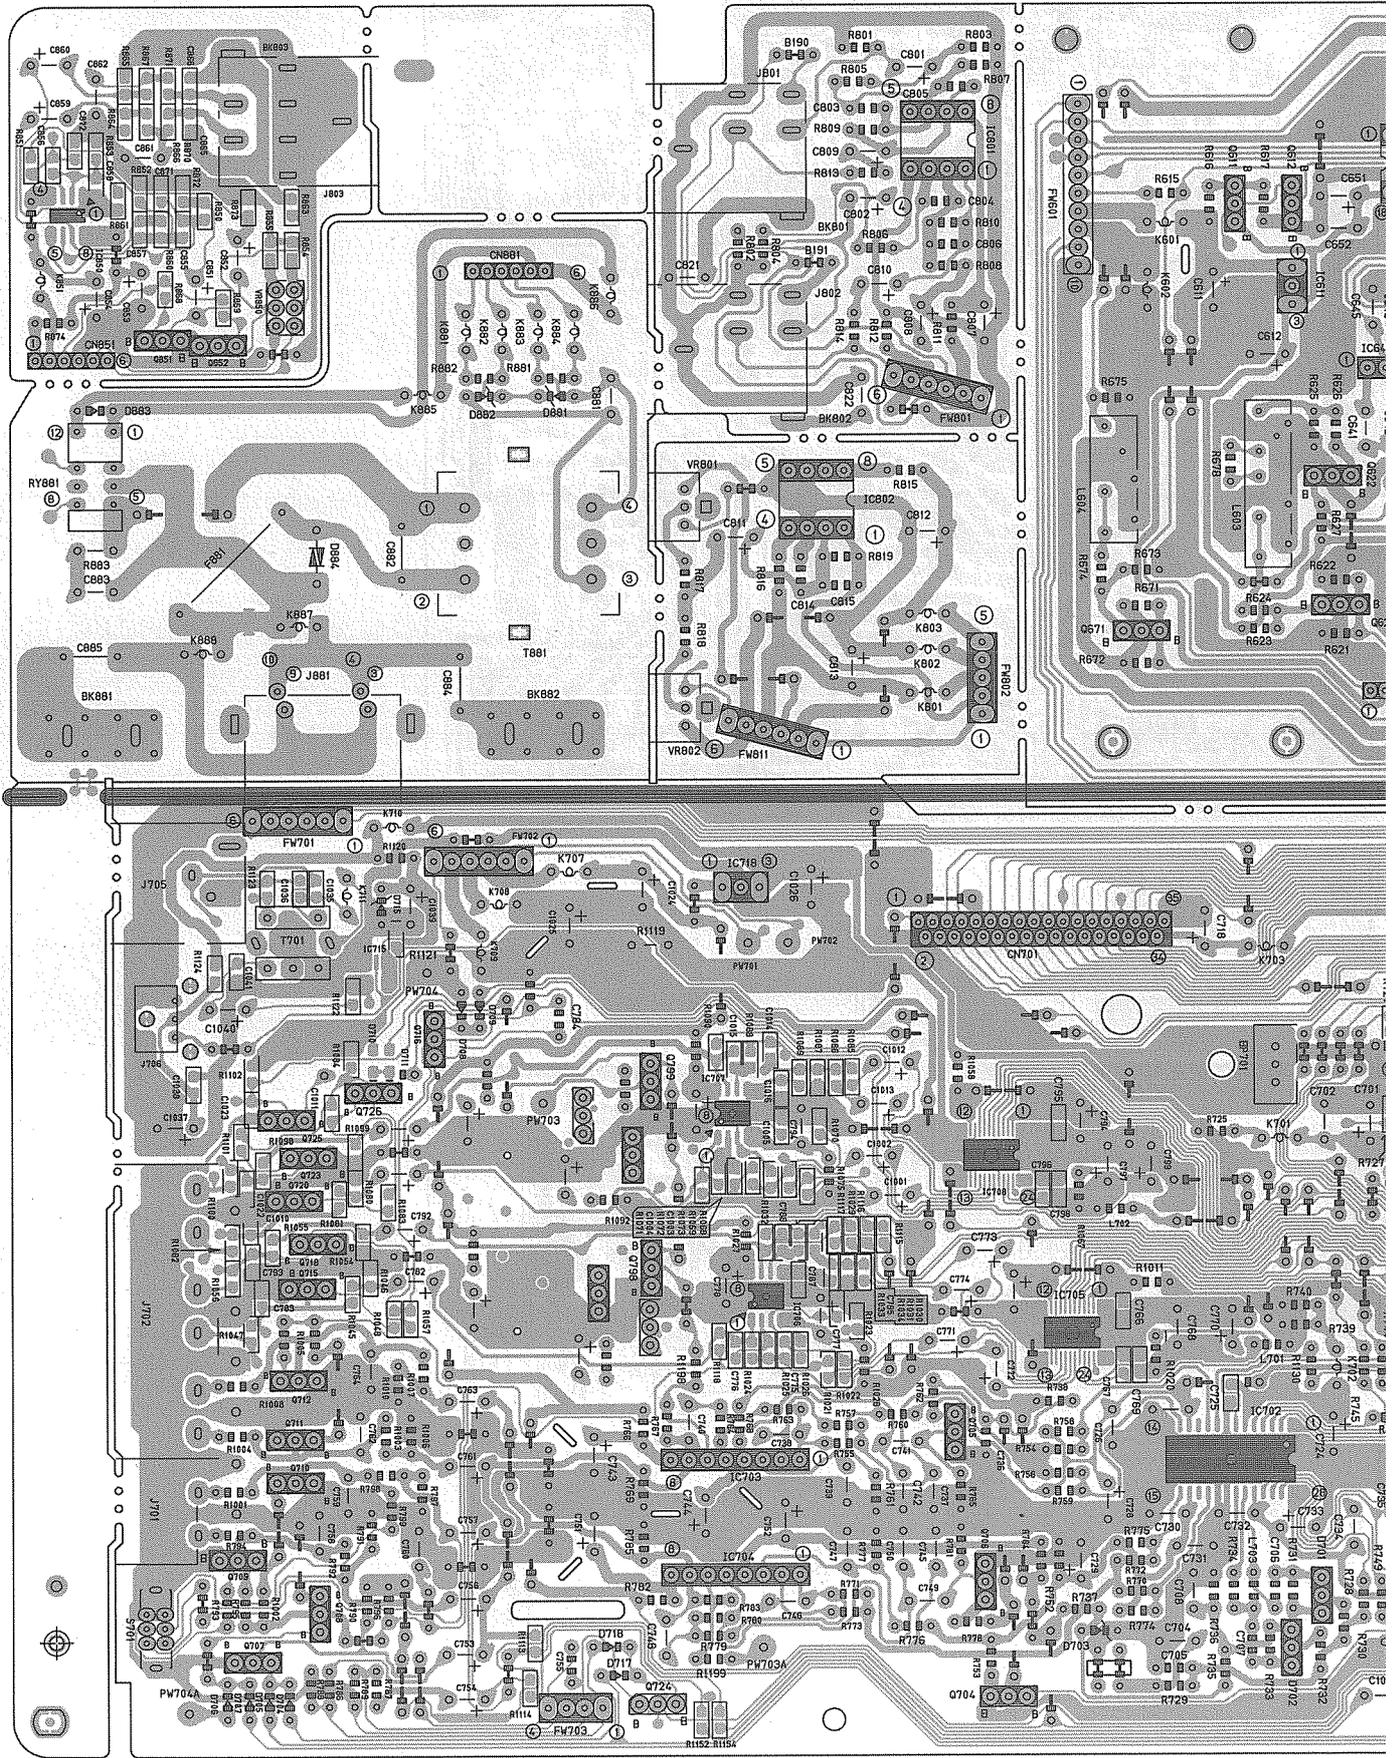

A B C D

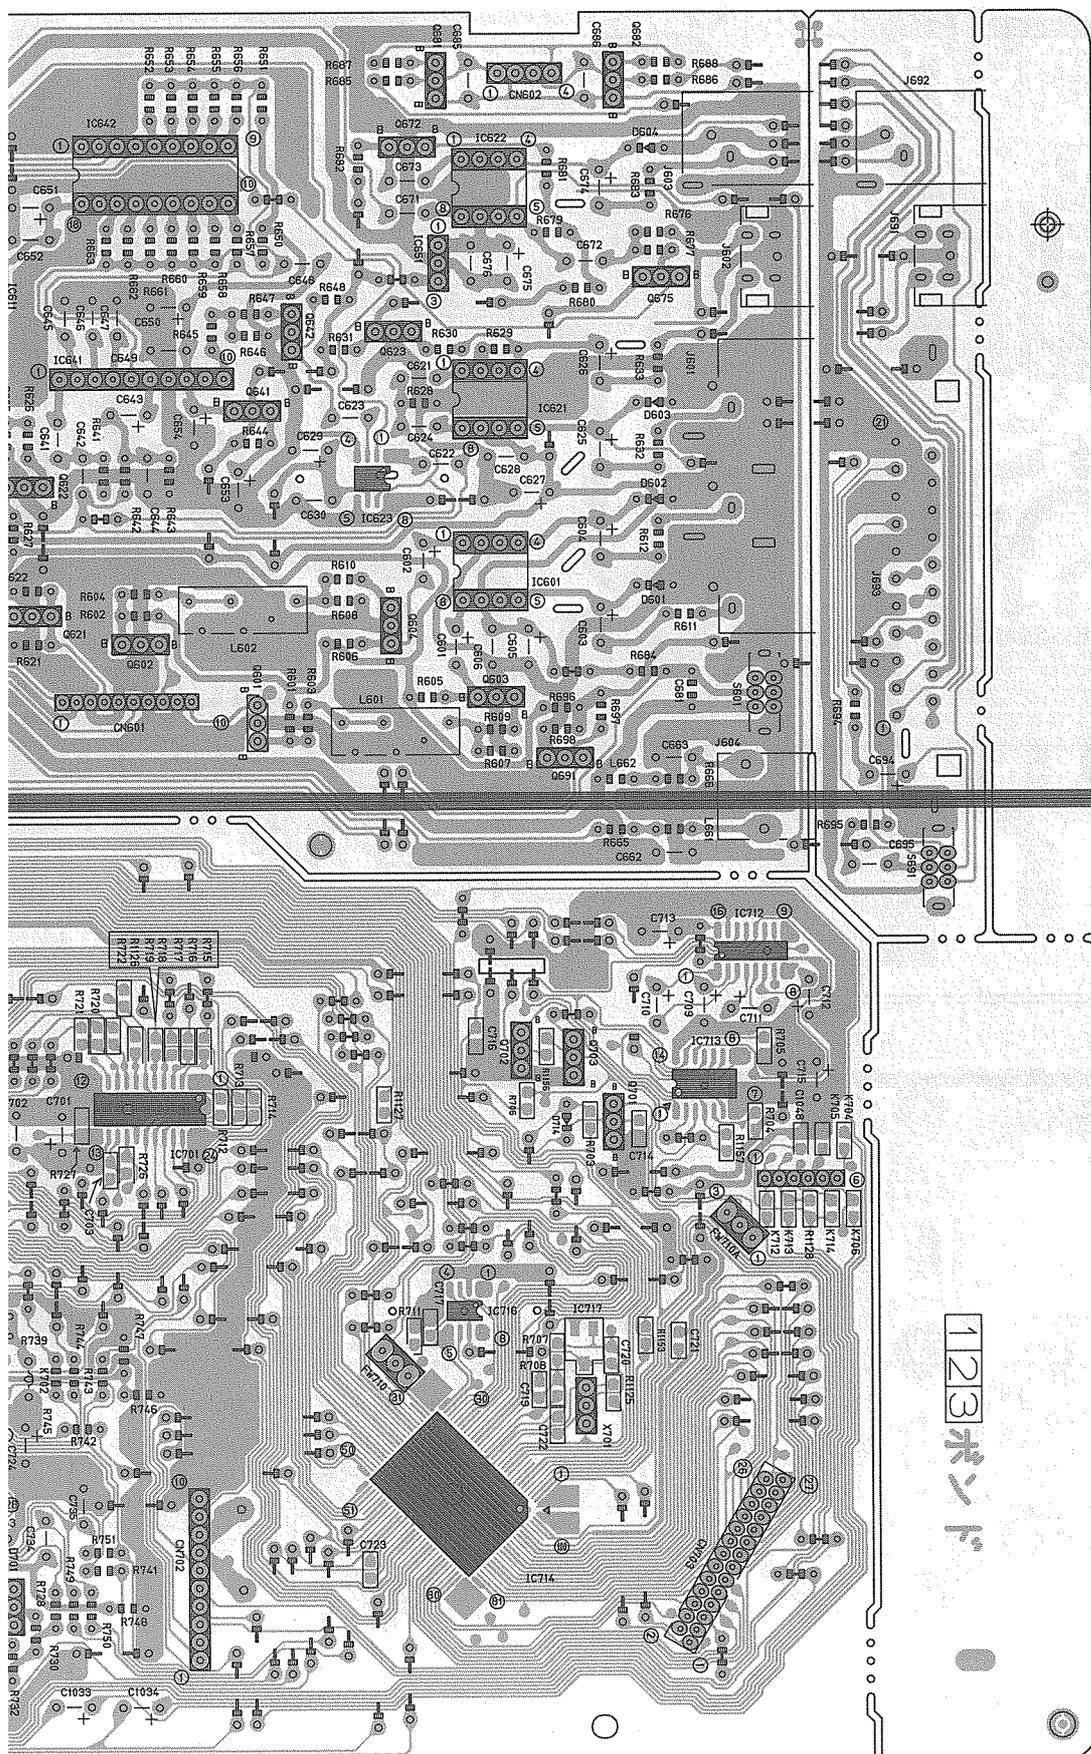





E

F

G

■ Regulator & operation switch board

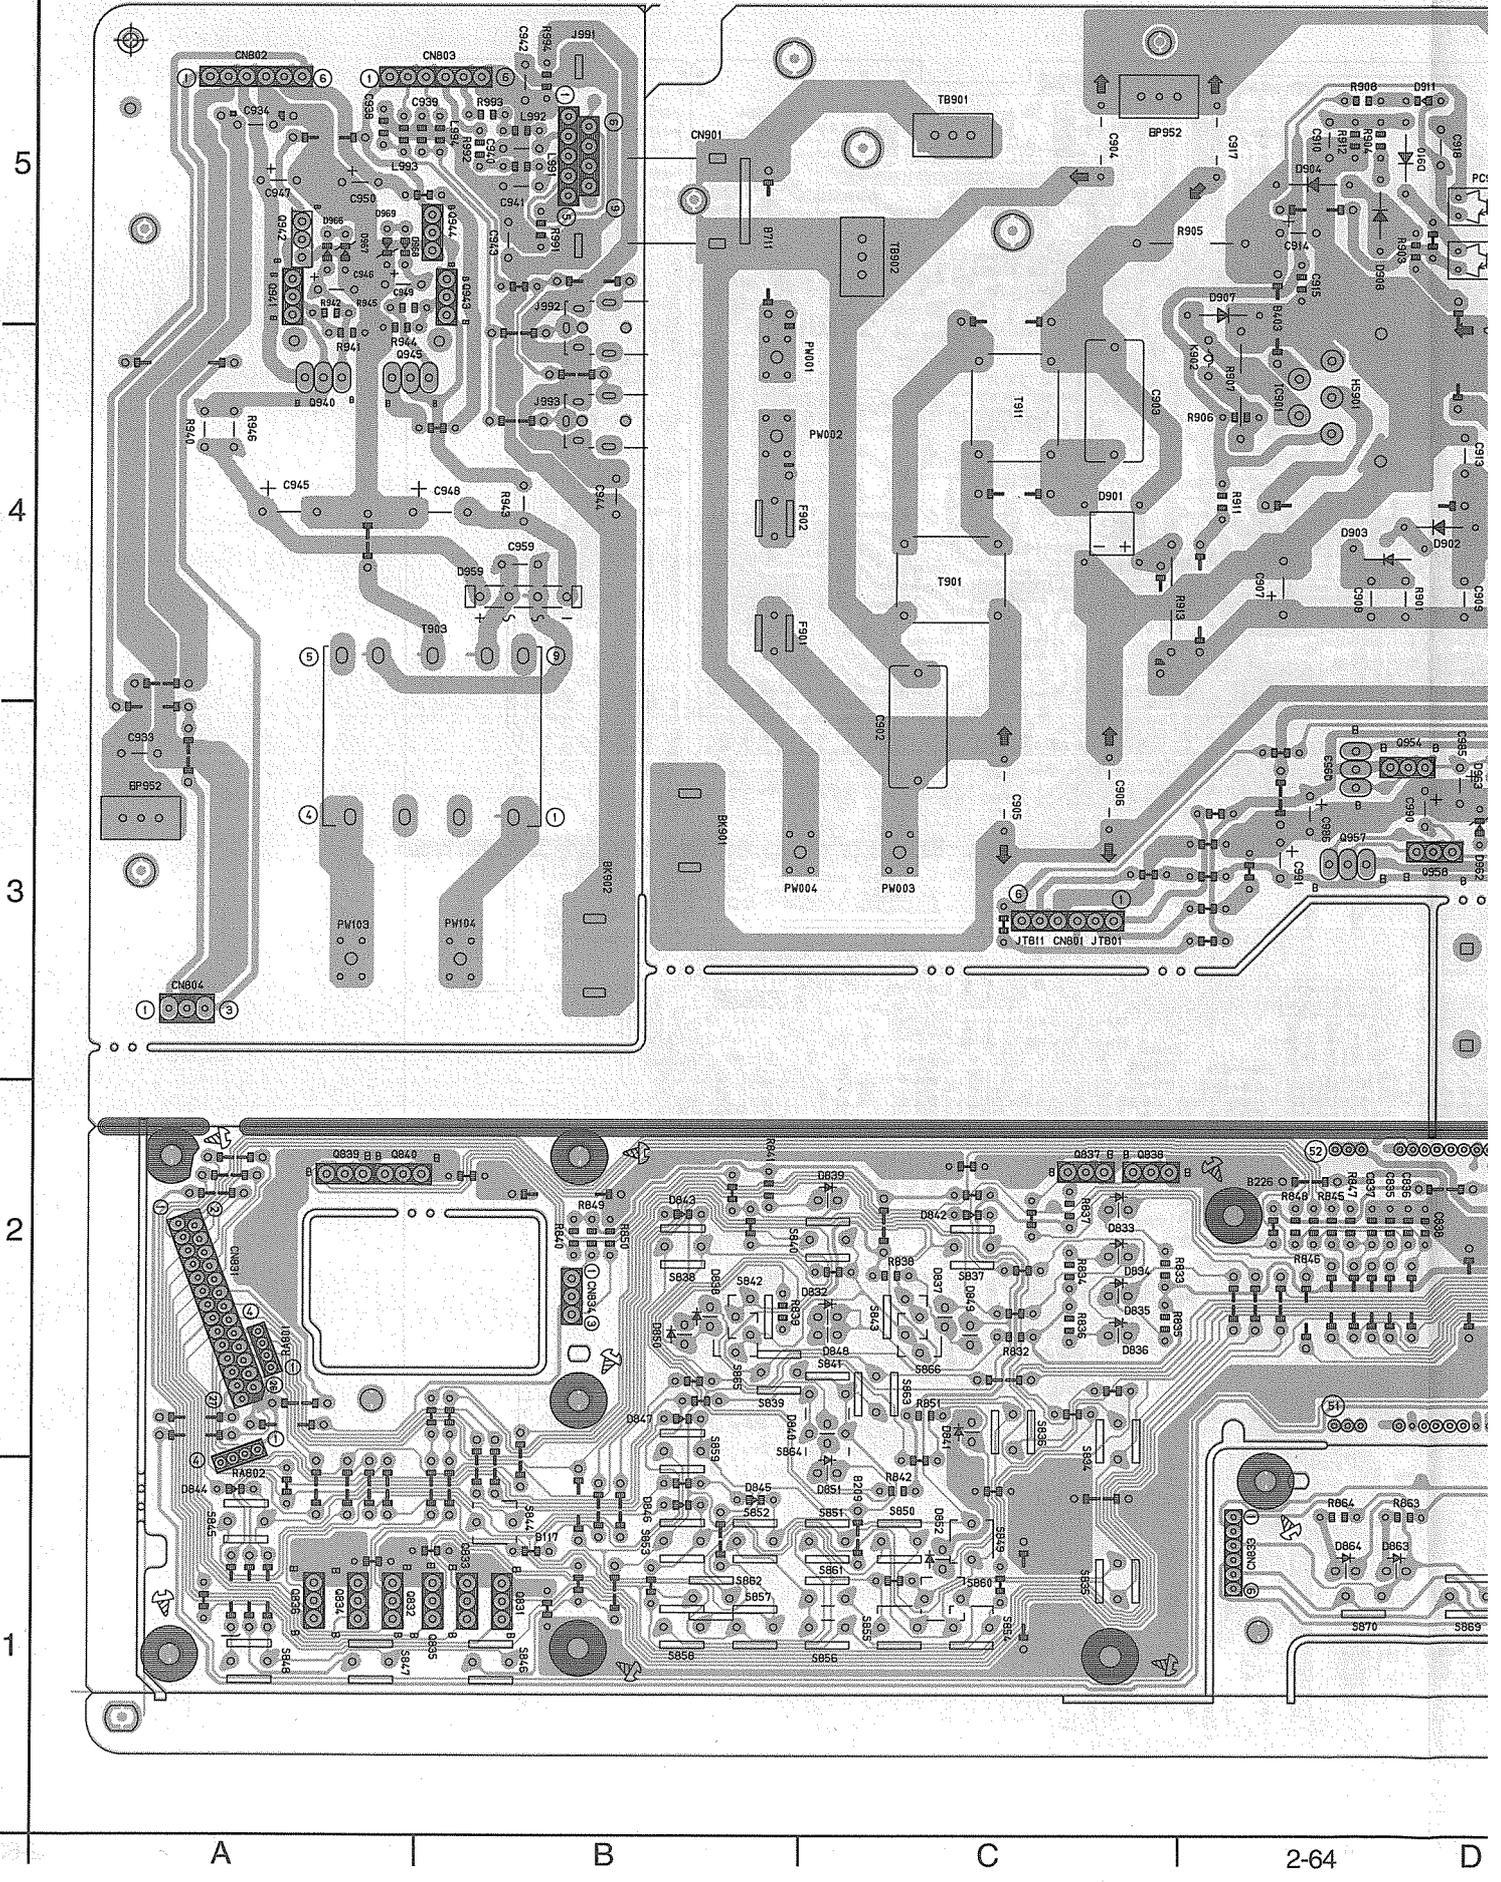

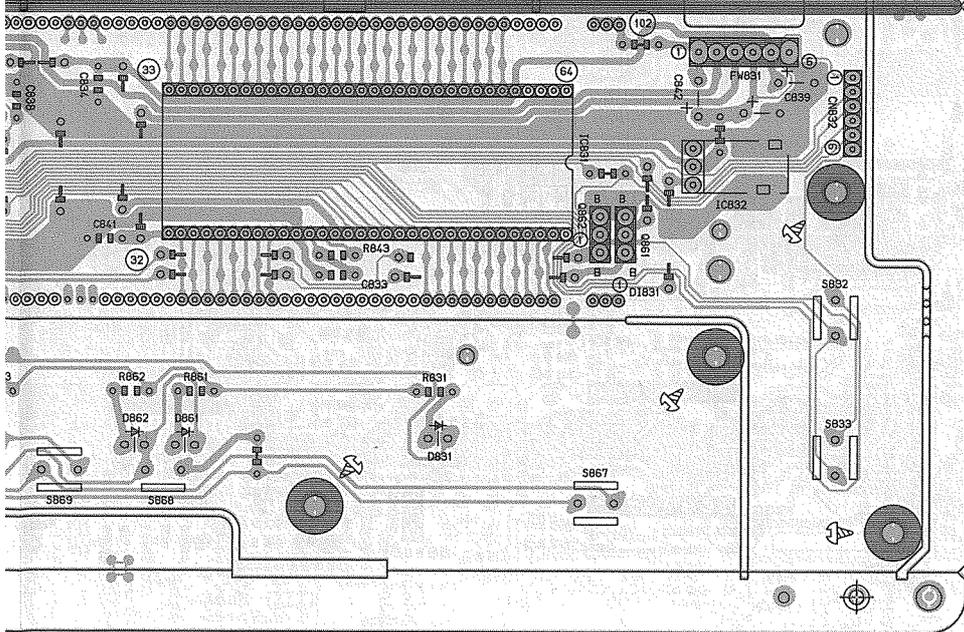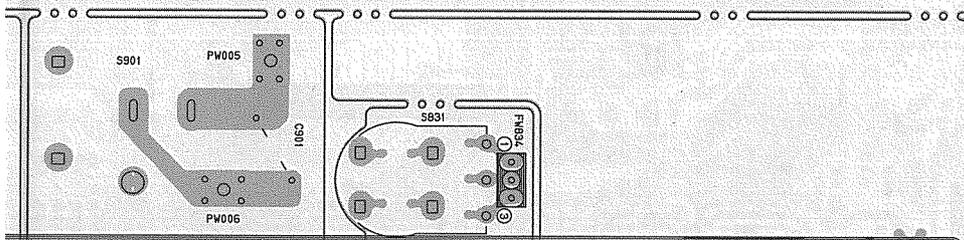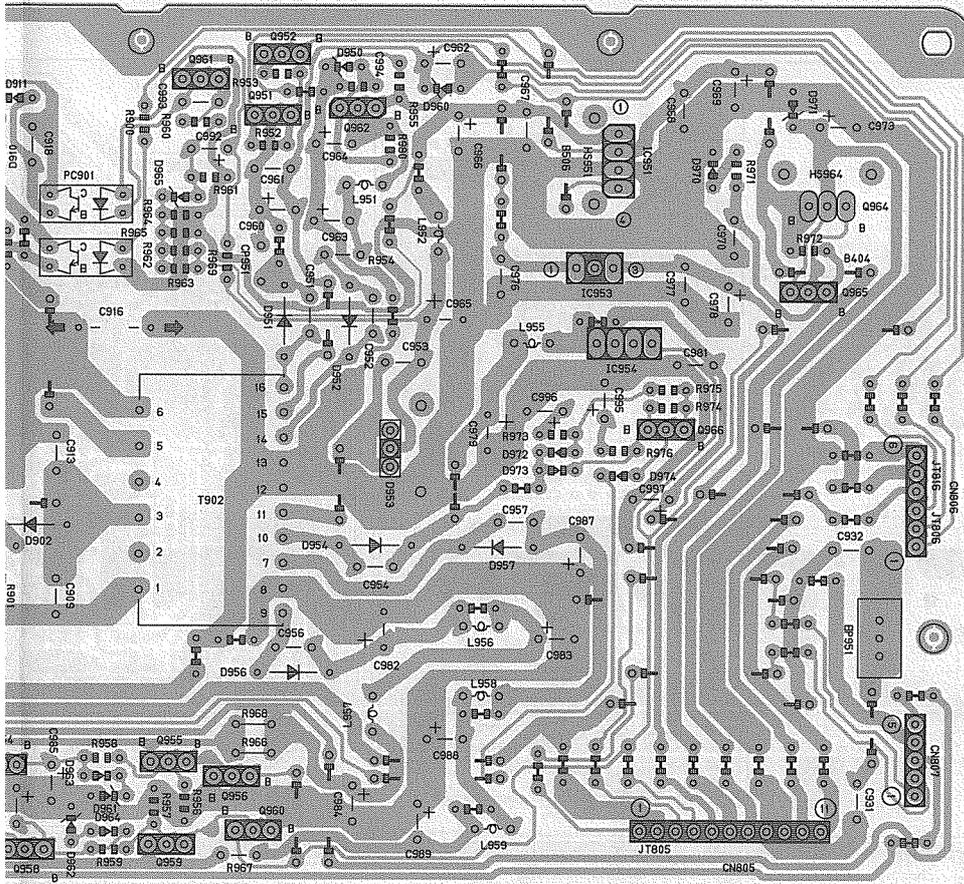


D | E | F | G | H





■ Signal Demodulator & Servo Control Board

(Solder Side)

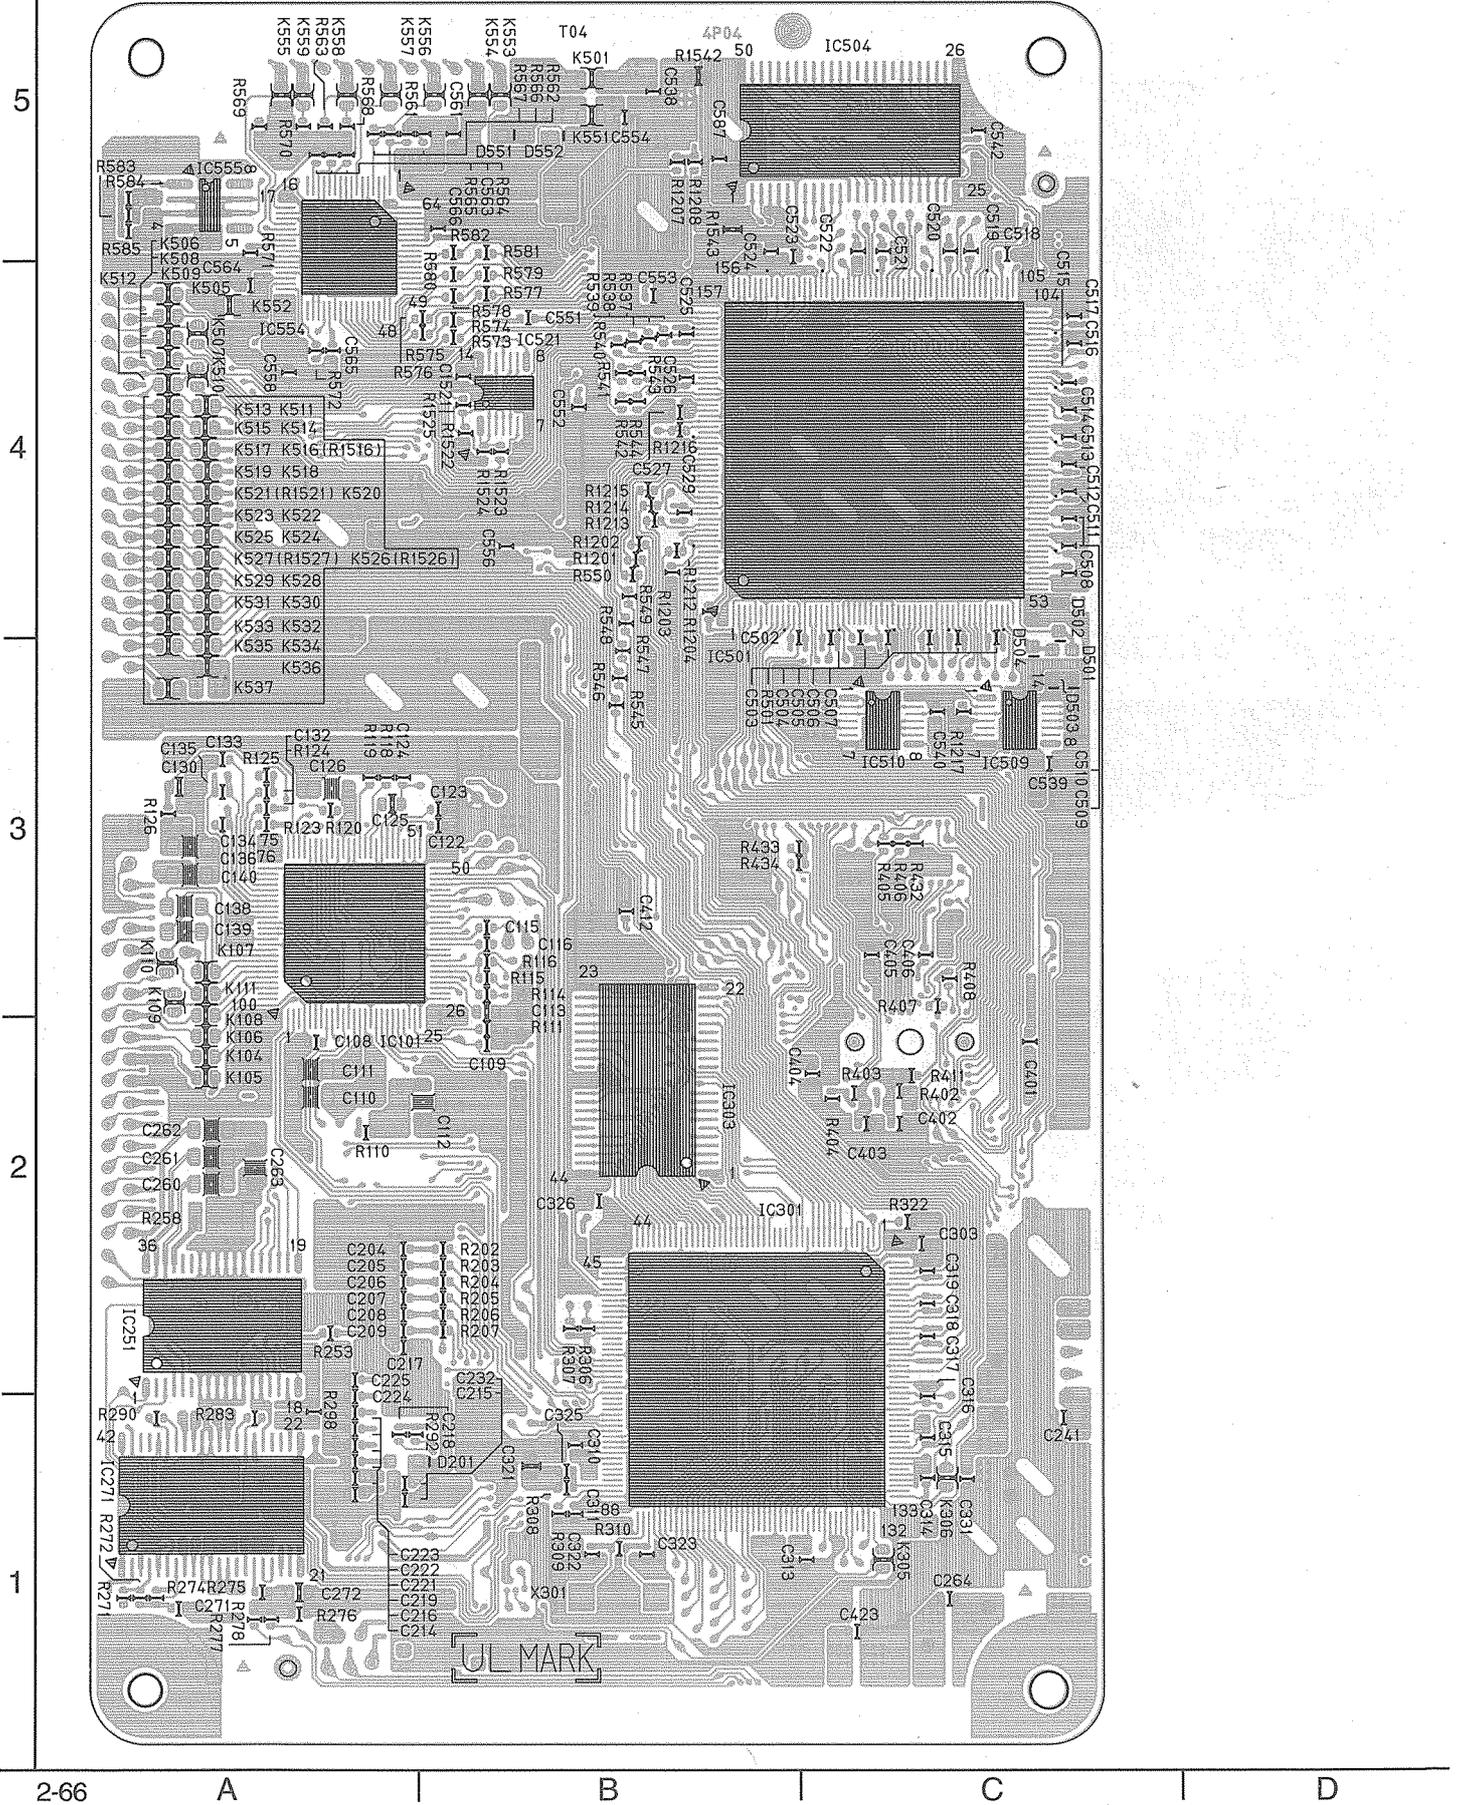

# PARTS LIST

[ XV-D701BK ]

\* All printed circuit boards and its assemblies are not available as service parts.

Areas Suffix	
XV-701BK	
B	U.K.
E	Continental Europe
EN	Northern Europe
EE	Russian Federation

## - Contents -

General exploded view and parts list .....	3-2
DVD mechanism unit and parts list .....	3-4
Electrical parts list .....	3-8
Packing materials and accessories list .....	3-18

■PARTS LIST (General assembly)


BLOCK NO. M I M M

Item	Parts Number	Parts Name	Qty	Description	Area
1	LE10202-015A	FRONT PANEL	1		
2	PQ42376-1-3	APPROVAL MARK	1		
3	LE10204-002A	SUB PANEL	1		
4	LE20444-003A	WINDOW SCREEN	1		
5	E409509-001	INDICATOR LENS	1		
6	LE30715-002A	POWER BUTTON	1		
7	LE20448-001A	PLAY BUTTON	1		
8	LE30717-002A	PUSH BUTTON	1		
10	LE20450-002A	PUSH BUTTON	1		
11	LE20453-001A	PUSH BUTTON	1		
12	QYSDSF2608Z	SCREW	12		
13	QUQ110-2713BJ	FLAT WIRE	1		
14	LE30730-001A	FRONT BRACKET	1		
15	QYSDSF2608Z	SCREW	3		
17	WJE0003-001A	SOCKET WIRE ASSY	1		
18	QYSDSG3008M	SCREW	3		
19	E103252-004	CHASSIS BASE	1		
20	LE40273-001A	SPACER	1		
21	E307427-005	FOOT ASSY	4		
22	QYSBST3010Z	TH TAP SCREW	4		
23	QYSBSGG3008E	T.SCREW	6		
24	QUQ110-3511AM	FLAT WIRE	1		
25	LE30737-001A	PROTECT SHEET	1		
26	E73967-005	SPACER	1		
28	WJE0001-001A	SOCKET WIRE ASSY	1		
29	QYSBSGG3008E	T.SCREW	1		
31	-----	DVD DRIVE MECHA	1		
32	QUQ110-3513AM	FLAT WIRE	1		
33	QUQ110-0515AJ	FLAT WIRE	1		
34	LE20466-001A	MAIN BRACKET	1		
35	QYSBSG3010E	T.SCREW	4		
36	QYSBSGY3008E	SPECIAL SCREW	5		
38	LE20462-017A	REAR PANEL	1		B E EN
	LE20462-018A	REAR PANEL	1		EE
⚠	QMP3900-200	POWER CORD	1		E EE EN
⚠	QMP5530-0085BS	POWER CORD	1		B
⚠	QHS3771-108	CORD STOPPER	1		
⚠	QMF51A2-R80-S	FUSE	1	F001	E EE EN
⚠	QMF51E2-R80-S	FUSE	1	F001	B
	E307572-001	FASTENER	1		
	QYSBSGY3008M	SPECIAL SCREW	12		
51	E209102-001/S/	METAL COVER	1		
52	E406308-003	SPECIAL SCREW	4		
53	QYSBSG3008E	T.SCREW	2		
54	LE20446-002A	TRAY FITTING	1		
55	LE40605-001A	DVD MARK	1		
56	E309394-005	BALANCE KNOB	1		
57	LE30713-001A	SHUTTLE KNOB	1		
58	QQR0983-001	FERRITE CORE	1		
62	LE20442-001A	ORNAMENT PLATE	1		
63	LE30729-001A	INDICATOR LENS	1		
70	LEA20001-003A	SUB P.C.B.	1		E EN
71	E3400-431	SPACER	8		E EN




# Exploded view of general assembly and parts list

Block No. **M 1 M M**

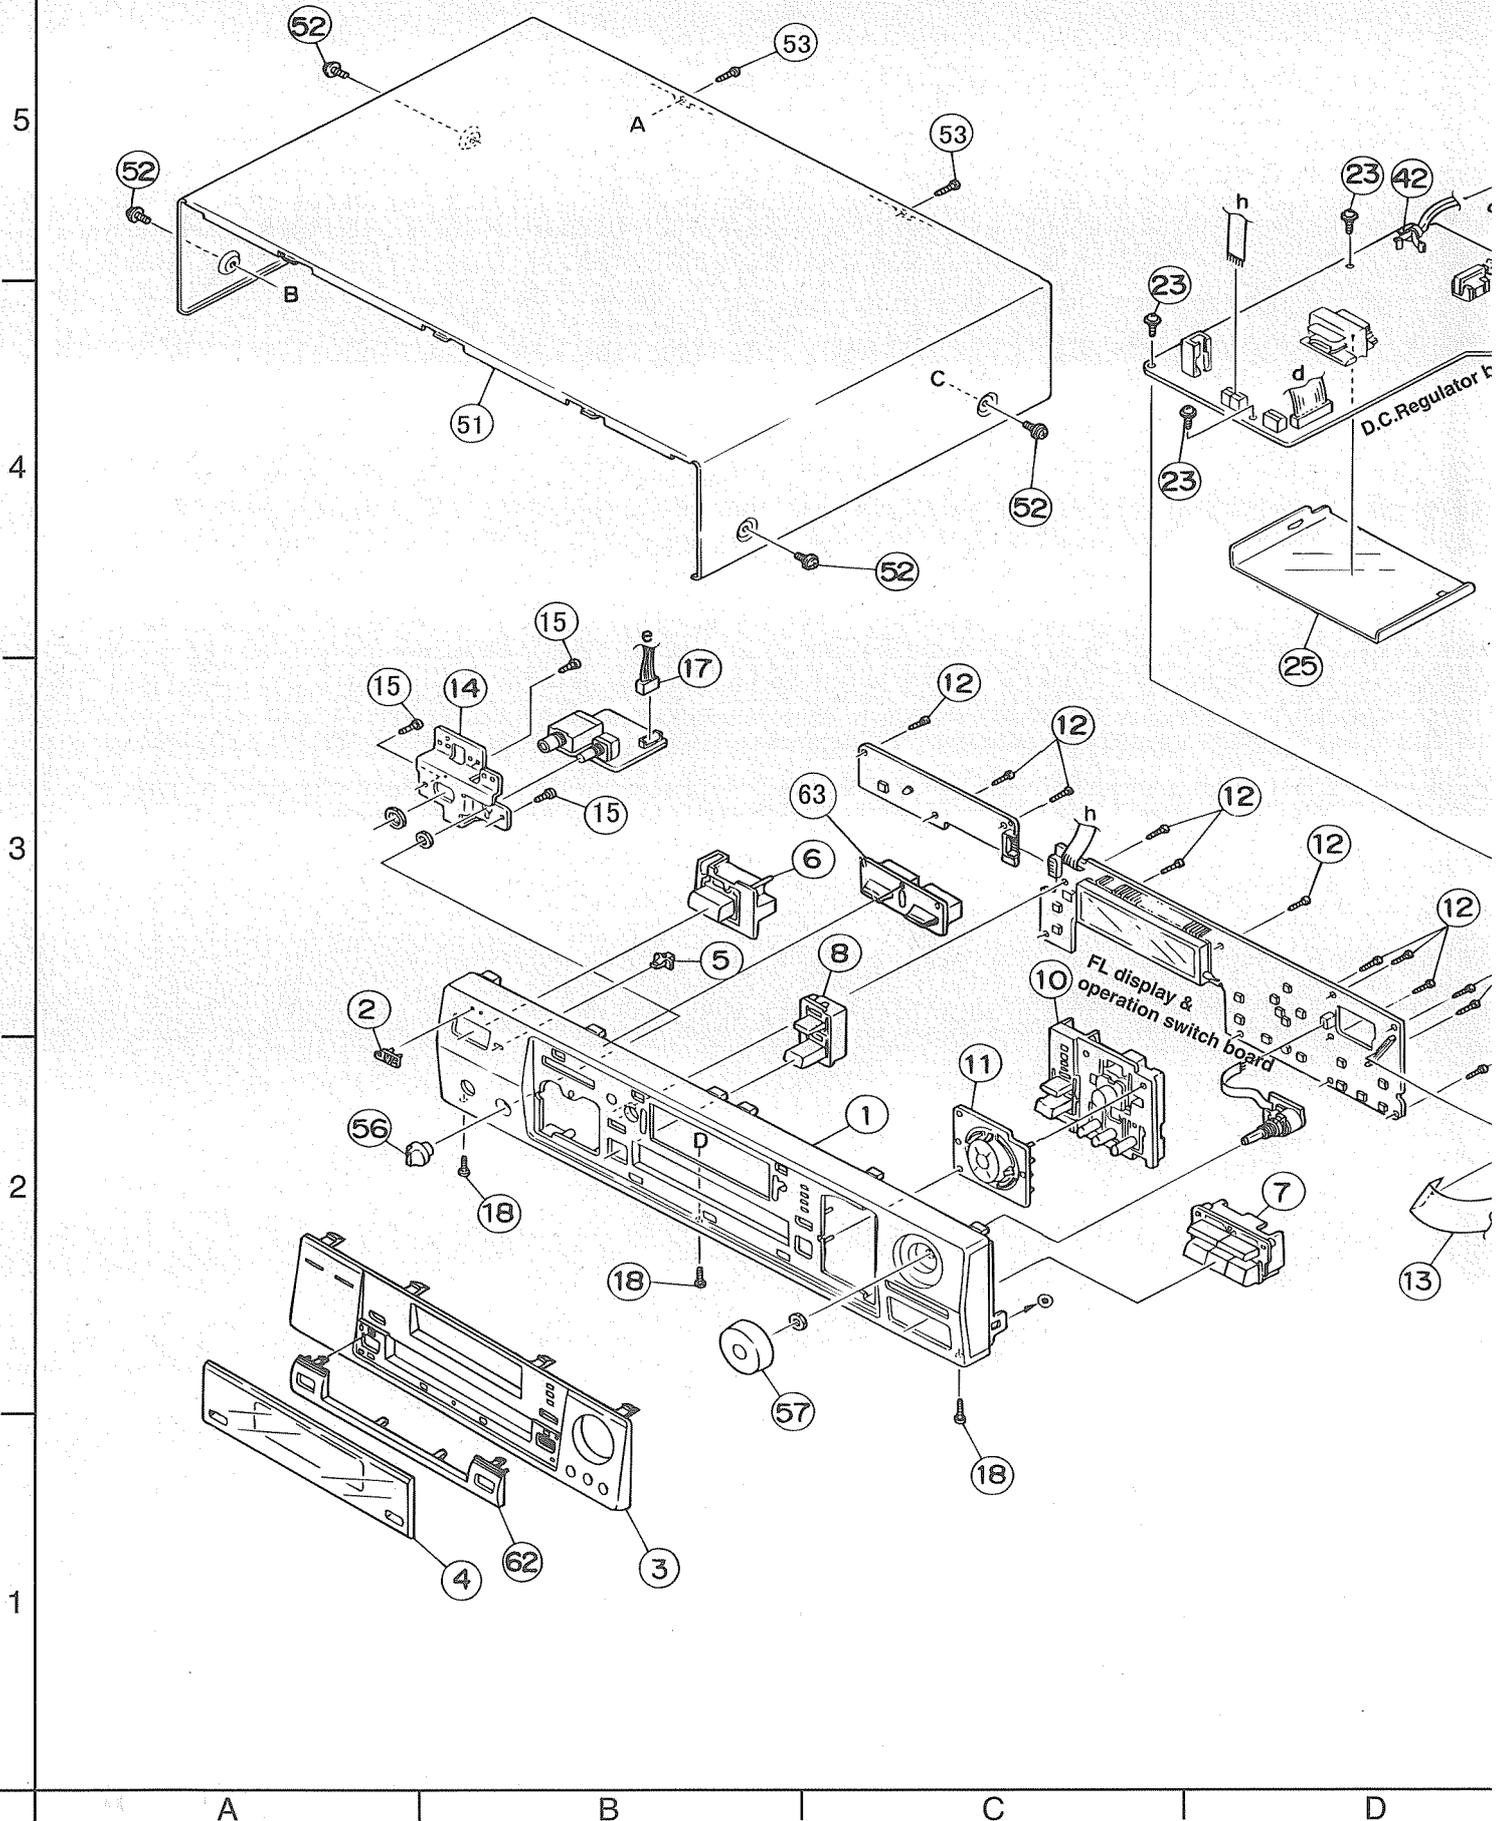

M

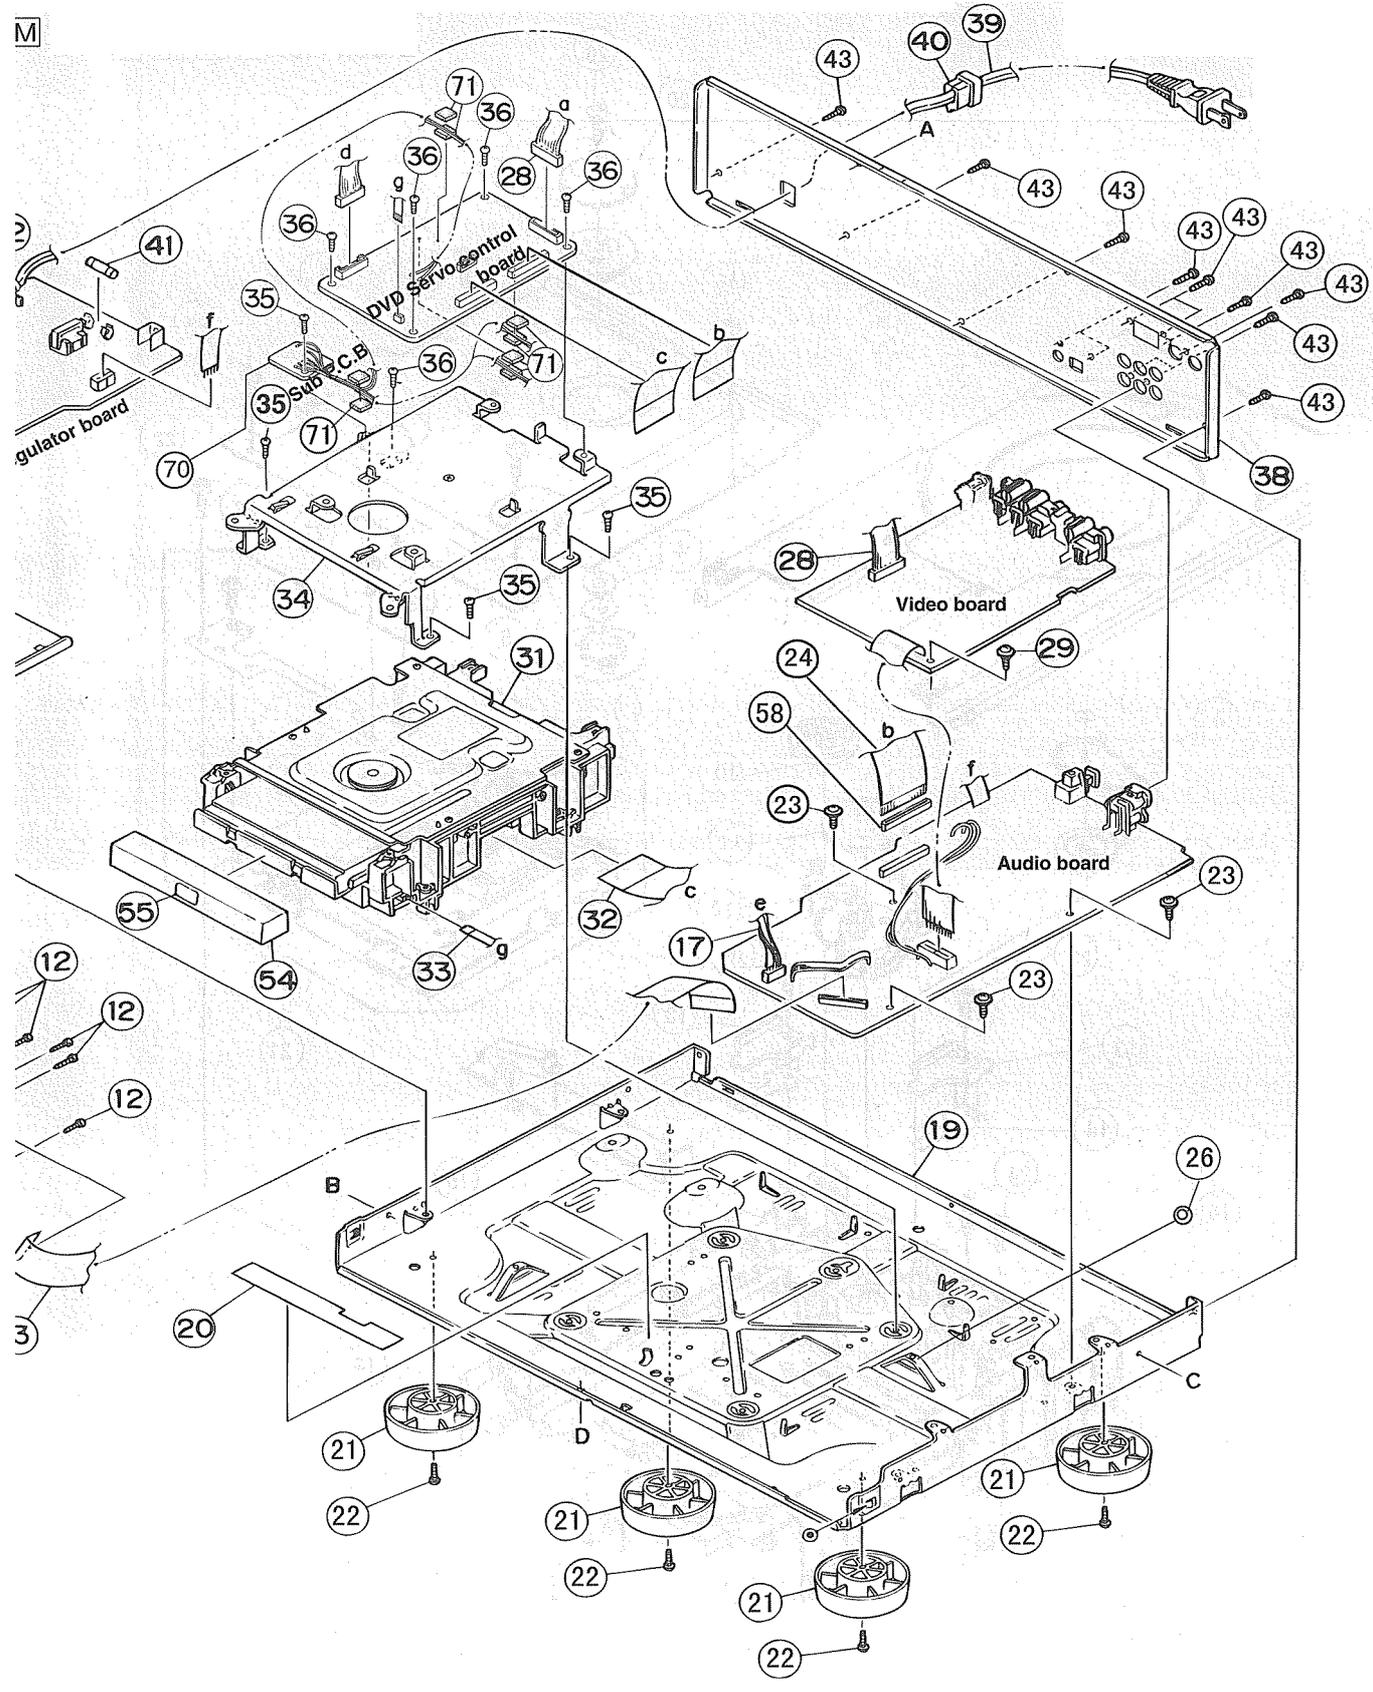

# DVD mechanism unit and parts list

ELM-V002

Block No. 

M	2	M	M
---	---	---	---


5

4

3

2

1

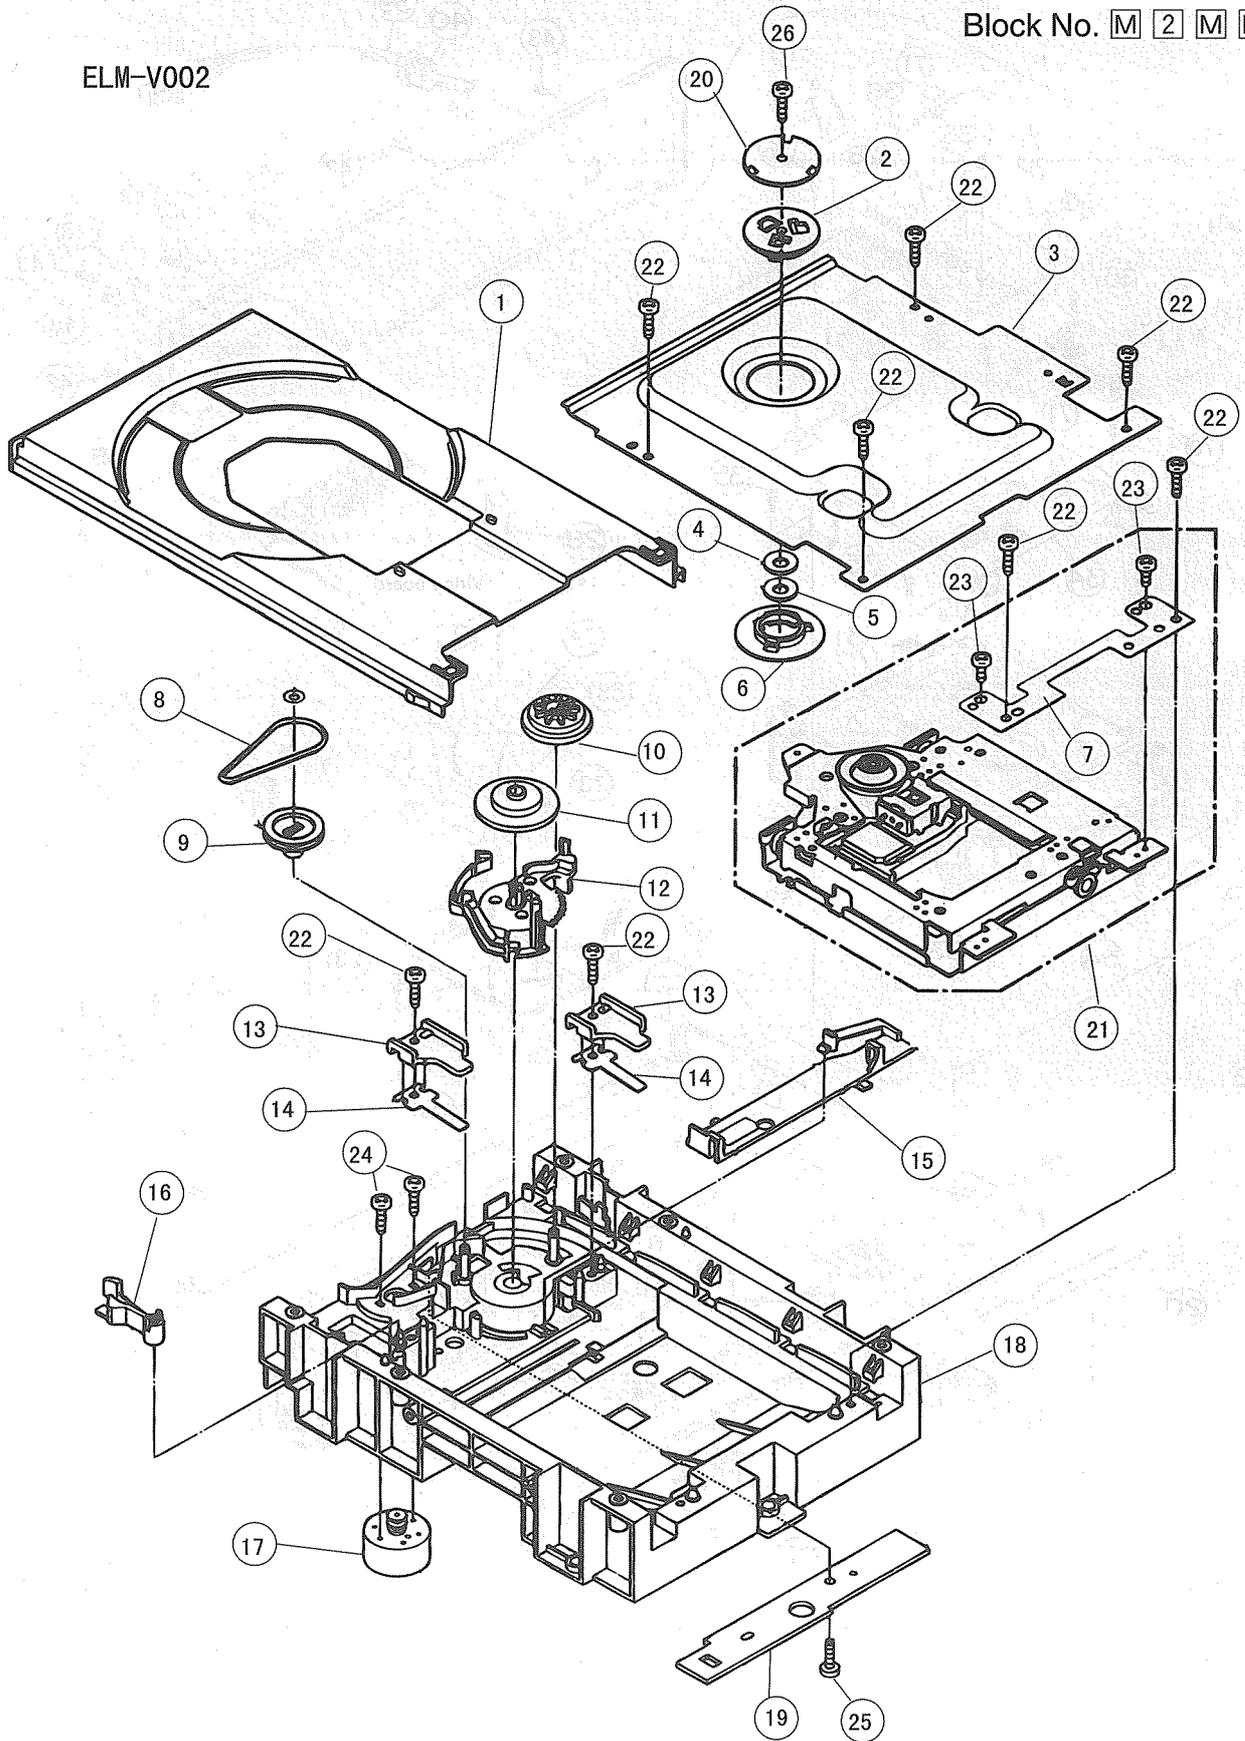

A

B

C

3-4

D

D

|

E

|

F

|

G

|

H



**■ DVD Mechanism**
**BLOCK NO. M 2 M M**


⚠	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	EGMVMD2643	TRAY	1		
	2	EGMVMD2640	CLAMP HOLDER	1		
	3	EGMVMA9534	CLAMPER BASE	1		
	4	EGMVMA9535	YOKE	1		
	5	EGMVSQ1002	MAGNET	1		
	6	EGMVMD2639	CLAMPER	1		
	7	EGMVMC1264	LEAF SPRING	1		
	8	EGMV DV0373	BELT	1		
	9	EGMV DG1229	DRIVE PULLEY	1		
	10	EGMV DG1231	TRAY GEAR	1		
	11	EGMV DG1227	GEAR	1		
	12	EGMV DK0150	ROTARY CAM	1		
	13	EGMVMA9572	MECHA BRACKET	2		
	14	EGMVMC1267	MECHA BRACKET	2		
	15	EGMVMD2641	SLIDER	1		
	16	EGMVMD2642	SWITCH LEVER	1		
	17	EGMVEM0609	LOADING MOTOR	1		
	18	EGMVMD2683	LOADING BASE	1		
	19	EGMV EK8001	PRINTED BOARD	1		
	20	EGMVMA9695	CLAMPER WEIGHT	1		
	21	-----	TRAVERSE UNIT	1	SEE BLOCK NO M3MM	
	22	EGMXTV26-8G	SCREW	7		
	23	EGMXYC26-BF5FZN	SCREW	2		
	24	EGMXQNQC17-3	SCREW	2		
	25	EGMXTV26-8G	SCREW	1		
	26	EGMXTS26-6J	SCREW	1		

# DVD mechanism unit and parts list

ELM-V002

Block No. 

M	3	M	M
---	---	---	---

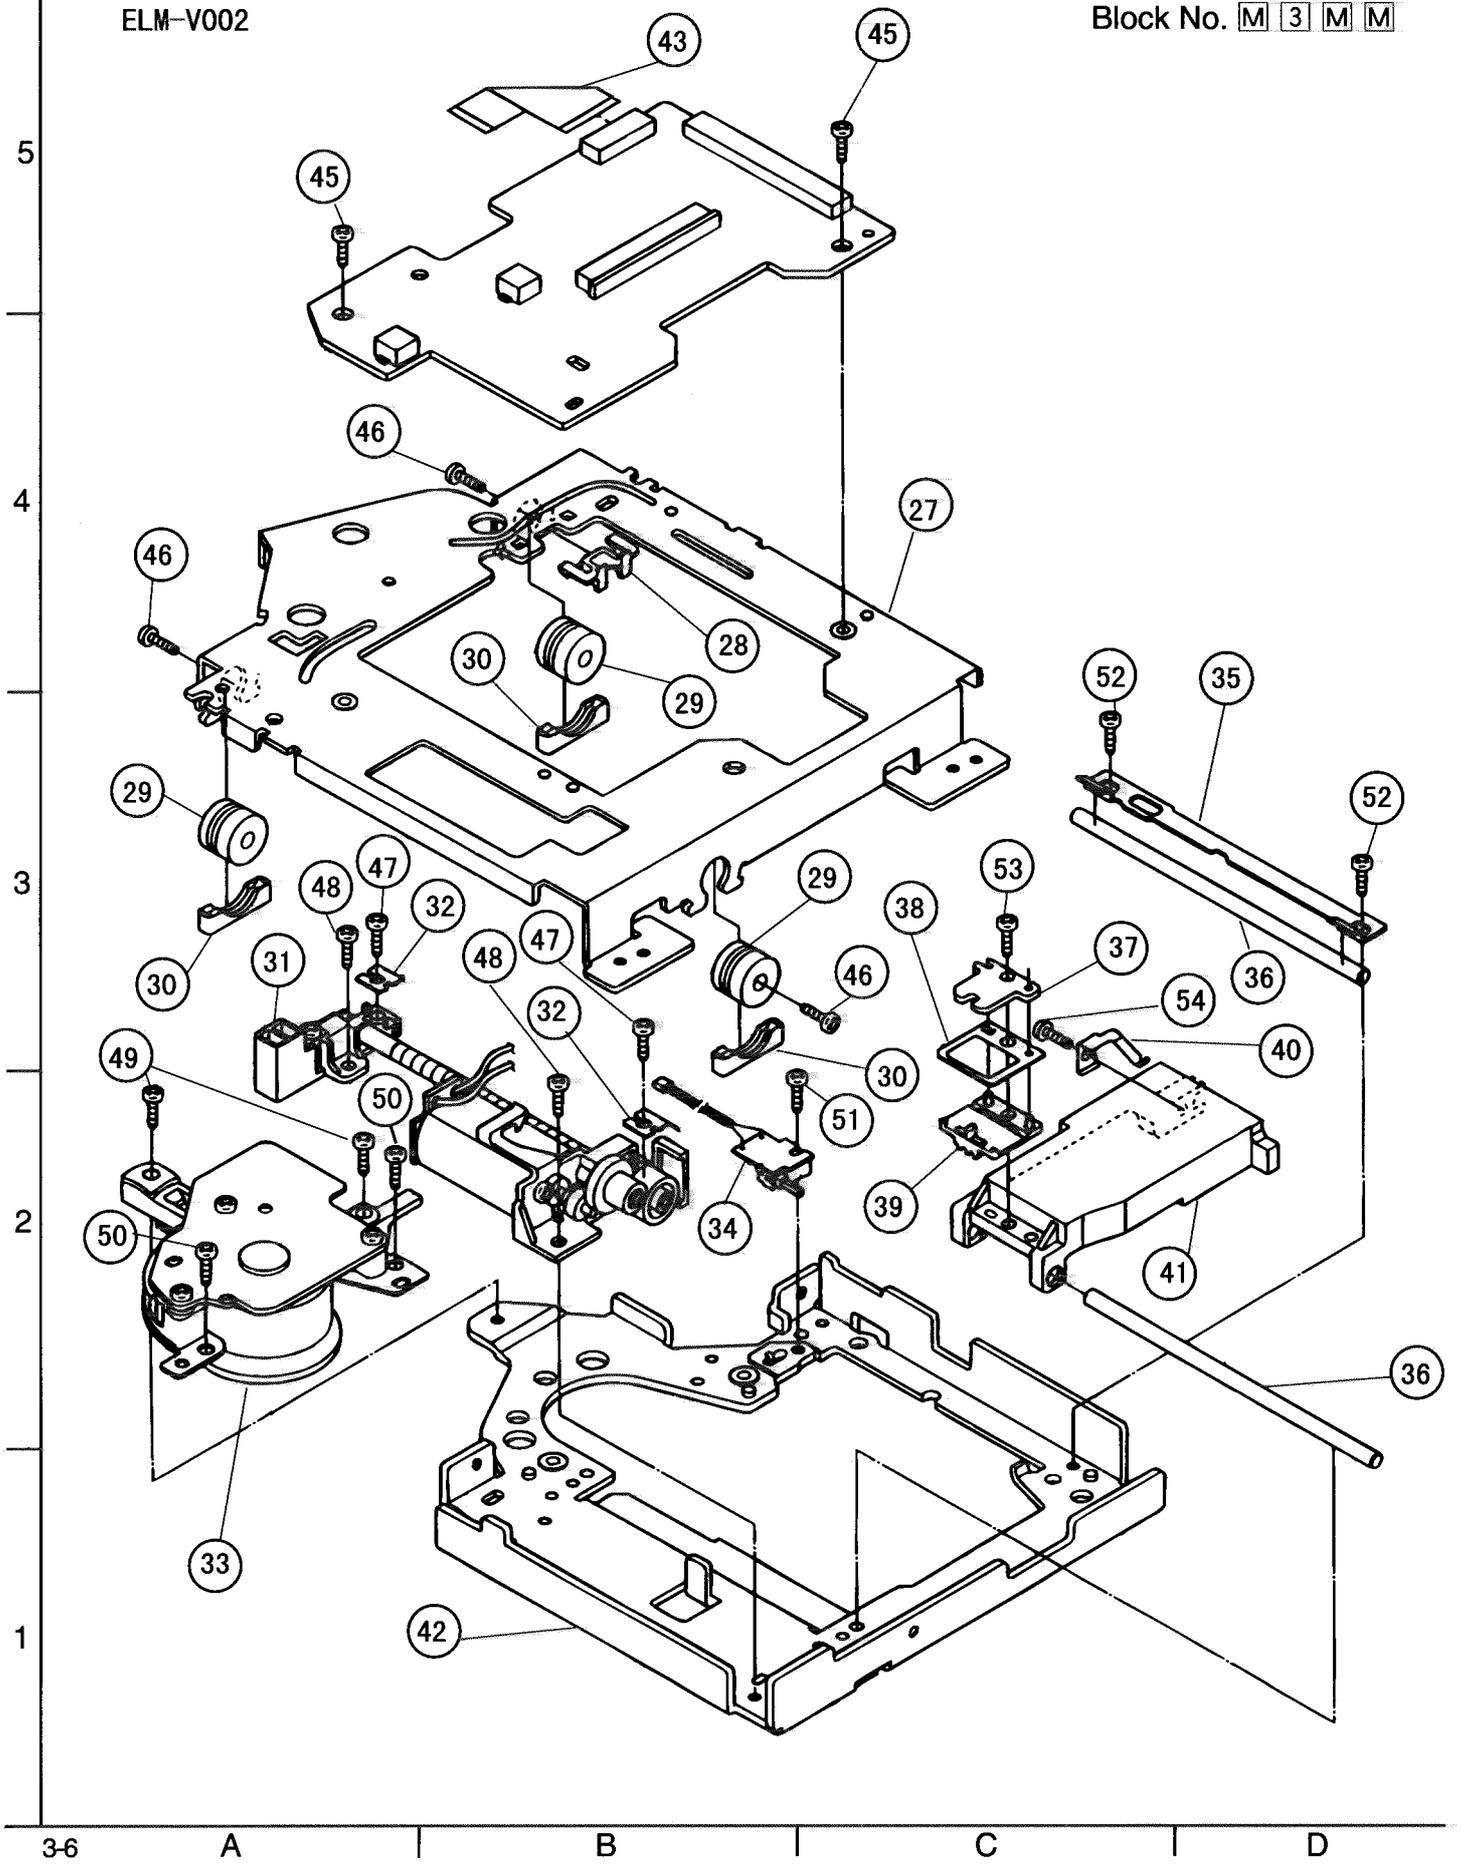

**■ DVD Mechanism**
**BLOCK NO. M 3 M M**

⚠	Item	Parts Number	Parts Name	Q'ty	Description	Area
	27	EGMVXA5786	CHASSIS FRAME	1		
	28	EGMVMD2682	CLAMPER	1		
	29	EGMVMG1001	DAMPER	3		
	30	EGMVMD2675	DAMPER HOLDER	3		
	31	EGMVXQ0588	FEED MOTOR ASS'Y	1		
	32	EGMVMC1262	SHAFT HOLDER	2		
	33	EGMVXA6065	SPINDEL MOTOR ASS'Y	1		
	34	EGMVEK8061	SWITCH ASS'Y	1		
	35	EGMVMC1260	SHAFT HOLDER	1		
	36	EGMVMs6098	GUIDE SHAFT	2		
	37	EGMVMA9532	STOPPER PLATE	1		
	38	EGMVMC1263	SPRING STOPPER	1		
	39	EGMVMD2637	RACK PLATE	1		
	40	EGMVMC1265	LEAF SPRING	1		
	41	EGMVED0378	OPTICAL PICK-UP	1		
	42	EGMVMK0433	CHASSIS BASE	1		
	43	EGMVWJ1116	FLAT WIRE	1		
	45	EGMXTB26-5F	SCREW	2		
	46	EGMVHD1032	SCREW	3		
	47	EGMXYC2-JF10	SCREW	2		
	48	EGMXYN2-J4	SCREW	2		
	49	EGMXVE26B10FP	SCREW	2		
	50	EGMXYC2-JF5	SCREW	2		
	51	EGMXYN2-J8	SCREW	1		
	52	EGMXSN2-3	SCREW	2		
	53	EGMXQN17-C5	SCREW	1		
	54	EGMVHD1057	SCREW	1		

■DVD Servo control P.C.B.

BLOCK NO.01

Item	Parts Number	Description	Area
	I.C.S		
IC101	AN8825NFHQ	I.C(M)	
IC201	MN67702VRZC3	I.C(M)	
IC251	M56755AFP-X	I.C(M)	
IC271	M56759BFP-X	I.C(M)	
IC301	MN103005AN2G	I.C(M)	
IC303	M54V16258B45TSK	I.C(M)	
IC401	MN102L25GCL	IC	
IC402	M531622F42GSK-XIC	I.C(M)	B. E. EN
IC402	M531622F43GSK-XIC	I.C(M)	EE
IC403	AK93C65AF-X	I.C(M)	
IC501	ZIVA3-PA1	I.C(M)	
IC502	NAX0265-001X	CRYSTAL	
IC504	D4516161AG5-A10	I.C(M)	
IC509	TC74VHC74FT-X	I.C(M)	
IC510	TC74VHC00FT-X	I.C(M)	
IC521	TC74VHC00FT-X	I.C(M)	
IC551	JCE8011	I.C(M)	
IC552	UPD42280GU-30-X	I.C(M)	
IC553	JCE8041-X	I.C(DIGI-MOS)	
IC554	MC44724AVFU	I.C(M)	
IC555	MC33269D-X	I.C(M)	
	DIODES		
D201	1SS355-X	SI.DIODE	
D401	1SS355-X	SI.DIODE	
D402	1SS355-X	SI.DIODE	
D551	1SS355-X	SI.DIODE	
D552	1SS355-X	SI.DIODE	
	TRANSISTORS		
Q101	2SB1424/QR/-X	TRANSISTOR	
Q271	DTC144EE-X	DIGITAL TRANSISTOR	
	CAPACITORS		
C005	NCB21CK-104X	0.1MF 16V CER.CAP.	
C006	NCB21CK-104X	0.1MF 16V CER.CAP.	
C007	NCB21CK-104X	0.1MF 16V CER.CAP.	
C008	NCB21CK-104X	0.1MF 16V CER.CAP.	
C101	NCB31CK-104X	0.1MF 16V C CAP.	
C102	NEX40JM-336X	33MF 6.3V AL E.CAP.	
C103	NCB31CK-104X	0.1MF 16V C CAP.	
C104	NEA70JM-226X	22MF 6.3V AL E.CAP.	
C105	NCB31CK-104X	0.1MF 16V C CAP.	
C106	NEA70JM-226X	22MF 6.3V AL E.CAP.	
C107	NEA70JM-226X	22MF 6.3V AL E.CAP.	
C108	NCS31HJ-560X	56PF 50V C CAP.	
C110	NCB11CK-105X	1MF 16V C CAP.	
C111	NCB11CK-105X	1MF 16V C CAP.	
C112	NCB11CK-105X	1MF 16V C CAP.	
C113	NCB21CK-184X	0.18MF 16V CER.CAP.	
C114	NCB11CK-105X	1MF 16V C CAP.	
C115	NCB31HK-102X	1000PF 50V C CAP.	
C116	NCB31HK-102X	1000PF 50V C CAP.	
C117	NCB31CK-104X	0.1MF 16V C CAP.	
C118	NCB31CK-104X	0.1MF 16V C CAP.	
C119	NEA71AM-336X	33MF 10V AL E.CAP.	
C120	NCB31CK-104X	0.1MF 16V C CAP.	
C121	NCB31CK-104X	0.1MF 16V C CAP.	
C122	NCB31HK-682X	6800PF 50V C CAP.	
C123	NCB31CK-104X	0.1MF 16V C CAP.	
C124	NCS31HJ-181X	180PF 50V C CAP.	
C125	NCB21CK-224X	0.22MF 16V C CAP.	
C126	NCB11CK-105X	1MF 16V C CAP.	
C127	NCB31HK-221X	220PF 50V C CAP.	
C128	NCB31HK-221X	220PF 50V C CAP.	
C129	NCB31CK-104X	0.1MF 16V C CAP.	
C130	NCB21CK-224X	0.22MF 16V C CAP.	
C131	NCB31CK-104X	0.1MF 16V C CAP.	
C132	NCB31CK-104X	0.1MF 16V C CAP.	

Item	Parts Number	Description	Area
C133	NCB31CK-104X	0.1MF 16V C CAP.	
C134	NCB31CK-104X	0.1MF 16V C CAP.	
C135	NCB31CK-104X	0.1MF 16V C CAP.	
C136	NCB11CK-105X	1MF 16V C CAP.	
C137	NCB31CK-104X	0.1MF 16V C CAP.	
C138	NCB11CK-684X	0.68MF 16V C.CAP.	
C139	NCB11CK-684X	0.68MF 16V C.CAP.	
C140	NCB11CK-105X	1MF 16V C CAP.	
C201	NEA70JM-107X	100MF 6.3V E CAP..	
C202	NCB31CK-104X	0.1MF 16V C CAP.	
C203	NCB31CK-104X	0.1MF 16V C CAP.	
C204	NCB31CK-104X	0.1MF 16V C CAP.	
C205	NCB31CK-104X	0.1MF 16V C CAP.	
C206	NCB31CK-104X	0.1MF 16V C CAP.	
C207	NCB31CK-104X	0.1MF 16V C CAP.	
C208	NCB31CK-104X	0.1MF 16V C CAP.	
C209	NCB31CK-103X	0.01MF 16V C.CAP.	
C210	NCB31CK-104X	0.1MF 16V C CAP.	
C211	NCB31HK-102X	1000PF 50V C CAP.	
C212	NCB31HK-102X	1000PF 50V C CAP.	
C213	NCB31CK-104X	0.1MF 16V C CAP.	
C214	NCB31CK-104X	0.1MF 16V C CAP.	
C215	NCB31CK-104X	0.1MF 16V C CAP.	
C216	NCB31CK-104X	0.1MF 16V C CAP.	
C217	NCB31CK-104X	0.1MF 16V C CAP.	
C218	NCS31HJ-100X	10PF 50V C CAP.	
C219	NCB31HK-182X	1800PF 50V C.CAP.	
C220	NCB31HK-392X	3900PF 50V C CAP.	
C221	NCB31HK-562X	5600PF 50V C CAP.	
C222	NCB31HK-222X	2200PF 50V C CAP.	
C223	NCB31HK-562X	5600PF 50V C CAP.	
C224	NCB31HK-122X	1200PF 50V C CAP.	
C225	NCB31HK-562X	5600PF 50V C CAP.	
C226	NCB31HK-562X	5600PF 50V C CAP.	
C230	NCB31HK-562X	5600PF 50V C CAP.	
C231	NEA70JM-226X	22MF 6.3V AL E.CAP.	
C232	NCB31CK-104X	0.1MF 16V C CAP.	
C233	NCB31HK-222X	2200PF 50V C CAP.	
C234	NCB31CK-103X	0.01MF 16V C.CAP.	
C235	NCB31CK-104X	0.1MF 16V C CAP.	
C236	NCB31CK-104X	0.1MF 16V C CAP.	
C241	NCB31CK-104X	0.1MF 16V C CAP.	
C242	NEX20JM-156X	15MF 6.3V E.CAP.	
C251	NCB31CK-104X	0.1MF 16V C CAP.	
C252	NCB31CK-104X	0.1MF 16V C CAP.	
C253	NCB31CK-104X	0.1MF 16V C CAP.	
C254	NEA71CM-226X	22MF 16V AL E.CAP.	
C255	NEA70JM-226X	22MF 6.3V AL E.CAP.	
C256	NCB31CK-104X	0.1MF 16V C CAP.	
C257	NCB31CK-104X	0.1MF 16V C CAP.	
C258	NCB31CK-104X	0.1MF 16V C CAP.	
C259	NCB31CK-104X	0.1MF 16V C CAP.	
C260	NCB11CK-105X	1MF 16V C CAP.	
C261	NCB11CK-105X	1MF 16V C CAP.	
C262	NCB11CK-105X	1MF 16V C CAP.	
C263	NCB11CK-105X	1MF 16V C CAP.	
C264	NCB31CK-104X	0.1MF 16V C CAP.	
C265	NEA71CM-476X	47MF 16V AL E.CAP.	
C271	NCB31HK-122X	1200PF 50V C.CAP.	
C272	NCB21CK-274X	0.27MF 16V C.CAP.	
C273	NCB31CK-104X	0.1MF 16V C CAP.	
C274	NEA71CM-226X	22MF 16V AL E.CAP.	
C275	NCB31CK-104X	0.1MF 16V C CAP.	
C276	NEA70JM-226X	22MF 6.3V AL E.CAP.	
C277	NCB31HK-392X	3900PF 50V C CAP.	
C278	NCB31HK-122X	1200PF 50V C.CAP.	
C301	NEA70JM-107X	100MF 6.3V E CAP..	

## ■ DVD Servo control P.C.B.

BLOCK NO.01

▲	Item	Parts Number	Description	Area
	C302	NEA70JM-107X	100MF 6.3V E CAP.	
	C303	NCB31CK-104X	0.1MF 16V C CAP.	
	C304	NCB31CK-104X	0.1MF 16V C CAP.	
	C305	NCB31CK-104X	0.1MF 16V C CAP.	
	C307	NCB31CK-104X	0.1MF 16V C CAP.	
	C308	NCB31CK-104X	0.1MF 16V C CAP.	
	C309	NCB31CK-104X	0.1MF 16V C CAP.	
	C310	NCB31CK-104X	0.1MF 16V C CAP.	
	C311	NCB31CK-104X	0.1MF 16V C CAP.	
	C312	NCB31CK-104X	0.1MF 16V C CAP.	
	C313	NCB31CK-104X	0.1MF 16V C CAP.	
	C314	NCB31CK-104X	0.1MF 16V C CAP.	
	C315	NCB31CK-104X	0.1MF 16V C CAP.	
	C316	NCB31CK-104X	0.1MF 16V C CAP.	
	C317	NCB31CK-104X	0.1MF 16V C CAP.	
	C318	NCB31CK-104X	0.1MF 16V C CAP.	
	C319	NCB31CK-104X	0.1MF 16V C CAP.	
	C320	NCB31HK-102X	1000PF 50V C CAP.	
	C321	NCB21AK-105X	1MF 10V C CAP.	
	C322	NCS31HJ-8R0X	8PF 50V C CAP.	
	C323	NCS31HJ-8R0X	8PF 50V C CAP.	
	C325	NCB31CK-103X	0.01MF 16V C.CAP.	
	C326	NCB31CK-104X	0.1MF 16V C CAP.	
	C327	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C328	NCB31CK-104X	0.1MF 16V C CAP.	
	C329	NCB31CK-104X	0.1MF 16V C CAP.	
	C331	NCB31CK-104X	0.1MF 16V C CAP.	
	C332	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C401	NCB31CK-104X	0.1MF 16V C CAP.	
	C402	NCB31CK-104X	0.1MF 16V C CAP.	
	C403	NCB31CK-104X	0.1MF 16V C CAP.	
	C404	NCB31CK-104X	0.1MF 16V C CAP.	
	C406	NCB31CK-104X	0.1MF 16V C CAP.	
	C411	NCB31CK-104X	0.1MF 16V C CAP.	
	C412	NCB31CK-104X	0.1MF 16V C CAP.	
	C421	NCB31CK-104X	0.1MF 16V C CAP.	
	C422	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C423	NCB31CK-104X	0.1MF 16V C CAP.	
	C424	NEA70JM-107X	100MF 6.3V E CAP.	
	C501	NCB31CK-104X	0.1MF 16V C CAP.	
	C502	NCB31CK-104X	0.1MF 16V C CAP.	
	C503	NCB31CK-104X	0.1MF 16V C CAP.	
	C504	NCB31CK-104X	0.1MF 16V C CAP.	
	C505	NCB31CK-104X	0.1MF 16V C CAP.	
	C506	NCB31CK-104X	0.1MF 16V C CAP.	
	C507	NCB31CK-104X	0.1MF 16V C CAP.	
	C508	NCB31CK-104X	0.1MF 16V C CAP.	
	C509	NCB31CK-104X	0.1MF 16V C CAP.	
	C510	NCB31CK-104X	0.1MF 16V C CAP.	
	C511	NCB31CK-104X	0.1MF 16V C CAP.	
	C512	NCB31CK-104X	0.1MF 16V C CAP.	
	C513	NCB31CK-104X	0.1MF 16V C CAP.	
	C514	NCB31CK-104X	0.1MF 16V C CAP.	
	C515	NCB31CK-104X	0.1MF 16V C CAP.	
	C516	NCB31CK-104X	0.1MF 16V C CAP.	
	C517	NCB31CK-104X	0.1MF 16V C CAP.	
	C518	NCB31CK-104X	0.1MF 16V C CAP.	
	C519	NCB31CK-104X	0.1MF 16V C CAP.	
	C520	NCB31CK-104X	0.1MF 16V C CAP.	
	C521	NCB31CK-104X	0.1MF 16V C CAP.	
	C522	NCB31CK-104X	0.1MF 16V C CAP.	
	C523	NCB31CK-104X	0.1MF 16V C CAP.	
	C524	NCB31CK-104X	0.1MF 16V C CAP.	
	C525	NCB31CK-104X	0.1MF 16V C CAP.	
	C526	NCB31CK-104X	0.1MF 16V C CAP.	
	C527	NCB31CK-104X	0.1MF 16V C CAP.	
	C528	NCB31CK-104X	0.1MF 16V C CAP.	

▲	Item	Parts Number	Description	Area
	C529	NCB31CK-104X	0.1MF 16V C CAP.	
	C530	NCB31CK-104X	0.1MF 16V C CAP.	
	C531	NCB31CK-104X	0.1MF 16V C CAP.	
	C532	NEA70JM-107X	100MF 6.3V E CAP.	
	C533	NCB31CK-104X	0.1MF 16V C CAP.	
	C534	NEA70JM-107X	100MF 6.3V E CAP.	
	C535	NCB31CK-104X	0.1MF 16V C CAP.	
	C536	NCB31CK-103X	0.01MF 16V C.CAP.	
	C537	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C538	NCB31CK-104X	0.1MF 16V C CAP.	
	C539	NCB31CK-104X	0.1MF 16V C CAP.	
	C540	NCB31CK-104X	0.1MF 16V C CAP.	
	C541	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C542	NCB31CK-104X	0.1MF 16V C CAP.	
	C551	NCB31CK-104X	0.1MF 16V C CAP.	
	C552	NCB31CK-104X	0.1MF 16V C CAP.	
	C553	NCB31CK-104X	0.1MF 16V C CAP.	
	C554	NCB31CK-104X	0.1MF 16V C CAP.	
	C555	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C556	NCB31CK-104X	0.1MF 16V C CAP.	
	C557	NCB31CK-104X	0.1MF 16V C CAP.	
	C558	NCB31CK-104X	0.1MF 16V C CAP.	
	C559	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C561	NCB31CK-104X	0.1MF 16V C CAP.	
	C562	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C563	NCB31CK-104X	0.1MF 16V C CAP.	
	C564	NCB31CK-104X	0.1MF 16V C CAP.	
	C565	NCB31CK-104X	0.1MF 16V C CAP.	
	C566	NCB31CK-104X	0.1MF 16V C CAP.	
	C567	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C568	NCB31CK-104X	0.1MF 16V C CAP.	
	C569	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C571	NCB31CK-104X	0.1MF 16V C CAP.	
	C572	NEX20JM-156X	15MF 6.3V E.CAP.	
	C587	NCB31CK-104X	0.1MF 16V C CAP.	
	C588	NEA70JM-226X	22MF 6.3V AL E.CAP.	
	C1521	NCB31CK-104X	0.1MF 16V C CAP.	
		RESISTORS		
	R101	NRSA63J-271X	RES.	
	R102	NRSA63J-102X	RES.	
	R103	NRS125J-100X	RES.	
	R104	NRS125J-2R2X	M.G.RES.	
	R105	NRSA63J-123X	MG RES.	
	R106	NRSA63J-223X	RES.	
	R107	NRSA63J-433X	METAL GLAZE	
	R110	NRSA63J-0R0X	RES.	
	R111	NRSA63J-682X	RES.	
	R114	NRSA63J-223X	RES.	
	R115	NRSA63J-752X	MG RES.	
	R116	NRSA63J-333X	RES.	
	R117	NRSA63J-103X	RES.	
	R118	NRSA63J-223X	RES.	
	R119	NRSA63J-332X	RES.	
	R120	NRSA63J-682X	RES.	
	R121	NRSA63J-474X	RES.	
	R122	NRSA63J-474X	RES.	
	R123	NRSA63J-223X	RES.	
	R124	NRSA63J-223X	RES.	
	R125	NRSA63J-333X	RES.	
	R126	NRSA63J-514X	MG RES.	
	R201	NRSA63J-472X	RES.	
	R202	NRSA63J-273X	MG RES.	
	R203	NRSA63J-822X	RES.	
	R204	NRSA63J-273X	MG RES.	
	R205	NRSA63J-183X	MG RES.	
	R206	NRSA63J-333X	RES.	
	R207	NRSA63J-273X	MG RES.	

■DVD Servo control P.C.B.

BLOCK NO.01

Item	Parts Number	Description	Area
R208	NRSA63J-562X	RES.	
R209	NRSA63J-562X	RES.	
R210	NRSA63J-562X	RES.	
R211	NRSA63J-562X	RES.	
R212	NRSA63J-562X	RES.	
R213	NRSA63J-562X	RES.	
R214	NRSA63J-562X	RES.	
R215	NRSA63J-562X	RES.	
R216	NRSA63J-562X	RES.	
R220	NRSA63J-512X	MG RES.	
R221	NRSA63J-101X	METAL GLAZE	
R222	NRSA63J-202X	MG RES.	
R223	NRSA63J-103X	RES.	
R224	NRSA63J-223X	RES.	
R251	NRSA63J-472X	RESISTER	
R252	NRVA63D-223NY	METAL GLAZE	
R254	NRVA63D-103NY	CONST.METAL	
R255	NRVA63D-223NY	METAL GLAZE	
R256	NRVA63D-103NY	CONST.METAL	
R257	NRSA63J-151X	MG RES.	
R258	NRS125J-R47X	METAL GLAZE	
R259	NRSA63J-0R0X	RESISTER	
R271	NRSA63J-103X	RES.	
R272	NRSA63J-682X	RES.	
R273	NRSA63J-0R0X	RES.	
R274	NRSA63J-682X	RES.	
R275	NRSA63J-103X	RES.	
R276	NRSA63J-105X	MG RES.	
R277	NRSA63J-822X	RES.	
R278	NRSA63J-123X	MG RES.	
R279	NRVA63D-123X	METAL GLAZE	
R280	NRVA63D-123X	METAL GLAZE	
R281	NRVA63D-473X	CONST.METAL	
R282	NRVA63D-473X	CONST.METAL	
R283	NRSA63J-393X	MG RES.	
R284	NRSA63J-682X	RES.	
R285	NRSA63J-682X	RES.	
R286	NRSA63J-0R0X	RES.	
R287	NRSA63J-682X	RES.	
R288	NRSA63J-682X	RES.	
R289	NRSA63J-0R0X	RES.	
R290	NRSA63J-203X	MG RES.	
R291	NRSA63J-0R0X	RES.	
R292	NRSA63J-0R0X	RES.	
R293	NRSA63J-0R0X	RES.	
R294	NRSA63J-0R0X	RES.	
R295	NRSA63J-472X	RES.	
R297	NRSA63J-0R0X	RES.	
R301	NRSA63J-330X	MG RES.	
R302	NRSA63J-330X	MG RES.	
R303	NRSA63J-330X	MG RES.	
R304	NRSA63J-330X	MG RES.	
R305	NRSA63J-330X	MG RES.	
R306	NRSA63J-471X	RES.	
R307	NRSA63J-471X	RES.	
R308	NRSA63J-102X	RES.	
R309	NRSA63J-473X	RES.	
R310	NRSA63J-105X	MG RES.	
R311	NRSA63J-471X	RES.	
R321	NRSA63J-473X	RES.	
R322	NRSA63J-473X	RES.	
R323	NRSA63J-473X	RES.	
R324	NRSA63J-473X	RES.	
R325	NRSA63J-473X	RES.	
R326	NRSA63J-473X	RES.	
R327	NRSA63J-473X	RES.	
R328	NRSA63J-473X	RES.	

Item	Parts Number	Description	Area
R329	NRSA63J-473X	RES.	
R402	NRSA63J-472X	RES.	
R403	NRSA63J-472X	RES.	
R407	NRSA63J-472X	RES.	
R408	NRSA63J-472X	RES.	
R409	NRSA63J-472X	RES.	
R410	NRSA63J-0R0X	RES.	
R411	NRSA63J-472X	RES.	
R423	NRSA63J-0R0X	RES.	
R424	NRSA63J-0R0X	RES.	BEEN
R425	NRSA63J-0R0X	RES.	
R427	NRSA63J-0R0X	RES.	EE
R431	NRSA63J-472X	RES.	
R432	NRSA63J-472X	RES.	
R433	NRSA63J-472X	RES.	
R434	NRSA63J-472X	RES.	
R435	NRSA63J-472X	RES.	
R501	NRSA63J-103X	RES.	
R509	NRSA63J-0R0X	RES.	
R516	NRSA63J-330X	MG RES.	
R517	NRSA63J-330X	MG RES.	
R518	NRSA63J-330X	MG RES.	
R519	NRSA63J-330X	MG RES.	
R520	NRSA63J-330X	MG RES.	
R521	NRSA63J-330X	MG RES.	
R522	NRSA63J-330X	MG RES.	
R525	NRSA63J-330X	MG RES.	
R526	NRSA63J-330X	MG RES.	
R527	NRSA63J-330X	MG RES.	
R528	NRSA63J-330X	MG RES.	
R529	NRSA63J-330X	MG RES.	
R530	NRSA63J-330X	MG RES.	
R531	NRSA63J-330X	MG RES.	
R532	NRSA63J-330X	MG RES.	
R533	NRSA63J-330X	MG RES.	
R534	NRSA63J-330X	MG RES.	
R535	NRSA63J-330X	MG RES.	
R536	NRSA63J-330X	MG RES.	
R537	NRSA63J-181X	RES.	
R538	NRSA63J-181X	RES.	
R539	NRSA63J-181X	RES.	
R540	NRSA63J-181X	RES.	
R541	NRSA63J-181X	RES.	
R542	NRSA63J-181X	RES.	
R543	NRSA63J-102X	RES.	
R544	NRSA63J-181X	RES.	
R554	NRSA63J-0R0X	RES.	
R555	NRSA63J-0R0X	RES.	
R557	NRSA63J-0R0X	RES.	
R561	NRVA63D-221X	METAL GLAZE	
R562	NRVA63D-221X	METAL GLAZE	
R563	NRVA63D-271X	METAL GLAZE	
R564	NRVA63D-152X	CONST.METAL	
R565	NRVA63D-332X	CONST.METAL	
R567	NRSA63J-0R0X	RES.	
R568	NRVA63D-221X	METAL GLAZE	
R569	NRVA63D-221X	METAL GLAZE	
R570	NRVA63D-221X	METAL GLAZE	
R571	NRSA63J-100X	MG RES.	
R572	NRSA63J-181X	RES.	
R573	NRSA63J-181X	RES.	
R574	NRSA63J-181X	RES.	
R575	NRSA63J-181X	RES.	
R576	NRSA63J-181X	RES.	
R577	NRSA63J-181X	RES.	
R578	NRSA63J-181X	RES.	
R579	NRSA63J-181X	RES.	

### ■ DVD Servo control P.C.B.

BLOCK NO.01

Item	Parts Number	Description	Area
R580	NRSA63J-181X	RES.	
R581	NRSA63J-101X	METAL GLAZE	
R582	NRSA63J-0R0X	RES.	
R583	NRVA63D-471X	CONST.METAL	
R584	NRVA63D-103NY	CONST.METAL	
R585	NRVA63D-471X	CONST.METAL	
R1203	NRSA63J-472X	RES.	
R1204	NRSA63J-332X	RES.	
R1205	NRSA63J-222X	MG RES.	
R1207	NRSA63J-151X	MG RES.	
R1208	NRSA63J-151X	MG RES.	
R1217	NRSA63J-102X	RES.	
R1220	NRSA63J-330X	MG RES.	
R1522	NRSA63J-332X	RES.	
R1523	NRSA63J-222X	MG RES.	
R1524	NRSA63J-332X	RES.	
R1525	NRSA63J-222X	MG RES.	
R1542	NRSA02J-0R0X	RES.	
R1543	NRSA02J-0R0X	RES.	
R1544	NRSA02J-0R0X	RES.	
OTHERS			
K101	NQR0007-002X	BANDPASS FILTER	
K102	NQR0007-002X	BANDPASS FILTER	
K103	NQR0007-002X	BANDPASS FILTER	
K104	NQR0007-002X	BANDPASS FILTER	
K105	NQR0007-002X	BANDPASS FILTER	
K106	NQR0007-002X	BANDPASS FILTER	
K107	NQR0007-002X	BANDPASS FILTER	
K108	NQR0007-002X	BANDPASS FILTER	
K109	NQR0007-002X	BANDPASS FILTER	
K110	NQR0007-002X	BANDPASS FILTER	
K111	NQR0007-002X	BANDPASS FILTER	
K201	NQR0007-002X	BANDPASS FILTER	
K301	NQR0007-002X	BANDPASS FILTER	
K302	NQR0007-002X	BANDPASS FILTER	
K305	NQR0007-002X	BANDPASS FILTER	
K306	NQR0007-002X	BANDPASS FILTER	
K402	NQR0007-002X	BANDPASS FILTER	
K403	NQR0007-002X	BANDPASS FILTER	
K501	NQR0007-002X	BANDPASS FILTER	
K502	NQR0007-002X	BANDPASS FILTER	
K503	NQR0007-002X	BANDPASS FILTER	
K505	NQR0007-002X	BANDPASS FILTER	
K507	NQR0007-002X	BANDPASS FILTER	
K508	NQR0007-002X	BANDPASS FILTER	
K509	NQR0007-002X	BANDPASS FILTER	
K510	NQR0007-002X	BANDPASS FILTER	
K511	NQR0007-002X	BANDPASS FILTER	
K512	NQR0007-002X	BANDPASS FILTER	
K513	NQR0007-002X	BANDPASS FILTER	
K514	NQR0007-002X	BANDPASS FILTER	
K515	NQR0007-002X	BANDPASS FILTER	
K516	NQR0007-002X	BANDPASS FILTER	
K517	NQR0007-002X	BANDPASS FILTER	
K518	NQR0007-002X	BANDPASS FILTER	
K519	NQR0007-002X	BANDPASS FILTER	
K520	NQR0007-002X	BANDPASS FILTER	
K521	NQR0007-002X	BANDPASS FILTER	
K522	NQR0007-002X	BANDPASS FILTER	
K523	NQR0007-002X	BANDPASS FILTER	
K525	NQR0007-002X	BANDPASS FILTER	
K526	NQR0007-002X	BANDPASS FILTER	
K527	NQR0007-002X	BANDPASS FILTER	
K528	NQR0007-002X	BANDPASS FILTER	
K529	NQR0007-002X	BANDPASS FILTER	
K530	NQR0007-002X	BANDPASS FILTER	
K532	NQR0007-002X	BANDPASS FILTER	

Item	Parts Number	Description	Area
K533	NQR0007-002X	BANDPASS FILTER	
K534	NQR0007-002X	BANDPASS FILTER	
K535	NQR0007-002X	BANDPASS FILTER	
K536	NQR0007-002X	BANDPASS FILTER	
K537	NQR0007-002X	BANDPASS FILTER	
K541	NQR0007-002X	BANDPASS FILTER	
K551	NQR0007-002X	BANDPASS FILTER	
K552	NQR0007-002X	BANDPASS FILTER	
K553	NQR0007-002X	BANDPASS FILTER	
K554	NQR0007-002X	BANDPASS FILTER	
K555	NQR0007-002X	BANDPASS FILTER	
K556	NQR0007-002X	BANDPASS FILTER	
K557	NQR0007-002X	BANDPASS FILTER	
K571	NQR0007-002X	BANDPASS FILTER	
L241	NQL044K-100X	INDUCTOR C.M	
X301	NAX0277-001X	CRYSTAL	
CN101	QGF1016C2-35W	CONNECT TERMINAL	
CN102	QGF1016C2-05W	CONNECT TERMINAL	
CN103	QGA1201C2-11X	CONNECT TERMINAL	
CN501	QGA2001C2-11X	CONNECT TERMINAL	
CN502	QGF1016C2-35W	CONNECT TERMINAL	
CN503	QGA2001C2-10X	CONNECT TERMINAL	

### ■ Sub P.C.B.

BLOCK NO. 04

Item	Parts Number	Description	Area
IC521	TC74VHC00FT-X	IC	
K505	NQR0007-002X	F.BEADS	
C1521	NCB31CK-104X	C CAPA	
R1522	NRSA63J-332X	MG.REGISTOR	
R1523	NRSA63J-222X	MG.REGISTOR	
R1524	NRSA63J-332X	MG.REGISTOR	
R1525	NRSA63J-222X	MG.REGISTOR	

**■D.C.Regulator P.C.B.**

BLOCK NO.02

Item	Parts Number	Description	Area
	I.C.S		
IC831	M66004SP	I.C(M)	
IC832	GP1U271X	INFRARED DETECT UNIT	
IC901	STR-F6652	I.C(M)	
IC951	PQ05RF2	I.C(HYBRID)	
IC953	LM2940CT-5.0	I.C(MONO-ANALOG)	
	DIODES		
D831	SLR-342VC-T	L.E.D.	
D833	SLR-342DC-T	L.E.D.	
D834	SLR-342YC-T	LED I.M	
D835	SLR-342YC-T	LED I.M	
D836	SLR-342YC-T	LED I.M	
D839	SLR-342MC-T	LED I.M	
D842	1SS119-02-T2	SI DIODE	
D843	1SS119-02-T2	SI DIODE	
D844	1SS119-02-T2	SI DIODE	
D845	1SS119-02-T2	SI DIODE	
D848	SLR-342MC-T	LED I.M	
D849	SLR-342MC-T	LED I.M	
D850	SLR-342MC-T	LED I.M	
D851	SLR-342MC-T	LED I.M	
D852	SLR-342MC-T	LED I.M	
D861	SLR-342DC-T	L.E.D.	
D862	SLR-342DC-T	L.E.D.	
D863	SLR-342DC-T	L.E.D.	
D864	SLR-342DC-T	L.E.D.	
⚠	D901 S1WB/A/60-4101	SI.DIODE	
	D902 ERA18-04-T2	DIODE	
	D903 ERA18-04-T2	DIODE	
	D904 ERA18-04-T2	DIODE	
	D908 ERA18-04-T2	DIODE	
	D910 ERA18-04-T2	DIODE	
	D911 1SS133-T2	SI.DIODE	
	D950 MTZJ27C-T2	Z.DIODE I.M	
⚠	D951 ERA18-04-T2	DIODE	
⚠	D952 ERA18-04-T2	DIODE	
⚠	D953 FMB-24	SI.DIODE	
⚠	D954 ERA18-04-T2	DIODE	
⚠	D956 ERA18-04-T2	DIODE	
	D957 ERA18-04-T2	DIODE	
	D960 MTZJ2.0A-T2	Z.DIODE I.M	
	D961 MTZJ12C-T2	ZENER DIODE	
	D962 MTZJ12C-T2	ZENER DIODE	
	D963 1SS133-T2	SI.DIODE	
	D964 1SS133-T2	SI.DIODE	
	D965 MTZJ5.1C-T2	ZENER DIODE	
	D970 1SS133-T2	SI.DIODE	
	D971 MTZJ3.9B-T2	Z DIODE	
	D972 1SS133-T2	SI.DIODE	
	D973 1SS133-T2	SI.DIODE	
	D974 1SS133-T2	SI.DIODE	
	TRANSISTORS		
	Q831 DTC114YS-T	TRANSISTOR	
	Q832 DTC114YS-T	TRANSISTOR	
	Q833 DTC114YS-T	TRANSISTOR	
	Q834 DTC114YS-T	TRANSISTOR	
	Q835 DTC114YS-T	TRANSISTOR	
	Q836 DTC114YS-T	TRANSISTOR	
	Q837 UN6211-T	DIGITAL TRANSISTOR	
	Q838 UN6211-T	DIGITAL TRANSISTOR	
	Q839 UN6211-T	DIGITAL TRANSISTOR	
	Q840 UN6211-T	DIGITAL TRANSISTOR	
	Q861 UN6211-T	DIGITAL TRANSISTOR	
	Q862 UN6211-T	DIGITAL TRANSISTOR	
	Q951 2SC2060/QR/-T	TR.I/M	
	Q952 DTA144ES-T	TR I/M	
	Q953 2SB1565/EF/	SI.TRANSISTOR	

Item	Parts Number	Description	Area
	Q954 2SC1740S/RS/-T	SI.TRANSISTOR	
	Q955 DTA114YS-T	TRANSISTOR	
	Q956 DTC144ES-T	TRANSISTOR	
	Q957 2SD2394/EF/	TRANSISTOR	
	Q958 2SA933S/RS/-T	TRANSISTOR	
	Q959 DTC114YS-T	TRANSISTOR	
	Q960 DTA144ES-T	TRANSISTOR	
	Q961 2SC1740S/RS/-T	SI.TRANSISTOR	
	Q962 2SA933S/RS/-T	TRANSISTOR	
	Q964 2SB1565/EF/	SI.TRANSISTOR	
	Q965 2SC1740S/RS/-T	SI.TRANSISTOR	
	Q966 2SA933S/RS/-T	TRANSISTOR	
	CAPACITORS		
	C832 QER61AM-476Z	47MF 10V E CAP.	
	C833 QCBB1HK-101Y	100PF 50V CER.CAP.	
	C834 QDVB1EZ-223Y	0.022MF 25V C CAP.	
	C835 QCBB1HK-471Y	470PF 50V CER.CAP.	
	C836 QCBB1HK-471Y	470PF 50V CER.CAP.	
	C837 QCBB1HK-471Y	470PF 50V CER.CAP.	
	C838 QDVB1EZ-223Y	0.022MF 25V C CAP.	
	C839 QER61AM-226Z	22MF 10V E CAP.	
	C841 QCFB1HZ-104Y	0.1MF 50V CER.CAP.	
⚠	C842 QER51HM-475	4.7MF 50V AL E.CAP.	
⚠	C902 QFZ9067-683	0.068MF METAL.MYLAR	
⚠	C905 QCZ9079-102	1000PF CER.CAP.	
⚠	C906 QCZ9079-102	1000PF CER.CAP.	
	C907 QEZ0374-826	82MF AL E.CAP.	
	C908 QCZ0136-332Z	3300PF CER.CAP.	
	C909 QCZ0136-101Z	100PF CER.CAP.	
	C910 QCS21HJ-221	220PF 50V CER.CAP.	
	C913 QCZ0136-221Z	220PF CER.CAP.	
	C914 QEMU1EM-396Z	39MF 25V AL E.CAP.	
	C915 QCBB1HK-471Y	470PF 50V CER.CAP.	
⚠	C916 QCZ9079-332	3300PF CER.CAP.	
	C918 QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C919 QCFB1HZ-104Y	0.1MF 50V CER.CAP.	
	C931 QCZ0205-155	1.5MF 25V C.CAP.	
	C932 QCZ0205-155	1.5MF 25V C.CAP.	
	C951 QCS21HJ-101A	100PF 50V CER.CAP.	
	C952 QCS21HJ-101A	100PF 50V CER.CAP.	
	C953 QCS21HJ-101A	100PF 50V CER.CAP.	
	C954 QCS21HJ-101A	100PF 50V CER.CAP.	
	C956 QCS21HJ-101A	100PF 50V CER.CAP.	
	C957 QCS21HJ-101A	100PF 50V CER.CAP.	
	C960 QEMU1AM-107Z	100MF 10V AL E.CAP.	
	C961 QCZ0205-155	1.5MF 25V C.CAP.	
	C962 QETB1HM-226E	22MF 50V E.CAP.	
	C963 QEMU1VM-396Z	39MF 35V AL E.CAP.	
	C964 QETB1HM-226E	22MF 50V E.CAP.	
	C965 QEMS1AM-108	1000MF 10V AL E.CAP.	
	C966 QETB1AM-477	470MF 10V E.CAP.	
	C967 QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C968 QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C969 QETB1AM-227	220MF 10V E.CAP.	
	C970 QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C973 QETC1AM-107ZN	100MF 10V E.CAP.	
	C976 QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C977 QFVJ1HJ-104Z	0.1MF 50V TF CAP.	
	C978 QETC1AM-107ZN	100MF 10V E.CAP.	
	C979 QEMS1CM-827	820MF 16V AL E.CAP.	
	C981 QCZ0205-155	1.5MF 25V C.CAP.	
	C982 QEMS1EM-567	560MF 25V AL E.CAP.	
	C984 QETC1EM-227ZN	220MF 25V AL E.CAP.	
	C985 QETB1CM-476	47MF 16V AL E.CAP.	
	C986 QETB1CM-107	100MF 16V AL E.CAP.	
	C987 QEMU1EM-187Z	180MF 25V AL E.CAP.	
	C989 QETB1EM-107	100MF 25V AL E.CAP.	

**D.C.Regulator P.C.B.**

**BLOCK NO.02**

⚠	Item	Parts Number	Description	Area
	C990	QETB1CM-476	47MF 16V AL E.CAP.	
	C991	QETB1CM-107	100MF 16V AL E.CAP.	
	C992	QETN1HM-474Z	0.47MF 50V AL E.CAP.	
	C993	QCS21HJ-101A	100PF 50V CER.CAP.	
	C994	QDVB1EZ-223Y	0.022MF 25V C CAP.	
	C995	QETC1CM-227Z	220MF 16V AL E.CAP.	
	C996	QETB1CM-226	22MF 16V E.CAP.	
	C997	QETC1CM-227Z	220MF 16V AL E.CAP.	
		RESISTORS		
	R831	QRE141J-331Y	330 1/4W C RES.	
	R832	QRE141J-151Y	150 1/4W C RES.	
	R833	QRE141J-331Y	330 1/4W C RES.	
	R834	QRE141J-151Y	150 1/4W C RES.	
	R835	QRE141J-151Y	150 1/4W C RES.	
	R836	QRE141J-151Y	150 1/4W C RES.	
	R837	QRE141J-472Y	4.7K 1/4W C RES.	
	R838	QRE141J-331Y	330 1/4W C RES.	
	R839	QRE141J-331Y	330 1/4W C RES.	
	R840	QRE141J-472Y	4.7K 1/4W C RES.	
	R841	QRE141J-331Y	330 1/4W C RES.	
	R842	QRE141J-331Y	330 1/4W C RES.	
	R843	QRE141J-273Y	27K 1/4W CARBON RES.	
	R845	QRE141J-102Y	1K 1/4W C RES.	
	R846	QRE141J-102Y	1K 1/4W C RES.	
	R847	QRE141J-102Y	1K 1/4W C RES.	
	R848	QRE141J-102Y	1K 1/4W C RES.	
	R849	QRE141J-222Y	2.2K 1/4W C RES.	
	R850	QRE141J-222Y	2.2K 1/4W C RES.	
	R851	QRE141J-331Y	330 1/4W C RES.	
	R861	QRE141J-331Y	330 1/4W C RES.	
	R862	QRE141J-331Y	330 1/4W C RES.	
	R863	QRE141J-331Y	330 1/4W C RES.	
	R864	QRE141J-331Y	330 1/4W C RES.	
	R900	QRE141J-221Y	220 1/4W C RES.	
	R901	QRL01DJ-683X	68K 1W OXIDE METAL	
	R903	QRE141J-270Y	27 1/4W C RES.	
	R904	QRE141J-222Y	2.2K 1/4W C RES.	
	R905	QRL027J-104	100K 2W OXIDE METAL	
	R906	QRE141J-681Y	680 1/4W CARBON RES.	
	R907	QRT022J-R56	0.56 2W METAL FILM R	
	R908	QRE141J-332Y	3.3K 1/4W C RES.	
	R911	QRE141J-105Y	1M 1/4W C RES.	
	R952	QRE141J-103Y	10K 1/4W CARBON RES.	
	R953	QRE141J-103Y	10K 1/4W CARBON RES.	
⚠	R954	QRZ9006-4R7X	4.7 F RES.	
	R955	QRE141J-223Y	22K 1/4W C RES.	
	R956	QRE141J-103Y	10K 1/4W CARBON RES.	
	R957	QRE141J-103Y	10K 1/4W CARBON RES.	
	R958	QRE141J-102Y	1K 1/4W C RES.	
	R959	QRE141J-102Y	1K 1/4W C RES.	
	R960	QRE141J-101Y	100 1/4W C RES.	
	R961	QRE141J-681Y	680 1/4W CARBON RES.	
	R962	QRE141J-105Y	1M 1/4W C RES.	
	R963	QRE141J-101Y	100 1/4W C RES.	
	R964	QRE141J-105Y	1M 1/4W C RES.	
	R965	QRE141J-103Y	10K 1/4W CARBON RES.	
⚠	R966	QRK126J-2R7X	2.7 1/2W C RES.	
⚠	R967	QRZ9005-100X	10 F RES 1/M	
⚠	R968	QRK126J-2R7X	2.7 1/2W C RES.	
	R969	QRE141J-221Y	220 1/4W C RES.	
	R971	QRE141J-472Y	4.7K 1/4W C RES.	
	R972	QRE141J-152Y	1.5K 1/4W CARBON RES.	
	R973	QRE141J-102Y	1K 1/4W C RES.	
	R974	QRE141J-562Y	5.6K 1/4W C RES.	
	R975	QRE141J-562Y	5.6K 1/4W C RES.	
		QRE141J-683Y	68K 1/4W C RES.	
	R976	QRE141J-221Y	220 1/4W C RES.	

⚠	Item	Parts Number	Description	Area
	R980	QRE141J-821Y	820 1/4W CARBON RES.	
	RA801	QRB039J-472	4.7K 1/10WR.NETWORK	
	RA802	QRB039J-472	4.7K 1/10WR.NETWORK	
		OTHERS		
	K902	QQR0601-001Z	F.BEADS I.M	
	L951	QQL01BK-R22Z	INDUCTOR	
	L952	QQL31AK-101Z	INDUCTOR	
	L955	QQL31AK-101Z	INDUCTOR	
	L957	QQL31AK-101Z	INDUCTOR	
	L959	QQL31AK-101Z	INDUCTOR	
	S831	QVQ0123-B15	VARIABLE RES.	
	S832	QSW0499-001Z	TACT SWITCH	
	S833	QSW0499-001Z	TACT SWITCH	
	S834	QSW0499-001Z	TACT SWITCH	
	S835	QSW0499-001Z	TACT SWITCH	
	S840	QSW0499-001Z	TACT SWITCH	
	S844	QSW0499-001Z	TACT SWITCH	
	S845	QSW0499-001Z	TACT SWITCH	
	S846	QSW0499-001Z	TACT SWITCH	
	S847	QSW0499-001Z	TACT SWITCH	
	S848	QSW0499-001Z	TACT SWITCH	
	S860	QSW0499-001Z	TACT SWITCH	
	S861	QSW0499-001Z	TACT SWITCH	
	S862	QSW0499-001Z	TACT SWITCH	
	S863	QSW0499-001Z	TACT SWITCH	
	S864	QSW0499-001Z	TACT SWITCH	
	S865	QSW0499-001Z	TACT SWITCH	
	S866	QSW0499-001Z	TACT SWITCH	
	S867	QSW0499-001Z	TACT SWITCH	
⚠	T901	QQR0894-001	LINE FILTER	
	T902	QQS0028-001	SWITCHING TRANSFORMER	
	BK901	E409182-001SM	EARTH TERMINAL	
	CN805	EWS17B-004	SOCKET WIRE ASSY	
	CN807	QGD2501C1-05Z	SOCKET ASSY	
	CN831	QGF1016C1-27	CONNECTOR	
	CN832	QGB2014N1-06	CONNECTOR	
	CN833	QGB2014P1-06	CONNECTOR	
	CN834	QGD2501C1-03Z	SOCKET ASSY	
⚠	CF951	ICP-N10-T	ICP I.M	
	DI831	QLF0049-001	FLUORESCENT DISPLAY TUBE	
	EP951	QNZ0136-001Z	EARTH PLATE	
	FC901	QNG0003-001Z	FUSE CLIP	
	FC902	QNG0003-001Z	FUSE CLIP	
	FL901	E67132-TR80	FUSE LABEL	
	FW831	QUM106-16DGZ4	FLAT WIRE	
	FW834	QUM103-08DGZ4	FLAT WIRE	
⚠	HS901	LE40597-001A	HEAT SINK	
⚠	HS964	LE40505-001A	HEAT SINK	
	JT801	QGD2501C1-03Z	SOCKET ASSY	
	JT806	QGD2501C1-03Z	SOCKET ASSY	
	JT811	QGD2501C1-03Z	SOCKET ASSY	
	JT816	QGD2501C1-03Z	SOCKET ASSY	
⚠	PC901	PC123F	I.C(PHOTO COUPLER)	
⚠	PC902	PC123F	I.C(PHOTO COUPLER)	
	TB901	QNZ0079-001Z	TAB I.M	
	TB902	QNZ0079-001Z	TAB I.M	

■Audio/VideoP.C.B.

BLOCK NO.03

Item	Parts Number	Description	Area
	I.C.S		
IC611	NJM78M05FA	I.C(MONO-ANALOG)	
IC621	NJM2267D	I.C(M)	
IC622	NJM2268D	I.C(MONO-ANALOG)	
IC623	BA7652AF-X	I.C(M)	
IC641	M51494L	I.C(M)	
IC642	BU2092	I.C(M)	
IC651	NJM78L09A-T	I.C(M)	
IC701	JCE8001-X	I.C(M)	
IC702	MN35503	I.C(DIGI-MOS)	
IC703	NJM5532L	I.C(MONO-ANALOG)	
IC704	NJM5532L	I.C(MONO-ANALOG)	
IC705	AK4324-VF-X	I.C(M)	
IC706	NJM4580M-X	I.C(M)	
IC707	NJM4580M-X	I.C(M)	
IC708	AK4324-VF-X	I.C(M)	
IC714	M30622EC-FP	I.C(M)	
IC715	TC7SH08F-X	I.C(M)	
IC716	AK93C45AF-W	I.C(M)	
IC717	PST574CMT-X	I.C(MONO-ANALOG)	
△ IC718	NJM78M05FA	I.C(MONO-ANALOG)	
IC850	NJM4580E-W	I.C(M)	
	DIODES		
D603	1SS133-T2	SI.DIODE	
D604	1SS133-T2	SI.DIODE	
D701	KV1555N-T	VARI-CAPA DIODE	
D702	KV1555N-T	VARI-CAPA DIODE	
D703	MTZJ5.1C-T2	ZENER DIODE	
D704	1SS133-T2	SI.DIODE	
D705	1SS133-T2	SI.DIODE	
D706	1SS133-T2	SI.DIODE	
D707	1SS133-T2	SI.DIODE	
D708	1SS133-T2	SI.DIODE	
D709	1SS133-T2	SI.DIODE	
D710	1SS355-X	SI.DIODE	
D711	1SS355-X	SI.DIODE	
D712	1SS355-X	SI.DIODE	
D713	1SS355-X	SI.DIODE	
D715	MTZJ3.3B-T2	ZENER DIODE 1/M	
D717	1SS133-T2	SI.DIODE	
D718	1SS133-T2	SI.DIODE	
D799	1SS133-T2	SI.DIODE	
	TRANSISTORS		
Q611	2SA933/RS/-T	TRANSISTOR	
Q612	DTC144ES	DIGITAL TRANSISTOR	
Q621	2SA933/RS/-T	TRANSISTOR	
Q622	2SA933/RS/-T	TRANSISTOR	
Q623	2SA933/RS/-T	TRANSISTOR	
Q641	2SC1741A/QR/-T	TRANSISTOR	
Q642	2SA933/RS/-T	TRANSISTOR	
Q671	2SA933/RS/-T	TRANSISTOR	
Q672	2SA933/RS/-T	TRANSISTOR	
Q681	2SD1302/ST/-T	TRANSISTOR	
Q682	2SD1302/ST/-T	TRANSISTOR	
Q691	DTC114ES	DIGITAL TRANSISTOR	
Q704	DTA114ES	DIGITAL TRANSISTOR	
Q705	2SD1302/ST/-T	TRANSISTOR	
Q706	2SD1302/ST/-T	TRANSISTOR	
Q707	DTA114ES	DIGITAL TRANSISTOR	
Q708	DTA114ES	DIGITAL TRANSISTOR	
Q711	2SD1302/ST/-T	TRANSISTOR	
Q712	2SD1302/ST/-T	TRANSISTOR	
Q715	2SD1302/ST/-T	TRANSISTOR	
Q716	DTA114ES	DIGITAL TRANSISTOR	
Q718	2SD1302/ST/-T	TRANSISTOR	
Q720	2SD1302/ST/-T	TRANSISTOR	
Q723	2SD1302/ST/-T	TRANSISTOR	

Item	Parts Number	Description	Area
Q724	DTA114ES	DIGITAL TRANSISTOR	
Q725	DTA114ES	DIGITAL TRANSISTOR	
Q726	DTA114ES	DIGITAL TRANSISTOR	
Q851	2SD1302/ST/-T	TRANSISTOR	
Q852	2SD1302/ST/-T	TRANSISTOR	
	CAPACITORS		
C611	QTE1C27-228	2200MF 16V E.CAP.	
C612	QTE0J28-227Z	220MF 6.3V E.CAP.	
C621	QCZ0205-155	1.5MF 25V C.CAP.	
C622	QDX31EM-103Z	0.01MF 25V C CAP.	
C623	QDX31EM-103Z	0.01MF 25V C CAP.	
C624	QCZ0205-155	1.5MF 25V C.CAP.	
C626	QTE1A28-108Z	100MF 10V E CAP.	
C627	QTE1A28-107Z	100MF 10V E CAP.	
C628	QDX31EM-473Z	0.047MF 25V C CAP.	
C629	QTE1A28-107Z	100MF 10V E CAP.	
C630	QDX31EM-473Z	0.047MF 25V C CAP.	
C641	QDX31EM-104Z	0.1MF 25V C CAP.	
C642	QDC31HJ-470Z	47PF 50V C.CAP.	
C643	QTE1C28-476Z	47MF 16V E.CAP.	
C644	QDC31HJ-221Z	220PF 50V C.CAP.	
C645	QCZ0205-155	1.5MF 25V C.CAP.	
C646	QDX31EM-104Z	0.1MF 25V C CAP.	
C647	QDC31HJ-101Z	100PF 50V C.CAP.	
C648	QCZ0205-155	1.5MF 25V C.CAP.	
C649	QDX31EM-473Z	0.047MF 25V C CAP.	
C650	QTE1C28-227Z	220MF 16V AL E.CAP.	
C651	QTE1A28-107Z	100MF 10V E.CAP.	
C652	QDX31EM-473Z	0.047MF 25V C CAP.	
C653	QTE1C28-106Z	10MF 16V E.CAP.	
C654	QTE1C28-227Z	220MF 16V AL E.CAP.	
C662	QCF31HZ-223Z	0.022MF 50V C.CAP.	
C671	QDX31EM-473Z	0.047MF 25V C CAP.	
C672	QDX31EM-104Z	0.1MF 25V C CAP.	
C673	QCZ0205-155	1.5MF 25V C.CAP.	
C674	QTE1A28-108Z	1000MF 10V E CAP.	
C675	QTE1A28-107Z	100MF 10V E.CAP.	
C676	QDX31EM-473Z	0.047MF 25V C CAP.	
C685	QCS31HJ-471Z	470PF 50V CER.CAP.	
C686	QCS31HJ-471Z	470PF 50V CER.CAP.	
C691	QDCB1HJ-100Y	10PF 50V C CAP.	
C694	QTE1A28-108Z	1000MF 10V E CAP.	
C695	QDX31EM-104Z	0.1MF 25V C CAP.	
C701	QTE0J28-477Z	470MF 6.3V E.CAP.	
C702	QCZ0205-155	1.5MF 25V C.CAP.	
C703	NCS21HJ-222X	2200PF 50V C.CAPA. C.M	
C704	QFVJ1HJ-474Z	0.47MF 50V CAP.	
C705	QDYB1CM-103Y	0.01MF 16V CER.CAP.	
C706	QCGB1HK-102	1000PF 50V CER.CAP.	
C707	QCGB1HK-102	1000PF 50V CER.CAP.	
C708	QDX31EM-473Z	0.047MF 25V C CAP.	
C713	QETB0JM-477	470MF 6.3V AL E.CAP.	
C715	QETB0JM-477	470MF 6.3V AL E.CAP.	
C717	NCB21CK-104X	0.1MF 16V CER.CAP.	
C718	QETB1AM-227	220MF 10V E.CAP.	
C719	NCB21CK-104X	0.1MF 16V CER.CAP.	
C720	NCS21HJ-102X	1000PF 50V C CAP.	
C721	NCB21CK-104X	0.1MF 16V CER.CAP.	
C722	NCB21CK-104X	0.1MF 16V CER.CAP.	
C723	NCB21CK-104X	0.1MF 16V CER.CAP.	
C724	QTE0J28-477Z	470MF 6.3V E.CAP.	
C725	NCF21CZ-155X	1.5MF 16V C.CAP.	
C726	QCZ0205-155	1.5MF 25V C.CAP.	
C727	QCZ0205-155	1.5MF 25V C.CAP.	
C728	QTE0J28-477Z	470MF 6.3V E.CAP.	
C729	QTE0J28-477Z	470MF 6.3V E.CAP.	
C730	QCZ0205-155	1.5MF 25V C.CAP.	

Audio/Video P.C.B.

BLOCK NO.03

Item	Parts Number	Description	Area
C731	QCZ0205-155	1.5MF 25V C.CAP.	
C732	QCZ0205-155	1.5MF 25V C.CAP.	
C733	QTE0J28-477Z	470MF 6.3V E.CAP.	
C734	QCF31HZ-473Z	0.047MF 50V C CAP.	
C735	QCF31HZ-103Z	0.01MF 50V C CAP.	
C736	QDYB1CM-103Y	0.01MF 16V CER.CAP.	
C737	QFLB1HJ-152	1500PF 50V MYLAR CAP.	
C738	QFLC1HJ-181ZM	180PF 50V MYLAR CAP.	
C739	QFN31HJ-333Z	0.033MF 50V MYLAR CAP.	
C740	QFN31HJ-103Z	0.01MF 50V MYLAR CAP.	
C741	QFLB1HJ-152	1500PF 50V MYLAR CAP.	
C742	QFLB1HJ-182	1800PF 50V MYLAR CAP.	
C743	QTE1C28-477Z	470MF 16V E.CAP.	
C744	QTE1C28-477Z	470MF 16V E.CAP.	
C745	QFLB1HJ-152	1500PF 50V MYLAR CAP.	
C746	QFLC1HJ-181ZM	180PF 50V MYLAR CAP.	
C747	QFN31HJ-333Z	0.033MF 50V MYLAR CAP.	
C748	QFN31HJ-103Z	0.01MF 50V MYLAR CAP.	
C749	QFLB1HJ-152	1500PF 50V MYLAR CAP.	
C750	QFLB1HJ-182	1800PF 50V MYLAR CAP.	
C751	QTE1C28-477Z	470MF 16V E.CAP.	
C752	QTE1C28-477Z	470MF 16V E.CAP.	
C753	QTE1E28-476Z	47MF 25V E.CAP.	
C754	QTE1E28-476Z	47MF 25V E.CAP.	
C755	QDXB1CM-152Y	1500PF 16V C.CAP.	
C760	QFLB1HJ-152	1500PF 50V MYLAR CAP.	
C761	QTE1E06-476Z	47MF 25V AL E.CAP.	
C762	QFLB1HJ-152	1500PF 50V MYLAR CAP.	
C763	QTE1E06-476Z	47MF 25V AL E.CAP.	
C764	QFLB1HJ-152	1500PF 50V MYLAR CAP.	
C765	QTE0J28-107Z	100MF 6.3V E.CAP.	
C766	NCB21CK-104X	0.1MF 16V CER.CAP.	
C767	NCB21CK-104X	0.1MF 16V CER.CAP.	
C768	QTE0J28-107Z	100MF 6.3V E.CAP.	
C769	NCB21CK-104X	0.1MF 16V CER.CAP.	
C770	QTE0J28-107Z	100MF 6.3V E.CAP.	
C771	QTE1E28-476Z	47MF 25V E.CAP.	
C772	QTE1E28-476Z	47MF 25V E.CAP.	
C773	QTE1E28-476Z	47MF 25V E.CAP.	
C774	QTE1E28-476Z	47MF 25V E.CAP.	
C775	NCS21HJ-681X	680PF 50V CER.CAP.	
C776	NCS21HJ-221X	220PF 50V C CAP.	
C777	NCS21HJ-221X	220PF 50V C CAP.	
C778	QTE1C28-107Z	100MF 16V E.CAP.	
C779	QTE1C28-107Z	100MF 16V E.CAP.	
C782	QTE1E28-476Z	47MF 25V E.CAP.	
C783	NCS21HJ-152X	1500PF 50V C.CAP.	
C784	QDXB1CM-152Y	1500PF 16V C.CAP.	
C785	NCS21HJ-681X	680PF 50V CER.CAP.	
C786	NCS21HJ-221X	220PF 50V C CAP.	
C787	NCS21HJ-221X	220PF 50V C CAP.	
C792	QTE1E28-476Z	47MF 25V E.CAP.	
C793	NCS21HJ-152X	1500PF 50V C.CAP.	
C794	QTE0J28-107Z	100MF 6.3V E.CAP.	
C795	NCB21CK-104X	0.1MF 16V CER.CAP.	
C796	NCB21CK-104X	0.1MF 16V CER.CAP.	
C797	QTE0J28-107Z	100MF 6.3V E.CAP.	
C798	NCB21CK-104X	0.1MF 16V CER.CAP.	
C851	QTE1C28-476Z	47MF 16V E.CAP.	
C852	QTE1C28-476Z	47MF 16V E.CAP.	
C853	QTE1C28-476Z	47MF 16V E.CAP.	
C854	QTE1C28-476Z	47MF 16V E.CAP.	
C855	NCS21HJ-101X	100PF 50V C CAP.	
C856	NCS21HJ-101X	100PF 50V C CAP.	
C857	NCS21HJ-151X	150PF 50V CER.CAP.	
C858	NCS21HJ-151X	150PF 50V CER.CAP.	
C859	QTE0J28-227Z	220MF 6.3V E.CAP.	

Item	Parts Number	Description	Area
C860	QTE0J28-227Z	220MF 6.3V E.CAP.	
C861	QFLB1HJ-103	0.01MF 50V MYLAR CAP.	
C862	QFLB1HJ-103	0.01MF 50V MYLAR CAP.	
C863	NCB21HK-223X	0.022MF 50V C CAP.	
C865	NCS21HJ-471X	470PF 50V C CAP.	
C866	NCS21HJ-471X	470PF 50V C CAP.	
C871	NCS21HJ-221X	220PF 50V C CAP.	
C872	NCS21HJ-221X	220PF 50V C CAP.	
C891	QCFB1HZ-473Y	0.047MF 50V CER.CAP.	
C899	QDYB1EZ-223Y	0.022MF 25V C CAP.	
C1001	QTE1E28-476Z	47MF 25V E.CAP.	
C1002	QTE1E28-476Z	47MF 25V E.CAP.	
C1003	NCS21HJ-681X	680PF 50V CER.CAP.	
	NCS21HJ-821X	820PF 50V C CAP.	
C1004	NCS21HJ-221X	220PF 50V C CAP.	
C1005	NCS21HJ-221X	220PF 50V C CAP.	
C1006	QTE1C28-107Z	100MF 16V E.CAP.	
C1007	QTE1C28-107Z	100MF 16V E.CAP.	
C1009	QTE1E28-476Z	47MF 25V E.CAP.	
C1010	NCS21HJ-152X	1500PF 50V C.CAP.	
C1011	NCS21HJ-152X	1500PF 50V C.CAP.	
C1012	QTE1E28-476Z	47MF 25V E.CAP.	
C1013	QTE1E28-476Z	47MF 25V E.CAP.	
C1014	NCB21CK-153X	0.015MF 16V CER.CAP.	
C1015	NCB21HK-123X	0.012MF 50V C CAP.	
C1016	NCB21HK-123X	0.012MF 50V C CAP.	
C1021	QTE1E28-476Z	47MF 25V E.CAP.	
C1022	NCS21HJ-152X	1500PF 50V C.CAP.	
C1023	NCS21HJ-152X	1500PF 50V C.CAP.	
C1024	QTE1C28-477Z	470MF 16V E.CAP.	
C1025	QTE1C28-477Z	470MF 16V E.CAP.	
C1026	QTE0J28-477Z	470MF 6.3V E.CAP.	
C1033	QTE1E28-475Z	4.7MF 25V E.CAP.	
C1034	QTE1E28-475Z	4.7MF 25V E.CAP.	
C1035	NCS21HJ-8R0X	8PF 50V C CAP.	
C1036	NCS21HJ-270X	27PF 50V C.CAP.	
C1037	QTE1C28-107Z	100MF 16V E.CAP.	
C1038	NCB21CK-104X	0.1MF 16V CER.CAP.	
C1039	QTE1A28-107Z	100MF 10V E.CAP.	
C1040	QTE1E28-476Z	47MF 25V E.CAP.	
C1041	NCS21HJ-470X	47PF 50V C CAP.	
C1042	QCBB1HK-221Y	220PF 50V CER.CAP.	
C1048	NCS21HJ-152X	1500PF 50V C.CAP.	
	RESISTORS		
R615	QRE141J-102Y	1K 1/4W C RES.	
R616	QRE141J-123Y	12K 1/4W C RES.	
R617	QRE141J-103Y	10K 1/4W CARBON RES.	
R621	QRE141J-752Y	7.5K 1/4W C RES.	
R622	QRE141J-752Y	7.5K 1/4W C RES.	
R623	QRE141J-102Y	1K 1/4W C RES.	
R624	QRE141J-102Y	1K 1/4W C RES.	
R625	QRE141J-102Y	1K 1/4W C RES.	
R626	QRE141J-221Y	220 1/4W C RES.	
R627	QRE141J-102Y	1K 1/4W C RES.	
R629	QRE141J-102Y	1K 1/4W C RES.	
R630	QRE141J-221Y	220 1/4W C RES.	
R631	QRE141J-222Y	2.2K 1/4W C RES.	
R633	QRE141J-750Y	75 1/4W C RES.	
R641	QRE141J-471Y	470 1/4W C RES.	
R642	QRE141J-471Y	470 1/4W C RES.	
R643	QRE141J-911Y	910 1/4W C RES.	
R644	QRE141J-102Y	1K 1/4W C RES.	
R645	QRE141J-751Y	750 1/4W C RES.	
R646	QRE141J-222Y	2.2K 1/4W C RES.	
R647	QRE141J-221Y	220 1/4W C RES.	
R648	QRE141J-102Y	1K 1/4W C RES.	
R650	QRE141J-153Y	15K 1/4W C RES.	

■Audio/VideoP.C.B.

BLOCK NO.03

Item	Parts Number	Description	Area
R651	QRE141J-243Y	24K 1/4W C RES.	
R652	QRE141J-334Y	330K 1/4W C RES.	
R653	QRE141J-164Y	160K 1/4W C RES.	
R654	QRE141J-823Y	82K 1/4W C RES.	
R655	QRE141J-393Y	39K 1/4W C RES.	
R656	QRE141J-203Y	20K 1/4W C RES.	
R657	QRE141J-103Y	10K 1/4W CARBON RES.	
R658	QRE141J-334Y	330K 1/4W C RES.	
R659	QRE141J-164Y	160K 1/4W C RES.	
R660	QRE141J-823Y	82K 1/4W C RES.	
R661	QRE141J-393Y	39K 1/4W C RES.	
R662	QRE141J-203Y	20K 1/4W C RES.	
R663	QRE141J-103Y	10K 1/4W CARBON RES.	
R672	QRE141J-562Y	5.6K 1/4W C RES.	
R673	QRE141J-102Y	1K 1/4W C RES.	
R674	QRE141J-102Y	1K 1/4W C RES.	
R675	QRE141J-102Y	1K 1/4W C RES.	
R676	QRE141J-750Y	75 1/4W C.RES.	
R679	QRE141J-102Y	1K 1/4W C RES.	
R680	QRE141J-102Y	1K 1/4W C RES.	
R681	QRE141J-221Y	220 1/4W C RES.	
R682	QRE141J-222Y	2.2K 1/4W C RES.	
R683	QRE141J-750Y	75 1/4W C.RES.	
R684	QRE141J-103Y	10K 1/4W CARBON RES.	
R685	QRE141J-151Y	150 1/4W C RES.	
R686	QRE141J-151Y	150 1/4W C RES.	
R687	QRE141J-103Y	10K 1/4W CARBON RES.	
R688	QRE141J-103Y	10K 1/4W CARBON RES.	
R694	QRE141J-750Y	75 1/4W C.RES.	
R695	QRE141J-750Y	75 1/4W C.RES.	
R696	QRE141J-102Y	1K 1/4W C RES.	
R697	QRE141J-102Y	1K 1/4W C RES.	
R698	QRE141J-104Y	100K 1/4W C RES.	
R707	NRSA02J-472X	RES.	
R708	NRSA02J-472X	RES.	
R711	NRSA02J-102X	RES.	
R715	NRSA02J-221X	MG RES.	
R716	NRSA02J-221X	MG RES.	
R717	NRSA02J-221X	MG RES.	
R718	NRSA02J-221X	MG RES.	
R719	NRSA02J-471X	RES.	
R720	NRSA02J-471X	RES.	
R721	NRSA02J-471X	RES.	
R722	NRSA02J-221X	MG RES.	
R725	QRE141J-560Y	56 1/4W C RES.	
R726	NRSA02J-105X	MG RES.	
R727	NRSA02J-101X	MG RES.	
R728	QRE141J-333Y	33K 1/4W C RES.	
R729	QRE141J-102Y	1K 1/4W C RES.	
R730	QRE141J-333Y	33K 1/4W C RES.	
R731	QRE141J-104Y	100K 1/4W C RES.	
R732	QRE141J-333Y	33K 1/4W C RES.	
R733	QRE141J-104Y	100K 1/4W C RES.	
R734	QRE141J-181Y	180 1/4W C RES.	
R735	QRE141J-104Y	100K 1/4W C RES.	
R736	QRE141J-153Y	15K 1/4W C RES.	
R737	QRE141J-102Y	1K 1/4W C RES.	
R738	QRE141J-473Y	47K 1/4W C RES.	
R739	QRE141J-560Y	56 1/4W C RES.	
R740	QRE141J-560Y	56 1/4W C RES.	
R741	QRE141J-471Y	470 1/4W C RES.	
R742	QRE141J-471Y	470 1/4W C RES.	
R743	QRE141J-471Y	470 1/4W C RES.	
R744	QRE141J-471Y	470 1/4W C RES.	
R745	QRE141J-511Y	510 1/4W C.RES.	
R746	QRE141J-152Y	1.5K 1/4W CARBON RES.	
R747	QRE141J-560Y	56 1/4W C RES.	

Item	Parts Number	Description	Area
R748	QRE141J-101Y	100 1/4W C RES.	
R749	QRE141J-471Y	470 1/4W C RES.	
R750	QRE141J-471Y	470 1/4W C RES.	
R751	QRE141J-471Y	470 1/4W C RES.	
R752	QRE141J-152Y	1.5K 1/4W CARBON RES.	
R753	QRE141J-560Y	56 1/4W C RES.	
R754	QRA14CF-1602Y	16K 1/4W MF.RES.	
R755	QRE141J-183Y	18K 1/4W CARBON RES.	
R756	QRA14CF-1602Y	16K 1/4W MF.RES.	
R757	QRE141J-821Y	820 1/4W CARBON RES.	
R758	QRE141J-243Y	24K 1/4W C RES.	
R759	QRE141J-243Y	24K 1/4W C RES.	
R760	QRE141J-682Y	6.8K 1/4W C RES.	
R761	QRE141J-362Y	3.6K 1/4W C RES.	
R762	QRE141J-103Y	10K 1/4W CARBON RES.	
R763	QRE141J-561Y	560 1/4W C RES.	
R764	QRE141J-561Y	560 1/4W C RES.	
R765	QRE141J-105Y	1M 1/4W C RES.	
R766	QRE141J-221Y	220 1/4W C RES.	
R767	QRE141J-821Y	820 1/4W CARBON RES.	
R768	QRE141J-221Y	220 1/4W C RES.	
R769	QRE141J-183Y	18K 1/4W CARBON RES.	
R770	QRA14CF-1602Y	16K 1/4W MF.RES.	
R771	QRE141J-183Y	18K 1/4W CARBON RES.	
R772	QRA14CF-1602Y	16K 1/4W MF.RES.	
R773	QRE141J-821Y	820 1/4W CARBON RES.	
R774	QRE141J-243Y	24K 1/4W C RES.	
R775	QRE141J-243Y	24K 1/4W C RES.	
R776	QRE141J-682Y	6.8K 1/4W C RES.	
R777	QRE141J-362Y	3.6K 1/4W C RES.	
R778	QRE141J-103Y	10K 1/4W CARBON RES.	
R779	QRE141J-561Y	560 1/4W C RES.	
R780	QRE141J-561Y	560 1/4W C RES.	
R781	QRE141J-105Y	1M 1/4W C RES.	
R782	QRE141J-221Y	220 1/4W C RES.	
R783	QRE141J-821Y	820 1/4W CARBON RES.	
R784	QRE141J-221Y	220 1/4W C RES.	
R785	QRE141J-183Y	18K 1/4W CARBON RES.	
R786	QRE141J-112Y	1.1K 1/4W C.RES.	
R787	QRE141J-112Y	1.1K 1/4W C.RES.	
R788	QRE141J-112Y	1.1K 1/4W C.RES.	
R789	QRE141J-112Y	1.1K 1/4W C.RES.	
R790	QRE141J-473Y	47K 1/4W C RES.	
R796	QRE141J-473Y	47K 1/4W C RES.	
R850	NRSA02J-472X	RES.	
R851	NRSA02J-472X	RES.	
R852	NRSA02J-392X	MG RES.	
R853	NRSA02J-392X	MG RES.	
R854	NRSA02J-820X	MG RES.	
R855	NRSA02J-820X	MG RES.	
R860	NRSA02J-183X	MG RES.	
R861	NRSA02J-183X	MG RES.	
R863	NRSA02J-0R0X	RES.	
R864	NRSA02J-103X	RES.	
R865	NRSA02J-103X	RES.	
R866	NRSA02J-390X	MG RES.	
R867	NRSA02J-390X	MG RES.	
R868	NRSA02J-103X	RES.	
R869	NRSA02J-103X	RES.	
R870	NRSA02J-220X	MG RES.	
R871	NRSA02J-220X	MG RES.	
R872	NRSA02J-104X	METAL GLAZE	
R873	NRSA02J-104X	METAL GLAZE	
R874	QRE141J-221Y	220 1/4W C RES.	
R1003	QRE141J-561Y	560 1/4W C RES.	
R1004	QRE141J-151Y	150 1/4W C RES.	
R1005	QRE141J-103Y	10K 1/4W CARBON RES.	

### Audio/Video P.C.B.

### BLOCK NO.03

Item	Parts Number	Description	Area
R1006	QRE141J-273Y	27K 1/4W CARBON RES.	
R1007	QRE141J-561Y	560 1/4W C RES.	
R1008	QRE141J-151Y	150 1/4W C RES.	
R1009	QRE141J-103Y	10K 1/4W CARBON RES.	
R1010	QRE141J-273Y	27K 1/4W CARBON RES.	
R1011	QRE141J-560Y	56 1/4W C RES.	
R1020	QRE141J-560Y	56 1/4W C RES.	
R1021	NRSA02J-562X	MG RES.	
R1022	NRSA02J-562X	MG RES.	
R1023	NRSA02J-133X	MG RES.	
R1024	NRSA02J-133X	MG RES.	
R1025	NRSA02J-562X	MG RES.	
R1026	NRSA02J-562X	MG RES.	
R1027	QRE141J-221Y	220 1/4W C RES.	
R1028	QRE141J-221Y	220 1/4W C RES.	
R1029	NRSA02J-562X	MG RES.	
R1030	NRSA02J-562X	MG RES.	
R1031	NRSA02J-133X	MG RES.	
R1032	NRSA02J-133X	MG RES.	
R1033	NRSA02J-562X	MG RES.	
R1034	NRSA02J-562X	MG RES.	
R1045	NRSA02J-561X	METAL GLAZE	
R1046	NRSA02J-273X	MG RES.	
R1047	NRSA02J-151X	MG RES.	
R1048	NRSA02J-103X	RES.	
R1049	QRE141J-473Y	47K 1/4W C RES.	
R1054	NRSA02J-273X	MG RES.	
R1055	NRSA02J-561X	METAL GLAZE	
R1056	NRSA02J-151X	MG RES.	
R1057	NRSA02J-103X	RES.	
R1058	QRE141J-560Y	56 1/4W C RES.	
R1067	QRE141J-560Y	56 1/4W C RES.	
R1068	NRSA02J-562X	MG RES.	
R1069	NRSA02J-562X	MG RES.	
R1070	NRSA02J-133X	MG RES.	
R1071	NRSA02J-133X	MG RES.	
R1072	NRSA02J-562X	MG RES.	
R1073	NRSA02J-562X	MG RES.	
R1074	QRE141J-221Y	220 1/4W C RES.	
R1075	QRE141J-221Y	220 1/4W C RES.	
R1080	NRSA02J-273X	MG RES.	
R1081	NRSA02J-561X	METAL GLAZE	
R1082	NRSA02J-151X	MG RES.	
R1083	NRSA02J-103X	RES.	
R1084	NRSA02J-473X	MG RES.	
R1085	NRSA02J-622X	MG RES.	
R1086	NRSA02J-622X	MG RES.	
R1087	NRSA02J-133X	MG RES.	
R1088	NRSA02J-622X	MG RES.	
R1089	NRSA02J-622X	MG RES.	
R1090	NRSA02J-153X	MG RES.	
R1093	NRSA02J-0R0X	RES.	
R1095	NRSA02J-0R0X	RES.	
R1098	NRSA02J-561X	METAL GLAZE	
R1099	NRSA02J-273X	MG RES.	
R1100	NRSA02J-151X	MG RES.	
R1101	NRSA02J-103X	RES.	
R1102	NRSA02J-473X	MG RES.	
R1113	NRSA02J-822X	MG RES.	
R1114	NRSA02J-822X	MG RES.	
R1115	NRSA02J-153X	MG RES.	
R1116	NRSA02J-153X	MG RES.	
R1117	NRSA02J-333X	MG RES.	
R1118	NRSA02J-333X	MG RES.	
R1119	QRK126J-391X	390 1/2W CARBON RES.	
R1120	QRE141J-331Y	330 1/4W C RES.	
R1121	NRSA02J-104X	METAL GLAZE	

Item	Parts Number	Description	Area
R1122	NRSA02J-750X	RES.	
R1123	NRSA02J-270X	MG RES.	
R1124	NRSA02J-2R2X	RES.	
R1125	NRSA02J-105X	MG RES.	
R1126	NRSA02J-101X	MG RES.	
R1127	NRSA02J-472X	RES.	
R1128	NRSA02J-473X	MG RES.	
R1130	QRE141J-471Y	470 1/4W C RES.	
R1152	NRSA02J-0R0X	RES.	
R1153	NRSA02J-0R0X	RES.	
R1154	NRSA02J-0R0X	RES.	
R1156	NRSA02J-0R0X	RES.	
R1157	NRSA02J-0R0X	RES.	
R1196	QRE141J-472Y	4.7K 1/4W C RES.	
VR803	QVQ0281-A24	20K VARIABLE RE	
VR850	QVQ0281-A24	20K VARIABLE RE	
	OTHERS		
J691	QND0019-001	S-CONNECTOR	
J692	QNN0278-001	PIN JACK	
J693	QNZ0099-001	CONNECT TERMINAL	
J702	QNN0218-001	PIN JACK	
J705	QNN0029-001	PIN JACK	
J706	GP1F32T	OPTICAL JACK	
J803	QNS0061-001	6.3 JACK	
K121	QQR0601-001Z	F.BEADS I.M	
K343	QQR0601-001Z	F.BEADS I.M	
K601	QQR0601-001Z	F.BEADS I.M	
K602	QQR0601-001Z	F.BEADS I.M	
K701	QQR0601-001Z	F.BEADS I.M	
K702	QQR0601-001Z	F.BEADS I.M	
K703	QQR0601-001Z	F.BEADS I.M	
K704	NQR0007-002X	BANDPASS FILTER	
K705	NQR0007-002X	BANDPASS FILTER	
K706	NQR0007-002X	BANDPASS FILTER	
K707	QQR0601-001Z	F.BEADS I.M	
K708	QQR0601-001Z	F.BEADS I.M	
K709	QQR0601-001Z	F.BEADS I.M	
K710	QQR0601-001Z	F.BEADS I.M	
K711	QQR0601-001Z	F.BEADS I.M	
K712	NQR0007-002X	BANDPASS FILTER	
K713	NQR0007-002X	BANDPASS FILTER	
K714	NQR0007-002X	BANDPASS FILTER	
K851	QQR0601-001Z	F.BEADS I.M	
L603	QQR0713-001	NOISE FILTER	
L604	QQR0783-001	BANDPASS FILTER	
L701	QQL121K-560Y	INDUCTOR I.M	
L702	QQL121K-560Y	INDUCTOR I.M	
L703	QQL121M-1R2Y	INDUCTOR I.M	
S691	QSW0454-001	PUSH SWITCH	
T701	QQR0880-001	CHOKE COIL	
X701	QAX0516-001Z	CRYSTAL	
BK693	LE30696-001A	EARTH PLATE	
BK803	LE40542-001A	EARTH PLATE	
CN601	QGA2001C1-10	10P PLUG ASSY	
CN602	QGD2501C1-04Z	SOCKET ASSY	
CN701	QGF1016C1-35	CONNECT TERMINAL	
CN703	QGF1016C1-27	CONNECTOR	
CN704	QGA2001C1-06	CONNECTOR	
CN851	QGA2001C1-06	CONNECTOR	
FS799	E3400-431	FELT SPACER	
FW601	QUM10A-10DGZ4	FLAT WIRE	
FW702	QUM106-20DGZ4	FLAT WIRE	
FW703	QUM104-10DGZ4	FLAT WIRE	
FW710	QUM103-09Z4Z4	FLAT WIRE	
JT701	QGD2501C1-05Z	SOCKET ASSY	
JT702	QGD2501C1-05Z	SOCKET ASSY	
TP601	QGA2001C1-03	3P PLUG ASSY	


# Packing materials and accessories parts list

Block No. 

M	4	M	M
---	---	---	---

Block No. 

M	5	M	M
---	---	---	---

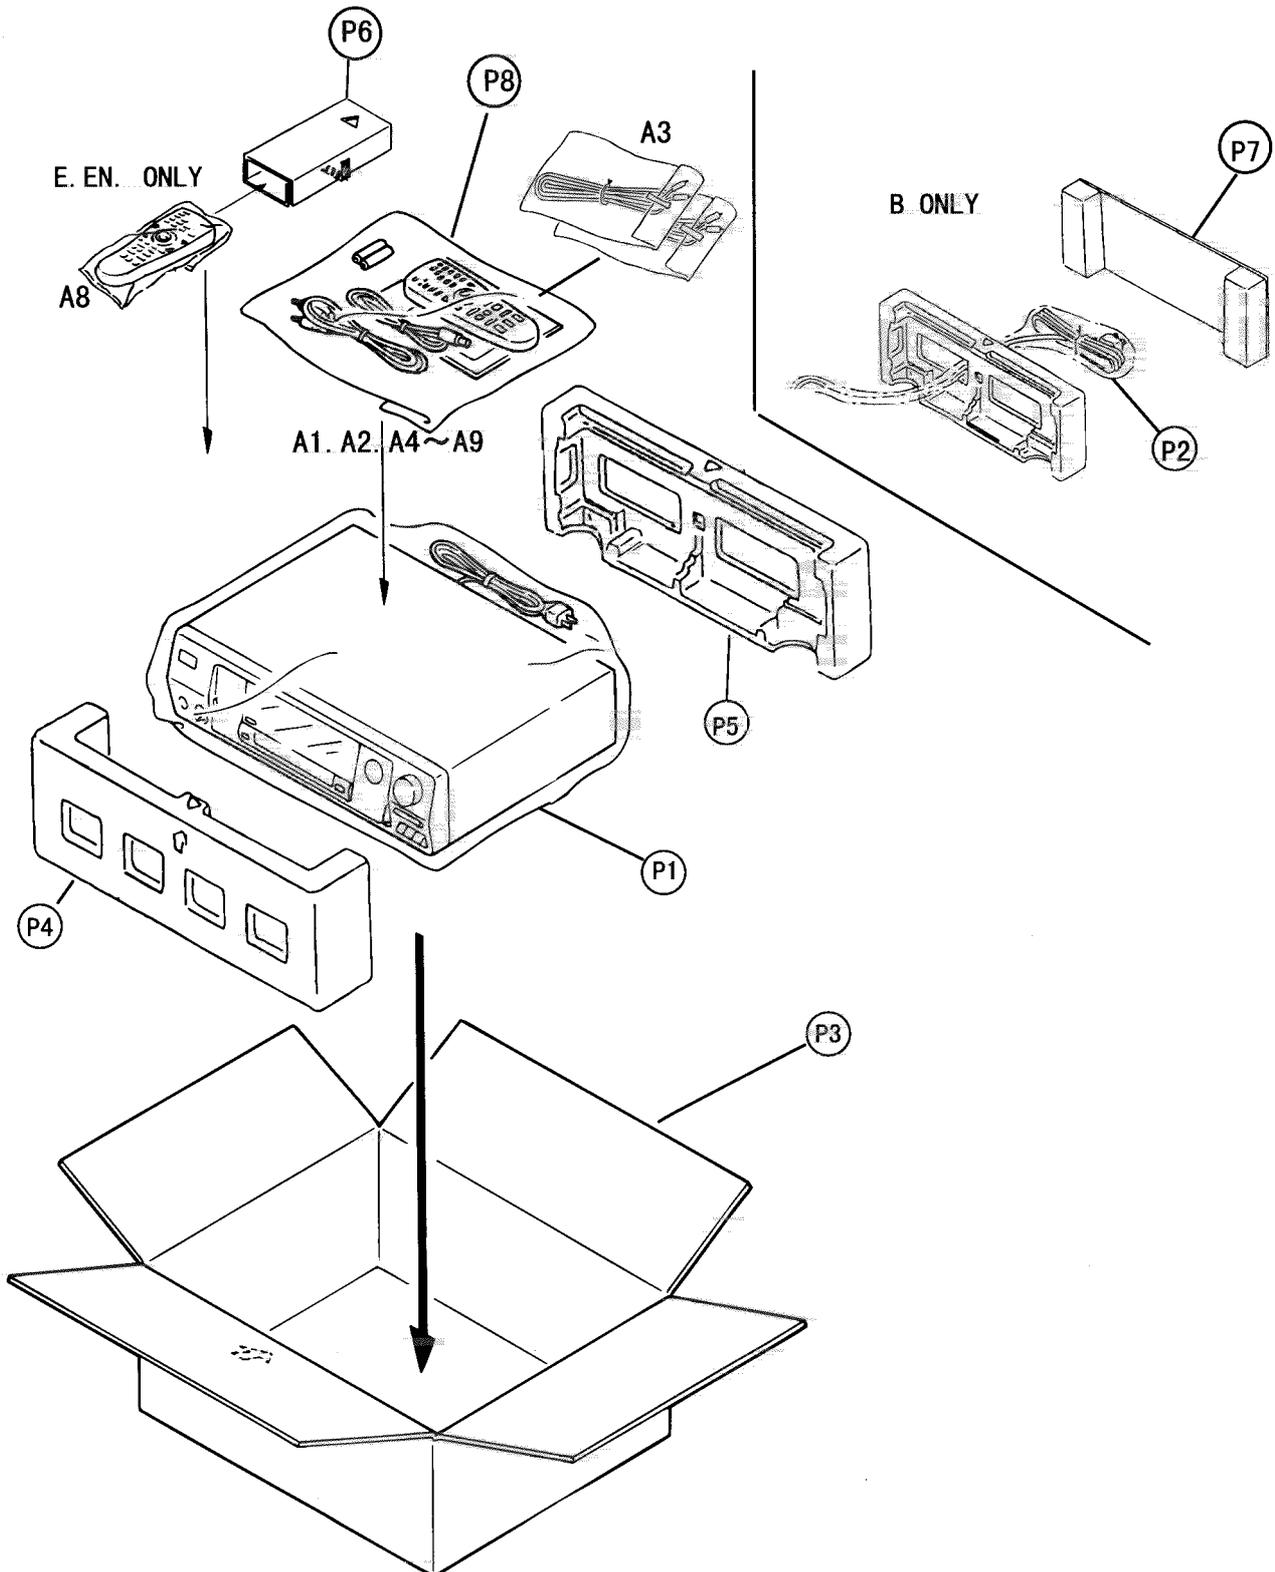

■ Packing parts list

BLOCK NO. **M** **4** **M** **M**


Item	Parts Number	Parts Name	Q'ty	Description	Area
P 1	QPC06506515P	POLY BAG	1		
P 2	QPC01005020	POLY BAG	1		B
P 3	LE20469-036A	PACKING CASE	1		B
	LE20469-037A	PACKING CASE	1		E EN
	LE20469-038A	PACKING CASE	1		EE
P 4	LE20467-001A	FRONT CUSHION	1		
P 5	LE20468-001A	REAR CUSHION	1		
P 6	LE30795-001A	REMOTE CONTROL SHEET	1		E EN
P 7	LE30674-001A	SHEET	1		B
P 8	QPC02504015P	POLY BAG	1		

■ Accessories parts list

BLOCK NO. **M** **5** **M** **M**

Item	Parts Number	Parts Name	Q'ty	Description	Area
A 1	PEAC0359-120	SIGNAL CORD	1		
A 2	QAM0004-002	SIGNAL CORD	1		
A 3	EWP302-011	SIGNAL CORD	2		
A 4	LET0141-003A	INSTRUCTION BOOK	1	ENG	B E
	LET0141-004A	INSTRUCTION BOOK	1	GER	E EN
	LET0141-005A	INSTRUCTION BOOK	1	FRE	E
	LET0141-006A	INSTRUCTION BOOK	1	DUT	E
	LET0141-007A	INSTRUCTION BOOK	1	SPA	E
	LET0141-008A	INSTRUCTION BOOK	1	ITA	E
	LET0141-009A	INSTRUCTION BOOK	1	SWE	EN
	LET0141-010A	INSTRUCTION BOOK	1	FIN	EN
	LET0141-011A	INSTRUCTION BOOK	1	DAN	EN
	LET0141-012A	INSTRUCTION BOOK	1	RUS	EE
A 5	BT-54008-2	WARRANTY CARD	1		B E EN
	BT-54012-1	WARRANTY CARD	1		EE
A 6	VND3046-001	SERIAL NO.LABEL	1		
A 7	E43486-340A	SAFETY SHEET	1		B
A 8	RM-SVD701UE	REMOCON UNIT	1		
A 9	-----	BATTERY	2		

**XV-D701BK**

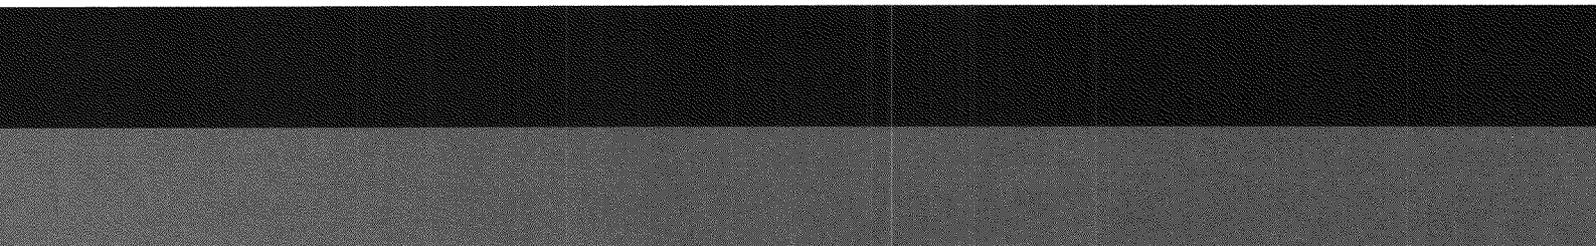

**VICTOR COMPANY OF JAPAN, LIMITED**  
AUDIO DIVISION, 10-1, 1Chome, Ohwatari-machi, Maebashi-city, 371-8543, Japan