


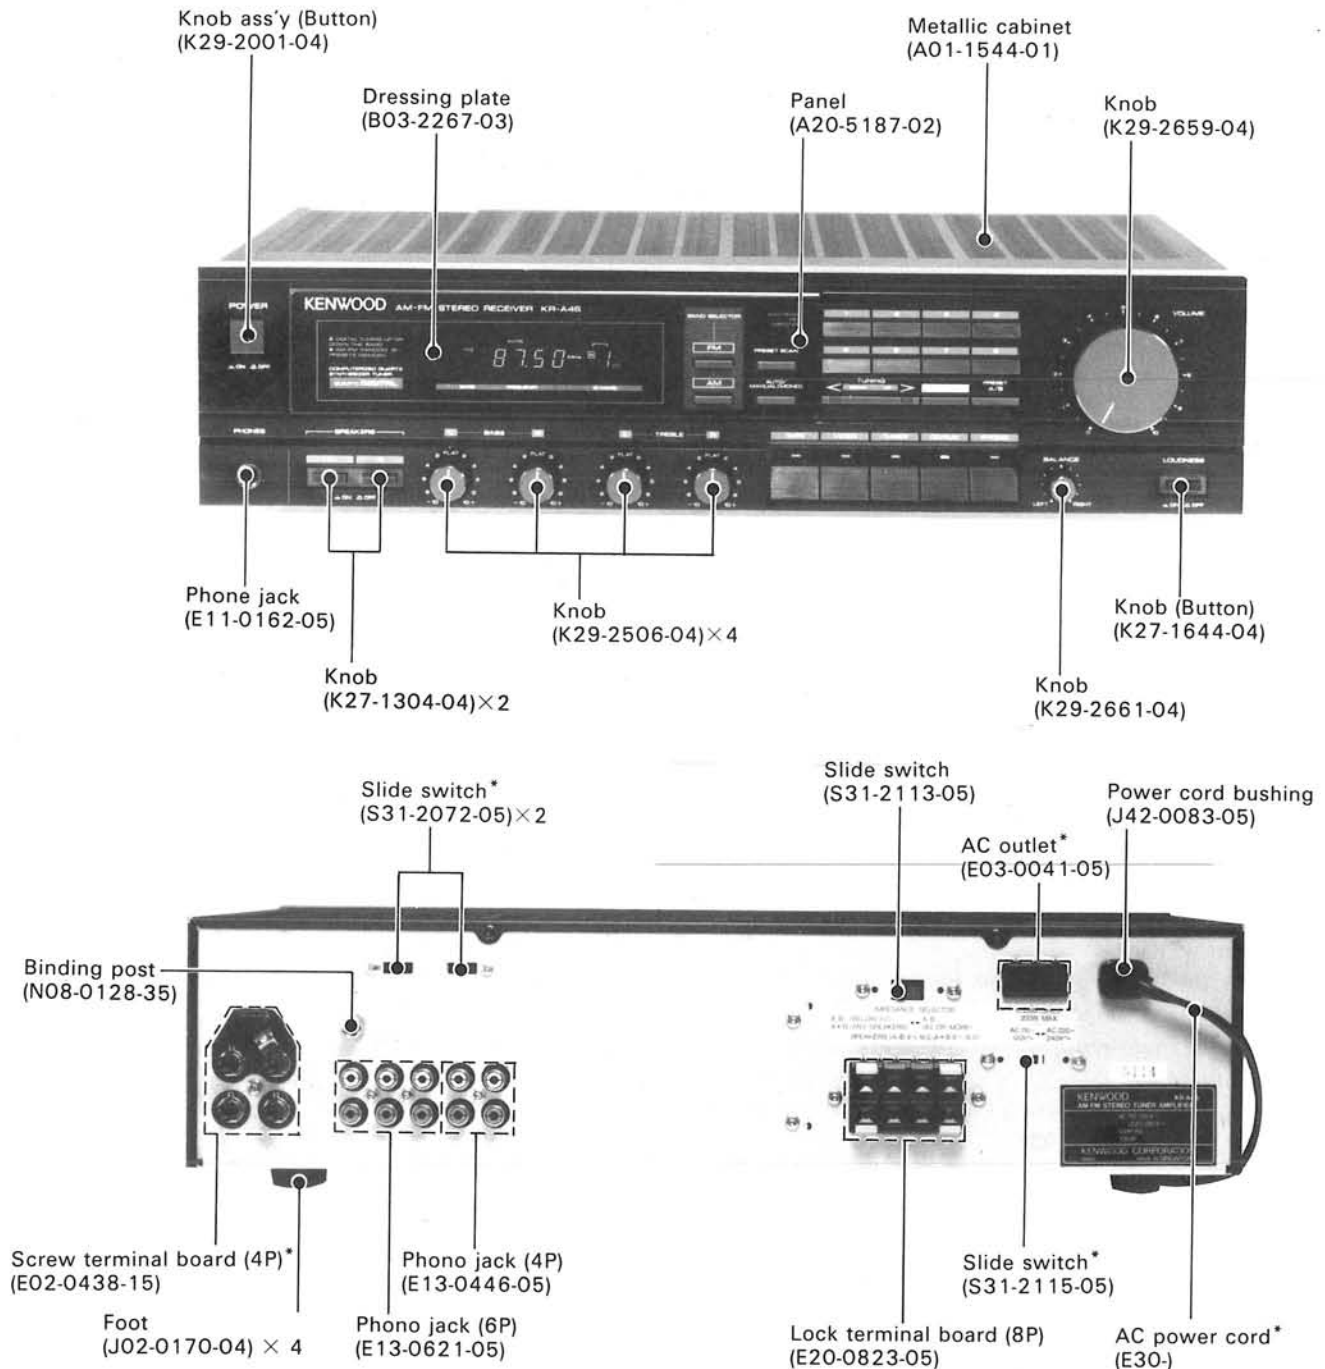


CONTENTS

DISASSEMBLY FOR REPAIR	2
BLOCK & LEVEL DIAGRAM	3
CIRCUIT DESCRIPTION	4
ADJUSTMENT	15
REGLAGE	16
ABGLEICH	17
PC BOARD	19
SCHEMATIC DIAGRAM	23
EXPLODED VIEW	27
PARTS LIST	28
SPECIFICATIONS	Back cover


DISASSEMBLY FOR REPAIR

(Remove the metallic cabinet before performing the following operations.)


1. Remove the 3 screws fixing the front panel to the chassis (1).
2. Disengage the 2 claws of the sub panel from the chassis (2).
3. Remove the front panel together with the sub panel in the direction of the arrow (3).
4. Pull out the 2 knobs of the VOLUME and BALANCE from the shafts, and remove the hex. nut from the VOLUME shaft (4).
5. When installing the front panel, pay attention to the mounting position related to the chassis (5).

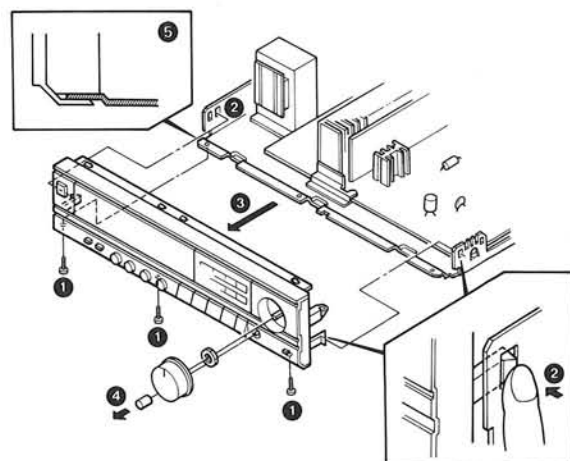


6. Remove the 3 screws fixing the Receiver Unit (X14-2180-10) (B/8) to the sub panel (6).
7. Remove the Receiver Unit (X14-) (B/8) in the direction of the arrow (7).
8. Remove the screw fixing the Receiver Unit (X14-) (H/8) to the sub panel (8).
9. Remove the Receiver Unit (X14-) (H/8) in the direction of the arrow (9).
10. Remove the 5 screws fixing the Receiver Unit (X14-) (G/8) to the sub panel (10).
11. Disengage the 4 claws (upper side: 2, lower side: 2) of the sub panel which retain the Receiver Unit (X14-) (G/8) (11).
12. Remove the Receiver Unit (X14-) (G/8) in the direction of the arrow (12).
13. Remove the 2 screws fixing the multiple push switch (S4) to the sub panel (13).
14. Remove the multiple push switch (S4) together with the Receiver Unit (X14-) (C/8) in the direction of the arrow (14).

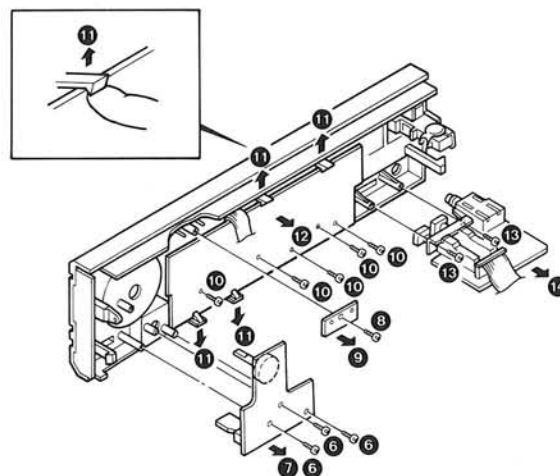


BLOCK & LEVEL DIAGRAM

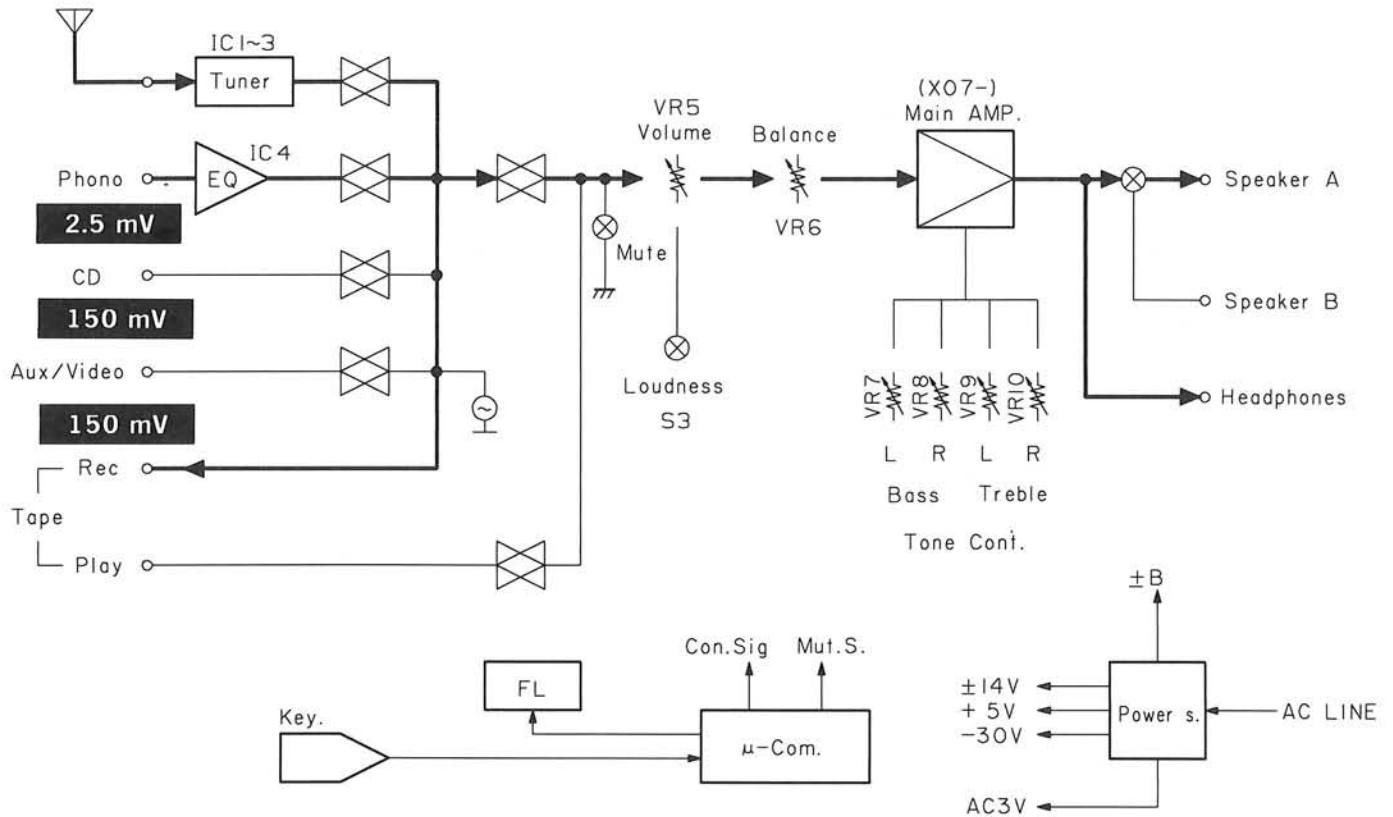

CONTROLS, INDICATORS AND CONNECTORS

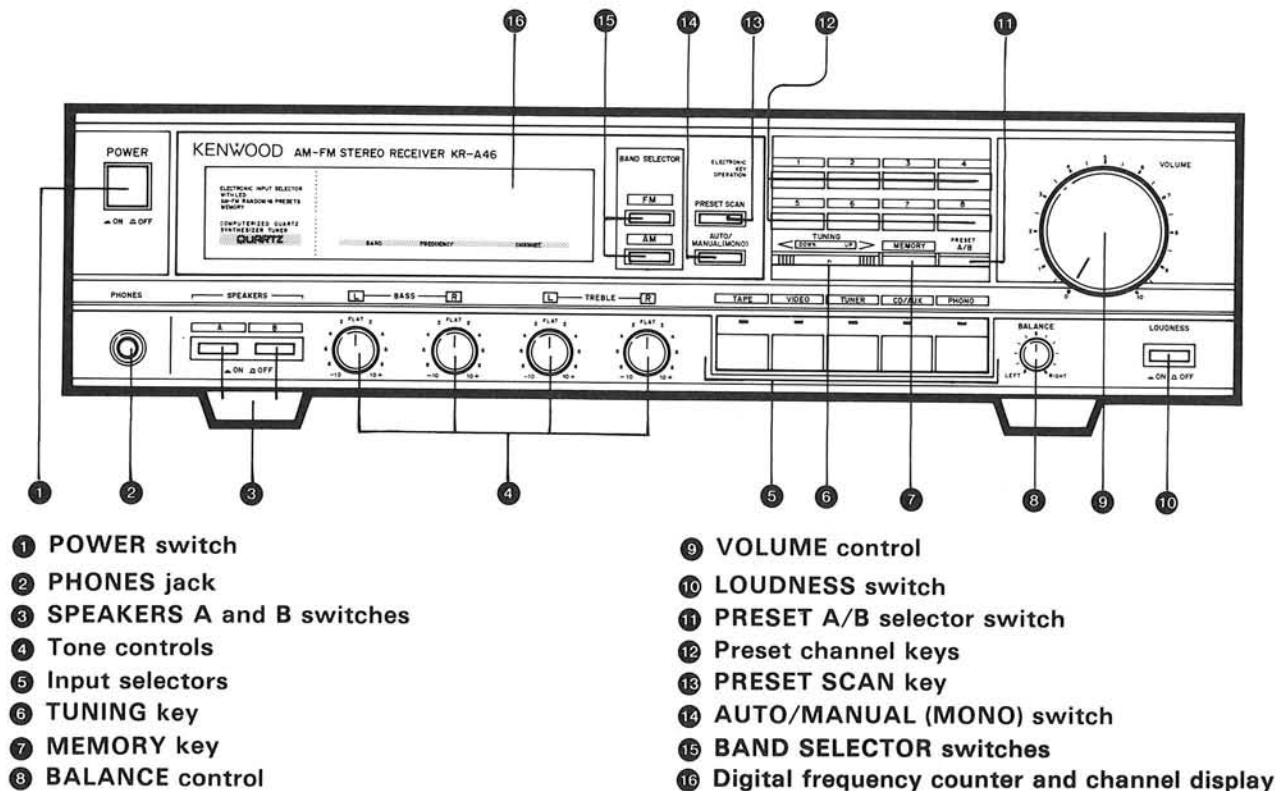

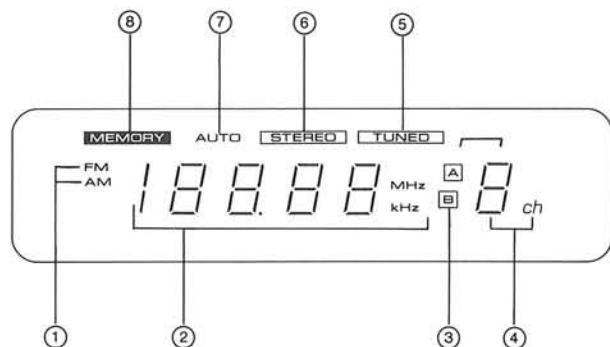

- ① Band indicators
- ② Frequency display
- ③ Preset A/B selector indicators
- ④ Preset channel indicators
- ⑤ TUNED indicator
- ⑥ STEREO indicator
- ⑦ AUTO indicator
- ⑧ MEMORY indicator

CIRCUIT DESCRIPTION

Function of components

Receiver unit (X14-2180-10)


Components	Use/Function	Operation/Condition/Interchangeability
Q1	FM IF amp	
Q2	Buffer amp	
Q3, 4	L.P.F.	Tuning voltage.
Q5, 6	FM +B control	
Q7, 8	AM +B control	
Q9, 10	Temperature compensation	
Q11 ~ 14	Power transistor	Darlington circuit.
Q15 ~ 18	Muting	
Q19	Muting control	
Q20	Indication driver	STEREO display.
Q21	Indication driver	TUNED display.
Q22	Channel space selection	On: 9kHz, 50kHz, OFF: 10kHz, 100kHz.
Q23	LED driver	For phono.
Q24, 25	Constant voltage circuit	+14, darlington circuit.
Q26	Error amplifier	+14V.
Q27	Constant voltage circuit	+5V.
Q28	Interrupting control	+5V.
Q29	Constant voltage circuit	-24V.
IC1	IF detector	
IC2	PLL	
IC3	FM MPX	
IC4	Op amp	
IC5	Input selector	
IC6	Microcomputer	

Power amplifier unit (X07-2360-10)

Components	Use/Function	Operation/Condition/Interchangeability
Q1 ~ 4	Differential amp	First stage.
Q5 ~ 8	Differential amp	Class A amplifier.
Q9, 10	Regulated power supply	Current Miller.
Q11 ~ 14	Predriver	Darlington.
Q15, 16	Protection	Current detection.
Q17	Protection	Driver.
Q18	Muting control	Switching ON/OFF of positive power supply for the first stage.
Q19	Ripple filter	

IC2: CX7925B Frequency Synthesizer PLL IC

Block diagram and terminal configuration diagram

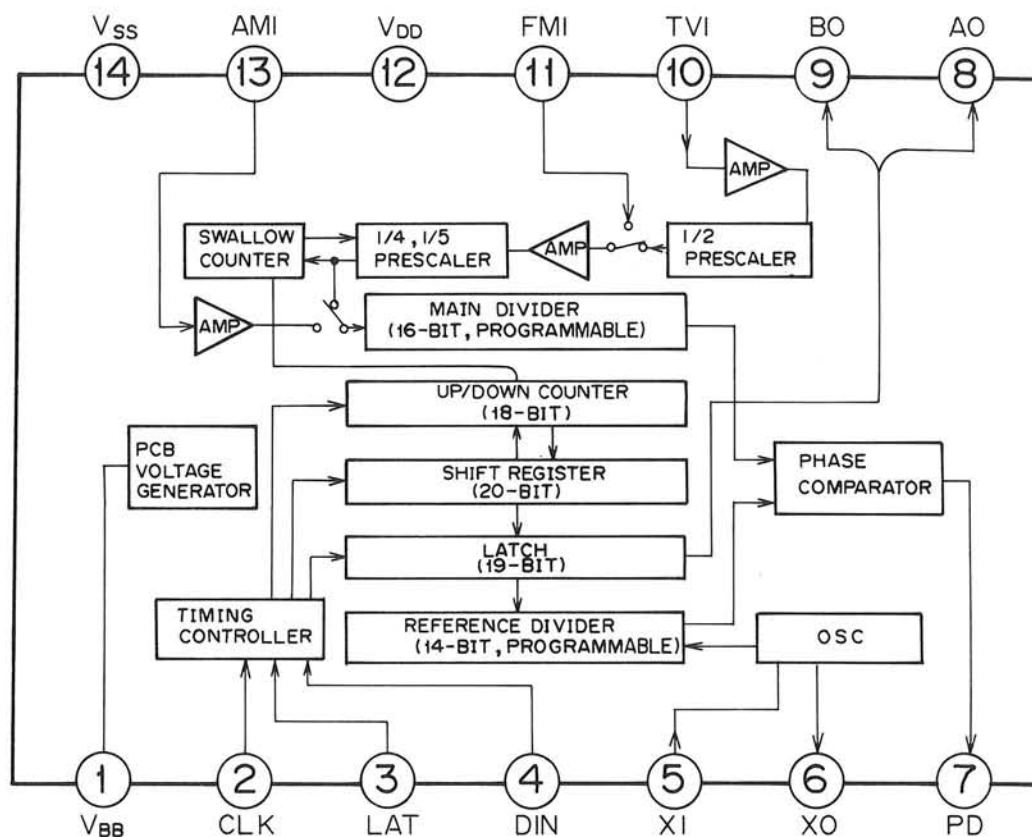


Terminal description

Terminal No.	Symbol	Terminal Description
1	VBB	PCB terminal (Connect a 0.01 μ F capacitor between the GND).
2	CLK	Input terminal for the clock used for 20-bit serial data input (Shifted at the rise).
3	LAT	Input terminal for the shift register input data latch signal (shifted at the rise) and, at the same time, for the Up/Down clock (status changed at the rise).
4	DIN	Data input terminal, also the Up/Down mode switching terminal (Up mode with "H" level, Down mode with "L" level).
5	XI	Connection terminals for the reference signal generator X'tal oscillator.
6	XO	(Max. 13 MHz, standard 4.0 MHz)
7	PD	Phase comparator output terminal (3-state).
8	AO	External control signal output terminal/Unlock signal output terminal (E/E MOS push-pull).
9	BO	External control signal output terminal/data check terminal (E/E MOS push-pull).
10	TVI	High-frequency signal input terminal (300 MHz or 350 MHz max.). With 1/2 prescaler.
11	FMI	High-frequency signal input terminal (150 MHz or 180 MHz max.).
12	VDD	Power supply (+5V).
13	AMI	High-frequency signal input terminal (40 MHz or 50 MHz max.).
14	Vss	Grounding terminal.

IC3: AN7470

FM MPX IC

Equivalent block diagram

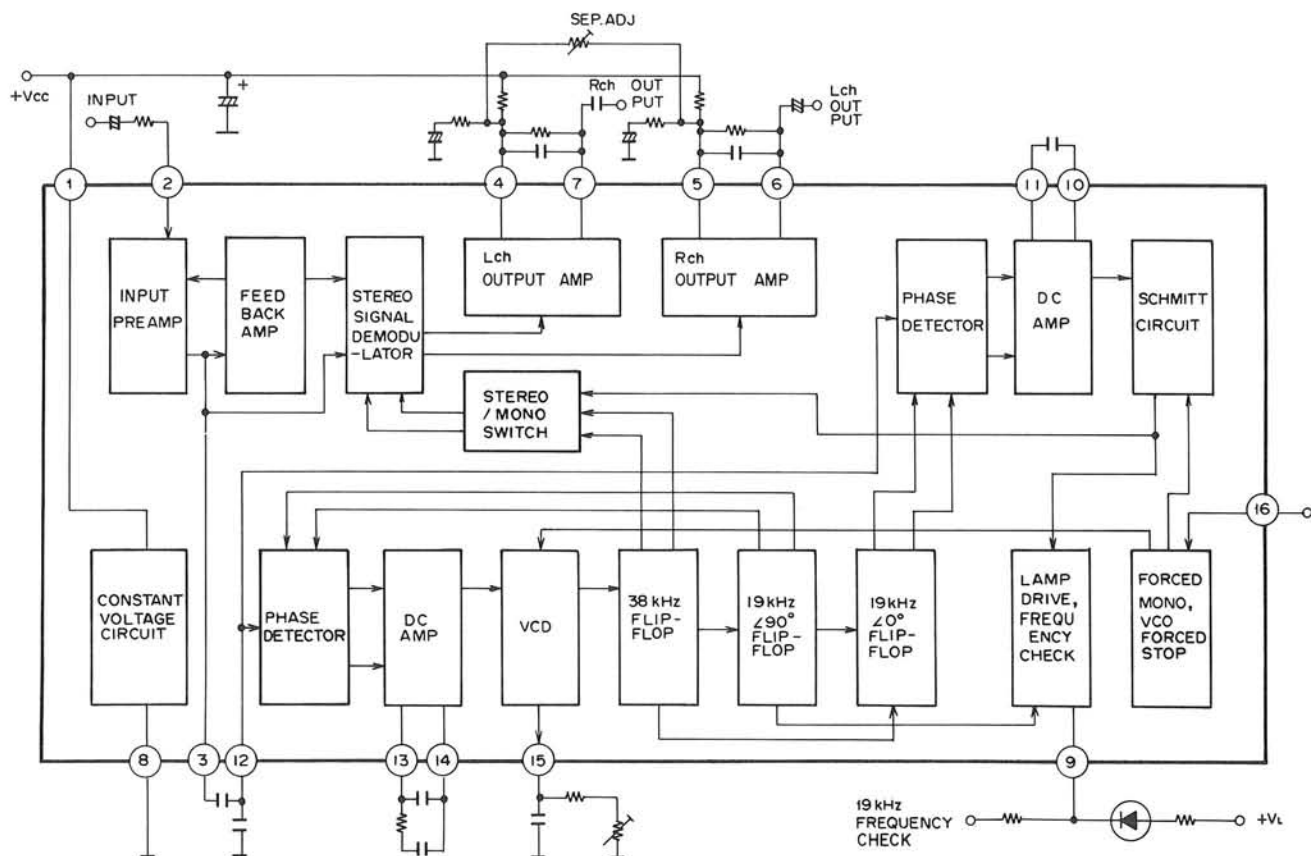


Terminal connection and functions


Terminal No.	Connection/Function
1	Supply voltage (+Vcc)
2	Stereo composite signal, input terminal
3	Input preamp, output terminal
4	L CH output amp, feedback terminal
5	R CH output amp, feedback terminal
6	R CH output amp, output terminal
7	L CH output amp, output terminal
8	Grounding terminal
9	Stereo display lamp drive and 19 kHz frequency check terminal
10	Stereo signal detector circuit, low-pass filter terminal
11	Stereo signal detector circuit, low-pass filter terminal
12	PLL circuit, input terminal
13	PLL circuit, low-pass filter terminal
14	PLL circuit, low-pass filter terminal
15	VCO freerun oscillation frequency adjustment terminal
16	Forced mono/forced VCO oscillation stop terminal

IC5: LC7820 Input selector IC



Pin connection

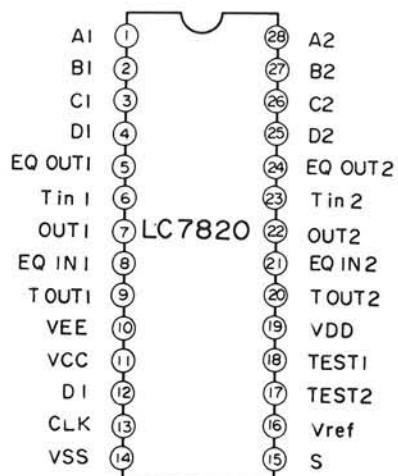

Equivalent block diagram

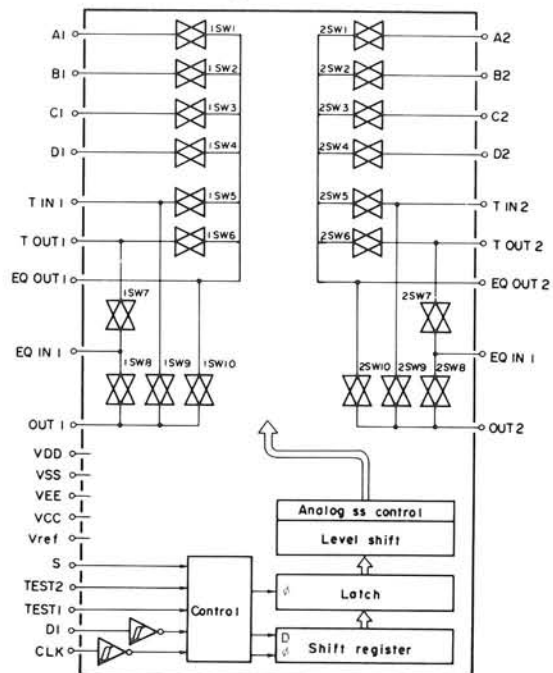


Explanation of terminals


Name	Pin no.	Pin type	Function						
VDD	19		Power supply pin, +18V-type. Power supply for audio signal.						
Vref	16		Power supply pin, VDD 5V-type. For internal logic drive.						
VSS	14		Power supply pin, 0V.						
VEE	10		Power supply pin, −18V-type. Power supply for audio signal.						
VCC	11		Power supply pin, +5V-type. For input logic.Io						
D1	12		● Input pin for data from CPU. ● Schmitt inverter type.						
CLK	13		● Input pin for CLK signal from CPU. ● Schmitt inverter type.						
A 1, 2 B 1, 2 C 1, 2 D 1, 2 T in 1, 2 EQin 1, 2	1, 28 2, 27 3, 26 4, 25 6, 23 8, 21	1, 2SWn  A 1, 2 B 1, 2 C 1, 2 D 1, 2 T out 1, 2 EQ out 1, 2 OUT 1, 2	Audio signal input pin. Simultaneous operation in 1SWn, 2SWn.						
OUT 1, 2 T out 1, 2 EQ out 1, 2	7, 22 9, 20 5, 24		Audio signal output pin.						
S	15		Select pin when two ICs are used. <table><tr><td>S</td><td>key code</td></tr><tr><td>0</td><td>7D2</td></tr><tr><td>1</td><td>7D3</td></tr></table>	S	key code	0	7D2	1	7D3
S	key code								
0	7D2								
1	7D3								

IC6: μ PD 7538AC-041 Microprocessor IC

Terminal connection diagram & key matrix connection

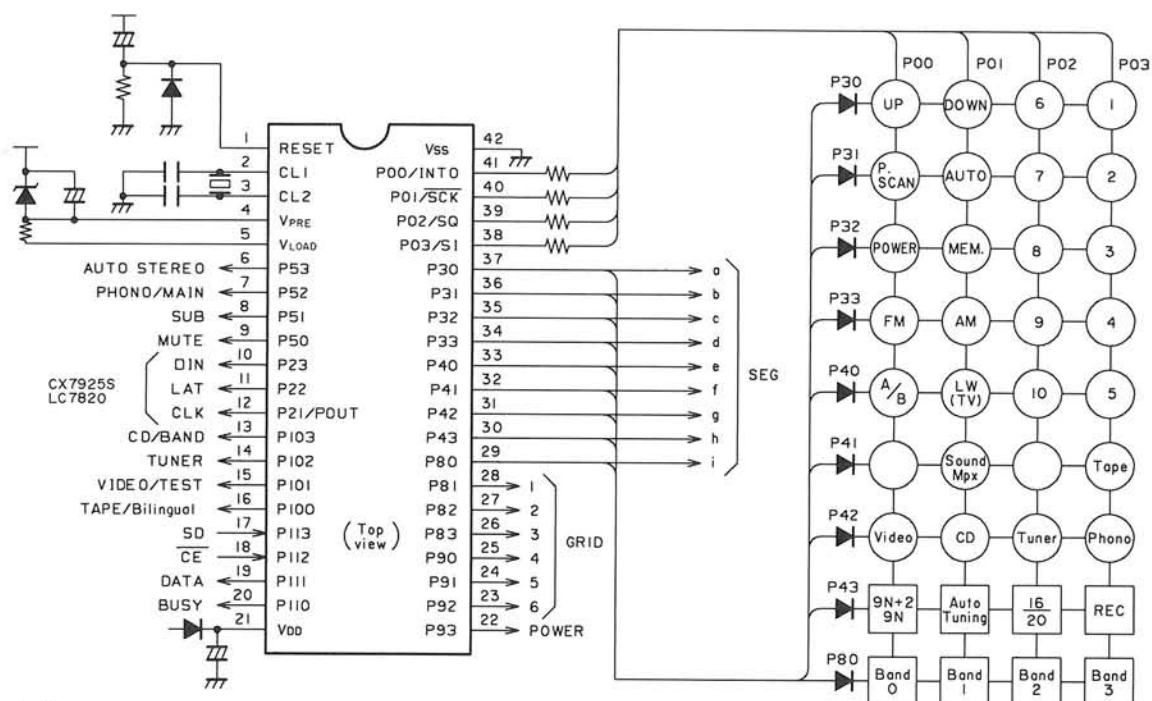

Block diagram

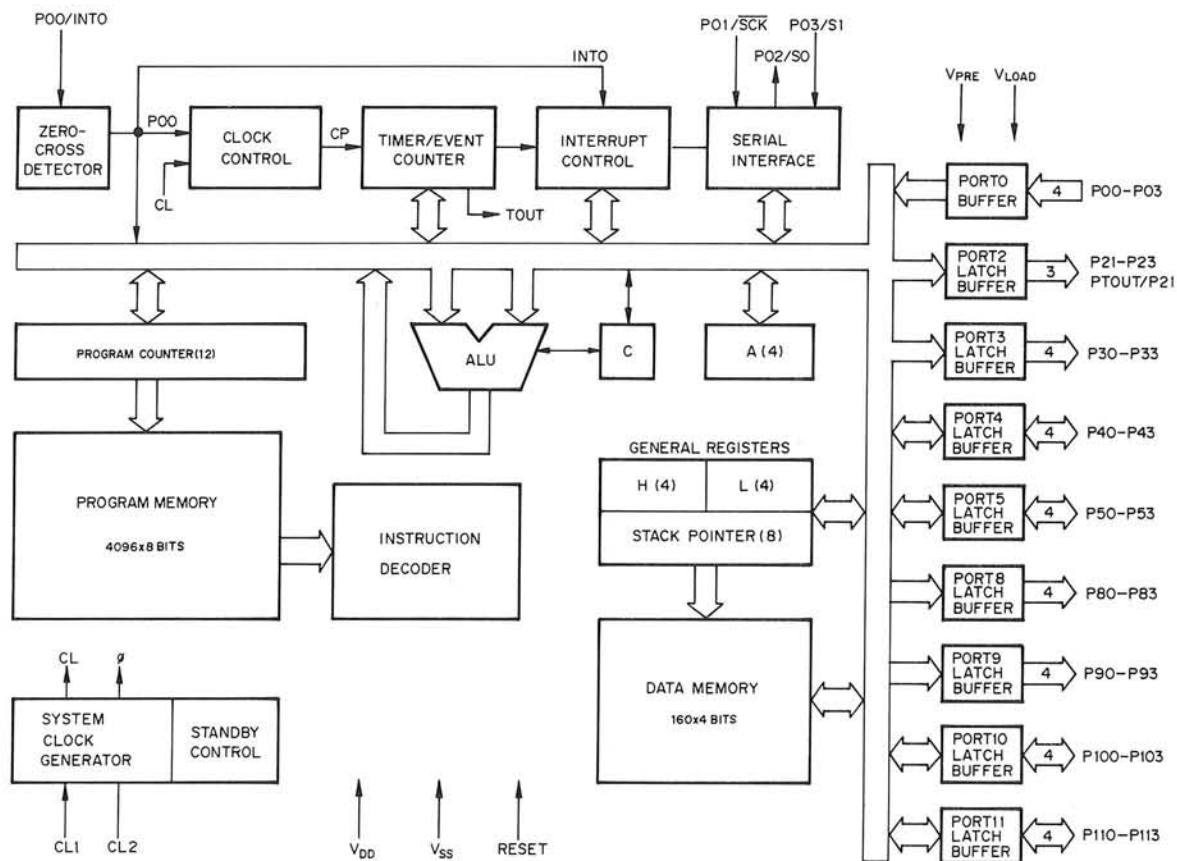

Function of the diode switch

1. Models for each designated area and function setting switches

Model for designated area	Set switch				BAND	Receiving frequency range	Channel spacing	Reference frequency	Middle frequency
	Band 3	Band 2	Band 1	Band 0					
K	1	0	0	0	FM	87.5 ~ 108 MHz	100 kHz	50 kHz	10.7 MHz
					AM	530 ~ 1610 MHz	10 kHz	10 kHz	450 kHz
E	1	1	0	1	FM	87.5 ~ 108 MHz	50 kHz	50 kHz	10.7 MHz
					MW	531 ~ 1602 kHz	9 kHz	9 kHz	450 kHz
					LW	153 ~ 281 kHz	1 kHz	1 kHz	450 kHz
M	1	1/0	0	0	FM AM	K type or E type (without LW)			

- Band 3 H Overseas
 L Domestic (Japan)
- Band 2 H FMch space 50 kHz & AMch space 9 kHz
 L FMch space 100 kHz & AMch space 10 kHz
- Band 1 H Without auto tuning function only for LW broadcast
- Band 0 H With LW: Indication (FM, MW, LW)
 L Without LW: Indication (FM, AM)
 LW key is not accepted.

2. Stop frequency select switch for auto tuning in LW reception

This switch is used to set the frequency which intakes the SD signal in LW band reception. For both manual and auto tuning, the tuning frequency is changed up or down in 1 kHz step, however, in auto tuning mode, the receiving frequency stops at the following frequency selected by this switch.

- Setting of this switch can be changed without resetting (unplugging/plugging the AC cord.)

9N+2 / 9N	Frequency range	Channel spacing	Reference frequency	Middle frequency	Stop frequency
1	153 ~ 281 kHz	1 kHz	1 kHz	450 kHz	155, 164 272, 281 kHz
0	153 ~ 281 kHz	1 kHz	1 kHz	450 kHz	153, 162 270, 279 kHz

3. Auto tuning

Auto tuning	Auto tuning function	Auto/Mono KEY
1	Not available	Mono/Stereo function only
0	Available	This key is also used as the Auto/Manual tuning mode key.

4. Others

Set switch	Function
0	Preset 16
1	Preset 20
0	KT-56
1	KR-A46

Port allocation

Port		Pin No.	I/O Mode	Active Mode	Function
P0	0	41	I	H	Key return signal input
	1	40	I	H	Key return signal input
	2	39	I	H	Key return signal input
	3	38	I	H	Key return signal input
P2	1	12	O	H	PLL IC (CX7925B) Function SW (LC7820) Data output
	2	11	O	H	PLL IC (CX7925B) LAT output
	3	10	O	H	PLL IC (CX7925B) Function SW (LC7820) CLK output
P3	0	37	O	H	Key strobe signal output, FL display segment output: a
	1	36	O	H	Key strobe signal output, FL display segment output: b
	2	35	O	H	Key strobe signal output, FL display segment output: c
	3	34	O	H	Key strobe signal output, FL display segment output: d
P4	0	33	O	H	Key strobe signal output, FL display segment output: e
	1	32	O	H	Key strobe signal output, FL display segment output: f
	2	31	O	H	Key strobe signal output, FL display segment output: g
	3	30	O	H	Key strobe signal output, FL display segment output: h
P8	0	29	O	H	Key strobe signal output, FL display segment output: i
	1	28	O	H	FL display digit control pin: GRID 1
	2	27	O	H	FL display digit control pin: GRID 2
	3	26	O	H	FL display digit control pin: GRID 3
VDD		21	—	—	Power supply input pin (5V)
VSS		42	—	—	GND
P9	0	25	O	H	FL display digit control pin: GRID 4
	1	24	O	H	FL display digit control pin: GRID 5
	2	23	O	H	FL display digit control pin: GRID 6
	3	22	O	H	Power pin
P10	0	16	O	H	Input port: TV mode "Bilingual" pin (H) Output port: Receiver selector "TAPE"
	1	15	O	H	Input port: TEST pin (H) Output port: Receiver selector "VIDEO"
	2	14	O	H	Receiver selector "TUNER"
	3	13	O	H	Receiver design: Receiver selector "CD" System component design: Band data output (UHF: H)
P11	0	20	I/O	H	Serial signal BUSY pin
	1	19	I/O	H	Serial signal DATA pin
	2	18	I	L	Back up detection pin
	3	17	I	H	Station detection pin for auto tuning mode
P5	0	9	O	H	Muting signal
	1	8	O	H	TV SUB pin
	2	7	O	H	Receiver design: Receiver selector "PHONO" System component design: TV MAIN pin
	3	6	O	H	MONO/ST key to control Stereo (L) Mono (H)
RESET		1	I	H	Reset signal
CL1		2	—	—	Clock
CL2		3	—	—	Clock
VPRE		4	—	—	Power supply for FL display pre-driver
VLOAD		5	—	—	Power supply for FL display driver (−30V)

Key matrix layout

Input Output	P00 (41)	P01 (40)	P02 (39)	P03 (38)
P30 (37)	UP	DOWN	6	1
P31 (36)	Preset Scan	AUTO MONO	7	2
P32 (35)	Power	Memory	8	3
P33 (34)	FM	AM	9	4
P40 (33)	A/B	LW (TV)	10	5
P41 (32)		Sound multiplex		Tape
P42 (31)	Video	CD	Tuner	Phono
P43 (30)	9N + 2 9N	*Auto tuning	*16 Preset 20 Preset	*Syscon Receiver
P80 (29)	*Band 0	*Band 1	*Band 2	*Band 3

- Values in brackets () shows the pin number of microcomputer.
- Items with an asterisk (*) shows the diode switch. Others are momentary switches.
- LW (9N + 2/9N) is the slide switch on the rear panel.
- Key-intake is active high.

Tuner function

1. Manual tuning

Each time the UP/DOWN key is pressed, the tuning frequency is varied one step higher or lower. When this key is kept pressed for more than 0.5 seconds, the frequency is changed up or down at approx. 128 msec/step (approx. 224 msec/step for TV reception) until the key is released.

2. Auto tuning

When the AUTO/MONO switch is set to AUTO, pressing the UP/DOWN key starts auto tuning. The tuning frequency is changed up or down at approx. 128 msec/step (approx. 224 msec/step for TV reception) until the high-level signal is input to the SD pin. When the high-level signal is input, auto tuning operation stops.

3. Preset memory

Up to 16 or 20 frequencies (the maximum number of preset stations is set by the diode switch) can be preset randomly for FM, MW (AM) and LW (TV) stations.

a) How to preset

When the MEMORY key is pressed, the "MEMORY" indicator lights and the unit is set to the write-enable status. Writing to memory is possible for approx. 5 seconds after the MEMORY key is pressed. During this time, pressing any of the numeric key (1 – 10) will write the currently-received frequency into memory corresponding to the key pressed.

b) How to recall

When the tuner functions, pressing any of the preset keys will recall the stored contents corresponding to the key pressed.

4. Preset scan

When the PRESET SCAN key is pressed, the SD pin goes high level. A preset channel is received for 5

Test frequency

Type	Preset Ch	1	2	3	4	5	6	7	8
K	A	FM							
		87.5	89.1	98.0	106.0	108.0	87.5	87.5	87.5
	B	AM							
		530	630	990	1440	1610	87.5	87.5	87.5
E	A	FM				AM			
		87.5	89.1	98.0	106.0	108.0	531	630	990
	B	AM		LW					FM
		1440	1602	153	162	216	270	281	87.5

● Test mode set-up: :

Set the test pin (P15) to high level, and invert it to low level after turning the power ON. (The entire FL display will light except for MEMORY.)

seconds, then the receiving frequency is changed to the next preset channel. When the SD pin is low level, the receiving channel is changed to the next preset channel after one second.

a) Key processing during scanning

- Preset key: Stops the scanning operation and receives the frequency of the designated preset channel.
- UP/DOWN key: Stops the scanning operation and processes the UP/DOWN function.

Function of tact switches

Name	Function																
POWER	Power ON/OFF key. Each time this key is pressed, the Power pin is inverted. When the POWER switch is turned ON, the Power pin goes high level and the last channel (which is received when the power switch is turned off) is recalled. When the POWER switch is turned OFF, the Power pin goes low level and no indication will be displayed.																
FM AM (MW) LW (TV)	Band select key for FM, AM (MW) and LW (TV). The reference data and the program data corresponding to the selected band will be transmitted to the PLL IC. However, if the band which is the same as that currently selected is selected, the command is not accepted.																
UP DOWN	Frequency up/down key. ● Auto tuning When this key is pressed, the frequency is changing to the higher or lower scale at approx. 128 msec/step in the square mode. When the high-level signal is input to the SD pin, auto tuning operation is stopped and that frequency is received. ● Manual tuning Each time this key is pressed, the frequency is changed up/down by one step (channel spacing). When it is kept pressed for more than 0.5 seconds, the frequency is changed at approx. 128 msec/step until the key is released.																
Numeric keys (1 – 8) (numeric keys (1 – 10) for 20-memory model) MEMORY	● Write key (during Memory indicator is lit). During approx. 5 seconds after the MEMORY key is pressed, pressing any of the numeric keys 1 – 8 (or 1 – 10) will write the frequency and the band which are currently received into the memory corresponding to the key pressed. ● Recall (when Memory indicator is not lit) When any of the numeric keys 1 – 8 (or 1 – 10) is pressed, the memorized contents (band and frequency) corresponding to the key pressed will be recalled. When the VDD signal is initially input, the lowest frequency in the preset memories will be recalled for each band.																
AUTO	Auto/Mono select key for FM broadcast. Each time this key is pressed, the FM reception mode alternates between Auto and Mono. The Auto indicator lights and the Auto/Mono pin is inverted. ● When auto tuning is available, this key is also used for the auto/manual tuning mode select key. ● When this key is pressed during auto tuning, auto tuning operation stops and the manual tuning mode resumes.																
Preset Scan	When this key is pressed, the preset channel (1 – 8 or 1 – 10) is scanned sequentially. When the receiving frequency is stored in memory, its contents (frequency and band) is recalled and received for approx. 5 seconds, then the next channel is received. When the receiving frequency is not stored in memory, the next channel is received after 1 second.																
MAIN SUB	Sub Audio Program (bilingual audio channel) mode select key for TV broadcast (MAIN/SUB/BOTH). Each time the key is pressed, the SAP mode is changed in the order MAIN → SUB → BOTH, then MAIN resumes. The indication and the pin status for each mode are as follows: <table><tr><th>Mode</th><th>Indication</th><th>Port (Main)</th><th>Port (Sub)</th></tr><tr><td>MAIN</td><td>MAIN</td><td>H</td><td>L</td></tr><tr><td>SUB</td><td>SUB</td><td>L</td><td>L</td></tr><tr><td>BOTH</td><td>MAIN SUB</td><td>L</td><td>H</td></tr></table> This key is effective only when the band is set to the TV position. When set to another position, the MAIN or SUB indication will go off.	Mode	Indication	Port (Main)	Port (Sub)	MAIN	MAIN	H	L	SUB	SUB	L	L	BOTH	MAIN SUB	L	H
Mode	Indication	Port (Main)	Port (Sub)														
MAIN	MAIN	H	L														
SUB	SUB	L	L														
BOTH	MAIN SUB	L	H														


Name	Function
A/B	Each time the key is pressed, the preset group is alternated between A preset (1 – 8 or 1 – 10) and B preset (1 – 8 or 1 – 10) for recalling or storing. When pressed in the memory write mode, the writing time is set to 5 seconds after pressing the key.
TUNER CD PHONO VIDEO	Used only when the unit is set to the receiver mode. By pressing any of these select keys, the data is transmitted to the Selector IC and the input source is changed. ● Keys related with the Tuner (except for the Preset and Band keys) are not accepted other than when the input selector is set to TUNER. ● When any input source other than TUNER is selected, pressing the Band key or Preset key will change the selector to TUNER. ● When the input selector which is the same as the current source is selected, muting does not function.
TAPE	Tape monitor key. ● When pressed, the input source indicator LED (TUNER, CD, PHONO or VIDEO) is not changed but the Selector IC is changed. ● When the Preset Scan or Frequency Scan is engaged with the selector TUNER selected, pressing this key does not stop the scanning operation.

Clear function of microprocessor IC6

To reset the microprocessor IC4, reconnect the power cord while pressing the MEMORY button.


Operation of microprocessor IC6 at power ON

When voltage VDD at pin ②① (power supply) of IC4 is rises at power ON and the reset signal at pin ① differentiated by CE signal (Chip Enable signal) at pin ⑩ rises to half of VDD, the clock starts. When the reset signal lowers to half of the VDD, the microprocessor starts operating and the unit is set to normal operation mode.

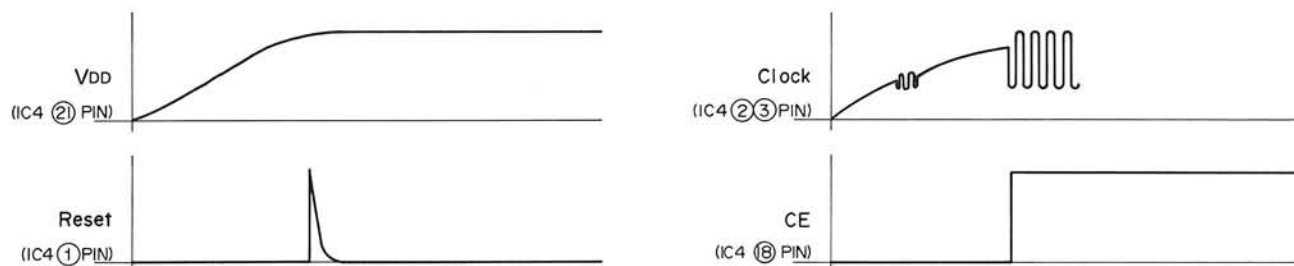

Fluorescent indicator tube FL1: FIP8BRM7A (X14-2180-10)

Terminal connection

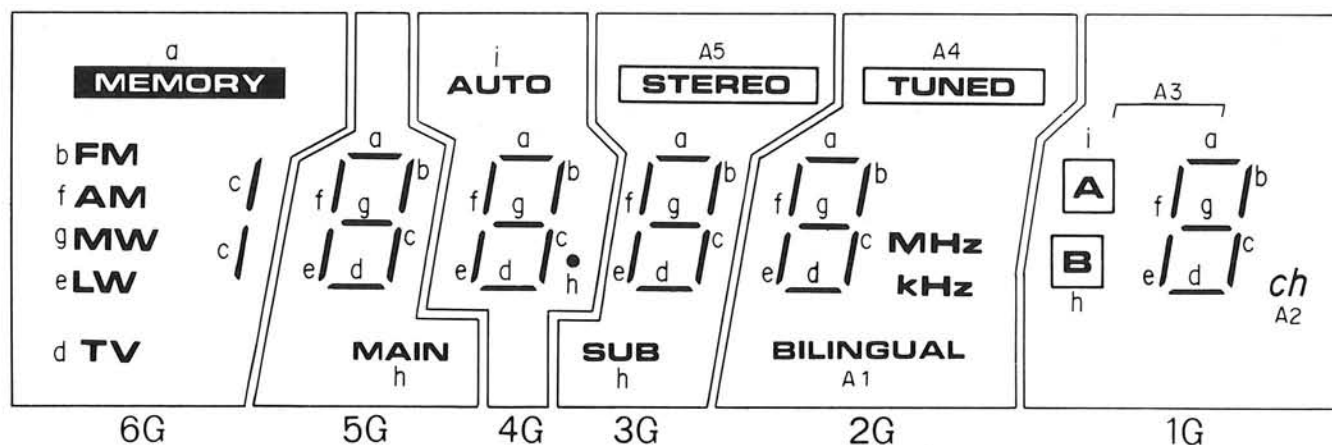

Terminal No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15					
Electrode	F	F	6G	NP	NP	6G	P(A5)	P(A4)	5G	P(A3)	P(A2)	4G	P(A1)	3G	P(i)					
Terminal No.						16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
Electrode						P(h)	P(g)	2G	P(f)	P(e)	2G	P(d)	1G	P(c)	P(b)	P(a)	1G	NP	F	F

Notes F: Filament P: Anode
G: Grid NP: No pin

ADJUSTMENT



No.	ITEM	INPUT SETTINGS	OUTPUT SETTINGS	TUNER SETTINGS	ALIGNMENT POINTS	ALIGN FOR	FIG.
FM SECTION		SELECTOR: FM					
1	DETECTOR	(A) 98.0MHz 1kHz, ± 75 kHz dev 60dB μ (ANT input)	Connect a DC voltmeter between TP2 and TP3.	AUTO or MONO 98.0MHz	L5 (X14-)	0V	(a)
2	VCO	(A) 98.0MHz 0 dev 100dB μ (ANT input)	Connect a frequency counter between TP6 and GND.	AUTO 98.0MHz	VR4 (X14-)	76.00kHz	(b)
3	SEPARATION (E Type)	(C) 98.0MHz Stereo signal 60dB μ (ANT input)	(B)	AUTO 98.0MHz	VR3 (X14-)	Minimum crosstalk.	
4	TUNING LEVEL	(A) 98.0MHz 0 dev 18dB μ (ANT input) 3000 14dB μ (ANT input) 750	(B)	AUTO or MONO 98.0MHz	VR1 (X14-)	Adjust VR1 and stop at the point where FL1(TUNED) goes on.	
AM SECTION		Keep the AM loop antenna installed. SELECTOR: AM					
(1)	BAND EDGE (Low)	—	Connect a DC voltmeter between TP7(GND) and TP8.	—	L3 (X14-)	1.5V	(c)
(2)	BAND EDGE (High)	—	Connect a DC voltmeter between TP7(GND) and TP8.	—	TC2 (X14-)	8.0V	(c)
Repeat alignments (1) and (2) several times.							
(3)	RF ALIGNMENT (1)	(D) 600kHz 20dB μ (ANT input)	(B)	—	L2 (X14-)	Maximum amplitude and symmetry of the oscilloscope display.	
(4)	RF ALIGNMENT (2)	(D) 1400kHz 20dB μ (ANT input)	(B)	—	TC1 (X14-)	Maximum amplitude and symmetry of the oscilloscope display.	
Repeat alignments (3) and (4) several times.							
(5)	IF TRANSFORMER	(D) 1000kHz 20dB μ (ANT input)	(B)	—	L6 (X14-)	Maximum amplitude and symmetry of the oscilloscope display.	
(6)	TUNING LEVEL	(D) 1000kHz 36dB μ (ANT input)	(B)	—	VR2 (X14-)	Adjust VR2 and stop at the point where FL1(TUNED) goes on.	
AUDIO SECTION							
[1]	IDLE CURRENT	—	(E) Connect a DC voltmeter across CP1(L) CP2(R)	Volume: 0	VR1(L) VR2(R) (X07-)	13mV	(d)

REGLAGE


N°	ITEM	REGLAGE DE L'ENTREE	REGLAGE DE LA SORTIE	REGLAGE DU TUNER	POINT DE L'ALIGNEMENT	ALIGNER POUR	FIG.
SECTION MF		SELECTEUR : FM					
1	DETECTEUR	(A) 98,0MHz 1kHz.±75kHz dév 60dBμ(Entrée ANT)	Relier un voltmètre CC entre les TP2 et TP3.	AUTO ou MONO 98,0MHz	L5 (X14-)	0V	(a)
2	OSCILLATEUR CONTROLE PAR LA TENSION	(A) 98,0MHz 0 dév 100dBμ(Entrée ANT)	Relier un compteur de fréquence entre les TP6 et GND.	AUTO 98,0MHz	VR4 (X14-)	76,00kHz	(b)
3	SEPARATION (E type)	(C) 98,0MHz Signal stéréo 60dBμ(Entrée ANT)	(B)	AUTO 98,0MHz	VR3 (X14-)	Diaphonie minimale.	
4	NIVEAU D'ACORDER	(A) 98,0MHz 0 dév 18dBμ(Entrée ANT) 300Ω 14dBμ(Entrée ANT) 75Ω	—	AUTO ou MONO 98,0MHz	VR1 (X14-)	Ajuster VR1 et arrêter le mouvement de VR1 au moment où le FL1(TUNED)s'allume.	
SECTION MA		Laisser l'antenne bouche MA installée. SELECTEUR: AM					
(1)	BORD DE BANDE (Bas)	—	Relier un voltmètre entre les TP7(GND) et TP8.	—	L3 (X14-)	1,5V	(c)
(2)	BORD DE BANDE (Haut)	—	Relier un voltmètre entre les TP7(GND) et TP8.	—	TC2 (X14-)	8,0V	(c)
Répéter les points (1) et (2) plusieurs fois.							
(3)	ALIGNEMENT H.T. (1)	(D) 600kHz 20dBμ(Entrée ANT)	(B)	—	L2 (X14-)	Amplitude et symétrie maximale de l'affichage de l'oscilloscope.	
(4)	ALIGNEMENT H.T. (2)	(D) 1400kHz 20dBμ(Entrée ANT)	(B)	—	TC1 (X14-)	Amplitude et symétrie maximale de l'affichage de l'oscilloscope.	
Répéter les points (3) et (4) plusieurs fois.							
(5)	TRANSFORMATEUR F.I.	(D) 1000kHz 20dBμ(Entrée ANT)	(B)	—	L6 (X14-)	Amplitude et symétrie maximale de l'affichage de l'oscilloscope.	
(6)	NIVEAU D'ACORDER	(A) 1000kHz 36dBμ(Entrée ANT)	—	—	VR2 (X14-)	Ajuster VR2 et arrêter le mouvement de VR2 au moment où le FL1(TUNED)s'allume.	
SECTION AUDIO							
[1]	COURANA DE POLARISATION	—	(E) Connecter un voltmètre CC sur CP1(L) CP2(R)	Volume: 0	VR1(G) VR2(D) (X07-)	13mV	(d)

ABGIEICH

NR.	GEGENSTAND	EINGANGS-EINSTELLUNG	AUSGANGS-EINSTELLUNG	TUNER-EINSTELLUNG	ABGLEICH-PUNKTE	ABGLEICHEN FÜR	ABB.
UKW-EMPFANGSABTEILUNG WÄHLER: FM							
1	DETEKTOR	(A) 98,0MHz 1kHz.±75kHz Hub 60dBμ(ANT-Eingang)	Einen Gleichspannungs- messer zwischen TP2 und TP3 anschließen.	AUTO oder MONO 98,0MHz	L5 (X14-)	0V	(a)
2	SPANNUNGS- GEREGLTER OSZILLATOR	(A) 98,0MHz 0 Hub 100dBμ(ANT-Eingang)	Einen Frequenzzähler zwischen TP6 und GND anschließen.	AUTO 98,0MHz	VR4 (X14-)	76,00kHz	(b)
3	STEREO KANAL TRENUNG (E Type)	(C) 98,0MHz Stereo Signal 60dBμ(ANT-Eingang)	(B)	AUTO 98,0MHz	VR3 (X14-)	Minimal Klirrfaktor.	
4	ABSTIMM PEGEL	(A) 98,0MHz 0 Hub 18dBμ(ANT-Eingang) 300Ω 14dBμ(ANT-Eingang) 75Ω	—	AUTO oder MONO 98,0MHz	VR1 (X14-)	Den Pegel widerstand aufdrehen, und dem VR1 Halt geben wobei den FL1(TUNED) anzeiger leuchtet wird.	
MW-EMPFANGSABTEILUNG Die MW-Rahmenantenne angebracht lassen. WÄHLER: AM							
(1)	BANDKANTE (Niedrig)	—	Einen Gleichspannungs- messer zwischen TP7(GND) und TP8 anschließen.	—	L3 (X14-)	1,5V	(c)
(2)	BANDKANTE (Hoch)	—	Einen Gleichspannungs- messer zwischen TP7(GND) und TP8 anschließen.	—	TC2 (X14-)	8,0V	(c)
Abstimmungen (1) und (2) mehrere Male wiederholen.							
(3)	HF-ABGLEICH (1)	(D) 600kHz 20dBμ(ANT-Eingang)	(B)	—	L2 (X14-)	Maximal Amplitude und Symmetrie des Oszilloskopbildes.	
(4)	HF-ABGLEICH (2)	(D) 1400kHz 20dBμ(ANT-Eingang)	(B)	—	TC1 (X14-)	Maximal Amplitude und Symmetrie des Oszilloskopbildes.	
Abstimmungen (3) und (4) mehrere Male wiederholen.							
(5)	ZF-ÜBERTRAGER	(D) 1000kHz 20dBμ(ANT-Eingang)	(B)	—	L6 (X14-)	Maximal Amplitude und Symmetrie des Oszilloskopbildes.	
(6)	ABSTIMM PEGEL	(A) 1000kHz 36dBμ(ANT-Eingang)	—	—	VR2 (X14-)	Den Pegel widerstand aufdrehen, und dem VR2 Halt geben wobei den FL1(TUNED) anzeiger leuchtet wird.	
AUDIO-ABTEILUNG							
[1]	LEERLAUFSTROM	—	(E) Einen Gleichspannungs- messer über CP1(L) CP2(R) anschließen.	Volume: 0	VR1(L) VR2(R) (X07-)	13mV	(d)

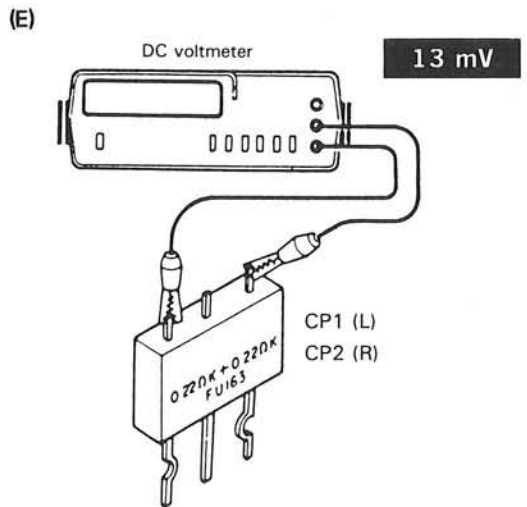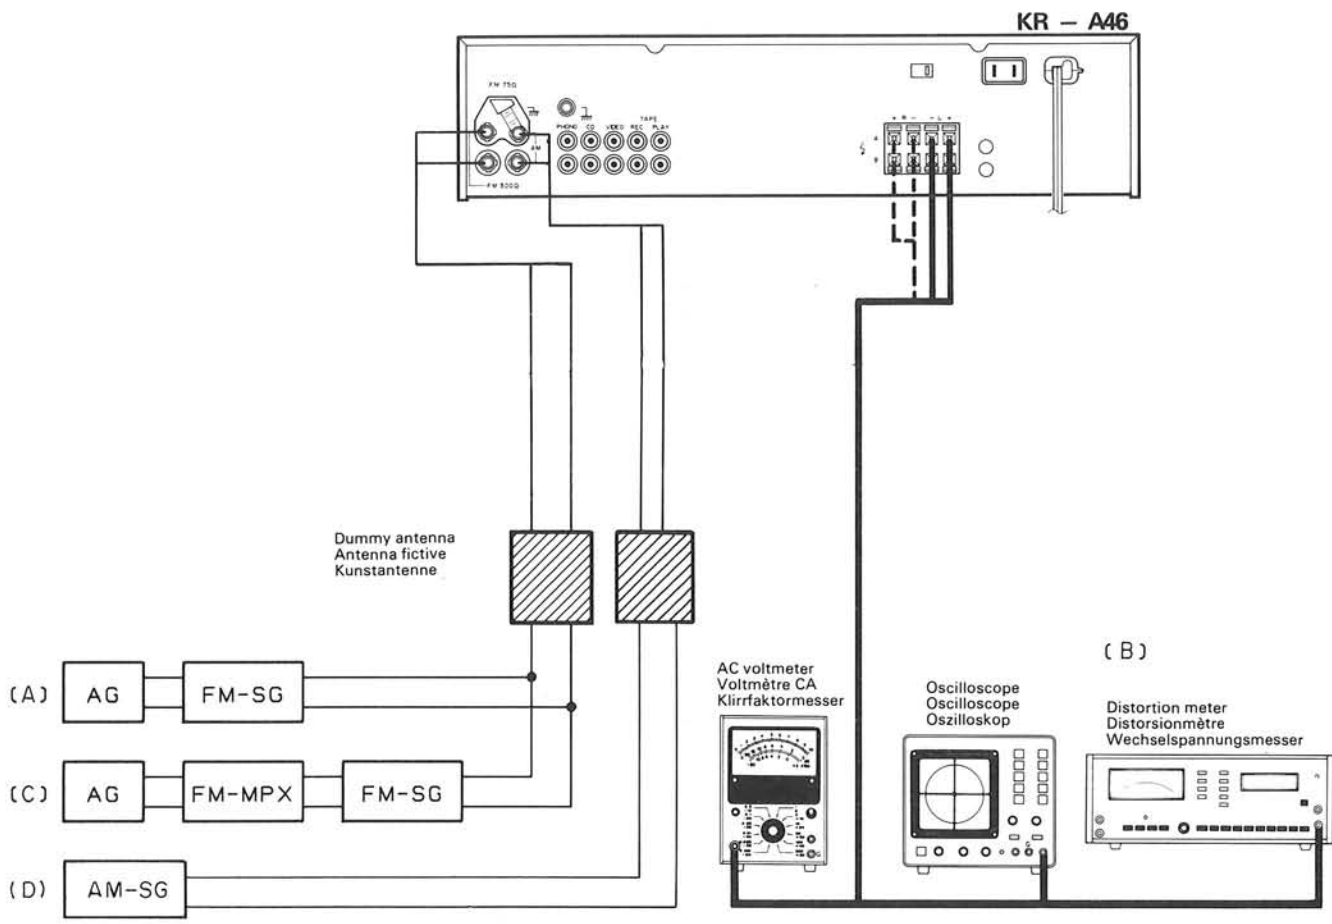


COMPONENT SIDE VIEW



PC BOARD

FOIL SIDE VIEW

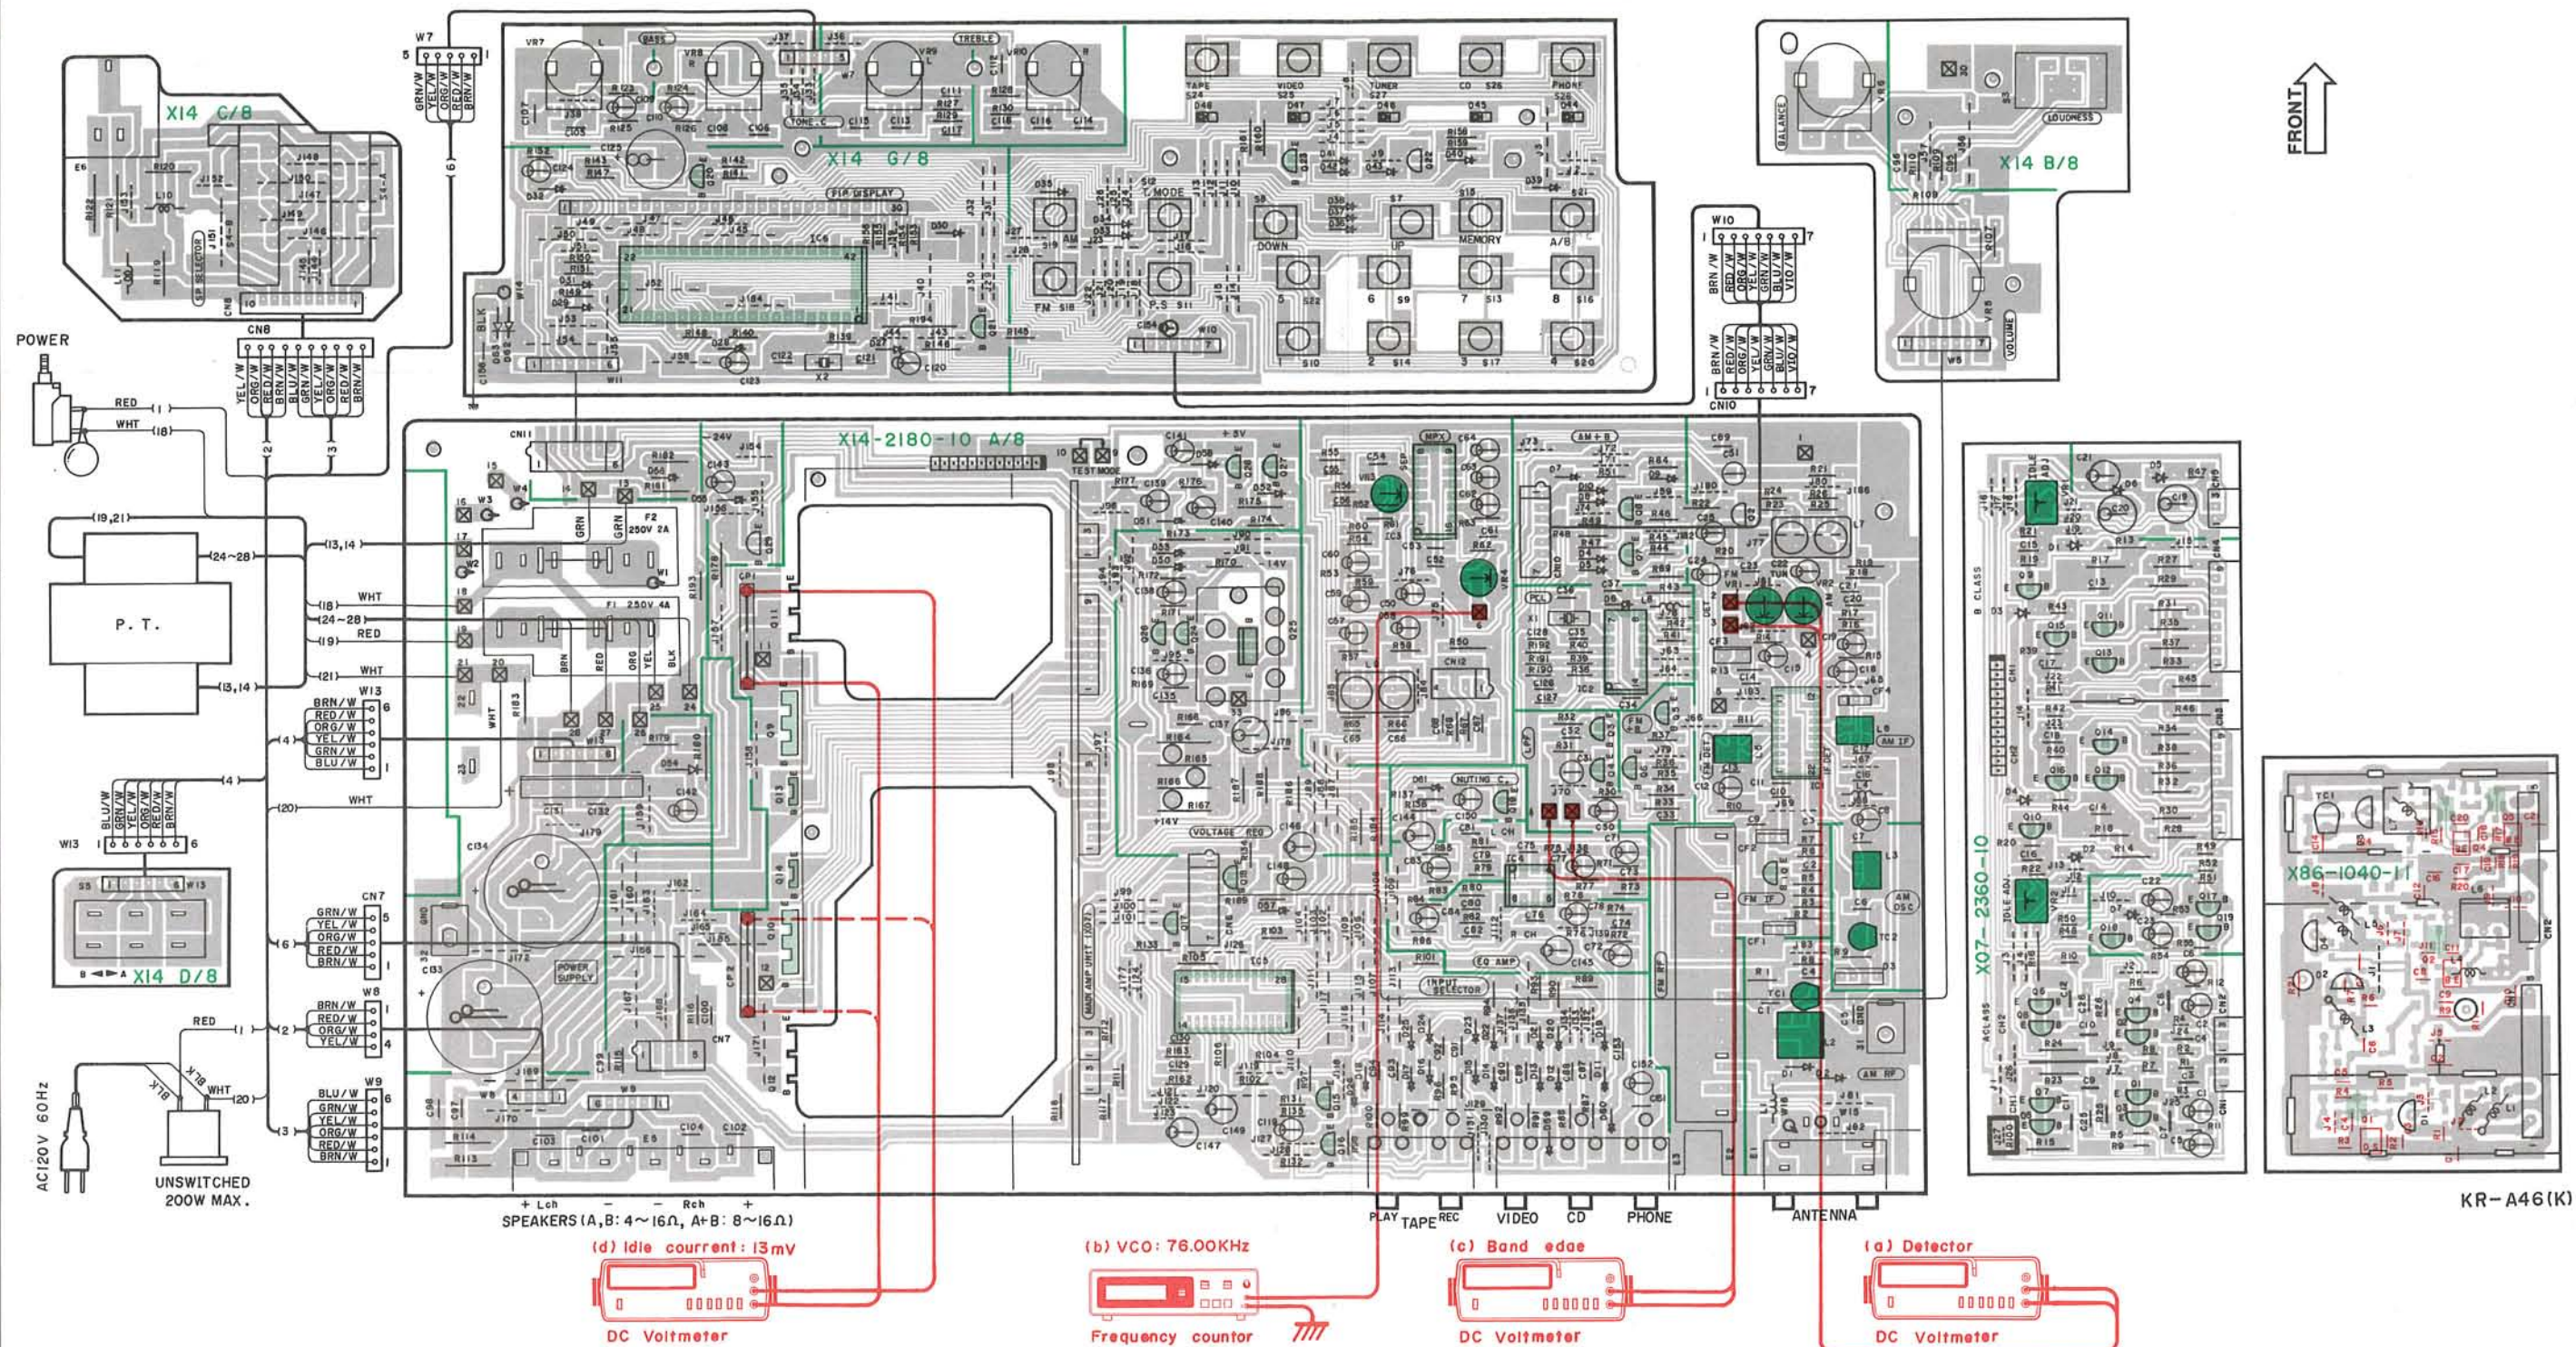

2SA1284
2SA733 (A)
2SA954
2SA992
2SC1845
2SC1923
2SC2003
2SC2878
2SC3244
2SC945 (A)

2SC2167

2SA1489

2SC3853

2SC2714

2SK302

3SK131

NJM4558D-A

AN7470


M5218P-A


UPD7538AC-041

LC7820

CX7925B

LA1265

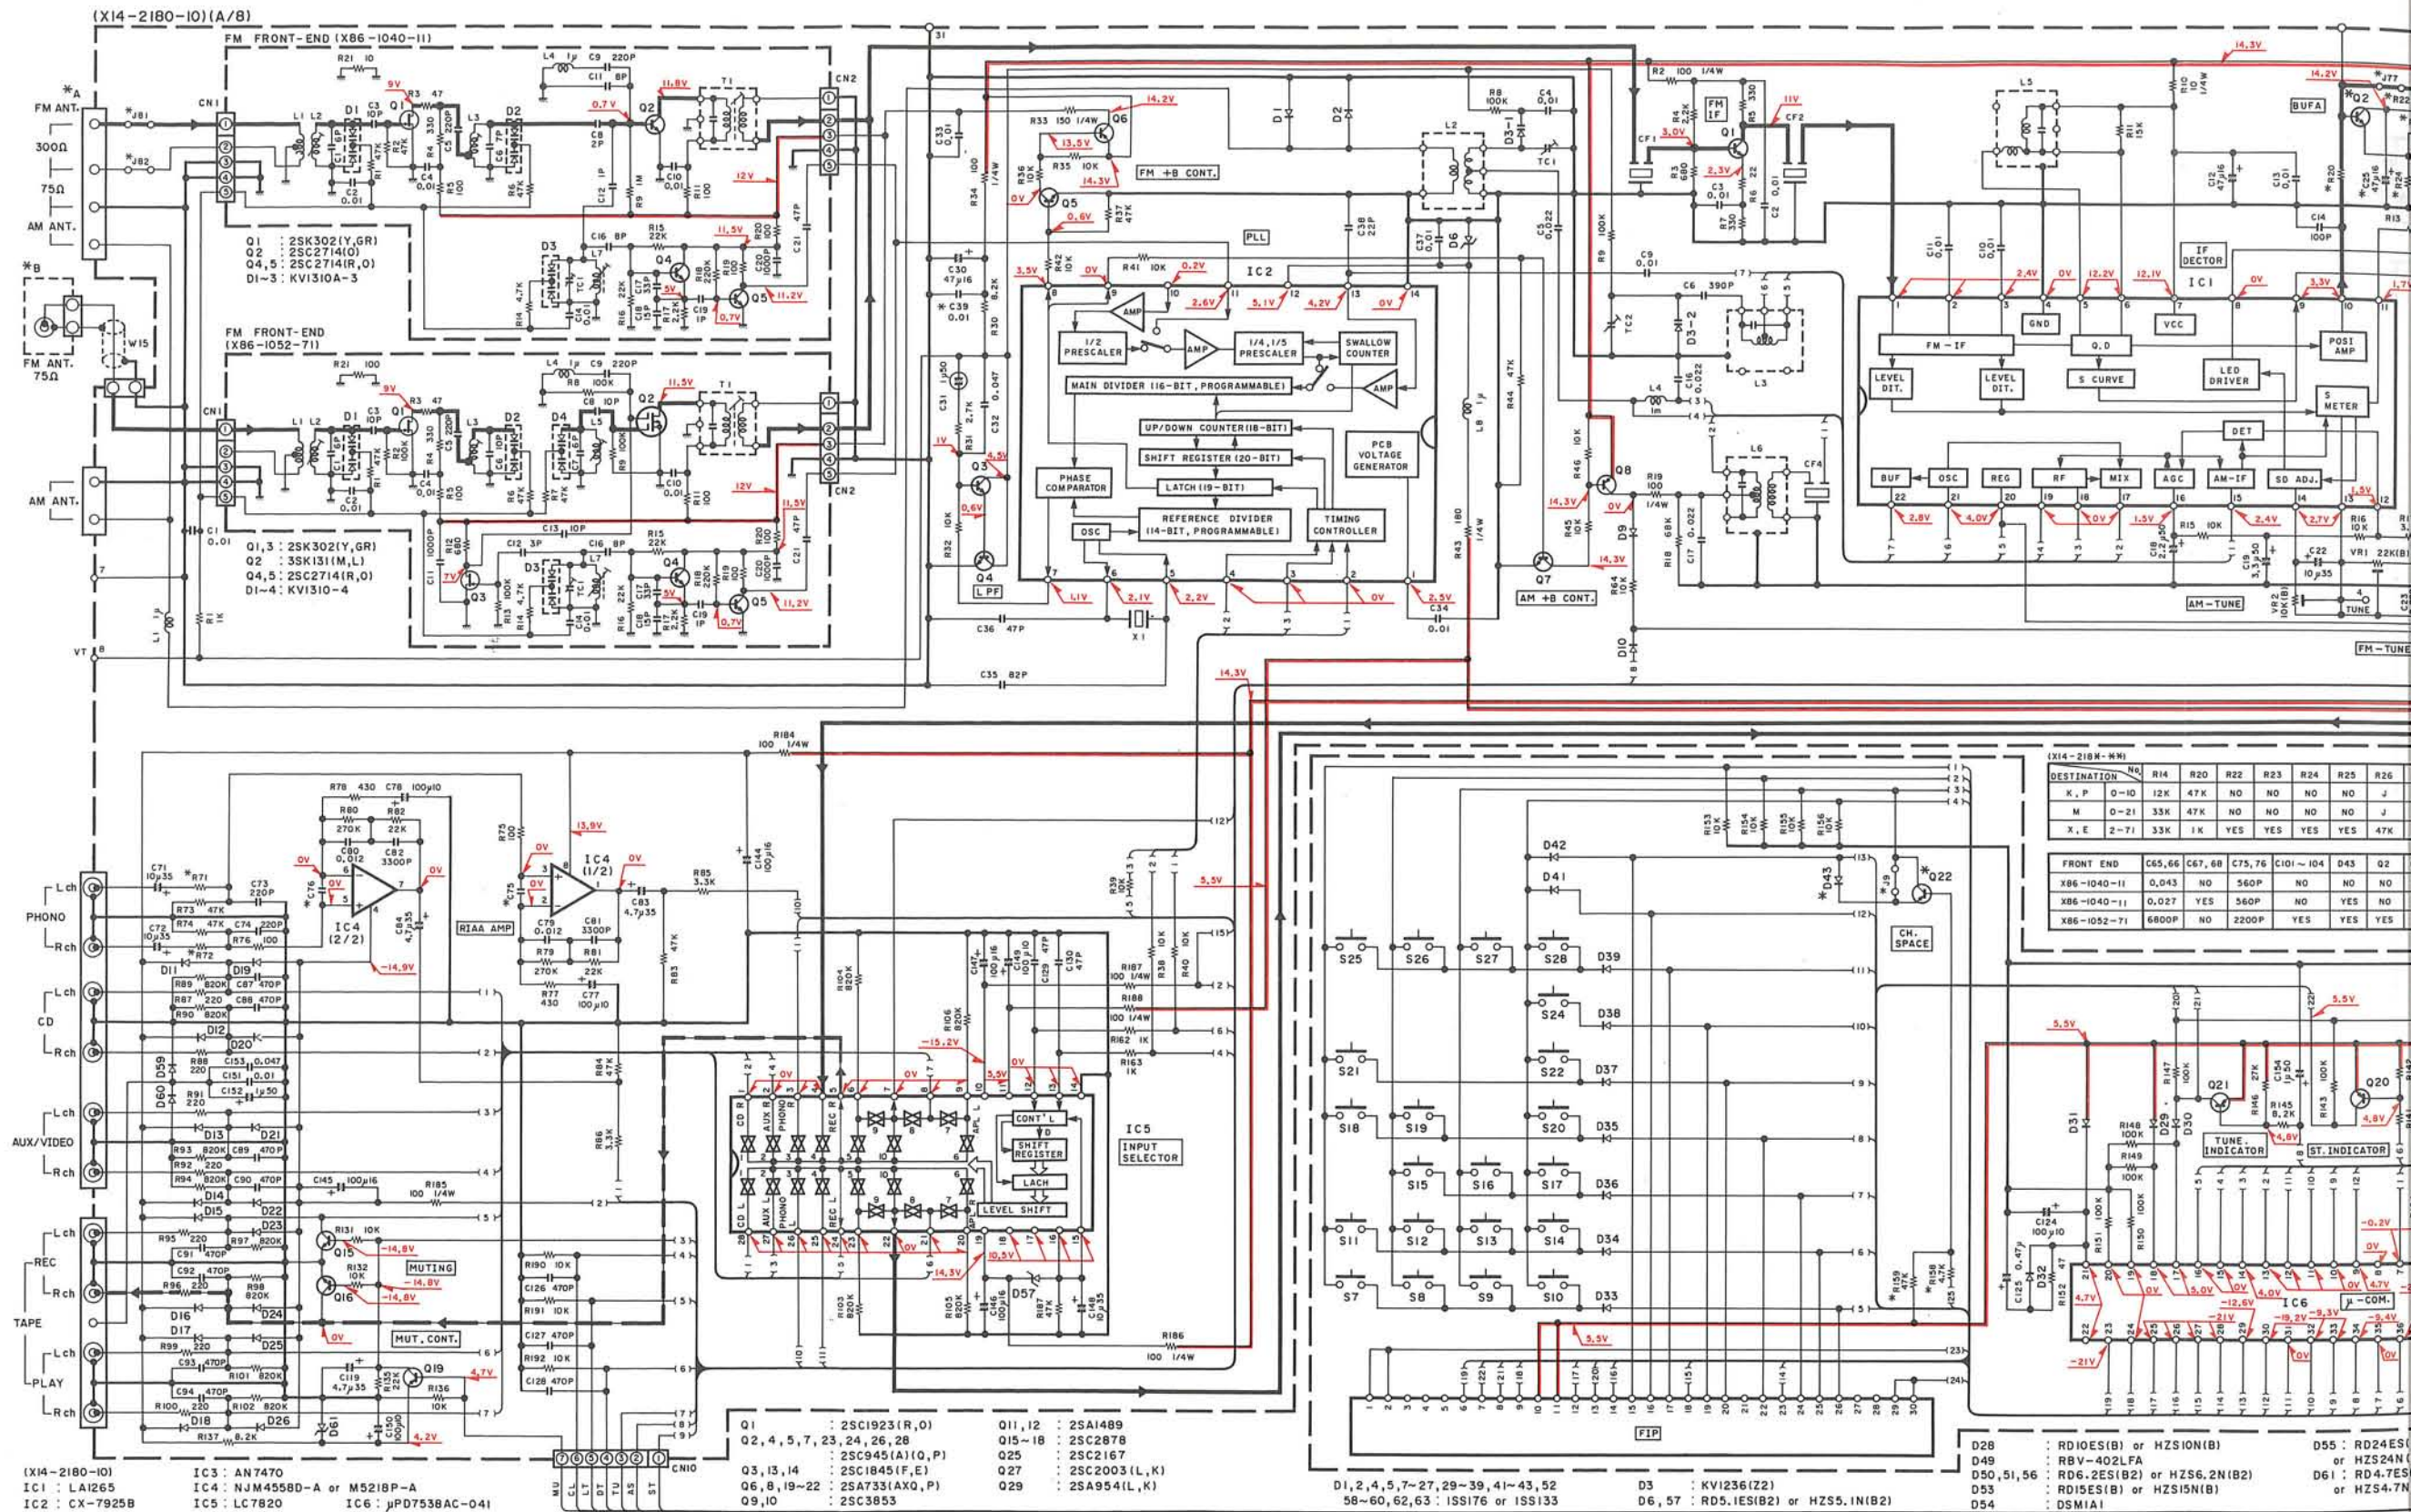

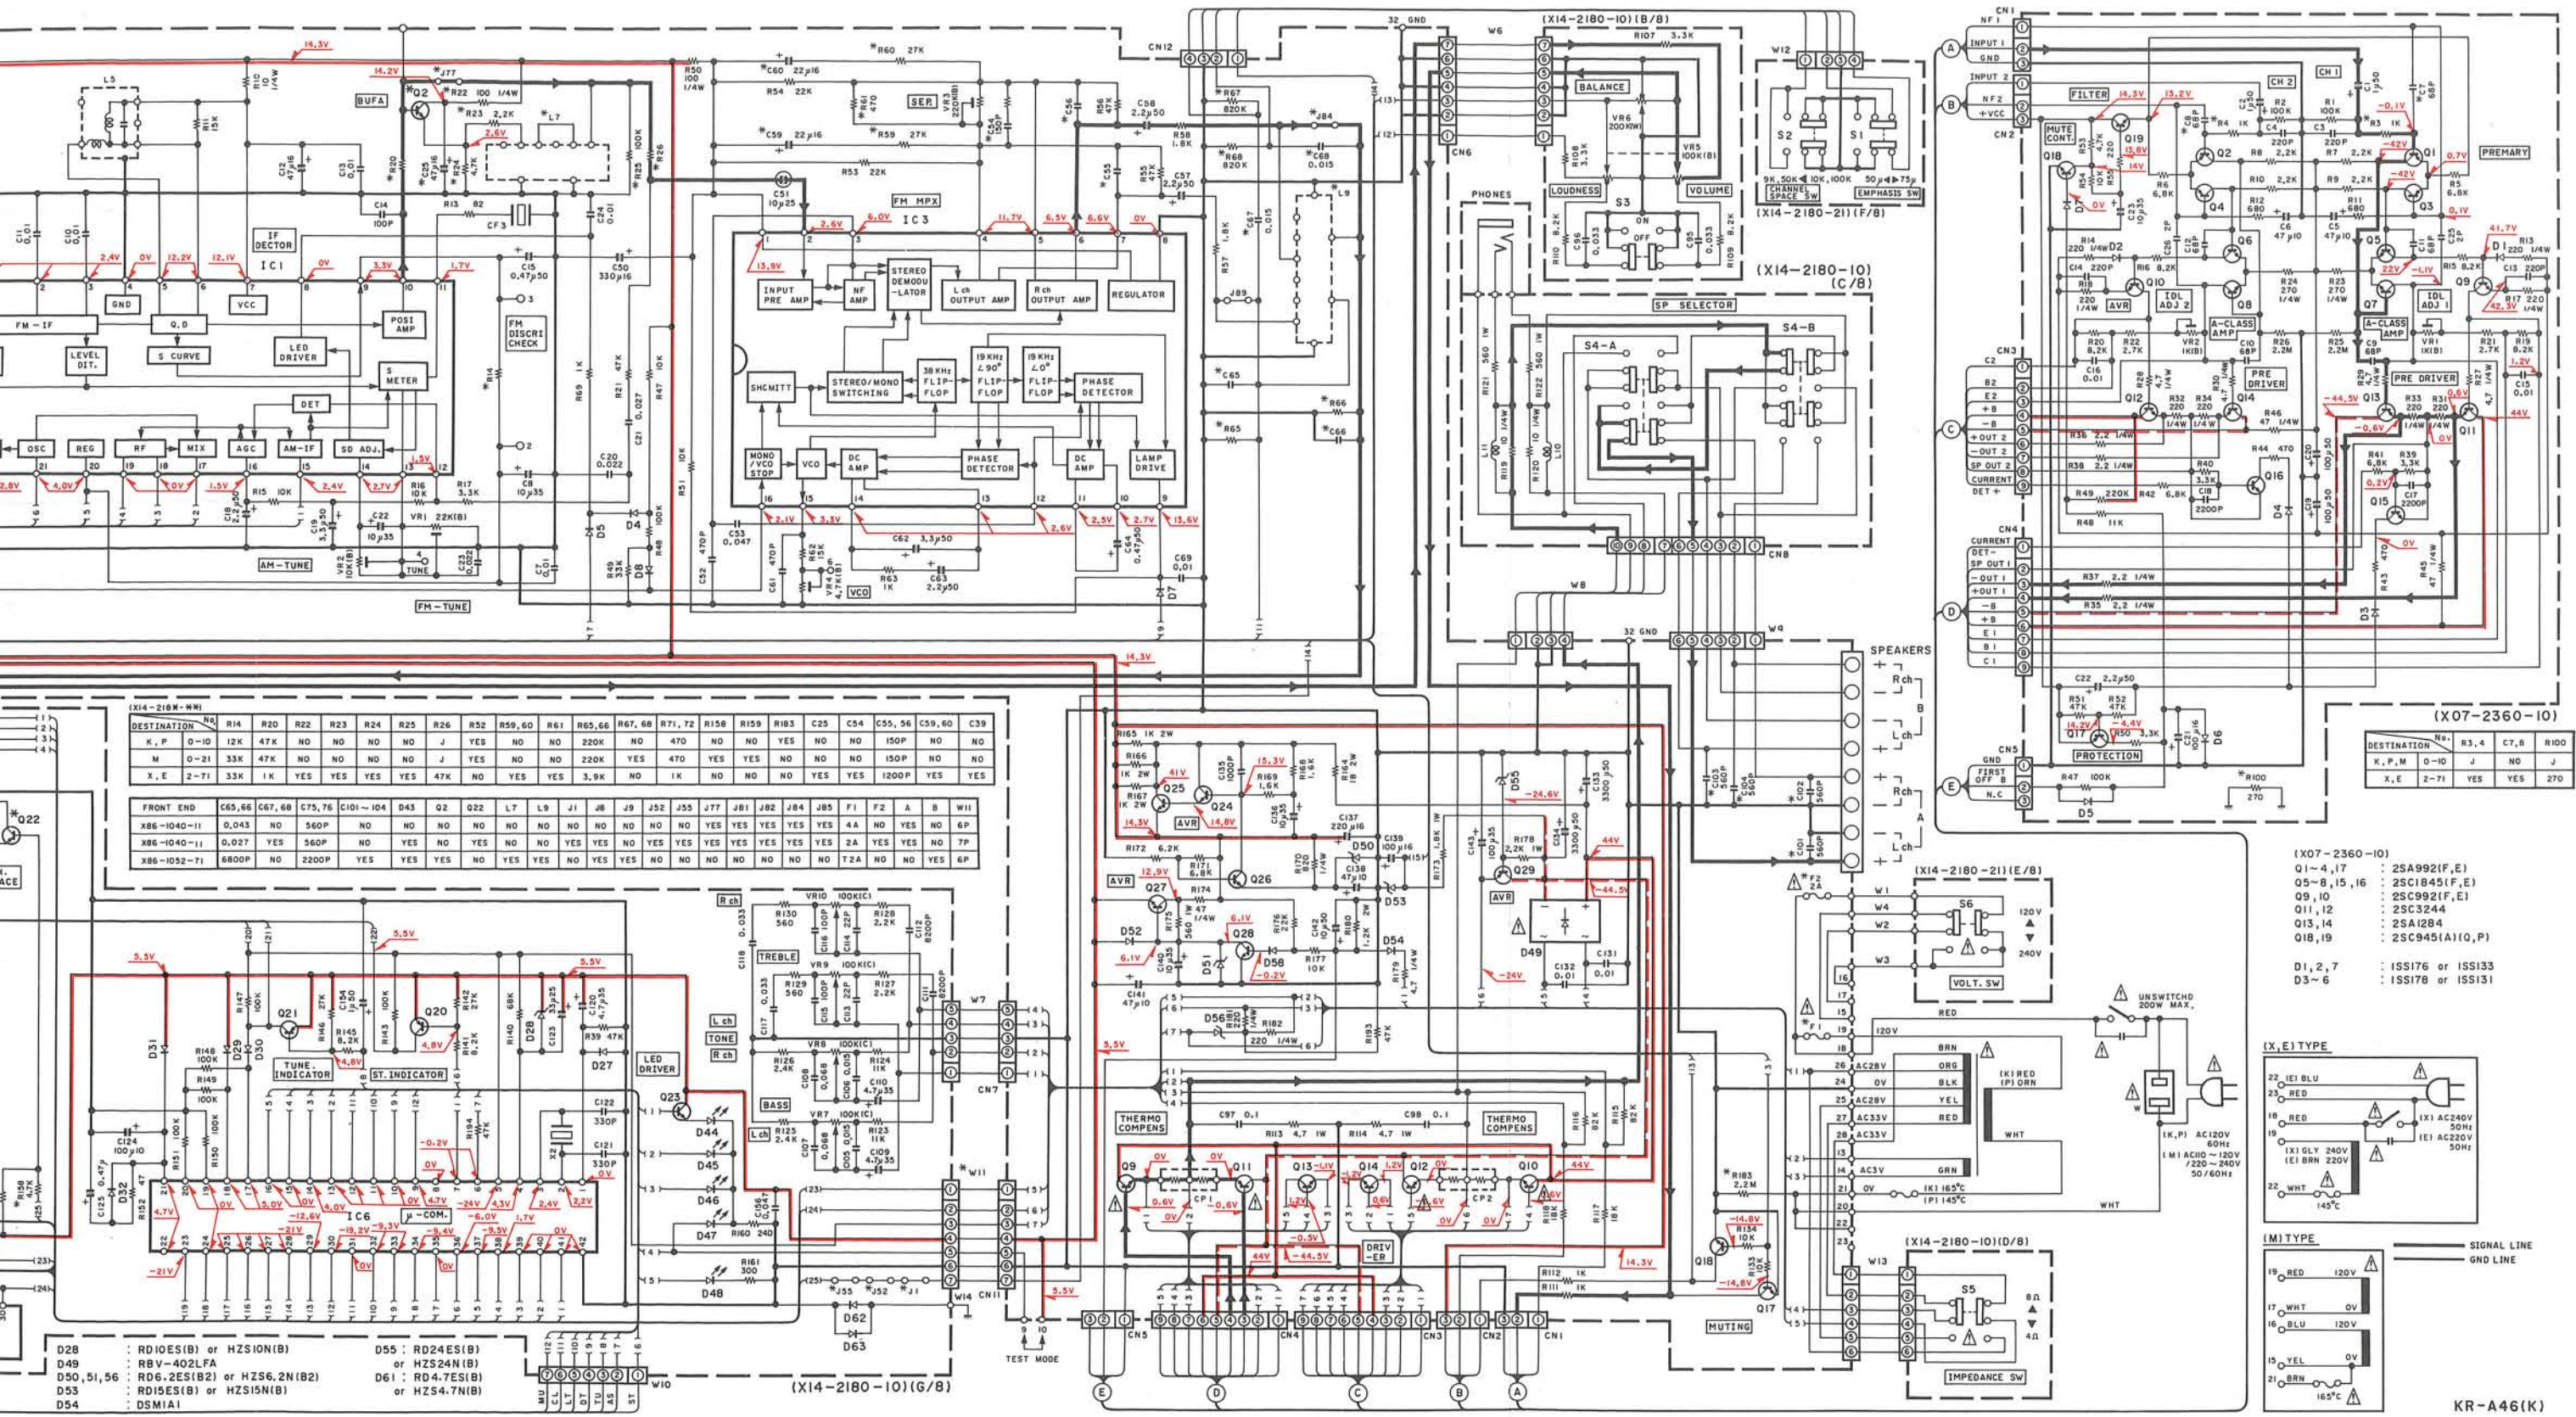

CAUTION: For continued safety, replace safety critical components only with manufacture's recommended parts (refer to parts list). Δ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

DC voltages are as measured with a high impedance voltmeter during reception of the FM broadcast signal (with a signal strength of 60 dB at the ANT terminal). Values may vary slightly due to variations between individual instruments or/and units.

Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance pendant la réception d'un signal de programme FM (avec une force de signal de 60 dB à la borne ANT). Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.

Die angegebenen Gleichspannungswerte wurden mit einem hochohmigen Spannungsmesser bei Empfang eines UKW-Signals (mit einer Feldstärke von 60 dB am Antennenanschluß) gemessen. Dabei schwanken die Meßwerte aufgrund von Unterschieden zwischen einzelnen Instrumenten oder Geräten u. U. geringfügig.

PARTS LIST

✕ New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Telle ohne Parts No. werden nicht geliefert.

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕 向	Re- marks 備考
KR-A46						
1	1A		A01-1544-01	METALLIC CABINET		
2	2A	*	A20-5187-02	PANEL		
3	2B	*	A22-0684-02	SUB PANEL ASSY		
7	2A	*	B03-2267-03	DRESSING PLATE		
-			B46-0092-03	WARRANTY CARD	K	
-			B46-0096-13	WARRANTY CARD	X	
-			B46-0121-03	WARRANTY CARD	P	
-			B46-0122-13	WARRANTY CARD	E	
-		*	B50-6859-00	INSTRUCTION MANUAL (ENGLISH)	K	
-		*	B50-6860-00	INSTRUCTION MANUAL (ENG, FRE)	PMX	
-		*	B50-6861-00	INSTRUCTION MANUAL (E, F, SP, A)	M	
-		*	B50-6862-00	INSTRUCTION MANUAL (F, G, D)	E	
-			B58-0269-04	CAUTION CARD	K	
-			B58-0803-03	CAUTION CARD	E	
△ C1			C91-0023-05	CERAMIC 0.01UF AC250V	M	
△ C1			C91-0647-05	CERAMIC 0.01UF P	KPXE	
△ 11	2C		E03-0041-05	AC OUTLET	KPM	
△ 12	1A		E04-0006-05	RF COAXIAL CABLE RECEPTACLE	XE	
△ 13	1C		E30-0459-05	AC POWER CORD	E	
△ 13	1C		E30-0812-05	AC POWER CORD	M	
△ 13	1C		E30-1341-05	AC POWER CORD	X	
△ 13	1C		E30-2209-05	AC POWER CORD	KP	
-		*	H01-7454-04	ITEM CARTON CASE		
-			H10-3400-02	POLYSTYRENE FOAMED FIXTURE		
-			H25-0181-04	PROTECTION BAG (150X260X0.05)		
-			H25-0223-04	PROTECTION BAG (750X350X0.03)		
-			H25-0232-04	PROTECTION BAG (235X350X0.03)		
17	2B, 2C		J02-0170-04	FOOT		
18	1A	*	J19-2815-04	ANTENNA HOLDER		
△ 19	2C		J42-0083-05	POWER CORD BUSHING		
-			J61-0307-05	WIRE BAND		
23	2A, 2B		K27-1304-04	KNOB (BUTTON) SPEAKERS		
24	2B	*	K27-1644-04	KNOB (BUTTON) LOUDNESS		
25	2A		K29-2001-04	KNOB ASSY (BUTTON) POWER		
26	2A		K29-2506-04	KNOB (BASS, TREBLE)		
27	2A	*	K29-2659-04	KNOB (VOLUME)		
28	2A	*	K29-2661-04	KNOB (BALANCE)		
△ 32	1B	*	L01-7661-05	POWER TRANSFORMER	K	
△ 32	1B	*	L01-7662-05	POWER TRANSFORMER	E	
△ 32	1B	*	L01-7665-05	POWER TRANSFORMER	M	
△ 32	1B	*	L01-7667-05	POWER TRANSFORMER	P	
△ 32	1B	*	L01-7668-05	POWER TRANSFORMER	X	
36	2C		N08-0128-35	BINDING POST (GND)		
H	2B, 2C		N09-1515-05	TAPPING SCREW (Ø3X8)		
△ S1	2A		S40-1073-05	PUSH SWITCH (POWER)		
40	1A		T90-0104-25	LOOP ANTENNA		
41	1A		T90-0121-05	T TYPE ANTENNA		
42	1A		T90-0136-05	ANTENNA ADAPTOR	XE	

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

△ indicates safety critical components.

※ New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
POWER AMPLIFIER UNIT (X07-2360-10)						
C1 ,2			CE04LW1H010M	ELECTR0 1.0UF 50WV		
C3 ,4			CC45FSL1H221J	CERAMIC 220PF J		
C5 ,6		*	CE04LW1A470M	ELECTR0 47UF 10WV		
C7 -12			CC45FSL1H680J	CERAMIC 68PF J		
C9 -12			CC45FSL1H680J	CERAMIC 68PF J	XE KPM	
C13 ,14			CC45FSL1H221J	CERAMIC 220PF J		
C15 ,16			CK45FF1H103Z	CERAMIC 0.010UF Z		
C17 ,18			CK45FB1H222K	CERAMIC 2200PF K		
C19 ,20		*	CE04LW1H101M	ELECTR0 100UF 50WV		
C21		*	CE04LW1C101M	ELECTR0 100UF 16WV		
C22			CE04LW1H2R2M	ELECTR0 2.2UF 50WV		
C23			CE04LW1V100M	ELECTR0 10UF 35WV		
C25 ,26			CC45FSL1H020C	CERAMIC 2.0PF C		
R13 ,14			RD14GB2E221J	FL-PROOF RD 220 J 1/4W		
R17 ,18			RD14GB2E221J	FL-PROOF RD 220 J 1/4W		
R23 ,24			RD14GB2E271J	FL-PROOF RD 270 J 1/4W		
R27 -30			RD14GB2E4R7J	FL-PROOF RD 4.7 J 1/4W		
R31 -34			RD14GB2E221J	FL-PROOF RD 220 J 1/4W		
R35 -38			RD14GB2E2R2J	FL-PROOF RD 2.2 J 1/4W		
R45 ,46			RD14GB2E470J	FL-PROOF RD 47 J 1/4W		
VR1 ,2			R12-1070-05	TRIMMING P0T. (1K) IDLE ADJ		
D1 ,2			1SS133	DIODE		
D1 ,2			1SS176	DIODE		
D3 -6			1SS131	DIODE		
D3 -6			1SS178	DIODE		
D7			1SS133	DIODE		
D7			1SS176	DIODE		
Q1 -4			2SA992(F,E)	TRANSISTOR		
Q5 -8			2SC1845(F,E)	TRANSISTOR		
Q9 ,10			2SA992(F,E)	TRANSISTOR		
Q11 ,12			2SC3244	TRANSISTOR		
Q13 ,14			2SA1284	TRANSISTOR		
Q15 ,16			2SC1845(F,E)	TRANSISTOR		
Q17			2SA992(F,E)	TRANSISTOR		
Q18 ,19			2SC945(A)(Q,P)	TRANSISTOR		
RECEIVER UNIT (X14-2180-10)						
D44 -48			B30-0431-05	LED(LN21CPH)		
C1 -4			CK45FF1H103Z	CERAMIC 0.010UF Z		
C5			CK45FF1H223Z	CERAMIC 0.022UF Z		
C6			CQ09FS1H391J	POLYSTY 390PF J		
C7			CK45FF1H103Z	CERAMIC 0.010UF Z		
C8			CE04LW1V100M	ELECTR0 10UF 35WV		
C9 -11			CK45FF1H103Z	CERAMIC 0.010UF Z		
C12			CE04LW1C470M	ELECTR0 47UF 16WV		
C13			CK45FF1H103Z	CERAMIC 0.010UF Z		
C14			CC45FSL1H101J	CERAMIC 100PF J		
C15			CE04LW1HR47M	ELECTR0 0.47UF 50WV		
C16 ,17			CK45FF1H223Z	CERAMIC 0.022UF Z		
C18			CE04LW1H2R2M	ELECTR0 2.2UF 50WV		
C19			CE04LW1H3R3M	ELECTR0 3.3UF 50WV		
C20			CK45FF1H223Z	CERAMIC 0.022UF Z		
C21			CF92FV1H273J	MF 0.027UF J		

E: Scandinavia & Europe K: USA

P: Canada

U: PX(Far East, Hawaii)

T: England

M: Other Areas

UE: AAFES(Europe)

X: Australia

 indicates safety critical components.

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Telle ohne Parts No. werden nicht geliefert.

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕 向	Re- marks 備考
C22 C23 C24 C25 C30			CE04LW1V100M CK45FF1H223Z CK45FF1H103Z CE04LW1C470M CE04LW1C470M	ELECTR0 10UF 35WV CERAMIC 0.022UF Z CERAMIC 0.010UF Z ELECTR0 47UF 16WV ELECTR0 47UF 16WV	XE	
C31 C32 C33 ,34 C35 C36			C90-1349-05 CF92FV1H473J CK45FF1H103Z CC45FCH1H560J CC45FCH1H270J	NP-ELEC 1UF 50WV MF 0.047UF J CERAMIC 0.010UF Z CERAMIC 56PF J CERAMIC 27PF J		
C37 C38 C39 C50 C51		*	CK45FF1H103Z CC45FSL1H220J CK45FF1H103Z CE04LW1C331M C90-1332-05	CERAMIC 0.010UF Z CERAMIC 22PF J CERAMIC 0.010UF Z ELECTR0 330UF 16WV NP-ELEC 10UF 16WV	XE	
C52 C53 C54 C55 ,56 C56 ,56			CK45FB1H471K CF92FV1H473J CC45FSL1H151J CC45FSL1H151J CF92FV1H122J	CERAMIC 470PF K MF 0.047UF J CERAMIC 150PF J CERAMIC 150PF J MF 1200PF J	XE KPM XE	
C57 ,58 C59 ,60 C61 C62 C63		*	CE04LW1H2R2M CE04LW1C220M C009FS1H471J CE04LW1H3R3M CE04LW1H2R2M	ELECTR0 2.2UF 50WV ELECTR0 22UF 16WV POLYSTY 470PF J ELECTR0 3.3UF 50WV ELECTR0 2.2UF 50WV	XE	
C64 C65 ,66 C65 ,66 C65 ,66 C67 ,68		*	CE04LW1HR47M CF92FV1H273J CF92FV1H433J CF92FV1H682J CF92FV1H153J	ELECTR0 0.47UF 50WV MF 0.027UF J MF 0.043UF J MF 6800PF J MF 0.015UF J	M KP XE M	
C69 C71 ,72 C73 ,74 C75 ,76 C76 ,76			CK45FF1H103Z CE04LW1V100M CC45FSL1H221J CF92FV1H222J CK45FB1H561K	CERAMIC 0.010UF Z ELECTR0 10UF 35WV CERAMIC 220PF J MF 2200PF J CERAMIC 560PF K	XE KPM	
C77 ,78 C79 ,80 C81 ,82 C83 ,84 C87 -94		*	CE04LW1A101M CF92FV1H123J CF92FV1H332J CE04LW1V4R7M CK45FB1H471K	ELECTR0 100UF 10WV MF 0.012UF J MF 3300PF J ELECTR0 4.7UF 35WV CERAMIC 470PF K		
C95 ,96 C97 ,98 C101-104 C105,106 C107,108		*	CF92FV1H333J CF92FV1H104J CK45FB1H561K CF92FV1H153J CF92FV1H683J	MF 0.033UF J MF 0.10UF J CERAMIC 560PF K MF 0.015UF J MF 0.068UF J	XE	
C109,110 C111,112 C113,114 C115,116 C117,118			CE04JW1V4R7M CF92FV1H822J CC45FSL1H220J CC45FSL1H101J CF92FV1H333J	ELECTR0 4.7UF 35WV MF 8200PF J CERAMIC 22PF J CERAMIC 100PF J MF 0.033UF J		
C119 C120 C121,122 C123 C124		*	CE04LW1V4R7M CE04JW1V4R7M CC45FSL1H331J CE04JW1E330M CE04JW1A101M	ELECTR0 4.7UF 35WV ELECTR0 4.7UF 35WV CERAMIC 330PF J ELECTR0 33UF 25WV ELECTR0 100UF 10WV		

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

 indicates safety critical components.

※ New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
C125 C126-128 C129,130 C131,132 C133,134		*	C91-0937-05 CK45FB1H471K CC45FSL1H470J CK45FF1H103Z C90-1228-05	BACKUP 0.047F 5.5WV CERAMIC 470PF K CERAMIC 47PF J CERAMIC 0.010UF Z ELECTR0 3300UF 50WV		
C135 C136 C137 C138 C139			CK45FB1H102K CE04LW1V100M CE04LW1C221M CE04LW1A470M CE04LW1C101M	CERAMIC 1000PF K ELECTR0 10UF 35WV ELECTR0 220UF 16WV ELECTR0 47UF 10WV ELECTR0 100UF 16WV		
C140 C141 C142 C144-147 C148		*	CE04LW1V100M CE04LW1A470M CE04LW1H100M CE04LW1C101M CE04LW1V100M	ELECTR0 10UF 35WV ELECTR0 47UF 10WV ELECTR0 10UF 50WV ELECTR0 100UF 16WV ELECTR0 10UF 35WV		
C149,150 C151 C152 C153 C154		*	CE04LW1A101M CK45FF1H103Z CE04LW1H010M CK45FF1H473Z CE04EW1H010M	ELECTR0 100UF 10WV CERAMIC 0.010UF Z ELECTR0 1.0UF 50WV CERAMIC 0.047UF Z ELECTR0 1.0UF 50WV		
C156 TC1 ,2			CK45FF1H473Z C05-0303-05	CERAMIC 0.047UF Z CERAMIC TRIMMER CAPACITOR(20PF)		
51 E1 E1 E3 E4	1C 2A 1C 1C 1C	*	E23-0149-05 E20-0231-05 E20-0438-15 E13-0621-05 E13-0446-05	TERMINAL SCREW TERMINAL BOARD(2P)ANT SCREW TERMINAL BOARD (ANT) PHONE JACK(6P) VIDEO,CD,PHONE PHONE JACK(4P) TAPE	XE KPM	
E5 E6	1C 1B		E20-0823-05 E11-0162-05	LOCK TERMINAL BOARD(8P) PHONE JACK(3P) PHONES		
△ F1 △ F1 △ F1 ,2	1B 1B 1B		F06-2021-05 F06-4024-05 F06-2027-05	FUSE (SEMK0) (250V T2A) FUSE (UL) (250V 4A) FUSE (UL) (250V 2A)	XE KP M	
55 55	1C 1C		J13-0041-05 J13-0054-05	FUSE CLIP FUSE CLIP	KPM XE	
CF1 ,2 CF1 ,2 CF3 CF4 L1			L72-0140-05 L72-0190-05 L72-0096-05 L72-0099-05 L40-1092-14	CERAMIC FILTER CERAMIC FILTER CERAMIC FILTER CERAMIC FILTER SMALL FIXED INDUCTOR(1.0UH,M)	KPM XE	
L2 L3 L4 L5 L6			L31-0509-05 L32-0277-15 L40-1021-14 L30-0439-15 L30-0362-05	MW-RF COIL MW OSCILLATING COIL SMALL FIXED INDUCTOR(1.0MH,K) FM IFT AM IFT		
L7 L8 L9 L10 ,11 X1			L79-0125-05 L40-1092-14 L79-0739-05 L39-0085-05 L77-0573-05	LC FILTER SMALL FIXED INDUCTOR(1.0UH,M) LC FILTER PHASE-COMPENSATION COIL CRYSTAL RESONATOR(4.5MHZ)	XE XE	
X2			L78-0202-05	RESONATOR (400KHZ)		
J	1B,1C		N09-0333-05	TAPPING SCREW (03X12)		

E: Scandinavia & Europe K: USA

P: Canada

U: PX(Far East, Hawaii)

T: England

M: Other Areas

UE: AAFES(Europe)

X: Australia

△ indicates safety critical components.

※ New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
CP1 ,2 R2 R10 R19 R22			R90-0187-05 RD14GB2E101J RD14GB2E100J RD14GB2E471J RD14GB2E101J	MULTI-COMP 0.22X2 K 5W FL-PROOF RD 100 J 1/4W FL-PROOF RD 10 J 1/4W FL-PROOF RD 470 J 1/4W FL-PROOF RD 100 J 1/4W	XE	
R33 R34 R43 R50 R113,114			RD14GB2E151J RD14GB2E101J RS14KB3A181J RD14GB2E101J RS14KB3A4R7J	FL-PROOF RD 150 J 1/4W FL-PROOF RD 100 J 1/4W FL-PROOF RS 180 J 1W FL-PROOF RD 100 J 1/4W FL-PROOF RS 4.7 J 1W		
R119,120 R121,122 R164 R165-167 R170		*	RD14GB2E100J RS14KB3A561J RS14KB3D180J RS14KB3D102J RD14GB2E821J	FL-PROOF RD 10 J 1/4W FL-PROOF RS 560 J 1W FL-PROOF RS 18 J 2W FL-PROOF RS 1.0K J 2W FL-PROOF RD 820 J 1/4W		
R173 R174 R175 R178 R179			RS14KB3A182J RD14GB2E470J RS14KB3A561J RS14KB3A222J RD14GB2E4R7J	FL-PROOF RS 1.8K J 1W FL-PROOF RD 47 J 1/4W FL-PROOF RS 560 J 1W FL-PROOF RS 2.2K J 1W FL-PROOF RD 4.7 J 1/4W		
R180 R181,182 R183 R184-188 VR1			RS14KB3D122J RD14GB2E221J R92-0173-05 RD14GB2E101J R12-3097-05	FL-PROOF RS 1.2K J 2W FL-PROOF RD 220 J 1/4W RC 2.2M M 1/2W FL-PROOF RD 100 J 1/4W TRIMMING POT. (22K)AM TUNE	KP	
VR2 VR3 VR4 VR5 VR6	2B 2B	*	R12-3096-05 R12-5047-05 R12-1069-05 RD6-5156-15 RD1-5041-05	TRIMMING POT. (10K)FM TUNE TRIMMING POT. (220K)FM SEPA TRIMMING POT. (4.7K)FM VCO POTENTIOMETER (100K) VOLUME POTENTIOMETER (200K) BALANCE	XE	
VR7 -10	1B	*	RD5-5013-05	POTENTIOMETER (BASS, TREBLE)		
S1 ,2 S3 S4 S5 S6	2C 2B 1B 2B 1C		S31-2072-05 S40-2351-05 S42-2155-05 S31-2113-05 S31-2115-05	SLIDE SWITCH (FM DE-EMPH, CH SP PUSH SWITCH (LOUDNESS) MULTIPLE PUSH SWITCH (SPEAKERS) SLIDE SWITCH (IMPEDANCE SEL) SLIDE SWITCH (VOLT SEL)	M M	
S7 -22 S24 -28	1B 1B		S40-1064-05 S40-1064-05	PUSH SWITCH (CH, TU, M, BAND) PUSH SWITCH (TAPE, VIDEO)		
D1 ,2 D1 ,2 D3 D4 ,5 D4 ,5			1SS133 1SS176 KV1236 (Z2) 1SS133 1SS176	DIODE DIODE VARIABLE CAPACITANCE DIODE DIODE DIODE		
D6 D6 D7 -27 D7 -27 D28			HZS5.1N (B2) RD5.1ES (B2) 1SS133 1SS176 HZS10N (B)	ZENER DIODE ZENER DIODE DIODE DIODE ZENER DIODE		
D28 D29 -39 D29 -39 D41 -43 D41 -43			RD10ES (B) 1SS133 1SS176 1SS133 1SS176	ZENER DIODE DIODE DIODE DIODE DIODE	MXE MXE	

E: Scandinavia & Europe K: USA

P: Canada

U: PX (Far East, Hawaii)

T: England

M: Other Areas

UE: AAFES (Europe)

X: Australia

△ indicates safety critical components.

✕ New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Telle ohne Parts No. werden nicht geliefert.

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕 向	Re- marks 備考
D41 ,42 D41 ,42 D49 D50 ,51 D50 ,51			1SS133 1SS176 RBV-402LFA HZS6. 2N(B2) RD6. 2ES(B2)	DIODE DIODE DIODE ZENER DIODE ZENER DIODE	KP KP	
D52 D52 D53 D53 D54			1SS133 1SS176 HZS15N(B) RD15ES(B) DSM1A1	DIODE DIODE ZENER DIODE ZENER DIODE DIODE		
D55 D55 D56 D56 D57			HZS24N(B) RD24ES(B) HZS6. 2N(B2) RD6. 2ES(B2) HZS5. 1N(B2)	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE		
D57 D58 -60 D58 -60 D61 D61			RD5. 1ES(B2) 1SS133 1SS176 HZS4. 7N(B) RD4. 7ES(B)	ZENER DIODE DIODE DIODE ZENER DIODE ZENER DIODE		
D62 ,63 D62 ,63 FL1 IC1 IC2	1B	*	1SS133 1SS176 FIPB8RM7A LA1265 CX7925B	DIODE DIODE FLUORESCENT INDICATOR TUBE IC(FM/AM TUNER) IC(FREQUENCY SYNTHESIZER PLL)		
IC3 IC4 IC4 IC5 IC6		*	AN7470 M5218P-A NJM4558D-A LC7820 UPD7538AC-041	IC(FM MPX) IC(OP AMP X2) IC(OP AMP X2) IC(ELECTRO CONTROL SWITCH) IC(MICROPROCESSOR)		
Q1 Q2 Q3 Q4 ,5 Q6			2SC1923(R,Q) 2SC945(A)(Q,P) 2SC1845(F,E) 2SC945(A)(Q,P) 2SA733(A)(Q,P)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	XE	
Q7 Q8 Q9 ,10 Q11 ,12 Q13 ,14			2SC945(A)(Q,P) 2SA733(A)(Q,P) 2SC3853 2SA1489 2SC1845(F,E)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		
Q15 -18 Q19 -21 Q19 -22 Q23 ,24 Q25			2SC2878 2SA733(A)(Q,P) 2SA733(A)(Q,P) 2SC945(A)(Q,P) 2SC2167	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	KPXE M	
Q26 Q27 Q28 Q29			2SC945(A)(Q,P) 2SC2003(L,K) 2SC945(A)(Q,P) 2SA954(L,K)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		
FRONT-END UNIT (X86-1040-11) K, P & M Type						
C1 C2 C3 C4 C5		*	CC41FSL1H060D C93-0012-05 CC41FSL1H100D C93-0012-05 CK41FB1H221K	CYLND CHIP C 6.0PF D CYLND CHIP C 0.01UF M CYLND CHIP C 10PF D CYLND CHIP C 0.01UF M CYLND CHIP C 220PF K		

E: Scandinavia & Europe K: USA P: Canada

U: PX(Far East, Hawaii) T: England M: Other Areas

UE: AAFES(Europe) X: Australia

 indicates safety critical components.

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
C6 C8 C9 C10 C11		*	CC41FSL1H070D CC41FSL1H020C CK41FB1H221K C93-0012-05 CC41FSL1H080D	CYLND CHIP C 7.0PF D CYLND CHIP C 2.0PF C CYLND CHIP C 220PF K CYLND CHIP C 0.01UF M CYLND CHIP C 8.0PF D		
C12 C14 C16 C17 C18		*	CC41FSL1H010C C93-0012-05 CC41FSL1H080D CC41FSL1H330J CC41FSL1H150J	CYLND CHIP C 1.0PF C CYLND CHIP C 0.01UF M CYLND CHIP C 8.0PF D CYLND CHIP C 33PF J CYLND CHIP C 15PF J		
C19 C20 C21 TC1		*	CC41FSL1H010C CK41FY1E102M CC41FSL1H470J C05-0302-05	CYLND CHIP C 1.0PF C CYLND CHIP C 1000PF M CYLND CHIP C 47PF J CERAMIC TRIMMER CAPACITOR(11PF		
L1 L2 L3 L4 L7		*	L31-0551-05 L31-0552-05 L31-0553-05 L40-1092-16 L32-0318-05	FM-RF COIL FM-RF COIL FM-RF COIL SMALL FIXED INDUCTOR(1UH,M) FM OSCILLATING COIL		
T1		*	L30-0427-15	FM IFT		
- R1 ,2 R3 R4 R5		*	R92-0338-05 RD41FB2B473J RD41FB2B470J RD41FB2B331J RD41FB2B101J	CYLND CHIP R 0 OHM CYLND CHIP R 47K J 1/8W CYLND CHIP R 47 J 1/8W CYLND CHIP R 330 J 1/8W CYLND CHIP R 100 J 1/8W		
R6 R9 R11 R14 R15 ,16			RD41FB2B473J RD41FB2B105J RD41FB2B101J RD41FB2B472J RD41FB2B223J	CYLND CHIP R 47K J 1/8W CYLND CHIP R 1.0M J 1/8W CYLND CHIP R 100 J 1/8W CYLND CHIP R 4.7K J 1/8W CYLND CHIP R 22K J 1/8W		
R17 R18 R19 ,20 R21			RD41FB2B222J RD41FB2B224J RD41FB2B101J RD41FB2B100J	CYLND CHIP R 2.2K J 1/8W CYLND CHIP R 220K J 1/8W CYLND CHIP R 100 J 1/8W CYLND CHIP R 10 J 1/8W		
D1 Q1 Q2 Q4 ,5		*	KV1310A-3 2SK302(Y,GR) 2SC2714(Ø) 2SC2714(R,Ø)	VARIABLE CAPACITANCE DIODE FET TRANSISTOR TRANSISTOR		
FRONT-END UNIT (X86-1052-71) X & E Type						
C1 C2 C3 C4 C5			CC41FSL1H060D C93-0012-05 CC41FSL1H100D C93-0012-05 CK41FB1H221K	CYLND CHIP C 6.0PF D CYLND CHIP C 0.01UF M CYLND CHIP C 10PF D CYLND CHIP C 0.01UF M CYLND CHIP C 220PF K		
C6 C7 C8 C9 C10			CC41FSL1H100D CC41FSL1H060D CC41FSL1H100D CK41FB1H221K C93-0012-05	CYLND CHIP C 10PF D CYLND CHIP C 6.0PF D CYLND CHIP C 10PF D CYLND CHIP C 220PF K CYLND CHIP C 0.01UF M		
C11 C12 C13 C14 C16		*	CK41FY1E102M CC41FSL1H030C CC41FSL1H100D C93-0012-05 CC41FSL1H080D	CYLND CHIP C 1000PF M CYLND CHIP C 3.0PF C CYLND CHIP C 10PF D CYLND CHIP C 0.01UF M CYLND CHIP C 8.0PF D		

E: Scandinavia & Europe K: USA

P: Canada

U: PX(Far East, Hawaii)

T: England

M: Other Areas

UE: AAFES(Europe)

X: Australia

△ indicates safety critical components.

※ New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
C17			CC41FSL1H330J	CYLND CHIP C 33PF J		
C18			CC41FSL1H150J	CYLND CHIP C 15PF J		
C19			CC41FSL1H010C	CYLND CHIP C 1.0PF C		
C20			CK41FY1E102M	CYLND CHIP C 1000PF M		
C21			CC41FSL1H470J	CYLND CHIP C 47PF J		
TC1			C05-0302-05	CERAMIC TRIMMER CAPACITOR(11PF		
L1			L31-0551-05	FM-RF COIL		
L2			L31-0552-05	FM-RF COIL		
L3			L31-0553-05	FM-RF COIL		
L4			L40-1092-16	SMALL FIXED INDUCTOR(1UH,M)		
L5		*	L31-0554-05	FM-RF COIL		
L7			L32-0318-05	FM OSCILLATING COIL		
T1			L30-0427-15	FM IFT		
-			R92-0338-05	CYLND CHIP R 0 OHM		
R1			RD41FB2B473J	CYLND CHIP R 47K J 1/8W		
R2			RD41FB2B104J	CYLND CHIP R 100K J 1/8W		
R3			RD41FB2B470J	CYLND CHIP R 47 J 1/8W		
R4			RD41FB2B331J	CYLND CHIP R 330 J 1/8W		
R5			RD41FB2B101J	CYLND CHIP R 100 J 1/8W		
R6 ,7			RD41FB2B473J	CYLND CHIP R 47K J 1/8W		
R8 ,9			RD41FB2B104J	CYLND CHIP R 100K J 1/8W		
R11			RD41FB2B101J	CYLND CHIP R 100 J 1/8W		
R12			RD41FB2B681J	CYLND CHIP R 680 J 1/8W		
R13			RD41FB2B104J	CYLND CHIP R 100K J 1/8W		
R14			RD41FB2B472J	CYLND CHIP R 4.7K J 1/8W		
R15 ,16			RD41FB2B223J	CYLND CHIP R 22K J 1/8W		
R17			RD41FB2B222J	CYLND CHIP R 2.2K J 1/8W		
R18			RD41FB2B224J	CYLND CHIP R 220K J 1/8W		
R19 ,20			RD41FB2B101J	CYLND CHIP R 100 J 1/8W		
R21			RD41FB2B100J	CYLND CHIP R 10 J 1/8W		
D1 -4			KV1310-4	VARIABLE CAPACITANCE DIODE		
Q1			2SK302(Y,GR)	FET		
Q2		*	3SK131(M,L)	FET		
Q3			2SK302(Y,GR)	FET		
Q4 ,5			2SC2714(R,B)	TRANSISTOR		

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

 indicates safety critical components.

SPECIFICATIONS

Audio Section

Power Output

40 watts per channel minimum RMS, both channel driven at 8 ohms from 40 Hz to 20,000 Hz with no more than 0.09% total harmonic distortion.

45 watts per channel minimum RMS, both channel driven at 8 ohms from 1 kHz with no more than 0.09% total harmonic distortion.

Total Harmonic Distortion

(40 Hz - 20,000 Hz, 8 ohms) 0.09% at 40 W
(1 kHz, 8 ohms) 0.01% at 40 W

Intermodulation Distortion..... 0.09% at 40 W

Input Sensitivity/Impedance

PHONO (MM)..... 2.5 mV/47 kohms

CD/AUX, TAPE, VIDEO..... 150 mV/47 kohms

Signal to Noise Ratio

PHONO (MM)..... 72 dB

CD/AUX, TAPE, VIDEO..... 95 dB

Frequency Response

PHONO

(RIAA Standard Curve)..... 20 Hz - 20 kHz, ± 0.5 dB

CD/AUX, TAPE, VIDEO..... 10 Hz - 70 kHz, +0, -3 dB

FM Tuner Section

Tuning Frequency Range..... 87.5 MHz - 108 MHz

Antenna Impedance..... 300 ohms balanced & 75 ohms unbalanced

Usable Sensitivity..... 11.2 dBf (2.0 μ V)

50 dB Quieting Sensitivity

MONO..... 17.2 dBf (4 μ V)

STEREO..... 38.2 dBf (45 μ V)

Signal to Noise Ratio at 65 dBf

Mono..... 76 dB

Stereo..... 72 dB

Total Harmonic Distortion at 1,000 Hz

Mono..... 0.2%

Stereo..... 0.3%

Frequency response..... 30 Hz to 15,000 Hz

+0.5 dB, -2.5 dB

Stereo Separation..... 40 dB at 1,000 Hz

Selectivity..... 53 dB at 400 kHz

Capture Ratio..... 1.2 dB

Image Rejection Ratio..... 40 dB

IF Rejection Ratio..... 86 dB

Spurious Rejection Ratio..... 80 dB

AM Suppression Ratio..... 57 dB

AM Tuner Section

Tuning Range

(530 kHz - 1,610 kHz) with the AM tuning interval set at 10 kHz

Usable Sensitivity..... 15 μ V (440 μ V/m)

Signal to Noise Ratio..... 50 dB

Selectivity..... 25 dB

General

Power Requirement..... 120V, 60 Hz

Power Consumption..... 2A... USA Model

AC Outlet..... Unswitched (200W)

Dimensions..... W: 420 mm (16-17/32")

H: 109 mm (4-19/64")

D: 236 mm (9-19/64")

Weight..... Net... 4.6 kg (10.1 lb)

Note:

We follow a policy of continuous advancements in development. For this reason specifications may be changed without notice.

Note

Component and circuitry are subject to modification to insure best operation under differing local conditions. This manual is based on the Europe (E) standard, and provides information on regional circuit modification through use of alternate schematic diagrams, and information on regional component variations through use of parts list.

KENWOOD CORPORATION

Shionogi Shibuya Building, 17-5, 2-chome Shibuya, Shibuya-ku, Tokyo 150, Japan

KENWOOD U.S.A. CORPORATION

2201 East Dominguez Street, Long Beach, CA 90810;

550 Clark Drive, Mount Olive, NJ 07828, U.S.A.

KENWOOD ELECTRONICS CANADA INC.

P.O. Box 1075 959 Gana Court, Mississauga, Ontario, Canada L4T 4C2

KENWOOD ELECTRONICS BENELUX N.V.

Mechelsesteenweg 418 B-1930 Zaventem, Belgium

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrücker-Str. 15, 6056 Heusenstamm, West Germany

TRIO-KENWOOD FRANCE S.A.

Hi-Fi·VIDEO·CAR Hi-Fi

13, Boulevard Ney, 75018 Paris, France

TRIO-KENWOOD U.K. LTD.

17 Bristol Road, The Metropolitan Centre, Greenford, Middx. UB6 8UP England

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD.

4E Woodcock Place, Lane Cove, N.S.W. 2066, Australia

KENWOOD & LEE ELECTRONICS, LTD.

Wang Kee Building, 5 th Floor, 34-37, Connaught Road, Central, Hong Kong