


AUDIO / VIDEO STEREO RECEIVER

KR-V9010

SERVICE MANUAL

KENWOOD

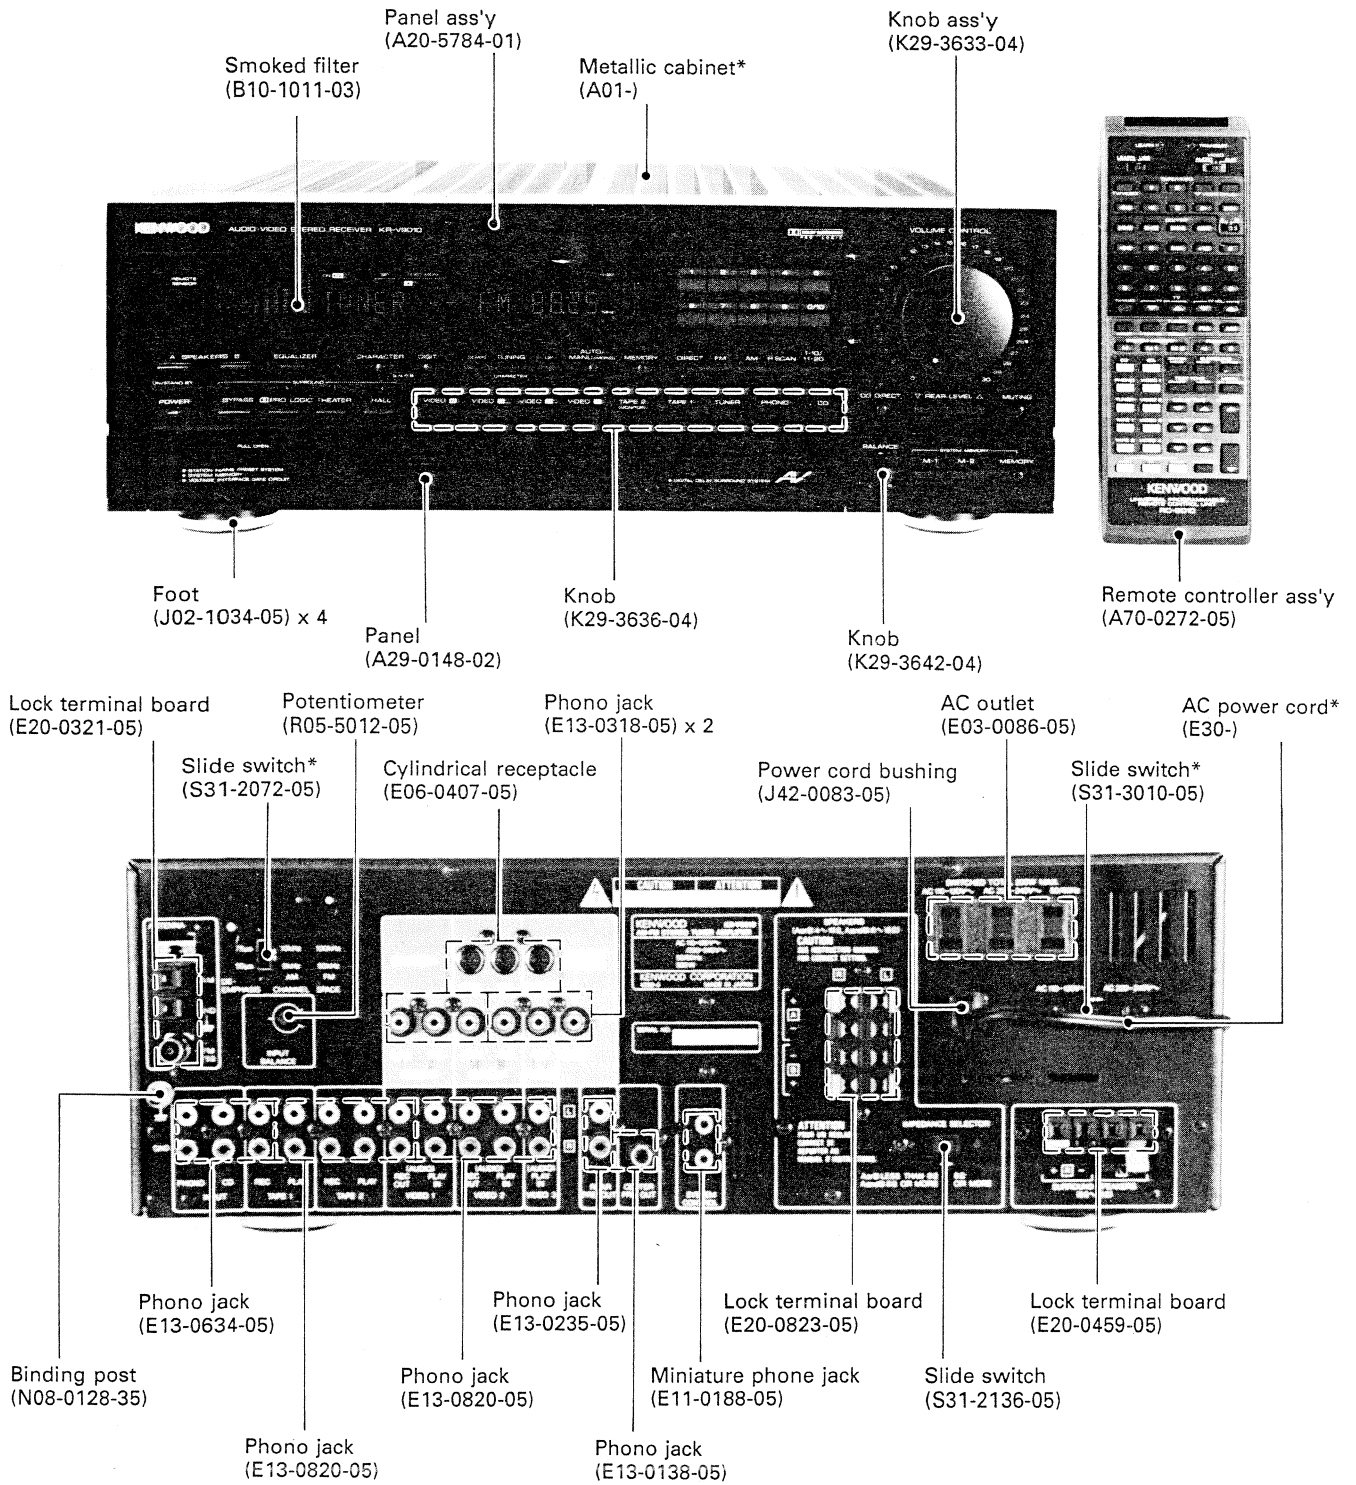

* Refer to parts list on page 95.

KR-V9010

CONTENTS


| | | | |
|---|-----------|--|-------------------|
| SYSTEM CONNECTION | 3 | 7. Compressor/Expander IC : | |
| SYSTEM CONTROL OPERATION | 6 | μPD1571C (X08- : IC6) | 42 |
| CONTROLS AND INDICATORS | 6 | 8. Digital delay : YM3428 (X08- : IC8) | 44 |
| OPERATING INSTRUCTIONS | 9 | 9. Dolby B type noise reduction : | |
| LISTENING TO BROADCASTS | 10 | LA2730 (X08- : IC9) | 46 |
| GRAPHIC EQUALIZER OPERATION | 12 | 10. Display controller CMOS LSI : | |
| PLAYING VIDEO SOURCES | 13 | MB88323A-K2 (X13- : IC5) | 47 |
| SURROUND EFFECTS | 14 | 11. PRO LOGIC IC : LA2770 (X08- : IC12) | 50 |
| SYSTEM MEMORY | 16 | ADJUSTMENT | 51 |
| ON-SCREEN DISPLAY | 16 | REGLAGE | 52 |
| REMOTE CONTROL OPERATION | 17 | ABGLEICH | 53 |
| DISASSEMBLY FOR REPAIR | 21 | ADJUSTMENT / REGLAGE / ABGLEICH | 54 |
| BLOCK DIAGRAM | 25 | PERSPECTIVE OF PC BOARDS | 55 |
| CIRCUIT DESCRIPTION | | VOLTAGE TABLE | 55 |
| 1. Description of components | 27 | PC BOARD (COMPONENT SIDE VIEW) (1/3) | 57 |
| 2. Microprocessor peripheral block diagram . | 30 | PC BOARD (FOIL SIDE VIEW) (1/3) | 61 |
| 3. Main microprocessor : | | PC BOARD (COMPONENT SIDE VIEW) (2/3) | 65 |
| μPD75116CW-074 (X14- : IC1) | 31 | PC BOARD (FOIL SIDE VIEW) (2/3) | 69 |
| 4. Sub microprocessor (1) : | | PC BOARD (COMPONENT SIDE VIEW) (3/3) | 73 |
| μPD7537ACU-220 (X14- : IC2) | 37 | PC BOARD (FOIL SIDE VIEW) (3/3) | 75 |
| 5. Sub microprocessor (2) : | | SCHEMATIC DIAGRAM | 77 |
| μPD7537ACU-220 (X14- IC3) | 39 | EXPLODED VIEW | 93 |
| 6. Test mode | 41 | PARTS LIST | 95 |
| | | SPECIFICATIONS | BACK COVER |

| Unit name | Japan made | Singapore made |
|---------------|--|--|
| Tuner unit | X05-3810-10 : K,P X05-3810-81 : U,UE | X05-3530-11 : K,P X05-3530-82 : U,UE |
| Pre amp unit | X08-2330-10 : K X08-2331-01 : P X08-2330-81 : U,UE | X08-2300-10 : K X08-2301-01 : P X08-2300-81 : U,UE |
| Audio unit | X09-2850-10 : K,U,UE X09-2851-01 : P | X09-2930-10 : K,U,UE X09-2931-01 : P |
| Sub unit | X13-6370-10 : K,P,U,UE | X13-6250-10 : k,P,U,UE |
| Display unit | X14-2560-10 : K,P,U,UE | X14-2700-10 : K,P,U,UE |
| Main amp unit | X89-1090-10 : K,U,UE X89-1091-01 : P | X89-1100-10 : K,U,UE X89-1101-01 : P |


System connections

Make connections as shown in the diagram below.
When connecting the related system components, refer also to the instruction manuals of the related components.

Connection of audio components

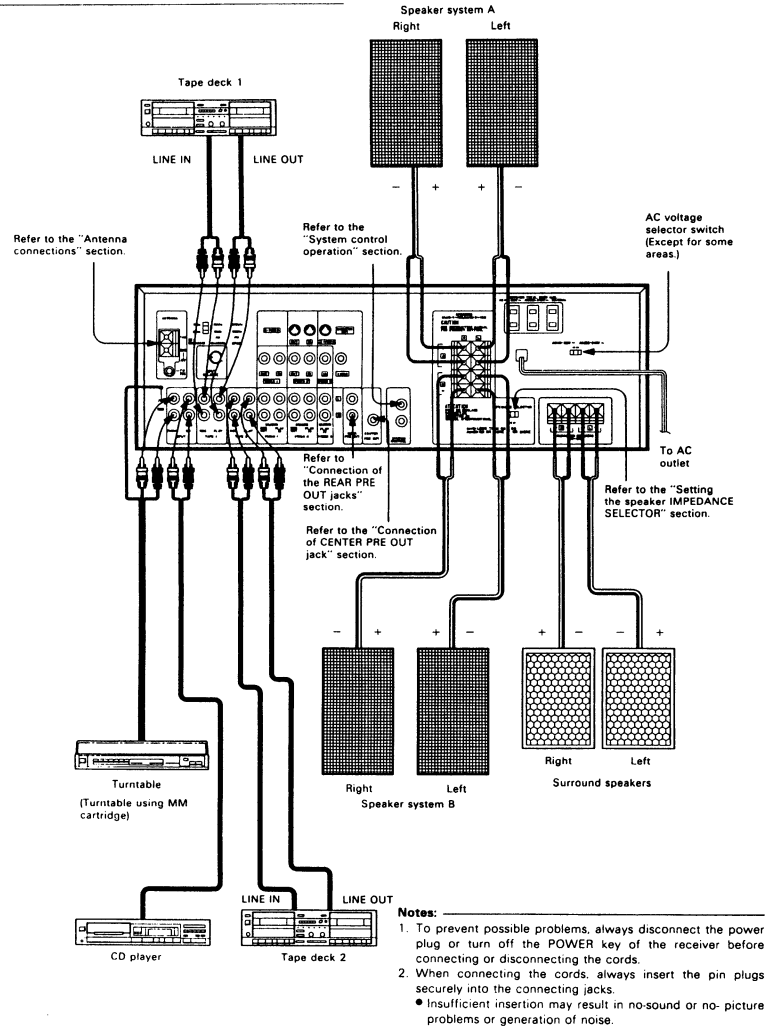

Connection of video components

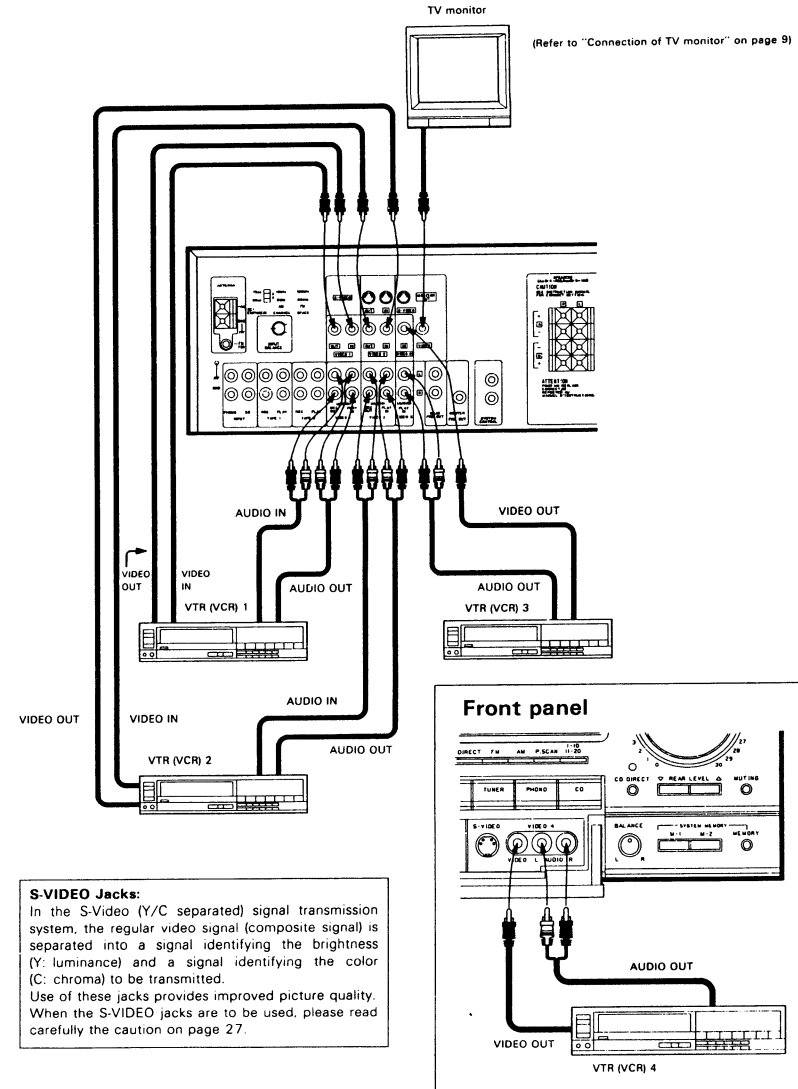


SYSTEM CONNECTIONS

KR-V9010

System connections

Speaker connections

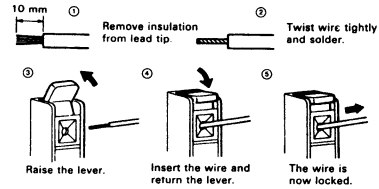


Speaker lead connection

When using the speaker A or speaker B separately

| Speaker impedance | Selector position |
|-------------------|---|
| 4Ω, 6Ω | A or B: LESS THAN 8Ω <input type="checkbox"/> |
| 8Ω, 16Ω | 8Ω OR MORE <input type="checkbox"/> |

When using the speakers A and B simultaneously

| Speaker impedance | Selector position |
|-------------------|--|
| 8Ω, 16Ω | A and B: 8Ω OR MORE <input type="checkbox"/> |

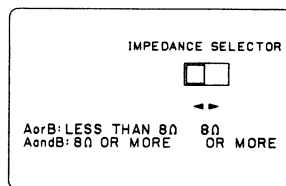

WARNING

Particular attention must be given to making good electrical contact at the receiver output and speaker terminals. Poor or loose connections can cause sparking or burning at the terminals because of the very high power that the receiver can deliver. Follow these steps carefully.

■ Connecting the front speakers

Connect speakers rated at 4 ohm or more to the SPEAKERS terminals.

1. Connect the left speaker to the L speaker terminals on the rear of the receiver and the right speaker to the R terminals.
2. Connect each cable as shown in the illustration, taking care that the wires do not make contact with other terminals.

Notes:

1. Take care so as not to short the positive (+) and negative (-) speaker cords.
2. If the left and right speakers, or positive and negative cables, are connected the wrong way, the reproduced sound may be unclear, with ambiguous location of the musical instruments etc. To avoid this, pay attention to the left and right and positive and negative indications when connecting the speakers.

■ Setting the speaker IMPEDANCE SELECTOR

When connecting the speakers to the speaker terminals, set the IMPEDANCE SELECTOR switch according to the table on the left.

- When the IMPEDANCE SELECTOR switch is set to "8Ω OR MORE", it is impossible to use the A and B speakers at the same time. Therefore, when using the speakers A and B simultaneously, be sure to set the IMPEDANCE SELECTOR switch to the "A and B: 8Ω OR MORE" position.

Notes:

1. During speaker system connection and operation of the speaker IMPEDANCE SELECTOR, set the POWER key to OFF.
2. Check that the connected lead wires of the speaker systems do not contact with other jacks or terminals.

■ SURROUND SPEAKER terminals

Connect speakers having an impedance of between 8 ohms and 16 ohms, and place them to the left and right behind the listening position.

■ Connection of the REAR PRE OUT jacks

The Surround sound can be enjoyed sufficiently with the built-in amplifier. However when more power is required for Surround sound, use these jacks for an amplifier to drive the Surround Speakers. Connect these jacks to the AUX jacks, etc. of the amplifier for Surround Speakers, using the audio connection cord.

■ Connection of CENTER PRE OUT jack

Use this jack when the Dolby Pro-Logic Surround function is used. Connect to an AUX jack, etc. of your amplifier using an audio connection cord.

■ Connection of TV monitor


Connect the MONITOR OUT jack on the rear panel of this unit to the video input jack of your monitor TV using a video cord with RCA pin jacks. When a TV monitor equipped with an S-VIDEO jack is used, connect the S-VIDEO jack of this unit to the S-VIDEO jack of the TV monitor using a special S-Video connection cord.

Note:

A TV monitor can be connected to this unit via both the S-VIDEO jack and the VIDEO jack. With some TV monitors, when the S-VIDEO jack is used, the input signal to the TV monitor is automatically switched to the S-Video input. Since on-screen display is not possible if this occurs, disconnect the S-VIDEO jack and only use the VIDEO input (composite input) when the on-screen display is required. When the signal is input via one of the unit's VIDEO input jacks, no signal is output from the MONITOR OUT S-VIDEO jack.

■ Connection of VCRs

- S-VIDEO jacks are also available for connection of VIDEO 2 inputs/outputs and VIDEO 4 inputs.

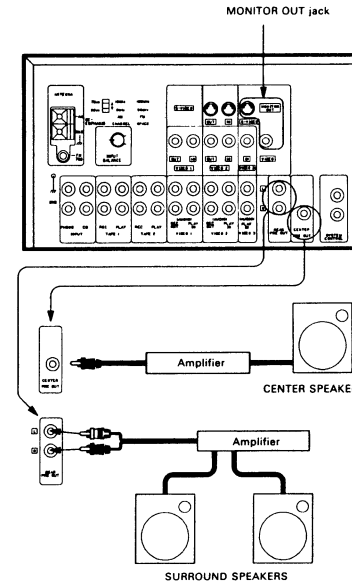

■ AC outlets

The AC outlets on the rear panel may be used to supply power to other components in the system, such as turntables, tape decks, etc. Never connect equipment whose power consumption exceeds the maximum value shown at each outlet.

SWITCHED outlets:


These outlets supply power only when the unit is turned on. The maximum total capacity is 200 watts.

■ Ground

For maximum safety and minimum interference connect the GND terminal to a good earth ground if practicable. A good earth ground is a cold water pipe or a metal stake driven into moist earth. However, never use a gas pipe for this purpose.

System connections

Antenna connections

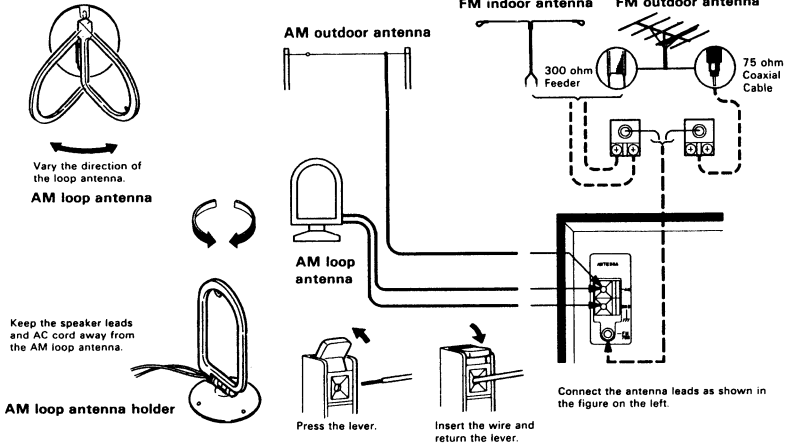

■ **AM antennas**

AM loop antenna

Attach the AM loop antenna to the supplied loop antenna stand and place it on a shelf, etc., or install it on the rack or wall with screws. Rotate the AM loop antenna to the right or left for best reception.

Note:
Do not place the AM loop antenna directly on the unit. As this unit employs computing devices, placing the AM loop antenna on the unit may result in noise generation. Place the AM loop antenna away from the unit.

AM outdoor antenna


In steel buildings or at a great distance from the transmitter, it may be necessary to install an outside long wire antenna. The end of this wire should be stripped of insulation and connected to the AM terminal. At this time, keep the loop antenna connected.

■ **FM antennas**


FM indoor antenna

Connect the T-shaped indoor antenna (supplied) to the 75 ohm FM ANTENNA terminal with the 75 ohm/300 ohm antenna adaptor as shown in the Antenna connections diagram. Spread the two arms of the "T" horizontally and hold them against convenient wall surfaces. Try several locations for best results with your favorite stations. Tape the antenna in place where the best compromise is found between listening results and appearance.

Connection of the 75 ohm/300 ohm antenna adaptor



Loosen the screws with a screwdriver. Insert the antenna feeder under the screw heads and tighten the screws firmly.

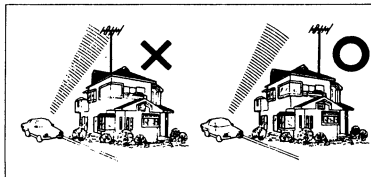

- To minimize auto-ignition noise, locate the antenna as far from heavy traffic as possible.
- Keep the feeder or coaxial cable as short as possible. Do not bundle or roll up excess cable.
- The antenna should be at least two meters (6.6 feet) from reinforced concrete walls or metal structures.


FM outdoor antenna setting

FM outdoor antenna

Be sure to use an outdoor FM antenna to receive good sound quality FM broadcasts with a minimum of noise. When connecting an outdoor antenna to the antenna terminals of this unit, use a 75 ohm/300 ohm antenna adaptor connected to the coaxial cable as illustrated. The 75 ohm/300 ohm antenna adaptor is supplied with this unit. Be sure to connect the coaxial cable to the adaptor as instructed below.


Note:
An FM outdoor antenna can be connected to the receiver with either a 75 ohm coaxial cable or a 300 ohm ribbon feeder. For proper connection, carefully read the instruction manual provided with outdoor antenna.

■ **75 ohm coaxial cable connection (Follow the order of numbers.)**

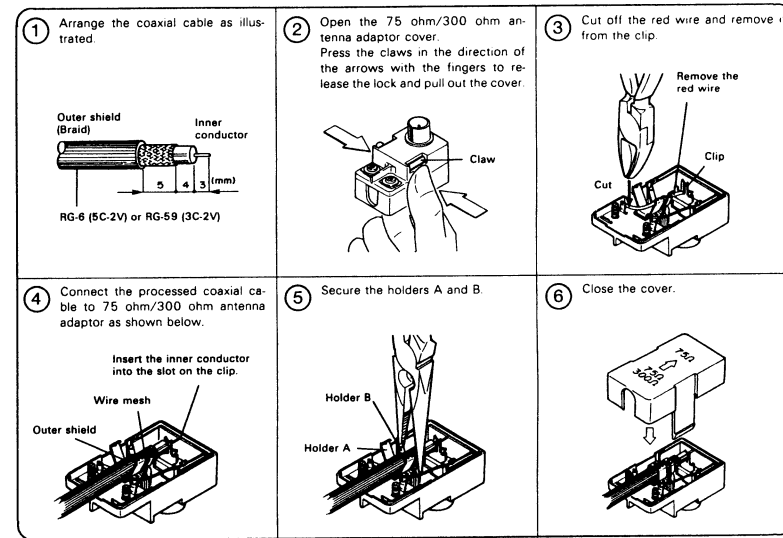

| Area | Channel Space Freq. | FM DE-EMPHASIS |
|--|---------------------|----------------|
| 1. U.S.A., Canada, Hawaii and Guam | FM: 100 kHz | 75 μs |
| | AM: 10 kHz | |
| 2. European countries and Far East countries | FM: 50 kHz | 50 μs |
| | AM: 9 kHz | |

FM DE-EMPHASIS/CHANNEL SPACE table



■ **FM DE-EMPHASIS/CHANNEL SPACE switch (Except for some areas.)**

The FM DE-EMPHASIS/CHANNEL SPACE switch on the rear panel is set to the correct setting that prevails in the area to which the unit is shipped. However, if the FM DE-EMPHASIS/CHANNEL SPACE setting is not matched to the area where the unit is to be used (for instance, if you move from area 1 to area 2 or vice versa), desired reception of AM/FM broadcasts cannot be expected. In this case, change the FM DE-EMPHASIS/CHANNEL SPACE setting in accordance with the area corresponding to the table on the left. The FM DE-EMPHASIS setting is switched over at the same time.

Note:
When changing the setting of the FM DE-EMPHASIS/CHANNEL SPACE switch, first disconnect the power cord, then reset the channel space switch, connect the power cord again, and turn the power on.


SYSTEM CONNECTIONS

KR-V9010

System control operation

Connection

Using the system control cords provided with KENWOOD system component models, make connections as shown below.

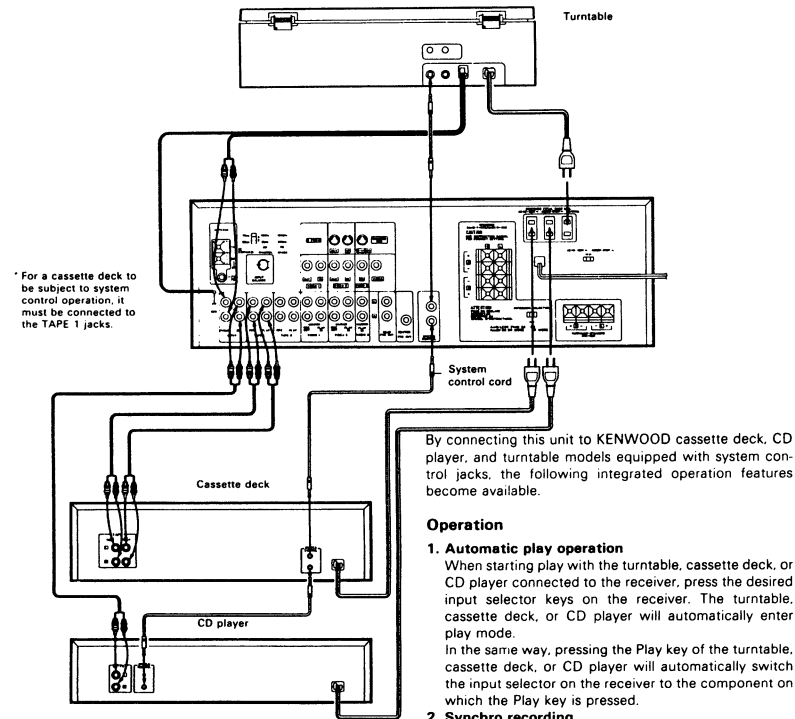

* For a cassette deck to be subject to system control operation, it must be connected to the TAPE 1 jacks.

By connecting this unit to KENWOOD cassette deck, CD player, and turntable models equipped with system control jacks, the following integrated operation features become available.

Operation

1. Automatic play operation

When starting play with the turntable, cassette deck, or CD player connected to the receiver, press the desired input selector keys on the receiver. The turntable, cassette deck, or CD player will automatically enter play mode.

In the same way, pressing the Play key of the turntable, cassette deck, or CD player will automatically switch the input selector on the receiver to the component on which the Play key is pressed.

2. Synchro recording

To record the sound from the CD player or turntable onto a tape with the cassette deck, press the CD or PHONO of the input selector keys and load a CD or record. Set the cassette deck to rec pause mode, then press the PLAY (START) key of the CD player or turntable. The cassette deck will start recording automatically, synchronized with the CD player or turntable starting play.

3. Remote control

The remote control unit provided with this unit, to which a KENWOOD system turntable, cassette deck, or CD player is connected, is equipped with related control keys. The related components can be controlled using these keys.

Note:

During recording with a cassette deck, the input selector on the receiver is fixed at the source from which the recording is made, by the system control circuit. At this time, pressing any of the input selector keys has no effect.

■ Connection of the audio cords and system control cord

Make sure that the audio cords are connected correctly right and left as in the figure.


If the system control cord and audio cords are not connected properly, the automatic system governing remote control and system functions will not operate.

(For connections of the audio cords, refer to the "System connections" diagram.)



Controls and indicators

Display section

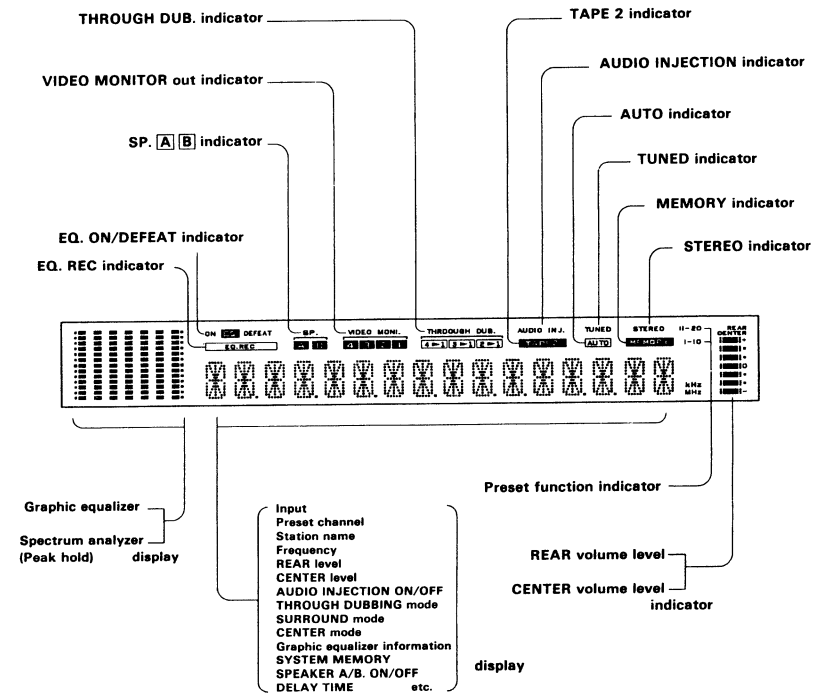

REMOTE SENSOR

Point the supplied remote control unit towards this sensor and operate.

SPEAKERS A and B keys

Selects the speaker system to be used for listening. The speaker system being used is shown on the display.

POWER key

Switches the power ON/STANDBY.

Power stand-by indicator

This indicator lights if the power cord is plugged into the AC outlet. It is lit to show that the POWER key on the front panel or the POWER key on the remote control unit can be activated.

PHONES jack

This jack accepts the standard stereo headphone plug. When you wish to listen through headphones alone, set the SPEAKERS keys (A and B) both to the OFF position.

EQUALIZER LEVEL control keys

Adjust these keys up and down to equalize the sound level of the indicated frequencies with in a range of ± 12 dB.

EQUALIZER FREQUENCY keys

These keys are used to select the equalizing frequency among 60 Hz, 150 Hz, 400 Hz, 1 kHz, 2.4 kHz, 6 kHz, and 15 kHz.


Equalizer preset MEMO. key

This key is used to store an equalizer pattern in the PGM PRESET memory.

EQUALIZER key

Press this key to ON and the frequency characteristics of the sound will be modified by the graphic equalizer. In the DEFEAT position, the frequency characteristics remain unchanged.

Display section

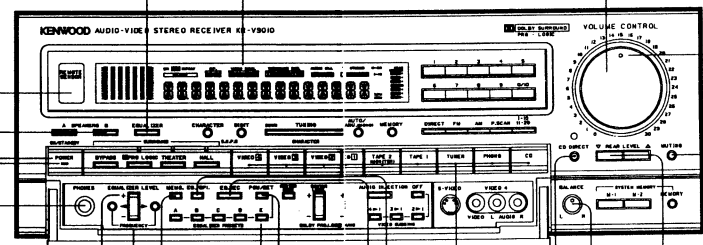

EQUALIZER PRESETS (A ~ E) keys

Use these keys to store equalizer patterns in memory or to recall them.

Equalizer preset mode key (PGM/SET)

Each time this key is pressed, the recall mode of the equalizer preset patterns alternates between PGM (user programmed patterns) and SET (factory preset patterns).

Input selector keys

Select the input source.



EQ./SPI key

Pressing this key alternates the display mode between EQ. (graphic equalizer) and SPI (spectrum peak indicator).

EQ. REC key

Used when recording a source to a tape deck through the graphic equalizer.

How to open the door

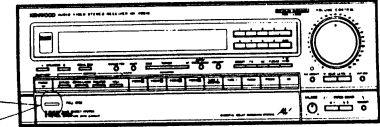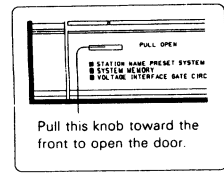

VOLUME CONTROL knob

This control adjusts the left- and right-channel volume levels simultaneously. Set it for the desired listening level.

Point indicator

This indicator blinks when the power is turned ON, muting is activated and when the volume control is adjusted with the remote control.

MUTING key

When the muting key is pressed, the point indicator in the VOLUME CONTROL knob blinks, and the overall listening sound level is reduced. When the key is pressed again, the listening level is restored to same level as before.

REAR LEVEL control keys

Adjusts front/rear balancing when surround speakers are used. The control range is +20, -50 dB of the front speaker level.

BALANCE control knob

Adjust the left and right volume balance.

CONTROLS AND INDICATORS

KR-V9010

Controls and indicators

TUNING/CHARACTER keys

Used to change the frequency. Pressing the UP side will advance to a higher frequency and pressing the DOWN side will move to a lower frequency. In the station name input mode, this key is used to select the characters.

AUTO/MANU. (MONO) key

Press this key to select the tuning mode between AUTO or MANUAL. In MANUAL mode, FM stereo broadcasts are received in monaural.

Numeric (1 ~ 0/10) keys

Use these keys to:
1) input directly the digits of frequencies, or
2) store and recall frequencies in the preset channels.

MEMORY key

When this key is pressed, the MEMORY indicator lights and the unit stands by for entry of a preset station number.

DIRECT key

Used to tune to a station directly. Input the desired frequency with the numeric keys after pressing the DIRECT key.

Band selector (AM, FM) keys

Press to select the receiving band.

Preset function (1-10/11-20) key

Used to select the 1-10 or 11-20 preset channel setting. In either FM or AM mode, 20 stations can be preset at random as each setting ("1-10" or "11-20") can contain 10 preset stations. Indicator "1-10" lights when the "1-10" setting is used, and indicator "11-20" lights when the "11-20" setting is used.

PRESET SCAN key


Use this key for preset channel scanning. When a frequency stored in the preset memory is being received, pressing this key shifts reception to the next frequency stored in the preset memory.

System MEMORY key

This key is used to store the current playing condition in memory.

SYSTEM MEMORY channel keys (M-1/M-2)

Two memory groups can be used with the System Memory feature.

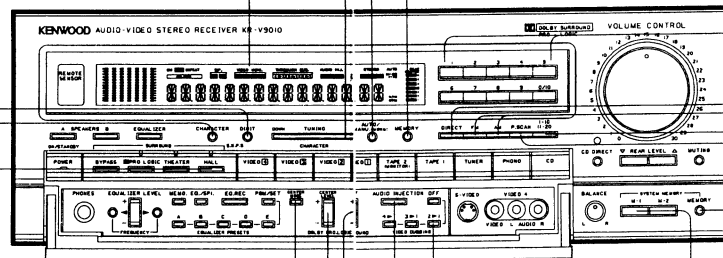

Display section

DIGIT key

In the station name input mode, pressing this key advances the column after a character is selected with the TUNING/CHARACTER UP/DOWN key. When this operation is repeated four times the station name input mode is automatically released.

CHARACTER key

Press this key to activate the station name input mode.

CENTER MODE key

This key is used to select the CENTER MODE for the DOLBY PRO-LOGIC SURROUND mode. Each time this key is pressed, the CENTER MODE changes in the following order:

→ NORMAL → WIDE → PHANTOM
← CENTER OFF ←

CENTER LEVEL keys

These keys are used to adjust the CENTER LEVEL in the NORMAL or WIDE mode of DOLBY PRO-LOGIC function. The output level of the center speaker can be increased or decreased between +20 dB and -50 dB around the front speaker level.

VIDEO DUBBING keys

Press any of these keys when dubbing the video program source regardless of the input source selected by the input selector key.


AUDIO INJECTION key

Press this key ON when it is necessary to replace the sound of VCR with that of an AUDIO source during video dubbing.

DELAY TIME keys

With the SURROUND mode activated, select the required delay time using these keys.


Operating instructions

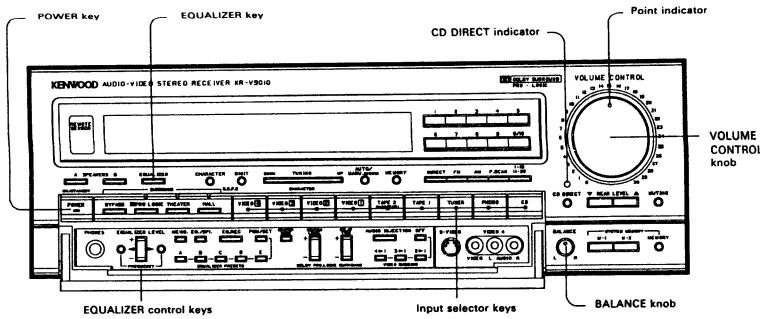


POWER switch stand-by
 A small amount of current is retained to support the memory and remote control sensor function when the POWER is switched OFF. This is known as the standby mode. POWER may be switched ON/OFF by the remote control unit.
 The standby indicator on the front panel remains lit while the power plug of the receiver is connected to the AC outlet.
 If this set is not used for a long time, the power cord should be disconnected from the AC outlet.

To mute the sound temporarily
Press the MUTE key.
 • The point indicator blinks, and the output is muted.
 • When the MUTE key is pressed again, the muting is canceled, the point indicator lights steadily and the previous output level is resumed.
 The mute mode can also be released by changing the output level using the remote control unit.
 • The point indicator also blinks (for approx. 4 seconds) when the muting functions is engaged immediately after the power is turned ON.

- Basic operation**
- Press the POWER key to ON.
 - The display lights and the unit becomes operative.
 - Pressing the key again switches the power OFF.
 - Press one of the input selector keys to select the input source to be played.
 - If a System Control cord has been connected to the selected source component, it starts play automatically due the Automatic Play operation feature.
 - With the Automatic Play operation feature, when one of the source components is started to be played, the corresponding input selector is automatically switched for the source.
 - The selected input source is shown on the display.
 - If automatic play operation using the System Control cords has not been set, start playing the source component selected.
 - Adjust the output level with the VOLUME CONTROL knob.
 - When one of the VOLUME CONTROL keys on the remote control unit is pressed, the point indicator blinks and the VOLUME CONTROL knob is rotated.
 - Adjust the balance of the left and right output levels with the BALANCE knob.
 - Adjust the tone referring to the description in the "Graphic equalizer" section.
 - The graphic equalizer effect can be switched ON/DEFEAT by pressing the EQUALIZER key.
- Notes:**
- The CD DIRECT key should usually be set to OFF (with the indicator not lit).
 - When the TAPE-2 selector switch is set to ON, the input source selected with the input selector keys cannot be heard from the speakers. To listen to a source other than tape deck 2, be sure to set the TAPE-2 selector key to OFF.

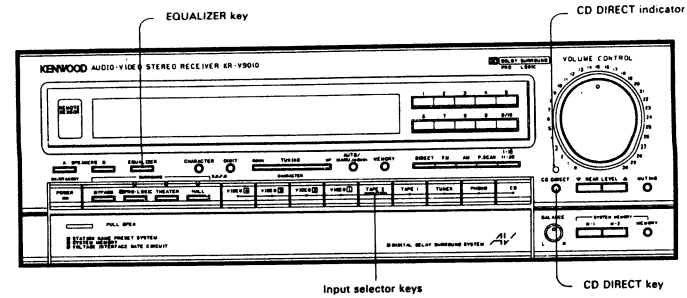

- Operations using CD DIRECT key**
- To enjoy more pure and high-quality sound of Compact Discs:**
- Press the CD key
 - Press the CD DIRECT key.




- Play the CD player.
 - The CD DIRECT key is given priority over the setting of the input selector keys.
 - The graphic equalizer cannot be used while the CD DIRECT key is ON.
 - To cancel the CD DIRECT input, press the CD DIRECT key again or press one of the input selector keys (except CD and TAPE 2 keys). The input will be switched to the source indicated on the display.
- Note:**
 When the CD DIRECT key is pressed in one of the Surround modes (PRO-LOGIC, THEATER or HALL SURROUND), the unit enters the Bypass mode.

- To record an input source**
- Select the source to be recorded with the input selector keys.
 - Play the source.
 - Set tape deck 1 and/or tape deck 2 to record mode.
- Note:**
 When a tape deck is connected to this unit with a System Control cord, all of the input selector keys are disabled during recording and do not function until recording is finished. This will prevent the recording from being interrupted.
- Tape dubbing**
 Tape recordings may be duplicated (dubbed) easily using two tape decks connected to the TAPE 1 and 2 jacks.
- For example:
 (TAPE 1 to 2):
- Connect two tape decks to the TAPE 1 and TAPE 2 jacks.
 - Press the TAPE 1 key.
 - Play back the recorded tape and adjust the recording levels before starting tape dubbing.
- (TAPE 2 to 1):
- Press the TAPE 2 key.
 - Press a key other than TAPE 1 of the input selector keys such as CD.
 - Play back the recorded tape and adjust the recording levels before starting tape dubbing.
 - Do not press the TAPE 1 key during recording with tape deck 1.
- Note:**
 Adjust recording levels on the deck that is making the copy using that deck's operating controls.

OPERATING INSTRUCTIONS

KR-V9010

Listening to broadcasts

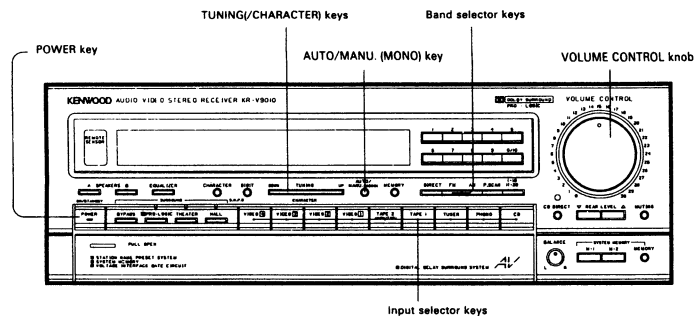

■ To listen to radio broadcasts

1. Press the POWER key to ON.
 2. Press the TUNER input selector key.
 3. Press the AM or FM band selector key.
 4. Tune in the desired broadcasting station according to the instructions in the "Tuning methods" section below.
 5. When the desired station is received, adjust the volume with the VOLUME CONTROL knob.
- During tuning, sound is not heard because the muting circuit is activated. The sound will be heard suddenly as soon as a station is received, so be careful in setting the sound volume level.

■ Tuning methods

Auto tuning


When the TUNING key is pressed, broadcast frequencies are scanned automatically in the upward or downward direction until a station is located and tuned in. The stereo/monaural FM reception mode is set automatically according to the station.

1. Press the AUTO/MANU. (MONO) key so that the AUTO indicator lights.
2. Press the UP or DOWN segment of the TUNING key.
 - Pressing the UP segment scans broadcast frequencies by varying the displayed frequencies in the upward direction, and pressing the DOWN segment scans by varying the frequencies in the downward direction.
 - When a broadcasting station is received, the frequency display freezes and indicates the frequency of the received station.
3. If the received station is not the desired station, press the same segment of the TUNING key again.
 - Repeat this until the desired station is received.

Manual tuning

Stations with weak signal strength cannot be received by auto tuning. In such cases, tune in the desired station by manual tuning. The station will be received in monaural mode (monaural mode is resistant to noise).

1. Press the AUTO/MANU. (MONO) key so that the AUTO indicator is off.
2. Press the UP or DOWN segment of the TUNING key.
 - Every time the TUNING key is pressed, the displayed frequency varies by one step in the direction indicated by the pressed segment.
 - Holding the TUNING key depressed varies the displayed frequency continuously.
3. When the frequency of the desired station is tuned in, release the TUNING key.
 - Noise may be heard if the tuned frequency is not precisely the same as the frequency of the station. In such cases, press the UP or DOWN segment of the TUNING key to adjust the tuning precisely.

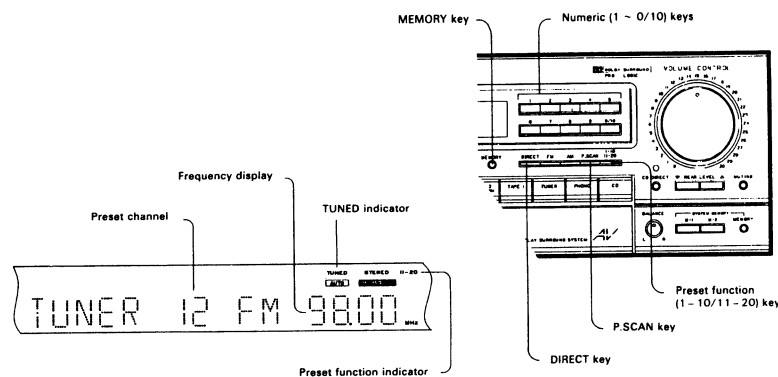

Direct tuning

This method allows the desired frequency to be entered directly using the numeric keys, without using the TUNING key.

1. Press the DIRECT key.
2. Enter the frequency of the desired station with the numeric keys.
 - When all of the digits of the frequency have been entered, the station is automatically received.
 - If the entered frequency is not in the receivable frequency range, message "CAN NOT TUNE" is displayed for 5 seconds, and the last station received is received again.

■ Preset tuning

By storing the frequencies of broadcasting stations in the preset channels according to the instructions in the "To preset station frequencies" section, any of the preset stations can be received by one-touch operation.

1. Press the preset function key to select "1 - 10" or "11 - 20".
2. Press the numeric key corresponding to the preset channel of the desired station.
 - The display shows the frequency of that station, and the station is received.

■ Preset Scan

This function allows the preset stations stored in the preset channels to be received in sequence for 5 seconds each.


1. Press the P.SCAN key.
 - The frequency of each preset station is received for 5 seconds in sequence. A preset channel in which no station has been preset is skipped, and the scan operation moves to the next preset channel.
2. To stop Preset Scan, press the P.SCAN key again.
 - The preset station being received when the key is pressed is received continuously.

■ To preset station frequencies

1. Press the band selector key for the desired band (FM or AM).
2. Tune in the desired station following the instructions in the "Tuning methods" section.
3. Press the preset function key to select the 1 - 10 or 11 - 20 preset channel range.
4. Press the MEMORY key.
 - The MEMORY indicator on the display lights.
5. Within 5 seconds after pressing the MEMORY key, press the numeric key (1 to 0/10) corresponding to the preset channel in which the frequency is to be stored.
 - If a frequency has already been stored under the selected preset channel, the previously-stored frequency will be replaced by the new frequency.
6. Preset all desired frequencies by repeating steps 1 to 5 above.
 - When preset channels 1 to 10 have become full, press the preset function (1 - 10/11 - 20) key again to select the 11 - 20 range.


Listening to broadcasts

This unit allows both the frequencies and the names of broadcasting stations to be preset. When a station is recalled by preset tuning, the display shows both the frequency and the name of the station. (S.N.P.S.)





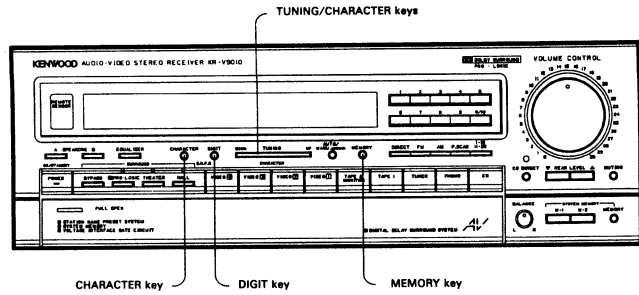


Selection of display characters with the TUNING/CHARACTER key

Every time the UP segment of the TUNING/CHARACTER key is pressed, the displayed character is varied in the following order:




(Pressing the DOWN segment varies the displayed character in the reverse order.)



To preset station names and frequencies








Example 1: To preset the 91.50 MHz FM broadcast frequency and its station name "WNY" in preset channel number 2.

1. Tune to 91.50 MHz FM.
2. Press the CHARACTER key.
3. Press the TUNING/CHARACTER key to select "W".
4. Press the DIGIT key to set the character and move to the next location.
5. Press the TUNING/CHARACTER key to select "N".
6. Press the DIGIT key.
7. Press the TUNING/CHARACTER key to select "Y".
8. Since the fourth column should be left blank, press the DIGIT key twice or press the CHARACTER key.
9. Press the MEMORY key.
10. Press numeric key "2" to select preset channel 2.

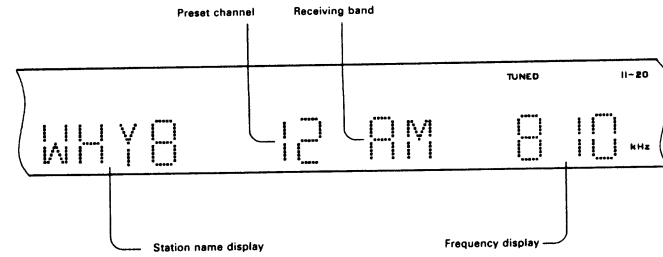

To change a preset station name

Example 2: To change the name of the 810 kHz AM broadcasting station stored in preset channel number 12 from "WHY8" to "WGY".





1. Recall preset channel number 12 with the preset function key and numeric key "2" according to the instructions in the "Preset tuning" section.
2. Press the CHARACTER key.
3. Press the DIGIT key to move to the first character location to be changed.
4. Press the TUNING/CHARACTER key to select "G".
5. Press the DIGIT key twice.
6. Press the TUNING/CHARACTER key to select a blank.
7. Press the DIGIT key or the CHARACTER key.
8. Press the MEMORY key.
9. Press numeric key "2" to select preset channel number 12.

LISTENING TO BROADCASTS


KR-V9010

Graphic equalizer operation

This unit incorporates a high-performance 7-band stereo graphic equalizer. The graphic equalizer is equipped with memory for storing equalizer patterns created by the user, as well as for storing factory-preset patterns which can be recalled easily to provide equalizing effects suitable for various types of music.

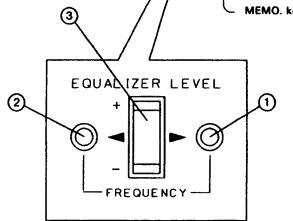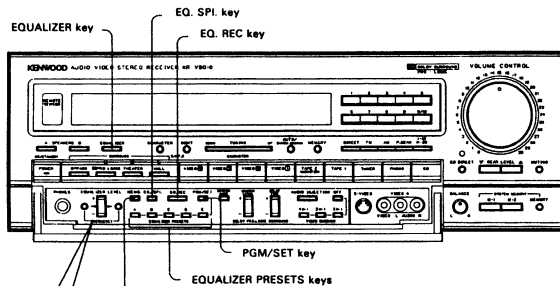

EQUALIZER control keys
(Press the FREQUENCY keys ①, ② to select the frequency to be equalized.)



Sequential change of equalizer frequency

■ To listen music processed by the graphic equalizer


- Press the EQUALIZER key.
 - The [ON EQ] indicator lights.
- Press the FREQUENCY ① or ② key shown in the figure on the left to select the required frequency to be equalized.
 - The frequency selected will appear in the display for 5 seconds.
 - The "....." indication on the graphic equalizer display blinks.
 - Each time the FREQUENCY ① or ② key is pressed, the frequency is changed sequentially as shown in the table on the left.
- Press the EQUALIZER LEVEL key ③ shown in the figure on the left to set to the required level for the selected frequency.
 - Pressing the EQUALIZER LEVEL + key increases the level of the selected frequency in +2 dB steps up to +12 dB.
 - Pressing the EQUALIZER LEVEL - key decreases the level of the selected frequency in -2 dB steps up to -12 dB.
- Repeat the operation in steps 2 and 3 to set the equalizer pattern as desired.
 - It is also possible to select a preset equalizer pattern by pressing one of the EQUALIZER PRESETS keys (A ~ E).
- To defeat the equalizer effect, press the EQUALIZER key again.
 - The [EQ. DEFEAT] indicator lights.

■ Equalizer recording

With this unit, sound processed by the graphic equalizer can be recorded through the TAPE-1 output.

- Press the EQ.REC key.
 - The [EQ. REC] indicator lights.
- Start recording on the TAPE 1 tape deck.
 - When the EQ.REC key is pressed again, the [EQ. REC] indicator goes off and normal (unprocessed) sound is output.

Note:
Equalizer recording is not possible with the TAPE-2 output.

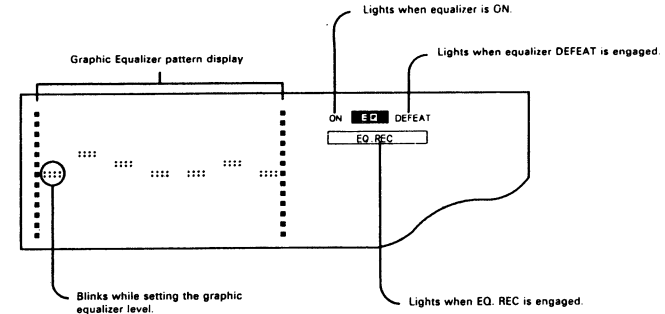

■ Preset equalizer memory and its applications

Five equalizer patterns are permanently preset in the memory of this unit for easy recalling at any time.

- Press the PGM/SET key to SET.
 - The "EQ. SET-□" indication appears in the display for 5 seconds.
- Press one of the EQUALIZER PRESETS keys (A ~ E).
 - The recalled equalizer pattern is displayed.

Characteristics of the "SET" preset patterns

- A: For solid and punchy sound.
 B: For effective reproduction of dynamic movie sound.
 C: For easy-listening background music.
 D: For music sound reproduction with a live, "being-there" feeling.
 E: For realistically reproducing vocal music.

■ To store user-programmed equalizer patterns in memory

Up to five equalizer patterns created by the user can be stored in memory for recalling at any time.

- Set the desired pattern with the equalizer control keys.
- Press the PGM/SET key to PGM.
 - The "EQ. PGM-□" indication appears in the display for 5 seconds.
- Press the MEMO. key.
 - The [MEMORY] indicator lights.
 - The "EQ. PGM-□" indication appears in the display.
- Within 5 seconds, press any of the EQUALIZER PRESETS keys A to E.

■ To recall user-programmed equalizer patterns from memory

- Press the PGM/SET key to PGM.
 - The "EQ. PGM-□" indication appears in the display for 5 seconds.
- Press one of the EQUALIZER PRESETS keys (A ~ E).
 - The recalled equalizer pattern is displayed.

One of characters A to E is displayed inside "□".

■ To switch the display contents

Spectrum analyzer display

Press the EQ./SPI. key to SPI.

The spectrum analyzer display shows the frequency level distribution of the signal being played. The spectrum analyzer display is useful to refer to when setting equalizer patterns.

Graphic equalizer display


Press the EQ./SPI. key to EQ.

The frequencies are divided into seven frequency bands, and the level of each band can be set while observing the shape of the equalizer pattern.

- Even when the spectrum analyzer is selected, the graphic equalizer is displayed for about 5 seconds in the following cases.

- When the POWER key is set to ON.
 - When any of the equalizer control keys is pressed.
 - When the MEMORY key is pressed.
 - When any of the A to E keys is pressed.
- After about 5 seconds, the spectrum analyzer display is resumed.

Playing video sources

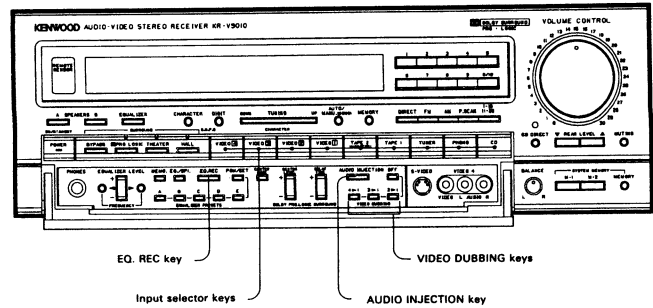

■ To play a video source

(For Surround playback, refer to "Surround effects" on page 28.)

1. Press the POWER key to ON.
2. Switch on the power of the monitor TV connected to the MONITOR OUT jack.
3. Select the playback source with the input selector keys.
4. Play the video component.
5. The video is reproduced on the monitor TV, and the audio is reproduced through the speakers.

■ Dubbing between two VCRs

Video dubbing can be performed while listening to any desired source.

With this receiver, through dubbing from VCR 2, VCR 3 or VCR 4 to VCR 1 is possible.

To dub through from VCR 2 (or VCR 3 or VCR 4) to VCR 1:

1. Press the VIDEO DUBBING [2 ▶ 1] (or [3 ▶ 1] or [4 ▶ 1]) key.
 - The [THROUGH DUB 2 ▶ 1] (or [THROUGH DUB 3 ▶ 1] or [THROUGH DUB 4 ▶ 1]) indicator lights.
2. Set the VCR 1 to the recording mode.
3. Set the VCR 2 (or VCR 3 or VCR 4) to the playback mode.

To stop through dubbing or after dubbing is finished:

- Press the VIDEO DUBBING [OFF] key.
- When through dubbing is not required, be sure to set to the OFF mode.

Note:
The audio injection does not function during through dubbing mode.



■ Audio injection

During video dubbing, the sound from the VCR can be replaced with sound from any desired audio source without affecting the picture.

In addition, the graphic equalizer effect can be applied to the recorded audio source.

1. Press the AUDIO INJECTION key so that the [AUDIO INJ.] indicator lights.
2. Select the desired audio source for Audio injection with the input selector keys.
3. When equalizer compensation is required when recording a desired audio source with audio injection ON, press the EQ_REC key.
 - The [EQ_REC] indicator lights up.
 - Set the equalizer controls as desired.
4. Operate each VCR for dubbing.

Note:
The audio injection does not function during through dubbing mode.

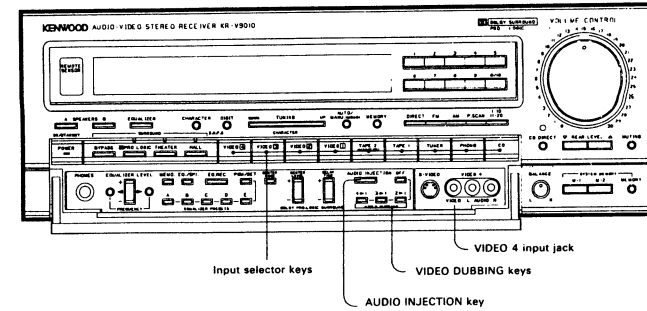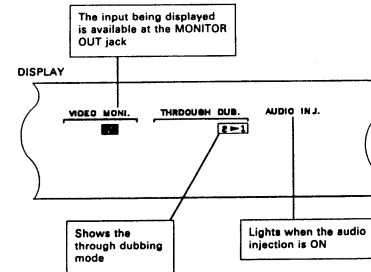

Example of video dubbing operation

■ To record with VCR 1

When audio injection is not required (Through dubbing):

1. Press the required VIDEO DUBBING key ([2 ▶ 1], [3 ▶ 1] or [4 ▶ 1]).
2. Set the VCR 1 to the recording mode.
3. Set the playback VCR (VCR 2, VCR 3 or VCR 4) to the playback mode.

When audio injection is required:

1. Press the VIDEO DUBBING [OFF] key.
2. Select the playback VCR with the input selector keys.
3. Set the AUDIO INJECTION to ON.
4. Select the the audio source to be injected using the input selector keys.
5. Set the VCR 1 to the recording mode.
6. Play the required VCR and audio source component.

Note:
The rear panel video output jacks do not output a video signal in the following cases:

| Signal input jack | Jacks with no output | |
|---------------------------------|---------------------------------|-------------------------------|
| S-VIDEO [IN] jack of "VIDEO 2" | VIDEO OUT jacks of each "VIDEO" | VIDEO jack of "MONITOR OUT" |
| VIDEO [IN] jack of each "VIDEO" | S-VIDEO [OUT] jack of "VIDEO 2" | S-VIDEO jack of "MONITOR OUT" |


■ To record with VCR 2

1. Press the VIDEO DUBBING [OFF] key.
2. Select the playback VCR with the input selector. (When Audio Injection is required)
- (3) Set the AUDIO INJECTION to ON.
- (4) Select the audio source used for audio injection with the input selector.
3. Set the VCR 2 to the recording mode.
4. Start playing the playback VCR. (When the audio injection is ON, also play the audio source component.)

• Since the S-VIDEO and VIDEO circuits are independent of each other, dubbing/playback from an S-VIDEO jack to a VIDEO jack or from a VIDEO jack to an S-VIDEO jack is impossible. However, dubbing/playback from the S-VIDEO jack of "VIDEO 4" to each VIDEO jack is possible. The relationships between the various video terminals are shown in the table on the left.

• When a video component or TV monitor having an S-VIDEO jack is used, be sure to connect both the S-VIDEO jack and the (composite) VIDEO jack to the S-VIDEO and VIDEO jacks of this unit.

Surround effects

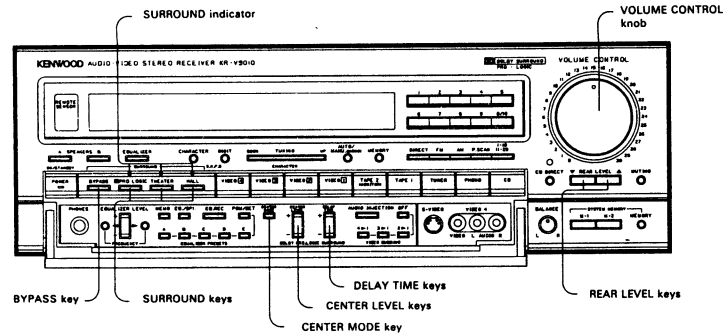

The reason why the sound you experience in concert halls or stadiums is so real and live is that the sound comes not only from the front but also from the surroundings. To reproduce such conditions as close as possible to reality, this unit is equipped with three Surround modes (PRO-LOGIC, THEATER, HALL). In addition, three Dolby PRO-LOGIC modes - NORMAL, WIDE, and PHANTOM - are provided to enhance the sound directivity and to provide the sound with a more surrounding, powerful "being-there" feeling.

Note on Dolby Surround

Video softwares marked with are encoded with Dolby Surround information. This unit incorporates a Dolby Surround decoder for playing such videotapes with the same sound effect as Dolby Stereo movies projected in movie theaters.

To obtain this effect, press the PRO-LOGIC key to ON.

Surround modes

PRO-LOGIC mode

The PRO-LOGIC mode is used when playing a source encoded with Dolby Surround signals. (The following modes can be selected by pressing the CENTER MODE key repeatedly.)

NORMAL:

Select this mode when the signal output from the CENTER OUT jack on the rear panel is reproduced through a small center speaker. Low frequencies below 100 Hz in this signal are distributed to the left and right front speakers, and frequencies above 100 Hz are reproduced through the center speaker.

WIDE:

The entire signal output from the CENTER OUT jack on the rear panel is sent to the center speaker, without the low frequencies below 100 Hz being routed to the left and right speakers as in case of the Normal mode. Set to this mode if the speaker used as the center speaker is the same type of speaker as those used for the front left and right positions.

PHANTOM:

This mode allows the PRO-LOGIC effect to be enjoyed even when a center speaker is not connected. In this case, the center signal is distributed to the left and right front speakers.

CENTER OFF:



Use this mode when adjusting the input balance.

THEATER Surround mode

This mode provides a three-dimensional effect similar to that of a movie theater. With this mode, you can enjoy a Surround sound effect similar to Dolby Surround sound even when playing a video program which is not encoded with the Dolby Surround system.

HALL Surround mode


This mode provides a natural reverberation effect. When used with a normal source, you can enjoy the being-there feeling or "presence" as in the hall.

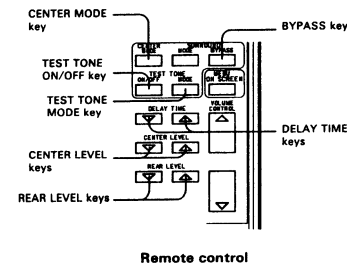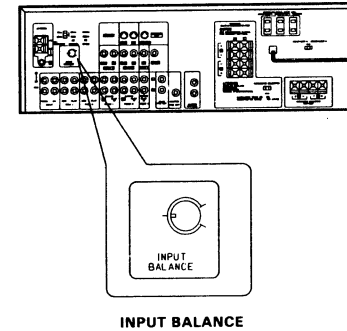

How to make adjustments for the Dolby Pro-Logic mode

INPUT BALANCE adjustment

- Press the PRO-LOGIC key.
 - "DOLBY PRO LOGIC" will appear on the display.
- Play a Dolby Surround-encoded video program.
- Lower the Surround Speaker output with the REAR LEVEL key.
- Select the "CENTER OFF" mode with the CENTER MODE key.
 - Each time the CENTER MODE key is pressed, the mode changes repeatedly in the following sequence.




- Adjust the INPUT BALANCE knob so that the level of the monaural sound (voices) is minimized.

Surround Level adjustment

NORMAL/WIDE


- Select "NORMAL" or "WIDE" with the CENTER MODE key.
- Press the TEST TONE ON/OFF key on the remote control at the listening position.
 - A beep tone will be heard.
- Press the TEST TONE MODE key on the remote control.
 - Each time the key is pressed, the tone will be heard from one of four positions in the following order:



- Adjust the CENTER LEVEL and REAR LEVEL keys so that the output volumes from the five speakers are almost identical when listened from the listening position.
- Press the TEST TONE ON/OFF key to OFF.

PHANTOM


- Select "PHANTOM" with the CENTER MODE key.
- Press the TEST TONE ON/OFF key on the remote control at the listening position.
 - A beep tone will be heard.
- Press the TEST TONE MODE key on the remote control.
 - Each time the key is pressed, the tone will be heard in one of three positions in the following order:



- Adjust the REAR LEVEL keys so that the output volumes from the four speakers are almost identical when listened from the listening position.
- Press the TEST TONE ON/OFF key to OFF.

MANUFACTURED UNDER LICENSE FROM DOLBY LABORATORIES LICENSING CORPORATION. ADDITIONALLY LICENSED UNDER ONE OR MORE OF THE FOLLOWING PATENTS: U.S. NUMBERS 3,632,886, 3,746,792 AND 3,959,590; CANADA NUMBERS 1,004,603 AND 1,037,877. "DOLBY" AND THE DOUBLE-D SYMBOL ARE TRADEMARKS OF DOLBY LABORATORIES LICENSING CORPORATION.

Surround effects

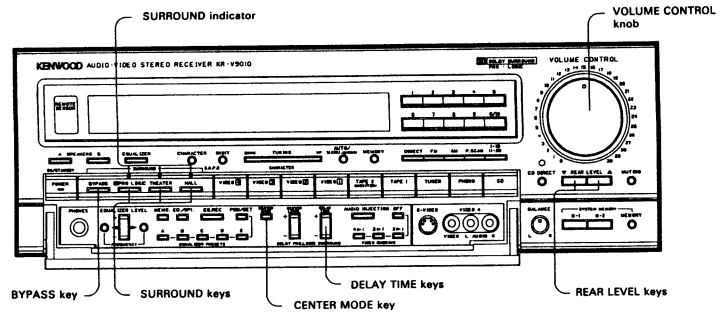

THEATER SURROUND, HALL SURROUND adjustment

1. Press the THEATER or HALL Surround key.
2. Adjust the rear speaker output level with the REAR LEVEL control keys.
 - The REAR LEVEL control range is from +20 dB to -50 dB of the front speaker level.

Delay time adjustment

The output signal from the rear speakers is delayed slightly than that of front speakers for each Surround mode separately. The delay time can be adjusted as desired separately for the PRO LOGIC and THEATER SURROUND modes. The delay time of the HALL SURROUND mode is fixed at 30 ms and cannot be adjusted.





1. Press the PRO LOGIC or THEATER key.
2. Adjust the delay time using the DELAY TIME keys.
 - For the PRO LOGIC mode, the delay time can be adjusted between 15 ms and 30 ms in 1.5 ms steps.
 - For the THEATER SURROUND mode, the delay time can be adjusted between 0 ms and 30 ms in 1.5 ms steps.

To play sound with the Surround effect

1. Set the SURROUND key to ON.
 - The selected Surround mode indicator lights.
2. Select the source to be played with the surround sound effect, and play it.
3. Adjust the volume level.
 - The VOLUME CONTROL allows you to increase or decrease the volume level of all of the front, rear and center channels simultaneously.

To release the Surround mode

- Press the BYPASS key.
- Be sure to set the BYPASS mode when the Surround effect is not required.

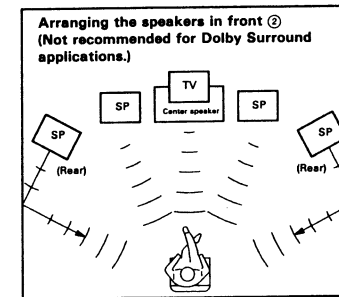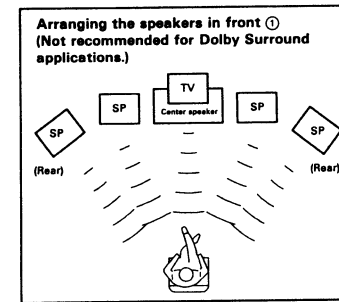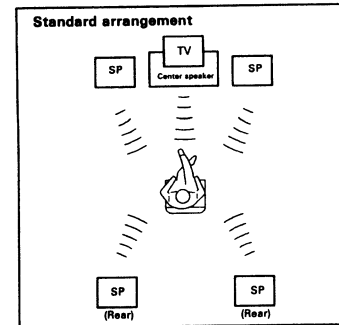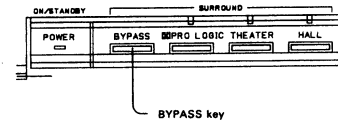

Arranging the speakers

A variety of rear speaker arrangement patterns are possible according to room size, reverberation characteristics, etc.

The arrangement patterns given here are typical examples for effective Surround sensation. The given examples are only suggestions. Arrange the speakers according to your individual taste.

When the left and right walls are made of a hard material such as like concrete, facing the rear (Surround) speakers towards the walls may give a better effect.

SURROUND EFFECTS

KR-V9010

System memory


The required playback condition can be stored in memory for each music source (tape, compact disc, phonograph record (disc), or broadcasting program), so that the same balance (between front and rear channels) and the same equalizer pattern, etc. can be recalled at any time instantly.

Two types of settings can be stored in memory, and by pressing the appropriate SYSTEM MEMORY (M-1 or M-2) key you can recall the preset sound field condition instantly.

Stored contents:

The stored contents in the System Memory are as follows:

- Input source (CD, PHONO, TUNER, TAPE, VIDEO, etc.) (including TAPE 2)
- Preset channel in the TUNER position
- Audio injection
- EQUALIZER key setting (ON/DEFEAT)
- EQ. REC key setting (ON/OFF)
- Preset channel of the equalizer pattern
- SURROUND setting (ON/OFF)
- SURROUND mode
- Center mode
- Center level
- DELAY TIME
- Rear level
- Video monitor out
- SPEAKERS A, B
- CD DIRECT ON/OFF

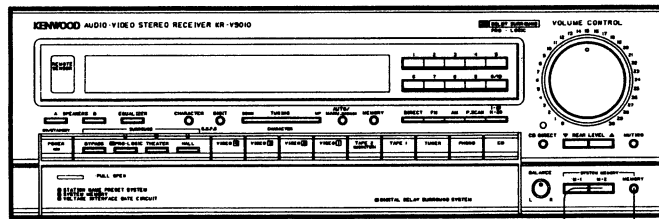

SYSTEM MEMORY M-1, M-2 keys
SYSTEM MEMORY key

How to preset the System Memory

1. Set the playback conditions as desired.
 - When selecting the tuner or equalizer, be sure to designate the preset channel.
 2. Press the SYSTEM MEMORY key.
 - The [MEMORY] indicator lights and the "SYSTEM MEMORY" indication appears in the display (for 5 seconds).
 - If the "CAN NOT MEMORIZE" indication is displayed, the tuner frequency or equalizer pattern will not be preset in memory.
- After presetting the playback condition for each channel, press the MEMORY key again.

Note:

If the contents of a preset channel is changed after being designated as the tuner or equalizer section channel for System Memory, the contents of the System Memory channel will also be changed.

How to recall System Memory


1. Press the M-1 or M-2 key.
 - The display shows "SYSTEM MEMORY 1" or "SYSTEM MEMORY 2" for about 2 second, and the settings of each section are changed to the preset contents.
2. Readjust the setting of each section as required.
 - When PHONO is selected as the input source, with a system-controlled turntable connected, the turntable will automatically start playing by recalling the System Memory. Therefore, be sure to set a record on the platter of the turntable before activating the System Memory function.
 - In the same way, when a system-controlled tape deck or CD player is connected to this unit, the tape deck or CD player can be started automatically by activating the System Memory function.

On-screen display

With this function, a comprehensive character display appears on the monitor screen every time an input selector key, etc. is pressed.

There are six screen display patterns.

Each time the MENU ON SCREEN key on the remote control is pressed, the screen pattern is changed in the following order:



When one of the first four screens (Screen 1 to Screen 4) is displayed, it will be maintained until a key corresponding to the screen menu is pressed.

With Screen 5, when a relevant key is pressed, the screen corresponding to the key will appear for 5 seconds and then go out.

With Screen 6, there is no display on the monitor screen.

1. SCREEN 1 (AUDIO):

- Displays each setting of the various audio sources.

```

** AUDIO **
INPUT          TUNER
KISS 16 FM108 .00MHz
TAPE1 EQ REC  TAPE2
TAPE2 REC     TUNER
CD DIRECT ON
TAPE2 MONITOR
VIDEO MGNITOR VIDEO3
    
```

- Displays the tuner station name, preset channel, receiving band, and receiving frequency only when TUNER is selected.
- Displays the REC mode for TAPE 1.
- Displays the REC mode for TAPE 2.
- Displayed only when activated.
- Displays the MONITOR output.

2. SCREEN 2 (VIDEO):

- Displays each setting of the various video sources.

```

** VIDEO **
MONITOR OUT  VIDEO3
VIDEO01 REC  VIDEO3
AUDIO INJEC. TUNER
(EQ REC)
VIDEO2 REC  VIDEO3
AUDIO INJEC. TUNER
(EQ REC)
    
```

- Displayed when AUDIO INJECTION is activated. (THROUGH DUBBING is also displayed when engaged)
- Displayed only when EQ REC is activated.

3. SCREEN 3 (SURROUND):

- Displays each setting related to Surround sound.

```

** SURROUND **
DOLBY PRO LOGIC
NORMAL MODE
DELAY TIME 16.5MS
CENTER LEVEL + 8DB
REAR LEVEL -10DB
    
```

- Displayed only when Dolby Pro-Logic is selected.
- Displayed only when Dolby Pro-Logic "NORMAL" or "WIDE" is selected.

On-screen display

| | | |
|--------------------|------------|------------|
| ** TUNER PRESET ** | | |
| 1 K I K I | 8 K I S S | 15 K L M N |
| 2 - - - - | 9 - - - - | 16 - - - - |
| 3 - - - - | 10 - - - - | 17 - - - - |
| 4 - - - - | 11 W H Y Z | 18 - - - - |
| 5 - - - - | 12 - - - - | 19 - - - - |
| 6 - - - - | 13 - - - - | 20 - - - - |
| 7 - - - - | 14 - - - - | |

ON SCREEN STANDBY

ON SCREEN OFF

| | | |
|-----------------|-------|--------|
| ** TEST TONE ** | | |
| CENTER | | |
| LEFT | /// | RIGHT |
| /// | | /// |
| /// | REAR | /// |
| CENTER | LEVEL | + 8DB |
| REAR | LEVEL | + 12DB |

4. SCREEN 4 (TUNER PRESET):

- Displays the contents of the tuner preset channels.

5. SCREEN 5 (ON SCREEN STANDBY):

- Shows the standby mode for the on-screen display. The screen shown in the figure appears for 5 seconds, then goes out.
- In this mode, when a relevant key is pressed, the corresponding screen will be displayed for 5 seconds, then go out.

6. SCREEN 6 (ON SCREEN OFF)

- Shows that the on-screen display is turned OFF. When the power is switched ON, the figure shown on the left will be displayed from 5 seconds, then go out.
- There is no on-screen display in this mode.
- Set to this mode when noise interferes with the video picture.

7. TEST TONE DISPLAY

- This screen appears when the TEST TONE mode is engaged. The "█" (darkened cursor) blinks at the position where the test tone is being output.

Note:
The position of the on-screen display (on the TV screen) may vary depending on the video software being played.

Remote control operation

■ Operations


1. Connect the power plug of the receiver to an AC outlet.
 - The receiver enters the power standby mode and the power standby indicator lights.
2. Press the POWER key of the remote control unit or the POWER key of the receiver.
 - The receiver enters the power ON mode.
3. The various functions of the receiver can be operated with the keys of the remote control unit.

Note for remote control operation


After pressing one of the operation keys, when the next operation is required, press the next operation key firmly after an approx. 1 second interval.
If the next operation key is pressed immediately after the previous key, misoperation may result.

■ Loading batteries into the remote control unit

1. Remove the battery cover.
While gently pressing the battery cover located on the rear of the remote control unit, slide it in the direction of the arrow.



2. Insert four LR03 size batteries. Take care to respect the battery polarity (+, -), and be sure to close the cover after inserting.

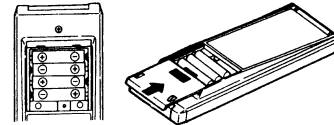


Notes:


1. During battery replacement, if new batteries are not loaded within 3 minutes after the old batteries are removed, the programmed codes may be cleared. If this occurs, these codes should be programmed again. However, the fixed key codes will not be lost.
2. The battery life of the remote control unit is approximately six months, although this figure can vary depending on frequency of use.
3. The batteries included with the unit are provided for use in checking remote control operation, and their service life may be shorter than noted above. When the distance from which remote control operation is possible becomes shorter, or when the remote control ceases to function, replace all four batteries with the new alkaline batteries.
4. Do not use old and new batteries together, as this may cause corrosion, battery leakage, etc.

■ Operating range of the remote control unit

The operating range of the remote control unit may differ according to temperature, humidity, or using conditions, however, it is defined approximately as shown in the figure below:

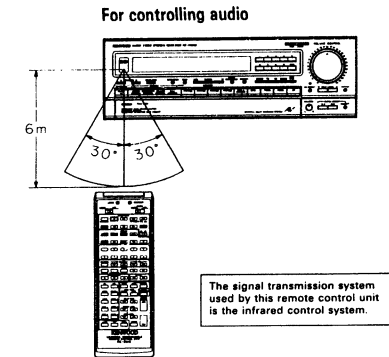

For controlling TV and VIDEO sets (U.S.A. and military models)

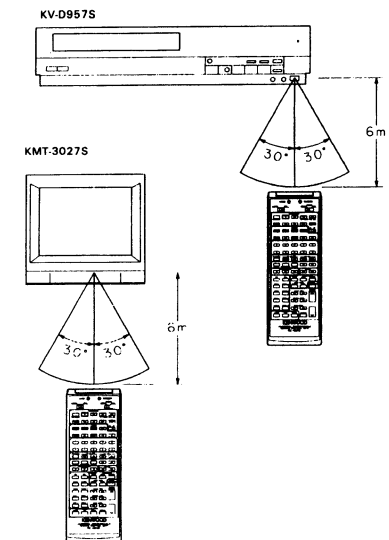


ON-SCREEN DISPLAY / REMOTE CONTROL OPERATION

KPR-V9010


Remote control operation

The remote control unit provided has a memorizing function which allows the user to program the remote control functions of other A/V components.


Names and Operation of Controls

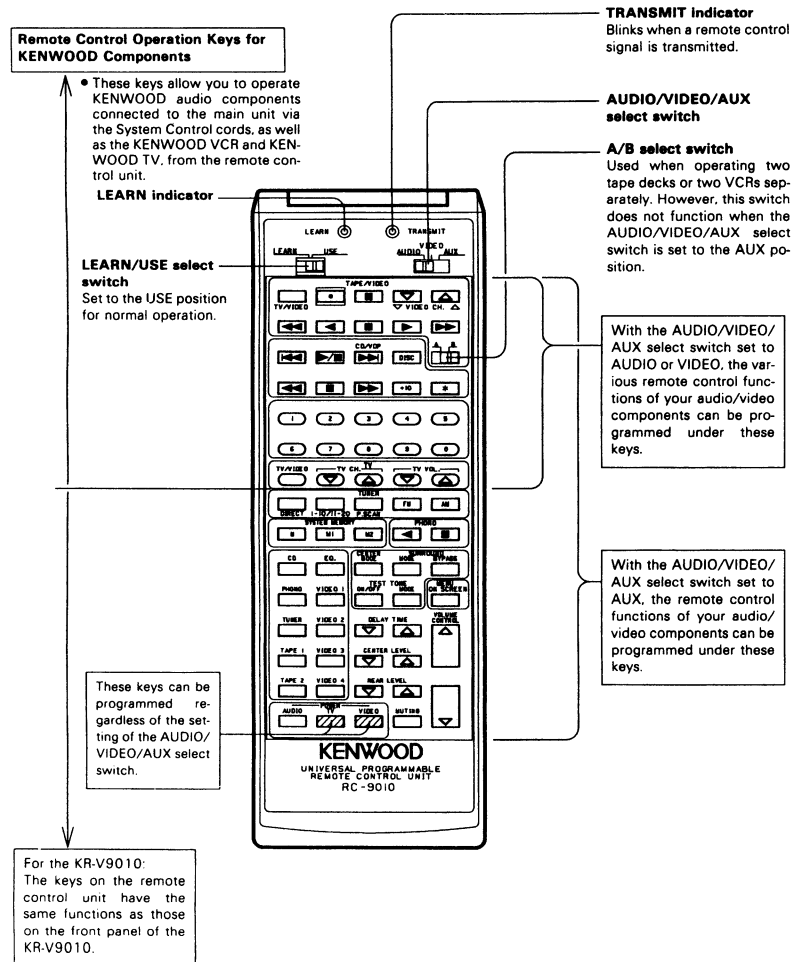

Key functions when remotely controlling KENWOOD audio components connected via System Control cords, KENWOOD VCR and KENWOOD TV

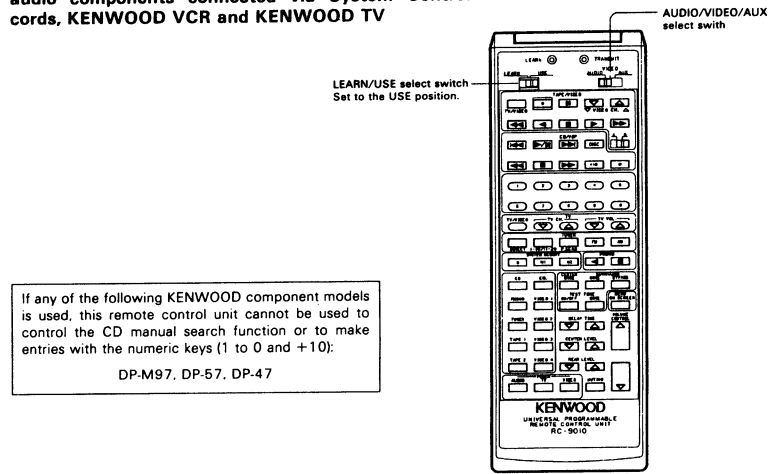


■ TAPE deck control keys



When the AUDIO/VIDEO/AUX select switch is set to AUDIO, these keys function as the tape deck operation keys. Use the A/B select switch to specify the A deck or B deck of a dual-transport cassette deck. The darkened keys (marked "■") do not function at this time.

Note:
When it is necessary to press the fast forward key after the rewind key, be sure to press the stop key before pressing the fast forward key.

■ VIDEO deck control keys



When the AUDIO/VIDEO/AUX select switch is set to VIDEO, these keys function as VCR operation keys. The darkened keys (marked "■") do not function at this time.


When remotely controlling the KV-D957S from KENWOOD (for U.S.A. and military), set the A/B select switch to A.

VIDEO CH keys:
Pressing the [▲] key shifts the channel tuned on the VIDEO deck upward, and pressing the [▼] key shifts it downward.

TV/VIDEO key:
Every time this key is pressed, the output from the video deck is switched between the TV channel RF output and video output.

Remote control operation


■ CD player control keys



When the AUDIO/VIDEO/AUX select switch is set to AUDIO:


These keys allow the same operations as the keys with the same names on the CD player.

The DISC key is for use exclusively with a multiple CD player. Pressing the DISC key allows one of DISC 1 to DISC 6 to be selected in the following cycle.



(DP-M8010 only)

■ Numeric keys (1 to 0)



- When the CD or TUNER input selector key is selected, these keys can be used in place of the numeric keys on the CD player or receiver, respectively.
 - The AUDIO/VIDEO/AUX switch must be set to AUDIO.
- When the AUDIO/VIDEO/AUX switch is set to VIDEO, the numeric keys can be used in place of the TV channel select keys.

■ TV set control keys



When the AUDIO/VIDEO/AUX select switch is set to VIDEO, these keys function as follows:


TV VOL keys:
Pressing the Δ key increases the volume of the TV set, and pressing the ∇ key decreases it.

TV CH keys:
Pressing the Δ key shifts the channel tuned on the TV set upward, and pressing the ∇ key shifts it downward.

TV/VIDEO key:
Every time this key is pressed, the input to the TV set is switched between the TV signal and the external video signal.


The control keys in the following sections are concerned with the front panel operations of the KR-V9010, and function in the same way regardless of whether the AUDIO/VIDEO/AUX select switch is set to AUDIO or VIDEO.

■ TUNER control keys



These keys allow the same operations as the keys with the same names on the receiver.

■ Turntable (PHONO) control keys




The Play (\blacktriangleleft) and Stop (\blacksquare) keys are provided.

■ System memory keys




These keys allow the same operations as the keys with the same names on the receiver.


■ Equalizer key



Every time the EQ key is pressed, the equalizer of this unit can be switched ON/DEFEAT or ten preset equalizer patterns can be changed over in the following cycle.




■ Input selector keys




These keys have the same functions as the input selector keys on the receiver.

■ Surround keys




The CENTER MODE key, BYPASS key, and DELAY TIME key function in the same way as those on the front panel of the KR-V9010.

SURROUND MODE key:
Each time this key is pressed, the Surround mode changes in the following order:




TEST TONE ON/OFF key:
Turns the test tone ON and OFF when the DOLBY PRO-LOGIC mode is selected.


TEST TONE MODE key:
Each time this key is pressed, the test tone output position is changed in the following order:
(NORMAL or WIDE mode)



(PHANTOM mode)




■ Volume level keys

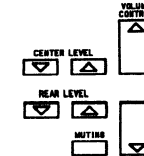


VOLUME CONTROL keys:
Pressing the Δ key rotates the VOLUME CONTROL on the main body of the receiver clockwise to increase the volume, and pressing the ∇ key rotates it counterclockwise to decrease the volume.

Other keys allow the same operations as the keys with the same names on the receiver.


■ MENU ON SCREEN key



Every time this key is pressed, the on-screen display modes are changed over in the following order:



■ POWER keys



AUDIO key:
Switches the power of the receiver to: ON/STANDBY (OFF).


TV key:
Switches the power of the TV set to ON/STANDBY (OFF).

VIDEO key:
Switches the power of the video deck to ON/STANDBY (OFF).


Remote control operation

■ To program the remote control functions of other remote control units into the RC-9010:


1. Set the LEARN/USE select switch to the LEARN position, and set the AUDIO/VIDEO/AUX select switch to the desired position.



2. Place the RC-9010 and the other remote control unit so that their heads (transmission ends) face each other. (Leave a distance between the units of about 2 ~ 5 cm or 0.8 ~ 2 inches.)




3. Press one of the learning keys on the RC-9010. The LEARN indicator will light.

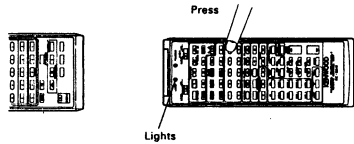


4. Press the key to be programmed on the other remote control unit and hold it depressed.

Example: To program the REPEAT key of the other remote control unit

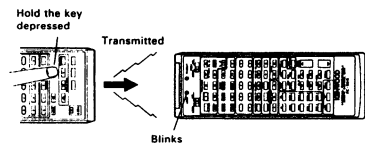

5. When the LEARN indicator on the RC-9010 blinks twice and then goes out, the programming operation is completed. When the programming operation is completed, release your finger from the key on the other remote control unit.



Note:
Be sure to hold the key to be programmed on the other remote control unit depressed until the LEARN indicator goes out.

● To program other remote control functions, repeat the procedure outlined in steps (3) to (5).


Most audio/video components use the same infrared remote control coding system. Therefore, the RC-9010 can memorize most of the functions of other remotely-controlled components. Please read this manual and the instruction manuals provided with your other A/V components carefully before programming the remote control functions of the other components.

Notes:

1. If the optical output level of the other remote control unit is high, programming may not be carried out correctly. If this occurs, separate the RC-9010 and the other remote control unit by a greater distance and perform the programming procedure again.
2. If the LEARN and TRANSMIT indicators blink simultaneously during programming, this indicates either that the key being programmed cannot be programmed or that programming has not been performed completely. If this occurs, perform the programming procedure again.
3. Remote control functions using specially-coded signals or signals other than infrared signals cannot be programmed. Programming is also impossible when the RC-9010's memory capacity becomes full.
4. The LEARN indicator goes out 30 seconds after a learning (programmable) key is pressed. After this, programming is impossible. To continue programming, press the learning (programmable) key again.
5. When two or more learning (programmable) keys are pressed at the same time, the remote control function of the other remote control unit will be stored under the key which was pressed last.
6. Do not program the remote control functions of equipment other than A/V components, such as air conditioners, etc.

■ To check the programmed contents during programming

1. Check that the LEARN/USE select switch is in the USE position.
2. Press the key to be checked.
3. Verify that the component to be operated works correctly.

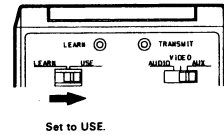


Set to USE.

■ To change the programmed contents

Perform the programming operation again. The previously programmed contents will be canceled automatically, and the newly programmed contents will be maintained in memory.

■ Normal operation of the remote control unit

1. Set the LEARN/USE select switch to the USE position.
2. Press a key under which another remote control function has been programmed. The TRANSMIT indicator blinks and the target component operates as intended.

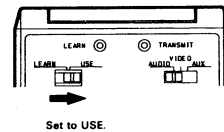


Set to USE.

■ Overlay sheet

The provided overlay sheet offers a convenient way to record and recall the contents programmed under the various operation keys.

Write the programmed key contents on the overlay sheet with an oil-based felt-tipped marker or pencil. To erase, use a conventional eraser.

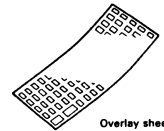


Overlay sheet


DISASSEMBLY FOR REPAIR

1. Removing the front panel ass'y


1. Remove the three screws in the upper side (❶).
2. Remove the six screws in the lower side (❷).
3. When removing, do not hit the damper (❸).

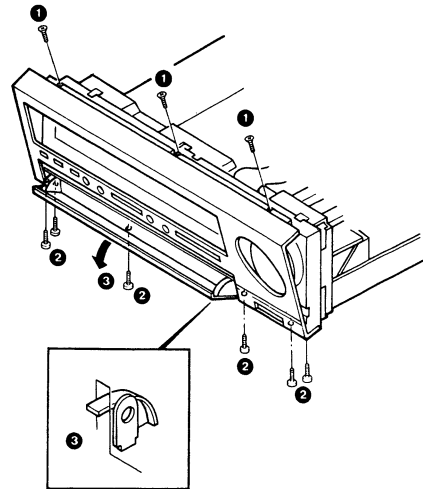

4. Remove the four screws (❹).
5. When installing, put gears into alignment as shown (❺).

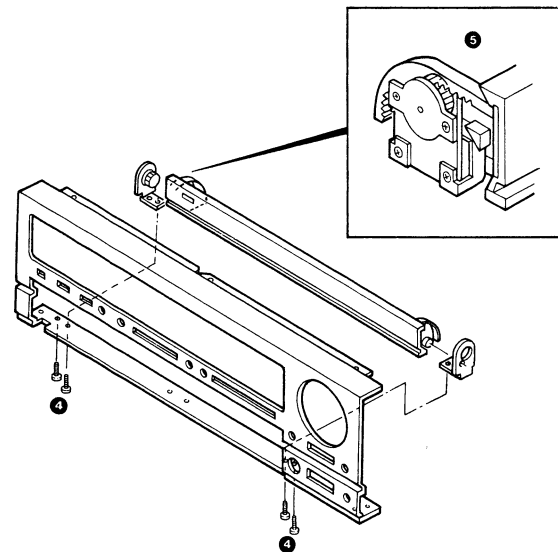

6. Detach the knob and its accompanying nut (❻).
7. Disconnect the LED VOL. board (❼).
8. When installing the knob, rotate the VOL. clockwise and set the cord as shown (❽).
9. When disconnecting the (X14-) (D/6) board, remove the one screw and disconnect the connector (❾).
10. Undo the three catches (❿).

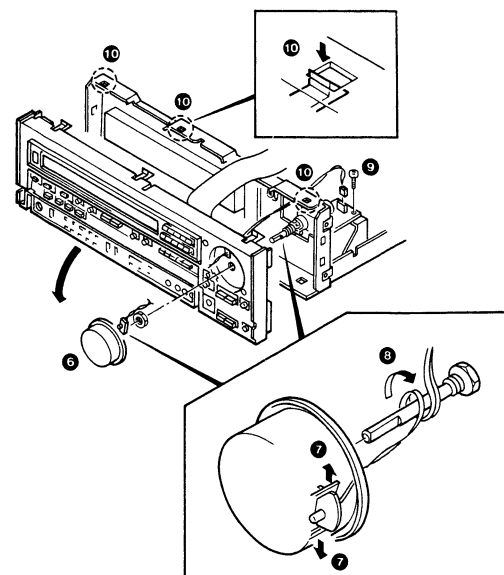


KR-V9010


DISASSEMBLY FOR REPAIR

2. Removing the PC boards


1. Remove the five screws (1).
2. Disconnect the connector (2).
3. Undo the eight catches (3).

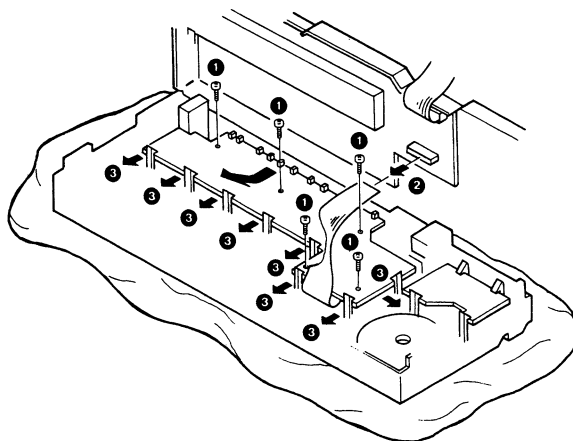

4. Remove the two screws (4).
5. Detach the knob and its accompanying nut (5).
6. Remove the two screws (6).
7. Undo the four catches (7).

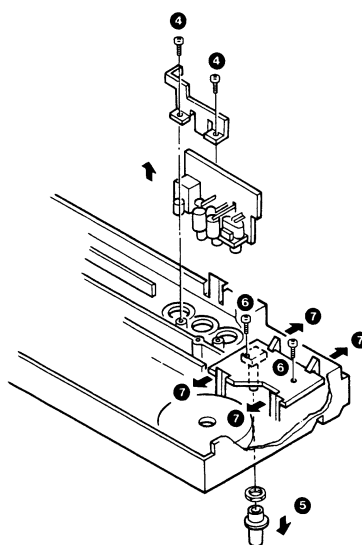


8. Remove the six screws (8).
9. Detach the unit holder (9).
10. Push the upper and lower catches (10), then disconnect cord W17 pulling it lightly in the direction of the arrow (11).

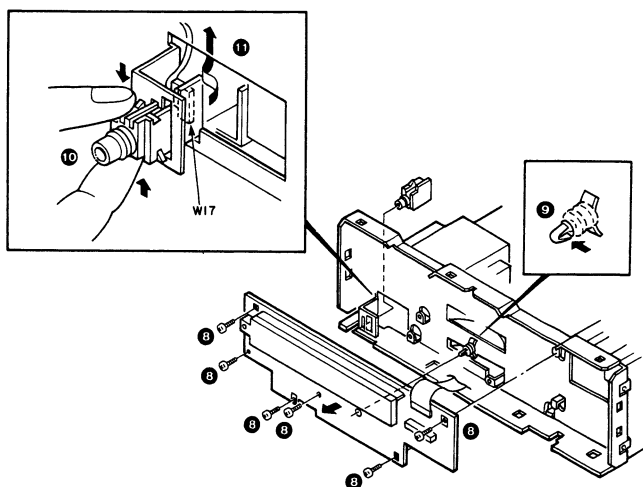

DISASSEMBLY FOR REPAIR


3. Removing the (X05-) (A/2) board

1. Remove the three screws (❶).
2. While pressing the ANT terminal (❷), disconnect the connector (❸).

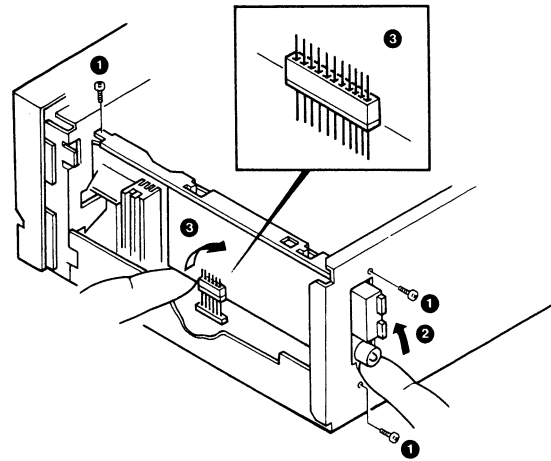

4. Installing the (X05-) (A/2) board

3. Place the board, and push the connector (❹).
4. Push the board (❺).
5. Put connector pins in alignment, then push the board from above (❻).
6. Set it to the recession (❼).

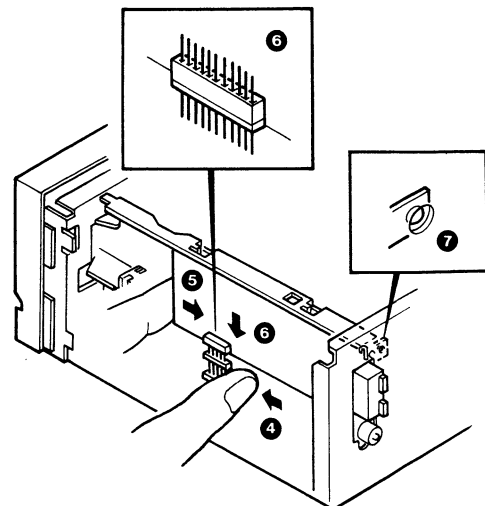


KR-V9010

DISASSEMBLY FOR REPAIR


5. Removing the (X08-) (A/7) board

1. Remove the two screws (①).
2. Disconnect the connector (②).

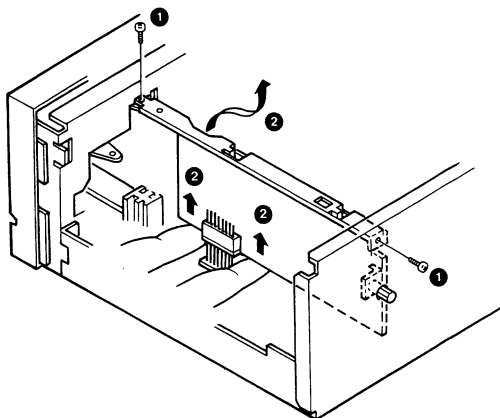


6. Installing the (X08-) (A/7) board

3. Insert the knob (③).
4. Set it to the recession (④).
5. Push the connector (⑤).
6. Push the board (⑥).
7. Put connector pins in alignment, then push the board from above (⑦).

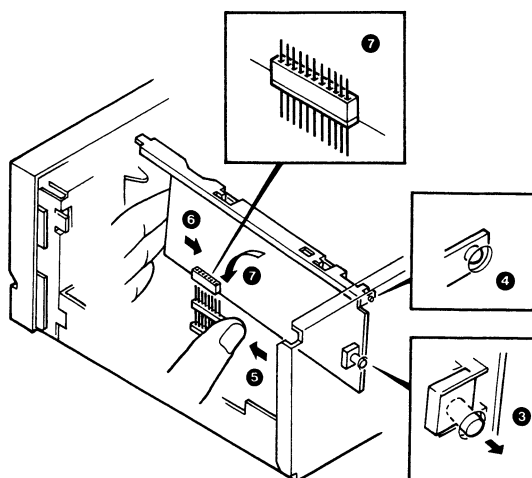


BLOCK DIAGRAM

KR-V9010

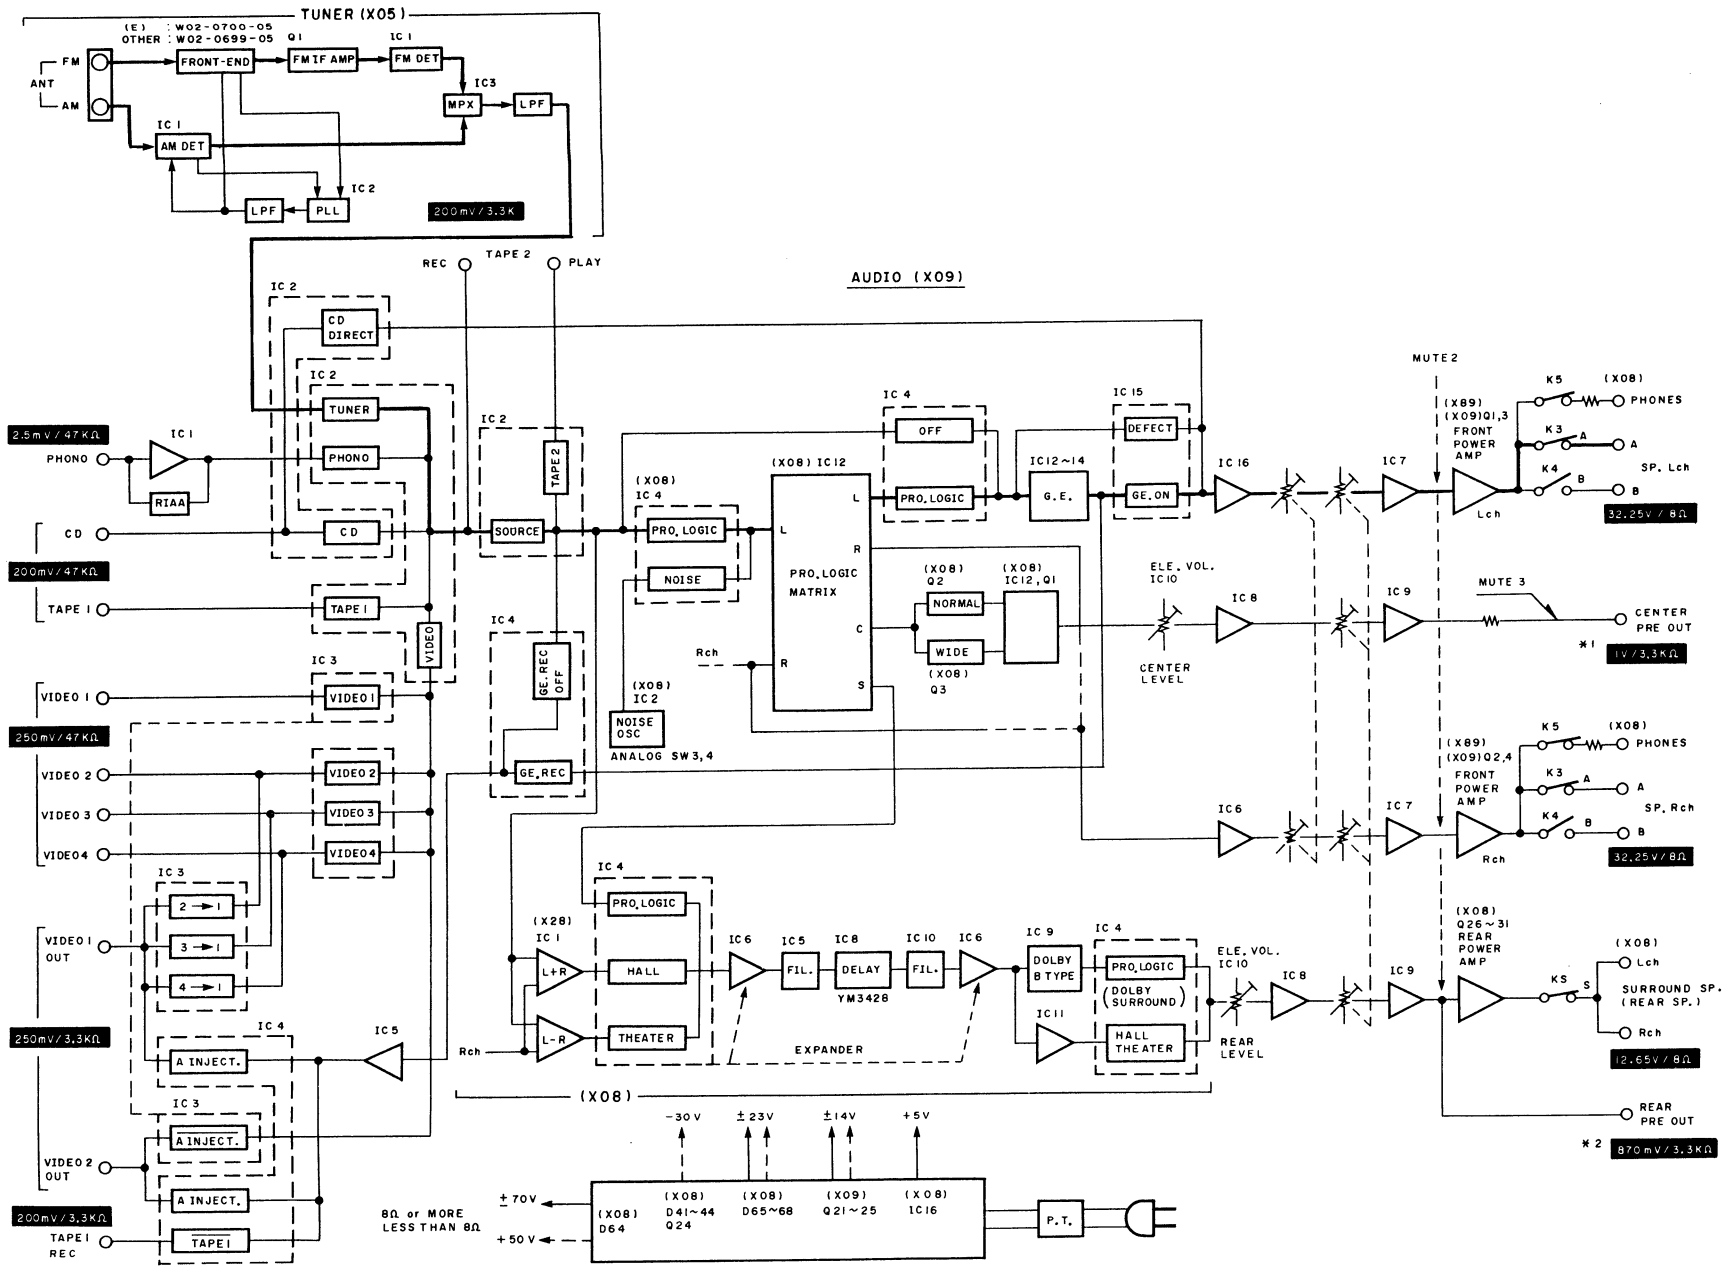

BLOCK DIAGRAM

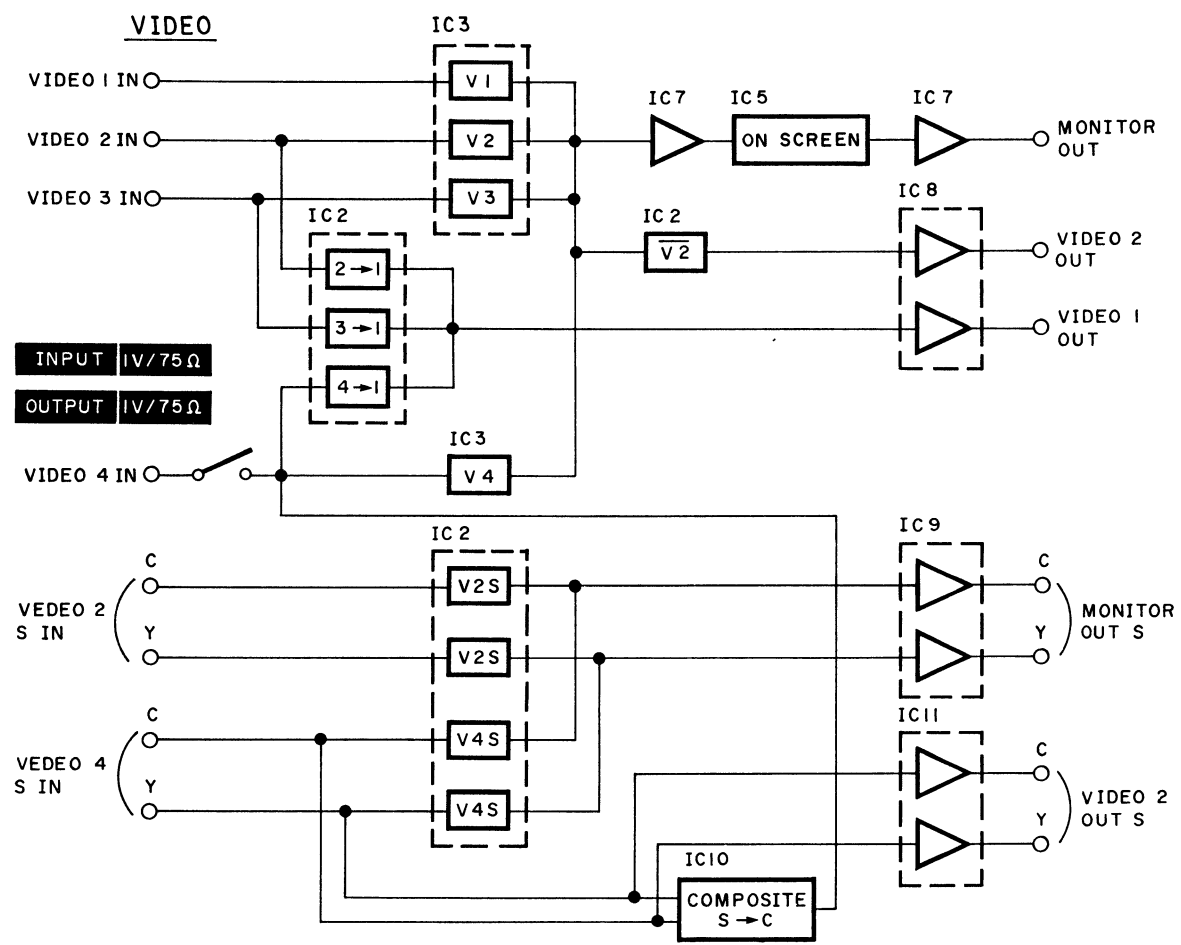

CIRCUIT DESCRIPTION

1. Description of components

1-1. TUNER UNIT (X05-381X-XX) 0-10 : K,P 0-81 : U,UE (JAPAN MADE)

(X05-353X-XX) 0-11 : K,P 0-82 : U,UE (SINGAPORE MADE)

| Ref. No. | Parts No. | Use/Function | Operation/Condition/Compatibility |
|----------|----------------|-------------------------|---|
| Q1 | 2SC1923(R,O) | FM IF amplifier | |
| Q2 | 2SC945(A)(Q,P) | LPF (Low Pss Filter) | Compatible with 2SC1740S(Q,R). |
| Q3 | 2SC1845(F,E) | LPF (Low Pss Filter) | |
| Q4 | 2SC945(A)(Q,P) | Buffer amplifier | For the E version only. Compatible with 2SC1740S(Q,R). |
| Q5, 6 | 2SC945(A)(Q,P) | Emphasis select | 75 μ s when ON, 50 μ s when OFF. For the U, UE version only. Compatible with 2SC1740S(Q,R). |
| Q7, 8 | 2SA733(A)(Q,P) | +B power supply select | Q7 : FM +B (ON in FM mode), Q8 : AM +B (ON in AM mode). Compatible with 2SA933S(Q,R). |
| IC1 | LA1265 | FM IF/AM detection | |
| IC2 | LM7001 | PLL (Phase Locked Loop) | |
| IC3 | AN7470 | MPX (Multiplexer) | |

1-2. PRE AMPLIFIER UNIT (X08-233X-XX) 0-10 : K 1-01 : P 0-81 : U,UE (JAPAN MADE)

(X08-230X-XX) 0-10 : K 1-01 : P 0-81 : U,UE (SINGAPORE MADE)

| Ref. No | Parts No. | Use/Function | Operation/Condition/Compatibility |
|---------|----------------|--------------------------|---|
| Q1 | 2SC945(A)(Q,R) | Center OFF select | Turns ON when center OFF. Compatible with 2SC1740S(Q,R). |
| Q2 | 2SC2878(B) | Center mode select | Turns ON when normal mode. If Q2 and Q3 turns OFF |
| Q3 | 2SC2878(B) | Center mode select | Turns ON when wide mode. when phantom mode. |
| Q5 | 2SA733(A)(Q,P) | Test tone switching | Turns ON when test tone ON. Compatible with 2SA933S(Q,R). |
| Q21 | 2SD1302(S,T) | Relay drive | For the power relay. |
| Q22 | 2SC945(A)(Q,P) | CE control | Compatible with 2SC1740S(Q,R). |
| Q23 | 2SA733(A)(Q,P) | Filament ON/OFF | Compatible with 2SA933S(Q,R). |
| Q24 | 2SB722(Q,P) | Constant voltage circuit | For the -30V power supply. |
| Q25 | 2SA922(F,E) | Impedance detector | 4 Ω /8 Ω detect. |
| Q26, 27 | 2SA922(F,E) | Referential amplifier | |
| Q28 | 2SC1845(F,E) | Pre drive | |
| Q29 | 2SC4137 | Bias compensation | |
| Q30 | 2SD1893 | Final transistor | |
| Q31 | 2SB1253 | Final transistor | |
| Q32 | 2SC1845(F,E) | Current limiter | |
| Q33 | 2SA733(A)(Q,P) | Protection | Signal. Compatible with 2SA933S(Q,R). |
| Q34 | 2SC945(A)(Q,P) | Relay drive | Surround SP. Compatible with 2SC1740S(Q,R). |
| Q35 | 2SC945(A)(Q,P) | Relay drive | Speaker A. Compatible with 2SC1740S(Q,R). |
| Q36 | 2SC945(A)(Q,P) | Relay drive | Speaker B. Compatible with 2SC1740S(Q,R). |
| Q37 | 2SC945(A)(Q,P) | Relay drive | Phones. Compatible with 2SC1740S(Q,R). |
| IC1 | NJM2058D | Buffer amplifier | |
| IC2 | TC4011UBP | Test tone | Test tone noise oscillator. |
| IC3 | NJM2058D | Test tone | Test tone noise oscillator. |
| IC4 | TC9162N | Analog switch array | |
| IC5 | NJM4565L | LPF | 7kHz low pass filter. |
| IC6 | μ PC1571C | Analog compounder | |
| IC7 | NJM78L05A | Constant voltage circuit | For the +5V power supply. |
| IC8 | YM3428 | Digital delay | |
| IC9 | LA2730 | Dolby B type NR IC | |
| IC10 | NJM072BL | LPF | 7kHz low pass filter. |
| IC11 | NJM4565L | Buffer amplifier | For the output. |
| IC12 | LA2770 | PRO LOGIC IC | |
| IC16 | μ PC7805HF | Constant voltage circuit | For the +5V power supply. |
| IC17 | μ PC78L12J | Constant voltage circuit | For the +12V power supply. |

KR-V9010

CIRCUIT DESCRIPTION

1-3. AUDIO UNIT (X09-285X-XX) 0-10 : K,U,UE 1-01 : P (JAPAN MADE) (X09-293X-XX) 0-10 : K,U,UE 1-01 : P (SINGAPORE MADE)

| Ref. No. | Parts No. | Use/Function | Operation/Condition/Compatibility |
|----------|----------------|----------------------------|---|
| Q1, 2 | 2SC2922*5 | Main amplifier final stage | |
| Q3, 4 | 2SA1216*5 | Main amplifier final stage | |
| Q5, 6 | 2SC4137 | Bias compensation | |
| Q7, 8 | 2SC2878(B) | Muting | |
| Q9, 10 | 2SC2878(B) | Muting | For the main input. |
| Q11, 13 | 2SC2878(B) | Muting | For the rear input. |
| Q12, 14 | 2SC2878(B) | Muting | For the center input. |
| Q21 | 2SD1266 | Constant voltage circuit | For the +15V power supply. |
| Q22 | 2SC945(A)(Q,P) | Constant voltage circuit | For the +15V power supply. Compatible with 2SC1740S(Q,R). |
| Q23, 24 | 2SD1266 | Constant voltage circuit | For the -15V power supply. |
| Q25 | 2SA733(A)(Q,P) | Constant voltage circuit | For the -15V power supply. Compatible with 2SA933S(Q,R). |
| Q26 | 2SC945(A)(Q,P) | Constant voltage circuit | For the +15V power supply. Compatible with 2SC1740S(Q,R). |
| Q27 | 2SA733(A)(Q,P) | Constant voltage circuit | For the -15V power supply. Compatible with 2SA933S(Q,R). |
| Q28 | 2SD1266 | Constant voltage circuit | For the motor VR +12V power supply. |
| Q29 | 2SC2003(L,K) | Ripple filter | For the tuner +5V. |
| Q30 | 2SA733(A)(Q,P) | Muting control | High mute. Compatible with 2SA933S(Q,R). |
| Q32 | 2SA733(A)(Q,P) | Muting control | Low mute. Compatible with 2SA933S(Q,R). |
| Q34, 35 | 2SA945(A)(Q,P) | IC control | For the IC15. Compatible with 2SC1740S(Q,R). |
| Q36, 37 | 2SA733(A)(Q,P) | IC control | For the IC15. Compatible with 2SA933S(Q,R). |
| Q38 | 2SA733(A)(Q,P) | Muting control | Low mute. Compatible with 2SA933S(Q,R). |
| IC1 | μPC4570C-A | Phono equalizer amplifier | |
| IC2 | TC9164N | Input select | |
| IC3, 4 | TC9163N | Input select | |
| IC5 | NJM4558D | Buffer amplifier | For the REC OUT signal. |
| IC6, 7 | μPC4570C-A | Buffer amplifier | |
| IC8, 9 | NJM4558D | Buffer amplifier | |
| IC10 | TC9176P | Electronic volume | Rear center volume. |
| IC11 | NJM4558D | Buffer amplifier | For the electronic volume. |
| IC12 | LC7522 | Electronic volume array | For the GE (Graphic equalizer) volume. |
| IC13, 14 | M5229P | OP amplifier | For the GE. |
| IC15 | LC4966 | Selector | GE ON/OFF. |
| IC16 | NJM4558D | Mixing amplifier | For the spectrum analyzer. |

1-4. SUB UNIT (X13-6370-10) (JAPAN MADE) (X13-6250-10) (SINGAPORE MADE)

| Ref. No. | Parts No. | Use/Function | Operation/Condition/Compatibility |
|----------|----------------|--------------------------|---|
| Q1 | 2SD882(Q,P) | Constant voltage circuit | For the +5V power supply. |
| Q2 | 2SB772(Q,P) | Constant voltage circuit | For the -5V power supply. |
| Q3 | 2SC945(A)(Q,P) | Synchronize separator | Compatible with 2SC1740S(Q,R). |
| Q4 | 2SA733(A)(Q,P) | Synchronize separator | Compatible with 2SA933S(Q,R). |
| Q5 | 2SC945(A)(Q,P) | Buffer amplifier | Compatible with 2SC1740S(Q,R). |
| Q6 | 2SC945(A)(Q,P) | Vertical detector | With buffer amplifier. Compatible with 2SC1740S(Q,R). |
| Q7 | 2SC945(A)(Q,P) | Horizontal detector | With buffer amplifier. Compatible with 2SC1740S(Q,R). |
| Q8 | 2SD882(Q,P) | Constant voltage circuit | For the +5V power supply. |
| Q9 | 2SB772(Q,P) | Constant voltage circuit | For the -5V power supply. |
| IC1 | μPA80C | Level converter | 0V → +5V, +5V → -5V. Active low. |
| IC2~4 | μPD4066BC | Video selector | When +5V, switch on. |
| IC5 | MB88323A-K2 | On screen IC | |
| IC6 | μPD4069UBC | Inverter | |
| IC7~11 | MC14577A | Video amplifier | |

CIRCUIT DESCRIPTION


1-5. DISPLAY UNIT (X14-2560-10) (JAPAN MADE) (X14-2700-10) (SINGAPORE MADE)

| Ref. No. | Parts No. | Use/Function | Operation/Condition/Compatibility |
|----------|----------------|--------------------|--|
| Q1 | 2SC945(A)(Q,P) | Reset circuit | Compatible with 2SC1740S(Q,R). |
| Q2 | 2SC945(A)(Q,P) | LED driver circuit | Dolby pro logic. Compatible with 2SC1740S(Q,R). |
| Q3 | 2SC945(A)(Q,P) | LED driver circuit | Theater. Compatible with 2SC1740S(Q,R). |
| Q4 | 2SC945(A)(Q,P) | LED driver circuit | Hall. Compatible with 2SC1740S(Q,R). |
| Q5 | 2SC945(A)(Q,P) | LED driver circuit | CD direct. Compatible with 2SC1740S(Q,R). |
| Q6 | 2SC945(A)(Q,P) | LED driver circuit | Volume. Compatible with 2SC1740S(Q,R). |
| Q7 | 2SA733(A)(Q,P) | FIP driver | Equalizer "ON". Compatible with 2SA933S(Q,R). |
| Q8 | 2SA733(A)(Q,P) | FIP driver | Video monitor "4". Compatible with 2SA933S(Q,R). |
| Q9 | 2SA733(A)(Q,P) | FIP driver | Video monitor "3". Compatible with 2SA933S(Q,R). |
| Q10 | 2SA733(A)(Q,P) | FIP driver | "CENTER". Compatible with 2SA933S(Q,R). |
| Q11 | 2SA733(A)(Q,P) | FIP driver | "REAR". Compatible with 2SA933S(Q,R). |
| Q12 | 2SC945(A)(Q,P) | FIP driver | FIP grid current buffer. Compatible with 2SC1740S(Q,R). |
| Q13, 14 | DTC124ES | FIP driver | FIP grid current buffer. |
| IC1 | μPD75116CW-074 | Microprocessor | Main microprocessor. |
| IC2, 3 | μPD7537ACU-220 | Microprocessor | Sub microprocessor, FIP driver and key loading. |
| IC4 | LC7565 | FIP driver | GE, spectrum analyzer and rear/center volume level display driver. |
| IC5, 6 | CXD1067P | I/O port | FIP/LED/Relay driver. For the volume motor and pro logic IC control. |
| IC7 | LB1641 | Motor driver | |
| IC8, 9 | NJM2058D | OP amplifier | Spectrum analyzer filter. Compatible with μPC4574C. |

1-6. MAIN AMPLIFIER UNIT (X89-109X-XX) 0-10 : K,U,UE 1-01 : P (JAPAN MADE) (X89-110X-XX) 0-10 : K,U,UE 1-01 : P (SINGAPORE MADE)

| Ref. No. | Parts No. | Use/Function | Operation/Condition/Compatibility |
|----------|----------------|-----------------------------|---|
| Q1~4 | 2SC1845(F,E) | 1st stage voltage amp | |
| Q5~8 | 2SC945(A)(Q,P) | 1st stage cascode amp | Compatible with 2SC1740S(Q,R). |
| Q9~12 | 2SC1845(F,E) | 2nd stage voltage amp | |
| Q13~16 | 2SA1123(R,S) | 3rd stage voltage amp | |
| Q17, 18 | 2SA1123(R,S) | 3rd stage cascode amp | |
| Q19, 20 | 2SC2631(R,S) | 3rd stage current mirror | |
| Q21, 22 | 2SC3944(Q,R) | Power amplifier driver | |
| Q23, 24 | 2SA1535(Q,R) | Power amplifier driver | |
| Q25, 26 | 2SC2631(R,S) | Protector, current detector | Positive (+) side. |
| Q27, 28 | 2SA992(F,E) | Protector, current detector | Negative (-) side. |
| Q29 | 2SA992(F,E) | Protector | Transmits the current detected signal to IC1. |
| IC1 | μPC1237HA | Protector | Relay drive. |


2. Microprocessor peripheral block diagram

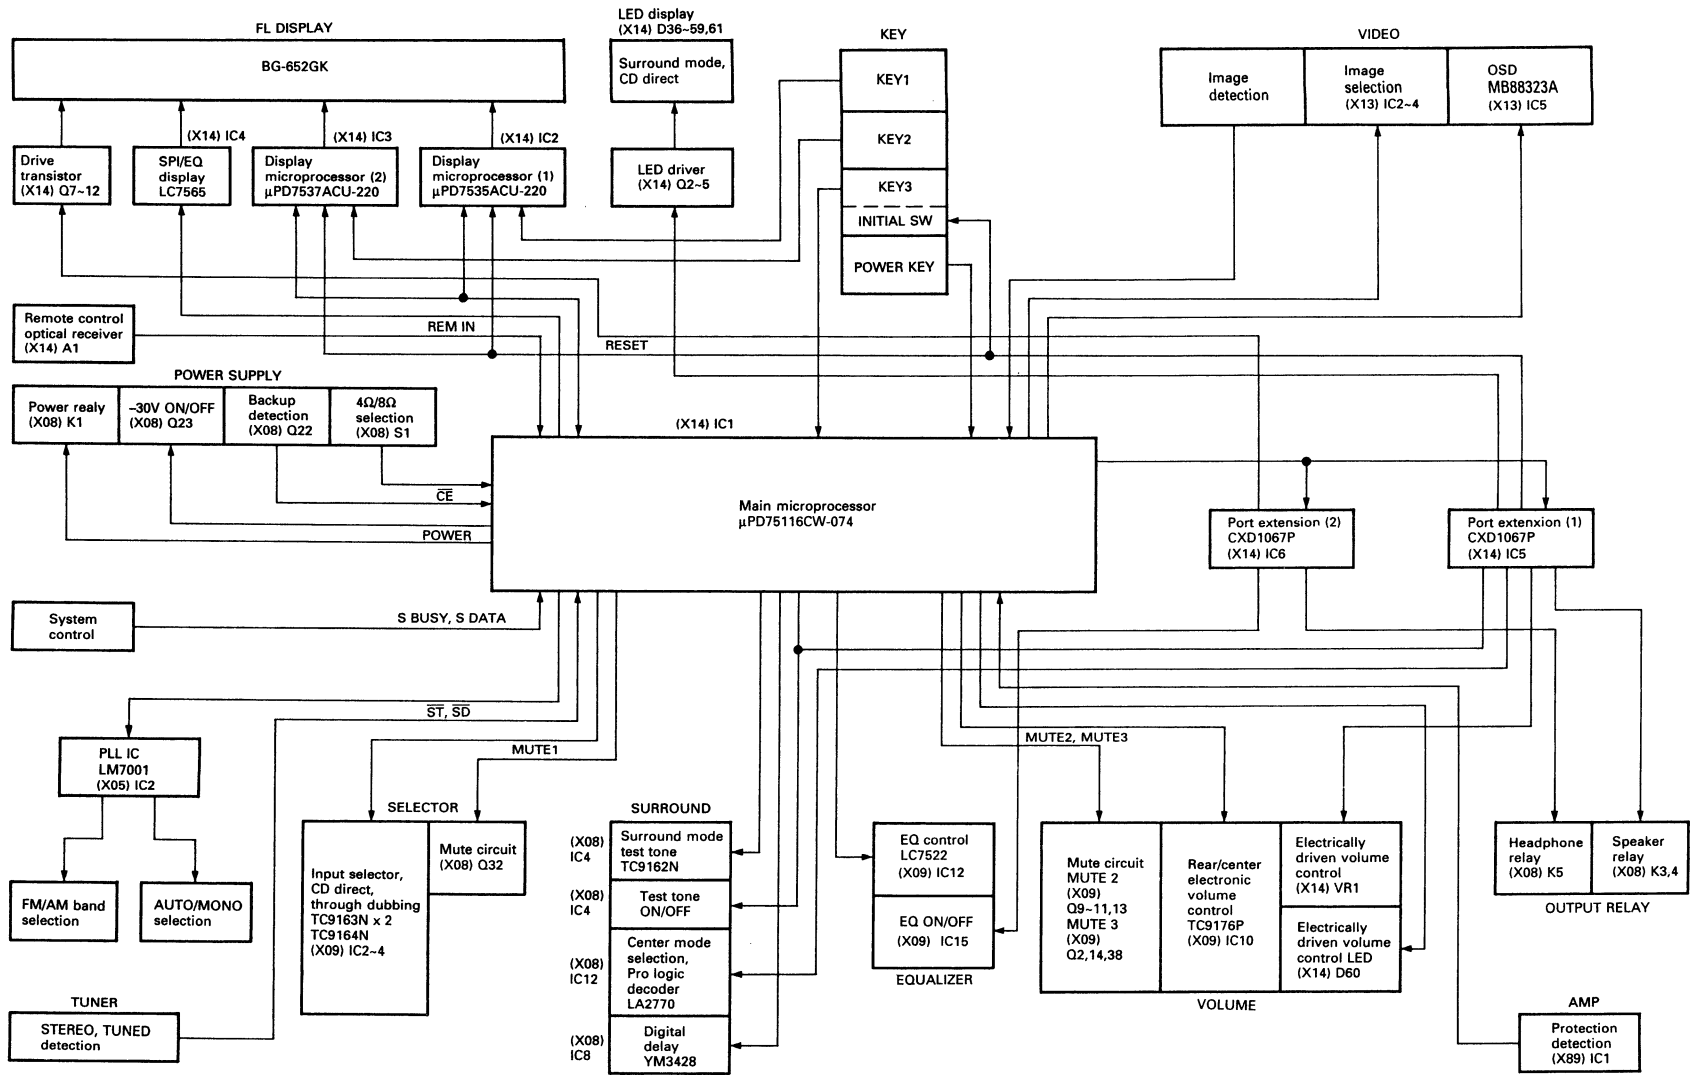

CIRCUIT DESCRIPTION

3. Main microprocessor : μ PD75116CW-074 (X14- : IC1)

3-1. Terminal connection diagram

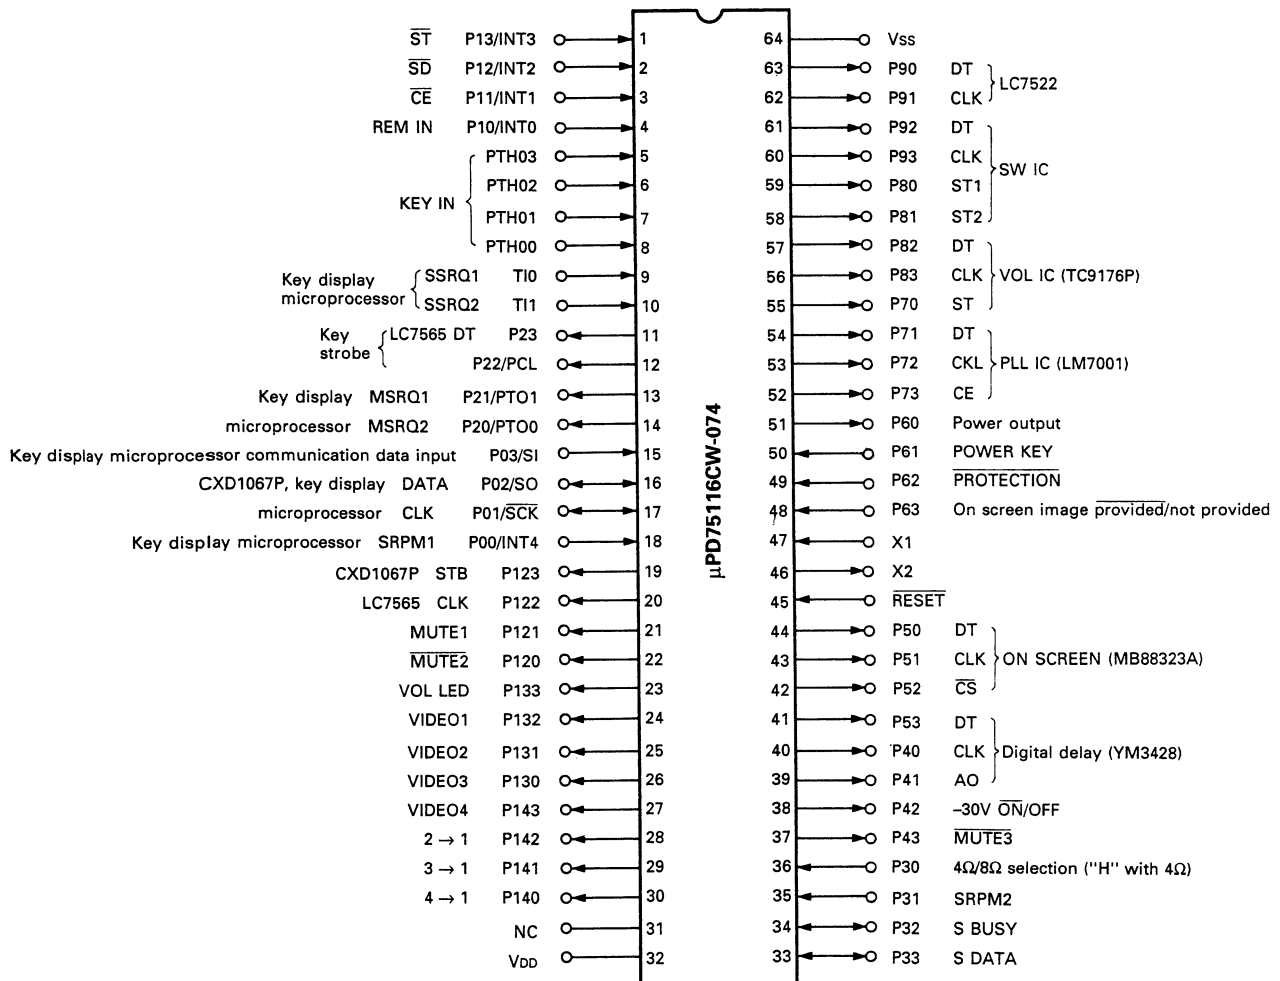

3-2. Key matrix

| I \ O | 0 | P22 (57) | P23 (56) | INISW1 | INISW2 |
|-----------|-----------------|----------|---------------|---|---|
| PTH03 (5) | | | CD DIRECT | SPI 0 : Not provided 1 : Provided | Upper limit of reception of AM 10kHz. 0 : 1610kHz 1 : 1700kHz |
| PTH02 (6) | REAR LEVEL DOWN | | M-1 | SURROUND TYPE 0 : DOLBY 1 : PRO LOGIC | JBAND 0 : Not provided 1 : Provided |
| PTH01 (7) | REAR LEVEL UP | | M-2 | Remote control selection 0 : Unified 1 : Learning | VIDEO INPUT 0 : System 3 1 : System 4 |
| PTH00 (8) | MUTE | | SYSTEM MEMORY | - | IBAND 0 : K 1 : E |

Tact switch

Initial setting diode matrix

CIRCUIT DESCRIPTION

3-3. Explanation of terminals

| Pin No. | Pin name | I/O | Symbol | Description |
|---------|-----------------------|---------------------------|-------------------------|--|
| 1 | P13/INT3 | I | \overline{ST} | Stereo signal input pin. With the TUNER position. with the selector set at "TUNER", when this pin is "L", "STEREO" is displayed. |
| 2 | P12/INT2 | I | \overline{SD} | Broadcast station existence/nonexistence detection signal input pin, which is used for auto tuning or programmed scan. At "L", "TUNED" is displayed. "H" : With station, "L" : Without station. |
| 3 | P11/INT1 | I | \overline{CE} | Backup detection pin. At "L", the backup mode is engaged to stop the clock. |
| 4 | P10/INT0 | I | REM IN | Pin to input the signal resultant from detecting the remote control signal. Normally or when reading leader codes, the level is detected. When reading data codes, an interrupt is applied at its fall for detection. |
| 5-8 | PTH03~PTH00 | I | KEY IN | Microprocessor key matrix signal input pins. Normally "L" (Threshold voltage > $V_{DD} \times 7.5/16$) (Exchange time = 32.3 μ s) |
| 9 | TI0 | I | SSRQ1 | Pin to input the communication request signal from display microprocessor (1). Normally "L", and "H" with communication request (when a pertinent key of display microprocessor (1) is pressed.) |
| 10 | TI1 | I | SSRQ2 | Pin to input the communication request signal from display microprocessor (2). Normally "L", and "H" with communication request (when a pertinent key of display microprocessor (2) is pressed.) |
| 11 | P23 | O (CMOS) | LC7565 DT Key strobe | Pin to output the DT signal to graphic equalizer IC LC7565. Main microprocessor key matrix strobe signal pin. Normally "L", and "H" when key is taken in. |
| 12 | P22/PCL | O (CMOS) | Key strobe | Main microprocessor key matrix strobe signal pin. Normally "L", and "H" when key is taken in. |
| 13 | P21/PTO1 | O (CMOS) | MSRQ1 | Pin to output the communication request signal from the main microprocessor to display microprocessor (1). Normally "L", and "H" with communication request (per 8 bits.) During power ON, pulse is output to transfer display data at all times. (Refer to the communication format for between master and slave.) |
| 14 | P20/PTO0 | O (CMOS) | MSRQ2 | Pin to output the communication request signal from the main microprocessor to display microprocessor (2). Same as MSRQ1 for the rest. |
| 15 | P03/SI | I | | Display microprocessor (1), (2) communication data input pin, to which the status data of the key matrix of each display microprocessor is input. |
| 16 | P02/SO | I/O | | Data output pin of port extension IC CXD1067P and display microprocessors (1) and (2). |
| 17 | P01/ \overline{SCK} | I/O | | Clock output pin of port extension IC CXD1067P and display microprocessors (1) and (2). Normally "H". During power ON, pulse is output to transfer display data at all times. |
| 18 | P00/INT4 | I | SRPM1 | Pin to input the communication acknowledge signal from display microprocessor (1). |
| 19 | P123 | O (N-ch open drain) | CXD1067P STB | Port extension IC CXD1067P latch signal output pin. Normally "L", and latch at "H". |
| 20 | P122 | O (N-ch open drain) | LC7565 CLK | Pin to output the clock signal to graphic equalizer display IC LC7565. Normally "L". |
| 21 | P121 | O (N-ch open drain) | MUTE1 | Pin to output a muting signal in input selection or during tuner scanning, etc. Normally "L", and active "H". |
| 22 | P120 | O (N-ch open drain) | MUTE2 | Pin to output a muting signal for audio muting or for such a selection as TAPE2 ON/OFF, EQ ON/OFF, EQ REC ON/OFF, etc. Normally "L", and active "H". |
| 23 | P133 | O (N-ch open drain) | VOL LED | Electrically driven volume control point indicator. Normally "H" (LED lights ON.) LED lights ON 4sec at power ON and flickers in ON/OFF interval of 500msec during muting. LED flickers in ON/OFF intervals of 64msec while volume is turned up or down by an electrically driven volume control from the remote control. |

CIRCUIT DESCRIPTION

| Pin No. | Pin name | I/O | Symbol | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|-----------------|---------------------------|-----------------|--|--------|--------|-------|-------------|-------|--|--|--|--|--|-------|---------------|------------------------|--------|--------|--------|--------|-------|-------|-------|----------|--------|-----|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|--------|-----|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|--------|-----|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|--------|-----|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|----------|--------|-----|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|--------|-----|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|--------|-----|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|-------|---|---|---|---|---|---|---|
| 24~26 | P132~P130 | O (N-ch open drain) | VIDEO1~VIDEO3 | Pins to control the video monitor and the video REC output of VIDEO1/ VIDEO2. Through dubbing is also involved. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 27 | P143 | | VIDEO4 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 28 | P142 | | 2 → 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 29 | P141 | | 3 → 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 30 | P140 | | 4 → 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <thead> <tr> <th colspan="3">Status</th> <th colspan="7">Port status</th> </tr> <tr> <th>Model</th> <th>Video monitor</th> <th>Through dubbing status</th> <th>VIDEO1</th> <th>VIDEO2</th> <th>VIDEO3</th> <th>VIDEO4</th> <th>2 → 1</th> <th>3 → 1</th> <th>4 → 1</th> </tr> </thead> <tbody> <tr> <td rowspan="16">KR-V9010</td> <td rowspan="4">VIDEO1</td> <td>OFF</td> <td>0</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>2 → 1</td> <td>0</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>3 → 1</td> <td>0</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>4 → 1</td> <td>0</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td rowspan="4">VIDEO2</td> <td>OFF</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>2 → 1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>3 → 1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>4 → 1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td rowspan="4">VIDEO3</td> <td>OFF</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>2 → 1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>3 → 1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>4 → 1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td rowspan="4">VIDEO4</td> <td>OFF</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>2 → 1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>3 → 1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>4 → 1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td rowspan="9">KR-V8010</td> <td rowspan="3">VIDEO1</td> <td>OFF</td> <td>1</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>2 → 1</td> <td>1</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>3 → 1</td> <td>1</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td rowspan="3">VIDEO2</td> <td>OFF</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>2 → 1</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>3 → 1</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td rowspan="3">VIDEO3</td> <td>OFF</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>2 → 1</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>3 → 1</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> </tr> </tbody> </table> | | | | | Status | | | Port status | | | | | | | Model | Video monitor | Through dubbing status | VIDEO1 | VIDEO2 | VIDEO3 | VIDEO4 | 2 → 1 | 3 → 1 | 4 → 1 | KR-V9010 | VIDEO1 | OFF | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 2 → 1 | 0 | 1 | 1 | 1 | 0 | 1 | 1 | 3 → 1 | 0 | 1 | 1 | 1 | 1 | 0 | 1 | 4 → 1 | 0 | 1 | 1 | 1 | 1 | 1 | 0 | VIDEO2 | OFF | 1 | 0 | 1 | 1 | 0 | 1 | 1 | 2 → 1 | 1 | 0 | 1 | 1 | 0 | 1 | 1 | 3 → 1 | 1 | 0 | 1 | 1 | 1 | 0 | 1 | 4 → 1 | 1 | 0 | 1 | 1 | 1 | 1 | 0 | VIDEO3 | OFF | 1 | 1 | 0 | 1 | 1 | 0 | 1 | 2 → 1 | 1 | 1 | 0 | 1 | 0 | 1 | 1 | 3 → 1 | 1 | 1 | 0 | 1 | 1 | 0 | 1 | 4 → 1 | 1 | 1 | 0 | 1 | 1 | 1 | 0 | VIDEO4 | OFF | 1 | 1 | 1 | 0 | 1 | 1 | 0 | 2 → 1 | 1 | 1 | 1 | 0 | 0 | 1 | 1 | 3 → 1 | 1 | 1 | 1 | 0 | 1 | 0 | 1 | 4 → 1 | 1 | 1 | 1 | 0 | 1 | 1 | 0 | KR-V8010 | VIDEO1 | OFF | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 2 → 1 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | 3 → 1 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | VIDEO2 | OFF | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 2 → 1 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 3 → 1 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | VIDEO3 | OFF | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 2 → 1 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 3 → 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 |
| Status | | | Port status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Model | Video monitor | Through dubbing status | VIDEO1 | VIDEO2 | VIDEO3 | VIDEO4 | 2 → 1 | 3 → 1 | 4 → 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| KR-V9010 | VIDEO1 | OFF | 0 | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 2 → 1 | 0 | 1 | 1 | 1 | 0 | 1 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 3 → 1 | 0 | 1 | 1 | 1 | 1 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 4 → 1 | 0 | 1 | 1 | 1 | 1 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | VIDEO2 | OFF | 1 | 0 | 1 | 1 | 0 | 1 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 2 → 1 | 1 | 0 | 1 | 1 | 0 | 1 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 3 → 1 | 1 | 0 | 1 | 1 | 1 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 4 → 1 | 1 | 0 | 1 | 1 | 1 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | VIDEO3 | OFF | 1 | 1 | 0 | 1 | 1 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 2 → 1 | 1 | 1 | 0 | 1 | 0 | 1 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 3 → 1 | 1 | 1 | 0 | 1 | 1 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 4 → 1 | 1 | 1 | 0 | 1 | 1 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | VIDEO4 | OFF | 1 | 1 | 1 | 0 | 1 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 2 → 1 | 1 | 1 | 1 | 0 | 0 | 1 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 3 → 1 | 1 | 1 | 1 | 0 | 1 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 4 → 1 | 1 | 1 | 1 | 0 | 1 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| KR-V8010 | VIDEO1 | OFF | 1 | 0 | 0 | 0 | 0 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 2 → 1 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 3 → 1 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | VIDEO2 | OFF | 0 | 1 | 0 | 0 | 0 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 2 → 1 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 3 → 1 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | VIDEO3 | OFF | 0 | 0 | 1 | 0 | 0 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 2 → 1 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 3 → 1 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 31 | NC | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 32 | V _{DD} | | | Microprocessor power supply pin. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 33 | P33 | I/O (CMOS) | SDATA | System serial communication DATA signal I/O pin. Normally, input mode is engaged. Only when serial data is output, output mode is engaged. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 34 | P32 | I/O (CMOS) | SBUSY | System serial communication BUSY signal I/O pin. Normally, input mode is engaged. Only when serial data is output, output mode is engaged. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 35 | P31 | I | SRPM2 | Pin to input the communication acknowledge signal from display microprocessor (2). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 36 | P30 | I | 4Ω/8Ω selection | Transformer tap selection switch input pin. "H" : 4Ω, "L" : 8Ω | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 37 | P43 | O (CMOS) | MUTE3 | CENTER REC OUT muting pin. Only for Normal or Wide mode of PRO LOGIC. Normally "L". Pulse is output in such a selection as TAPE2 ON/OFF, EQ ON/OFF, etc. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 38 | P42 | O (CMOS) | -30V ON/OFF | Pin to output the control signal to turn ON/OFF -30V of FL power to light the EQ/SPI display and other sections of the FL display concurrently. AN "H" signal is output about 500ms later after the power supply pin becomes "H". | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 39 | P41 | O (CMOS) | YM3428 AO | Digital delay IC YM3428 control signal output pins. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 40 | P40 | | YM3428 CLK | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 41 | P53 | | YM3428 DT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

CIRCUIT DESCRIPTION

| Pin No. | Pin name | I/O | Symbol | Description |
|---------|----------|-------------|--------------|---|
| 42 | P52 | O (CMOS) | MB88323A CS | OSD IC MB88323A control signal output pins. |
| 43 | P51 | | MB88323A CLK | |
| 44 | P50 | | MB88323A DT | |
| 45 | RESET | | | Microprocessor reset input pin. Normally "H". |
| 46 | X2 | O | | System clock oscillation pins (4.194MHz). |
| 47 | X1 | I | | |
| 48 | P63 | I | | OSD video signal existence/nonexistence detection input pin. "H" : Nonexistence, "L" : Existence. At "H" (nonexistence), the screen goes blue. |
| 49 | P62 | I | PROTECTION | Pin to input the protection signal detection when speaker is shorted. During power ON, when this pin becomes "L", the speaker relay is turned off and "PROTECTION" is displayed. At this time, any other key than the power key is invalid. |
| 50 | P61 | I | POWER KEY | Power key input pin. "H" with key ON. |
| 51 | P60 | O (CMOS) | POWER | Power relay control output pin. "H" : Power ON, "L" : Power OFF. |
| 52 | P73 | O (CMOS) | LM7001 CE | PLL IC LM7001 control signal output pins. |
| 53 | P72 | | LM7001 CLK | |
| 54 | P71 | | LM7001 DT | |
| 55 | P70 | O (CMOS) | TC9176P ST | Electronic volume control IC TC9176P control signal output pins. |
| 56 | P83 | | TC9176P CLK | |
| 57 | P82 | | TC9176P DT | |
| 58 | P81 | O (CMOS) | ST2 | Function switch IC control signal output pins. One TC9162N, one TC9164N and two TC9163N's are controlled by these four pins. CLK and DT are common to each IC. ST1 is used for TC9162N, TC9163N's and TC9164N. ST2 is used for TC9163N (IC4). |
| 59 | P80 | | ST1 | |
| 60 | P93 | | CLK | |
| 61 | P92 | | DT | |
| 62 | P91 | O (CMOS) | LC7522 CLK | EQ IC LC7522 control signal output pins. |
| 63 | P90 | | LC7522 DT | |
| 64 | Vss | | | GND pin. |

3-4. Port extension IC : CXD1067P (X14- : IC5, 6)

• Pin assignment of IC5

| | | | | | | |
|-------------|--------------------|------------------|--|--|---------------------------------------|----------|
| Output pins | P1 (1) | P2 (2) | P3 (3) | P4 (4) | P5 (5) | P6 (6) |
| Description | Speaker A relay | Speaker B relay | Electrically driven volume control volume up | Electrically driven volume control volume down | INI SW1 display micro-processor reset | INI SW2 |
| Output pins | P7 (7) | P8 (8) | P9 (9) | P10 (11) | P11 (12) | P12 (13) |
| Description | Rear speaker relay | TEST TONE ON/OFF | CENTER ON/OFF | NORMAL MODE | WIDE MODE | - |

• Pin assignment of IC6

| | | | | | | |
|-------------|-----------------|-----------------|---------------------|---------------------|-------------------|-----------------|
| Output pins | P1 (1) | P2 (2) | P3 (3) | P4 (4) | P5 (5) | P6 (6) |
| Description | FL "V4" display | FL "V3" display | FL "ON" display | FL "CENTER" display | FL "REAR" display | Headphone realy |
| Output pins | P7 (7) | P8 (8) | P9 (9) | P10 (11) | P11 (12) | P12 (13) |
| Description | EQ OFF | EQ ON | DOLBY PRO LOGIC LED | THEATER LED | HALL LED | CD DIRECT LED |

CIRCUIT DESCRIPTION

• Explanation of terminals (IC5)

| Pin No. | Pin name | I/O | Symbol | Description | | | | | | | | | | | | | | | | | | | | | | | | |
|-------------|----------|------|------------------|--|--|-----|--------|------|------------|-------------|--|--|--|--------|---|---|---|------|---|---|---|---------|---|---|---|------------|---|---|
| 1 | P1 | O | SPA | Speaker relay A control pin. ON : "H", OFF : "L" | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | P2 | O | SPB | Speaker relay B control pin. ON : "H", OFF : "L" | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | P3 | O | VOL UP | Electrically driven volume control volume up signal. Active "H" | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | P4 | O | VOL DOWN | Electrically driven volume control volume down signal. Active "H" | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | P5 | O | INISW1 | Initial setting switch take-in strobe signal. Display microprocessor reset signal (Temporarily "H" at power ON). | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | P6 | O | INISW2 | Initial setting switch take-in strobe signal. | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | P7 | O | REAR SP | Rear speaker relay control signal. ON : "H", OFF : "L" | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | P8 | O | TEST TONE ON/OFF | PRO LOGIC test tone ON/OFF control signal. ON : "L", OFF : "H" | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | P9 | O | CENTER ON/OFF | Three pins P9~P11 make outputs as follows, according to the internal CENTER mode status of the microprocessor with power ON independent of a SURROUND mode or the status of the SURROUND bypass. | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 | P10 | O | NORMAL | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | P11 | O | WIDE | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | <table border="1"> <thead> <tr> <th>Pin</th> <th>NORMAL</th> <th>WIDE</th> <th>CENTER OFF</th> </tr> </thead> <tbody> <tr> <td>CENTER mode</td> <td></td> <td></td> <td></td> </tr> <tr> <td>NORMAL</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>WIDE</td> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td>PHANTOM</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>CENTER OFF</td> <td>0</td> <td>0</td> <td>1</td> </tr> </tbody> </table> | Pin | NORMAL | WIDE | CENTER OFF | CENTER mode | | | | NORMAL | 1 | 0 | 0 | WIDE | 0 | 1 | 0 | PHANTOM | 0 | 0 | 0 | CENTER OFF | 0 | 0 |
| Pin | NORMAL | WIDE | CENTER OFF | | | | | | | | | | | | | | | | | | | | | | | | | |
| CENTER mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| NORMAL | 1 | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | |
| WIDE | 0 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | |
| PHANTOM | 0 | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | |
| CENTER OFF | 0 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | P12 | O | | Unused. | | | | | | | | | | | | | | | | | | | | | | | | |

• Explanation of terminals (IC6)

| Pin No. | Pin name | I/O | Symbol | Description | | | | | | | | | | | | | | | |
|--------------|----------|-------|-----------------|--|---|-----|--------|-------|--------|--|--|--------|---|---|-------|---|---|--------------|---|
| 1 | P1 | O | V4 | FL static display control pin. "H" : Goes out, "L" : Lights on. | | | | | | | | | | | | | | | |
| 2 | P2 | O | V3 | | | | | | | | | | | | | | | | |
| 3 | P3 | O | ON | | | | | | | | | | | | | | | | |
| 4 | P4 | O | CENTER | | | | | | | | | | | | | | | | |
| 5 | P5 | O | REAR | | | | | | | | | | | | | | | | |
| 6 | P6 | O | HEADPHONE | Headphone relay control pin. ON : "H", OFF : "L" | | | | | | | | | | | | | | | |
| 7 | P7 | O | EQ OFF | EQ ON/OFF control pin. | | | | | | | | | | | | | | | |
| 8 | P8 | O | EQ ON | | | | | | | | | | | | | | | | |
| | | | | | <table border="1"> <thead> <tr> <th>Pin</th> <th>EQ OFF</th> <th>EQ ON</th> </tr> </thead> <tbody> <tr> <td>Status</td> <td></td> <td></td> </tr> <tr> <td>EQ OFF</td> <td>1</td> <td>0</td> </tr> <tr> <td>EQ ON</td> <td>0</td> <td>1</td> </tr> <tr> <td>CD DIRECT ON</td> <td>0</td> <td>0</td> </tr> </tbody> </table> | Pin | EQ OFF | EQ ON | Status | | | EQ OFF | 1 | 0 | EQ ON | 0 | 1 | CD DIRECT ON | 0 |
| Pin | EQ OFF | EQ ON | | | | | | | | | | | | | | | | | |
| Status | | | | | | | | | | | | | | | | | | | |
| EQ OFF | 1 | 0 | | | | | | | | | | | | | | | | | |
| EQ ON | 0 | 1 | | | | | | | | | | | | | | | | | |
| CD DIRECT ON | 0 | 0 | | | | | | | | | | | | | | | | | |
| 9 | P9 | O | DOLBY PRO LOGIC | LED display pins. "H" : Lights on, "L" : Goes out | | | | | | | | | | | | | | | |
| 11 | P10 | O | THEATER | | | | | | | | | | | | | | | | |
| 12 | P11 | O | HALL | | | | | | | | | | | | | | | | |
| 13 | P12 | O | CD DIRECT | | | | | | | | | | | | | | | | |

KR-V9010

CIRCUIT DESCRIPTION

3-5. Switch IC : TC9164N, TC9163N (X09- : IC2 ~ 3), TC9162N (X08- : IC4)

• Assignment

| SW pins IC | S1 | S2 | S3 | S4 | S5 | S6 | S7 | S8 |
|-----------------------------|-------|-----------|-------------------------------|---------------------------|---------------------------|--------|--------|----------------------------|
| TC9164N (ST1) (X09-) IC2 | VIDEO | TUNER | TAPE1 | PHONO | $\overline{\text{TAPE2}}$ | TAPE2 | CD | CD DIRECT |
| TC9163N (ST1) (X09-) IC3 | 4 → 1 | 3 → 1 | 2 → 1 | VIDEO4 | VIDEO3 | VIDEO2 | VIDEO1 | $\overline{\text{V2 AI}}$ |
| TC9163N (ST2) (X09-) IC4 | HALL | PRO LOGIC | $\overline{\text{PRO LOGIC}}$ | $\overline{\text{TAPE1}}$ | V2 AI | V1 AI | EQ REC | $\overline{\text{EQ REC}}$ |

• TC9162N control

| Status | | L | | | | | | | R | | | | | | |
|----------------------|------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| | | S1 | S2 | S3 | S4 | S5 | S6 | S7 | S1 | S2 | S3 | S4 | S5 | S6 | S7 |
| TEST TONE ON | L ch (L) | 0 | - | - | 0 | - | - | - | - | 0 | 0 | - | 0 | - | - |
| | C ch (L+R) | 0 | - | - | 0 | - | - | - | - | 0 | - | 0 | - | 0 | 0 |
| | R ch (R) | 0 | - | - | 0 | - | - | - | - | 0 | 0 | - | - | - | 0 |
| | S ch (L-R) | 0 | - | - | 0 | - | - | 0 | - | 0 | - | 0 | 0 | - | 0 |
| KR-V9010 SURROUND | PRO ROGIC | - | 0 | - | 0 | - | - | 0 | 0 | - | - | - | - | - | - |
| | THEATER | - | - | 0 | - | - | 0 | - | - | - | - | - | - | - | - |
| | HALL | - | - | 0 | - | 0 | - | - | - | - | - | - | - | - | - |
| KR-V8010 SURROUND | DOLBY | - | - | - | 0 | - | 0 | - | - | - | - | - | - | - | - |
| | THEATER | - | - | 0 | - | - | 0 | - | - | - | - | - | - | - | - |
| | HALL | - | - | 0 | - | 0 | - | - | - | - | - | - | - | - | - |
| SURROUND BYPASS | | - | - | - | - | - | - | - | - | - | - | - | - | - | - |

0 : SW ON, - : SW OPEN

3-6. PLL IC : LM7001 (X05- : IC2) port assignment

| | BO1 (2) | BO3 (9) |
|------------------|---------|---------|
| FM | 1 | 0 |
| AM | 0 | 1 |
| Other than tuner | 0 | 0 |

| | BO2 (8) |
|------|---------|
| AUTO | 0 |
| MONO | 1 |

0 : Short 1 : Open

3-7. GE VR : LC7522 (X09- : IC12) control

S pin (13) = VEE

f1 = 60Hz ... f7 = 15kHz

3-8. EQ/SPI display IC : LC7565 (X14- : IC4) control

S1 pin (15) = VSS

S2 pin (16) = VSS

f1 = 60Hz ... f7 = 15kHz

3-9. Electronic volume control

: TC9176P (X09- : IC10) control


R side : Rear volume

L side : Center volume

CIRCUIT DESCRIPTION

4. Sub microprocessor (1) : μ PD7537ACU-220 (X14- : IC2)

4-1. Terminal connection diagram

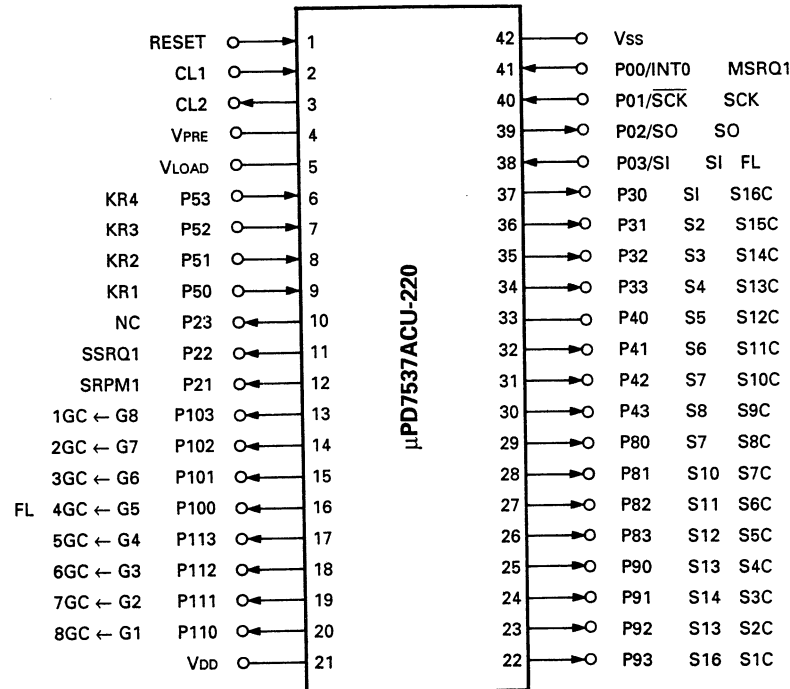

4-2. Key matrix (KEY1)

| 0 I | G1 P110 (20) | G2 P111 (19) | G3 P112 (18) | G4 P113 (17) | G5 P100 (16) | G6 P101 (15) | G7 P102 (14) | G8 P103 (13) |
|----------------|-----------------|-----------------|--------------------|-------------------------------|-----------------|--------------------|-----------------|-----------------|
| KR1 P50 (9) | EQ B | EQ C | EQ D | EQ f UP | EQ A | EQ DOWN | - | EQ f DOWN |
| KR2 P51 (8) | - | - | VIDEO4 (VIDEO3) | DOLBY PRO LOGIC (DOLBY) | HALL | SURROUND BYPASS | THEATER | SP A |
| KR3 P52 (7) | EQ MEMORY | SPI/EQ | EQ REC ON/OFF | EQ ON/DEFEAT | EQ UP | SP B | CHARACTER | DIRECT |
| KR4 P53 (6) | 6 | 1 | - | TUNING DOWN | AUTO/MANU. | TUNING UP | DIGIT | TUNER MEMORY |

() for KR-V8010

KR-V9010

CIRCUIT DESCRIPTION


4-3. Explanation of terminals

| Pin No. | Pin name | I/O | Symbol | Description |
|---------|-----------|--|---------|---|
| 1 | RESET | I | | Display microprocessor reset pin. Reset is applied by the INISW1 of extension IC CXD1057P which is controlled by the main microprocessor. |
| 2 | CL1 | I | | Display microprocessor system clock oscillation pins (600kHz). |
| 3 | CL2 | O | | |
| 4 | VPRE | | | Display pin predriver power supply pin. |
| 5 | VLOAD | | | Display pin load power supply pin (-30V). |
| 6~9 | P53~P50 | I | KR4~KR1 | Key matrix return signal input pins. |
| 10 | P23 | O | NC | Unused pin, which should be open. |
| 11 | P22 | O | SSRQ1 | Pin to output the communication request signal from the display microprocessor to the main microprocessor. Normally "L", and "H" with communication request (when a pertinent key of display microprocessor is pressed). |
| 12 | P21 | O | SRPM1 | Pin to input the communication acknowledge signal from the display microprocessor to the main microprocessor (per 8-bits). |
| 13~16 | P103~P100 | O (P-ch open drain, mask option, built-in resistor) | G8~G5 | FL grid control signal output pins (1GC~8GC of FL tube). |
| 17~20 | P113~P110 | | G4~G1 | |
| 21 | VDD | | | Power supply pin (+5V). |
| 22~25 | P93~P90 | O (P-ch open drain, mask option, built-in resistor) | S16~S13 | FL segment control signal output pins (S1C~S16C of FL tube). |
| 26~29 | P83~P80 | | S12~S9 | |
| 30~33 | P43~P40 | | S8~S5 | |
| 34~37 | P33~P30 | | S4~S1 | |
| 38 | P03/SI | I | SI | Pin to input the signal of communication with main microprocessor (display data input). |
| 39 | P02/SO | O | SO | Pin to output the signal of communication with main microprocessor (key data output). |
| 40 | P01/SCK | I | SCK | Pin to input the clock for communication with main microprocessor. |
| 41 | P00/INT0 | I | MSRQ1 | Pin to input the communication request signal from main microprocessor (per 8-bits). |
| 42 | Vss | | | GND pin. |

CIRCUIT DESCRIPTION

5. Sub microprocessor (2) : μ PD7537ACU-220 (X14- : IC3)

5-1. Terminal connection diagram

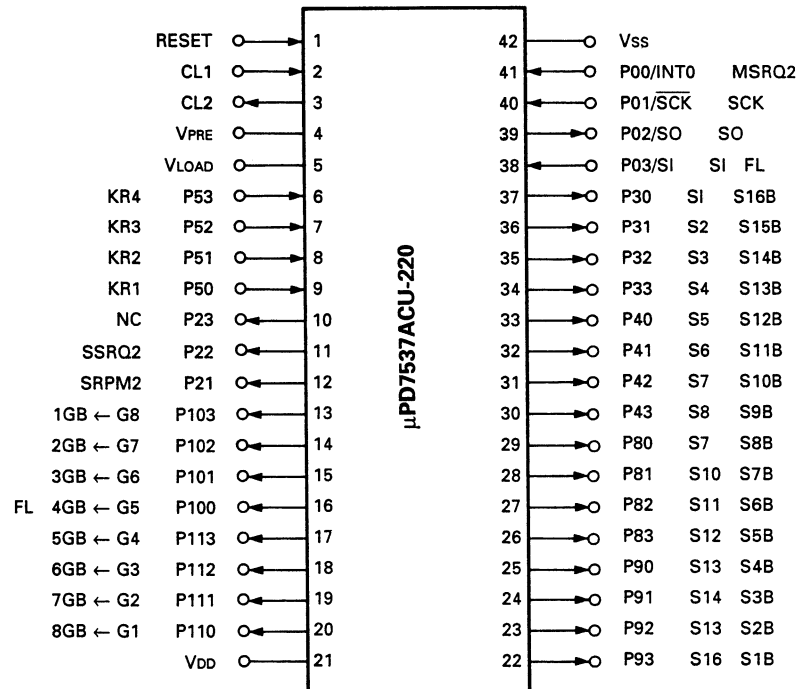

5-2. Key matrix (KEY2)

| 0 | G1 P110 (20) | G2 P111 (19) | G3 P112 (18) | G4 P113 (17) | G5 P100 (16) | G6 P101 (15) | G7 P102 (14) | G8 P103 (13) |
|----------------|--------------------|-----------------|--------------------|---------------------------|--------------------|-----------------|-----------------|-----------------|
| KR1 P50 (9) | CD (CD DIRECT) | 2 → 1 | PHONO (CD) | TUNER (PHONO) | TPE1 (TUNER) | 0/10 | 1-10/11-20 | 5 |
| KR2 P51 (8) | DELAY TIME DOWN | 3 → 1 | VIDEO1 (TAPE2) | THROUGH DUBBING OFF | TAPE2 (TAPE1) | 9 | P.SCAN | 4 |
| KR3 P52 (7) | CENTER DOWN | 4 → 1 | VIDEO3 (VIDEO2) | AUDIO INJECTION | VIDEO2 (VIDEO1) | 8 | AM | 3 |
| KR4 P53 (6) | CENTER MODE | CENTER UP | PGM/SET | DELAY TIME UP | EQ E | 7 | FM | 2 |

() for KR-V8010

KR-V9010

CIRCUIT DESCRIPTION

5-3. Explanation of terminals

| Pin No. | Pin name | I/O | Symbol | Description |
|---------|-----------|--|---------|---|
| 1 | RESET | I | | Display microprocessor reset pin. Reset is applied by the INISW1 of extension IC CXD1057P which is controlled by the main microprocessor. |
| 2 | CL1 | I | | Display microprocessor system clock oscillation pins (600kHz). |
| 3 | CL2 | O | | |
| 4 | VPRE | | | Display pin predriver power supply pin. |
| 5 | VLOAD | | | Display pin load power supply pin (-30V). |
| 6~9 | P53~P50 | I | KR4~KR1 | Key matrix return signal input pins. |
| 10 | P23 | O | NC | Unused pin, which should be open. |
| 11 | P22 | O | SSRQ2 | Pin to output the communication request signal from the display microprocessor to the main microprocessor. Normally "L", and "H" with communication request (when a pertinent key of display microprocessor is pressed). |
| 12 | P21 | O | SRPM2 | Pin to input the communication acknowledge signal from the display microprocessor to the main microprocessor (per 8-bits). |
| 13~16 | P103~P100 | O (P-ch open drain, mask option, built-in resistor) | G8~G5 | FL grid control signal output pins (1GB~8GB of FL tube). |
| 17~20 | P113~P110 | | G4~G1 | |
| 21 | VDD | | | Power supply pin (+5V). |
| 22~25 | P93~P90 | O (P-ch open drain, mask option, built-in resistor) | S16~S13 | FL segment control signal output pins (S1B~S16B of FL tube). |
| 26~29 | P83~P80 | | S12~S9 | |
| 30~33 | P43~P40 | | S8~S5 | |
| 34~37 | P33~P30 | | S4~S1 | |
| 38 | P03/SI | I | SI | Pin to input the signal of communication with main microprocessor (display data input). |
| 39 | P02/SO | O | SO | Pin to output the signal of communication with main microprocessor (key data output). |
| 40 | P01/SCK | I | SCK | Pin to input the clock for communication with main microprocessor. |
| 41 | P00/INT0 | I | MSRQ2 | Pin to input the communication request signal from main microprocessor (per 8-bits). |
| 42 | VSS | | | GND pin. |

CIRCUIT DESCRIPTION

6. Test mode

6-1. Setting by key on this unit itself

• Initial setting function

- 1) Setting method
While pressing the SYSTEM MEMORY key, plug in the power.
- 2) Contents
Every function is set to the initial status.

• Test mode setting

- 1) Setting method
While pressing the M1 key, plug in the power.
- 2) Canceling method
Plug out the power, then plug in the power again. In this case, however, the tuner's test frequency EQ memory is held.
- 3) Contents
· Tuner frequencies are set as follows

- EQ PGM memory setting
B : All max.
C : All min.
- FL and LEDs all light
However, the spectrum analyzer display, through dubbing display and rear/center display sections do not light.
This all lighting is canceled by operating an other key on this unit itself than the POWER key.
- Rear and center speaker volume up/down operation
3 points of +20dB, 0dB and -50dB
- Delay time up/down operation
With DOLBY SURROUND, 3 points of 30.0ms, 22.5ms and 15.0ms.
With THEATER SURROUND, 3 points of 30.0ms, 15.0ms and 0ms.
- EQ level up/down operation
3 points of +12dB, 0dB and -12dB.

| Channel | Destination | K | E |
|---------|-------------|-------------|--------------|
| 1 | FM | 87.5MHz | FM 87.5MHz |
| 2 | FM | 89.1MHz | FM 89.1MHz |
| 3 | FM | 90.0MHz | FM 90.0MHz |
| 4 | FM | 92.0MHz | FM 92.0MHz |
| 5 | FM | 94.0MHz | FM 94.0MHz |
| 6 | FM | 98.0MHz | FM 98.0MHz |
| 7 | FM | 100.1MHz | FM 100.1MHz |
| 8 | FM | 102.0MHz | FM 102.0MHz |
| 9 | FM | 106.0MHz | FM 106.0MHz |
| 10 | FM | 108.0MHz | FM 108.0MHz |
| 11 | AM | 530.0kHz | AM 531.0kHz |
| 12 | AM | 630.0kHz | AM 630.0kHz |
| 13 | AM | 990.0kHz | AM 990.0kHz |
| 14 | AM | 1440.0kHz | AM 1440.0kHz |
| 15 | AM | 1610.0kHz | AM 1602.0kHz |
| 16 | AM | (1700.0kHz) | |

1700kHz is set only with the WIDE mode.

KR-V9010

CIRCUIT DESCRIPTION

7. Compressor/Expander IC : μ PC1571C (X08- : IC6)

7-1. Analog converter circuit

The S/N ratio is lowered due to the digital delay circuit. To offset this, a noise reduction is applied.

The signal is compressed down to half the dynamic range by the compressor circuit and is passed through a digital delay circuit. After that, it is expanded to twice by the expander circuit to ensure the original dynamic range.

The μ PC1571C is a high-performance integrated circuit capable of constituting a high-precision analog converter by a lesser number of externally connected components.


Incorporated within one package are a reference voltage circuit and a two-fold operation amplifier, gain cell and rectifier.

This IC can be applied to a limiter, a voltage controlled amplifier, an ordinary home-use device noise reduction circuit, etc., including a compandor as in a telephone system.


7-2. Features

- Operation on single power, +6V to +16V
- With built-in identical circuits of 2 channels, a compandor can be formed by one package.
- Dynamic range, approx. 70dB
- Distortion rate adjustable

7-3. Standard transfer characteristics

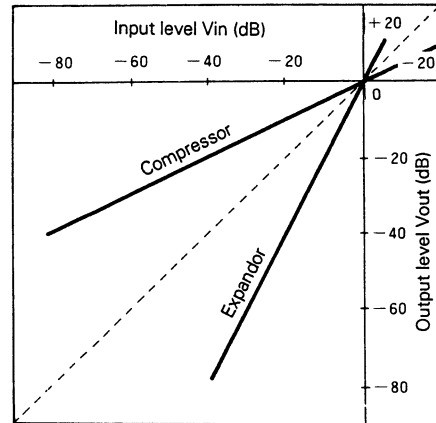

7-4. Standard application circuit example

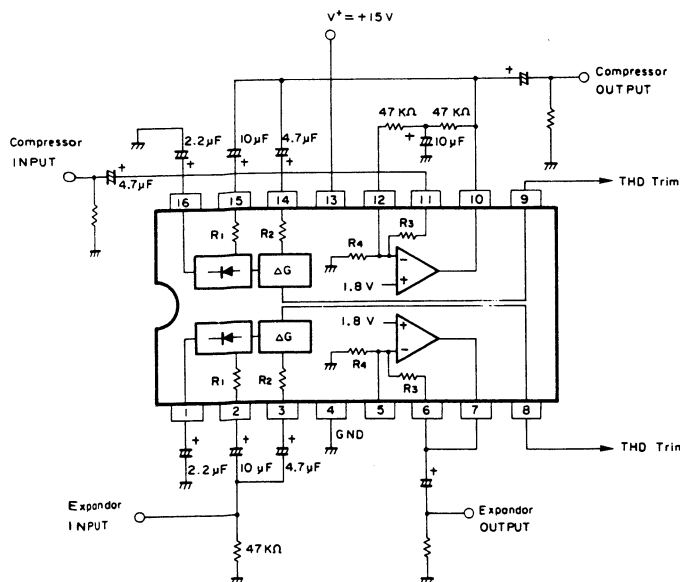


7-5. Description of terminals


| Pin No. | Function | Pin No. | Function |
|---------|----------------------|---------|----------------------|
| 1 | Crect1 | 9 | THD Trim 2 |
| 2 | Rect IN 1 | 10 | OUT 2 |
| 3 | Δ G Cell IN 1 | 11 | R ₃ 2 |
| 4 | GND | 12 | I ₁ 2 |
| 5 | I ₁ 1 | 13 | V _{cc} |
| 6 | R ₃ 1 | 14 | Δ G Cell IN 2 |
| 7 | OUT 1 | 15 | Rect IN 2 |
| 8 | THD Trim 1 | 16 | Crect2 |

CIRCUIT DESCRIPTION


7-6. Compressor application circuit example

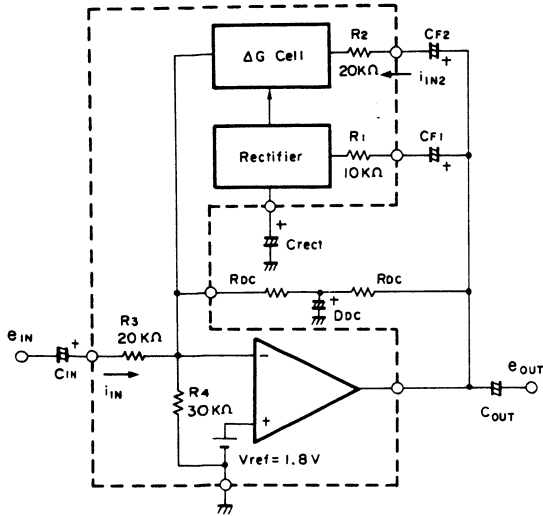

7-7. Operation as an expander

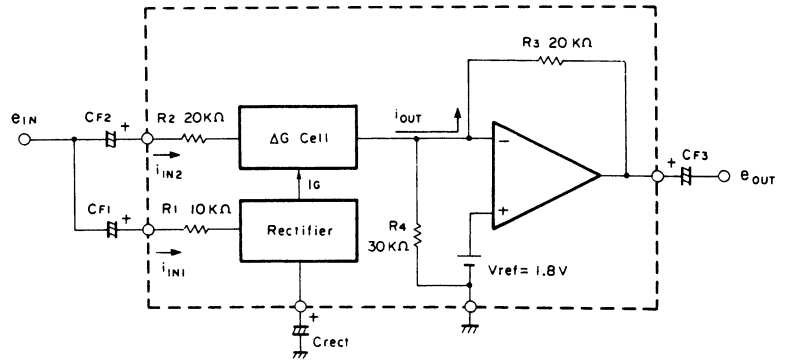

7-8. Theoretical values of head room and noise level with compressor/expander circuit

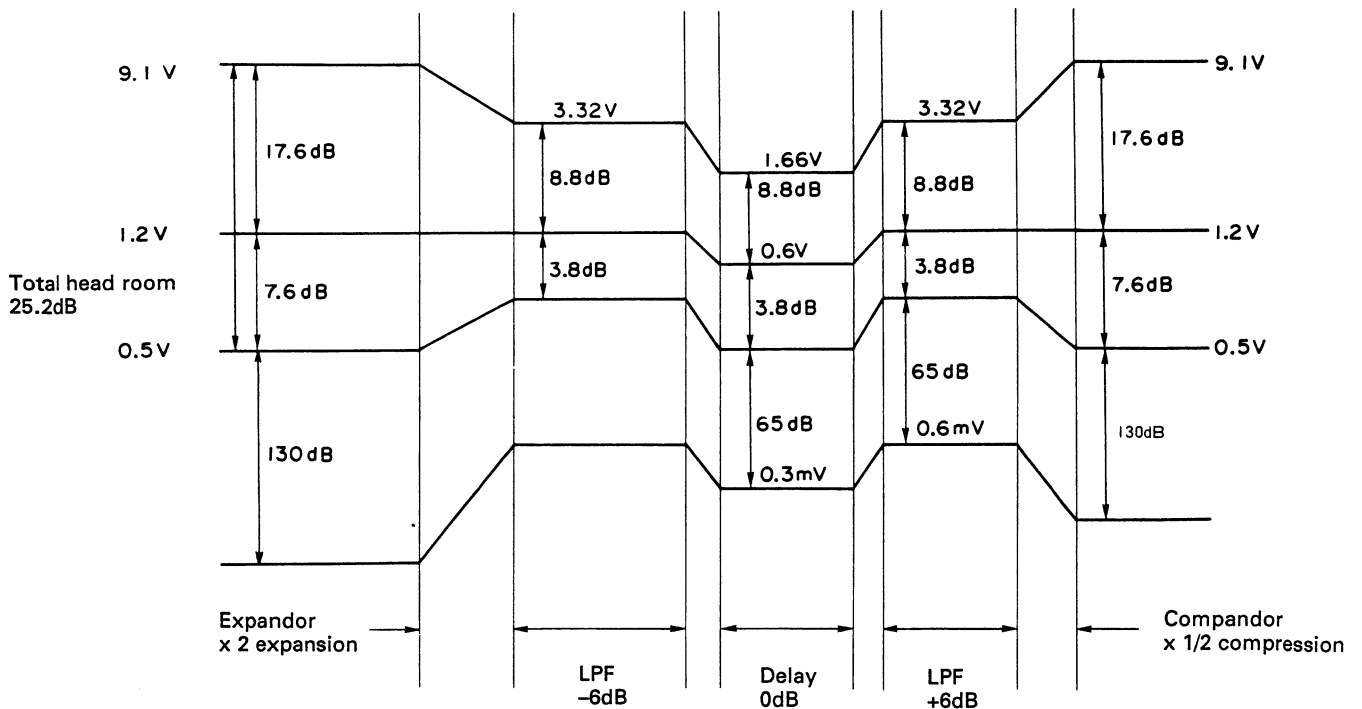

KR-V9010


CIRCUIT DESCRIPTION

8. Digital delay : YM3428 (X08 : IC8)

8-1. Outline

IC8, a one-chip delay with one input system and two output systems, is controlled by all microprocessor serial data. Its inside is of a 14-bit configuration, and a PCM modulation is used.

In this unit, one input system and one output system are used, upon which PRO LOGIC, THEATER or HALL the rear speaker output is emitted as a delay output from IC10 (2/2).

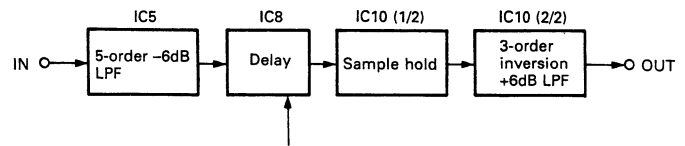

8-2. Function outline


As shown in the internal process flow of figure, the analog signal input from pin AIN is converted into a digital form of floating 14-bit at a sampling rate of 24.9kHz by an A/D converter operating in a 14-bit floating manner and is entered to the primary IIR type low pass filter on the next stage. (Concerning this filter, its cut-off frequency can be controlled by the entry of coefficients to registers A0, A1 and B1 from a microprocessor connected.)

The digital delay unit, an RAM with four output taps, permits selection between tap positions by registers DL0, DL1, DR0 and DR1.

The respective outputs of these four taps are entered to their corresponding digital volume units, where are in turn subject to a digital attenuation process on coefficients of volume registers CL0, CL1, CR0 and CR1. Subsequently, in adder circuits, they undergo an addition process of L0 + L1 and R0 + R1 and are input to quadruple oversampling digital filters, in which loopback noises occurring in D/A conversion outputs are then attenuated with a reject band property of about -25dB, thus helping the externally connected low pass filters. The digital input to a D/A converter receives a quadruple sampling rate of 99.4kHz.


As regards the actuality of this digital processing system, a DSP process is made by an ROM type program within an LSI.

For preset modes, necessary parameters are put in a ROM in order to obtain carefully intended characteristics without entry of coefficients from a personal computer.

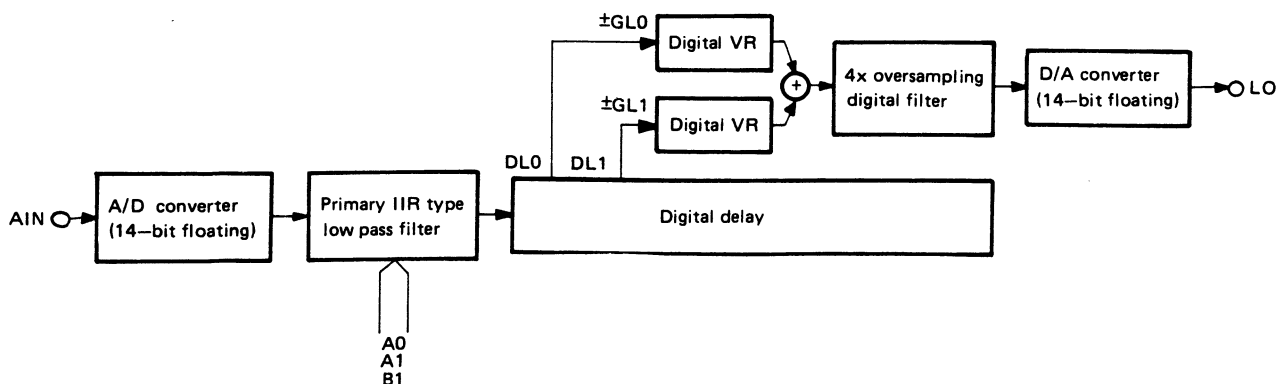


CIRCUIT DESCRIPTION

8-3. Terminal connection diagram

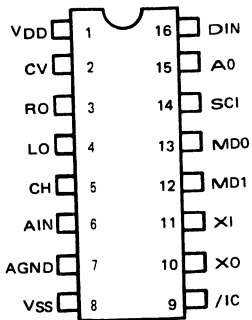

8-4. Block diagram

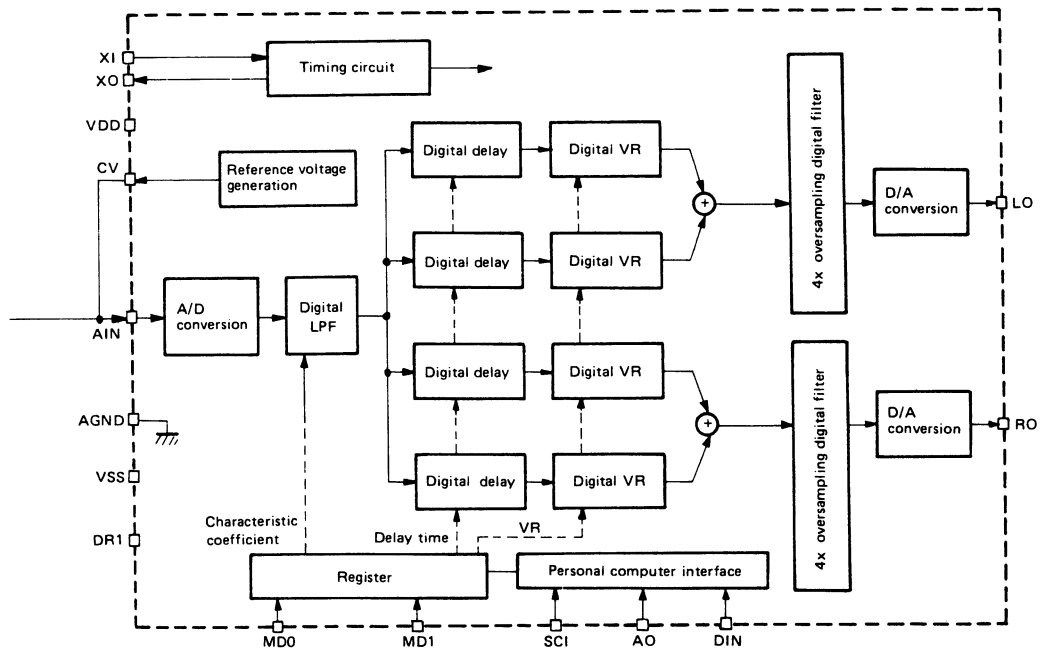

8-5. Explanation of terminals

| Pin No. | Pin name | I/O | Description |
|---------|----------|-----|---|
| 1 | VDD | - | +5V current. |
| 2 | CV | O | A/D conversion reference voltage (+2.5V) output pin. |
| 3 | RO | O | R-ch output pin (D/A conversion analog output). |
| 4 | LO | O | L-ch output pin (D/A conversion analog output). |
| 5 | CH | O | Sample-hold capacitor external connection pin. |
| 6 | AIN | I | Analog signal input pin (input with the reference of the CV voltage). |
| 7 | AGND | - | Grounding pin of A/D and D/A converter sections (Needs to be connected with Vss outside). |
| 8 | Vss | - | System grounding pin of digital system and the LSI. |
| 9 | /IC | *I | Reset pin. |
| 10 | XO | O | X'tal oscillator connection pins. |
| 11 | XI | I | (XI is the clock input pin when personal computer is used.) |
| 12 | MD1 | *I | Mode setting pins. |
| 13 | MD0 | *I | |
| 14 | SCI | I | Data shift clock input pin when personal computer is used. |
| 15 | AO | I | Address/data identification signal input pin when personal computer is used. |
| 16 | DIN | I | Data input pin when personal computer is used. |

Any pin marked with * has a pull-up resistor connected.

KR-V9010

CIRCUIT DESCRIPTION

9. Dolby B type noise reduction

: LA2730 (X08- : IC9)

9-1. Outline

This noise reduction circuit is completely different from Dolby B for cassette decks in respect to frequency characteristic.


With 500mV = 0dB at Dolby level point 6, a gain control is made by IC6 in IN so as to obtain the same level as in OUT so that IN is of 500mV = 0dB.

Table shows input vs. output characteristics.


9-2. Modified B type processor decode characteristics

| Hz \ dB | 100 | 200 | 500 | 700 | 1.0K | 1.4k | 2.0k | 3.0k | 5.0k | 7.0k | 10.0k |
|---------|-----|-----|------|------|------|------|------|------|------|------|-------|
| 0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 |
| -5 | 0.0 | 0.0 | -0.1 | -0.1 | -0.1 | -0.1 | -0.1 | -0.1 | -0.1 | -0.1 | -0.1 |
| -10 | 0.0 | 0.0 | -0.3 | -0.4 | -0.4 | -0.4 | -0.3 | -0.3 | -0.3 | -0.3 | -0.3 |
| -15 | 0.0 | 0.0 | -0.8 | -1.1 | -1.4 | -1.3 | -1.2 | -0.9 | -0.7 | -0.7 | -0.7 |
| -20 | 0.0 | 0.0 | -0.8 | -1.6 | -2.4 | -3.0 | -3.0 | -2.4 | -1.7 | -1.5 | -1.4 |
| -25 | 0.0 | 0.0 | -0.9 | -1.7 | -2.8 | -3.8 | -4.6 | -4.9 | -4.1 | -3.4 | -2.9 |
| -30 | 0.0 | 0.0 | -1.0 | -1.7 | -2.9 | -4.0 | -5.0 | -5.4 | -5.4 | -5.6 | -5.2 |
| -35 | 0.0 | 0.0 | -1.0 | -1.7 | -2.9 | -4.0 | -5.0 | -5.5 | -5.6 | -5.8 | -5.7 |
| -40 | 0.0 | 0.0 | -1.0 | -1.7 | -2.9 | -4.0 | -5.0 | -5.5 | -5.7 | -5.8 | -5.8 |

9-3. Terminal connection diagram

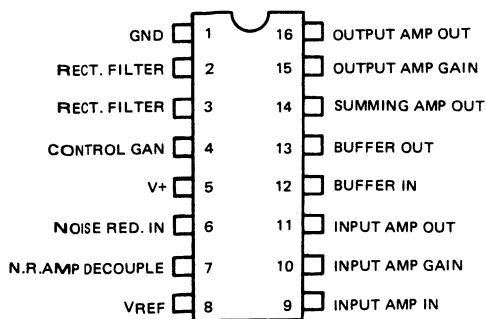

9-4. Block diagram

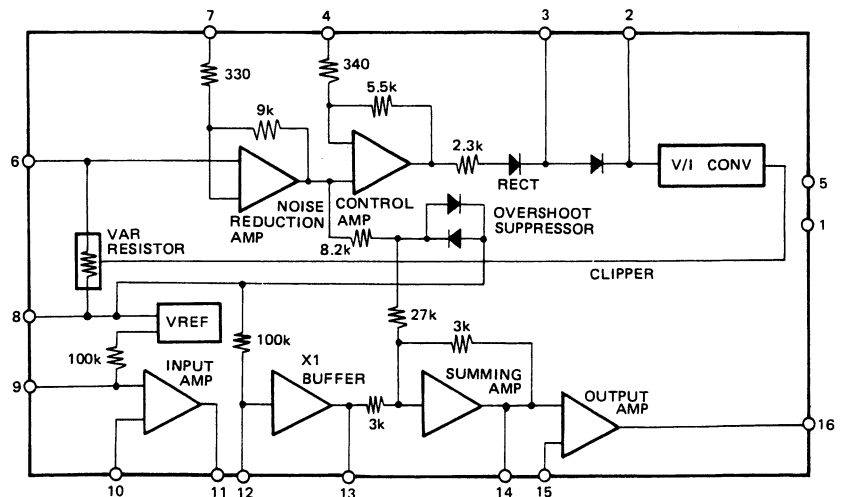

CIRCUIT DESCRIPTION

10. Display controller CMOS LSI

: MB88323A-K2 (X13- : IC5)

10-1. Outline

The MB88323A-K2 is a display controller CMOS LSI to display characters and graphic patterns on the TV display under the control from the microprocessor. The display size is 20 characters x 9 lines.


This LSI with a built-in character generator ROM creating 64 kinds of characters is capable of displaying alphanumeric characters and special characters.

Moreover, this LSI has a built-in character generator RAM creating programmable 62 kinds of characters, too. With character patterns set in this RAM, it is also capable of a wide variety of usages such as semi-graphic displays, etc. by combining character patterns in sequence, including alphanumeric characters and special characters.


This LSI is also provided with a dot interpolation feature for fineness of oblique lines and can expand the character size for example to 16 x 16 dots in units of 8 dots.

This display output can be combined with the TV picture signal or the VTR output signal, and that combined image can be recorded to a VTR.

10-2. Terminal connection diagram

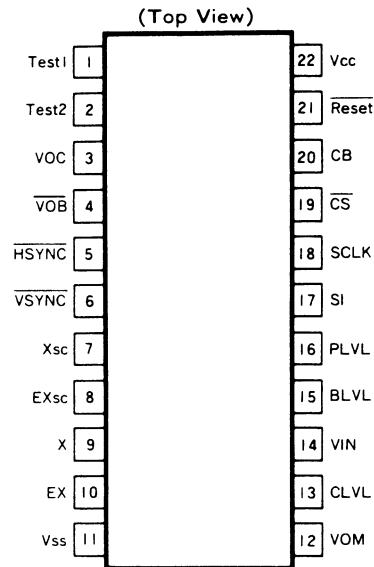

10-3. Block diagram

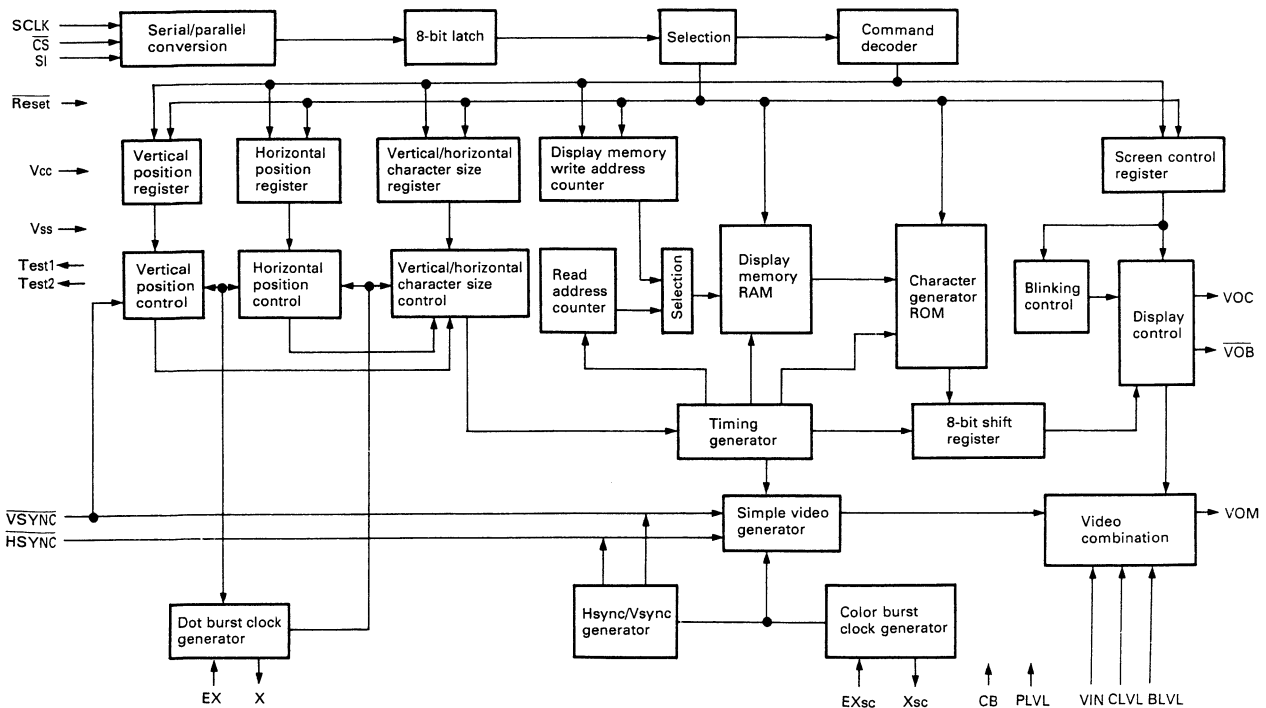

KR-V9010

CIRCUIT DESCRIPTION

10-4. Explanation of terminals

| Symbol | Pin No. | I/O | Function |
|---------------------------|---------|-----|--|
| EXtal | 10 | I | Pins to externally connect the dot clock pulse generator. |
| Xtal | 9 | O | |
| $\overline{\text{Reset}}$ | 21 | I | TVDC reset input. With $\overline{\text{Reset}}$ "L", TVDC is initialized. For power ON, the vertical sync signal must be input to the VSYNC pin. Hysteresis input. |
| HSYNC | 5 | I | Horizontal sync signal input. Hysteresis input. |
| VSYNC | 6 | I | Vertical sync signal input. Hysteresis input. |
| $\overline{\text{CS}}$ | 19 | I | Chip select input, which becomes "L" for serial transfer. Hysteresis input. |
| SCLK | 18 | I | Shift clock pulse input for serial transfer. Hysteresis input. (At its rise, SI read in.) |
| SI | 17 | I | Data input for display control. Hysteresis input. (8-bit serial data) |
| VIN | 14 | I | Video signal input. (Analog input) |
| CLVL | 13 | I | Character level input. (Analog input) |
| VOM | 12 | O | Combined signal output of video signal, character signal and outline or background signal. (Analog output) |
| VOC | 3 | O | Character signal output. |
| $\overline{\text{VOB}}$ | 4 | O | Outline or background signal output. |
| EXsc | 8 | I | Pins to externally connect color burst (7.15909MHz or 14.31818MHz) clock pulse generator. |
| Xsc | 7 | O | |
| CB | 20 | I | Selection between existence and nonexistence of color burst signal when video mode 2 is engaged. |
| PLVL | 16 | I | Pedestal level input, which when video mode 2 is engaged serves to match the pedestal level of the internal simple video signal and that of the external video signal. |
| Vcc | 22 | I | +5V power supply external connection pin. |
| Vss | 11 | I | Ground pin. |
| Test 1 | 1 | O | Chip test pin. |
| Test 2 | 2 | O | Normally open. |


10-5. For superimposing characters in external video signal

The video signal input from pin 14 is output to pin 12 (VOM) through analog switch ③, in which way analog switch ③ turns OFF and switch ② turns ON at a position at which characters are superimposed.

At this time, the voltage at pin 15 is output to VOM. When this voltage level is lower, the black signal appears.

Subsequently, switch ② turns OFF and ④ turns ON. Thus, the level of pin 13 is higher than pin 15, in which case a signal near to white appears.


Like this, by the ON/OFF operation of analog switches ②, ③ and ④, signals of two different levels (character signal and character outline signal) are superimposed on the video signal.

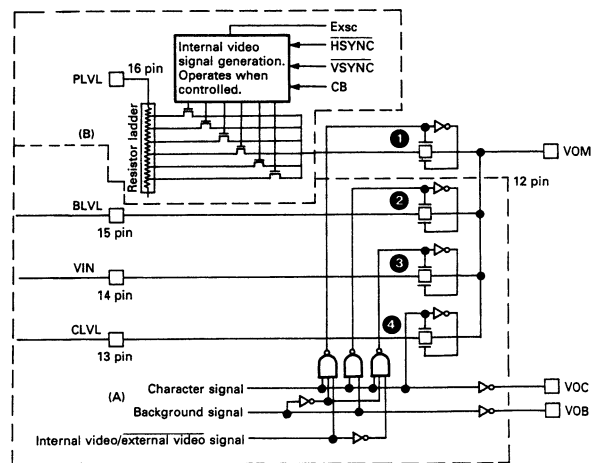

CIRCUIT DESCRIPTION

10-6. For generating internal video signal

When no video signal is input, an IC generates video signal to output it. At this time, analog switch ① turns ON and the rest turn OFF. The internal video signal is generated from the dividing process of frequency 7.15909MHz (twice the frequency of the color subcarrier).

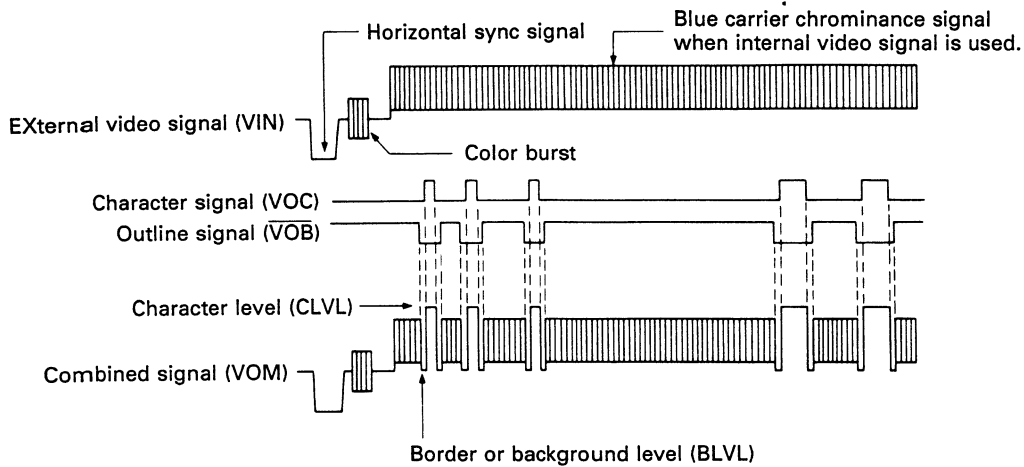


10-7. Data transfer method and command write method

The display control command and data writing is performed in a manner of 8-bit serial transfer.

For serial transfer, the \overline{CS} pin is made "L". While the \overline{CS} pin is "L", any data whatever in the first byte, the second byte ... the nth byte of each command can be transferred.

The data, of 8-bit length, is shifted and input to the SI pin in order from the LSB. As shown in figure, at the rise of the shift clock pulse input to the SCLK pin, data is taken in and shifted. At the rise of a shift clock pulse corresponding to the eighth bit, the transferred data is latched in.

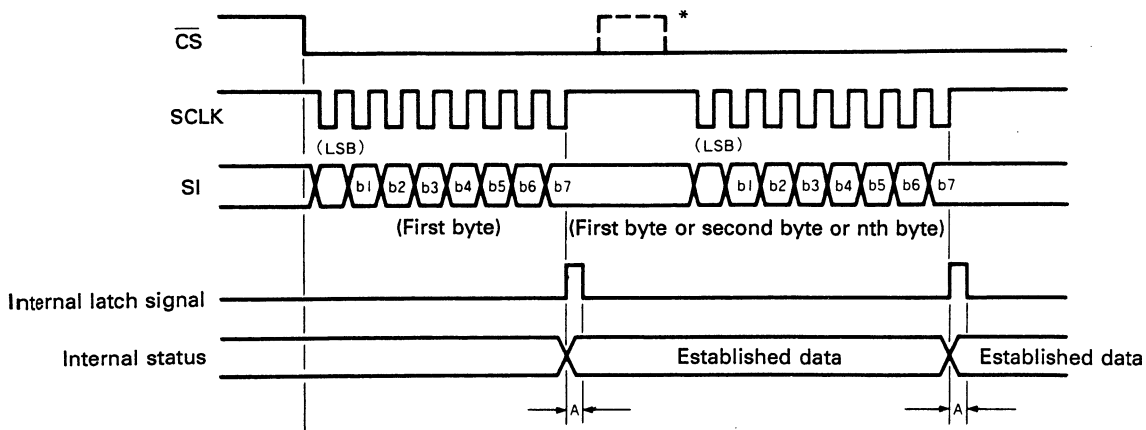

* There is another available method. For byte synchronization, the \overline{CS} pin is returned to "H" once during serial data transfer, after which the \overline{CS} pin is set to "L" again.

Serial transfer timing

KR-V9010

CIRCUIT DESCRIPTION

11. PRO LOGIC IC : LA2770 (X08- : IC12)


11-1. General

The LA2770 is a decoder IC for Dolby pro-logic surround effect systems, featuring adaptive matrix and center mode control functions. Dolby surround effect encoded signals are input to the IC through two channels and are decoded into I.C.R. and S. four-channel signals. A complete Dolby pro-logic surround decoder can be built by combining the IC with an input balancer, noise sequencer, delay circuit 7kHz low-pass filter, modified Dolby noise reduction circuit, and a master output level control.


11-2. Functions

- Full-function adaptive matrix (input buffer, BPF, full-wave rectifier, logarithmic differential amplifier, threshold switch, dual time constant, polarity splitter, VCA, and combining network)
- Center mode selection (normal/phantom/wide)
- Center on/off selection
- SUR off mode

11-3. Explanation of Dolby pro-logic operation

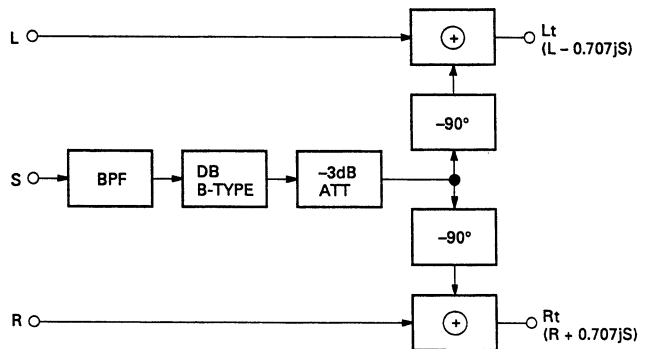

11-4. Block diagram

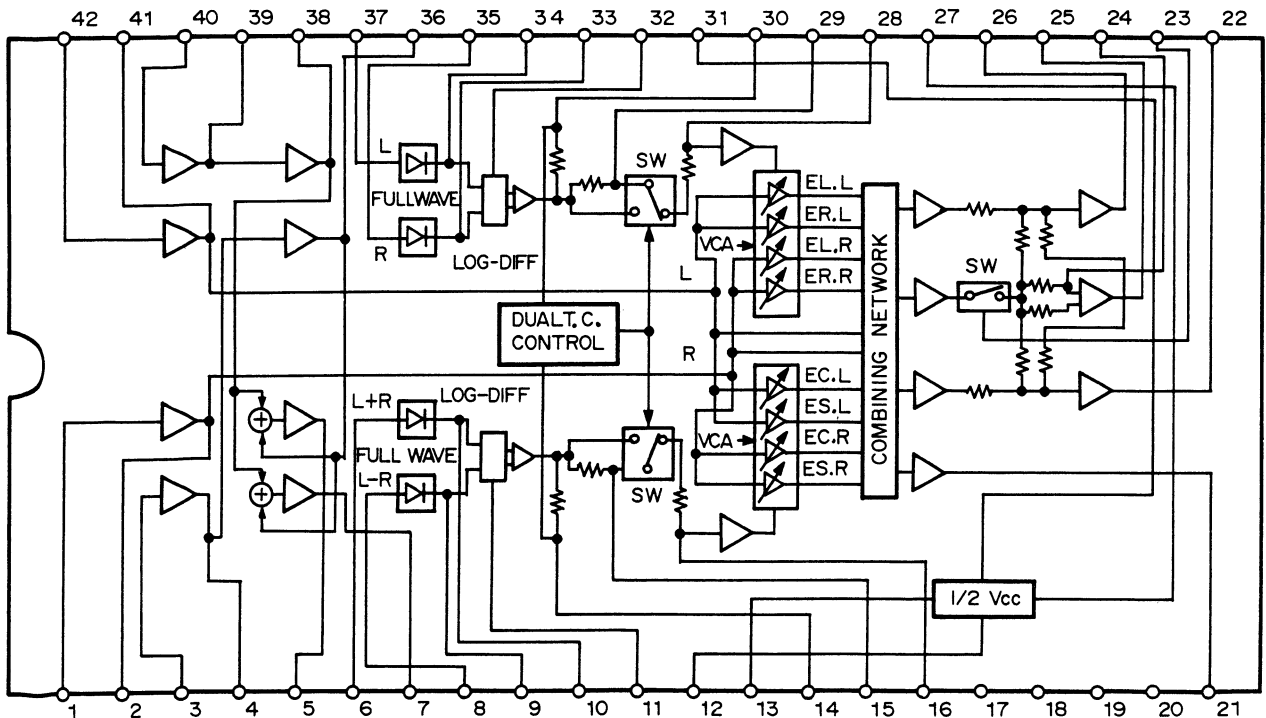

ADJUSTMENT

| No. | ITEM | INPUT SETTINGS | OUTPUT SETTINGS | TUNER SETTINGS | ALIGNMENT POINTS | ALIGN FOR | FIG. |
|---|-------------------------------|--|--|-------------------------|----------------------------|---|------|
| FM SECTION SELECTOR: FM | | | | | | | |
| 1 | DETECTOR | (A) 98.0MHz 1kHz, ±75kHz dev 60dBμ(Ant input) | Connect a DC voltmeter between TP3 and TP4. | AUTO or MONO 98.0MHz | L4 (X05-) | 0V | (a) |
| 2 | DISTORTION (MONO) | (C) 98.0MHz 1kHz, ±68.25kHz dev Selector: L or R Pilot: ±6.75kHz dev 60dBμ(Ant input) | (B) | 98.0MHz | L5 (X05-) | Minimum distortion. | |
| 3 | VCO | (A) 98.0MHz 0 dev 100dBμ(Ant input) | Connect a frequency counter between TP5 and GND. | AUTO 98.0MHz | VR3 (X05-) | 19.00kHz | (b) |
| 4 | DISTORTION (STEREO) | (C) 98.0MHz 1kHz, ±68.25kHz dev Selector: L or R Pilot: ±6.75kHz dev 60dBμ(Ant input) | (B) | 98.0MHz | IFT (Front end) | Minimum distortion. | |
| 5 | SEPARATION (E Type) | (C) 98.0MHz Stereo signal 60dBμ(Ant input) | (B) | AUTO 98.0MHz | VR4 (X05-) | Minimum crosstalk. | |
| 6 | TUNING LEVEL | (A) 98.0MHz 0 dev 14dBμ(Ant input) 75μ | (B) | AUTO or MONO 98.0MHz | VR1 (X05-) | Adjust VR1 and stop at the point where FL1(TUNED) goes on. | |
| AM SECTION Keep the AM loop antenna installed. SELECTOR: AM | | | | | | | |
| (1) | BAND EDGE (Low) | - | Connect a DC voltmeter between TP1(GND) and TP2. | - | L9 (X05-) | 1.5V | (c) |
| (2) | BAND EDGE (High) | - | Connect a DC voltmeter between TP1(GND) and TP2. | - | TC2 (X05-) | 8.0V | (c) |
| Repeat alignments (1) and (2) several times. | | | | | | | |
| (3) | RF ALIGNMENT (1) | (D) 600kHz 20dBμ(Ant input) | (B) | - | L8 (X05-) | Maximum amplitude and symmetry of the oscilloscope display. | |
| (4) | RF ALIGNMENT (2) | (D) 1400kHz 20dBμ(Ant input) | (B) | - | TC1 (X05-) | Maximum amplitude and symmetry of the oscilloscope display. | |
| Repeat alignments (3) and (4) several times. | | | | | | | |
| (5) | IF TRANSFORMER | (D) 1000kHz 20dBμ(Ant input) | (B) | - | L10 (X05-) | Maximum amplitude and symmetry of the oscilloscope display. | |
| (6) | TUNING LEVEL | (D) 1000kHz 36dBμ(Ant input) | (B) | - | VR2 (X05-) | Adjust VR2 and stop at the point where FL1(TUNED) goes on. | |
| AUDIO SECTION | | | | | | | |
| [1] | IDLE CURRENT | - | (E) Connect a DC voltmeter across CP1(L) CP2(R) | Volume: 0 | VR1(L) VR2(R) (X89-) | 10mV | (d) |
| [2] | SURROUND PRO LOGIC ADJUSTMENT | - | Connect a AC voltmeter between TP10 and GND. | TEST TONE ON | VR1 (X08-) | Noise level 60mV | (e) |

KR-V9010

REGLAGE

| N° | ITEM | REGLAGE DE L'ENTREE | REGLAGE DE LA SORTIE | REGLAGE DU TUNER | POINT DE L'ALIGNEMENT | ALIGNER POUR | FIG. |
|---|---|---|---|----------------------------|----------------------------|---|------|
| SECTION MF SELECTEUR : FM | | | | | | | |
| 1 | DETECTEUR | (A) 98,0MHz 1kHz. ±75kHz dév 60dBμ(Entrée ANT) | Relier un voltmètre CC entre les TP3 et TP4. | AUTO ou MONO 98,0MHz | L4 (X05-) | 0V | (a) |
| 2 | DISTORSION (MONO) | (C) 98,0MHz 1kHz. 68, 25kHz dév Selection: l ou R Signal pilote: ±6,75kHz dév 60dBμ(Entrée ANT) | (B) | 98,0MHz | L5 (X05-) | Distorsion minimale. | |
| 3 | OSCILLATEUR CONTROLE PAR LA TENSION | (A) 98,0MHz 0 dév 100dBμ(Entrée ANT) | Relier un compteur de fréquence entre les TP5 et GND. | AUTO 98,0MHz | VR3 (X05-) | 19,00kHz | (b) |
| 4 | DISTORSION (STEREO) | (C) 98,0MHz 1kHz. 68, 25kHz dév Selection: l ou R Signal pilote: ±6,75kHz dév 60dBμ(Entrée ANT) | (B) | 98,0MHz | Tête H.F. IFT (X05-) | Distorsion minimale. | |
| 5 | SEPARATION (E type) | (C) 98,0MHz Signal stéréo 60dBμ(Entrée ANT) | (B) | AUTO 98,0MHz | VR4 (X05-) | Diaphonie minimale. | |
| 6 | NIVEAU D'ACCORDER | (A) 98,0MHz 0 dév - 14dBμ(Entrée ANT) 75μ | (B) | AUTO ou MONO 98,0MHz | VR1 (X05-) | Ajuster VR1 et arrêter le mouvement de VR1 au moment où le FLI(TUNED)s'allume. | |
| SECTION MA Laisser l'antenne bouche MA installée. SELECTEUR: AM | | | | | | | |
| (1) | BORD DE BANDE (Bas) | - | Relier un voltmètre entre les TP1(GND) et TP2. | - | L9 (X05-) | 1,5V | (c) |
| (2) | BORD DE BANDE (Haut) | - | Relier un voltmètre entre les TP1(GND) et TP2. | - | TC2 (X05-) | 8,0V | (c) |
| Répéter les points (1) et (2) plusieurs fois. | | | | | | | |
| (3) | ALIGNEMENT H.T. (1) | (D) 600kHz 20dBμ(Entrée ANT) | (B) | - | L8 (X05-) | Amplitude et symétrie maximale de l'affichage de l'oscilloscope. | |
| (4) | ALIGNEMENT H.T. (2) | (D) 1400kHz 20dBμ(Entrée ANT) | (B) | - | TC1 (X05-) | Amplitude et symétrie maximale de l'affichage de l'oscilloscope. | |
| Répéter les points (3) et (4) plusieurs fois. | | | | | | | |
| (5) | TRANSFORMATEUR F.I. | (D) 1000kHz 20dBμ(Entrée ANT) | (B) | - | L10 (X05-) | Amplitude et symétrie maximale de l'affichage de l'oscilloscope. | |
| (6) | NIVEAU D'ACCORDER | (A) 1000kHz 36dBμ(Entrée ANT) | - | - | VR2 (X05-) | Ajuster VR2 et arrêter le mouvement de VR2 au moment où le FLI(TUNED)s'allume. | |
| SECTION AUDIO | | | | | | | |
| [1] | COURANTA DE POLARISATION | - | (E) Connecter un voltmètre CC sur CP1(L) CP2(R) | Volume: 0 | VR1(G) VR2(D) (X89-) | 10mV | (d) |
| [2] | SURROUND PRO LOGIC | - | Relier un voltmètre CA entre les TP10 et GND. | Fréquence de mesure ON | VR1 (X08-) | Niveau de bruit 60mV | (e) |


ABGLEICH

| NR. | GEGENSTAND | EINGANGS-EINSTELLUNG | AUSGANGS-EINSTELLUNG | TUNER-EINSTELLUNG | ABGLEICH-PUNKTE | ABGLEICHEN FÜR | ABB. |
|--|--|---|--|------------------------------|----------------------------|--|------|
| UKW - EMPFANGSABTEILUNG WÄHLER: FM | | | | | | | |
| 1 | DETEKTOR | (A) 98,0MHz 1kHz. ±75kHz Hub 60dBμ(ANT-Eingang) | Einen Gleichspannungs- messer zwischen TP3 und TP4 anschließen. | AUTO oder MONO 98,0MHz | L4 (X05-) | 0V | (a) |
| 2 | KLIRRFAKTOR (MONO) | (C) 98,0MHz 1kHz. ±68,25kHz Hub Wähler: L oder R Piloten: ±6,75kHz Hub 60dBμ(ANT-Eingang) | (B) | 98,0MHz | L5 (X05-) | Minimal Klirrfaktor. | |
| 3 | SPANNUNGS- GEREGELTER OSZILLATOR | (A) 98,0MHz 0 Hub 100dBμ(ANT-Eingang) | Einen Frequenzzähler zwischen TP5 und GND anschließen. | AUTO 98,0MHz | VR3 (X05-) | 19,00kHz | (b) |
| 4 | KLIRRFAKTOR (STEREO) | (C) 98,0MHz 1kHz. ±68,25kHz Hub Wähler: L oder R Piloten: ±6,75kHz Hub 60dBμ(ANT-Eingang) | (B) | 98,0MHz | Frontend IPT (X05-) | Minimal Klirrfaktor. | |
| 5 | STEREO KANAL TRENNUNG (E Type) | (C) 98,0MHz Stereo Signal 60dBμ(ANT-Eingang) | (B) | AUTO 98,0MHz | VR4 (X05-) | Minimal Klirrfaktor. | |
| 6 | ABSTIMM PEGEL | (A) 98,0MHz 0 Hub - 14dBμ(ANT-Eingang) 75Ω | (B) | AUTO oder MONO 98,0MHz | VR1 (X05-) | Den Pegel wiederstand aufdrehen, und dem VR1 Halt geben wobei den FL1(TUNED) anzeiger leuchtet wird. | |
| MW - EMPFANGSABTEILUNG Die MW-Rahmenantenne angebracht lassen. WÄHLER: AM | | | | | | | |
| (1) | BANDKANTE (Niedrig) | - | Einen Gleichspannungs- messer zwischen TP1(GND) und TP2 anschließen. | - | L9 (X05-) | 1,5V | (c) |
| (2) | BANDKANTE (Hoch) | - | Einen Gleichspannungs- messer zwischen TP1(GND) und TP2 anschließen. | - | TC2 (X05-) | 8,0V | (c) |
| Abstimmungen (1) und (2) mehrere Male wiederholen. | | | | | | | |
| (3) | HF-ABGLEICH (1) | (D) 600kHz 20dBμ(ANT-Eingang) | (B) | - | L8 (X05-) | Maximal Amplitude und Symmetrie des Oszilloskopbildes. | |
| (4) | HF-ABGLEICH (2) | (D) 1400kHz 20dBμ(ANT-Eingang) | (B) | - | TC1 (X05-) | Maximal Amplitude und Symmetrie des Oszilloskopbildes. | |
| Abstimmungen (3) und (4) mehrere Male wiederholen. | | | | | | | |
| (5) | ZF-UBERTRAGER | (D) 1000kHz 20dBμ(ANT-Eingang) | (B) | - | L10 (X05-) | Maximal Amplitude und Symmetrie des Oszilloskopbildes. | |
| (6) | ABSTIMM PEGEL | (A) 1000kHz 36dBμ(ANT-Eingang) | - | - | VR2 (X05-) | Den Pegel wiederstand aufdrehen, und dem VR2 Halt geben wobei den FL1(TUNED) anzeiger leuchtet wird. | |
| AUDIO-ABTEILUNG | | | | | | | |
| [1] | LEERLAUFSTROM | - | (E) Einen Gleichspannungs- messer über CP1(L) CP2(R) anschließen. | Volume: 0 | VR1(L) VR2(R) (X89-) | 10mV | (d) |
| [2] | SURROUND PRO LOGIC | - | Einen Wechselspannungs- messer zwischen TP10 und GND anschließen. | Meßton ON | VR1 (X08-) | Geräuschpegel 60mV | (e) |


KR-V9010

ADJUSTMENT/REGLAGE/ABGLEICH

System connections/Raccordements du système/System-Anschlusse

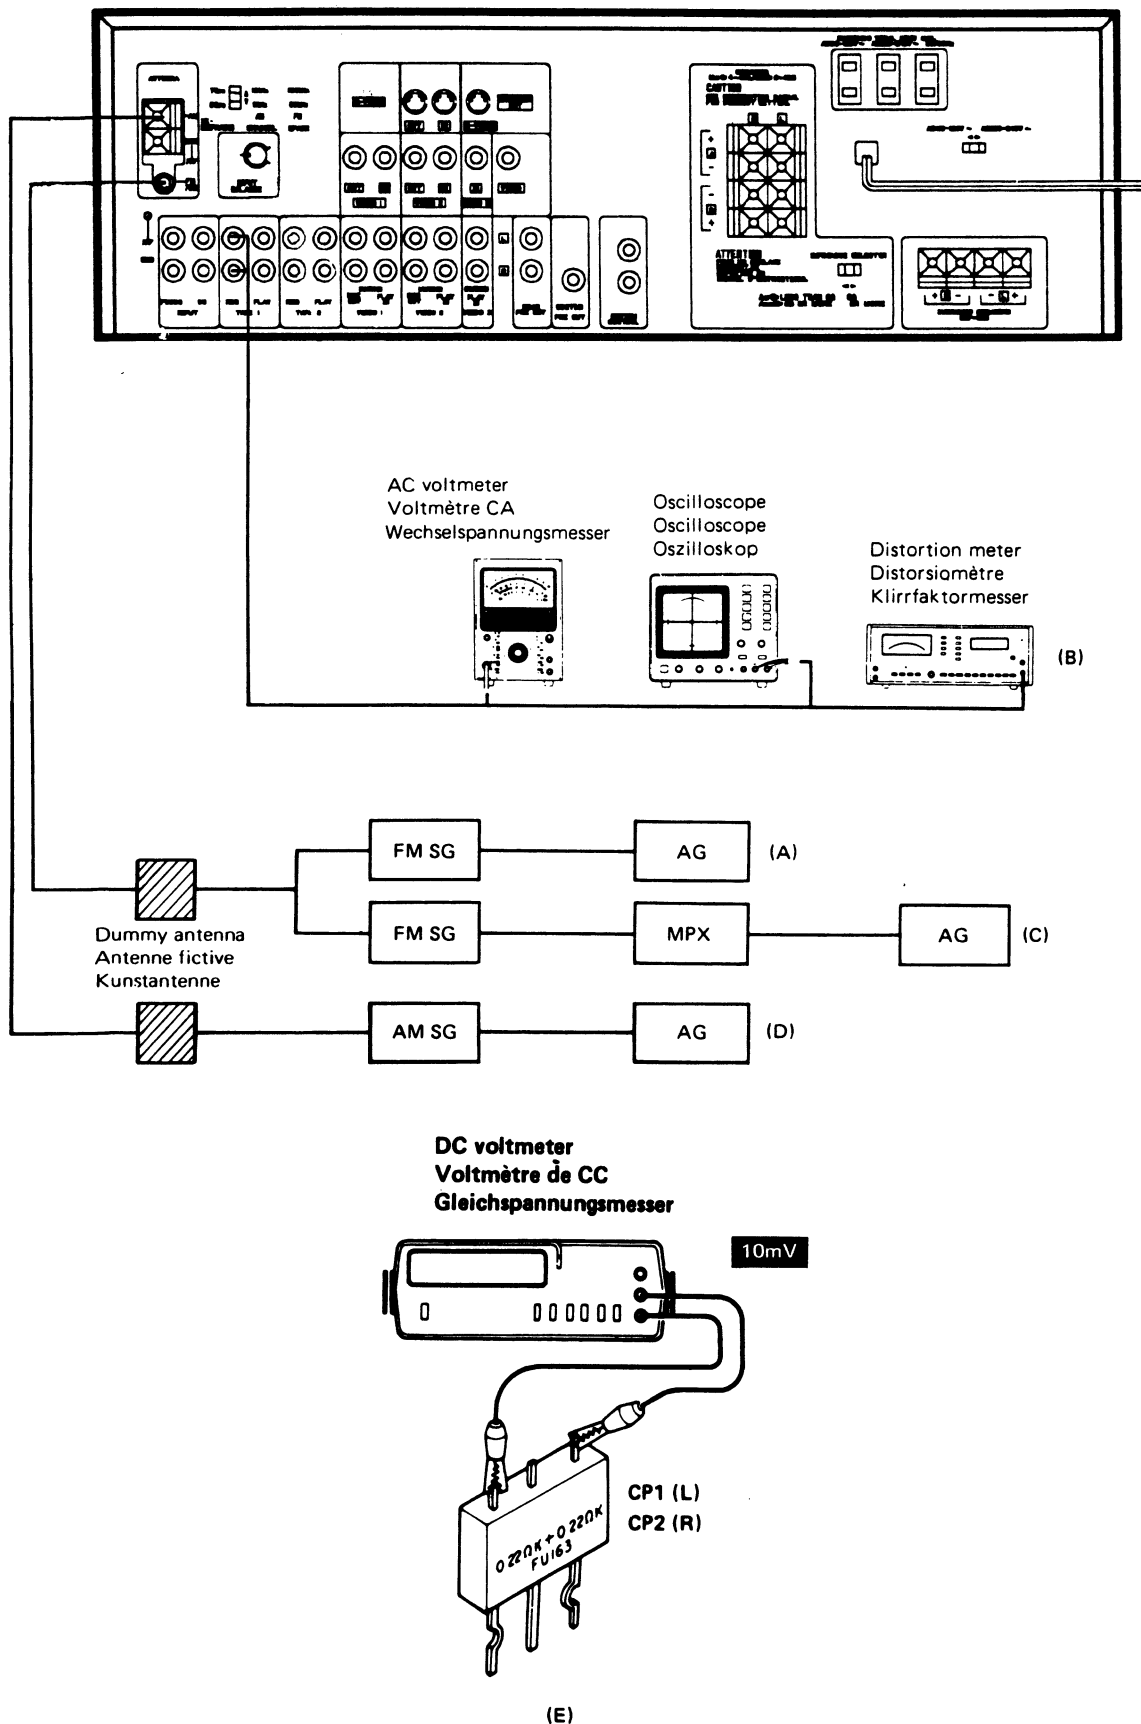

PERSPECTIVE OF PC BOARDS / VOLTAGE TABLE

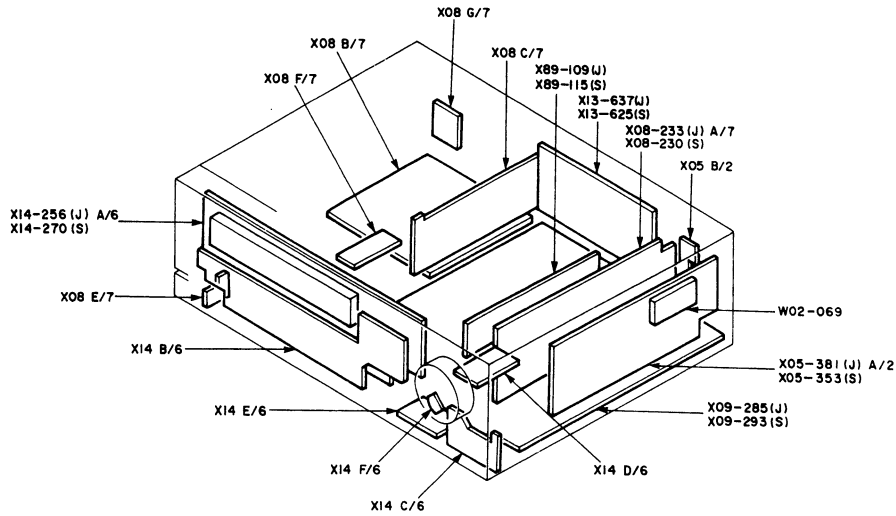

(X05-)

| IC1 | |
|-------|-------|
| 1~3 | 2.36V |
| 4 | 0V |
| 5 | 9.2V |
| 6 | 9.15V |
| 7 | 9.13V |
| 8 | 4.27V |
| 9 | 3.45V |
| 10 | 3.26V |
| 11 | 1.26V |
| 12 | 1.48V |
| 13,14 | 0.26V |
| 15 | 2.39V |
| 16 | 1.45V |
| 17 | 6.79V |
| 18,19 | 0.05V |
| 20,21 | 3.95V |
| 22 | 2.83V |

| IC2 | |
|-------|--------|
| 1 | 0.75V |
| 2 | 1.64V |
| 6 | 0.07V |
| 7 | 11.16V |
| 8 | 0.01V |
| 9 | 0.2V |
| 10 | 0.06V |
| 11 | 2.8V |
| 12,13 | 5.16V |
| 14 | 2.05V |
| 15 | 1.16V |
| 16 | 0V |

| IC3 | |
|-------|-------|
| 1 | 10.6V |
| 2 | 2.57V |
| 3 | 5.85V |
| 4,5 | 8.52V |
| 6,7 | 2.79V |
| 8 | 0V |
| 9 | 5.1V |
| 10,11 | 2.55V |
| 12 | 2.54V |
| 13,14 | 2.56V |
| 15 | 3.19V |
| 16 | 2.5V |

| | B | C | E |
|----|-------|-------|------|
| Q1 | 2.4V | 8.8V | 1.7V |
| Q2 | 0.6V | 1.9V | - |
| Q3 | 1.2V | 1.9V | 0.6V |
| Q7 | 10.5V | 11V | 11V |
| Q8 | 11.2V | 0.07V | 11V |

(X08-)

| IC1, 3 | |
|--------|------|
| 1~3 | 0V |
| 4 | 15V |
| 5~10 | 0V |
| 11 | -15V |
| 12~14 | 0V |

| IC2 | |
|------|------|
| 1~6 | 2.9V |
| 7 | 0V |
| 8~13 | 2.9V |
| 14 | 5.0V |

| IC4 | |
|------|------|
| 1 | -15V |
| 2~5 | 0V |
| 6 | 0.4V |
| 7~27 | 0V |
| 28 | 15V |

| IC5 | |
|-----|------|
| 1~3 | 0V |
| 4 | -15V |
| 5~7 | 0V |
| 8 | 15V |

| IC6 | |
|-------|------|
| 1 | 0.9V |
| 2,3 | 1.8V |
| 4 | 0V |
| 5 | 1.8V |
| 6,7 | 6.7V |
| 8,9 | 1.8V |
| 10 | 8.0V |
| 11,12 | 1.8V |
| 13 | 15V |
| 14,15 | 1.8V |
| 16 | 0.9V |

| IC7 | |
|-----|------|
| 1 | 15V |
| 2 | 0V |
| 3 | 5.0V |

| IC8 | |
|-------|------|
| 1 | 4.9V |
| 2~6 | 2.4V |
| 7,8 | 0V |
| 9 | 4.9V |
| 10 | 2.2V |
| 11 | 2.3V |
| 12~15 | 0V |
| 16 | 4.9V |

| IC9 | |
|-------|------|
| 1 | 0V |
| 2 | 6.1V |
| 3 | 6.2V |
| 4 | 6.6V |
| 5 | 14V |
| 6 | 6.3V |
| 7,8 | 6.4V |
| 9~11 | 0V |
| 12~14 | 6.3V |
| 15,16 | 5.7V |

| IC10 | |
|------|------|
| 1~3 | 2.4V |
| 4 | -15V |
| 5~7 | 0V |
| 8 | 15V |

| IC11 | |
|------|------|
| 1~3 | 6.7V |
| 4 | -15V |
| 5~7 | 6.2V |
| 8 | 15V |

| IC12 | |
|-------|------|
| 1~8 | 5.9V |
| 9~11 | 9.3V |
| 12 | 0V |
| 13~16 | 5.9V |
| 17 | 5.3V |
| 18~20 | 0V |
| 21,22 | 5.9V |
| 23 | 5.4V |
| 24~30 | 5.9V |
| 31 | 12V |
| 32 | 9.3V |
| 33 | 9.4V |
| 34 | 9.3V |
| 35~42 | 5.9V |

| IC16 | |
|------|-------|
| 1 | 11.6V |
| 2 | 5.6V |
| 3 | 0.6V |

| | B | C | E |
|--------|--------|--------------------------|--------|
| Q1~3 | 0.7V | 0V | 0V |
| Q5 | 4.2V | 4.9V | 4.9V |
| Q21 | 0.6V | 0V | - |
| Q22 | 0.4V | 5.5V | - |
| Q23 | 5.2V | -30.3V | 5.6V |
| Q24 | -30.3V | -35.1V | -29.7V |
| Q26 | 0V | 27.4V | 0.6V |
| Q27 | 0V | -28V | 0.6V |
| Q28 | 27.4V | -1.2V | -27.6V |
| Q29 | - | - | -1.2V |
| Q30 | 1.2V | 28.4V | 0V |
| Q31 | -1.2V | -28.6V | 0V |
| Q32 | 12.7V | 12.7V | -17.7V |
| Q33 | 13V | 0V | 13.1V |
| Q34~37 | - | ON : 0.1V OFF : 28.3V | - |

KR-V9010

VOLTAGE TABLE

(X09-)

IC1

| | |
|-----|--------|
| 1~3 | 0V |
| 4 | -15.3V |
| 5~7 | 0V |
| 8 | 14.9V |

IC2-4

| | |
|------|--------|
| 1 | -15.3V |
| 2~27 | 0V |
| 28 | 14.9V |

IC5-9,11

| | |
|-----|--------|
| 1~3 | 0V |
| 4 | -15.3V |
| 5~7 | 0V |
| 8 | 14.9V |

IC10

| | |
|------|--------|
| 1 | -15.3V |
| 2~15 | 0V |
| 16 | 14.9V |

IC12

| | |
|-------|-------|
| 1 | 6.7V |
| 2~9 | 0V |
| 10~14 | -6.7V |
| 15 | 5.2V |
| 16~28 | 0V |

IC13,14

| | |
|------|--------|
| 1~17 | 0V |
| 18 | 14.9V |
| 19 | 0V |
| 20 | -15.3V |

IC15

| | |
|-------|--------|
| 1~4 | 0V |
| 5~7 | -15.3V |
| 8~11 | 0V |
| 12~14 | 14.9V |

IC16

| | |
|-----|--------|
| 4 | -15.3V |
| 5~7 | 0V |
| 8 | 14.9V |

| | B | C | E |
|-------|--------|--------|--------|
| Q1,2 | 0V | - | 0V |
| Q3,4 | - | - | 0V |
| Q5,6 | -0.6V | 1.1V | -1.1V |
| Q7,8 | -15V | - | 0V |
| Q9,10 | -7.5V | - | 0V |
| Q11 | - | -7.5V | - |
| Q12 | -7.5V | - | - |
| Q13 | - | - | -7.5V |
| Q14 | -7.5V | - | - |
| Q21 | 15.6V | 22V | 15V |
| Q22 | 16.2V | 22 | 15.6V |
| Q23 | - | -15.3V | - |
| Q24 | - | - | -21.2V |
| Q25 | - | - | -15.3V |
| Q26 | 15V | 16.2V | 14.4V |
| Q27 | -0.6V | -15.8V | - |
| Q28 | 13.4V | 22V | 12.8V |
| Q29 | - | 14.9V | - |
| Q30 | 0V | -15V | 0V |
| Q32 | -17.7V | -7.5V | 4.4V |
| Q34 | 0V | 15V | - |
| Q35 | 0.7V | 0V | - |
| Q36 | 15V | -15.2V | 15V |
| Q37 | 0V | 15V | 15V |
| Q38 | 2.8V | 3.4V | 3.4V |

(X13-)

IC1

| | |
|-------|-------|
| 1 | 0V |
| 2~7 | 4.8V |
| 8 | -5.0V |
| 9 | 4.9V |
| 10~15 | -4.9V |
| 16 | 4.5V |

IC2

| | |
|------|-------|
| 1~4 | 0V |
| 5 | 4.5V |
| 6 | -4.9V |
| 7 | -5.0V |
| 8~11 | 0V |
| 12 | -4.9V |
| 13 | 3.9V |
| 14 | 4.9V |

IC3

| | |
|------|-------|
| 1~4 | 0V |
| 5,6 | -4.9V |
| 7 | -5.0V |
| 8~11 | 0V |
| 12 | 4.4V |
| 13 | -4.9V |
| 14 | 4.9V |

IC4

| | |
|-------|-------|
| 1~4 | 0V |
| 5~7 | -5.0V |
| 8~11 | 0V |
| 12,13 | -4.9V |
| 14 | 4.9V |

| | B | C | E |
|----|-------|-------|-------|
| Q1 | 4.9V | 9.2V | 5.5V |
| Q2 | -5.0V | -9.7V | -5.5V |
| Q3 | 2.8V | 4.9V | 2.1V |
| Q4 | 4.2V | 4.8V | 4.9V |
| Q5 | 0V | 4.9V | 0V |
| Q6 | 0.6V | 0V | 0V |
| Q7 | 0V | 4.9V | 0V |
| Q8 | 4.9V | 9.2V | 5.5V |
| Q9 | -5.0V | -9.7V | -5.5V |

IC5

| | |
|-------|------|
| 1 | 3.4V |
| 2 | 4.2V |
| 3 | 0V |
| 4 | 4.7V |
| 5 | 4.9V |
| 6 | 0V |
| 7,8 | 2.2V |
| 10 | 2.5V |
| 11 | 0V |
| 12 | 1.3V |
| 13 | 1.6V |
| 14 | 1.2V |
| 15 | 1.1V |
| 16 | 2.7V |
| 17 | 0V |
| 18,19 | 4.9V |
| 20~22 | 4.7V |

IC6

| | |
|-------|------|
| 1 | 4.9V |
| 2,3 | 0V |
| 4 | 4.8V |
| 5 | 4.9V |
| 6,7 | 0V |
| 8 | 4.9V |
| 9 | 0V |
| 10 | 4.9V |
| 11,12 | 0V |
| 13 | 4.9V |

IC7-11

| | |
|-----|-------|
| 1~3 | 0V |
| 4 | -5.0V |
| 5~7 | 0V |
| 8 | 4.9V |


(X89-)

IC1




| | |
|-----|------|
| 1~3 | 0V |
| 4 | 1.4V |
| 6 | 0.7V |
| 7 | 2.2V |
| 8 | 3.4V |



| | B | C | E |
|--------|--------|--------|--------|
| Q1 | 0V | 3.3V | -0.6V |
| Q2 | - | 3.3V | - |
| Q3 | 0V | 3.3V | -0.6V |
| Q4 | 0V | - | - |
| Q5~7 | 3.9V | 14.6V | 3.3V |
| Q8 | 3.9V | 14.6V | - |
| Q9 | 14.6V | A-3.0V | 14V |
| Q10 | - | A-3.0V | 14V |
| Q11,12 | 14.6V | A-3.0V | 14V |
| Q13 | A-3.0V | 2.2V | A-2.5V |
| Q14 | A-3.0V | 0.7V | A-2.5V |
| Q15 | A-3.0V | 1.1V | A-2.5V |
| Q16 | - | - | A-2.5V |
| Q17,18 | - | B+2.5V | 0.7V |
| Q19,20 | B+2.5V | -1.1V | B+2.5V |
| Q21,22 | 1.1V | - | 0.6V |
| Q23,24 | -1.1V | - | -0.6V |
| Q25,26 | 0V | A-1.3V | 0V |
| Q27,28 | 0V | -1.0V | 0V |
| Q29 | A-1.3V | 0V | A-1.3V |

PC BOARD (COMPONENT ISDE VIEW)

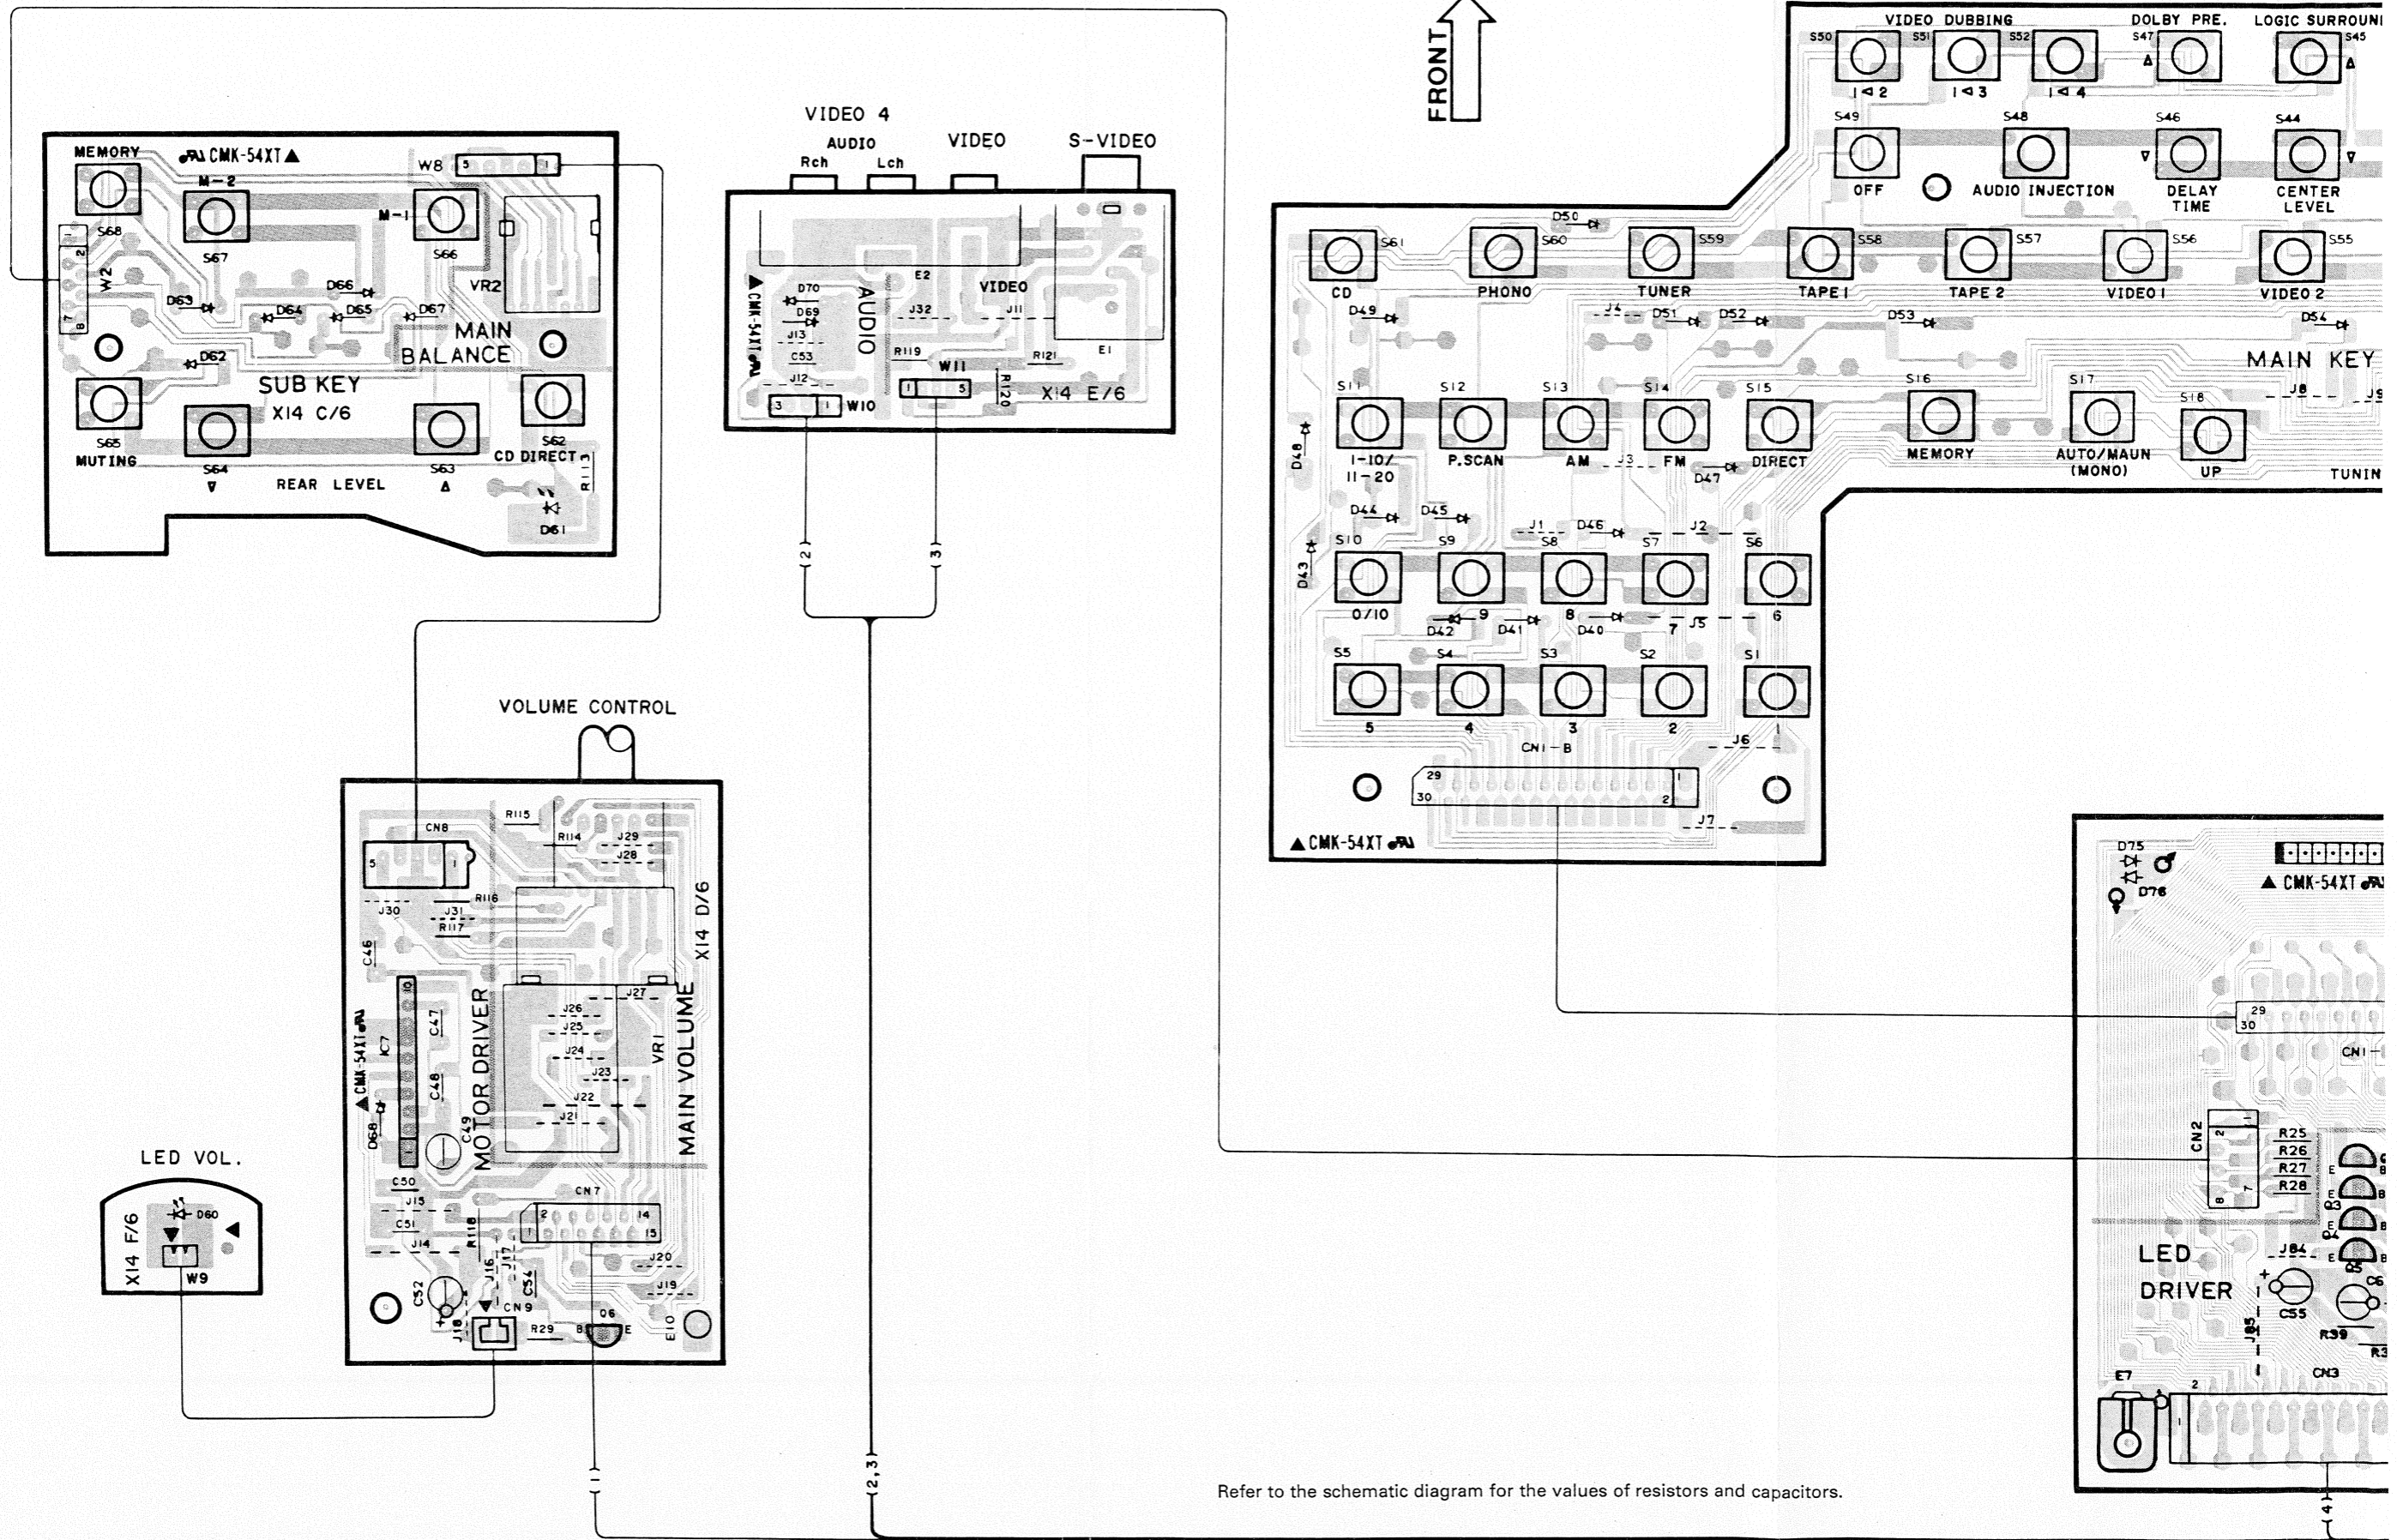


Refer to the schematic diagram for the values of resistors and capacitors.

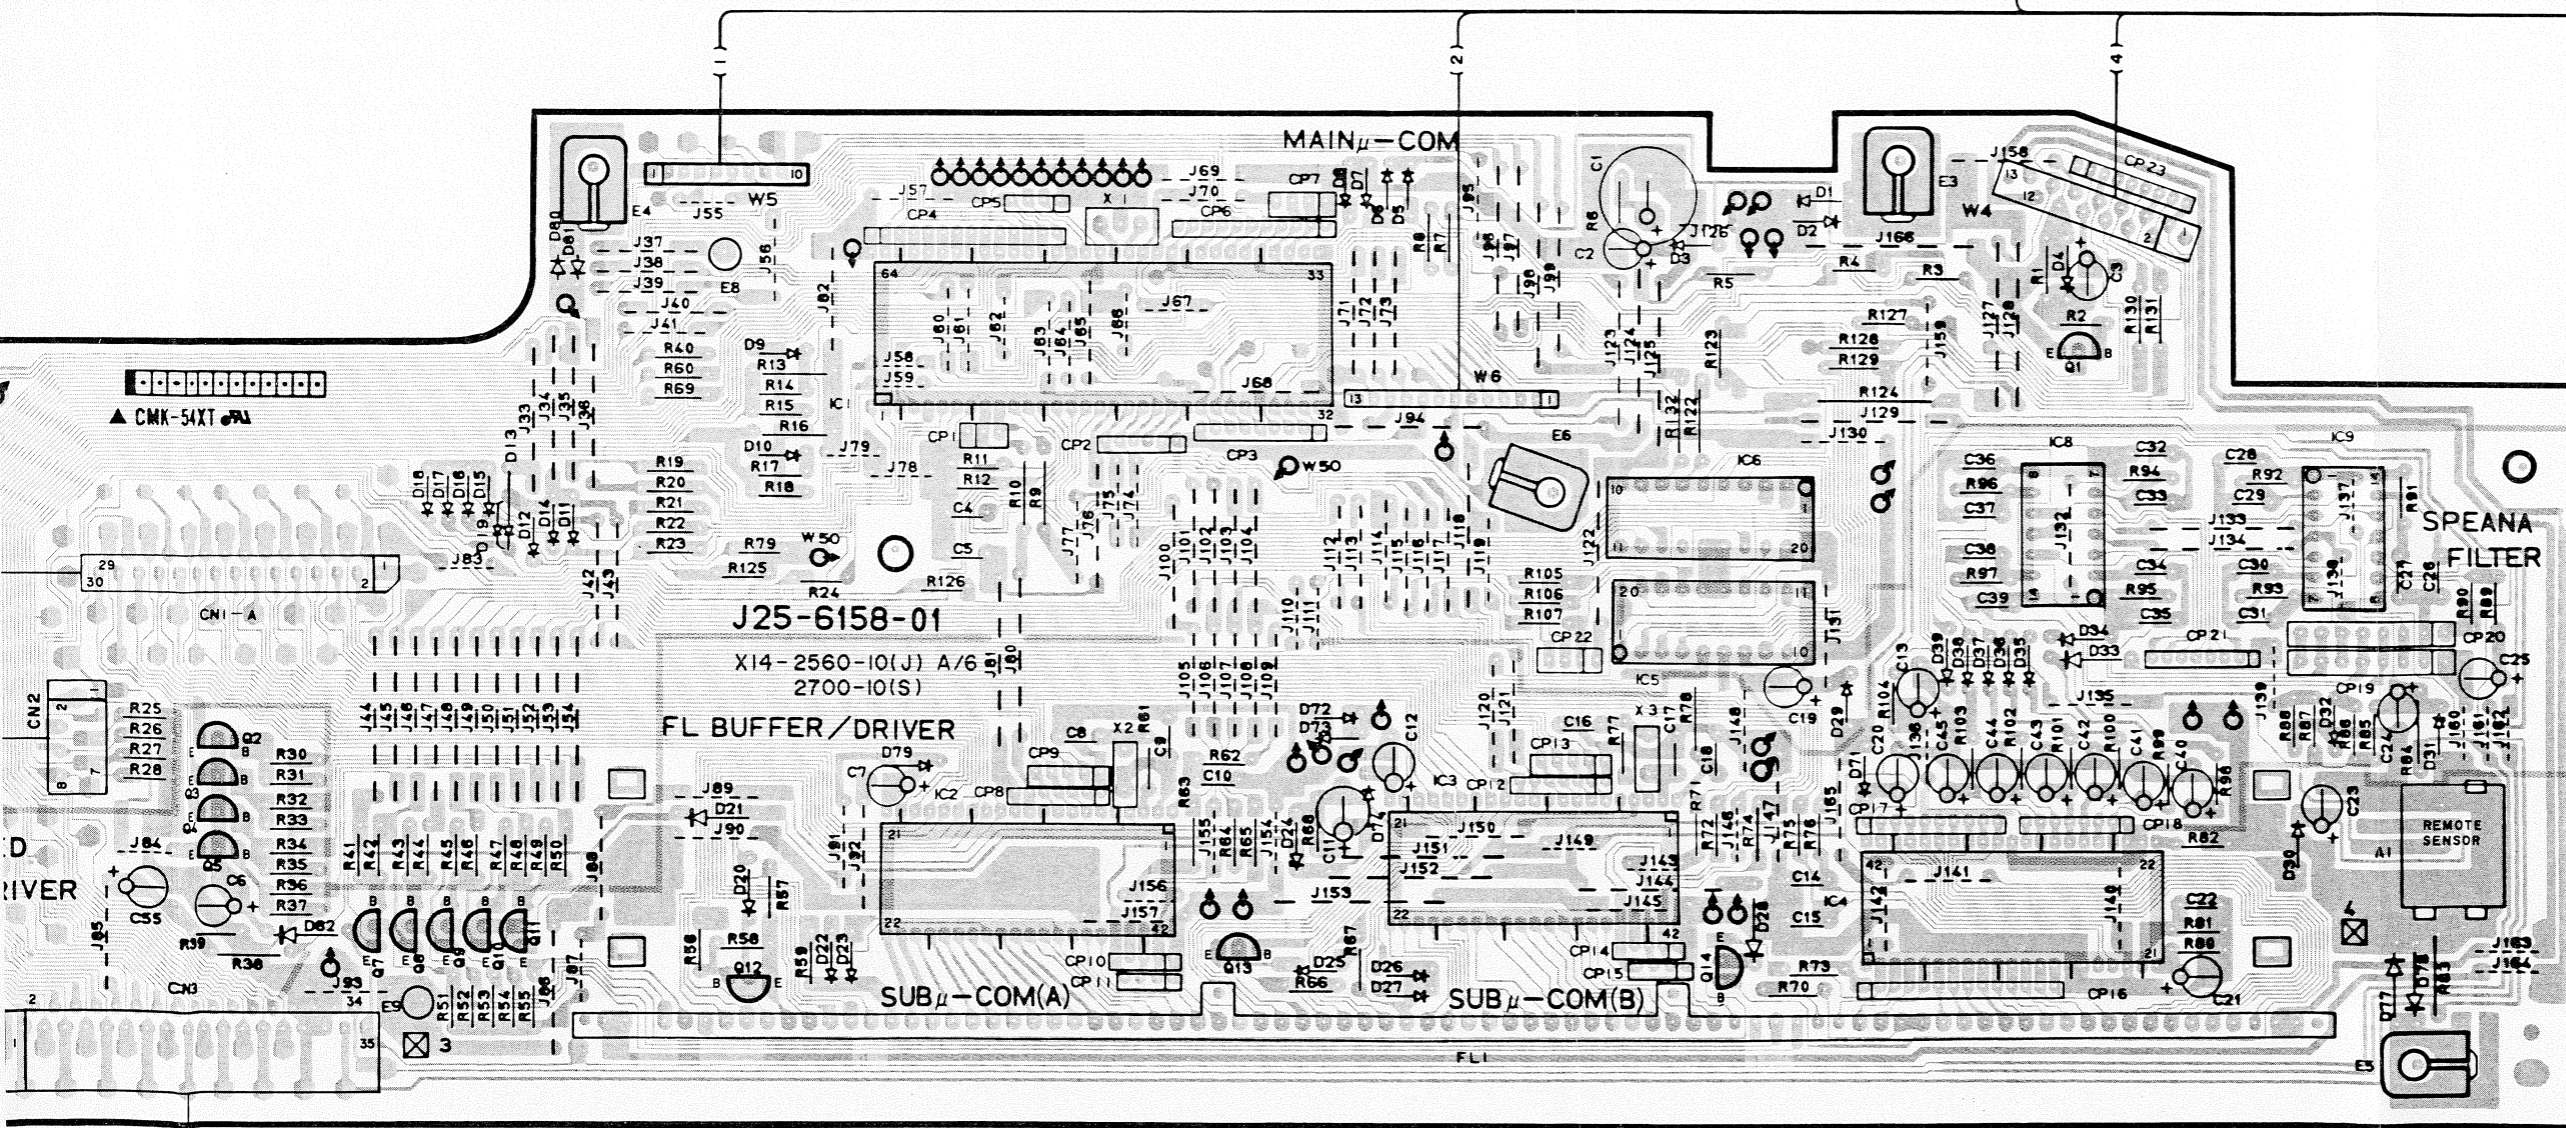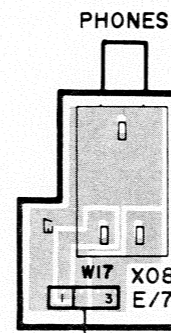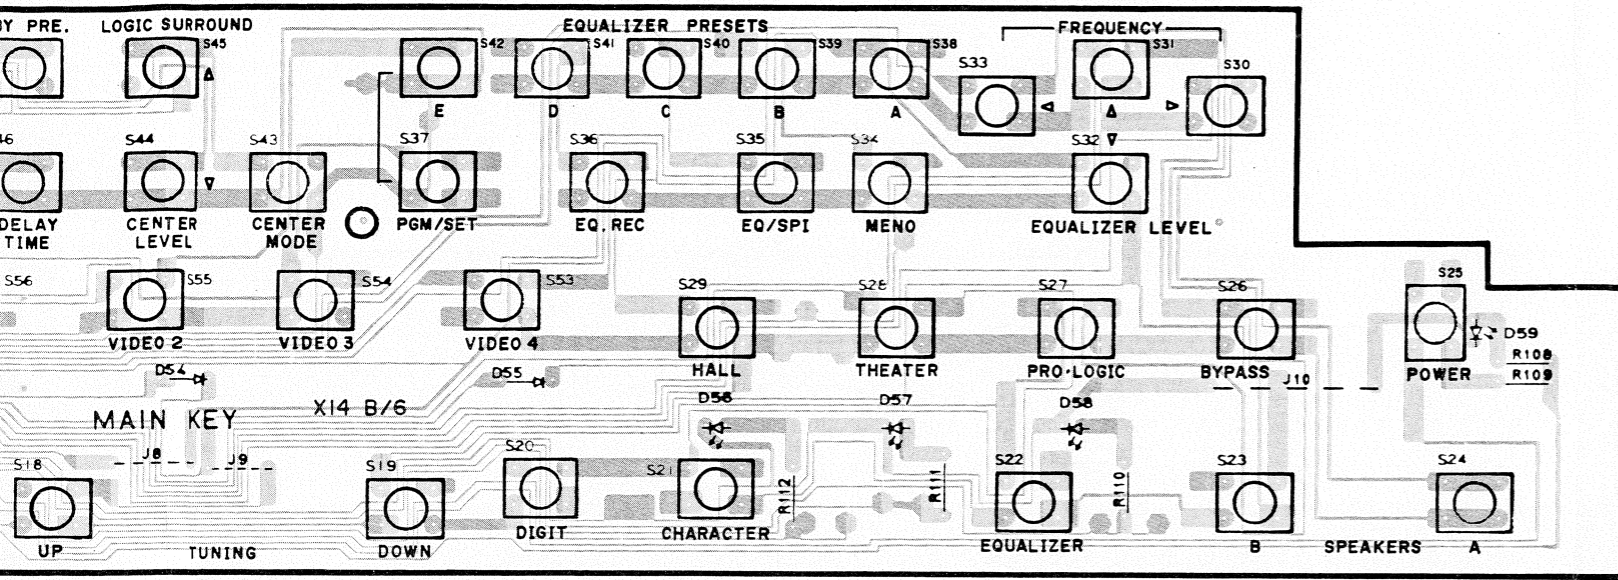


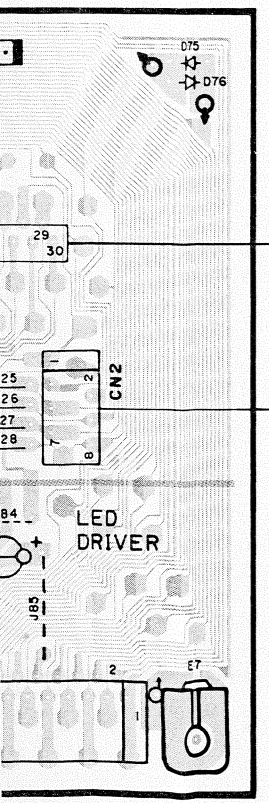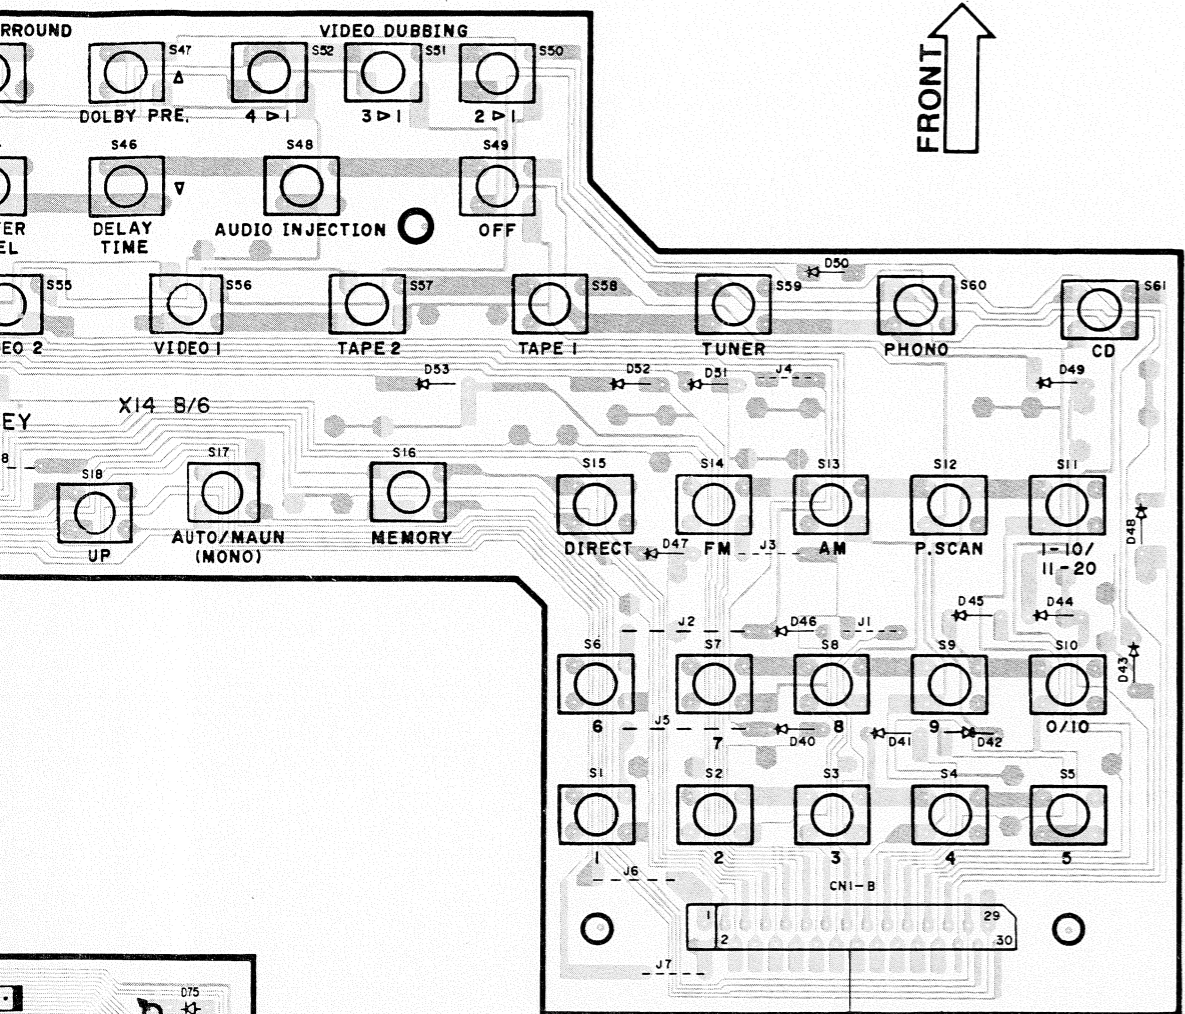

Refer to the schematic diagram for the values of resistors and capacitors.

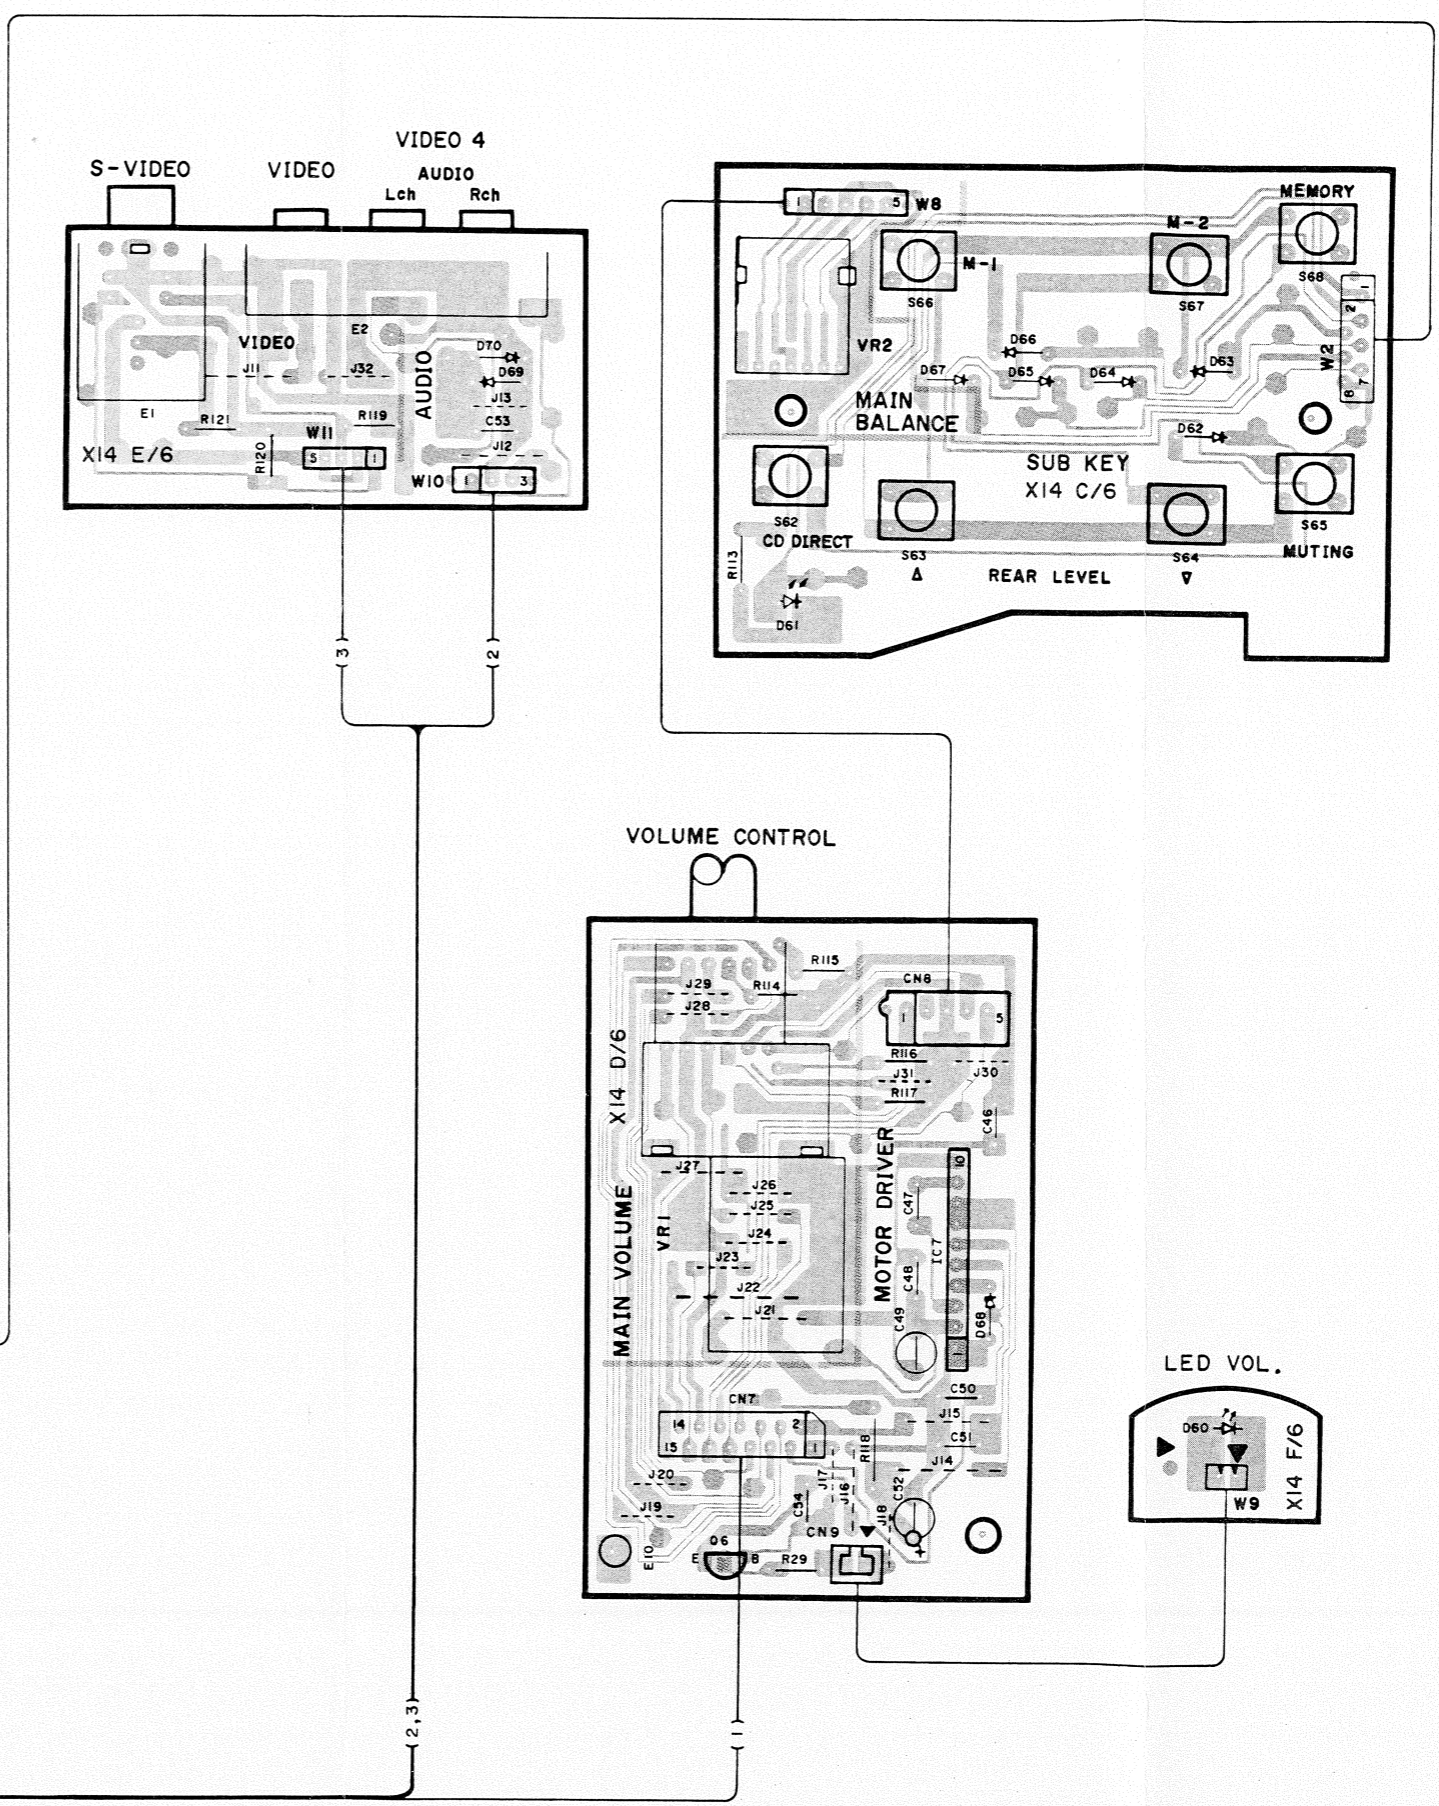

PC BOARD (COMPONENT ISDE VIEW)




DC voltmeter
(d) Idle current:10mV

DC voltmeter
(d) Idle current:10mV

A

B

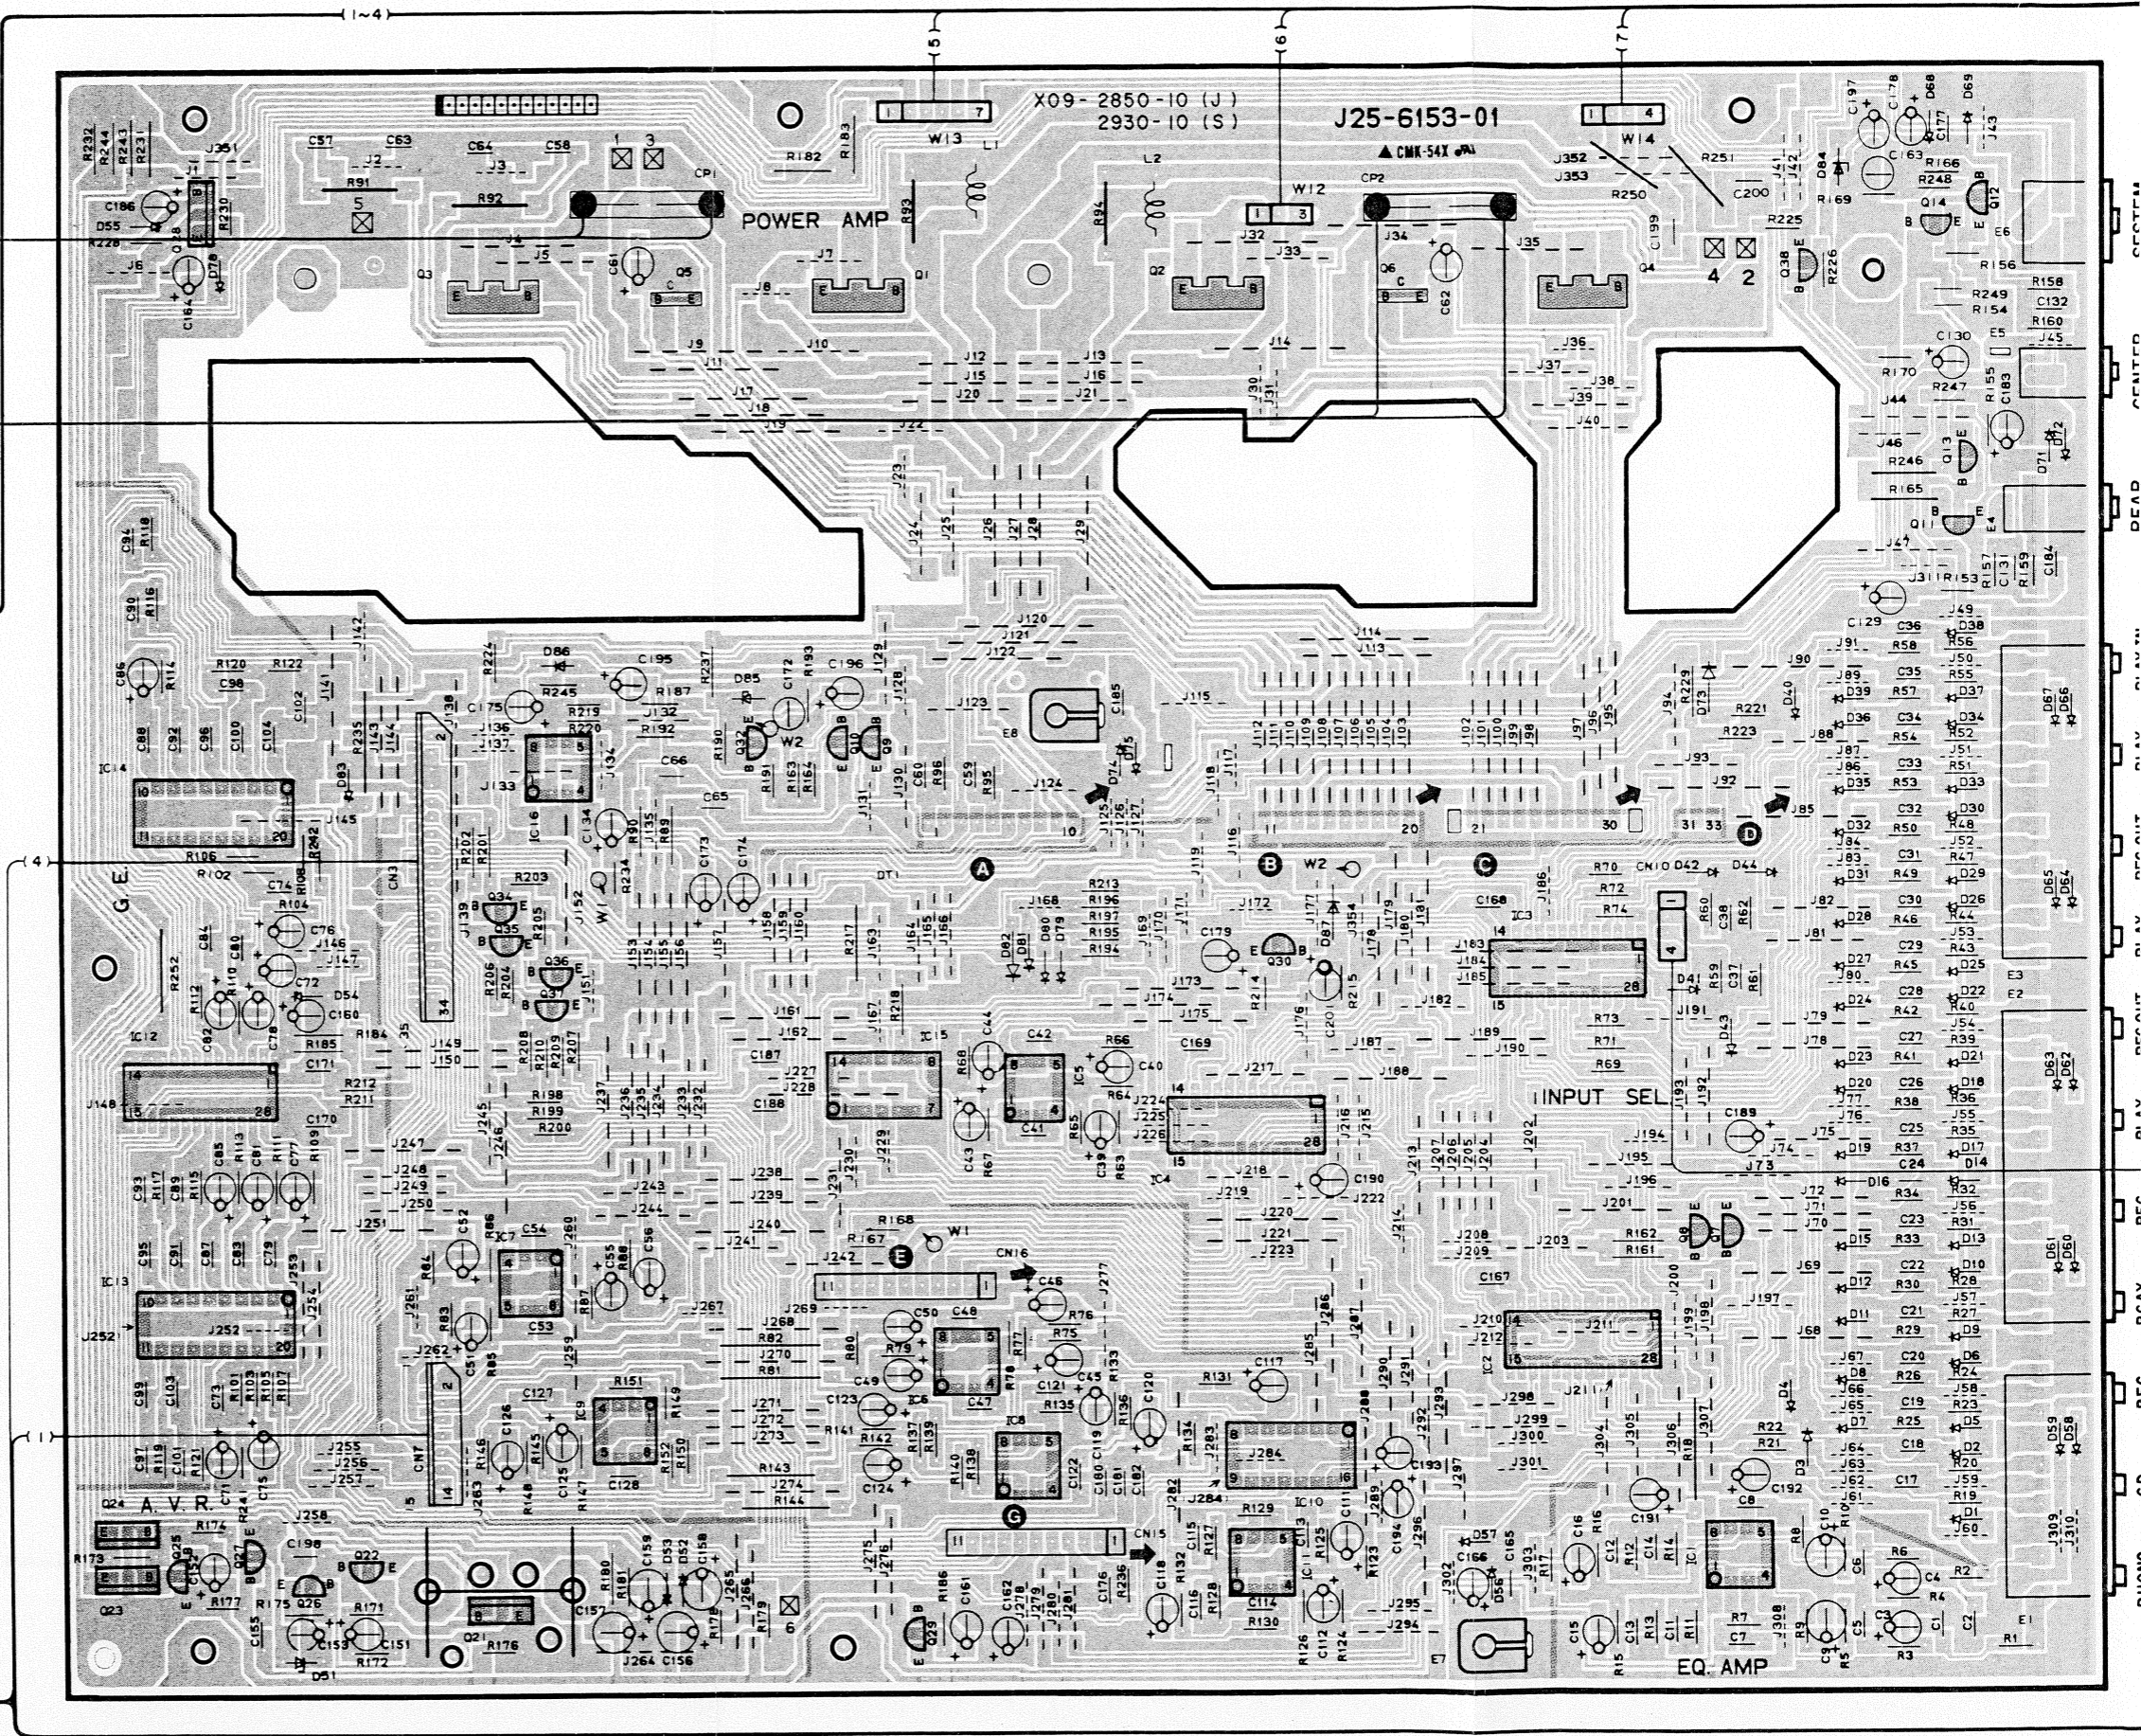

2

3



4

5


6

7



PC BOARD (COMPONENT ISDE VIEW)

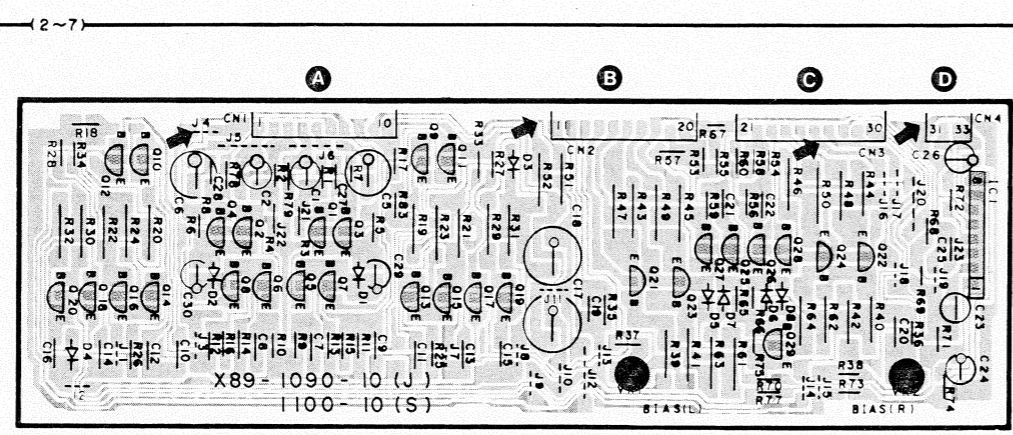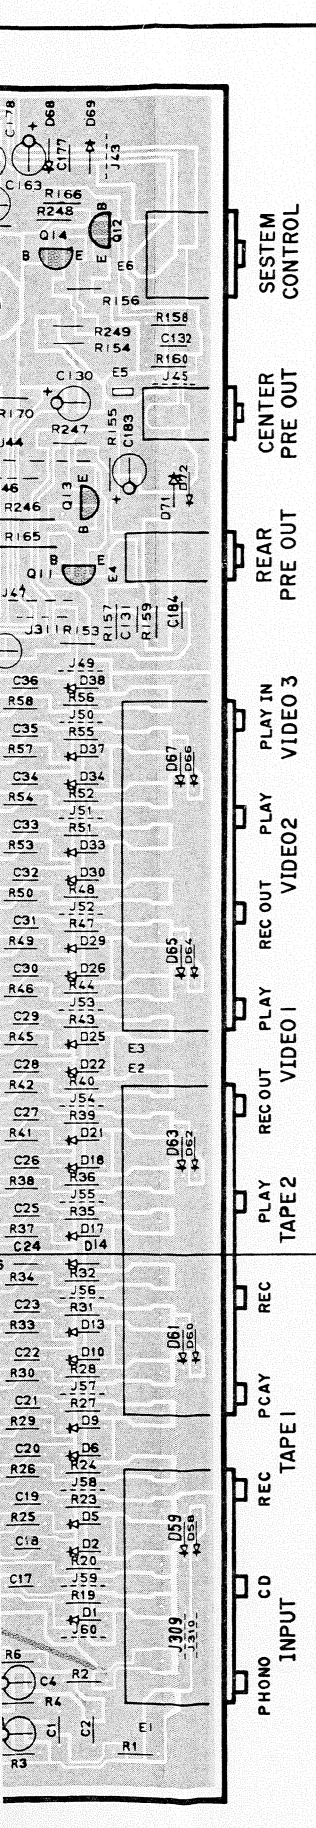



Refer to the schematic diagram for the values of resistors and capacitors.

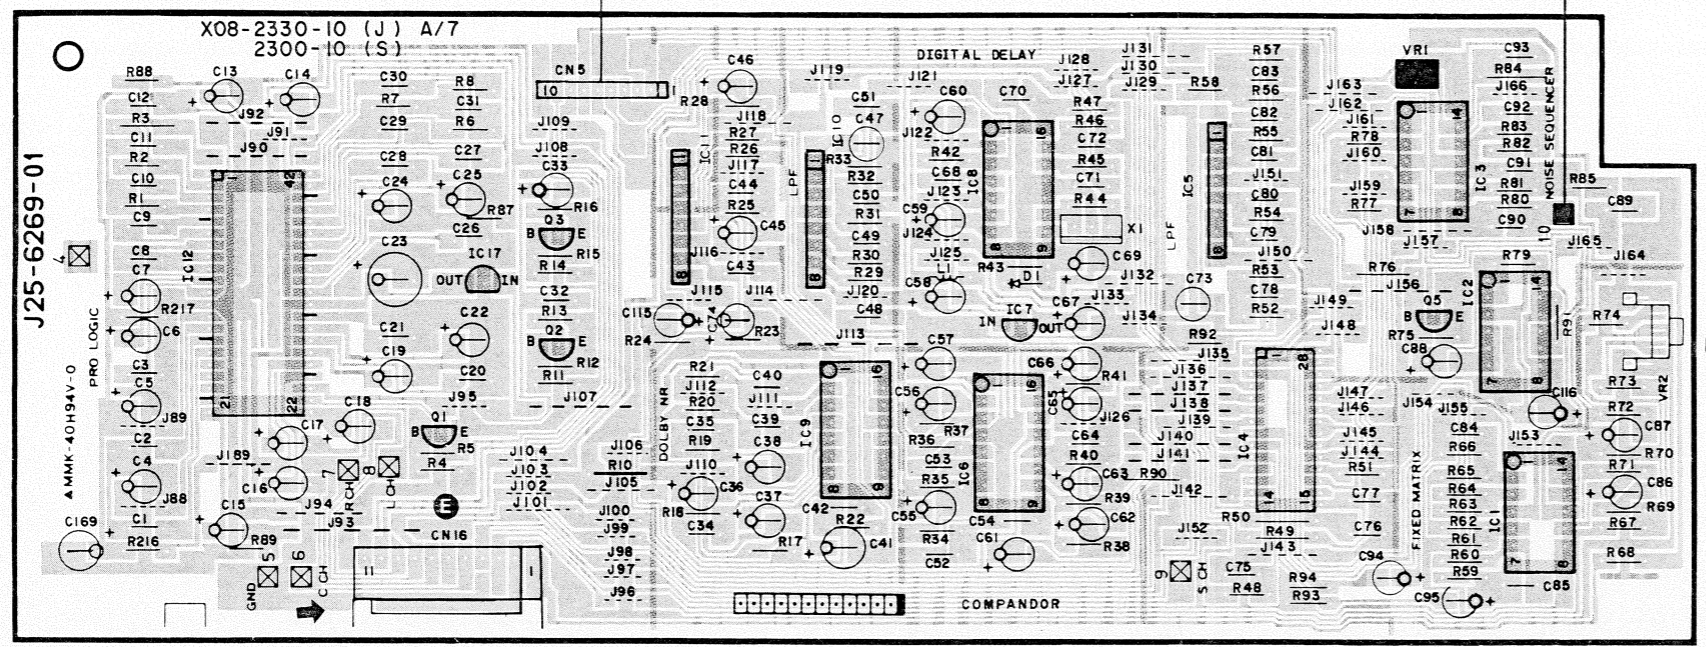

AC voltmeter
(e) Surround PRO LOGIC
:Noise level 60mV

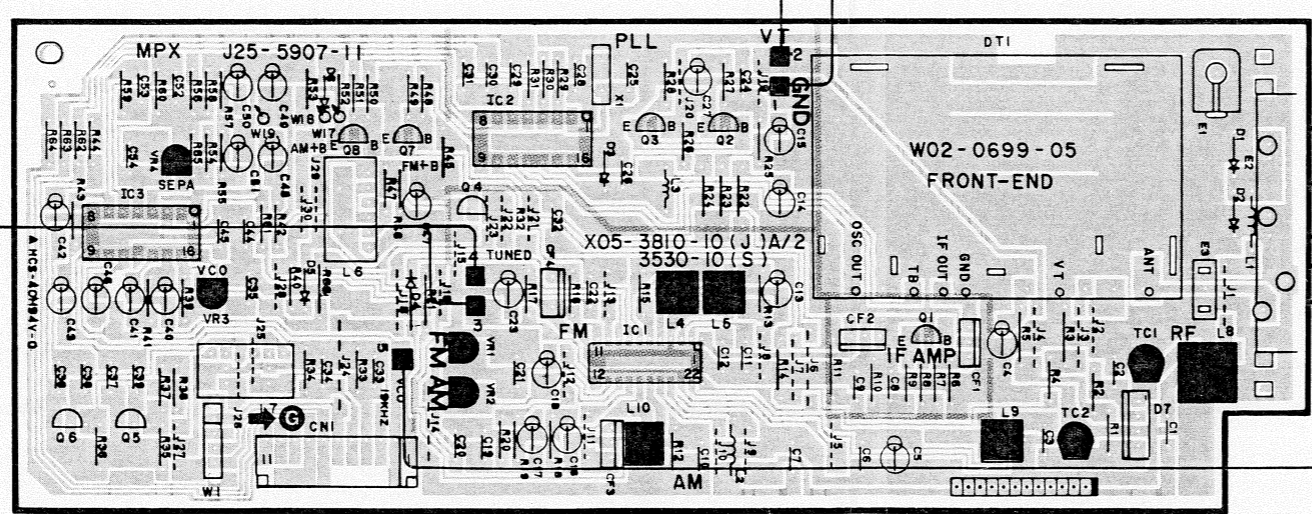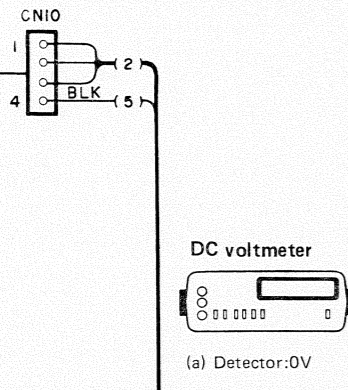

ANTENNA
AM
GND
FM 75Ω

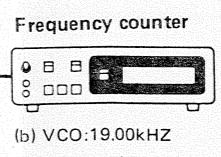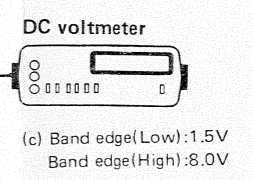


(2-7)

(3,5)

PC BOARD (FOIL SIDE VIEW)

Refer to the schematic diagram for the values of resistors and capacitors.

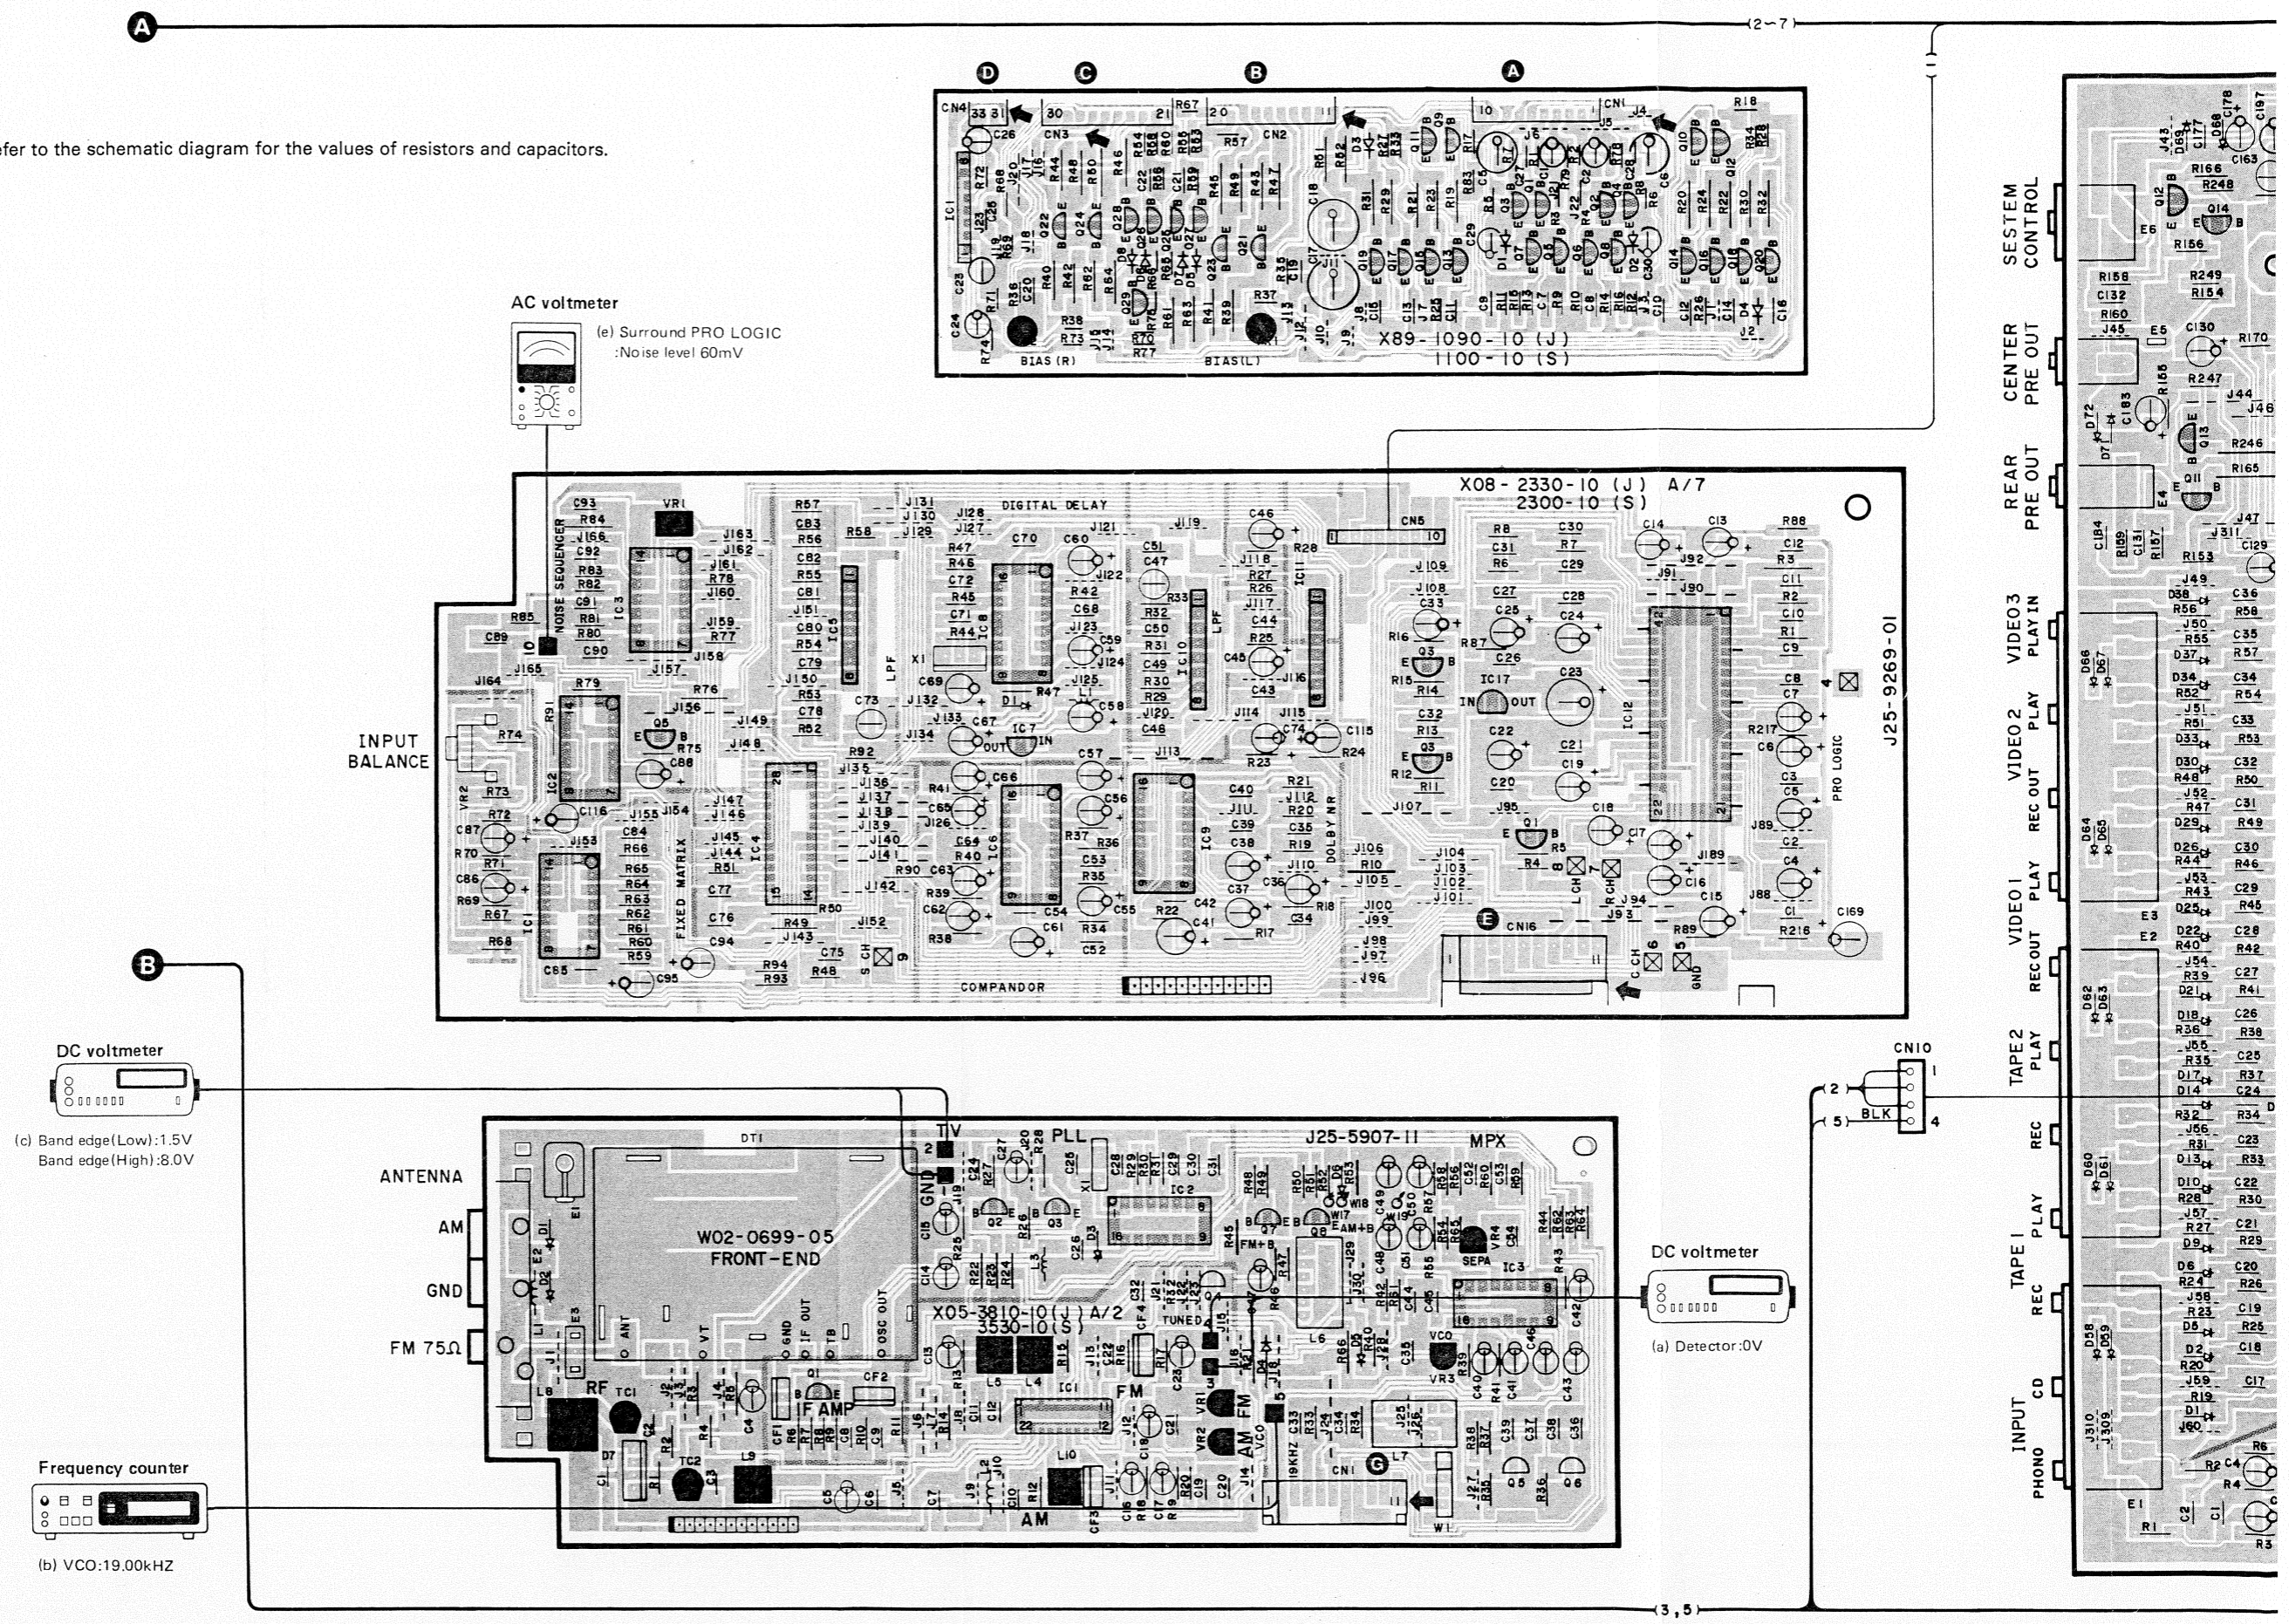


AC voltmeter
(e) Surround PRO LOGIC
:Noise level 60mV



DC voltmeter
(c) Band edge(Low):1.5V
Band edge(High):8.0V

Frequency counter
(b) VCO:19.00kHz

DC voltmeter
(a) Detector:0V

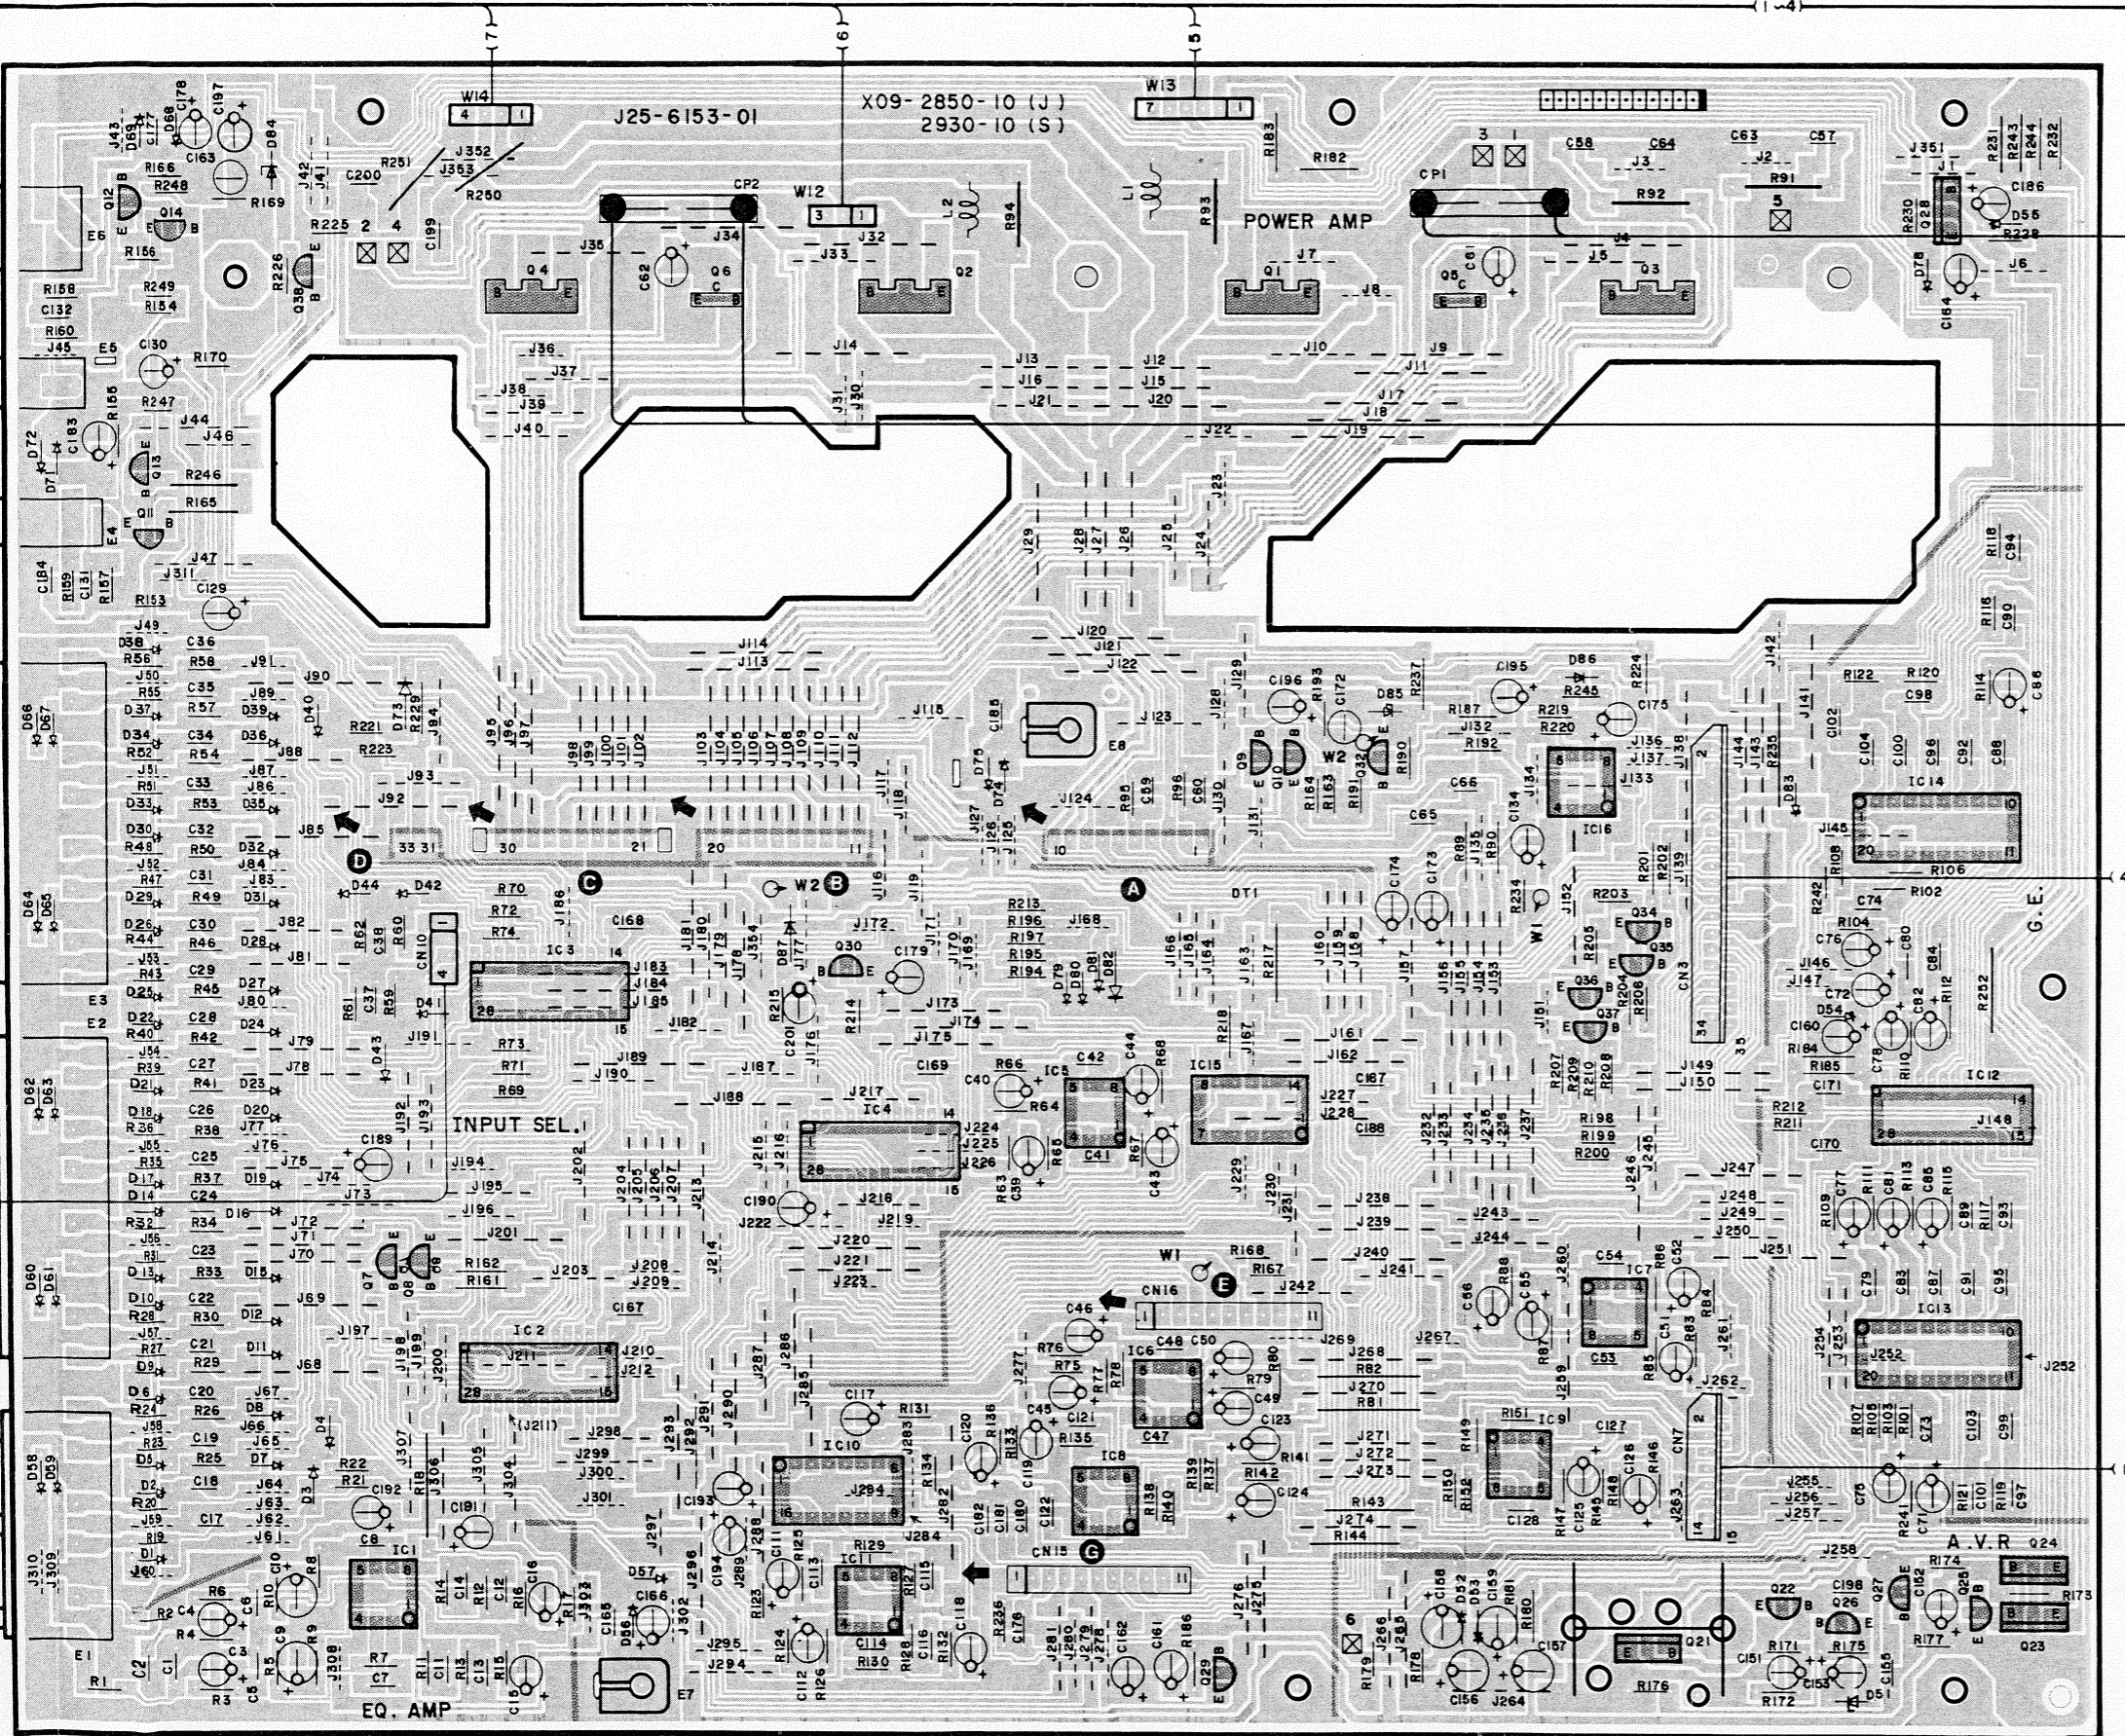

FRONT

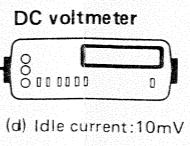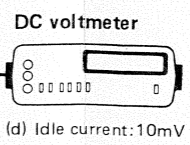


A

B


PHONO CD REC PLAY REC OUT

PC BOARD (COMPONENT SIDE VIEW)

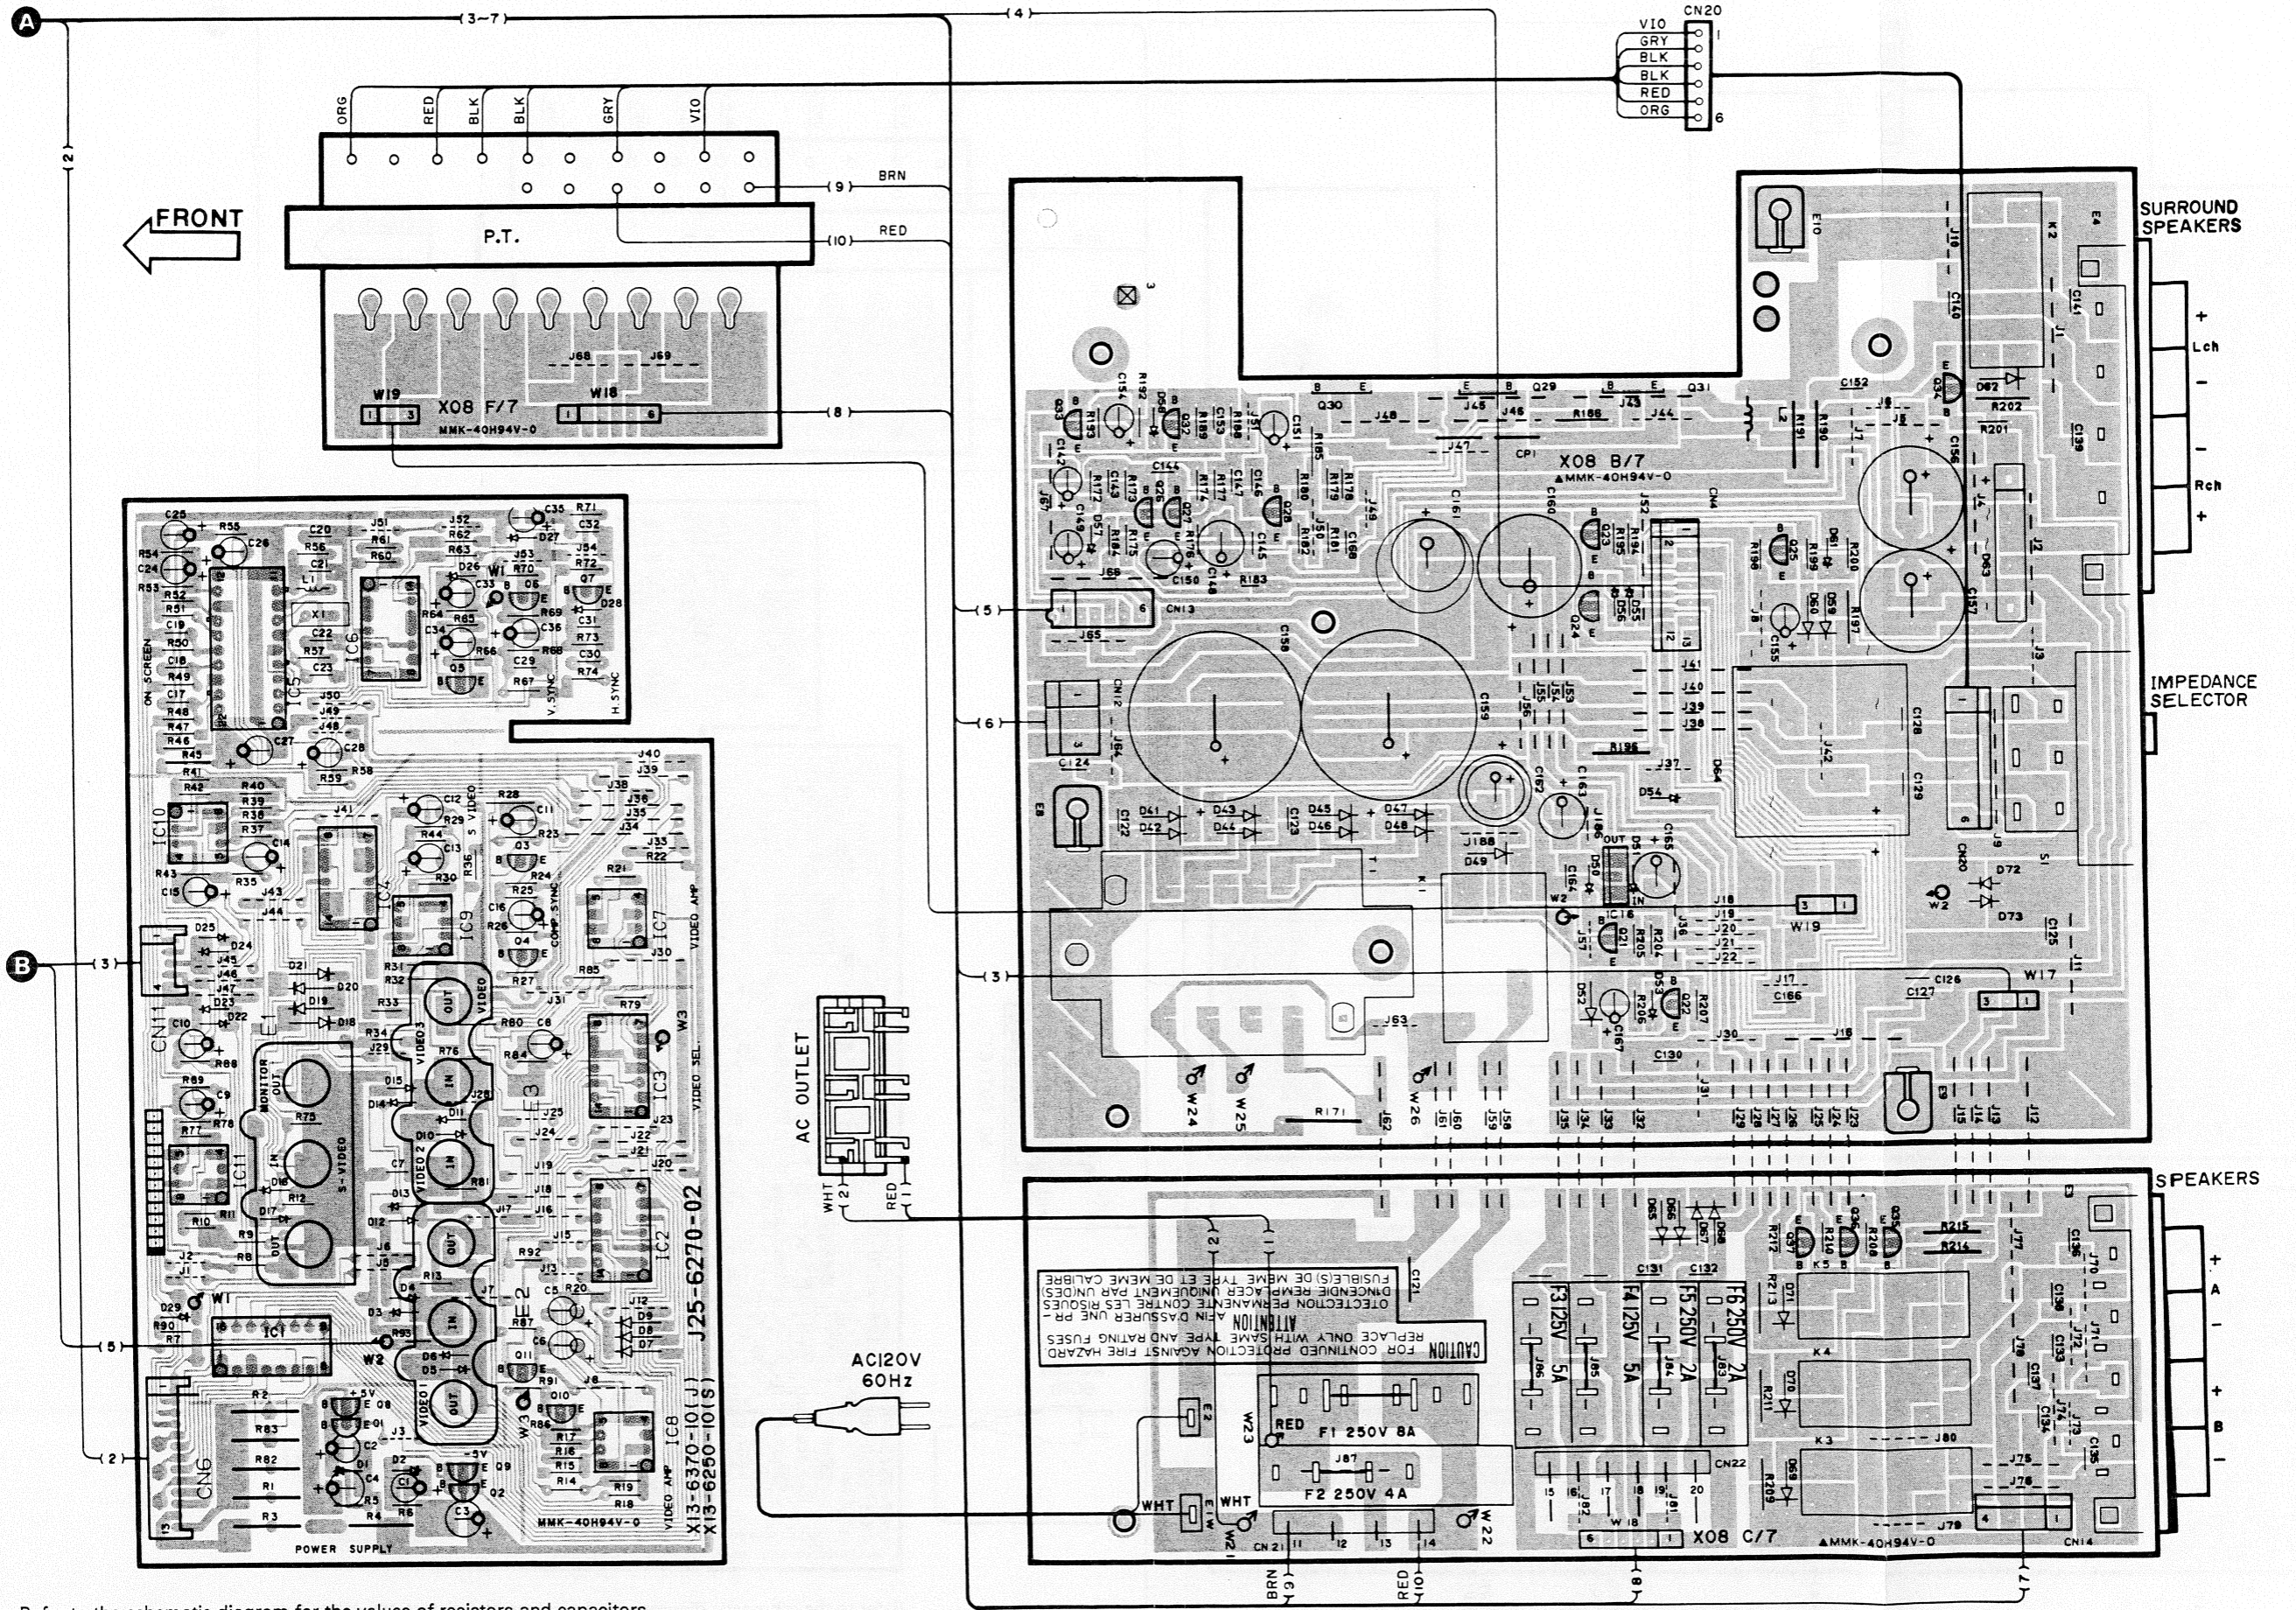


Refer to the schematic diagram for the values of resistors and capacitors.

PC BOARD (FOIL SIDE VIEW)

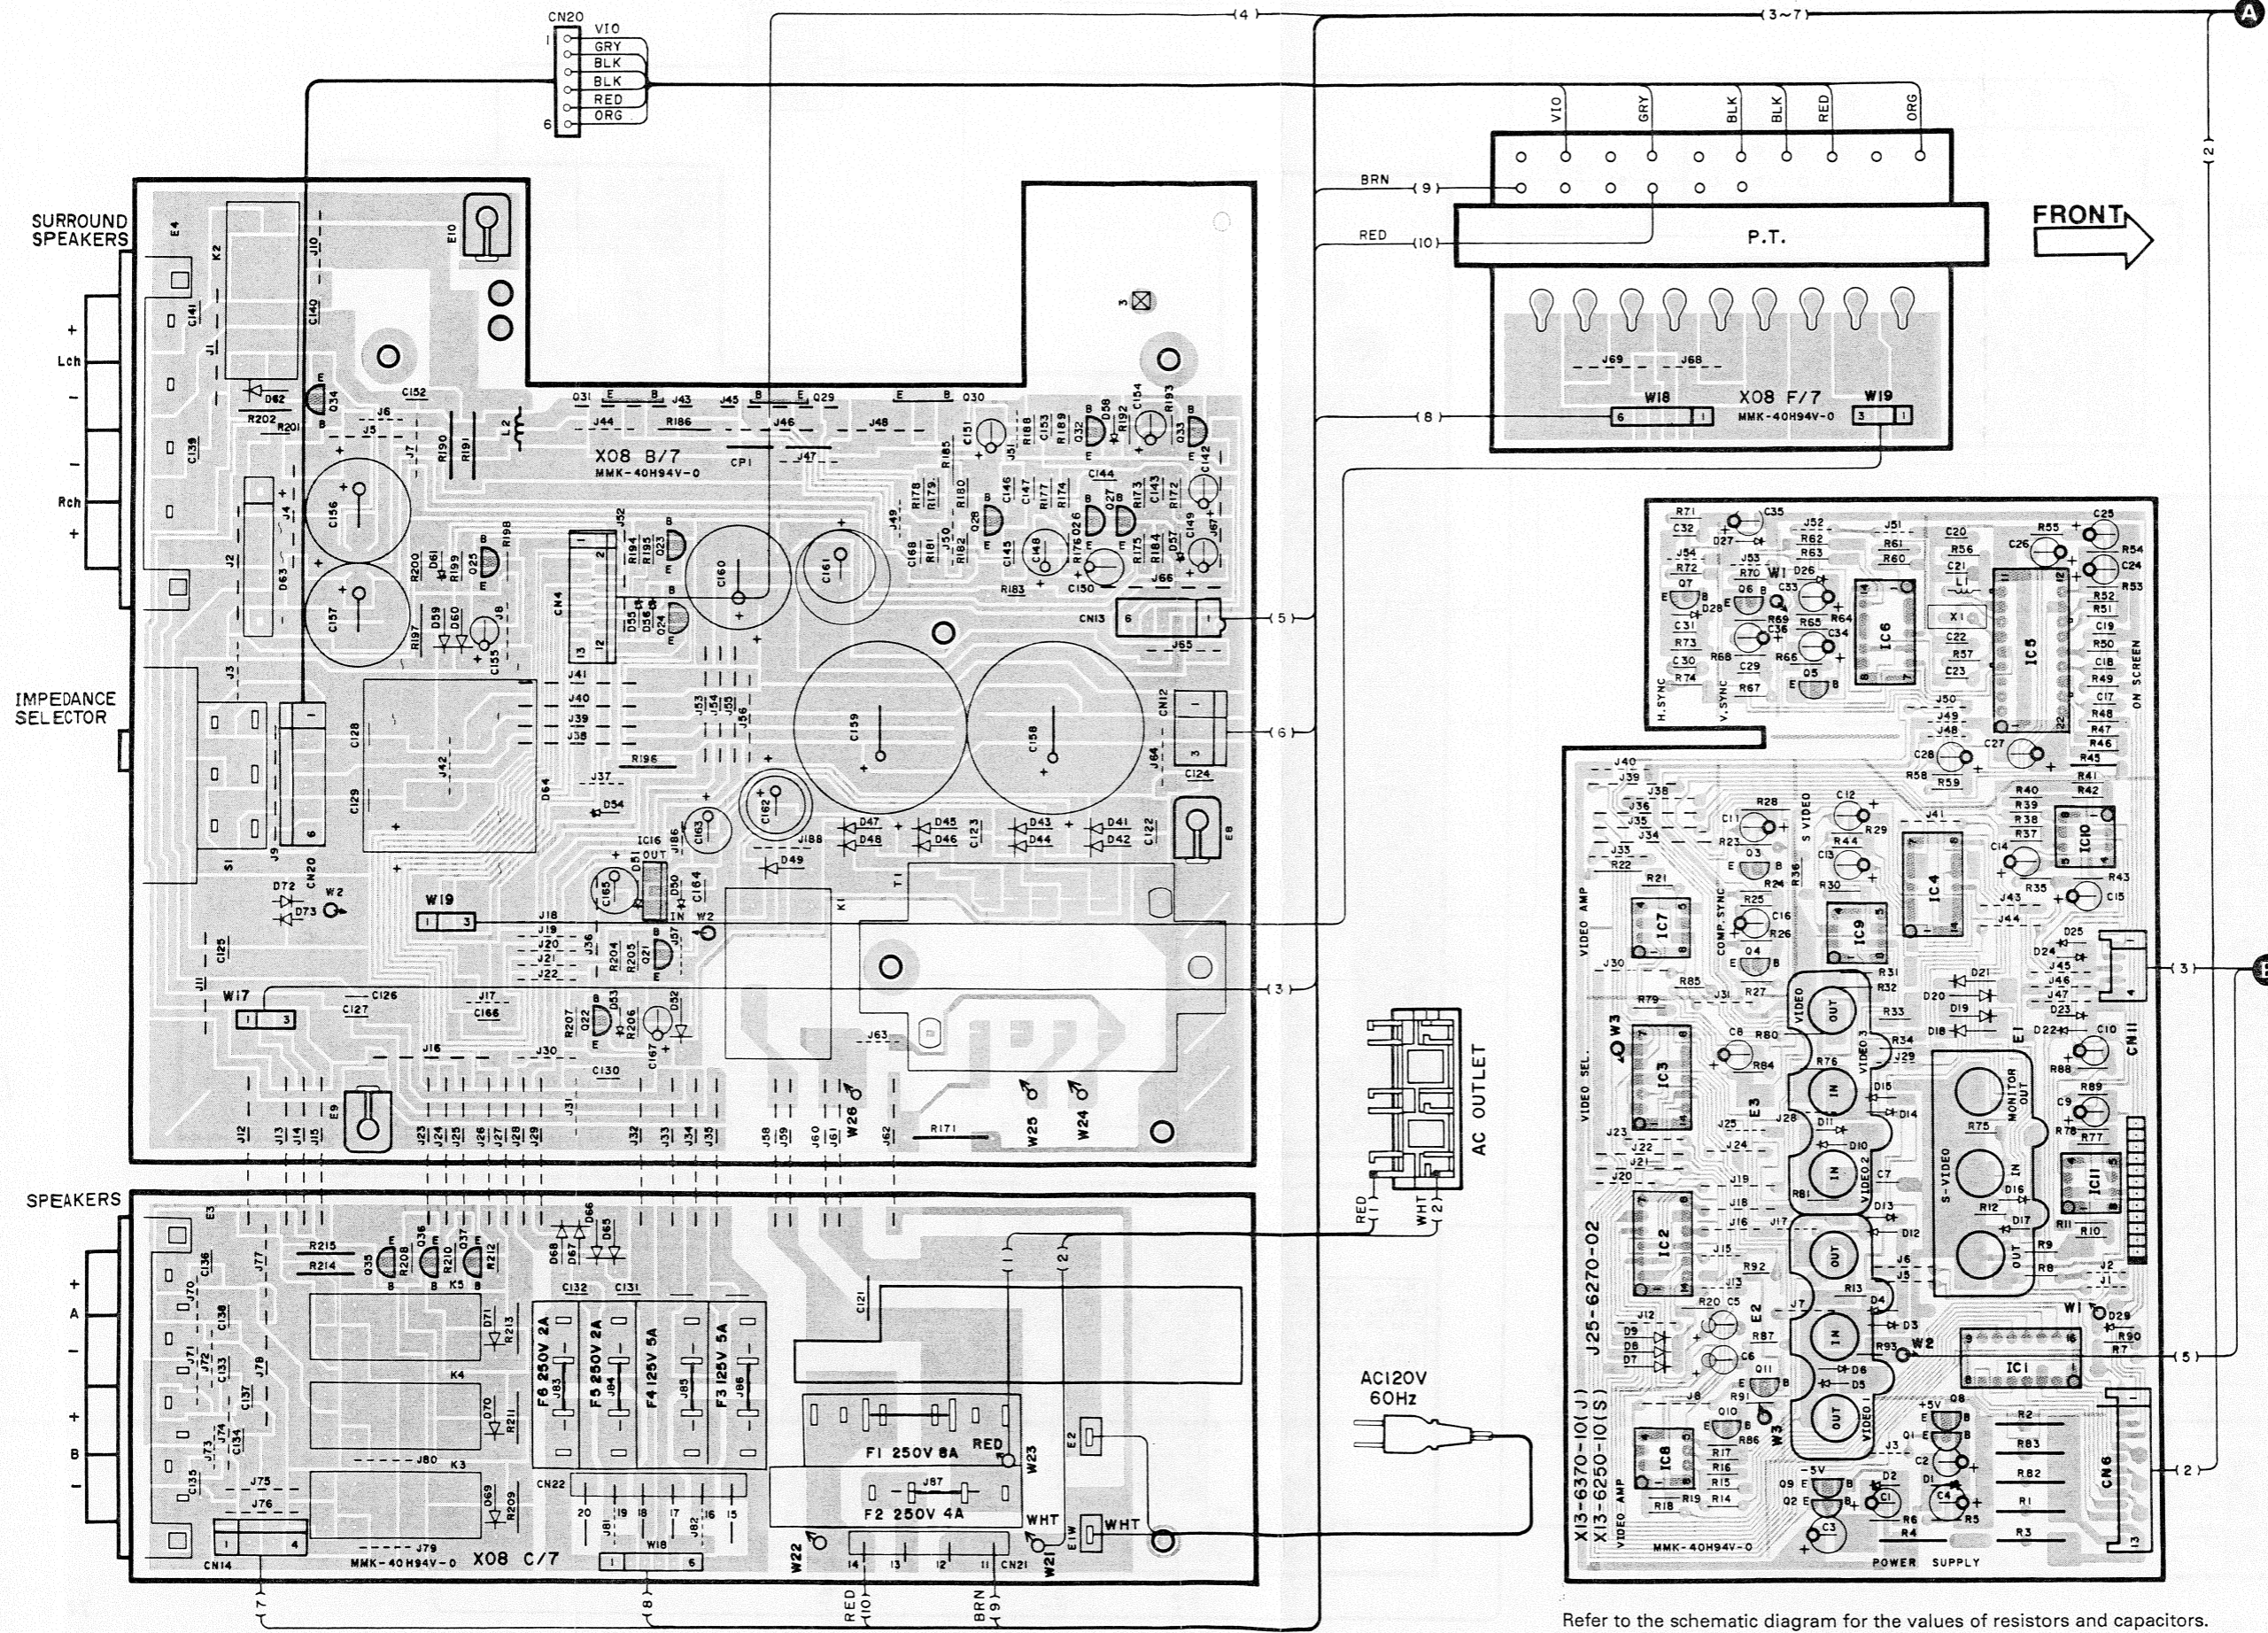

Refer to the schematic diagram for the values of resistors and capacitors.


(X05-353X-XX) (A/2) (JAPAN MADE)
 (X05-381X-XX) (A/2) (SINGAPORE MADE)

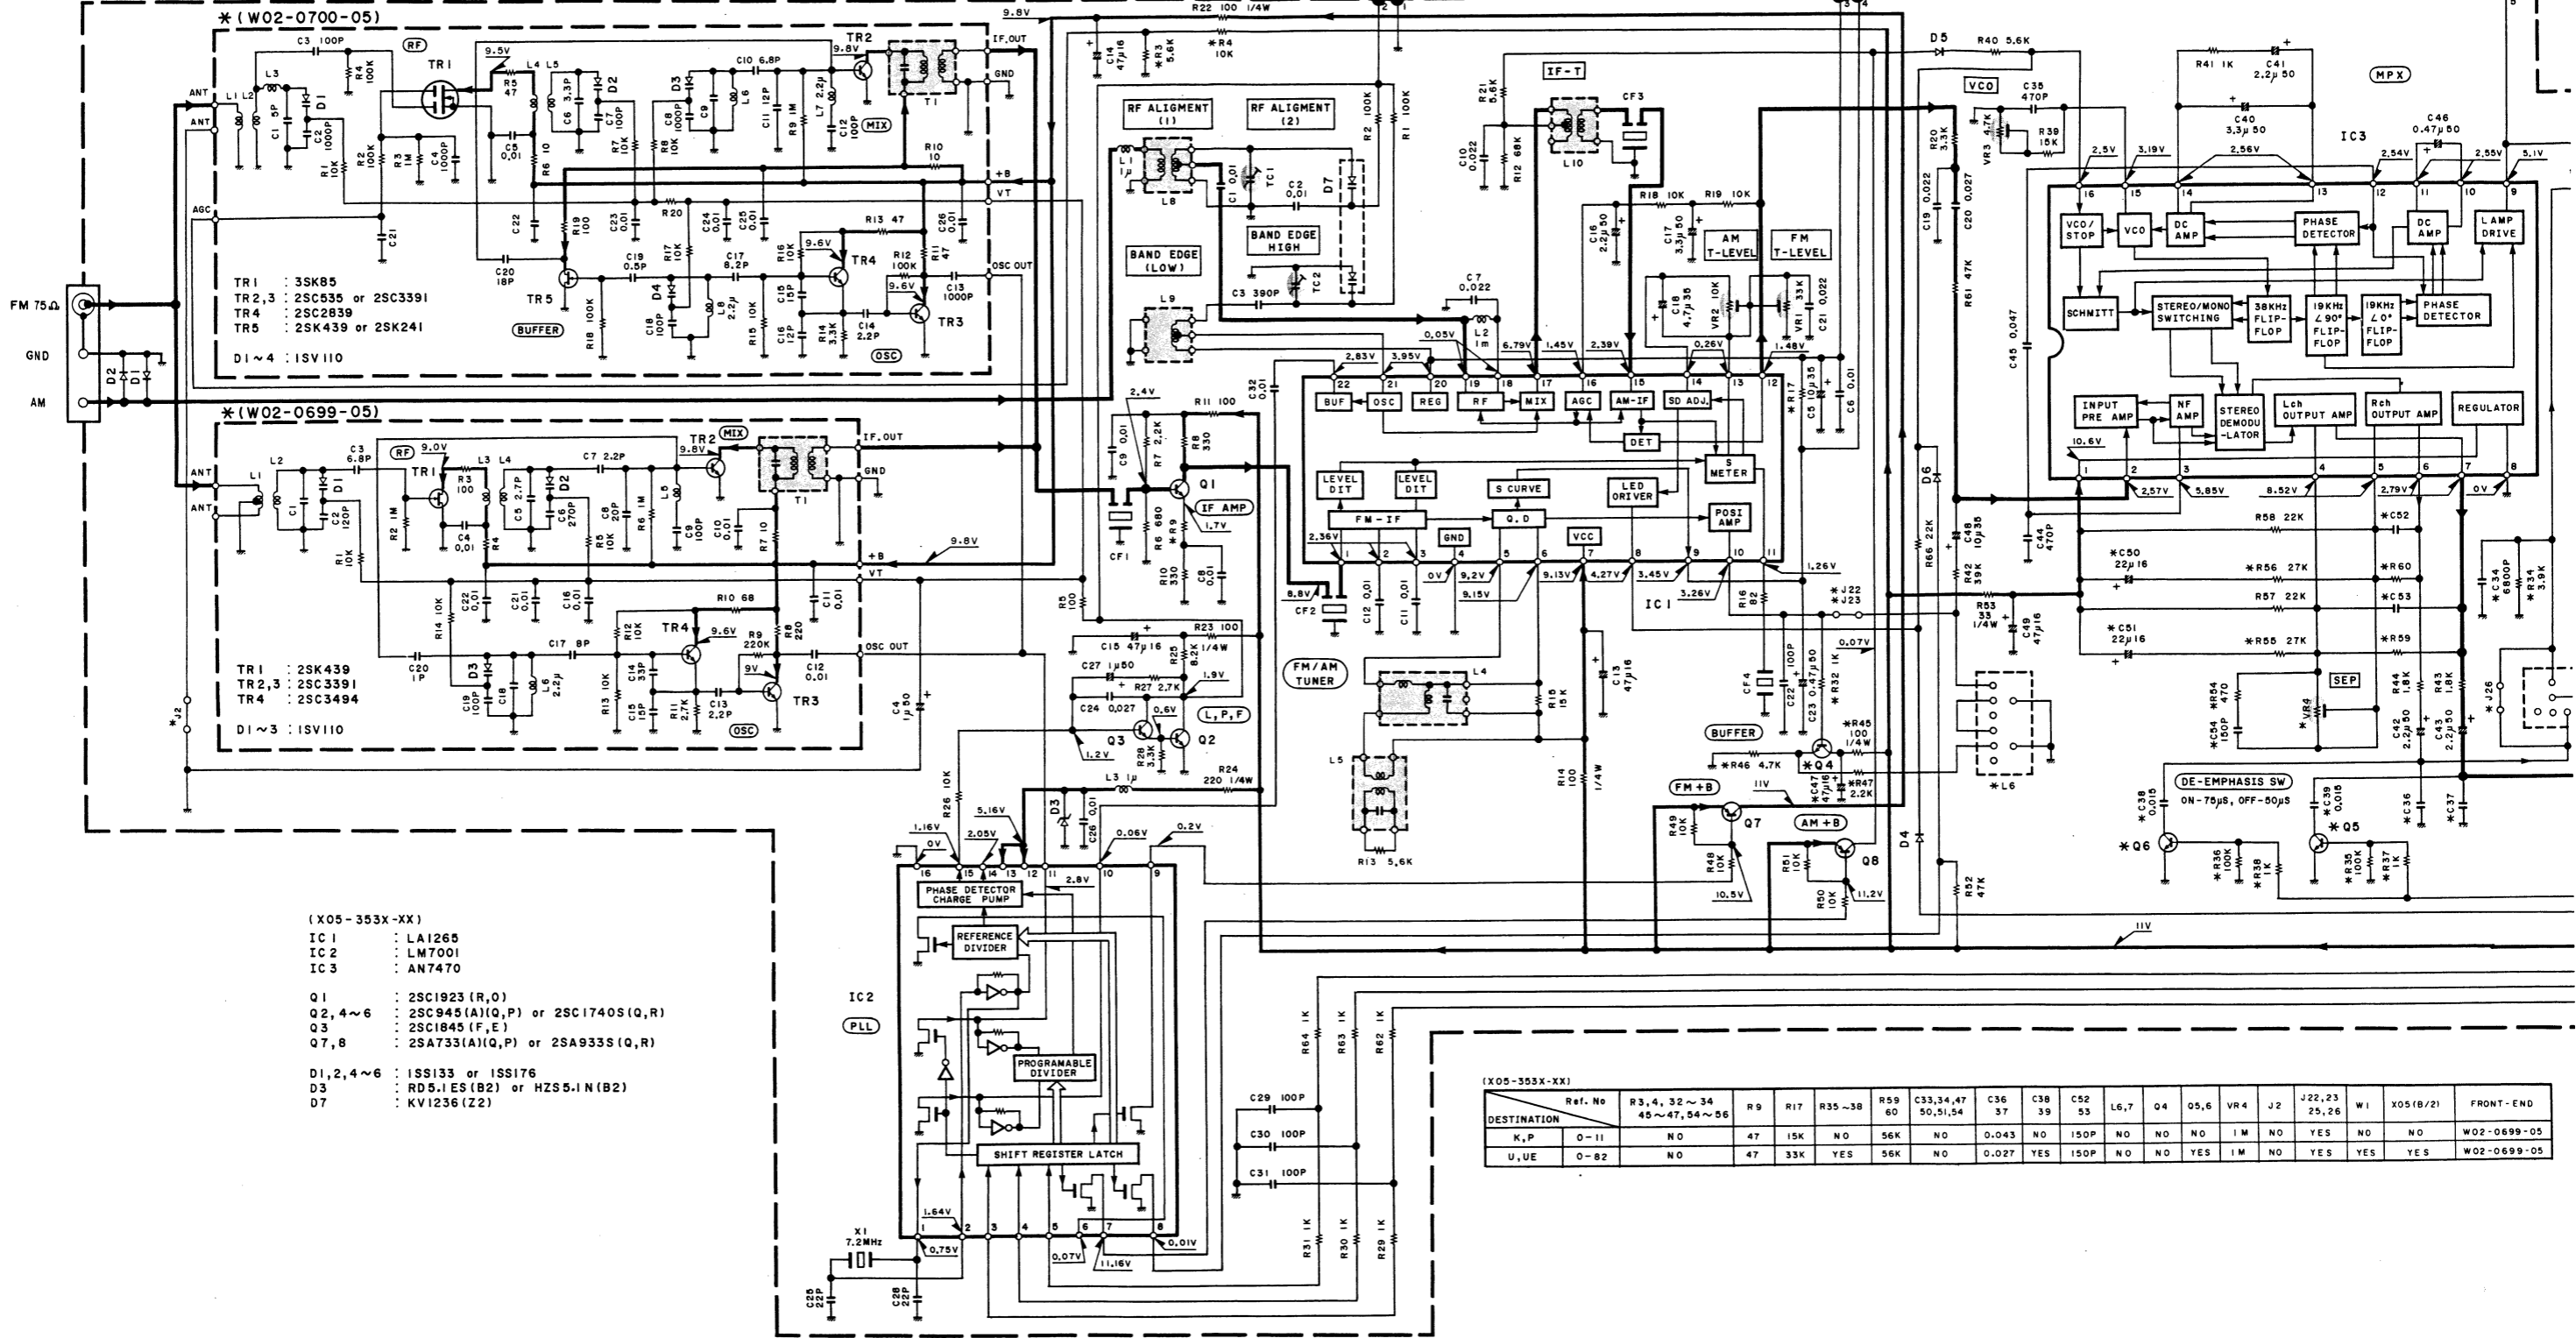


- (X05-353X-XX)
- IC 1 : LA1265
 - IC 2 : LM7001
 - IC 3 : AN7470
 - Q 1 : 2SC1923 (R,O)
 - Q 2, 4 ~ 6 : 2SC945(A)(Q,P) or 2SC1740S(Q,R)
 - Q 3 : 2SC1845 (F,E)
 - Q 7, 8 : 2SA733(A)(Q,P) or 2SA933S(Q,R)
 - D 1, 2, 4 ~ 6 : 1SS133 or 1SS176
 - D 3 : RD5.1ES(B2) or HZS5.1N(B2)
 - D 7 : KV1236(Z2)

| DESTINATION | Ref. No | R 3, 4, 32 ~ 34 45 ~ 47, 54 ~ 56 | R 9 | R 17 | R 35 ~ 38 | R 59 60 | C 33, 34, 47 50, 51, 54 | C 36 37 | C 38 39 | C 52 53 | L 6, 7 | Q 4 | O 5, 6 | VR 4 | J 2 | J 22, 23 25, 26 | W 1 | X 05 (B/2) | FRONT-END |
|-------------|---------|-------------------------------------|-----|------|-----------|------------|----------------------------|------------|------------|------------|--------|-----|--------|------|-----|--------------------|-----|------------|-------------|
| K, P | 0-11 | NO | 47 | 15K | NO | 56K | NO | 0.043 | NO | 150P | NO | NO | NO | 1M | NO | YES | NO | NO | W02-0699-05 |
| U, UE | 0-82 | NO | 47 | 33K | YES | 56K | NO | 0.027 | YES | 150P | NO | NO | YES | 1M | NO | YES | YES | YES | W02-0699-05 |


2SA733(A) 2SC1845
 2SC1923
 2SC2878
 2SC945(A)




2SA933S
 2SC1740S




2SB772
 2SD882




μPD4066BC
 μPD4069UBC

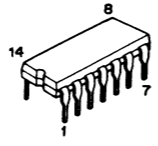


AN7470
 μPA80C

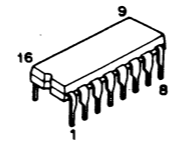


MB88323A-K2

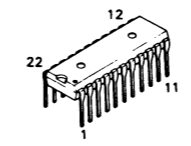


LA1265

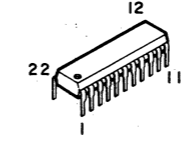


LM7001

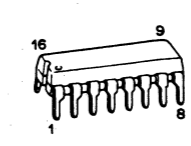

MC14577A

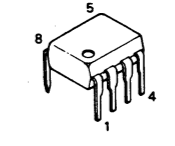


CAUTION : For continued :
 components only with manuf
 (refer to parts list). Δ Indi
 nents. To reduce the risk of e
 or resistance measurements
 parts are acceptably insula
 before the appliance is retur

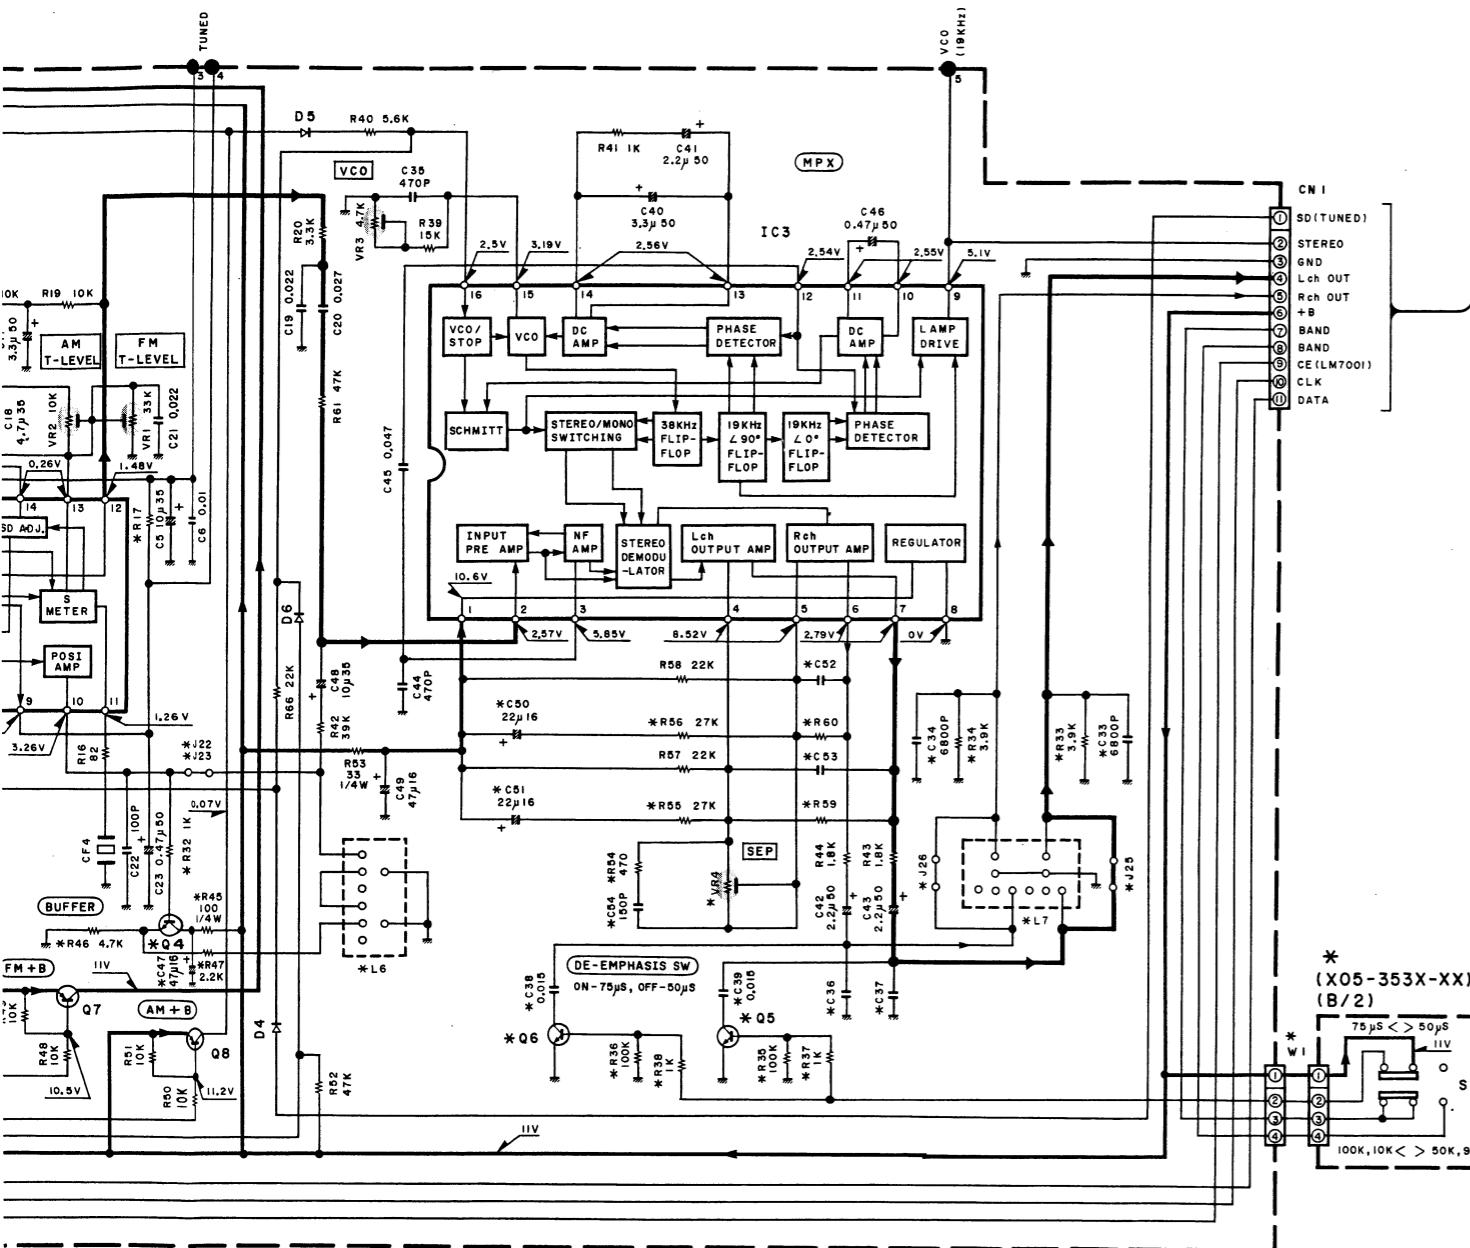


| | | | | | | | | | | | | | | | | | |
|-----------|----|-----|--------|-----|-----------|-------|-----|------|------|----|------|-----|----|--------|-----|----------|-------------|
| 2 ~ 34 | R9 | R17 | R35-38 | R59 | C33,34,47 | C36 | C38 | C52 | L6,7 | Q4 | Q5,6 | VR4 | J2 | J22,23 | W1 | X05(B/2) | FRONT-END |
| 7,54 ~ 56 | | | 60 | 60 | 50,51,54 | 37 | 37 | 53 | | | | | | 25,26 | | | |
| 0 | 47 | 15K | NO | 56K | NO | 0.043 | NO | 150P | NO | NO | NO | 1M | NO | YES | NO | NO | W02-0699-05 |
| 0 | 47 | 33K | YES | 56K | NO | 0.027 | YES | 150P | NO | NO | YES | 1M | NO | YES | YES | YES | W02-0699-05 |

— SIGNAL LINE
 — GND LINE
 — +B LINE
 - - - -B LINE

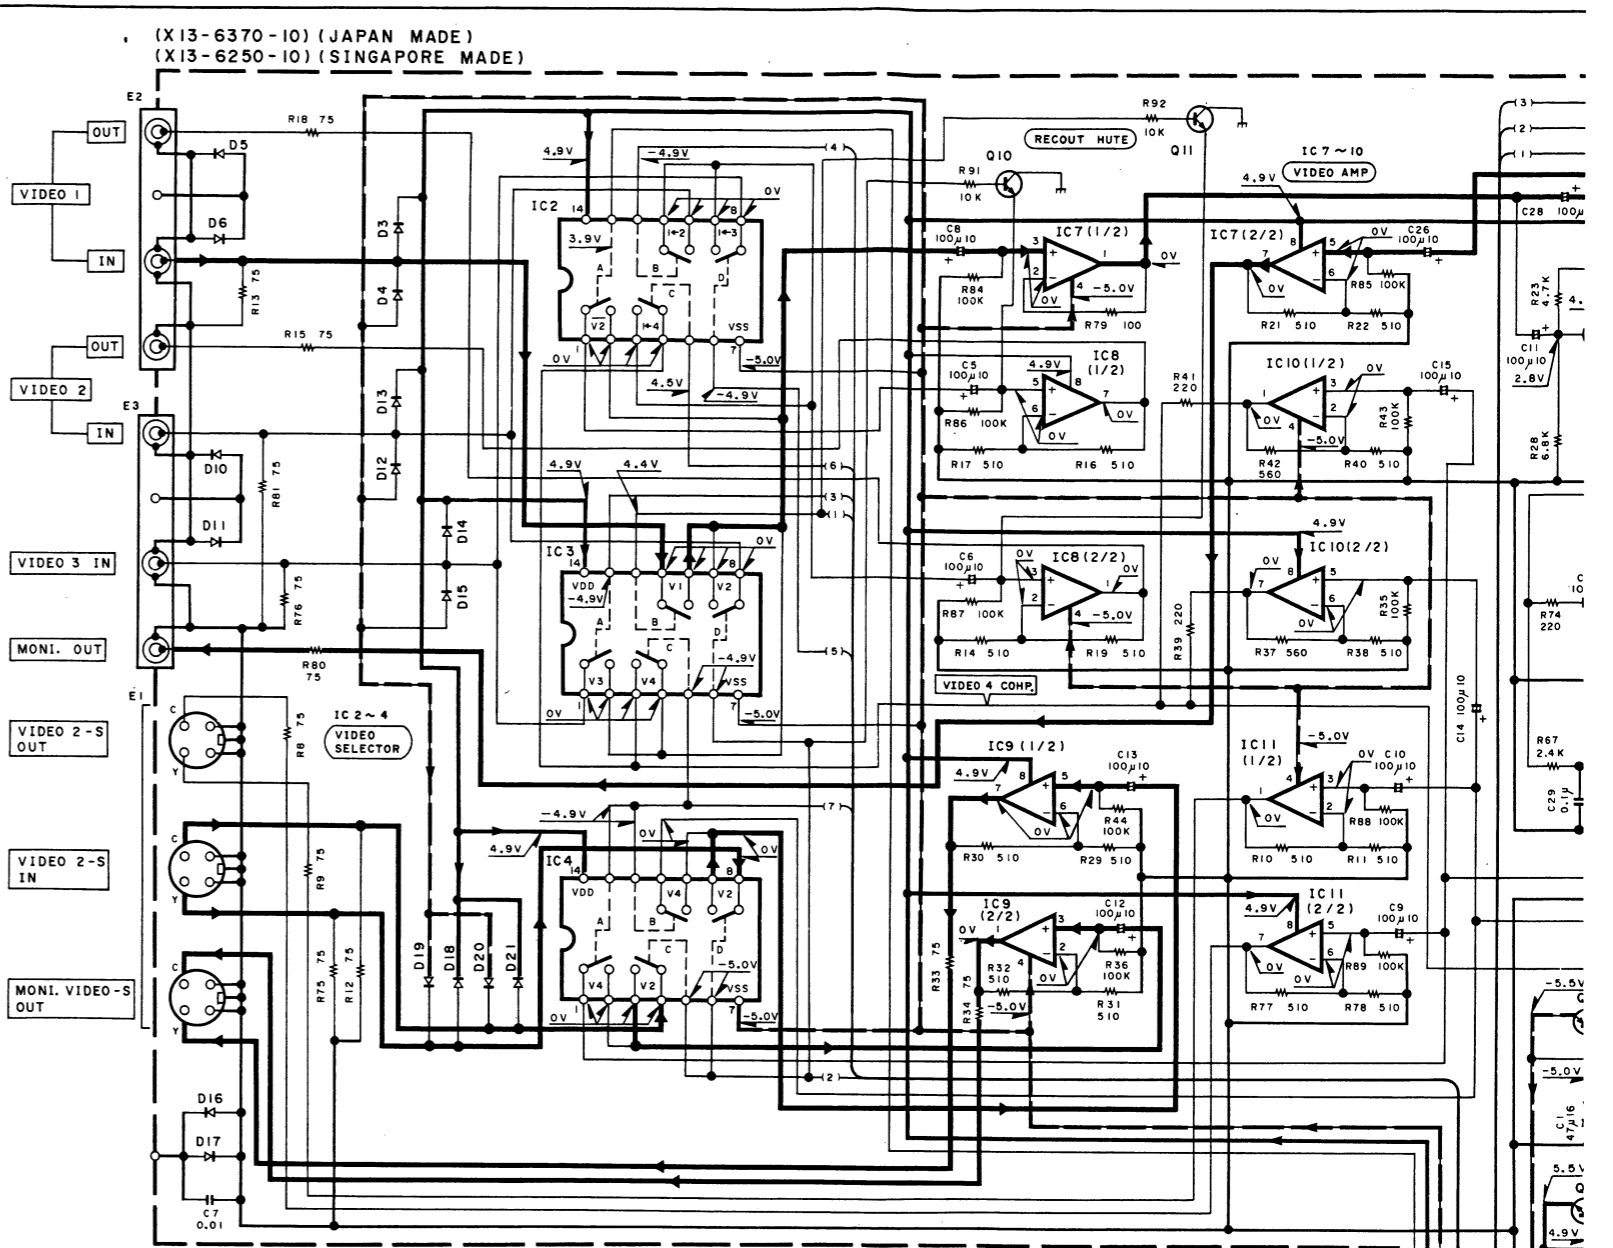

- IC 1 : µPA80C
- IC 2 ~ 4 : µPD4066BC
- IC 5 : MB88323A-K2
- IC 6 : µPD4069UBC
- IC 7 ~ 11 : MC14577A
- Q1, 8 : 2SD882(Q,P)
- Q2, 9 : 2SB772(Q,P)
- Q3, 5 ~ 7 : 2SC945(A)(Q,P) or 2SC1740S(Q,R)
- Q4 : 2SA733(A)(Q,P) or 2SA933S(Q,R)
- Q10, 11 : 2SC2878(B)
- D1, 2 : RD5.6ES(B2) or HZ55.6N(B2)
- D3 ~ 29 : ISS133 or HSS104

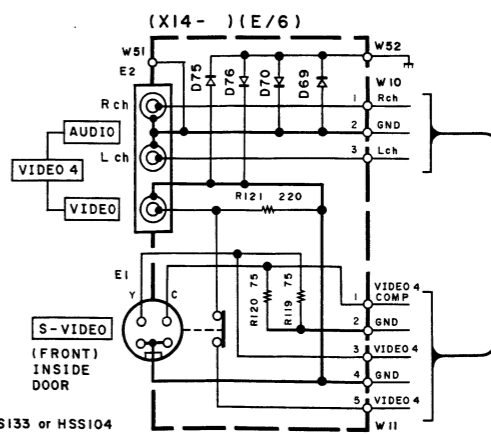

LM7001 MC14577A




CAUTION : For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.


• DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

• Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance. Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.

• Die angegebenen Gleichspannungswerte wurden mit einem hochohmigen Voltmeter gemessen. Dabei schwanken die Meßwerte aufgrund von Unterschieden zwischen einzelnen instrumenten oder Geräten u.U. geringfügig.

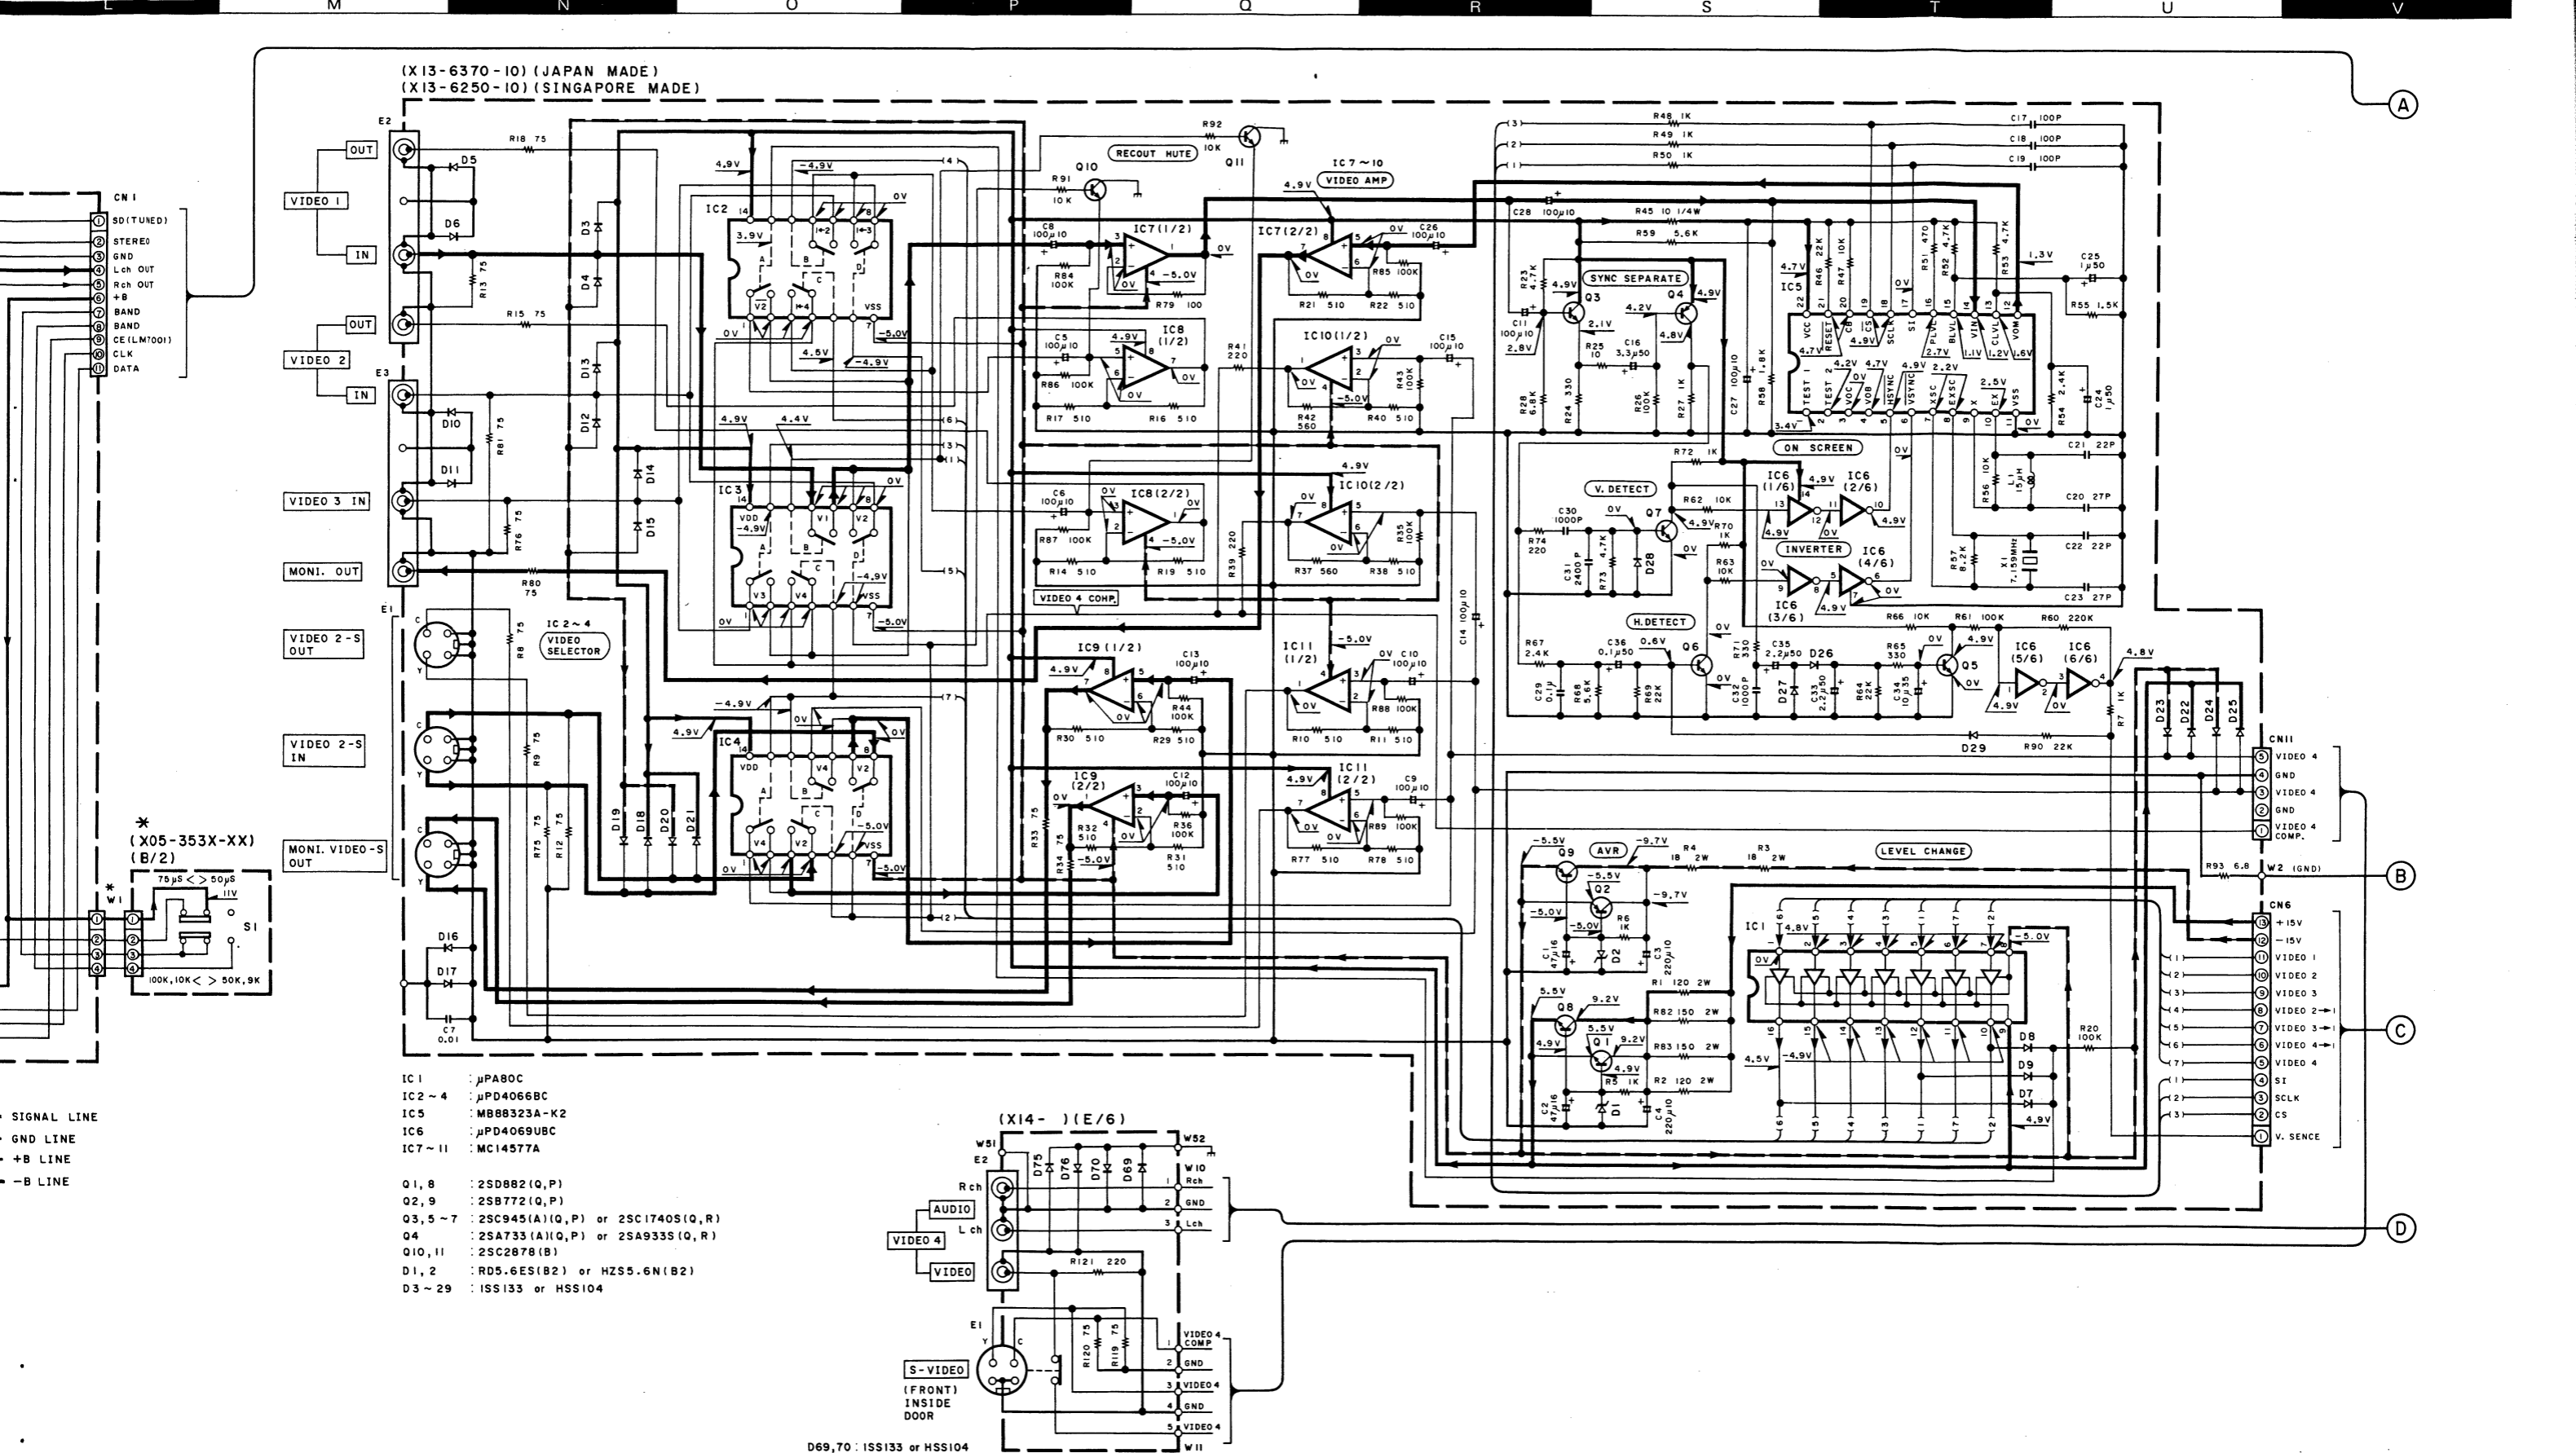

- IC 1 : μ PA80C
- IC 2 ~ 4 : μ PD4066BC
- IC 5 : MB88323A-K2
- IC 6 : μ PD4069UBC
- IC 7 ~ 11 : MC14577A
- Q 1, 8 : 2SD882 (Q,P)
- Q 2, 9 : 2SB772 (Q,P)
- Q 3, 5 ~ 7 : 2SC945 (A)(Q,P) or 2SC1740S (Q,R)
- Q 4 : 2SA733 (A)(Q,P) or 2SA933S (Q,R)
- Q 10, 11 : 2SC2878 (B)
- D 1, 2 : RD5.6ES (B2) or HZS5.6N (B2)
- D 3 ~ 29 : ISS133 or HSS104

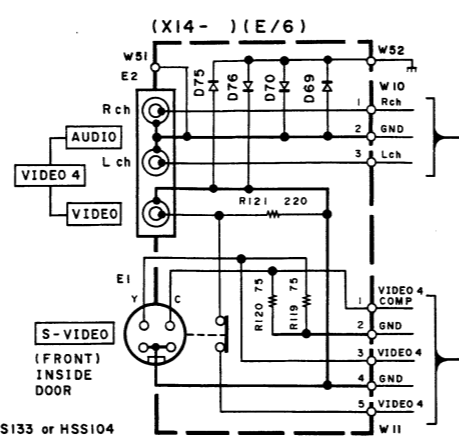

D69,70 : ISS133 or HSS104


safety critical
 mended parts
 critical compo-
 package-current
 out (exposed
 supply circuit)
 tomer.

- DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.
- Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance. Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.

- Die angegebenen Gleichspannungswerte wurden mit einem hochohmigen Voltmeter gemessen. Dabei schwanken die Meßwerte aufgrund von Unterschieden zwischen einzelnen instrumenten oder Geräten u.U. geringfügig.


KR-V9010
KENWOOD


Y05-2440-10

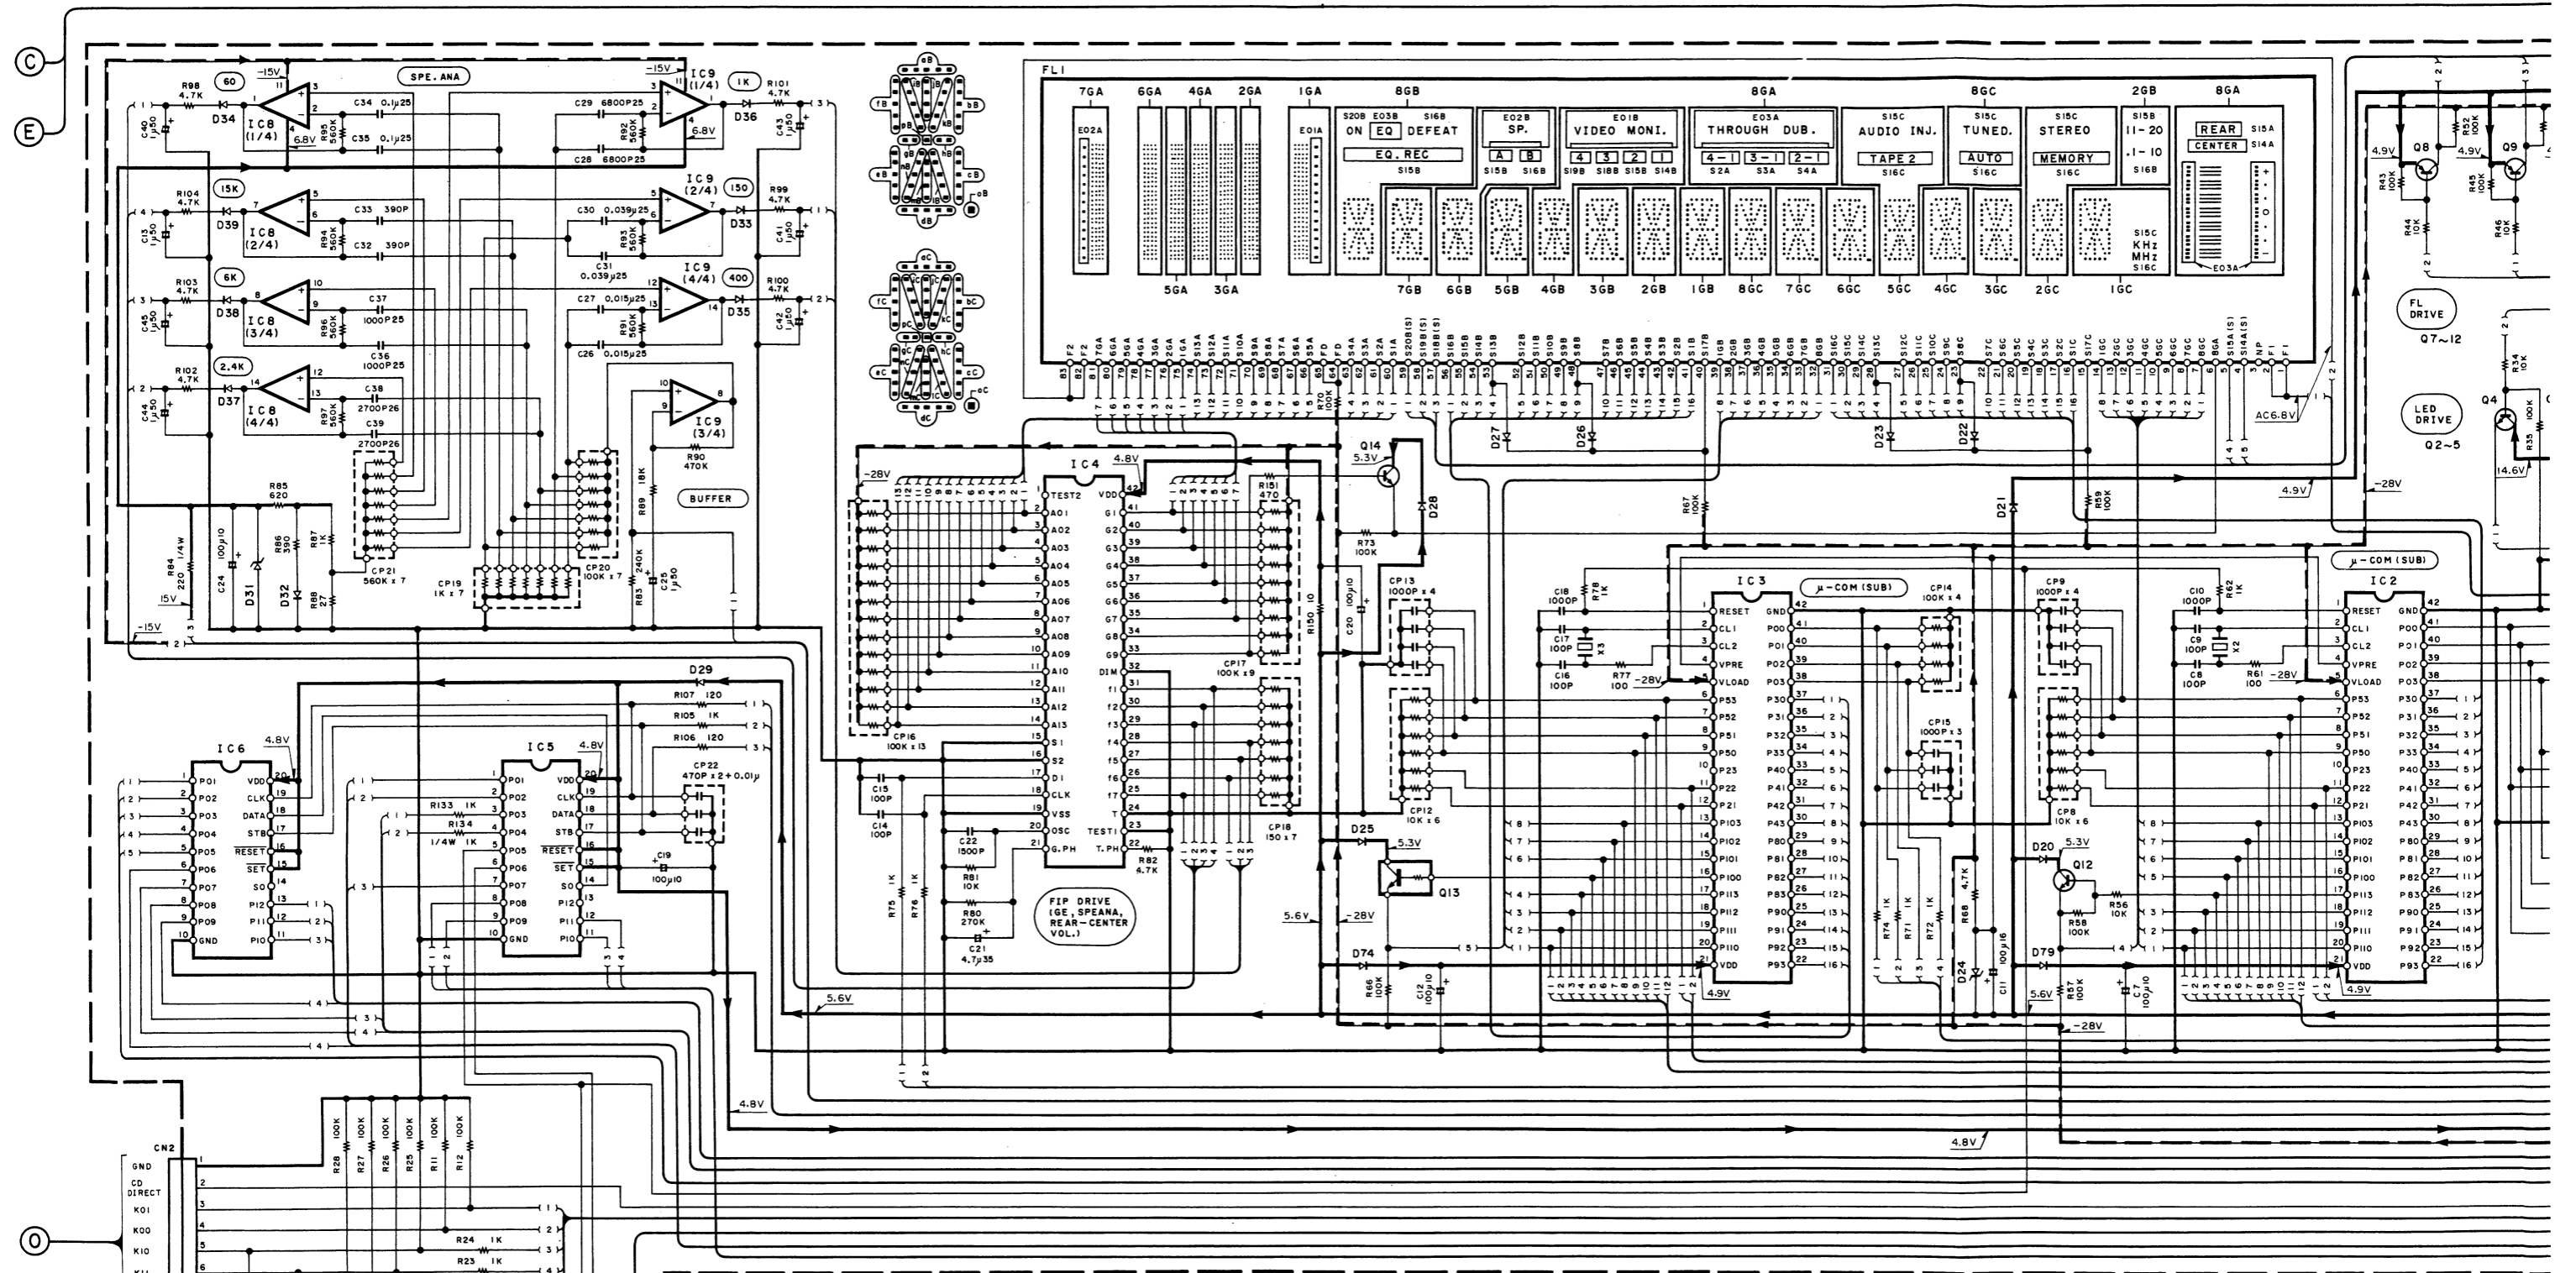

- | | | |
|-------------------------------------|--|--|
| IC 1 : μ PD75116CW-074 | Q1-5, 12 : 2SC945(A)(Q,P) or 2SC1740S(Q,R) | D1~10, 12, 13, 15~17, 20~23, 25~30, 32~55, 72~82 |
| IC 2, 3 : μ PD7537ACU-220 | Q7-11 : 2SA733(A)(Q,R) or 2SA933S(Q,R) | : ISS133 or HSS104 |
| IC 4 : LC7565 | Q13 : DTC143TS | D24 : RD10ES(B2) or HZS10N(B2) |
| IC 5, 6 : CXD1067P | Q14 : 2SC2003(L,K) | D31 : RD6.8ES(B2) or HZS6.8N(B2) |
| IC 8, 9 : NJM2058D or μ PC4574C | | D56~59 : B30-1012-05 |


- | | | | | | | | | |
|------------------------|---------------------|----------|---------------------|----------|----------|--------|---------------------|----------|
| 2SA733(A) 2SC945(A) | 2SA933S 2SC1740S | DTC143TS | μ PD7537ACU-220 | UPC4574C | NJM2058D | LC7565 | μ PD75116CW-074 | CXD1067P |
|------------------------|---------------------|----------|---------------------|----------|----------|--------|---------------------|----------|

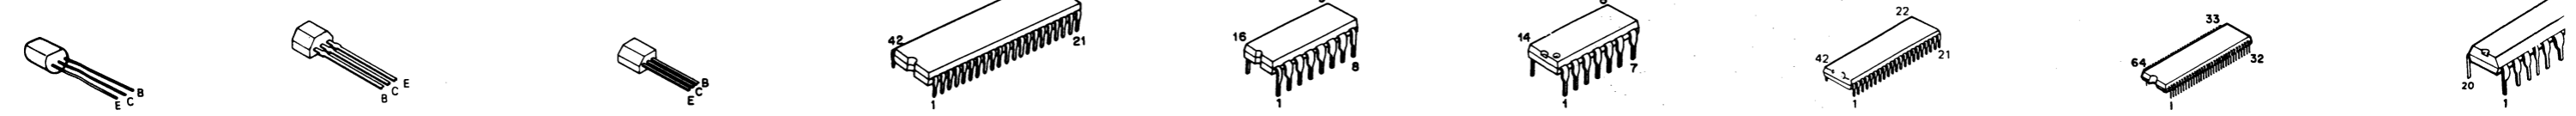

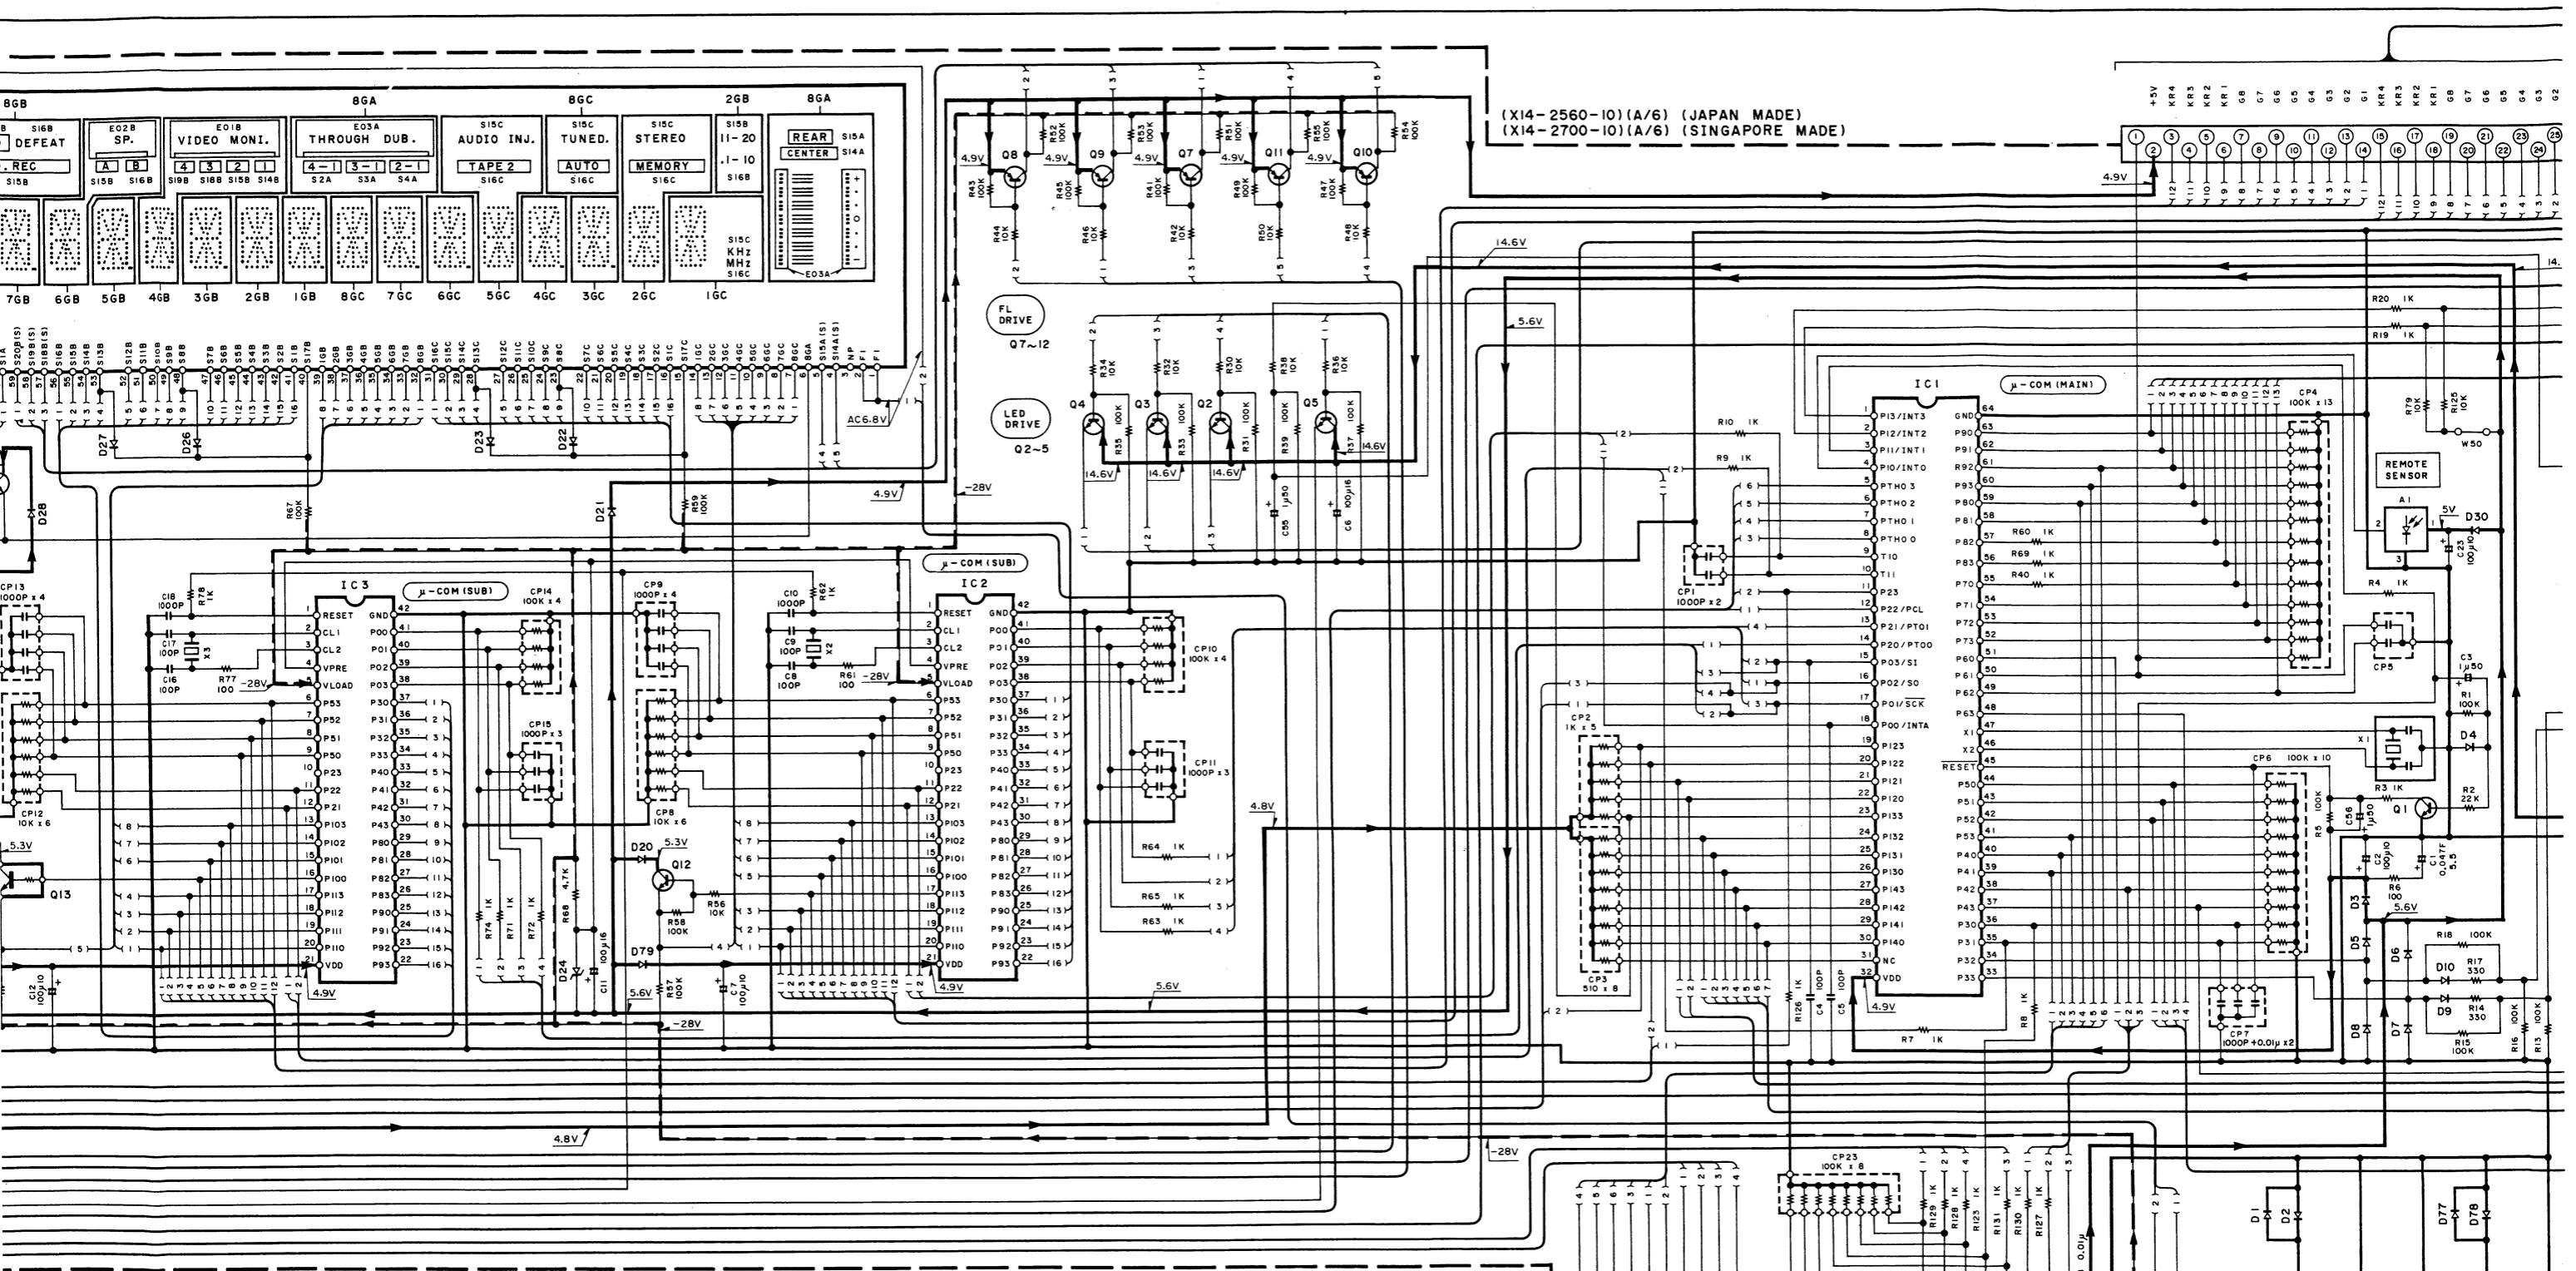


(X14-2560-10)(A/6) (JAPAN MADE)
 (X14-2700-10)(A/6) (SINGAPORE MADE)


- 740S(Q,R)
- 33S(Q,R)
- D1~10, 12, 13, 15~17, 20~23, 25~30, 32~55, 72~82
- D24 : RD10ES(B2) or HZS10(B2)
- D31 : RD6.8ES(B2) or HZS6.8N(B2)
- D56~59 : B30-1012-05




NJM2058D

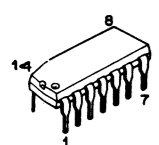


LC7565

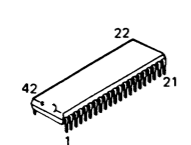

μPD75116CW-074

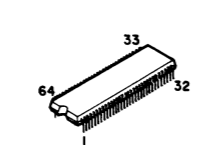



CXD1067P

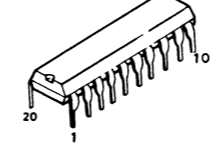

CAUTION : For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

• DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.
 • Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance. Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.

• Die angege
 wanken die
 zwischen e
 geringfügig.

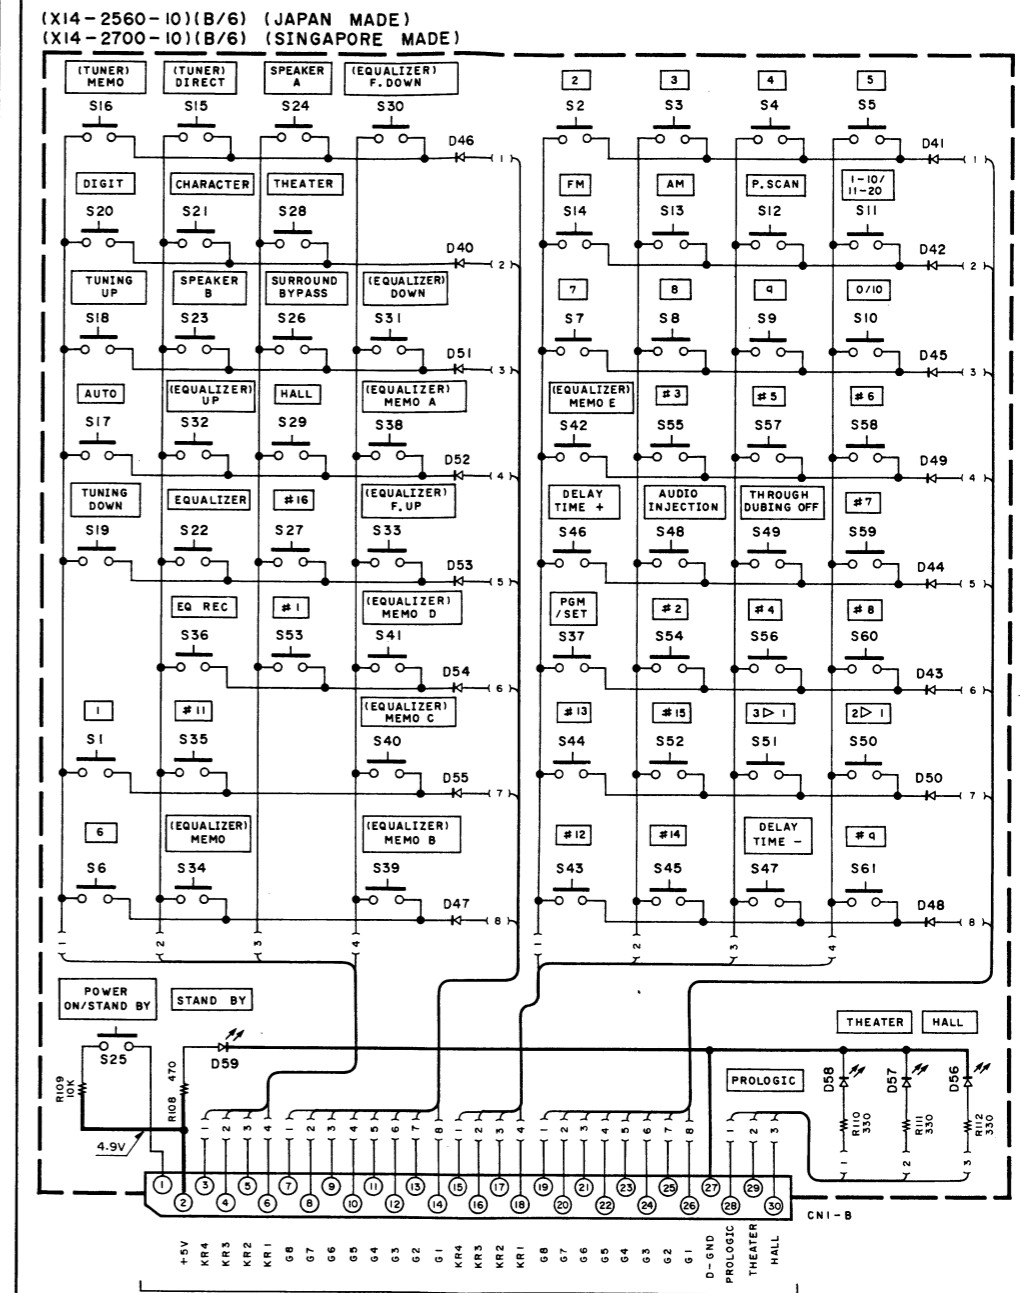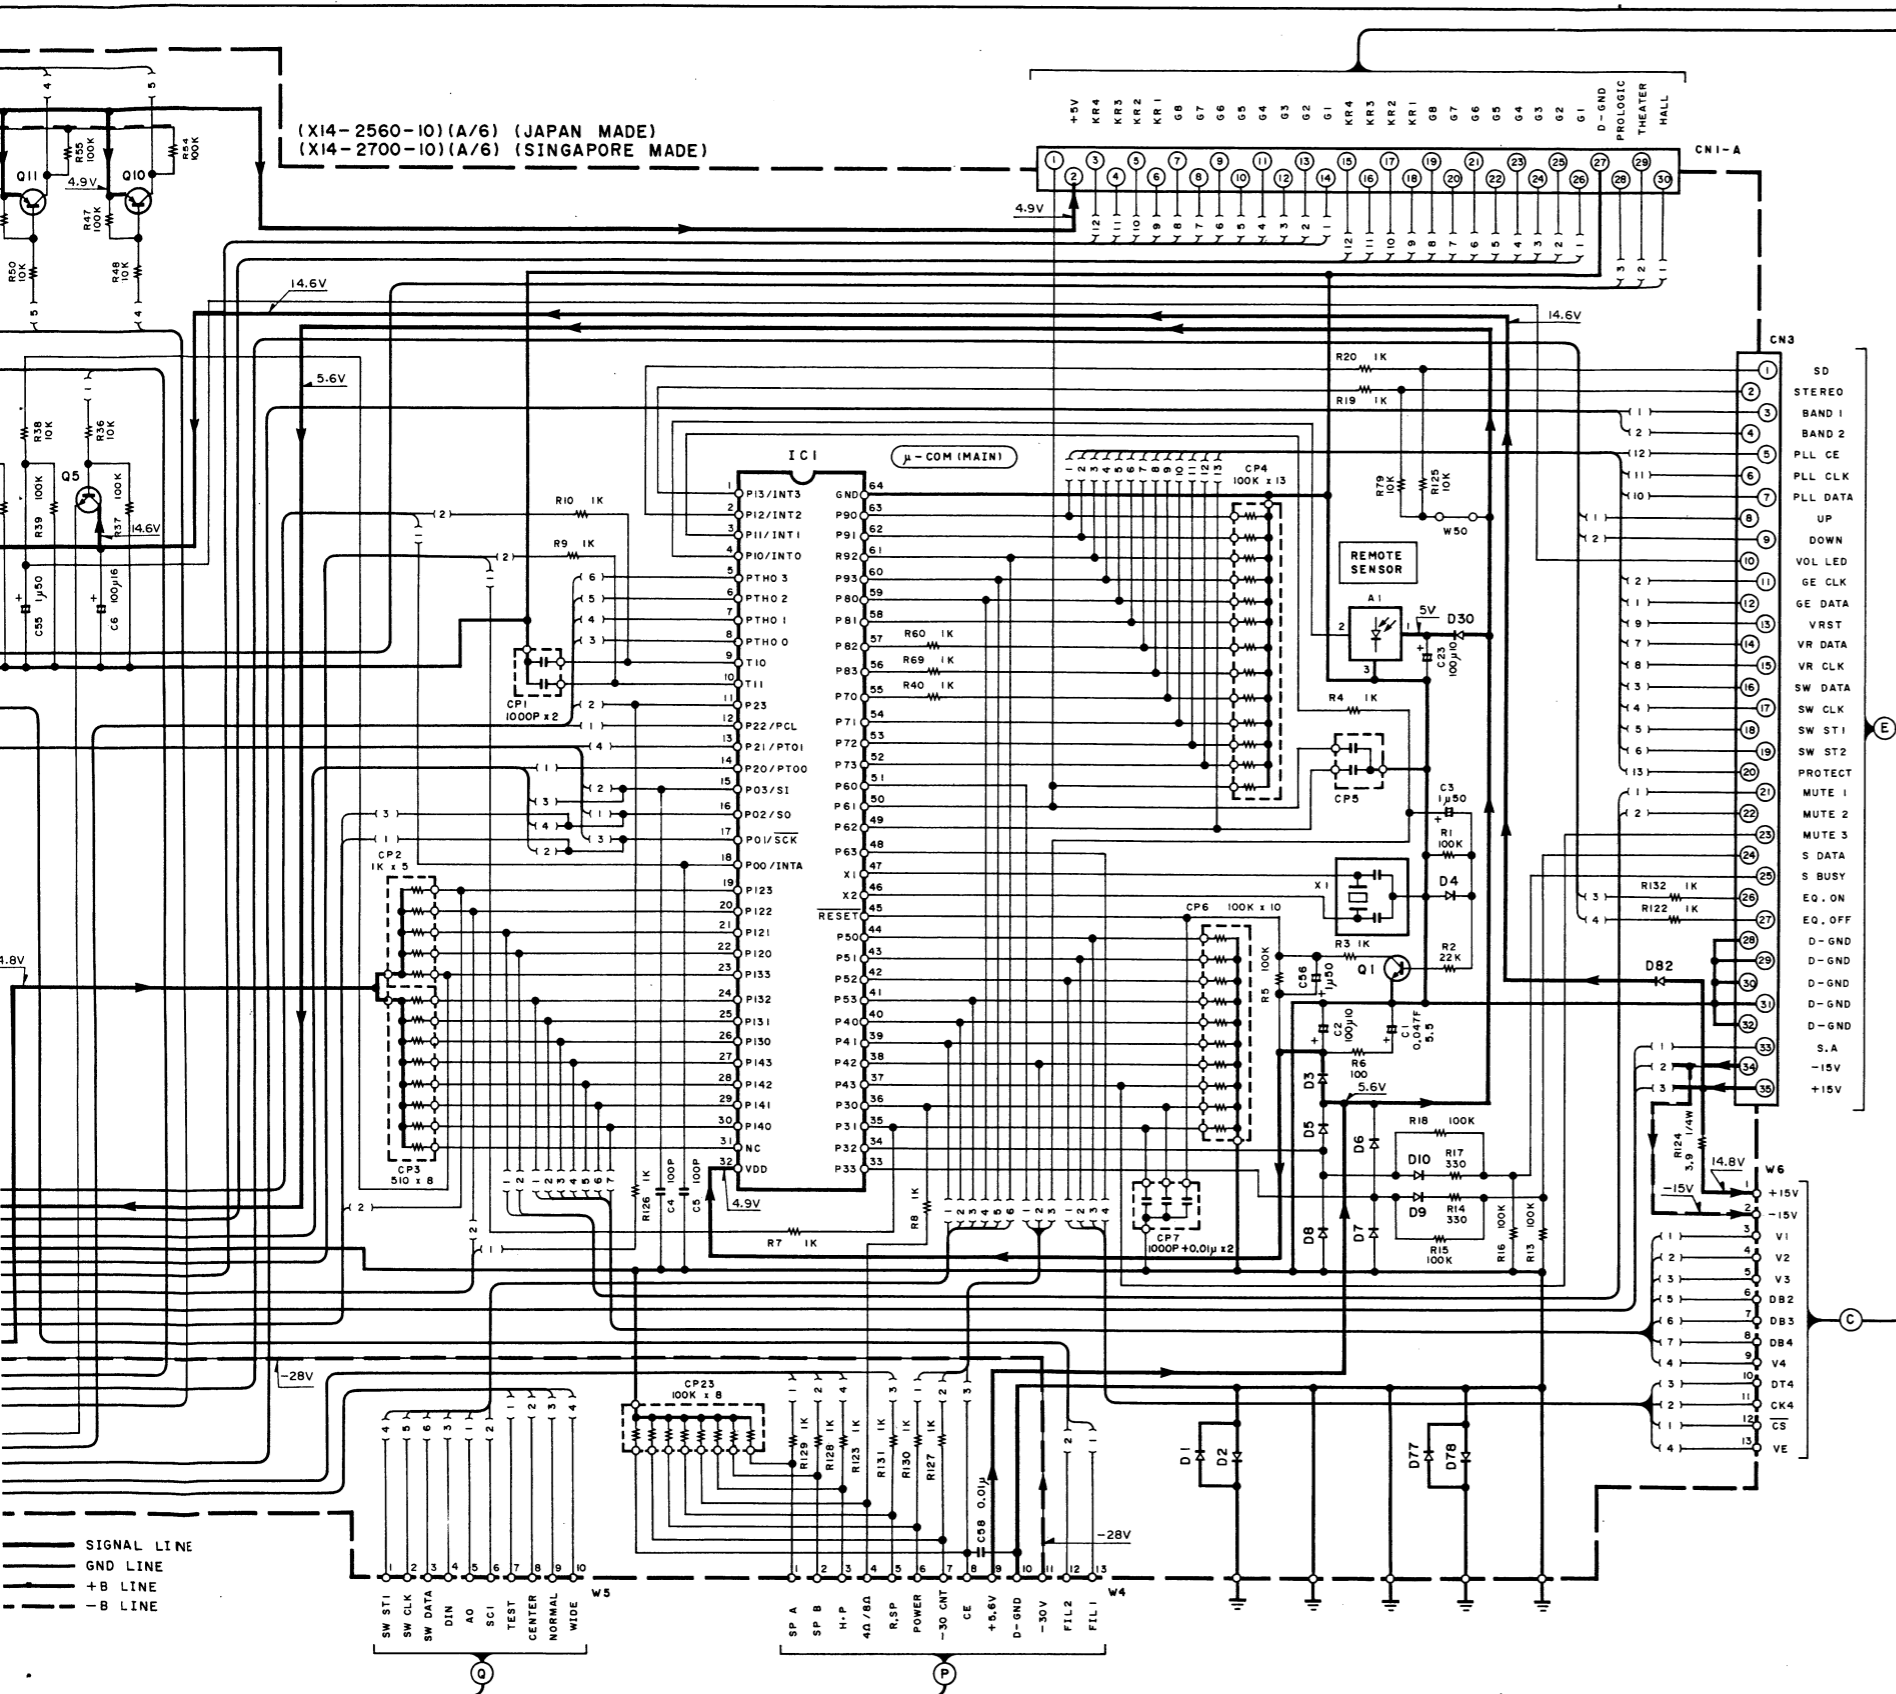


CAUTION : For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

• DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.
 • Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance. Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.

• Die angegebenen Gleichspannungswerte wurden mit einem hochohmigen Voltmeter gemessen. Dabei schwanken die Meßwerte aufgrund von Unterschieden zwischen einzelnen Instrumenten oder Geräten u.U. geringfügig.

Y05-2440-10



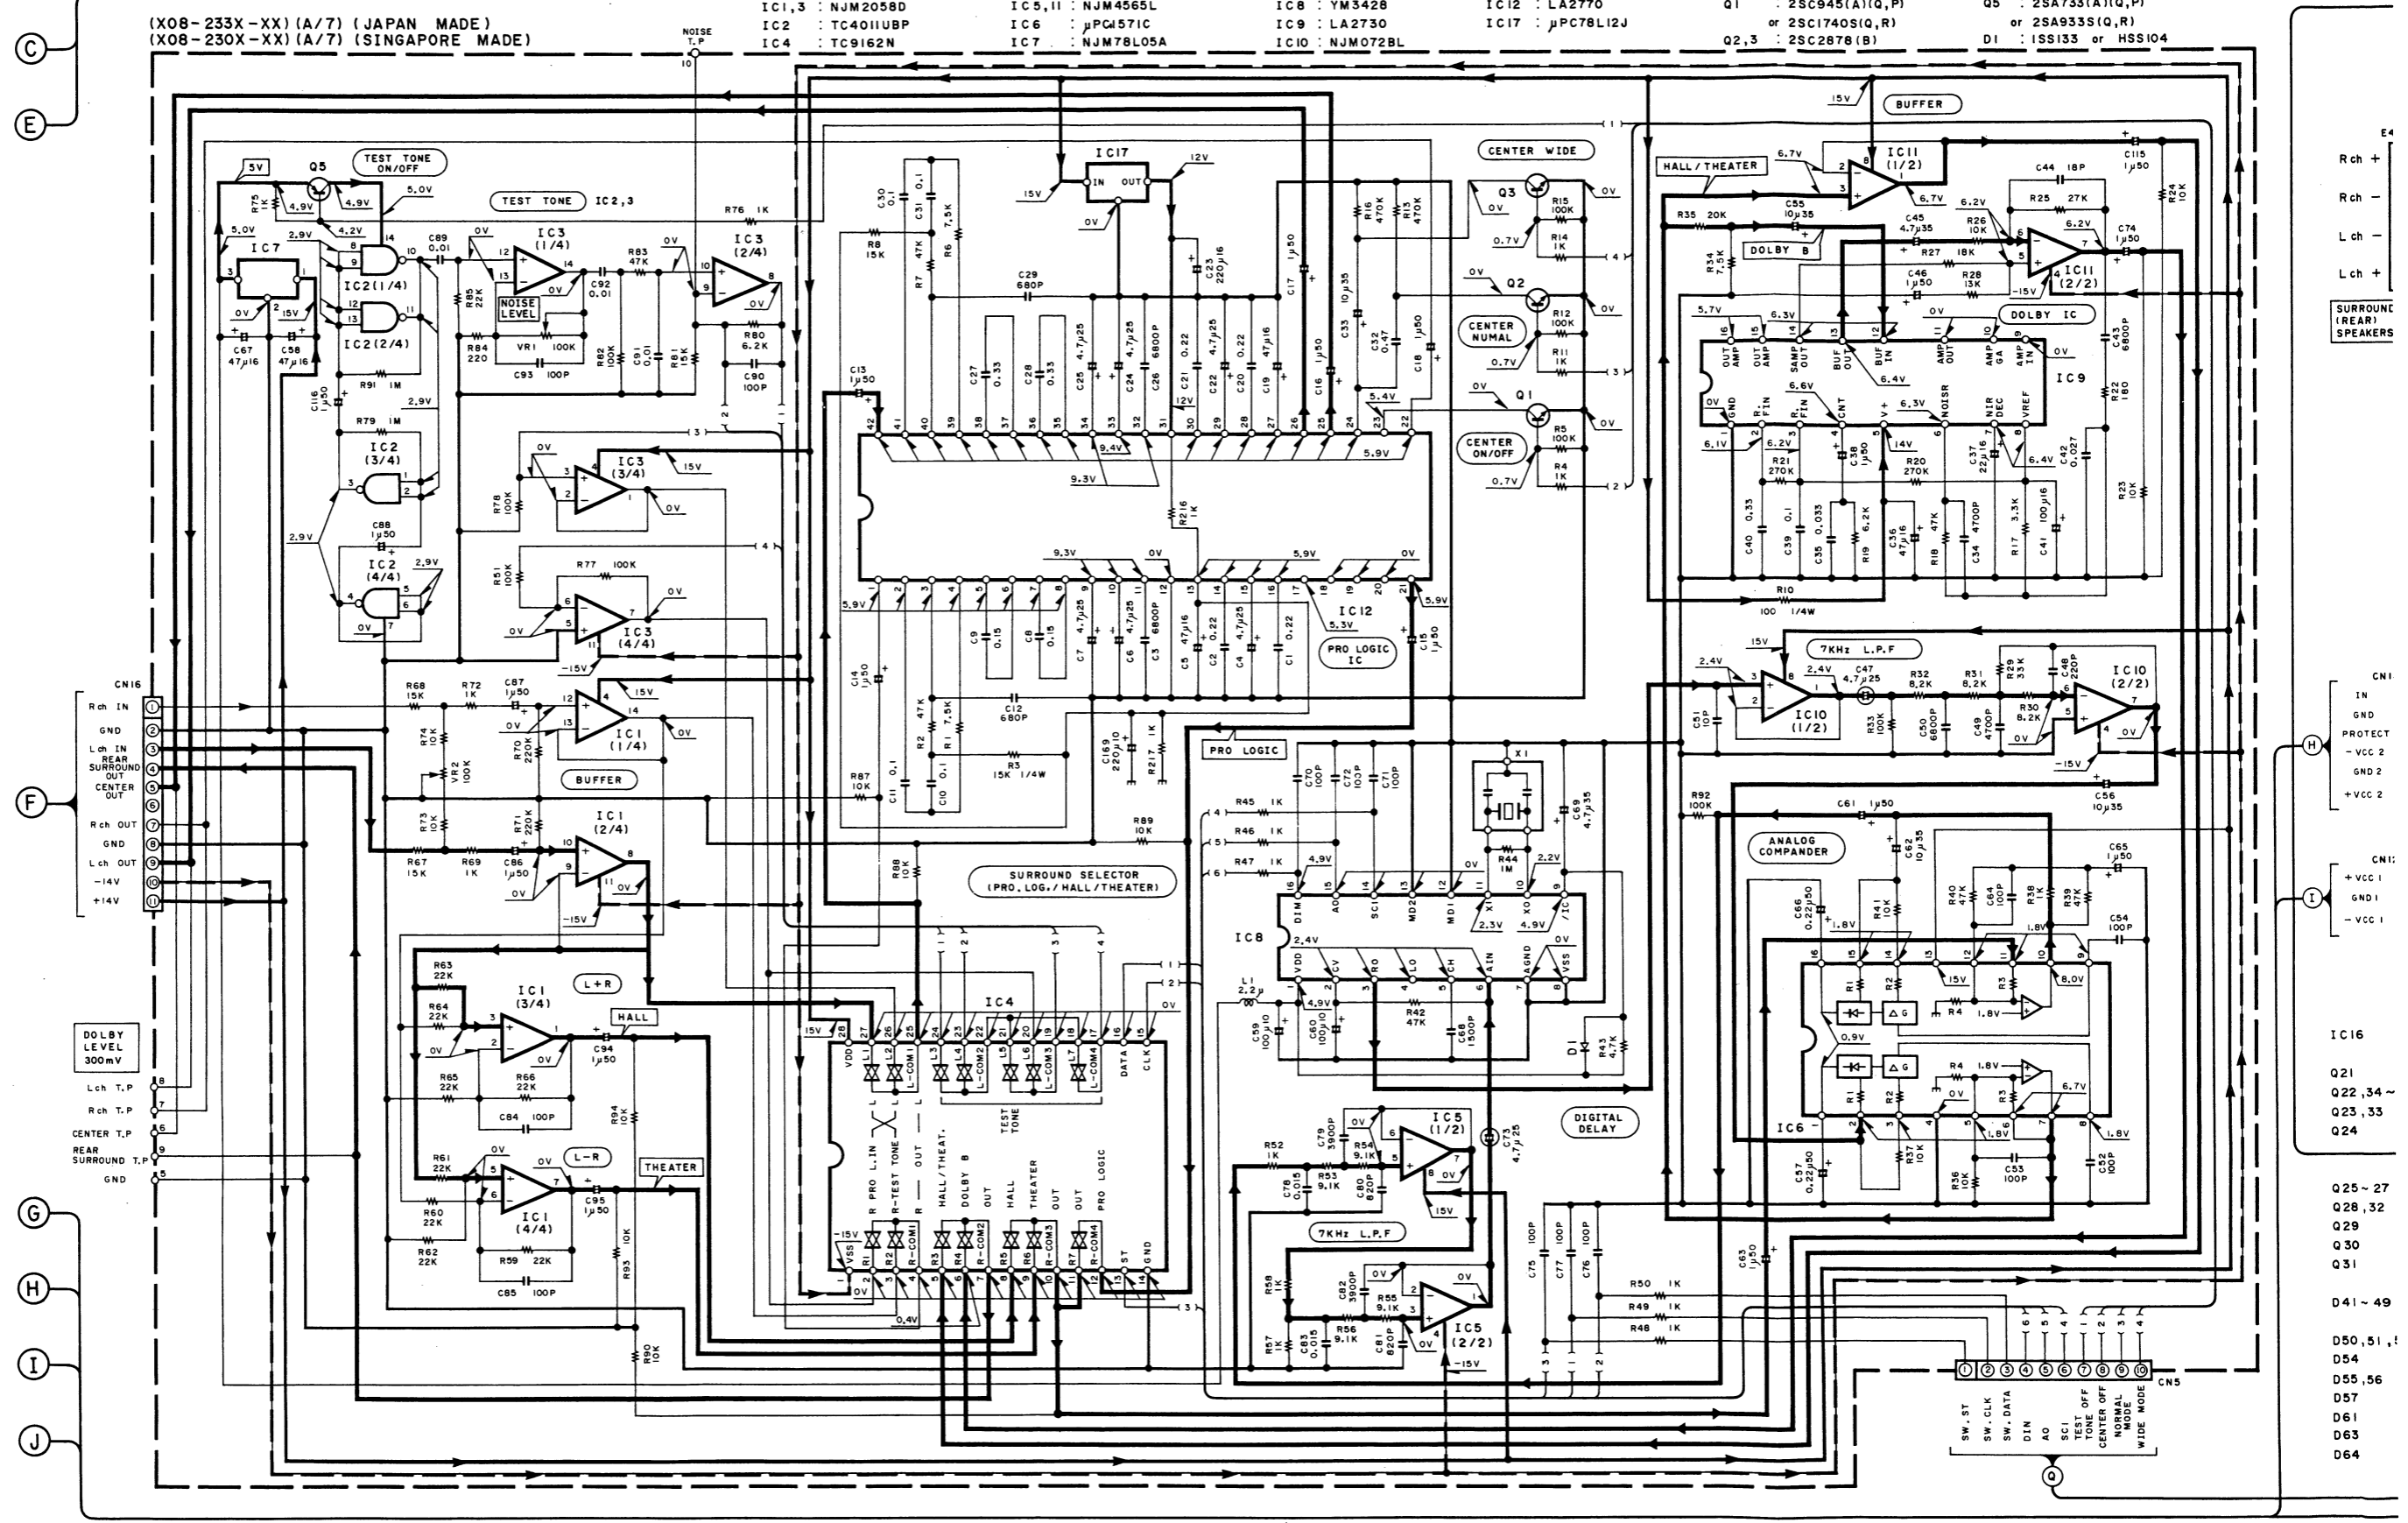

(X08-233X-XX) (A/7) (JAPAN MADE)
 (X08-230X-XX) (A/7) (SINGAPORE MADE)

IC1,3 : NJM2058D IC5,11 : NJM4565L IC8 : YM3428 IC12 : LA2770 Q1 : 2SC945(A)(Q,P) Q5 : 2SA733(A)(Q,P)
 IC2 : TC4011UBP IC6 : μ PC1571C IC9 : LA2730 IC17 : μ PC78L12J or 2SC1740S(Q,R) or 2SA933S(Q,R)
 IC4 : TC9162N IC7 : NJM78L05A IC10 : NJM072BL Q2,3 : 2SC2878(B) D1 : ISS133 or HSS104

2SA733(A) 2SC2878
 2SA992 2SC945(A)
 2SC1845 2SD1302

2SA933S
 2SC1740S

2SB772

2SC4137

2SD1893
 2SB1253

LA2730

TC9162N













TC4011UBP





NJM2058D

μ PC7805HF

μ PC78L12J





NJM78L05A

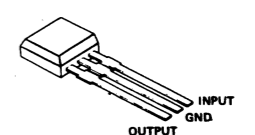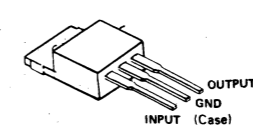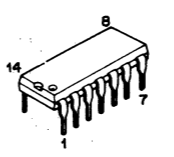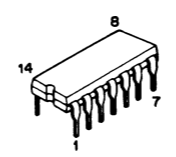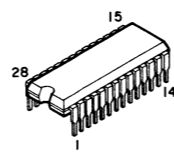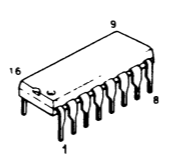

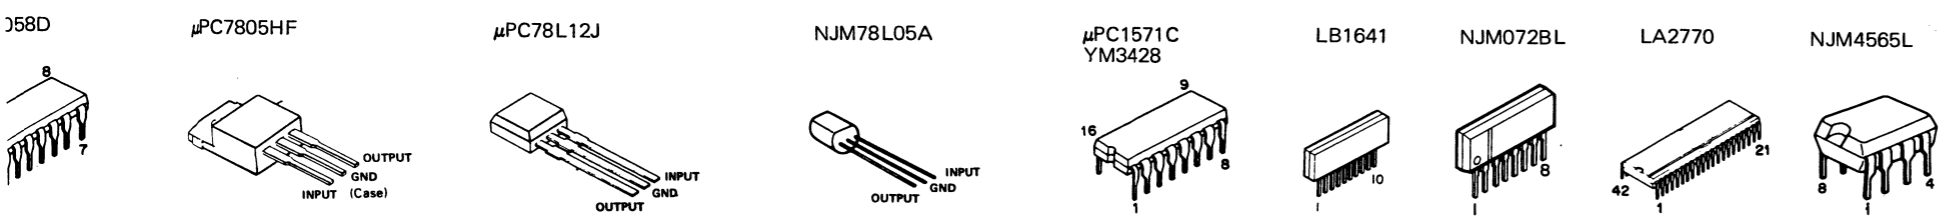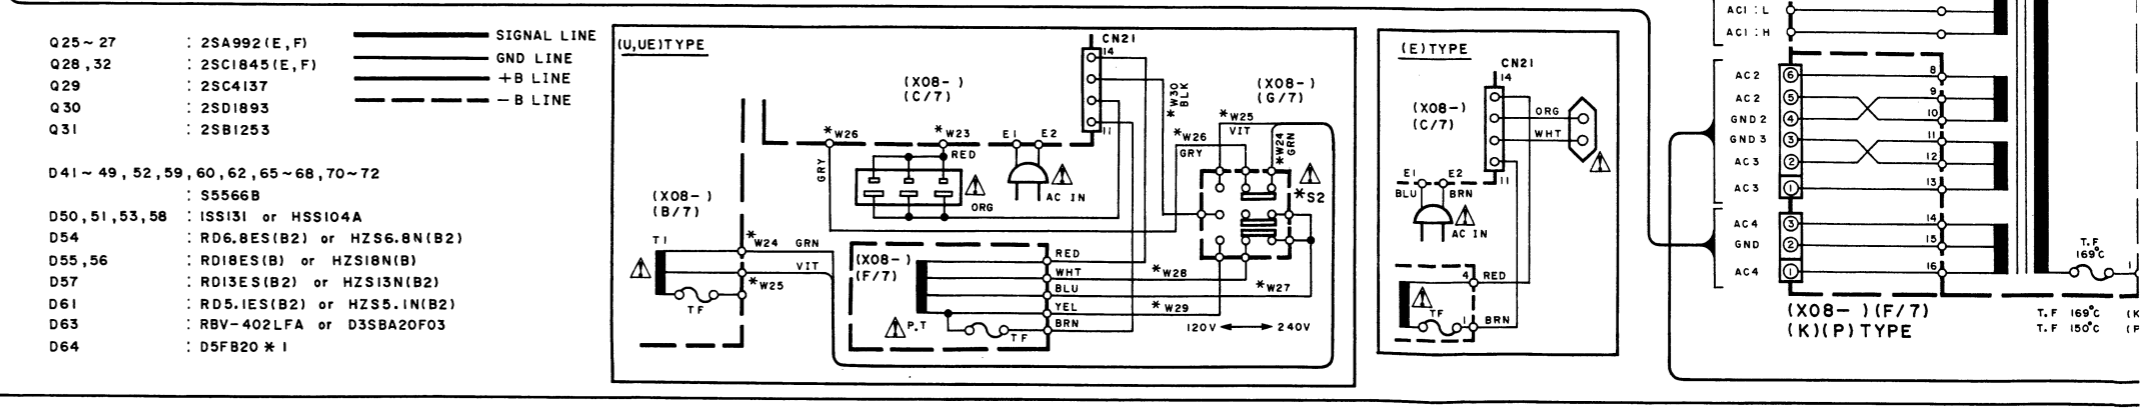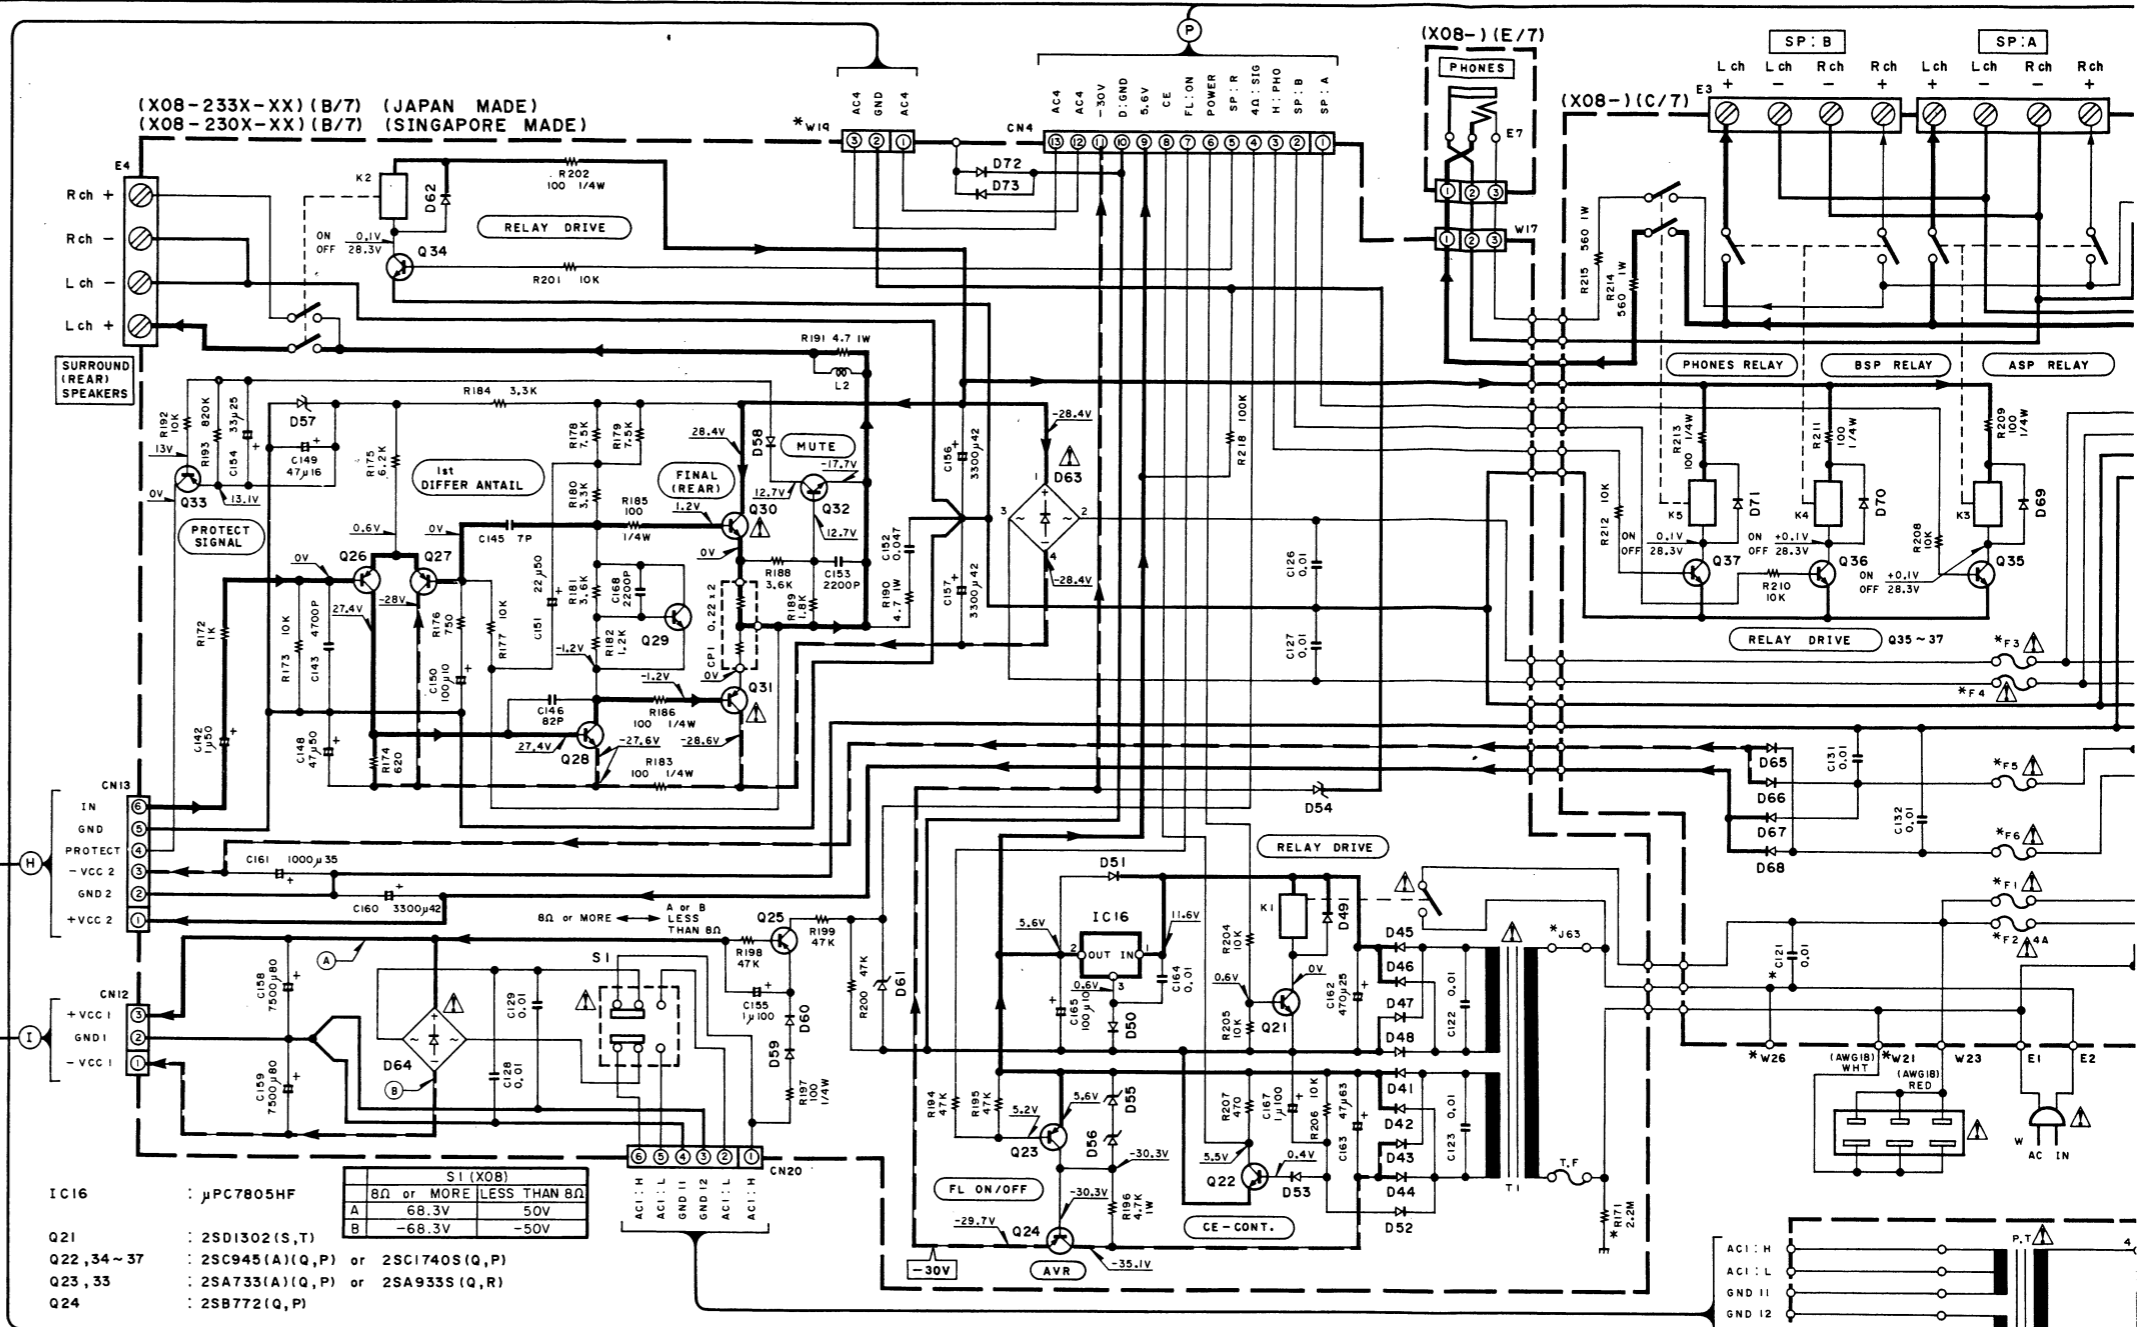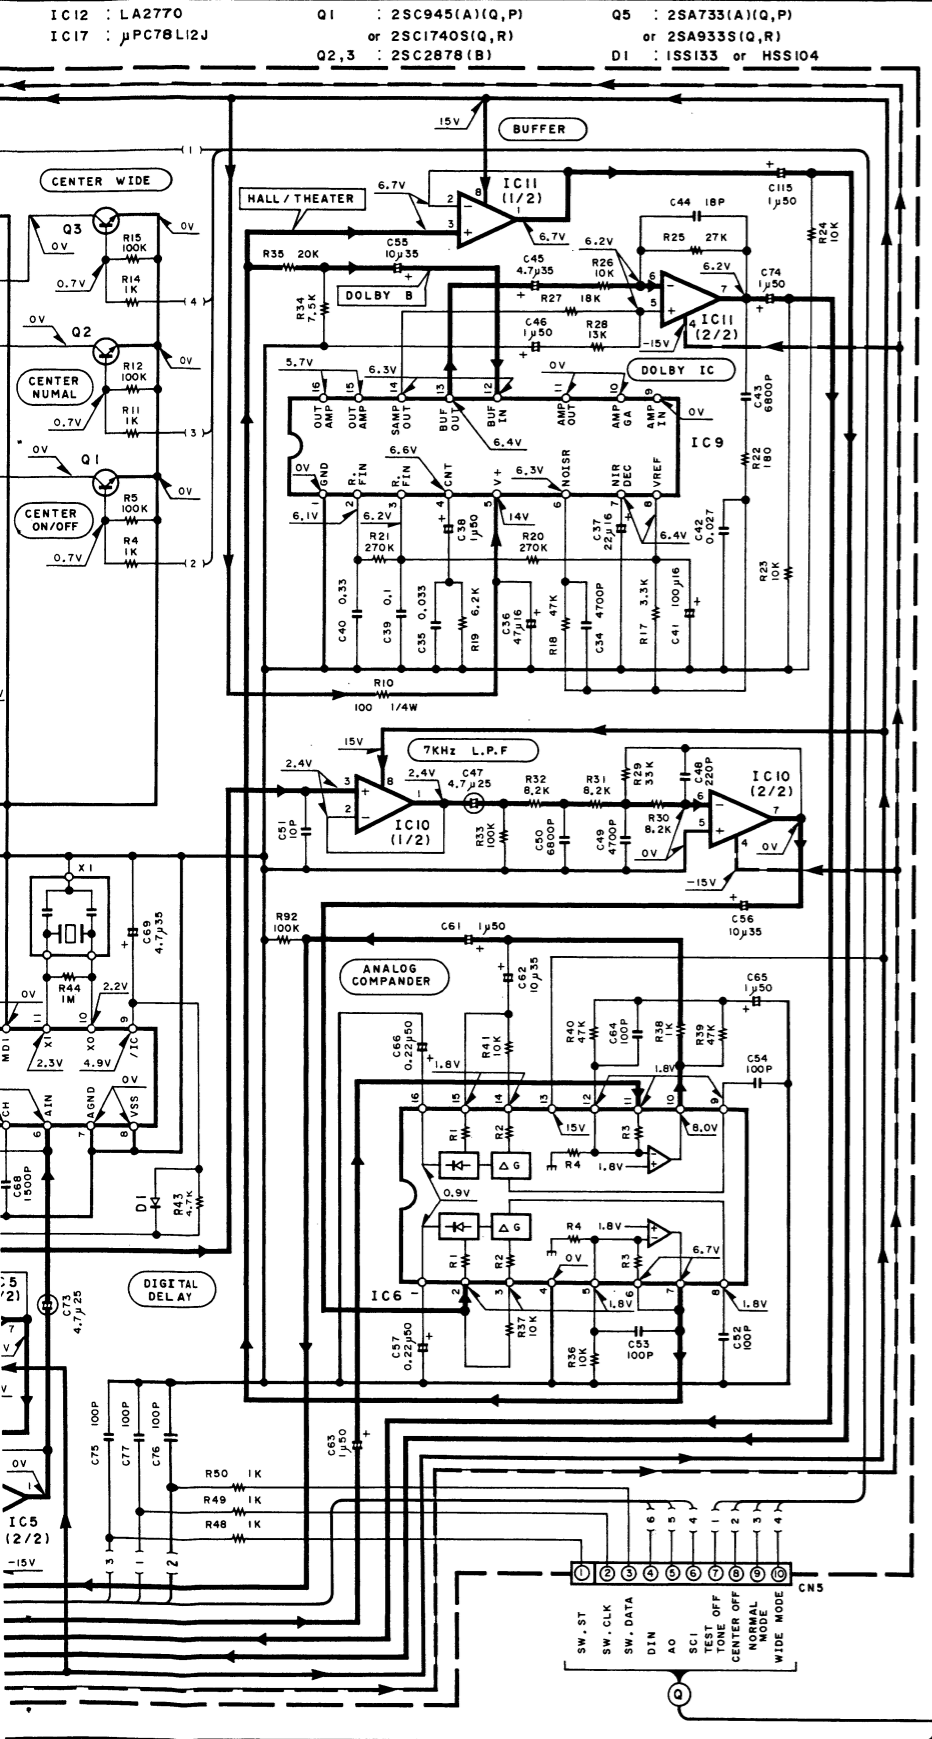

CAUTION : For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

• DC voltages are as measured with a high voltmeter. Values may vary slightly due to between individual instruments or/and unit
 • Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance. Les valeurs peuvent varier légèrement du fait des variations inhérentes aux instruments de mesure

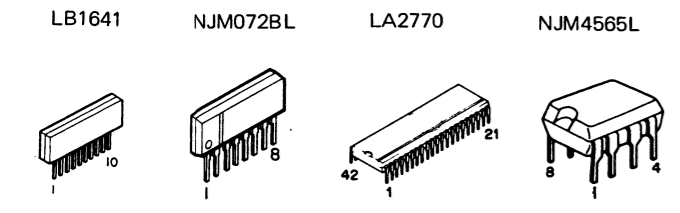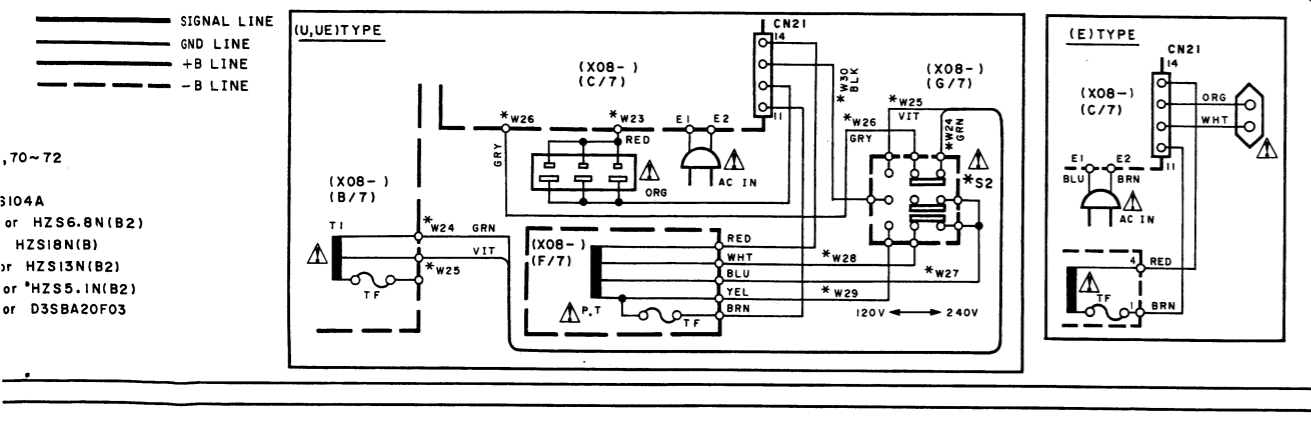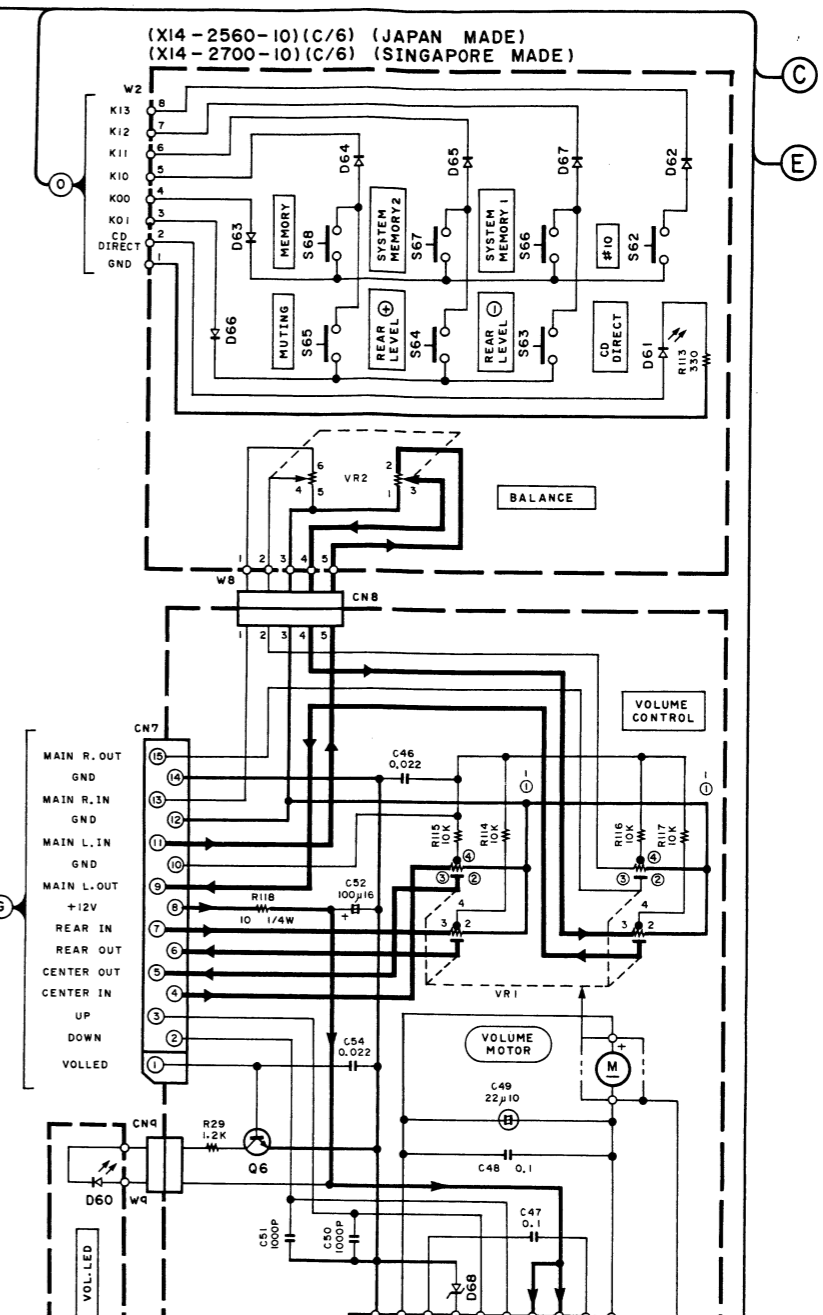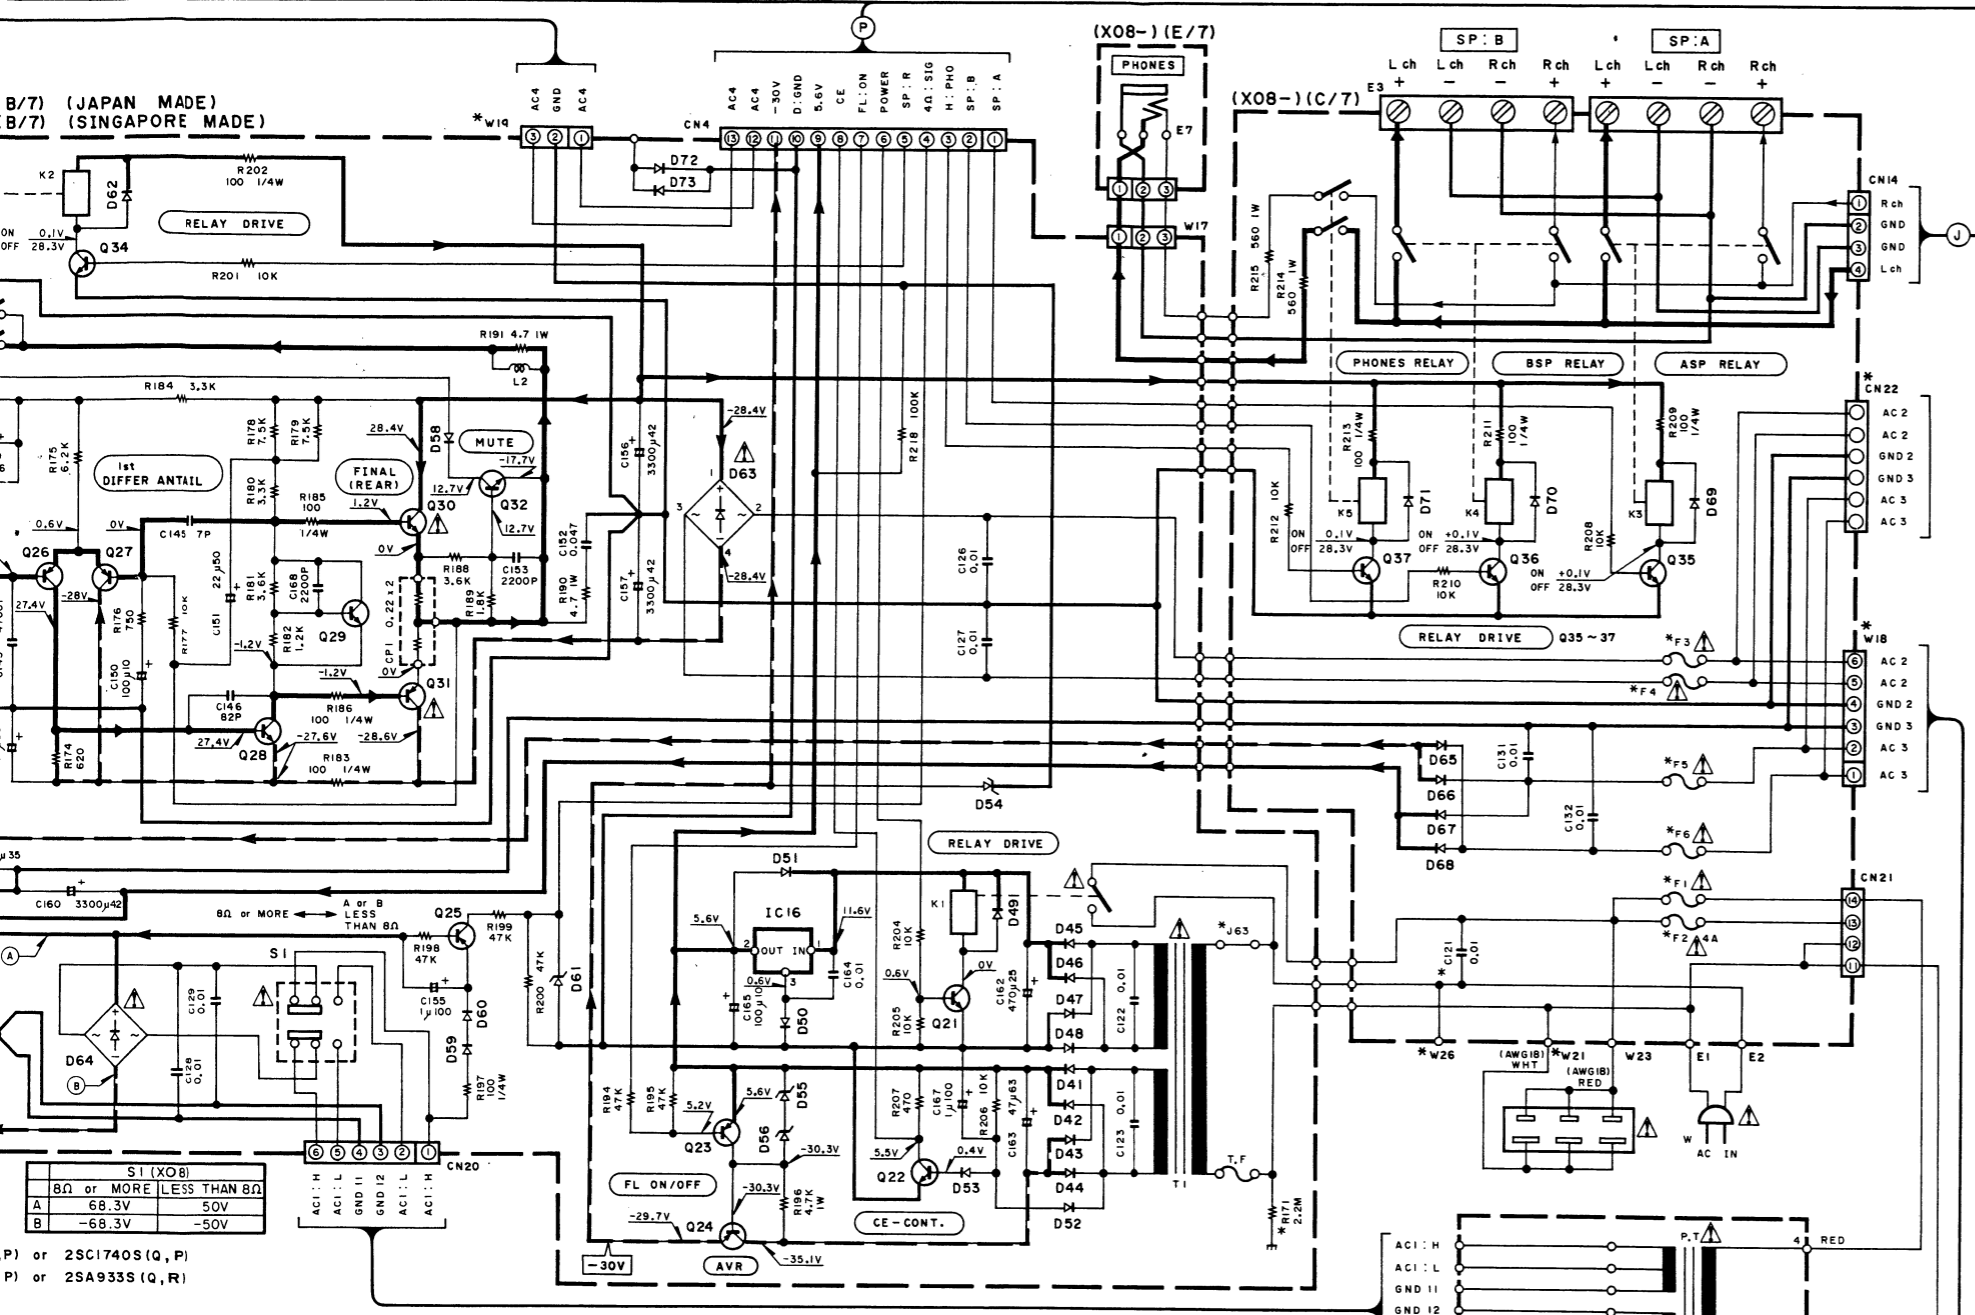

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.


• DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.
• Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance. Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.

• Die angegebenen Gleichspannungswerte wurden mit einem hochohmigen Voltmeter gemessen. Dabei schwanken die Meßwerte aufgrund von Unterschieden zwischen einzelnen instrumenten oder Geräten u.U. geringfügig.

Y05-2440-10





(X09-285X-XX) (JAPAN MADE)
 (X09-293X-XX) (SINGAPORE MADE)

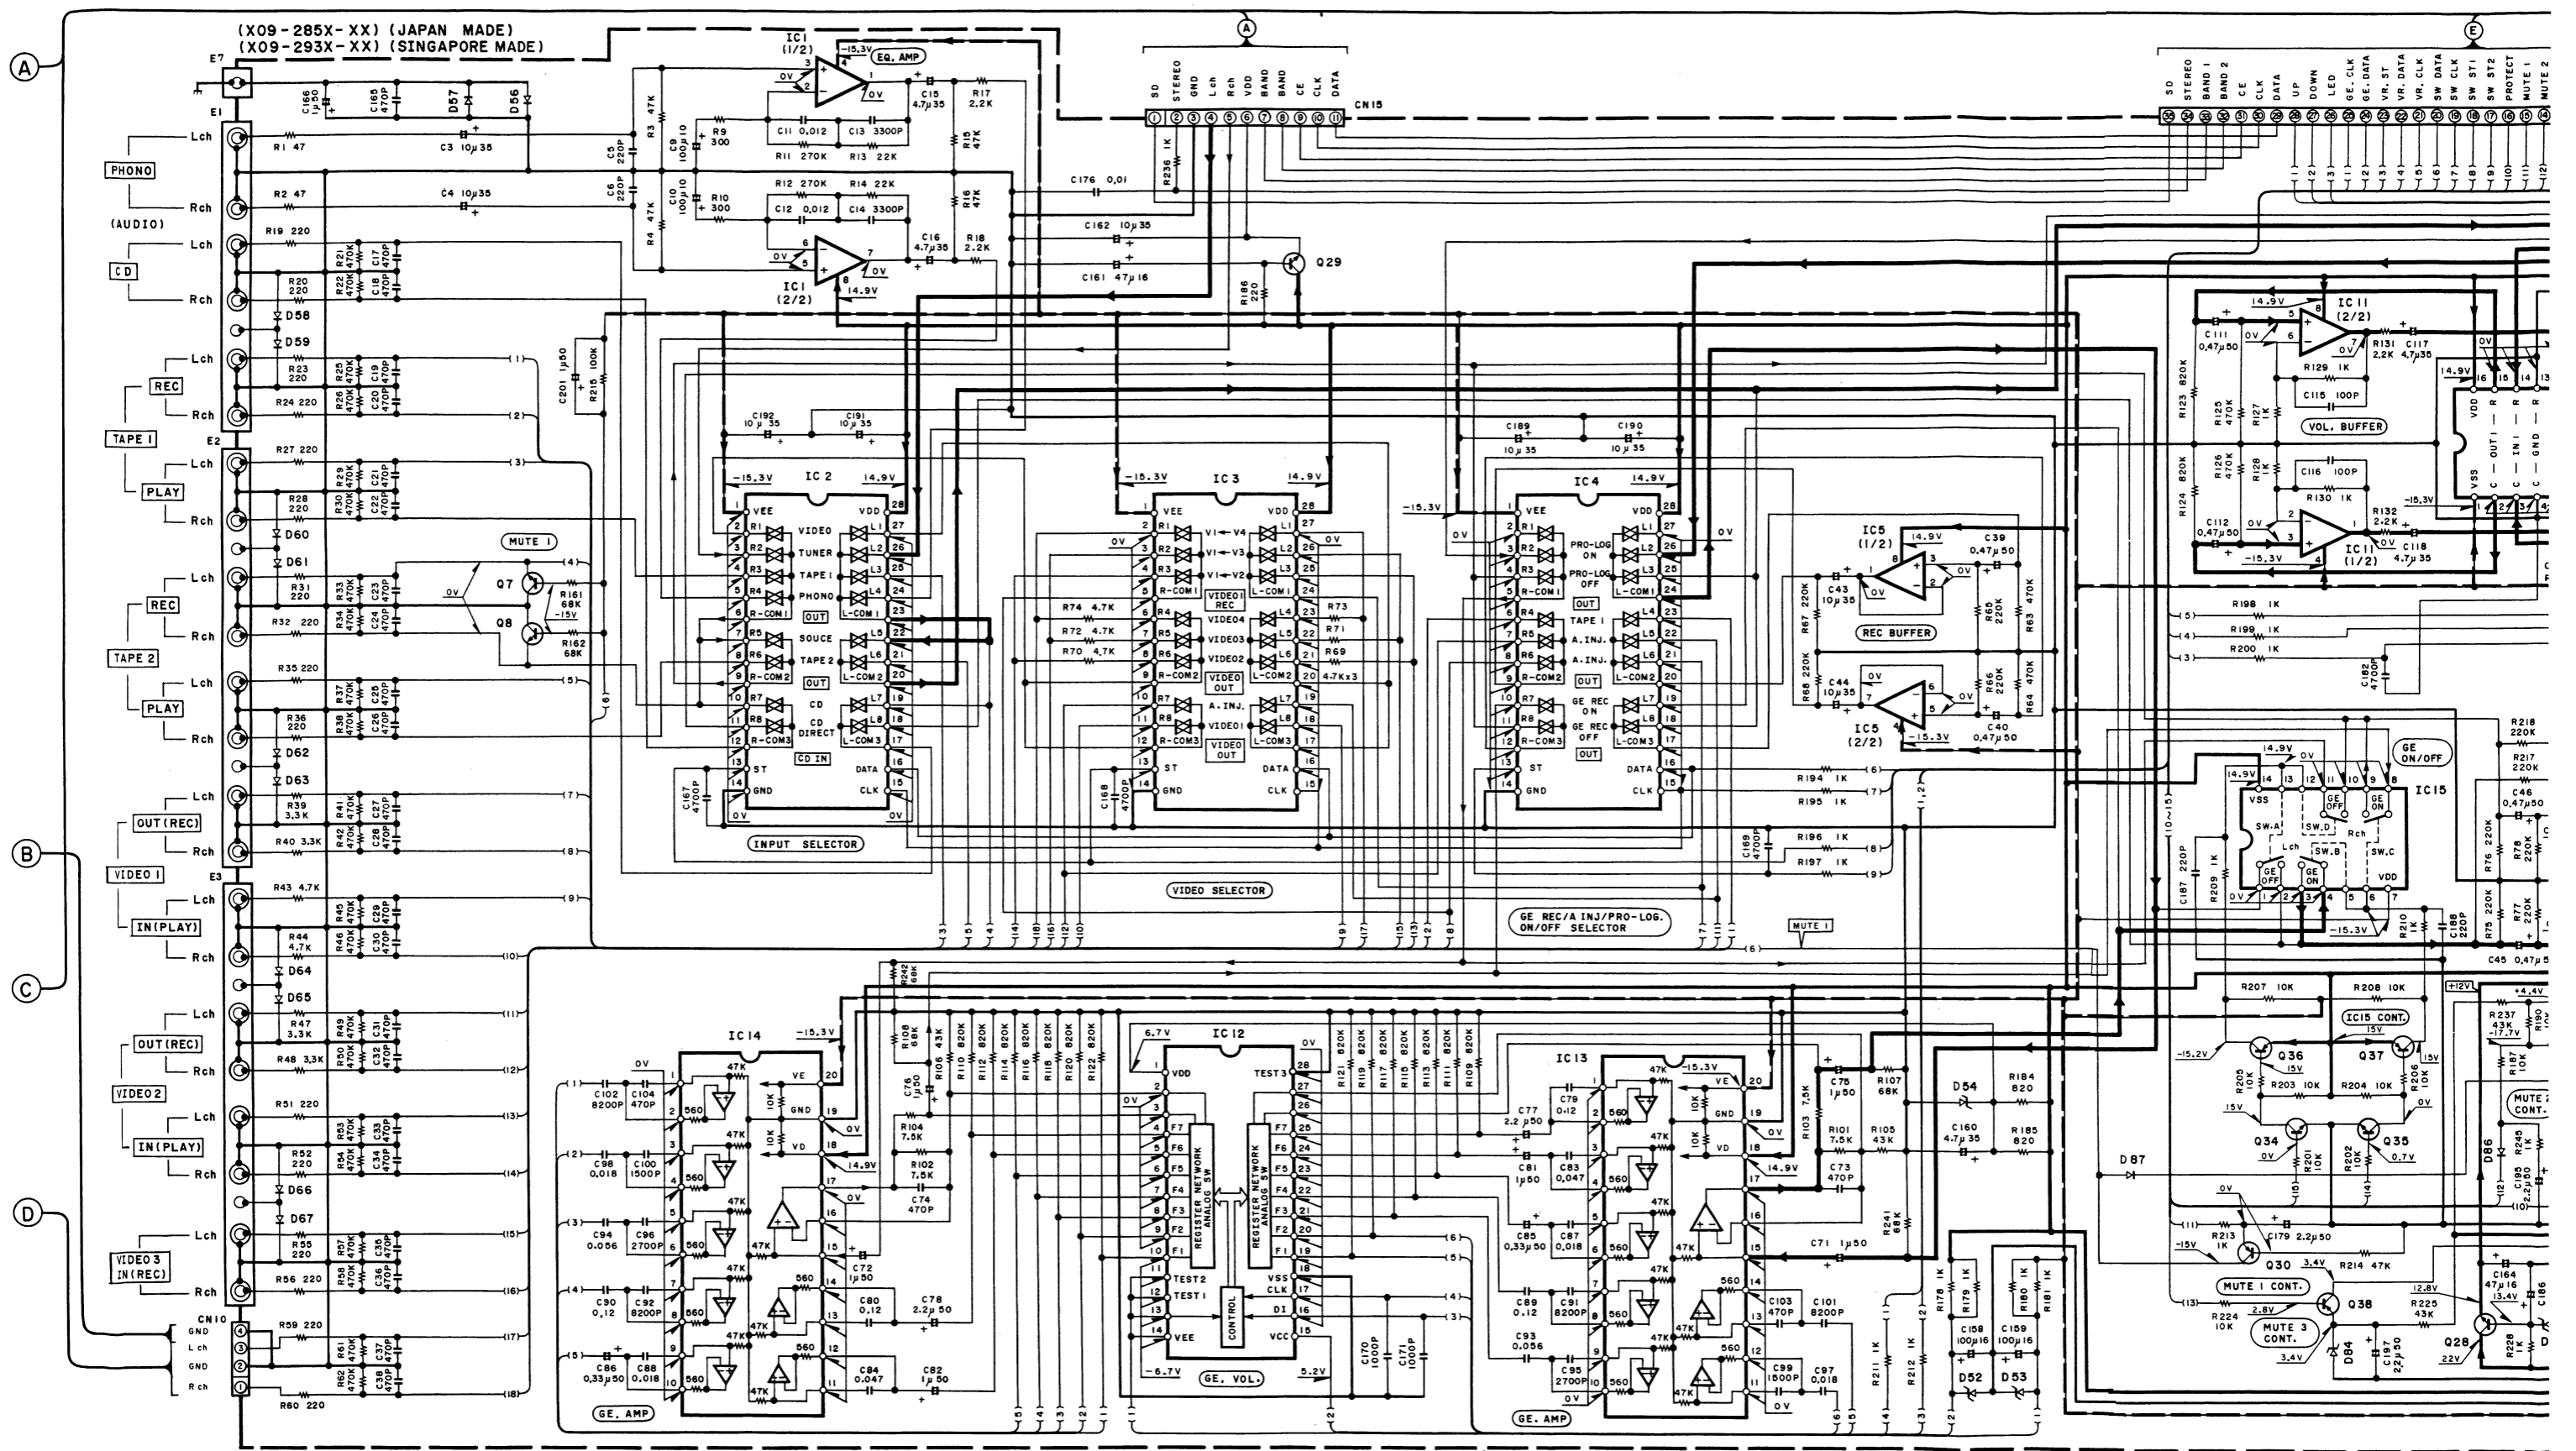

- | | | | | | | | | | | | | | | |
|-----------|-----------|----------|---------|---------|---------|-----------|-----------|---------|--------|---------|--------|--------|------------|----------|
| 2SA1123 | 2SC2003 | 2SA933S | 2SD1266 | 2SC4137 | 2SA1535 | 2SA1216*5 | 2SC2922*5 | TC9163N | M5229P | TC9176P | LC7522 | LC4966 | µPC4570C-A | NJM4558D |
| 2SA733(A) | 2SC2631 | 2SC1740S | | | 2SC3944 | | | TC9164N | | | | | | |
| 2SA992 | 2SC2878 | | | | | | | | | | | | | |
| 2SC1845 | 2SC945(A) | | | | | | | | | | | | | |



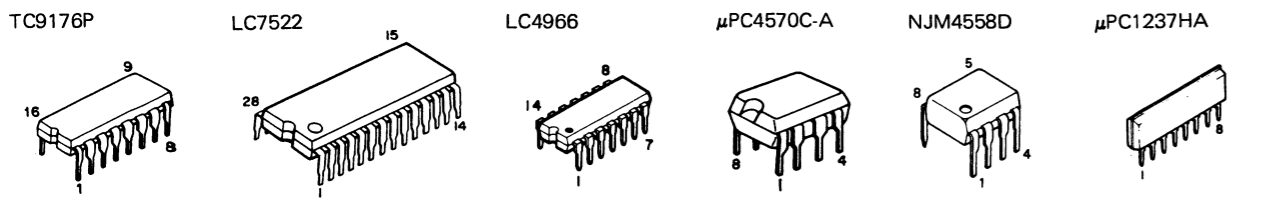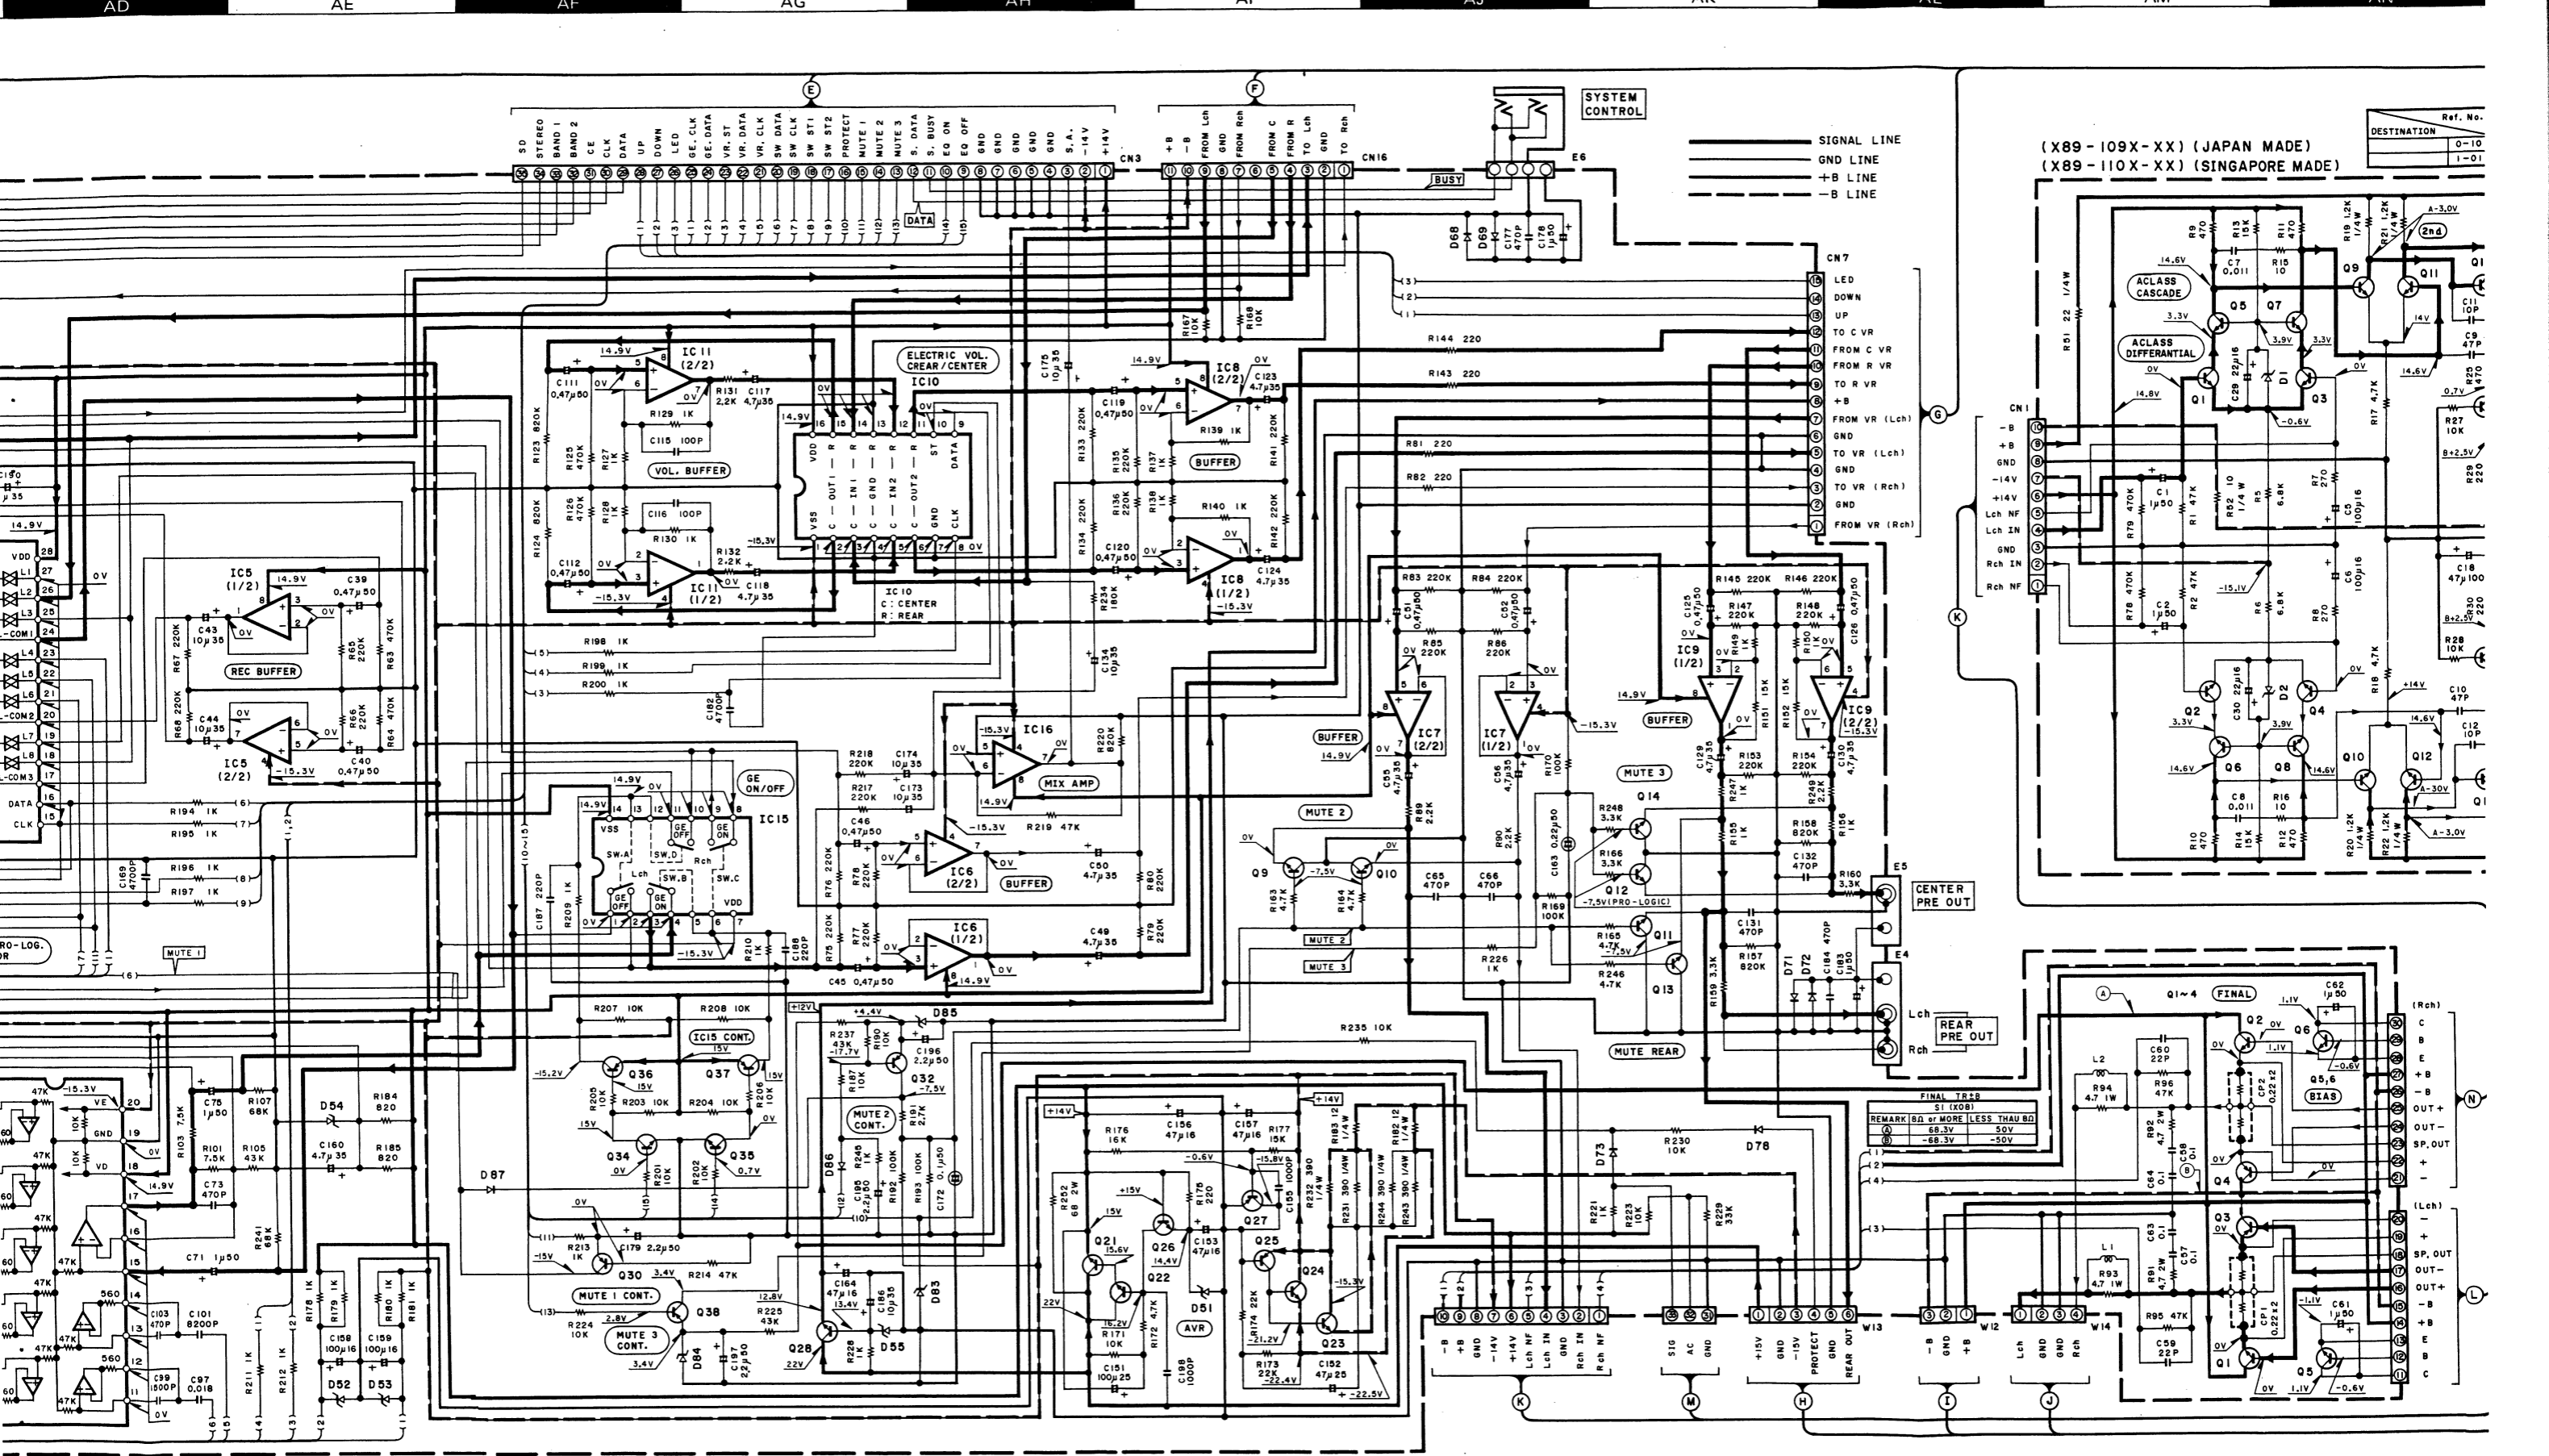

CAUTION : For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.


• DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.
 • Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance. Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.

• Die angegebenen Gleichspannungen sind mit einem hochohmigen Voltmeter gemessen. Die Meßwerte können zwischen einzelnen Instrumenten oder geringfügig variieren.

| DESTINATION | Ref. No. |
|-------------|----------|
| 0-10 | |
| 1-01 | |

(X89-109X-XX) (JAPAN MADE)
 (X89-110X-XX) (SINGAPORE MADE)


REMARK: B1 or MORE (LESS THAN B1)
 (1) -68.3V 3.0V
 (2) -68.3V -50V

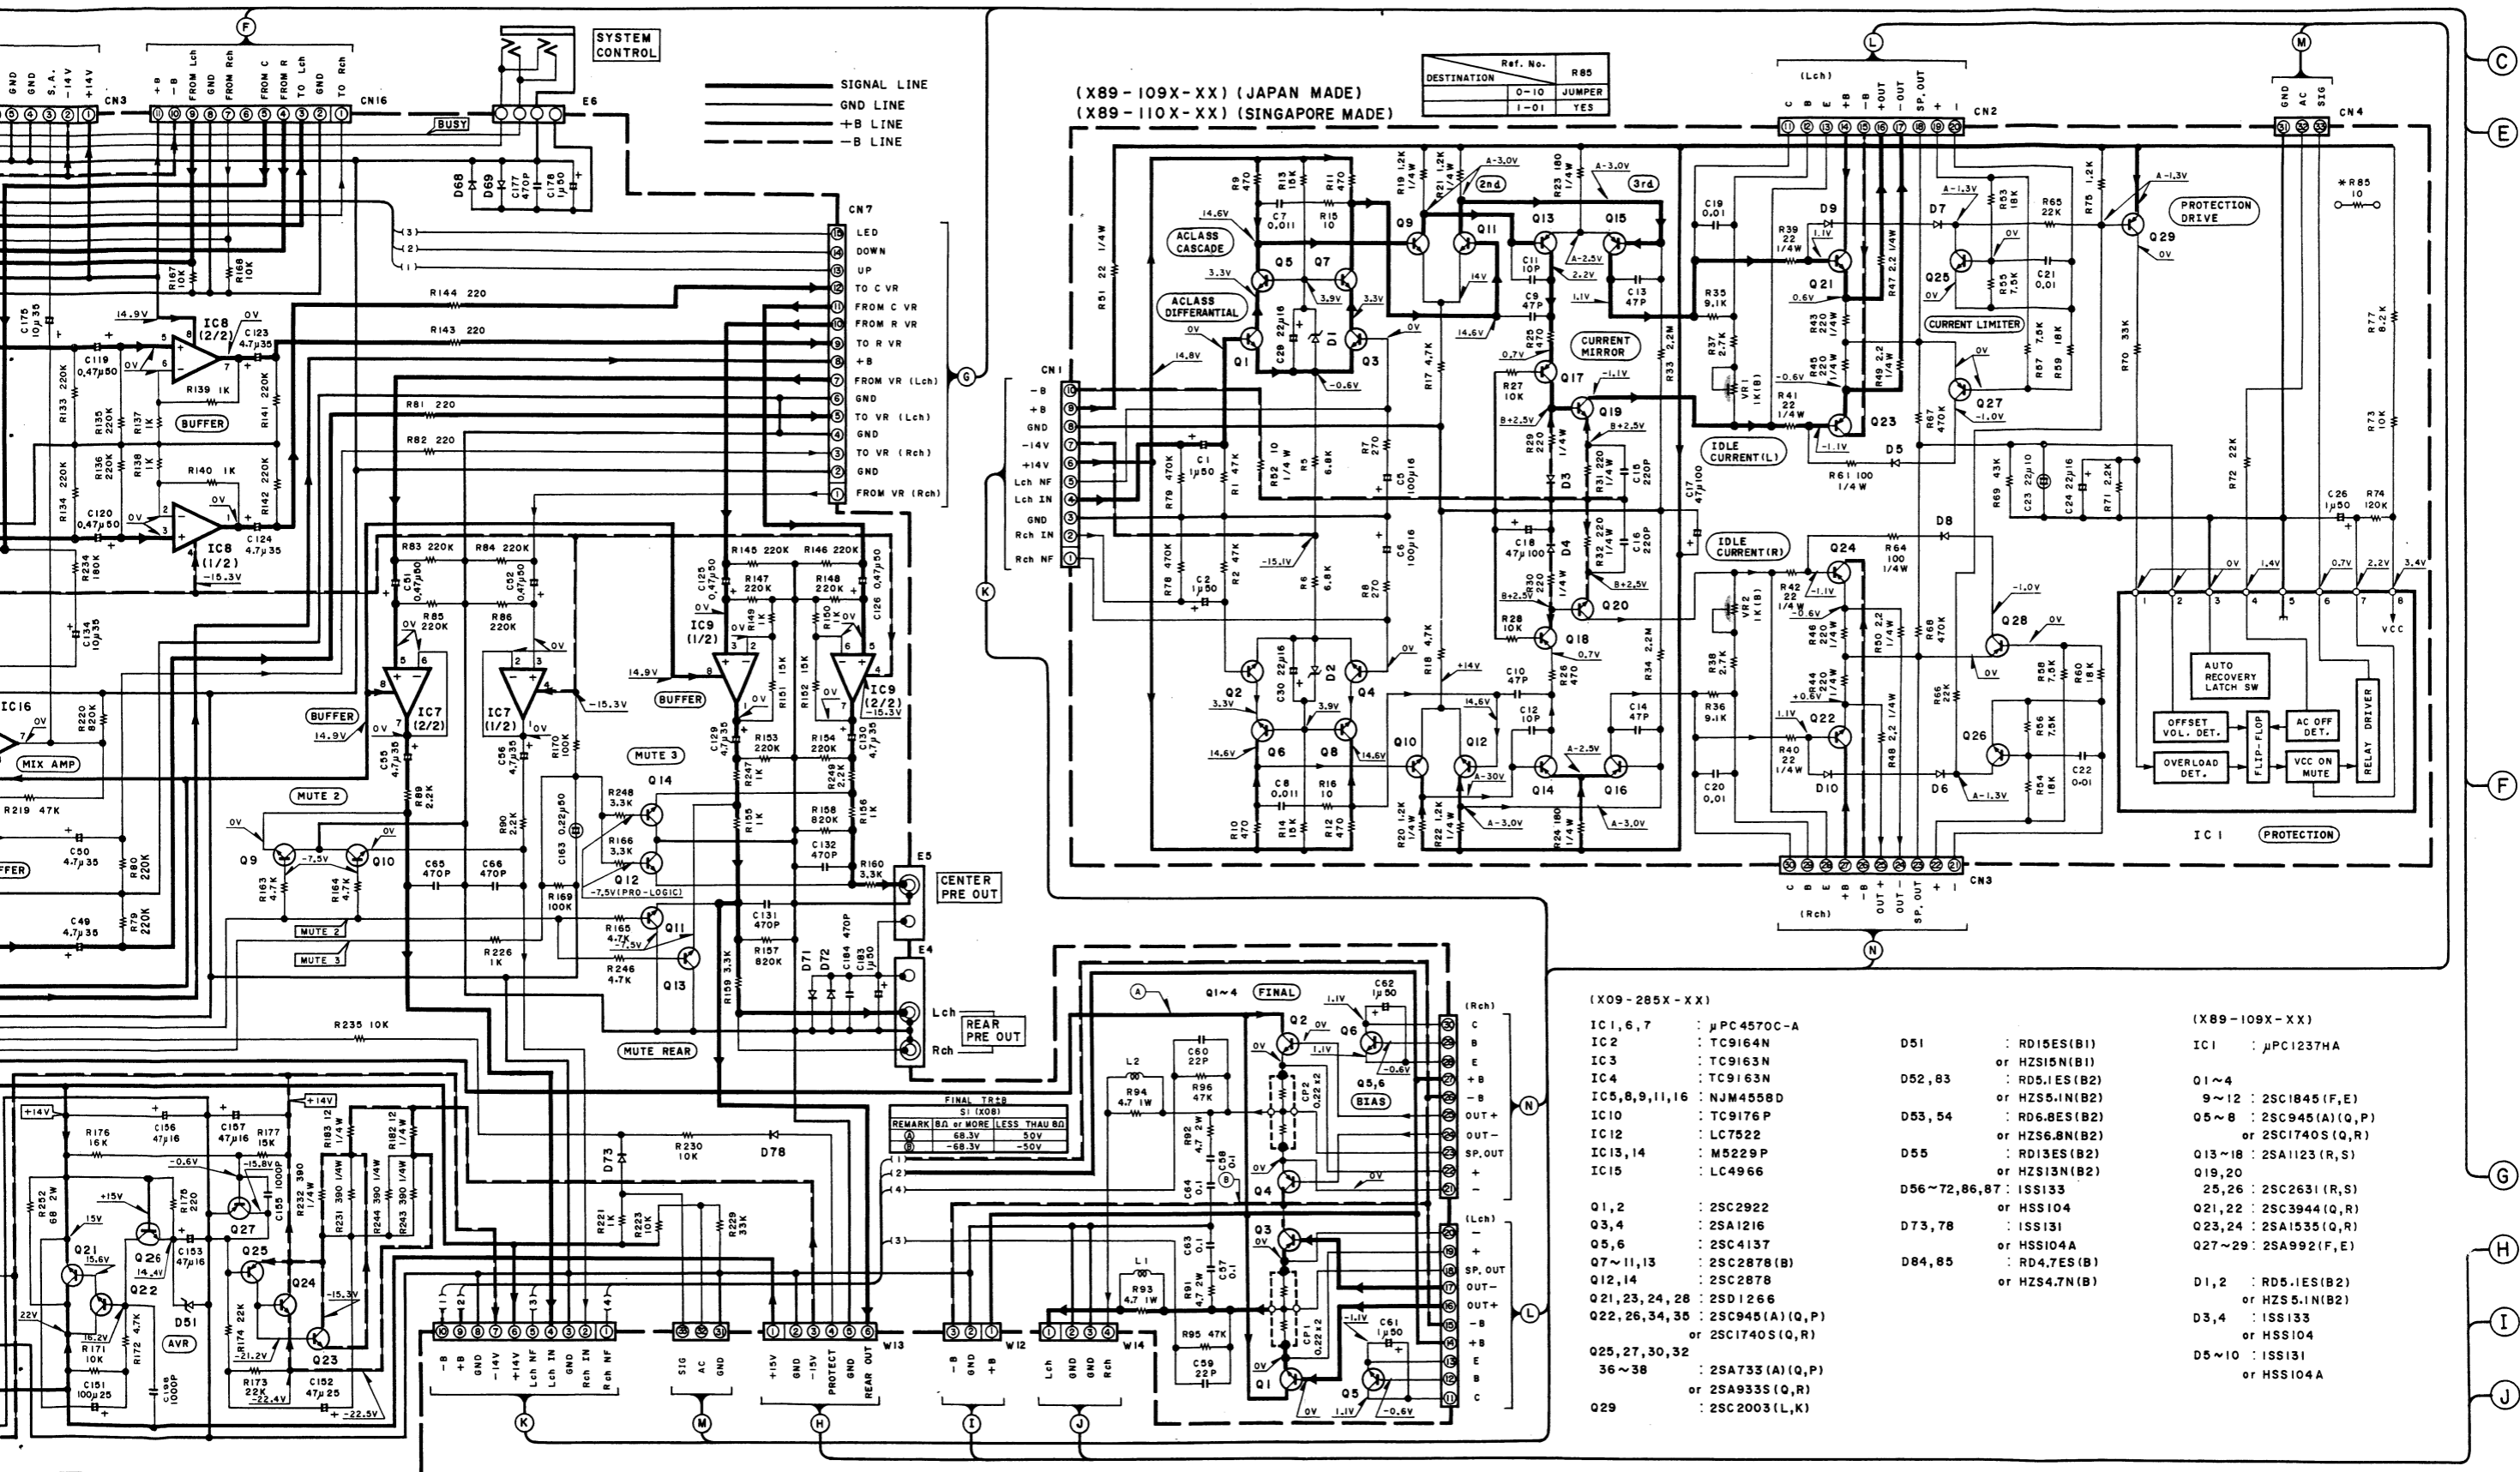

KR-V9010
KENWOOD

Y05-2440-10

KR-V9010 KR-V9010 EXPLODED VIEW

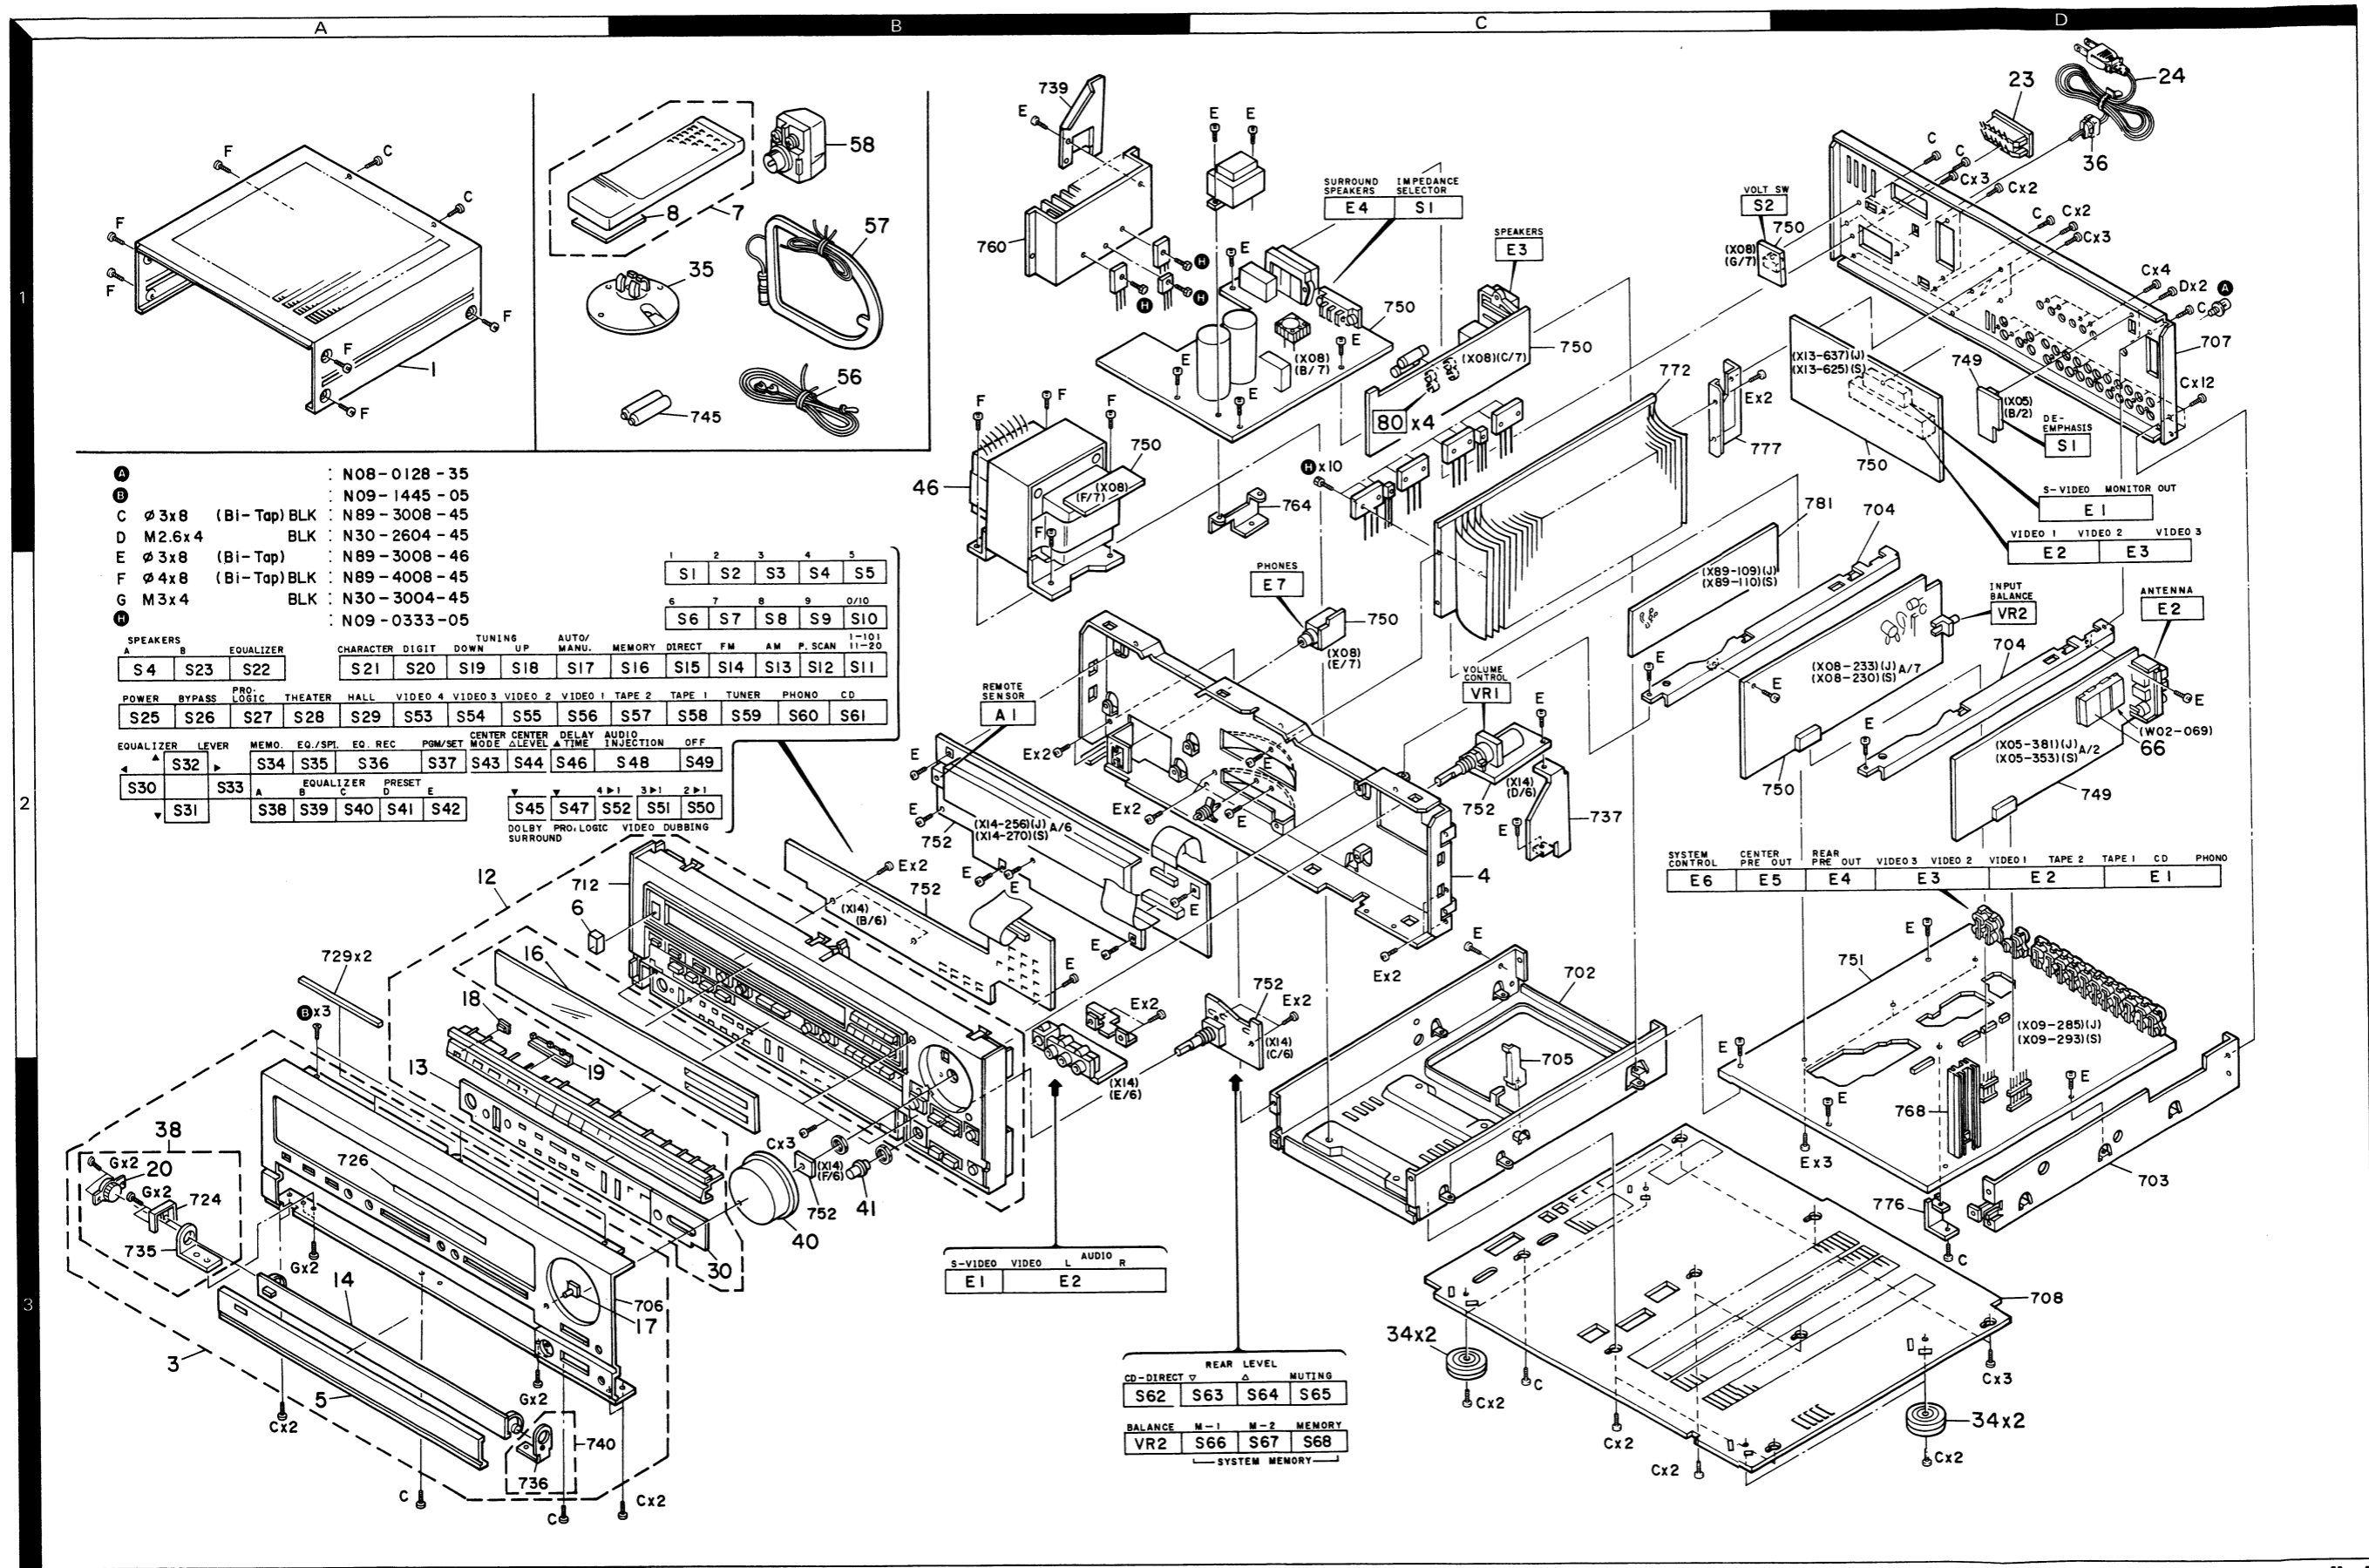

- A : N08-0128-35
- B : N09-1445-05
- C \varnothing 3x8 (Bi-Tap) BLK : N89-3008-45
- D M2.6x4 BLK : N30-2604-45
- E \varnothing 3x8 (Bi-Tap) : N89-3008-46
- F \varnothing 4x8 (Bi-Tap) BLK : N89-4008-45
- G M3x4 BLK : N30-3004-45
- H : N09-0333-05

| | | | | |
|----|----|----|----|-----|
| S1 | S2 | S3 | S4 | S5 |
| S6 | S7 | S8 | S9 | S10 |

| | | | | | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| S21 | S20 | S19 | S18 | S17 | S16 | S15 | S14 | S13 | S12 | S11 |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|

| | | | | | | | | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| S25 | S26 | S27 | S28 | S29 | S53 | S54 | S55 | S56 | S57 | S58 | S59 | S60 | S61 |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|

| | | | | | | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| S32 | S34 | S35 | S36 | S37 | S43 | S44 | S46 | S48 | S49 | | |
| S30 | S33 | S38 | S39 | S40 | S41 | S42 | S45 | S47 | S52 | S51 | S50 |

| | | | |
|-----|-----|-----|-----|
| S62 | S63 | S64 | S65 |
| VR2 | S66 | S67 | S68 |

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕 向 | Re- marks 備考 |
|--|---------------|-------------------|-------------------|-------------------------------|-------------------------|--------------------|
| KR-V9010 (J : Japan made, S : Singapore made) | | | | | | |
| 1 | 1A | * | A01-1750-01 | METALLIC CABINET | | S |
| 1 | 1A | * | A01-1806-01 | METALLIC CABINET | | |
| 3 | 3A | * | A20-5784-01 | PANEL ASSY | | |
| 4 | 2C | * | A22-1093-02 | SUB PANEL | | |
| 5 | 3A | * | A29-0148-02 | PANEL | | |
| 6 | 2A | * | A33-0113-04 | REFLECTOR | | |
| 7 | 1B | * | A70-0272-05 | REMOTE CONTROLLER ASSY | | |
| 8 | 1B | * | A09-0086-08 | BATTERY COVER (A70-0272-05) | | |
| 12 | 2B | * | B01-0436-02 | PANEL ESCUTCHEON ASSY | | |
| 13 | 3A | * | B03-2528-03 | DRESSING PLATE | | |
| 14 | 3A | * | B07-1884-02 | ESCUTCHEON | | |
| 16 | 2C | * | B10-1011-03 | SMOKED FILTER | | |
| 17 | 3A | * | B12-0048-04 | INDICATOR | | |
| 18 | 2A | * | B12-0123-04 | INDICATOR | | |
| 19 | 3A | * | B12-0124-04 | INDICATOR | | |
| - | | * | B08-9063-04 | INDICATOR | | |
| - | | * | B46-0092-03 | WARRANTY CARD | K | |
| - | | * | B46-0094-03 | WARRANTY CARD | UUE | |
| - | | * | B46-0095-03 | WARRANTY CARD | P | |
| - | | * | B46-0121-03 | WARRANTY CARD | U | |
| - | | * | B50-9512-00 | INSTRUCTION MANUAL | | |
| - | | * | B50-9513-00 | INSTRUCTION MANUAL | | |
| - | | * | B58-0223-04 | CAUTION CARD (PRE-SET 120V) | | |
| - | | * | B58-0513-04 | CAUTION CARD (PRESET220-240) | UE | |
| 20 | 2A | * | D39-0200-05 | DAMPER | | |
| 23 | 1D | * | E03-0086-05 | AC OUTLET | | |
| 24 | 1D | * | E30-0812-05 | AC POWER CORD | UUE | |
| 24 | 1D | * | E30-0974-05 | AC POWER CORD | KP | |
| 28 | 3B | * | F19-0597-04 | BLIND PLATE | | |
| - | | * | H01-8455-04 | ITEM CARTON CASE | | |
| - | | * | H10-3805-02 | POLYSTYRENE FOAMED FIXTURE | | |
| - | | * | H10-3806-02 | POLYSTYRENE FOAMED FIXTURE | | |
| - | | * | H11-0028-04 | POLYSTYRENE FOAMED BOARD | | |
| - | | * | H12-2061-04 | PACKING FIXTURE | | |
| - | | * | H13-0026-04 | CARTON BOARD | | |
| - | | * | H25-0181-04 | PROTECTION BAG (150X260X0.05) | | |
| - | | * | H25-0225-04 | PROTECTION BAG (850X450X0.03) | | |
| - | | * | H25-0232-04 | PROTECTION BAG (235X350X0.03) | | |
| 36 | 3C, 3D | * | J02-1034-05 | FOOT | | |
| 37 | 1B | * | J19-2815-04 | ANTENNA HOLDER | | |
| 38 | 2A | * | J21-5495-04 | MOUNTING HARDWARE ASSY | | |
| 39 | 1D | * | J42-0083-05 | POWER CORD BUSHING | | |
| 41 | 3B | * | K29-3633-04 | KNOB ASSY VOLUME | | |
| 42 | 3B | * | K29-3636-02 | KNOB | | |
| 43 | 3B | * | K29-3642-04 | KNOB | | |
| 47 | 1B | * | L01-8621-05 | POWER TRANSFORMER | K | |
| 47 | 1B | * | L01-8625-05 | POWER TRANSFORMER | UUE | |
| 47 | 1B | * | L01-8627-05 | POWER TRANSFORMER | P | |
| A | | * | N08-0128-35 | BINDING POST (EARTH) | | |

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

indicates safety critical components.

PARTS LIST

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕 向 | Re- marks 備考 |
|---|---------------|-------------------|-------------------|---------------------------------|-------------------------|--------------------|
| B | 2A | | N09-1445-05 | SET SCREW (M3X8) | | |
| C | 1D, 2A | | N89-3008-45 | BINDING HEAD TAPTITE SCREW | | UUE |
| D | 1D | | N30-2604-45 | PAN HEAD MACHINE SCREW | | |
| E | 1C, 1D | | N89-3008-46 | BINDING HEAD TAPTITE SCREW | | |
| F | 1A, 1B | | N89-4008-45 | BINDING HEAD TAPTITE SCREW | | |
| G | 3A | | N30-3004-45 | PAN HEAD MACHINE SCREW | | |
| I | 3A | * | N09-2704-05 | TAPTITE SCREW | | |
| 57 | 1B | | T90-0132-05 | T TYPE ANTENNA | | |
| 58 | 1B | | T90-0173-05 | LOOP ANTENNA | | |
| 59 | 1B | * | T90-0177-05 | ANTENNA ADAPTOR | | |
| TUNER UNIT (X05-3810-10) : J (X05-3530-11) : S | | | | | | |
| C1 ,2 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C3 | | | CC93FCH1H391J | CERAMIC 390PF J | | |
| C4 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C5 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C6 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C7 | | | CK45FF1H223Z | CERAMIC 0.022UF Z | | |
| C8 ,9 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C10 | | | CK45FF1H223Z | CERAMIC 0.022UF Z | | |
| C11 ,12 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C13 -15 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C16 | | | CE04KW1H2R2M | ELECTRO 2.2UF 50WV | | |
| C17 | | | CE04KW1H3R3M | ELECTRO 3.3UF 50WV | | |
| C18 | | | CE04KW1V4R7M | ELECTRO 4.7UF 35WV | | |
| C19 | | | CF92FV1H223J | MF 0.022UF J | | |
| C20 | | | CF92FV1H273J | MF 0.027UF J | | |
| C21 | | | CK45FF1H223Z | CERAMIC 0.022UF Z | | |
| C22 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C23 | | | CE04KW1HR47M | ELECTRO 0.47UF 50WV | | |
| C24 | | | CF92FV1H273J | MF 0.027UF J | | |
| C25 | | | CC45FCH1H220J | CERAMIC 22PF J | | |
| C26 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C27 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C28 | | | CC45FCH1H220J | CERAMIC 22PF J | | |
| C29 -31 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C32 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C35 | | | CC93FCH1H471J | CERAMIC 470PF J | | |
| C36 ,37 | | | CF92FV1H273J | MF 0.027UF J | | UUE |
| C36 ,37 | | | CF92FV1H433J | MF 0.043UF J | | KP |
| C38 ,39 | | | CF92FV1H153J | MF 0.015UF J | | UUE |
| C40 | | | CE04KW1H3R3M | ELECTRO 3.3UF 50WV | | |
| C41 -43 | | | CE04KW1H2R2M | ELECTRO 2.2UF 50WV | | |
| C44 | | | CK45FB1H471K | CERAMIC 470PF K | | |
| C45 | | | CF92FV1H473J | MF 0.047UF J | | |
| C46 | | | CE04KW1HR47M | ELECTRO 0.47UF 50WV | | |
| C48 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C49 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C52 ,53 | | | CC45FSL1H151J | CERAMIC 150PF J | | |
| TC1 ,2 | | | C05-0303-05 | CERAMIC TRIMMER CAPACITOR(20PF) | | |
| E2 | 2D | | E20-0321-05 | LOCK TERMINAL BOARD | | |
| CF1 ,2 | | | L72-0531-05 | CERAMIC FILTER | | |
| CF3 | | | L72-0099-05 | CERAMIC FILTER | | |
| CF4 | | | L72-0096-05 | CERAMIC FILTER | | |

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

indicates safety critical components.

PARTS LIST

× New Parts


Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕 向 | Re- marks 備考 |
|---|---------------|----------------|-------------------|-------------------------------|-------------------------|--------------------|
| L1 | | | L40-1092-17 | SMALL FIXED INDUCTOR(1UH,M) | | |
| L2 | | | L40-1021-14 | SMALL FIXED INDUCTOR(1.0MH,K) | | |
| L3 | | | L40-1092-17 | SMALL FIXED INDUCTOR(1UH,M) | | |
| L4 | | * | L30-0484-05 | FM IFT | | |
| L5 | | * | L30-0485-05 | FM IFT | | |
| L8 | | | L31-0509-05 | MW-RF COIL | | |
| L9 | | | L32-0277-15 | MW OSCILLATING COIL | | |
| L10 | | | L30-0362-05 | AM IFT | | |
| X1 | | | L77-1122-05 | CRYSTAL RESONATOR | | |
| R14 | | | RD14GB2E101J | FL-PROOF RD 100 J 1/4W | | |
| R22 ,23 | | | RD14GB2E101J | FL-PROOF RD 100 J 1/4W | | |
| R24 | | | RD14GB2E221J | FL-PROOF RD 220 J 1/4W | | |
| R53 | | | RD14GB2E330J | FL-PROOF RD 33 J 1/4W | | |
| VR1 | | | R12-3130-05 | TRIMMING POT.(33K) | | |
| VR2 | | | R12-3126-05 | TRIMMING POT.(10K) | | |
| VR3 | | | R12-1089-05 | TRIMMING POT.(4.7K) | | |
| VR4 | | | R12-8015-05 | TRIMMING POT.(1M) | | |
| S1 | | | S31-2072-05 | SLIDE SWITCH | UUE | |
| D1 ,2 | | | HSS104 | DIODE | | |
| D1 ,2 | | | 1SS133 | DIODE | | |
| D3 | | | HZS5.1N(B2) | ZENER DIODE | | |
| D3 | | | RD5.1ES(B2) | ZENER DIODE | | |
| D4 -6 | | | HSS104 | DIODE | | |
| D4 -6 | | | 1SS133 | DIODE | | |
| D7 | | | KV1236(Z2) | VARIABLE CAPACITANCE DIODE | | |
| IC1 | | | LA1265 | IC(FM/AM TUNER) | | |
| IC2 | | | LM7001 | IC(PLL FREQUENCY SYNTHESIZER) | | |
| IC3 | | | AN7470 | IC(FM MPX) | | |
| Q1 | | | 2SC1923(R,Ø) | TRANSISTOR | | |
| Q2 | | | 2SC1740S(Q,R) | TRANSISTOR | | |
| Q2 | | | 2SC945(A)(Q,P) | TRANSISTOR | | |
| Q3 | | | 2SC1845(F,E) | TRANSISTOR | | |
| Q4 | | | 2SC1740S(Q,R) | TRANSISTOR | E | |
| Q4 | | | 2SC945(A)(Q,P) | TRANSISTOR | E | |
| Q5 ,6 | | | 2SC1740S(Q,R) | TRANSISTOR | UUE | |
| Q5 ,6 | | | 2SC945(A)(Q,P) | TRANSISTOR | UUE | |
| Q7 ,8 | | | 2SA733(A)(Q,P) | TRANSISTOR | | |
| Q7 ,8 | | | 2SA933S(Q,R) | TRANSISTOR | | |
| 66 | 2D | | W02-0699-05 | FM FRONT-END ASSY | | |
| PRE AMPLIFIER UNIT (X08-2330-10) : J (X08-2300-10) : S | | | | | | |
| C1 ,2 | | | CF92FV1H224J | MF 0.22UF J | | |
| C3 | | | CF92FV1H682J | MF 6800PF J | | |
| C4 | | | CE04GW1E4R7M | LL-ELEC 4.7UF 25WV | | |
| C5 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C6 ,7 | | | CE04GW1E4R7M | LL-ELEC 4.7UF 25WV | | |
| C8 ,9 | | | CF92FV1H154J | MF 0.15UF J | | |
| C10 ,11 | | | CF92FV1H104J | MF 0.10UF J | | |
| C12 | | | CK45FB1H681K | CERAMIC 680PF K | | |
| C13 -18 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C19 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C20 ,21 | | | CF92FV1H224J | MF 0.22UF J | | |
| C22 | | | CE04GW1E4R7M | LL-ELEC 4.7UF 25WV | | |
| C23 | | | CE04KW1C221M | ELECTRO 220UF 16WV | | |

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

 indicates safety critical components.

KR-V9010

PARTS LIST

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.


Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕向 | Re- marks 備考 |
|------------------|---------------|-------------------|-------------------|-------------------------|------------------------|--------------------|
| C24 ,25 | | | CE04GW1E4R7M | LL-ELEC 4.7UF 25WV | | |
| C26 | | | CF92FV1H682J | MF 6800PF J | | |
| C27 ,28 | | | CF92FV1H334J | MF 0.33UF J | | |
| C29 | | | CK45FB1H681K | CERAMIC 680PF K | | |
| C30 ,31 | | | CF92FV1H104J | MF 0.10UF J | | |
| C32 | | | CF92FV1H474J | MF 0.47UF J | | |
| C33 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C34 | | | CF92FV1H472J | MF 4700PF J | | |
| C35 | | | CF92FV1H333J | MF 0.033UF J | | |
| C36 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C37 | | | CE04KW1C220M | ELECTRO 22UF 16WV | | |
| C38 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C39 | | | CF92FV1H104J | MF 0.10UF J | | |
| C40 | | | CF92FV1H334J | MF 0.33UF J | | |
| C41 | | | CE04KW1C101M | ELECTRO 100UF 16WV | | |
| C42 | | | CF92FV1H273J | MF 0.027UF J | | |
| C43 | | | CF92FV1H682J | MF 6800PF J | | |
| C44 | | | CC45FSL1H180J | CERAMIC 18PF J | | |
| C45 | | | CE04KW1V4R7M | ELECTRO 4.7UF 35WV | | |
| C46 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C47 | | | C90-1352-05 | NP-ELEC 4.7UF 25WV | | |
| C48 | | | CC45FSL1H221J | CERAMIC 220PF J | | |
| C49 | | | CF92FV1H472J | MF 4700PF J | | |
| C50 | | | CF92FV1H682J | MF 6800PF J | | |
| C51 | | | CC45FSL1H100D | CERAMIC 10PF D | | |
| C52 -54 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C55 ,56 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C57 | | | CE04KW1HR22M | ELECTRO 0.22UF 50WV | | |
| C58 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C59 ,60 | | | CE04KW1A101M | ELECTRO 100UF 10WV | | |
| C61 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C62 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C63 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C64 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C65 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C66 | | | CE04KW1HR22M | ELECTRO 0.22UF 50WV | | |
| C67 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C68 | | * | CC93FCH1H152J | CERAMIC 1500PF J | | |
| C69 | | | CE04KW1V4R7M | ELECTRO 4.7UF 35WV | | |
| C70 -72 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C73 | | | C90-1352-05 | NP-ELEC 4.7UF 25WV | | |
| C74 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C75 -77 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C78 | | | CF92FV1H153J | MF 0.015UF J | | |
| C79 | | | CF92FV1H392J | MF 3900PF J | | |
| C80 ,81 | | | CK45FB1H821K | CERAMIC 820PF K | | |
| C82 | | | CF92FV1H392J | MF 3900PF J | | |
| C83 | | | CF92FV1H153J | MF 0.015UF J | | |
| C84 ,85 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C86 -88 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C89 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C90 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C91 ,92 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C93 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C94 ,95 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |

E: Scandinavia & Europe K: USA P: Canada

U: PX(Far East, Hawaii) T: England M: Other Areas

UE: AAFES(Europe) X: Australia

 indicates safety critical components.

PARTS LIST

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕 向 | Re- marks 備考 |
|---|---------------|-------------------|-------------------|----------------------------|-------------------------|--------------------|
| △ C115,116 C121 C121 C122,123 C126-129 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | UUE KP | |
| | | | C91-0023-05 | CERAMIC 0.01UF AC250V | | |
| | | | C91-0647-05 | CERAMIC 0.01UF P | | |
| | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C131,132 C142 C143 C145 C146 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| | | | CK45FF1H472Z | CERAMIC 4700PF Z | | |
| | | * | CC45FSL1H070C | CERAMIC 7.0PF C | | |
| | | | CC45FSL1H020J | CERAMIC 82PF J | | |
| | | | | | | |
| C148 C149 C150 C151 C152 | | | CE04KW1H470M | ELECTRO 47UF 50WV | | |
| | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| | | | CE04KW1A101M | ELECTRO 100UF 10WV | | |
| | | | CE04KW1H220M | ELECTRO 22UF 50WV | | |
| | | | CF92FV1H473J | MF 0.047UF J | | |
| | | | | | | |
| C153 C154 C155 C156,157 C158,159 | | | CK45FB1H222K | CERAMIC 2200PF K | | |
| | | | CE04KW1E330M | ELECTRO 33UF 25WV | | |
| | | | CE04KW2A010M | ELECTRO 1.0UF 100WV | | |
| | | | C90-1745-05 | ELECTRO 300UF 42WV | | |
| | | | C90-1318-05 | ELECTRO 7500UF 80WV | | |
| | | | | | | |
| C160 C161 C162 C163 C164 | | | C90-1745-05 | ELECTRO 300UF 42WV | | |
| | | | CE04KW1V102M | ELECTRO 1000UF 35WV | | |
| | | | CE04KW1E471M | ELECTRO 470UF 25WV | | |
| | | | CE04KW1J470M | ELECTRO 47UF 63WV | | |
| | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| | | | | | | |
| C165 C167 C168 C169 | | | CE04KW1A101M | ELECTRO 100UF 10WV | | |
| | | | CE04KW2A010M | ELECTRO 1.0UF 100WV | | |
| | | | CK45FB1H222K | CERAMIC 2200PF K | | |
| | | | CE04KW1A221M | ELECTRO 220UF 10WV | | |
| E3 E4 E7 | 1C | | E20-0823-05 | LOCK TERMINAL BOARD(8P) | | |
| | 1C | | E20-0459-05 | LOCK TERMINAL BOARD | | |
| | 2C | | E21-0162-05 | PHONE JACK (3P) | | |
| △ F1 F1 ,2 F3 ,4 F5 ,6 | | | F05-8029-05 | FUSE (UL) (250V 8A) | KP UUE KP P | |
| | | | F06-4029-05 | FUSE (UL) (250V 4A) | | |
| | | | F04-5022-05 | FUSE (UL) (125V 5A) | | |
| | | * | F04-2025-05 | FUSE (UL) (250V 2A) | | |
| | | | | | | |
| 80 80 | 1C | | J13-0041-05 | FUSE CLIP | KP | |
| | 1C | | J13-0054-05 | FUSE CLIP | | |
| L1 L2 T1 T1 X1 | | | L40-2291-17 | SMALL FIXED INDUCTOR | | |
| | | | L39-0085-05 | PHASE-COMPENSATION COIL | | |
| | | * | L01-8911-05 | POWER TRANSFORMER | KP UUE | |
| | | * | L01-8914-05 | POWER TRANSFORMER | | |
| | | | L78-0255-15 | RESONATOR | | |
| K H | 1C | | N89-3010-46 | BINDING HEAD TAPTITE SCREW | | |
| | | | N09-0333-05 | TAPPING SCREW (3X12) | | |
| CP1 R10 R171 R183 R185 | | | R90-0187-05 | MULTI-COMP 0.22X2 K 5W | KP | |
| | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| | | | R92-0173-05 | RC 2.2M M 1/2W | | |
| | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| | | | RD14GB2E101J | FL-PROOF RD 100 J 1/4W | | |
| | | | | | | |
| R186 R190 R191 | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| | | | RS14DB3A4R7J | FL-PROOF RS 4.7 J 1W | | |
| | | | RS14KB3A4R7J | FL-PROOF RS 4.7 J 1W | | |

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

△ indicates safety critical components.

KR-V9010

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕向 | Re- marks 備考 |
|------------------|---------------|-------------------|-------------------|-----------------------------|------------------------|--------------------|
| R196 | | | RS14DB3A472J | FL-PROOF RS 4.7K J 1W | | |
| R197 | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| R202 | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| R209 | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| R211 | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| R213 | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| R214 | | | RS14DB3A561J | FL-PROOF RS 560 J 1W | | |
| R215 | | | RS14KB3A561J | FL-PROOF RS 560 J 1W | | |
| VR1 | | | R12-5059-05 | TRIMMING POT.(100K) | | |
| VR2 | | | R05-5012-05 | POTENTIOMETER | | |
| △ K1 | | | S51-1036-05 | MAGNETIC RELAY | | |
| K2 -5 | | | S51-2078-05 | MAGNETIC RELAY | | |
| S1 | | | S31-2136-05 | SLIDE SWITCH (POWER TYPE) | | |
| △ S2 | | | S31-3010-05 | SLIDE SWITCH | UUE | |
| D1 | | | HSS104 | DIODE | | |
| D1 | | | 1SS133 | DIODE | | |
| D41 -49 | | | S5566B | DIODE | | |
| D50 ,51 | | | HSS104A | DIODE | | |
| D50 ,51 | | | 1SS131 | DIODE | | |
| D52 | | | S5566B | DIODE | | |
| D53 | | | HSS104A | DIODE | | |
| D53 | | | 1SS131 | DIODE | | |
| D54 | | | HZS6.8N(B2) | ZENER DIODE | | |
| D54 | | | RD6.8ES(B2) | ZENER DIODE | | |
| D55 ,56 | | | HZS18N(B) | ZENER DIODE | | |
| D55 ,56 | | | RD18ES(B) | ZENER DIODE | | |
| D57 | | | HZS13N(B2) | ZENER DIODE | | |
| D57 | | | RD13ES(B2) | ZENER DIODE | | |
| D58 | | | HSS104A | DIODE | | |
| D58 | | | 1SS131 | DIODE | | |
| D59 ,60 | | | S5566B | DIODE | | |
| D61 | | | HZS5.1N(B2) | ZENER DIODE | | |
| D61 | | | RD5.1ES(B2) | ZENER DIODE | | |
| D62 | | | S5566B | DIODE | | |
| D63 | | | D3SBA20F03 | DIODE | | |
| D63 | | | RBV-402LFA | DIODE | | |
| D64 | | | D5FB20*1 | DIODE | | |
| D65 -71 | | | S5566B | DIODE | | |
| D72 ,73 | | | HSS104 | DIODE | | |
| D72 ,73 | | | 1SS133 | DIODE | | |
| IC1 | | | NJM2058D | IC(OP AMP X4) | | |
| IC2 | | | TC4011UBP | IC(NAND X4) | | |
| IC3 | | | NJM2058D | IC(OP AMP X4) | | |
| IC4 | | | TC9162N | IC(ANALOG SWITCH ARRAY) | | |
| IC5 | | | NJM4565L | IC | | |
| IC6 | | | UPC1571C | IC(NOISE SUPPRESSOR) | | |
| IC7 | | | NJM78L05A | IC(VOLTAGE REGULATOR/ +5V) | | |
| IC8 | | | YM3428 | IC | | |
| IC9 | | | LA2730 | IC(DOLBY SYSTEM) | | |
| IC10 | | * | NJM072BL | IC(OP AMP) | | |
| IC11 | | | NJM4565L | IC | | |
| IC12 | | * | LA2770 | IC | | |
| IC16 | | | UPC7805HF | IC(VOLTAGE REGULATOR/ +5V) | | |
| IC17 | | | UPC78L12J | IC(VOLTAGE REGULATOR/ +12V) | | |

E: Scandinavia & Europe K: USA P: Canada

U: PX(Far East, Hawaii) T: England M: Other Areas

UE: AAFES(Europe) X: Australia

△ indicates safety critical components.

PARTS LIST

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕 向 | Re- marks 備考 |
|---|---------------|-------------------|-------------------|-------------------------|-------------------------|--------------------|
| Q1 | | | 2SC1740S(Q, R) | TRANSISTOR | | |
| Q1 | | | 2SC945(A)(Q, P) | TRANSISTOR | | |
| Q2 ,3 | | | 2SC2878(B) | TRANSISTOR | | |
| Q5 | | | 2SA733(A)(Q, P) | TRANSISTOR | | |
| Q5 | | | 2SA933S(Q, R) | TRANSISTOR | | |
| Q21 | | | 2SD1302(S, T) | TRANSISTOR | | |
| Q22 | | | 2SC1740S(Q, R) | TRANSISTOR | | |
| Q22 | | | 2SC945(A)(Q, P) | TRANSISTOR | | |
| Q23 | | | 2SA733(A)(Q, P) | TRANSISTOR | | |
| Q23 | | | 2SA933S(Q, R) | TRANSISTOR | | |
| Q24 | | | 2SB772(Q, P) | TRANSISTOR | | |
| Q25 -27 | | | 2SA992(F, E) | TRANSISTOR | | |
| Q28 | | | 2SC1845(F, E) | TRANSISTOR | | |
| Q29 | | | 2SC4137 | TRANSISTOR | | |
| Q30 | | * | 2SD1893 | TRANSISTOR | | |
| Q31 | | * | 2SB1253 | TRANSISTOR | | |
| Q32 | | | 2SC1845(F, E) | TRANSISTOR | | |
| Q33 | | | 2SA733(A)(Q, P) | TRANSISTOR | | |
| Q33 | | | 2SA933S(Q, R) | TRANSISTOR | | |
| Q34 -37 | | | 2SC1740S(Q, R) | TRANSISTOR | | |
| Q34 -37 | | | 2SC945(A)(Q, P) | TRANSISTOR | | |
| AUDIO UNIT (X09-2850-10) : J (X09-2930-10) : S | | | | | | |
| C3 ,4 | | | CE04KW1V100M | ELECTRO | 10UF 35WV | |
| C5 ,6 | | | CC45FSL1H221J | CERAMIC | 220PF J | |
| C9 ,10 | | | CE04KW1A101M | ELECTRO | 100UF 10WV | |
| C11 ,12 | | | CF92FV1H123J | MF | 0.012UF J | |
| C13 ,14 | | | CF92FV1H332J | MF | 3300PF J | |
| C15 ,16 | | | CE04KW1V4R7M | ELECTRO | 4.7UF 35WV | |
| C17 -38 | | | CK45FB1H471K | CERAMIC | 470PF K | |
| C39 ,40 | | | CE04KW1HR47M | ELECTRO | 0.47UF 50WV | |
| C43 ,44 | | | CE04KW1V100M | ELECTRO | 10UF 35WV | |
| C45 ,46 | | | CE04KW1HR47M | ELECTRO | 0.47UF 50WV | |
| C49 ,50 | | | CE04KW1V4R7M | ELECTRO | 4.7UF 35WV | |
| C51 ,52 | | | CE04KW1HR47M | ELECTRO | 0.47UF 50WV | |
| C55 ,56 | | | CE04KW1V4R7M | ELECTRO | 4.7UF 35WV | |
| C57 ,58 | | | CF92FV1H104J | MF | 0.10UF J | |
| C59 ,60 | | | CC45FSL1H220J | CERAMIC | 22PF J | |
| C61 ,62 | | | CE04KW1H010M | ELECTRO | 1.0UF 50WV | |
| C63 ,64 | | | CF92FV1H104J | MF | 0.10UF J | |
| C65 ,66 | | | CK45FB1H471K | CERAMIC | 470PF K | |
| C71 ,72 | | | CE04KW1H010M | ELECTRO | 1.0UF 50WV | |
| C73 ,74 | | | CK45FB1H471K | CERAMIC | 470PF K | |
| C75 ,76 | | | CE04KW1H010M | ELECTRO | 1.0UF 50WV | |
| C77 ,78 | | | CE04KW1H2R2M | ELECTRO | 2.2UF 50WV | |
| C79 ,80 | | | CF92FV1H124J | MF | 0.12UF J | |
| C81 ,82 | | | CE04KW1H010M | ELECTRO | 1.0UF 50WV | |
| C83 ,84 | | | C91-0692-05 | CERAMIC | 0.047UF K | |
| C85 ,86 | | | CE04KW1HR33M | ELECTRO | 0.33UF 50WV | |
| C87 ,88 | | | C91-0682-05 | CERAMIC | 0.018UF K | |
| C89 ,90 | | | CF92FV1H124J | MF | 0.12UF J | |
| C91 ,92 | | | C91-0674-05 | CERAMIC | 0.0082UF K | |
| C93 ,94 | | * | C91-0694-05 | CERAMIC | 0.056UF K | |
| C95 ,96 | | * | C91-0662-05 | CERAMIC | 0.0027UF K | |
| C97 ,98 | | | C91-0682-05 | CERAMIC | 0.018UF K | |

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

△ indicates safety critical components.

KR-V9010

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.


Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕向 | Re- marks 備考 |
|------------------|---------------|-------------------|-------------------|----------------------------|------------------------|--------------------|
| C99, 100 | | | C91-0656-05 | CERAMIC 0.0015UF K | | |
| C101, 102 | | | C91-0674-05 | CERAMIC 0.0082UF K | | |
| C103, 104 | | | CK45FB1H471K | CERAMIC 470PF K | | |
| C111, 112 | | | CE04KW1HR47M | ELECTRO 0.47UF 50WV | | |
| C115, 116 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C117, 118 | | | CE04KW1V4R7M | ELECTRO 4.7UF 35WV | | |
| C119, 120 | | | CE04KW1HR47M | ELECTRO 0.47UF 50WV | | |
| C123, 124 | | | CE04KW1V4R7M | ELECTRO 4.7UF 35WV | | |
| C125, 126 | | | CE04KW1HR47M | ELECTRO 0.47UF 50WV | | |
| C129, 130 | | | CE04KW1V4R7M | ELECTRO 4.7UF 35WV | | |
| C131, 132 | | | CK45FB1H471K | CERAMIC 470PF K | | |
| C134 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C151 | | | CE04KW1E101M | ELECTRO 100UF 25WV | | |
| C152 | | | CE04KW1E470M | ELECTRO 47UF 25WV | | |
| C153 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C155 | | | CK45FB1H102K | CERAMIC 1000PF K | | |
| C156, 157 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C158, 159 | | | CE04KW1C101M | ELECTRO 100UF 16WV | | |
| C160 | | | CE04KW1V4R7M | ELECTRO 4.7UF 35WV | | |
| C161 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C162 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C163 | | | C90-1456-05 | NP-ELEC 0.22UF 50WV | | |
| C164 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C165 | | | CK45FB1H471K | CERAMIC 470PF K | | |
| C166 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C167-169 | | | CK45FF1H472Z | CERAMIC 4700PF Z | | |
| C170, 171 | | | CK45FB1H102K | CERAMIC 1000PF K | | |
| C172 | | | C90-1455-05 | NP-ELEC 0.1UF 50WV | | |
| C173-175 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C176 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C177 | | | CK45FB1H471K | CERAMIC 470PF K | | |
| C178 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C179 | | | CE04KW1H2R2M | ELECTRO 2.2UF 50WV | | |
| C182 | | | CK45FF1H472Z | CERAMIC 4700PF Z | | |
| C183 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C184 | | | CK45FB1H471K | CERAMIC 470PF K | | |
| C186 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C187, 188 | | | CC45FSL1H221J | CERAMIC 220PF J | | |
| C189-192 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C195-197 | | | CE04KW1H2R2M | ELECTRO 2.2UF 50WV | | |
| C198 | | | CK45FB1H102K | CERAMIC 1000PF K | | |
| C201 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| CN10 | | | E10-0408-05 | FLAT CABLE CONNECTOR | | |
| E4 | 2D | | E13-0235-05 | PHONE JACK (2P) | | |
| E5 | 2D | | E13-0138-05 | PHONE JACK (1P) | | |
| E6 | 2C | | E11-0188-05 | MINIATURE PHONE JACK | | |
| E2,3 | 2D | | E13-0820-05 | PHONE JACK (8P) | | |
| E1 | 2D | | E13-0634-05 | PHONE JACK (6P) | | |
| L1, 2 | | | L39-0085-05 | PHASE-COMPENSATION COIL | | |
| J | | | N35-3008-46 | BINDING HEAD MACHINE SCREW | | |
| C | | | N89-3008-45 | BINDING HEAD TAPTITE SCREW | | |
| E | | | N89-3008-46 | BINDING HEAD TAPTITE SCREW | | |
| H | 1C | | N09-0333-05 | TAPPING SCREW (3X12) | | |

E: Scandinavia & Europe K: USA P: Canada

U: PX(Far East, Hawaii) T: England M: Other Areas

UE: AAFES(Europe) X: Australia

 indicates safety critical components.

PARTS LIST

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕 向 | Re- marks 備考 |
|------------------|---------------|-------------------|-------------------|--------------------------------|-------------------------|--------------------|
| CP1 ,2 | | | R90-0187-05 | MULTI-COMP 0.22X2 K 5W | | |
| R91 ,92 | | | RS14KB3D4R7J | FL-PROOF RS 4.7 J 2W | | |
| R93 ,94 | | | RS14KB3A4R7J | FL-PROOF RS 4.7 J 1W | | |
| R182 ,183 | | * | RD14AB2E120J | FL-PROOF RD 12 J 1/4W | | |
| R231 ,232 | | | RD14AB2E391J | FL-PROOF RD 390 J 1/4W | | |
| R243 ,244 | | | RD14AB2E391J | FL-PROOF RD 390 J 1/4W | | |
| R252 | | | RS14KB3D680J | FL-PROOF RS 68 J 2W | | |
| D51 | | * | HZS15N(B1) | ZENER DIODE | | |
| D51 | | | HZS15N(B2) | ZENER DIODE | | |
| D51 | | * | RD15ES(B1) | ZENER DIODE | | |
| D51 | | | RD15ES(B2) | ZENER DIODE | | |
| D52 | | | HZS5.1N(B2) | ZENER DIODE | | |
| D52 | | | RD5.1ES(B2) | ZENER DIODE | | |
| D53 ,54 | | | HZS6.8N(B2) | ZENER DIODE | | |
| D53 ,54 | | | RD6.8ES(B2) | ZENER DIODE | | |
| D55 | | | HZS13N(B2) | ZENER DIODE | | |
| D55 | | | RD13ES(B2) | ZENER DIODE | | |
| D56 -69 | | | HSS104 | DIODE | | |
| D56 -69 | | | 1SS133 | DIODE | | |
| D71 ,72 | | | HSS104 | DIODE | | |
| D71 ,72 | | | 1SS133 | DIODE | | |
| D73 | | | HSS104A | DIODE | | |
| D73 | | | 1SS131 | DIODE | | |
| D78 | | | HSS104A | DIODE | | |
| D78 | | | 1SS131 | DIODE | | |
| D83 | | | HZS5.1N(B2) | ZENER DIODE | | |
| D83 | | | RD5.1ES(B2) | ZENER DIODE | | |
| D84 ,85 | | | HZS4.7N(B) | ZENER DIODE | | |
| D84 ,85 | | | RD4.7ES(B) | ZENER DIODE | | |
| D86 ,87 | | | HSS104 | DIODE | | |
| D86 ,87 | | | 1SS133 | DIODE | | |
| IC1 | | | UPC4570C-A | IC(OP AMP X2) | | |
| IC2 | | | TC9164N | IC(16CH BILATERAL SELECTOR SW) | | |
| IC3 ,4 | | | TC9163N | IC(BILATERAL SWITCH X16) | | |
| IC5 | | | NJM4558D | IC(OP AMP X2) | | |
| IC6 ,7 | | | UPC4570C-A | IC(OP AMP X2) | | |
| IC8 ,9 | | | NJM4558D | IC(OP AMP X2) | | |
| IC10 | | | TC9176P | IC(2CH ELECTRONIC VOLUME) | | |
| IC11 | | | NJM4558D | IC(OP AMP X2) | | |
| IC12 | | | LC7522 | IC(7CH GRAPHIC EQUALIZER) | | |
| IC13 ,14 | | | M5229P | IC(7CH GRAPHIC EQUALIZER) | | |
| IC15 | | | LC4966 | IC(CMOS LOGIC BILATERAL SW) | | |
| IC16 | | | NJM4558D | IC(OP AMP X2) | | |
| Q1 ,2 | | | 2SC2922*5 | TRANSISTOR | | |
| Q3 ,4 | | | 2SA1216*5 | TRANSISTOR | | |
| Q5 ,6 | | | 2SC4137 | TRANSISTOR | | |
| Q7 -14 | | | 2SC2878(B) | TRANSISTOR | | |
| Q21 | | | 2SD1266 | TRANSISTOR | | |
| Q22 | | | 2SC1740S(Q,R) | TRANSISTOR | | |
| Q22 | | | 2SC945(A)(Q,P) | TRANSISTOR | | |
| Q23 ,24 | | | 2SD1266 | TRANSISTOR | | |
| Q25 | | | 2SA733(A)(Q,P) | TRANSISTOR | | |
| Q25 | | | 2SA933S(Q,R) | TRANSISTOR | | |
| Q26 | | | 2SC1740S(Q,R) | TRANSISTOR | | |

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

△ indicates safety critical components.

PARTS LIST

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.


Telle ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕向 | Re- marks 備考 |
|---|---------------|-------------------|-------------------|------------------------------|------------------------|--------------------|
| Q26 | | | 2SC945(A)(Q,P) | TRANSISTOR | | |
| Q27 | | | 2SA733(A)(Q,P) | TRANSISTOR | | |
| Q27 | | | 2SA933S(Q,R) | TRANSISTOR | | |
| Q28 | | | 2SD1266 | TRANSISTOR | | |
| Q29 | | | 2SC2003(L,K) | TRANSISTOR | | |
| Q30 | | | 2SA733(A)(Q,P) | TRANSISTOR | | |
| Q30 | | | 2SA933S(Q,R) | TRANSISTOR | | |
| Q32 | | | 2SA733(A)(Q,P) | TRANSISTOR | | |
| Q32 | | | 2SA933S(Q,R) | TRANSISTOR | | |
| Q34 ,35 | | | 2SC1740S(Q,R) | TRANSISTOR | | |
| Q34 ,35 | | | 2SC945(A)(Q,P) | TRANSISTOR | | |
| Q36 -38 | | | 2SA733(A)(Q,P) | TRANSISTOR | | |
| Q36 -38 | | | 2SA933S(Q,R) | TRANSISTOR | | |
| SUB UNIT (X13-6370-10) : J (X13-6250-10) : S | | | | | | |
| C1 ,2 | | | CE04KW1C470M | ELECTRO 47UF 16WV | | |
| C3 ,4 | | | CE04KW1A221M | ELECTRO 220UF 10WV | | |
| C5 ,6 | | | CE04KW1A101M | ELECTRO 100UF 10WV | | |
| C7 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C8 -15 | | | CE04KW1A101M | ELECTRO 100UF 10WV | | |
| C16 | | | CE04KW1H3R3M | ELECTRO 3.3UF 50WV | | |
| C17 -19 | | | CC45FSL1H101J | CERAMIC 100PF J | | |
| C20 | | | CC45FCH1H270J | CERAMIC 27PF J | | |
| C21 ,22 | | | CC45FCH1H220J | CERAMIC 22PF J | | |
| C23 | | | CC45FCH1H270J | CERAMIC 27PF J | | |
| C24 ,25 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C26 -28 | | | CE04KW1A101M | ELECTRO 100UF 10WV | | |
| C29 | | | CF92FV1H104J | MF 0.10UF J | | |
| C30 | | | CF92FV1H102J | MF 1000PF J | | |
| C31 | | | CF92FV1H242J | MF 2400PF J | | |
| C32 | | | CF92FV1H102J | MF 1000PF J | | |
| C33 | | | CE04KW1H2R2M | ELECTRO 2.2UF 50WV | | |
| C34 | | | CE04KW1V100M | ELECTRO 10UF 35WV | | |
| C35 | | | CE04KW1H2R2M | ELECTRO 2.2UF 50WV | | |
| C36 | | | CE04KW1HOR1M | ELECTRO 0.1UF 50WV | | |
| E1 | | | E06-0407-05 | CYLINDRICAL RECEPTACLE | | |
| E2,3 | | | E13-0318-05 | PHONO JACK (3P) | | |
| L1 | | | L40-1501-17 | SMALL FIXED INDUCTOR(15UH,K) | | |
| X1 | | | L77-1131-05 | CRYSTAL RESONATOR | | |
| R1 ,2 | | | RS14KB3D121J | FL-PROOF RS 120 J 2W | | |
| R3 ,4 | | | RS14KB3D180J | FL-PROOF RS 18 J 2W | | |
| R45 | | | RD14GB2E100J | FL-PROOF RD 10 J 1/4W | | |
| R82 ,83 | | | RS14KB3D151J | FL-PROOF RS 150 J 2W | | |
| D1 ,2 | | | HZS5.6N(B2) | ZENER DIODE | | |
| D1 ,2 | | | RD5.6ES(B2) | ZENER DIODE | | |
| D3 -29 | | | HSS104 | DIODE | | |
| D3 -29 | | | 1SS133 | DIODE | | |
| IC1 | | | UPA80C | IC(7CH TRANSISTOR ARRAY) | | |
| IC2 -4 | | | UPD4066BC | IC(BILATERAL SWITCH X4) | | |
| IC5 | | | MB88323A-K2 | IC(DISPLAY CONTROLLER) | | |
| IC6 | | | UPD4069UBC | IC(INVERTER X6) | | |
| IC7 -11 | | * | MC14577A | IC | | |
| Q1 | | | 2SD882(Q,P) | TRANSISTOR | | |
| Q2 | | | 2SB772(Q,P) | TRANSISTOR | | |
| Q3 | | | 2SC1740S(Q,R) | TRANSISTOR | | |

E: Scandinavia & Europe K: USA P: Canada

U: PX(Far East, Hawaii) T: England M: Other Areas

UE: AAFES(Europe) X: Australia

 indicates safety critical components.

PARTS LIST

※ New Parts


Parts without Parts No. are not supplied.

Les articles non mentionnes dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕 向 | Re- marks 備考 |
|--|---------------|-------------------|---|--|-------------------------|--------------------|
| Q3 Q4 Q4 Q5 -7 Q5 -7 | | | 2SC945(A)(Q,P) 2SA733(A)(Q,P) 2SA933S(Q,R) 2SC1740S(Q,R) 2SC945(A)(Q,P) | TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR | | |
| Q8 Q9 Q10 , 11 | | | 2SD882(Q,P) 2SB772(Q,P) 2SC2878(A,B) | TRANSISTOR TRANSISTOR TRANSISTOR | | |
| DISPLAY UNIT (X14-2560-10) : J (X14-2700-10) : S | | | | | | |
| D56 -59 D60 , 61 | | | B30-1012-05 B30-0431-05 | LED(SLP-981C-50) LED(LN21CPH) | | |
| C1 C2 C3 C4 , 5 C6 | | | C91-0928-05 CE04KW1A101M CE04KW1H010M CC45FSL1H101J CE04KW1C101M | BACKUP C 0.047F 5.5WV ELECTRO 100UF 10WV ELECTRO 1.0UF 50WV CERAMIC 100PF J ELECTRO 100UF 16WV | | |
| C7 C8 , 9 C10 C11 C12 | | | CE04KW1A101M CC45FSL1H330J CK45FB1H102K CE04KW1C101M CE04KW1A101M | ELECTRO 100UF 10WV CERAMIC 33PF J CERAMIC 1000PF K ELECTRO 100UF 16WV ELECTRO 100UF 10WV | | |
| C13 C14 , 15 C16 , 17 C18 C19 , 20 | | | CE04KW1H010M CC45FSL1H101J CC45FSL1H330J CK45FB1H102K CE04KW1A101M | ELECTRO 1.0UF 50WV CERAMIC 100PF J CERAMIC 33PF J CERAMIC 1000PF K ELECTRO 100UF 10WV | | |
| C21 C22 C23 , 24 C25 C26 , 27 | | | CE04KW1V4R7M CK45FB1H152K CE04KW1A101M CE04KW1H010M C91-0680-05 | ELECTRO 4.7UF 35WV CERAMIC 1500PF K ELECTRO 100UF 10WV ELECTRO 1.0UF 50WV CERAMIC 0.015UF K | | |
| C28 , 29 C30 , 31 C32 , 33 C34 , 35 C36 , 37 | | * | C91-0672-05 C91-0690-05 CK45FB1H391K C91-0700-05 C91-0652-05 | CERAMIC 0.0068UF K CERAMIC 0.039UF K CERAMIC 390PF K CERAMIC 0.1UF J CERAMIC 0.001UF K | | |
| C38 , 39 C40 -45 C46 C47 , 48 C49 | | * | C91-0662-05 CE04KW1H010M CK45FF1H223Z CF92FV1H104J C90-1333-05 | CERAMIC 0.0027UF K ELECTRO 1.0UF 50WV CERAMIC 0.022UF Z MF 0.10UF J NP-ELEC 22UF 10WV | | |
| C50 , 51 C52 C53 , 54 C55 , 56 C57 , 58 | | | CK45FB1H102K CE04KW1C101M CK45FF1H223Z CE04KW1H010M CK45FF1H103Z | CERAMIC 1000PF K ELECTRO 100UF 16WV CERAMIC 0.022UF Z ELECTRO 1.0UF 50WV CERAMIC 0.010UF Z | | |
| CN8 E1 E2 | 3B 3B | * | E10-0509-05 E06-0821-05 E13-0311-05 | FLAT CABLE CONNECTOR CYLINDRICAL RECEPTACLE PIN JACK | | |
| E8 , 9 , 10 | | | J11-0098-05 | WIRE CLAMPER | | |
| X1 X2 , 3 | | | L78-0209-05 L78-0239-05 | RESONATOR (4.194MHZ) RESONATOR | | |

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

 indicates safety critical components.

KR-V9010

PARTS LIST

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕 向 | Re- marks 備考 |
|------------------|---------------|-------------------|-------------------|----------------------------|-------------------------|--------------------|
| CP1 | | * | R90-0844-05 | MULTI-COMP 1000PX2 | | |
| CP2 | | * | R90-0849-05 | MULTI-COMP 1KX5 J 1/6W | | |
| CP3 | | * | R90-0841-05 | MULTI-COMP 510KX8 J 1/6W | | |
| CP4 | | | R90-0483-05 | MULTI-COMP 100KX13 J 1/6W | | |
| CP5 | | * | R90-0837-05 | COMPOSITE ELEMENTS | | |
| CP6 | | | R90-0802-05 | MULTI-COMP 100KX10 J 1/4W | | |
| CP7 | | * | R90-0845-05 | MULTI-COMP 1000PX2 +0 .01 | | |
| CP8 | | | R90-0810-05 | MULTIPLE RESISTOR | | |
| CP9 | | * | R90-0842-05 | MULTI-COMP 1000PX4 | | |
| CP10 | | | R90-0482-05 | MULTI-COMP 100KX4 J 1/6W | | |
| CP11 | | * | R90-0843-05 | MULTI-COMP 1000PX3 | | |
| CP12 | | | R90-0810-05 | MULTIPLE RESISTOR | | |
| CP13 | | * | R90-0842-05 | MULTI-COMP 1000PX4 | | |
| CP14 | | | R90-0482-05 | MULTI-COMP 100KX4 J 1/6W | | |
| CP15 | | * | R90-0843-05 | MULTI-COMP 1000PX3 | | |
| CP16 | | | R90-0483-05 | MULTI-COMP 100KX13 J 1/6W | | |
| CP17 | | | R90-0493-05 | MULTI-COMP 100KX9 J 1/6W | | |
| CP18 | | * | R90-0846-05 | MULTI-COMP 150X7 J 1/6W | | |
| CP19 | | * | R90-0847-05 | MULTI-COMP 1/X7 J 1/6W | | |
| CP20 | | | R90-0278-05 | MULTI-COMP 100KX7 J 1/6W | | |
| CP21 | | * | R90-0848-05 | MULTI-COMP 560KX7 J 1/6W | | |
| CP22 | | * | R90-0838-05 | COMPOSITE ELEMENTS | | |
| CP23 | | | R90-0492-05 | MULTI-COMP 100KX8 J 1/6W | | |
| R84 | | | RD14AB2E221J | FL-PROOF RD 220 J 1/4W | | |
| R118 | | | RD14AB2E100J | FL-PROOF RD 10 J 1/4W | | |
| R124 | | * | RD14AB2E3R9J | FL-PROOF RD 3.9 J 1/4W | | |
| VR1 | | * | R29-5027-05 | POTENTIOMETER | | |
| VR2 | | * | R10-5032-05 | POTENTIOMETER | | |
| S1 -68 | | | S40-1064-05 | PUSH SWITCH | | |
| D1 -10 | | | HSS104 | DIODE | | |
| D1 -10 | | | 1SS133 | DIODE | | |
| D12 ,13 | | | HSS104 | DIODE | | |
| D12 ,13 | | | 1SS133 | DIODE | | |
| D15 -17 | | | HSS104 | DIODE | | |
| D15 -17 | | | 1SS133 | DIODE | | |
| D20 -23 | | | HSS104 | DIODE | | |
| D20 -23 | | | 1SS133 | DIODE | | |
| D24 | | | HZS10N(B2) | ZENER DIODE | | |
| D24 | | | RD10ES(B2) | ZENER DIODE | | |
| D25 -30 | | | HSS104 | DIODE | | |
| D25 -30 | | | 1SS133 | DIODE | | |
| D31 | | | HZS6.8N(B2) | ZENER DIODE | | |
| D31 | | | RD6.8ES(B2) | ZENER DIODE | | |
| D32 -55 | | | HSS104 | DIODE | | |
| D32 -55 | | | 1SS133 | DIODE | | |
| D62 -67 | | | HSS104 | DIODE | | |
| D62 -67 | | | 1SS133 | DIODE | | |
| D68 | | | HZS5.1N(B2) | ZENER DIODE | | |
| D68 | | | RD5.1ES(B2) | ZENER DIODE | | |
| D69 -83 | | | HSS104 | DIODE | | |
| D69 -83 | | | 1SS133 | DIODE | | |
| FL1 | | * | BG-652CK | FLUORESCENT INDICATOR TUBE | | |
| IC1 | | * | UPD75116CW-074 | IC(MICROPROCESSOR) | | |
| IC2 ,3 | | * | UPD7537ACU-220 | IC(MICROPROCESSOR) | | |

E: Scandinavia & Europe K: USA P: Canada

U: PX(Far East, Hawaii) T: England M: Other Areas

UE: AAFES(Europe) X: Australia

△ indicates safety critical components.

PARTS LIST

PARTS LIST

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

× New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕向 | Re- marks 備考 |
|--|---------------|----------------|-------------------|-------------------------------|------------------------|--------------------|
| IC4 | | | LC7565 | IC(GRAPHIC EQ FL DISPLAY DR) | | |
| IC5 ,6 | | | CXD1067P | IC(SERIAL-PARALLEL CONVERTER) | | |
| IC7 | | | LB1641 | IC(MOTOR DRIVER) | | |
| IC8 ,9 | | | NJM2058D | IC(OP AMP X4) | | |
| IC8 ,9 | | | UPC4574C | IC(OP AMP X4) | | |
| Q1 -6 | | | 2SC1740S(Q,R) | TRANSISTOR | | |
| Q1 -6 | | | 2SC945(A)(Q,P) | TRANSISTOR | | |
| Q7 -11 | | | 2SA733(A)(Q,P) | TRANSISTOR | | |
| Q7 -11 | | | 2SA933S(Q,R) | TRANSISTOR | | |
| Q12 | | | 2SC1740S(Q,R) | TRANSISTOR | | |
| Q12 | | | 2SC945(A)(Q,P) | TRANSISTOR | | |
| Q13 ,14 | | | DTC124ES | DIGITAL TRANSISTOR | | |
| A1 | | | W02-0975-05 | ELECTRIC CIRCUIT MODULE | | |
| MAIN AMPLIFIER UNIT (X89-1090-10) : J (X89-1100-10) S | | | | | | |
| C1 ,2 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C5 ,6 | | | CE04KW1C101M | ELECTRO 100UF 16WV | | |
| C7 ,8 | | | CF92FV1H113J | MF 0.011UF J | | |
| C9 ,10 | | | CC45FSL1H470J | CERAMIC 47PF J | | |
| C11 ,12 | | | CC45FSL1H100D | CERAMIC 10PF D | | |
| C13 ,14 | | | CC45FSL1H470J | CERAMIC 47PF J | | |
| C15 ,16 | | | CC45FSL1H221J | CERAMIC 220PF J | | |
| C17 ,18 | | | CE04KW2A470M | ELECTRO 47UF 100WV | | |
| C19 -22 | | | CK45FF1H103Z | CERAMIC 0.010UF Z | | |
| C23 | | | C90-1333-05 | NP-ELEC 22UF 10WV | | |
| C24 | | | CE04KW1C220M | ELECTRO 22UF 16WV | | |
| C26 | | | CE04KW1H010M | ELECTRO 1.0UF 50WV | | |
| C29 ,30 | | | CE04KW1C220M | ELECTRO 22UF 16WV | | |
| R19 -22 | | | RD14AB2E122J | FL-PROOF RD 1.2K J 1/4W | | |
| R23 ,24 | | | RD14AB2E181J | FL-PROOF RD 180 J 1/4W | | |
| R29 -32 | | | RD14AB2E221J | FL-PROOF RD 220 J 1/4W | | |
| R39 -42 | | | RD14AB2E220J | FL-PROOF RD 22 J 1/4W | | |
| R43 -46 | | | RD14AB2E221J | FL-PROOF RD 220 J 1/4W | | |
| R47 -50 | | | RD14AB2E2R2J | FL-PROOF RD 2.2 J 1/4W | | |
| R51 | | | RD14AB2E220J | FL-PROOF RD 22 J 1/4W | | |
| R52 | | | RD14AB2E100J | FL-PROOF RD 10 J 1/4W | | |
| R61 | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| R64 | | | RD14AB2E101J | FL-PROOF RD 100 J 1/4W | | |
| VR1 ,2 | | | R12-1070-05 | TRIMMING POT.(1K) | | |
| D1 ,2 | | | HZS5.1N(B2) | ZENER DIODE | | |
| D1 ,2 | | | RD5.1ES(B2) | ZENER DIODE | | |
| D3 ,4 | | | HSS104 | DIODE | | |
| D3 ,4 | | | 1SS133 | DIODE | | |
| D5 -8 | | | HSS104A | DIODE | | |
| D5 -8 | | | 1SS131 | DIODE | | |
| D9 ,10 | | | HSS104A | DIODE | | |
| D9 ,10 | | | 1SS131 | DIODE | | |
| IC1 | | | UPC1237HA | IC(POWER AMP) | | |
| Q1 -4 | | | 2SC1845(F,E) | TRANSISTOR | | |
| Q5 -8 | | | 2SC1740S(Q,R) | TRANSISTOR | | |
| Q5 -8 | | | 2SC945(A)(Q,P) | TRANSISTOR | | |
| Q9 -12 | | | 2SC1845(F,E) | TRANSISTOR | | |
| Q13 -18 | | | 2SA1123(R,S) | TRANSISTOR | | |
| Q19 ,20 | | | 2SC2631(R,S) | TRANSISTOR | | |

| Ref. No. 参照番号 | Address 位置 | New Parts 新 | Parts No. 部品番号 | Description 部品名 / 規格 | Desti- nation 仕向 | Re- marks 備考 |
|------------------|---------------|----------------|-------------------|-------------------------|------------------------|--------------------|
| Q21 ,22 | | | 2SC3944(Q,R) | TRANSISTOR | | |
| Q23 ,24 | | | 2SA1535(Q,R) | TRANSISTOR | | |
| Q25 ,26 | | | 2SC2631(R,S) | TRANSISTOR | | |
| Q27 -29 | | | 2SA992(F,E) | TRANSISTOR | | |

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

▲ indicates safety critical components.

E: Scandinavia & Europe K: USA P: Canada
 U: PX(Far East, Hawaii) T: England M: Other Areas
 UE: AAFES(Europe) X: Australia

▲ indicates safety critical components.

SPECIFICATIONS

AUDIO SECTION

Rated Power Output

130 watts per channel minimum RMS, both channels driven at 8 ohms, from 20 Hz to 20,000 Hz with no more than 0.008% total harmonic distortion. (FTC)

(Rear)

20 watts per channel minimum RMS, both channel driven at 8 ohms at 1 kHz with no more than 0.9% total harmonic distortion.

Total Harmonic Distortion

(1 kHz, 8 ohms) 0.003%

Input Sensitivity/Impedance

PHONO (MM) 2.5 mV/47 kohms
CD, TAPE 200 mV/47 kohms
VIDEO 250 mV/47kohms

Frequency Response

CD, TAPE, VIDEO 10 Hz - 100 kHz
+0 dB
-3 dB

Signal-to-Noise Ratio (IHF-A)

PHONO (MM) 79 dB
CD, TAPE 100 dB
VIDEO 90dB

Graphic Equalizer

Center Frequencies 60 Hz, 150 Hz, 400 Hz, 1 kHz,
2.4 kHz, 6 kHz, 15 kHz

Control Range ± 12 dB

VIDEO SECTION

VIDEO Inputs/Outputs 1 Vp-p, 75 ohms unbalanced

FM TUNER SECTION

Tuning Frequency Range 87.5 MHz - 108 MHz

Antenna Impedance 75 ohms unbalanced

Sensitivity IHF 10.8 dBf (0.95 μ V at 75 ohms)

Signal-to-Noise Ratio at 65 dBf (IHF)

MONO 80 dB

STEREO 74 dB

Total Harmonic Distortion at 1,000 Hz

MONO 0.1%

STEREO 0.2%

Frequency Response 30 Hz - 15 kHz
+0.5 dB
-2.0 dB

Stereo Separation 50 dB at 1 kHz

AM TUNER SECTION

Tuning Frequency Range

530 kHz - 1.610 kHz
(with the AM tuning interval set at 10 kHz)

531 kHz - 1.602 kHz
(with the AM tuning interval set at 9 kHz)

Usable Sensitivity 10 μ V/(400 μ V/m)

Signal-to-Noise Ratio 50 dB

Total Harmonic Distortion 0.3%

Selectivity 25 dB

GENERAL

Power Consumption 5A...USA and Canada Model/
500 W...Others

Dimensions 440 (W) \times 162 (H) \times 420 (D) mm
(17-5/16") \times (6-3/8") \times (16-9/16")

Weight (Net) 14.7 kg (32.4 lb)

Note:

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

Note :

Component and circuitry are subject to modification to insure best operation under differing local conditions. This manual is based on, the U.S.A. (K) standard, and provides information on regional circuit modification through use of alternate schematic diagrams, and information on regional component variations through use of parts list.

KENWOOD CORPORATION

Shionogi, Shibuya Building, 17-5, 2-chome Shibuya, Shibuya-ku, Tokyo 150, Japan

KENWOOD U.S.A. CORPORATION

2201 East Dominguez Street, Long Beach, CA 90810

550 Clark Drive, Mount Olive, NJ 07828, U.S.A.

KENWOOD ELECTRONICS CANADA INC.

P.O. BOX 1075, 959 Gana Court, Mississauga, Ontario, Canada L4T 4C2

TRIO-KENWOOD U.K. LIMITED

17 Bristol Road, The Metropolitan Centre, Greenford, Middx UB6 8UP, England

KENWOOD ELECTRONICS BENELUX N.V.

Mechelsesteenweg 418 B-1930 Zaventem, Belgium

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrucker-Str. 15, 6056 Heusenstamm, West Germany

TRIO-KENWOOD FRANCE S.A.

13 Boulevard Ney, 75018 Paris, France

KENWOOD LINEAR S.p.A.

20125, MILANO-VIA ARBE, 50, ITALY

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD. (INCORPORATED IN N.S.W.)

4E Woodcock Place, Lane Cove, N.S.W. 2066, Australia

KENWOOD & LEE ELECTRONICS, LTD.

Wang Kee Building, 4th Floor, 34-37, Connaught Road, Central, Hong Kong