




SERVICE MANUAL MODEL: FFH-286A/AD, FE-286E

# 3CD CHANGER HI-FI SYSTEM **SERVICE MANUAL**



**LG Electronics Inc.**

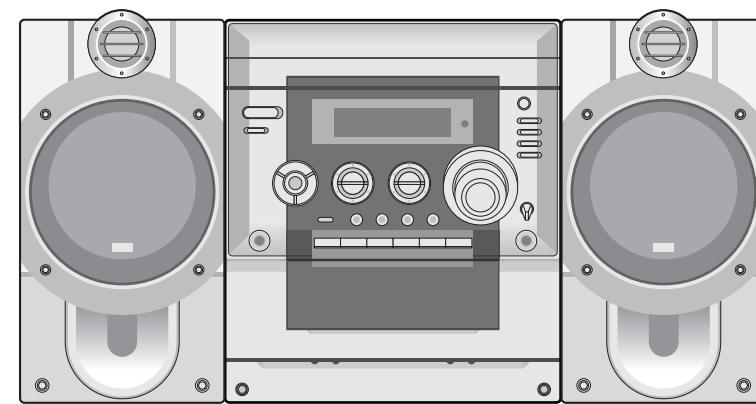

**MODEL : FFH-286A/AD, FE-286E**

# CONTENTS

## SECTION 1. GENERAL

• SERVICING PRECAUTIONS .....	1-2
• ESD PRECAUTIONS .....	1-4
• SPECIFICATIONS .....	1-5

## SECTION 2. ELECTRICAL

• ADJUSTMENTS .....	2-1
• TROUBLESHOOTING .....	2-3
• WAVEFORMS OF MAJOR CHECK POINT .....	2-7
• BLOCK DIAGRAM .....	2-17
• SCHEMATIC DIAGRAMS .....	2-19
• WIRING DIAGRAM .....	2-27
• PRINTED CIRCUIT DIARGAMS .....	2-29
• INTERNAL BLOCK DIAGRAM OF IC's .....	2-38
• REPAIRS REGARDING CD MECHANISM .....	2-45

## SECTION 3. EXPLODED VIEWS

• CABINET AND MAIN FRAME SECTION .....	3-1
• TAPE DECK MECHANISM: AUTO STOP DECK(OPTIONAL) .....	3-3
• TAPE DECK MECHANISM: AUTO REVERSE DECK .....	3-5
• CD MECHANISM .....	3-7

## SECTION 4. SPEAKER .....

4-1

## SECTION 5. REPLACEMENT PARTS LIST .....

5-1

# SECTION 1. GENERAL


## SERVICING PRECAUTIONS

### NOTES REGARDING HANDLING OF THE PICK-UP


#### 1. Notes for transport and storage

- 1) The pick-up should always be left in its conductive bag until immediately prior to use.
- 2) The pick-up should never be subjected to external pressure or impact.

Storage in conductive bag

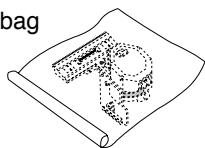


Drop impact

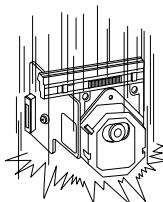

#### 2. Repair notes


- 1) The pick-up incorporates a strong magnet, and so should never be brought close to magnetic materials.
- 2) The pick-up should always be handled correctly and carefully, taking care to avoid external pressure and impact. If it is subjected to strong pressure or impact, the result may be an operational malfunction and/or damage to the printed-circuit board.
- 3) Each and every pick-up is already individually adjusted to a high degree of precision, and for that reason the adjustment point and installation screws should absolutely never be touched.
- 4) Laser beams may damage the eyes!  
Absolutely never permit laser beams to enter the eyes!  
Also NEVER switch ON the power to the laser output part (lens, etc.) of the pick-up if it is damaged.

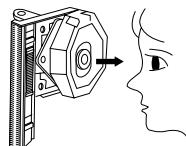

NEVER look directly at the laser beam, and don't let contact fingers or other exposed skin.

#### 5) Cleaning the lens surface

If there is dust on the lens surface, the dust should be cleaned away by using an air bush (such as used for camera lens). The lens is held by a delicate spring. When cleaning the lens surface, therefore, a cotton swab should be used, taking care not to distort this.

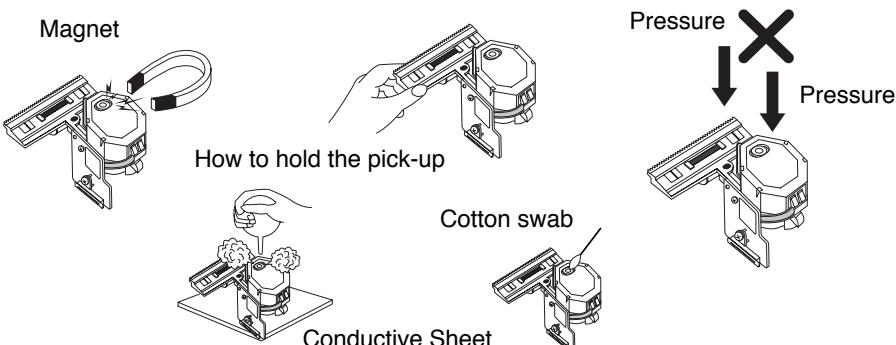

#### 6) Never attempt to disassemble the pick-up.

Spring by excess pressure. If the lens is extremely dirty, apply isopropyl alcohol to the cotton swab. (Do not use any other liquid cleaners, because they will damage the lens.) Take care not to use too much of this alcohol on the swab, and do not allow the alcohol to get inside the pick-up.


# NOTES REGARDING COMPACT DISC PLAYER REPAIRS

## 1. Preparations

- 1) Compact disc players incorporate a great many ICs as well as the pick-up (laser diode). These components are sensitive to, and easily affected by, static electricity. If such static electricity is high voltage, components can be damaged, and for that reason components should be handled with care.
- 2) The pick-up is composed of many optical components and other high-precision components. Care must be taken, therefore, to avoid repair or storage where the temperature or humidity is high, where strong magnetism is present, or where there is excessive dust.

## 2. Notes for repair

- 1) Before replacing a component part, first disconnect the power supply lead wire from the unit
- 2) All equipment, measuring instruments and tools must be grounded.
- 3) The workbench should be covered with a conductive sheet and grounded.  
When removing the laser pick-up from its conductive bag, do not place the pick-up on the bag. (This is because there is the possibility of damage by static electricity.)
- 4) To prevent AC leakage, the metal part of the soldering iron should be grounded.
- 5) Workers should be grounded by an armband ( $1\text{M}\Omega$ )
- 6) Care should be taken not to permit the laser pick-up to come in contact with clothing, in order to prevent static electricity changes in the clothing to escape from the armband.
- 7) The laser beam from the pick-up should NEVER be directly facing the eyes or bare skin.

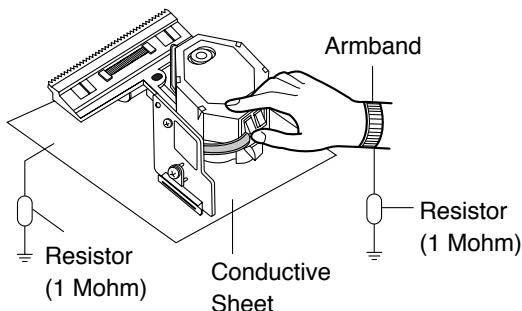


## CLEARING MALFUNCTION

You can reset your unit to initial status if malfunction occur(button malfunction, display, etc.).

Using a pointed good conductor(such as driver), simply short the RESET jump wire on the inside of the volume knob for more than 3 seconds.

If you reset your unit, you must reenter all its settings(stations, clock, timer)

- NOTE:**
1. To operate the RESET jump wire, pull the volume rotary knob and release it.
  2. If you wish to operate the RESET jump wire, it is necessary to unplug the power cord.

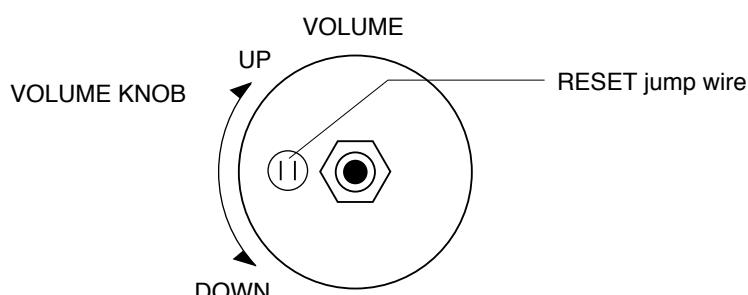

# ESD PRECAUTIONS

## Electrostatically Sensitive Devices (ESD)

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive Devices (ESD). Examples of typical ESD devices are integrated circuits and some field-effect transistors and semiconductor chip components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ESD devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ESD devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ESD devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ESD devices.
6. Do not remove a replacement ESD device from its protective package until immediately before you are ready to install it. (Most replacement ESD devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive materials).
7. Immediately before removing the protective material from the leads of a replacement ESD device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

**CAUTION : BE SURE NO POWER IS APPLIED TO THE CHASSIS OR CIRCUIT, AND OBSERVE ALL OTHER SAFETY PRECAUTIONS.**

8. Minimize bodily motions when handing unpackaged replacement ESD devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ESD device).

## CAUTION. GRAPHIC SYMBOLS



THE LIGHTNING FLASH WITH A PROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE SERVICE PERSONNEL TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE SERVICE PERSONNEL TO THE PRESENCE OF IMPORTANT SAFETY INFORMATION IN SERVICE LITERATURE.

# SPECIFICATIONS

SECTION MODEL		FFH-286A/AD
<b>General</b>	Power supply	Refer to the back panel of the unit
	Power consumption	30W
	Mass	5.70kg
	External dimensions(W x H x D)	273 x 330 x 360mm
<b>CD</b>	Frequency Response	40-18000Hz
	Signal-to-noise ratio	70dB
	Dynamic range	70dB
<b>TUNER</b>	Tuning Range	87.5-108.0MHz or 65-74MHz, 87.5-108.0MHz
	Intermediate Frequency	10.7 MHz
	Signal-to-noise ratio	61/58dB
	Frequency Response	60-10000Hz
<b>FM</b>	Tuning Range	522-1611kHz or 530-1610kHz
	Intermediate Frequency	450kHz
	Signal-to-noise ratio	35 dB
	Frequency Response	100-2000 Hz
<b>AM</b>	Output Power	5W + 5W
	T.H.D	0.3%
	Frequency Response	42-20000Hz
	Signal-to-noise ratio	80dB
<b>TAPE</b>	Tape Speed	4.75cm/sec
	Wow Flutter	0.25% (MTT-111,JIS-WTD)
	F.F/REW Time	120sec(C-60)
	Frequency Response	250-8000Hz
	Signal-to-noise ratio	43dB
	Channel Separation	50dB(P/B)/45dB(R/P)
	Erase Ratio	55dB (MTT-5511)
<b>Speaker</b>	<b>MODEL</b>	<b>FE-286E</b>
	Type	1 Way 1 Speaker
	Impedance	4Ω
	Frequency Response	80-20000Hz
	Sound Pressure Level	86dB/W(1m)
	Rated Input Power	5W
	Max.Input Power	10W
	Net Dimension(W x H x D)	180 x 326 x 165.8mm
	Net Weight	1.67kg

NOTE : Specification are subject to change without notice in the course of product improvement.

# **MEMO**

---

# SECTION 2. ELECTRICAL ADJUSTMENTS

This set has been aligned at the factory and normally will not require further adjustment. As a result, it is not recommended that any attempt is made to modificate any circuit. If any parts are replaced or if anyone tampers with the adjustment, realignment may be necessary.

## IMPORTANT

1. Check Power-source voltage.
2. Set the function switch to band being aligned.
3. Turn volume control to minimum unless otherwise noted.
4. Connect low side of signal source and output indicator to chassis ground unless otherwise specified.
5. Keep the signal input as low as possible to avoid AGC and AC action.

## TAPE DECK ADJUSTMENT

### 1. AZIMUTH ADJUSTMENT

Deck Mode	Test Tape	Test Point	Adjustment	Adjust for
A Deck Playback	MTT-114	Speaker Out	DECK Screw Azimuth Screw	Maximum
B Deck Playback	MTT-114	Speaker Out	Azimuth Screw	Maximum

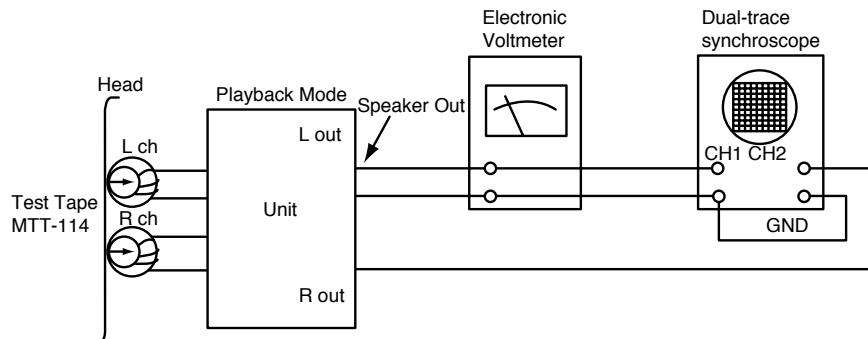


Figure 1. Azimuth Adjustment Connection Diagram

### 2. MOTOR SPEED ADJUSTMENT

Deck Mode	Test Tape	Test Point	Adjustment	Adjust for	Remark
Normal Speed	MTT-111	Speaker Out	VR201	3kHz ± 1%	A Deck
Hi-Speed	MTT-111	Speaker Out		more than 5.4kHz	Hi-Speed Dubbing Mode

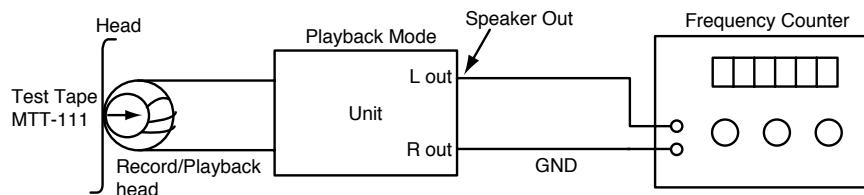


Figure 2. Motor Speed Adjustment Connection Diagram

### 3. RECORD BIAS ADJUSTMENT

Deck Mode	Test Tape	Test Point	Adjustment	Adjust for
Rec/Pause	MTT-5511	ERASE HEAD WIRE(PN202)	L203	60kHz±5kHz (Auto stop) 85kHz±5kHz(Auto Reverse)

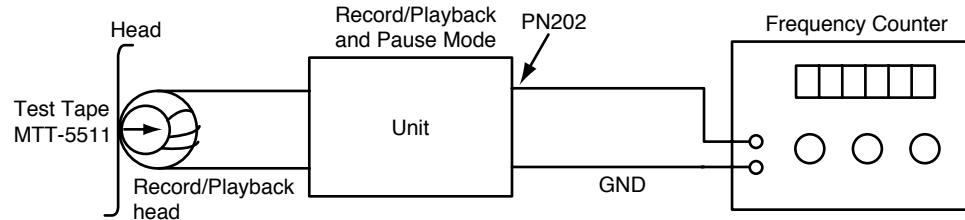


Figure 3. Record Bias Adjustment Connection Diagram

### 4. TUNER ADJUSTMENT

Item	Test Point	Adjustment	Adjust for
DC Voltage	Checker IC Pin 26, 28	L106	0V±50mV



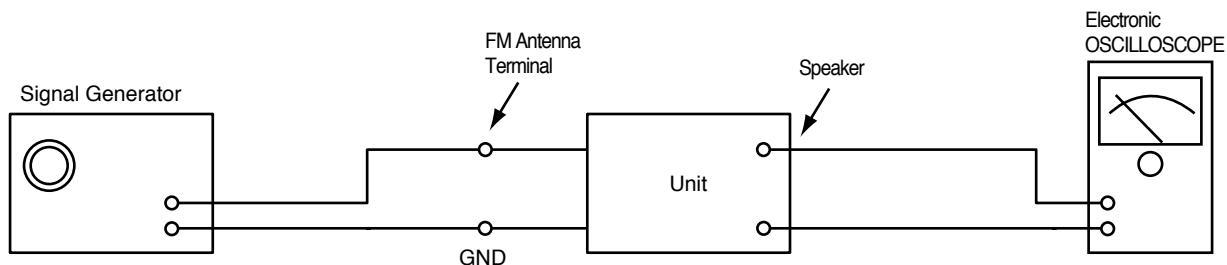



Figure 4. Tuner(S curve) Adjustment Connection Diagram


# TROUBLESHOOTING

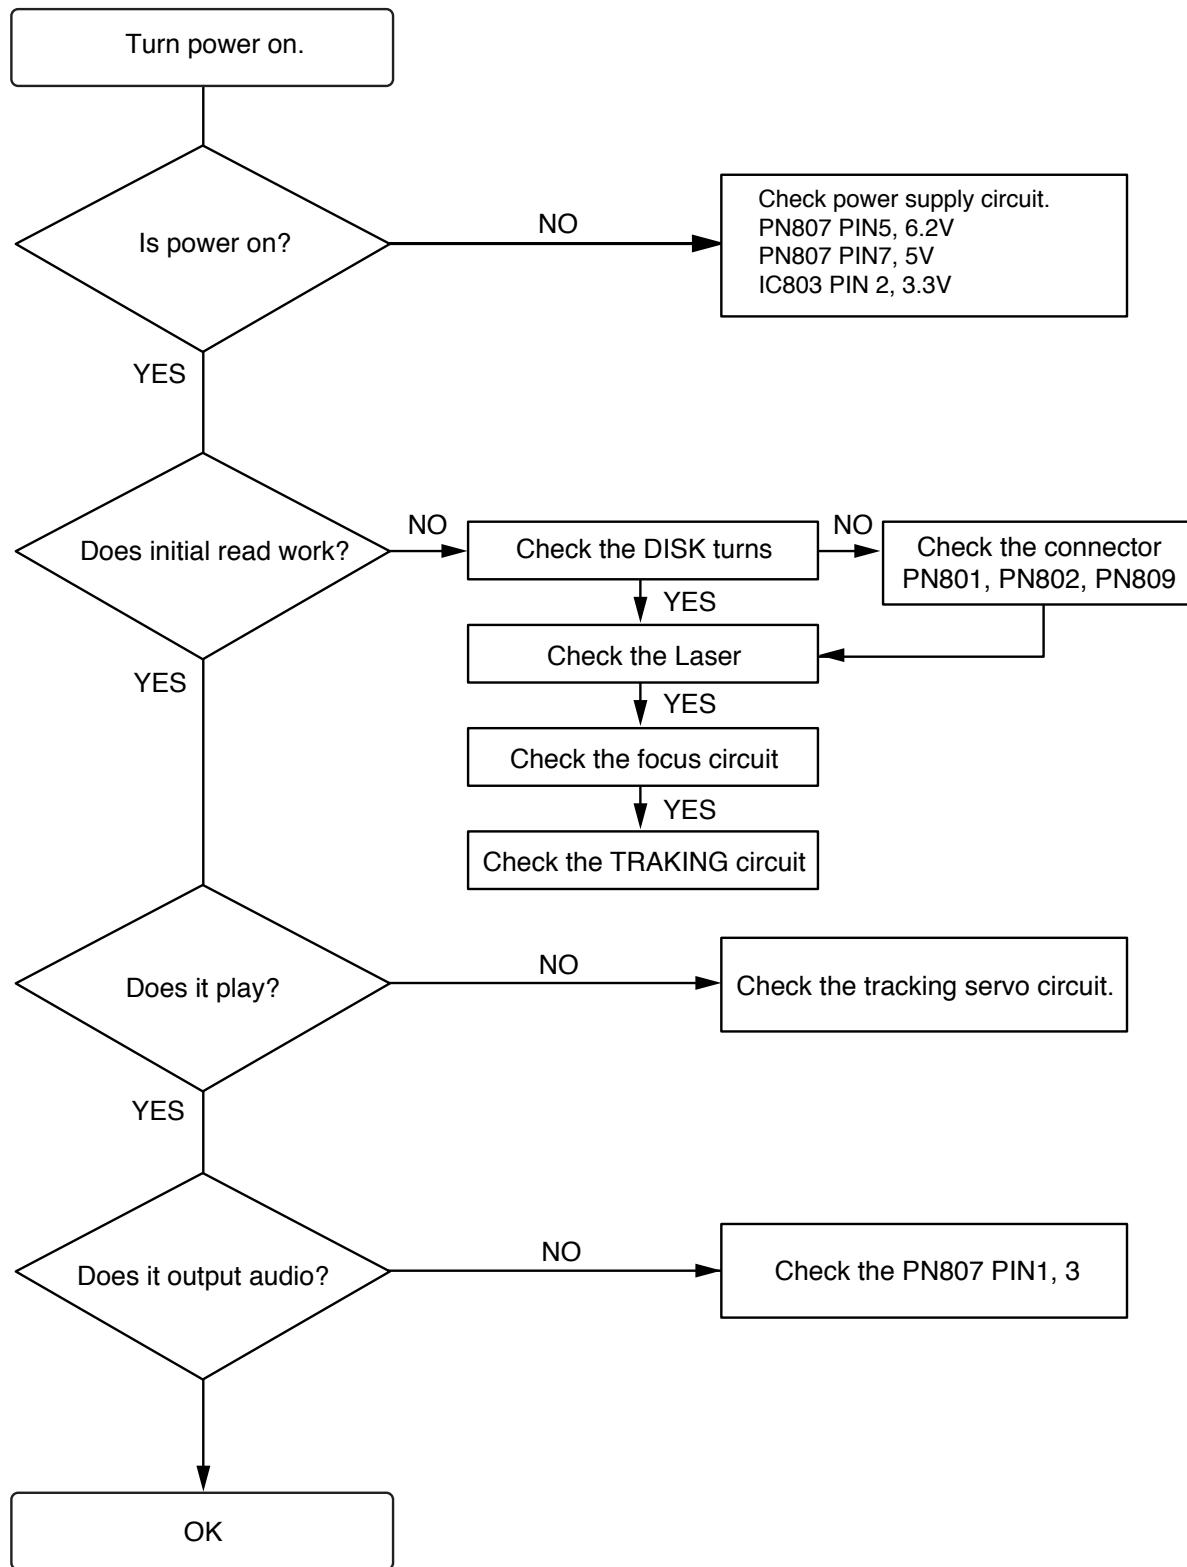

## Fails to initial read

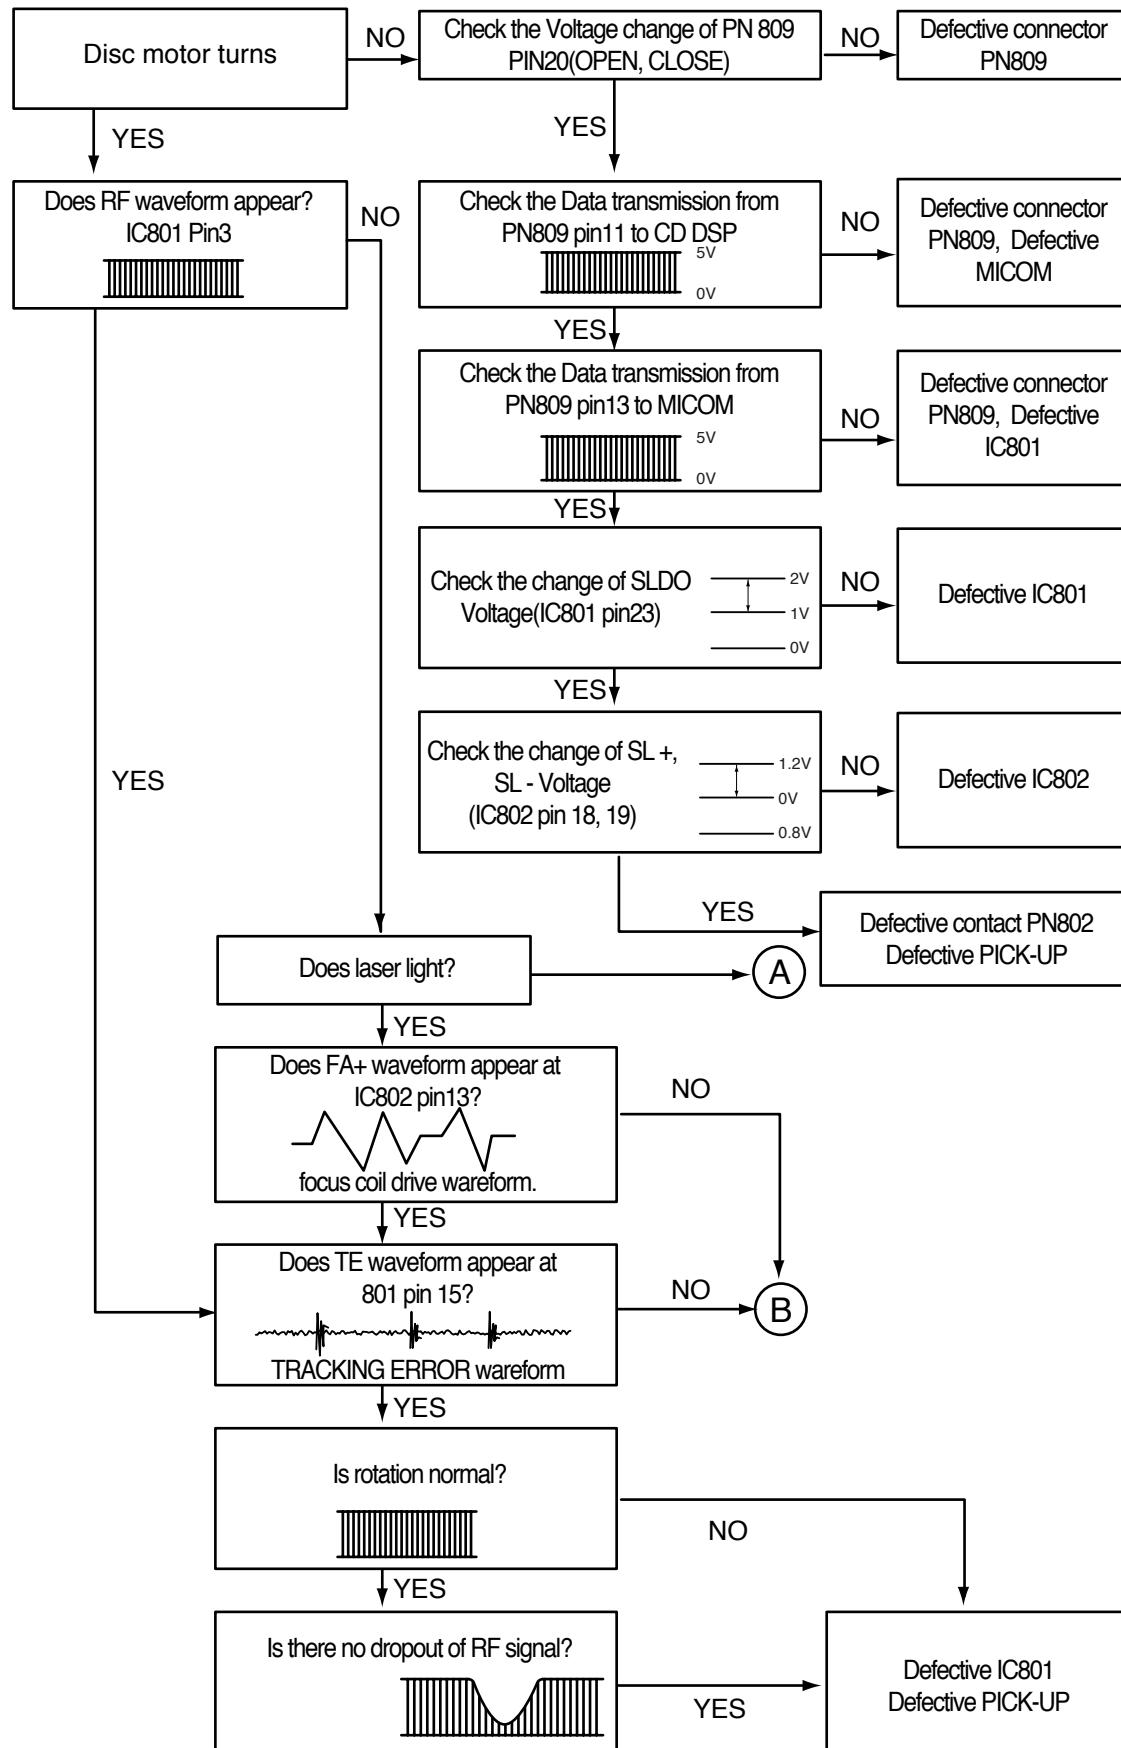


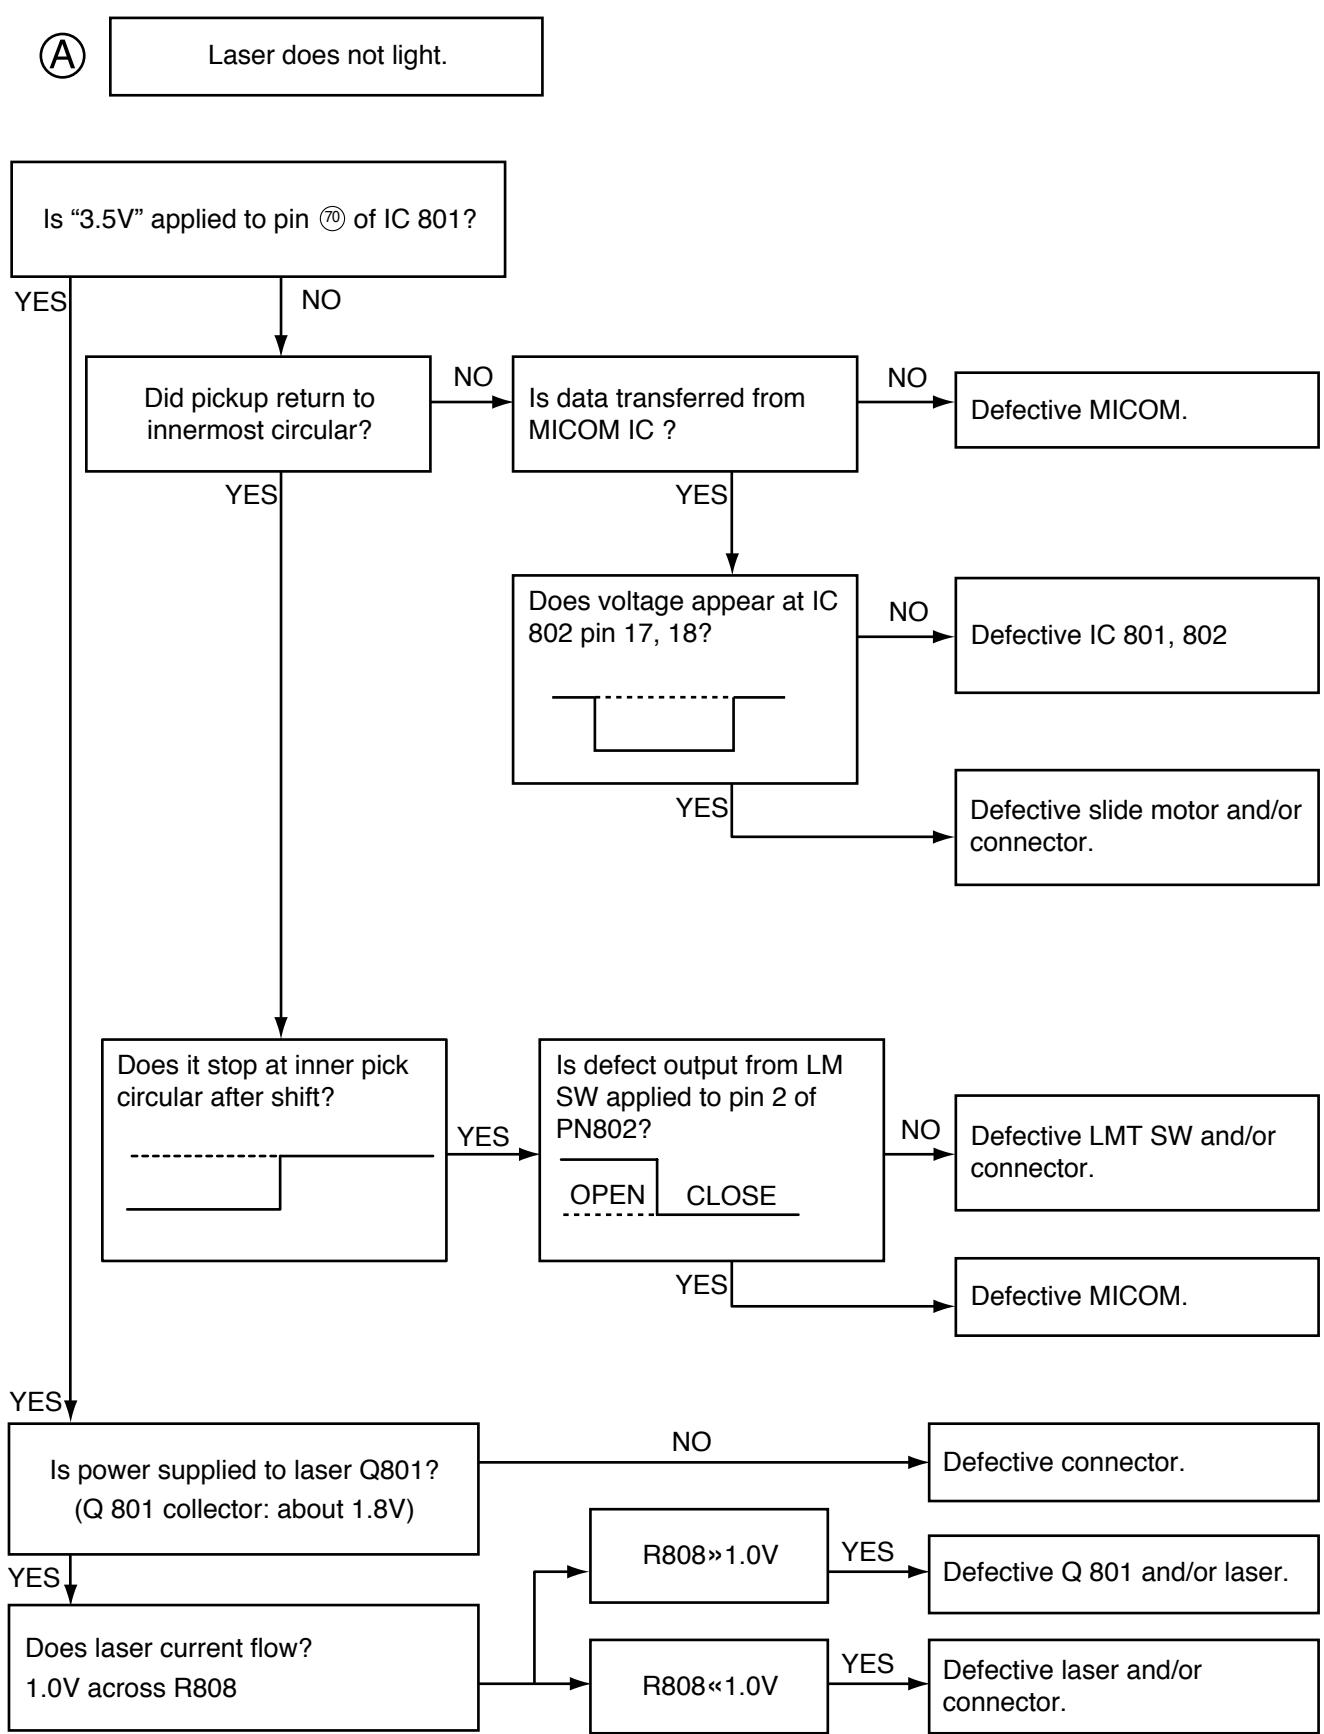

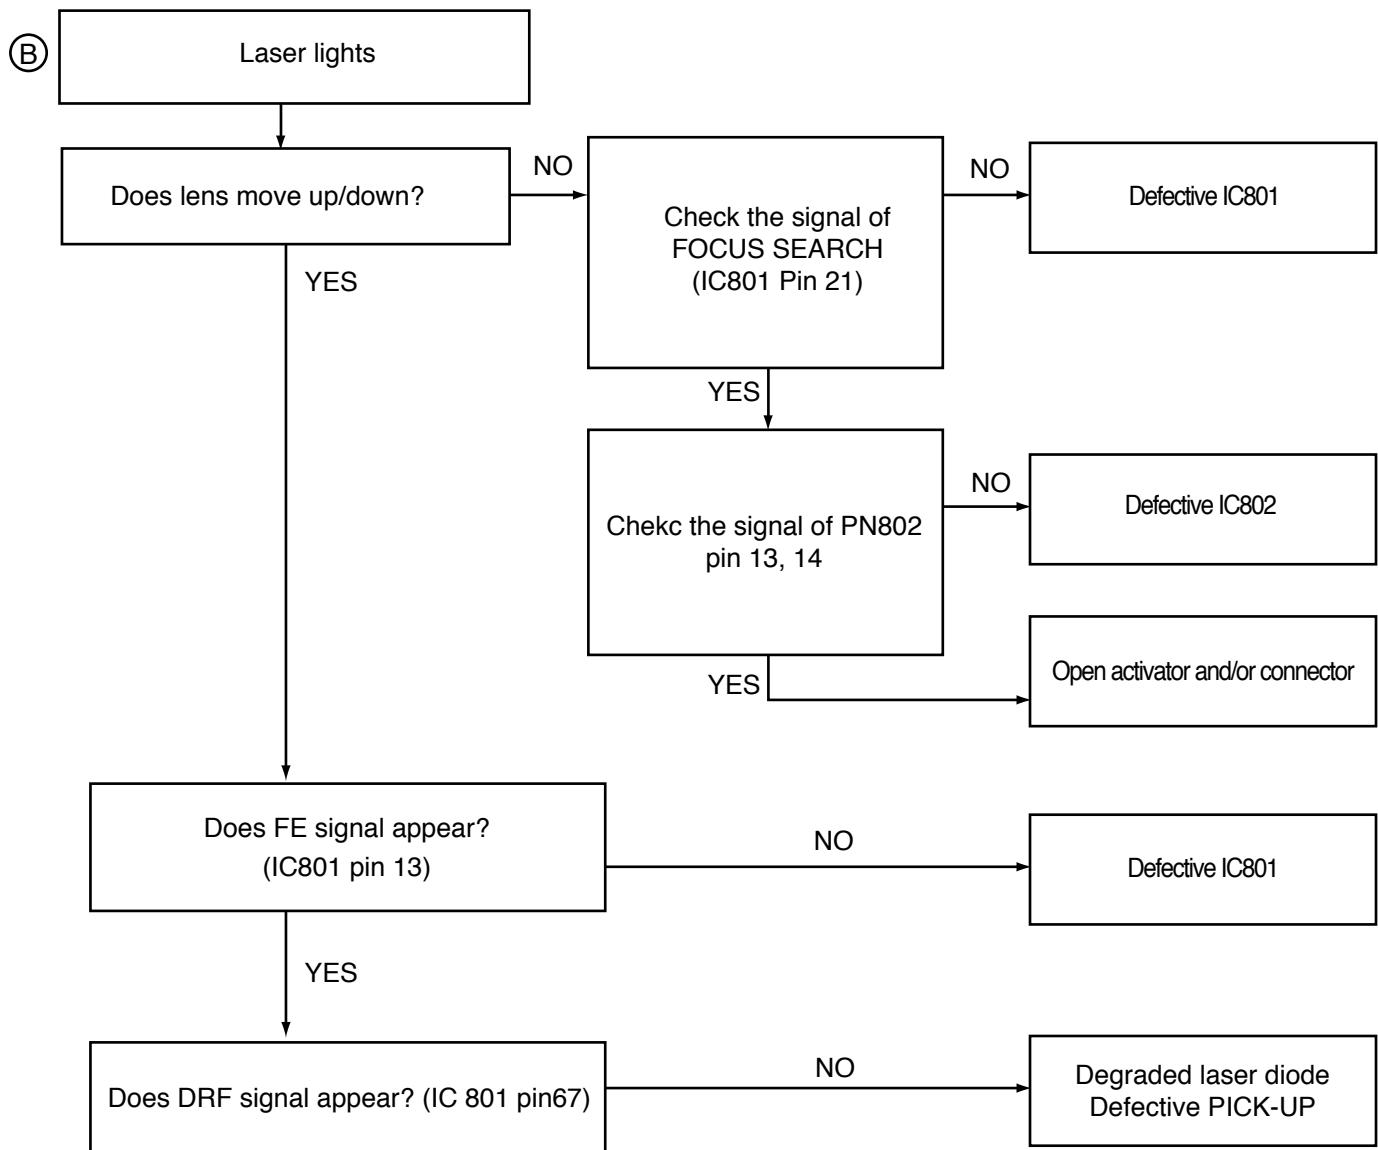


# WAVEFORMS OF MAJOR CHECK POINT

1. HF signal (RF signal) waveform  
(IC801 pin 3) during normal play

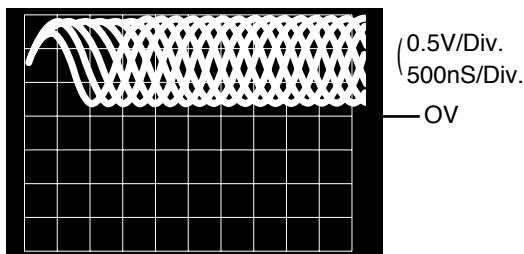


3. Focus coil drive waveform(IC802 pin13)

- When focus search failed or there is no disc on the tray

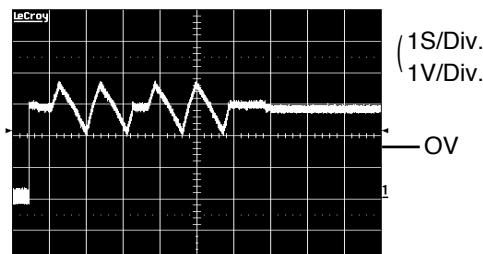

4. Tracking coil drive waveform and TE during track traverse


- (1) When time division is 20mS/Div. 1V/Div.

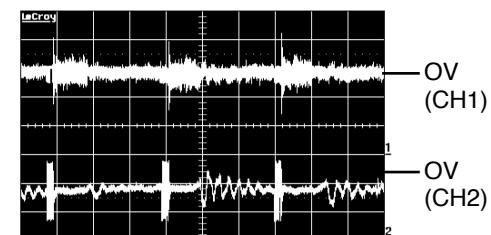

CH1 : TRACKING COIL DRIVE (IC802 pin27)  
CH2 : TRACKING ERROR (TE: IC801 pin15)


- (3) When time division is 0.5nS/div.

(During backward Track Traverse)

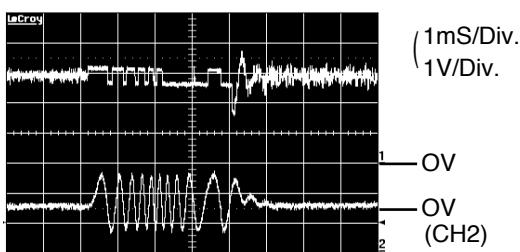


CH1 : TRACKING COIL DRIVE  
SIGNAL 2V/Div. (IC802 pin27)  
CH2 : TRACKING ERROR(TE: IC801 pin15)  
1V/Div.

2. EFM signal (IC801 pin 3) waveform  
during Normal Play

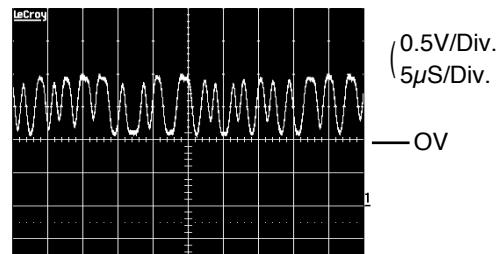


- Focus coil drive waveform(FDO: IC801 pin21) and DRF(IC801 pin67) when focus search is accomplished

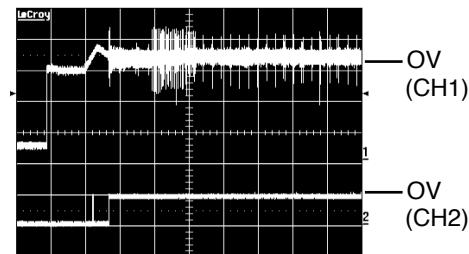

CH1 : FOCUS COIL DRIVE  
SIGNAL 2V/Div.  
CH2 : DRF


- (2) When time division 1mS/Div, 1V/Div  
(During forward track traverse)

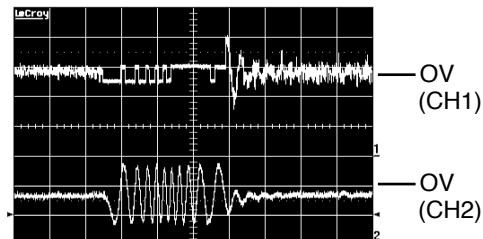


CH2 : TRACKING COIL DRIVE (IC802 pin27)  
SIGNAL 2V/Div.  
CH2 : TRACKING ERROR (TE: IC801 pin15)  
1V/Div.

5. Feed motor drive waveform(IC 802 pin18)


During normal play

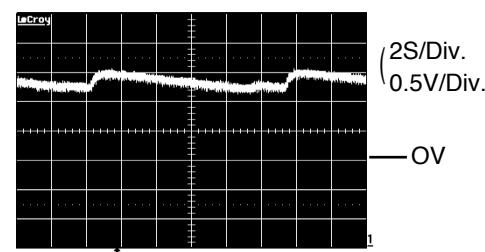


## P-SENS PART

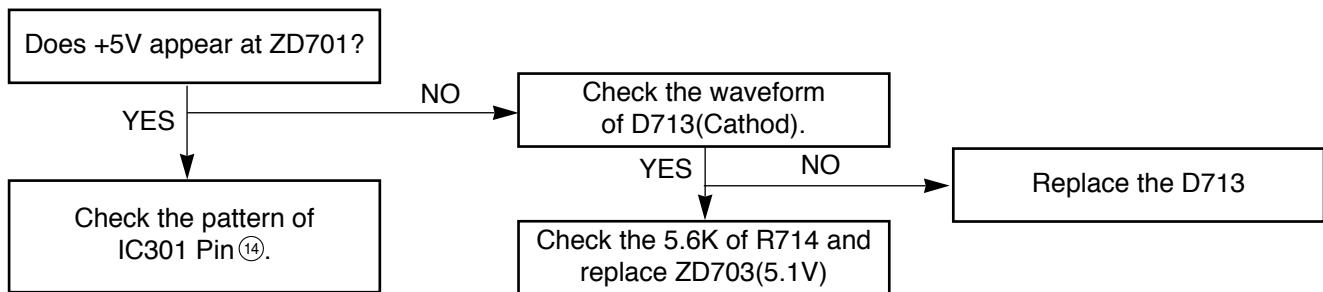


## VKK PART

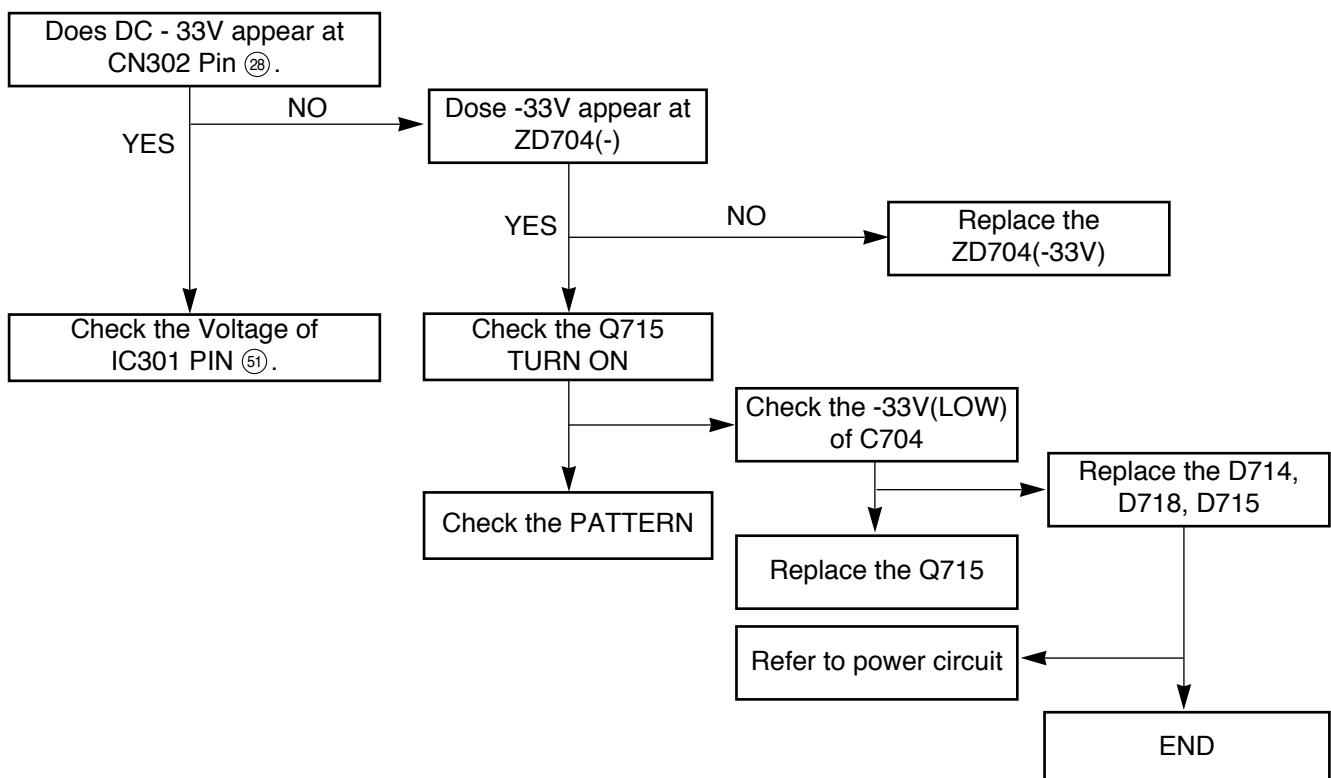


## Power Circuit

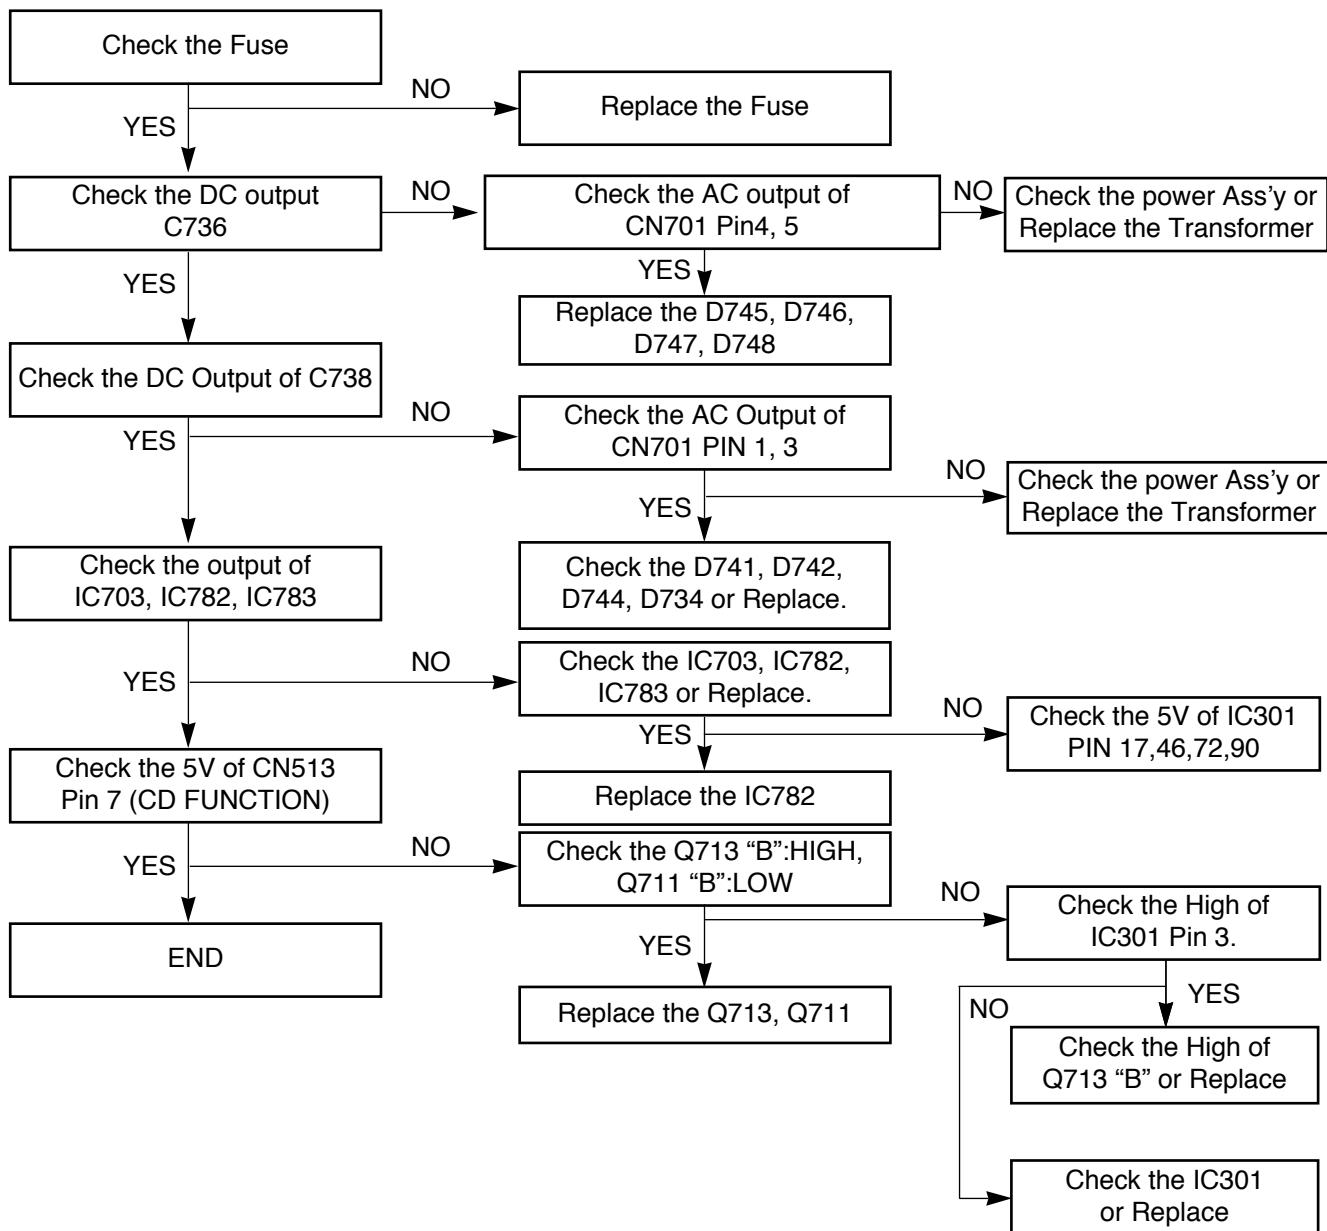


## Muting circuit (MUTE)

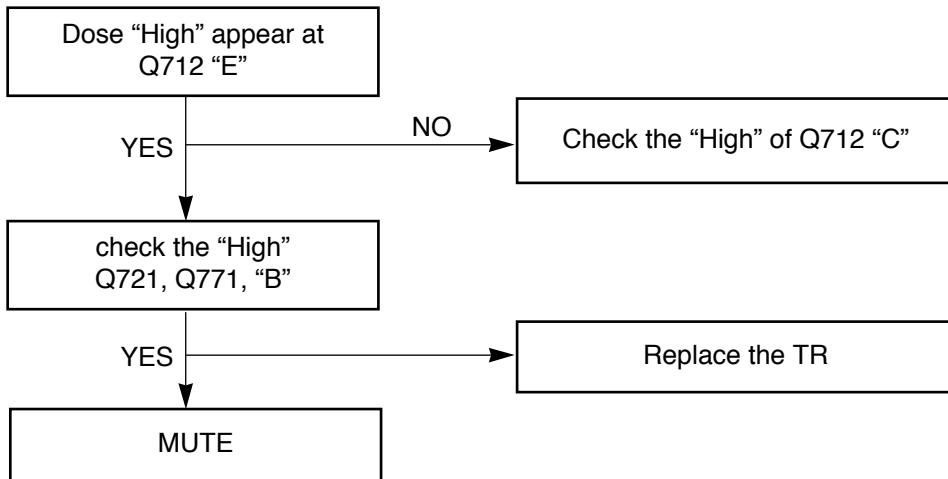


## Audio abnormal

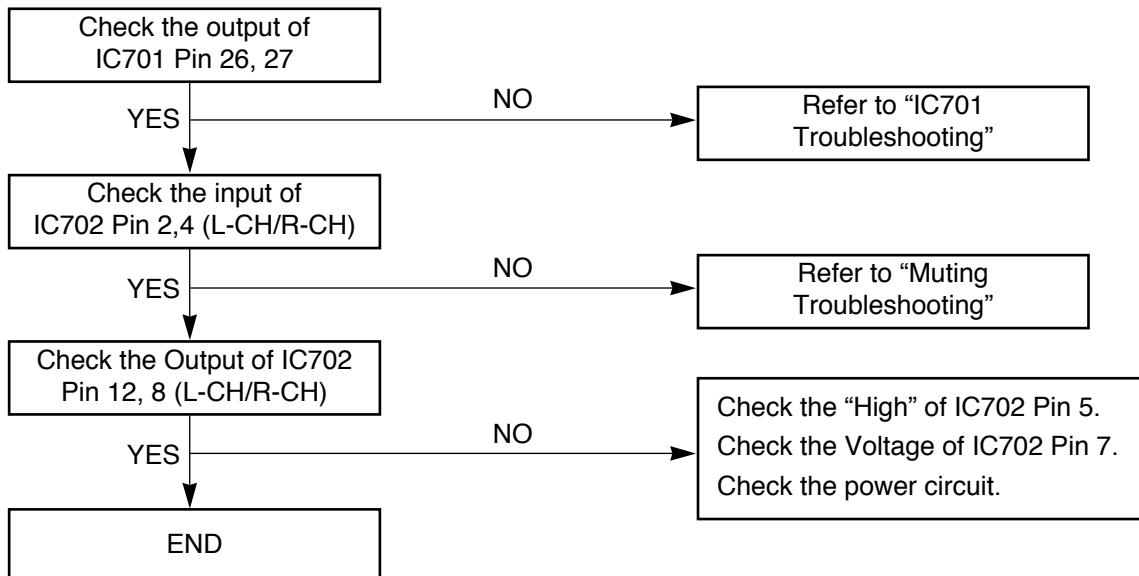


## FUNCTION MODE Audio abnormal

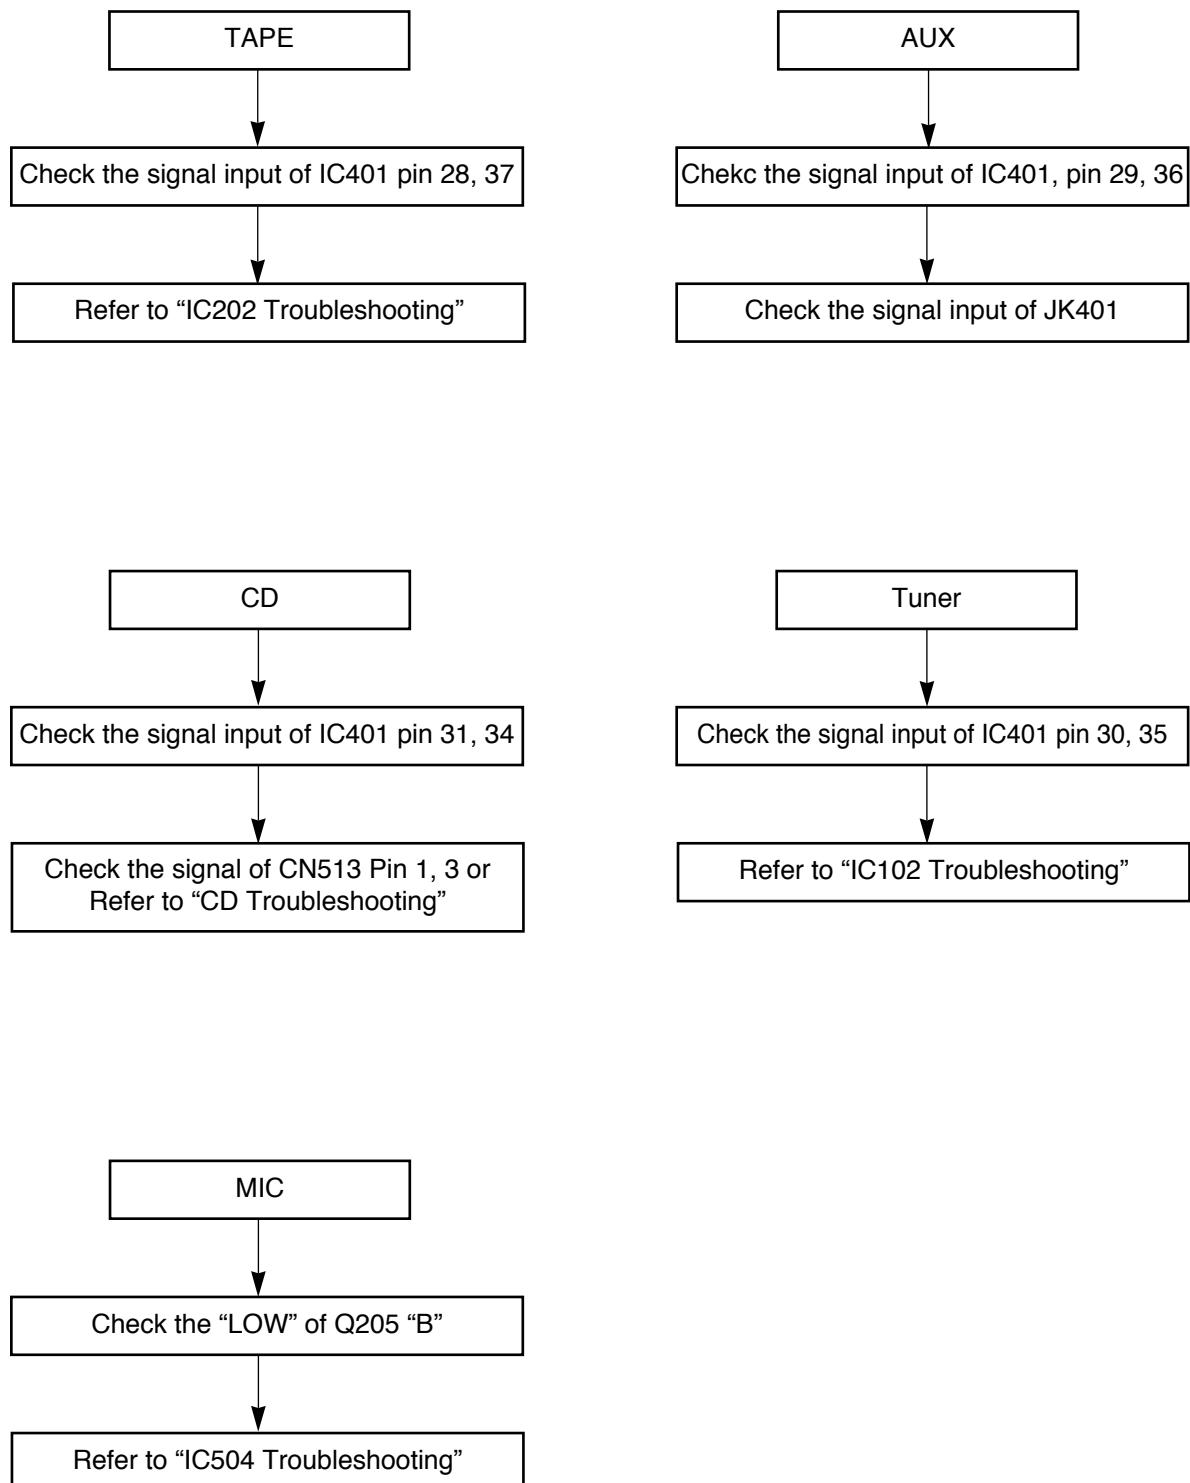


## IC301 Troubleshooting

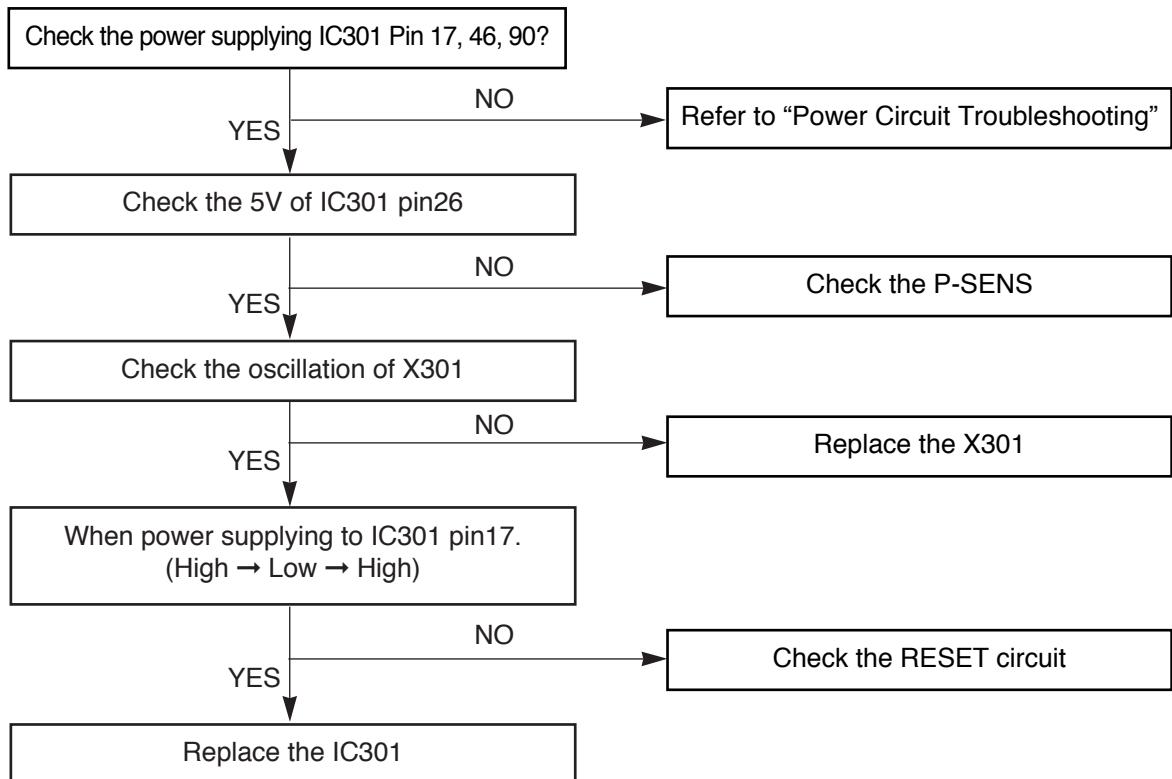


## IC203 Troubleshooting

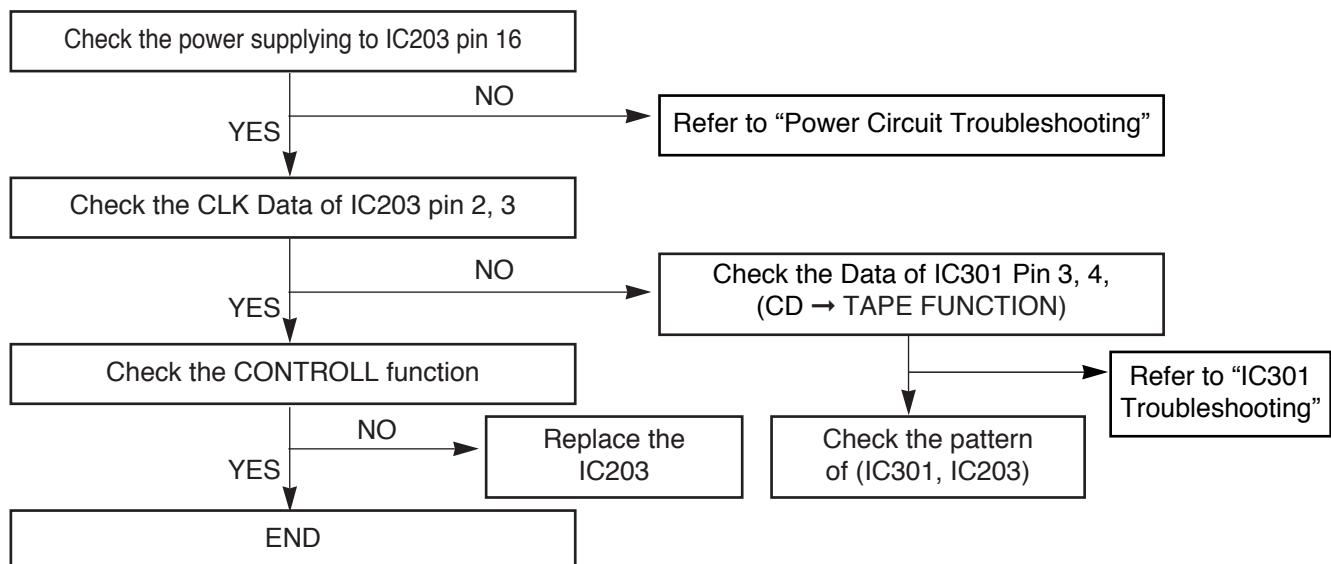


## IC401 Troubleshooting

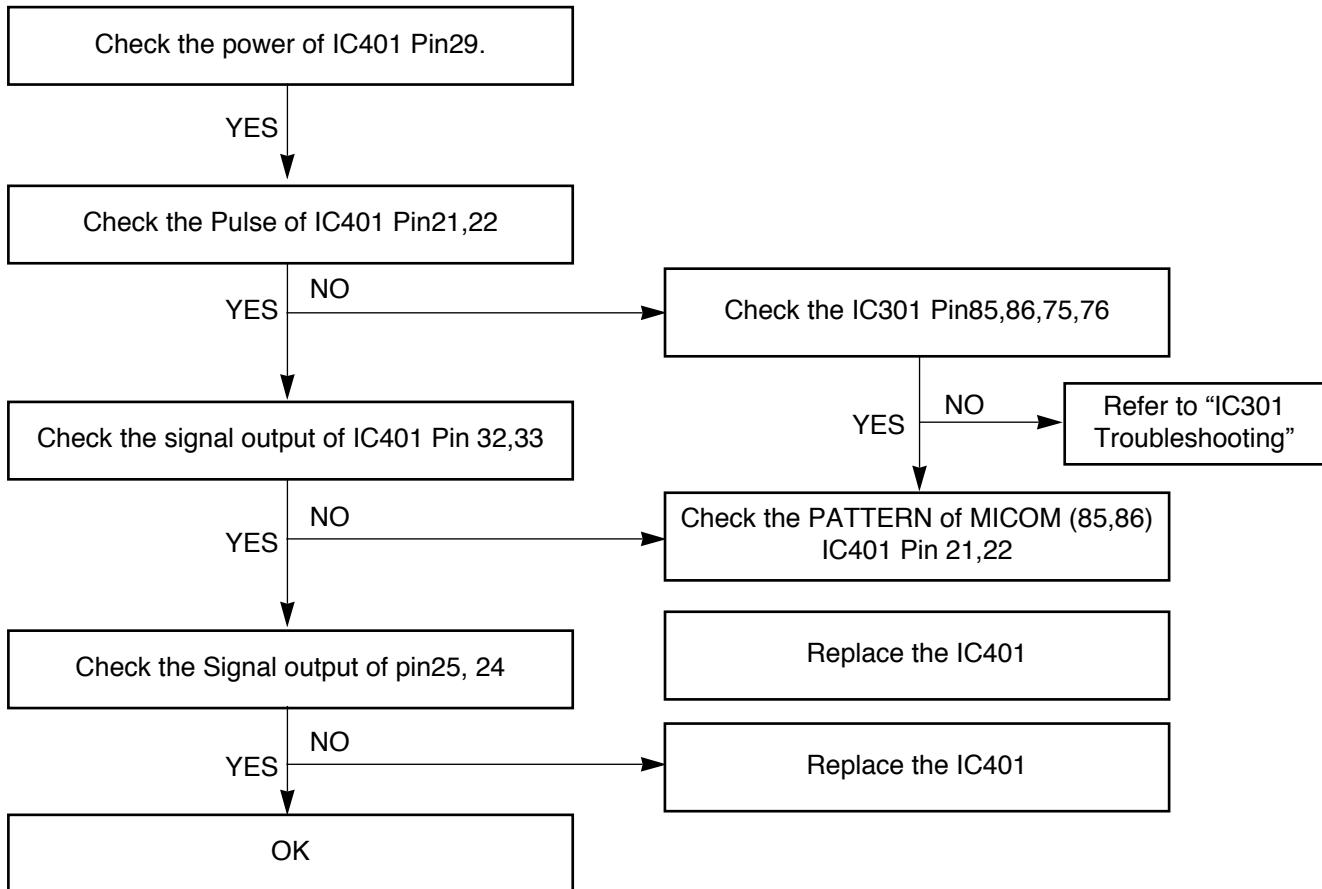


## FM (TUN101)

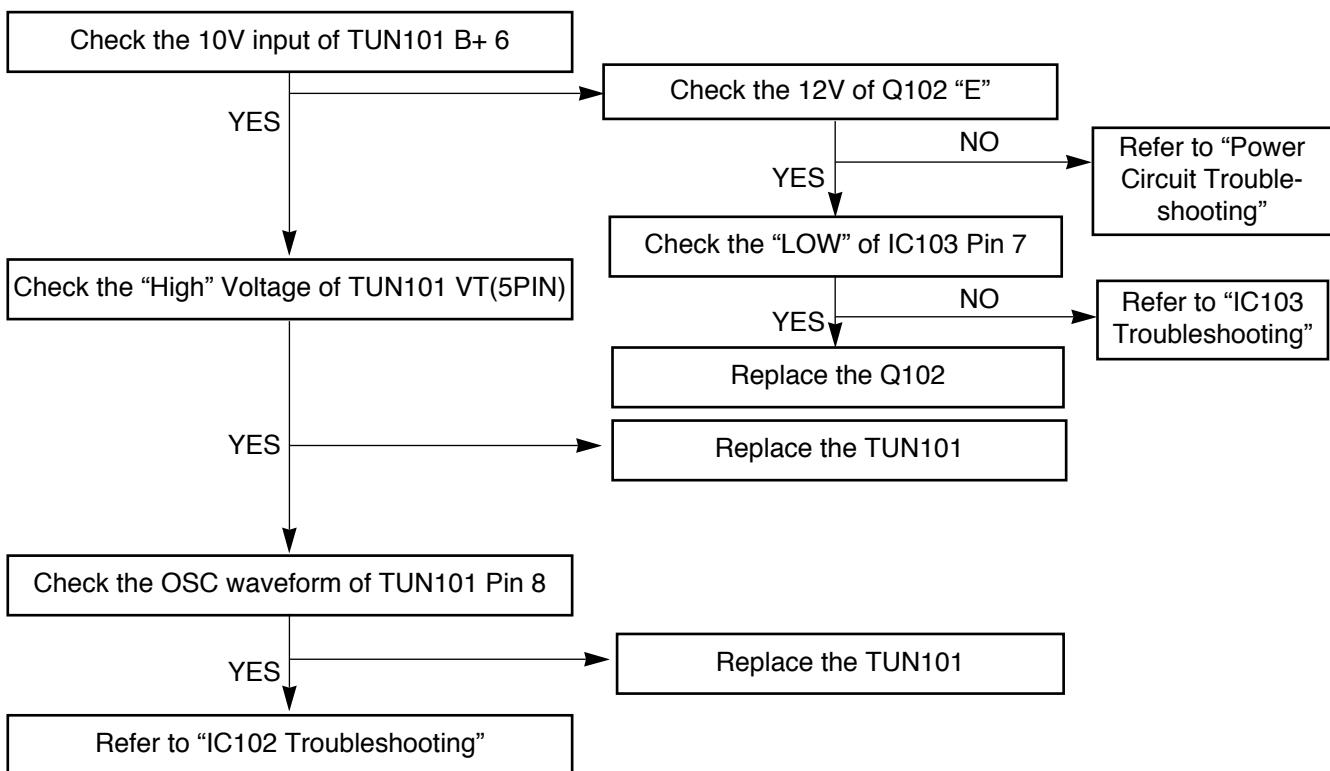


## IC102 Troubleshooting

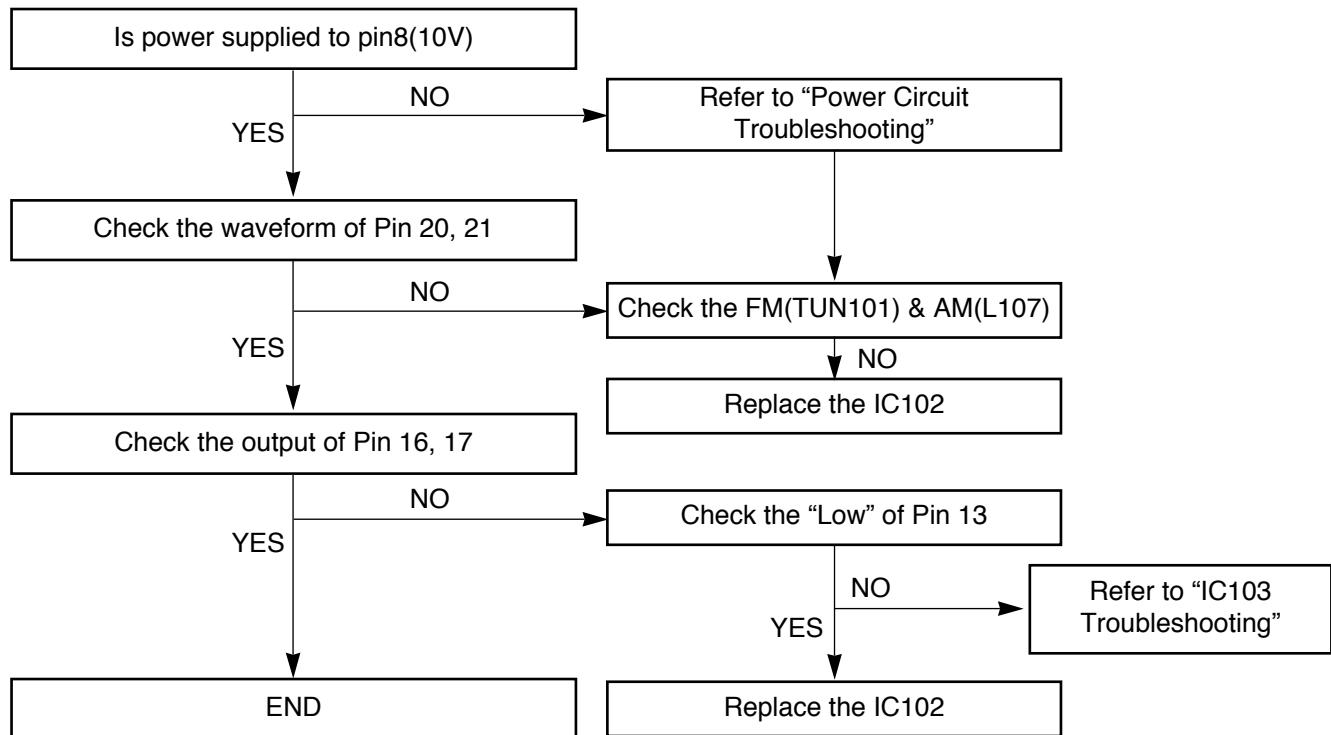


## IC103 Troubleshooting

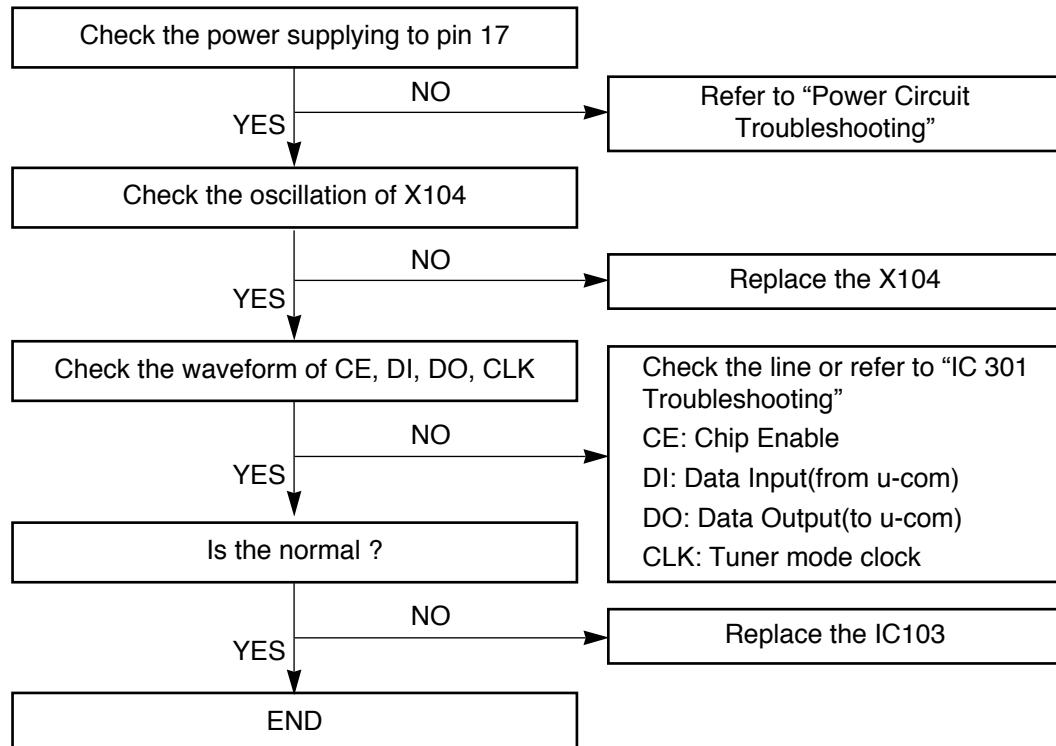


## AM·COIL Troubleshooting

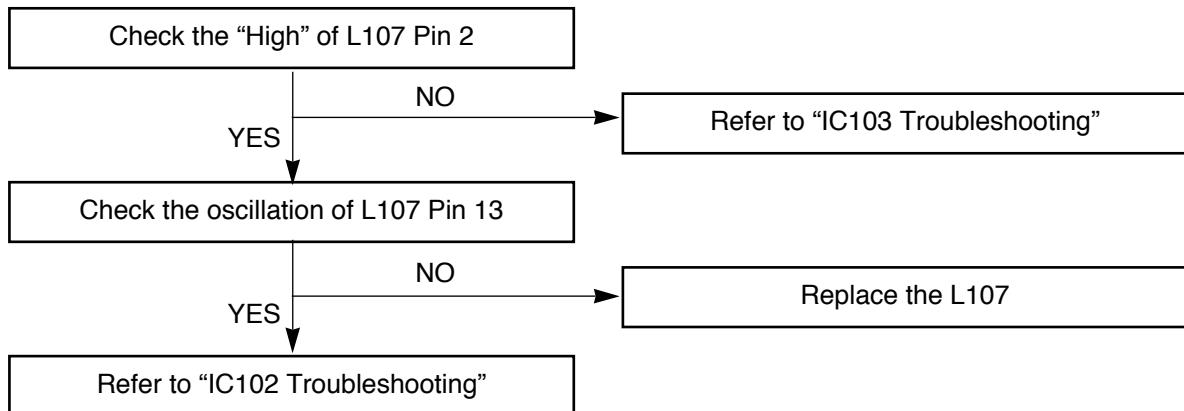


## Play

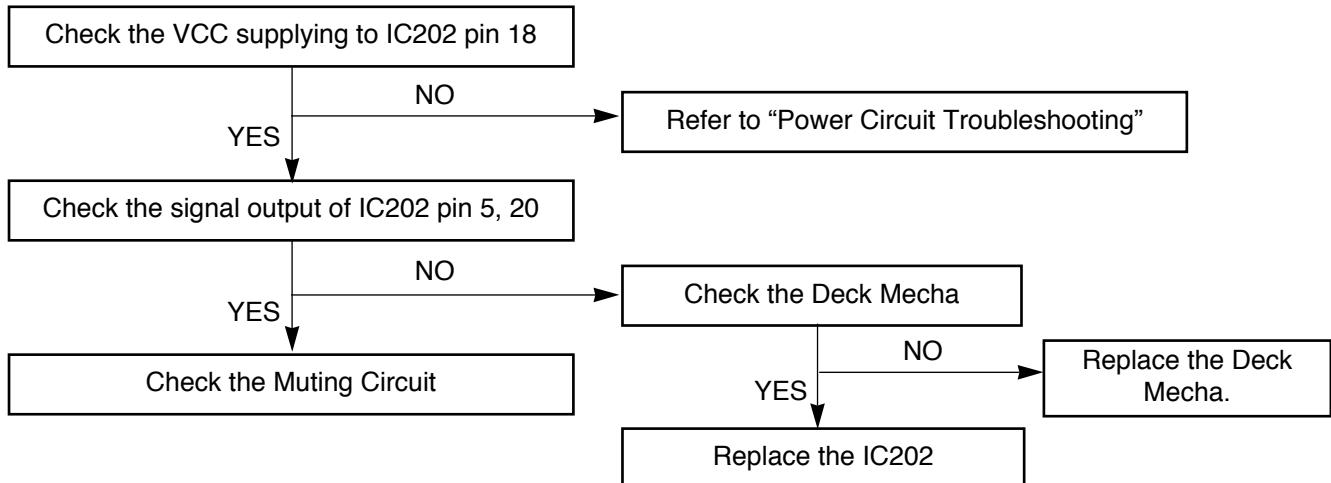


## Dubbing("NORMAL or REC "//"HIGH")

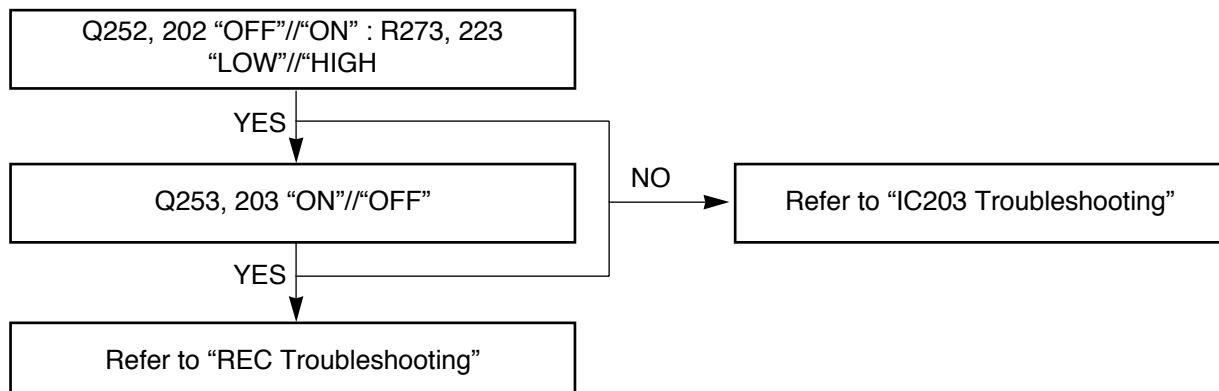

## REC (Q252, Q202 ON / R273, R223 High)

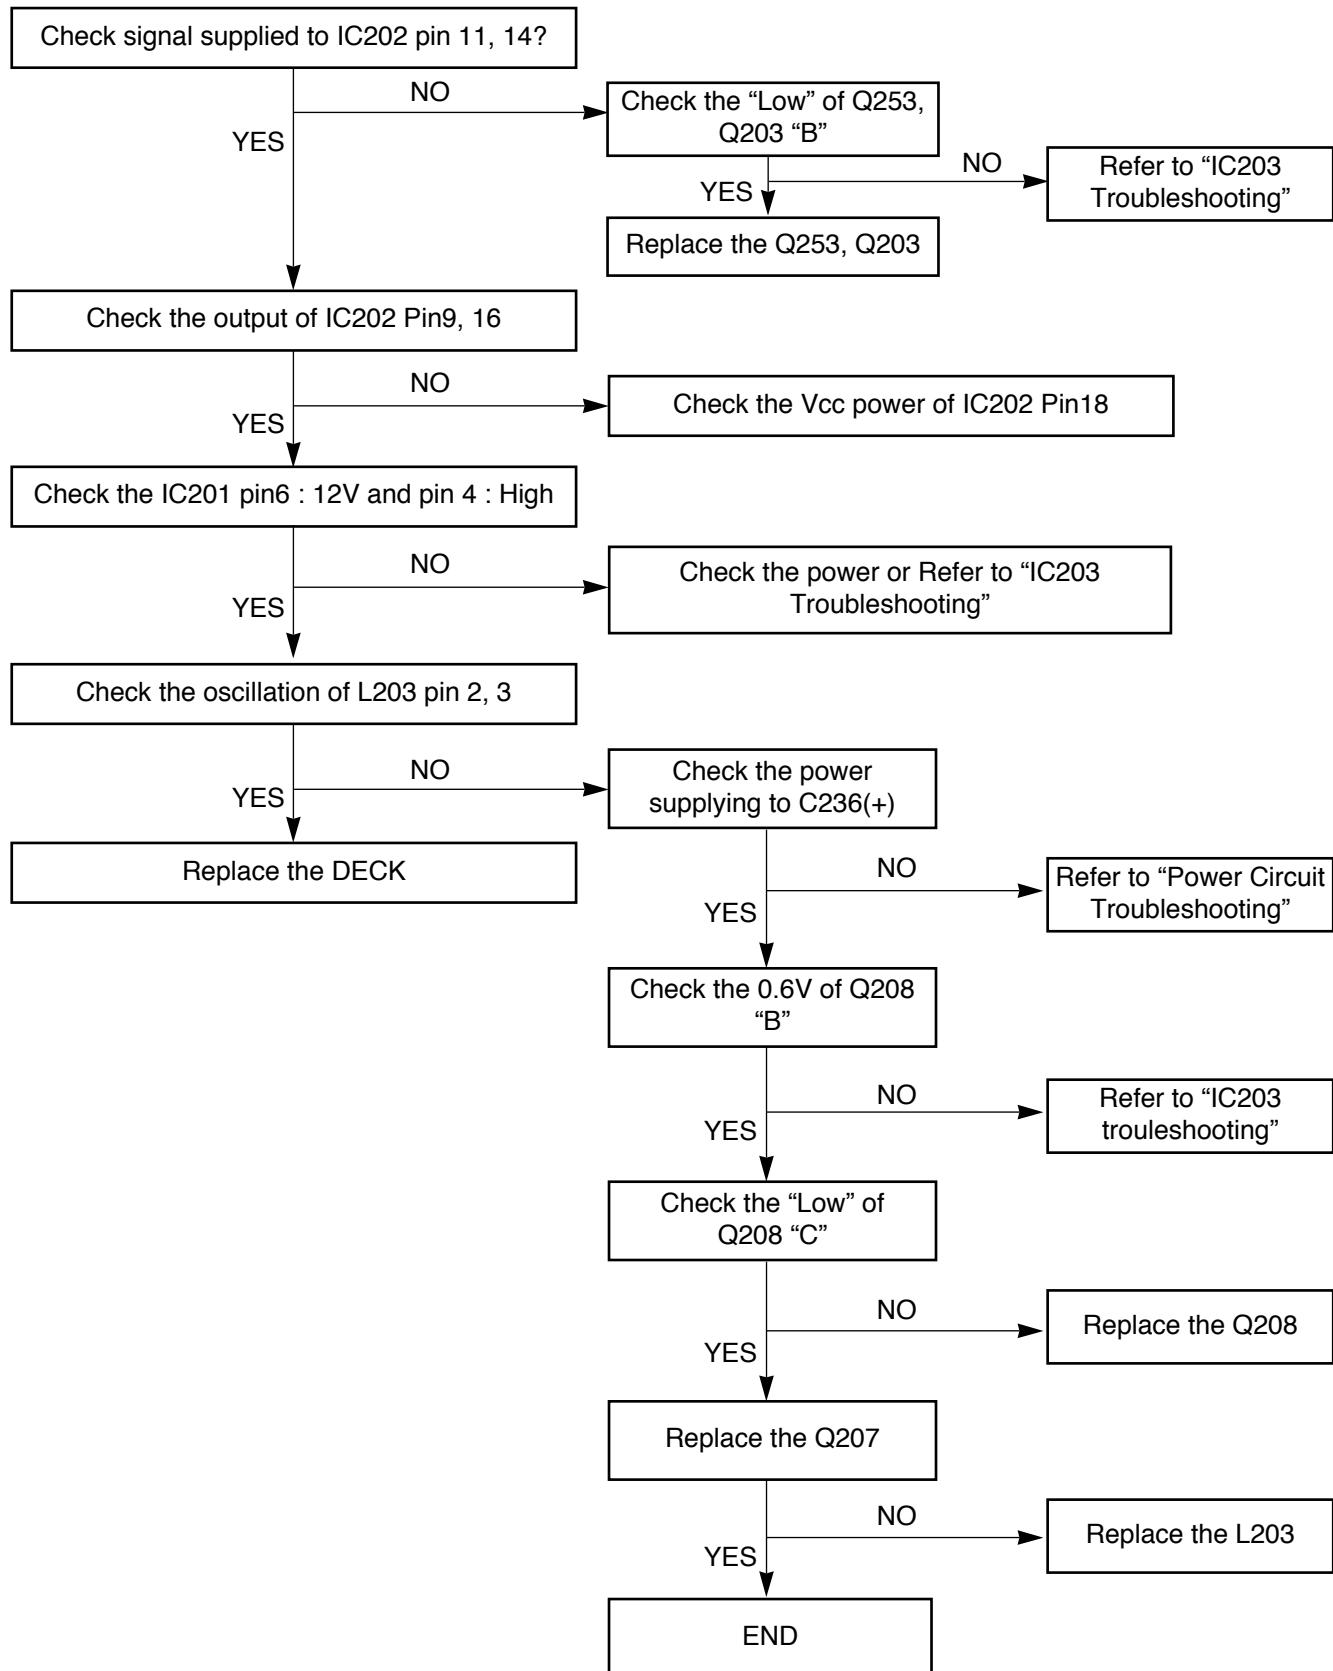


# BLOCK DIAGRAM

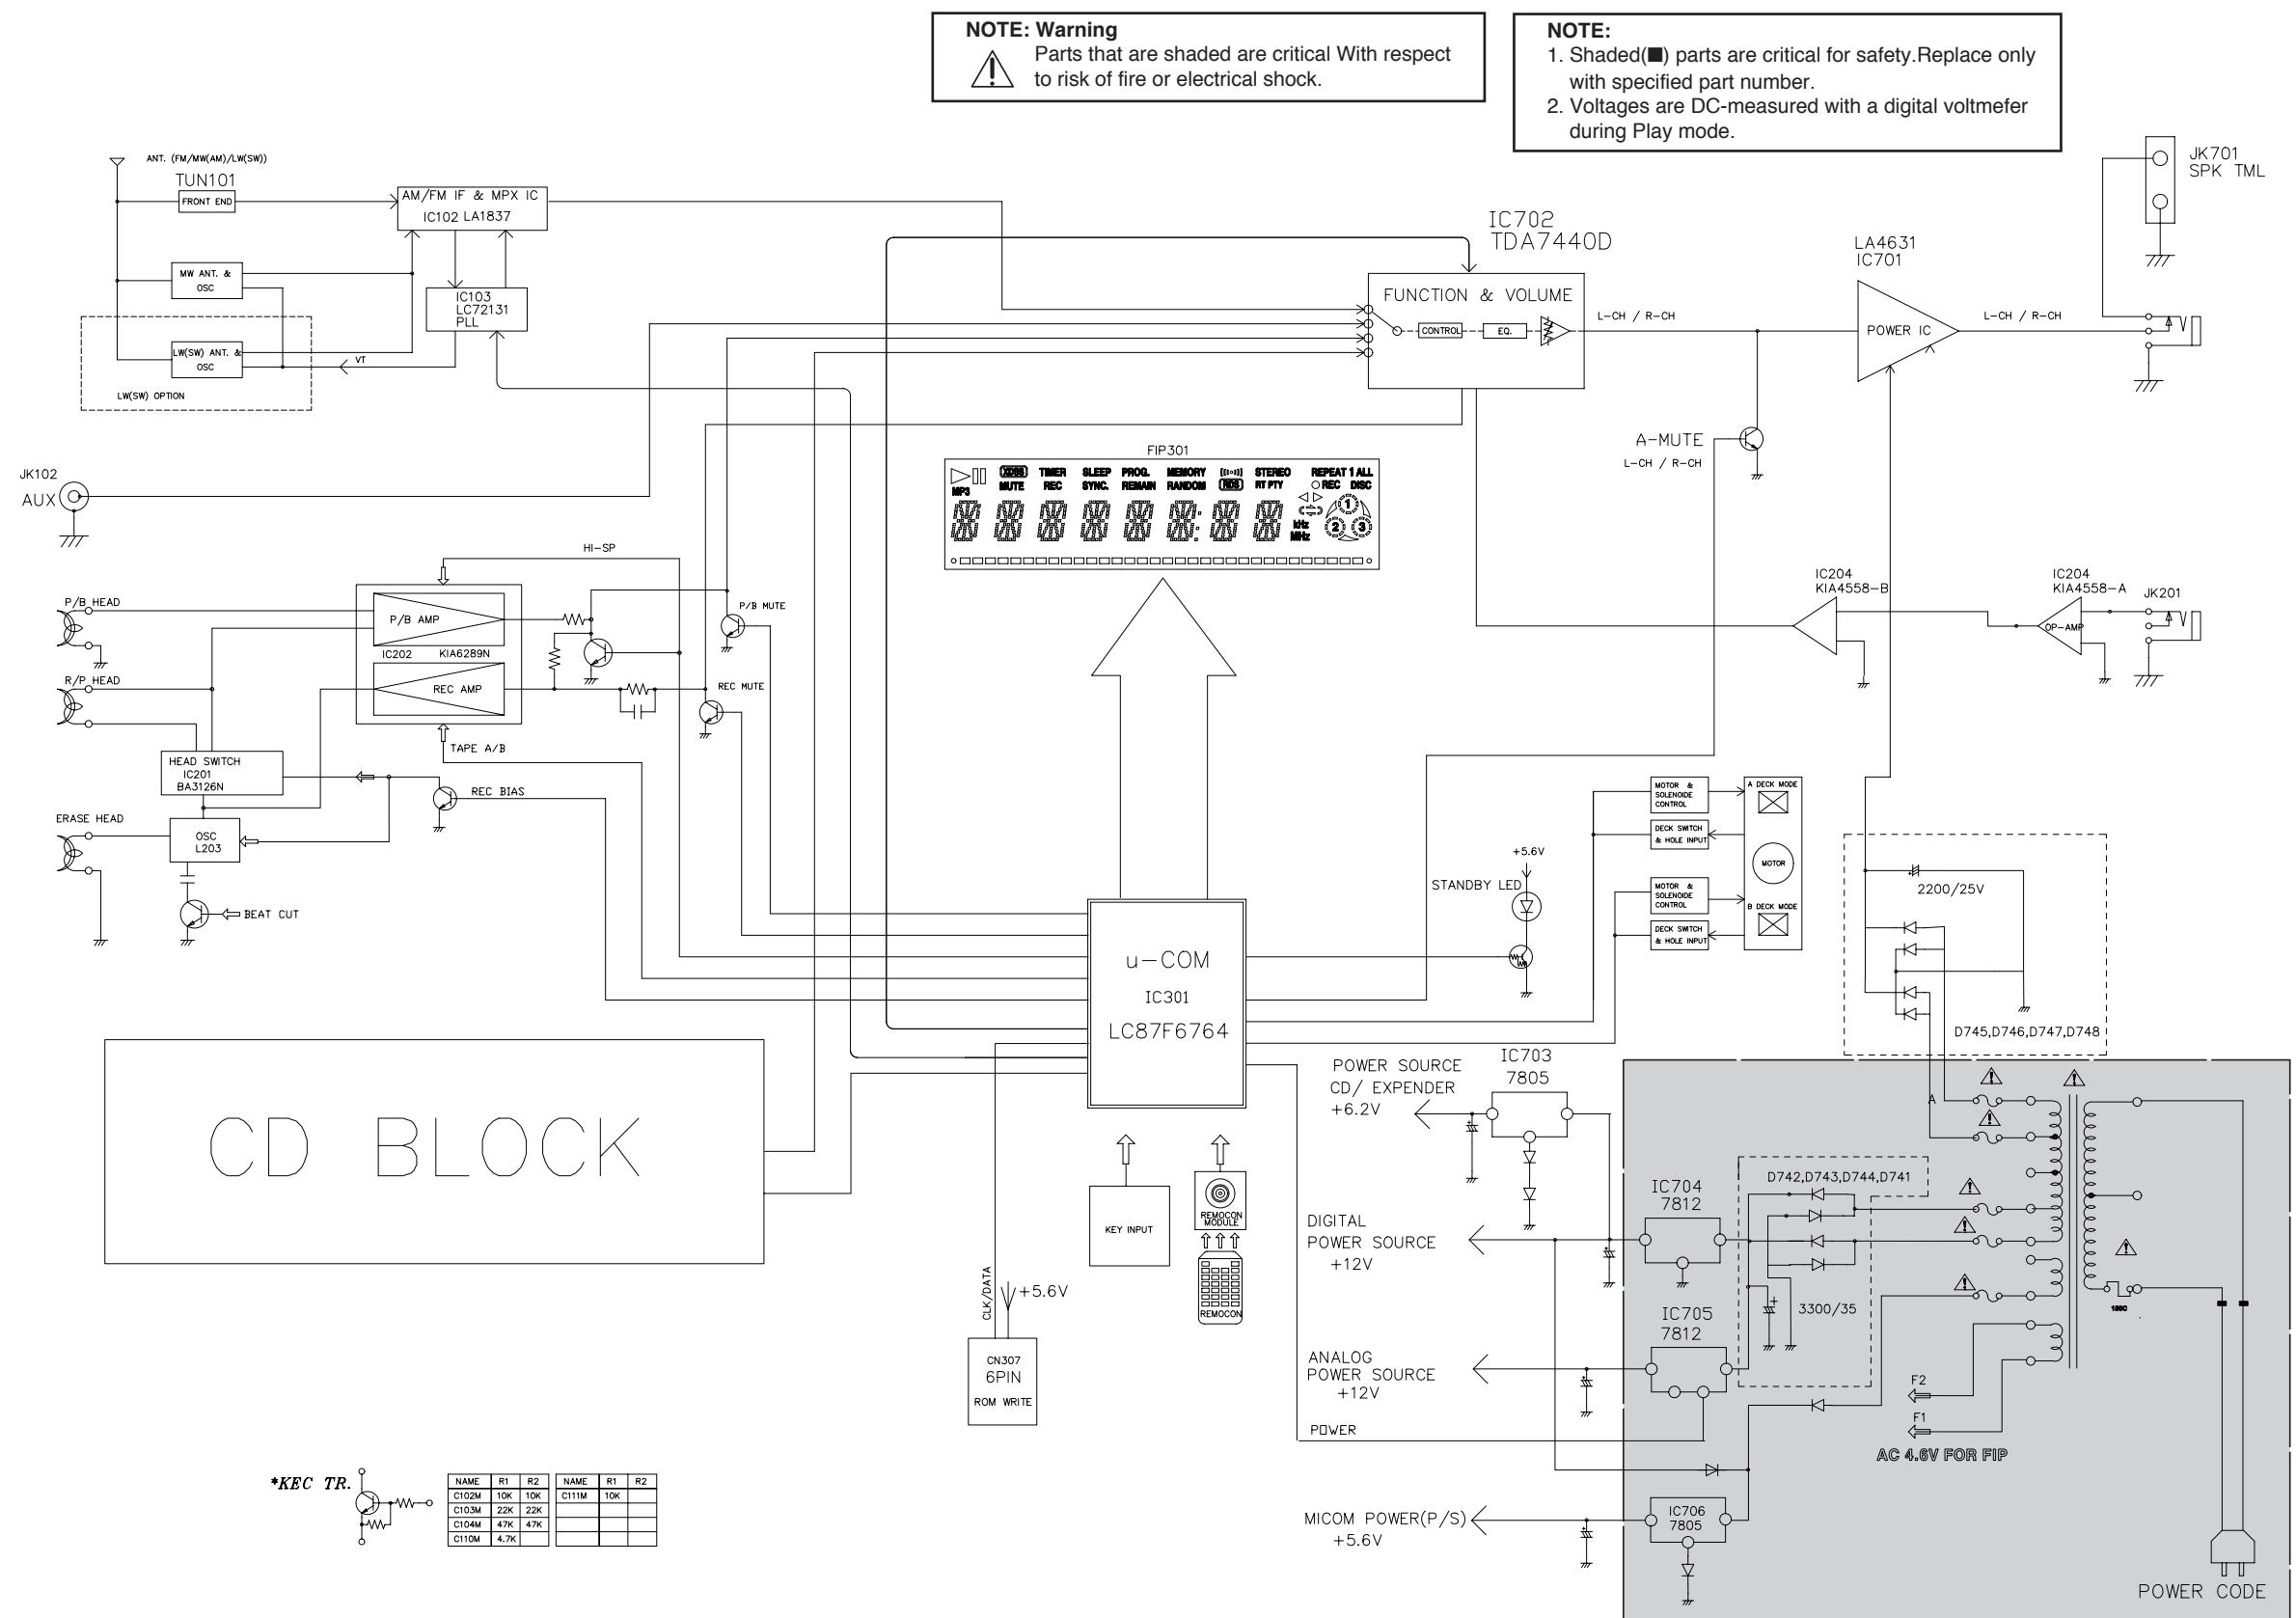


# SCHEMATIC DIAGRAMS

## • MAIN SCHEMATIC DIAGRAM

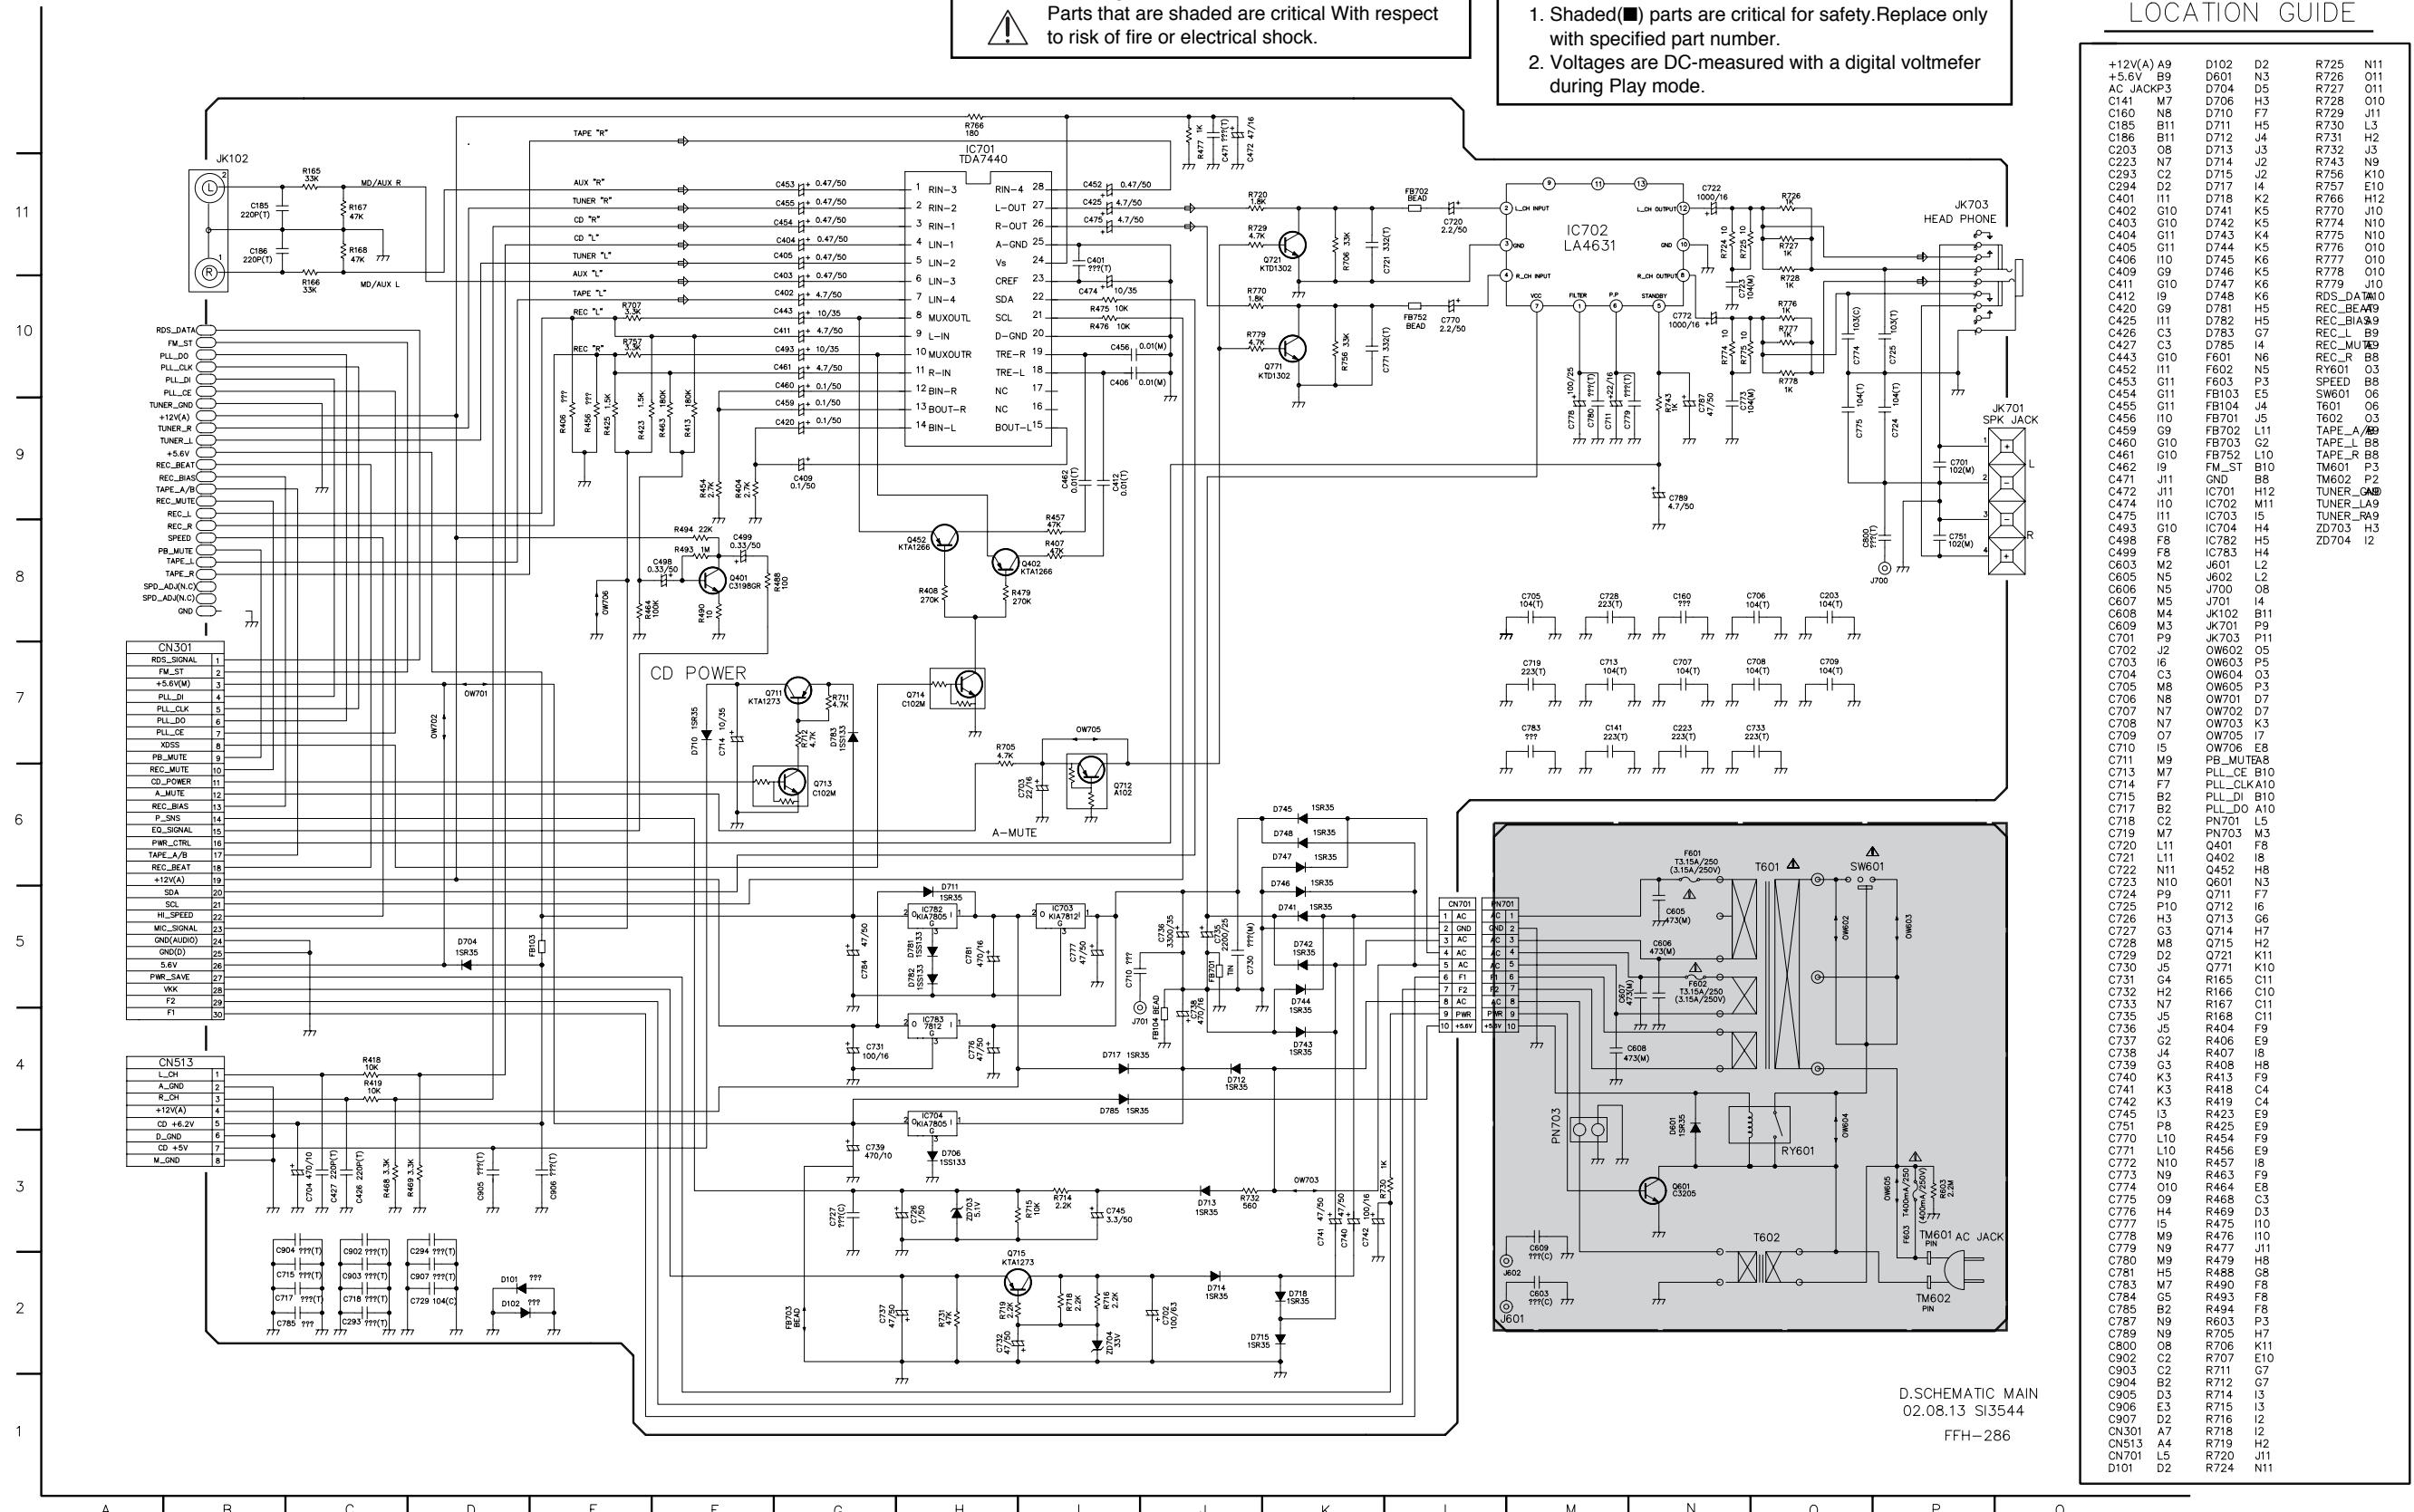




## • TUNER/DECK SCHEMATIC DIAGRAM

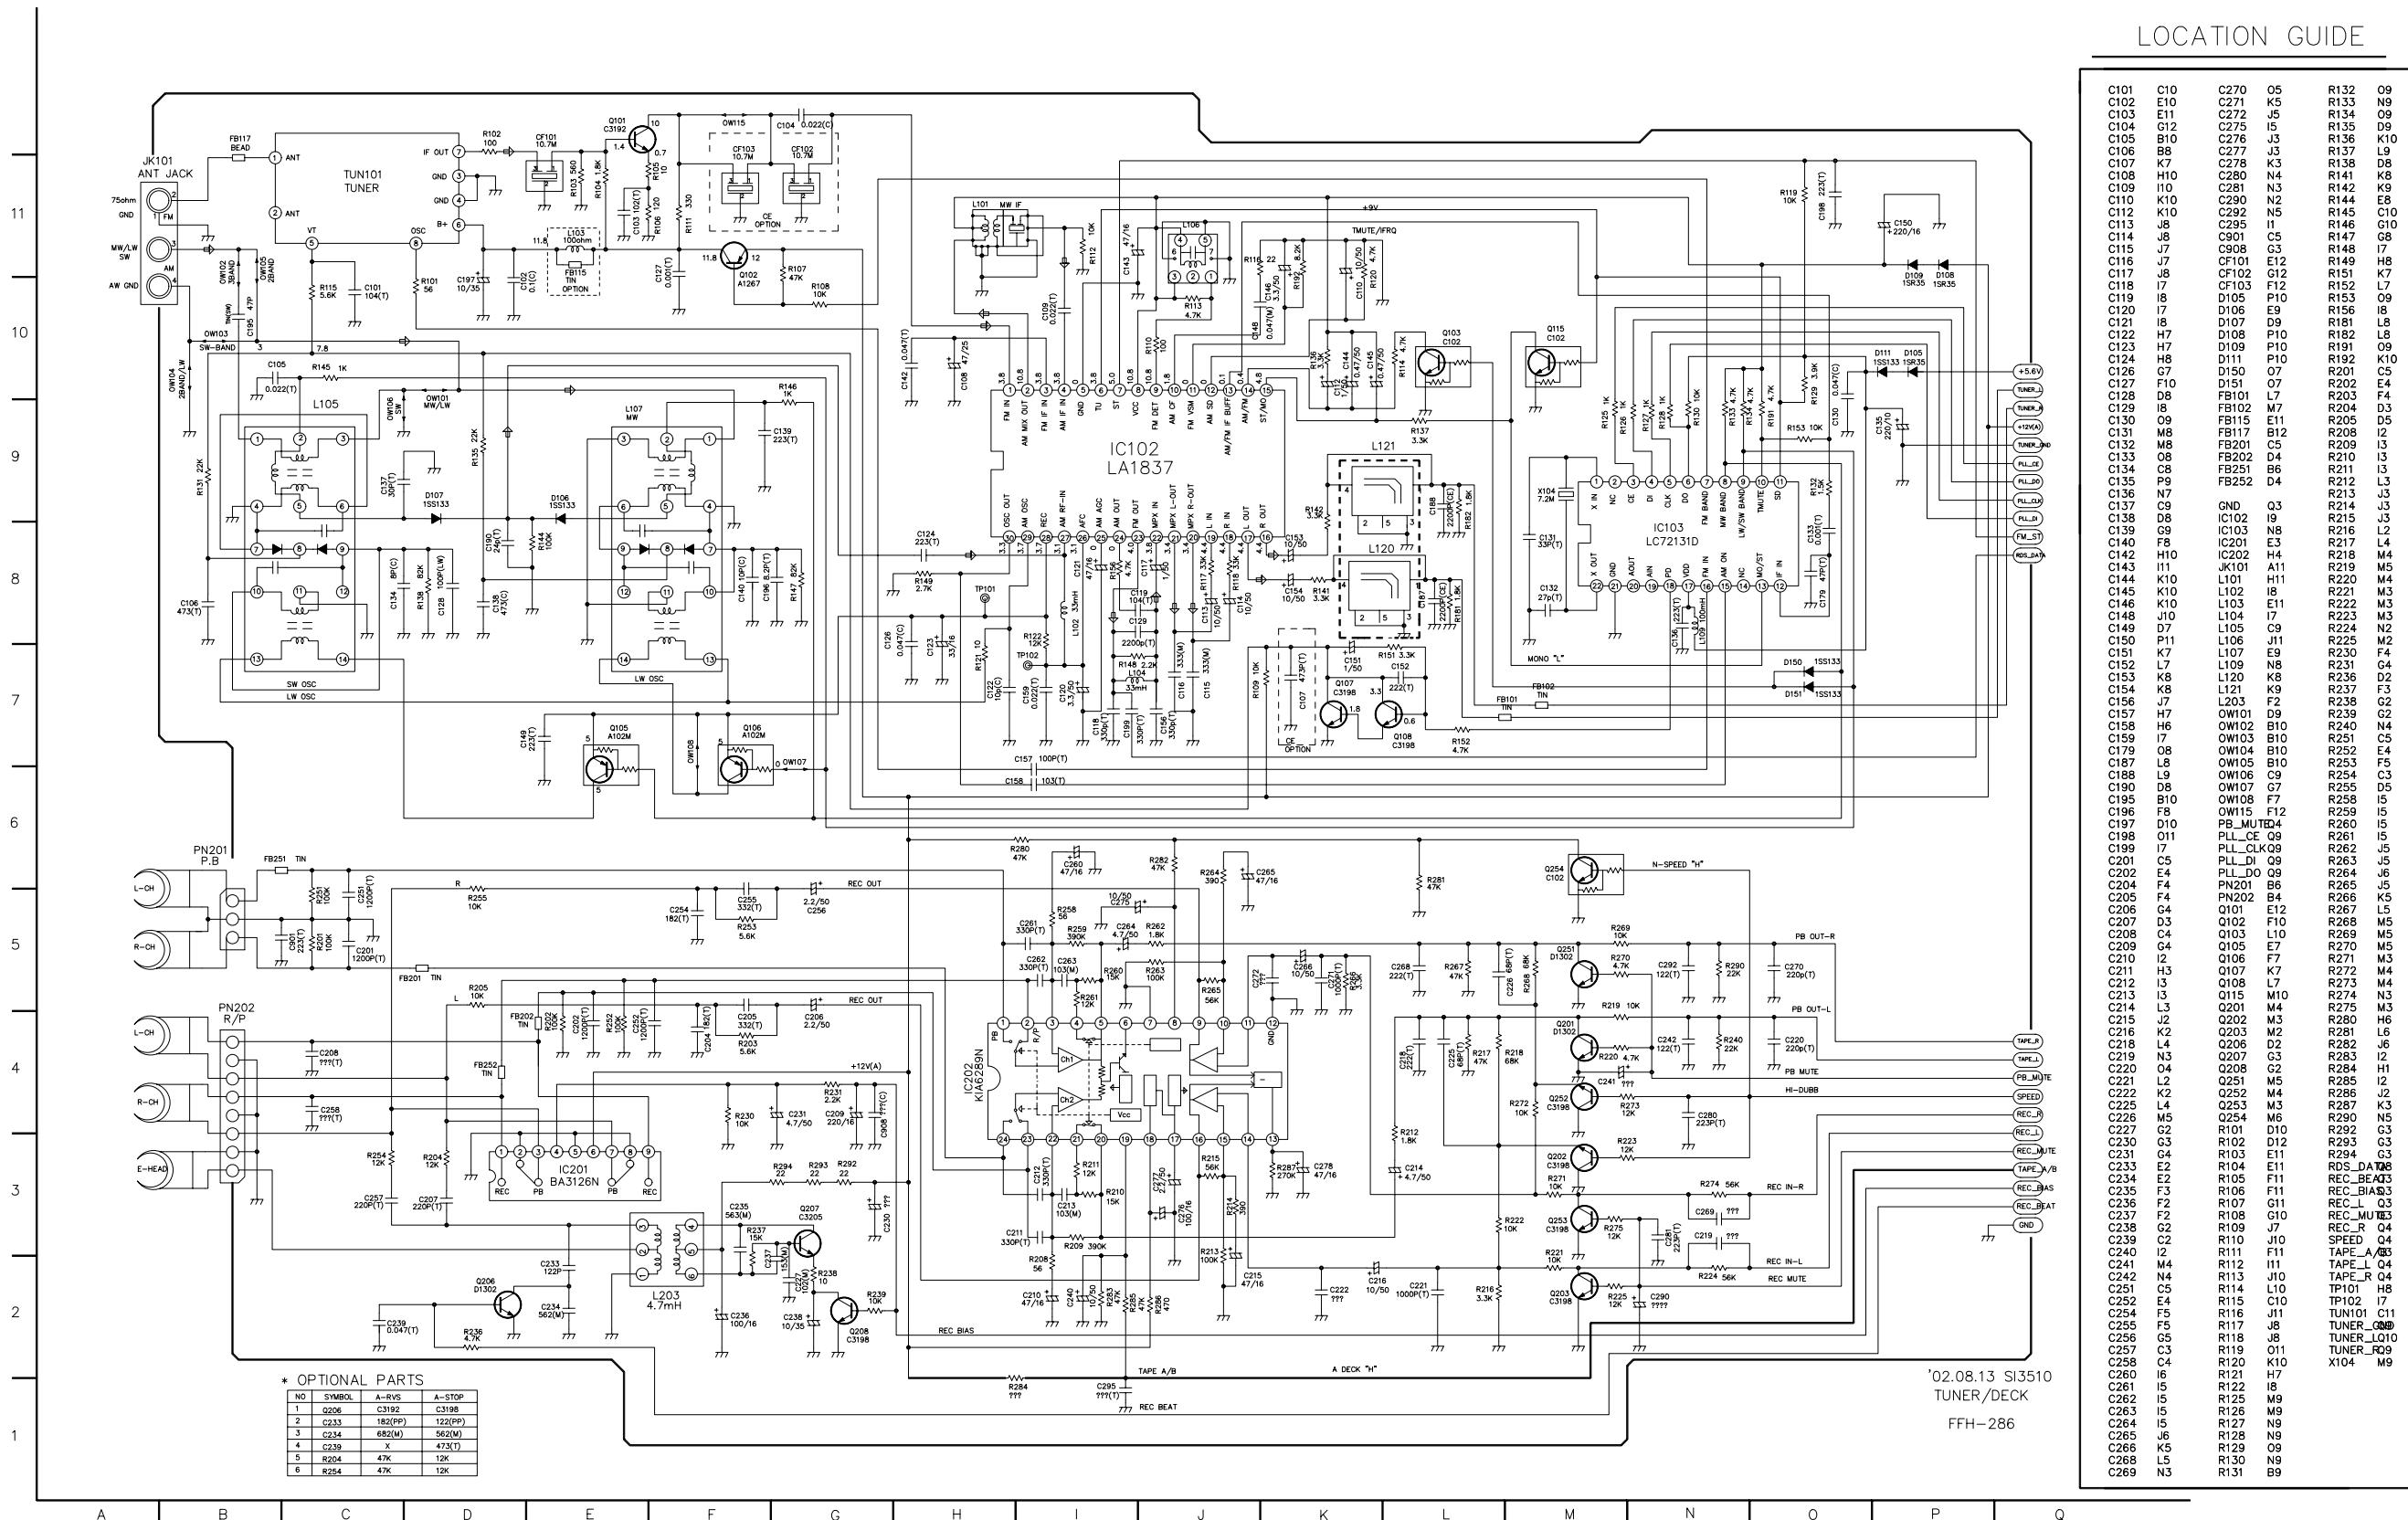


## • CDP SCHEMATIC DIAGRAM

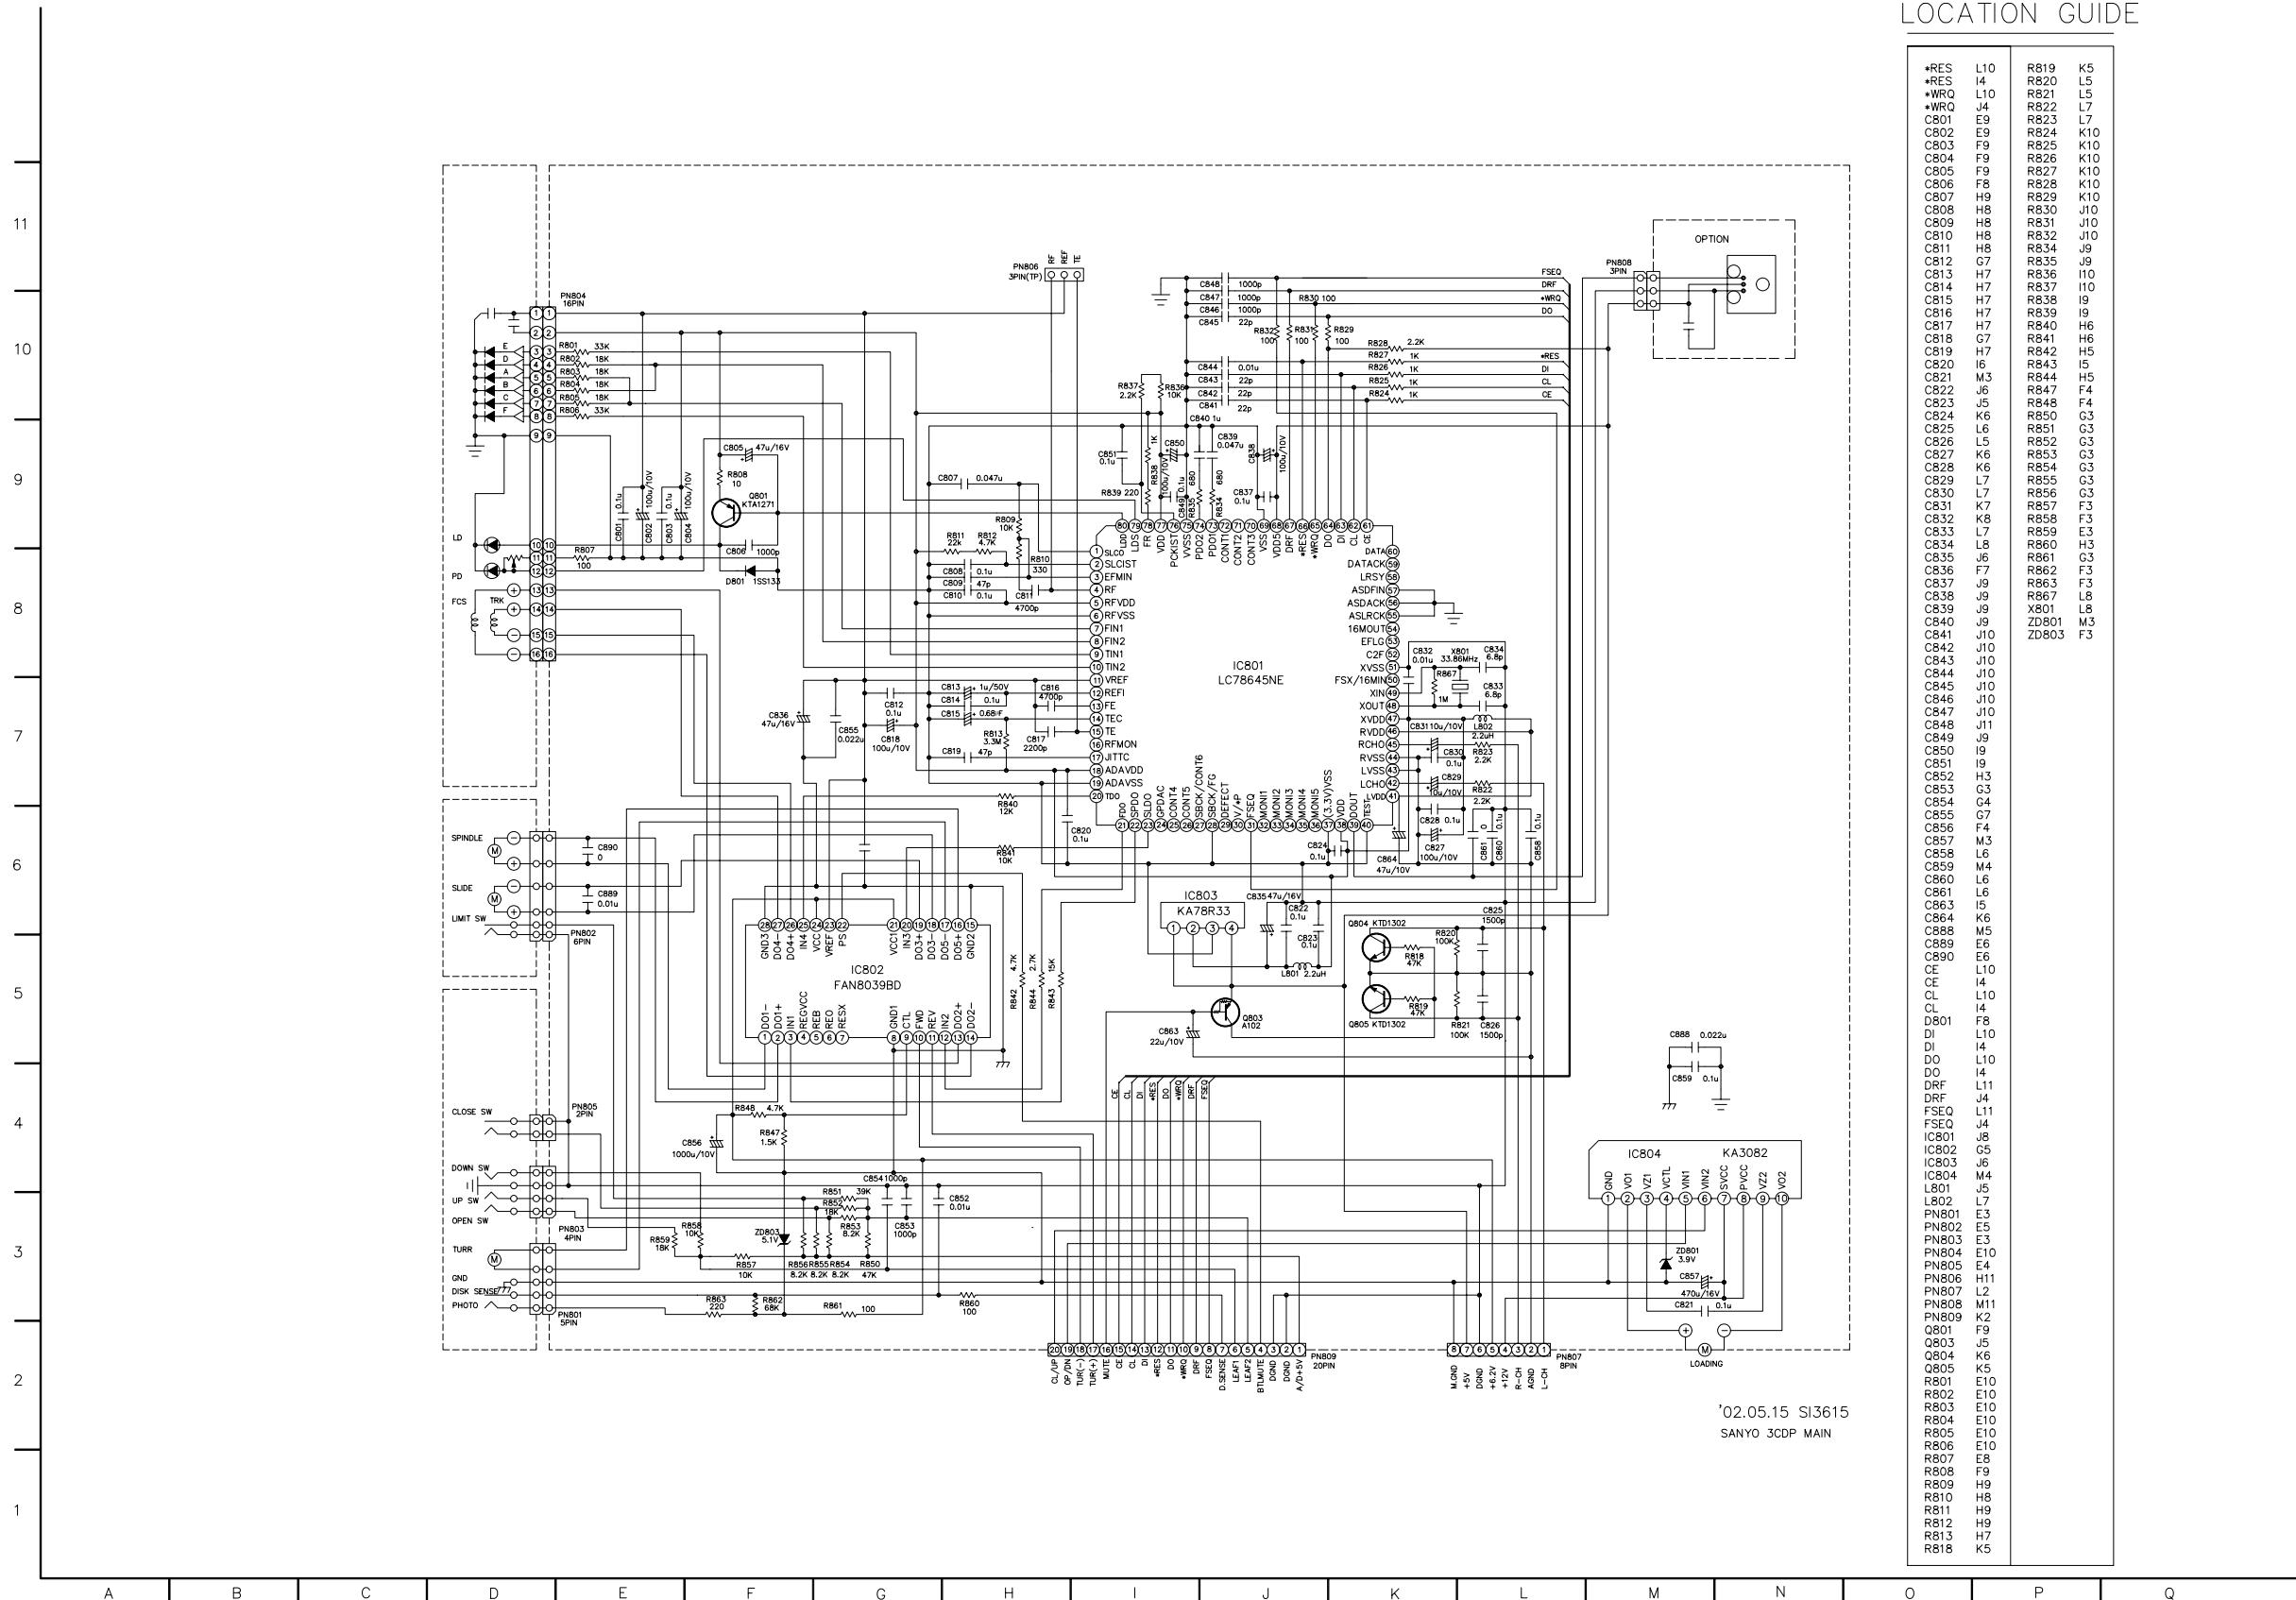


# WIRING DIAGRAM

*3CD CHANGER MECHANISM ASSY*

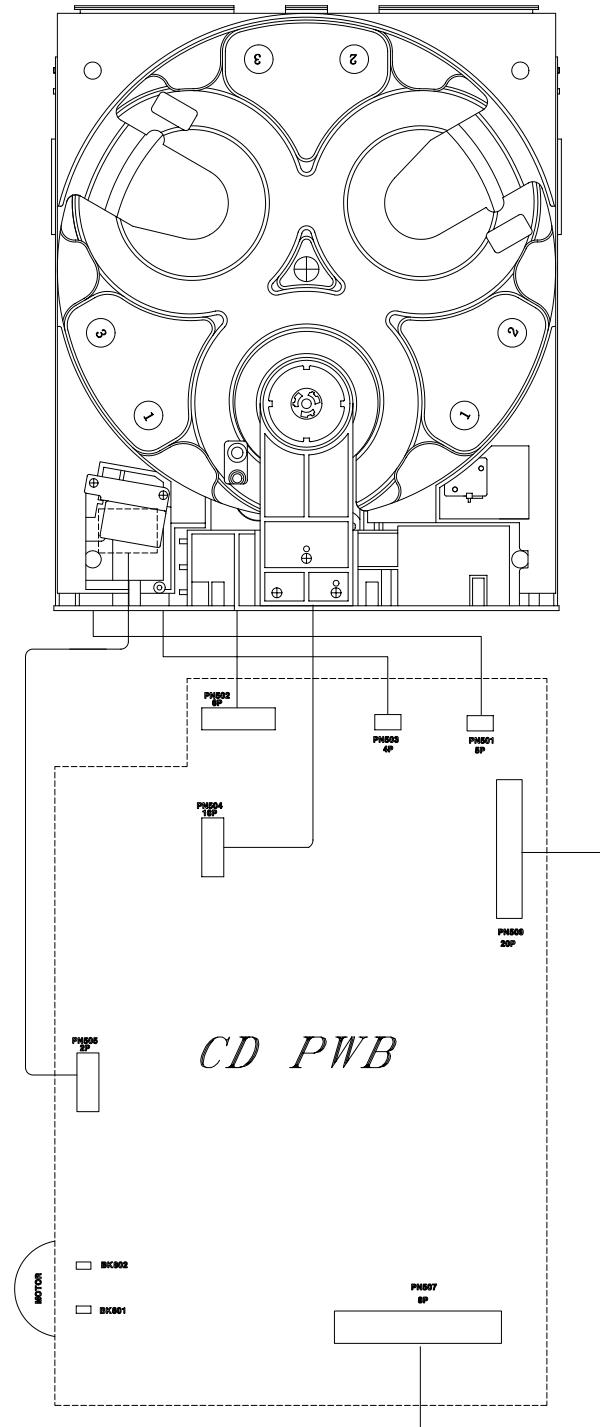

*FFH-286 WIRING DIAGRAM*


**NOTE: Warning**  
Parts that are shaded are critical With respect  
to risk of fire or electrical shock.

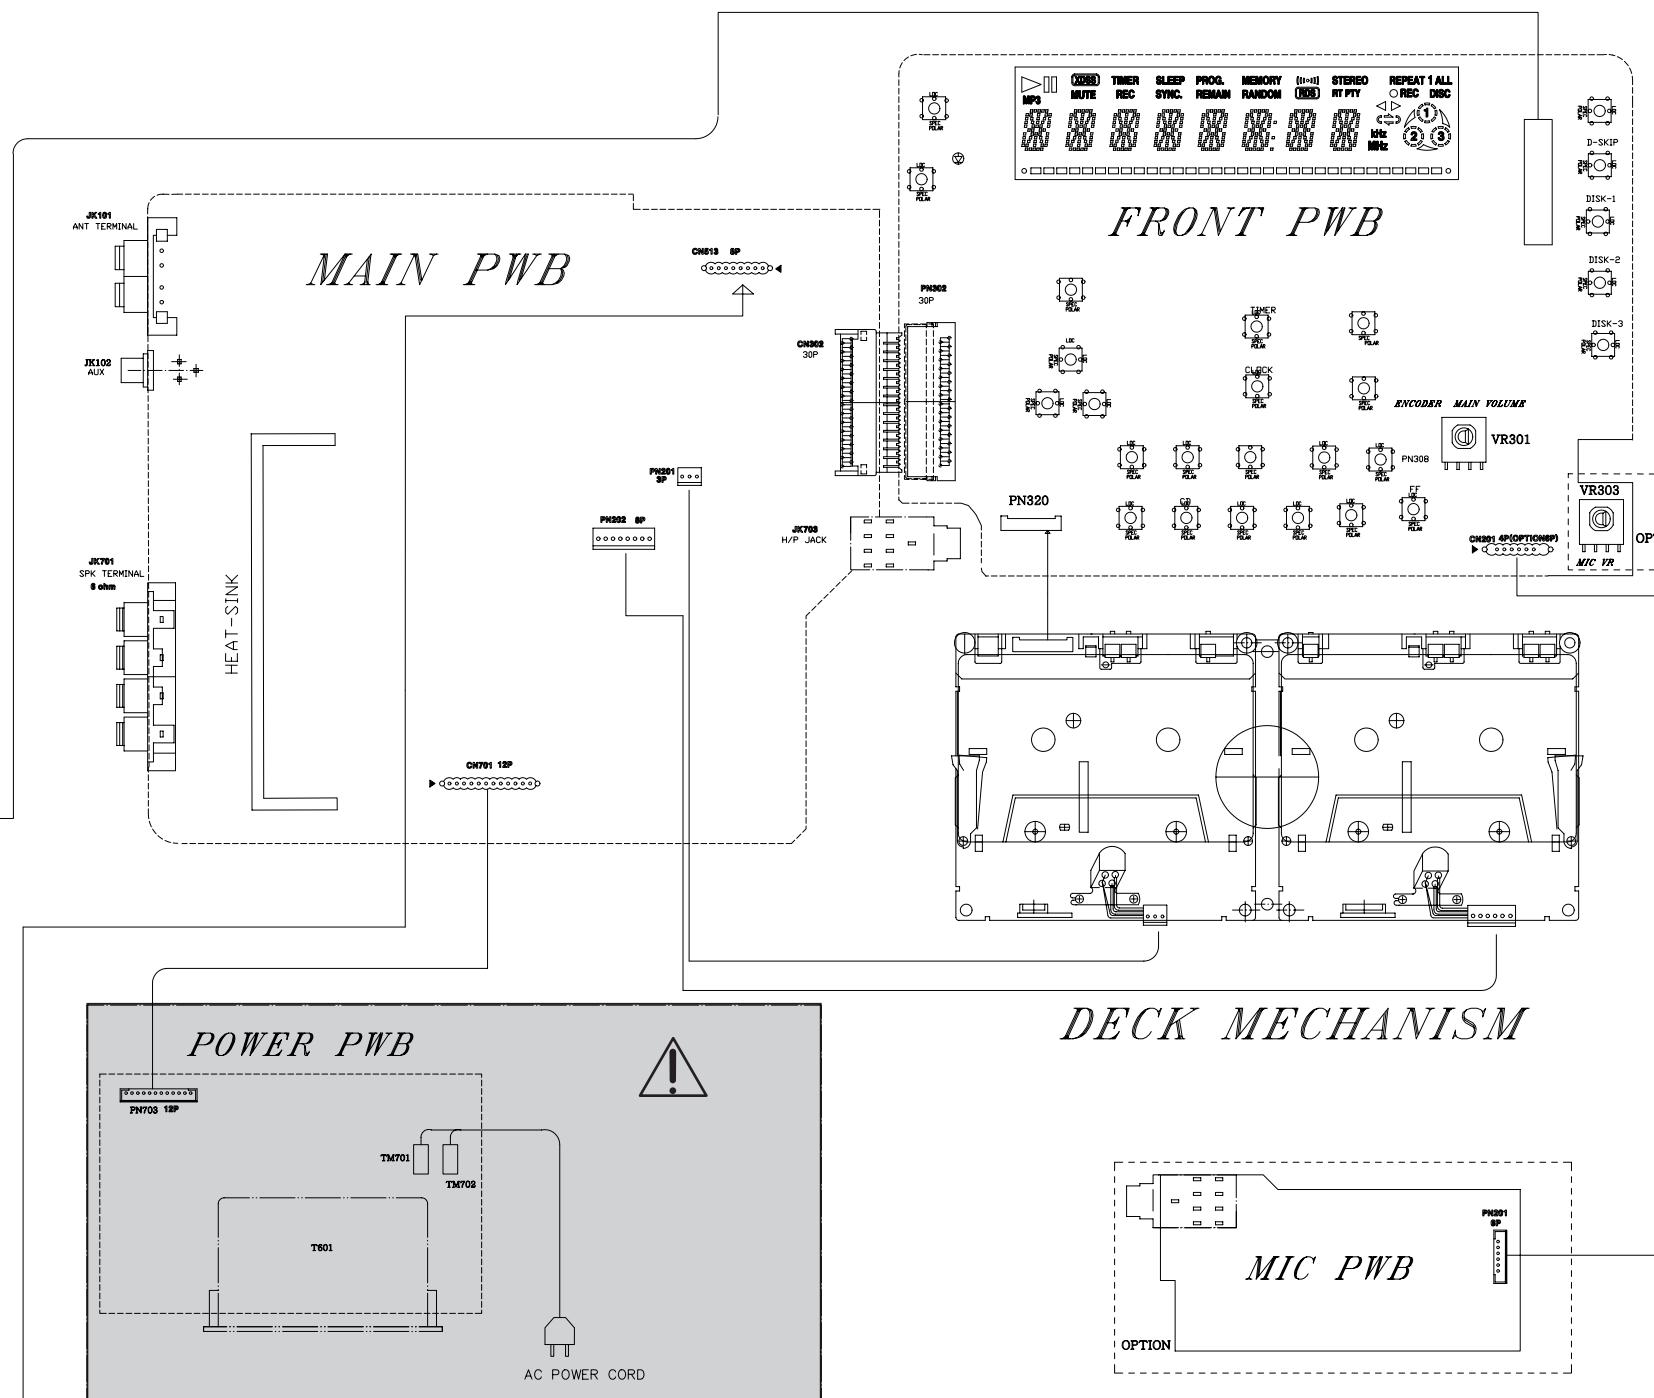


*KEC TR.					
NAME	R1	R2	NAME	R1	R2
C102M	10K	10K	C111M	10K	
C103M	22K	22K			
C104M	4.7K	4.7K			
C110M	4.7K				

# PRINTED CIRCUIT DIAGRAMS


## • MAIN P.C. BOARD (SOLDER SIDE)

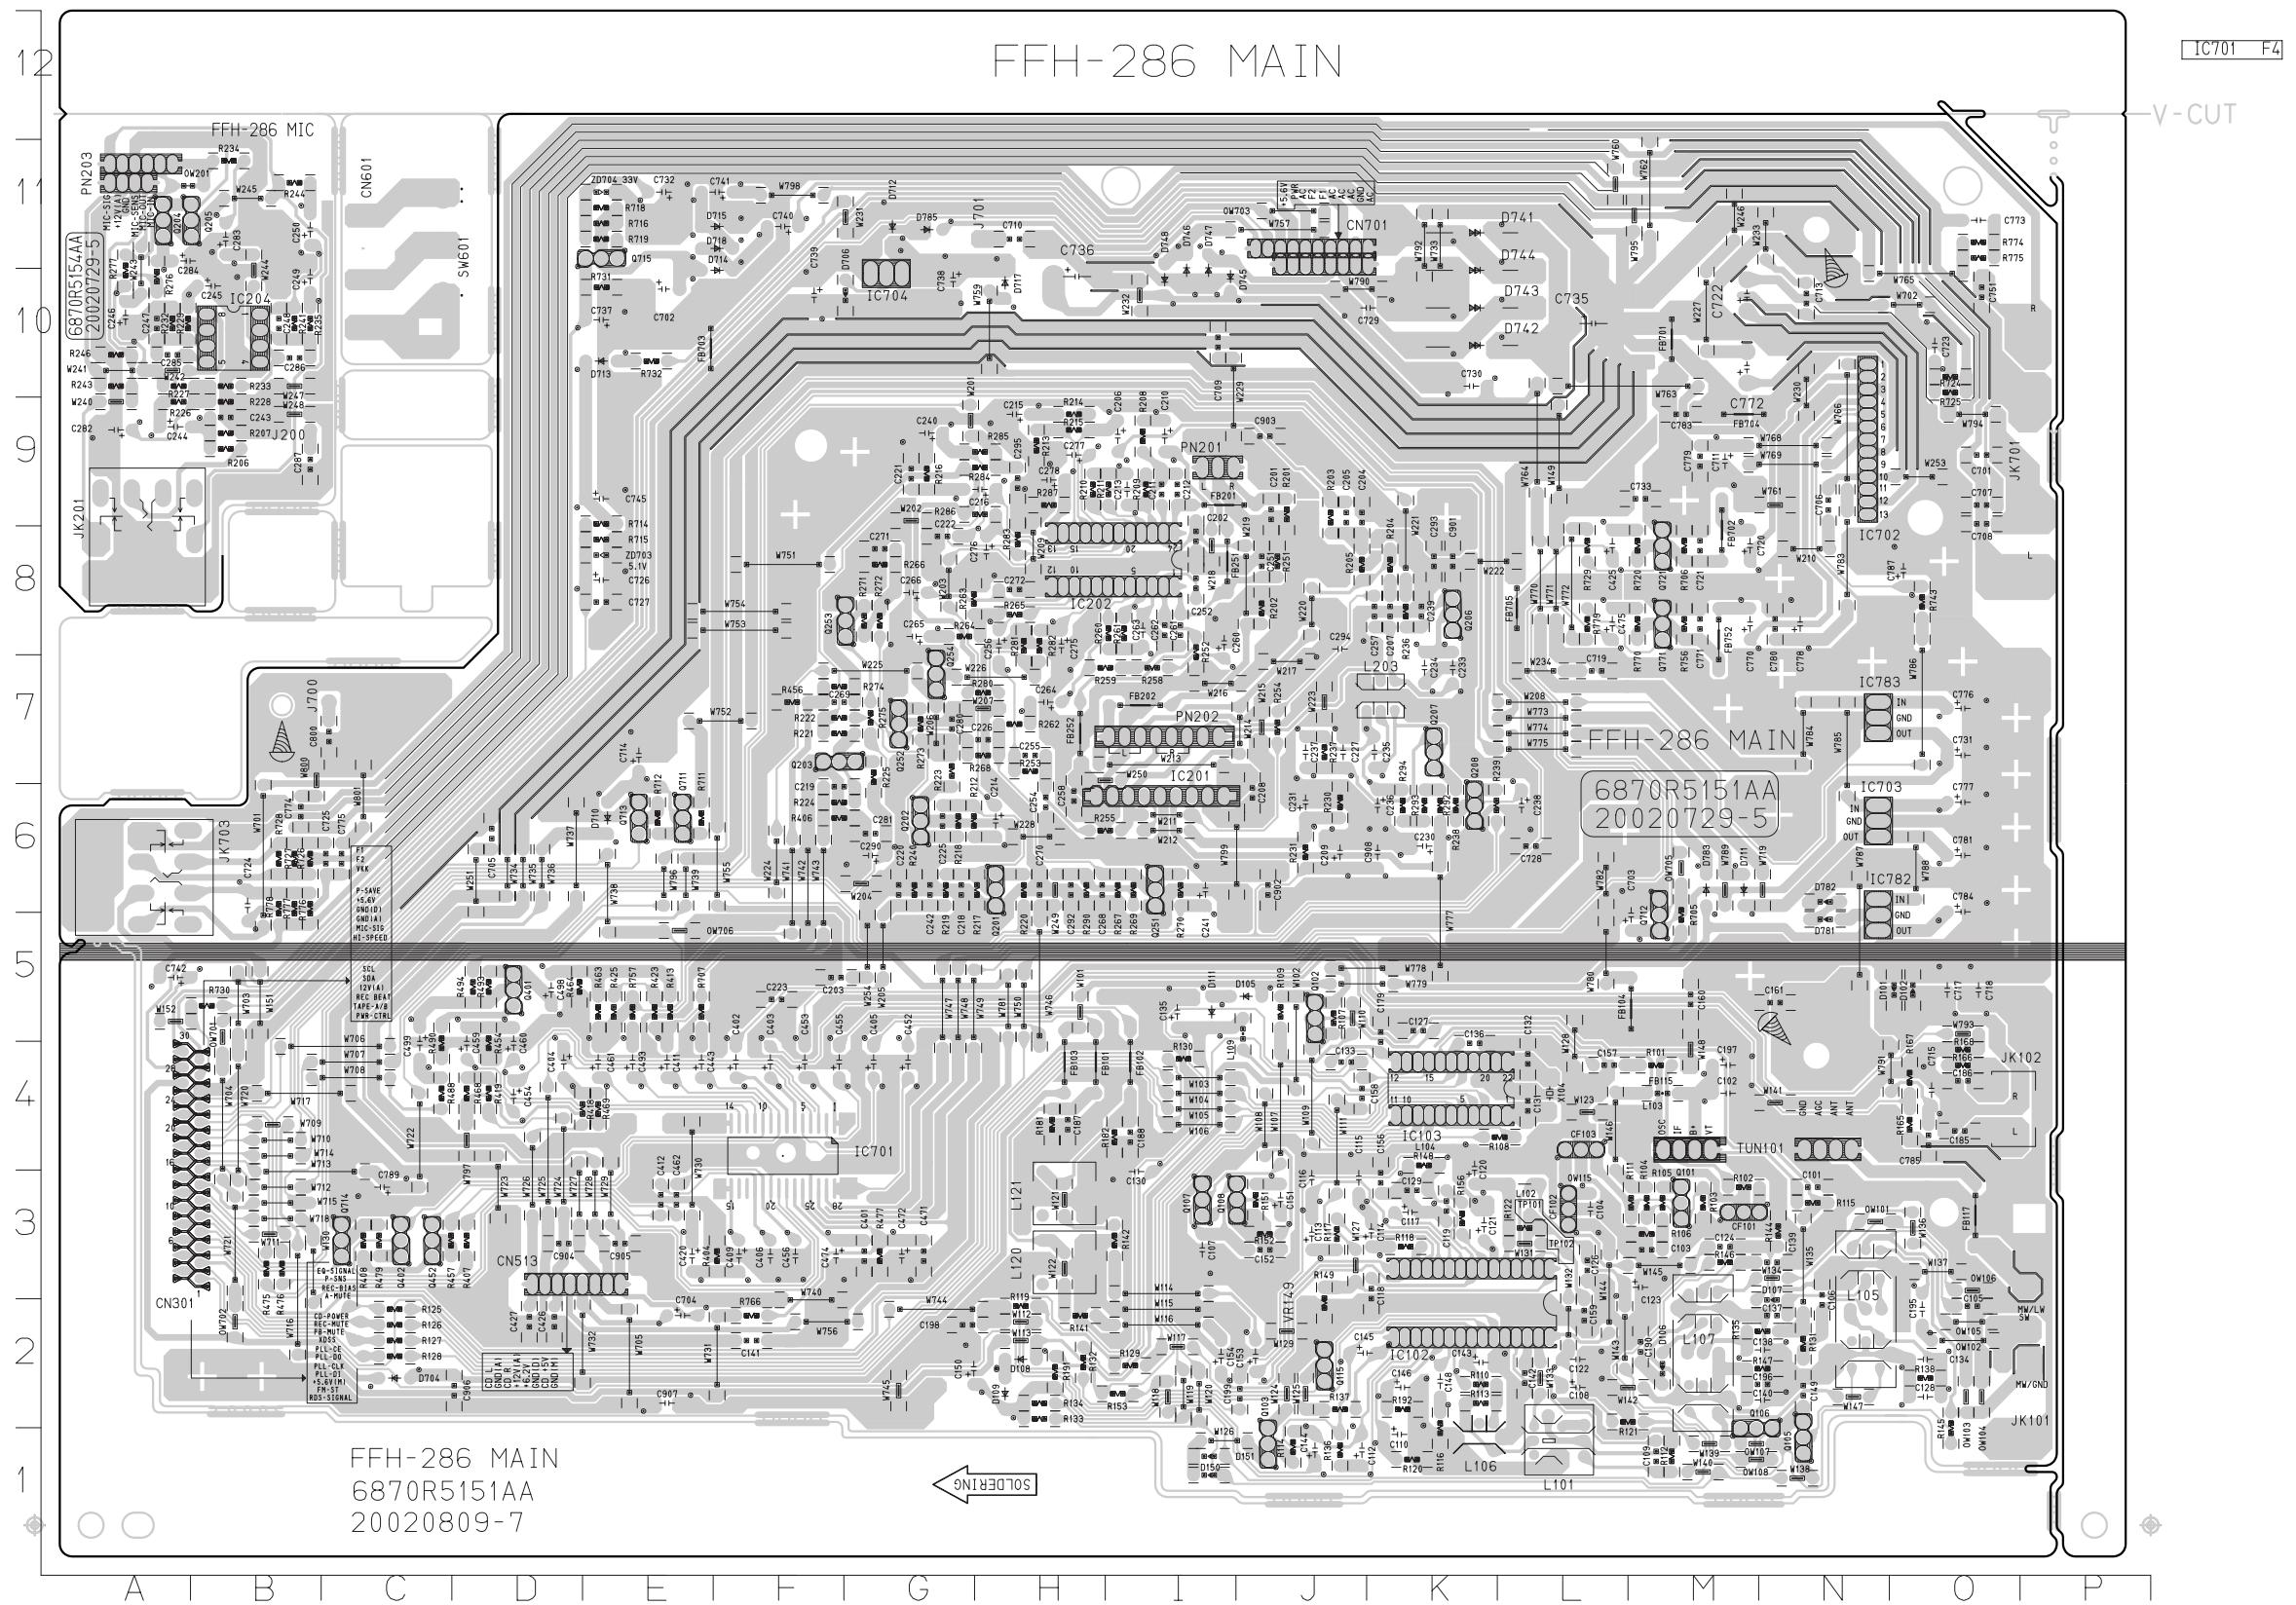

• MAIN P.C. BOARD (COMPONENT SIDE)

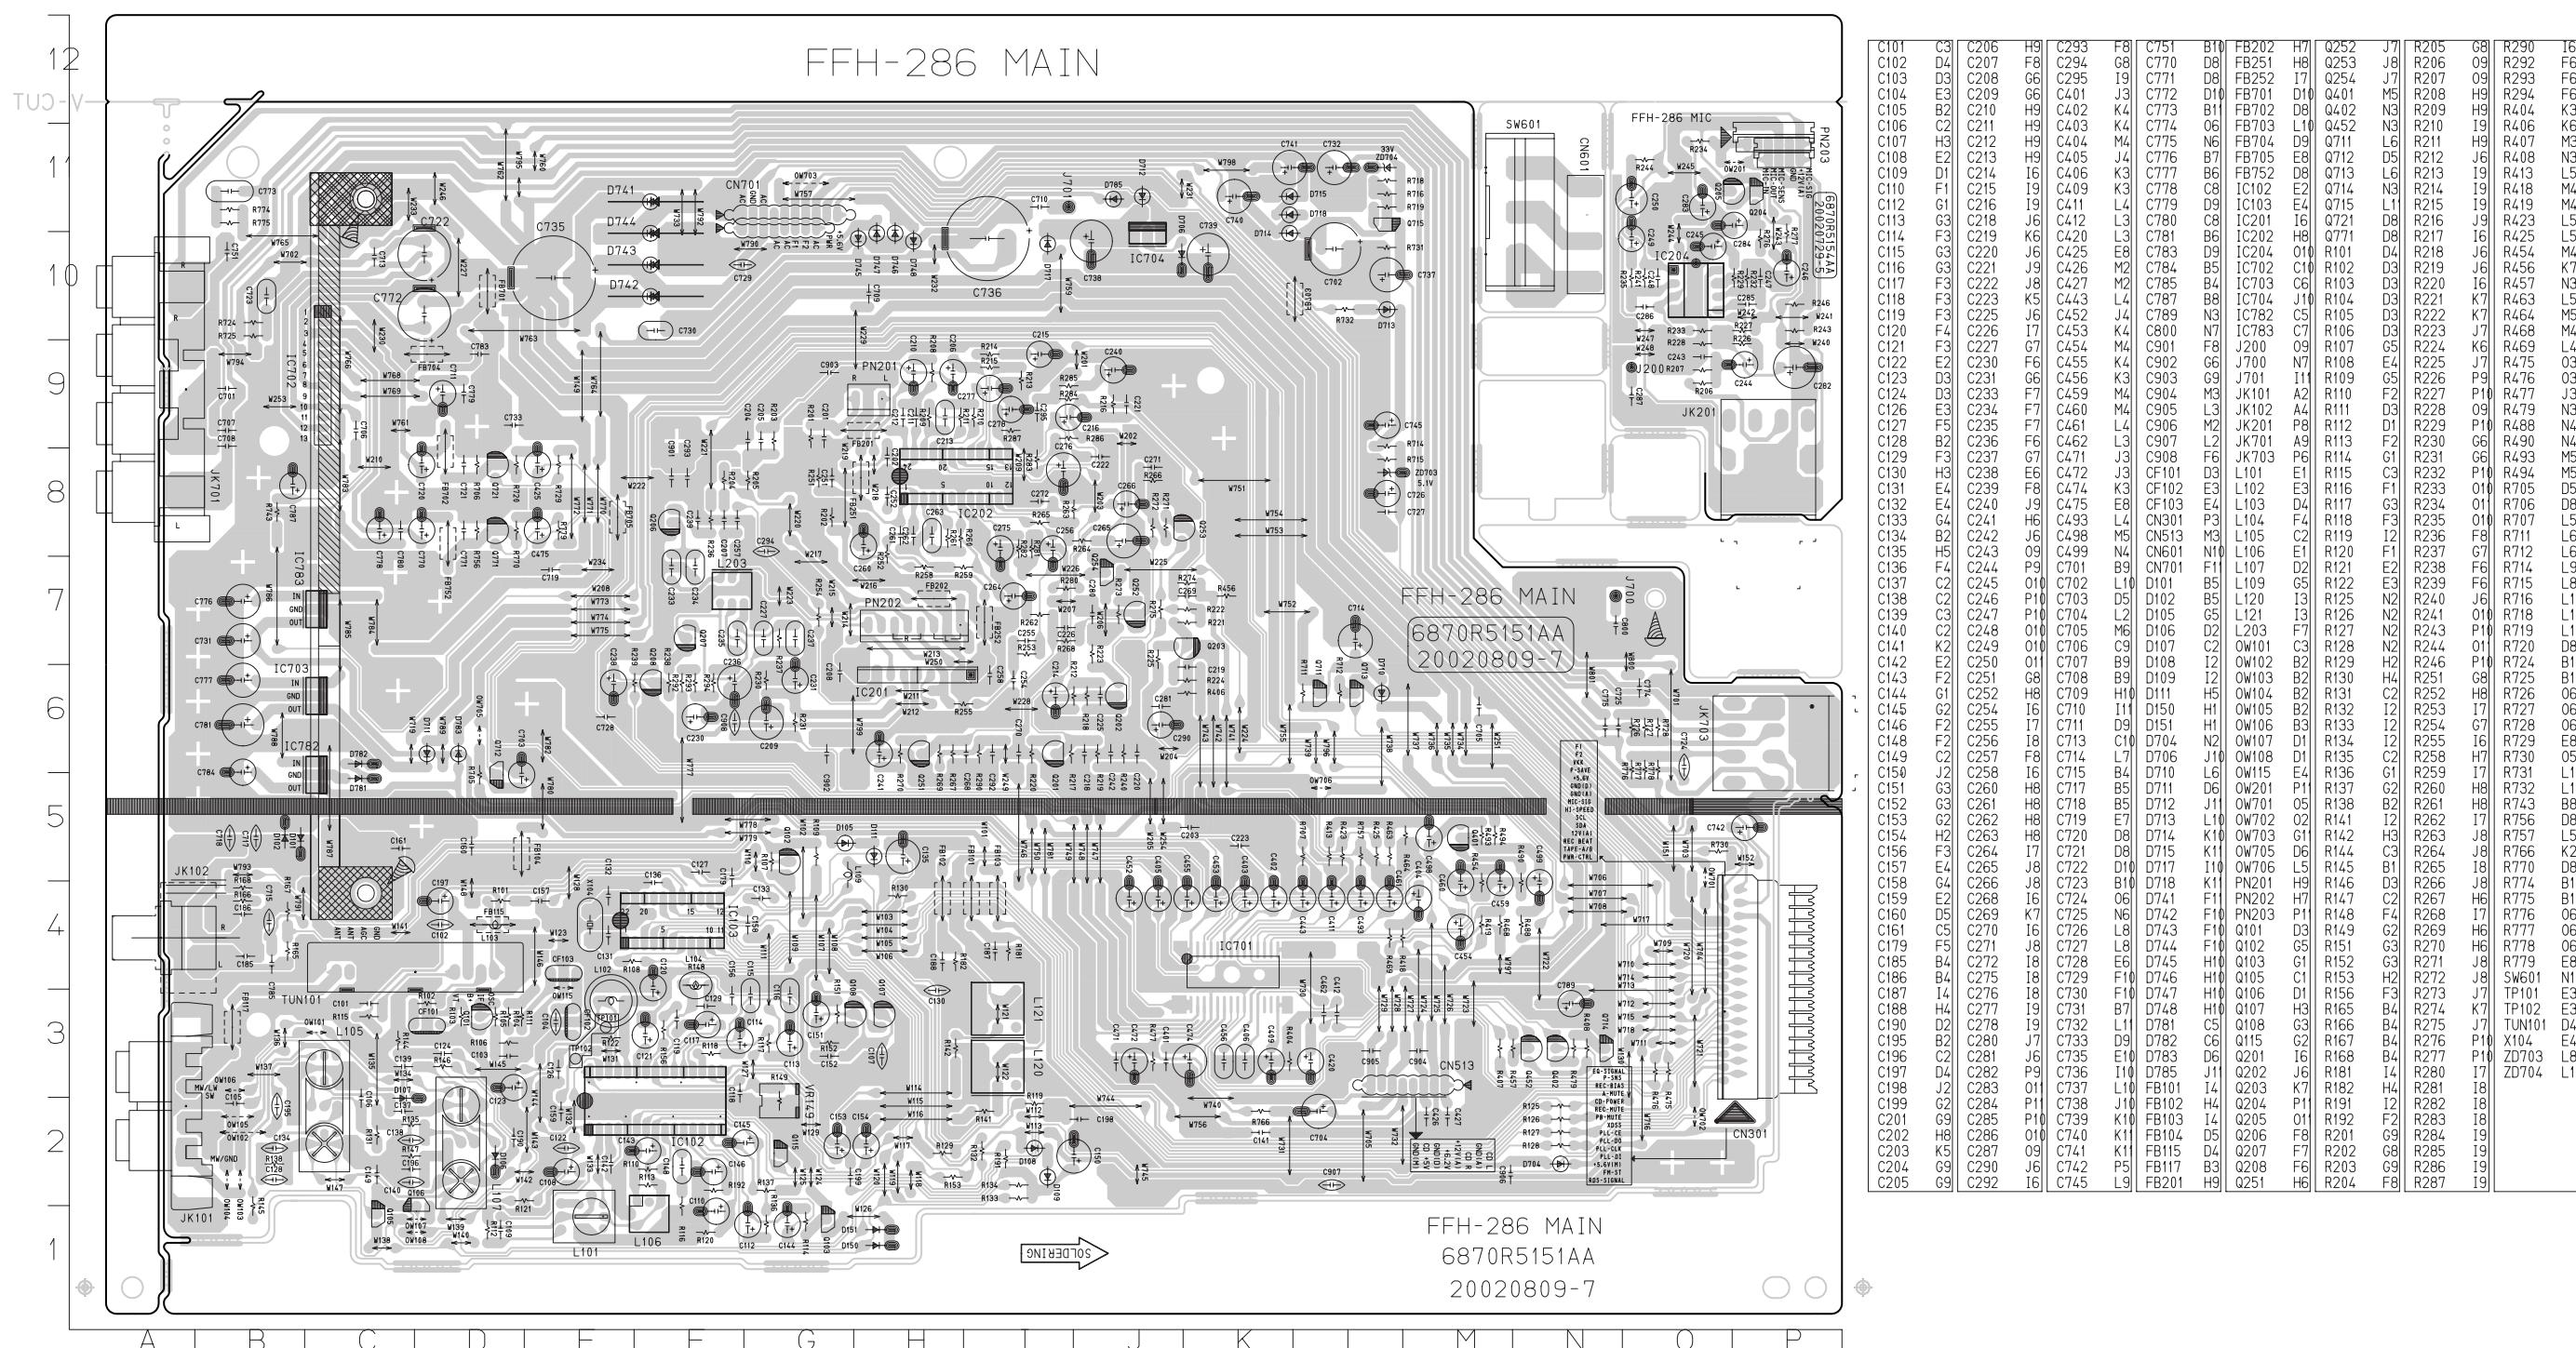


• FRONT P.C. BOARD(COMPONENT SIDE)

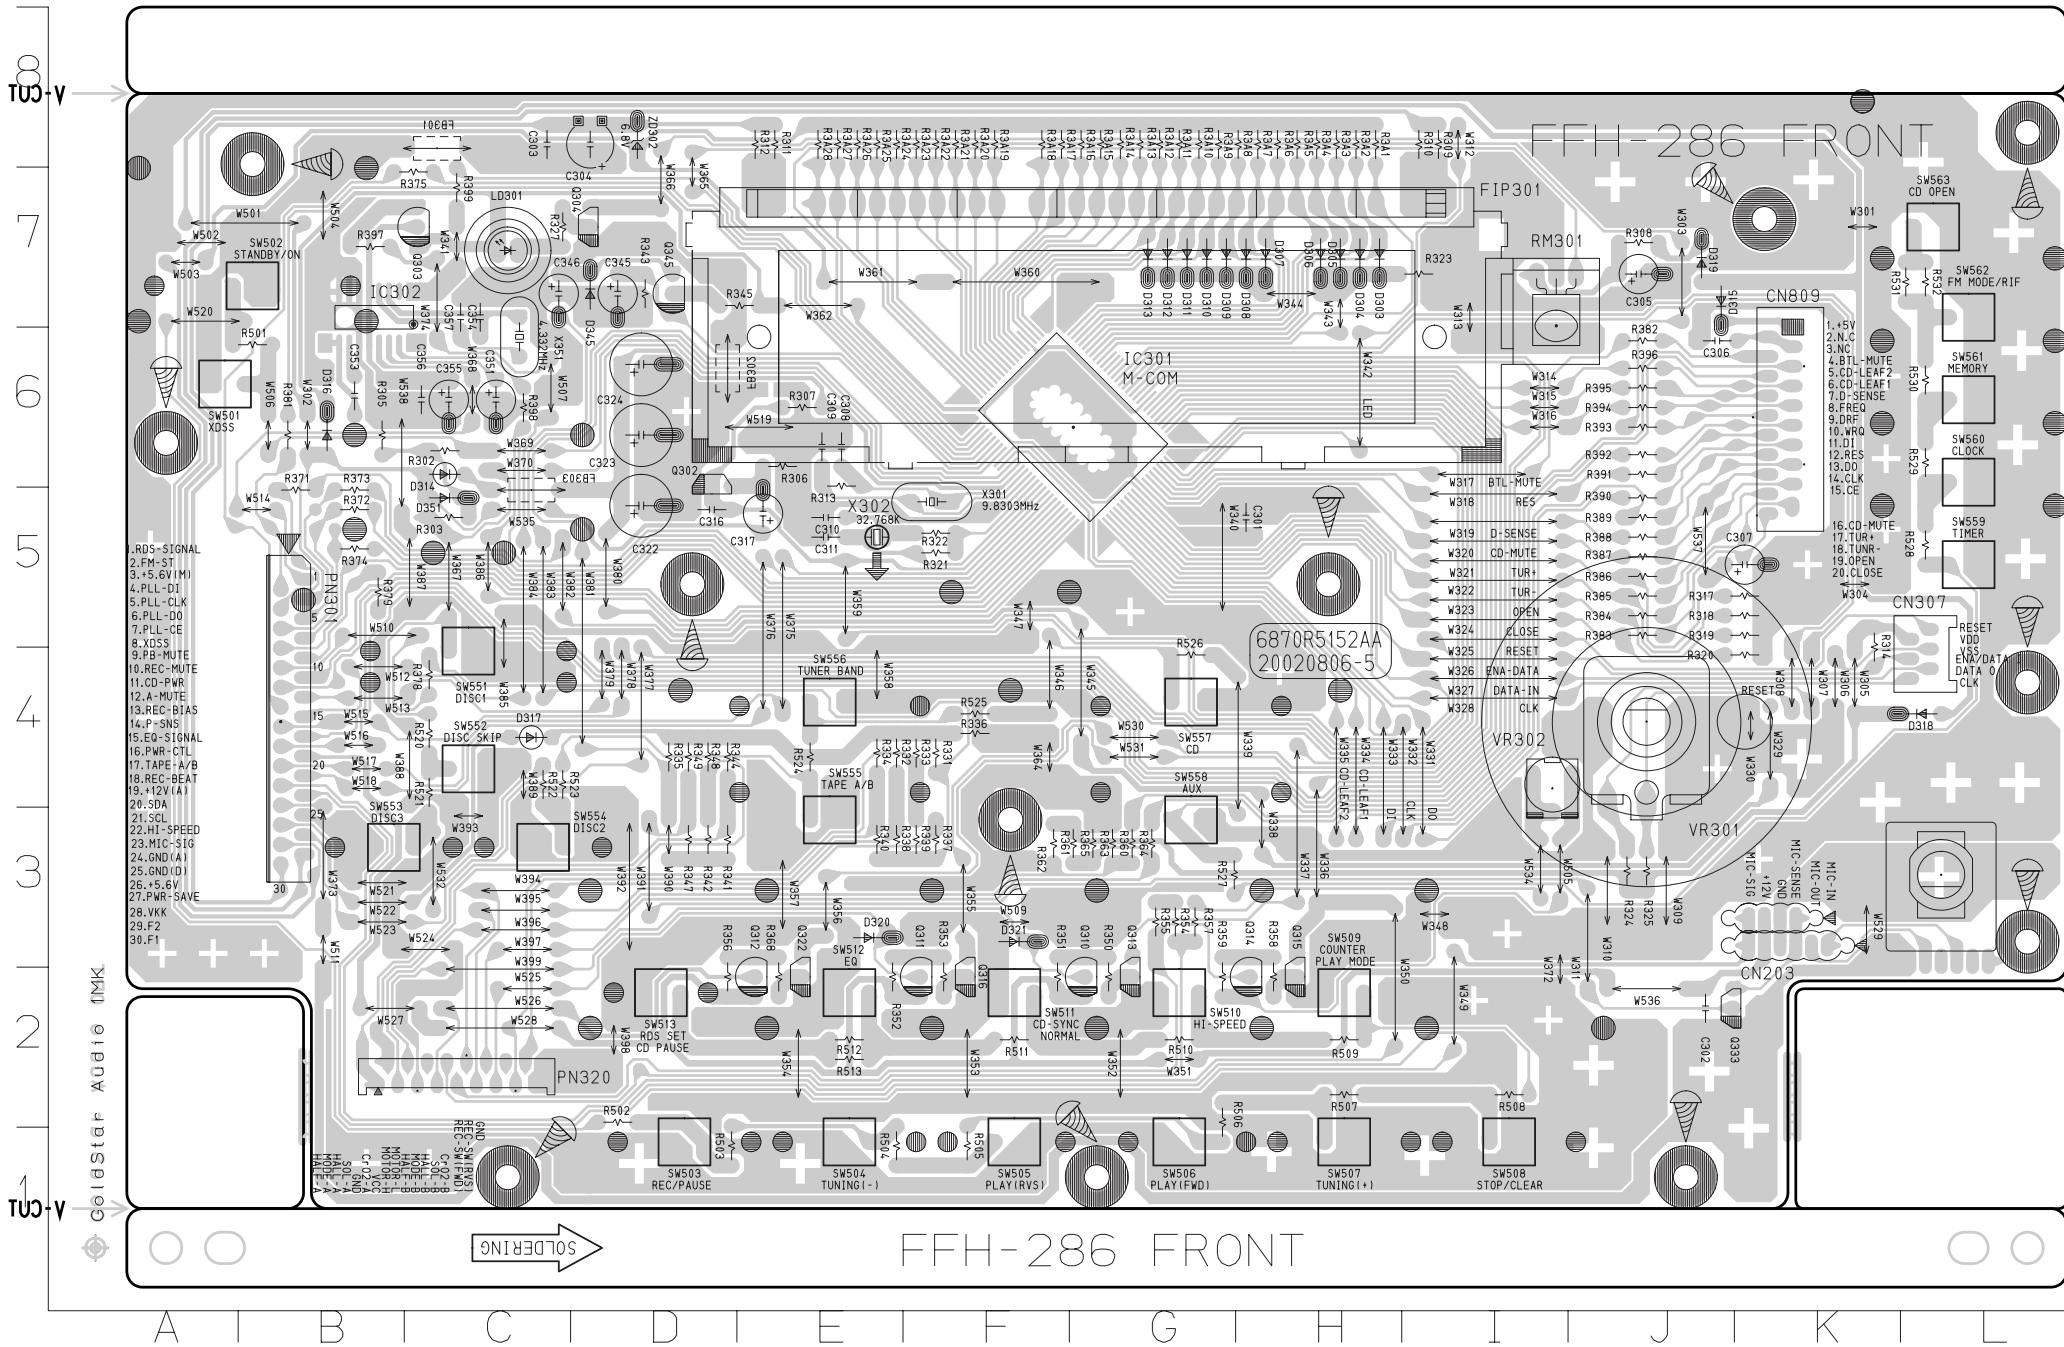


C301	H5	FB301	C8	R337	F3	R393	J6	R520	C4
C302	J2	FB302	D6	R338	E3	R394	J6	R521	C4
C303	C8	FB303	C5	R339	F3	R395	J6	R522	C4
C304	D8	FIP301	I7	R340	E3	R396	B7	R523	E4
C305	J7	LD301	B4	R341	D3	R397	C6	R524	F4
C306	J6	PN301	B2	R342	D3	R398	C6	R525	G4
C307	K5	PN320	B2	R343	D7	R399	C7	R526	G4
C308	E6	Q302	D6	R344	D4	R3A1	H8	R527	G3
C309	E6	Q303	C7	R345	E7	R3A10	G8	R528	L5
C310	E5	Q304	D7	R347	D3	R3A11	G8	R529	L6
C311	E5	Q310	G2	R348	D4	R3A12	G8	R530	L6
C316	D5	Q311	F2	R349	D4	R3A13	G8	R531	L7
C317	E5	Q312	E2	R350	G2	R3A14	G8	R532	L7
C322	D5	Q313	F2	R351	F2	R3A15	G8	RM301	I7
C323	D6	Q314	H2	R352	F2	R3A16	G8	SW501	A6
C324	D6	Q315	H2	R353	F2	R3A17	F8	SW502	B7
C345	D7	Q316	F2	R354	G3	R3A18	F8	SW503	D1
C346	C7	Q322	E2	R355	G3	R3A19	F8	SW504	E1
C351	C6	Q333	J2	R356	D2	R3A2	H8	SW505	F1
C353	B6	Q345	D7	R357	G3	R3A20	F8	SW506	G1
C354	C7	R302	C6	R358	H2	R3A21	F8	SW507	H1
C355	C6	R303	C5	R359	G2	R3A22	F8	SW508	I1
C356	C6	R305	B6	R360	G3	R3A23	F8	SW509	H2
C357	C7	R306	E6	R361	G3	R3A24	E8	SW510	G2
CN203	K3	R307	E6	R362	G3	R3A25	E8	SW511	F2
CN307	L4	R308	J7	R363	G3	R3A26	E8	SW512	E2
CN809	K5	R309	I8	R364	G3	R3A27	E8	SW513	E2
D303	H7	R310	I8	R365	G3	R3A28	E8	SW551	C4
D304	H7	R311	E8	R366	E2	R3A3	H8	SW552	C4
D305	H7	R312	E8	R368	E2	R3A4	H8	SW553	B3
D306	H7	R313	E6	R371	B5	R3A5	H8	SW554	C3
D307	H7	R314	K4	R372	B5	R3A6	H8	SW555	E3
D308	H7	R317	K5	R374	B5	R3A7	H8	SW556	E4
D309	G7	R318	K5	R375	C7	R3A8	H8	SW557	G4
D310	G7	R319	K5	R378	C4	R3A9	G8	SW558	G3
D311	G7	R320	K4	R379	B5	R501	B6	SW559	L5
D312	G7	R321	F5	R381	B6	R502	D2	SW560	L6
D313	G7	R322	F5	R382	J6	R503	D1	SW561	L6
D314	C6	R323	I7	R383	J5	R504	E1	SW562	L7
D315	J7	R324	J3	R384	J5	R505	F1	SW563	L7
D316	B6	R325	J3	R385	J5	R506	G2	VR301	J4
D317	C4	R327	C7	R386	J5	R507	H2	VR302	I4
D318	L4	R331	F4	R387	J5	R508	I2	X301	F5
D319	J7	R332	E4	R388	J5	R509	H2	X302	E5
D320	E3	R333	F4	R389	J5	R510	G2	X351	C6
D321	F3	R334	E4	R390	J5	R511	F2	ZD302	D8
D345	D7	R335	D4	R391	J6	R512	E2	R513	E2
D351	C5	R336	D4	R392	J6				

• FRONT P.C. BOARD(SOLDER SIDE)

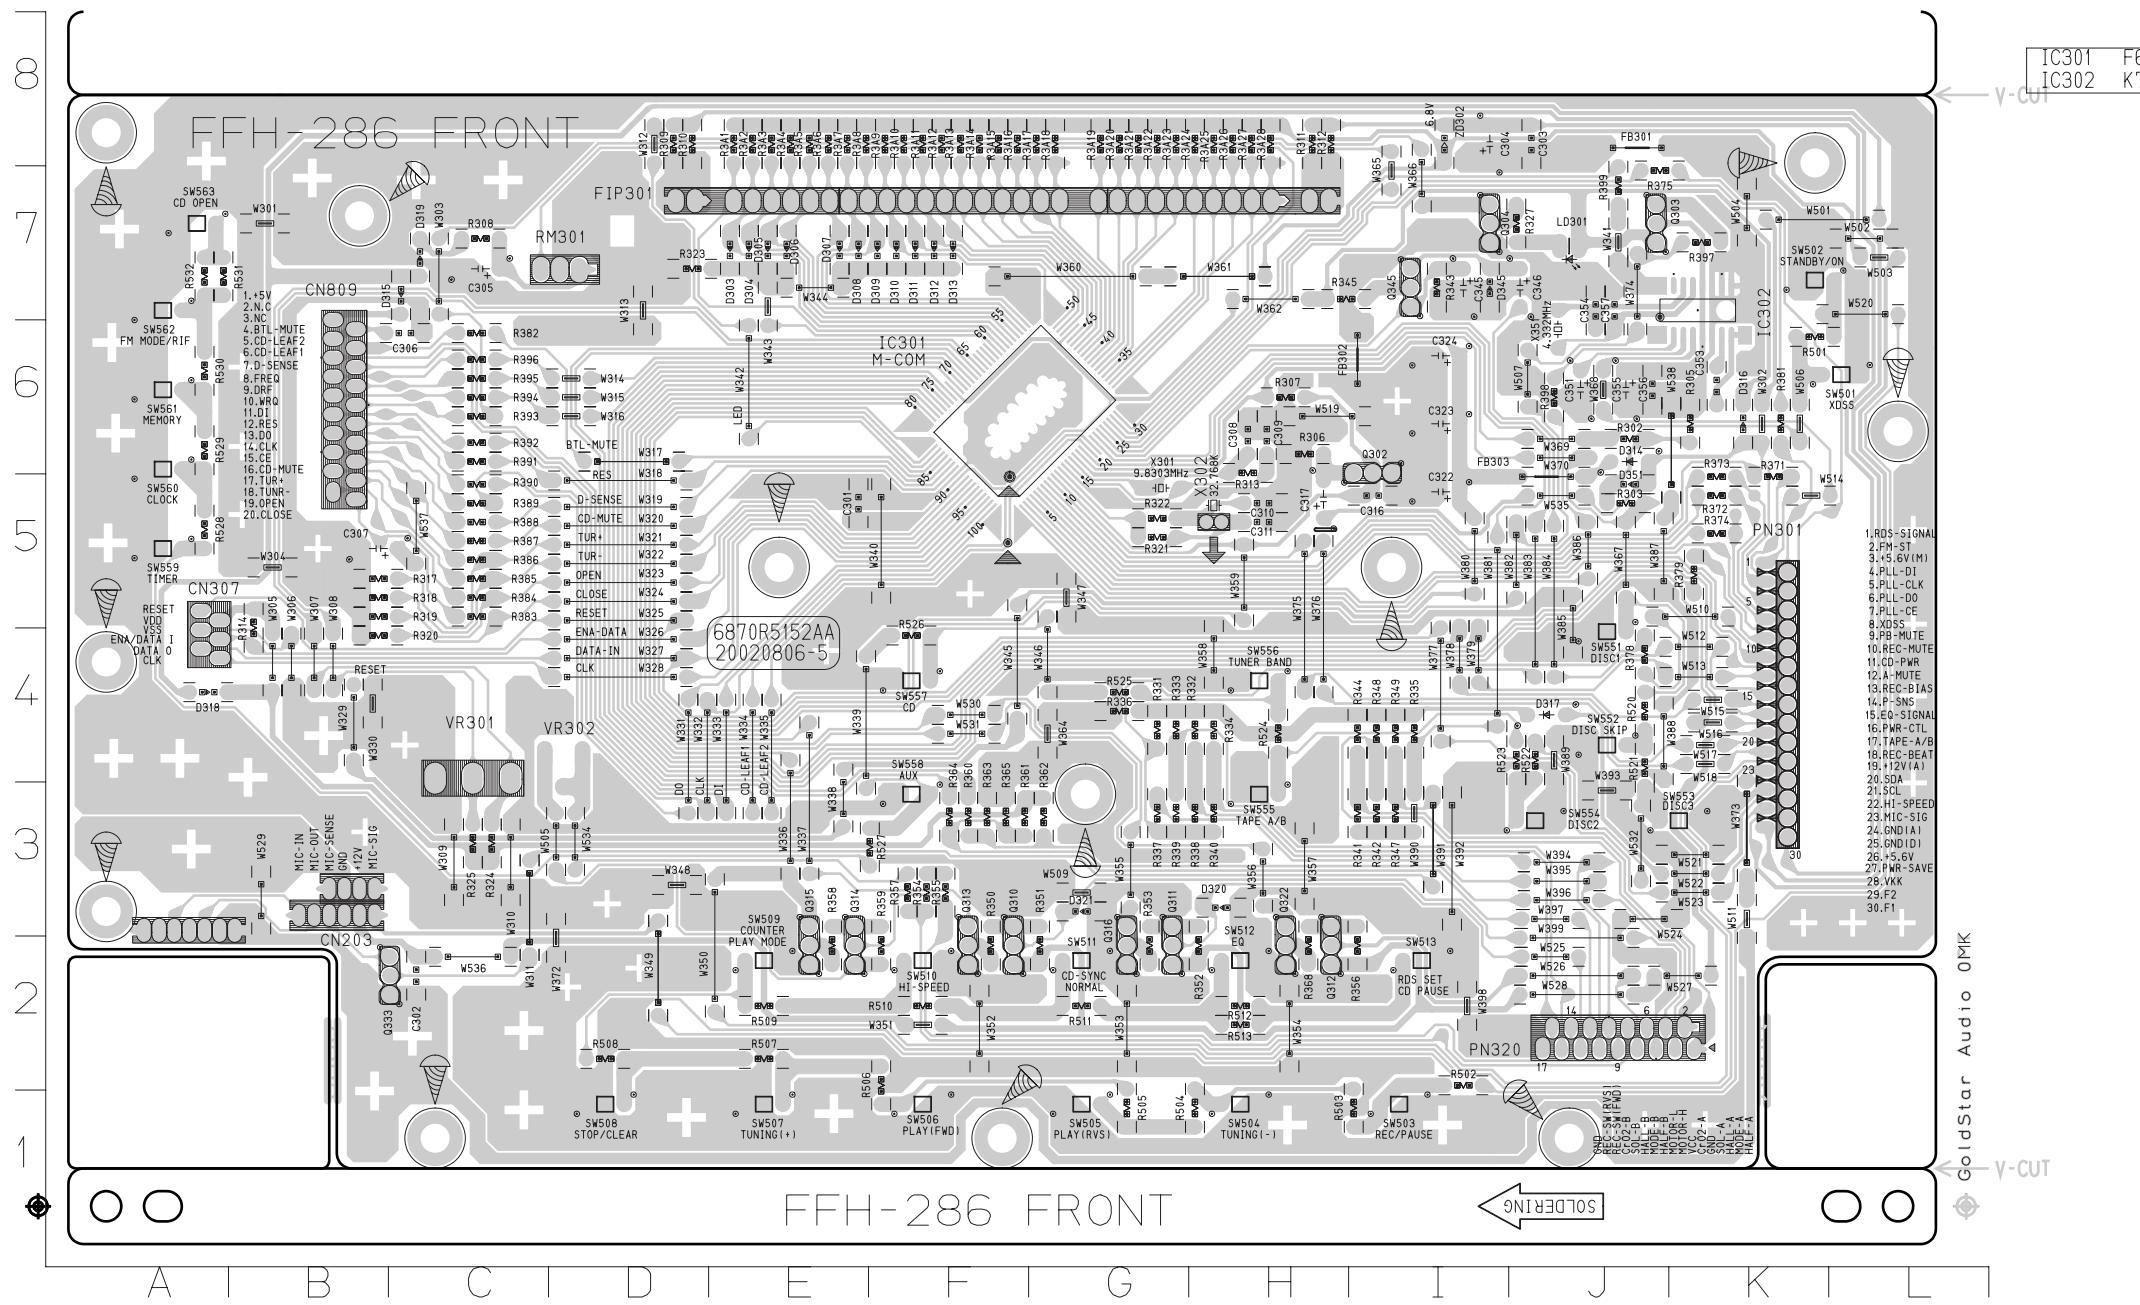

## • CD MAIN P.C. BOARD

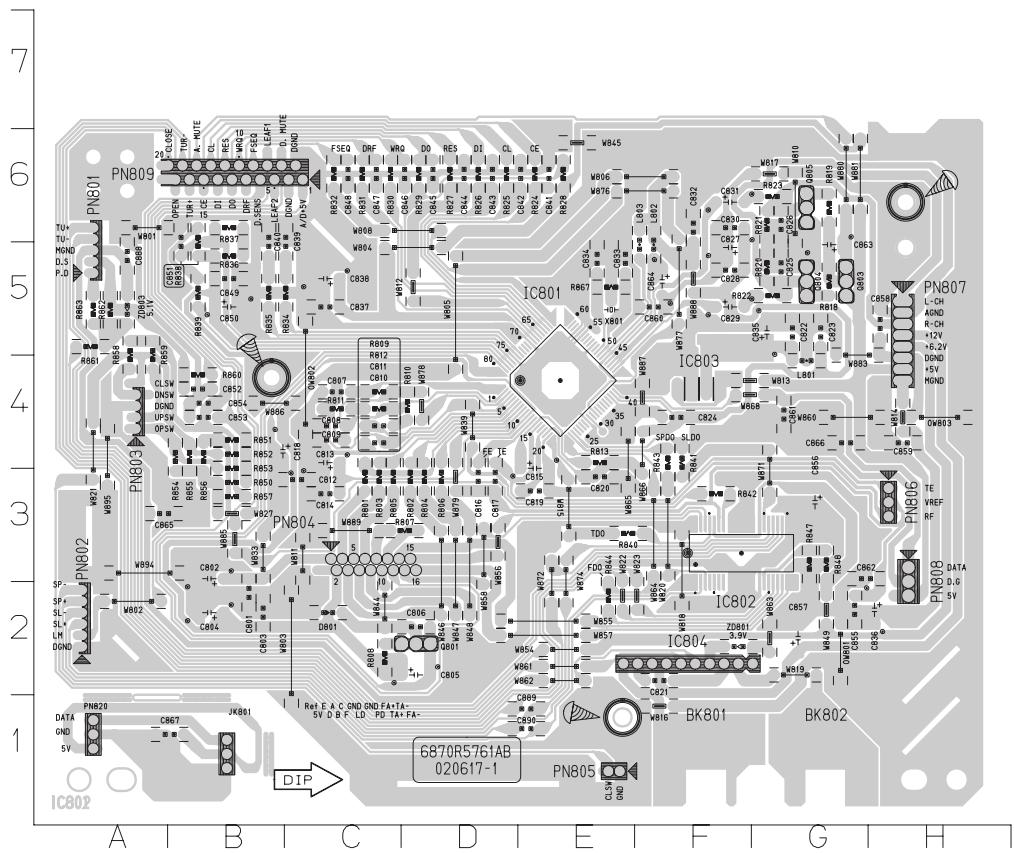


C801	B2	0W801	G2
C802	B3	0W802	C4
C803	B2	0W803	H4
C804	B2	PN801	A5
C805	D2	PN802	A2
C806	D2	PN803	A4
C807	C4	PN804	C3
C808	C4	PN805	E1
C809	C4	PN806	H3
C810	C4	PN807	H5
C811	C4	PN808	H3
C812	C3	PN809	C6
C813	C4	PN820	A1
C814	C3	Q801	D2
C815	E3	Q803	G5
C816	D3	Q804	G5
C817	D3	Q805	G6
C818	B4	R801	C3
C819	E3	R802	D3
C820	E3	R803	C3
C821	F2	R804	D3
C822	G5	R805	D3
C823	G5	R806	D3
C824	F4	R807	C2
C825	G5	R808	C4
C826	G6	R809	D4
C827	F3	R810	D4
C828	F3	R811	C4
C829	F3	R812	C4
C830	F6	R813	C4
C831	F6	R818	D5
C832	E5	R819	D5
C833	E5	R820	D5
C834	E5	R821	D5
C835	G5	R822	D5
C836	H2	R823	D5
C837	G5	R824	D5
C838	G5	R825	D6
C839	G5	R826	D6
C840	B5	R827	D6
C841	E6	R828	E6
C842	E6	R829	D6
C843	D6	R830	C6
C844	D6	R831	C6
C845	D6	R832	C6
C846	D6	R834	C5
C847	C6	R835	B5
C848	C6	R836	B5
C849	B5	R837	B6
C850	B5	R838	B5
C851	B5	R839	B5
C852	B4	R840	E3
C853	B4	R841	F4
C854	B4	R842	F3
C855	G2	R843	F4
C856	G3	R844	E2
C857	G2	R847	G3
C858	H5	R848	G3
C859	H2	R850	B3
C860	F5	R851	B4
C861	G4	R852	B4
C862	G3	R853	B3
C863	G5	R854	B4
C864	F5	R855	B4
C865	A3	R856	B4
C866	G4	R857	B3
C867	B1	R858	A4
C888	A5	R859	A4
C889	E1	R860	B4
C890	E1	R861	A5
D801	C2	R862	A5
IC803	F4	R863	A5
IC804	G2	R867	E5
L801	G4	X801	E5
L802	F5	ZD801	F2
L803	F5	ZD803	A5

## • AMP & POWER P.C. BOARD

### NOTE: Warning

Parts that are shaded are critical With respect to risk of fire or electrical shock.

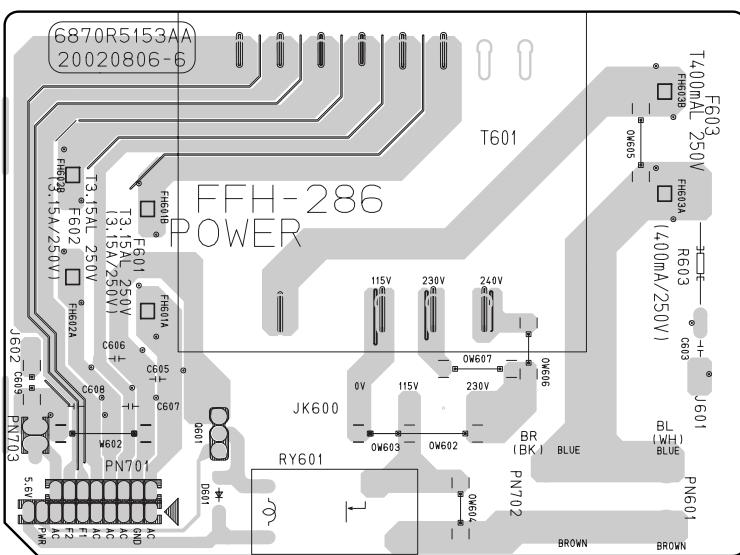


# INTERNAL BLOCK DIAGRAM OF ICs

## ■ FAN8039BD3

### 5-CH Motor Diver

#### Description

The FAN8039BD3 is a monolithic integrated circuit suitable for a 5-CH motor driver which drives the tracking actuator, focus actuator, sled motor, tray motor, spindle motor of the DVDP/CAR-CD systems.

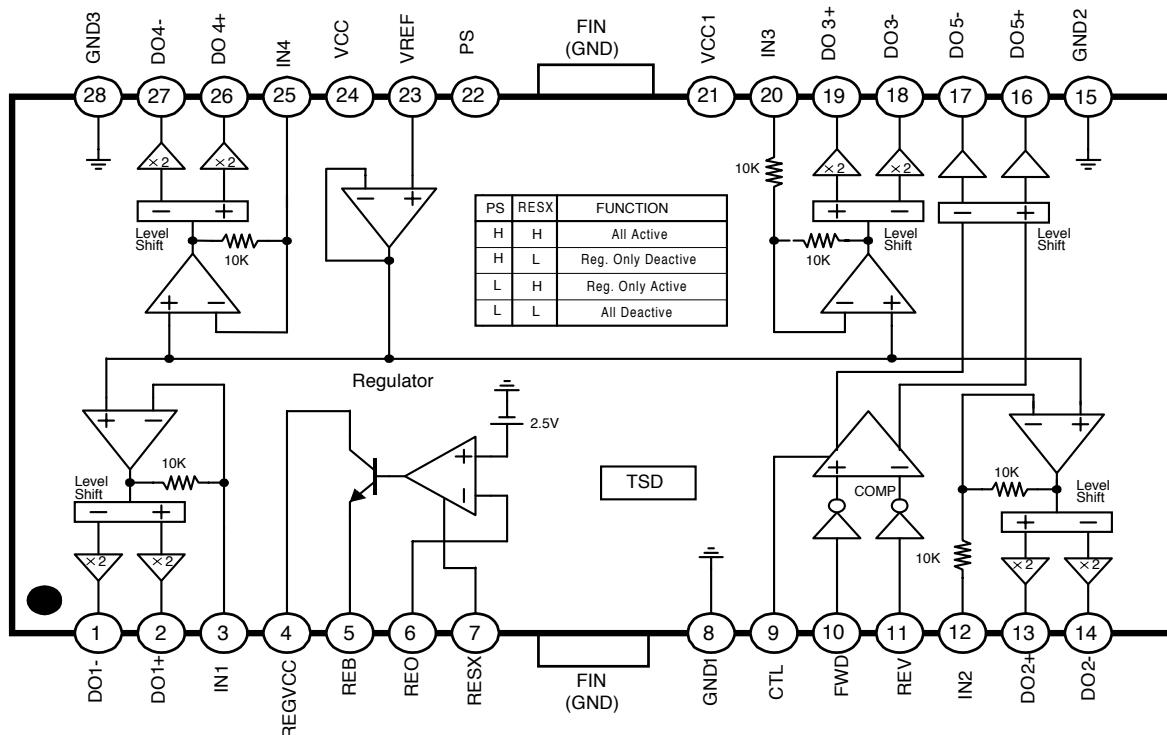

#### Pin Definitions

NO	Symbol	Description	NO	Symbol	Description
1	DO1-	CH1 Drive Output (-)	15	GND2	Power Ground1 (CH 2,3,5)
2	DO1+	CH1 Drive Output (+)	16	DO5+	CH5 Drive Output (+)
3	IN1	CH1 Drive Input	17	DO5-	CH5 Drive Output(-)
4	REGVCC	Regulator Supply Voltage	18	DO3-	CH3 Drive Output(-)
5	REB	Regulator Output	19	DO3+	CH3 Drive Output (+)
6	REO	Regulator Feedback Input	20	IN3	CH3 Drive Input
7	RESX	Regulator Reset	21	VCC1	Supply Voltage1(CH2,CH3,CH5)
8	GND1	Signal Ground	22	PS	Power Save
9	CTL	CH5 Motor Speed Control	23	VREF	Bias Voltage
10	FWD	CH5 Forward Input	24	VCC	Supply Voltage(CH1,CH4)
11	REV	CH5 Reverse Input	25	IN4	CH4 Drive Input
12	IN2	CH2 Drive Input	26	DO4+	CH4 Drive Output (+)
13	DO2+	CH2 Drive Output (+)	27	DO4-	CH4 Drive Output (-)
14	DO2-	CH2 Drive Output (-)	28	GND3	Power Ground2 (CH 1,4)


## ■ KA78R33

### Low Dropout Voltage Regulator

#### Description


The KA78R33 is a low-dropout voltage regulator suitable for various electronic equipments. It provides constant voltage power source with TO-220 4 lead full mold package. Dropout voltage of KA78R33 is below 0.5V in full rated current(1A). This regulator has various function such as peak current protection, thermal shut down, overvoltage protection and output disable function.

#### Internal Block Diagram

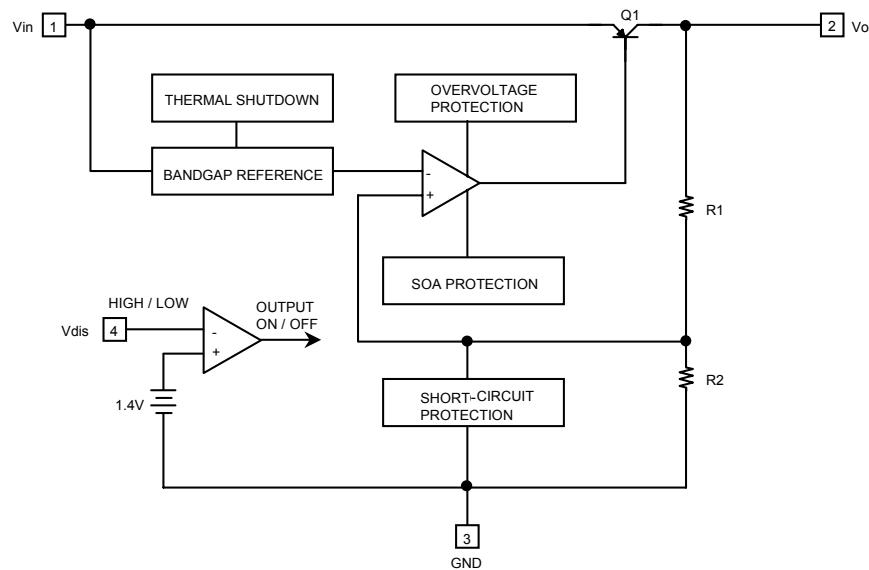


## ■ LC72131

### AM/FM PLL Frequency Synthesizer

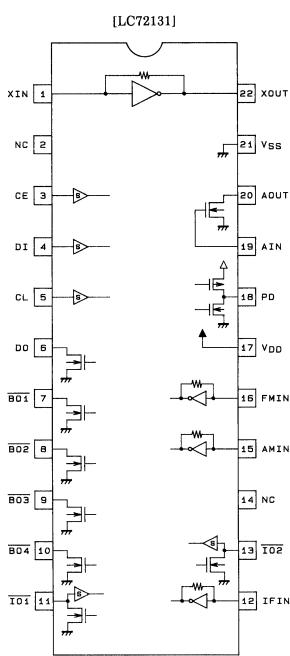

Top view A02895

## Block Diagram

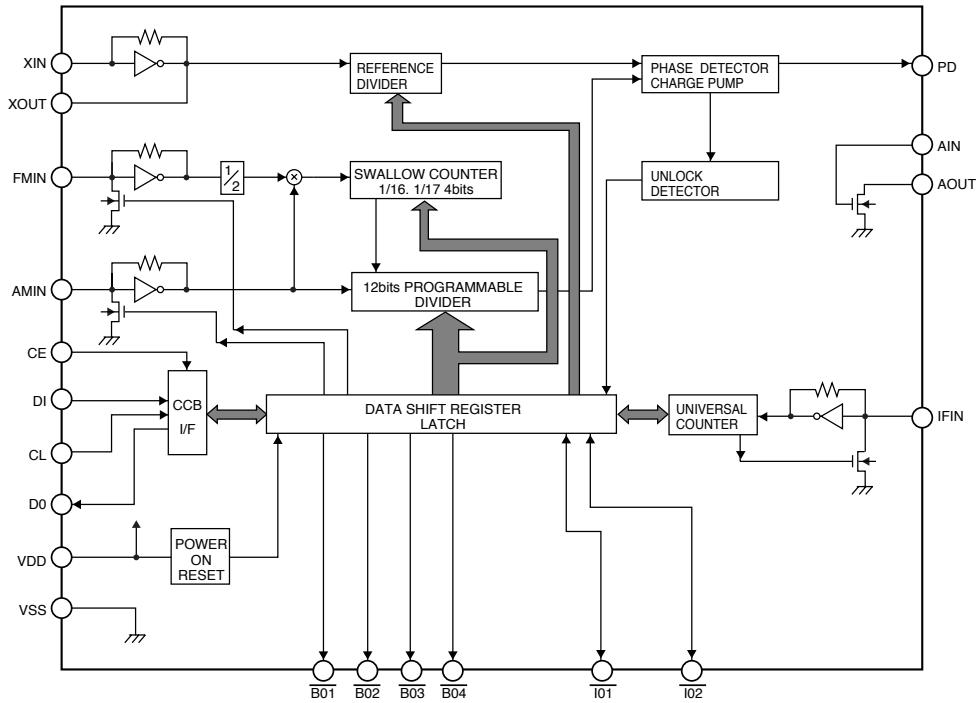


## ■ LA1837

### Single-Chip Home stereo IC with Electronic Tuning Support

The LA1837 is a single-chip AM/FM IF and MPX IC that supports electronic tuning and was developed for use in home stereo systems. It is optimal for use in automatic station selection systems that use the SD and IF counting techniques.

## Block Diagram

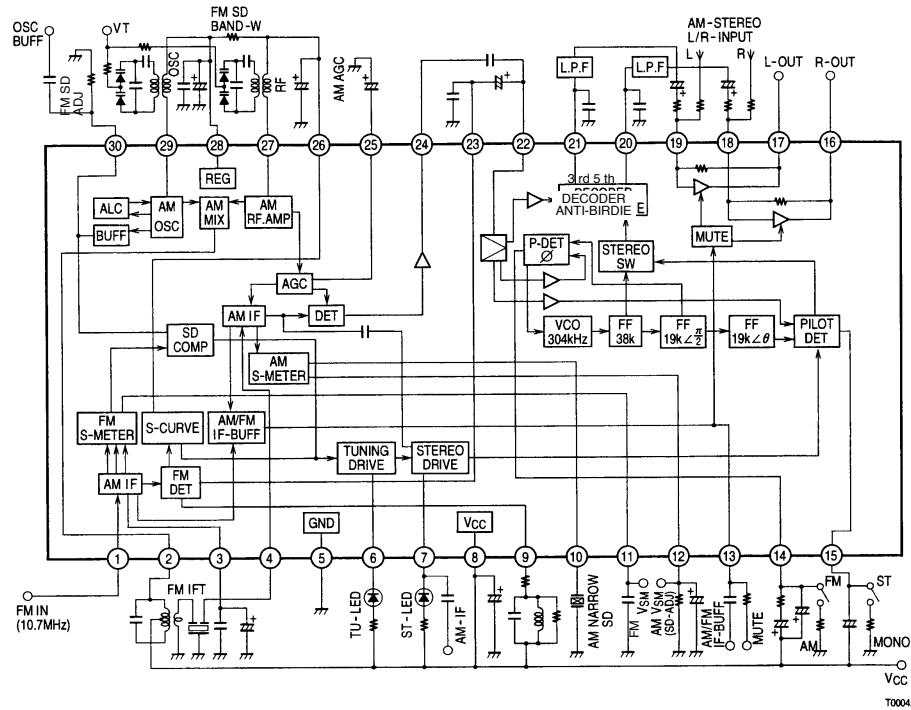

# ■ KIA 78R12 PI

## 4 TERMINAL LOW DROP VOLTAGE REGULATOR

The KIA78RX Series are Low Drop Voltage Regulator suitable for various electronic equipments. It provides constant voltage power source with TO-220 4 terminal lead full molded PKG. The Regulator has multi function such as over current protection, overheat protection and ON/OFF control.

### ELECTRICAL CHARACTERISTICS

(Unless otherwise specified,  $I_o=0.5A$ ,  $T_a=25^\circ C$ , Note1.)

CHARACTERISTIC	SYMBOL	CONDITIONS	MIN.	TYP.	MAX.	UNIT
Output Voltage	KIA78R05	$V_o$	-	4.88	5.0	5.12
	KIA78R06		-	5.85	6.0	6.15
	KIA78R08		-	7.80	8.0	8.2
	KIA78R09		-	8.78	9.0	9.22
	KIA78R10		-	9.75	10.0	10.25
	KIA78R12		-	11.70	12.0	12.30
	KIA78R15		-	14.70	15.0	15.30
Load Regulation	Reg Load	$I_o=5mA \sim 1A$	-	0.1	2.0	%
Line Regulation	Reg Line	(Note 2)	-	0.5	2.5	%
Ripple Rejection	$R \cdot R$		45	55	-	dB
Drop Out Voltage	$V_D$	(Note 3)	-	-	0.5	V
Output ON state for control Voltage	$V_{C(ON)}$		2.0	-	-	V
Output ON state for control Current	$I_{C(ON)}$	$V_C=2.7V$	-	-	20	$\mu A$
Output OFF state for control Voltage	$V_{C(OFF)}$	-	-	-	0.8	V
Output OFF state for control Current	$I_{C(OFF)}$	$V_C=0.4V$	-	-	-0.4	mA
Quiescent Current	$I_Q$	$I_o=0$	-	-	10	mA


Note1)  $V_{IN}$  of KIA78R05=7V

Note2)  $V_{IN}$  of KIA78R05=6~12V

Note3) At  $V_{IN}=0.95V_o$

- " KIA78R06=8V " KIA78R06=7~15V
- " KIA78R08=10V " KIA78R08=9~25V
- " KIA78R09=15V " KIA78R09=10~25V
- " KIA78R10=16V " KIA78R10=11~26V
- " KIA78R12=18V " KIA78R12=13~29V
- " KIA78R15=21V " KIA78R15=16~32V


## Block Diagram

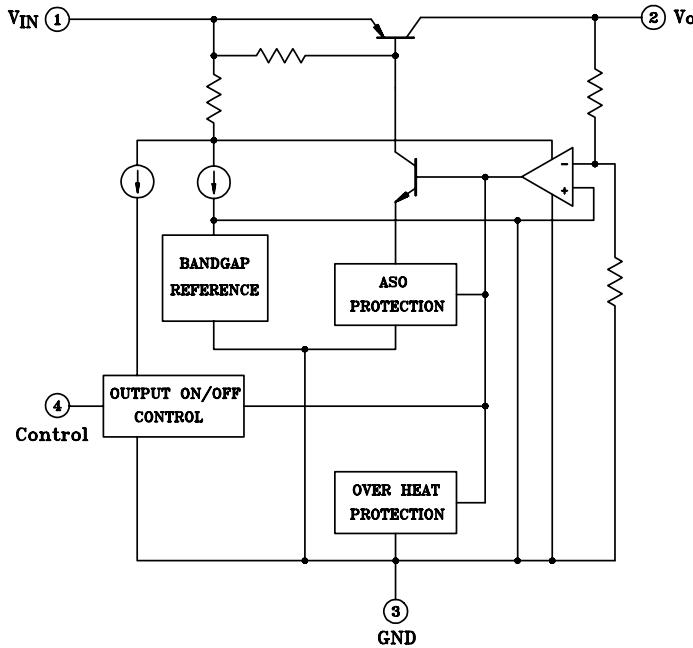

## ■ KIA7805AP/API

THREE TERMINAL POSITIVE VOLTAGE REGULATORS 5V, 6V, 8V, 9V, 10V, 12, 15V, 18V, 24V.


### EQUIVALENT CIRCUIT

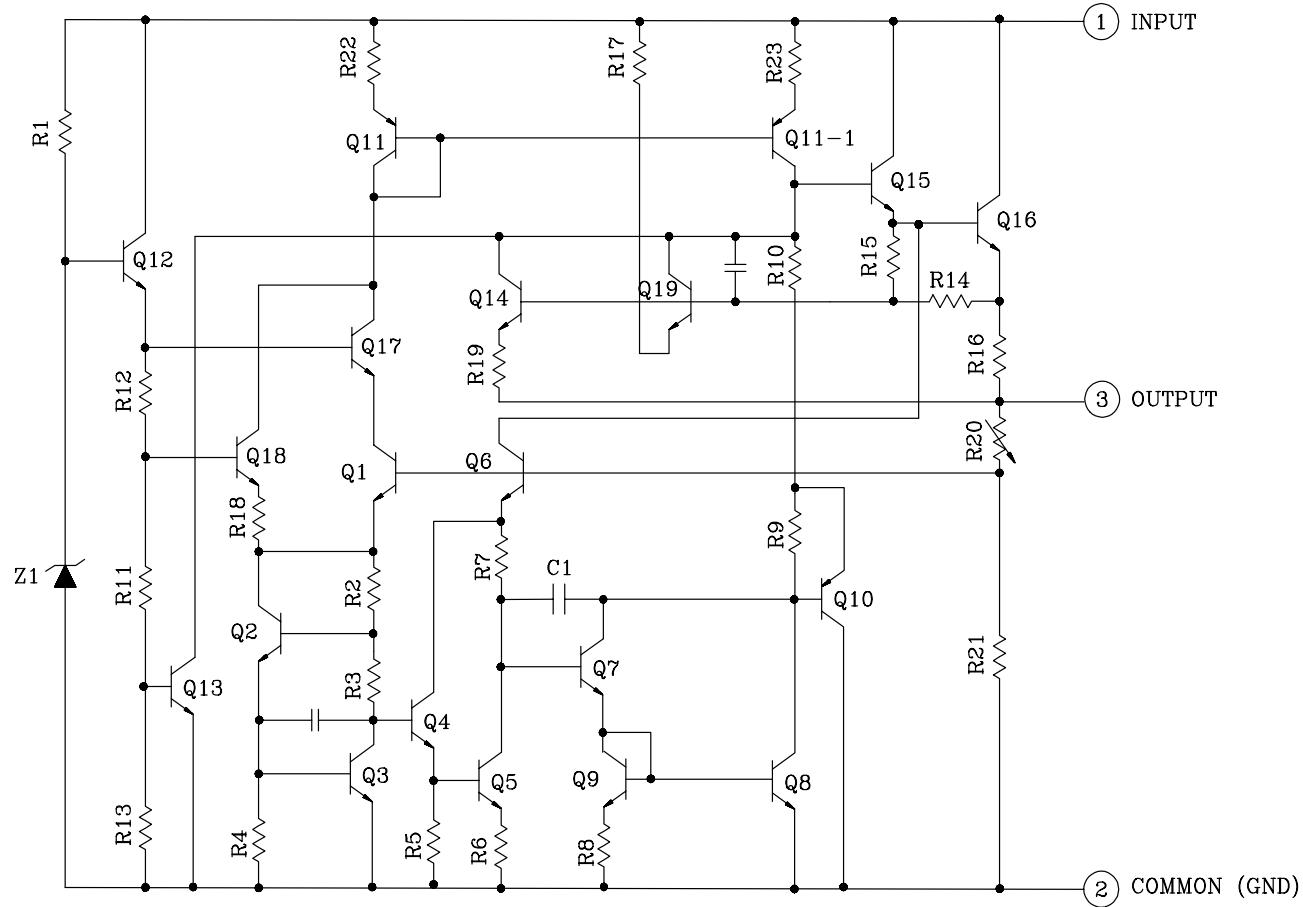

CHARACTERISTIC	SYMBOL	TEST CIRCUIT	TEST CONDITION		MIN.	TYP.	MAX.	UNIT
Output Voltage	$V_{OUT}$	1	$T_j=25^{\circ}C$ , $I_{OUT}=100mA$		4.8	5.0	5.2	V
Input Regulation	Reg line	1	$T_j=25^{\circ}C$	$7.0V \leq V_{IN} \leq 25V$	-	3	100	mV
				$8.0V \leq V_{IN} \leq 12V$	-	1	50	
Load Regulation	Reg load	1	$T_j=25^{\circ}C$	$5mA \leq I_{OUT} \leq 1.4A$	-	15	100	mV
				$250mA \leq I_{OUT} \leq 750mA$	-	5	50	
Output Voltage	$V_{OUT}$	1	$7.0V \leq V_{IN} \leq 20V$ $5.0mA \leq I_{OUT} \leq 1.0A$ , $P_o \leq 15W$		4.75	-	5.25	V
Quiescent Current	$I_B$	1	$T_j=25^{\circ}C$ , $I_{OUT}=5mA$		-	4.2	8.0	mA
Quiescent Current Change	$\Delta I_B$	1	$7.0V \leq V_{IN} \leq 25V$		-	-	1.3	mA
Output Noise Voltage	$V_{NO}$	1	$T_a=25^{\circ}C$ , $10Hz \leq f \leq 100kHz$ $I_{OUT}=50mA$		-	50	-	$\mu V_{rms}$
Ripple Rejection Ratio	RR	1	$f=120Hz$ , $8.0V \leq V_{IN} \leq 18V$ , $I_{OUT}=50mA$ , $T_j=25^{\circ}C$		62	78	-	dB
Dropout Voltage	$V_D$	1	$I_{OUT}=1.0A$ , $T_j=25^{\circ}C$		-	2.0	-	V
Short Circuit Current Limit	$I_{SC}$	1	$T_j=25^{\circ}C$		-	1.6	-	A
Average Temperature Coefficient of Output Voltage	$TC_{vo}$	1	$I_{OUT}=5mA$ , $0^{\circ}C \leq T_j \leq 125^{\circ}C$		-	-0.6	-	mV/°C

## ■ BA3126N


2-channel head switch for radio cassette recorders

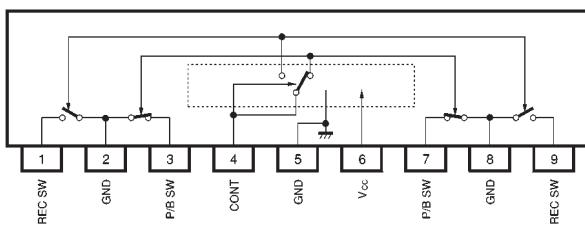

# ■ BU2090F

12-bit, Serial IN, Parallel OUT driver

## Block diagram


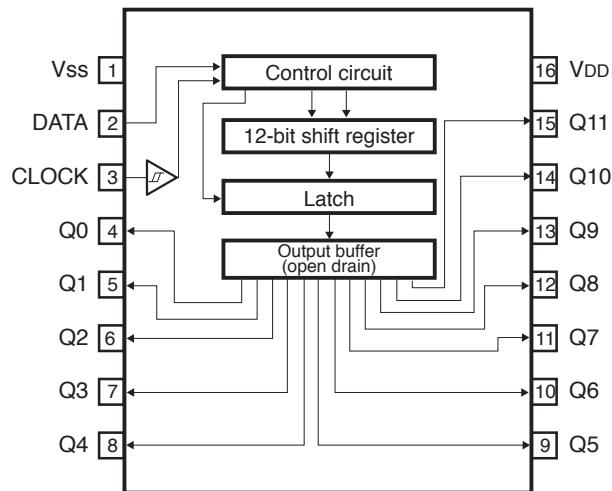


## PIN DESCRIPTION

Pin No.			Pin name	Function
BU2090/F/FS	BU2092/F	BU2092/FV		
1	1	1	Vss	GND
2	2	2	DATA	Serial data input
3	3	3	CLOCK	Data shift clock input
-	4	4	LCK	Data latch clock input
4	5	5	Q0	parallel data output
5	6	6	Q1	parallel data output
6	7	7	Q2	parallel data output
7	8	8	Q3	parallel data output
8	9	9	Q4	parallel data output
9	10	10	Q5	parallel data output
10	11	11	Q6	parallel data output
-	-	12	N.C.	Not connected
-	-	13	N.C.	Not connected
11	12	14	Q7	parallel data output
12	13	15	Q8	parallel data output
13	14	16	Q9	parallel data output
14	15	17	Q10	parallel data output
15	16	18	Q11	parallel data output
-	17	19	OE	Output Enable
16	18	20	V <sub>DD</sub>	Power supply

# REPAIRS REGARDING CD MECHANISM

## IMPROVED METHOD - WHEN THE TRAY GEARS WERE DISTORTED

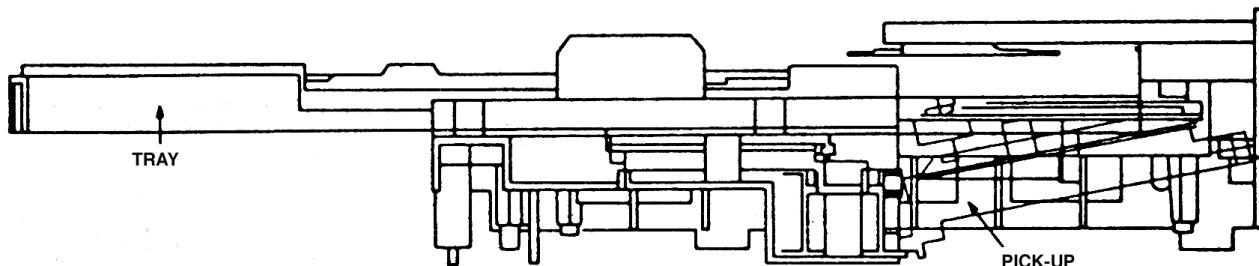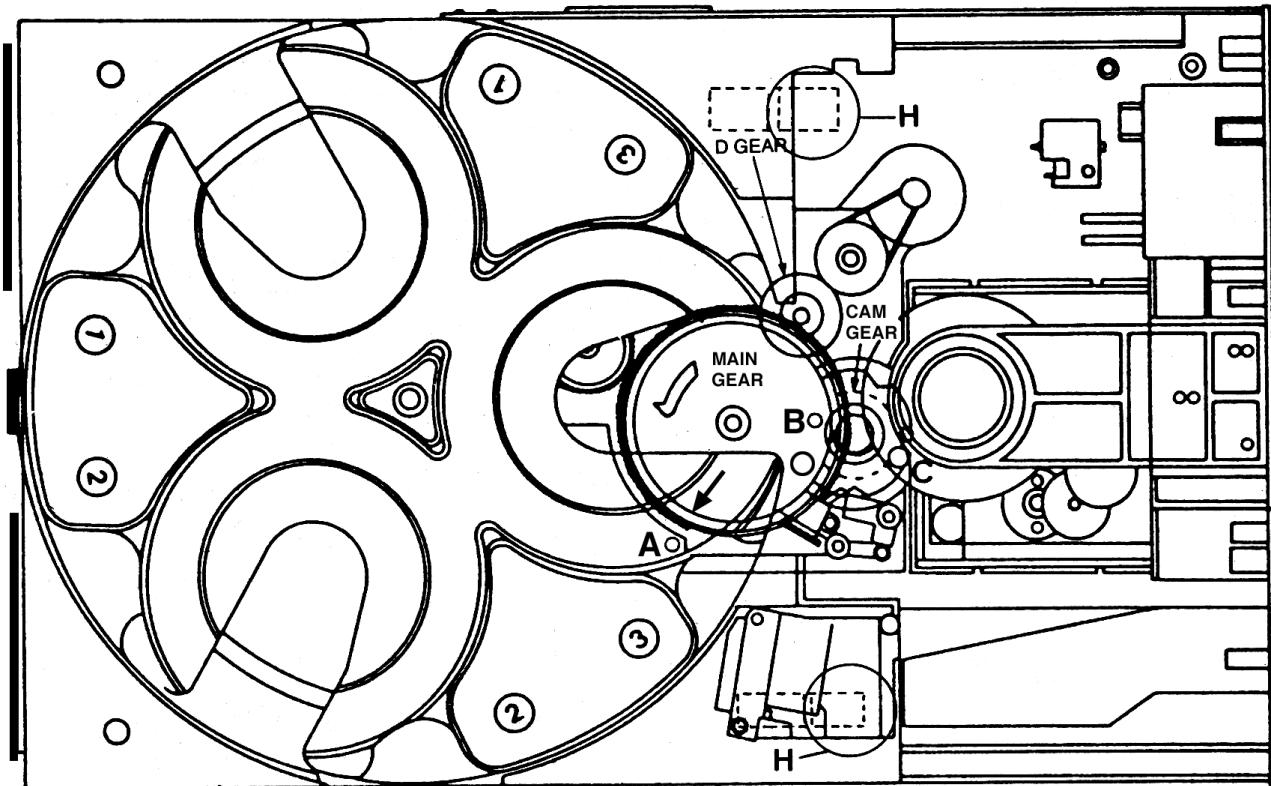

### 1. How to open the tray.

In case of not supplying power push two hooks (H) of the base, and them open the tray.

### 2. How to improve the distorted gears.

- (1) Do the hole "C" of the cam gear to face forward the pick-up so the pick-up is down like figure.
- (2) Do the hole "B" of main gear to face forward pick-up, too.
- (3) Set the last part of main gear to point "A".
- (4) Push the tray to end.


# **MEMO**

---


# SECTION 3. EXPLODED VIEWS

## • CABINET AND MAIN FRAME SECTION


NOTE) Refer to "SECTION 5 REPLACEMENT PARTS LIST" in order to look for the part number of each part.

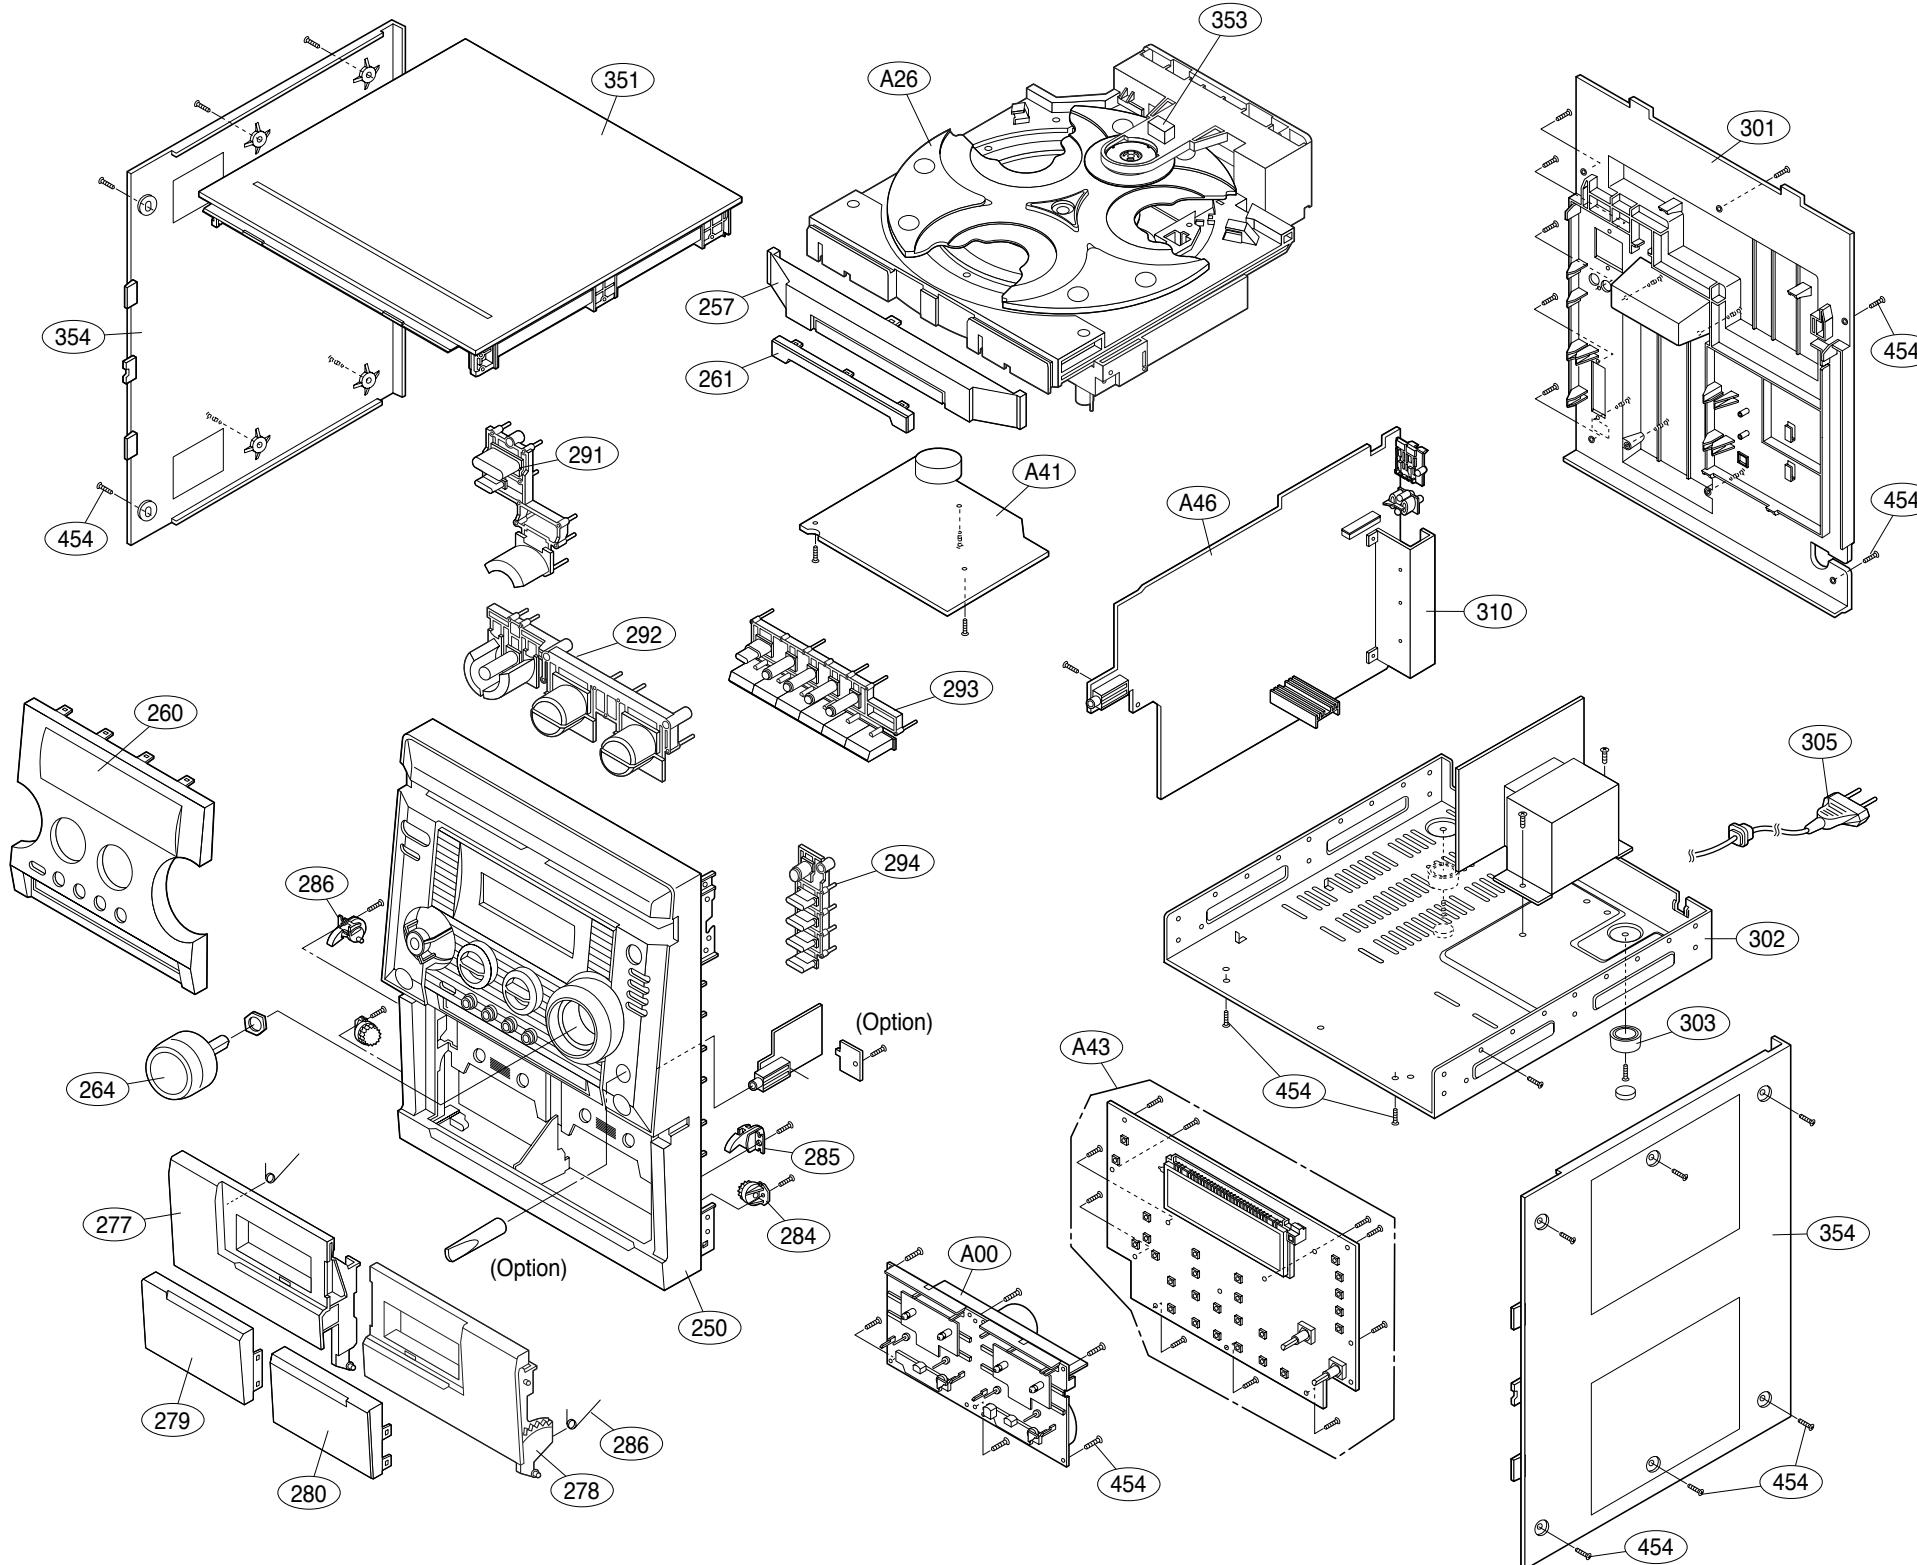


• TAPE DECK MECHANISM: AUTO STOP DECK(OPTIONAL)

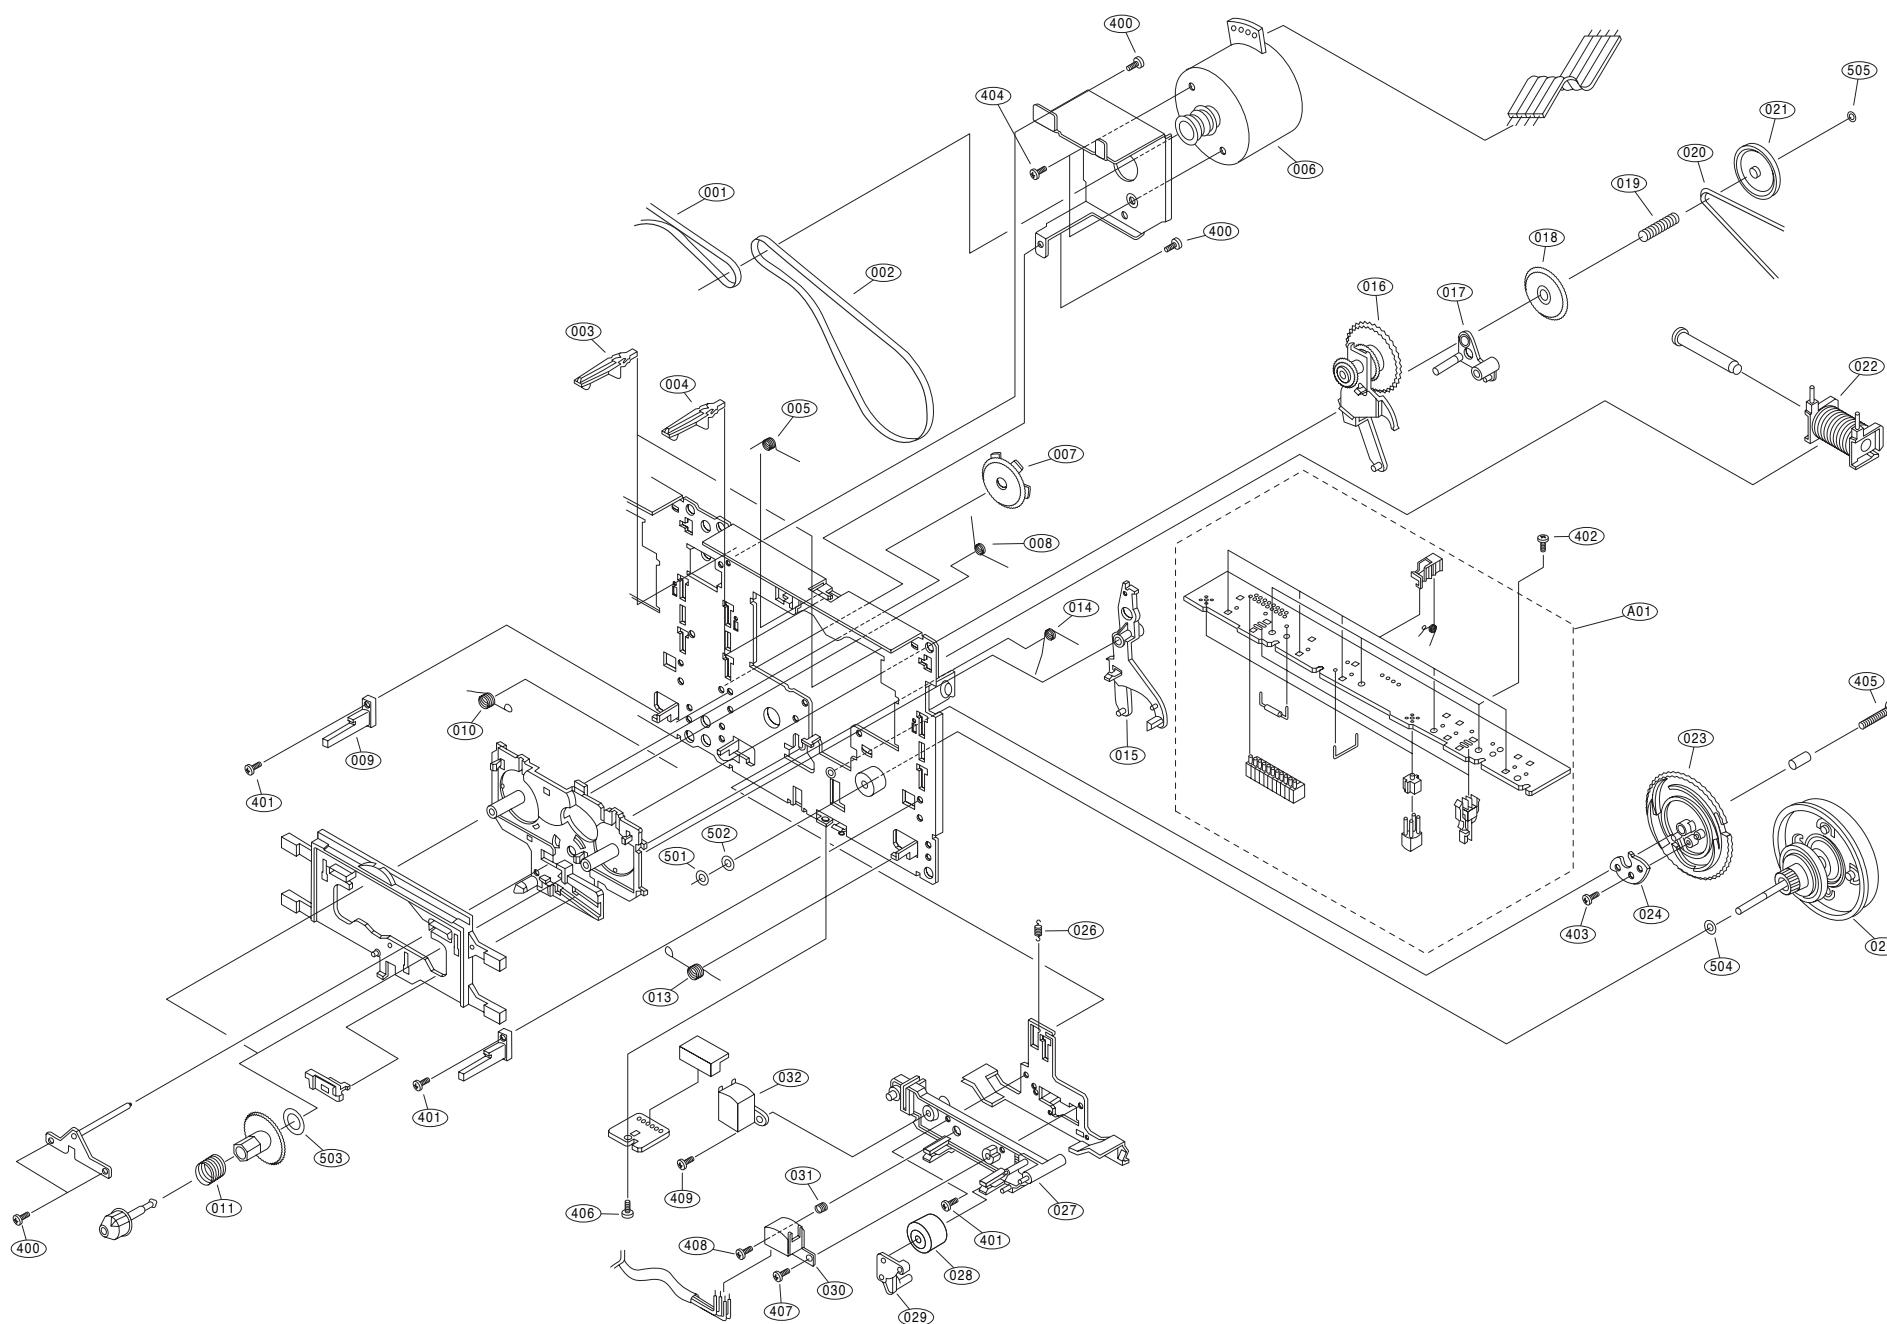

• TAPE DECK MECHANISM: AUTO REVERSE DECK

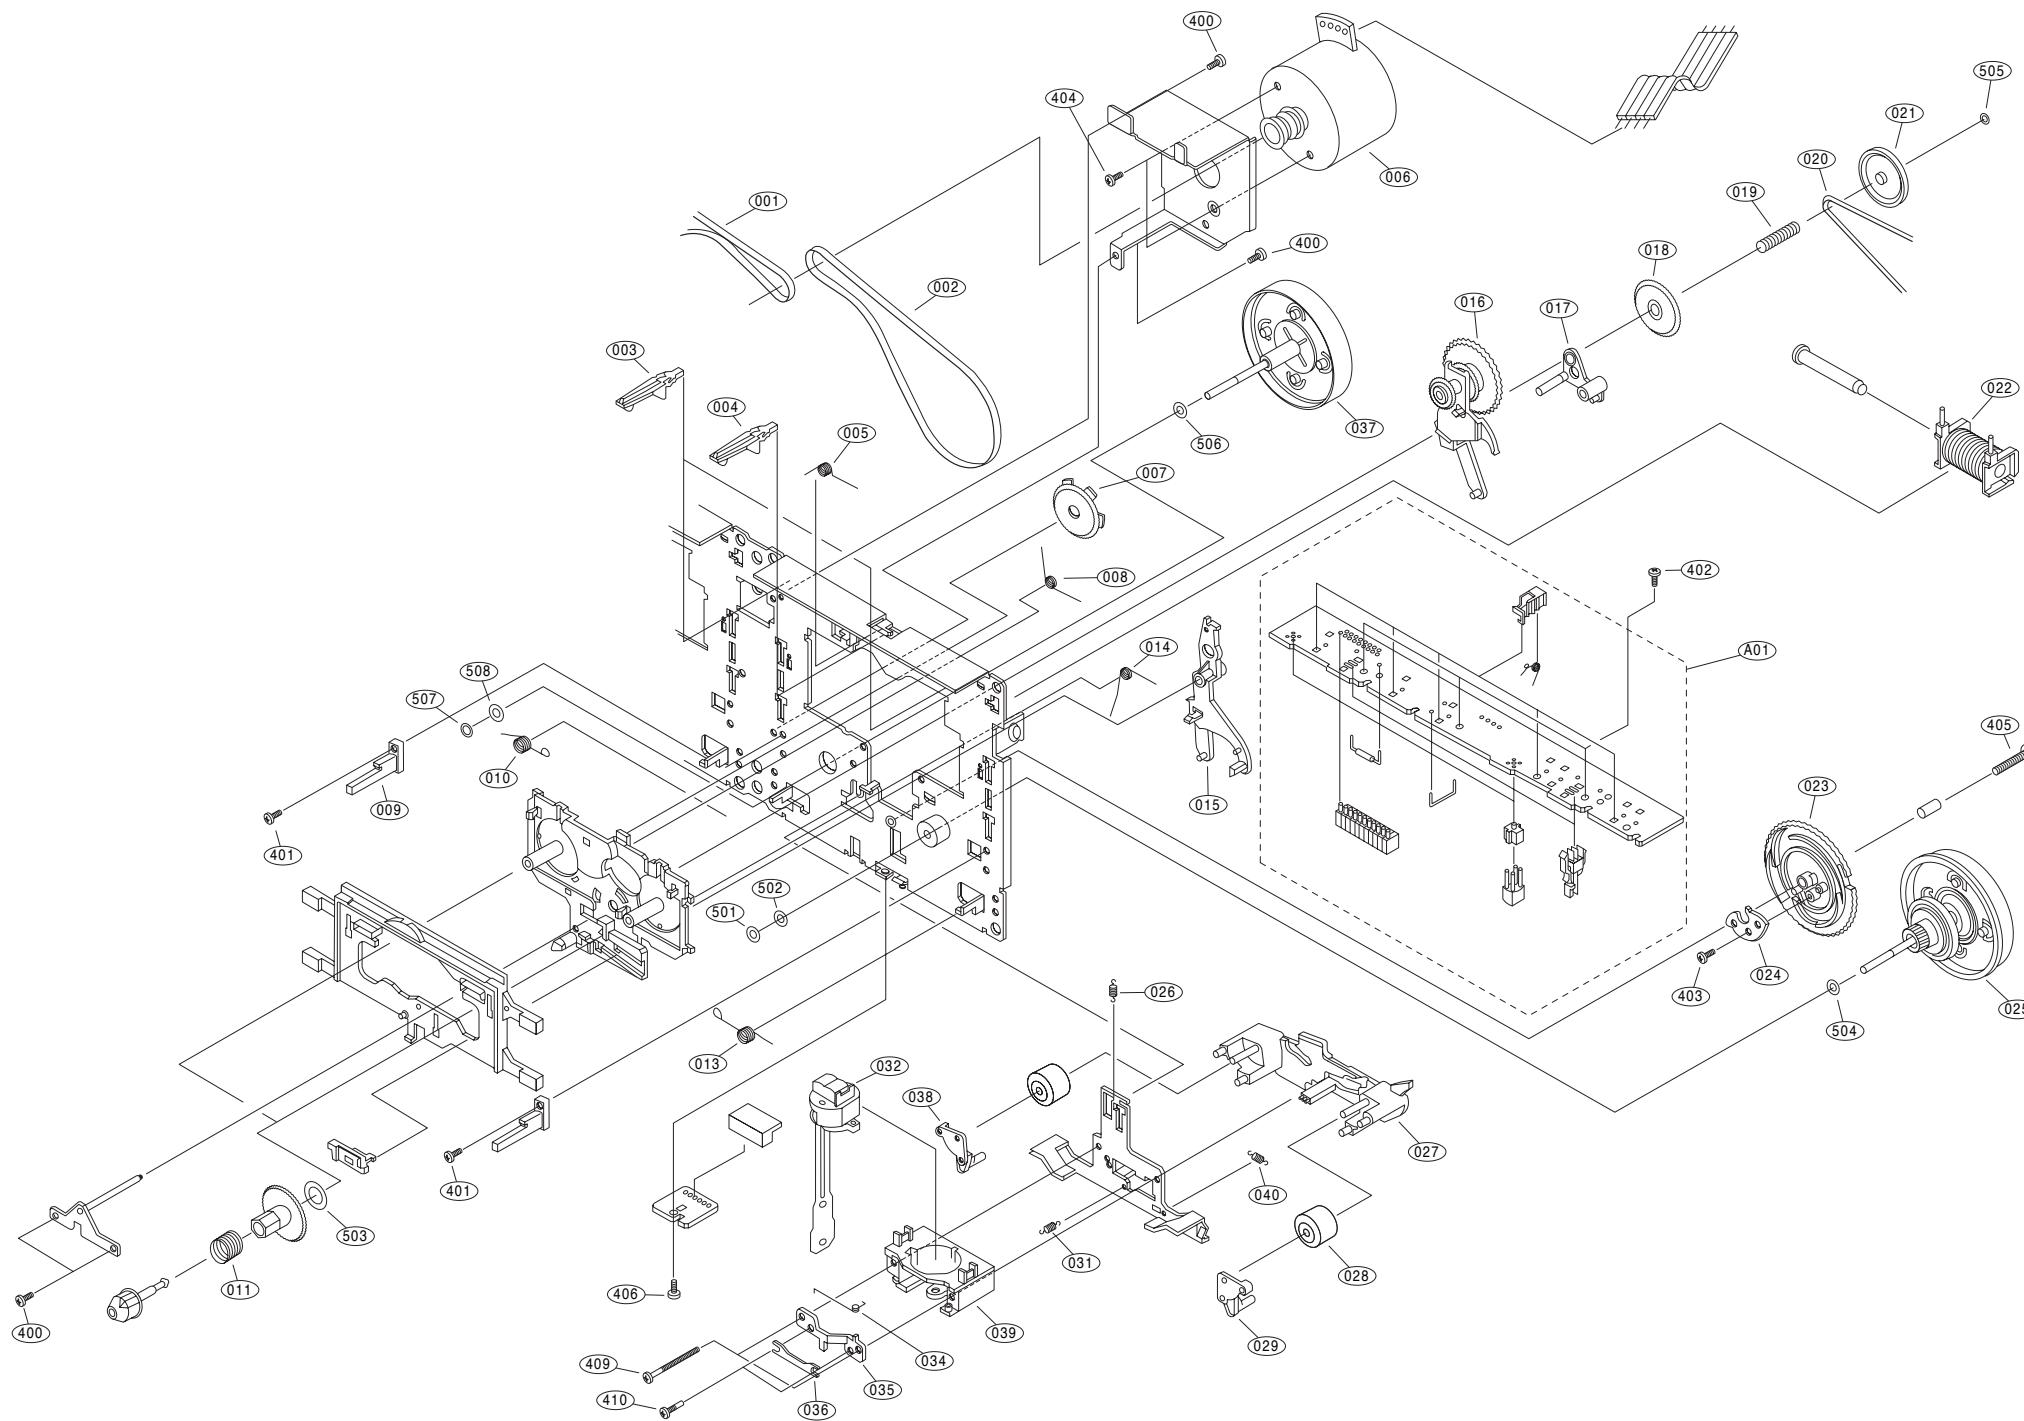


• CD MECHANISM

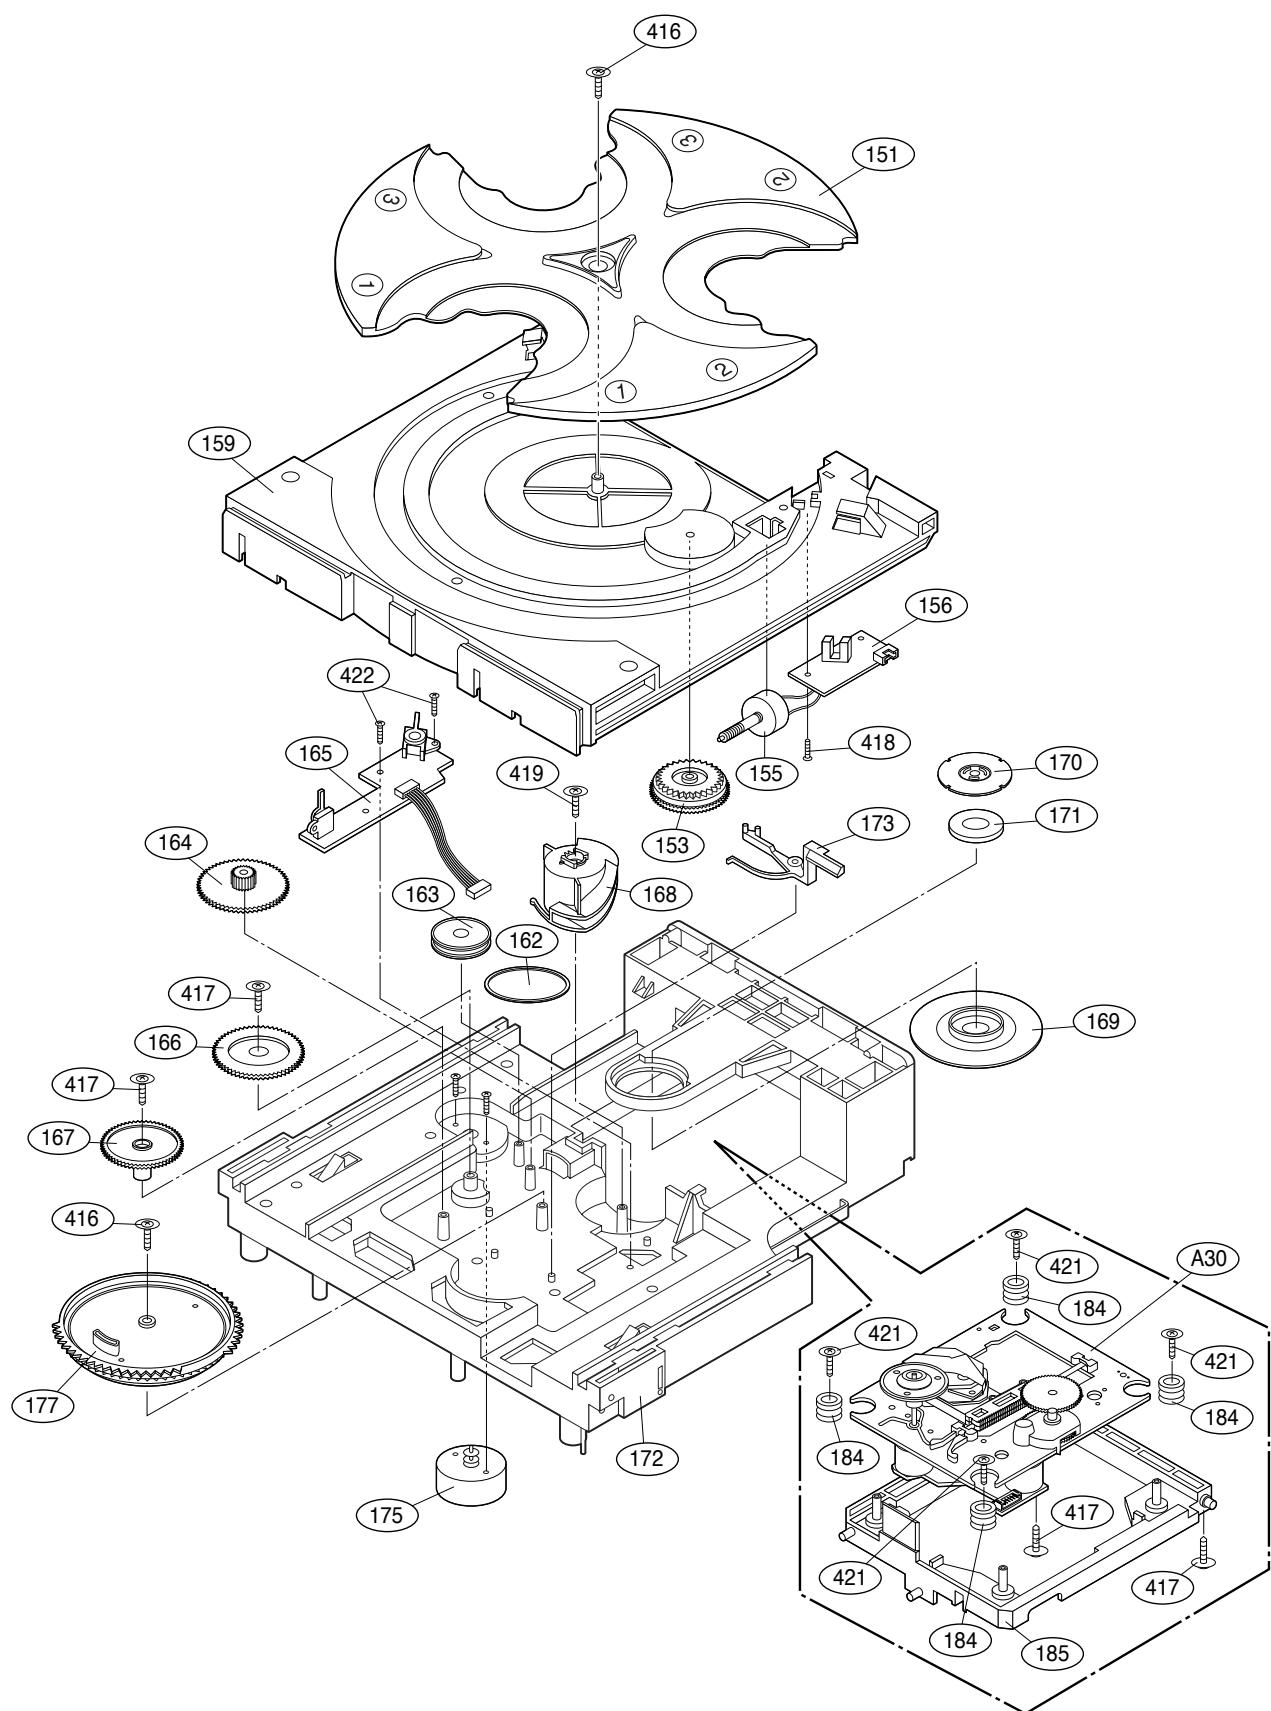

# SECTION 4. SPEAKER SECTION

## MODEL: FE-286E

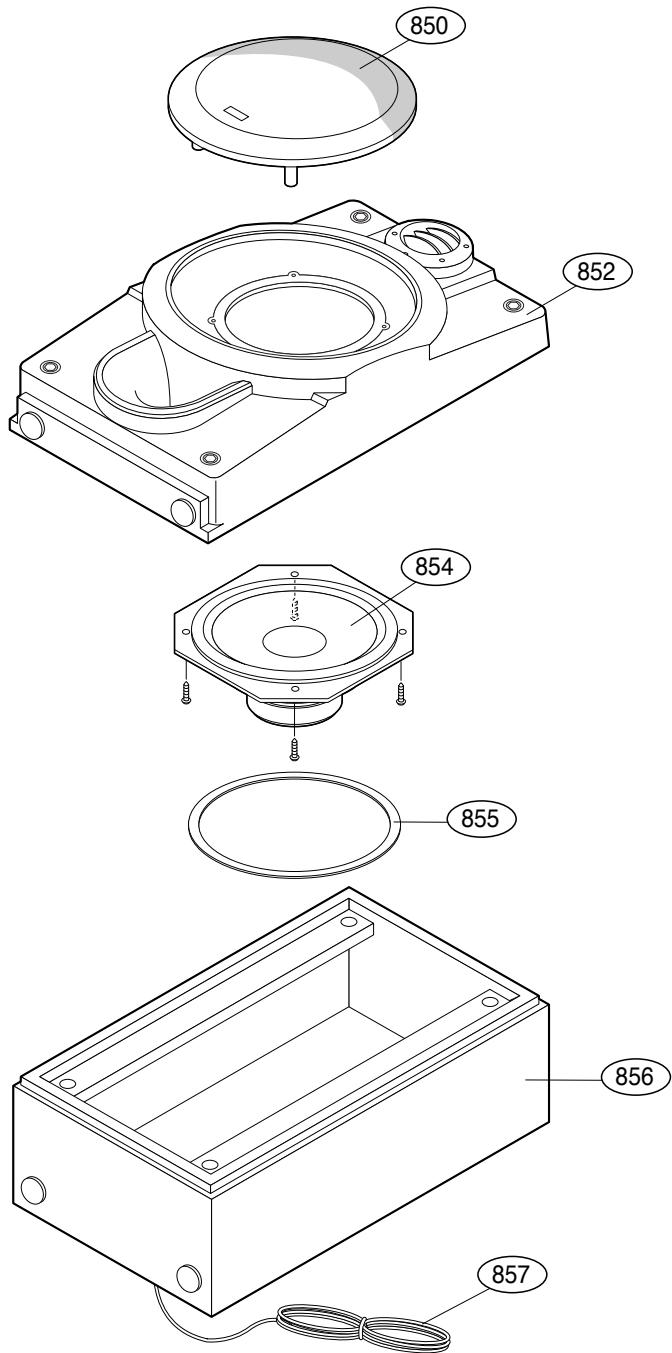

# **MEMO**

---