


# DVD/CD RECEIVER SERVICE MANUAL



MODEL: HT302SD(SH32SD-S/SH32SD-W)

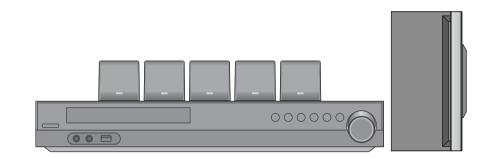

P/NO : AFN31640725 NOVEMBER, 2006

## [CONTENTS] —

SECTION 1. GENERAL• SERVICING PRECAUTIONS1-2• ESD PRECAUTIONS1-4• SERVICE INFORMATION FOR EEPROM1-5• SPECIFICATIONS1-7
SECTION 2. AUDIO PART  • AUDIO TROUBLESHOOTING GUIDE 2-1  • WIRING DIAGRAM 2-4  • BLOCK DIAGRAM 2-6  • CIRCUIT DIAGRAMS 2-8  • PRINTED CIRCUIT DIARGAMS 2-24
SECTION 3. DVD & AMP PART  • ELECTRICAL TROUBLESHOOTING GUIDE
SECTION 4. EXPLODED VIEWS

## **SECTION 1. GENERAL**

# SERVICING PRECAUTIONS NOTES REGARDING HANDLING OF THE PICK-UP

#### 1. Notes for transport and storage

- 1) The pick-up should always be left in its conductive bag until immediately prior to use.
- 2) The pick-up should never be subjected to external pressure or impact.

Storage in conductive bag





Drop impact

#### 2. Repair notes

- 1) The pick-up incorporates a strong magnet, and so should never be brought close to magnetic materials.
- 2) The pick-up should always be handled correctly and carefully, taking care to avoid external pressure and impact. If it is subjected to strong pressure or impact, the result may be an operational malfunction and/or damage to the printed-circuit board.
- 3) Each and every pick-up is already individually adjusted to a high degree of precision, and for that reason the adjustment point and installation screws should absolutely never be touched.
- 4) Laser beams may damage the eyes!
  - Absolutely never permit laser beams to enter the eyes!


Also NEVER switch ON the power to the laser output part (lens, etc.) of the pick-up if it is damaged.



NEVER look directly at the laser beam, and don't let contact fingers or other exposed skin.

#### 5) Cleaning the lens surface

If there is dust on the lens surface, the dust should be cleaned away by using an air bush (such as used for camera lens). The lens is held by a delicate spring. When cleaning the lens surface, therefore, a cotton swab should be used, taking care not to distort this.

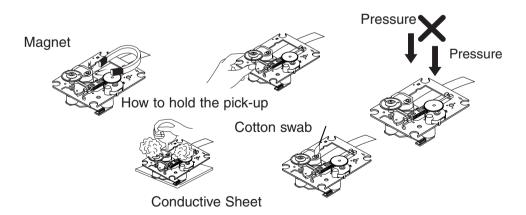

Never attempt to disassemble the pick-up.

Spring by excess pressure. If the lens is extremely dirty, apply isopropyl alcohol to the cotton swab. (Do not use any other liquid cleaners, because they will damage the lens.) Take care not to use too much of this alcohol on the swab, and do not allow the alcohol to get inside the pick-up.

#### NOTES REGARDING COMPACT DISC PLAYER REPAIRS


#### 1. Preparations

- 1) Compact disc players incorporate a great many ICs as well as the pick-up (laser diode). These components are sensitive to, and easily affected by, static electricity. If such static electricity is high voltage, components can be damaged, and for that reason components should be handled with care.
- 2) The pick-up is composed of many optical components and other high-precision components. Care must be taken, therefore, to avoid repair or storage where the temperature of humidity is high, where strong magnetism is present, or where there is excessive dust.

#### 2. Notes for repair

- 1) Before replacing a component part, first disconnect the power supply lead wire from the unit
- 2) All equipment, measuring instruments and tools must be grounded.
- 3) The workbench should be covered with a conductive sheet and grounded.

  When removing the laser pick-up from its conductive bag, do not place the pick-up on the bag. (This is because there is the possibility of damage by static electricity.)
- 4) To prevent AC leakage, the metal part of the soldering iron should be grounded.
- 5) Workers should be grounded by an armband (1M  $\Omega$ )
- 6) Care should be taken not to permit the laser pick-up to come in contact with clothing, in order to prevent static electricity changes in the clothing to escape from the armband.
- 7) The laser beam from the pick-up should NEVER be directly facing the eyes or bare skin.

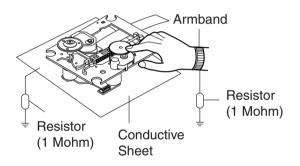

#### **ESD PRECAUTIONS**

#### **Electrostatically Sensitive Devices (ESD)**

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive Devices (ESD). Examples of typical ESD devices are integrated circuits and some field-effect transistors and semiconductor chip components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

- 1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
- 2. After removing an electrical assembly equipped with ESD devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
- 3. Use only a grounded-tip soldering iron to solder or unsolder ESD devices.
- 4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ESD devices.
- 5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ESD devices.
- 6. Do not remove a replacement ESD device from its protective package until immediately before you are ready to install it. (Most replacement ESD devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive materials).
- 7. Immediately before removing the protective material from the leads of a replacement ESD device, touch the protective material to the chassis or circuit assembly into which the device will by installed.

## CAUTION: BE SURE NO POWER IS APPLIED TO THE CHASSIS OR CIRCUIT, AND OBSERVE ALL OTHER SAFETY PRECAUTIONS.

8. Minimize bodily motions when handing unpackaged replacement ESD devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ESD device).

#### CAUTION. GRAPHIC SYMBOLS




THE LIGHTNING FLASH WITH APROWHEAD SYMBOL. WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE SERVICE PERSONNEL TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK.




THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE SERVICE PERSONNEL TO THE PRESENCE OF IMPORTANT SAFETY INFORMATION IN SERVICE LITERATURE.

## SERVICE INFORMATION FOR EEPROM (DVD PART)

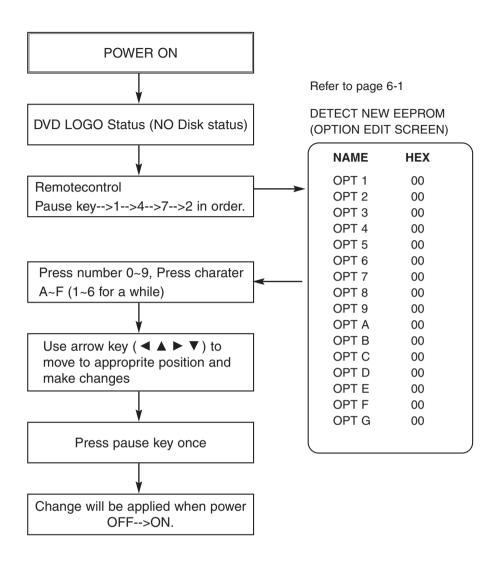

## **SERVICE INFORMATION FOR EEPROM (MICOM PART)**

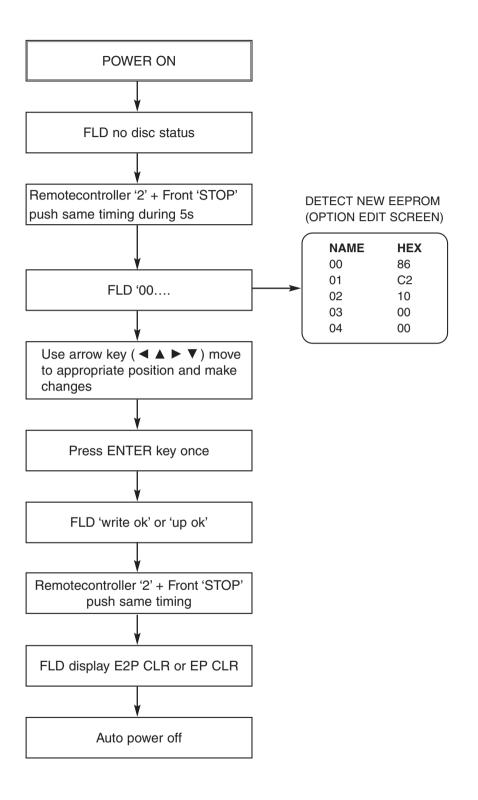

#### **SPECIFICATIONS**

**GENERAL** 

Power supply Refer to main label Power consumption Refer to main label

Net Weight 2.4 kg

External dimensions (W x H x D) 360 x 63 x 307 mm

Operating conditions Temperature: 5°C to 35°C, Operation status: Horizontal

Operating humidity 5% to 85%

CD/DVD

Laser Semiconductor laser, wavelength 650 nm

Signal system PAL 625/50, NTSC 525/60

Frequency response (audio) 160 Hz to 18 kHz

Signal-to-noise ratio (audio) More than 75 dB (1 kHz, NOP -6 dB, 20 kHz LPF/A-Filter)

Dynamic range (audio) More than 70 dB

Harmonic distortion (audio) 0.5 % (1 kHz, at 1W position) (20 kHz LPF)

**VIDEO** 

Video output 1.0 V (p-p), 75  $\Omega$ , negative sync./ SCART (TO TV) COMPONENT VIDEO OUT (Y) 1.0 V (p-p), 75 ohms, negative sync, RCA jack x 1

(Pb)/(Pr) 0.7 V (p-p), 75 ohms, RCA jack x 1

TUNER FM

Tuning Range 87.5 - 108.0 MHz or 65.0 - 74.0 MHz, 87.5 - 108.0 MHz

Intermediate Frequency 10.7 MHz
Signal-to Noise Ratio 60 dB (Mono)
Frequency Response 160 - 8,000 Hz

AM [MW]

Tuning Range 522 - 1,620 kHz or 520 - 1,720 kHz

Intermediate Frequency 450 kHz

**AMPLIFIER** 

Stereo mode 45W + 45W (Rated Output Power 30W, 4at 1 kHz, THD 10 %) Surround mode Front: 45W + 45W (Rated Output Power 30W, THD 10 %)

(\* Depending on the sound mode settings and the source, there may be no sound output.)

ttings and the source, there may

Surround\*: 45W + 45W (Rated Output Power 30W, 4at 1 kHz, THD 10 %)

Subwoofer\*: 75W (Rated Output Power 60W, 8at 30 Hz, THD 10 %)

Inputs AUX IN, MIC

**SPEAKERS** 

Type

Front/Center/Rear Speaker Passive Subwoofer

Centre\*: 45W

(SH32SD-S) (SH32SD-W) 1 Way1 Speaker 1 Way1 Speaker

Impedance 4  $\Omega$  8  $\Omega$ 

 Frequency Response
 160 - 20,000
 Hz 65 - 1,500 Hz

 Sound Pressure Level
 84 dB/W (1m)
 87 dB/W (1m)

Rated Input Power 45 W 75 W Max. Input Power 90 W 150 W

Net Dimensions (W x H x D) 98 x 101 x 105 mm 181 x 351 x 278 mm


Net Weight 0.52kg 3.4kg

### **MEMO**



## **SECTION 2. AUDIO PART**

### **AUDIO TROUBLESHOOTING GUIDE**


#### 1. POWER SUPPLY CIRCUIT

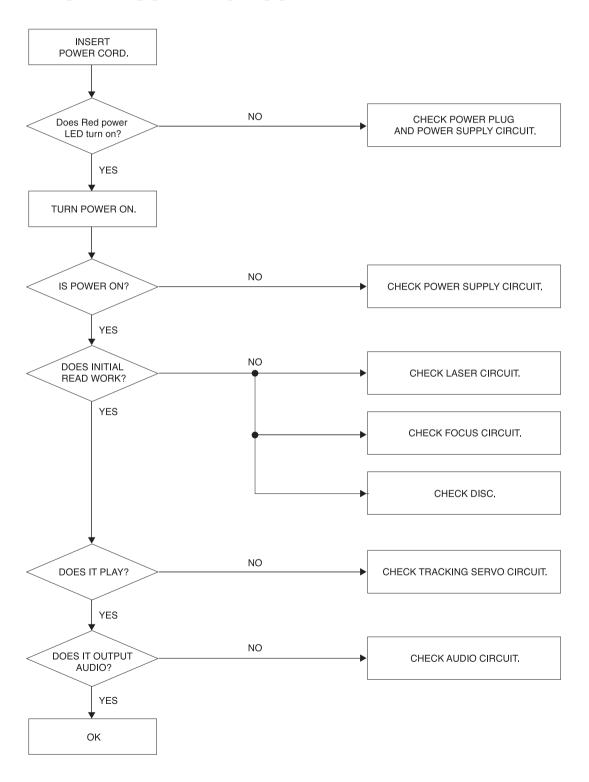


#### 2. FRONT CIRCUIT (1/2)

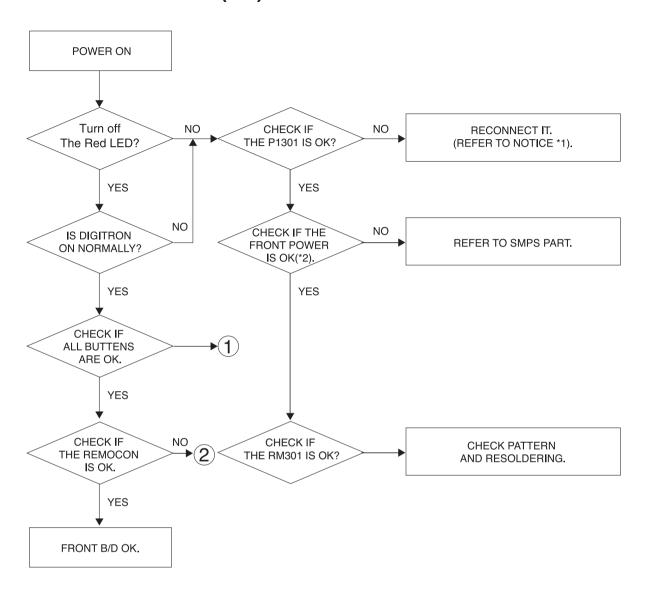


#### 3. FRONT CIRCUIT (2/2)

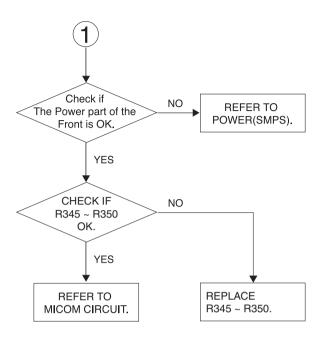

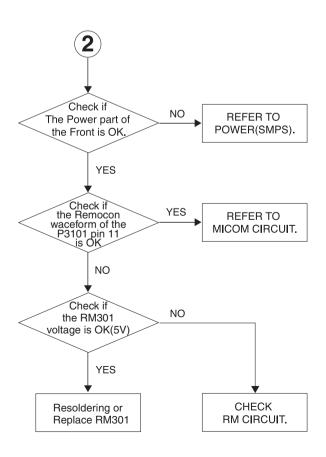


### **MEMO**


#### **WIRING DIAGRAM**

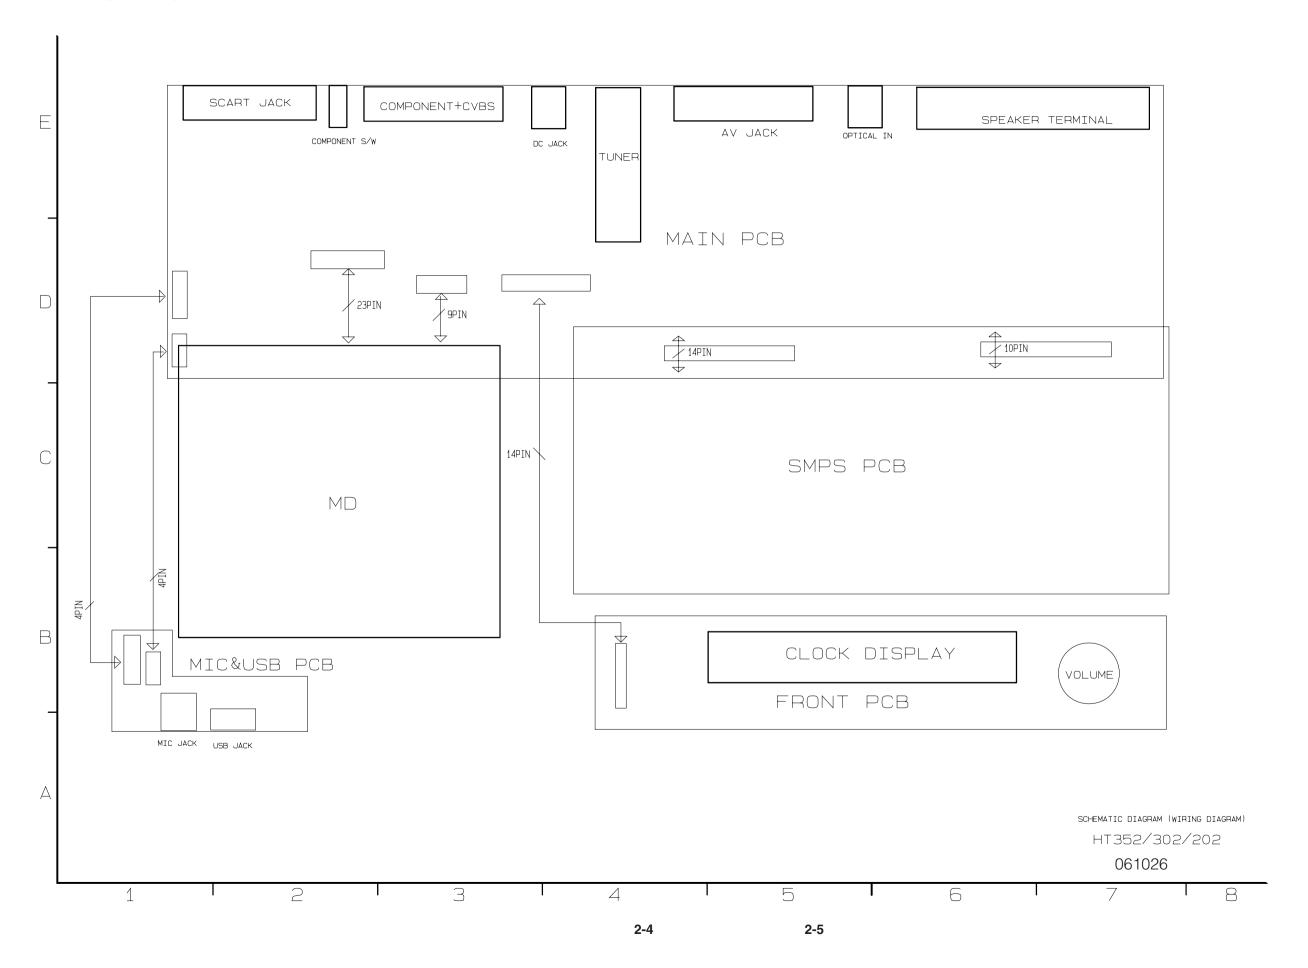

#### **BLOCK DIAGRAM**

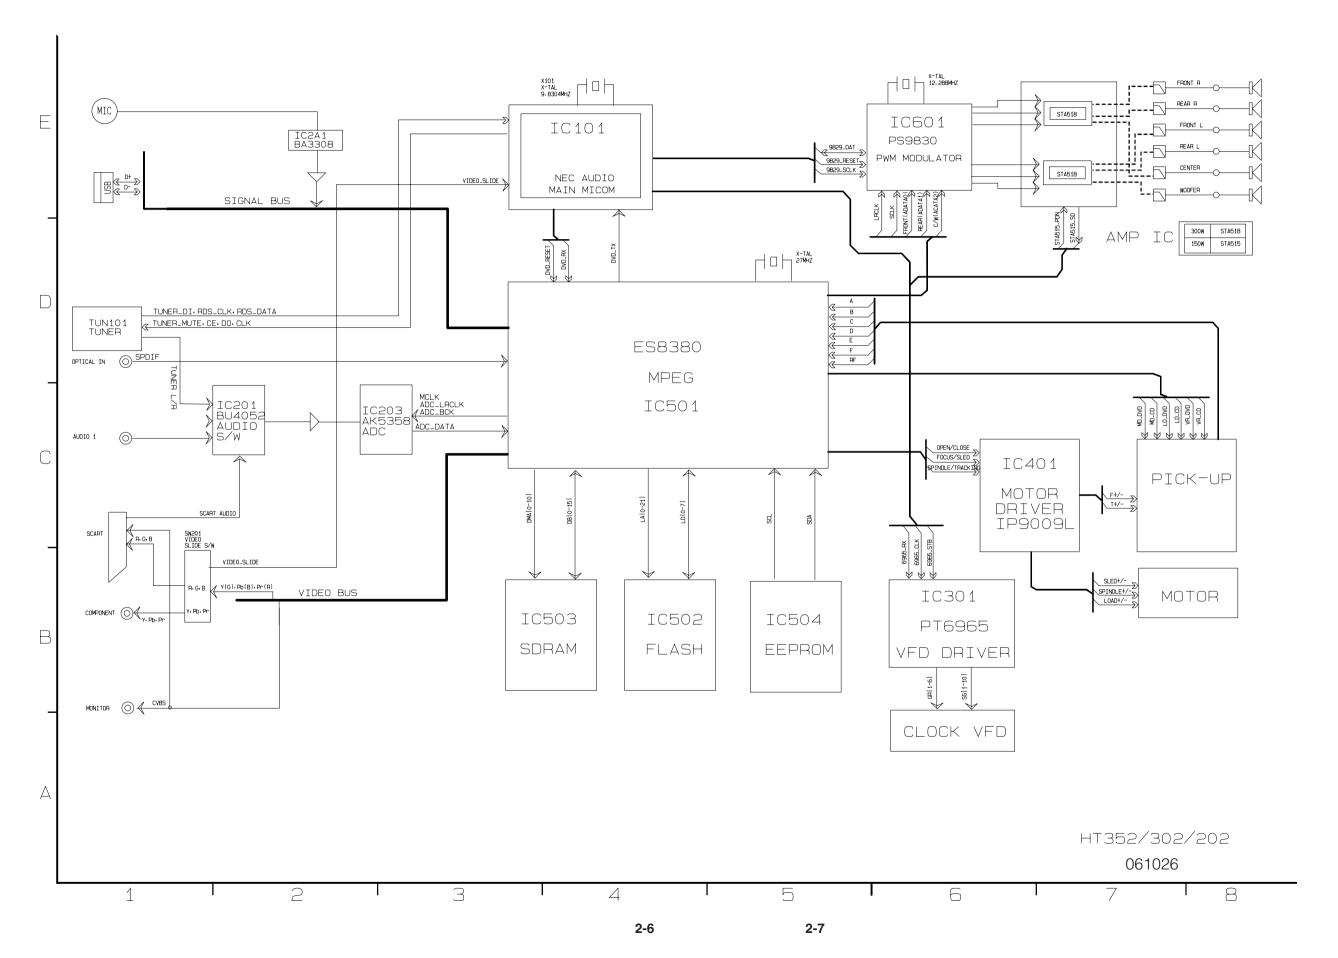

#### **CIRCUIT DIAGRAMS**

#### 1. SMPS(POWER) CIRCUIT DIAGRAM


WHEN SERVICING THIS CHASSIS. UNDER NO CIR-

SPECIAL COMPONENTS ARE SHADED ON THE


SCHEMATIC FOR EASY IDENTIFICATION.
THIS CIRCUIT DIAGRAM MAY OCCASIONALLY DIF-

- 1. Shaded(■) parts are critical for safety. Replace only
- with specified part number.

  2. Voltages are DC-measured with a digital voltmeter

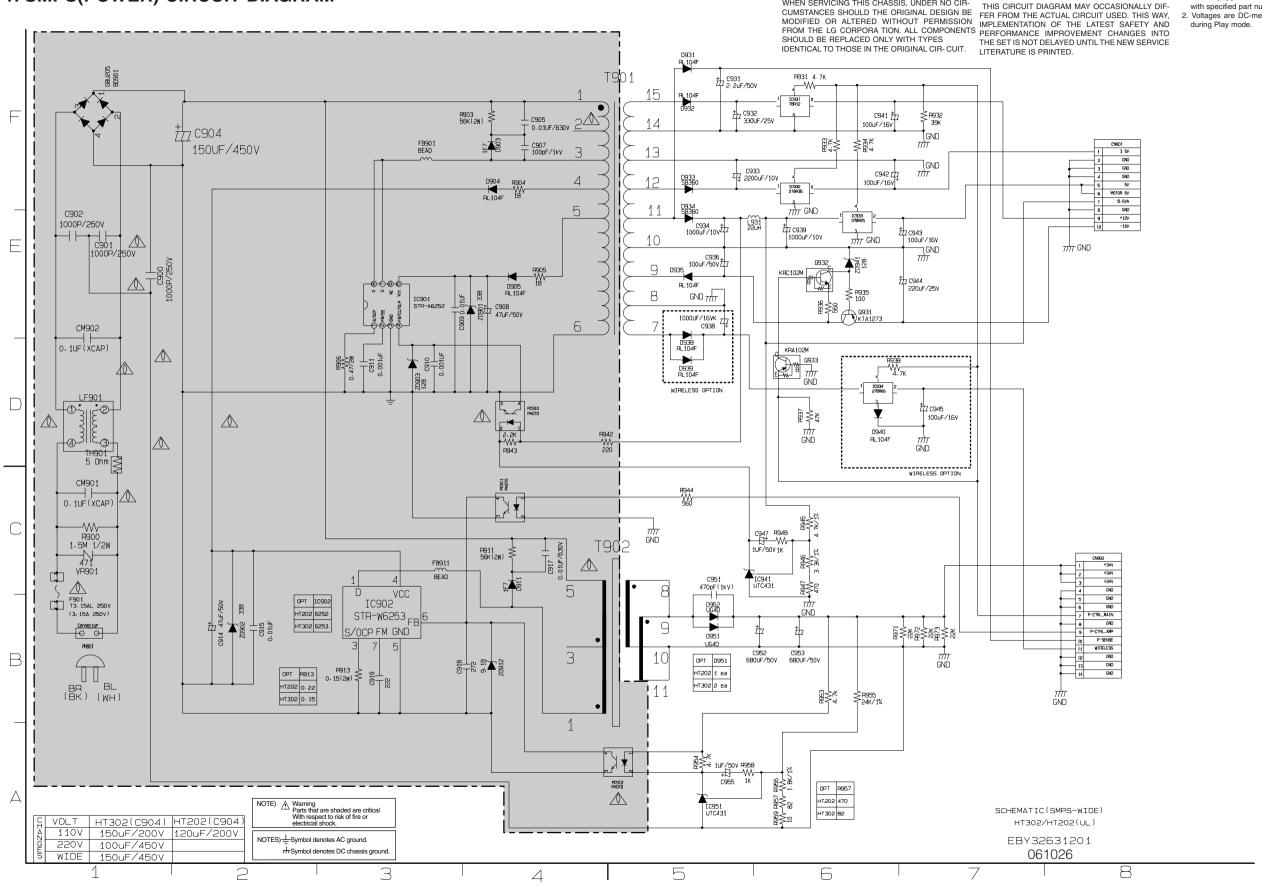


#### 2. μ-COM(MAIN) CIRCUIT DIAGRAM

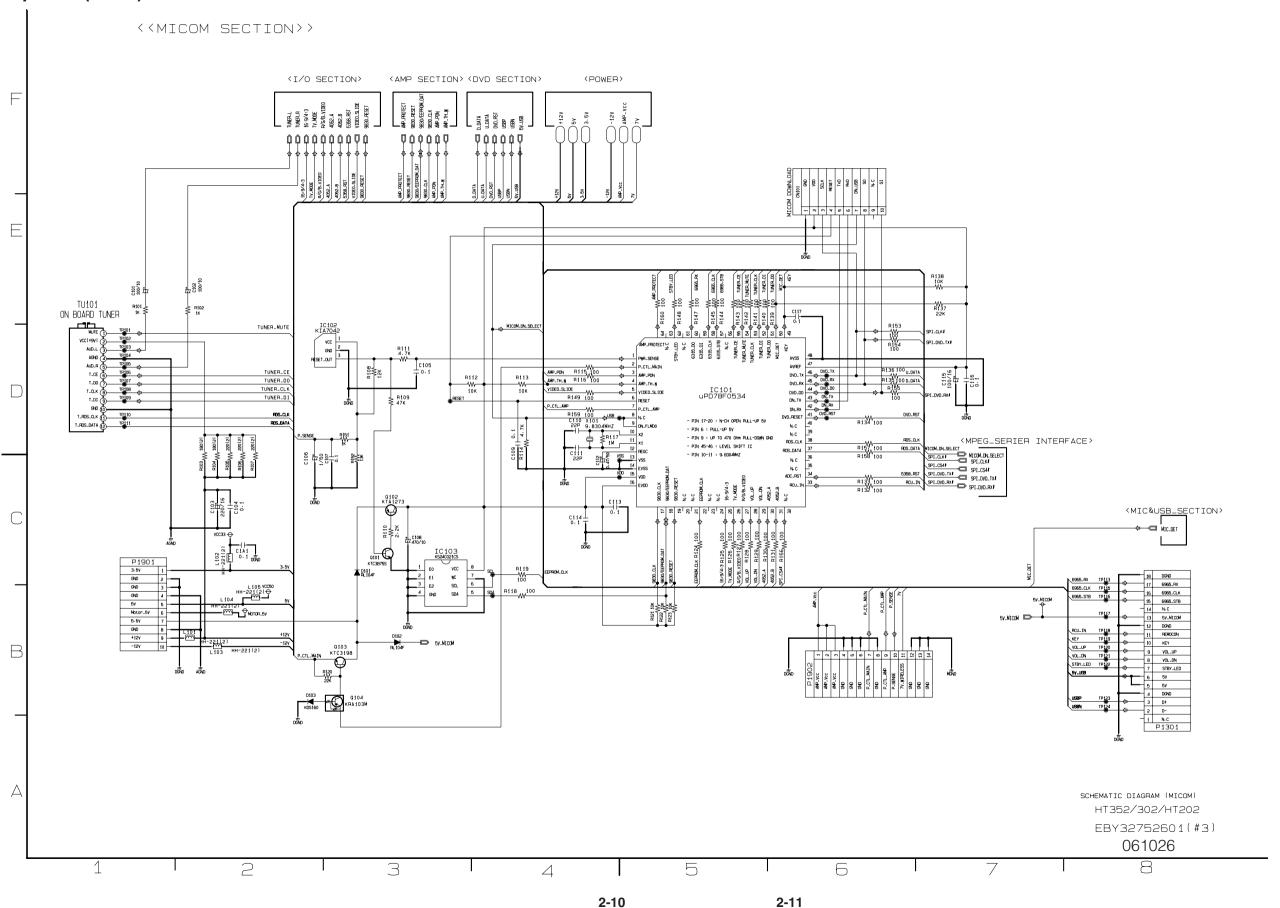

## 3. MOTOR & SERVO CIRCUIT DIAGRAM OPEN SVREF CLOSE/CART\_IN OPU (COMMON) —**□**F00 — ( TRO SPINDLED OVDLD CD\_DVD\_SLCT CD\_DVD\_SLCT — DADWDI —**(**□ (0)L0 SPNN SPNP P\_U\_DETECT RF MUTE PVCC2 GND V03-V03+ V04-V04+ R427 W 0 SLED+ SPIN+ SPIN-- С OUT\_SW IN\_SW 1 DECK SLED-SPIN+ SPIN-SCHEMATIC DIAGRAM(MOTOR/SERVO) HT352/302/202 EBY32752601(#4) 061026 2-12 2-13

#### 4. I/O CIRCUIT DIAGRAM

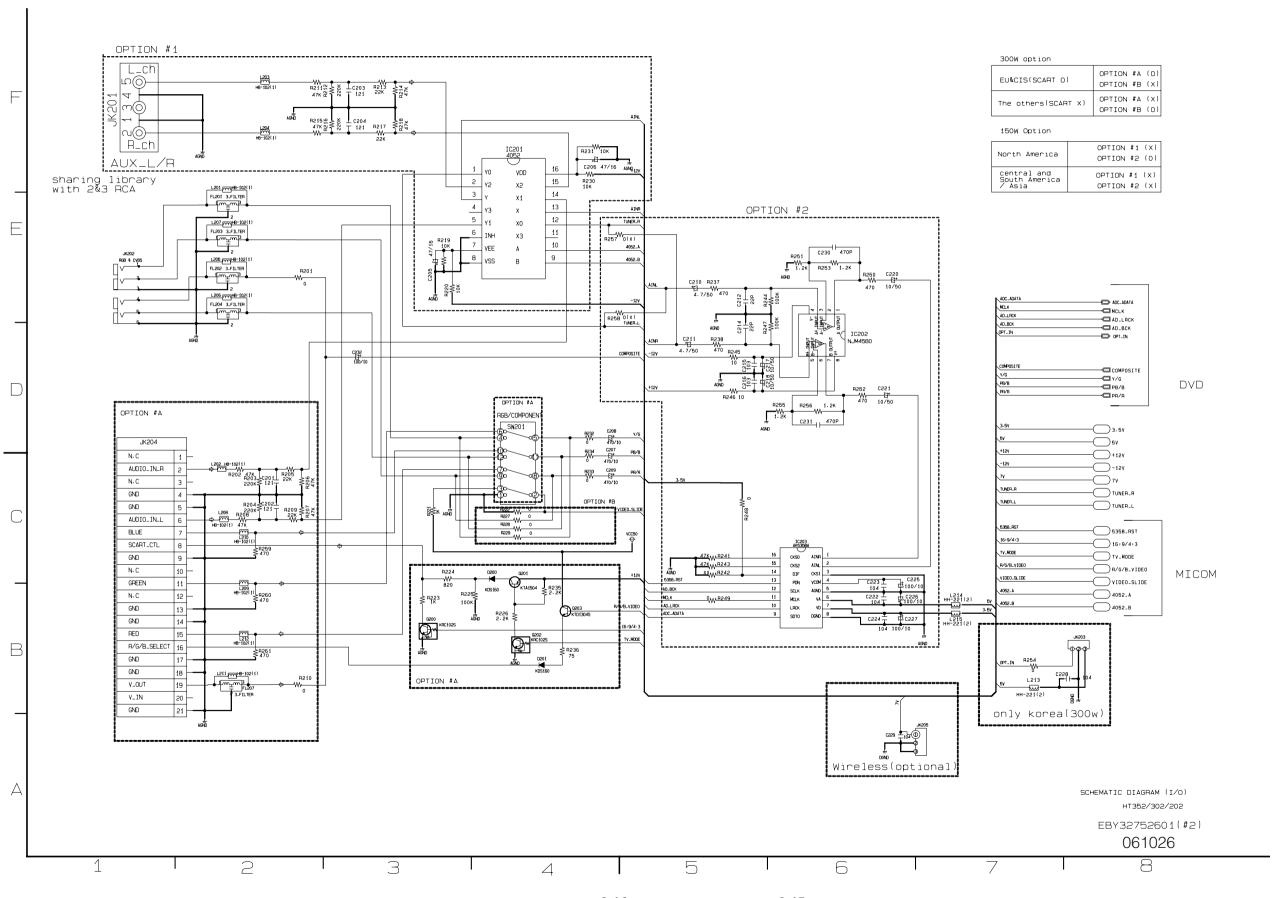


#### **5. MIC CIRCUIT DIAGRAM** HH-221(2) <POWER> L2D3 IC2A1 BA3308 R2D1 3.9K ≸ C2E3 470P C2D1 ± <DVD SECTION> #<sub>77</sub> C2E6 10/16V R2E3 W 1.5K P2301 R2D3 100≶ HIC\_SIG MIC2 MIC\_DET AGND C2E2 R2D5 1K ≸ C2D3 # C2E844 22/16V KOPTION 1 22/16V В <MICOM SECTION> T C2D2 AGND -□ MIC\_DET <OPTION 1> -.CIS AREA : 0 -.NON CIS AREA : X SCHEMATIC DIAGRAM (MIC) OPTION 2> HT352/302/202 -. CIS AREA : X -. NON CIS AREA : O 3854R19658A(#05) 061026 2-16 2-17

#### 6. FRONT JACK CIRCUIT DIAGRAM JK352 MIC1 WIC5 P3201 MIC1 MIC\_DET CF353 MIC2 MIC\_DET AGND R357 WW XX (OPTION 2) AGND (OPTION 1) P3502 L351 HH-221(2) 57 D-D+ DGND LD302 RED\_LED 5 5V\_MICOM R352 | R353 22 \ 22 Q301 KRA103M 6 STBY\_LED R355 PWR\_KEY В SW301 C3Z1 0.1uF GND OPTION DGND HT352/302/202's ->C3Z1.C3Z2 : 0.1uF C3Z2 HT202(Only C/S.America) 0 1uF ->C3Z1.C3Z2 : 0 ohm DGND AGND SCHEMATIC DIAGRAM (MIC/USB JACK) HT302/202 EBY32752901(#1) 061026

4


#### 7. FRONT CIRCUIT DIAGRAM(WITH RDS)

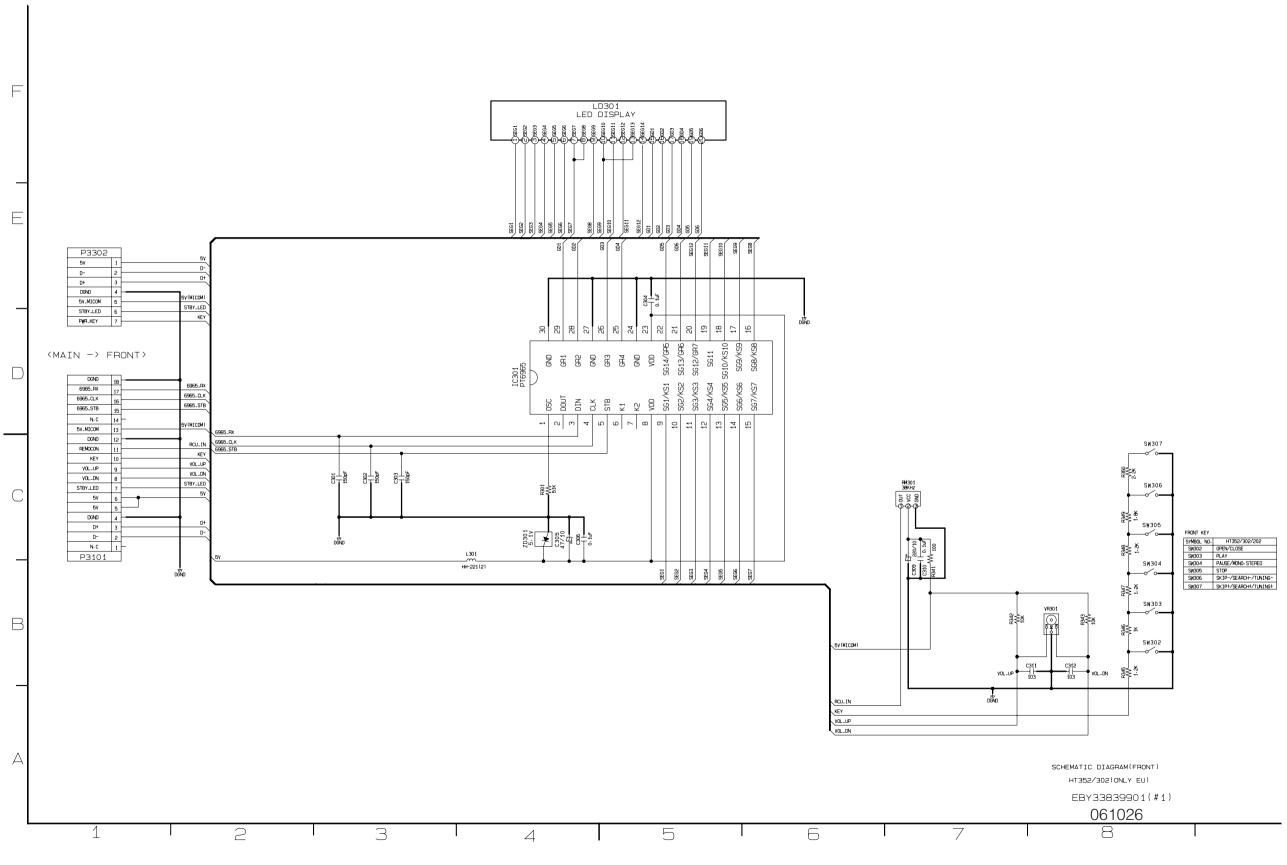

2-20


2-21

#### 8. FRONT CIRCUIT DIAGRAM(WITHOUT RDS)

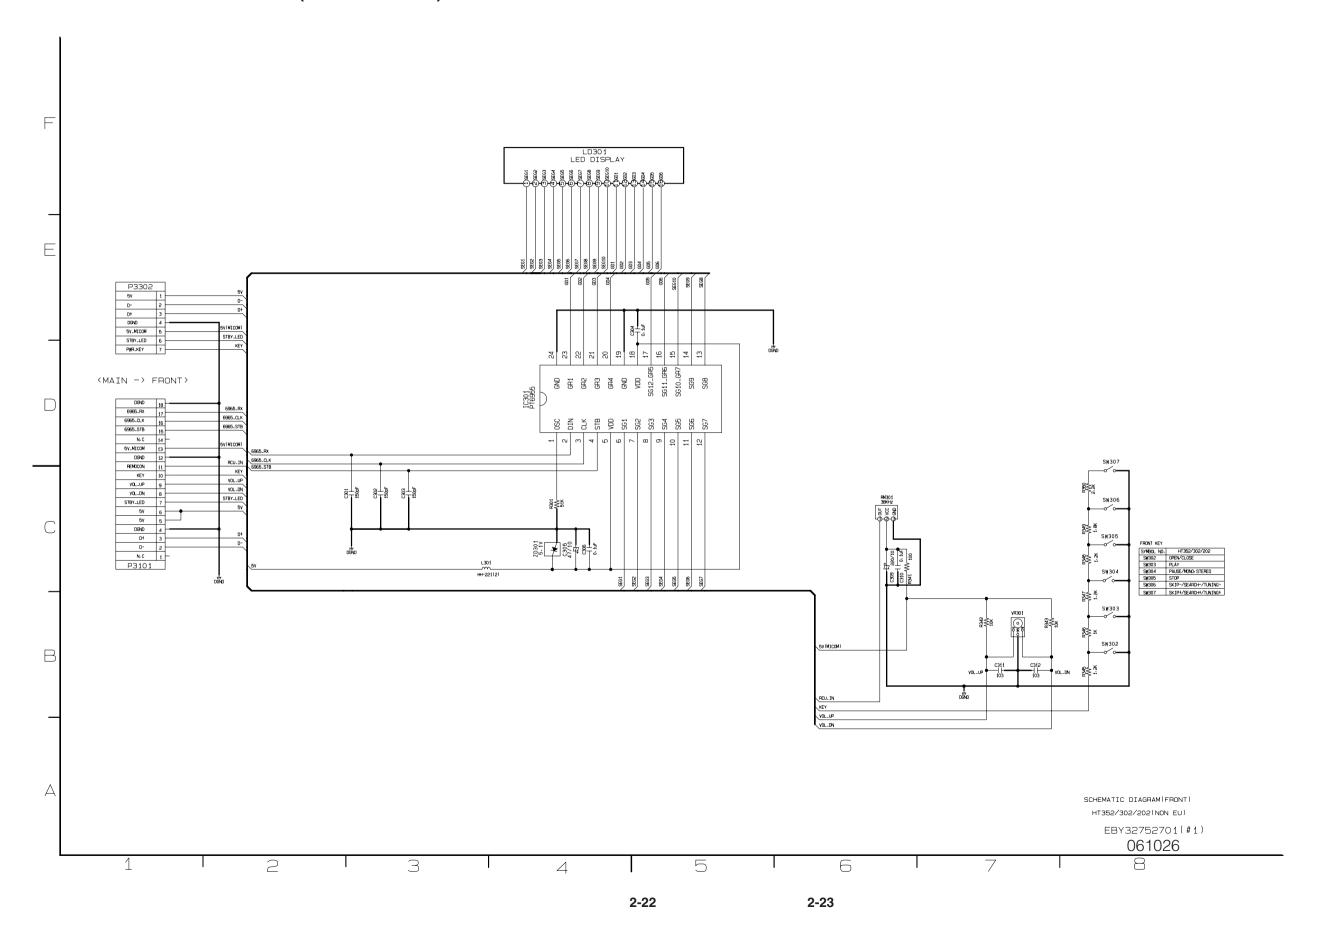


#### PRINTED CIRCUIT BOARD DIAGRAMS

1. MAIN P.C. BOARD DIAGRAM (TOP VIEW)

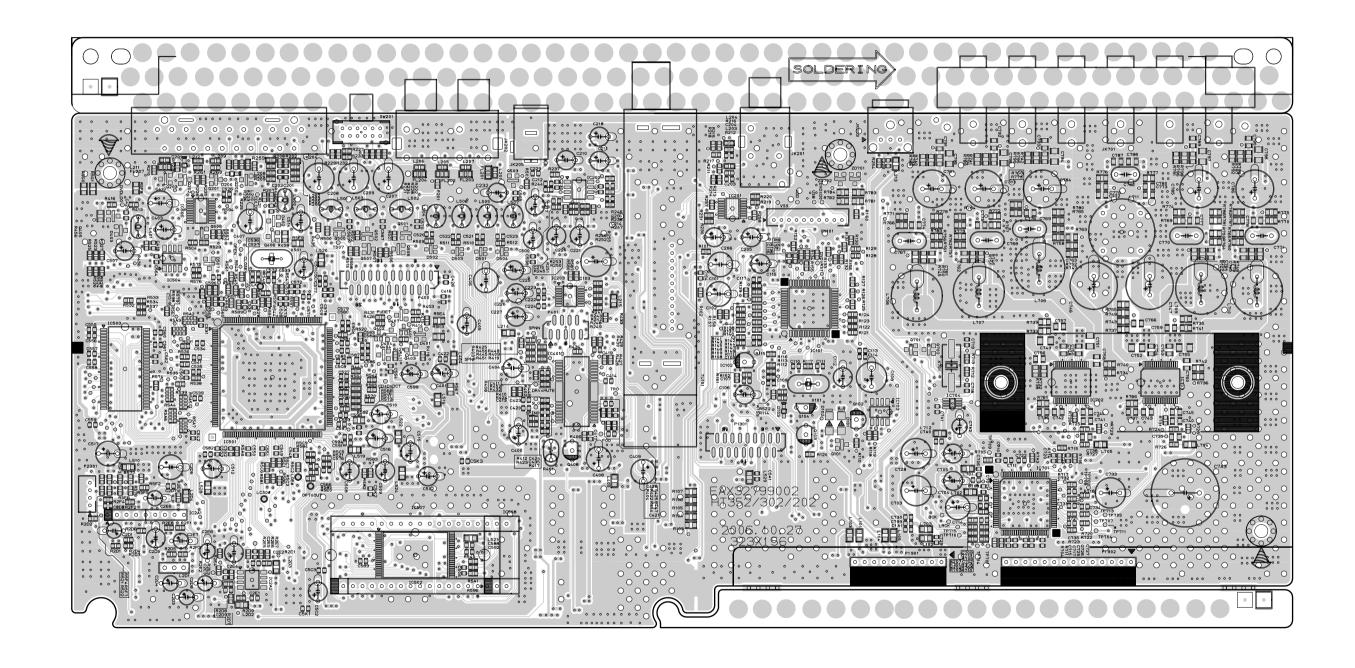


2-24 2-25

#### 2. MAIN P.C. BOARD DIAGRAM (BOTTOM VIEW)

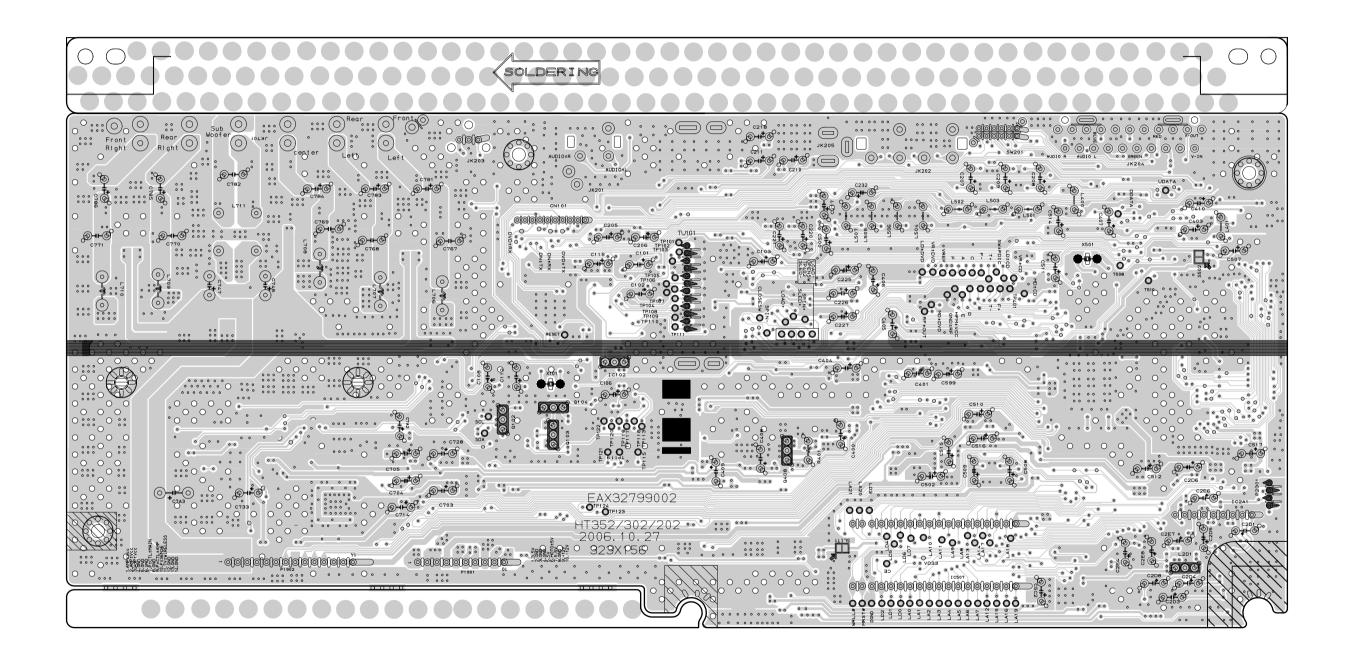

2-26 2-27


#### 3. SMPS P.C. BOARD

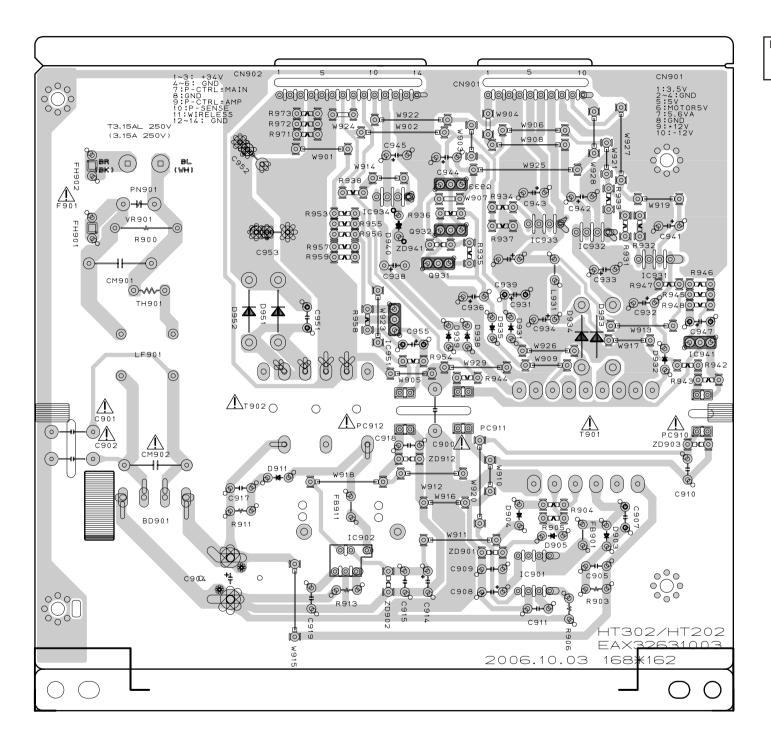


NOTE: Warning

Parts that are shaded are critical With respect to risk of fire or electrical shock.

#### 4. FRONT JACK P.C BOARD

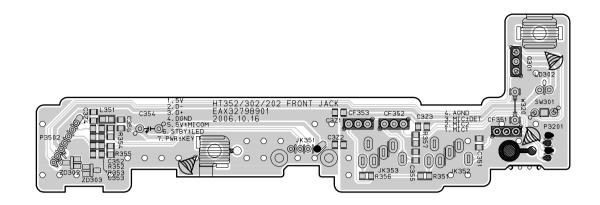


#### 5. FRONT P.C. BOARD(WITH RDS)

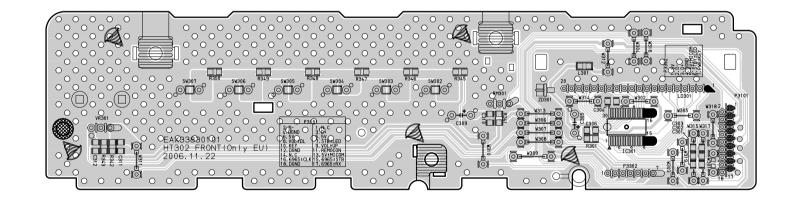


## **SECTION 3. DVD & AMP PART**


#### **ELECTRICAL TROUBLESHOOTING GUIDE**


#### 1. System operation flow

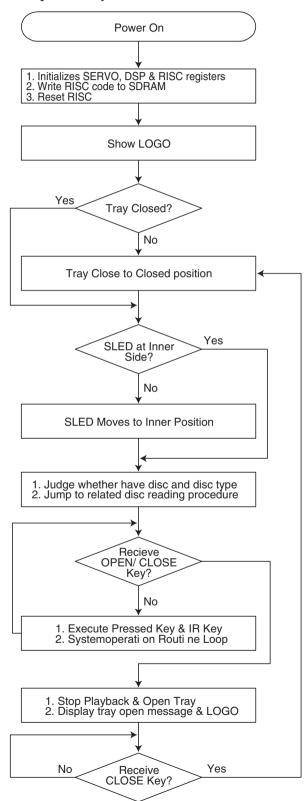



#### 2. Test & debug flow

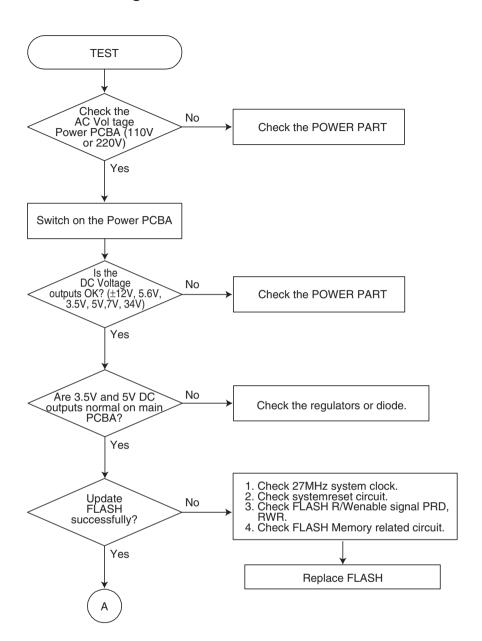


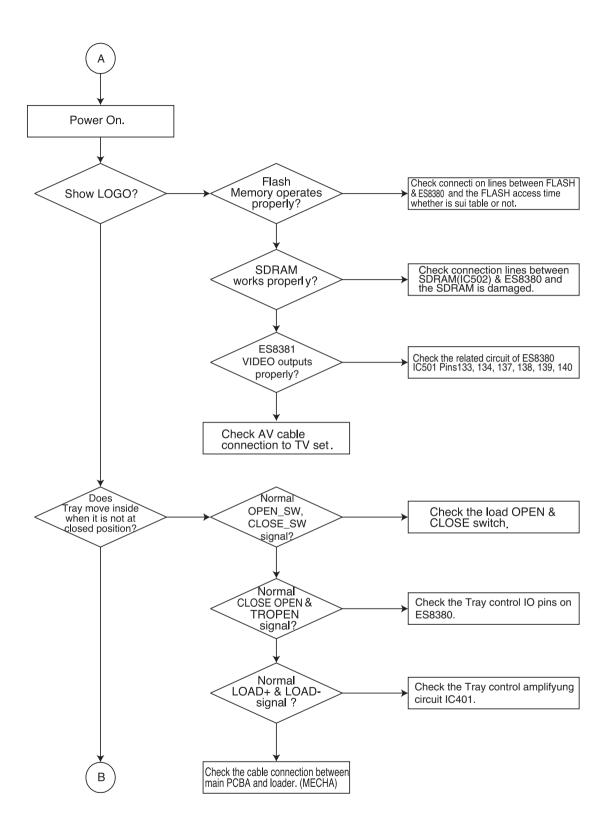

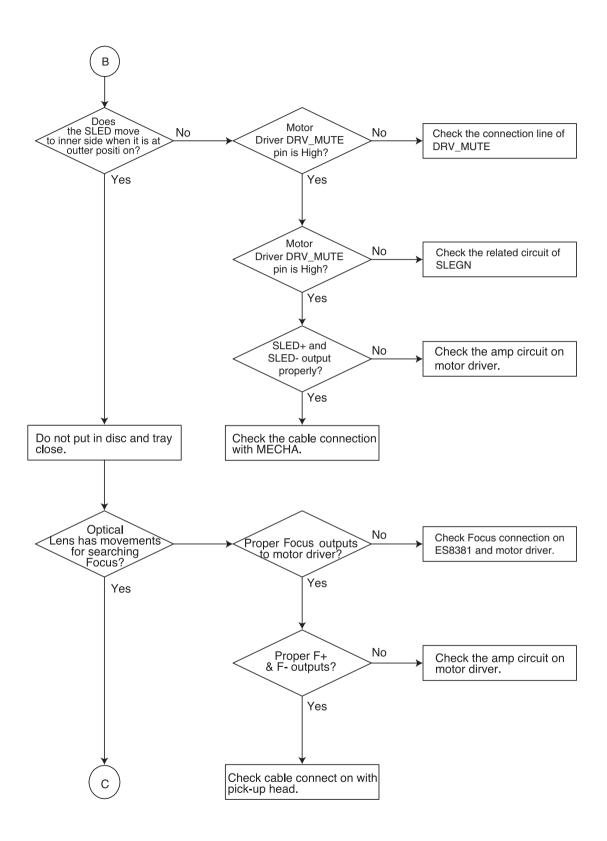


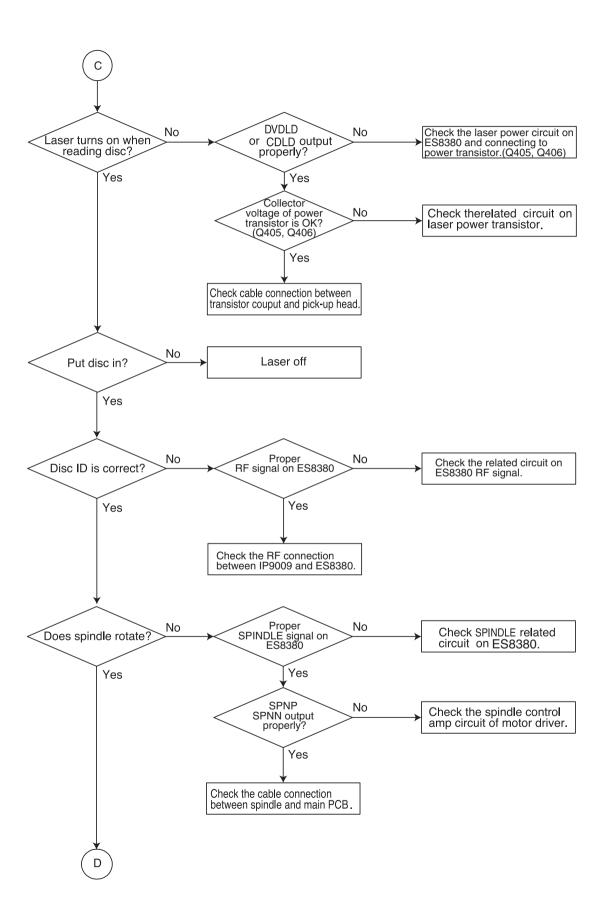

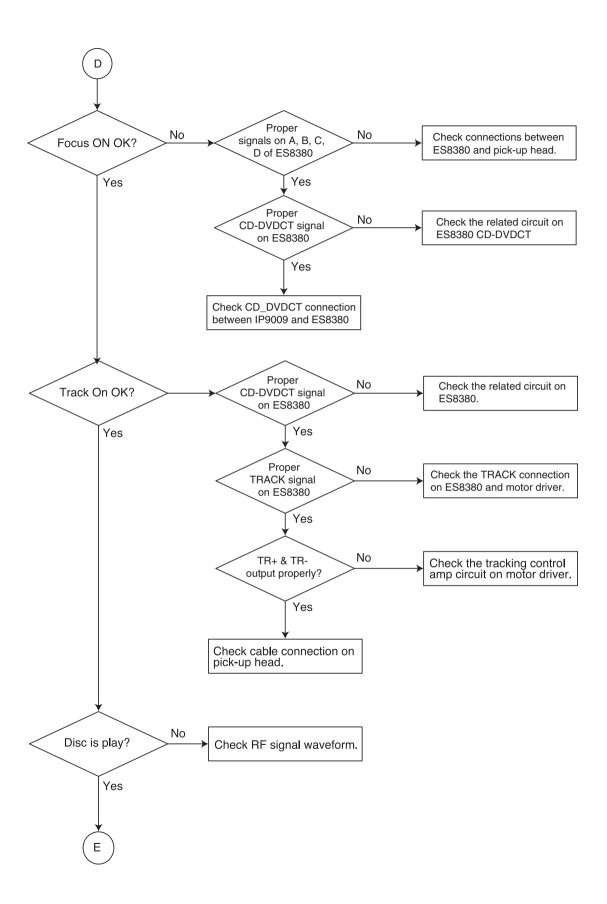

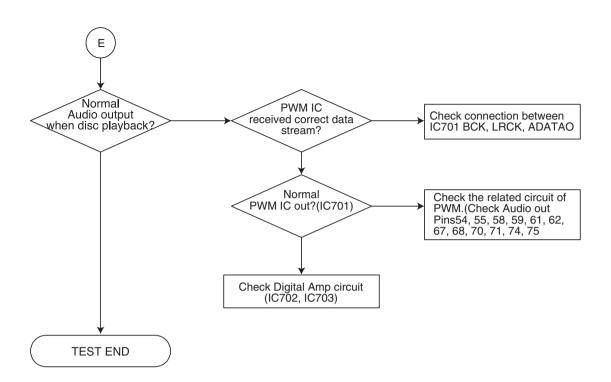

#### 3. AUDIO µ-COM Circuit(DVD & AMP)

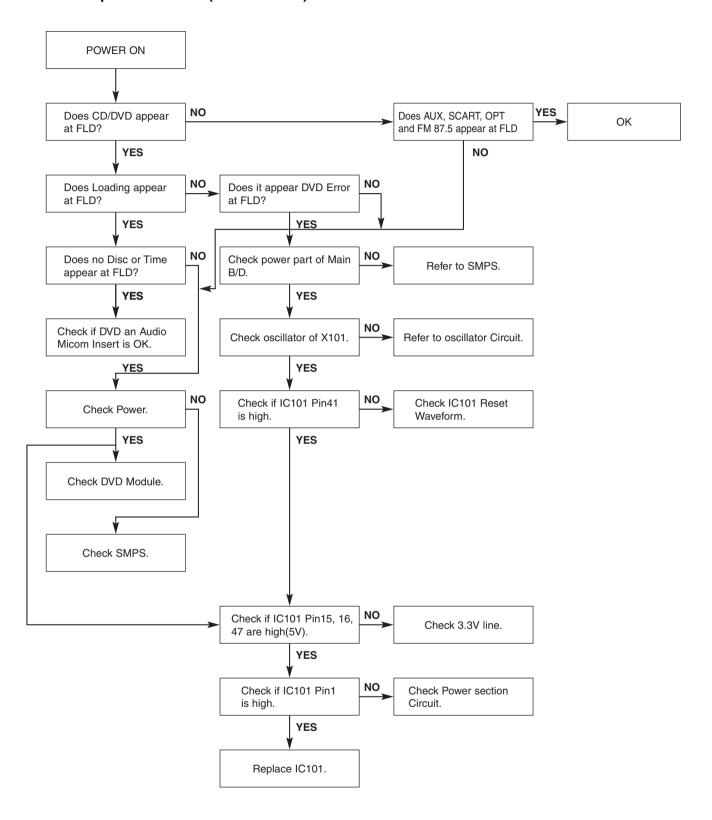

#### **DETAILS AND WAVEFORMS ON SYSTEM TEST AND DEBUGGING**

#### 1. SYSTEM 27MHz CLOCK, RESET, FLASH R/W SIGNAL

#### 1) ES8380 main clock is at 27MHz(X501)

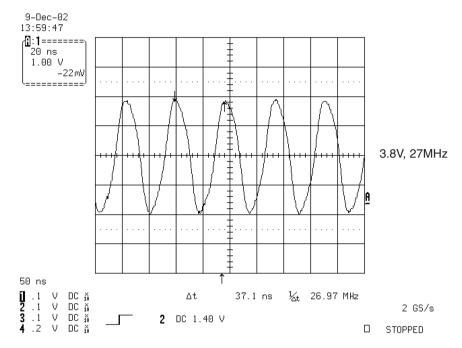


FIG 1-1

#### 2) ES8380 reset is high active.

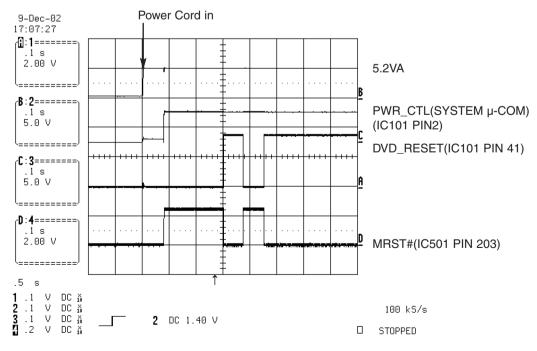


FIG 1-2

## 3) Flash R/W enable signal during download(Downloading)


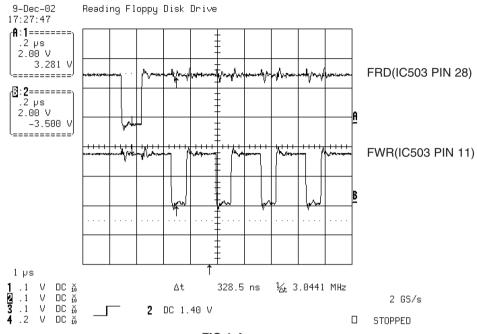


FIG 1-4


#### 2. SDRAM CLOCK

## 1) ES8380 main clock is at 27MHz(X501)

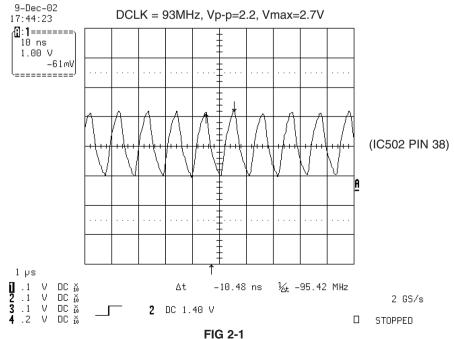

#### 3. TRAY OPEN/CLOSE SIGNAL

### 1) Tray open/close waveform

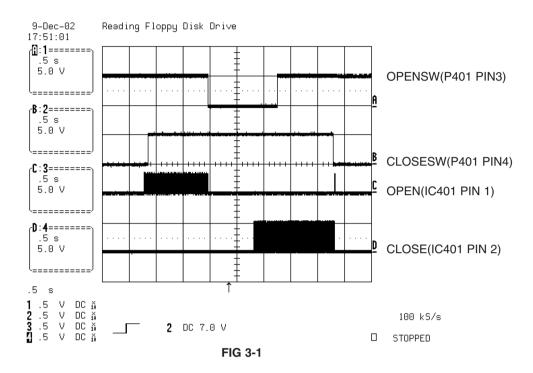

### 2) Tray close waveform

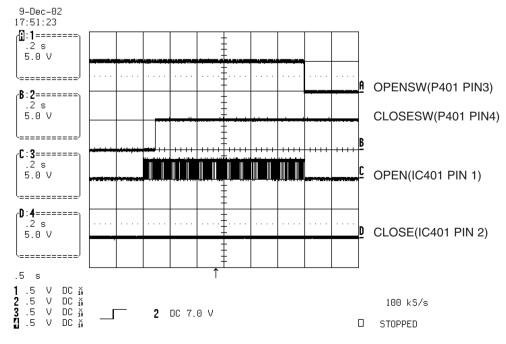


FIG 3-2

### 3) Tray open waveform

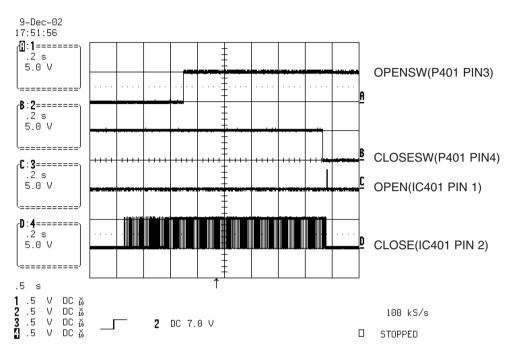


FIG 3-3

#### 4. SLED CONTROL RELATED SIGNAL (NO DISC CONDITION)

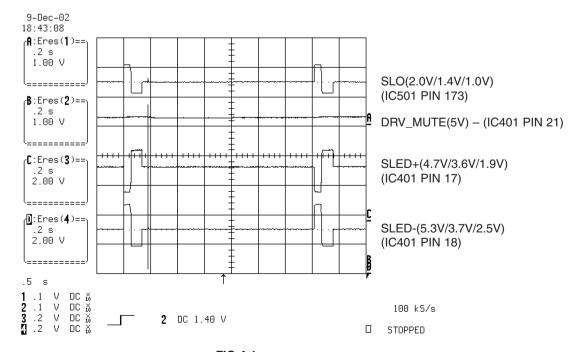


FIG 4-1

#### 5. LENS CONTROL RELATED SIGNAL(NO DISC CONDITION)

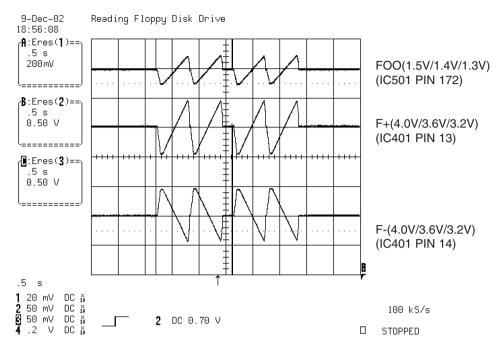


FIG 5-1

### 6. LASER POWER CONTROL RELATED SIGNAL(NO DISC CONDITION)

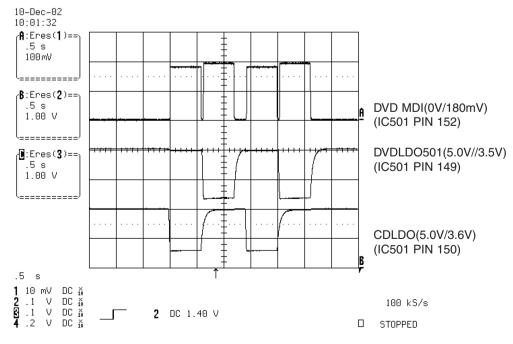


FIG 6-1

#### 7. DISC TYPE JUDGEMENT WAVEFORMS

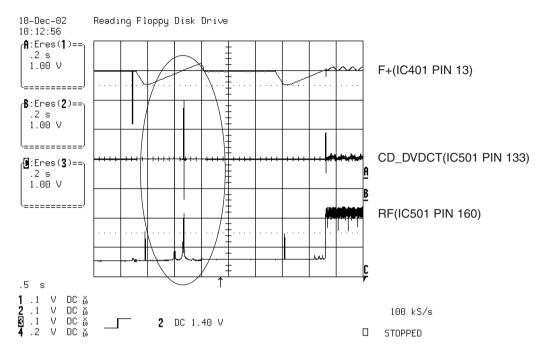


FIG 7-1 (DVD)

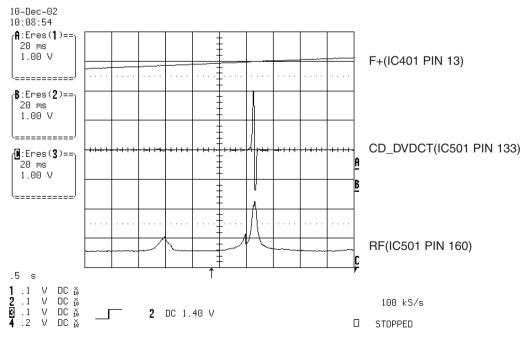


FIG 7-2 (DVD)

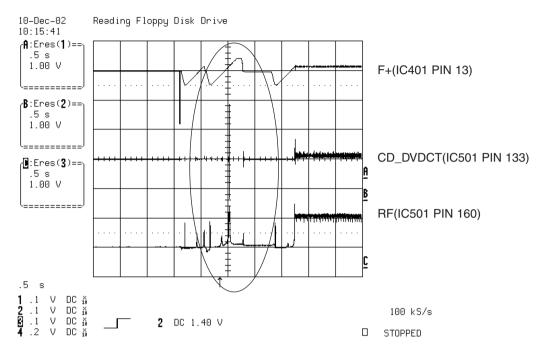


FIG 7-3 (CD)

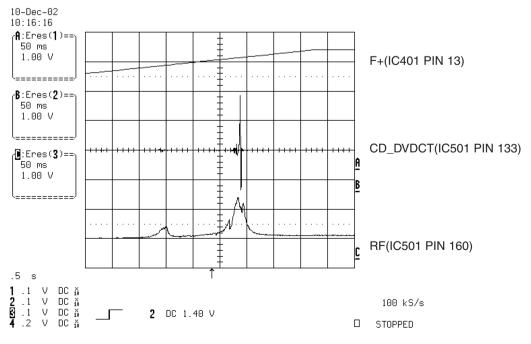


FIG 7-4 (CD)

#### 8. FOCUS ON WAVEFORMS

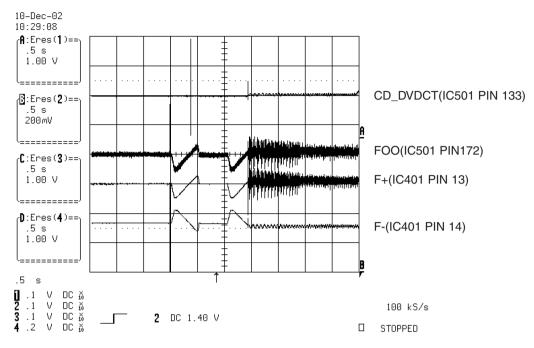


FIG 8-1 (DVD)

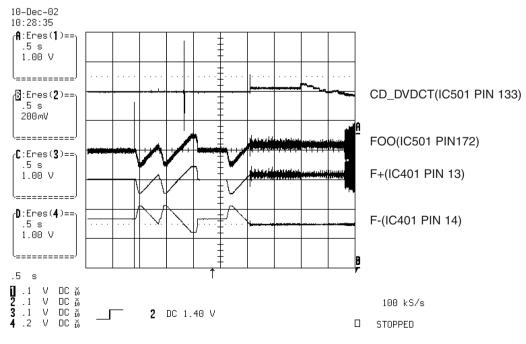


FIG 8-2 (CD)

## 9. SPINDLE CONTROL WAVEFORMS (NO DISC CONDITION)

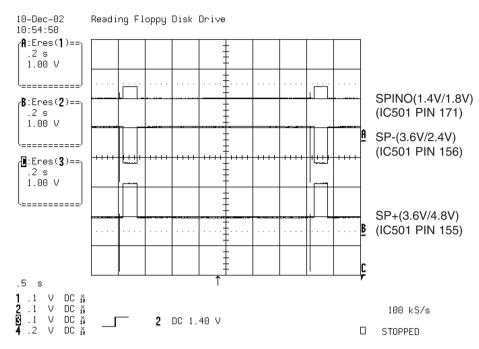


FIG 9-1

## 10. TRACKING CONTROL RELATED SIGNAL(System checking)

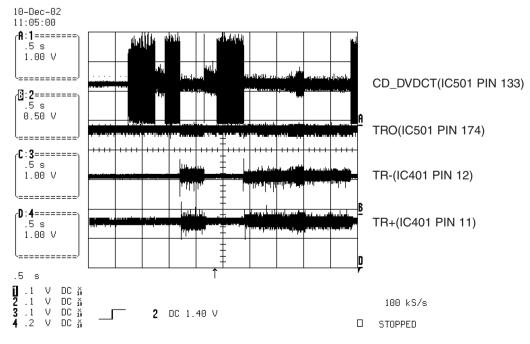


FIG 10-1(DVD)

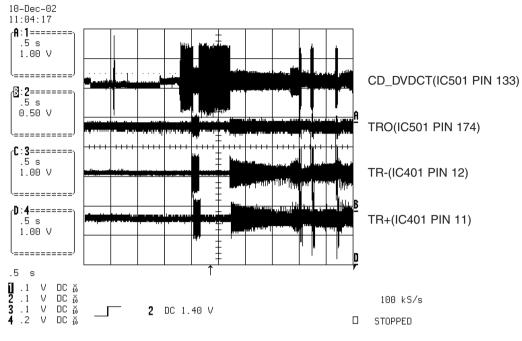


FIG 10-2(CD)

#### 11. ES8380 VIDEO OUTPUT WAVEFORMS

## 1) Full colorbar signal(COMPOSIT)


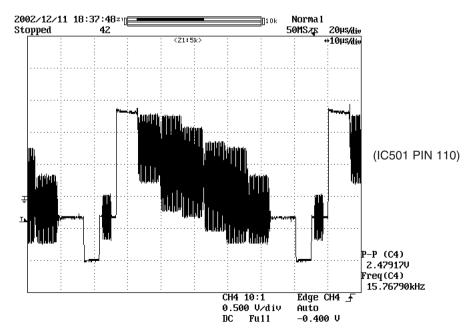


FIG 11-1

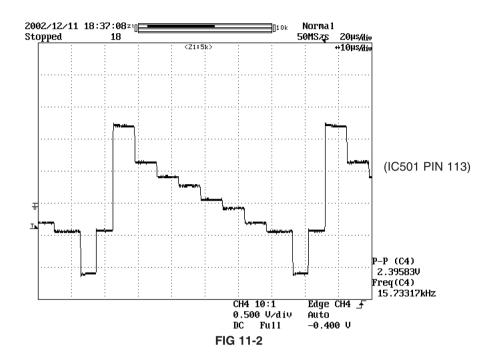

## 12. AUDIO OUTPUT FROM PWM IC

## 1) Audio L/R


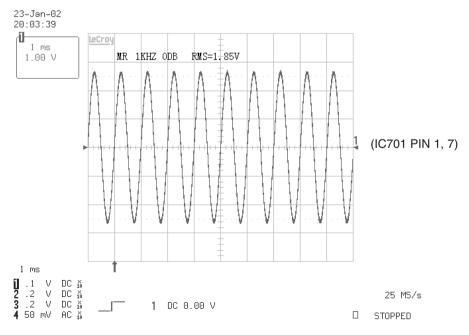



FIG 12-1

## 2) Audio related Signal

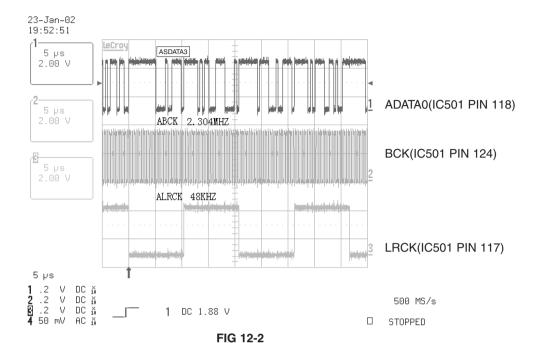


3-20


#### 13. DVD & AMP WAVEFORMS

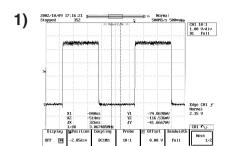


• R620 → TP611 or R621 TP612

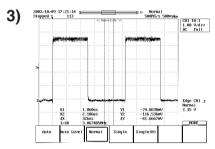


• R612 → TP603 or R613 TP604

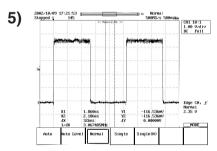


• R614 → TP605 or R615 TP606

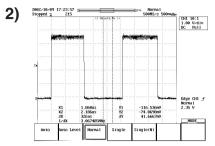

• R618 → TP609 or R619 TP610

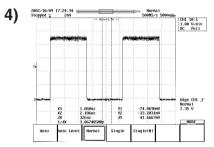

• R610 → TP601 or R611 TP602

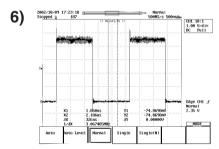


• R616 → TP607 or R617 TP608


# **MEMO**


## **DVD & AMP CIRCUIT DIAGRAM**


## 1. MPEG CIRCUIT DIAGRAM

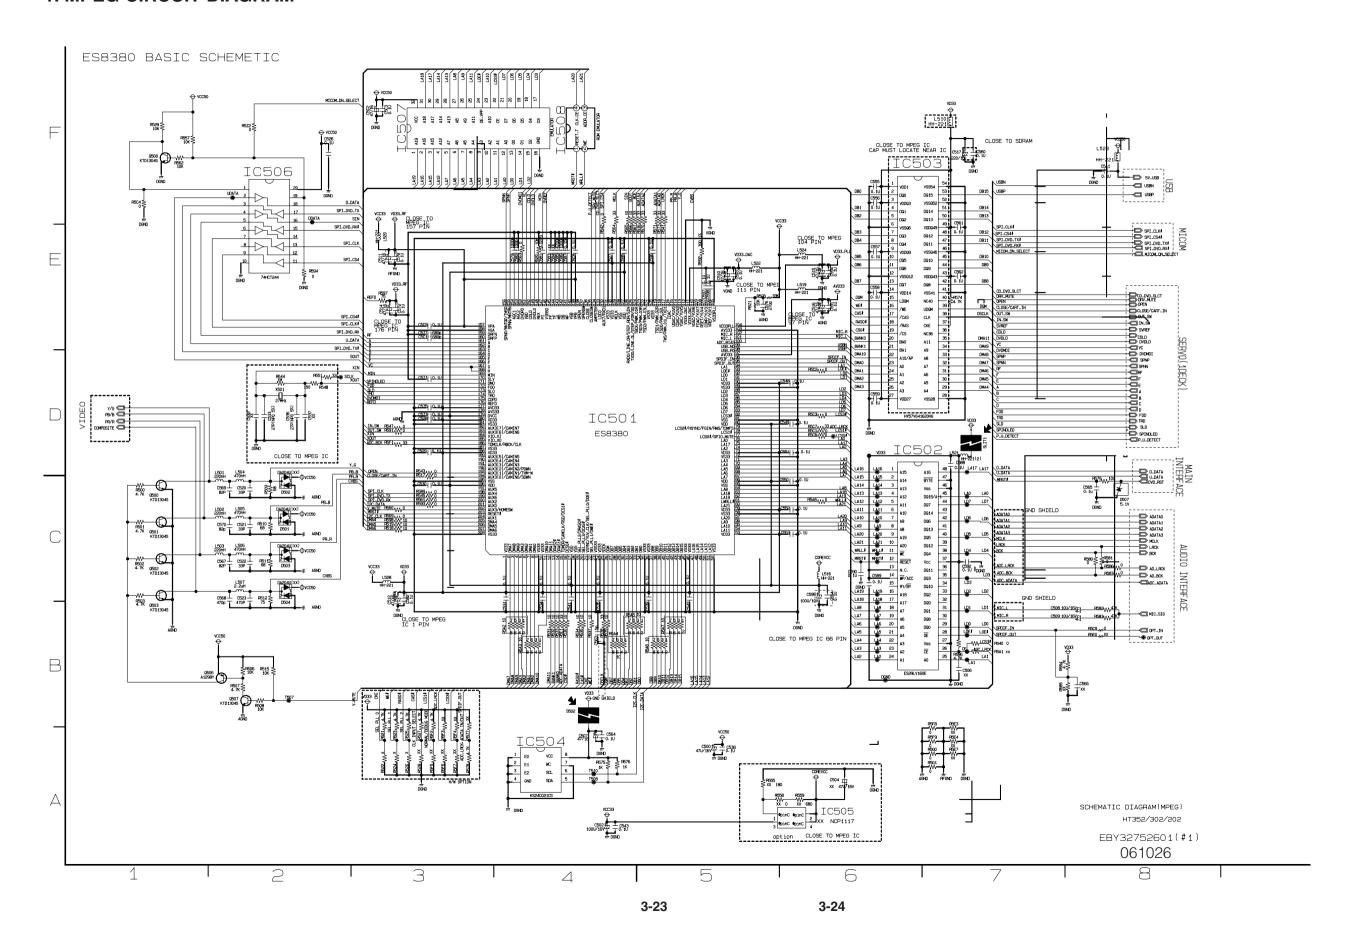


## 2. DSP & AMP CIRCUIT DIAGRAM

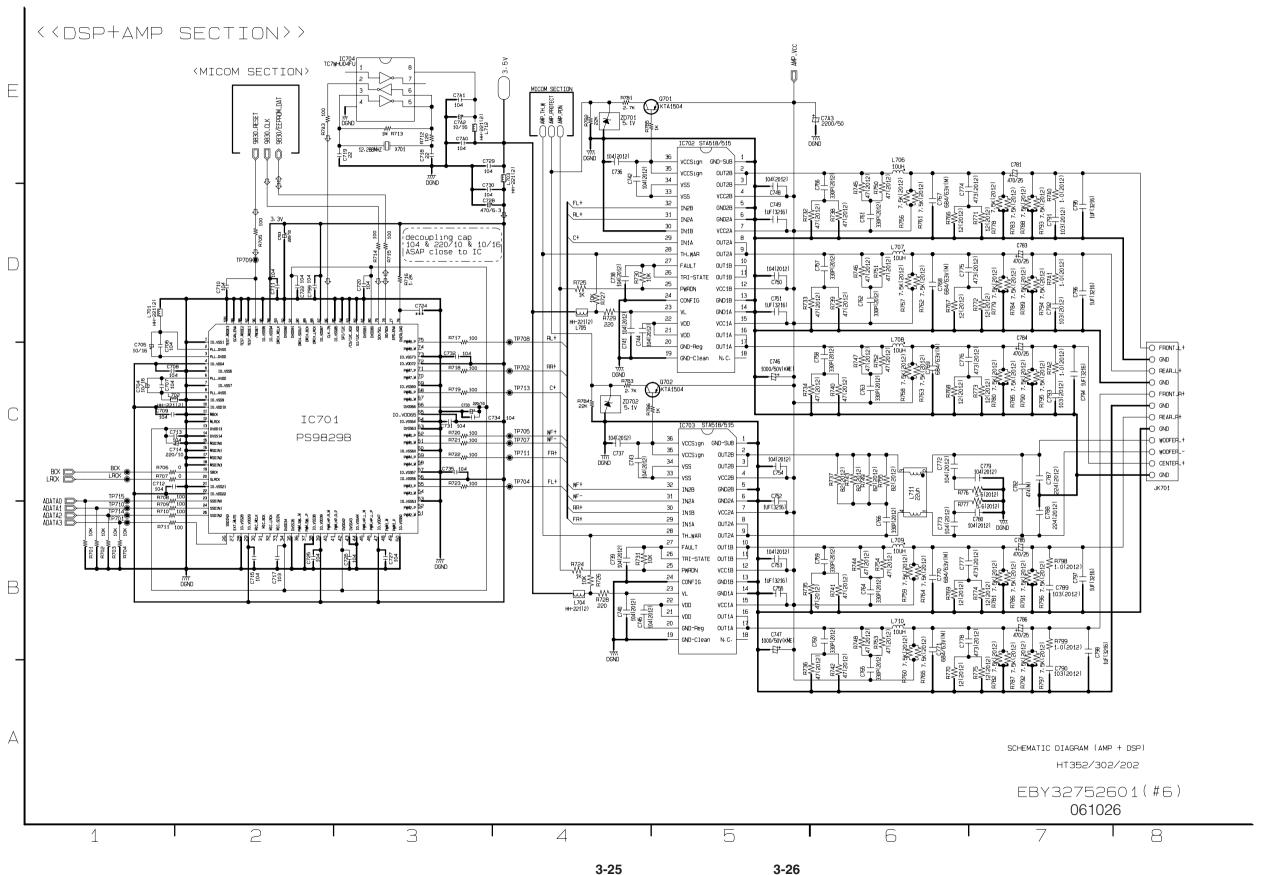

# **SECTION 4. EXPLODED VIEWS**

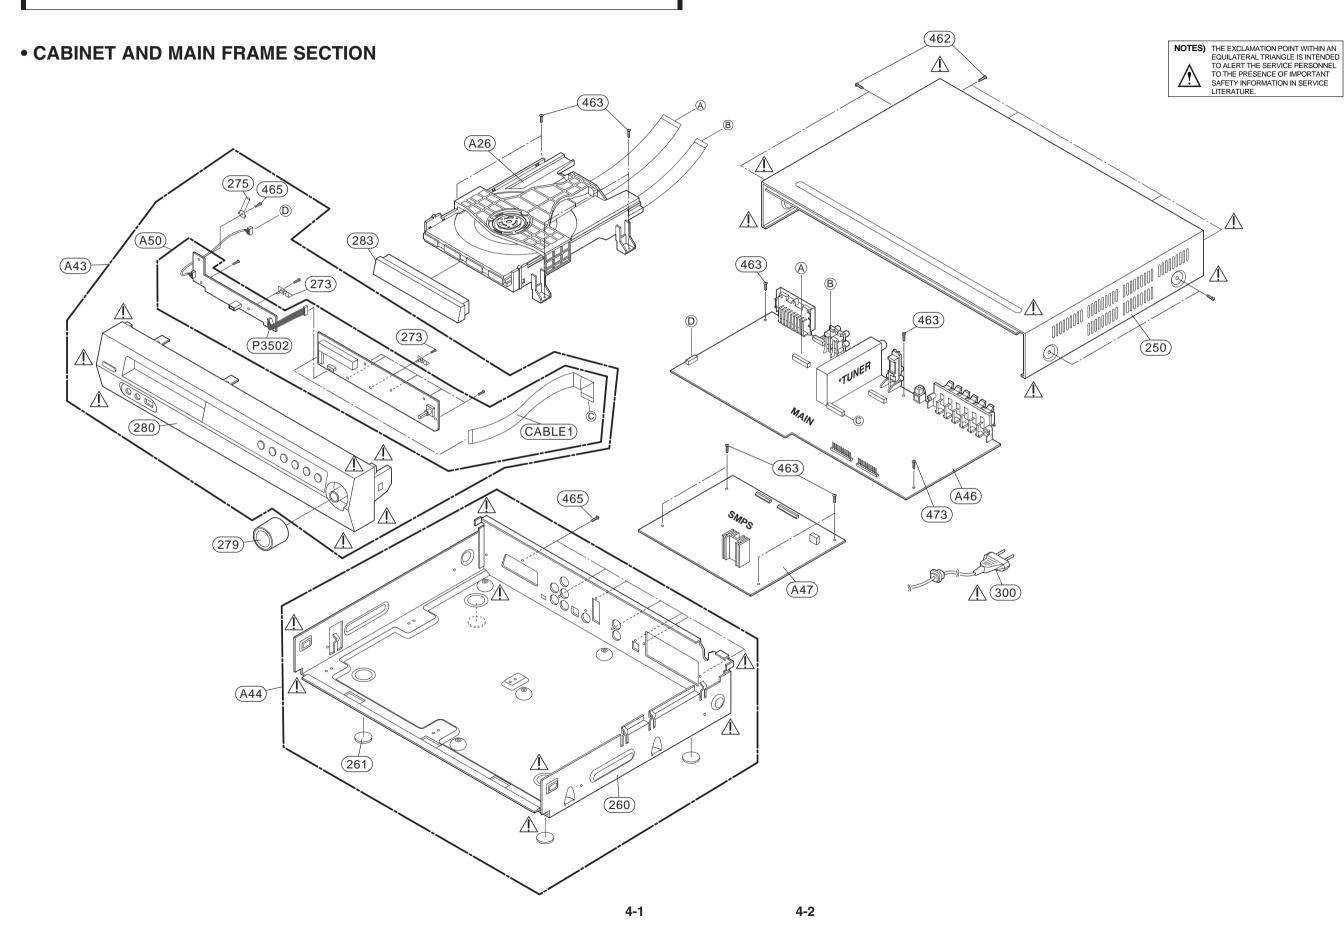


## • DECK MECHANISM EXPLODED VIEW(DP-10T)

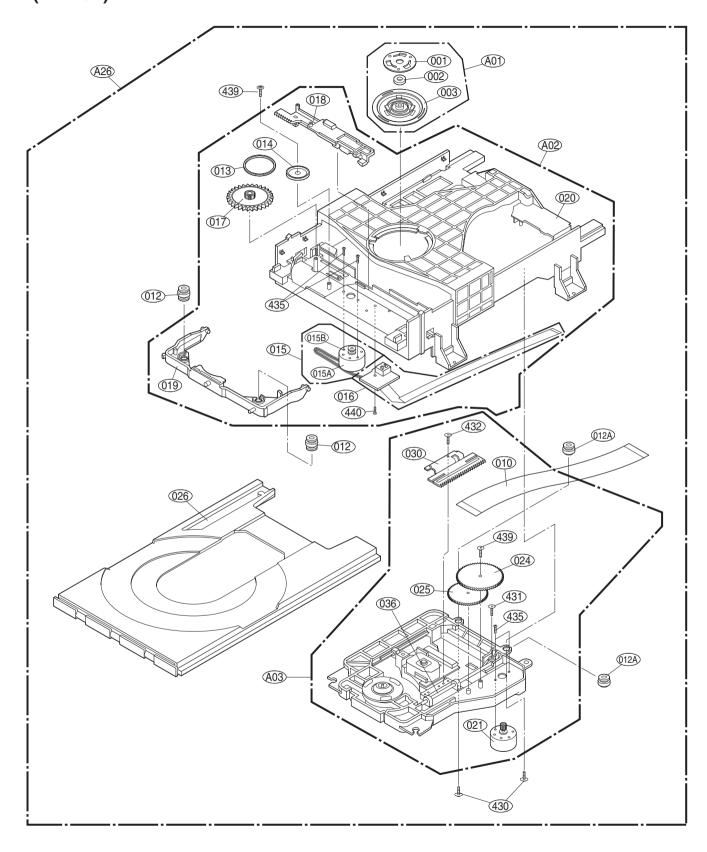

4-4


4-3

## • PACKING ACCESSORY SECTION

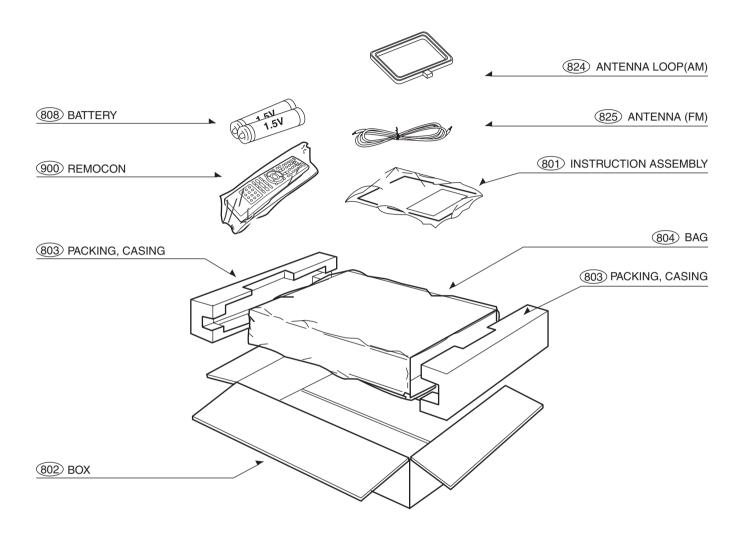


# **SECTION 5. SPEAKER SECTION**

## • FRONT/CENTER/REAR SPEAKER (SH32SD-S)

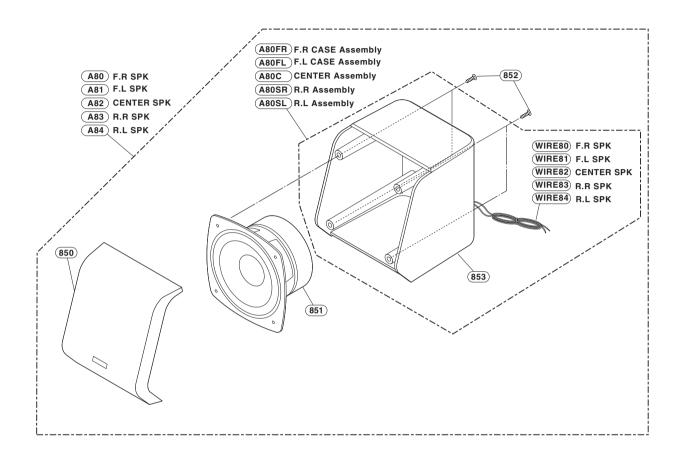

## • PASSIVE SUBWOOFER SPEAKER (SH32SD-W)

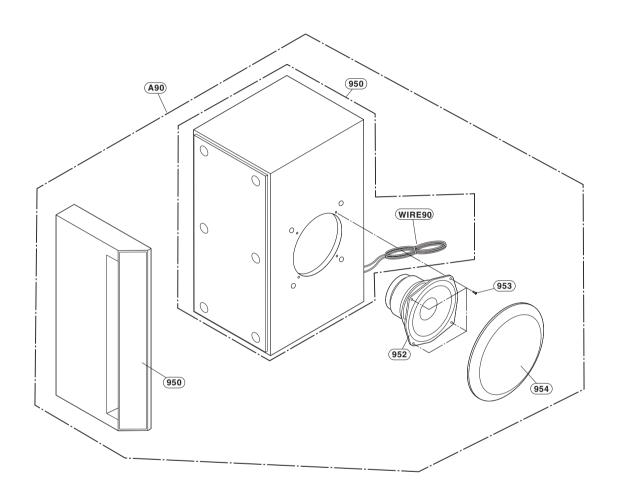

# **MEMO**