

SERVICE  
MANUAL **223OB**

**marantz**

model 223OB

*Stereophonic Receiver*

## TABLE OF CONTENTS

SECTION	PAGE
<b>1. INTRODUCTION .....</b>	<b>1</b>
<b>2. SERVICE NOTES .....</b>	<b>1</b>
<b>3. TEST EQUIPMENT REQUIRED FOR SERVICING .....</b>	<b>2</b>
<b>4. AM ALIGNMENT PROCEDURE .....</b>	<b>2</b>
<b>4.1 AM IF Alignment .....</b>	<b>2</b>
<b>4.2 AM Frequency Range and Tracking Alignment .....</b>	<b>2</b>
<b>5. FM ALIGNMENT PROCEDURE .....</b>	<b>3</b>
<b>6. STEREO SEPARATION ALIGNMENT .....</b>	<b>3</b>
<b>7. MUTING THRESHOLD ADJUSTMENT .....</b>	<b>3</b>
<b>8. FM DOLBY LEVEL ADJUSTMENT .....</b>	<b>3</b>
<b>9. POWER AMPLIFIER ADJUSTMENT .....</b>	<b>3</b>
<b>10. POWER SUPPLY ADJUSTMENT .....</b>	<b>3</b>
<b>11. MAJOR COMPONENT LOCATIONS .....</b>	<b>4</b>
<b>11.1 Front Panel Adjustment and Component Locations .....</b>	<b>4</b>
<b>11.2 Main Chassis Component Locations (Top View) .....</b>	<b>4</b>
<b>11.3 Rear Panel Adjustment and Component Locations .....</b>	<b>5</b>
<b>11.4 Main Chassis Component Locations (Bottom View) .....</b>	<b>5</b>
<b>12. DIAGRAM AND COMPONENT LOCATIONS .....</b>	<b>6</b>
<b>12.1 FM Front End and AM Tuner Assembly (P100) Schematic Diagram and Component Locations .....</b>	<b>6</b>
<b>12.2 FM IF Amplifier, Detector, Muting Control and Meter Unit Assembly (P200) Schematic Diagram and Component Locations .....</b>	<b>8</b>
<b>12.3 MPX Stereo Decoding Amplifier Assembly (P300) Schematic Diagram and Component Locations .....</b>	<b>9</b>
<b>12.4 Phono Amplifier Assembly (P400) Schematic Diagram and Component Locations .....</b>	<b>10</b>
<b>12.5 Power Amplifier Assembly (P700) Schematic Diagram and Component Locations .....</b>	<b>12</b>
<b>12.6 Power Supply Assembly (P800) Schematic Diagram and Component Locations .....</b>	<b>14</b>
<b>12.7 Dolby FM Set Assembly (PC01) Schematic Diagram and Component Locations .....</b>	<b>15</b>
<b>12.8 Dial Lamp Assembly (PZ01) Schematic Diagram and Component Locations .....</b>	<b>16</b>
<b>12.9 Tone Amplifier Assembly (PE01) Schematic Diagram and Component Locations .....</b>	<b>17</b>
<b>12.10 Filter Assembly (PH01) Schematic Diagram and Component Locations .....</b>	<b>18</b>
<b>12.11 Loudness, Muting, System 1 and 2 Spkr Switch Assembly (PT01) Schematic Diagram and Component Locations .....</b>	<b>20</b>
<b>13. BLOCK DIAGRAM .....</b>	<b>22</b>
<b>14. SCHEMATIC DIAGRAM .....</b>	<b>23</b>
<b>15. CIRCUIT DIAGRAM .....</b>	<b>25</b>
<b>16. EXPLODED MECHANICAL DIAGRAM .....</b>	<b>27</b>
<b>17. PARTS LIST .....</b>	<b>29</b>
<b>18. TECHNICAL SPECIFICATIONS .....</b>	<b>39</b>
<b>19. PACKING .....</b>	<b>41</b>
<b>SERVICE INFORMATION FOR EUROPEAN MODEL .....</b>	<b>42</b>

## 1. INTRODUCTION

This service manual was prepared for use by Authorized Warranty Stations and contains service information for Marantz Model 2230B Stereophonic Receiver.

Servicing information and voltage data included in this manual are intended for use by the knowledgeable and experienced technician only. All instructions should be read carefully. No attempt

should be made to proceed without a good understanding of the operations in the receiver.

The parts list furnishes information by which replacement parts may be ordered from the Marantz Company. A simple description is included for parts which can usually be obtained through local suppliers.


## 2. SERVICE NOTES

As can be seen from the circuit diagram, the chassis of Model 2230B consists of the following units. Each unit mounted on a printed cir-

cuit board is described within the square enclosed by a bold dotted line on the circuit diagram.

1. FM Front End & AM Tuner .....	mounted on P.W.B. P 100
2. FM IF Amplifier, Detector, Muting Control .....	mounted on P.W.B. P 200
3. MPX Stereo Decoding Amplifier .....	mounted on P.W.B. P 300
4. Phono Amplifier .....	mounted on P.W.B. P 400
5. Tone Amplifier .....	mounted on P.W.B. PH01
6. DOLBY FM, TAPE Monitor, Mono, High Filter Switch Unit .....	mounted on P.W.B. PH01
7. Loudness, Muting, System 1 and System 2 Spkr Switch Unit .....	mounted on P.W.B. PT01
8. Power Amplifier .....	mounted on P.W.B. P 700
9. Power Supply .....	mounted on P.W.B. P 800
10. Dial Lamp Unit .....	mounted on P.W.B. PZ01
11. Dolby FM Set Assembly .....	mounted on P.W.B. PC01

### Dial Stringing

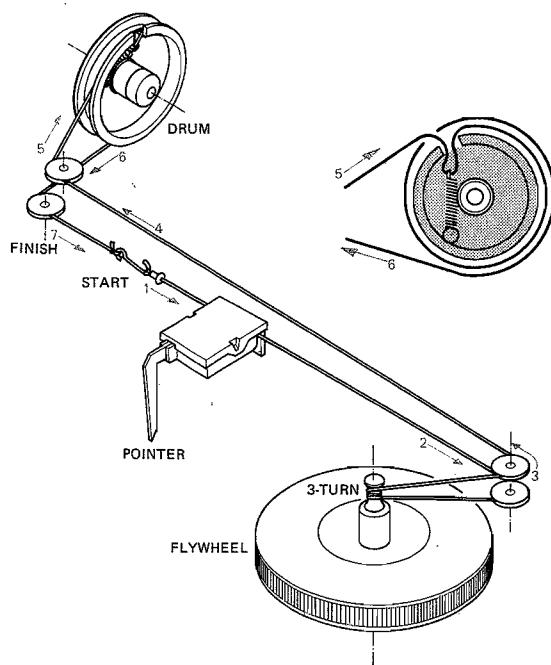

### 3. TEST EQUIPMENT REQUIRED FOR SERVICING

Table 1 lists the test equipment required for servicing the Model 2230B Receiver.

Item	Manufacturer and Model No.	Use
AM Signal Generator		Signal source for AM alignment
Test Loop		Use with AM Signal Generator
FM Signal Generator	Sound Technology	Signal source for FM alignment
MPX Signal Generator	Model 1000A	Stereo separation alignment and trouble shooting
Distortion Analyzer	Sound Technology	Distortion measurements
Audio Oscillator		Sinewave and squarewave signal source
AC VTVM	Model 1700A	Voltage measurements (AC)
Oscilloscope	Tektronix Model T932 Philips Model 3232	Waveform analysis and trouble shooting and ASO alignment
Frequency Counter	Fluke Model 1900A	MPX Oscillator adjustment (VCO)
Circuit Tester		Trouble shooting
DC VTVM	Fluke Model 8000 "Digital" Simpson Model 313, Triplet Model 801	Voltage measurements (DC)
AC Wattmeter	Simpson Model 1379	Monitors primary power to amplifier
AC Ammeter	Commercial Grade (1-10A)	Monitors amplifier output under short circuit condition
Line Voltmeter	Simpson Model 1359	Monitors potential of primary power to amplifier
Variable Autotransformer	Superior Electronic Co., Powerstat Model 116B-10A	Adjusts level of primary power to amplifier
Shorting Plug	Use phono plug with 600 ohm across center pin and shell	Shorts amplifier input to eliminate noise pickup
Output Load (8 ohms, 0.5%, 100W)	Commercial Grade	Provides 8-ohm load for amplifier output termination
Output Load (4 ohms, 0.5%; 100W)	Commercial Grade	Provides 4-ohm load for amplifier output termination

### 4. AM ALIGNMENT PROCEDURE

#### 4.1 AM IF ALIGNMENT

1. Connect a sweep generator to the J106 and an alignment scope to the resistor R120 (outside).
2. Rotate each core of IF transformers L110 and L111 for the maximum height and flat top symmetrical response.

#### 4.2 AM FREQUENCY RANGE AND TRACKING ALIGNMENT

1. Set AM signal generator to 515 kHz. Turn the tuning capacitor fully closed (place the tuning pointer at the low end) and adjust the oscillator coil L109 for maximum audio output.

2. Set the signal generator to 1650 kHz. Place the tuning pointer in the high frequency end and adjust the oscillator trimmer on the oscillator tuning capacitor for maximum audio output.
3. Repeat steps 1 and 2 until no further adjustment is necessary.
4. Set the generator to 600 kHz, tune the receiver to the same frequency and adjust a slug core of AM ferrite rod antenna and RF coil L108 for maximum output.
5. Set the generator to 1400 kHz and tune the receiver to the same frequency and adjust both trimming capacitor of antenna and RF tuned circuit for maximum output.
6. Repeat procedures 4 and 5 until no further adjustment is necessary.

**NOTE:** During tracking alignment reduce the signal generator output as necessary to avoid AGC action.

## 5. FM ALIGNMENT PROCEDURE

1. Connect an FM signal generator to the FM antenna terminals and an oscilloscope and an audio distortion analyzer to the tape output jack on the rear panel.
2. Set the FM SG to 87 MHz and provide about 3 to  $5\mu\text{V}$ . Place the tuning pointer at the low frequency end by rotating the tuning knob and adjust the core of oscillator coil L104 to obtain maximum audio output.
3. Set the FM SG to 109 MHz and provide about 3 to  $5\mu\text{V}$ . Rotate the tuning knob and place the tuning pointer at the high frequency end and adjust the trimming capacitor C118 for maximum output.
4. Repeat steps 2 and 3 until no further adjustment is necessary.
5. Set the FM SG to 90 MHz and tune the receiver to the same frequency. Decrease signal generator output until the audio output level decreases with the decreasing generator output. Adjust the ANTENNA coil L101, RF coil L102 and L103 and, IF transformer L105 for minimum audio distortion.
6. Set the FM SG to 106 MHz and tune the receiver to the same frequency. Decrease the signal generator output until the audio output level decreases with the decreasing generator output. Adjust the trimming capacitors of ANTENNA and RF tuning circuits for minimum distortion.
7. Repeat steps 5 and 6 until no further adjustment is necessary.
8. Adjust the secondary core (black) of discriminator transformer L201 so that the center tuning meter pointer indicates its center at no signal applied. Set the FM SG to 98 MHz and increase its output level 1  $\text{K}\mu\text{V}$  and tune the receiver to the same frequency so that the center tuning meter pointer indicates its center.

Adjust the primary core (pink) of L201 for minimum distortion, and adjust the L202 for the maximum deflection of FM signal strength meter M001.

## 6. STEREO SEPARATION ALIGNMENT

1. Set the FM SG to provide 1  $\text{K}\mu\text{V}$  at 98 MHz. Tune the receiver to the same frequency so that the center tuning meter pointer indicates its center. Then turn off the modulation of the FM SG, connect a frequency counter to test point R312 and adjust R304 so that the frequency counter may precisely read 19 kHz.
2. Modulate the FM SG with stereo composite signal consisting of only L or R channel (of course a pilot signal must be included).
3. Adjust the trimming resistor R303 for maximum and same separation in both channels.

## 7. MUTING THRESHOLD ADJUSTMENT

Set the FM SG output to provide  $12.5\mu\text{V}$  (IHF) at 98 MHz and tune receiver to the same frequency. Adjust the trimming resistor R253 for the threshold level of  $12.5\mu\text{V}$ . (During this adjustment turn the MUTING pushswitch "on".)

## 8. FM DOLBY LEVEL ADJUSTMENT

1. Set the FM SG to provide a 400Hz, 50% modulated 98 MHz mono signal, at 1  $\text{K}\mu\text{V}$  output. Precisely tune the receiver to 98 MHz.
2. Depress the FM DOLBY pushswitch, and adjust RC01 and RC02 until the outputs of both channels are 580mV.

## 9. POWER AMPLIFIER ADJUSTMENT


Connect a VTVM between J712(+) and J718 (-) and adjust the trimming resistor R733 until the VTVM reads 20 mV DC. And next, connect a VTVM between J723 and J722 (GROUND) and adjust the trimming resistor R711 until the VTVM reads 0 mV DC. Do over again. For the other channel, connect the VTVM between J713(+) and J719(-) and adjust the R734 for the same reading, and connect the VTVM between J724 and J722 and adjust the R712 for the same reading. Do over again.

## 10. POWER SUPPLY ADJUSTMENT


Connect a VTVM between J812(+) and J811(-) and adjust R808 until the VTVM reads 35.0 V under no signal condition.

## 11. MAJOR COMPONENT LOCATIONS


### 11.1 FRONT PANEL ADJUSTMENT AND COMPONENT LOCATIONS

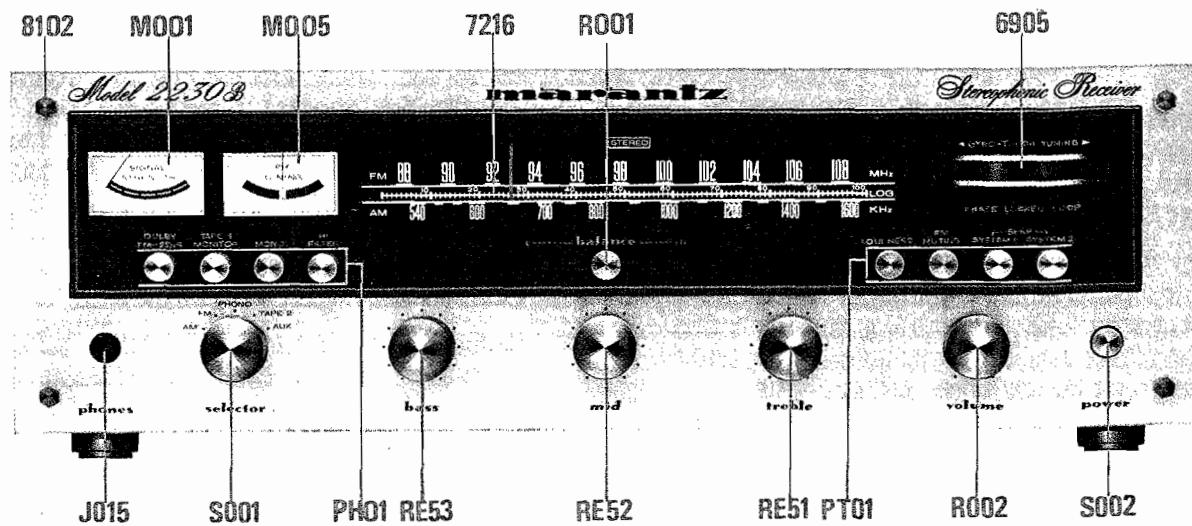


### 11.2 MAIN CHASSIS COMPONENT LOCATIONS (TOP VIEW)

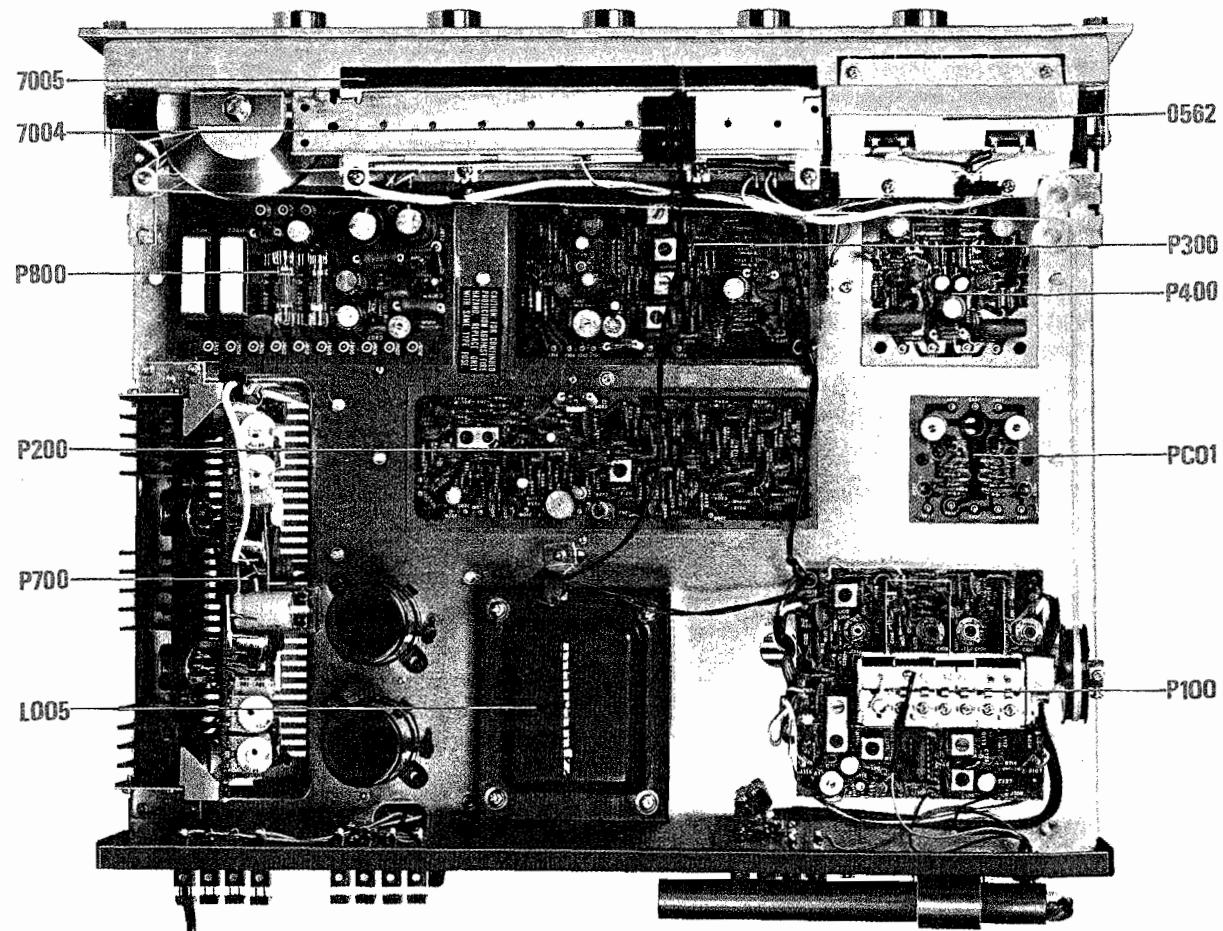

### 11.3 REAR PANEL ADJUSTMENT AND COMPONENT LOCATIONS

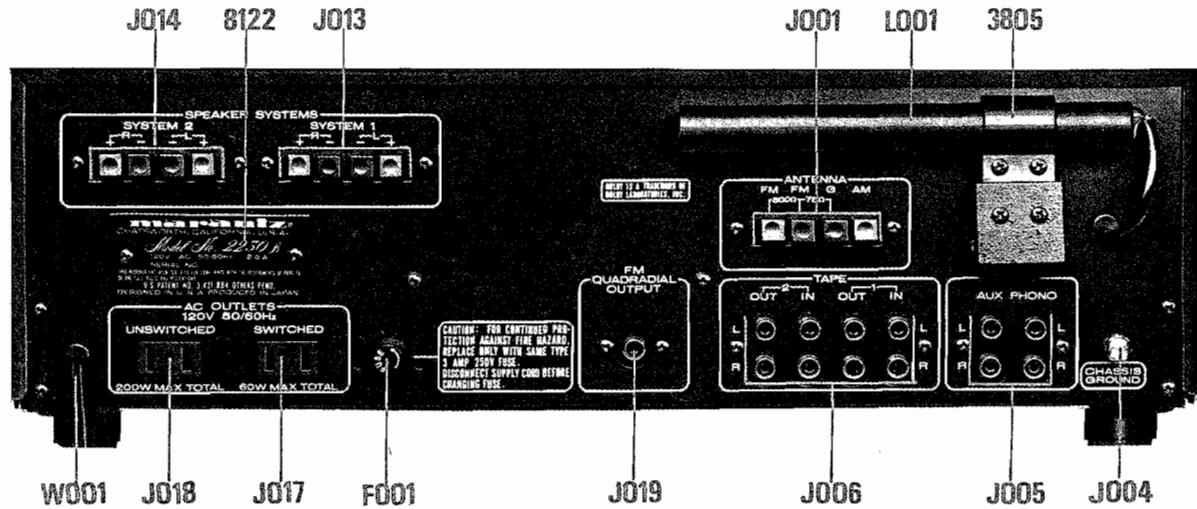


### 11.4 MAIN CHASSIS COMPONENT LOCATIONS (BOTTOM VIEW)

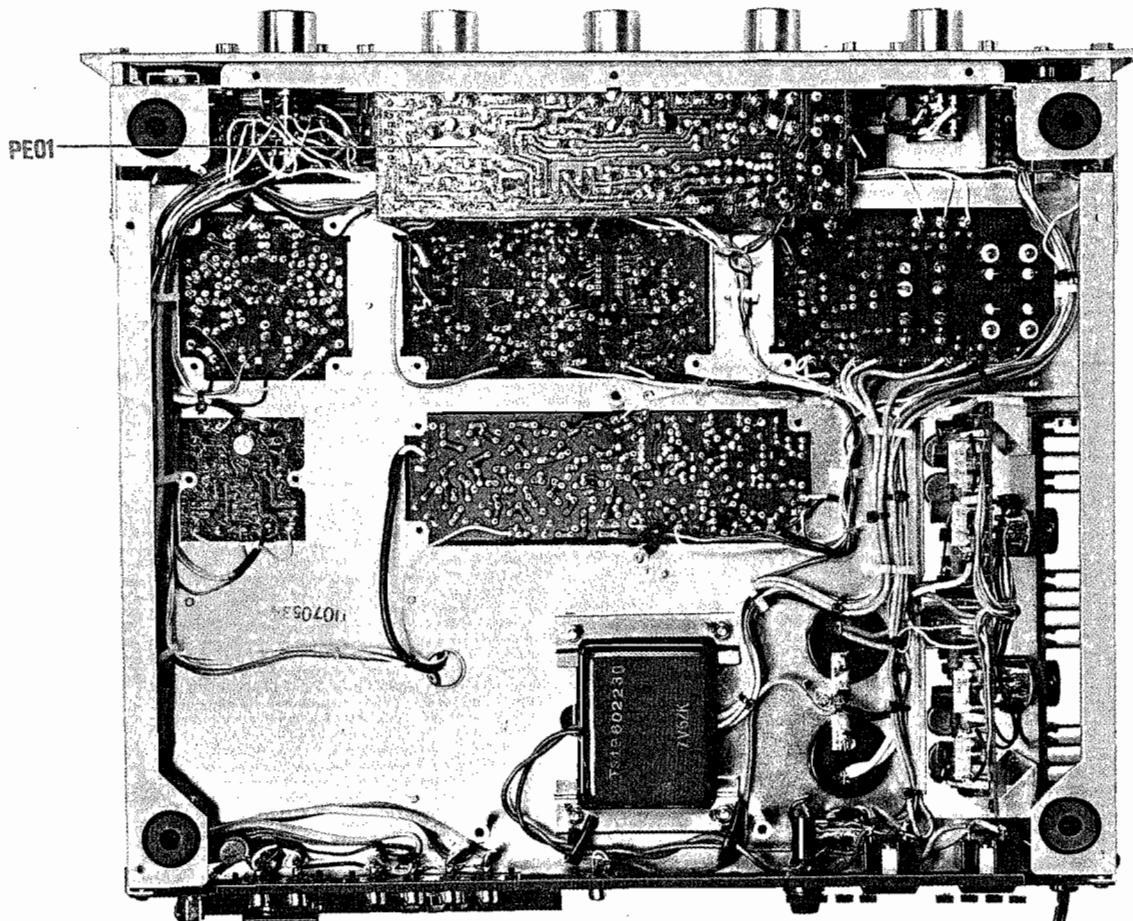


# marantz



## 12. DIAGRAM AND COMPONENT LOCATIONS

### 12.1 FM FRONT END AND AM TUNER ASSEMBLY (P100) SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS


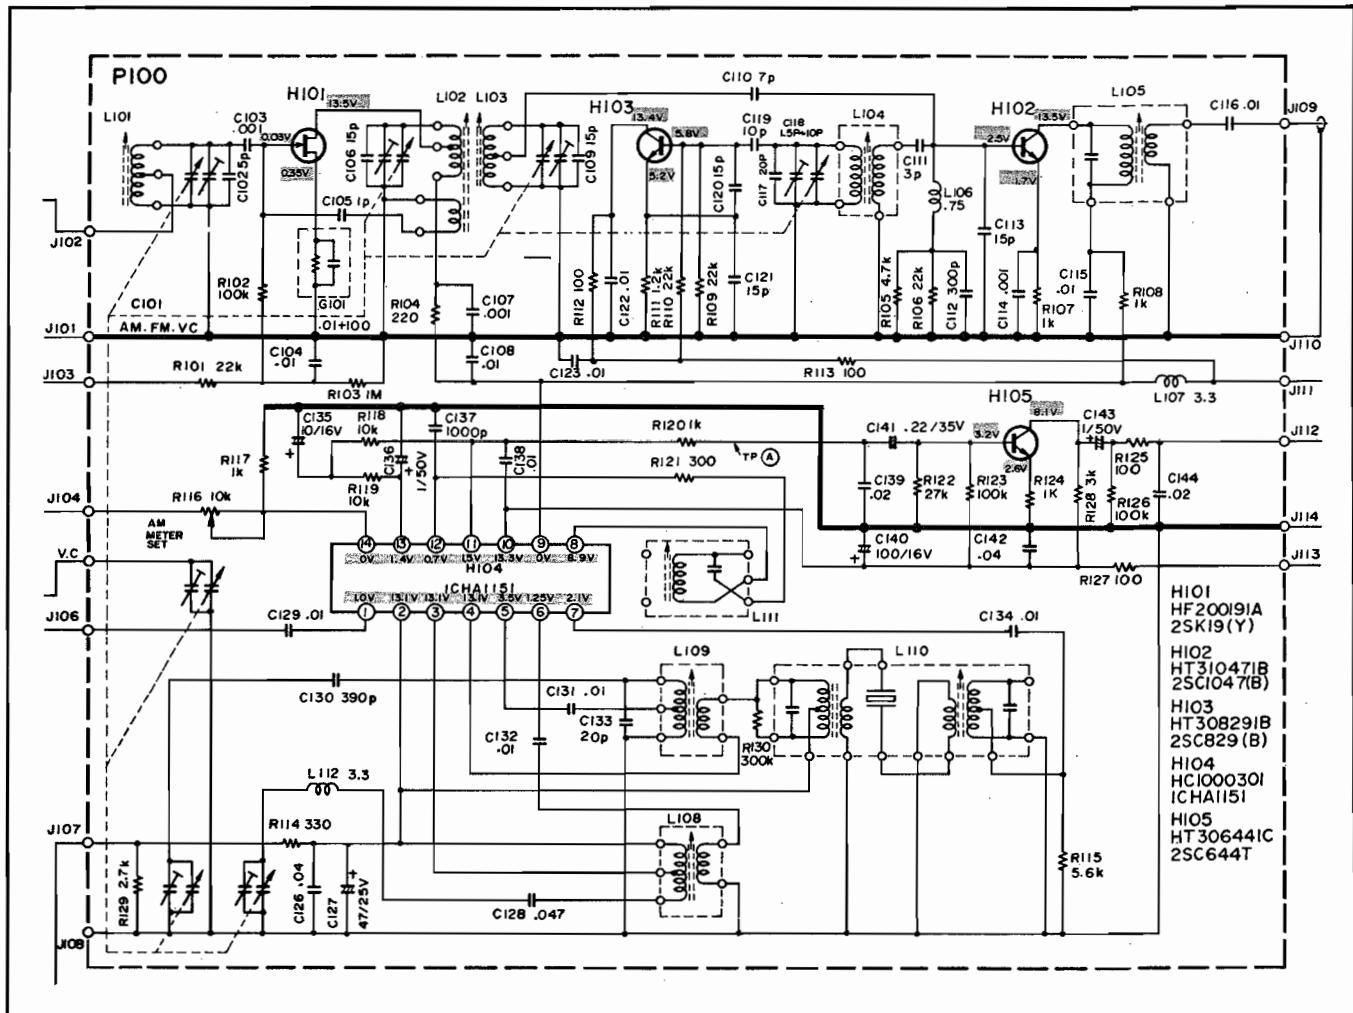


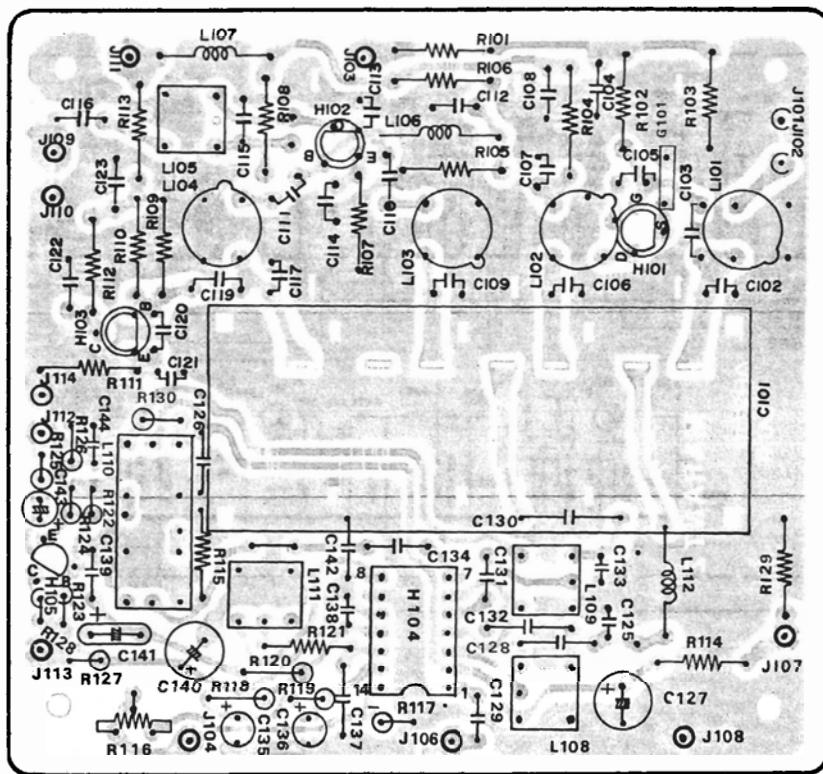


## 12.2 FM IF AMPLIFIER, DETECTOR, MUTING CONTROL AND METER UNIT ASSEMBLY (P200) SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS

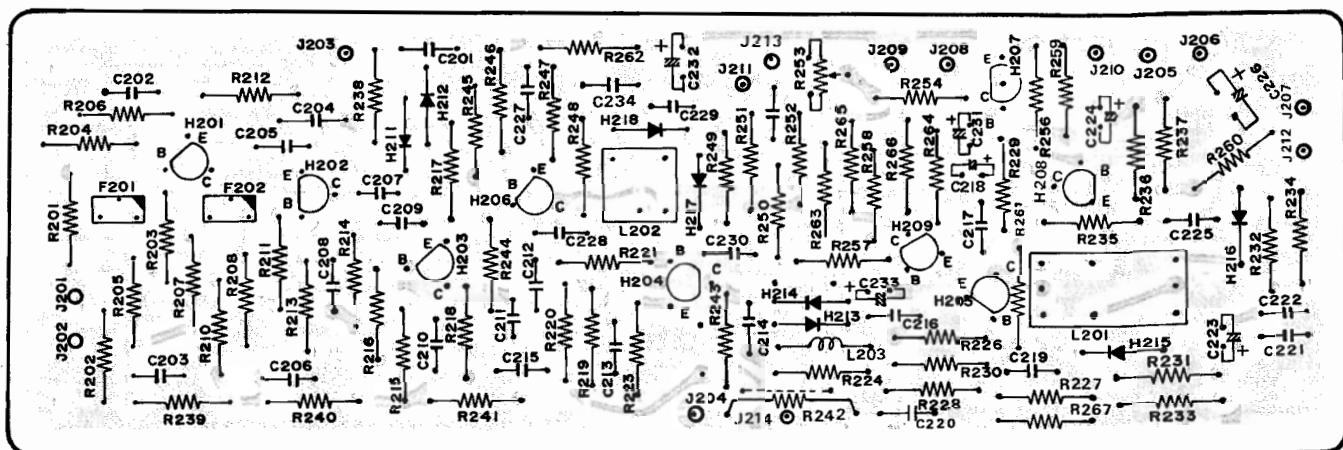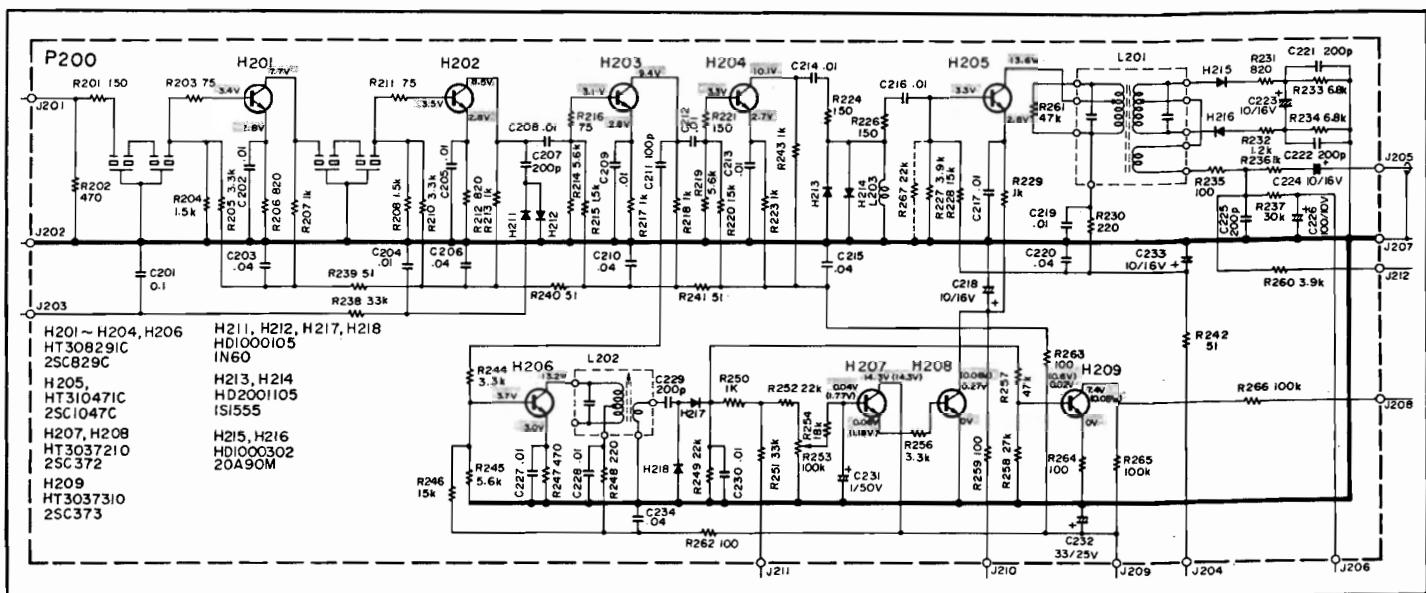


## 12.3 MPX STEREO DECODING AMPLIFIER ASSEMBLY (P300) SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS

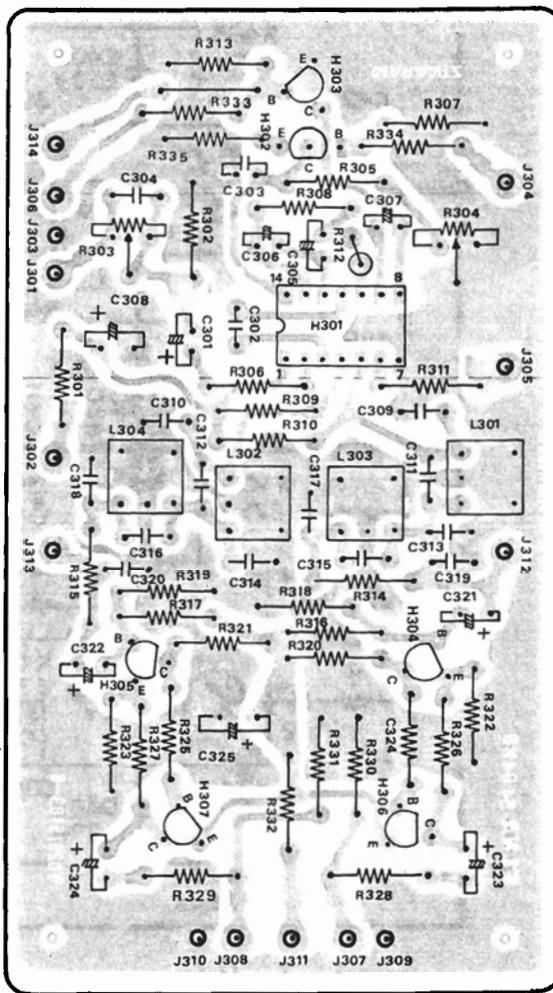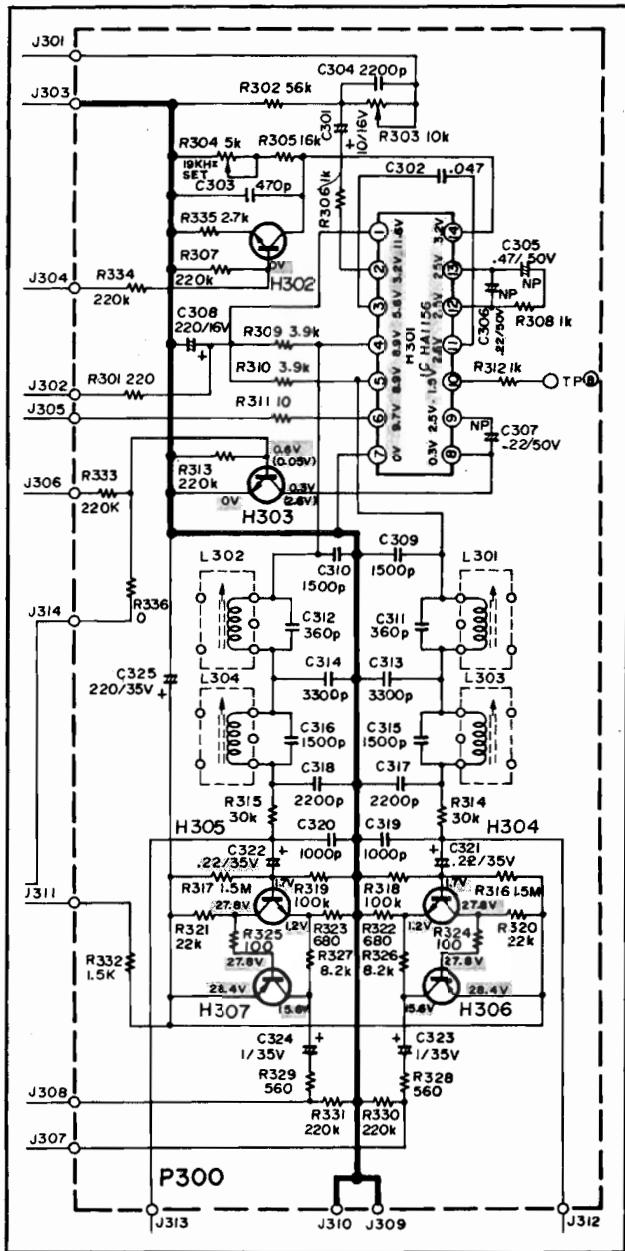



**12.4 PHONO AMPLIFIER ASSEMBLY (P400) SCHEMATIC DIAGRAM AND  
COMPONENT LOCATIONS**

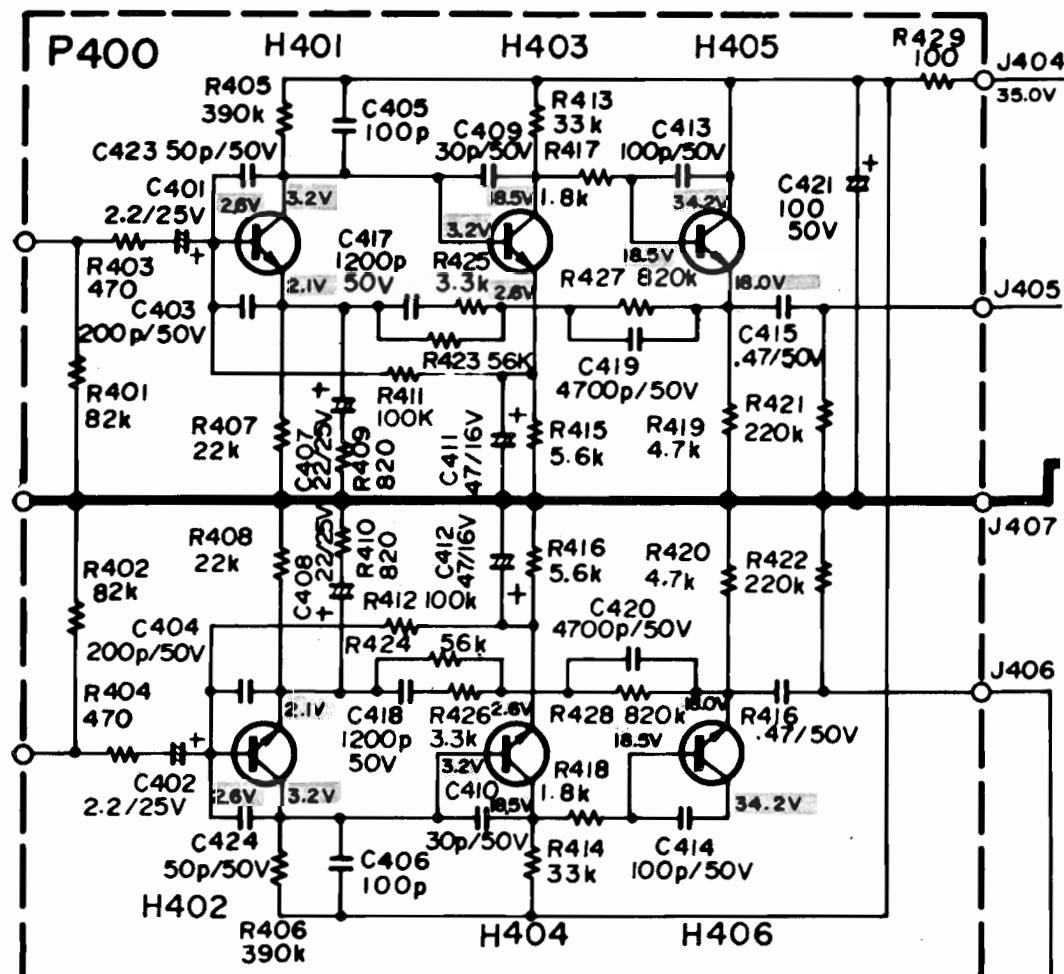


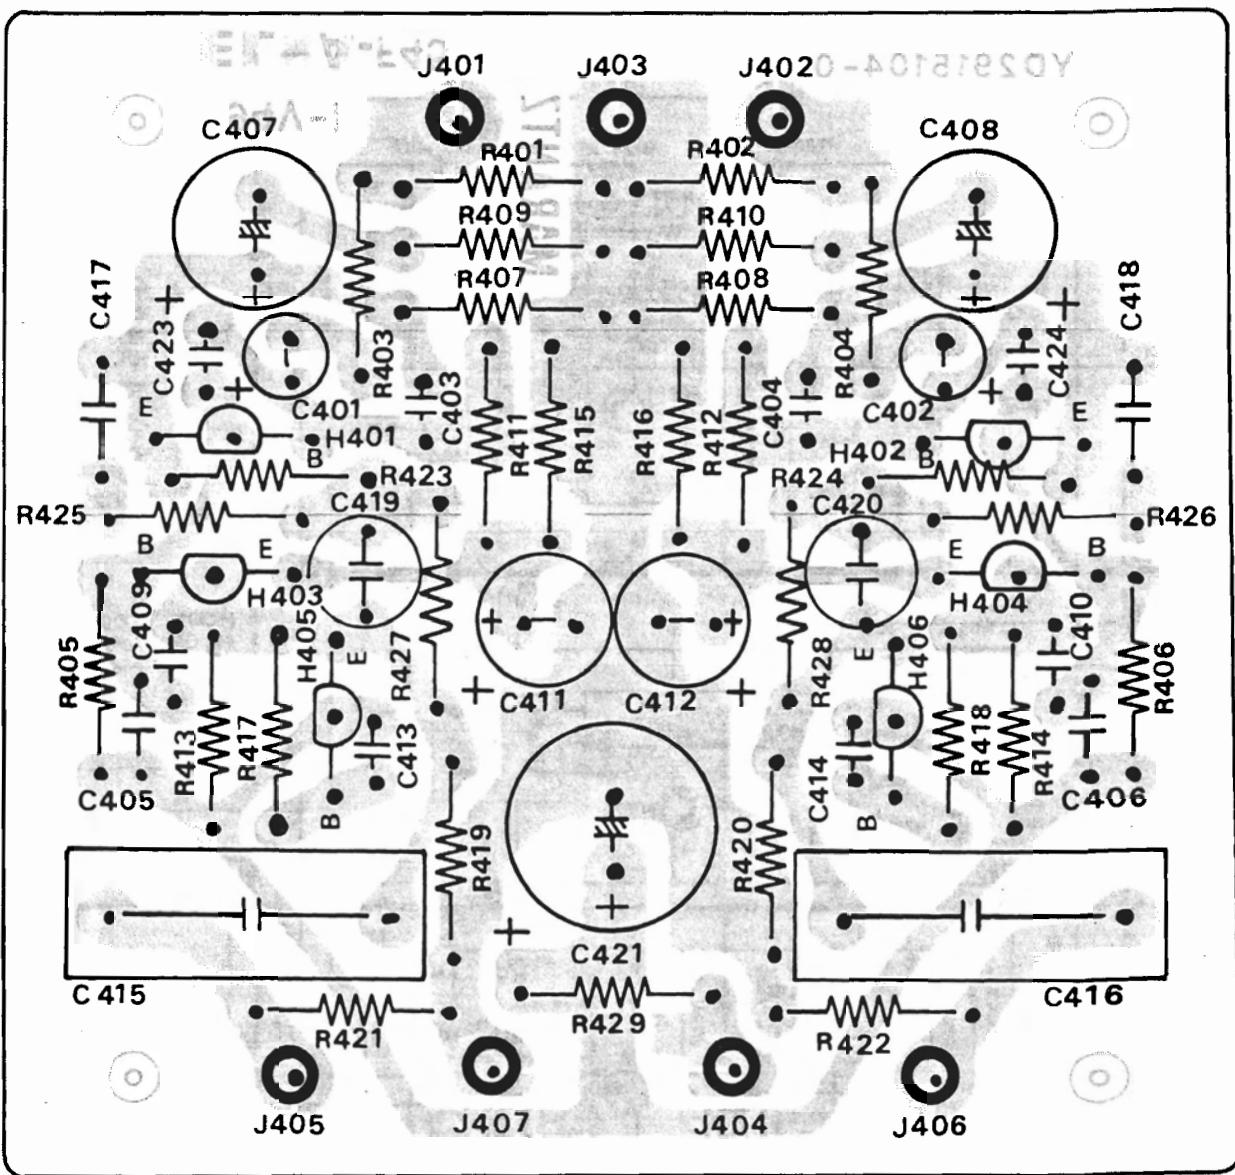


## 12.5 POWER AMPLIFIER ASSEMBLY (P700) SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS


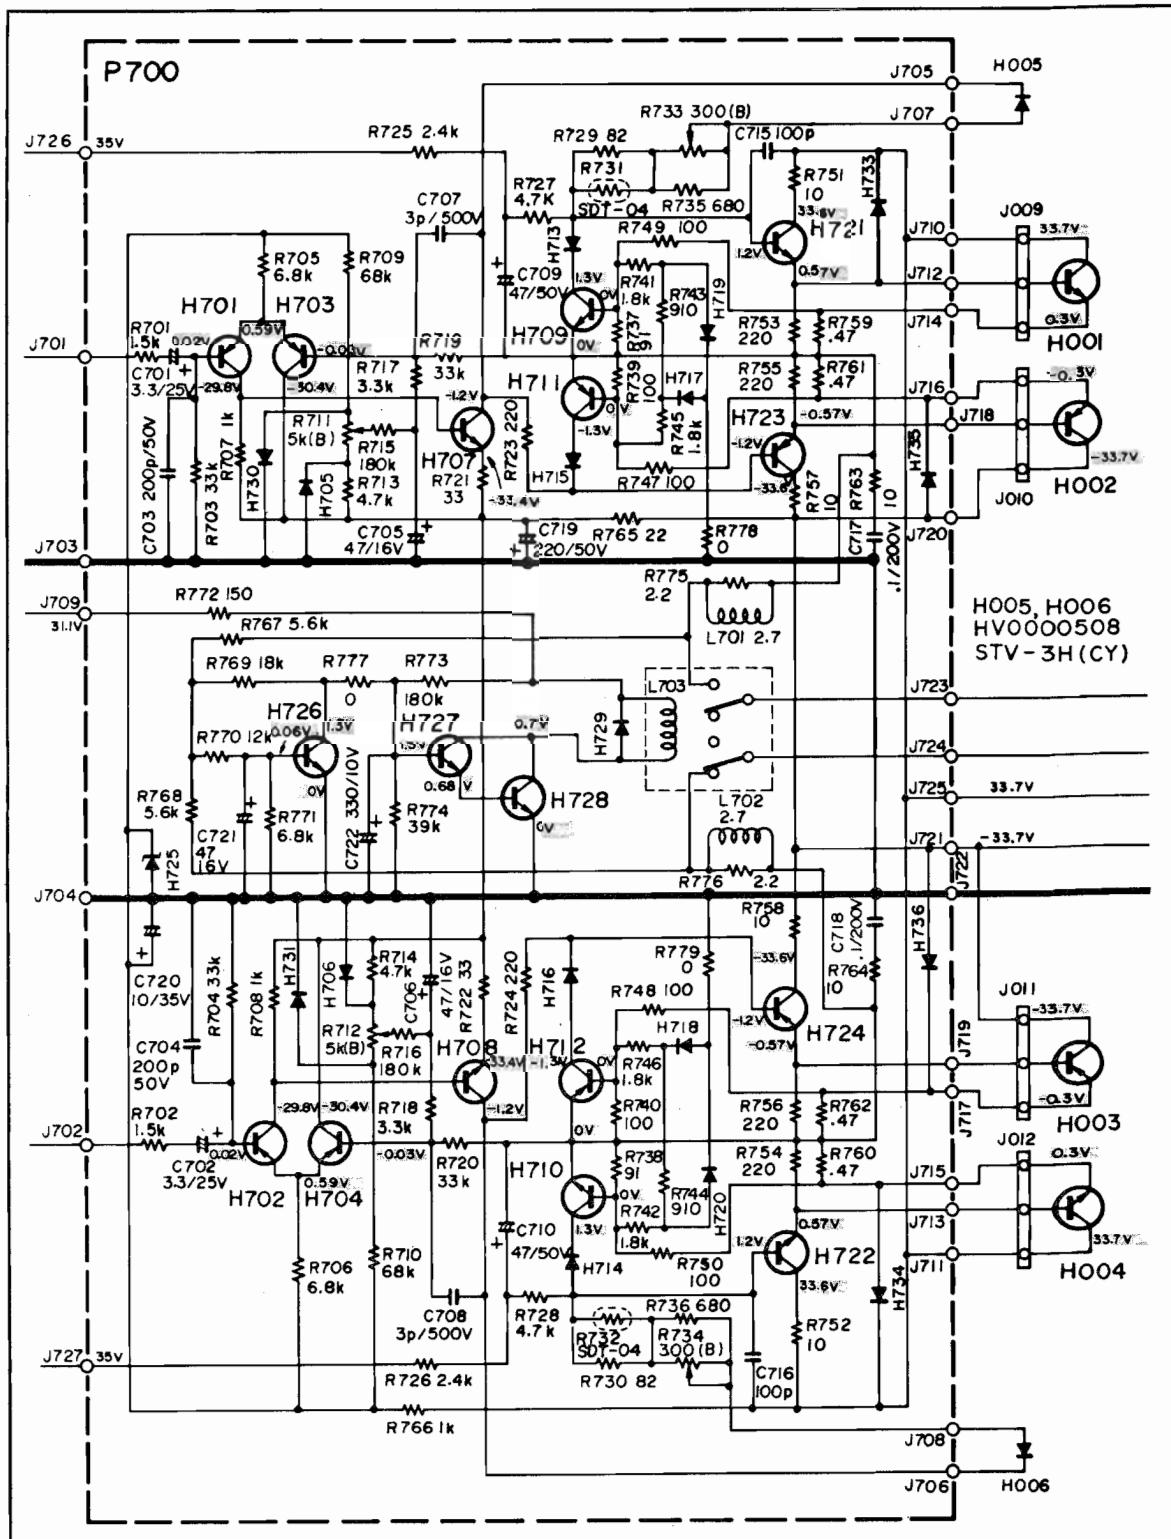


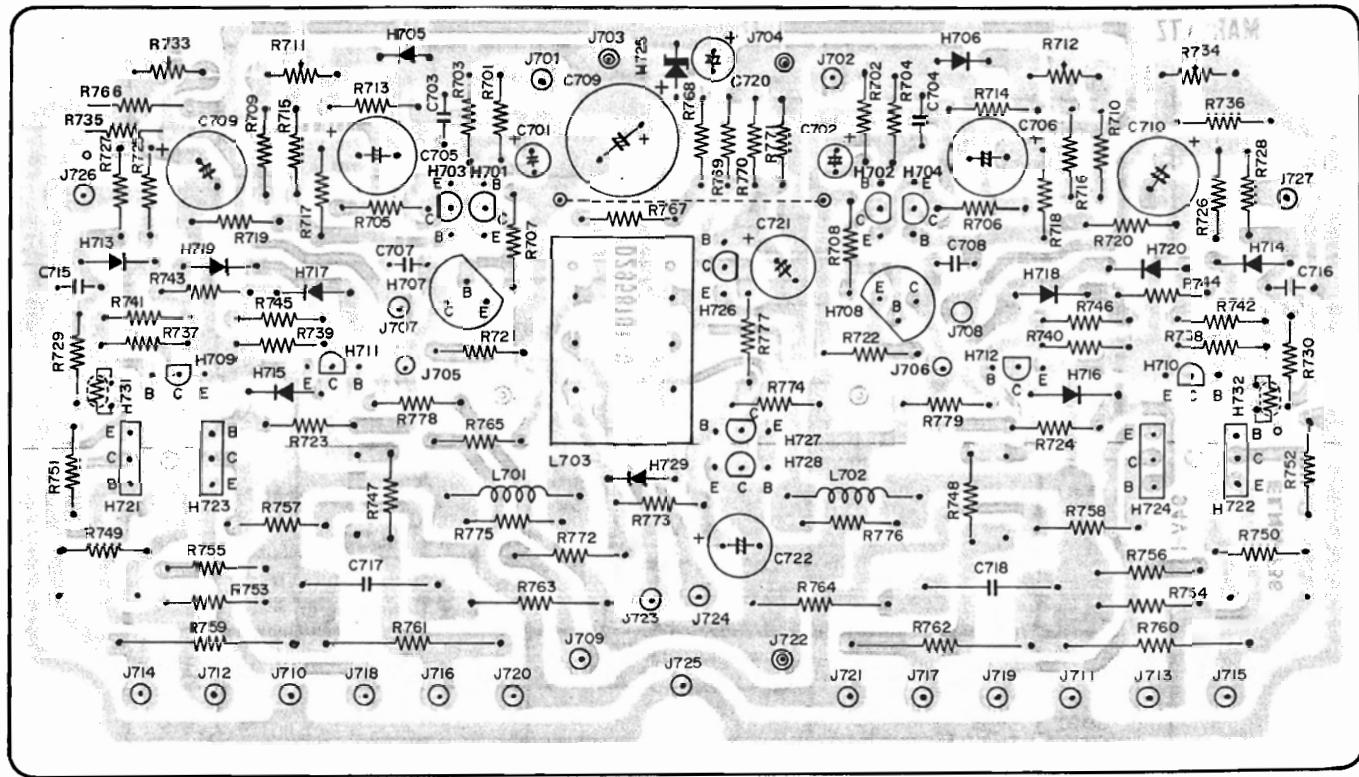

## 12.6 POWER SUPPLY ASSEMBLY (P800) SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS

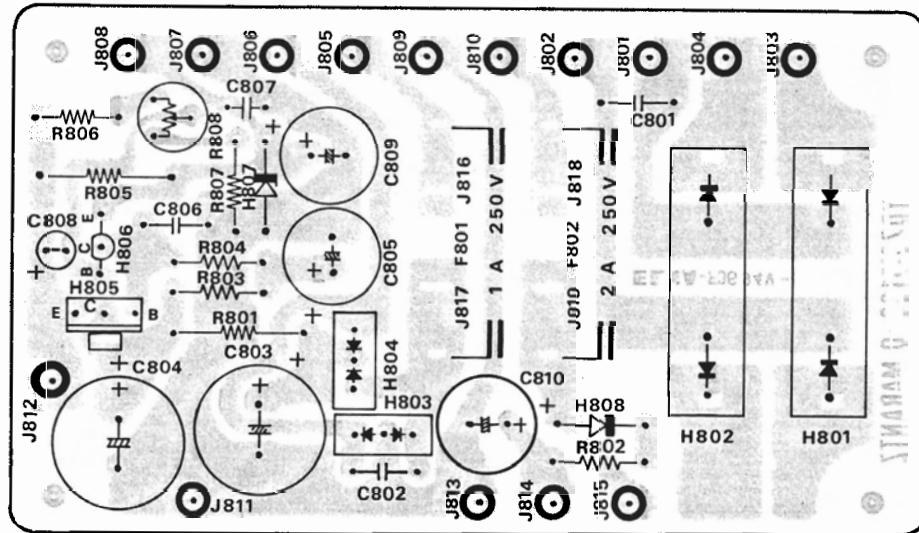
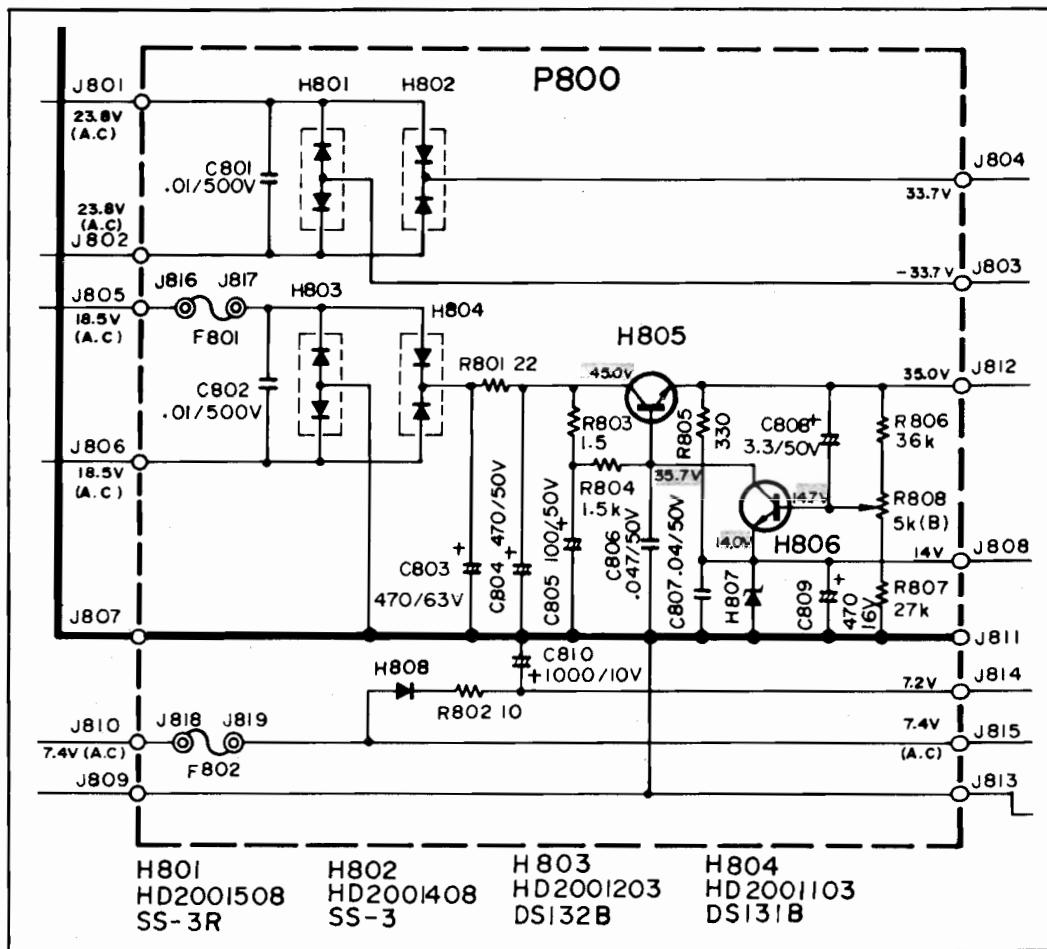


12.7 DOLBY FM SET ASSEMBLY (PC01) SCHEMATIC DIAGRAM AND  
COMPONENT LOCATIONS

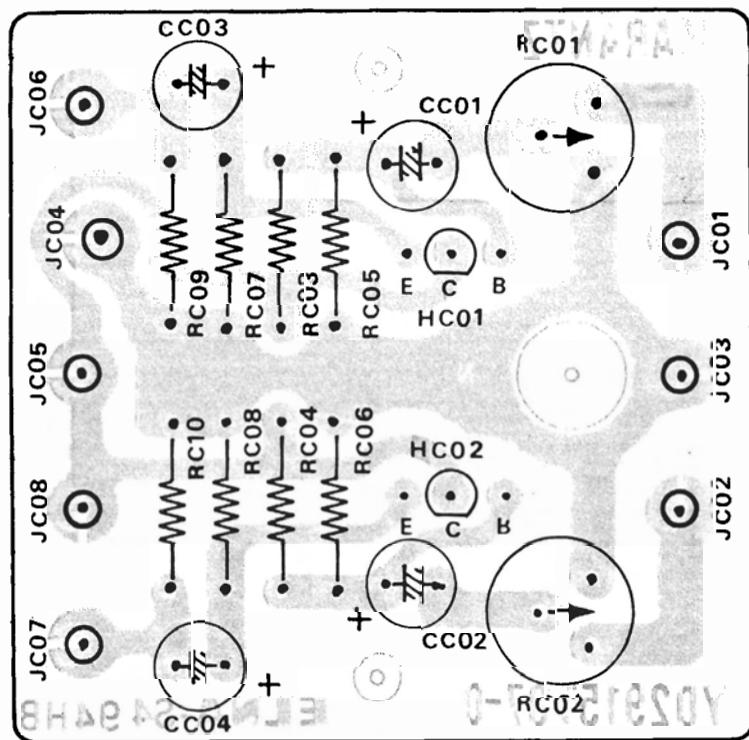
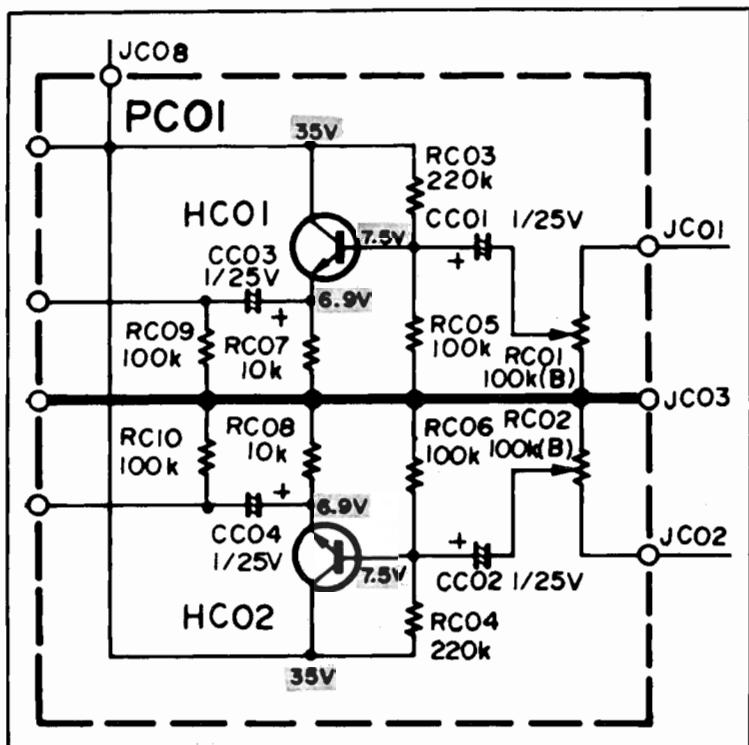


**marantz**

**12.8 DIAL LAMP ASSEMBLY (PZ01) SCHEMATIC DIAGRAM AND  
COMPONENT LOCATIONS**

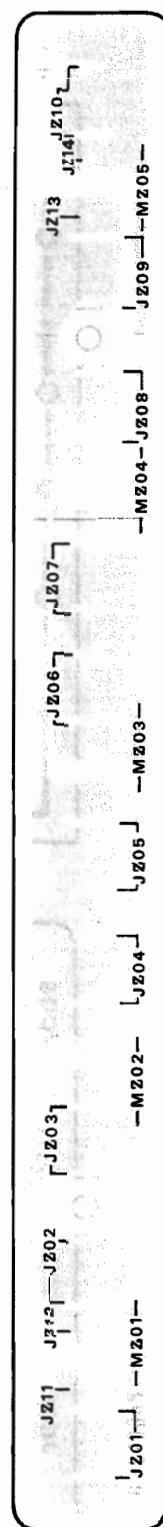
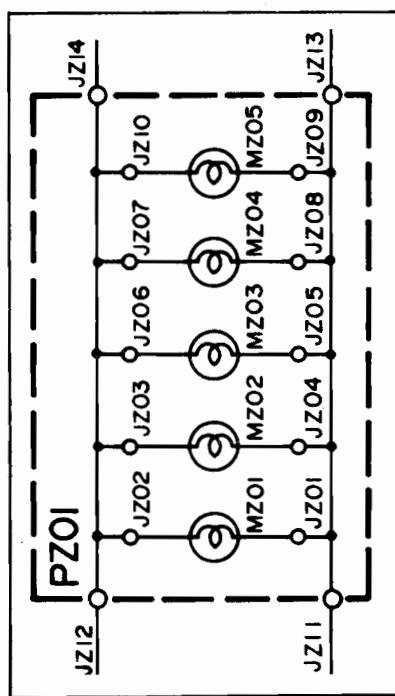


## 12.9 TONE AMPLIFIER ASSEMBLY (PE01) SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS

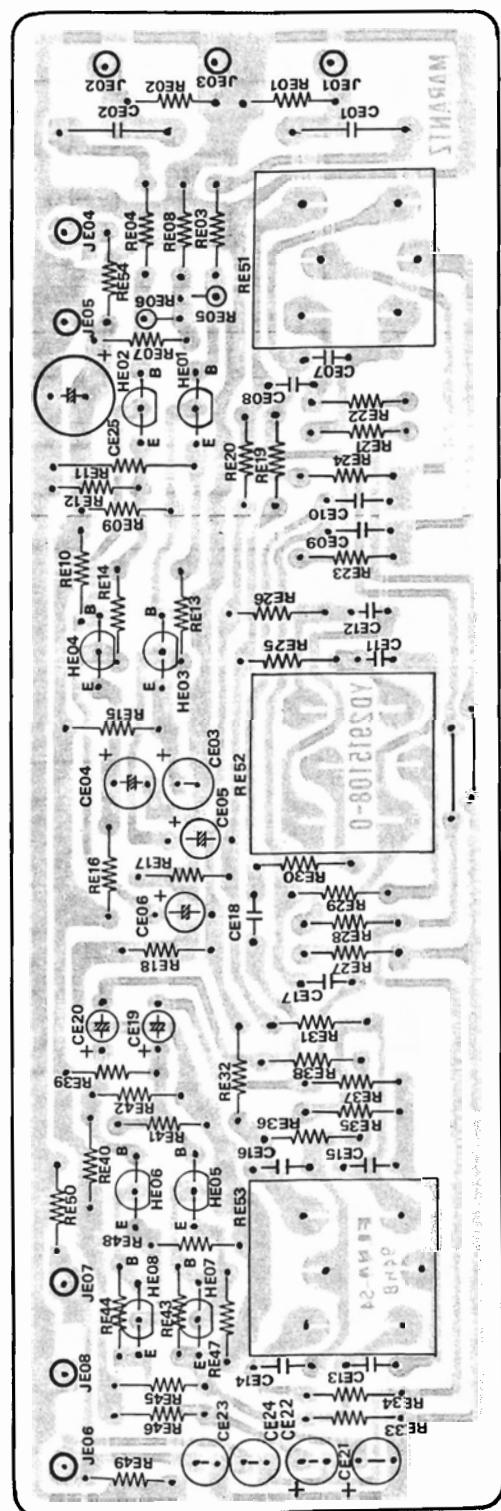
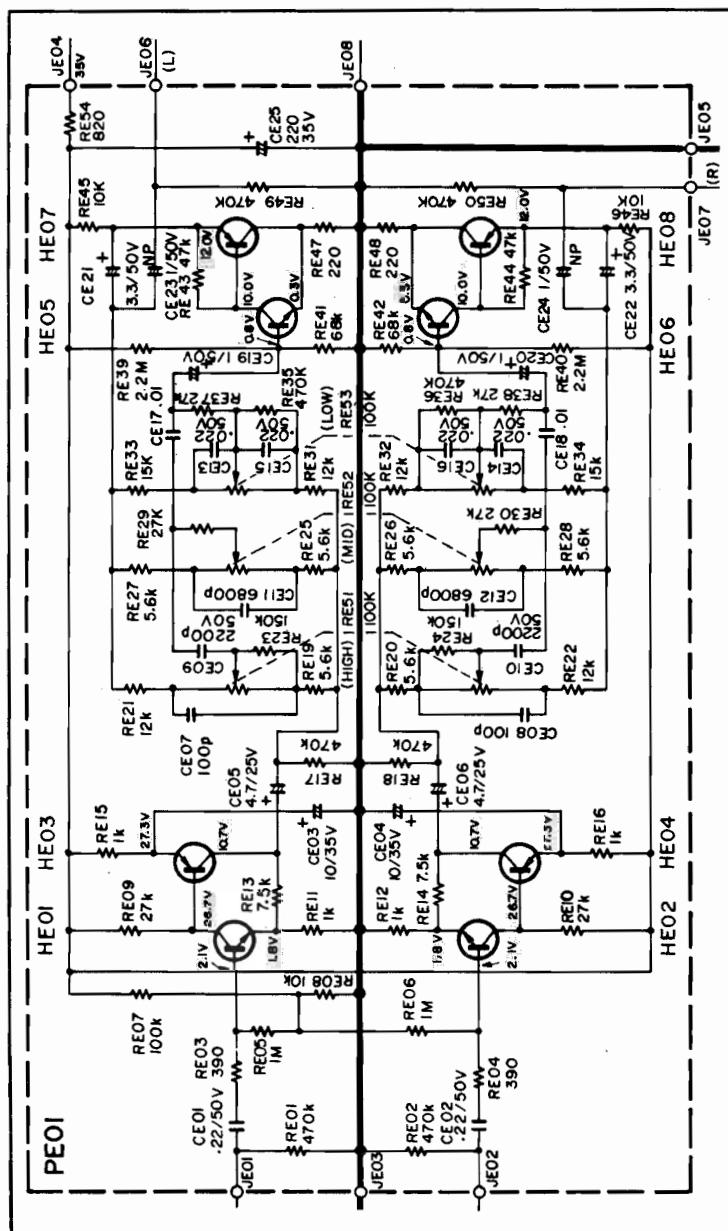


**12.10 FILTER ASSEMBLY (PH01) SCHEMATIC DIAGRAM AND  
COMPONENT LOCATIONS**



— For U.S.A. & Canadian Model —

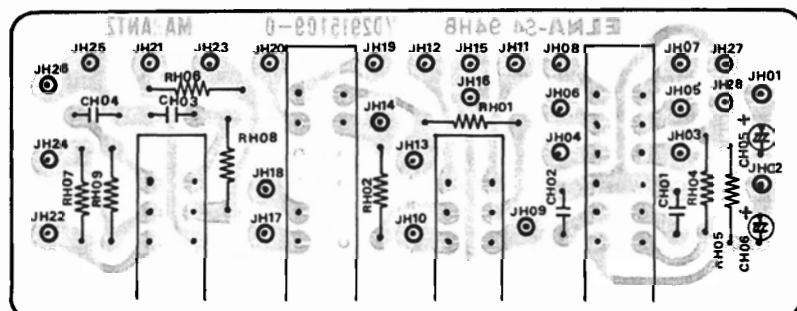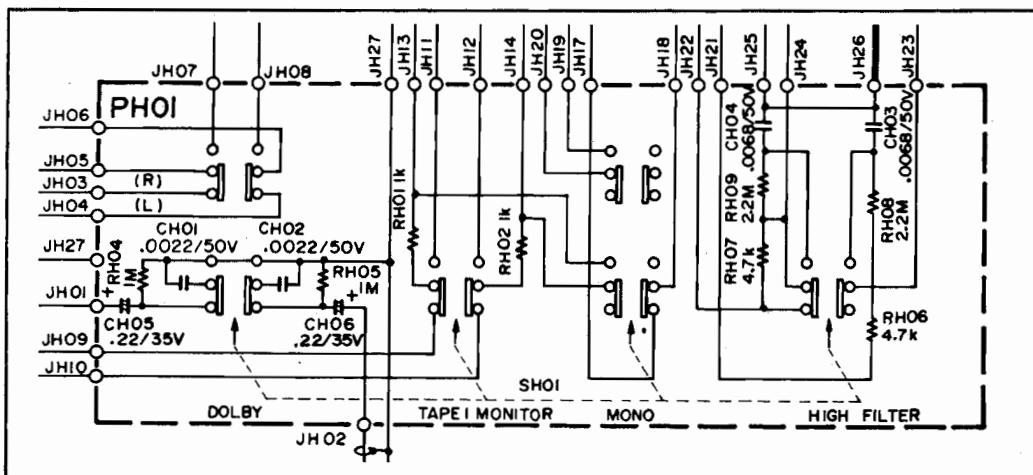

— For European Model —

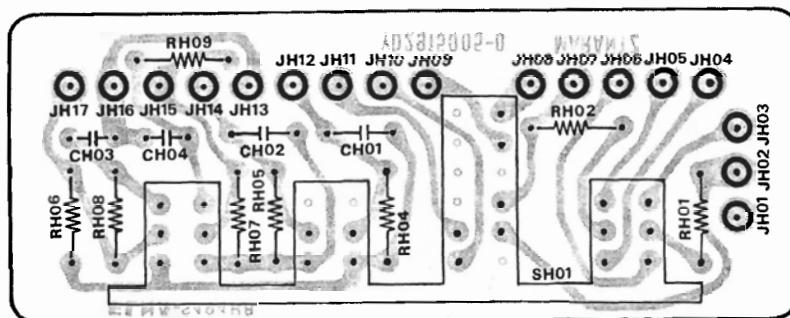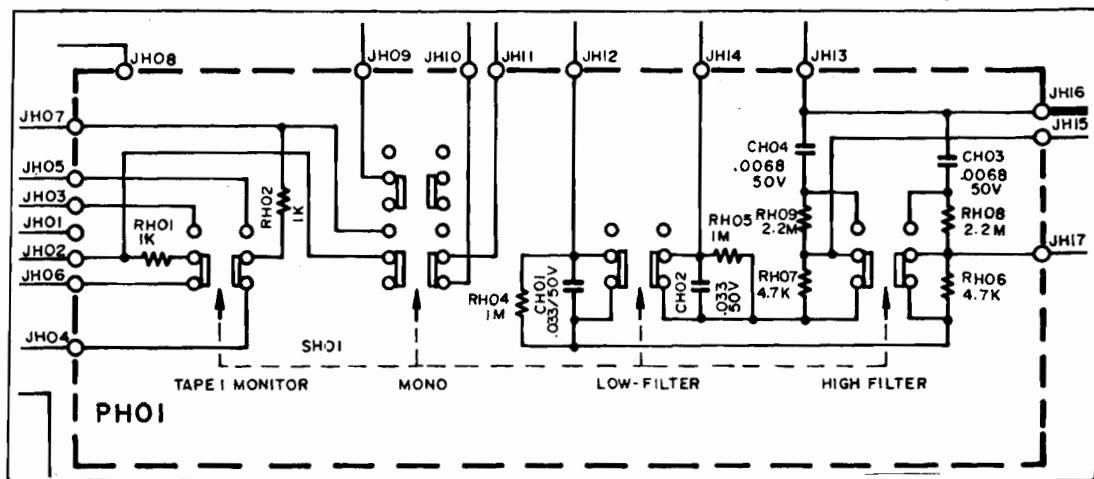


**12.11 LOUDNESS, MUTING, SYSTEM 1 AND 2 SPKR SWITCH ASSEMBLY (PT01)  
SHCEMATIC DIAGRAM AND COMPONENT LOCATIONS**

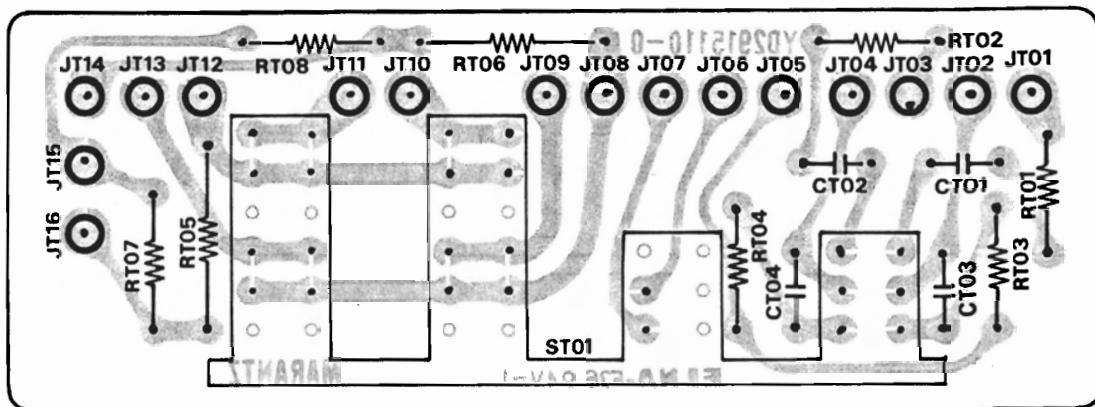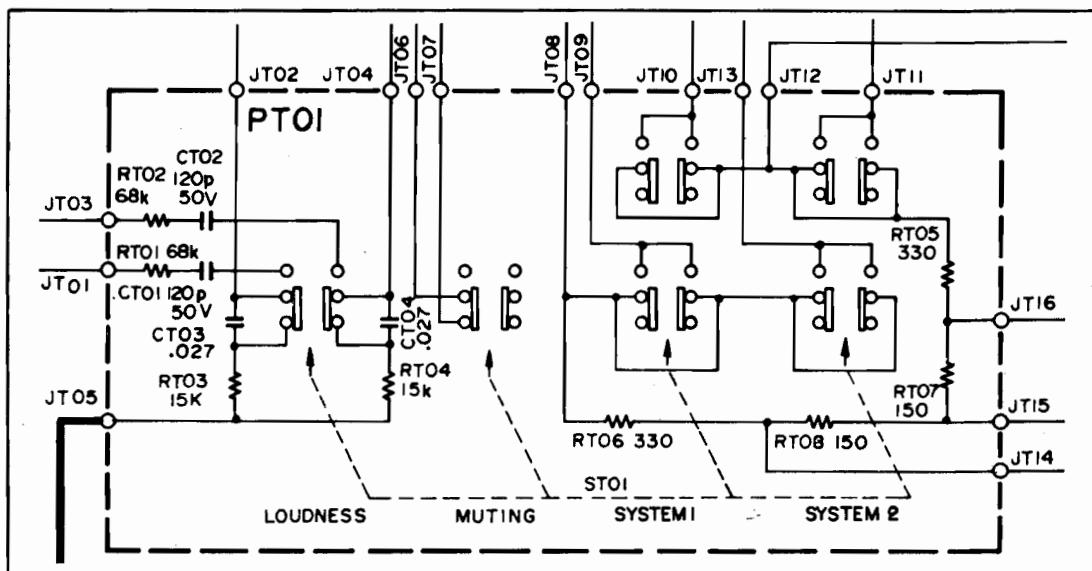




## 13. BLOCK DIAGRAM

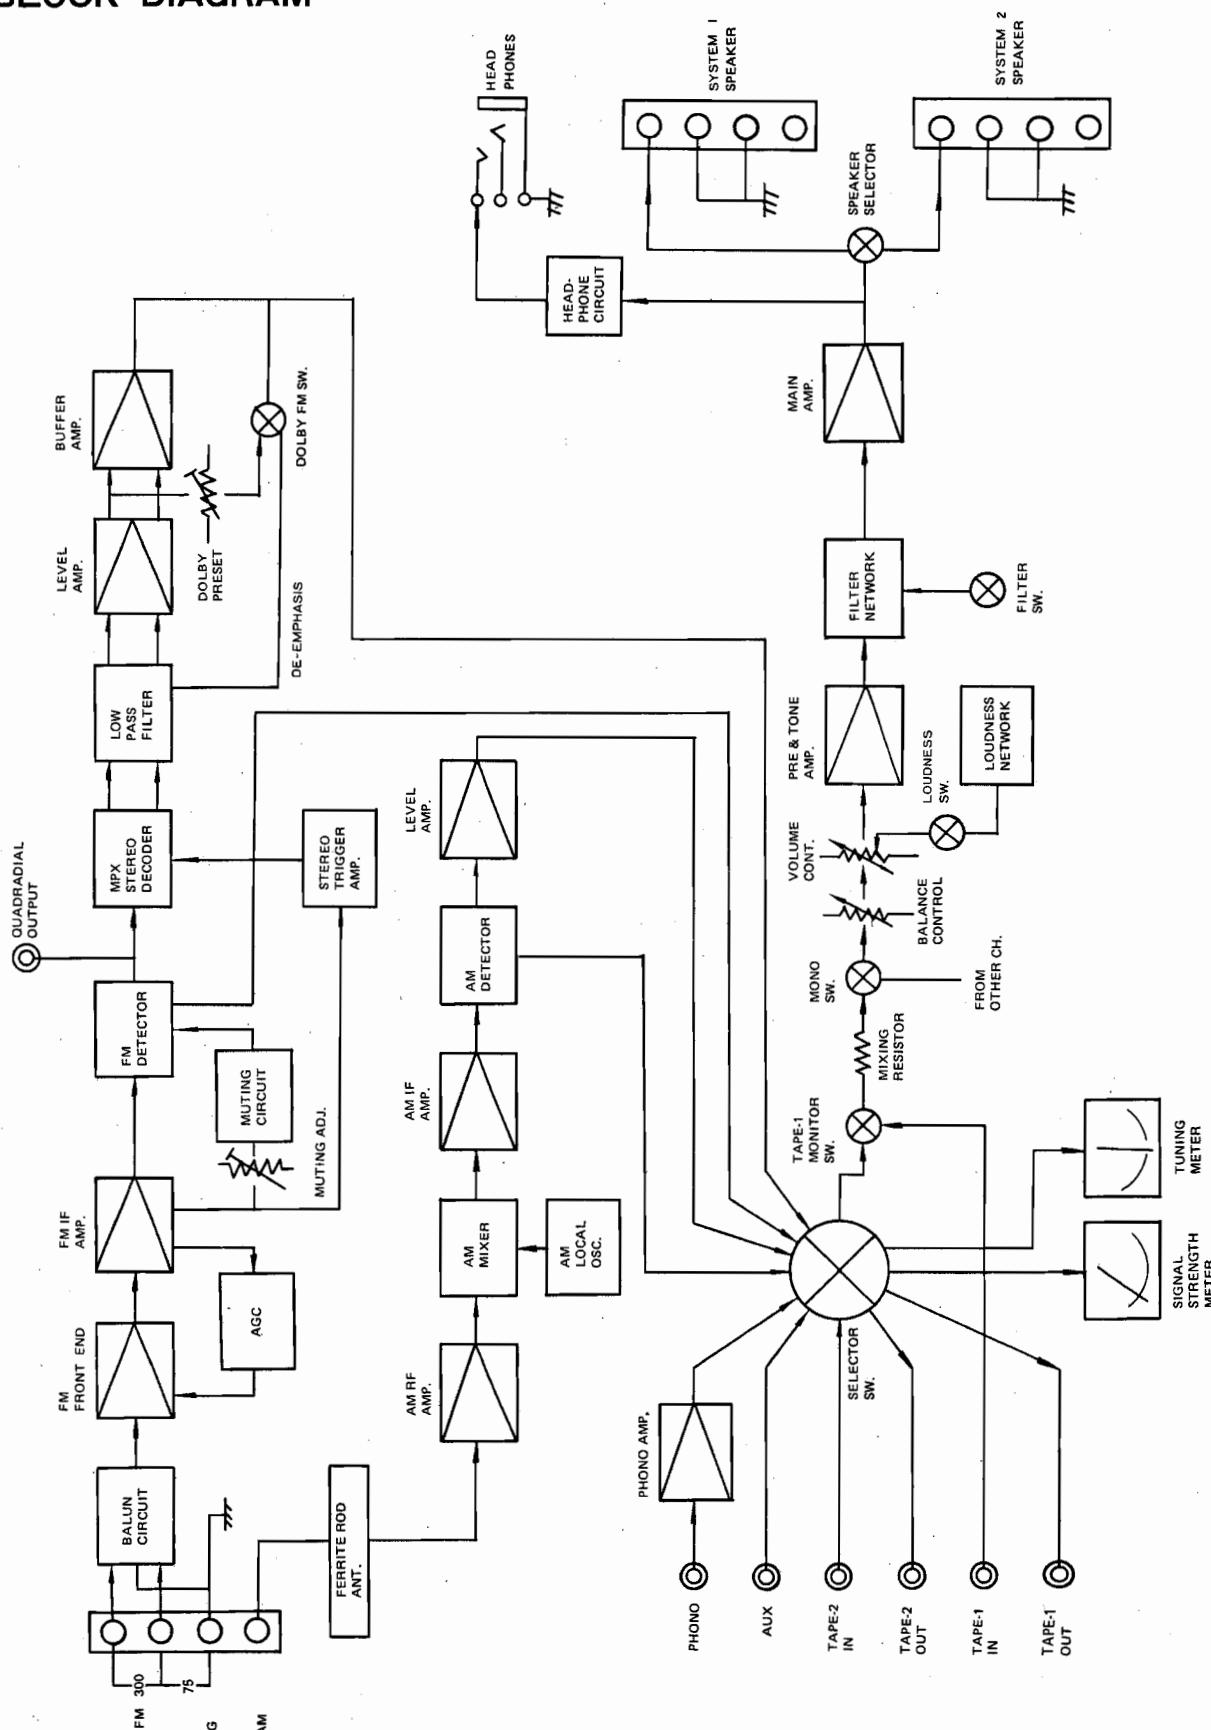


#### 14. SCHEMATIC DIAGRAM

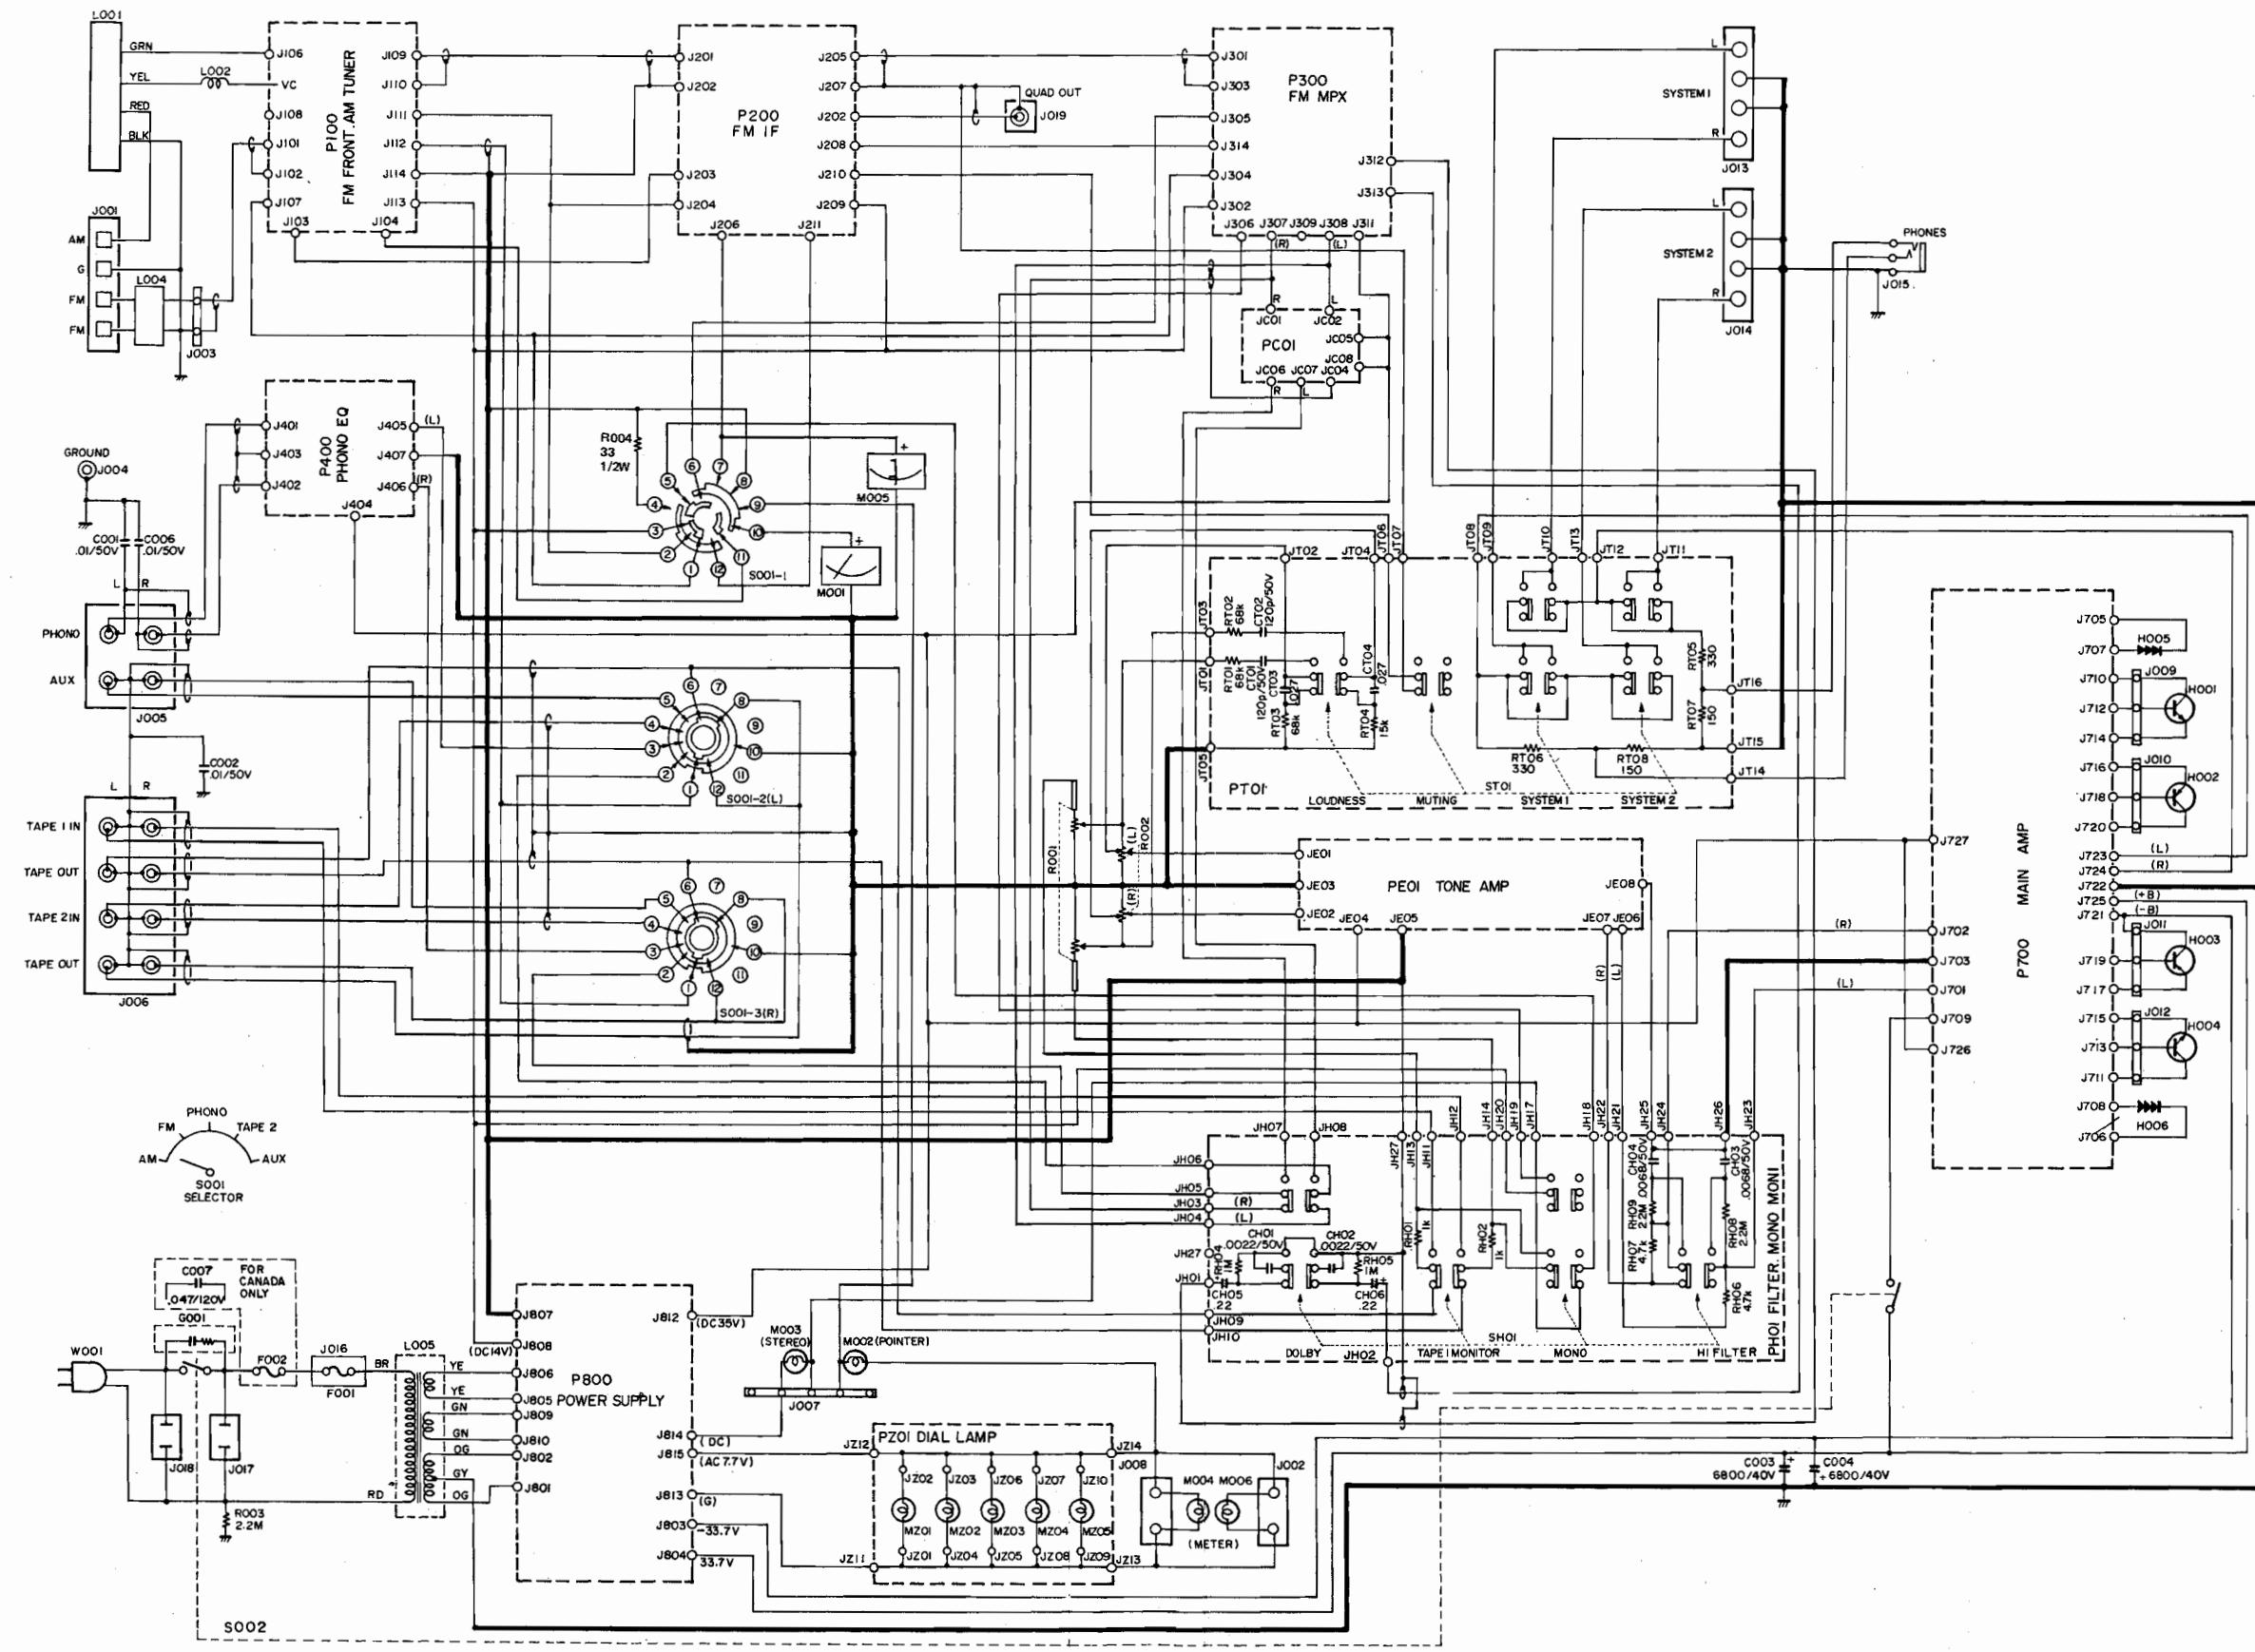


## 15. CIRCUIT DIAGRAM

— For U.S.A. & Canadian Model —

**Model 2230B**

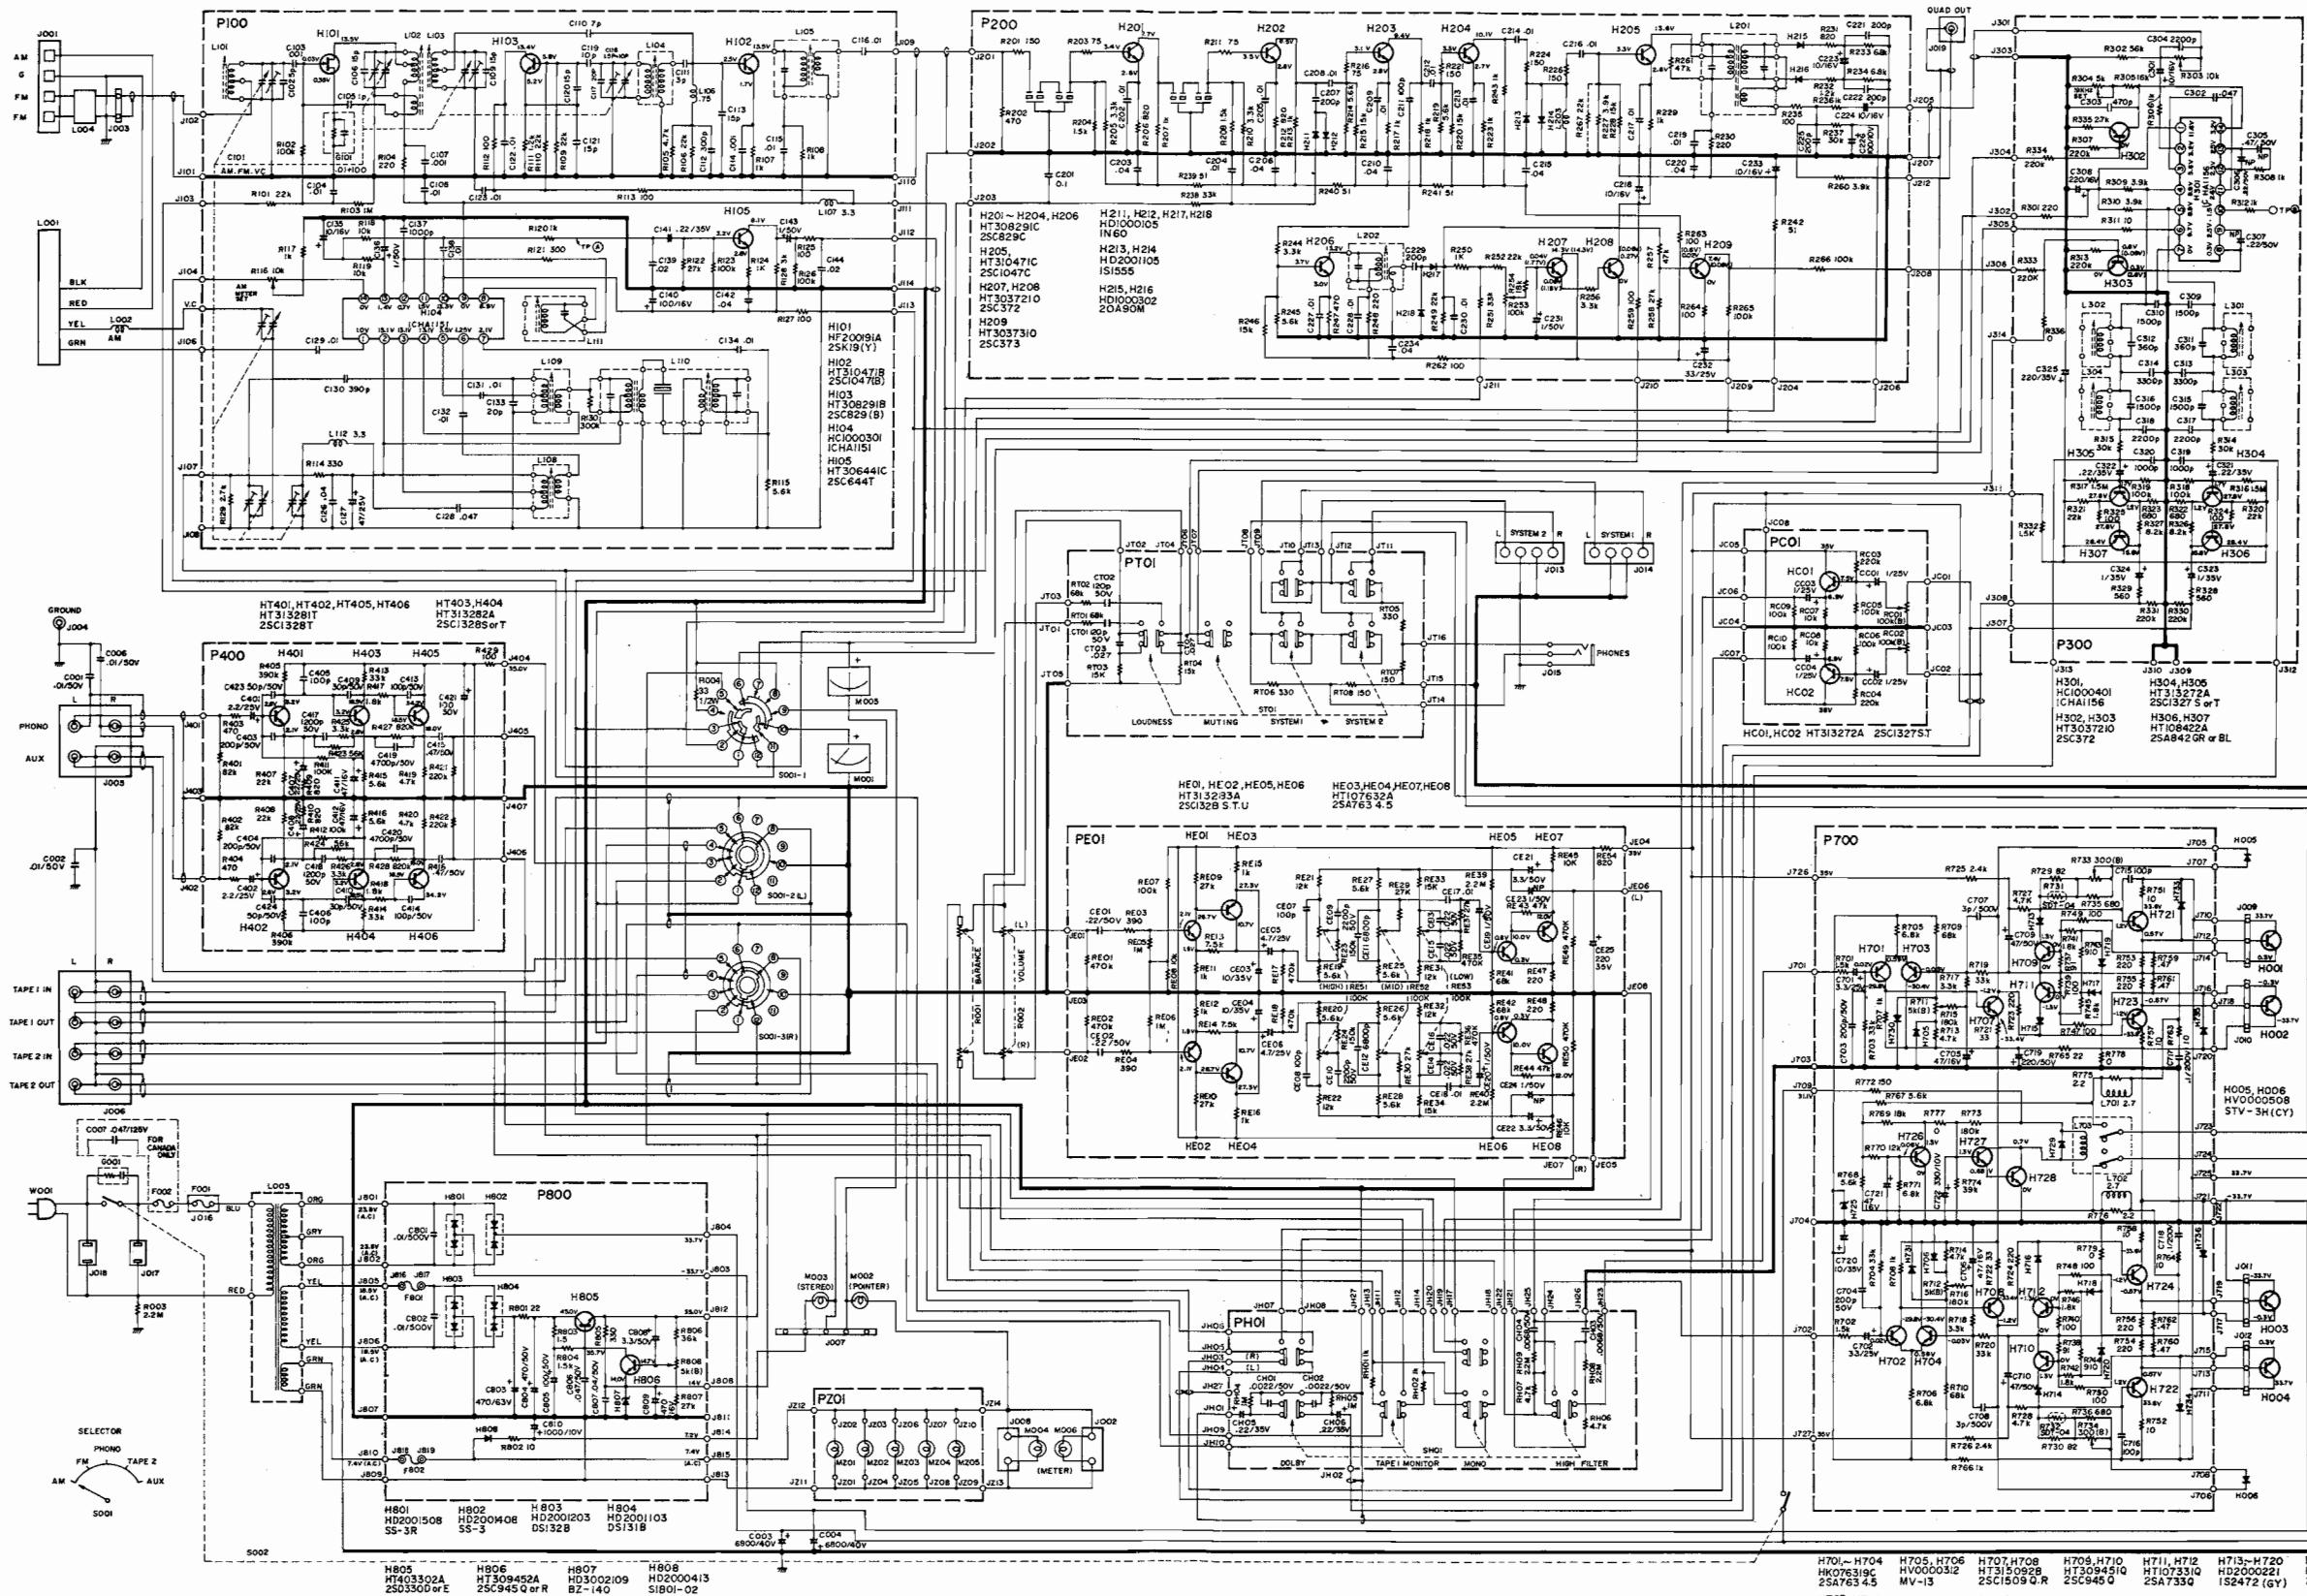

## 16. EXPLODED MECHANICAL DIAGRAM

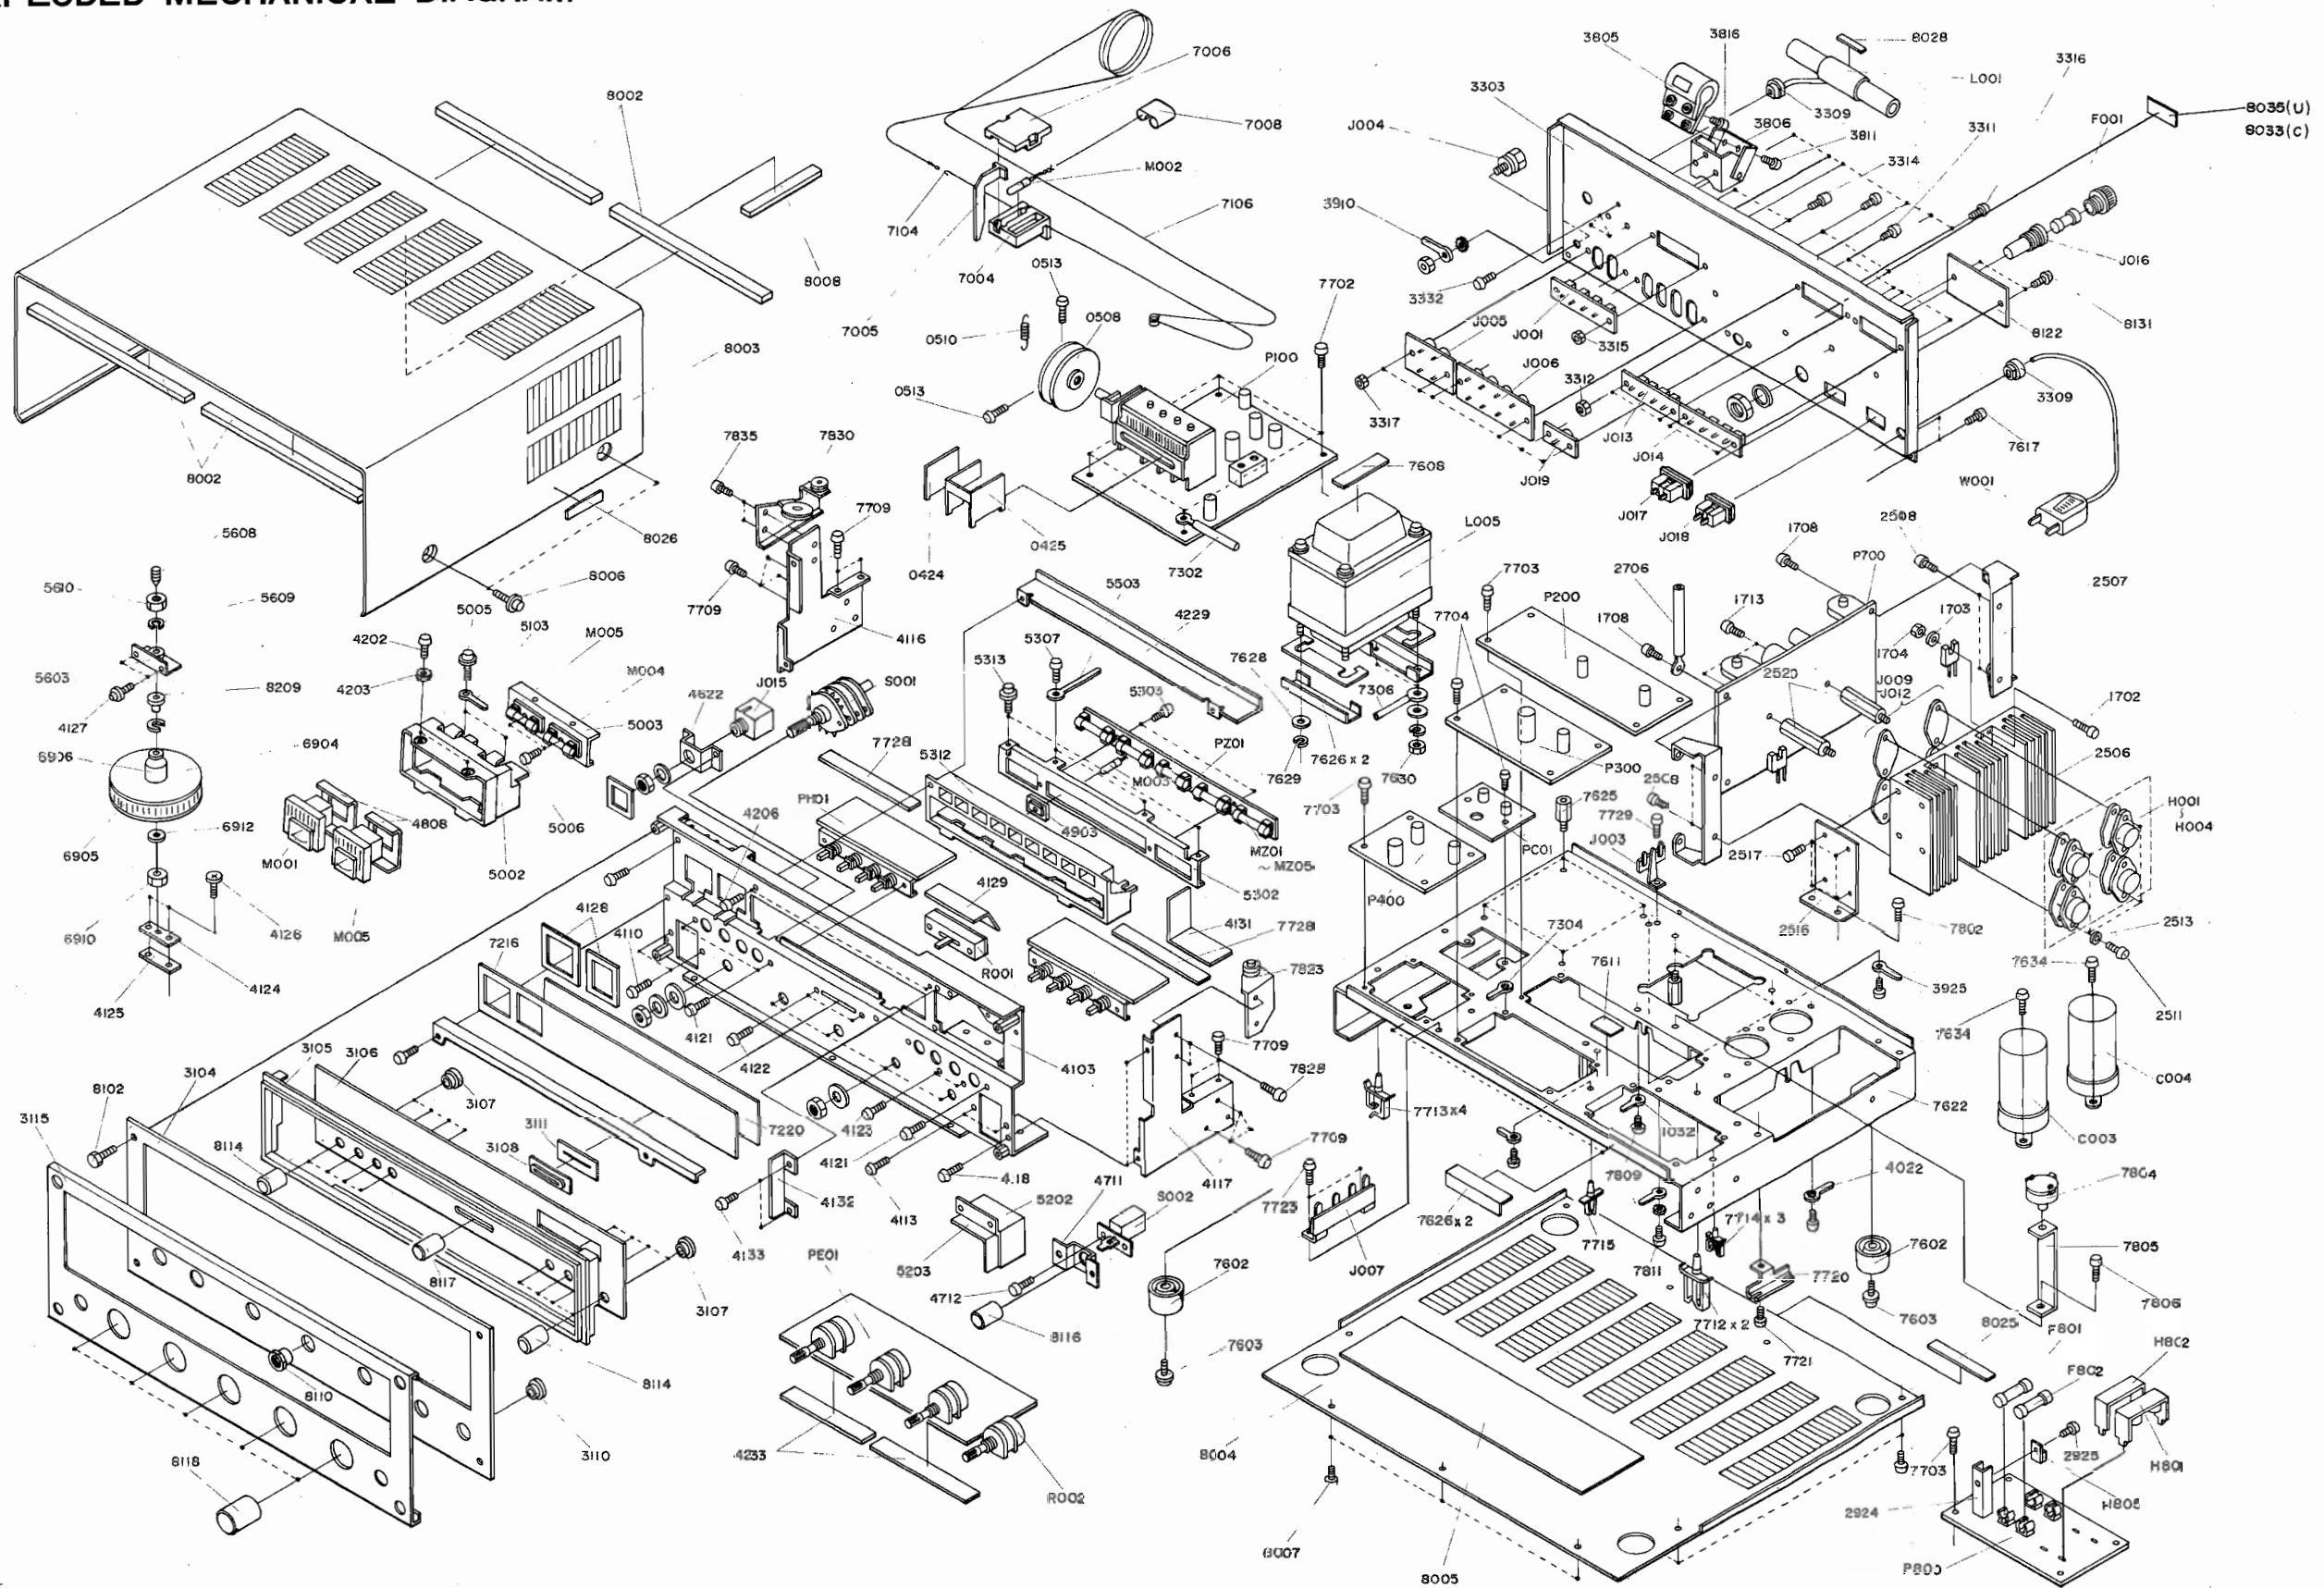











U: For U.S.A.  
C: For Canada  
E: For Europe

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION			REF. DESIG.	Q'TY			PART NO.	DESCRIPTION		
	U	C	E						U	C	E				
CC04	1	1		EV10502560	Electrolytic Cap.,	1μF	25V	4118	4	4	4	51100405A9	B.H.M. Screw,	B4 x 5	
JC01	8	8		YP10001130	Plug			4121	4	4	4	51100306A9	B.H.M. Screw,	B3 x 6	
JC08								4122	2	2	2	51100306A9	B.H.M. Screw,	B3 x 6	
HC01	1	1		HT313272A0	Transistor,	2SC1327 S, T		4123	2	2	2	51100305A9	B.H.M. Screw,	B3 x 5	
HC02	1	1		HT313272A0	Transistor,	2SC1327 S, T		4124	1	1	1	2577106020	Bearing		
3303	1	1		2222160210	Bracket			4125	1	1	1	1415118010	Spacer		
3309	2	2	1	1455259030	Bushing			4126	2	2	2	51040306A9	F.H.M. Screw,	F3 x 6	
3311	4	4	4	51100308S9	B.H.M. Screw,	B3 x 8		4127	2	2	2	51490306A9	B.H.M. Screw,	B3 x 6	
3312	4	4	4	53110303E9	Hexagon Nut			4128	2	2	2	2871053020	Cover		
3314	2	2	2	51100308S9	B.H.M. Screw,	B3 x 8		4129	1	1	1	2915120040	Insulator		
3315	2	2	2	53110303E9	Hexagon Nut			4131	1	1	1	2819120050	Insulator		
3316	6	6	6	51100308S9	B.H.M. Screw,	B3 x 8		4132	1	1	1	2853269010	Protector		
3317	6	6	6	53110303E9	Hexagon Nut			4133	2	2	2	51570305B0	P.H. Tapped Screw,	P3 x 5	
3332	3	3	3	51100306S9	B.H.M. Screw,	B3 x 6		4202	2	2	2	51570306B0	P.H. Tapped Screw,	P3 x 6	
3403	2			53110303A9	Hexagon Nut			4203	2	2	2	54050300R0	T.L. Washer, OR		
								4206	2	2	2	51042608A0	F.H.M. Screw,	F2.6 x 8	
3405			2	51060316A9	P.H.M. Screw,	P3 x 16		4229	1	1	1	2871051020	Guide		
								4233	4	4	4	2886120020	Insulator		
J001	1	1	1	YT03040090	Terminal,	Ant.		4622	1	1	1	2915160060	Bracket		
J004	1	1	1	YT01010050	Terminal,	Ground		J015	1	1	1	YJ01000980	Jack,	Headphone	
J013	1	1	1	YT03040060	Terminal,	Spk (Main)									
J014	1	1	1	YT03040060	Terminal,	Spk (Remote)		4711	1	1	1	2915160050	Bracket		
J015	1	1		YJ08000120	Socket,	Fuse Holder		4712	2	2	2	51060306A9	P.H.M. Screw,	P3 x 6	
J016			1	YJ08000220	Socket,	Fuse Holder		G001	1			BF10400040	Printed Comp.		
J017	1	1	1	YJ04000570	Jack,	AC Outlet		C007		1		DF17473590	Film Cap., 0.047μF 125V		
J018	1	1	1	YJ04000570	Jack,	AC Outlet		C007		1		DF17473580	Film Cap., 0.047μF 250V AC		
J019	1	1	1	YT02010090	Terminal,	Quad. Out		P001		2		2933118020	Spacer		
F001	1	1		FS10300060	Fuse,	3A MGC		S002	1	1		SP02010150	Power Switch		
F002		1		FS20350910	Fuse,	3.5A (MGP)		S002		1		SP04010150	Power Switch		
F001		1		FS10160800	Fuse,	1.6A		4808	2	2	2	2886107010	Sheet		
W001	1	1		YC02400220	AC Cord,			M001	1	1	1	IM11042160	Meter, AM/FM Strength		
								M005	1	1	1	IM11042150	Meter, Center		
3805	1	1	1	2819271130	Holder			4903	1	1	1	2874259010	Bushing		
3806	1	1	1	2578160522	Bracket			M003	1	1	1	IN10080340	Lamp, Stereo Ind.		
3811	2	2	2	51280312U0	B.H. Tapped Screw, B3 x 12			5002	1	1	1	2886274012	Reflector		
3816	2	2	2	51280312U0	B.H. Tapped Screw, B3 x 12			5003	1	1	1	2886271020	Holder		
L001	1	1	1	LF11200460	Ant. Coil,	AM		5005	2	2	2	51480306A9	B.H.M. Screw F,	B3 x 6	
L002	1	1	1	LC13320020	Choke Coil,	AM		5006	2	2	2	51570305B0	P.H. Tapped Screw,	P3 x 5	
C001	1	1	1	DK17103010	Ceramic Cap.,	0.01μF ±20%	50V	M004	1	1	1	IN10080070	Lamp, Meter		
C006	1	1	1	DK17103010	Ceramic Cap.,	0.01μF ±20%	50V	M006	1	1	1	IN10080070	Lamp, Meter		
J005	1	1	1	YT02040080	Terminal,	4P	Pin-Jack	J002	1	1	1	YJ08000190	Socket		
								J008	1	1	1	YJ08000190	Socket		
3910	1	1	1	62040029W0	Lug			5103	1	1	1	1382005030	Clamper		
C002	1	1	1	DK17103010	Ceramic Cap.,	0.01μF ±20%	50V	5202	1	1	1	2915109030	Shield		
J006	1	1	1	YT02080060	Terminal,	8P	Pin-Jack	5203	1	1	1	2915120030	Insulator		
								5302	1	1	1	2871271110	Holder		
3925	1	1	1	62030049W0	Lug			5303	2	2	2	51570305B0	P.H. Tapped Screw,	P3 x 5	
4004	1	1	1	1382005030	Clamper			5307	2	2	2	51100306A9	B.H.M. Screw,	B3 x 6	
4022	1	1	1	62030039W0	Lug	AC Cord		5312	1	1	1	2871274013	Reflector		
R003	1	1		RC10225120	Resistor,	2.2MΩ ±10%	½W	5313	2	2	2	51480306A9	B.H.M. Screw F,	B3 x 6	
4103	1	1	1	2915160505	Bracket, K										
4110	2	2	2	51100306A9	B.H.M. Screw,	B3 x 6									
4113	2	2	2	51100306A9	P.H.M. Screw,	P3 x 6									
4116	1	1	1	2818160032	Bracket										
4117	1	1	1	2818160042	Bracket										





REF. DESIG.	Q'TY			PART NO.	DESCRIPTION		
	U	C	E				
F801	1	1		FS10100080	Fuse,	1A	
F802	1	1		FS10200060	Fuse,	2A	
F801		1		FS10100800	Fuse,	1A	
F802		1		FS10200800	Fuse,	2A	
					<b>PH01 FILTER BOARD</b>		
PH01		1		YD29150050	P.W. Board		
				ZZ29150050	P.W. Board Assembly		
RH01	1			RT05102140	Resistor,	1kΩ ±5% 1/4W	
RH02	1			RT05102140	Resistor,	1kΩ ±5% 1/4W	
RH04	1			RT05105140	Resistor,	1MΩ ±5% 1/4W	
RH05	1			RT05105140	Resistor,	1MΩ ±5% 1/4W	
RH06	1			RT05472140	Resistor,	4.7kΩ ±5% 1/4W	
RH07	1			RT05472140	Resistor,	4.7kΩ ±5% 1/4W	
RH08	1			RT05225140	Resistor,	2.2MΩ ±5% 1/4W	
RH09	1			RT05225140	Resistor,	2.2MΩ ±5% 1/4W	
CH01	1			DF16333050	Film Cap.,	0.033μF ±10% 50V	
CH02	1			DF16333050	Film Cap.,	0.033μF ±10% 50V	
CH03	1			DF16682050	Film Cap.,	0.0068μF ±10% 50V	
CH04	1			DF16682050	Film Cap.,	0.0068μF ±10% 50V	
SH01	1			SP04040130	Push Switch		
JH01				YP10001200	Plug		
JH17		17					
8006	4	4	4	51480406S9	B.H.M. Screw F,	B4 x 6	
8007	10	10	10	51100406S9	B.H.M. Screw,	B4 x 6	
8008	1	1	1	2958056010	Buffer		
8025	1	1	1	2578861010	Label,	UL Caution	
8026	1	1	1	2932861010	Label,	"Do not remove..."	
8028	1	1	1	2506265060	Indicator,	"Do not use as handle..."	
8033	1			9510911010	Label,	LL No.	
8035	1			9510911020	Label,	UL Factory Code	
8102	4	4	4	52017039J0	H. Head Bolt		
8110	1	1	1	2916055010	Collar		
8114	8	8	8	2886154030	Knob		
8116	1	1	1	2904154040	Knob		
8117	1	1	1	2850154010	Knob		
8118	5	5	5	2959154010	Knob		
8122	1			2222265010	Indicator		
8123	1			2222265022	Indicator		
8124	1			2222265032	Indicator		
8131	2	2	2	51100306S9	B.H.M. Screw,	B3 x 6	
8202	1			9511101020	Label,	UL	
8209	1	1	1	2850112020	Shaft		
8210	1	1	1	54040402H0	Spring Washer		
8214	1	1	1	56332040G0	Eyelet		
8217	1	1	1	2915269012	Protector		
8218	2	2	2	51570305B0	P.H. Tapped Screw, P3 x 5		
8223	4			9522815010	Serial No. Card		
8224	4			9523015120	Serial No. Card		
8225	4			9523015110	Serial No. Card		
8302	1			2222851010	Instructions, Set		
8303	1	1		2222851310	Instructions, Set		
8308	1			2886851100	Instructions, FlySheet		

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION		
	U	C	E				
8309		1		2915851100	Instructions, FlySheet		
8311	1	1		2222856010	Schematic		
8312			1	2222856020	Schematic		
8319	1			2818851040	Instructions, Packing		
8320	1	1		2818851140	Instructions, Caution		
8326	1	1		2818851120	Instructions, Important Card		
8327	1			2818854040	Guarantee Card		
8328	1			2577854012	Guaranteed Card		
8329	1			2577851020	Instructions, Red Tag		
8330	1			2577813010	Envelope		
8331		1		2918813010	Envelope		
8332	1			2818854020	Guarantee Card		
8333	1			9650000050	Service Station Card		
8335		1	1	9630000180	Guarantee Card		
8402	1	1	1	ZA02000070	Ext. Antenna		
8502		1		2818813010	Envelope		
8513	1	1	1	2222801010	Packing Case, Inner		
8514	1	1	1	2222801110	Packing Case, Outer		
8519	1	1	1	2818803040	Cushion		
8520	1	1	1	2818803050	Cushion		
8523	1	1	1	9014838380	Polyethylene Bag, Set		
8525	1	1	1	9013025010	Polyethylene Bag, Printed Matter		
8526	1	1	1	9013025010	Polyethylene Bag, Accessories		
8528	1	1	1	1029804010	Sleeve		
8529		1	1	9560000042	Hang Tag		
8530	1	1	1	2731821010	Silicagel		
8531	1	1	1	2819056010	Buffer		
8532	1	1	1	2918107130	Sheet		
8534	2			9510901020	Label		

## 18. TECHNICAL SPECIFICATIONS

### POWER AMPLIFIER SECTION:

RATED POWER OUTPUT . . . . .	30 WATTS PER CHANNEL, CONTINUOUS AVERAGE POWER, BOTH CHANNELS DRIVEN.
POWER BAND . . . . .	20 Hz to 20 kHz
TOTAL HARMONIC DISTORTION . . . . .	0.3%
LOAD IMPEDANCE . . . . .	8 or 4 OHMS

Intermodulation Distortion . . . . .	0.5%
(IHF method, 60 and 7,000 Hz mixed 4:1)	
Frequency Response (from high level inputs) . . . . .	20 Hz to 20 kHz ±1.0 dB

Damping Factor . . . . . 45

### PREAMPLIFIER SECTION:

#### High Level:

Input Sensitivity and Impedance . . . . .	180 mV 80 kΩ
---	-----------------

#### PHONO:

Input Overload @ 1 kHz . . . . .	100 mV
Equivalent Input Noise (RMS, 20 Hz to 20 kHz) . . . . .	2.2 μV
Dynamic Range (ratio of input overload voltage (at 1 kHz) to equivalent input noise) . . . . .	93 dB
Sensitivity and Impedance . . . . .	1.8 mV 47 kΩ

### FM TUNER SECTION:

IHF Usable Sensitivity . . . . .	2.2 μV
----------------------------------	--------

#### Quieting Slope:

Stereo . . . . .	35 dB @ 10 μV 50 dB @ 50 μV 56 dB @ 100 μV 64 dB @ 1,000 μV
Mono . . . . .	30 dB @ 2 μV 50 dB @ 5 μV 58 dB @ 10 μV 66 dB @ 50 μV 70 dB @ 1,000 μV

#### Total Harmonic Distortion:

Mono . . . . .	0.3%
Stereo . . . . .	0.5%
Selectivity (Alternate Channel) . . . . .	50 dB
Capture Ratio . . . . .	2.5 dB
Stereo Separation at 1 kHz . . . . .	40 dB
Spurious Rejection . . . . .	90 dB
Image Rejection . . . . .	65 dB
IF Rejection . . . . .	85 dB
AM Suppression . . . . .	45 dB

**AM TUNER SECTION:**

Sensitivity .....	25 $\mu$ V
Power Requirements .....	120 V AC, 50/60 Hz
At rated output, both channels operating (8 ohm loads) .....	150 Watts
Idling power (volume control at zero) .....	30 Watts


**Dimensions:**

Panel Width .....	17-3/8 Inches
Panel Height .....	5-3/8 Inches
Depth .....	14 Inches

**Weight:**

Unit alone .....	26.5 lbs.
Packed for shipment .....	34.2 lbs.

## 19. PACKING MATERIAL EXPLODED VIEW

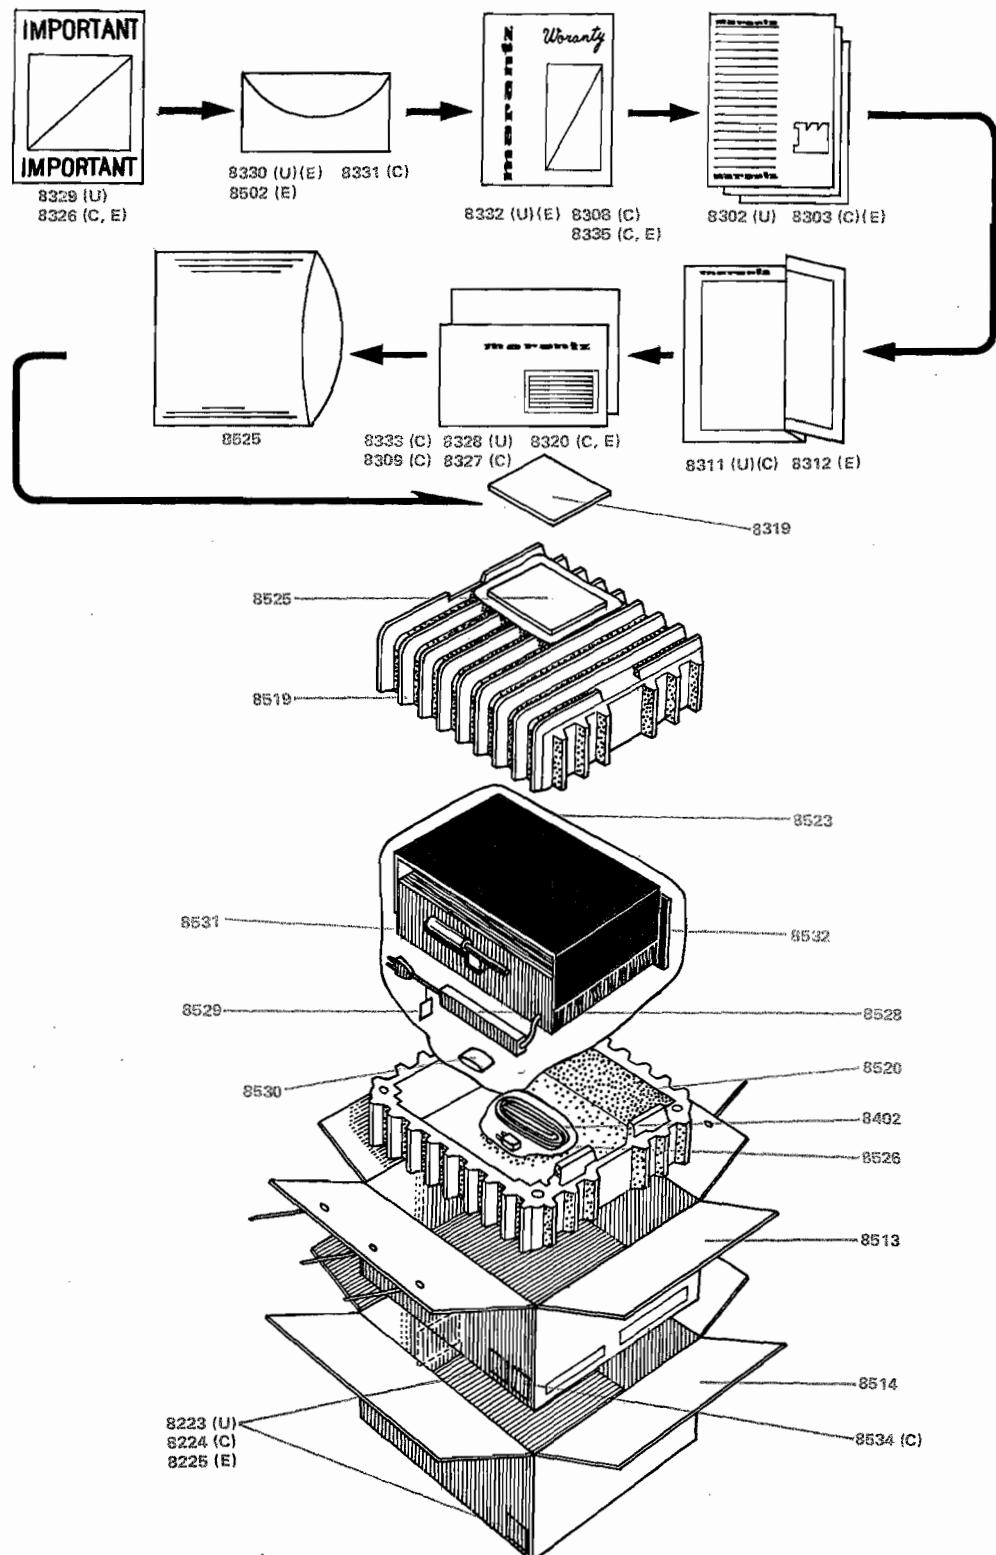

U: For U.S.A.  
C: For Canada  
E: For Europe

## SERVICE INFORMATION FOR EUROPEAN MODEL

The information contained herein includes technical specifications, major component locations, voltage conversion, FTZ regulation, schematic diagram and circuit diagram. For the alignment procedures, test equipment and repairing hints, refer to the original service manual.

### TABLE OF CONTENTS

SECTION	PAGE
1. TECHNICAL SPECIFICATIONS .....	42
2. MAJOR COMPONENT LOCATIONS .....	43
2.1 Front Panel Adjustment and Component Locations .....	43
2.2 Rear Panel Adjustment and Component Locations .....	43
2.3 Main Chassis Component Locations (Top View) .....	44
2.4 Main Chassis Component Locations (Bottom View) .....	44
3. VOLTAGE CONVERSION .....	45
3.1 Voltage Conversion Chart .....	45
4. FTZ REGULATION .....	45
5. SCHEMATIC DIAGRAM .....	47
6. CIRCUIT DIAGRAM .....	49


### 1. TECHNICAL SPECIFICATIONS

#### GENERAL


Power Requirements .....	120 V ~ , 60 Hz
(E versions are featuring an external voltage selector for use on 110/120/240 V. Other versions can be converted by a qualified technician to operate on 110/120/240 V.)	
Power Consumption at rated output both channels operating .....	160 Watts
Idling Power (volume control at zero) .....	30 Watts
Dimensions:	
Panel Width .....	440 mm (17-3/8 inches)
Panel Height .....	137 mm ( 5-3/8 inches)
Depth .....	356 mm ( 14 inches)
Weight:	
Unit alone .....	12.2 kg (26.5 lbs.)
Packed for shipment .....	15.5 kg (34.2 lbs.)

## 2. MAJOR COMPONENT LOCATIONS


### 2.1 FRONT PANEL ADJUSTMENT AND COMPONENT LOCATIONS

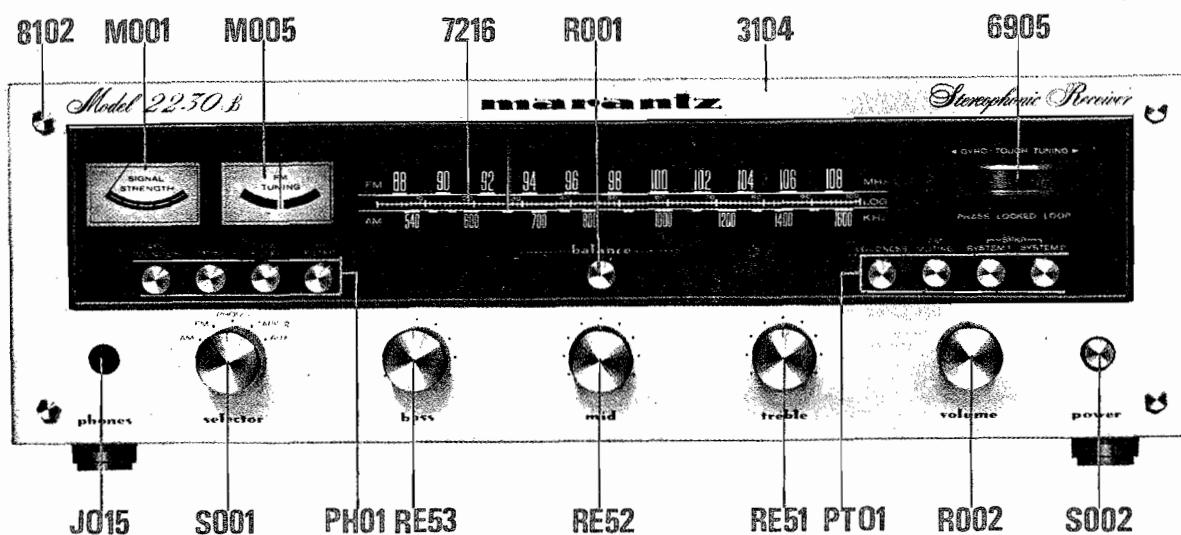


### 2.2 MAIN CHASSIS COMPONENT LOCATIONS (TOP VIEW)

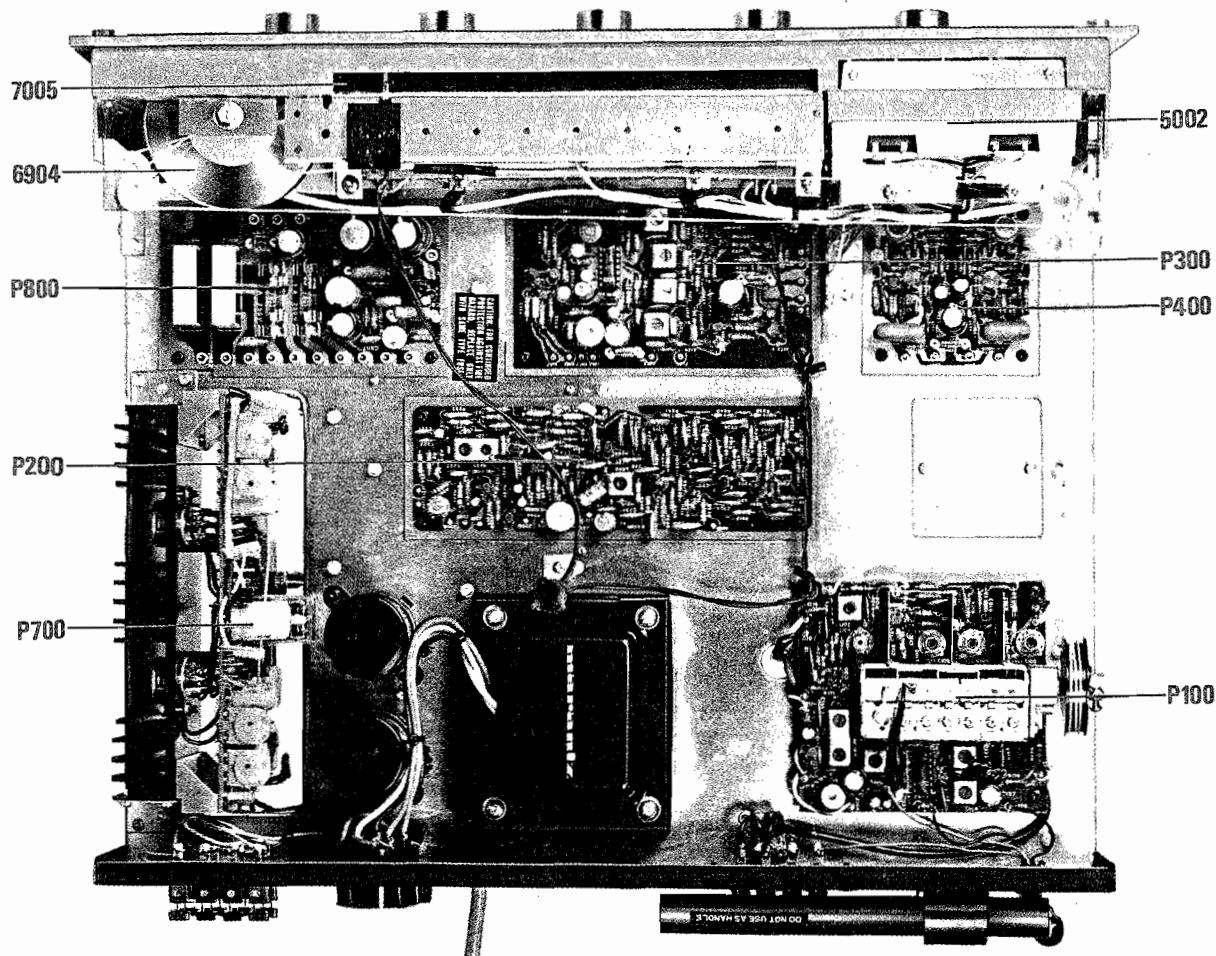

### 2.3 REAR PANEL ADJUSTMENT AND COMPONENT LOCATIONS

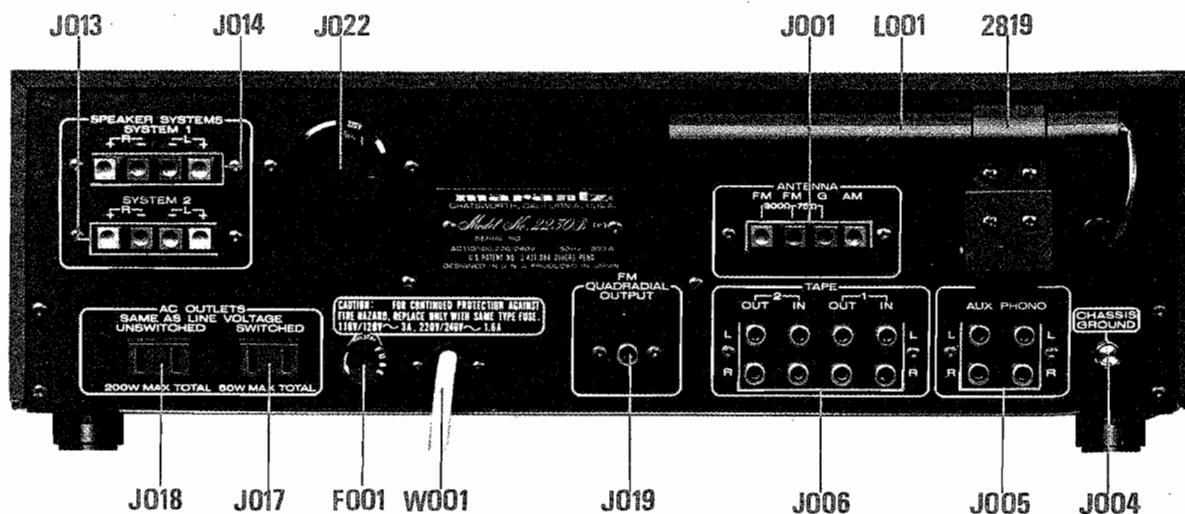

### 2.4 MAIN CHASSIS COMPONENT LOCATIONS (BOTTOM VIEW)

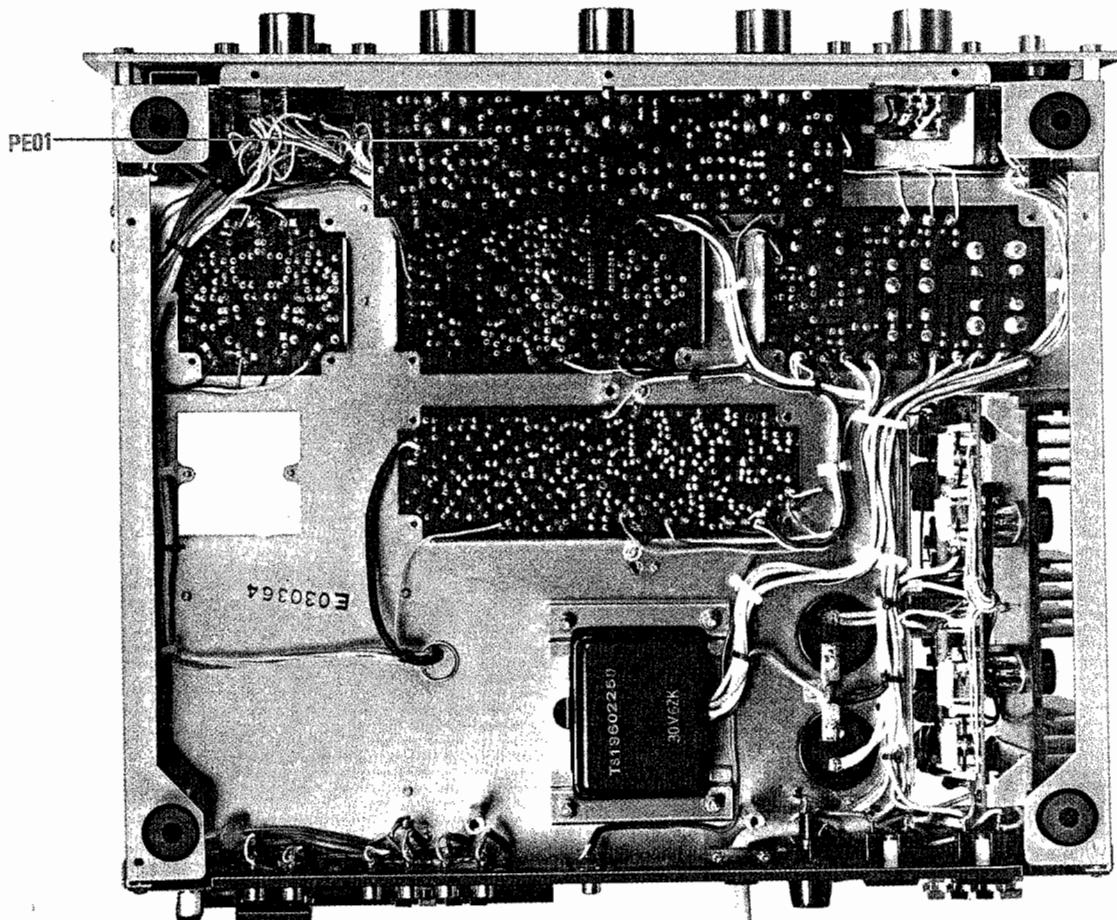



### 3. VOLTAGE CONVERSION

This Model is equipped with a universal power transformer to permit operation at 110, 120, 220 and 240V AC50/60Hz.

To convert the unit to the required voltage, set the plug as illustrated so that you can adjust the voltage as required.

**CAUTION: DISCONNECT POWER SUPPLY CORD FROM AC OUTLET BEFORE CONVERTING VOLTAGE.**

#### 3.1 VOLTAGE CONVERSION CHART

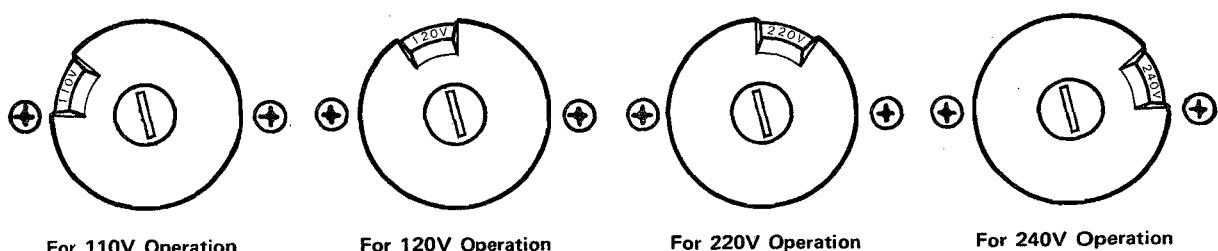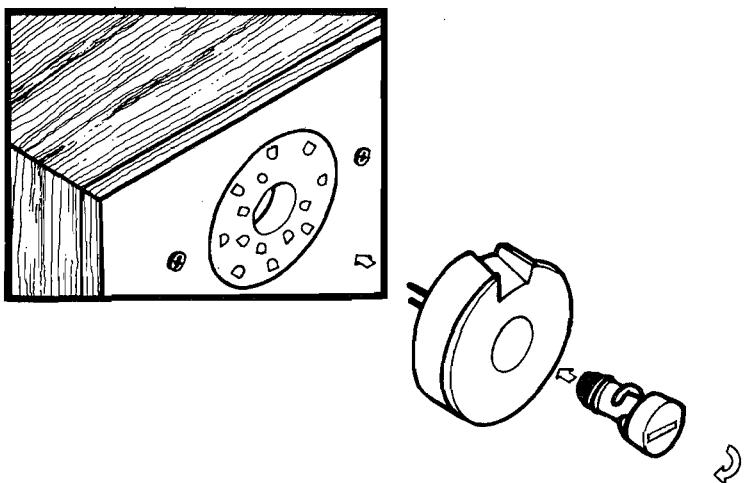

### 4. FTZ REGULATION

Instruction for the use in the range other than specified in FTZ codes


Achtung für die Leute, die in dem Gebiet wohnen, wo die FTZ-Bestimmungen vorherrschend sind.

Sollte das Gerät auch für Frequenzen ausserhalb des in den FTZ-Bestimmungen angegebenen Bereiches empfängerbereit sein, bitten wir, den Bereich durch Nachstellen des Kernes in der Oszillatospule (in der Abbildung mit "FTZ" gekennzeichnet) so zu korrigieren, dass er den Bestimmungen entspricht.

**marantz**

## 5. CIRCUIT DIAGRAM

- For European Model -

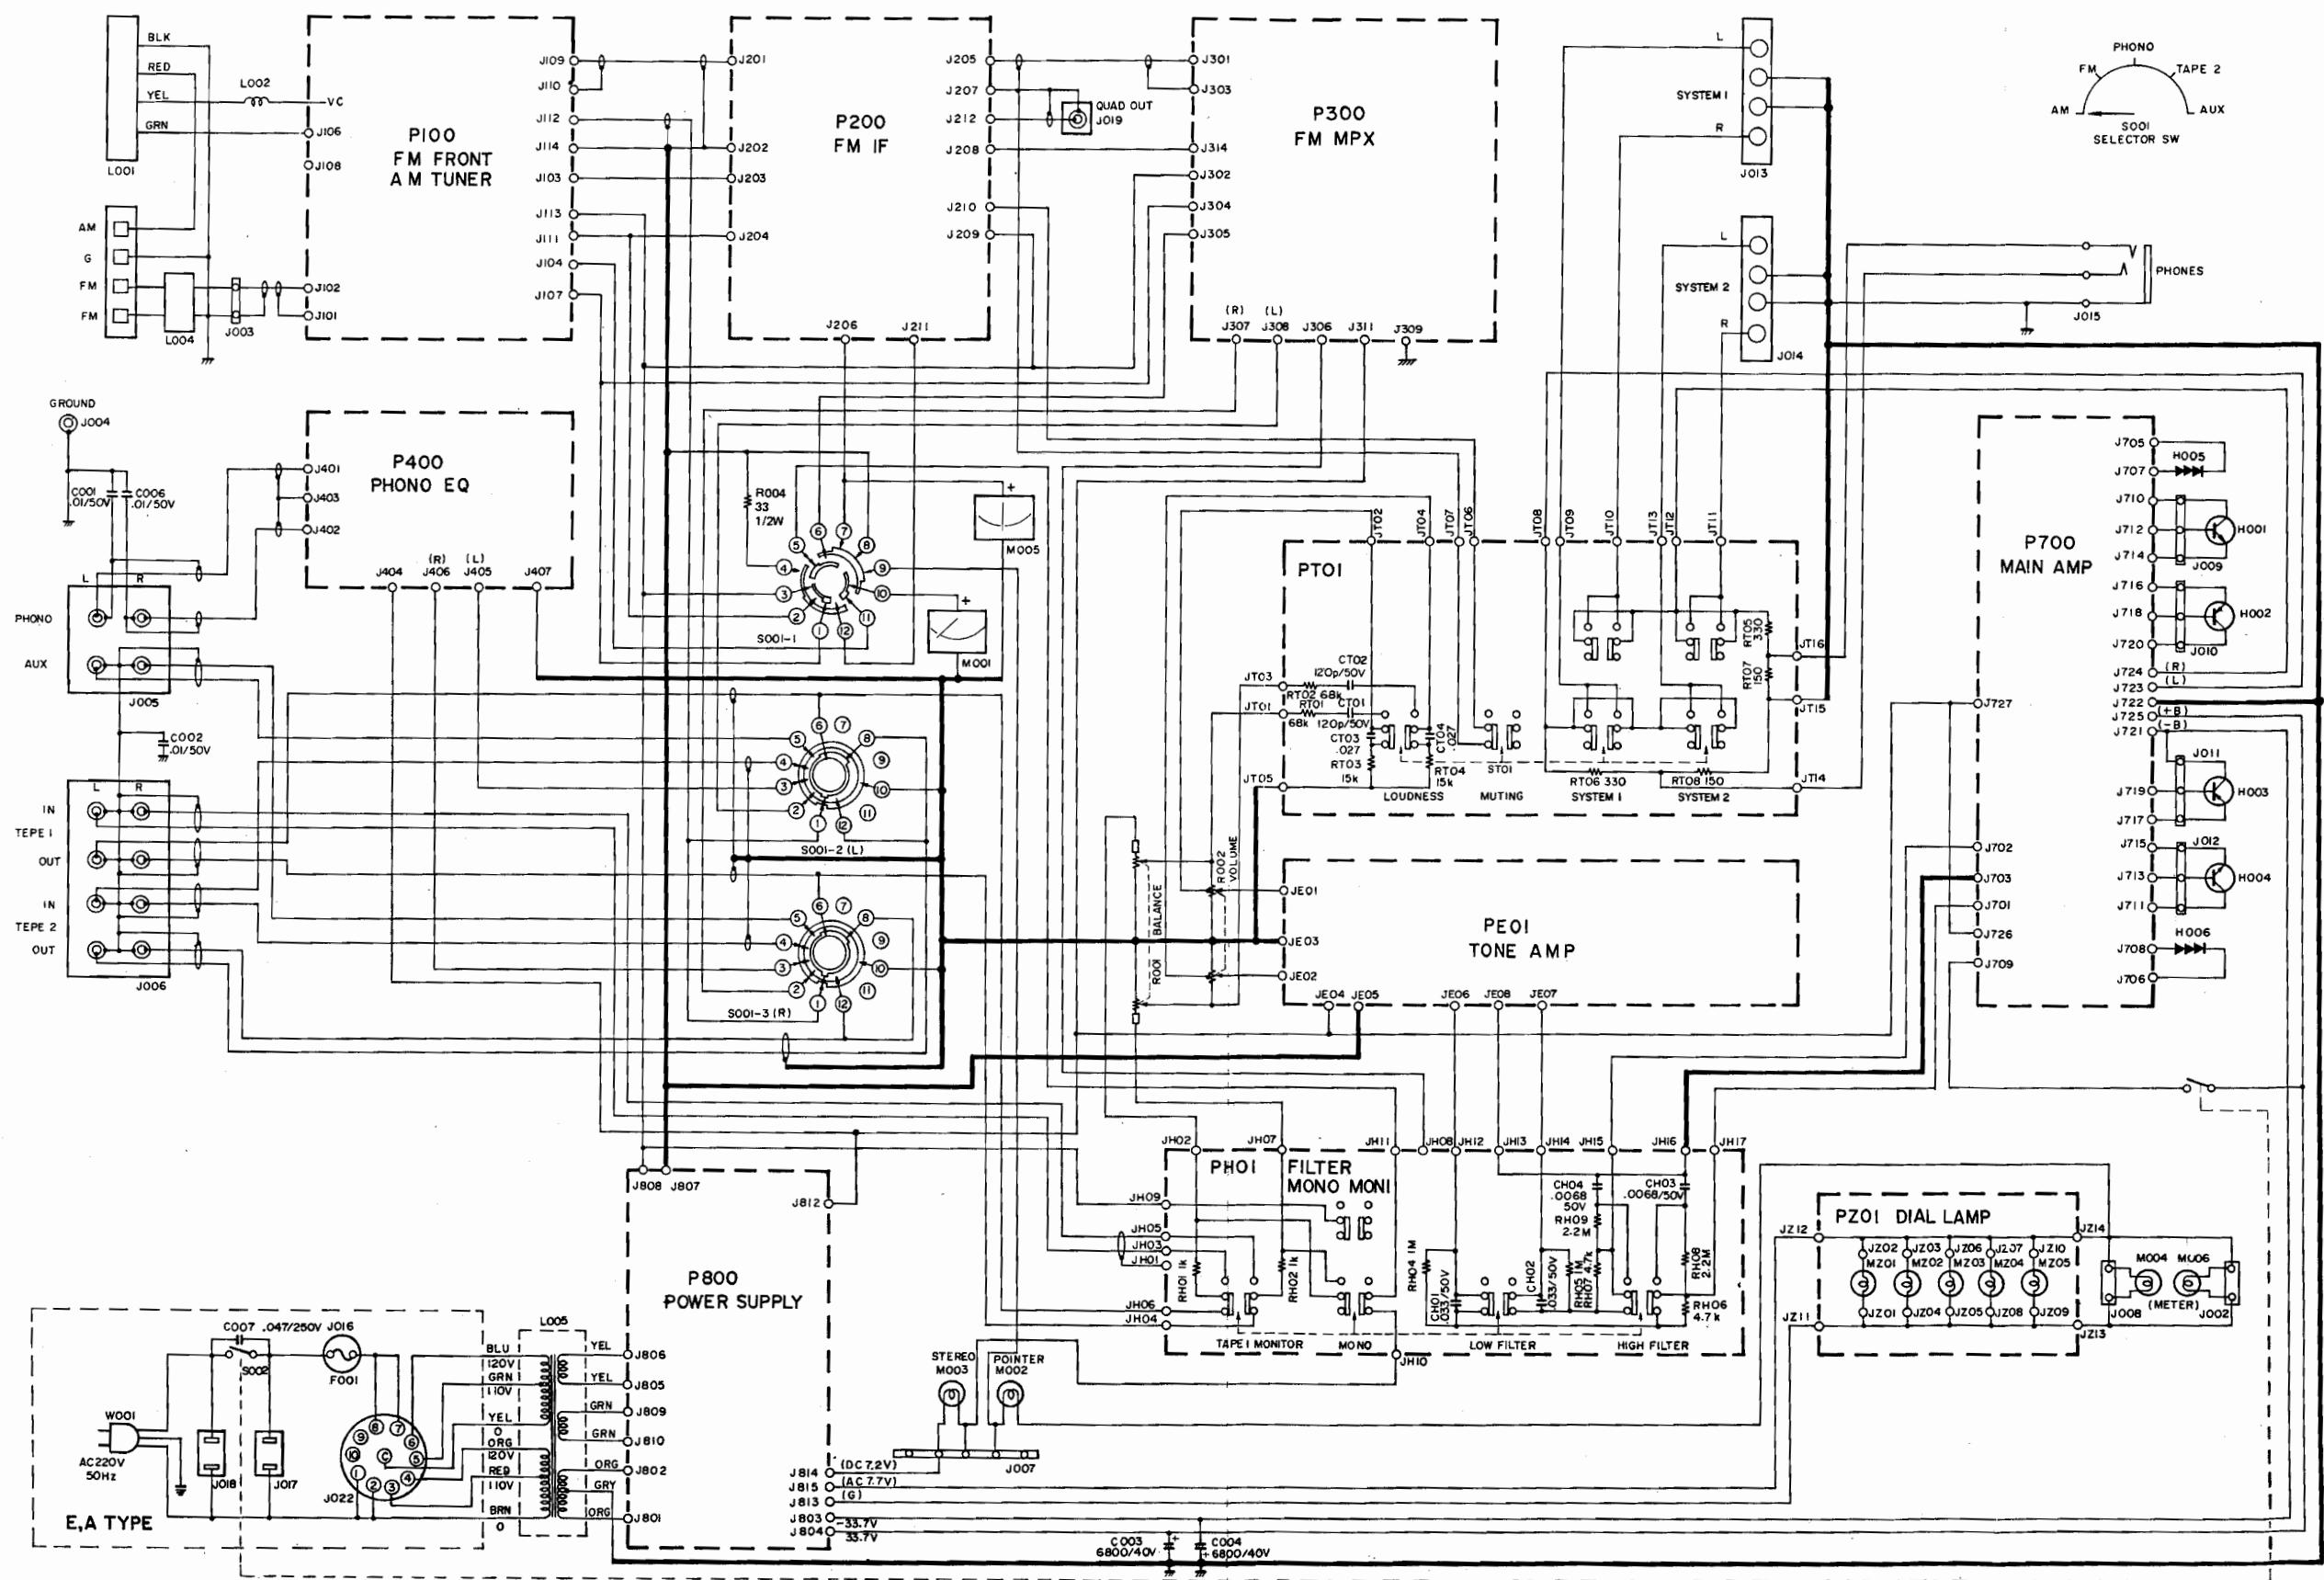

## 6. CIRCUIT DIAGRAM

— For European Model —

**Model 223OB**

