

54

APR 29 REC'D

# SERVICE MANUAL 2325

**marantz.**

**model 2325**

*Stereophonic Receiver*

## TABLE OF CONTENTS

SECTION	PAGE
Introduction .....	1
Service Notes .....	1
AM Tuner .....	1
FM Tuner .....	2
Phono Amplifier .....	5
Buffer, Tone and Filter Amplifiers .....	5
Power Amplifier .....	5
Power Protection Circuit .....	6
Speaker Protector Relay Circuit .....	6
Dolby Unit .....	6
400Hz Tone .....	7
Dolby Switch .....	7
Record Level (L) and (R) Knobs .....	7
Play Cal. (L) and (R) Knobs .....	8
Dolby FM Preset Level Controls .....	8
400Hz Tone Switch .....	8
Suggestions for Troubleshooting Power Amplifier .....	8
Test Equipment Required for Servicing .....	9
AM Alignment Procedures .....	9
FM Alignment Procedures .....	10
Audio Adjustment .....	11
Dolby Alignment Procedure .....	11
Dolby FM Preset Level Control Alignment Procedures .....	12
Description of Dolby Processing Chart .....	13
Parts List .....	26~41
Technical Specifications .....	42~43
Servicing Informations for European Model .....	44~46,49

## LIST OF ILLUSTRATIONS

<b>FIGURE</b>	<b>PAGE</b>
1. Block Diagram of the HA1156 .....	4
2. Dial Stringing .....	8
3. Front Panel Adjustments and Component Locations .....	15
4. Main Chassis Component Locations (Top View) .....	15
5. Rear Panel Adjustments and Component Locations .....	16
6. Main Chassis Component Locations (Bottom View).....	16
7. FM Front End Assembly P100 Component Locations .....	17
8. AM Tuner Assembly P150 Component Locations .....	17
9. FM IF Amplifier Assembly P200 Component Locations .....	17
10. MPX Stereo Decoding Amplifier Assembly P300 Component Locations .....	18
11. Phono Amplifier Assembly P400 Component Locations .....	18
12. Dolby Unit Assembly P600 Component Locations .....	19
13. Power Amplifier Assembly P700 Component Locations .....	19
14. Power Supply and Protection Relay Circuit Assembly P800 Component Locations .....	20
15. FM Cal. and De-Emphasis Assembly PC01 Component Locations .....	20
16. Pre and Tone Amplifier Assembly PE01 Component Locations .....	20
17. Buffer Amplifier Assembly PH01 Component Locations .....	21
18. Dolby, Tone and Meter Assembly PL01 Component Locations .....	21
19. Dolby Tone, Tape Mon. Assembly PS01 Component Locations .....	21
20. Tape Monitor Assembly PT01 Component Locations .....	21
21. Multipath, Hi Blend, FM Muting, Low Filter, Hi Filter, Loudness, Main Speaker and Remote Speaker Assembly PU01 Component Locations .....	21
22. Antenna Terminal Assembly PV01 Component Locations .....	22
23. Function Lamp Assembly PY01 Component Locations .....	22
24. Dial Lamp Assembly PZ01 Component Locations .....	22
25. Exploded Mechanical Diagram .....	24~25
26. Rear Panel Adjustments and Component Locations .....	45
27. Main Chassis Component Locations (Top View) .....	45
28. Voltage Conversion Chart .....	46
29. Schematic Diagram for U.S.A. Model .....	48
30. Schematic Diagram for European Model .....	49

<b>TABLE</b>	<b>PAGE</b>
1. Test Equipment Required for Servicing .....	9
2. Dolby Processing Chart .....	14

## INTRODUCTION

This service manual was prepared for use by Authorized Warranty Stations and contains service information for the Marantz Model 2325 Stereophonic Receiver.

Servicing information and voltage data included in this manual are intended for use by the knowledgeable and experienced technician only. All instructions should be read carefully. No attempt should be made to proceed without a good understanding of the operation of the receiver.

The parts list furnishes information by which replacement part may be ordered from the Marantz Company. A brief description is included for parts which can be usually be obtained through local suppliers.

### 1. SERVICE NOTES

As can be seen from the circuit diagram, the chassis of the Model 2325 consists of the following units. Each unit mounted on a printed circuit board is drawn within bold dotted-line block on the circuit diagram.

1. FM Front End .....	Mounted on P.W. Board P100
2. AM Tuner Unit .....	Mounted on P.W. Board P150
3. FM IF Amplifier .....	Mounted on P.W. Board P200
4. MPX Stereo Decoding Amplifier .....	Mounted on P.W. Board P300
5. Phono Amplifier .....	Mounted on P.W. Board P400
6. Dolby Unit .....	Mounted on P.W. Board P600
7. Power Amplifier .....	Mounted on P.W. Board P700
8. Power Supply and Protection Relay Circuit .....	Mounted on P.W. Board P800
9. FM Cal. .....	Mounted on P.W. Board PC01
10. Pre and Tone Amplifier .....	Mounted on P.W. Board PE01
11. Buffer Amplifier .....	Mounted on P.W. Board PH01
12. 400Hz Tone .....	Mounted on P.W. Board PL01
13. 400Hz Tone, Tape 1 and 2 Tape Monitor Switch .....	Mounted on P.W. Board PS01
14. Tape Monitor Assembly .....	Mounted on P.W. Board PT01
15. Multipath, Hi Blend, FM Muting, Low Filter, Hi Filter, Loudness, Main Speaker and Remote Speaker .....	Mounted on P.W. Board PU01
16. Function Lamp .....	Mounted on P.W. Board PY01
17. Dial Lamp .....	Mounted on P.W. Board PZ01

### 2. AM TUNER

The AM Tuner section in the 2325 consists of one IC, including an RF amplifier, local oscillator, mixer, IF amplifier, and detector, and three transistors, one of which forms a signal strength indication amplifier and the other two form detected audio signal amplifier.

All components except the tuning capacitor and ferrite bar antenna are mounted on the printed circuit board P150.

The AM signal induced in the ferrite bar antenna is fed to the RF amplifier input (Pin ⑫) and amplified to the level required for overcoming conversion noises, thus giving good S/N performance. The tuned circuit inserted in each of the output and input circuits of the RF amplifier assures very high image and spurious rejection performance.

Thus the amplified and selected AM signal is then applied to one Mixer input (Pin ⑪). While the local oscillator voltage is injected to the other Mixer input (Pin ⑯) through a capacitor C157. Then both AM signal and local oscillator output voltage are mixed and converted into 455kHz intermediate frequency. The resulting IF signal is applied to the IF transformer L153 consisting of one ceramic filter and two tuned circuits.

The output of L153 is led to the IF amplifier input (Pin ⑨) through a coupling capacitor C162 and amplified to the sufficient level to drive the detector. The detected audio signal derived from pin ⑦ is filtered and amplified, and the final audio output is obtained from the collector of H153 and applied to the TAPE MONITOR OUT jacks through the function switch.

The DC component of the detected IF signal is used as an AGC voltage to control emitter current of RF amplifier through the AGC amplifier incorporated in the IC. A part of the DC component is also led to the signal strength indication amplifier H154. The output appearing at the collector of H154 is level adjusted by R178, indicated on the signal strength meter M002.

## 2.1 Suggestions for Troubleshooting AM Tuner

Check for broken AM bar antenna, next try to tune stations by rotating the fly-wheel tuning knob slowly and observe the AM signal strength meter whether it deflects or not. If the signal strength meter gives a deflection at several received frequencies, no failure may exist in the stages at least preceding the detector circuits. Next, connect an oscilloscope to the test point ⑧ or J161 and check for audio signals with the tuning meter deflected. If the signal strength meter does not deflect, check the local oscillator circuit. Normal local oscillator output voltage at the hot end of the oscillator tuning capacitor is about 1.5 or 3 volts, varying with the tuning capacitor position. When measuring the local oscillator output voltage use an RF VTVM, no circuit tester gives correct indication. If the local oscillator output voltage is normal, check all voltage distribution in the AM circuits by using a DC VTVM and compare the measured values with those given in the schematic diagram.

## 3. FM TUNER

The FM Tuner section in the Model 2325 consists of four functional blocks: FM Front End, IF Amplifier & Detector, Muting Control and MPX Stereo Decoding Circuit.

An FM signal induced by the FM antenna is led to FM antenna coil L101 through the balun coil. The signal is then applied to the FET RF amplifier which in turn feeds its output to the next FET Mixer H102 through the triple tuned high selective circuit. The FET Mixer converts its input signal into 10.7MHz IF signal and amplifies it at the same time. The H103 is a local oscillator, the output of which is injected into the source of the FET Mixer, the injection voltage being about 700mV. The 10.7MHz front end output is led to the next IF amplifier unit through the coaxial cable.

The IF amplifier unit consists of seven IF amplifier stages and one AGC amplifier stage. Eight pieces of ceramic filter are also used to obtain high selectivity, and four symmetrical diode limiter stages are also employed for the best limiting characteristics, improved capture ratio and good AM suppression.

A part of the FM Front End output is fed to and rectified by the AGC amplifier H209, and the rectified output is fed back to the gate of the FET RF amplifier to decrease the gain with increase of the signal strength.

The signals required for multipath indication are obtained from the five IF amplifier stages through the coupling capacitors C252, C211, C214, C223 and C228, respectively, and are rectified by five pairs of full-wave diode circuit. Thus these AM components of the FM signal are approximately mixed and amplified by the transistors HU01 and HU02 and the output is again rectified to obtain DC current required for actuating the Multipath Indication meter.

The IF signal sufficiently amplified through each IF amplifier stage is finally led to the Detector Amplifier H208. The detected audio output is led to the buffer amplifier H210 and its buffered output is led to: (a) the noise amplifier H310 through the resistor R378 and capacitor C333, (b) the QUADRADIAL OUTPUT Jack on the rear panel through the resistor R379, (c) the MPX stereo decoding IC (H321) through R301 and H301.

The DC current caused at the third windings of the discriminator transformer is directly led to the FM center tuning meter.

### 3.1 Audio Muting and Stereo mode auto-selecting circuit

The muting circuit consisting of all solid-state electrical switching is incorporated in the Model 2325. Three input control the muting function. The first is related to signal strength, the second to the noise condition at the detector, and the third is derived from the DC component of the detector output. These inputs are properly matrixed and gated to provide muting free from noise and transients.

The first input of DC voltage obtained by rectifying a part of the IF output signal from the H205 and H206 is fed to the base of H308 and turns it on, if the IF output is greater than a predetermined level (muting threshold level). When the H308 is turned on, the H309 is turned off, allowing the emitter-collector resistance to be increased and the collector voltage to be raised to about 9V. The raised collector voltage increases the gate bias voltage and turns the switching FET H301 on, decreasing the source-drain resistance to near zero ohm and allowing the audio signal applied to the source to flow to the decoding IC pin ② through the source-drain path.

When the input signal is lower than the predetermined level, the DC output obtained is small and can not turn on the H308, thus H308 keeps its off state. This turns H309 on, decreasing the collector voltage and turning H301 off. Thus no audio signals can pass through the FET. This is the fundamental principle of the muting operation but for more elaborate muting operation, the second and the third inputs are necessary.

The second input is used to protect the muting operation and MPX stereo beacon lamps from misoperation due to undesirable noises. The high frequency noises included in the detected audio signals are separated by a small capacitor C333 and are amplified by the noise amplifier transistor H310. Its output is rectified by the two diodes. The rectified DC output is proportional to the noise components in the audio signals.

When there are excessive noises in the audio signals such as obtained with a station incorrectly turned in, the rectified DC output turns the transistor H311 on, decreasing the emitter-collector resistance to zero. This means the collector of H309 is grounded, therefore the H301 is turned off and any audio signals having excessive, high-frequency noises can not go through the FET's source-drain path.

The transistor H317, also, turns off when the transistor H309 or H311 turns on, and turns on the transistor H303 connected to pin ⑧ on the MPX decoding IC. Pin ⑧ is therefore grounded equivalently to set the IC in the monaural mode of operation. This prevents misoperation due to undesirable noises when the FM tuner is out of tuning.

The third input is obtained from the FM discriminator circuit. The DC output, so called "S" curve, is applied to the gate of H312 through the resistor R281 and voltage divider network (R361, R362). The DC output is zero with a station correctly tuned in, but will vary from negative to positive value, or vice versa, when the tuning point is deviated toward either higher or lower frequency from the correct tuning point.

When the DC output is increased to greater level than the predetermined one, the increased source potential of H312 turns the transistor H315 on. (This means the collector of H309 is grounded, H301 turns off, H317 turns off, and H303 turns on.) This grounds pin ⑧ at the MPX stereo decoding IC, therefore the decoder is set in the monaural mode of operation and the stereo indicator lamp turns off. When the DC output is increased to the predetermined negative level, the decreased source potential turns the H313 off, which turns the H314 on. (This means the collector of H309 is grounded.) The subsequent changes are exactly the same as that just described above.

Thus when the tuning is shifted or deviated to certain frequencies at which undesirable noisy side-audio signals are produced, both muting and monaural/stereo switching transistors H303 are automatically operated and open the circuits.

With the station correctly tuned in, the bias current of the FET H312 is adjusted so that both transistor H314 and H315 are not turned on, giving no effect on the transistor H309.

### 3.2 MPX Stereo Decoding Circuit

The stereo composite signal from the buffer amplifier undergoes phase compensation by R301 and C201, is led through the muting switching FET H301 to the input terminal pin ② of the MPX stereo decoding IC H321 on PLL (Phase Locked Loop) basis, and is decoded into the left and right stereo signals, which become available at pins ④ and ⑤, respectively. These decoded left and right stereo audio signals are introduced through the low pass filter consisting of L301 to L304 and C311 to C320 for elimination of undesirable residual switching signal and through the de-emphasis network consisting of R325, R326, C321 and C322 to the npn-pnp direct coupled audio amplifier, where the signals are amplified to a required level for the output from J311 and J313. From these jacks, the audio signals are led through the function switch to the TAPE MONITOR OUT jacks. Figure 1 presents an internal block diagram showing the functions of the PLL basis MPX stereo decoding IC HA1156. The input stereo composite signal, amplified by the audio amplifier, is delivered to the phase detectors PD-1 and PD-2. A part of the stereo composite signal is also delivered to the stereo decoder section. The VCO (Voltage Control Oscillator) produces a free run oscillation in the neighborhood of 76kHz with the time constant determined by the capacitor C305 and resistors R311 and R312 set on the outside of pin ⑭. The VCO output has its frequency divided into 19kHz through the two frequency divider stages (DIV-1, DIV-2), and is reversed to the phase detector PD-1, which contains two input terminals designed to produce an output in proportion to the product of the two input signals. The signal led to one PD-1 input is a 19kHz square wave formed through frequency division of the 76kHz VCO output signal by the two frequency divider stages DIV-1 and DIV-2, and the 19kHz pilot signal included in the stereo composite signal as a reference signal is led to the other PD-1 input. Therefore, the output of the PD-1 which has passed through the low pass filter LPF-1 provides DC output voltage in proportion to the phase variance between the two inputs. This DC output voltage is amplified by the DC amplifier, and is supplied to the 76kHz VCO as a control voltage. This means that the output frequency and phase of the VCO have been phaselocked to the input pilot signal. The 38kHz sub-carrier reproduced by the PLL, as stated above, is delivered through the stereo switch to the stereo decoder section as switching signal, thus driving the decoder stage. One PD-2 input is given the 19kHz resulting from the frequency division completed by the DIV-1 and DIV-3, whereas the other input gets the 19kHz output contained in the composite signal, and the output is provided with a DC output in proportion to the amplitude of the pilot signal.

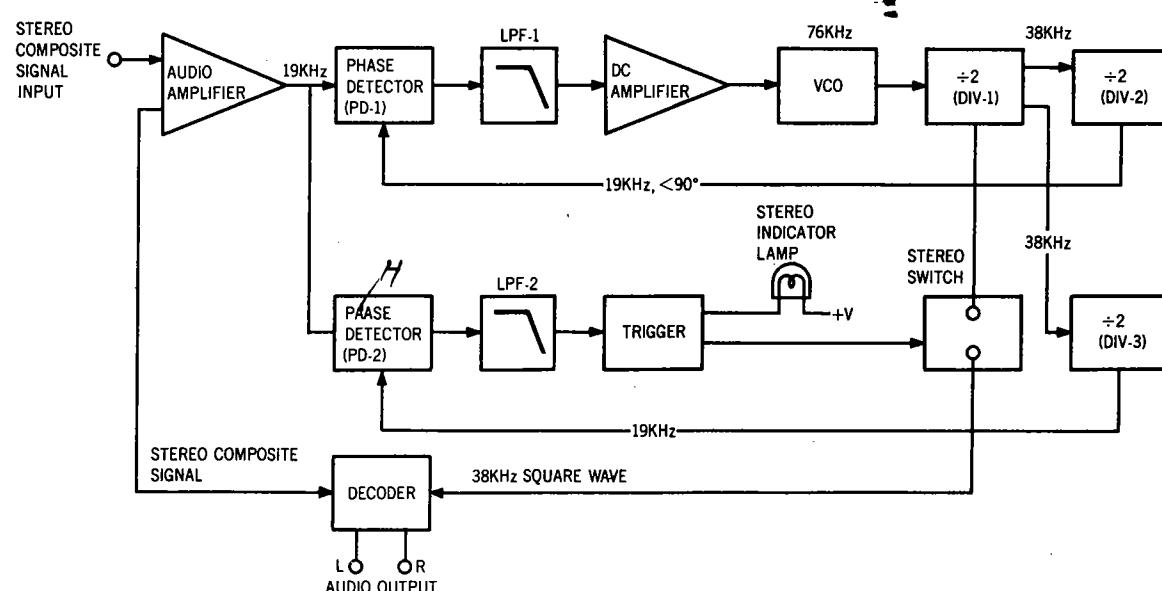


Figure 1. Block Diagram of the HA1156

This DC output is furnished through LPF-2 to the trigger amplifier which drives the stereo indicator lamp and stereo switch. Therefore, insufficient supply of the pilot signal results in failure to light the stereo indicator and to turn on the stereo switch located in the path of the 38kHz switching signal, thereby avoiding a wrong stereo operation.

H303 fitted on the outside of pin ⑧ is a switching transistor for automatic monaural-stereo switchover. When the intensity of an incoming signal from an FM station is weaker than a predetermined level, this H303 is turned on and pin ⑧ is grounded, thereby developing a condition for monaural reception. For a forced monaural operation, switch the MODE switch to "MONO", and H303 comes into the "On" state with the positive bias voltage applied to the base, and pin ⑧ is grounded, thereby establishing monaural operation. The transistor H302 connected externally to pin ⑭ is intended to stop the 76kHz oscillation of the VCO which interferes an AM signal during the reception of an AM station. When the function switch is set to "AM" position, a positive bias is charged on the base of H302, H302 is turned on, and pin ⑭ is grounded. Thus, the oscillation of the VCO is stopped, ending the interference with AM reception.

### **3.3 Suggestion for Troubleshooting FM Tuner**

#### **3.3.1 Symptom: No FM Reception**

First turn the POWER switch on and try to tune FM stations. Rotate the fly-wheel tuning knob slowly and observe the FM signal strength meter. If the signal strength meter deflects at several frequencies received, the tuner circuits preceding the discriminator circuit may have no failure. When no reading is obtained in the meter, check the FM local oscillator circuit, using an RF VTVM. The normal local oscillator voltage is one or two volts (rms) at the tuning capacitor, depending on the tuning capacitor position. If the local oscillator voltage is normal, then check all voltage distribution in the FM Front End and IF amplifier unit and compare them with those shown in the circuit diagram. When the signal strength meter deflects but no sound is obtained, check the audio circuit, using a high sensitive oscilloscope.

#### **3.3.2 Symptom: No Stereo Separation**

First check that the "MODE" switch is in normal 2 CH position. Connect an FM RF signal generator output modulated by a stereo modulator to the rear FM antenna terminals, and check whether the stereo beacon is turned on or not. If not turned on, check for 19kHz VCO output signal (J310), using an oscilloscope and frequency counter.

## **4. PHONO AMPLIFIER**

Program source signals from the PHONO jacks on the rear panel are fed to the input circuit of the Phono Amplifier through the selector switch, and the output of the Phono Amplifier is led to another section of the selector switch. This amplifier provides a gain of 40dB.

## **5. BUFFER, TONE AND FILTER AMPLIFIERS**

After passing through the FUNCTION switch (S001-2R, -4R) or TAPE MONITOR switch, all signals are converted to low output impedance by the buffer amplifier. The signals, then, are passed through the dolby circuit, MODE switch and HI-BLEND switches and BALANCE and VOLUME controls.

Signals properly attenuated by the VOLUME control are led to the tone amplifier and are subjected to tone control by the BASS, MID and TREBLE controls, and high- and low-cut filter amplifier circuits.

Thus controlled audio signals are then led to the PRE OUT jacks on the rear panel.

## **6. POWER AMPLIFIER**

The signal from the tone filter amplifier is applied to the differential amplifier (base of H701)

through the coupling capacitor C701. The differential amplifier provides very high input impedance, and its collector output (H702) is led to the base of H705 which in turn feeds its output to the next stages: H706 through the network of R721, C710 and R728, and H707 through the network of R721, C711 and R729. The outputs of H706 and H707 are led to the H708 and H709, respectively. H001, H002, H003 and H004 are power transistors used in complementary symmetry configuration and mounted on the heat sink.

To maintain overall amplifier stability and linearity, a degenerative feed back is utilized throughout the amplifier. This feedback is also necessary to reduce distortion to within a specified limit. The RC network of R728 and C710 conditions the feedback signal for the audio signals. R729 and C711 also form a feed back loop provided to obtain a stable zero DC offset voltage at the speaker output terminals. The R713 is a trimming resistor to adjust the DC offset voltage.

A dynamic bias is applied to the bases of driver transistors H708 and H709. This dynamic bias circuit comprises H714, H715 and R740. This provides a variable base bias for driver transistors that automatically maintains the proper base voltage to temperature change. The temperature sensitive biasing components of the dynamic circuit are thermally coupled through the heat sink with the power amplifier transistors.

## 7. POWER PROTECTION CIRCUIT

A protection circuit for the amplifier is provided by sensing resistor networks and two switching transistors. When the output transistors are over-driven, the current increase through the power output transistor causes increase of the current flowing through R746. This increased voltage potential is applied to the base of H710 through the resistor R732 and turns H712 on. This means that the base of H708 is by-passed through the emitter-collector path of H712 to the ground, since the emitter of H712 is connected through R730 to the base of H708. Thus, the input signal to H708 is restricted to the value which maintains the operation of power transistor within the safety area. A resistor network of R736, R738 and H720 also works as a sensing network. If the center voltage (collector voltage of the power transistors) is excessively increased to a positive value by some troubles, the voltage applied to the base of H710 turns the H712 on, making bypass circuit to protect the power transistors. For the other half cycle of the drive signal, the same operating principle is applied as described above.

## 8. SPEAKER PROTECTOR RELAY CIRCUIT

The speaker protection circuit consisting of H805, H806, H807, and associated parts protects the speaker system against any loud "pop" sound developed. This circuit is so designed that no sound is heard for the first three or five seconds after the power switch is turned on by the time constant circuit consisting of C813 and R816. This circuit also protects the speaker system against some troubles due to DC unbalance between the speaker system terminals by instantly operating the relay and cutting off the speaker system from the circuit. If the DC unbalance voltage (positive) is developed between speaker terminals by possible defects such as broken power transistor, short-circuits, or broken potentiometer R713, as the base of H808 is connected to the speaker terminal, the transistor H805 is turned on by the offset voltage developed. This turns the transistors H806 and H807 off, thus cutting off the relay and disconnecting the speaker from the output circuit. If a negative offset voltage is developed, this voltage directly turns the H806 and H807 off, which disconnect the speaker from the circuit and protected.

The circuit also protects the speaker system from possible damage if the amplifier is over-driven by very low frequency such as 7 or lower cycles per second.

## 9. DOLBY UNIT

The Dolby unit built in the Model 2325, which is a switchable processor, is inserted in each of both R and L channels. The attached "DOLBY PROCESSING CHART" will facilitate you to well understand the operation of the Dolby circuit.

An input signal coming to J601 is amplified by H601, and its output signal is led to the filter which cuts off the tape bias. The signal passed through the filter is further amplified and comes to the mixing circuit of the resistors R623 and R625 and to the phase inverting circuit of H607 and H609. The output signal is fed out of J607.

In the recording mode of operation, the signal is fed out of J605 preceding the mixing circuit and is led to J611. The signal is then discriminated in the frequency and level by the dynamic filter consisting of H611, H613, H615 and H617, and is fed back to the mixing circuit.

In the playback mode of operation, a part of the output signal (at J607) is led to J611 and discriminated in the frequency and level by the dynamic filter consisting of H611, H613, H615 and H617 and fed back to the mixing circuit.

## 10. 400Hz TONE

The 400Hz tone signal which is a 580mV, 400Hz sine wave is available at the TAPE MONITOR OUT terminal at any position of the DOLBY switch (with the exception of the RECORD II position) and SELECTOR switch

The output signal of the 400Hz oscillator consisting of HL01 and HL02 is delivered through the emitter follower HL03 to JL02 and JL03. The output levels at JL02 and JL03 are adjusted to 580mV and approximately 50mV, respectively.

The signal fed from the Dolby Unit P.W. Board (P600) comes to JL04 and is rectified through HL06. The rectified output at JL06 is led to the meter M002.

## 11. DOLBY SWITCH

This switch sets the Dolby noise-reduction circuit for record or playback and also switches the meter from the AM or FM SIGNAL STRENGTH mode to the DOLBY CAL LEVEL mode, or vice-versa. With the DOLBY switch placed in "OFF" position, the meter will be used as a SIGNAL-STRENGTH meter; in all other positions as a DOLBY CAL LEVEL meter.

### 11.1 DOLBY FM

This position is used to listen to Dolbyized FM broadcasts. The Dolby FM level has been pre-adjusted at the factory.

### 11.2 PLAY

This position is used to play back a Dolbyized source (except FM).

### 11.3 OFF

With this position, the Dolby circuit is by-passed and the input signals are directly fed to both TAPE MONITOR OUT jacks and amplifiers.

### 11.4 RECORD I

For making a Dolbyized recording from an in-coming "flat" (non-Dolbyized) signal. When the MONITOR switch is in the SOURCE (out) position, the "flat" signal will be heard. When the MONITOR switch is in the TAPE (in) position, the Dolbyized signal from the tape will be heard.

### 11.5 RECORD II

For making a "flat" (non-Dolbyized) recording from an in-coming Dolbyized signal. Regardless of the position of the MONITOR switch, a "flat" signal will be heard.

## 12. RECORD LEVEL (L) AND (R) KNOBS

These knobs control the record level of the signals to be recorded through the Dolby Unit. Adjust the knobs so that the Level Meter pointers on the tape recorder do not exceed the 0VU level.

### 13. PLAY CAL. (L) AND (R) KNOBS

These knobs adjust the playback outputs from a tape deck to the proper Dolby level.

### 14. DOLBY FM PRESET LEVEL CONTROLS

These factory-adjusted controls govern the FM output level to the Dolby circuit. These controls are for the use of a qualified technician only.

### 15. 400Hz TONE SWITCH

This is used for calibration of the record input level of the tape deck. When the switch is depressed, the built-in oscillator operates and a 580mV sine wave signal output will be fed to the four TAPE MONITOR OUT jacks.

### 16. SUGGESTIONS FOR TROUBLESHOOTING POWER AMPLIFIER

#### 16.1 Excessive Line Consumption

- Check for shorted rectifiers H009 and H010; also check C008 and C009.
- Check for shorted transistors H708 and H709, H001, H002, H003, H004, H005, H006, H007 and H008, or check H715. Check for bias transistor H714. Check L004 for short.

**CAUTION: BECAUSE THE DRIVER AND OUTPUT STAGES ARE DIRECT COUPLED, COMPONENTS MAY FAIL AS A DIRECT RESULT OF INITIAL COMPONENT FAILURE. IF A SHORTED TRANSISTOR OR ZENER DIODE IS FOUND, OR CONTROL OR BIAS DIODE, BE SURE TO CHECK THE REMAINING DRIVER AND OUTPUT COMPONENTS FOR SHORT OR OPEN CIRCUIT BEFORE REENERGIZING THE AMPLIFIER.**

#### 16.2 No Line Consumption of Zero Bias

- Check the line cord, fuse, transistors H715, H001, H002, H003, H004, H005, H006, H007 and H008, and bias transistor H714.
- Check for open rectifiers H009 and H010 or open L004.

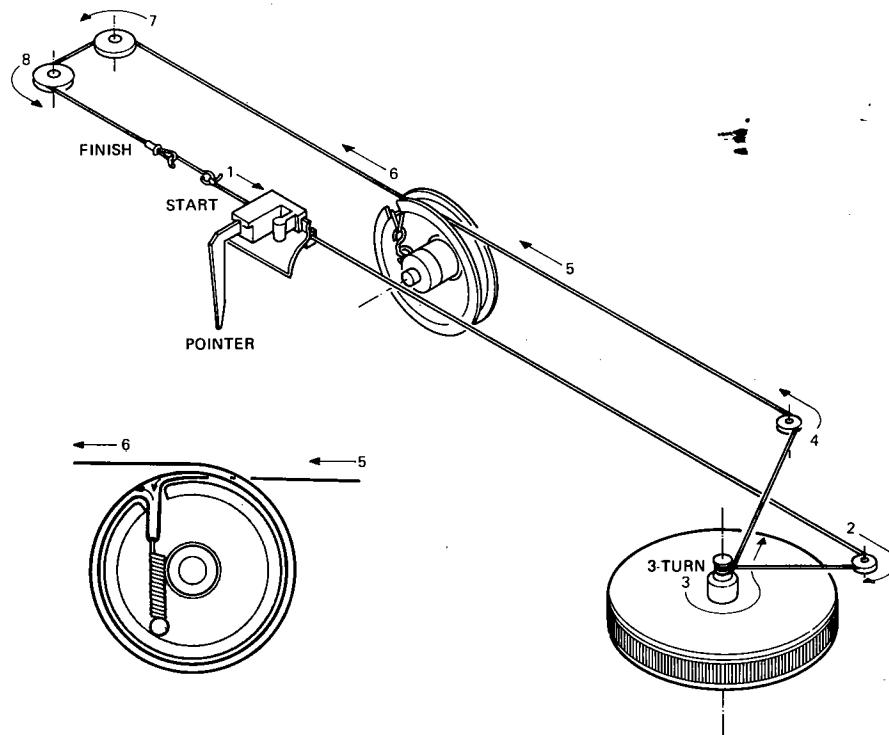


Figure 2. Dial Stringing

## 17. TEST EQUIPMENT REQUIRED FOR SERVICING

Table 1 lists the test equipment required for servicing the Model 2325 Stereophonic Receiver.

Item	Manufacturer and Model No.	Use
AM Signal Generator		Signal source for AM alignment.
Test Loop		Used with AM Signal generator.
FM Signal Generator	Less than 0.3% distortion	Signal source for FM alignment.
Stereo Modulator	Less than 0.3% distortion	Stereo separation alignment and trouble shooting.
Frequency Counter		MPX Oscillator adjustment (VCO).
Audio Oscillator	Weston Model CVO-100P, less than 0.02% residual distortion is required.	Sinewave and squarewave signal source.
Oscilloscope	High sensitivity with DC horizontal and vertical amplifiers.	Waveform analysis and trouble shooting and ASO alignment.
VTVM	With AC, DC, RF range	Voltage measurements.
Circuit Tester		Trouble shooting.
AC Wattmeter	Simpson, Model 380	Monitors primary power to Amplifier.
AC Ammeter	Commercial Grade (1-10A)	Monitors amplifier output under short circuit condition.
Line Voltmeter	Commercial Grade (0-150V AC)	Monitors potential of primary power to amplifier.
Variable Autotransformer (0-140V AC, 10 amps)	Powerstat, Model 116B	Adjusts level of primary power to amplifier.
Shorting Plug	Use phono plug with 600 ohm across center pin and shell.	Shorts amplifier input to eliminate noise pickup.
Output Load (8 ohms, $\pm 1\%$ 100W)	Commercial Grade	Provides 8-ohm load for amplifier output termination.
Output Load (4 ohms, $\pm 1\%$ 100W)	Commercial Grade	Provides 4-ohm load for amplifier output termination.

Table 1. Test Equipment Required for Servicing

## 18. AM ALIGNMENT PROCEDURES

### 18.1 AM IF ALIGNMENT

1. Connect a sweep generator to J153 and an alignment scope to the test point  $\oplus$ .
2. Turn each core of IF transformer L153 for maximum height and flat top symmetrical response.

### 18.2 AM Frequency Range and Tracking Alignment

1. Set an AM signal generator to 515kHz. Turn the tuning capacitor fully closed (with the tuning pointer placed at the low end.) and adjust the oscillator coil L152 for maximum audio output.

2. Set the signal generator to 1650kHz. Place the tuning pointer in the high frequency end and adjust the oscillator trimmer on the oscillator tuning capacitor for maximum audio output.
3. Repeat Steps 1 and 2 above until no further adjustment is necessary.
4. Set the signal generator to 600kHz and tune the receiver to the same frequency and adjust the slug core of the AM ferrite rod antenna and RF coil L151 for maximum output.
5. Set the signal generator to 1400kHz and tune the receiver to the same frequency and adjust both trimming capacitors of the antenna and RF tuned circuit for maximum output.
6. Repeat Steps 4 and 5 above until no further adjustment is necessary.

Note: During tracking alignment reduce the signal generator output as necessary to avoid AGC action.

### **18.3 AM Signal Strength Meter Adjustment**

Set the AM Signal generator to 1000kHz with 5K $\mu$ V output level, and adjust R178 until the signal strength meter may read 80%.

## **19. FM ALIGNMENT PROCEDURES**

1. Connect an FM signal generator to the FM ANTENNA terminals and an oscilloscope and an audio distortion analyzer to the TAPE MONITOR OUT jacks on the rear panel.
2. Set the signal generator to 87.0MHz and provide about 3 to 5 $\mu$ V. Place the tuning pointer at the low frequency end by turning the tuning knob and adjust the core of the oscillator coil L105 for maximum audio output.
3. Set the signal generator to 109.0MHz and provide about 3 to 5 $\mu$ V output. Turn the tuning knob to place the tuning pointer to the high frequency end and adjust the trimming capacitor C106 for maximum output.
4. Repeat Steps 2 and 3 above until no further adjustment is necessary.
5. Set the signal generator to 90MHz and tune the receiver to the same frequency. Decrease the signal generator output until the audio output level decreases with decrease of the signal generator output. Adjust the antenna coil L101, RF coils L102, L103, and L104, and IF transformer L106 for minimum audio distortion.
6. Set the signal generator to 106MHz and tune the receiver to the same frequency. Adjust the trimming capacitors (C102, C103, C104, C105) of the antenna and RF tuning circuits for minimum distortion.
7. Repeat Steps 5 and 6 above until no further adjustment is necessary.
8. Adjust the secondary core (upper) of the discriminator transformer L201 until the center tuning meter pointer indicates its center with no signal applied. Set the signal generator to 98MHz and increase its output level to 1k $\mu$ V and tune the receiver to the same frequency so that the center tuning meter pointer indicates its center. Adjust the primary core (lower) of L201 for minimum distortion.
9. Set the signal generator to 98MHz with 100k $\mu$ V, and adjust R374 until signal strength meter may read 90%.

### **19.1 Stereo Separation Alignment**

1. Set an FM signal generator to provide 1K $\mu$ V at 98MHz. Tune the receiver to the same frequency so that the center tuning meter pointer indicates its center. Then turn off the modulation of the signal generator, connect a frequency counter to the test point J310 (point © ) and adjust R311 until the frequency counter may precisely read 19kHz.
2. Modulate the signal generator with the stereo composite signal composed of either L or R channel (of course, the pilot signal must be included).
3. Adjust the trimming resistor R301 for maximum and same separation in both channels.

**19.2 Muting Circuit Alignment**

1. Connect a VTVM to the tap of the resistor R363 and adjust the resistor R363 until the meter reads 0.75V DC at no signal.
2. Set an FM signal generator to provide 1K $\mu$ V at 98MHz and tune the receiver to the same frequency correctly.
3. Turn the MUTING pushswitch on. Shift the FM signal generator frequency higher and lower and note both higher and lower shifted frequencies at which undesirable audio side responses are muted out. Adjust R363 so that the same shifted frequencies mute the undesirable audio side responses.
4. Adjust R362 for preferred frequency shift at which the muting circuit operates.

**20. AUDIO ADJUSTMENT****20.1 Automatic Voltage Regulator Adjustment**

Connect a DC voltmeter between pins J804 and J805, and adjust the trimming resistor R809 for 35V DC.

**20.2 Main Amplifier DC Offset Alignment**

Connect a DC voltmeter with 0.5 or 1V range between the speaker terminals and adjust the trimming resistor R713 for "zero" DC output on the meter.

Repeat the same procedure for the other channel.

Note: During this alignment no load should be connected to the speaker terminals.

**20.3 Idle-Current Adjustment**

Connect a VTVM between pins J702 and J708. Next, rotate the trimming resistor R740 fully counterclockwise, then rotate it clockwise until the VTVM reads 15mV DC (75mA).

Repeat the same procedure for the other channel.

Note: During this alignment no load should be connected to the speaker terminals.

**20.4 Main Amplifier DC Offset Re-Alignment**

Check the DC offset voltage aligned in the Sec. 20.2 above. If any DC output is observed on the DC voltmeter, adjust R713 again for "zero" output.

**20.5 Phono-Amplifier Adjustment**

Connect an oscilloscope to the TAPE MONITOR OUT jacks and an audio signal generator to the PHONO jacks. Place the selector switch in the PHONO position. Increase the 1kHz audio signal level gradually until a slight clipping on top of the sine wave is observed on the oscilloscope. Adjust the trimming resistor R408 for equal clipping level.

For the other channel, adjust R409.

**21. DOLBY ALIGNMENT PROCEDURE**

Prior to the adjustment, turn the PLAY CAL and REC LEVEL controls all the way to the right and the SELECTOR switch to the CD-4/AUX position. Use the CD-4/AUX and TAPE MONITOR OUT jacks for the signal input and output.

**21.1**

- (1) Set the DOLBY switch to the RECORD I position.
- (2) Adjust the semi-fixed resistor R653 for maximum source voltage of the field-effect transistor H611.

- (3) Connect J620 and J613 to the ground.
- (4) Apply a 5kHz sine wave so as to obtain 17.5mV at J605.
- (5) Record the output level at the TAPE MONITOR OUT jack with the above signal applied.
- (6) Adjust the semi-fixed resistor R659 until the output level at the TAPE MONITOR OUT jack may increase  $10\pm0.25$ dB with J620 disconnected from the ground.
- (7) Record the above output level.
- (8) Adjust the semi-fixed resistor R653 until the output level may decrease  $2\pm0.25$ dB with J613 disconnected from the ground.
- (9) Connect J613 to the ground again, and assure the level increase in Step (6) above. Disconnect J613.

## 21.2

- (1) Set the DOLBY switch to the RECORD II position.
- (2) Connect J620 and J613 to the ground.
- (3) Apply a 5kHz sine wave so as to obtain a 44mV at J605.
- (4) Check to insure that the level at the TAPE MONITOR OUT jack decreases  $10\pm0.5$ dB with J620 disconnected from the ground.
- (5) Disconnect J620 and J613 from the ground.
- (6) Check to insure that the output voltage at the TAPE MONITOR OUT jack is 17.5mV( $\pm0.5$ dB).

## 21.3

For the level adjustment, set the DOLBY switch and SELECTOR switch to the RECORD I and CD-4/AUX positions, respectively, and use the TAPE MONITOR OUT jack for the signal output. By setting the 400Hz TONE pushswitch "in", the 400Hz sine wave is fed out. Adjust the semifixed resistor RL11 for 580mV sine wave output voltage in both R and L channels. Then, set the DOLBY switch to the RECORD II position, and apply the 400Hz signal for 580mV output voltage. Adjust the semi-fixed resistors RL28 and RL29 until the DOLBY LEVEL meter may point the Dolby level. Change over the METER switch, and perform this adjustment for both R and L channels.

Next, adjust the semi-fixed resistor RL12 for 580mV output level with the DOLBY switch set to the OFF position. Check the 400Hz output signal level after the level setting of semi-fixed resistors RL11 and RL12. The output level must be precisely 580mV since it is the reference level of the Dolby circuit.

## 22. DOLBY FM PRESET LEVEL CONTROL ALIGNMENT PROCEDURES

Connect an FM signal generator to the FM antenna. Set the signal generator for 400Hz and 50% modulation.


Set the FM signal generator to 98MHz and the DOLBY switch to the OFF position. Turn the Tuning knob on Model 2325 until it tunes the 98MHz signal from the FM signal generator.

Then, set the DOLBY switch to the DOLBY FM position, and adjust the FM preset level controls RC05 and RC06 until the DOLBY LEVEL meter may point the Dolby level. Change over the METER switch, and perform this adjustment for both R and L channels.

**23. DESCRIPTION OF DOLBY PROCESSING CHART**

This chart shows the condition of the signals available at the speakers (SPKRS) and at the TAPE MONITOR OUT terminals as a function of different control settings.

To understand the chart refer to the symbols below:

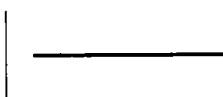


- Represents a signal which has not been applied to either Record or Playback Dolby circuits. The relative amplitudes at all audio frequencies remain unaltered at all levels.



- Represents a signal which has been processed by the Dolby Record circuit. The relative amplitudes at high frequencies are increased at low signal levels.



- Represents a signal which has been processed by the Dolby Playback circuit. The relative amplitudes at the high frequencies are decreased at low signal levels.

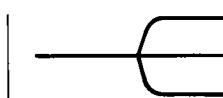

- Represents a signal which has been processed by both the Record and the Playback Dolby circuits.

The Dolby Record and Playback circuits are complementary. Therefore, relative amplitudes at all audio frequencies are restored to their original levels.

**Table 2. Dolby Processing Chart**

SIGNAL	DOLBY SW			DOLBY FM			PLAY			OFF			RECORD			I			II		
	SOURCE	TAPE	SOURCE	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	SOURCE	TAPE	SOURCE	TAPE	SPKRS	TAPE OUT	SPKRS	TAPE OUT	
FM TRANSMISSION	SIGNAL AT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT
NORMAL FM																					
DOLBY FM (25 $\mu$ s W/DOLBY)																					
OTHER SOURCE																					

NOTE: \*\* DE-EMPHASIS SWITCH IN THE 25  $\mu$ s POSITION.

**marantz**

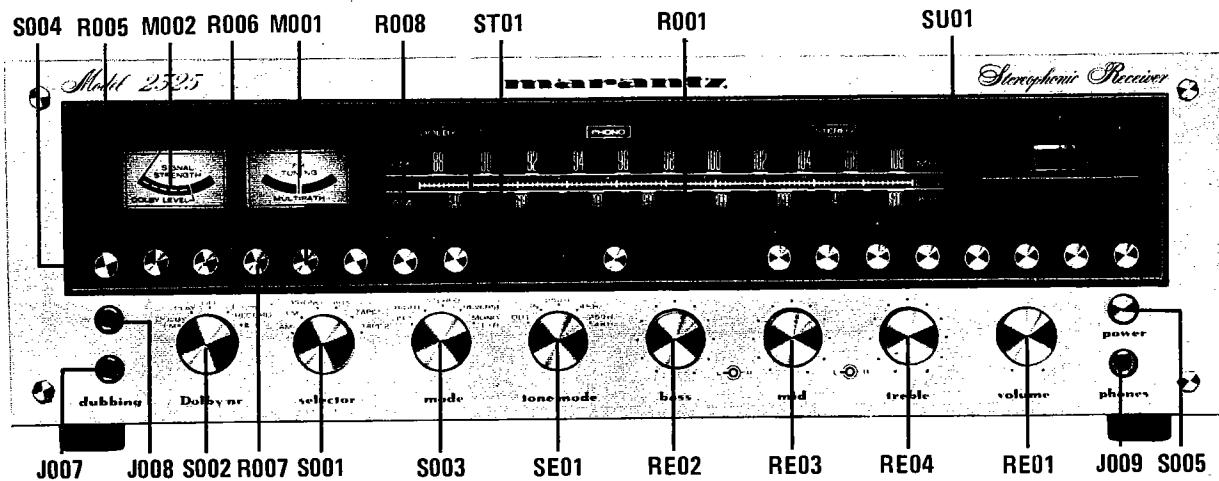


Figure 3. Front Panel Adjustments and Component Locations

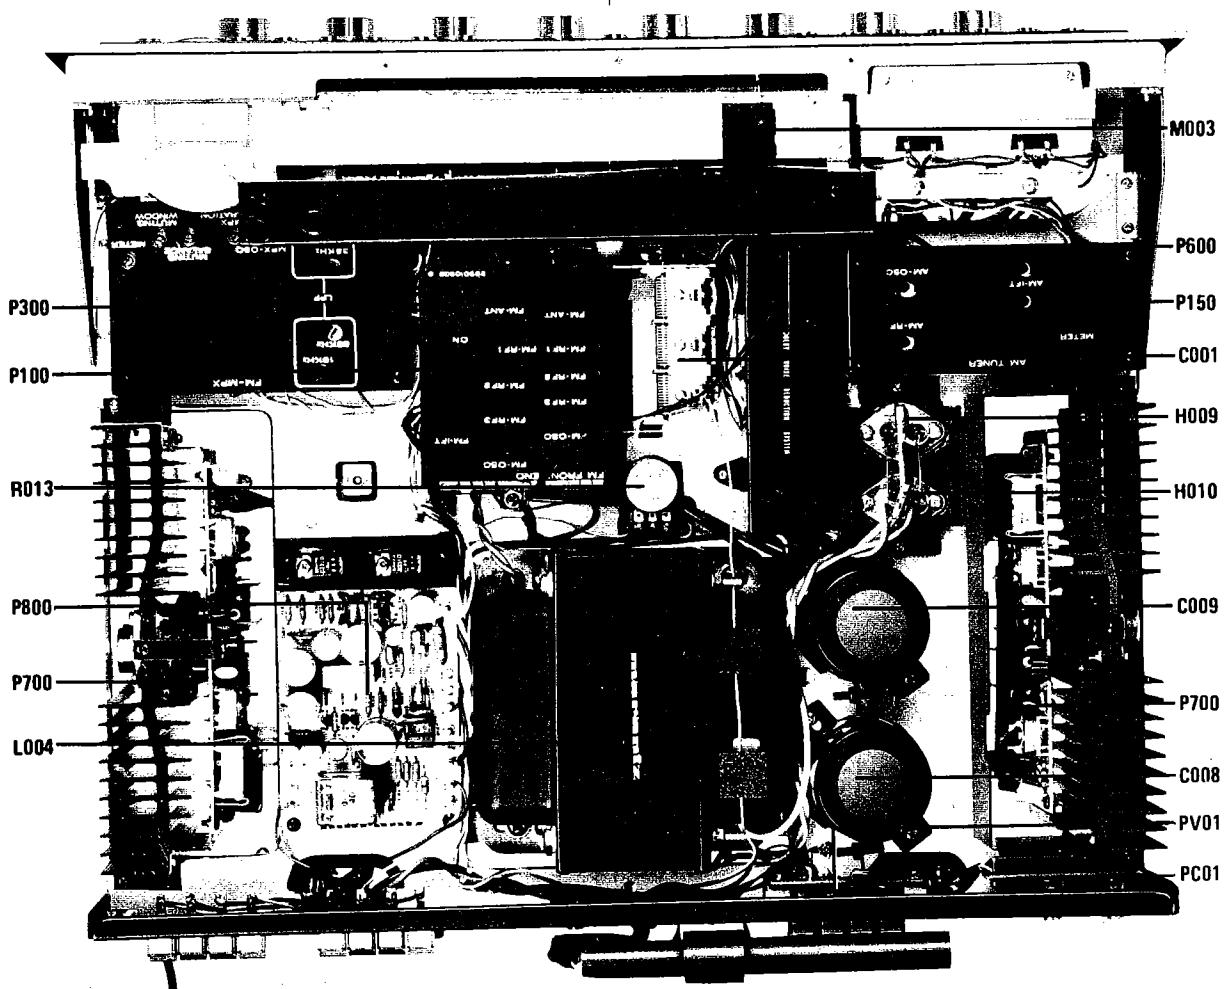


Figure 4. Main Chassis Component Locations (Top View)

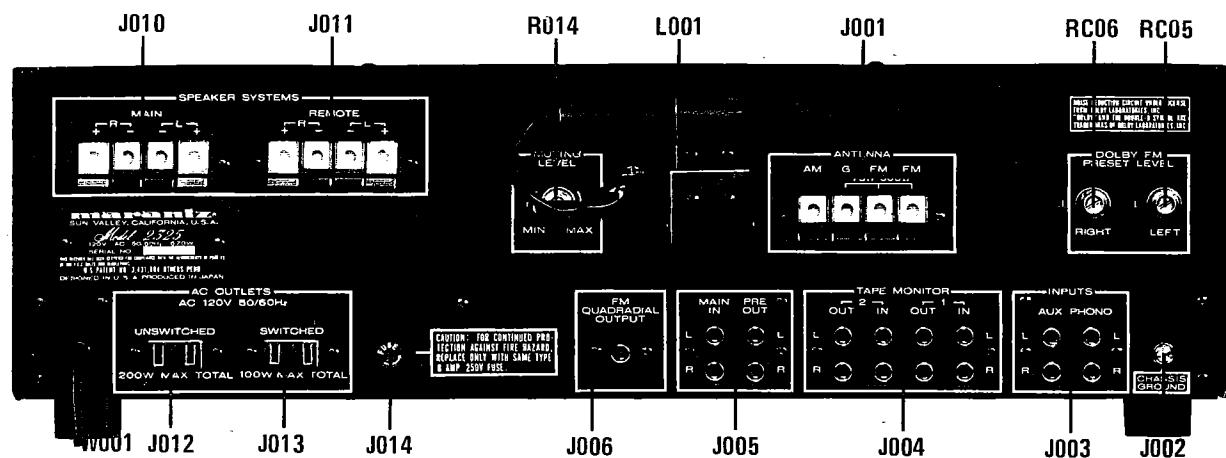


Figure 5. Rear Panel Adjustments and Component Locations



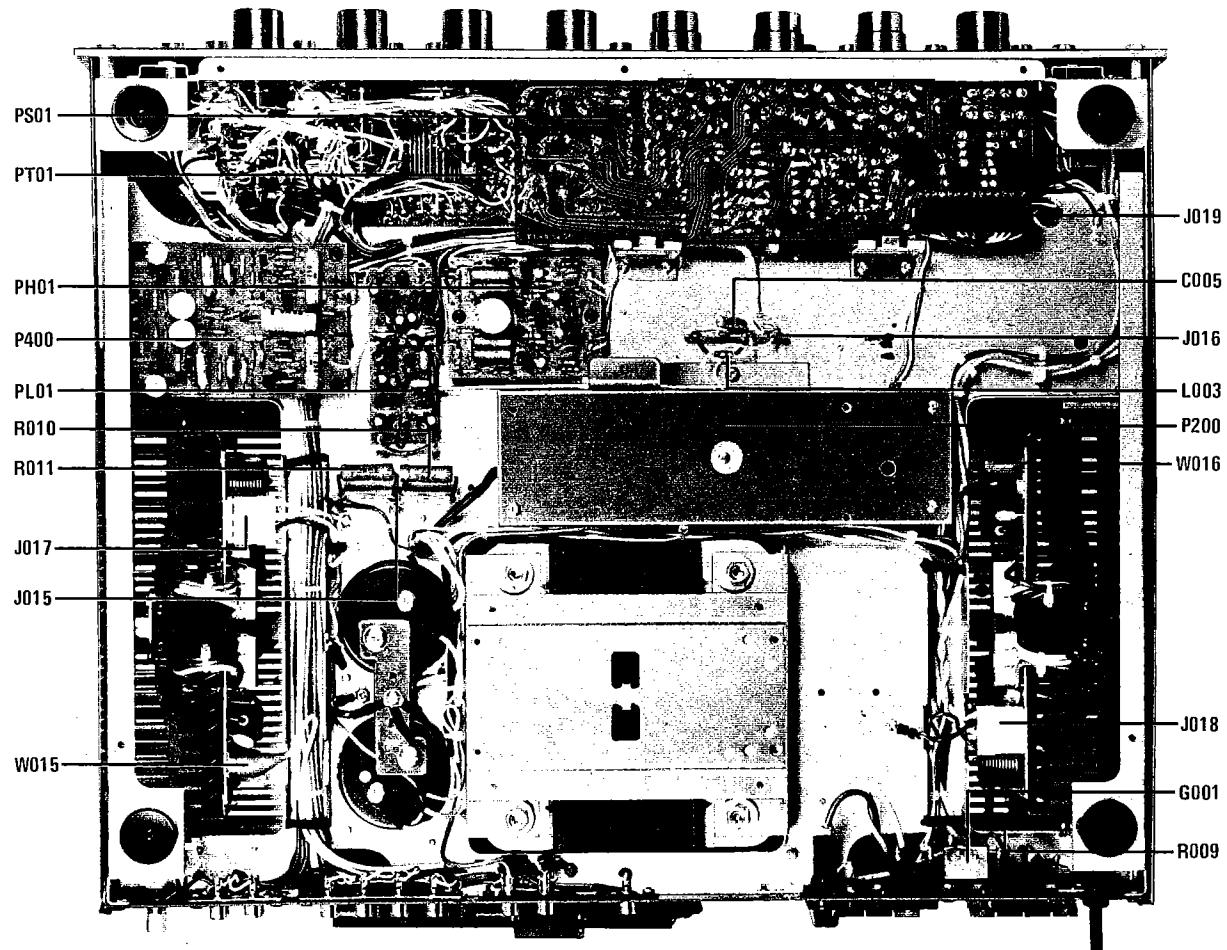



Figure 6. Main Chassis Component Locations (Bottom View)

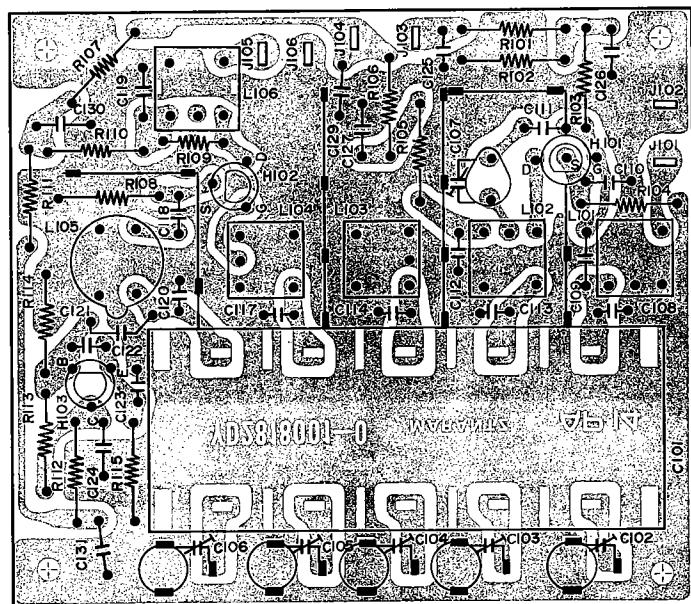


**Figure 7. FM Front End Assembly P100 Component Locations**

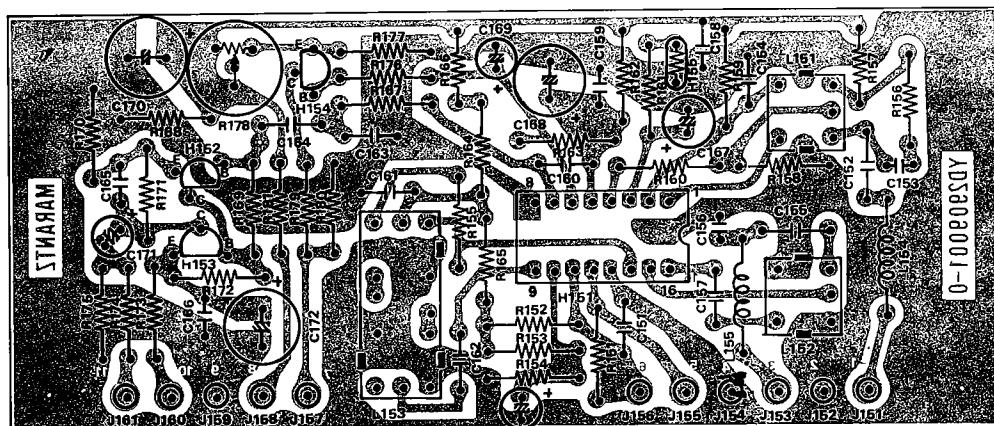


**Figure 8. AM Tuner Assembly P150 Component Locations**

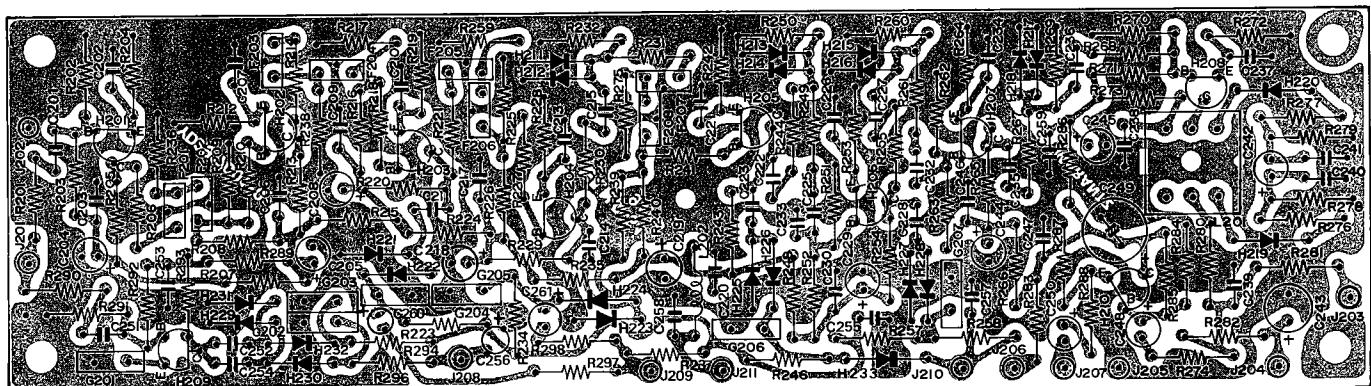

**Figure 9. FM IF Amplifier Assembly P200 Component Locations**

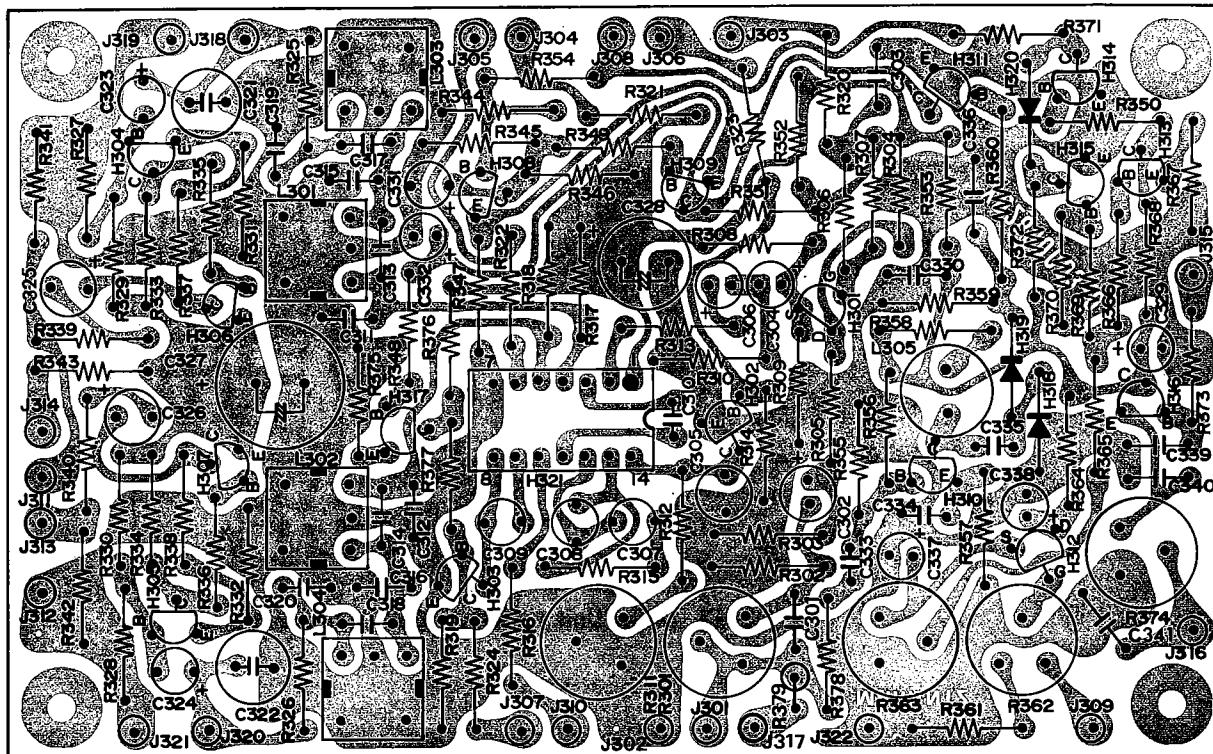

**Figure 10. MPX Stereo Decoding Amplifier Assembly P300 Component Locations**

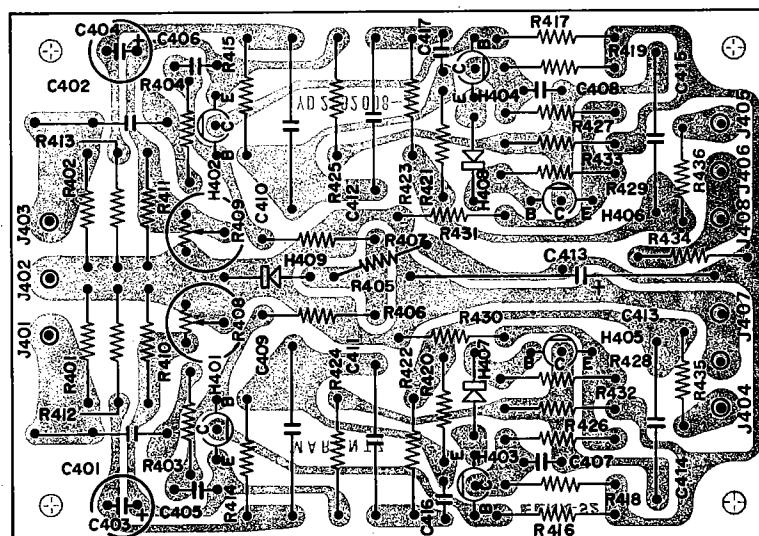

**Figure 11. Phono Amplifier Assembly P400 Component Locations**

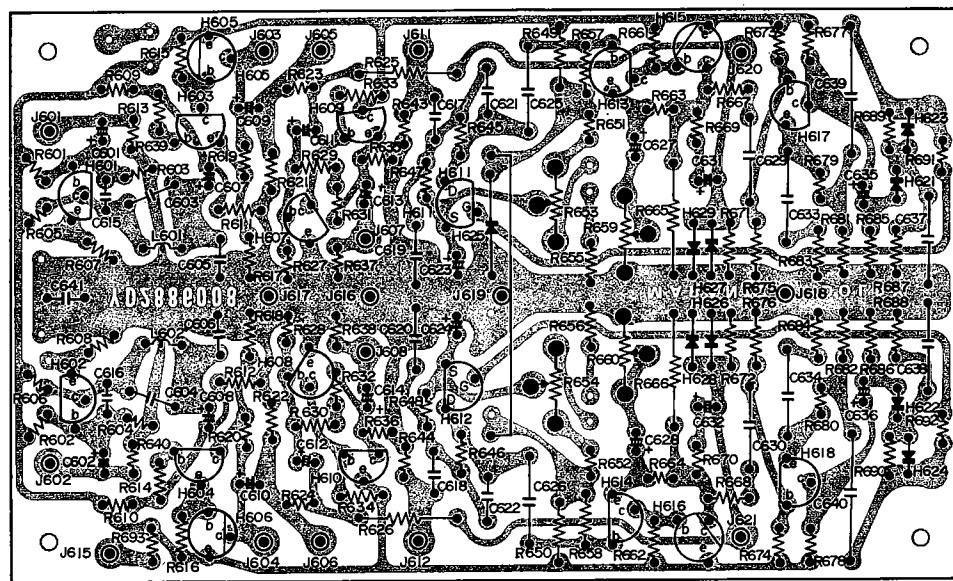


Figure 12. Dolby Unit Assembly P600 Component Locations



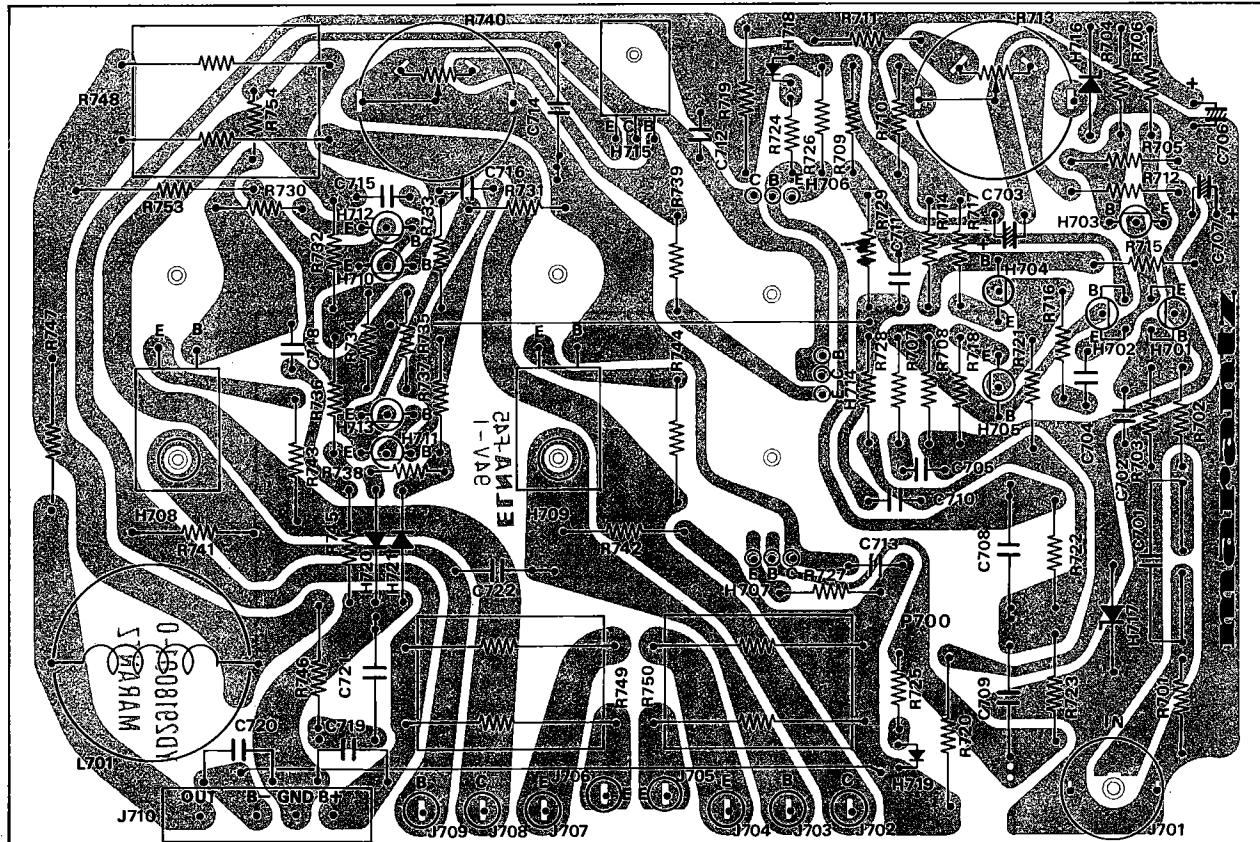



Figure 13. Power Amplifier Assembly P700 Component Locations

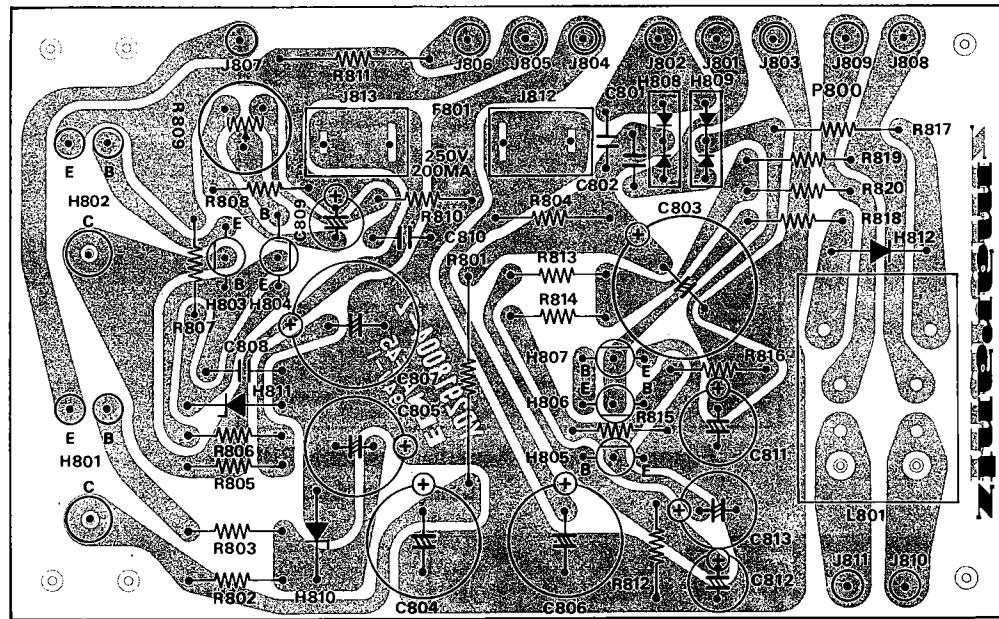


**Figure 14. Power Supply and Protection Relay Circuit Assembly P800 Component Locations**

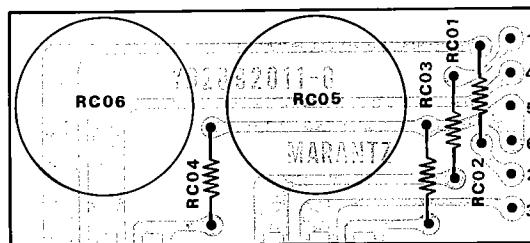


**Figure 15. FM Cal. and De-Emphasis Assembly  
PC01 Component Locations**

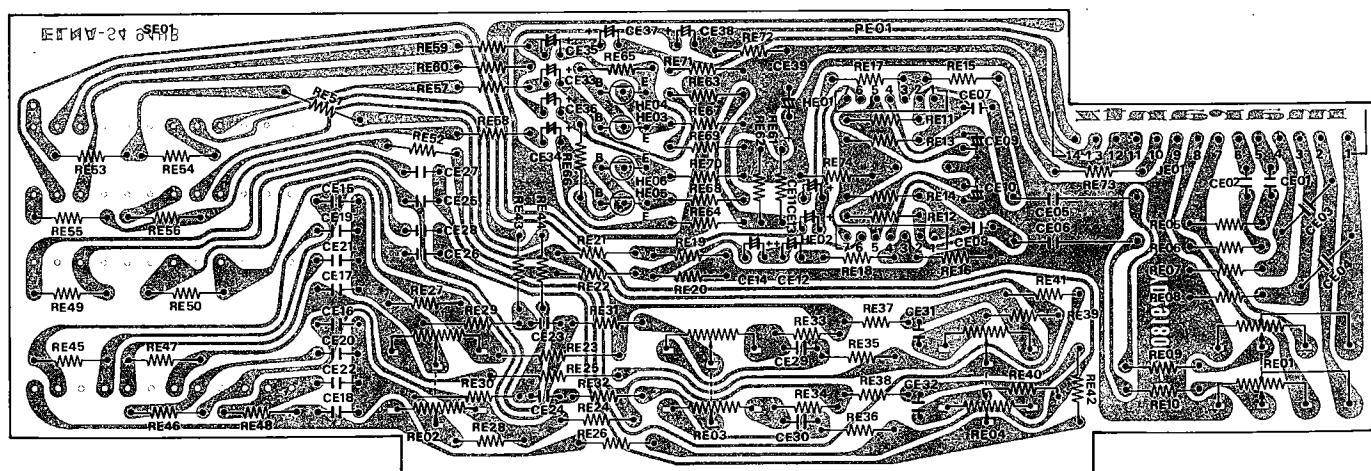

**Figure 16. Pre and Tone Amplifier Assembly PE01 Component Locations**

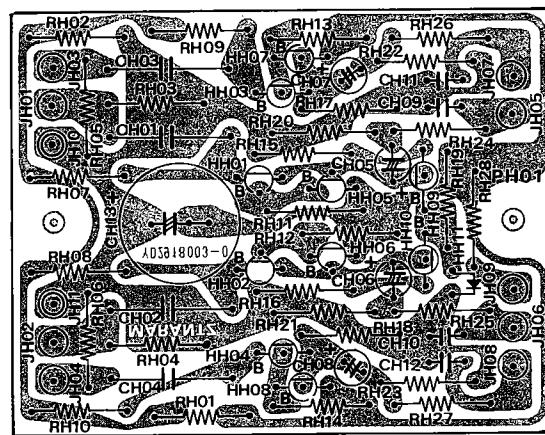

**Figure 17. Buffer Amplifier Assembly PH01 Component Locations**

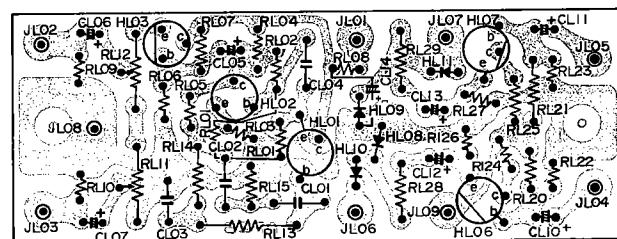

NOTE

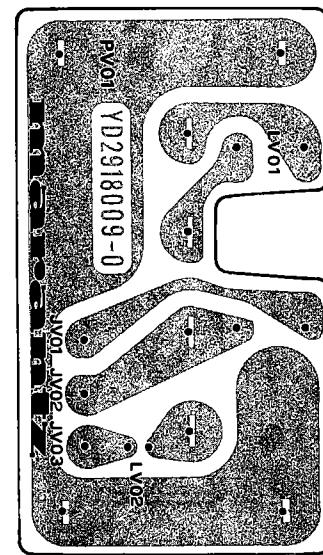



Figure 22. Antenna Terminal Assembly  
PV01 Component Locations



Figure 23. Function Lamp Assembly PY01 Component Locations



Figure 24. Dial Lamp Assembly PZ01 Component Locations

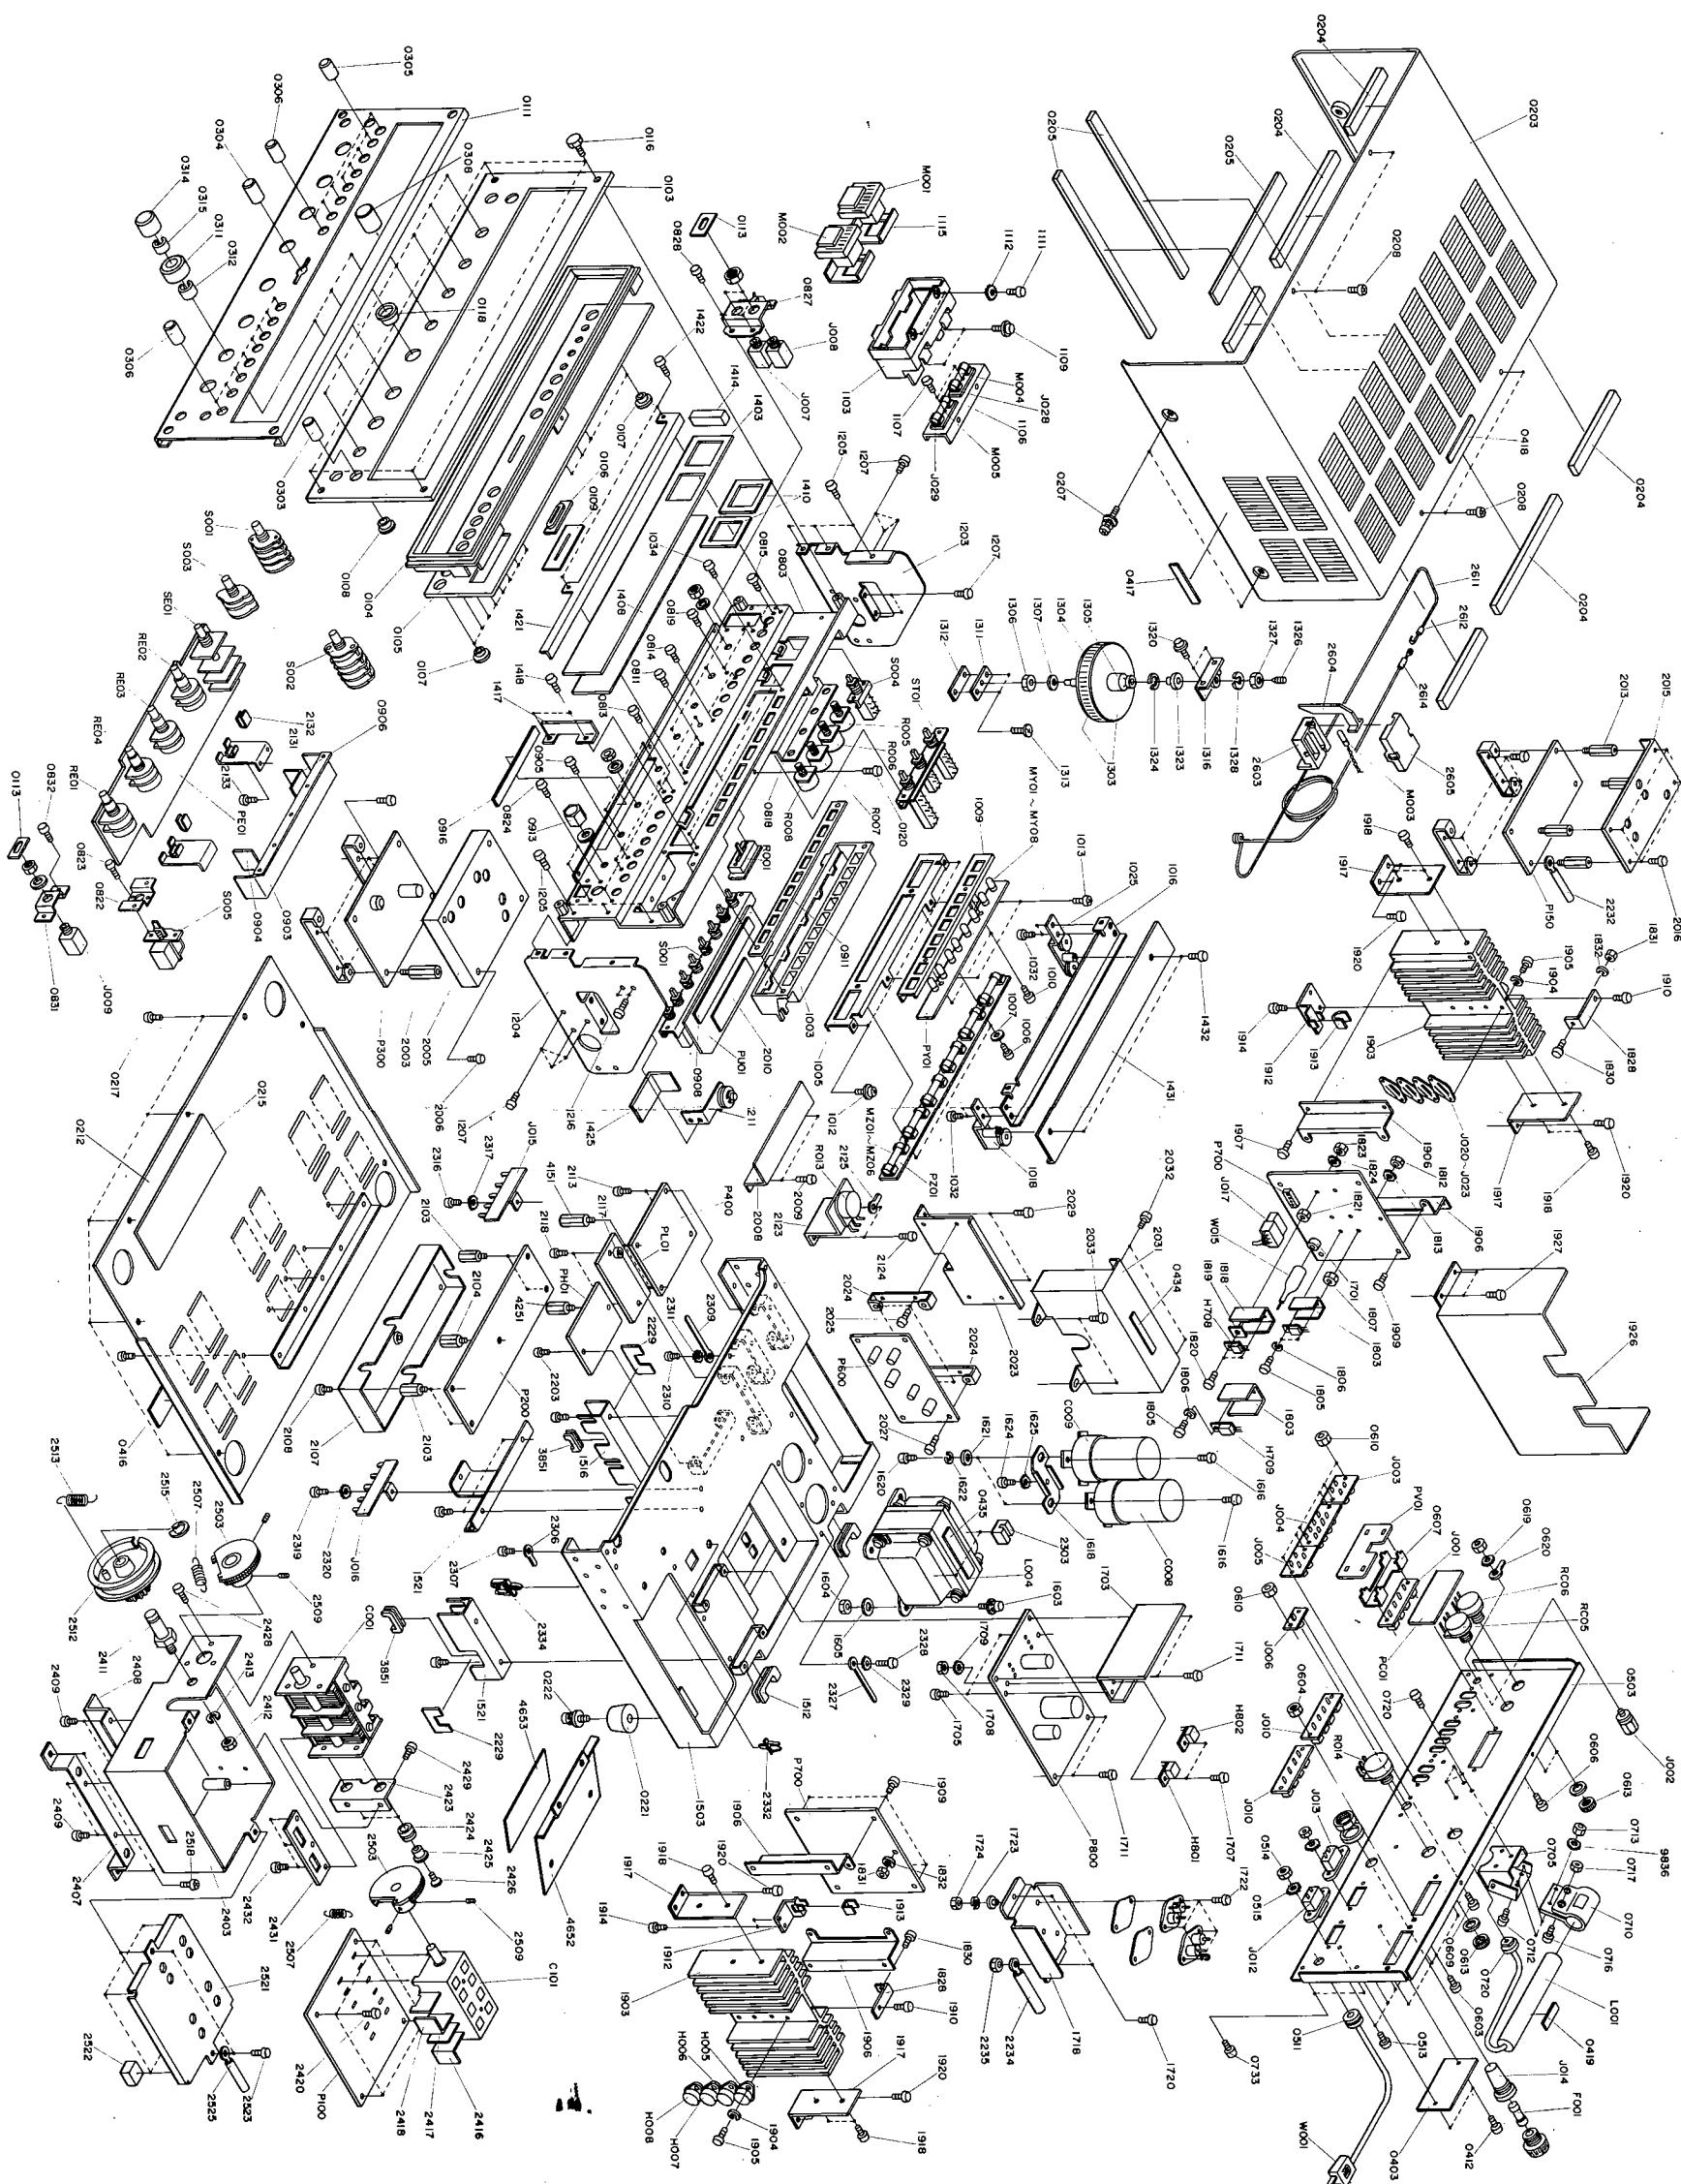

**Figure 25. Exploded Mechanical Diagram**

## PARTS LIST

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION
A 0103 0104 0105 0106 0107 0108 0109 0111	1 1 1 1 12 1 1 1	1 1 1 1 1 1 1 1	291806340 291806301 289240101 291815801 285425901 288625901 288625901 291510701 291805301	Front Panel Assembly Escutcheon Frame Window Bush Bush Bush Sheet Cover	R111 R112 R113 R114 R115	1 1 1 1 1	1 1 1 1 1	RT0510114 RT0510114 RT0522314 RT0522314 RT0512214	100Ω 100Ω 22KΩ 22KΩ 1.2KΩ
B 0203 0204 0205 0417 0418 4651	1 1 4 3 1 1	1 1 4 3 1 2	289225742 289225701 257711807 289205602 257886102 257886103 291805601	Top Lid Assembly Lid Spacer Buffer Label Do Not Remove ..... Label See Marking ..... Buffer	C101 C102 C103 C104 C105 C106 C107 C108 C109 C110	1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1	CA5000001 CT1100001 CT1100001 CT1100001 CT1100001 CT1100001 CT1100002 DD1615001 DK1710201 DK1810301	P100-CAPACITORS Variable, FM 5 Gang Trimming, 1.5~11.5PF Trimming, 1.5~11.5PF Trimming, 1.5~11.5PF Trimming, 1.5~11.5PF Trimming, 1.5~11.5PF Ceramic, 15PF±10%, 50V Ceramic, 1000PF±10%, 50V Ceramic, 0.1μF+100%,-0%, 50V
C 0212 0215	1 1	1 1	291825740 291825750 291512001	Bottom Lid Assembly Lid K Insulator	C111 C112 C113 C114 C115 C116 C117 C118 C119 C120	1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1	DD1105001 DK1710201 DD1615001 DD1620001 DD1001002 DD1600601 DD1620001 DK1710201 DK1710301 DD1620003	Ceramic, 5PF±0.5PF Ceramic, 1000PF±2% Ceramic, 15PF±10% Ceramic, 20PF±10% Ceramic, 10PF±0.25PF Ceramic, 0.6PF±10% Ceramic, 20PF±10% Ceramic, 1000PF±20% Ceramic, 0.1μF±20% Ceramic, 20PF±10%
D 0311 0312	3 3	3 3	281815440 281815404 71400149Q	Knob Assembly, Bottom Knob Spring	C121 C122 C123 C124 C125 C126 C127 C128 C129 C130	1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1	DD1210006 DD1615003 DD1615003 DK1710301 DK1810301 DK1810301 DK1710301 DK1710301 DK1710301 DK1710301	Ceramic, 10PF±10% Ceramic, 15PF±10% Ceramic, 15PF±10% Ceramic, 0.01μF±20% Ceramic, 0.01μF+100%,-0% Ceramic, 0.01μF+100%,-0R Ceramic, 0.01μF±20% Ceramic, 0.01μF±20% Ceramic, 0.01μF±20% Ceramic, 0.01μF±20%
E 0314 0315	3 3	3 3	281815441 281815405 71400159Q	Knob Assembly, Top Knob Spring	C131	1	1	DK1710301	Ceramic, 0.01μF±20%
F 2603 2604 2605 M003	1 1 1 1	1 1 1 1	291510342 291510301 285010301 291510302 IN1008030	Pointer Assembly Pointer Pointer Cover Lamp	L101 L102 L103 L104 L105 L106	1 1 1 1 1 1	1 1 1 1 1 1	LA1027801 LA1027802 LA1027803 LA1027804 LO1202604 LI1001601	P100-MISCELLANEOUS Ant. Coil RF Coil RF Coil RF Coil OSC Coil IFT
G 2611 2612	1 1	1 1	120200640 72080802A 120225801	Hook Assembly String Hook	H101 H102 H103	1 1 1	1 1 1	HF200191A HF200191A HT305351B	Transistor, 2SK19Y Transistor, 2SK19Y Transistor, 2SC535B
H 1303 1304 1305 1306 1307	1 2 1 1 1	1 2 1 1 1	285327340 257706302 257727301 285311201 53110603E 54020601E	Fly Wheel Assembly Escutcheon Fly Wheel Shaft Hexagon Nut Flat Washer P	J101 J102 J103 J104 J105 J106	1 1 1 1 1 1	1 1 1 1 1 1	YP1000094 YP1000094 YP1000094 YP1000094 YP1000094 YP1000094	Plug Plug Plug Plug Plug Plug
2420 2507 2515	4 2 1	4 2 1	51100306S 71101669Q 64000400R	GENERAL MISCELLANEOUS B. H. M. Screw B 3x6 Spring RG Ring E	2416 2417 2418 2403 2407 2408 2409 2411	1 2 1 1 1 1 4 1	1 2 1 1 1 1 4 1	281810903 281810904 281810905 281810950 289016006 281816008 51570306B 281811201	GENERAL MISCELLANEOUS Shield Shield Shield Shield K Bracket Bracket P.H. Tapt Screw P3 x 6ST Shaft
P100	1	1	YD2818001 ZZ2818001	FM FRONT END CIRCUIT BOARD-P100 P. W. Board, FM RF (Print Only) P. W. Board Assembly					
R101 R102 R103 R104 R105 R106 R107 R108 R109 R110	1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1	RT0556314 RT0510514 RT0510414 RT0510114 RT0522114 RT0510114 RT0510114 RT0547214 RT0522314 RT0510214	All resistors are ±5% and 1/4W 56KΩ 1MΩ 100KΩ 100Ω 220Ω 100Ω 100Ω 4.7KΩ 22KΩ 1KΩ					

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION					
2412	1	1	53110403E	Hexagon Nut	C156	1	1	DD1615001	Ceramic, 15PF ± 10%					
2413	1	1	54040402N	Spring Washer	C157	1	1	DK1710301	Ceramic, 0.01μF ± 20%					
2423	1	1	281810908	Shield	C158	1	1	DK1840302	Ceramic, 0.04μF +80%,-20%					
2424	2	2	114325901	Bush	C159	1	1	DK1840302	Ceramic, 0.04μF +80%,-20%					
2425	2	2	114325902	Bush	C160	1	1	DK1710301	Ceramic, 0.01μF ± 20%					
2426	2	2	51040308A	F. H. M. Screw F 3x8	C161	1	1	DK1710301	Ceramic, 0.01μF ± 20%					
2428	3	3	51100304E	B. H. M. Screw B 3x4	C162	1	1	DK1710301	Ceramic, 0.01μF ± 20%					
2429	2	2	51100304E	B. H. M. Screw B 3x4	C163	1	1	DF1615305	Film, 0.015μF ± 10%					
2431	1	1	281805102	Guide	C164	1	1	DF1633305	Film, 0.033μF ± 10%					
2432	3	3	51060306A	P. H. M. Screw P 3x6	C165	1	1	DF1756205	Film, 5600PF ± 20%					
C001	1	1	CA0330002	Variable Cap.	C166	1	1	DK1840302	Film, 0.04μF +80%,-20%					
2512	1	1	289215901	Drum	C167	1	1	EA2260169	Electroly, 22μF, 16V					
2513	1	1	71101569M	Spring	C168	1	1	EA1070169	Electroly, 100μF, 16V					
2503	2	2	281805850	Gear K	C169	1	1	EA4750359	Electroly, 4.7μF, 35V					
2509	4	4	51064019A	Screw	C170	1	1	EA1070169	Electroly, 100μF, 16V					
<b>AM TUNER CIRCUIT BOARD-P150</b>														
P150	1	1	YD2909001	P. W. Board, AM Tuner (Print Only)	C171	1	1	EA1050509	Electroly, 1μF, 50V					
	1	1	ZZ2918101	P. W. Board Assembly	C172	1	1	EA1070169	Electroly, 100μF, 16V					
<b>P150-RESISTORS</b>														
All resistors are ±5% and 1/4W, unless otherwise indicated.														
R151	1	1	RT0510314	10KΩ	L151	1	1	LA1001019	RF Coil, AM					
R152	1	1	RT0530314	30KΩ	L152	1	1	LO1001050	OSC Coil, AM					
R153	1	1	RT0582314	82KΩ	L153	1	1	LI1028003	IFT, AM Ceramic Filter					
R154	1	1	RT0522314	22KΩ	L154	1	1	LC1332002	Choke Coil, 3.3μH					
R156	1	1	RT0515414	150KΩ	L155	1	1	LC1332002	Choke Coil, 3.3μH					
R157	1	1	RC0000014	0Ω	J151	1	1	YP1000113	Plug					
R158	1	1	RT0539314	39KΩ	J152	1	1	YP1000113	Plug					
R159	1	1	RT0539214	3.9KΩ	J153	1	1	YP1000113	Plug					
R160	1	1	RC0000012	0Ω	J155	1	1	YP1000113	Plug					
R161	1	1	RT0543214	4.3KΩ	J156	1	1	YP1000113	Plug					
R162	1	1	RT0510114	100Ω	J157	1	1	YP1000113	Plug					
R163	1	1	RT0515214	1.5KΩ	J158	1	1	YP1000113	Plug					
R164	1	1	RT0533114	330Ω	J159	1	1	YP1000113	Plug					
R165	1	1	RC0000014	0Ω	J160	1	1	YP1000113	Plug					
R166	1	1	RC0000014	0Ω	J161	1	1	YP1000113	Plug					
R167	1	1	RT0522214	2.2KΩ										
R168	1	1	RT0582314	82KΩ										
R169	1	1	RT0562414	620KΩ										
R170	1	1	RT0551114	51Ω										
R171	1	1	RT0520214	2KΩ										
R172	1	1	RT0556214	5.6KΩ										
R173	1	1	RT0510114	100Ω										
R174	1	1	RT0510114	100Ω										
R175	1	1	RT0510414	100KΩ										
R176	1	1	RT0510314	10KΩ	R201	1	1	RT0515114	150Ω					
R177	1	1	RT0512314	12KΩ	R202	1	1	RT0582214	8.2KΩ					
R178	1	1	RA0103025	Trimming, 10KΩ (B)	R203	1	1	RT0518314	18KΩ					
R179	1	1	RT0512314	12KΩ	R204	1	1	RT0510214	1KΩ					
R180	1	1	RT0515214	1.5KΩ	R205	1	1	RT0533114	330Ω					
R181	1	1	RT0510114	100Ω	R206	1	1	RC0000014	0Ω, 1/4W					
R182	1	1	RT0515214	1.5KΩ	R207	1	1	RT0547014	47Ω					
<b>P150-CAPACITORS</b>														
C151	1	1	DK1710301	Ceramic, 0.01μF ± 20%	R208	1	1	RT0533214	3.3KΩ					
C152	1	1	DF1747305	Film, 0.047μF ± 20%	R209	1	1	RT0515214	1.5KΩ					
C153	1	1	DD1620001	Ceramic, 20PF ± 10%	R210	1	1	RT0515114	150Ω					
C154	1	1	DK1710301	Ceramic, 0.01μF ± 20%	R212	1	1	RT0510214	1KΩ					
C155	1	1	DF6545101	Film, 450PF ± 5%	R213	1	1	RT0533114	330Ω					
					R214	1	1	RC0000014	0Ω, 1/4W					
<b>P150-MISCELLANEOUS</b>														
<b>P150-RESISTORS</b>														
All resistors are ±5% and 1/4W, unless otherwise indicated.														
<b>FM IF CIRCUIT BOARD-P200</b>														
P. W. Board, FM IF (Print Only)														
P. W. Board Assembly														
<b>P200-RESISTORS</b>														
All resistors are ±5% and 1/4W, unless otherwise indicated.														
<b>R201-R214</b>														

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION					
R215	1	1	RT0547014	47Ω	R282	1	1	RT0522314	22KΩ					
R216	1	1	RT0533214	3.3KΩ	R283	1	1	RT0510114	100Ω					
R217	1	1	RT0515214	1.5KΩ	R284	1	1	RT0510414	100KΩ					
R218	1	1	RT0515114	150Ω	R285	1	1	RT0518414	180KΩ					
R219	1	1	RT0510214	1KΩ	R286	1	1	RT0510114	100Ω					
R220	1	1	RT0533114	330Ω	R287	1	1	RT0522214	2.2KΩ					
R221	1	1	RC0000014	0Ω, 1/4W	R288	1	1	RT0510114	100Ω					
R223	1	1	RT0547314	47KΩ	R289	1	1	RT0510114	100Ω					
R224	1	1	RT0547014	47Ω	R290	1	1	RT0512114	120Ω					
R225	1	1	RT0515214	1.5KΩ	R291	1	1	RT0582214	8.2KΩ					
R226	1	1	RT0533214	3.3KΩ	R292	1	1	RT0518314	18KΩ					
R227	1	1	RT0515114	150Ω	R293	1	1	RT0522214	2.2KΩ					
R228	1	1	RT0556114	560Ω	R294	1	1	RT0527314	27KΩ					
R229	1	1	RT0575014	75Ω	R296	1	1	RT0533314	33KΩ					
R230	1	1	RC0000014	0Ω, 1/4W	R297	1	1	RT0522314	22KΩ					
R231	1	1	RT0575014	75Ω	R298	1	1	RT0515314	15KΩ					
R232	1	1	RT0510414	100KΩ	<b>P200-CAPACITORS</b>									
R234	1	1	RT0568314	68KΩ	C201	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R235	1	1	RT0547014	47Ω	C202	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R236	1	1	RT0582114	820Ω	C203	1	1	DK1840302	Ceramic, 0.04μF	+80%,-20%				
R237	1	1	RT0510214	1KΩ	C204	1	1	EA1060169	Electroly, 10μF, 16V					
R238	1	1	RT0582114	820Ω	C205	1	1	EA1060169	Electroly, 10μF, 16V					
R239	1	1	RT0515214	1.5KΩ	C206	1	1	DK1840302	Ceramic, 0.04μF	+80%,-20%				
R240	1	1	RT0533214	3.3KΩ	C207	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R241	1	1	RT0515114	150Ω	C208	1	1	EA1060169	Electroly, 10μF, 16V					
R242	1	1	RT0510214	1KΩ	C209	1	1	DK1840302	Ceramic, 0.04μF	+80%,-20%				
R243	1	1	RT0510214	1KΩ	C210	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R244	1	1	RT0515114	150Ω	C211	1	1	DD1540001	Ceramic, 40PF	±5%				
R246	1	1	RT0568314	68KΩ	C213	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R248	1	1	RT0547014	47Ω	C214	1	1	DD1540001	Ceramic, 40PF	±5%				
R249	1	1	RT0515114	150Ω	C215	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R250	1	1	RT0510414	100KΩ	C217	1	1	DK1840302	Ceramic, 0.04μF	+80%,-20%				
R251	1	1	RT0582214	8.2KΩ	C218	1	1	EA1060169	Electroly, 10μF, 16V					
R252	1	1	RT0515314	15KΩ	C219	1	1	EA1060169	Electroly, 10μF, 16V					
R253	1	1	RT0510214	1KΩ	C220	1	1	DK1840302	Ceramic, 0.04μF	+80%,-20%				
R254	1	1	RT0510214	1KΩ	C221	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R255	1	1	RT0515114	150Ω	C222	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R257	1	1	RT0539314	39KΩ	C223	1	1	DD1540001	Ceramic, 40PF	±5%				
R258	1	1	RT0522314	22KΩ	C225	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R259	1	1	RT0582114	820Ω	C226	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R260	1	1	RT0510414	100KΩ	C227	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R261	1	1	RT0515114	150Ω	C228	1	1	DD1540001	Ceramic, 40PF	±5%				
R262	1	1	RT0582214	8.2KΩ	C229	1	1	EA1060169	Electroly, 10μF, 16V					
R263	1	1	RT0515314	15KΩ	C230	1	1	DK1840302	Ceramic, 0.04μF	+80%,-20%				
R264	1	1	RT0510214	1KΩ	C232	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R265	1	1	RT0510214	1KΩ	C233	1	1	DD1540001	Ceramic, 40PF	±5%				
R266	1	1	RT0510114	100Ω	C234	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R267	1	1	RT0515114	150Ω	C235	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R268	1	1	RT0515114	150Ω	C236	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R269	1	1	RT0510414	100KΩ	C237	1	1	DK1810301	Ceramic, 0.01μF	+80%,-20%				
R270	1	1	RT0582214	8.2KΩ	C238	1	1	DK1840302	Ceramic, 0.04μF	+80%,-20%				
R271	1	1	RT0515314	15KΩ	C239	1	1	DD1620101	Ceramic, 200PF	±10%				
R272	1	1	RT0510214	1KΩ	C240	1	1	DD1620101	Ceramic, 200PF	±10%				
R273	1	1	RT0510114	100Ω	C241	1	1	DD1620101	Ceramic, 200PF	±10%				
R274	1	1	RT0527214	2.7KΩ	C242	1	1	EA1060169	Electroly, 10μF, 16V					
R275	1	1	RT0582114	820Ω	C243	1	1	EA1070109	Electroly, 100μF, 10V					
R276	1	1	RT0582114	820Ω	C244	1	1	EA1060169	Electroly, 100μF, 10V					
R277	1	1	RT0582114	820Ω	C245	1	1	EA1060169	Electroly, 100μF, 10V					
R278	1	1	RT0568214	6.8KΩ	C246	1	1	DK1840302	Ceramic, 0.04μF	+80%,-20%				
R279	1	1	RT0568214	6.8KΩ	C247	1	1	DK1840302	Ceramic, 0.04μF	+80%,-20%				
R280	1	1	RT0510114	100Ω	C248	1	1	EA1060169	Electroly, 10μF, 16V					
R281	1	1	RT0556314	56KΩ										

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION
C249	1	1	EA1070169	Electroly, 100μF, 16V	J201	1	1	YP1000113	Plug
C250	1	1	EA2260169	Electroly, 22μF, 16V	J202	1	1	YP1000113	Plug
C251	1	1	DK1810301	Ceramic, 0.01μF +80%,-20%	J203	1	1	YP1000113	Plug
C252	1	1	DD1540001	Ceramic, 40PF ±5%	J204	1	1	YP1000113	Plug
C253	1	1	DK1840302	Ceramic, 0.04μF +80%,-20%	J205	1	1	YP1000113	Plug
C254	1	1	DD1540001	Ceramic, 40PF ±5%	J206	1	1	YP1000113	Plug
C255	1	1	DD1620101	Ceramic, 200PF ±10%	J207	1	1	YP1000113	Plug
C256	1	1	EV1050352	Electroly, 1μF ±20%, 35V	J208	1	1	YP1000113	Plug
C257	1	1	DD1620101	Ceramic, 200PF ±10%	J209	1	1	YP1000113	Plug
C258	1	1	DK1810301	Ceramic, 0.01μF +80%,-20%	J210	1	1	YP1000113	Plug
C259	1	1	DK1840302	Ceramic, 0.04μF +80%,-20%	J211	1	1	YP1000113	Plug
C260	1	1	EV1050352	Electroly, 1μF, 35V	G201	1	1	BF2230006	Printed Compo. 1KΩ+0.022μF
C261	1	1	EA1050509	Electroly, 1μF, 50V	G202	1	1	BF1020002	Printed Compo. 100KΩ+1000PF
C262	1	1	DK1810402	Ceramic, 0.1μF +80%,-20%	G203	1	1	BF1020001	Printed Compo. 27KΩ+1000PF
C263	1	1	DK1810402	Ceramic, 0.1μF +80%,-20%	G204	1	1	BF2010004	Printed Compo. 27KΩ+200PF
				<b>P200-SEMICONDUCTORS</b>	G205	1	1	BF2010004	Printed Compo. 27KΩ+200PF
H201	1	1	HT308291C	Transistor, 2SC829C	G206	1	1	BF2010004	Printed Compo. 27KΩ+200PF
H202	1	1	HT308291C	Transistor, 2SC829C	G207	1	1	BF2010004	Printed Compo. 27KΩ+200PF
H203	1	1	HT308291C	Transistor, 2SC829C					
H204	1	1	HT308291C	Transistor, 2SC829C					
H205	1	1	HT308291C	Transistor, 2SC829C					
H206	1	1	HT308291C	Transistor, 2SC829C					
H207	1	1	HT308291C	Transistor, 2SC829C					
H208	1	1	HT308291C	Transistor, 2SC829C					
H209	1	1	HT308291C	Transistor, 2SC829C					
H210	1	1	HT306441B	Transistor, 2SC644S					
				<b>FM MPX CIRCUIT BOARD-P300</b>					
H211	1	1	HD2000121	Diode, 1S2413	P300	1	1	YD2890003	P.W. Board, FM Multiplex (Print Only)
H212	1	1	HD2000121	Diode, 1S2413					
H213	1	1	HD2000121	Diode, 1S2413					
H214	1	1	HD2000121	Diode, 1S2413					
H215	1	1	HD2000121	Diode, 1S2413					
H216	1	1	HD2000121	Diode, 1S2413					
H217	1	1	HD2000121	Diode, 1S2413					
H218	1	1	HD2000121	Diode, 1S2413					
H219	1	1	HD1000302	Diode, 20A90M					
H220	1	1	HD1000302	Diode, 20A90M					
				<b>P300-RESISTORS</b>					
H221	1	1	HD1000105	Diode, 1N60					
H222	1	1	HD1000105	Diode, 1N60					
H223	1	1	HD1000105	Diode, 1N60					
H224	1	1	HD1000105	Diode, 1N60					
H225	1	1	HD1000105	Diode, 1N60					
H226	1	1	HD1000105	Diode, 1N60					
H227	1	1	HD1000105	Diode, 1N60					
H228	1	1	HD1000105	Diode, 1N60					
H229	1	1	HD1000105	Diode, 1N60					
H230	1	1	HD1000105	Diode, 1N60					
				<b>P200-MISCELLANEOUS</b>					
F201	1	1	FP1107001	Ceramic Filter, SFA107MC	R301	1	1	RA0202011	Trimming, 2KΩ (B)
F202	1	1	FP1107001	Ceramic Filter, SFA107MC	R302	1	1	RT0522414	220KΩ
F203	1	1	FP1107001	Ceramic Filter, SFA107MC	R303	1	1	RT0556314	56KΩ
F204	1	1	FP1107001	Ceramic Filter, SFA107MC	R304	1	1	RT0568314	68KΩ
F205	1	1	FP1107001	Ceramic Filter, SFA107MC	R305	1	1	RT0510114	100Ω
F206	1	1	FP1107001	Ceramic Filter, SFA107MC	R306	1	1	RT0518414	180KΩ
F207	1	1	FP1107001	Ceramic Filter, SFA107MC	R307	1	1	RT0522414	220KΩ
F208	1	1	FP1107001	Ceramic Filter, SFA107MC	R308	1	1	RT0512414	120KΩ
L201	1	1	LI1401623	IFT, FM Detector	R309	1	1	RT0510414	100KΩ
L202	1	1	LC1332002	Choke Coil, 3.3μH	R310	1	1	RT0568214	6.8KΩ
				<b>R311</b>	1	1	RA0502020	Trimming, 5KΩ (B)	
				R312	1	1	RT0516314	16KΩ	
				R313	1	1	RT0510214	1KΩ	
				R314	1	1	RT0522414	220KΩ	
				R315	1	1	RT0510214	1KΩ	
				R316	1	1	RT0510214	1KΩ	
				R317	1	1	RT0539214	3.9KΩ	
				R318	1	1	RT0539214	3.9KΩ	
				R319	1	1	RT0522414	220KΩ	
				R320	1	1	RT0522314	22KΩ	
				R321	1	1	RT0510114	100Ω	
				R322	1	1	RT0510014	10Ω	
				R323	1	1	RT0522414	220KΩ	
				R324	1	1	RT0522414	220KΩ	
				R325	1	1	RT0530314	30KΩ	
				R326	1	1	RT0530314	30KΩ	
				R327	1	1	RT0510414	100KΩ	
				R328	1	1	RT0510414	100KΩ	
				R329	1	1	RT0515514	1.5MΩ	
				R330	1	1	RT0515514	1.5MΩ	
				R331	1	1	RT0551114	510Ω	
				R332	1	1	RT0551114	510Ω	
				R333	1	1	RT0522314	22KΩ	
				R334	1	1	RT0522314	22KΩ	
				R335	1	1	RT0510114	100Ω	
				R336	1	1	RT0510114	100Ω	

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION	
R337	1	1	RT0582214	8.2KΩ	C320	1	1	DF1522205	Film, 2200PF ±5%	
R338	1	1	RT0582214	8.2KΩ	C321	1	1	DF1510205	Film, 1000PF ±5%	
R339	1	1	RT0547114	470Ω	C322	1	1	DF1510205	Film, 1000PF ±5%	
R340	1	1	RT0547114	470Ω	C323	1	1	EV2240351	Electroly, 0.22μF ±20%, 35V	
R341	1	1	RT0522414	220KΩ	C324	1	1	EV2240351	Electroly, 0.22μF ±20%, 35V	
R342	1	1	RT0522414	220KΩ	C325	1	1	EV1050352	Electroly, 1μF ±20%, 35V	
R343	1	1	RT0539214	3.9KΩ	C326	1	1	EV1050352	Electroly, 1μF ±20%, 35V	
R344	1	1	RT0556414	560KΩ	C327	1	1	EA2270259	Electroly, 220μF, 25V	
R345	1	1	RT0515314	15KΩ	C328	1	1	EA2270169	Electroly, 220μF, 16V	
R346	1	1	RT0512414	120KΩ	C329	1	1	EA1060169	Electroly, 10μF, 16V	
R347	1	1	RT0510114	100Ω	C330	1	1	DK1840302	Ceramic, 0.04μF +80%,-20%	
R348	1	1	RT0522414	220KΩ	C331	1	1	EA1050509	Electroly, 1μF, 50V	
R349	1	1	RT0556214	5.6KΩ	C332	1	1	EA1060169	Electroly, 10μF, 16V	
R350	1	1	RT0510314	10KΩ	C333	1	1	DD1210001	Ceramic, 10PF ±10%	
R351	1	1	RT0510114	100Ω	C334	1	1	DF1668301	Film, 0.068μF ±10%	
R352	1	1	RT0533314	33KΩ	C335	1	1	DF1740301	Film, 0.04μF ±20%	
R353	1	1	RT0510114	100Ω	C336	1	1	DK1810402	Ceramic, 0.1μF +80%,-20%	
R354	1	1	RT0510414	100KΩ	C337	1	1	EA4750359	Electroly, 4.7μF, 35V	
R355	1	1	RT0527314	27KΩ	C338	1	1	EA1050509	Electroly, 1μF, 50V	
R356	1	1	RT0510414	100KΩ	C339	1	1	DK1840302	Ceramic, 0.04μF +80%,-20%	
R357	1	1	RT0510214	1KΩ	C340	1	1	DK1840302	Ceramic, 0.04μF +80%,-20%	
R358	1	1	RT0510114	100Ω	C341	1	1	DK1840302	Ceramic, 0.04μF +80%,-20%	
R359	1	1	RT0527314	27KΩ	C343	1	1	DF1710402	Film, 0.1μF ±20%	
R360	1	1	RT0533314	33KΩ	C344	1	1	DK1820302	Ceramic, 0.02μF +80%,-20%	
R361	1	1	RT0510414	100KΩ	<b>P300-COILS &amp; PLUGS</b>					
R362	1	1	RA0104018	Trimming, 100KΩ (B)	L301	1	1	LS1029004	MPX Coil, 56mH	
R363	1	1	RA0103025	Trimming, 10KΩ (B)	L302	1	1	LS1029004	MPX Coil, 56mH	
R364	1	1	RT0522214	2.2KΩ	L303	1	1	LS1029005	MPX Coil, 56mH	
R365	1	1	RT0510114	100Ω	L304	1	1	LS1029005	MPX Coil, 56mH	
R366	1	1	RT0510314	10KΩ	L305	1	1	LC2105001	Choke Coil, 1mH	
R367	1	1	RT0510114	100Ω	J301	?	1	1	YP1000113	Plug
R368	1	1	RT0527414	270KΩ	J322					
R369	1	1	RT0510314	10KΩ	<b>P300-SEMICONDUCTORS</b>					
R370	1	1	RT0512314	12KΩ	H301	1	1	HF200301C	FET, 2SK 30Y	
R371	1	1	RT0522114	220Ω	H302	1	1	HT308281D	Transistor, 2SC 828S	
R373	1	1	RT0582314	82KΩ	H303	1	1	HT308281D	Transistor, 2SC 828S	
R374	1	1	RA0103025	Trimming, 10KΩ (B)	H304	1	1	HT307322A	Transistor, 2SC 732 B or G	
R375	1	1	RT0510114	100Ω	H305	1	1	HT307322A	Transistor, 2SC 732 B or G	
R376	1	1	RT0510414	100KΩ	H306	1	1	HT104942A	Transistor, 2SA 494 G or Y	
R377	1	1	RT0510414	100KΩ	H307	1	1	HT104942A	Transistor, 2SA 494 G or Y	
R378	1	1	RT0556214	5.6KΩ	H308	1	1	HT308281D	Transistor, 2SC 828 S	
R379	1	1	RT0533214	3.3KΩ	H309	1	1	HT308281D	Transistor, 2SC 828 S	
<b>P300-CAPACITORS</b>					H310	1	1	HT308281D	Transistor, 2SC 828 S	
C301	1	1	DF1633205	Film, 3300PF ±10%	H311	1	1	HT308281D	Transistor, 2SC 828 S	
C302	1	1	EA3360109	Electroly, 33μF, 10V	H312	1	1	HF200300A	FET, 2SK30Y	
C303	1	1	DF1722305	Film, 0.022μF ±20%	H313	1	1	HT308281D	Transistor, 2SC828S	
C304	1	1	EA2260169	Electroly, 22μF, 16V	H314	1	1	HT308281D	Transistor, 2SC828S	
C305	1	1	DF5547101	Film, 470PF ±5%	H315	1	1	HT308281D	Transistor, 2SC828S	
C306	1	1	EA2260169	Electroly, 22μF, 16V	H316	1	1	HT308281D	Transistor, 2SC828S	
C307	1	1	EQ4740501	Electroly, 0.47μF ±20%, 50V	H317	1	1	HT308281D	Transistor, 2SC828S	
C308	1	1	EQ2240501	Electroly, 0.22μF ±20%, 50V	H318	1	1	HD1000105	Diode, IN60	
C309	1	1	EQ2240501	Electroly, 0.22μF ±20%, 50V	H319	1	1	HD1000105	Diode, IN60	
C310	1	1	DF1747301	Film, 0.047μF ±20%	H321	1	1	HC1000401	IC, HA1156	
C311	1	1	DF1515205	Film, 1500PF ±5%	<b>PHONO AMP. CIRCUIT BOARD-P400</b>					
C312	1	1	DF1515205	Film, 1500PF ±5%	P400	1	1	YD2892008	P. W. Board, Phono Amp.(Print Only)	
C313	1	1	DD1536101	Ceramic, 360PF ±5%		1	1	ZZ2892008	P. W. Board Assembly	
C314	1	1	DD1536101	Ceramic, 360PF ±5%						
C315	1	1	DF1533205	Film, 3300PF ±5%						
C316	1	1	DF1533205	Film, 3300PF ±5%						
C317	1	1	DF1515205	Film, 1500PF ±5%						
C318	1	1	DF1515205	Film, 1500PF ±5%						
C319	1	1	DF1522205	Film, 2200PF ±5%						

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION					
<b>P400-RESISTORS</b> All resistors are $\pm 5\%$ and $\frac{1}{4}W$ , unless otherwise indicated														
R401	1	1	RT0556314	56K $\Omega$	H407	1	1	HD2000121	Diode,					
R402	1	1	RT0556314	56K $\Omega$	H408	1	1	HD2000121	Diode,					
R403	1	1	RT0547114	470 $\Omega$	H409	1	1	HV0000206	Varistor, VD1212					
R404	1	1	RT0547114	470 $\Omega$	J401	1	1	YP1000113	Plug					
R405	1	1	RN0533314	33K $\Omega$	J402	1	1	YP1000113	Plug					
R406	1	1	RN0510514	1M $\Omega$	J403	1	1	YP1000113	Plug					
R407	1	1	RN0510514	1M $\Omega$	J404	1	1	YP1000113	Plug					
R408	1	1	RA0104018	Trimming, 100K $\Omega$ $\pm 30\%$ (B)	J405	1	1	YP1000113	Plug					
R409	1	1	RA0104018	Trimming, 100K $\Omega$ $\pm 30\%$ (B)	J406	1	1	YP1000113	Plug					
R410	1	1	RN0527314	27K $\Omega$	J407	1	1	YP1000113	Plug					
R411	1	1	RN0527314	27K $\Omega$	J408	1	1	YP1000113	Plug					
R412	1	1	RT0562114	620 $\Omega$	<b>DOLBY CIRCUIT BOARD-P600</b> P. W. Board, Dolby (Print Only) P. W. Board Assembly									
R413	1	1	RT0562114	620 $\Omega$	P600	1	1	YD2886008	<b>P600-RESISTORS</b> All resistors are $\pm 5\%$ and $\frac{1}{4}W$ , unless otherwise indicated.					
R414	1	1	RT0522514	2.2M $\Omega$	R601	1	1	RT0547414	470K $\Omega$					
R415	1	1	RT0522514	2.2M $\Omega$	R602	1	1	RT0547414	470K $\Omega$					
R416	1	1	RN0522514	2.2M $\Omega$	R603	1	1	RT0510414	100K $\Omega$					
R417	1	1	RN0522514	2.2M $\Omega$	R604	1	1	RT0510414	100K $\Omega$					
R418	1	1	RN0527414	270K $\Omega$	R605	1	1	RT0533214	3.3K $\Omega$					
R419	1	1	RN0527414	270K $\Omega$	R606	1	1	RT0533214	3.3K $\Omega$					
R420	1	1	RT0547314	47K $\Omega$	R607	1	1	RT0510214	1K $\Omega$					
R421	1	1	RT0547314	47K $\Omega$	R608	1	1	RT0510214	1K $\Omega$					
R422	1	1	RT0522214	2.2K $\Omega$	R609	1	1	RT0539314	39K $\Omega$					
R423	1	1	RT0522214	2.2K $\Omega$	R610	1	1	RT0539314	39K $\Omega$					
R424	1	1	RN0568414	680K $\Omega$	R611	1	1	RT0568214	6.8K $\Omega$					
R425	1	1	RN0568414	680K $\Omega$	R612	1	1	RT0568214	6.8K $\Omega$					
R426	1	1	RN0510414	100K $\Omega$	R613	1	1	RT0510114	100 $\Omega$					
R427	1	1	RN0510414	100K $\Omega$	R614	1	1	RT0510114	100 $\Omega$					
R428	1	1	RN0547314	47K $\Omega$	R615	1	1	RT0522214	2.2K $\Omega$					
R429	1	1	RN0547314	47K $\Omega$	R616	1	1	RT0522214	2.2K $\Omega$					
R430	1	1	RT0547014	47 $\Omega$	R617	1	1	RT0512114	120 $\Omega$					
R431	1	1	RT0547014	47 $\Omega$	R618	1	1	RT0512114	120 $\Omega$					
R432	1	1	RN0533214	3.3K $\Omega$	R619	1	1	RT0556114	560 $\Omega$					
R433	1	1	RN0533214	3.3K $\Omega$	R620	1	1	RT0556114	250 $\Omega$					
R434	1	1	RT0510114	100 $\Omega$	<b>P400-CAPACITORS</b>									
R435	1	1	RT0547014	47 $\Omega$	R621	1	1	RT0533314	33K $\Omega$					
R436	1	1	RT0547014	47 $\Omega$	R622	1	1	RT0533314	33K $\Omega$					
C401	1	1	EV1050256	Electroly, 1 $\mu$ F $\pm 20\%$ , 25V	R623	1	1	RT0215414	150K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$					
C402	1	1	EV1050256	Electroly, 1 $\mu$ F $\pm 20\%$ , 25V	R624	1	1	RT0215414	150K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$					
C403	1	1	EE4760163	Electroly, 47 $\mu$ F $\pm 20\%$ , 16V	R625	1	1	RT0218414	180K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$					
C404	1	1	EE4760163	Electroly, 47 $\mu$ F $\pm 20\%$ , 16V	R626	1	1	RT0218414	180K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$					
C405	1	1	DD1540004	Ceramic, 40PF $\pm 5\%$ , 50V	R627	1	1	RT0527314	27K $\Omega$					
C406	1	1	DD1540004	Ceramic, 40PF $\pm 5\%$ , 50V	R628	1	1	RT0527314	27K $\Omega$					
C407	1	1	DD1104001	Ceramic, 4PF $\pm 0.5PF$ , 50V	R629	1	1	RT0582214	8.2K $\Omega$					
C408	1	1	DD1104001	Ceramic, 4PF $\pm 0.5PF$ , 50V	R630	1	1	RT0582214	8.2K $\Omega$					
C409	1	1	DF6556201	Film, 5600PF $\pm 5\%$ , 50V	R631	1	1	RT0215414	150K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$					
C410	1	1	DF6556201	Film, 5600PF $\pm 5\%$ , 50V	R632	1	1	RT0215414	150K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$					
C411	1	1	DF6516201	Film, 1600PF $\pm 5\%$ , 50V	R633	1	1	RT0522314	22K $\Omega$					
C412	1	1	DF6516201	Film, 1600PF $\pm 5\%$ , 50V	R634	1	1	RT0522314	22K $\Omega$					
C413	1	1	ED1070351	Electroly, 100 $\mu$ F, 35V	R635	1	1	RT0227214	2.7K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$					
C414	1	1	DF1710552	Film, 1 $\mu$ F $\pm 20\%$ , 250V	R636	1	1	RT0227214	2.7K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$					
C415	1	1	DF1710552	Film, 1 $\mu$ F $\pm 20\%$ , 250V	R637	1	1	RT0533314	33K $\Omega$					
C416	1	1	DD1650001	Ceramic, 50PF $\pm 10\%$ , 250V	R638	1	1	RT0533314	33K $\Omega$					
C417	1	1	DD1650001	Ceramic, 50PF $\pm 10\%$ , 250V	R639	1	1	RT0547314	47K $\Omega$					
<b>P400-SEMICONDUCTORS &amp; PLUGS</b>														
H401	1	1	HT313441E	Transistor, 2SC1344E	R640	1	1	RT0547314	47K $\Omega$					
H402	1	1	HT313441E	Transistor, 2SC1344E	R643	1	1	RT0527414	270K $\Omega$					
H403	1	1	HT313442A	Transistor, 2SC1344D, E	R644	1	1	RT0527414	270K $\Omega$					
H404	1	1	HT313442A	Transistor, 2SC1344D, E										
H405	1	1	HT304580R	Transistor, 2SC458L, B										
H406	1	1	HT304580R	Transistor, 2SC458L, B										

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION
R645	1	1	RT0547314	47KΩ	C613	1	1	EA1060169	Electroly,
R646	1	1	RT0547314	47KΩ	C614	1	1	EA1060169	Electroly,
R647	1	1	RT0533214	3.3KΩ	C617	1	1	DF1556205	Film,
R648	1	1	RT0533214	3.3KΩ	C618	1	1	DF1556205	Film,
R649	1	1	RT0515214	1.5KΩ	C619	1	1	DF1527305	Film,
R650	1	1	RT0515214	1.5KΩ	C620	1	1	DF1527305	Film,
R651	1	1	RT0518314	18KΩ	C621	1	1	DF1547205	Film,
R652	1	1	RT0518314	18KΩ	C622	1	1	DF1547205	Film,
R653	1	1	RA0103022	Variable, 10KΩ (B)	C623	1	1	EA1060169	Electroly,
R654	1	1	RA0103022	Variable, 10KΩ (B)	C624	1	1	EA1060169	Electroly,
R655	1	1	RT0527214	2.7KΩ	C625	1	1	DF1610405	Film,
R656	1	1	RT0527214	2.7KΩ	C626	1	1	DF1610405	Film,
R657	1	1	RT0568414	680KΩ	C627	1	1	EA4760109	Electroly,
R658	1	1	RT0568414	680KΩ	C628	1	1	EA4760109	Electroly,
R659	1	1	RA0102020	Variable, 1KΩ (B)	C629	1	1	DF1610405	Film,
R660	1	1	RA0102020	Variable, 1KΩ (B)	C630	1	1	DF1610405	Film,
R661	1	1	RT0515314	15KΩ	C631	1	1	EA1060169	Electroly,
R662	1	1	RT0515314	15KΩ	C632	1	1	EA1060169	Electroly,
R663	1	1	RT0582214	8.2KΩ	C633	1	1	DF1610405	Film,
R664	1	1	RT0582214	8.2KΩ	C634	1	1	DF1610405	Film,
R665	1	1	RT0510314	10KΩ	C635	1	1	EA1060169	Electroly,
R666	1	1	RT0510314	10KΩ	C636	1	1	EA1060169	Electroly,
R667	1	1	RT0582214	8.2KΩ	C637	1	1	DF1610405	Film,
R668	1	1	RT0582214	8.2KΩ	C638	1	1	DF1610405	Film,
R669	1	1	RT0582214	8.2KΩ	C639	1	1	DF1633405	Film,
R670	1	1	RT0582214	8.2KΩ	C640	1	1	DF1633405	Film,
R671	1	1	RT0533314	33KΩ	C641	1	1	EA2270259	Electroly,
R672	1	1	RT0533314	33KΩ					220μF, 25V
R673	1	1	RT0512414	120KΩ	L601	1	1	LC2226004	P600-COILS & PLUGS
R674	1	1	RT0512414	120KΩ	L602	1	1	LC2226004	Choke Coil, 22mH
R675	1	1	RT0547314	47KΩ	J601	1	1	YP1000109	Choke Coil, 22mH
R676	1	1	RT0547314	47KΩ	J608	1	1	YP1000109	Plug
R677	1	1	RT0527214	2.7KΩ	J611	1	1	YP1000109	Plug
R678	1	1	RT0527214	2.7KΩ	J612	1	1	YP1000109	Plug
R679	1	1	RT0510214	1KΩ	J615	1	1	YP1000109	Plug
R680	1	1	RT0510214	1KΩ	J621	1	1	YP1000109	Plug
R681	1	1	RT0533014	33Ω					
R682	1	1	RT0533014	33Ω					
R683	1	1	RT0547014	47Ω	H601	1	1	HT313271T	P600-SEMICONDUCTORS
R684	1	1	RT0547014	47Ω	H602	1	1	HT313271T	Transistor, 2SC1327 T,U
R685	1	1	RT0515314	15KΩ	H603	1	1	HT306441B	Transistor, 2SC644S
R686	1	1	RT0515314	15KΩ	H604	1	1	HT306441B	Transistor, 2SC644S
R687	1	1	RT0527414	270KΩ	H605	1	1	HT104941C	Transistor, 2SA494Y
R688	1	1	RT0527414	270KΩ	H606	1	1	HT104941C	Transistor, 2SA494Y
R689	1	1	RT0527414	270KΩ	H607	1	1	HT306441B	Transistor, 2SC644S
R690	1	1	RT0527414	270KΩ	H608	1	1	HT306441B	Transistor, 2SC644S
R691	1	1	RT0522414	220KΩ	H609	1	1	HT306441B	Transistor, 2SC644S
R692	1	1	RT0522414	220KΩ	H610	1	1	HT306441B	Transistor, 2SC644S
R693	1	1	RC1010112	100Ω ±10%, ½W	H611	1	1	HF200301E	
					H612	1	1	HF200301E	Transistor, 2SK30D
C601	1	1	EE3350251	Electroly, 3.3μF, 25V	H613	1	1	HT306441B	Transistor, 2SK30D
C602	1	1	EE3350251	Electroly, 3.3μF, 25V	H614	1	1	HT306441B	Transistor, 2SC644S
C603	1	1	DF6610101	Film, 100PF ±10%	H615	1	1	HT104941C	Transistor, 2SC644S
C604	1	1	DF6610101	Film, 100PF ±10%	H616	1	1	HT104941C	Transistor, 2SA494Y
C605	1	1	DF1510205	Film, 1000PF ±5%	H617	1	1	HT306441B	Transistor, 2SA494Y
C606	1	1	DF1510205	Film, 1000PF ±5%	H618	1	1	HT306441B	Transistor, 2SC644S
C607	1	1	EA1060169	Electroly, 10μF, 16V	H621	1	1	HD1000105	Transistor, 2SC644S
C608	1	1	EA1060169	Electroly, 10μF, 16V	H622	1	1	HD1000105	Diode, IN60
C609	1	1	EA1060169	Electroly, 10μF, 16V					Diode, IN60
C610	1	1	EA1060169	Electroly, 10μF, 16V	H623	1	1	HD2000121	Diode, IS2473
C611	1	1	EA1060169	Electroly, 10μF, 16V	H624	1	1	HD2000121	Diode, IS2473
C612	1	1	EA1060169	Electroly, 10μF, 16V	H625	1	1	HD3003109	Diode, WZ-081

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION
H626	1	1	HD2000121	IS2473	R714	2	2	RT0520214	2KΩ
H627	1	1	HD2000121	IS2473	R715	2	2	RT0582214	8.2KΩ
H628	1	1	HD2000121	IS2473	R716	2	2	RT0568114	680Ω
H629	1	1	HD2000121	IS2473	R717	2	2	RT0522114	220Ω
					R718	2	2	RT0527014	27Ω
					R719	2	2	GJ0512202	1.2KΩ ±5%, 2W
					R720	2	2	GJ0512202	1.2KΩ ±5%, 2W
					R721	2	2	RT0527114	270Ω
					R722	2	2	RT0527314	27KΩ
					R723	2	2	RT0527314	27KΩ
					R724	2	2	GD0556114	560Ω
					R725	2	2	GD0556114	560Ω
					R726	2	2	RT0510114	100Ω
					R727	2	2	RT0510114	100Ω
					R728	2	2	RT0547314	47KΩ
					R729	2	2	RT0210414	100KΩ ±2%, ¼W
					R730	2	2	RC0000012	0Ω, ½W
					R731	2	2	RC0000012	0Ω, ½W
					R732	2	2	GF0562014	62Ω
					R733	2	2	GF0562014	62Ω
					R734	2	2	HH0000703	SDT-100 1KΩ/25°C
					R735	2	2	HH0000703	SDT-100 1KΩ/25°C
					R736	2	2	GF0547214	4.7KΩ
					R737	2	2	GF0547214	4.7KΩ
					R738	2	2	GD0524214	2.4KΩ
					R739	2	2	RT0504714	4.7Ω
					R740	2	2	RA0102023	Trimming, 1KΩ (B)
J020	1	1	YJ0500019	Socket, Transistor	R741	2	2	GJ0547001	47Ω ±5%, 1W
J021	1	1	YJ0500019	Socket, Transistor	R742	2	2	GJ0547001	47Ω ±5%, 1W
J022	1	1	YJ0500019	Socket, Transistor	R743	2	2	GJ0501501	1.5Ω ±5%, 1W
J023	1	1	YJ0500019	Socket, Transistor	R744	2	2	GJ0501501	1.5Ω ±5%, 1W
J024	1	1	YJ0500019	Socket, Transistor	R745	2	2	RT0504714	4.7Ω
J025	1	1	YJ0500019	Socket, Transistor	R746	2	2	GJ0522003	22Ω ±5%, 3W
J026	1	1	YJ0500019	Socket, Transistor	R747	2	2	GJ0502202	2.2Ω ±5%, 2W
J027	1	1	YJ0500019	Socket, Transistor	R748	2	2	BX1010201	(0.1Ω+0.1Ω)±10%, 5W
					R749	2	2	BX1020201	(0.2Ω+0.2Ω)±10%, 5W
					R750	2	2	BX1020201	(0.2Ω+0.2Ω)±10%, 5W
1903	2	2	291826701	Heat Sink	R753	2	2	RC0000012	0Ω, ½W
1904	16	16	54040302N	Spring Washer	R754	2	2	RC0000012	0Ω, ½W
1905	16	16	51100316B	B. H. M. Screw					
1906	4	4	291816003	Bracket					
1907	8	8	51380306T	P. H. Tap Screw					
1917	4	4	291810401	Retainer					
1918	8	8	51380306T	P. H. Tap Screw					
P700	2	2	YD2918001	POWER AMP. CIRCUIT BOARD-P700	C701	2	2	DF1710552	P700-CAPACITORS & COIL
	2	2	ZZ2918001	P. W. Board, Power Amp.(Print Only)	C702	2	2	DD1510101	Film, 1μF ±20%, 250V
				P. W. Board Assembly	C703	2	2	EV3360066	Ceramic, 100PF ±5%, 50V
					C704	2	2	DK1610251	Electroly, 33μF ±20%, 6.3V
					C705	2	2	DK1610251	Ceramic, 1000PF ±10%, 500V
					C706	2	2	EA1060259	Ceramic, 1000PF ±10%, 500V
					C707	2	2	EA1060259	Electroly, 10μF+50%,-10%, 25V
					C708	2	2	DF1710453	Electroly, 10μF+50%,-10%, 25V
					C709	2	2	DF1710453	Film, 0.1μF ±20%, 250V
					C710	2	2	DK1610150	Film, 0.1μF ±20%, 250V
					C711	2	2	DD1008050	Ceramic, 8PF ±0.25PF, 500V
					C712	2	2	DK1610150	Ceramic, 100PF ±10%, 500V
					C713	2	2	DK1610150	Ceramic, 100PF ±10%, 500V
					C714	2	2	DF1710453	Film, 0.1μF ±20%, 250V
					C715	2	2	DF1747301	Film, 0.047μF±20%, 50V
					C716	2	2	DF1747301	Film, 0.047μF±20%, 50V
					C718	2	2	DK1610251	Ceramic, 1000PF ±10%, 500V
					C719	2	2	DF1733350	Film, 0.033μF±20%, 250V
					C721	2	2	DF1710453	Film, 0.1μF ±20%, 250V
					C722	2	2	DF1710351	Film, 0.01μF ±20%, 200V
					L701	2	2	LC2222001	Choke Coil, 2.2μH ±10%

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION
				P700-SEMICONDUCTORS, JACK & PLUGS					P800-RESISTORS
H701	1	1	HT107221S	Transistor, 2SA722 S, T	R801	1	1	GQ1015105	150Ω ±10%, 5W
H702	1	1	HT107221S	Transistor, 2SA722 S, T	R802	1	1	GF0533214	8.3KΩ ±5%, 1/4W
H703	2	2	HT107223A	Transistor, 2SA722 S,T,U	R803	1	1	GF0510014	10Ω ±5%, 1/4W
H704	2	2	HT107202A	Transistor, 2SA720 R,S	R804	1	1	GF0510012	10Ω ±5%, 1/4W
H705	2	2	HT313182R	Transistor, 2SC1318 R,S	R805	1	1	RT0547214	4.7KΩ ±5%, 1/4W
H706	1	1	HT108181D	Transistor, 2SA818	R806	1	1	RT0547214	4.7KΩ ±5%, 1/4W
H707	1	1	HT316281D	Transistor, 2SC1628	R807	1	1	GF0539214	3.9KΩ ±5%, 1/4W
H708	1	1	HT316691B	Transistor, 2SC1669	R808	1	1	RT0522314	22KΩ ±5%, 1/4W
H709	1	1	HT108391B	Transistor, 2SA839	R809	1	1	RA0502020	Trimming, 5KΩ (B)
H710	2	2	HT309452A	Transistor, 2SC945 Q, R	R810	1	1	RT0556214	5.6KΩ ±5%, 1/4W
H711	2	2	HT107332A	Transistor, 2SA733 P, Q	R811	1	1	GJ0527102	270Ω ±5%, 2W
H712	2	2	HT107332A	Transistor, 2SA733 P, Q	R812	1	1	RT0547214	4.7KΩ ±5%, 1/4W
H713	2	2	HT309452A	Transistor, 2SC945 Q, R	R813	1	1	RT0527314	27KΩ ±5%, 1/4W
H714	2	2	HT304961B	Transistor, 2SC496 O	R814	1	1	RT0539314	39KΩ ±5%, 1/4W
H715	2	2	HT304961B	Transistor, 2SC496 O	R815	1	1	RT0539314	39KΩ ±5%, 1/4W
H716	2	2	HD3004409	Diode, CZ-205	R816	1	1	RT0539414	390KΩ ±5%, 1/4W
H717	2	2	HD3004409	Diode, CZ-205	R817	1	1	GJ0547101	470Ω ±5%, 1W
H718	2	2	HV0000506	Varistor, VD1122	R818	1	1	RC0000012	0Ω, 1/4W
H719	2	2	HV0000506	Varistor, VD1122	R819	1	1	GU0556212	5.6KΩ ±5%, 1/4W
H720	2	2	HD2000321	Diode, IS2471 (Black)	R820	1	1	GU0556212	5.6KΩ ±5%, 1/4W
H721	2	2	HD2000321	Diode IS2471 (Black)					P800-CAPACITORS
J701	2	2	YJ0600029	Jack	C801	1	1	DK1810351	Ceramic, 0.01μF+100%,-0%, 500V
J702	2	2	YP1000099	Plug	C802	1	1	DK1810351	Ceramic, 0.01μF+100%,-0%, 500V
J703	2	2	YP1000099	Plug	C803	1	1	EA4770631	Electroly, 470μF, 63V
J704	2	2	YP1000099	Plug	C804	1	1	EA2270631	Electroly, 220μF, 63V
J705	2	2	YP1000099	Plug	C805	1	1	EA4770169	Electroly, 470μF, 16V
J706	2	2	YP1000099	Plug	C806	1	1	EA2270631	Electroly, 220μF, 63V
J707	2	2	YP1000099	Plug	C807	1	1	EA3370509	Electroly, 330μF, 50V
J708	2	2	YP1000099	Plug	C808	1	1	DF1747305	Film, 0.047μF, 50V
J709	2	2	YP1000099	Plug	C809	1	1	EA1060509	Electroly, 10μF, 50V
J710	2	2	YP0600045	Plug	C810	1	1	DF1710305	Film, 0.01μF, 50V
				GENERAL MISCELLANEOUS	C811	1	1	EA1060639	Electroly, 10μF, 63V
1803	4	4	291826703	Heat Sink	C812	1	1	EA4760169	Electroly, 47μF, 16V
1805	8	8	51100310E	B. H. M. Screw B 3 x 10	C813	1	1	EA2270109	Electroly, 220μF, 10V
1806	8	8	54040302N	Spring Washer					P800-SEMICONDUCTORS
1807	8	8	53110302E	Hexagon Nut					Transistor, 2SD331 C.D.E.F
1812	8	8	53110303E	Hexagon Nut	H801	1	1	HT403314A	Transistor, 2SD331 C.D.E.F
1813	8	8	54050300R	T. L. Washer OR	H802	1	1	HT403314A	Transistor, 2SD331 C.D.E.F.
					H803	1	1	HT307343A	Transistor, 2SC734 R.O.Y
1818	2	2	291826706	Heat Sink	H804	1	1	HT309452A	Transistor, 2SC945 Q.R
1819	4	4	291811801	Spacer	H805	1	1	HT309452A	Transistor, 2SC945 Q.R
1820	4	4	51100310E	B. H. M. Screw B 3 x 10	H806	1	1	HT313183A	Transistor, 2SC1318 P.Q.R
1821	4	4	53110303E	Hexagon Nut	H807	1	1	HT313183A	Transistor, 2SC1318 P.Q.R
					H808	1	1	HD2001103	Rectifier DS-131B
1823	4	4	53110303E	Hexagon Nut	H809	1	1	HD2001103	Rectifier, DS-131B
1824	4	4	54050300R	T. L. Washer OR	H810	1	1	HD3002709	Diode, WZ-140
1828	2	2	291826705	Heat Sink	H811	1	1	HD3002309	Diode, WZ-071
1830	2	2	51102610E	B. H. M. Screw B 2.6 x 10	H812	1	1	HD2000321	Diode, 1S2471 (Black)
1831	2	2	53112603E	Hexagon Nut					P800-MISCELLANEOUS
1832	2	2	54042602N	Spring Washer	L801	1	1	LY2024007	Relay, 24V, 10A
1703	1	1	291826702	Heat Sink	F801	1	1	FS1002006	Fuse, 0.2A
1705	2	2	51100306S	B. H. M. Screw B 3 x 6					J801
1707	2	2	51100310E	B. H. M. Screw B 3 x 10	J811	1	1	YP1000113	Plug
1708	2	2	53110303E	Hexagon Nut	J812	1	1	YJ0800021	Socket
					J813	1	1	YJ0800021	Socket
1709	2	2	54050300R	T. L. Washer OR					PRE-TONE AMP. CIRCUIT BOARD PE01
				POWER SUPPLY CIRCUIT BOARD- P800					P.W. Board, Pre-Tone Amp. (Print Only)
P800	1	1	YD2918004	P. W. Board, Power Supply (Print Only)	PE01	1	1	YD2918002	P.W. Board, Pre-Tone Amp. (Print Only)
	1	1	ZZ2918004	P. W. Board Assembly		1	1	ZZ2918002	P.W. Board Assembly

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION
				<b>PE01-RESISTORS</b> All resistors are $\pm 5\%$ and $\frac{1}{4}W$ , unless otherwise indicated.	RE62	1	1	RT0510414	100K $\Omega$
RE01	1	1	RM0503061	Variable, 50K $\Omega$ (B)	RE63	1	1	RT0547414	470K $\Omega$
RE02	1	1	RD0204001	Variable, 200K $\Omega$ (B)	RE64	1	1	RT0547414	470K $\Omega$
RE03	1	1	RD0204001	Variable, 200K $\Omega$ (B)	RE65	1	1	RT0547314	47K $\Omega$
RE04	1	1	RD0204001	Variable, 200K $\Omega$ (B)	RE66	1	1	RT0547314	47K $\Omega$
RE05	1	1	RT0522314	22K $\Omega$	RE67	1	1	RT0522114	220 $\Omega$
RE06	1	1	RT0522314	22K $\Omega$	RE68	1	1	RT0522114	220 $\Omega$
RE07	1	1	RT0539214	3.9K $\Omega$	RE69	1	1	RT0510314	10K $\Omega$
RE08	1	1	RT0539214	3.9K $\Omega$	RE70	1	1	RT0510314	10K $\Omega$
RE09	1	1	RT0539114	390 $\Omega$	RE71	1	1	RT0522414	220K $\Omega$
RE10	1	1	RT0539114	390 $\Omega$	RE72	1	1	RT0522414	220K $\Omega$
RE11	1	1	RN0515414	150K $\Omega$	RE73	1	1	RT0510114	100 $\Omega$
RE12	1	1	RN0515414	150K $\Omega$	RE74	1	1	RC0000012	0 $\Omega$ , $\frac{1}{2}W$
RE13	1	1	RN0547414	470K $\Omega$					<b>PE01-CAPACITORS</b>
RE14	1	1	RN0547414	470K $\Omega$	CE01	1	1	DK1668101	Ceramic, 680 $\mu F$ $\pm 10\%$ , 50V
RE15	1	1	RT0291114	910 $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$	CE02	1	1	DK1668101	Ceramic, 680 $\mu F$ $\pm 10\%$ , 50V
RE16	1	1	RT0291114	910 $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$	CE03	1	1	DF1610405	Film, 0.1PF $\pm 10\%$ , 50V
RE17	1	1	RT0251214	5.1K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$	CE04	1	1	DF1610405	Film, 0.1PF $\pm 10\%$ , 50V
RE18	1	1	RT0251214	5.1K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$	CE05	1	1	DF1710552	Film, 1 $\mu F$ $\pm 20\%$ , 250V
RE19	1	1	RT0522414	220K $\Omega$	CE06	1	1	DF1710552	Film, 1 $\mu F$ $\pm 20\%$ , 250V
RE20	1	1	RT0522414	220K $\Omega$	CE07	1	1	DD1530001	Ceramic, 30PF $\pm 5\%$ , 50V
RE21	1	1	RC0000012	0 $\Omega$ , $\frac{1}{2}W$	CE08	1	1	DD1530001	Ceramic, 30PF $\pm 5\%$ , 50V
RE22	1	1	RC0000012	0 $\Omega$ , $\frac{1}{2}W$	CE09	1	1	EA1070109	Electroly, 100 $\mu F$ +50%, -10%, 10V
RE23	1	1	RT0527314	27K $\Omega$	CE10	1	1	EA1070109	Electroly, 100 $\mu F$ +50%, -10%, 10V
RE24	1	1	RT0527314	27K $\Omega$	CE11	1	1	EA1060359	Electroly, 10 $\mu F$ +50%, -10%, 35V
RE25	1	1	RT0527314	27K $\Omega$	CE12	1	1	EA1060359	Electroly, 10 $\mu F$ +50%, -10%, 35V
RE26	1	1	RT0527314	27K $\Omega$	CE13	1	1	EV3350356	Electroly, 3.3 $\mu F$ $\pm 20\%$ , 35V
RE27	1	1	RT0527314	27K $\Omega$	CE14	1	1	EV3350356	Electroly, 3.3 $\mu F$ $\pm 20\%$ , 35V
RE28	1	1	RT0527314	27K $\Omega$	CE15	1	1	DF1510305	Film, 0.01 $\mu F$ $\pm 5\%$ , 50V
RE29	1	1	RT0527314	27K $\Omega$	CE16	1	1	DF1510305	Film, 0.01 $\mu F$ $\pm 5\%$ , 50V
RE30	1	1	RT0527314	27K $\Omega$	CE17	1	1	DF1510305	Film, 0.01 $\mu F$ $\pm 5\%$ , 50V
RE31	1	1	RT0520314	20K $\Omega$	CE18	1	1	DF1510305	Film, 0.01 $\mu F$ $\pm 5\%$ , 50V
RE32	1	1	RT0520314	20K $\Omega$	CE19	1	1	DF1510305	Film, 0.01 $\mu F$ $\pm 5\%$ , 50V
RE33	1	1	RT0510314	10K $\Omega$	CE20	1	1	DF1510305	Film, 0.01 $\mu F$ $\pm 5\%$ , 50V
RE34	1	1	RT0510314	10K $\Omega$	CE21	1	1	DF1510305	Film, 0.01 $\mu F$ $\pm 5\%$ , 50V
RE35	1	1	RT0510314	10K $\Omega$	CE22	1	1	DF1510305	Film, 0.01 $\mu F$ $\pm 5\%$ , 50V
RE36	1	1	RT0510314	10K $\Omega$	CE23	1	1	DF1668205	Film, 0.068 $\mu F$ $\pm 5\%$ , 50V
RE37	1	1	RT0510314	10K $\Omega$	CE24	1	1	DF1668205	Film, 0.068 $\mu F$ $\pm 5\%$ , 50V
RE38	1	1	RT0510314	10K $\Omega$	CE25	1	1	DK1668101	Ceramic, 680PF $\pm 10\%$ , 50V
RE39	1	1	RT0510314	10K $\Omega$	CE26	1	1	DK1668101	Ceramic, 680PF $\pm 10\%$ , 50V
RE40	1	1	RT0510314	10K $\Omega$	CE27	1	1	DK1668101	Ceramic, 680PF $\pm 10\%$ , 50V
RE41	1	1	RT0568414	680K $\Omega$	CE28	1	1	DK1668101	Ceramic, 680PF $\pm 10\%$ , 50V
RE42	1	1	RT0568414	680K $\Omega$	CE29	1	1	DE1633205	Film, 0.0033 $\mu F$ $\pm 10\%$ , 50V
RE43	1	1	RC0000012	0 $\Omega$ , $\frac{1}{2}W$	CE30	1	1	DF1633205	Film, 0.0033 $\mu F$ $\pm 10\%$ , 50V
RE44	1	1	RC0000012	0 $\Omega$ , $\frac{1}{2}W$	CE31	1	1	DD1650001	Ceramic, 50PF $\pm 10\%$ , 50V
RE45	1	1	RT0522514	2.2M $\Omega$	CE32	1	1	DD1650001	Ceramic, 50PF $\pm 10\%$ , 50V
RE46	1	1	RT0522514	2.2M $\Omega$	CE33	1	1	EV1050256	Electroly, 1 $\mu F$ $\pm 20\%$ , 25V
RE47	1	1	RT0522514	2.2M $\Omega$	CE34	1	1	EV1050256	Electroly, 1 $\mu F$ $\pm 20\%$ , 25V
RE48	1	1	RT0522514	2.2M $\Omega$	CE35	1	1	EV3350356	Electroly, 3.3 $\mu F$ $\pm 20\%$ , 25V
RE49	1	1	RT0522514	2.2M $\Omega$	CE36	1	1	EV3350356	Electroly, 3.3 $\mu F$ $\pm 20\%$ , 25V
RE50	1	1	RT0522514	2.2M $\Omega$	CE37	1	1	EQ4750161	Electroly, 4.7 $\mu F$ $\pm 30\%$ , 16V
RE51	1	1	RT0210314	10K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$	CE38	1	1	EQ4750161	Electroly, 4.7 $\mu F$ $\pm 30\%$ , 16V
RE52	1	1	RT0210314	10K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$	CE39	1	1	EA2270359	Electroly, 220 $\mu F$ +50%, -10%, 35V
RE53	1	1	RT0210314	10K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$					<b>PE01-MISCELLANEOUS</b>
RE54	1	1	RT0210314	10K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$	HE01	1	1	HC1000121	IC, BA312
RE55	1	1	RT0210314	10K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$	HE02	1	1	HC1000121	IC, BA312
RE56	1	1	RT0210314	10K $\Omega$ $\pm 2\%$ , $\frac{1}{4}W$	HE03	1	1	HT313272A	Transistor, 2SC1327 S. T
RE57	1	1	RC0000012	0 $\Omega$ , $\frac{1}{2}W$	HE04	1	1	HT107212A	Transistor 2SA721 S. T
RE58	1	1	RC0000012	0 $\Omega$ , $\frac{1}{2}W$	HE05	1	1	HT313272A	Transistor 2SC1327 S. T
RE59	1	1	RC0000012	0 $\Omega$ , $\frac{1}{2}W$	HE06	1	1	HT107212A	Transistor 2SA721 S. T
RE60	1	1	RC0000012	0 $\Omega$ , $\frac{1}{2}W$					
RE61	1	1	RT0527214	2.7K $\Omega$					

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION
JE01	1	1	YP0600026	Plug, 14P
SE01	1	1	SR1005007	Rotaly Switch, Tone Mode
PH01	1	1	YD2918003 ZZ2918003	BUFFER AMP. CIRCUIT BOARD- PH01 P. W. Board, Buffer Amp. (Print Only) P. W. Board Assembly
RH01	1	1	RT0562214	PH01-RESISTORS All resistors are $\pm 5\%$ and $\frac{1}{4}W$ . 6.2K $\Omega$
RH02	1	1	RT0568214	6.8K $\Omega$
RH03	1	1	RT0512414	120K $\Omega$
RH04	1	1	RT0512414	120K $\Omega$
RH05	1	1	RT0512414	120K $\Omega$
RH06	1	1	RT0512414	120K $\Omega$
RH07	1	1	RN0518514	1.8M $\Omega$
RH08	1	1	RN0518514	1.8M $\Omega$
RH09	1	1	RN0518514	1.8M $\Omega$
RH10	1	1	RN0518514	1.8M $\Omega$
RH11	1	1	RN0515314	15K $\Omega$
RH12	1	1	RN0515314	15K $\Omega$
RH13	1	1	RN0515314	15K $\Omega$
RH14	1	1	RN0515314	15K $\Omega$
RH15	1	1	RT0575014	75 $\Omega$
RH16	1	1	RT0575014	75 $\Omega$
RH17	1	1	RT0547214	4.7K $\Omega$
RH18	1	1	RT0547214	4.7K $\Omega$
RH19	1	1	RT0536314	36K $\Omega$
RH20	1	1	RT0522414	220K $\Omega$
RH21	1	1	RT0522414	220K $\Omega$
RH22	1	1	RT0522414	220K $\Omega$
RH23	1	1	RT0522414	220K $\Omega$
RH24	1	1	RT0575014	75 $\Omega$
RH25	1	1	RT0575014	75 $\Omega$
RH26	1	1	RT0575014	75 $\Omega$
RH27	1	1	RT0575014	75 $\Omega$
RH28	1	1	RT0510114	100 $\Omega$
CH01	1	1	DF1722405	PF01-CAPACITORS Film, $0.22\mu F \pm 20\%$ , 50V
CH02	1	1	DF1722405	Film, $0.22\mu F \pm 20\%$ , 50V
CH03	1	1	DF1722405	Film, $0.22\mu F \pm 20\%$ , 50V
CH04	1	1	DF1722405	Film, $0.22\mu F \pm 20\%$ , 50V
CH05	1	1	EV4750356	Electroly, $4.7\mu F \pm 20\%$ , 35V
CH06	1	1	EV4750356	Electroly, $4.7\mu F \pm 20\%$ , 35V
CH07	1	1	EV4750356	Electroly, $4.7\mu F \pm 20\%$ , 35V
CH08	1	1	EV4750356	Electroly, $4.7\mu F \pm 20\%$ , 35V
CH09	1	1	DK1750201	Ceramic, $5000PF \pm 20\%$ , 50V
CH10	1	1	DK1750201	Ceramic, $5000PF \pm 20\%$ , 50V
CH11	1	1	DK1750201	Ceramic, $5000PF \pm 20\%$ , 50V
CH12	1	1	DK1750201	Ceramic, $5000PF \pm 20\%$ , 50V
CH13	1	1	EA2270359	Electroly, $220\mu F$ , 35V
HH01	1	1	HT313452A	PE01-SEMICONDUCTORS & PLUGS Transistor, 2SC1345 D, E
HH02	1	1	HT313452A	Transistor, 2SC1345 D, E
HH03	1	1	HT313452A	Transistor, 2SC1345 D, E
HH04	1	1	HT313452A	Transistor, 2SC1345 D, E
HH05	1	1	HT107202A	Transistor, 2SC720 R, S
HH06	1	1	HT107202A	Transistor, 2SC720 R, S
HH07	1	1	HT107202A	Transistor, 2SC720 R, S
HH08	1	1	HT107202A	Transistor, 2SC720 R, S

REF. DESIG.	U	E	PART NO.	DESCRIPTION
HH09	1	1	HT313182Q	Transistor, 2SC1318 Q, R
HH10	1	1	HT313182Q	Transistor, 2SC1318 Q, R
HH11	1	1	HV0000606	Varistor, VD1222
JH01	1	1	YP1000113	Plug
PL01	1	1	YD2886009 ZZ2918109	DOLBY,TONE.& METER CIRCUIT BOARD – PL01 P. W. Board, Dolby, Tone & Meter (Print Only) P. W. Board Assembly
RL01	1	1	RT0533214	PL01-RESISTORS All resistors are $\pm 5\%$ and $\frac{1}{4}W$ , unless otherwise indicated. 3.3K $\Omega$
RL02	1	1	RT0547314	47K $\Omega$
RL03	1	1	RT0510114	100 $\Omega$
RL04	1	1	RT0533214	3.3K $\Omega$
RL05	1	1	RT0510214	1K $\Omega$
RL06	1	1	RT0512314	12K $\Omega$
RL07	1	1	RT0547314	47K $\Omega$
RL08	1	1	RC1010212	1K $\Omega \pm 10\%$ , $\frac{1}{2}W$
RL09	1	1	RT0547214	4.7K $\Omega$
RL10	1	1	RT0510214	1K $\Omega$
RL11	1	1	RA0501012	Trimming, 500 $\Omega$ (B)
RL12	1	1	RA0502019	Trimming, 5K $\Omega$ (B)
RL13	1	1	RT0556314	56K $\Omega$
RL14	1	1	RT0556314	56K $\Omega$
RL15	1	1	RT0547214	4.7K $\Omega$
RL16	1	1	RT0533314	33K $\Omega$
RL20	1	1	RT0568414	680K $\Omega$
RL21	1	1	RT0568414	680K $\Omega$
RL22	1	1	RT0533414	330K $\Omega$
RL23	1	1	RT0533414	330K $\Omega$
RL24	1	1	RT0533214	3.3K $\Omega$
RL25	1	1	RT0533214	3.3K $\Omega$
RL26	1	1	RT0515214	1.5K $\Omega$
RL27	1	1	RT0515214	1.5K $\Omega$
RL28	1	1	RA0152004	Trimming, 1.5K $\Omega$ (B)
RL29	1	1	RA0152004	Trimming, 1.5K $\Omega$ (B)
CL01	1	1	DF1515305	PL01-CAPACITORS Film, $0.015\mu F \pm 5\%$
CL02	1	1	DF1515305	Film, $0.015\mu F \pm 5\%$
CL03	1	1	DF1668301	Film, $0.068\mu F \pm 10\%$
CL04	1	1	DF1610401	Film, $0.1\mu F \pm 10\%$
CL05	1	1	EA1060169	Electroly, $10\mu F$ , 16V
CL06	1	1	EA1060169	Electroly, $10\mu F$ , 16V
CL07	1	1	EA1060169	Electroly, $10\mu F$ , 16V
CL10	1	1	EA1060169	Electroly, $10\mu F$ , 16V
CL11	1	1	EA1060169	Electroly, $10\mu F$ , 16V
CL12	1	1	EA1060169	Electroly, $10\mu F$ , 16V
CL13	1	1	EA1060169	Electroly, $10\mu F$ , 16V
CL14	1	1	EA3360359	Electroly, $33\mu F$ , 35V
HL01	1	1	HT307331C	PL01-SEMICONDUCTORS & PLUGS Transistor, 2SC733 GR
HL02	1	1	HT307331C	Transistor, 2SC733 GR
HL03	1	1	HT307331C	Transistor, 2SC733 GR
HL06	1	1	HT307331C	Transistor, 2SC733 GR
HL07	1	1	HT307331C	Transistor, 2SC733 GR
HL08	1	1	HD1000105	Diode, IN60

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION
HL09	1	1	HD1000105	Diode, IN60	JY01	1	1	YP1000113	Plug
HL10	1	1	HD1000105	Diode, IN60	JY12	1	1		
HL11	1	1	HD1000105	Diode, IN60					
PL01	1	1	YP1000113	Plug	PZ01	1	1	YD2892001 ZZ2918201	DIAL LAMP BOARD-PZ01 P. W. Board, Dial Lamp (Print Only) P. W. Board Assembly
PL09	1	1			MZ01	1	1	IN1008007	PZ01-MISCELLANEOUS
					MZ06	1	1		Lamp
					JZ01	1	1	YJ0800017	
					JZ10	1	1		Socket
0803	1	1	291816050	GENERAL MISCELLANEOUS	JZ11	1	1	YP1000113	Plug
0811	2	2	51100306A	Bracket K	JZ15	1	1		
0813	2	2	51100306A	B. H. M. Screw	JZ17	1	1	YP1000113	Plug
0814	2	2	51100306A	B. H. M. Screw	JZ19	1	1		
0815	2	2	51100306A	B. H. M. Screw	M004	1	1	IN1008007	GENERAL MISCELLANEOUS
0819	2	2	51100306A	B. H. M. Screw	M005	1	1	IN1008007	Lamp, Meter Lamp
0824	2	2	51100306A	B. H. M. Screw					Lamp, Meter Lamp
0828	3	3	51570305B	B. H. M. Screw	J028	1	1	YJ0800019	Socket
0832	2	2	51570305B	P. H. Tapt Screw	J029	1	1	YJ0800019	Socket
0908	2	2	291612001	P. H. Tapt Screw					Meter Lamp
				Insulator	1103	1	1	288627401	Reflector
0911	1	1	289212201	Sticker	1106	1	1	288627102	Holder
0916	1	1	291812002	Insulator	1107	2	2	51570306B	P. H. Tapt Screw P3 x 6 ST
1034	2	2	51042608A	F. H. M. Screw	1109	2	2	51480306A	B. H. M. Screw F.
1111	2	2	51570306B	P. H. Tapt Screw	S004	1	1	SP0201009	Pushswitch, Meter L/R
1112	2	2	54050300R	T. L. Washer OR					
1115	2	2	288610701	Sheet	J007	1	1	YJ0100098	Jack, Dubbing Out
1203	1	1	290416007	Bracket	J008	1	1	YJ0100081	Jack, Dubbing In
1204	1	1	290416008	Bracket					
1205	6	6	51100406A	B. H. M. Screw	0827	1	1	291816005	Bracket
1211	1	1	289226251	Pulley K					
					R005	1	1	RK0504010	Variable Resist., 500KΩ (B)
1216	2	2	51100306A	B. H. M. Screw	R006	1	1	RK0504010	Variable Resist., 500KΩ (B)
1311	1	1	257710602	Bearing	R007	1	1	RK0504010	Variable Resist., 500KΩ (B)
1312	1	1	141511801	Spacer	R008	1	1	RK0504010	Variable Resist., 500KΩ (B)
1313	2	2	51040306A	F. H. M. Screw	0818	1	1	289216003	Bracket
1320	2	2	51470306A	B. H. M. Screw S					
1410	2	2	287105302	Cover	PS01	1	1	YD2918005	DOLBY TONE, TAPE MON. BOARD-PS01
									P. W. Board, Dolby Tone/Tape Mon. (Print Only)
M001	1	1	IM1104213	DC Meter, Multipath, FM Tuning					P. W. Board Assembly
M002	1	1	IM1104209	DC Meter, Dolby Level, Signal					
C010	1	1	EA3360109	Electroly Cap., 33μF, 10V	PT01	1	1	YD2918006 ZZ2918006	SWITCH BOARD-PT01
C011	1	1	EA3360109	Electroly Cap., 33μF, 10V					P. W. Board, Switch (Print Only)
J019	1	1	YJ0600061	Jack, 14P					P. W. Board, Assembly
1003	1	1	289227401	Reflector	ST01	1	1	SP0603011	PT01-MISCELLANEOUS
1005	1	1	289227101	Holder					Pushswitch
1006	2	2	51570306B	P. H. Tapt Screw P3 x 6 ST	JT01	1	1	YP1000113	Plug
1007	2	2	59030805P	Washer	JT25	1	1		
1009	1	1	289227102	Holder					
1010	2	2	51570306B	P. H. Tapt Screw P3 x 6 ST					
1012	2	2	51480306A	B. H. M. Screw F					
1013	2	2	51100304A	B. H. M. Screw					
				B3 x 4					
PY01	1	1	YD2918008	FUNCTION LAMP BOARD-PY01					
	1	1	ZZ2918008	P. W. Board, Function Lamp (Print Only)					
				P. W. Board Assembly					
MY01	1	1	IN1008037	PY01-MISCELLANEOUS					
MY08	1	1		Lamp, 8V, 40mA					

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION
R001	1	1	RS0503020	Variable Resist., 50KΩ (MN)
PU01	1	1	YD2918007	MULTIPATH, HI BLEND CIRCUIT BOARD-PU01
	1	1	ZZ2918007	P. W. Board, Multipath/Hi Blend (Print Only)
	1	1		P. W. Board Assembly
SU01	1	1	SP0408001	PU01-SWITCH Pushswitch
				PU01-RESISTORS All resistors are ±5% and 1/4W, unless otherwise indicated.
RU01	1	1	GD0520314	20KΩ
RU02	1	1	GD0522214	2.2KΩ
RU03	1	1	GD0522214	2.2KΩ
RU04	1	1	GD0510314	10KΩ
RU05	1	1	RT056214	5.6KΩ
RU06	1	1	RT0510214	1KΩ
RU07	1	1	GD0510414	100KΩ
RU08	1	1	RT0547414	470KΩ
RU09	1	1	RT0547414	470KΩ
RU10	1	1	RT0512314	12KΩ
RU11	1	1	RT0512314	12KΩ
RU12	1	1	RT0512314	12KΩ
RU13	1	1	RT0512314	12KΩ
RU14	1	1	RT0522514	2.2MΩ
RU15	1	1	RT0522514	2.2MΩ
RU16	1	1	RT0518514	1.8MΩ
RU17	1	1	RT0518514	1.8MΩ
RU18	1	1	RN0518514	1.8MΩ
RU19	1	1	RN0518514	1.8MΩ
RU20	1	1	GD0543314	43KΩ
RU21	1	1	GD0510414	100KΩ
RU22	1	1	GD0522314	22KΩ
RU23	1	1	GD0522314	22KΩ
RU24	1	1	GD0547214	4.7KΩ
RU25	1	1	GD0547214	4.7KΩ
RU26	1	1	GD0522414	220KΩ
RU27	1	1	GD0522414	220KΩ
RU28	1	1	GD0522114	220Ω
RU29	1	1	GD0522114	220Ω
RU30	1	1	RT0516214	1.6KΩ
RU31	1	1	RT0513214	1.3KΩ
RU32	1	1	GQ1033103	330Ω ± 10%, 3W
RU33	1	1	GQ1033103	330Ω ± 10%, 3W
RU34	1	1	GJ0515101	150Ω ± 5%, 1W
RU35	1	1	GJ0515101	150Ω ± 5%, 1W
				PU01-CAPACITORS
CU01	1	1	EA4750359	Electroly, 4.7μF, 35V
CU02	1	1	EA4750359	Electroly, 4.7μF, 35V
CU03	1	1	EA1060169	Electroly, 10μF, 16V
CU04	1	1	EA4750359	Electroly, 4.7μF, 35V
CU05	1	1	DF1622305	Film, 2200PF±5%, 50V
CU06	1	1	DF1547205	Film, 4700PF±5%, 50V
CU07	1	1	DF1547205	Film, 4700PF±5%, 50V
CU08	1	1	DF1547205	Film, 4700PF±5%, 50V
CU09	1	1	DF1547205	Film, 4700PF±5%, 50V
CU10	1	1	DF1522205	Film, 2200PF±5%, 50V
CU11	1	1	DF1522205	Film, 2200PF±5%, 50V
CU12	1	1	DF1510205	Film, 1000PF±5%, 50V

REF. DESIG.	U	E	PART NO.	DESCRIPTION
CU13	1	1	DF1510205	Film, 1000PF ± 5%, 50V
CU14	1	1	DF1722405	Film, 0.22μF ± 20%, 50V
CU15	1	1	DF1722405	Film, 0.22μF ± 20%, 50V
CU16	1	1	EV4750356	Electroly, 4.7μF,
CU17	1	1	EV4750356	Electroly, 4.7μF, 35V
CU18	1	1	DK1750201	Ceramic, 5000PF,
CU19	1	1	DK1750201	Ceramic, 5000PF,
CU20	1	1	EA4760359	Electroly, 4.7μF, 35V
CU21	1	1	EA1060169	Electroly, 10μF, 16V
				PU01-SEMICONDUCTORS & PLUGS
HU01	1	1	HT308282A	Transistor, 2SC828R,S
HU02	1	1	HT308282A	Transistor, 2SC828R,S
HU03	1	1	HD1000105	Diode, IN60
HU04	1	1	HD1000105	Diode, IN60
HU05	1	1	HT313272A	Transistor, 2SC1327S,T
HU06	1	1	HT313272A	Transistor, 2SC1327S,T
HU07	1	1	HT107223A	Transistor, 2SA722S,T,U
HU08	1	1	HT107223A	Transistor, 2SA722S,T,U
JU01	?	1	YP1000113	Plug
JU21				
S005	1	1	SP0101017	GENERAL MISCELLANEOUS
				Pushswitch, Power Supply
0822	1	1	290416006	Bracket
0823	2	2	51100306A	B. H. M. Screw B3 x 6
J009	1	1	YJ0100098	Jack, Phone
0831	1	1	291816006	Bracket
2306	1	1	62030039W	Lug
1016	1	1	289205101	Guide
1018	1	1	289226252	Pulley K
1025	1	1	289226253	Pulley K
1032	4	4	51570305B	P. H. Tapt Screw P3 x 6ST
1316	1	1	285310650	Bearing K
1326	1	1	51640412D	Set Screw C.P.
1327	1	1	54040402N	Spring Washer
1328	1	1	53110403E	Hexagon Nut
0503	1		291816001	Bracket
0505	1		291816022	Bracket
0511	1		145525903	Bush
0513	4	4	51100308S	B. H. M. Screw B3 x 8
0514	4	4	53110303A	Hexagon Nut
0515	4	4	54050300R	T. L. Washer OR
0526	1		282125901	Bush
0527	2		53110303A	Hexagon Nut
0528	2		54050300R	T. L. Washer OR
0529	2		51060316A	P. H. M. Screw P3 x 16
0530	2		55060305S	T. R. Rivet
0532	1		284906702	Cap
0603	4	4	51100306S	B. H. M. Screw B3 x 6
0604	4	4	53110303A	Hexagon Nut
0606	2	2	51100306S	B. H. M. Screw B3 x 6
0609	8	8	51100306S	B. H. M. Screw B3 x 6
0610	8	8	53110303A	Hexagon Nut
0613	3	3	53228059E	Nut
0619	1	1	54050400R	T. L. Washer OR
0720	3	3	51100306S	B. H. M. Screw B3 x 6
0722	1	1	145525903	Bush

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION
J002	1	1	YT0101003	Terminal, Ground	C002	1	1	DK1710301	<b>GENERAL MISCELLANEOUS</b>
J003	1	1	YT0204008	Terminal, Phono/Aux, 4P	C003	1	1	DK1710301	Ceramic Cap., 0.01μF ± 20%, 50V
J004	1	1	YT0208006	Terminal, Tape In, Out, 8P	C004	1	1	DK1710301	Ceramic Cap., 0.01μF ± 20%, 50V
J006	1	1	YT0201009	Terminal, Quadradial, 1P	0620	1	1	62041760W	Lug,
J010	1	1	YT0304008	Terminal, Main Spk	R009	1		RC1022512	Resistor, 2.2MΩ ± 10%, ½W
J011	1	1	YT0304008	Terminal, Remote Spk	2322	1	1	62030039W	Lug
J012	1		YJ0400048	Plug, AC Outlet	C015	1	1	DK1710301	Ceramic Cap., 0.01μF ± 20%, 50V
J013	1		YJ0400048	Plug, AC Outlet	J005	1	1	YT0204009	Terminal, Pre Out/Main In
J014	1		YJ0800012	Socket, Fuse Holder	2325	1	1	62030039W	Lug
W002	1		YC0240010	AC Cord	1403	1	1	291830201	Dial Sheet
F001	1		FS1080004	Fuse, 8A UL	1408	1	1	289210701	
G001	1	1	BF1040003	Printed Compo.	S001	1	1	SR1006015	Rotaly Switch, Selector
R014	1	1	RA0203007	Variable Resist., 20KΩ (B)	S002	1	1	SR2505002	Rotaly Switch, Dolby
L001	1	1	LF1120038	Ant. Coil, AM	R012	1	1	RT0539214	Resistor, 3.9KΩ ± 5%, ¼W
0705	1	1	257816052	Bracket K	C013	1		DF1522205	Film Cap., 2200PF ± 5%, 50V
0710	1	1	281927103	Holder	C013	1		DF1510205	Film Cap., 1000PF ± 5%, 50V
0712	2	2	51100308S	B. H. M. Screw	S003	1	1	SR0405007	Rotaly Switch, Mode
0713	2	2	53110303E	Hexagon Nut	R002	1	1	RT0510214	Resistor, 1KΩ ± 5%, ¼W
0716	2	2	51100310S	B. H. M. Screw	R003	1	1	RT0510214	Resistor, 1KΩ ± 5%, ¼W
0717	2	2	53110303E	Hexagon Nut	R004	1	1	RT0515114	Resistor, 150Ω ± 5%, ¼W
<b>ANTENNA TERMINAL BOARD-PV01</b>									
PV01	1	1	YD2918009	P. W. Board, Antenna Terminal (Print Only)	C014	1		DF1522205	Film Cap., 2200PF ± 5%, 50V
	1	1	ZZ2918009	P. W. Board Assembly	C014	1		DF1510205	Film Cap., 1000PF ± 5%, 50V
<b>PV01-MISCELLANEOUS</b>									
LV01	1	1	LB3007526	Balun Coil 300Ω~75Ω	1718	1	1	291726703	Heat Sink
LV02	1	1	LC1154002	Choke Coil	1722	4	4	51100310B	B. H. M. Screw B3 × 10
JV01	1	1	YP1000113	Plug	1723	4	4	54040302N	Spring Washer
JV02	1	1	YP1000113	Plug	1724	4	4	53110301E	Hexagon Nut
JV03	1	1	YP1000113	Plug	H009	1	1	HD20Q1608	Rectifier, SG-5TS
J001	1	1	YT0304007	Terminal, AM/FM Ant.	H010	1	1	HD20Q1708	Rectifier, SG-5TR
0607	1	1	291616005	Bracket	C006	1	1	DF1710453	Film Cap., 0.1μF ± 20%, 250V
					C007	1	1	DF1710453	Film Cap., 0.1μF ± 20%, 250V
<b>FM CAL.&amp; DE-EMPHASIS CIRCUIT BOARD-PC01</b>									
PC01	1	1	YD2892011	P. W. Board, FM Cal.& FM De-Emphasis (Print Only)	L003	1	1	LC1332002	Choke Coil, 3.3μH
	1	1	ZZ2918111	P. W. Board Assembly	C005	1	1	DK1710301	Ceramic Cap., 0.01μF ± 20%, 50V
<b>PC01-RESISTORS &amp; PLUGS</b>									
RC01	1	1	RT0515414	Resistor, 150KΩ ± 5%, ¼W	J016	1	1	YL0105011	Plug, 5P (UL)
RC02	1	1	RT0515414	Resistor, 150KΩ ± 5%, ¼W	R010	1	1	GJ0522203	Resistor, 2.2KΩ ± 5%, 3W
RC03	1	1	RT0582214	Resistor, 8.2KΩ ± 5%, ¼W	R011	1	1	GJ0522203	Resistor, 2.2KΩ ± 5%, 3W
RC04	1	1	RT0582214	Resistor, 8.2KΩ ± 5%, ¼W	J015	1	1	YL0105011	Plug, 5P (UL)
RC05	1	1	RK0203030	Variable Resist., 20KΩ(Β)	2008	1	1	291810905	Shield
RC06	1	1	RK0203030	Variable Resist., 20KΩ(Β)	2010	1	1	291812001	Insulator
JC01	1	1	YP1000113	Plug	2123	1	1	289216012	Bracket
JC02	1	1	YP1000113	Plug	2125	1	1	62030039W	Lug
JC03	1	1	YP1000113	Plug	R013	1	1	RA0503014	Variable Resist., 50KΩ (B)
JC04	1	1	YP1000113	Plug	W012	1		YB0007001	Connective Cord
JC05	1	1	YP1000113	Plug	W013	1		YB0007001	Connective Cord
JC06	1	1	YP1000113	Plug	J031	1		YL0106004	Terminal, Voltage Conversion

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION	REF. DESIG.	U	E	PART NO.	DESCRIPTION
2210	1		289216006	Bracket	1927	4	4	51570306B	P. H. Tapt Screw
2211	1		285412001	Insulator	2003	4	4	288810102	Support
2212	2		51100310E	B. H. M. Screw B3 x 10	2009	2	2	51570306B	P. H. Tapt Screw
2213	5		54060300R	T. L. Washer IR	2013	4	4	288810102	Support
<b>FUSE BOARD-PR01</b>									
PR01	1		YD2892010	P. W. Board, Fuse (Print Only)	2029	2	2	51570306B	P. H. Tapt Screw
	1		ZZ2892810	P. W. Board Assembly	2103	4	4	285610102	Support
<b>PR01-MISCELLANEOUS</b>									
FR01	1		FS1060002	Fuse, 6A	2104	1	1	281810107	Support
FR02	1		FS1015003	Fuse, 1.5A	2107	1	1	285610902	Shield
FR03	1		FS1015003	Fuse, 1.5A	2108	5	5	51100304E	B. H. M. Screw
FR03	1		FS1020005	Fuse, 2A	2113	4	4	51100306S	B. H. M. Screw
JR01	1		YJ0800020	Jack	2117	2	2	288605501	Collar
JR02	1		YJ0800020	Jack	2118	2	2	51100310S	B. H. M. Screw
JR03	1		YJ0800020	Jack	2124	2	2	51570305B	P. H. Tapt Screw
JR04	1		YJ0800020	Jack	2131	2	2	288616011	Bracket
JR05	1		YJ0800020	Jack	2132	2	2	288612009	Insulator
JR06	1		YJ0800020	Jack	2133	4	4	51570306B	P. H. Tapt Screw
JR07	1		YJ0800020	Jack	2203	2	2	51100306S	B. H. M. Screw
JR08	1		YJ0800020	Jack	2214	2		53110503A	Hexagon Nut
JR09	1		YP1000099	Plug	2215	2		54040502N	Spring Washer
JR10	1		YP1000099	Plug	2216	1		289212006	Insulator
JR11	1		YP1000099	Plug	2217	2		51100312S	B. H. M. Screw
JR12	1		YP1000099	Plug	2221	1		285416003	Bracket
JR13	1		YP1000099	Plug	2222	2		51570306B	P. H. Tapt Screw
JR14	1		YP1000099	Plug	2223	2		51100306S	B. H. M. Screw
JR15	1		YP1000099	Plug	2229	2		291811802	Spacer
JR16	1		YP1000099	Plug	2235	1	1	53110503A	Hexagon Nut
<b>GENERAL MISCELLANEOUS</b>									
2525	1	1	138200503	Clamper	2327	1	1	138200503	Clamper
2234	1	1	138200503	Clamper	2328	1	1	51570306B	P. H. Tapt Screw
2232	1	1	138200503	Clamper	2329	1	1	54050300R	T. L. Washer OR
0903	1	1	291810907	Shield	2303	2	2	281805603	Buffer
0904	1	1	288912005	Insulator	2307	1	1	51570306B	P. H. Tapt Screw
0906	2	2	291812004	Insulator	2309	1	1	138200503	Clamper
0221	4	4	275905701	Leg	2310	1	1	51570306B	P. H. Tapt Screw
0222	4	4	51490410S	B. H. M. Screw F. S.	2311	1	1	54050300R	P. H. Tapt Screw
0733	8	8	51100306S	B. H. M. Screw B3 x 6	2313	2	2	51570306B	P. H. Tapt Screw
0905	4	4	51100304A	B. H. M. Screw B3 x 4	2314	2	2	54050300R	T. L. Washer OR
0913	1	1	261105501	Collor	2316	1	1	51570306B	P. H. Tapt Screw
1207	14	14	51570306B	P. H. Tapt Screw P3 x 6	2317	1	1	54050300R	T. L. Washer OR
1503	1	1	291810550	Chassis K	2319	1	1	51570306B	P. H. Tapt Screw
1512	2	2	289225901	Bush	2320	1	1	54050300R	T. L. Washer OR
1603	4	4	51490614A	B. H. M. Screw F. S.	2323	1	1	51570306B	P. H. Tapt Screw
1604	4	4	53110601A	Hexagon Nut	2326	1	1	51570306B	P. H. Tapt Screw
1605	4	4	54020801A	Flat Washer P	2331	1	1	288600505	Clamper
1616	4	4	51570408B	P. H. Tapt Screw P4 x 8 ST	2332	2	2	288600506	Clamper
1618	1	1	291816004	Bracket	2334	2	2	288600505	Clamper
1620	2	2	51100508E	B. H. M. Screw B5 x 8	2518	4	4	51570306B	P. H. Tapt Screw
1621	2	2	54020501E	Flat Washer P	L004	1		TS6330207	Transformer
1622	2	2	54040502N	Spring Washer	L004	1		TS6330208	Transformer
1624	2	2	51570408B	P. H. Tapt Screw P4 x 8 ST	C008	1	1	EC1590701	Electroly Cap., 15μF + 50%, -10%, 70V
1625	2	2	54050400R	T. L. Washer OR	C009	1	1	EC1590701	Electroly Cap., 15μF + 50%, -10%, 70V
1631	2	2	51100508E	B. H. M. Screw B5 x 8	J017	1	1	YJ0600062	Jack
1632	2	2	54040502N	Spring Washer	J018	1	1	YJ0600063	Jack
1711	4	4	51100306S	B. H. M. Screw B3 x 6	0113	3	3	289610701	Sheet
1720	2	2	51570308B	P. H. Tapt Screw P3 x 8 ST	0116	4	4	52017039J	Bolt
1920	8	8	51570306B	P. H. Tapt Screw P3 x 6 ST	0118	1	1	291605501	Collar
1926	1	1	291810901	Shield	0119	1	1	289205502	Collar
					0120	1	1	51340308P	F. H. Tap Screw
					0207	4	4	51480406S	B. H. M. Screw F
					0208	4	4	51122605S	T. H. M. Screw T2.6 x 5
					0217	12	12	51100406S	B. H. M. Screw B4 x 6
					0303	1	1	290415404	Knob, Power Switch

U .... U.S.A.  
E .... Europe

REF. DESIG.	U	E	PART NO.	DESCRIPTION
0304	1	1	285015401	Knob, Slide Volume
0305	4	4	288615401	Knob, Dolby Level
0306	12	12	288615403	Knob, Pushswitch
0308	5	5	281815403	Knob, 24φ
0403	1		291826501	Indicator
0405		1	291826503	Indicator
0412	2	2	51100305S	B. H. M. Screw B3 x 5
0416	1	1	257886101	Label, UL Caution
0417	1	1	257886102	Label, Do not remove cover.
0418	1	1	257886103	Label, See marking on bottom.
0419	1	1	250626506	Indicator, Do not use as handle.
0423	1		951110102	Label, UL
0424	1		951091102	Label, UL Factory Cord No.
0434	1	1	288686102	Label, Dolby
0435	1	1	288686101	Label, Marantz
1323	1	1	285011202	Shaft
1324	1	1	54040402N	Spring Washer
1414	1	1	287311802	Spacer
1417	1	1	289226902	Protector
1418	2	2	51570306B	P. H. Tapt Screw P3 x 6 ST
1421	1	1	291826901	Protector
1422	2	2	51570306B	P. H. Tapt Screw P3 x 6 ST
1425	1	1	281912005	Insulator
1431	1	1	289226901	Protector
1432	2	2	51100304S	B. H. M. Screw B3 x 4
2005	1	1	288910904	Shield
2006	4	4	51100304S	B. H. M. Screw B3 x 4
2015	1	1	291810906	Shield
2016	4	4	51100306S	B. H. M. Screw B3 x 6
2031	1	1	288610902	Shield
2032	2	2	51100304S	B. H. M. Screw B3 x 4
2033	2	2	51570306B	P. H. Tapt Screw P3 x 6 ST
2521	1	1	289010903	Shield
2522	4	4	289205601	Buffer
2523	2	2	51100304S	B. H. M. Screw B3 x 4
2614	1	1	56382540G	Eyelet
2903	1	1	257785401	Guarantee Card
2906	1	1	257785102	Instructions
2908	1		257781301	Envelope
2909	1		281881301	Envelope
2926	1	1	ZA0200007	Ext. Antenna, FM
3003	1	1	291880101	Packing Case, Inner
3004	1	1	291880111	Packing Case, Outer
3012	1	1	289280301	Partitioner, Upper
3013	1	1	289280302	Partitioner, Lower
3018	1	1	901534543	Polyethylen Bag, Set
3020	1	1	901302501	Polyethylen Bag, Printed Matter
3021	1	1	901302501	Polyethylen Bag, Accessories
3023	1	1	102980401	Sleeve
3024	1	1	281905601	Buffer
3025	2	2	273182101	Silicagel
3026	1		956000004	Hang Tag
3029	4		952281501	Serial NO Card
3031	4		952301511	Serial NO Card
2803	1		291885101	Instructions, Set
2804	1		291885122	Instructions, Set
2811	1		291885601	Schematic Diagram
2813	1		291885603	Schematic Diagram
2817	1		281885108	Instructions, Accessories
2821	1	1	281885110	Instructions, 4-CH
2823	1	1	281885104	Instructions, Packing

## TECHNICAL SPECIFICATIONS

### PREAMPLIFIER SECTION

Dynamic Range .....	Phono input: 100dB above 1.5 $\mu$ V equivalent noise input
Note: Dynamic Range is the ratio in dB of phono overload (110mV) to equivalent input noise (1.5 $\mu$ V).	
Input Sensitivity and Impedance .....	Phono: 1.8 mV, 47K ohms High Level: 180 mV, 100K ohms
Output Level and Impedance .....	Tape Recorder: 1V into 47K ohms
Pre-Out Output Impedance .....	1V, 900 ohms
Phono Frequency Response .....	30Hz to 15kHz ± 1dB (RIAA)
Noise-Aux .....	-80dB
Tone Controls .....	Treble: ± 10dB at 15kHz Bass: ± 10dB at 50Hz Mid-Range: ± 5dB at 700Hz
Filters .....	Hi Filter: 9kHz, 12dB per octave Low Filter: 50Hz, 12dB per octave
Loudness Compensation .....	7dB at 100Hz 4dB at 10kHz

### AMPLIFIER SECTION

Headphones Output .....	0.7V into 8 ohms at rated distortion
Input Sensitivity for MAIN IN .....	1V
Rated Power Output (Continuous average power per channel, all channels driven)	
Power Output .....	125 Watts, 4 ohms 125 Watts, 8 ohms 75 Watts, 16 ohms
Power Band .....	20Hz to 20kHz
THD .....	0.15%
Frequency Response .....	±2dB, 5Hz to 70kHz ±1dB, 10Hz to 30kHz
Damping Factor .....	40 at 1kHz

### FM SECTION

Quieting Slope .....	1.9 $\mu$ V for 30dB, 5 $\mu$ V for 55dB 10 $\mu$ V for 60dB, 50 $\mu$ V for 70dB
Ultimate Quieting .....	50 $\mu$ V for 70dB
Selectivity .....	Alternate channel, better than 75dB
Capture Ratio .....	1.5dB
Muting Threshold .....	Muting threshold variable from 8 $\mu$ V to 40 $\mu$ V
Stereo Separation .....	42dB at 1kHz, 27dB at 15kHz
Total Harmonic Distortion .....	Stereo: Less than 0.3% Mono: Less than 0.2%
Frequency Response .....	± 1dB, 30Hz to 15kHz
Total Spurious Rejection .....	Better than 90dB
Image Rejection .....	Better than 90dB
AM Suppression .....	Better than 60dB
IF Rejection .....	Better than 100dB
Antenna Impedance .....	300 ohm Balanced, 75 ohm unbalanced
Quadraxial Output .....	300 mV, 15K ohms for ± 75kHz Deviation

### AM SECTION

AM Sensitivity .....	Better than 40 $\mu$ V
----------------------	------------------------

Selectivity .....	Adjacent channel, 1000kHz, better than 30dB
AM Bandwidth .....	(-6dB) 7kHz
Image Rejection .....	1400kHz, better than 70dB

**GENERAL**

Power Requirements .....	220V~50/60Hz (This unit can be converted by a qualified technician to operate 110/120/240V~50/60Hz)
Unit Dimensions .....	Height: 5-3/8" (without feet)
Dimensions — Panel Width .....	19-5/16"-490mm
— Panel Height .....	5-3/4"-146mm
— Depth .....	15-3/16"-386mm
Weight — Unit alone .....	49.5lbs-22.5Kg
— Packed for Shipment .....	57.2lbs-26.0Kg

\* These specifications and exterior designs may be changed for improvement without advance notice.

## SERVICE INFORMATION FOR EUROPEAN MODEL

The information contained here in included the rear panel and main chassis component locations, voltage conversion, FTZ regulation and schematic diagram.

For the circuit description, alignment method and repairing hints, refer to the original service manual.

### TABLE OF CONTENTS

Main Chassis Component Locations (Top View) .....	45
Voltage Conversion .....	46
Voltage Conversion Chart .....	46
FTZ Regulation .....	46
Schematic Diagram .....	49

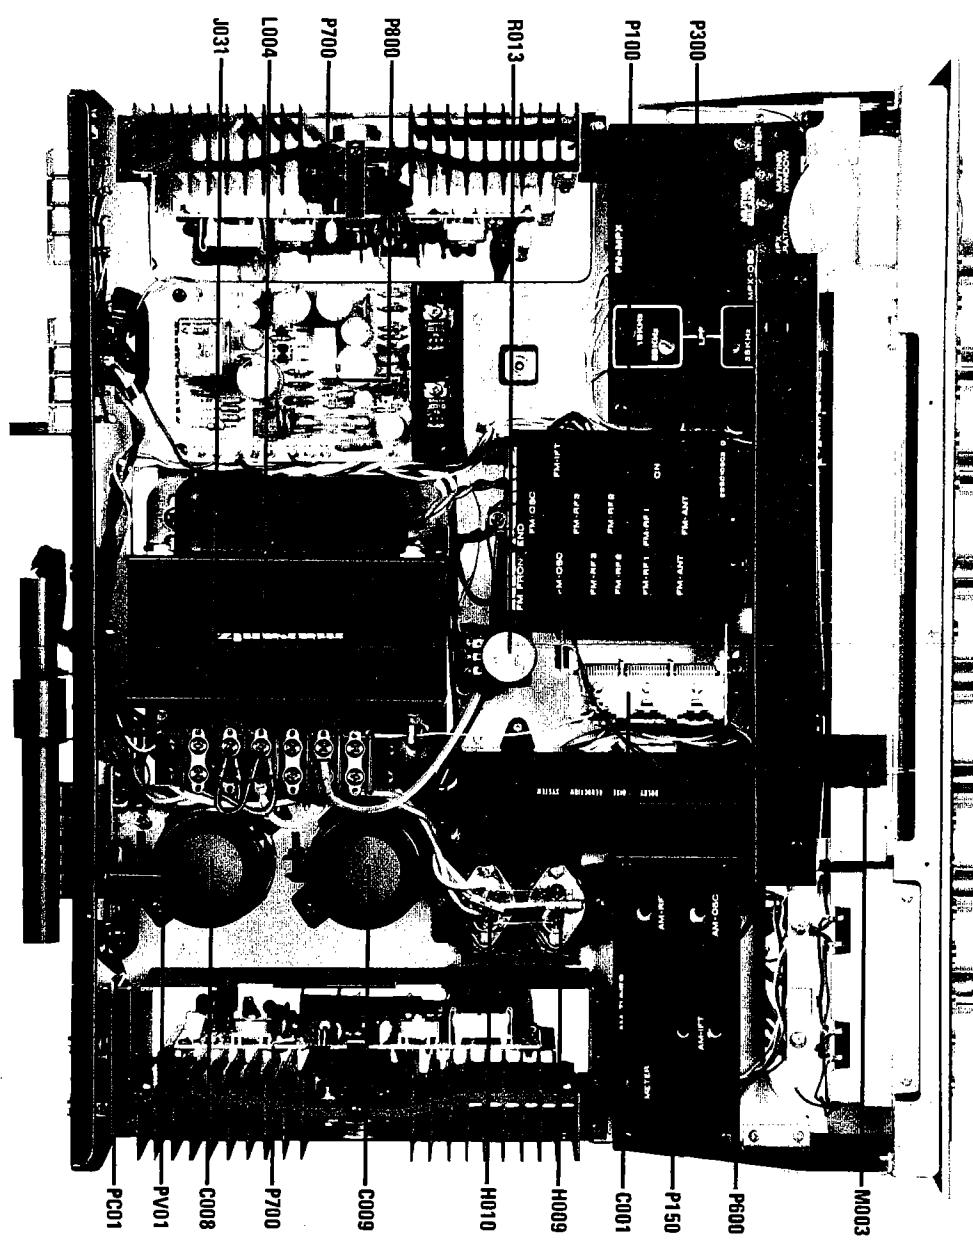


Figure 27. Main Chassis Component Locations (Top View)

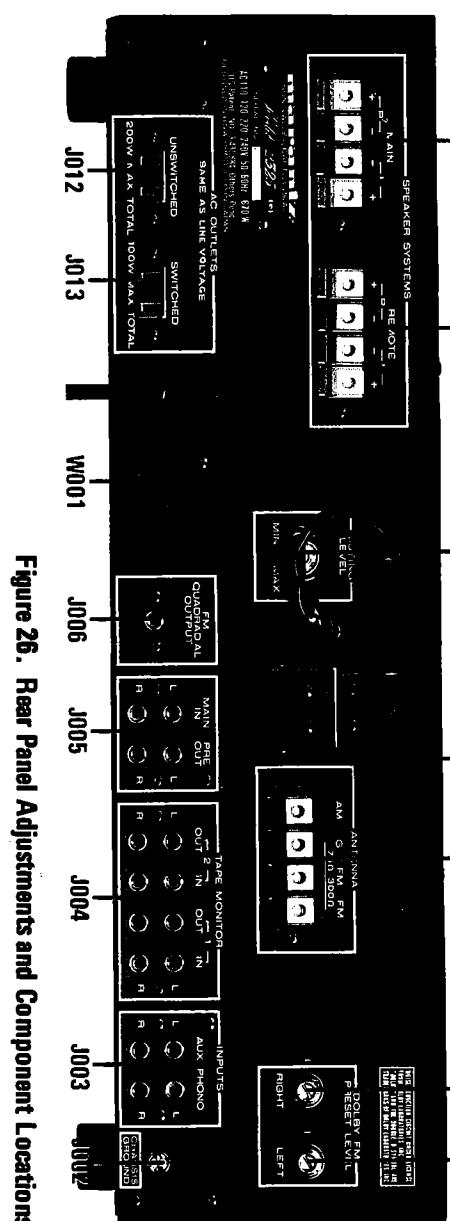


Figure 26. Rear Panel Adjustments and Component Locations

## VOLTAGE CONVERSION

This model is equipped with a universal power transformer to permit operation at 110, 120, 220 and 240 V AC 50 to 60 Hz.


To convert the unit to the required voltage perform the following steps:

- (1) Remove the lid (top).
- (2) Change the jumper wires as illustrated below for the required AC voltage.

**CAUTION: DISCONNECT POWER SUPPLY CORD FROM AC OUTLET BEFORE CONVERTING VOLTAGE.**


## NOTE

For 110V Operation

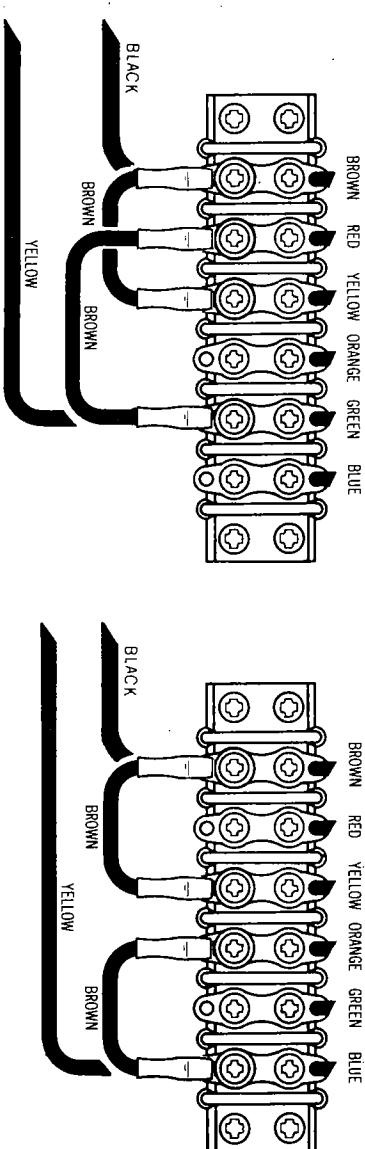

For 110V Operation

For 120V Operation

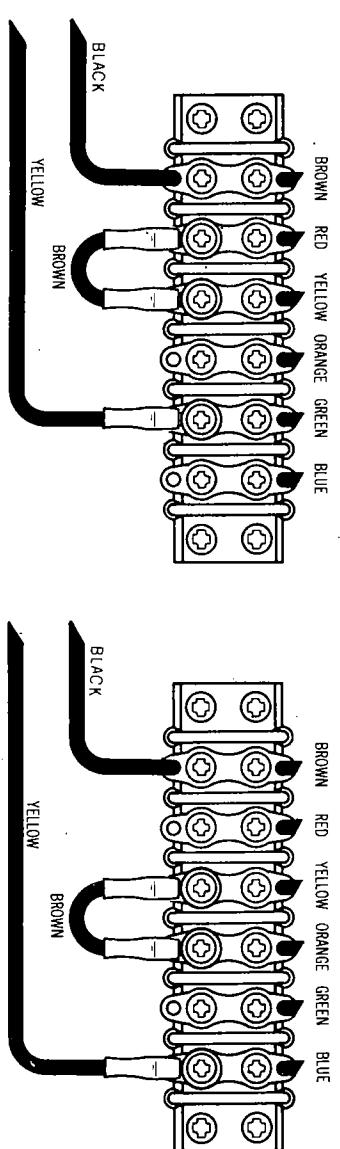

For 220V Operation

For 240V Operation


Figure 28. Voltage Conversion Chart

## FTZ REGULATION

Instruction for the use in the range other than specified in FTZ codes

Achtung für die Leute, die in dem Gebiet wohnen, wo die FTZ-Bestimmungen vorherrschend sind.

Sollte das Gerät auch für Frequenzen ausserhalb des in den FTZ-Bestimmungen angegebene Bereiches empfangebereit sein, bitten wir, den Bereich durch Nachstellen des Kernes in der Oszillatospule (in der Abbildung mit "FTZ" gekennzeichnet) so zu korrigieren, dass er den Bestimmungen entspricht.

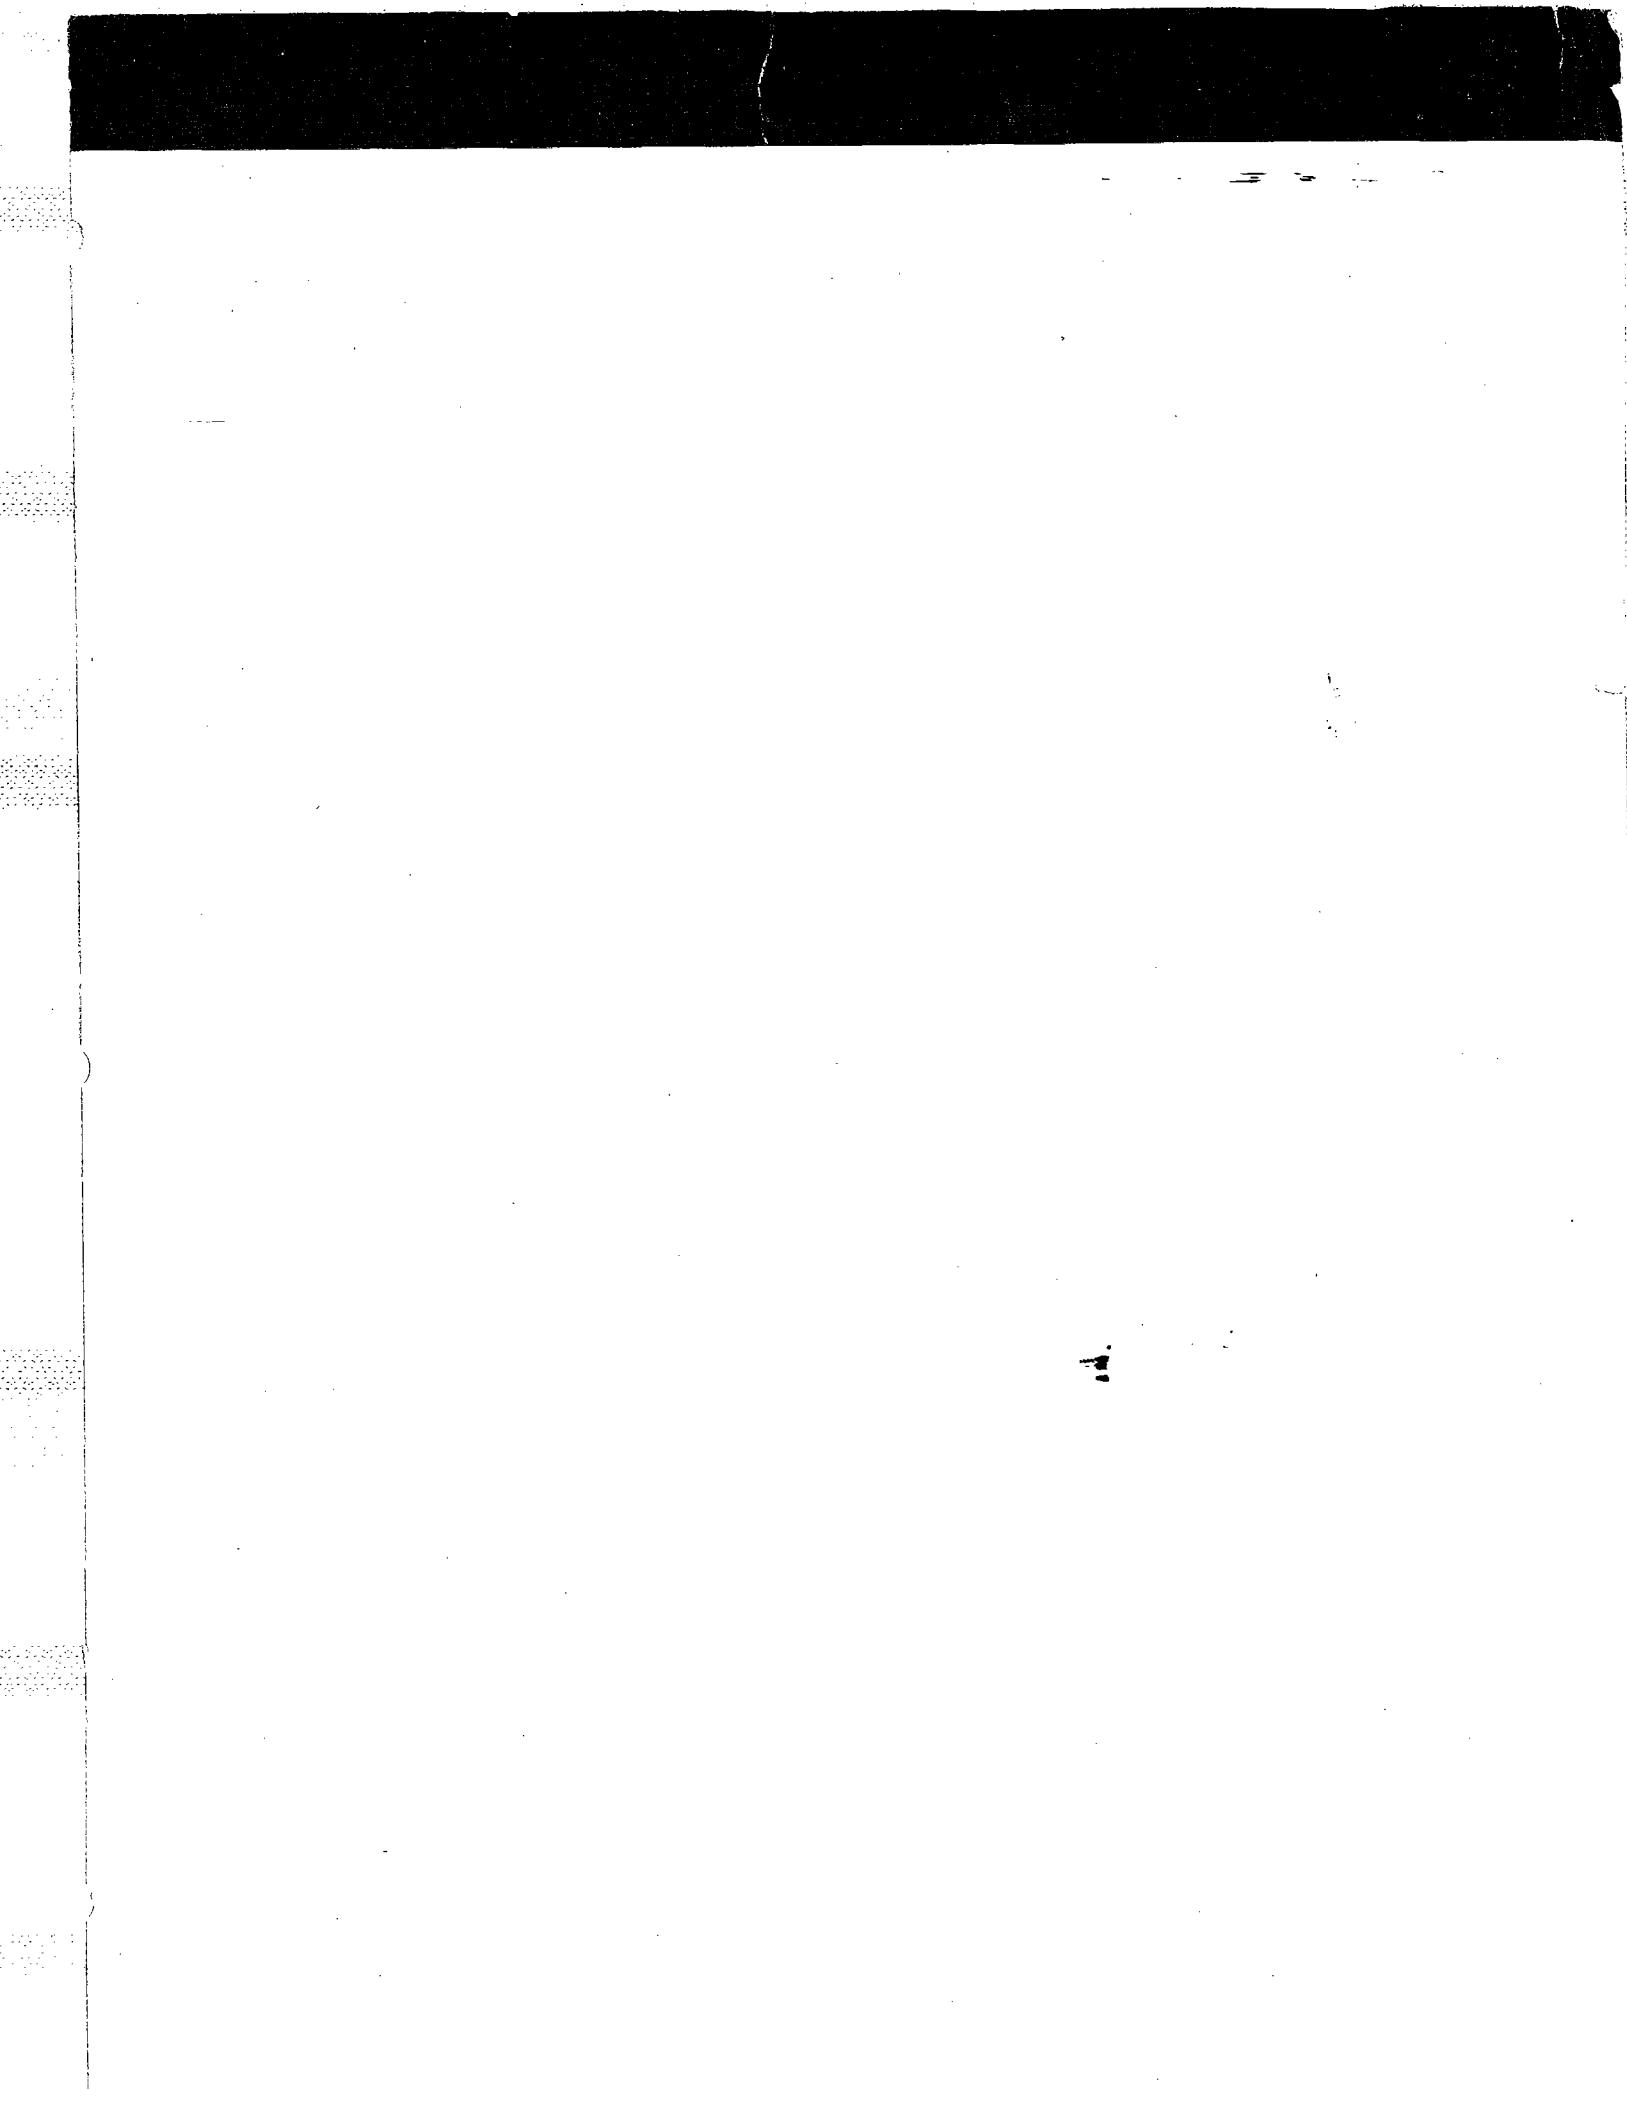



**marantz**

**MARANTZ CO., INC. • P.O. BOX 99 • SUN VALLEY, CALIFORNIA • 91352**



A WHOLLY-OWNED SUBSIDIARY OF SUPERSCOPE INC., SUN VALLEY, CALIFORNIA 91352

SQ is a trademark of CBS INC.

Noise reduction circuit under license from Dolby Laboratories, Inc.

"DOLBY" and the Double-D symbol are trademarks of Dolby Laboratories, Inc.