

**marantz**

**model 4415**

*Quadraxial 4 Receiver*

## TABLE OF CONTENTS

SECTION	PAGE
Introduction .....	1
Service Notes .....	1
AM Tuner .....	1
FM Tuner .....	2
Phono and Pre-Amplifier .....	3
Main Amplifier .....	4
Power Supply Unit .....	4
Audio Trouble Analysis .....	4
Test Equipment Required for Servicing .....	5
AM Alignment Procedure .....	5
FM Alignment Procedure .....	6
Audio Adjustment .....	7
Automatic Voltage Regulator Adjustment .....	7
Parts List .....	17
Technical Specifications .....	27

## LIST OF ILLUSTRATIONS

FIGURE NO.	PAGE
1. Dial Stringing .....	7
2. Front Panel Adjustment and Component Locations .....	8
3. Main Chassis Component Locations (Top View) .....	8
4. Rear Panel Adjustment and Component Locations .....	9
5. Main Chassis Component Locations (Bottom View) .....	9
6. AM and FM Tuner Assembly P100 Component Locations .....	10
7. Phono Amplifier Assembly P300 Component Locations .....	10
8. Tone Amplifier Assembly P400 Component Locations .....	11
9. Vari-Matrix Assembly P500 Component Locations .....	11
10. Power Amplifier Assembly P600 Component Locations .....	12
11. Loudness and Speaker Switch Assembly P700 Component Locations .....	12
12. Tone Control Unit Assembly P750 Component Locations .....	13
13. Power Supply Assembly P800 Component Locations .....	13
14. Balance Control Unit Assembly P900 Component Locations .....	14
15. Hi Filter Unit Assembly P950 Component Locations .....	14
16. Schematic Diagram .....	15~16

## INTRODUCTION

This service manual was prepared for use by Authorized Warranty Stations and contains service information for Marantz Model 4415 Quadradial 4 Receiver.

Servicing information and voltage data included in this manual are intended for use by the knowledgeable and experienced technician only. All instruction should be read carefully. No attempt should be made to proceed without a good understanding of the operation in the receiver.

The parts list furnish information by which replacement part may be ordered from the Marantz Company. A simple description is included for parts which can be usually be obtained through local suppliers.

### 1. SERVICE NOTES

As can be seen from the circuit diagram, the chassis of Model 4415 consists of following units. Each unit mounted on a printed circuit board is described within the square enclosed by a bold dotted line on the circuit diagram.

1. FM and AM Tuner .....	mounted on P.C. Board, P100
2. Phono Amplifier .....	mounted on P.C. Board, P300
3. Tone Amplifier .....	mounted on P.C. Board, P400
4. Vari-Matrix Unit .....	mounted on P.C. Board, P500
5. Power Amplifier .....	mounted on P.C. Board, P600
6. Loudness and Speaker Switch Unit .....	mounted on P.C. Board, P700
7. Tone Control Unit .....	mounted on P.C. Board, P750
8. Power Supply .....	mounted on P.C. Board, P800
9. Balance Control Unit .....	mounted on P.C. Board, P900
10. Hi Filter Unit .....	mounted on P.C. Board, P950
11. Indicator Lamps .....	mounted on P.C. Board, P980

### 2. AM TUNER

All components except ferrite bar antenna are mounted on a printed circuit board P100.

The AM signals induced in a ferrite bar antenna are applied to the base of converter transistor H113 through a capacitor of C171, while the local oscillator voltage is injected to the emitter of H113 through a capacitor C172. Both AM signals and oscillating voltage are mixed at the base-emitter junction and converted into 455KHz intermediate frequency. The resulting IF signal is applied to the first IF transformer L116 consisting of one ceramic filter and two tuned circuits.

The output of L116 is led to the transistor H104 which in turn apply its output to the transistor of next stage H105. The fully amplified IF output is then applied to the diode H123 to detect audible signal through the detector transformer L117. The detected audio signal is filtered and the final audio output is obtained from pin terminal J118 and applied to the audio amplifier section through the selector switch.

The DC component of the detected IF signal is used as a AGC voltage to control emitter current of H104 through the resistor R185. A part of IF signal output is also applied to the diode H124 through a capacitor C180 and rectified to obtain DC current for energizing the signal strength meter M009.

#### 1.1 Suggestions for AM Tuner Trouble Shooting

Check for broken AM bar antenna, next try to tune station by rotating fly-wheel tuning knob slowly and observe the signal strength meter whether it deflects or not. If the signal strength meter gives a deflection at several frequencies received, no failure may exist in the stages at least preceding final IF transformer L117. Next connect a oscilloscope to the pin terminal J118 and check for audio signals with the tuning meter deflected. If the signal strength meter does not deflect, check the local oscillator circuit. Normal oscillating voltage at the hot end of the

oscillator tuning capacitor is about 2 or 3 volts, varying with tuning capacitor position. When measuring oscillating voltage use a RF VTVM, no circuit tester gives correct indication. If the local oscillator voltage is normal, check all voltage distribution in the AM circuits by using a DC VTVM and compare the measured values with those given in the schematic diagram.

### 3. FM TUNER

All components are mounted on a printed circuit board P100.

FM signals induced by a FM antenna are led to FM antenna coil L101.

These signals are then applied to the FET RF amplifier which in turn applies its output to the next transistor mixer H102 through a high Q tuned circuit.

The mixer convert its input signal into 10.7MHz intermediate frequency and amplifies it at the same time. The H103 is a local oscillator and its output is injected into the base of mixer transistor, the injection voltage is about 40mV.

The 10.7 MHz front end output is led to the next IF section. The IF section consists of five stage of IF amplifier and one stage of sub IF amplifier. Two pieces of ceramic filters are also used to obtain high selectivity, a pair of symmetrical diode limiters are also employed for the best limiting characteristics, improved capture ratio and good AM suppression. A part of IF amplifier H105 output is rectified by the diode H115, H116 and its DC output is fed back to the gate of FET RF amplifier to decrease the gain with increased signal strength.

#### 3.1 Muting and Auto-Stereo Switching Circuits

The muting circuit consisting of all solid-state electrical switching has been incorporated in the Model 4415.

The DC voltage obtained by rectifying the sub IF output signal from the H109 is applied to the base of H110 and turns on it, if the sub IF output is greater than predetermined level (muting threshold level).

When H110 turns on, the muting switch transistor H111 is turned on, thus decreasing the emitter collector resistance to near zero ohm and allowing emitter current path to the final IF amplifier H108.

When the input signal is lower than the predetermined level, the DC output obtained is small and can not turn on the H110, thus the H110 keeps its turn off state and this makes the switch transistor keep H111 turn off, then no emitter current is supplied to the H108 and signals below the threshold level are muted out.

The muting threshold level can be varied by adjusting the trimming resistor R153.

The DC voltage obtained is also used to make the Auto-Stereo switching transistor H112 turn on and off, and used to energizing the signal strength meter M009.

#### 3.2 MPX Stereo Decoding Circuit

A Non-equalized audio signal from the FM detector is applied through the phase adjuster network of C148 and R161 to input terminal pin ① on the MPX decoder IC H114. The MPX decoder IC consists of a stereo decoder and postamplifier for the output. The right and left channel signals decoded by the stereo decoder H114, appear at pin ⑩ (right channel) and pin ⑪ (left channel), respectively. These signals are passed through the low-pass filters and de-emphasis networks to eliminate undesirable residual switching signals and are then delivered to postamplifier input pin ⑤ (right channel) and pin ⑦ (left channel), respectively. The signals amplified in the postamplifiers to the required level (approximately 10dB) are delivered to pin ⑥ (right channel) and pin ⑧ (left channel), and are then passed through C169 and C168 to pin terminals J114 and J115, hence, through the selector switch to the audio amplifier section. Pin ⑯ on the MPX IC H114 is connected through R163 to the collector of the autostereo switch transistor H112, which turns on or off according to the incoming FM signal strength, thereby automatically switching between the stereophonic and monaural operations. The H112 turns on or off in accordance with whether the FM signal strength is more or less than approximately 25μV.

### **3.3 Suggestion for Trouble Shooting of FM Tuner**

#### **3.3.1 Symptom: No FM Reception**

First turn on the power switch and try to tune FM stations. Rotate the fly-wheel tuning knob slowly and observe the FM signal strength meter. If the signal strength meter deflect at several frequencies received, the tuner circuits preceding the discriminator circuit may have no failure. When no reading is obtained in the meter, check FM local oscillator circuit, using a RF VTVM. The normal local oscillator voltage is one or two volts (rms) at the tuning capacitor, depending on the tuning capacitor position. If the local oscillator voltage is normal, next check all voltage distribution in the FM Front End and IF amplifier unit and compare them with those shown in the circuit diagram. When signal strength meter deflects but no sound is obtained, check audio circuits, using high sensitive oscilloscope.

#### **3.3.2 Symptom: No Stereo Separation**

Connect a FM RF signal generator output modulated by a stereo modulator to the rear FM ANTENNA terminals, and check the stereo beacon is turned on or not. If not turned on, check for 19 KHz pilot signal and 38 KHz switching signal, using an oscilloscope.

## **4. PHONO AND PRE-AMPLIFIER**

Signals from the PHONO jacks are applied to the phono-amplifier mounted on P300. The amplified and RIAA equalized phono signals and signals from the tuner section and the TAPE/AUX jacks are applied to the selector switch which, in turn, leads the selected signals to the TAPE MON switch and TAPE OUT jacks. Applied to the other section of the TAPE MON switch are signals from the TAPE IN jacks. The TAPE MON switch selects the signals from the selector switch or those from the TAPE IN jacks and the selected signals go to the mode switch. Signals are then mode processed by the mode switch and its associated circuit and applied to the tone control amplifier through the volume control. The bass and treble controlled signals from the tone control amplifier pass through the balance control section and the hi filter before they reach the main amplifier.

### **4.1 Mode Switch**

Mode switch S002 has positions of MONO, 2 CH, DISCRETE, VARI-MATRIX, and SQ DECODER.

In the MONO position, all input signals are mixed together and delivered to all four channels.

In the 2 CH position, each pair of input signals right-front (RF) and right-rear (RR), and left-front (LF) and left-rear (LR) are mixed together. The resultant signals (RF + RR) and (LF + LR) are delivered to the pairs of RF and RR, and LF and LR channels, respectively.

In the DISCRETE position, each channel signal is separately routed to the corresponding channel.

In the VARI-MATRIX position, 2-channel stereo input signals are converted into quadraphonic signals through the vari-matrix circuit; the input right and left channel signals are fed directly to the LF and RF channels, while the signals to the LR and RR channels are synthesized from the 2-channel input signals under the control of the dimension control. The LR and RR channel signal components are controlled by the dimension control as shown below.

Dimension Control Setting	LR Output	RR Output
Minimum (FCCW)	LF + RF	RF + LF
Center	LF	RF
Maximum (FCW)	LF - RF	RF - LF

When the dimension control is set to the minimum position the LR and RR channel signals become monophonic, to the center are stereophonic, and to the maximum are out of phase, thus

providing vanished sound image positioning.

In the SQ DECODER position, signal sources encoded by the CBS SQ system are ideally decoded into 4-channel signals. Required for this operation is incorporation of the SQ Adaptor, Model SQA-1, into the Model 4415.

#### **4.2 Balance Control**

Signals from the tone control amplifiers are fed into the balance control circuit, in which the signals are controlled by three balancers: FRONT L-R, REAR L-R, and FRONT-REAR. By setting the FRONT-REAR balancer to the "FRONT" side and the FRONT L-R balancer to the "L" side, for example, only the front left channel is driven.

The balance control circuit is provided with the remote control switch which makes the Model RC-4 Remote Control Box operative when set to the "REMOTE" position. In the "REMOTE" position the balancers on the Model 4415 become ineffective since signals are led to the Model RC-4. The volume level can be adjusted by the volume control either on the Model 4415 or Model RC-4. However, the maximum volume level available by adjustment of the Model RC-4 is determined by the volume control on the Model 4415.

Balance controlled signals are led through the hi filter to the main amplifier section for further power amplification.

### **5. MAIN AMPLIFIER**

Transistor H601 is the pre-driver coupled to the transistor H603 through capacitor C609. The transistor H603 drives the inverter transistors H609 and H611 which, in turn, drive the power stage consisting of H001 and H002. Transistors H605 and H607 are current limiter operating as a power transistor protection circuit.

Excessive current flow in the power output stage is detected by the resistors R645 and R651 and the resultant variation is applied to the transistors H605 and H607 and make them turned on. This decreases the base biasing current for H609 and H611. In this way the current flow in the power output stage (H001 and H002) is restricted within a safe predetermined value.

### **6. POWER SUPPLY UNIT**

The power supply unit consisting of transistors H801 and H802, which operates as an automatic voltage regulator provides +35V DC to all of the amplifiers except main amplifiers and +14V DC to the tuner section.

### **7. AUDIO TROUBLE ANALYSIS**

- |                                      |                                                                                                                                                                                                                     |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Excessive line consumption        | a. Check for shorted rectifiers H013.<br>b. Check for shorted transistors H001 through H008.<br>Check L001 for short.                                                                                               |
| 2. No line consumption or zero bias. | a. Check line cord, fuse, shorted H009 through H012,<br>H713 & H714.<br>b. Check for open rectifiers H013, or open L001.<br>a. Check filter capacitors C005, C605, & C606.<br>b. Check for shorted transistor H802. |
| 3. Excessive hum and noise level     | a. Check for defective capacitors, C607, C608, C611,<br>C612, C625 & C626.<br>a. Check for proper adjustment of R617 & R618.                                                                                        |
| 4. Parasitic oscillation             |                                                                                                                                                                                                                     |
| 5. Improper clipping                 |                                                                                                                                                                                                                     |

## 8. TEST EQUIPMENT REQUIRED FOR SERVICING

Table 1 lists the test equipment required for servicing the Model 4415 Receiver.

Item	Manufacturer and Model No.	Use
AM Signal Generator		Signal source for AM alignment.
Test Loop		Used with AM Signal generator.
FM Signal Generator	Less than 0.3% distortion	Signal source for FM alignment.
Stereo Modulator	Less than 0.3% distortion	Stereo separation alignment and trouble shooting.
Audio Oscillator	Weston Model CVO-100P, less than 0.02% residual distortion is required.	Sinewave and squarewave signal source.
Oscilloscope	High sensitivity with DC horizontal and vertical amplifiers.	Waveform analysis and trouble shooting and ASO alignment.
VTVM	With AC, DC, RF range	Voltage measurements.
Circuit Tester		Trouble shooting.
AC Wattmeter	Simpson, Model 390	Monitors primary power to Amplifier.
AC Ammeter	Commercial Grade (1-10A)	Monitors amplifier output under short circuit condition.
Line Voltmeter	Commercial Grade (0-150VAC)	Monitors potential of primary power to amplifier.
Variable Autotransformer (0-140VAC, 10 amps)	Powerstat, Model 116B	Adjusts level of primary power to amplifier.
Shorting Plug	Use phono plug with 600 ohm across center pin and shell.	Shorts amplifier input to eliminate noise pickup.
Output Load (8 ohms, 0.5% 100W)	Commercial Grade	Provides 8-ohm load for amplifier output termination.
Output Load (4 ohms, 0.5% 100W)	Commercial Grade	Provides 4-ohm load for amplifier output termination.

Table 1 Test Equipment Required for Servicing

## 9. AM ALIGNMENT PROCEDURE

### 9.1 AM IF Alignment

1. Connect a sweep generator to the test point **(A)** or J107 and an alignment scope to the test point **(B)**.
2. Rotate each core of IF transformer L116 and L117 for maximum height and flat top symmetrical response.

### 9.2 AM Frequency Range and Tracking Alignment

1. Set AM signal generator to 525 KHz. Turn the tuning capacitor fully closed (place the tuning pointer at the low end.) and adjust the oscillator coil L115 for maximum audio output.

2. Set the signal generator to 1650 KHz. Place the tuning pointer in the high frequency end and adjust the oscillator trimmer on the oscillator tuning capacitor (CA-2) for maximum audio output.
3. Repeat the step 1 and 2 until no further adjustment is necessary.
4. Set the generator to 600 KHz and tune the receiver to the same frequency and adjust a slug core of AM ferrite rod antenna for maximum output.
5. Set the generator to 1400 KHz and tune the receiver to the same frequency and adjust the trimming capacitors of antenna (CA-1) for maximum output.
6. Repeat the step 4 and 5 until no further adjustment is necessary.

Note: During tracking alignment reduce the signal generator output as necessary to avoid AGC action.

## 10. FM ALIGNMENT PROCEDURE

1. Connect a FM signal generator to the FM ANTENNA terminals and a oscilloscope and an audio distortion analyzer to the TAPE OUT jacks on the rear panel.
2. Set the FM SG to 87.5 MHz and provide about 3 to 5 $\mu$ V. Place the tuning pointer at the low frequency end by rotating the tuning knob and adjust the core of oscillator coil L103 to obtain maximum audio output.
3. Set the FM SG to 108.5 MHz and provide about 3 to 5 $\mu$ V output. Rotate the tuning knob and place the tuning pointer at the high frequency end and adjust the trimming capacitor C187 for maximum output.
4. Repeat the step 2 and 3 until no further adjustment is necessary.
5. Set the FM SG to 90 MHz and tune the receiver to the same frequency. Decrease signal generator output until the audio output level decreases with the decreasing generator output. Adjust the antenna coil L101, RF coil L102 and IF transformer L105 for minimum audio distortion.
6. Set the FM SG to 106 MHz and tune the receiver to the same frequency. Adjust the trimming capacitor CF-1, CF-2 for minimum distortion.
7. Repeat the step 5 and 6 until no further adjustment is necessary.
8. Connect a DC VTVM with 1 volt range selected to the test point (E) (J120) and adjust the secondary core (upper) of discriminator transformer L107 so that no voltage reading is obtained on the VTVM at no signal.

Next set the FM SG to 98 MHz and increase the output level to 1 K $\mu$ V, then tune the receiver to the same frequency so that no deflection is obtained on the VTVM.

Adjust primary core (bottom) of L107 for minimum distortion, and adjust the L108 for the maximum deflection of FM signal strength meter M009.

### 10.1 Stereo Separation Alignment

1. Set the FM SG to provide 1 K $\mu$ V at 98 MHz.  
Tune the receiver to the same frequency perfectly (so that the VTVM connected to the test point (E) gives no reading).
2. Modulate the FM SG with stereo composite signal consisting of subchannel signal only (of course a pilot signal must be included).  
Adjust the core of L110 for maximum audio output, then, modulate the FM SG with a stereo composite signal consisting of L or R channel only, and adjust the trimming resistor R 161 for maximum and equal separation in both channels.

### 10.2 Muting Circuit Alignment

1. Set the FM SG output to provide 25 $\mu$ V (IHF) at 98 MHz and tune the receiver to the same frequency.  
Adjust the trimming resistor R153 for the threshold level of 25 $\mu$ V (during this adjustment turn the MUTING pushswitch "on").

## 11. AUDIO ADJUSTMENT

1. Connect a VTVM to J614 (+) and J620 (-) and adjust the trimming resistor R629 until the VTVM reads 10mV DC. For the other channel connect the VTVM to J615 (+) and J621 (-) and adjust the R630 for the same reading.
2. Connect a oscilloscope across the SPEAKER terminals. Apply an audio signal of 1 KHz to the AUX jacks and increase the audio signal until the audio output on the scope begin to start clipping. Adjust the trimming resistor R617 for equal and symmetrical clipping. For the other channel adjust the R618.

## 12. AUTOMATIC VOLTAGE REGULATOR ADJUSTMENT

Connect a VTVM to J801 (+) and J808 (-) and adjust R801 until the VTVM reads 35.0V under no signal condition.

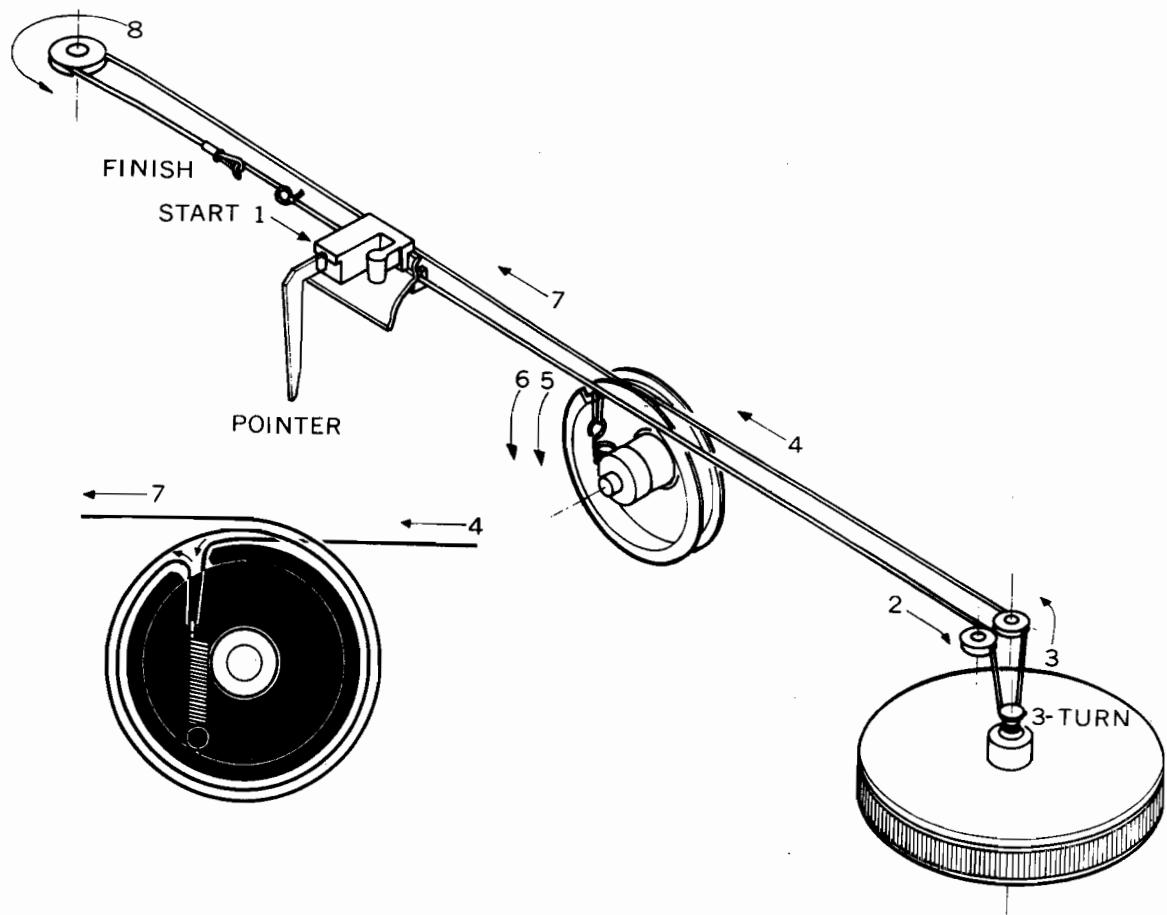


Figure 1. Dial Stringing

**m a r a n t z**

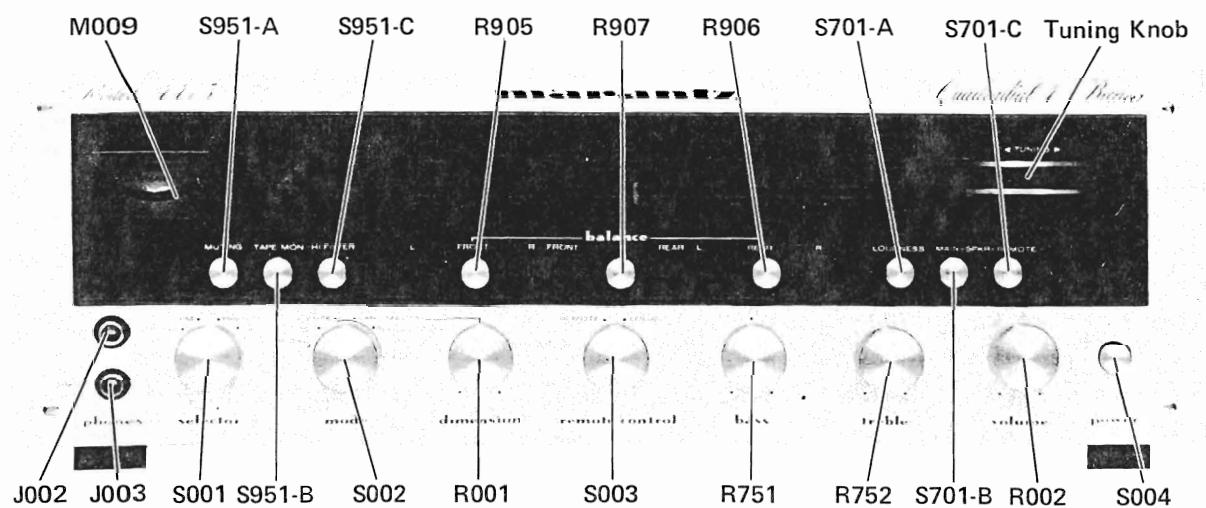


Figure 2. Front Panel Adjustment and Component Locations

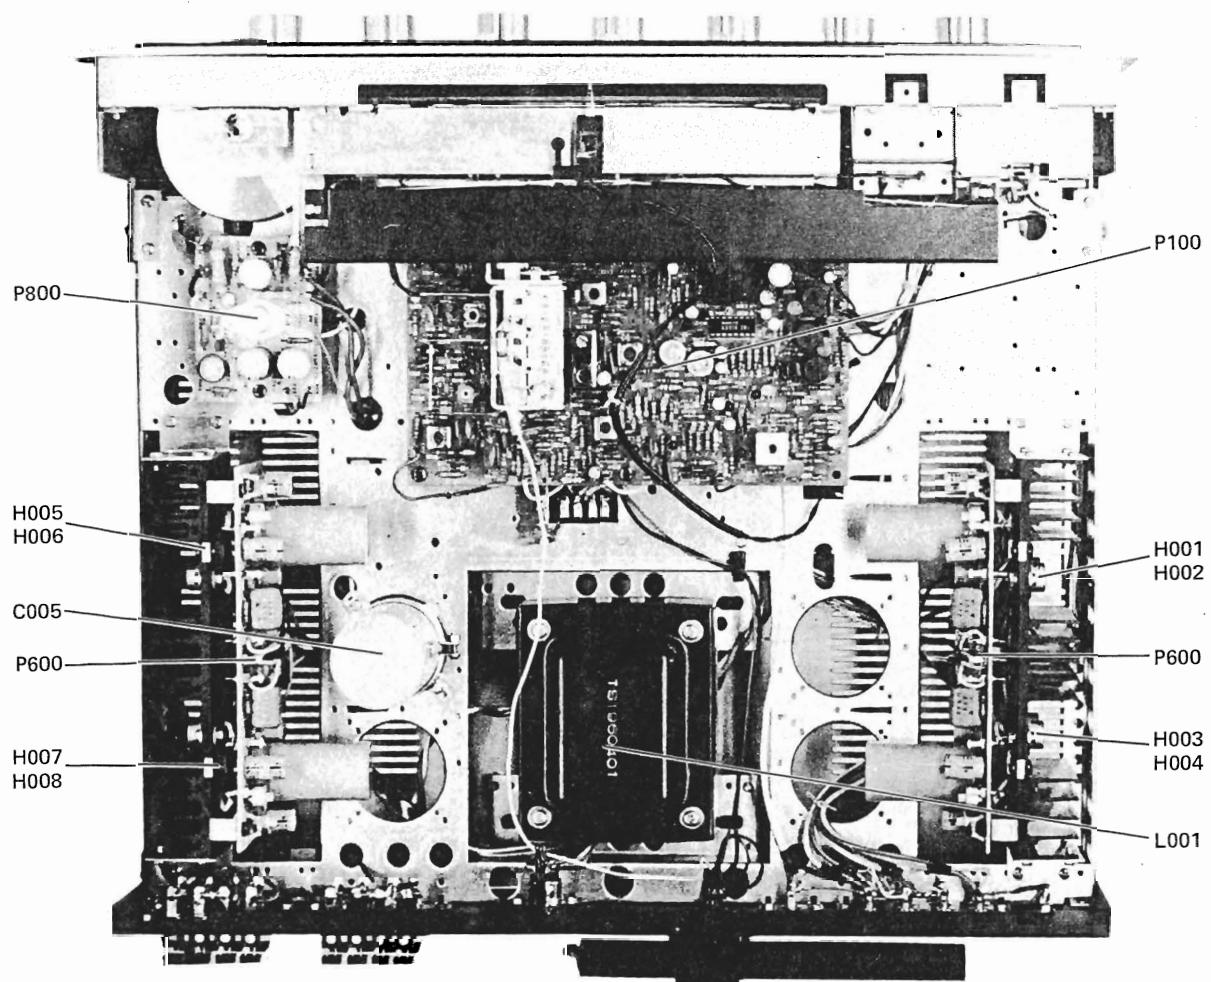


Figure 3. Main Chassis Component Locations (Top View)

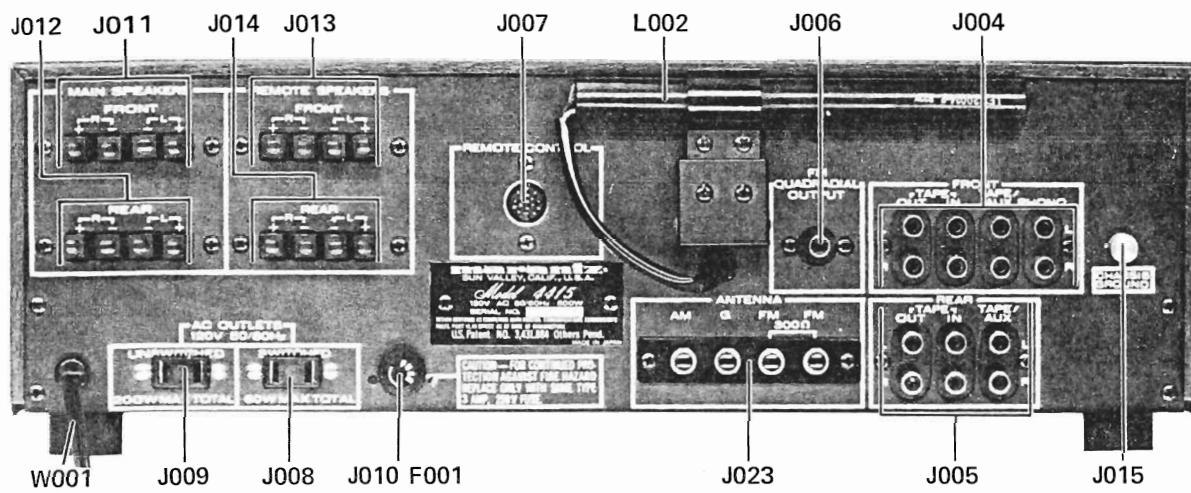


Figure 4. Rear Panel Adjustment and Component Locations

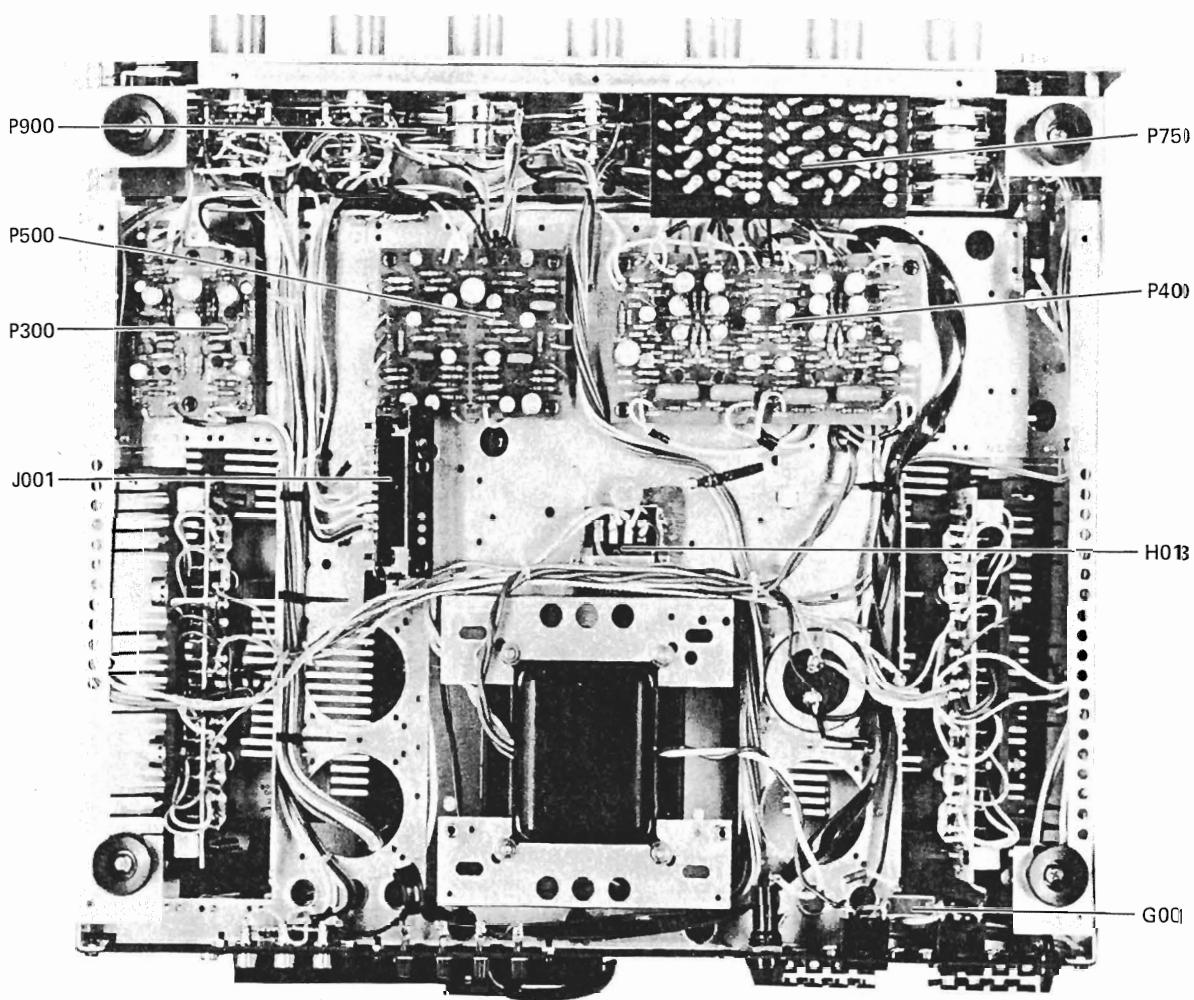


Figure 5. Main Chassis Component Locations (Bottom View)

mara ntz

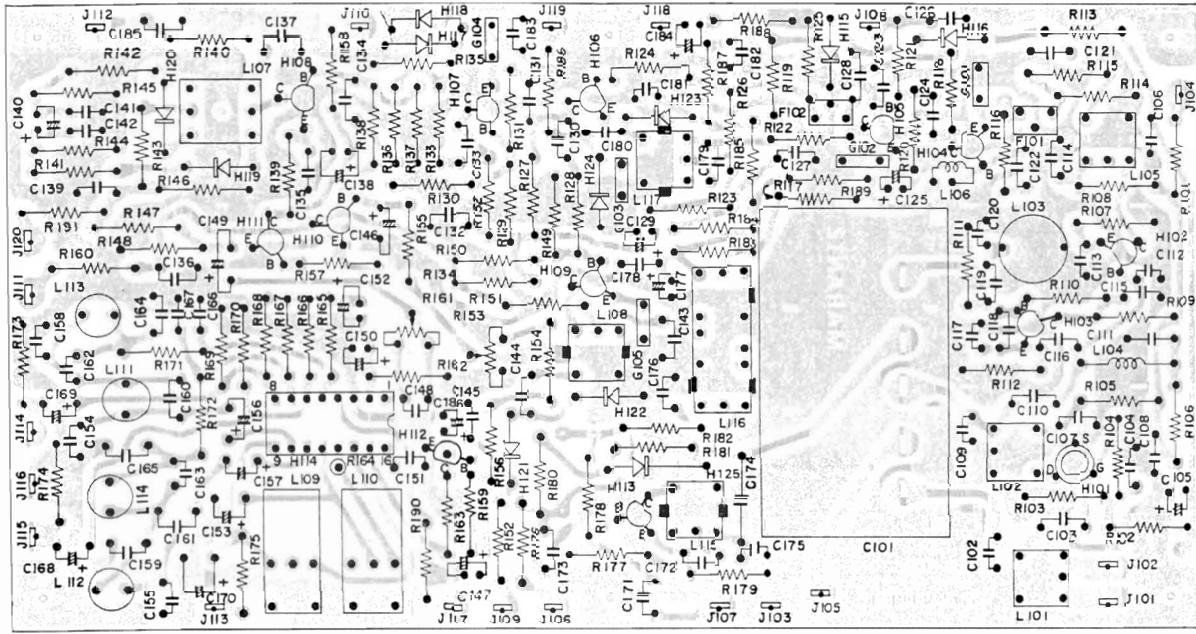


Figure 6. AM and FM Tuner Assembly P100 Component Locations

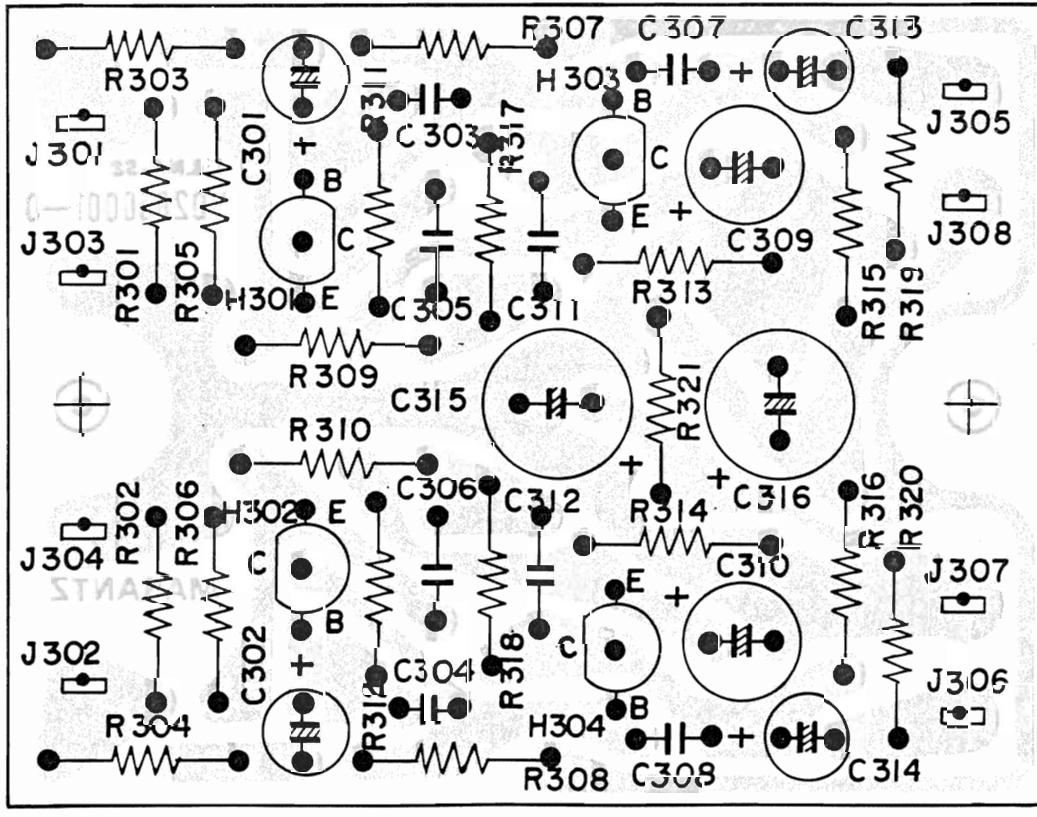


Figure 7. Phono Amplifier Assembly P300 Component Locations

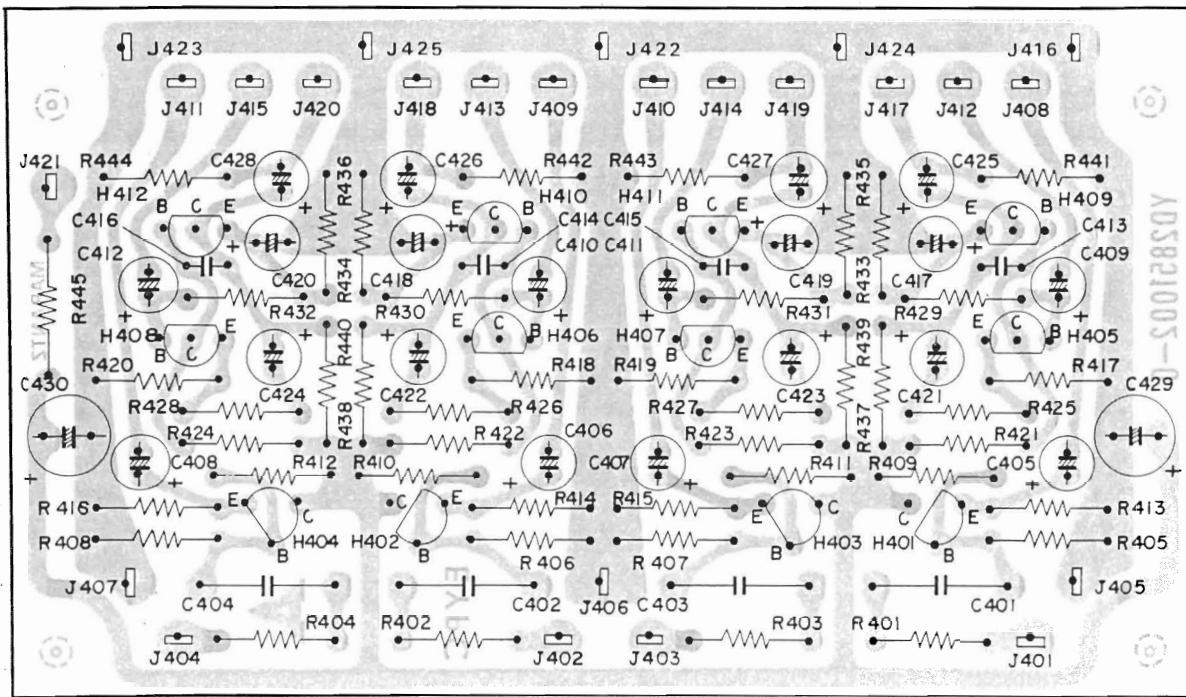


Figure 8. Tone Amplifier Assembly P400 Component Locations

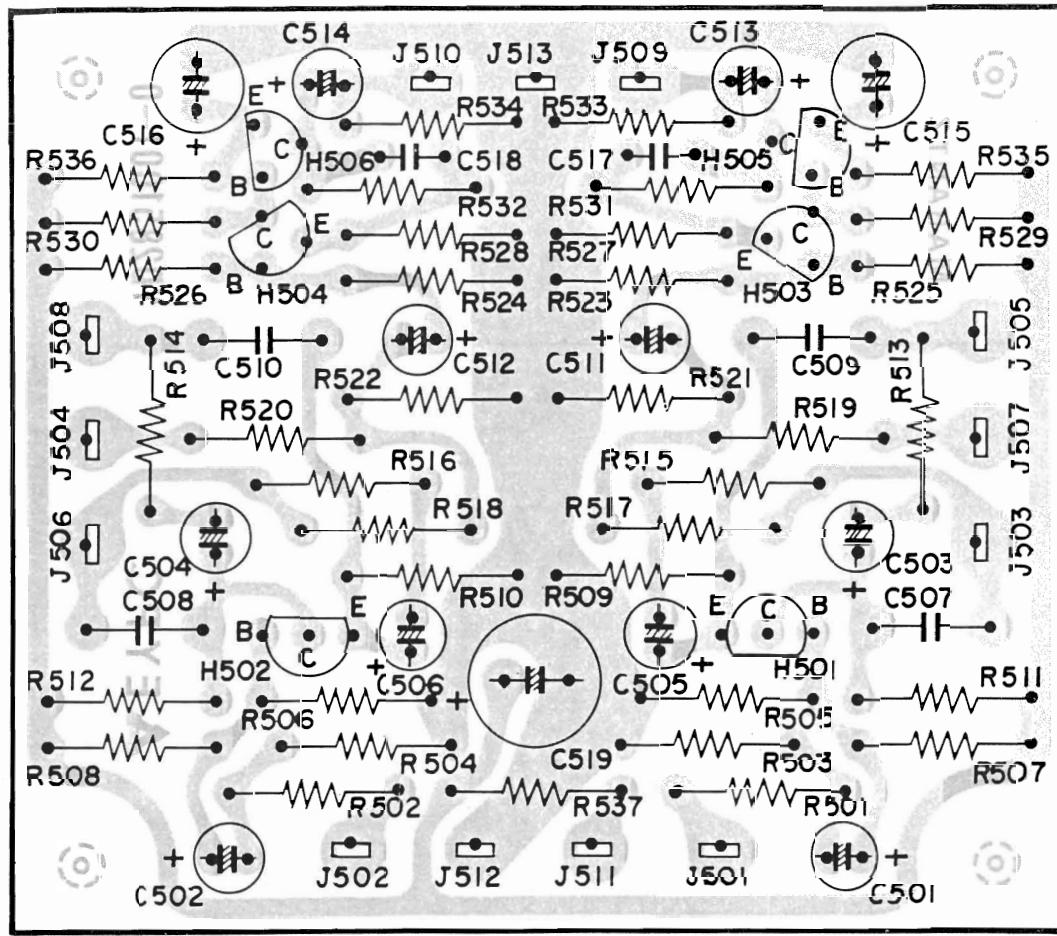
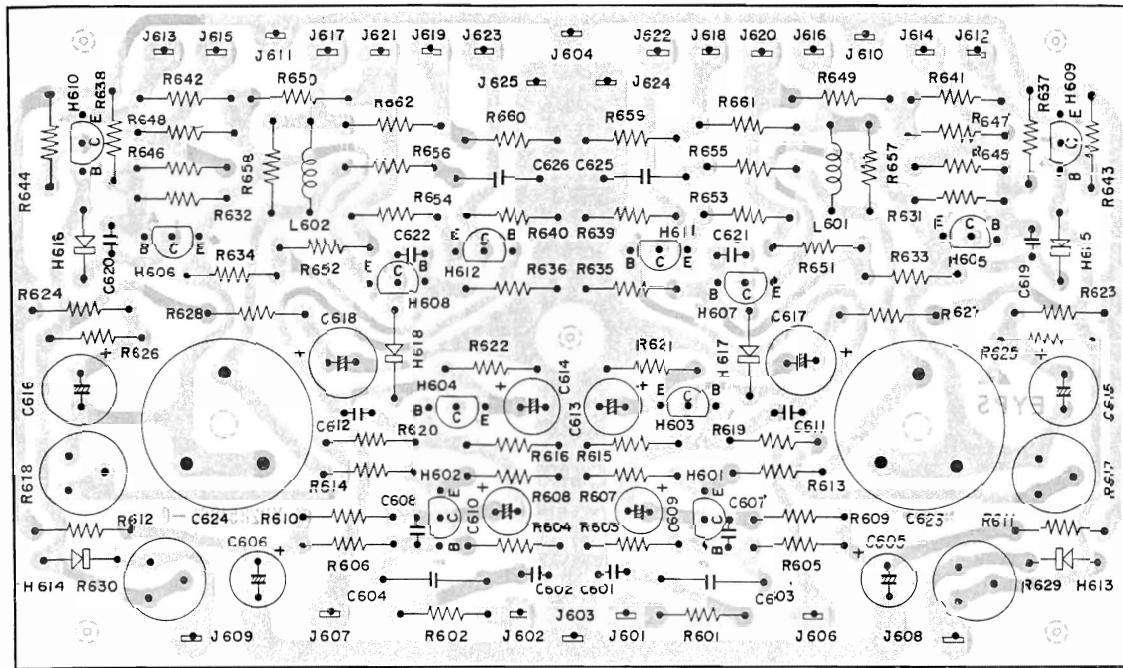
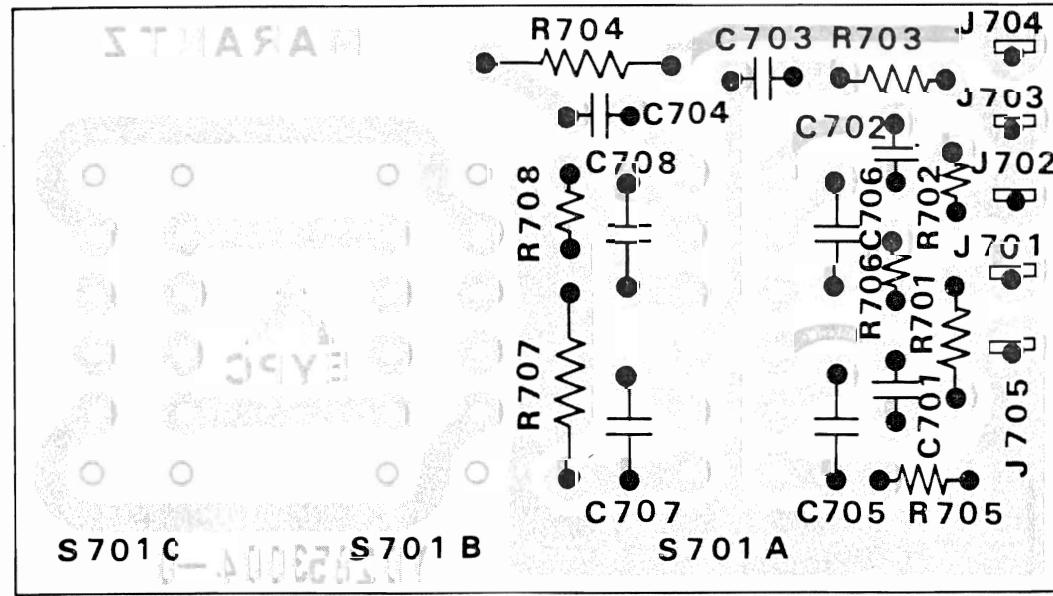


Figure 9. Vari-Matrix Assembly P500 Component Locations



**Figure 10. Power Amplifier Assembly P600 Component Locations**



**Figure 11. Loudness and Speaker Switch Assembly P700 Component Locations**

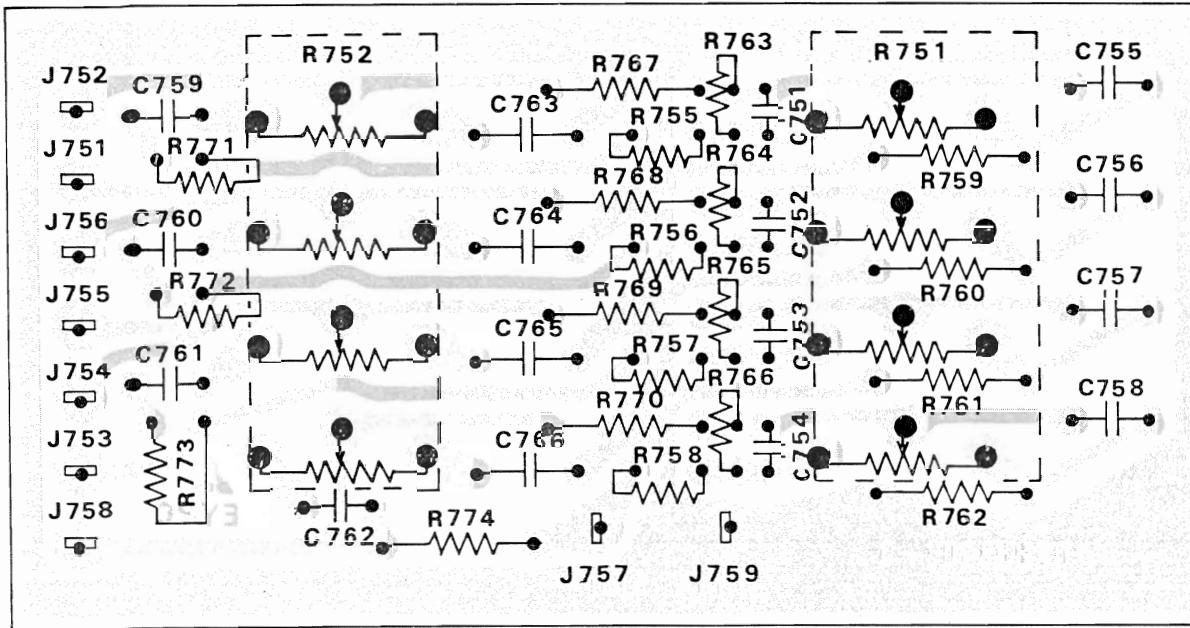


Figure 12. Tone Control Unit Assembly P750 Component Locations

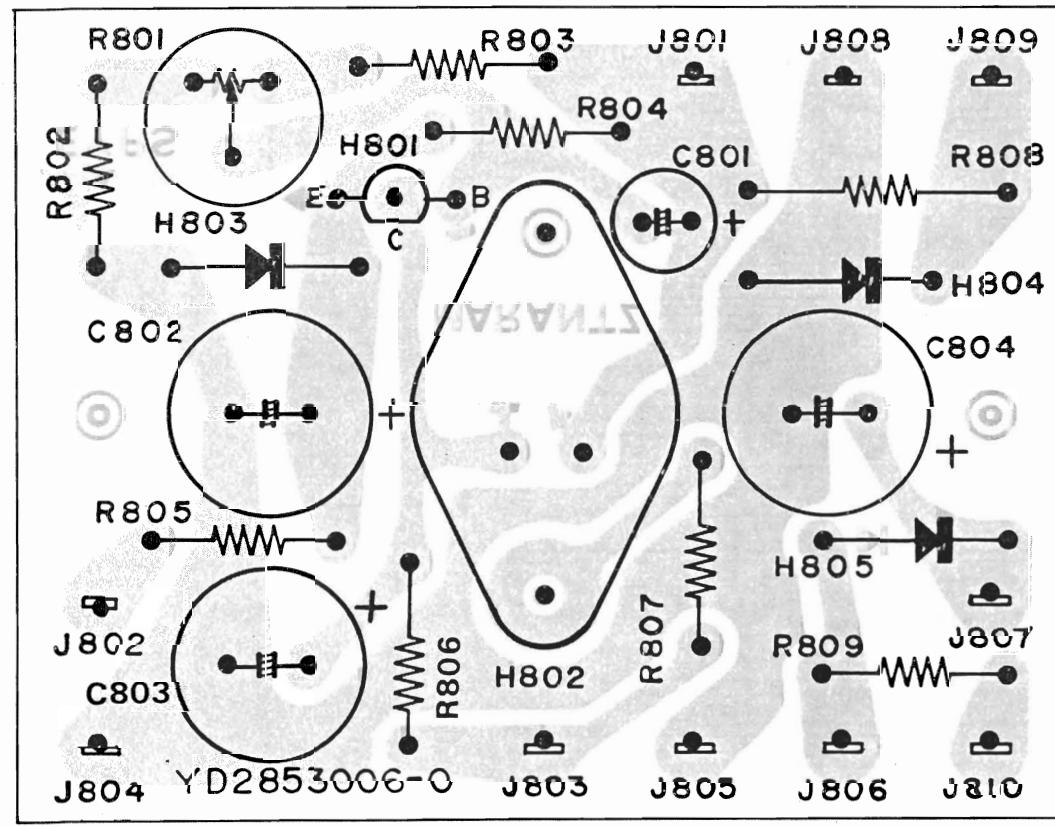


Figure 13. Power Supply Assembly P800 Component Locations

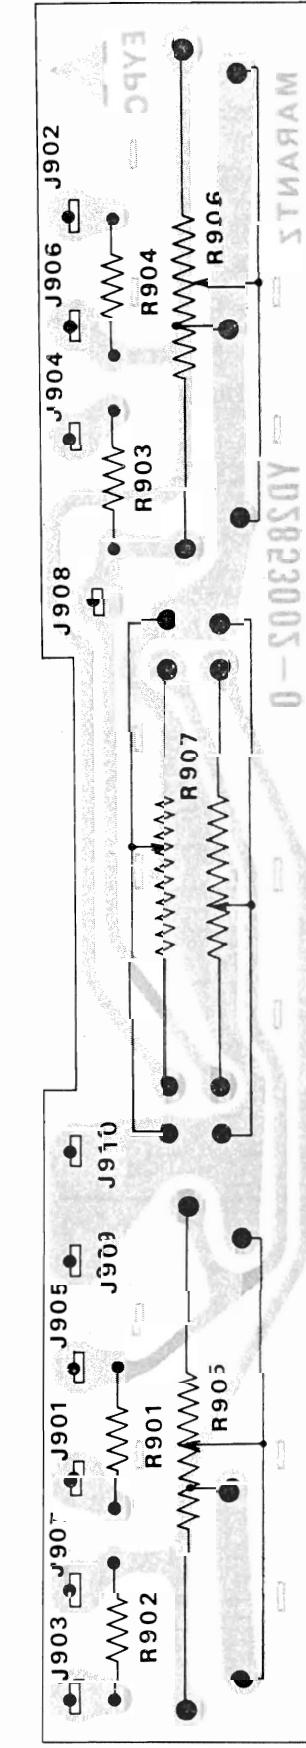


Figure 14. Balance Control Unit Assembly P900 Component Locations

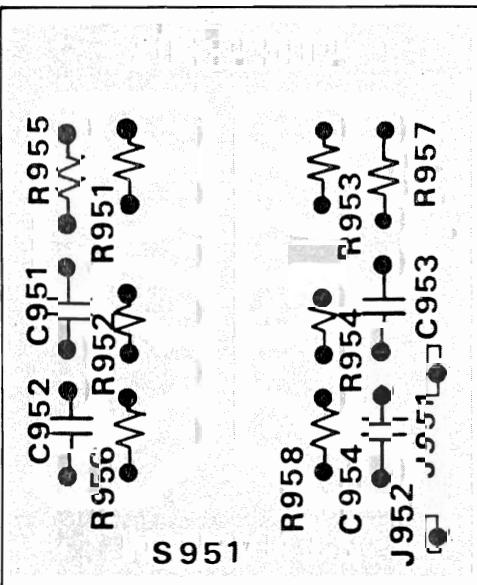
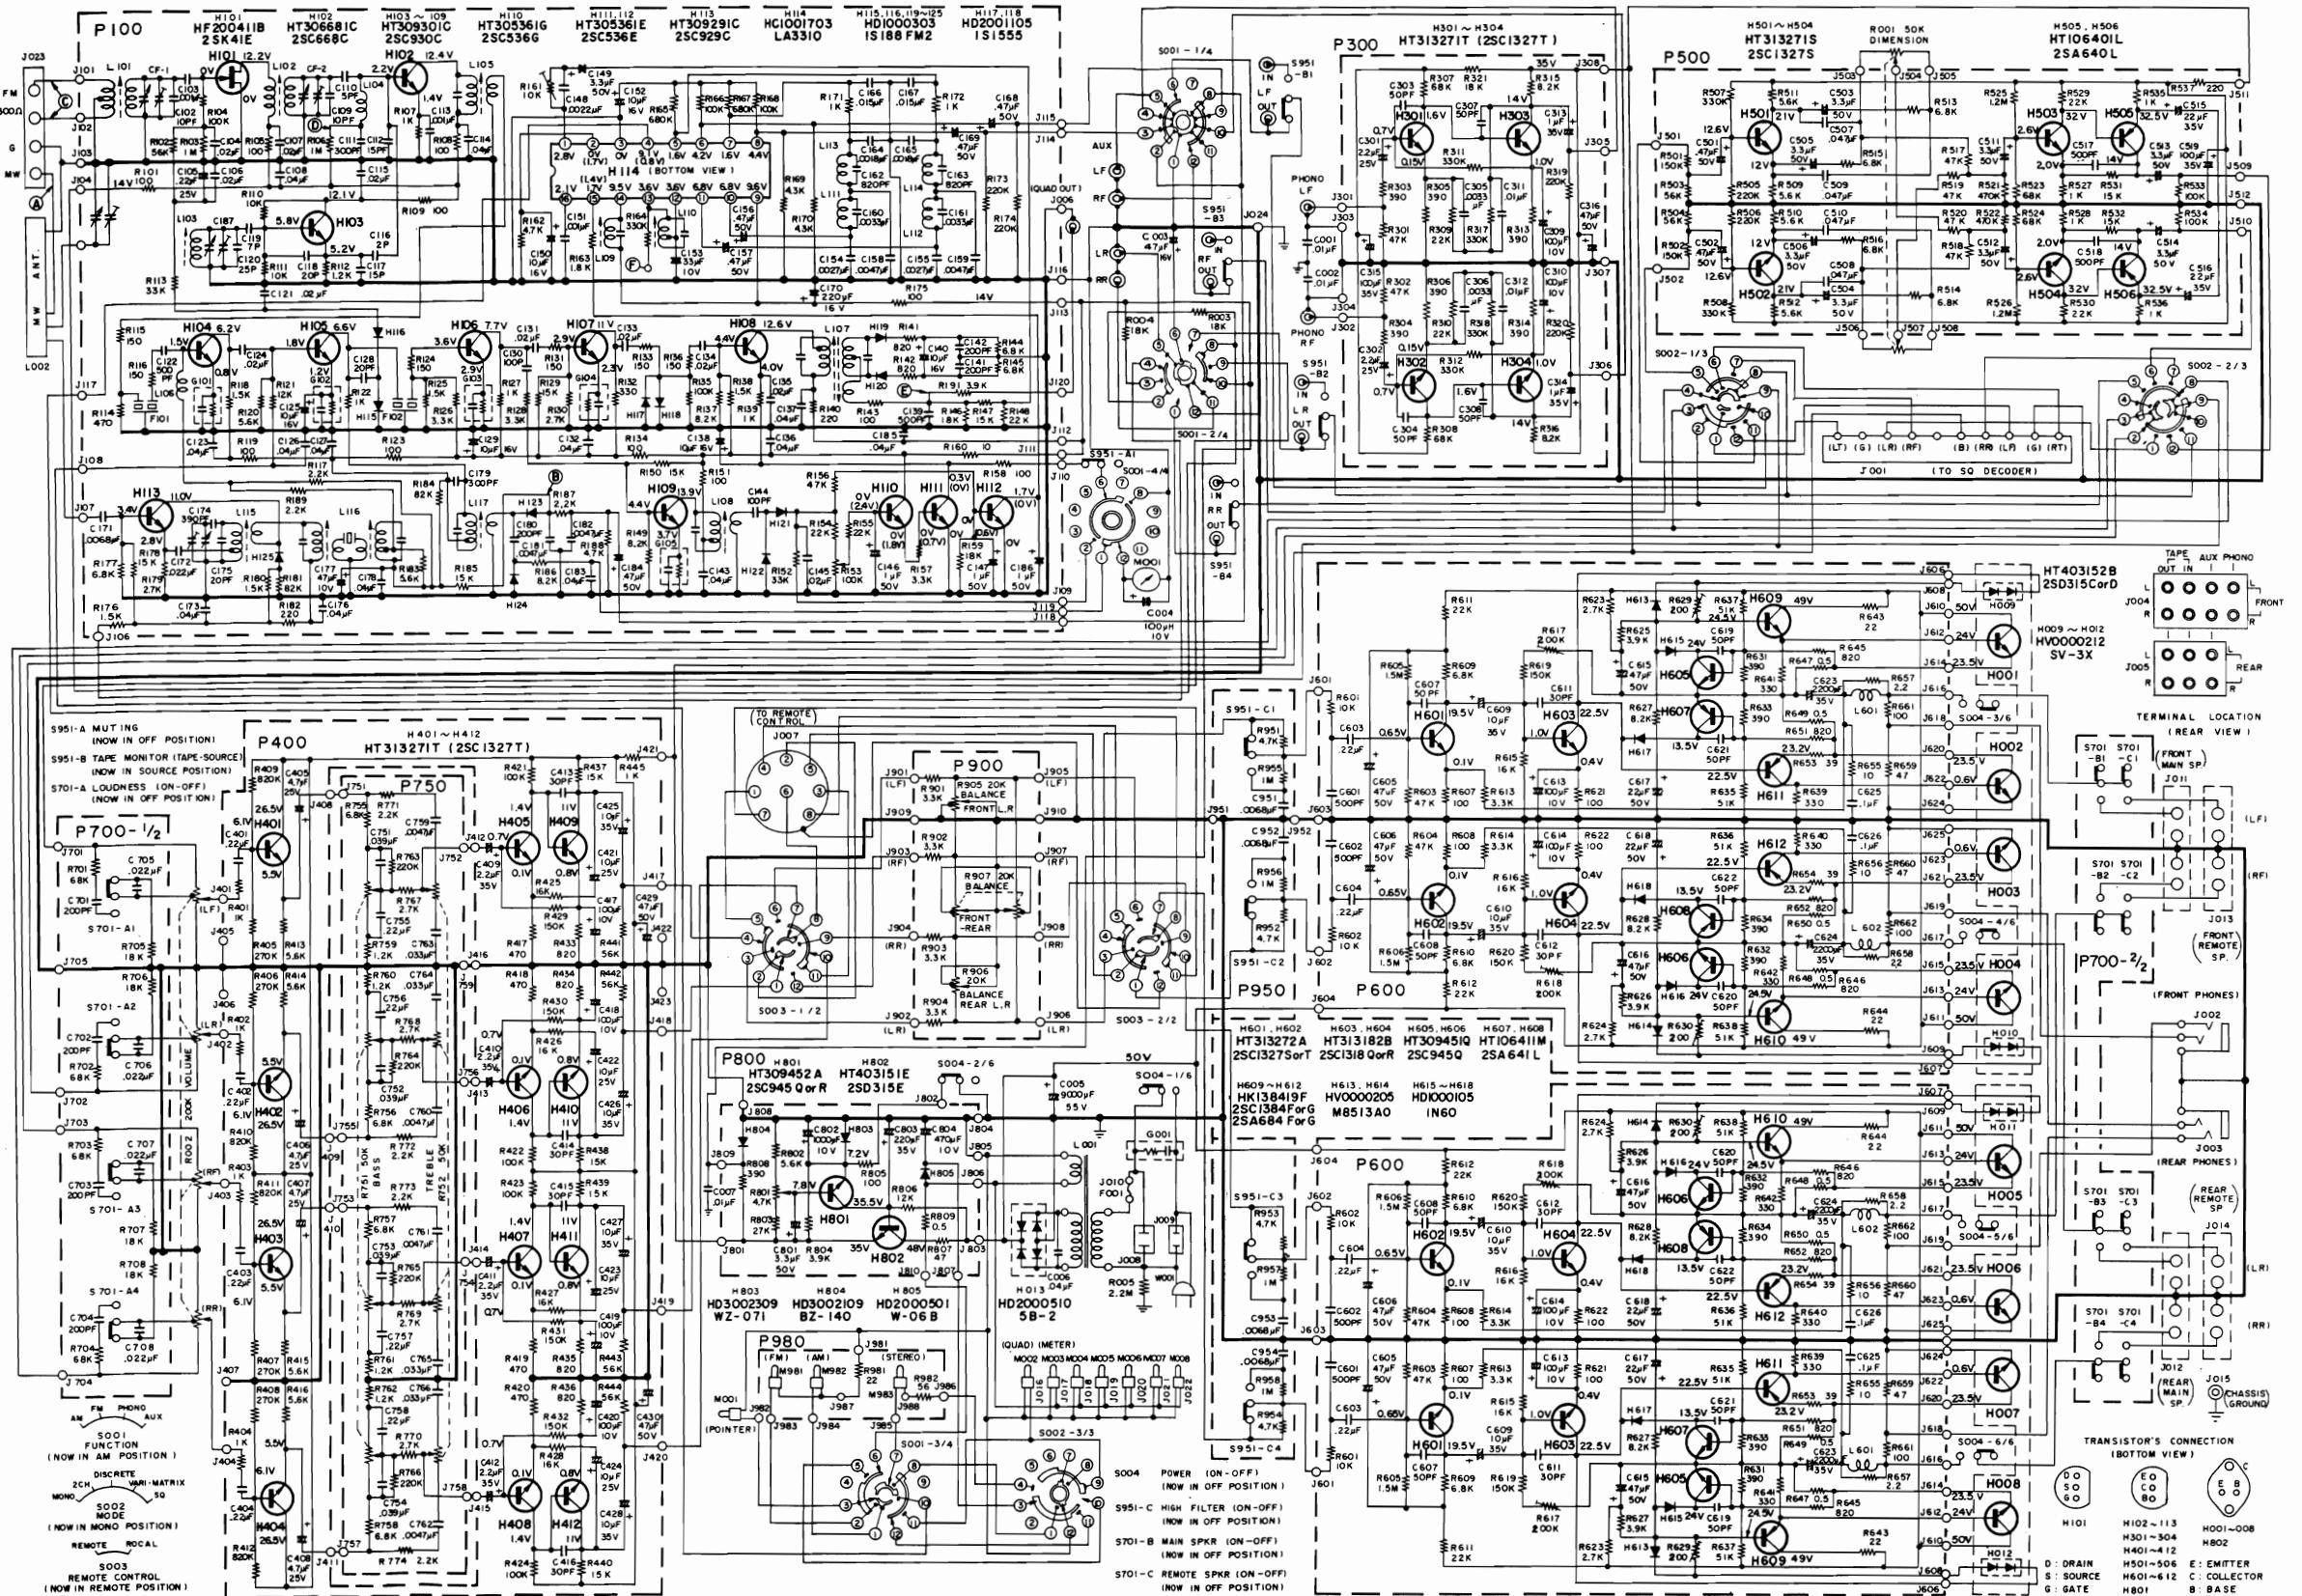


Figure 15. HI Filter Unit Assembly P950 Component Locations

**marantz**



**Figure 16. Schematic Diagram**

## PARTS LIST

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
P100	YD2849001 ZZ2853101	P.C. Board P.C. Board Ass'y  RESISTORS (All resistors are ±5% and 1/4W, unless otherwise indicated.)	R156	RT0547314	47KΩ
			R157	RT0533214	3.3KΩ
			R158	RT0510114	100Ω
			R159	RT0518314	18KΩ
			R160	RT0510014	10Ω
R101	RT0510114	100Ω	R161	RA0103020	Trimming 10K (B)
R102	RT0556314	56KΩ	R162	RT0547214	4.7KΩ
R103	RT0510514	1MΩ	R163	RT0518214	1.8KΩ
R104	RT0510414	100KΩ	R164	RC1033412	330KΩ
R105	RT0510114	100Ω	R165	RT0568414	680KΩ
R106	RT0510514	1MΩ	R166	RT0510414	100KΩ
R107	RT0510214	1KΩ	R167	RT0568414	680KΩ
R108	RT0510114	100Ω	R168	RT0510414	100KΩ
R109	RT0510114	100Ω	R169	RT0543214	4.3KΩ
R110	RT0510314	10KΩ	R170	RT0543214	4.3KΩ
R111	RT0510314	10KΩ	R171	RT0510214	1KΩ
R112	RT0512214	1.2KΩ	R172	RT0510214	1KΩ
R113	RT0533314	33KΩ	R173	RT0522414	220KΩ
R114	RT0547114	470Ω	R174	RT0522414	220KΩ
R115	RT0515114	150Ω	R175	RT0510114	100Ω
R116	RT0515114	150Ω	R176	RT0515214	1.5KΩ
R117	RT0522214	2.2KΩ	R177	RT0568214	6.8KΩ
R118	RT0515214	1.5KΩ	R178	RT0515314	15KΩ
R119	RT0510114	100Ω	R179	RT0527214	2.7KΩ
R120	RT0556214	5.6KΩ	R180	RT0515214	1.5KΩ
R121	RT0512314	12KΩ	R181	RT0582314	82KΩ
R122	RT0510214	1KΩ	R182	RT0522114	220Ω
R123	RT0510114	100Ω	R183	RT0556214	5.6KΩ
R124	RT0515114	150Ω	R184	RT0582314	82KΩ
R125	RT0515214	1.5KΩ	R185	RT0515314	15KΩ
R126	RT0533214	3.3KΩ	R186	RT0582214	8.2KΩ
R127	RT0510214	1KΩ	R187	RT0522214	2.2KΩ
R128	RT0533214	3.3KΩ	R188	RT0547214	4.7KΩ
R129	RT0515314	15KΩ	R189	RT0522214	2.2KΩ
R130	RT0527214	2.7KΩ	R191	RT0539214	3.9KΩ
R131	RT0515114	150Ω	C101	CA3240007	CAPACITORS
R132	RT0533114	330Ω	C102	DD1210001	Variable FM-3, AM-2 Gang
R133	RT0515114	150Ω	C103	DK1710201	Ceramic 10pF ±10%
R134	RT0510114	100Ω	C104	DK1820302	Ceramic 0.001μF ±20%
R135	RT0510414	100KΩ	C105	EM2240251	Ceramic 0.02μF +100% -0
R136	RT0515114	150Ω	C106	DK1820302	Electroly 0.22μF 25V
R137	RT0582214	8.2KΩ	C107	DK1820302	Ceramic 0.02μF +100% -0
R138	RT0515314	15KΩ	C108	DK1840302	Ceramic 0.04μF +80% -20%
R139	RT0510214	1KΩ	C109	DD1210001	Ceramic 10pF ±10%
R140	RT0522214	220Ω	C110	DD1105001	Ceramic 5pF ±0.5pF
R141	RT0582114	820Ω	C111	DD1530101	Ceramic 300pF ±5%
R142	RT0582114	820Ω	C112	DD1615003	Ceramic 15pF ±10%
R143	RT0510114	100Ω	C113	DK1710201	Ceramic 0.001μF ±20%
R144	RT0568214	6.8KΩ	C114	DK1840302	Ceramic 0.04μF +80% -20%
R145	RT0568214	6.8KΩ	C115	DK1820302	Ceramic 0.02μF +100% -0
R146	RT0518314	18KΩ	C116	DD1102004	Ceramic 2pF ±0.05pF
R147	RT0515314	15KΩ	C117	DD1615003	Ceramic 15pF ±10%
R148	RT0522314	22KΩ	C118	DD1520001	Ceramic 20pF ±5%
R149	RT0582214	8.2KΩ	C119	DD1207003	Ceramic 7pF ±1pF
R150	RT0515314	15KΩ	C120	DD1525002	Ceramic 25pF ±5%
R151	RT0510114	100Ω			
R152	RT0533314	33KΩ			
R153	RA0104015	Trimming 100K (B)			
R154	RT0522314	22KΩ			
R155	RT0522314	Trimming 22KΩ			

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION		REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	
C121	DK1820302	Ceramic	0.02μF <sup>+100%</sup> <sub>-0</sub>	C171	DF1768201	Film	0.0068μF ±20%
C122	DD1650101	Ceramic	500pF ±10%	C172	DF1782301	Film	0.022μF ±20%
C123	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>	C173	DF1740301	Film	0.04μF ±20%
C124	DK1820302	Ceramic	0.02μF <sup>+100%</sup> <sub>-0</sub>	C174	DF6539101	Film	390pF ±5%
C125	EA1060169	Electroly	10μF 16V	C175	DD1620001	Ceramic	20pF ±10%
C126	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>	C176	DF1740301	Film	0.04μF ±20%
C127	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>	C177	EA4760109	Electroly	47μF 10V
C128	DD1620001	Ceramic	20pF ±10%	C178	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>
C129	EA1060169	Electroly	10μF 16V	C179	DD1530101	Ceramic	300pF ±5%
C130	DD1610101	Ceramic	100pF ±10%	C180	DD1620101	Ceramic	200pF ±10%
C131	DK1820302	Ceramic	0.02μF <sup>+100%</sup> <sub>-0</sub>	C181	DF1647201	Film	0.0047μF ±10%
C132	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>	C182	DF1647201	Film	0.0047μF ±10%
C133	DK1820302	Ceramic	0.02μF <sup>+100%</sup> <sub>-0</sub>	C183	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>
C134	DK1820302	Ceramic	0.02μF <sup>+100%</sup> <sub>-0</sub>	C184	EA4740501	Electroly	0.47μF 50V
C135	DK1820302	Ceramic	0.02μF <sup>+100%</sup> <sub>-0</sub>	C185	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>
C136	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>	C186	EA1050509	Electroly	1μF 50V
C137	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>	C187	CT1100008	Trimming	10pF
C138	EA1060169	Electroly	10μF 16V	<b>MISCELLANEOUS</b>			
C139	DD1650101	Ceramic	500pF ±10%	G101	BF4030001	Printed Compo.	0.04μF + 270Ω
C140	EA1060169	Electroly	10μF 16V	G102	BF2230008	Printed Compo.	0.022μF + 270Ω
C141	DD1620101	Ceramic	200pF ±10%	G103	BF2230007	Printed Compo.	0.022μF + 680Ω
C142	DD1620101	Ceramic	200pF ±10%	G104	BF2230006	Printed Compo.	0.022μF + 1KΩ
C143	DK1840302	Ceramic	0.04μF <sup>+80%</sup> <sub>-20</sub>	G105	BF2230006	Printed Compo.	0.022μF + 1KΩ
C144	DD1610101	Ceramic	100pF ±10%	F101	FF1107004	Ceramic Filter	CFS107M
C145	DK1820302	Ceramic	0.02μF <sup>+100%</sup> <sub>-0</sub>	F102	FF1107004	Ceramic Filter	CFS107M
C146	EA1050509	Electroly	1μF 50V	<b>COILS and TRANSFORMERS</b>			
C147	EA1050509	Electroly	1μF 50V	L101	LA1004606	Ant Coil	FM
C148	DF1622201	Film	0.0022μF ±20%	L102	LA1027809	RF Coil	FM
C149	EA3350509	Electroly	3.3μF 50V	L103	LO1203601	OSC Coil	FM
C150	EA1060169	Electroly	10μF 16V	L104	LC1751001	Choke Coil	0.75μH
C151	DF1610201	Film	0.001μF ±10%	L105	LI1001601	IFT	FM
C152	EA1060169	Electroly	10μF 16V	L106	LC1223002	Choke Coil	22μH
C153	EA3360109	Electroly	33μF 10V	L107	LI1401623	IFT	FM
C154	DF1627201	Film	0.0027μF ±10%	L108	LI1015602	IFT	FM
C155	DF1627201	Film	0.0027μF ±10%	L109	LS1031001	MPX Coil	19KHz
C156	EA4740501	Electroly	0.47μF 50V	L110	LS1031004	MPX Coil	38KHz
C157	EA4740501	Electroly	0.47μF 50V	L111	LC2226004	Choke Coil	22mH
C158	DF1647201	Film	0.0047μF ±10%	L112	LC2226004	Choke Coil	22mH
C159	DF1647201	Film	0.0047μF ±10%	L113	LC2226004	Choke Coil	22mH
C160	DF1533205	Film	0.0033μF ±5%	L114	LC2226004	Choke Coil	22mH
C161	DF1533205	Film	0.0033μF ±5%	L115	LO1001042	OSC Coil	AM
C162	DF5582101	Film	820pF ±5%	L116	LI1028002	IFT	AM
C163	DF5582101	Film	820pF ±5%	L117	LI1001048	IFT	AM
C164	DF1618205	Film	0.0018μF ±10%	H101	HF200411B	<b>SEMICONDUCTORS</b>	
C165	DF1618205	Film	0.0018μF ±10%	H102	HT306681C	FET	2SK41E
C166	DF1615301	Film	0.015μF ±10%	H103	HT309301C	Transistor	2SC668C
C167	DF1615301	Film	0.015μF ±10%	H104	HT309301C	Transistor	2SC930C
C168	EA4740501	Electroly	0.47μF 50V	H105	HT309301C	Transistor	2SC930C
C169	EA4740501	Electroly	0.47μF 50V	H106	HT309301C	Transistor	2SC930C
C170	EA2270169	Electroly	220μF 16V	H107	HT309301C	Transistor	2SC930C
				H108	HT309301C	Transistor	2SC930C
				H109	HT309301C	Transistor	2SC930C
				H110	HT305361G	Transistor	2SC536G
				H111	HT305361E	Transistor	2SC536E
				H112	HT305361E	Transistor	2SC536E

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION		REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	
H113	HT309291C	Transistor	2SC929C	R316	RT0582214	8.2KΩ	
H114	HC1001703	IC	LA3310	R317	RT0533414	330KΩ	
H115	HD1000303	Diode	1S188FM2	R318	RT0533414	330KΩ	
H116	HD1000303	Diode	1S188FM2	R319	RT0522414	220KΩ	
H117	HD2001105	Diode	1S1555	R320	RT0522414	220KΩ	
H118	HD2001105	Diode	1S1555	R321	RT0518314	18KΩ	
H119	HD1000303	Diode	1S188FM2				<b>CAPACITORS</b>
H120	HD1000303	Diode	1S188FM2	C301	EM2250251	Electroly	2.2μF ±20% 25V
H121	HD1000303	Diode	1S188FM2	C302	EM2250251	Electroly	2.2μF ±20% 25V
H122	HD1000303	Diode	1S188FM2	C303	DD1650001	Ceramic	50pF ±10% 50V
H123	HD1000303	Diode	1S188FM2	C304	DD1650001	Ceramic	50pF ±10% 50V
H124	HD1000303	Diode	1S188FM2	C305	DF1633205	Film	0.0033μF ±10% 50V
H125	HD1000303	Diode	1S188FM2	C306	DF1633205	Film	0.0033μF ±10% 50V
				C307	DD1650001	Ceramic	50pF ±10% 50V
				C308	DD1650001	Ceramic	50pF ±10% 50V
				C309	EA1070109	Electroly	100μF +100% -10% 10V
				C310	EA1070109	Electroly	100μF +100% -10% 10V
J101	YP1000099	Plug		C311	DF1610305	Film	0.01μF ±10% 50V
J102	YP1000099	Plug		C312	DF1610205	Film	0.01μF ±10% 50V
J103	YP1000099	Plug		C313	EV1050351	Electroly	1μF ±20% 35V
J104	YP1000099	Plug		C314	EV1050351	Electroly	1μF ±20% 35V
J106	YP1000099	Plug		C315	EA1070359	Electroly	100μF +100% -10% 35V
J107	YP1000099	Plug		C316	EA4760509	Electroly	47μF +100% -10% 50V
J108	YP1000099	Plug					<b>SEMICONDUCTORS</b>
J109	YP1000099	Plug		H301	HT313271T	Transistor	2SC1327T
J110	YP1000099	Plug		H302	HT313271T	Transistor	2SC1327T
J111	YP1000099	Plug		H303	HT313271T	Transistor	2SC1327T
J112	YP1000099	Plug		H304	HT313271T	Transistor	2SC1327T
J113	YP1000099	Plug					<b>MISCELLANEOUS</b>
J114	YP1000099	Plug		J301	YP1000094	Plug	
J115	YP1000099	Plug		J302	YP1000094	Plug	
J116	YP1000099	Plug		J303	YP1000094	Plug	
J117	YP1000099	Plug		J304	YP1000094	Plug	
J118	YP1000099	Plug		J305	YP1000094	Plug	
J119	YP1000099	Plug		J306	YP1000094	Plug	
J120	YP1000099	Plug		J307	YP1000094	Plug	
				J308	YP1000094	Plug	
1008	282110901	Shield X 2					
1010	286710901	Shield					
1012	28501902	Shield					
1014	282100501	Clamper					
P300	YD2850001 ZZ2850001	P.C. Board P.C. Board Ass'y	Phono EQ	P400	YD2851002 ZZ2853102	P.C. Board P.C. Board Ass'y	Tone Amp.
							<b>RESISTORS (All resistors are ±5% and 1/4W.)</b>
R301	RT0547314			R401	RT0510214		<b>RESISTORS (All resistors are ±5% and 1/4W.)</b>
R302	RT0547314		47KΩ	R402	RT0510214		1KΩ
R303	RT0539114		390Ω	R403	RT0510214		1KΩ
R304	RT0539114		390Ω	R404	RT0510214		1KΩ
R305	RT0539114		390Ω	R405	RT0527414		270KΩ
R306	RT0539114		390Ω	R406	RT0527414		270KΩ
R307	RT0568314		68KΩ	R407	RT0527414		270KΩ
R308	RT0568314		68KΩ	R408	RT0527414		270KΩ
R309	RT0522314		22KΩ	R409	RT0582414		820KΩ
R310	RT0522314		22KΩ	R410	RT0582414		820KΩ
R311	RT0533414		330KΩ	R411	RT0582414		820KΩ
R312	RT0533414		330KΩ	R412	RT0582414		820KΩ
R313	RT0539114		390Ω	R413	RT0556214		5.6KΩ
R314	RT0539114		390Ω	R414	RT0556214		5.6KΩ
R315	RT0582214		8.2KΩ	R415	RT0556214		5.6KΩ

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
R416	RT0556214	5.6KΩ	C424	EA1060259	Electroly 10μF +100% -10 25V
R417	RT0747114	470Ω	C425	EE1060351	Electroly 10μF ±20% 35V
R418	RT0547114	470Ω	C426	EE1060351	Electroly 10μF ±20% 35V
R419	RT0547114	470Ω	C427	EE1060351	Electroly 10μF ±20% 35V
R420	RT0547114	470Ω	C428	EE1060351	Electroly 10μF ±20% 35V
R421	RT0510414	100KΩ	C429	EA4760509	Electroly 47μF +100% -10 50V
R422	RT0510414	100KΩ	C430	EA4760509	Electroly 47μF +100% -10 50V
R423	RT0510414	100KΩ			<b>SEMICONDUCTORS</b>
R424	RT0510414	100KΩ	H401	HT313271T	Transistor 2SC1327T
R425	RT0516314	16KΩ	H402	HT313271T	Transistor 2SC1327T
R426	RT0516314	16KΩ	H403	HT313271T	Transistor 2SC1327T
R427	RT0516314	16KΩ	H404	HT313271T	Transistor 2SC1327T
R428	RT0516314	16KΩ	H405	HT313271T	Transistor 2SC1327T
R429	RT0515414	150KΩ	H406	HT313271T	Transistor 2SC1327T
R430	RT0515414	150KΩ	H407	HT313271T	Transistor 2SC1327T
R431	RT0515414	150KΩ	H408	HT313271T	Transistor 2SC1327T
R432	RT0515414	150KΩ	H409	HT313271T	Transistor 2SC1327T
R433	RT0582114	820Ω	H410	HT313271T	Transistor 2SC1327T
R434	RT0582114	820Ω	H411	HT313271T	Transistor 2SC1327T
R435	RT0582114	820Ω	H412	HT313271T	Transistor 2SC1327T
R436	RT0582114	820Ω			<b>MISCELLANEOUS</b>
R437	RT0515314	15KΩ	J401	YP1000094	Plug
R438	RT0515314	15KΩ	J402	YP1000094	Plug
R439	RT0515314	15KΩ	J403	YP1000094	Plug
R440	RT0515314	15KΩ	J404	YP1000094	Plug
R441	RT0556314	56KΩ	J405	YP1000094	Plug
R442	RT0556314	56KΩ	J406	YP1000094	Plug
R443	RT0556314	56KΩ	J407	YP1000094	Plug
R444	RT0556314	56KΩ	J408	YP1000094	Plug
R445	RT0510214	1KΩ	J409	YP1000094	Plug
		<b>CAPACITORS</b>	J410	YP1000094	Plug
C401	DF1722405	Film 0.22μF ±20% 50V	J411	YP1000094	Plug
C402	DF1722405	Film 0.22μF ±20% 50V	J412	YP1000094	Plug
C403	DF1722405	Film 0.22μF ±20% 50V	J413	YP1000094	Plug
C404	DF1722405	Film 0.22μF ±20% 50V	J414	YP1000094	Plug
C405	EE4750251	Electroly 4.7μF ±20% 25V	J415	YP1000094	Plug
C406	EE4750251	Electroly 4.7μF ±20% 25V	J416	YP1000094	Plug
C407	EE4750251	Electroly 4.7μF ±20% 25V	J417	YP1000094	Plug
C408	EE4750251	Electroly 4.7μF ±20% 25V	J418	YP1000094	Plug
C409	EE2250351	Electroly 2.2μF ±20% 35V	J419	YP1000094	Plug
C410	EE2250351	Electroly 2.2μF ±20% 35V	J420	YP1000094	Plug
C411	EE2250351	Electroly 2.2μF ±20% 35V			
C412	EE2250351	Electroly 2.2μF ±20% 35V			
C413	DD1630001	Ceramic 30pF ±10% 50V	J421	YP1000094	Plug
C414	DD1630001	Ceramic 30pF ±10% 50V	J422	YP1000094	Plug
C415	DD1630001	Ceramic 30pF ±10% 50V	J423	YP1000094	Plug
C416	DD1630001	Ceramic 30pF ±10% 50V	J424	YP1000094	Plug
C417	EA1070109	Electroly 100μF +100% -10 10V	J425	YP1000094	Plug
C418	EA1070109	Electroly 100μF +100% -10 10V	P500	YD2851001	P.C. Board Vari-Matrix
C419	EA1070109	Electroly 100μF +100% -10 10V		ZZ2851001	P.C. Board Ass'y
C420	EA1070109	Electroly 100μF +100% -10 10V			<b>RESISTORS (All resistors are ±5% and 1/4W.)</b>
C421	EA1060259	Electroly 10μF +100% -10 25V	R501	RT0515414	150KΩ
C422	EA1060259	Electroly 10μF +100% -10 25V	R502	RT0515414	150KΩ
C423	EA1060259	Electroly 10μF +100% -10 25V	R503	RT0556314	56KΩ
			R504	RT0556314	56KΩ
			R505	RT0522414	220KΩ
			R506	RT0522414	220KΩ
			R507	RT0533414	330KΩ

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
R508	RT0533414	330KΩ	C516	EA2260359	Electroly 22μF $\pm 100\%$ -10% 35V
R509	RT0556214	5.6KΩ	C517	DD1650101	Ceramic 500pF $\pm 10\%$ 50V
R510	RT0556214	5.6KΩ	C518	DD1650101	Ceramic 500pF $\pm 10\%$ 50V
R511	RT0556214	5.6KΩ	C519	EA1070359	Electroly 100μF $\pm 100\%$ -10% 35V
R512	RT0556214	5.6KΩ	H501	HT313271S	<b>SEMICONDUCTORS</b>
R513	RT0568214	6.8KΩ	H502	HT313271S	Transistor 2SC1327S
R514	RT0568214	6.8KΩ	H503	HT313271S	Transistor 2SC1327S
R515	RT0568214	6.8KΩ	H504	HT313271S	Transistor 2SC1327S
R516	RT0568214	6.8KΩ	H505	HT106401L	Transistor 2SA640L
R517	RT0547314	47KΩ	H506	HT106401L	Transistor 2SA640L
R518	RT0547314	47KΩ			
R519	RT0547314	47KΩ			
R520	RT0547314	47KΩ			
R521	RT0547414	470KΩ			
R522	RT0547414	470KΩ			
R523	RT0568314	68KΩ	1113	281810104	<b>MISCELLANEOUS</b>
R524	RT0568314	68KΩ	1121	51100306S	Support X 2
R525	RT0512514	1.2MΩ	1129	54020401A	B.H.M. Screw X 8
R526	RT0512514	1.2MΩ	1131	54040402N	Flat Washer P X 2
R527	RT0510214	1KΩ			Spring Washer X 2
R528	RT0510214	1KΩ			
R529	RT0522314	22KΩ			
R530	RT0522314	22KΩ	P600	YD2851003	P.C. Board Power Amp. X 2
R531	RT0515314	15KΩ		ZZ2851003	P.C. Board Ass'y
R532	RT0515314	15KΩ			
R533	RT0510414	100KΩ	R601	RT0510314	<b>RESISTORS (All)</b>
R534	RT0510414	100KΩ	R602	RT0510314	resistors are $\pm 5\%$ 10KΩ X 2
R535	RT0510214	1KΩ	R603	RT0547314	and $\frac{1}{4}W$ , unless 10KΩ X 2
R536	RT0510214	1KΩ	R604	RT0547314	otherwise indicated.) 47KΩ X 2
R537	RT0522114	220Ω	R605	RT0515514	47KΩ X 2
		<b>MISCELLANEOUS</b>	R606	RT0515514	1.5MΩ X 2
J501	YP1000094	Plug	R607	RT0510114	1.5MΩ X 2
J502	YP1000094	Plug	R608	RT0510114	100Ω X 2
J503	YP1000094	Plug	R609	RT0568214	100Ω X 2
J504	YP1000094	Plug	R610	RT0568214	6.8KΩ X 2
J505	YP1000094	Plug			6.8KΩ X 2
J506	YP1000094	Plug	R611	RT0522314	
J507	YP1000094	Plug	R612	RT0522314	22KΩ X 2
J508	YP1000094	Plug	R613	RT0533214	3.3KΩ X 2
J509	YP1000094	Plug	R614	RT0533214	3.3KΩ X 2
J510	YP1000094	Plug	R615	RT0516314	16KΩ X 2
			R616	RT0516314	16KΩ X 2
J511	YP1000094	Plug	R619	RT0515414	150KΩ X 2
J512	YP1000094	Plug	R620	RT0515414	150KΩ X 2
		<b>CAPACITORS</b>	R617	RA0204004	Trimming 200KΩB X 2
C501	EE4740501	Electroly 0.47μF $\pm 20\%$ 50V	R618	RA0204004	Trimming 200KΩB X 2
C502	EE4740501	Electroly 0.47μF $\pm 20\%$ 50V	R621	RT0510114	
C503	EE3350501	Electroly 3.3μF $\pm 20\%$ 50V	R622	RT0510114	100Ω X 2
C504	EE3350501	Electroly 3.3μF $\pm 20\%$ 50V	R623	RT0527214	100Ω X 2
C505	EE3350501	Electroly 3.3μF $\pm 20\%$ 50V	R624	RT0527214	2.7KΩ X 2
C506	EE3350501	Electroly 3.3μF $\pm 20\%$ 50V	R625	RT0539214	2.7KΩ X 2
C507	DF1747305	Film 0.047μF $\pm 20\%$ 50V	R626	RT0539214	3.9KΩ X 2
C508	DF1747305	Film 0.047μF $\pm 20\%$ 50V	R627	RT0582214	3.9KΩ X 2
C509	DF1747305	Film 0.047μF $\pm 20\%$ 50V	R628	RT0582214	8.2KΩ X 2
C510	DF1747305	Film 0.047μF $\pm 20\%$ 50V	R629	RA0201003	8.2KΩ X 2
			R630	RA0201003	Trimming 200ΩB X 2
C511	EE3350501	Electroly 3.3μF $\pm 20\%$ 50V	R631	GF0539114	Trimming 200ΩB X 2
C512	EE3350501	Electroly 3.3μF $\pm 20\%$ 50V	R632	GF0539114	390Ω X 2
C513	EE3350501	Electroly 3.3μF $\pm 20\%$ 50V	R633	GF0539114	390Ω X 2
C514	EE3350501	Electroly 3.3μF $\pm 20\%$ 50V	R634	GF0539114	390Ω X 2
C515	EA2260359	Electroly 22μF $\pm 100\%$ -10% 35V			

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
R635	RT0551314	51KΩ X 2
R636	RT0551314	51KΩ X 2
R637	RT0551314	51KΩ X 2
R638	RT0551314	51KΩ X 2
R639	GF0533114	330Ω X 2
R640	GF0533114	330Ω X 2
R641	GF0533114	330Ω X 2
R642	GF0533114	330Ω X 2
R643	GF0522014	22Ω X 2
R644	GF0522014	22Ω X 2
R645	GF0582114	820Ω X 2
R646	GF0582114	820Ω X 2
R647	RW1000503	0.5Ω ±10% 3W X 2
R648	RW1000503	0.5Ω ±10% 3W X 2
R649	RW1000503	0.5Ω ±10% 3W X 2
R650	RW1000503	0.5Ω ±10% 3W X 2
R651	GF0582114	820Ω X 2
R652	GF0582114	820Ω X 2
R653	GF0539014	39Ω X 2
R654	GF0539014	39Ω X 2
R655	RC1010012	10Ω ±10% ½W X 2
R656	RC1010012	10Ω ±10% ½W X 2
R657	RC1002212	2.2Ω ±10% ½W X 2
R658	RC1002212	2.2Ω ±10% ½W X 2
R659	RC1047012	47Ω ±10% ½W X 2
R660	RC1047012	47Ω ±10% ½W X 2
R661	RJ1010101	100Ω ±10% 1W X 2
R662	RJ1010101	100Ω ±10% 1W X 2
<b>CAPACITORS</b>		
C601	DD1530102	Ceramic 300pF ±5% 50V X 2
C602	DD1530102	Ceramic 300pF ±5% 50V X 2
C603	DF1722405	Film 0.22μF ±20% 50V X 2
C604	DF1722405	Film 0.22μF ±20% 50V X 2
C605	EA4760509	Electroly 47μF +100% -10% 50V X 2
C606	EA4760509	Electroly 47μF +100% -10% 50V X 2
C607	DD1650001	Ceramic 50pF ±10% 50V X 2
C608	DD1650001	Ceramic 50pF ±10% 50V X 2
C609	EA1060359	Electroly 10μF +100% -10% 35V X 2
C610	EA1060359	Electroly 10μF +100% -1.2% 35V X 2
C611	DD1630001	Ceramic 30pF ±10% 50V X 2
C612	DD1630001	Ceramic 30pF ±10% 50V X 2
C613	EA1070109	Electroly 100μF +100% -10% 10V X 2
C614	EA1070109	Electroly 100μF +100% -10% 10V X 2
C615	EA4760509	Electroly 47μF +100% -10% 50V X 2
C616	EA4760509	Electroly 47μF +100% -10% 50V X 2
C617	EA2260509	Electroly 22μF +100% -10% 50V X 2
C618	EA2260509	Electroly 22μF +100% -10% 50V X 2
C619	DD1650001	Ceramic 50pF ±10% 50V X 2
C620	DD1650001	Ceramic 50pF ±10% 50V X 2
C621	DD1650001	Ceramic 50pF ±10% 50V X 2
C622	DD1650001	Ceramic 50pF ±10% 50V X 2

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
C623	EB2280354	Electroly 2200μF +100% -10% 35VX2
C624	EB2280354	Electroly 2200μF +100% -10% 35VX2
C625	DF1710405	Film 0.1μF ±20% 50V X 2
C626	DF1710405	Film 0.1μF ±20% 50V X 2
<b>SEMICONDUCTORS</b>		
H601	HT313272A	Transistor 2SC1327S or T X 2
H602	HT313272A	Transistor 2SC1327S or T X 2
H603	HT313182B	Transistor 2SC1318Q or R X 2
H604	HT313182B	Transistor 2SC1318Q or R X 2
H605	HT309451Q	Transistor 2SC945Q X 2
H606	HT309451Q	Transistor 2SC945Q X 2
H607	HT106411M	Transistor 2SA641L X 2
H608	HT106411M	Transistor 2SA641L X 2
H609	HT313842F	Transistor 2SC1384Q or R
H610	HT313842F	Transistor 2SC1384Q or R
<b>MISCELLANEOUS</b>		
L601	LL2391512	Choke Coil X 2
L602	LL2391512	Choke Coil X 2
J601	YP1000099	Plug X 2
J602	YP1000099	Plug X 2
J603	YP1000099	Plug X 2
J604	YP1000099	Plug X 2
J606	YP1000099	Plug X 2
J607	YP1000099	Plug X 2
J608	YP1000099	Plug X 2
J609	YP1000099	Plug X 2
J610	YP1000099	Plug X 2
J611	YP1000099	Plug X 2
J612	YP1000099	Plug X 2
J613	YP1000099	Plug X 2
J614	YP1000099	Plug X 2
J615	YP1000099	Plug X 2
J616	YP1000099	Plug X 2
J617	YP1000099	Plug X 2
J618	YP1000099	Plug X 2
J619	YP1000099	Plug X 2
J620	YP1000099	Plug X 2
J621	YP1000099	Plug X 2
J622	YP1000099	Plug X 2
J623	YP1000099	Plug X 2
J624	YP1000099	Plug X 2
J625	YP1000099	Plug X 2
1103	285126701	Heat Sink X 2
1107	282016007	Bracket X 4
1109	285116006	Bracket X 4
1111	282026702	Heat Sink X 4
1123	51570305B	P.H. Tapt Screw X 8

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
1125	51570306B	P.H. Tapt Screw X 16	0508	285326901	Protector
1127	51100308S	B.H.M. Screw X 4	0628	257710602	Bearing
		<b>SEMICONDUCTORS</b>	0629	141511801	Spacer
H001	HT403152B	Transistor 2SD315 C or D	0631	51040306A	F.H.M. Screw X 2
H002	HT403152B	Transistor 2SD315 C or D	0704	51100305A	B.H.M. Screw X 6
H003	HT403152B	Transistor 2SD315 C or D	0706	51102605A	B.H.M. Screw X 6
H004	HT403152B	Transistor 2SD315 C or D	0708	51570305B	P.H. Tapt Screw X 2
H005	HT403152B	Transistor 2SD315 C or D	0714	51100406A	B.H.M. Screw X 4
H006	HT403152B	Transistor 2SD315 C or D	0726	51570306B	P.H. Tapt Screw
H007	HT403152B	Transistor 2SD315 C or D	0728	51042606S	F.H.M. Screw X 5
H008	HT403152B	Transistor 2SD315 C or D	0734	51570306B	P.H. Tapt Screw X 2
H009	HV0000212	Varistor SV-3X	0710	51570306B	P.H. Tapt Screw X 2
H010	HV0000212	Varistor SV-3X	R001	RM0503050	Resistor Variable 50KΩB (Dimension)
H011	HV0000212	Varistor SV-3X	R002	RG0204001	Resistor Variable 200KΩB (Volume)
H012	HV0000212	Varistor SV-3V	S001	SR1204007	Rotary Switch (Selector)
P800	YD2853006 ZZ2853006	P.C. Board Power Supply P.C. Board Ass'y	R003	RT0518314	Resistor 18KΩ ±5% 1/4W
		<b>RESISTORS</b>	R004	RT0518314	Resistor 18KΩ ±5% 1/4W
R801	RA0502013	Trimming 4.7KΩB	C003	EA4760169	Capacitor Electroly 47μF 16V
R802	GF0556214	5.6KΩ ±5% 1/4W	S002	SR1105001	Rotary Switch (Mode)
R803	RT0527314	27KΩ ±5% 1/4W	S003	SR0802002	Rotary Switch (Remocon)
R804	GF0539214	3.9KΩ ±5% 1/4W	S004	SP0701001	Push Switch (Power)
R805	RC1010112	100Ω ±10% 1/4W	M009	IM1104203	DC Meter Signal Strength
R806	RT0512314	12KΩ ±5% 1/4W	C004	EA1070109	Capacitor Electroly 100μF 10V
R807	RJ1047001	47Ω ±10% 1W	P700	YD2853004 ZZ2853004	P.C. Board Loudness Spk SW P.C. Board Ass'y
R808	GJ1039102	390Ω ±10% 2W			<b>RESISTORS (All resistors are ±5% and 1/4W.)</b>
R809	RW1000503	0.5Ω ±10% 3W	R701	RT0568314	68KΩ
		<b>CAPACITORS</b>	R702	RT0568314	68KΩ
C801	EA3350509	Electroly 3.3μF +100% -10% 50V	R703	RT0568314	68KΩ
C802	EA1080109	Electroly 1000μF 10V	R704	RT0568314	68KΩ
C803	EA2270359	Electroly 220μF 35V	R705	RT0518314	18KΩ
C804	EA4770109	Electroly 470μF 10V	R706	RT0518314	18KΩ
		<b>SEMICONDUCTORS</b>	R707	RT0518314	18KΩ
H801	HT309452A	Transistor 2SC945 Q or R	R708	RT0518314	18KΩ
H802	HT403151E	Transistor 2SD315E	C701	DD1620101	<b>CAPACITORS</b>
H803	HD3002309	Diode WZ-07	C702	DD1620101	Ceramic 200pF ±10%
H804	HD3002109	Diode BZ-140 14V 1W	C703	DD1620101	Ceramic 200pF ±10%
H805	HD2000501	Diode W-06B	C704	DD1620101	Ceramic 200pF ±10%
		<b>MISCELLANEOUS</b>	C705	DF1622305	Film 0.022μF ±10%
J801	YP1000094	Plug	C706	DF1622305	Film 0.022μF ±10%
J802	YP1000094	Plug	C707	DF1622305	Film 0.022μF ±10%
J803	YP1000094	Plug	C708	DF1622305	Film 0.022μF ±10%
J804	YP1000094	Plug	J701	YP1000094	<b>MISCELLANEOUS</b>
J805	YP1000094	Plug	J702	YP1000094	Plug
J806	YP1000094	Plug	J703	YP1000094	Plug
J807	YP1000094	Plug	J704	YP1000094	Plug
J808	YP1000094	Plug	J705	YP1000094	Plug
J809	YP1000094	Plug	S701	SP0403006	Push Switch
J810	YP1000094	Plug			
0403	285316050	Bracket K			
0407	285312201	Sticker			
0409	281816003	Bracket			
0410	281816004	Bracket			

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
0429	281805101	Guide	0413	281927401	Reflector
0430	281910701	Sheet	0414	281927101	Holder
0432	281826251	Pulley K	0416	28182625	Pulley K
0731	51100305A	B.H.M. Screw X 2	0718	51570305B	P.H. Tapt Screw
P750	YD2853003 ZZ2853003	P.C. Board Tone P.C. Board Ass'y	0730	51100305A	B.H.M. Screw
		<b>RESISTORS</b> (All resistors are ±5% and 1/4W, unless otherwise indicated.)	4436	51100305A	B.H.M. Screw
R751	RG0503001	Variable 50KΩ A X 4 Bass	M003	IN1008007	Lamp
R752	RG0503001	Variable 50KΩ A X 4 Treble	J017	YJ0800019	Socket
R755	RT0568214	6.8KΩ	0503	285327402	Reflector
R756	RT0568214	6.8KΩ	0505	285327102	Holder
R757	RT0568214	6.8KΩ			
R758	RT0568214	6.8KΩ	4536	51570305B	P.H. Tapt Screw
R759	RT0512214	1.2KΩ	4537	51100305A	B.H.M. Screw
R760	RT0512214	1.2KΩ	J016	YJ0800019	Socket
R761	RT0512214	1.2KΩ	M002	IN1008007	Lamp
			0424	281827101	Holder
R762	RT0512214	1.2KΩ	0716	51570305B	P.H. Tapt Screw X 5
R763	RT0522414	220KΩ	M004	IN1008007	Lamp
R764	RT0522414	220KΩ	M005	IN1008007	Lamp
R765	RT0522414	220KΩ	M006	IN1008007	Lamp
R766	RT0522414	220KΩ	M007	IN1008007	Lamp
R767	RT0527214	2.7KΩ	M008	IN1008007	Lamp
R768	RT0527214	2.7KΩ	J018	YJ0800019	Socket
R769	RT0527214	2.7KΩ	J019	YJ0800019	Socket
R770	RT0527214	2.7KΩ	J020	YJ0800019	Socket
R771	RT0522214	2.2KΩ	J021	YJ0800019	Socket
			J022	YJ0800019	Socket
R772	RT0522214	2.2KΩ	P900	YD2853002	P.C. Board Balance
R773	RT0522214	2.2KΩ		ZZ2853002	P.C. Board Ass'y
R774	RT0522214	2.2KΩ			<b>RESISTORS</b>
			R901	RT0533214	3.3KΩ ±5% 1/4W
C751	DF1740301	Film 0.04μF ±20% 50V	R902	RT0533214	3.3KΩ ±5% 1/4W
C752	DF1740301	Film 0.04μF ±20% 50V	R903	RT0533214	3.3KΩ ±5% 1/4W
C753	DF1740301	Film 0.04μF ±20% 50V	R904	RT0533214	3.3KΩ ±5% 1/4W
C754	DF1740301	Film 0.04μF ±20% 50V	R905	RX0203012	Variable 20KΩG
C755	DF1722402	Film 0.22μF ±20% 50V	R906	RX0203012	Variable 20KΩM
C756	DF1722402	Film 0.22μF ±20% 50V	R907	RS0203004	Variable 20KΩG X 2
C757	DF1722402	Film 0.22μF ±20% 50V			<b>MISCELLANEOUS</b>
C758	DF1722402	Film 0.22μF ±20% 50V	J901	YP1000099	Plug
C759	DF1647205	Film 0.0047μF ±10% 50V	J902	YP1000099	Plug
C760	DF1647205	Film 0.0047μF ±10% 50V	J903	YP1000099	Plug
			J904	YP1000099	Plug
C761	DF1647205	Film 0.0047μF ±10% 50V	J905	YP1000099	Plug
C762	DF1647205	Film 0.0047μF ±10% 50V	J906	YP1000099	Plug
C763	DF1633305	Film 0.033μF ±10% 50V	J908	YP1000099	Plug
C764	DF1633305	Film 0.033μF ±10% 50V	J909	YP1000099	Plug
C765	DF1633305	Film 0.033μF ±10% 50V	J910	YP1000099	Plug
C766	DF1633305	Film 0.033μF ±10% 50V			
		<b>MISCELLANEOUS</b>	P950	YD2853005	P.C. Board Hi Filter
J751	YP1000094	Plug		ZZ2853005	P.C. Board Ass'y
J752	YP1000094	Plug			<b>RESISTORS (All)</b>
J753	YP1000094	Plug	R951	RT0547214	resistors are ±5% 4.7KΩ
J754	YP1000094	Plug	R952	RT0547214	and 1/4W, unless 4.7KΩ
J755	YP1000094	Plug	R953	RT0547214	otherwise indi- 4.7KΩ
J756	YP1000094	Plug	R954	RT0547214	cated.) 4.7KΩ
J757	YP1000094	Plug	R955	RT0510514	1MΩ
J758	YP1000094	Plug	R956	RT0510514	1MΩ
J759	YP1000094	Plug	R957	RT0510514	1MΩ
			R958	RT0510514	1MΩ

REF. DESIG.	PARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
C951	DF1668205	<b>CAPACITORS</b> Film 0.0068μF ±10% 50V	0922	51100306S	B.H.M. Screw
C952	DF1668205	Film 0.0068μF ±10% 50V	6736	51100308S	B.H.M. Screw X 6
C953	DF1668205	Film 0.0068μF ±10% 50V	6737	53110303E	Hexagon Nut X 6
C954	DF1668205	Film 0.0068μF ±10% 50V	6738	53110303E	Hexagon Nut X 2
S951	SP0403006	<b>MISCELLANEOUS</b> Push Switch	J004	YP0208002	Terminal 8P
J951	YP1000094	Plug	J005	YT0206003	Terminal
J952	YP1000094	Plug	J006	YP0201006	Terminal
P980	YD2853001	P.C. Board Lamp	J008	YJ0400018	Jack AC Outlet
	ZZ2853001	P.C. Board Ass'y	J009	YJ0400018	Jack AC Outlet
R981	RC1022012	<b>RESISTORS</b> 22Ω ±10% ½W	J010	YJ0800012	Socket Fuse Holder
R982	RC1056012	56Ω ±10% ½W	J011	YT0304002	Terminal Spk
M981	IN1006301	<b>MISCELLANEOUS</b> Lamp	J012	YT0304002	Terminal Spk
M982	IN1006301	Lamp	J013	YT0304002	Terminal Spk
M983	IN1006301	Lamp	J014	YT0304002	Terminal Spk
J981	YP1000099	Plug	J015	YL0301021	Terminal Ground
J982	YP1000099	Plug	J023	YT0104004	Terminal FM/AM Ant.
J983	YP1000099	Plug	0814	145525903	Bush
J984	YP1000099	Plug	0818	145525903	Bush
J985	YP1000099	Plug	0930	51100306S	B.H.M. Screw X 3
J986	YP1000099	Plug	0931	54040302N	Spring Washer X 3
J987	YP1000099	Plug	F001	FS1030003	Fuse 3A
J988	YP1000099	Plug	G001	BF1040001	Printed Compo.
0422	285327401	Reflector	G001	BF1040001	Printed Compo.
0722	51570305B	P.H. Tapt Screw X 2	W001	YC0240010	AC Cord
0724	51570305B	P.H. Tapt Screw X 2	R005	GT0522512	Resistor 2.2MΩ ±5% ½W
0426	285327101	Holder	L002	LF1120024	Ant Coil AM
0720	51570306B	P.H. Tapt Screw X 2	L003	LC1332002	Choke Coil 3±0.5μH
C001	DK1710301	Capacitor Ceramic 0.01μF ±20% 50V	0820	257816052	Bracket K
C002	DK1710301	Capacitor Ceramic 0.01μF ±20% 50V	0826	281927103	Holder
J001	YJ0700006	Jack SQ Decoder	0924	51100310S	B.H.M. Screw X 2
1213	285110450	Retainer K	0925	53110303E	Hexagon Nut X 2
1318	51100312S	B.H.M. Screw	0927	51100308S	B.H.M. Screw X 2
0512	285310901	Shield	0928	53110303E	Hexagon Nut X 2
0513	281912002	Insulator	0929	54050300R	T.L. Washer OR X 2
F	285316040	Rear Panel Ass'y	C005	EC9080551	Capacitor Electroly 9000μF 55V
0803	285316001	Bracket	H013	HD2000510	Diode 5B-2
0809	281805501	Collar X 2	C006	DK1810351	Capacitor Ceramic 0.01μF +100% -0% 500V
0811	285116007	Bracket	C	285327340	Fly Wheel Ass'y
0903	51100308S	B.H.M. Screw X 10	0603	257706302	Escutcheon X 2
0905	53110303E	Hexagon Nut X 10	0604	257727301	Fly Wheel
0907	55060307F	T.R. Rivet X 4	0605	285311201	Shaft
0909	54050300R	T.L. Washer OR X 4	0610	53110603E	Hexagon Nut
0913	51100306S	B.H.M. Screw X 4	0611	54040602N	Spring Washer
0915	53110403E	Hexagon Nut	0612	54020601E	Flat Washer P
0916	62041760W	Lug	B	281810340	Pointer Ass'y
0917	54020401E	Flat Washer P	0531	281810301	Pointer
0918	54050400R	T.L. Washer OR	0532	281810302	Pointer
0920	51100312S	B.H.M. Screw X 2	0533	281805301	Cover
0921	53110303E	Hexagon Nut	M001	IN1008018	Lamp

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
E	285315940	Drum Ass'y	0112	285325701	Lid
1004	281915901	Drum	0113	257711803	Spacer X 4
1005	71101569M	Spring			
1021	51650304D	Set Screw H.P. X 2			
6036	138200503	Clamper X 8	G	285325740	Bottom Cover Ass'y
D	120200640	String Ass'y	0115	285325750	Lid K
0528	120225801	Hook	0118	285125703	Lid
0529	72080802A	String X 120	0130	51216059E	Screw X 4
A	285306340	Front Panel Ass'y	0131	250712001	Insulator
0103	285306301	Escutcheon	0119	282111801	Spacer
0104	285340101	Frame	0122	281815401	Knob X 7
0105	285315801	Window	0124	285015401	Knob X 3
0106	281825905	Bush X 7	0126	281815403	Knob X 7
0107	273125901	Bush X 2	0202	285326501	Indicator
0108	285025901	Bush X 3	0211	257886101	Label
0109	285305301	Cover	0212	257886102	Label
C007	DK1840302	Capacitor Ceramic 0.04μF +80% -20%	W002	YW2853001	Wire Material
			W003	YX2853001	Wire Material
0128	275905701	Leg x 4	0128	285312001	Insulator
0313	51100410A	B.H.M. Screw x 4	0523	281912002	Insulator
0314	54020401A	Flat Washer P x 4	0530	56382540G	Eyelet
0315	54040402A	Spring Washer x 4	0535	286726901	Protector
1203	285310550	Chassis K	0518	285310701	Sheet
1218	281900501	Clamper	0606	285011202	Shaft
1221	285310102	Support X 2	0607	54040402N	Spring Washer
1222	54040402N	Spring Washer X 2	0616	285310650	Bearing K
1225	138200503	Clamper X 2	0620	51640410D	Set Screw C.P.
1227	273025901	Bush X 2	0621	54040402N	Spring Washer
1303	51570306B	P.H. Tapt Screw X 8	0622	53110403E	Hexagon Nut
1305	51570306B	P.H. Tapt Screw X 2	0624	51100306A	B.H.M. Screw X 2
1307	51570306B	P.H. Tapt Screw X 2	0625	54050300R	T.L. Washer OR X 2
1309	51570306B	P.H. Tapt Screw X 10	0712	51570306B	P.H. Tapt Screw X 2
1311	51100306S	B.H.M. Screw X 6	0733	51570306B	P.H. Tapt Screw X 2
1312	51100306S	B.H.M. Screw X 2	0911	51100306S	B.H.M. Screw X 2
1313	51100306S	B.H. M. Screws X 4	1402	285380101	Packing Case
1314	51100306S	B.H.M. Screw X 4	1403	285380111	Packing Case
1315	51100306S	B.H.M. Screw X 2	1408	285380301	Partitioner
1317	51100306S	B.H.M. Screw X 2	1409	285380302	Partitioner
1326	54050300R	T.L. Washer OR X 10	1412	901483838	Polyethylen Bag
1327	62031650W	Lug X 10	1414	901302501	Polyethylen Bag X 2
1330	51570306B	P.H. Tapt Screw X 10	1417	102980401	Sleeve
1331	51570306B	P.H. Tapt Screw X 10	1419	273182101	Silicagel X 2
1320	53110401A	Hexagon Nut X 4	1420	281905601	Buffe
1321	54040402N	Spring Washer X 4	1422	952281501	Serial NO Card X 4
1322	54020401A	Flat Washer P X 4	1431	ZA0200007	Ext Antenna
1324	53110503A	Hexagon Nut X 4	1502	285385101	Instructions
L001	TS1960401	Power Transf.	1509	285385601	Schematic Diagram
			1517	281885104	Instructions
			1518	281885108	Instructions
			1523	257785450	Guarantee Card K

**marantz**

#### TECHNICAL SPECIFICATIONS

##### FM SECTION

Tuning Frequency Range .....	88 – 108 MHz
IHFM Usable Sensitivity .....	3.0 $\mu$ V
IHF Selectivity .....	50 dB
Capture Ratio .....	2.5 dB
Image Rejection Ratio at 106 MHz .....	50 dB
Signal to Noise Ratio (Mono) .....	65 dB
Signal to Noise Ratio (Stereo) .....	55 dB
Total Harmonic Distortion (Mono) .....	0.2%
Total Harmonic Distortion (Stereo) .....	0.5%
Frequency Response (ref. 75 $\mu$ sec. de-emphasis) .....	50 Hz – 15 KHz $\pm$ 1 dB
Stereo Separation at 1 KHz .....	40 dB
Quadraxial Output (400 Hz 75 KHz dev.) .....	300 mV

##### AM SECTION

Tuning Frequency Range .....	540 – 1605 KHz
Usable Sensitivity .....	20 $\mu$ V
Selectivity .....	20 dB
Image Rejection Ratio at 1400 KHz .....	40 dB
Signal to Noise Ratio .....	43 dB
Frequency Response (-3 dB) .....	50 Hz – 4 KHz
Total Harmonic Distortion .....	1%

##### AUDIO SECTION

Input Impedance – Low level input .....	Phono 47K ohm
– High level input .....	100K ohm
Input Sensitivity – Phono .....	2.0 mV for 15W output
– High level .....	150 mV for 15W output
Frequency Response .....	$\pm$ 2.0dB, 30Hz to 20KHz at 1W output
Intermodulation Distortion .....	Less than 1.0% at rated power output from 40Hz to 16KHz with all channels driven (S.M.P.T.E.)
Total Harmonic Distortion .....	Less than 1.0% at rated power output 40Hz to 16KHz with all channel driven
Damping Factor .....	Greater than 45 into 8 ohms load
Total Noise – From magnetic phono input to power amp output .....	Less than 3 $\mu$ V equivalent input at rated output into 8 ohms load
Volume Tracking .....	Within 3dB
Rated Continuous (RMS) Output per channel, all channels operating simultaneously .....	15W at 4 and 8 ohms 7.5W at 16 ohms
Comparable Total Music Power .....	90W at 8 ohms

##### GENERAL

Power Requirements .....	120V AC 50 to 60 Hz
Power Consumption – at rated power output, all channels .....	230 watts

– idling (no signal) .....	20 watts
Dimensions – Panel Width .....	17-21/64 Inches
– Panel Height .....	5-25/64 Inches
– Depth .....	14-3/8 Inches
Weight – Unit alone .....	26.5 lbs
– Packed for Shipment .....	37.5 lbs

\* These specifications and exterior designs may be changed for improvement without advance notice.