

AV Pre Tuner

# AV7704

[Click here!](#)

## On-line service parts list

<http://dmedia.dmglobal.com/Document/DocumentDetails/23567>

Online Parts List (P5 to P7)

## WEB owner's manual (Release schedule)

<http://manuals.marantz.com/AV7704/NA/EN/index.php> (September 2017)<http://manuals.marantz.com/AV7704/EU/EN/index.php> (September 2017)

## CAUTION IN SERVICING

## ELECTRICAL

## MECHANICAL

## REPAIR INFORMATION

## UPDATING

- For purposes of improvement, specifications and design are subject to change without notice.
- Please use this service manual with referring to the operating instructions without fail.
- Some illustrations using in this service manual are slightly different from the actual set.

**Confidential**

# CAUTION IN SERVICING

## SAFETY PRECAUTIONS

## NOTE FOR SCHEMATIC DIAGRAM

## NOTE FOR PARTS LIST

## INSTRUCTIONS FOR HANDLING SEMICONDUCTORS AND OPTICAL UNIT

## Online Parts List

[Accessing the Parts List](#)

[Logging in to New SDI and Accessing the Parts List](#)

[Accessing the Part List from the Model Asset Screen](#)

[PRINTED CIRCUIT BOARDS Parts Table](#)

[Downloading the Parts List as an Excel File](#)

[Revision History](#)

[Searching Part Numbers or Ref. Numbers](#)

## CAUTION IN SERVICING.

[Initializing This Unit](#)

[JIG FOR SERVICING](#)

Caution in  
servicing

Electrical

Mechanical

Repair Information

Updating

# SAFETY PRECAUTIONS

The following items should be checked for continued protection of the customer and the service technician.

## Leakage current check

Before returning the set to the customer, be sure to carry out either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the set is defective.

Be sure to test for leakage current with the AC plug in both polarities, in addition, when the set's power is in each state (on, off and standby mode), if applicable.

## ◎ Make a safety check after servicing!

Check that all screws, parts and wires removed or disconnected when servicing have been put back in their original positions, check that no serviced parts have deteriorate the area around. Then make an insulation check on the external metal connectors and between the blades of the power plug, and otherwise check that safety is ensured.

(Insulation check procedure)

Unplug the power cord from the power outlet, disconnect the antenna, plugs, etc., and on the power. Using a 500V insulation resistance tester, check that the insulation resistance value between the inplug and the externally exposed metal parts (antenna terminal, headphones terminal, input terminal, etc.) is 1M Ω or greater. If it is less, the set must be inspected and repaired.

## CAUTION

Please heed the following cautions and instructions during servicing and inspection.

### ◎ Heed the cautions!

Cautions which are delicate in particular for servicing are labeled on the cabinets, the parts and the chassis, etc. Be sure to heed these cautions and the cautions described in the handling instructions.

### ◎ Cautions concerning electric shock!

- (1) An AC voltage is impressed on this set, so if you touch internal metal parts when the set is energized, you may get an electric shock. Avoid getting an electric shock, by using an isolating transformer and wearing gloves when servicing while the set is energized, or by unplugging the power cord when replacing parts, for example.
- (2) There are high voltage parts inside. Handle with extra care when the set is energized.

### ◎ Caution concerning disassembly and assembly!

Through great care is taken when parts were manufactured from sheet metal, there may be burrs on the edges of parts. The burrs could cause injury if fingers are moved across them in some rare cases. Wear gloves to protect your hands.

### ◎ Use only designated parts!

The set's parts have specific safety properties (fire resistance, voltage resistance, etc.). Be sure to use parts which have the same properties for replacement. The burrs have the same properties. In particular, for the important safety parts that are indicated by the  $\triangle$  mark on schematic diagrams and parts lists, be sure to use the designated parts.

### ◎ Be sure to mount parts and arrange the wires as they were originally placed!

For safety seasons, some parts use tapes, tubes or other insulating materials, and some parts are mounted away from the surface of printed circuit boards. Care is also taken with the positions of the wires by arranging them and using clamps to keep them away from heating and high voltage parts, so be sure to set everything back as it was originally placed.

## CAUTION

Concerning important safety parts

Many of the electric and the structural parts used in the set have special safety properties. In most cases these properties are difficult to distinguish by sight, and the use of replacement parts with higher ratings (rated power and withstand voltage) does not necessarily guarantee that safety performance will be preserved. Parts with safety properties are indicated as shown below on the wiring diagrams and the parts list in this service manual. Be sure to replace them with the parts which have the designated part number.

- |                        |                                    |
|------------------------|------------------------------------|
| (1) Schematic diagrams | Indicated by the $\triangle$ mark. |
| (2) Parts lists        | Indicated by the $\triangle$ mark. |

The use of parts other than the designated parts could cause electric shocks, fires or other dangerous situations.

## NOTE FOR SCHEMATIC DIAGRAM

### WARNING:

Parts indicated by the  $\triangle$  mark have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

### CAUTION:

Before returning the set to the customer, be sure to carry out either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 millamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the set is defective.

### WARNING:

DO NOT return the set to the customer unless the problem is identified and remedied.

### NOTICE:

ALL RESISTANCE VALUES IN OHM.  $k=1,000$  OHM /  $M=1,000,000$  OHM

ALL CAPACITANCE VALUES ARE EXPRESSED IN MICRO FARAD, UNLESS OTHERWISE INDICATED. P INDICATES MICRO-MICRO FARAD. N INDICATES NANO FARAD. EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION. CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

## NOTE FOR PARTS LIST

1. Parts indicated by "nsp" on this table cannot be supplied.
2. When ordering a part, make a clear distinction between "1" and "I" (i) to avoid mis-supplying.
3. A part ordered without specifying its part number can not be supplied.
4. Part indicated by "@" mark is not illustrated in the exploded view.

**WARNING:** Parts indicated by the  $\triangle$  mark have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

## INSTRUCTIONS FOR HANDLING SEMICONDUCTORS AND OPTICAL UNIT


Electrostatic breakdown of the semi-conductors or optical pickup may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.

### 1. Ground for Human Body

Be sure to wear a grounding band (1 M ohm) that is properly grounded to remove any static electricity that may be charged on the body.

### 2. Ground for Workbench

Be sure to place a conductive sheet or copper plate with proper grounding (1 M ohm) on the work-bench or other surface, where the semi-conductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semi-conductors with your clothing.

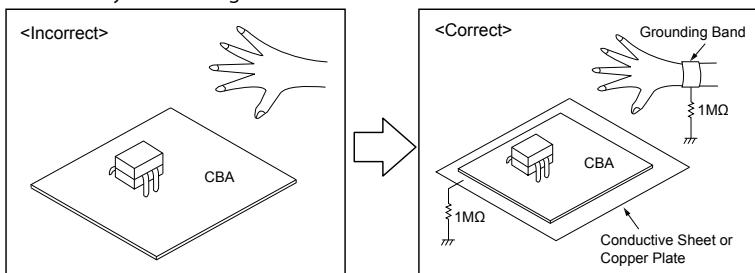


# Online Parts List


## Accessing the Parts List

- (1) Click the URL link on the cover of the service manual.

Examples of display

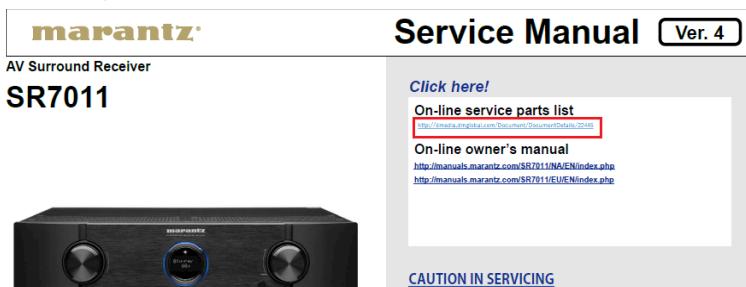

**NOTE:** If the web browser does not open automatically, copy the URL and paste it into the address bar of the web browser and then press Enter.

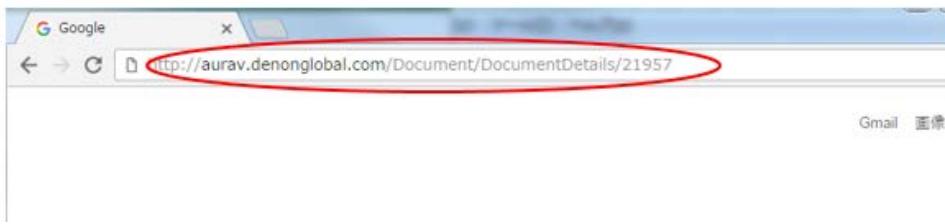

- (2) When the login screen is displayed, enter your username and password.  
(3) Enter the 5 letters shown as the blue CAPTCHA code as single-byte characters.

If the text is unclear, click "Refresh" to change the CAPTCHA code, and enter it again.



- (4) Press the "Login" button.

## Logging in to New SDI and Accessing the Parts List

- (1) Access New SDI from the URL below.

<<http://dmedia.dmgglobal.com>>

- (2) When the login screen is displayed, enter your username and password.

- (3) Enter the 5 letters shown as the blue CAPTCHA code as single-byte characters.  
If the text is unclear, click "Refresh" to change the CAPTCHA code, and enter it again.




- (4) Press the "Login" button.

- (5) When the Home screen is displayed, click "Advanced Search".




- (6) Enter the following search conditions and click "Search".

Keyword : Model name Brand : brand name Asset Type : Part list

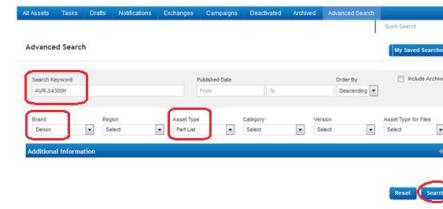

- (7) Click the model name when the search results are displayed.

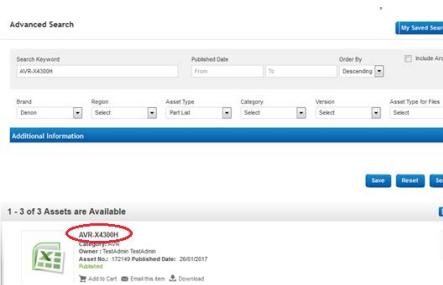

## Accessing the Part List from the Model Asset Screen

- Display Model Asset from New SDI.
- Click the section displayed as ▼ Link to Part Lists under the model name.

The screenshot shows the 'Additional Classification' section of a Model Asset screen. At the top left, there is a green icon of an Excel spreadsheet labeled 'Link to Part List'. Below it, there are fields for Brand (Dennon), Region (AP, JAPAN, NA, EU, AP - CHINA), Asset Type (SDI), and Category (AUR). A note at the bottom states: 'AVR-X4300H | Owner Administra... | Current Version 2.0 | Status Published | Published By Administra... | Published On 16/03/2017 |'. At the bottom of the screen, there is a table with columns: Image, Name, Added On, Asset Type, Size, Dimension, Public URL, and Download. One row is visible: 'AVR-X4300H\_V03.xlsx'.

**NOTE:** If the ▼ Link to Parts List section is not displayed, download the parts table from the Asset list.

## Downloading the Parts List as an Excel File

- Displays the Parts List. Click the Download icon.

The screenshot shows the 'Additional Classification' section of a Model Asset screen. At the top right, there is a 'Download Package (288.453 Kb)' button. Below it, there are fields for Brand (Dennon), Region (AP - JAPAN, NA, EU, AP - CHINA), Asset Type (Part List), and Category (AUR). A note at the bottom states: 'AVR-X4300H | Owner TestAdmin... | Current Version 1.0 | Status Published | Published By TestAdmin... | Published On 26/01/2017 |'. Below the classification section, there is a table with columns: Image, Name, Added On, Asset Type, Size, Dimension, Public URL, and Download. One row is visible: 'AVR-X4300H\_V03.xlsx'.

## PRINTED CIRCUIT BOARDS Parts Table

- Display the Parts List. Click the PCB name in the blue bar to display the parts list for the board.

The screenshot shows the 'Additional Classification' section of a Model Asset screen. In the blue bar at the top, the file name 'AVR-X4300H\_V03.xlsx' is highlighted with a red arrow. Below the blue bar, there is a table with columns: Revision history, NAME, FRONT, VIDEO, INPUT, MP3, PCH\_MP3, HOME, EXPLODED, and PACKING. The 'NAME' column contains the text 'AVR-X4300H\_V03.xlsx'. A note at the bottom states: 'AVR-X4300H\_V03.xlsx | Owner TestAdmin... | Current Version 1.0 | Status Published | Published By TestAdmin... | Published On 26/01/2017 |'.

Left and right arrow icons are displayed if the circuit board name does not fit in the blue bar. Click these icons to display a different part of the name when necessary.

The screenshot shows the 'Additional Classification' section of a Model Asset screen. In the blue bar at the top, the file name 'AVR-X4300H\_V03.xlsx' is displayed. Below the blue bar, there are two small circular arrows with arrows pointing left and right, indicating that the name can be scrolled. A note at the bottom states: 'Create Public URL'.

## Revision History

- Click "Revision history" in the blue bar.

The screenshot shows the 'Additional Classification' section of a Model Asset screen. In the blue bar at the top, the word 'Revision history' is highlighted with a red arrow. Below the blue bar, there is a table with columns: Sheet, Description, Part No., Part Name, Remarks, Notes, Q/C, New, Before the change, Ver, Date, and Comments. One row is visible: 'Sheet: E3, Description: REV01, Part No: 963204002020, Part Name: LRD012-2010 SOC002, Remarks: N/A, Notes: N/A, Q/C: N/A, New: N/A, Before the change: N/A, Ver: E3, Date: 26/01/2017, Comments: (0)'. A note at the bottom states: 'AVR-X4300H | Owner TestAdmin... | Current Version 1.0 | Status Published | Published By TestAdmin... | Published On 26/01/2017 |'.

The following details are displayed.

Sheet : Name of the changed sheet

Description : Description of the changes

Remarks : Destination, color information

Factories : Factory number

Ver : Version number after revision if changes were made to the parts list

Date : Date of changes

## Searching Part Numbers or Ref. Numbers

You can search a Parts List for part numbers or Ref. numbers.

- (1) Enter the part number or Ref. number in the search window of the Parts List, and press the search button.
- (2) The search results are displayed.

The name of the sheet in which the search part is used and the part's line are displayed.

Search Result(s) Found - 14						
S.No.	Sheet	REF No.	Part No.	Part Name	Remarks	Qty
1	MAIN	D4007	0002790401905	155133-D034-AKUAL LRC	K0000133000405	1
2	MAIN	D4016	0002790401905	155133-D034-AKUAL LRC	K0000133000405	1
3	MAIN	D4019	0002790401905	155133-D034-AKUAL LRC	K0000133000405	1
4	MAIN	D4031_4032	0002790401905	155133-D034-AKUAL LRC	K0000133000405	2
5	MAIN	D4037	0002790401905	155133-D034-AKUAL LRC	K0000133000405	1
6	INPUT	D4219_4212	0002790401905	155133-D034-AKUAL LRC	K0000133000405	3
7	SMP	D4150	0002790401905	155133-D034-AKUAL LRC	K0000133000405	1

- (3) Next, click the "Sheet" section of the search results.

Search Result(s) Found - 14						
S.No.	Sheet	REF No.	Part No.	Part Name	Remarks	Qty
1	MAIN	D4007	0002790401905	155133-D034-AKUAL LRC	K0000133000405	1
2	MAIN	D4016	0002790401905	155133-D034-AKUAL LRC	K0000133000405	1
3	MAIN	D4019	0002790401905	155133-D034-AKUAL LRC	K0000133000405	1

- (4) The Board Part Table opens and the line on which the searched part number appears is highlighted.

MAIN PCB ASSY						
!!Parts indicated by * are not supplied.						
!!The parts listed below are only for maintenance. Therefore they might differ from the parts used in the unit in appearances or dimensions.						
NOTES: The column remarks indicate the following destinations.						
EEU: U.S.A. & Canada model EEU; Europe model E1C; China model E1; Asia model JP; Japan model						
BB: Black model BP; Premium Silver model						
REF No.	Part No.	Part Name	Remarks	Qty	New	Ver
<b>D4009-4009</b>	9632015001170	LBAS15HT110 FAST SWITCHING SOD-323		K0050414602305	5	
<b>D4010</b>	9622050002000	DIOICE BRIDGE D105800 500V/10A STRAIGHT TYPE		K0471000002205	1	
<b>D4011</b>	9632015001700	LBAS15HT110 FAST SWITCHING SOD-323		K0050414602305	1	
<b>D4014</b>	9632015001900	1N4007 52REEL 1000V 1A		K0004007002208	1	
<b>D4018</b>	0002790401905	155133-D034-AKUAL LRC		K0000133000405	1	

# CAUTION IN SERVICING.


## Initializing This Unit

Make sure to initialize this unit after replacing the microcomputer or any peripheral equipment, or the digital PCB.

1. Press the power button to turn off the power.
  2. While holding down buttons "MOVIE" and "MUSIC" simultaneously, press the power button to turn on the power.
  3. Release the buttons after confirming that the display flashes at 1-second intervals.  
\* The unit is initialized.
- Use network initialization mode to initialize the network related settings.

**NOTE :**

- If the unit fails to enter the service mode in step 3, repeat the procedure from step 1.
- Initializing the device restores the customized settings to the factory settings. Write down your settings in advance and reconfigure the settings after initialization.

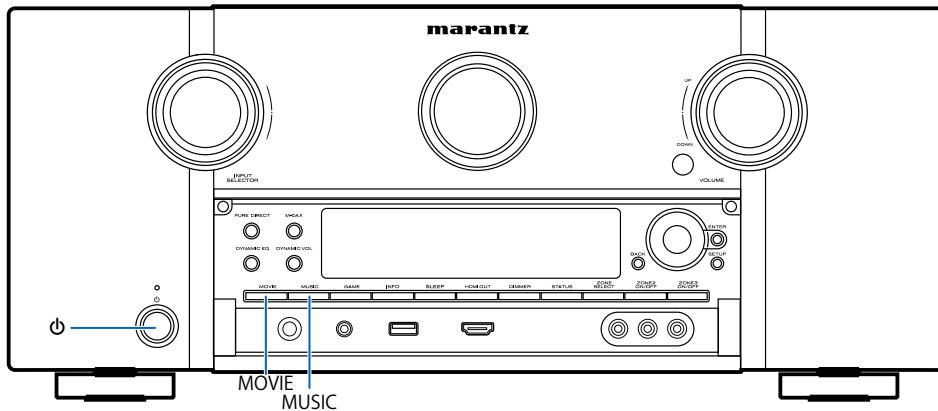

## JIG FOR SERVICING

Use the following jigs (extension cable kit) when repairing the PCBs.

Order with your dealer for the jigs your dealer if necessary.

8U-1100845 : EXTENSION UNIT KIT : 1 Set  
8U-1101365 : EXTENSION UNIT KIT : 1 Set  
(See [JIG FOR SERVICING](#))

# ELECTRICAL

## SCHEMATIC DIAGRAMS

[SCH01\\_DIGITAL CONNECT](#)  
[SCH02\\_DIGITAL POWER](#)  
[SCH03\\_MAIN CPU](#)  
[SCH04\\_EXPANDER](#)  
[SCH05\\_CPU LEVEL CHG](#)  
[SCH06\\_DIR](#)  
[SCH07\\_AUDIO PLD](#)  
[SCH08\\_DSP1](#)  
[SCH09\\_DSP2](#)  
[SCH10\\_DSP3](#)  
[SCH11\\_DSP4](#)  
[SCH12\\_ADC](#)  
[SCH13\\_ZONE, LEGO DAC](#)  
[SCH14\\_LEG0](#)  
[SCH15\\_VIDEO DECODER](#)  
[SCH16\\_HDMI SW2](#)  
[SCH17\\_HDMI SW1](#)  
[SCH18\\_VSP & IP & OSD](#)  
[SCH19\\_VIDEO PLD](#)  
[SCH20\\_HDMI TX & ARC](#)  
[SCH21\\_INPUT](#)  
[SCH22\\_PREOUT](#)  
[SCH23\\_F-HDMI](#)  
[SCH24\\_A-VIDEO](#)  
[SCH25\\_RC-5](#)  
[SCH26\\_RS232C\\_TRIGGER](#)  
[SCH27\\_SIDE CNT](#)  
[SCH28\\_FRT CNT](#)  
[SCH29\\_MAIN DAC1](#)  
[SCH30\\_MAIN DAC2](#)  
[SCH31\\_XLR](#)  
[SCH32\\_REGULATOR](#)  
[SCH33\\_FRONT](#)  
[SCH34\\_HDAM1](#)

[SCH35\\_HDAM2](#)  
[SCH36\\_HDAM3](#)  
[SCH37\\_HDAM4](#)  
[SCH38\\_HDAM5](#)  
[SCH39\\_SMPS](#)

## PRINTED CIRCUIT BOARDS

[DIGITAL](#)  
[INPUT, F-HDMI, FRONT CABLE](#)  
[VIDEO, GUIDE, SIDE CNT, GUIDE FFC1](#)  
[XLR\(Aside\), FUSE](#)  
[XLR\(Bside\), FRONT CNT](#)  
[FRONT, FHDMI FFC TOP, FRONT SW, HP, FHDMI FFC](#)  
[TOP B](#)  
[HDAM, SMPS](#)

## LEVEL DIAGRAM

[FRONT ch](#)  
[CENTER / SURROUND ch](#)  
[SUBWOOFER ch](#)  
[ASSIGN1 / 2 \(SURR.BACK / HEIGHT1 / HEIGHT2\) ch](#)  
[ZONE2 / ZONE3 ch](#)

## BLOCK DIAGRAM

[ANALOG AUDIO DIAGRAM](#)  
[DIGITAL AUDIO DIAGRAM](#)  
[VIDEO DIAGRAM](#)  
[HDMI DIAGRAM](#)

## POWER DIAGRAM

## WIRING DIAGRAM

## SEMICONDUCTORS

[1. IC's](#)  
[2. FL DISPLAY](#)  
[3. Remote Code Table](#)

# SCHEMATIC DIAGRAMS

SCH01\_DIGITAL CONNECT


## **Caution in servicing**

Electrical

Mechanical

## Repair Information

Updating

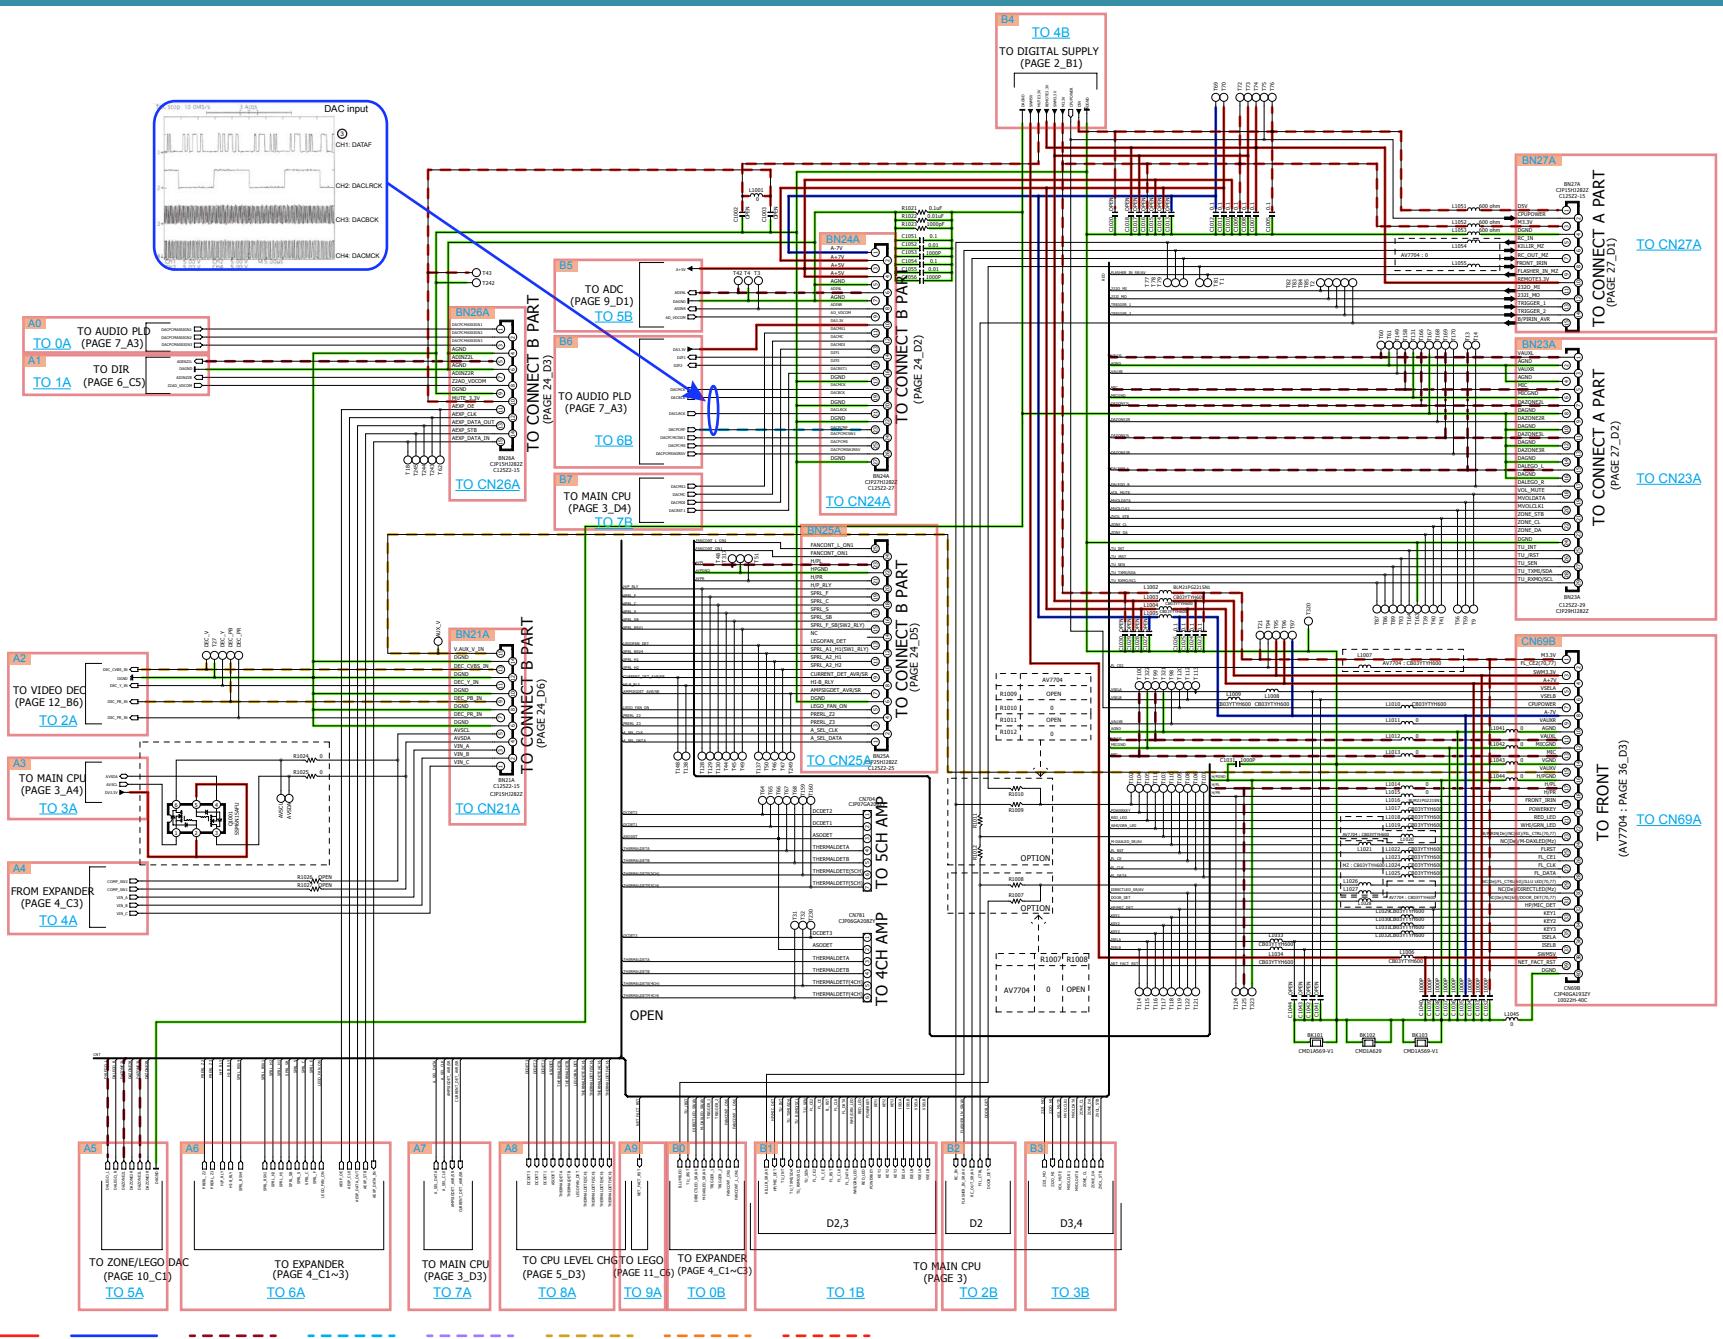

---

GND LINE

---

POWER+ LINE

---

POWER-LINE

- - - - - ANALOG AUDIO

DIGITAL AUDIO


MDS SIGNAL

— ANALOG VIDEO —


DIGITAL VIDEO


-----  
TBY POWER

## SCH02\_DIGITAL POWER

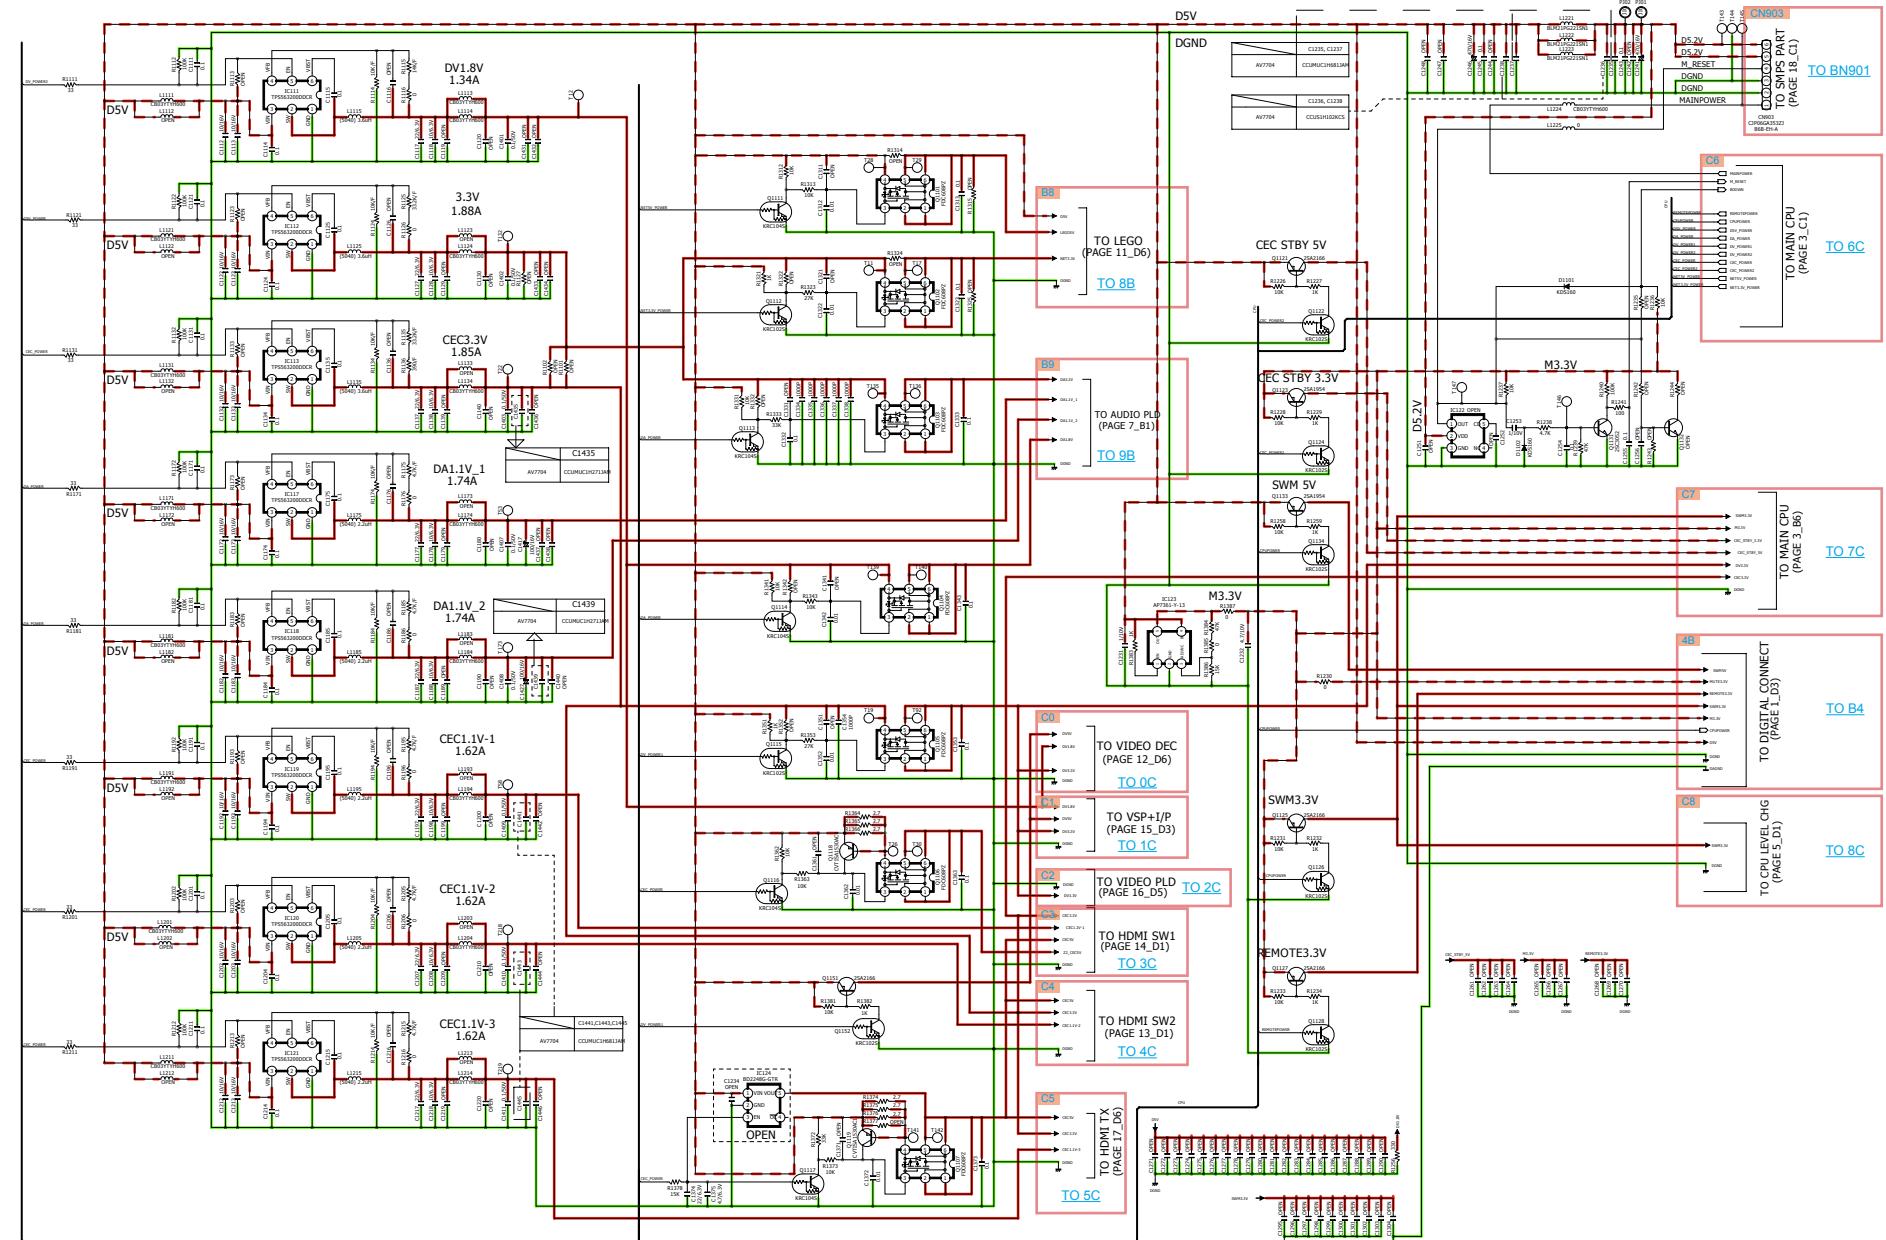


## SCH03\_MAIN CPU

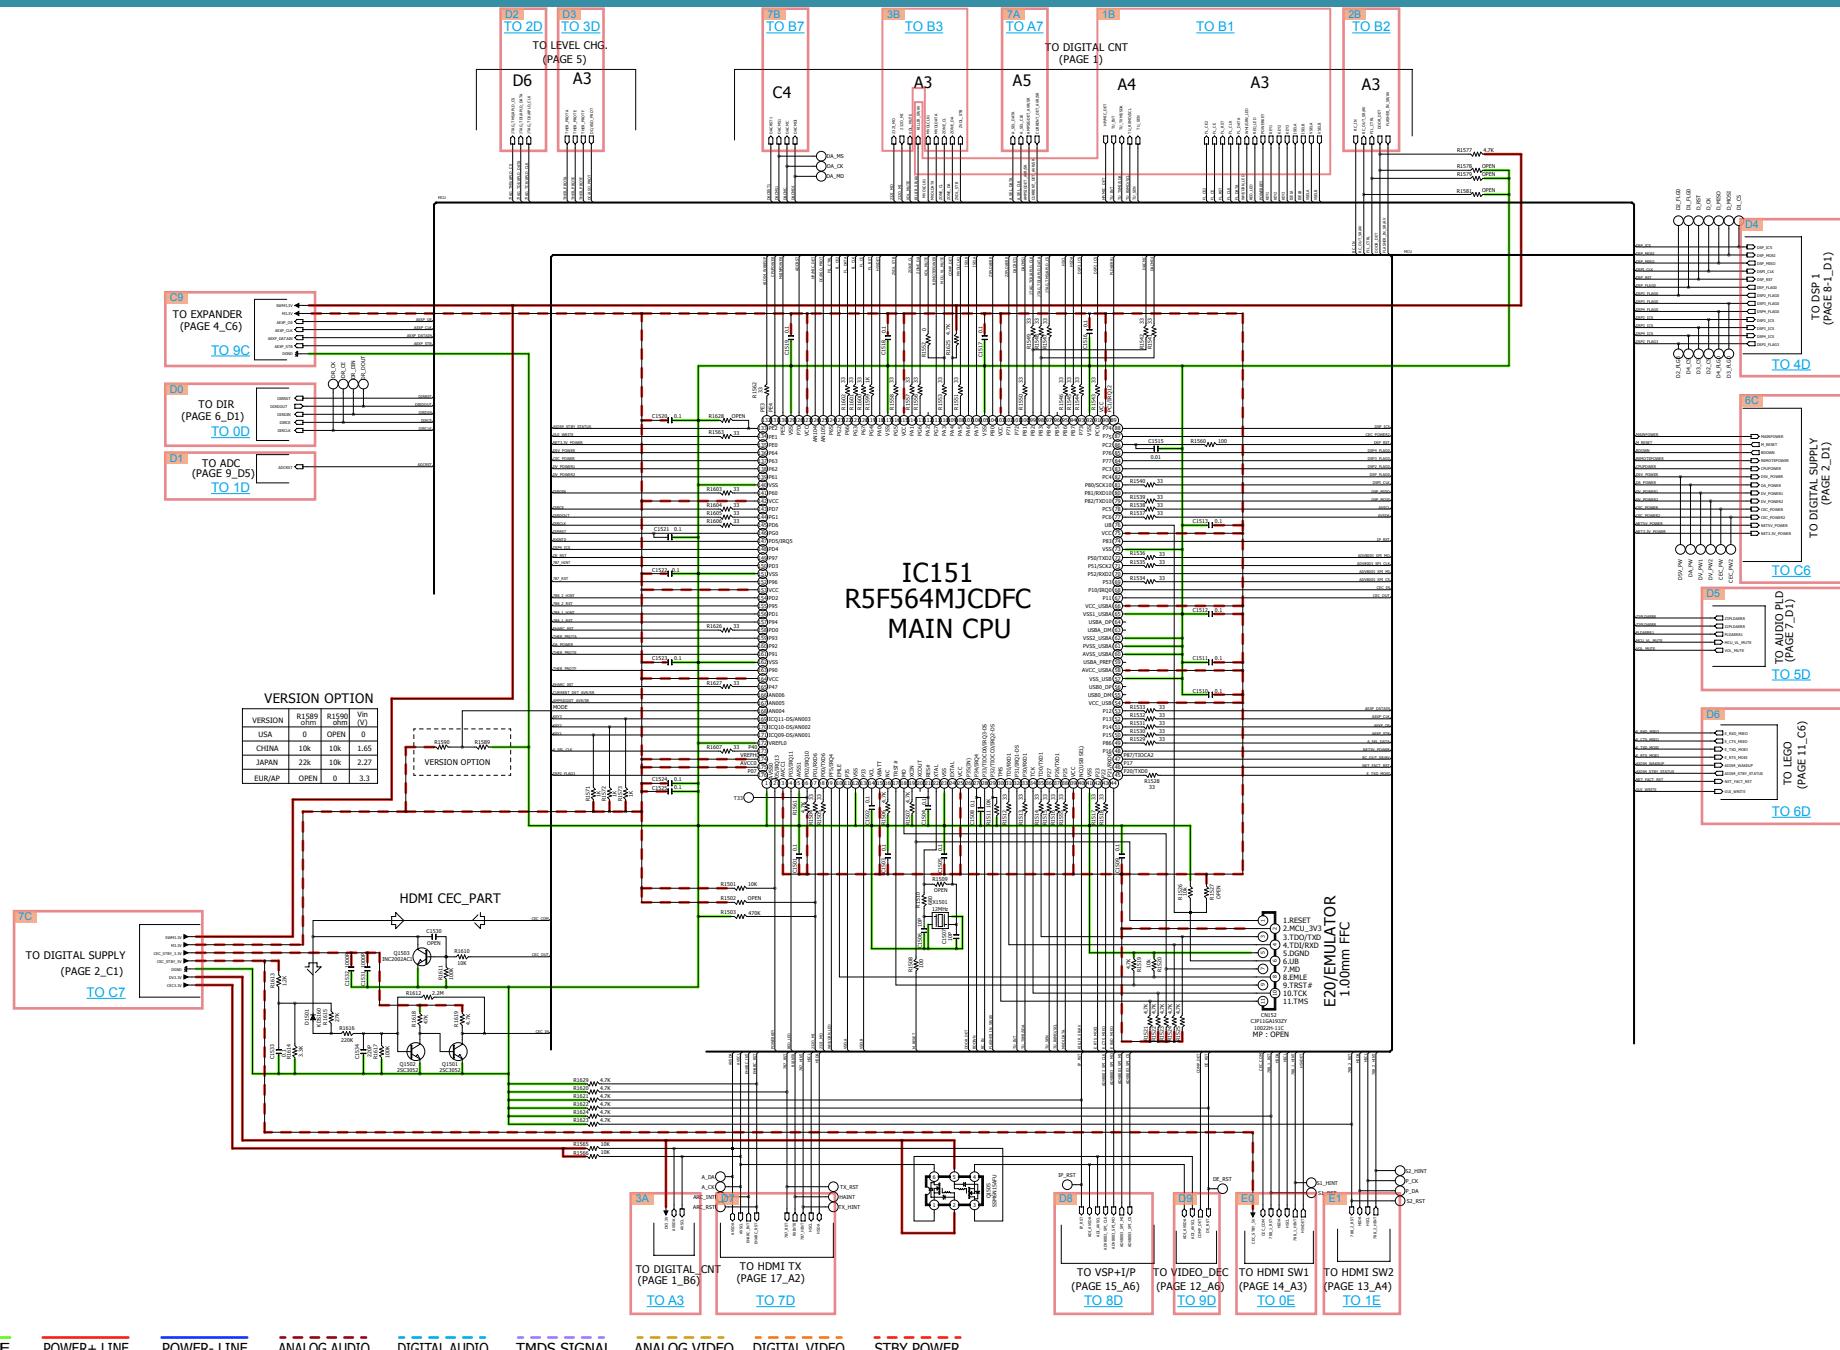


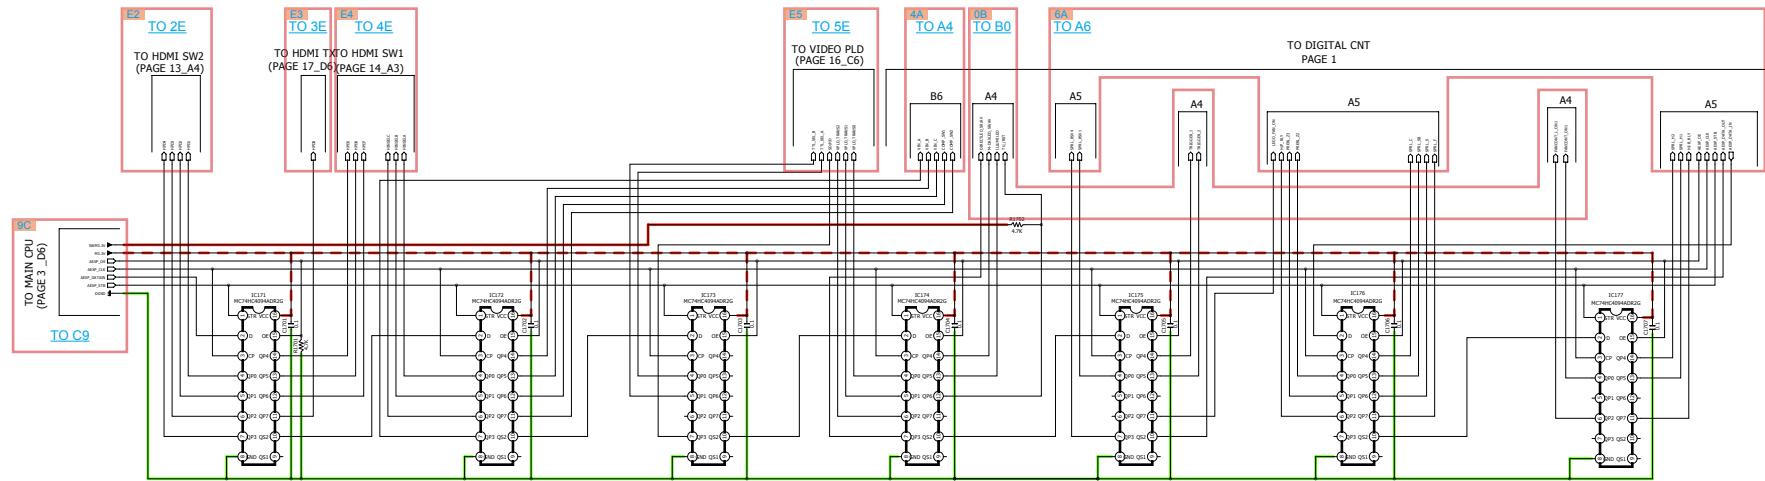


**GND LINE**      **POWER+ LINE**      **POWER- LINE**      **ANALOG AUDIO**      **DIGITAL AUDIO**      **TMDS SIGNAL**      **ANALOG VIDEO**      **DIGITAL VIDEO**      **STBY POWER**

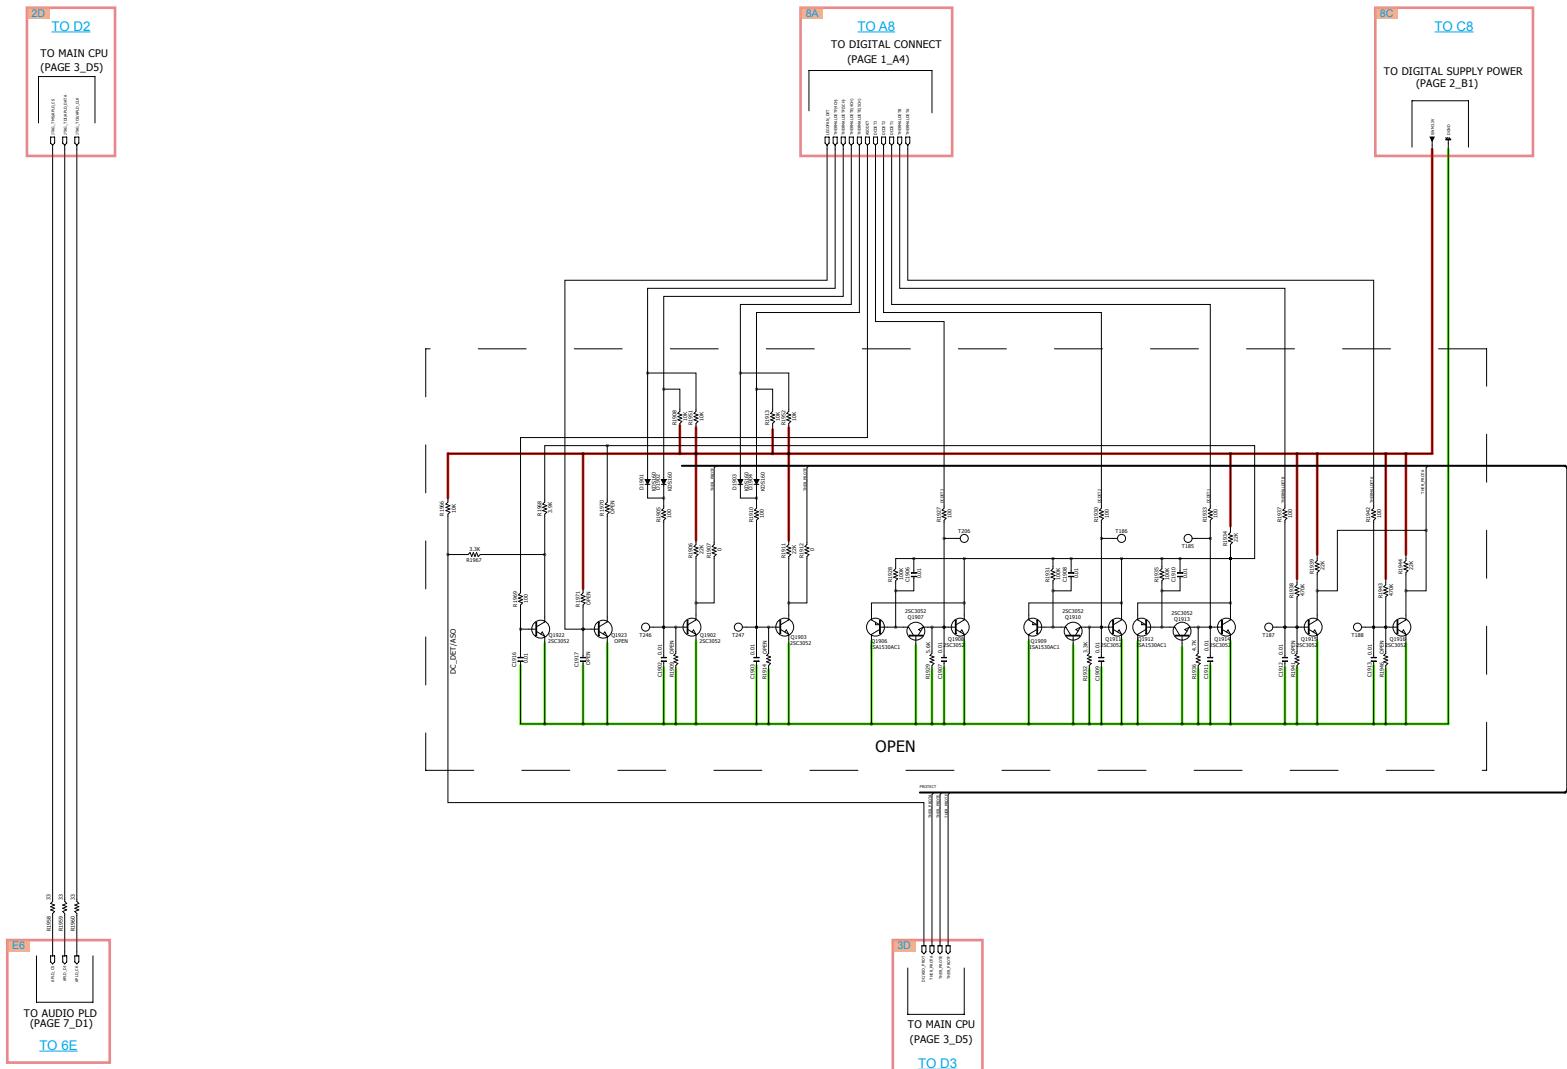



**GND LINE**    **POWER+ LINE**    **POWER- LINE**    **ANALOG AUDIO**    **DIGITAL AUDIO**    **TMDS SIGNAL**    **ANALOG VIDEO**    **DIGITAL VIDEO**    **STBY POWER**

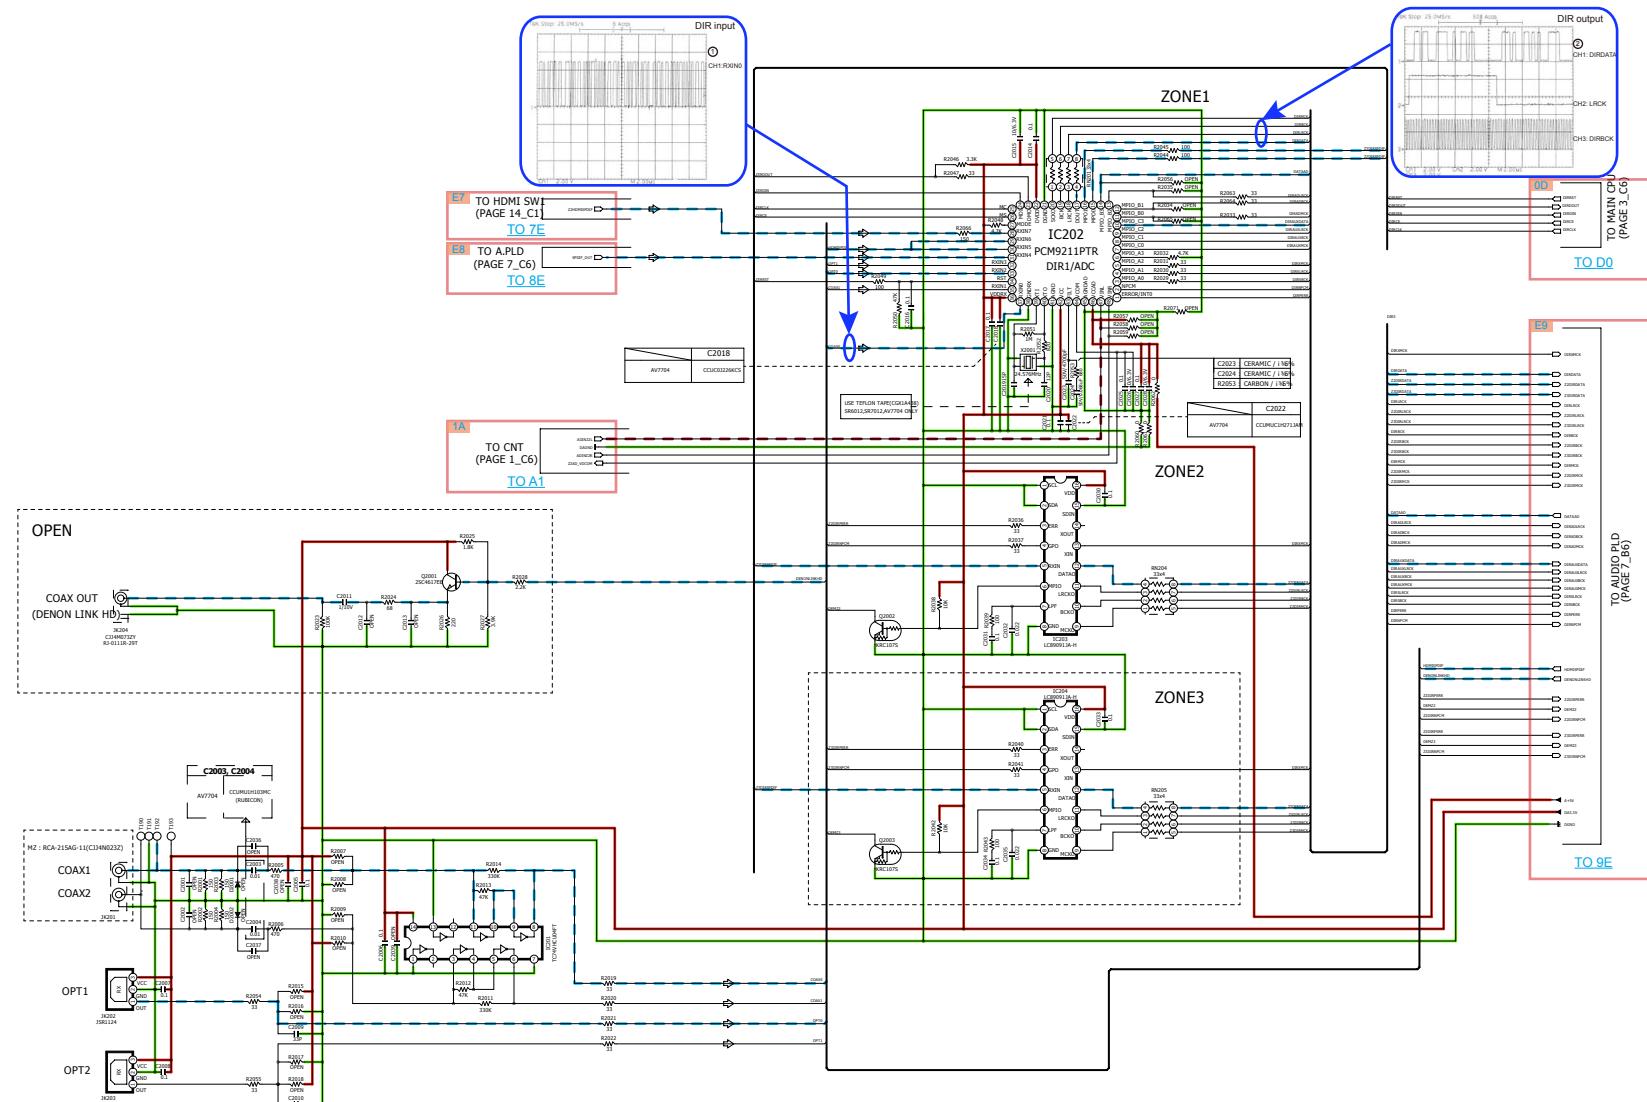


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

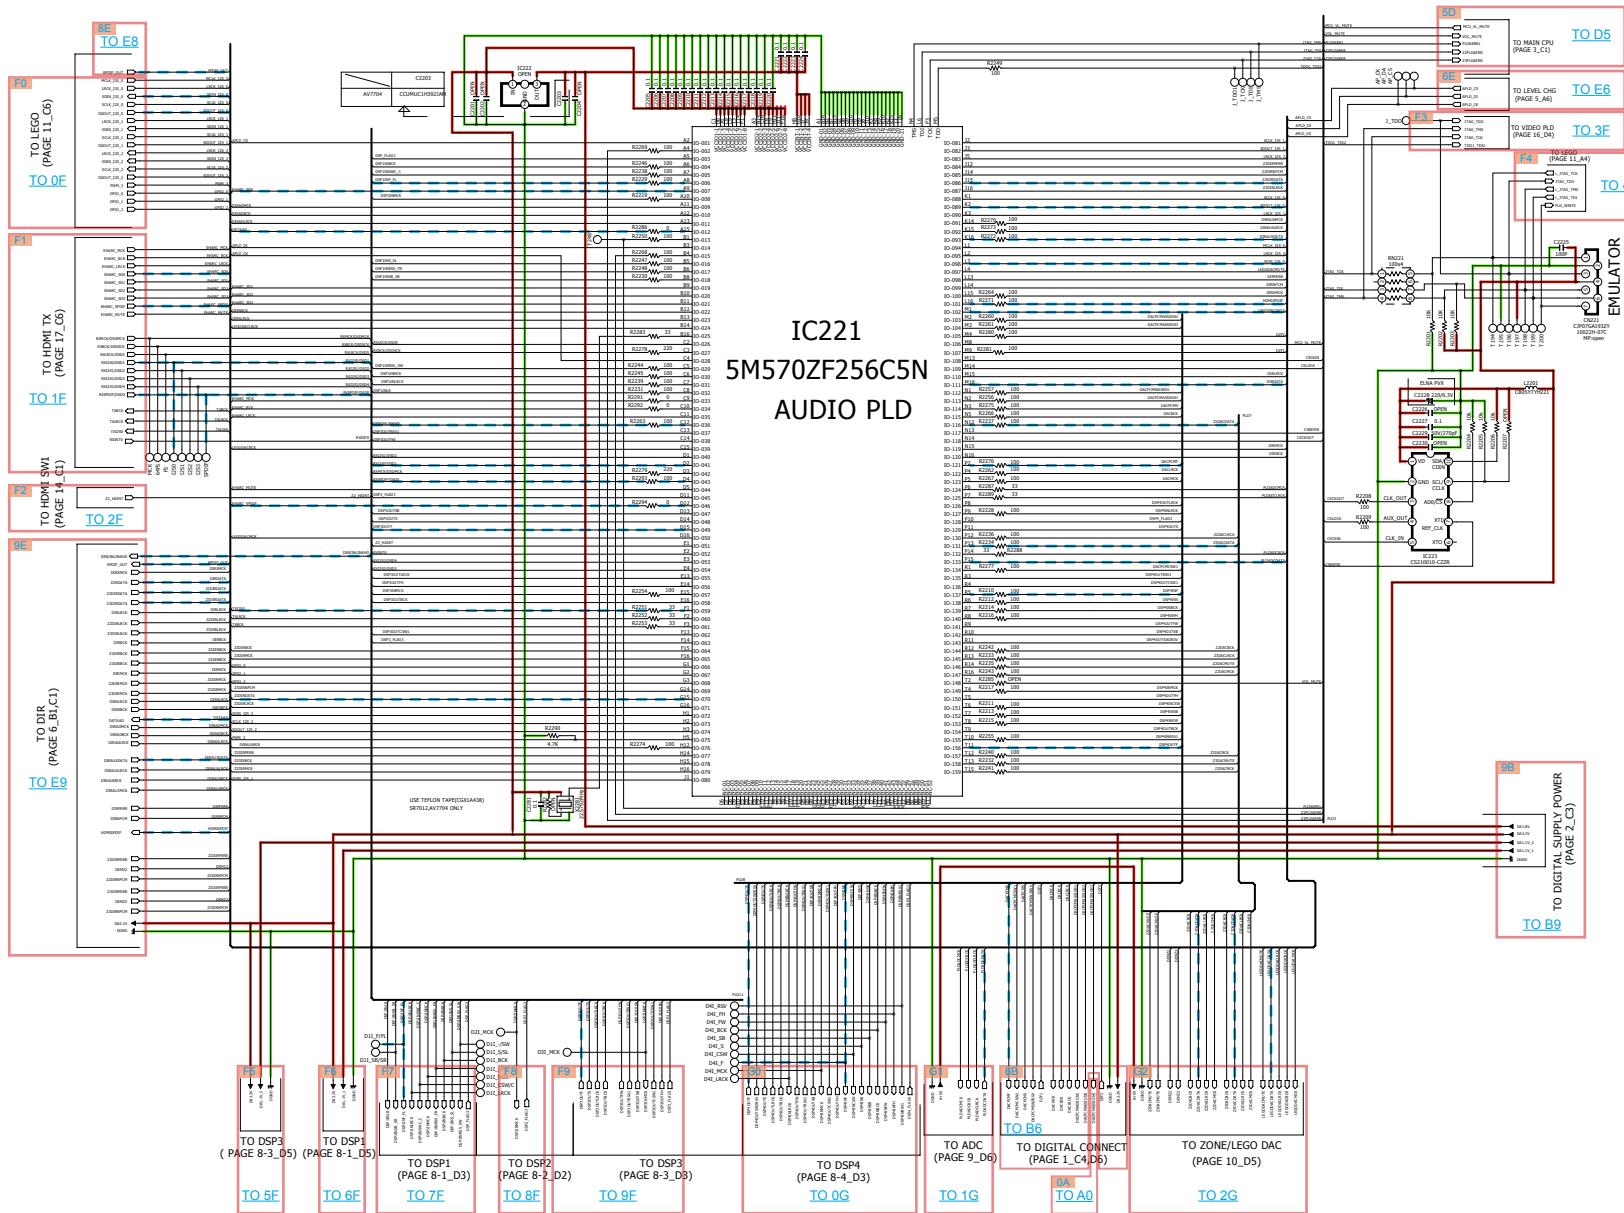


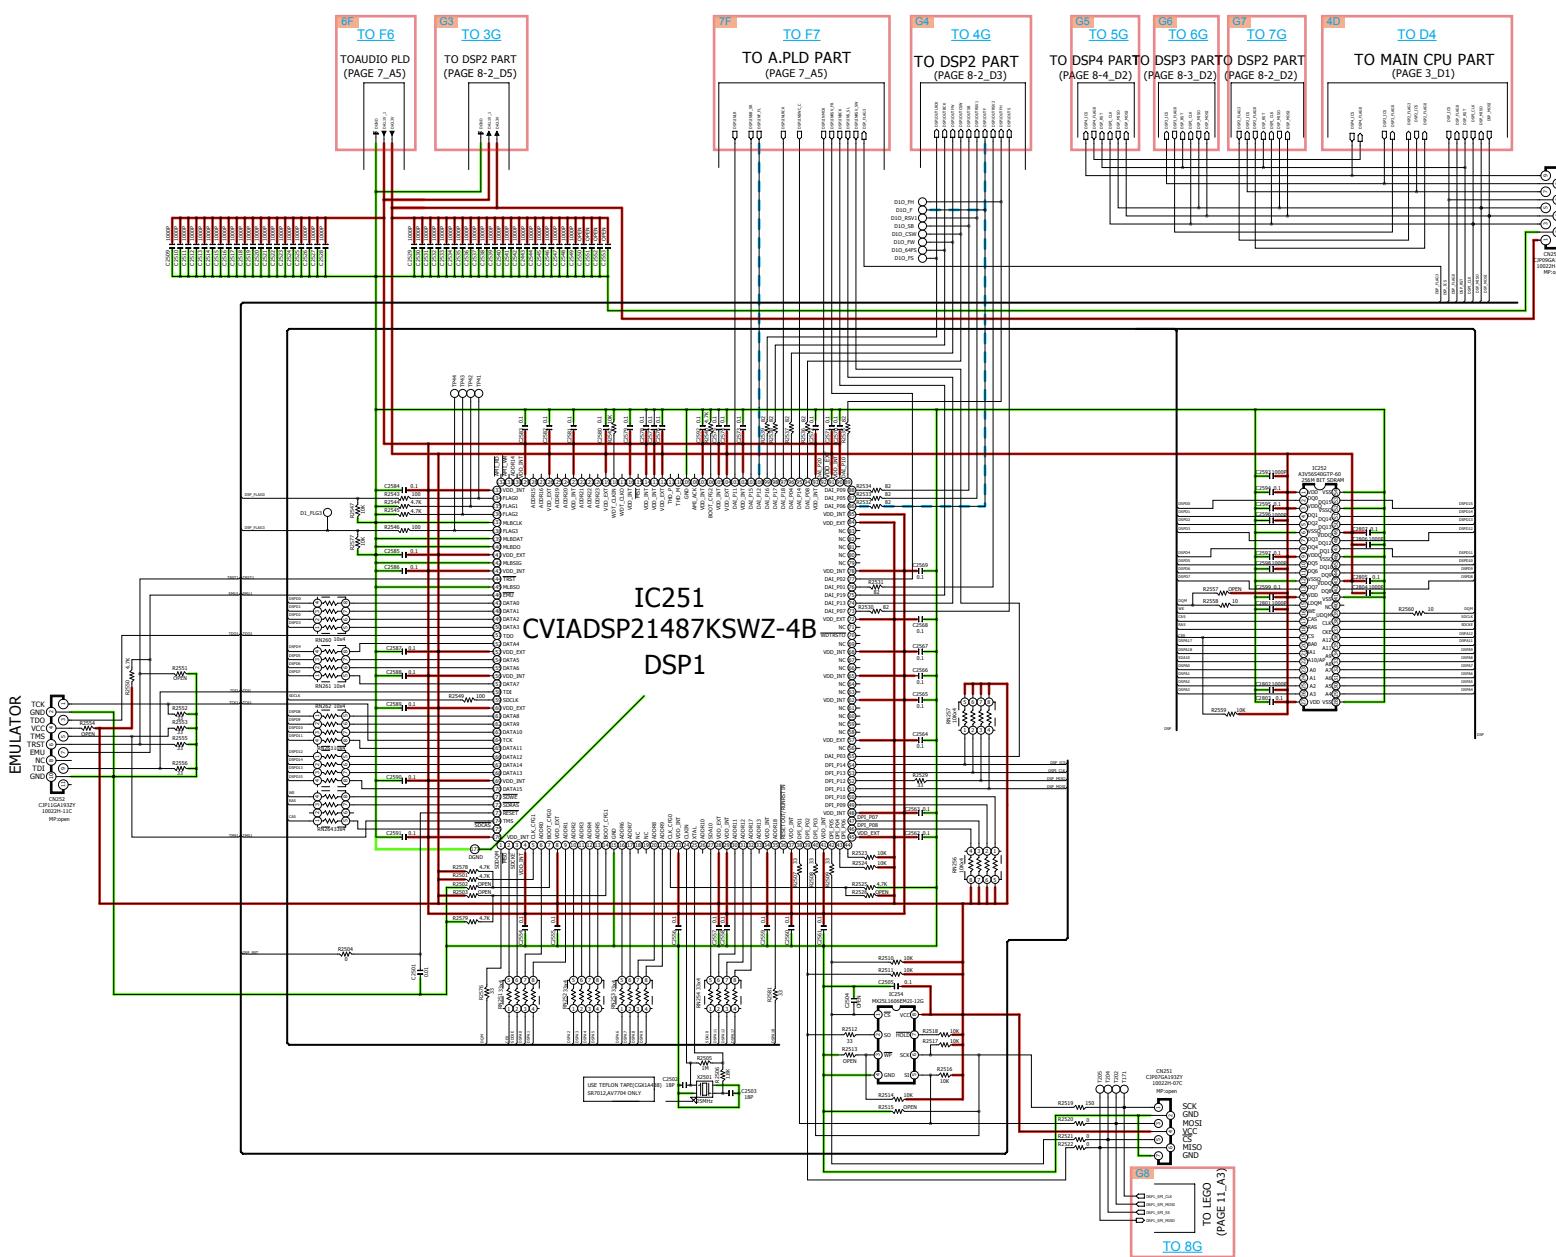

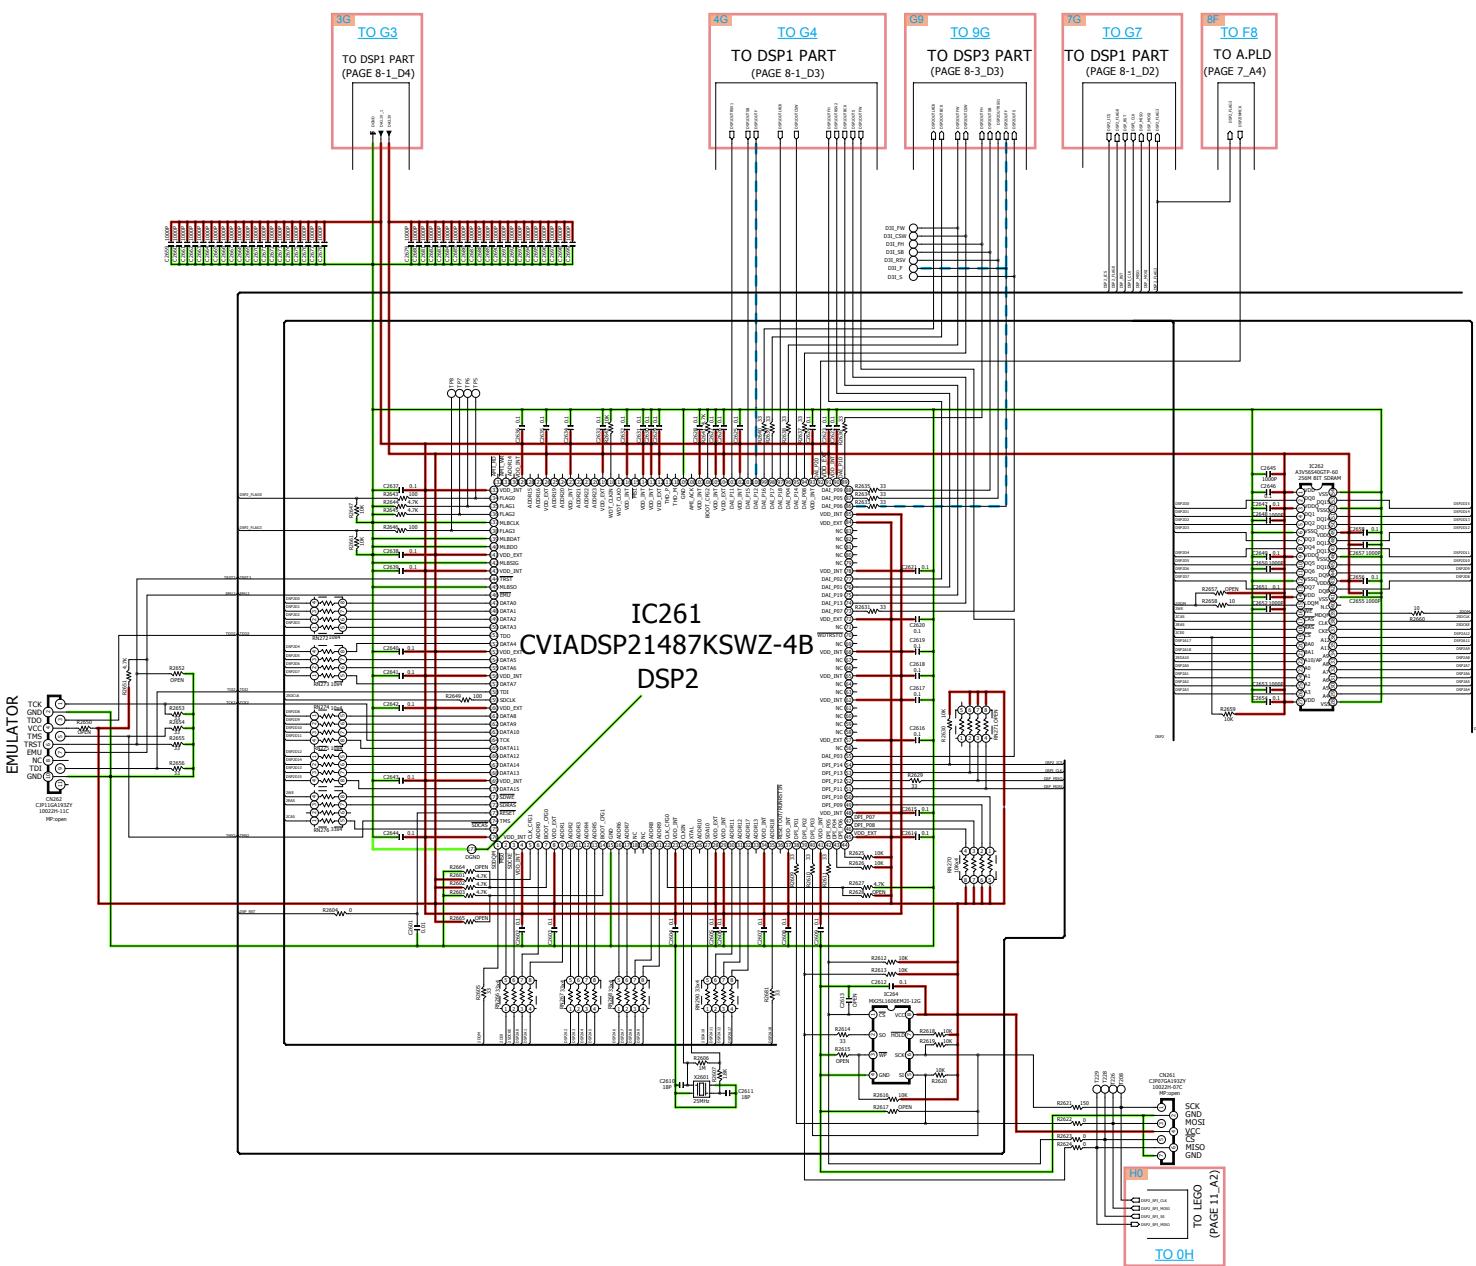



GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

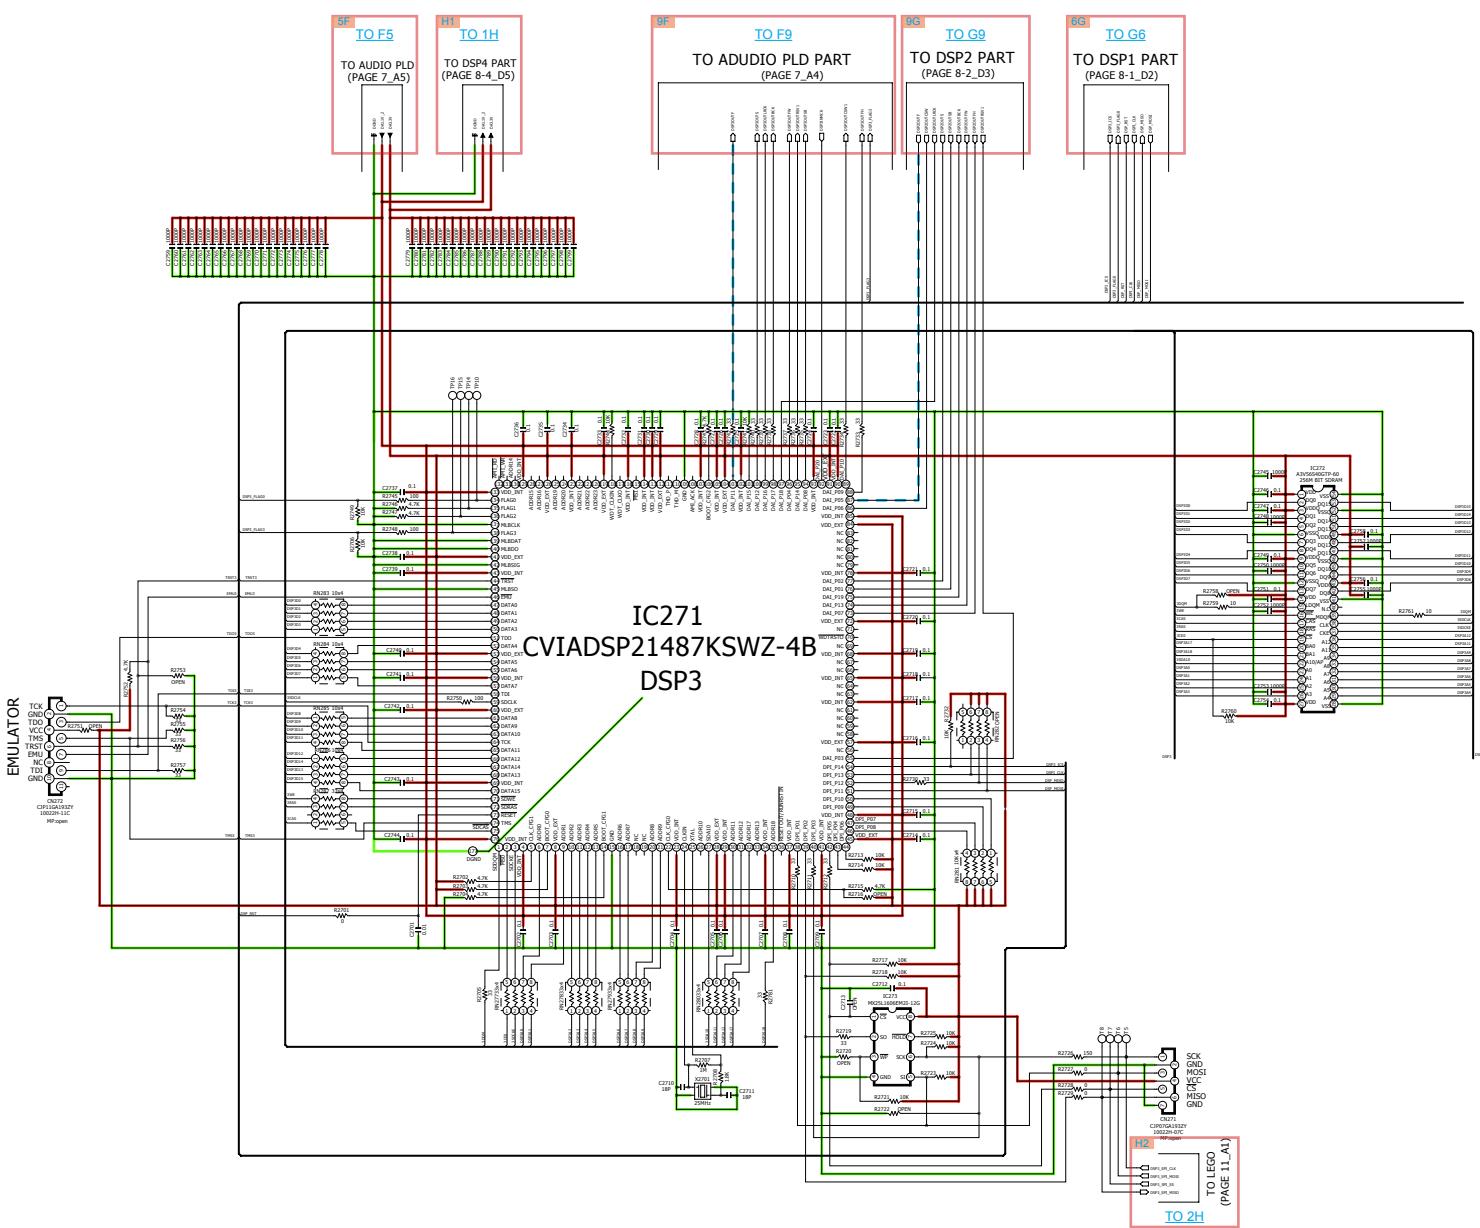

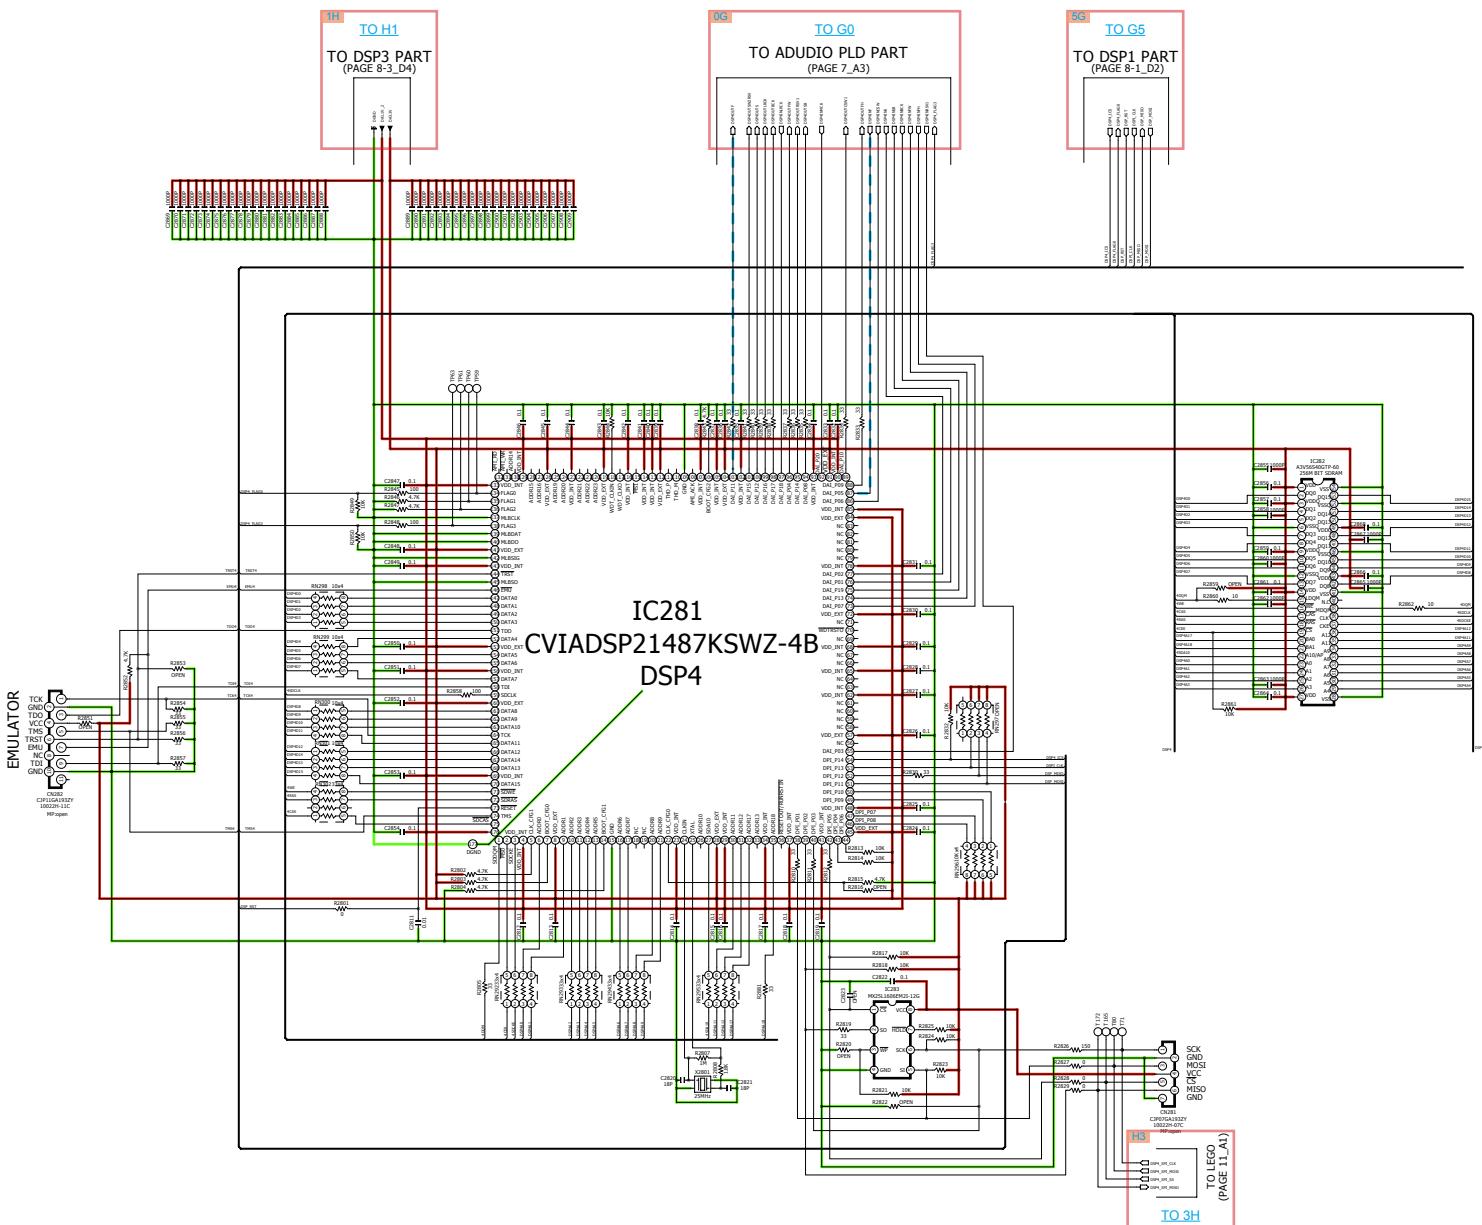


**GND LINE**    **POWER+ LINE**    **POWER- LINE**    **ANALOG AUDIO**    **DIGITAL AUDIO**    **TMDS SIGNAL**    **ANALOG VIDEO**    **DIGITAL VIDEO**    **STBY POWER**

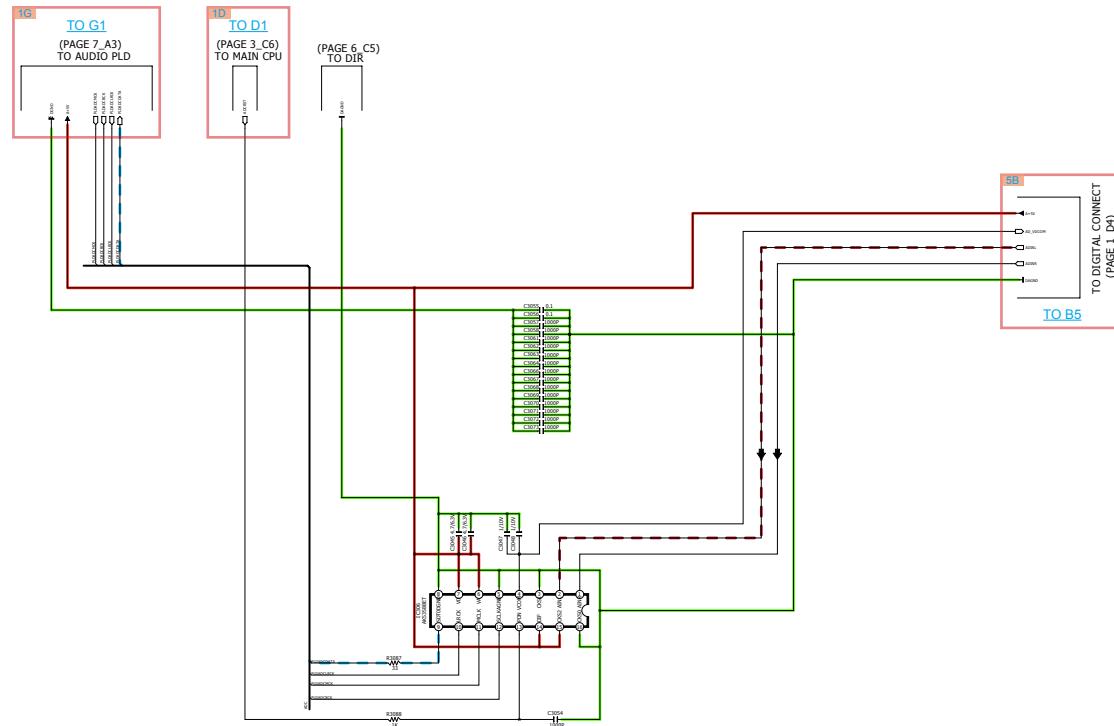

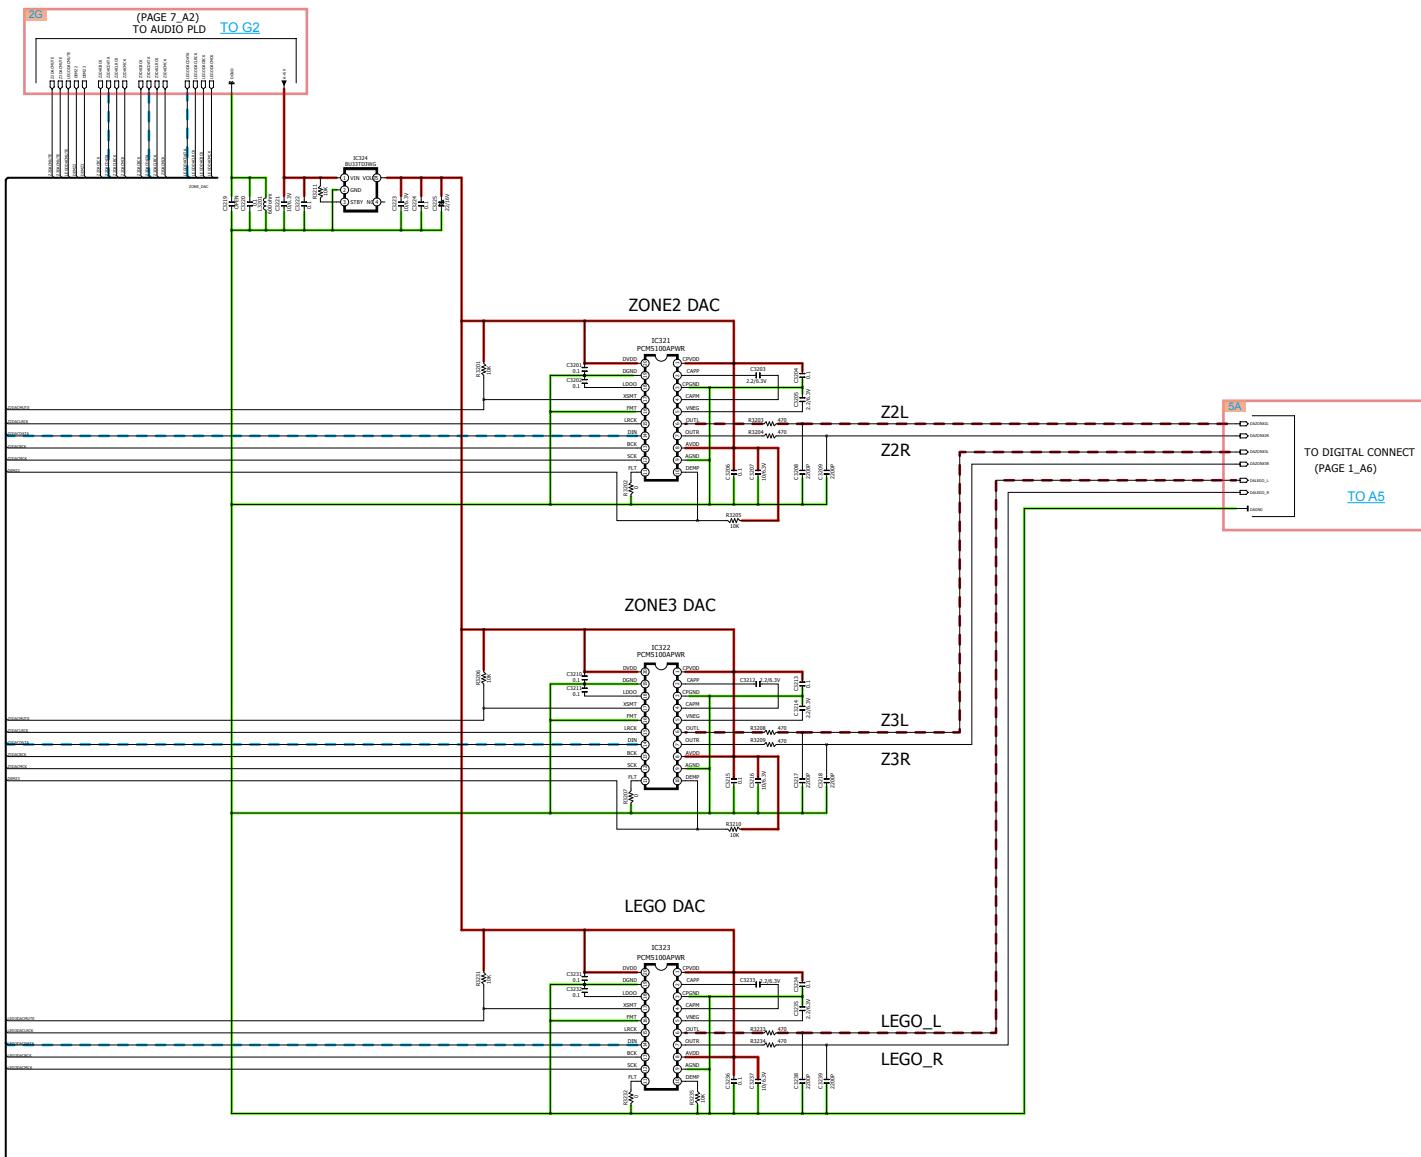


**GND LINE**    **POWER+ LINE**    **POWER- LINE**    **ANALOG AUDIO**    **DIGITAL AUDIO**    **TMDS SIGNAL**    **ANALOG VIDEO**    **DIGITAL VIDEO**    **STBY POWER**


## FROM LEGO MODULE

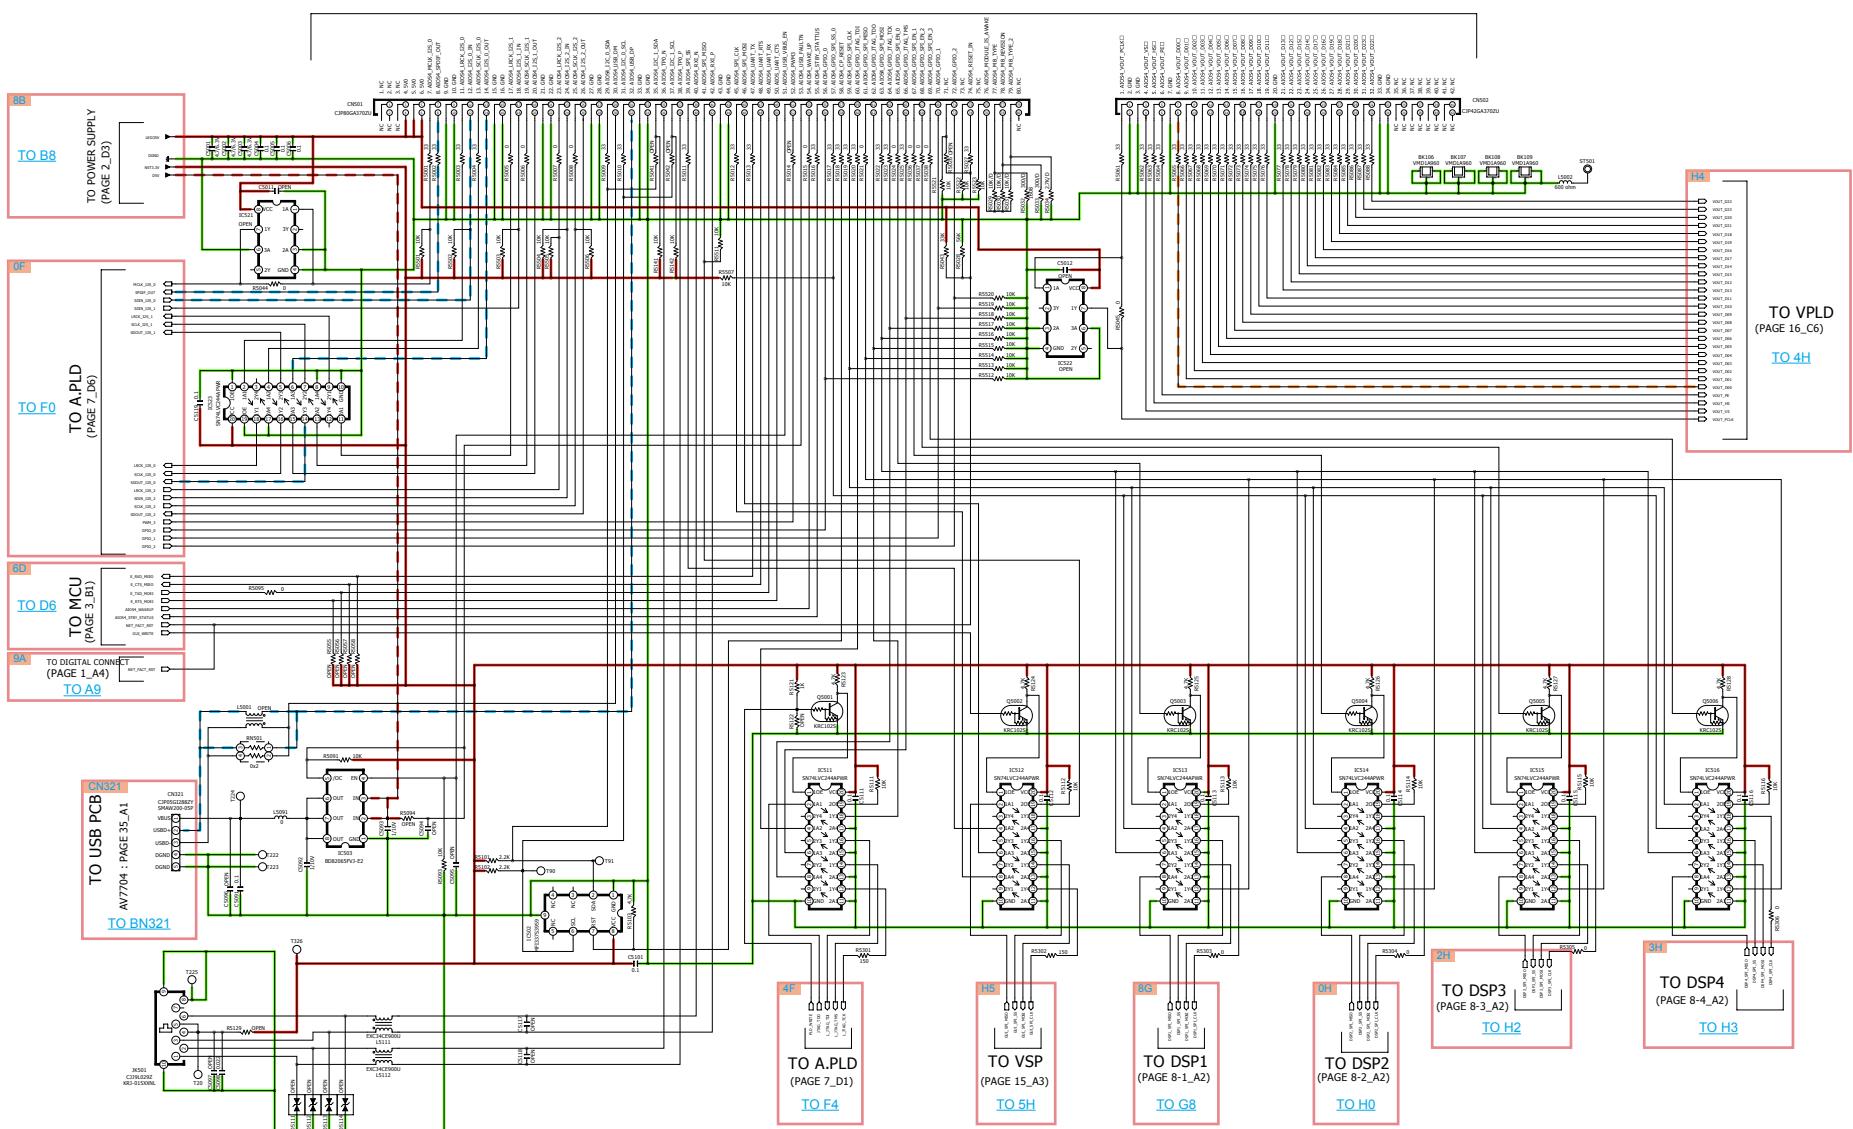

GND LINE    POWER+ LINE    POWER- LINE    ANALOG AUDIO    DIGITAL AUDIO    TMDS SIGNAL    ANALOG VIDEO    DIGITAL VIDEO    STBY POWER

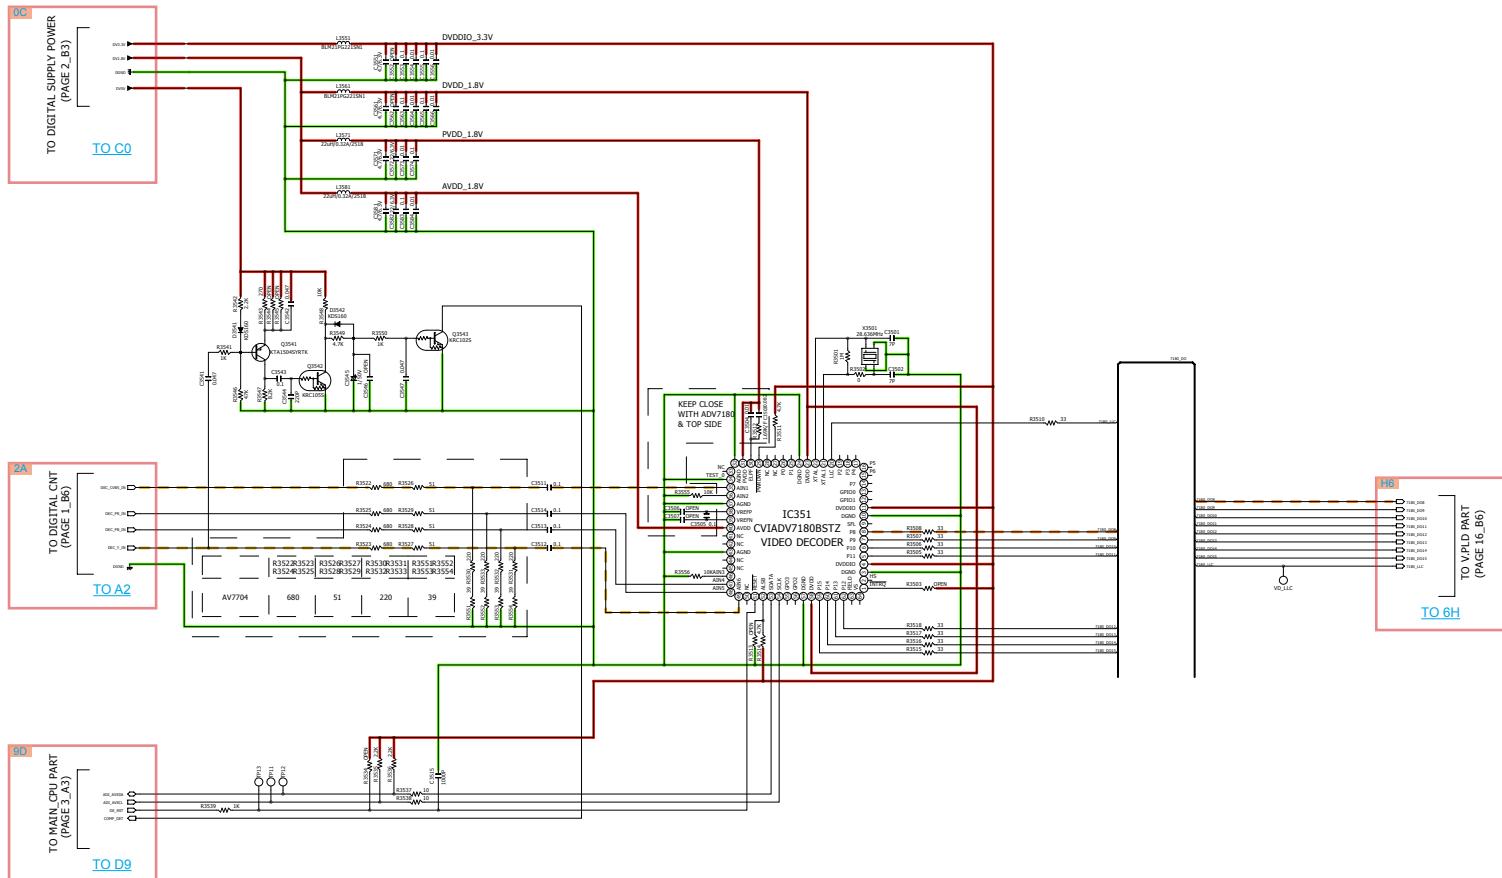

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

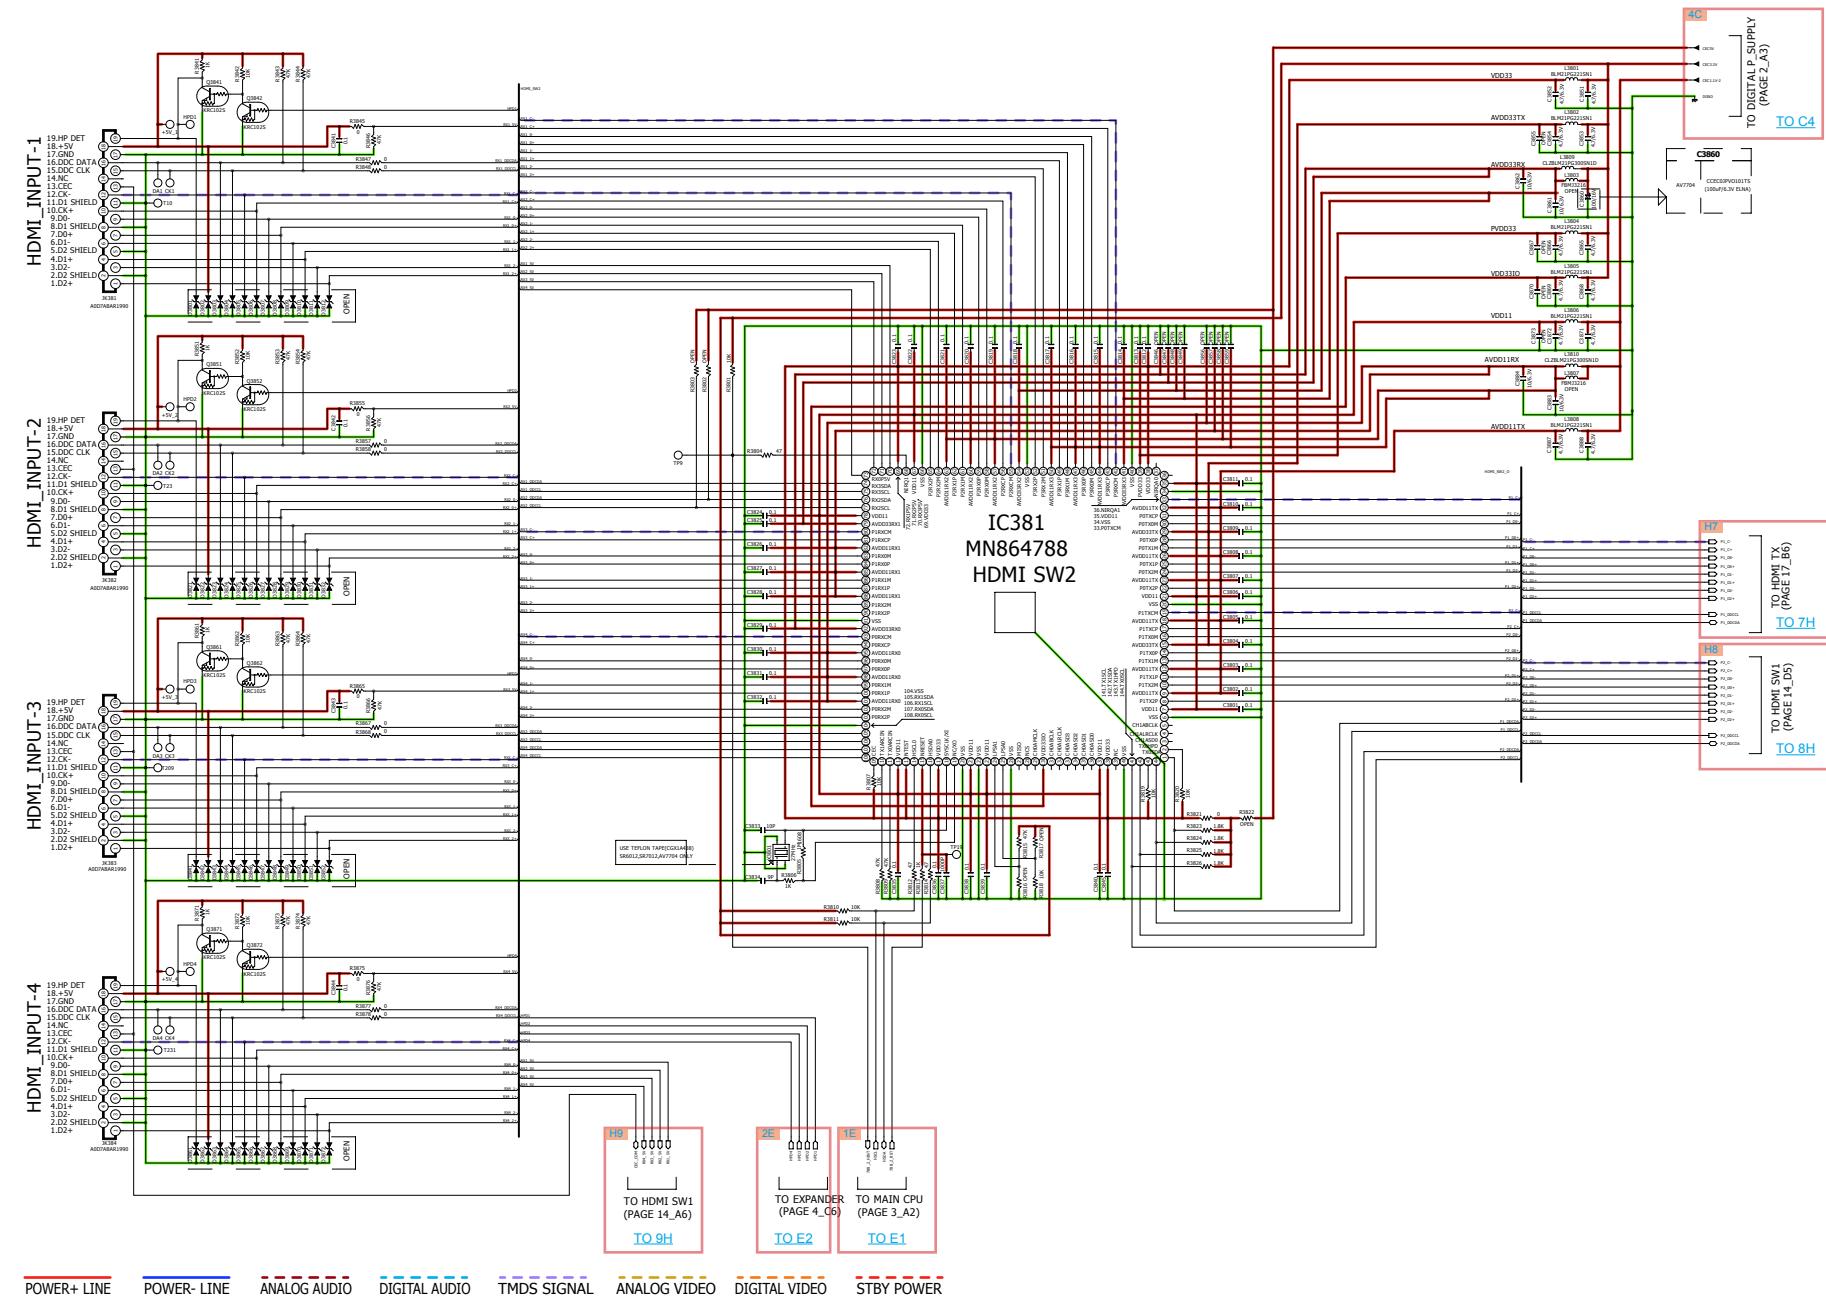


Caution in servicing

Electrical


Mechanical


Repair Information

Updating

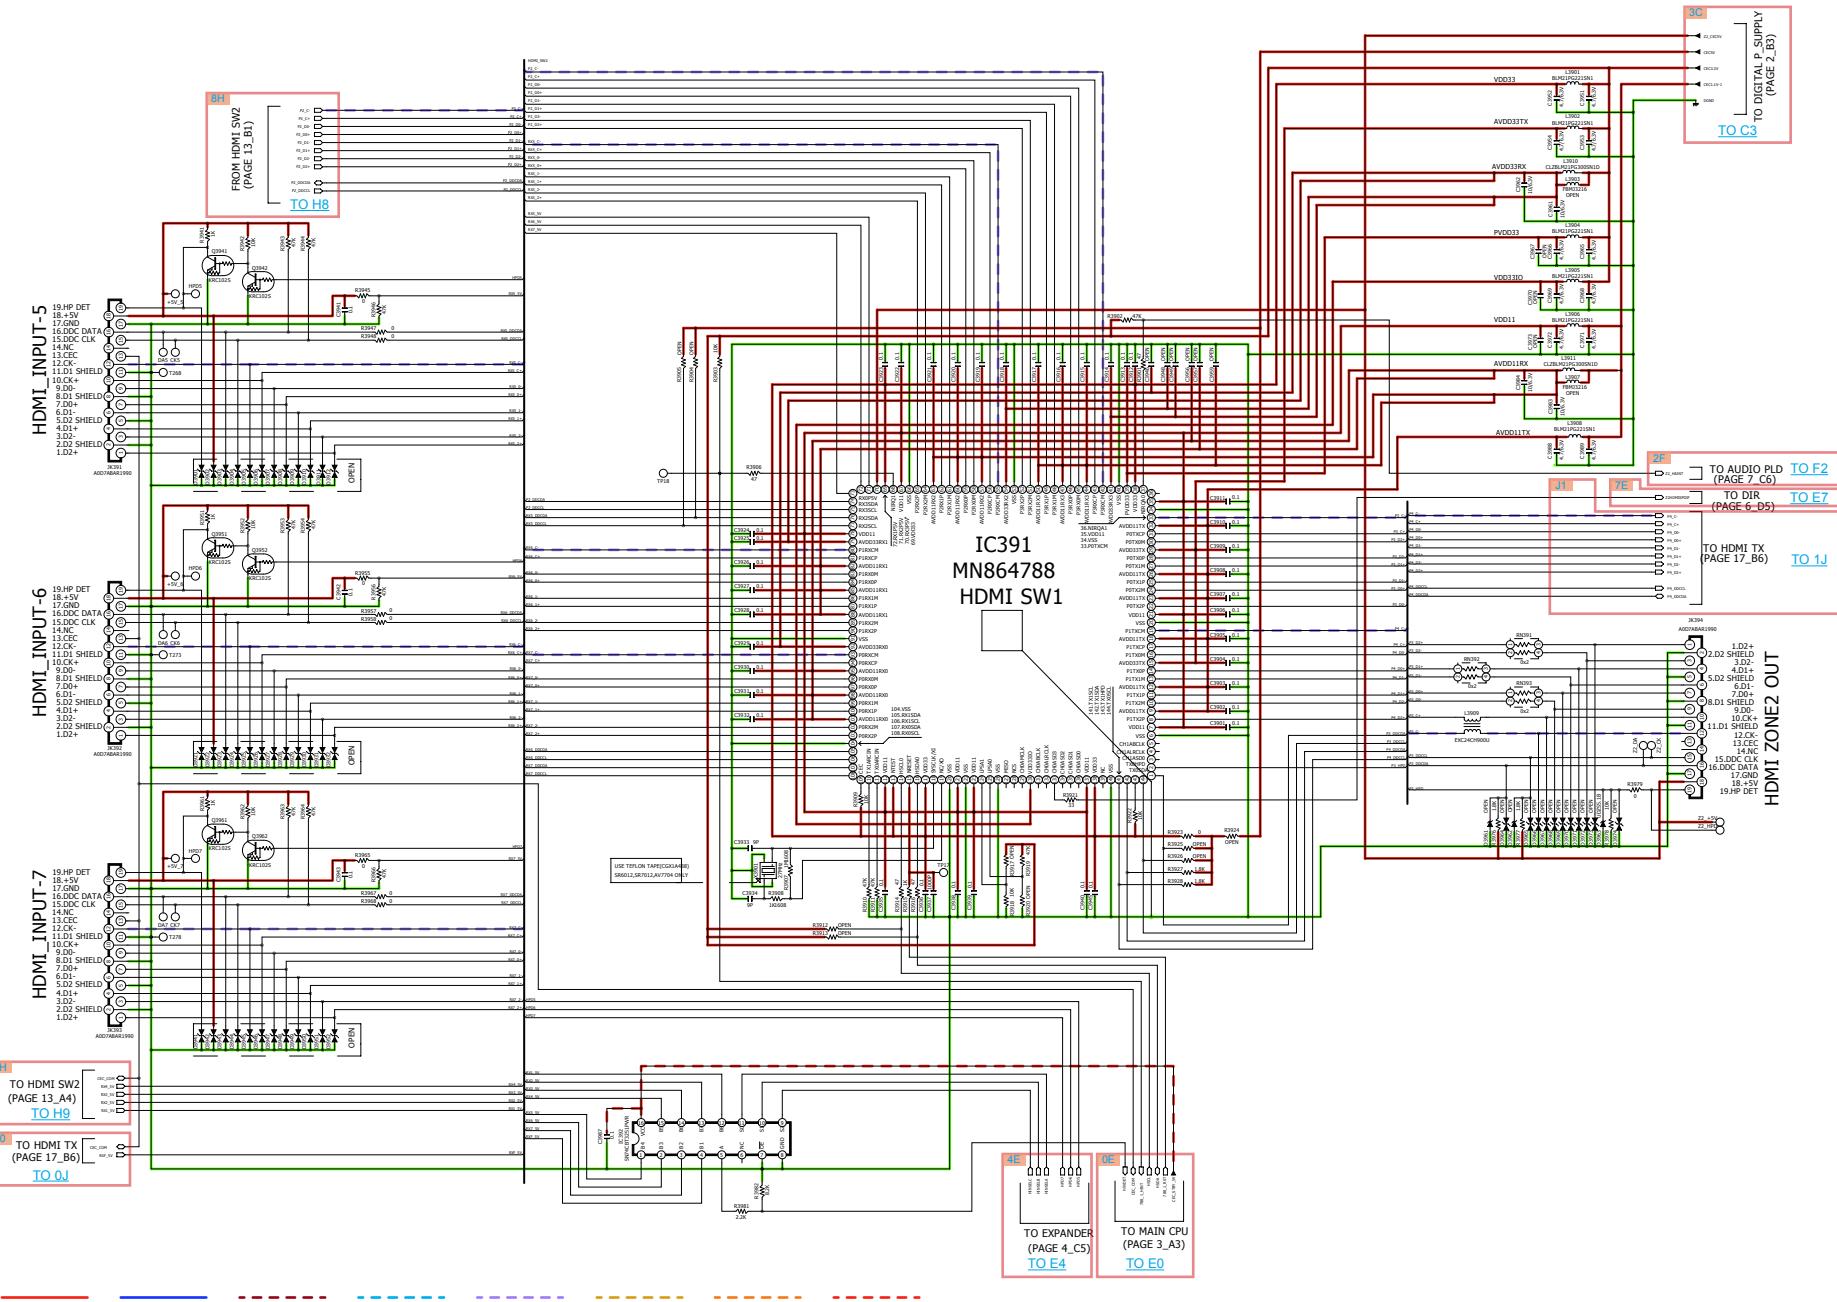

**GND LINE**    **POWER+ LINE**    **POWER- LINE**    **ANALOG AUDIO**    **DIGITAL AUDIO**    **TMDS SIGNAL**    **ANALOG VIDEO**    **DIGITAL VIDEO**    **STBY POWER**

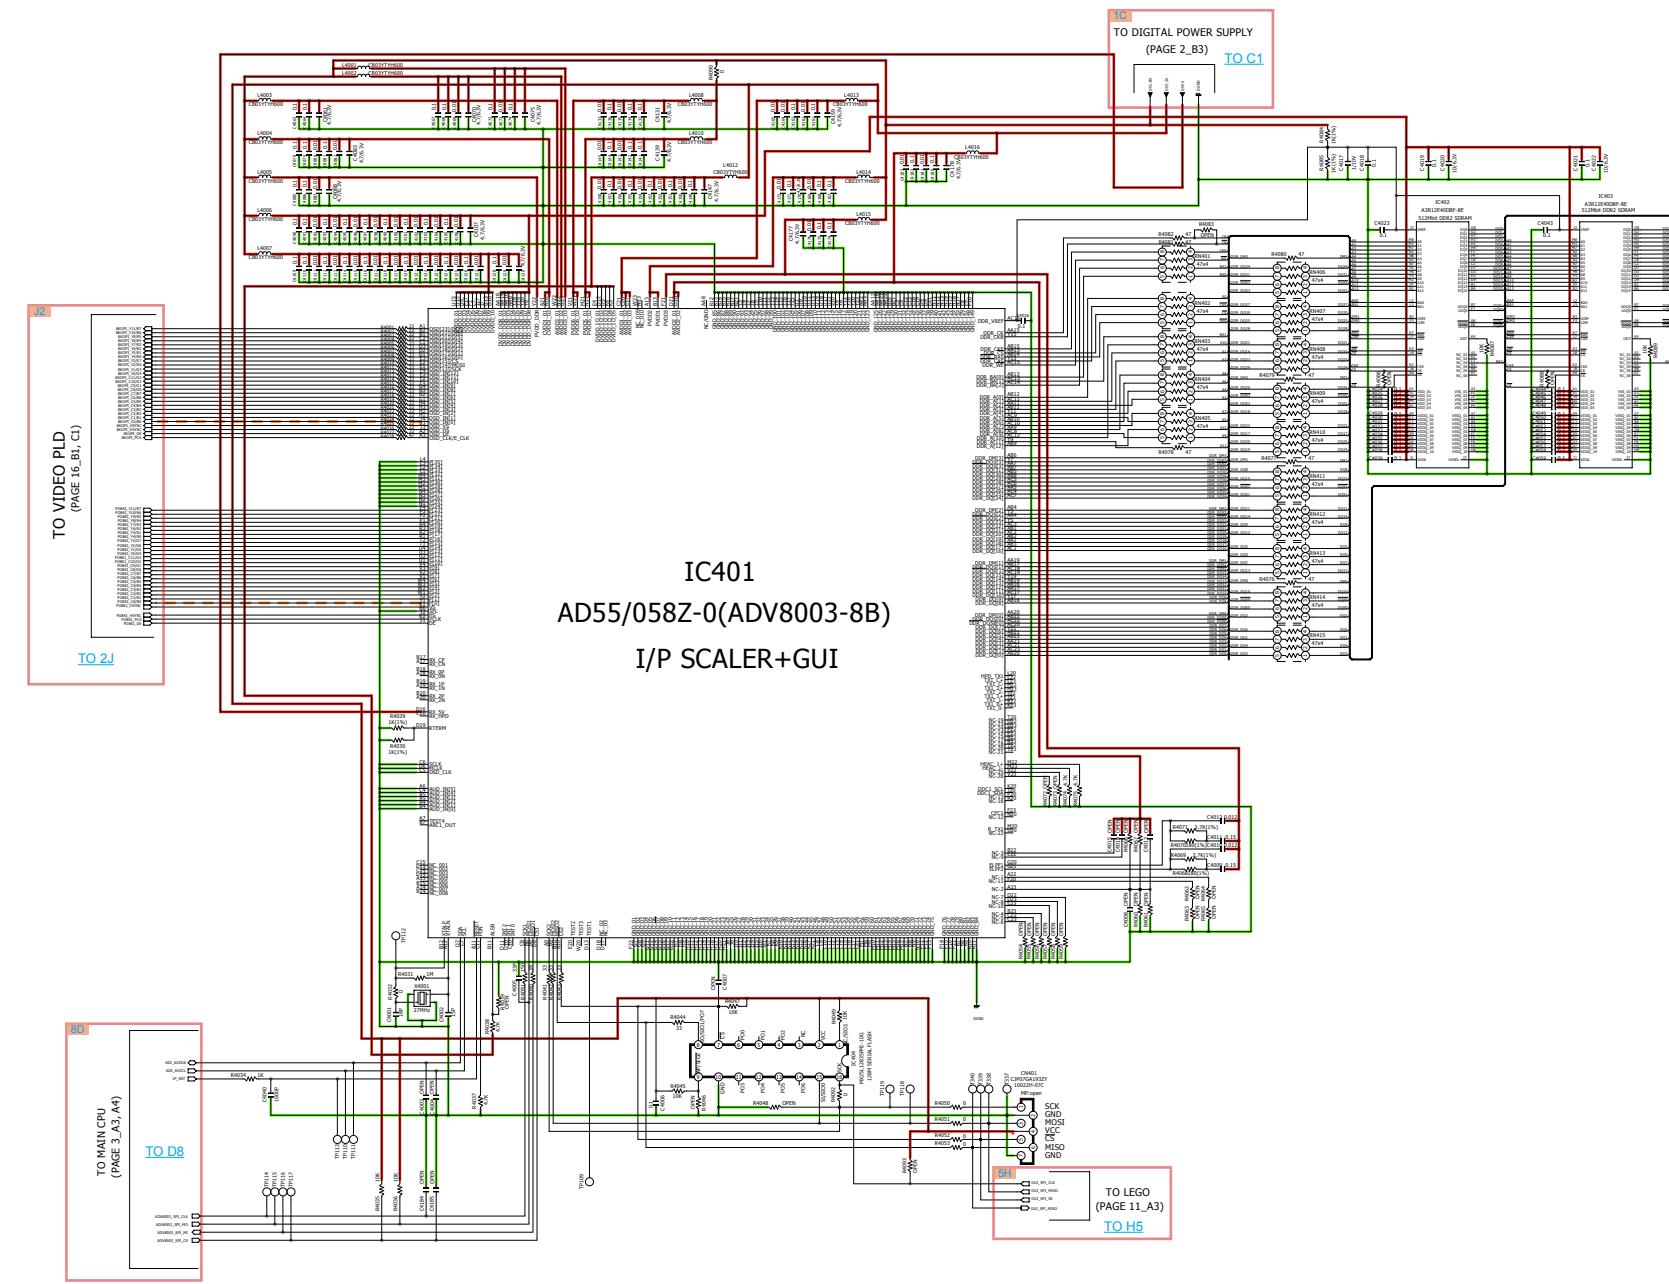

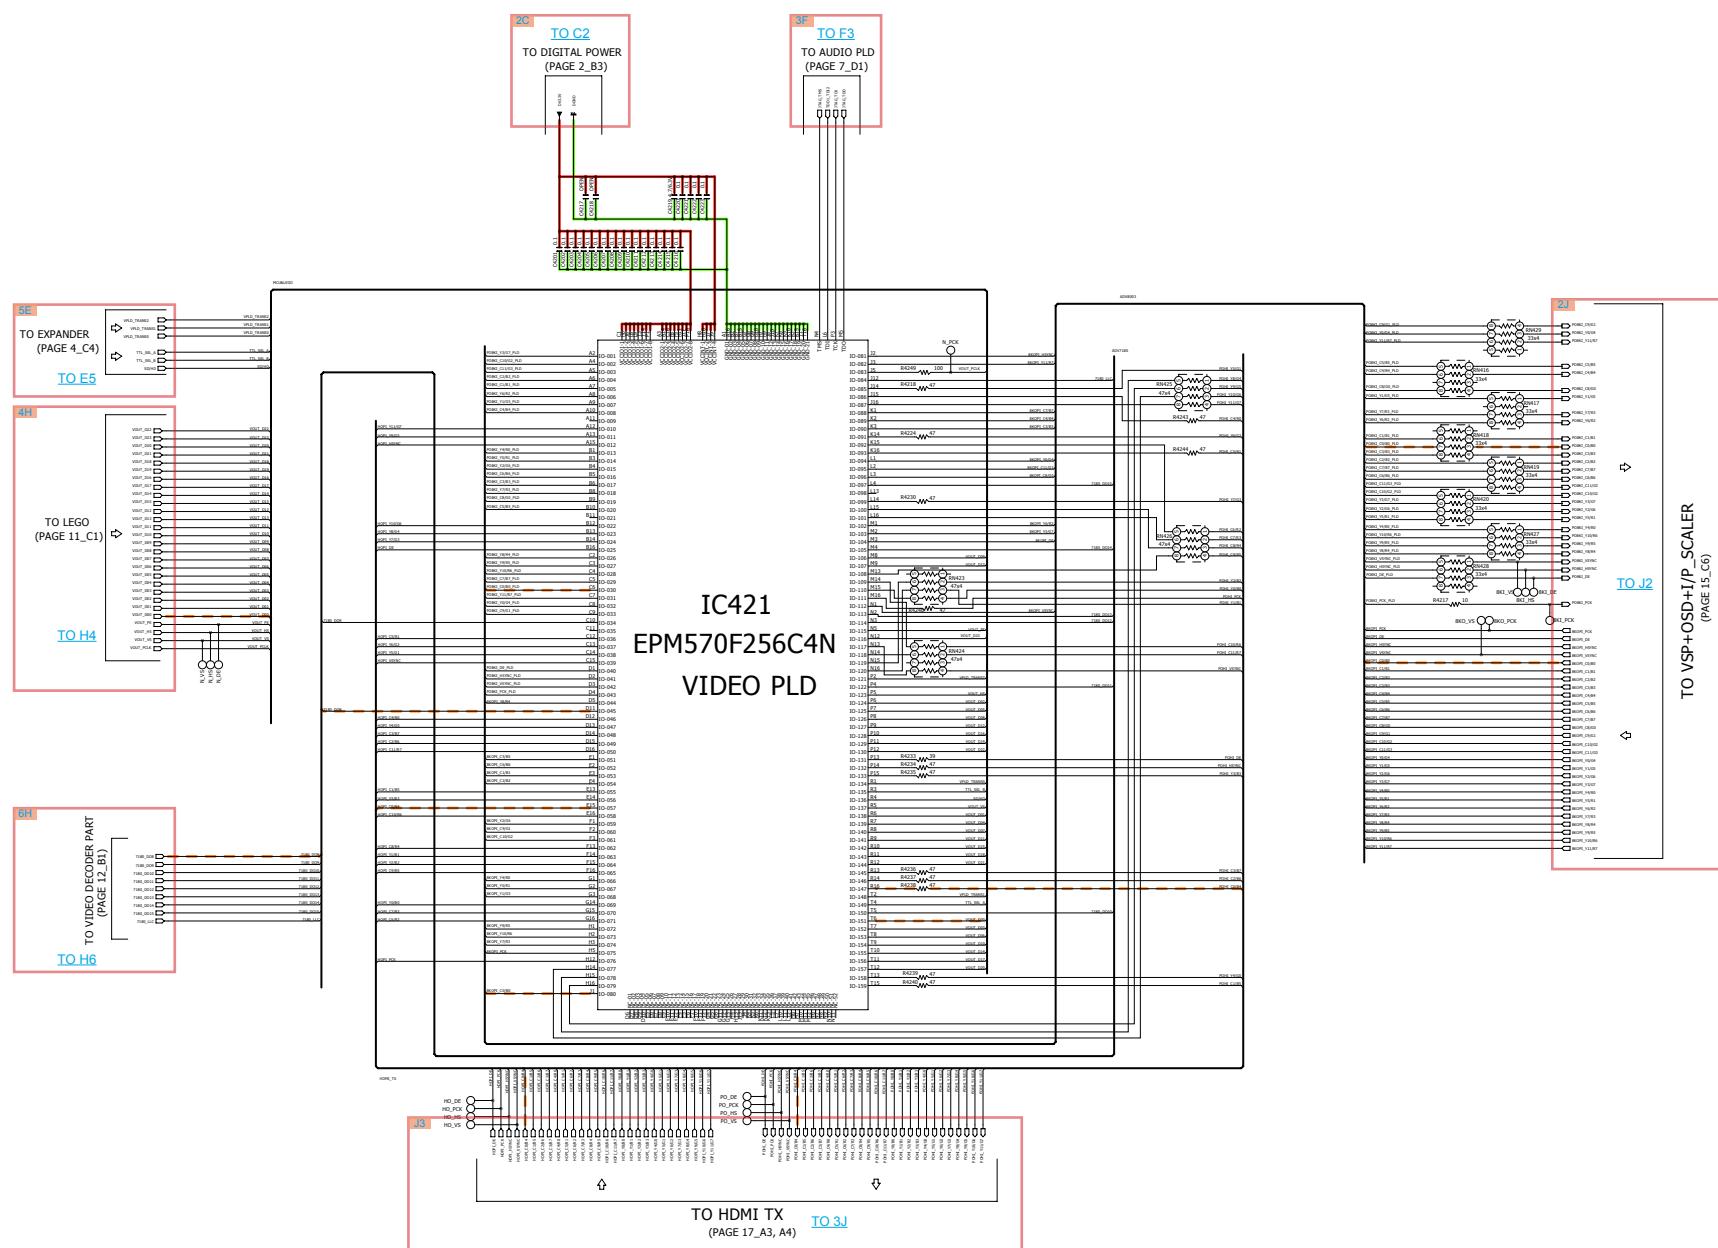

# SCH20\_HDMI TX & ARC


Caution in servicing


Electrical

Mechanical


Repair Information

Updating

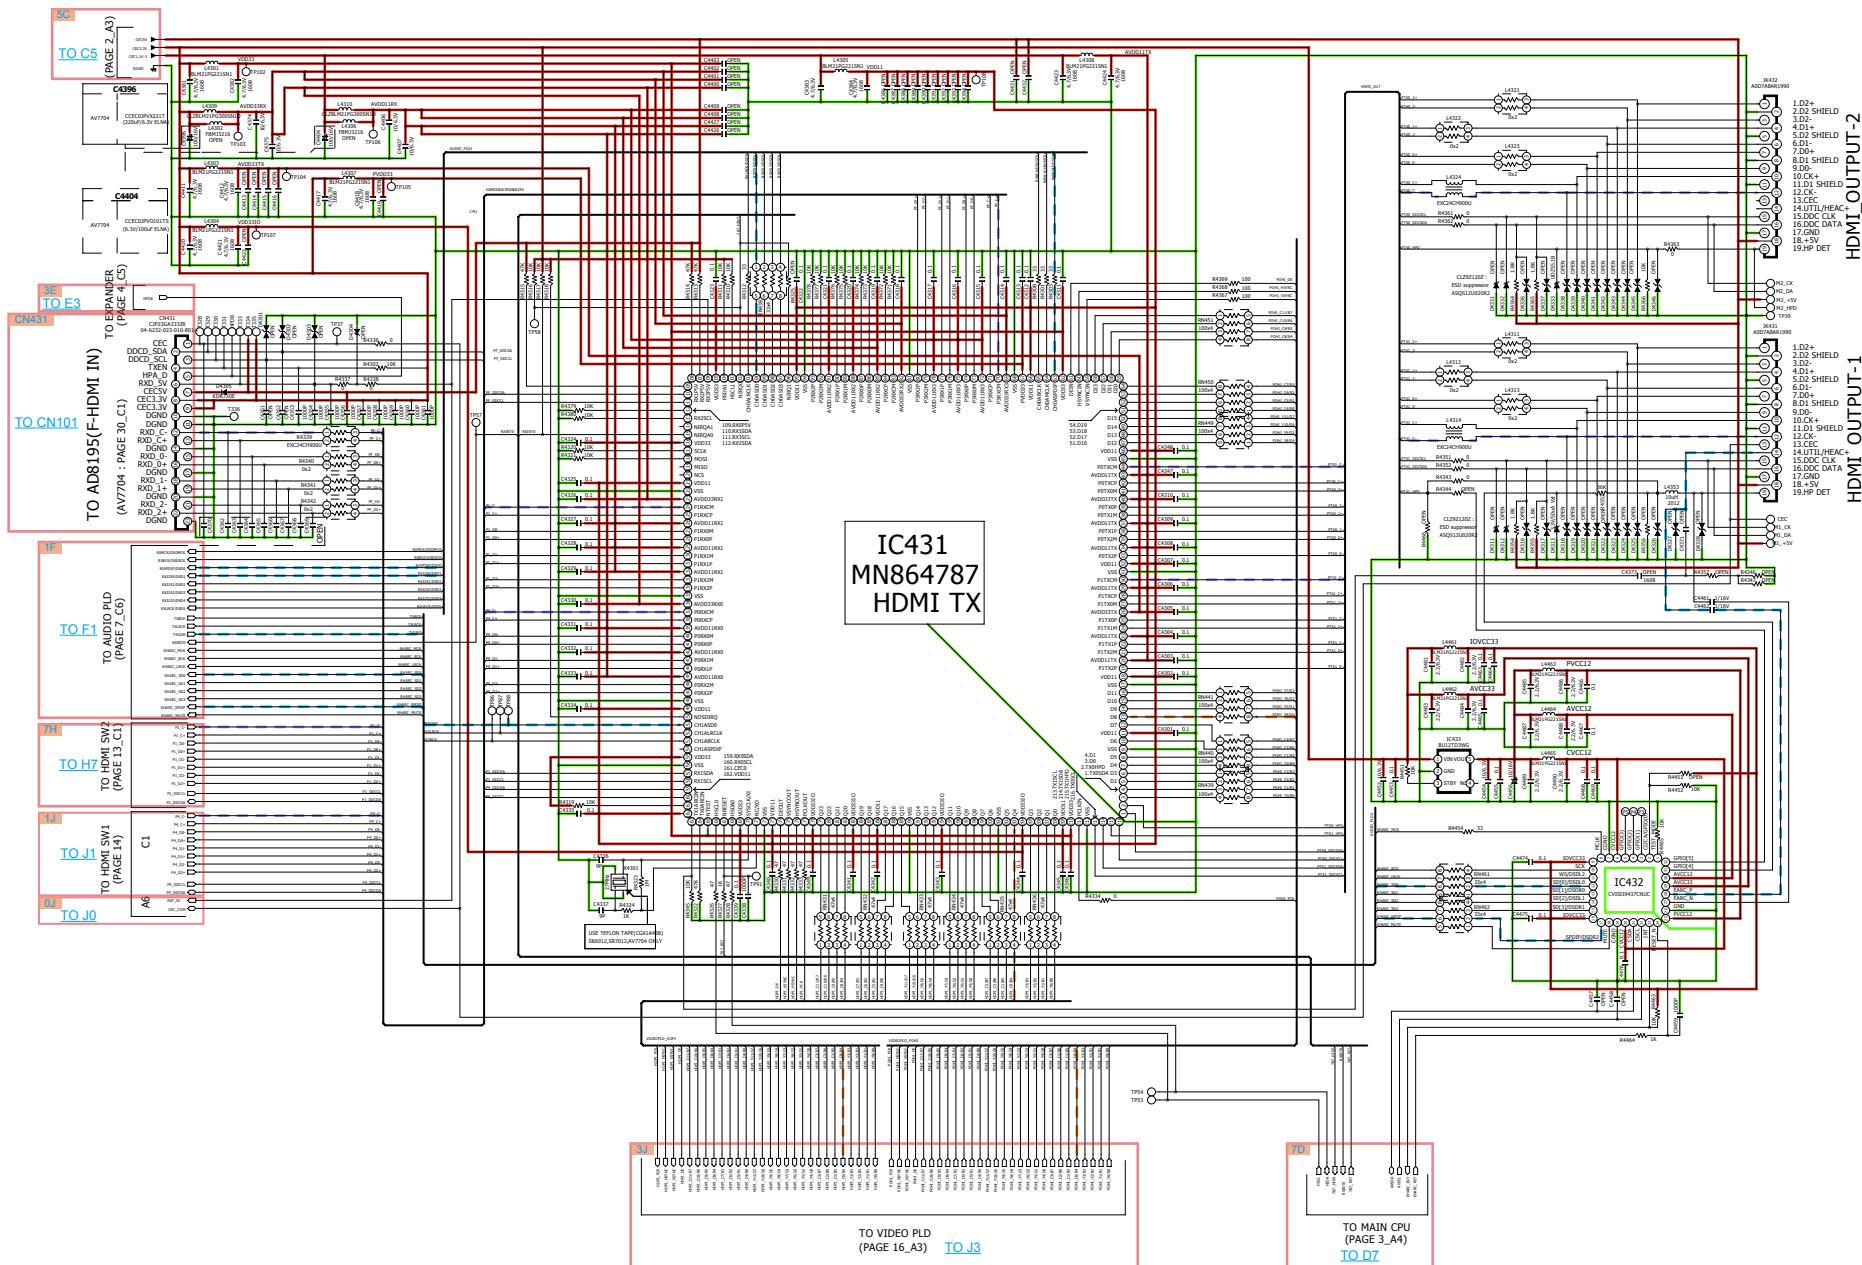


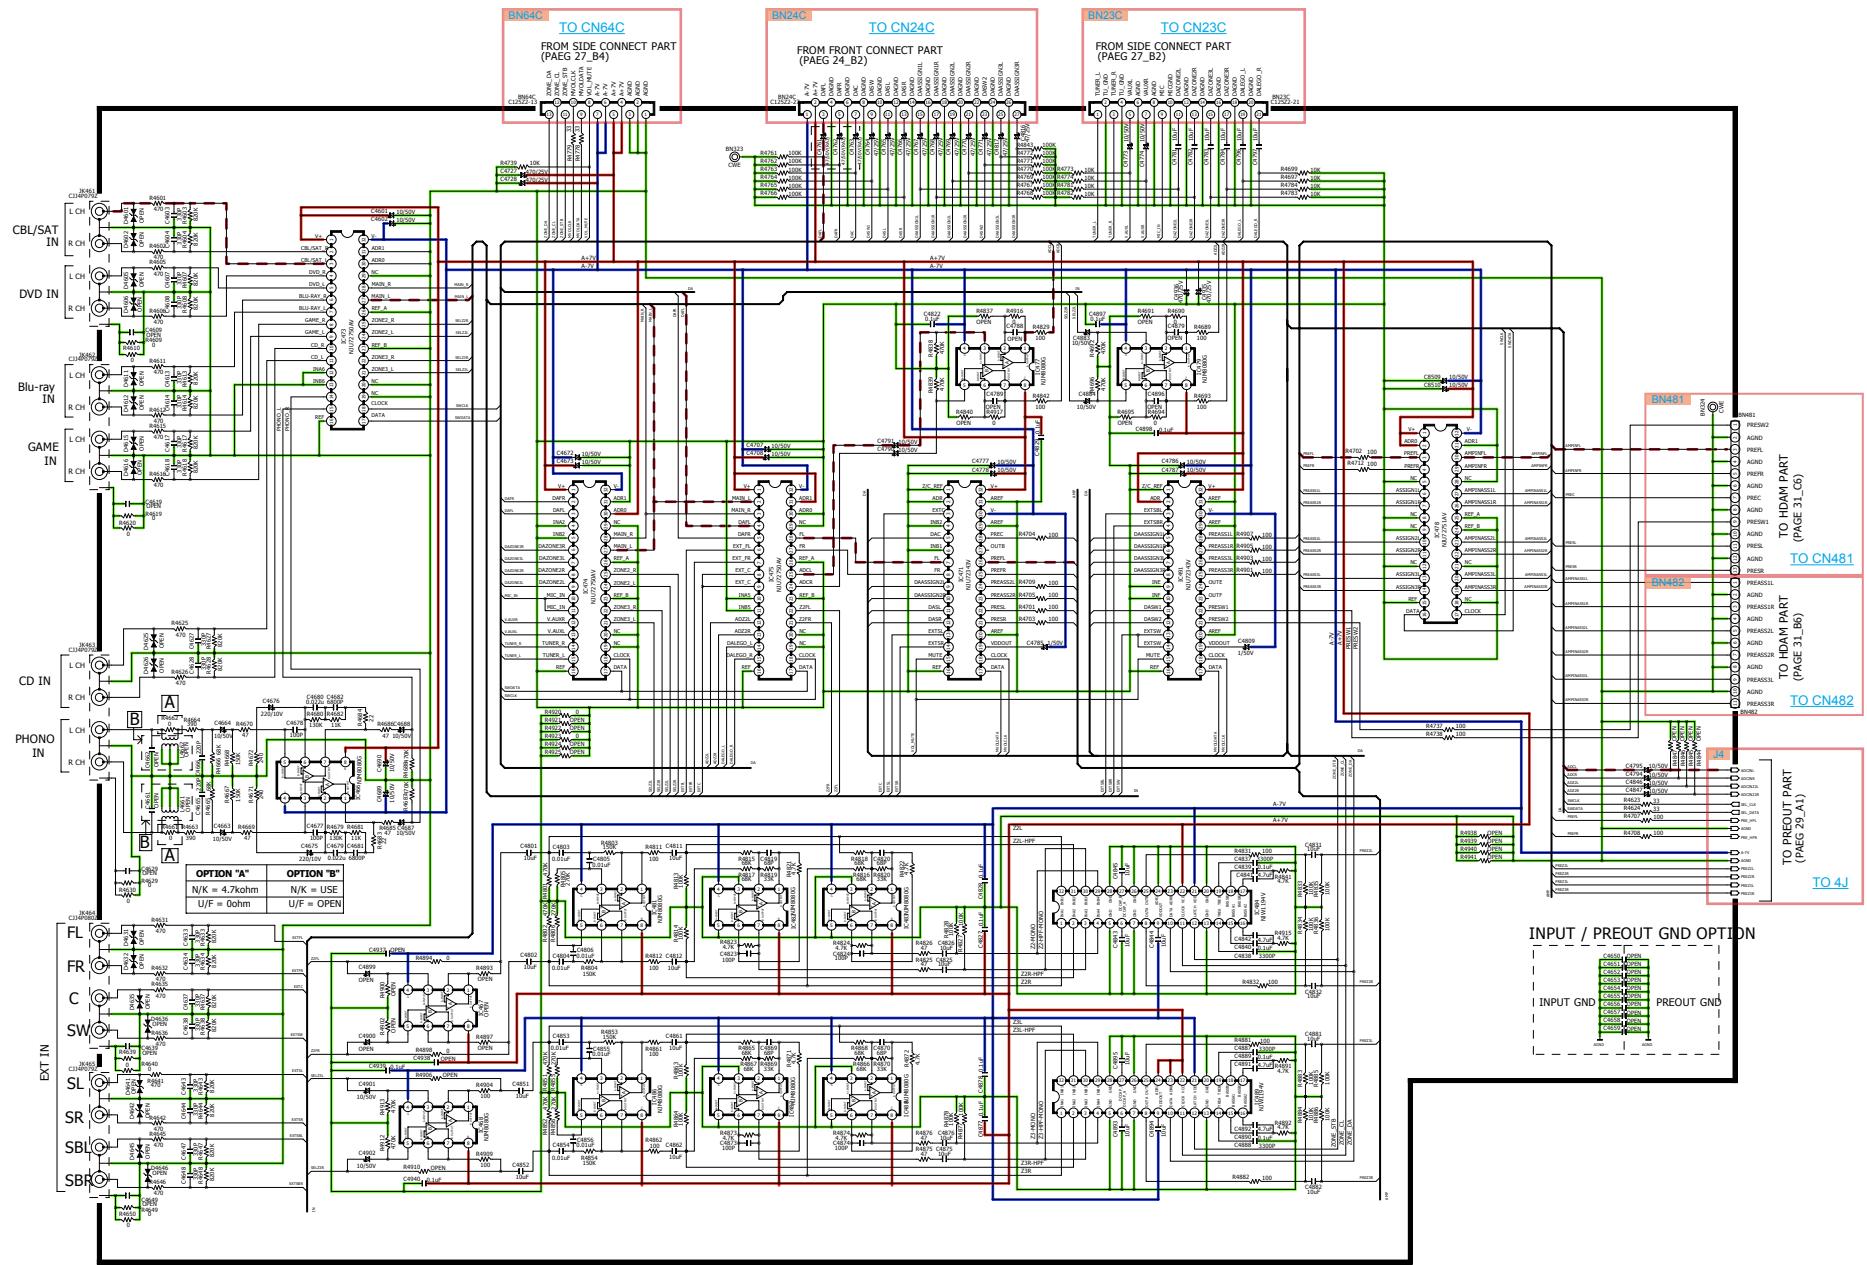


**GND LINE**      **POWER+ LINE**      **POWER- LINE**      **ANALOG AUDIO**      **DIGITAL AUDIO**      **TMDS SIGNAL**      **ANALOG VIDEO**      **DIGITAL VIDEO**      **STBY POWER**

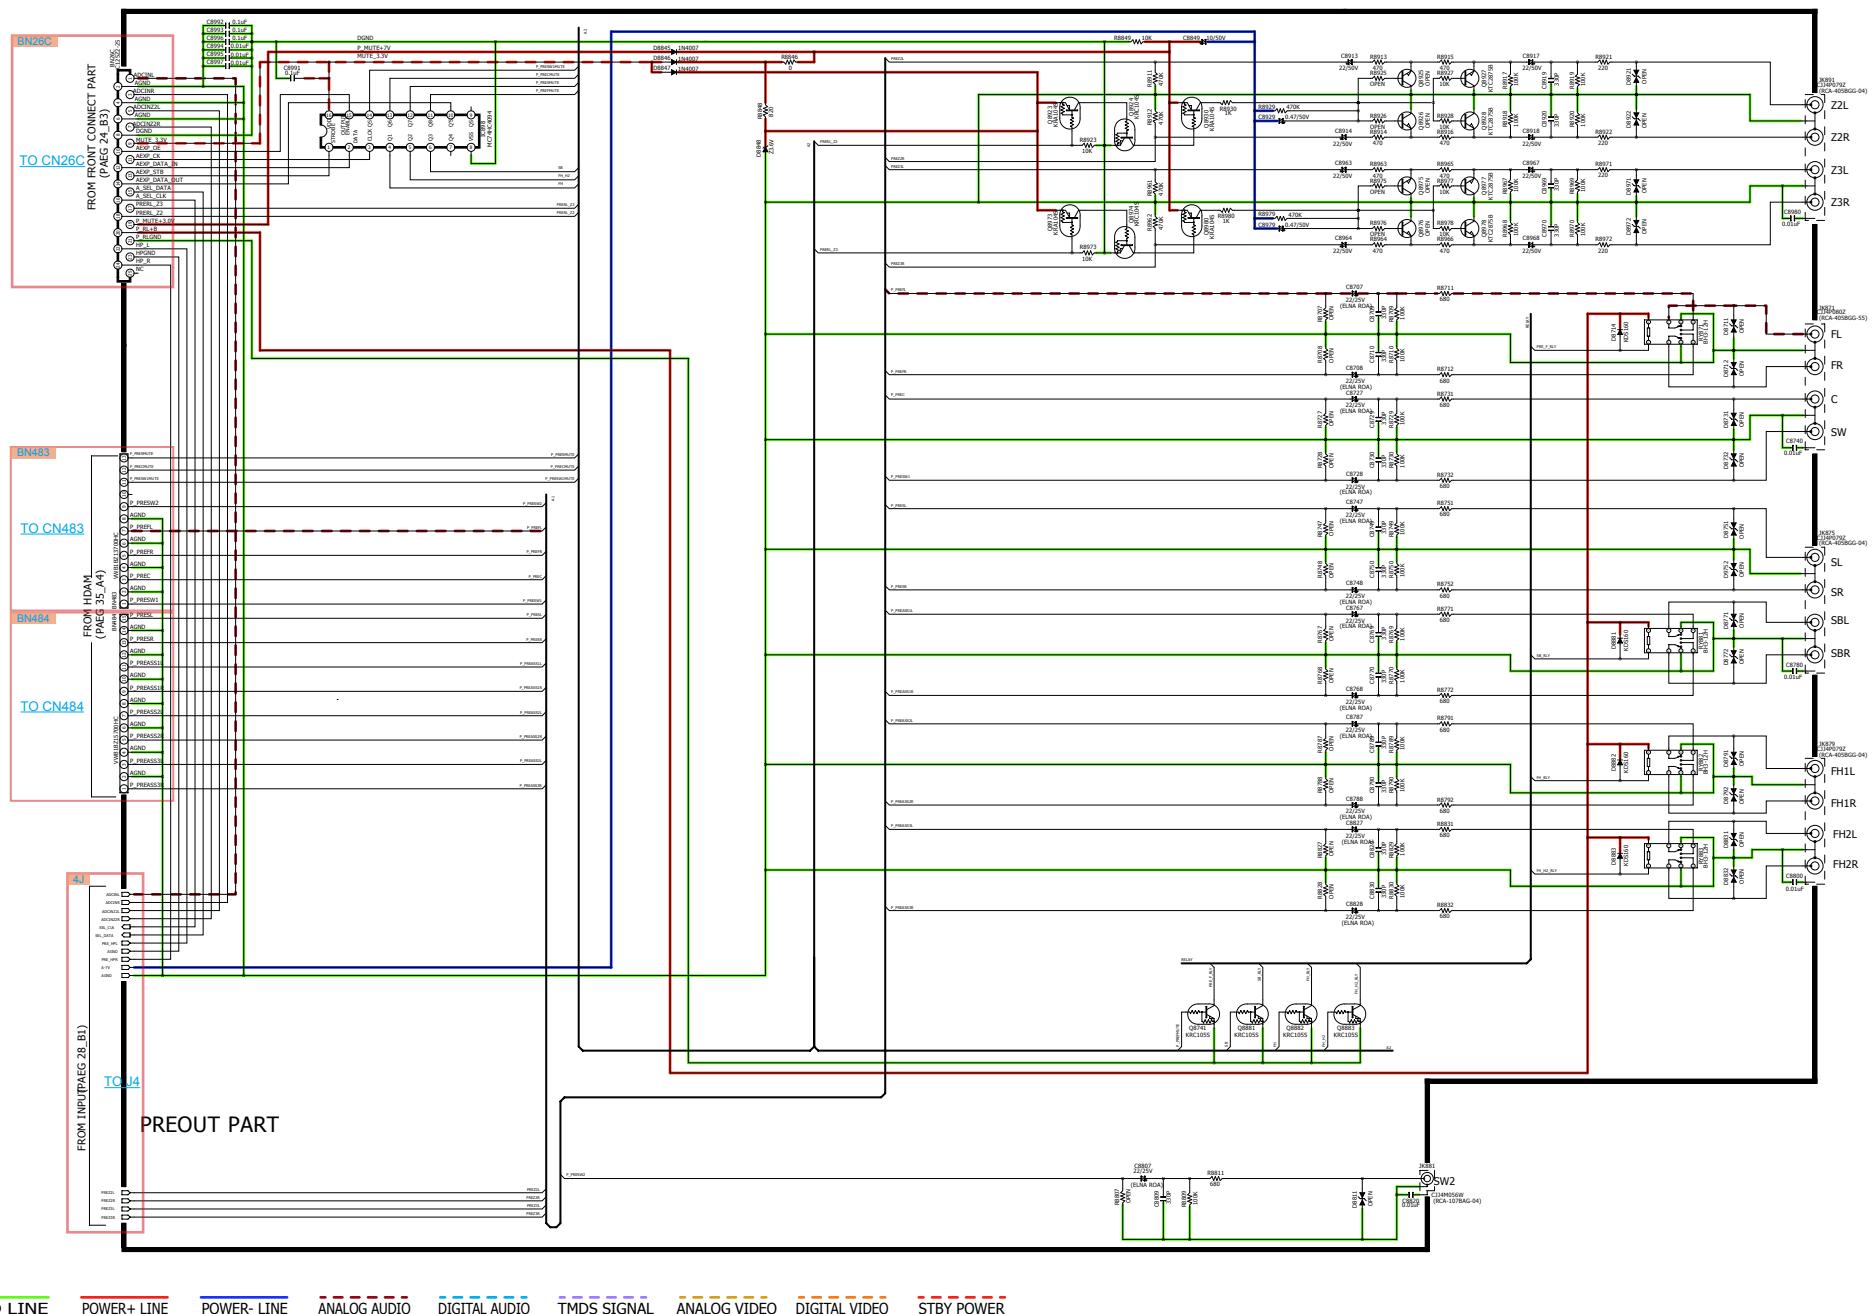

**GND LINE**      **POWER+ LINE**      **POWER- LINE**      **ANALOG AUDIO**      **DIGITAL AUDIO**      **TMDS SIGNAL**      **ANALOG VIDEO**      **DIGITAL VIDEO**      **STBY POWER**

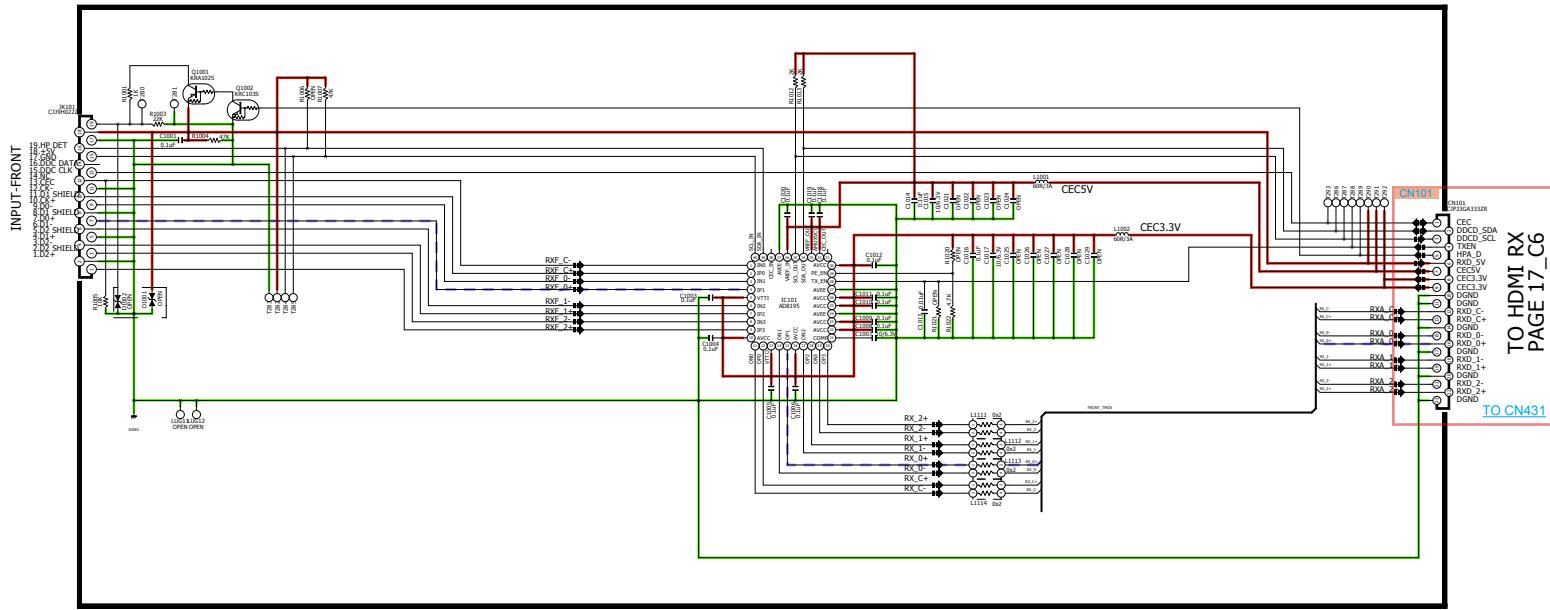


**GND LINE**      **POWER+ LINE**      **POWER- LINE**      **ANALOG AUDIO**      **DIGITAL AUDIO**      **TMDS SIGNAL**      **ANALOG VIDEO**      **DIGITAL VIDEO**      **STBY POWER**

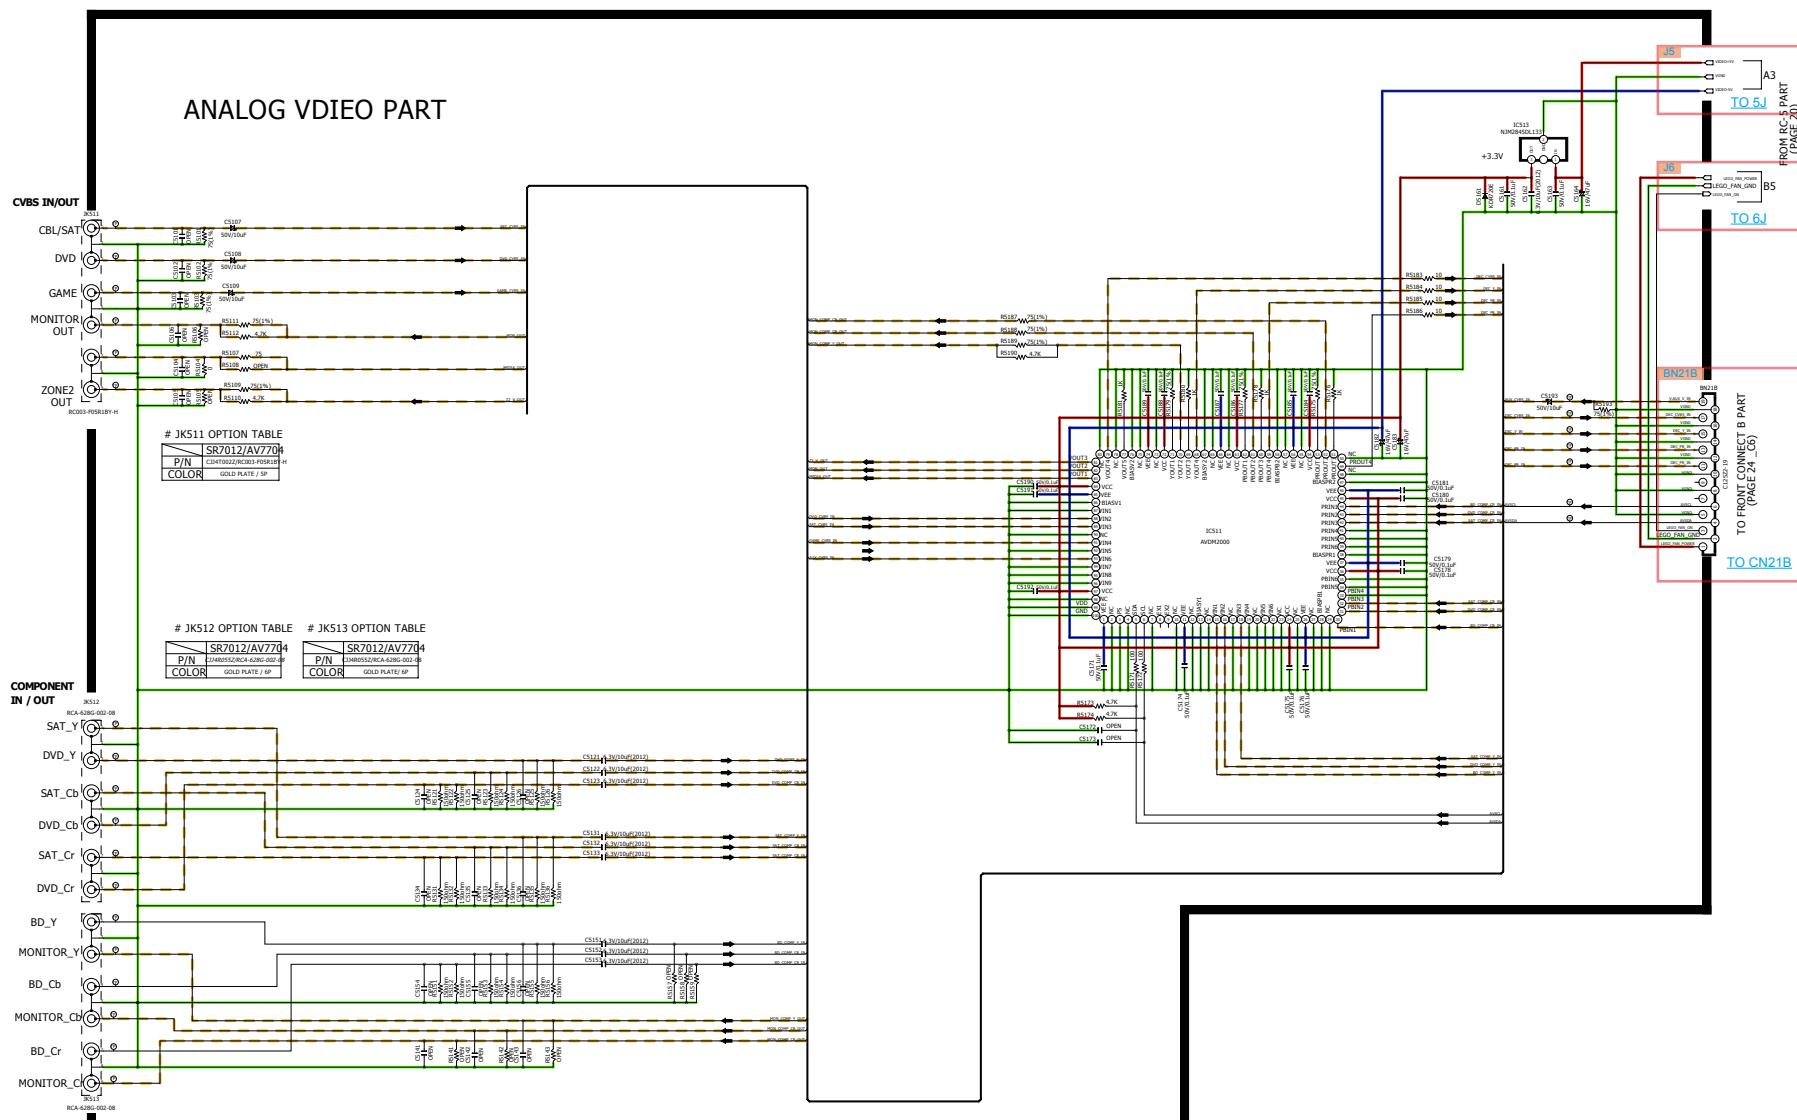


**GND LINE**      **POWER+ LINE**      **POWER- LINE**      **ANALOG AUDIO**      **DIGITAL AUDIO**      **TMDS SIGNAL**      **ANALOG VIDEO**      **DIGITAL VIDEO**      **STBY POWER**

RC-5

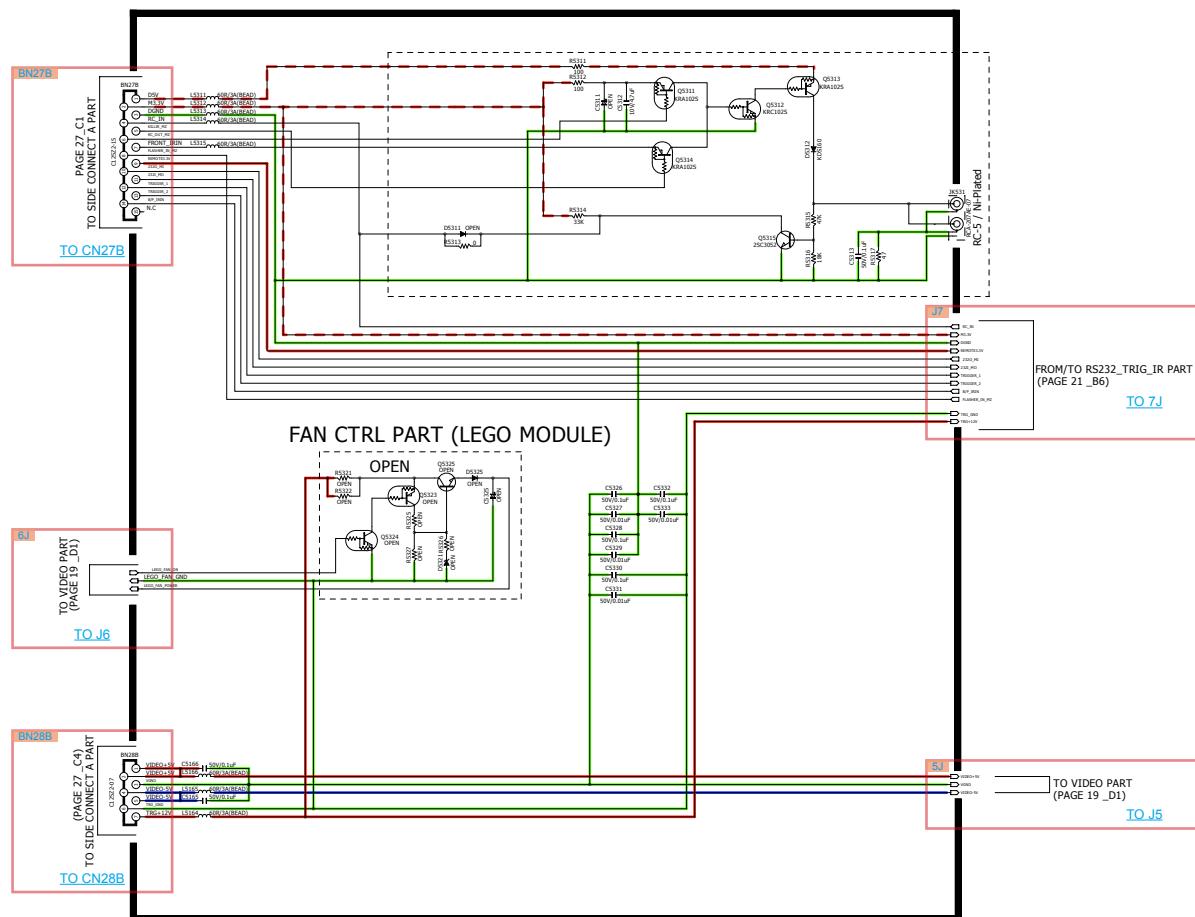


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

RS232C/TRIGGER

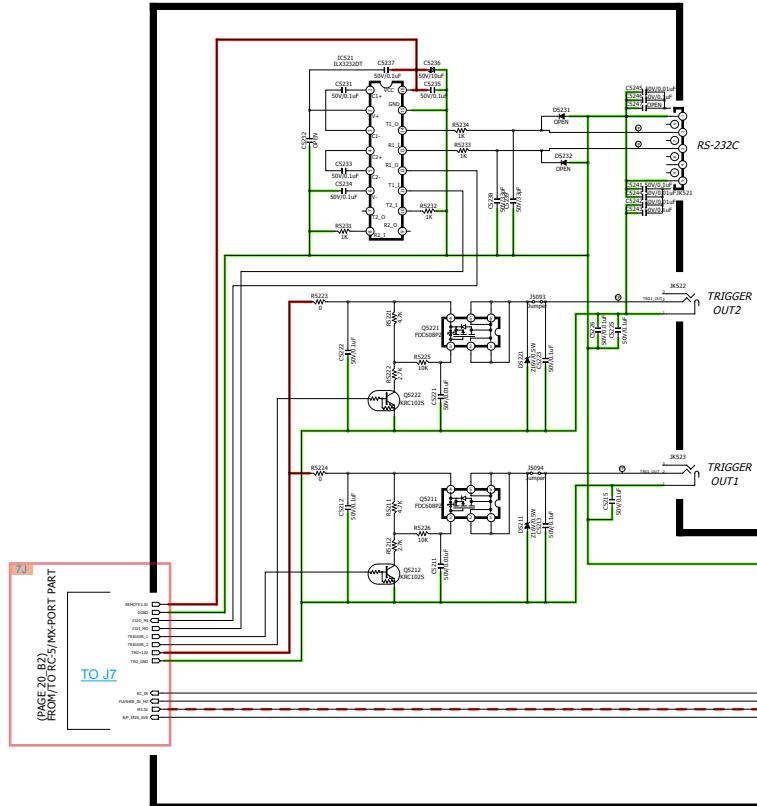


## IR / FLASHER

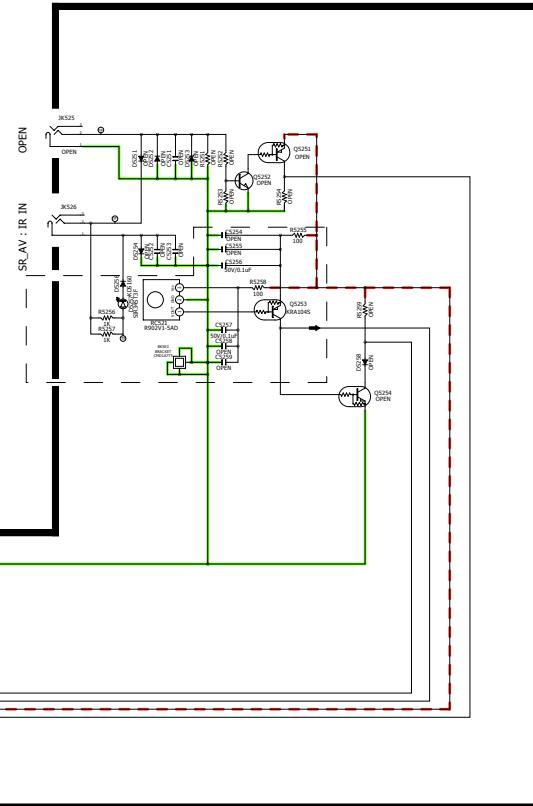


**GND LINE**    **POWER+ LINE**    **POWER- LINE**    **ANALOG AUDIO**    **DIGITAL AUDIO**    **TMDS SIGNAL**    **ANALOG VIDEO**    **DIGITAL VIDEO**    **STBY POWER**

## SIDE CNT\_CUP12923Z(CONNECT A)

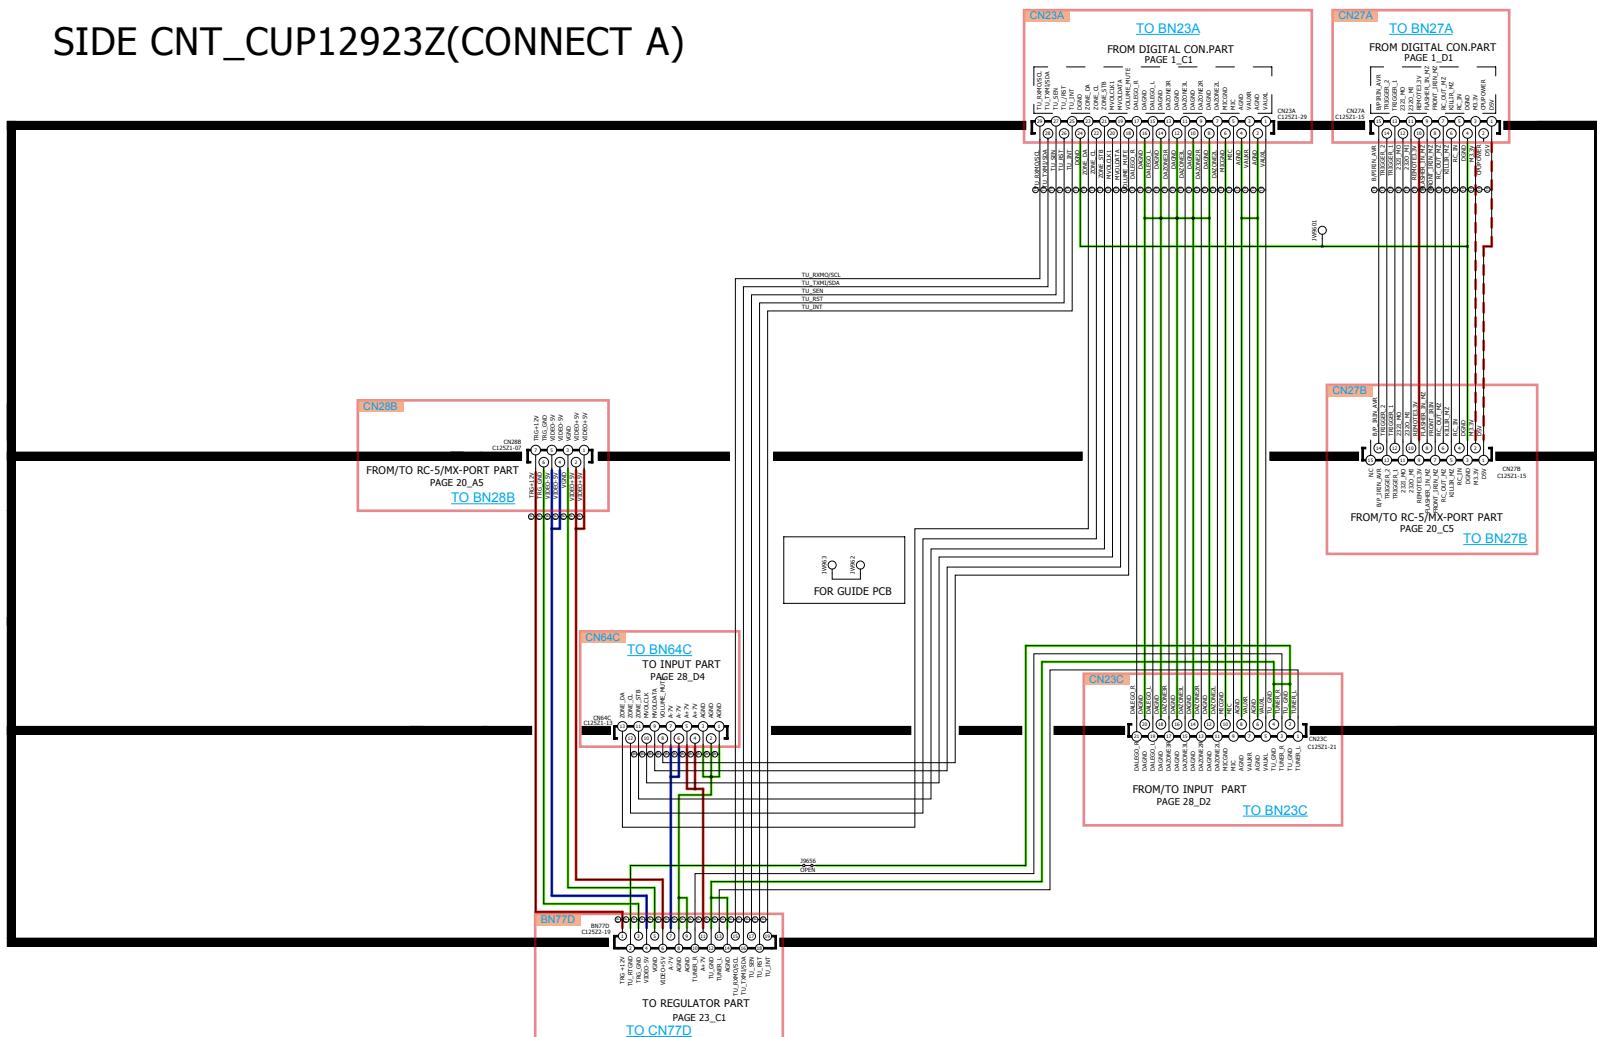


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER


## FRT CNT CONNECT B

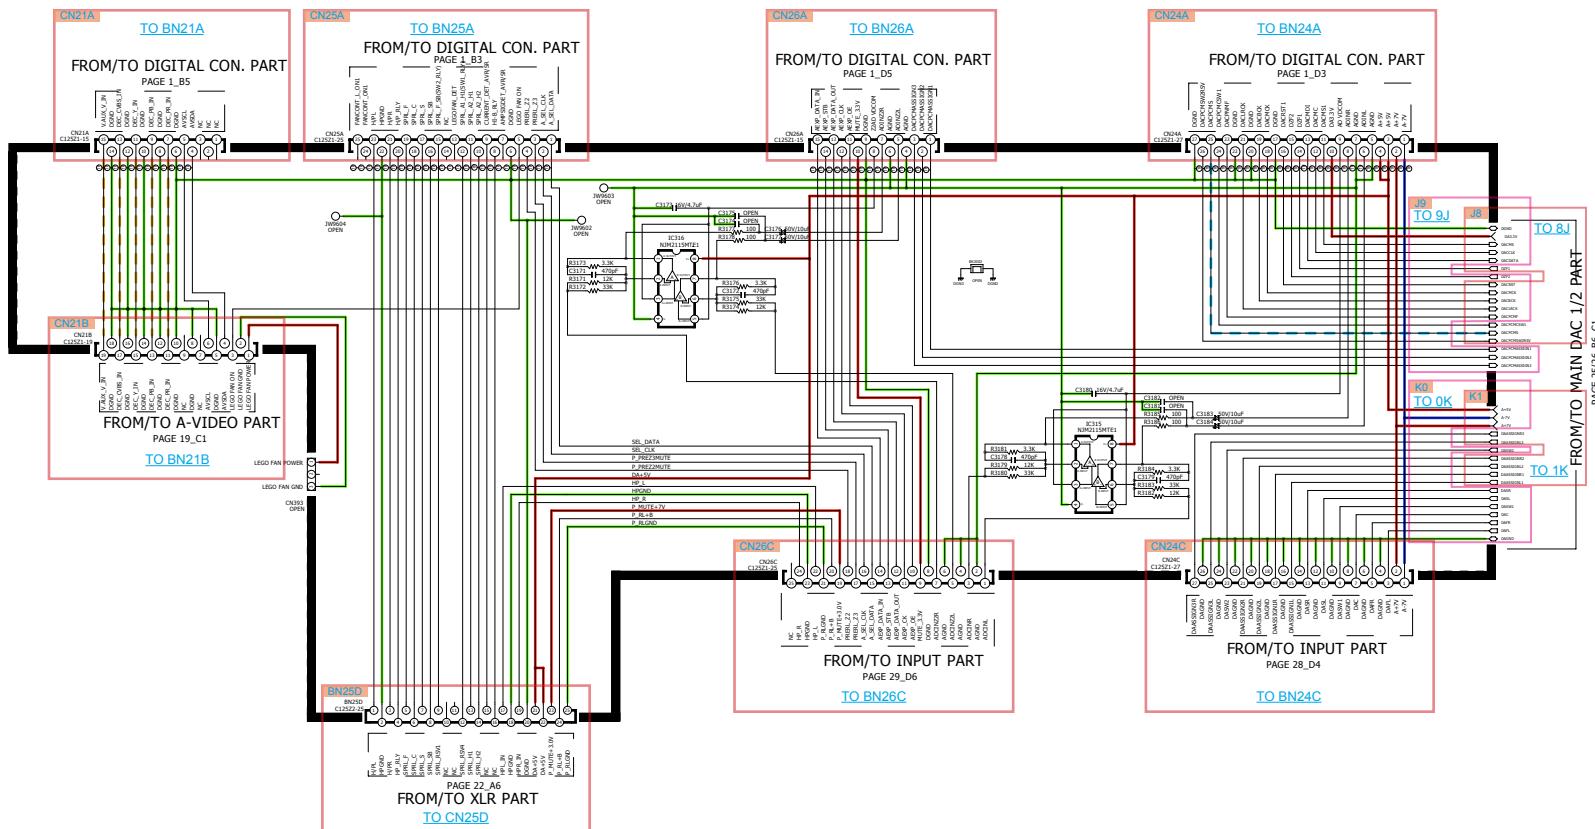


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

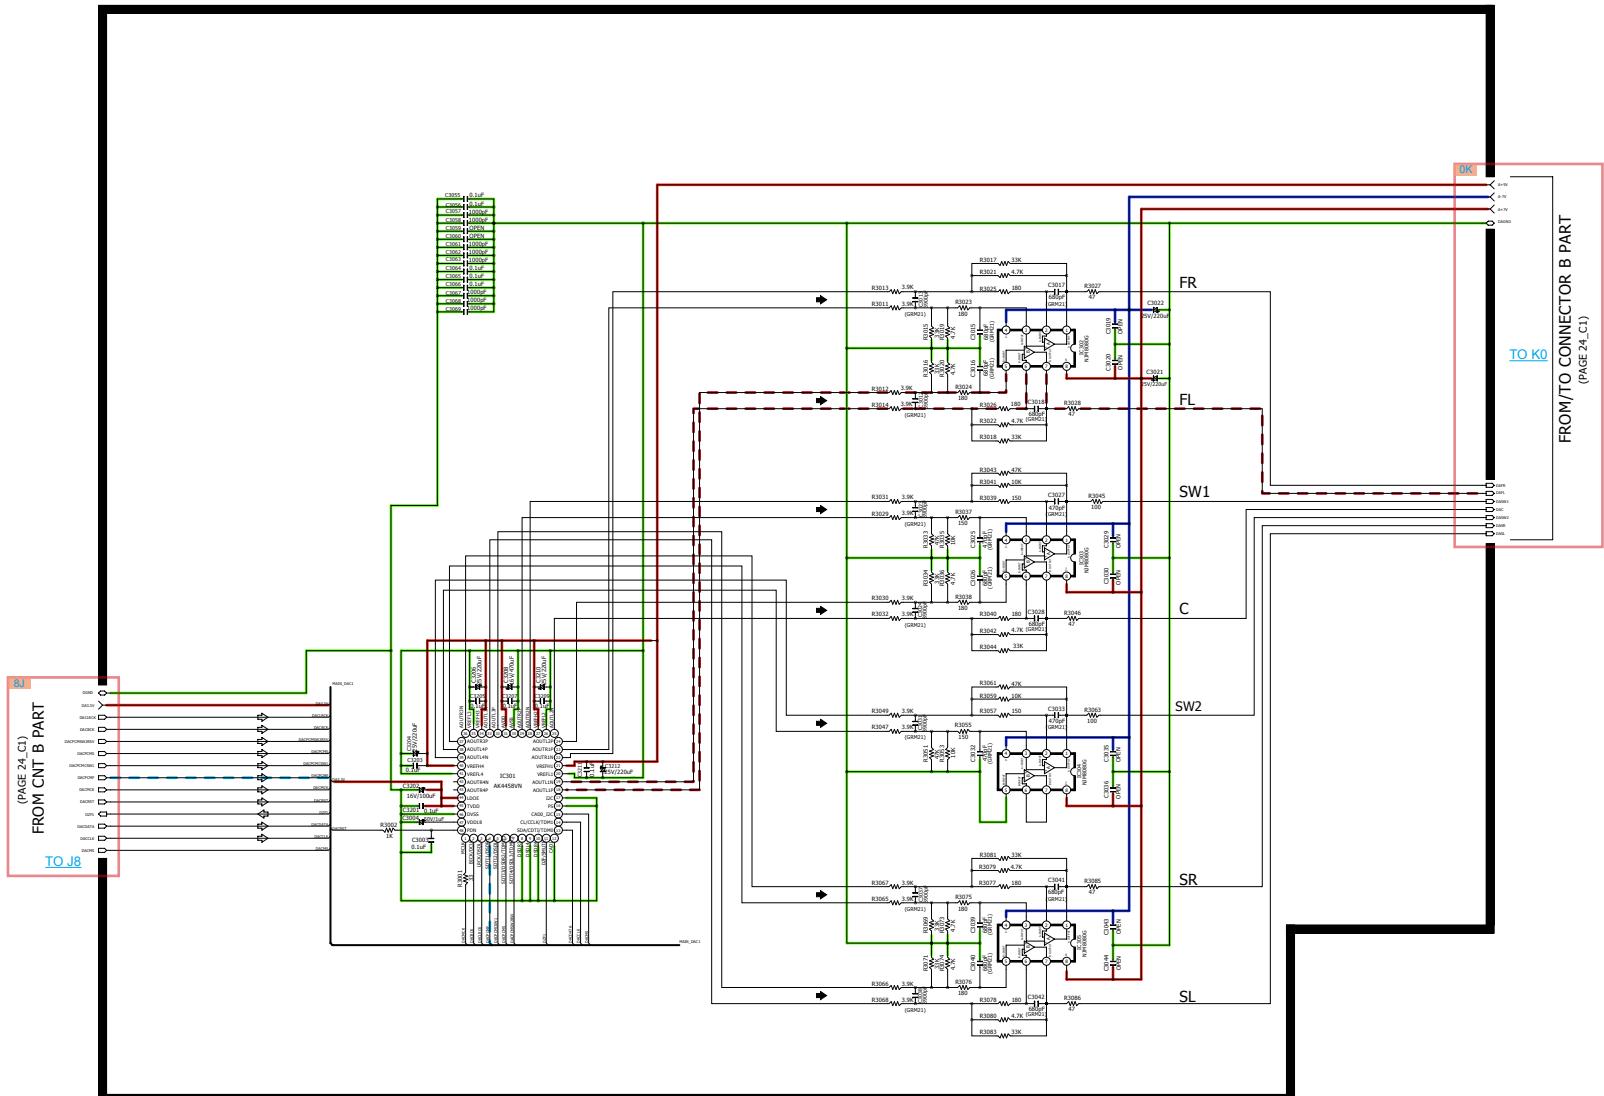


**GND LINE**    **POWER+ LINE**    **POWER- LINE**    **ANALOG AUDIO**    **DIGITAL AUDIO**    **TMDS SIGNAL**    **ANALOG VIDEO**    **DIGITAL VIDEO**    **STBY POWER**

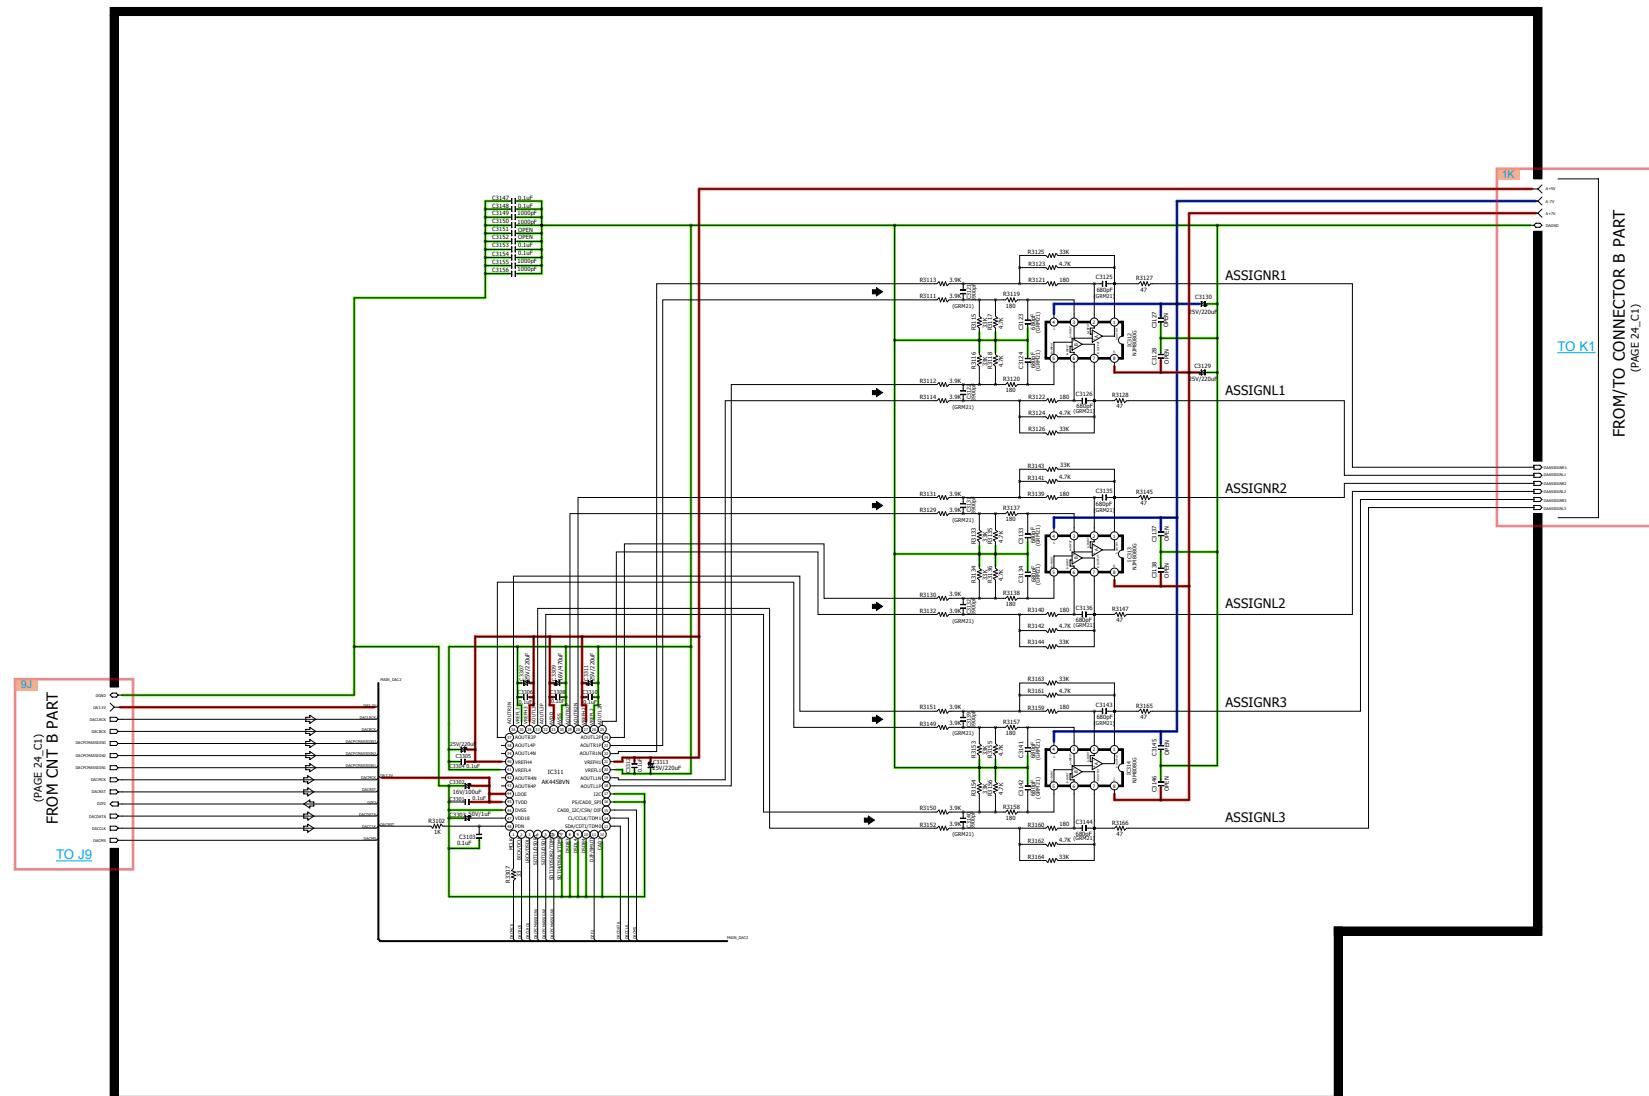



**GND LINE**    **POWER+ LINE**    **POWER- LINE**    **ANALOG AUDIO**    **DIGITAL AUDIO**    **TMDS SIGNAL**    **ANALOG VIDEO**    **DIGITAL VIDEO**    **STBY POWER**

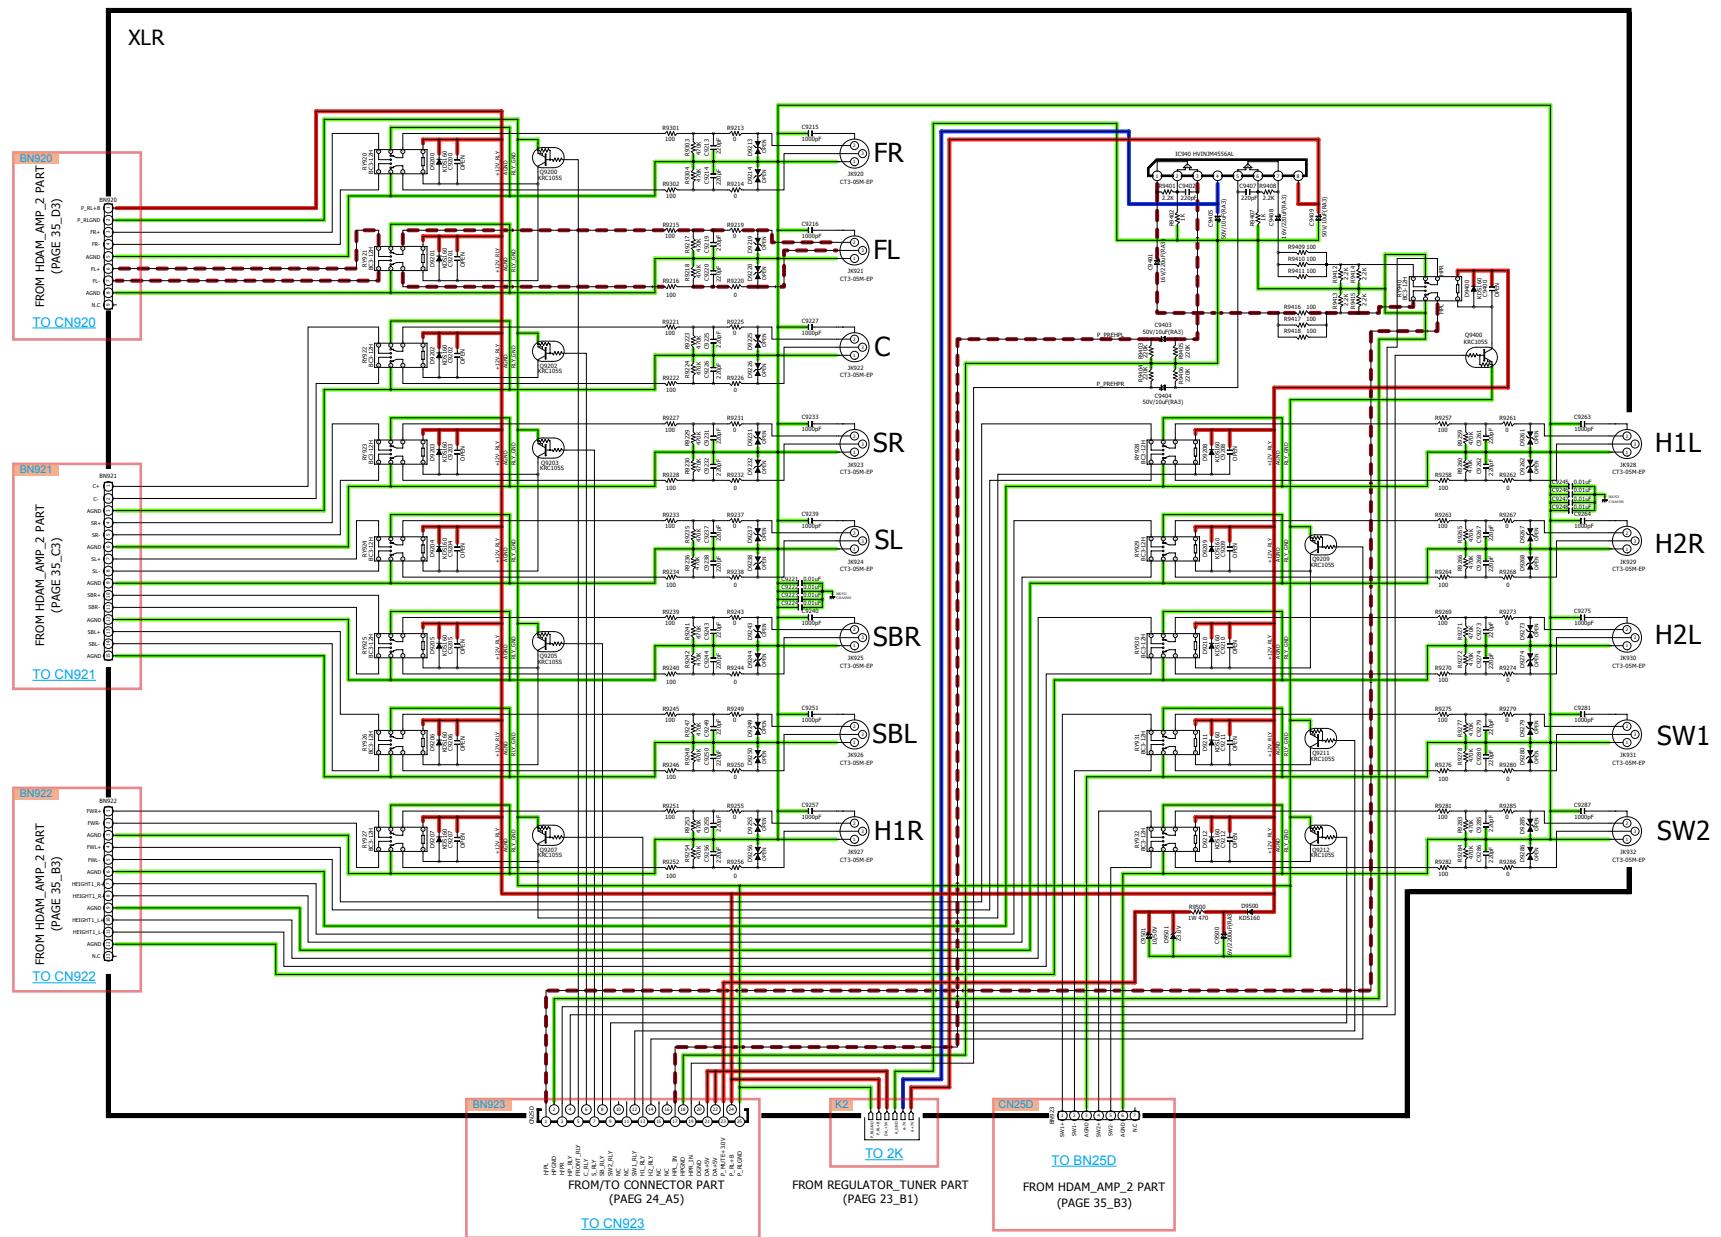


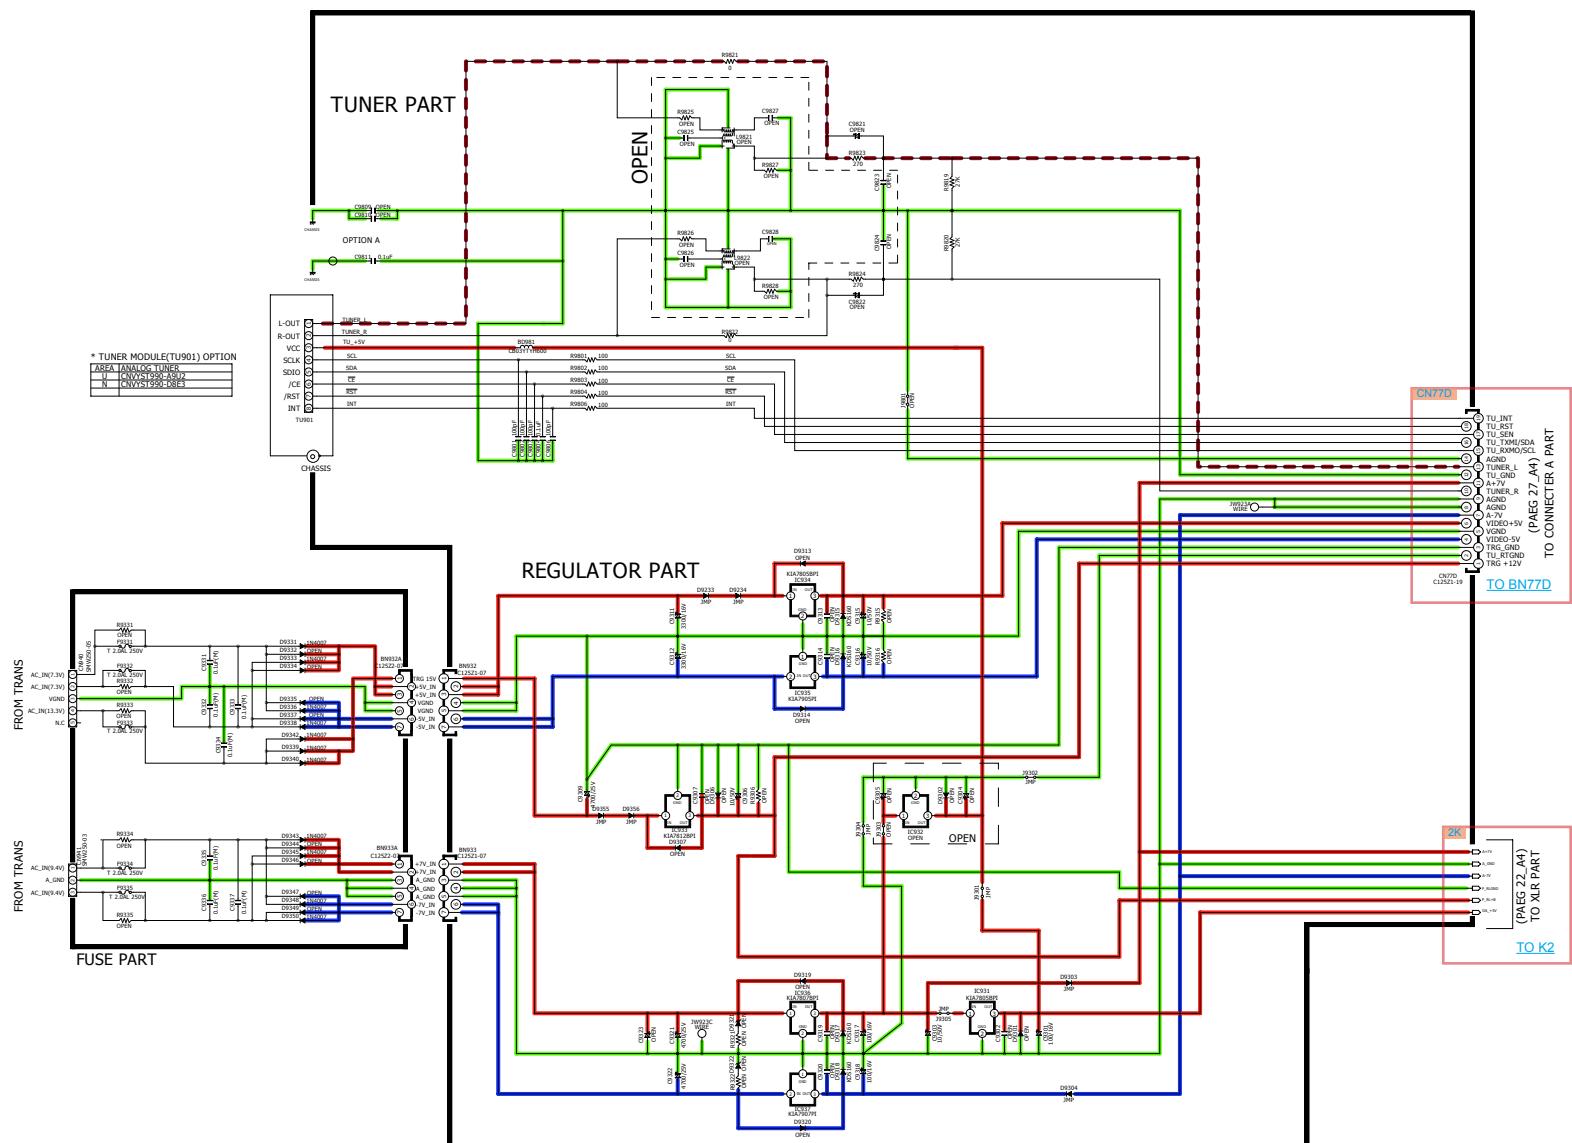


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

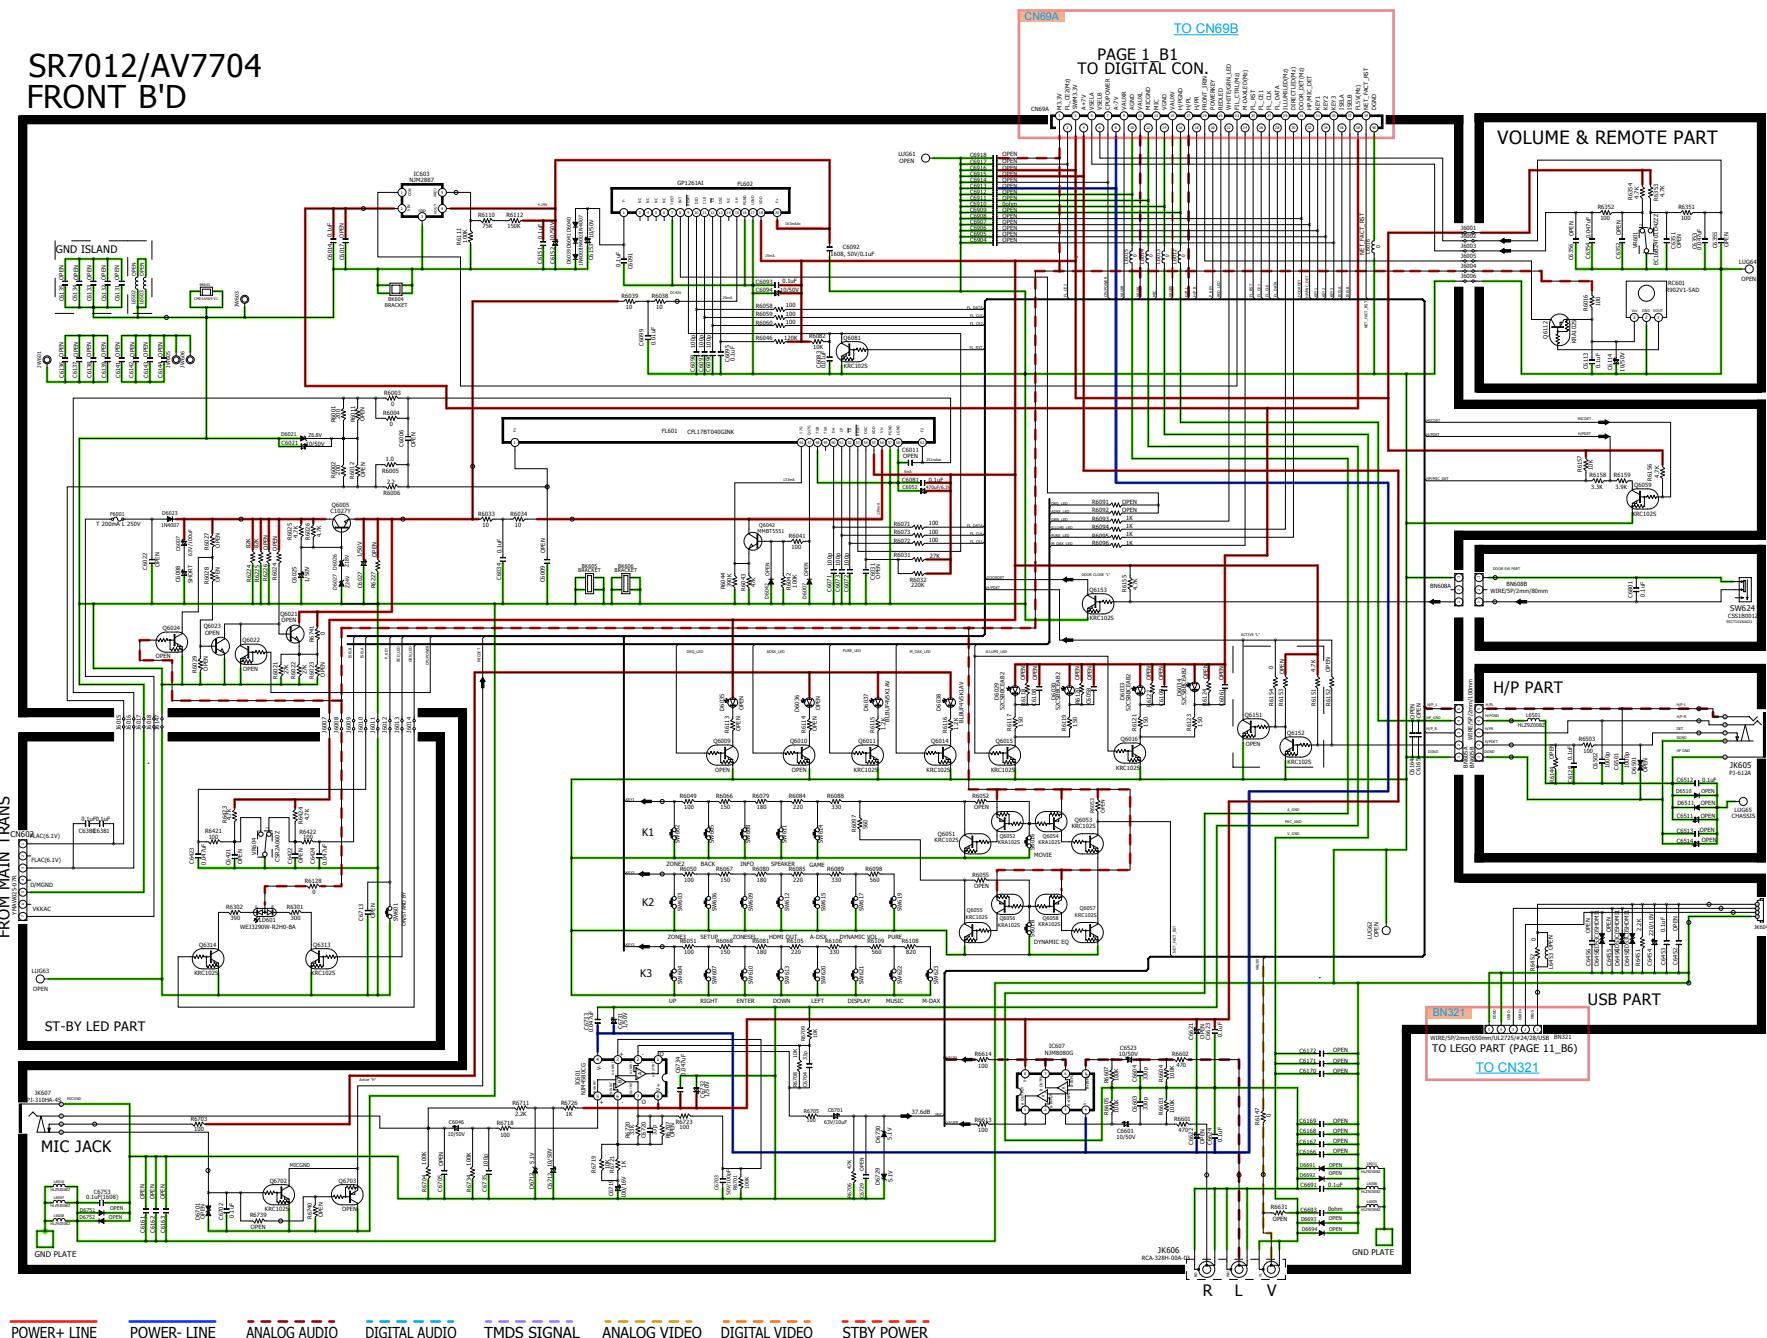SR7012/AV7704  
FRONT B'D

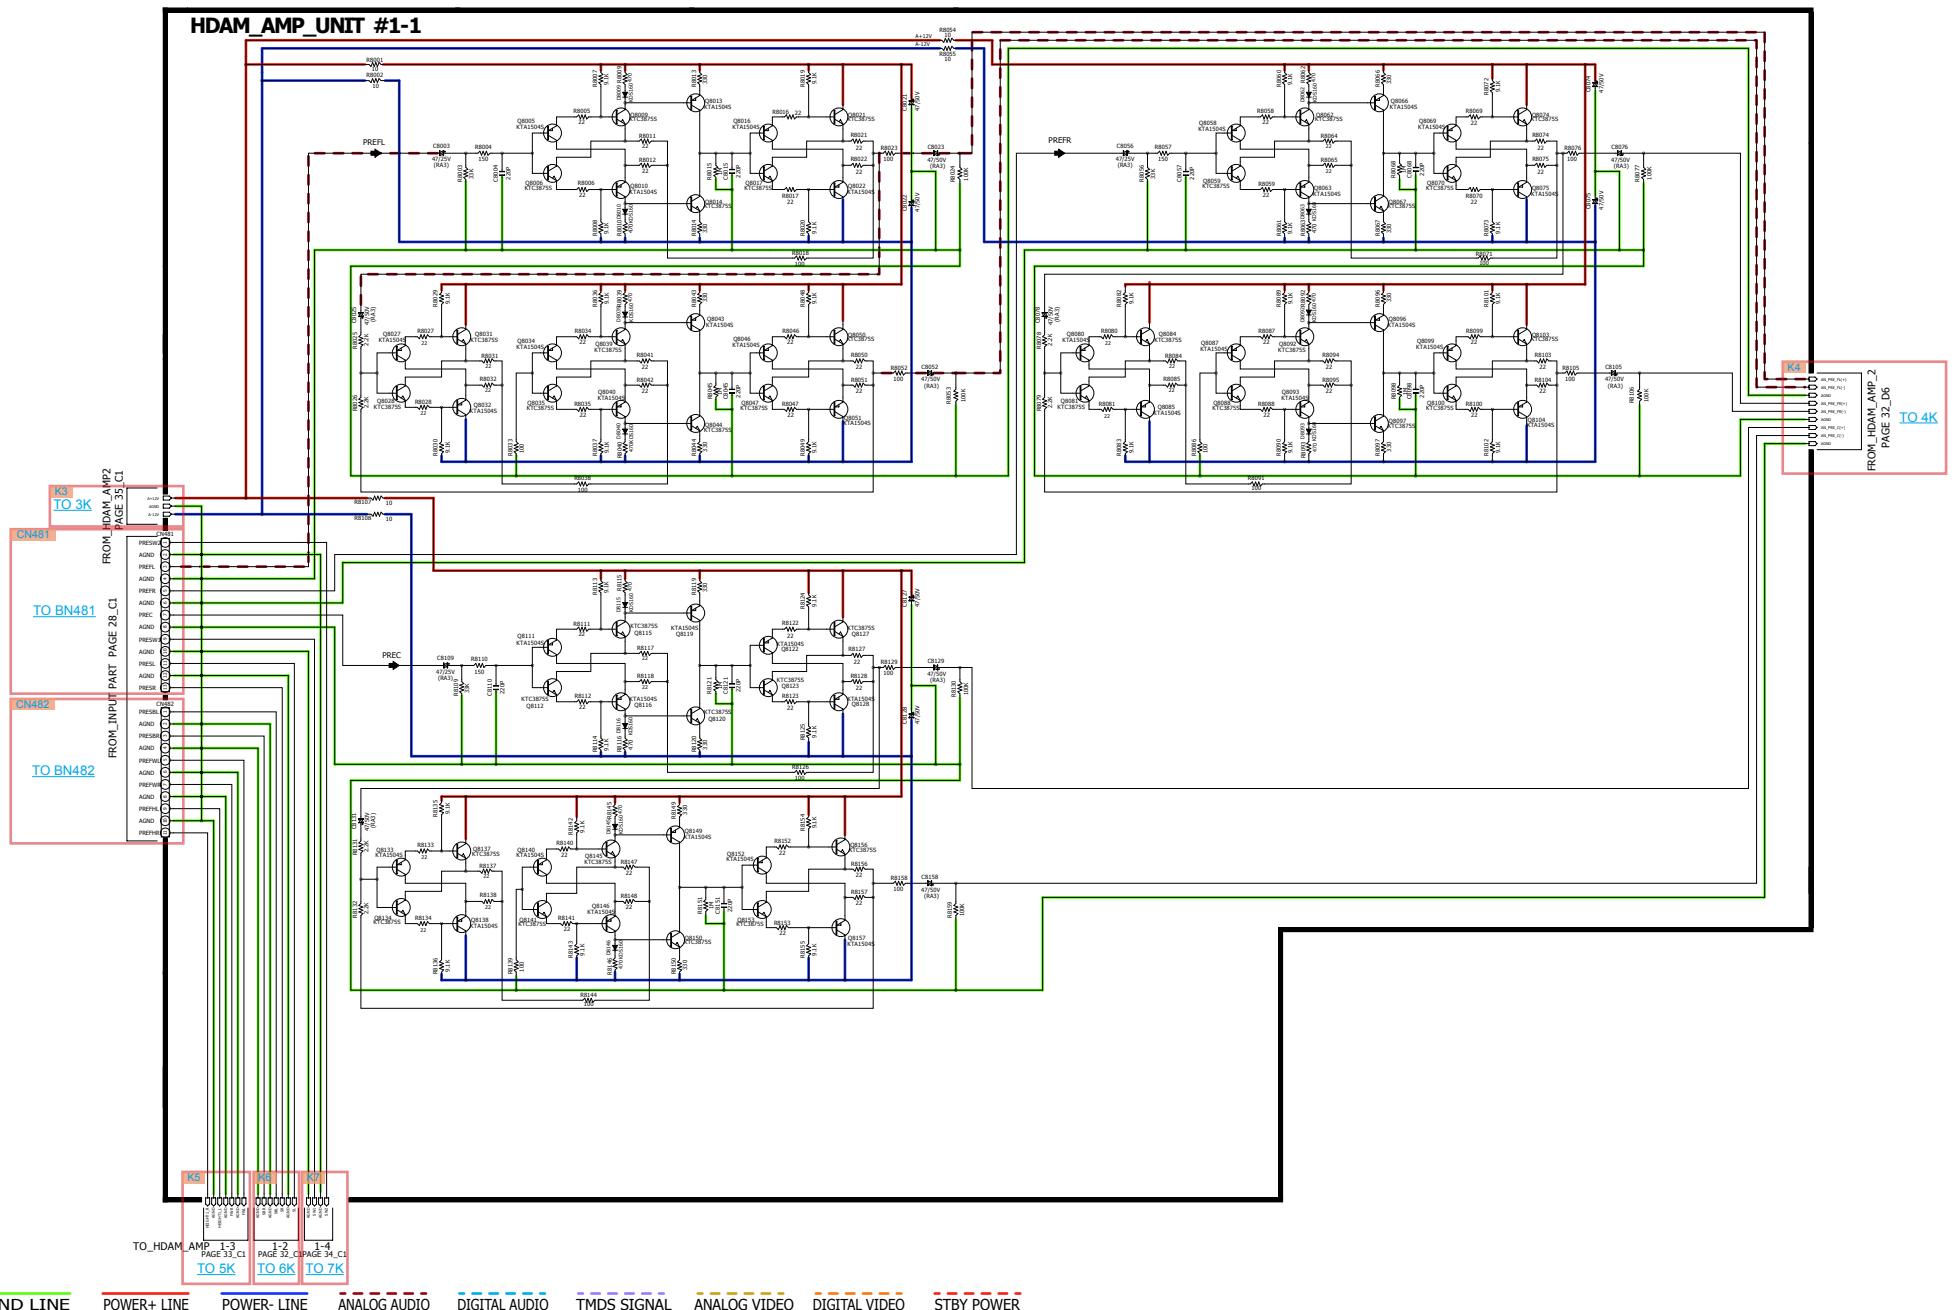


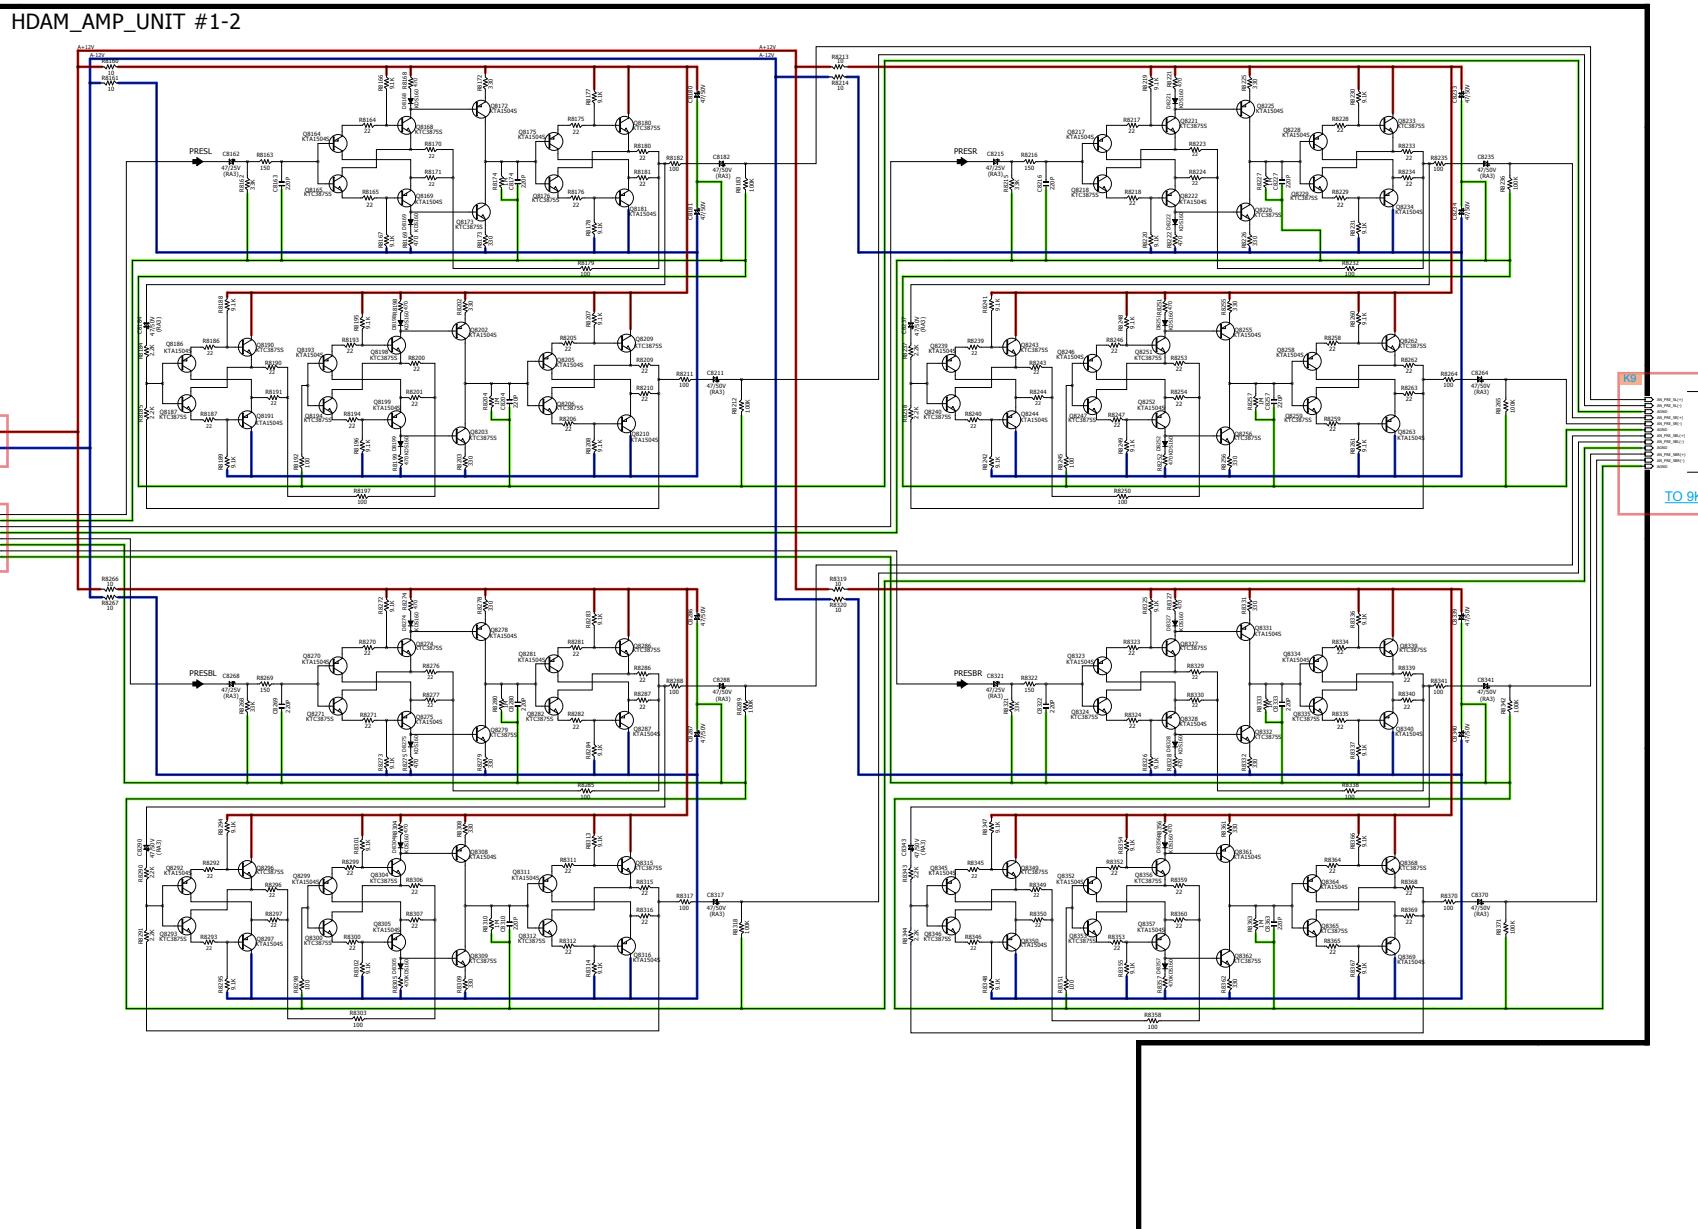


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

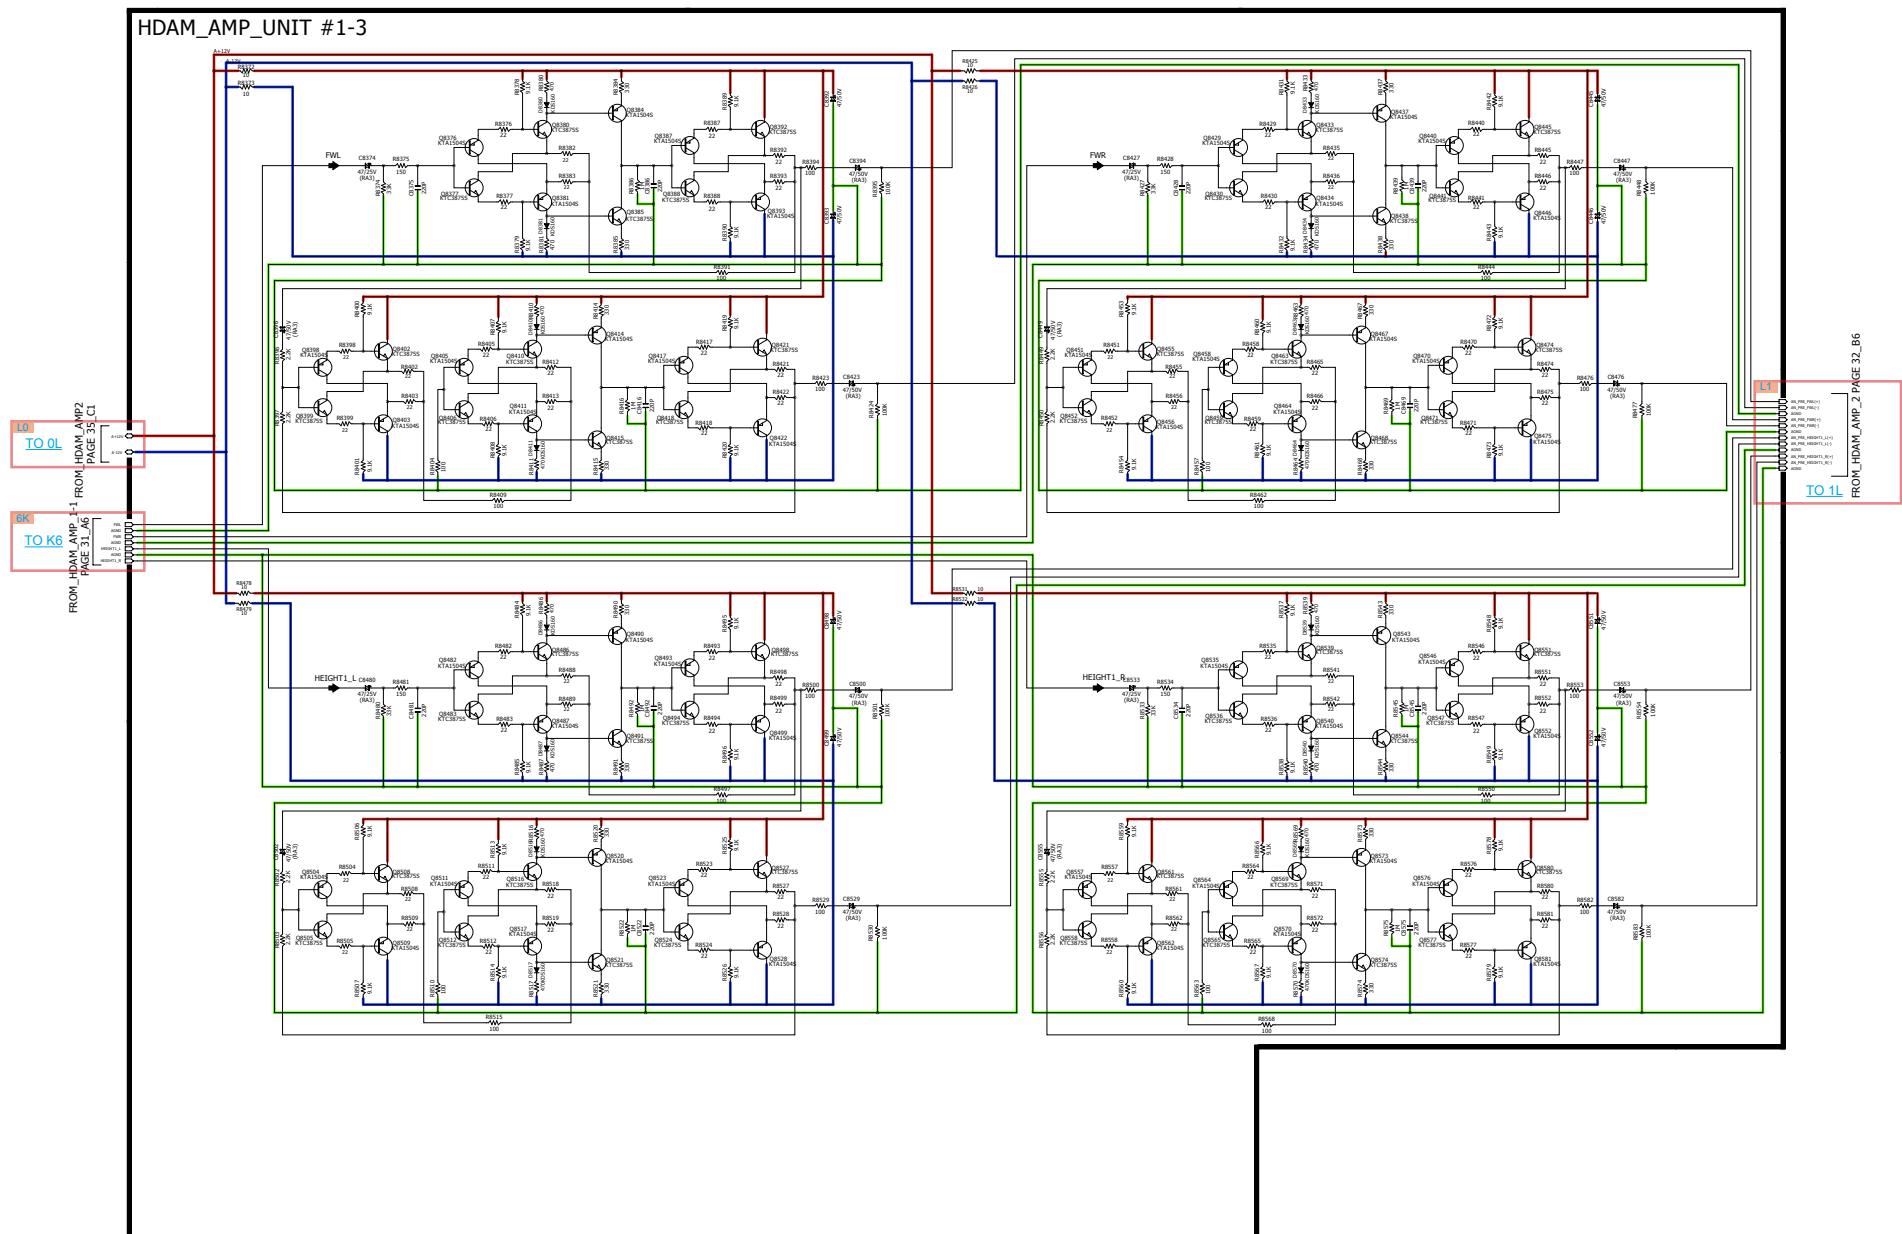


**GND LINE**      **POWER+ LINE**      **POWER- LINE**      **ANALOG AUDIO**      **DIGITAL AUDIO**      **TMDS SIGNAL**      **ANALOG VIDEO**      **DIGITAL VIDEO**      **STBY POWER**

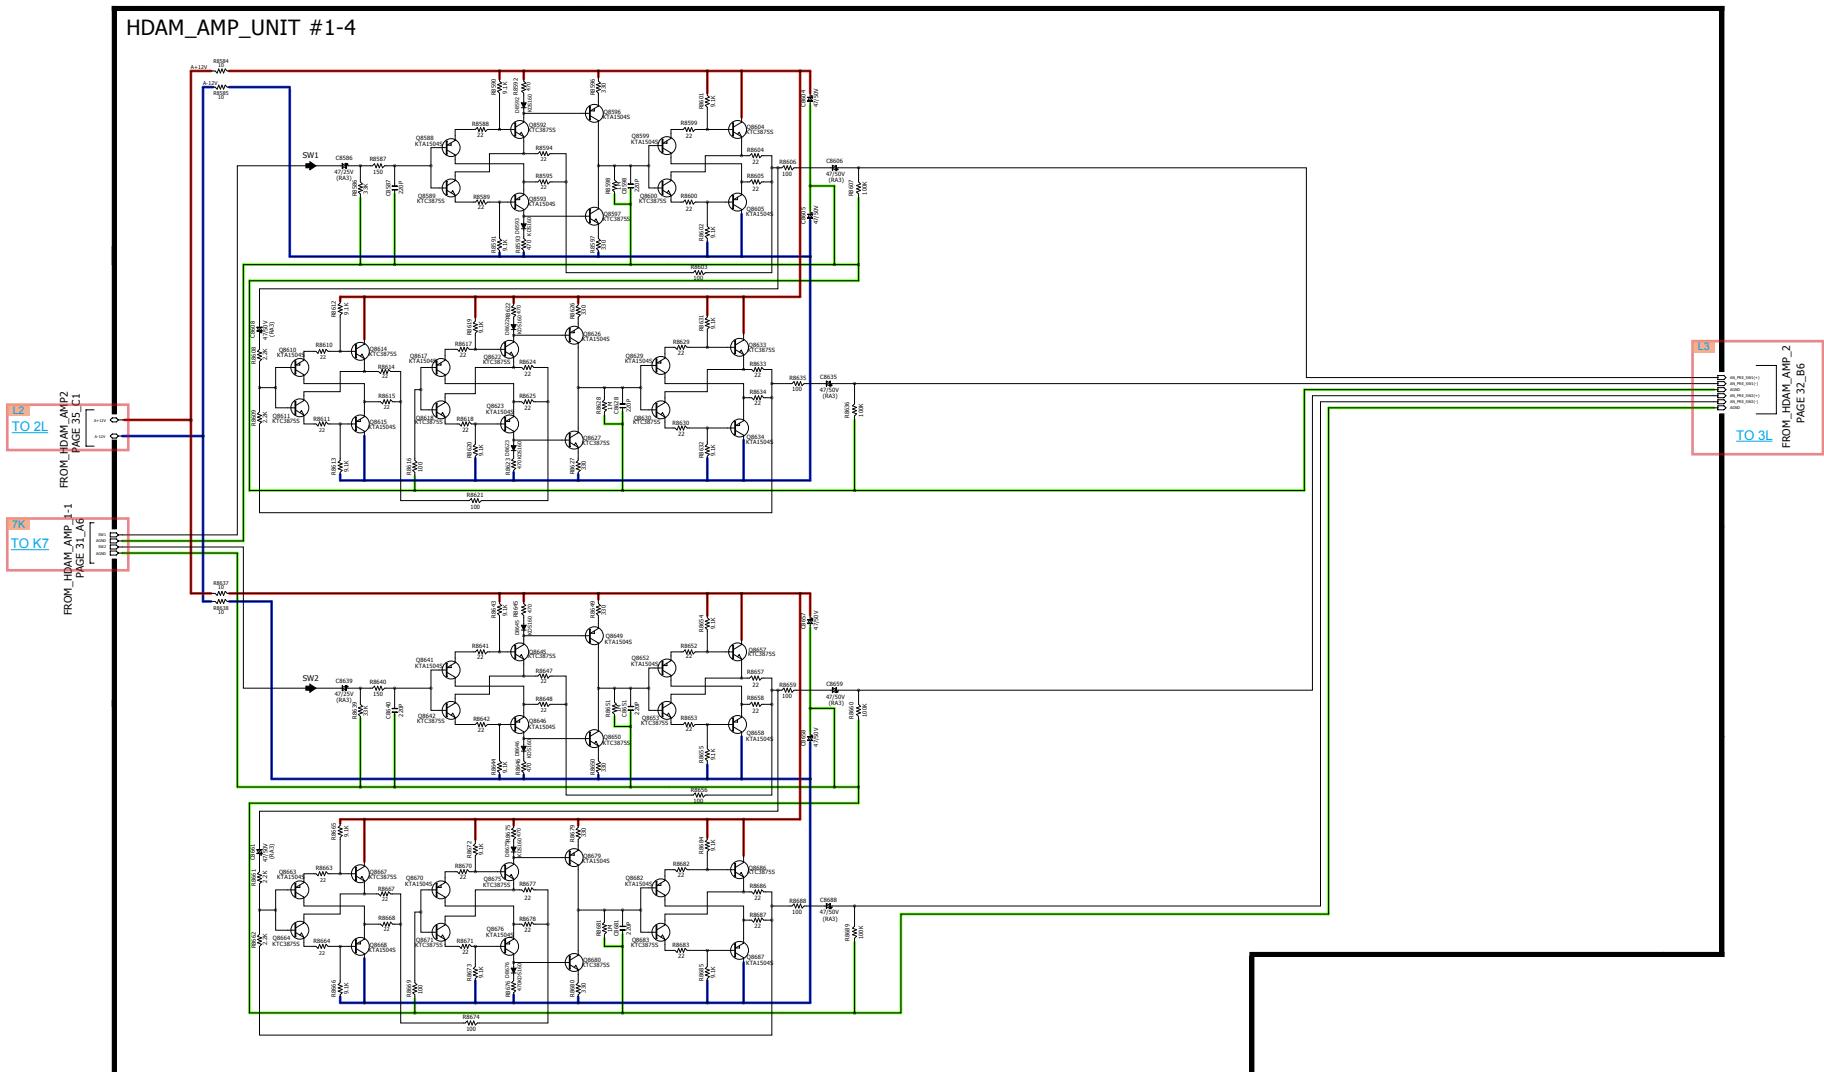

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

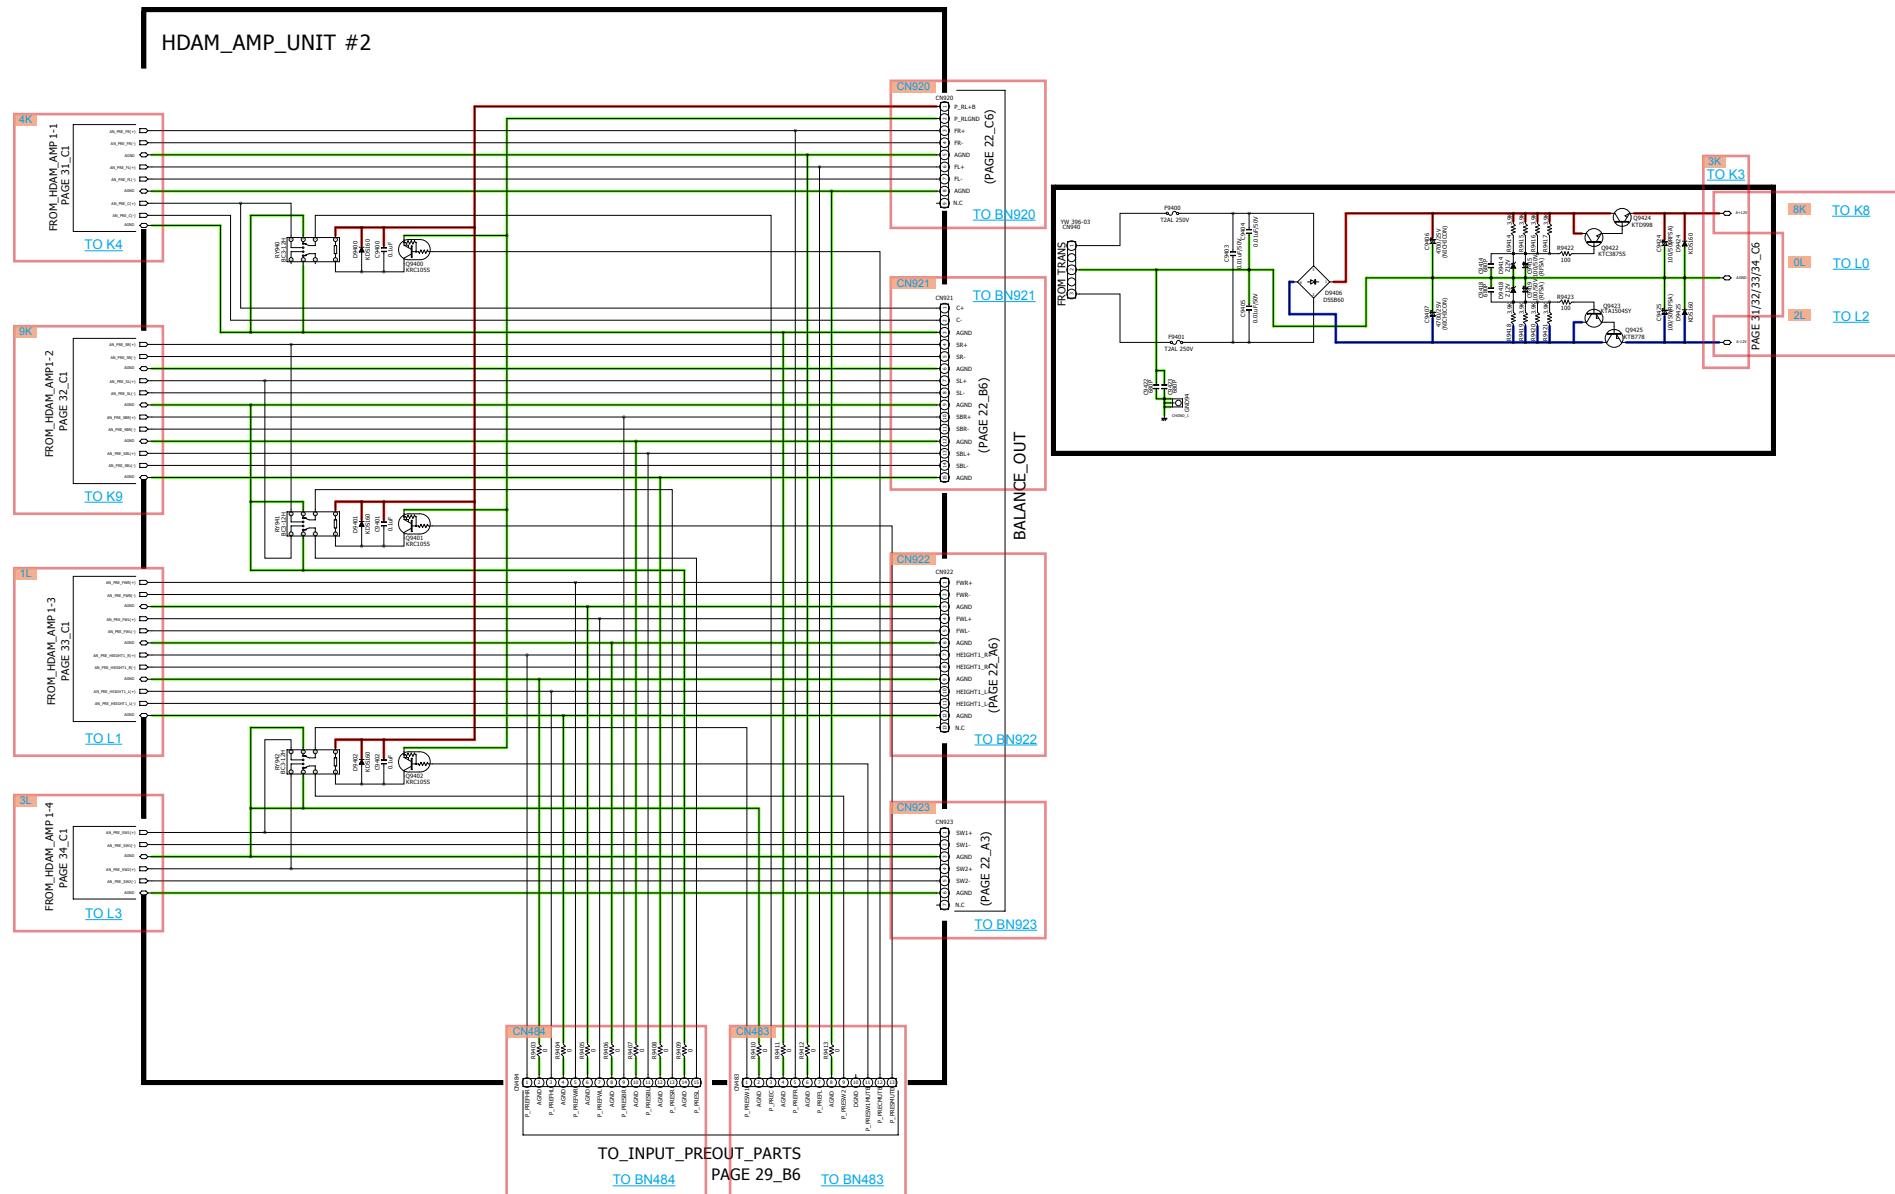

**GND LINE**      **POWER+ LINE**      **POWER- LINE**      **ANALOG AUDIO**      **DIGITAL AUDIO**      **TMDS SIGNAL**      **ANALOG VIDEO**      **DIGITAL VIDEO**      **STBY POWER**

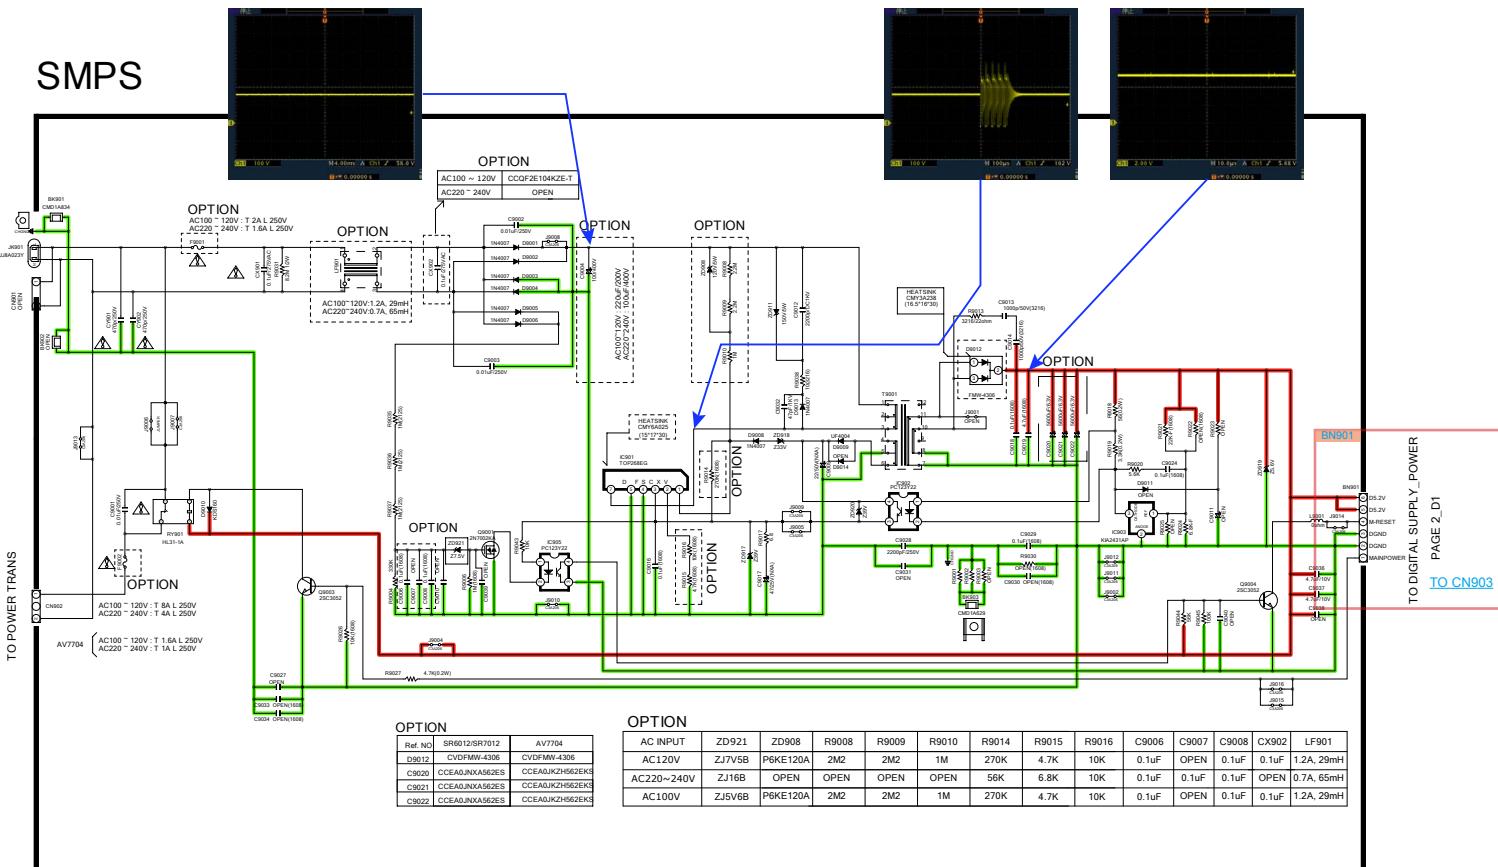


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

# PRINTED CIRCUIT BOARDS


## DIGITAL

### Lead-free Solder

When soldering, use the Lead-free Solder (Sn-Ag-Cu).

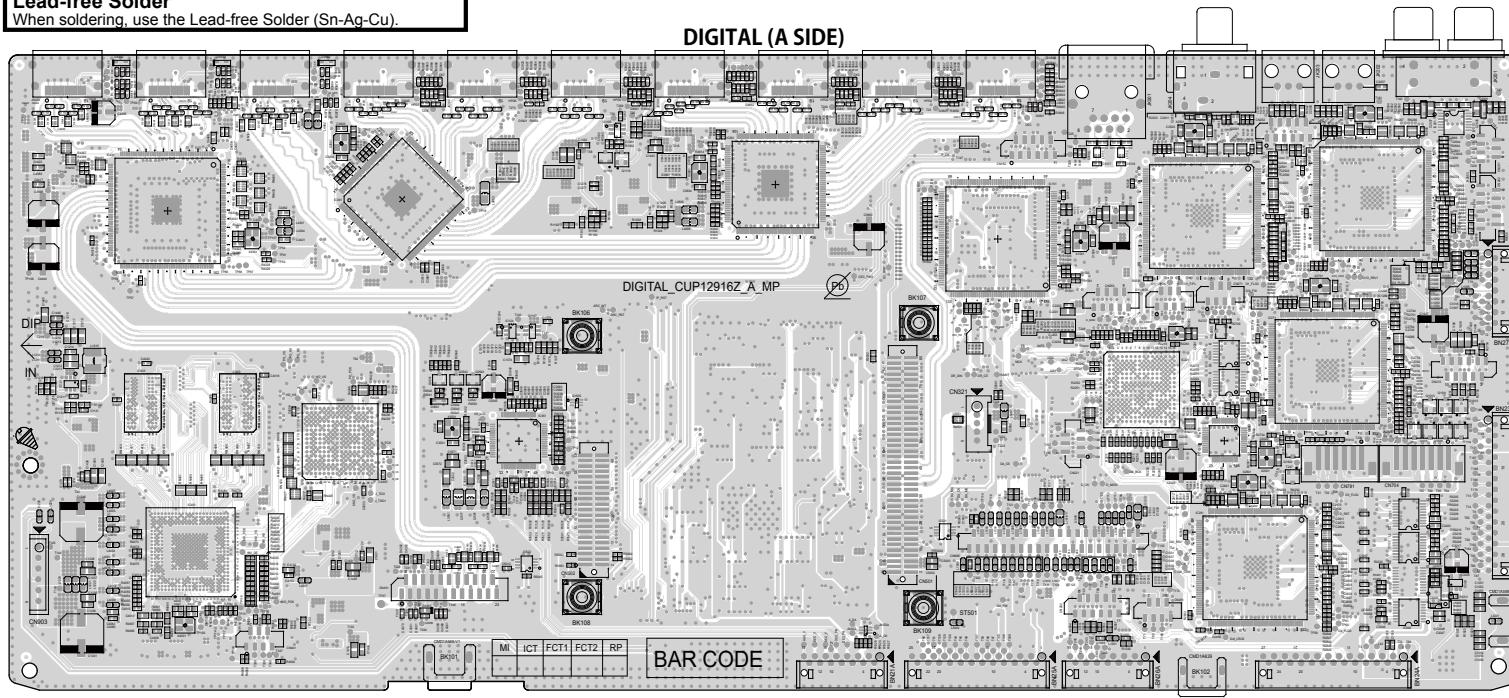


DIGITAL (A SIDE)

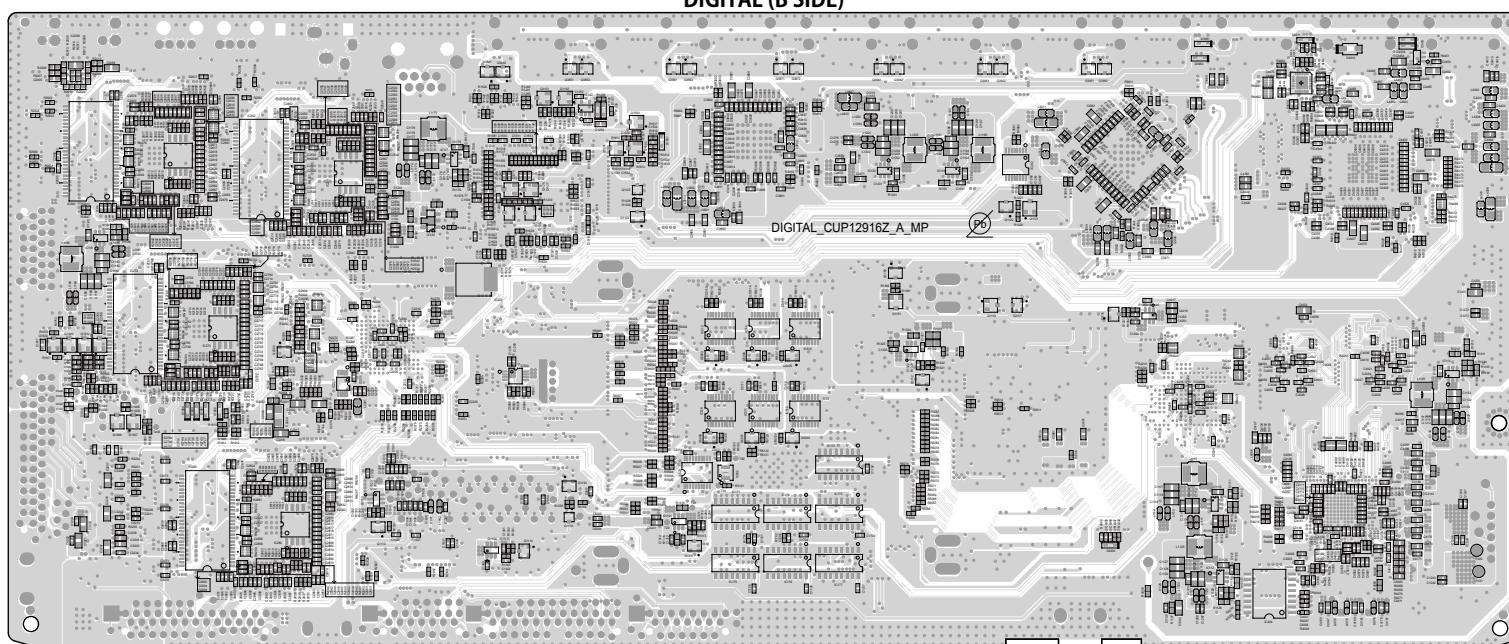

DIGITAL (B SIDE)

## INPUT, F-HDMI, FRONT CABLE

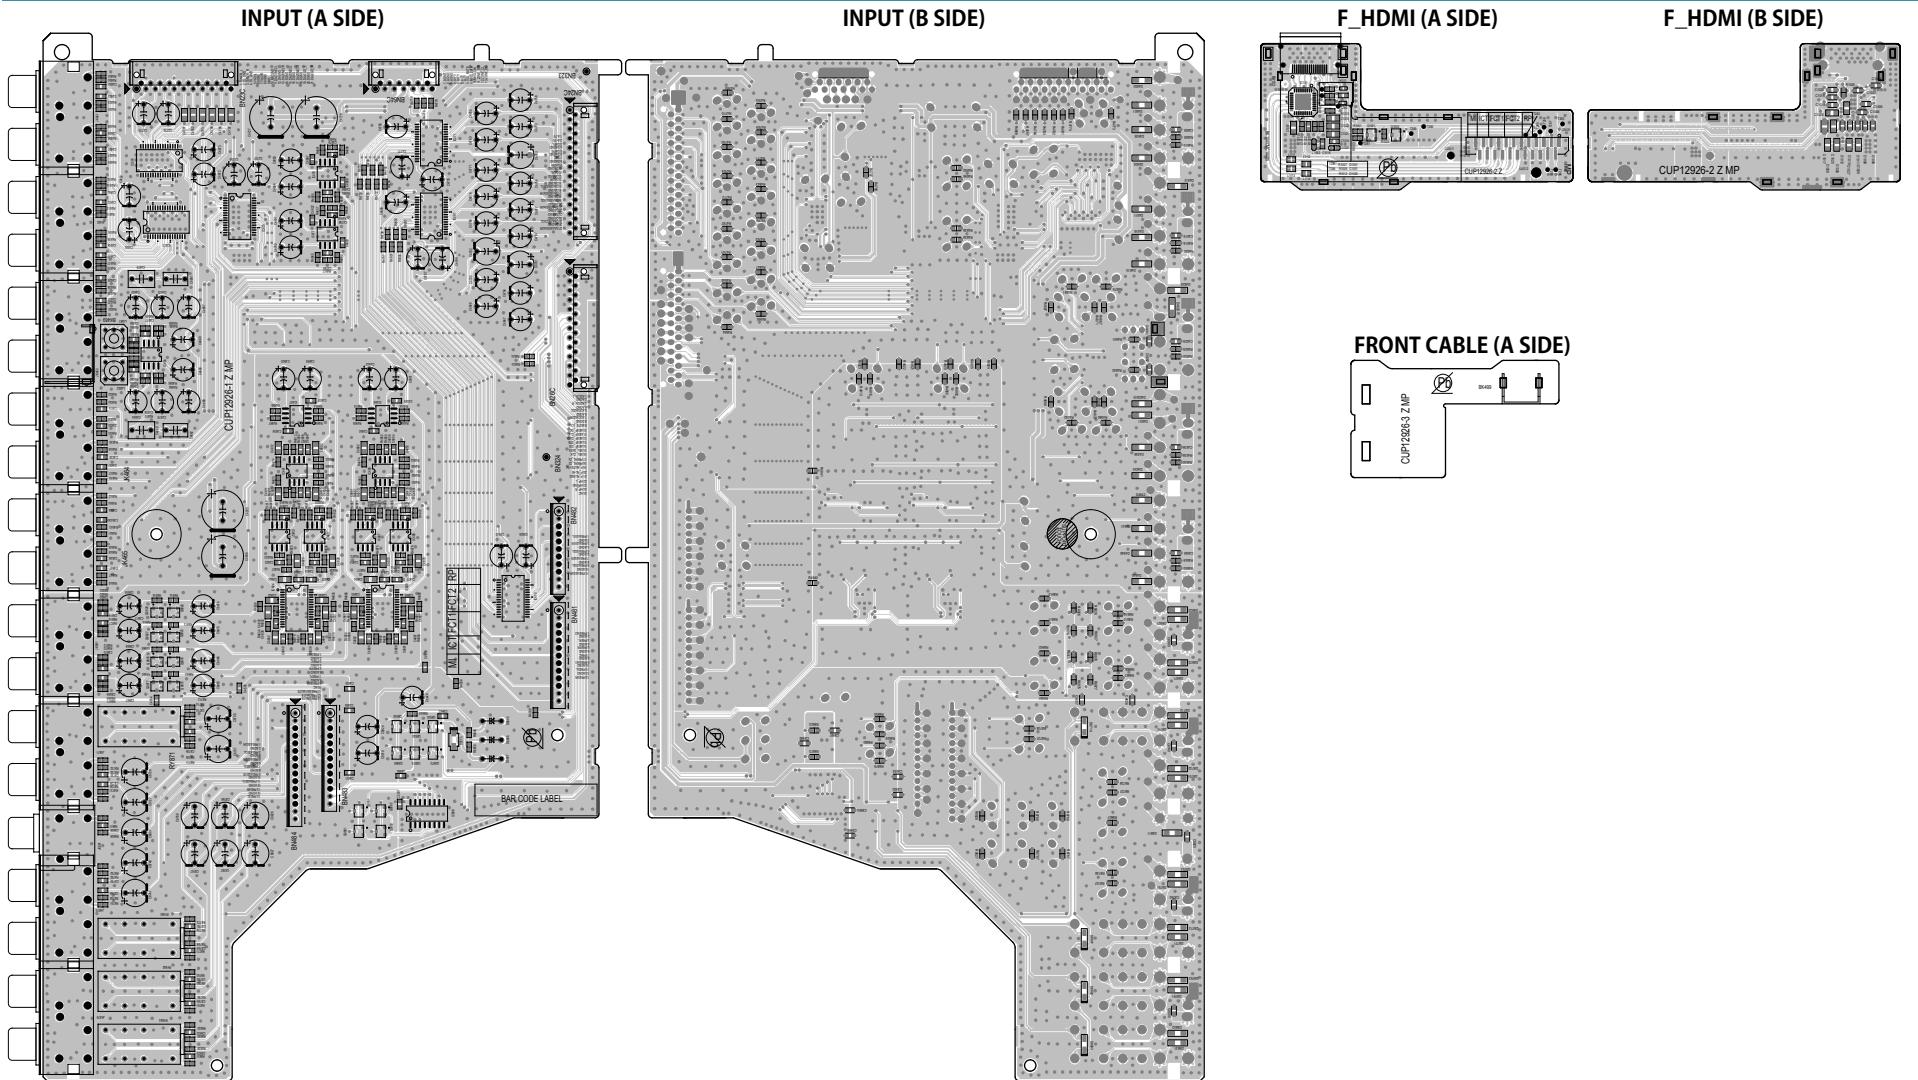

Caution in  
servicing


Electrical



Mechanical


Repair Information

Updating


## VIDEO, GUIDE, SIDE CNT, GUIDE FFC1

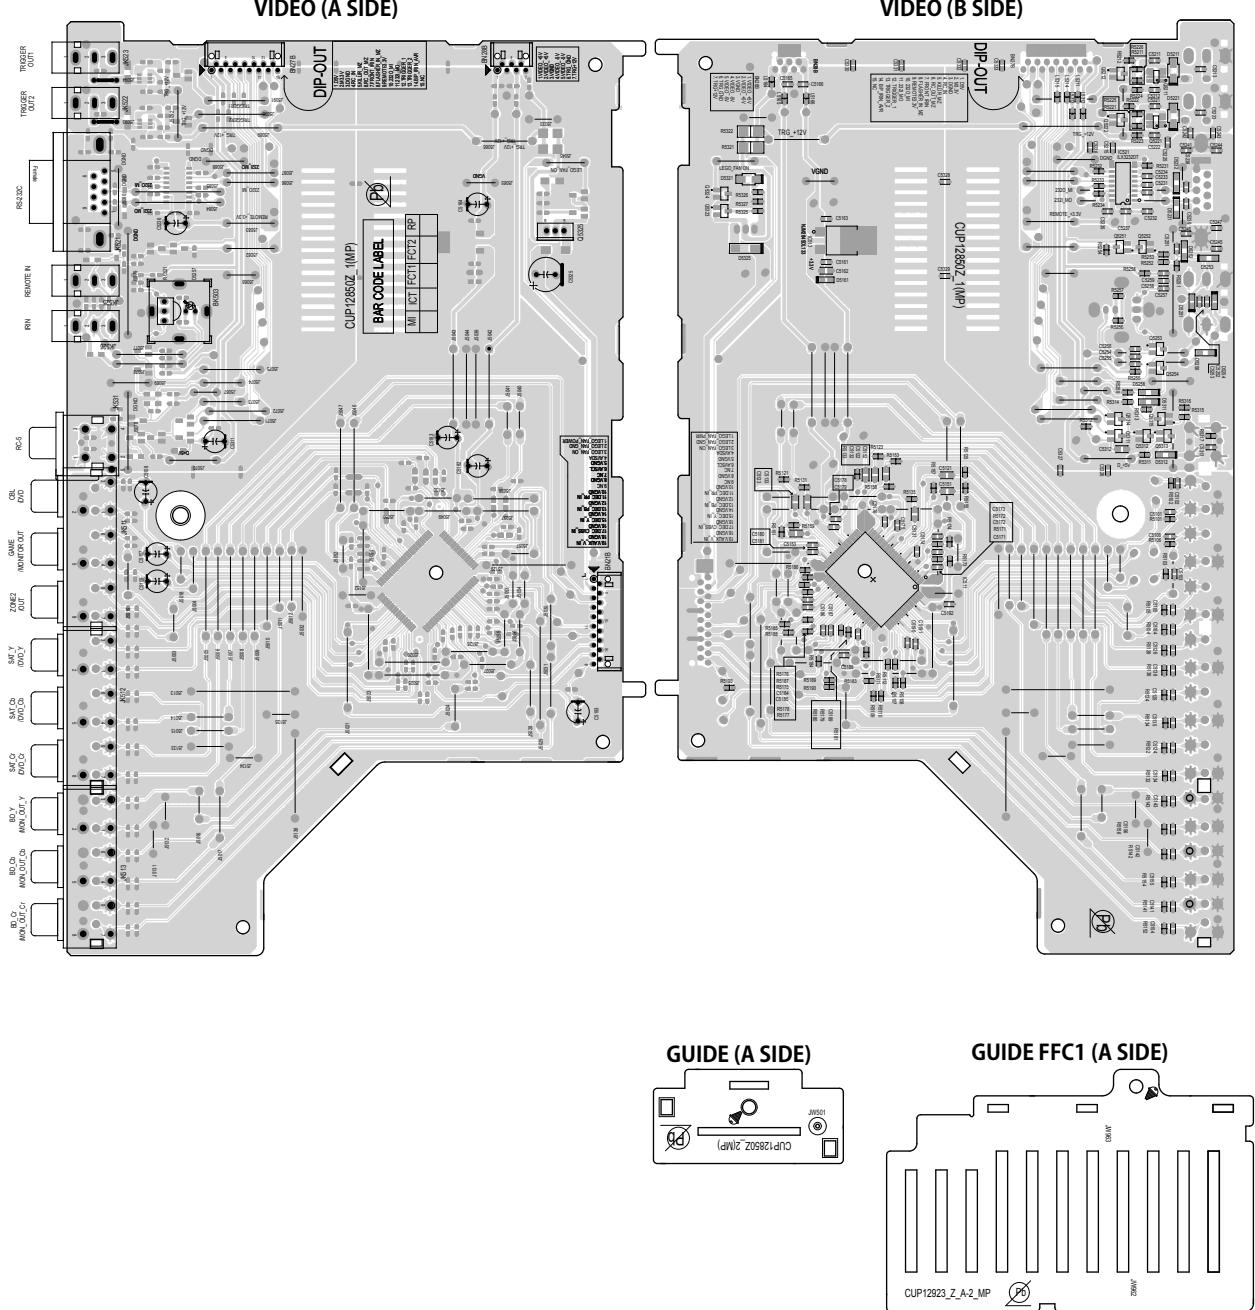

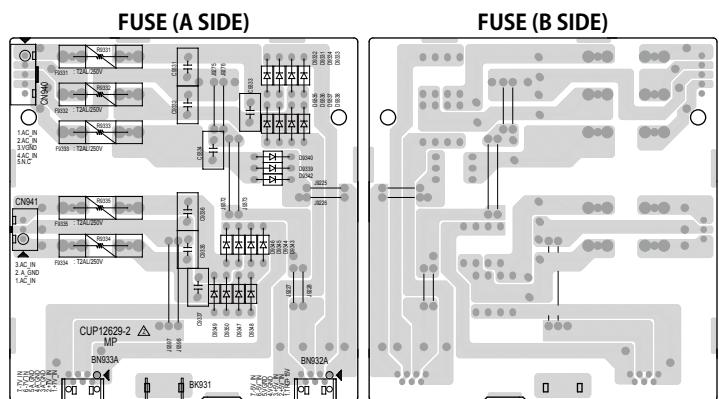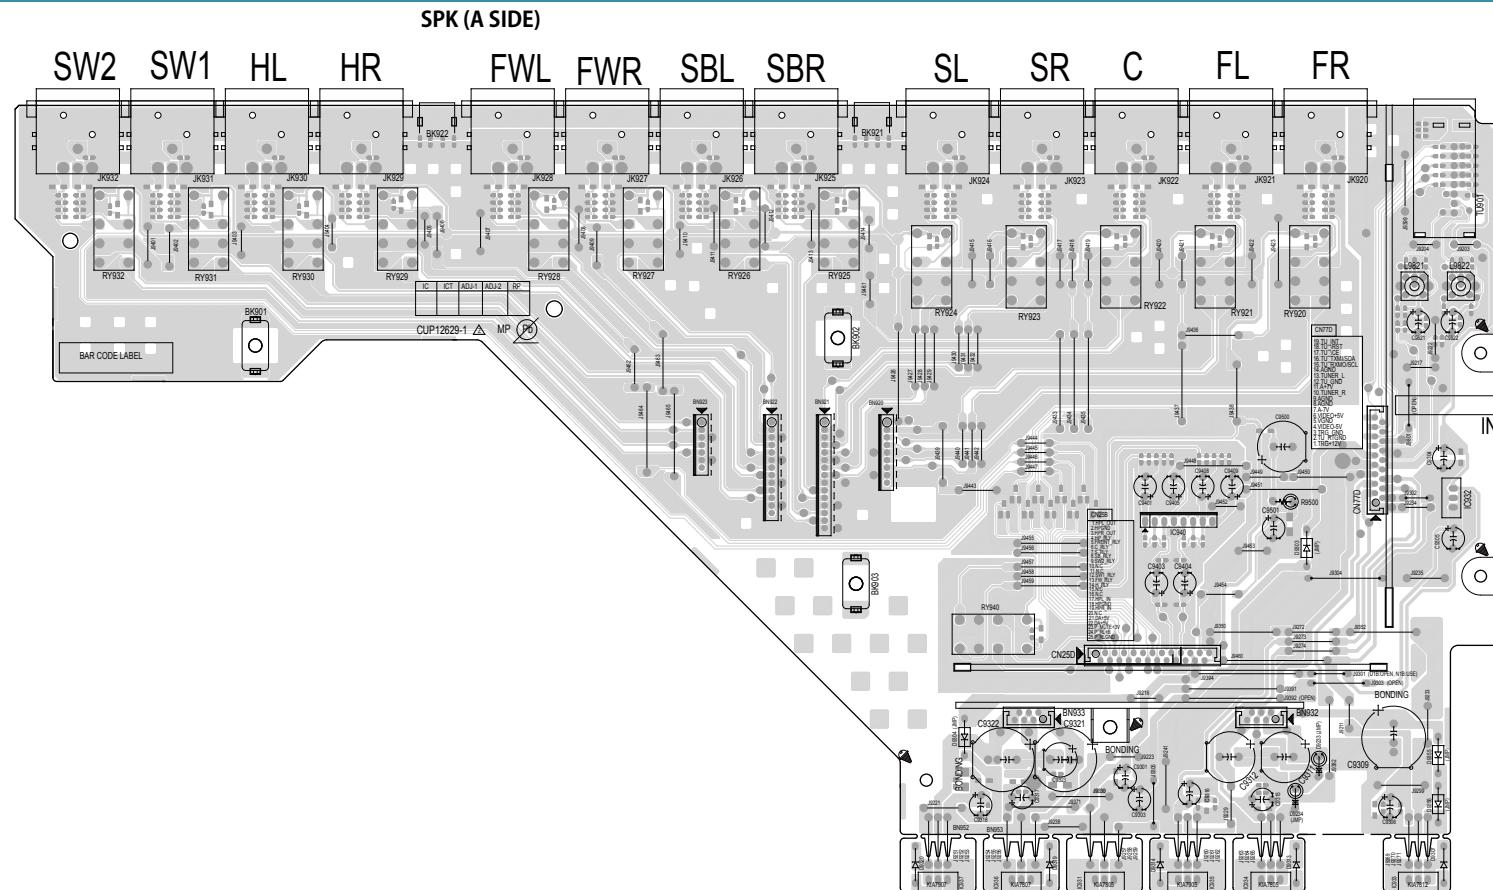


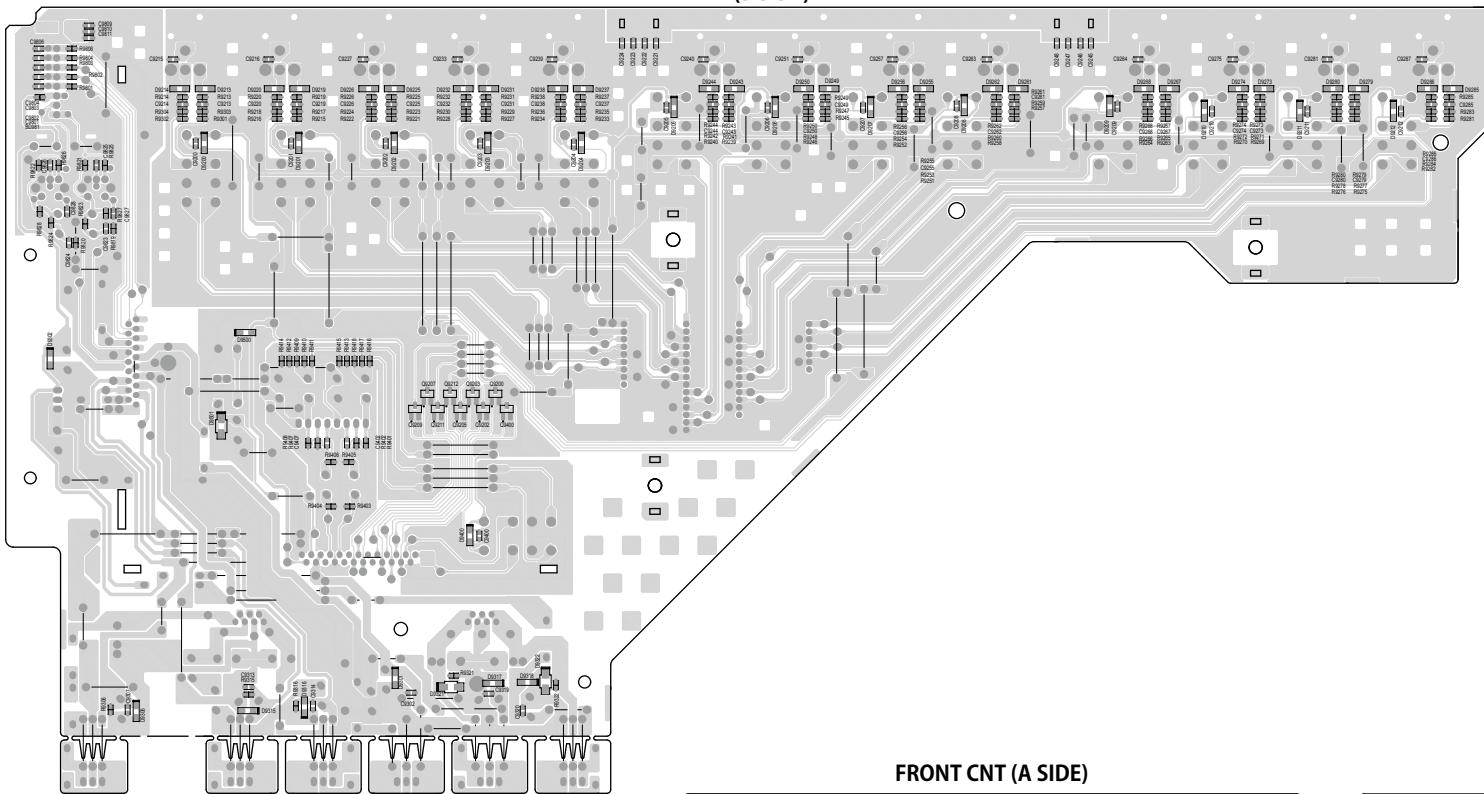






## **FRONT CNT (A SIDE)**

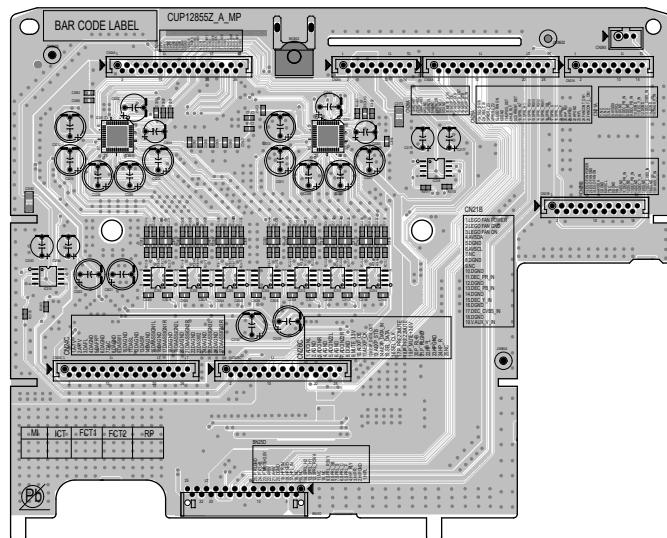


**FRONT CNT (B SIDE)**

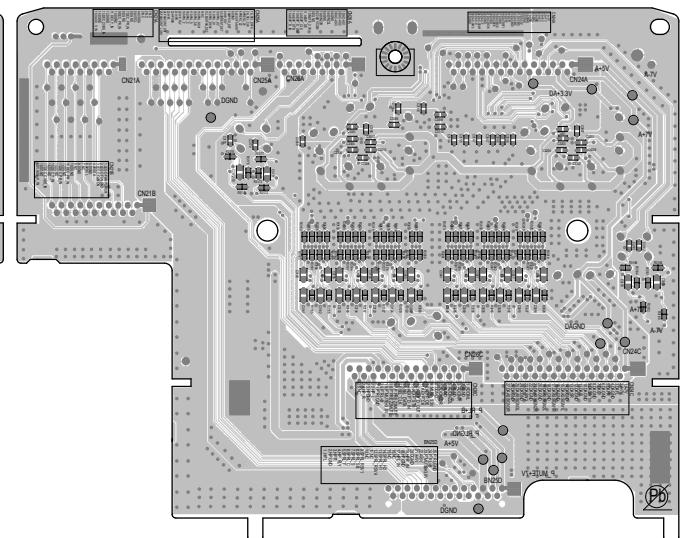


## FRONT, FHDMI FFC TOP, FRONT SW, HP, FHDMI FFC TOP B

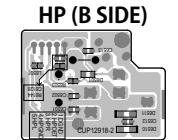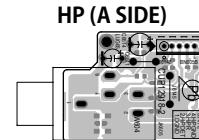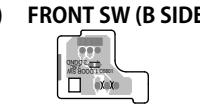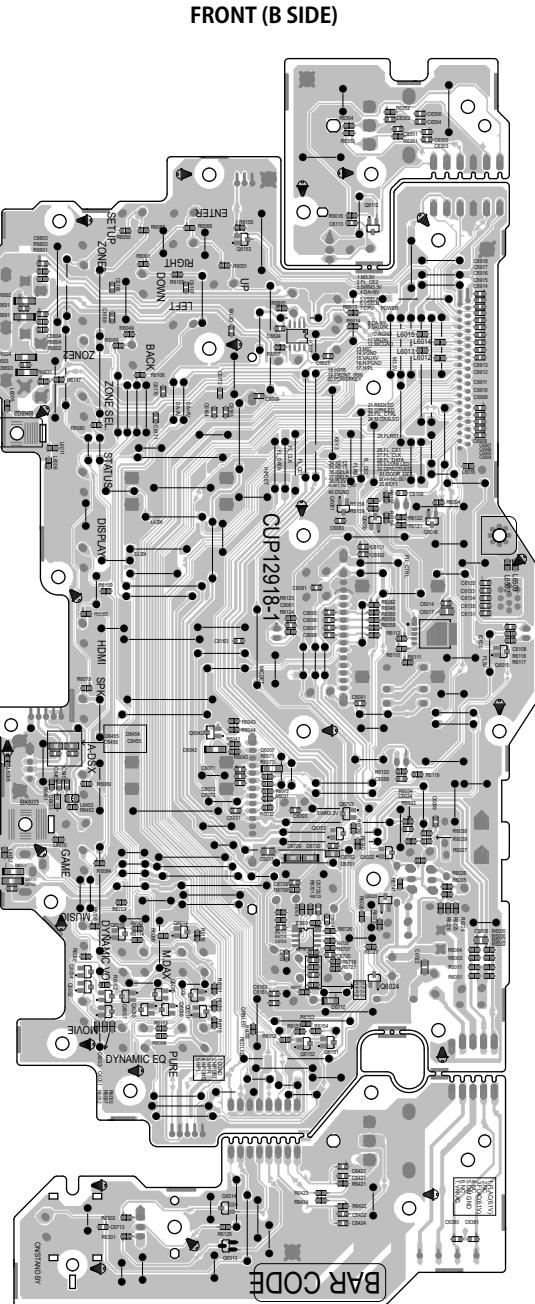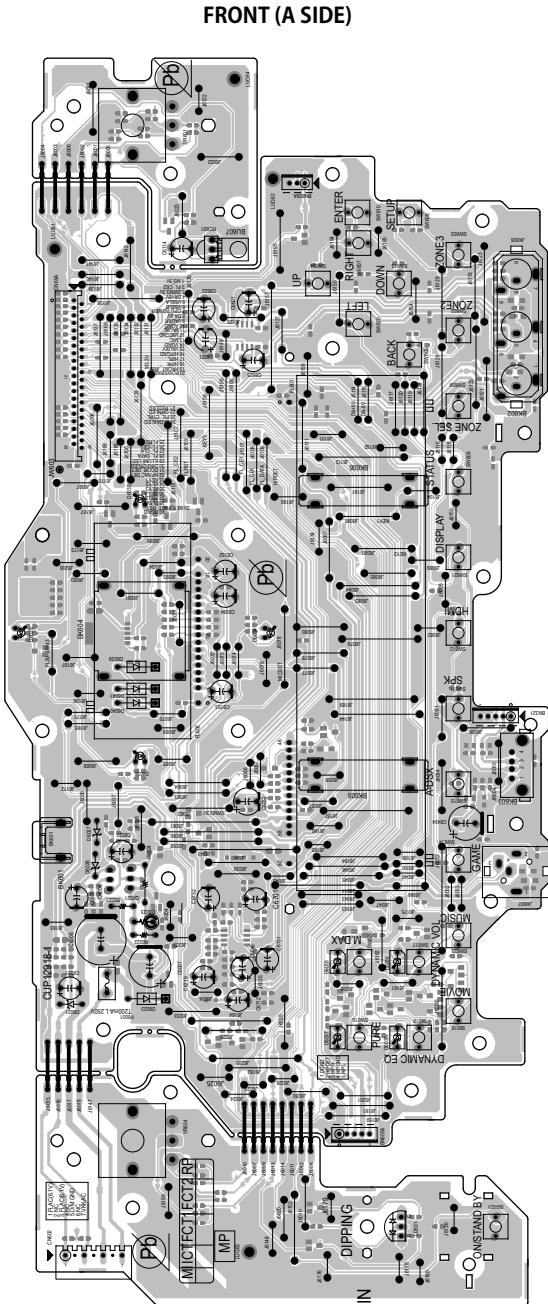





**FHDMI FFC TOP (A SIDE)**

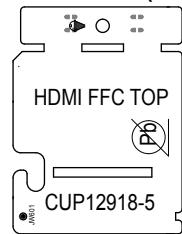

**FHDMI FFC TOP B (A SIDE)**

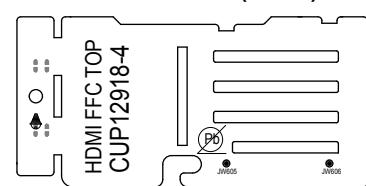

## HDAM, SMPS

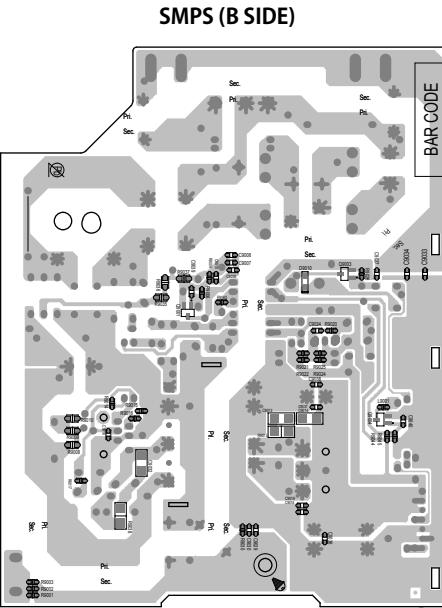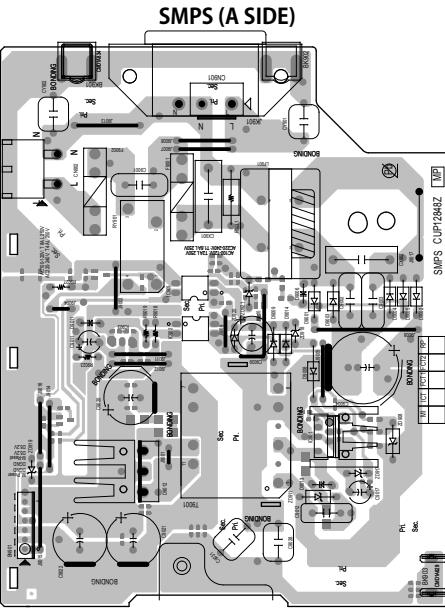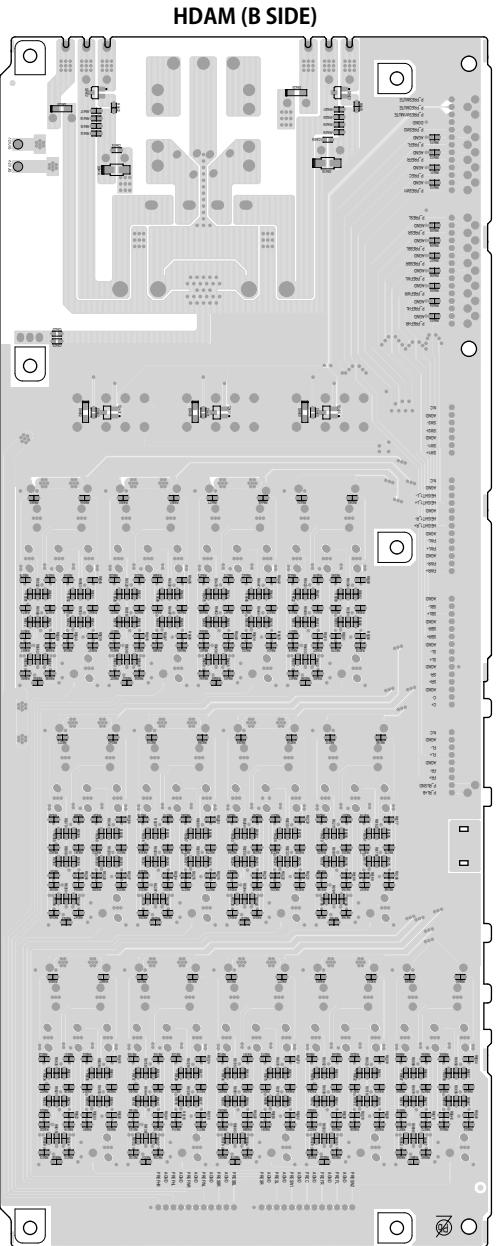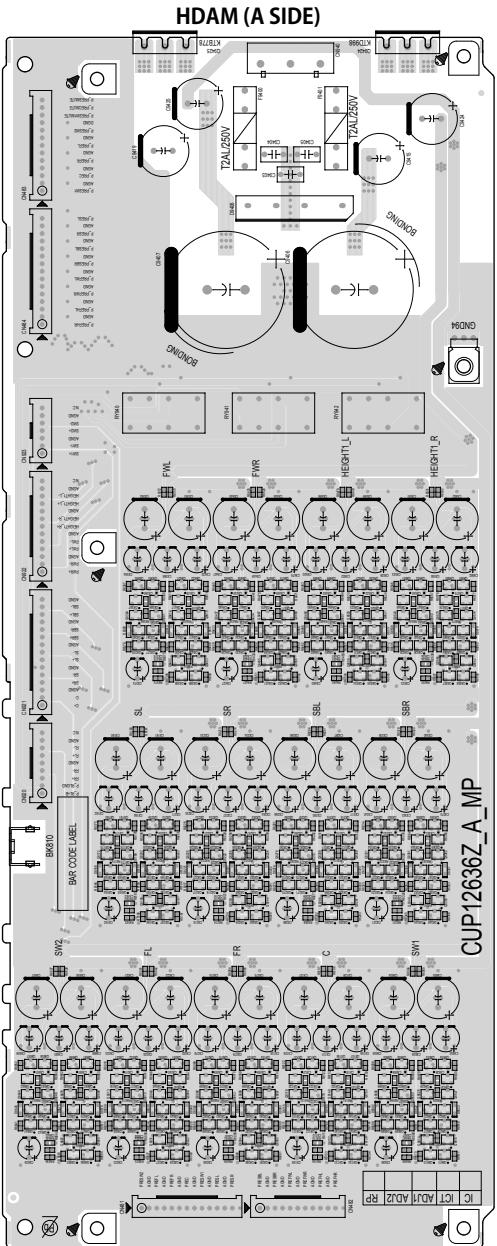

Caution in  
servicing

Electrical



Mechanical

Repair Information



Updating

## LEVEL DIAGRAM



FRONT ch

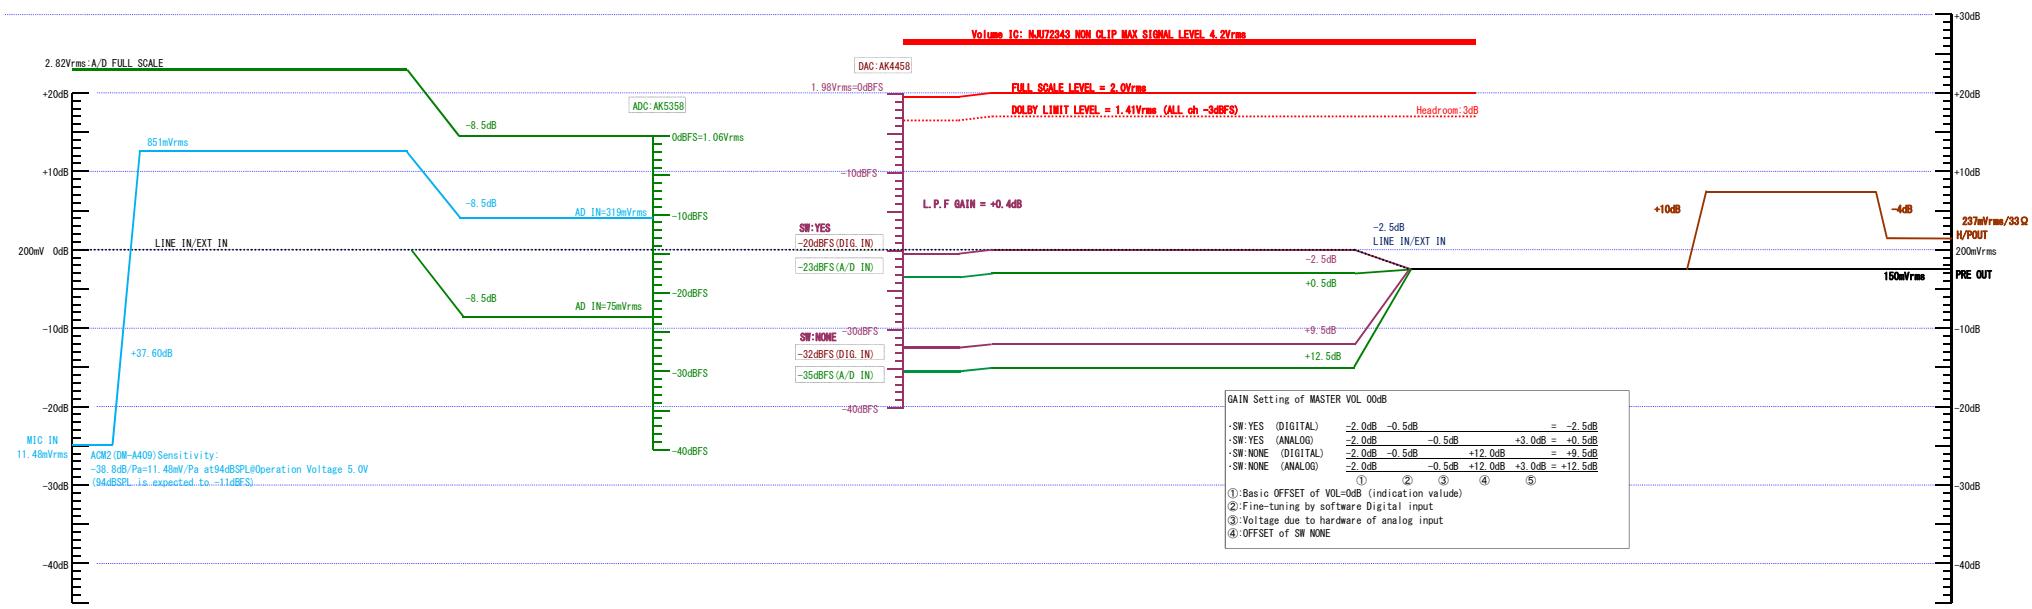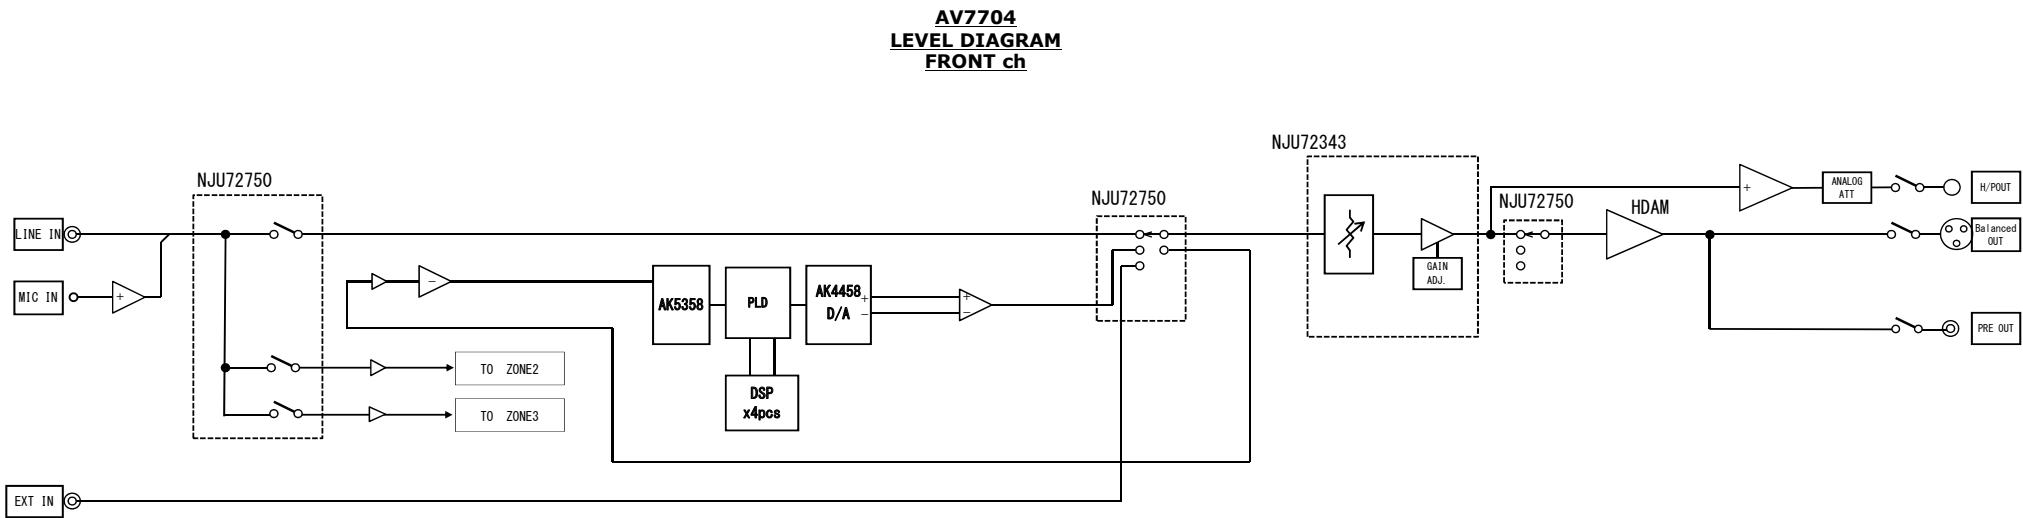



**AV7704  
LEVEL DIAGRAM  
CENTER/SURROUND ch**

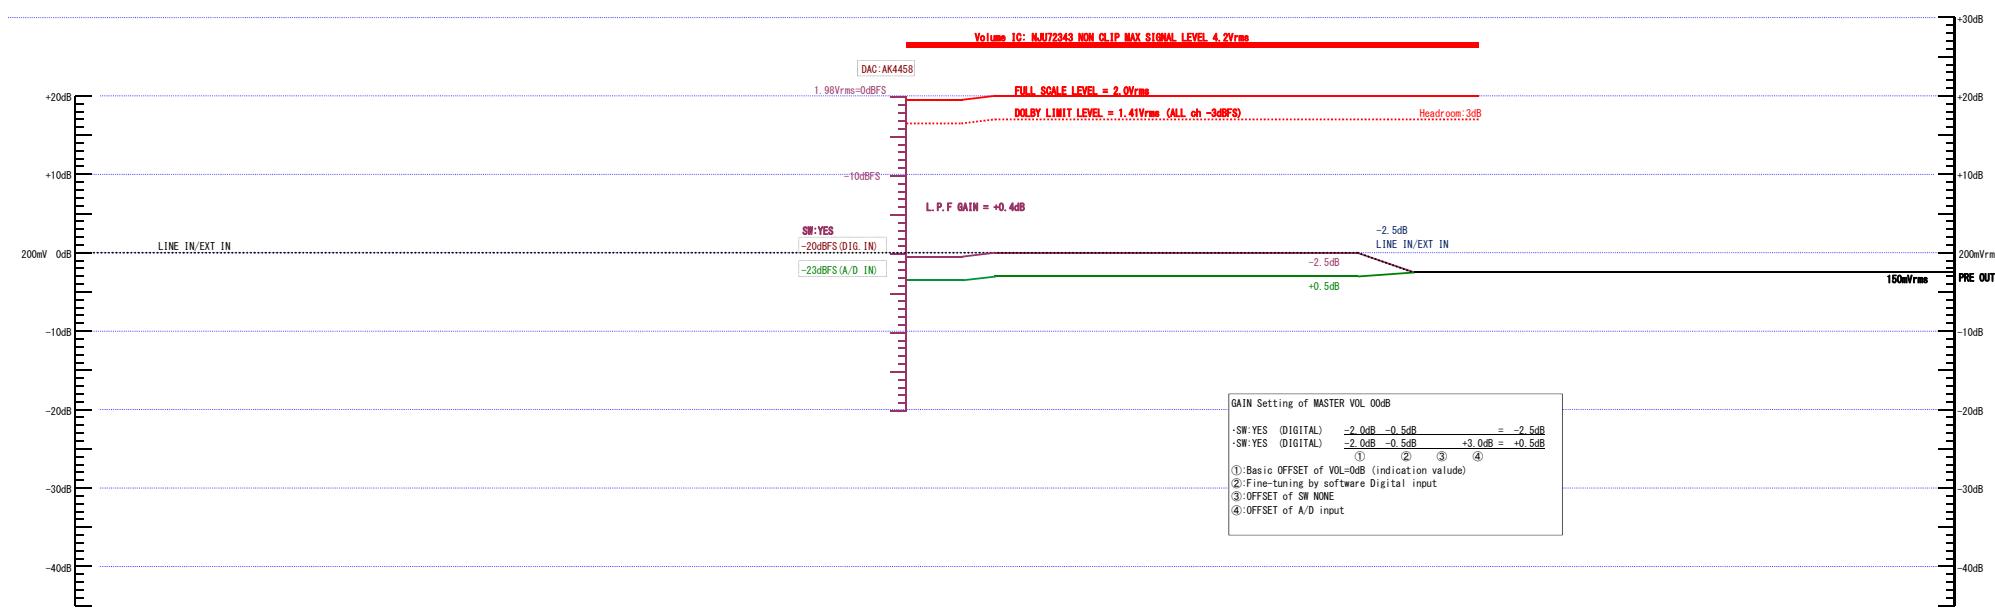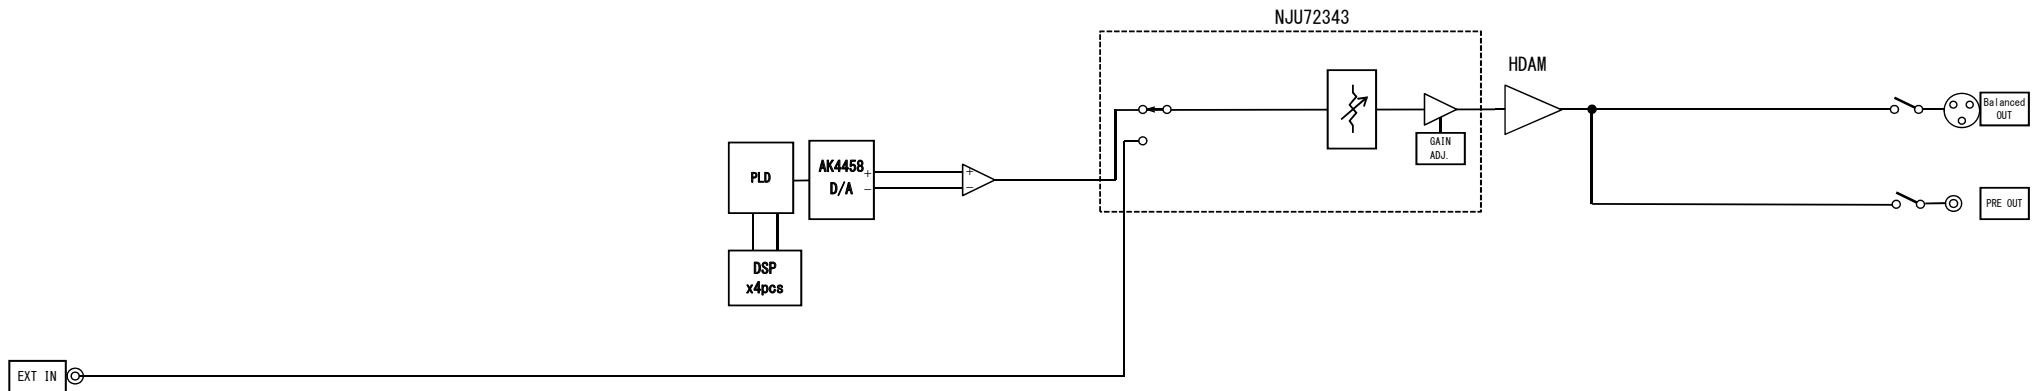


**AV7704  
LEVEL DIAGRAM  
SUB WOOFER ch**

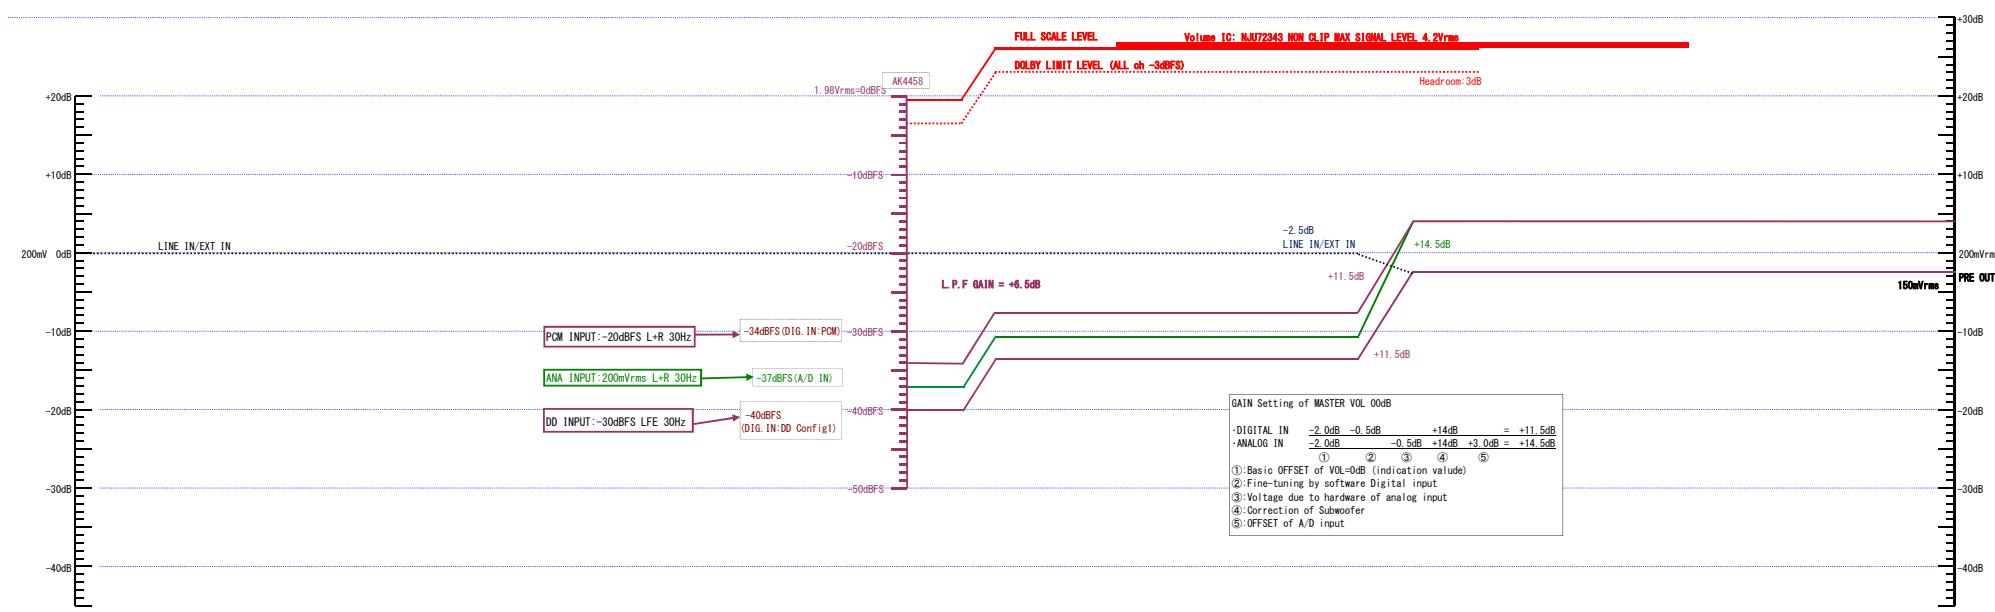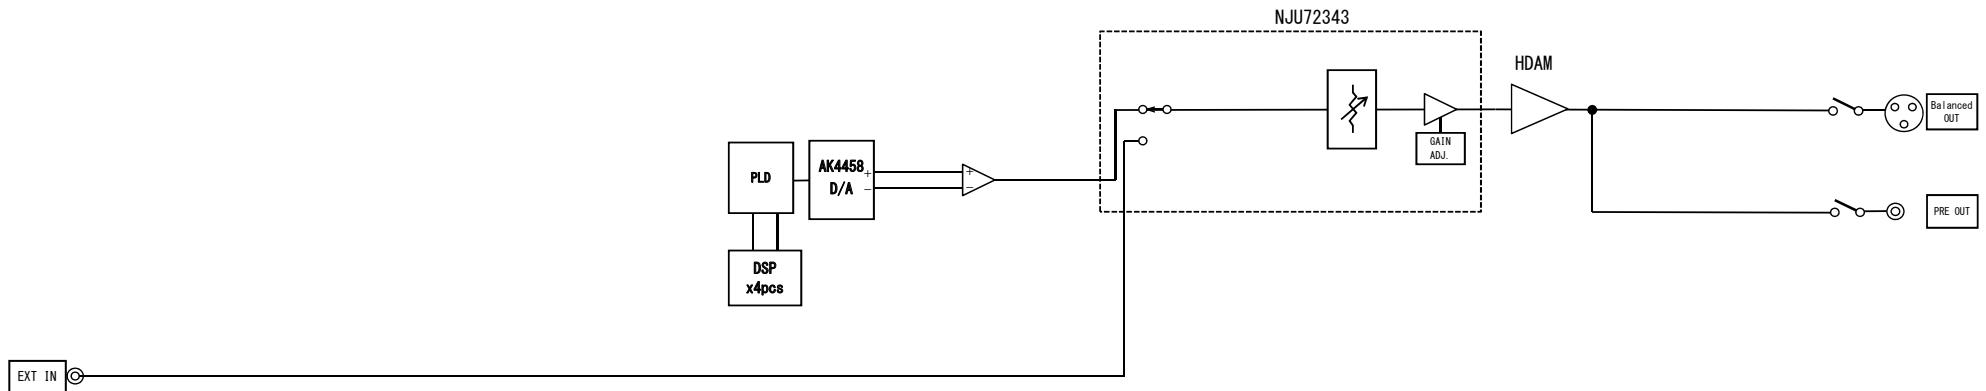

**AV7704  
LEVEL DIAGRAM  
ASSIGN1/2/3 (SURROUND BACK/HEIGHT1/HEIGHT2) ch**

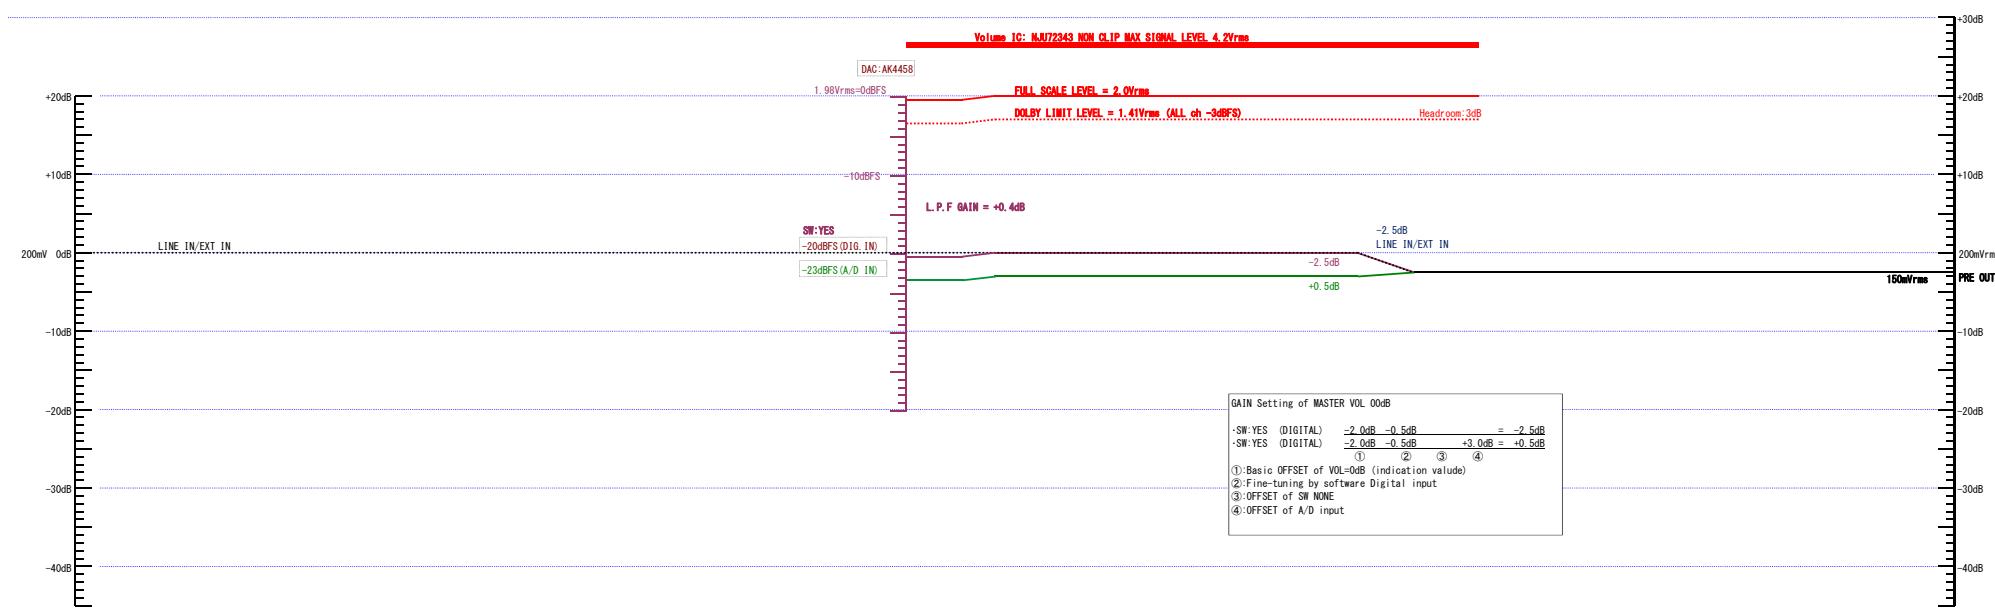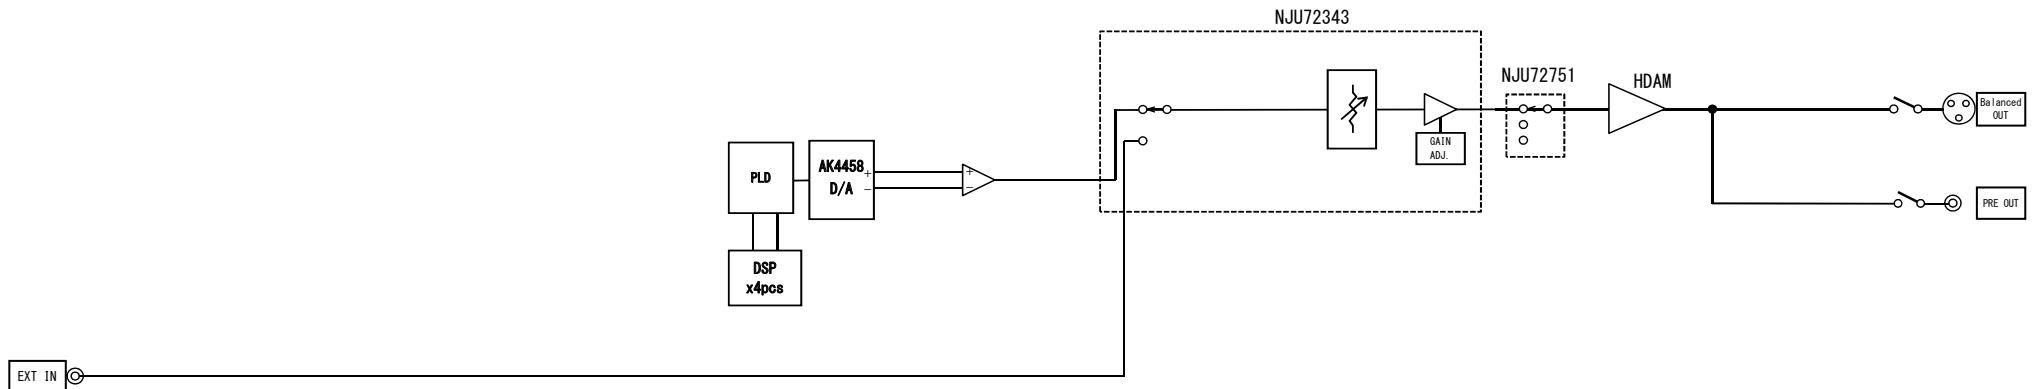


**AV7704**  
**LEVEL DIAGRAM**  
**ZONE2/ZONE3**

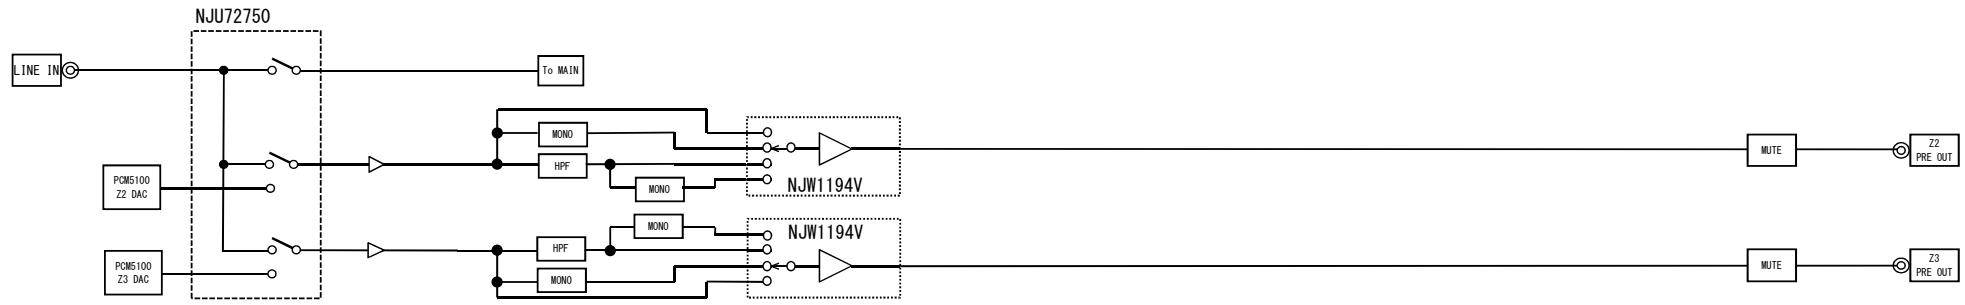

## BLOCK DIAGRAM

# ANALOG AUDIO DIAGRAM

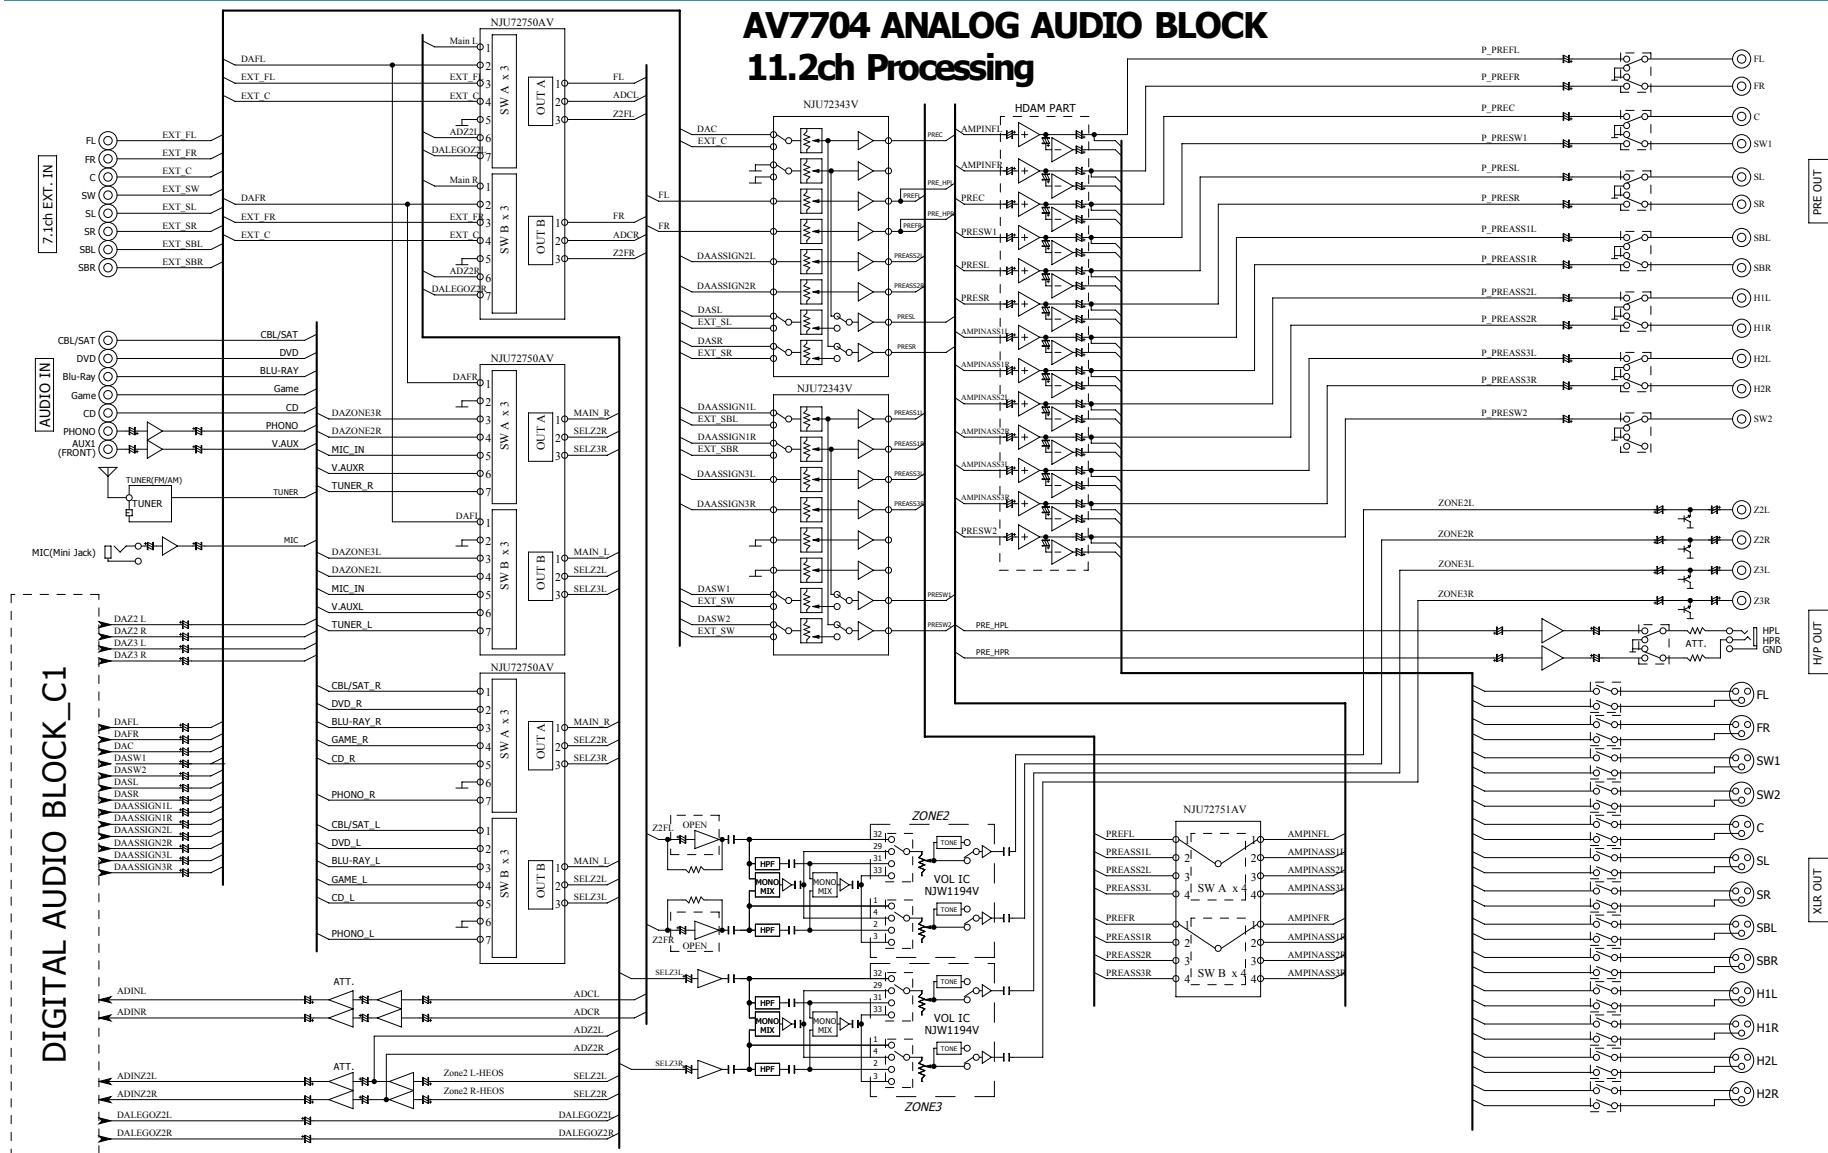

## **Caution in servicing**

Electrical


Mechanical

## Repair Information

Updating

## DIGITAL AUDIO DIAGRAM

**SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)**

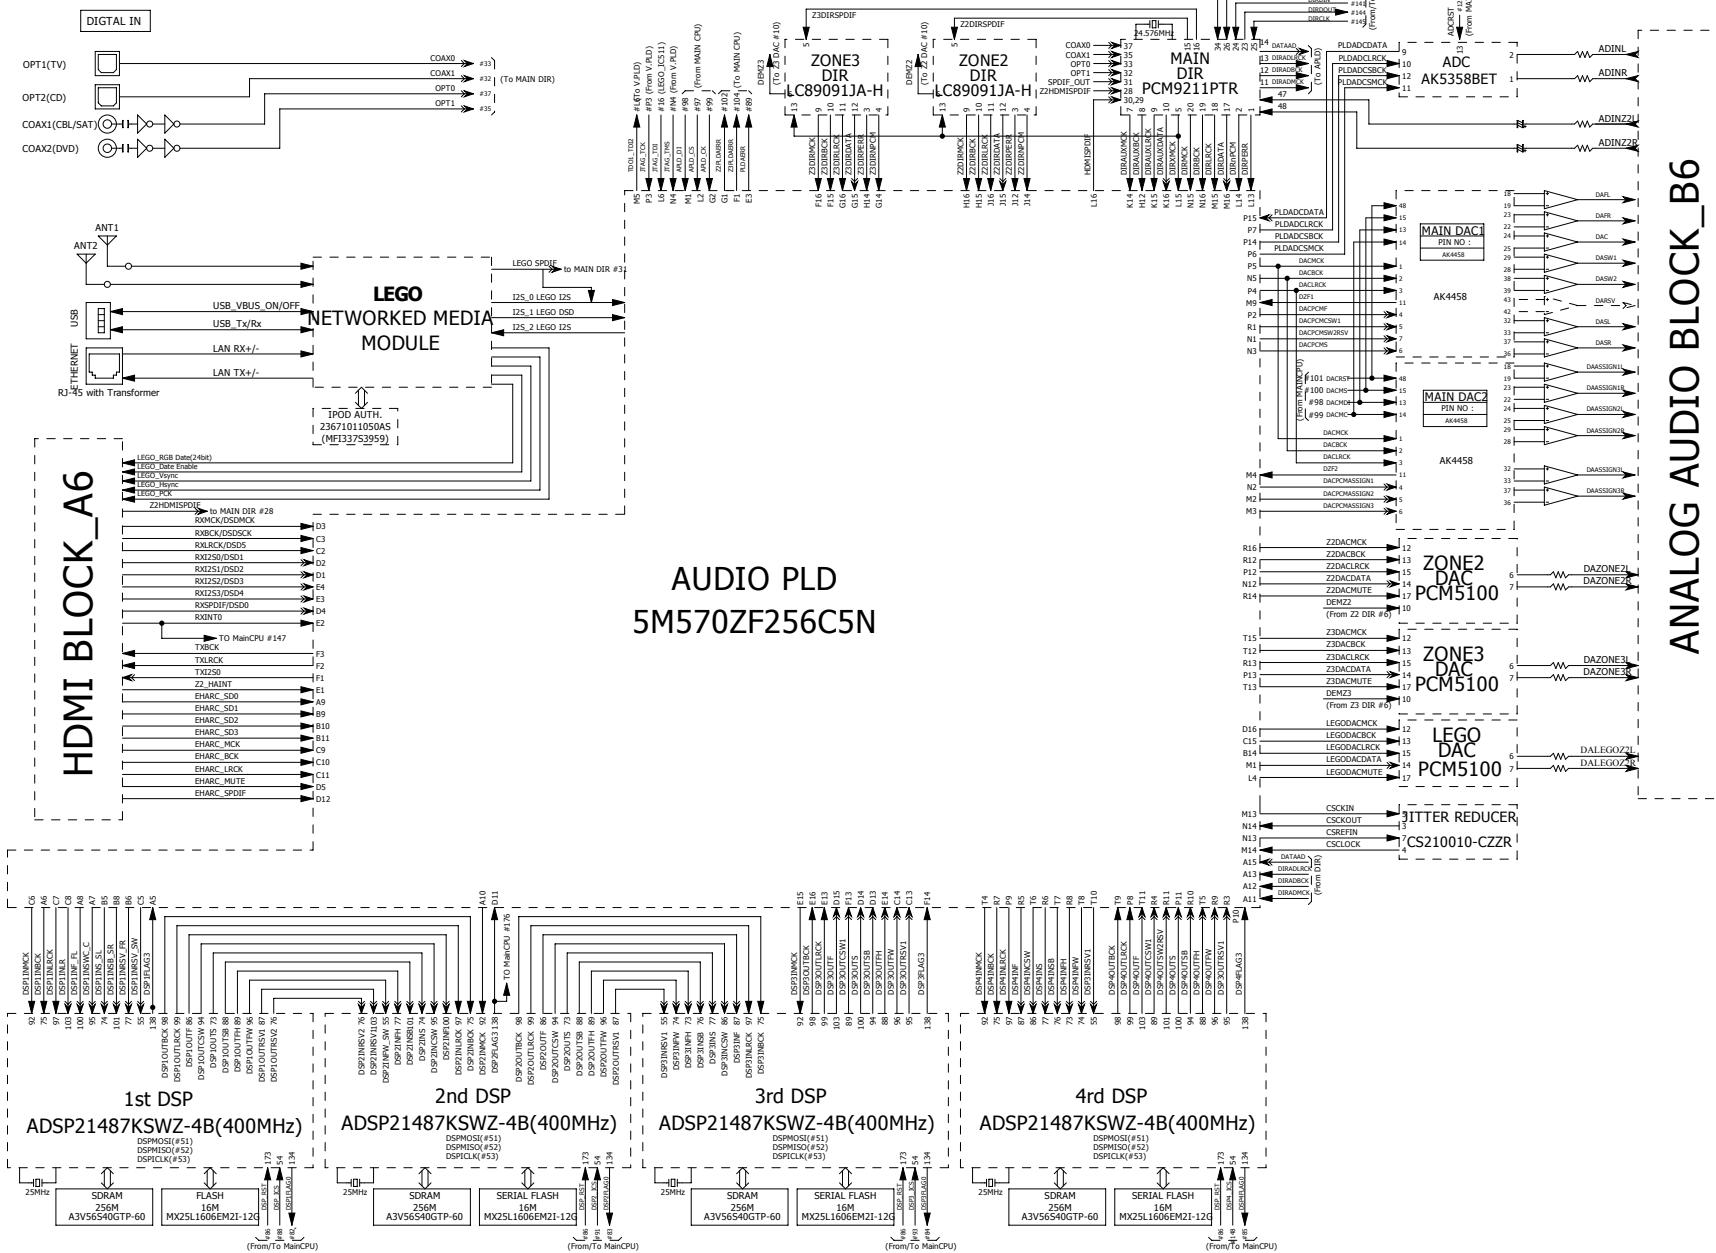

## **Caution in servicing**

Electrical


Mechanical

## Repair Information

Updating


## VIDEO DIAGRAM

### SR7012/AV7704 ANALOG VIDEO BLOCK

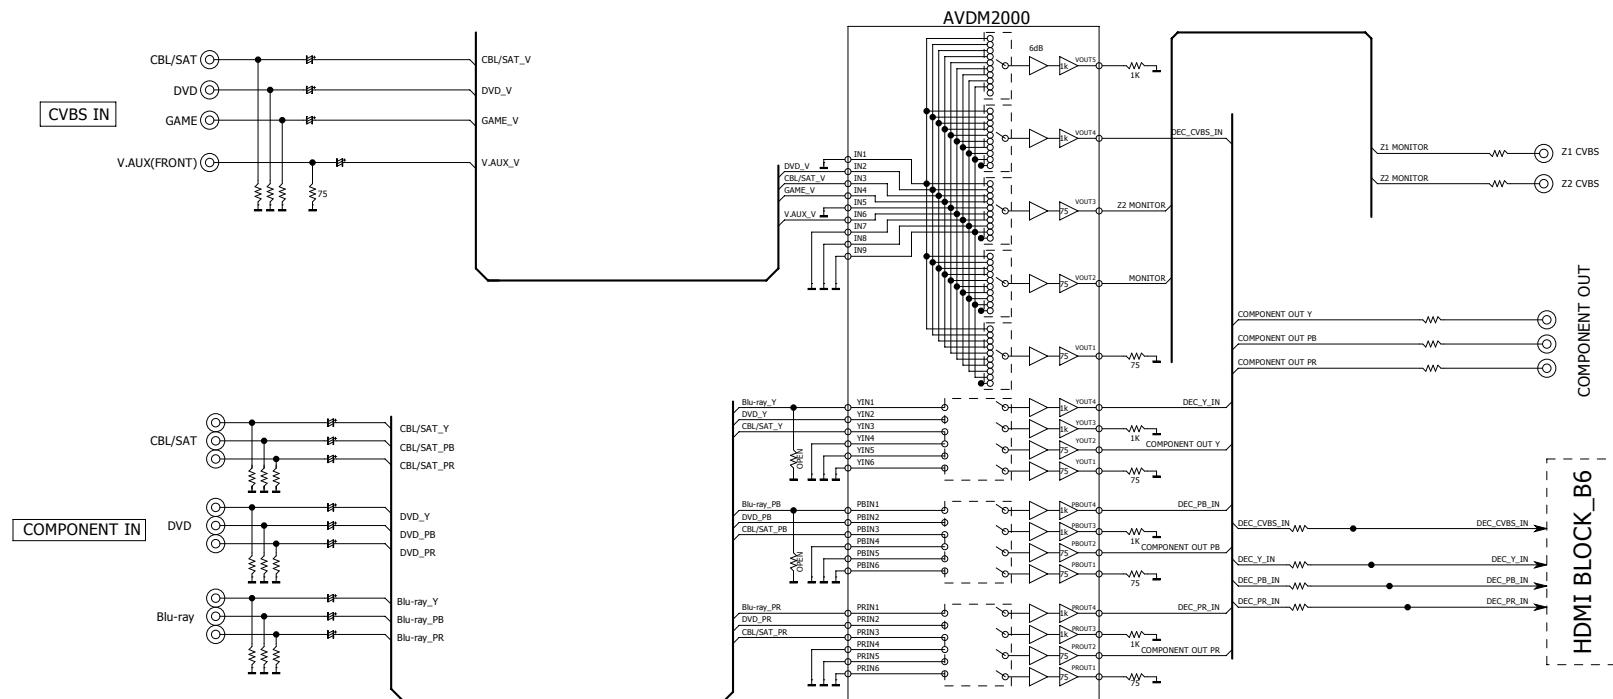

## HDMI DIAGRAM

### AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK

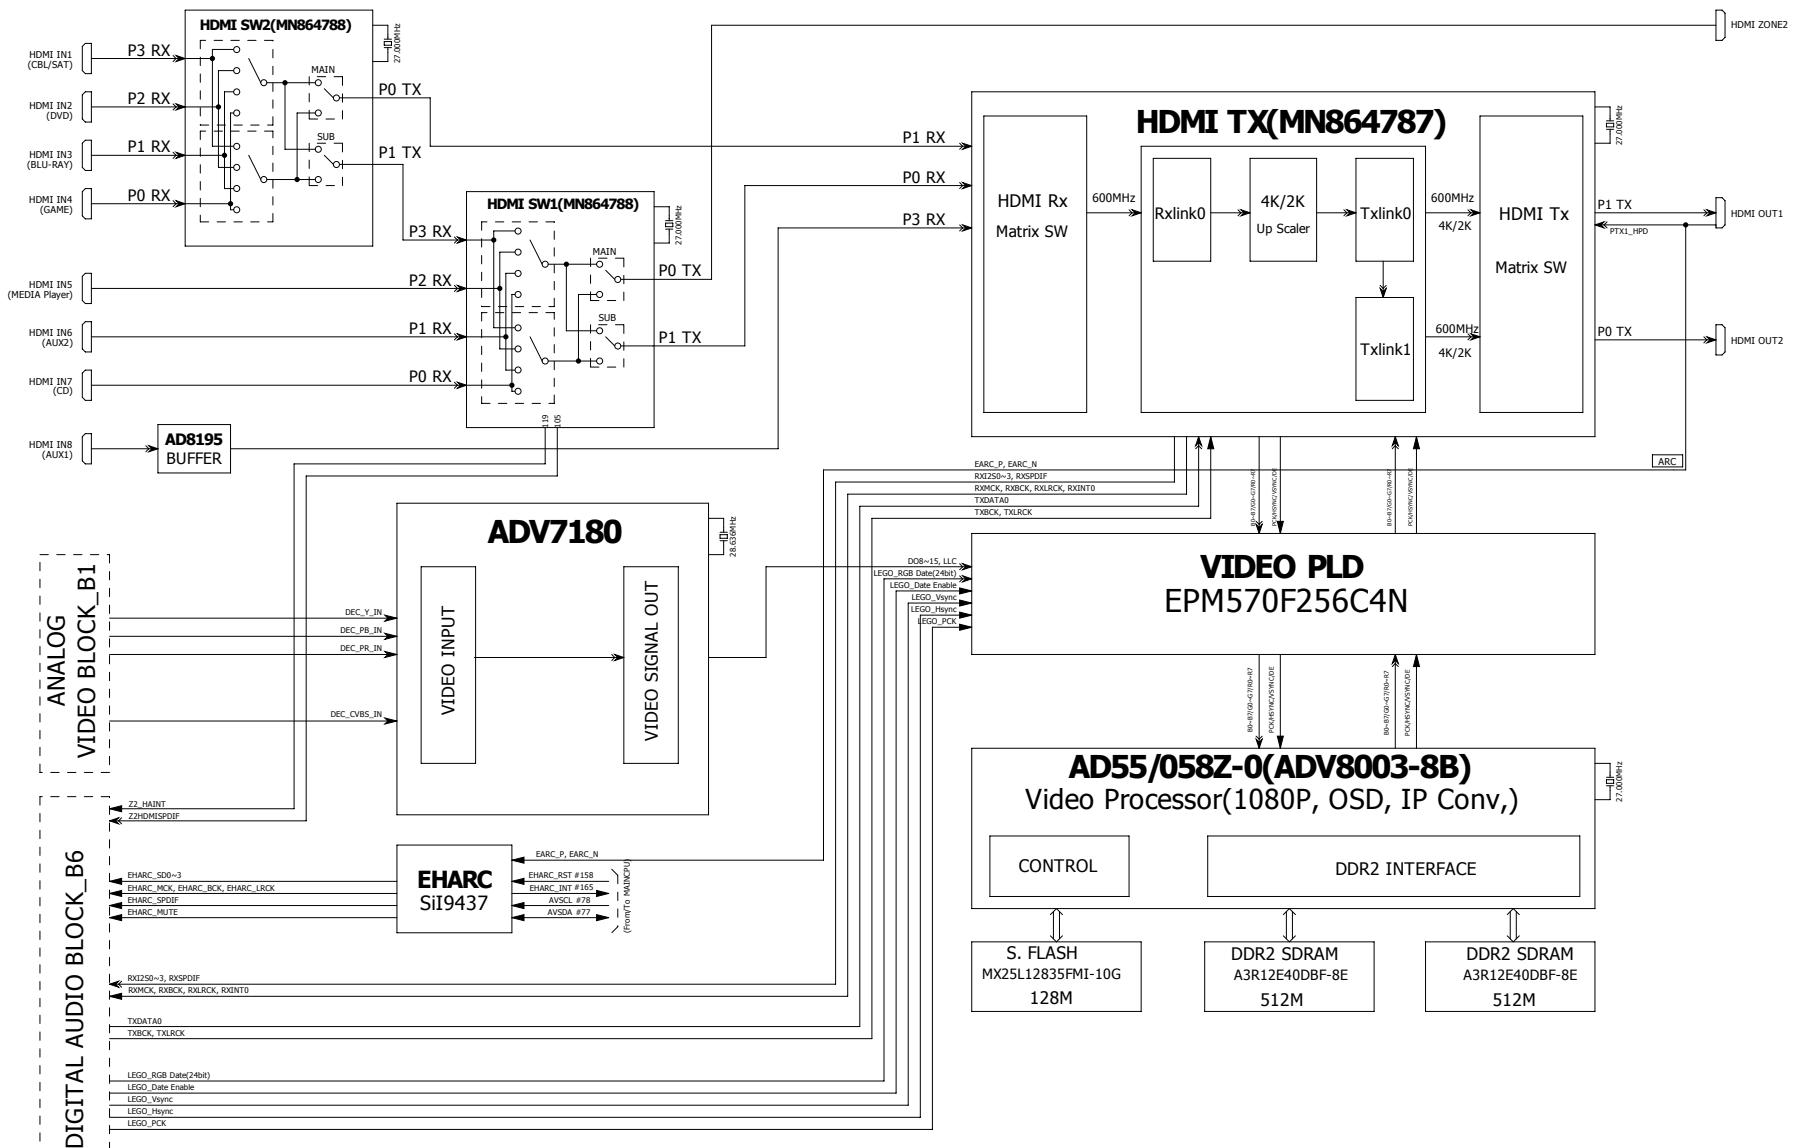

Caution in servicing

Electrical


Mechanical

Repair Information

Updating

## POWER DIAGRAM

## SR7012/AV7704 POWER BLOCK DIAGRAM

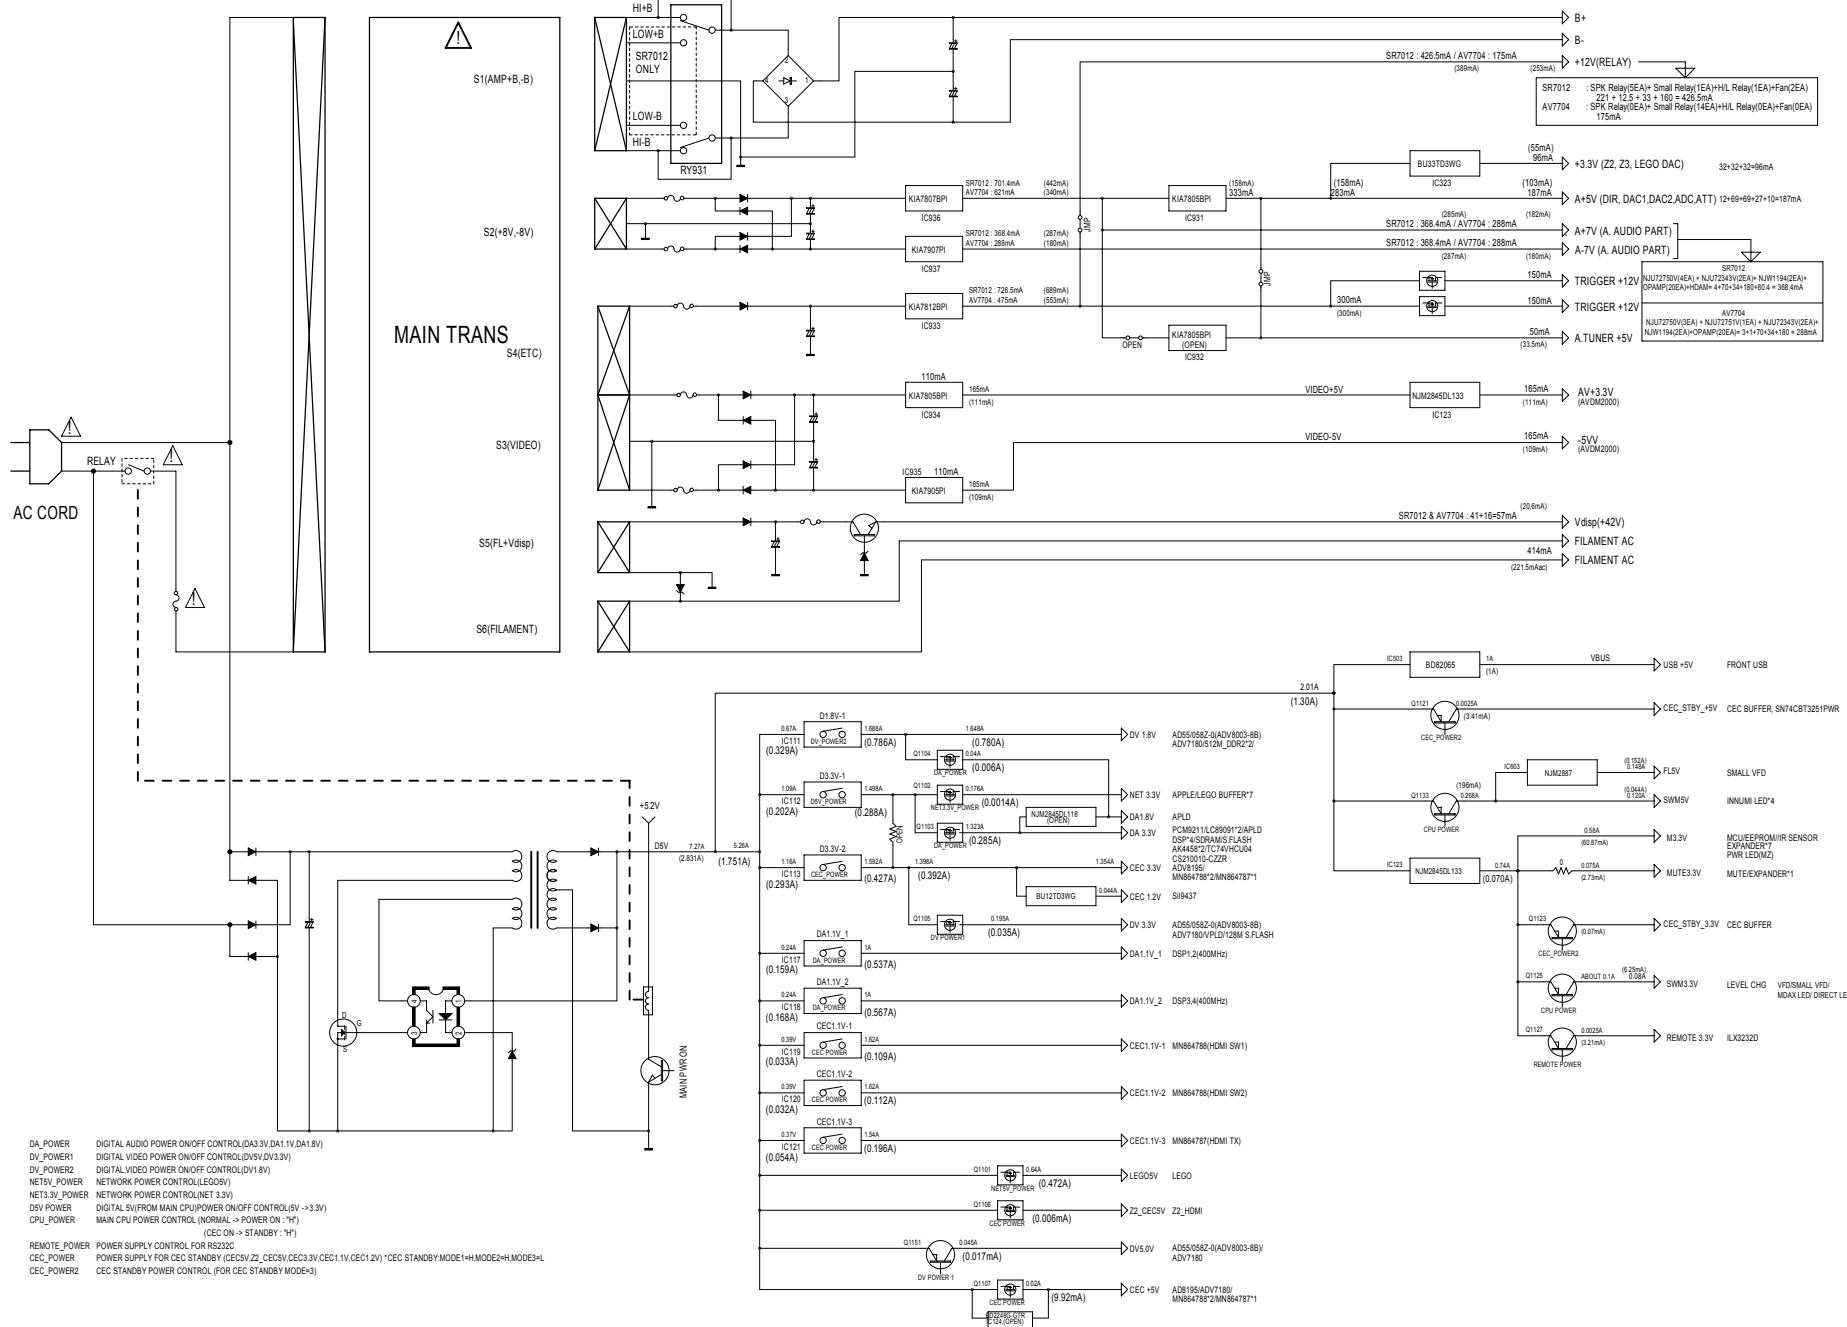

## **Caution in servicing**


Electrical

Mechanical

## Repair Information

Updating

# WIRING DIAGRAM

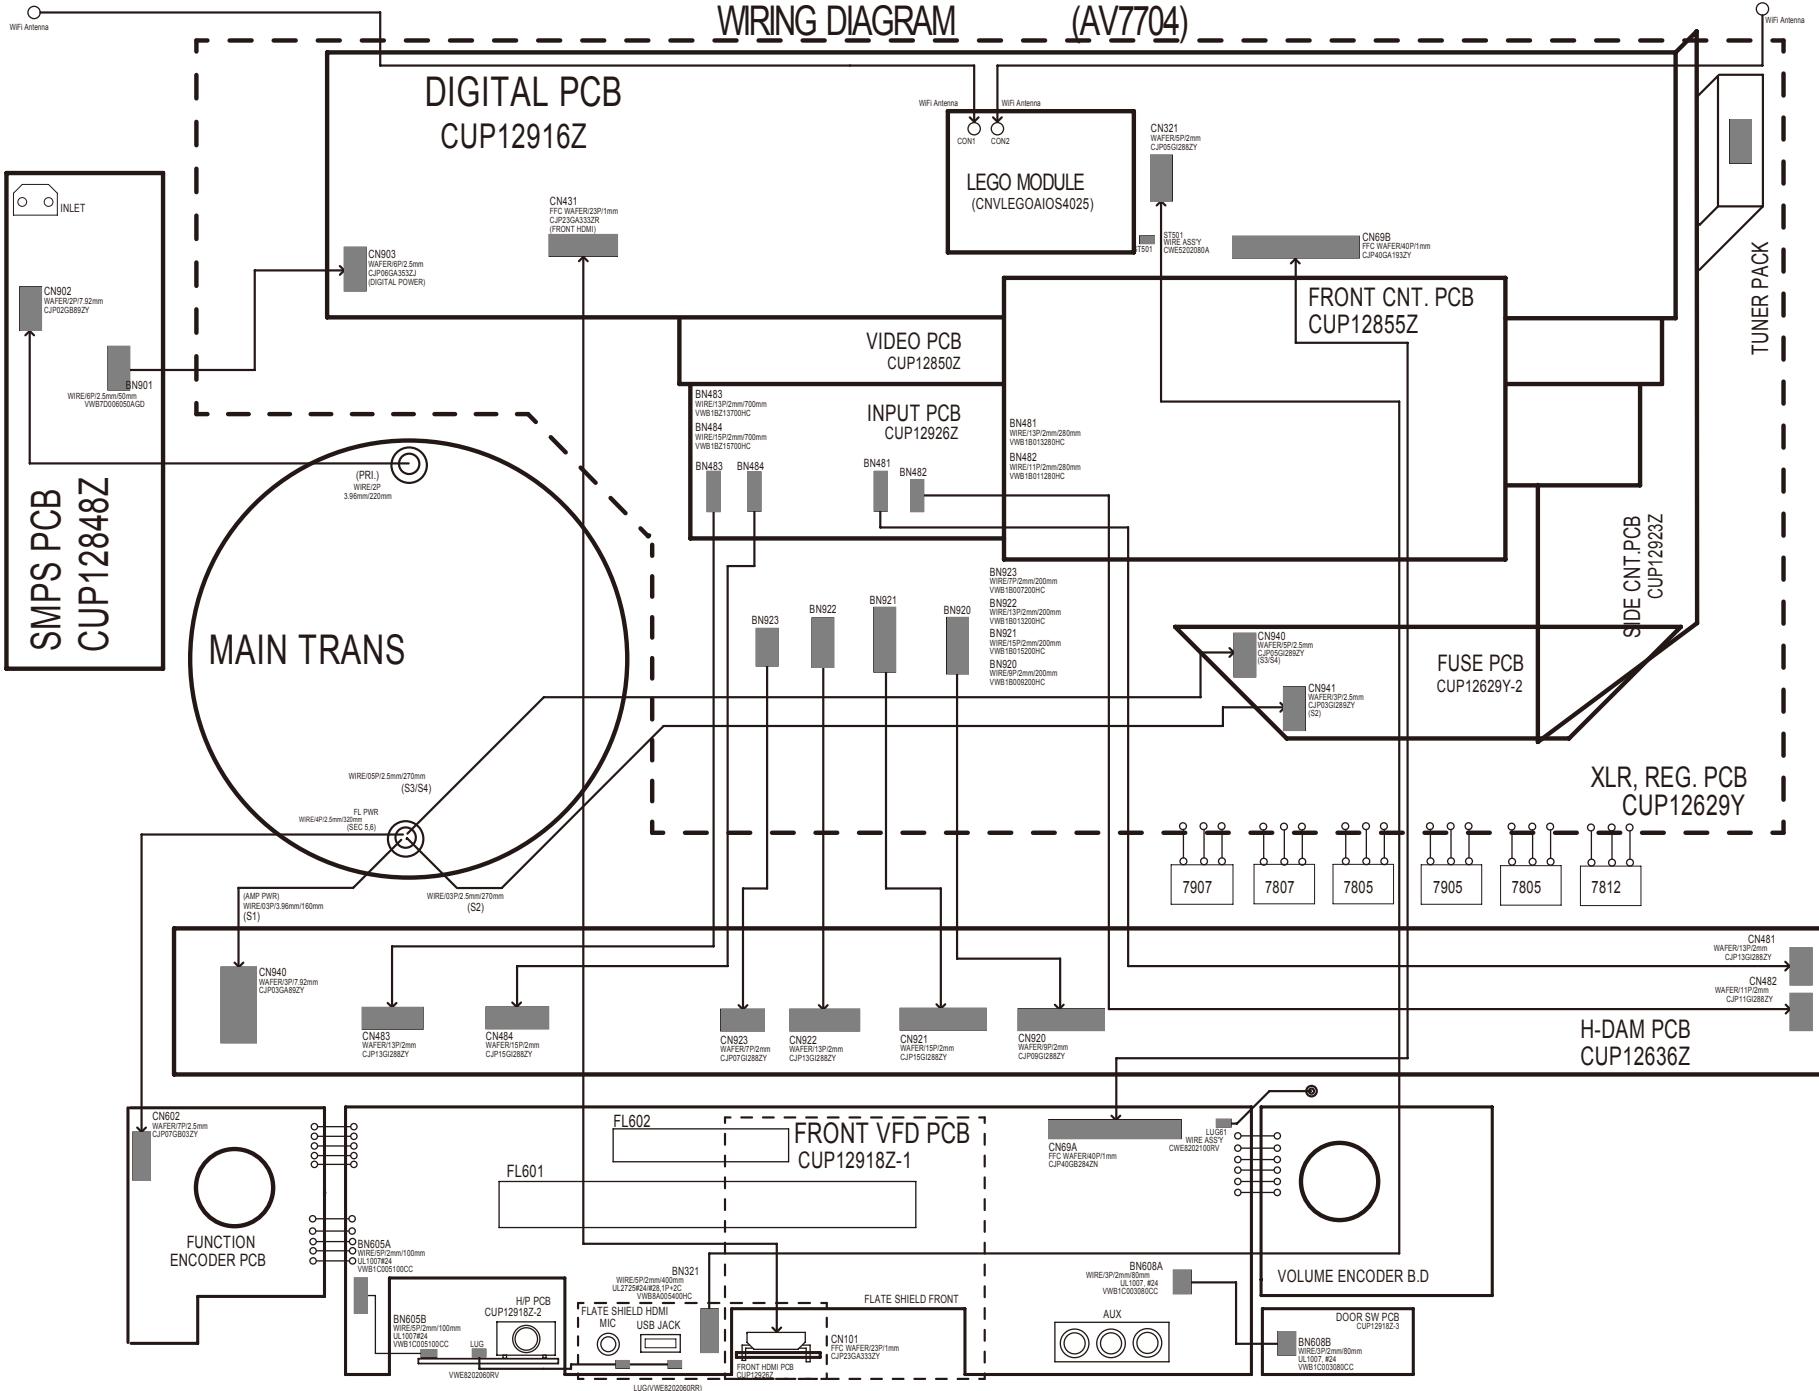

Caution in servicing

Electrical

Mechanical

Repair Information


Updating

# SEMICONDUCTORS

Only major semiconductors are shown, general semiconductors etc. are omitted to list.  
The semiconductor which described a detailed drawing in a schematic diagram are omitted to list.

## 1. IC's

### R5F564MJCDFC (DIGITAL : IC151)

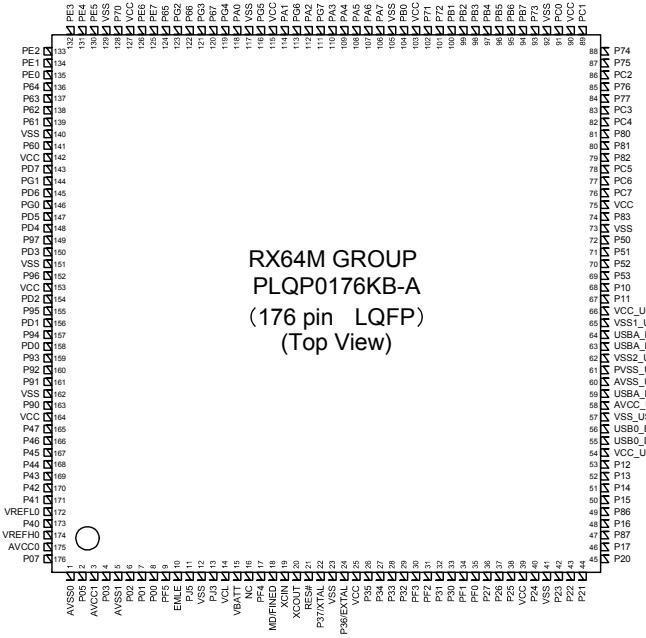

**RX64M GROUP  
PLQP0176KB-A  
(176 pin LQFP)  
(Top View)**

### R5F56108VNFP Terminal Functions

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
1	AVSS0	AVSS0	-		-	-	-	Ground pin
2	P05/IRQ13	POWER_KEY	I	M3VPu	I	I	I	Detect Power switch (Release from Wait Mode,Set to interrupt)
3	AVCC1	AVCC1	-		-	-	-	Power supply pin
4	P03/IRQ11	RED_LED	O		L/H	L	H	POWER/STANDBY LED control pin
5	AVSS1	AVSS1	-		-	-	-	Ground pin
6	P02/SCK6/IRQ10/AN120	FANDET_ON/HIGH(X4400/SR6012/SR7012)/NC(AV7704)	I/O	SW3VPu	I/L	I/L	I/L	Thermally detection input pin (for FAN control)(A/D converter)
7	P01/RXD6/IRQ9/AN119	RXD_MI2320	I	Pd	I	I	I	External data input port (for AMX/FW update via 232C) :Connector is FFC
8	P00/TXD6/IRQ8/AN118	TXD_MO232I	O		L	L	L	External data output port (for AMX/FW update via 232C) :Connector is FFC
9	PF5/IRQ4	WHITE_LED(X4400(NA))/GREEN_LED(X4400(EU/CH/JP)/SR6012/SR7012/AV7704)	O		L	L	L	POWER LED control pin

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
10	EMLE	EMLE	I	Pd	-	-	-	E20 Emulator control pin (On chip Emulator is used,this pin should be High. Not used,it should be Low)
11	PJ5	VSEL_A	I		I	I	I	Master Volume (Rotary encoder) signal input pin
12	VSS	VSS	-		-	-	-	Ground pin
13	PJ3	VSEL_B	I		I	I	I	Master volume (Rotary encoder) signal input pin
14	VCL	VCL	I		-	-	-	Smoothing capacitor connection pin
15	VBATT	VBATT	-		-	-	-	Power supply pin
16	NC	NC	I	Pd	-	-	-	NC(Pull down)
17	TRST#/PF4	TRST#/NC(NORMRAL)	I/I	Pd	I/I	I/I	I/I	E20 Emulator control pin/When normal operating mode, set to input.
18	MD/FINED	MD	I	M3VPu	I	I	I	Pins for setting the operating mode(select the Boot Mode or User Boot Mode,Single Chip Mode)
19	XCIN	XCIN	I	Pd	-	-	-	NC(Pull down)
20	XCOUT	XCOUT	I		-	-	-	NC(open)
21	RES#	RESET	I		-	-	-	Reset signal input pin
22	XTAL/P37	XTAL	I		-	-	-	Pins for a crystal resonator (Xin=12MHz × 10)
23	VSS	VSS	-		-	-	-	Ground pin
24	EXTAL/P36	EXTAL	-		-	-	-	Pins for a crystal resonator (Xin=12MHz × 10)
25	VCC	VCC	-		-	-	-	Power supply pin
26	UPSEL/P35(IN)/NMI	NC(X4400/SR6012)/DOOR_DET(SR7012/AV7704)	I	M3VPu	-	-	I	Front trap door open/close detect input pin (High:Door open)
27	P34/SCK6/SCK0/IRQ4	BDOWN	I		I	I	I	Detect power down
28	P33/TIOCDO/RXD6/RXD0/IRQ3-DS	RC_IN	I		I	I	I	Remote input
29	P32/TIOCDO/TXD6/TXD0/IRQ2-DS	NC(X4400)/FLASHER_IN(SR6012/SR7012/AV7704)	O/I		L/I	L/I	L/I	IR Flasher control signal input (When standby mode, set to interrupt)
30	TMS/PF3	NC(NORMRAL)	I/I	M3VPu	-/I	-/I	I	E20 Emulator control pin/When normal operating mode, set to input.
31	TDI/PF2/RXD1	TDI/RXD_MIT-SUBISHI	I/I/I	M3VPu	-/-I	-/-I	I	E20 Emulator control pin/Mitsubishi writer control pin/ When normal operating mode, set to input.
32	P31/IRQ1-DS	TU_GPO2_INT(X4400/SR6012(ALL),SR7012/AV7704(ALL))	I		L	L	L	TUNER control
33	P30/RXD1	TU_SDIO(X4400/SR6012(ALL),SR7012/AV7704(ALL))	I_O		L	L	L	TUNER control
34	TCK/FINEC/PF1/SCK1	TCX/NC(NORMRAL)	I/I	M3VPu	-/I	-/I	I	E20 Emulator control pin//When normal operating mode, set to input.
35	TD0/TXD1/PF0	TDO/TXD_MITSUBISHI	O/O/I	M3VPu	-/-I	-/-I	I	E20 Emulator control pin/Mitsubishi writer control pin/ When normal operating mode, set to input.
36	P27/SCK1	TU_SEN(X4400/SR6012(ALL),SR7012/AV7704(ALL))	O		L	L	L	TUNER control
37	P26/TXD1	TU_SCLK(X4400/SR6012(ALL),SR7012/AV7704(ALL))	O		L	L	L	TUNER control
38	P25/RXD3	VOL_DATA	O		L	L	L	Volume control pin (NJU72343)
39	VCC	VCC	-		-	-	-	Power supply pin

## Caution in servicing

## Electrical

## Mechanical

## Repair Information

## Updating

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
40	P24/SCK3	NC(X4400)/KILL_IR(SR6012/SR7012/AV7704)	O		L	L	L	Front IR disable control pin
41	VSS	VSS	-		-	-	-	Ground pin
42	P23/TXD3	E_RTS_MOEI	O	Pd (BCMS8305 Internal Pd)	L	L	L	Ethernet(LEGO) control pin
43	P22/SCK0	E_CTS_MIEO	I	Pd (orbaud BCMS8305 Internal Pd)	I	I	I	Ethernet(LEGO) control pin
44	P21/RXD0/IRQ9	E_RXD_MIEO	I	Pd (orbaud BCMS8305 Internal Pd)	I	L	I	Ethernet(LEGO) control pin
45	P20/TXD0/IRQ8	E_TXD_MOEI	O	Pd (BCMS8305 Internal Pd)	L	L	L	Ethernet(LEGO) control pin
46	P17/SCK1/TXD3/IRQ7	NET_FACT_RST	O(ODR)	Pd (BCMS8305 Internal Pd)	Z	Z	Z	Ethernet(LEGO) control pin
47	P87/TXD10/TIOCA2	NC(X4400)/RC_OUT(SR6012/SR7012/AV7704)	O		L/H	L/L	L/H	Remote code (RC-5) output pin
48	P16/TXD1/RXD3/IRQ6	NET5V_POWER	O		L	L	L	Ethernet power supply (Net5V) control pin/
49	P86/RXD10	SEL_DATA	O		L	L	L	Audio selector control pin (NJU72750/72751)
50	P15/RXD1/SCK3/IRQ5	AEXP_STB	O		L	L	L	Expander (MC14094) control pin
51	P14/IRQ4	AEXP_OE	O		L	L	L	Expander (MC14094) control pin
52	P13/TXD2/IRQ3	AEXP_CLK	O		L	L	L	Expander (MC14094) control pin
53	P12/RXD2/IRQ2	AEXP_DATA	O		L	L	L	Expander (MC14094) control pin
54	VCC_USB	VCC_USB	-		-	-	-	Power supply pin
55	USBO_DM	USBO_DM	-		-	-	-	NC(open)
56	USBO_DP	USBO_DP	-		-	-	-	NC(open)
57	VSS_USB	VSS_USB	-		-	-	-	Ground pin
58	AVCC_USBA	AVCC_USBA	-		-	-	-	Power supply pin
59	USBA_PREF	USBA_PREF	-		-	-	-	NC(open)
60	AVSS_USBA	AVSS_USBA	-		-	-	-	Ground pin
61	PVSS_USBA	PVSS_USBA	-		-	-	-	Ground pin
62	VSS2_USBA	VSS2_USBA	-		-	-	-	Ground pin
63	USBA_DM	USBA_DM	-		-	-	-	NC(open)
64	USBA_DP	USBA_DP	-		-	-	-	NC(open)
65	VSS1_USBA	VSS1_USBA	-		-	-	-	Ground pin
66	VCC_USBA	VCC_USBA	-		-	-	-	Power supply pin
67	P11/SCK2/IRQ1	CEC_OUT	O		L	L	-	CEC-D control pin
68	P10/IRQ0	CEC_IN	I	SW3VPu	I	I	I	CEC-D control pin
69	P53	ADV8003_SPI_CS	O		L	L	L	GUI control pin(ADV8003)
70	P52/RXD2	ADV8003_SPI_MI	I		L	L	L	GUI control pin(ADV8003)
71	P51/SCK2	ADV8003_SPI_CLK	O		L	L	L	GUI control pin(ADV8003)
72	P50/TXD2	ADV8003_SPI_MO	O		L	L	L	GUI control pin(ADV8003)
73	VSS	VSS	-		-	-	-	Ground pin
74	P83/SCK10	IP_RST	O	Pd	I	I	L	Scaler w/ GUI (ADV8003) Reset control pin
75	VCC	VCC	-		-	-	-	Power supply pin
76	UB/PC7/TXD8/IRQ14	UB	I	Pd	-	-	-	Pins for setting the boot mode(select the Boot Mode or User Boot Mode)
77	PC6/RXD8/IRQ13	AVSDA	I/O	DV3VPu	O/L	O/L	L	VIDEO I2C control pin for ADV8003/ ADV7180/ ARC IC/ ADVM2000(except SR6012)
78	PC5/SCK8	AVSCL	I/O	DV3VPu	O/L	O/L	L	VIDEO I2C control pin for ADV8003/ ADV7180/ ARC IC/ ADVM2000(except SR6012)
79	P82/TXD10	DSP_MOSI	O	DA3VPu	L	L	L	DSP(ADI) control pin
80	P81/RXD10	DSP_MISO	I	DA3VPu	L	L	L	DSP(ADI) control pin

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
81	P80/SCK10	DSP_CLK	O	DA3VPu	L	L	L	DSP(ADI) control pin
82	PC4/SCK5	DSP1FLAG0	I	Pd	L	L	L	DSP(ADI) interrupt signal input pin
83	PC3/TX5	DSP2FLAG0	I	Pd	L	L	L	DSP(ADI) interrupt signal input pin
84	P77/TXD11	DSP3FLAG0	I	Pd	L	L	L	DSP(ADI) interrupt signal input pin
85	P76/RXD11	DSP4FLAG0	I	Pd	L	L	L	DSP(ADI) interrupt signal input pin
86	PC2/TXD5	DSP_RST	O		L	L	L	DSP(ADI) reset control pin
87	P75/SCK11	CEC_POWER2	O		L	L	L	CEC standby power control (for CEC Standby Mode 3)
88	P74	DSP1CS	O	DA3VPu	L	L	L	DSP(ADI) control pin
89	PC1/SCK5/IRQ12	DAC.PLD_ERR	I		L	L	L	Detect PLD error (from Audio PLD)
90	VCC	VCC	-		-	-	-	Power supply pin
91	PC0/IRQ14	DSP2CS	O	DA3VPu	L	L	L	DSP(ADI) control pin
92	VSS	VSS	-		-	-	-	Ground pin
93	P73	DSP3CS	O	DA3VPu	L	L	L	DSP(ADI) control pin
94	PB7/TXD9	HSDA	I/O	CEC3VPu	L	L	L	HDMI I2C control pin for MN864787/MN864788
95	PB6/RXD9	HSCL	I/O	CEC3VPu	L	L	L	HDMI I2C control pin for MN864787/MN864788
96	PB5/SCK9	NC	O		L	L	L	NC
97	PB4	APLD_CS	O		L	L	L	Audio PLD (5M80ZT100C5N) control pin
98	PB3/SCK4/SCK6	APLD_DATA/DAC_DATA	O		L	L	L	Audio PLD (5M80ZT100C5N) control pin/DAC (AK4458VN) control pin
99	PB2	APLD_CLK/DAC_CLK	O		L	L	L	Audio PLD (5M80ZT100C5N) control pin/DAC (AK4458VN) control pin
100	PB1/TXD4/TXD6/IRQ4-DS	DAC_MS	O		L	L	L	DAC (AK4458VN) control pin
101	P72	DAC_RST	O		L	L	L	DAC (AK4458VN) control pin
102	P71	Z2PLD_ERR	I	-	L	L	L	Detect PLD error (from Audio PLD)
103	VCC	VCC	-		-	-	-	Power supply pin
104	PB0/RXD4/RXD6/IRQ12	Z3PLD_ERR	I	-	L	L	L	Detect PLD error (from Audio PLD)
105	VSS	VSS	-		-	-	-	Ground pin
106	PA7	ISEL_A	I		I	I	I	Input selector (Rotary encoder) signal input pin
107	PA6	ISEL_B	I		I	I	I	Input selector (Rotary encoder) signal input pin
108	PA5	VOL_CLK	O		L	L	L	Volume control pin (NJU72343)
109	PA4/TXD5/SSDA5/IRQ5-DS	COMP_DET	I	SW3VPu	I	I	I	Component video signal detect pin
110	PA3/RXD5/SSCL5	MVOL_MUTE	O		L	L	L	Volume control pin (NJU72343)
111	TRDATA3/PG7	REMOTE_POWER(232C)	O		L	L	L	232C power supply (REMOTE 3.3V) control pin
112	PA2/TXD5	NC(USB_EN)	O		L	L	L	NC/(for X7500H/AV8805)
113	TRDATA2/PG6	ZVOL_DATA	O		L	L	L	ZONE2 volume control pin (NJW1194)
114	PA1/SCK5/IRQ11	ZVOL_CLK	O		L	L	L	ZONE2 volume control pin (NJW1194)
115	VCC	VCC	-		-	-	-	Power supply pin
116	TRCLK/PG5	ZVOL_STB	O		L	L	L	ZONE2 volume control pin (NJW1194)
117	VSS	VSS	-		-	-	-	Ground pin
118	PA0	H5V_DET	I	-	I	I	I	HDMI IN 5V detect signal pin
119	TRSYNC/PG4	FL_RST	O		L	L	L	FL display control pin
120	P67/IRQ15	FL_CE	O		L	L	L	FL display control pin
121	TRDATA1/PG3	FL_CLK	O		L	L	L	FL display control pin
122	P66	FL_DATA	O		L	L	L	FL display control pin
123	TRDATA0/PG2	NC(X4400/SR6012/FL_CE2(SR7012/AV7704)	O		L	L	L	FL display control pin
124	P65	NC(X4400/FIL_CTRL(SR6012/SR7012/AV7704)	O		L	L	L	Filament Power control pin (for Portal FLD)

## Caution in servicing

## Electrical


## Mechanical

## Repair Information



## Updating

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
125	PE7/IRQ7/AN105	ASO/DC_DET(X4400/SR6012/SR7012)/NC(AV7704)	I		I	I	I	Protection detect signal input pin (for ASO and DC) (A/D converter)
126	PE6/IRQ6/AN104	MIC_DET_H/P_DET	I		I	I	I	Headphone insert detect pin/Microphone insert detect pin (A/D converter)
127	VCC	VCC	-		-	-	-	Power supply pin
128	P70	ADC_RST	O		I	L	I	A/D convertor(AK5358) reset control pin
129	VSS	VSS	-		-	-	-	Ground pin
130	PE5/IRQ5/AN103	MAIN_POWER	O		L	L	L	Power supply control pin
131	PE4/AN102	CPU_POWER	O		L	L	L	CPU power supply control pin
132	PE3/AN101	AIOS4_WAKE-UP	O		L	L	L	same as NET5V_POWER,NET3.3V_POWER (This port use to control for LEGO standby mode in the future(Low : Deep Standby, High : normal))
133	PE2/RXD12/IRQ7-DS/AN100	AIOS4_STBY_STATUS	I	Pd	I	I	I	Not used (This port use to detect for LEGO standby status in the future (Low : normal, High : Deep Standby))
134	PE1/TXD12	GUI_WRITE	O		L	L	L	GUI flash rom writing control
135	PE0/SCK12	NET3.3V_POWER	O		L	L	L	Ethernet power supply control(NET3.3V)
136	P64	D5V_POWER	O		L	L	H	Digital 5V power supply control pin(3.3V and 1.8V generate from 5V)
137	P63	CEC_POWER	O		L	L	※	CEC standby power supply control(CECSV,CEC3.3V,CEC1.8V)
138	P62	DV_POWER1	O		L	L	L	Digital video power supply (DV5V,DV3.3V) control pin
139	P61	DV_POWER2	O		L	L	L	Digital video power supply (DV1.8V) control pin
140	VSS	VSS	-		-	-	-	Ground pin
141	P60	DIR_DIN	O		L	L	L	DIR (PCM9211) control pin
142	VCC	VCC	-		-	-	-	Power supply pin
143	PD7/IRQ7/AN107	DIR_CE	O		L	L	L	DIR (PCM9211) control pin
144	PG1	DIR_DOUT	I	DA3.3Pu	I	I	I	DIR (PCM9211) control pin
145	PD6/IRQ6/AN106	DIR_CLK	O		L	L	L	DIR (PCM9211) control pin
146	PG0	DIR_RST	O		L	L	L	DIR (PCM9211) control pin
147	PD5/IRQ5/AN113	787_HINT	I	-	Z	-	-	HDMI Rx (MN864787) audio interrupt signal det
148	PD4/IRQ4/AN112	DSP4CS	O	-	Pd	Z	L	DSP(ADI) control pin
149	P97	DE_RST	O	Pd	Z	-	L	Video decoder (ADV7850) reset control pin
150	PD3/IRQ3/AN111	787_HINT	I	-	Z	-	-	HDMI Tx (MN864787) interrupt signal input pin
151	VSS	VSS	-		-	-	-	Ground pin
152	P96	787_RST	O	Pd	Z	-	※	HDMI Tx (MN864787) reset control pin
153	VCC	VCC	-		-	-	-	Power supply pin
154	PD2/IRQ2/AN110	788_2_HINT	I	-	Z	-	-	HDMI Rx (MN864788) interrupt signal input pin
155	P95	788_2_RST	O	Pd	Z	-	※	HDMI Rx (MN864788) reset control pin
156	PD1/IRQ1/AN109	788_1_HINT	I	-	Z	-	-	HDMI Rx (MN864788) interrupt signal input pin
157	P94	788_1_RST	O	Pd	Z	-	※	HDMI Rx (MN864788) reset control pin
158	PD0/IRQ0/AN108	ARC_RST	O		L	L	L	Reset control pin for ARC IC
159	P93/AN117	THERMAL_A(X4400/SR6012/SR7012)/NC(AV7704)	I	SW3VPu	I	L	I	Protection detect signal input pin (for power TR)
160	P92/RXD7/AN116	DA_POWER1	O		L	L	L	Digital audio power supply (DA3.3V,DA1.2V) control pin
161	P91/AN115	THERMAL_E(X4400/SR6012/SR7012)/NC(AV7704)	I/I	SW3VPu	I/I	L	I/I	Protection detect signal input pin (for Heat sink)
162	VSS	VSS	-		-	-	-	Ground pin
163	P90/TXD7/AN114	THERMAL_F(X4400/SR6012/SR7012)/NC(AV7704)	I/I	SW3VPu	I/I	L	I/I	Protection detect signal input pin (for Heat sink)

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
164	VCC	VCC	-		-	-	-	Power supply pin
165	P47/IRQ15-DS/AN007	ARC_INT	I		L	L	L	ARC IC interrupt signal input pin
166	P46/IRQ14-DS/AN006	CURRENT_DET(X4400/SR6012/SR7012)/NC(AV7704)	I/O		I/L	L/L	I/L	Current level monitor pin (A/D converter)
167	P45/IRQ13-DS/AN005	AMPSIGDET(X4400/SR6012/SR7012)/NC(AV7704)	I		I	L	I	Signal level monitor pin (AD converter)
168	P44/IRQ12-DS/AN004	MODE	I		I	I	I	Region setting pin
169	P43/IRQ11-DS/AN003	KEY3	I	M3VPu	I	I	I	Key control signal input pin (When standby mode, set to interrupt)
170	P42/IRQ10-DS/AN002	KEY2	I	M3VPu	I	I	I	Key control signal input pin (When standby mode, set to interrupt)
171	P41/IRQ9-DS/AN001	KEY1	I	M3VPu	I	I	I	Key control signal input pin (When standby mode, set to interrupt)
172	VREFL0	VREFL0	-		-	-	-	Ground pin
173	P40	SEL_CLK	O		L	L	L	Audio selector control pin (NJU72750/72751)
174	VREFH0	VREFH0	-		-	-	-	Power supply pin
175	AVCC0	AVCC0	-		-	-	-	Power supply pin
176	P07/IRQ15	DSP2FLAG3	I	Pd	L	L	L	DSP(ADI) control pin

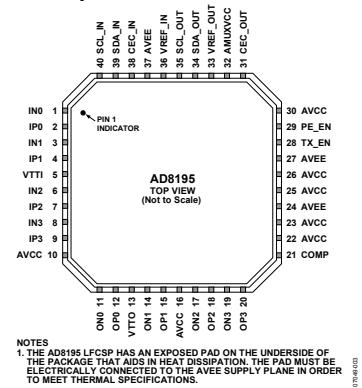**AD8195ACPZ (F-HDMI : IC101)****AD8195ACPZ Terminal Function**

Pin No.	Mnemonic	Type <sup>1</sup>	Description
1	IN0	HS I	High Speed Input Complement.
2	IP0	HS I	High Speed Input.
3	IN1	HS I	High Speed Input Complement.
4	IP1	HS I	High Speed Input.
5	VTTI	Power	Input Termination Supply. Nominally connected to AVCC.
6	IN2	HS I	High Speed Input Complement.
7	IP2	HS I	High Speed Input.
8	IN3	HS I	High Speed Input Complement.
9	IP3	HS I	High Speed Input.
10, 16, 22, 23, 25, 26, 30	AVCC	Power	Positive Analog Supply. 3.3 V nominal.
11	ON0	HS O	High Speed Output Complement.
12	OP0	HS O	High Speed Output.
13	VTT0	Power	Output Termination Supply. Nominally connected to AVCC.
14	ON1	HS O	High Speed Output Complement.
15	OP1	HS O	High Speed Output.
17	ON2	HS O	High Speed Output Complement.
18	OP2	HS O	High Speed Output.
19	ON3	HS O	High Speed Output Complement.
20	OP3	HS O	High Speed Output.
21	COMP	Control	Power-On Compensation Pin. Bypass to ground through a 10 $\mu$ F capacitor.
24, 27, 37, Exposed Pad	AVEE	Power	Negative Analog Supply. 0 V nominal.
28	TX_EN	Control	High Speed Output Enable Parallel Interface.
29	PE_EN	Control	High Speed Preemphasis Enable Parallel Interface.
31	CEC_OUT	LS I/O	CEC Output Side.
32	AMUXVCC	Power	Positive Auxiliary Buffer Supply. 5 V nominal.

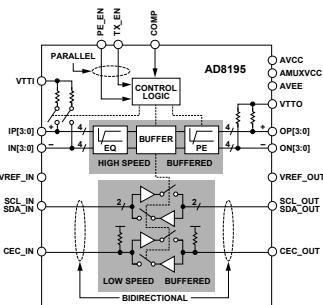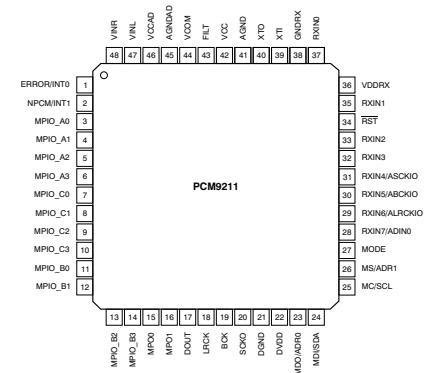**AD8195ACPZ Block diagram****PCM9211 (DIGITAL : IC202)****PIN Functions**

NO.	NAME	I/O	5-V TOLERANT	PIN	DESCRIPTION
				PIN	
1	ERROR/INT0	O	No	DIR Error detection output / Interrupt0 output	
2	NPCM/INT1	O	No	DIR Non-PCM detection output / Interrupt1 output	
3	MPIO_A0	I/O	Yes	Multipurpose I/O, Group A(1)	
4	MPIO_A1	I/O	Yes	Multipurpose I/O, Group A(1)	
5	MPIO_A2	I/O	Yes	Multipurpose I/O, Group A(1)	
6	MPIO_A3	I/O	Yes	Multipurpose I/O, Group A(1)	
7	MPIO_C0	I/O	Yes	Multipurpose I/O, Group C(1)	
8	MPIO_C1	I/O	Yes	Multipurpose I/O, Group C(1)	
9	MPIO_C2	I/O	Yes	Multipurpose I/O, Group C(1)	
10	MPIO_C3	I/O	Yes	Multipurpose I/O, Group C(1)	
11	MPIO_B0	I/O	Yes	Multipurpose I/O, Group B(1)	
12	MPIO_B1	I/O	Yes	Multipurpose I/O, Group B(1)	
13	MPIO_B2	I/O	Yes	Multipurpose I/O, Group B(1)	
14	MPIO_B3	I/O	Yes	Multipurpose I/O, Group B(1)	
15	MPO0	O	No	Multipurpose output 0	
16	MPO1	O	No	Multipurpose output 1	
17	DOUT	O	No	Main output port, serial digital audio data output	
18	LRCK	O	No	Main output port, LR clock output	
19	BCK	O	No	Main output port, Bit clock output	
20	SCKO	O	No	Main output port, System clock output	
21	DGND	-	-	Ground, for digital	
22	DVDD	-	-	Power supply, 3.3 V (typ.), for digital	
23	MDO/ADR0	I/O	Yes	Software control I/F, SPI data output / I2C slave address setting0(2)	
24	MDI/SDA	I/O	Yes	Software control I/F, SPI data input / I2C data input/output(2)(3)	
25	MC/SCL	I	Yes	Software control I/F, SPI clock input / I2C clock input(2)	

NO.	NAME	I/O	5-V TOLERANT	DESCRIPTION				
26	MS/ADR1	I	Yes	Software control I/F, SPI chip select / I2C slave address setting(2)				
27	MODE	I	No	Control mode setting, (see the Serial Control Mode section, Control Mode Pin Setting)				
28	RXIN7/ADIN0	I	Yes	Biphase signal, input 7 / AUXIN0, serial audio data input(2)				
29	RXIN6/ALRCK10	I	Yes	Biphase signal, input 6 / AUXIN0, LR clock input(2)				
30	RXIN5/ABCK10	I	Yes	Biphase signal, input 5 / AUXIN0, bit clock input(2)				
31	RXIN4/ASCK10	I	Yes	Biphase signal, input 4 / AUXIN0, system clock input(2)				
32	RXIN3	I	Yes	Biphase signal, input 3(2)				
33	RXIN2	I	Yes	Biphase signal, input 2(2)				
34	RST	I	Yes	Reset Input, active low(2) (4)				
35	RXIN1	I	Yes	Biphase signal, input 1, built-in coaxial amplifier				
36	VDDRX	-	-	Power supply, 3.3 V (typ.), for RXIN0 and RXIN1.				
37	RXIN0	I	Yes	Biphase signal, input 0, built-in coaxial amplifier				
38	GNDRX	-	-	Ground, for RXIN				
39	XTI	I	No	Oscillation circuit input for crystal resonator or external XTI clock source input(5)				
40	XTO	O	No	Oscillation circuit output for crystal resonator				
41	AGND	-	-	Ground, for PLL analog				
42	VCC	-	-	Power supply, 3.3 V (typ.), for PLL analog				
43	FILT	O	No	External PLL loop filter connection terminal; must connect recommended filter				
44	VCOM	O	No	ADC common voltage output; must connect external decoupling capacitor				
45	AGNDAD	-	-	Ground, for ADC analog				
46	VCCAD	-	-	Power supply, 5.0 V (typ.), for ADC analog				
47	VINL	I	No	ADC analog voltage input, left channel				
48	VINR	I	No	ADC analog voltage input, right channel				

(1) Schmitt trigger input


(2) Schmitt trigger input

(3) Open-drain configuration in I2C mode


(4) Onboard pull-down resistor (50 k Ω , typical)

(5) CMOS Schmitt trigger input

PCM9211 BLOCK DIAGRAM

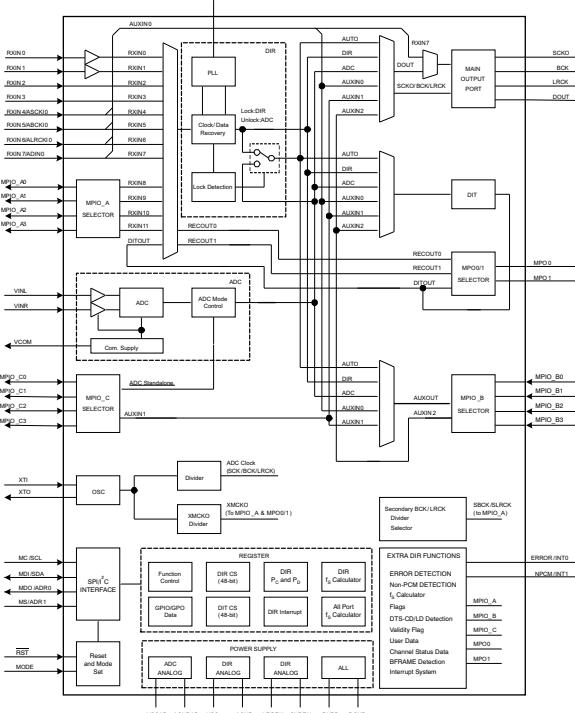


ADSP21487KSWZ4B (DIGITAL : IC251 / IC261 / IC271 / IC281)

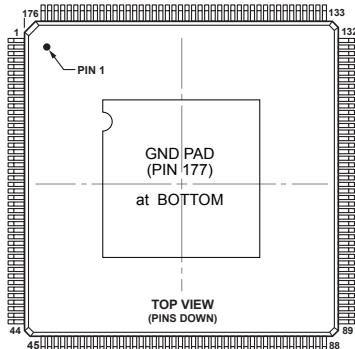

## Terminal Function


Pin Name	Pin No.						
SDDQM	1	V <sub>DD_EXT</sub>	45	DAL_P10	89	V <sub>DD_INT</sub>	133
M50	2	DPI_P08	46	V <sub>DD_INT</sub>	90	FLAG0	134
SDCKE	3	DPI_P07	47	V <sub>DD_EXT</sub>	91	FLAG1	135
V <sub>DD_INT</sub>	4	V <sub>DD_INT</sub>	48	DAL_P20	92	FLAG2	136
CLK_CFG1	5	DPI_P09	49	V <sub>DD_INT</sub>	93	NC	137
ADDR0	6	DPI_P10	50	DAL_P08	94	FLAG3	138
BOOT_CFG0	7	DPI_P11	51	DAL_P14	95	NC	139
V <sub>DD_EXT</sub>	8	DPI_P12	52	DAL_P04	96	NC	140
ADDR1	9	DPI_P13	53	DAL_P18	97	V <sub>DD_EXT</sub>	141
ADDR2	10	DPI_P14	54	DAL_P17	98	NC	142
ADDR3	11	DAL_P03	55	DAL_P16	99	V <sub>DD_INT</sub>	143
ADDR4	12	NC	56	DAL_P12	100	TRST	144
ADDR5	13	V <sub>DD_EXT</sub>	57	DAL_P15	101	NC	145
BOOT_CFG1	14	NC	58	V <sub>DD_INT</sub>	102	EMU	146
GND	15	NC	59	DAL_P11	103	DATA0	147
ADDR6	16	NC	60	V <sub>DD_EXT</sub>	104	DATA1	148
ADDR7	17	NC	61	V <sub>DD_INT</sub>	105	DATA2	149
NC	18	V <sub>DD_INT</sub>	62	BOOT_CFG2	106	DATA3	150
NC	19	NC	63	V <sub>DD_INT</sub>	107	TDO	151
ADDR8	20	NC	64	AMI_ACK	108	DATA4	152
ADDR9	21	V <sub>DD_INT</sub>	65	GND	109	V <sub>DD_EXT</sub>	153
CLK_CFG0	22	NC	66	THD_M	110	DATA5	154
V <sub>DD_INT</sub>	23	NC	67	THD_P	111	DATA6	155
CLKIN	24	V <sub>DD_INT</sub>	68	V <sub>DD_THD</sub>	112	V <sub>DD_INT</sub>	156
XTAL	25	NC	69	V <sub>DD_INT</sub>	113	DATA7	157
ADDR10	26	WDTRST0	70	V <sub>DD_INT</sub>	114	TDI	158
SDA10	27	NC	71	MST	115	SDCLK	159
V <sub>DD_EXT</sub>	28	V <sub>DD_EXT</sub>	72	V <sub>DD_INT</sub>	116	V <sub>DD_EXT</sub>	160
V <sub>DD_INT</sub>	29	DAL_P07	73	WDT_CLKO	117	DATA8	161
ADDR11	30	DAL_P13	74	WDT_CLKIN	118	DATA9	162
ADDR12	31	DAL_P19	75	V <sub>DD_EXT</sub>	119	DATA10	163
ADDR17	32	DAL_P01	76	ADDR23	120	TCK	164
ADDR13	33	DAL_P02	77	ADDR22	121	DATA11	165
V <sub>DD_INT</sub>	34	V <sub>DD_INT</sub>	78	ADDR21	122	DATA12	166
ADDR18	35	NC	79	V <sub>DD_INT</sub>	123	DATA14	167
RESETOUT/RUNRSTIN	36	NC	80	ADDR20	124	DATA13	168
V <sub>DD_INT</sub>	37	NC	81	ADDR19	125	V <sub>DD_INT</sub>	169
DPI_P01	38	NC	82	V <sub>DD_EXT</sub>	126	DATA15	170
DPI_P02	39	NC	83	ADDR16	127	SDWE	171
DPI_P03	40	V <sub>DD_EXT</sub>	84	ADDR15	128	SDRAS	172
V <sub>DD_INT</sub>	41	V <sub>DD_INT</sub>	85	V <sub>DD_INT</sub>	129	RESET	173
DPI_P05	42	DAL_P06	86	ADDR14	130	TMS	174
DPI_P04	43	DAL_P05	87	AMI_WR	131	SDCAS	175
DPI_P06	44	DAL_P09	88	AMI_RD	132	V <sub>DD_INT</sub>	176
				GND		177*	


A3V56S40GTP-60 (DIGITAL : IC252 / IC262 / IC272 / IC282)

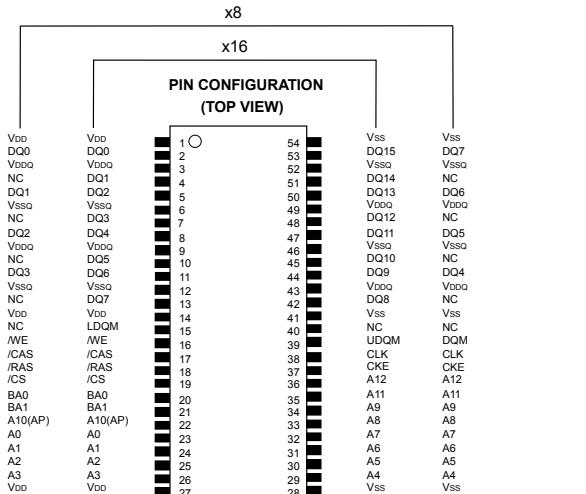

CLK	: Master Clock	DQM	: Output Disable / Write Mask (A3V56S30GTP)
CKE	: Clock Enable	U,L DQM	: Output Disable / Write Mask (A3V56S40GTP)
/CS	: Chip Select	A0-12	: Address Input
/RAS	: Row Address Strobe	BA0,1	: Bank Address
/CAS	: Column Address Strobe	Vdd	: Power Supply
/WE	: Write Enable	VddQ	: Power Supply for Output
DQ0-7	: Data I/O (A3V56S30GTP)	Vss	: Ground
DQ0-15	: Data I/O (A3V56S40GTP)	VssQ	: Ground for Output

## Block Diagram

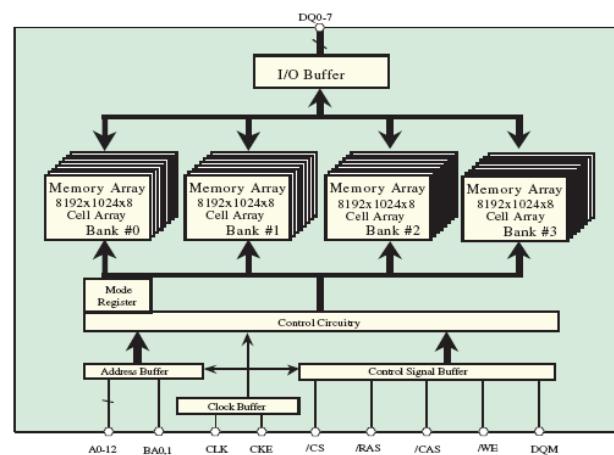

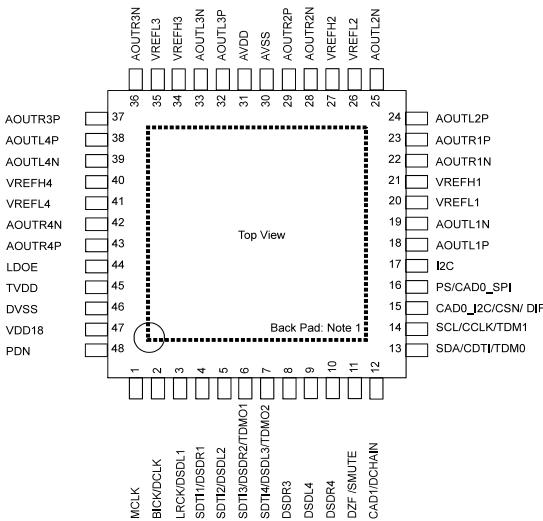**AK4458VN (FRONT CNT : IC301, IC311)****Pin Function**

No.	Pin Name	I/O	Function	PD State
1	MCLK	I	External Master Clock Input Pin	Hi-Z
2	BICK	I	Audio Serial Data Clock Pin in PCM mode	Hi-Z
	DCLK	I	DSD Clock Pin in DSD mode	Hi-Z
3	LRCK	I	Input Channel Clock Pin in PCM mode	Hi-Z
	DSDL1	I	Audio Serial Data Input in DSD mode	Hi-Z
4	SDTI1	I	Audio Serial Data Input in PCM mode	Hi-Z
	DSDR1	I	Audio Serial Data Input in DSD mode	Hi-Z
5	SDTI2	I	Audio Serial Data Input in PCM mode	Hi-Z
	DSDL2	I	Audio Serial Data Input in DSD mode	Hi-Z
6	SDTI3	I	Audio Serial Data Input in PCM mode	100k Ω Pull down
	DSDL2	I	Audio Serial Data Input in DSD mode	100k Ω Pull down
	TDMO1	O	Audio Serial Data Output in Daisy Chain mode	100k Ω Pull down
7	SDTI4	I	Audio Serial Data Input in PCM mode	100k Ω Pull down
	DSDL3	I	Audio Serial Data Input in DSD mode	100k Ω Pull down
	TDMO2	O	Audio Serial Data Output in Daisy Chain mode	100k Ω Pull down
8	DSDR3	I	Audio Serial Data Input in DSD mode	Hi-Z
9	DSDL4	I	Audio Serial Data Input in DSD mode	Hi-Z
10	DSDR4	I	Audio Serial Data Input in DSD mode	Hi-Z
11	DZP	O	Zero Input Detect in I2C Bus or 3-wire serial control mode	100k Ω Pull down
	SMUTE	I	Soft Mute Pin in Parallel control mode. When this pin is changed to "H", soft mute cycle is initiated. When it is returning to "L", the output mute is released.	100k Ω Pull down
12	CAD1	I	Chip Address 0 Pin in I2C Bus or 3-wire serial control mode	Hi-Z
	DCHAIN	I	Daisy Chain Mode select pin in Parallel control mode.	Hi-Z
13	SDA	I/O	Control Data Pin in I2C Bus serial control mode	Hi-Z
	CDTI	I	Control Data Input Pin in 3-wire serial control mode	Hi-Z
	TDMO	I	TDM Mode select pin in Parallel control mode.	Hi-Z
14	SCL	I	Control Data Clock Pin in I2C Bus serial control mode	Hi-Z
	CCLK	I	Control Data Clock Pin in 3-wire serial control mode	Hi-Z
	TDM1	I	TDM Mode select pin in Parallel control mode.	Hi-Z


No.	Pin Name	I/O	Function	PD State
15	CAD0_I2C	I	Chip Address 0 Pin in I2C Bus serial control mode	Hi-Z
	CSN	I	Chip Select Pin in 3-wire serial control mode	Hi-Z
	DIF	I	Audio Data Format Select in Parallel control mode. "L": 32-bit MSB, "H": 32-bit I2S	Hi-Z
16	PS	I	(I2C pin = "H") Control Mode Select Pin "L": I2C Bus serial control mode, "H": Parallel control mode.	Hi-Z
	CAD0_SPI	I	(I2C pin = "L") Chip Address 0 Pin in 3-wire serial control mode	Hi-Z
17	I2C	I	Control Mode Select Pin "L": 3-wire serial control mode "H": I2C Bus serial control mode or Parallel control mode.	Hi-Z
18	AOUTL1P	O	Lch Positive Analog Output 1 Pin	Hi-Z
19	AOUTL1N	O	Lch Negative Analog Output 1 Pin	Hi-Z
20	VREFL1	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
21	VREFH1	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
22	AOUTR1N	O	Rch Negative Analog Output 1 Pin	Hi-Z
23	AOUTR1P	O	Rch Positive Analog Output 1 Pin	Hi-Z
24	AOUTL2P	O	Lch Positive Analog Output 2 Pin	Hi-Z
25	AOUTL2N	O	Lch Negative Analog Output 2 Pin	Hi-Z
26	VREFL2	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
27	VREFH2	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
28	AOUTR2N	O	Rch Negative Analog Output 2 Pin	Hi-Z
29	AOUTR2P	O	Rch Positive Analog Output 2 Pin	Hi-Z
30	AVSS	-	Analog Ground Pin	-
31	AVDD	-	Analog Power Supply Pin, 3.0V-5.5V	-
32	AOUTL3P	O	Lch Positive Analog Output 3 Pin	Hi-Z
33	AOUTL3N	O	Lch Negative Analog Output 3 Pin	Hi-Z
34	VREFH3	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
35	VREFL3	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
36	AOUTR3N	O	Rch Negative Analog Output 3 Pin	Hi-Z
37	AOUTR3P	O	Rch Positive Analog Output 3Pin	Hi-Z
38	AOUTL4P	O	Lch Positive Analog Output 4 Pin	Hi-Z
39	AOUTL4N	O	Lch Negative Analog Output 4 Pin	Hi-Z
40	VREFH4	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
41	VREFL4	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
42	AOUTR4N	O	Rch Negative Analog Output 4 Pin	Hi-Z
43	AOUTR4P	O	Rch Positive Analog Output 4 Pin	Hi-Z
44	LDOE	I	Internal LDO Enable Pin. "L": Disable, "H": Enable	Hi-Z
45	TVDD	-	Digital Power Supply Pin, 3.0V-3.6V	-
46	DVSS	-	Digital Ground Pin	-
47	VDD18	O	LDO Output Pin (LDOE pin = "H") This pin should be connected to DVSS with 1.0μF.	(Note 4)
		I	1.8V Power Input Pin (LDOE pin = "L")	
48	PDN	I	Power-Down & Reset Pin When this pin is "L", the AK4458 is powered-down and the control registers are reset to default state.	Hi-Z

Note 2. All input pins except internal pull-up/down pins should not be left floating.

Note 3. PCM mode and DSD mode are controlled by registers. Daisy Chain mode is controlled by both registers and pins.

Note 4. This pin outputs DVSS when the LDOE pin = "H" and Hi-z when the LDOE pin = "L".

## FUNCTIONAL BLOCK DIAGRAM

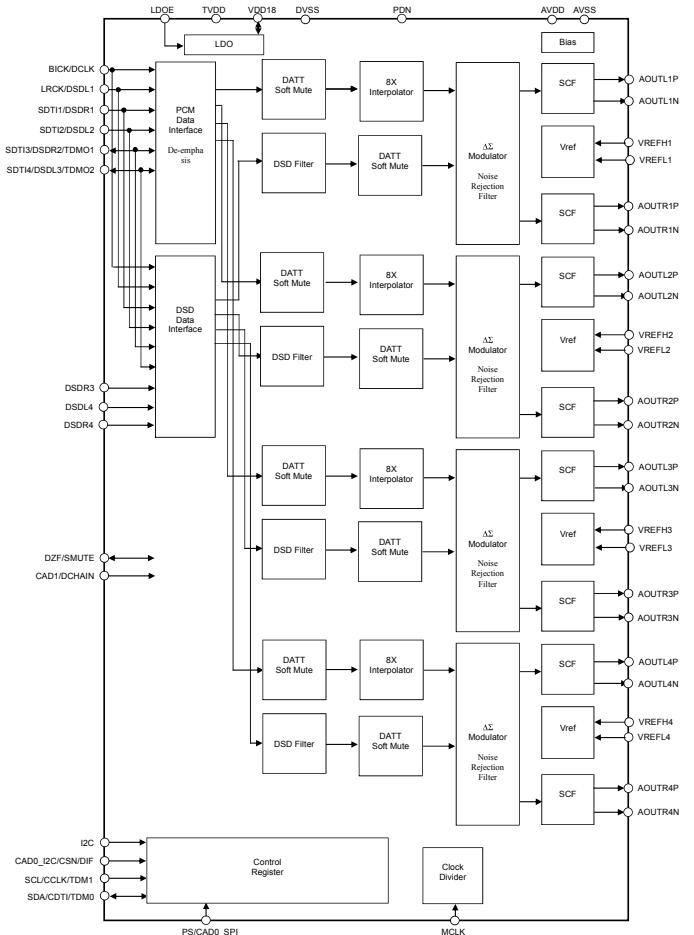

## PCM5100 (DIGITAL : IC321, IC322, IC323)

PCM510X (top view)

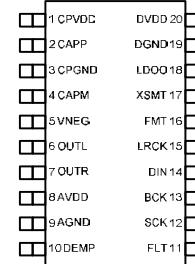


Table 2. TERMINAL FUNCTIONS, PCM510x

TERMINAL NO.	I/O	DESCRIPTION
CPVDD	1	- Charge pump power supply, 3.3V
CAPP	2	O Charge pump flying capacitor terminal for positive rail
CPGND	3	- Charge pump ground
CAPM	4	O Charge pump flying capacitor terminal for negative rail
VNEG	5	O Negative charge pump rail terminal for decoupling, -3.3V
OUTL	6	O Analog output from DAC left channel
OUTR	7	O Analog output from DAC right channel
AVDD	8	- Analog power supply, 3.3V
AGND	9	- Analog ground
DEMP	10	I De-emphasis control for 44.1kHz sampling rate <sup>(1)</sup> : Off (Low) / On (High)
FLT	11	I Filter select : Normal latency (Low) / Low latency (High)
SCK	12	I System clock input
BCK	13	I Audio data bit clock input
DIN	14	I Audio data input
LRCK	15	I Audio data word clock input
FMT	16	I Audio format selection : I <sup>2</sup> S (Low) / Left justified (High)
XSM1	17	I Soft mute control : Soft mute (Low) / soft un-mute (High)
LDOO	18	- Internal logic supply rail terminal for decoupling
DGND	19	- Digital ground
DVDD	20	- Digital power supply, 3.3V

## PCM5100 Block Diagram

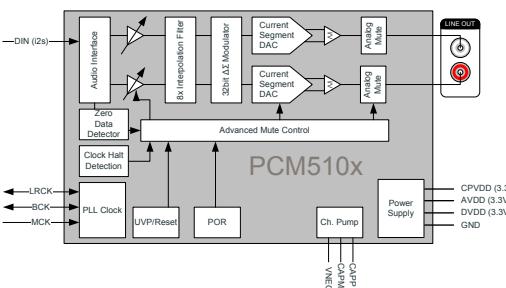
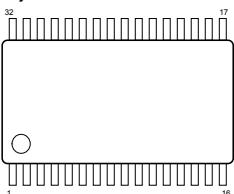
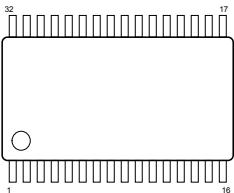




Figure 1. PCM510x Functional Block Diagram

**NJU72343 (INPUT : IC471, IC491)**

No.	Symbol	Function	No.	Symbol	Function
1	AREF	Analog reference potential	17	DATA	IC control data input
2	ADR	Address selection	18	CLOCK	IC control clock input
3	InA2	Ach input2	19	VDDOUT	Digital power supply output
4	InB2	Bch input2	20	AREF	Analog reference potential
5	InA1	Ach input1	21	OutH	Hch output
6	InB1	Bch input1	22	OutG	Gch output
7	InC	Cch input	23	OutF	Fch output
8	InD	Dch input	24	OutE	Ech output
9	InE	Ech input	25	OutD	Dch output
10	InF	Fch input	26	OutC	Cch output
11	InG1	Gch input1	27	OutB	Bch output
12	InH1	Hch input1	28	OutA	Ach output
13	InG2	Cch input2	29	AREF	Analog reference potential
14	InH2	Dch input2	30	V-	Power supply(-)
15	MUTE	External mute control	31	AREF	Analog reference potential
16	REF	Digital reference potential	32	V+	Power supply(+)


**NJU72750 (INPUT : IC473, IC474, IC475, IC478)**

No.	Symbol	Function	No.	Symbol	Function
1	V+	Power supply(+)	17	DATA	IC control data input
2	InA1	Ach input1	18	CLOCK	IC control clock input
3	InB1	Bch input1	19	NC	-
4	InA2	Ach input2	20	NC	-
5	InB2	Bch input2	21	OutB3	Bch output3
6	InA3	Ach input3	22	OutA3	Ach output3
7	InB3	Bch input3	23	REF_B	Bch reference potential
8	InA4	Ach input4	24	OutB2	Bch output2
9	InB4	Bch input4	25	OutA2	Ach output2
10	InA5	Ach input5	26	REF_A	Ach reference potential
11	InB5	Bch input5	27	OutB1	Bch output1
12	InA6	Ach input6	28	OutA1	Ach output1
13	InB6	Bch input6	29	NC	-
14	InA7	Ach input7	30	ADR0	Address selection pin 0
15	InB7	Bch input7	31	ADR1	Address selection pin 1
16	REF	BIAS reference potential	32	V-	Power supply(-)

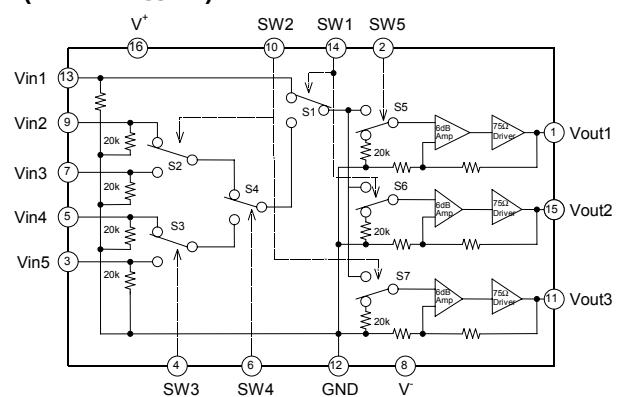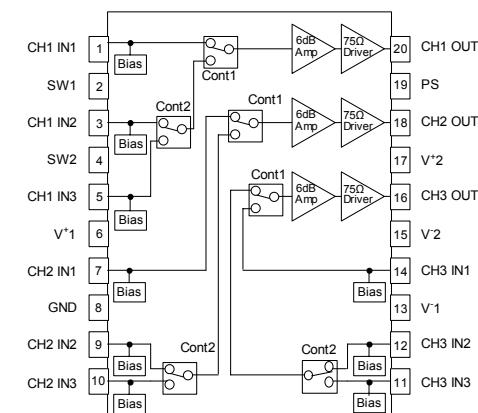**NJM2595MTE1 (VIDEO : IC511)****NJM2586AVC3(VIDEO : IC516)****SSOP20-C3**

## 2. FL DISPLAY

**FLD (17-BT-40GINK) (FRONT : FL601)**

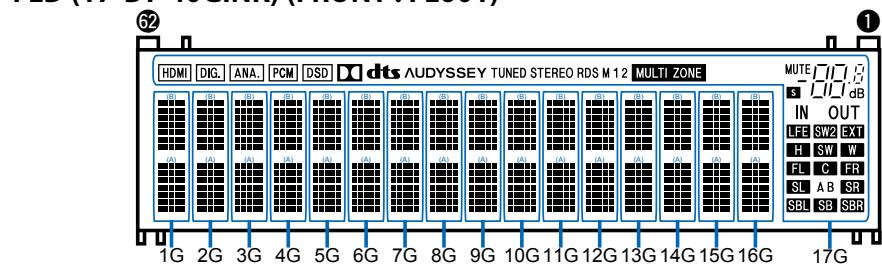

## PIN CONNECTION

CONNECTION	PIN NO.
F2	62
NX	61
NP	60
NP	59
LGND	58
PGND	57
VDD	56
VDD	55
OSC	54
RESET	53
C5	52
CP	51

---

**NOTE**

- NOTE

  - 1) F1, F2 ----Filament
  - 2) NP -----No pin
  - 3) DL -----Datum Line
  - 4) NX -----No extend pin
  - 5) 17G ----Grid
  - 6) Q17G ----Driver Output Port.
  - 7) LGND ----Logic GND pin
  - 8) PGND ----Power GND pin
  - 9) VH -----High Voltage Supply pin
  - 10) VDD -----Logic Voltage Supply pin
  - 11) OSC ----Pin for self-oscillation
  - 12) RESET --Reset Input
  - 13) CS -----Chip Select Input pin
  - 14) CP -----Shift Register Clock
  - 15) DA -----Serial Data Input
  - 16) TSA, B --Test pin
  - 17) Solder composition is Sn-3Ag-0.5Cu
  - 18) Field of vision is a minimum of 21.8°

## PATTERN DETAIL

1G-16G


1-1	2-1	3-1	4-1	5-1
1-2	2-2	3-2	4-2	5-2
1-3	2-3	3-3	4-3	5-3
1-4	2-4	3-4	4-4	5-4
1-5	2-5	3-5	4-5	5-5
1-6	2-6	3-6	4-6	5-6
1-7	2-7	3-7	4-7	5-7

## ANODE CONNECTION

	1G-16G	17G
D0A	1-1A	-
D1A	2-1A	-
D2A	3-1A	-
D3A	4-1A	-
D4A	5-1A	-
D5A	1-2A	-
D6A	2-2A	-
D7A	3-2A	-
D8A	4-2A	-
D9A	5-2A	-
D10A	1-3A	dB
D11A	2-3A	Dp
D12A	3-3A	3d
D13A	4-3A	3e
D14A	5-3A	3c
D15A	1-4A	3g
D16A	2-4A	3f
D17A	3-4A	3b
D18A	4-4A	3a
D19A	5-4A	2d
D20A	1-5A	2e
D21A	2-5A	2c
D22A	3-5A	2g
D23A	4-5A	2f
D24A	5-5A	2b
D25A	1-6A	2a
D26A	2-6A	1d
D27A	3-6A	1e
D28A	4-6A	1c
D29A	5-6A	1g
D30A	1-7A	1f
D31A	2-7A	1b
D32A	3-7A	1a
D33A	4-7A	S1
D34A	5-7A	S

	1G-16G	17G
D0B	1-1B	<b>HDMI</b>
D1B	2-1B	<b>DIG.</b>
D2B	3-1B	<b>ANA.</b>
D3B	4-1B	<b>PCM</b>
D4B	5-1B	<b>DSD</b>
D5B	1-2B	<b>DVI</b>
D6B	2-2B	<b>dts</b>
D7B	3-2B	<b>AUDYSSE</b>
D8B	4-2B	<b>TUNED</b>
D9B	5-2B	<b>STEREO</b>
D10B	1-3B	<b>RDS</b>
D11B	2-3B	<b>M</b>
D12B	3-3B	<b>1</b>
D13B	4-3B	<b>2</b>
D14B	5-3B	<b>MULTI ZONE</b>
D15B	1-4B	<b>INDEXING</b>
D16B	2-4B	<b>MUTE</b>
D17B	3-4B	<b>IN</b>
D18B	4-4B	<b>OUT</b>
D19B	5-4B	<b>LFE</b>
D20B	1-5B	<b>SW2</b>
D21B	2-5B	<b>EXT</b>
D22B	3-5B	<b>H</b>
D23B	4-5B	<b>SW</b>
D24B	5-5B	<b>W</b>
D25B	1-6B	<b>FL</b>
D26B	2-6B	<b>C</b>
D27B	3-6B	<b>FR</b>
D28B	4-6B	<b>SL</b>
D29B	5-6B	<b>A</b>
D30B	1-7B	<b>B</b>
D31B	2-7B	<b>SR</b>
D32B	3-7B	<b>SBL</b>
D33B	4-7B	<b>SB</b>
D34B	5-7B	<b>SBR</b>

## FLD (GP1261AI) (FRONT : FL602)

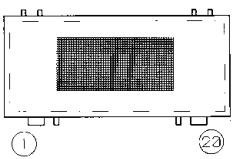

### NOTE

- 1) F-, F+ ----Filament
- 2) NP -----No pin
- 3) DL -----Datum Line
- 4) VDD -----Logic Voltage Supply pin
- 5) LGND -----Logic GND pin
- 6) PGND -----Power GND pin
- 7) VH -----High Voltage Supply pin
- 8) OSC -----Pin for self-oscillation
- 9) CS -----Chip Select Input pin
- 10) CLK -----Shift Register Clock
- 11) DA -----Serial Data Input
- 12) RESET --Reset Input
- 13) INT -----Int pin
- 14) TSA, B --Test pin
- 15) Solder composition is Sn-3Ag-0.5Cu.
- 16) NC -----No connection

(NC pin shold be electrically open on the PC boaed)

### PIN CONNECTION

PIN CONNECTION		CONNECTON PIN																			
		F20	F19	VDD	VDD	GND	GND	HV	HV	NC											

### PATTERN DETAIL

T1	T2	T3	T15	T16	T17
1-1	2-1	3-1	4-1	5-1	6-1
1-2	2-2	3-2	4-2	5-2	6-2
1-3	2-3	3-3	4-3	5-3	6-3
1-4	2-4	3-4	4-4	5-4	6-4
1-5	2-5	3-5	4-5	5-5	6-5
1-6	2-6	3-6	4-6	5-6	6-6
1-7	2-7	3-7	4-7	5-7	6-7
1-8	2-8	3-8	4-8	5-8	6-8
1-9	2-9	3-9	4-9	5-9	6-9
1-10	2-10	3-10	4-10	5-10	6-10
1-11	2-11	3-11	4-11	5-11	6-11
1-12	2-12	3-12	4-12	5-12	6-12
1-13	2-13	3-13	4-13	5-13	6-13
1-14	2-14	3-14	4-14	5-14	6-14
1-15	2-15	3-15	4-15	5-15	6-15
1-16	2-16	3-16	4-16	5-16	6-16
1-17	2-17	3-17	4-17	5-17	6-17
1-18	2-18	3-18	4-18	5-18	6-18
1-19	2-19	3-19	4-19	5-19	6-19
1-20	2-20	3-20	4-20	5-20	6-20
1-21	2-21	3-21	4-21	5-21	6-21
1-22	2-22	3-22	4-22	5-22	6-22
1-23	2-23	3-23	4-23	5-23	6-23

### ANODE CONNECTION

	1G	2G	3G	4G	5G	6G	7G	8G	9G	10G	11G	12G	13G	14G	15G	16G	17G(AD3)	18G(AD4)	
D0	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	S9	-	
D1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	3d	-	
D2	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	2d	-	
D3	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	3e	-	
D4	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	2e	-
D5	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	3c	-
D6	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2c	-
D7	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3g	-	
D8	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	2g	-
D9	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	3f	-
D10	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	2f	-
D11	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	3b	-
D12	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	2b	-
D13	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	3a	-
D14	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	2a	-
D15	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	Dp	-
D16	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	dB	-
D17	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	1d	-
D18	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	1e	-
D19	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	1c	-
D20	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1g	-
D21	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	1f	-
D22	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	1b	-
D23	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	1a	AUTO
D24	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	S1	HDMI
D25	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	S2	DIGITAL
D26	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	S3	ANALOG
D27	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	S4	S.BACK
D28	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	S5	
D29	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	S6	
D30	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	S7	AUDYSSEY
D31	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	S8	TUNED
D32	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	MUTE	STEREO
D33	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	RDS	
D34	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	Z2	SLEEP
AD1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	[DIG]	-	
AD2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	[ANA]	-	

### 3. Remote Code Table

#### **Marantz Remote Command Chart**

Last update: 06/06/2017

This pink rectangle cell is New assignment code.

Item: AV PreProcessor, AV Receiver, Stereo Receiver			This pink color's cell = New assigned code														
• Note: is placed at end of this chart Function descriptions is located right			Remote Code: RC-5/E C-Ex Format			For search	For AMX Extension Command("T")	AV Pre Processor		AV Receiver		AV Receiver		Slim Line AV Receiver		Slim Line AV Receiver	
Zone	Command Name		System	Command	Extension			AV7704		SRT912		SR6012		NR1608		NR1508	
Main	Power	ON/OFF	—	16	12	—	—	16.12	RCRCS16012	X	X	X	X	X	X	X	
Control	POWER ON	—	16	12	01	—	16.12.01	RCRCS1601201	X	X	X	X	X	X	X		
Control	POWER OFF	—	16	12	02	—	—	RCRCS1601202	X	X	X	X	X	X	X		
Control	SPEAKER GTR/CH	—	16	12	03	—	—	RCRCS1601203	X	X	X	X	X	X	X		
Volume	VOL +	—	16	16	—	—	16.16	RCRCS16016	X	X	X	X	X	X	X		
Control	VOL -	—	16	17	—	—	16.17	RCRCS16017	X	X	X	X	X	X	X		
Control	Direct VOLUME	—	16	111	05-63	—	16.111.05-63	RCRCS1601111	X	X	X	X	X	X	X		
Control	Audio MUTE ON	—	16	13	01	—	16.13.01	RCRCS1601301	X	X	X	X	X	X	X		
Control	Audio MUTE OFF	—	16	13	—	—	16.13	RCRCS16013	X	X	X	X	X	X	X		
Control	Audio MUTE (Toggle)	—	16	13	—	—	16.13	RCRCS16013	X	X	X	X	X	X	X		
Speaker Set	SPEAKER Sel	—	16	29	—	—	16.29	RCRCS16029	X	X	X	X	X	X	X		
Output	SPEAKER ON/OFF	—	16	30	—	—	16.30	RCRCS16030	X	X	X	X	X	X	X		
Control	SPEAKER'S ON/OFF	—	16	31	—	—	16.31	RCRCS16031	X	X	X	X	X	X	X		
Menu	OSD Meno	—	16	82	—	—	16.82	RCRCS16082	X	X	X	X	X	X	X		
Control	ENTER	—	16	82	60	—	16.82.60	RCRCS1608260	X	X	X	X	X	X	X		
Control	RETURN	—	16	82	11	—	16.82.11	RCRCS1608211	X	X	X	X	X	X	X		
Control	EXIT MENU	—	16	83	—	—	16.83	RCRCS16083	X	X	X	X	X	X	X		
Control	ENTER (OK)	—	16	87	—	—	16.87	RCRCS16087	X	X	X	X	X	X	X		
Control	Return	—	15	87	04	—	16.87.04	RCRCS1608704	X	X	X	X	X	X	X		
Control	CURSOR Up	—	15	88	—	—	16.88	RCRCS16088	X	X	X	X	X	X	X		
Control	CURSOR Down	—	15	89	—	—	16.89	RCRCS16089	X	X	X	X	X	X	X		
Control	CURSOR Left	—	15	90	—	—	16.90	RCRCS16090	X	X	X	X	X	X	X		
Control	CURSOR Right	—	15	91	—	—	16.91	RCRCS16091	X	X	X	X	X	X	X		
Search	Search	—	16	62	61	—	16.82.61	RCRCS1606261	X	X	X	X	X	X	X		
Search	Search	—	16	77	01	—	16.77.01	RCRCS1607701	X	X	X	X	X	X	X		
Display / Video	Dimmer(Display)	—	16	15	00	—	16.15.00	RCRCS1601500	X	X	X	X	X	X	X		
Control	Info	—	16	15	08	—	16.15.08	RCRCS1601508	X	X	X	X	X	X	X		
Control	OSD Info	—	16	15	—	—	16.15	RCRCS16015	X	X	X	X	X	X	X		
Control	Source	—	16	15	07	—	16.15.07	RCRCS1601507	X	X	X	X	X	X	X		
Control	Video Select	—	16	15	50	—	16.15.50	RCRCS1601550	X	X	X	X	X	X	X		
Control	VIDEO OFF (V OFF)	—	16	15	02	—	16.15.02	RCRCS1601502	X	X	X	X	X	X	X		
Input	INPUT NEXT	—	16	60	03	13	—	16.00.13	RCRCS1606013	X	X	X	X	X	X	X	
Source	INPUT BACK	—	16	60	14	—	—	RCRCS1606014	X	X	X	X	X	X	X		
Control	INPUT PREV	—	16	60	15	—	—	RCRCS1606015	X	X	X	X	X	X	X		
Control	Blue-ray(D)Code1	—	16	63	00	—	16.63.00	RCRCS1606300	X	X	X	X	X	X	X		
Control	Blue-ray(B)Code2	—	23	63	02	—	23.63.02	RCRCS1606302	X	X	X	X	X	X	X		
Control	Blue-ray(G)Code	—	16	62	04	—	16.62.04	RCRCS1606204	—	—	—	—	—	—	—		
CD	CD	—	16	63	—	—	—	RCRCS16063	X	X	X	X	X	X	X		
TV	TV AUDIO	—	16	63	—	—	—	RCRCS16063	X	X	X	X	X	X	X		
DVD	DVD	—	16	60	10	—	16.60.10	RCRCS1606010	X	X	X	X	X	X	X		
MEDIAPLAYER	MEDIAPLAYER	—	05	63	—	—	—	RCRCS06300	X	X	X	X	X	X	X		
CEC	CBL SAT	—	06	63	—	—	—	RCRCS06300	X	X	X	X	X	X	X		
AUX1(AUX)	AUX1	—	16	60	04	—	16.00.04	RCRCS1606004	X	X	X	X	X	X	X		
AUX2(AUX)	AUX2	—	16	60	07	—	16.00.07	RCRCS1606007	X	X	X	X	X	X	X		
AUX3(Aditional Source)	AUX3	—	16	60	08	—	16.00.08	RCRCS1606008	—	—	—	—	—	—	—		
AUX4(Aditional Source)	AUX4	—	16	62	00	—	16.02.00	RCRCS1606200	—	—	—	—	—	—	—		
AUX5(Aditional Source)	AUX5	—	16	62	01	—	16.02.01	RCRCS1606201	—	—	—	—	—	—	—		
AUX6(Aditional Source)	AUX6	—	16	62	02	—	16.02.02	RCRCS1606202	—	—	—	—	—	—	—		
AUX7(Aditional Source)	AUX7	—	16	62	03	—	16.02.03	RCRCS1606203	—	—	—	—	—	—	—		
Bluetooth	Bluetooth	—	16	62	16	—	16.02.16	RCRCS1606216	X	X	X	X	X	X	X		
GAME	GAME	—	16	60	62	—	16.60.62	RCRCS1606062	X	X	X	X	X	X	X		
PHONE	PHONE	—	16	60	55	—	16.60.55	RCRCS1606055	X	X	X	X	X	X	X		
USB	USB	—	24	63	01	—	—	RCRCS1606301	X	X	X	X	X	X	X		
HEOS	HEOS Multiroom	—	24	63	11	—	24.63.11	RCRCS1606311	X (USB)	X (USB)	X (USB)	X (USB)	X (USB)	X (USB)	X (USB)		
Control	HEOS Multiroom	—	24	63	10	—	24.63.10	RCRCS1606310	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)		
Control	HEOS Multiroom	—	24	63	15	—	24.63.15	RCRCS1606315	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)		
Control	HEOS Multiroom	—	27	63	23	—	27.63.23	RCRCS1606323	—	—	—	—	—	—	—		
Media Server Select	Media Server Select	—	27	63	24	—	27.63.24	RCRCS1606324	—	—	—	—	—	—	—		
Control	Media Server Select	—	27	63	26	—	27.63.26	RCRCS1606326	—	—	—	—	—	—	—		
Control	HEOS Multiroom	—	27	63	11	—	27.63.11	RCRCS1606311	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)		
Control	HEOS MUSIC	—	27	63	15	—	27.63.15	RCRCS1606315	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)		
M.XPORT	M.XPORT	—	29	63	01	—	29.63.01	RCRCS1606301	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)	X (HEOS)		
7.1 (6.1)CH Input On	7.1 (6.1)CH Input On	—	16	01	12	—	16.01.12	RCRCS1600112	X	X	X	X	X	X	X		
Setting	Smart Select1	—	16	62	21	—	—	RCRCS1606221	X	X	X	X	X	X	X		
Control	Smart Select2	—	16	62	22	—	16.02.22	RCRCS1606222	X	X	X	X	X	X	X		
Control	Smart Select3	—	16	62	23	—	16.02.23	RCRCS1606223	X	X	X	X	X	X	X		
Control	Smart Select4	—	16	62	24	—	16.02.24	RCRCS1606224	X	X	X	X	X	X	X		
Control	Smart Select5	—	16	62	25	—	16.02.25	RCRCS1606225	X	X	X	X	X	X	X		
Vertical Stretch	Vertical Stretch	—	16	62	26	—	16.02.26	RCRCS1606226	—	—	—	—	—	—	—		
Control	Vertical Stretch	—	16	62	27	—	16.02.27	RCRCS1606227	—	—	—	—	—	—	—		
HDMI	HDMI Output Select (Togggle)	—	16	84	00	—	16.84.00	RCRCS1608400	X	X	X	X	X	X	X		
Control	HDMI Output Enable (Decodes by AVR)	—	16	84	01	—	16.84.01	RCRCS1608401	X	X	X	X	X	X	X		
Control	HDMI Output Enable (Decodes by TV)	—	16	84	02	—	16.84.02	RCRCS1608402	X	X	X	X	X	X	X		
Control	Component 2.0 Multi	—	16	84	03	—	16.84.03	RCRCS1608403	X	X	X	X	X	X	X		
Control	Video Mode (Toggle)	—	16	84	00	—	16.84.00	RCRCS1608400	X	X	X	X	X	X	X		
Control	Video Mode: Auto	—	16	84	01	—	16.84.01	RCRCS1608401	X	X	X	X	X	X	X		
Control	Video Mode: Movie	—	16	84	02	—	16.84.02	RCRCS1608402	X	X	X	X	X	X	X		
Control	Video Mode: Game	—	16	84	03	—	16.84.03	RCRCS1608403	X	X	X	X	X	X	X		
Control	4K	—	16	84	04	—	16.84.04	RCRCS1608404	X	X	X	X	X	X	X		
Control	HDMI Output Select (Toggle)	—	16	120	00	—	16.120.00	RCRCS1612000	X	X	X	X	X	X	X		
Control	HDMI Out-1	—	16	120	01	—	16.120.01	RCRCS1612001	X	X	X	X	X	X	X		
Control	HDMI Out-2	—	16	120	02	—	16.120.02	RCRCS1612002	X	X	X	X	X	X	X		
Control	HDMI Out-3	—	16	120	03	—	16.120.03	RCRCS1612003	X	X	X	X	X	X	X		
Control	HDMI Out-4	—	16	120	04	—	16.120.04	RCRCS1612004	X	X	X	X	X	X	X		
Control	HDMI Control (CEC) ON	—	16	84	08	—	16.84.08	RCRCS1608408	X	X	X	X	X	X	X		
Control	HDMI Control (CEC) OFF	—	16	84	09	—	16.84.09	RCRCS1608409	X	X	X	X	X	X	X		
Surround	SURROUND MODE (Toggle/Next)	—	16	37	—	—	16.37	RCRCS16037	X	X	X	X	X	X	X		
Mode	SURROUND MODE (Back)	—	16	64	15	—	16.64.15	RCRCS1606415	X	X	X	X	X	X	X		
Control	MUSIC SURROUND	—	16	64	16	—	16.64.16	RCRCS1606416	X	X	X	X	X	X	X		
Control	GAME SURROUND	—	16	64	18	—	16.64.18	RCRCS1606418	X	X	X	X	X	X	X		
Control	AUTO	—	16	37	45	—	16.37.45	RCRCS1603745	X	X	X	X	X	X	X		
Control	STEREO	—	16	37	30	—	16.37.30	RCRCS1603730	X	X	X	X	X	X	X		
Control	MONO	—	16	37	31	—	16.37.31	RCRCS1603731	X	X	X	X	X	X	X		
Control	MULTI-CH Stereo	—	16	37	47	—	16.37.47	RCRCS1603747	X	X	X	X	X	X	X		
THX	THX CINEMA	—	16	37	36	—	16.37.36	RCRCS1603736	—	—	—	—	—	—	—		
Control	THX DOLBY EX	—	16	37	58	—	16.37.58	RCRCS1603758	—	—	—	—	—	—	—		
Control	THX TRA-2	—	16	37	59	—	16.37.59	RCRCS1603759	—	—	—	—	—	—	—		

	THX SELECT 2	16	64	—	16.64.07	RCRCS1600407	—	—	—	—	—	—
	THX 1 MUSIC	16	64	—	16.64.08	RCRCS1600408	—	—	—	—	—	—
	THX 1 MOVIE	16	64	—	16.64.09	RCRCS1600409	—	—	—	—	—	—
	THX 1 GAME	16	37	41	16.37.41	RCRCS1600411	—	—	—	—	—	—
	PRO LOGIC	16	37	89	16.37.89	RCRCS1600420	—	—	—	—	—	—
	PL II (z) Movie / PL II Movie	16	62	95	16.62.95	RCRCS1600421	—	—	—	—	—	—
	PL II (z) Game / PL II Game	16	62	95	16.62.95	RCRCS1600422	—	—	—	—	—	—
	PL II	16	64	—	16.64.01	RCRCS1600423	—	—	—	—	—	—
	DOLBY HEADPHONE	16	37	69	16.37.69	RCRCS1600424	—	—	—	—	—	—
	—	16	—	—	—	—	—	—	—	—	—	—
Dolby	Dolby Atmos On/Off	16	64	68	16.64.08	RCRCS1600408	x	x	x	x	x	x
	DTS	16	37	46	16.37.46	RCRCS1600746	x	x	x	x	x	x
	DTS ES	16	64	63	16.64.03	RCRCS1600403	—	—	—	—	—	—
	DTS Neo 6 Cinema	16	64	69	16.64.09	RCRCS1600409	—	—	—	—	—	x
	DTS Neo 6 Music	16	64	66	16.64.06	RCRCS1600406	—	—	—	—	—	x
	DTS NEO X ON/OFF	16	64	22	16.64.22	RCRCS1600422	—	—	—	—	—	x
Dolby	VIRTUAL	16	37	51	16.37.51	RCRCS1600751	x	x	x	x	x	x
	Surround Mode	16	—	—	—	—	—	—	—	—	—	—
	Surround Sound	16	—	—	—	—	—	—	—	—	—	—
	Surround Sound Direct	16	—	—	—	—	—	—	—	—	—	—
	Surround Sound Direct (Toggle)	16	—	—	—	—	x	x	x	x	x	x
	PURE DIRECT (Toggle)	16	34	61	16.34.61	RCRCS1600641	x	x	x	x	x	x
Effect	PURE DIRECT	16	34	61	16.34.61	RCRCS1600641	x	x	x	x	x	x
	Direct Mode	16	34	62	16.34.62	RCRCS1600642	x	x	x	x	x	x
	Normal	16	34	63	16.34.63	RCRCS1600643	x	x	x	x	x	x
	All Zone Stereo On/Off	16	100	00	16.100.00	RCRCS1610000	x	x	x	x	x	x
	All Zone Stereo On	16	100	01	16.100.01	RCRCS1610001	x	x	x	x	x	x
	All Zone Stereo Off	16	100	02	16.100.02	RCRCS1610002	x	x	x	x	x	x
Effect	Cinema EQ (HT-EQ) (Toggle)	16	64	11	16.64.11	RCRCS1600641	x	x	x	x	x	x
	Cinema EQ Management On/Off (Toggle)	16	64	11	16.64.11	RCRCS1600641	x	x	x	x	x	x
	—	16	—	—	—	—	—	—	—	—	—	—
	M-DAX OFF	16	22	65	16.22.65	RCRCS1600651	x	x	x	x	x	x
	M-DAX HIGH	16	22	67	16.22.67	RCRCS1600651	x	x	x	x	x	x
	M-DAX LOW	16	22	68	16.22.68	RCRCS1600651	x	x	x	x	x	x
Effect	Sync Up	16	—	—	—	—	—	—	—	—	—	—
	Sync Down	16	—	—	—	—	—	—	—	—	—	—
	TONE CONTROL ON/OFF (Tone/eq)	16	22	61	16.22.61	RCRCS1602201	x	x	x	x	x	x
	TONE CONTROL OFF	16	22	62	16.22.62	RCRCS1602202	x	x	x	x	x	x
	Tone	16	22	63	16.22.63	RCRCS1602203	x	x	x	x	x	x
	BASS	16	23	—	16.23.01	RCRCS1602301	x	x	x	x	x	x
Tone /	TREBLE	16	24	—	16.24.01	RCRCS1602401	x	x	x	x	x	x
	—	16	—	—	—	—	—	—	—	—	—	—
	Front TONE	16	25	23	16.25.23	RCRCS1602523	x	x	x	x	x	x
	Middle Reset	16	37	31	16.37.31	RCRCS1603731	x	x	x	x	x	x
	CH. SELECT	16	37	33	16.37.33	RCRCS1603733	x	x	x	x	x	x
	CH. LEVEL +	16	37	34	16.37.34	RCRCS1603734	x	x	x	x	x	x
Tone /	Surround L + (Up)	16	25	36	16.25.36	RCRCS1602536	x	x	x	x	x	x
	BALANCE RIGHT	16	26	—	16.26.02	RCRCS1602602	—	—	—	—	—	—
	BALANCE LEFT	16	27	—	16.27	RCRCS1602702	—	—	—	—	—	—
	Front L (A/B) + (Up)	16	26	01	16.26.01	RCRCS1602601	x	x	x	x	x	x
	Front L (A/B) - (Down)	16	26	02	16.26.02	RCRCS1602602	x	x	x	x	x	x
	Front R (A/B) + (Up)	16	26	03	16.26.03	RCRCS1602603	x	x	x	x	x	x
Tone /	Front R (A/B) - (Down)	16	26	04	16.26.04	RCRCS1602604	x	x	x	x	x	x
	Surround L + (Up)	16	26	05	16.26.05	RCRCS1602605	x	x	x	x	x	x
	Surround L - (Down)	16	26	06	16.26.06	RCRCS1602606	x	x	x	x	x	x
	Surround R + (Up)	16	26	07	16.26.07	RCRCS1602607	x	x	x	x	x	x
	Surround R - (Down)	16	26	08	16.26.08	RCRCS1602608	x	x	x	x	x	x
	Surround Back L + (Up)	16	26	09	16.26.09	RCRCS1602609	x	x	x	x	x	x
Tone /	Surround Back L - (Down)	16	26	10	16.26.10	RCRCS1602610	x	x	x	x	x	x
	Surround Back R + (Up)	16	26	11	16.26.11	RCRCS1602611	x	x	x	x	x	x
	Surround Back R - (Down)	16	26	12	16.26.12	RCRCS1602612	x	x	x	x	x	x
	Front Wide L + (Up)	16	26	13	16.26.13	RCRCS1602613	x	x	x	x	x	x
	Front Wide L - (Down)	16	26	14	16.26.14	RCRCS1602614	x	x	x	x	x	x
	Front Wide R + (Up)	16	26	15	16.26.15	RCRCS1602615	x	x	x	x	x	x
Tone /	Front Wide R - (Down)	16	26	16	16.26.16	RCRCS1602616	x	x	x	x	x	x
	Front Height L + (Up)	16	26	17	16.26.17	RCRCS1602617	x	x	x	x	x	x
	Front Height L - (Down)	16	26	18	16.26.18	RCRCS1602618	x	x	x	x	x	x
	Front Height R + (Up)	16	26	19	16.26.19	RCRCS1602619	x	x	x	x	x	x
	Front Height R - (Down)	16	26	20	16.26.20	RCRCS1602620	x	x	x	x	x	x
	Center + (Up)	16	27	11	16.27.11	RCRCS1602711	x	x	x	x	x	x
Tone /	Center - (Down)	16	37	12	16.37.12	RCRCS1603712	x	x	x	x	x	x
	Subwoofer + (Up)	16	37	49	16.37.49	RCRCS1603749	x	x	x	x	x	x
	Subwoofer - (Down)	16	37	50	16.37.50	RCRCS1603750	x	x	x	x	x	x
	Subwoofer 2 + (Up)	16	64	23	16.64.23	RCRCS1606423	x	x	x	x	x	x
	Subwoofer 2 - (Down)	16	64	24	16.64.24	RCRCS1606424	x	x	x	x	x	x
	Front Height L + (Up)	16	25	21	16.25.21	RCRCS1602521	x	x	x	x	x	x
Tone /	Top Front L - (Down)	16	26	22	16.26.22	RCRCS1602622	x	x	x	x	x	x
	Top Front R + (Up)	16	26	23	16.26.23	RCRCS1602623	x	x	x	x	x	x
	Top Height L + (Up)	16	26	24	16.26.24	RCRCS1602624	x	x	x	x	x	x
	Top Height R - (Down)	16	26	25	16.26.25	RCRCS1602625	x	x	x	x	x	x
	Top Middle L - (Down)	16	26	26	16.26.26	RCRCS1602626	x	x	x	x	x	x
	Top Middle R + (Up)	16	26	27	16.26.27	RCRCS1602627	x	x	x	x	x	x
Tone /	Top Middle R - (Down)	16	26	28	16.26.28	RCRCS1602628	x	x	x	x	x	x
	Top Rear L - (Down)	16	26	29	16.26.29	RCRCS1602629	x	x	x	x	x	x
	Top Rear R + (Up)	16	26	31	16.26.31	RCRCS1602631	x	x	x	x	x	x
	Top Rear R - (Down)	16	26	32	16.26.32	RCRCS1602632	x	x	x	x	x	x
	Rear Height L + (Up)	16	26	33	16.26.33	RCRCS1602633	x	x	x	x	x	x
	Rear Height L - (Down)	16	26	34	16.26.34	RCRCS1602634	x	x	x	x	x	x
Tone /	Rear Height R + (Up)	16	26	35	16.26.35	RCRCS1602635	x	x	x	x	x	x
	Rear Height R - (Down)	16	26	36	16.26.36	RCRCS1602636	x	x	x	x	x	x
	Front Dolly L + (Up)	16	26	37	16.26.37	RCRCS1602637	x	x	x	x	x	x
	Front Dolly L - (Down)	16	26	38	16.26.38	RCRCS1602638	x	x	x	x	x	x
	Front Dolly R + (Up)	16	26	39	16.26.39	RCRCS1602639	x	x	x	x	x	x
	Front Dolly R - (Down)	16	26	40	16.26.40	RCRCS1602640	x	x	x	x	x	x
Tone /	Surround Dolly L + (Up)	16	26	41	16.26.41	RCRCS1602641	x	x	x	x	x	x
	Surround Dolly L - (Down)	16	26	42	16.26.42	RCRCS1602642	x	x	x	x	x	x
	Surround Dolly R + (Up)	16	26	43	16.26.43	RCRCS1602643	x	x	x	x	x	x
	Surround Dolly R - (Down)	16	26	44	16.26.44	RCRCS1602644	x	x	x	x	x	x
	Back Dolly L + (Up)	16	26	45	16.26.45	RCRCS1602645	x	x	x	x	x	x
	Back Dolly L - (Down)	16	26	46	16.26.46	RCRCS1602646	x	x	x	x	x	x
Tone /	Back Dolly R + (Up)	16	26	47	16.26.47	RCRCS1602647	x	x	x	x	x	x
	Back Dolly R - (Down)	16	26	48	16.26.48	RCRCS1602648	x	x	x	x	x	x
	Surround Height L + (Up)	16	26	49	16.26.49	RCRCS1602649	x	x	x	x	x	x
	Surround Height R - (Down)	16	26	50	16.26.50	RCRCS1602650	x	x	x	x	x	x
	Surround Height L + (Up)	16	26	51	16.26.51	RCRCS1602651	x	x	x	x	x	x
	Surround Height R - (Down)	16	26	52	16.26.52	RCRCS1602652	x	x	x	x	x	x
Tone /	Surround Surround + (Up)	16	26	53	16.26.53	RCRCS1602653	x	x	x	x	x	x
	Surround Surround - (Down)	16	26	54	16.26.54	RCRCS1602654	x	x	x	x	x	x
	Audyssey MultiEQ OFF	16	26	55	16.26.55	RCRCS1602655	x	x	x	x	x	x
	Audyssey Dynamic DOLBY (Toggle)	16	26	56	16.26.56	RCRCS1602656	x	x	x	x	x	x
	Audyssey Dynamic DOLFI (Toggle)	16	26	57	16.26.57	RCRCS1602657	x	x	x	x	x	x
	Audyssey Dynamic EQ Mode	16	26	58	16.26.58	RCRCS1602658	x	x	x	x	x	x
Audyssey	Audyssey Dynamic EQ Mode Off	16	26	59	16.26.59	RCRCS1602659	x	x	x	x	x	x

## **Caution in servicing**

Electrical

Mechanical

## Repair Information

Updating

### **Caution in servicing**

Electrical

## Mechanical

## Repair Information

Updating

	Audyssey Dynamic EQ Mode On	16	28	22	16 28 22	CRCS1602822	x	x	x	x	x	x	x
	Audyssey Dynamic Volume Mode	16	28	30	16 28 30	CRCS1602830	x	x	x	x	x	x	x
	Audyssey Dynamic Volume Mode Off	16	28	31	16 28 31	CRCS1602831	x	x	x	x	x	x	x
	Audyssey Dynamic Volume Off	16	28	32	16 28 32	CRCS1602832	x	x	x	x	x	x	x
	Audyssey Dynamic EQ Off	16	28	33	16 28 33	CRCS1602833	x	x	x	x	x	x	x
	Audyssey Dynamic EQ Off - Scb	16	28	32	16 28 32	CRCS1602832	x	x	x	x	x	x	x
	Audyssey Dynamic Volume Off - Scb	16	28	33	16 28 33	CRCS1602833	x	x	x	x	x	x	x
	Audyssey LFC On	16	28	40	16 28 40	CRCS1602840	x	x	x	x	x	x	x
	Audyssey LFC Off	16	28	41	16 28 41	CRCS1602841	x	x	x	x	x	x	x
	Audyssey LFC Off - Scb	16	28	42	16 28 42	CRCS1602842	x	x	x	x	x	x	x
	Audyssey DSX OFF	16	64	51	16 64 51	CRCS1606451	-	-	-	-	-	-	-
	Audyssey DSX ON(Hight)	16	64	52	16 64 52	CRCS1606452	-	-	-	-	-	-	-
	Audyssey DSX ON(Middle)	16	64	53	16 64 53	CRCS1606453	-	-	-	-	-	-	-
	Audyssey DSX ON(WidthHeight)	16	64	54	16 64 54	CRCS1606454	-	-	-	-	-	-	-
Graphic EQ		16	38	38	16 38 38	CRCS1603838	x	x	x	x	x	x	x
	Graphic EQ OFF	16	38	39	16 38 39	CRCS1603839	x	x	x	x	x	x	x
ECO	ECO Mode	16	38	40	16 38 40	CRCS1603840	x	x	x	x	x	x	x
	ECO Mode Off	16	38	41	16 38 41	CRCS1603841	x	x	x	x	x	x	x
	Sleep	16	38	45	16 38 45	CRCS1603845	x	x	x	x	x	x	x
	SLEEP	16	38	46	16 38 46	CRCS1603846	x	x	x	x	x	x	x
Trigger	DC Trigger-1 On	16	125	01	16 125 01	CRCS1612501	x	x	x	x	x	x	x
	DC Trigger-1 OFF	16	125	02	16 125 02	CRCS1612502	x	x	x	x	x	x	x
	DC-Trigger-2 On	16	125	03	16 125 03	CRCS1612503	x	x	x	x	x	x	x
	DC-Trigger-2 OFF	16	125	04	16 125 04	CRCS1612504	x	x	-	-	-	-	-
	DC-Trigger-3 On	16	125	05	16 125 05	CRCS1612505	x	x	x	x	x	x	x
	DC-Trigger-3 OFF	16	125	06	16 125 06	CRCS1612506	-	-	-	-	-	-	-
Tuner	BAND	17	47	01	17 47 01	CRCS1704701	x	x	x	x	x	x	x
	F	17	47	02	17 47 02	CRCS1704702	x	x	x	x	x	x	x
	AM	17	47	03	17 47 03	CRCS1704703	x	x	x	x	x	x	x
	T-MODE	17	47	04	17 47 04	CRCS1704704	x	x	x	x	x	x	x
	MEMO (MEMORY)	17	47	05	17 47 05	CRCS1704705	x	x	x	x	x	x	x
	MEMORY	25	41	98	24 41 98	CRCS2404198	x	x	x	x	x	x	x
	PRESET Up	17	47	06	17 47 06	CRCS1704706	x	x	x	x	x	x	x
	PRESET Down	17	47	07	17 47 07	CRCS1704707	x	x	x	x	x	x	x
	(PRESET 0)	17	47	08	17 47 08	CRCS1704708	x	x	x	x	x	x	x
	(PRESET 1)	17	47	09	17 47 09	CRCS1704709	x	x	x	x	x	x	x
	(PRESET 2)	17	47	10	17 47 10	CRCS1704710	x	x	x	x	x	x	x
	(PRESET 3)	17	47	11	17 47 11	CRCS1704711	x	x	x	x	x	x	x
	(PRESET 4)	17	47	12	17 47 12	CRCS1704712	x	x	x	x	x	x	x
	(PRESET 5)	17	47	13	17 47 13	CRCS1704713	x	x	x	x	x	x	x
	(PRESET 6)	17	47	14	17 47 14	CRCS1704714	x	x	x	x	x	x	x
	(PRESET 7)	17	47	15	17 47 15	CRCS1704715	x	x	x	x	x	x	x
	(PRESET 8)	17	47	16	17 47 16	CRCS1704716	x	x	x	x	x	x	x
	Cursor Up	17	80	01	17 80 01	CRCS1708001	x	x	x	x	x	x	x
	Cursor Down	17	80	02	17 80 02	CRCS1708002	x	x	x	x	x	x	x
	Cursor Left	17	80	03	17 80 03	CRCS1708003	x	x	x	x	x	x	x
	Cursor Right	17	80	04	17 80 04	CRCS1708004	x	x	x	x	x	x	x
	Cursor	17	80	05	17 80 05	CRCS1708005	x	x	x	x	x	x	x
	Page Previous	24	80	06	24 80 06	CRCS2408006	x	x	x	x	x	x	x
	Page Next	24	80	07	24 80 07	CRCS2408007	x	x	x	x	x	x	x
	Play/Pause	24	80	08	24 80 08	CRCS2408008	x	x	x	x	x	x	x
	Stop	24	80	09	24 80 09	CRCS2408009	x	x	x	x	x	x	x
	Next	24	80	10	24 80 10	CRCS2408010	x	x	x	x	x	x	x
	Previous	24	80	11	24 80 11	CRCS2408011	x	x	x	x	x	x	x
	FF (Toggle)	24	80	12	24 80 12	CRCS2408012	-	-	-	-	-	-	-
	Random(Toggle)	24	80	13	24 80 13	CRCS2408013	-	-	-	-	-	-	-
	Random Off	24	80	14	24 80 14	CRCS2408014	-	-	-	-	-	-	-
	Random On(Songs)	24	80	15	24 80 15	CRCS2408015	-	-	-	-	-	-	-
	Repeat(End)	24	80	16	24 80 16	CRCS2408016	-	-	-	-	-	-	-
	Repeat Off	24	80	17	24 80 17	CRCS2408017	-	-	-	-	-	-	-
	Repeat One	24	80	18	24 80 18	CRCS2408018	-	-	-	-	-	-	-
	Repeat All	24	80	19	24 80 19	CRCS2408019	-	-	-	-	-	-	-
Network	Network(DMP): Random (toggle)	27	28	01	27 28 01	CRCS2702801	-	-	-	-	-	-	-
	Network(DMP): Random Off	27	28	02	27 28 02	CRCS2702802	-	-	-	-	-	-	-
	Network(DMP): Random On	27	28	03	27 28 03	CRCS2702803	-	-	-	-	-	-	-
	Network(DMP): Repeat (toggle)	27	29	01	27 29 01	CRCS2702901	-	-	-	-	-	-	-
	Network(DMP): Repeat Off	27	29	02	27 29 02	CRCS2702902	-	-	-	-	-	-	-
	Network(DMP): Stop	27	29	03	27 29 03	CRCS2702903	-	-	-	-	-	-	-
	Network(DMP): Next	27	29	04	27 29 04	CRCS2702904	-	-	-	-	-	-	-
	Network(DMP): Previous	27	29	05	27 29 05	CRCS2702905	-	-	-	-	-	-	-
	Network(DMP): Enter	27	29	06	27 29 06	CRCS2702906	-	-	-	-	-	-	-
	Network(DMP): Cursor Up	27	85	01	27 85 01	CRCS2708501	x	x	x	x	x	x	x
	Network(DMP): Cursor Down	27	85	01	27 85 01	CRCS2708501	x	x	x	x	x	x	x
	Network(DMP): Cursor Left	27	85	01	27 85 01	CRCS2708501	x	x	x	x	x	x	x
	Network(DMP): Cursor Right	27	85	01	27 85 01	CRCS2708501	x	x	x	x	x	x	x
	Network(DMP): Enter	27	85	01	27 85 01	CRCS2708501	x	x	x	x	x	x	x
Zone	Power	16	29	00	16 29 00	CRCS1602900	x	x	x	x	x	x	x
Mute	Power	16	29	03	16 29 03	CRCS1602903	x	x	x	x	x	x	x
Zone A	Power	16	29	04	16 29 04	CRCS1602904	x	x	x	x	x	x	x
Volume	Control	16	29	05	16 29 05	CRCS1602905	x	x	x	x	x	x	x
Volume	Control	16	29	06	16 29 06	CRCS1602906	x	x	x	x	x	x	x
Volume	Control	16	29	07	16 29 07	CRCS1602907	x	x	x	x	x	x	x
Volume	Control	16	29	08	16 29 08	CRCS1602908	x	x	x	x	x	x	x
Volume	Control	16	29	09	16 29 09	CRCS1602909	x	x	x	x	x	x	x
Volume	Control	16	29	10	16 29 10	CRCS1602910	x	x	x	x	x	x	x
Volume	Control	16	29	11	16 29 11	CRCS1602911	x	x	x	x	x	x	x
Volume	Control	16	29	12	16 29 12	CRCS1602912	x	x	x	x	x	x	x
Volume	Control	16	29	13	16 29 13	CRCS1602913	x	x	x	x	x	x	x
Volume	Control	16	29	14	16 29 14	CRCS1602914	x	x	x	x	x	x	x
Volume	Control	16	29	15	16 29 15	CRCS1602915	x	x	x	x	x	x	x
Volume	Control	16	29	16	16 29 16	CRCS1602916	x	x	x	x	x	x	x
Volume	Control	16	29	17	16 29 17	CRCS1602917	x	x	x	x	x	x	x
Volume	Control	16	29	18	16 29 18	CRCS1602918	x	x	x	x	x	x	x
Volume	Control	16	29	19	16 29 19	CRCS1602919	x	x	x	x	x	x	x
Volume	Control	16	29	20	16 29 20	CRCS1602920	x	x	x	x	x	x	x
Volume	Control	16	29	21	16 29 21	CRCS1602921	x	x	x	x	x	x	x
Volume	Control	16	29	22	16 29 22	CRCS1602922	x	x	x	x	x	x	x
Volume	Control	16	29	23	16 29 23	CRCS1602923	x	x	x	x	x	x	x
Volume	Control	16	29	24	16 29 24	CRCS1602924	x	x	x	x	x	x	x
Volume	Control	16	29	25	16 29 25	CRCS1602925	x	x	x	x	x	x	x
Volume	Control	16	29	26	16 29 26	CRCS1602926	x	x	x	x	x	x	x
Volume	Control	16	29	27	16 29 27	CRCS1602927	x	x	x	x	x	x	x
Volume	Control	16	29	28	16 29 28	CRCS1602928	x	x	x	x	x	x	x
Volume	Control	16	29	29	16 29 29	CRCS1602929	x	x	x	x	x	x	x
Volume	Control	16	29	30	16 29 30	CRCS1602930	x	x	x	x	x	x	x
Volume	Control	16	29	31	16 29 31	CRCS1602931	x	x	x	x	x	x	x
Volume	Control	16	29	32	16 29 32	CRCS1602932	x	x	x	x	x	x	x
Volume	Control	16	29	33	16 29 33	CRCS1602933	x	x	x	x	x	x	x
Volume	Control	16	29	34	16 29 34	CRCS1602934	x	x	x	x	x	x	x
Volume	Control	16	29	35	16 29 35	CRCS1602935	x	x	x	x	x	x	x
Volume	Control	16	29	36	16 29 36	CRCS1602936	x	x	x	x	x	x	x
Volume	Control	16	29	37	16 29 37	CRCS1602937	x	x	x	x	x	x	x
Volume	Control	16	29	38	16 29 38	CRCS1602938	x	x	x	x	x	x	x
Volume	Control	16	29	39	16 29 39	CRCS1602939	x	x	x	x	x	x	x
Volume	Control	16	29	40	16 29 40	CRCS1602940	x	x	x	x	x	x	x
Volume	Control	16	29	41	16 29 41	CRCS1602941	x	x	x	x	x	x	x
Volume	Control	16	29	42	16 29 42	CRCS1602942	x	x	x	x	x	x	x
Volume	Control	16	29	43	16 29 43	CRCS1602943	x	x	x	x	x	x	x
Volume	Control	16	29	44	16 29 44	CRCS1602944	x	x	x	x	x	x	x
Volume	Control	16	29	45	16 29 45	CRCS1602945	x	x	x	x	x	x	x
Volume	Control	16	29	46	16 29 46	CRCS1602946	x	x	x</td				



# MECHANICAL

## DISASSEMBLY

Flowchart

- 1. WiFi ANT
- 2. FRONT ASSY
- 3. RADIATOR ASSY
- 4. REAR PANEL
- 5. DIGITAL PCB
- 6. VIDEO PCB
- 7. INPUT PCB
- 8. XLR PCB
- 9. SMPS PCB
- 10. TRANS

## EXPLODED VIEW

## PACKING VIEW

Caution in  
servicing

Electrical

Mechanical


Repair Information

Updating

# DISASSEMBLY

## Flowchart

- Remove each part following the flow below.
- Reassemble the removed parts in the reverse order.
- Read "[SAFETY PRECAUTIONS](#)" before reassembling the removed parts.
- If wire bundles are removed or moved during adjustment or part replacement, reshape the wires after completing the work. Failure to shape the wires correctly may cause problems such as noise.
- See "[EXPLODED VIEW](#)"

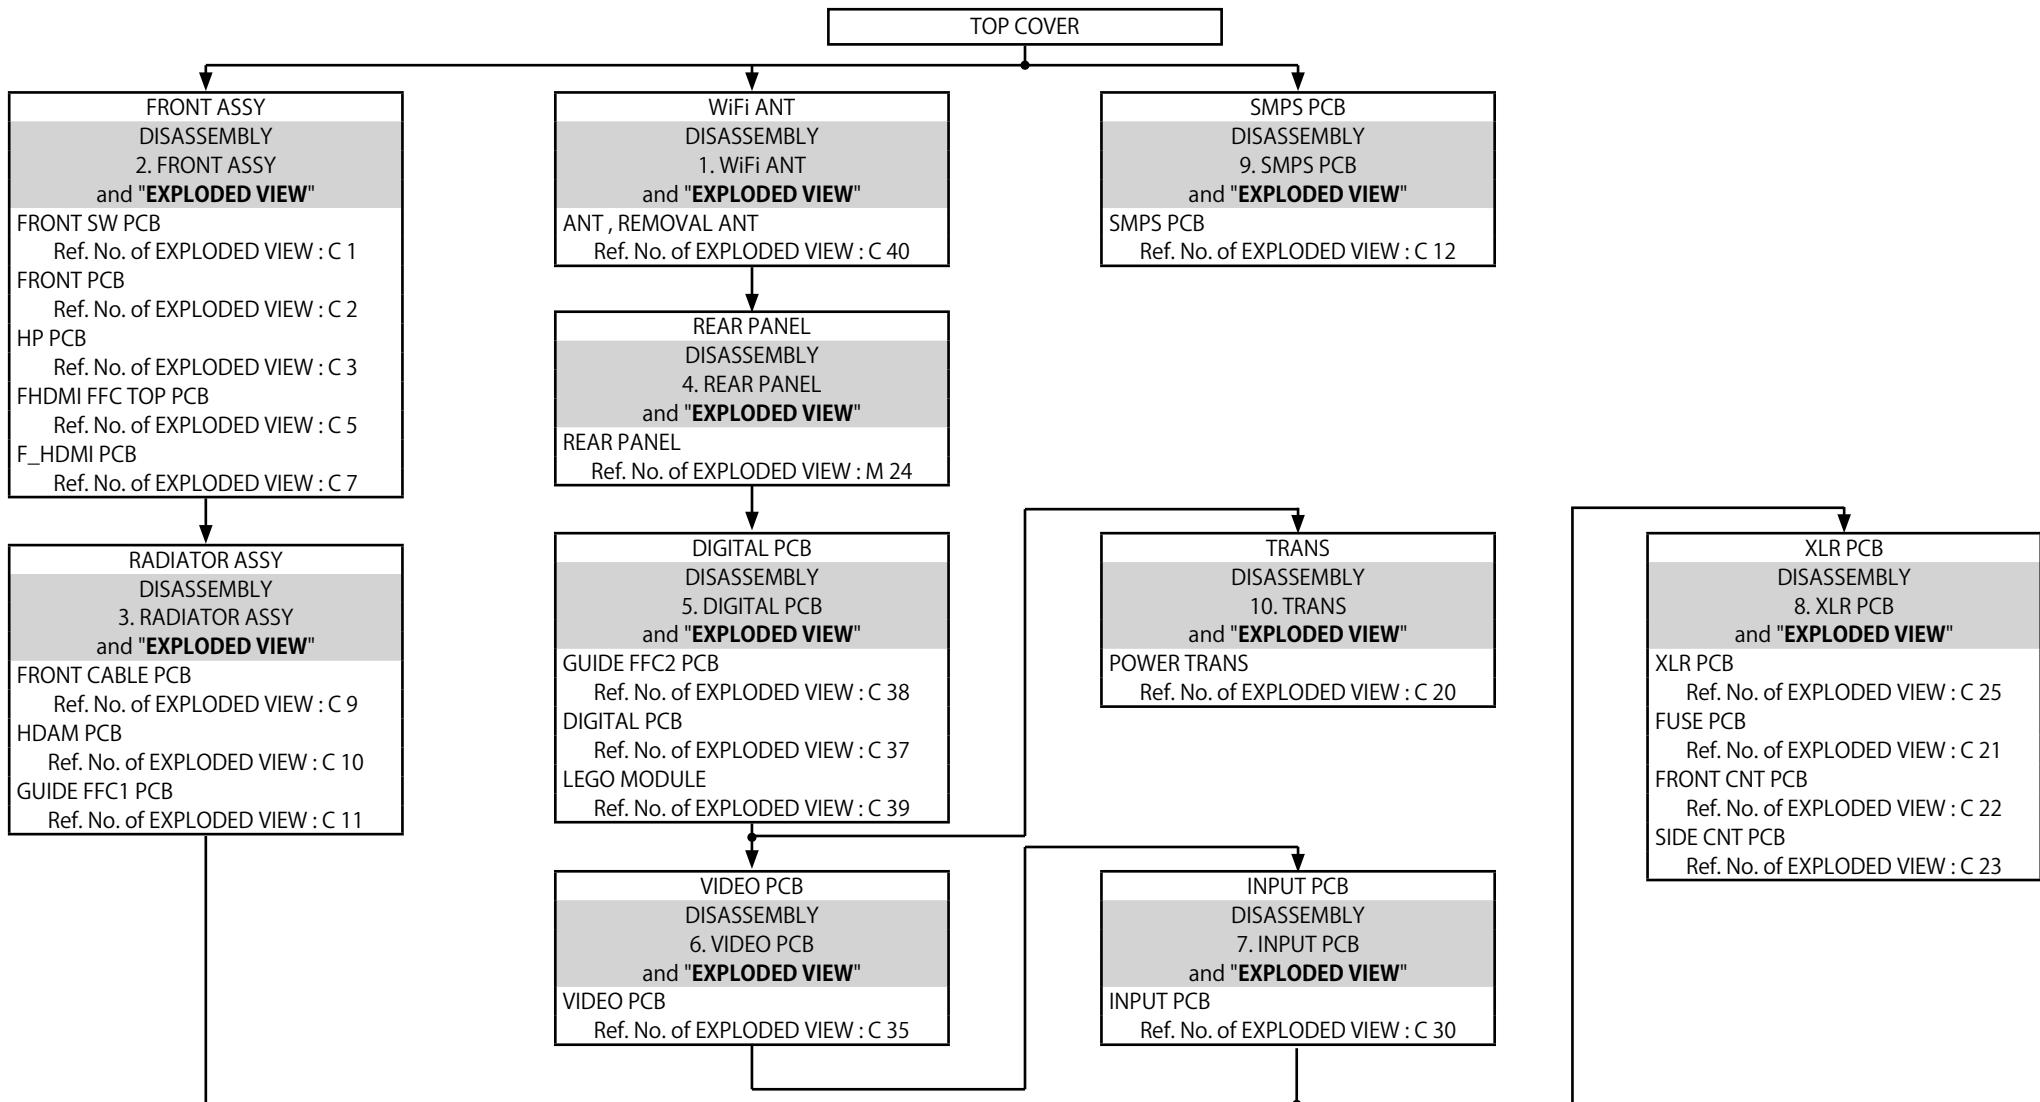

Caution in servicing

Electrical

Mechanical

Repair Information


Updating

## Explanatory Photos for DISASSEMBLY

- For the shooting direction of each photos used in this manual, see the photo below.
- A, B, C and D** in the photo below indicate the shooting directions of photos.
- The photographs with no shooting direction indicated were taken from the top of the unit.
- Photos of AV7704 U are used in this manual.

## The viewpoint of each photograph


(Shooting direction : X) [View from the top]

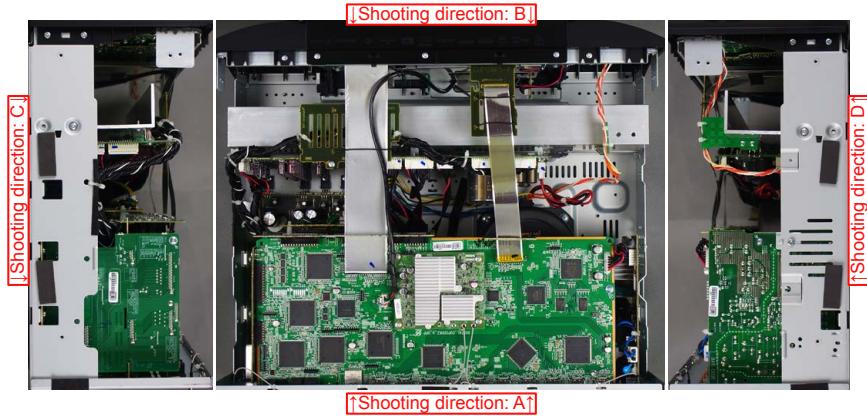

## 1. WiFi ANT

Proceeding : **TOP COVER** → **WiFi ANT**

- Cut the wire clamps.

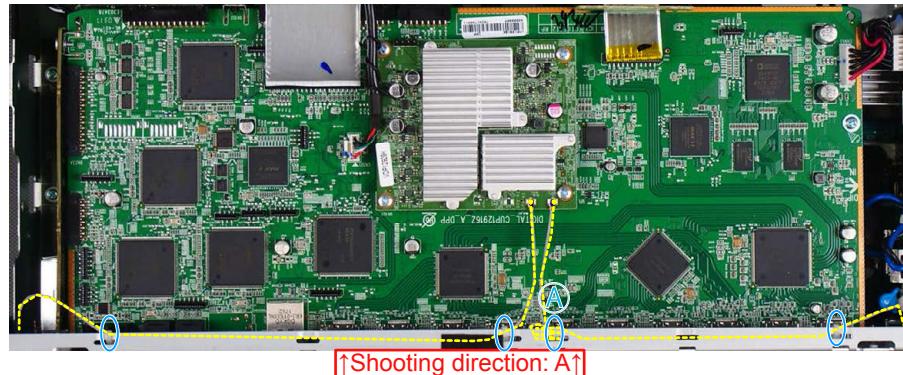

NOTE : • Turn up and spare wire at position A.


## 2. FRONT ASSY

Proceeding : **TOP COVER** → **FRONT ASSY**

- Remove the screws.



- Remove the STYLE PINs and connectors. Remove the FFC. Cut the wire clamps. Remove the screws.

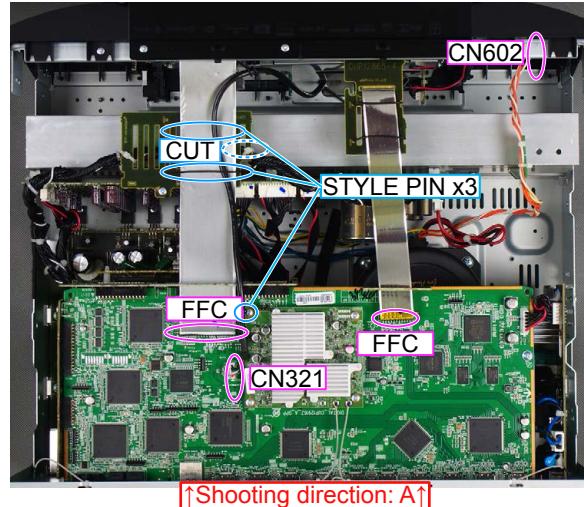

### 3. RADIATOR ASSY


Proceeding : **TOP COVER** → **FRONT ASSY** → **RADIATOR ASSY**

- (1) Remove the screws.



**View from the bottom**

- (2) Cut the wire clamp, then remove the connector.

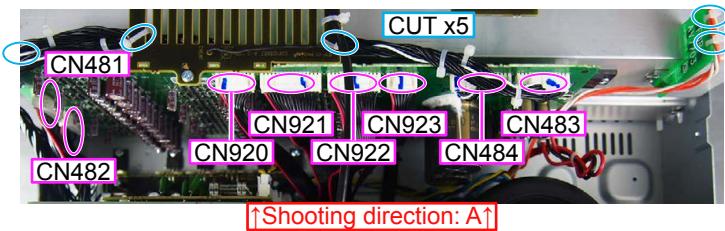

### 4. REAR PANEL

Proceeding : **TOP COVER** → **WiFi ANT** → **REAR PANEL**


- (1) Remove the screws.




### 5. DIGITAL PCB

Proceeding : **TOP COVER** → **WiFi ANT** → **REAR PANEL** → **DIGITAL PCB**

- (1) Remove the screws. Remove the Rivet. Cut the wire clamp, then remove the connector. Remove the FFC. Remove the STYLE PIN.

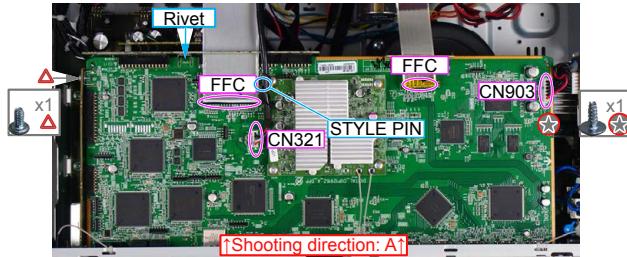


- (2) Remove the connector.

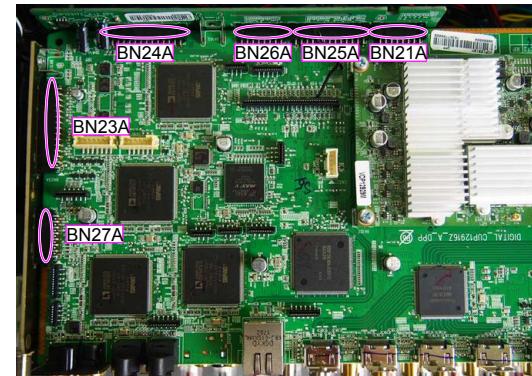

## 6. VIDEO PCB

Proceeding : **TOP COVER** → **WiFi ANT** → **REAR PANEL** → **DIGITAL PCB** → **VIDEO PCB**


- (1) Remove the connector.

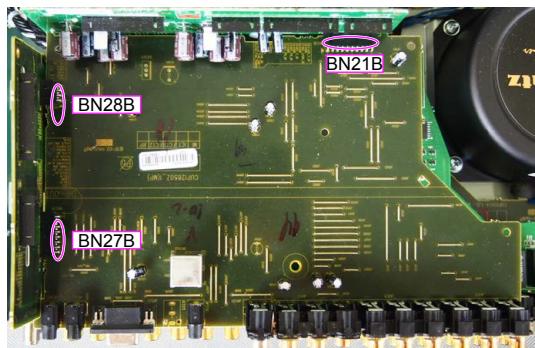

## 7. INPUT PCB

Proceeding : **TOP COVER** → **WiFi ANT** → **REAR PANEL** → **DIGITAL PCB** → **VIDEO PCB**  
→ **INPUT PCB**

- (1) Remove the screws. Remove the connector. Remove the STYLE PIN.

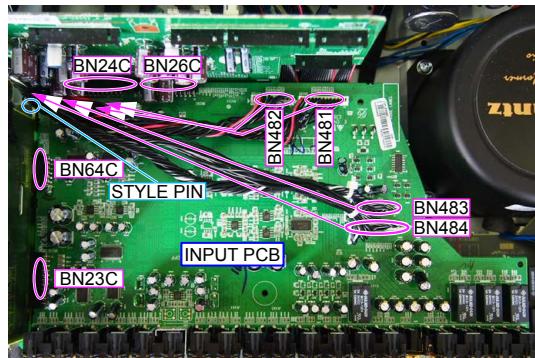


## 8. XLR PCB

Proceeding : **TOP COVER** → **WiFi ANT** → **FRONT ASSY** → **RADIATOR ASSY**  
→ **REAR PANEL** → **DIGITAL PCB** → **VIDEO PCB** → **INPUT PCB**  
→ **XLR PCB**

- (1) Remove the screws.



- (2) Remove the screws. Remove the connector. Remove the STYLE PIN.

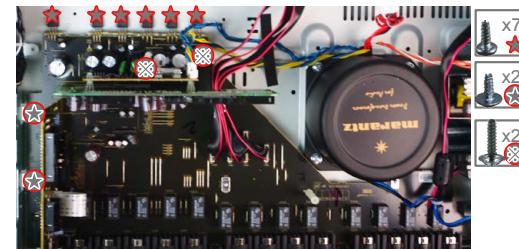

## 9. SMPS PCB

Proceeding : **TOP COVER** → **SMPS PCB**

See "[EXPLODED VIEW](#)" for instructions on removing the SMPS PCB.

## 10. TRANS


Proceeding : **TOP COVER** → **REAR PANEL** → **DIGITAL PCB** → **TRANS**

See "[EXPLODED VIEW](#)" for instructions on removing the transformer (TRANS).

# EXPLODED VIEW

**Parts List :** <http://dmedia.dmglobal.com/Document/DocumentDetails/23567>


EXPLODED VIEW [AV7704]

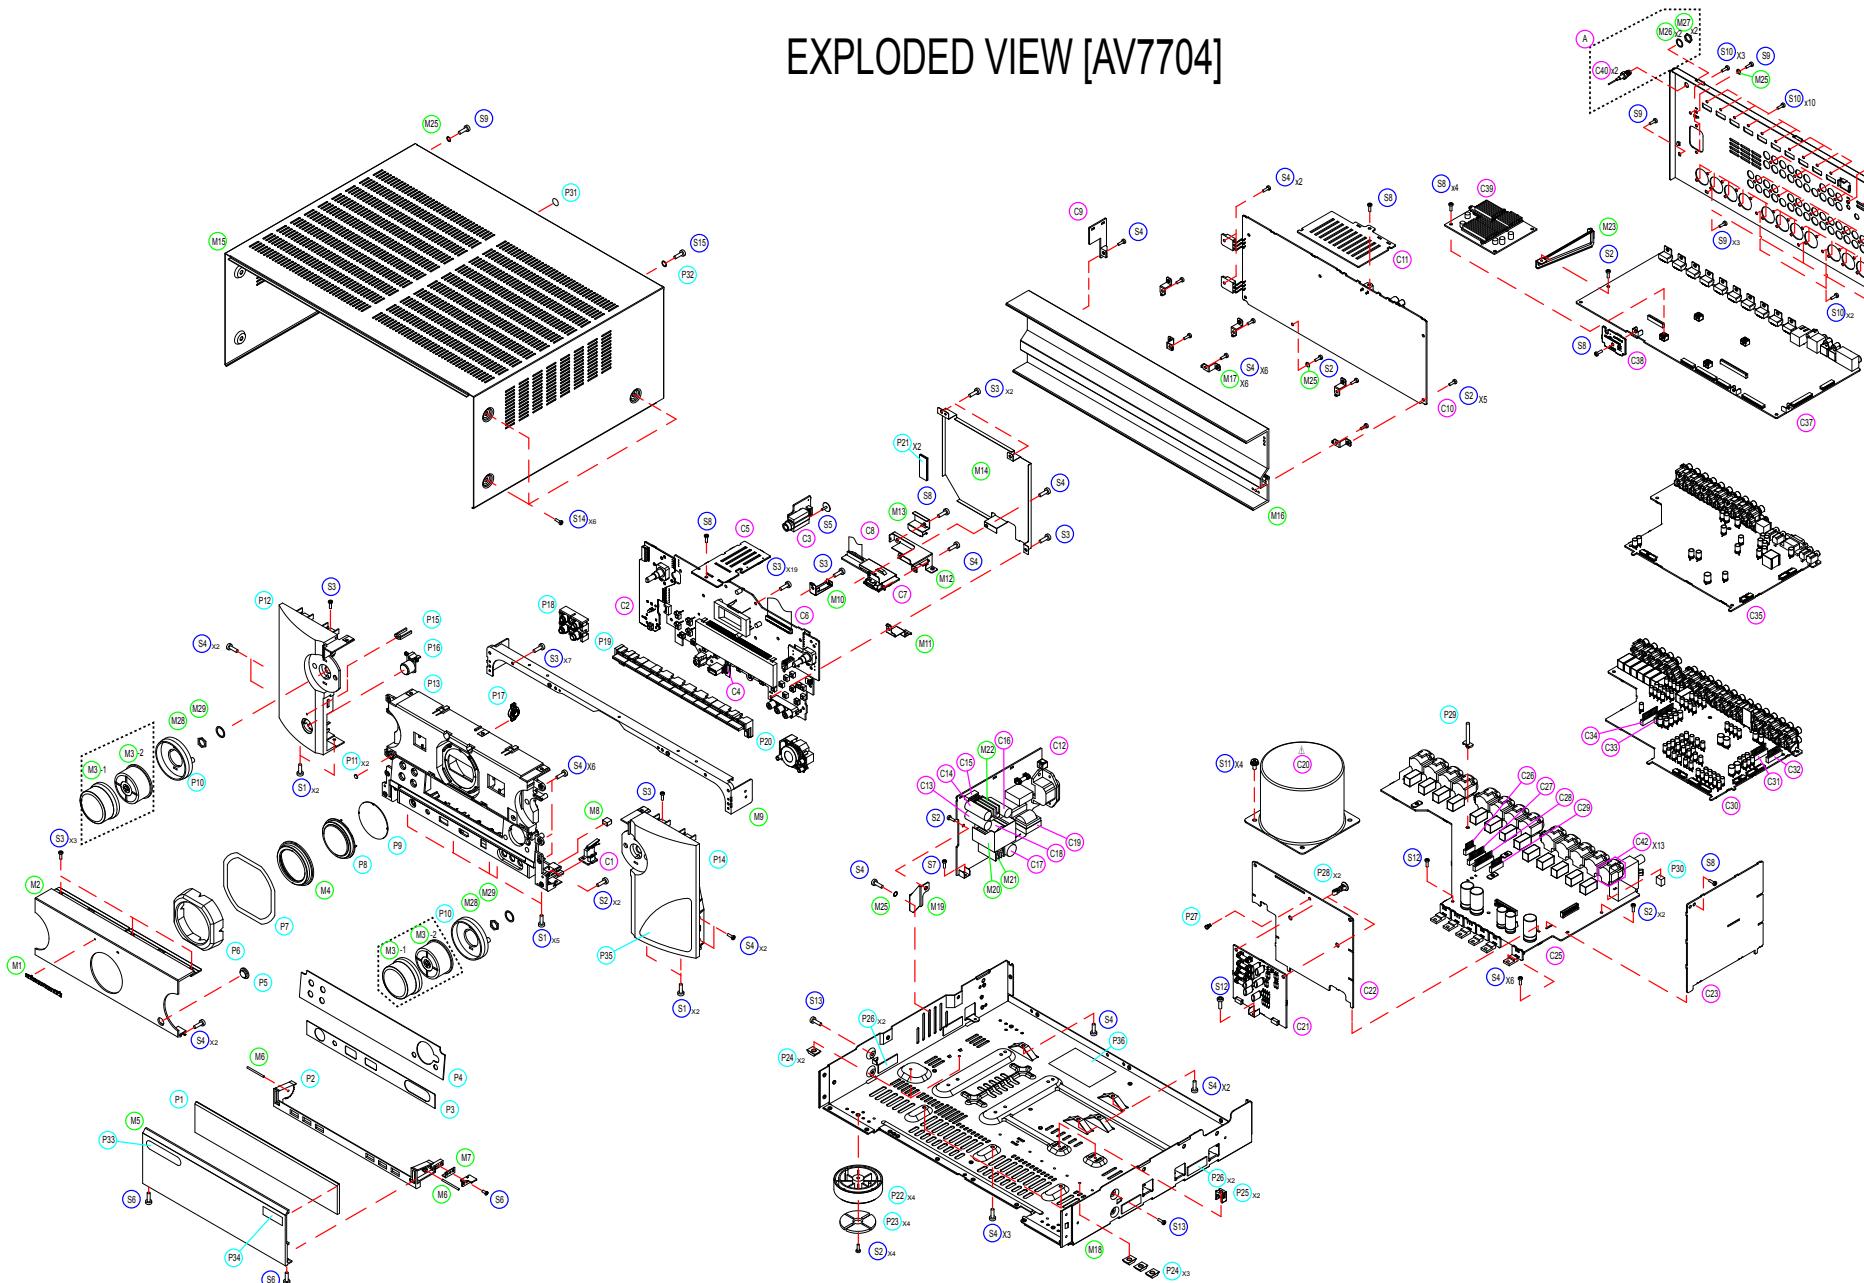

**WARNING:**  
Parts marked with this symbol  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

# PACKING VIEW

Parts List : <http://dmedia.dmglobal.com/Document/DocumentDetails/23567>

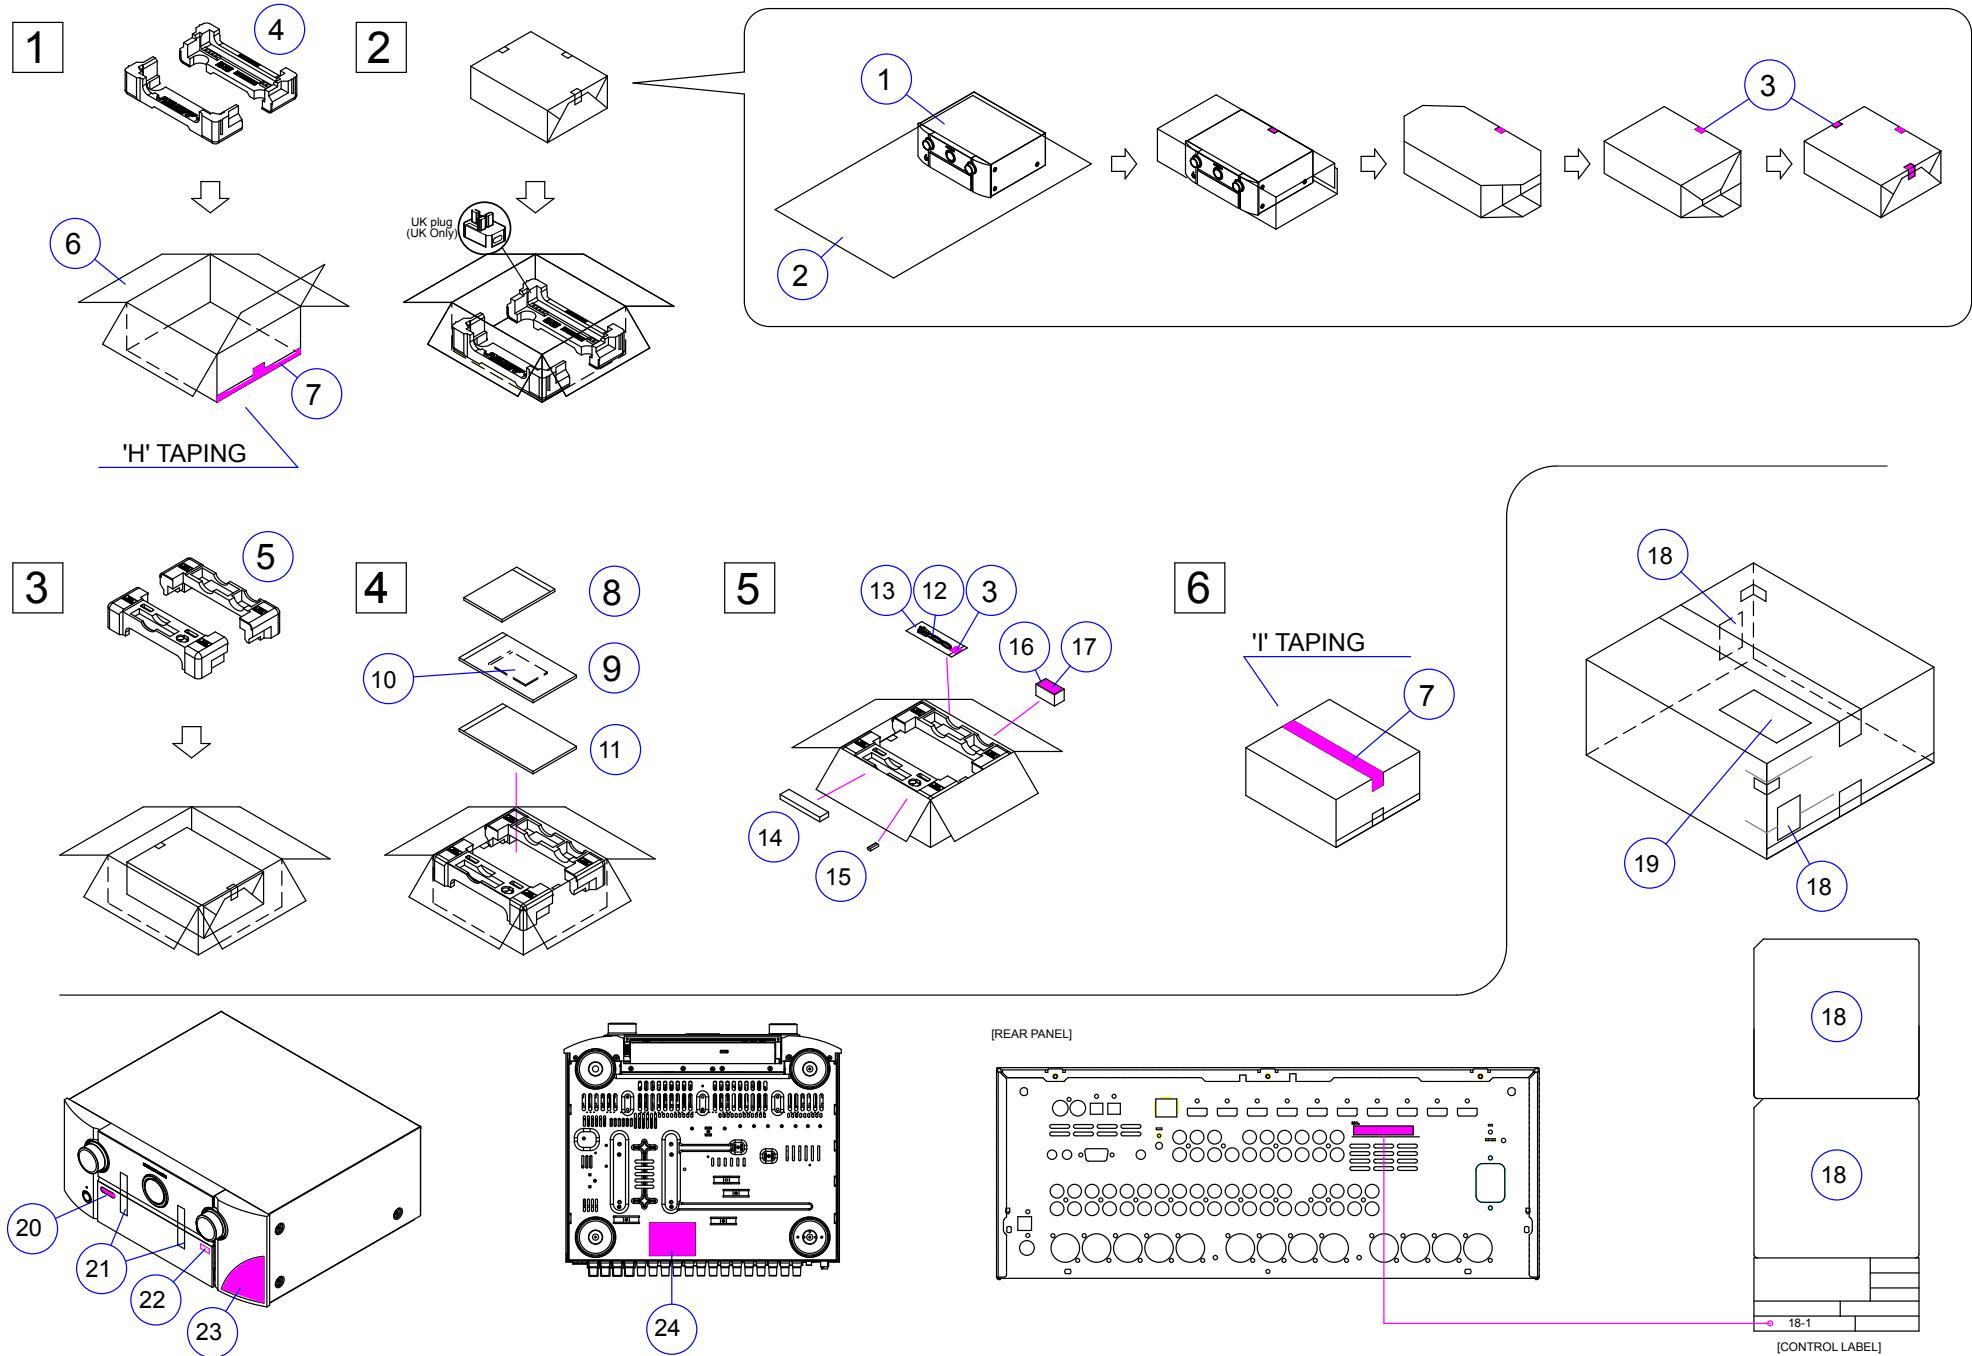

# REPAIR INFORMATION

## TROUBLE SHOOTING

- [1. POWER](#)
- [2. Analog video](#)
- [3. HDMI/DVI](#)
- [4. AUDIO](#)
- [5. Network / Bluetooth / USB](#)
- [6. SMPS](#)

## HDMI "Rx/Tx" Failure Detection

- [1. Prior checking](#)
- [2. Preparations for checking HDMI Switcher reception/transmission register](#)
- [3. Starting detecting the point of failure](#)
- [4. Device implementation location](#)

## CLOCK FLOW & WAVE FORM IN DIGITAL BLOCK

## SPECIAL MODE

- [Special mode setting button](#)
- [1. Version Display Mode](#)
- [2. PANEL / REMOTE LOCK Selection Mode](#)
- [3-1. Selecting the Mode for Service-related](#)
- [3-2. 232C Standby Clear Mode](#)
- [3-3. Operation Info Mode](#)
- [3-4. TUNER STEP mode \(U, N only\)](#)
- [4. Protection Pass Mode](#)
- [5. Network Initialization Mode](#)
- [6. Clearing the Operation Info](#)
- [7. Log Capture feature](#)

## AUDIO CHECK PASS

## DIAGNOSTIC MODE

- [Service Path Check Mode](#)
- [DIAGNOSTIC PATH DIAGRAM](#)

## JIG FOR SERVICING

Caution in  
servicing

Electrical

Mechanical


Repair Information

Updating


# TROUBLE SHOOTING

## 1. POWER

### 1.1. The unit does not power on

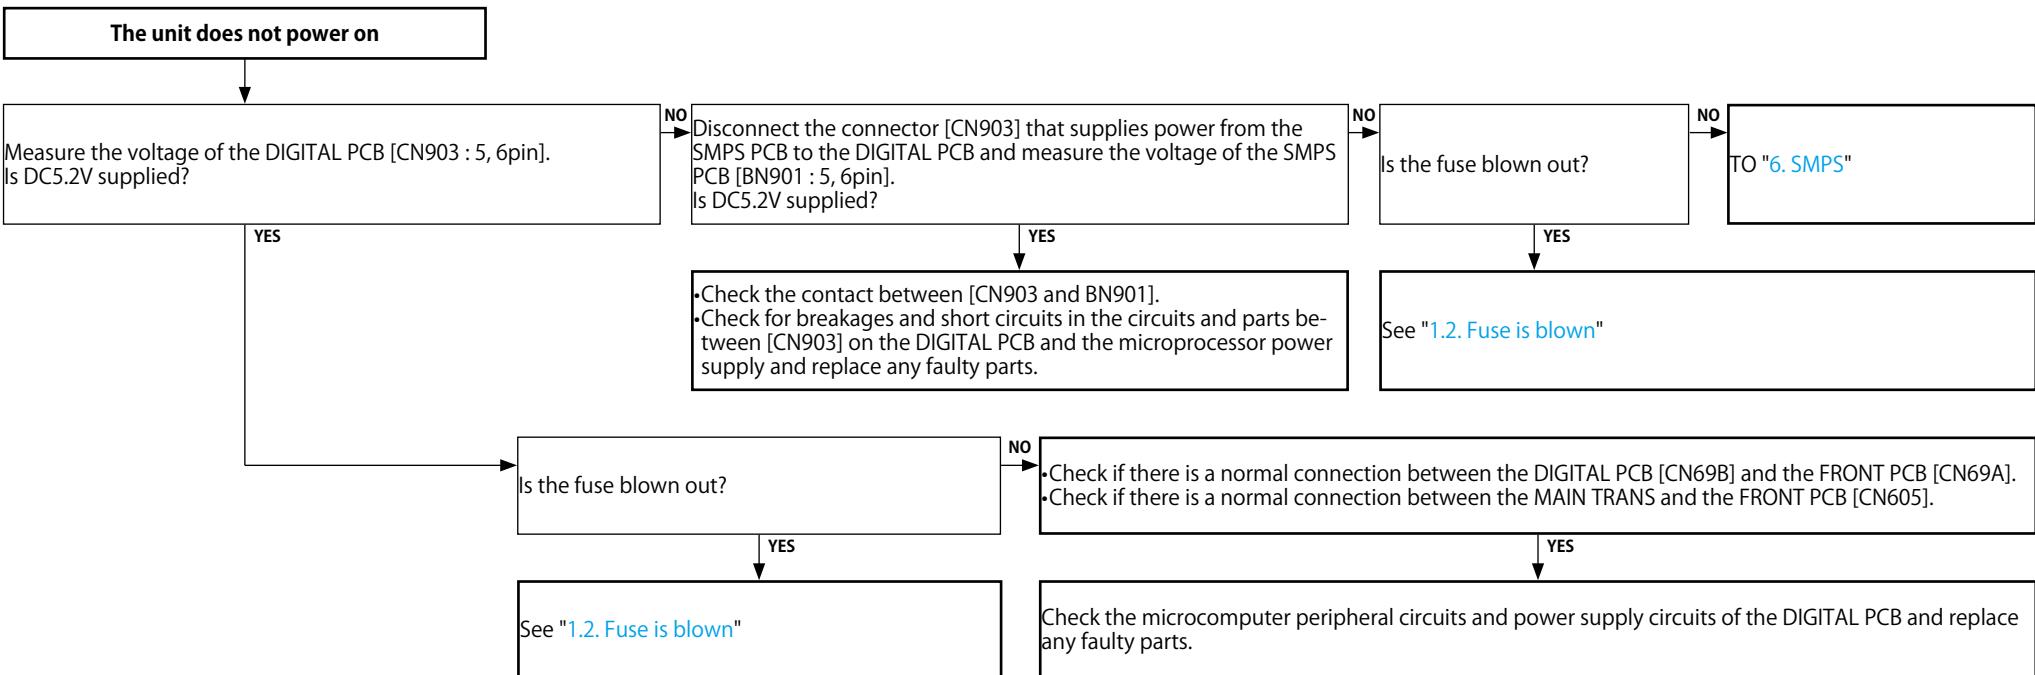



### 1.2. Fuse is blown

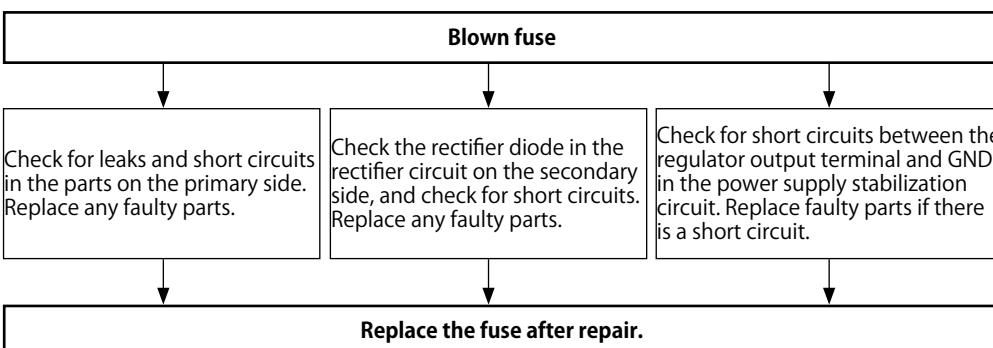


## 2. Analog video




Perform the operation below beforehand.

- ※ Check it whether connection cable and Monitor are normal.
- ※ VIDEO Convert is set to ON.
- ※ Setting as follows.  
V : SAT  
COMPONENT : SAT

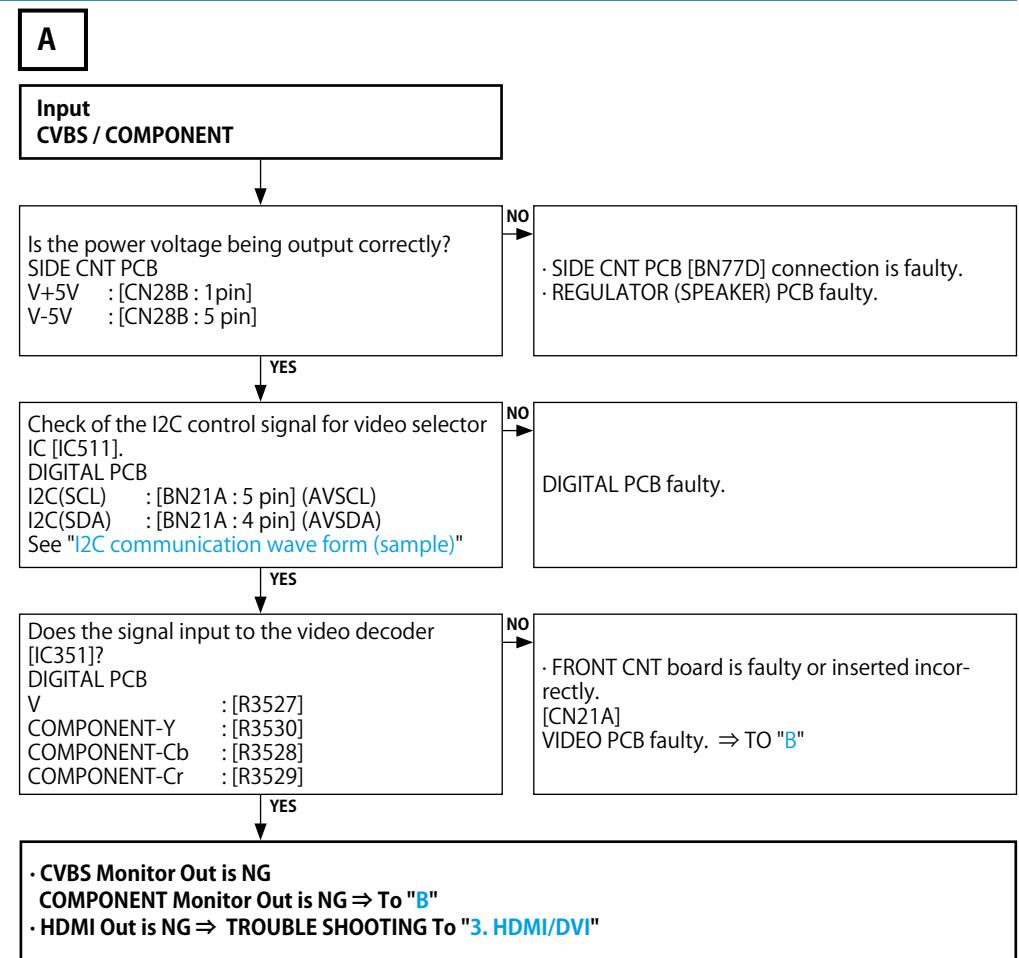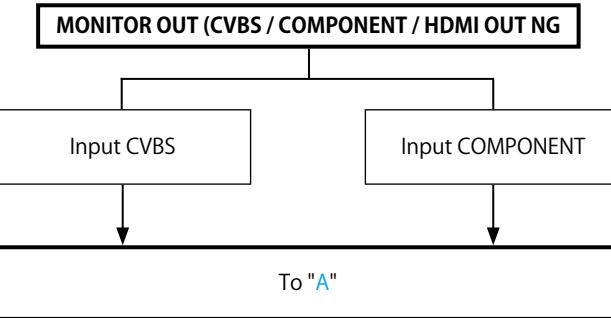


I2C communication wave form (sample)

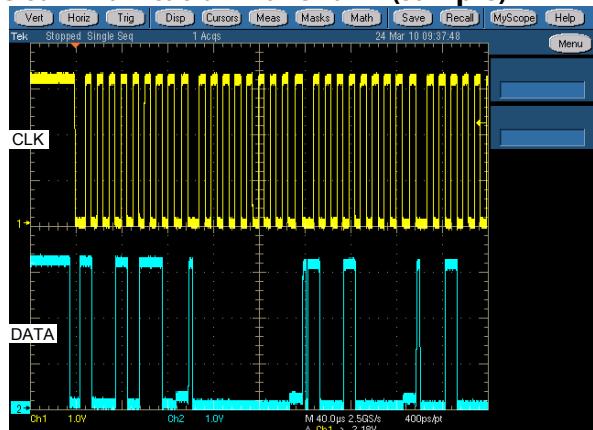


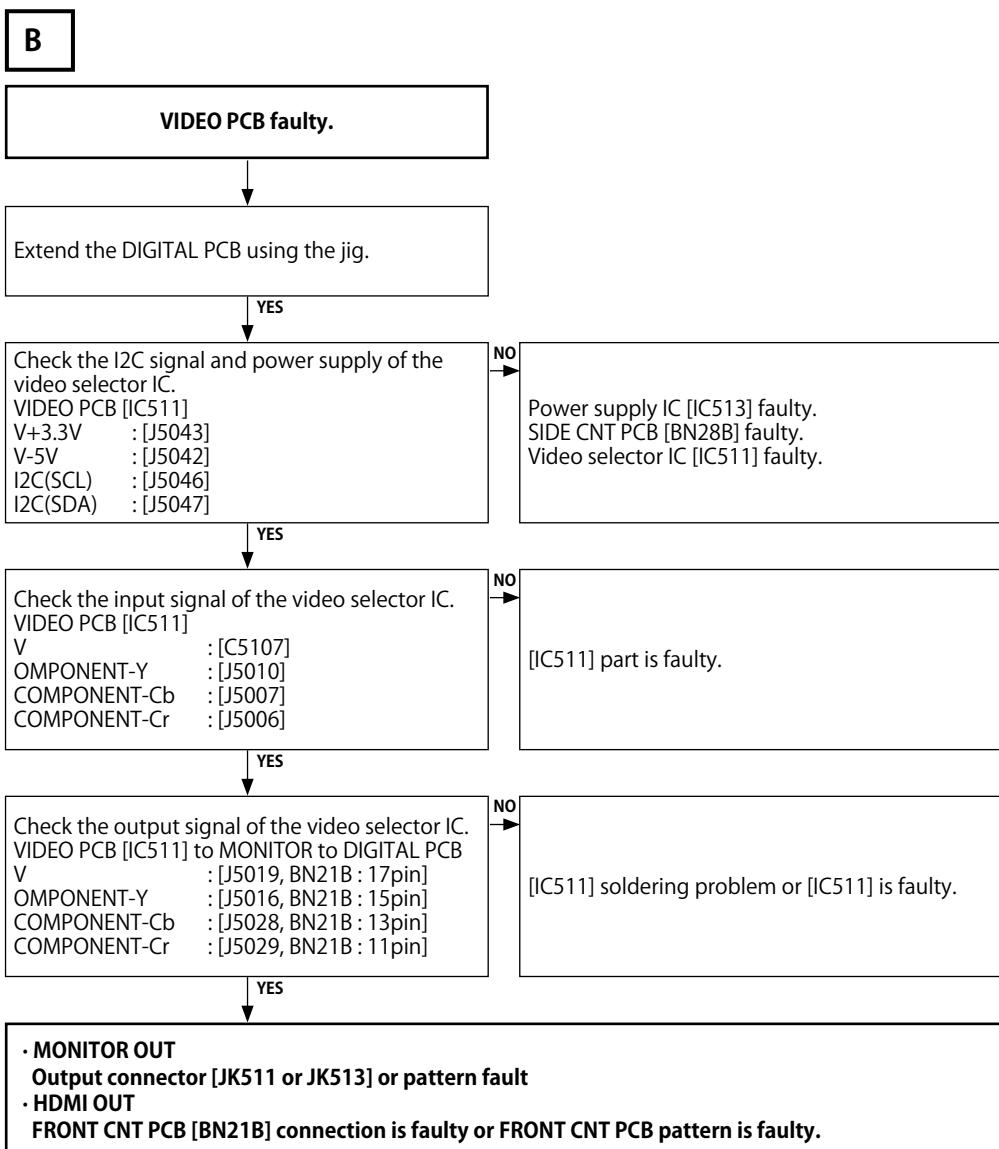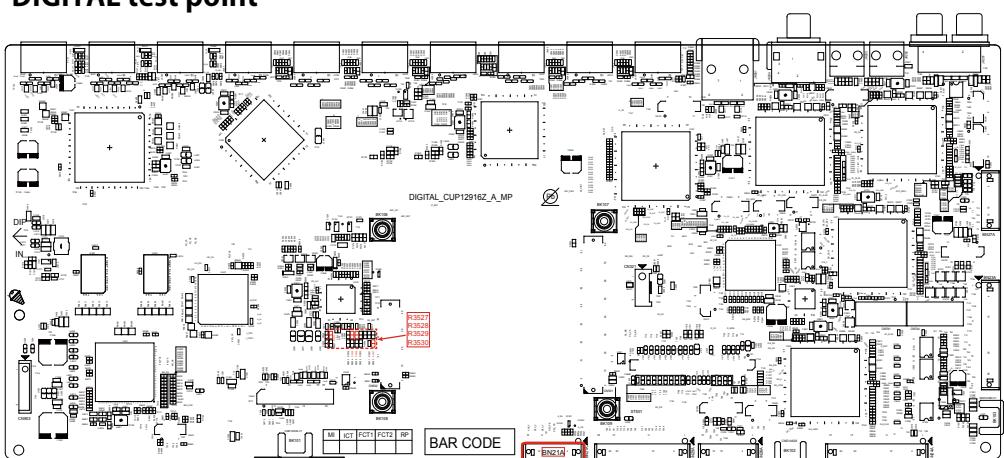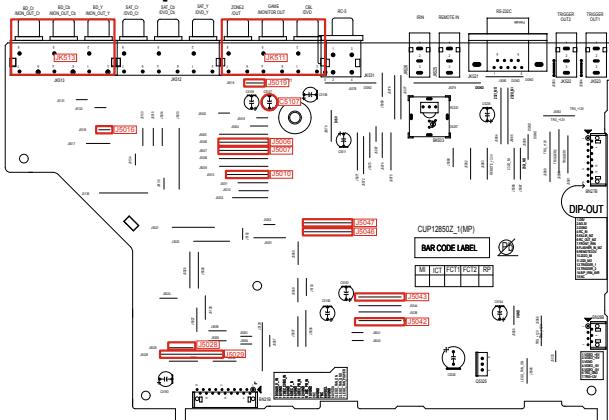**DIGITAL test point****VIDEO test point**

### 3. HDMI/DVI


#### 3.1. No picture or sound is output (HDMI to HDMI)

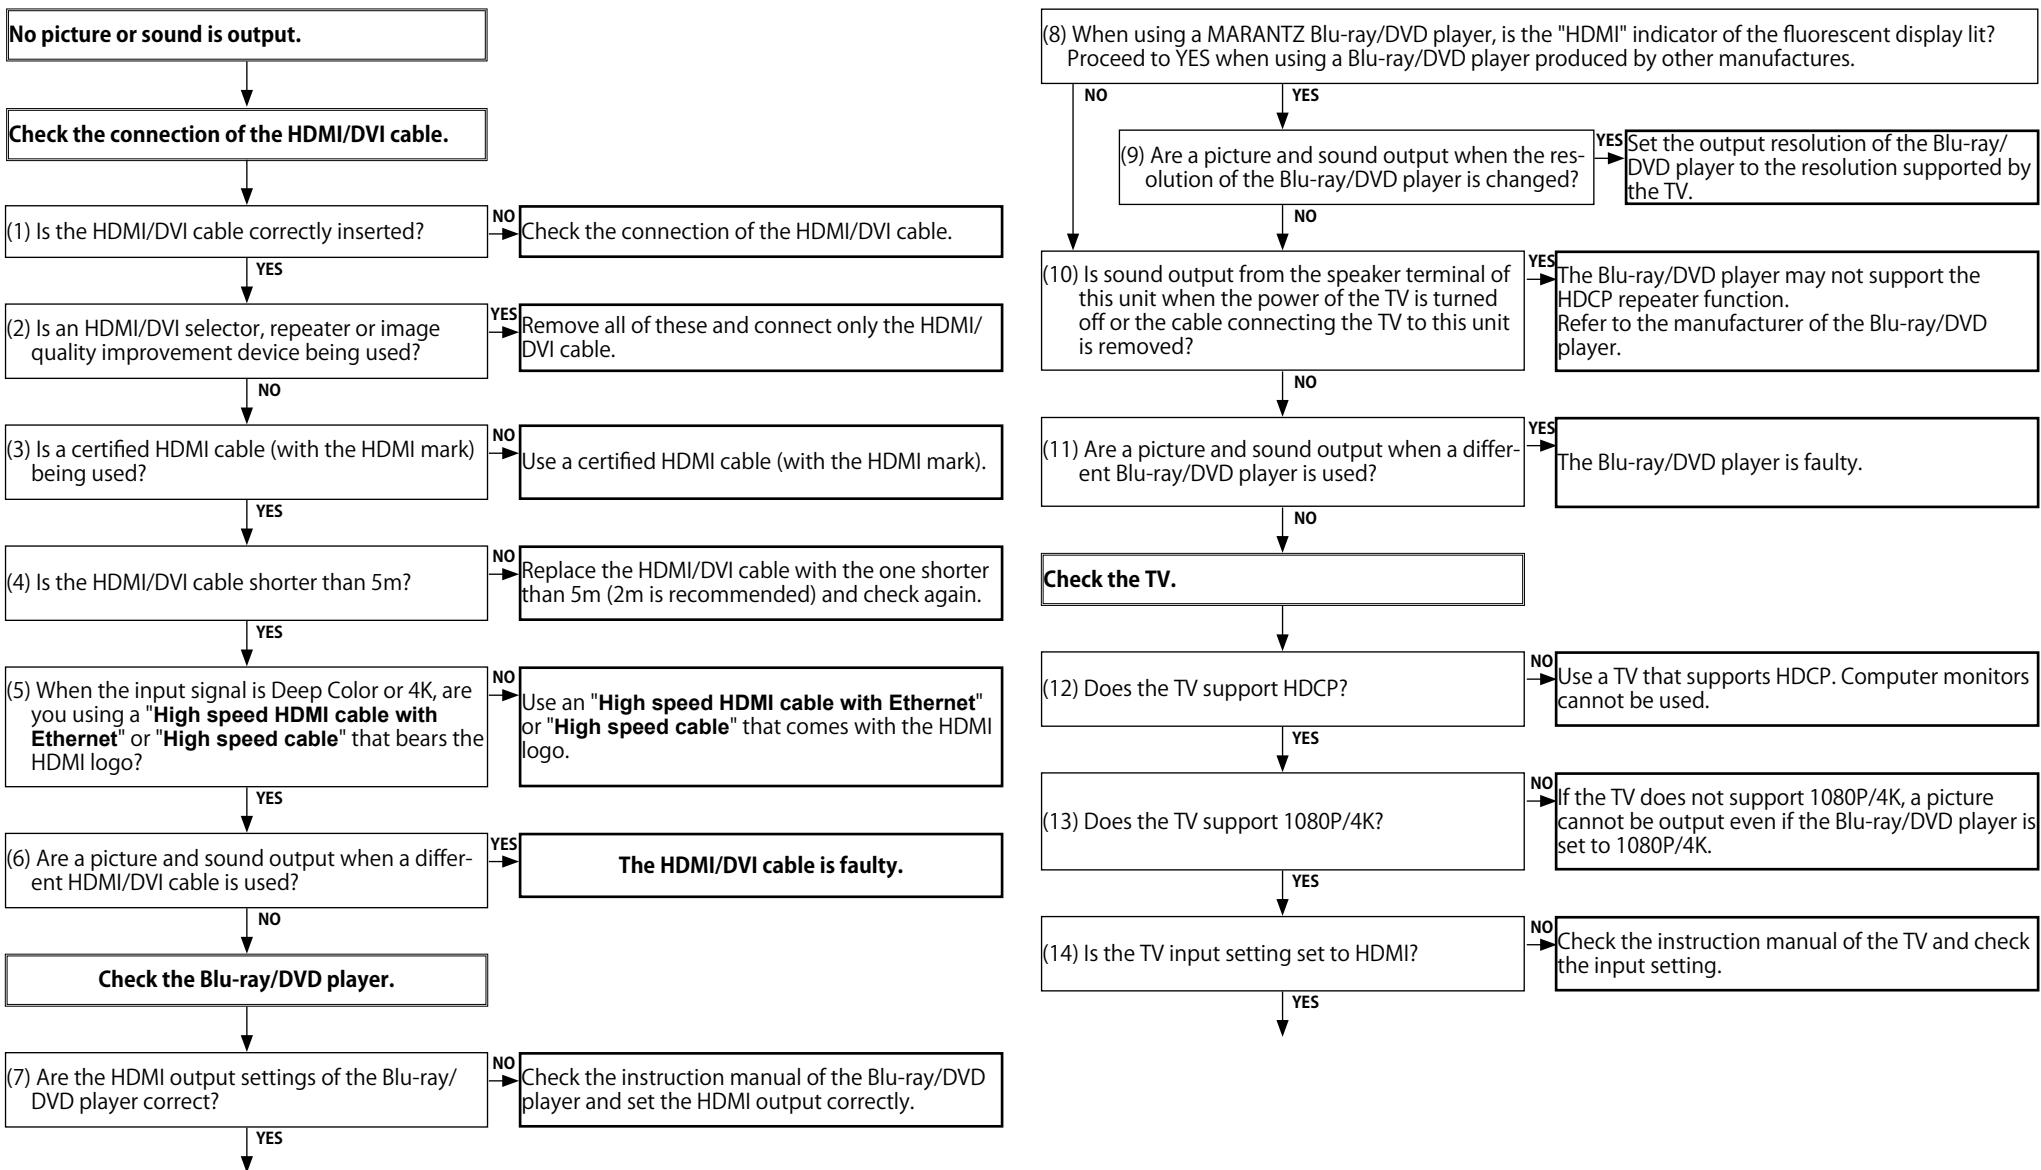

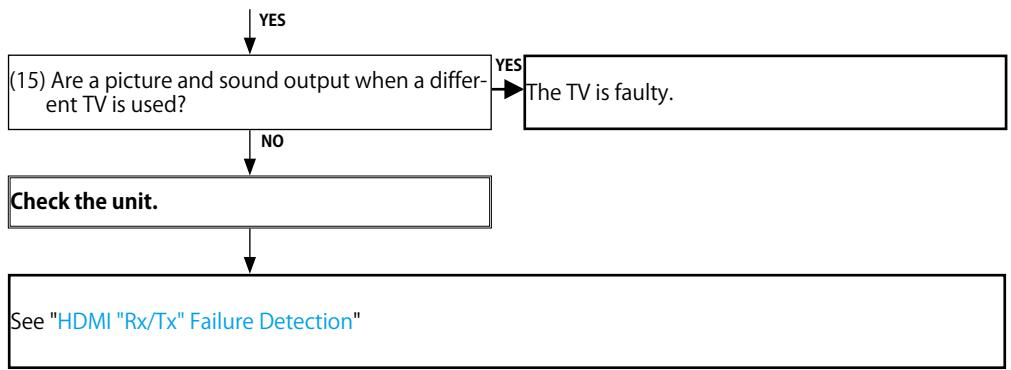


## 4. AUDIO

### 4.1. AUDIO CHECK

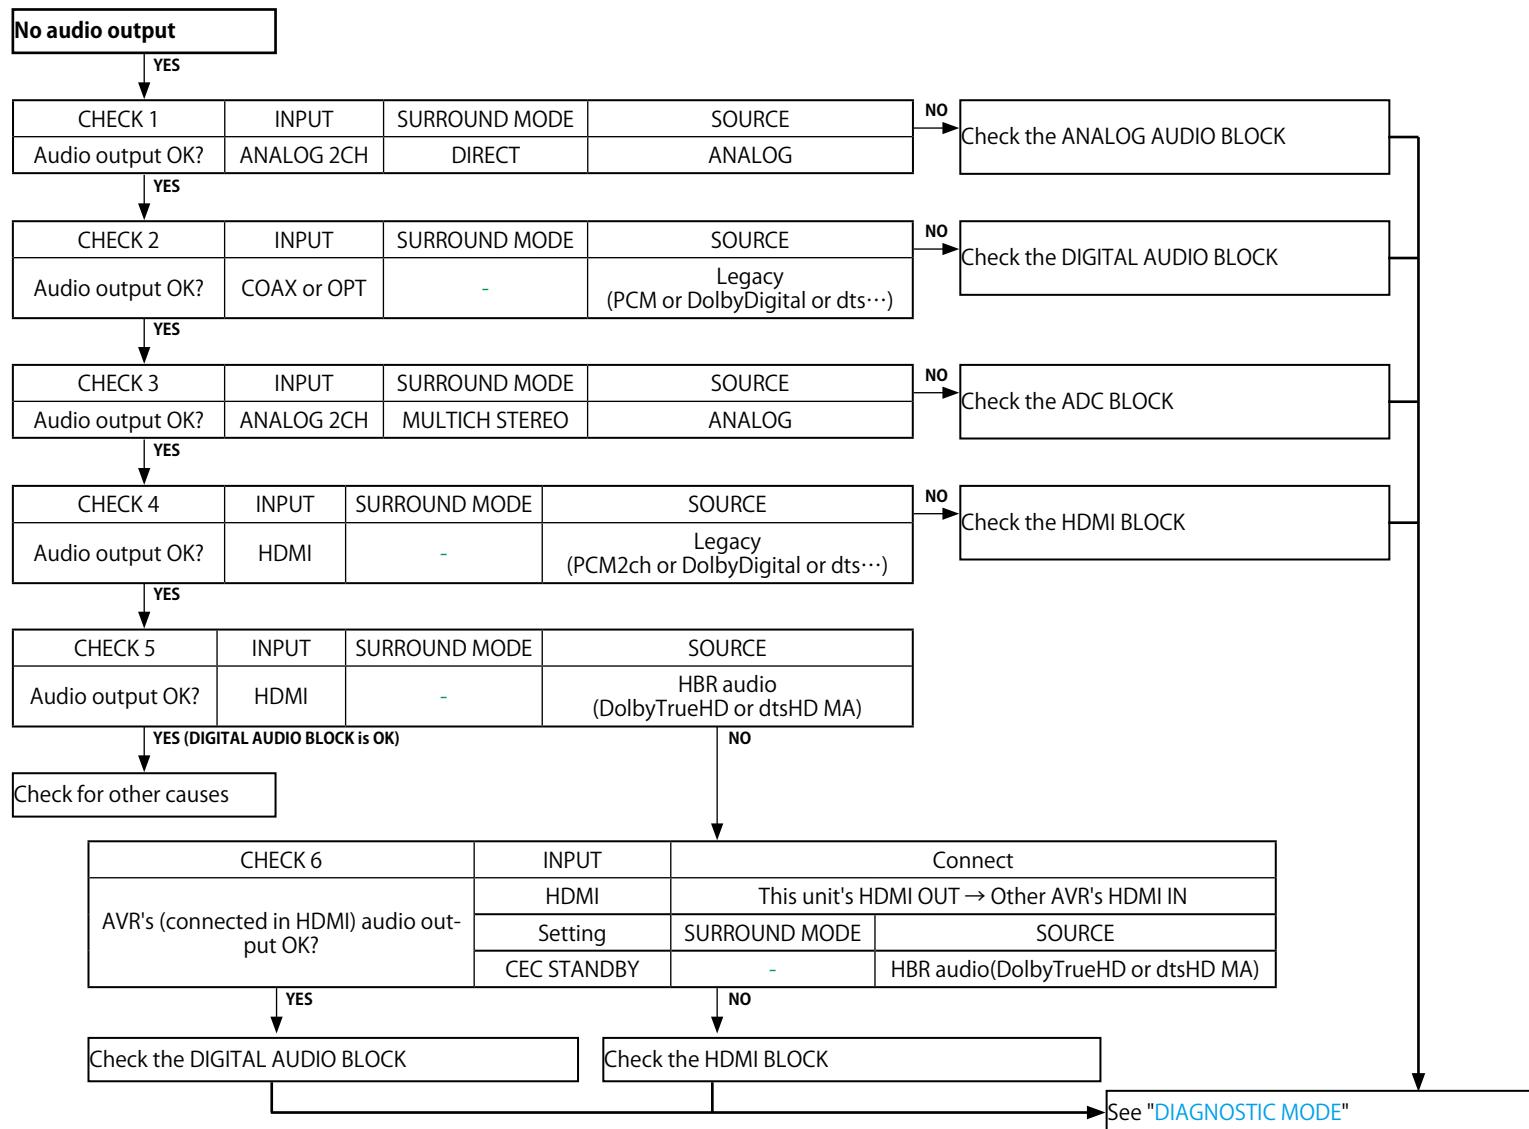


## 4.2. Analog audio

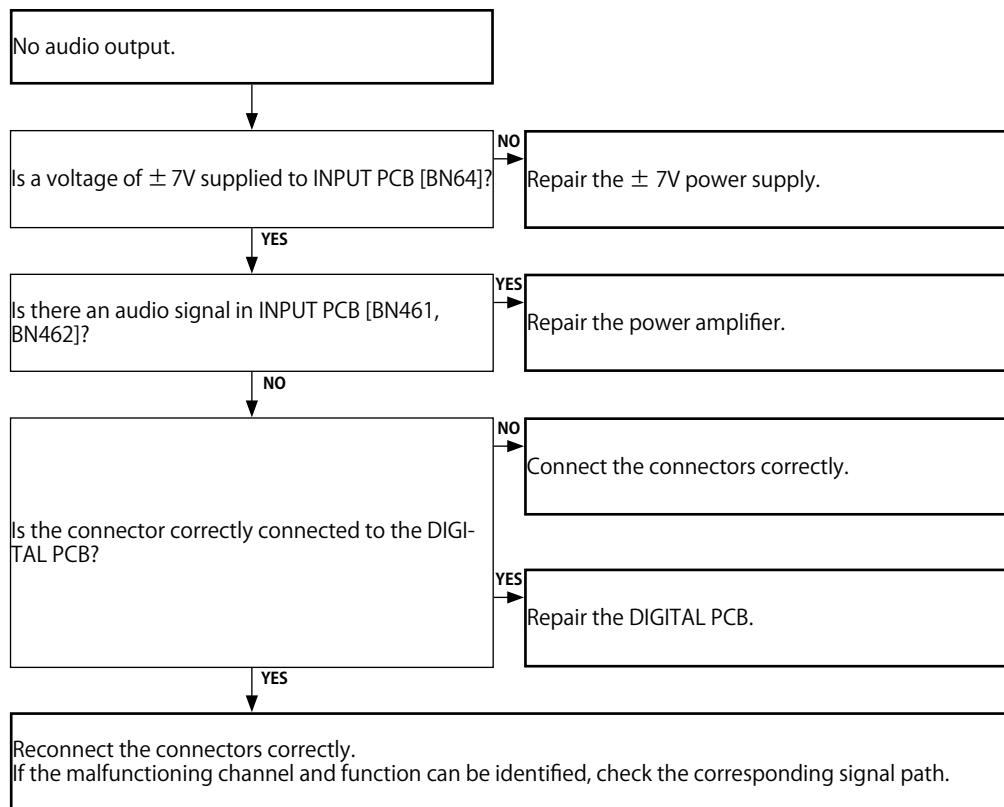


## 5. Network / Bluetooth / USB

### 5.1. Cannot connect to the network

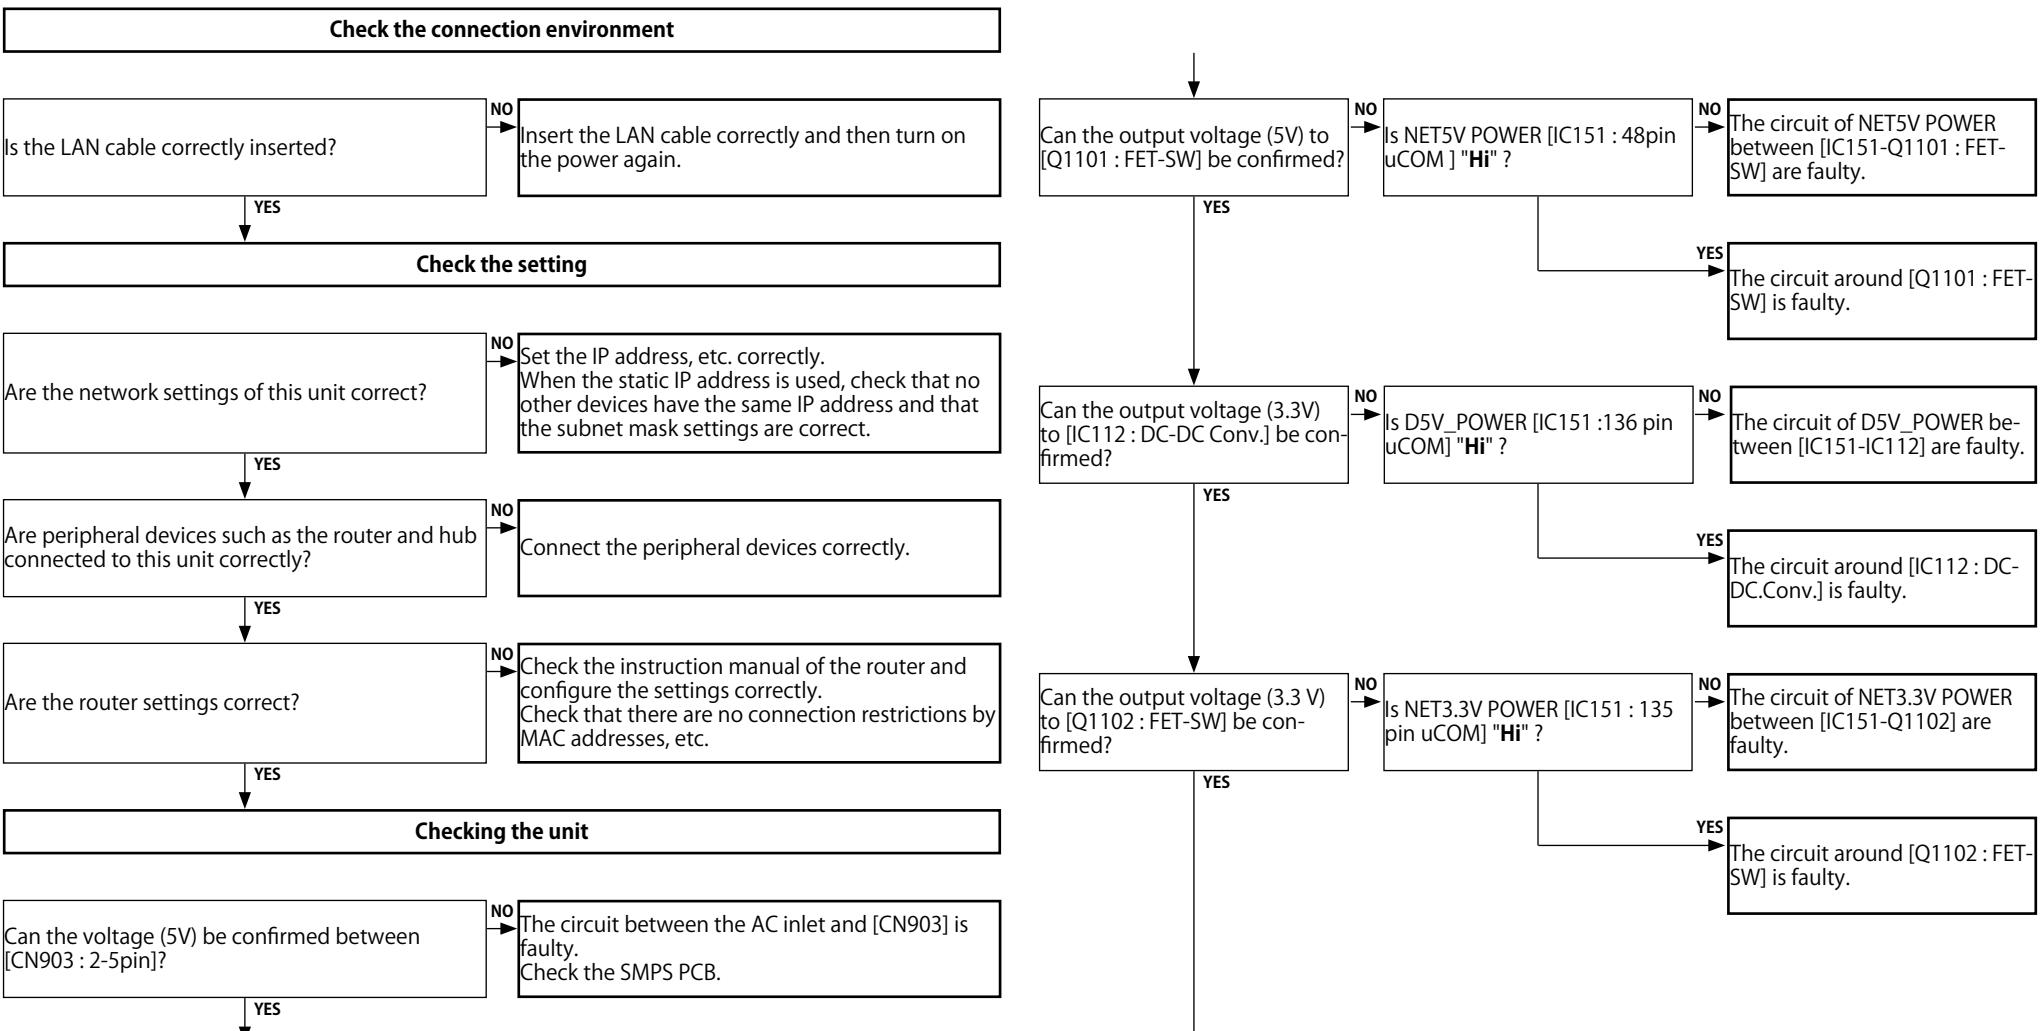


Go to next page.


## 5.2. Cannot establish a Bluetooth connection

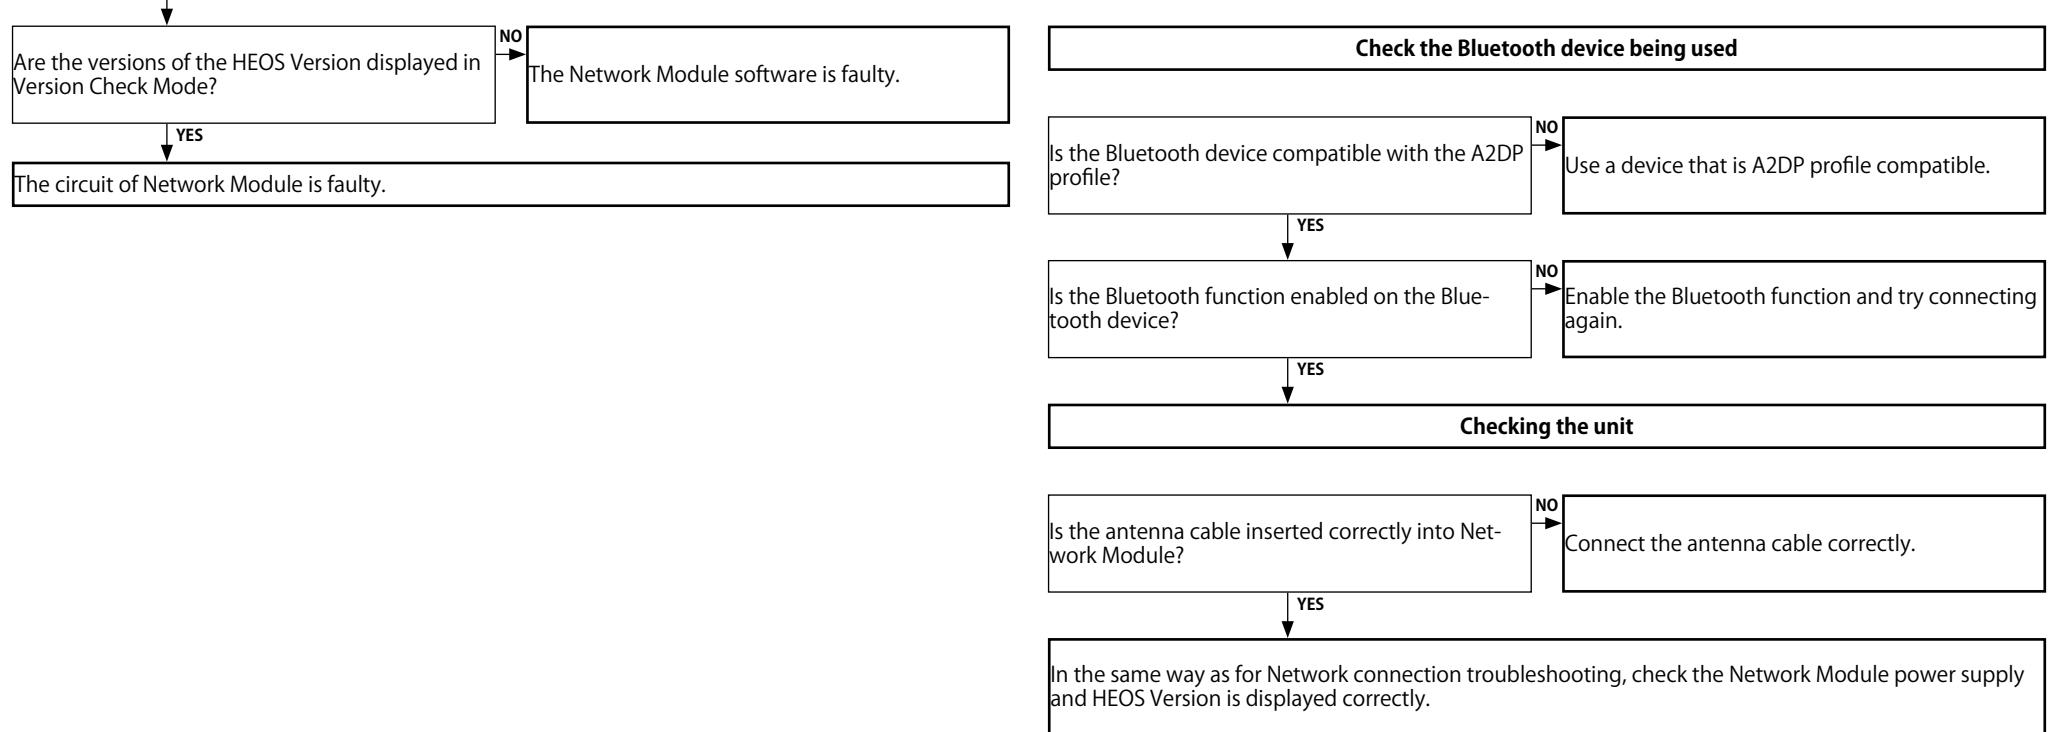


### 5.3. Cannot recognize the connected USB device

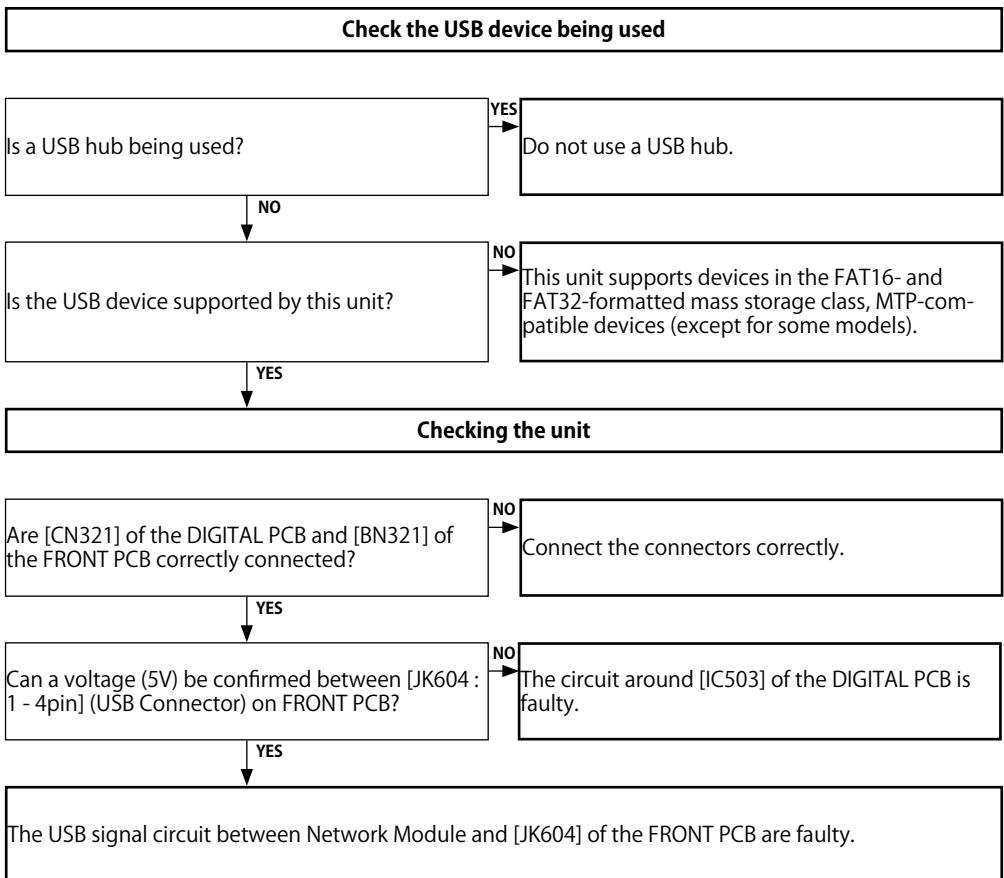


### 5.4. No picture or sound is output

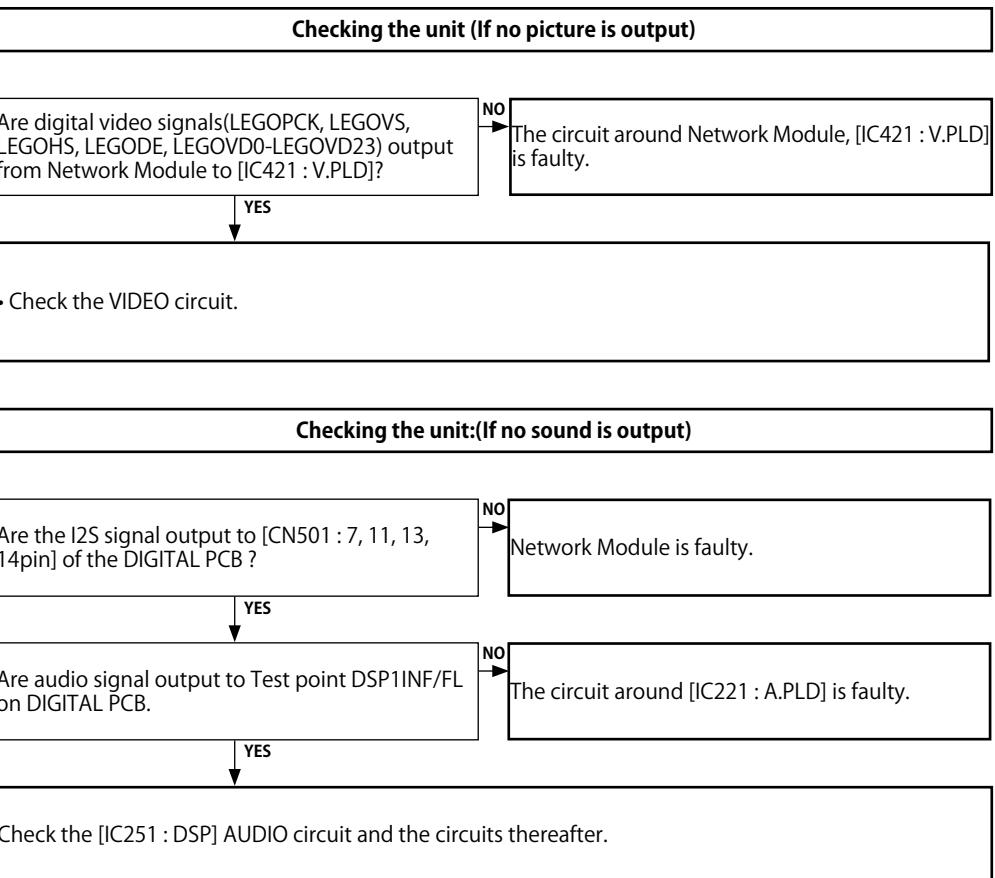


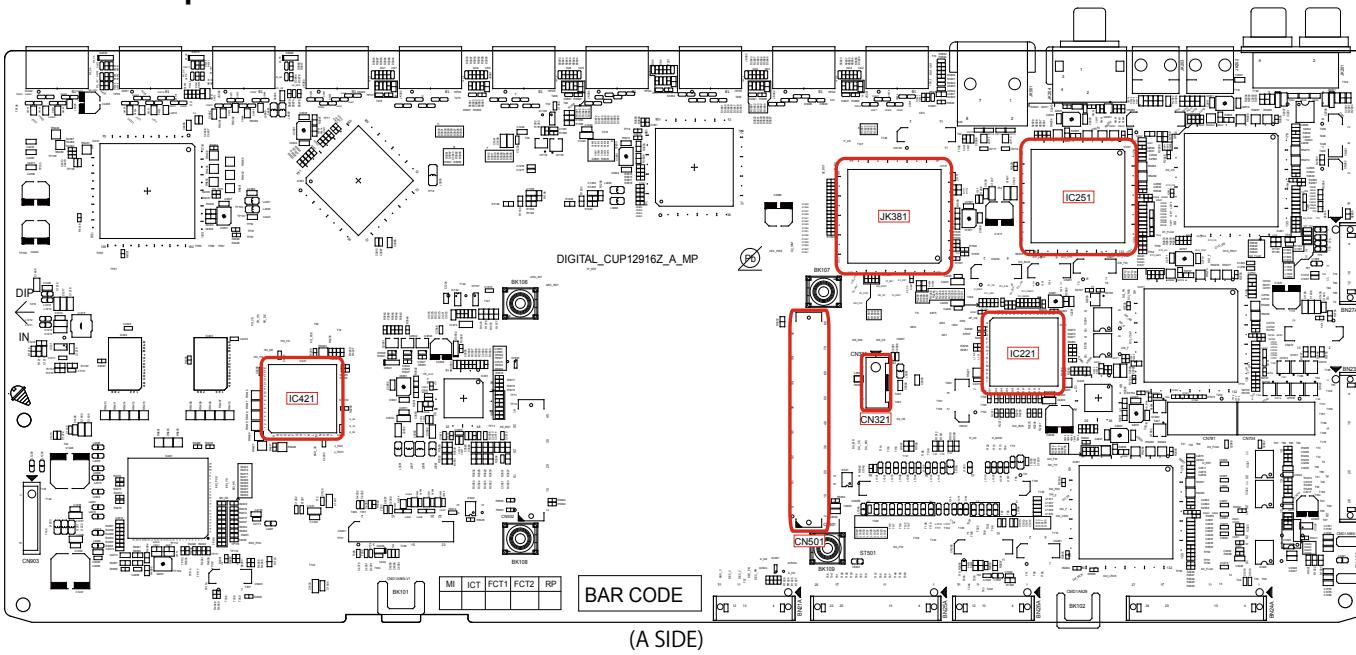**DIGITAL test point**

(A SIDE)

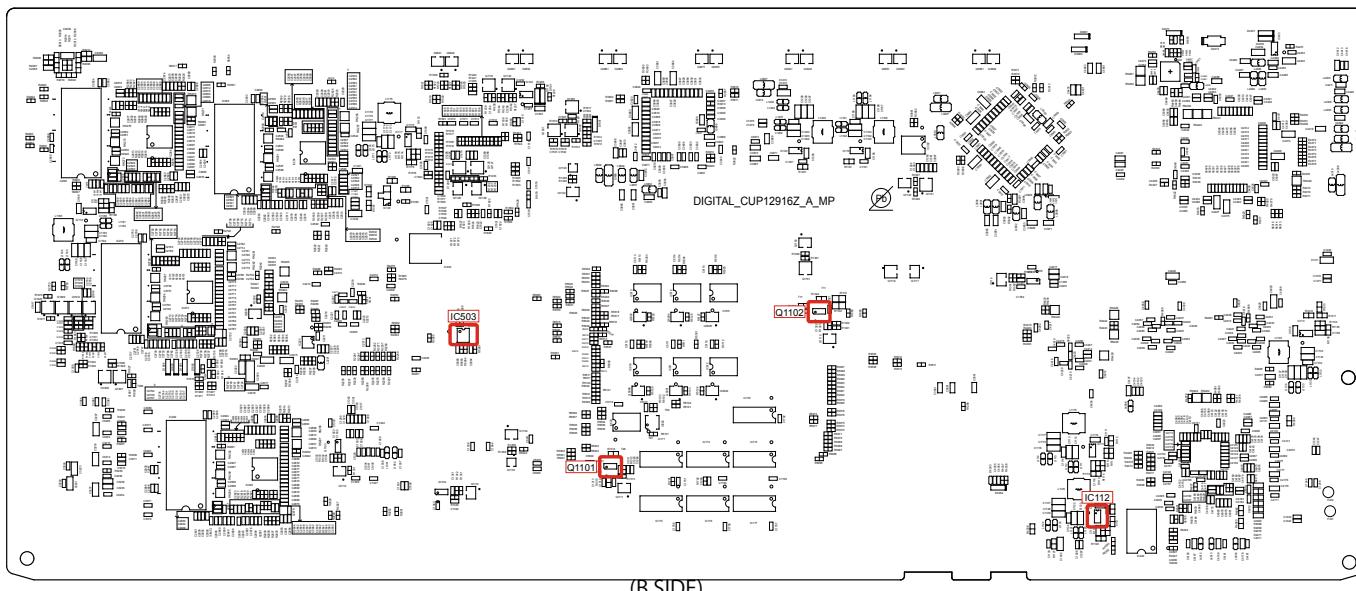


(B SIDE)

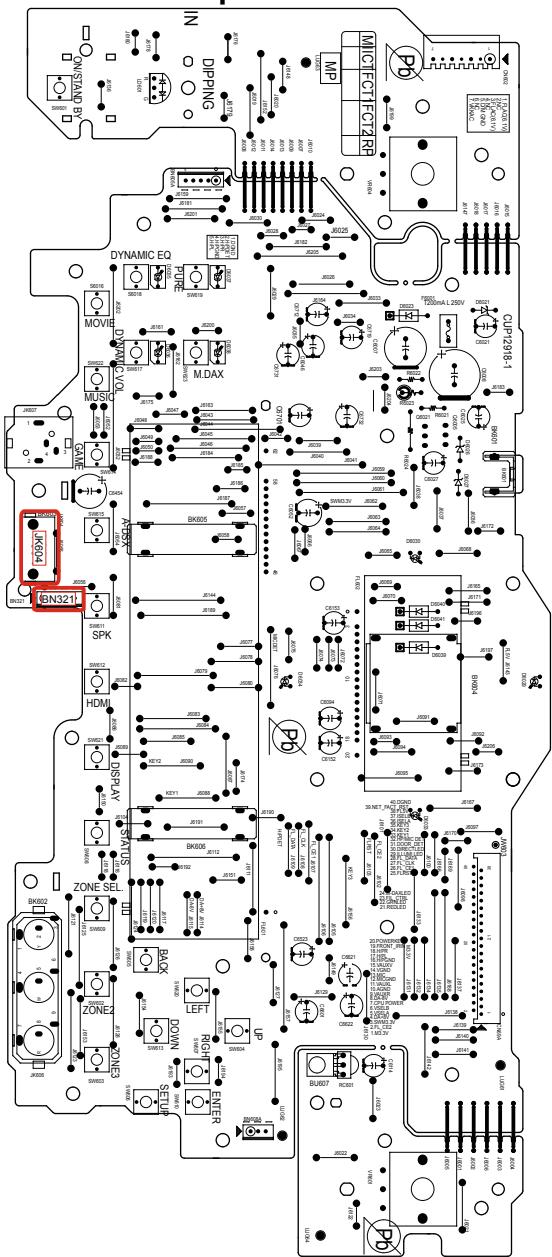
**USB test point**

(A SIDE)


## 6. SMPS

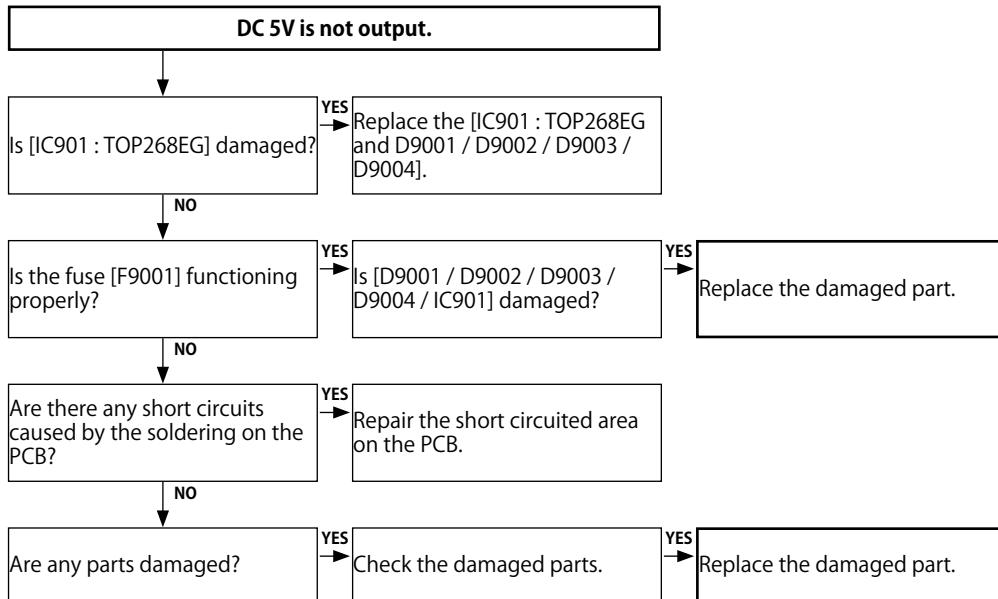


## Operation waveform for each part

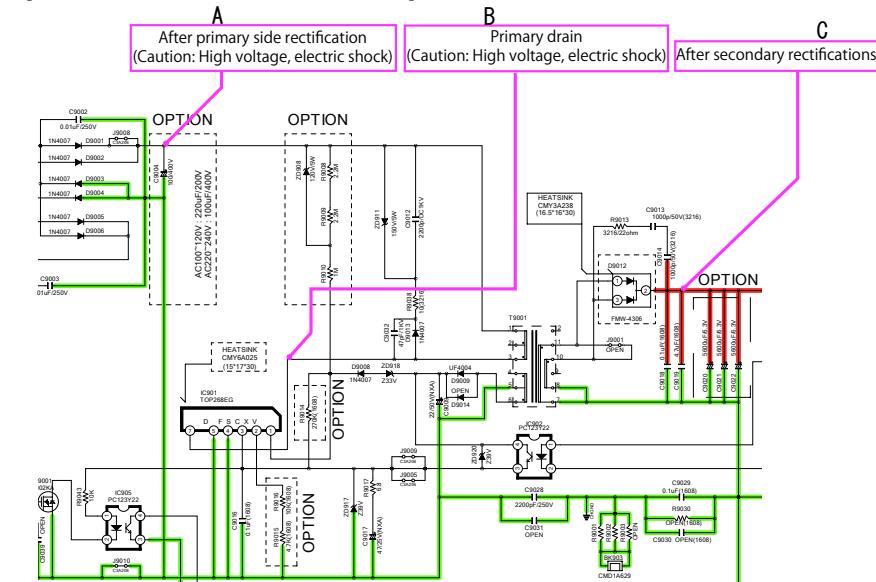

SMPS unit (Unloaded)

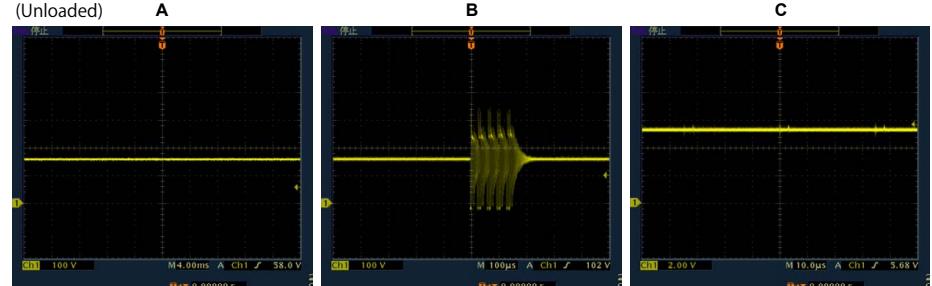

Set

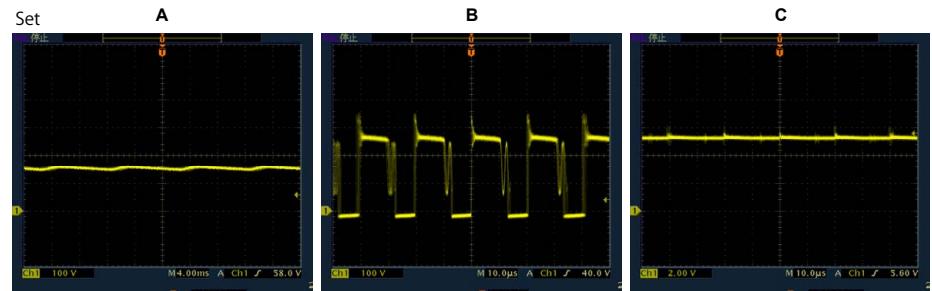


# HDMI "Rx/Tx" Failure Detection

## 1. Prior checking

Check item(0).: Checking the HDMI connector  
Checking the condition of the HDMI pin (rear/front).



OK

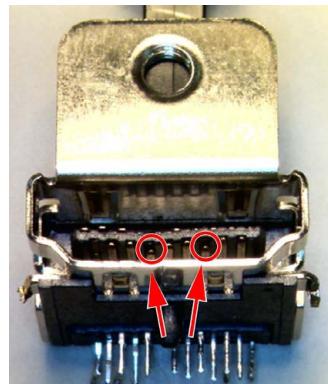

NG

Check for deformed pins.

There are deformed pins.

Replace the HDMI connector.

None of the pins are deformed.

Check by following the flow chart for "[3. Starting detecting the point of failure](#)".

NOTE :

After checking troubleshooting "[3. HDMI/DVI](#)", check "[3. Starting detecting the point of failure](#)".

Caution in servicing

Electrical

Mechanical

Repair Information

Updating

## 2. Preparations for checking HDMI Switcher reception/transmission register

### 2-1. Necessary devices

- 1) Check the product settings.
- 2-a) Player with an HDMI terminal
- 2-b) TV with an HDMI terminal (\* NOTE : Do not use a computer monitor.)
- 3) Windows PC
- 4) Serial communication software "Termite.exe"  
(Download the software from [http://www.comphouse.com/software\\_termite.htm](http://www.comphouse.com/software_termite.htm) and install it.)
- 5) HDMI cable
- 6) RS-232C Straight cable
- 7) oscilloscope

### 2-2. Device Connection Method

Connect the TV and the AVR to the player using an HDMI cable and connect the AVR to the PC through an RS-232C cable as shown in Figure 1.

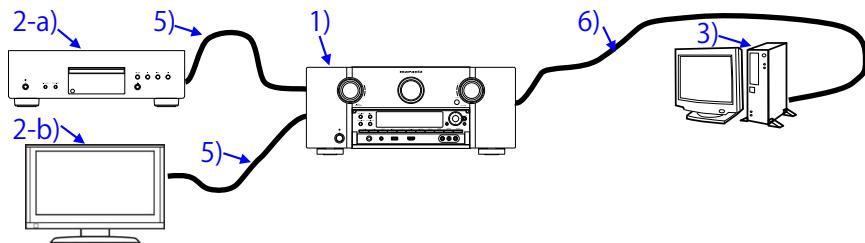


Figure 1. Device Connection Method

### 2-3. Device configuration method

PC settings : Execute the serial communication program, Termite.exe.

After executing Termite.exe, click [Settings].

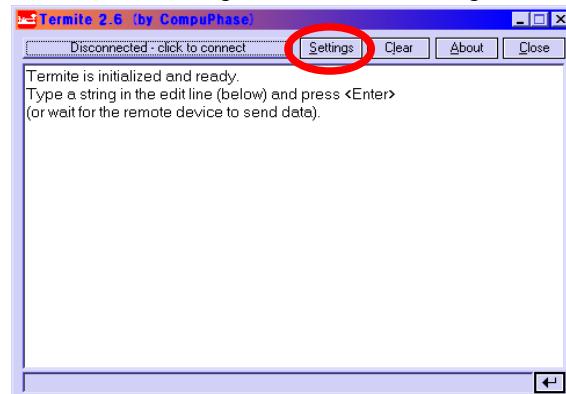


Figure 2. Screen After Executing Termite.exe

The serial port setup screen will be displayed.

Configure the settings as shown in Figure 3 and click the "OK" button.

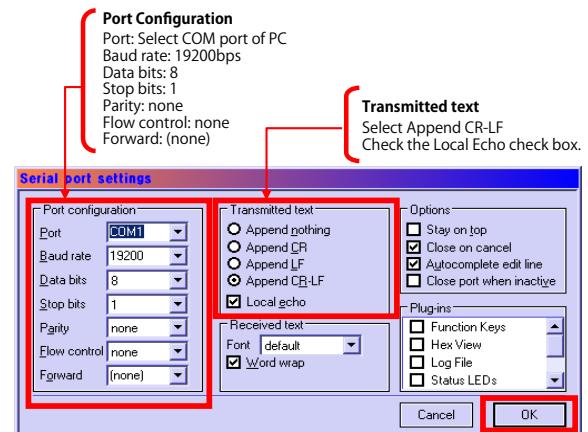


Figure 3. Serial Port Setup Screen

Click the [click to connect] button to start communication.

After a connection is established successfully, the display of the button name will change as shown in Figure 4.

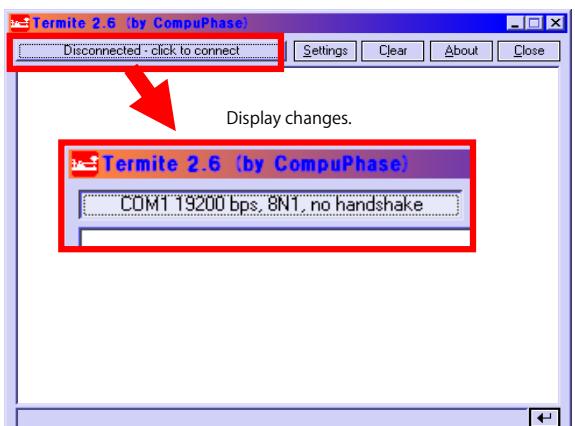


Figure 4. Change of the Display of the Communication Start Button Name

TV settings : Switch to the HDMI input in the AVR connection.

Player settings : Turn the unit power on and configure it to play disks.

AVR settings : While the power is On, hold down buttons "DIMMER" and "STATUS" for at least 3 seconds.

(Continue to press and hold the buttons until all segments of the FLD volume illuminate.)

※ When the power is turned on after initialization, "Setup Assistant" will be displayed.

After exiting "Setup Assistant" execute the above.

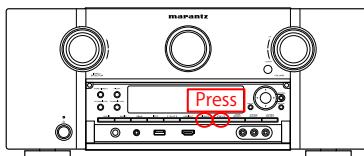


Figure 6. AVR settings

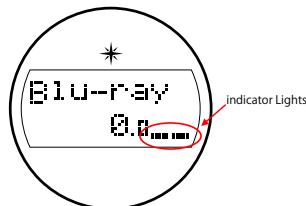


Figure 6. FLD Display When Set

When the settings are correct, the following message will be displayed in the window of Termite.

[00]Start Sub CPU Log Mode

\*\*\*\*

(\*\*\*\* is a version of Sub CPU.)

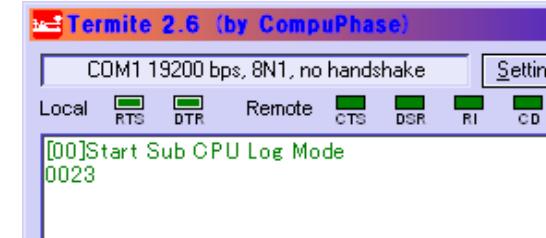


Figure 7. Display of Termite When AVR is Set

The setup is now complete.

Method for sending commands

Enter the command in the transmission command entry section, click the [Send] button and send the command.

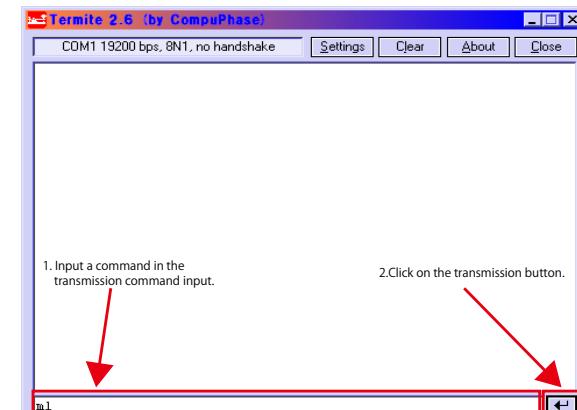


Figure 8. Method for Sending Termite Commands

### 3. Starting detecting the point of failure

#### Check item(1).

Check the power supply status and communication status with the CPU of each device.  
Start in HDMI Diagnostics mode and follow the procedures below.

#### (1) Start in HDMI Diagnostics mode

While the power is on, hold down buttons "CURSOR ▲" and "BACK" for at least 3 seconds.

L1	HDMI DIAGNOSTICS
L2	

↓ "HDMI DIAGNOSTICS" is displayed.

When the mode has switched, start Hardware Check.

L1	HDMI DIAGNOSTICS
L2	HardwareCheck...

↓

#### (2-1) Display when an Error Code is displayed.

L1	Err# H1-01
L2	Contact support

Check the Error Code table items.

#### Error Code table

Error Code	Check item No.	Description
H1-01	<a href="#">Check item (6)</a>	Communication Error with HDMI Tx [IC431 : MN864787]
H1-02	<a href="#">Check item (11)</a>	Communication Error with HDMI SW1 [IC391 : MN864788]
H1-03	<a href="#">Check item (14)</a>	Communication Error with HDMI SW2 [IC381 : MN864788]
H1-05	<a href="#">Check item (25)</a>	Communication Error with VIDEO DECODER [IC351 : ADV7180]
H1-06	<a href="#">Check item (17)</a>	Communication Error with GUI IC [IC401 : ADV8003]
H1-08	<a href="#">Check item (26)</a>	Communication Error with DSP1 [IC251 : ADSP21487]
H1-09	<a href="#">Check item (31)</a>	Communication Error with DSP2 [IC261 : ADSP21487]
H1-10	<a href="#">Check item (34)</a>	Communication Error with DSP3 [IC271 : ADSP21487]
H1-11	<a href="#">Check item (39)</a>	Communication Error with DSP4 [IC281 : ADSP21487]
H1-12	<a href="#">Check item (42)</a>	Communication Error with DIR [IC202 : PCM9211]
H1-14	<a href="#">Check item (22)</a>	DDR check Error [IC402, IC403 : A3R12E40DBF-8E]
H1-15	<a href="#">Check item (23)</a>	Communication Error with GUI ROM [IC404 : MX25L12835FMI-10G]
H1-16	<a href="#">Check item (45)</a>	Communication Error with ARC IC [IC432 : SiI9437]


#### (2-2) Display when an Error is not detected.

L1	HDMI DIAGNOSTICS
L2	1 Auto Test


Cancel the mode, and proceed to [check item \(2\)](#).


Canceling the selected mode

Press the power button to exit off the power.

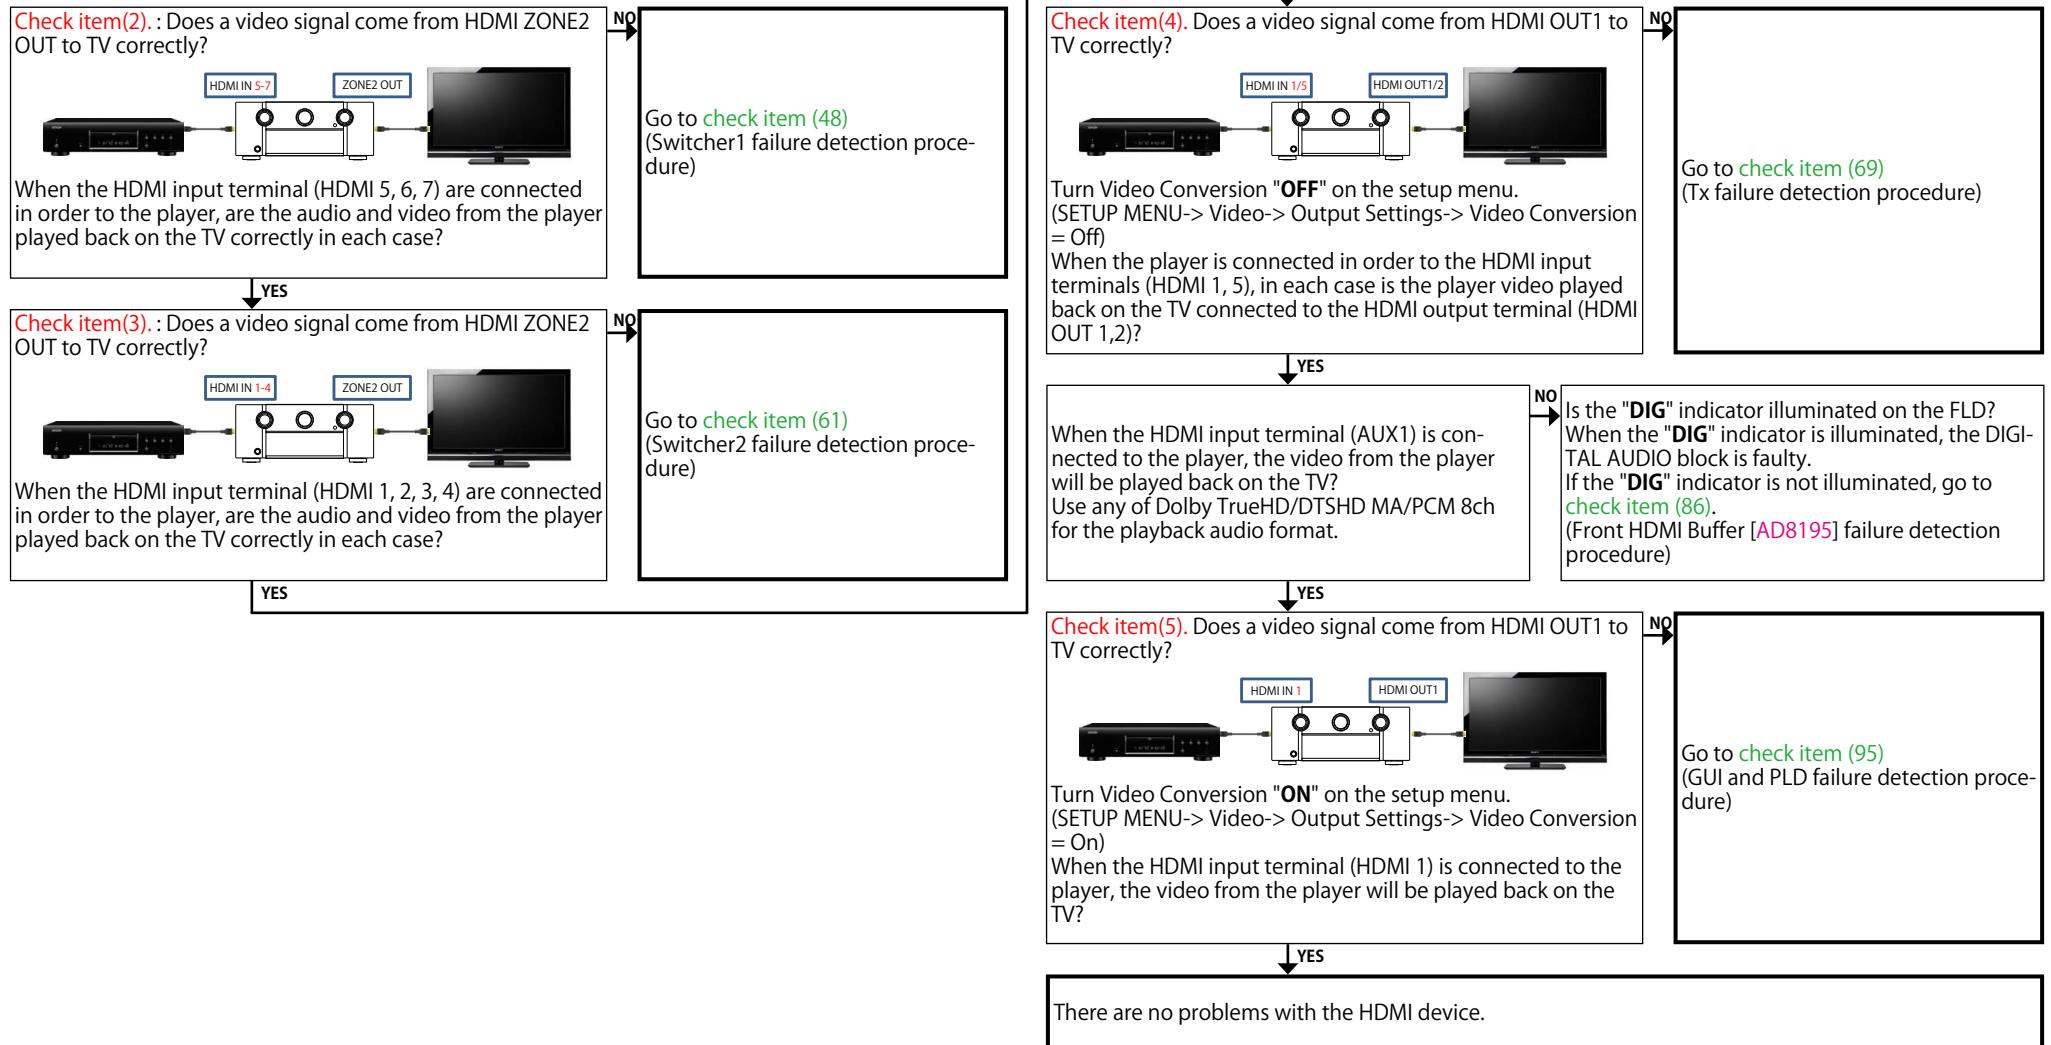


### 3-1. Error Code H1-01 failure detection procedure

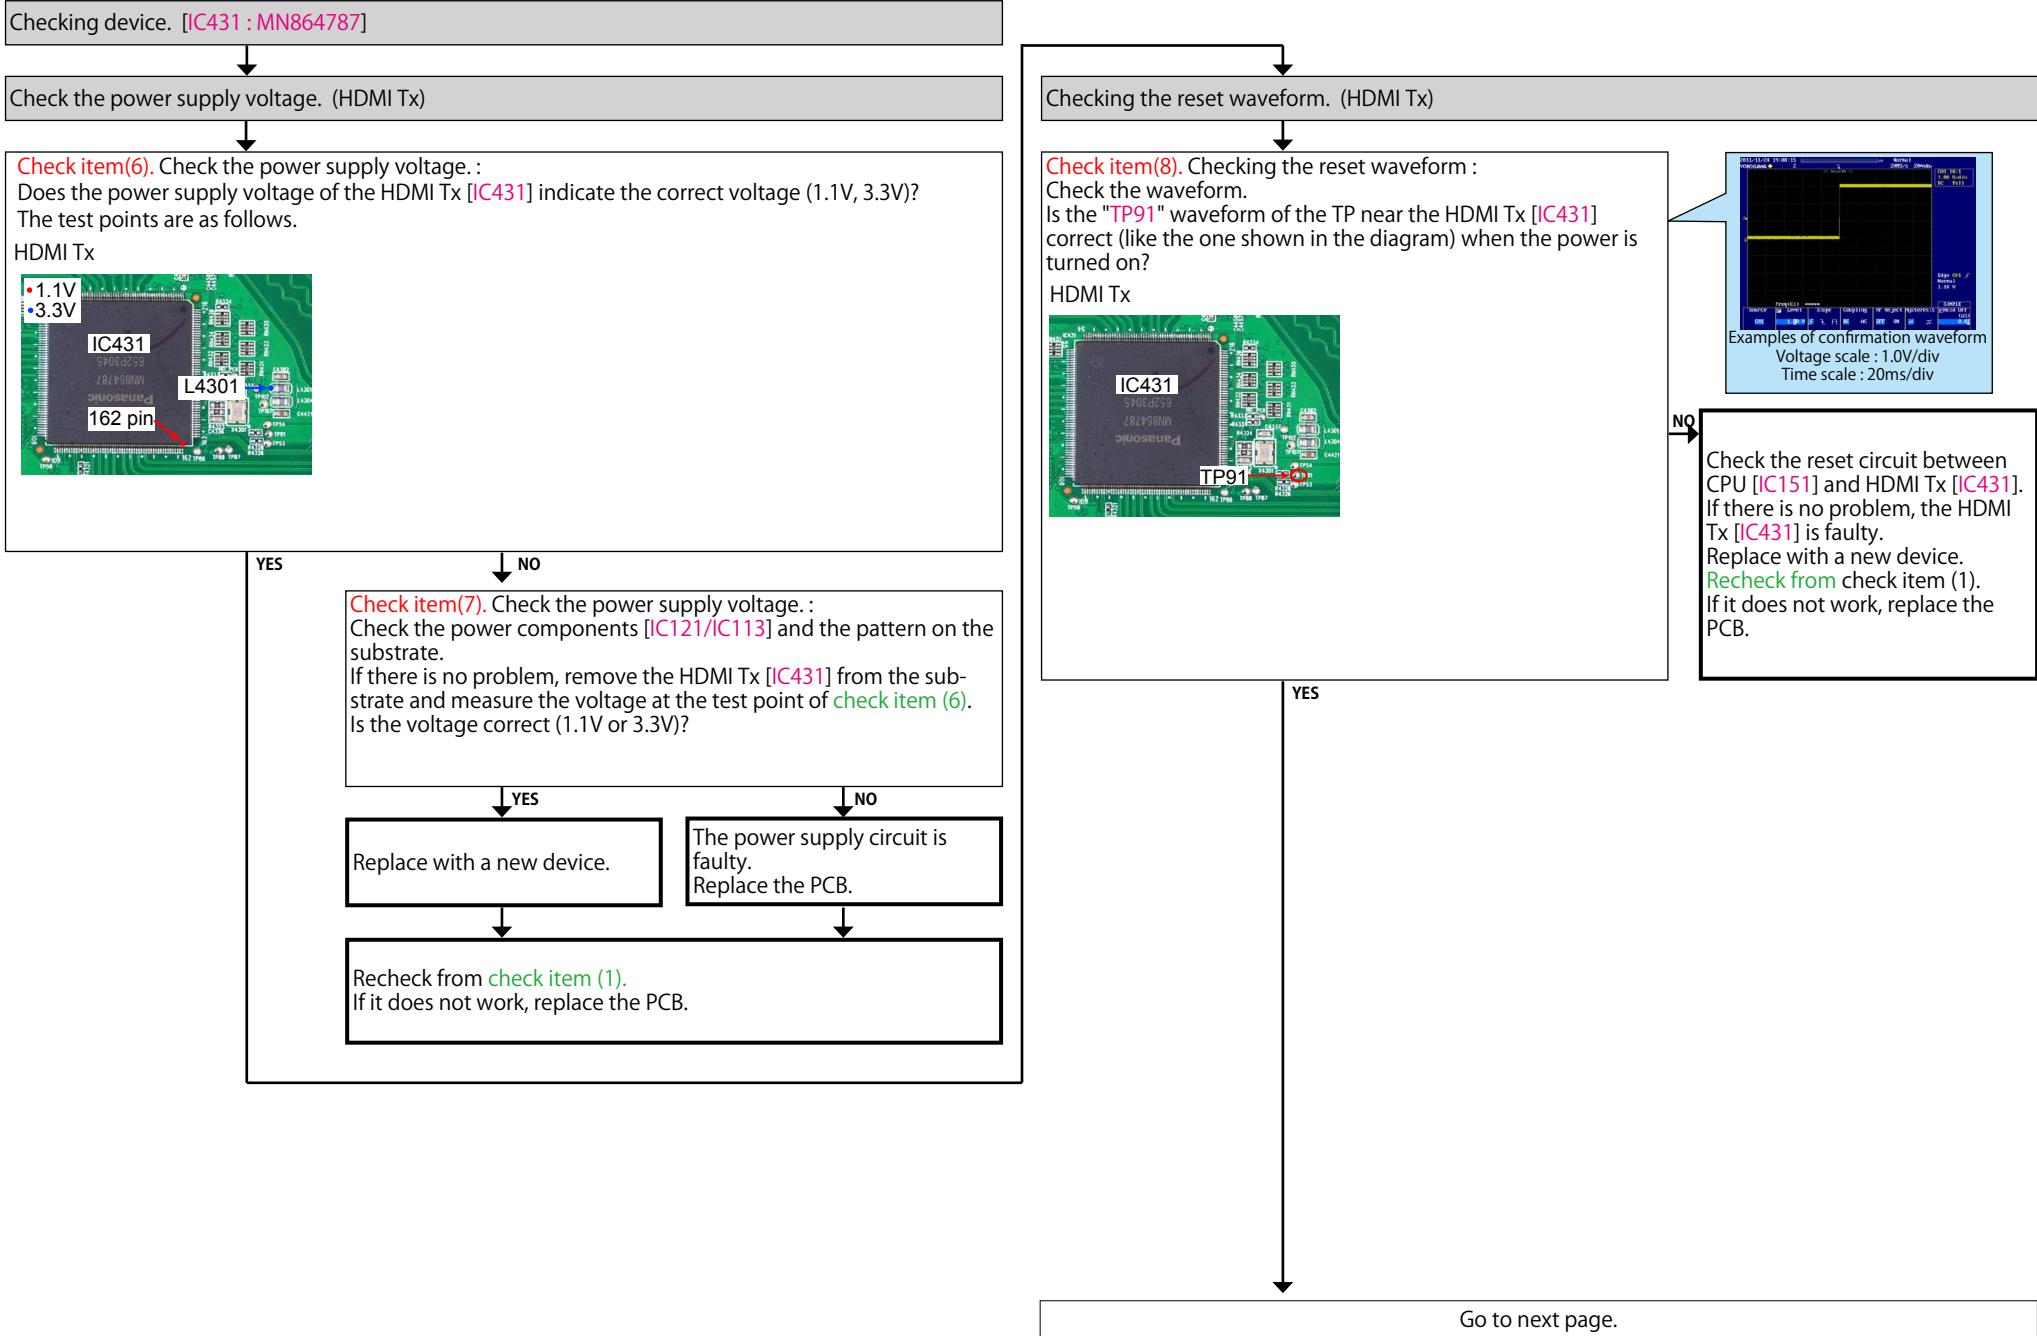


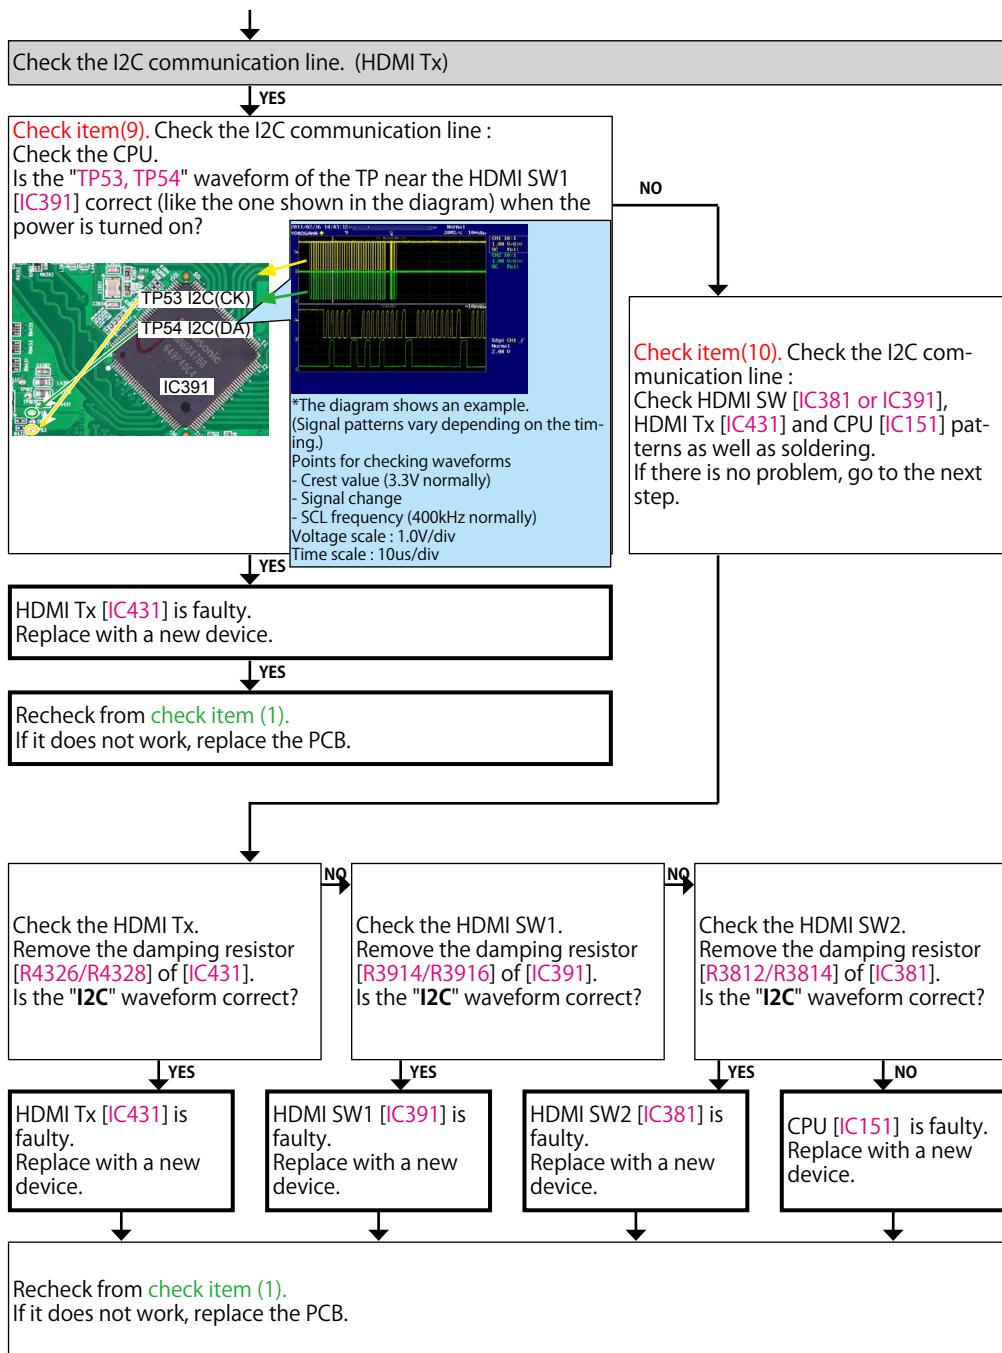


### 3-2. Error Code H1-02 failure detection procedure

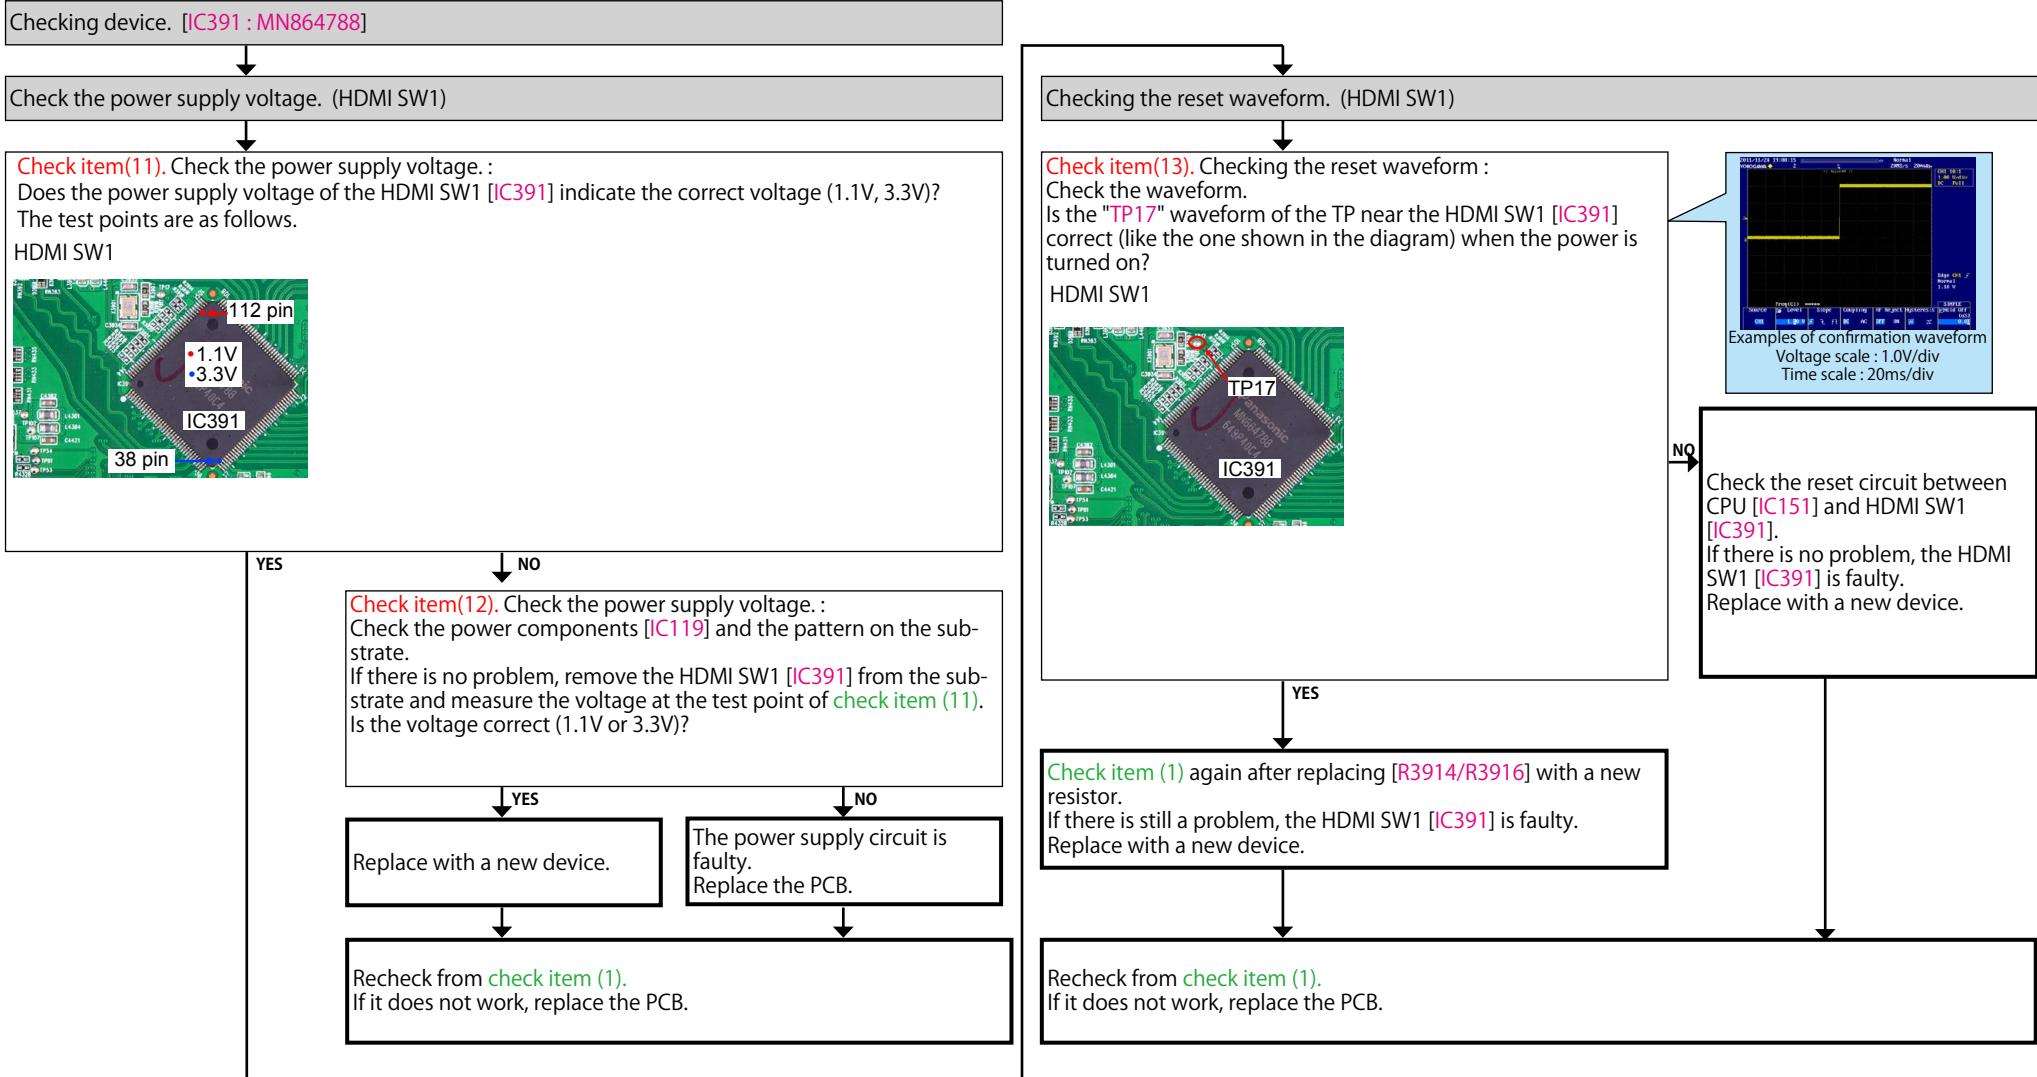


### 3-3. Error Code H1-03 failure detection procedure

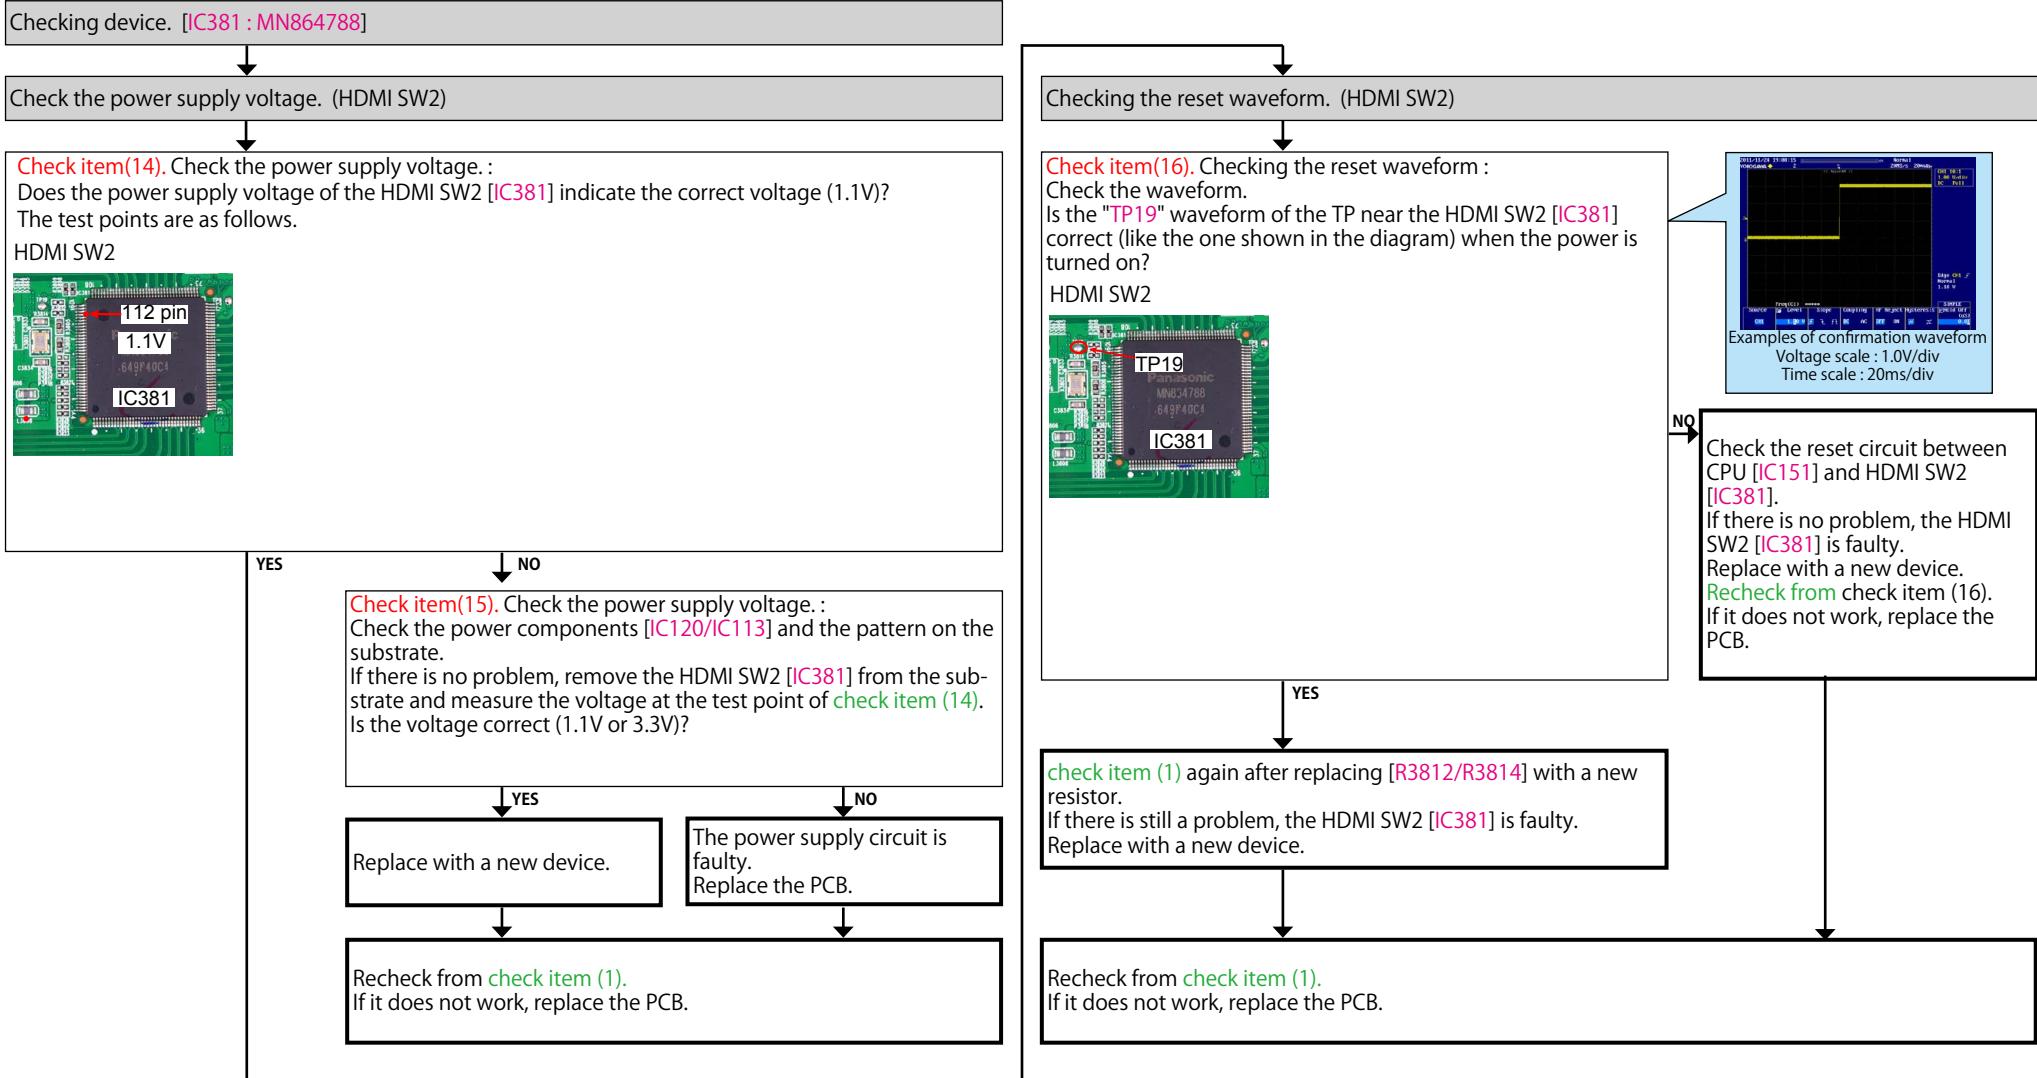

### 3-4. Error Code H1-06 failure detection procedure

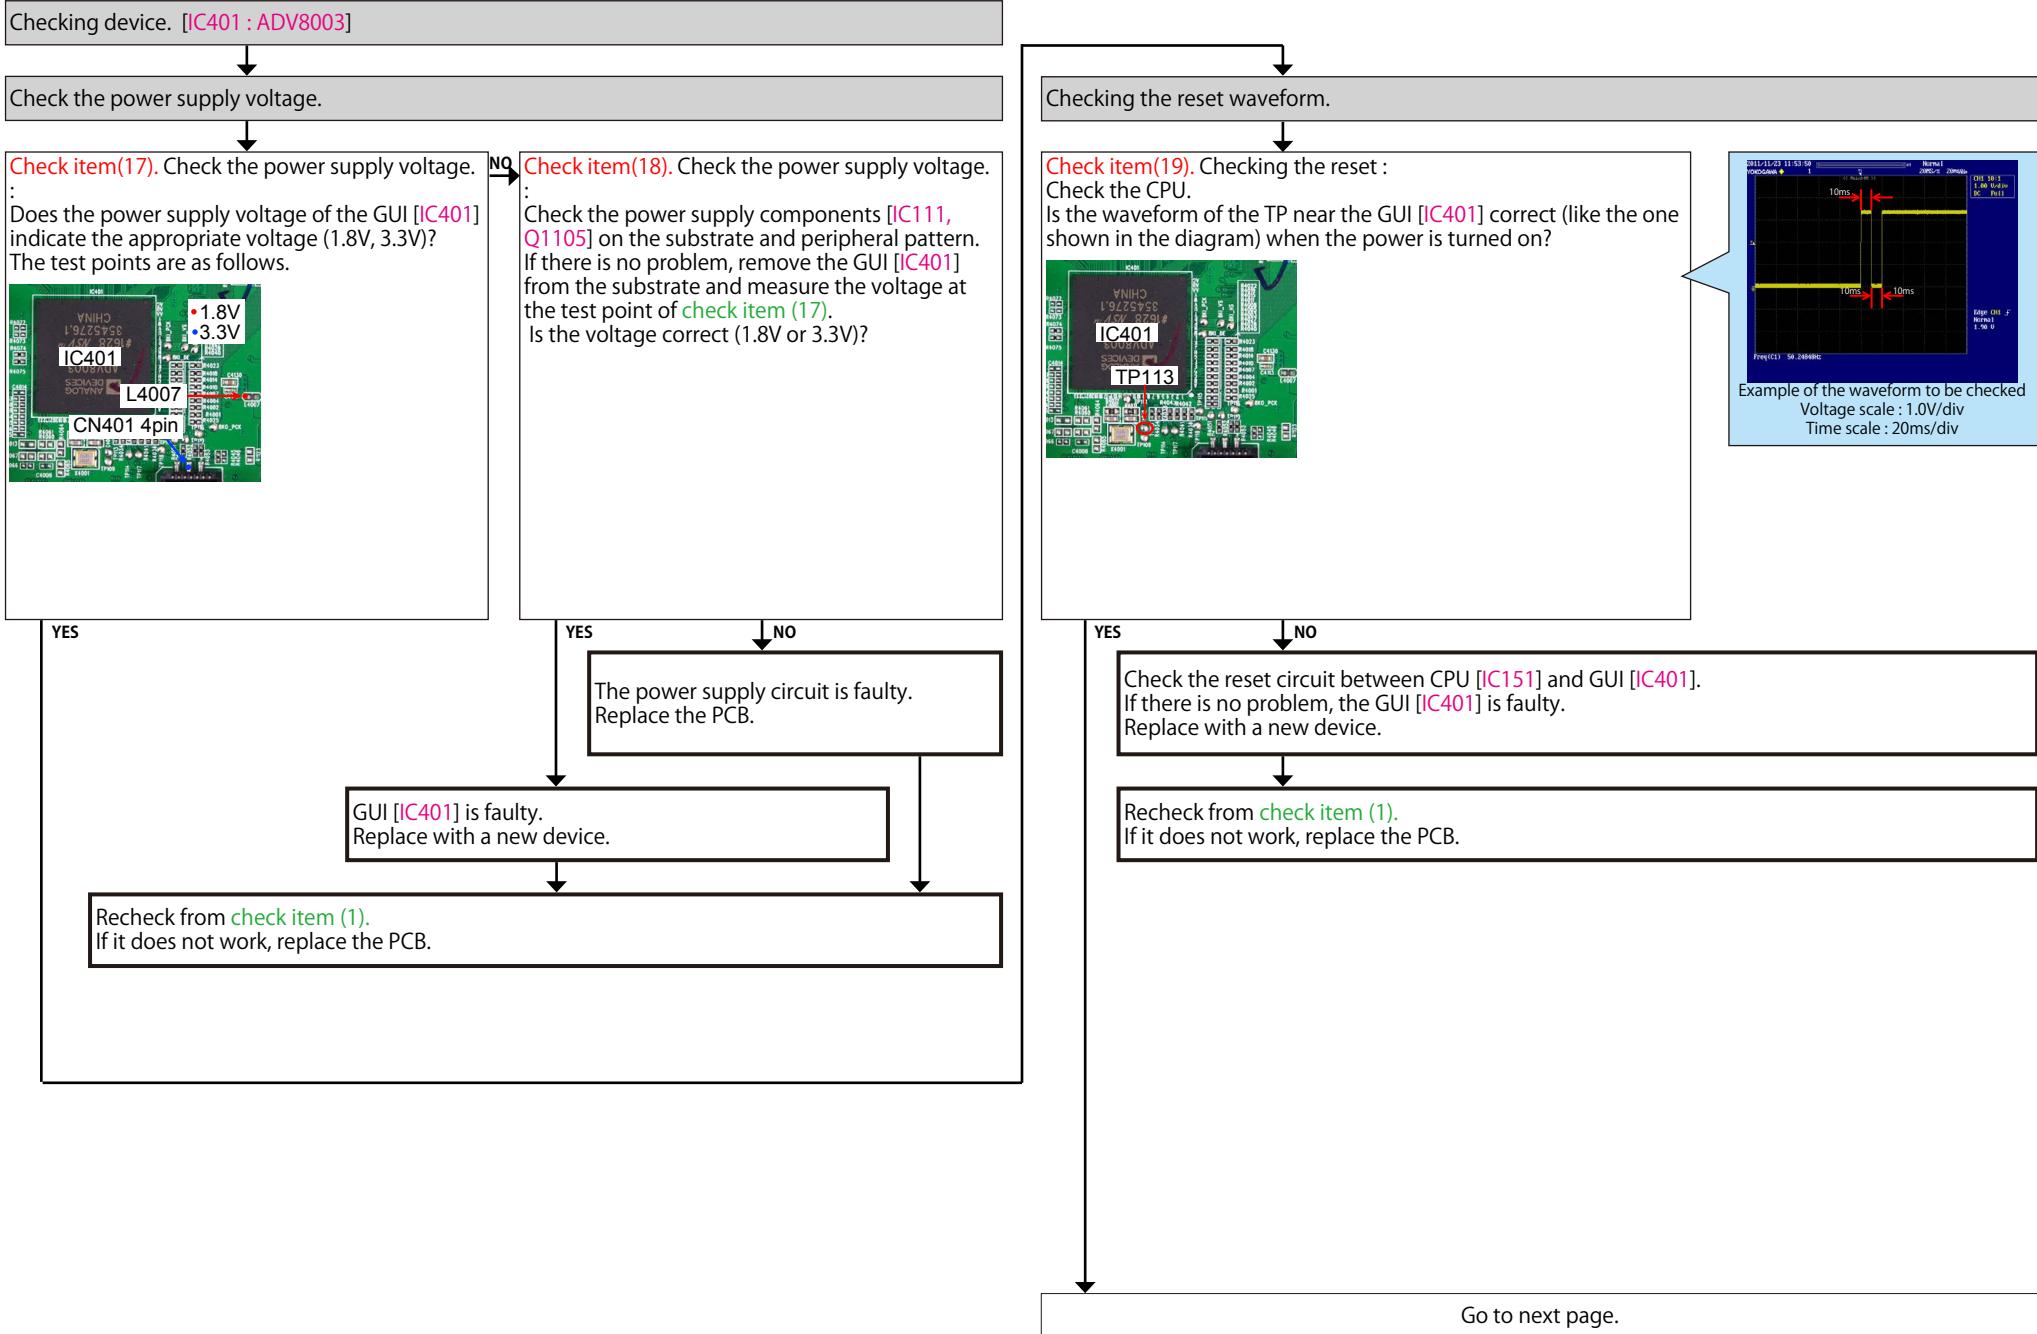

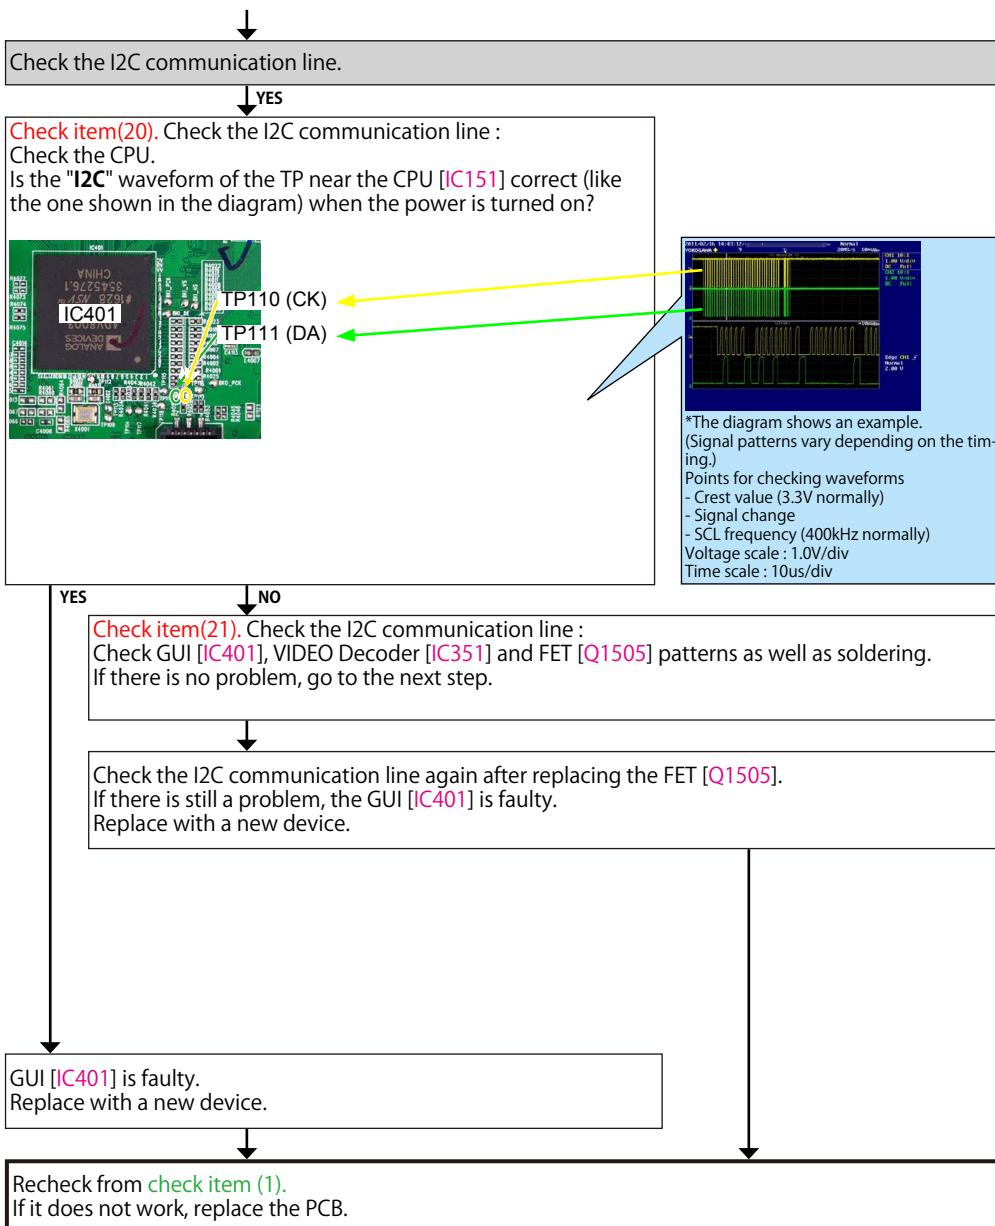

### 3-5. Error Code H1-14 failure detection procedure

Checking device. [[IC402, IC403 : A3R12E40DBF-8E](#)]

**Check item(22).**

Check soldering of IP SCALER [[IC401](#)], DDR2 [[IC402/IC403](#)] and its peripheral circuits.  
Check soldering of the resistors [[R4076 to R4082, RN401 to RN415](#)] between IP SCALER and DDR2.  
If there is no problem with soldering, [[IC401/IC402/IC403](#)] is defective. Replace their IC. Or replace the substrate.

Recheck from [check item \(1\)](#).

### 3-6. Error Code H1-15 failure detection procedure

Checking device. [[IC404 : W25Q128JVFIQ](#)]

**Check item(23).**

Write to the GUI ROM.

Recheck from [check item \(1\)](#).  
Does Error Code H1-15 continue?

↓ YES

**Check item(24).**

Replace [[IC403](#)] with a new device.

Recheck from [check item \(1\)](#).  
Does Error Code H1-15 continue?

↓ YES


Go to [check item \(17\)](#)

NO


NO


Recheck from [check item \(2\)](#).

### 3-7. Error Code H1-05 failure detection procedure

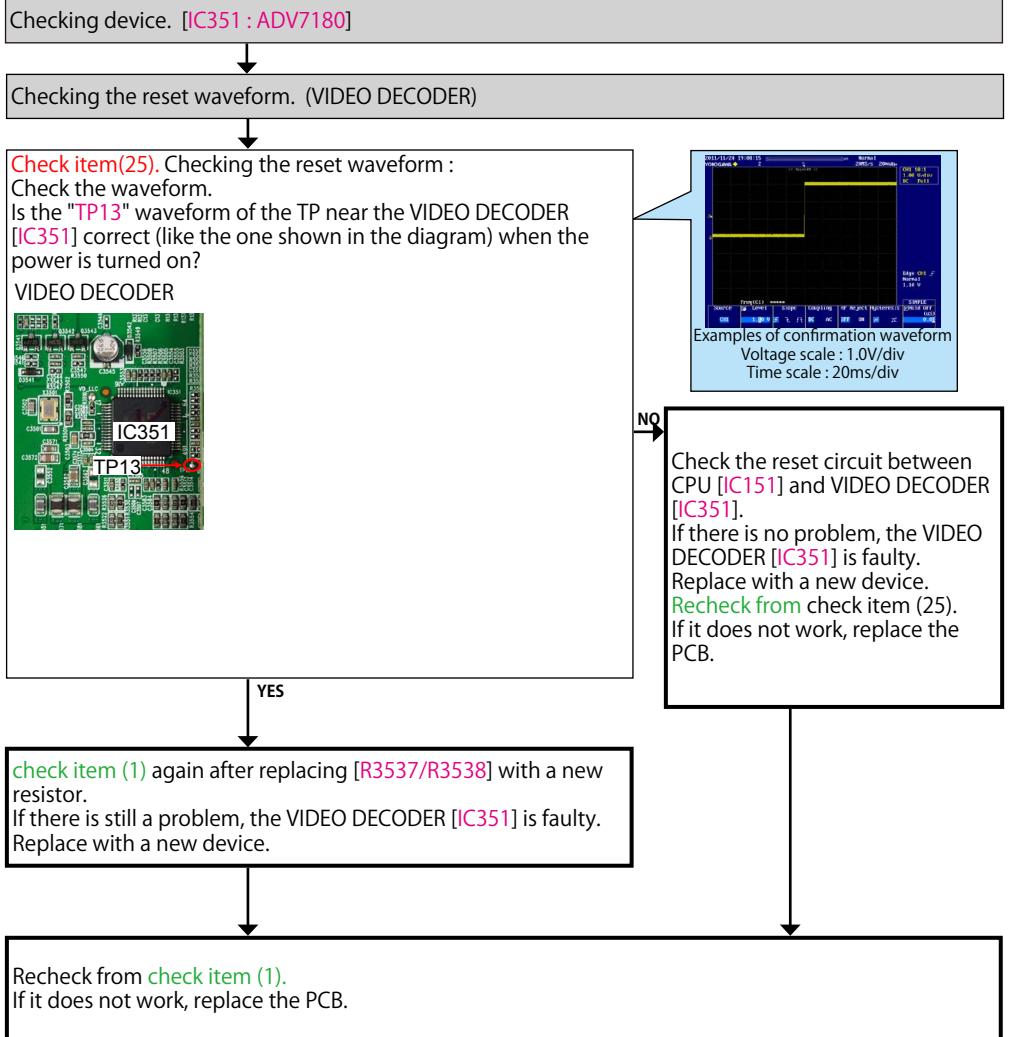

### 3-8. Error Code H1-08 failure detection procedure

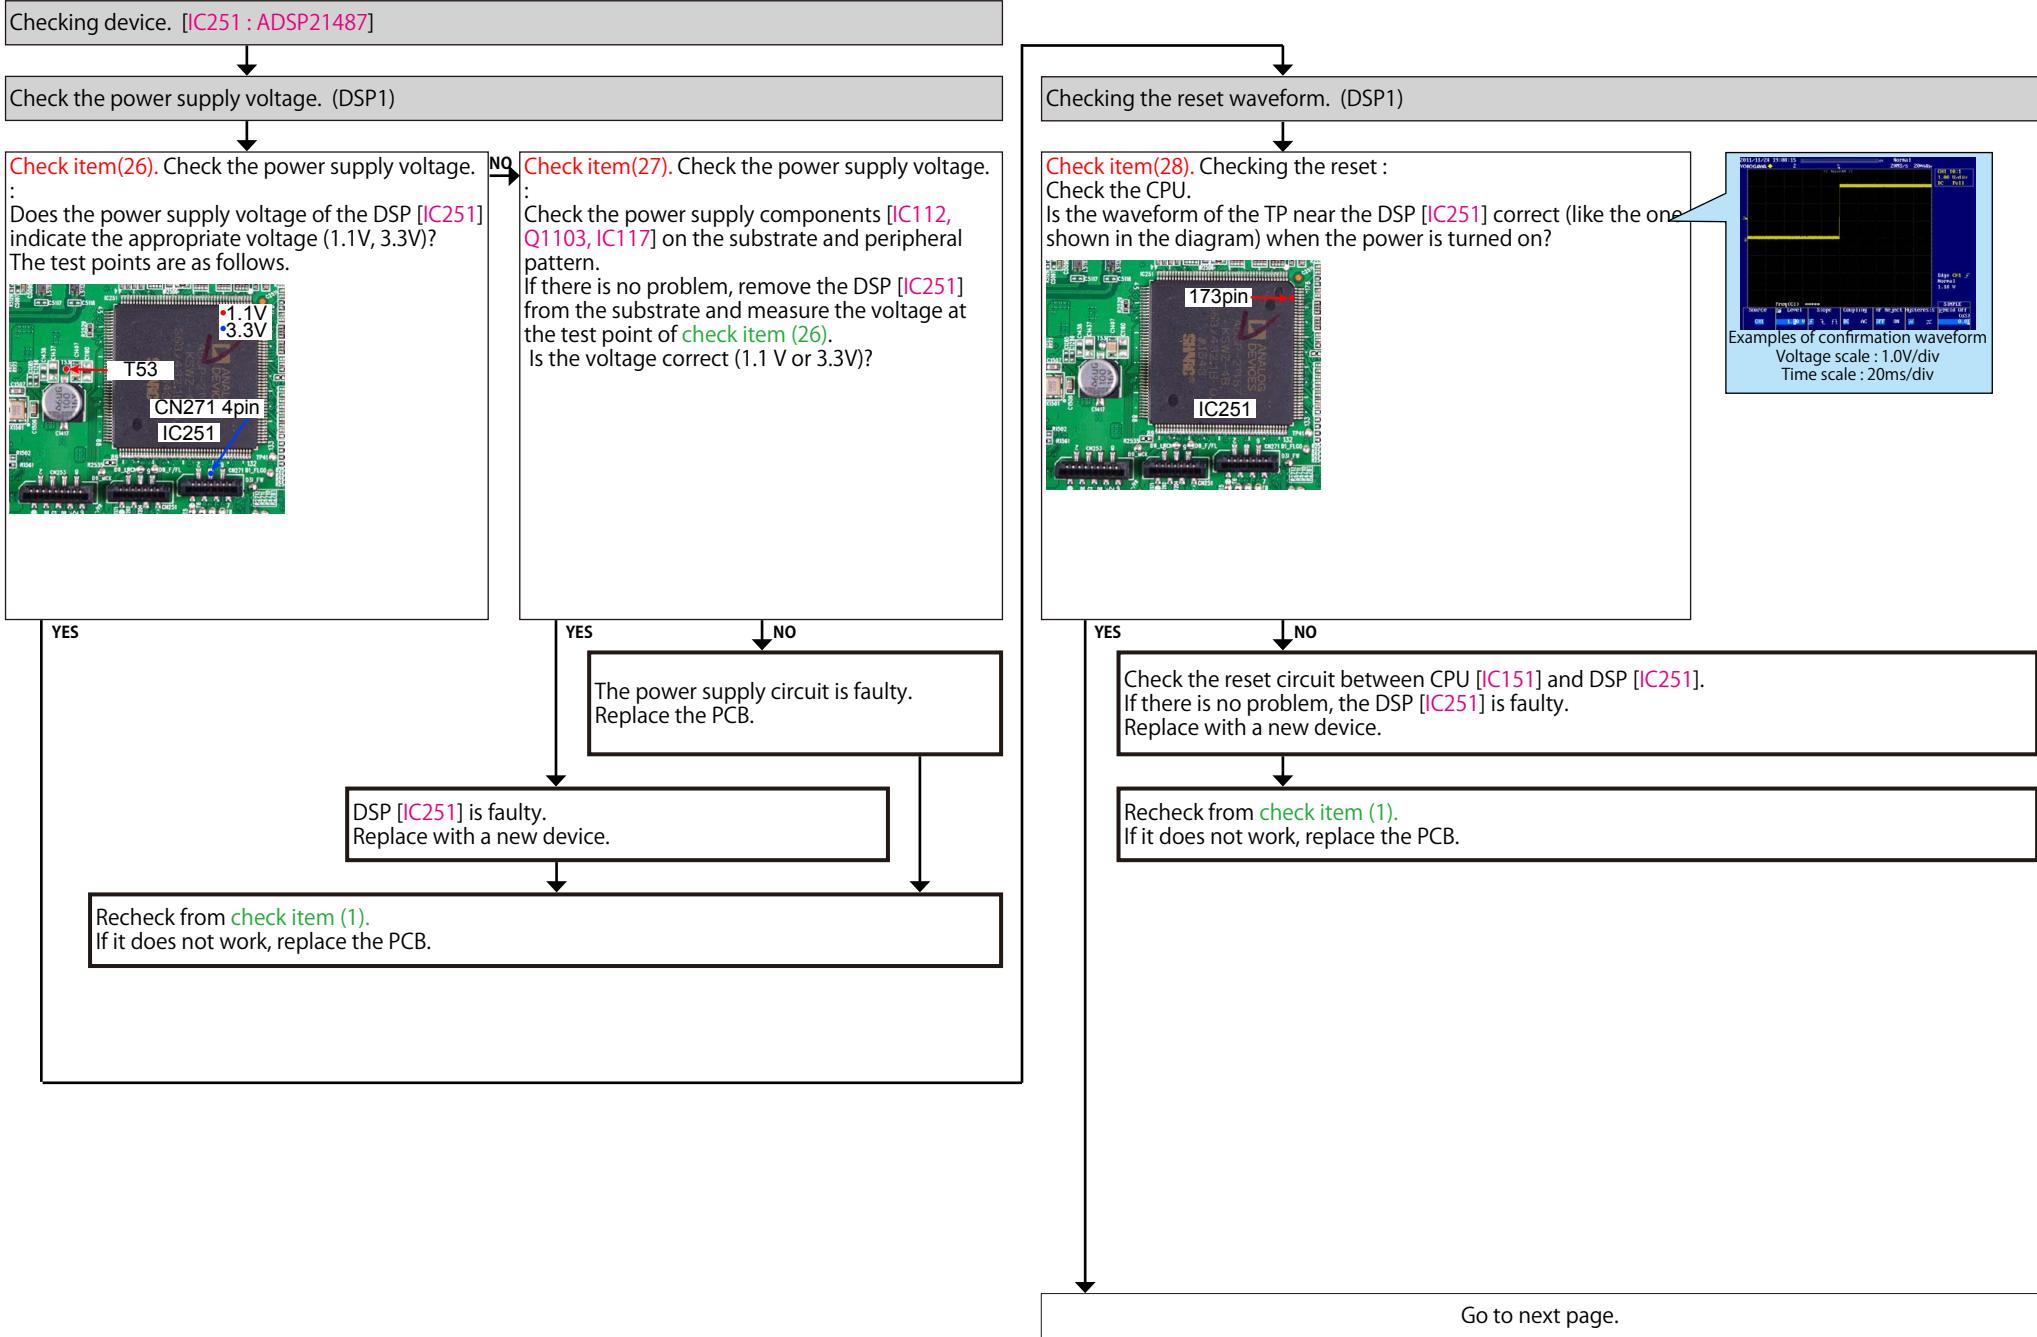

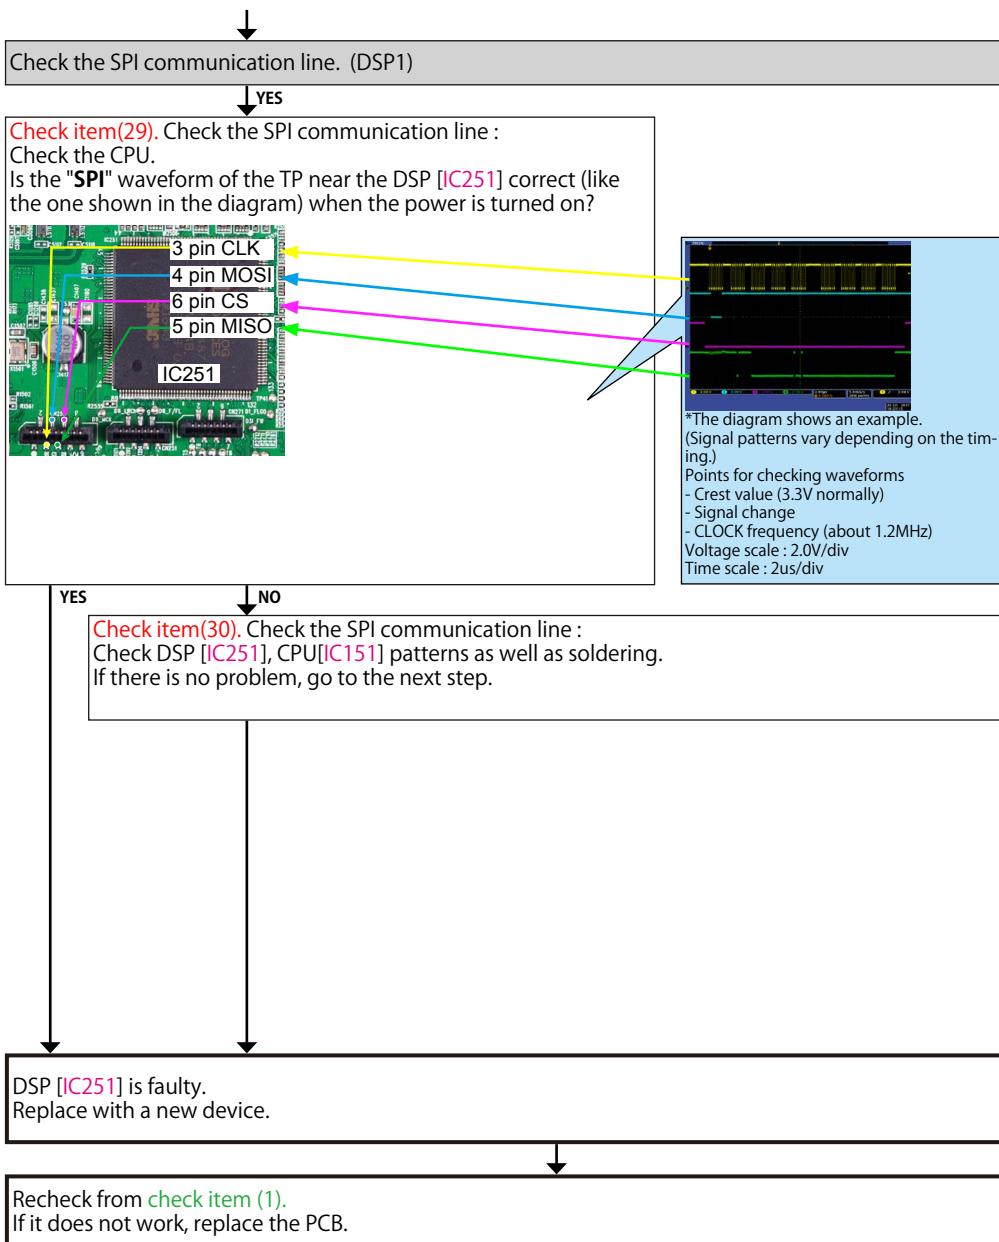

### 3-9. Error Code H1-09 failure detection procedure



Checking device. [IC261 : ADSP21487]

Checking the reset waveform. (DSP2)

**Check item(31).** Checking the reset :

Check the CPU.

Is the waveform of the TP near the DSP [IC261] correct (like the one shown in the diagram) when the power is turned on?

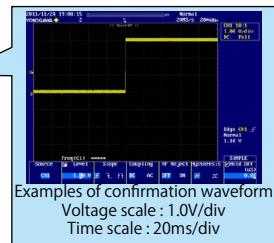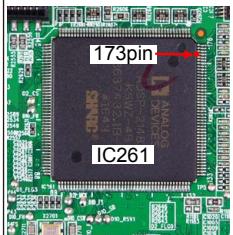

YES      NO

Check the reset circuit between CPU [IC151] and DSP [IC261].  
If there is no problem, the DSP [IC261] is faulty.  
Replace with a new device.

Recheck from [check item \(1\)](#).  
If it does not work, replace the PCB.

Check the SPI communication line. (DSP2)

**Check item(32).** Check the SPI communication line :

Check the CPU.

Is the "SPI" waveform of the TP near the DSP [IC261] correct (like the one shown in the diagram) when the power is turned on?



\*The diagram shows an example.  
(Signal patterns vary depending on the timing.)  
Points for checking waveforms  
- Crest value (3.3V normally)  
- Signal change  
Voltage scale : 2.0V/div  
Time scale : 2us/div


YES      NO


**Check item(33).** Check the SPI communication line :  
Check DSP [IC261], CPU[IC151] patterns as well as soldering.  
If there is no problem, go to the next step.

DSP [IC261] is faulty.  
Replace with a new device.

Recheck from [check item \(1\)](#).  
If it does not work, replace the PCB.

### 3-10. Error Code H1-10 failure detection procedure

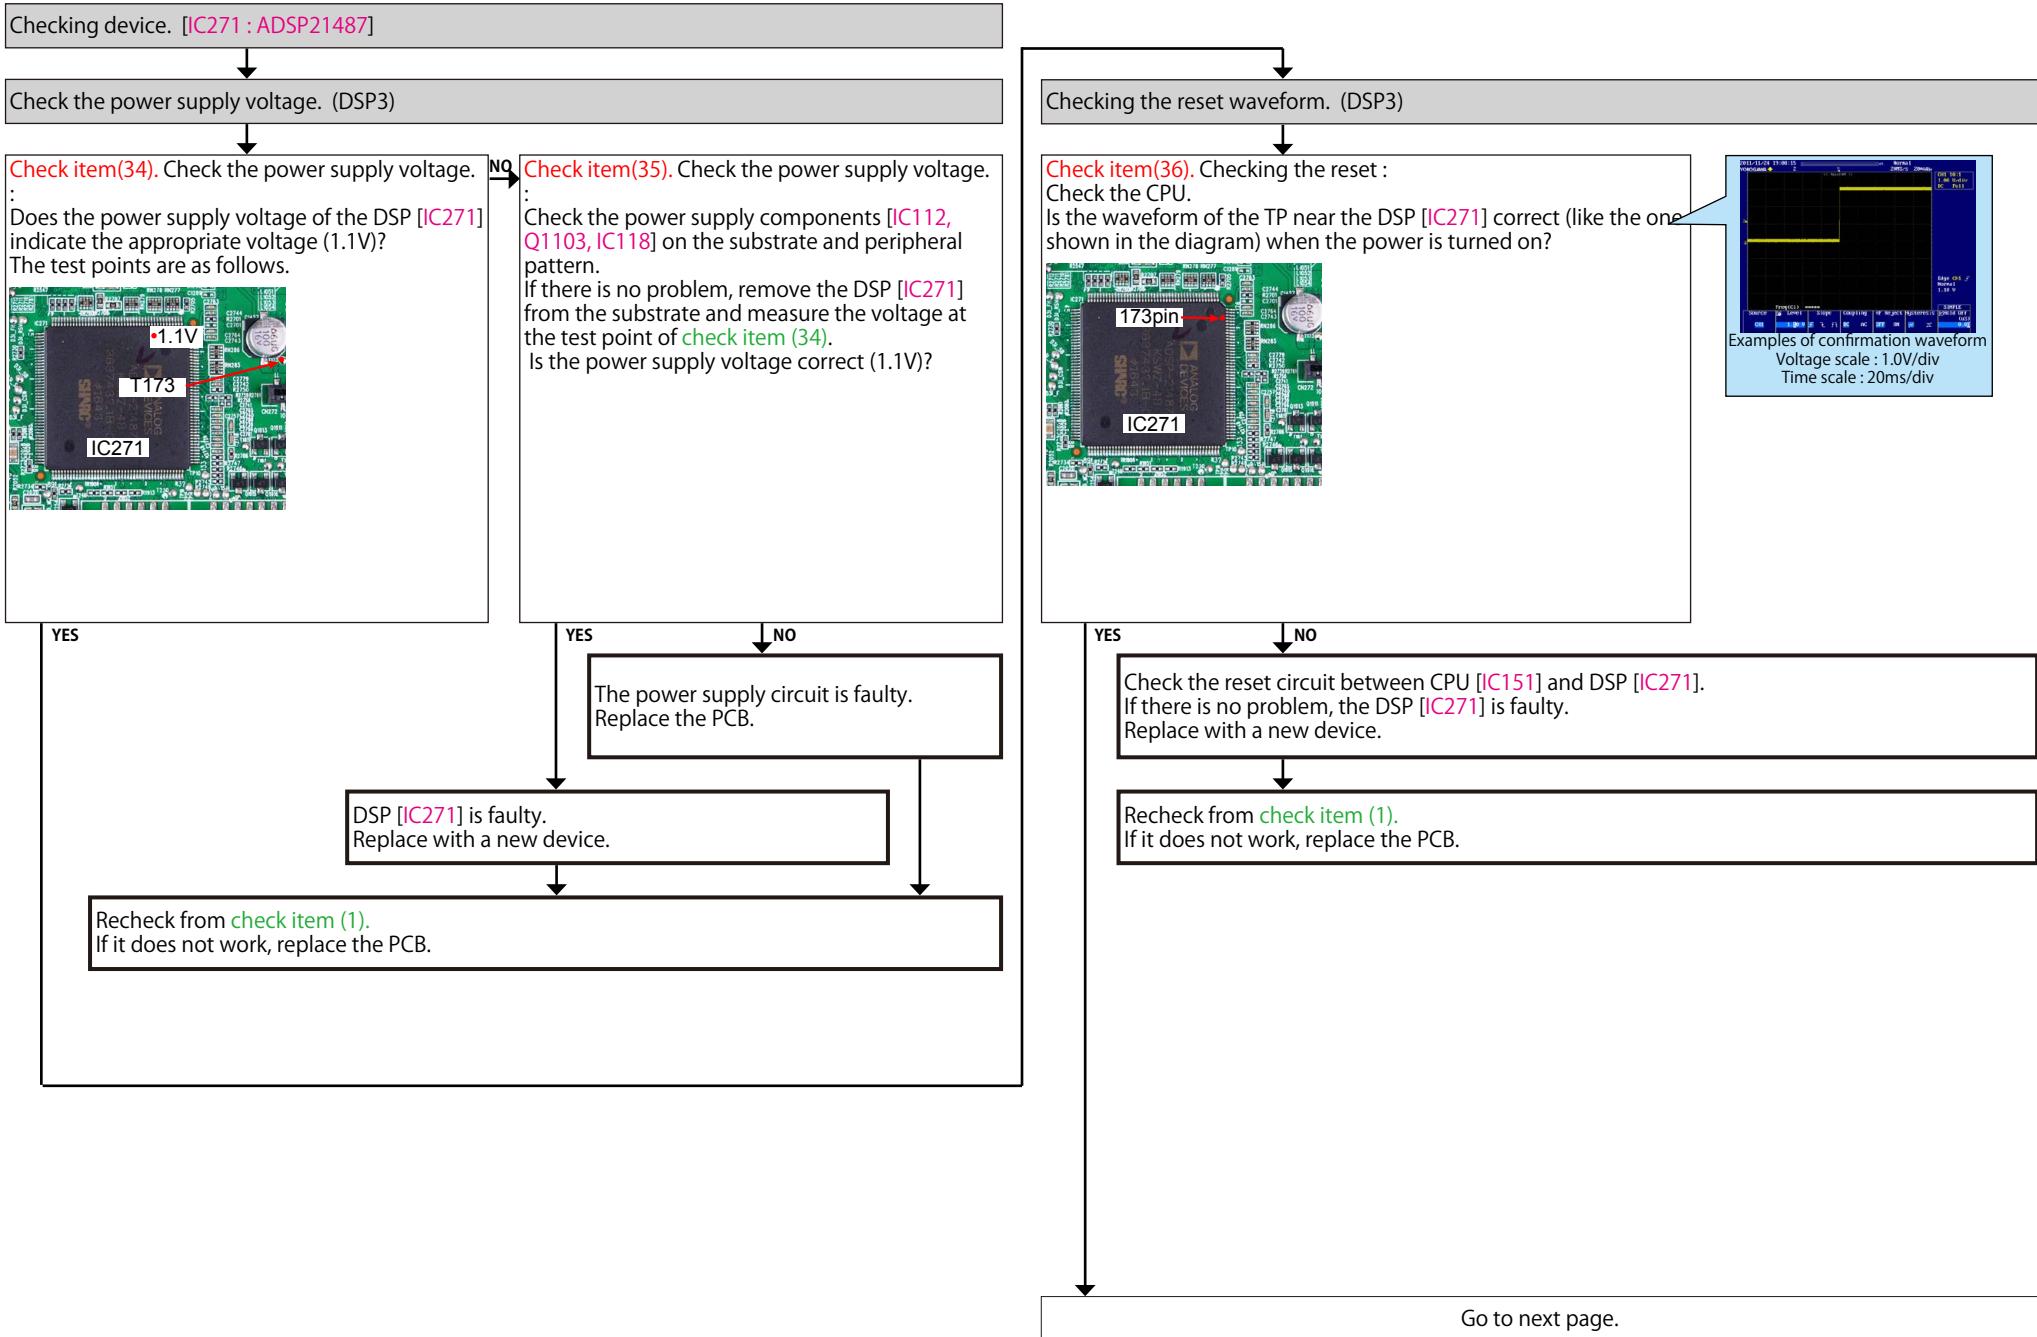

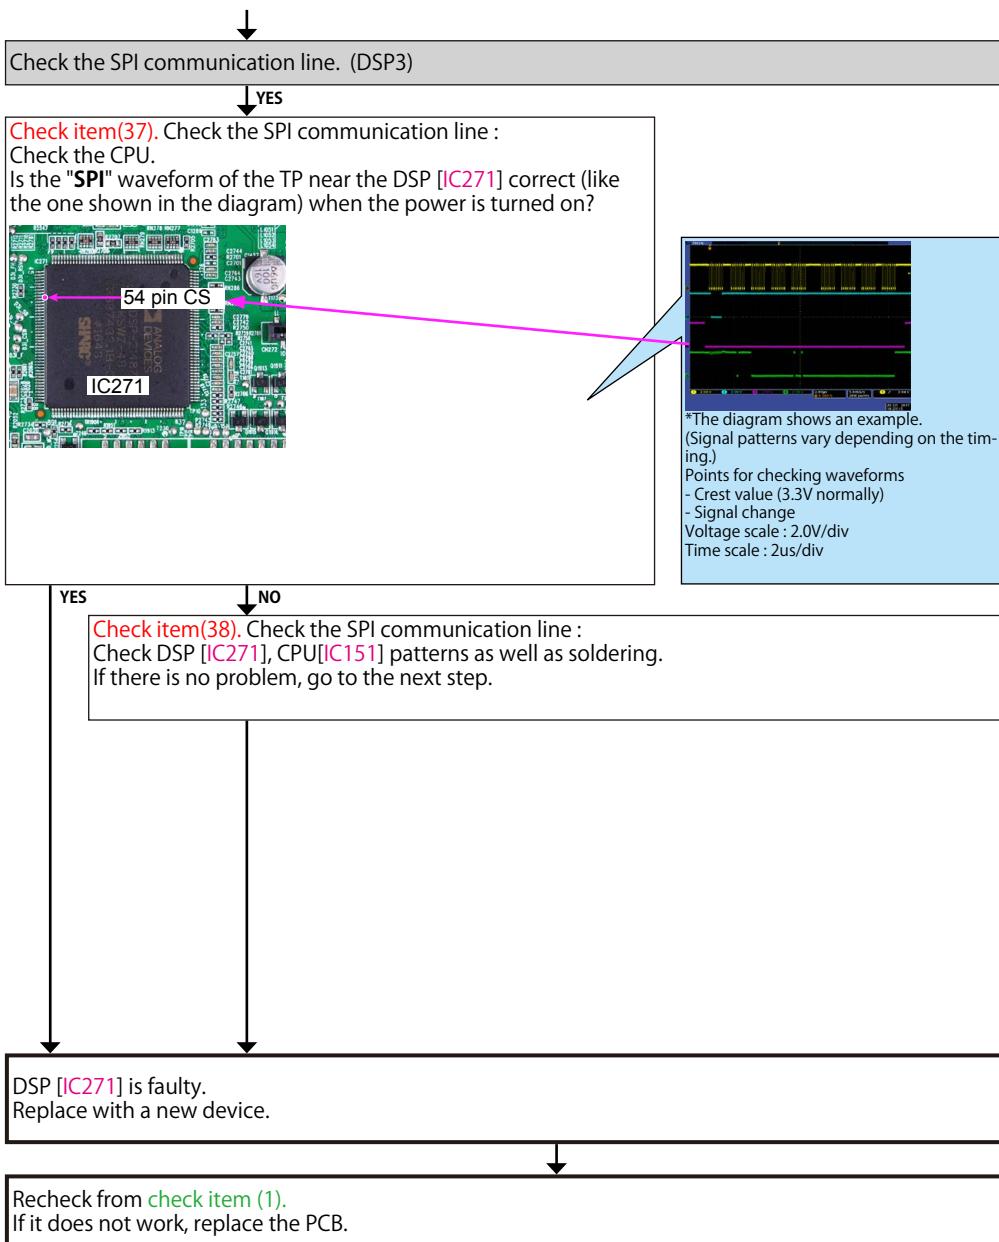

### 3-11. Error Code H1-11 failure detection procedure



Checking device. [IC281 : ADSP21487]

Checking the reset waveform. (DSP4)

**Check item(39).** Checking the reset :

Check the CPU.

Is the waveform of the TP near the DSP [IC281] correct (like the one shown in the diagram) when the power is turned on?

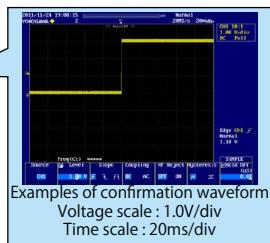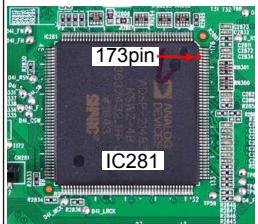


Check the SPI communication line. (DSP4)

**Check item(40).** Check the SPI communication line :

Check the CPU.

Is the "SPI" waveform of the TP near the DSP [IC281] correct (like the one shown in the diagram) when the power is turned on?

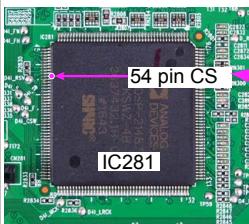

\*The diagram shows an example.  
(Signal patterns vary depending on the timing.)  
Points for checking waveforms  
- Crest value (3.3V normally)  
- Signal change  
Voltage scale : 2.0V/div  
Time scale : 2us/div

YES      NO

Check the reset circuit between CPU [IC151] and DSP [IC281].  
If there is no problem, the DSP [IC281] is faulty.  
Replace with a new device.

Recheck from [check item \(1\)](#).  
If it does not work, replace the PCB.


YES      NO

**Check item(41).** Check the SPI communication line :  
Check DSP [IC281], CPU[IC151] patterns as well as soldering.  
If there is no problem, go to the next step.


DSP [IC281] is faulty.  
Replace with a new device.

Recheck from [check item \(1\)](#).  
If it does not work, replace the PCB.


### 3-12. Error Code H1-12 failure detection procedure

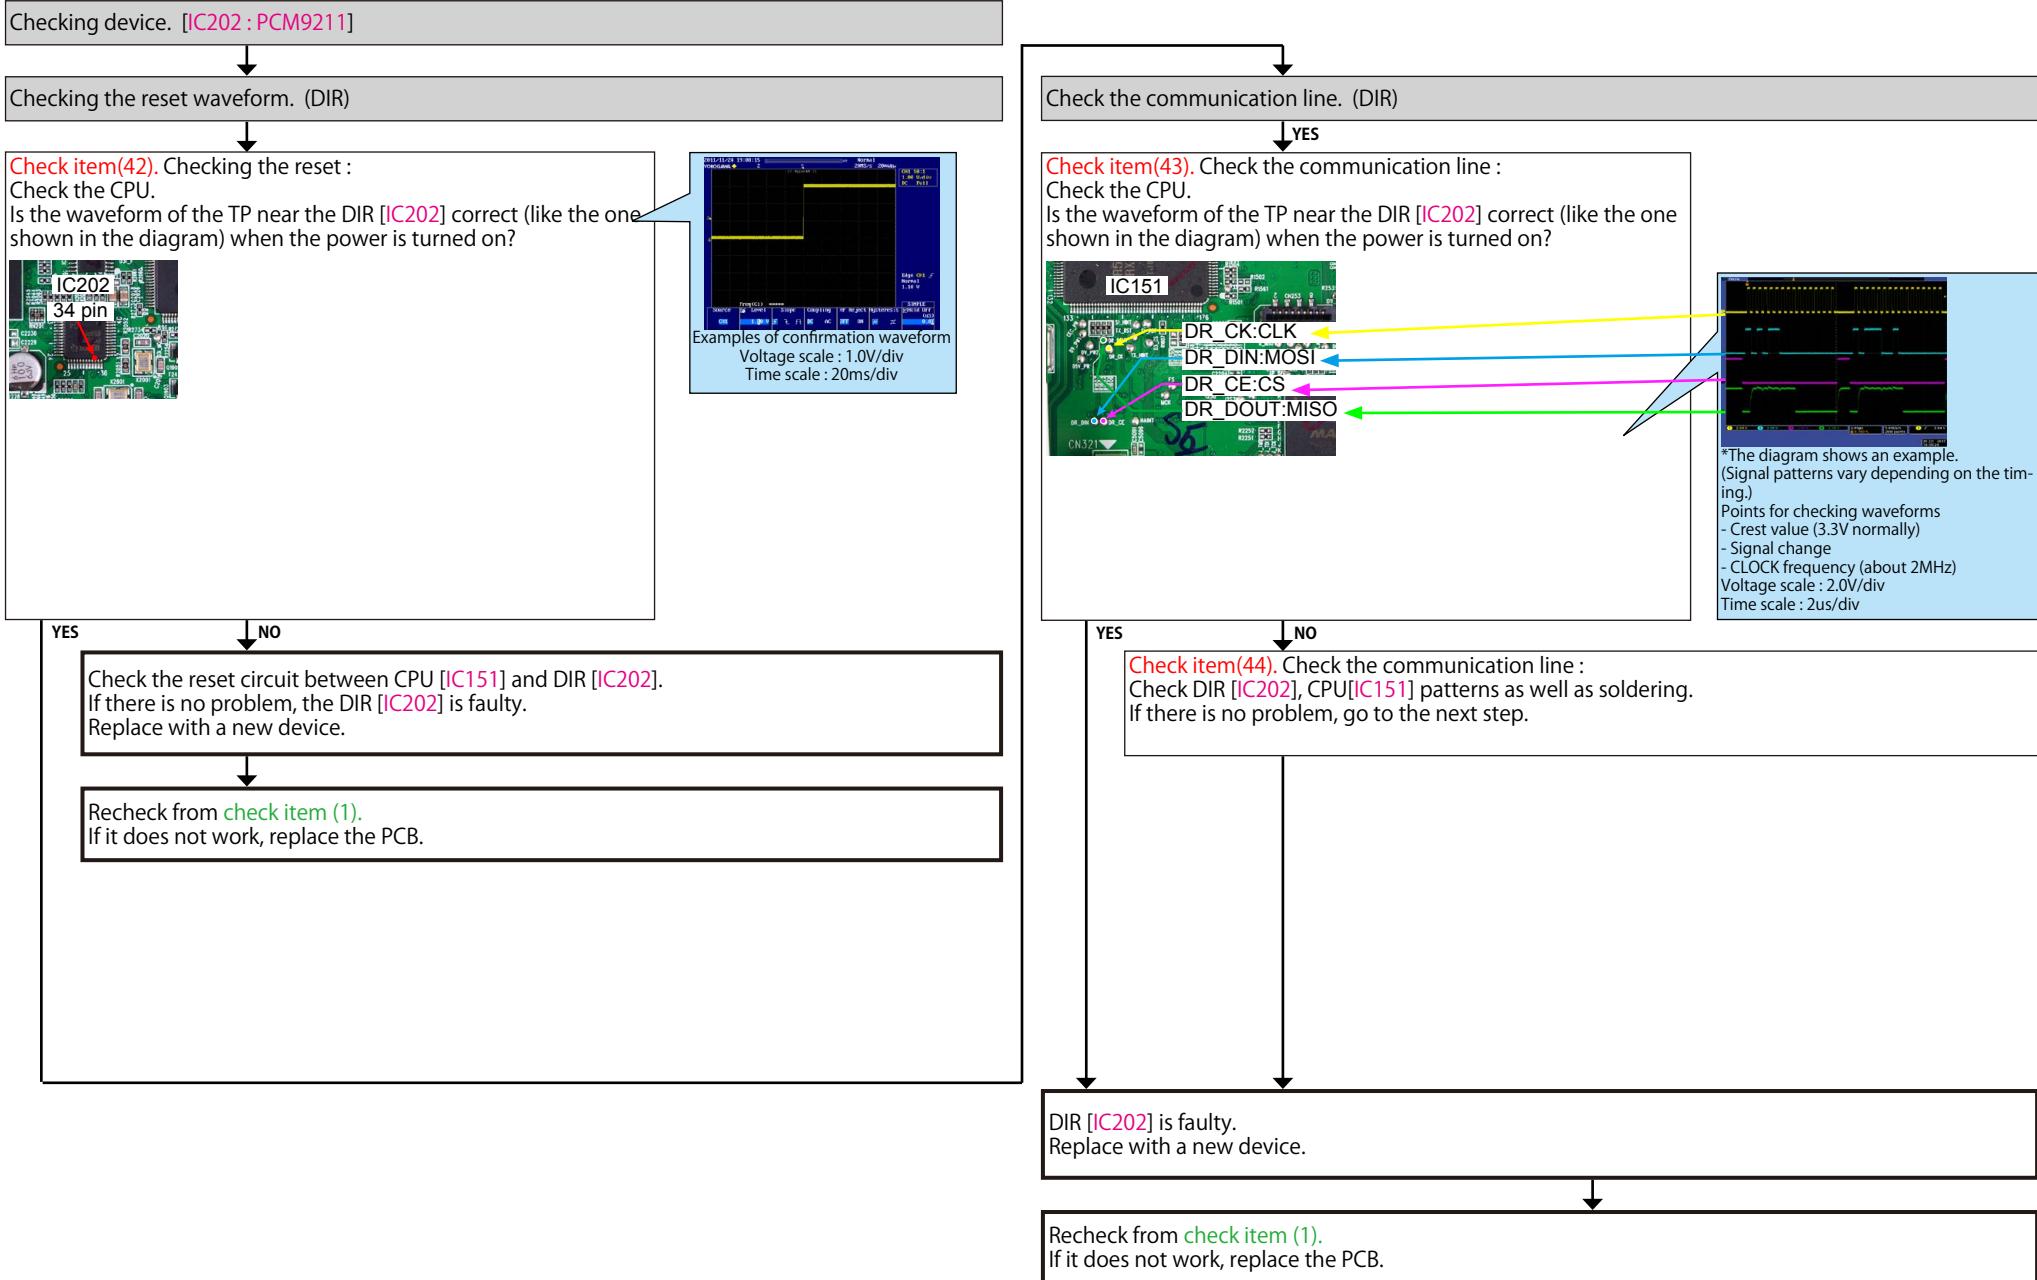

### 3-13. Error Code H1-16 failure detection procedure

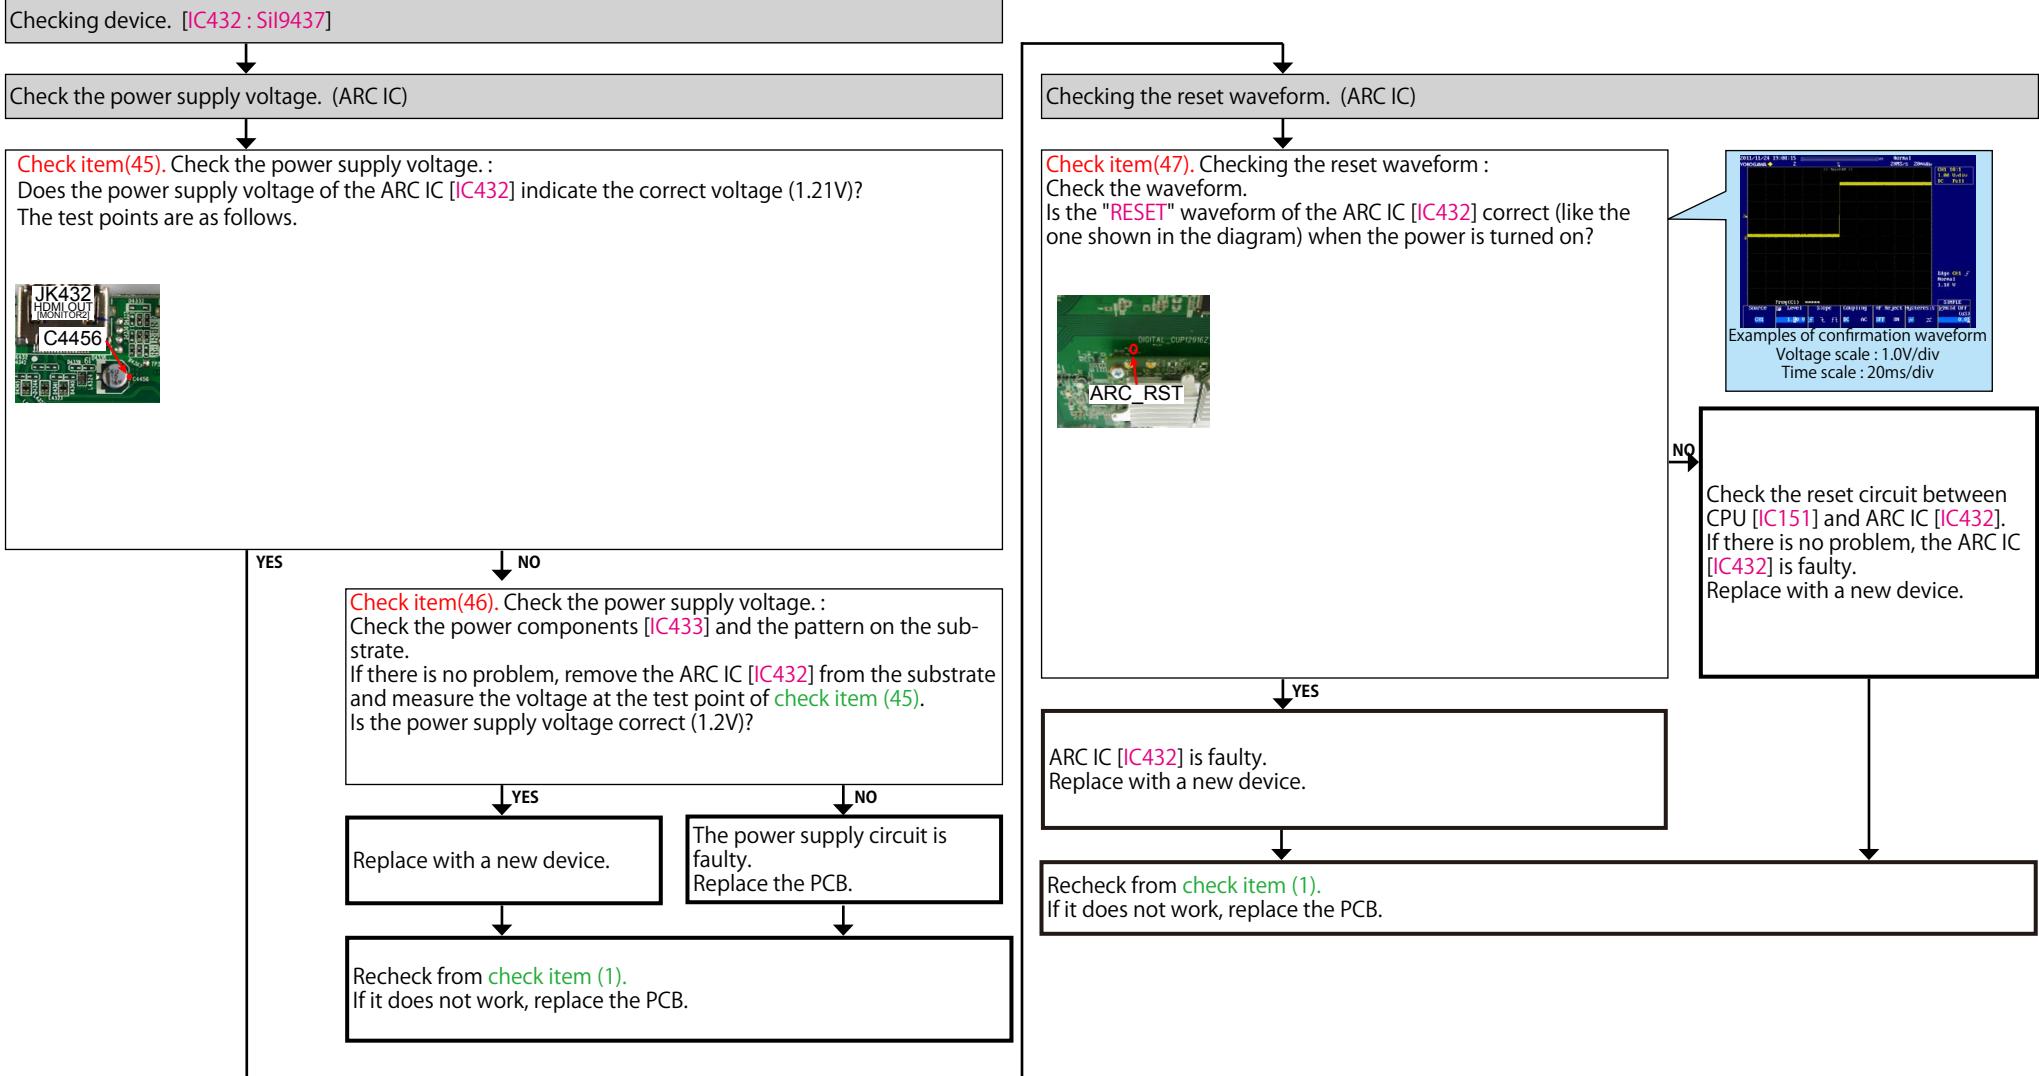

### 3-14. Switcher1 failure detection procedure

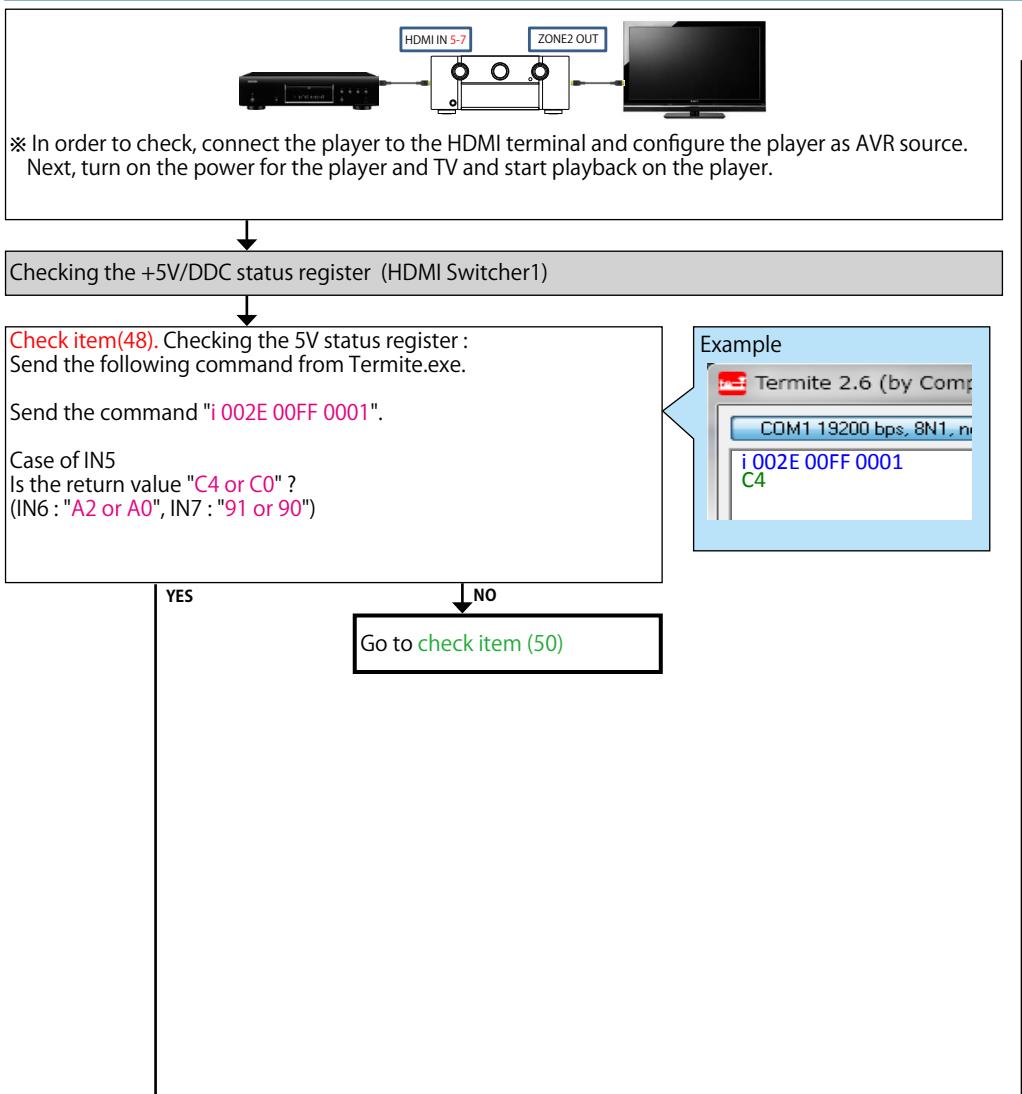

**Check item(49). Checking the DDC status register :**  
Send the following command from Termite.exe:

Case of IN5  
Send the command "i 002B 0084 0001".  
Case of IN6  
Send the command "i 002B 0054 0001".  
Case of IN7  
Send the command "i 002B 0024 0001".

Move to the branch destination according to the value returned.

Example



Termite 2.6 (by Compuware)  
COM1 19200 bps, 8N1, nDTR  
i 002B 0084 0001  
22


"00 or 04"  
(Detection of DDC is not OK.)

"22 or 11"  
(Detection of DDC is OK)

Go to check item (51)

Go to check item (52)

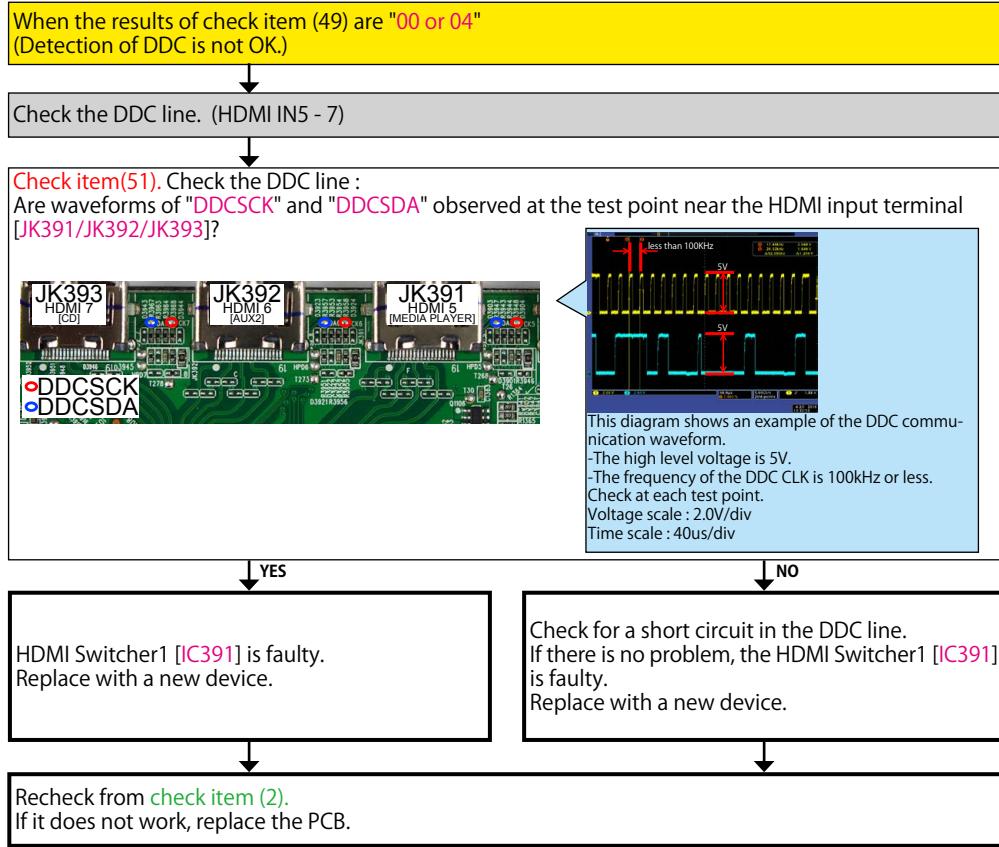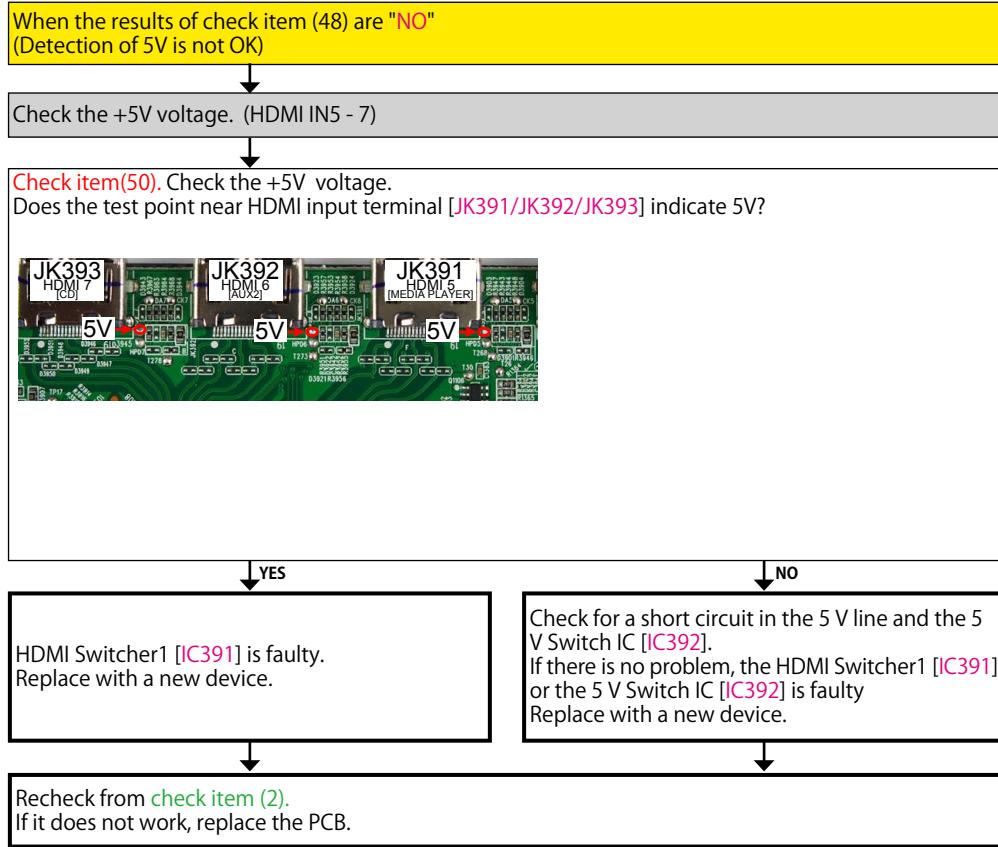

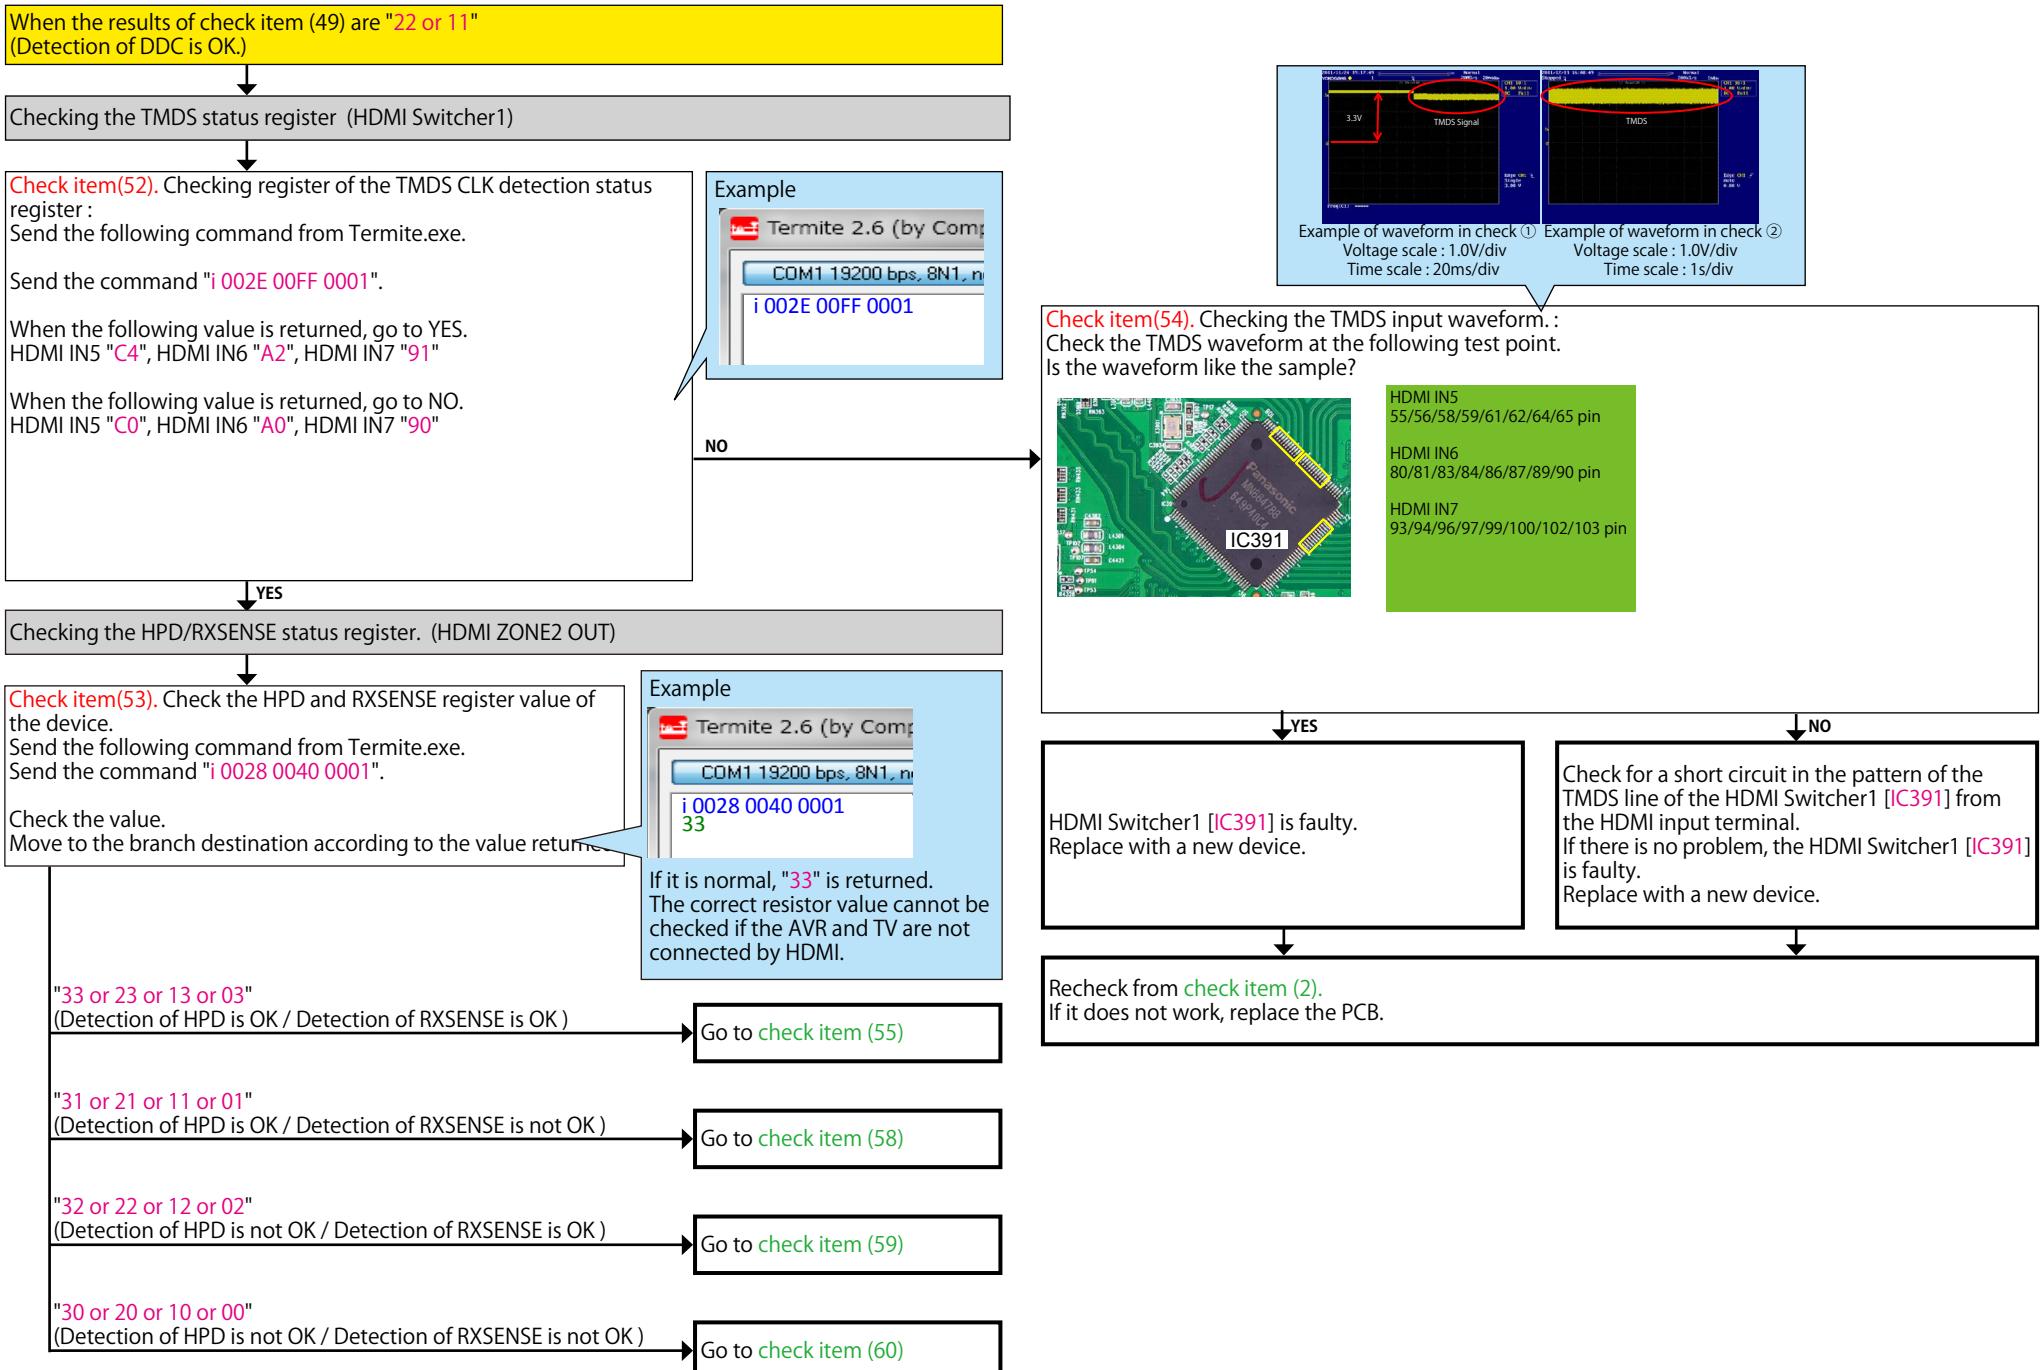


When the results of check item (53) are "33 or 23 or 13 or 03"  
(Detection of HPD is OK / Detection of RXSENSE is OK)

Checking the EDID register. (HDMI ZONE2 OUT)

**Check item(55). Check the Monitor EDID :**

- ① Unplug the AC cord. Plug the AC cord into a power outlet.  
② Send the transmission command "m\_3" from Termite.exe.  
Are the first eight bytes of the returned value "00FFFFFFF00"?

**Check item(56).** Checking the TMDS :  
Check the TMDS waveform at the following test point.

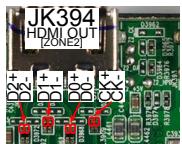

**Check item(57).** Check the communication :  
Do "CK" and "DA" indicate (5V) at the test point  
near HDMI output connector [JK394]?



**YES**  **NO**

Check for a short circuit in the TMDS line.  
If there is no problem, the HDMI Switcher1 [**C391**] is faulty.  
Replace with a new device.

Check for a short circuit in the DDC line.  
If there is no problem, the HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.


HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.


HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

Recheck from [check item \(2\)](#).  
If it does not work, replace the PCB.


## Example

The first eight bytes are normally "00FFFFFFF00". The correct resistor value cannot be checked if the AVR and TV are not connected by HDMI.

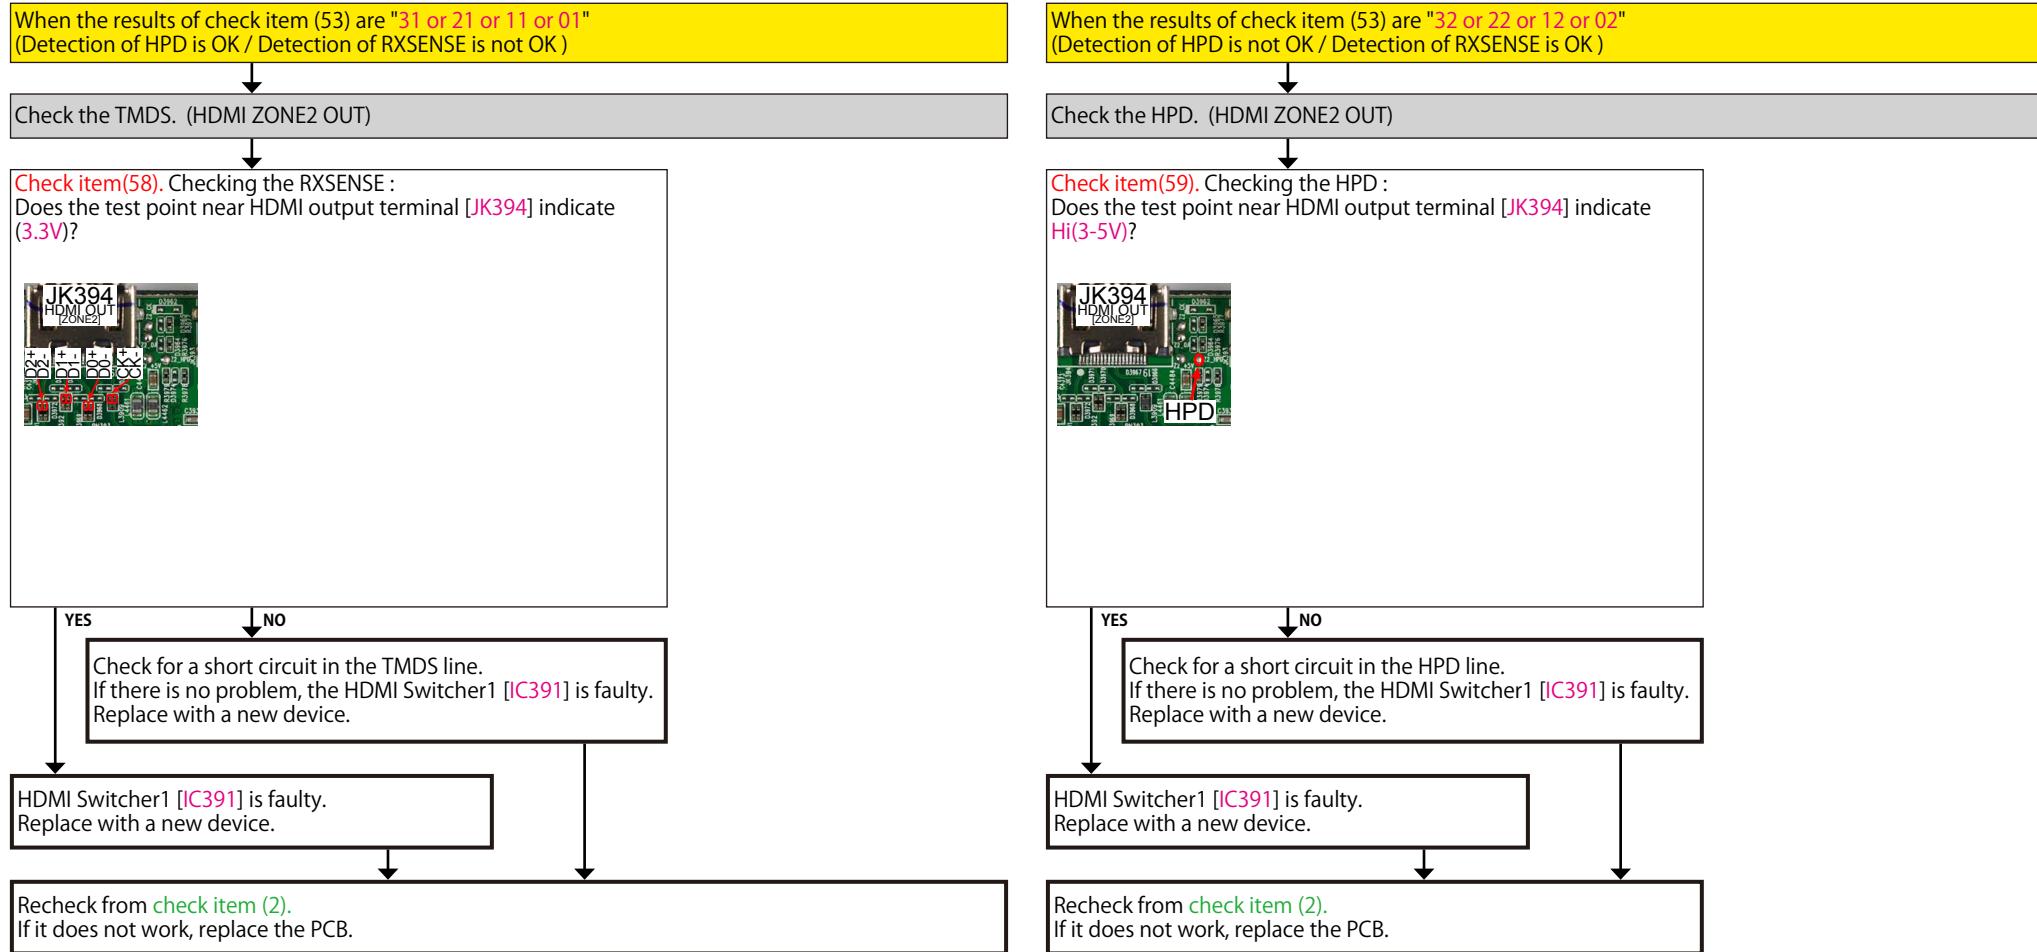

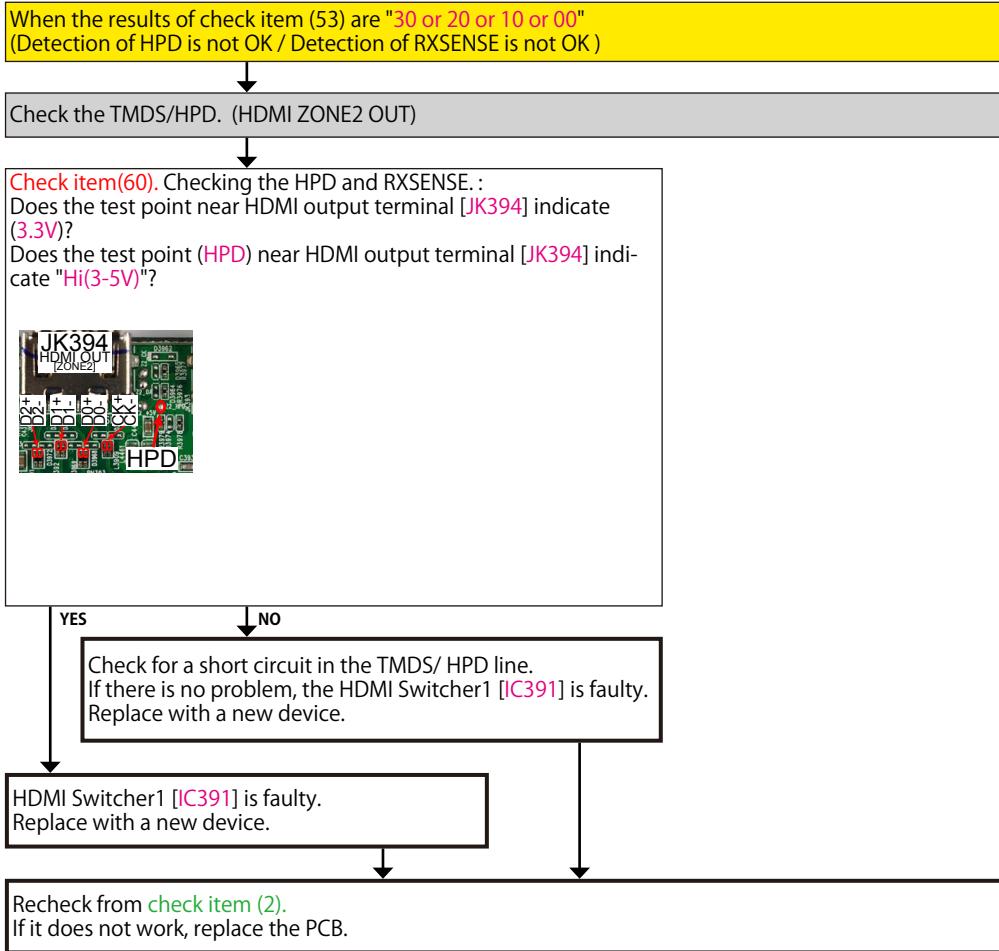

### 3-15. Switcher2 failure detection procedure

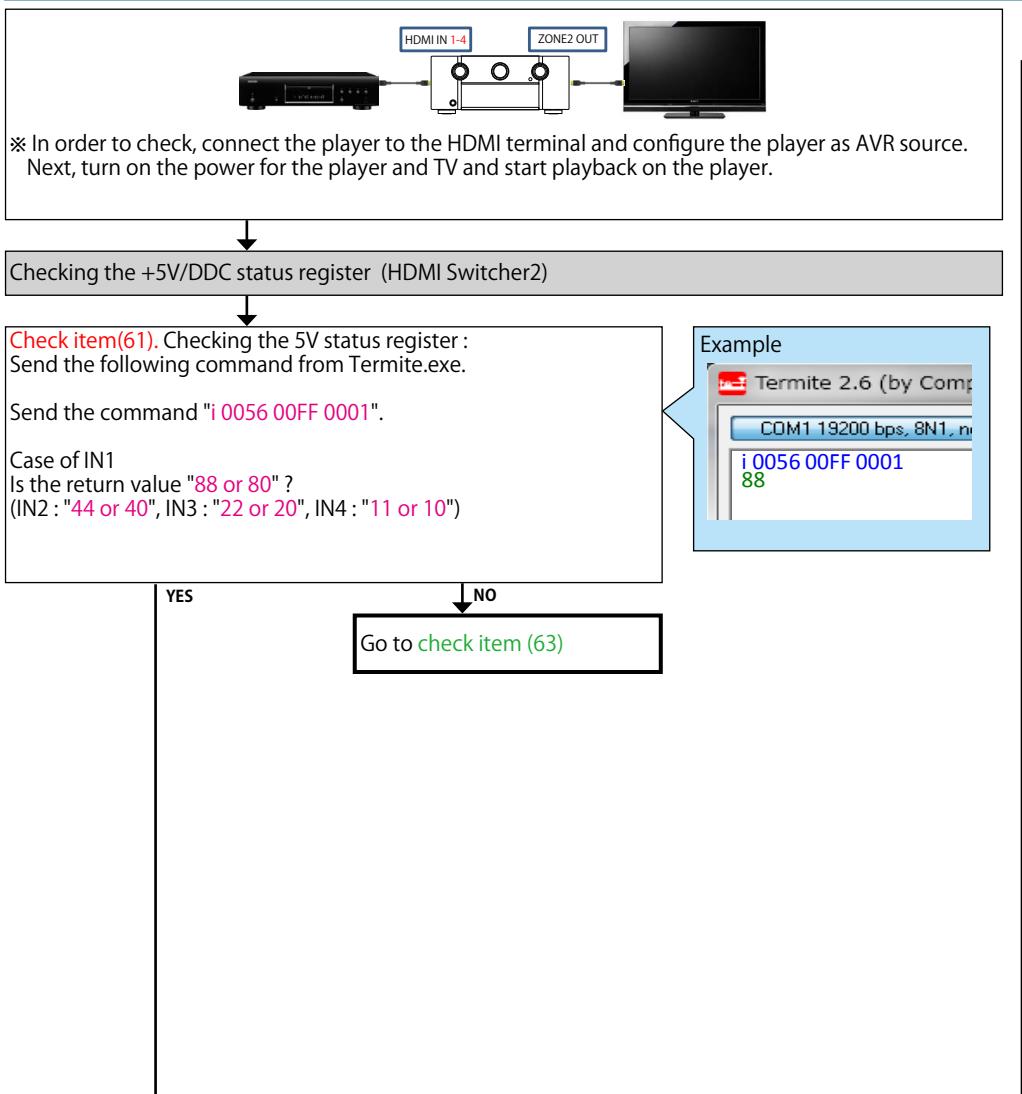

**Check item(62). Checking the DDC status register :**  
Send the following command from Termite.exe:

Case of IN1  
Send the command "i 0053 00B4 0001".

Case of IN2  
Send the command "i 0053 0084 0001".

Case of IN3  
Send the command "i 0053 0054 0001".

Case of IN4  
Send the command "i 0053 0024 0001".

Move to the branch destination according to the value returned.

Example



Termite 2.6 (by Compuware)  
COM1 19200 bps, 8N1, n  
i 0053 00B4 0001  
22


"00 or 04"  
(Detection of DDC is not OK.)

"22 or 11"  
(Detection of DDC is OK)

Go to check item (64)

Go to check item (65)

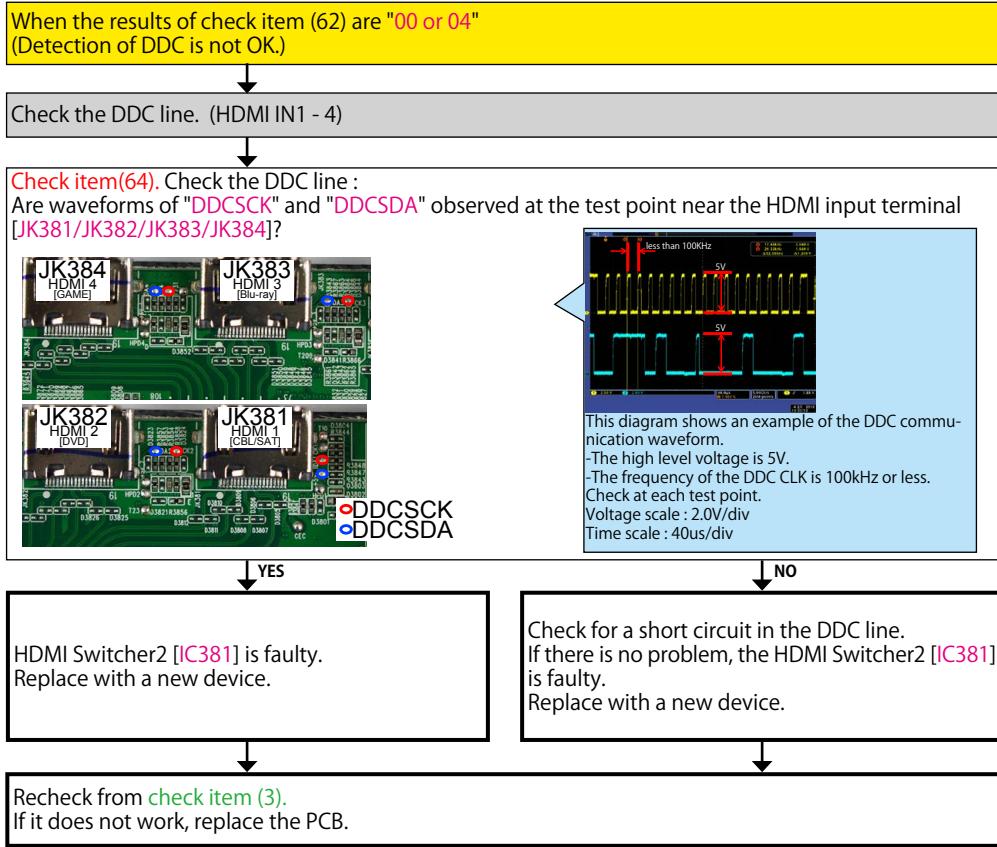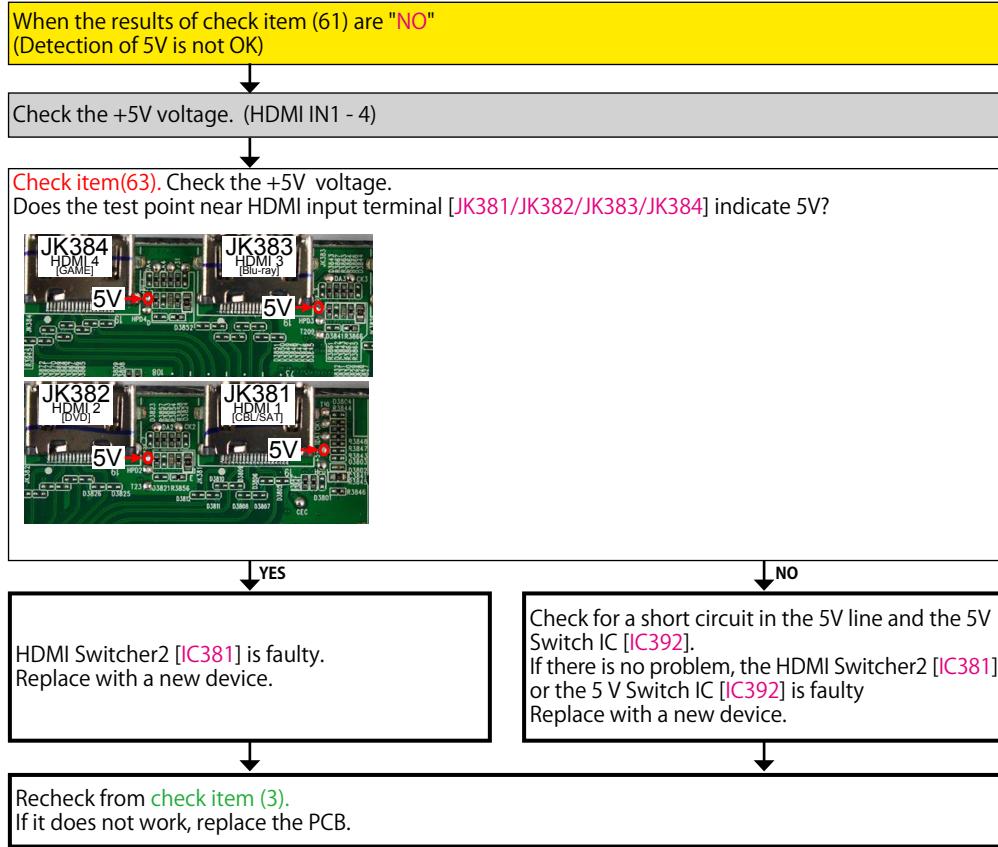

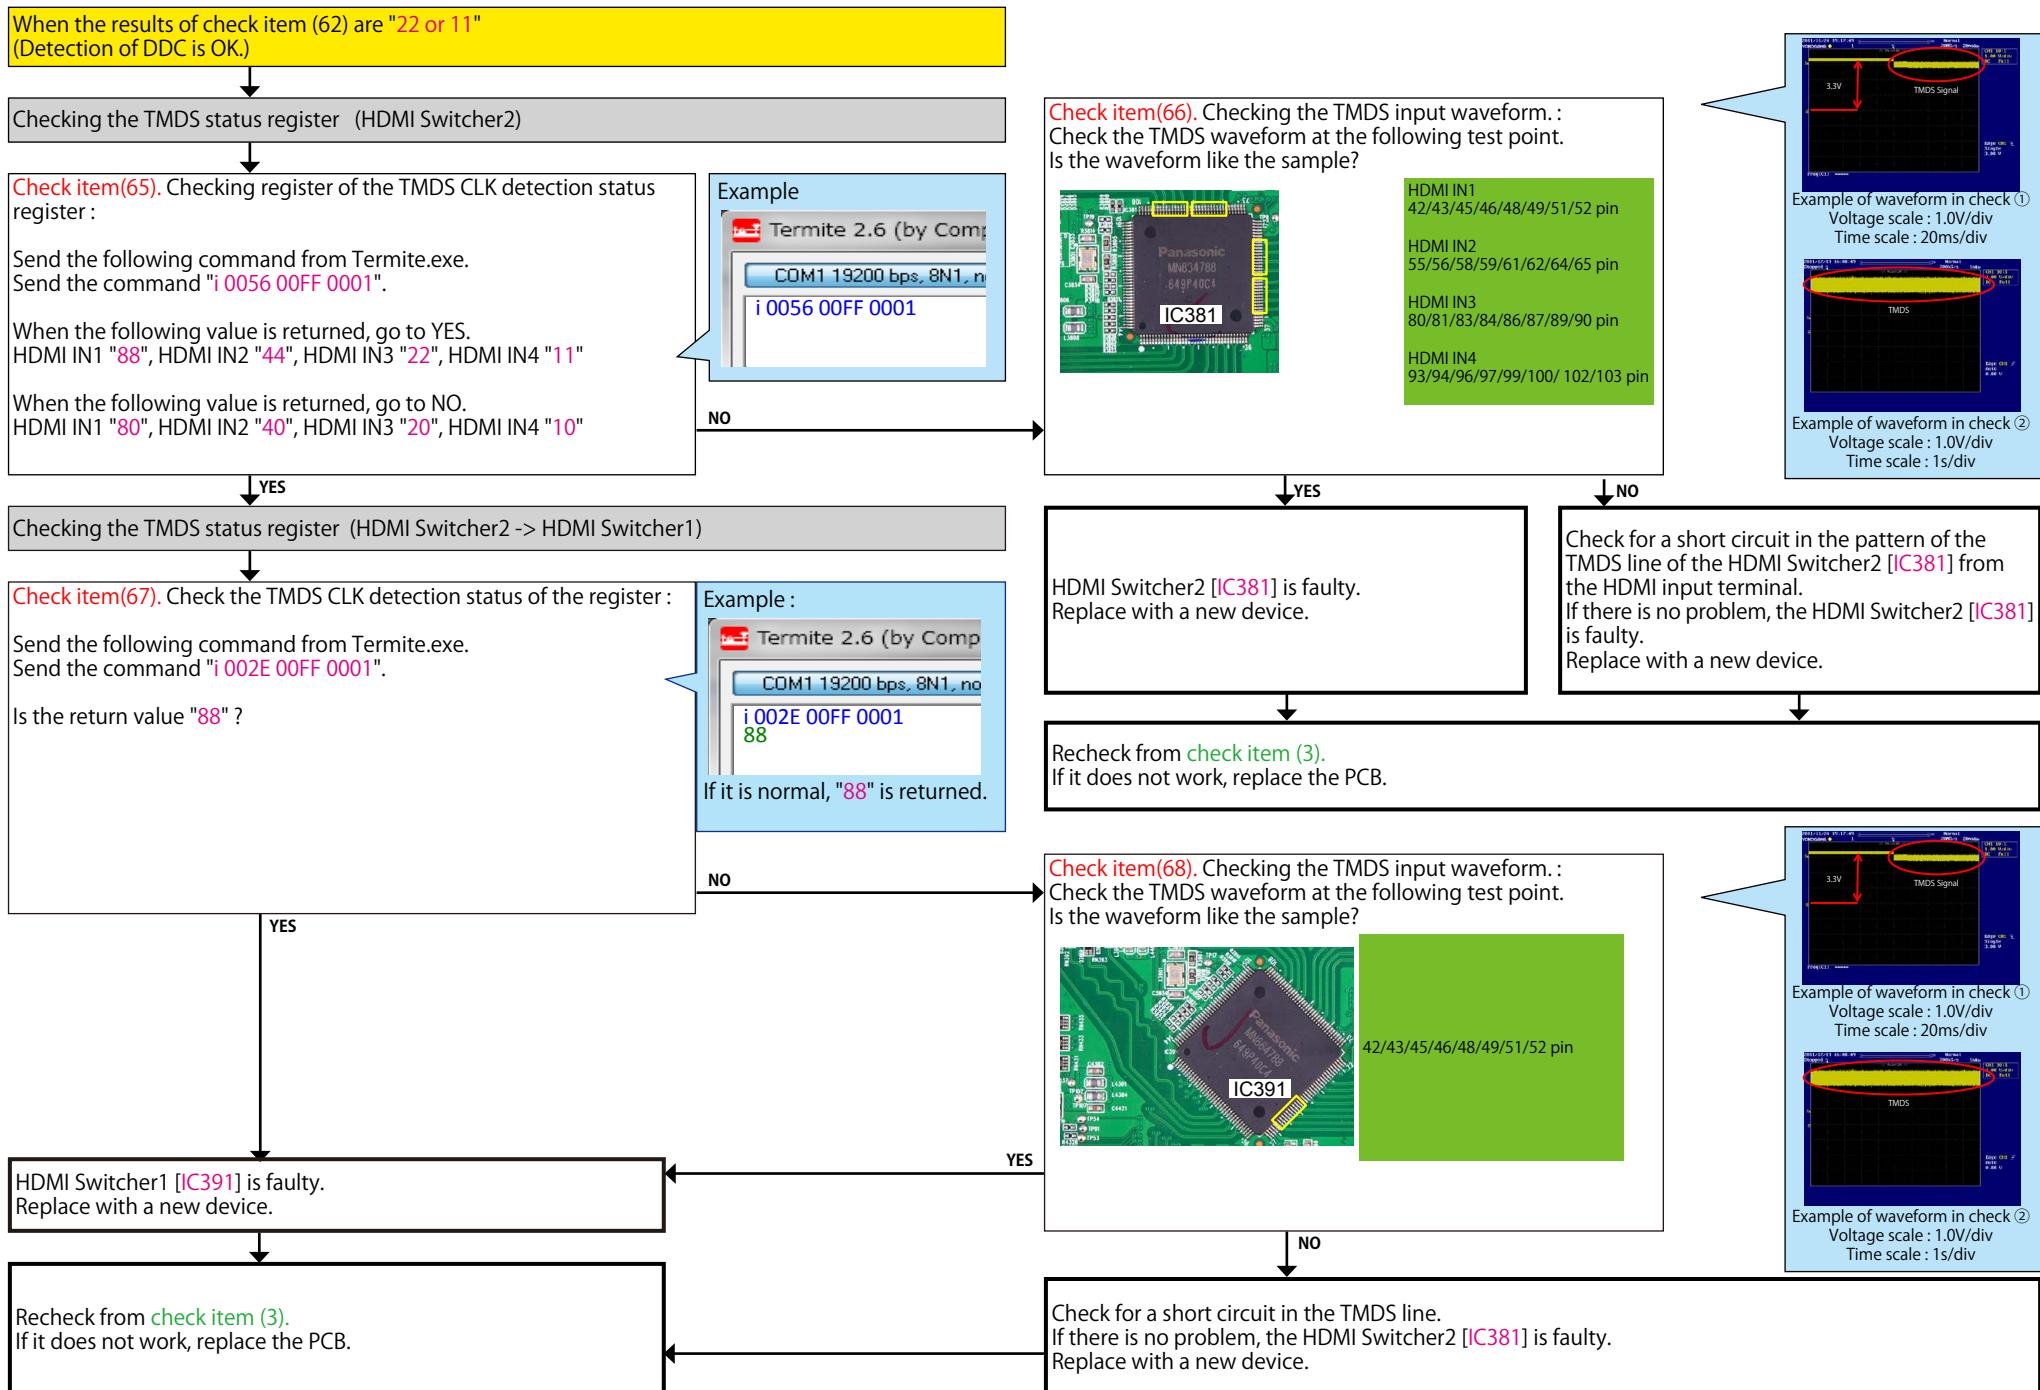

### 3-16. Tx failure detection procedure

Check the output terminal.

**Check item(69).** Check the video output port for failure. :  
Check the Monitor 1 output video signal is correct.

After checking the Monitor 1, change the HDMI cable connection from OUT1 to OUT2.  
Turn off the AV AMP and turn it on again.  
To check under the same conditions, use the same procedure as that for checking Monitor 1 when checking the Monitor 2 output.

No video signal is output from both Monitor 1 and Monitor 2.


Also, No video signal is output from Monitor 1 only.

→ Go to [check item \(70\)](#)

No video signal is output from Monitor 2 only.

→ Go to [check item \(79\)](#)

Checking operation between the HDMI (SW) device and the HDMI device (Tx).  
Checking operation between the HDMI (Tx) device and TV.

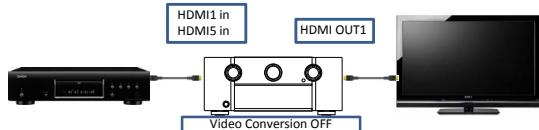

Checking the TMDS status register (Switcher1/2 -> HDMI Tx)

**Check item(70).** Check the TMDS CLK detection status of the register.

Send the following command from Termite.exe.

Send the command "i 0006 00FF 0001".

When checking the signal path from HDMI1 to HDMI OUT1

"72" : Go to YES.

"74" : Go to No.

When checking the signal path from HDMI5 IN to HDMI OUT1

"71" : Go to YES.

"74" : Go to No.

NO


**Check item(71).** Checking the TMDS input.:  
TMDS waveform at the following points.




HDMI IN1  
124/125/127/128/130/131/133/134 pin  
  
HDMI IN5  
137/138/140/141/143/144/146/147 pin

YES

The first operation : Checking between Monitor 1 and the TV.  
Go to [check item \(69\)](#)  
Next operation : Checking between Monitor 2 and the TV.  
Go to [check item \(76\)](#)

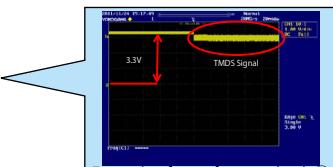

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 20ms/div

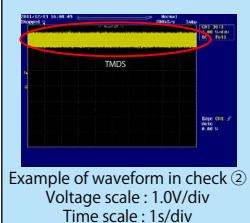

Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 1s/div

HDMI Tx [IC431] is faulty.  
Replace with a new device.

YES

Recheck from [check item \(4\)](#).  
If it does not work, replace the PCB.

Case of HDMI IN1  
HDMI Switcher2 [IC381] is faulty.  
Replace with a new device.

Case of HDMI IN5  
HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

Checking between Monitor1 and the TV.

Connect Monitor1 to the TV and check the following items with the TV turned on.

Checking the HPD/RXSENSE status register. (HDMI Tx -> Monitor)

**Check item(72).** Check the HPD and RXSENSE register value of the HDMI Tx device. :  
Send the following command from Termite.exe.

Send the command "i 0000 0040 0001".

Move to the branch destination according to the value returned.

Example

**Termite 2.6 (by Compu)**  
COM1 19200 bps, 8N1, no H  
i 0000 0040 0001

"30"

(Detection of HPD is OK / Detection of RXSENSE is OK )

Go to [check item \(73\)](#)

"10"

(Detection of HPD is OK / Detection of RXSENSE is not OK )

Go to [check item \(76\)](#)

"20"



(Detection of HPD is not OK / Detection of RXSENSE is OK )


Go to [check item \(77\)](#)


"00"


(Detection of HPD is not OK / Detection of RXSENSE is not OK )




Go to [check item \(78\)](#)

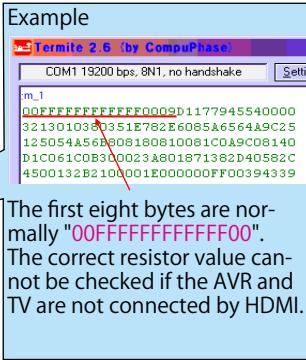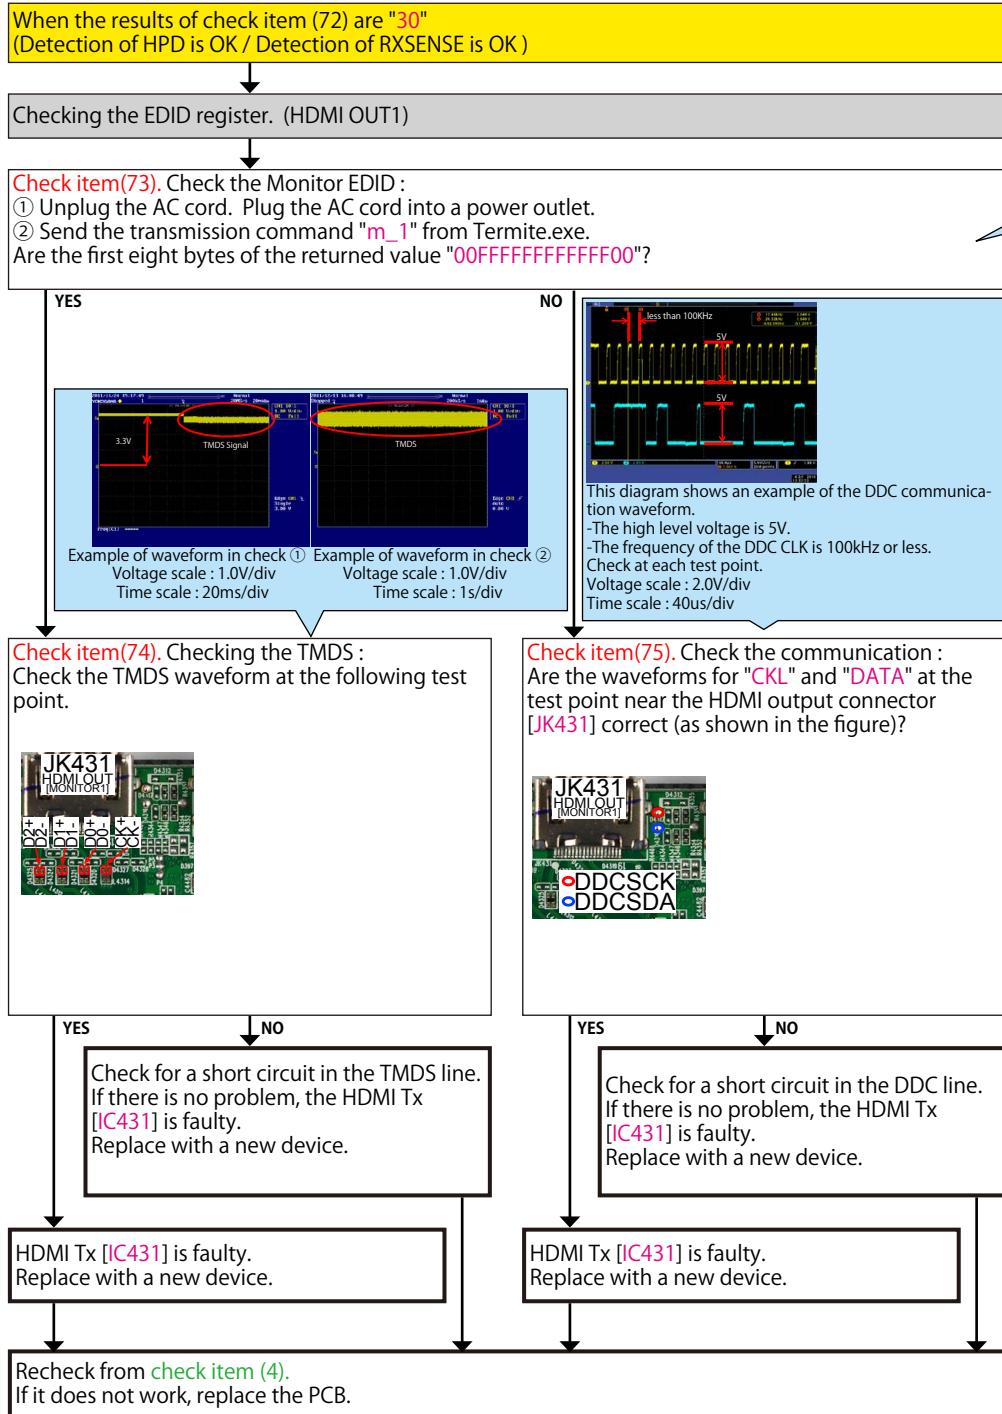

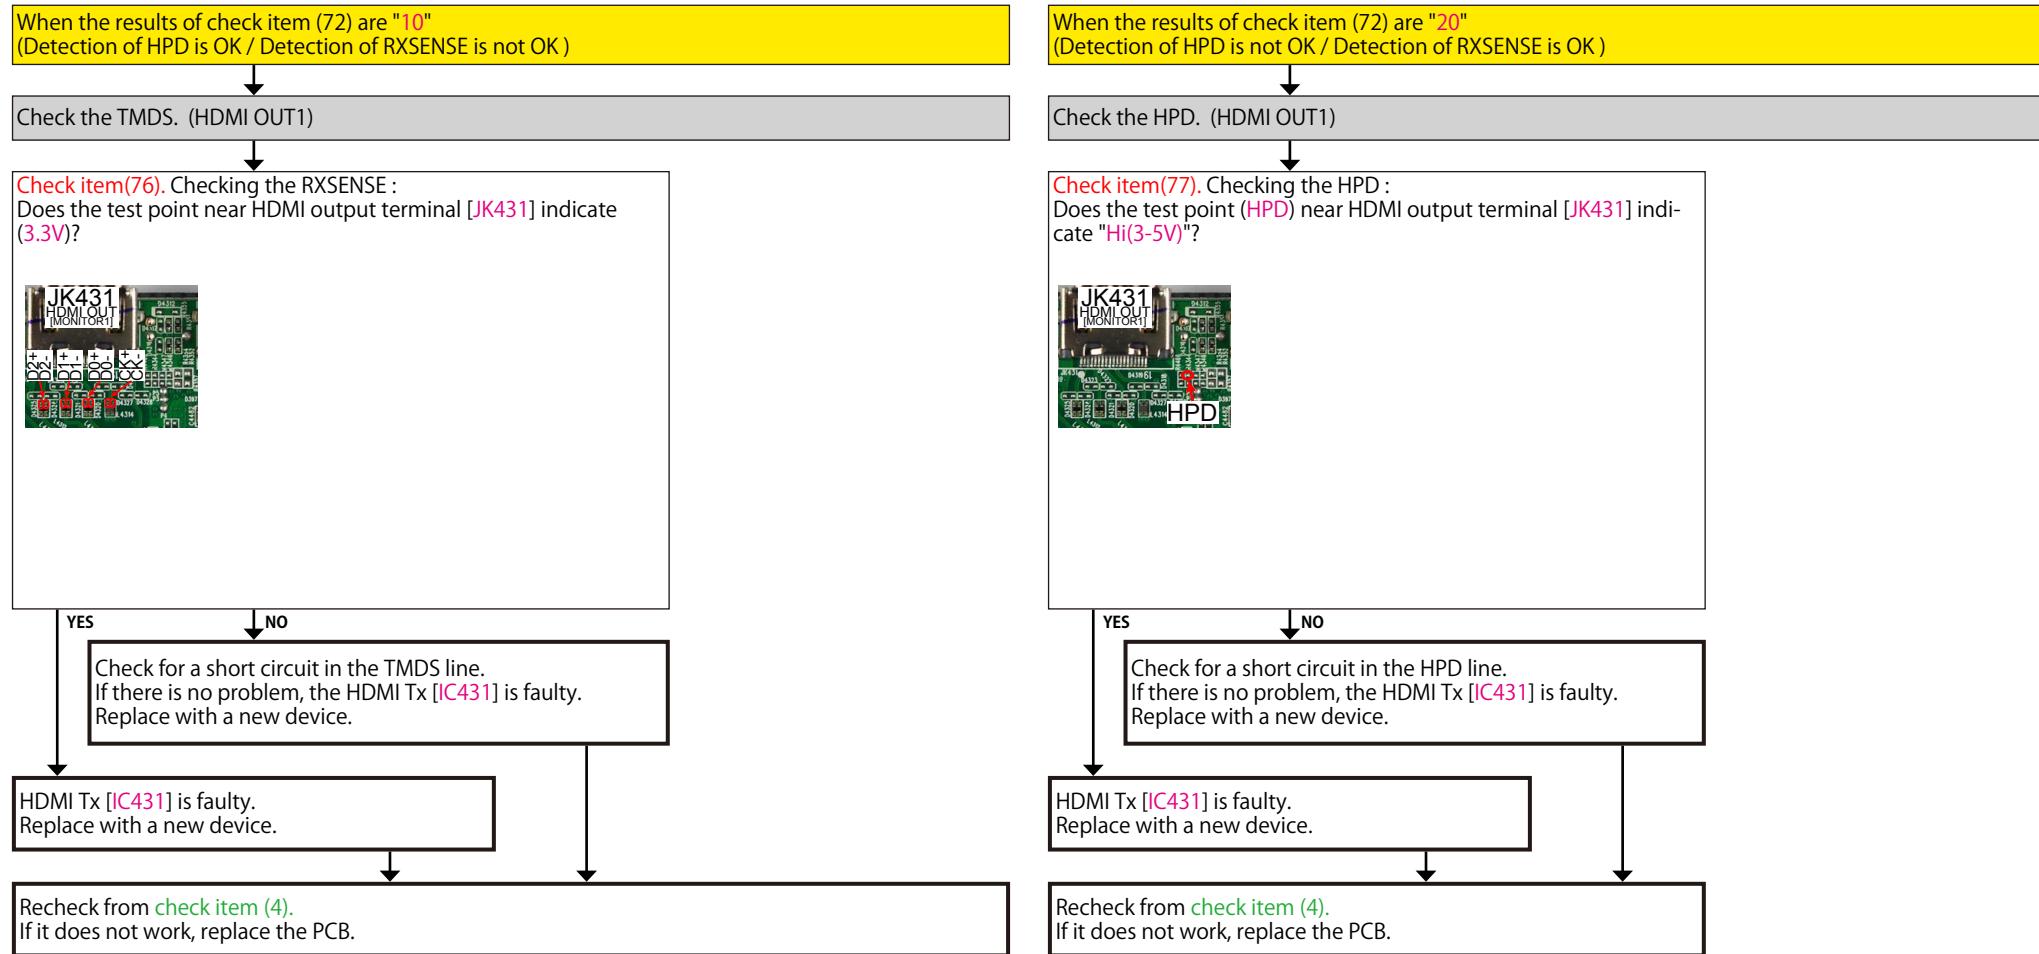

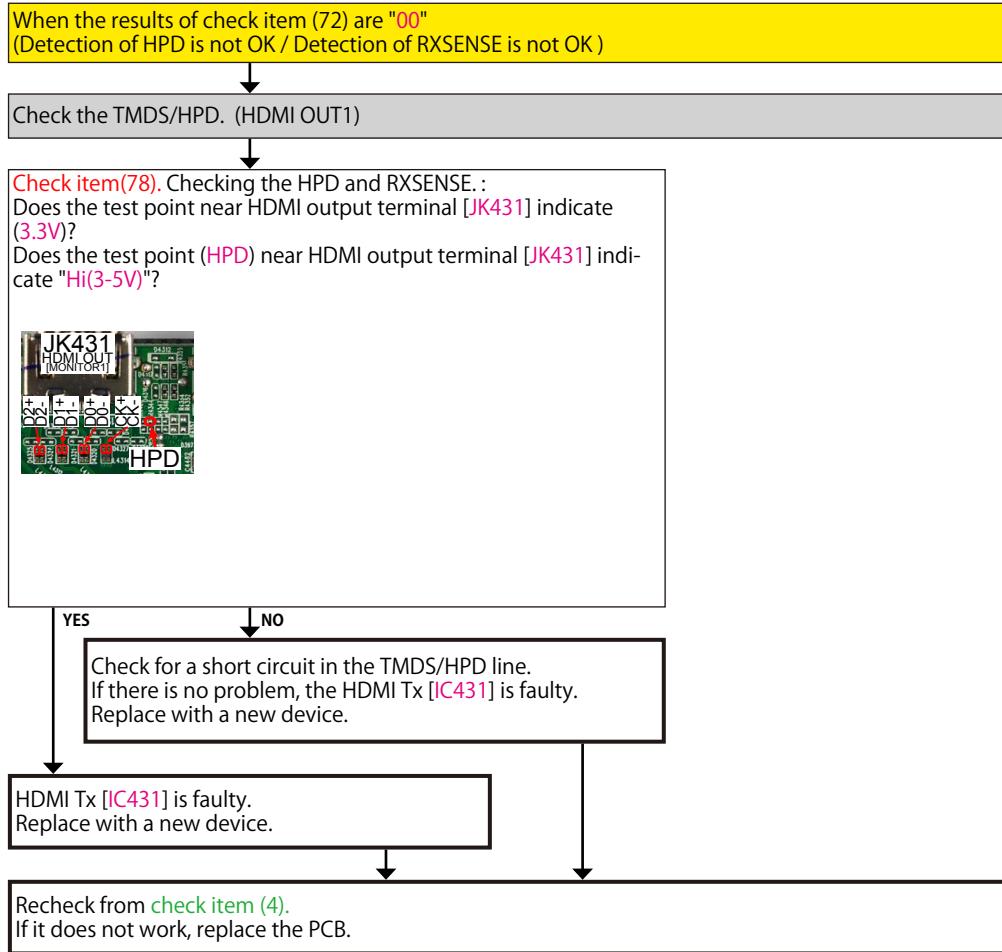

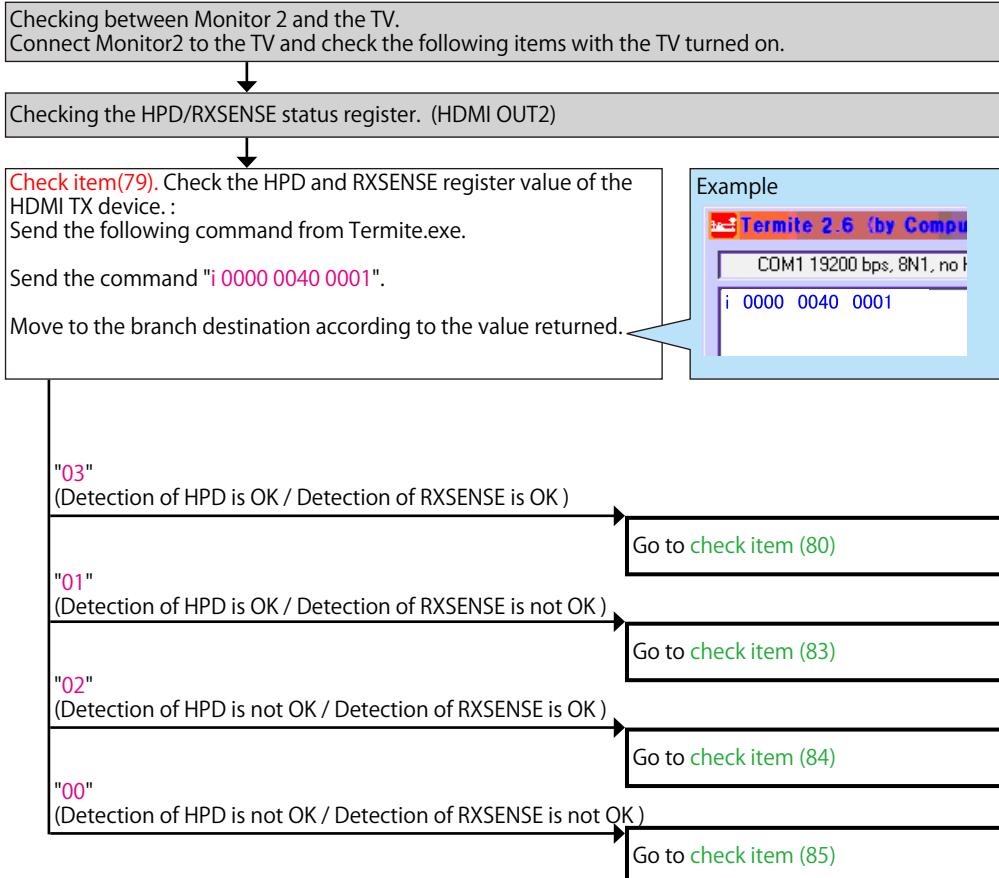

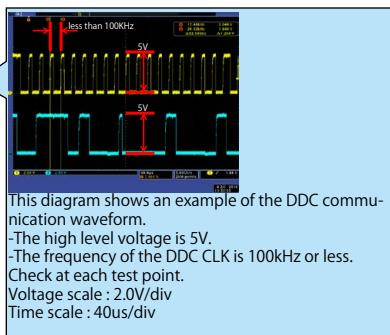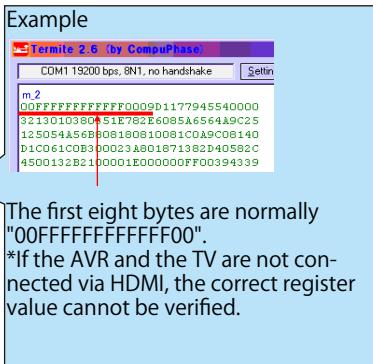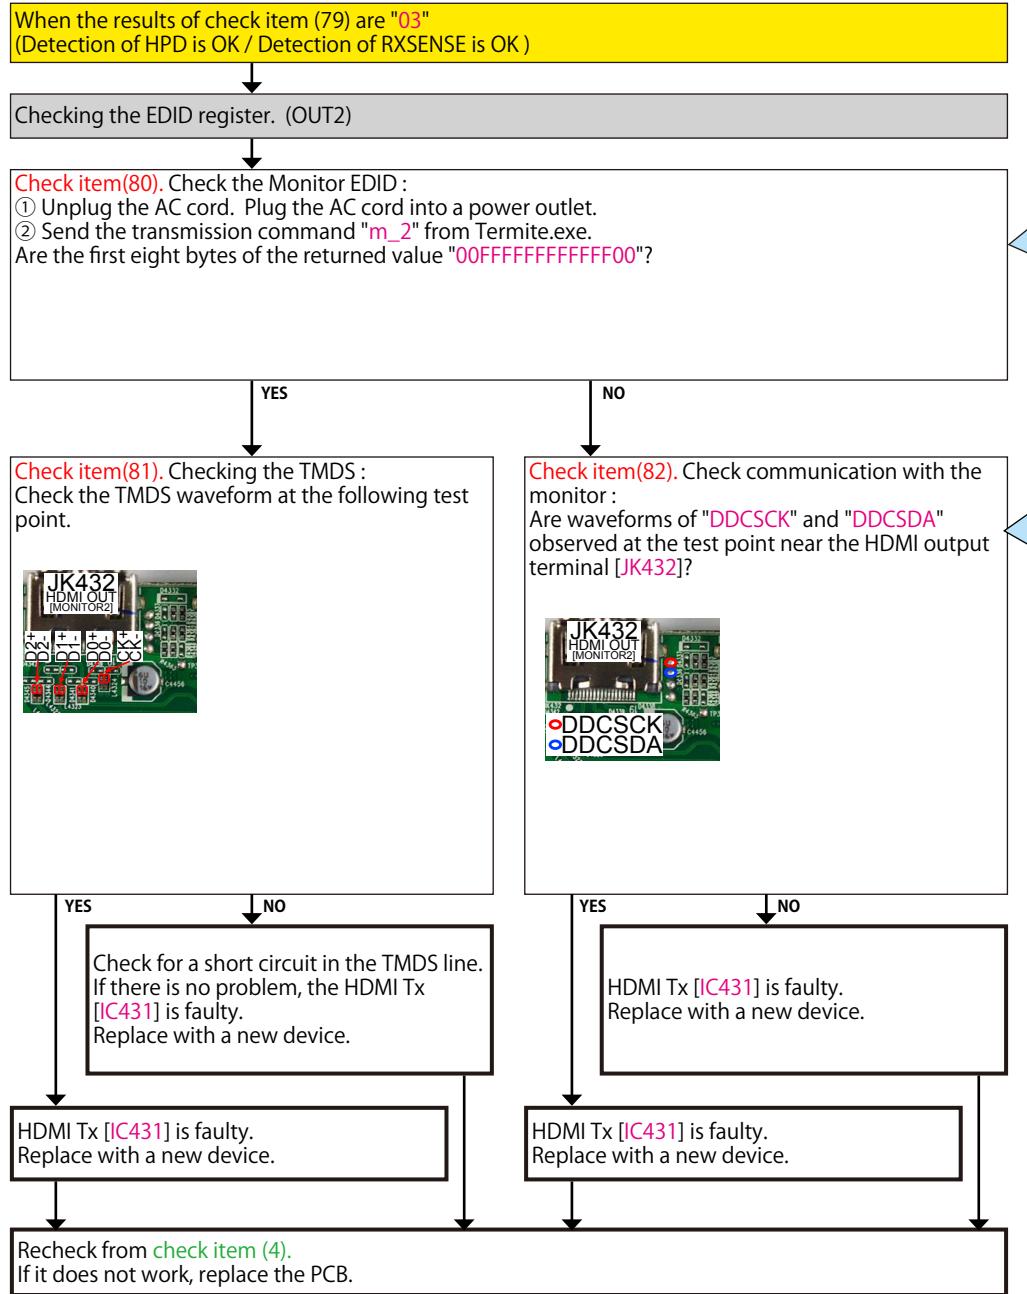

When the results of check item (79) are "01"  
(Detection of HPD is OK / Detection of RXSENSE is not OK)

Check the RXSENSE. (OUT2)

**Check item(83). Checking the RXSENSE :**  
Does the test point of RXSENSE close to the HDMI output terminal [JK432] indicate the (3.3V)?



YES      NO

Check for a short circuit in the TMDS line.  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.

HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from [check item \(4\)](#).  
If it does not work, replace the PCB.

When the results of check item (79) are "02"  
(Detection of HPD is not OK / Detection of RXSENSE is OK)

Check the HPD. (OUT2)

**Check item(84). Checking the HPD :**  
Does the voltage of HPD test point close to the HDMI output terminal [JK432] indicate Hi (3-5 V)?




YES      NO

Check for a short circuit in the HPD line.  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.

HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from [check item \(4\)](#).  
If it does not work, replace the PCB.

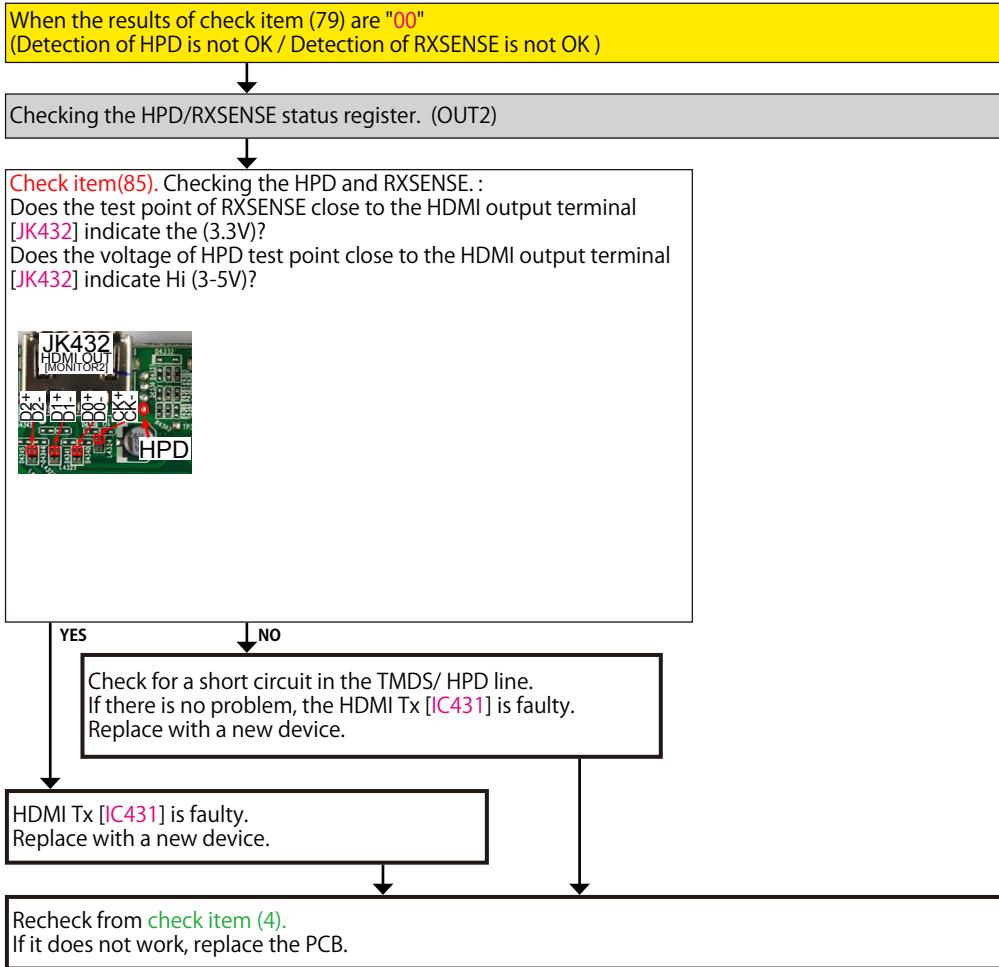

### 3-17. Front HDMI Buffer (AD8195) failure detection procedure


Checking operation between the HDMI (Front HDMI Buffer) and the player



※ In order to check, connect the player to the HDMI terminal and configure the player as AVR source. Check the sound output while turning on the player.

Check the power supply voltage. (Front HDMI Buffer)

**Check item(86).** Check the power supply voltage. : Does the power supply voltage of the Front HDMI FFC base [CN431] indicate the correct voltage (5V)? The test points are as follows.

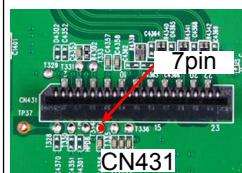

YES

NO

**Check item(87).** Check the power supply voltage. : Check the FFT SW [Q1108] and peripheral pattern. If there is no problem, remove the Front HDMI FFC from the substrate and measure the voltage at the test point of [check item \(83\)](#). Is the power supply voltage correct (5 V)?

YES

NO

Front HDMI Buffer [IC101] is faulty. Replace with a new device.

Replace the FET SW [Q1107] and recheck from [check item \(83\)](#). If it does not work, replace the PCB.

Recheck from [check item \(4\)](#). If it does not work, replace the PCB.

Checking the +5V/DDC status register (Front HDMI Buffer)

**Check item(88).** Checking the 5V status register : Send the following command from Termite.exe. Send the command "i 0006 00FF 0001".

Example

```
Termite 2.6 (by CompuLab)
COM1 19200 bps, 8N1, n
i 0006 00FF 0001
F8
```

Check the value. Move to the branch destination according to the value returned.

"78 or 70"  
(Detection of 5V is not OK.)

Go to [check item \(90\)](#)

"F8 or F0"  
(Detection of 5V is OK)

**Check item(89).** Checking the status register : Send the following command from Termite.exe. Send the command "i 0003 00B4 0001".

Example

```
Termite 2.6 (by CompuLab)
COM1 19200 bps, 8N1, n
i 0003 00B4 0001
22
```


Check the value. Move to the branch destination according to the value returned.


"00 or 04"  
(Detection of DDC is not OK.)

Go to [check item \(91\)](#)

"22"  
(Detection of DDC is OK)

Go to [check item \(92\)](#)

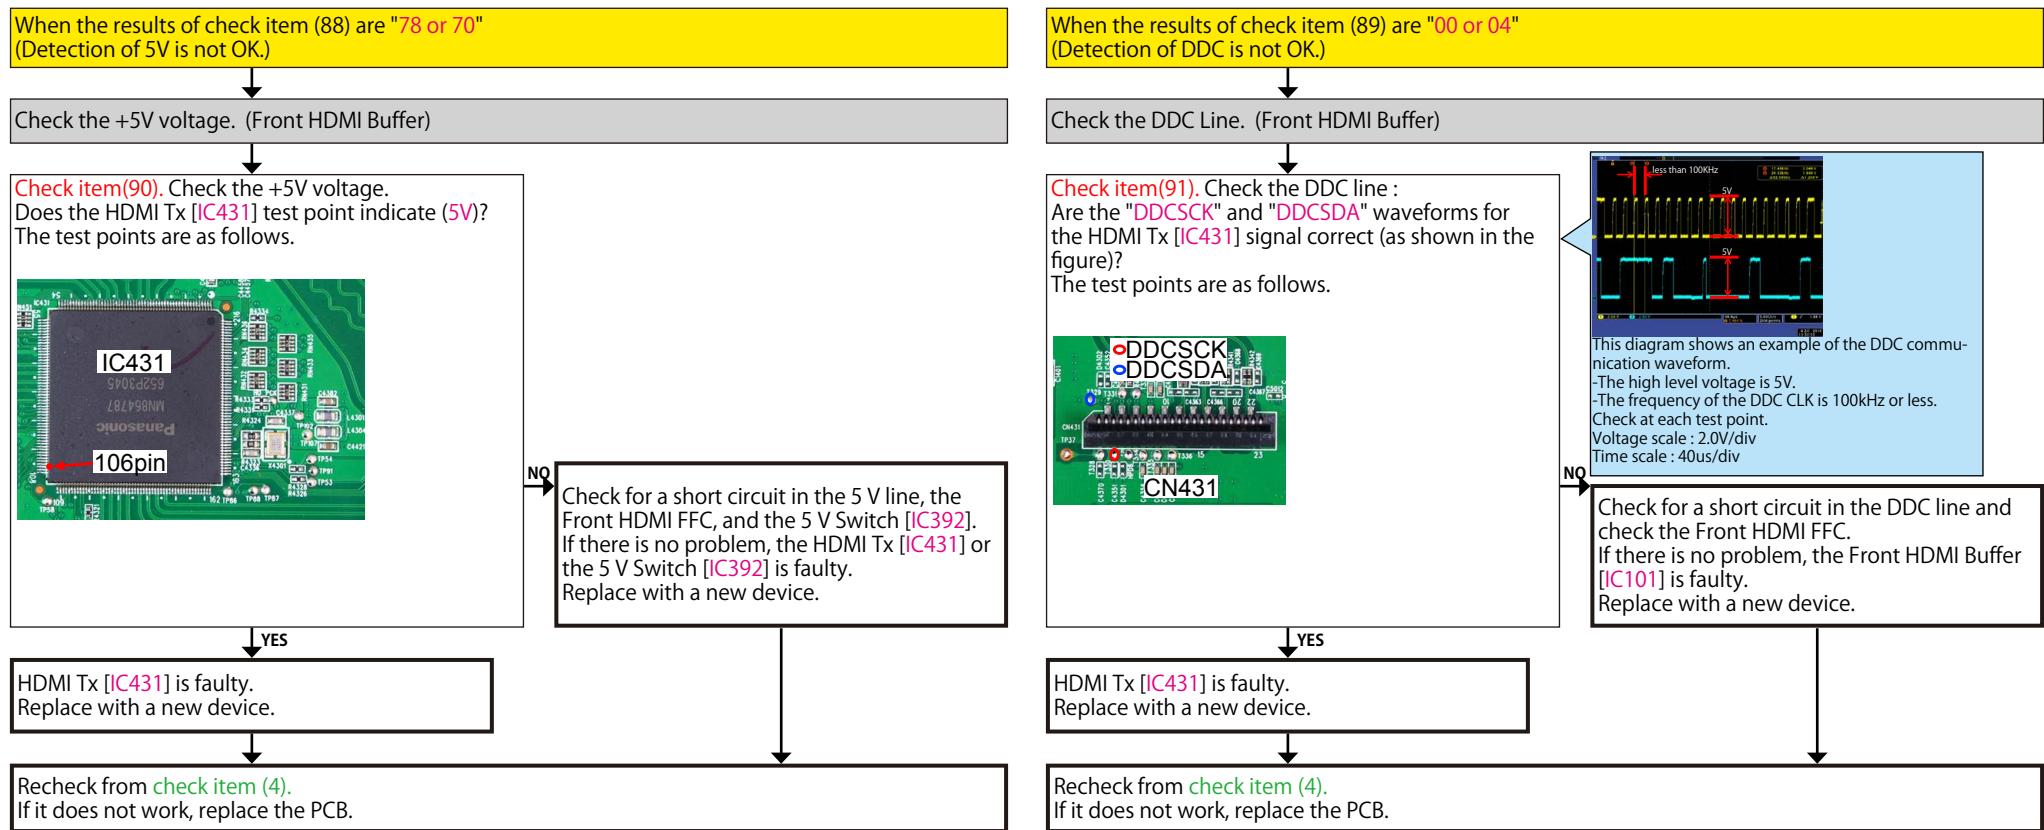

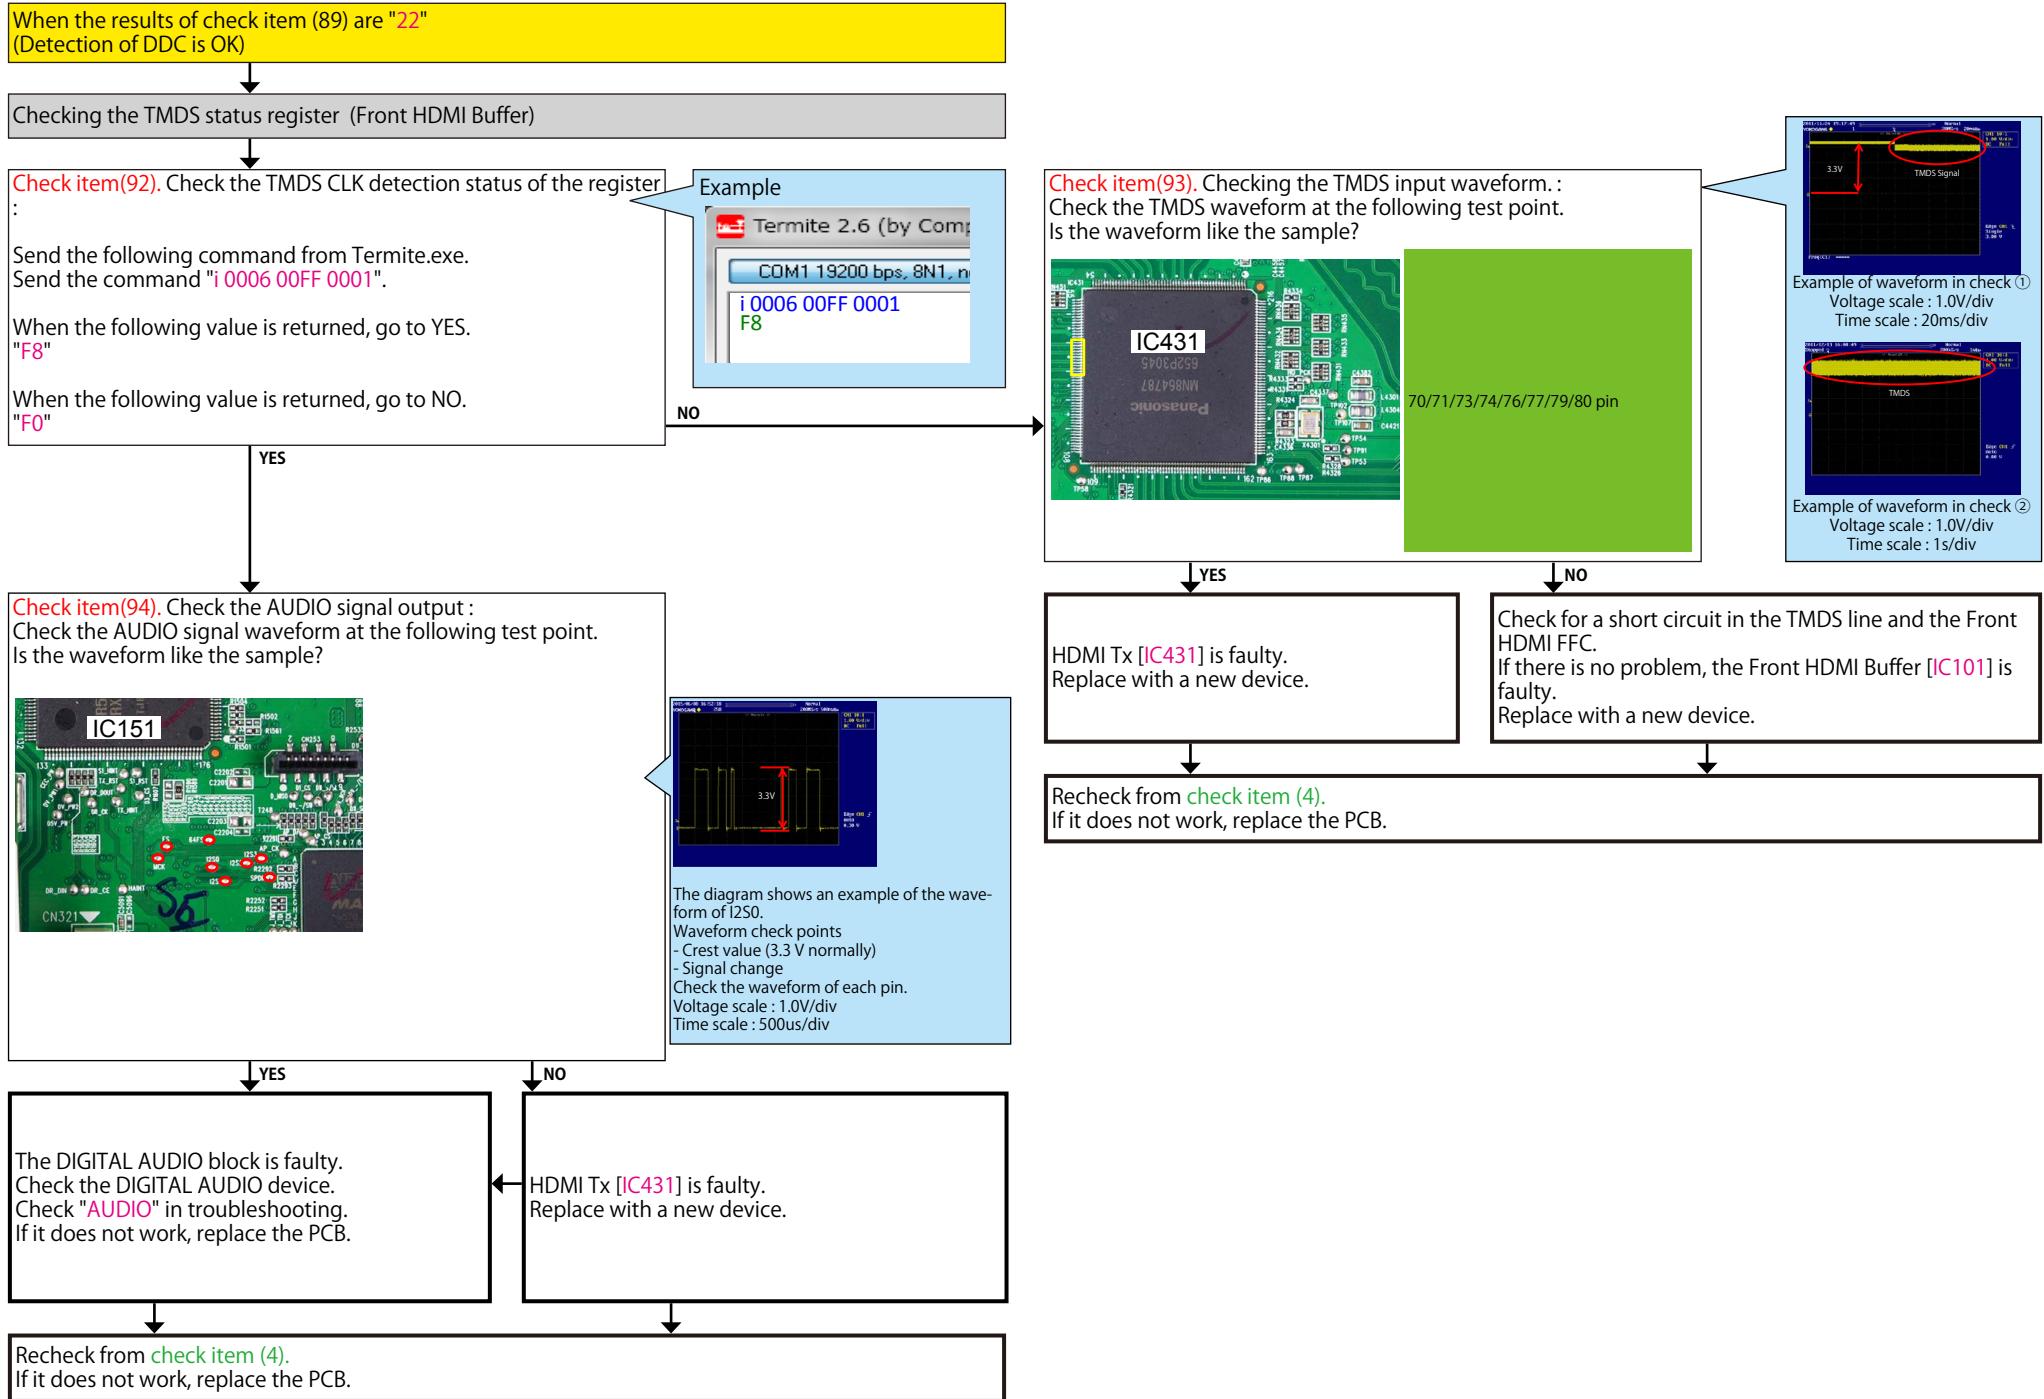


### 3-18. GUI and PLD failure detection procedure

Check item(95). Does a video signal come from HDMI OUT to TV correctly? :



Turn Video Conversion "ON" on the setup menu.  
(SETUP MENU-> Video-> Output Settings-> Video Conversion = On)  
When the "SETUP" button on a remote control is pressed, is "MENU" displayed on TV which is connected to the HDMI output terminal on the AVR?

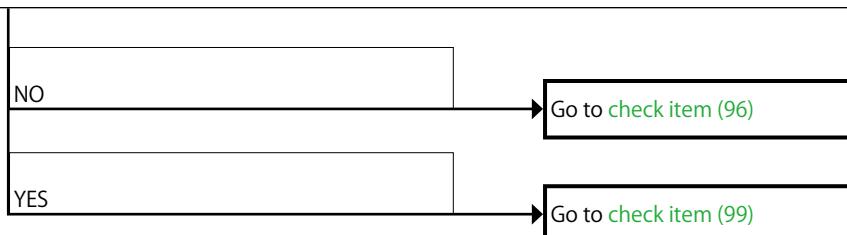


When the results of check item (95) are "NO"  
(When the menu display is not OK)

Check the Video signal line. (GUI -> HDMI Tx)

Check item(96). Check the format of the resistor video signal :

Send the following command from Termite.exe.  
Send the command "i 0020 0070 0001".

Is the return value "22/21/20/1F/15/14/13/11/10/06/05/04/02" ?

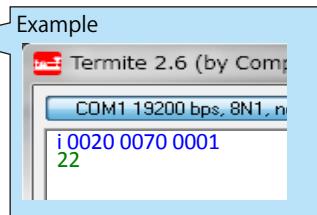



NO

HDMI Tx [IC431] is faulty.  
Replace with a new device.


Recheck from check item (5).  
If it does not work, replace the PCB.

Check the Video signal line. (GUI -> PLD)

Check item(97). Check the GUI video signal line from the HDMI Tx :  
Check the video signal waveform at the following test point.  
Is the waveform like the sample?

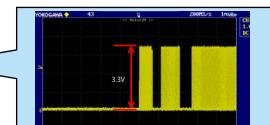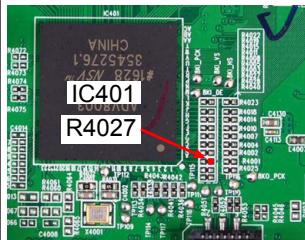

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 1ms/div

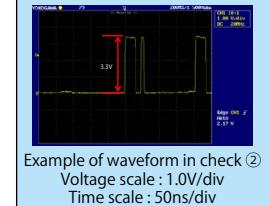


Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 50ns/div

Check the peripheral pattern between the GUI [IC401] and PLD [IC421].  
If there is no problem, the GUI [IC401] is faulty.  
Replace with a new device.


Recheck from check item (5).  
If it does not work, replace the PCB.

Check the Video signal line. (PLD -> HDMI Tx)

Check item(98). Check the HDMI Tx video signal line from the PLD :  
Check the video signal waveform at the following test point.  
Is the waveform like the sample?

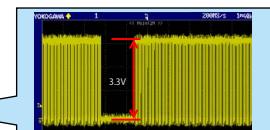

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 1ms/div

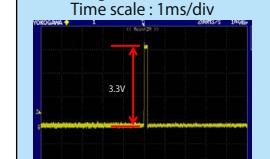

Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 1us/div

YES


HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (5).  
If it does not work, replace the PCB.

NO

Check the peripheral pattern between the PLD [IC421] and HDMI Tx [IC431].  
If there is no problem, the PLD [IC421] is faulty.  
Replace with a new device.


When the results of check item (95) are "YES"  
(When the menu display is OK)

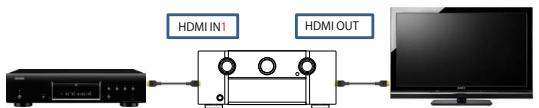


Turn Video Conversion "ON" on the setup menu.  
(SETUP MENU-> Video-> Output Settings-> Video Conversion = On)  
In order to check, connect the player to the HDMI terminal and configure the player as AVR source.  
Next, turn on the power for the player and TV and start playback on the player.

Check the Video signal line. (HDMI Tx -> PLD)

Check item(99). Check the PLD video signal line from the HDMI Tx :  
Check the video signal waveform at the following test point.  
Is the waveform like the sample?

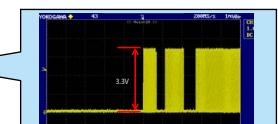

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 1ms/div

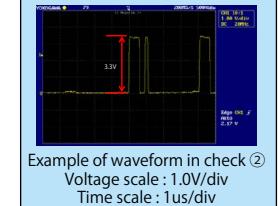

Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 1us/div

YES


Check the peripheral pattern between the HDMI Tx [IC431] and PLD [IC421].  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.

NO


Recheck from [check item \(5\)](#).  
If it does not work, replace the PCB.

Check the Video signal line. (PLD -> GUI)

Check item(100). Check the GUI video signal line from the PLD :  
Check the video signal waveform at the following test point.  
Is the waveform like the sample?

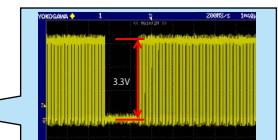

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 1ms/div

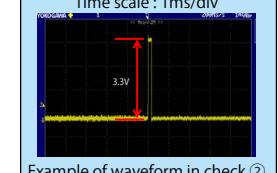

Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 1us/div

YES




GUI [IC401] is faulty.  
Replace with a new device.

NO

Check the peripheral pattern between the PLD [IC421] and GUI [IC401].  
If there is no problem, the PLD [IC421] is faulty.  
Replace with a new device.

Recheck from [check item \(5\)](#).  
If it does not work, replace the PCB.

## 4. Device implementation location

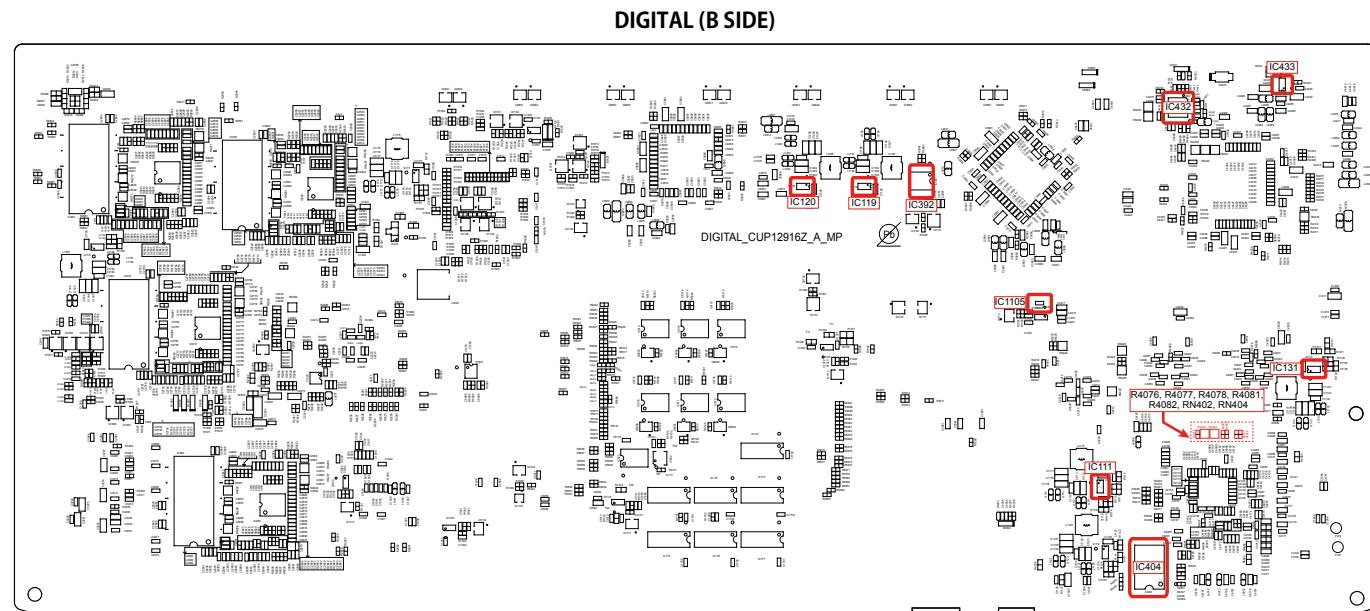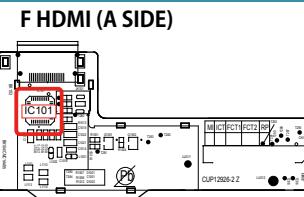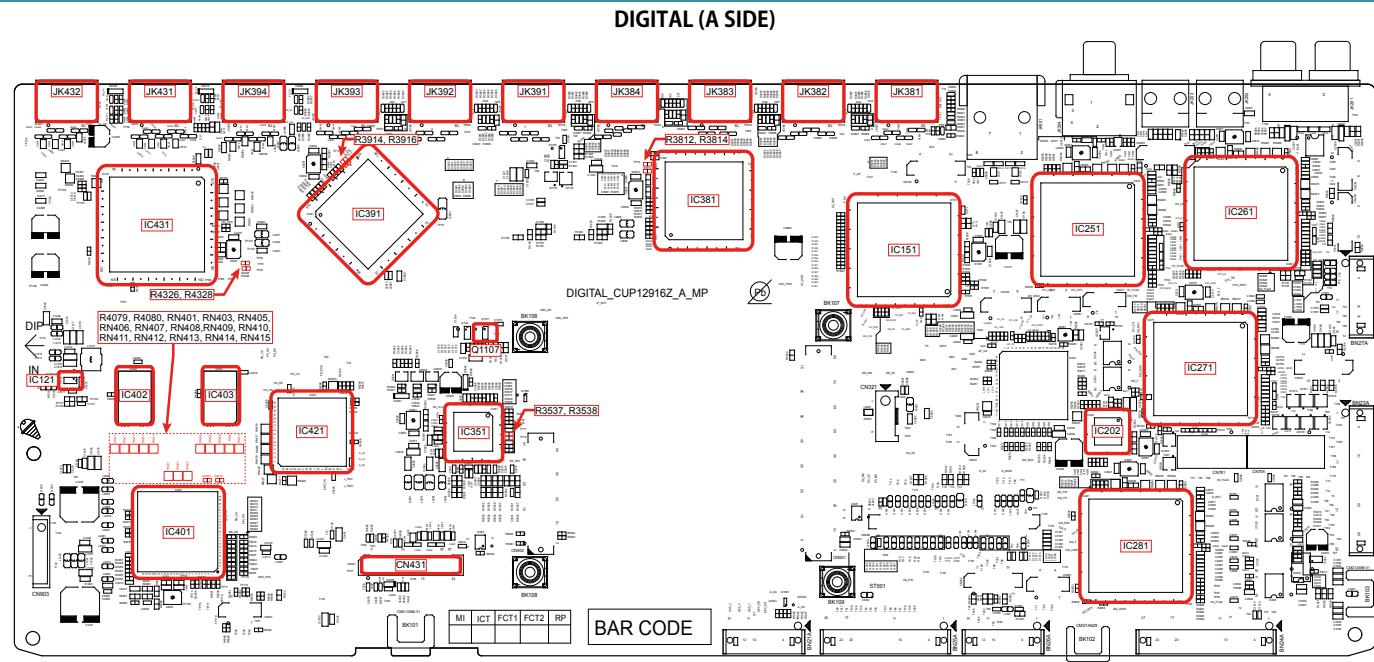

Caution in servicing

Electrical







Mechanical

Repair Information

Updating

# CLOCK FLOW & WAVE FORM IN DIGITAL BLOCK

## WAVE FORM

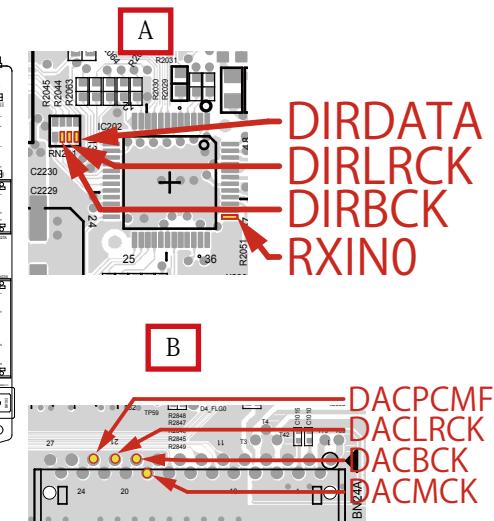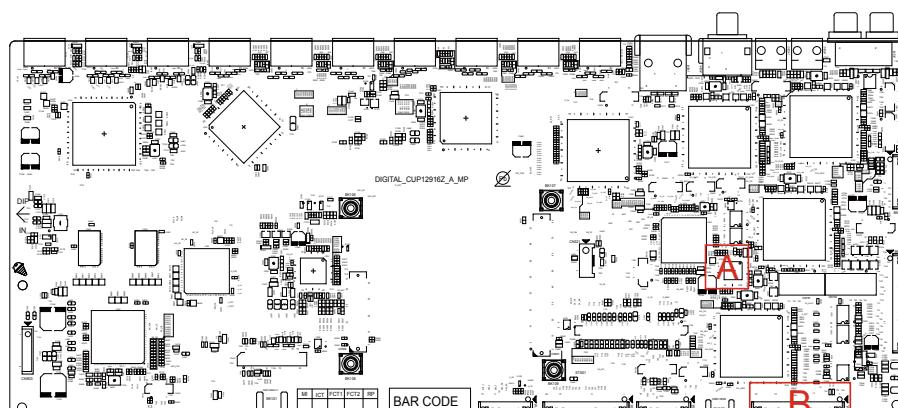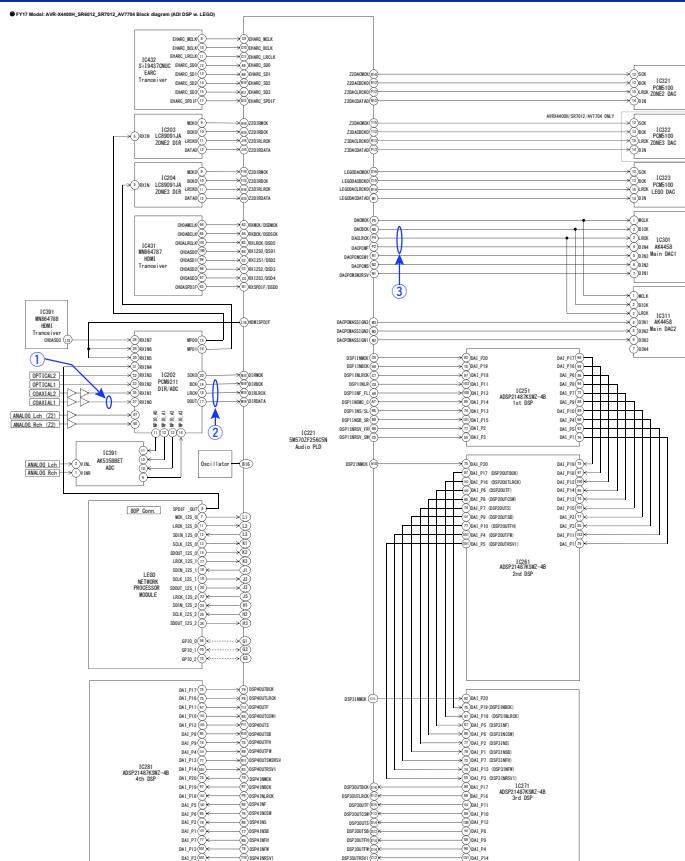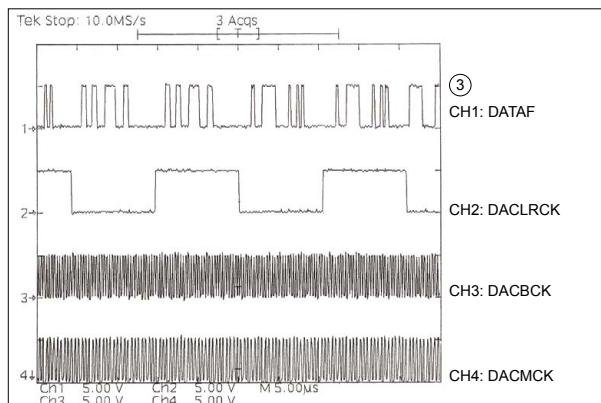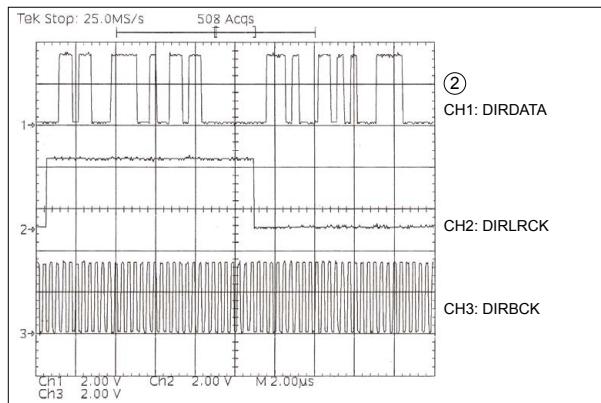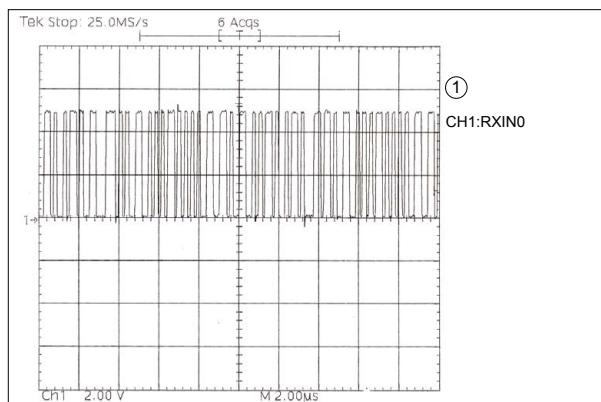

Caution in servicing

Electrical

Mechanical

Repair Information

Updating

# SPECIAL MODE

## Special mode setting button


※ No. 1 - 4, 6 - 8: While holding down buttons "A", "B" and "C" simultaneously, press the power button to turn on the power.

※ No. 5, 9, 10: While the power is on, hold down buttons "A", "B", and "C" for at least 3 seconds.

No.	Mode	Button A	Button B	Button C	Descriptions
1	Version Display (u-COM / DSP Error Display)	DIMMER	STATUS	-	Displays the version of firmware such as the main firmware or DSP. Errors that have occurred are displayed. (See <a href="#">1. Version Display Mode</a> )
2	PANEL / REMOTE LOCK Selection Mode	BACK	ENTER	-	Start this unit in the PANEL/REMOTE LOCK selection mode so that PANEL LOCK and Remote Lock can be switched between On and Off. (See <a href="#">2. PANEL / REMOTE LOCK Selection Mode</a> ) <ul style="list-style-type: none"> <li>•PANEL LOCK Mode (with Volume)</li> <li>•Disables reception from all keys and encoders on the front panel except the power button (including the volume).</li> <li>•PANEL LOCK Mode (without Volume)</li> <li>•Disables reception from all keys and encoders on the front panel except the power button and volume encoder.</li> <li>•PANEL LOCK mode is turned off</li> </ul>
3	Selecting the Mode for Service-related	ZONE SELECT	BACK	-	This is a display for turning on each service-related mode. Service-related modes:No. 3-1 - No. 3-5
3-1	Check the Video/Audio path Mode	↑	↑	-	This is a special mode for service confirmation used during repair work to simplify the confirmation work for the Audio channel / video channel. (See <a href="#">Service Path Check Mode</a> )
3-2	232C Standby Clear Mode	↑	↑	-	Switches from 232C standby mode to normal standby mode. (See <a href="#">3-2. 232C Standby Clear Mode</a> )
3-3	Operation Info Mode	↑	↑	-	Displays the accumulated operating time of the unit, the number of times the power was switched on, and the number of occurrences of each protection. (See <a href="#">3-3. Operation Info Mode</a> )
3-4	TUNER STEP Mode (U and N model only)	↑	↑	-	Enables reception STEP of the ANALOG TUNER to be changed. (See <a href="#">3-4. TUNER STEP mode (U, N only)</a> )
4	Protection Pass Mode	M-DAX	DYNAMIC EQ	DYNAMIC VOL	Enables the power to be turned on when protection detection is disabled. (See <a href="#">4. Protection Pass Mode</a> )
5	Network Initialization Mode	BACK	ENTER	-	Network module backup data is initialized. (See <a href="#">5. Network Initialization Mode</a> )
6	User Initialization Mode	GAME	INFO	-	Initialize the backup data for the MCU and network module. (Settings for the Installer Setup are not initialized.)
7	Factory Initialization Mode	MOVIE	MUSIC	-	Initialize the backup data only for MCU. (Settings for the Installer Setup are initialized) (Network function settings are not initialized.) (See <a href="#">Initializing This Unit</a> )
8	Clearing the Operation Info	DYNAMIC EQ	DYNAMIC VOL	-	Clear the accumulated operating time of the unit, the number of times the power was switched on, and the number of occurrences of each protection. (See <a href="#">6. Clearing the Operation Info</a> )
9	HDMI Diagnostics Mode	BACK	CURSOR ▲		This mode is used to identify and solve the cause when there is a connectivity issue with this unit and an HDMI device. For details on the operating methods and diagnosis procedures, see the HDMI Diagnostics and Troubleshooting guide issued on SDI.
10	Log Capture feature	MOVIE	INFO	-	Acquires the Network Module log. The log is deleted when the Network Module is deleted. (See <a href="#">7. Log Capture feature</a> )

**NOTE:** If the two indicator lights at the bottom right of the FLD display "0.0--", this means that the unit has entered the special developer's mode. In this case, the RS-232C communication is not available.

To release this special mode, press and hold the "DIMMER" and "STATUS" buttons for 3 seconds or more while the power is ON. The RS-232C communication is available when the two indicator lights at the bottom right of the FLD go out.

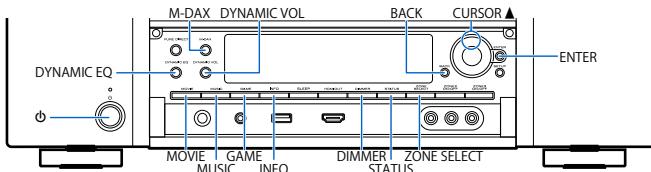

## 1. Version Display Mode

### 1.1. Actions

Version information is displayed when the device is started in this mode.

### 1.2. Starting up

While holding down buttons "DIMMER" and "STATUS" simultaneously, press the power button to turn on the power.

then press the "STATUS" button to display the information in section 1.3 on the display.

※ The version list is also displayed on GUI while the version is displayed on the display.

### 1.3. Display Order

Error information(See "1.4. Error display") → ① Model destination information, Serial Number  
 → ② Firmware Package → ③ Main μ-com, Main 1st Boot Loader → ④ DSP1/2/3/4 ROM  
 → ⑤ Audio, Video PLD → ⑥ GUI SFLASH → ⑦ HEOS Version → ⑧ HEOS Build → ⑨ HEOS Module  
 → ⑩ HEOS Configuration → ⑪ HEOS Locale → ⑫ Ether Mac Address → ⑬ WiFi Mac Address  
 → ⑭ BT Mac Address → ⑮ Audyssey App Interface Version

①Model destination information, Serial Number :

L1	AU7704	~
L2	SN-	*****

~ : Region (U, N, K, F)

②Firmware Package :

L1	Firm. Package
L2	Ver. : ****

③Main μ-com, Main 1st Boot Loader :

L1	M : *****
L2	Main FBL : ***

④DSP 1/2/3/4 ROM :

L1	DSP1 : ***
L2	DSP2 : ***

L1	DSP3 : ***
L2	DSP4 : ***

⑤Audio, Video PLD :

L1	Audio PLD : ***
L2	Video PLD : ***

⑥GUI SFLASH :

L1	GUI : ***
----	-----------

⑦HEOS Version :

L1	HEOS Version
L2	* : ***

⑧HEOS Build :

L1	HEOS Build
L2	* : ***

⑨HEOS Module :

L1	HEOS Module
L2	* : ***

⑩HEOS Configuration :

L1	HEOS Config
L2	Development
Production	

⑪HEOS Locale :

L1	HEOS Locale
L2	*****

⑫Ether Mac Address :

L1	*Ether MAC
L2	* : *** - * : ***

⑬WiFi Mac Address :

L1	*Wi-Fi MAC
L2	* : *** - * : ***

⑭BT Mac Address :

L1	*BT MAC Address
L2	* : *** - * : ***

⑮Audyssey App Interface Version :

L1	Audy IFEVer : ***
L2	

## 1.4. Error display

See the table below for descriptions of the displayed errors and countermeasures for these.

If multiple errors occur, only one item is displayed.

The priority order is ②, ③, ④, ⑤, ⑥, ①.


Condition	States	Display	TROUBLE SHOOTING
① Firm Check NG (# : 1/2/3/4)	The model name, brand name and region information written in the firmware are compared to the region settings in the PCB. This error is displayed if the information does not match.  "▲" is displayed as the first character if the firmware is not correct (see the illustrations on the right).	FIRM ERROR  ▲ Mi ***** ▲ Main FBL : ***.*** ▲ DSP# : ***.*** ▲ Audio PLD: ***.*** ▲ Video PLD: ***.*** ▲ GUI : *****	<ul style="list-style-type: none"> <li>Check the resistor for setting the region(R1590/R1589, DIGITAL PCB).</li> <li>Write the firmware for the correct region.</li> </ul>
② IP SCALER NG	An error occurs in Loop back Test of the DDR memory which is performed during the initial setting of i/p Scaler(ADV8003).	IP SCALER ERR 01	<ul style="list-style-type: none"> <li>Check the circuits around the IP SCALER (IC401, DIGITAL PCB) and DDR2 (IC402/IC403).</li> <li>If there appear to be no problems, IC401 or IC402/IC403 is faulty.</li> </ul>
	During the initial setting of i/p Scaler ( ADV8003 ), there is not the reply of the Loop back Test result of the DDR memory .	IP SCALER ERR 02	
③ GUI Serial Flash NG	If the Main CPU version is not supported by the GUI Serial Flash (ADV8003), "▼" is displayed as the first character of the GUI firmware version.	GUI VER. ERROR  ▼ GUI : *****	<ul style="list-style-type: none"> <li>Check the firmware version.</li> </ul>
④ DIR NG	This error is displayed if there is no response from the DIR.	DIR ERROR 01	<ul style="list-style-type: none"> <li>Check the DIR (IC202, DIGITAL PCB) and surrounding circuits.</li> </ul>
⑤ DSP# NG (# : 1/2/3/4)	The DSP FLAG0 port does not enter "Hi" status while booting a DSP code even after resetting DSP.	DSP# ERROR 01	<ul style="list-style-type: none"> <li>Check the DSP (IC251/IC261/IC271/IC281, DIGITAL PCB) and surrounding circuits.</li> </ul>
	The DSP FLAG0 port does not enter "Hi" status before issuing a DSP command.	DSP# ERROR 02	
	Setting WRITE to "Lo" does not set ACK to "Hi" during DSP data reading.	DSP# ERROR 03	
	Setting REQ to "Lo" does not set ACK to "Lo" during DSP data reading.	DSP# ERROR 04	
	Setting WRITE to "Hi" does not set ACK to "Hi" during DSP data writing.	DSP# ERROR 05	
	Setting REQ to "Lo" does not set ACK to "Lo" during DSP data writing.	DSP# ERROR 06	
⑥ EEPROM NG	An error occurred in a checksum of the EEPROM(** is a block address number).	BACKUP ERROR	

## 1.5. Version Display in the Setup Menu

Follow the steps below to display the firmware information.


- (1) Press the "SETUP" button on the remote control.
- (2) Select "General - Information - Firmware".

The version information is displayed as a 16-digit number as shown in the screenshot below.

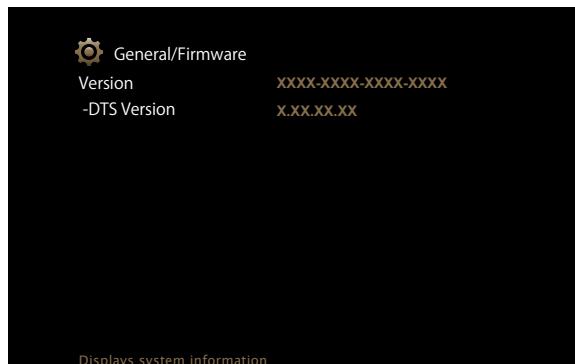

This 16-digit number comprises a part of the version number of each device and module.

Numerics and version numbers correspond as shown below.

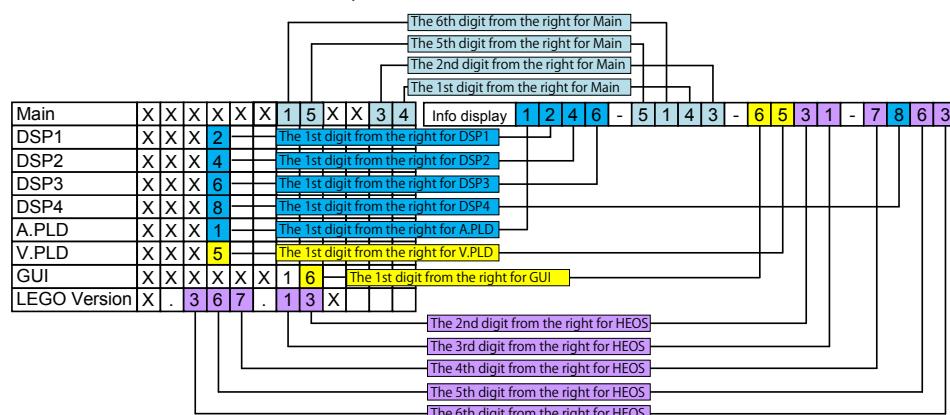

※ The firmware version numbers and this 16-digit version information are written in the Service Information.

※ Replace as follows for the 5th to 7th digits of HEOS version.

X.XXX.X → X.XXX.00X

X.XXX.XX → X.XXX.0XX

X.XXX.XXX → X.XXX.XXX

## 2. PANEL / REMOTE LOCK Selection Mode

### 2.1. Actions

Switch the PANEL LOCK and REMOTE LOCK modes between on and off.

### 2.2. Starting up

While holding down buttons "BACK" and "ENTER" simultaneously, press the power button to turn on the power.

Select the desired mode using the "CURSOR ▼/▲" button, then press the "ENTER" button to confirm.

### 2.3. Displaying and Selecting Each Mode

The information shown on the display switches each time the "CURSOR ▼/▲" button is pressed.

Press the "ENTER" button to set the currently displayed mode and restart the device.

The setting with "\*" is selected for each mode.

①

L1	FP/VOL LOCK	*On
L2	FP LOCK	On

The buttons on the unit and the master volume knob does not function.



②

L1	FP/VOL LOCK	*On
L2	FP LOCK	On

The buttons on the unit does not function.



③

L1	FP LOCK	On
L2	FP LOCK	Off

The PANEL LOCK mode is turned off.



④

L1	FP LOCK	Off
L2	RC LOCK	On

The device cannot be operated by the remote control.



⑤

L1	RC LOCK	On
L2	RC LOCK	*Off

The REMOTE LOCK mode is turned off.

## 3-1. Selecting the Mode for Service-related

### 3-1.1. Actions

Select diagnostic mode (service path check mode), protection history display mode, 232C standby clear mode, Operation Info mode, TUNER STEP mode or Remote ID Setup Mode.

### 3-1.2. Starting up

While holding down buttons "ZONE SELECT" and "BACK" simultaneously, press the power button to turn on the power.

Select the desired mode using the "CURSOR ▼/▲" button, then press the "ENTER" button to confirm.

### 3-1.3. Displaying and Selecting Each Mode

The information shown on the display switches each time the "CURSOR ▼/▲" button is pressed. Press the "ENTER" button to set the currently displayed mode and restart the device.

①

L1	1. SERVICE CHECK
L2	3. RS232C RESET

Service Path Check Mode : See "[DIAGNOSTIC MODE](#)"

The Video and Audio paths can be checked.

This function is convenient for confirming problem paths in the product and checking the paths after repairing.



②

L1	1. SERVICE CHECK
L2	3. RS232C RESET

Switches from 232C standby mode to normal standby mode.



③

L1	3. RS232C RESET
L2	4. OP INFO

Operation Info for the unit can be checked.



④

L1	4. OP INFO
L2	5. TUNER FREQ SET

Enables reception STEP of the ANALOG TUNER to be changed.

### 3-1.4. Canceling the selected mode

Press the power button to turn off the power.

## 3-2. 232C Standby Clear Mode

### 3-2.1. Actions

Switches from 232C standby mode to normal standby mode.

### 3-2.2. Starting up

While holding down buttons "ZONE SELECT" and "BACK" simultaneously, press the power button to turn on the power.

Select the "3.RS232C RESET" using the "CURSOR ▼/▲" button, then press the "ENTER" button to confirm.

L1	1. SERVICE CHECK
L2	3. RS232C RESET

## 3-3. Operation Info Mode

### 3-3.1. Actions

This mode enables the unit to display the accumulated operating time, power On count and each protection count.

### 3-3.2. Starting up

While holding down buttons "ZONE SELECT" and "BACK" simultaneously, press the power button to turn on the power.

Select the "4. OP INFO" using the "CURSOR ▼/▲" button, then press the "ENTER" button to confirm.

### 3-3.3. Operations

Press the "STATUS" button after starting up this device in Operation Info mode.

The following information is displayed in the following order.

- (a) Accumulated operating time

L1	Operation Time
L2	Total: _____H

↑ Time display  
↓ "STATUS"

- (b) Power On count

L1	Power On Time
L2	Total: _____H

↑ Count display  
↓ "STATUS"

- (c) DC / ASO Protection count

L1	Protection Time
L2	DC: ____/ASO: ____

↓ "STATUS"

- (d) Current Protection count

L1	Protection Time
L2	Current: ____

↓ "STATUS"

(Returns to normal display)

## 3-4. TUNER STEP mode (U, N only)

### 3-4.1. Actions

This is a special mode for enabling reception STEP of the ANALOG TUNER to be changed.

### 3-4.2. Starting up

While holding down buttons "ZONE SELECT" and "BACK" simultaneously, press the power button to turn on the power.

Select the "5. TUNER FRQ SET" using the "CURSOR ▼/▲" button, then press the "ENTER" button to confirm.

### 3-4.3. Displays

Start up this unit in TUNER STEP mode, select the desired option using the "CURSOR ◀/▶" button, then enter using the "ENTER" button.

The following information is displayed in the following order.

- (a) AM9 kHz / FM50 kHz is selected

L1	*TUNER FRQ Set
L2	< AM9/FM50 >

"CURSOR ◀"  
↓      ↑ "CURSOR ▶"

- (b) AM10 kHz / FM200 kHz is selected

L2	< AM10/FM200 >
----	----------------

↓ "ENTER"

- (c) Press the power button to turn off the power.  
(d) Press the power button to turn on the power.

## 4. Protection Pass Mode

### 4.1. Actions

- This mode allows the power to be turned on without activating protections.
- This mode functions in the same way as normal power-on, except that protections are not activated.
- When using the protection pass mode, do not connect speakers to the speaker terminals.

### 4.2. Operations

- While holding down buttons "M-DAX", "DYNAMIC EQ" and "DYNAMIC VOL" simultaneously, press the power button to turn on the power.

The device returns to the normal display message after the following is displayed.

L1 Protection Pass

This is displayed for 5 seconds before returning to the normal display.

## 5. Network Initialization Mode

### 5.1. Actions

The following items are initialized.

- (1) Network setup
- (2) Friendly Name
- (3) Auto Update setting
- (4) Allow Update setting
- (5) Time Zone setting
- (6) Queue list
- (7) Internet Radio recently played station
- (8) Quick Select playback station
- (9) AirPlay Password
- (10) Bluetooth Pairing History
- (11) Crestron Connected Setup

### 5.2. Operations

When the power is on and the input source is HEOS Music, press and hold the "BACK" and "ENTER" buttons for more than 3 seconds.

Initializing Display

L1 Network Reset...

Complete Display

L1 Completed

This is displayed for 5 seconds before returning to the normal display.

## 6. Clearing the Operation Info

### 6.1. Actions

- Displays the accumulated operating time of the unit, the number of times the power was switched on, and the number of occurrences of each protection.

### 6.2. Operations

Remove all input/output terminals and the AC plug.

Connect the AC plug again and place the product in standby mode.

While holding down buttons "DYNAMIC EQ" and "DYNAMIC VOL" simultaneously, press the power button to turn on the power.

L1	PRODUCT MODE
----	--------------

When "PRODUCT MODE" appears on the display, release the button and press the button "power" → "ZONE2 ON/OFF" → "ZONE3 ON/OFF" to place the product in standby mode.

## 7. Log Capture feature

### 7.1. Actions

- Acquires the Network Module log.
- The log is deleted when the Network Module is deleted.  
If an error occurs, it is acquired without turning off the power of this unit.
- The log can be copied to a writable USB flash drive.  
It can also be sent to a server if this unit is connected to the Internet.
- The log is stored in the root folder of the USB flash drive with the name "**logs-<friendlyname>-<number>.tar.gz**".  
<friendlyname> indicates the friendly name and <number> indicates the sequence number.  
Previous logs on the USB flash drive are not overwritten. The log is encrypted.

### 7.2. Starting up

While the power is on, hold down buttons "MOVIE" and "INFO" for at least 3 seconds.

#### 7.2.1. If the USB flash drive is connected after starting the unit

- (a) The log is written to the USB flash drive and "**Storing Logs...**" is displayed.  
The log is also sent to the server.

L1	Storing Logs...
----	-----------------

- (b) When a log package is saved to a USB flash drive, "**USB SUCCESS**" appears in the display for 5 seconds, regardless of whether the upload to the server was successful.

L1	USB SUCCESS
----	-------------

- (c) When saving of the log package fails, "**USB FAILED**" appears in the display for 5 seconds, regardless of whether the upload to the server was successful.

L1	USB FAILED
----	------------

#### 7.2.2. When the USB flash drive is not connected after startup, and this unit is connected to the Internet.

- (a) The log is sent to the server and the display shows "**Storing Logs...**" for 5 seconds.

L1	Storing Logs...
----	-----------------

- (b) When the log package is uploaded, the ticket numbers "**UPLOAD No : XXXXX**" and "**Push ENTER**" are displayed until RC or the "**Enter**" or "**Back**" button of this machine is pressed.


L1	Ticket No:XXXXX
----	-----------------

L2	Push ENTER
----	------------


- (c) If the log package upload fails, "**FAILED**" is displayed for 5 seconds.

L1	FAILED
----	--------


# AUDIO CHECK PASS

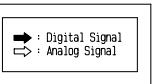

## HDMI BLOCK

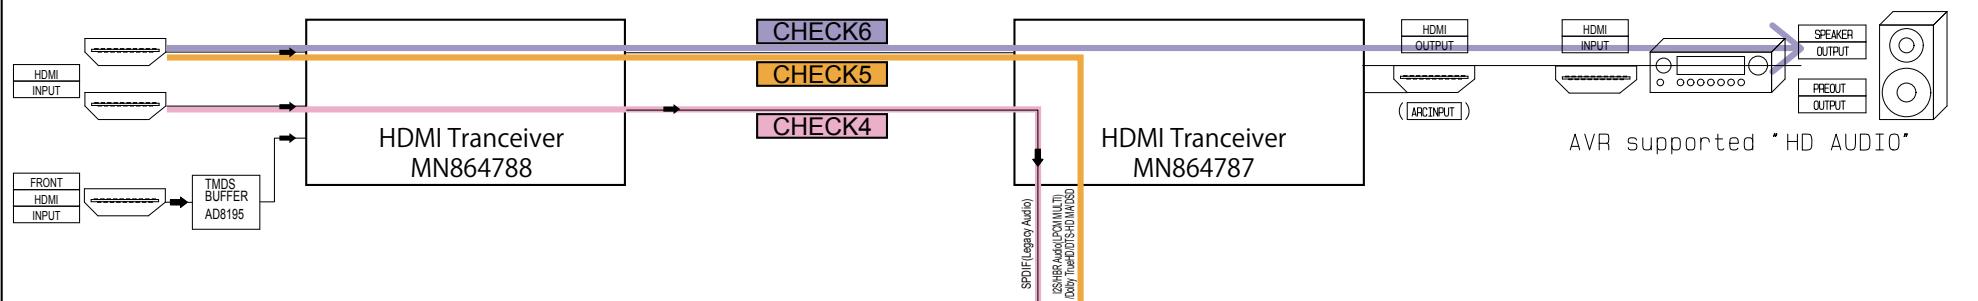


## Digital audio BLOCK

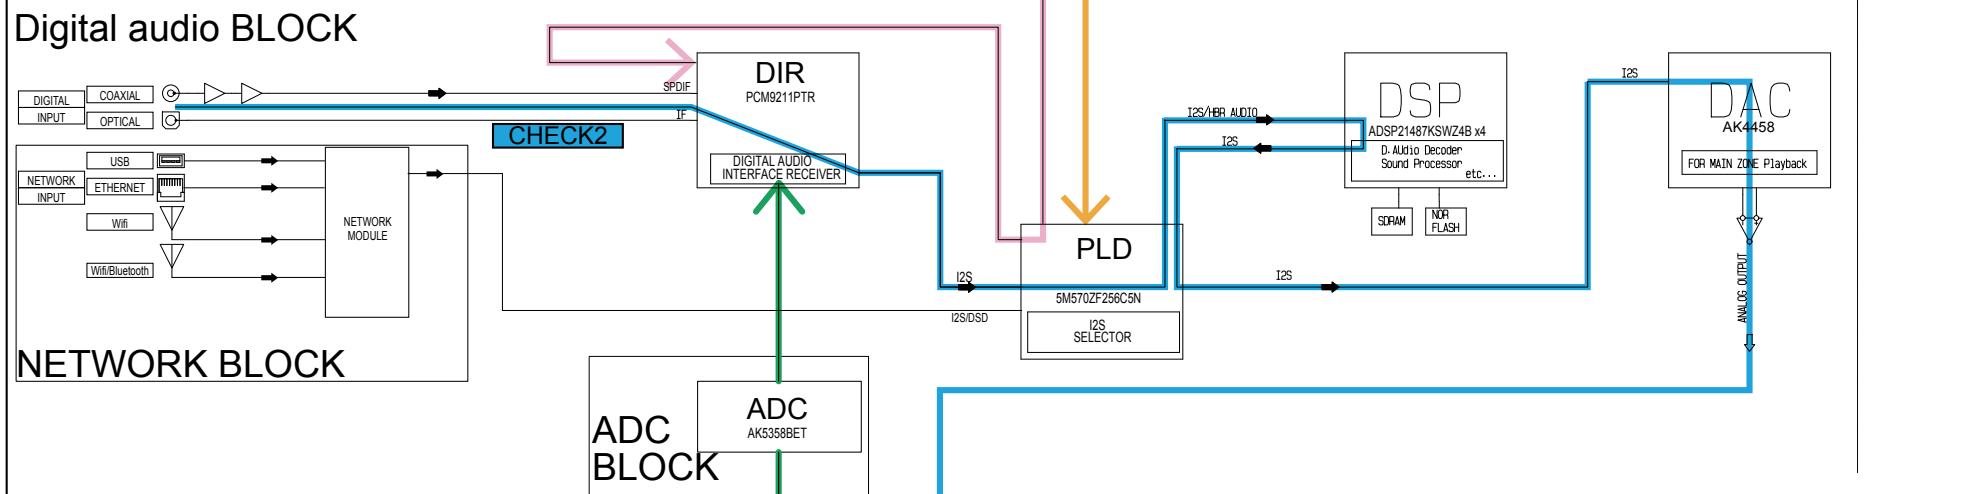

## NETWORK BLOCK

## Analog audio BLOCK

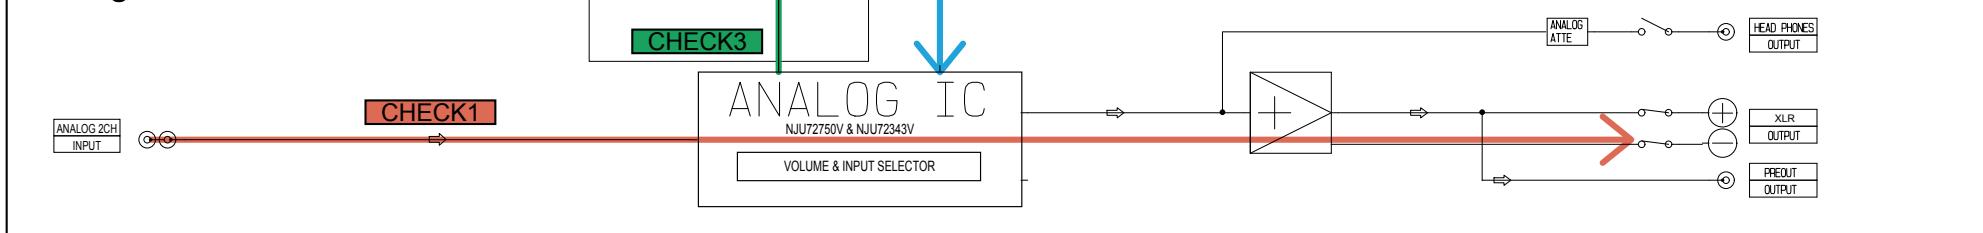

Caution in servicing

Electrical

Mechanical

Repair Information

Updating

**1.1. Actions**

This function is convenient for confirming problem paths in the product and checking the paths after repairing.

The Video and Audio paths can be checked.

The backup data is not rewritten.

**1.2. Starting up**

While holding down buttons "ZONE SELECT" and "BACK" simultaneously, press the power button to turn on the power.

Select the "1. SERVICE CHECK" using the "CURSOR ▼" button, then press the "ENTER" button then to confirm.

The "TUNED", "STEREO" and "RDS" segments are lit in this mode.

**1.3. Canceling diagnostic mode**

Press the power button to turn off the power.

**1.4. Selecting items to check**

Press the ① button to switch between video items and audio items.

Press the ② or ③ button to select the previous or next item.

	The unit			Remote control unit		
Actions	①	②	③	①	②	③
	Audio ⇄ Video	PREVIOUS	NEXT	Audio ⇄ Video	PREVIOUS	NEXT
Button	DIMMER	CURSOR◀	CURSOR▶	SLEEP	CURSOR◀	CURSOR▶

**1.5. Audio system confirmation items**

See the block diagram fig.XXth. Change the Amp Assign and Speaker Config settings manually when checking the audio system path.

Paths to be confirmed			Display (Sub Display)	Settings	What to confirm
1	Analog	<b>fig.01</b>	A01:ANALOG PASS	Input Source : CBL/SAT Input Mode : Analog (fixed) Sound mode : DIRECT Amp assign : 11.1ch Floor Layout : 5.1&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• Analog input ⇒ RCA output (Front L/R)</li> <li>• Analog input ⇒ XLR output (Front L/R)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
2	DIGITAL (MAIN)	<b>fig.02a</b> <b>fig.02b</b>	A02:DIGITAL	Input Source : CBL/SAT Input Mode : DIGITAL (fixed) Sound mode : MULTI CH STEREO Amp assign : 11.1ch Floor Layout : 5&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height Speaker Select : Floor Speaker Config ALL Speaker = Small / SW = Yes(2ch) MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• Digital input ⇒ RCA output (Front L/R, Center, Surround L/R, S.Back L/R)</li> <li>• Digital input ⇒ XLR output (Front L/R, Center, Surround L/R, S.Back L/R, Subwoofer1/2)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)

Paths to be confirmed		Display (Sub Display)	Settings	What to confirm	
3	DIGITAL (ZONE2)	<a href="#">fig.03a</a> <a href="#">fig.03b</a> <a href="#">fig.03c</a>	A03:DIGITAL-Z2	Input Source : HEOS Music Input Mode : Auto Sound mode : STEREO Amp assign : 11.1ch Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : On ZONE3 : Off	<ul style="list-style-type: none"> <li>Digital(PCM) input ⇒ ZONE2 RCA output (ZONE2 L/R) (※ The input source can be switched to any source except HEOS Music.)</li> </ul>
4	DIGITAL (ZONE3)	<a href="#">fig.04a</a> <a href="#">fig.04b</a>	A04:DIGITAL-Z3	Input Source : HEOS Music Input Mode : Auto Sound mode : STEREO Amp assign : 11.1ch Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off ZONE3 : On	<ul style="list-style-type: none"> <li>Digital(PCM) input ⇒ ZONE3 RCA output (ZONE3 L/R) (※ The input source can be switched to any source except HEOS Music.)</li> </ul>
5	HDMI	<a href="#">fig.05a</a> <a href="#">fig.05b</a> <a href="#">fig.05c</a>	A05:HDMI	Input Source : CBL/SAT Input Mode : HDMI (fixed) Sound mode : STEREO Amp assign : 11.1ch Floor Layout : 5ch&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>HDMI input ⇒ RCA output (Front L/R)</li> <li>HDMI input ⇒ XLR output (Front L/R)</li> </ul> <p>(※ The input source can be switched to any source except CBL/SAT.)</p>
6	Analog AD (MAIN)	<a href="#">fig.06a</a> <a href="#">fig.06b</a>	A06:AD	Input Source : CBL/SAT Input Mode : Analog (fixed) Sound mode : MULTI CH STEREO Amp assign : 11.1ch Floor Layout : 5ch&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height Speaker Select : Floor Speaker Config ALL Speaker = Small/SW = Yes(2ch) MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>Analog input ⇒ RCA output (Front L/R, Center, Surround L/R, S.Back L/R)</li> <li>Analog input ⇒ XLR output, SW(20Hz) (Front L/R, Center, Surround L/R, S.Back L/R, Subwoofer1/2)</li> </ul> <p>(※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</p>
7	Analog Amp Assign (Amp Assign : ZONE2)	<a href="#">fig.07</a>	A07:ASSIGN-Z2	Input Source : CBL/SAT Input Mode : Auto Sound mode : STEREO Z2 Source : Source Amp assign : 11.1ch Floor Layout : 5ch&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : On ZONE3 : Off	<ul style="list-style-type: none"> <li>Analog input ⇒ ZONE2 RCA output (ZONE2 L/R)</li> </ul> <p>(※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</p>
8	Analog Amp Assign (Amp Assign : ZONE3)	<a href="#">fig.08</a>	A08:ASSIGN-Z3	Input Source : CBL/SAT Input Mode : Auto Sound mode : STEREO Z3 Source : Source Amp assign : 11.1ch Floor Layout : 5ch&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off ZONE3 : On	<ul style="list-style-type: none"> <li>Analog input ⇒ ZONE3 RCA output (ZONE3 L/R)</li> </ul> <p>(※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</p>

Paths to be confirmed			Display (Sub Display)	Settings	What to confirm
9	Amp Assign (Amp Assign : BiAMP-Surround Back)	<a href="#">fig.09a</a> <a href="#">fig.09b</a>	A11:BiAmp-SB	Input Source : CBL/SAT Input Mode : Auto Sound mode : STEREO Amp assign : 9.1ch (BiAMP) Preout for Bi-Amp : SURROUND BACK Floor Layout : 5ch Height Sp : None Dolby Sp : None MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• Analog input ⇒ RCA output (Front L/R, S.Back L/R (Front))</li> <li>• Analog input ⇒ XLR output (Front L/R, S.Back L/R (Front))</li> </ul> <p>(※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</p>
10	Amp Assign (Amp Assign : BiAMP-Height2)	<a href="#">fig.10a</a> <a href="#">fig.10b</a>	A12:BiAmp-H2	Input Source : CBL/SAT Input Mode : Auto Sound mode : STEREO Amp assign : 9.1ch (BiAMP) Preout for Bi-Amp : HEIGHT2 Floor Layout : 5ch Height Sp : None Dolby Sp : None MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• Analog input ⇒ RCA output (Front L/R, Height2 L/R (Front))</li> <li>• Analog input ⇒ XLR output (Front L/R, Height2 L/R (Front))</li> </ul> <p>(※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</p>
11	Front Height	<a href="#">fig.11a</a> <a href="#">fig.11b</a>	A14:FRONT HEIGHT	Input Source : CBL/SAT Input Mode : Auto Sound mode : MULTI CH STEREO Amp assign : 11.1ch Floor Layout : 5ch&SB Height Sp : 4ch Dolby Sp : None Height Layout : Top Front & Top Rear Speaker Select : Floor & Height MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• Analog input ⇒ RCA output (Height1 L/R (Top Front), Height2 L/R (Top Front))</li> <li>• Analog input ⇒ XLR output (Height1 L/R (Top Front))</li> <li>• Pre OUT output</li> </ul> <p>(※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</p>
12	7.1ch	<a href="#">fig.12</a>	A19:7.1CH IN	Input Source : CBL/SAT Input Mode : 7.1Ch In Amp Assign : 11.1ch Floor Layout : 5ch&SB Height Sp : None Dolby Sp : None Speaker Config Front, Center, Surround, Surround Back(2spkr) Speaker Config ALL Speaker = Small/SW = Yes(2ch) MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• 7.1ch IN input ⇒ RCA output (Front L/R, Center, Surround L/R, S.Back L/R, Subwoofer1/2)</li> <li>• 7.1ch IN input ⇒ XLR output (Front L/R, Center, Surround L/R, S.Back L/R, Subwoofer1/2)</li> </ul>


## 1.6. Confirmation items for the video system

See the block diagram fig.XXth.

Paths to be confirmed		Display (Sub Display)	Settings	What to confirm
1	Analog Video pass	<b>fig.13</b>	U01:VIDEO PASS	Input Source : CBL/SAT Video Conversion (IP Scaler) : Off MAIN ZONE : On ZONE2 : On ZONE3 : Off  • Component input ⇒ Component output (※ The input source can be switched to any source except CBL/SAT.)
2	Video Convert (Analog or HDMI ⇒ HDMI)	<b>fig.14a</b> <b>fig.14b</b>	U02:U.CONVERT	Input Source : CBL/SAT Video Conversion (IP Scaler) : On, All sources IP Scaler : "Analog&HDMI", All sources Resolution : "Auto", All sources MAIN ZONE : On ZONE2 : Off ZONE3 : Off  • HDMI input ⇒ IP Scaler ⇒ HDMI output. • ETHERNET input ⇒ IP Scaler ⇒ HDMI output. • CVBS input ⇒ IP Scaler ⇒ HDMI output. • Component input ⇒ IP Scaler ⇒ HDMI output. (※ The input source can be switched to any source except CBL/SAT.)
3	HDMI pass (MAIN ZONE)	<b>fig.15</b>	U03:HDMI PASS	Input Source : CBL/SAT Video Conversion (IP Scaler) : Off MAIN ZONE : On ZONE2 : Off ZONE3 : Off  • HDMI input (MAIN function) ⇒ HDMI output (MAIN) (※ The input source can be switched to any source except CBL/SAT.)
4	HDMI CEC	<b>fig.16</b>	U04:HDMI CEC	Input Source : CBL/SAT HDMI Control : On MAIN ZONE : On ZONE2 : Off ZONE3 : Off  • When the power supply of a TV is put in the standby mode, make sure that the power supply of this unit is also put in the standby mode. (※ The input source can be switched to any source except CBL/SAT.) • The ARC path can also be checked (check this using the TV input source).
5	HDMI Audio (Audio : AVR)	<b>fig.17a</b> <b>fig.17b</b> <b>fig.17c</b>	U05:H.AUDIO-AVR	Input Source : CBL/SAT HDMI Control : Off HDMI Audio : AVR (if checking the audio output from AVR)  • HDMI input (PCM, DolbyDigital, DTS) ⇒ Speaker output. • HDMI input(HD audio) ⇒ Speaker output. (※ The input source can be switched to any source except CBL/SAT.)
6	HDMI Audio (Audio : TV)	<b>fig.18a</b> <b>fig.18b</b>	U06:H.AUDIO-TV	HDMI Audio : TV (if checking the audio output from TV)  • HDMI input (PCM, DolbyDigital, DTS) ⇒ HDMI output (audio output from connected TV) (※ The input source can be switched to any source except CBL/SAT.)
7	GUI	<b>fig.19</b>	U07:GUI MENU ON	Input Source : CBL/SAT Video Conversion (IP Scaler) : On, All sources IP Scaler : "Analog&HDMI", All sources Resolution : "AUTO", All sources Setup Menu : On MAIN ZONE : On ZONE2 : Off ZONE3 : Off  • GUI display ⇒ HDMI output. (※ The input source can be switched to any source except CBL/SAT.)
8	HDMI pass (MAIN ZONE2)	<b>fig.20</b>	U08:ZONE2 HDMI	Input Source : CBL/SAT Z2 Source : Source MAIN ZONE : On ZONE2 : On ZONE3 : Off  • HDMI input (ZONE2 Function) ⇒ HDMI output (ZONE2) (※ The input source can be switched to any source except CBL/SAT.)

# DIAGNOSTIC PATH DIAGRAM

fig.01

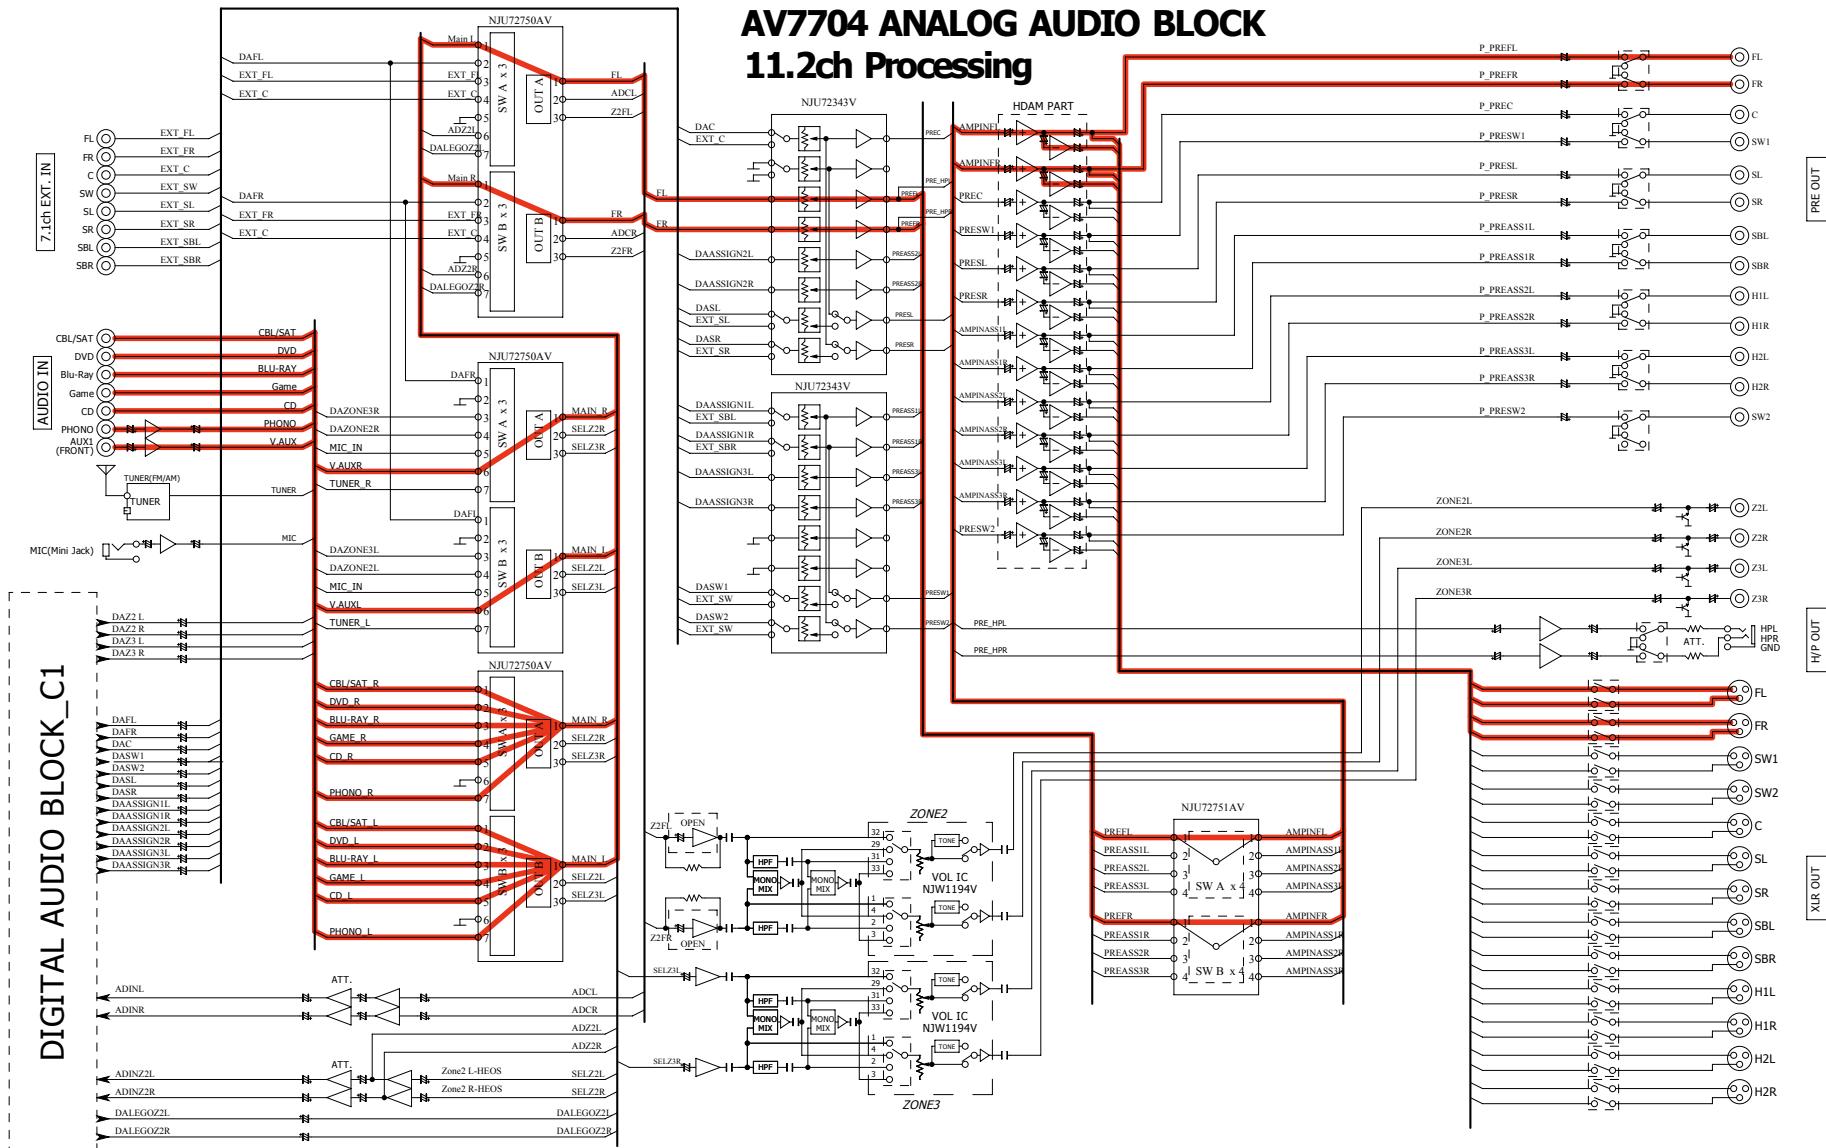

Caution in servicing

Electrical

Mechanical

Repair Information

Updating

fig.02a

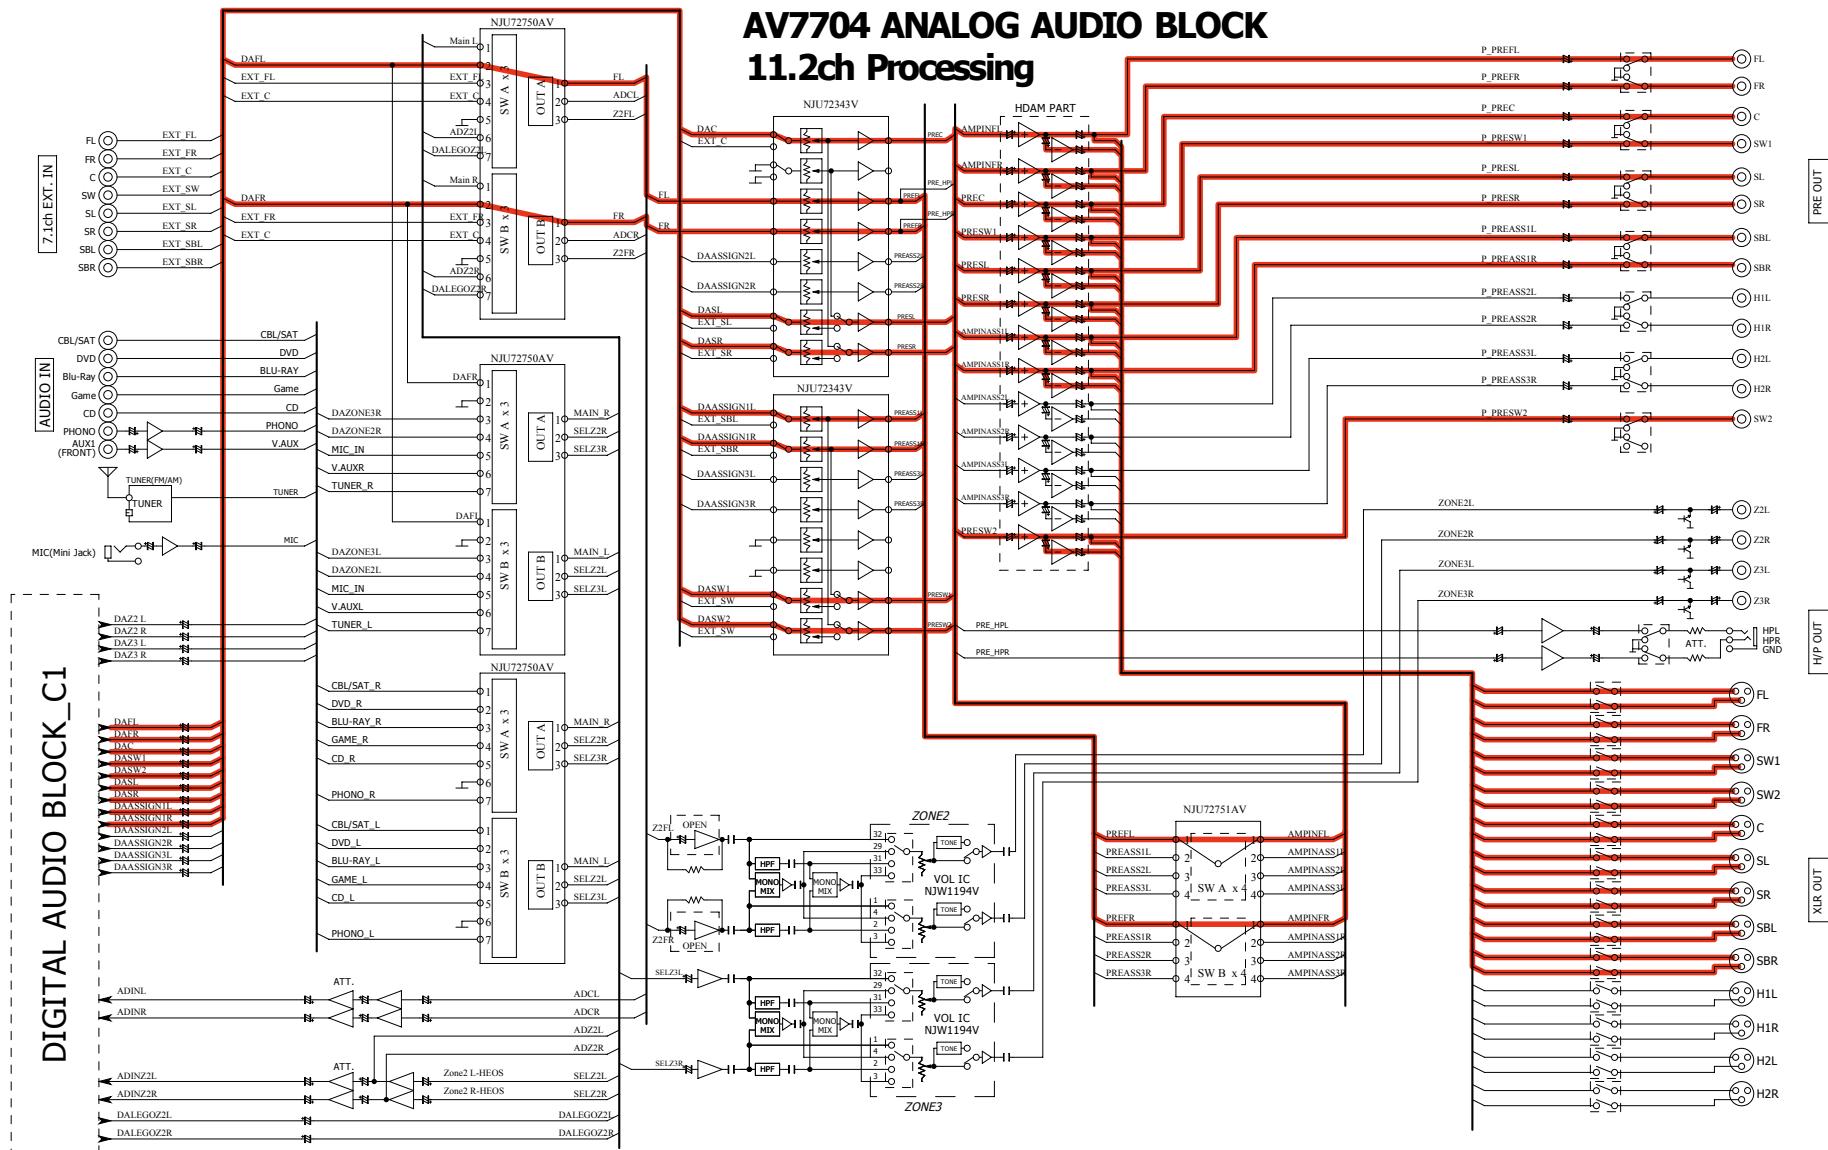


fig.02b

## SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)

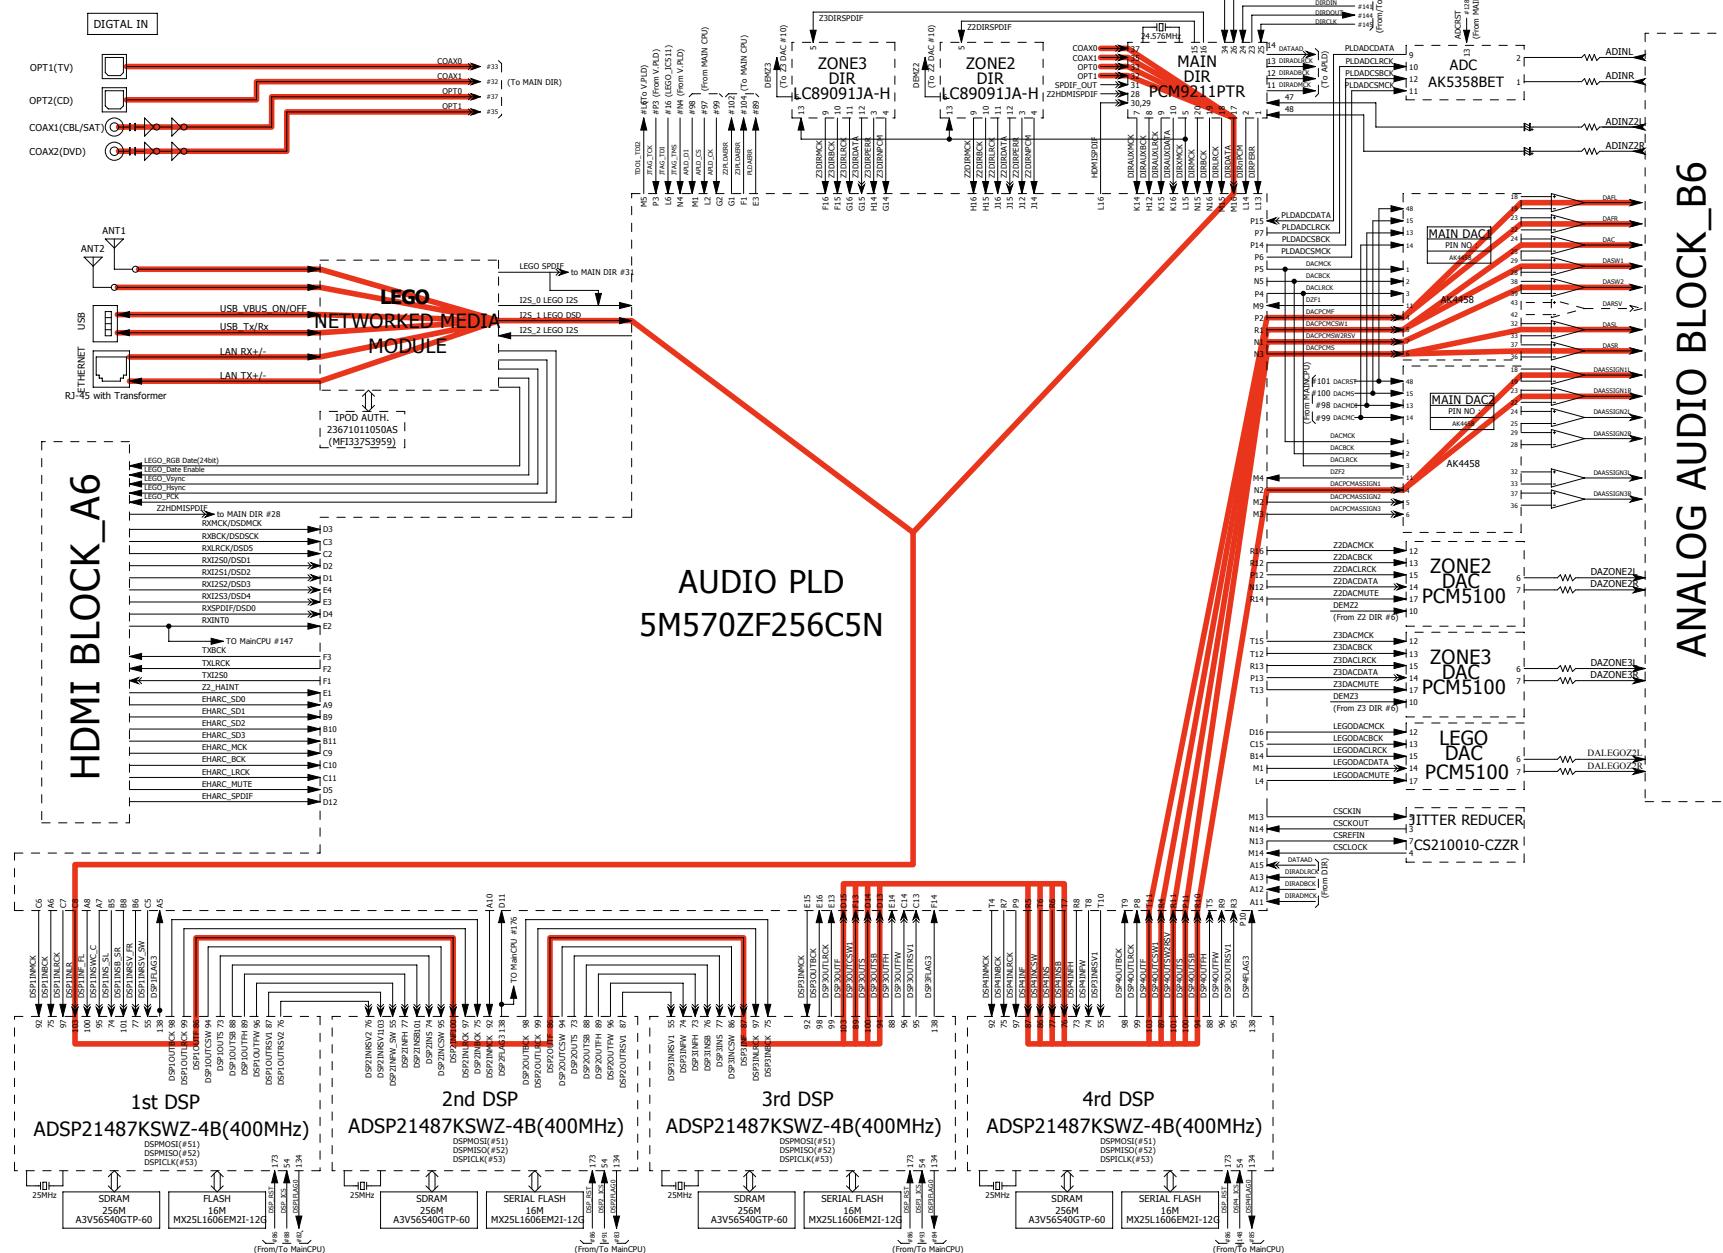


fig.03a

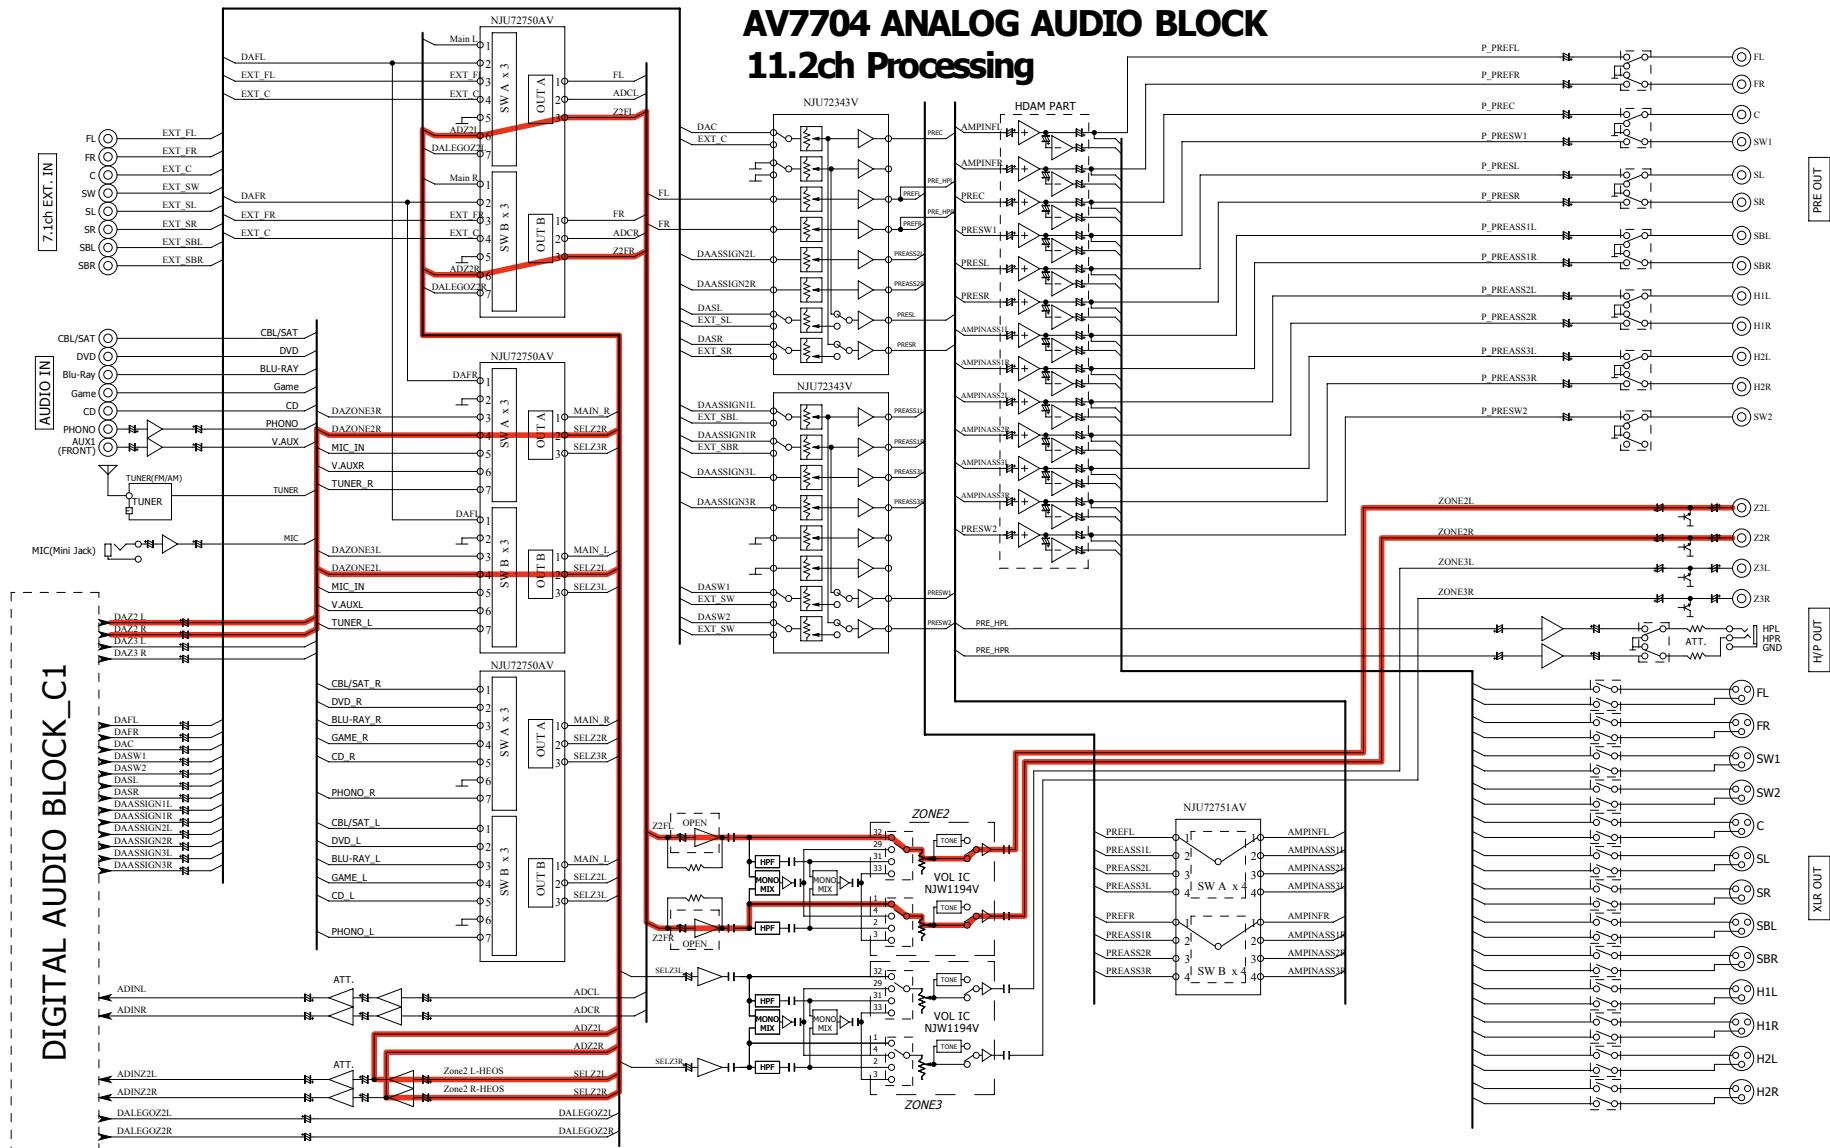


fig.03b

## SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)


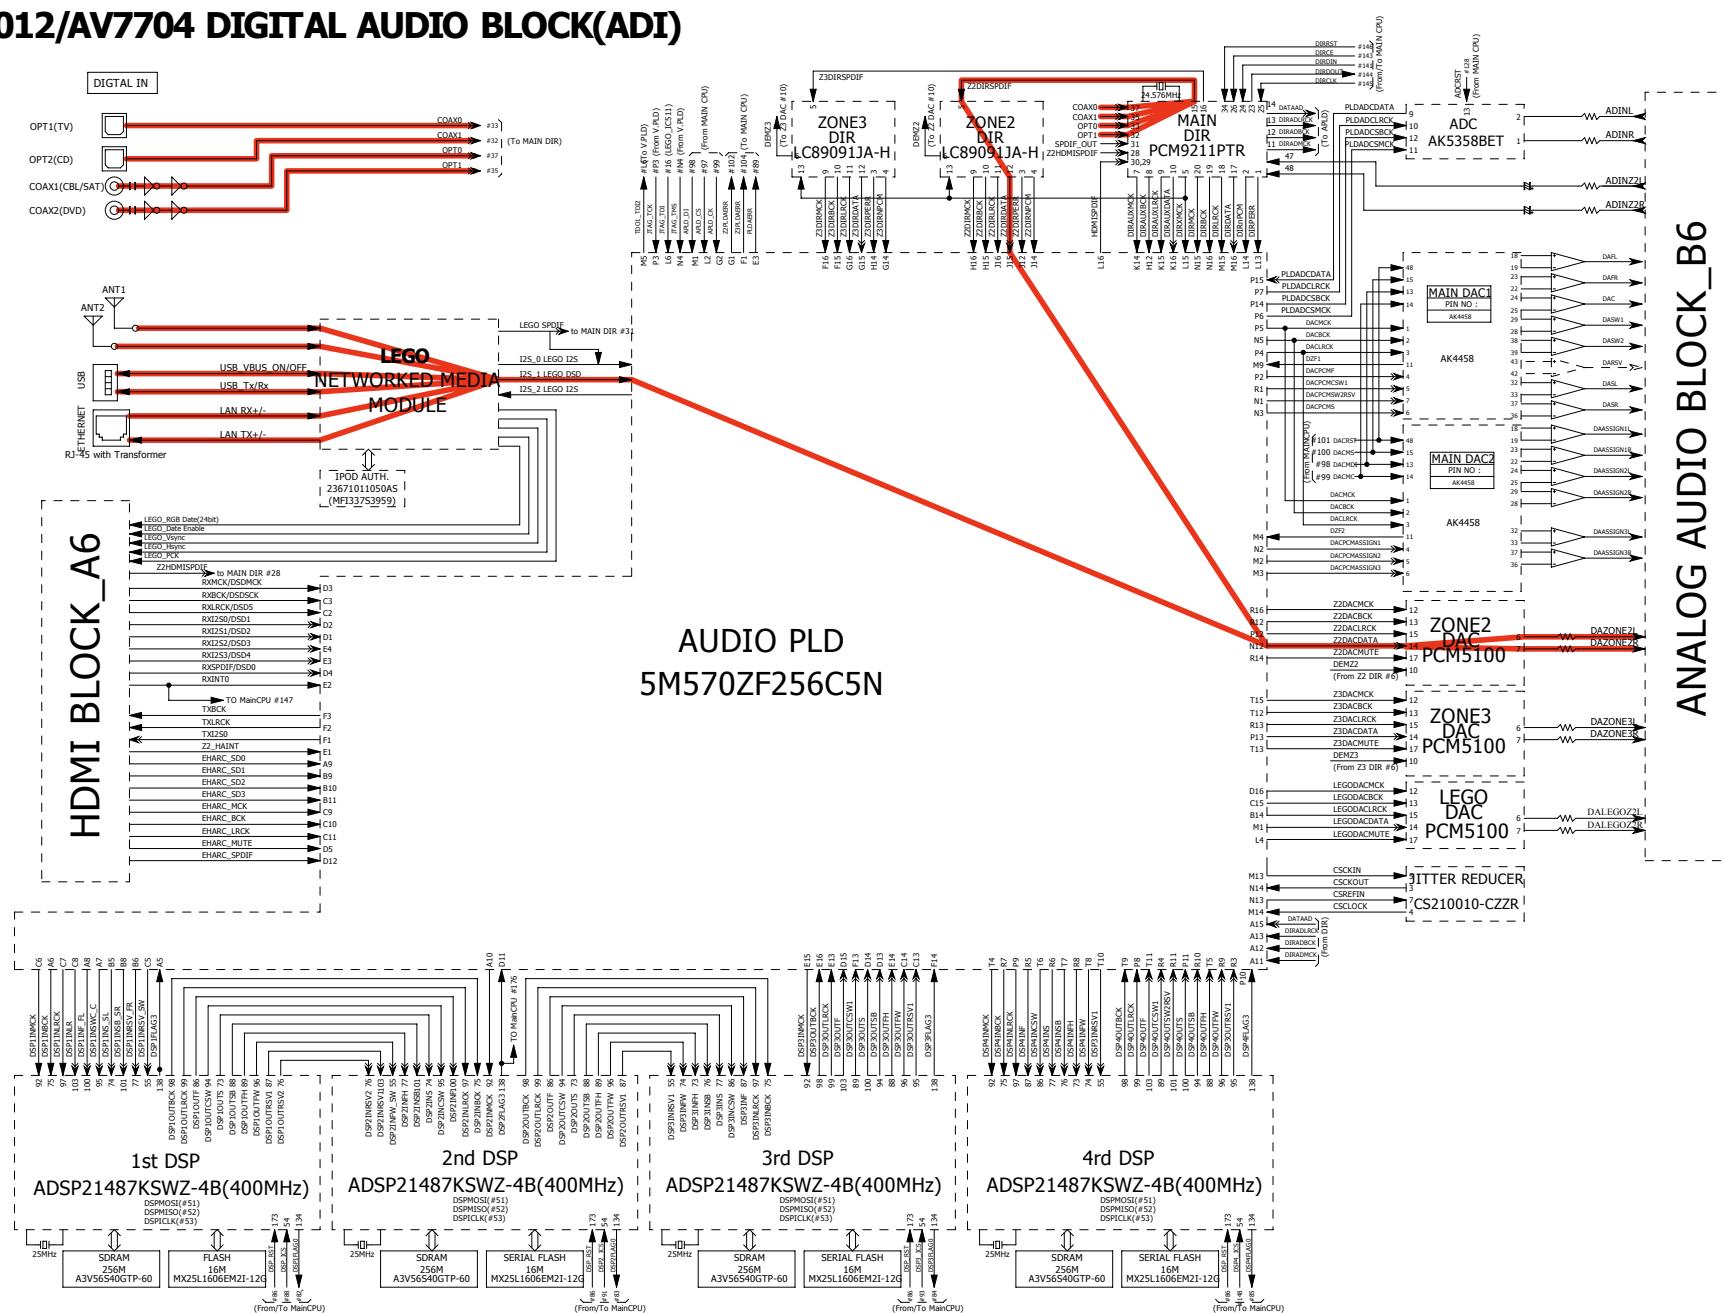


fig.03c

## AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK

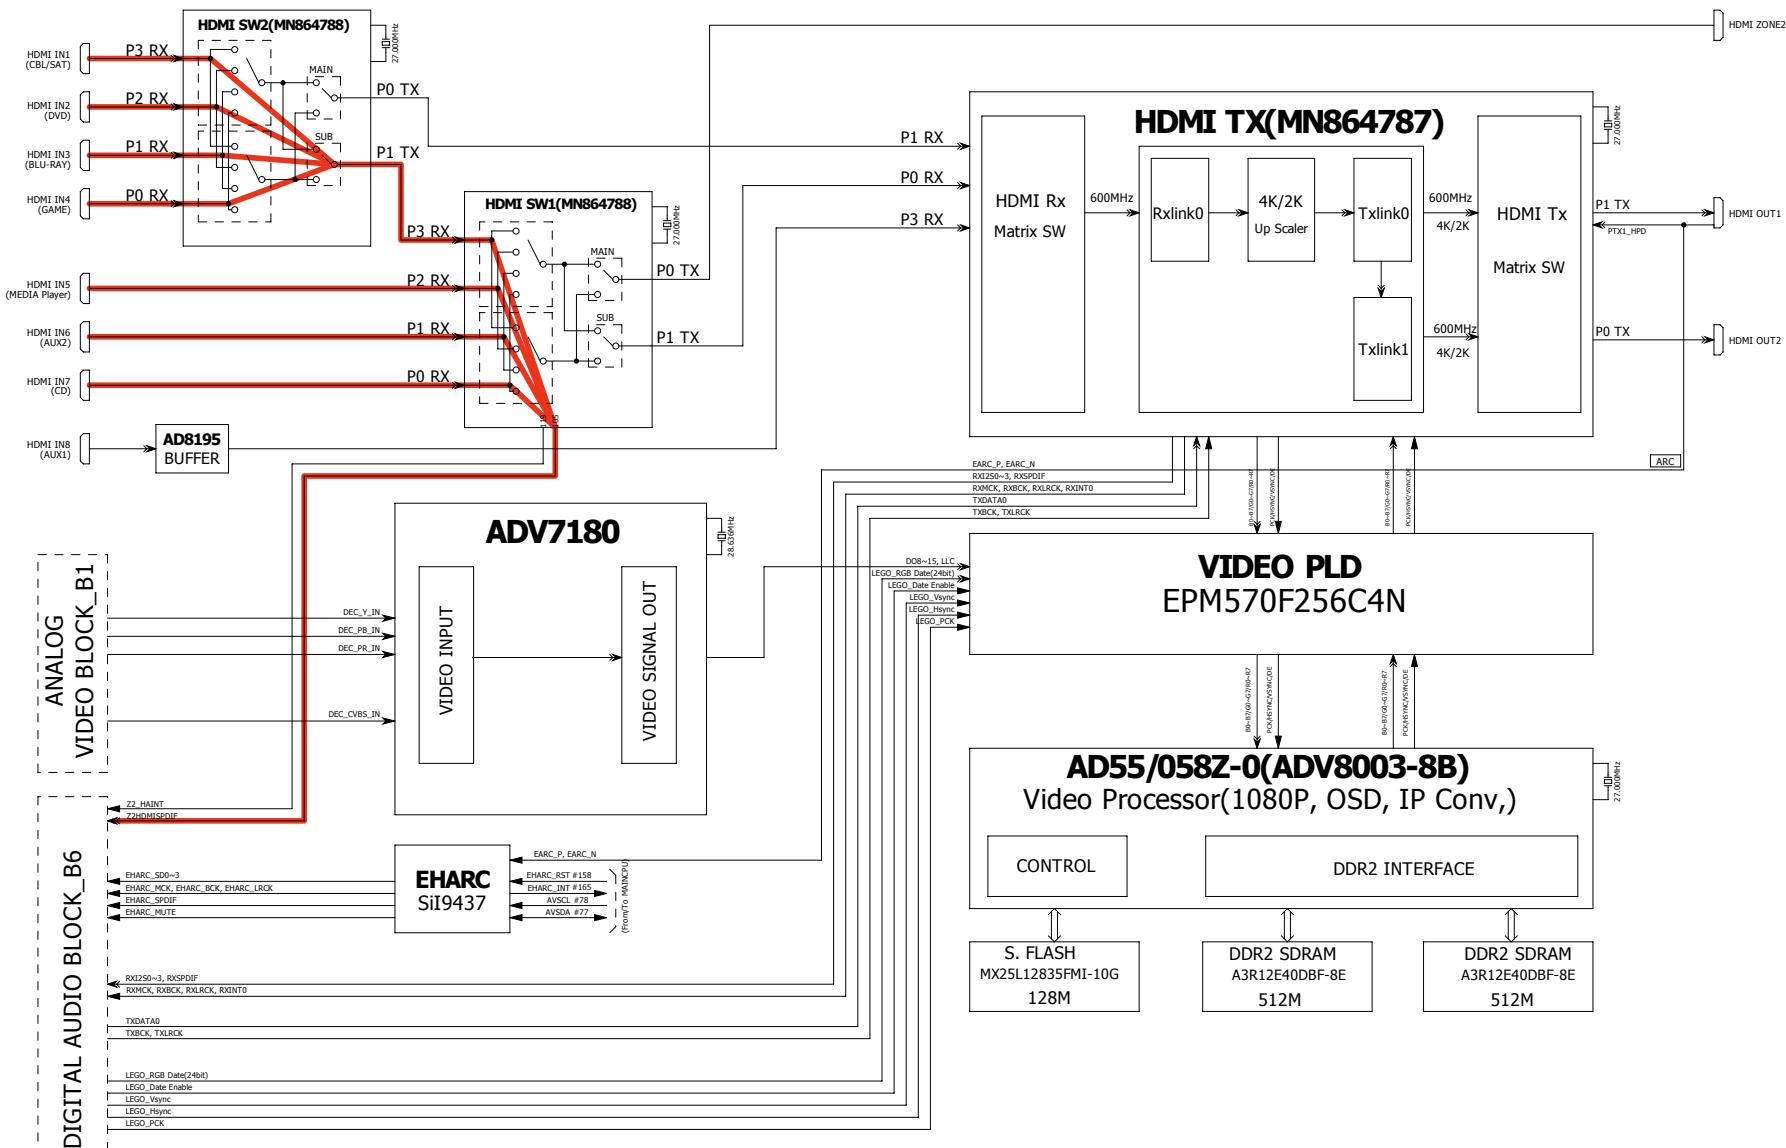

## **AV7704 ANALOG AUDIO BLOCK**

### **11.2ch Processing**

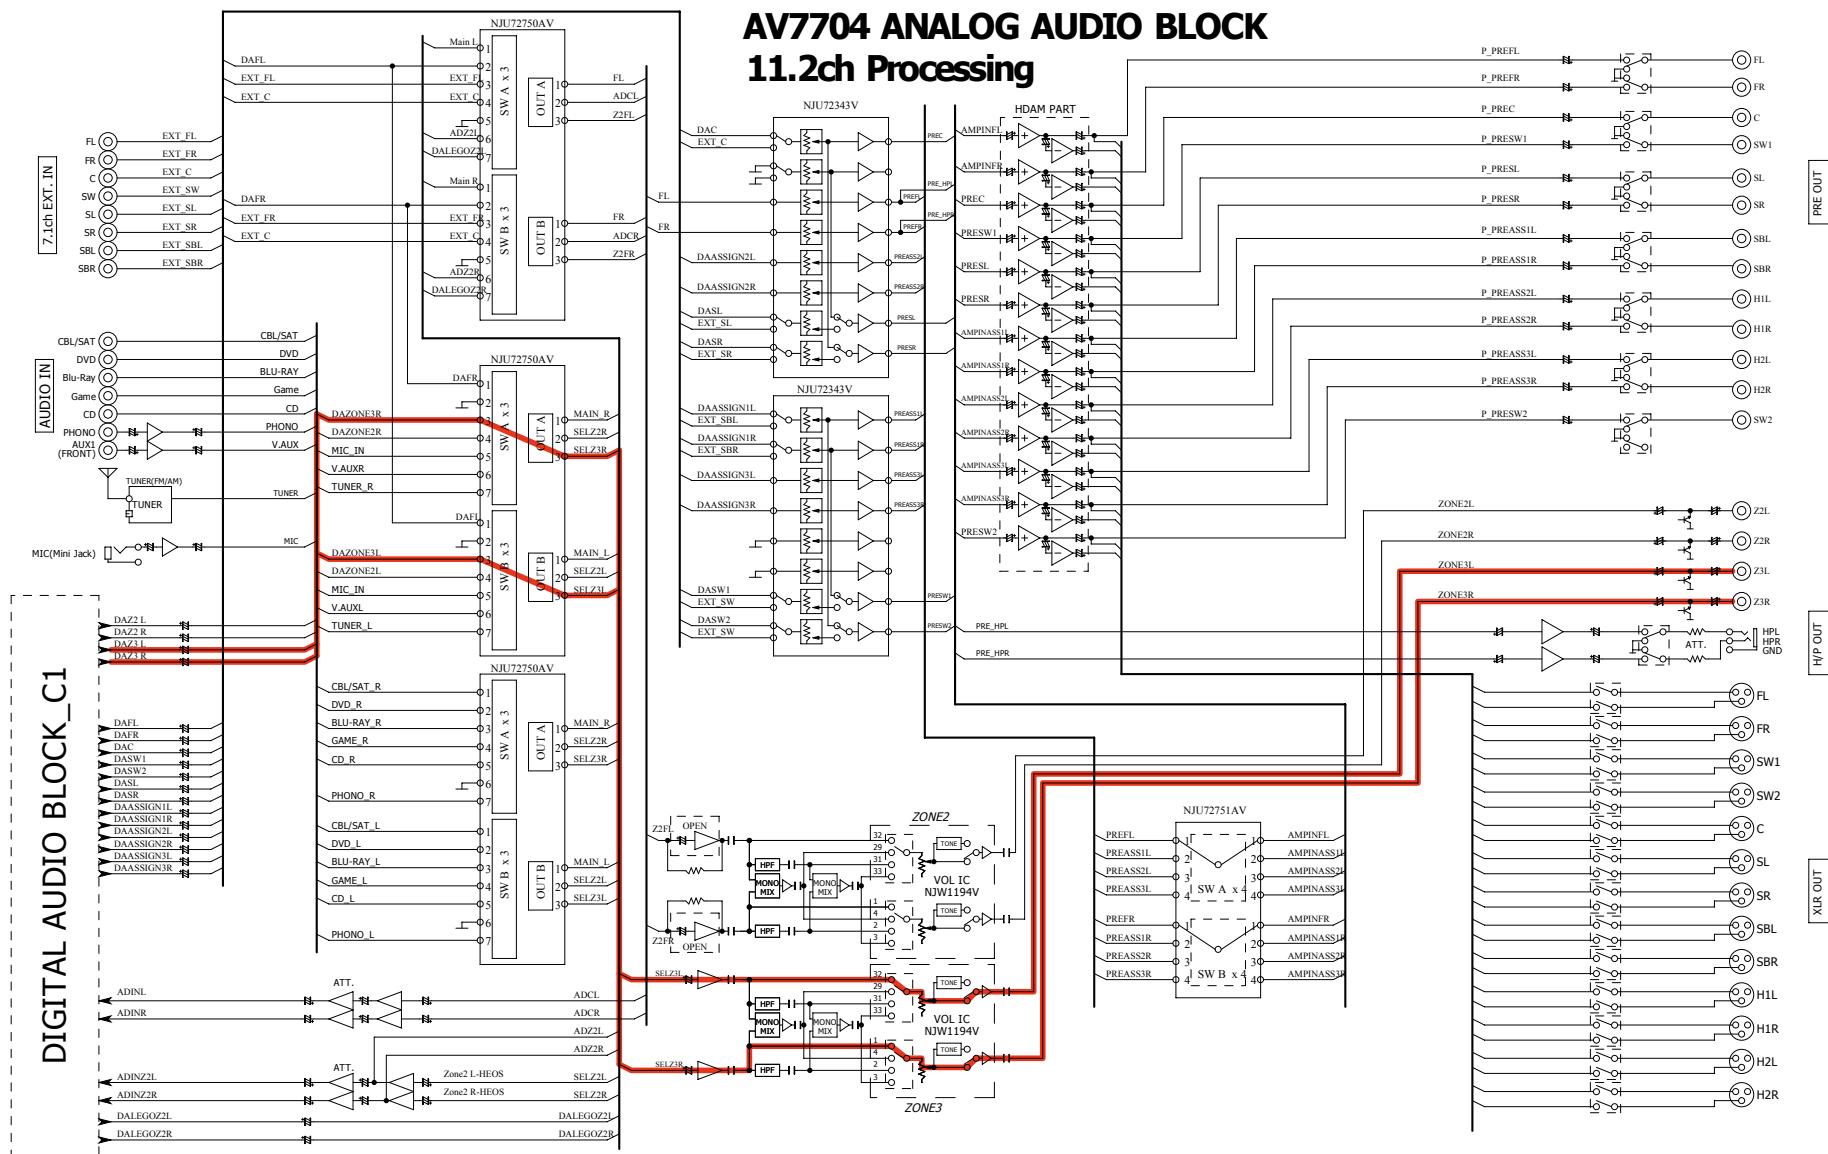
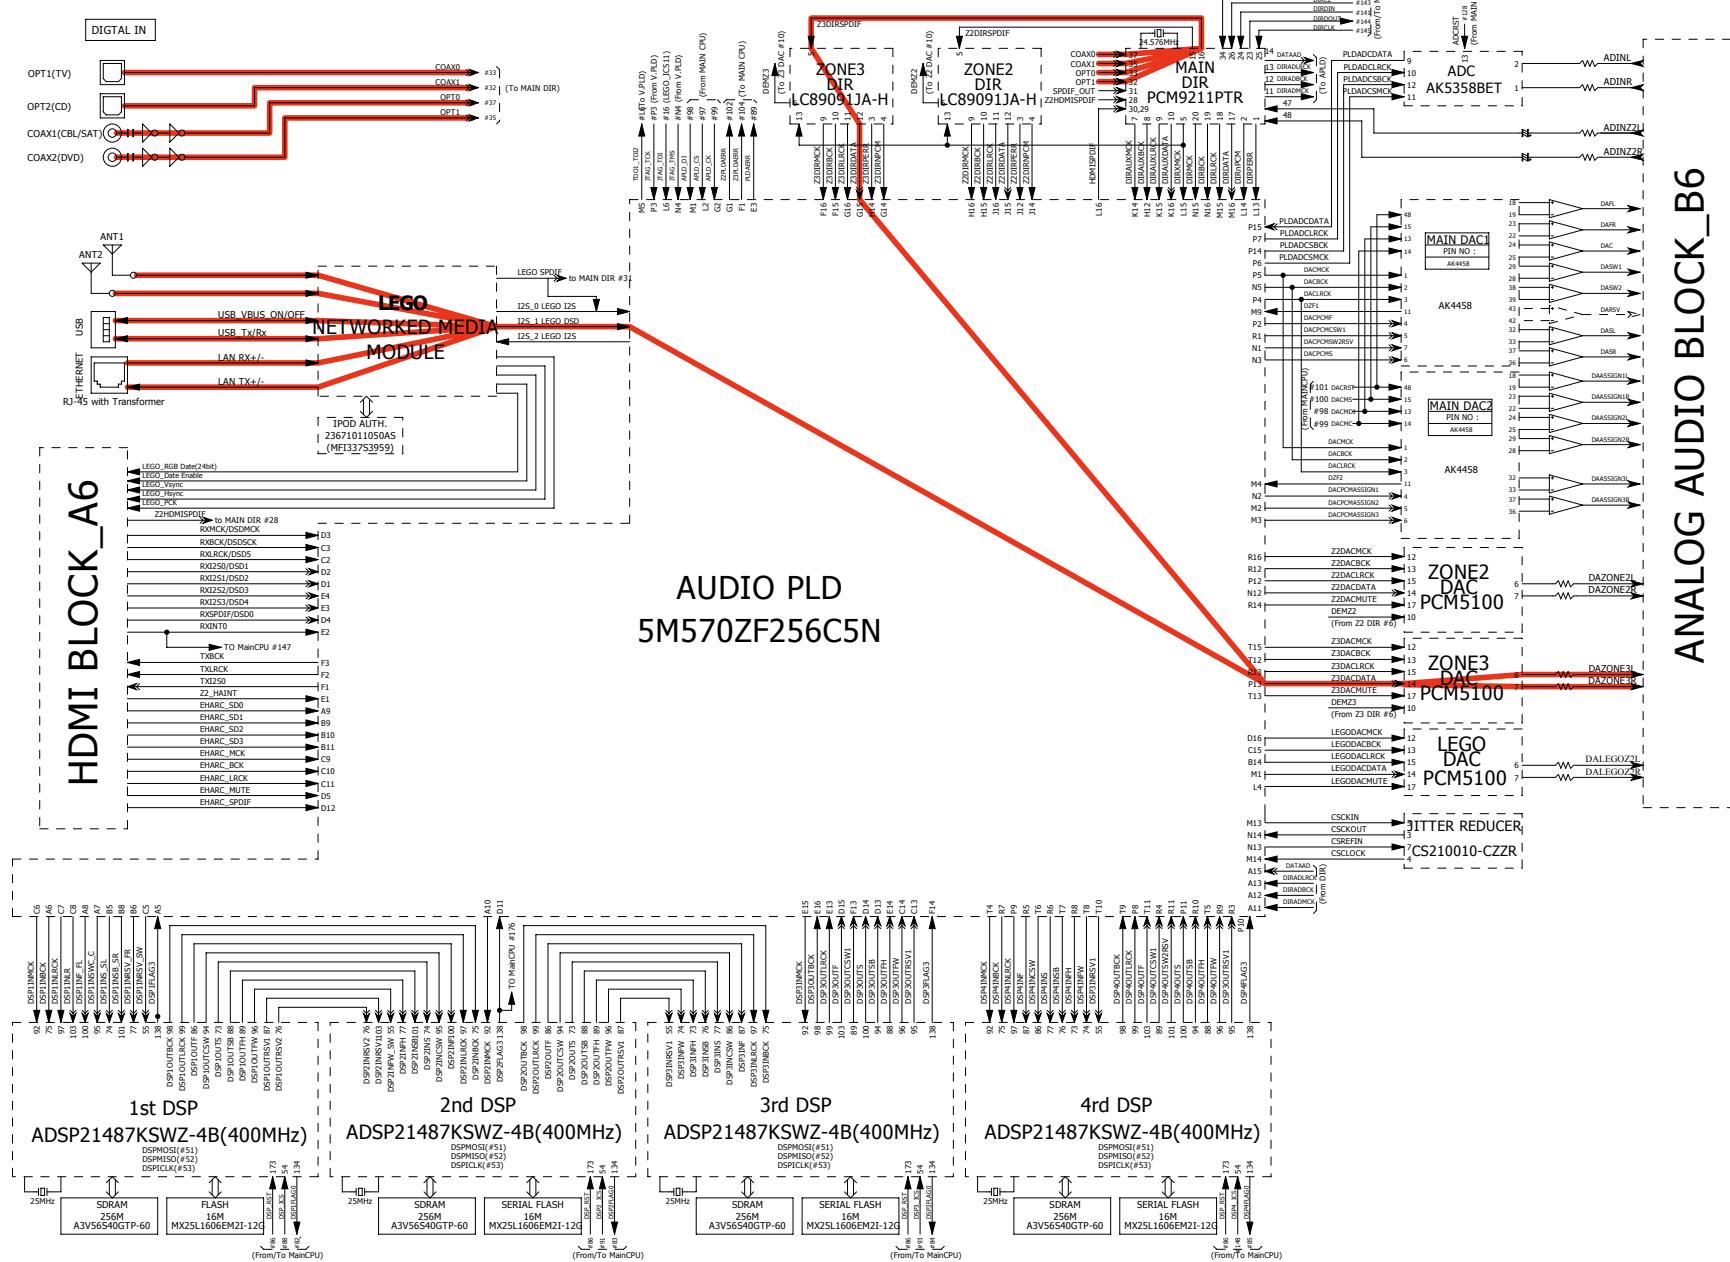
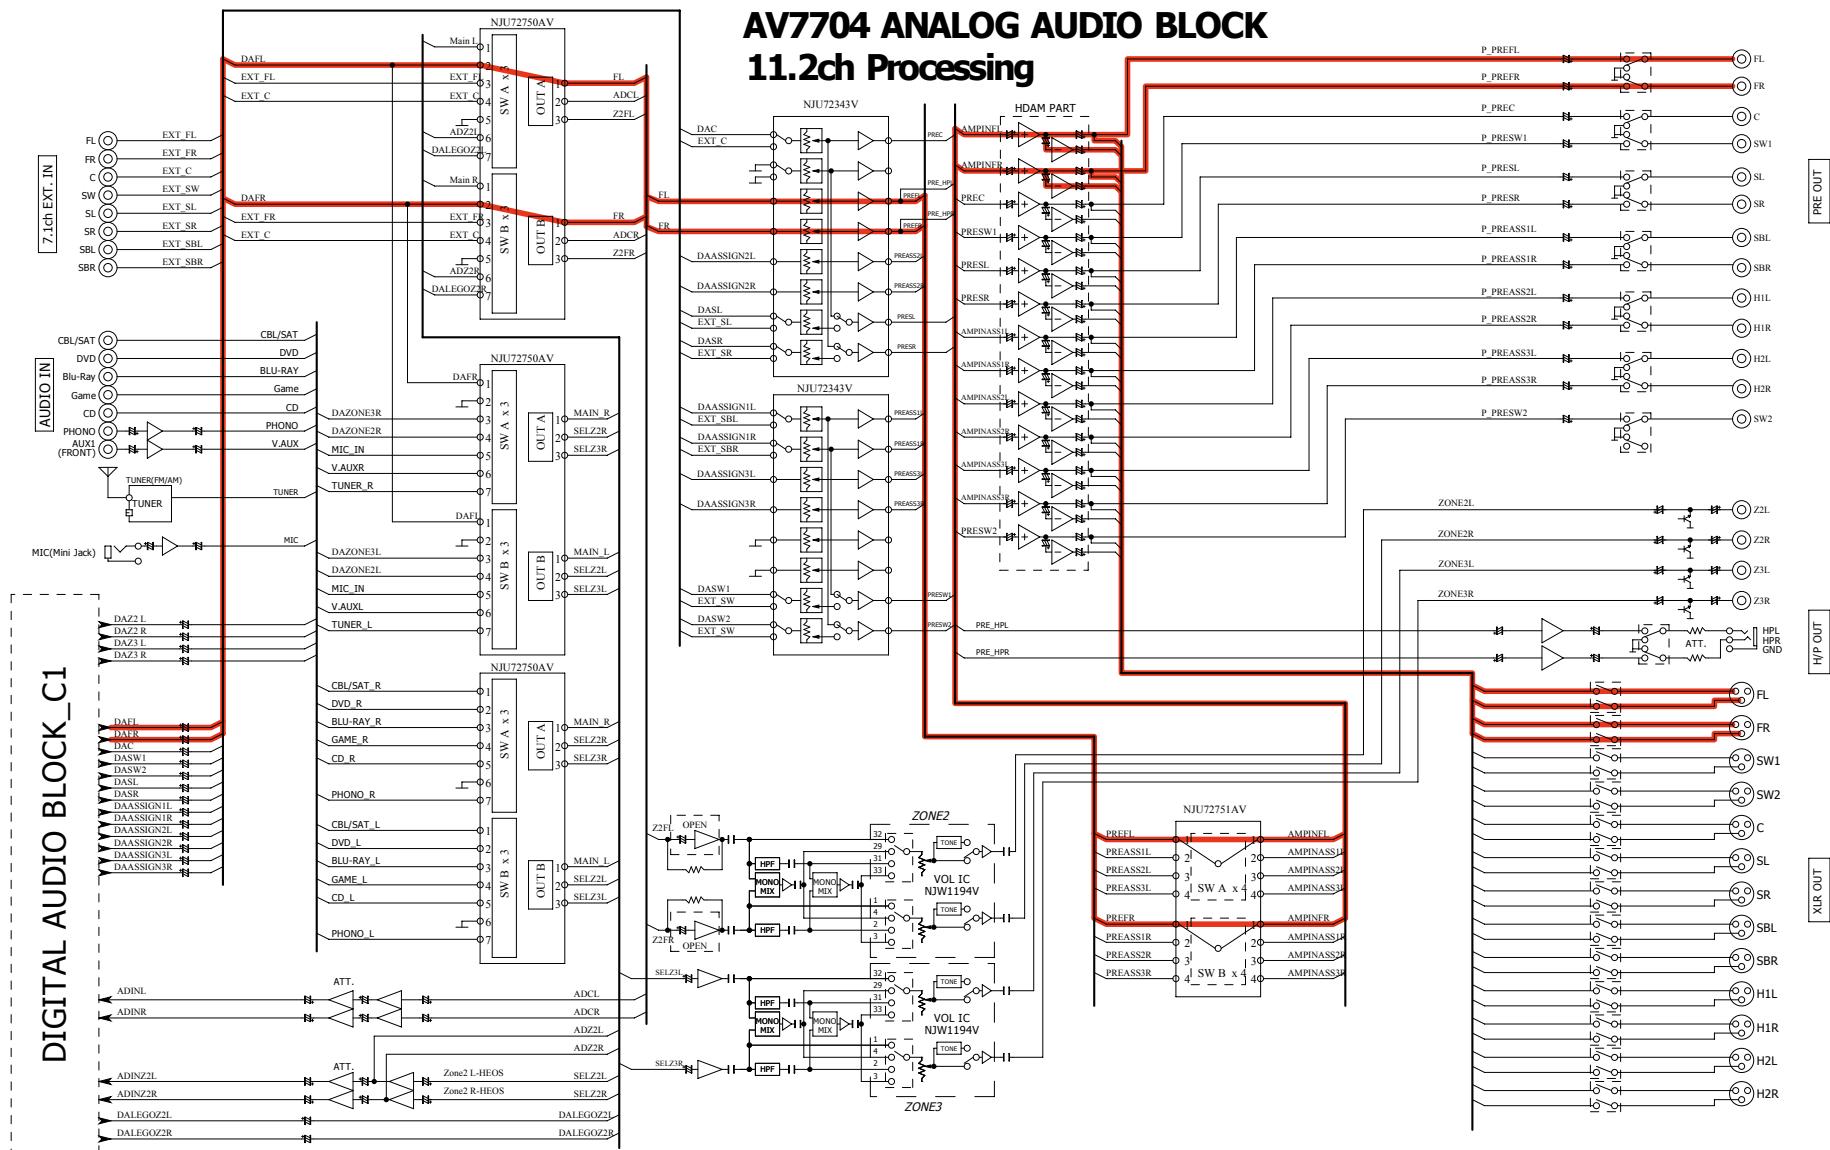


fig.04b

# **SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)**



**fig.05a**



**fig.05b**

# **SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)**

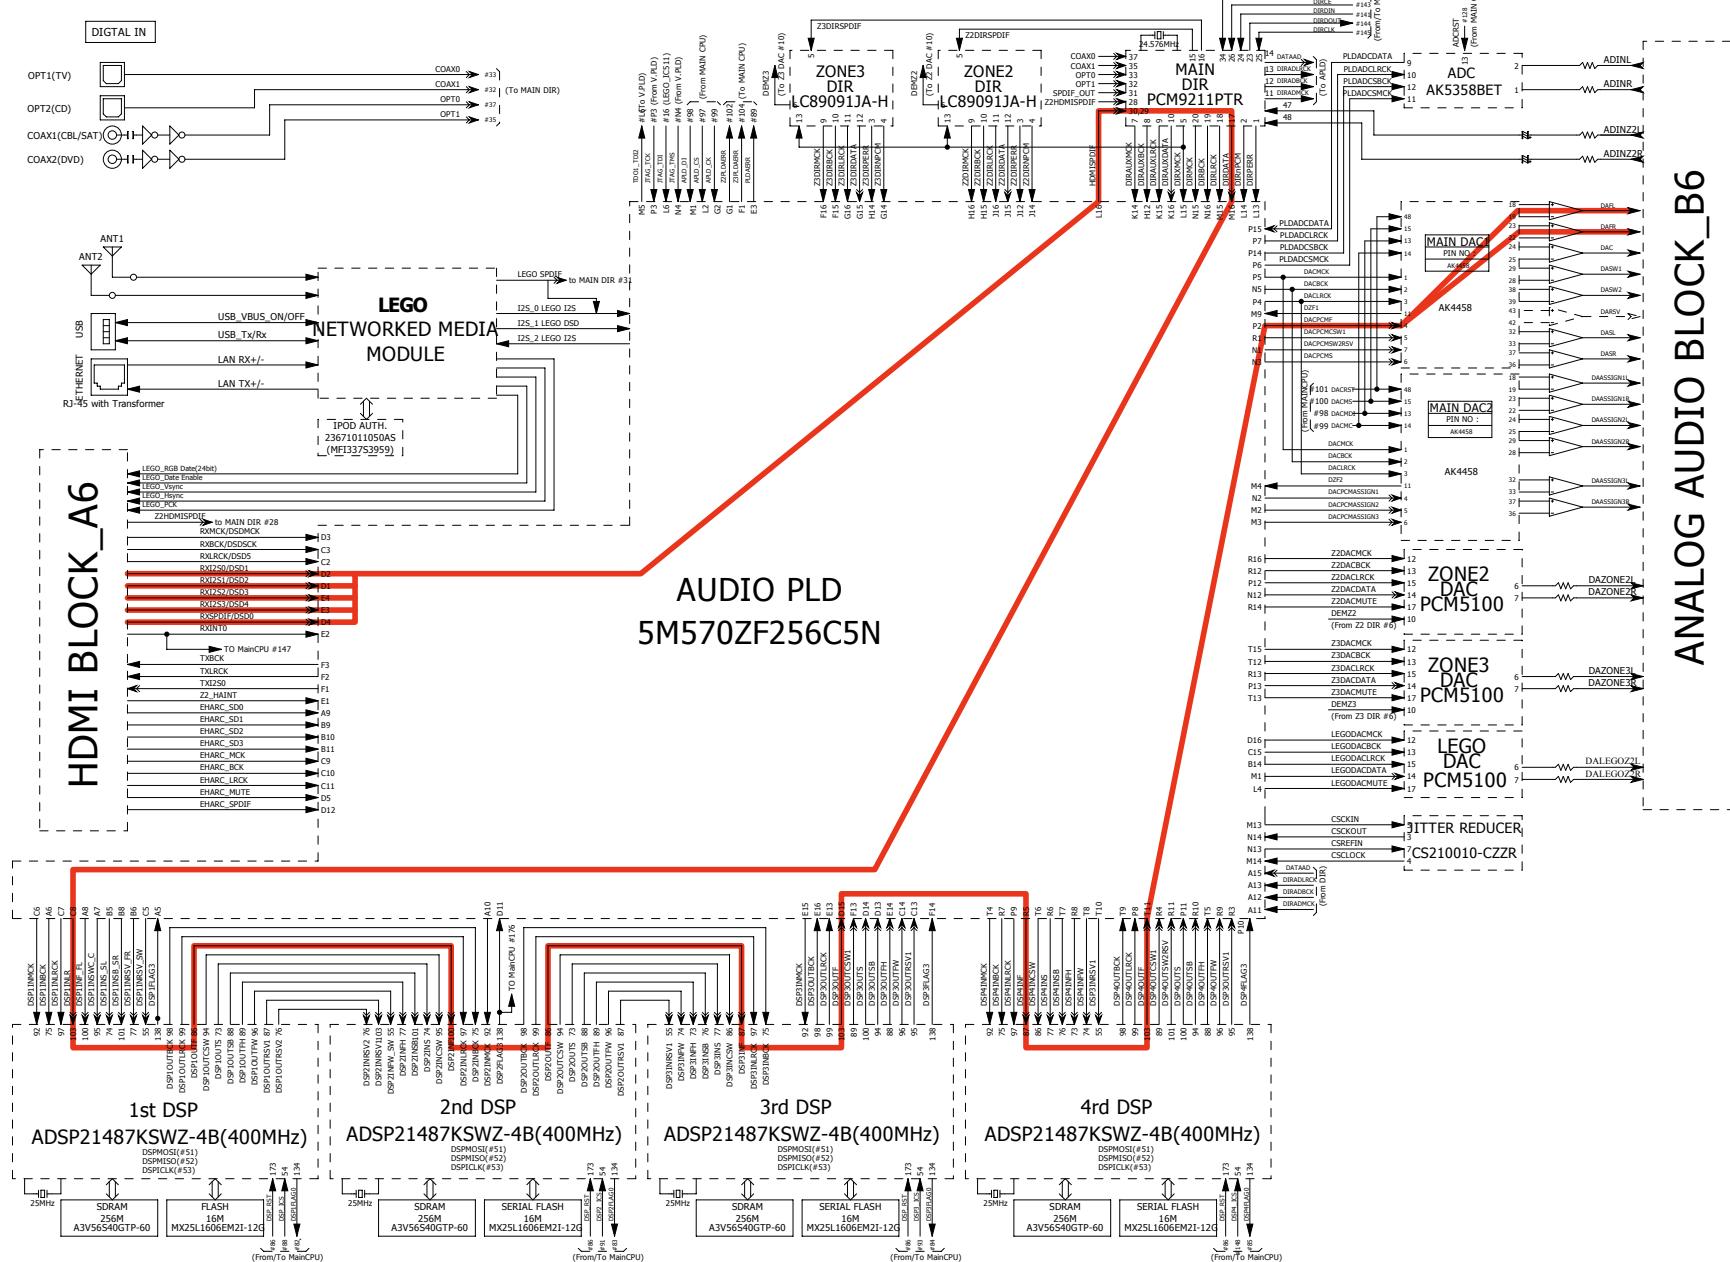
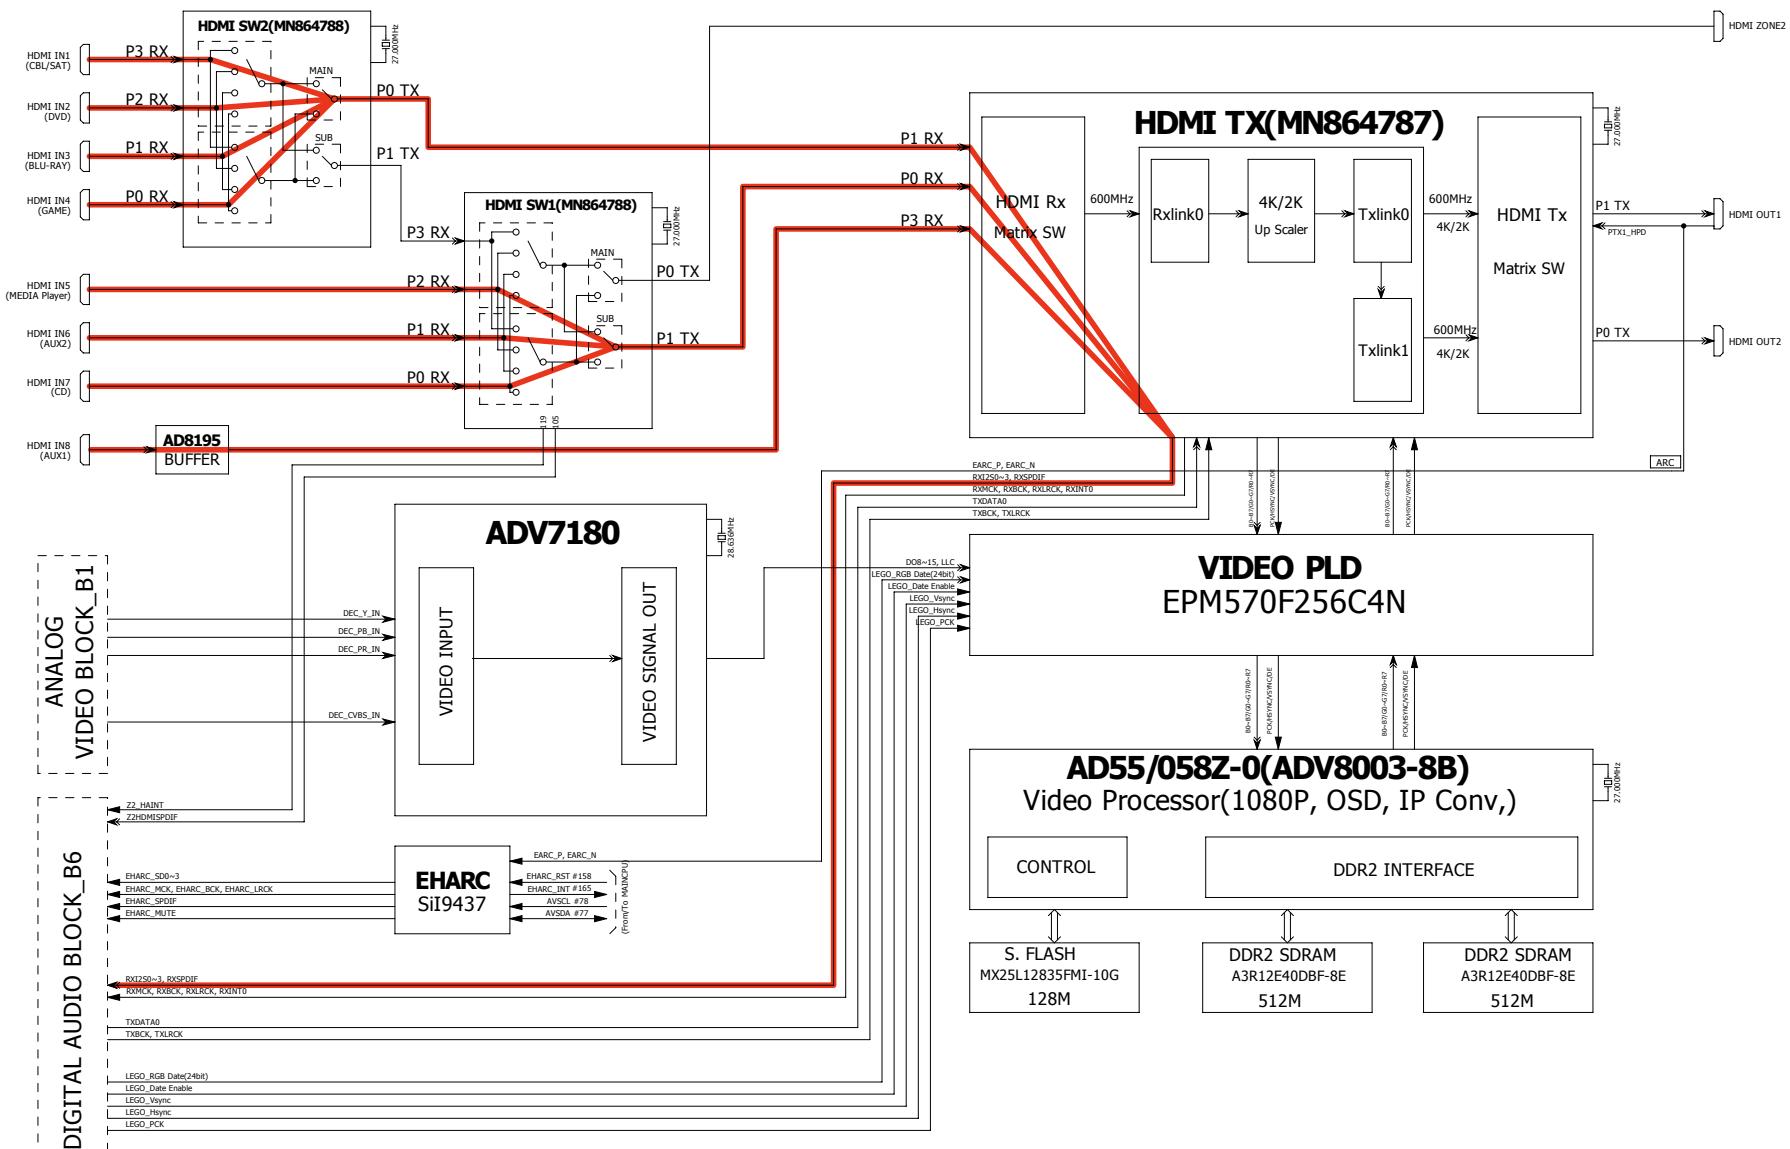


fig.05c

**AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK**

**fig.06a**


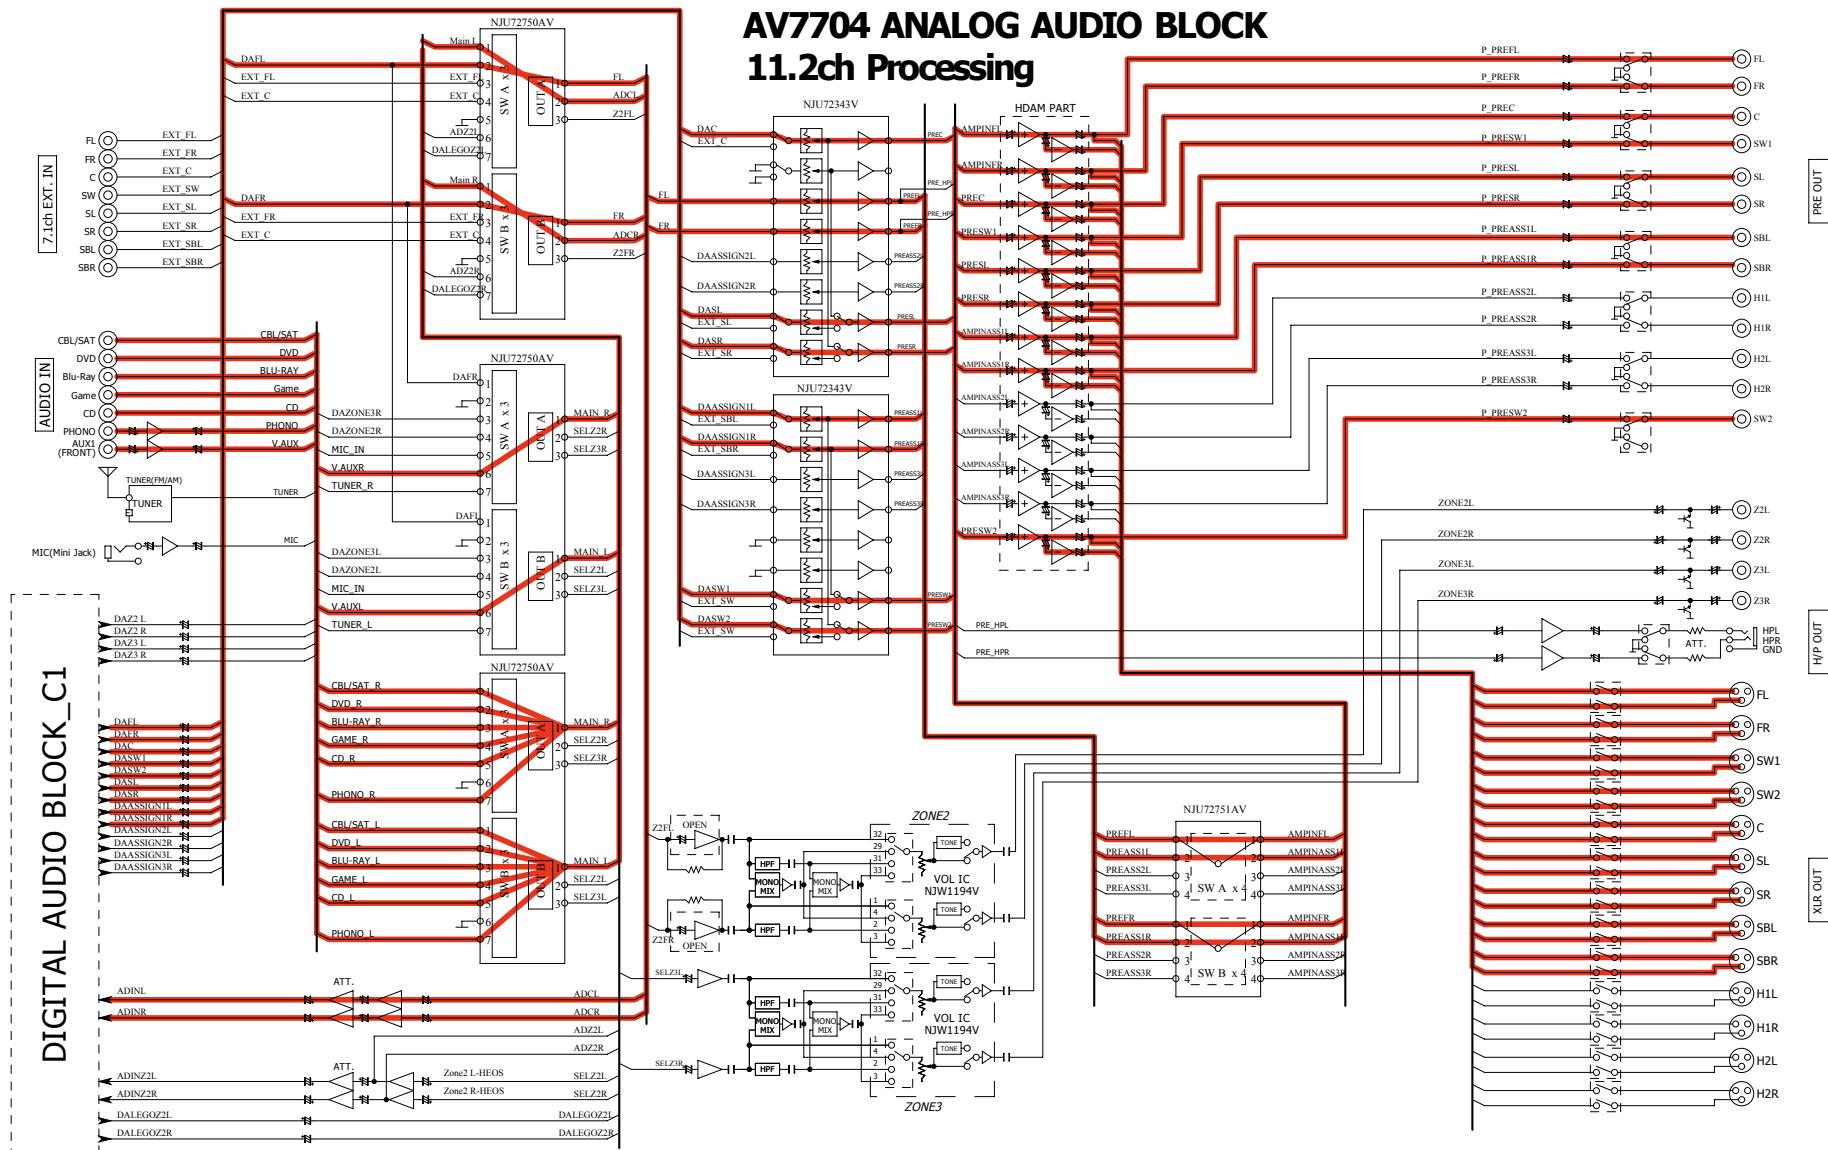


fig.06b

## SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)

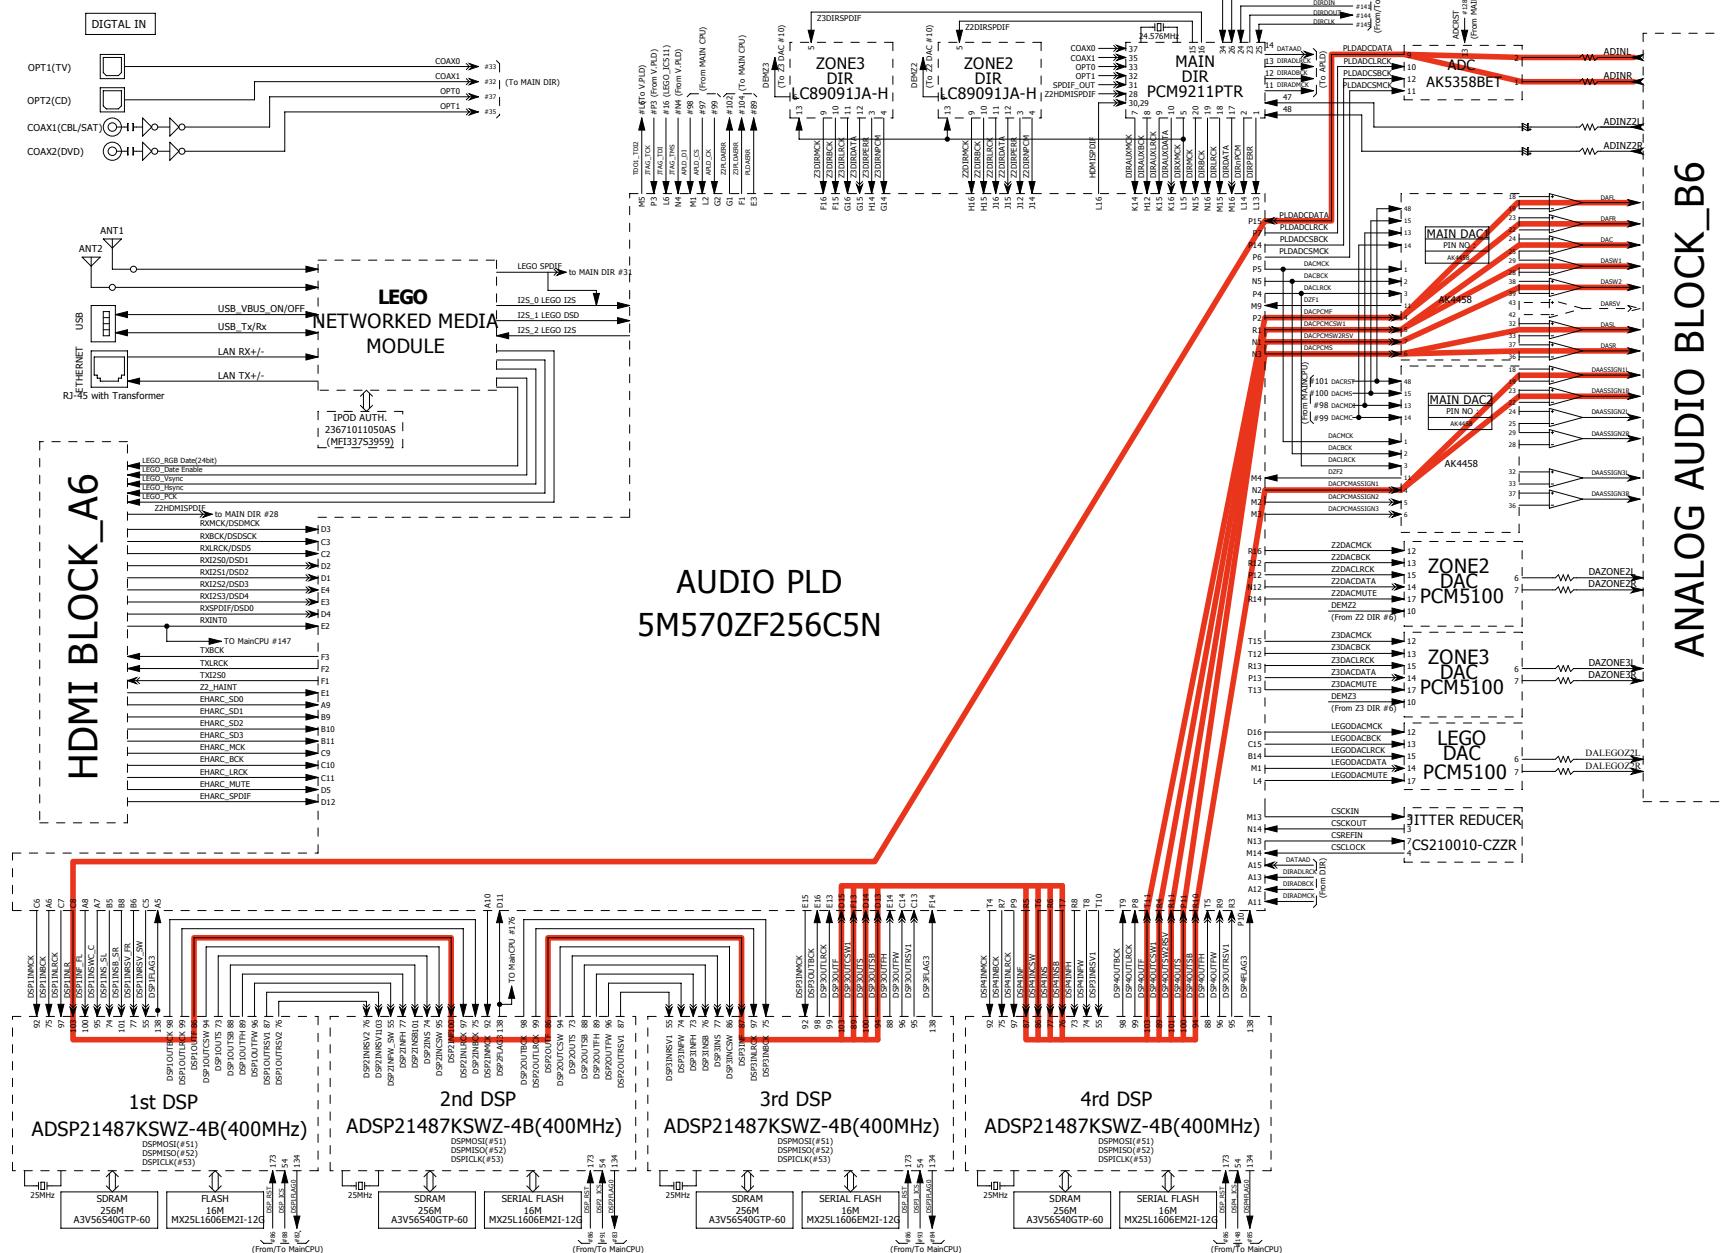

# **AV7704 ANALOG AUDIO BLOCK**

## **11.2ch Processing**

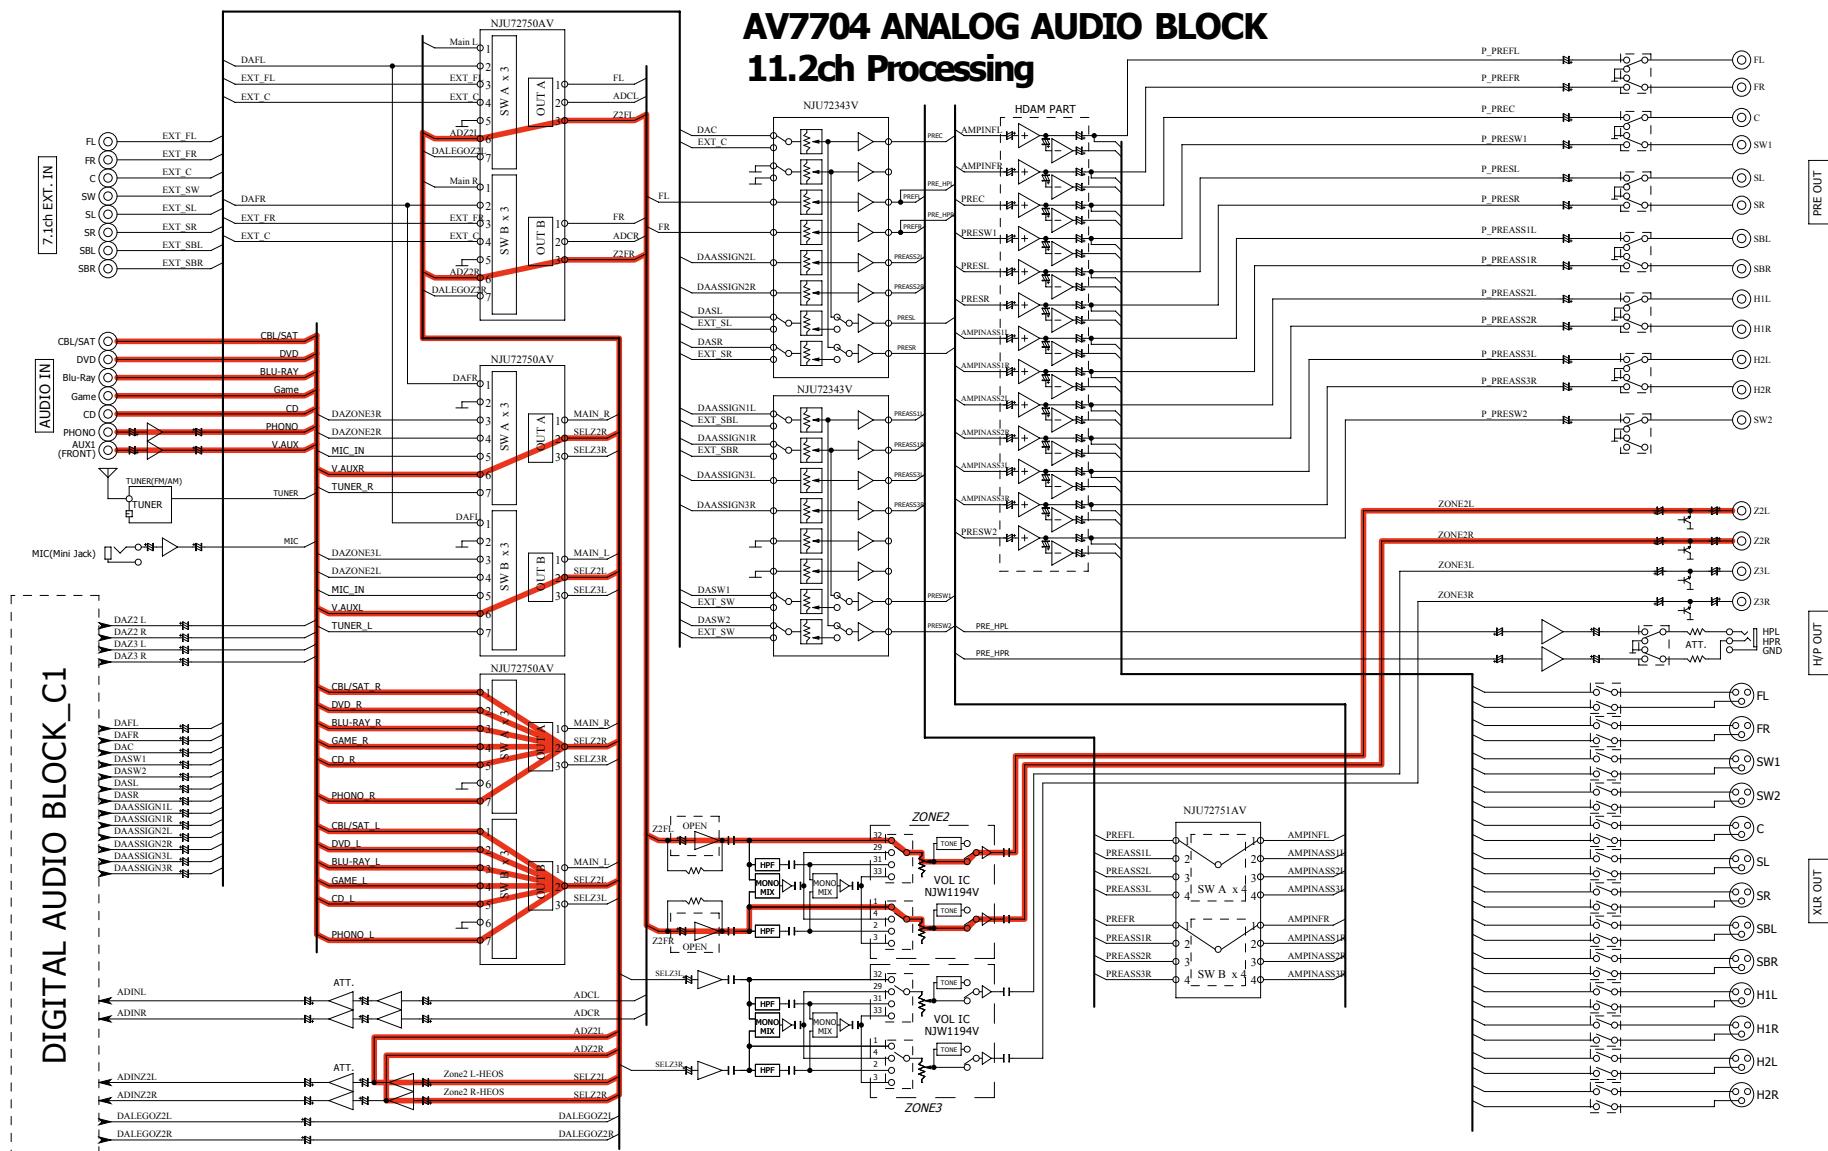


fig.08

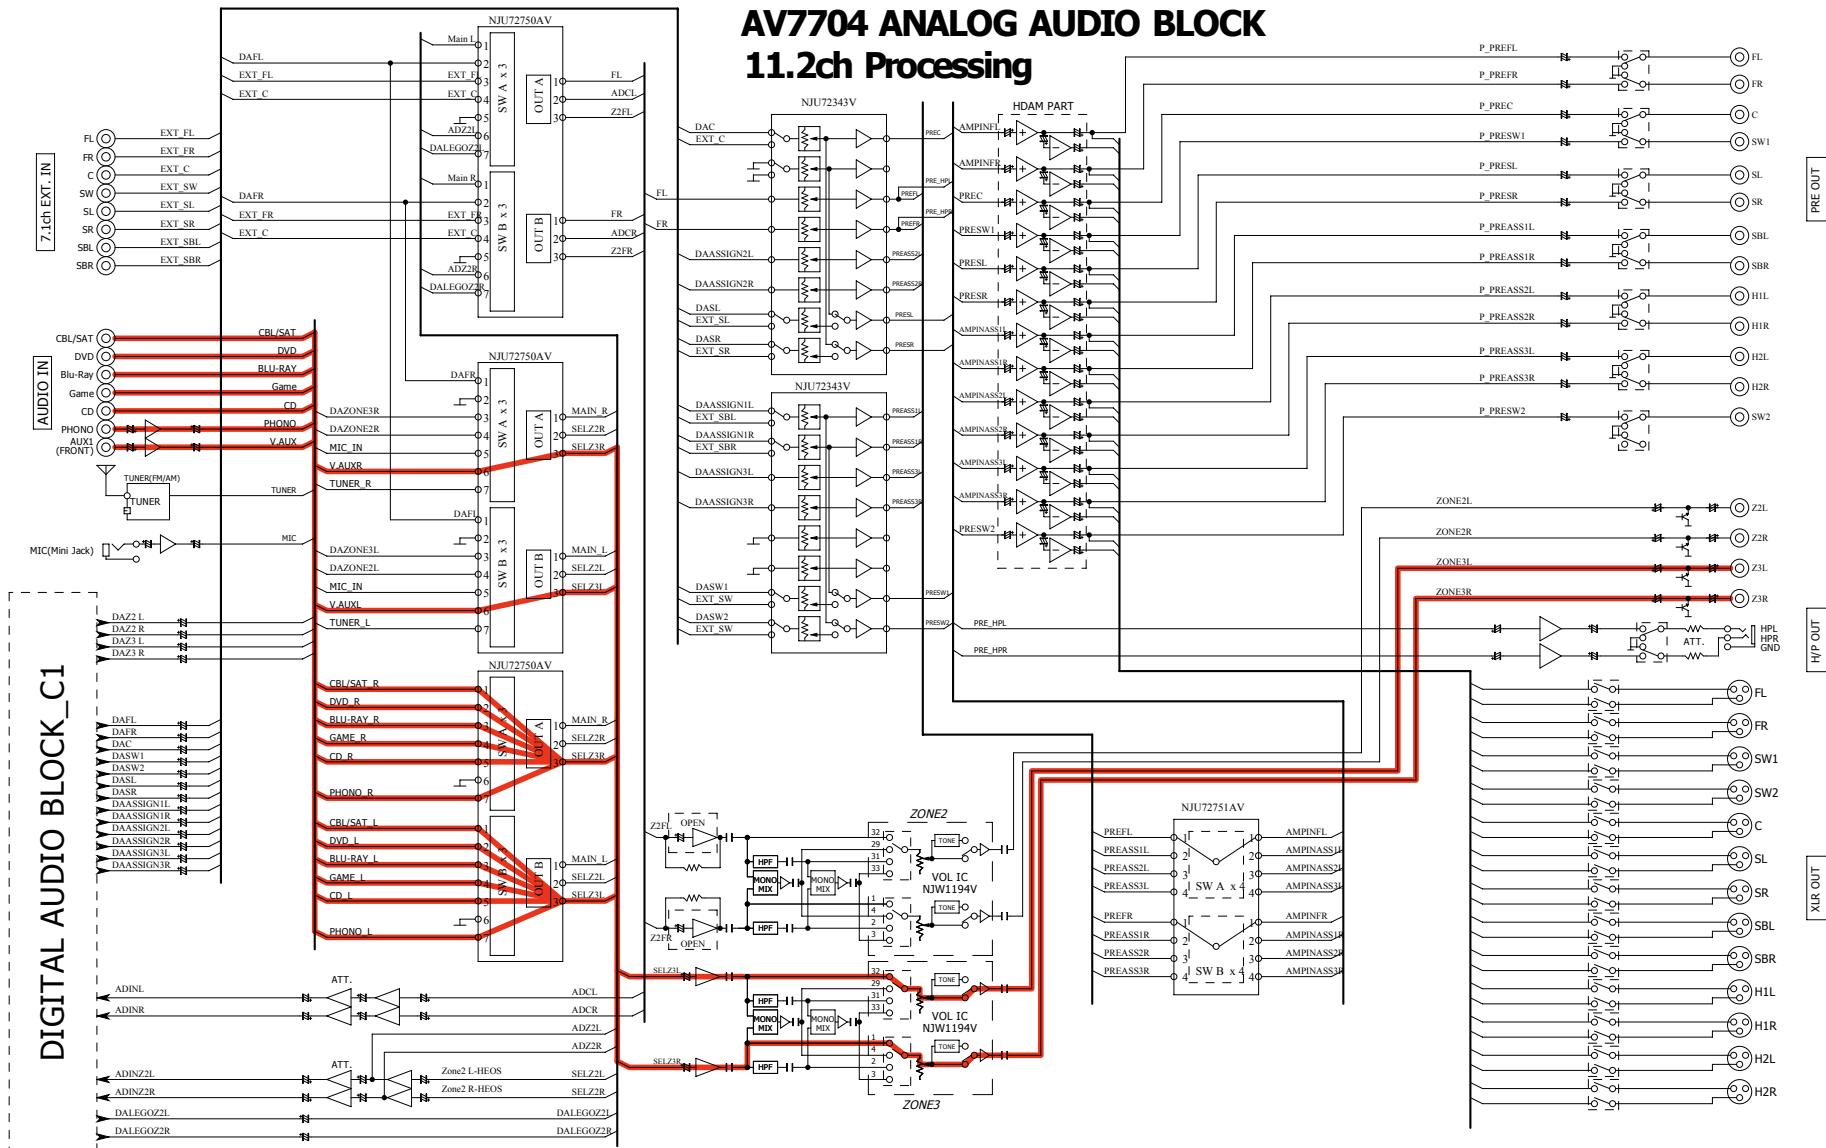
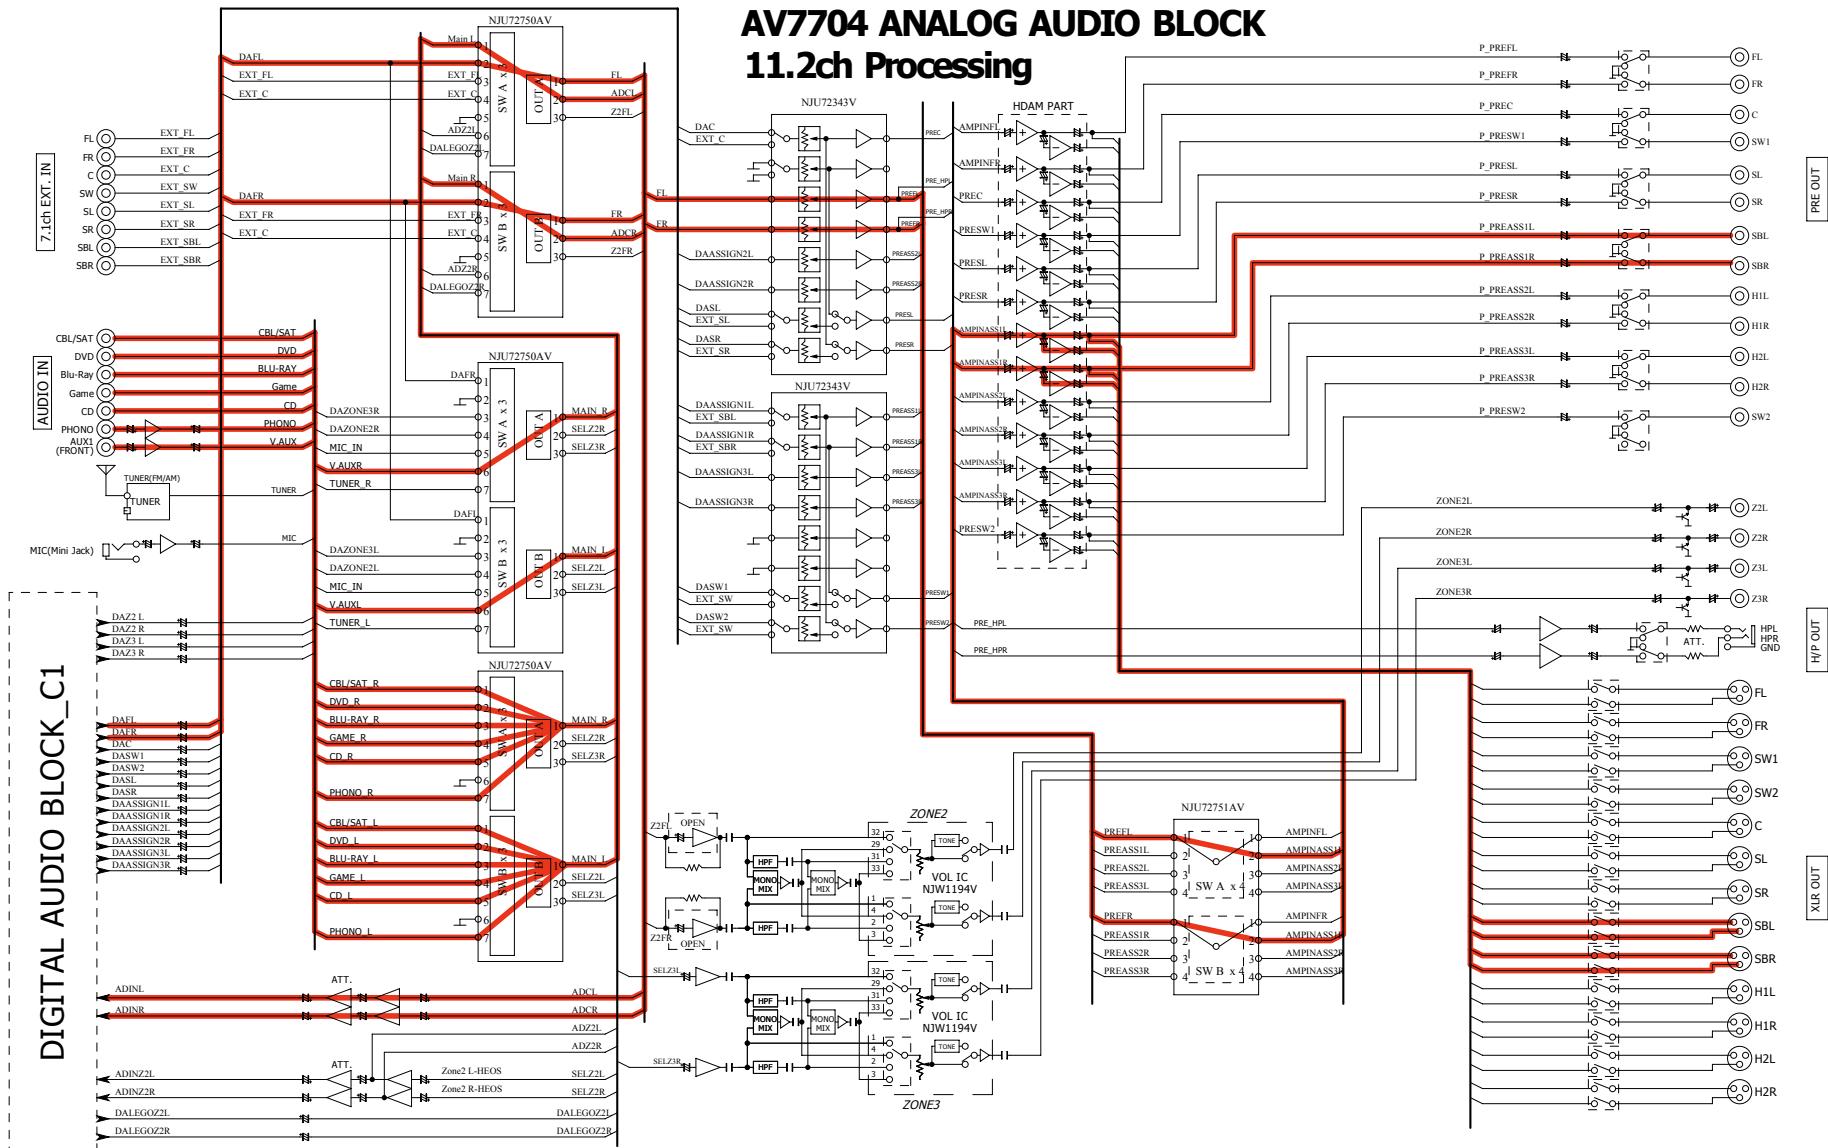
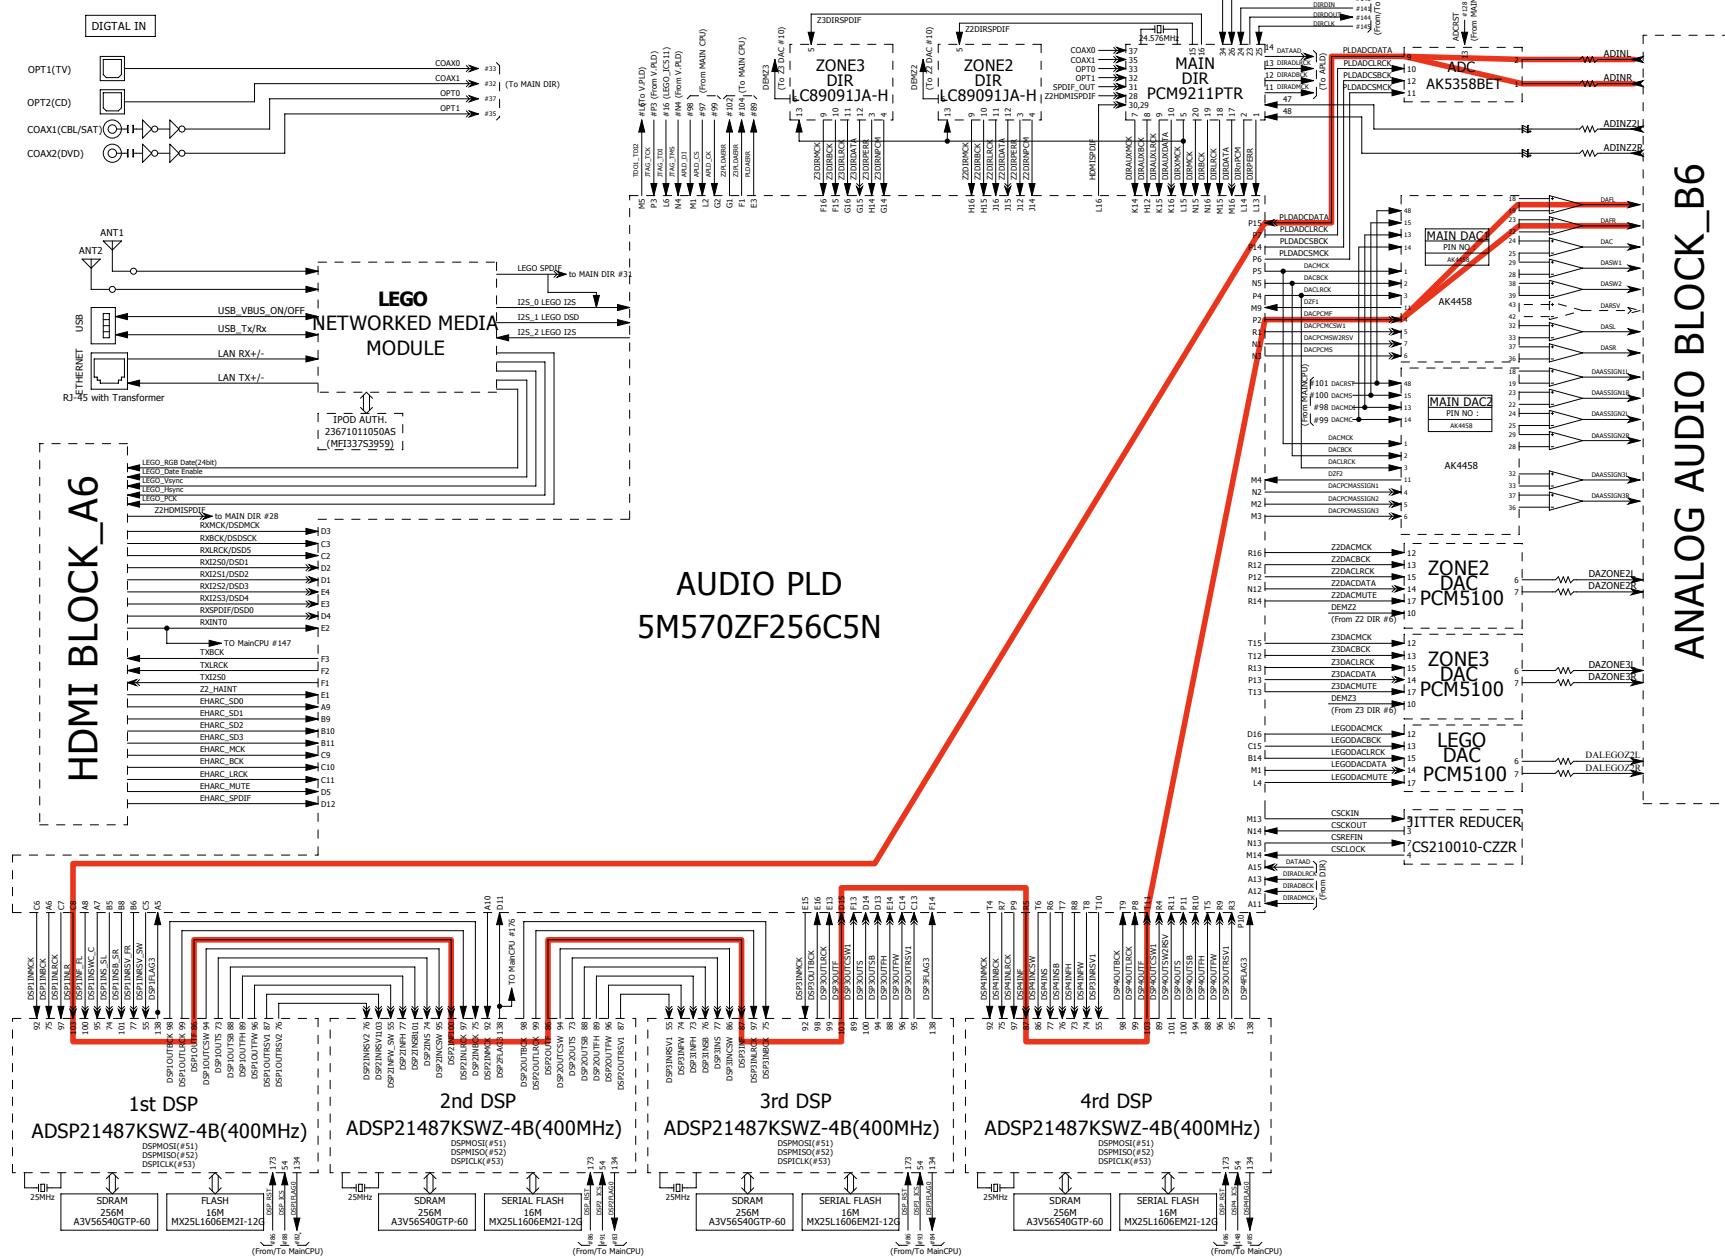


fig.09a



**fig.09b**

# **SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)**



**fig.10a**

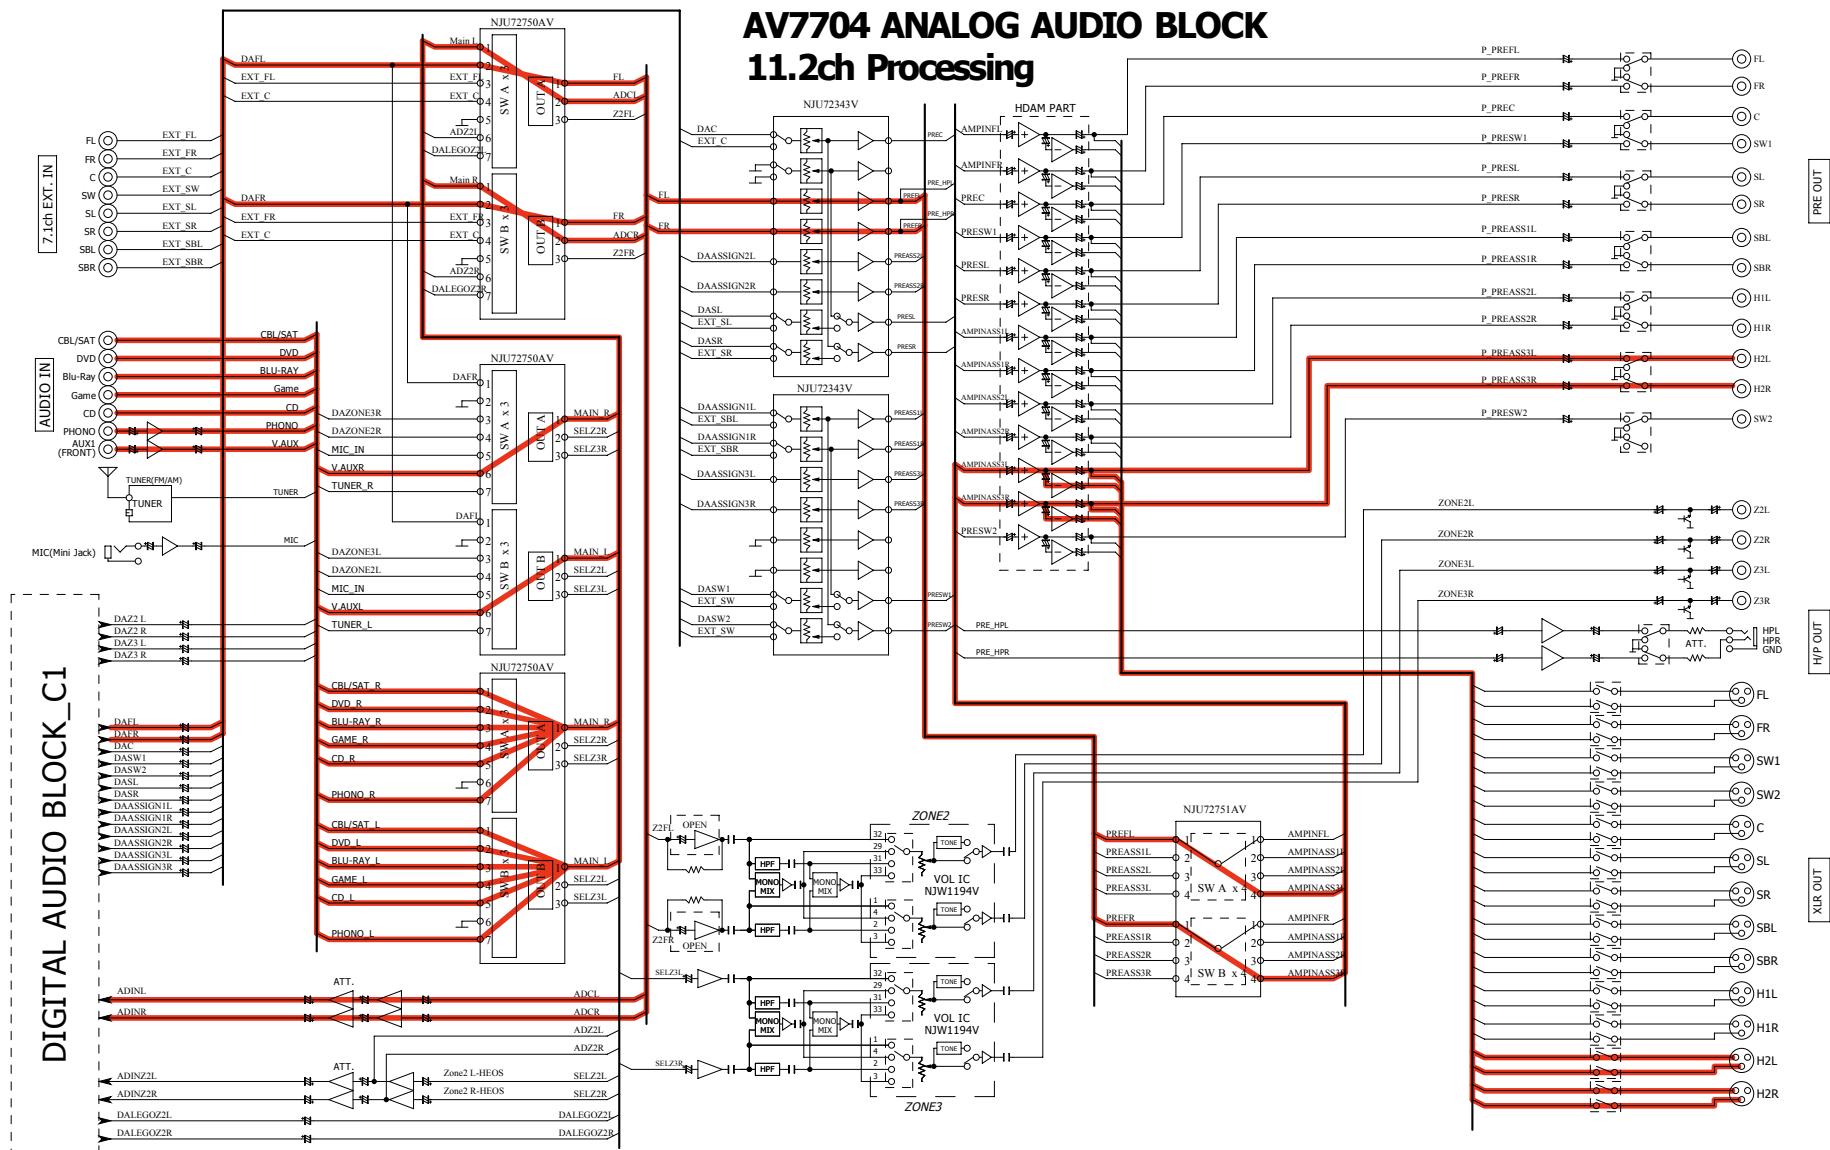


fig.10b

# **SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)**

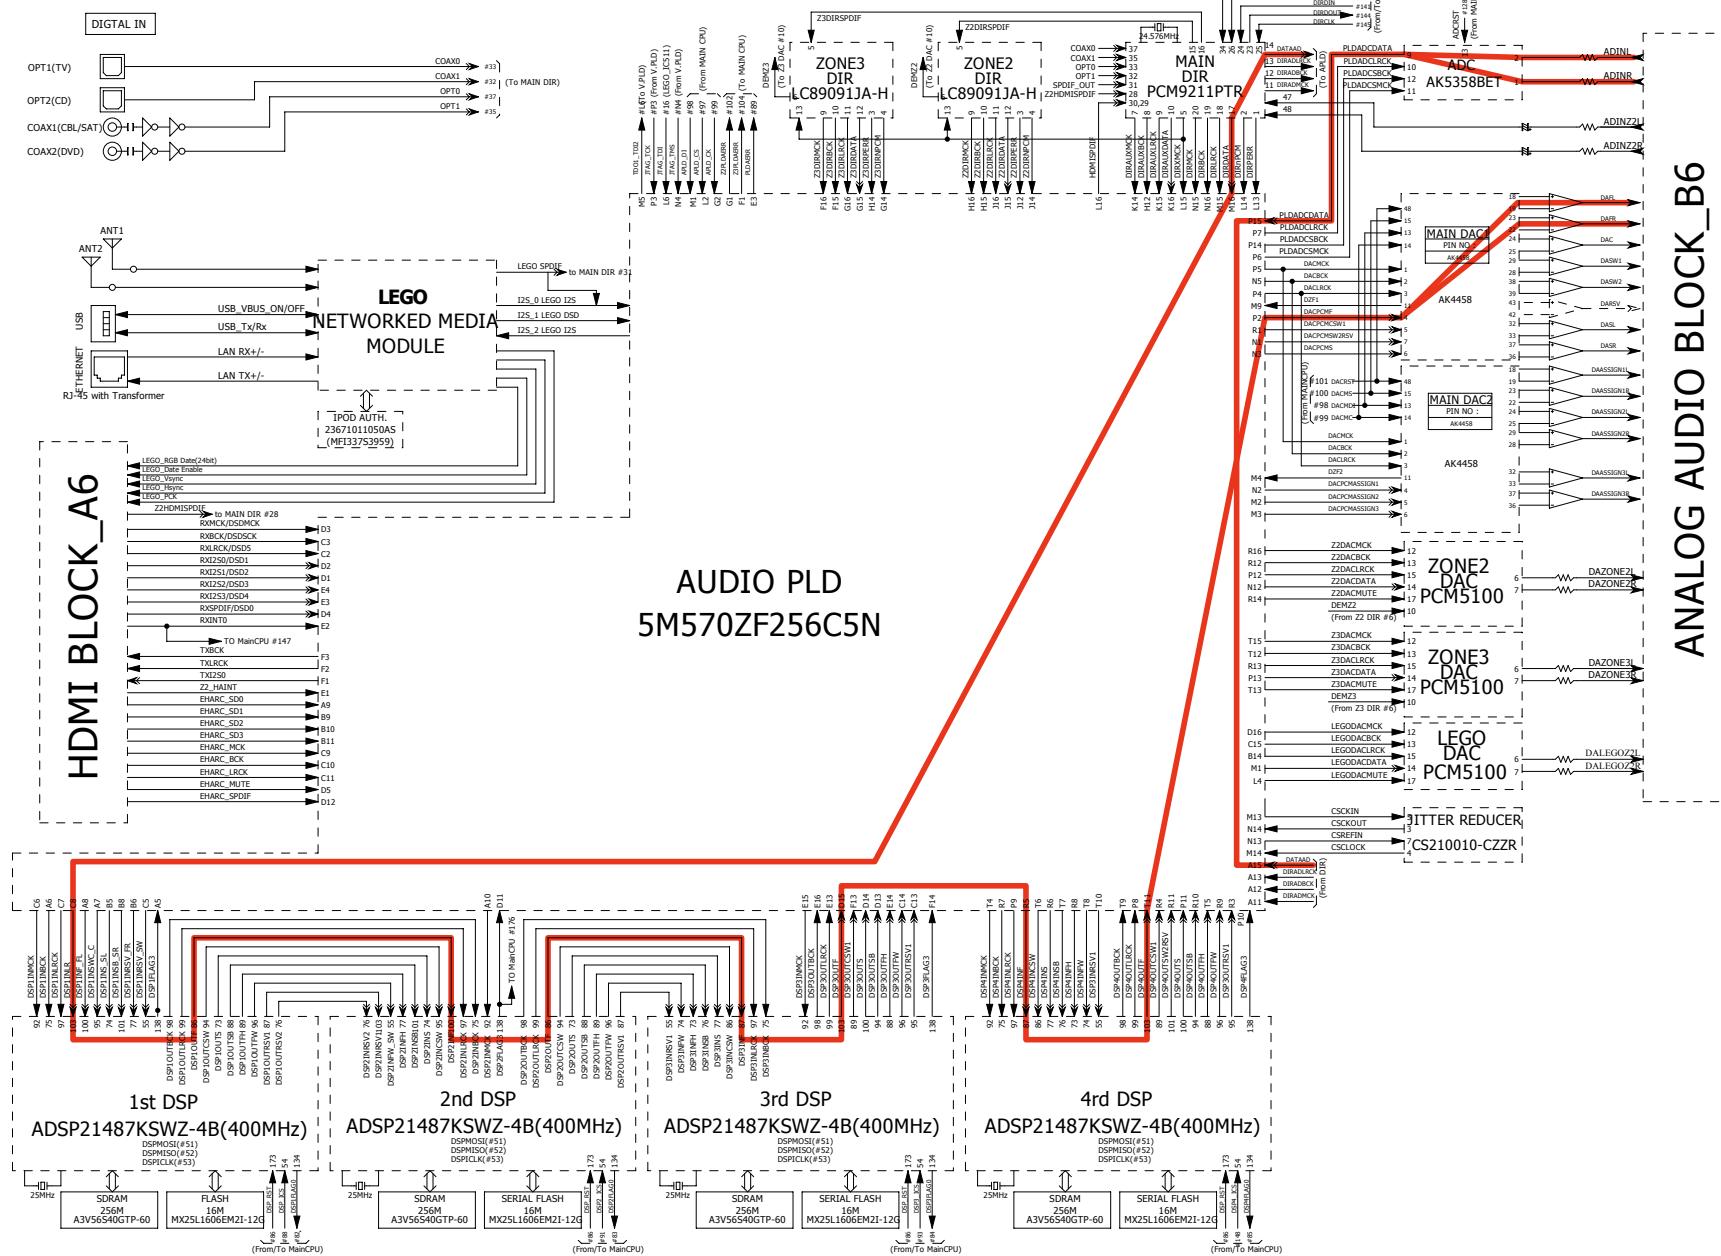
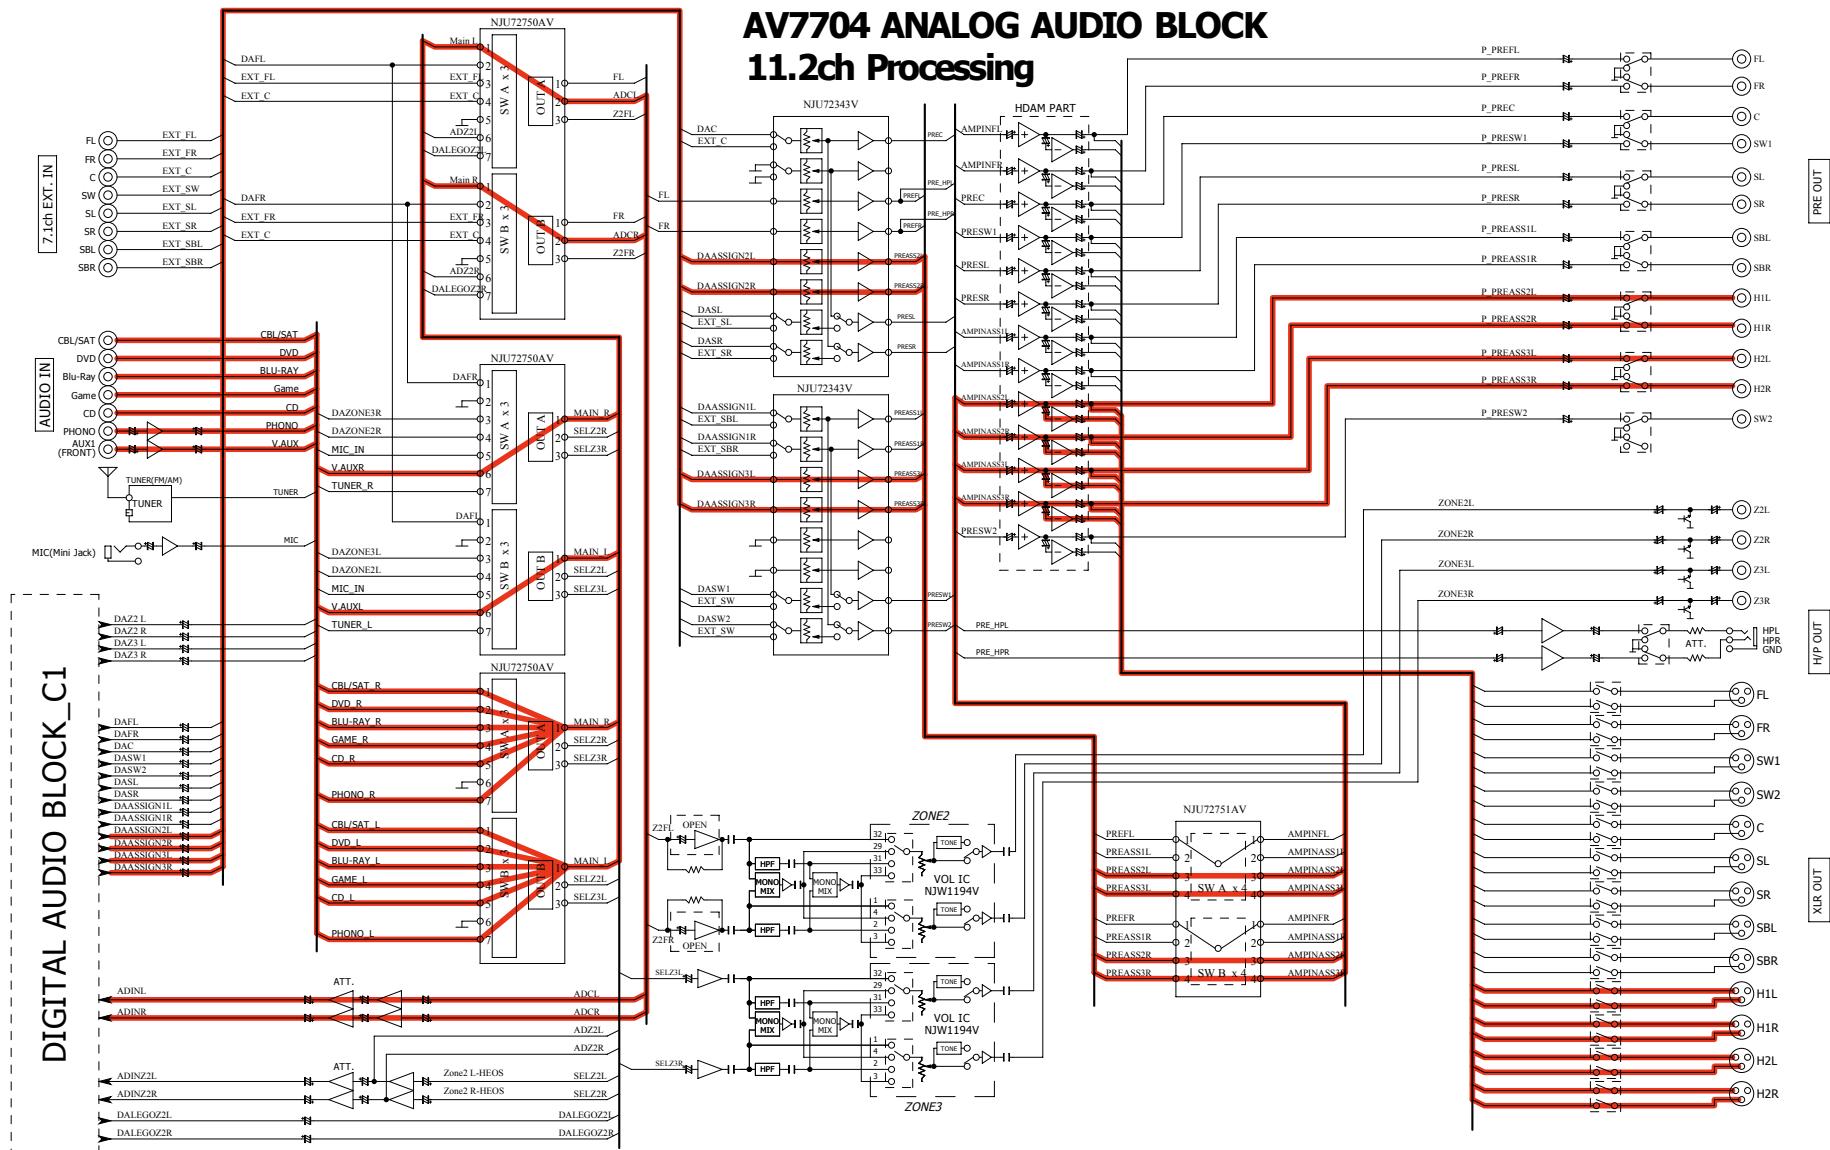
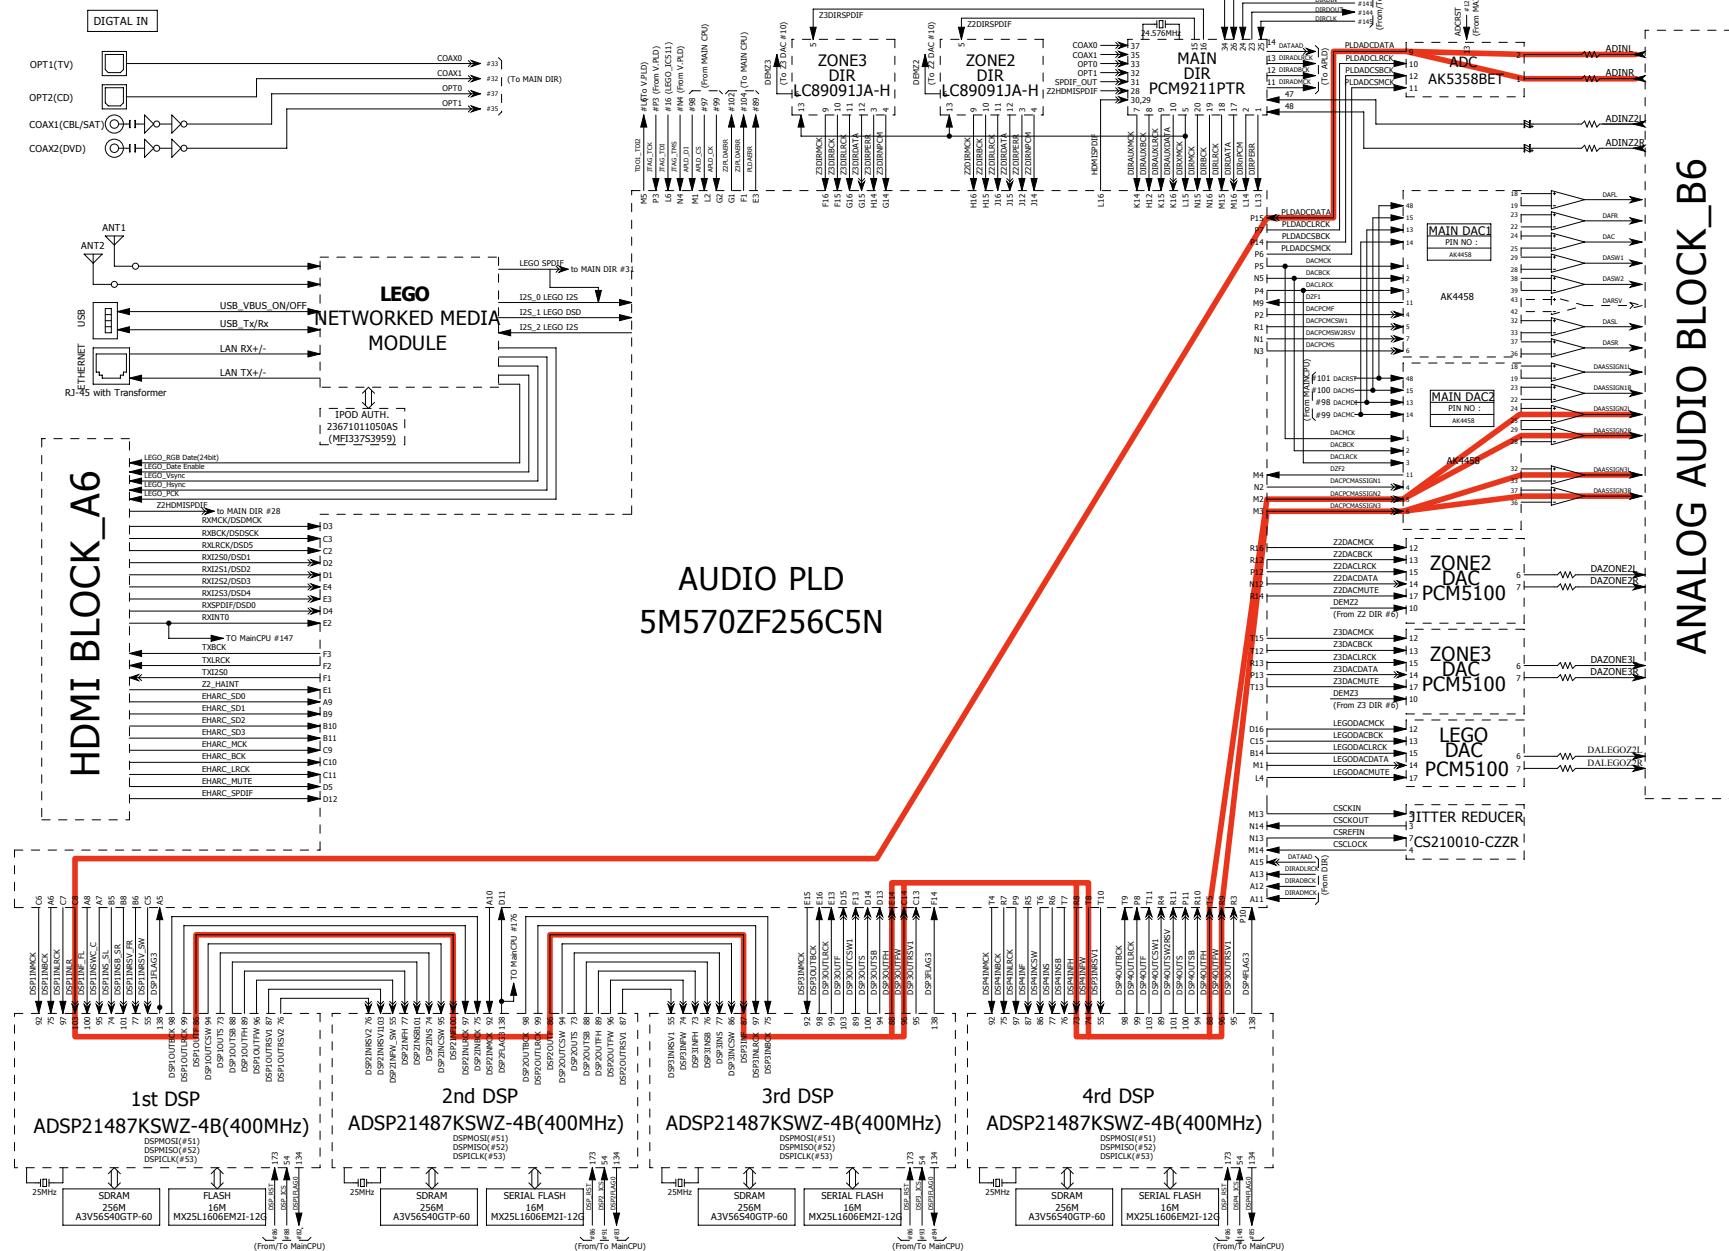


fig.11a



**fig.11b**

# **SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)**



**fig.12**

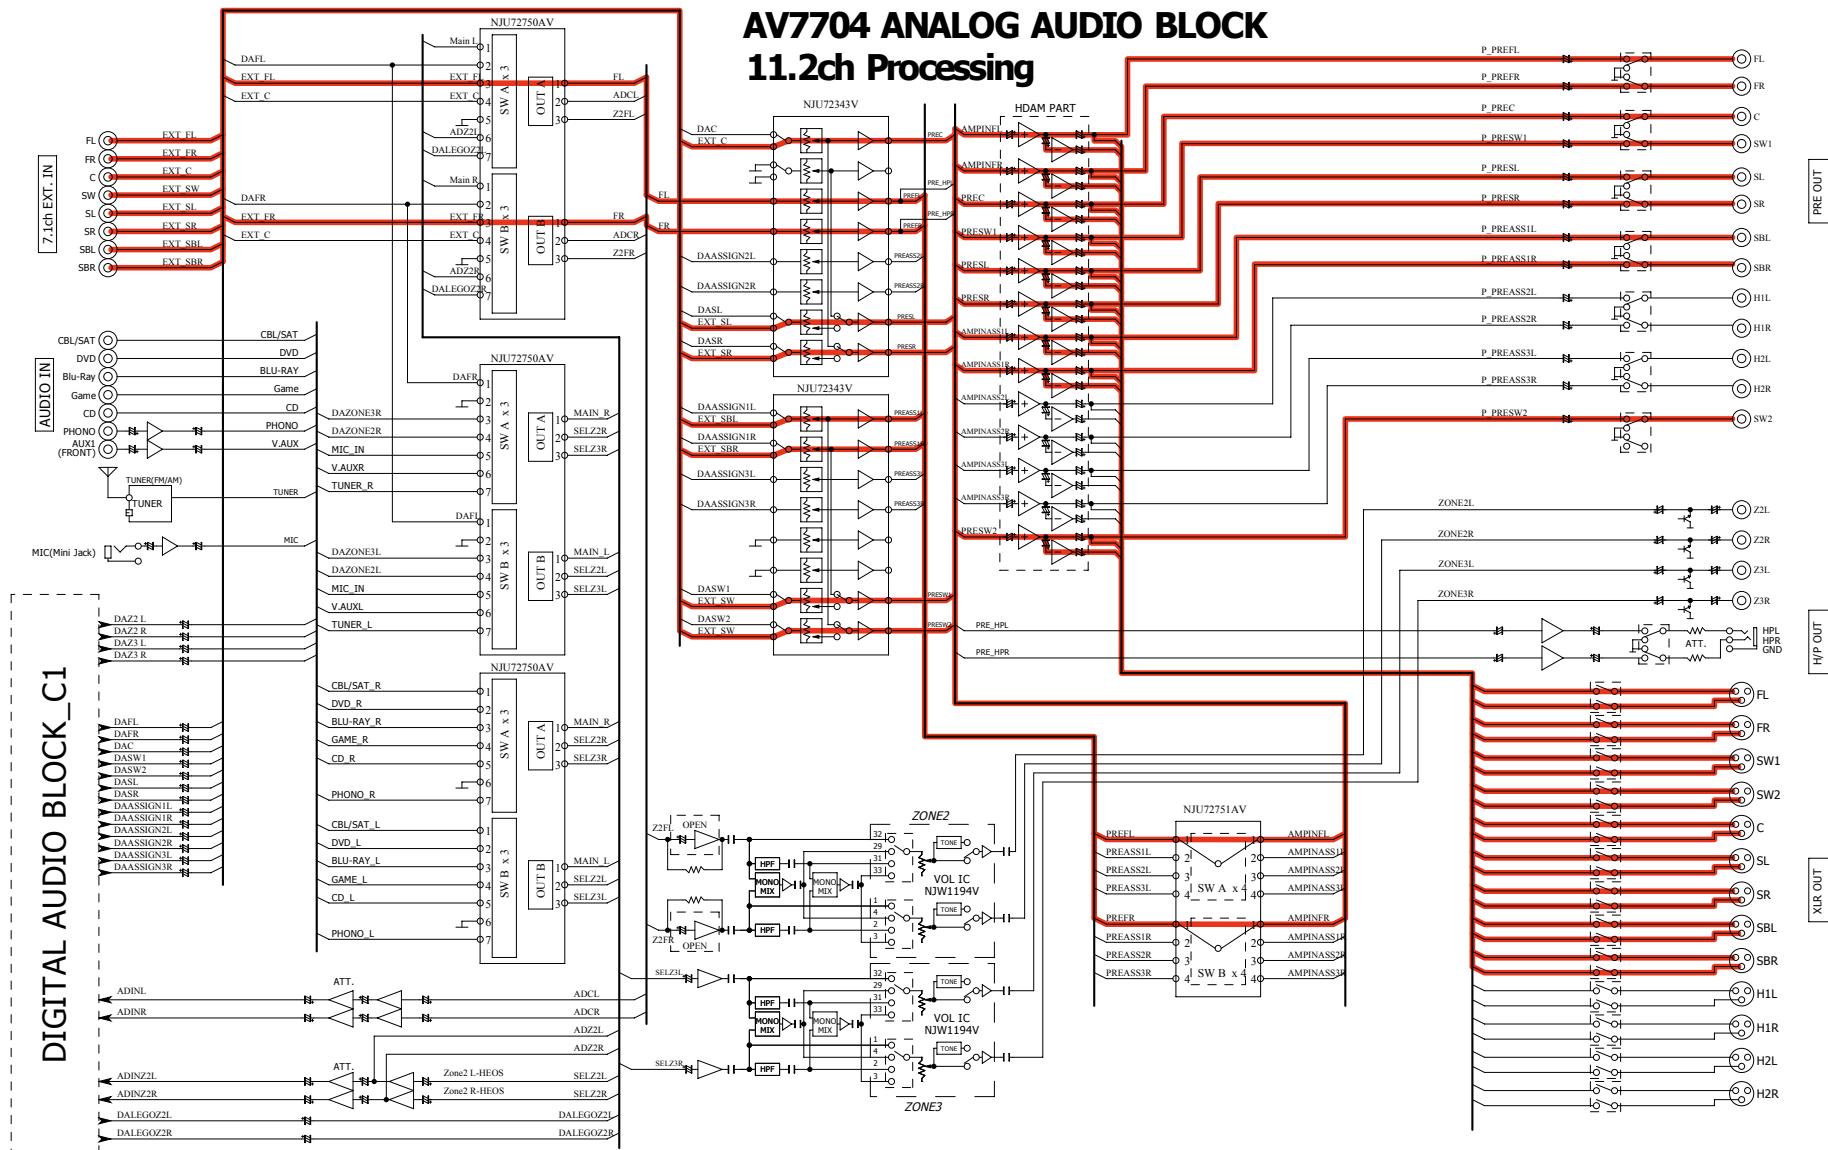


fig.13

## SR7012/AV7704 ANALOG VIDEO BLOCK

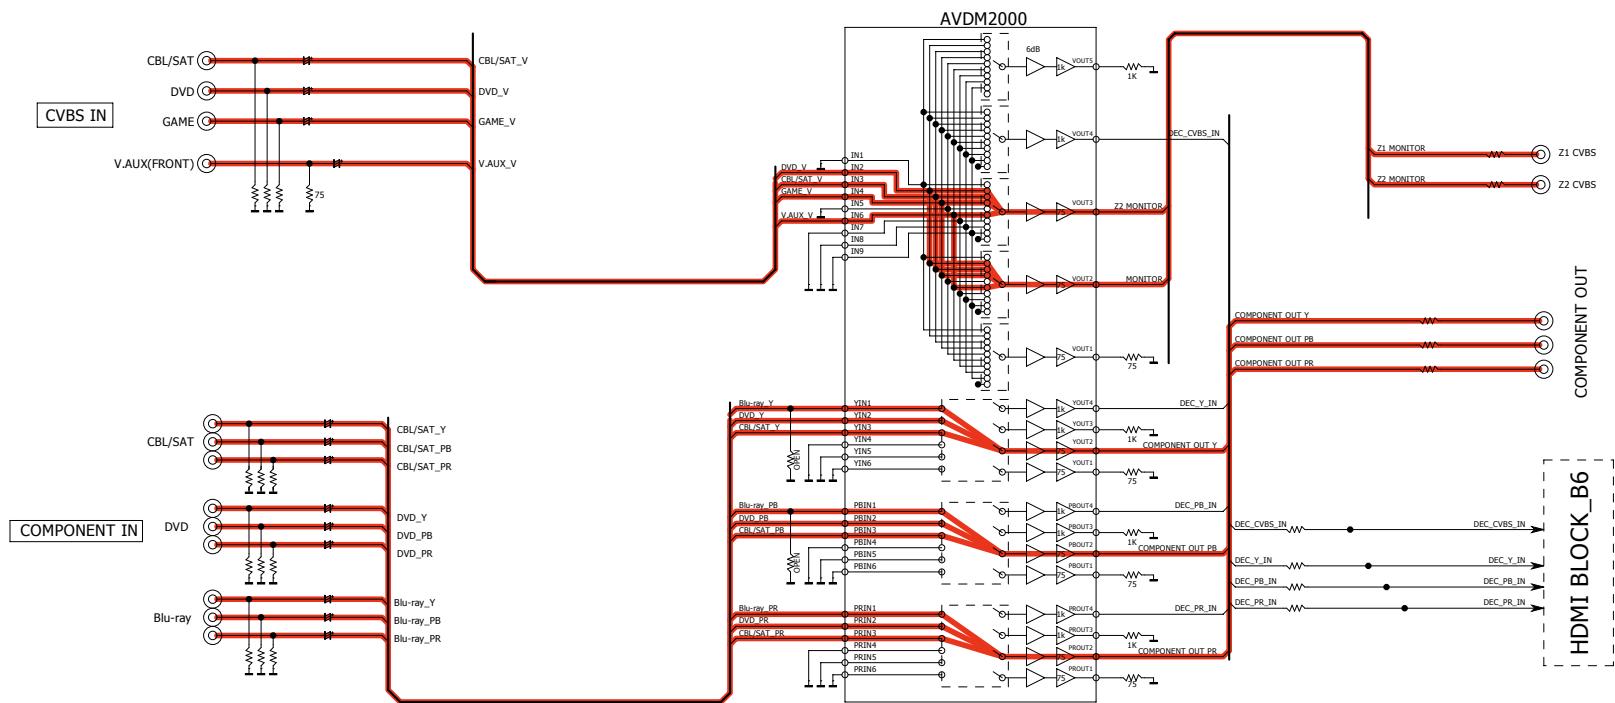


fig.14a

## SR7012/AV7704 ANALOG VIDEO BLOCK

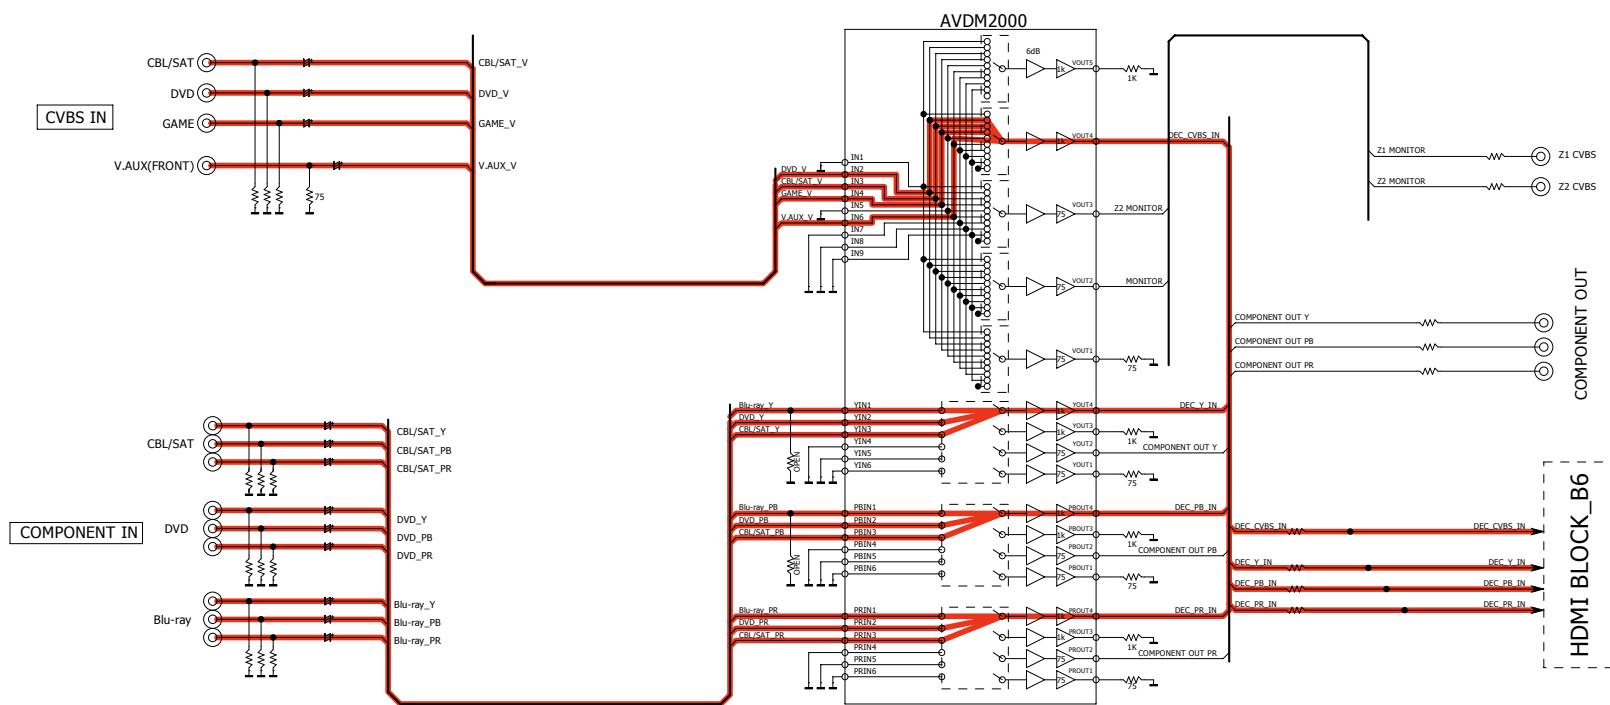


fig.14b

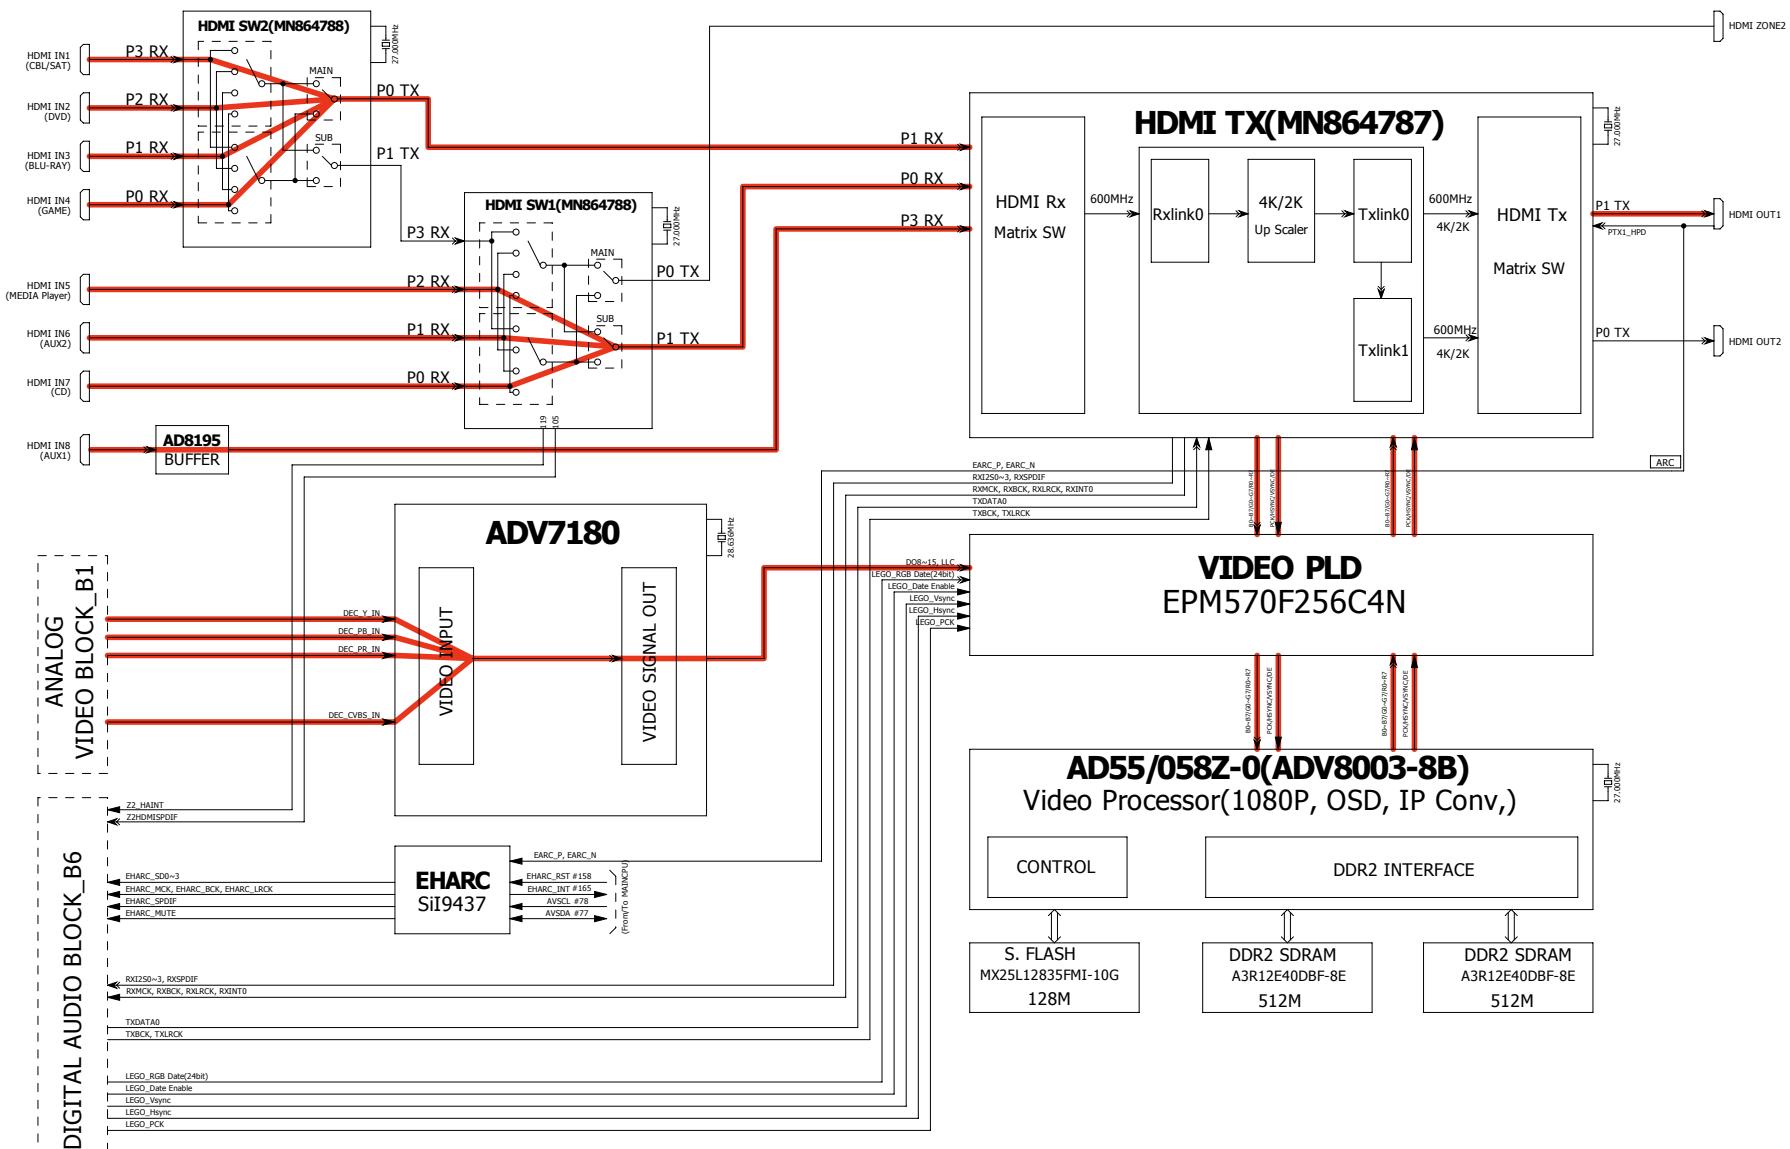
**AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK**

fig.15

## AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK

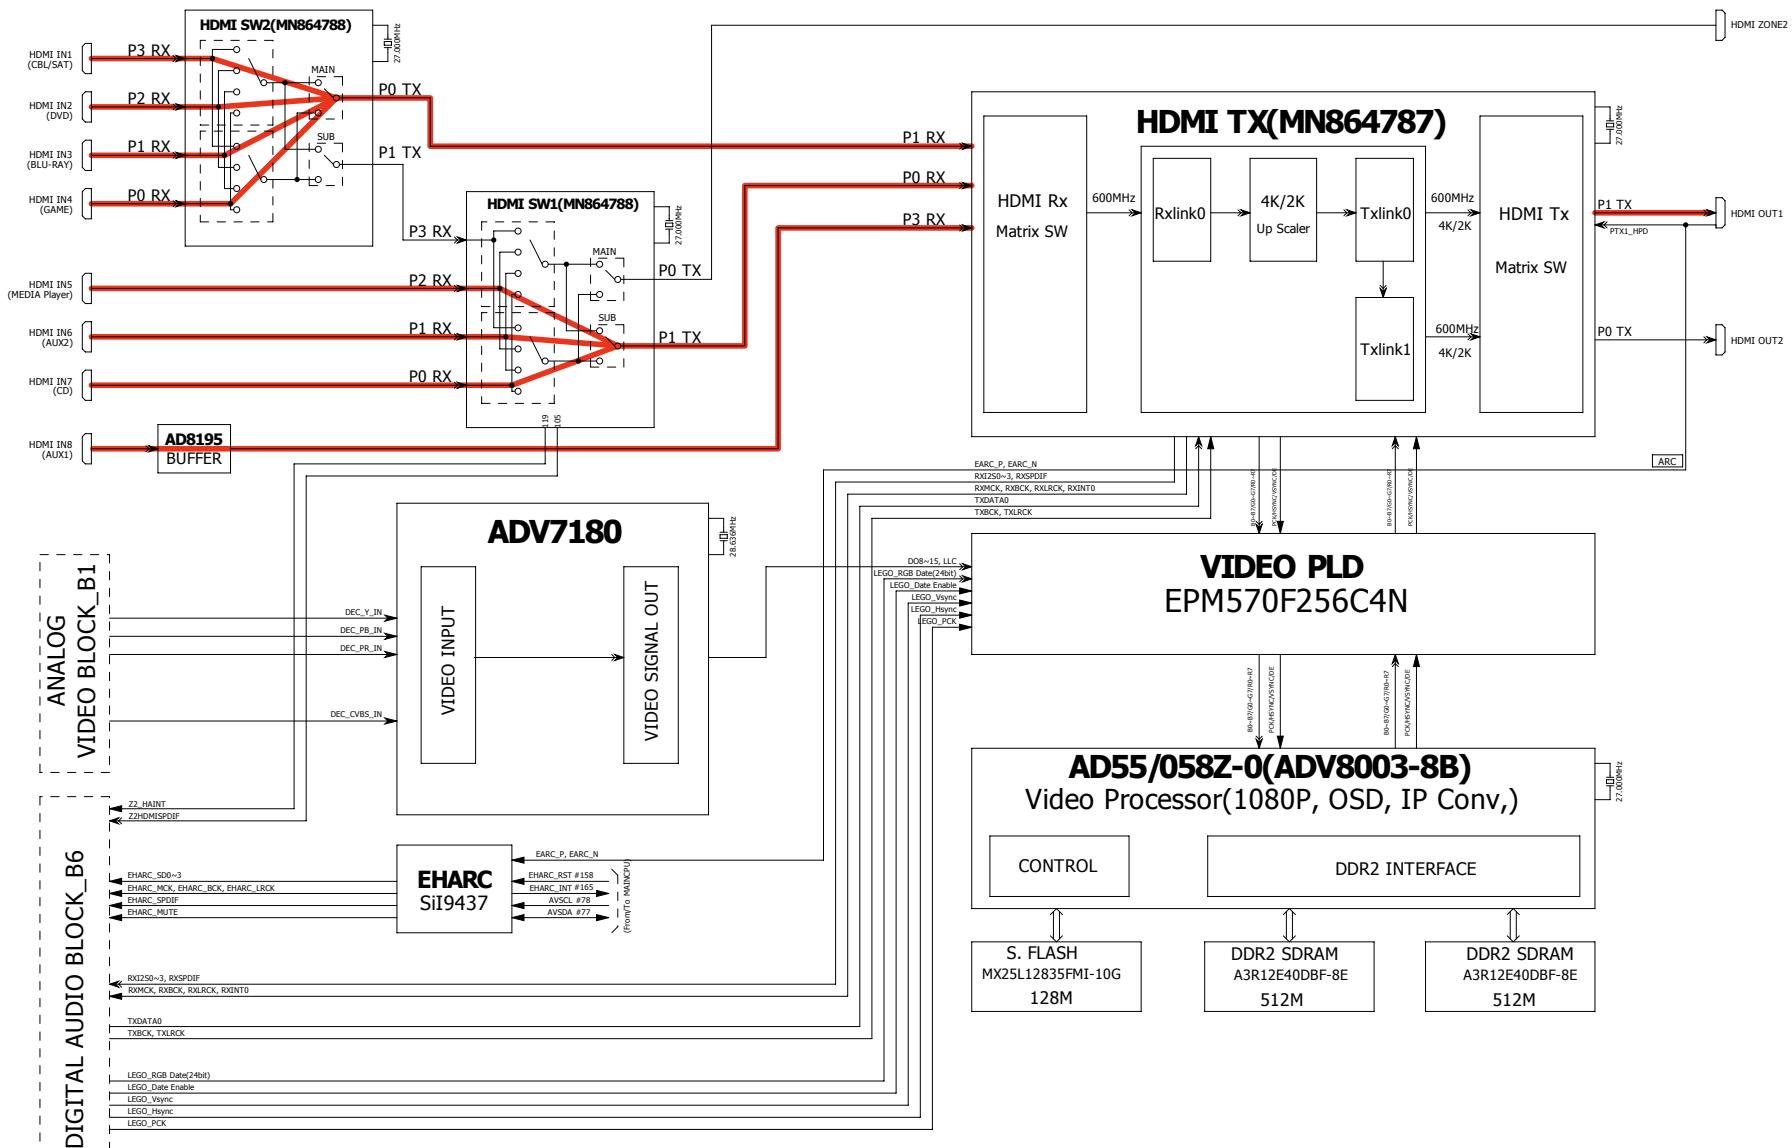


fig.16

## **AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK**

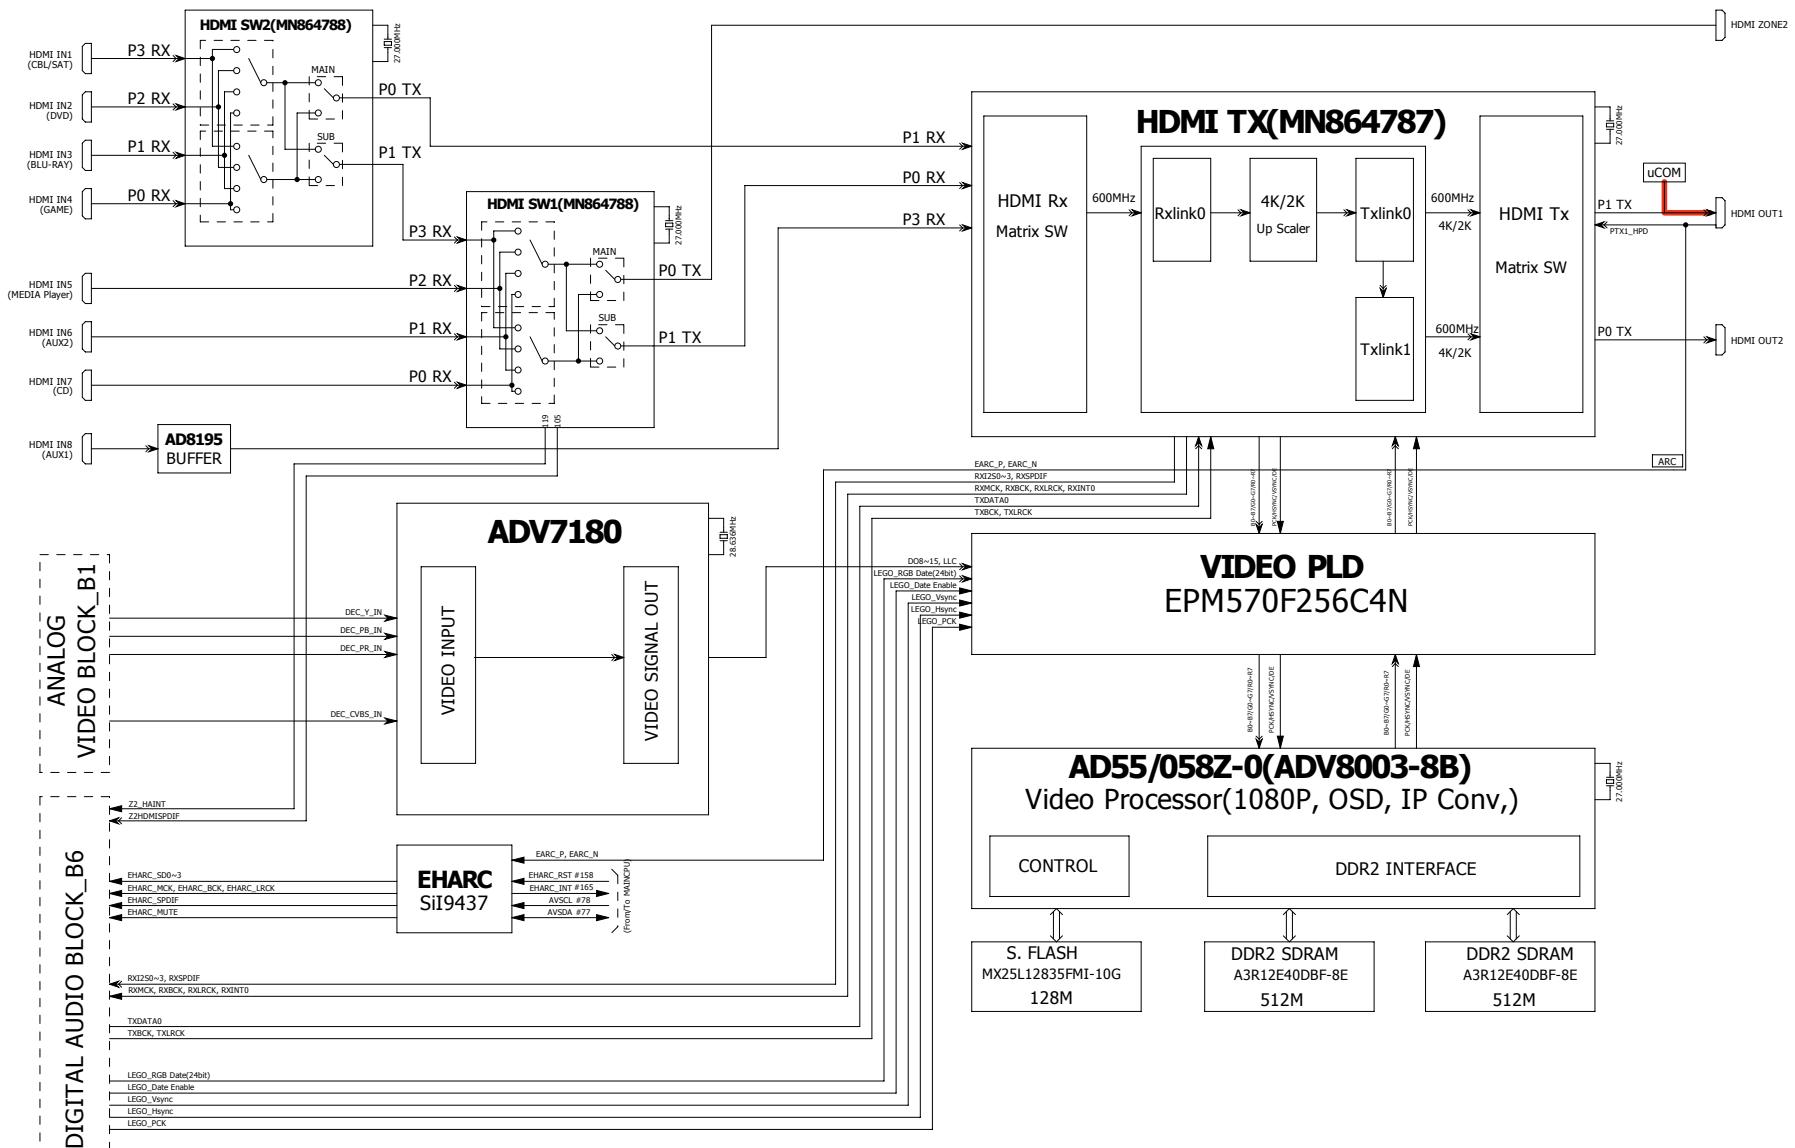


fig.17a

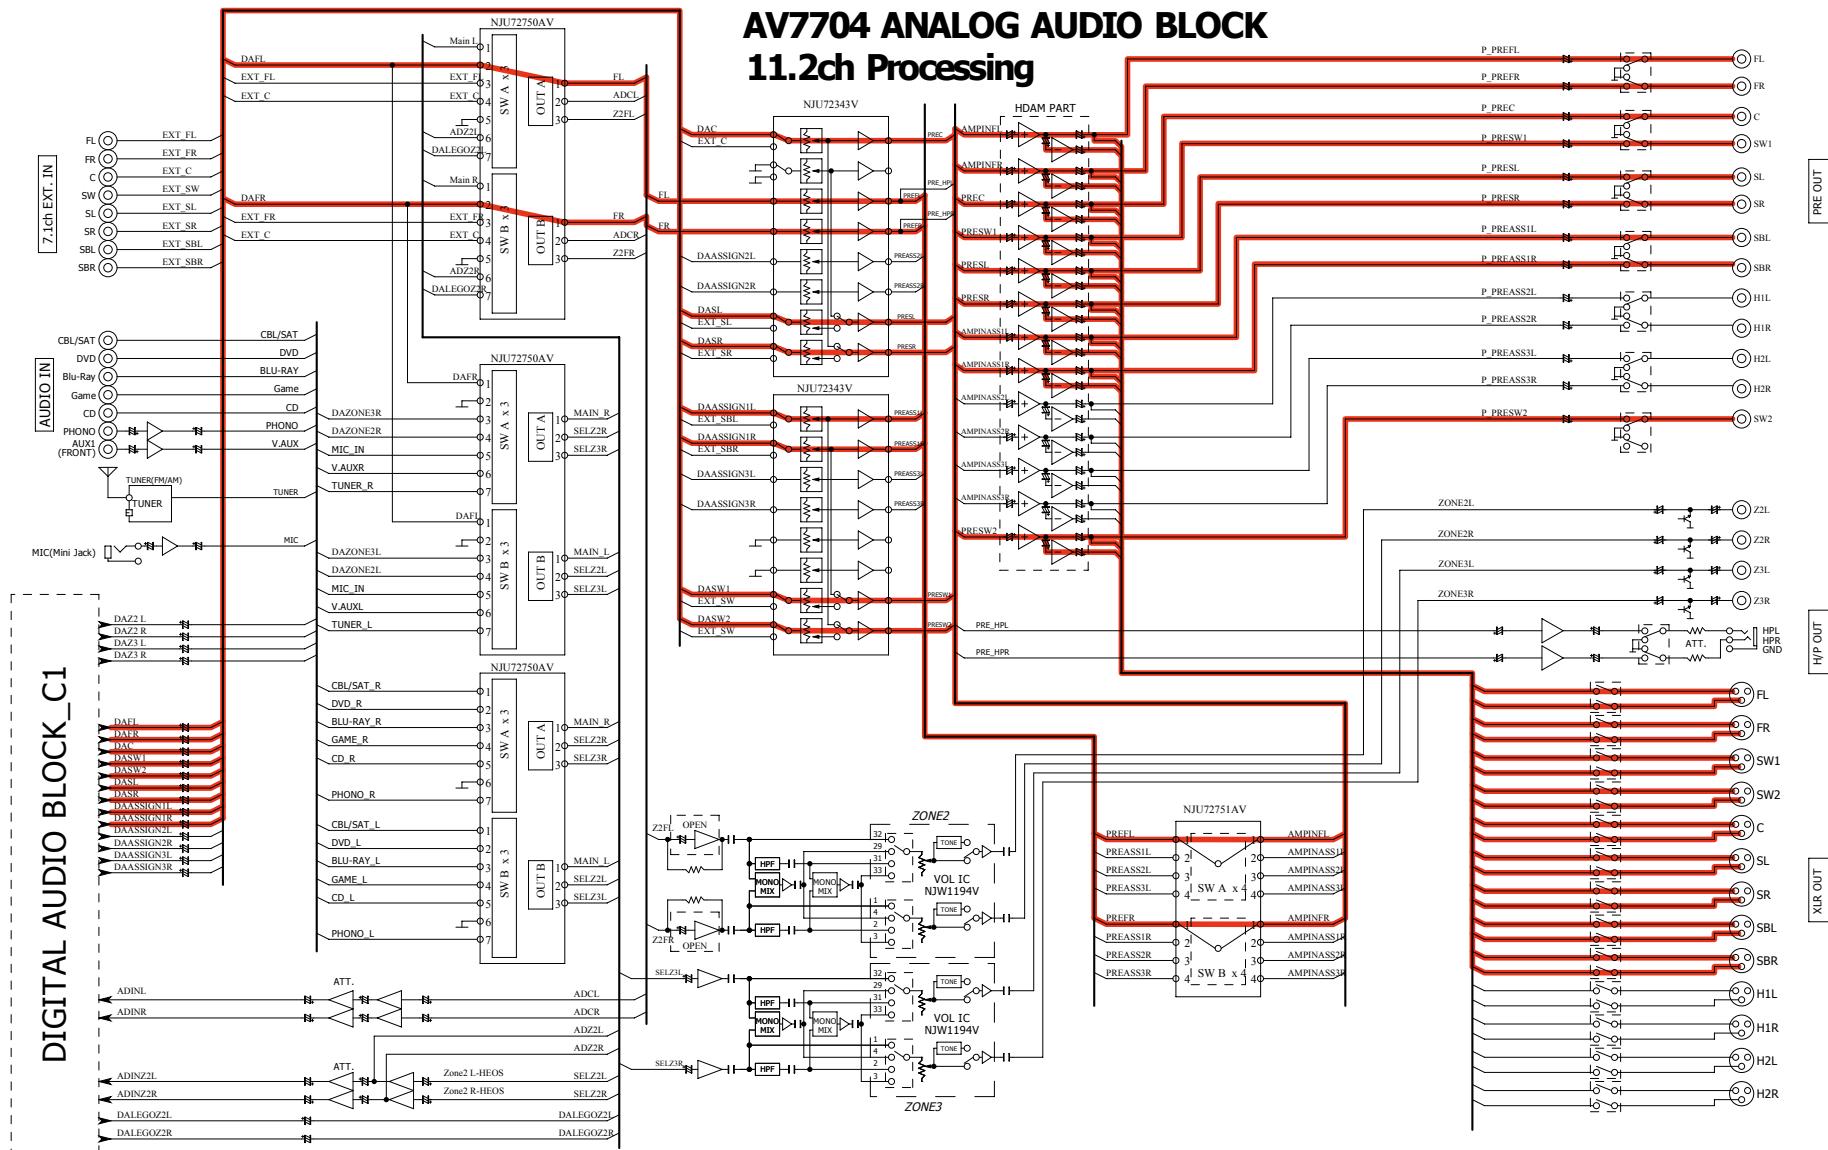


fig.17b

## SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)

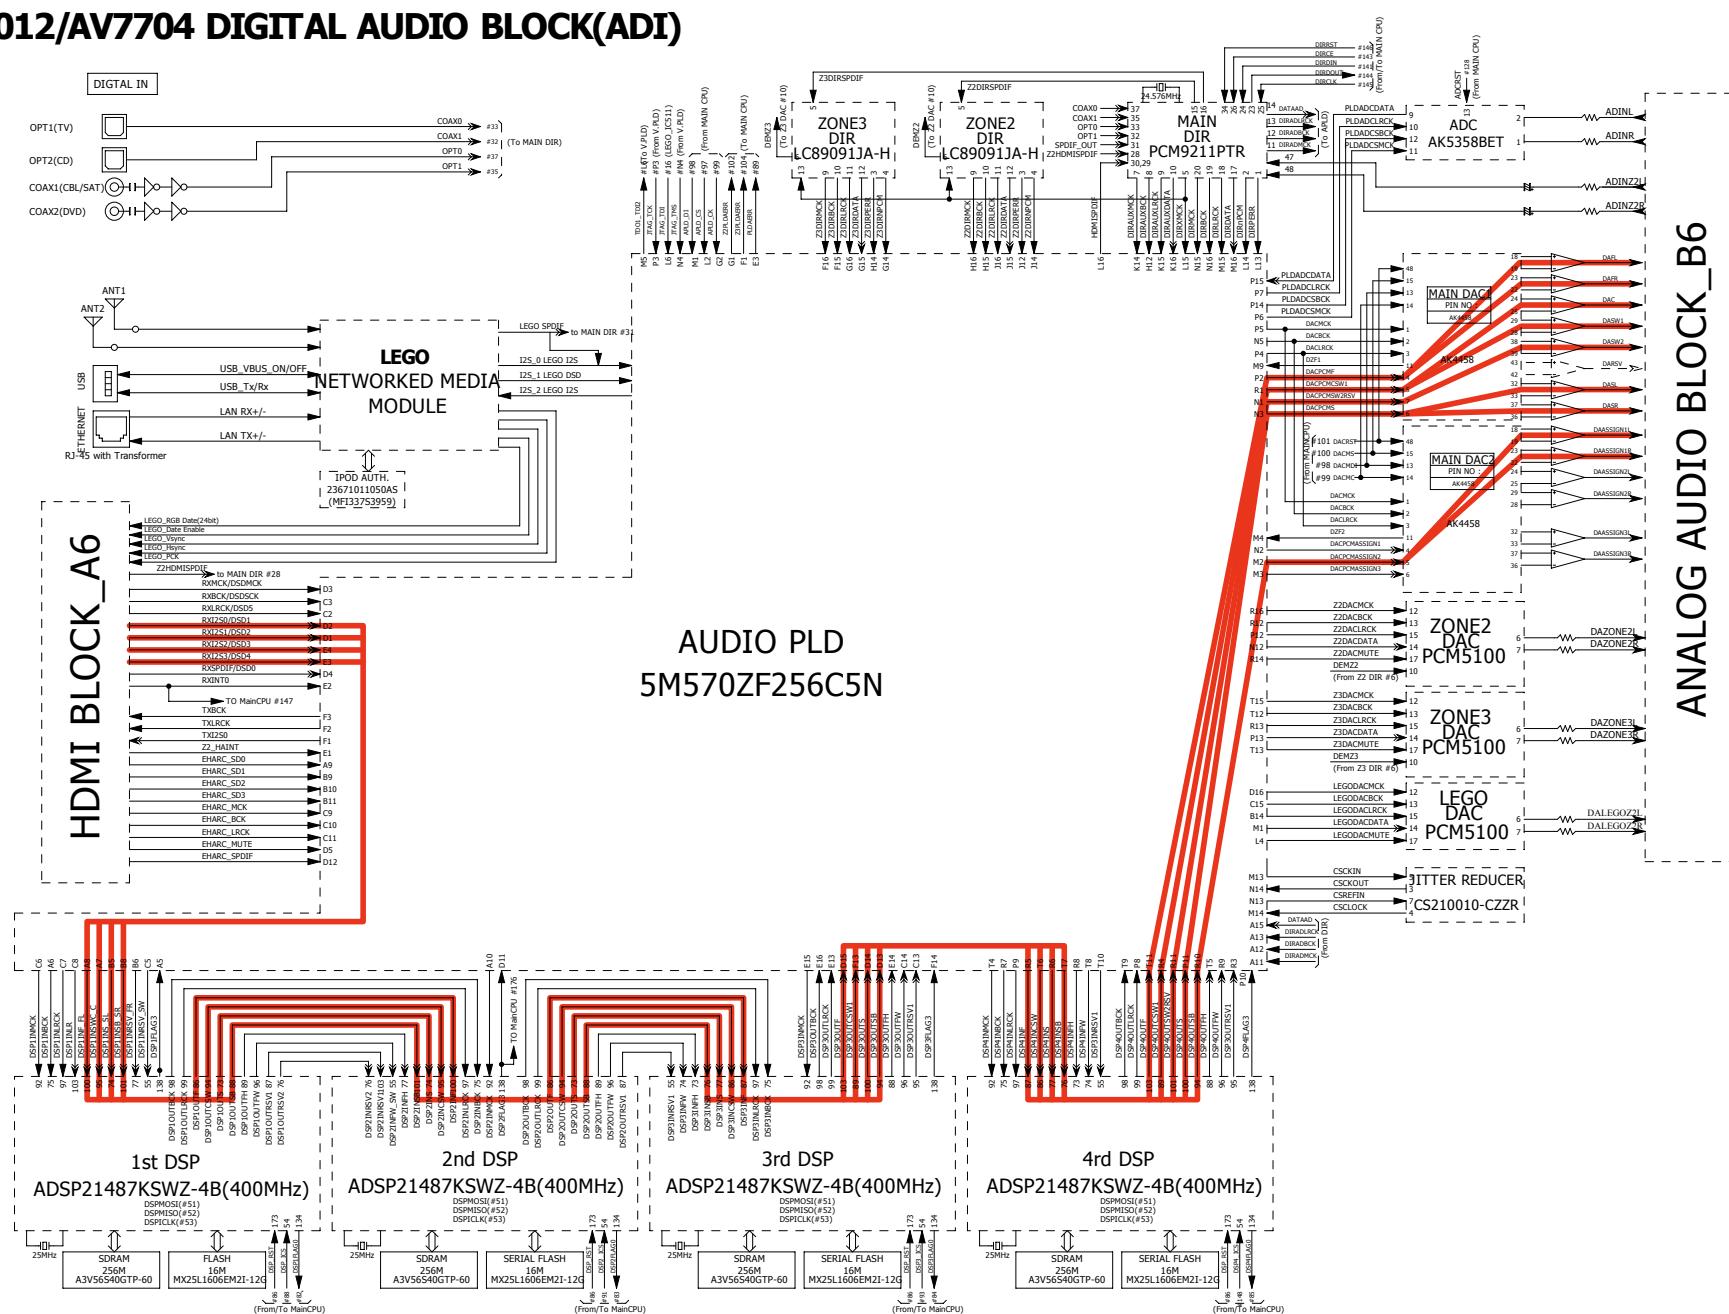
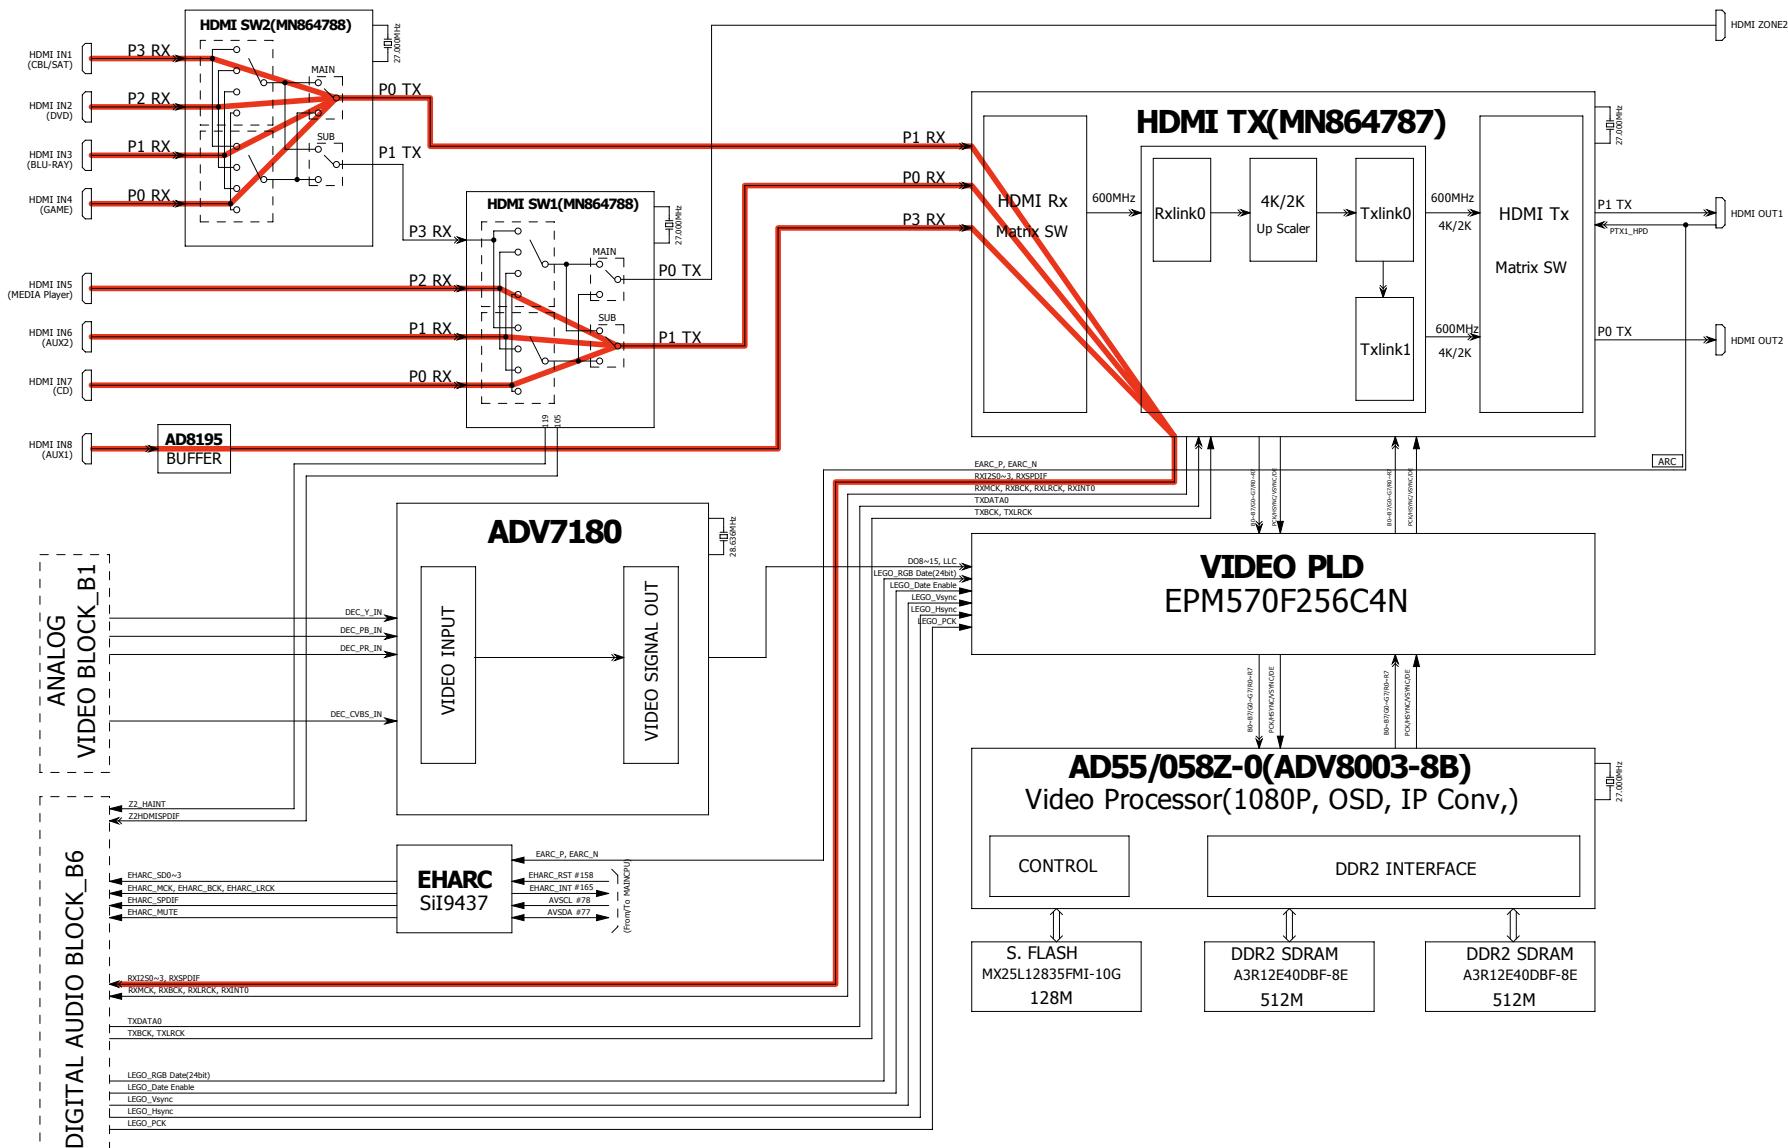


fig.17c

## AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK



**fig.18a**

# **SR7012/AV7704 DIGITAL AUDIO BLOCK(ADI)**

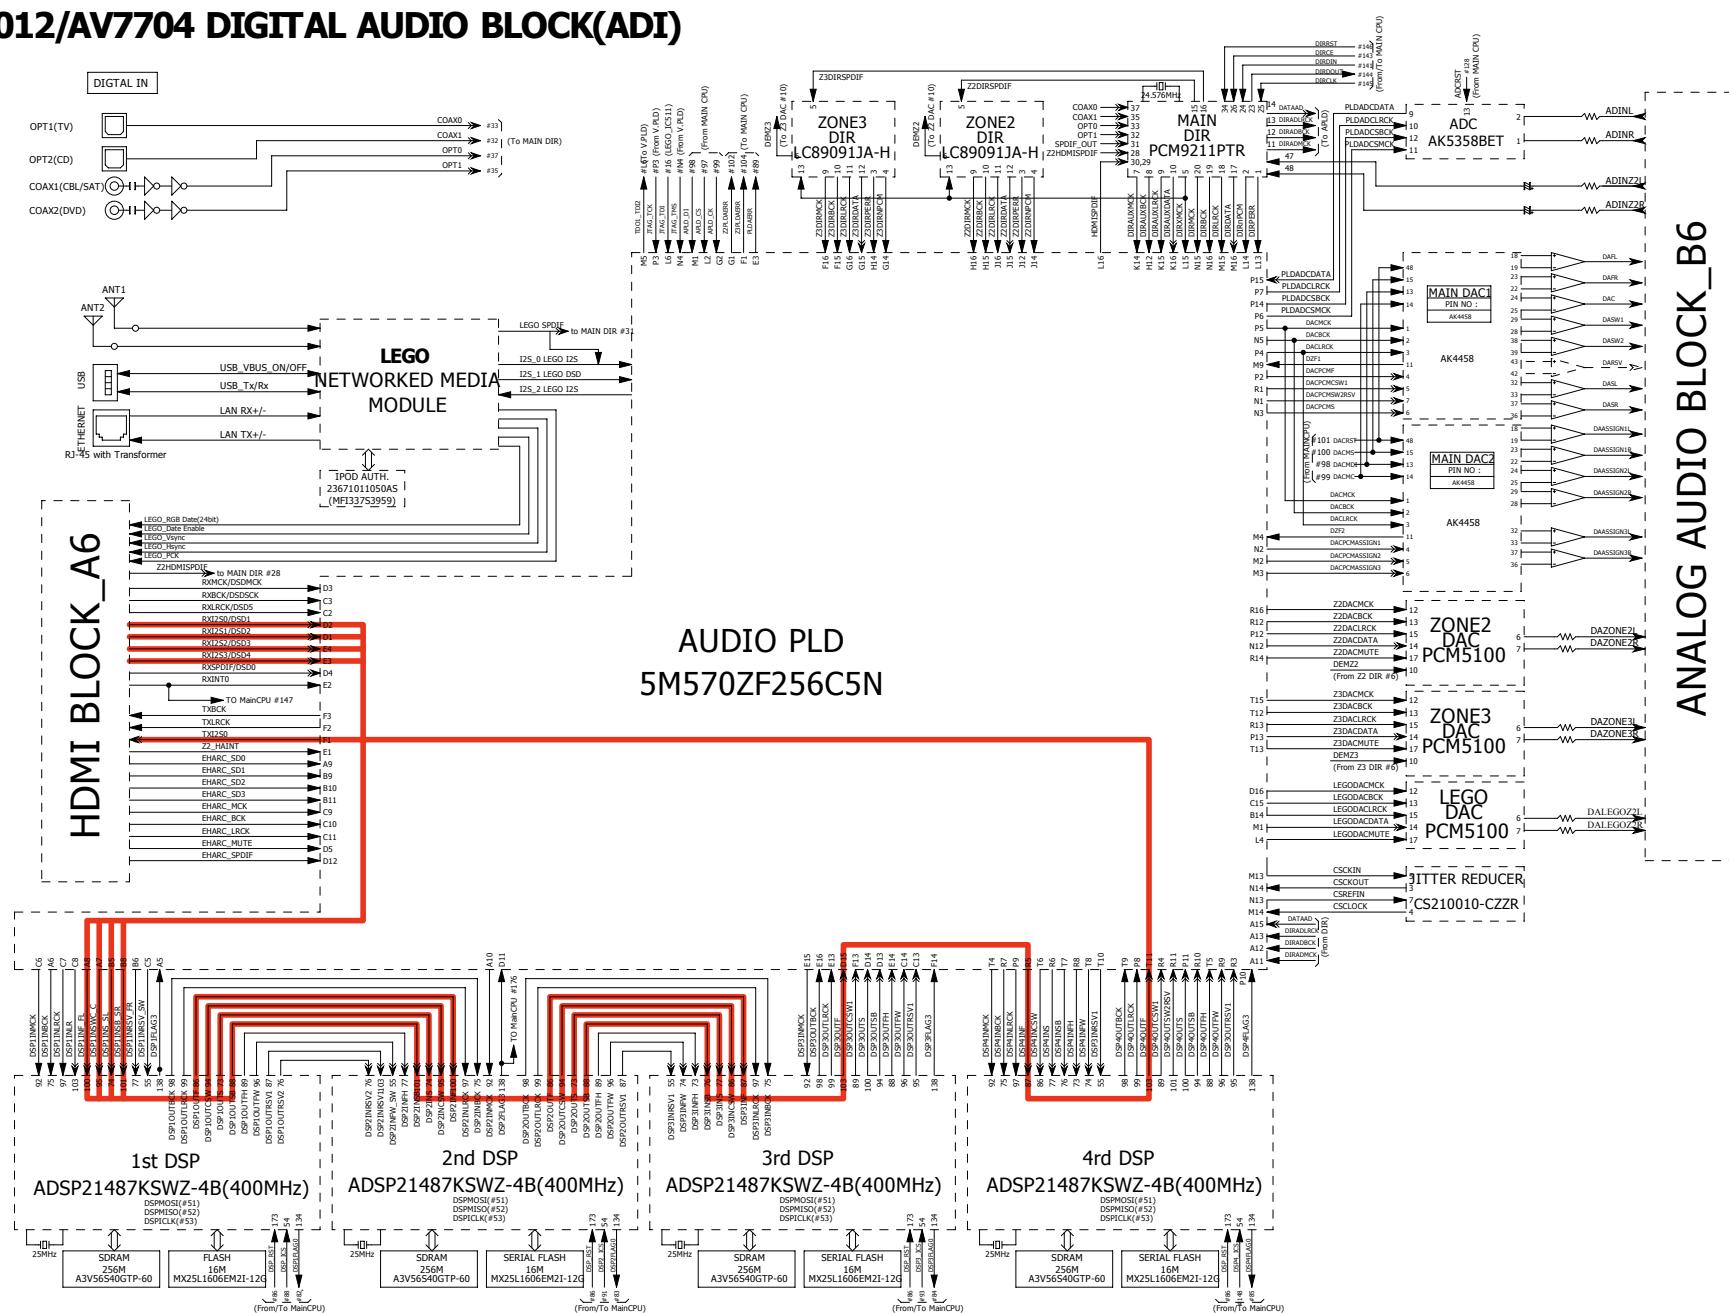


fig.18b

## **AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK**

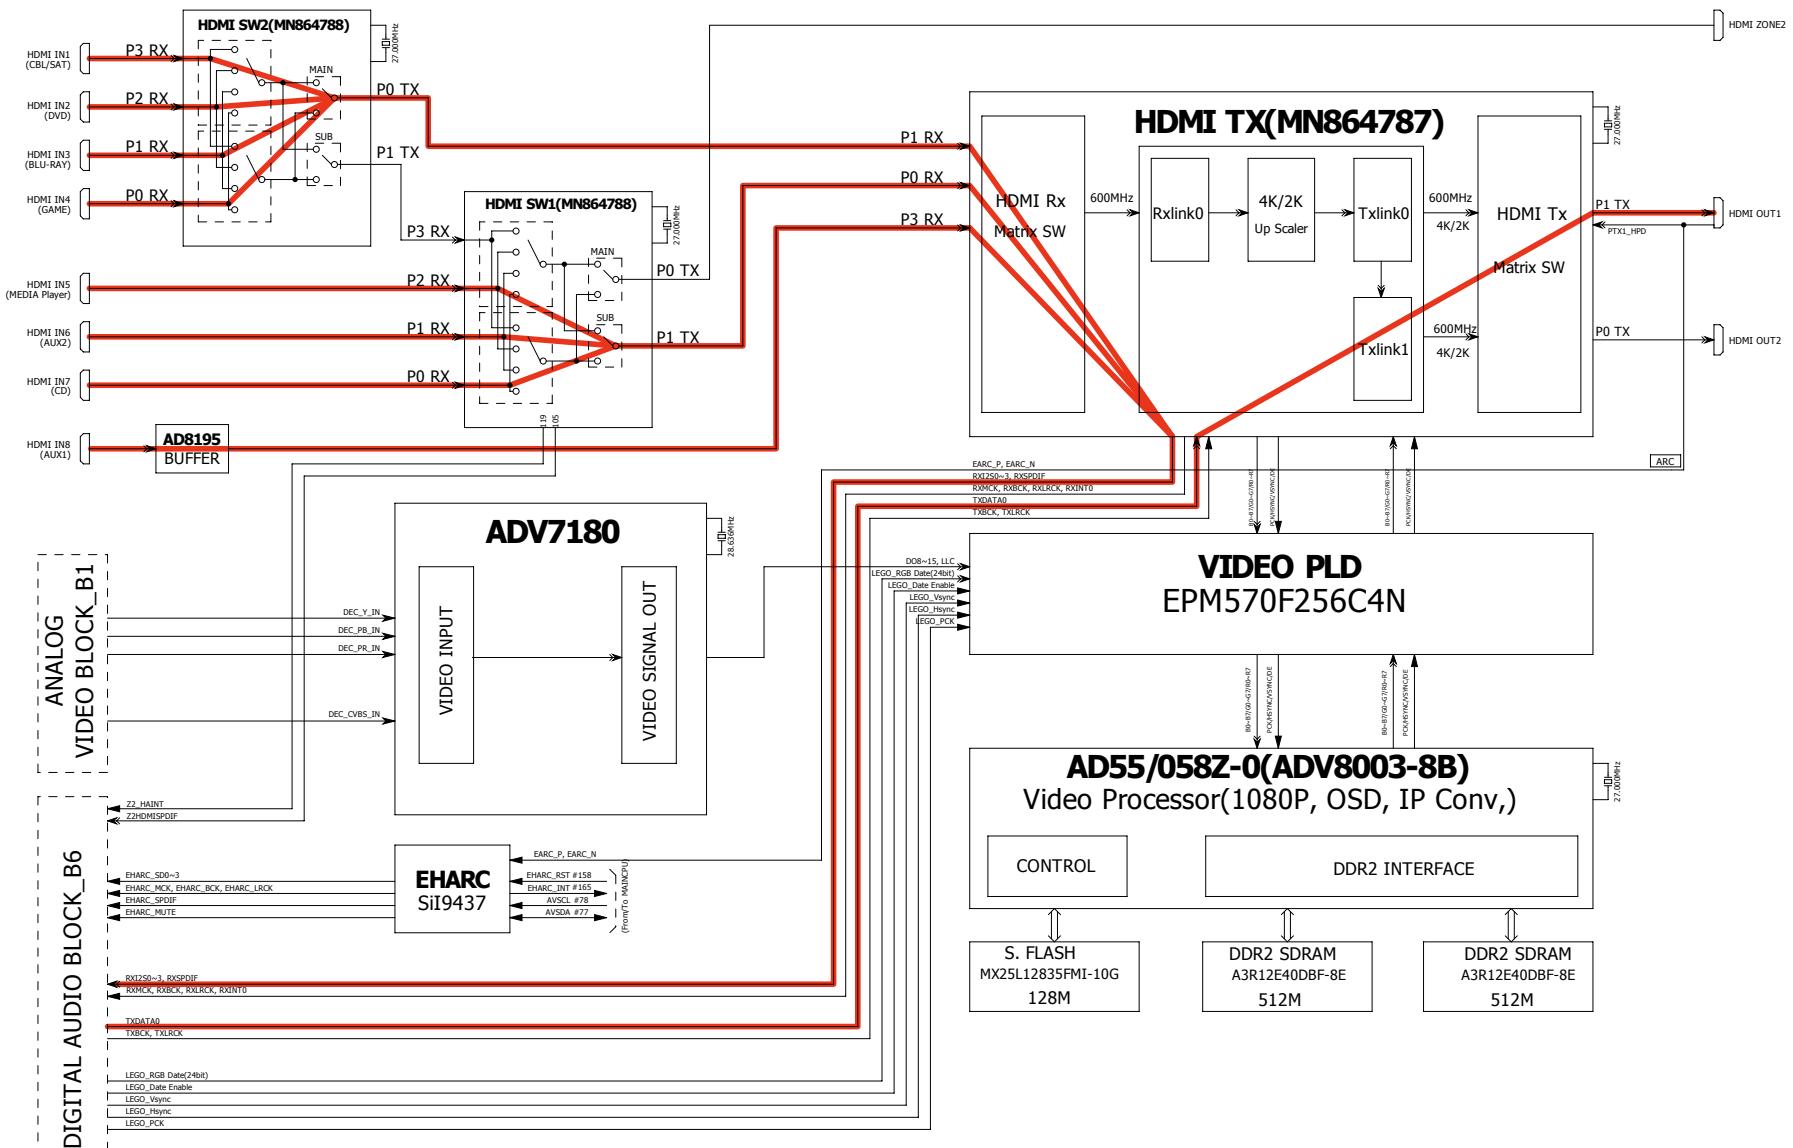


fig.19

## AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK


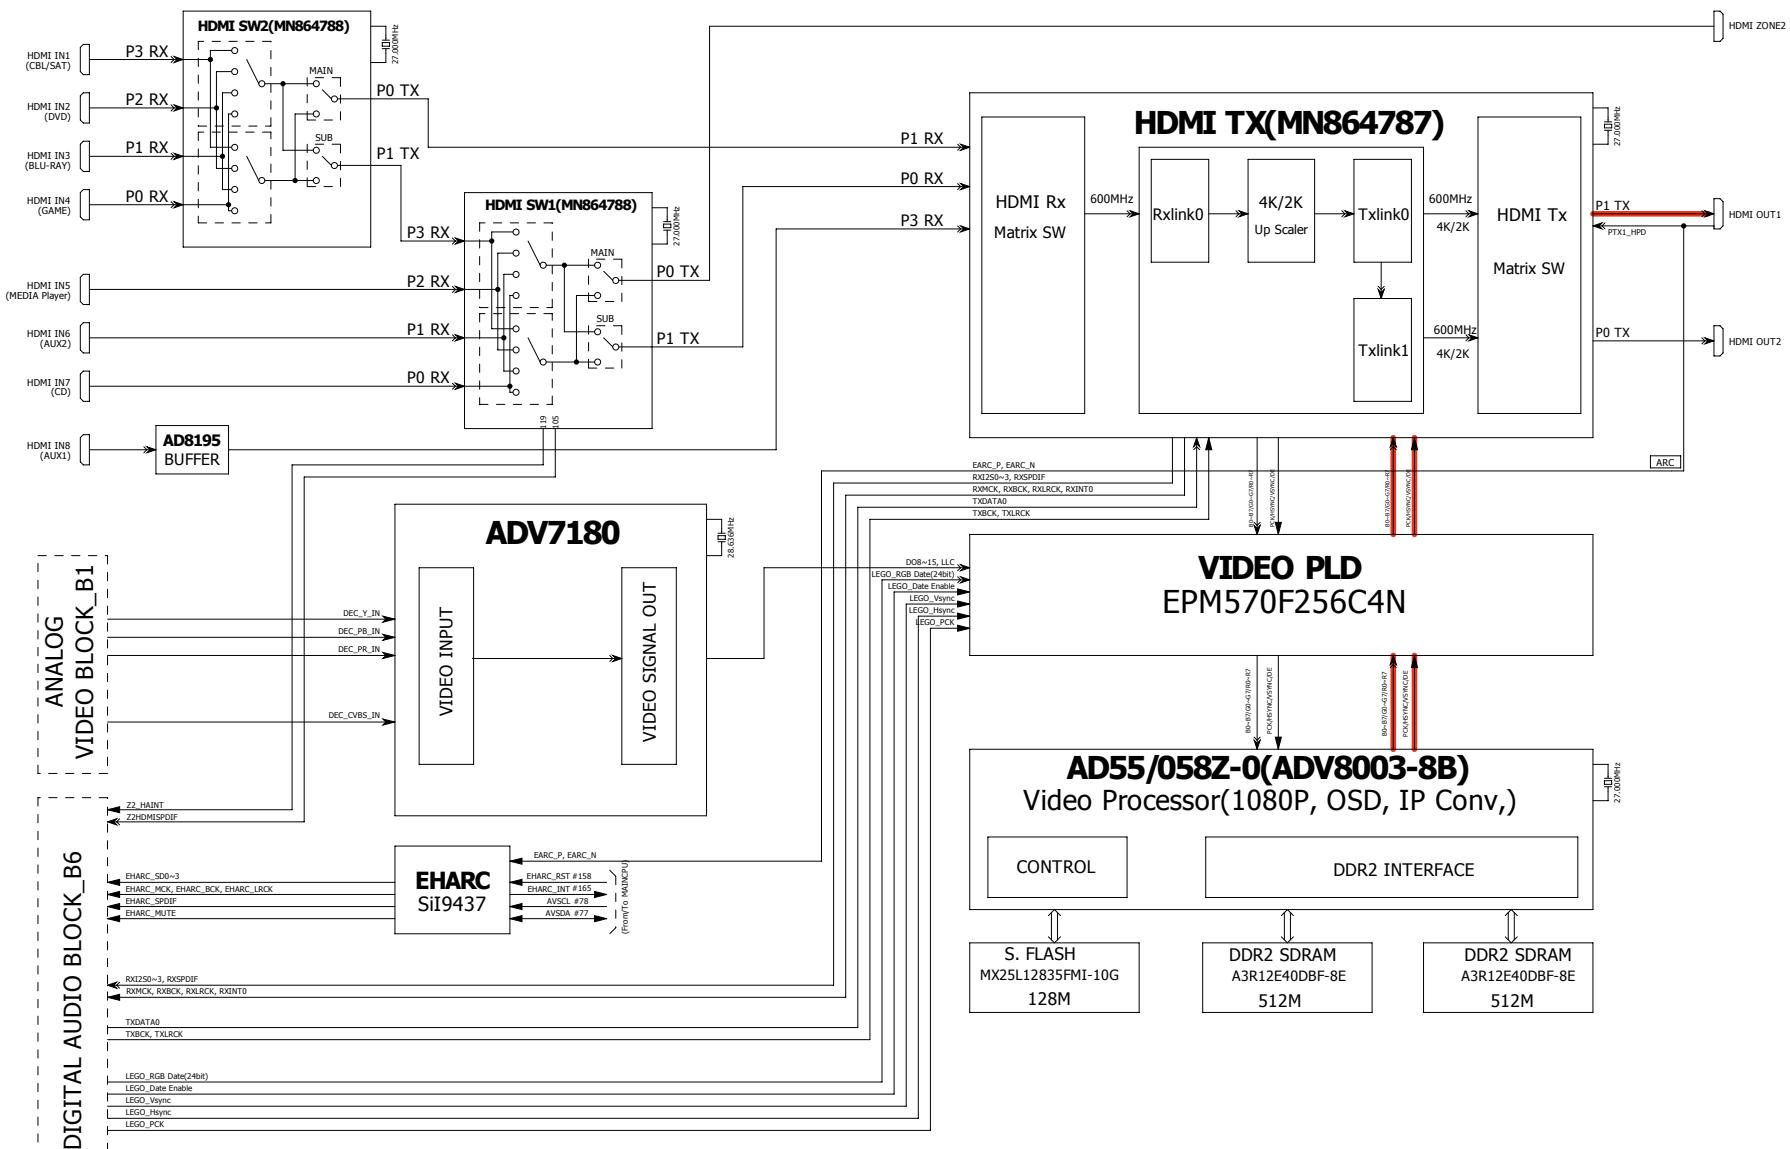


fig.20

## AVRX4400H/SR7012/AV7704/SR6012 HDMI BLOCK

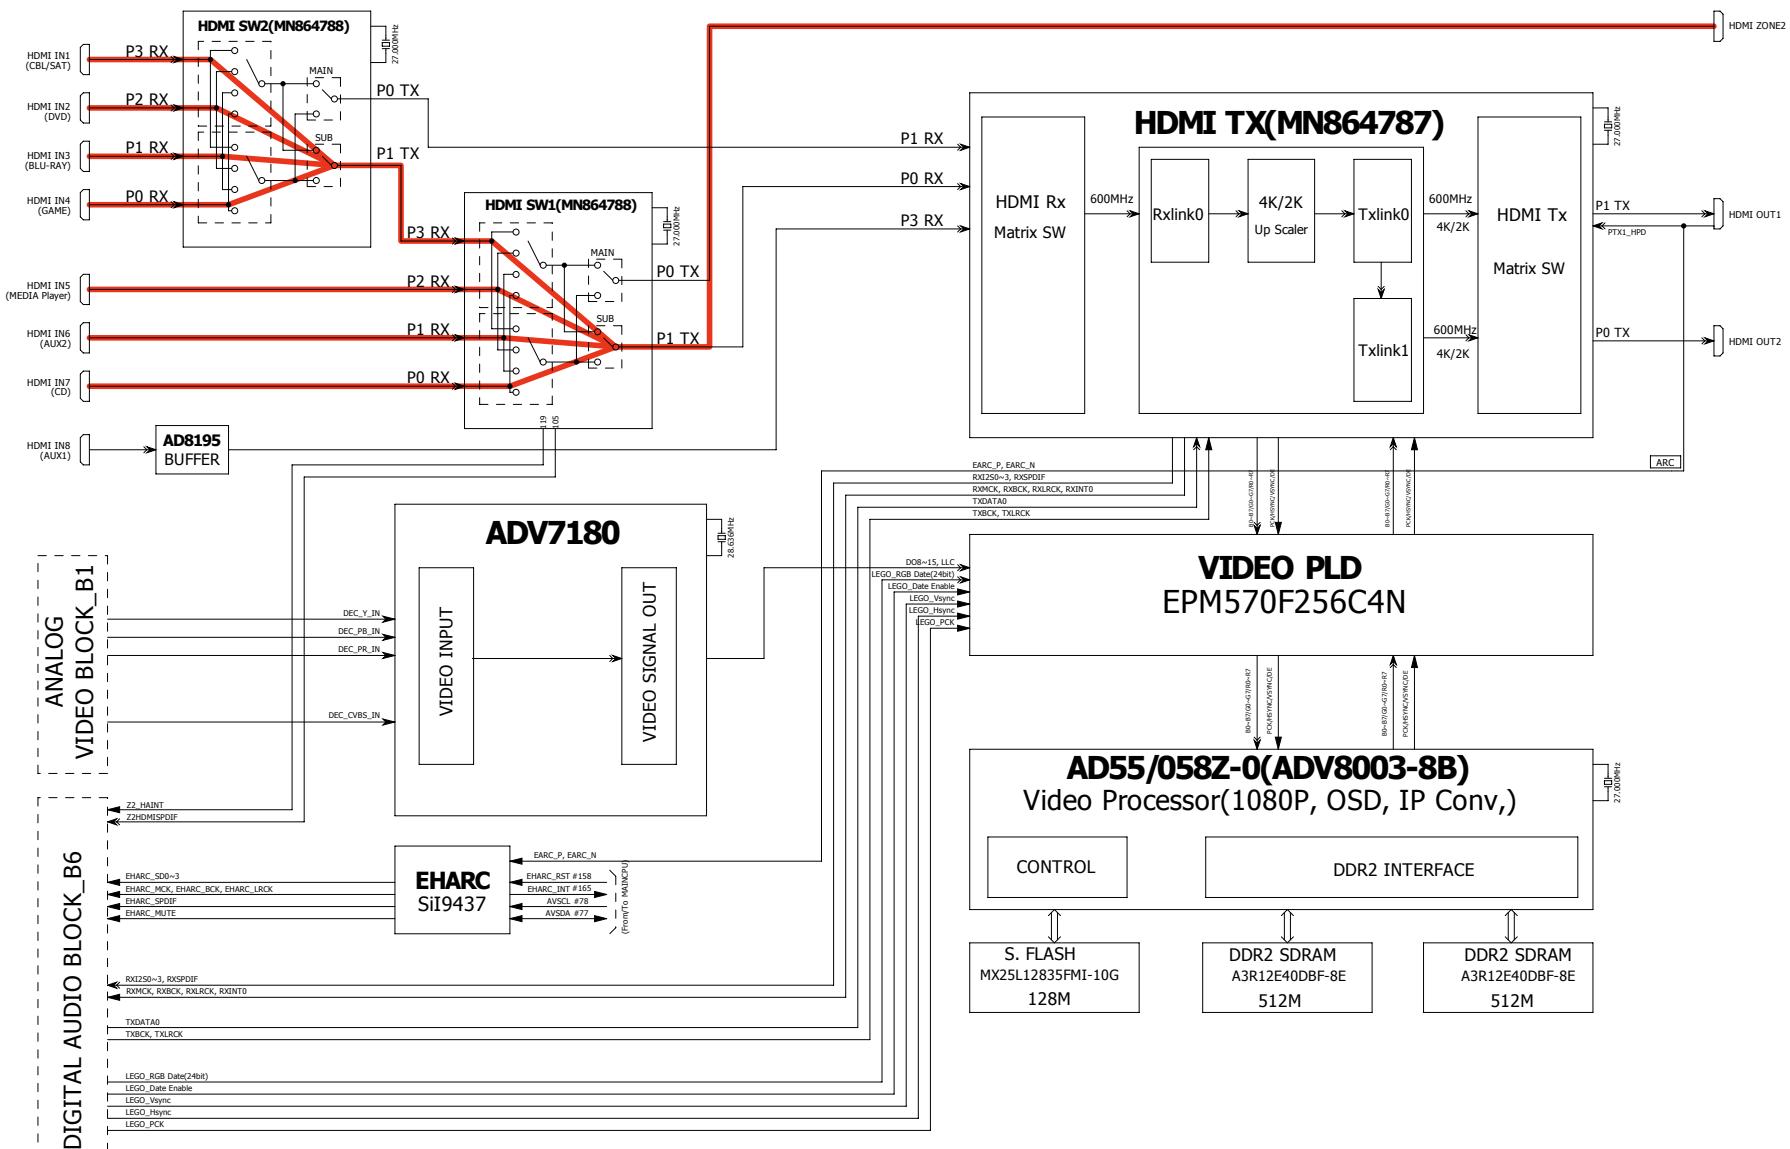

# JIG FOR SERVICING

Use the following jigs (extension cable kit) when repairing the PCBs.  
Order with your dealer for the jigs your dealer if necessary.

**CAUTION : Incorrect connections may cause malfunction.**


Connection of Jig for DIGITAL PCB

--Items to Be Prepared---




8U-1100845 : EXTENSION UNIT KIT	:	1Set
8U-1101365 : EXTENSION UNIT KIT	:	1 Set
Insulation sheet (Not supplied)	:	3 sheet
Ground lead (Not supplied)	:	3 pc

-Proceeding-

(1) Remove the screws.

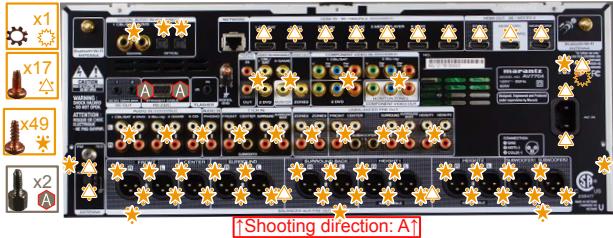


(2) Remove the connector PCB.

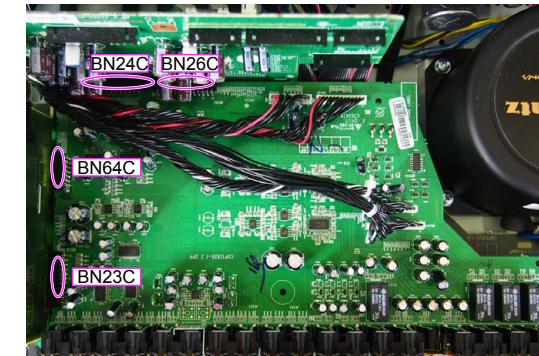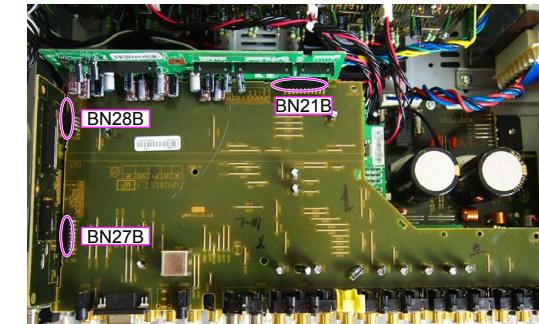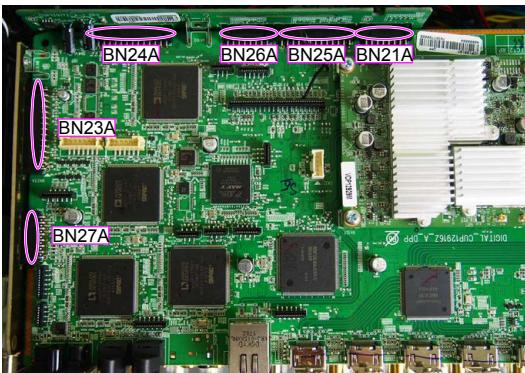


(3) Remove the DIGITAL PCB from the chassis and turn it over.

Place an insulation sheet larger than the PCB underneath the DIGITAL PCB.

※ Connect the earth of the PCB to the chassis using an earth wire, etc.

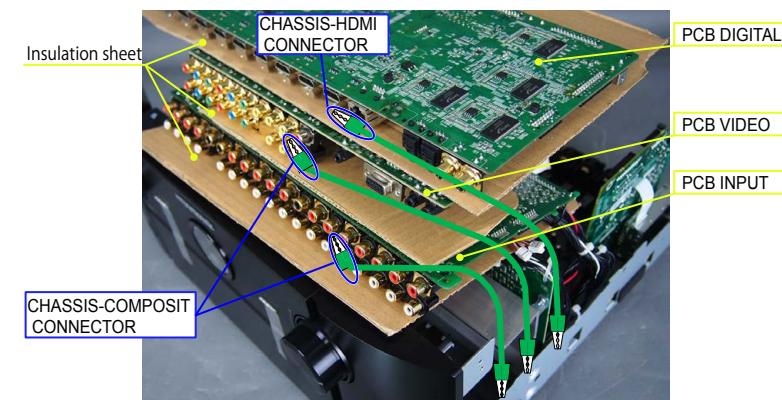

(4) Connect the expansion cables.

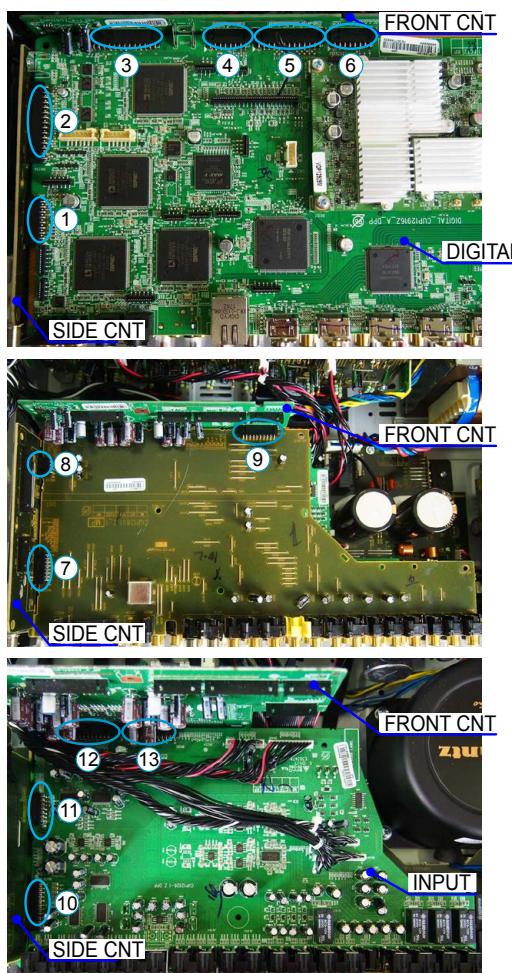

#### Board-to-Board Connections

No.	Pin	Ref. No.	PCB		Ref. No.	PCB
①	15pin	CN27A	SIDE CNT	↔	BN27A	DIGITAL
②	29pin	CN23A	SIDE CNT	↔	BN23A	DIGITAL
③	27pin	CN24A	FRONT CNT	↔	BN24A	DIGITAL
④	15pin	CN26A	FRONT CNT	↔	BN26A	DIGITAL
⑤	25pin	CN25A	FRONT CNT	↔	BN25A	DIGITAL
⑥	15pin	CN21A	FRONT CNT	↔	BN21A	DIGITAL
⑦	15pin	CN27B	SIDE CNT	↔	BN27B	VIDEO
⑧	7pin	CN28B	SIDE CNT	↔	BN28B	VIDEO
⑨	19pin	CN21B	FRONT CNT	↔	BN21B	VIDEO
⑩	21pin	CN23C	SIDE CNT	↔	BN23C	INPUT
⑪	13pin	CN64C	SIDE CNT	↔	BN64C	INPUT
⑫	27pin	CN24C	FRONT CNT	↔	BN24C	INPUT
⑬	25pin	CN26C	FRONT CNT	↔	BN26C	INPUT

# UPDATING

## PROCEDURE AFTER REPLACING THE PCB.

## PROCEDURE AFTER REPLACING THE U-COM, ETC.

### FIRMWARE UPDATE PROCEDURE

- [1. Items necessary for update](#)
- [2. Update preparation with a USB flash drive](#)
- [3. Update method when the DIGITAL PCB or network module is replaced \(Using a USB flash drive\)](#)
- [4. Update Method for Service Region Settings](#)
- [5. Normal Firmware Update Method from USB Flash Drive](#)
- [6. Normal Firmware Update Method from OTA](#)
- [7. About the error codes](#)

Caution in  
servicing

Electrical

Mechanical

Repair Information

Updating

## PROCEDURE AFTER REPLACING THE PCB.


The procedure after replacing the printed circuit boards is as follows.

(1) Change the resistor for setting the region.

Model Area	DIGITAL PCB	
	R1589	R1590
North America (U)	0	OPEN
Europe (N)	OPEN	0

See the PCB below.

(2) Be sure to replace the software with the latest version.

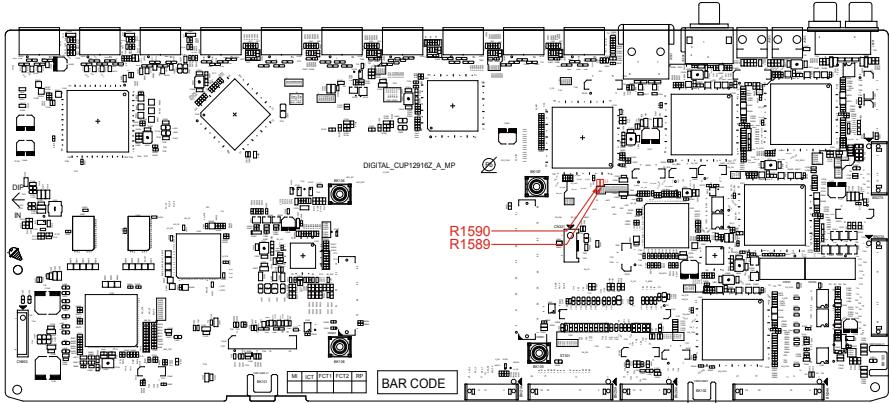

## PROCEDURE AFTER REPLACING THE U-COM, ETC.

The procedure after replacing the u-COM (microprocessor), flash ROM, etc. is as follows.

Implement the update method when the DIGITAL PCB or network module is replaced.

PCB Name	Ref. No.	Description	Procedure after Replacement	Remark
DIGITAL	IC151	R5F564MJCDFC	B	SOFTWARE : Main
DIGITAL	IC254 IC264 IC273 IC283	MX25L1606EM2I-12G	B	SOFTWARE : DSP1/2/3/4 ROM
DIGITAL	IC404	MX25L12835FMI-10G 128M	B	SOFTWARE : GUI ROM
DIGITAL	IC421	EPM570F256C4N	B	SOFTWARE : VIDEO PLD
DIGITAL	IC221	5M570ZF256C5N	C	SOFTWARE : AUDIO PLD
MODULE	C39	NETWORK MODULE	D	SOFTWARE : Network

### Procedure after Replacement

**A** : The software has been written. The software is not written at the time of replacement.

**B** : The software has been written. The software may need to be rewritten by version updates. Check the version.

**C** : The software has not been written. The software needs to be written after replacement.

See "[FIRMWARE UPDATE PROCEDURE](#)" for information on writing the software.

**D** : The software has been written. Be sure to replace the software with the latest version.

See "[3. Update method when the DIGITAL PCB or network module is replaced \(Using a USB flash drive\)](#)" for information on writing the software.

# FIRMWARE UPDATE PROCEDURE

## 1. Items necessary for update

Items necessary for update are as follows.

Update Type	Needed Part for Update	Requirement	Offered / not Offered		
			Standard Service Equipment Not offered by D&M	Purchase from D&M Article code	Download from SDI
Via USB	USB flash drive (USB 2.0 : Min 1GB) • We recommend a USB memory device that has an LED installed.	Formatting FAT16 or FAT 32	X	-	" <a href="#">Table 1</a> " or " <a href="#">Table 2</a> "
Via OTA	Internet Connection by Broadband Circuit	-	X	-	-
	Modem	-	X	-	-
	Router	-	X	-	-
	Ethernet cable (CAT-5 or greater is recommended)	-	X	-	-

**Table 1**

Update download file when the DIGITAL PCB or network module is replaced

Model Name	Model Area	Download from SDI
AV7704	ALL	avr_40.prod.update.factory.xxxx.zip

**Table 2**

Update download file when the firmware is updated (Two files, "HW component" and "LEGO component")

Model Name	Model Area	Download from SDI		
		For HW component		For LEGO component
AV7704U	North America (U)	Product ID : 100100600100	DPMS_AV7704ALL_LEG0_xxxx.zip	heos_40.prod_x.xxx.xx.zip
AV7704N	Europe (N)	Product ID : 100100600200		

## 2. Update preparation with a USB flash drive

You can update the firmware by downloading the latest version with USB flash drive.

### 2.1. Connecting to the USB flash drive

#### (1) Preparation


- Windows PC
- USB flash drive format : Prepare a USB flash drive formatted in FAT16 or FAT32.  
※We recommend a USB flash drive that has an LED installed.

#### NOTE :

- Use a memory that supports USB2.0.
- Do not run the USB flash drive through a hub.
- Do not connect a computer to the USB port of this unit using a USB cable.
- Do not use an extension cable when connecting the USB flash drive.
- Save the update file on a blank USB flash drive for use.
- If a USB flash drive cannot be updated, replace it with a different USB flash drive and perform the update again.

### 2.2. Unzipping the Downloaded File

Unzip the downloaded file on your computer.

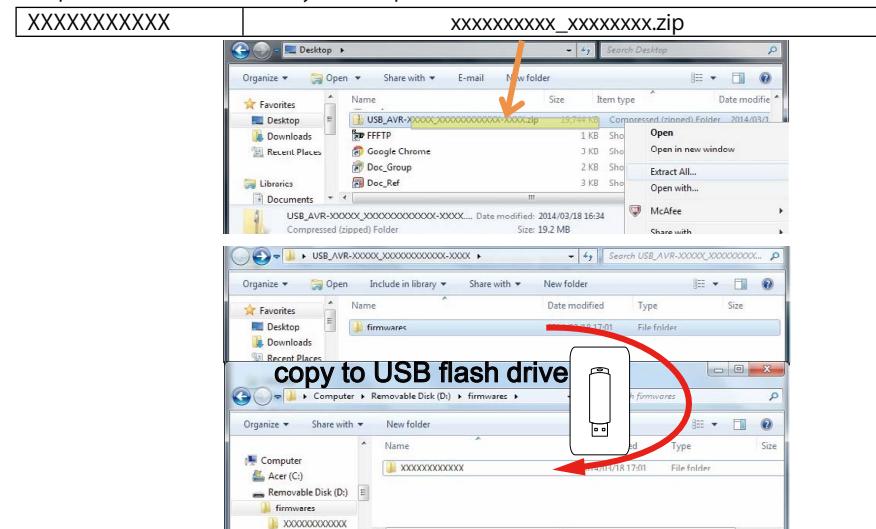

There are folders or files after unzipping.

Copy these folders or files onto the USB flash drive.

The folders or files must be placed in the root directory of the USB flash drive.

### 3. Update method when the DIGITAL PCB or network module is replaced (Using a USB flash drive)

#### 3.1. File structure on USB flash drive

DIGITAL PCB or network module is replaced onto the USB flash drive in the following structure.


After unzipping the files, store them in the root of the same USB flash drive.

Model Area	Download from SDI
ALL	avr_40.prod.update.factory.xxxx.zip

USB flash drive root

- + avr\_40.prod.update.factory
- + xxxxxxxxzz.ota-download
- + heos\_40.prod.update.factory

xxxxxx : Model name  
zz : Region

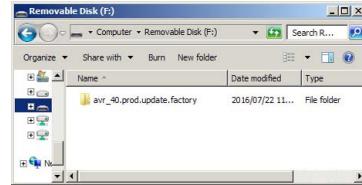

#### 3.2. Start the update.

NOTE :

- Remove the LAN cable from this unit when updating.  
(Do not connect to a wired or wireless network.)
- The GUI menu setting details and image quality adjustment setting details are initialized when Firmware Factory Restore is performed. Therefore, take a note of the setting details beforehand and reconfigure the settings after update.

(1) Press the power button to turn on the power.

(2) Wait for this unit to start up.

(3) Set the input source to HEOS Music.

Check that the display is as shown below.


##### Display (Sub Display)

L1	TuneIn Internet Radio
L2	HEOS Favorites

or	No Network Connection
----	-----------------------

L1 : Content of the display is scrolled.

(4) Insert the USB flash drive into the USB port.

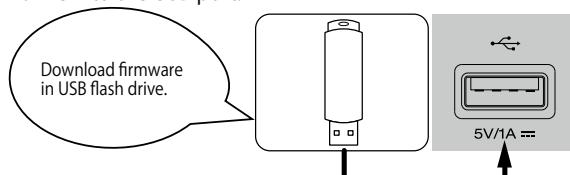

(5) USB Update starts automatically.

The Standby LED lights red.

##### Display during USB update (Main Display)

L1	Wait
L2	►►►►

↓

L1	Updating
L2	►►► xx%

↓

L1	Update
L2	Complete

It takes a maximum of approximately 25 minutes for update to complete.

(6) The unit restarts when update is complete.

※When update is complete, the folder name on the USB flash drive changes to "avr\_40.prod.update.factory.done". To use the files again, delete the ".done" part.

(7) Execute Firmware Factory Restore.

While holding down buttons "DYNAMIC EQ" and "M-DAX" simultaneously, press the power button to turn on the power.

##### Display during Firmware Factory Restore(Main Display)

L1	Restore
L2	FW...

↓

L1	Restore
L2	►►► xx%

↓

L1	Complete
----	----------

It takes approximately 15 minutes for Firmware Factory Restore to complete.

(8) Execute Service Region Settings.

See "4. Update Method for Service Region Settings"

(9) Check that the version is the specified version. See "1. Version Display Mode"

(10) If necessary, use OTA or the USB flash drive to update the firmware to the newest version.

※We recommend using the firmware update method using OTA.

See "5. Normal Firmware Update Method from USB Flash Drive" or "6. Normal Firmware Update Method from OTA"

#### ---Cautions on Firmware Update---

- Do not remove the USB flash drive until updating is completed.
  - Do not turn off the power until updating is completed.
  - It takes a maximum of approximately 25 minutes for update to complete.
- Once an update is started, normal operations cannot be performed until it is completed.


## 4. Update Method for Service Region Settings

Copy the Service Region Settings from the USB flash drive to this unit.


### 4.1. Creating a Service Region Settings file

(1) Click [Start button] - [Accessories] - [notepad] on the PC to launch the notepad.

(2) Enter "TEXT".

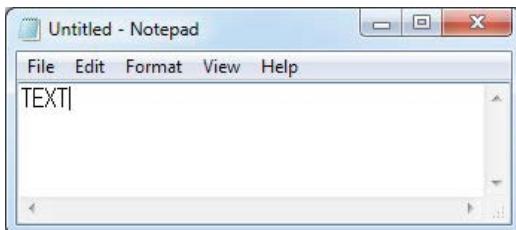

(3) Click "File", and then click "Save As...".

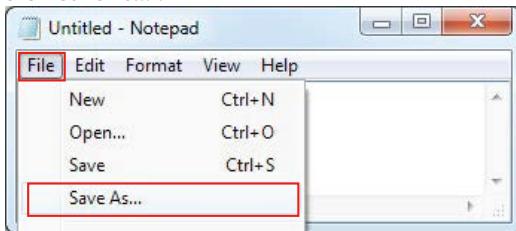



(4) Enter the file name and click the Save button.

NOTE : Enter the file name in double quotation marks. (The file extension is not required.)

Service Region	File name
North America	"denon-config-locale-set-1"
Europe	"denon-config-locale-set-2"
Japan	"denon-config-locale-set-3"
Australia	"denon-config-locale-set-4"
Korea	"denon-config-locale-set-5"
China	"denon-config-locale-set-6"
Israel	"denon-config-locale-set-7"



(5) Copy the files created on the USB flash drive.

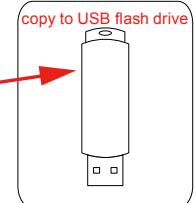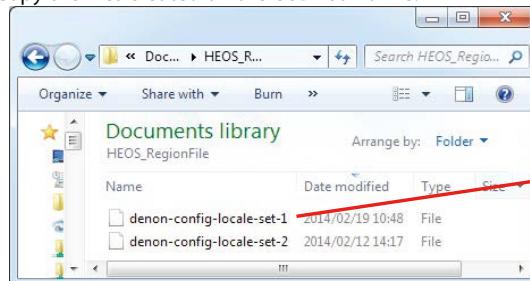

### 4.2. Starting Service Region Settings

NOTE :

- Remove the LAN cable from this unit when updating.  
(Do not connect to a wired or wireless network.)
- We recommend a USB memory device that has an LED installed.

(1) Press the power button to turn on the power.

(2) Wait for this unit to start up.

(3) Set the input source to HEOS Music.

Check that the display is as shown below.


**Display (Sub Display)**

L1	TuneIn Internet Radio
L2	HEOS Favorites

or	No Network Connection
----	-----------------------

**L1 : Content of the display is scrolled.**

(4) Insert the USB flash drive into the USB port.

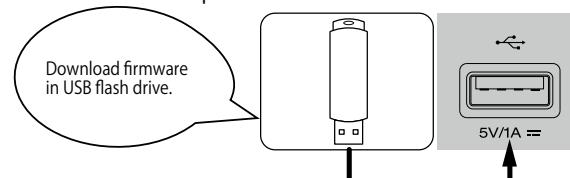

(5) Wait for at least 10 seconds before removing the USB flash drive.

(If the USB flash drive has an LED, this LED will be flashing. Remove the USB flash drive when the LED stops flashing.)

## 5. Normal Firmware Update Method from USB Flash Drive

### 5.1. File structure on USB flash drive


Copy the normal update files onto the USB flash drive in the following structure.

After unzipping the HW component USB update files for the target model and LEGO USB update files, store them in the root of the same USB flash drive.

Model Area	Download from SDI	
	For HW component	For LEGO component
North America (U)	DPMS_AV7704ALL_LEG0_xxxx.zip Product ID : 100100600100	
Europe (N)	DPMS_AV7704ALL_LEG0_xxxx.zip Product ID : 100100600200	heos_40.prod_x.xxx.xx.zip

USB flash drive root

- + AV7704xx\_xxxx.update.auto
- + heos\_40.prod.update.x-xxx-xx

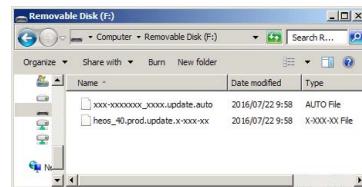

### 5.2. Start normal update

NOTE :

- Remove the LAN cable from this unit when updating.  
(Do not connect to a wired or wireless network.)

(1) Press the power button to turn on the power.

(2) Wait for this unit to start up.

(3) Set the input source to HEOS Music.

Check that the display is as shown below.


#### Display (Sub Display)

L1	TuneIn Internet Radio
L2	HEOS Favorites

No Network Connection
-----------------------

L1 : Content of the display is scrolled.


(4) Insert the USB flash drive into the USB port.

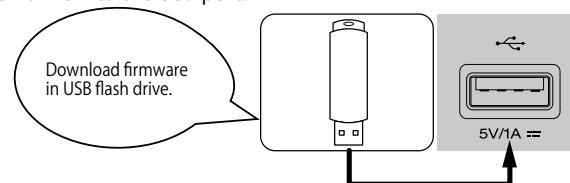

(5) USB Update starts automatically.

The Standby LED lights red.

#### Display during USB update (Main Display)

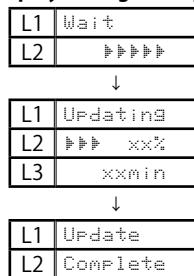

It takes a maximum of approximately 25 minutes for update to complete.

(6) The unit restarts when update is complete.

(7) After updating the firmware, check the version.

See "1. Version Display Mode"

#### ---Cautions on Firmware Update---

- Do not remove the USB flash drive until updating is completed.
  - Do not turn off the power until updating is completed.
  - It takes a maximum of approximately 25 minutes for update to complete.
- Once an update is started, normal operations cannot be performed until it is completed. The GUI menu settings and image adjustment settings of this unit may be initialized. Note down the settings before updating, and set them again after updating.

## 6. Normal Firmware Update Method from OTA


Download the latest firmware from our website and update the firmware.

### 6.1. Network Connection

(1) System Requirements

- Internet Connection by Broadband Circuit
- Modem
- Router
- Ethernet cable (CAT-5 or greater is recommended)

(2) Setting

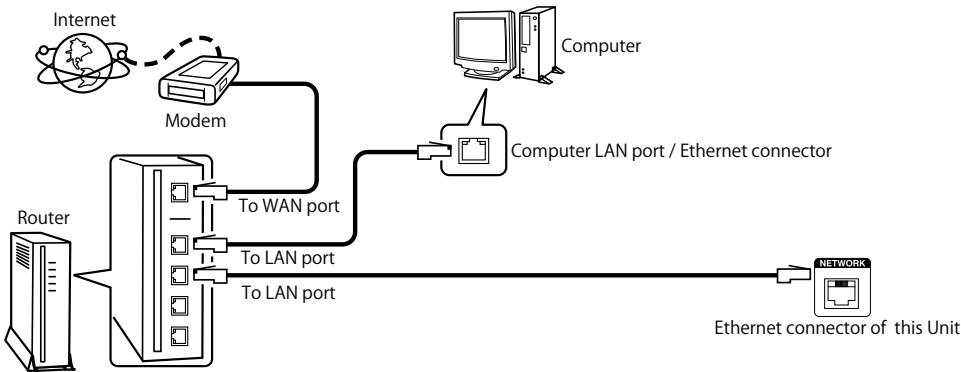

### 6.2. Check and update the firmware


Check if there is a firmware update available. It is also possible to check approximately how long the update will take.

- (1) Press the "SETUP" button on the remote control to display the GUI menu.
- (2) Press the cursor button to select "General" → "Firmware" → "Update" → "Check for Update".
- (3) Check update
  - If the firmware version is anything other than the latest version, select "Update Now" to update the firmware.
  - **"No update required. Latest version installed."** is displayed when the firmware version is up to date.

(4) OTA Update starts automatically.

The Standby LED lights red.

**Display during OTA update (Main Display)**

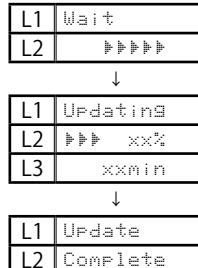

It takes a maximum of approximately 25 minutes for update to complete.

- (5) The unit restarts when update is complete.
- (6) After updating the firmware, check the version.  
See "[1. Version Display Mode](#)"

**--Cautions on Firmware Update--**

- For the update procedure, a proper broadband Internet connection environment and settings are required.
  - Do not turn off the power until updating is completed.
  - It takes a maximum of approximately 25 minutes for update to complete.
- Once an update is started, normal operations cannot be performed until it is completed. The GUI menu settings and image adjustment settings of this unit may be initialized. Note down the settings before updating, and set them again after updating.

## 7. About the error codes

See the table below for details on error codes and solutions when updating the firmware.

Error codes are displayed in 4 digits, YYXX (YY : DeviceID, XX : ErrorCode).

### Display (Sub Display)

L1	Updatalog ***%
L2	***min
↓	
L1	Update ErrorYYXX
L2	Please check you

L2 : Content of the display is scrolled.

### Remedies

Error Code (YYXX) (DeviceID/Error Code)	Remedies
000A	"Connection failed. Please check your network, then try again."
0009	"Update failed. Please check your network, then try again."
0009	"Upgrade failed. Please check your network, then try again."
YY00 YY01 YY02 YY03 YY04 YY07	"Please check your network, unplug and reconnect the power cord, and try again."
YY00 YY01 YY02 YY03 YY04 YY07	"Please unplug and reconnect the power cord, and try again."
0005	"Incompatible update file found on the USB device. Please check the file."
0006	"Update file is corrupted. Please check the file."
000B	"Please contact customer service in your area." ※ Check the power supply and communication lines of each device.

### Device ID table

Device ID (YY)	Device Name
00	General
01	Main CPU
0E	Main FBL (No used)
11	DSP1 or DSP
12	DSP2 ※ Except : NR1508/NR1608/SR5012
13	DSP3 ※ Except : NR1508/NR1608/SR5012
14	DSP4 ※ Except : NR1508/NR1608/SR5012
15	Audio PLD
22	Video PLD ※ Except : NR1508
29	GUI
33	LEGO

### Error Code table

Type code (XX)	Description
00	Logical error
01	Error during erasing
02	Error during writing
03	Error during verifying
04	No access for the component
05	Package mismatched. Product ID, package version un-matched of the package manifest
06	Unpack dis-available of component package file
07	Time out
08	Latest firmware has already installed.
09	Error during download
0A	Error connection
0B	Hardware Error

### ---Checking the Firmware Version After the Update---

After updating the firmware, check the version.

See "1. Version Display Mode"

**www.marantz.com**

You can find your nearest authorized distributor or dealer on our website.

**marantz®** is a registered trademark.