


Service Manual

75SR1010 / 1B / 2B

75SR1020 / 1A / 2A

Stereo receiver

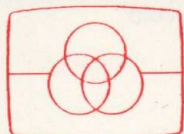

Free service manuals
Gratis schema's

Digitized by

www.freeservicemanuals.info

TABLE OF CONTENTS

SECTION	PAGE
1. TECHNICAL SPECIFICATIONS	1
2. BLOCK DIAGRAM	2
3. SCHEMATIC DIAGRAM AND PARTS LOCATION (Pattern side)	3
4. EXPLODED VIEW AND PARTS LIST	17
5. USE OF SERVICE HOLE	19
6. IDLING CURRENT ADJUSTMENT	19
7. SERVICE PROGRAM	19
8. TUNER ALIGNMENT PROCEDURES	20
9. ALIGNMENT AND TEST POINT	22
10. MICROPROCESSOR SPECIFICATIONS	22
11. ELECTRICAL PARTS LIST	26

marantz®

model SR1010 / SR1020

First issue : 1993 / 8

4822 725 51035

PCS 71 187

Using superior design and selected high grade components, MARANTZ company has created the ultimate in stereo sound. Only **original MARANTZ parts** can insure that your MARANTZ product will continue to perform to the specifications for which it is famous.

Parts for your MARANTZ equipment are generally available at our National Marantz Subsidiary or Agent.

MARANTZ EUROPE B.V.
P.O. Box 80002
Building SFF 2
5600 JB Eindhoven
The Netherlands
Phone : +31-40-732241
Fax : +31-40-735578

ORDERING PARTS

Parts can be ordered either by mail or by telex. In both cases, the correct part number has to be specified. The following information must be supplied to eliminate delays in processing your order:

1. Complete address
2. Complete part numbers and quantities required
3. Description of parts
4. Model number for which the part is required
5. Way of shipment
6. Signature: any order form or telex must be signed, otherwise such part order will be considered as null and void.

ADDRESSES

AUSTRALIA
MARANTZ AUSTRALIA
Figtree Drive
Australia Centre
Homebush, NSW 2140
AUSTRALIA

FINLAND
MARANTZ
Kuortanegatan 1
00520
Helsingfors 52
Finland

ITALY
MARANTZ ITALIANA SPA
Piazza IV Novembre 3
20124 Milano
Italy

NORWAY
MARANTZ
Postboks 7034
Assiden
3007 Drammen
Norway

SPAIN
MARANTZ SPAIN
Martinez Villergas 2
Apartado 2065
Madrid 28027
Spain

AUSTRIA
MARANTZ
Hietzinger Kai 137a
1130 Wien
Austria

FRANCE
MARANTZ FRANCE
4 Rue Bernard Palissy
92600 Asnières
France

JAPAN
MARANTZ JAPAN INC.
35-1, 7-chome, Sagamiono
Sagamihara-shi, Kanagawa
Japan

PORTUGAL
COREL
Av. da Liberdade
211-2 Esq.
1200 Lisboa
Portugal

SWEDEN
MARANTZ
Box 1324
17125 Solna
Sweden

BELGIUM
MARANTZ EUROPE B.V.
Div. Benelux
P.O.Box 80002
Building SFF 2
5600 JB Eindhoven
The Netherlands

GERMANY
MARANTZ GERMANY GmbH
Kleine Heide 12
Postfach 4802
Halle-Westfalen
Germany

KUWAIT
AL ALAMIAH ELECTRONICS
P.O.Box 8196
Salmiah
22052 Kuwait

SAUDI ARABIA
AL ALAMIAH ELECTRONICS
P.O.Box 5954
University Street
Riyadh 11432
Saudi Arabia

SWITZERLAND
MARANTZ SWITZERLAND
Postfach
8010 Zürich-Müllingen
Switzerland

CHILE
MARANTZ DIVISION OF
PHILIPS S.A.
Av.Santa Maria 0760
Casilla 2687
Santiago
Chile

GREAT BRITAIN
MARANTZ HiFi UK Ltd.
Kingsbridge House
Padbury Oaks
575-583 Bath Road
Longford Middlesex UB7 OEH,
U.K.

NETHERLANDS
MARANTZ EUROPE B.V.
Div. Benelux
P.O.Box 80002
Building SFF 2
5600 JB Eindhoven
The Netherlands

SOUTH AFRICA
MARANTZ S.A.
10 Bond Street
Randburg 2194
P.O. Box 7703
Johannesburg 2000
South Africa

TRADING
MARANTZ TRADING
P.O.Box 20008
Building SFF 2
5600 JB Eindhoven
The Netherlands

DENMARK
MARANTZ
Horsvinget 5
2630 Tastrup
Denmark

GREECE
ADAMCO ELECTR. SA
P.O.Box 21025
Hippocrates Str. 188
Athens 11471
Greece

All of the above locations are fully equipped to take care of your total service needs or can advise you. Because various countries have differing configuration requirements, it is necessary that you contact the service facility in your particular country. In the event that there is no service location listed for your country, please contact the nearest facility for the necessary assistance.

In case of difficulties, do not hesitate to contact the Technical Department at above mentioned address.

1. TECHNICAL SPECIFICATIONS (DIN)

FM TUNER SECTION

Frequency range	87.5-108 MHz
Sensitivity DIN (Mono/Stereo)	1.0/25 μ V
S/N (Mono/Stereo)	76/68 dB
T. H. D.	0.3/0.6%
Selectivity at 98 MHz (\pm 300 kHz)	60 dB

MW TUNER SECTION

Frequency range	531-1602 kHz
Sensitivity DIN (S/N 20 dB 30% 999 kHz)	500 μ V
S/N at 999 kHz	50 dB

LW TUNER SECTION

Frequency range	152-282 kHz
Sensitivity DIN (S/N 20 dB 30% 209 kHz)	1500 μ V

AMPLIFIER SECTION

Power output	DIN 8 Ω	50 W
	RMS 8 Ω	45 W
IHF Dynamic power 8 Ω / 4 Ω / 2 Ω		64 W/85 W/92 W
T.H.D. at 8 Ω rated RMS output		0.05%
Damping factor		100
Input sensitivity	: PHONO	3.5 mV/47 k Ω
	: CD/TV/CDV/VCR/TAPE	220 mV/40 k Ω
S/N (IHF-A)	: PHONO	73 dB
	: CD/TV/CDV/VCR/TAPE	80 dB

POWER REQUIREMENTS

/2A/2B version	230 V AC, 50/60 Hz
/1A/1B version	115/230 V AC, 50/60 Hz

DIMENSIONS

Width	422 mm
Height	76 mm
Depth	317 mm


WEIGHT	5.9 kg (SR1010)
	6.0 kg (SR1020)

SUPPLIED ACCESSORIES






- Remote controller (RC1020SR) \times 1
- Batteries (Size "AAA", R03) \times 2
- FM antenna \times 1
- AM loop antenna \times 1

Specifications subject to change without prior notice.




2. BLOCK DIAGRAM

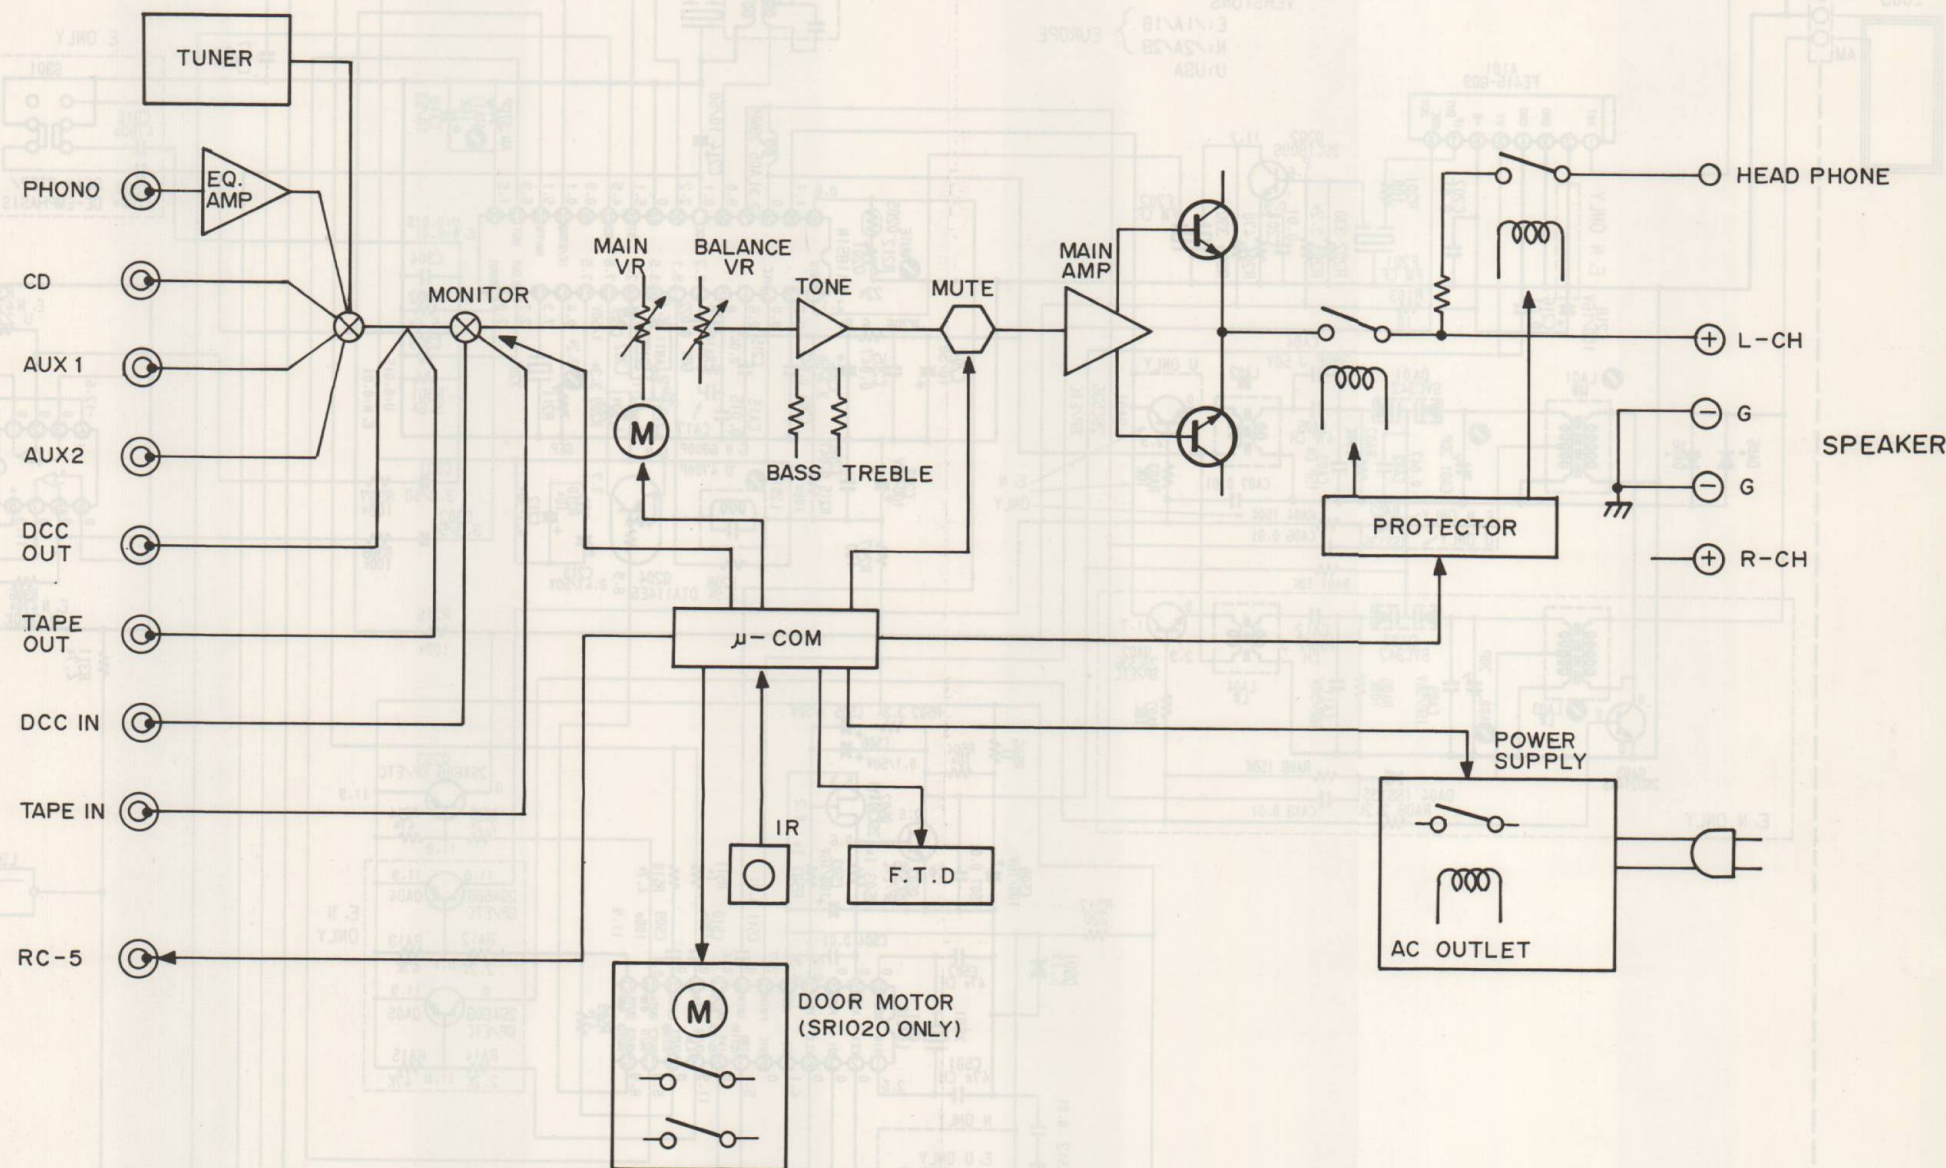

3. SCHEMATIC DIAGRAM AND PARTS LOCATION (Pattern side)

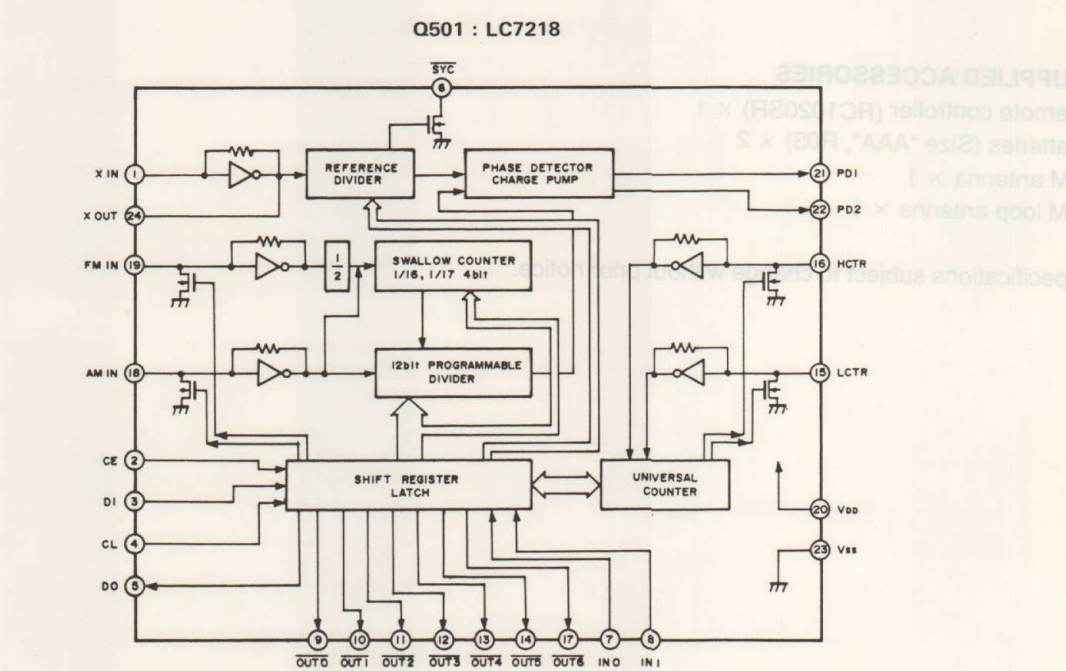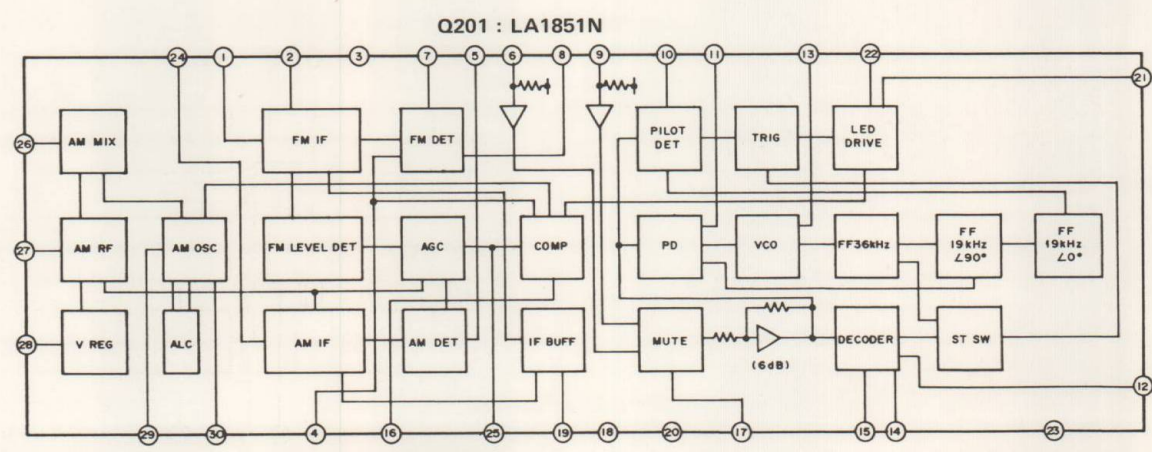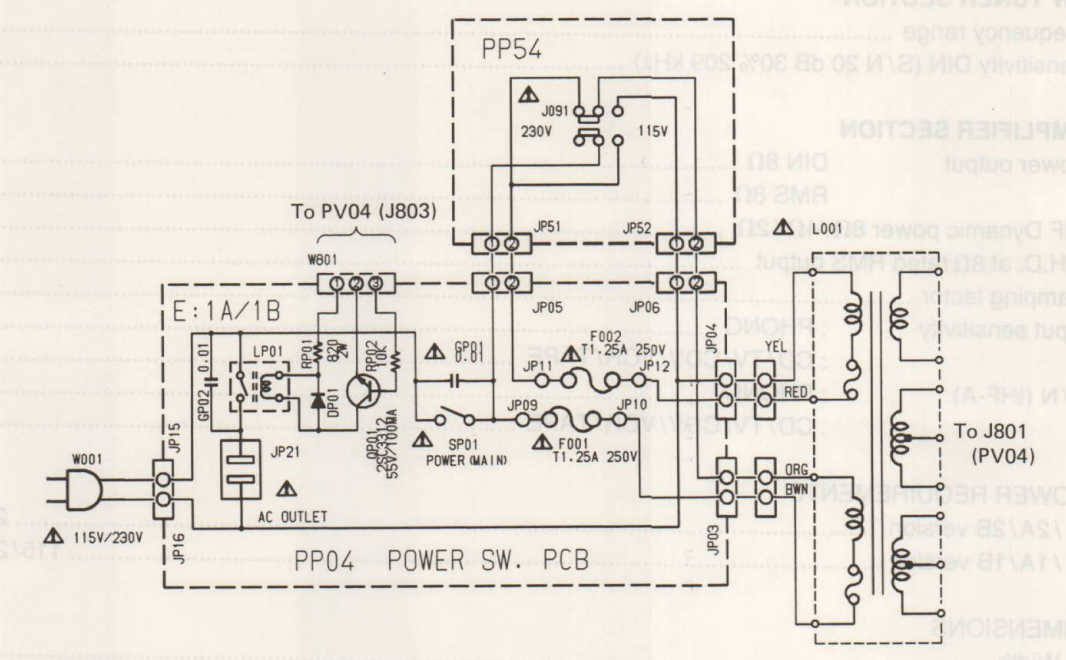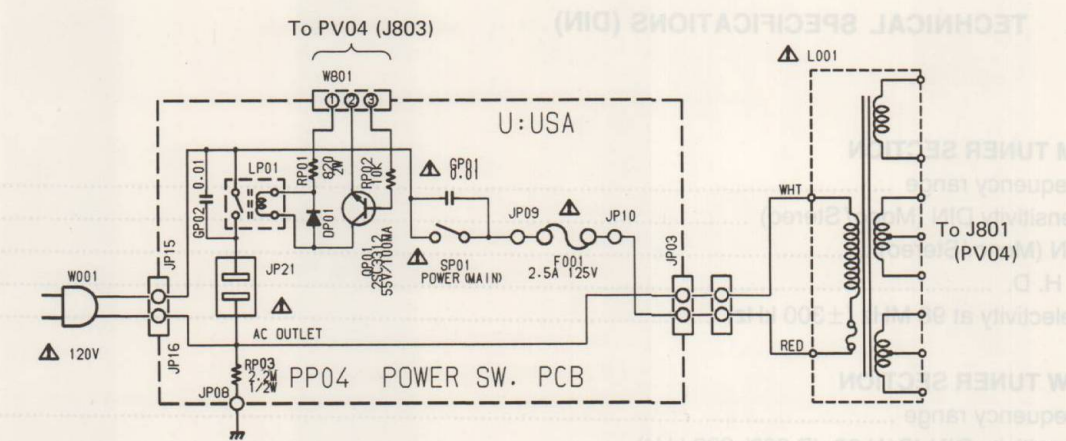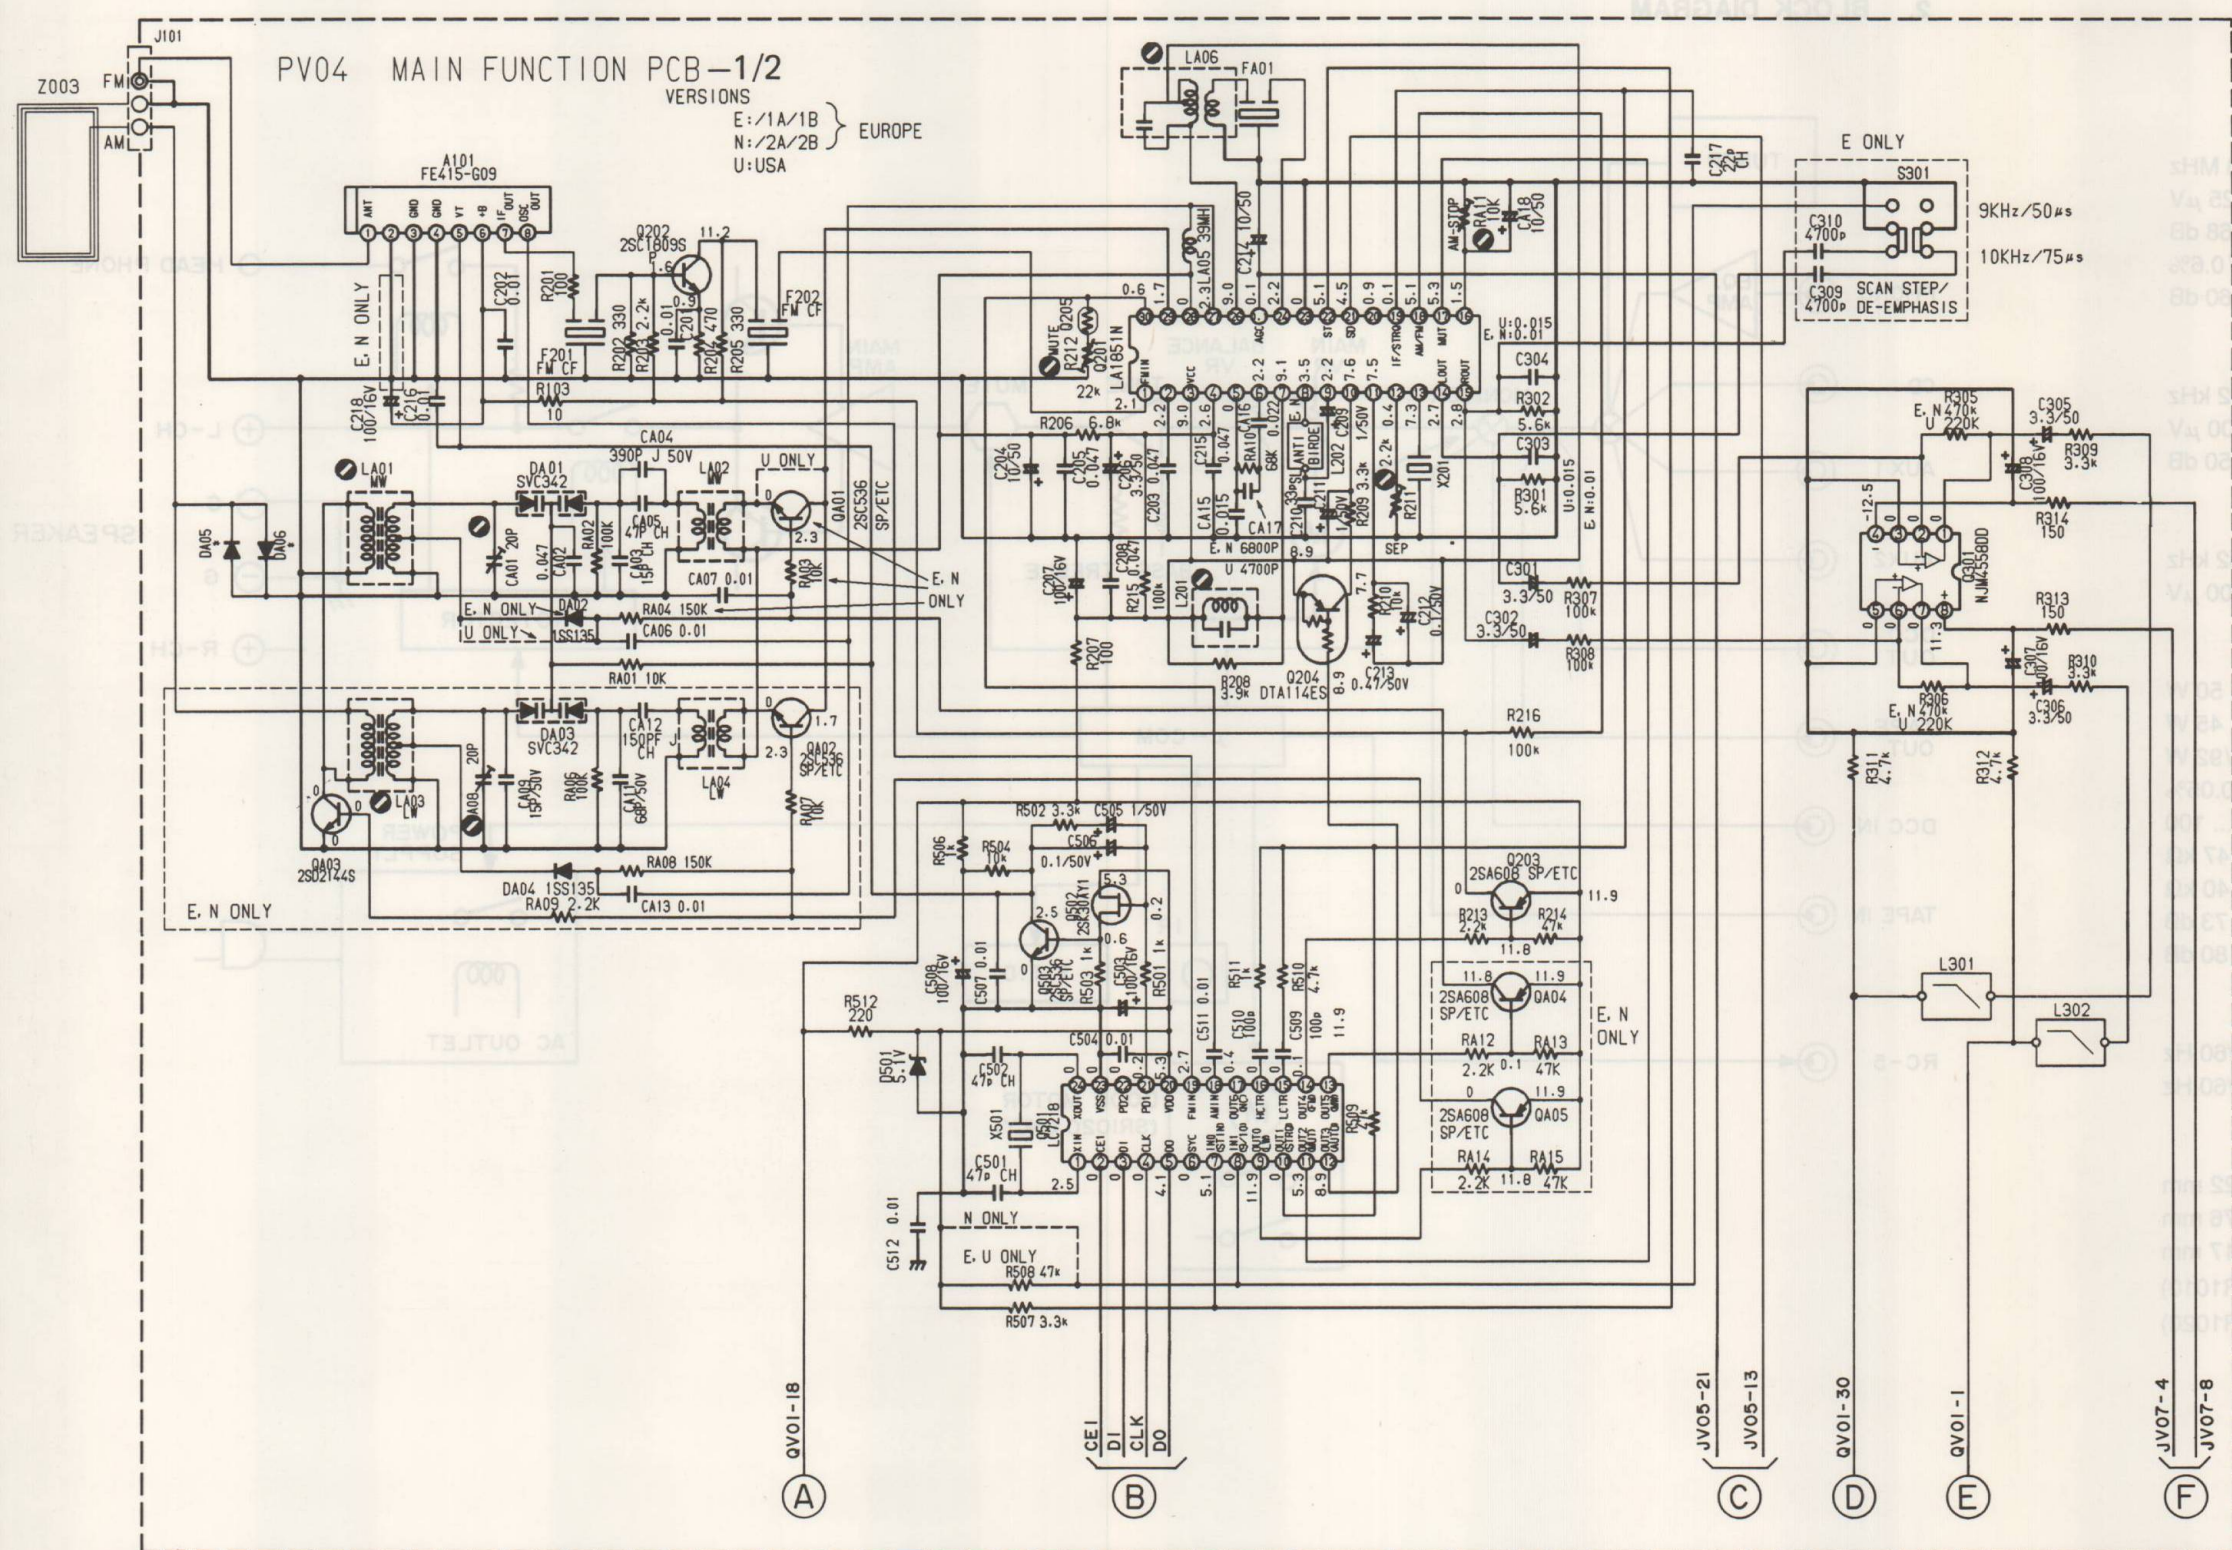


NOTE ON SAFETY :
 Symbol Δ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol Δ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.





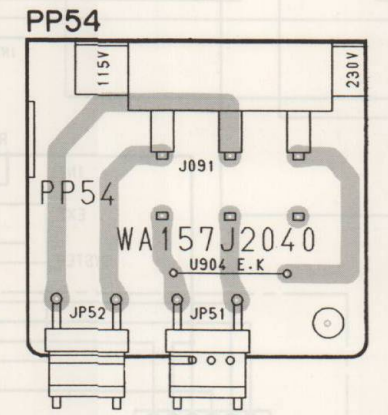
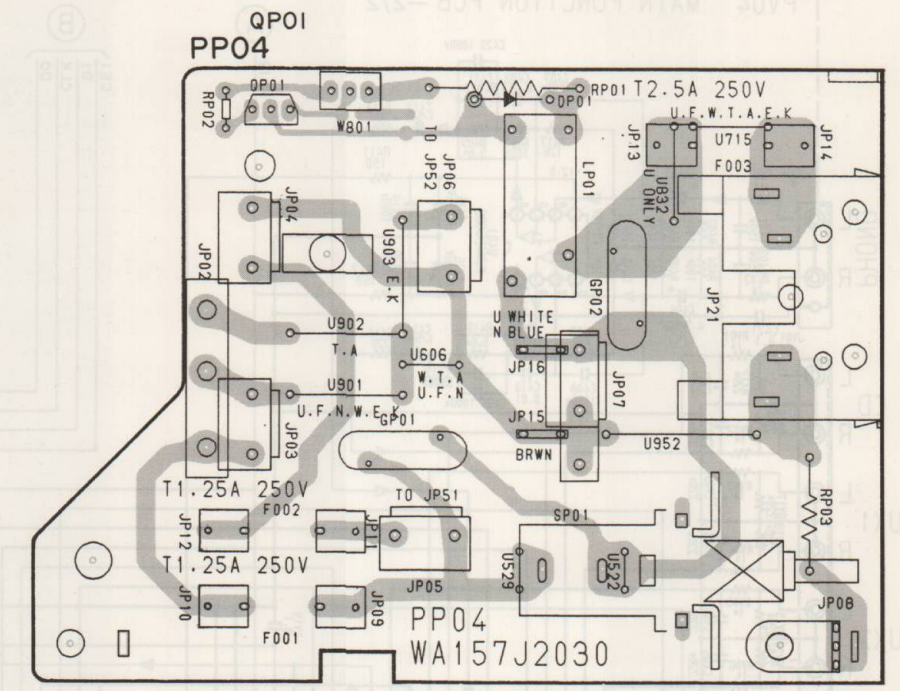
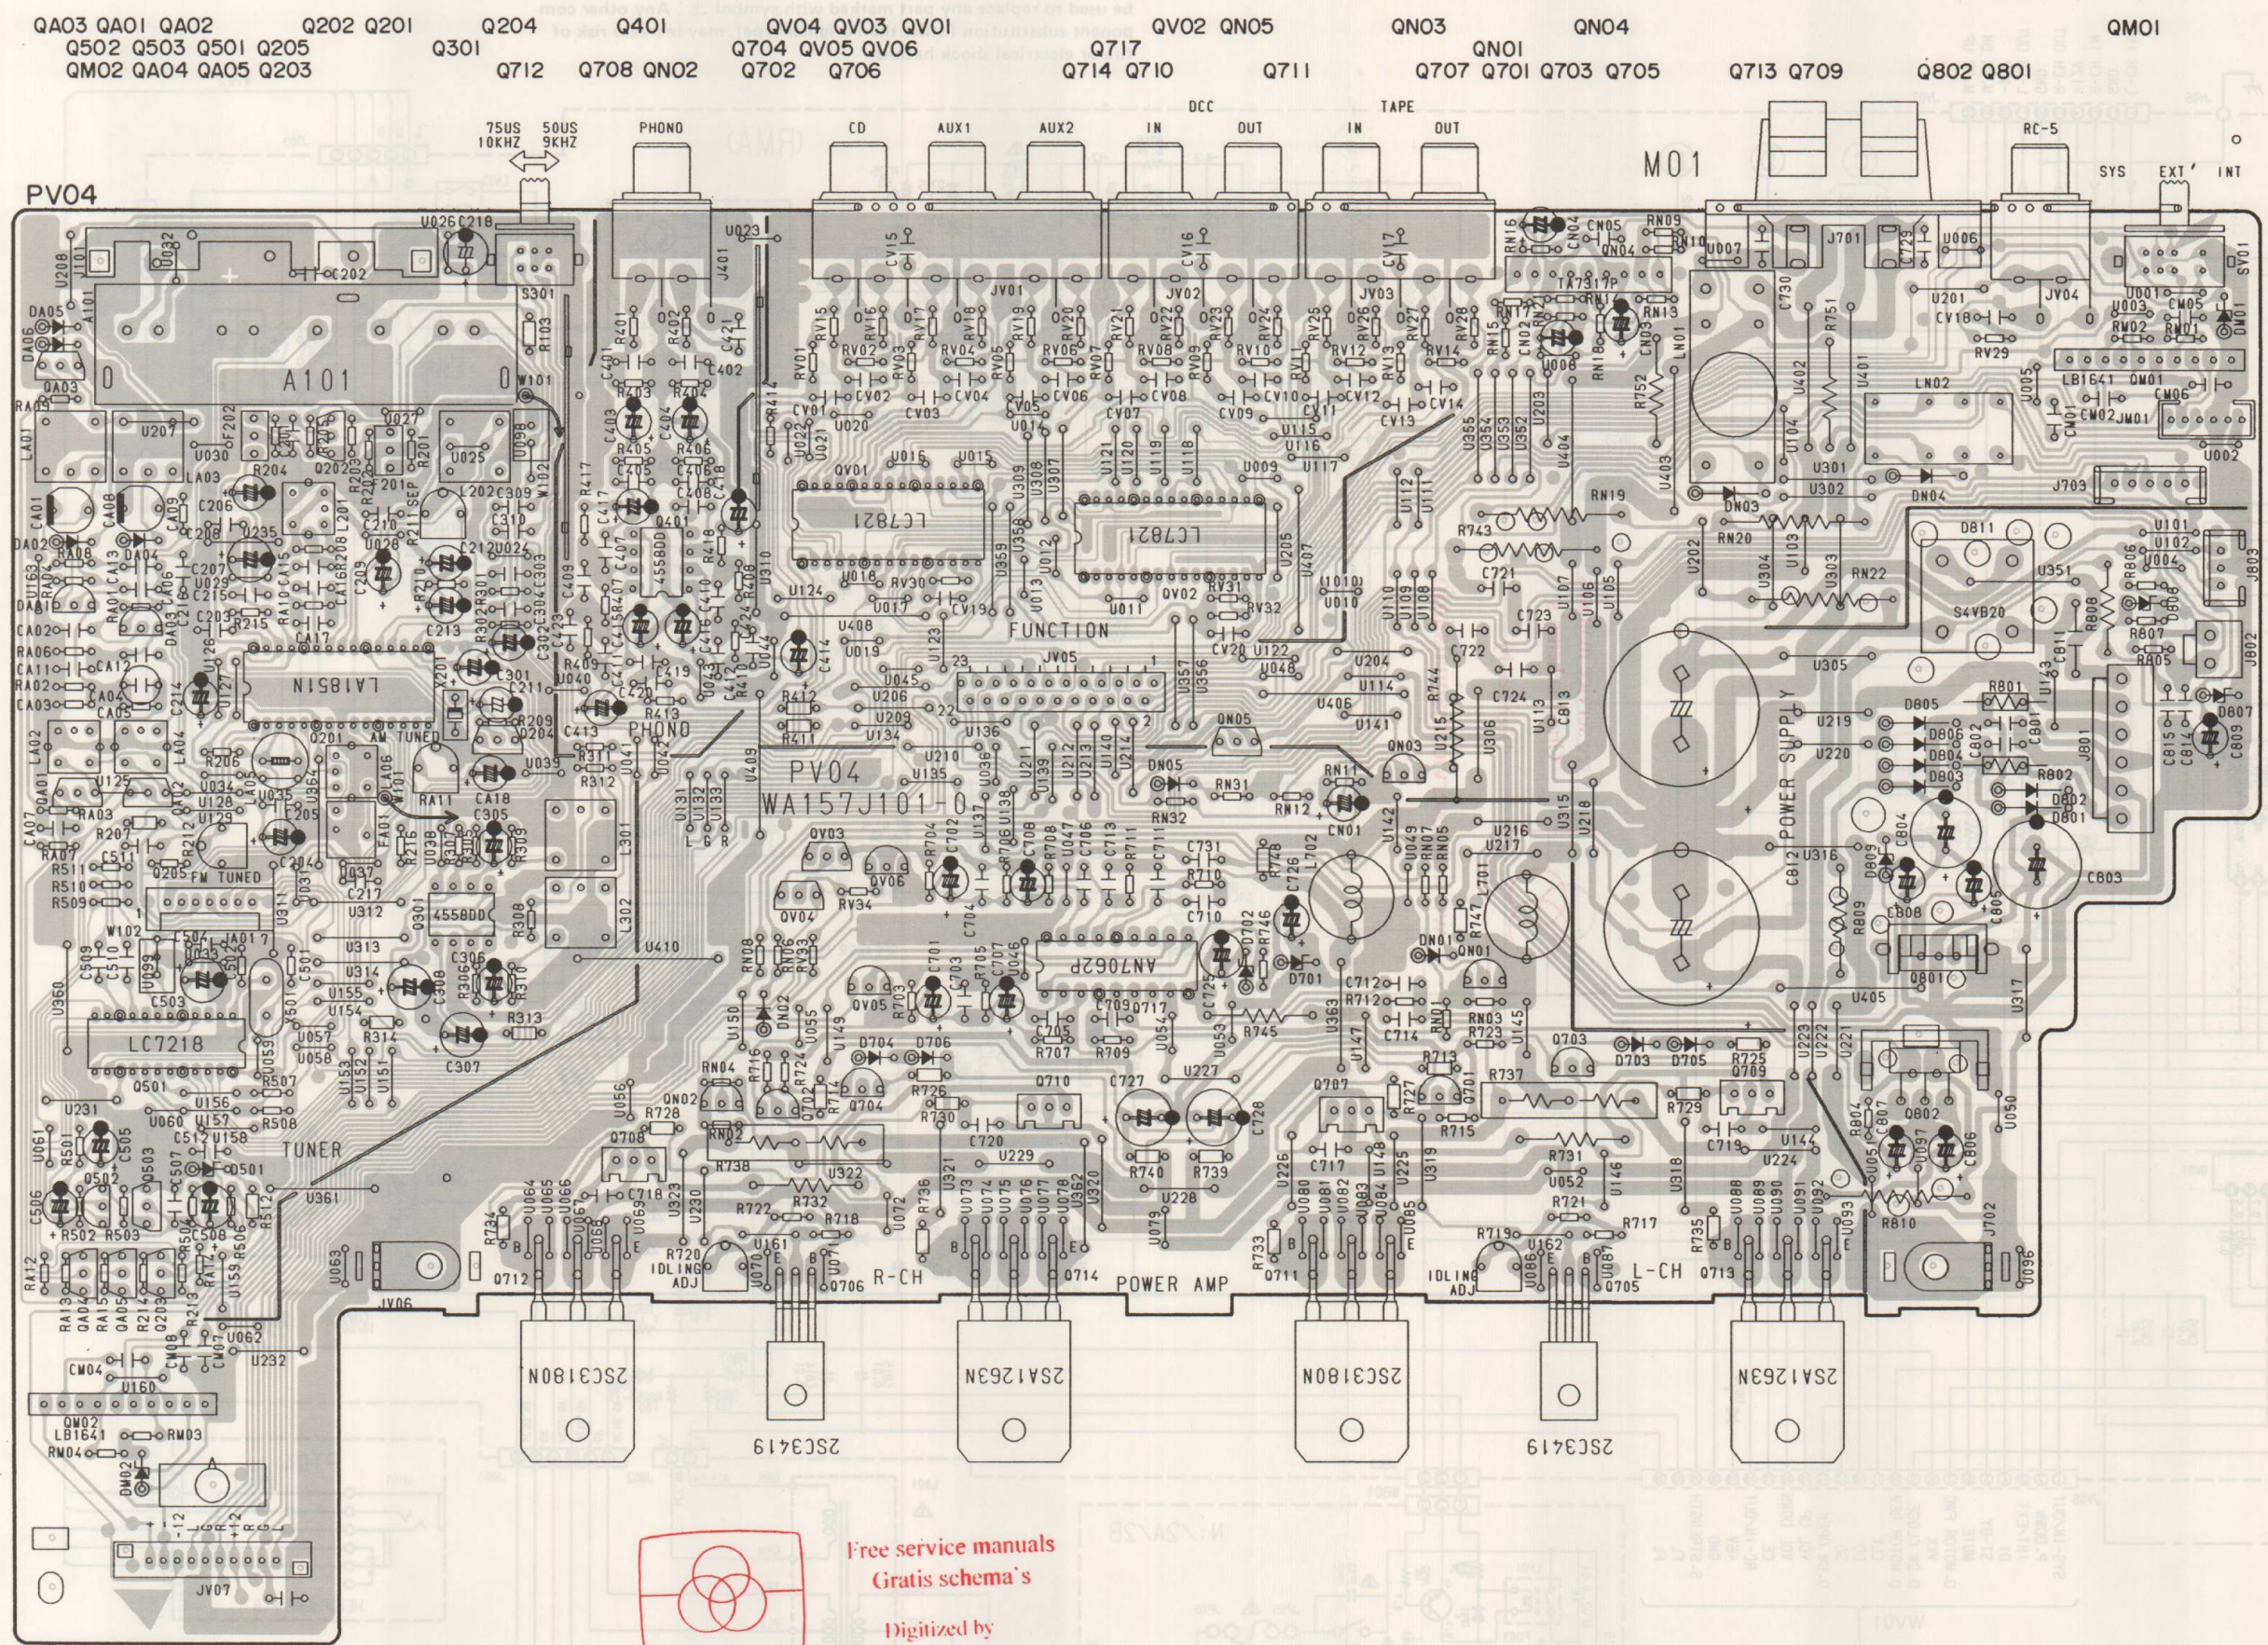




Free service manuals
 Gratis schema's
 Digitized by
 www.freeservicemanuals.info

NOTE ON SAFETY :
 Symbol Δ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol Δ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

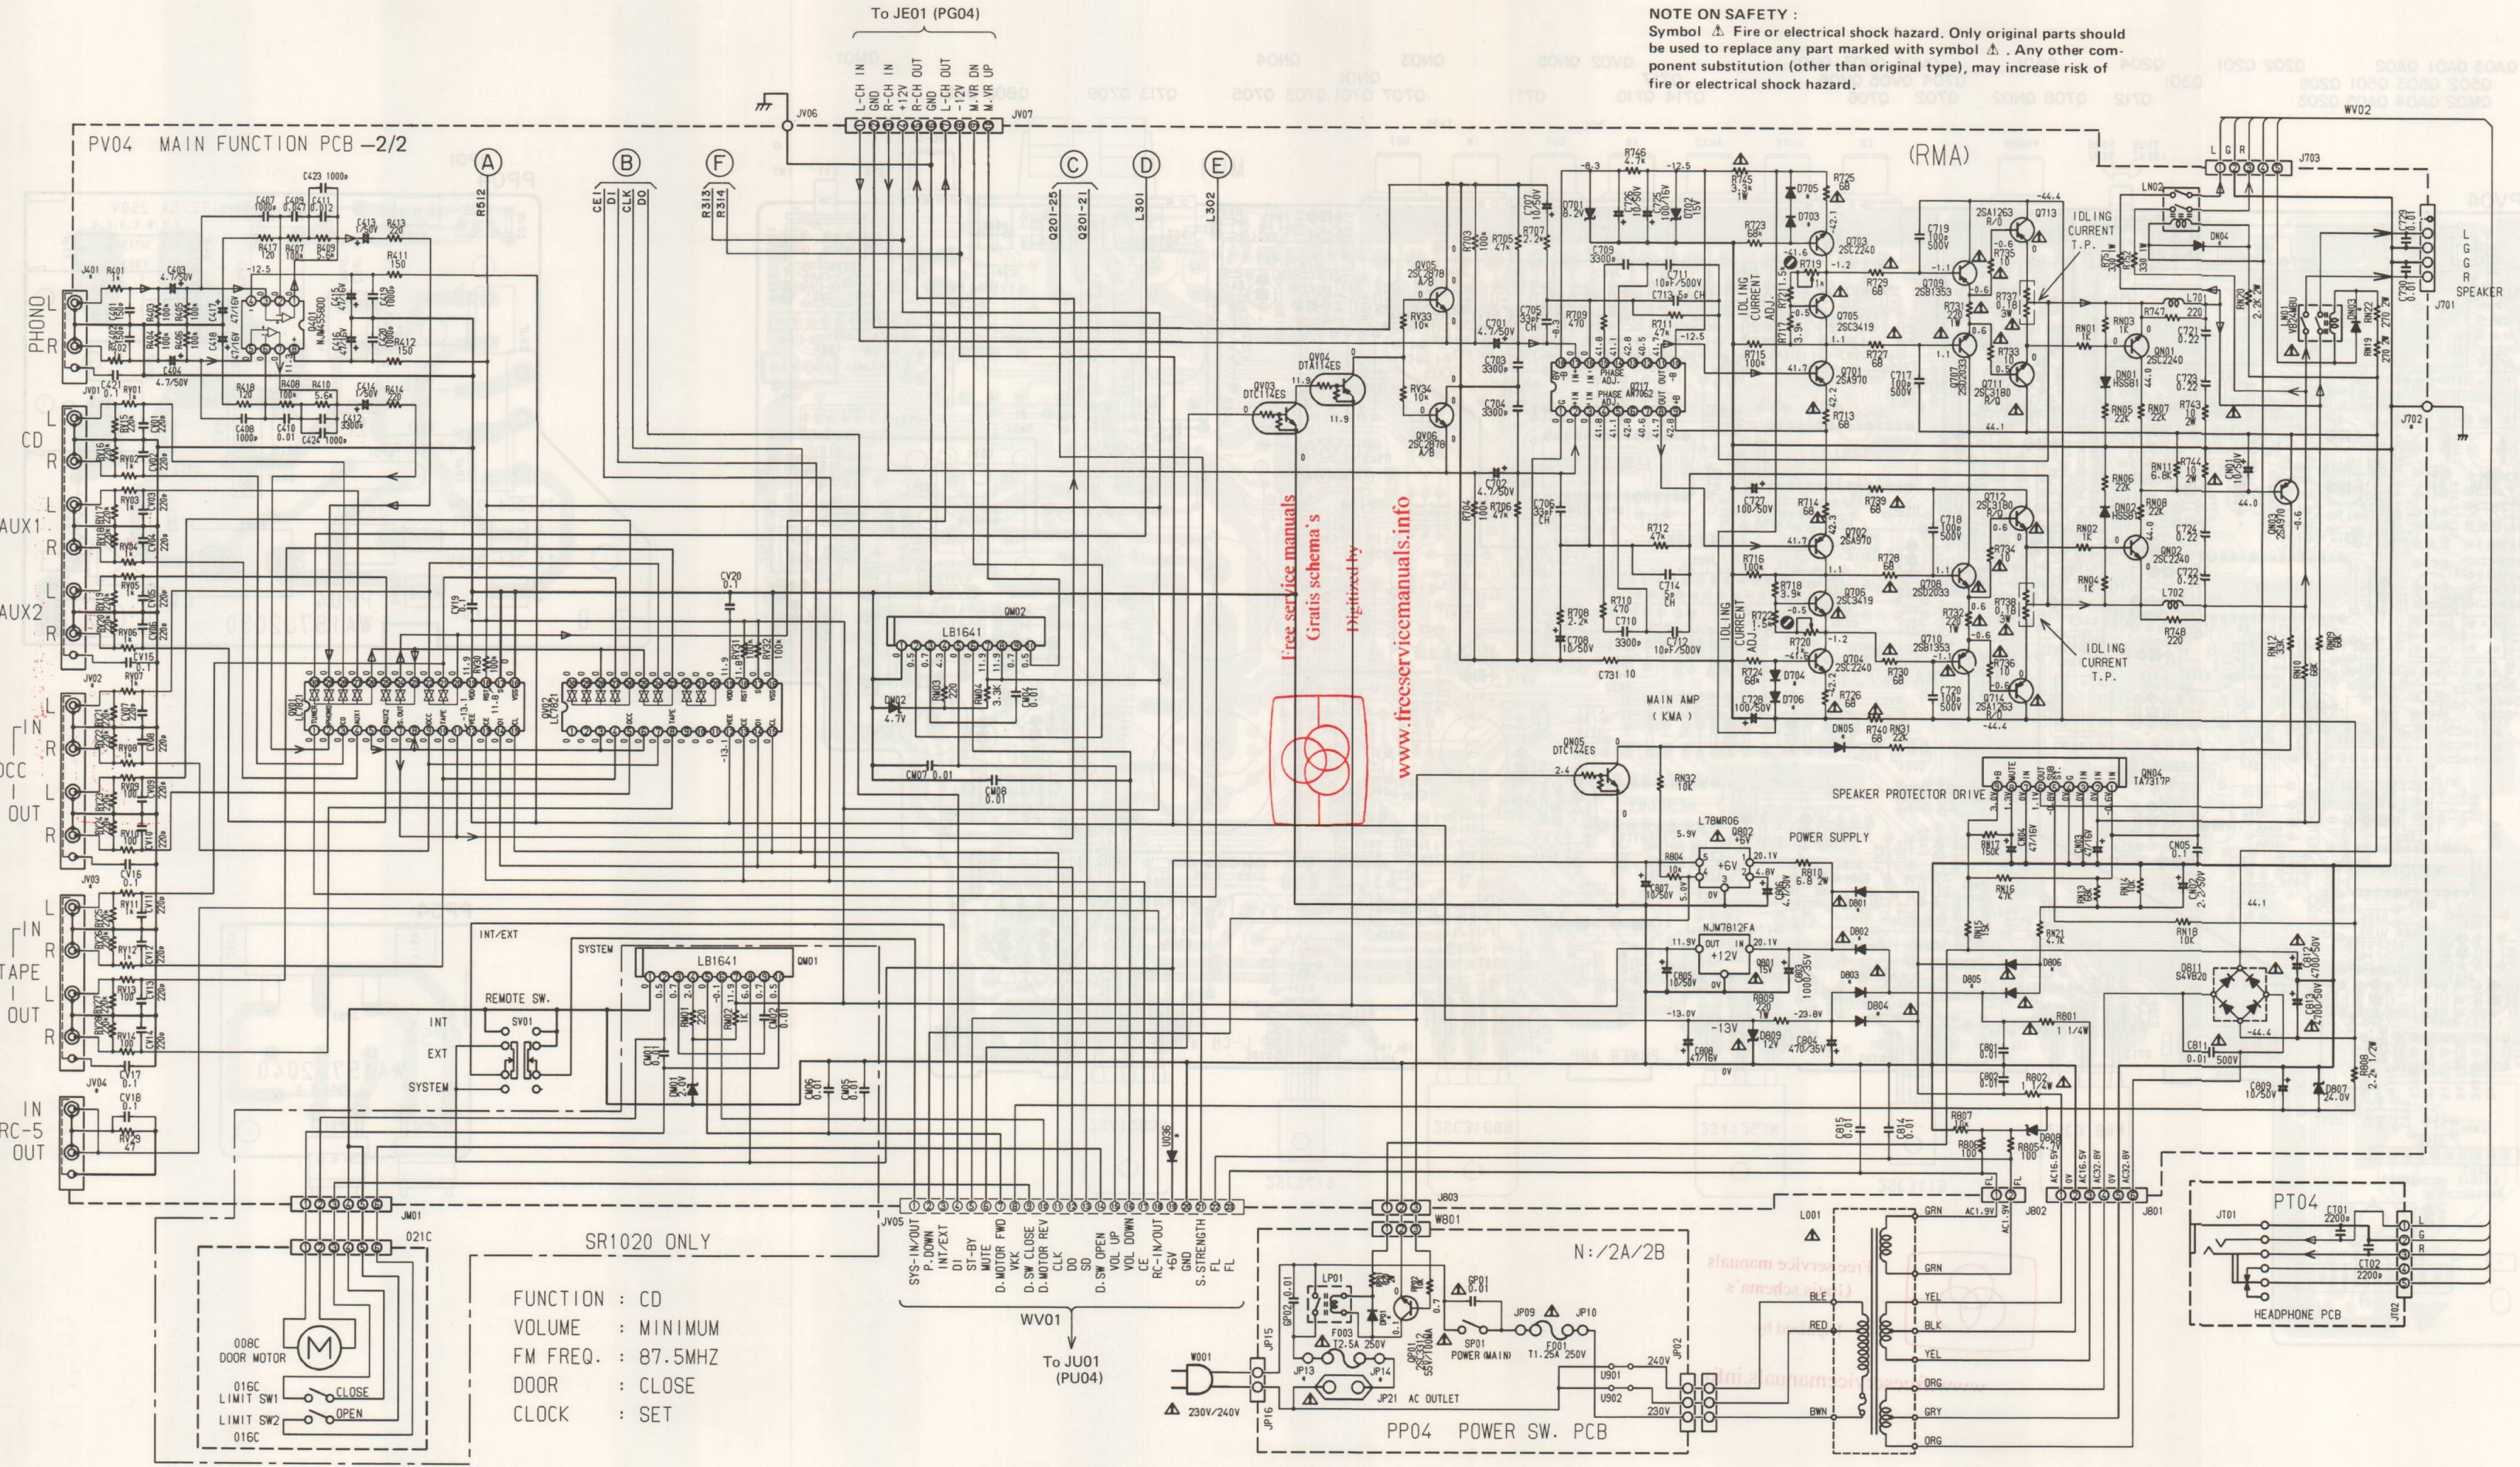




Free service manuals
 Gratis schema's
 Digitized by
 www.freeservicemanuals.info

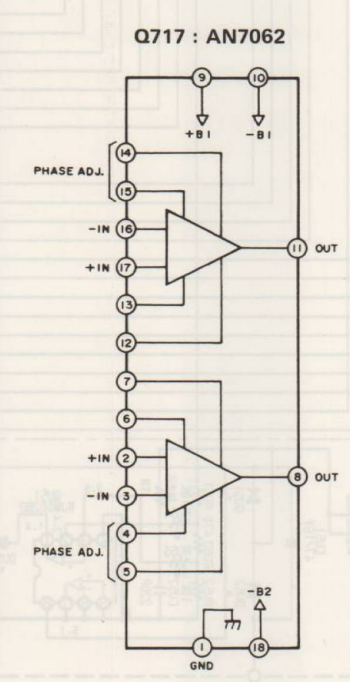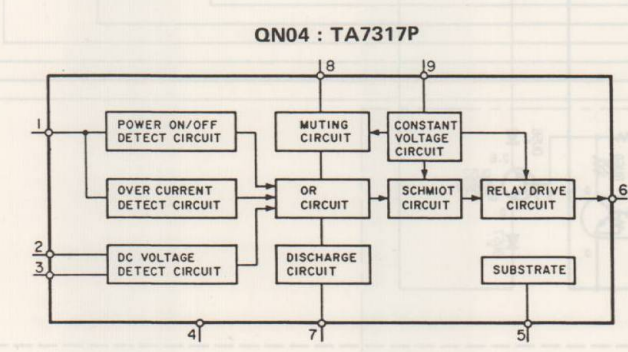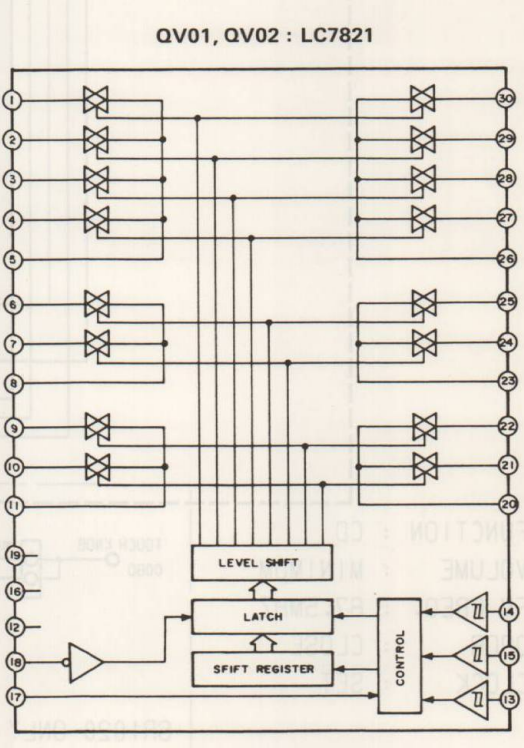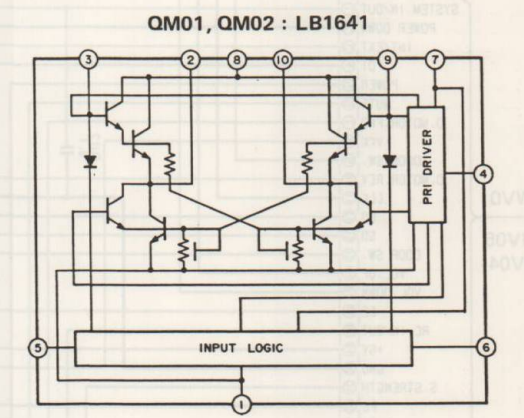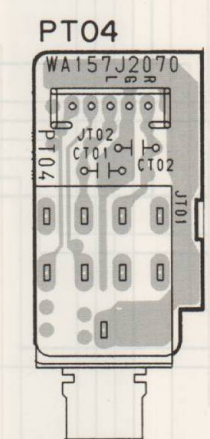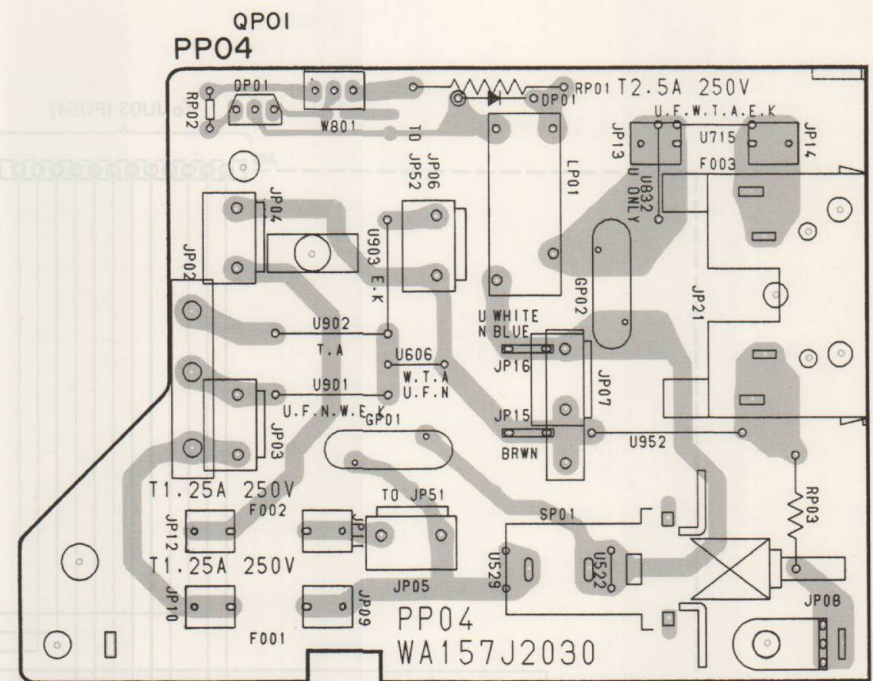
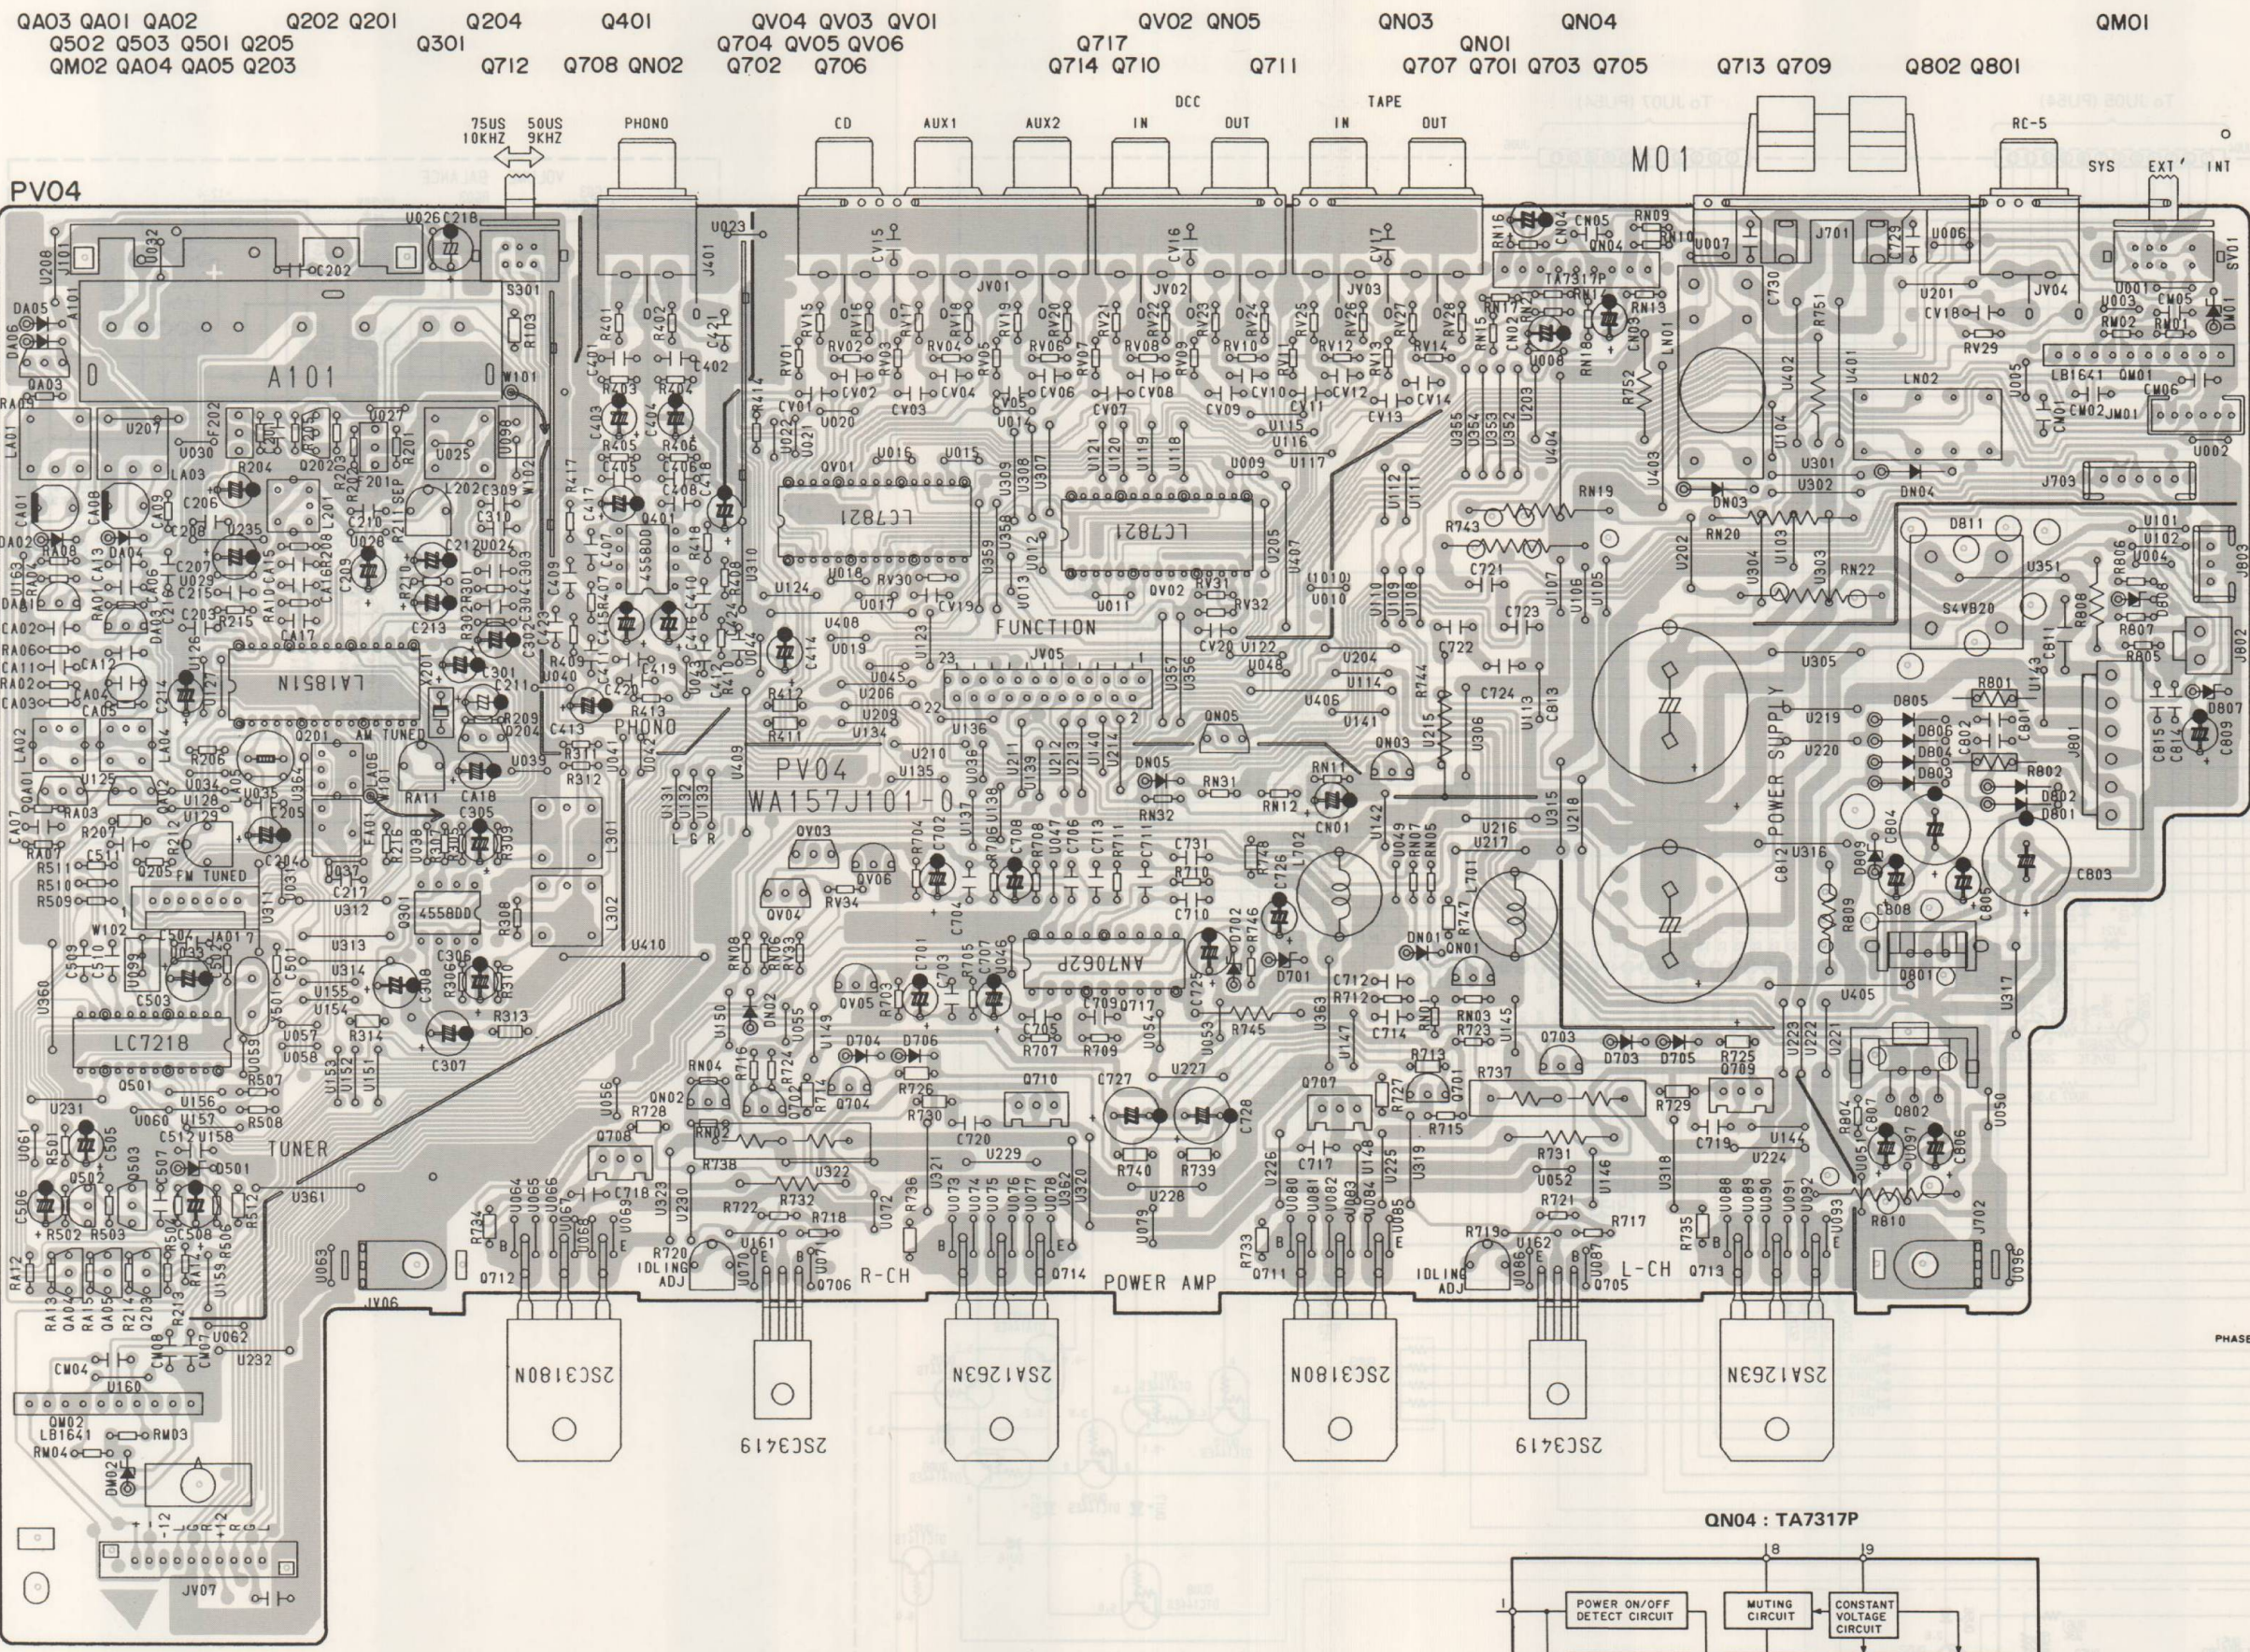


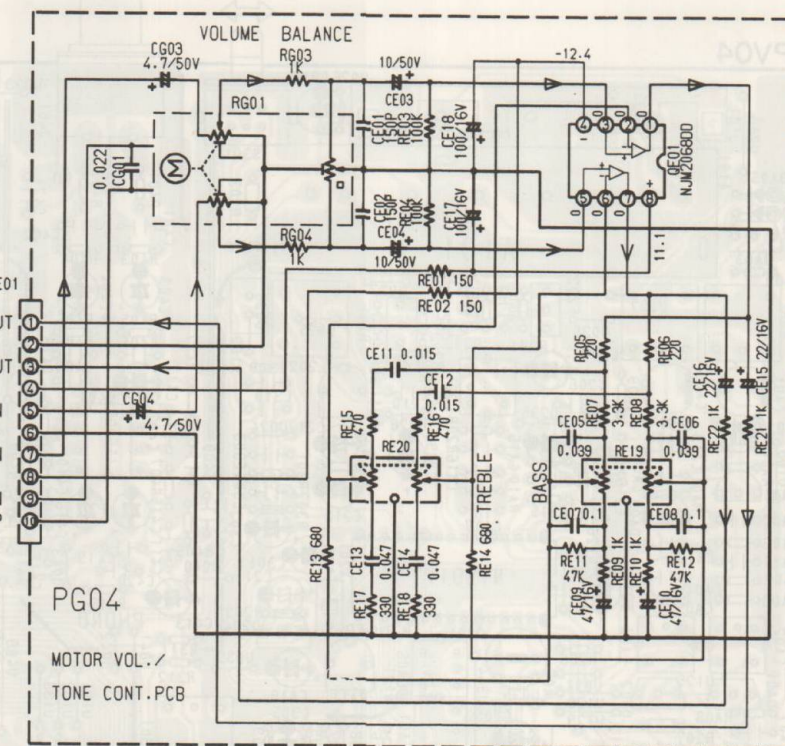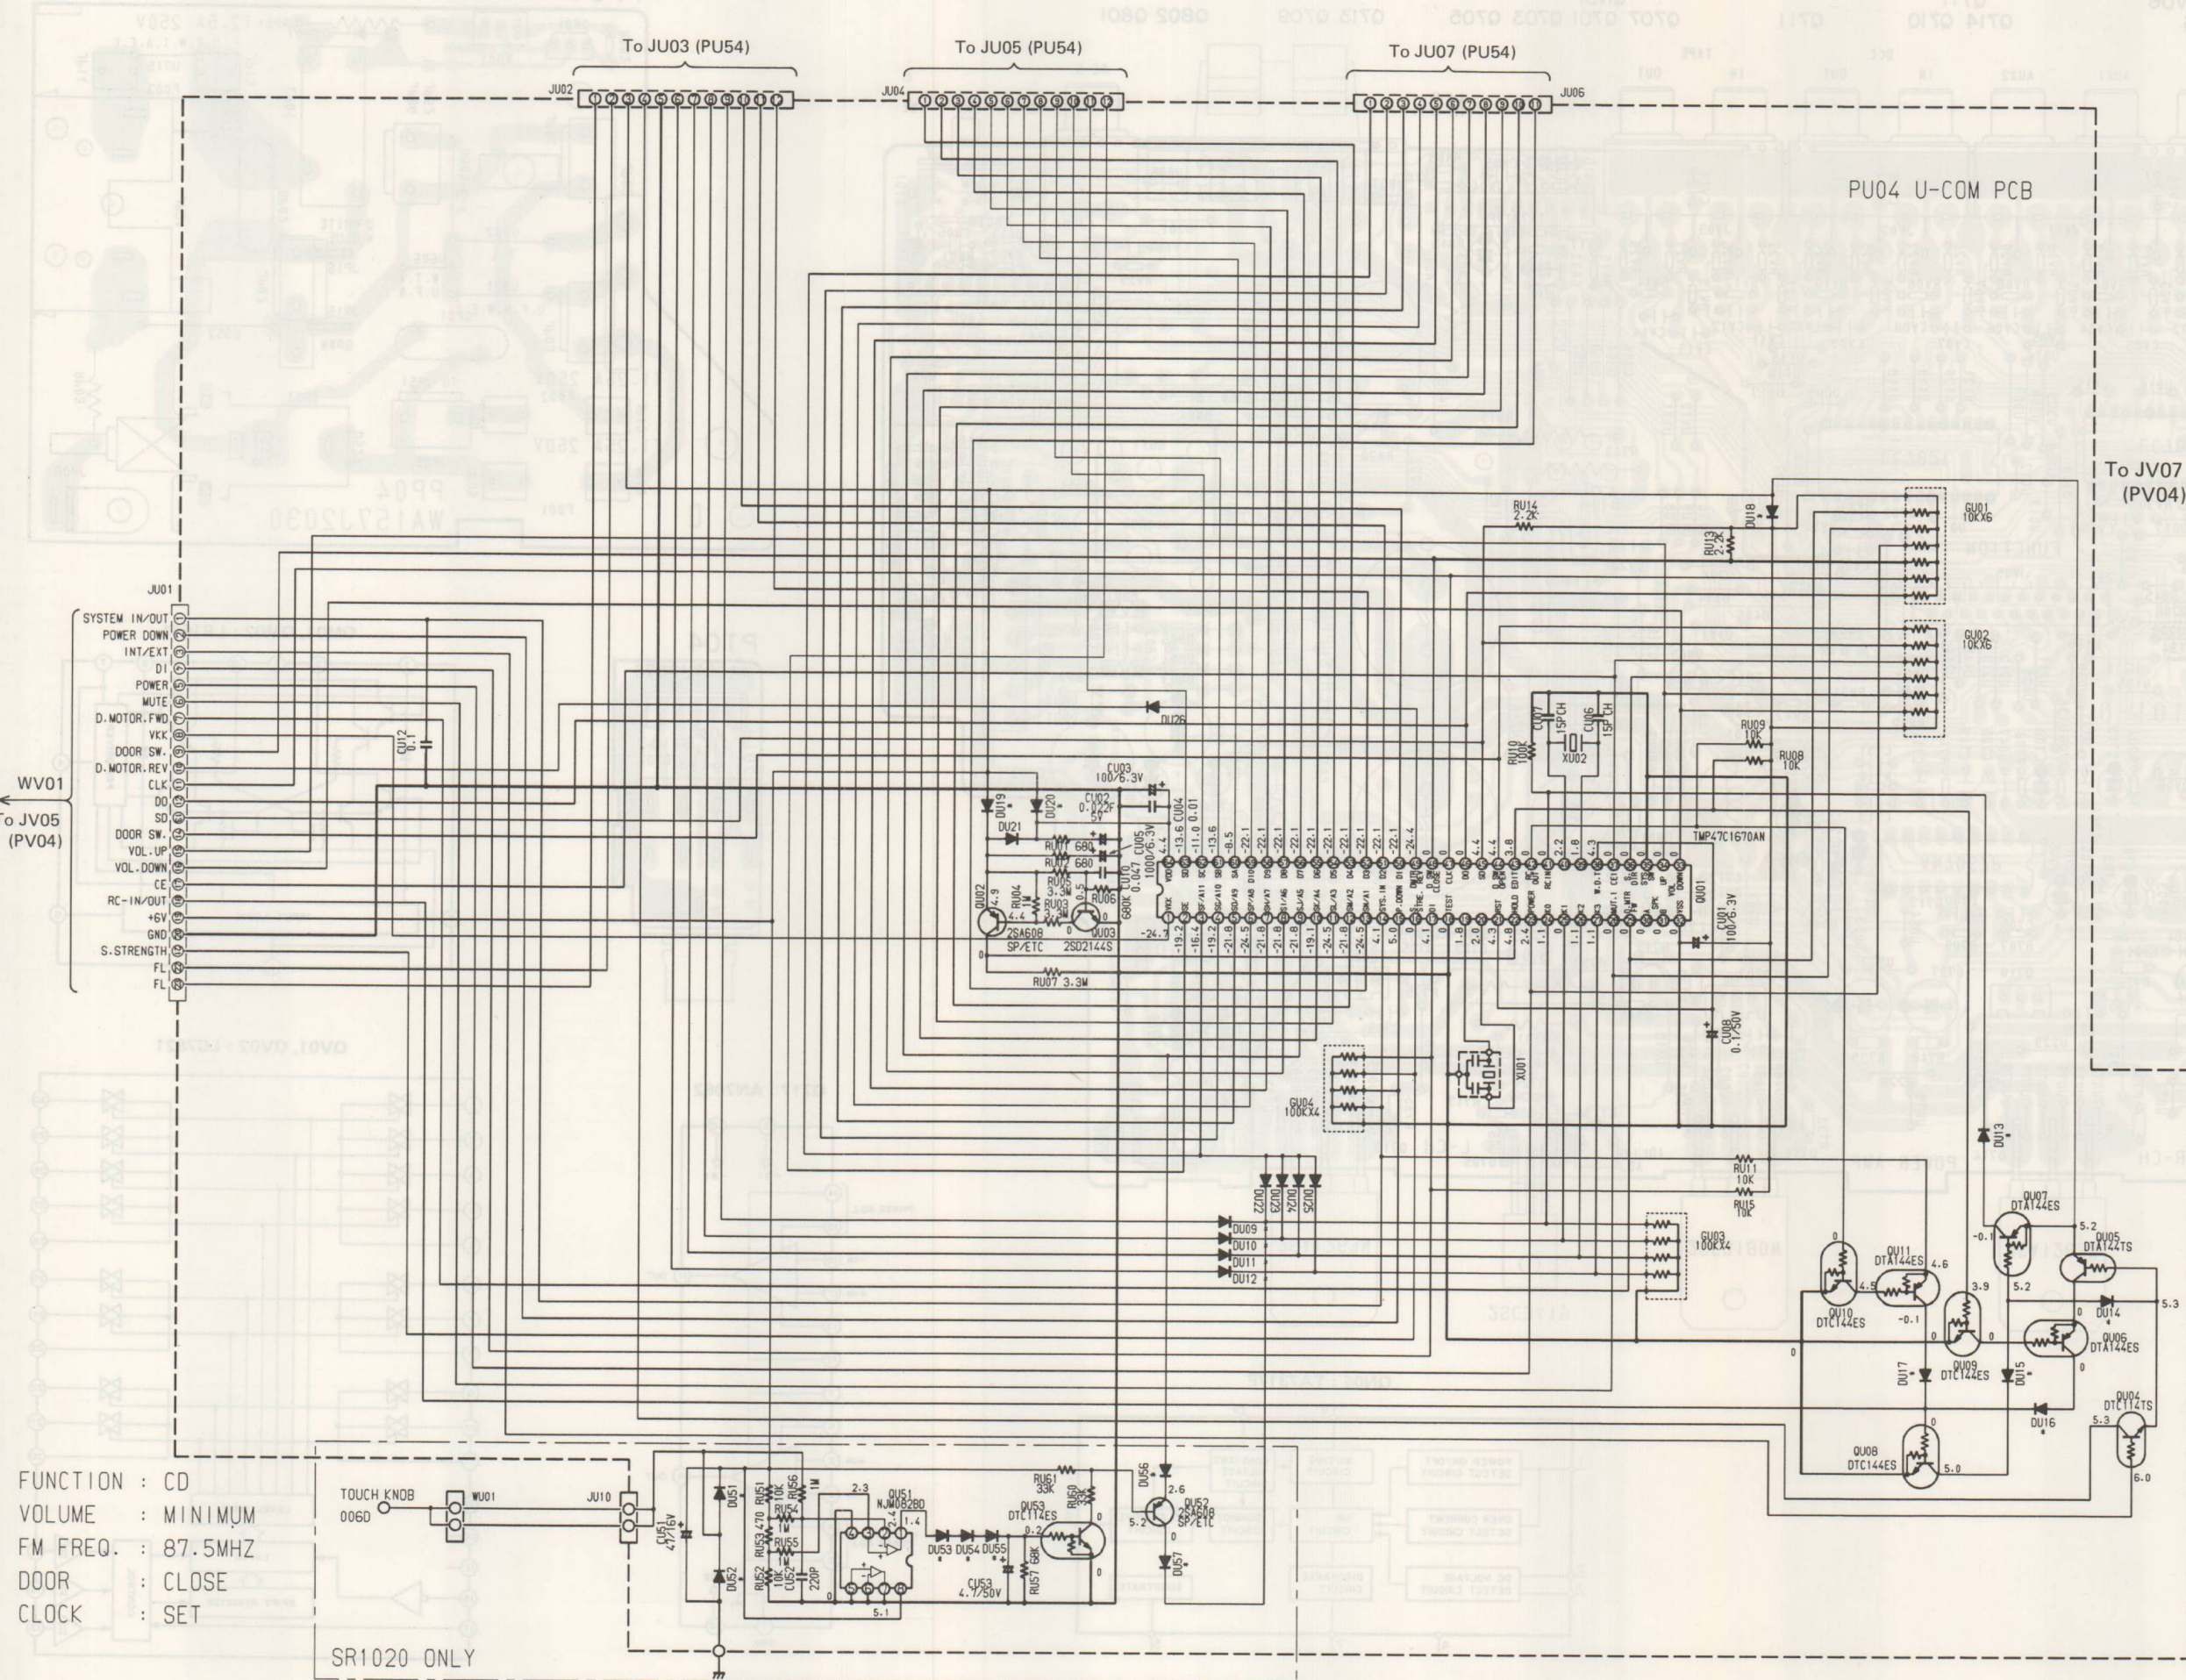


FUNCTION : CD
 VOLUME : MINIMUM
 FM FREQ. : 87.5MHZ
 DOOR : CLOSE
 CLOCK : SET

SR1020 ONLY

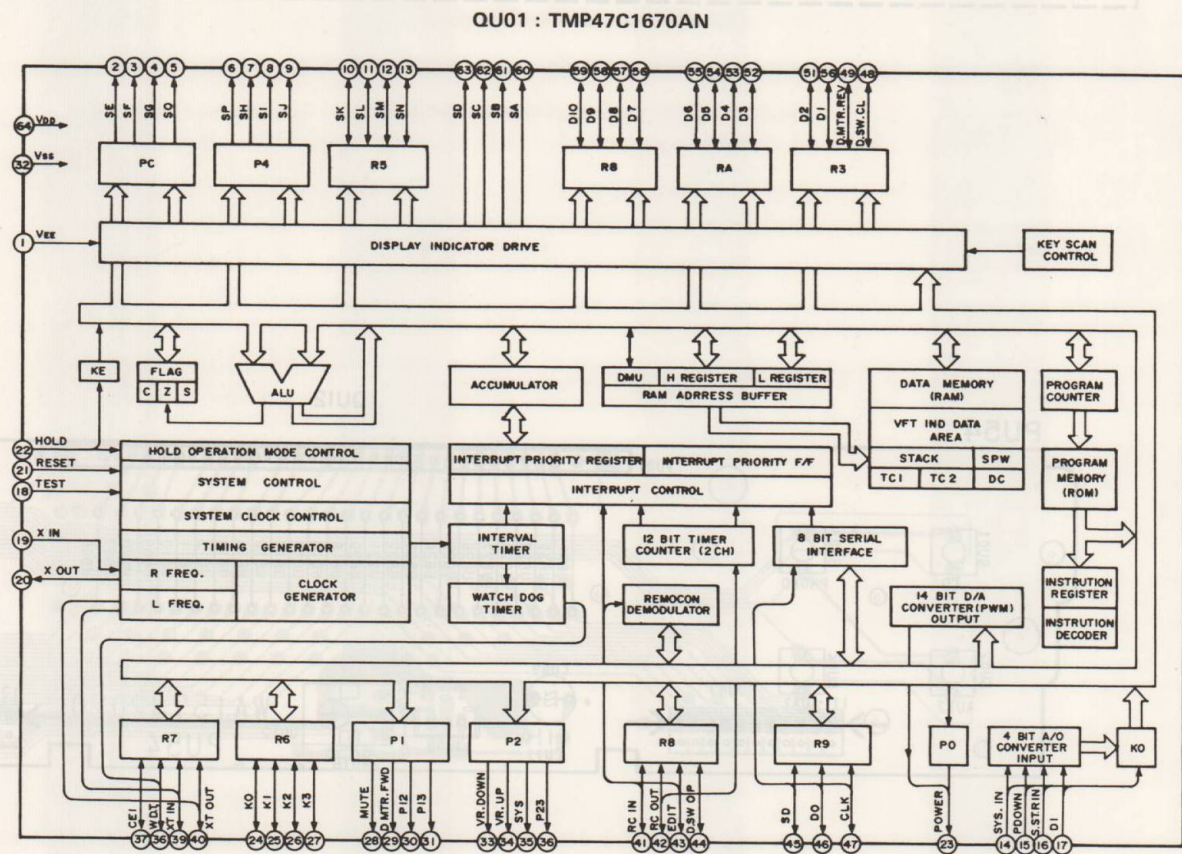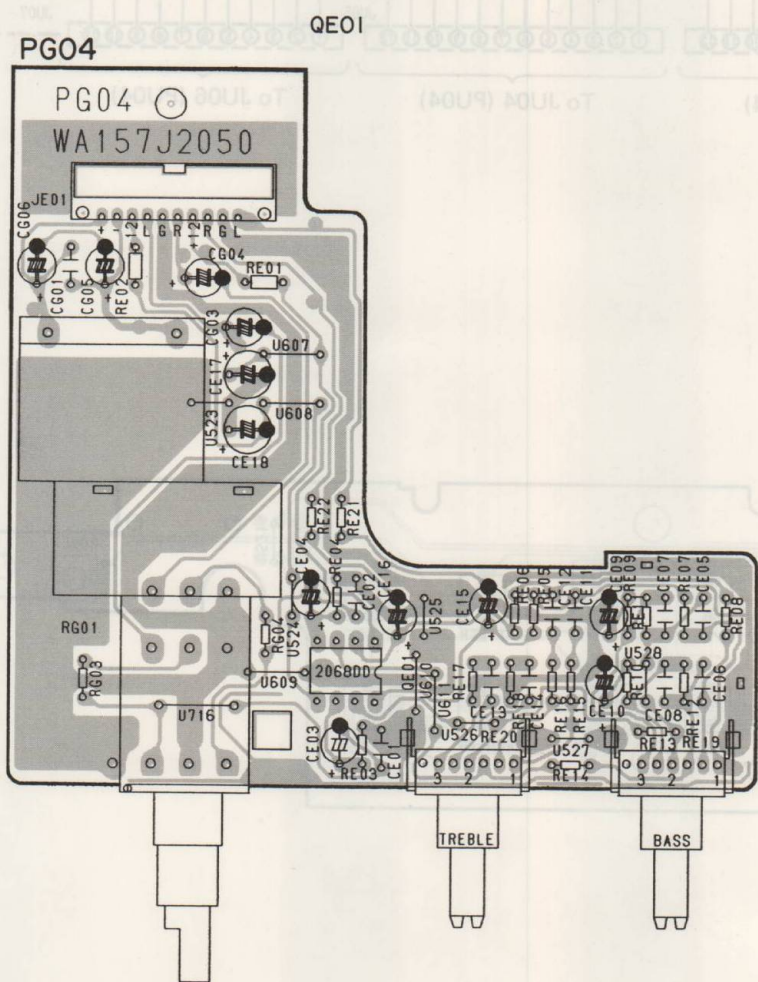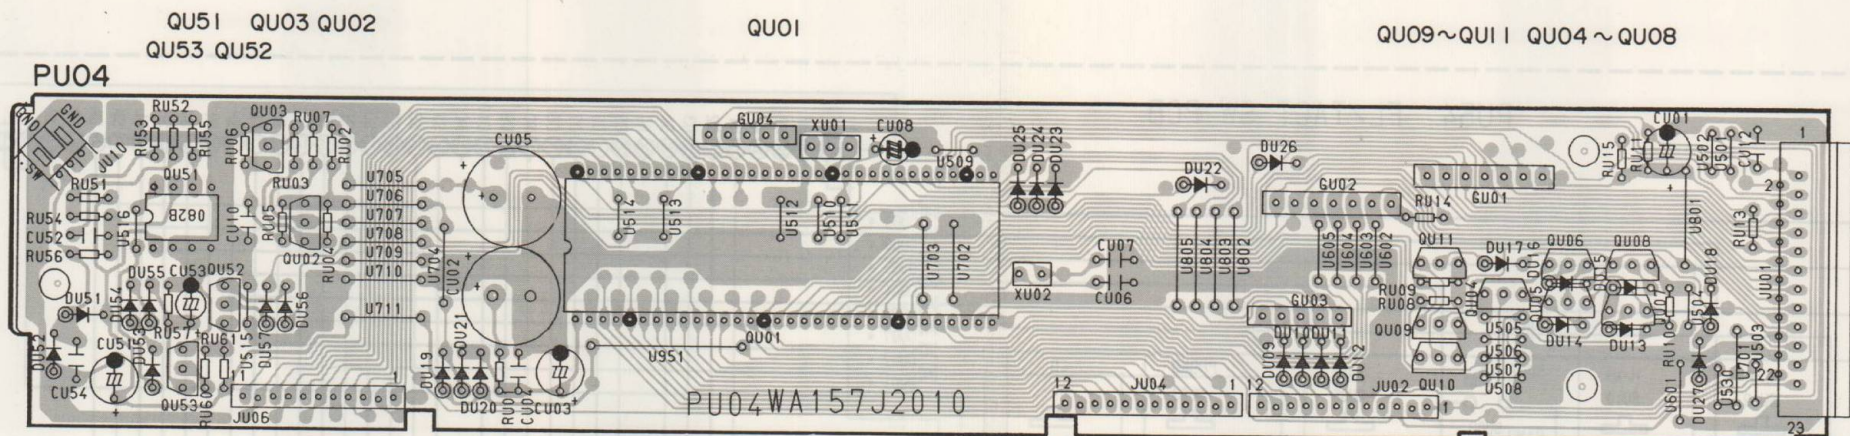

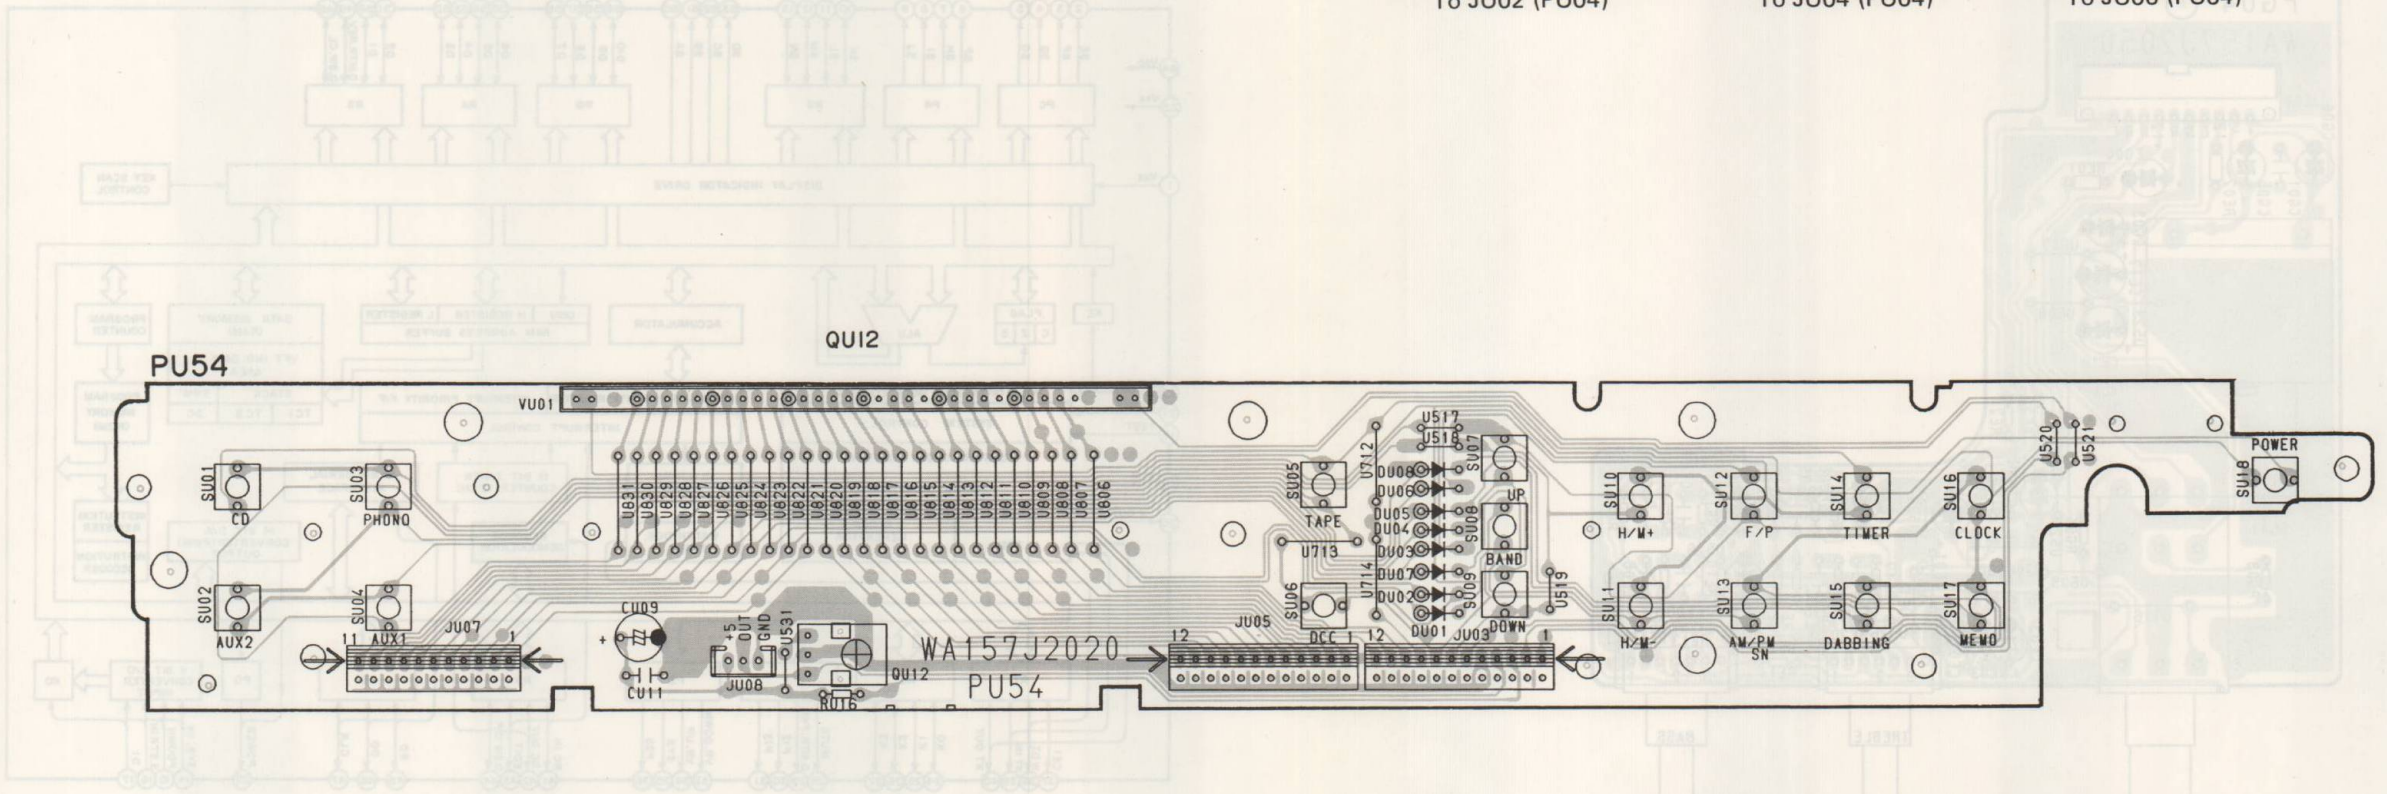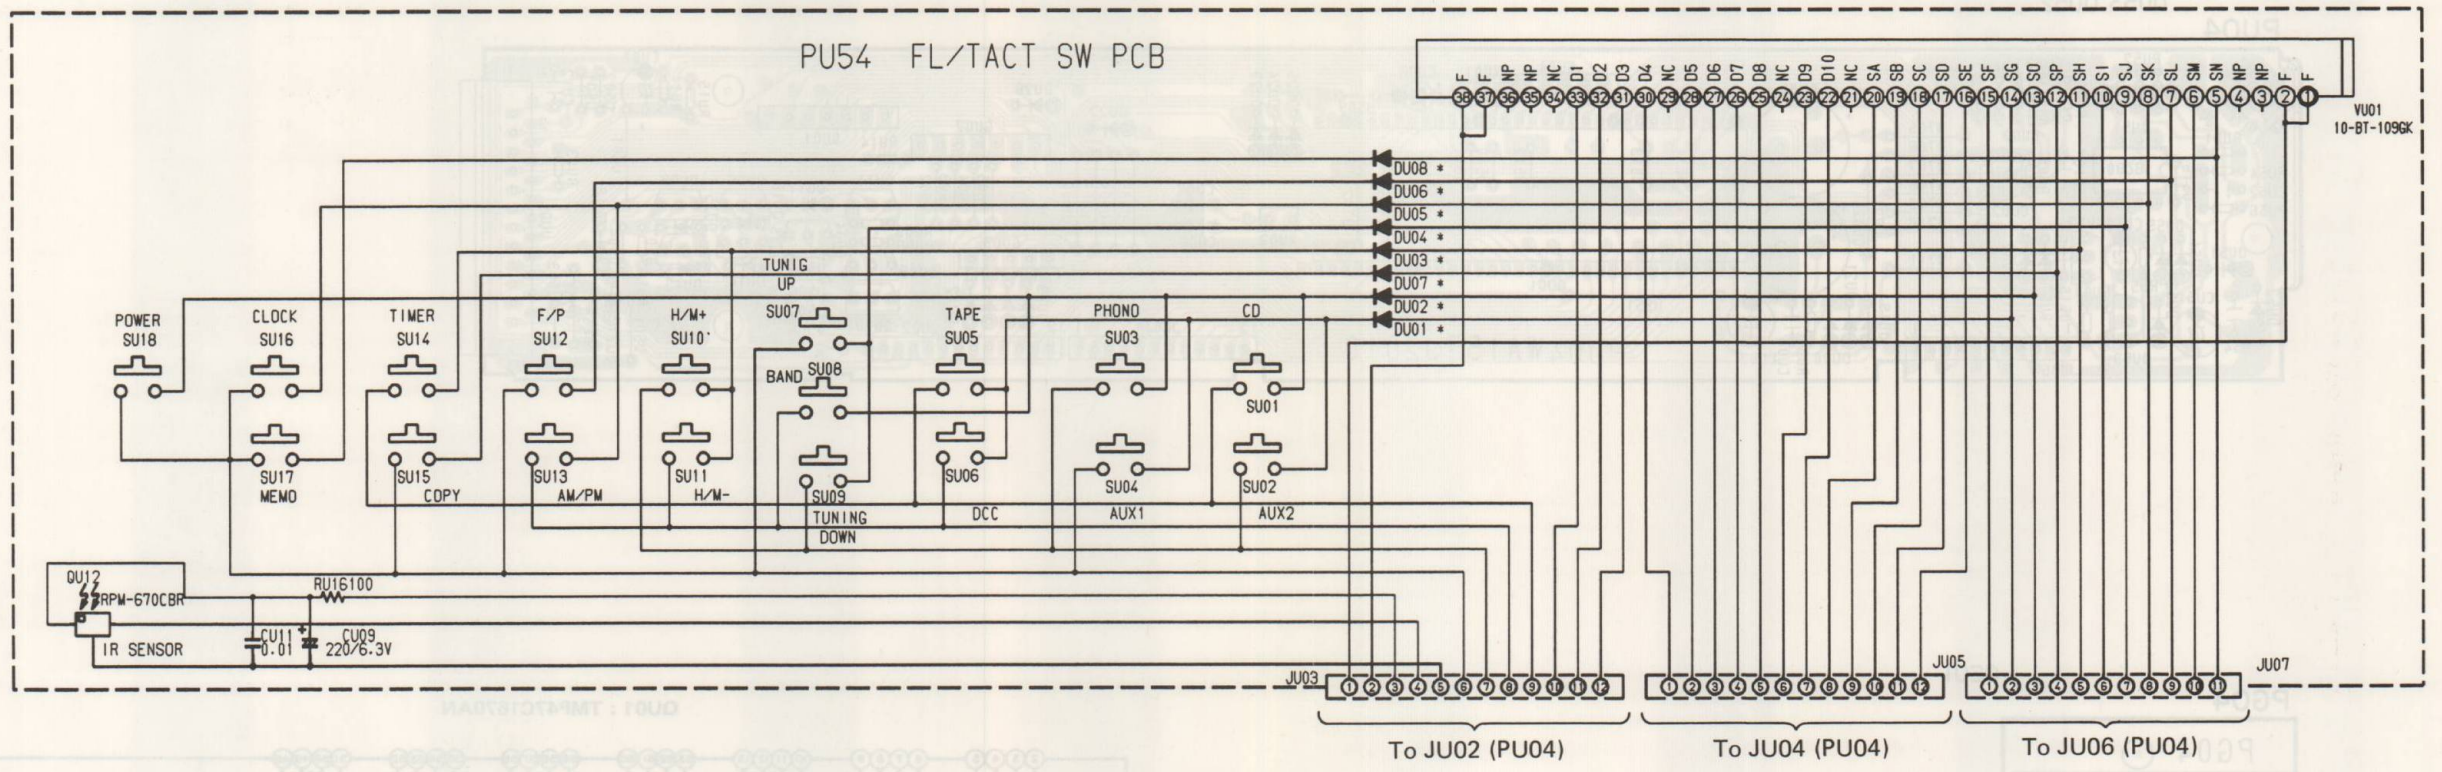

4. EXPLODED VIEW AND PARTS LIST


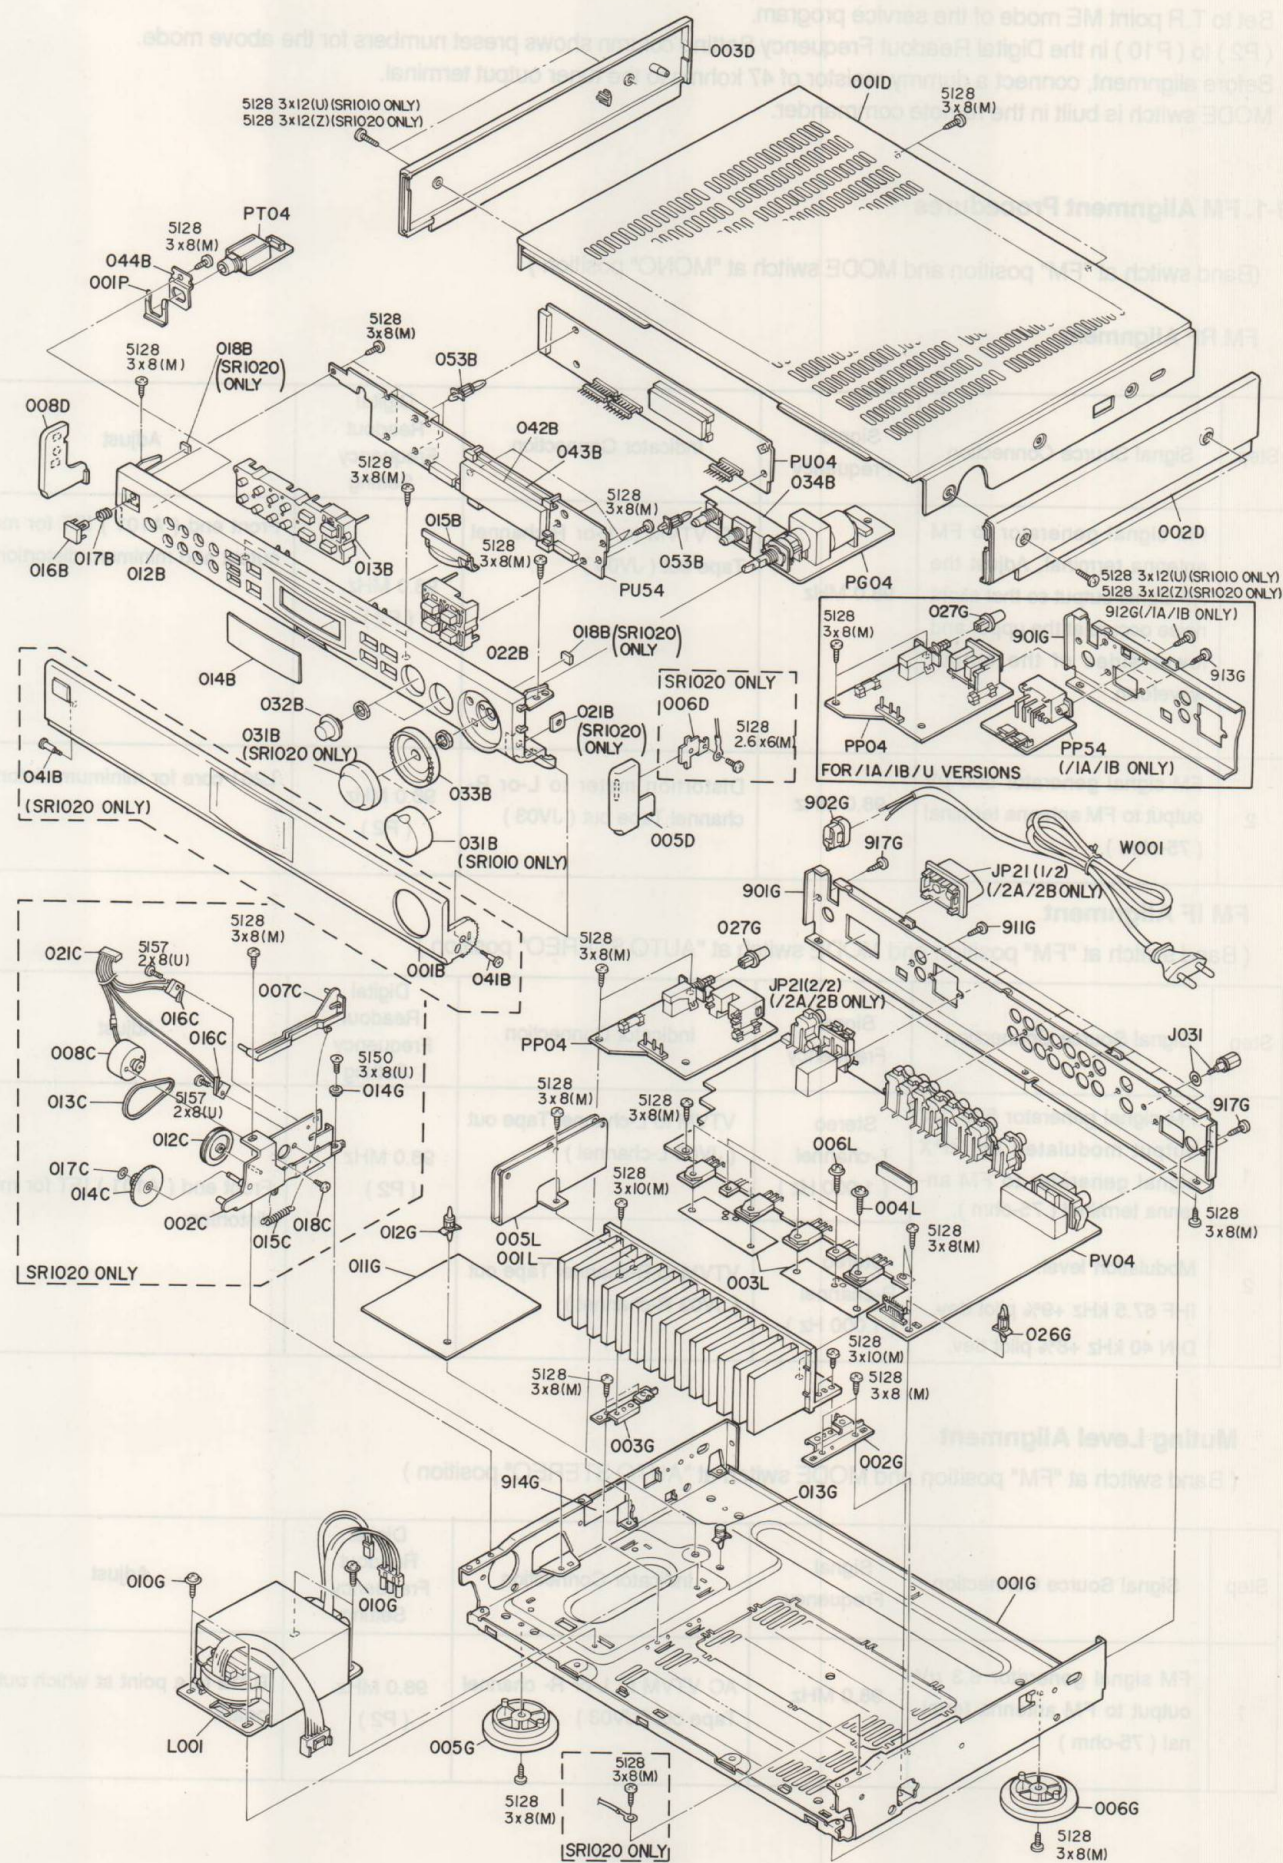


REF. DESIG.	PART NO.	DESCRIPTION
001B	4822 426 60645	ESCUTCHEON, DOOR PANEL ASSY [SR1020]
012B	4822 426 51679	FRONT PANEL [SR1020]
012B	4822 426 51699	FRONT PANEL [SR1010]
013B	4822 410 62811	BUTTON BLOCK(L) [SR1020]
013B	4822 410 62875	BUTTON BLOCK(L) [SR1010]
014B	4822 450 62123	FL WINDOW [SR1020]
014B	4822 450 62144	FL WINDOW [SR1010]
015B	4822 381 11434	IR LENS
016B	4822 410 62813	POWER BUTTON [SR1020]
016B	4822 410 62877	POWER BUTTON [SR1010]
017B	4822 492 33409	POWER BUTTON SPRING
022B	4822 410 62812	BUTTON BLOCK (R) [SR1020]
022B	4822 410 62876	BUTTON BLOCK (R) [SR1010]
031B	4822 413 41818	MAIN VOLUME KNOB [SR1020]
031B	4822 413 41823	MAIN VOLUME KNOB [SR1010]
032B	4822 413 31768	TONE KNOB [SR1020]
032B	4822 413 31775	TONE KNOB [SR1010]
033B	4822 413 41819	BALANCE KNOB [SR1020]
033B	4822 413 41822	BALANCE KNOB [SR1010]
041B	4822 502 21379	DOOR SPECIAL SCREW [SR1020]
042B	4822 256 92093	FL HOLDER
007C	4822 404 21283	LEVER [SR1020]
008C	4822 361 21687	MOTOR ASSY [SR1020]
012C	4822 528 40363	PULLEY [SR1020]
013C	4822 358 31264	BELT [SR1020]
014C	4822 522 33388	GEAR [SR1020]
015C	4822 492 33411	SPRING [SR1020]
016C	4822 271 30768	MINI SWITCH [SR1020]
017C	4822 462 71954	STOPPER, WASHER [SR1020]
018C	4822 502 21381	P.H.M. SCREW, (M1.7X2) [SR1020]
002D	4822 426 30156	SIDE PANEL (R) [SR1020]
002D	4822 443 41304	SIDE PANEL (R) [SR1010]
003D	4822 426 30157	SIDE PANEL (L) [SR1020]
003D	4822 443 41305	SIDE PANEL (L) [SR1010]
005D	4822 532 12253	BUSHING, SIDE (R) [SR1020]
005D	4822 532 21483	BUSHING, SIDE (R) [SR1010]
006D	4822 281 50181	TOUCH CONTACTOR [SR1020]
008D	4822 532 12254	BUSHING, SIDE (L) [SR1020]
008D	4822 532 21484	BUSHING, SIDE (L) [SR1010]
005G	4822 462 42064	LEG, FRONT [SR1020]
005G	4822 462 42063	LEG, FRONT [SR1010]
006G	4822 462 42065	LEG, REAR [SR1020]
006G	4822 462 42051	LEG, REAR [SR1010]
010G	4822 502 12511	B.T.SCREW(W/W), 3X8
027G	4822 410 60343	MAIN POWER BUTTON
902G	4822 532 60948	BUSHING, AC CORD
911G	4822 502 13636	PH.TAP.SCREW, RCA PIN JACK
912G	4822 502 13636	PH.TAP.SCREW, VOLTAGE SELECTOR [/1A/1B]
913G	4822 502 13636	PH.TAP.SCREW, AC OUTLET [/1A/1B]
917G	4822 502 13636	PH.TAP.SCREW, REAR PANEL
003L	4822 466 62412	POWER TR SHEET
004L	4822 502 13851	B.T.SCREW(W/W), POWER TR
ΔL001	4822 146 21753	POWER TRANSF., 110/220V [/1A/1B]
ΔL001	4822 146 21752	POWER TRANSF., 230/240V [/2A/2B]
001T	4822 736 21835	PACKING USER MANUAL
Z001	4822 218 10522	UNIT K, REMOTE COMMANDER
Z003	4822 157 63083	LOOP ANTENNA
Z004	4822 303 50079	EXT.ANTENNA
Z006	4822 265 10092	AC CONVERSION PLUG [/1A/1B]

5. USE OF SERVICE HOLE

- (1) If the use of the service hole is required, remove the cover by cutting 10 bridges (A) using a tool such as a pair of cutter.
- (2) During this work, be careful of the sharp edges at the cut positions.
- (3) After using the service hole, rotate the cover and fix it using screws [3 x 6 (M)].

Power ON	L ch	R ch
30 sec. ~ 1 min.	3.0 mV	2.5 mV
1 min. ~ 2 min.	4.5 mV	3.5 mV
2 min. ~ 3min.	6.0 mV	4.5 mV
More than 10 min.	7.0 mV	7.0 mV

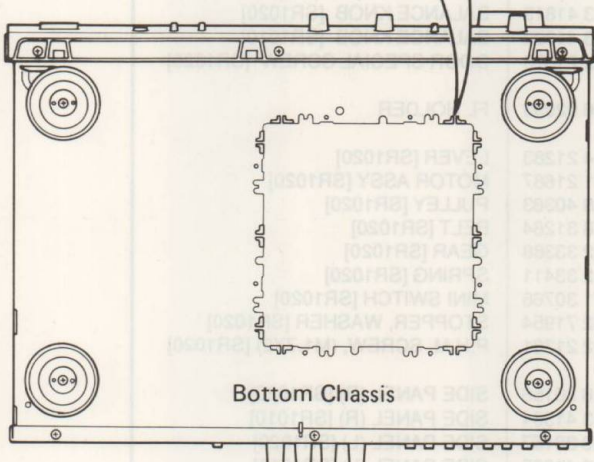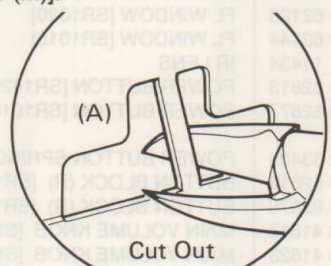

This illustration is intended to make the procedure above easier to understand. Therefore, the view of the unit may be different from the illustration.

6. IDLING CURRENT ADJUSTMENT

- (1) Before switching the power ON, set the Master Volume control to the minimum position and the Balance and Tone controls to the center positions. Then, rotate the semi-fixed resistors R719 (L CH) and R720 (R CH) on the PC board PV04 center positions.
- (2) Connect a digital voltmeter, set for the DC voltage input to the pertinent test points (the marked ones of R737-R738) on the PC board PV04.
- (3) After the completion of the above setup. Switch the power ON and adjust the semi-fixed resistors R719 (L CH) and R720 (R CH) on the PC board PV04 according to the reading of the digital voltmeter. The setting values are 7 mV (19 mA) of the both channels.

Note :

When you proceed to this adjustment after having serviced the unit, operate the unit with a non-signal condition for about 15 minutes after turning its power ON, then adjust to 7 mV.

If you should proceed to the adjustment in less than 15 minutes after turning the power ON, refer to the following table for the value to be adjusted.

7. SERVICE PROGRAM

7-1. T.R. POINT ME (tracking point memory) mode.
From power OFF (stand-by mode), when the STANDBY switch is pressed ON while pressing the MEMO and DOWN keys simultaneously, the T.R POINT ME mode is called. Frequencies to be memorized are as follows.

		P1	P2	P3	P4	P5	P6	P7
FM [MHz]	EUROPE	90	98	106	-			
	USA	90	98	106	-			
	JAPAN	78	83	88	-			
AM [KHz]	9KHz without LW					603	999	1404
	9KHz with LW					603	999	1404
	10 KHz					600	1000	1400

		P8	P9	P10	P11	P12~P30
FM [MHz]	EUROPE					
	USA					
	JAPAN					
AM [KHz]	9KHz without LW	-	-	-	-	-
	9KHz with LW	173	209	272	152	531
	10 KHz	-	-	-	-	-

- : Low end frequency of the FM or AM (MW) band.

7-2. FL segment check mode.

From power OFF (stand-by mode), when the STANDBY switch is pressed ON while pressing the UP and MEMO keys simultaneously, the FL segment check mode is called.

- When the test mode is entered, microprocessor's MUTE OUT becomes "HIGH" to apply muting to the unit itself. No change occurs in any setting.
- All segments are alight for 5 seconds.
- The segment check mode is canceled automatically.
- If any key is pressed while all segments are lighted, the segment check mode will be canceled and the operation according to the pressed key will occur.

8. TUNER ALIGNMENT PROCEDURES

- Set to T.R point ME mode of the service program. (P2) to (P10) in the Digital Readout Frequency Setting column shows preset numbers for the above mode.
- Before alignment, connect a dummy resistor of 47 kohms to the tuner output terminal.
- MODE switch is built in the remote commander.

8-1. FM Alignment Procedures

(Band switch at "FM" position and MODE switch at "MONO" position)

FM RF Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Digital Readout Frequency Setting	Adjust
1	FM signal generator to FM antenna terminal. Adjust the RF signal output so that slight noise occurs at the upper and lower sides of the output waveform.	98.0 MHz	AC VTVM to L-or R-channel Tape out (JV03)	98.0 MHz (P2)	Front end (A101) IFT for maximum output and minimum distortion.
2	FM signal generator 500 μ V output to FM antenna terminal (75-ohm).	98.0 MHz	Distortion meter to L-or R-channel Tape out (JV03)	98.0 MHz (P2)	L201 core for minimum distortion.

FM IF Alignment

(Band switch at "FM" position and MODE switch at "AUTO STEREO" position)

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Digital Readout Frequency Setting	Adjust
1	FM signal generator 500 μ V output modulated by MPX signal generator to FM antenna terminal (75-ohm).	Stereo L-channel (1.000 Hz)	VTVM to L-channel Tape out (JV03 L-channel)	98.0 MHz (P2)	Front end (A101) IFT for minimum distortion.
2	Modulation level: IHF 67.5 kHz +9% pilot dev. DIN 40 kHz +8% pilot dev.	Stereo R-channel (1.000 Hz)	VTVM to R-channel Tape out (JV03 R-channel)		

Muting Level Alignment

(Band switch at "FM" position and MODE switch at "AUTO STEREO" position)

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Digital Readout Frequency Setting	Adjust
1	FM signal generator 6.3 μ V output to FM antenna terminal (75-ohm)	98.0 MHz	AC VTVM to L-or R- channel Tape out (JV03)	98.0 MHz (P2)	R212 to a point at which output appears.

Multiplex Alignment

(Band switch at "FM" position and MODE switch at "AUTO STEREO" position)

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Digital Readout Frequency Setting	Adjust
1	FM signal generator 500 μ V output modulated by MPX signal generator to FM antenna terminal (75-ohm) Modulation level : IHF 67.5 kHz +9% pilot dev. DIN 40 kHz +8% pilot dev.	Stereo L-channel (1.000 Hz)	VTVM to R-channel Tape out (JV03 R-channel)	98.0 MHz (P2)	R211 so that channel separation is identical between both channels.
2		Stereo R-channel (1.000 Hz)	VTVM to L-channel Tape out (JV03 L-channel)		
3	Repeat steps 1 and 2				

8-2. MW (AM) / LW Alignment Procedures

(Band switch at "MW" or "AM" position)

AM IF Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Digital Readout Frequency Setting	Adjust
1	Sweep generator to AM antenna terminal.	450 kHz	AC VTVM to L-or R-channel Tape out (JV03)	—	LA06 for maximum and symmetrical waveform.

MW (AM) RF Alignment

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Digital Readout Frequency Setting	Adjust
1	AM signal generator to AM loop antenna in a test loop.	603 kHz (Europe, Japan) 600 kHz (USA)	VTVM to L-or R-channel Tape out (JV03)	603 kHz 600 kHz (P5)	LA01 for maximum output.
2		1404 kHz (Europe, Japan) 1400 kHz (USA)		1404 kHz 1400 kHz (P7)	CA01 for maximum output.
3	Repeat steps 1 and 2 until sensitivity is maximized.				


LW RF Alignment (Europe only)

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Digital Readout Frequency Setting	Adjust
1	AM signal generator to AM loop antenna in a test loop.	173 kHz	VTVM to L-or R-channel Tape out (JV03)	173 kHz (P8)	LA03 for maximum output.
2		272 kHz		272 kHz (P10)	CA08 for maximum output.
3	Repeat steps 1 and 2 until sensitivity is maximized.				

AM Auto Stop Alignment (Band switch at "MW" or "AM" position)

Step	Signal Source Connection	Signal Frequency	Indicator Connection	Digital Readout Frequency Setting	Adjust
1	RF generator to AM loop antenna in a test loop (500 μ V / m)	999 kHz (Europe, Japan) 1000 kHz (USA)	—	999 kHz 1000 kHz (P6)	RA11 so that the "TUNED" on the display tube lights.

9. ALIGNMENT POINTS AND TEST POINTS

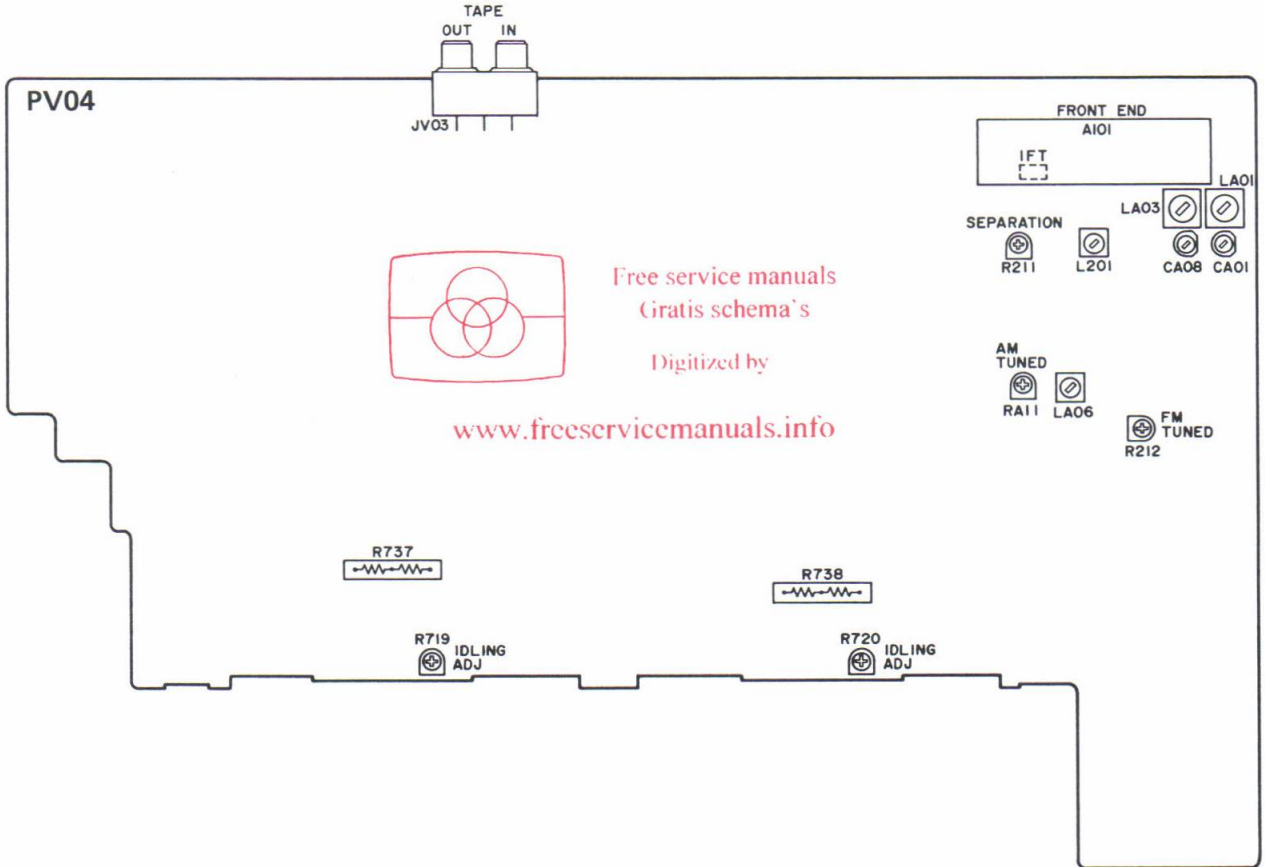


10. MICROPROCESSOR SPECIFICATIONS

Receiving Frequency Range, Channel Space, Reference Frequency and Intermediate Frequency


		Receiving Frequency	Channel Space	Reference Frequency	Intermediate Frequency
Europe	FM	87.5 ~ 108.0 MHz	50 kHz	25 kHz	+10.7 MHz
	MW	531 ~ 1602 kHz	9 kHz	9 kHz	+450 kHz
	LW	152 ~ 282 kHz	1 kHz	1 kHz	+450 kHz
U.S.A.	FM	87.5 ~ 108.0 MHz	100 kHz	25 kHz	+10.7 MHz
	AM	520 ~ 1710 kHz	10 kHz	10 kHz	+450 kHz
Japan	FM	76.0 ~ 90.0 MHz	100 kHz	25 kHz	-10.7 MHz
	AM	531 ~ 1602 kHz	9 kHz	9 kHz	+450 kHz

Pin Connections (TMP47C1670AN)

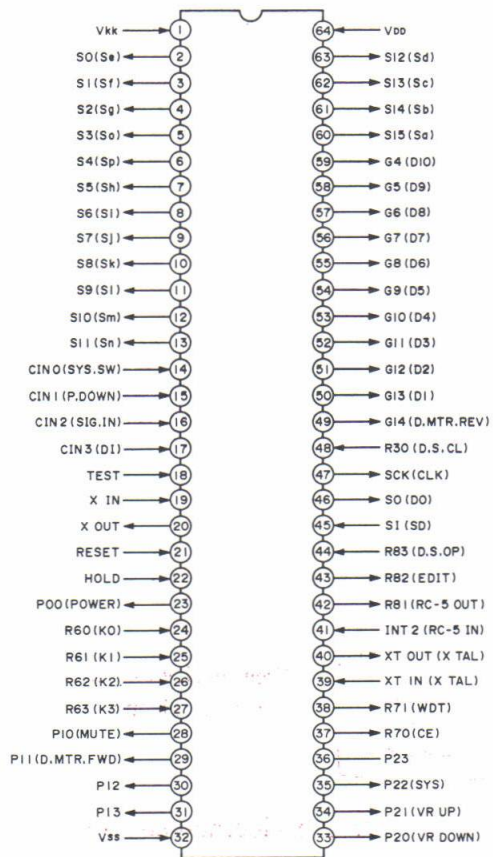



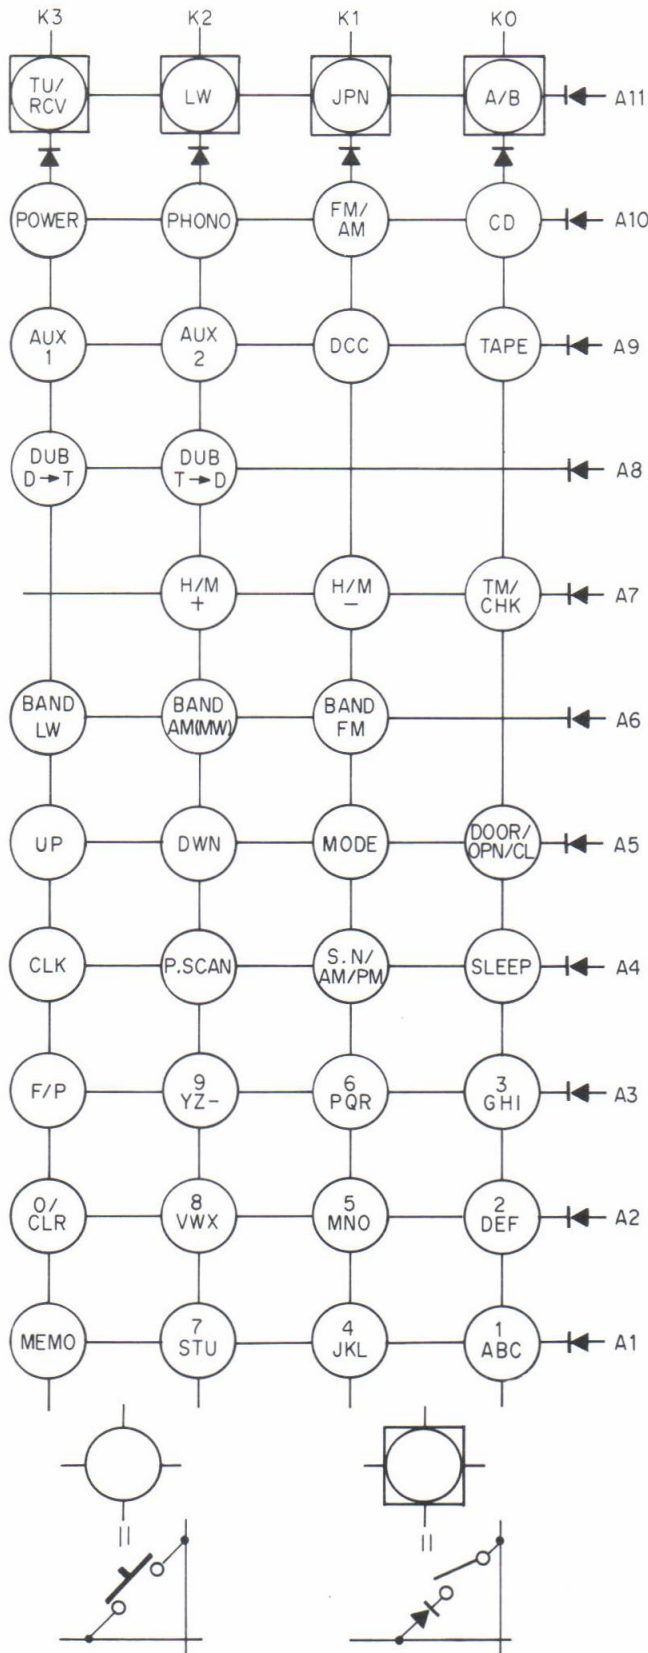

Pin Nbr.	Pin Name	I / O	Action	Function	Pin Nbr.	Pin Name	I / O	Action	Function
1	Vkk	-	-	-35 V (FL Display Drive)	33	P20 (VR DOWN)	O	H	Motor Driven Volume (Down)
2	S0 (Se)	O	H	FL e - segment	34	P21 (VR UP)	O	H	Motor Driven Volume (Up)
3	S1 (Sf)	O	H	FL f - segment / key switch (A11)	35	P22 (SYS)	O	H	System Switch
4	S2 (Sg)	O	H	FL g - segment / key switch (A10)	36	P23	-	-	Not Used
5	S3 (So)	O	H	FL o - segment / key switch (A9)	37	R70 (CE)	O	H	Analog Switch / PLL Chip Enable
6	S4 (Sp)	O	H	FL p - segment / key switch (A8)	38	R71 (WDT)	O	L	Watch - Dog Timer
7	S5 (Sh)	O	H	FL h - segment / key switch (A7)	39	XT IN (X TAL)	I	-	Clock (32.768 kHz)
8	S6 (Si)	O	H	FL i - segment / key switch (A6)	40	XT OUT (X TAL)	O	-	
9	S7 (Sj)	O	H	FL j - segment / key switch (A5)	41	INT2 (RC-IN)	I	H	Remote Control (RC-5) Input
10	S8 (Sk)	O	H	FL k - segment / key switch (A4)	42	R81 (RC-OUT)	O	H	Remote Control (RC-5) Output
11	S9 (Sl)	O	H	FL l - segment / key switch (A3)	43	R82 (EDIT)	O	L	Edit
12	S10 (Sm)	O	H	FL m - segment / key switch (A2)	44	R83 (D. S. OP)	I	L	Door Switch Open
13	S11 (Sn)	O	H	FL n - segment / key switch (A1)	45	SI (SD)	I	L	Station Detector Input
14	CIN0 (SYS. SW)	I	H	System Switch	46	SO (DO)	O	H	Serial Data Output
15	CIN1 (P. DOWN)	I	L	Power down signal Input	47	SCK (CLK)	O	H	Serial Clock Output
16	CIN2 (SIG. IN)	I	-	Signal Strength Indicator	48	R30 (D. S. CL)	I	L	Door Switch Close
17	CIN3 (D1)	I	H	Serial Data Input	49	G14 (D.MTR. REV)	O	H	Door Motor (Reverse)
18	TEST	-	-	Not Used	50	G13 (D1)	O	H	FL Display D1 Digit
19	X IN	I	-	Clock (4.19 MHz)	51	G12 (D2)	O	H	FL Display D2 Digit
20	X OUT	O	-						
21	RESET	I	L	Reset and Watch - Dog Timer	52	G11 (D3)	O	H	FL Display D3 Digit
22	HOLD	I	L	Hold Mode	53	G10 (D4)	O	H	FL Display D4 Digit
23	P00 (POWER)	O	H	Power Relay Drive	54	G9 (D5)	O	H	FL Display D5 Digit
24	R60 (K0)	I	H	Key Switch	55	G8 (D6)	O	H	FL Display D6 Digit
25	R61 (K1)	I	H						
26	R62 (K2)	I	H						
27	R63 (K3)	I	H						
28	P10 (MUTE)	O	H	Muting	56	G7 (D7)	O	H	FL Display D7 Digit
29	P11 (D.MTR. FWD)	O	H	Door Motor (Forward)	57	G6 (D8)	O	H	FL Display D8 Digit
30	P12	O	-	Not Used	58	G5 (D9)	O	H	FL Display D9 Digit
31	P13	O	-						
32	Vss	-	-	GND	59	G4 (D10)	O	H	FL Display D10 Digit
					60	S15 (Sa)	O	H	FL Display A - segment
					61	S14 (Sb)	O	H	FL Display B - segment
					62	S13 (Sc)	O	H	FL Display C - segment
					63	S12 (Sd)	O	H	FL Display D - segment
					64	Vdd	-	-	+5.5 V

Key Matrix

































Description of Keys

1. Diode Switches (for initial settings)

-  : Used to switch the tuner frequency band. When pressed ON, the AM band unconditionally becomes MW and LW. The FL display shows MW and LW.
-  : Used to switch the tuner frequency band. When pressed ON, the band is unconditionally switched to the Japan version.
-  : Two types of receivers having different features (Model A / Model B) can be selected. Setting this switch to ON selects Model B, which is capable of AUX-2, DCC and dubbing key operations.
-  : This is the tuner / receiver initial setting switch. Setting it ON selects the receiver.

2. Momentary Switches and Look Switches (switches are momentary unless indicated otherwise)

-  : Used to set the station name preset mode and for entering the AM / PM indicator in clock mode. Operation as the station name key is valid only in tuner mode.
-  : Used to set the unit to clock mode. When this key is pressed, the FL display switches to the clock display and stays in clock mode until the current general operation is completed.
-  : Used to set the unit to timer mode and to check the program contents after the timer is set. If this key is pressed after a timer program has been set, the program contents are shown on the FL display in the specified sequence. If no timer program is set, the unit enters timer mode allowing the user to select the timer program or to set the timer to execute or standby mode.
-  : This is the door open / close key. Each press of this key opens or closes the door alternately.
-  : Used for entering numbers and alphabetic characters when recalling preset stations and entering station names. A space can be inserted by entering the -symbol with the  key. Although these keys are normally used as numeric keys, when the S.N. / AM / PM (Station Name / AM / PM) key is pressed to set the unit to station name preset mode, they are used for entering alphabetic characters. One press enters the first alphabetic from the left (e.g., "A" when the ABC key is pressed), and subsequent pressing allows the user to select one of the key's four characters in sequence (e.g., A→B→C→1→A).

-  : Used for entering "O" and also as a CLEAR key in various modes.
-  : This is the sleep timer mode key, used for operations such as turning the sleep timer mode ON / OFF.
-  : This key sets the tuner band to FM. When this key is pressed, the tuner input and the FM band are selected.
-  : This key sets the tuner band to AM (MW). When this key is pressed, the tuner input and the AM (MW) band are selected.
-  : This key is used to set the tuner band. This key is valid only when the "LW" initial setting key is ON. The FL display indicates "FM / AM" with a 2-band tuner or receiver and "FM, MW / LW" with a 3-band tuner or receiver. Set to LW with this key.
-  : This key is used in combination with the CLOCK key to set the figures of hour and minute. This key is used in the entry of time when setting the clock or timer.
-  : Used for automatically scanning the tuner's preset channels. When this key is pressed, the FL display's "PRESET SCAN" segments blink and preset scanning can be started by pressing the UP or DOWN key.
-  : Used to enter a memory mode such as preset memory, timer set or station name preset mode, or to complete the memory operation.
-  : Turns the power ON / OFF. This is a non-lock switch which turns the power ON and OFF alternately. When turned OFF, all output ports except for specified ports are become Low-level, but specified input ports and the remote control input port remain accessible.
-  : This is the Frequency / Preset key used for switching the FL display mode between the frequency display and preset display. The initial setting is the frequency display mode. The frequency and preset display modes are switched in cyclic sequence. The UP / DOWN keys and other keys function differently depending on the display mode.
-   : These are dubbing switch keys which control the input selector data. These keys are valid only when Model B is selected with the  key.
-        : These are input selector keys. Each key outputs the corresponding serial data. The AUX-2 and DCC keys are valid only when Model B is selected with the  key.
-  : Switches the FM mode between stereo and monaural. The initial setting is the AUTO STEREO. Switching is carried out by serial data sent to the PLL. Switch operation is cyclic. In stereo mode, "AUTO" lights in the FL display.
-   : Used for increasing / decreasing the tuner frequency or preset channel number. UP adds and DOWN subtracts. Operation differs depending on the mode set by the F / P key. In frequency mode, the keys increase / decrease the frequency, and in preset mode, the keys increase / decrease the preset channel number. In station name preset mode, timer mode and clock set mode, the keys function as cursor keys for selecting the character input position.

11. ELECTRICAL PARTS LIST

ASSIGNMENT OF COMMON PARTS CODES.

RESISTOR

R * * * : (1) GD05 xxx 140, Carbon film fixed resistor, $\pm 5\%$ 1/4W
R * * * : (2) GD05 xxx 160, Carbon film fixed resistor, $\pm 5\%$ 1/6W

① — Resistance value

Examples ;

① Resistance value

0.1 Ω 001 10 Ω 100 1 k Ω 102 100 k Ω 104
 0.5 Ω 005 18 Ω 180 2.7 k Ω 272 680 k Ω 684
 1 Ω 010 100 Ω 101 10 k Ω 103 1 M Ω 105
 6.8 Ω 068 390 Ω 391 22 k Ω 223 4.7 M Ω 475

(Note) Please distinguish 1/4W from 1/6W by the shape of parts used actually.

C * * * : CERAMIC CAP.

(1) DD1x xxx 370,

Ceramic capacitor

Disc type

Temp. coeff. P350 ~ N1000, 50V

①

②

Capacity value

Tolerance

Examples ;

① Tolerance (Capacity deviation)

$\pm 0.25\text{pF}$ 0

$\pm 0.5\text{pF}$ 1

$\pm 5\%$ 5

* Tolerance of COMMON PARTS handled here are as follows :

0.5pF ~ 5pF $\pm 0.25\text{pF}$

6pF ~ 10pF $\pm 0.5\text{pF}$

12pF ~ 560pF $\pm 5\%$

② Capacity value

0.5 pF005 3 pF030 100 pF101

1 pF010 10 pF100 220 pF221

1.5 pF015 47 pF470 560 pF561

C * * * : CERAMIC CAP.

(1) DK16 xxx 300,

High dielectric constant ceramic

capacitor

Disc type

Temp. chara. 2B4, 50V

①

Capacity value

Examples ;

② Capacity value

100 pF101 1000 pF102 10000 pF103

470 pF471 2200 pF222

C * * * : ELECTROLY CAP. (Z), FILM CAP. (Z)

(1) EA xxx xxx 10,

Electrolytic capacitor

One-way lead type,

Tolerance $\pm 20\%$

①

②

Working voltage

Capacity value

Examples ;

① Capacity value

0.1 μF 104 4.7 μF 475 100 μF 107

0.33 μF 334 10 μF 106 330 μF 337

1 μF 105 22 μF 226 1100 μF 118

2200 μF 228

② Working voltage

6.3 V006 25 V025

10 V010 35 V035

16 V016 50 V050

(2) DF15 xxx 350,

Plastic film capacitor

One-way type, Mylar $\pm 5\%$ 50V

①

Capacity value

Examples ;

① Capacity value

0.001 μF (1000pF)102 0.1 μF 104

0.0018 μF 182 0.56 μF 564

0.01 μF 103 1 μF 105

0.015 μF 153

NOTE : The above CODES (**R * * ***, **R * * ***, **C * * ***, **C * * *** and **C * * ***) are omitted on the schematic diagram in some case.

On the occasion, be confirmed common parts on the parts list.

REF. DESIG.	PART NO.	DESCRIPTION
		PG04-MOTOR VOLUME AND TONE CONTROL CIRCUIT BOARD
		PG04-CAPACITORS
CE03	4822 124 22571	ELECT 10 μF 50V
CE04	4822 124 22571	ELECT 10 μF 50V
CE09	4822 124 41539	ELECT 47 μF 16V
CE10	4822 124 41539	ELECT 47 μF 16V
CE15	4822 124 90358	ELECT 22 μF 16V
CE16	4822 124 90358	ELECT 22 μF 16V
CE17	4822 124 90354	ELECT 100 μF 16V
CE18	4822 124 90354	ELECT 100 μF 16V
CG01	4822 122 30103	CERAMIC 0.022 μF +80%-20% 50V
CG03	4822 124 22274	ELECT 4.7 μF 50V
CG04	4822 124 22274	ELECT 4.7 μF 50V
C * * *		PG04-CAPACITORS (COMMON) HIGH DIELECTRIC CONSTANT CERAMIC CAPACITOR 50V: CE01, CE02
C * * *		PLASTIC FILM CAPACITOR ONE-WAY TYPE, MYLAR $\pm 5\%$ 50V: CE05~CE08, CE11~CE14
RE01	4822 052 10151	PG04-RESISTORS 150 Ω $\pm 5\%$ 1/6W
RE02	4822 052 10151	150 Ω $\pm 5\%$ 1/6W
RE19	4822 101 30834	10K Ω (E) VARIABLE
RE20	4822 101 30834	10K Ω (E) VARIABLE
RG01	4822 101 30835	100K Ω (B) X2/100K(W) VARIABLE
R * * *		PG04-RESISTORS (COMMON) CARBON FILM FIXED RESISTOR, $\pm 5\%$ 1/6W: RE03~RE18, RE21, RE22, RG03, RG04
QE01	4822 209 73064	PG04-SEMICONDUCTORS IC NJM2068DD
		PP04-POWER SW CIRCUIT BOARD
		PP04-CAPACITORS
Δ GP01	4822 122 33276	CERAMIC 0.01 μF $\pm 1\%$ 400V
GP02	4822 122 33276	CERAMIC 0.01 μF $\pm 1\%$ 400V
RP01	4822 053 11821	PP04-RESISTORS 820 Ω $\pm 5\%$ 2W
R * * *		PP04-RESISTORS (COMMON) CARBON FILM FIXED RESISTOR, $\pm 5\%$ 1/6W: RP02
DP01	4822 130 32508	PP04-SEMICONDUCTORS DIODE RL103E/DSF10C
QP01	4822 130 43312	TRANSISTOR, 2SC3312 (R,S)
Δ F001	4822 070 31252	PP04-MISCELLANEOUS FUSE 1.25A 250V
Δ F002	4822 070 31252	FUSE 1.25A 250V [1A/1B]
Δ F003	4822 253 40166	FUSE 2.5A 250V [2A/2B]
Δ JP21	4822 267 31686	JACK, AC OUTLET 1P [1A/1B]
Δ JP21	4822 267 31687	JACK, AC OUTLET [2A/2B]
LP01	4822 280 20534	RELAY
Δ SP01	4822 276 12924	PUSH SWITCH, POWER

REF. DESIG.	PART NO.	DESCRIPTION
		PP54-VOLTAGE SELECTOR CIRCUIT BOARD [1A/1B ONLY]
ΔJ091	4822 277 21465	PP54-MISCELLANEOUS SLIDE SWITCH, VOLT SELECTOR [1A/1B]
		PT04-HEADPHONE CIRCUIT BOARD
C***		PT04-CAPACITORS (COMMON) HIGH DIELECTRIC CONSTANT CERAMIC CAPACITOR 50V: CT01, CT02
JT01	4822 267 31685	PT04-MISCELLANEOUS JACK, HEADPHONE
		PU04-μ-COM CIRCUIT BOARD
		PU04-CAPACITORS
CU01	4822 126 10935	ELECT 100μF 6.3V
CU02	4822 124 23295	BIG ELECT 0.022F
CU03	4822 126 10935	ELECT 100μF 6.3V
CU04	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
CU05	4822 126 12867	ELECT 1000μF 6.3V
CU06	4822 122 31823	CERAMIC 15PF ± 5% 50V
CU07	4822 122 31823	CERAMIC 15PF ± 5% 50V
CU08	4822 124 41604	ELECT 0.1μF 50V
CU12	4822 122 40617	CERAMIC 0.1μF +80%-20% 50V
CU51	4822 124 23056	ELECT 47μF 16V [SR1020]
CU53	4822 124 23057	ELECT 4.7μF 50V [SR1020]
C***		PU04-CAPACITORS (COMMON) PLASTIC FILM CAPACITOR ONE WAY TYPE, MYLAR ± 5% 50V: CU10
C***		HIGH DIELECTRIC CONSTANT CERAMIC CAPACITOR 50V: CU52
		PU04-RESISTORS
GU01	4822 111 92152	10KΩ X6 RESISTOR COMPO.
GU02	4822 111 92152	10KΩ X6 RESISTOR COMPO.
GU03	4822 111 91837	100KΩ X4 RESISTOR COMPO.
GU04	4822 111 91837	100KΩ X4 RESISTOR COMPO.
RU03	4822 050 23308	3.3MΩ ± 5% 1/6W
RU05	4822 050 23308	3.3MΩ ± 5% 1/6W
RU07	4822 050 23308	3.3MΩ ± 5% 1/6W
R***		PU04-RESISTORS (COMMON) CARBON FILM FIXED RESISTOR, ± 5% 1/6W: RU01, RU02, RU04, RU06, RU08~RU11, RU13~RU15, RU51~RU57, RU60, RU61
		PU04-SEMICONDUCTORS
DU09 ?	4822 130 33305	DIODE 1SS176,MA165,1SS254
DU22	4822 130 33305	DIODE 1SS176,MA165,1SS254
DU24	4822 130 33305	DIODE 1SS176,MA165,1SS254
DU25	4822 130 33305	DIODE 1SS176,MA165,1SS254
DU26	4822 130 33305	DIODE 1SS176,MA165,1SS254
DU51 ?	4822 130 33305	DIODE 1SS176,MA165,1SS254 [SR10120]
QU01	4822 209 32644	MICROPROCESSOR TMP47C1670AN
QU02	4822 130 42715	TRANSISTOR, 2SA608SP, 2SA1048, 2SA1309, 2SA933S

REF. DESIG.	PART NO.	DESCRIPTION
QU03	4822 130 61892	TRANSISTOR, 2SD2144S (U, V)
QU04	4822 130 61189	DIGITAL TRANSISTOR, DTC114TS
QU05	4822 130 61187	DIGITAL TRANSISTOR, DTA144TS
QU06	4822 130 42682	DIGITAL TRANSISTOR, DTA144ES/UN4113
QU07	4822 130 42682	DIGITAL TRANSISTOR, DTA144ES/UN4113
QU08 ?	4822 130 42594	DIGITAL TRANSISTOR, DTC144ES/UN4213
QU10	4822 130 42682	DIGITAL TRANSISTOR, DTA144ES/UN4113
QU11	4822 130 42682	DIGITAL TRANSISTOR, DTA144ES/UN4113
QU51	4822 209 63468	IC NJM082D [SR1020]
QU52	4822 130 42715	TRANSISTOR, 2SA608SP, 2SA1048, 2SA1309, 2SA933S [SR1020]
QU53	4822 130 60588	DIGITAL TRANSISTOR, DTC114ES/UN4211 [SR1020]
		PU04-MISCELLANEOUS CONNECTOR, 23P
JU01	4822 267 60274	
XU01	4822 242 72194	CERAMIC VIBRATOR, 4.19MHZ
XU02	4822 242 72236	CRYSTAL 32.768KHZ
		PU54-DISPLAY AND SWITCH CIRCUIT BOARD
		PU54-CAPACITORS
CU09	4822 124 80087	ELECT 220μF 6.3V
CU11	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
		PU54-SEMICONDUCTORS
DU01 ?	4822 130 33305	DIODE 1SS176,MA165,1SS254
DU08		
QU12	4822 130 83519	PHOTO UNIT, RPM-670CBR
R***		PU54-RESISTORS (COMMON) CARBON FILM FIXED RESISTOR, ± 5% 1/6W: RU16
		PU54-MISCELLANEOUS
SU01 ?	4822 276 20508	PUSH SWITCH
SU18		
VU01	4822 130 91286	DISPLAY UNIT
		PV04-MAIN FUNCTION CIRCUIT BOARD
		PV04-CAPACITORS
CA01	4822 125 60185	20PF TRIMMING
CA02	4822 122 40306	CERAMIC 0.047μF +80%-20% 50V
CA03	4822 126 11553	CERAMIC 15PF ± 5% 50V
CA04	5322 121 54128	FILM 390 PF ± 5% 50V
CA05	4822 126 10513	CERAMIC 47PF ± 5% 50V
CA06	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
CA07	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
CA08	4822 125 60185	20PF TRIMMING
CA09	4822 126 11553	CERAMIC 15PF ± 5% 50V
CA11	4822 122 31349	CERAMIC 68PF ± 5% 50V
CA13	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
CA18	4822 124 22571	ELECT 10μF 50V
CM01	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V [SR1020]
CM02	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V [SR1020]

REF. DESIG.	PART NO.	DESCRIPTION	REF. DESIG.	PART NO.	DESCRIPTION
CM04	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	C717	?	
CM05	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V [SR1020]	?	5322 122 32265	CERAMIC 100PF ± 5% 500V
CM06	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V [SR1020]	C725	4822 124 90354	ELECT 100μF 16V
CM07	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	C726	4822 124 22571	ELECT 10μF 50V
CM08	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	C727	4822 124 90355	ELECT 100μF 50V
CN01	4822 124 22571	ELECT 10μF 50V	C728	4822 124 90355	ELECT 100μF 50V
CN02	4822 124 90357	ELECT 2.2μF 50V	C729	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
CN03	4822 124 41539	ELECT 47μF 16V	C730	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
CN04	4822 124 41539	ELECT 47μF 16V	C801	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
CN05	4822 122 40617	CERAMIC 0.1μF +80%-20% 50V	C802	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
CV15	?		C803	4822 124 90356	ELECT 1000μF 35V
CV20	4822 122 40617	CERAMIC 0.1μF +80%-20% 50V	C804	4822 124 41541	ELECT 470μF 35V
C201	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	C805	4822 124 22571	ELECT 10μF 50V
C202	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	C806	4822 124 22274	ELECT 4.7μF 50V
C203	4822 122 40306	CERAMIC 0.047μF +80%-20% 50V	C807	4822 124 22571	ELECT 10μF 50V
C204	4822 124 22571	ELECT 10μF 50V	C808	4822 124 41539	ELECT 47μF 16V
C205	4822 122 40306	CERAMIC 0.047μF +80%-20% 50V	C809	4822 124 22571	ELECT 10μF 50V
C206	4822 124 22696	ELECT 3.3μF 50V	△C811	4822 126 12453	CERAMIC 0.01μF +80%-20% 500V
C207	4822 124 90354	ELECT 100μF 16V	△C812	4822 126 12866	ELECT 4700μF 50V
C208	4822 122 40306	CERAMIC 0.047μF +80%-20% 50V	△C813	4822 126 12866	ELECT 4700μF 50V
C209	4822 124 41543	ELECT 1μF 50V	C814	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
C210	5322 122 32072	CERAMIC 33PF ± 5% 50V	C815	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V
C211	4822 124 41543	ELECT 1μF 50V	PV04-CAPACITORS (COMMON)		
C212	4822 124 90351	ELECT 0.1 μF 50V	HIGH DIELECTRIC CONSTANT		
C213	4822 124 22273	ELECT 0.47μF 50V	CERAMIC CAPACITOR 50V:		
C214	4822 124 22571	ELECT 10μF 50V	CA12, CV01~CV14, C401,C402, C407, C408, C419, C420, C423, C424, C703, C704, C709, C710		
C215	4822 122 40306	CERAMIC 0.047μF +80%-20% 50V	PLASTIC FILM CAPACITOR		
C216	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	ONE-WAY TYPE, MYLAR ± 5% 50V:		
C217	5322 122 32143	CERAMIC 22PF ± 5% 50V	CA15~CA17, C303, C304, C309, C310, C409~C412, C721~C724		
C218	4822 124 90354	ELECT 100μF 16V	PV04-RESISTORS		
C301	4822 124 22696	ELECT 3.3μF 50V	RA11	4822 100 11351	10KΩ TRIMMING
C302	4822 124 22696	ELECT 3.3μF 50V	RN19	4822 053 11271	270Ω ± 5% 2W
C305	4822 124 22696	ELECT 3.3μF 50V	RN20	4822 053 11222	2.2KΩ ± 5% 2W
C306	4822 124 22696	ELECT 3.3μF 50V	RN22	4822 053 11271	270Ω ± 5% 2W
C307	4822 124 90354	ELECT 100μF 16V	R103	4822 052 10109	10 Ω ± 5% 1/6W
C308	4822 124 90354	ELECT 100μF 16V	R207	4822 052 10101	100Ω ± 5% 1/6W
C403	4822 124 22274	ELECT 4.7μF 50V	R211	4822 100 20681	2.2KΩ TRIMMING
C404	4822 124 22274	ELECT 4.7μF 50V	R212	4822 100 11352	22KΩ TRIMMING
C413	4822 124 41543	ELECT 1μF 50V	R313	4822 052 10151	150Ω ± 5% 1/6W
C414	4822 124 41543	ELECT 1μF 50V	R314	4822 052 10151	150Ω ± 5% 1/6W
C415	?		R411	4822 052 10151	150Ω ± 5% 1/6W
C418	4822 124 41539	ELECT 47μF 16V	R412	4822 052 10151	150Ω ± 5% 1/6W
C421	4822 122 40617	CERAMIC 0.1μF +80 -20% 50V	R512	4822 052 10221	220Ω ± 5% 1/6W
C501	4822 126 10513	CERAMIC 47PF ±5% 50V	△R713	4822 050 26809	68Ω ± 5% 1/6W
C502	4822 126 10513	CERAMIC 47PF ±5% 50V	△R714	4822 050 26809	68Ω ± 5% 1/6W
C503	4822 124 90354	ELECT 100μF 16V	R719	4822 100 11386	1KΩ TRIMMING
C504	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	R720	4822 100 11386	1KΩ TRIMMING
C505	4822 124 41543	ELECT 1μF 50V	△R725	?	4822 050 26809
C506	4822 124 90351	ELECT 0.1 μF 50V	?	4822 050 26809	68Ω ± 5% 1/6W
C507	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	△R730	?	4822 053 10221
C508	4822 124 90354	ELECT 100μF 16V	△R731	4822 053 10221	220Ω ± 5% 1W
C509	5322 122 32265	CERAMIC 100PF ± 5% SL 500V	△R732	4822 053 10221	220Ω ± 5% 1W
C510	5322 122 32265	CERAMIC 100PF ± 5% SL 500V	△R733	?	4822 052 10109
C511	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	?	4822 052 10109	10Ω ± 5% 1/6W
C512	4822 122 30043	CERAMIC 0.01μF +80%-20% 50V	△R736	?	4822 052 10109
C701	4822 124 22274	ELECT 4.7μF 50V	△R737	4822 116 82049	0.18 Ω X2 3W
C702	4822 124 22274	ELECT 4.7μF 50V	△R738	4822 116 82049	0.18 Ω X2 3W
C705	5322 122 32072	CERAMIC 33PF ± 5% 50V	△R739	4822 050 26809	68Ω ± 5% 1/6W
C706	5322 122 32072	CERAMIC 33PF ± 5% 50V	△R740	4822 050 26809	68Ω ± 5% 1/6W
C707	4822 124 22571	ELECT 10μF 50V	△R743	4822 053 11109	10Ω ± 5% 2W
C708	4822 124 22571	ELECT 10μF 50V	△R744	4822 053 11109	10Ω ± 5% 2W
C711	4822 126 10797	CERAMIC 10PF 500V	△R745	4822 116 60263	3.3KΩ ± 5% 1W
C712	4822 126 10797	CERAMIC 10PF 500V	R747	4822 052 10221	220Ω ± 5% 1/6W
C713	4822 122 40103	CERAMIC 5PF ± 0.25PF 50V	R748	4822 052 10221	220Ω ± 5% 1/6W
C714	4822 122 40103	CERAMIC 5PF ± 0.25PF 50V	R751	4822 053 10331	330Ω ± 5% 1W

REF. DESIG.	PART NO.	DESCRIPTION
R752	4822 053 10331	330Ω ± 5% 1W
△R801	4822 117 10158	1Ω ± 5% 1/4W
△R802	4822 117 10158	1Ω ± 5% 1/4W
R808	4822 117 10002	2.2KΩ ± 5% 1/2W
R809	4822 053 10221	220Ω ± 5% 1W
R810	4822 053 11688	6.8Ω ± 5% 2W
R***		PV04-RESISTORS (COMMON) CARBON FILM FIXED RESISTOR, ± 5% 1/6W: RA01~RA04, RA06~RA09, RA10, RA12~RA15, RM01~RM04, RN01~RN18, RN21, RN31, RN32, RV01~RV34, R201~R206, R208~R210, R213~R216, R301, R302, R305~R312, R401~R410, R413, R414, R417, R418, R501~R504, R506~R511, R703~R712, R715~R718, R721~R724, R746, R804~R807, C731
		PV04-SEMICONDUCTORS
DA01	4822 125 50416	VARICAP SVC342-K
DA02	4822 130 33697	DIODE 1SS135
DA03	4822 125 50416	VARICAP SVC342-K
DA04	4822 130 33697	DIODE 1SS135
DA05	4822 130 33305	DIODE 1SS176,MA165,1SS254
DA06	4822 130 33305	DIODE 1SS176,MA165,1SS254
DM01	4822 130 82609	ZENER DIODE MTZJ2.0B [SR1020]
DM02	4822 130 33759	ZENER DIODE 4.7V
DN01	4822 130 80837	DIODE HSS81
DN02	4822 130 80837	DIODE HSS81
DN03	4822 130 32508	DIODE RL103E, DSF-10C
DN04	4822 130 32508	DIODE RL103E, DSF-10C
DN05	4822 130 33305	DIODE 1SS176,MA165,1SS254
D501	4822 130 80317	ZENER DIODE, 5.1V
D701	4822 130 80273	ZENER DIODE, 8.2V
D702	4822 130 80322	ZENER DIODE, 15V
D703		
∩	4822 130 33305	DIODE 1SS176,MA165,1SS254
D706		
△D801		
∩	4822 130 32508	DIODE RL103E/DSF10C
△D806		
D807	4822 130 80116	ZENER DIODE, 24V
D808	4822 130 33759	ZENER DIODE, 4.7V
△D809	4822 130 80091	ZENER DIODE, 12V
△D811	4822 130 31007	DIODE S4VB20
QA01	4822 130 42298	TRANSISTOR, 2SC536SP, 2SC2458, 2SC3311, 2SC1740S
QA02	4822 130 42298	TRANSISTOR, 2SC536SP, 2SC2458, 2SC3311, 2SC1740S
QA03	4822 130 61892	TRANSISTOR, 2SD2144S (U, V)
QA04	4822 130 42715	TRANSISTOR, 2SA608SP, 2SA1048, 2SA1309, 2SA933S
QA05	4822 130 42715	TRANSISTOR, 2SA608SP, 2SA1048, 2SA1309, 2SA933S
QM01	4822 209 30193	IC LB1641 [SR1020]
QM02	4822 209 30193	IC LB1641
QN01	4822 130 43233	TRANSISTOR, 2SC2240
QN02	4822 130 43233	TRANSISTOR, 2SC2240
QN03	4822 130 42951	TRANSISTOR, 2SA970
QN04	4822 209 83312	IC TA7317P
QN05	4822 130 42594	DIGITAL TRANSISTOR, DTC144ES/ UN4213
QV01	4822 209 72748	IC LC7821
QV02	4822 209 72748	IC LC7821

REF. DESIG.	PART NO.	DESCRIPTION
QV03	4822 130 60588	DIGITAL TRANSISTOR, DTC114ES/ UN4211
QV04	4822 130 60766	DIGITAL TRANSISTOR, DTA114ES/ UN4111
QV05	4822 130 43819	TRANSISTOR, 2SC2878 (A, -)
QV06	4822 130 43819	TRANSISTOR, 2SC2878 (A, -)
Q201	4822 209 31001	IC LA1851N
Q202	4822 130 62294	TRANSISTOR, 2SC1809S (P)
Q203	4822 130 42715	TRANSISTOR, 2SA608SP, 2SA1048, 2SA1309, 2SA933S
Q204	4822 130 60766	DIGITAL TRANSISTOR, DTA114ES/ UN4111
Q205	4822 126 90006	POSISTOR PTH59F04BH222TS
Q301	4822 209 83631	IC NJM4558D-D
Q401	4822 209 83631	IC NJM4558D-D
Q501	4822 209 30178	IC LC7218
Q502	4822 130 42121	F.E.T. 2SK30A (Y)
Q503	4822 130 42298	TRANSISTOR, 2SC536SP, 2SC2458, 2SC3311, 2SC1740S
Q701	4822 130 42951	TRANSISTOR, 2SA970 (GR, BL)
Q702	4822 130 42951	TRANSISTOR, 2SA970 (GR, BL)
Q703	4822 130 43233	TRANSISTOR, 2SC2240
Q704	4822 130 43233	TRANSISTOR, 2SC2240
△Q705	4822 130 60117	TRANSISTOR, 2SC3419 (Y)
△Q706	4822 130 60117	TRANSISTOR, 2SC3419 (Y)
△Q707	4822 130 62335	TRANSISTOR, 2SD2033 (E)
△Q708	4822 130 62335	TRANSISTOR, 2SD2033 (E)
△Q709	4822 130 62334	TRANSISTOR, 2SB1353 (E)
△Q710	4822 130 62334	TRANSISTOR, 2SB1353 (E)
△Q711	4822 130 60697	TRANSISTOR, 2SC3180N (R, O)
△Q712	4822 130 60697	TRANSISTOR, 2SC3180N (R, O)
△Q713	4822 130 60694	TRANSISTOR, 2SA1263N (R, O)
△Q714	4822 130 60694	TRANSISTOR, 2SA1263N (R, O)
Q717	4822 209 83732	IC AN7062
△Q801	4822 209 60826	IC NJM7812FA
△Q802	4822 209 32514	IC L78MR06
U036	4822 130 33305	DIODE 1SS176,MA165,1SS254
A101	4822 210 10568	PV04-MISCELLANEOUS V.H.F.TUNER, FM FRONT END [/1A/1B]
A101	4822 210 10567	V.H.F.TUNER, FM FRONT END [/2A/2B]
FA01	4822 242 81262	CERAMIC FILTER, SFP450F
F201	4822 242 71135	CERAMIC FILTER, SFE10.7MS3-A
F202	4822 242 71135	CERAMIC FILTER, SFE10.7MS3-A
JV01	4822 265 30457	TERMINAL 6P CD/AUX1/AUX2
JV02	4822 265 30397	TERMINAL 4P TAPE IN/OUT
JV03	4822 265 30397	TERMINAL 4P DCC IN/OUT
JV04	4822 266 30274	TERMINAL 2P REMOTE IN/OUT
JV05	4822 267 60273	CONNECTOR 23P
J101	4822 290 81632	TERMINAL ANTENNA
J401	4822 267 30741	TERMINAL 2P PHONO
J701	4822 290 81616	TERMINAL 4P SPEAKER
LA01	4822 157 63084	ANT COIL MW
LA02	4822 157 70779	OSC COIL MW
LA03	4822 157 52714	ANT COIL LW
LA04	4822 157 70781	OSC COIL LW
LA05	4822 157 53589	CHOKE COIL 39MH
LA06	4822 148 81095	I.F.T. AM
△LN01	4822 280 70354	RELAY VB24MBU
LN02	4822 280 20469	RELAY SVR-24A
L201	4822 157 63904	I.F.T. FM DET
L202	4822 156 10794	M.P.X.COIL
L301	4822 157 70021	M.P.X.COIL 19.38KHZ
L302	4822 157 70021	M.P.X.COIL 19.38KHZ
L701	4822 157 70022	SPEAKER CHOKE COIL
L702	4822 157 70022	SPEAKER CHOKE COIL

REF. DESIG.	PART NO.	DESCRIPTION
SV01 S301	4822 277 21718 4822 277 21712	SLIDE SWITCH SYSTEM/INT/EXT SLIDE SWITCH SCAN STEP [1A/1B]
WV01	4822 321 62189	JUMPER LEAD 23P
X201 X501	4822 242 81248 4822 242 72333	CERAMIC VIBRATOR, CSB456F15 X'TAL 7.2MHZ

REF. DESIG.	PART NO.	DESCRIPTION

NOTE ON SAFETY

Symbol \triangle Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol \triangle . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.