




SERVICE MANUAL

LINEAR TRACKING TURNTABLE

MODEL LT-5V

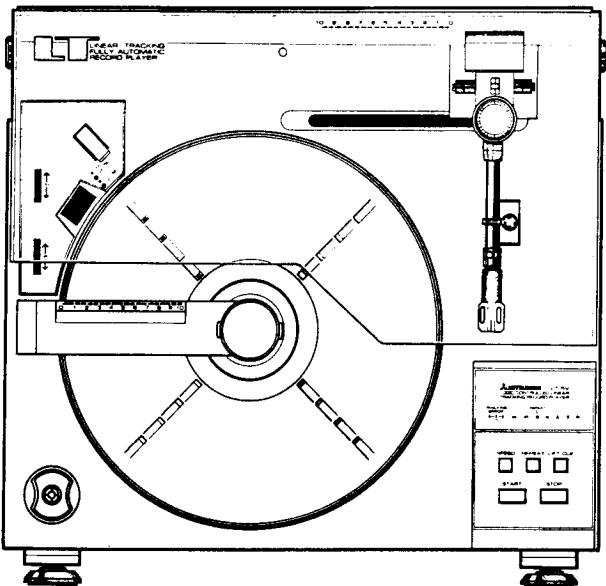



15666

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email:- enquiries@mauritron.co.uk

CONTENTS

NAMES OF PARTS	2
SPECIFICATIONS	3
GENERAL ADJUSTMENTS	3
CIRCUIT DESCRIPTION	4
INFORMATION ON LOGIC I.C. (IC102)	5
DISASSEMBLY INSTRUCTIONS	6
WIRING DIAGRAM	7
PRINTED CIRCUIT BOARDS	9
SCHEMATIC DIAGRAM	11
EXPRODED VIEWS	13
PARTS LIST	15
PACKING CHART	18

NAMES OF PARTS

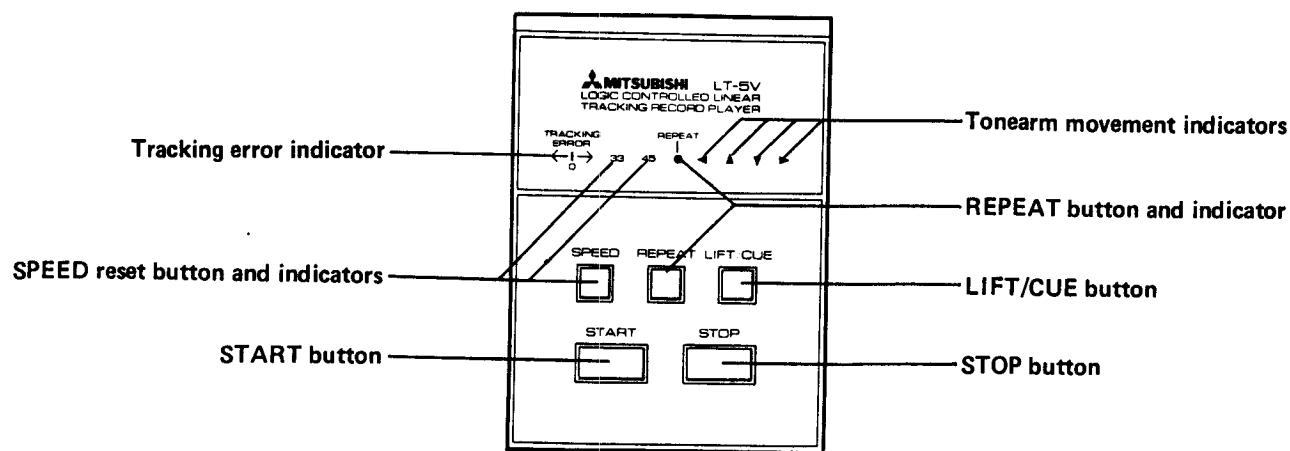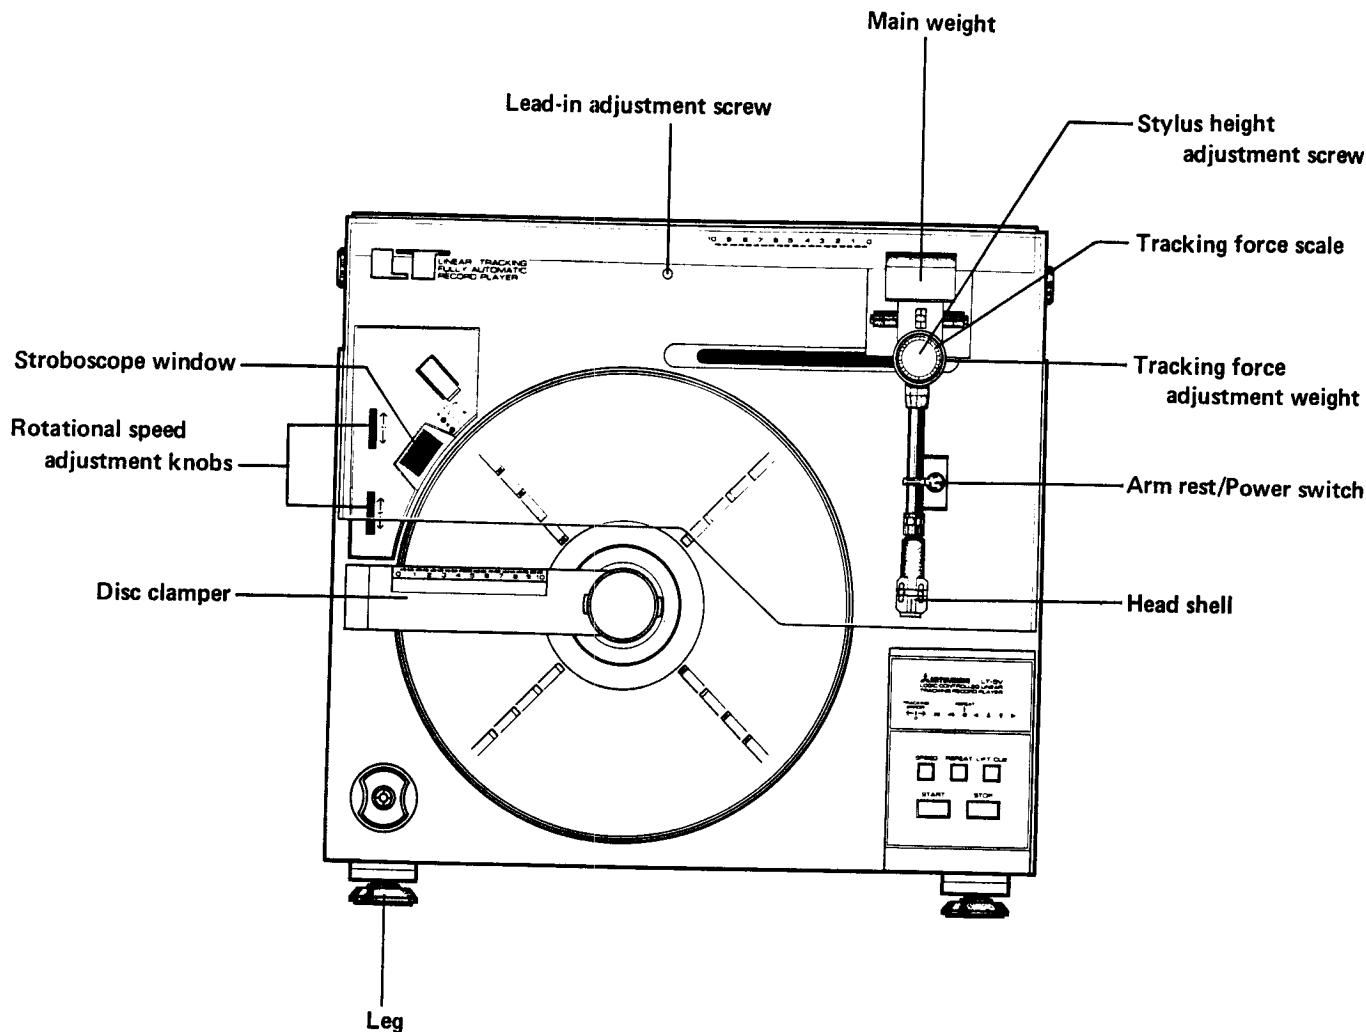

SPECIFICATIONS

1. PHONO MOTOR SECTION

Drive system	Belt drive
Motor	PLL DC servo motor
Platter	Size 30.4 cm (12")
	Weight 1.3 kg (2.9 lb)
	Material Aluminum diecast
Platter speed	33-1/3, 45 r.p.m.
	Selection Automatic
	Adjustment ±3.0 %
Wow and Flutter	±0.045 % (Wrms)
Signal to noise ratio	65 dB (IEC-B) 76 dB (DIN-B)

2. TONEARM SECTION

Type	Straight universal type, static balanced
Overall length	22.3 cm (8-3/4")
Effective length	18.0 cm (7-1/12")
Overhang	14 mm (9/16")
Tracking error	±0.1°
Head shell	GFRP (6.2 g)

3. CARTRIDGE SECTION

Model	AT-12E (Audio Technica)
Type	Dual moving magnet
Stylus	0.4 x 0.7 mil elliptical diamond
Recommended tracking force	1.5 g
Output level (1 kHz, 5 cm/sec)	3.5 mV
Frequency response	15 ~ 26,000 Hz
Channel separation (1 kHz)	23 dB

4. GENERAL


Power consumption	14W
Dimensions (W x H x D)	466 x 430 x 200 mm (18-3/8 x 16-15/16 x 7-7/8")
Weight	12.5 kg (27.5 lb)

Design and specifications are subject to change without notice for improvement.

GENERAL ADJUSTMENTS


1. Tracking Force Adjustment

- (1) Attach the cartridge (mounted on head shell) to the tonearm.
- (2) Adjust the tonearm for zero balance by rotating the tracking force adjustment weight. Zero balance is achieved when the tonearm stays just clear of the armrest and remains suspended vertically.
- (3) Rotate the tracking force scale so that the 0 mark points upwards. While turning the dial, hold the tracking force adjustment weight so as not to disturb its position.
- (4) Rotate the tracking force adjustment weight until the indication on the scale matches the tracking force recommended for the cartridge in use. By turning the weight counter-clockwise, it is pushed out and the tracking force increases.

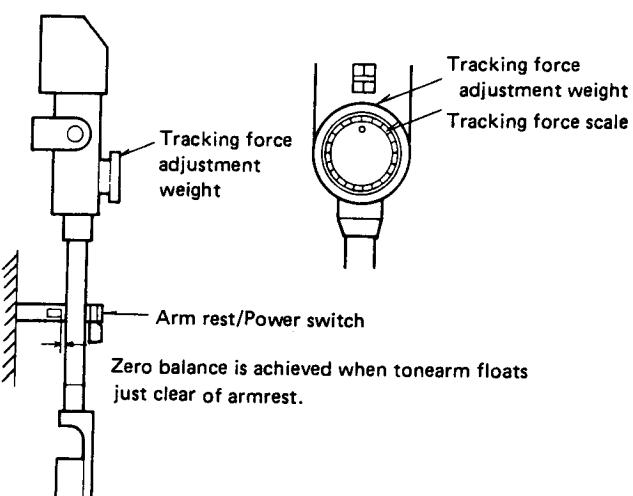

2. Stylus Height Adjustment

- (1) Remove the main weight by pulling it upwards.
- (2) Remove the tracking force adjustment weight by turning it counter-clockwise.
- (3) Turn the power ON and move the tonearm to the UP position with the LIFT/CUE button.
- (4) Hold the overhang gauge vertically to the turntable base and adjust the stylus height. The adjustment screw is located in the opening for the tracking force adjustment weight. Turning it clockwise increases the stylus height.

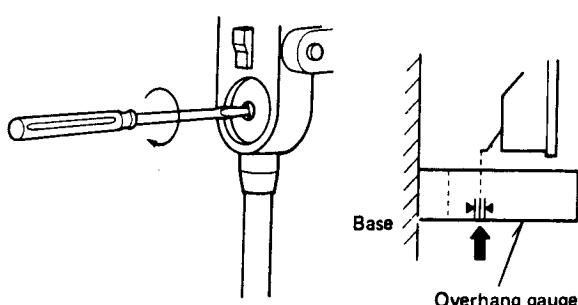

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

3. Adjustment of Lead-in Position

In case the stylus does not correctly descend in the lead-in groove of a record, perform the following adjustment.


(1) Make sure that the turntable is positioned horizontally.

Place a 30cm record on the platter and check to which side the stylus is off position.

(2) Adjust the lead-in position gradually by turning the lead-in adjustment screw.

(3) After having performed the adjustment for a 30cm record, repeat the same adjustment with a 17cm record.

Note: If the stylus sets down outside of the turntable, or the lead-in position is set too far inward, the automatic end-of-play shut-off may become inoperative.

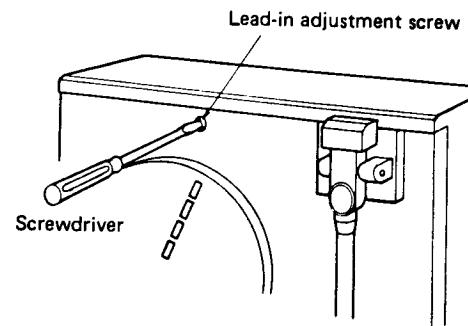

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

CIRCUIT DESCRIPTION

1. Start Switch ON

When the start switch S106 becomes ON, L is fed into pin 9 (START) of IC102, and because pin 21 (↑) goes L, Q120 turns OFF, Q121 becomes ON, and Q122 turns OFF. Because pin 22 (↓) is H, Q117 becomes ON, Q118 OFF, and Q119 ON. This starts the vertical motion motor and the tonearm is lifted up. Also, as Q120 goes OFF, H is fed to the base of Q204, causing Q203 to turn ON and LA207 (↑) to illuminate. (Signal flow shown by blue → on schematic diagram.)

2. Tonearm Elevation Stop

As the CAM/UP switch S102 is switched to NO (Normally open), L is applied to pin 4 (UP) of IC102, the vertical motion motor stops and the elevation of the tonearm ceases.

3. Horizontal Tonearm Movement (Inwards)

As pin 23 (←) of IC102 becomes L, Q109 turns OFF, Q111 ON, and Q112 OFF. Because 22 (→) is H, Q113 becomes ON, Q115 OFF, and Q116 ON, causing the horizontal motion motor to operate and move the tonearm inwards. Also, as Q109 turns OFF, Q201 turns ON and LA204 (←) illuminates. (Signal flow shown by blue ▷ on schematic diagram.)

4. Record Size Detection (30cm Record)

When a 30cm record is placed on the turntable, the size detector Q101 receives no light and turns OFF. Thus Q103 goes OFF, and H is fed to pin 12 and pin 13 of IC101, causing L to be outputted from pin 11. L is placed on pin 15 (SIZE) of IC102, (Shown by blue ▶ on schematic diagram.) Because Q105 turns ON, the position light source LA101 goes on and the position light receiving photo diode D101 receives light. Thus H is imposed on the base of Q107 and it turns ON.

5. Tonearm Lowering

As pin 1 (S-LEAD-IN) of IC102 changes from H→L, pin 21 (↓) changes from H→L, and Q117 turns OFF, Q118 ON and Q119 OFF. At that time, because pin 20 (↑) is H, Q120 is ON, Q121 OFF and Q122 ON. This causes the horizontal movement of the tonearm to stop and the tonearm to start lowering. Also, because Q117 is OFF, Q203 turns ON and LA206 (↓) illuminates. (Shown by red ➡ on schematic diagram.)

6. Tonearm Lowering Stop

First the CAM/UP switch S102 switches from NO to NC (Normally closed) and pin 4 (UP) of IC102 becomes H, then the CAM/DOWN switch S103 switches from NC to NO and the vertical motion motor stops. The tonearm now rests on the record.

7. Operation of Tracking Servo Circuit

When S102 and S103 are switched as described in Step 6, pins 1 and 2 of IC102 become H, causing pin 3 to become L, and H is outputted at pin 4. Thus Q137 turns ON, causing the relay RL102 to switch to tracking servo. However, as the stylus of the cartridge follows the record groove, the tonearm is tilted inwards. This tilt causes the light interruption board to shut off the light from LA104, reducing the voltage from D107 and causing pin 2 of IC103 to become L and pin 1 to become H. Thus pin 7 of IC103 becomes H, Q129 and Q130 go OFF, Q131 turns ON, and Q132 OFF. On the other hand, the light from LA105 is increased and the voltage from D108 increases accordingly, imposing H on pin 2 of IC104 and causing pin 1 to become L. Then, because pin 7 of IC104 goes L, Q133 and Q134 turn ON, Q135 turns OFF, and Q136 ON. When Q132 turned OFF, H was inputted into pin 3 of IC201, causing pin 1 to become H, Q205 to turn ON and LA201 (←) to illuminate. In this

way, the voltage difference between D107 and D108 is amplified, operating the horizontal motion motor and moving the tonearm inwards. When the tonearm becomes exactly vertical again, the voltages from D107 and D108 are equal and the motor stops. When the tonearm is again tilted by the movement of the stylus, the above process is repeated, and so forth until the tonearm has reached the end groove of the record. (Shown by blue \Rightarrow on schematic diagram.)

8. End Detection (Tonearm Lift)

When the tonearm moves to the end groove of a record, D103 receives the END light and produces a voltage, causing Q108 to turn ON and L to be fed to pin 2 (END) of IC102. First, pin 20 (\uparrow) of IC102 becomes H, causing Q120 to turn OFF, Q121 to turn ON, and Q122 to turn OFF. Because pin 21 (\downarrow) of IC102 is H at this time, it causes Q117 to turn ON, Q118 to turn OFF, and Q119 to turn ON. Thereby, the vertical motion motor starts to operate and the tonearm is lifted up. (Indicator lamps are the same as in Step 1. Signal flow shown by red \triangleright on schematic diagram.)

9. Tracking Servo Circuit Release

When the tonearm moves upwards and the CAM/DOWN switch S103 switches to NC, pin 2 of IC101 goes L, and because pin 1 is H, pin 3 becomes H and pin 4 becomes L.

Thus Q137 turns OFF and the solenoid RL 102 switches from tracking servo to normal.

10. Tonearm Elevation Stop

Same as in Step 2.

11. Horizontal Tonearm Movement (Outwards)


When the tonearm reaches the upper limit pin 22 (\rightarrow) of IC102 goes L, causing Q113 to go OFF, and Q116 to go OFF. At this time, because pin 23 (\leftarrow) is H, Q109 becomes ON, Q111 OFF, and Q112 ON. Also, because Q202 is ON when Q113 is OFF, LA205 (\rightarrow) illuminates. Accordingly, the horizontal motion motor operates and the tonearm is moved outwards. (Signal flow shown by red \triangleright on schematic diagram.)

12. Tonearm Movement Stop

When the tonearm moves horizontally and reaches the armrest position, the REST switch S101 switches from NC to NO, and L is fed into pin 3 of IC102. As the horizontal motion motor stops, the vertical motion motor starts operating, the CAM/UP switch S102 changes from NO to NC, and the tonearm is lowered. When it reaches the lower limit, the CAM/DOWN switch S103 switches to NO, and the tonearm stops on the arm rest. (Indicator lamps are the same as in Step 5. Signal flow shown by red \triangleright on schematic diagram.)

INFORMATION ON LOGIC I.C. (IC102)

1. Circuit Construction

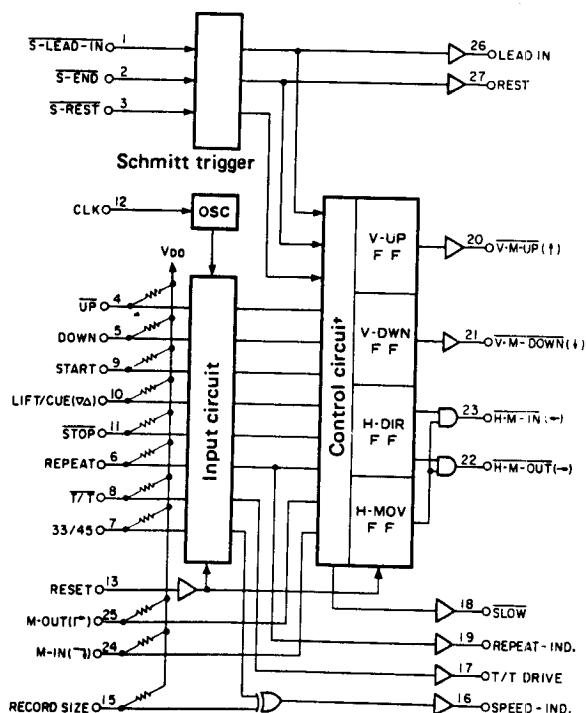

2. Pin and Function

- 1 (S-LEAD-IN): L when tonearm is on a record, otherwise H.
- 2 (S-END): Becomes L when tonearm is moving inwards on a record and reaches the end groove, otherwise H.
- 3 (S-REST): L when at armrest, otherwise H.
- 4 (UP): L when tonearm is being lifted or moving horizontally, otherwise H.
- 5 (DOWN): L when tonearm is at armrest or on a record, otherwise H.
- 6 (REPEAT): Ordinarily H. When L is fed into this pin, the tonearm continues the repeat operation. To release, feed in L once more or make 11 (STOP) L.
- 7 (33/45): Used when selecting platter speed manually. Making this pin L causes speed to change from 33-1/3 rpm to 45 rpm or vice versa.
- 9 (START), 10 (LIFT/CUE), 11 (STOP): When START becomes L, the tonearm moves inwards; when STOP becomes L, the tonearm moves outwards. When LIFT/CUE becomes L, the tonearm is lifted or lowered. Note that, while the tonearm is being lifted, making this pin L produces no change, but if L is fed in during the lowering process, it changes back to upwards.

12 (CLK): By connecting an external resistor/condenser combination to the input, a reference clock pulse is generated internally.

13 (RESET): A resistor/condenser combination is connected to the input. Immediately after switching on the power, the RESET input becomes L, blocking automatic movement of the tonearm.

14 (Vss): Connects to ground.

15 (RECORD SIZE): L indicates 30cm LP, H indicates 17cm EP.

16 (SPEED-IND): L indicates 33-1/3 rpm, H indicates 45 rpm. Can be changed freely by making 7 (33/45) L.

17 (T/T-DRIVE): When 9 (START) becomes L, this pin becomes H and the platter rotates. When record play is finished and the returns to arm rest position, this pin becomes L and platter rotation stops.

18 (SLOW): To move the tonearm horizontally while on a record, this output becomes L and the horizontal motion speed is low. At H level, the motion speed is high.

19 (REPEAT-IND): When 6 (REPEAT) is L in the repeat mode, this pin becomes L.

20 (V.M-UP), 21 (V.M-DOWN), 22 (H.M-OUT), 23 (H.M-IN): When the tonearm is at rest position or on a record and thus 5 (DOWN) is L, at first 20 (V.M-UP) becomes L and the tonearm moves up, causing 5 (DOWN) to become H. At that time 4 (UP) is L, and when the tonearm stops at the upper limit, the horizontal motion starts. When the tonearm moves inwards, 23 (H.M-IN) is L, when it moves outwards, 22 (H.M-OUT) is L. When the tonearm has moved to the pre-set horizontal position and is being lowered, 21 (V.M-DOWN) becomes L. Thus, of these 4 signals during tonearm movement, there is always one which becomes L, but never two or more simultaneously.

27 (REST): Same as output of 3 (S-REST).

28 (Vpp): Supply voltage INPUT.

DISASSEMBLY INSTRUCTIONS

Removal of Rear Cover



- (1) Remove the eight screws **A** as shown in the figure.
- (2) The rear cover can now be removed.

Removal of Turntable Platter


- (1) Remove the rear cover as described above.
- (2) Insert the supplied rod or a small hex wrench through the hole in the platter spindle. Using the rod as a lever turn the spindle in a clockwise direction. Remove the spindle.
- (3) While holding the platter rotate the flywheel to loosen the platter. The platter can now be pulled off.

Removal of Tonearm


- (1) Unscrew the three screws **B** for the ornamental metal provided on the upper side and remove the metal. When removing the metal trim use care so as not to damage.
- (2) Remove the two fixing screws **C** for the wire holder.
- (3) Losen the two fixing screws **D** for the shaft and remove the shaft.
- (4) Remove the two screws **E** for the lifter's holder.
- (5) Turn the arm lifter shaft attached to the tonearm base with a pair of pliers and remove the shaft.
- (6) Now, the tonearm, together with the tonearm base, can be lifted upward and removed.
- (7) Disconnect the output lead wires from the printed circuit board.
- (8) Remove the nut securing the tonearm.
- (9) In this condition, the tonearm can now be serviced.

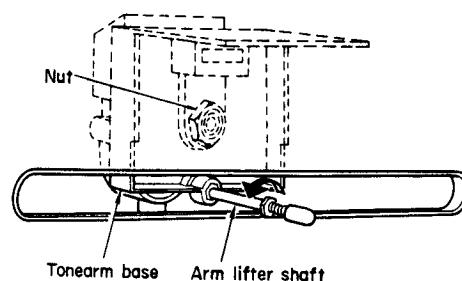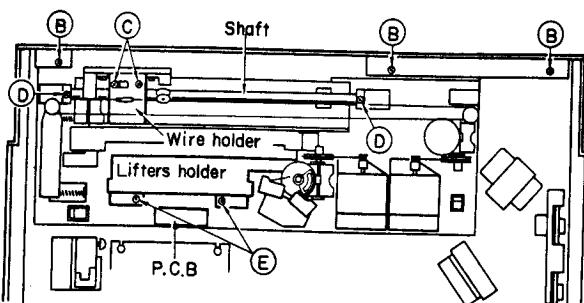



WIRING DIAGRAM

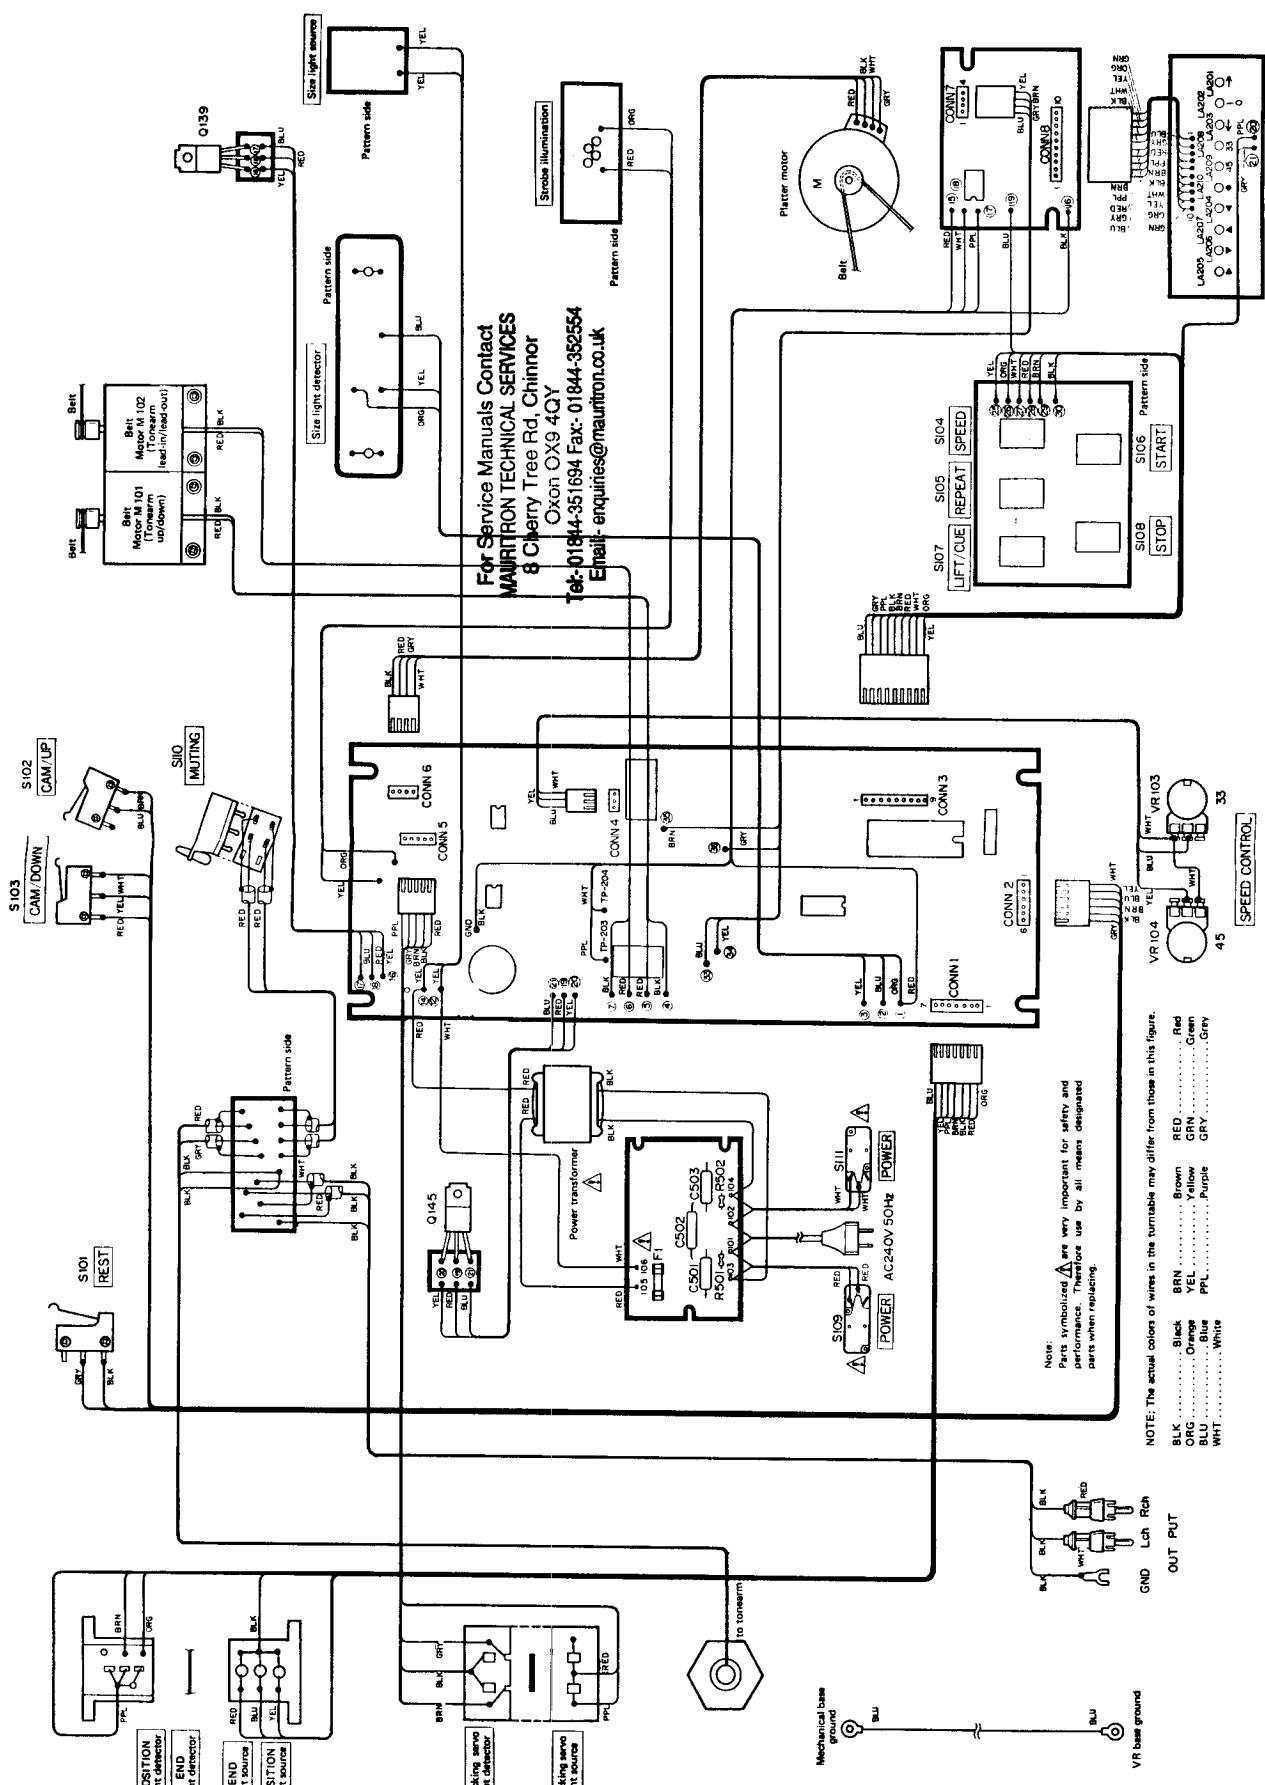


PRINTED CIRCUIT BOARDS

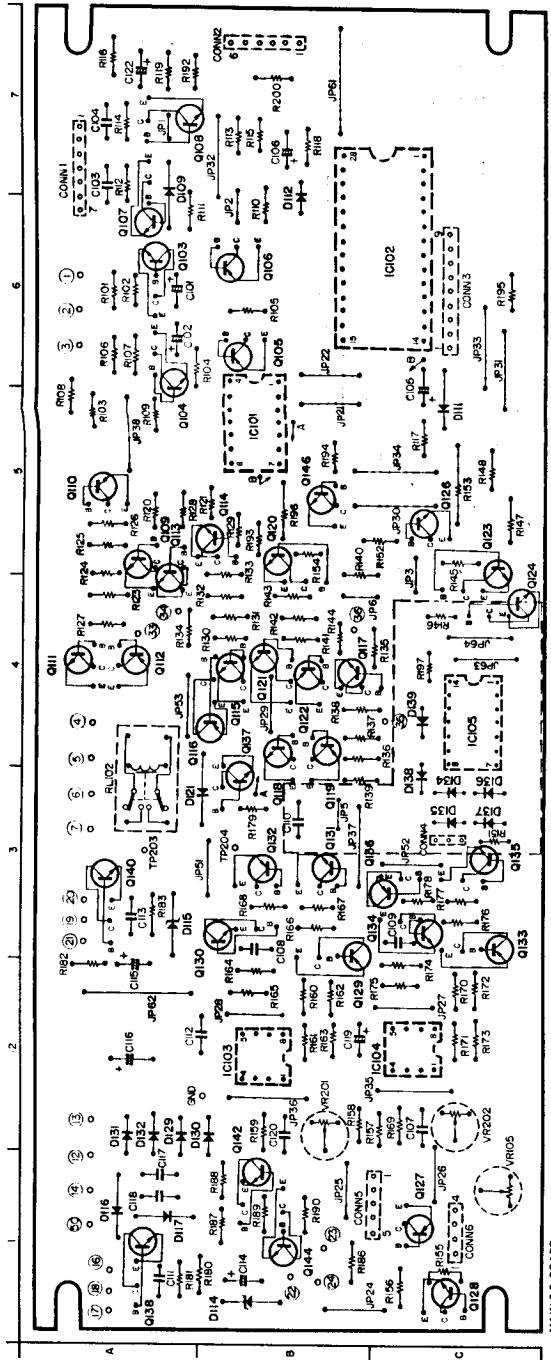

MAIN P.C. BOARD

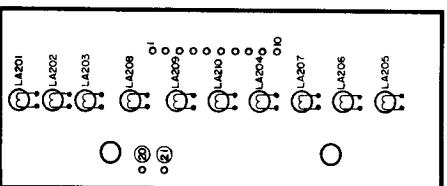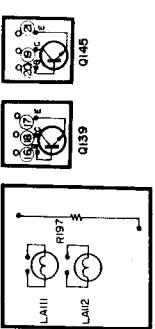

SWITCH P.C. BOARD

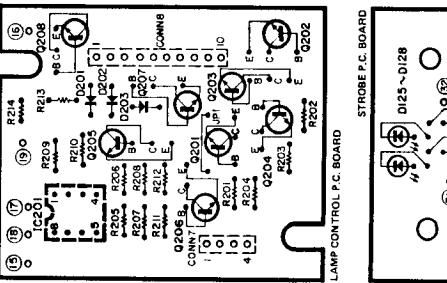


AMP P.C. BOARD

Symbol No.	Address	Symbol No.	Address	Symbol No.	Address
C101	A-6	D129	A-2	C125	C-4
C102	A-6	D130	A-2	C126	C-5
C103	A-7	D131	A-2	C127	C-1
C104	A-7	D132	A-2	C128	C-1
C105	C-5			C129	B-2
C106	B-7			C130	B-3
C107	C-2	I C101	B-5	C131	B-3
C108	B-3	I C102	C-6	C132	B-3
C109	B-3	I C103	B-2	C133	C-3
C110	B-3	I C104	C-2	C134	C-3
C111	A-1			C135	C-3
C112	A-2	I C103	A-6	C136	C-3
C113	A-3	I C104	A-5	C137	B-4
C114	B-1	Q105	B-6	C138	A-1
C115	A-2	Q106	B-6	C139	-
C116	A-2	Q107	A-6	C140	A-3
C117	A-1	Q108	A-7	C141	-
C118	A-1	Q109	A-5	C142	B-1
C119	B-2	Q110	A-5	C143	B-1
C120	B-2	Q111	A-4	C144	B-1
C122	A-7	Q112	A-4	C145	-
		Q113	A-5	C146	B-5
D109	A-7	Q114	B-5		
		Q115	B-4		
D110	C-4	Q116	A-4	R101	A-6
D111	C-5	Q117	B-4	R102	A-6
D112	B-7	Q118	B-3	R103	A-5
D114	B-1	Q119	B-3	R104	A-6
D115	A-3	Q120	B-5	R105	B-6
D116	A-1	Q121	B-4	R106	A-6
D117	A-1	Q122	B-4	R107	A-6
				R108	A-5
				R109	A-4
				R110	A-3
				R111	B-6
				R112	A-7
				R113	B-7
				R114	A-7
				R115	B-7
				R116	A-7
				R117	C-5
				R118	B-7
				R119	A-7
				R120	A-5
				R121	B-5
				R122	-
				R123	A-4
				R124	A-4
				R125	A-5
				R126	A-5
				R127	A-4
				R128	A-5
				R129	B-5
				R130	B-4
				R131	B-4
				R132	B-4
				R133	B-4
				R134	A-4
				R135	B-4
				R136	B-4
				R137	B-4
				R138	B-4
				R139	B-3
				R140	B-4
				R141	B-4
				R142	B-4


Symbol No.	Adress
A-2	C125
A-2	C5
A-2	C127
A-2	C1
A-2	C128
B-5	B-2
C-6	B-29
B-2	B-3
B-2	B-31
C-2	B-32
C-2	B-3
A-6	C-3
A-5	C-3
B-6	C-3
B-6	B-4
B-6	C138
A-6	A-1
A-6	C-3
A-7	C-3
A-5	C-3
A-5	B-1
A-4	C142
A-4	C143
A-4	B-1
A-5	C144
B-5	C145
B-4	C146
B-4	B-5
A-4	R101
B-4	R102
B-3	A-6
B-3	R103
B-3	R104
B-5	A-6
B-5	R105
B-4	R106
B-4	A-6
C-5	R107
C-4	A-5
C-4	R108
C-4	R109


ANSWER The answer is 1000. The first two digits of the product are 10.

SCHEMATIC DIAGRAM

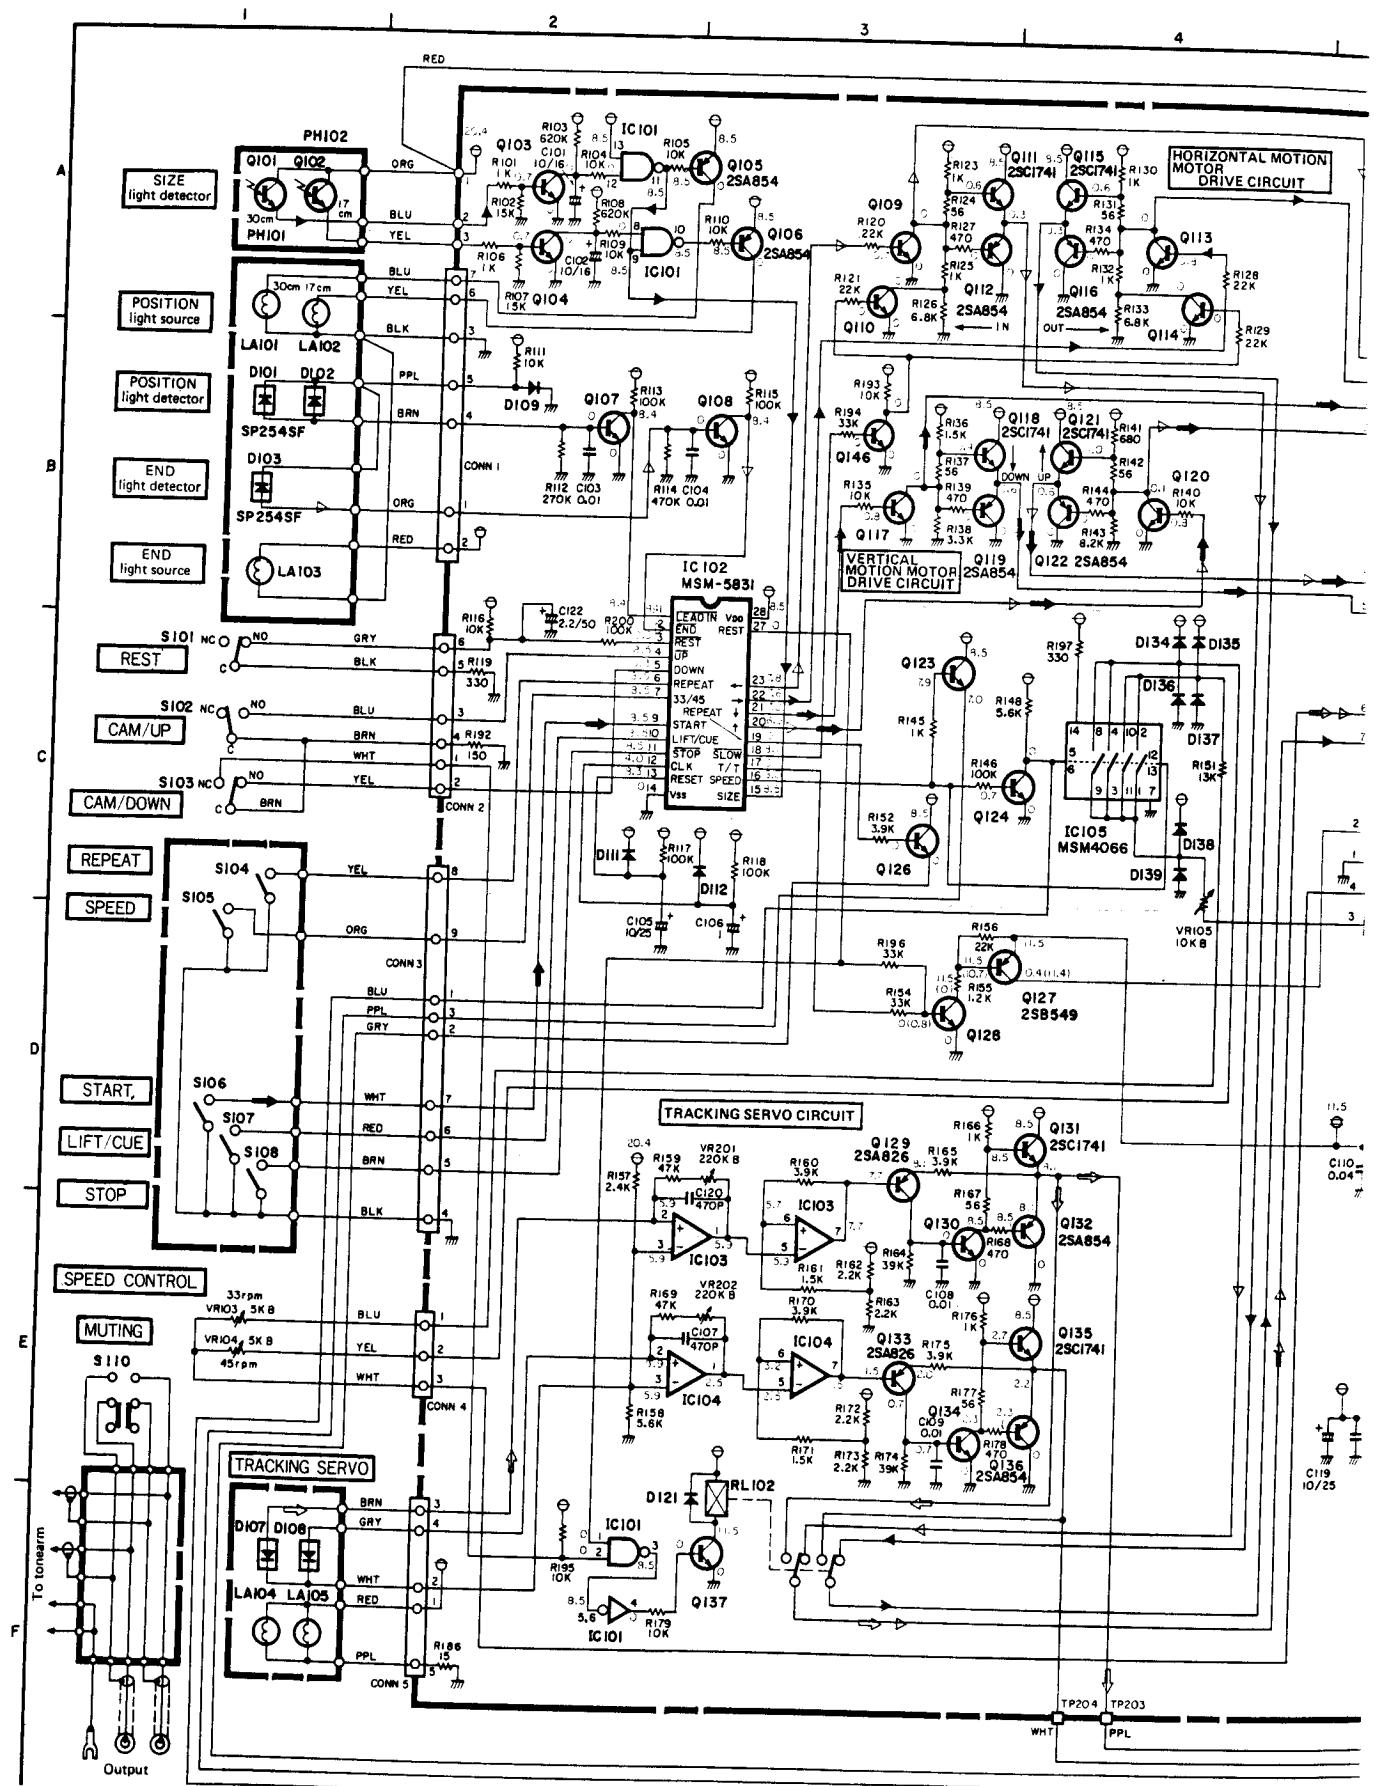

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

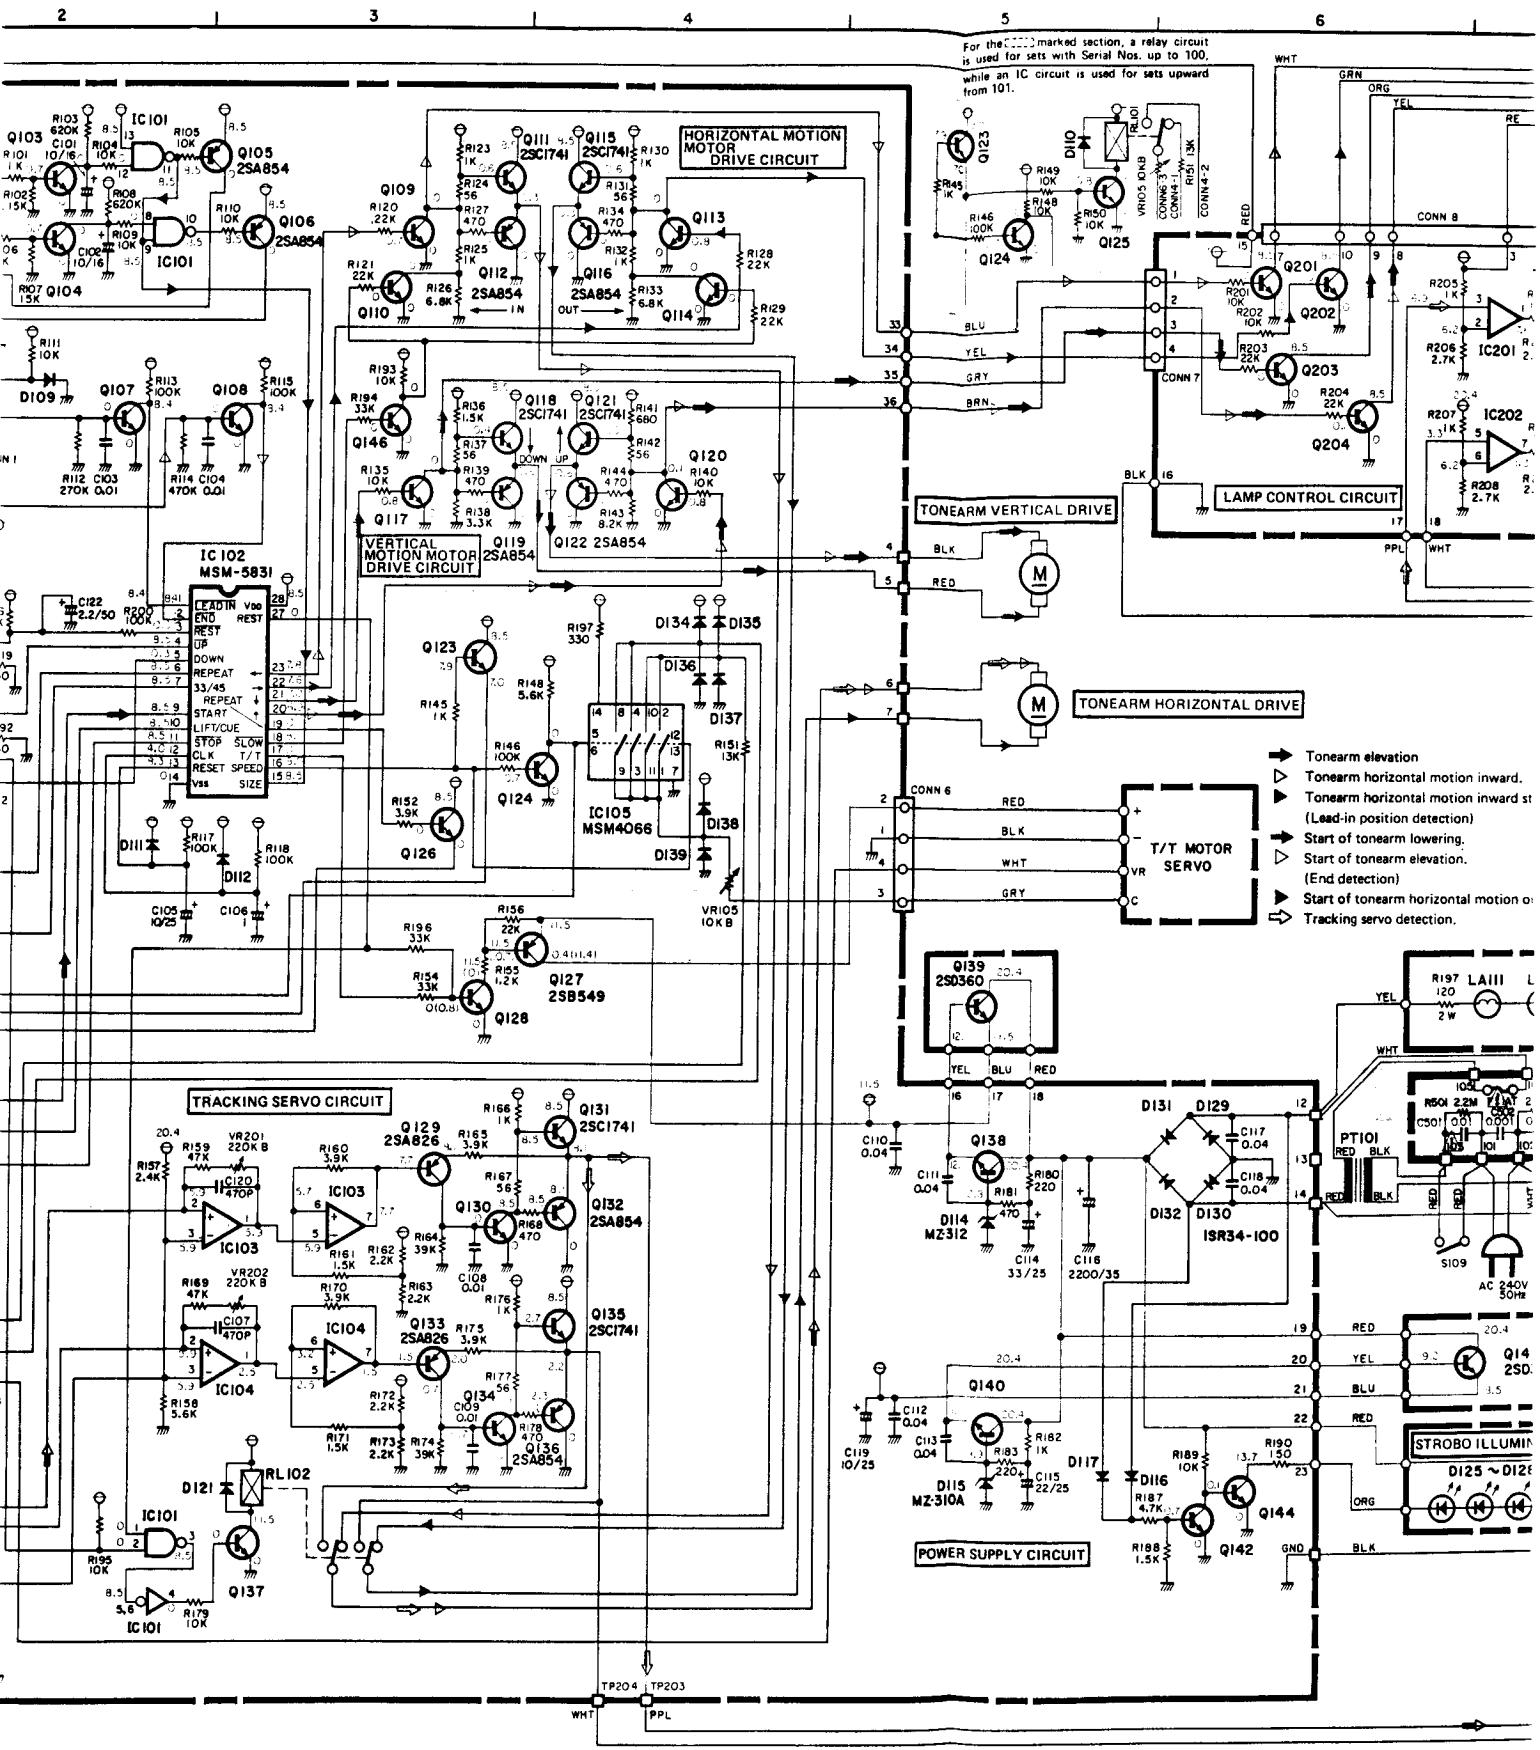

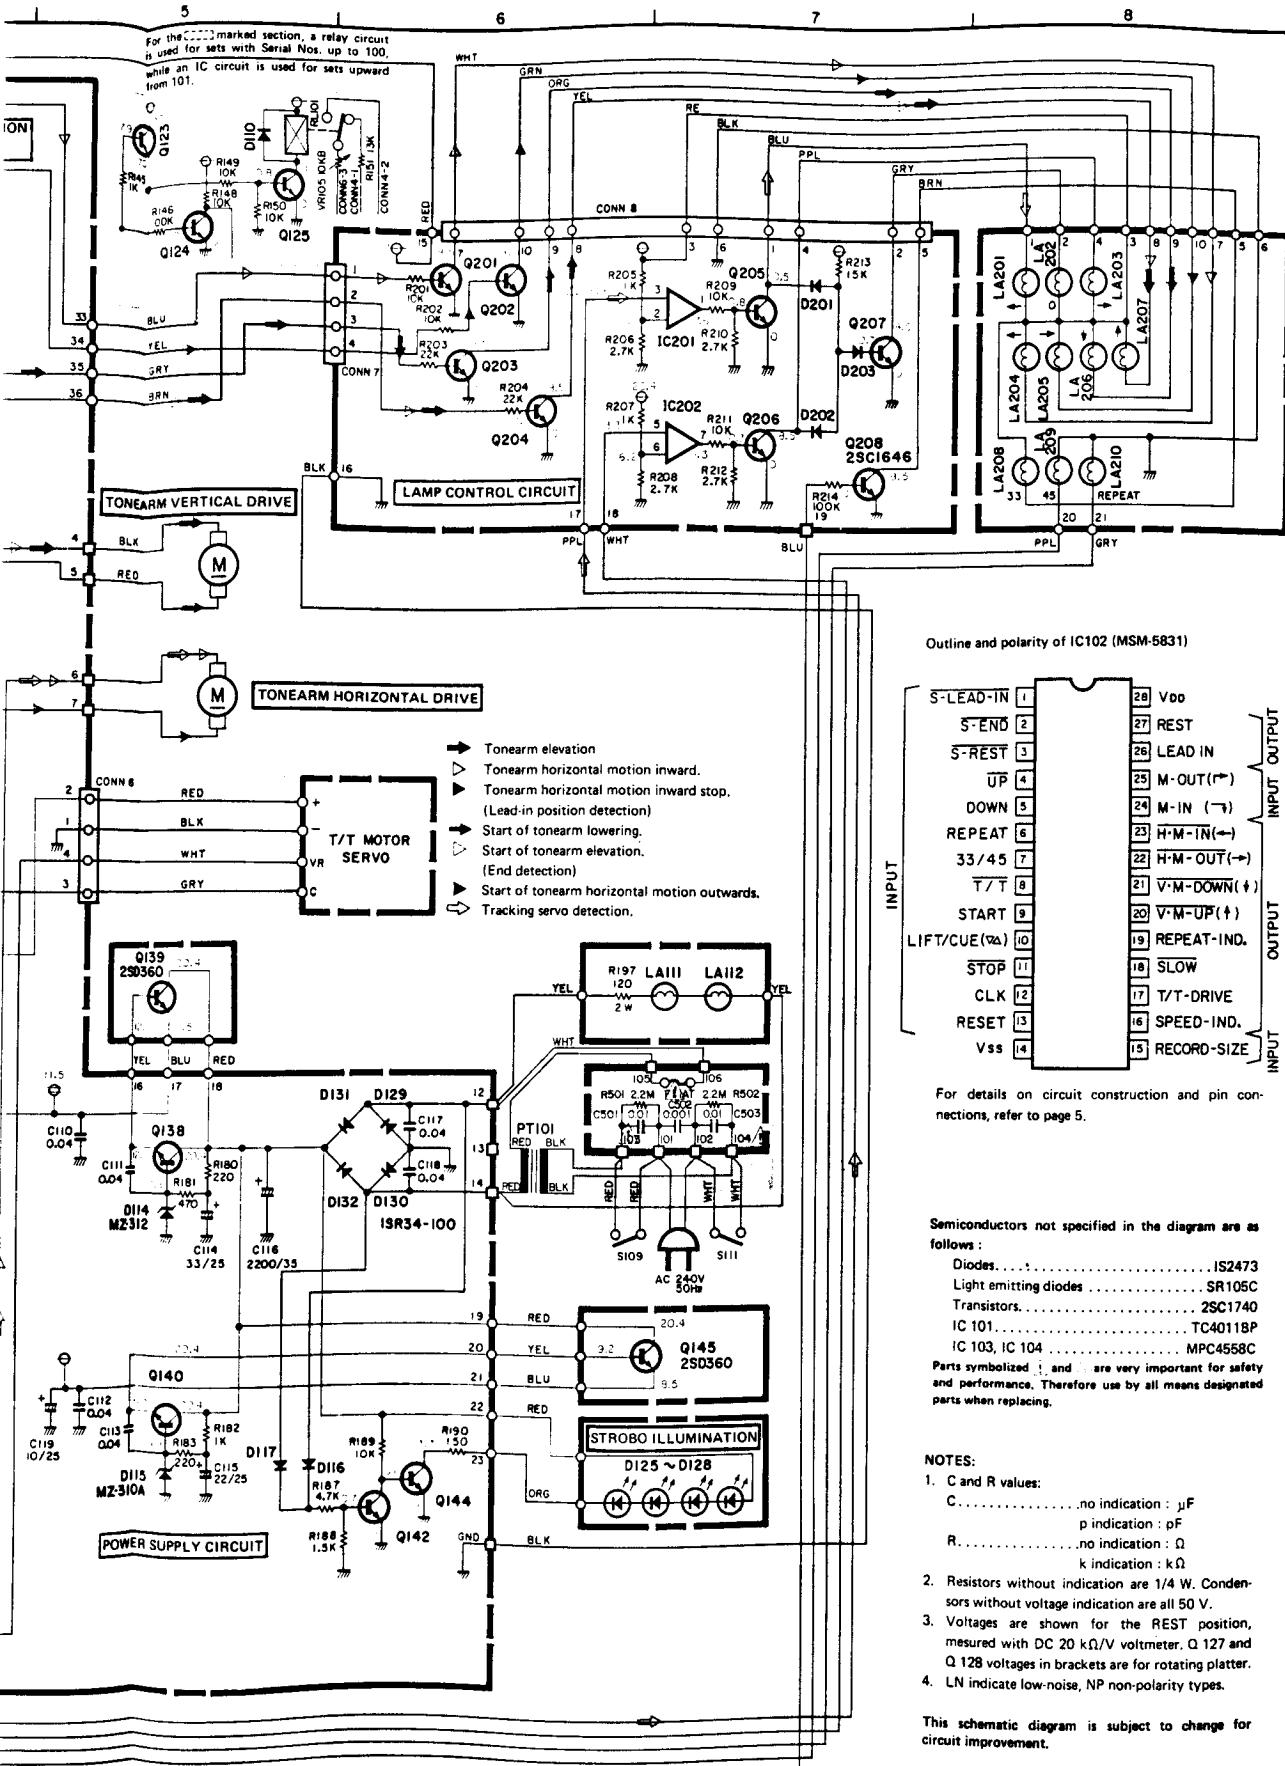

Outline and polarity of IC102 (MSM-5831)

S-LEAD-IN	1	Voo	INPUT
S-END	2	REST	
S-REST	3	LEAD IN	
UP	4	M-OUT(↑↑)	
DOWN	5	M-IN(→)	
REPEAT	6	H-M-IN(→)	
33/45	7	H-M-OUT(→)	
T/T	8	V·M-DOWN(↓)	
START	9	V·M-UP(↑)	
LIFT/CUE(%)	10	REPEAT-IND.	
STOP	11	SLOW	
CLK	12	T/T-DRIVE	
RESET	13	SPEED-IND.	
Vss	14	RECORD-SIZE	

For details on circuit construction and pin connections, refer to page 5.

Semiconductors not specified in the diagram are as follows :

Diodes IS2473
 Light emitting diodes SR105C
 Transistors. 2SC1740
 IC 101 TC4011BP
 IC 103, IC 104 MPC4558C

Parts symbolized [] and [] are very important for safety and performance. Therefore use by all means designated parts when replacing.


NOTES.

1. C and R values:
 C..... no indication : μ F
 p indication : pF
 R..... no indication : Ω
 k indication : k Ω
 2. Resistors without indication are 1/4 W. Condensers without voltage indication are all 50 V.
 3. Voltages are shown for the REST position, measured with DC 20 k Ω /V voltmeter. Q 127 and Q 128 voltages in brackets are for rotating platter.
 4. LN indicate low-noise, NP non-polarity types.


This schematic diagram is subject to change for circuit improvement.

**For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk**

SC EXPRODED VIEWS

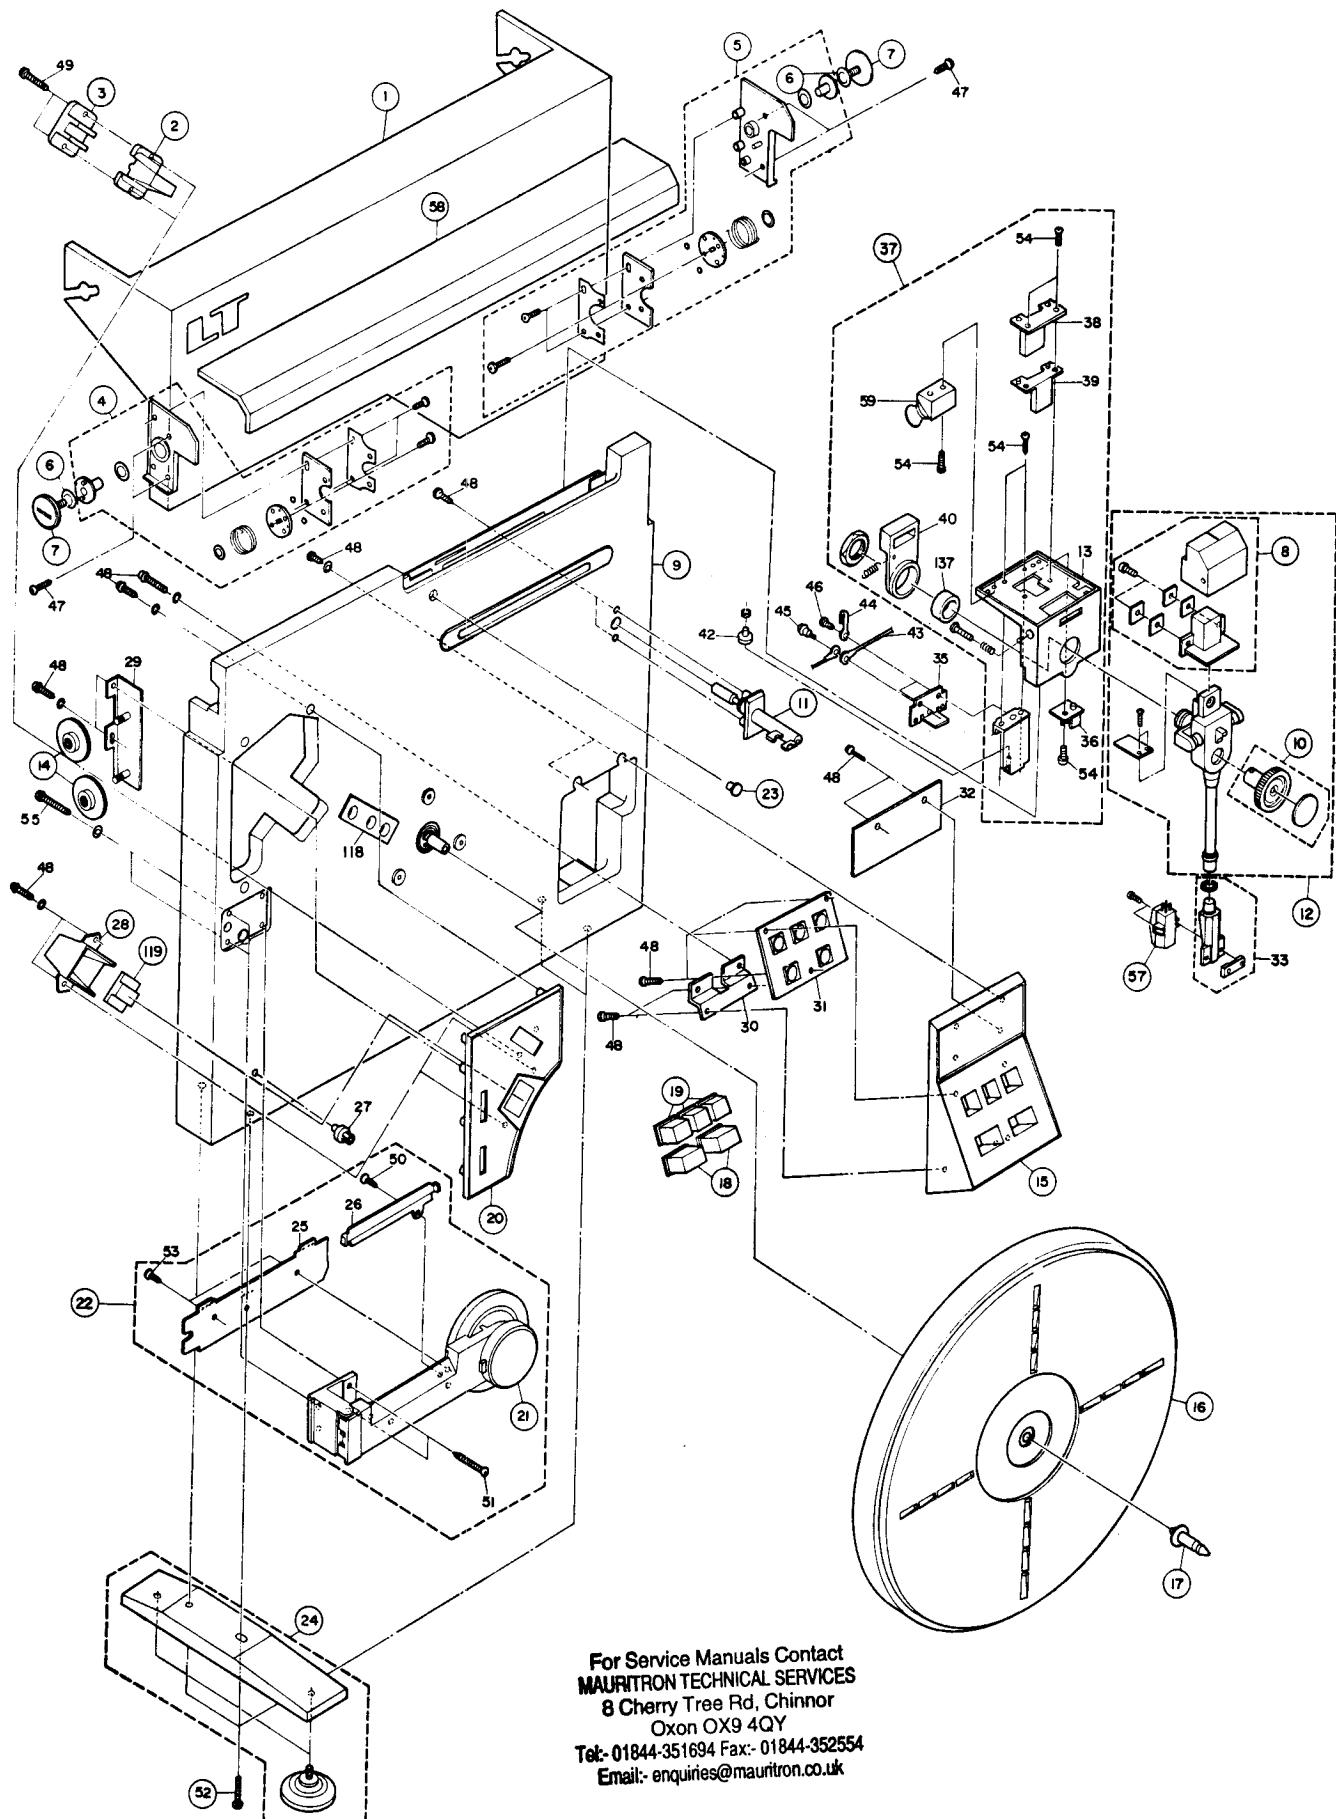

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

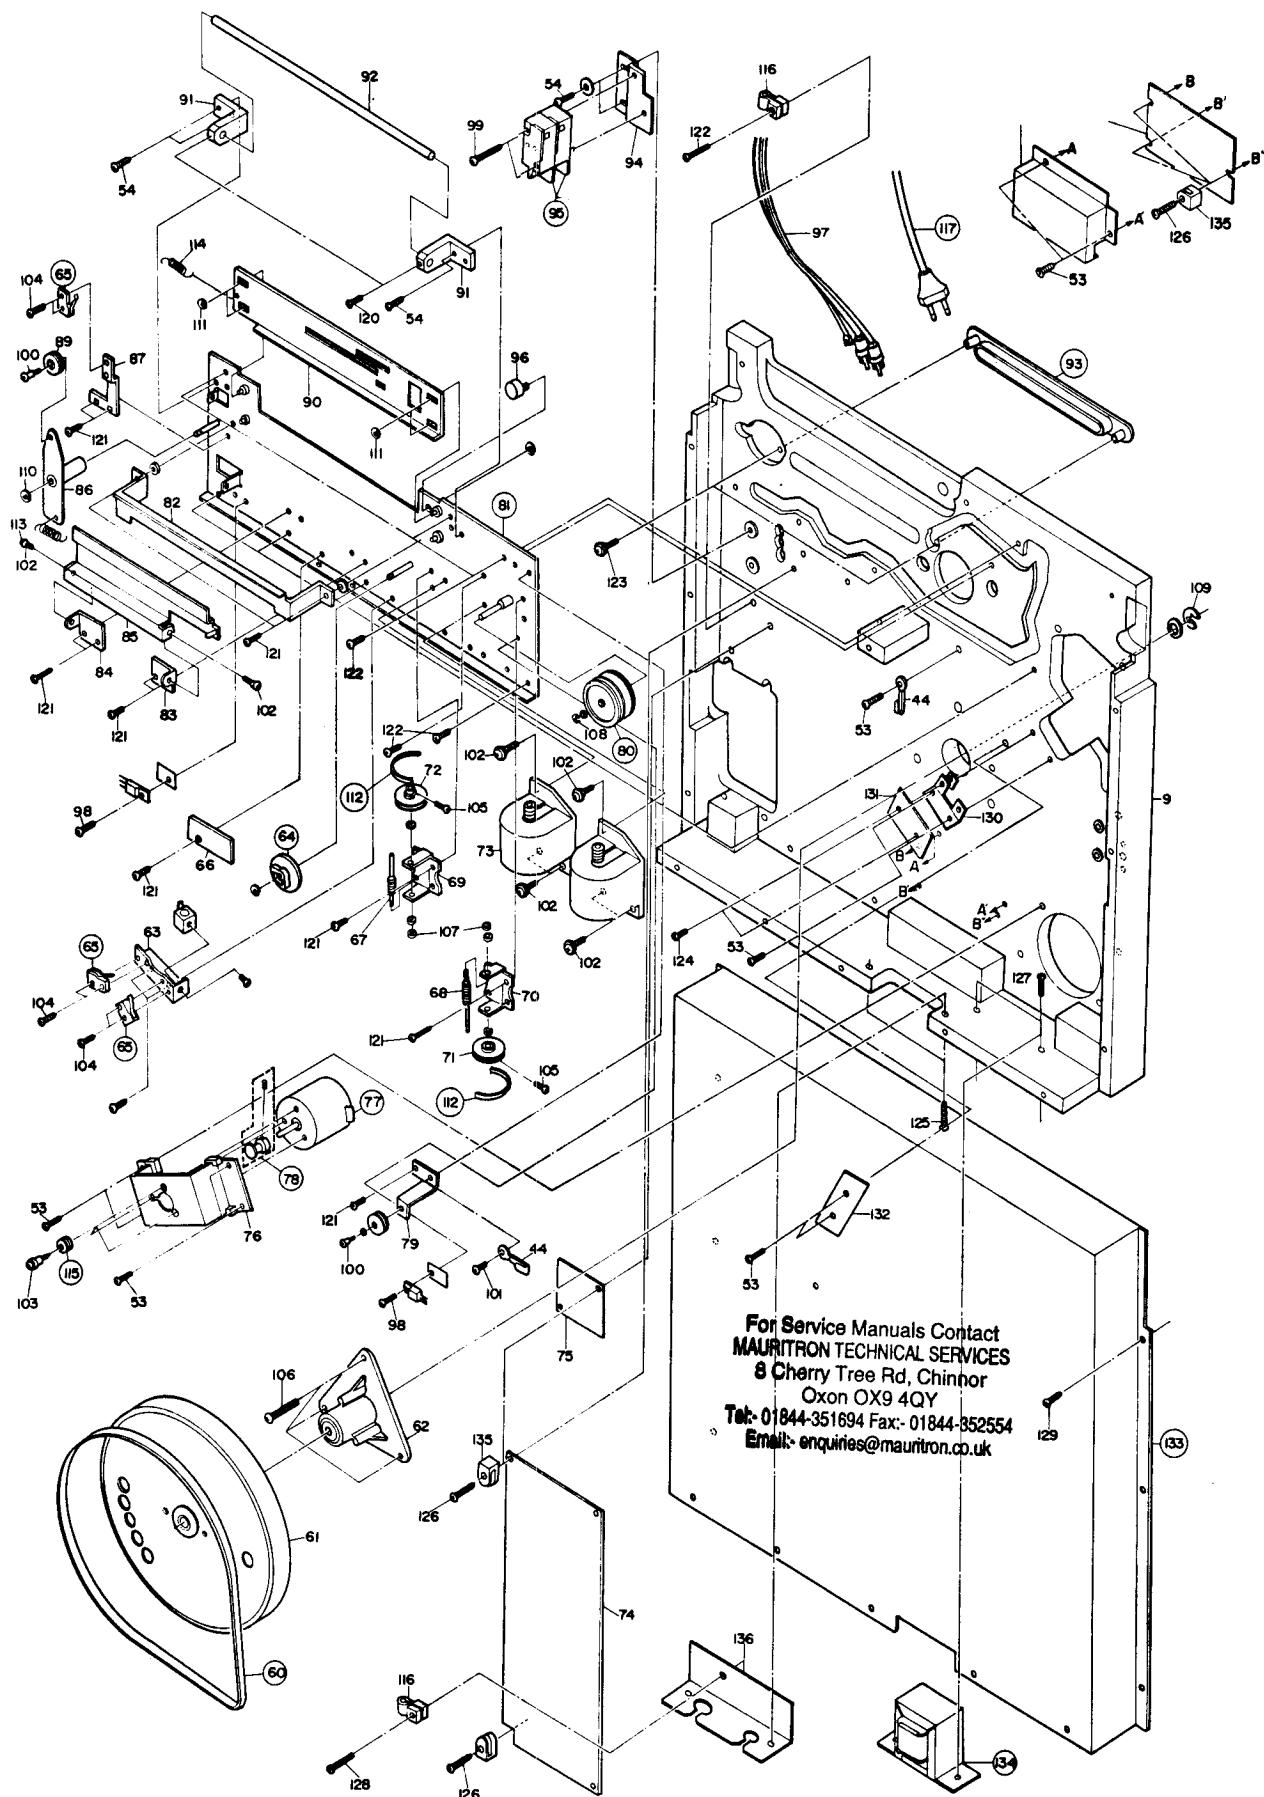

**For Service Manuals Contact
MAURITRON TECHNICAL SERVICES**
**8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY**
Tel: 01844-351694 Fax: 01844-352555
Email: enquiries@mauritron.co.uk

PARTS LIST

NOTE: △ and ▲ marked components on parts list have special characteristics to keep safety performance of this unit. When replacing any of these parts, be sure to use only specified parts.

LT-5V


Symbol No.	Part No.	Description	Symbol No.	Part No.	Description
1	M07445690	Dust cover	61	U524D049G301	Fly-wheel-assy
2	M07137605	Reflector	62		Bearing
3		Holder	63		Holder
4	M07445772	Hinge-assy (L)	64	M07478645	Gear
5	M07445773	Hinge-assy (R)	65	M07297450	Sw-micro
6	M07445747	Spacer	66		PCB-assy
7	M07445777	Screw-metal	67		Gear
8	M07445635	Weight-main	68		Gear
9		Base	69		Holder
10	M07445636	Weight	70		Holder
11	M07445618	Arm rest-assy	71		Pulley
12	U487B023G02	Tonarm	72		Pulley
13	U580C047G03	Base-assy	73	M07478638	Motor (For vertical)
14	U704D320H02	Knob (Speed control)	74		PCB-assy
15	U703D147G02	Ornament-assy	75		PCB-assy
16	U524D046G03	Platter-assy	76		Holder
17	M07445602	Shaft (For platter)	77	M04162638	Pulley-assy
18	U704C076H01	Knob (Start, Stop)	78	M07445621	Holder
19	U704C067H04	Knob (Speed, Repeat, Lift)	79		Gear
20	U703B035H04	Ornament	80	M07445645	Base
21	M07478720	Holder-assy	81		Holder
22	U5118003G04	Holder-assy	82		Holder
23	M07445786	Cap	83		Holder
24	M07478695	Leg-assy	84		Holder
25		Holder	85		Holder
26		Holder	86		Holder
27	U685D189H11	Pin	87		Holder
28	U561C053H01	Case (For strobo)	88	M07297639	Motor (Horizontal)
29		Holder	89		Pulley
30		Holder	90		Slit plate
31		PCB-assy	91		Holder
32		PCB-assy	92		Shaft
33	M07478734	Head shell-assy	93	U703C088H02	Ornament
34		Holder	94		Holder
35		Holder	95	M07179680	Sw-micro (Power)
36		Slider	96		Pin
37	U580C047G03	Base-assy (For tonearm)	97	M07478680	Lead (Output)
38		Slider	98		Screw pc
39		Slider	99		Screw-bind M3 x 6
40		Holder	100		Screw M2.6 x 8
41		Spacer	101		Screw-bind M3 x 10
42		Pulley	102		Screw M3 x 8
43	M07478686	Wire	103		Screw M2.6 x 8
44		Clamper	104		Screw M2 x 10
45		Screw-metal M3	105		Screw M2 x 6
46		Screw-bind M3 x 5	106		Screw M4 x 20
47		Tapping-screw 3.1 x 13	107		E-ring 1.5
48		Tapping-screw 1.3 x 10	108		E-ring 2.0
49		P-tapping-screw 2.3 x 16	109		E-ring 8.0
50		Tapping-screw 1.3 x 8	110		E-ring 4
51		Screwing M3 x 20	111		E-ring 2.5
52		Screw-metal M4 x 14	112	M04162628	Belt
53		Tapping-screw 1.3 x 12	113		Spring
54		Screwing M3 x 8	114		Cushion-gum
55		Screw-metal 2.3 x 20	115		Clamper
56		Screw-metal M3 x 20	116		Power cord
57	M07296760	Cartridge AT-12E(AUDIO TECHNICA)	117		Shade
58	U713B064H05	Ornament	118	U62D050H01	Cover (For strobo)
59		Slider	119	U564D026H02	Screw-bind M3 x 4
60	M04162629	Belt (For flywheel)	120		

Symbol No.	Part No.	Description	Symbol No.	Part No.	Description
121		Screw-bind M3 x 6	122		Trapping-screw 1.3 x 16
123		Screw-metal 3 x 5	124		Screw-bind M3 x 20
125		Screw bind-p	126		Screw-bind M4 x 20
127		Screw-metal 4 x 20	128		Screw-bind M3 x 6
129			130		Holder
131			132		PCB-assy
133			134		Cabinet-back
135			136		Trans-power
137			138		Holder
139			140		Holder
141			142		Ring
143			144		
145			146		
147			148		
149			150		
151			152		
153			154		
155			156		
157			158		
159			160		
161			162		
163			164		
165			166		
167			168		
169			170		
171			172		
173			174		
175			176		
177			178		
179			180		
181			182		
183			184		
185			186		
187			188		
189			190		
191			192		
193			194		
195			196		
197			198		
199			200		
201			202		
203			204		
205			206		
207			208		
209			210		
211			212		
213			214		
215			216		
217			218		
219			220		
221			222		
223			224		
225			226		
227			228		
229			230		
231			232		
233			234		
235			236		
237			238		
239			240		
241			242		
243			244		
245			246		
247			248		
249			250		
251			252		
253			254		
255			256		
257			258		
259			260		
261			262		
263			264		
265			266		
267			268		
269			270		
271			272		
273			274		
275			276		
277			278		
279			280		
281			282		
283			284		
285			286		
287			288		
289			290		
291			292		
293			294		
295			296		
297			298		
299			300		
301			302		
303			304		
305			306		
307			308		
309			310		
311			312		
313			314		
315			316		
317			318		
319			320		
321			322		
323			324		
325			326		
327			328		
329			330		
331			332		
333			334		
335			336		
337			338		
339			340		
341			342		
343			344		
345			346		
347			348		
349			350		
351			352		
353			354		
355			356		
357			358		
359			360		
361			362		
363			364		
365			366		
367			368		
369			370		
371			372		
373			374		
375			376		
377			378		
379			380		
381			382		
383			384		
385			386		
387			388		
389			390		
391			392		
393			394		
395			396		
397			398		
399			400		
401			402		
403			404		
405			406		
407			408		
409			410		
411			412		
413			414		
415			416		
417			418		
419			420		
421			422		
423			424		
425			426		
427			428		
429			430		
431			432		
433			434		
435			436		
437			438		
439			440		
441			442		
443			444		
445			446		
447			448		
449			450		
451			452		
453			454		
455			456		
457			458		
459			460		
461			462		
463			464		
465			466		
467			468		
469			470		
471			472		
473			474		
475			476		
477			478		
479			480		
481			482		
483			484		
485			486		
487			488		
489			490		
491			492		
493			494		
495			496		
497			498		
499			500		
501			502		
503			504		
505			506		
507			508		
509			510		
511			512		
513			514		
515			516		
517			518		
519			520		
52					

Symbol No.	Part No.	Description
Q119	M07137308	2SA854
Q120	M05104313	2SC1740
Q121	M07137307	2SC1741
Q122	M07137308	2SA854
Q123	M05104313	2SC1740
Q124	M05104313	2SC1740
Q126	M05104313	2SC1740
Q127	M07230307	2SB549
Q128	M05104313	2SC1740
Q129	M07137306	2SA826
Q130	M05104313	2SC1740
Q131	M07137307	2SC1741
Q132	M07137308	2SA854
Q133	M07137306	2SA826
Q134	M05104313	2SC1740
Q135	M07137307	2SC1741
Q136	M07137308	2SA854
Q137	M05104313	2SC1740
Q138	M05104313	2SC1740
Q139	M05079311	2SD360
Q140	M05104313	2SC1740
Q142	M05104313	2SC1740
Q144	M05104313	2SC1740
Q145	M05079311	2SD360
Q201	M05104313	2SC1740
Q202	M05104313	2SC1740
Q203	M05104313	2SC1740
Q204	M05104313	2SC1740
Q205	M05104313	2SC1740
Q206	M05104313	2SC1740
Q207	M05104313	2SC1740
Q208	M05104313	2SC1646
Electrical parts		
LA101	M07374251	Lamp (Position light source)
LA102	M07374251	Lamp (Position light source)
LA103	M07374251	Lamp (End light source)
LA104	M07374251	Lamp (Tracking servo light source)
LA105	M07374251	Lamp (Tracking servo light source)
LA111	M07297250	Lamp (Refractor light source)
LA112	M07297250	Lamp (Refractor light source)
LA201	M07374251	Lamp (Tracking indicator)
LA202	M07374251	Lamp (Tracking indicator)
LA203	M07374251	Lamp (Tracking indicator)
LA204	M07374251	Lamp (Lead-in indicator)
LA205	M07374251	Lamp (Lead-out indicator)
LA206	M07374251	Lamp (Tonearm down indicator)
LA207	M07374251	Lamp (Tonearm up indicator)
LA208	M07374251	Lamp (33 speed indicator)
LA209	M07374251	Lamp (45 speed indicator)
LA210	M07374251	Lamp (Repeat indicator)
PT101	M07480549	Power transformer
RL102	M07215465	Relay (Tracking servo select)
F1	M07352490	Fuse-1A-SEMKO

Symbol No.	Part No.	Description
S101	M07297450	Micro switch (Rest)
S102	M07297450	Micro switch (Cam/Up)
S103	M07297450	Micro switch (Cam/Down)
S104	M07445660	Push switch (Repeat)
S105	M07445660	Push switch (Speed)
S106	M07445660	Push switch (Start)
S107	M07445660	Push switch (Lift/Cue)
S108	M07445660	Push switch (Stop)
S109	M07179660	Micro switch (Power) ▲
S110	M07445661	Slide switch (Muting)
S111	M07179660	Micro switch (Power) ▲
VR103	M07445435	Variable resistor (5KΩ-B, Speed fine adj.)
VR104	M07445435	Variable resistor (5KΩ-B, Speed fine adj.)
For Service Manuals Contact MAURITRON TECHNICAL SERVICES 8 Cherry Tree Rd, Chinnor Oxon OX9 4QY Tel-01844-351694 Fax- 01844-352554 Email- enquiries@mauritron.co.uk		

PACKING CHART

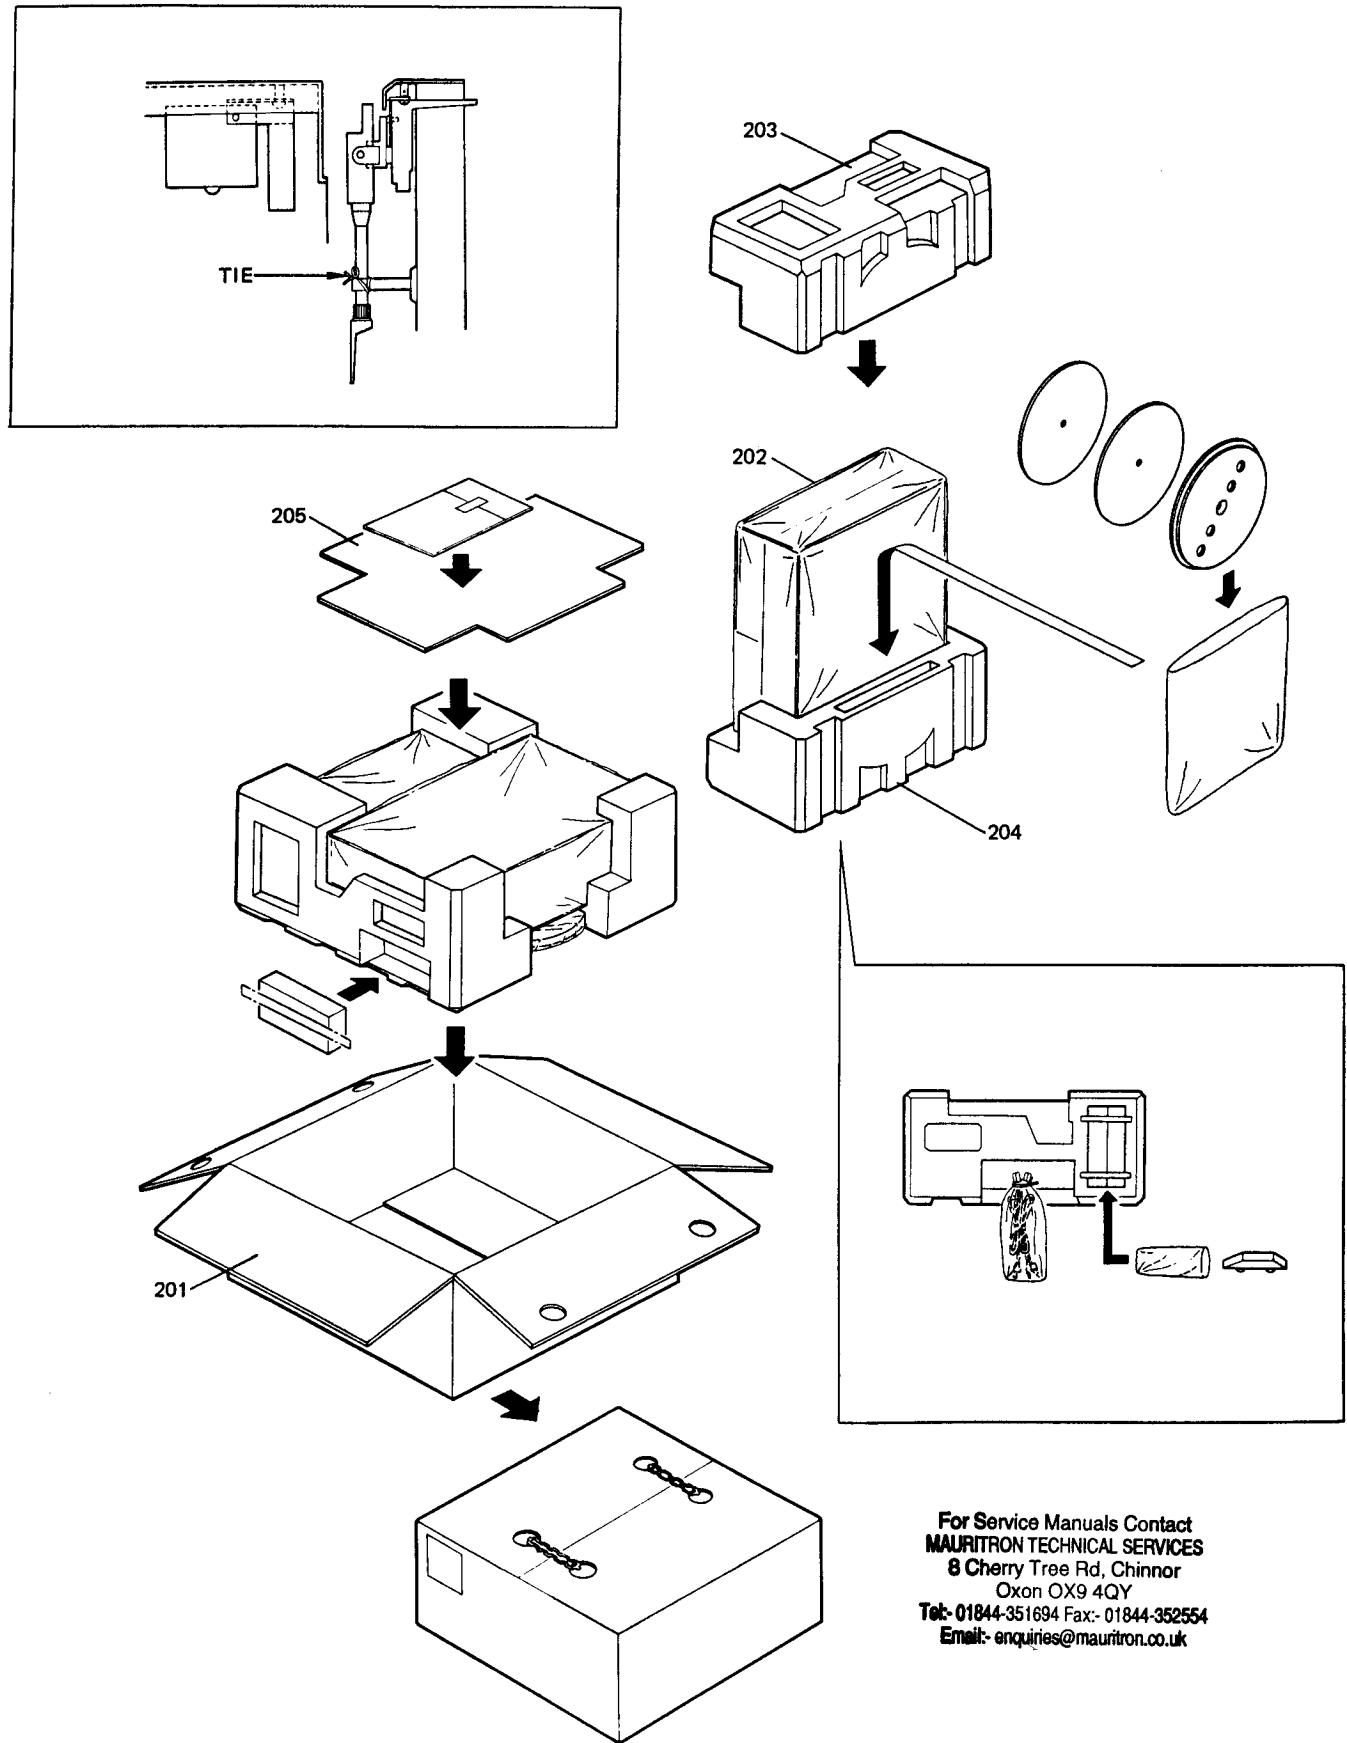

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk