

**NAD** **SERVICE**  
**MANUAL**

**MONITOR SERIES**

**4300**  
**STEREO TUNER**

# NAD 4300 SERVICE MANUAL

NOTE: This manual covers all versions.

A: U.S.A.

A1: Canada

B: U.K.

B1: Australia


C: EUROPE and others

C1: W-Germany

| TABLE OF CONTENTS                | PAGE  |
|----------------------------------|-------|
| LOCATION MAP                     | 2     |
| SPECIFICATION                    | 3     |
| INTERNAL VIEW                    | 4     |
| SUGGESTED INSTRUMENTATION HOOKUP | 5     |
| FM ALIGNMENTS                    | 6-9   |
| AM ALIGNMENTS                    | 10-11 |
| WIRING DIAGRAM                   | 12-13 |
| P.C.B. LAYOUT DIAGRAM            | 14-15 |
| SCHEMATIC DIAGRAM                | 16-17 |
| EXPLODED VIEW PARTS LIST         | 18-19 |
| EXPLODED VIEW                    | 20    |
| ELECTRICAL PARTS LIST            | 21-23 |


**REAR PANEL**

- 1. AM Rod Antenna.
- 2. AM Antenna Terminals.
- 3. FM Antenna Input.
- 4. Output Level Control.
- 5. Output Jacks.
- 6. AC Convenience Outlet (not in U.K. model).
- 7. AC Line Cord.

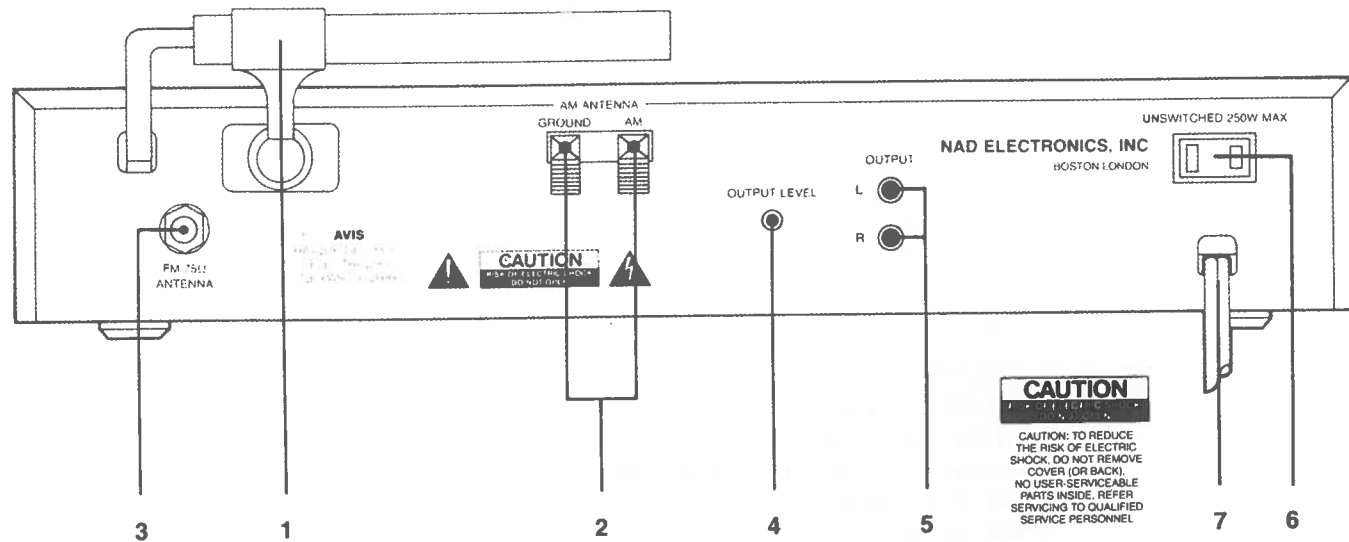

**FRONT PANEL**

- 1. Power.
- 2. Station Pre-sets.
- 3. Memory Enter.
- 4. Tuning Display.
- 5. FM Stereo Indicator.
- 6. IF Narrow Indicator.
- 7. AM/FM.
- 8. IF Narrow.
- 9. FM NR Off.
- 10. Mono.
- 11. Tuning.

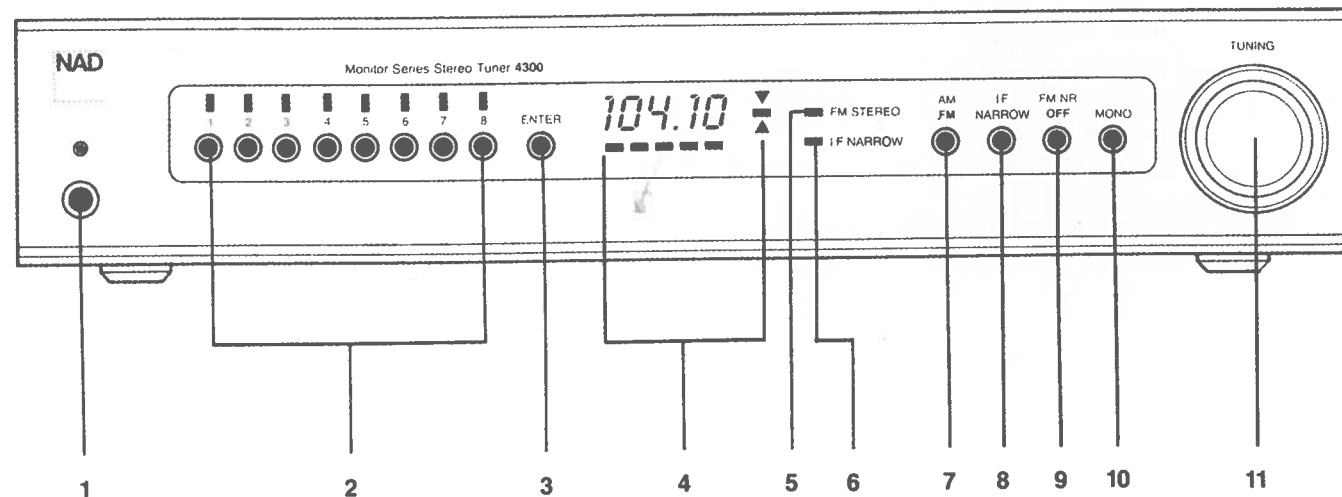

**SPECIFICATIONS**

FM Tuner Section

|                                   |                       |  |                   |
|-----------------------------------|-----------------------|--|-------------------|
| Input sensitivity (300 Ω)         | Mono, -30 dB THD + N: | All versions except USA.<br>50 μsec. de-emphasis | USA version only. |
|                                   | Mono, 50 dB S/N:      | 0.83 μV  | 75 μsec.          |
|                                   | Stereo, 50 dB S/N:    | 1.3 μV   | 0.8 μV            |
|                                   | Mono, 60 dB S/N:      | 14.5 μV  | 1.0 μV            |
|                                   | Stereo, 60 dB S/N:    | 3.2 μV   | 13 μV             |
|                                   |                       | 48 μV  | 2.5 μV            |
|                                   |                       |  | 42 μV             |
| Capture ratio at 25, 45 & 65 dBf. |                       | < 2.1 dB.  | < 2.1 dB.         |
| AM rejection.                     |                       | > 70 dB.   | > 70 dB.          |
| Selectivity                       | Alternate channel:    | 76 dB.   | 76 dB.            |
|                                   | Adjacent channel:     | 8 dB.  | 8 dB.             |
| Image rejection.                  |                       | 110 dB.  | 110 dB.           |
| R. F. intermodulation.            |                       | 73 dB.   | 73 dB.            |
| I. F. rejection.                  |                       | 102 dB.  | 102 dB.           |
| SCA rejection.                    |                       | 80 dB.   | 80 dB.            |
| Pilot suppression (19 + 38 kHz).  |                       | 69 dB.   | 72 dB.            |
| THD at 100 % modulation,          |                       | 1 kHz  | 100 Hz - 6 kHz    |
|                                   | Mono:                 | 0.08 %   | 0.15 %            |
|                                   | Stereo:               | 0.07 %   | 0.35 %            |
|                                   |                       | 1 kHz  | 100 Hz - 6 kHz    |
|                                   | Mono:                 | 0.07 %   | 0.15 %            |
|                                   | Stereo:               | 0.05 %   | 0.35 %            |
| S/N ratio, A-weighted, 65 dBf.    |                       | Mono: 84 dB.                                     | 85 dB.            |
|                                   |                       | Stereo: 77 dB.                                   | 78 dB.            |
| Frequency response, 15 - 15 kHz.  |                       | ± 0.5 dB.  | ± 0.5 dB.         |
| Stereo separation (FM NR off),    |                       | 1 kHz: 50 dB.                                    | 50 dB.            |
|                                   |                       | 30 Hz - 15 kHz: 35 dB.                           | 35 dB.            |


AM Tuner Section

|                     |                   |                    |
|---------------------|-------------------|--------------------|
| Usable sensitivity. | 250 μV/meter.     | 250 μV/meter.      |
| Selectivity.        | 55 dB. at ± 9 kHz | 60 dB. at ± 10 kHz |
| Image rejection.    | 45 dB.            | 45 dB.             |



Physical Specifications

|                                     |  |
|-------------------------------------|--|
| Dimensions (width x height x depth) | 43.5 x 8.7 x 29.3 cm.                          |
|                                     | 17.1 x 3.4 x 11.5 in.                          |
| Net weight                          | 4.55 Kg./10 lb.                                |
| Shipping weight                     | 5.75 Kg./12 lb. 10 oz.                         |
| Power requirements                  | 50/60 Hz at 110, 120, 220 or 240 VAC.<br>24 W. |


# INTERNAL VIEW

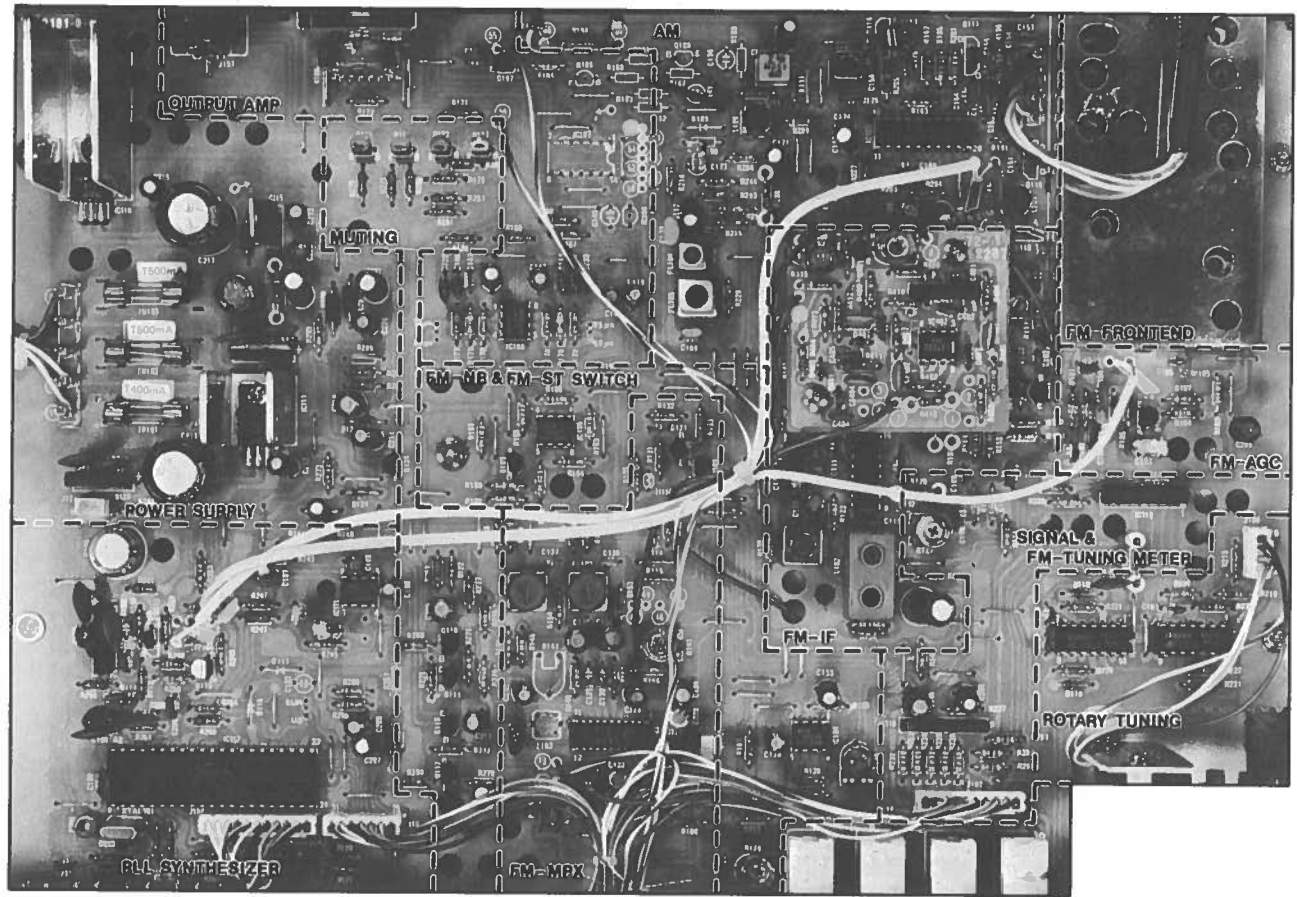


## SUGGESTED INSTRUMENTATION HOOKUP

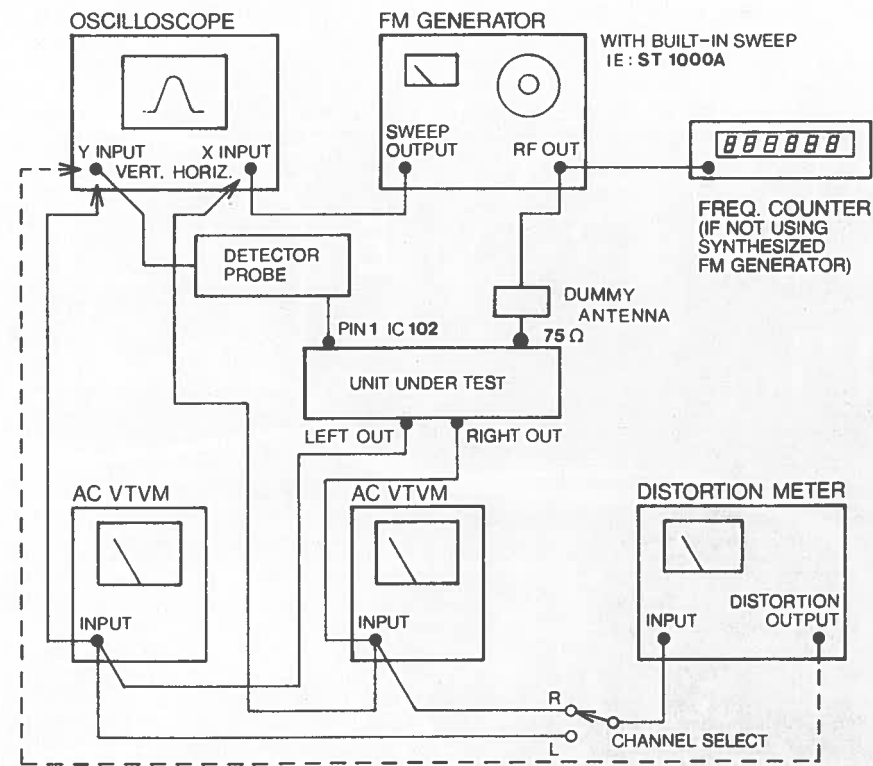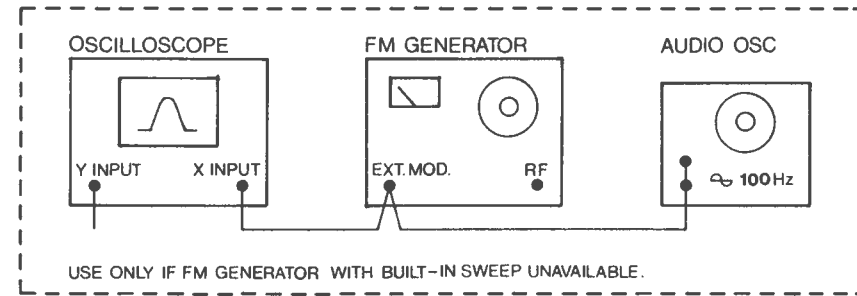

**SCHEMATIC DIAGRAM OF DETECTOR PROBE**

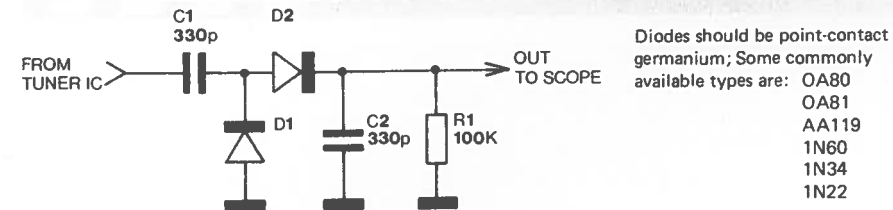

**PICTORIAL DIAGRAM OF DETECTOR PROBE**

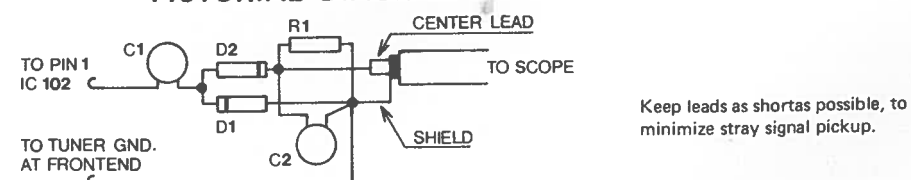

## FM ALIGNMENT

### NECESSARY INSTRUMENTATION

- FM Generator (less than 0.05% THD.)
- Stereo Modulator (less than 0.05% THD., more than 50dB Sep.)
- Audio Generator (not necessary if FM Generator has built-in sweep, e.g., SOUND TECHNOLOGY ST 1000A and ST 1020A)
- AC VTVM's (or one with a Left/Right switch)
- THD Analyzer (resolution less than 0.1%)
- Oscilloscope (5mV or better sensitivity, X input capability)
- Frequency Counter
- VOM or DMM (high impedance, must read in mV)
- 75 ohm Dummy Antenna

### IMPORTANT

- 1) Before alignments commence, release IF NARROW and MONO switches (out), Switch FM NR off (in).
- 2) IF FM Generator is not synthesizer-type, be sure to check its frequency with FREQ counter when adjusting detector and multiplex decoder circuits.

#### A. SYNTHESIZER FREQUENCY

1. Connect Frequency Counter between TP-104 and ground.
2. Tune to 98MHz (No RF input needed).
3. Adjust C-201 so that the local oscillator frequency shown by the frequency counter reads 108.700MHz.  
TOLERANCE: 108.700MHz +/- 2KHz

#### B. FRONT-END ALIGNMENTS

Alignment of the front-end should only be necessary after repair to the front-end or crystal oscillator circuits.

##### a) TUNING VOLTAGE

It is essential to check tuning voltage before aligning the rest of front-end.

1. Connect DMM between TP-105 and ground.
2. Tune to 88MHz, and adjust L-6 if the voltage is incorrect.  
TOLERANCE: 3.6V +/- 0.5V.
3. Tune to 108MHz and confirm that the voltage is within the following specification.  
SPECIFICATION: 21-25V.

##### b) TRACKING

1. Connect FM Generator (150KHz sweep, 100µV output) to 75ohm antenna input and Detector Probe to Pin 1 of IC 102 with ground to the tunershield.
2. Set tuner to 106MHz, enter into Preset 8, and tune the generator so that curve appears on Oscilloscope.
3. Adjust C-2, C-9, C-11 and C-14 for maximum curve height on the oscilloscope while reducing RF input to keep entire curve on display.
4. Set tuner to 90MHz, enter into Preset 1, and tune the generator so that curve appears on the oscilloscope.
5. Adjust L-1, L-2, L-3 and L-4 for maximum curve height.
6. Repeat above steps 2, 3, 4 and 5 (use Preset 1 and 8) till both frequencies are at maximum curve height.

### C. IF ADJUSTMENT

1. Set tuner to 98MHz approx. (the tuner must be tuned to an unoccupied frequency), and tune FM Generator to display a curve on Oscilloscope.
2. Adjust L-5 and L-101 for maximum and symmetrical output curve on the oscilloscope display, using as little input as possible.

### D. DETECTOR ALIGNMENT

1. Disconnect Detector Probe from tuner and Oscilloscope, and connect tuner output to the oscilloscope and Distortion Analyzer.
2. Connect DMM across TP-101 (-) and TP-102 (+).
3. Tune to 98MHz and feed 1mV from FM Generator (Modulate 1KHz 100%) to 75ohm antenna input.
4. Adjust L-102 Secondary for lowest THD.

SPECIFICATION: less than 0.12% (in MONO).

5. Adjust L-102 Primary for 0V reading on DMM.

TOLERANCE:  $\pm 50$ mV.

6. Repeat above steps 4 & 5 till no further improvements.

### E. SIGNAL METER LEVEL

1. Tune to 98MHz and feed  $5\mu$ V from FM Generator to 75ohm antenna input.
2. Adjust R-127 so that the second LED of signal strength indicator is just lit up.

### F. STEREO SWITCHING THRESHOLD

1. Modulate FM Generator 1KHz 100% Left only, plus 19KHz pilot 8-10%.
2. Increase FM Generator level upwards from 0 and adjust R-126 so that stereo light turns on and audio outputs, as watched on VTVM's and Oscilloscope, switches to one channel only at  $5\mu$ V input level.

TOLERANCE:  $+3\mu$ V.

Note that, when turning input level down, the unit will switch into mono at a lower level, typically  $3.5\mu$ V.

### G. STEREO DISTORTION AND SEPARATION (WIDE/NARROW IF BANDWIDTH)

1. Tune to 98MHz and feed 1mV from FM Generator to 75ohm antenna input.
2. Modulate Left (or Right) channel only, and adjust L-5 and L-101 slightly, so that the distortion on Left (or Right) channel becomes minimum.
3. Check distortion at stereo operation under wide IF band-width.

SPECIFICATION: less than 0.12%, stereo L+R.  
less than 0.08%, stereo L only.  
less than 0.08%, stereo R only.  
less than 0.08%, stereo L-R.

4. Next, switch IF NARROW button (in) and check distortion under stereo signal input.

SPECIFICATION: less than 0.8%, stereo L only.  
less than 0.8%, stereo R only.  
less than 0.8%, stereo L-R.

5. Reset IF bandwidth to wide position again and modulate Left channel only. Adjust R-141 for minimum output on Right channel VTVM and oscilloscope.

Next, modulate Right channel only and adjust R-141 for minimum output on Left channel VTVM and oscilloscope.

If the leak outputs on opposite channels are different, readjust R-141 so that readings become same in both channels.

6. Check and confirm that separation under wide IF bandwidth is within the following specification.

SPECIFICATION: more than 50dB.

7. Switch IF NARROW button (in), and modulate Left (or Right) channel only. Adjust R-403 for minimum output on Right (or Left) channel VTVM and oscilloscope.

If the leak outputs on opposite channels are different, readjust R-403 so that readings become same in both left and right channels.

8. Check separation under narrow IF bandwidth and confirm it is within the following specification.

SPECIFICATION: more than 40dB.


### H. FM NR CIRCUIT

Confirm that FM NR button is at OFF position (in), at first.

1. Tune to 98MHz and feed 1mV with 100% modulation into 75ohm antenna input and set reference for S/N measurement.

With reference set, cancell the stereo modulation and leave pilot tone only.

2. Adjust the attenuator of FM Generator so that S/N ratio reads 50dB.
3. Switch FM NR on, and adjust R-148 so that S/N is improved by 8dB.
4. Switch FM NR off, and adjust attenuator of FM Generator so that S/N ratio reads 60dB.
5. Switch FM NR on, and confirm that S/N is improved by approx. 2dB.

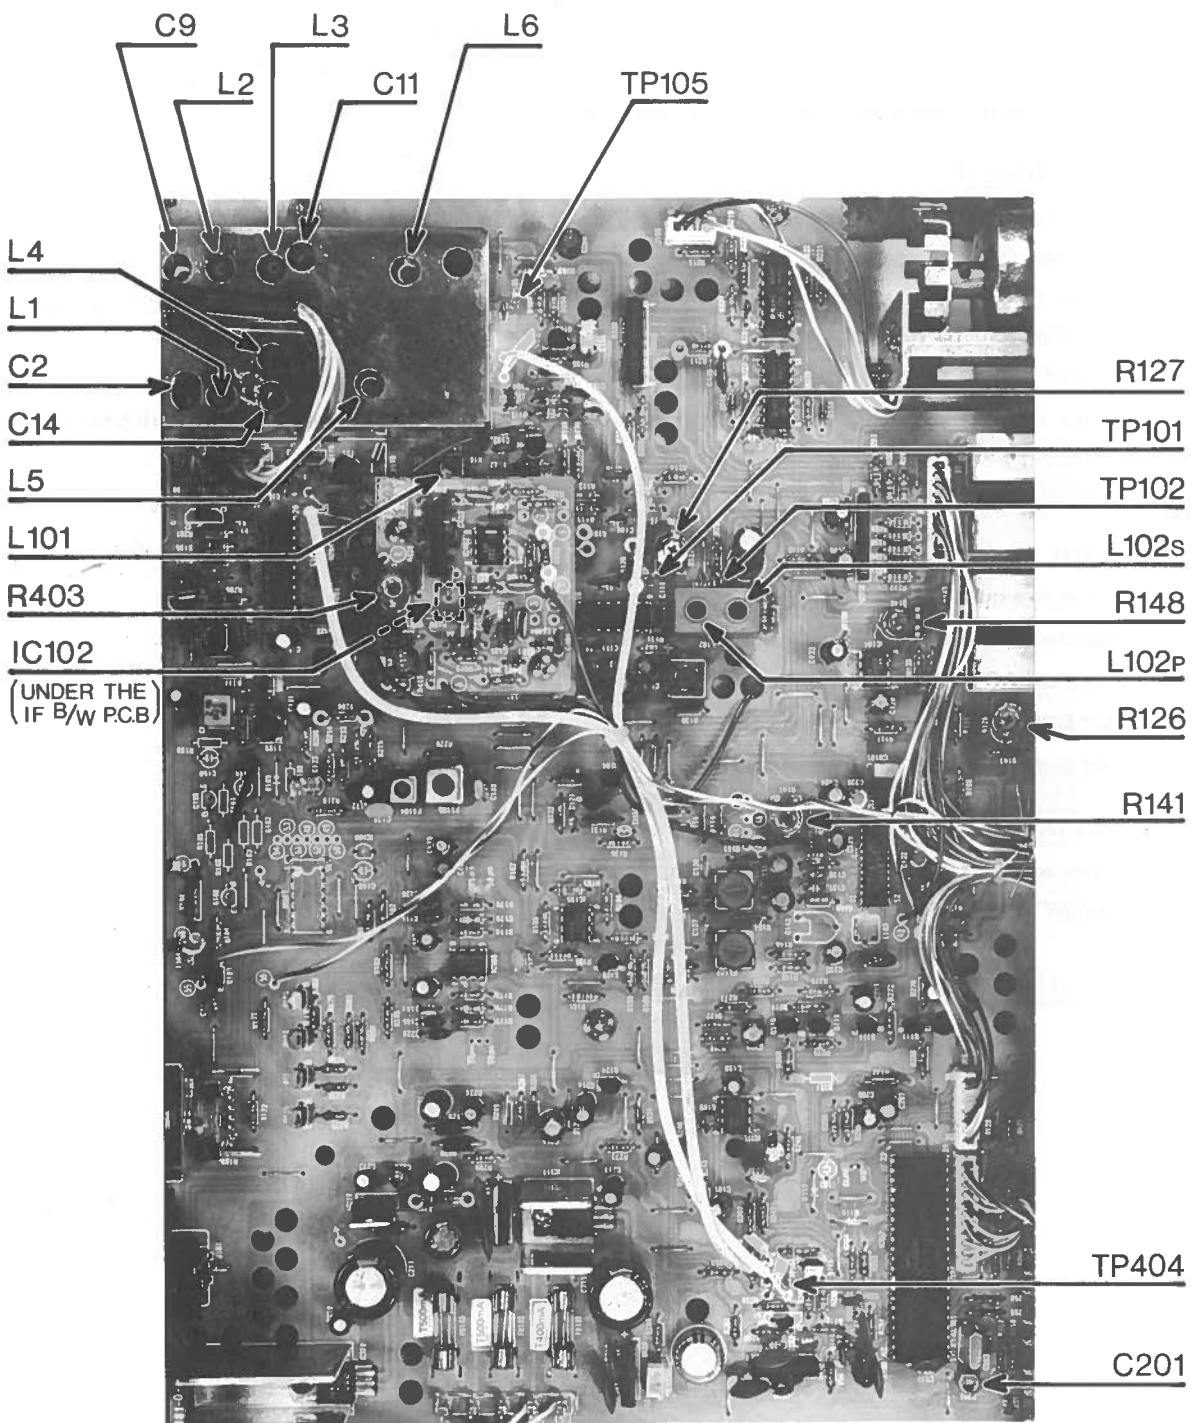

## AM ALIGNMENTS

### A OSCILLATOR.

- 1 Connect DMM to TP-103 and ground.
- 2 Tune to 1710 kHz. Enter into preset 1. Adjust C-158 for reading of  $31 \pm 0.5$  VDC.
- 3 Tune to 520 kHz. Enter into preset 2. Adjust L-105 for reading of  $1.8 \pm 0.1$  VDC.
- 4 Repeat above steps 2 and 3 until within tolerances.

### B ANTENNA, IF


- 1 Swing antenna away from chassis.
- 2 Connect DC voltmeter to centertap, R-210 and ground.
- 3 Tune to station of moderate strength, near 600 kHz. Enter into Preset 3. Adjust L-901 for maximum reading on meter (Use non-interactive tool, such as plastic or wooden stick).
- 4 Adjust L-106 and L-107 for maximum reading on meter.
- 5 Tune to a station of moderate strength near 1400 kHz. Enter into Preset 4. Adjust C-153 for maximum reading on meter.
- 6 Repeat above steps 3 and 5 until no further improvement is seen.

### C 9 kHz, 10 kHz WHISTLE FILTERS

- 1 Tune to a quiet spot (a clear frequency).
- 2 Connect audio oscillator to base, Q-112 (isolate with 0.1 - 1.0  $\mu$ F capacitor).
- 3 Connect AC VTVM (or Scope) to R-220 and ground.
- 4 Set audio oscillator to 10 kHz ( $\pm 50$  Hz) 1 V. Adjust FL-104 for minimum meter reading.
- 5 Set audio oscillator to 9 kHz ( $\pm 50$  Hz) 1 V. Adjust FL-105 for minimum meter reading.

### D SIGNAL METER


- 1 Tune to 1,000 kHz and feed 2.5 mV to the antenna terminals.
- 2 Adjust R-210 so that the fifth LED of signal strength meter lights up.

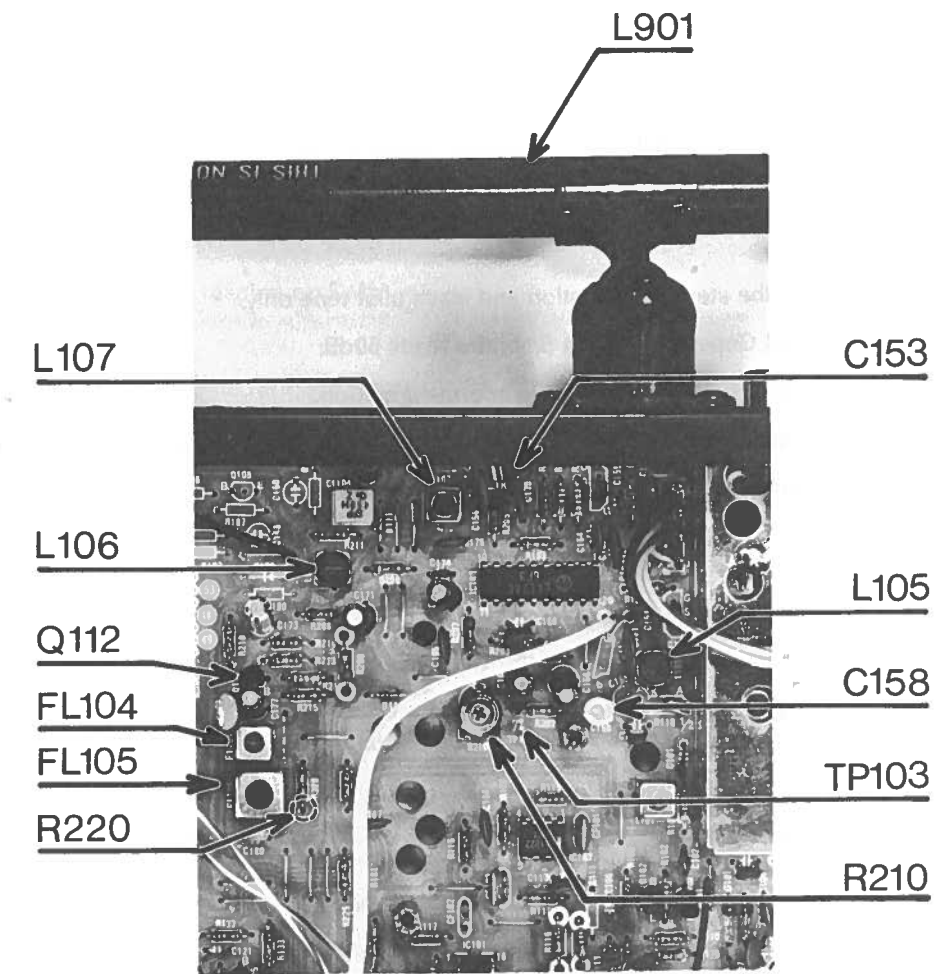




# WIRING DIAGRAM

(A & A1 Versions, 120V AC with AC outlet)

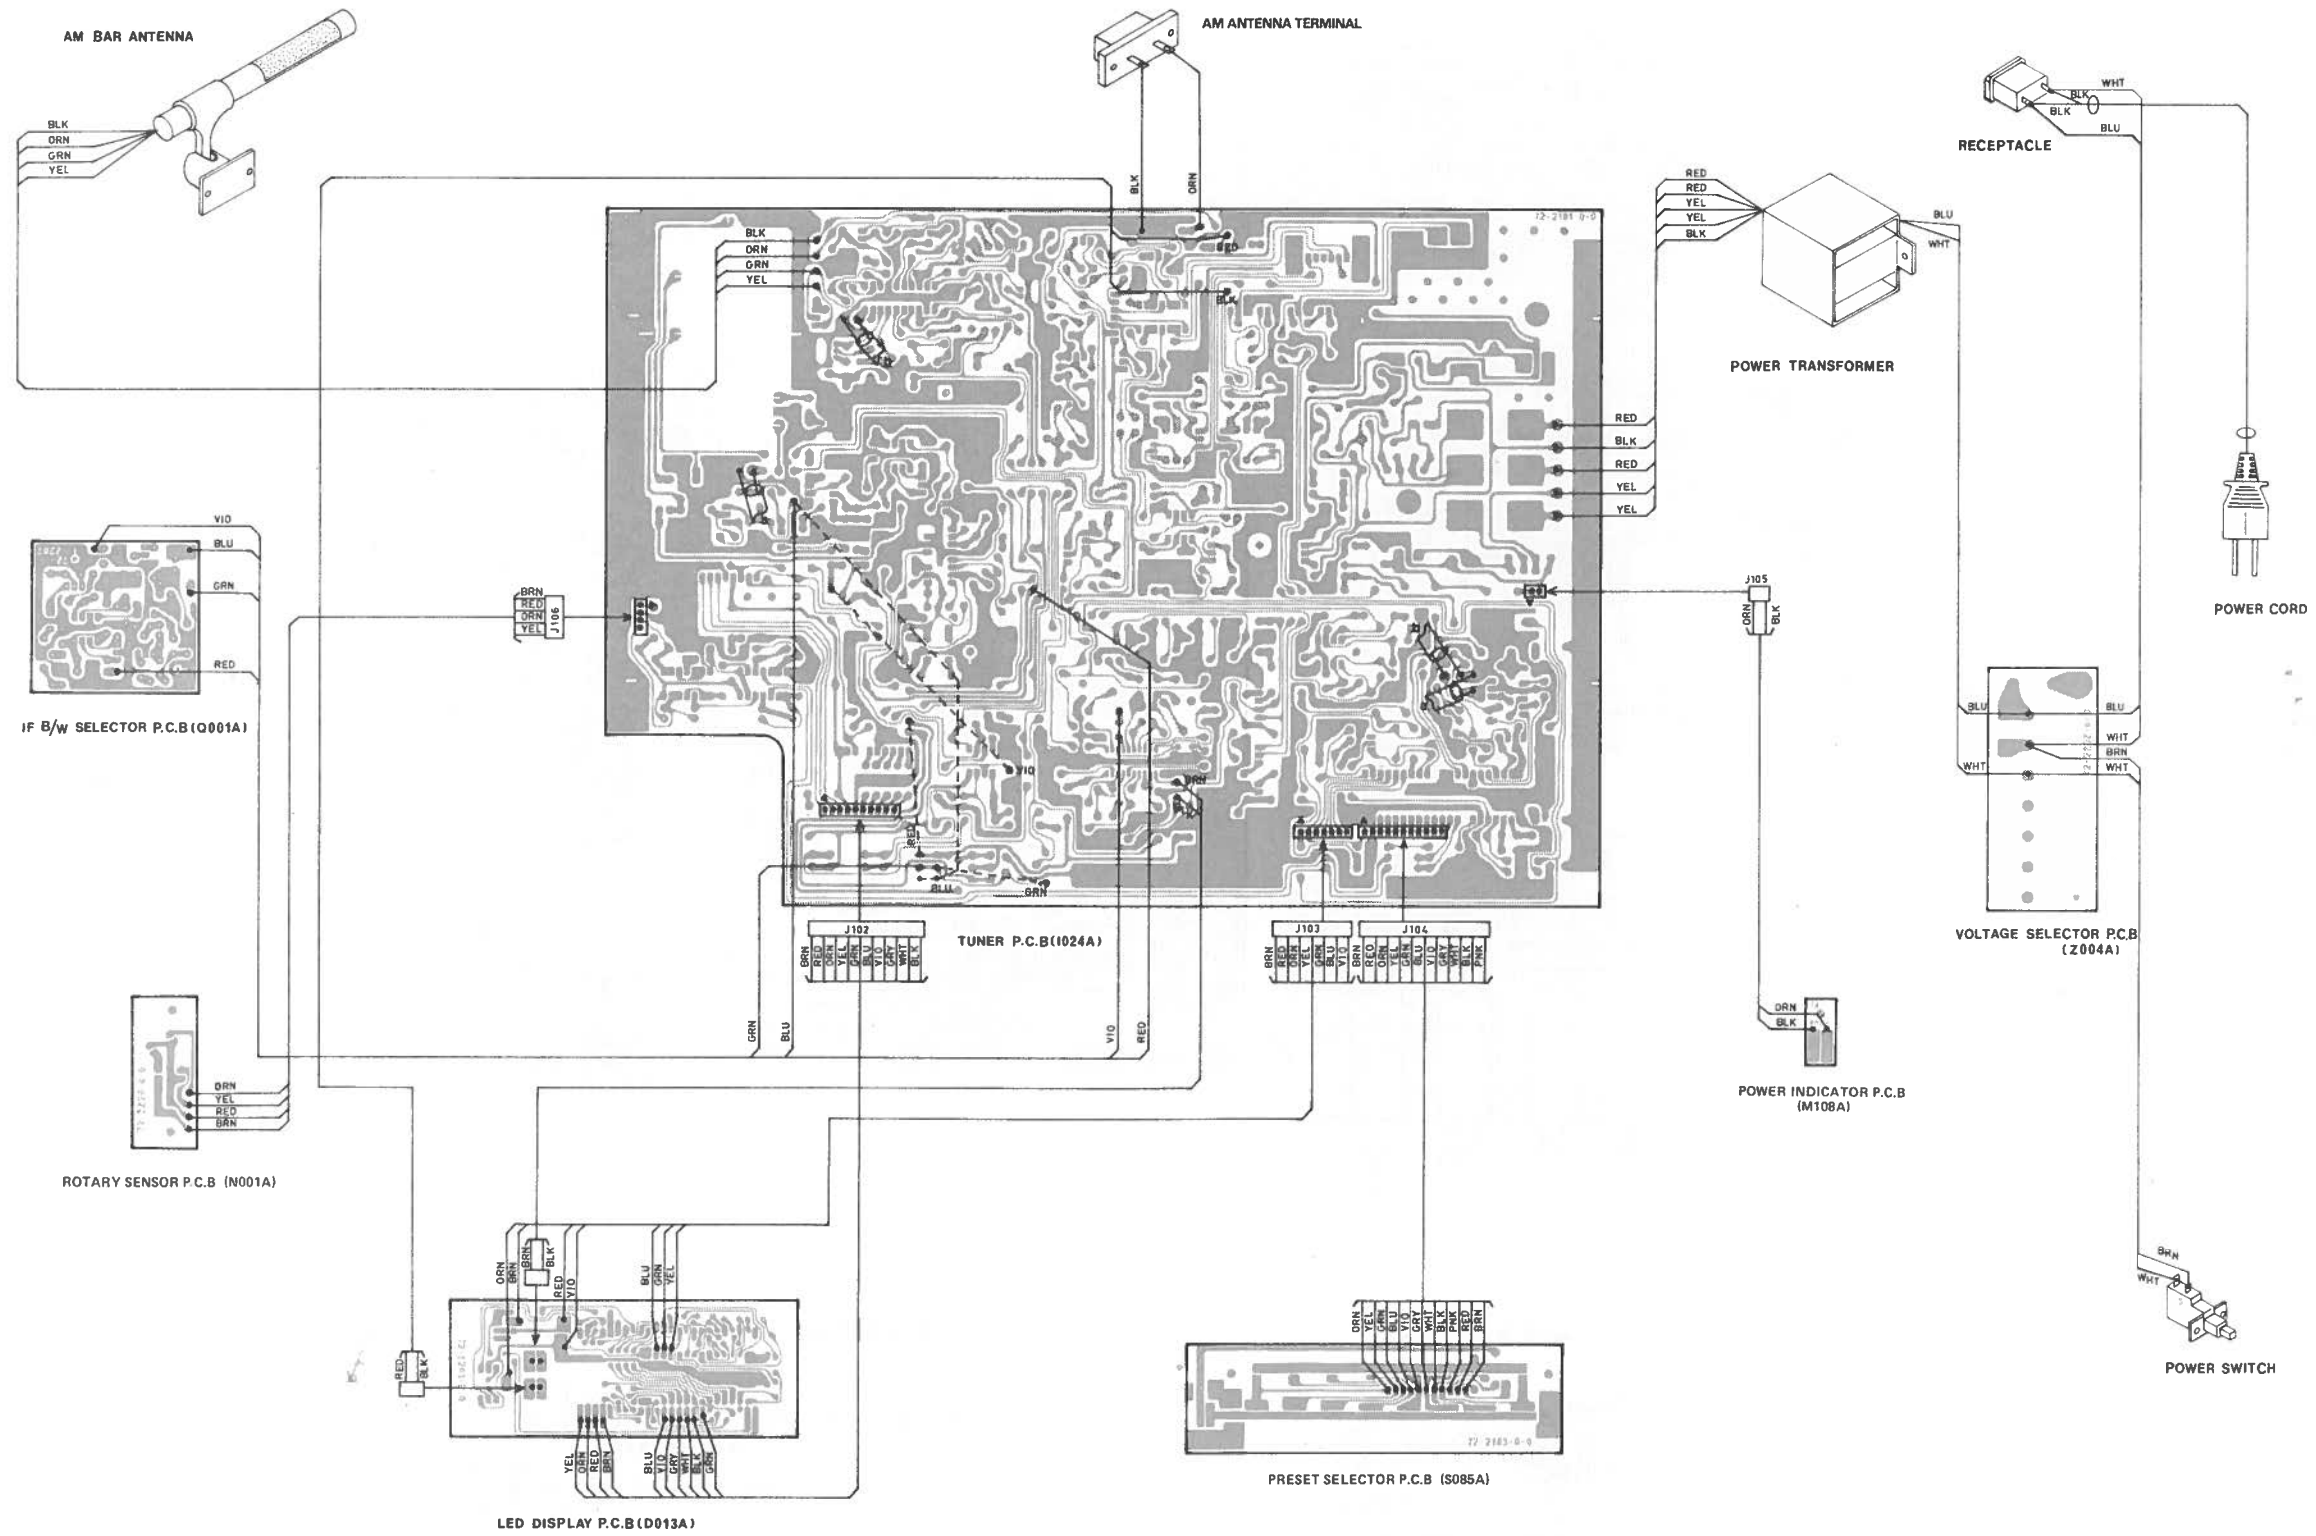


# WIRING DIAGRAM

(B, B1, C & C1 Versions, 220/240V AC less AC outlet)

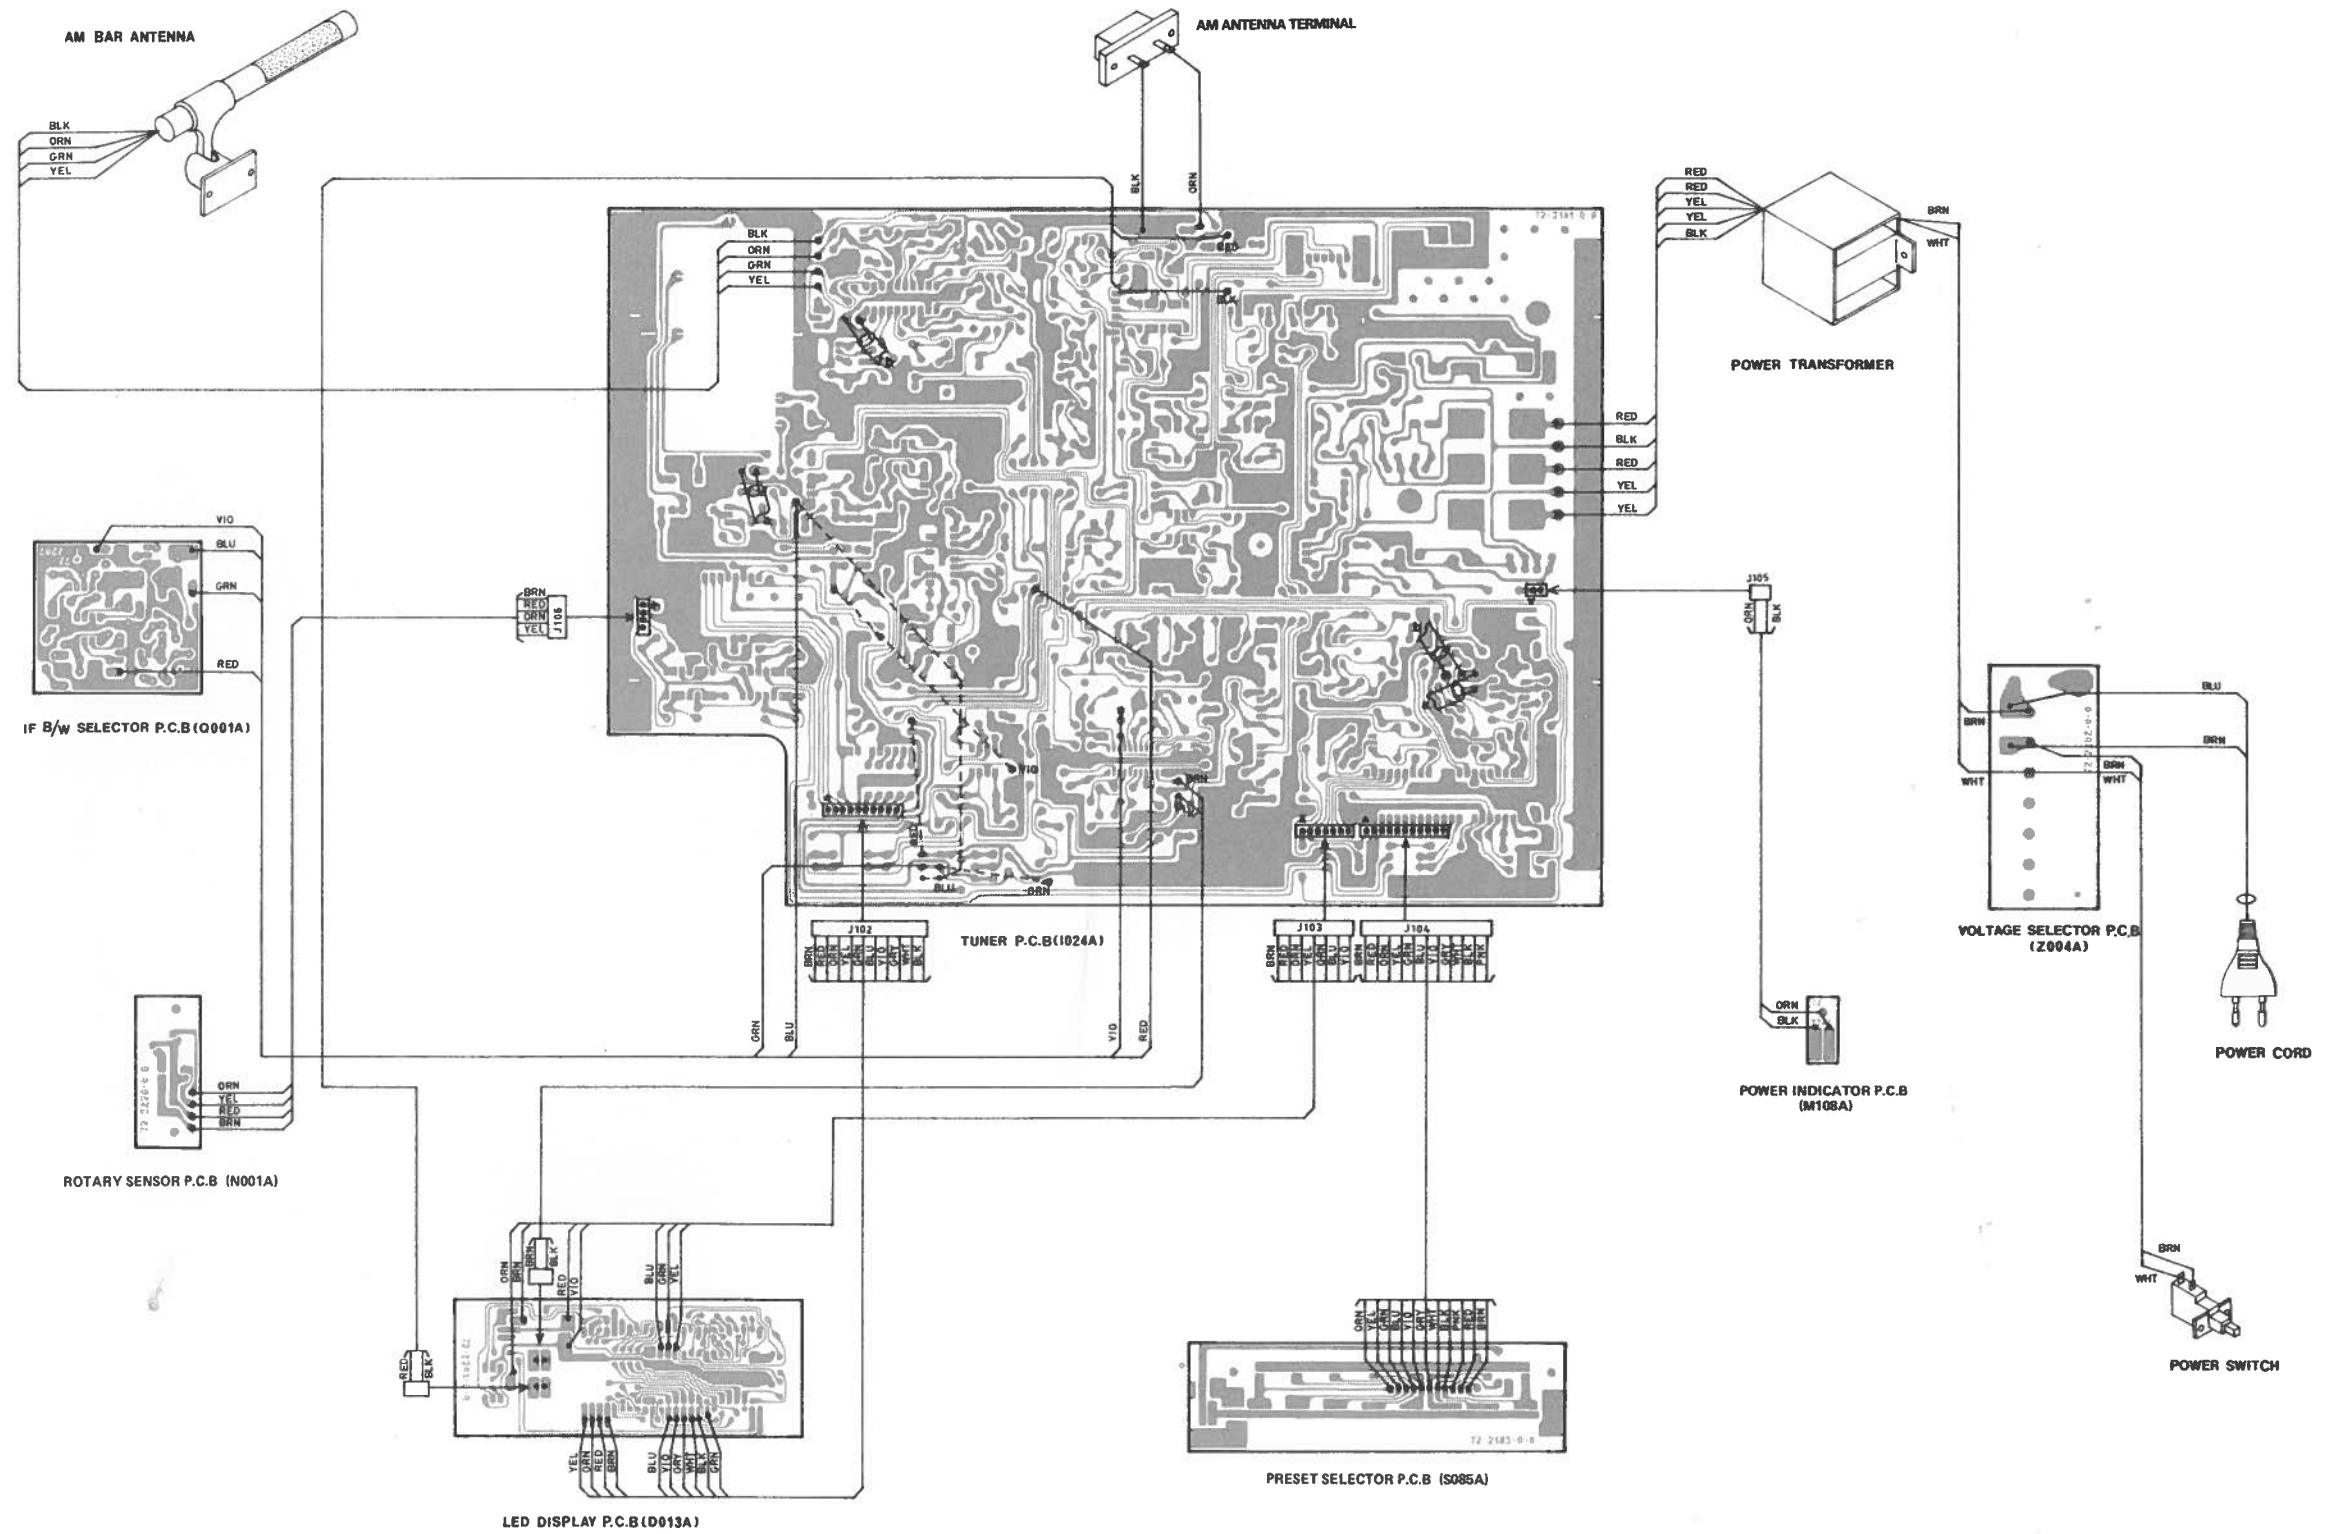


# P.C.B. LAYOUT DIAGRAM

FM FRONTEND P.C.B. ASS'Y  
(F109A)

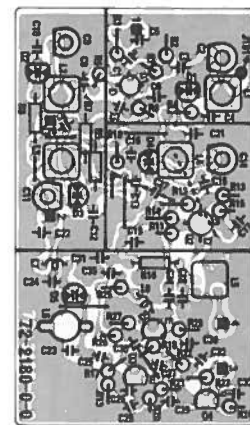


IF B/W SELECTOR P.C.B. ASS'Y  
(Q001A)

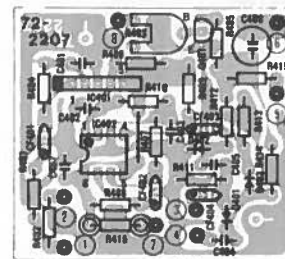


ROTARY SENSOR P.C.B. ASS'Y  
(N001A)




TUNER P.C.B. ASS'Y (I024A)

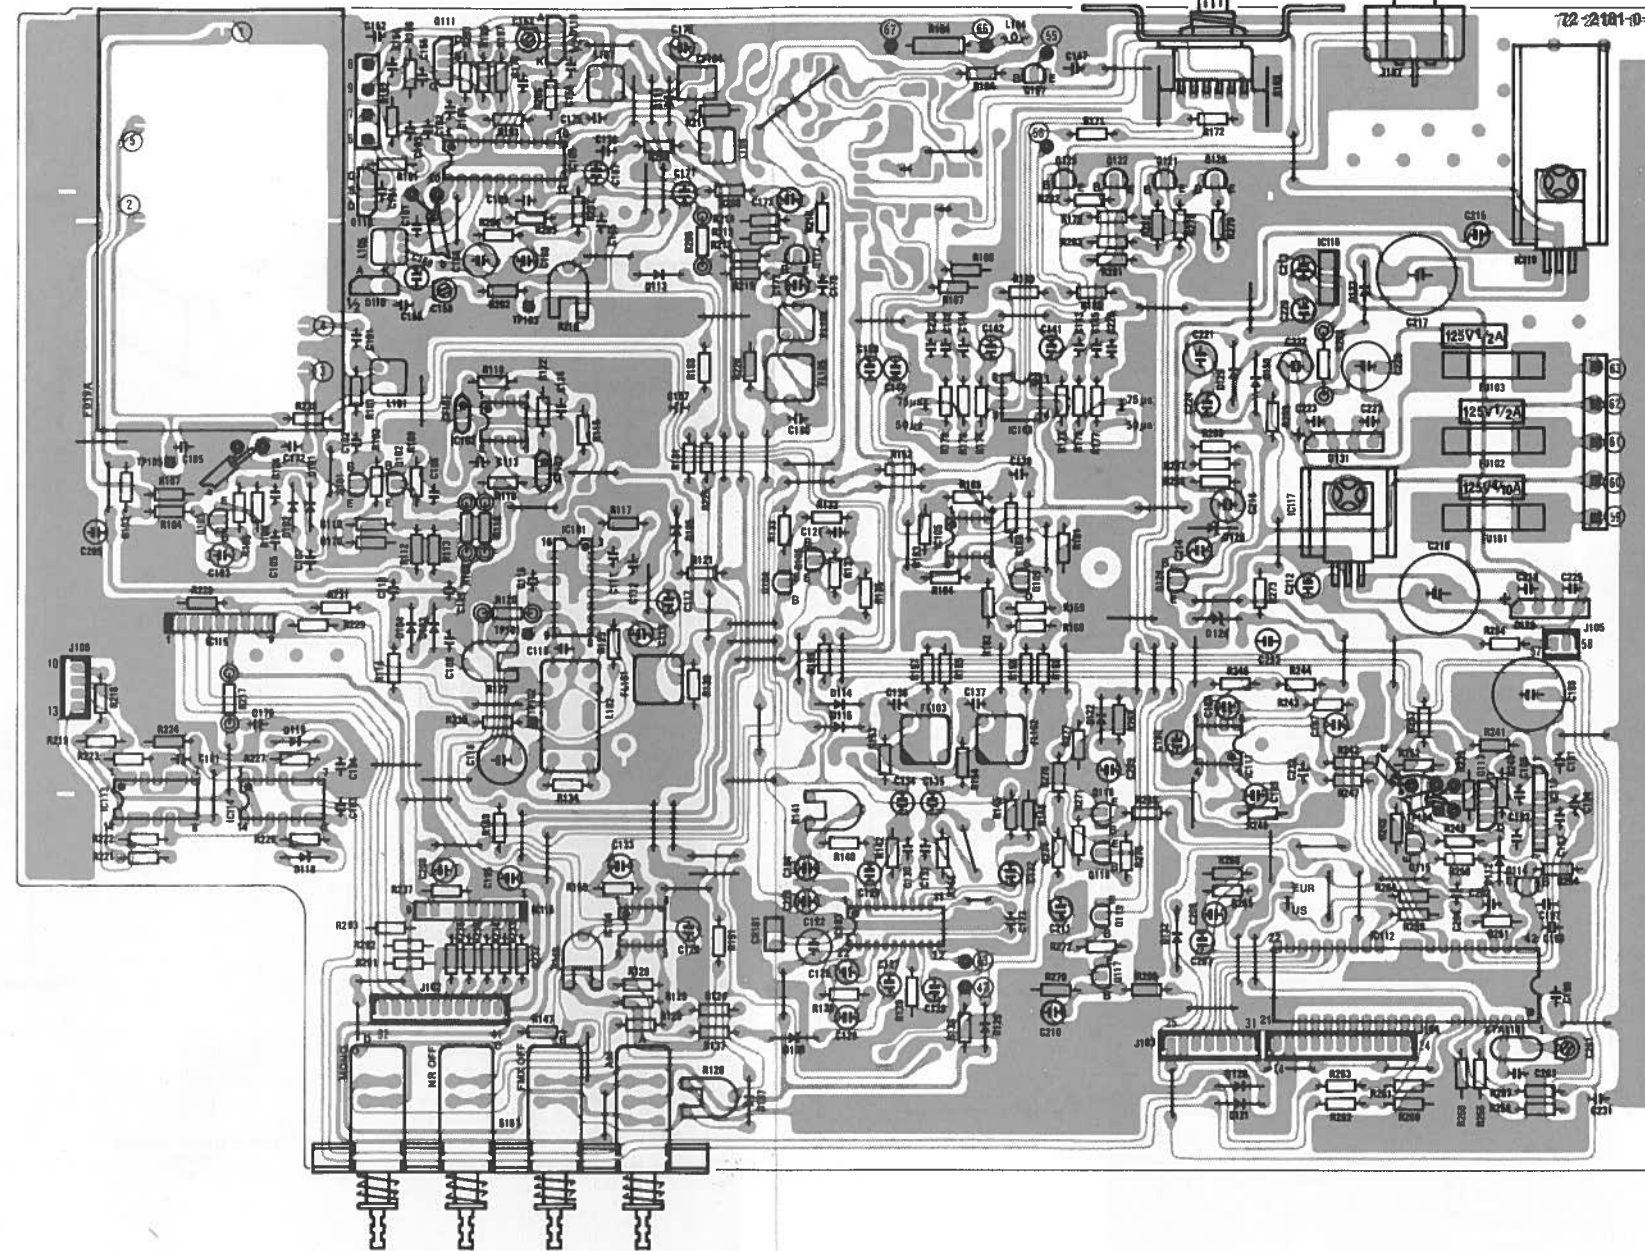


LED DISPLAY P.C.B. ASS'Y (D013A)

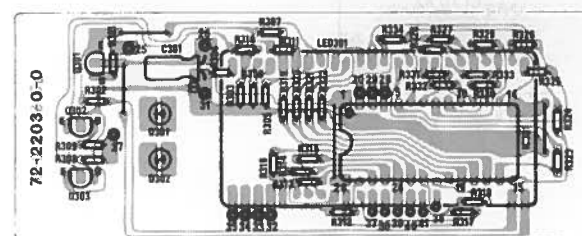

PRESET SELECTOR P.C.B. ASS'Y (S085A)

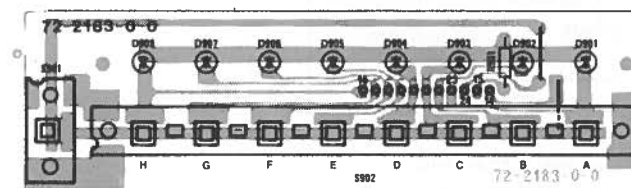


VOLTAGE SELECTOR P.C.B. ASS'Y  
(Z004A)

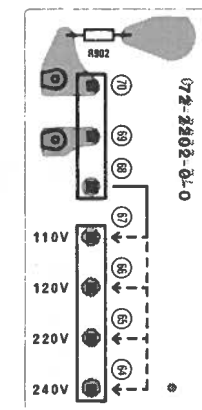

POWER INDICATOR  
P.C.B. ASS'Y  
(M108A)



# SCHEMATIC DIAGRAM NAD 4300 TUNER

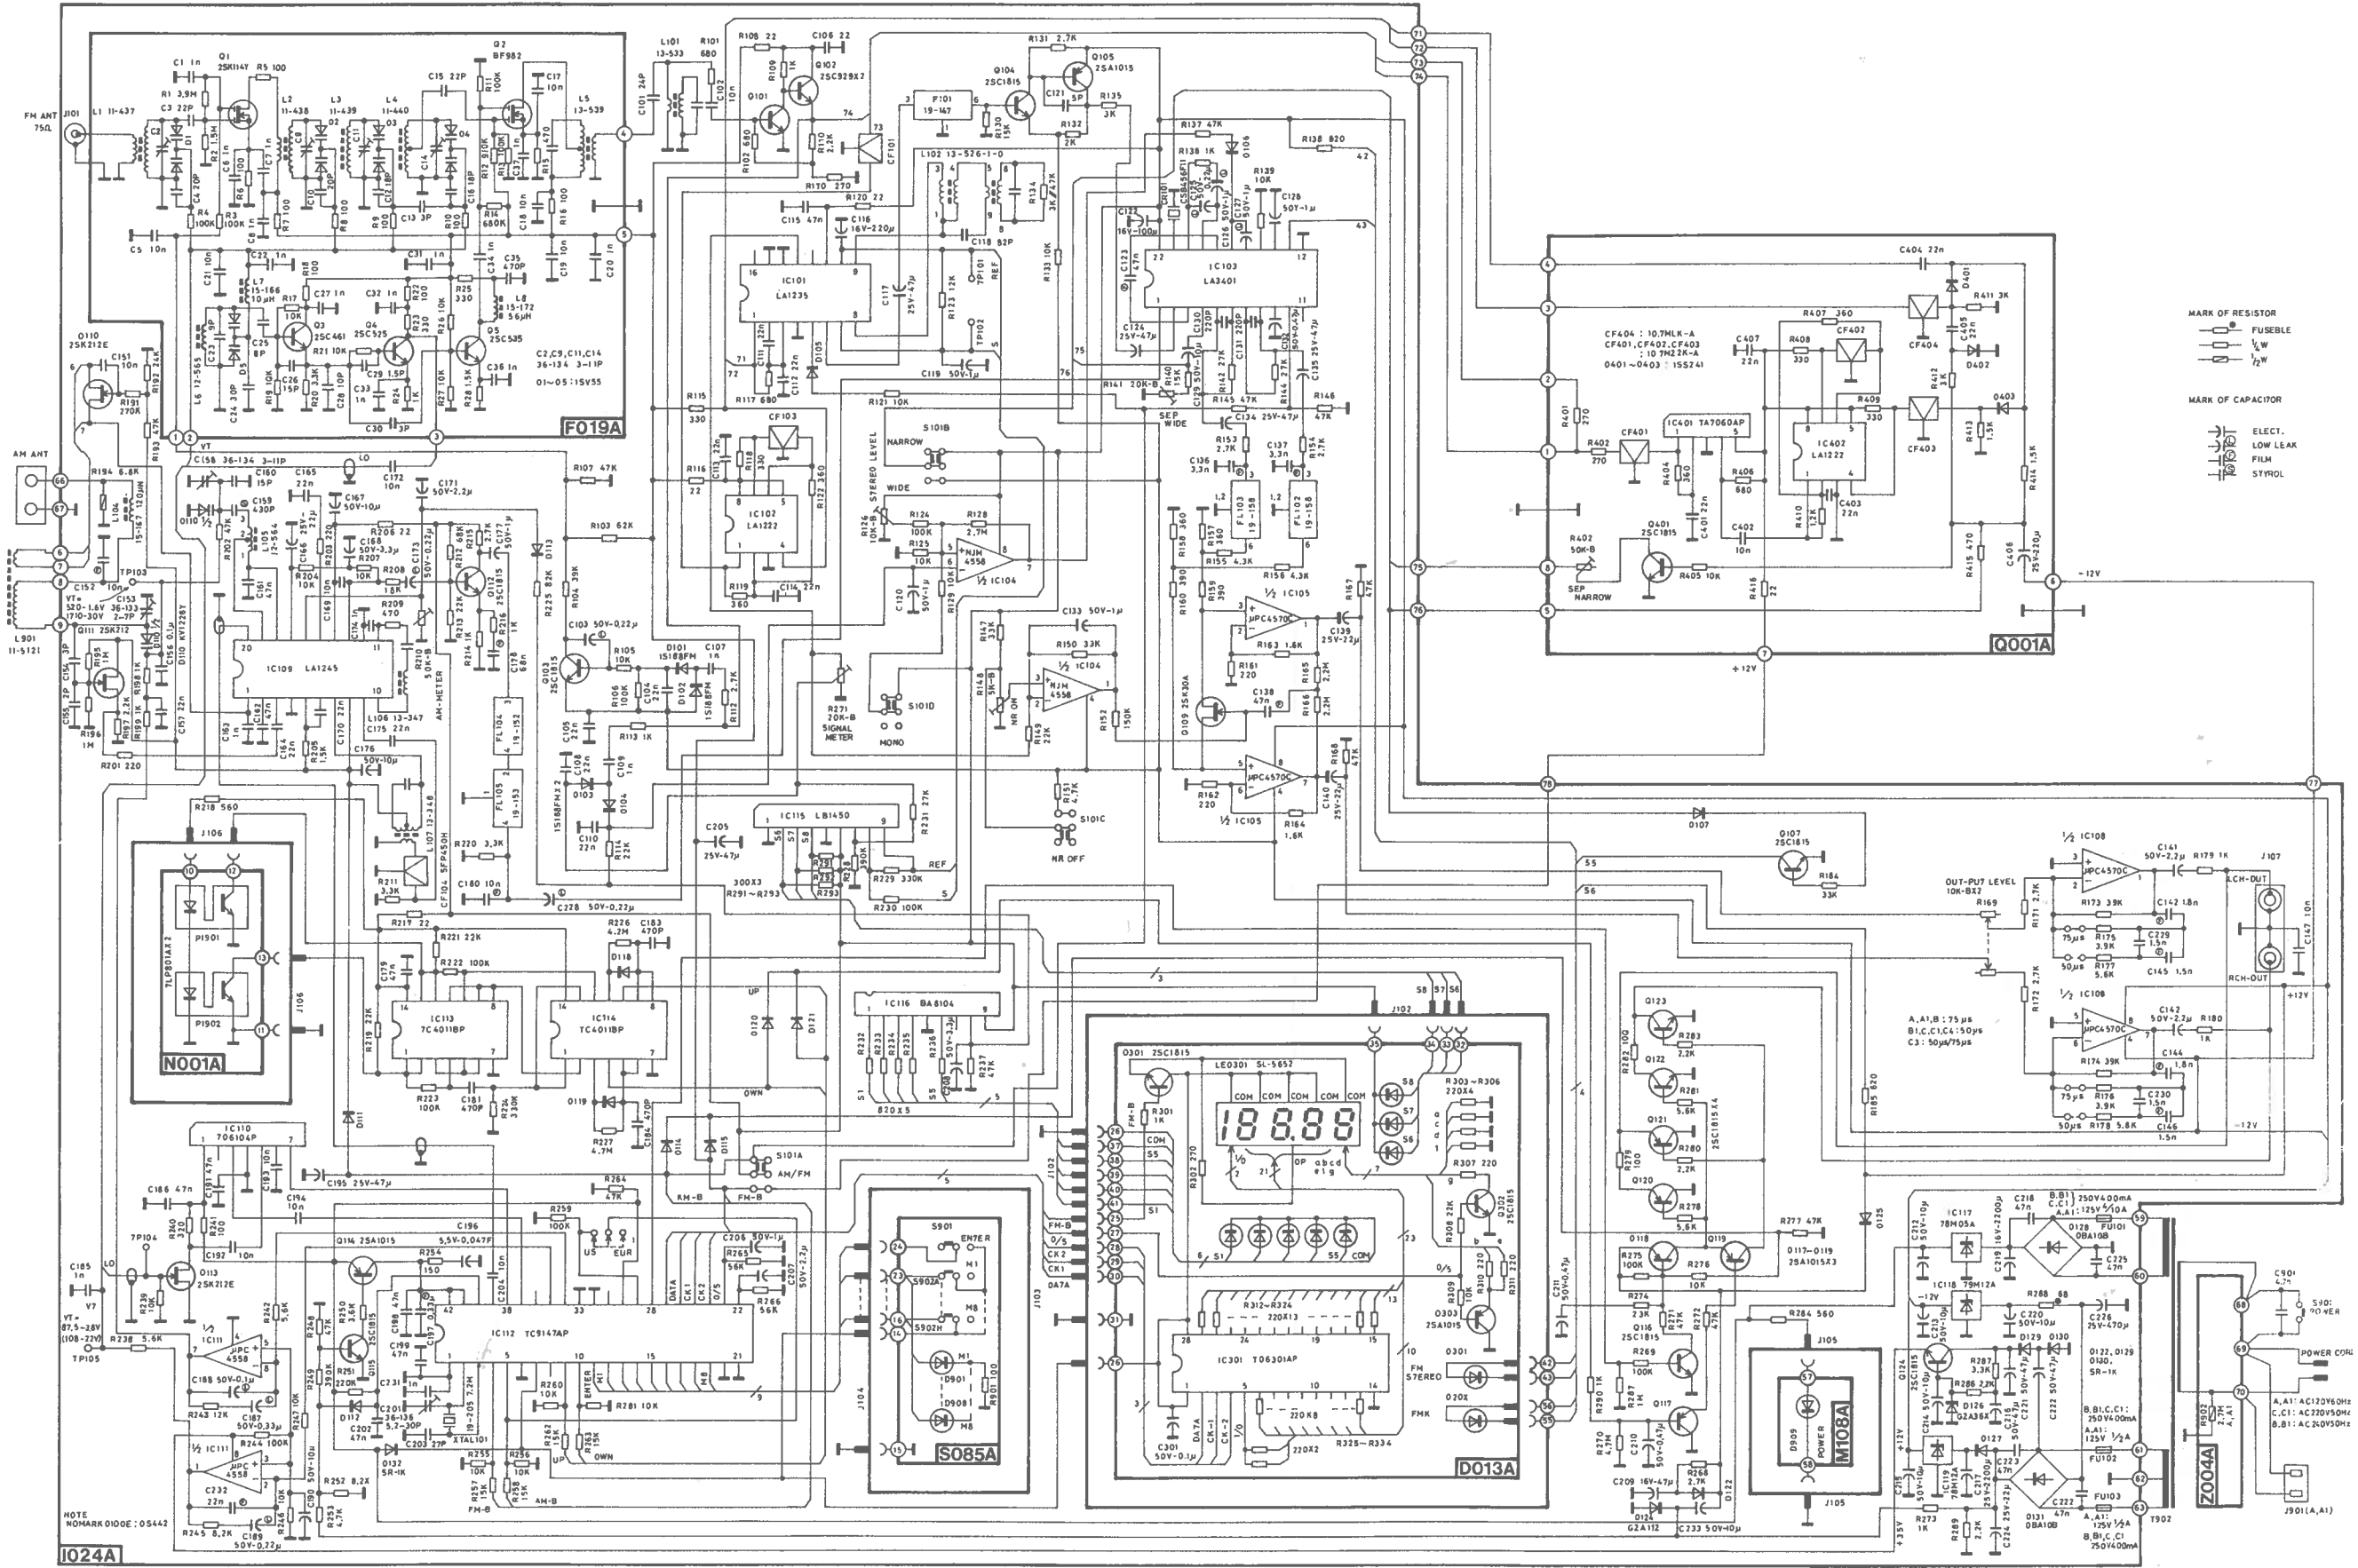

NOTE  
NONMARK 0100E : 04542


IO24A

## EXPLODED VIEW PARTS LIST

| Ref. No. | Parts No.   | Description                        |
|----------|-------------|------------------------------------|
| 1        | 63-6280-0-0 | FRONT PANEL                        |
| 2        | 62-1111-0-0 | PUSH BUTTON - SELECTORS (BLACK)    |
| 3        | 62-1111-1-0 | PUSH BUTTON - ON/OFF (GREEN)       |
| 4        | 62-3480-0-0 | PUSH BUTTON FRAME - SINGLE HOLE    |
| 5        | 63-5170-0-0 | TUNER WINDOW                       |
| 6        | 62-1110-0-0 | PUSH BUTTON - MEMORY (BLACK)       |
| 7        | 62-1110-1-0 | PUSH BUTTON - ENTER (RED)          |
| 8        | 62-2320-0-0 | TUNING KNOB                        |
| 9        | 92-2103-0-0 | FOOT                               |
| 10       | 63-1844-0-0 | LABEL: THIS IS NOT A HANDLE        |
| 11       | 71-2625-0-0 | FRONT CHASSIS                      |
| 12       | 71-2622-0-0 | SIDE CHASSIS (L)                   |
| 13       | 71-2621-0-0 | SIDE CHASSIS (R)                   |
| 14       | 71-2623-0-0 | SUBCHASSIS (FRONT TO REAR SUPPORT) |
| 15       | 71-2619-0-0 | REAR PANEL (A, A1)                 |
|          | 71-2620-0-0 | REAR PANEL (B, B1, C, C1)          |
| 16       | 71-1912-0-0 | LED INTERRUPTER                    |
| 17       | 71-3111-0-0 | CABINET                            |
| 18       | 71-3110-0-0 | BOTTOM COVER                       |
| 19       | 71-1892-0-0 | BRACKET - OUTPUT LEVEL CONTROL     |
| 20       | 11-5121-0-0 | AM BAR ANTENNA                     |
| 21       | 23-1327-0-0 | POWER TRANSFORMER (A)              |
|          | 23-1327-3-0 | POWER TRANSFORMER (A1)             |
|          | 23-1327-2-0 | POWER TRANSFORMER (B, B1)          |
|          | 23-1327-1-0 | POWER TRANSFORMER (C, C1)          |
| 22       | 85- 258-0-0 | POWER CORD (A)                     |
|          | 85- 260-0-0 | POWER CORD (A1)                    |
|          | 85- 240-0-0 | POWER CORD (B)                     |
|          | 85- 259-0-0 | POWER CORD (B1)                    |
|          | 85- 235-0-0 | POWER CORD (C, C1)                 |
| 23       | 62-3332-0-0 | BUSHING - AC POWER CORD/AM ANTENNA |
| 24       | 63-1843-0-0 | LABEL - CAUTION FOR FUSE (A, A1)   |
| 25       | 63-1872-0-0 | MASKING PLATE                      |
| 26       | 87- 289-0-0 | TUNING SHAFT                       |
| 27       | 87-3247-0-0 | HEXAGON STUD                       |
| 28       | 87-3251-0-0 | P.C.B. SUPPORT                     |
| 29       | 82-2171-0-0 | AM ANTENNA TERMINAL                |
| 29-1     | 87-3249-0-0 | PLASTIC RIVET                      |
| 30       | 82-2161-0-0 | RECEPTACLE (A, A1)                 |
| 31       | 81-2320-0-0 | POWER SWITCH                       |
| 32       | M108A       | POWER INDICATOR P.C.B. ASSEMBLY    |
| 33       | S085A       | PRESET SELECTOR P.C.B. ASSEMBLY    |
| 33-1     | 71-1911-0-0 | LED GUIDE                          |
| 33-2     | 81-2336-0-0 | MEMORY SWITCH BANK (8 SWITCHES)    |
| 33-3     | 81-2335-0-0 | ENTER SWITCH                       |
| 34       | D013A       | LED DISPLAY P.C.B. ASSEMBLY        |
| 34-1     | SL-5653     | LED INDICATOR                      |
| 35       | Z004A       | VOLTAGE SELECTOR P.C.B. ASSEMBLY   |
| 36       | N001A       | ROTARY SENSOR P.C.B. ASSEMBLY      |
| 36-1     | TLP801      | PHOTO INTERRUPTER                  |

| Ref. No. | Parts No.              | Description                                 |
|----------|------------------------|---|
| 37       | Q001A                  | IF <sup>B/W</sup> SELECTOR P.C.B. ASSEMBLY  |
| 38       | I024A                  | TUNER P.C.B. ASSEMBLY                       |
| 38-1     | 81-2334-0-0            | FUNCTION SWITCH BANK (4 SWITCHES)           |
| 38-2     | 74-3111-0-0            | HEAT SINK                                   |
| 38-3     | 74-3112-0-0            | HEAT SINK                                   |
| 38-4     | 82-2130-0-0            | RCA CONNECTOR - SINGLE                      |
| 38-5     | 41- 689-0-0            | ROTARY POTENTIOMETER - OUTPUT LEVEL CONTROL |
| 39       | <del>F108A</del> F019A | FM FRONTEND P.C.B. ASSEMBLY                 |
| 40       |                        | TAPPING SCREW (PHILLIPS HEAD 3×6 BLK)       |
| 41       |                        | TAPPING SCREW (PHILLIPS HEAD 3×8 BLK)       |
| 42       |                        | MACHINE SCREW (PHILLIPS HEAD 3×6 BLK)       |
| 43       |                        | TAPPING SCREW (PHILLIPS HEAD 3×6 Cr)        |
| 44       |                        | TAPPING SCREW (WASHER HEAD 3×6 Cr)          |
| 45       |                        | MACHINE SCREW (PAN 3×6 Cr)                  |
| 46       |                        | MACHINE SCREW S (WASHER HEAD 3×6 Cr)        |
| 47       |                        | MACHINE SCREW (WASHER HEAD 3×6 Cr)          |
| 48       |                        | MACHINE SCREW (PHILLIPS HEAD 3×6)           |
| 49       |                        | TAPPING SCREW (PHILLIPS HEAD 3×8 Cr)        |
| 50       |                        | CABINET SCREW WITH WASHER (4×6 BLK)         |
| 51       |                        | TAPPING SCREW (FLAT HEAD 3×6 Cr)            |
| 52       |                        | OUTPUT CONTROL NUT (HEXAGON 9-11-2)         |
| 53       |                        | HEXAGON FLANGE NUT (4-7-4.2)                |
| 54       |                        | HEXAGON NUT (10-14-2)                       |
| 55       |                        | WASHER (TOOTHED LOCK B 10)                  |
| 56       |                        | WASHER (PLAIN 9-14-0.5)                     |

# EXPLODED VIEW

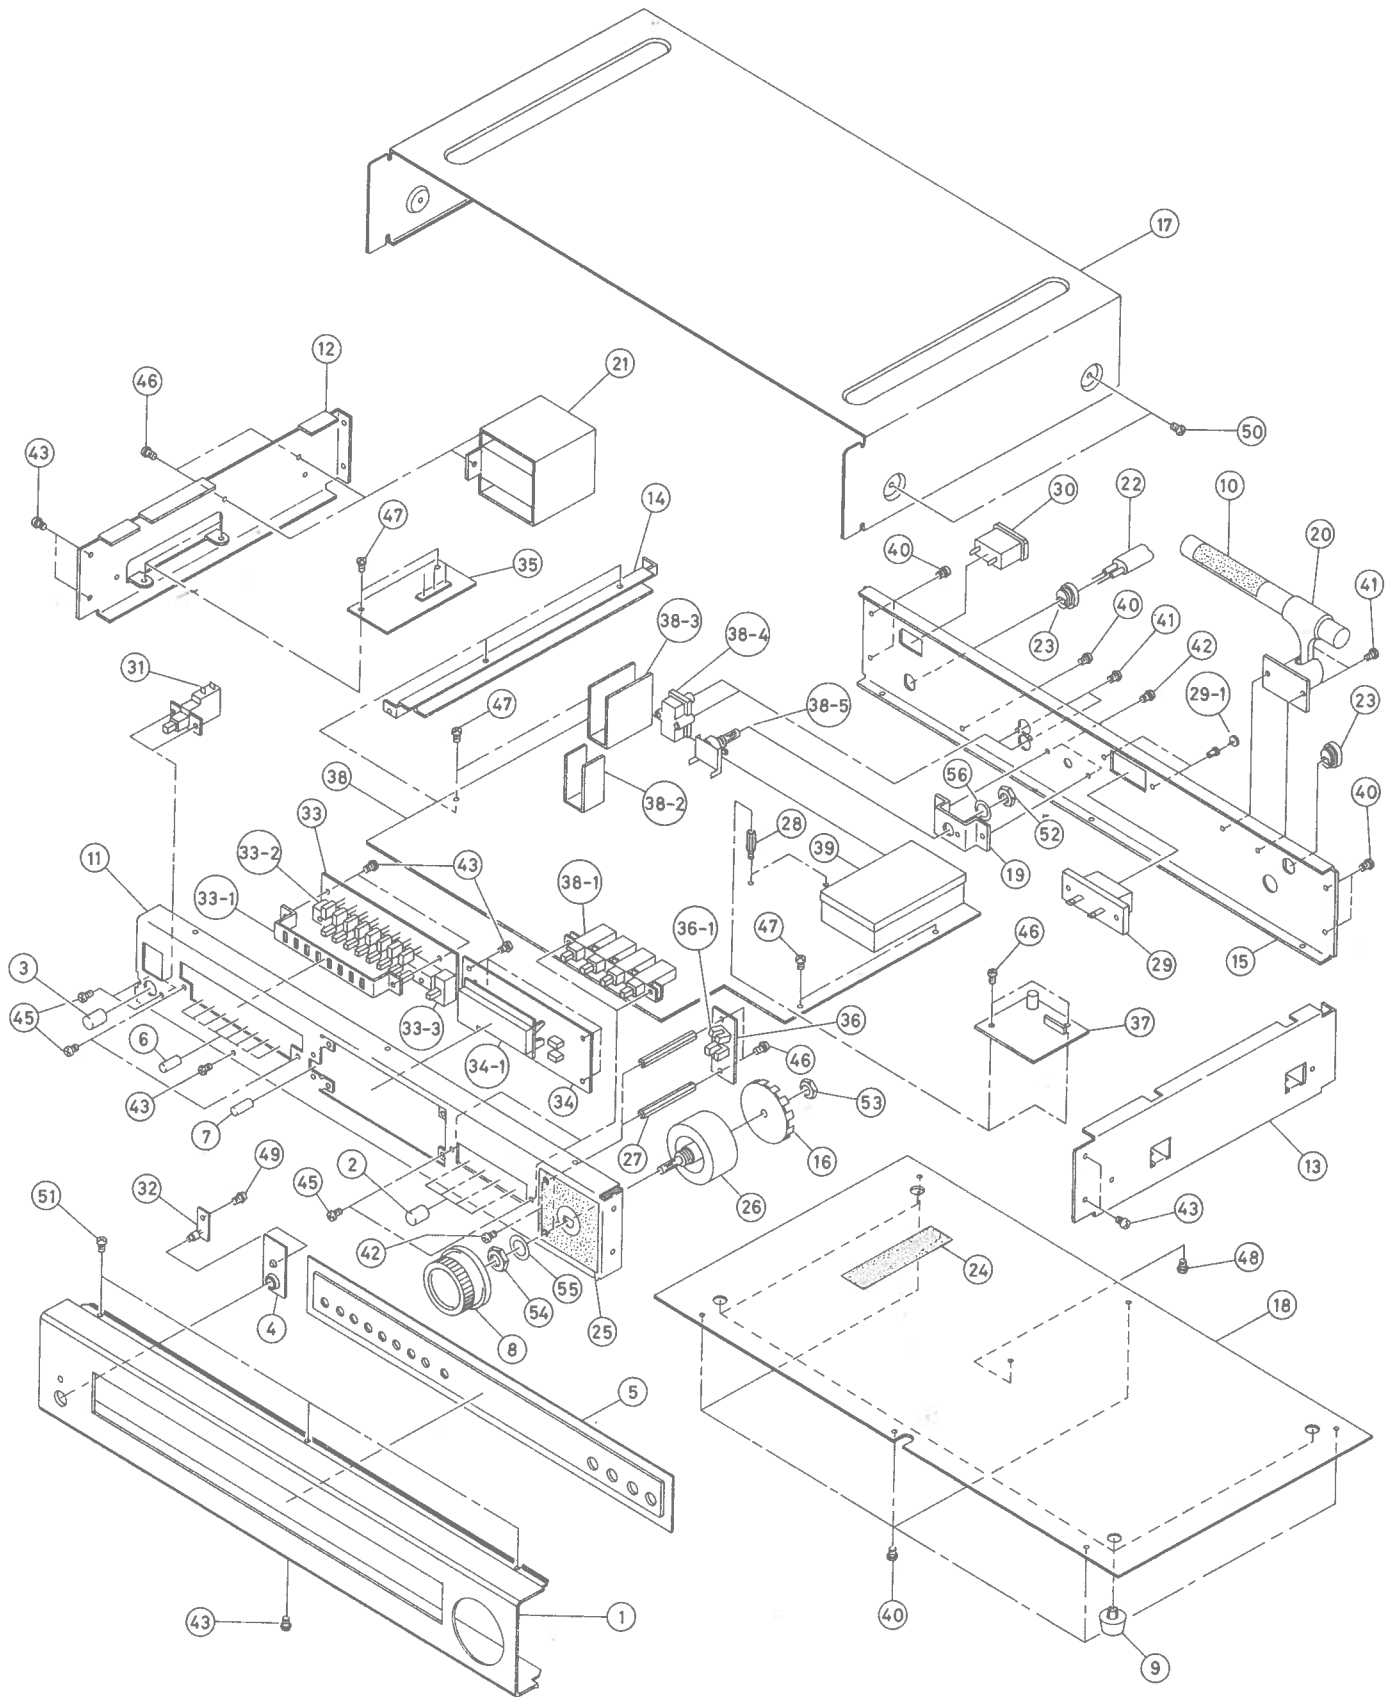

# ELECTRICAL PARTS LIST

NOTE: This is not a complete electrical parts list.

## POWER INDICATOR P.C.B. ASSEMBLY: M108A (EXPLODED VIEW REF. NO. 32)

| SYMBOL NO. | PARTS NO. | DESCRIPTIONS |
|------------|-----------|--------------|
| D909       | SLP246B   | LED (GREEN)  |

## PRESET SELECTOR P.C.B. ASSEMBLY: S085A (EXPLODED VIEW REF. No. 33)

| SYMBOL NO. | PARTS NO. | DESCRIPTIONS |
|------------|-----------|--------------|
| D901-D908  | LN349GPH  | LED (GREEN)  |

## LED DISPLAY P.C.B. ASSEMBLY: D013A (EXPLODED VIEW REF. NO. 34)

| SYMBOL NO. | PARTS NO. | DESCRIPTIONS       |
|------------|-----------|--------------------|
| IC301      | TD6301AP  | INTEGRATED CIRCUIT |
| Q301, Q302 | 2SC1815   | TRANSISTOR         |
| Q303       | 2SA1015   | "                  |
| LED301     | SL-5653   | LED INDICATOR      |
| D301, D302 | LN449YPH  | LED (AMBER)        |

## VOLTAGE SELECTOR P.C.B. ASSEMBLY: Z004A (EXPLODED VIEW REF. NO. 35)

| SYMBOL NO. | PARTS NO.            | DESCRIPTIONS    |
|------------|----------------------|-----------------|
| R902       | 2.7M $\Omega$ , 1/2W | CARBON RESISTOR |

## ROTARY SENSOR P.C.B. ASSEMBLY: N001A (EXPLODED VIEW REF. NO. 36)

| SYMBOL NO.   | PARTS NO. | DESCRIPTIONS      |
|--------------|-----------|-------------------|
| PI901, PI902 | TLP801A   | PHOTO INTERRUPTER |

## IF B/W SELECTOR P.C.B. ASSEMBLY: Q001A (EXPLODED VIEW REF. NO. 37)

| SYMBOL NO.  | PARTS NO.              | DESCRIPTIONS                      |
|-------------|------------------------|-----------------------------------|
| IC401       | TA7060AP               | INTEGRATED CIRCUIT                |
| IC402       | LA1222                 | "                                 |
| Q401        | 2SC1815                | TRANSISTOR                        |
| D401-D403   | 1SS241                 | DIODE                             |
| R403        | 41-791                 | VARIABLE RESISTOR, 5K $\Omega$ -B |
| CF401-CF403 | 19-159 (SFE10.7MZ2K-A) | CERAMIC FILTER                    |
| CF404       | 19-157 (SFE10.7MLK-A)  | "                                 |

TUNER P.C.B. ASSEMBLY: 1024A (EXPLODED VIEW REF. NO. 38)

| SYMBOL NO.             | PARTS NO.    | DESCRIPTIONS                       |
|------------------------|--------------|------------------------------------|
| IC101                  | LA1235       | INTEGRATED CIRCUIT                 |
| IC102                  | LA1222       | "                                  |
| IC103                  | LA3401       | "                                  |
| IC104, IC111           | uPC4558C     | "                                  |
| IC105, IC108           | uPC4570C     | "                                  |
| IC109                  | LA1245       | "                                  |
| IC110                  | TD6104P      | "                                  |
| IC112                  | TC9147BP     | "                                  |
| IC113, IC114           | TC4011BP     | "                                  |
| IC115                  | LB1450       | "                                  |
| IC116                  | BA6104       | "                                  |
| IC117                  | 78M05A       | "                                  |
| IC118                  | 79M12A       | "                                  |
| IC119                  | 78M12A       | "                                  |
| Q101, Q102             | 2SC929       | TRANSISTOR                         |
| Q103, Q104, Q107, Q112 | 2SC1815      | "                                  |
| Q115, Q116, Q120, Q121 |              |                                    |
| Q122, Q123, Q124       |              |                                    |
| Q105, Q114, Q117, Q118 | 2SA1015      | "                                  |
| Q119                   |              |                                    |
| Q109                   | 2SK30A       | "                                  |
| Q110, Q111, Q113       | 2SK212       | "                                  |
| D101, D102, D103, D104 | 1S188FM      | DIODE                              |
| D105-D107, D111-D115   | DS442BT      | "                                  |
| D118-D122, D125        |              |                                    |
| D110                   | KV1226Y      | "                                  |
| D124                   | GZA11Z       | "                                  |
| D126                   | GZA36X       | "                                  |
| D127, D129, D130, D132 | SR1K         | "                                  |
| D128, D131             | DBA10B       | "                                  |
| L101                   | 13-533       | IFT                                |
| L102                   | 13-536-1-0   | FM DETECTOR COIL                   |
| L104                   | 15-167       | CHOKE COIL, 120uH                  |
| L105                   | 12-564       | AM OSC COIL                        |
| L106                   | 13-347       | IFT COIL (455KHz)                  |
| L107                   | 13-348       | 450KHz MATCHING COIL               |
| C103, C125, C173, C189 | 50V, 0.22uF  | ELCTROLYTIC CAPACITOR LOW LEAKAGE  |
| C228                   |              |                                    |
| C126, C127             | 50V, 1uF     | "                                  |
| C153                   | 36-133       | TRIMMER CAPACITOR, 2-7pF           |
| C158                   | 36-134       | " , 3-11pF                         |
| C187                   | 50V, 0.33uF  | ELECTROLYTIC CAPACITOR LOW LEAKAGE |
| C188                   | 50V, 0.1uF   | "                                  |
| C196                   | 5.5V, 0.047F | MEMORY BACKUP CAPACITOR            |
| C201                   | 36-136       | TRIMMER CAPACITOR, 5.2-30pF        |
| R126                   | 41-788       | VARIABLE RESISTOR, 10KΩ-B          |
| R127, R141             | 41-789       | " , 20KΩ-B                         |
| R148                   | 41-787       | " , 5KΩ-B                          |
| R210                   | 41-791       | " , 50KΩ-B                         |
| R288                   | 68Ω, 1/4W    | FUSIBLE RESISTOR                   |

| SYMBOL NO.   | PARTS NO. | DESCRIPTIONS                       |
|--------------|-----------|------------------------------------|
| C118         | 50V, 82pF | CERAMIC DISC CAPACITOR, FK11 COG1H |
| CF101, CF103 | 19-157    | CERAMIC FILTER, SFE10.7MLK-A       |
| CF104        | 19-140    | " , SFP450H                        |
| FL101        | 19-146    | ANTIBIRDIE FILTER                  |
| FL102, FL103 | 19-158    | LOW PASS FILTER, 19KHz/38KHz       |
| FL104        | 19-152    | " , 10KHz                          |
| FL105        | 19-153    | " , 9KHz                           |
| XTAL101      | 19-205    | CRYSTAL OSCILLATOR, 7.2MHz         |
| CR101        | 19-156    | CERAMIC RESONATOR, CSB456F11       |
| FU101        | 5TT400    | FUSE, 125V, 400mA (A, A1)          |
|              | 173000    | FUSE, 250V, 400mA (B, C)           |
| FU102, FU103 | 5TT400    | FUSE, 125V, 500mA (A, A1)          |
|              | 173000    | FUSE, 250V, 500mA (B, C)           |

*F019A*

FM FRONT END P.C.B. ASSEMBLY: ~~F109A~~ (EXPLODED VIEW REF. NO. 39)

| SYMBOL NO.       | PARTS NO. | DESCRIPTIONS                          |
|------------------|-----------|---------------------------------------|
| Q1               | 3SK114V   | TRANSISTOR                            |
| Q2               | BF982     | "                                     |
| Q3               | 2SC461    | "                                     |
| Q4, Q5           | 2SC535B   | "                                     |
| D1-D5            | 1SV55     | DIODE                                 |
| L1               | 11-437    | FM ANTENNA COIL                       |
| L2               | 11-438    | FM RF COIL                            |
| L3               | 11-439    | "                                     |
| L4               | 11-440    | "                                     |
| L5               | 13-539    | IFT COIL                              |
| L6               | 12-565    | OSC COIL                              |
| L7               | 15-166    | CHOKE COIL, 10uH                      |
| L8               | 15-172    | " , 0.56uH                            |
| C2, C9, C11, C14 | 36-134    | TRIMMER CAPACITOR, 3-11pF             |
| J101             | 82-2162   | ANTENNA CONNECTOR, YKV11-0065 (A, A1) |
|                  | 82-2174   | " , YKV11-0096 (B, C)                 |



MEMO

Lined area for notes, consisting of multiple horizontal dashed lines.

**SERVICE MANUAL**

© 1988 BY NAD 383 PRINTED IN JAPAN

**4300**  
STEREO TUNER

**NAD ELECTRONICS**  
BOSTON/LONDON