



SERVICE MANUAL

SERVICE MANUAL

MODEL : T587C/CT

SERVICE MANUAL

T587C/CT

Blu-ray Disc™ PLAYER

T587C/CT
Blu-ray Disc™ PLAYER



T587C/CT
Blu-ray Disc™ PLAYER

© NAD 2008

**NAD ELECTRONICS INTERNATIONAL
TORONTO**

CONTENTS

SECTION 1.....SUMMARY
SECTION 2.....CABINET & MAIN CHASSIS
SECTION 3.....ELECTRICAL
SECTION 4.....HL-04P LOADER PART
SECTION 5.....REPLACEMENT PARTS LIST

SECTION 1

SUMMARY

CONTENTS

PRODUCT SAFETY SERVICING GUIDELINES FOR BLU-RAY DISC PLAYER PRODUCTS	1-3
SERVICING PRECAUTIONS	1-4
• GENERAL SERVICING PRECAUTIONS	
• INSULATION CHECKING PRODEDURE	
• ELECTROSTATICALLY SENSITIVE (ES) DEVICES	
SOFTWARE UPGRADE	1-5
SPECIFICATIONS	1-6

PRODUCT SAFETY SERVICING GUIDELINES FOR BLU-RAY DISC PLAYER PRODUCTS

IMPORTANT SAFETY NOTICE

This manual was prepared for use only by properly trained audio-video service technicians.

When servicing this product, under no circumstances should the original design be modified or altered without permission from NAD. All components should be replaced only with types identical to those in the original circuit and their physical location, wiring and lead dress must conform to original layout upon completion of repairs.

Special components are also used to prevent x-radiation, shock and fire hazard.

These components are indicated by the letter "X" included in their component designators and are required to maintain safe performance. No deviations are allowed without prior approval by NAD.

Circuit diagrams may occasionally differ from the actual circuit used. This way, implementation of the latest safety and performance improvement changes into the set is not delayed until the new service literature is printed.

CAUTION : Do not attempt to modify this product in any way. Never perform customized installations without manufacturer's approval. Unauthorized modifications will not only void the warranty, but may lead to property damage or user injury.

Service work should be performed only after you are thoroughly familiar with these safety checks and servicing guidelines.

GRAPHIC SYMBOLS



The exclamation point within an equilateral triangle is intended to alert the service personnel to important safety information in the service literature.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the service personnel to the presence of noninsulated "dangerous voltage" that may be of sufficient magnitude to constitute a risk of electric shock.



The pictorial representation of a fuse and its rating within an equilateral triangle is intended to convey to the service personnel the following fuse replacement caution notice:


CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ALL FUSES WITH THE SAME TYPE AND RATING AS MARKED NEAR EACH FUSE.

SERVICE INFORMATION

While servicing, use an isolation transformer for protection from AC line shock. After the original service problem has been corrected, make a check of the following:

FIRE AND SHOCK HAZARD

1. Be sure that all components are positioned to avoid a possibility of adjacent component shorts. This is especially important on items transported to and from the repair shop.
2. Verify that all protective devices such as insulators, barriers, covers, shields, strain reliefs, power supply cords, and other hardware have been reinstalled per the original design. Be sure that the safety purpose of the polarized line plug has not been defeated.
3. Soldering must be inspected to discover possible cold solder joints, solder splashes, or sharp solder points. Be certain to remove all loose foreign particles.
4. Check for physical evidence of damage or deterioration to parts and components, for frayed leads or damaged insulation (including the AC cord), and replace if necessary.
5. No lead or component should touch a high current device or a resistor rated at 1 watt or more. Lead tension around protruding metal surfaces must be avoided.
6. After reassembly of the set, always perform an AC leakage test on all exposed metallic parts of the cabinet (the channel selector knobs, antenna terminals, handle and screws) to be sure that set is safe to operate without danger of electrical shock. **DO NOT USE A LINE ISOLATION TRANSFORMER DURING THIS TEST.** Use an AC voltmeter having 5000 ohms per volt or more sensitivity in the following manner: Connect a 1500 ohm, 10 watt resistor, paralleled by a .15 mfd 150V AC type capacitor between a known good earth ground water pipe, conduit, etc.) and the exposed metallic parts, one at a time. Measure the AC voltage across the combination of 1500 ohm resistor and .15 mfd capacitor. Reverse the AC plug by using a non-polarized adaptor and repeat AC voltage measurements for each exposed metallic part. Voltage measured must not exceed 0.75 volts RMS. This corresponds to 0.5 milliamp AC. Any value exceeding this limit constitutes a potential shock hazard and must be corrected immediately.

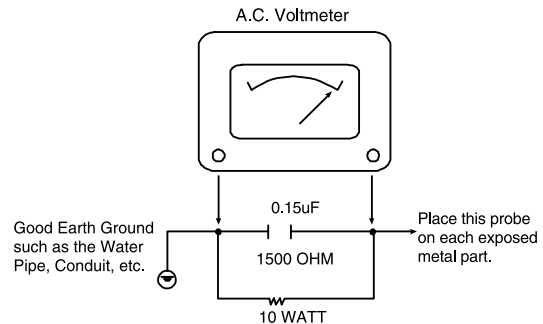

TIPS ON PROPER INSTALLATION

1. Never install any receiver in a closed-in recess, cubbyhole, or closely fitting shelf space over, or close to, a heat duct, or in the path of heated air flow.
2. Avoid conditions of high humidity such as: outdoor patio installations where dew is a factor, near steam radiators where steam leakage is a factor, etc.
3. Avoid placement where draperies may obstruct venting. The customer should also avoid the use of decorative scarves or other coverings that might obstruct ventilation.
4. Wall- and shelf-mounted installations using a commercial mounting kit must follow the factory-approved mounting instructions. A product mounted to a shelf or platform must retain its original feet (or the equivalent thickness in spacers) to provide adequate air flow across the bottom. Bolts or screws used for fasteners must not touch any parts or wiring. Perform leakage tests on customized installations.
5. Caution customers against mounting a product on a sloping shelf or in a tilted position, unless the receiver is properly secured.
6. A product on a roll-about cart should be stable in its mounting to the cart. Caution the customer on the hazards of trying to roll a cart with small casters across thresholds or deep pile carpets.
7. Caution customers against using extension cords. Explain that a forest of extensions, sprouting from a single outlet, can lead to disastrous consequences to home and family.

SERVICING PRECAUTIONS

CAUTION: Before servicing the BLU-RAY DISC PLAYER covered by this service data and its supplements and addends, read and follow the SAFETY PRECAUTIONS. NOTE: if unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions in this publications, always follow the safety precautions.

Remember Safety First :

General Servicing Precautions

1. Always unplug the BLU-RAY DISC PLAYER AC power cord from the AC power source before:

- (1) Removing or reinstalling any component, circuit board, module, or any other assembly.
- (2) Disconnecting or reconnecting any internal electrical plug or other electrical connection.
- (3) Connecting a test substitute in parallel with an electrolytic capacitor.

Caution : A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.

2. Do not spray chemicals on or near this BLU-RAY DISC PLAYER or any of its assemblies.

3. Unless specified otherwise in this service data, clean electrical contacts by applying an appropriate contact cleaning solution to the contacts with a pipe cleaner, cotton-tipped swab, or comparable soft applicator.

Unless specified otherwise in this service data, lubrication of contacts is not required.

4. Do not defeat any plug/socket B+ voltage interlocks with which instruments covered by this service manual might be equipped.

5. Do not apply AC power to this BLU-RAY DISC PLAYER and / or any of its electrical assemblies unless all solidstate device heat sinks are correctly installed.

6. Always connect the test instrument ground lead to an appropriate ground before connecting the test instrument positive lead. Always remove the test instrument ground lead last.

Insulation Checking Procedure

Disconnect the attachment plug from the AC outlet and turn the power on. Connect an insulation resistance meter (500V) to the blades of the attachment plug. The insulation resistance between each blade of the attachment plug and accessible conductive parts (Note 1) should be more than 1Mohm.

Note 1 : Accessible Conductive Parts include Metal panels, Input terminals, Earphone jacks, etc.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field effect transistors and semiconductor chip components.

The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.

2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.

3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.

4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.

5. Do not use freon-propelled chemicals. These can generate an electrical charge sufficient to damage ES devices.

6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil, or comparable conductive material).

7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.


8. Minimize bodily motions when handling unpackaged replacement ES devices. (Normally harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

SOFTWARE UPGRADE

- Burn a DVD recordable disc or USB with a file that is named to “LG_BD_LV321BP.ROM”.
- Insert a upgrading disc or USB.
- Show help message for disc upgrade as follows.
< in the case of Back End program & Front End program >



Press play key to upgrade and it will show progress information

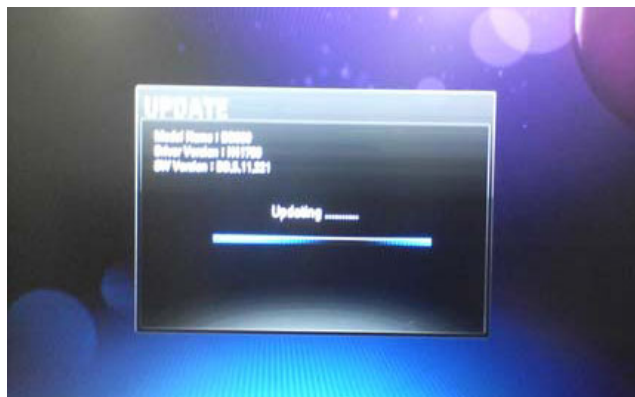

After completing upgrade then power is off.

SPECIFICATIONS

• GENERAL

Power requirements	AC 110V ~240V 50/ 60Hz (230V version model)
Unit Dimension (W x H x D)	435 x 60 x 280 mm (Gross)*
Net weight	3.5kg
Shipping weight	5.1kg

• OUTPUT

Output format	Video OUT: up to 480i/576i Component: video OUT: up to 1080i HDMI OUT: up to 1080p
Video out	1Vp-p / 75ohms
S-Video (Y signal)	1Vp-p / 75ohms
S-Video (C signal)	0.3Vp-p / 75ohms
Component (Y signal)	1Vp-p / 75ohms
Component (Cb/Cr signal)	0.7Vp-p / 75ohms
Audio output level	2.0Vrms (Ref. 1kHz, 0dB)
HDMI version	1.3
Digital out (coaxial)	0.5Vp-p
Digital out (optical)	3Vp-p

• SYSTEM

Signal system	Auto/NTSC/PAL (230V version model)
Laser	Semiconductor laser
Frequency response	± 2dB (Ref. 0dB 20Hz ~ 20kHz)
Signal-to-noise ratio	>100dB (A-WTD, analog OUT)
Dynamic range	>95 dB
Total Harmonic Distortion	<0.008 %
LAN port	Ethernet jack, 10 Base-T/100 Base-TX
External IR	IR jack x 1

* - Gross dimensions include feet, extended buttons and rear panel terminals.

SECTION 2

CABINET & MAIN CHASSIS

CONTENTS

DISASSEMBLY INSTRUCTIONS.....2-2

EXPLODED VIEWS2-3


1. CABINET AND MAIN FRAME SECTION2-3

2. DECK MECHANISM SECTION (HL-04P)2-4


3. PACKING ACCESSORY SECTION.....2-5

DISASSEMBLY INSTRUCTIONS


1. It is the product appearance.

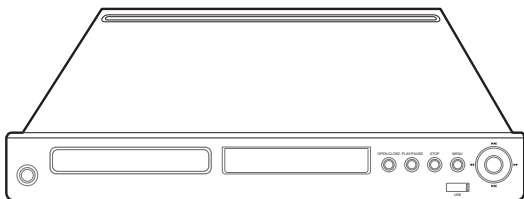


2. Remove the three screws on the back panel to separate the top cover.

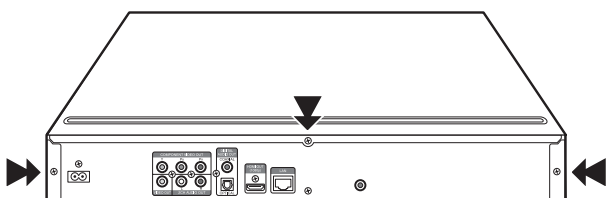


3. Push the top cover backward to separate the top cover completely.

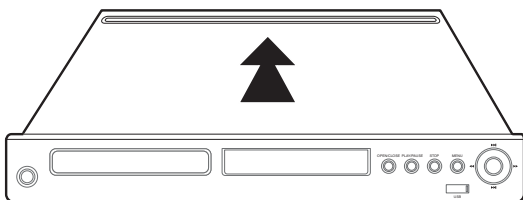

4. Remove the eight front panel hooks (three hooks on the top, two hooks on the both side and three hooks on the bottom) to separate the front panel.

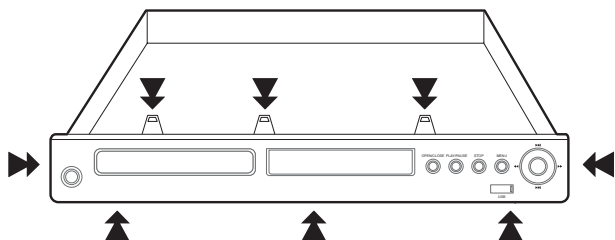


5. It is the feature that the top and front panel are separated.

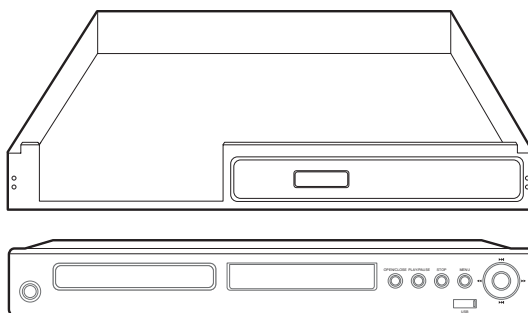


2-3

2. DECK MECHANISM SECTION (HL-04P)

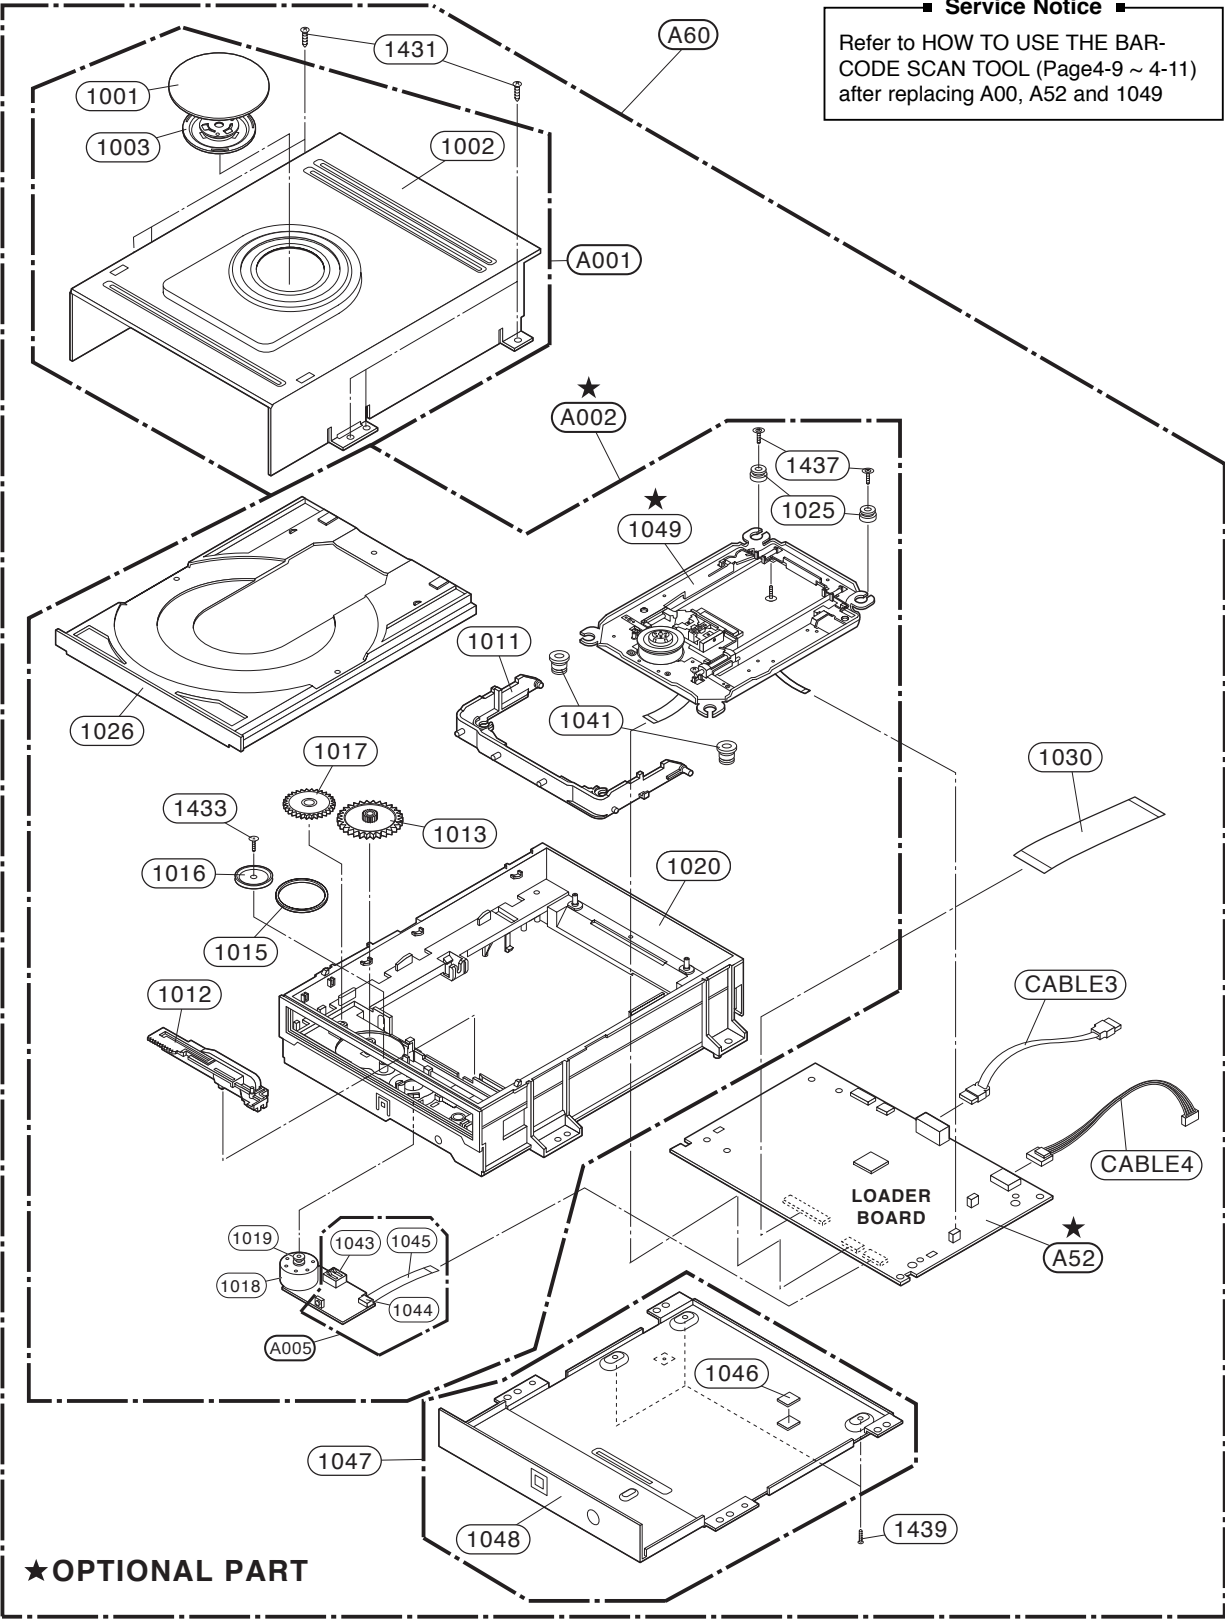

3. PACKING ACCESSORY SECTION

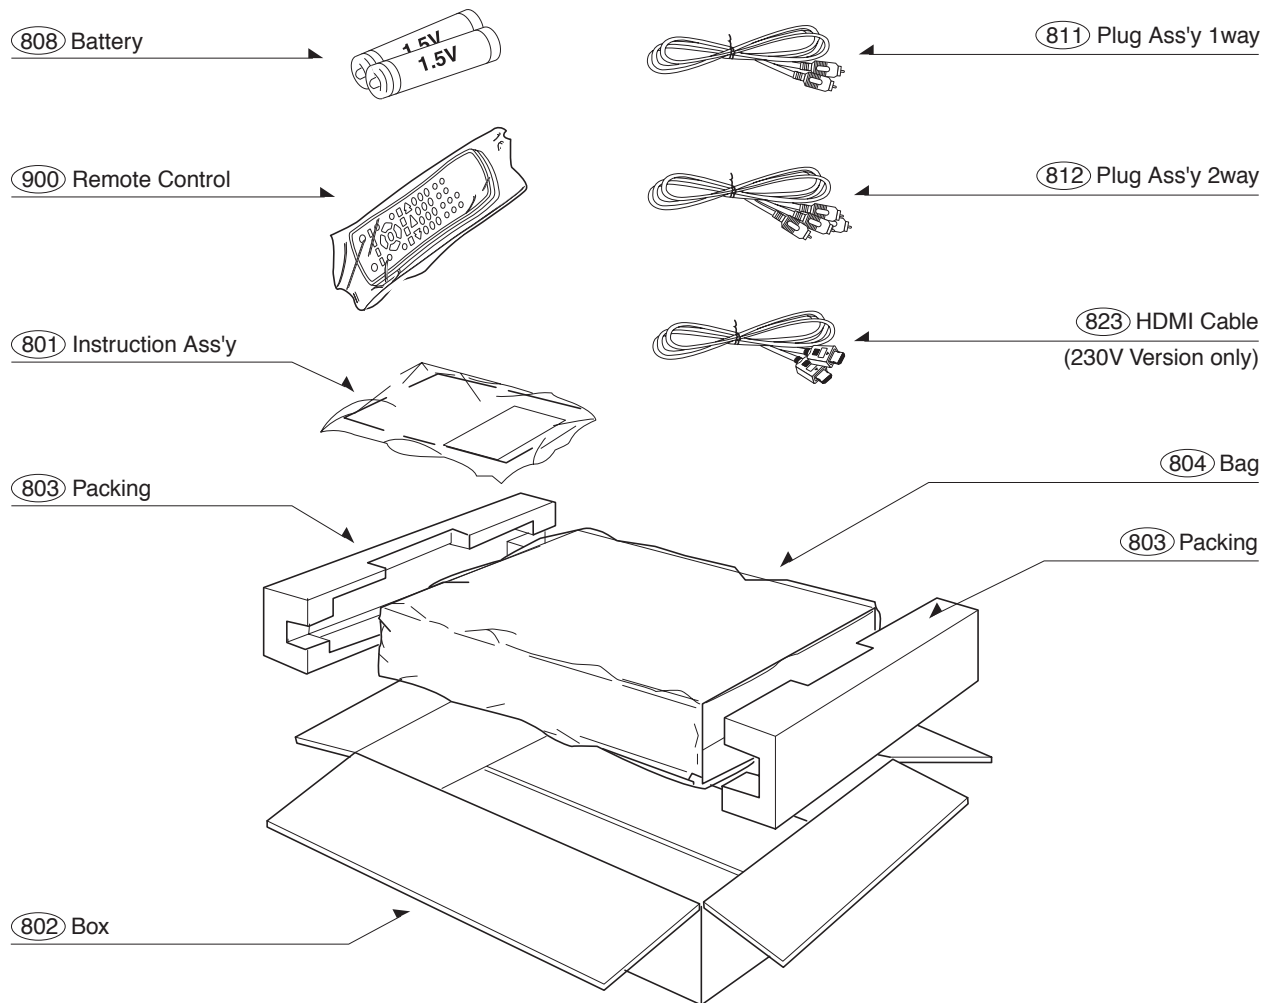

MEMO

SECTION 3

ELECTRICAL

CONTENTS

TRAINING MASTER FOR BLU-RAY (BD)	3-2
1. DISTORTED PICTURE	3-2
2. NO PICTURE	3-7
3. PICTURE COLOR	3-12
4. NOISE/AUDIO PROBLEMS	3-14
5. MISCELLANEOUS	3-17
6. BLU-RAY PLAYER	3-26
7. NETFLIX	3-28
ELECTRICAL TROUBLESHOOTING GUIDE	3-32
1. POWER SUPPLY (SMPS)	3-32
2. POWER ON	3-34
3. SYSTEM PART	3-35
4. COMPONENT (YPbPr) VIDEO OUT	3-36
5. CVBS VIDEO OUT	3-37
6. AUDIO (S/PDIF, OPTICAL)	3-38
7. AUDIO (ANALOG)	3-39
8. HDMI	3-40
WAVEFORMS	3-41
1. SYSTEM PART-1	3-41
2. SYSTEM PART-2 (SYSTEM MEMORY)	3-42
3. VIDEO PART-1 (100% FULL COLOR-BAR)	3-43
4. VIDEO PART-2 (100% FULL COLOR-BAR)	3-44
5. AUDIO PART (S/PDIF)	3-45
6. HDMI PART	3-46
7. FRONT I/F PART	3-47
BLOCK DIAGRAMS	3-48
1. OVERALL BLOCK DIAGRAM	3-48
2. SMPS BLOCK DIAGRAM	3-49
3. SYSTEM BLOCK DIAGRAM	3-50
4. FRONT BLOCK DIAGRAM	3-51
5. VIDEO BLOCK DIAGRAM	3-52
6. AUDIO EXTERNAL BLOCK DIAGRAM	3-53
7. AUDIO INTERNAL BLOCK DIAGRAM	3-54
CIRCUIT DIAGRAMS	3-55
1. SMPS (POWER) CIRCUIT DIAGRAM	3-55
2. BCM7440-1 CIRCUIT DIAGRAM	3-57
3. BCM7440-2 CIRCUIT DIAGRAM	3-59
4. DDR2-SDRAM CIRCUIT DIAGRAM	3-61
5. NAND, SATA, INTERFACE, ETHERNET CIRCUIT DIAGRAM	3-63
6. A/V OUTPUT CIRCUIT DIAGRAM	3-65
7. POWER SUPPLY CIRCUIT DIAGRAM	3-67
8. FRONT MICOM CIRCUIT DIAGRAM	3-69
9. FRONT KEY CIRCUIT DIAGRAM	3-71
10. EXTERNAL IR CIRCUIT DIAGRAM	3-72
CIRCUIT VOLTAGE CHART	3-73
PRINTED CIRCUIT BOARD DIAGRAMS	3-75
1. MAIN P.C.BOARD	3-75
2. SMPS (POWER) P.C.BOARD	3-77
3. FRONT KEY P.C.BOARD	3-79
4. FRONT MICOM P.C.BOARD	3-79
5. EXTERNAL IR P.C.BOARD	3-81


TRAINING MASTER FOR BLU-RAY (BD)

Objective: To provide clear and concise guidelines for customer service agents to handle calls on box goods calls.

1. DISTORTED PICTURE

1-1. Lines on Picture


Distorted picture refers to the customer getting video, but there is a problem with the video.

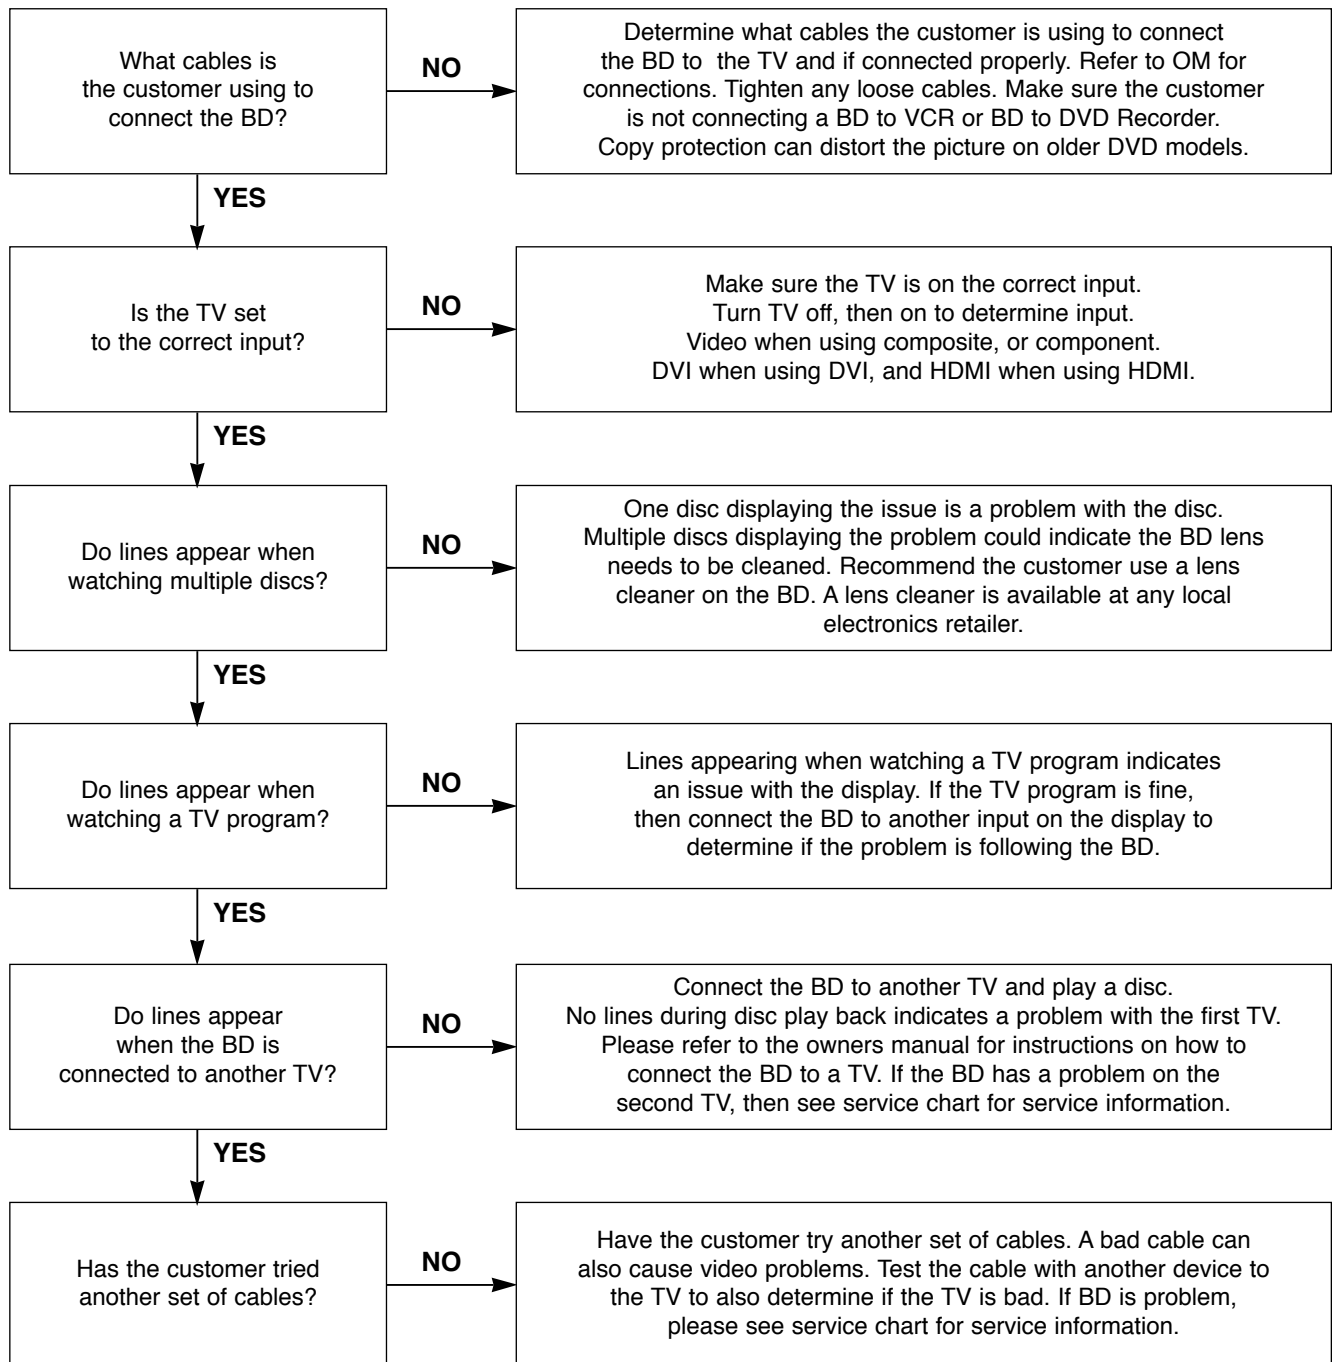

TRAINING MASTER FOR BLU-RAY (BD)

1-2. Ghost Picture


Distorted picture refers to the customer getting video, but there is a problem with the video.

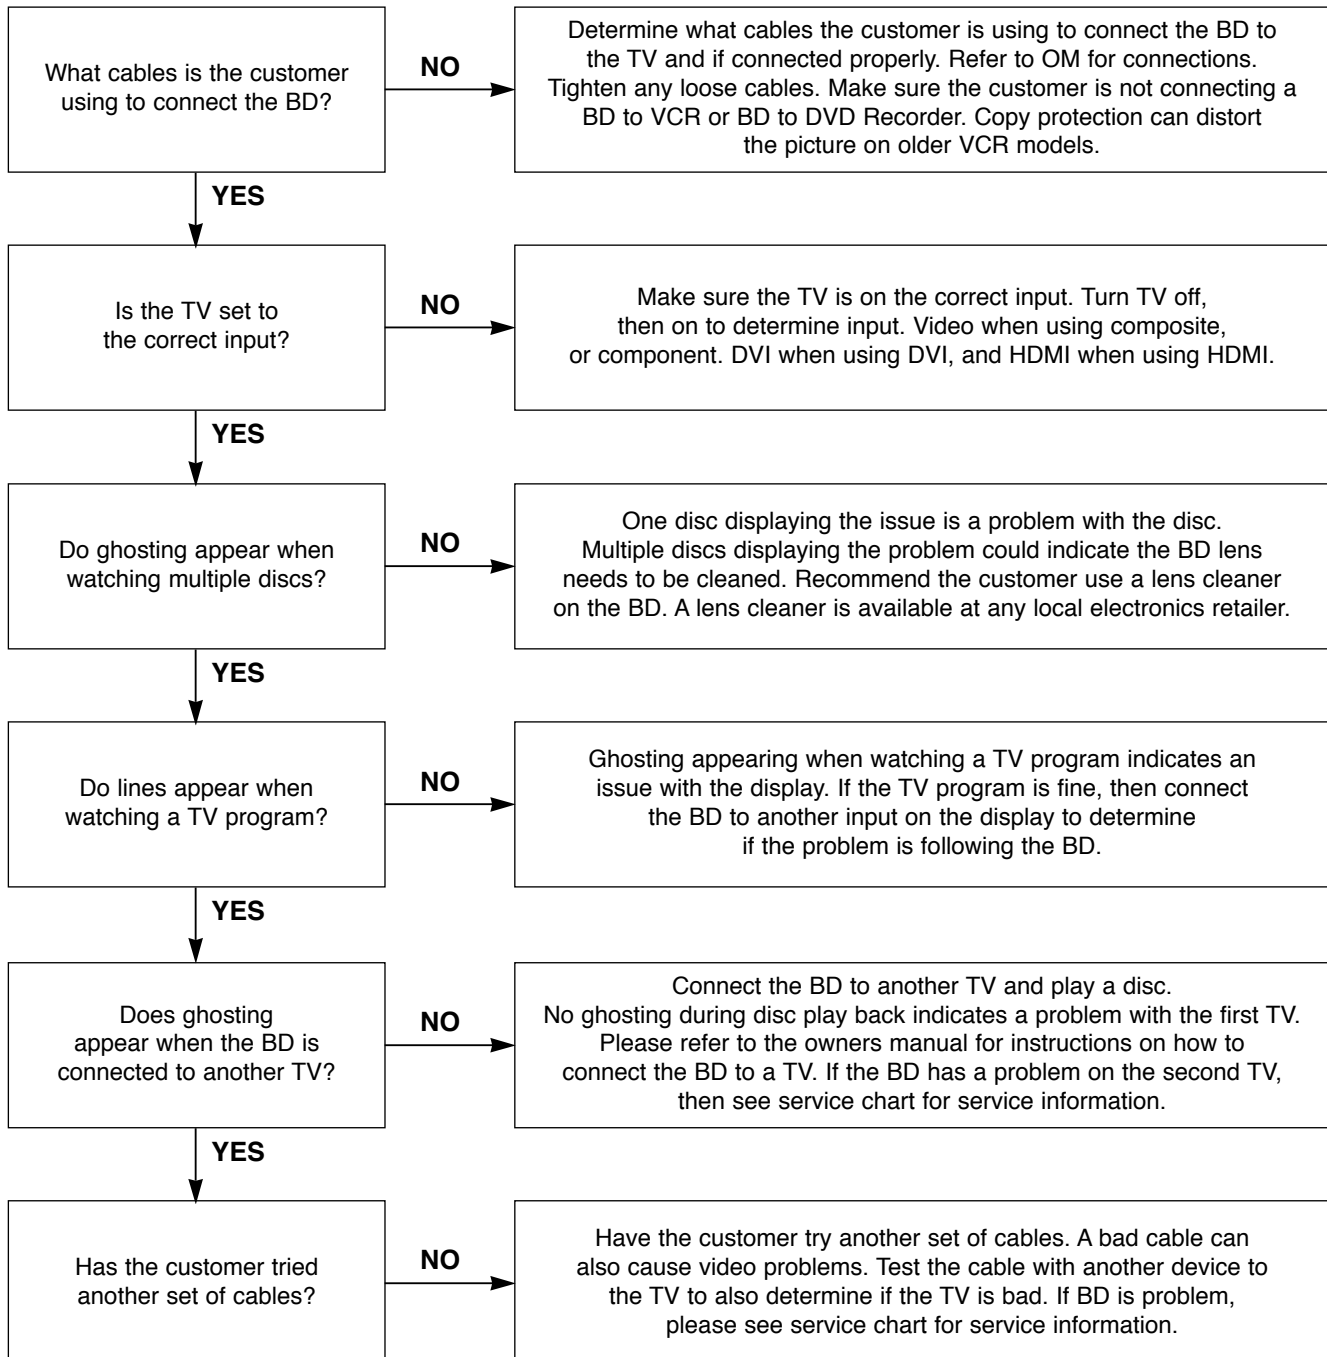

TRAINING MASTER FOR BLU-RAY (BD)

1-3. Rolling Picture


Distorted picture refers to the customer getting video, but there is a problem with the video.

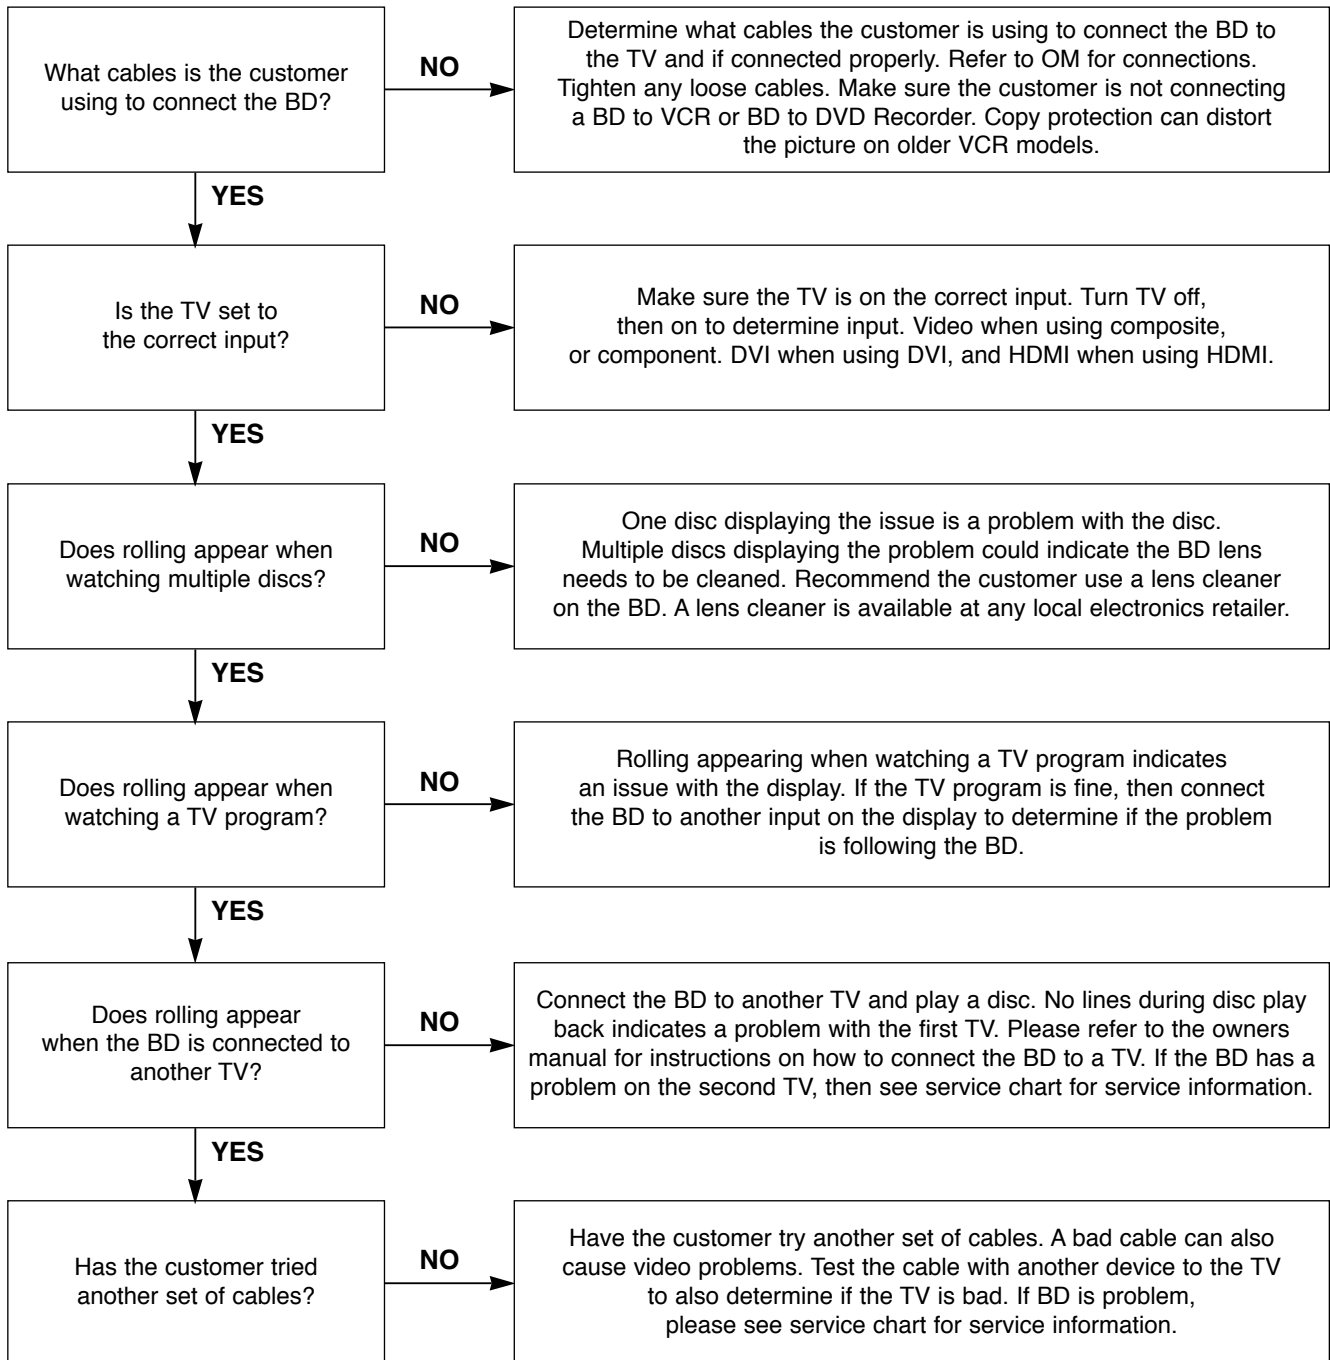

TRAINING MASTER FOR BLU-RAY (BD)

1-4. Shaky Picture


Distorted picture refers to the customer getting video, but there is a problem with the video.

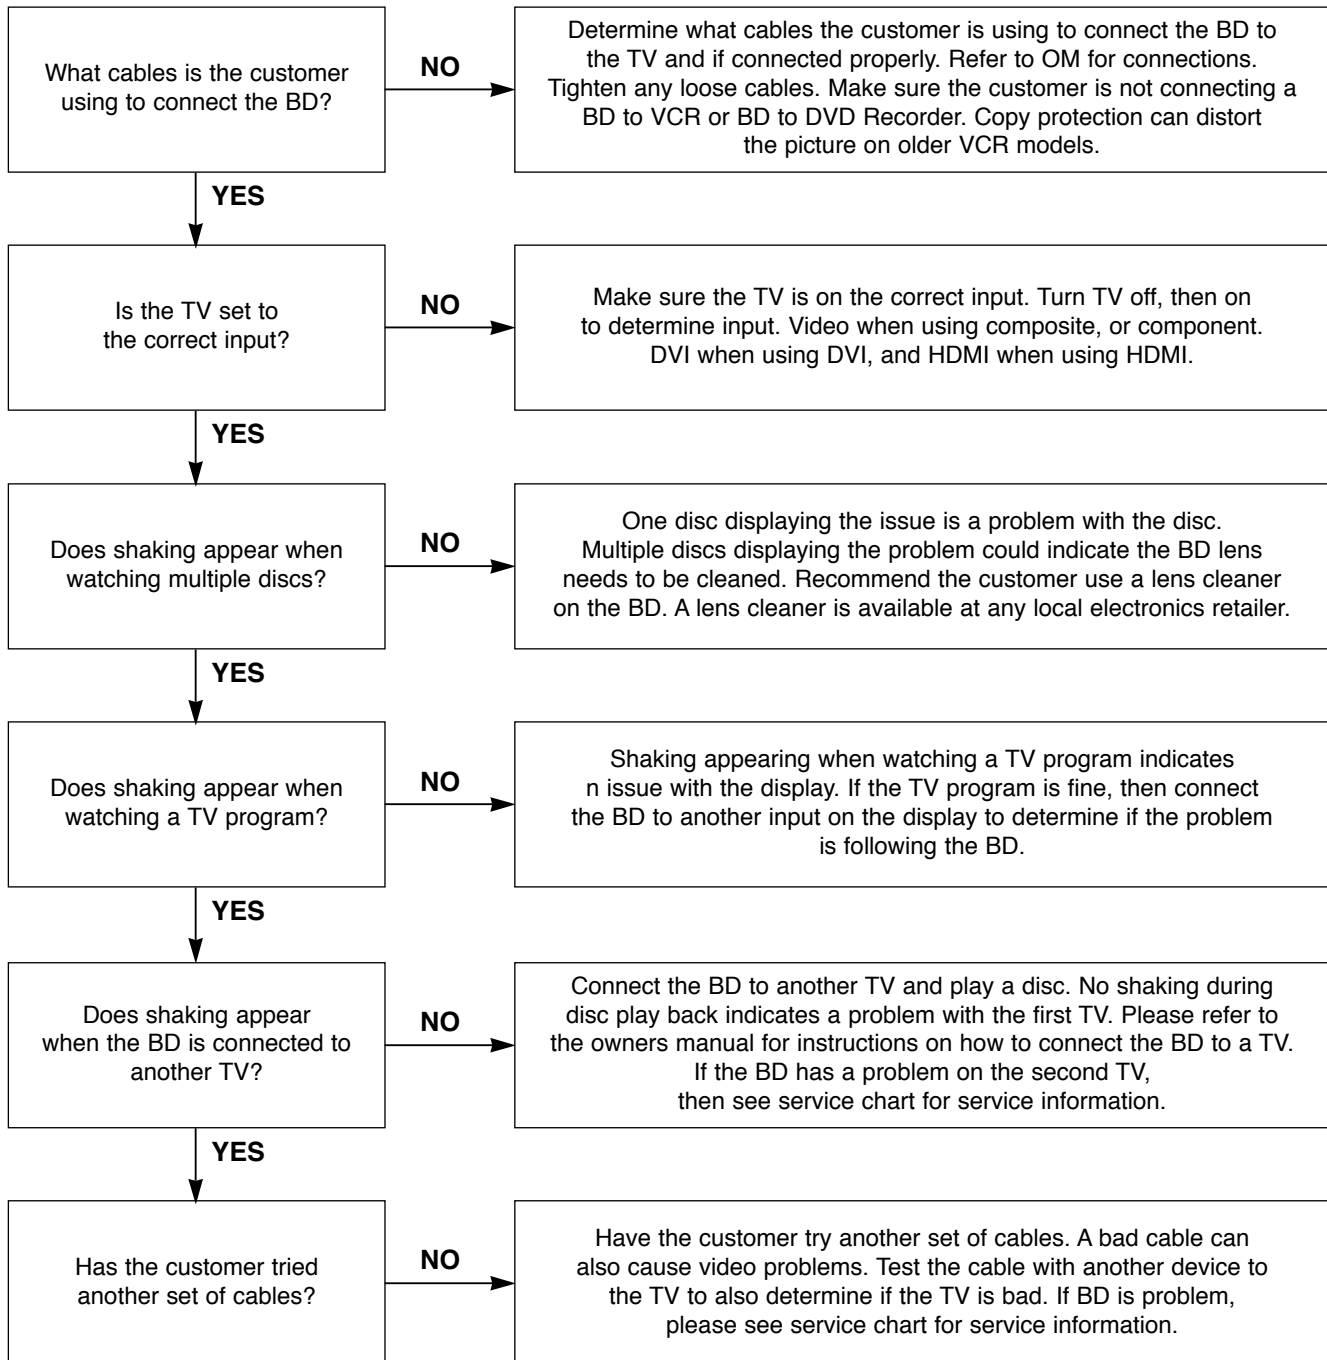

TRAINING MASTER FOR BLU-RAY (BD)

1-5. Blurry Picture

Distorted picture refers to the customer getting video, but there is a problem with the video.

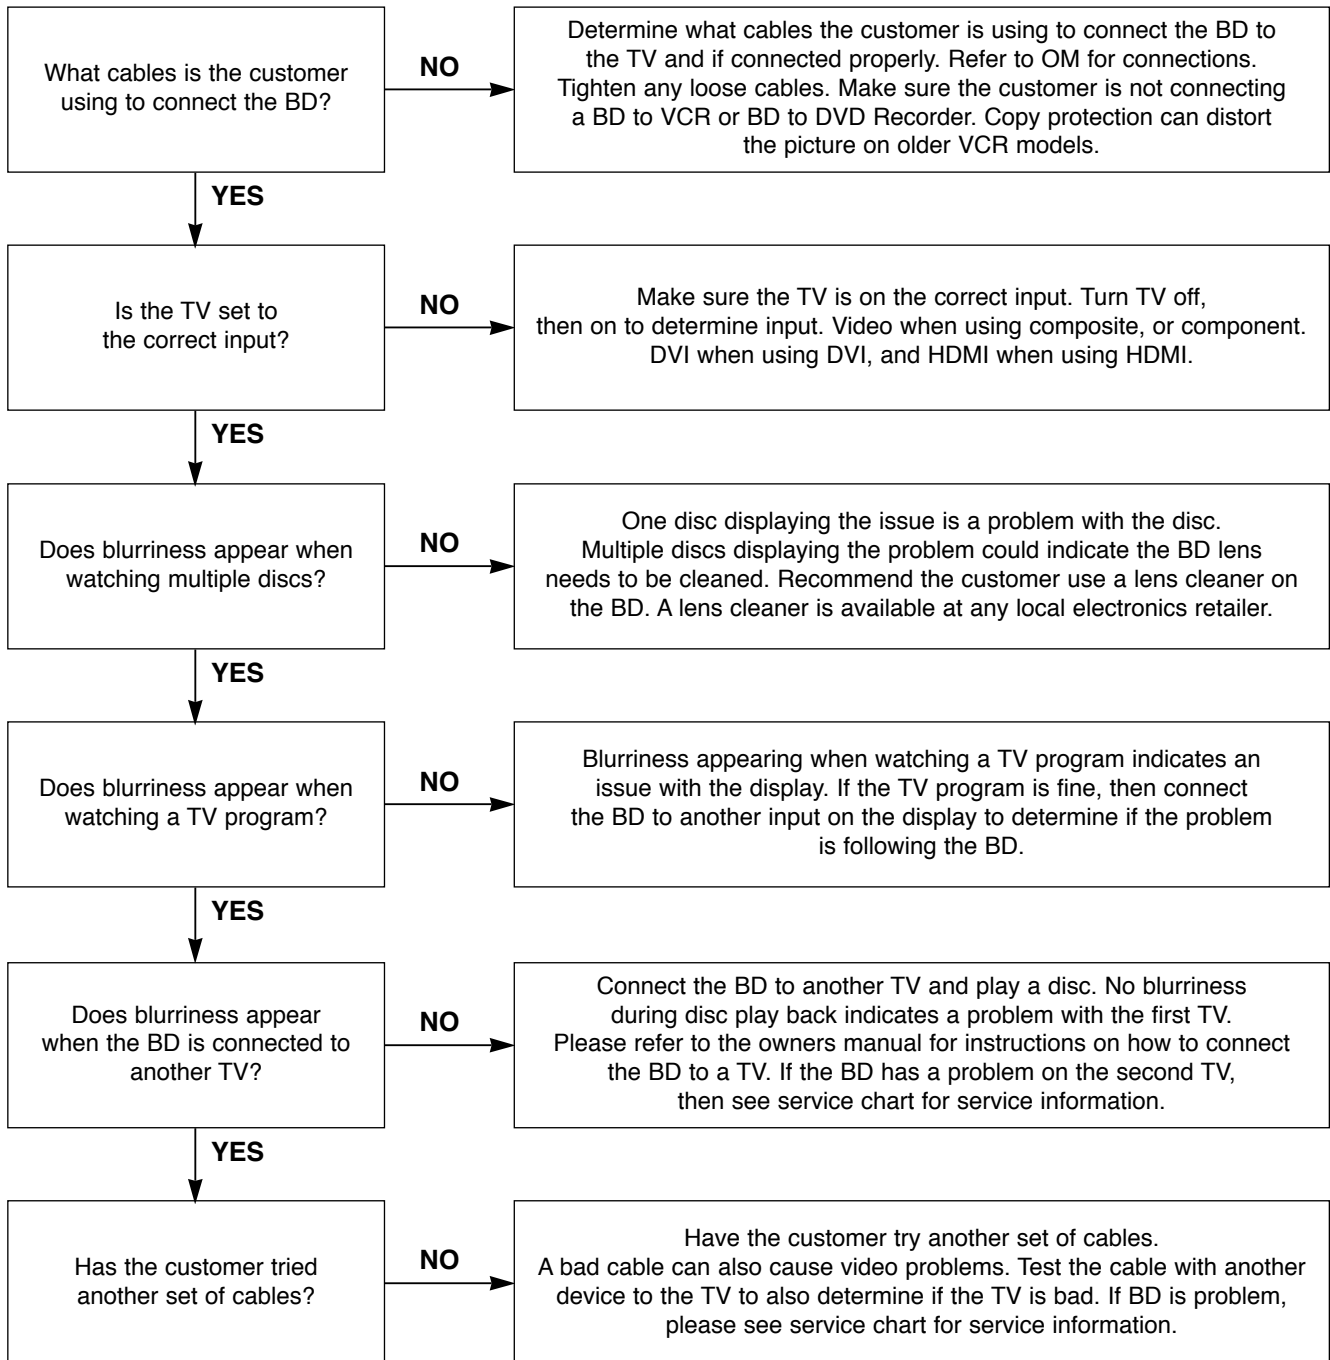


TRAINING MASTER FOR BLU-RAY (BD)

2. NO PICTURE

2-1. Black Screen


The entire screen is black.

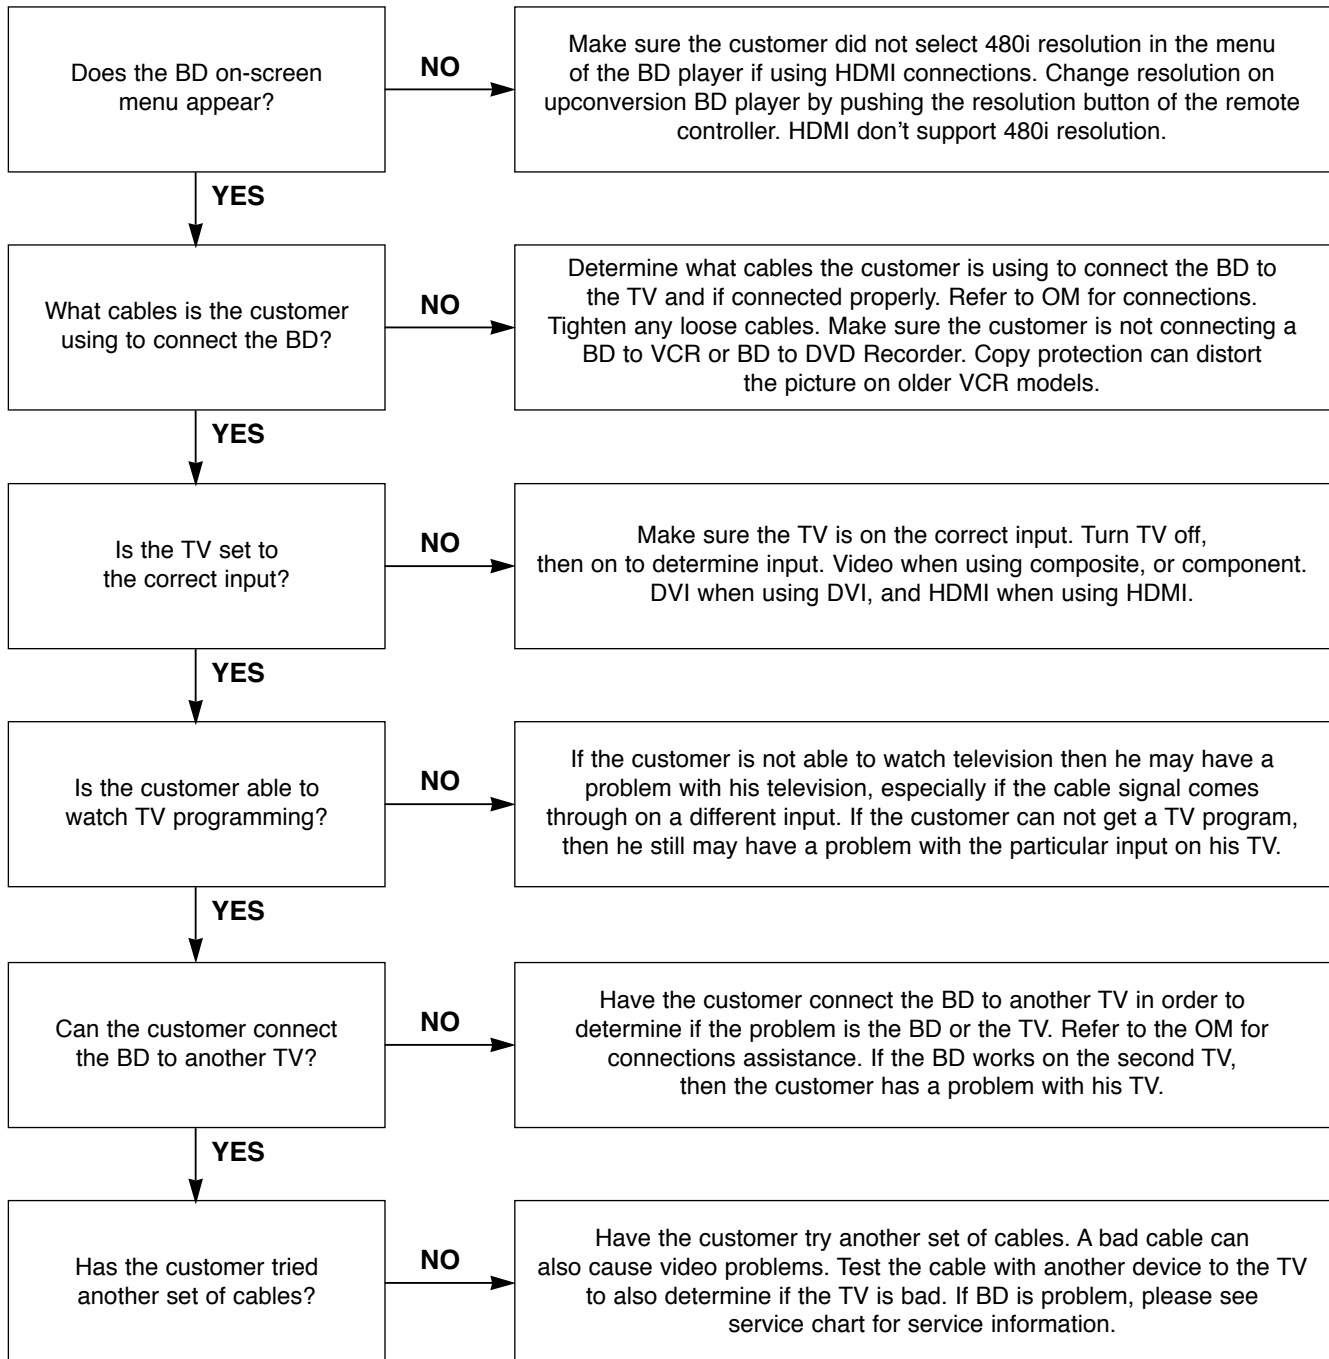

TRAINING MASTER FOR BLU-RAY (BD)

2-2. Blue Screen


The entire screen is a solid blue color.

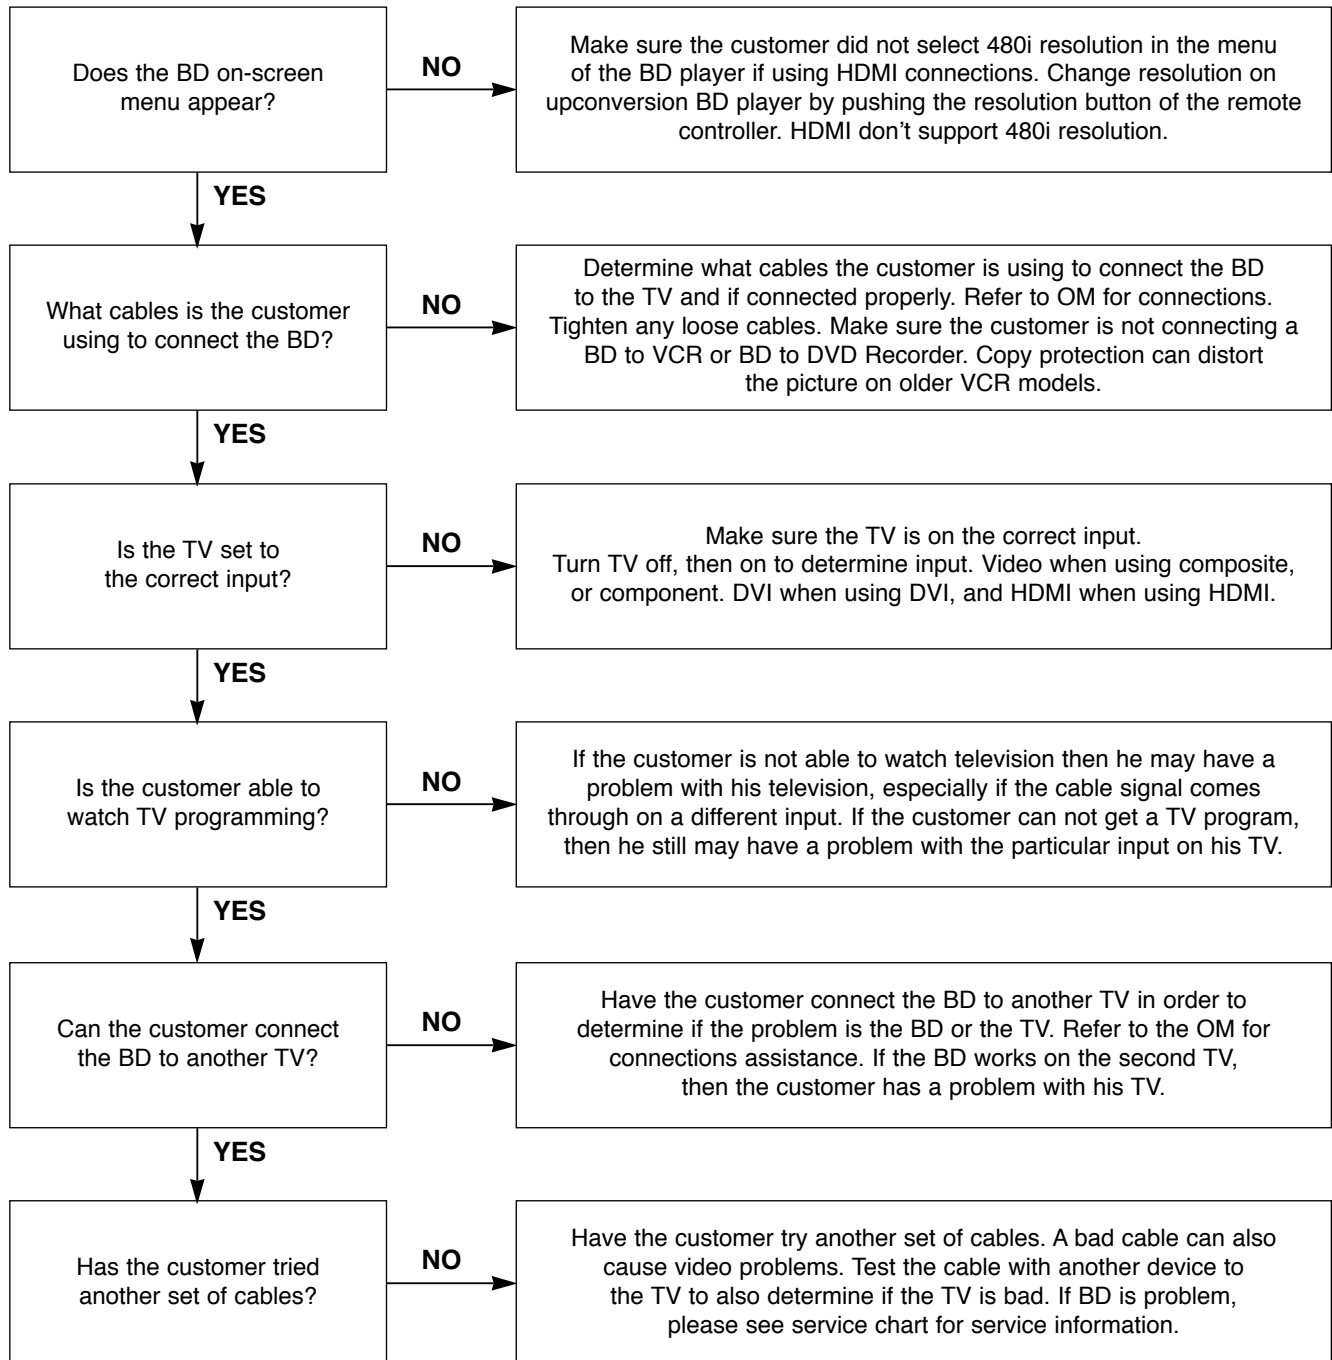

TRAINING MASTER FOR BLU-RAY (BD)

2-3. Snowy Screen


A snowy picture is when black and white dots are all over the screen.

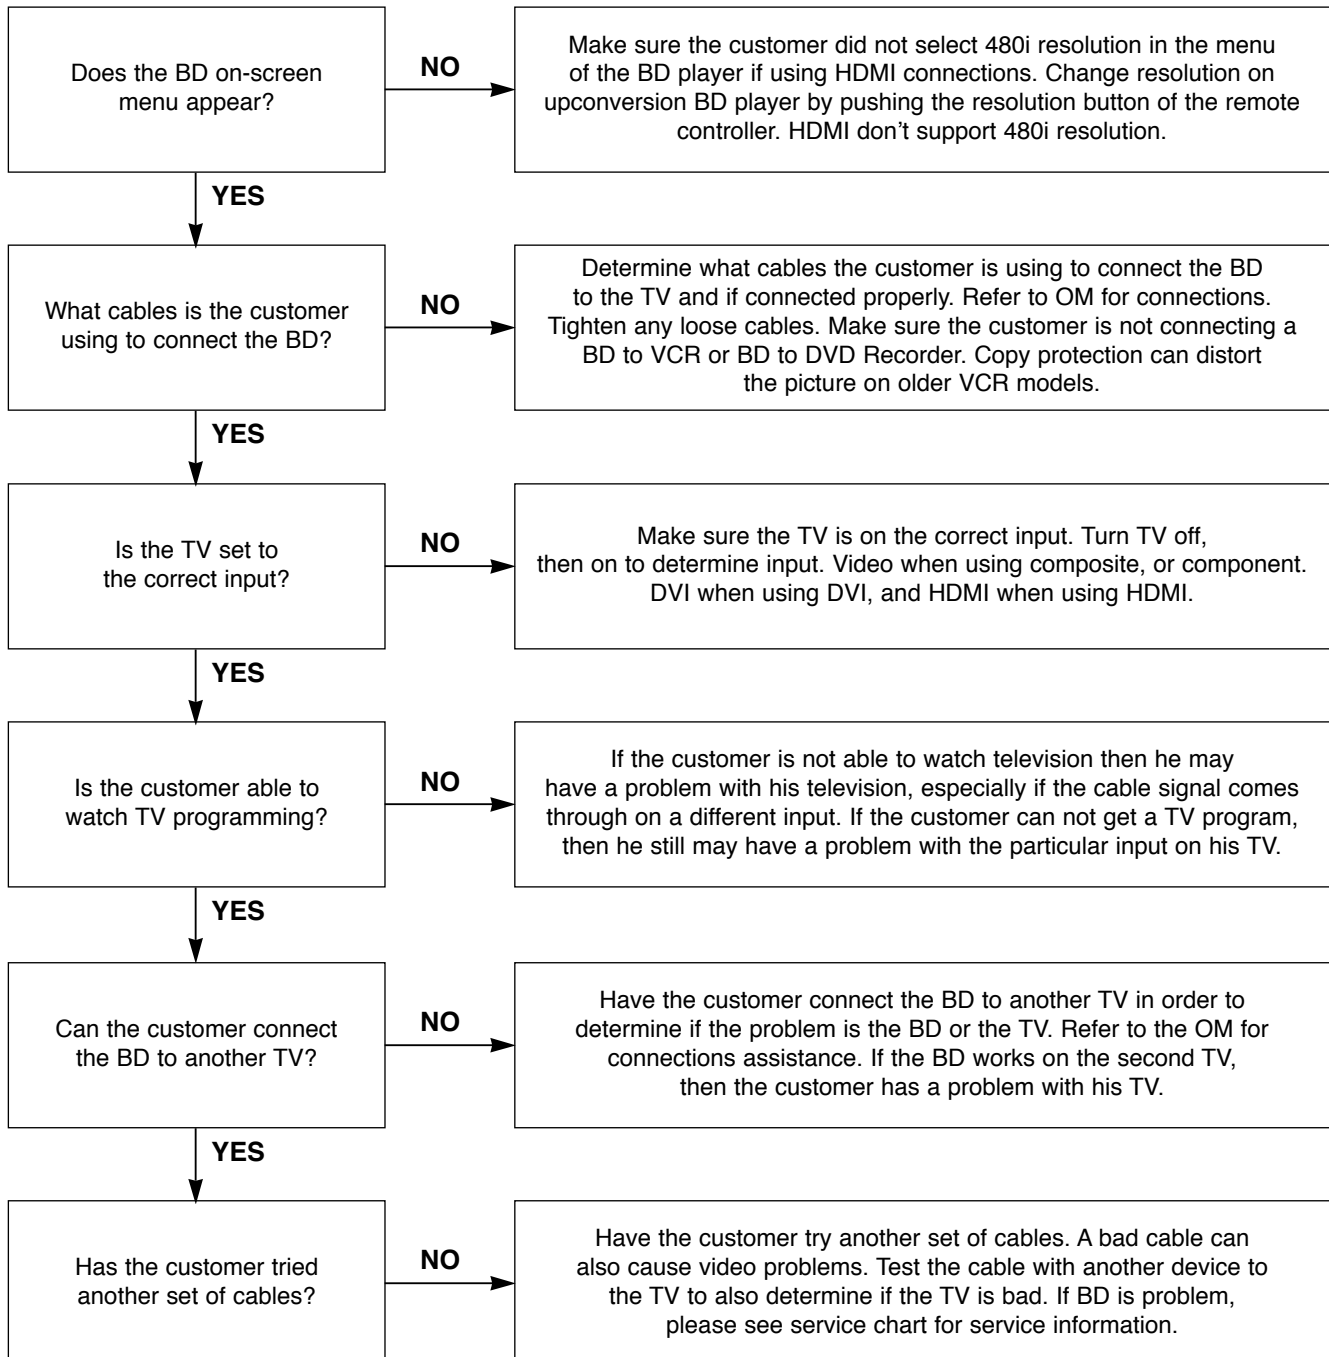

TRAINING MASTER FOR BLU-RAY (BD)


2-4. No Signal

A “no signal” message appears on the screen of the display.

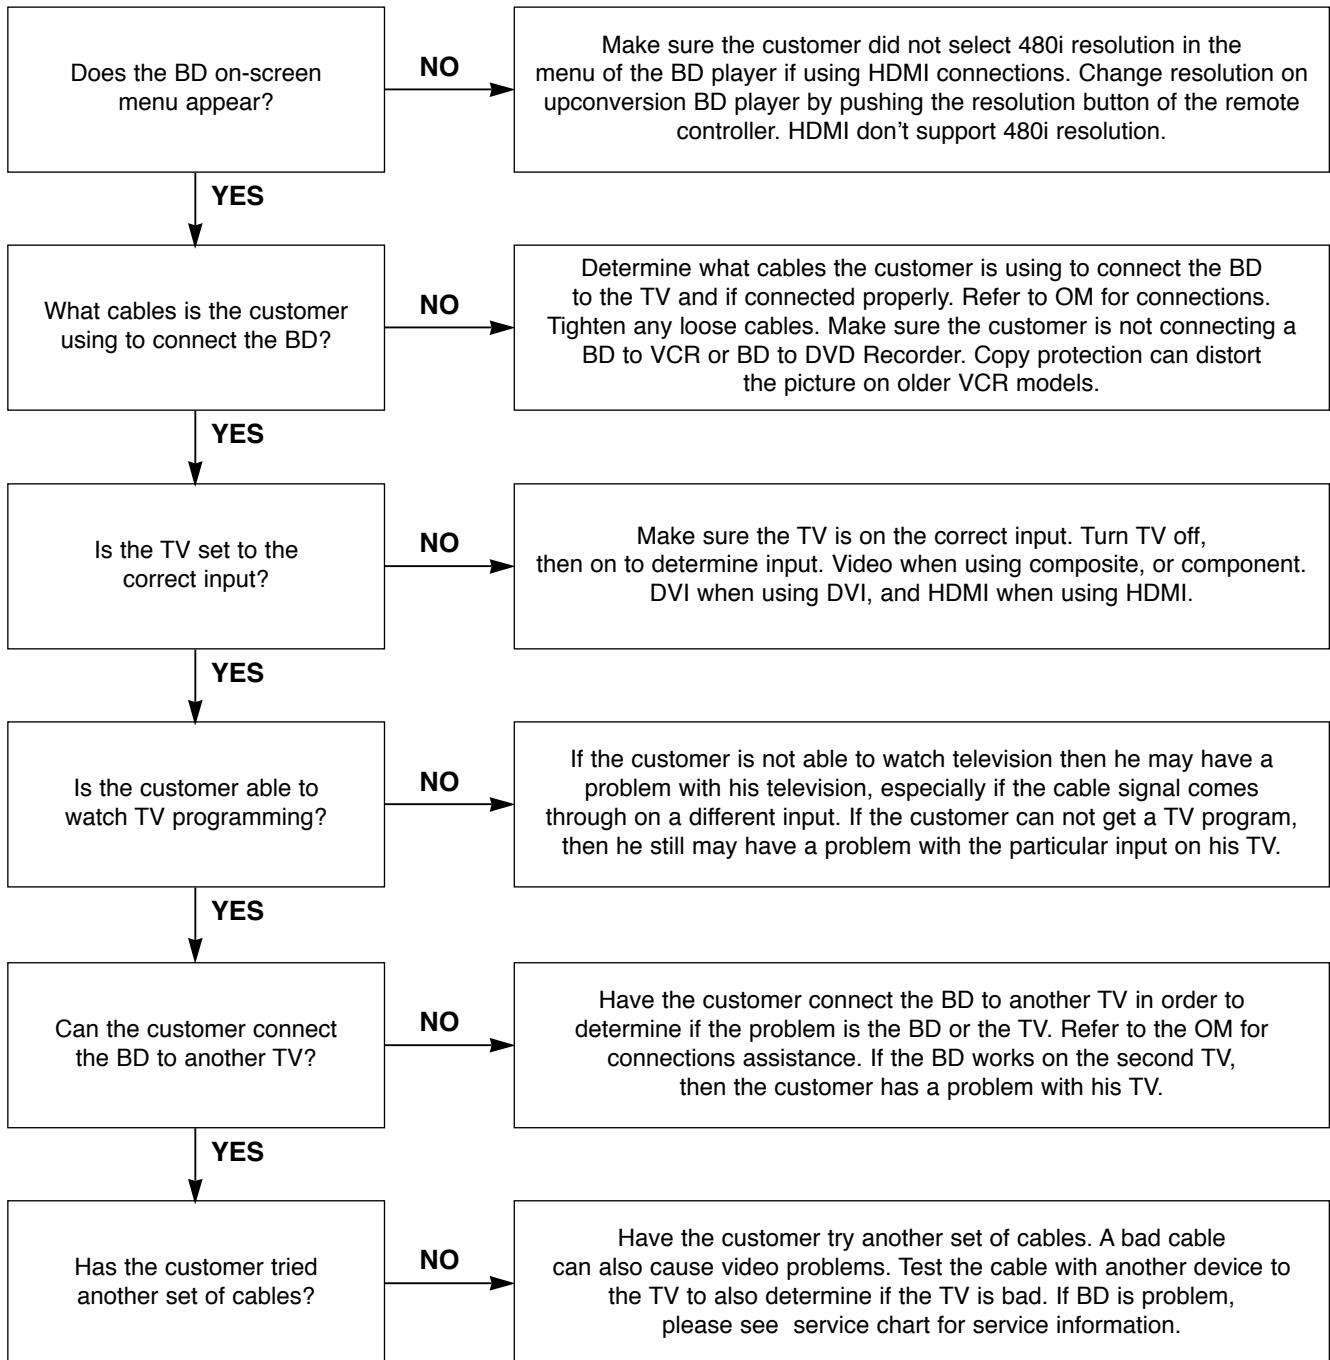

TRAINING MASTER FOR BLU-RAY (BD)

2-5. Invalid Format or Format Not Supported

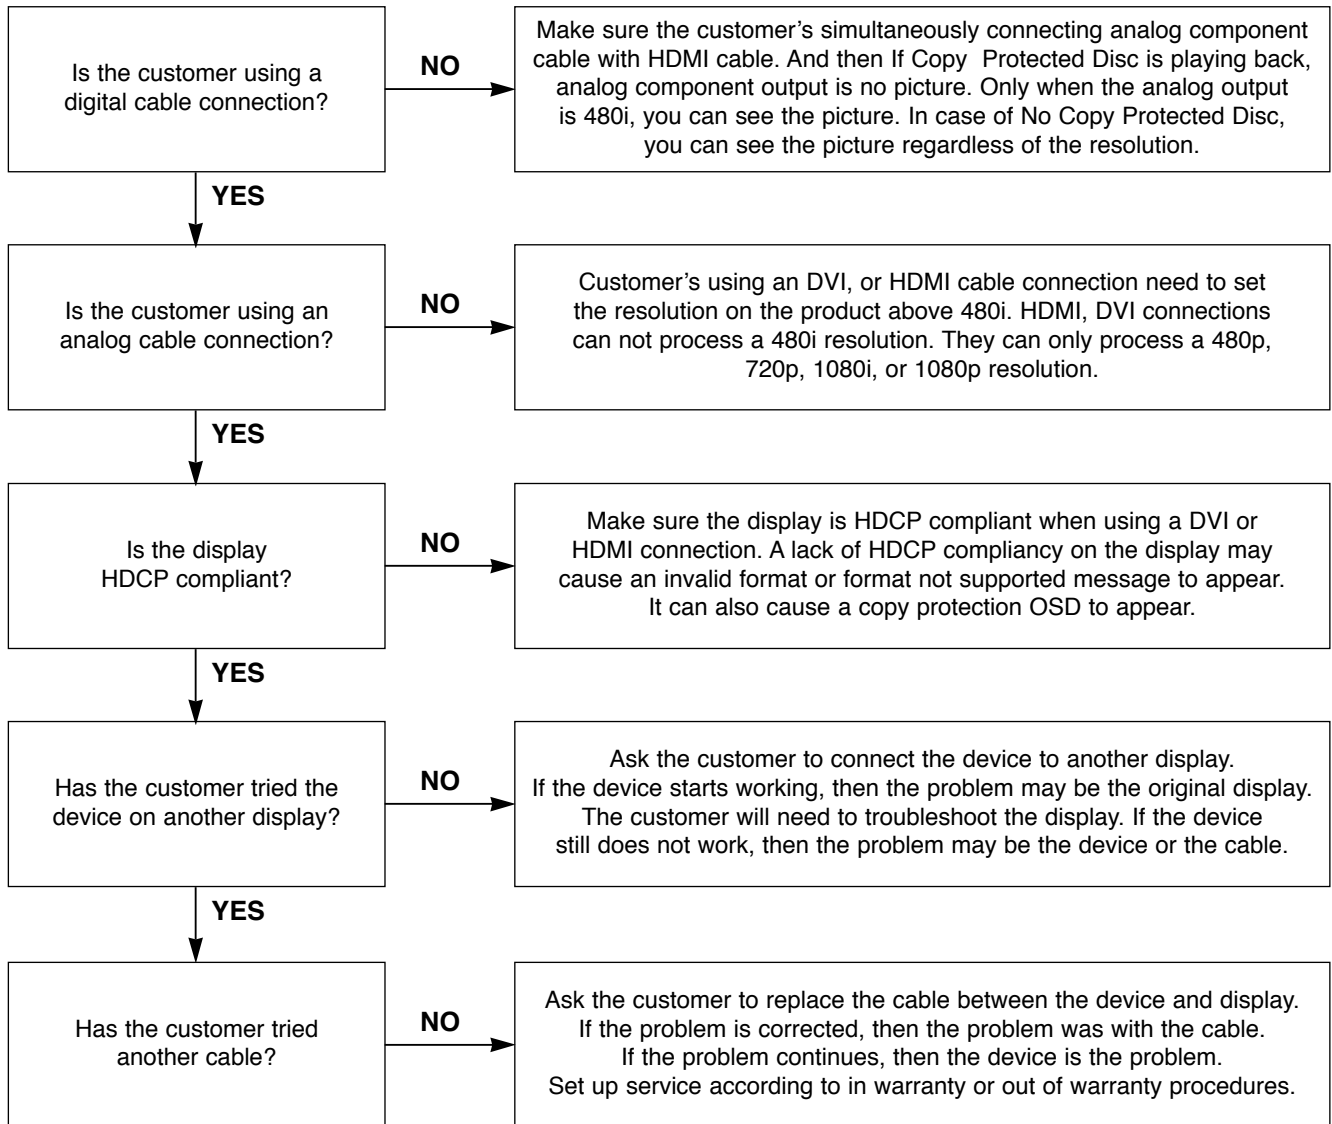


TRAINING MASTER FOR BLU-RAY (BD)

3. PICTURE COLOR

3-1. No Color


The video displays no color and only shows in black and white.

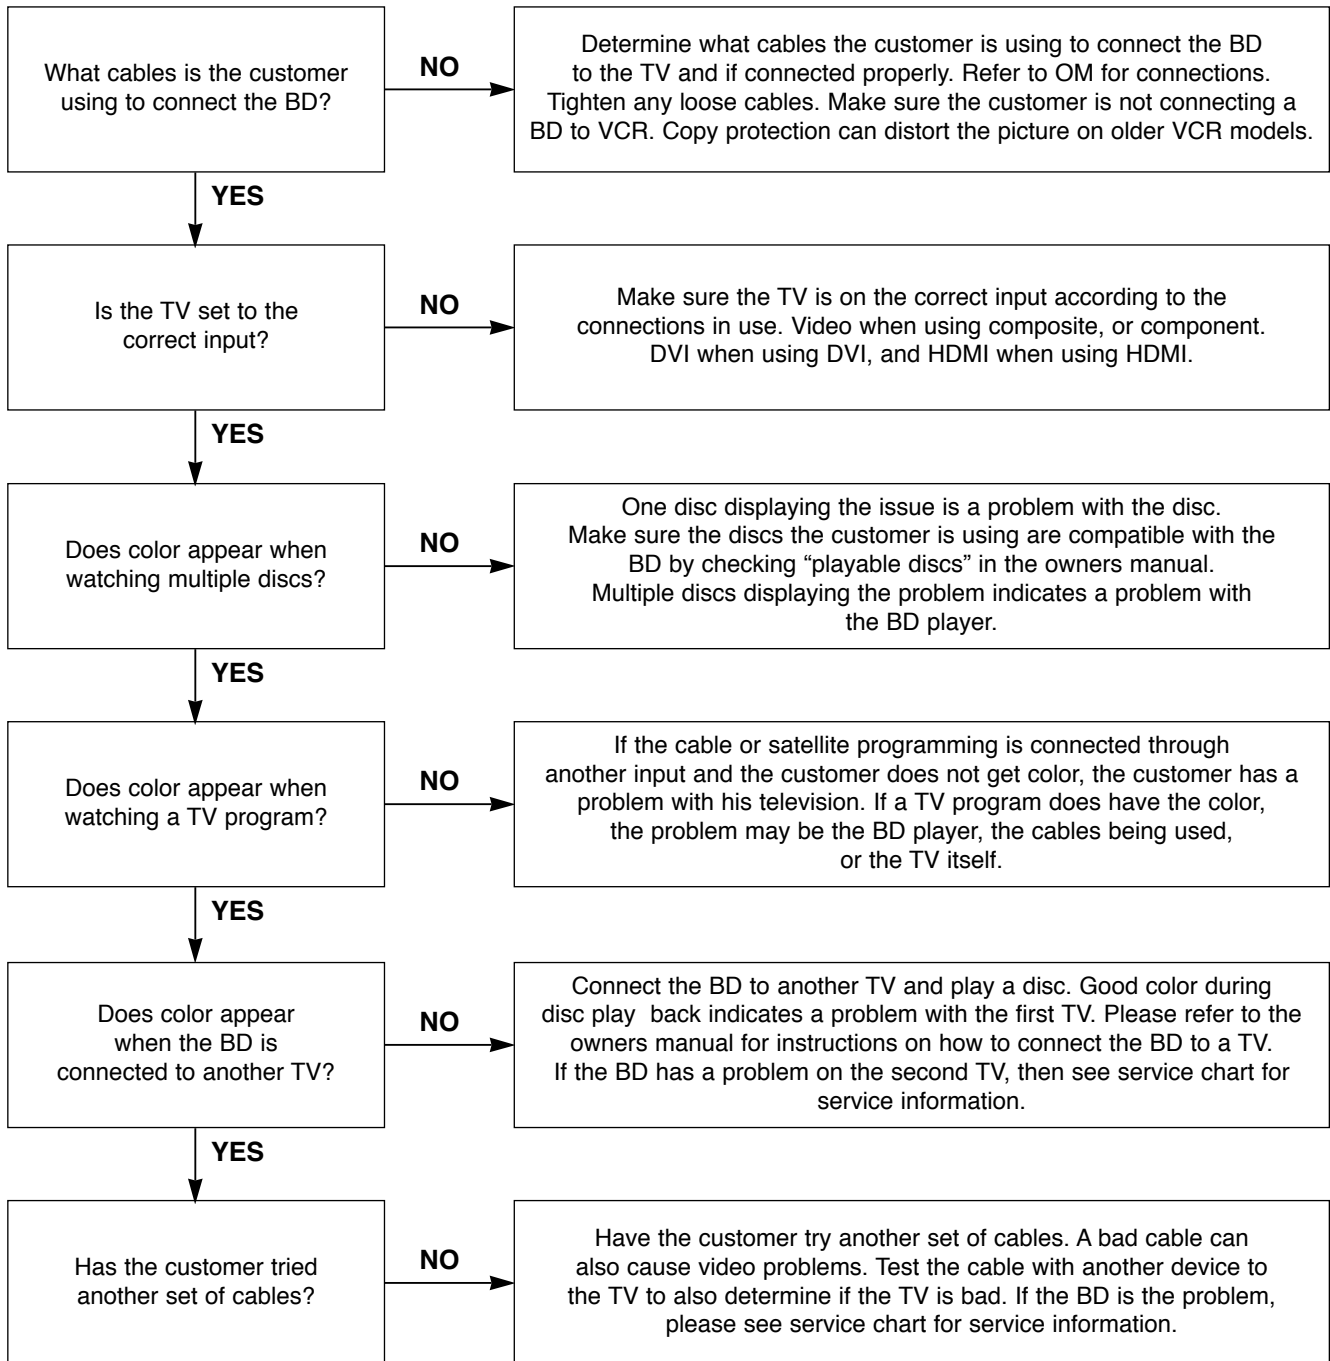

TRAINING MASTER FOR BLU-RAY (BD)

3-2. Poor Color

The color is poor. Examples would be washed out colors, colors bleeding into one another, or a solid tint to a screen.

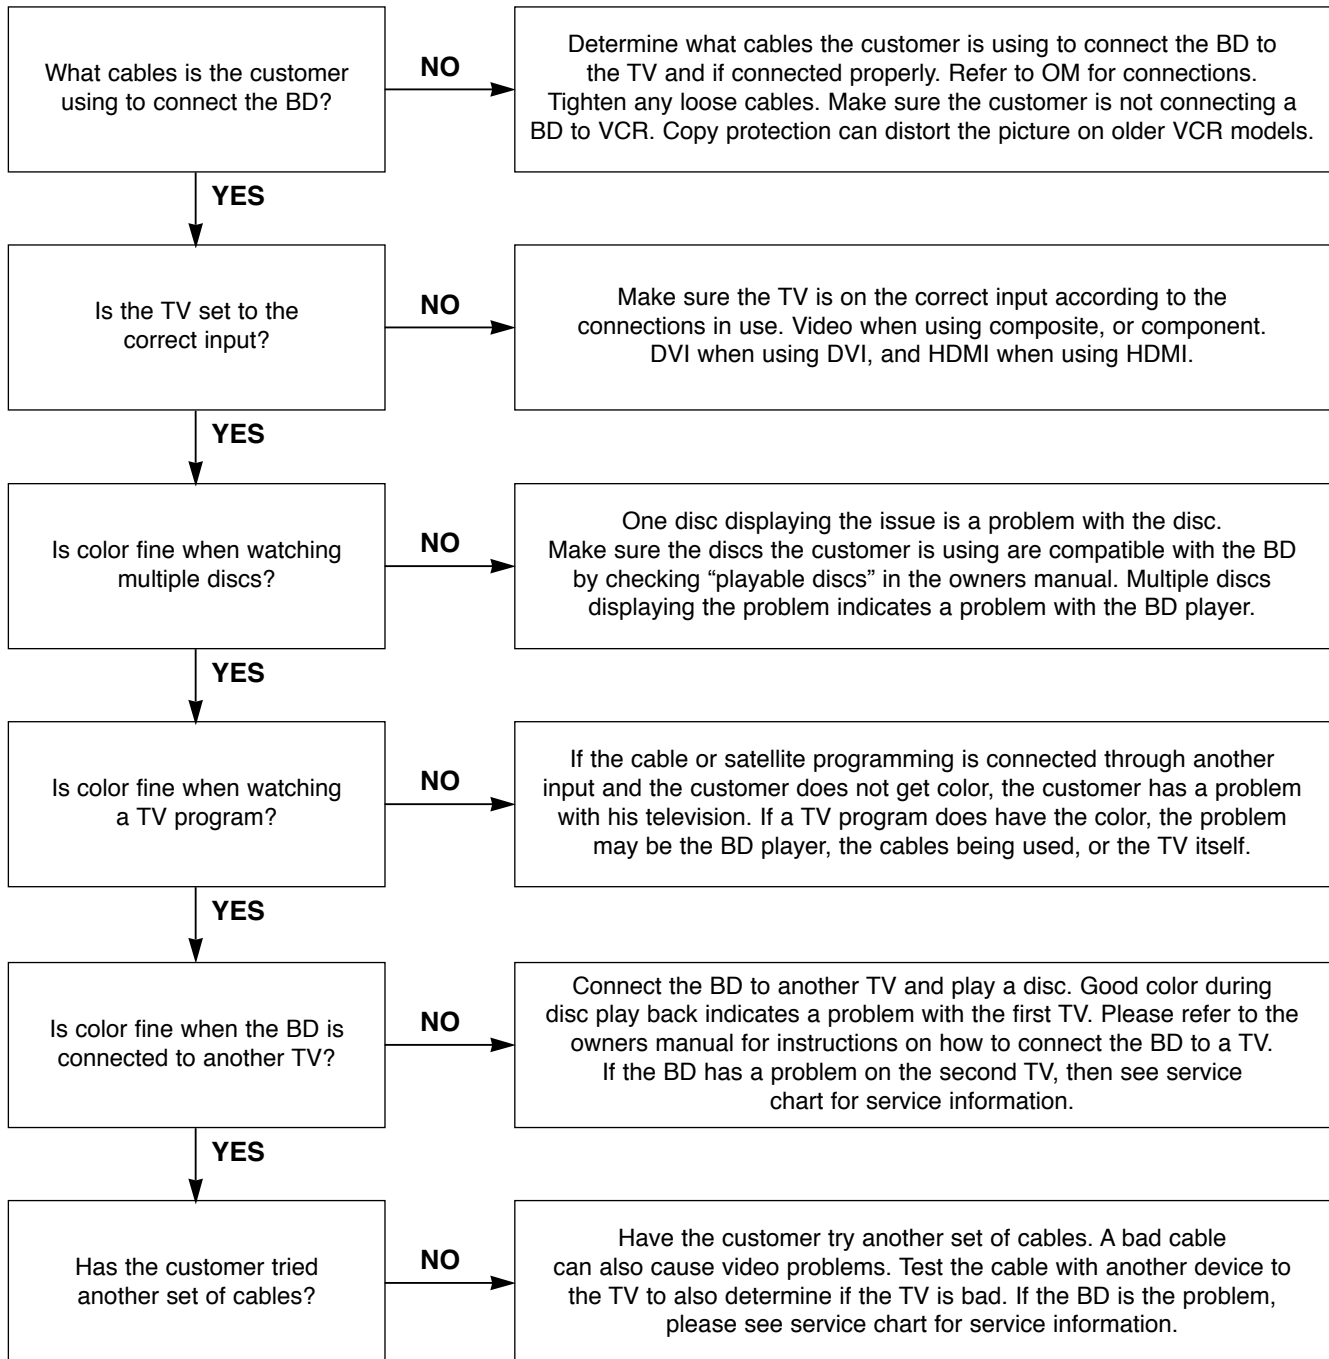


TRAINING MASTER FOR BLU-RAY (BD)

4. NOISE/AUDIO PROBLEMS

4-1. No Audio


The customer is not able to get audio.

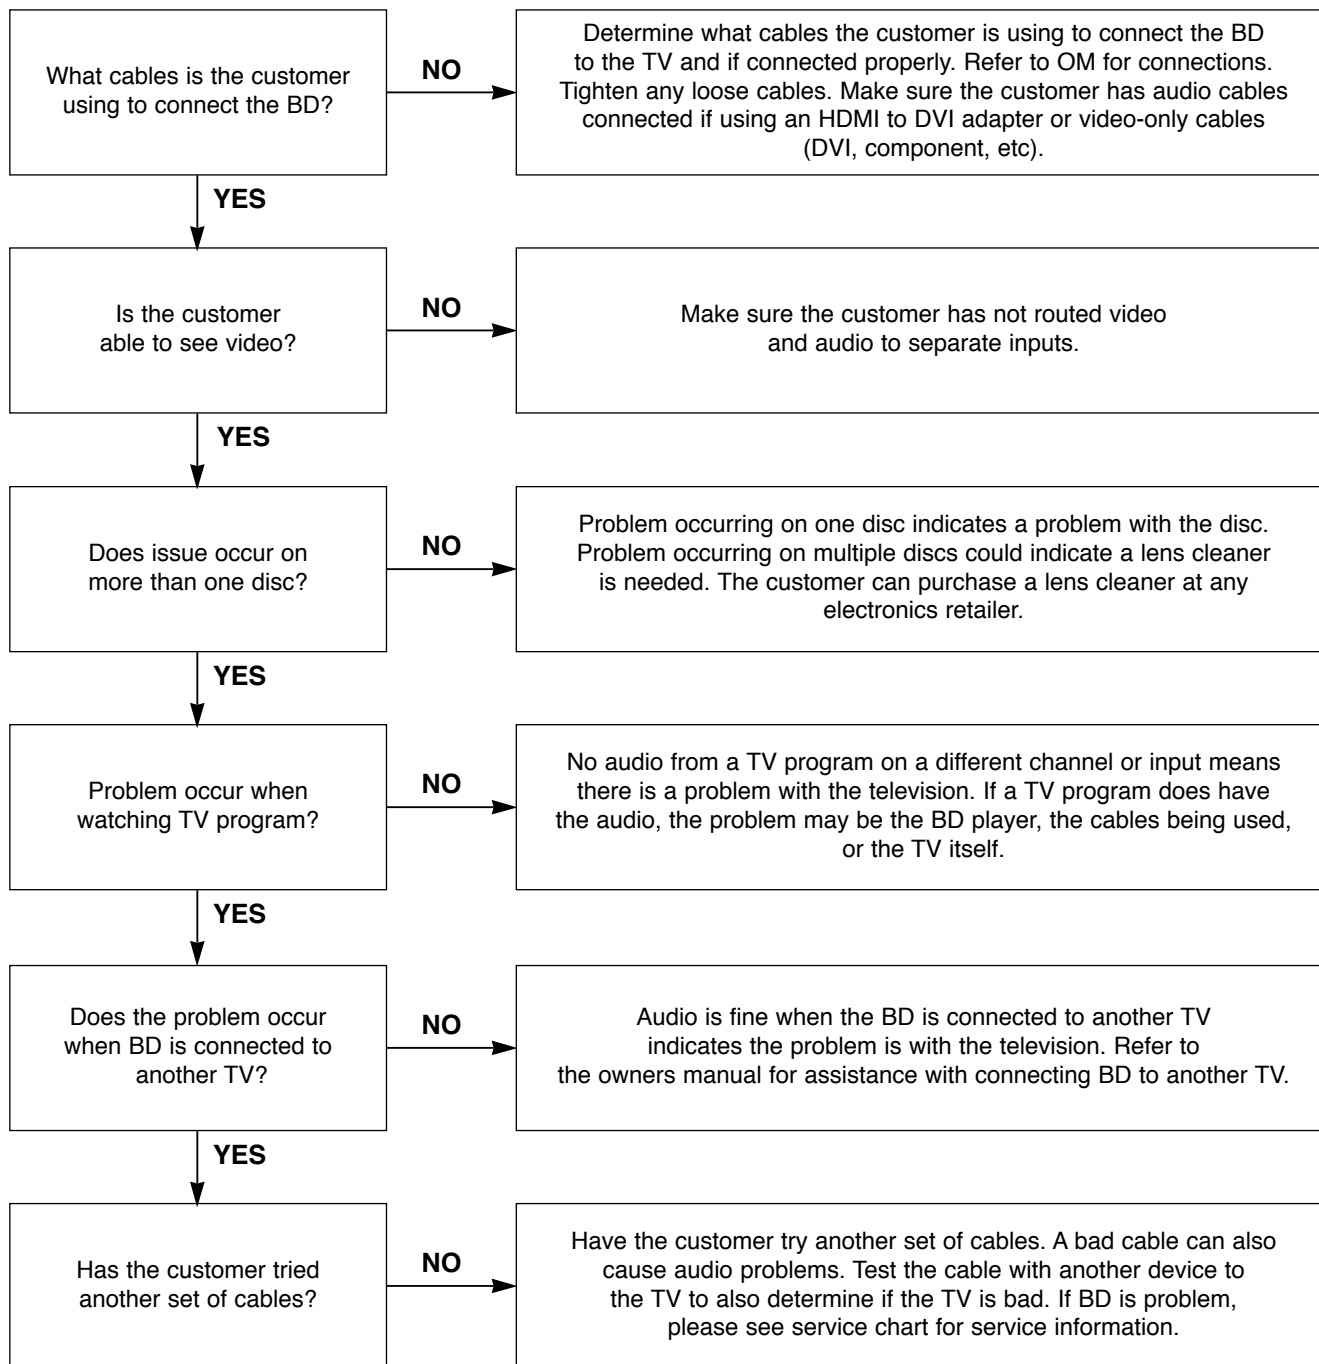

TRAINING MASTER FOR BLU-RAY (BD)

4-2. Distorted Audio


The audio sounds muffled, scratchy, or the audio skips.

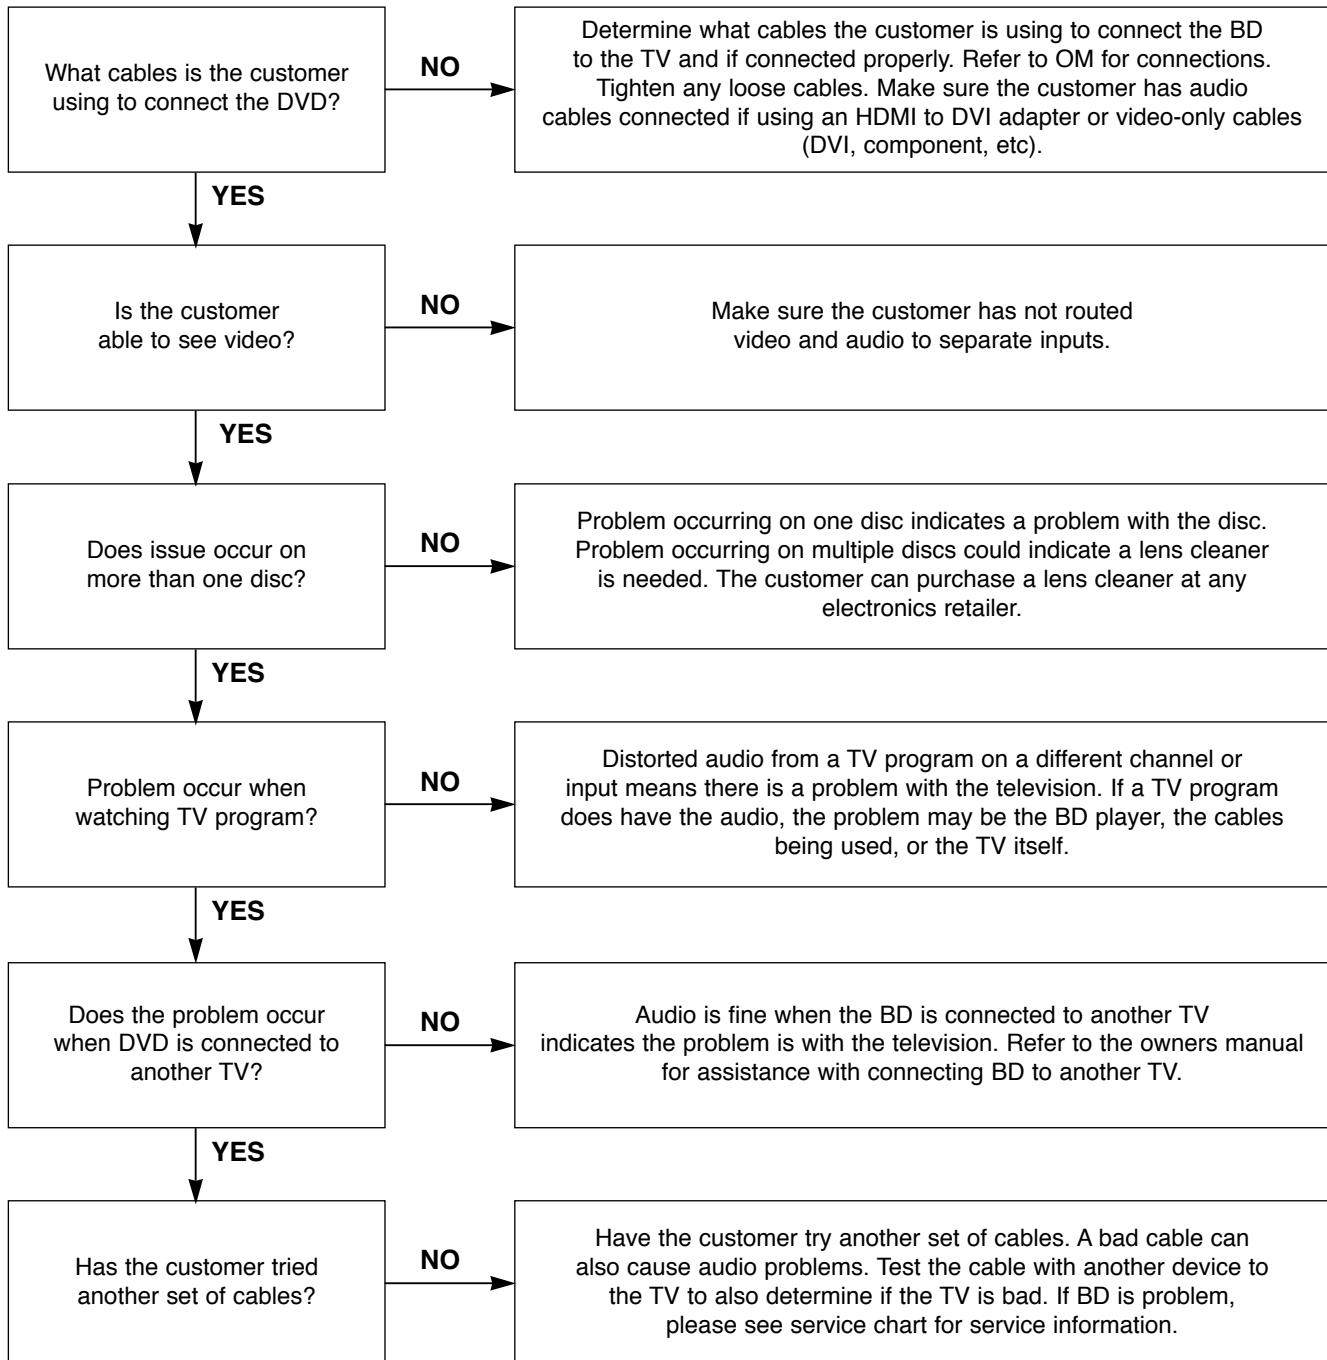

TRAINING MASTER FOR BLU-RAY (BD)


4-3. Humming/Clicking Noise

The unit is making a humming noise or a clicking noise.

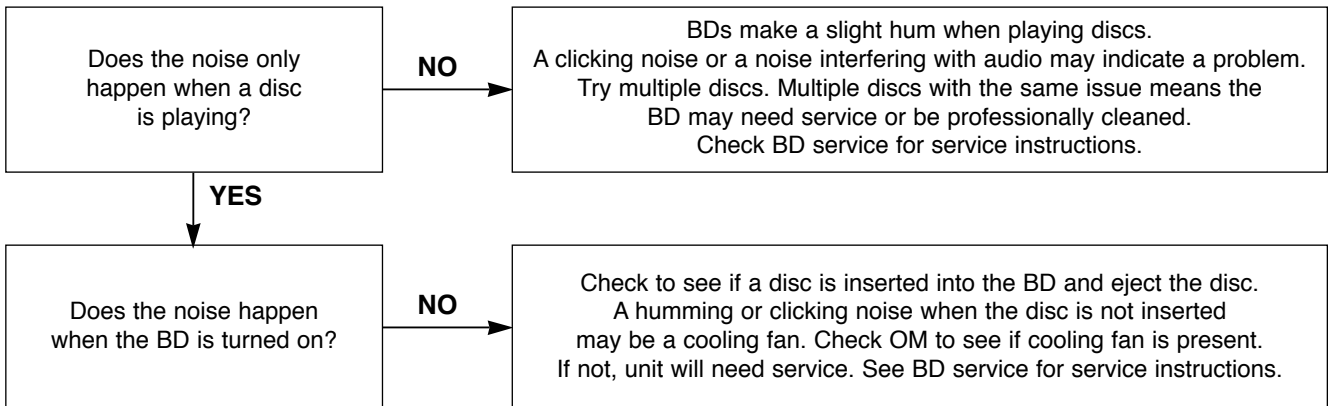

4-4. Audio/Video Out of Synch

The audio and video do not match up. People look to be talking, but their voices are delayed by a few seconds.

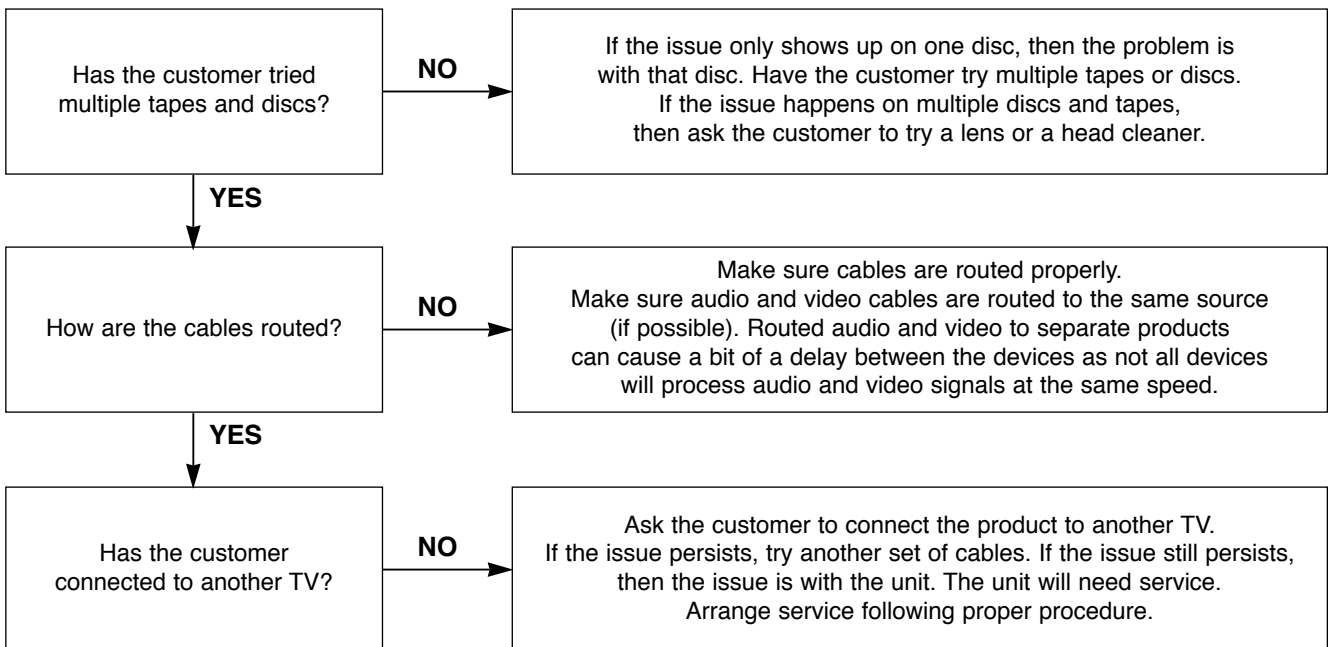


TRAINING MASTER FOR BLU-RAY (BD)

5. MISCELLANEOUS

5-1. No Power


The unit will not turn on.

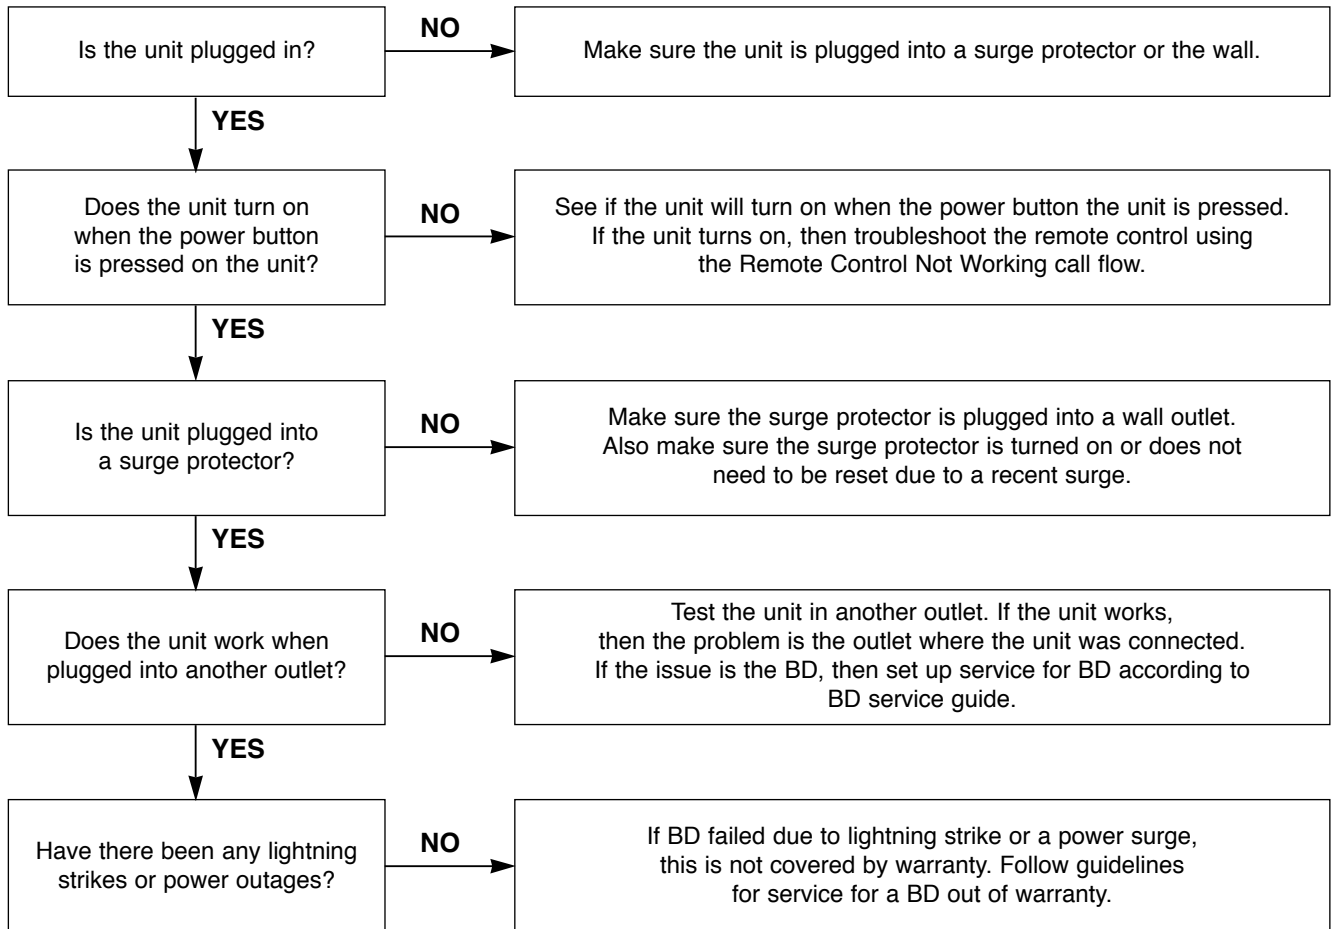

TRAINING MASTER FOR BLU-RAY (BD)

5-2. Disc Error


The unit displays “disc error” when a disc is inserted into the BD player.

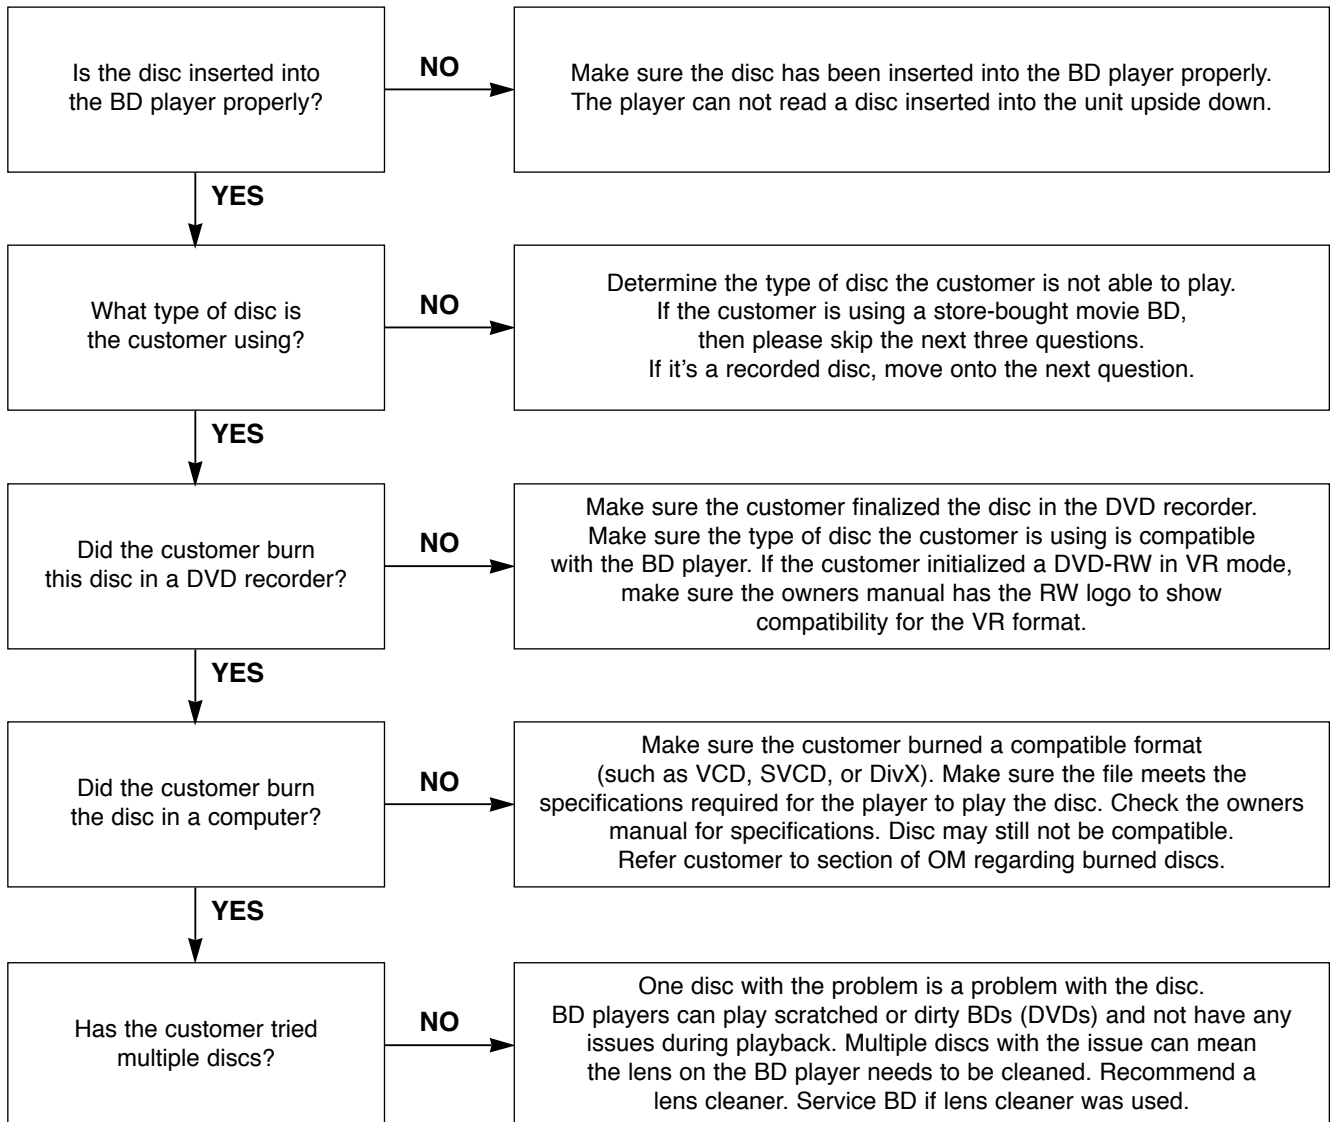

TRAINING MASTER FOR BLU-RAY (BD)


5-3. Unit Locks Up

Unit does not respond to any commands.

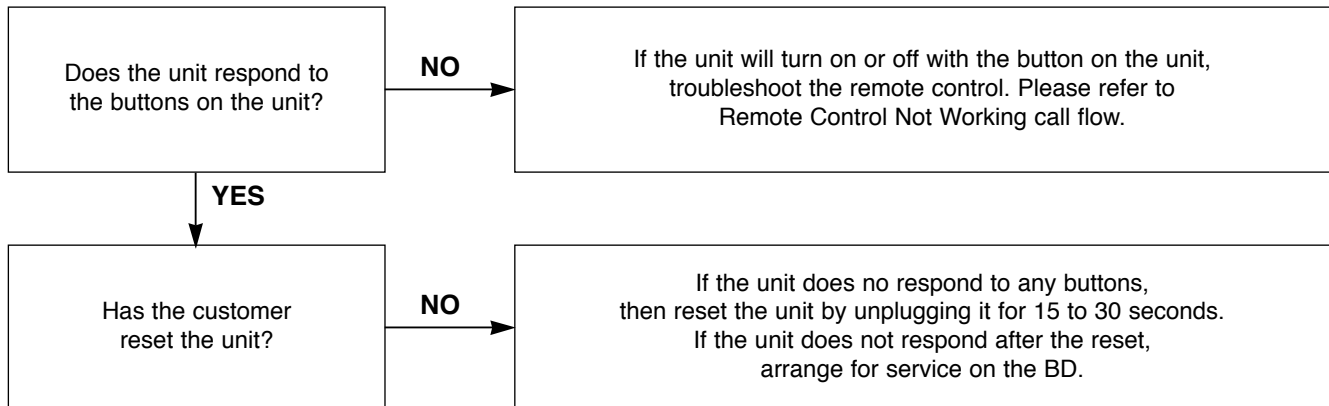


5-4. Disc Stuck

A BD disc is stuck in the unit.

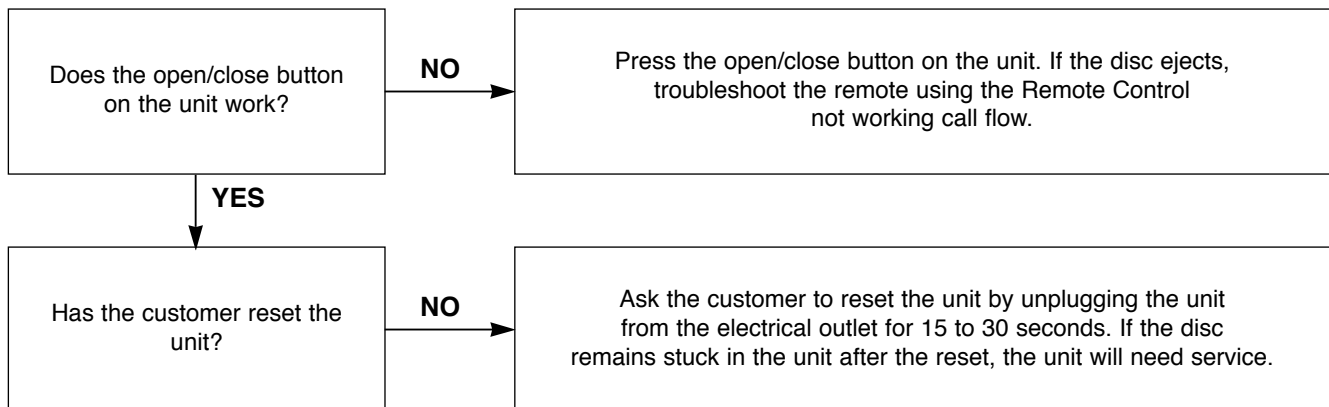

TRAINING MASTER FOR BLU-RAY (BD)


5-5. Remote Control Not Working

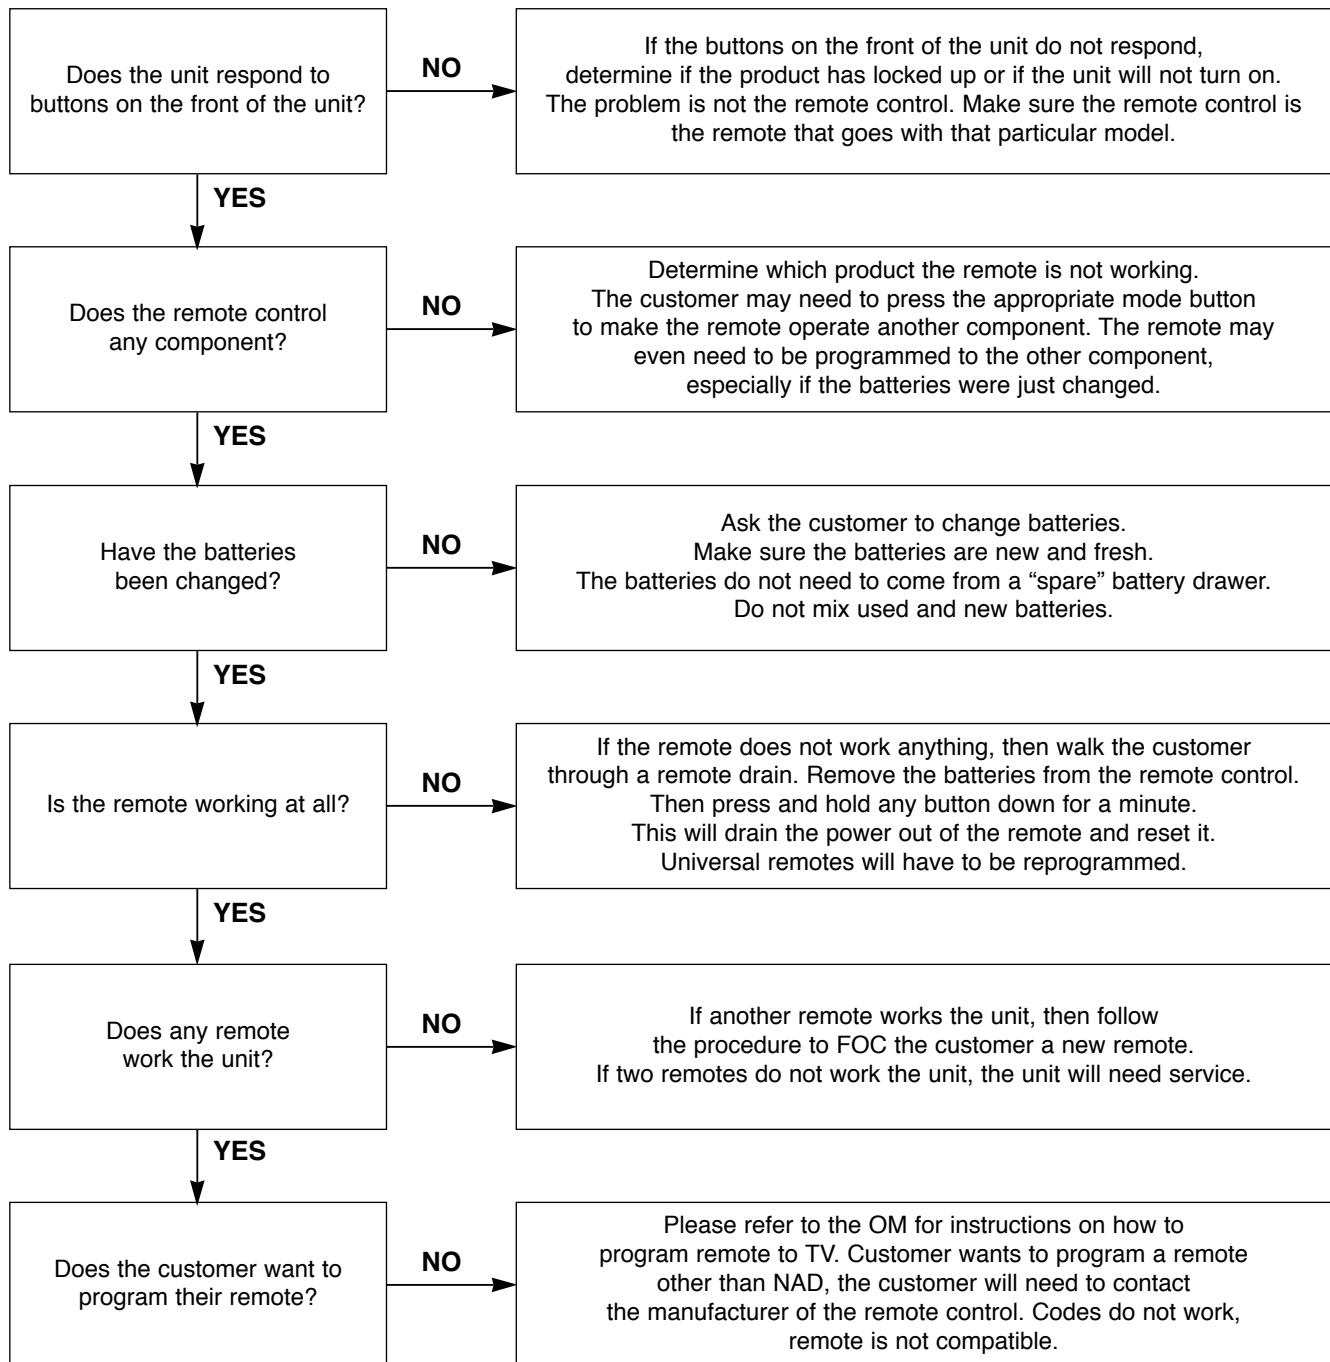

TRAINING MASTER FOR BLU-RAY (BD)

5-6. Will Not Play Disc


The unit will not play a disc when a disc is inserted into the player.

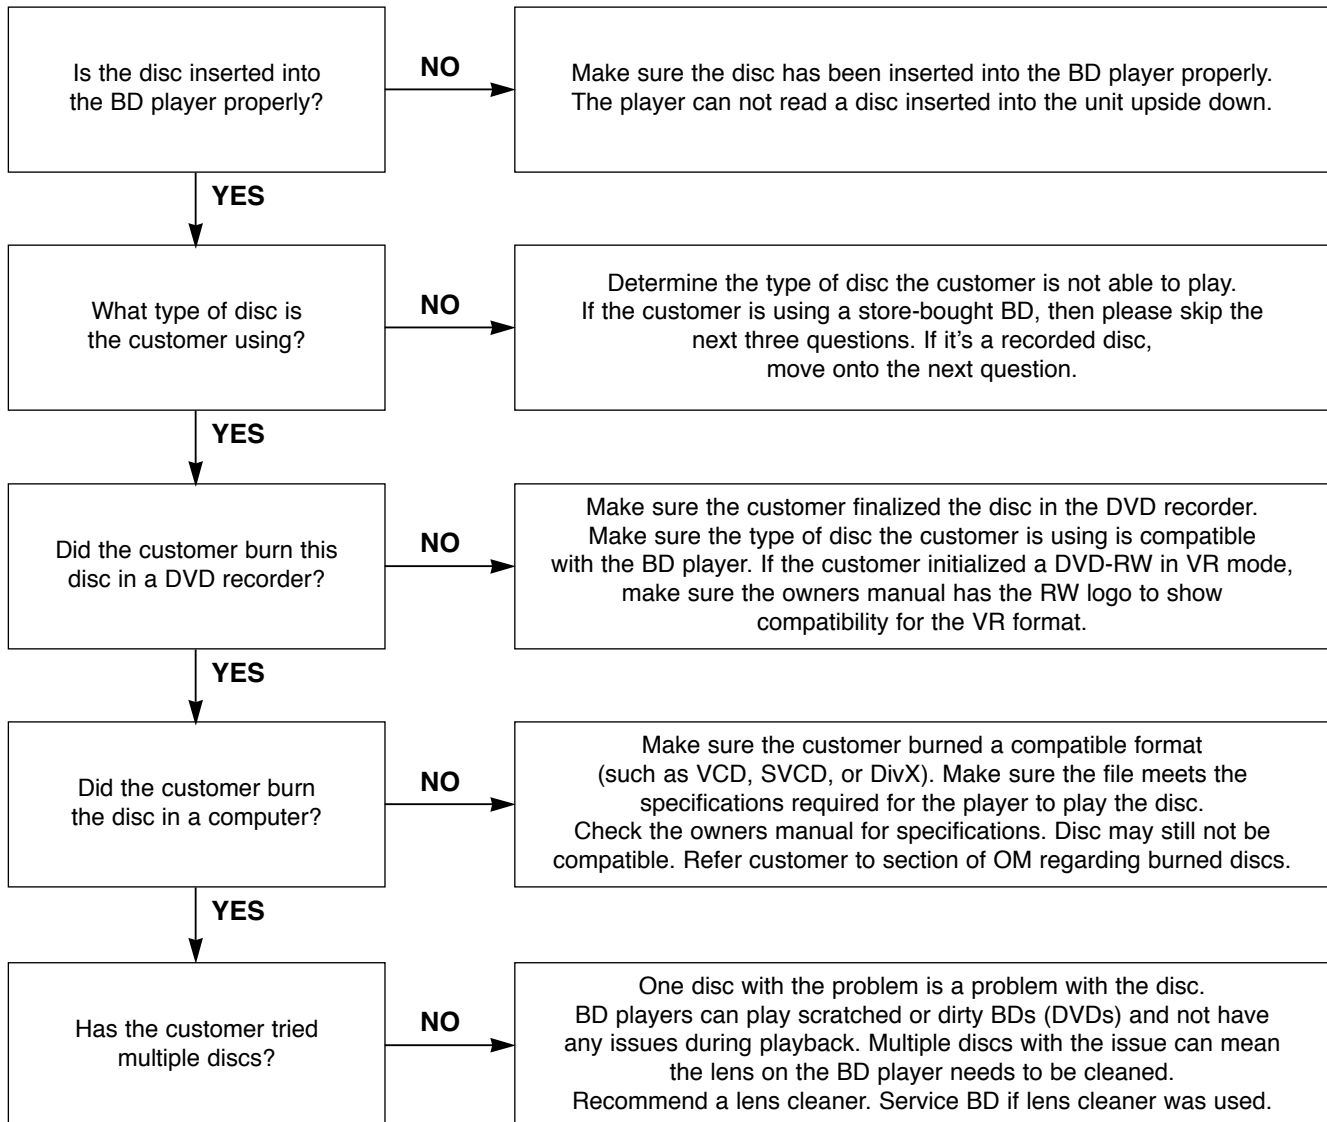

TRAINING MASTER FOR BLU-RAY (BD)

5-7. Disc Freezes or Skips


The audio and video freeze and skip during play back of a BD or DVD disc.

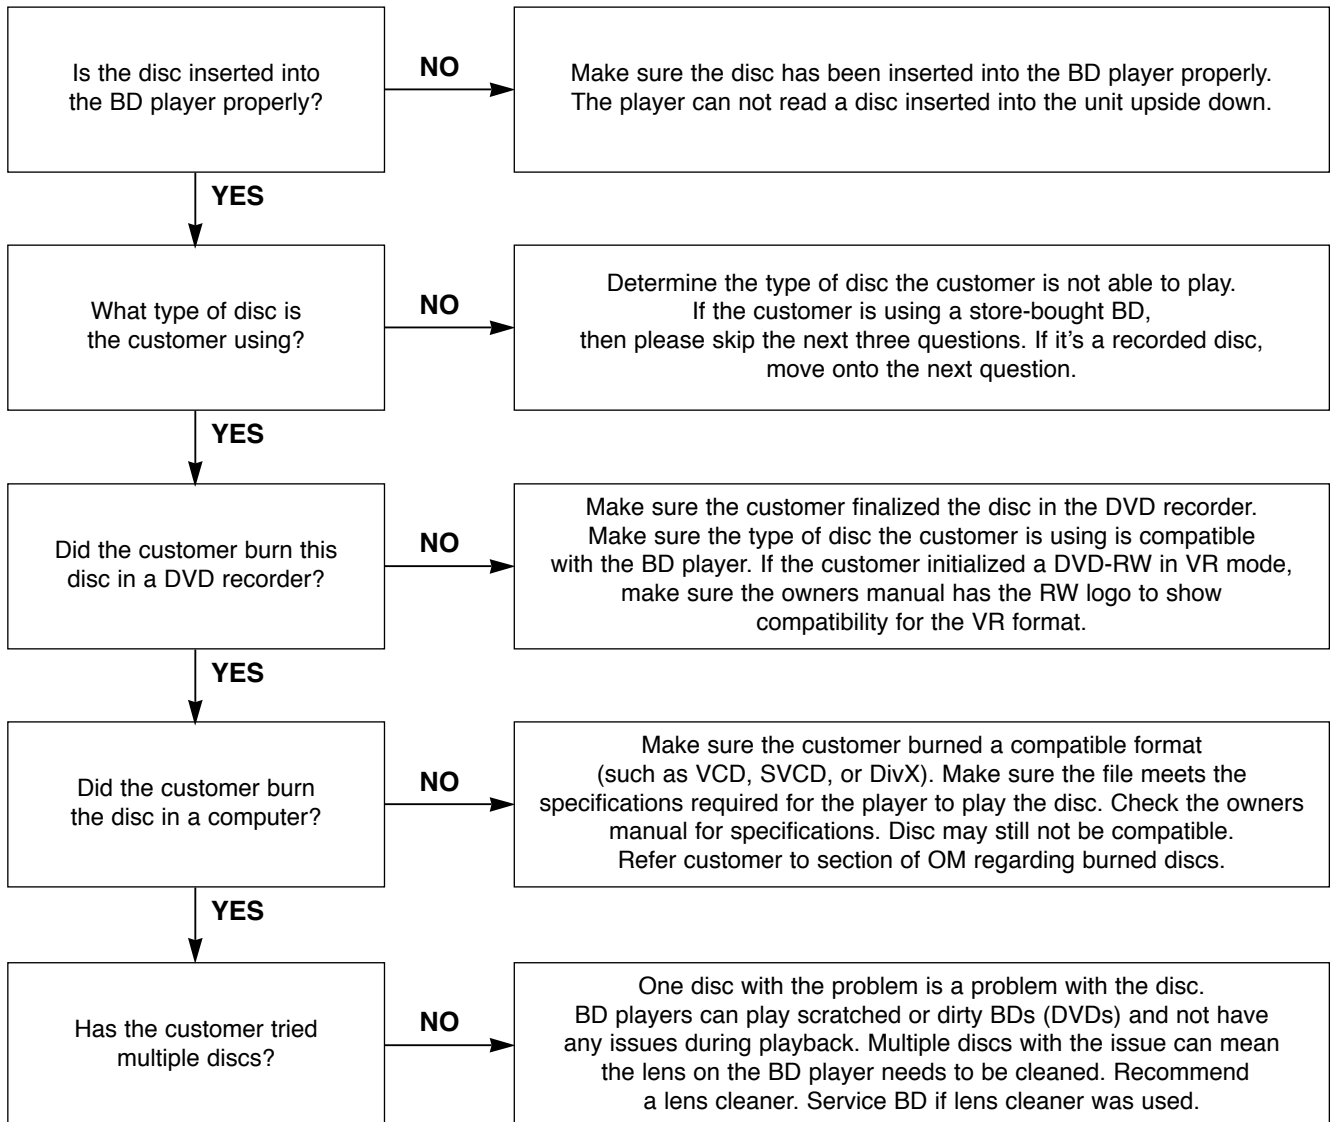

TRAINING MASTER FOR BLU-RAY (BD)


5-8. Can Access Menu, but Not Play a Movie

The disc menu is displayed but the disc will not play.

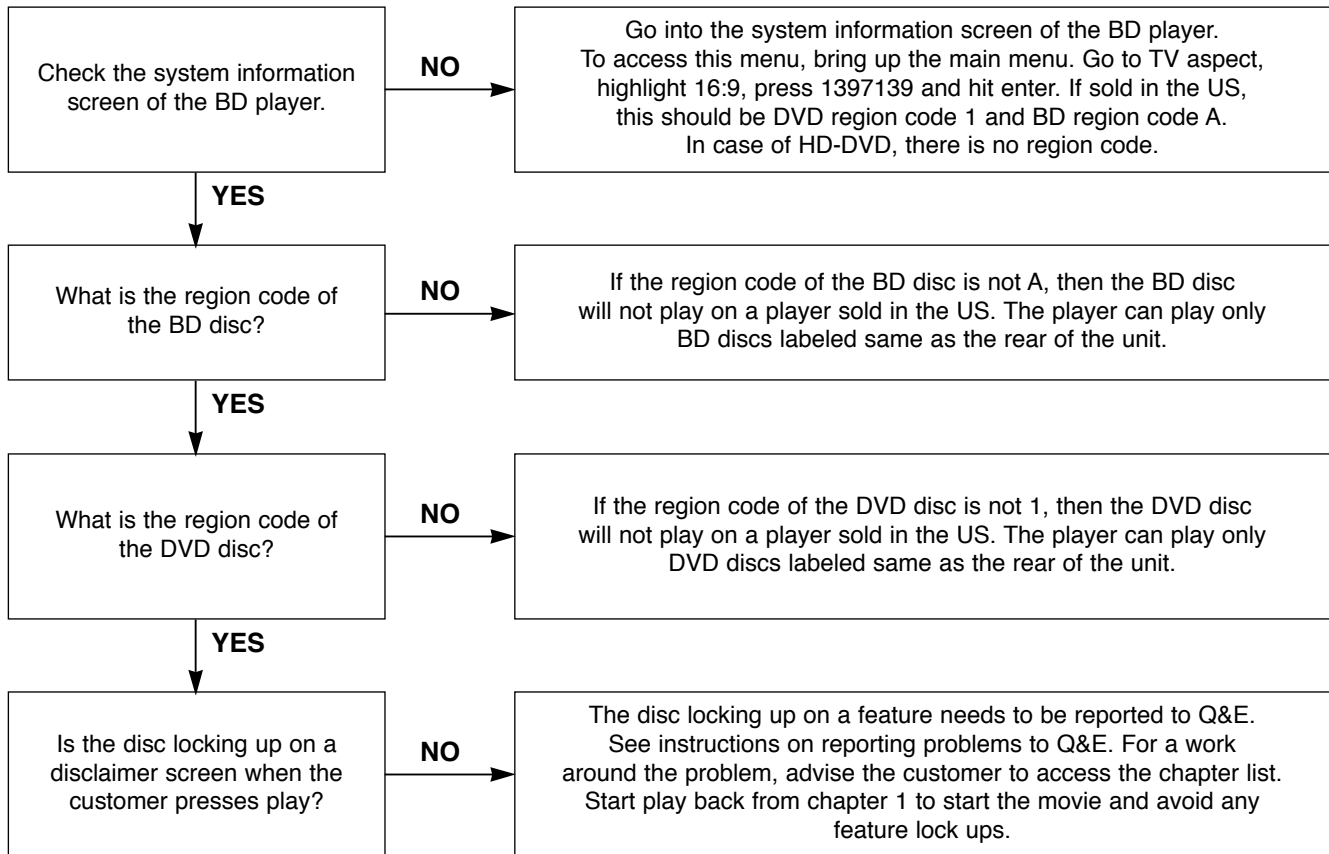

5-9. Reporting a problem to Quality & Engineering


Reporting a problem that may require a firmware update to fix.

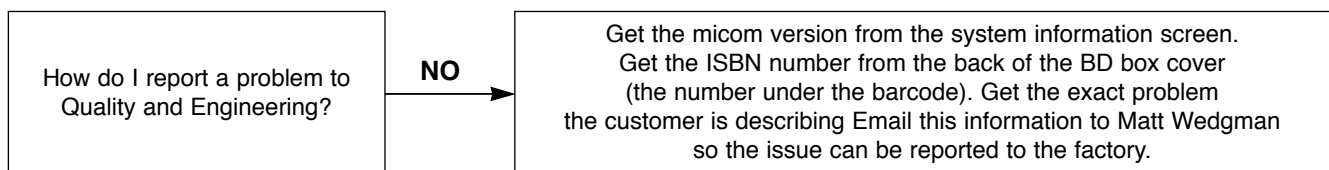

TRAINING MASTER FOR BLU-RAY (BD)

5-10. Aspect Ratio


The customer has bars on the top and bottom of the screen, the left and right of the screen, or both.

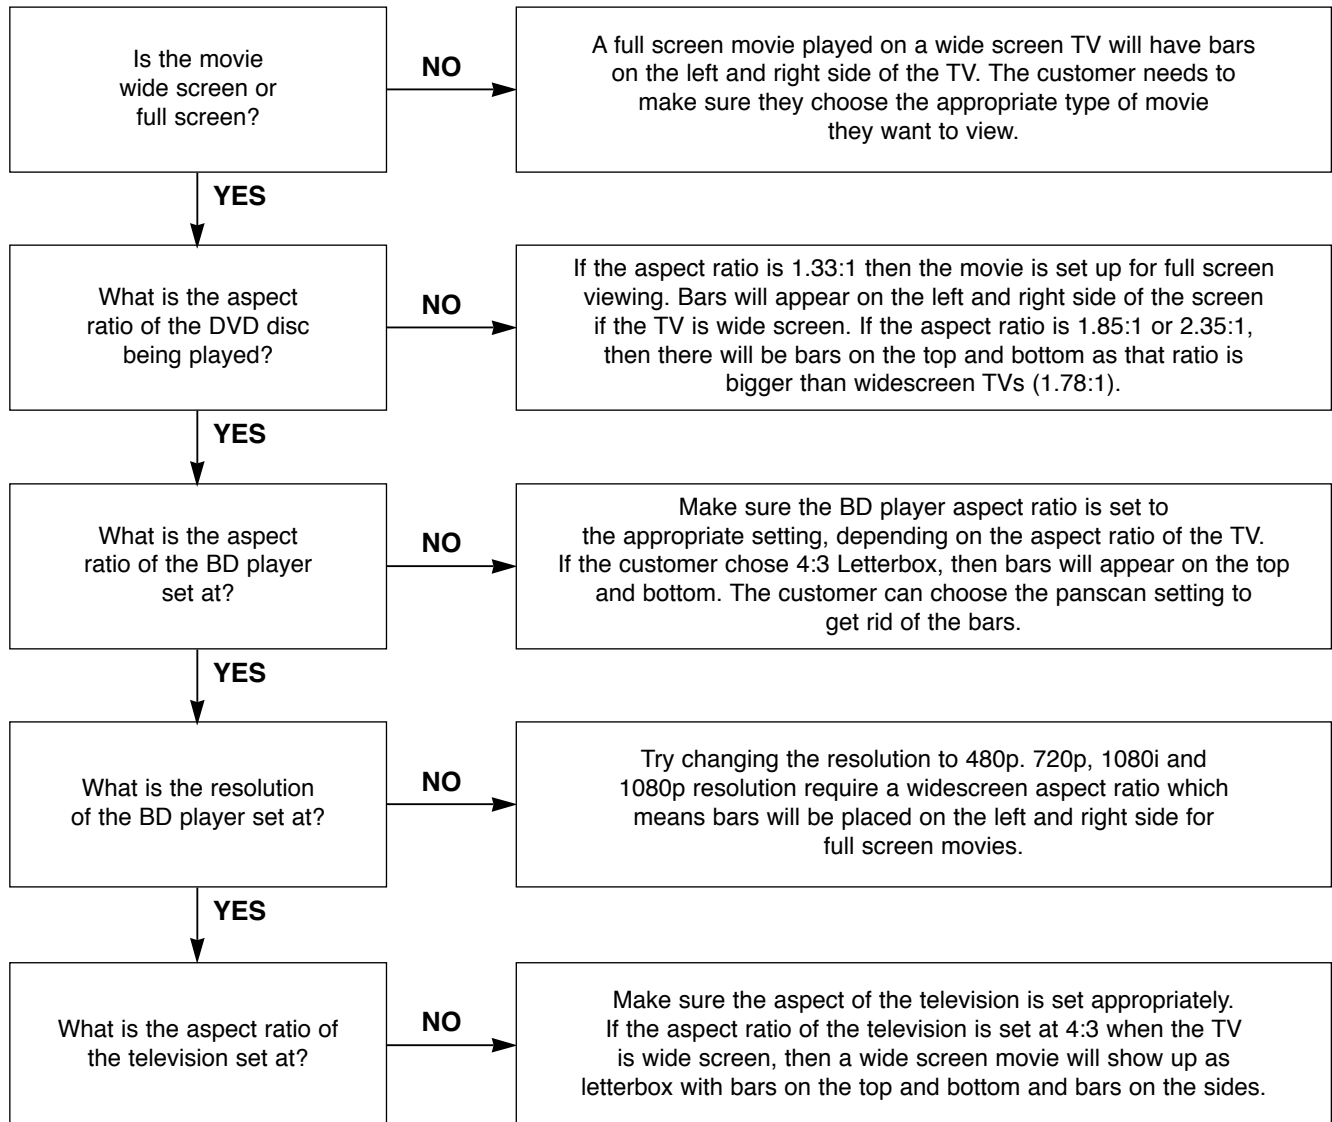

TRAINING MASTER FOR BLU-RAY (BD)

5-11. My Unit Won't Upconvert


The customer has a problem with getting the unit to change resolutions to 480p, 720p, 1080i, or 1080p.

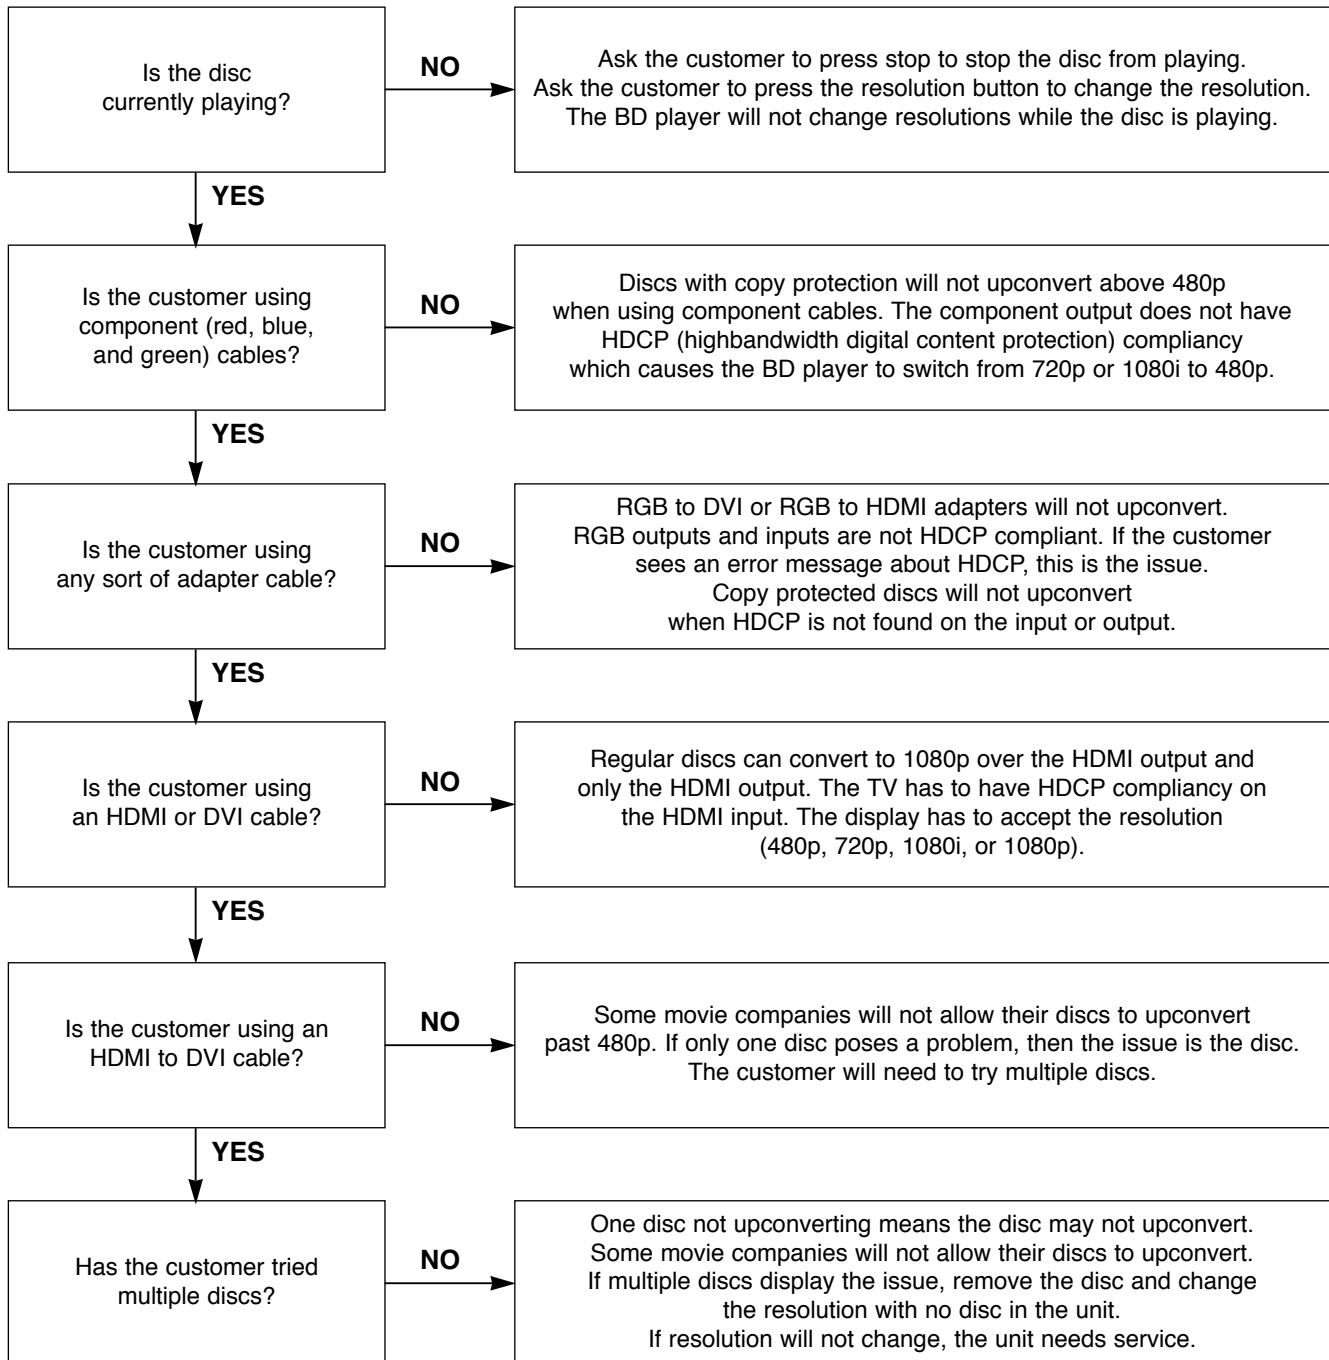


TRAINING MASTER FOR BLU-RAY (BD)

6. BLU-RAY PLAYER



6-1. Slow Loading Times for BDs

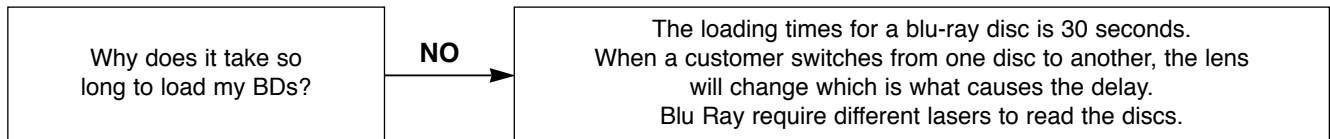

6-2. Booting Times

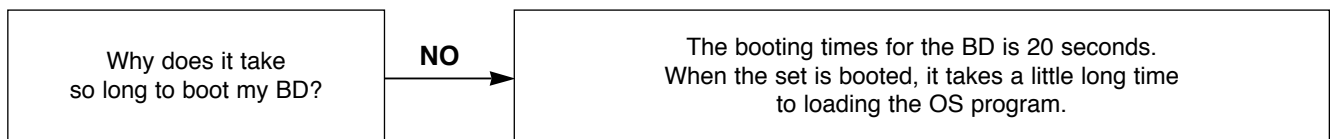


6-3. Netflix Service

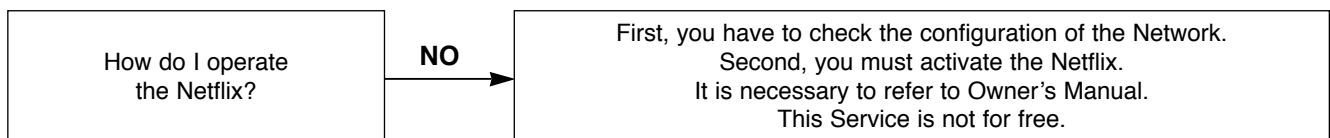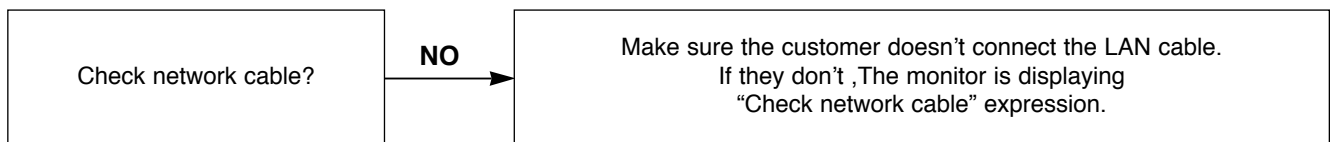


TRAINING MASTER FOR BLU-RAY (BD)

6-4. Ethernet Port

The purpose of the ethernet port on the unit.

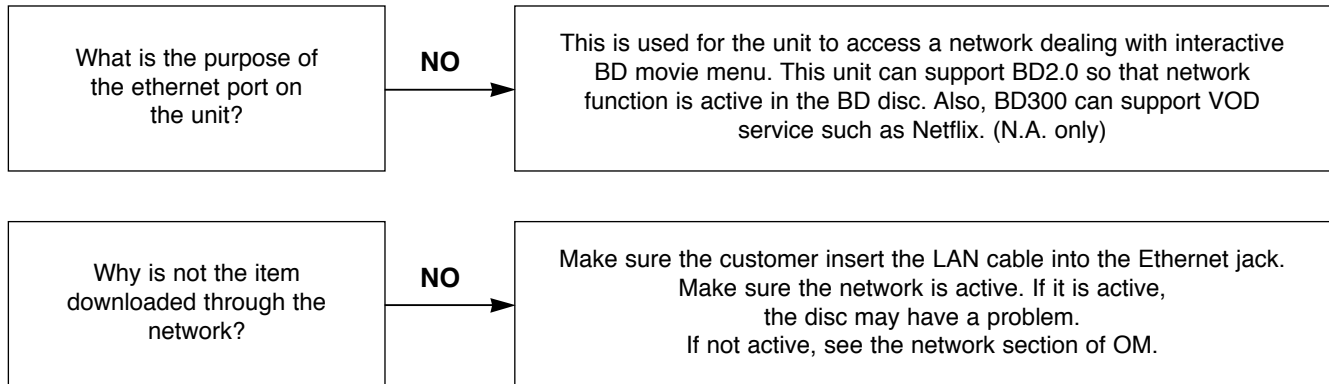

6-5. Firmware Update Availability

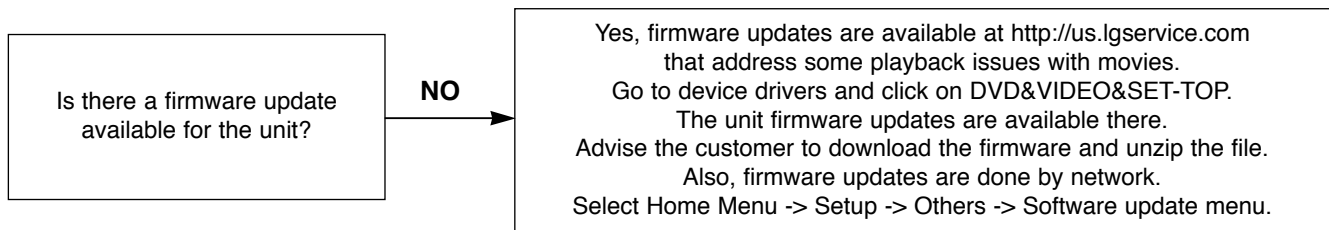


TRAINING MASTER FOR BLU-RAY (BD)

7. NETFLIX

7-1. Network Setup


By connecting the unit to broadband Internet, you can use Netflix function

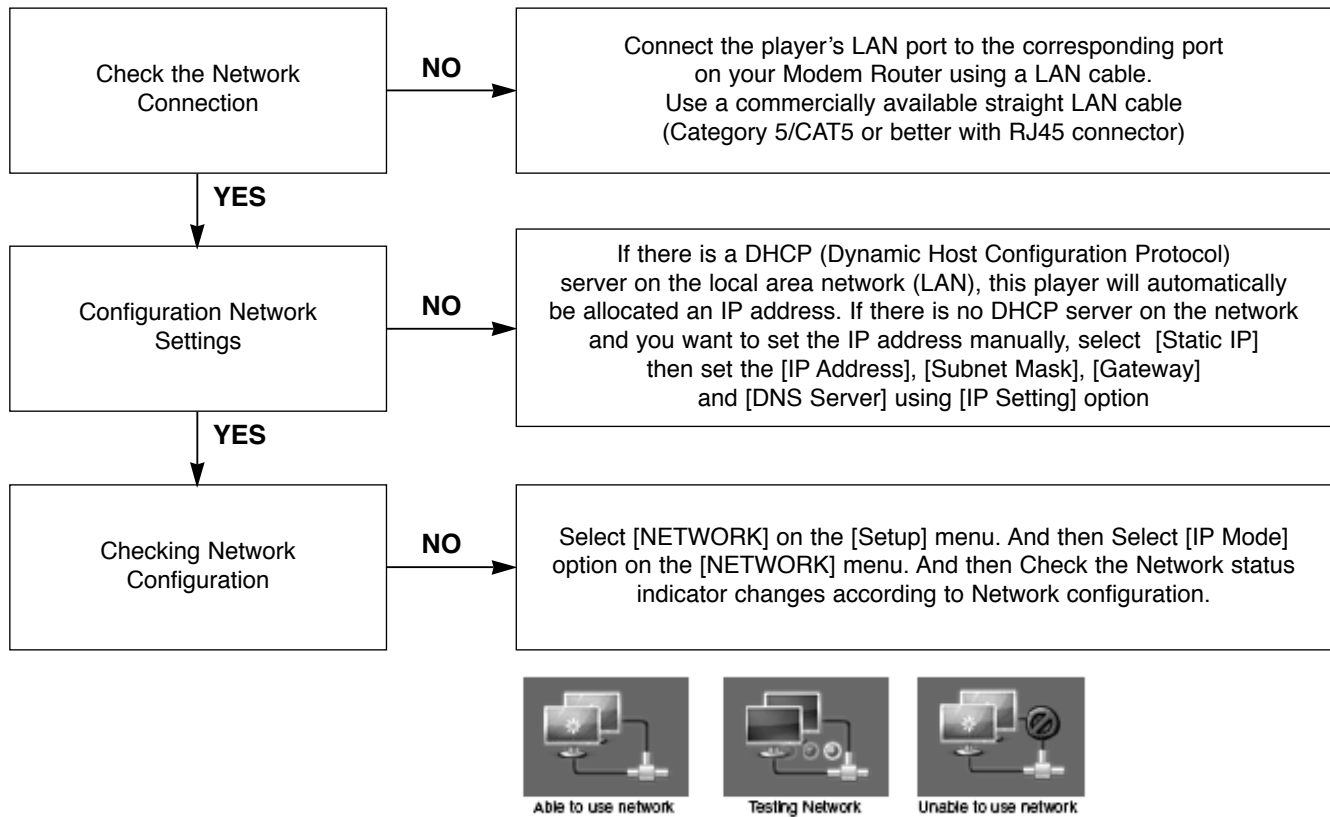


TRAINING MASTER FOR BLU-RAY (BD)

7-2. Activation

Activating the unit establishes a connection between the unit and Netflix account

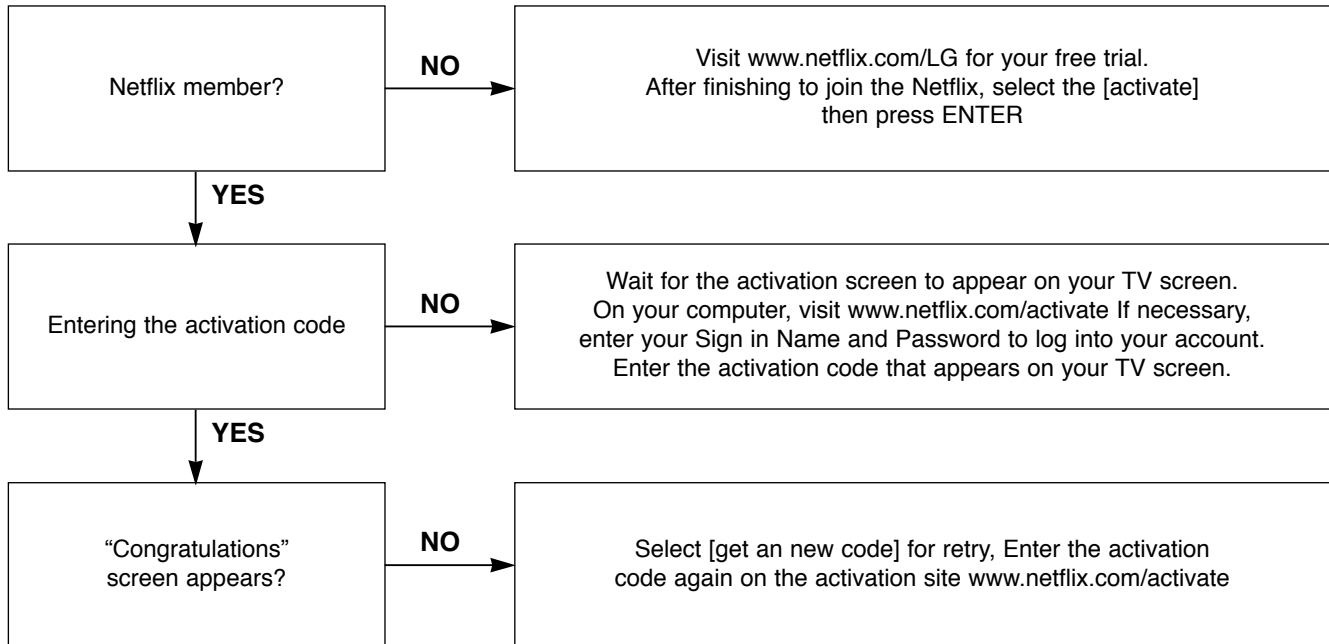



7-3. Adding Movie to your player

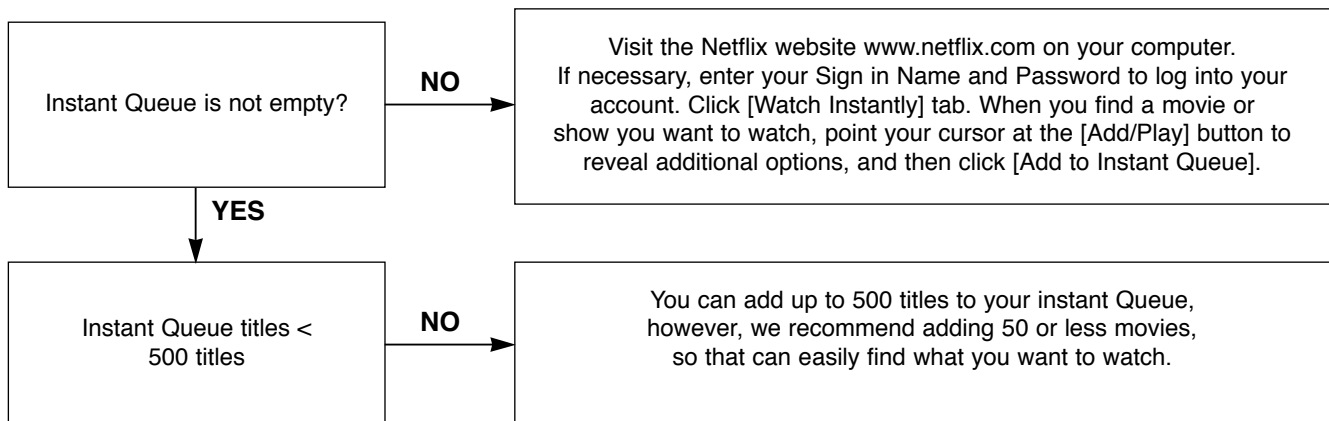

TRAINING MASTER FOR BLU-RAY (BD)

7-4. ESN (Electronic Serial Number) Validation

Select [OTHERS] on the [Setup] menu. And then Check [Netflix ESN].

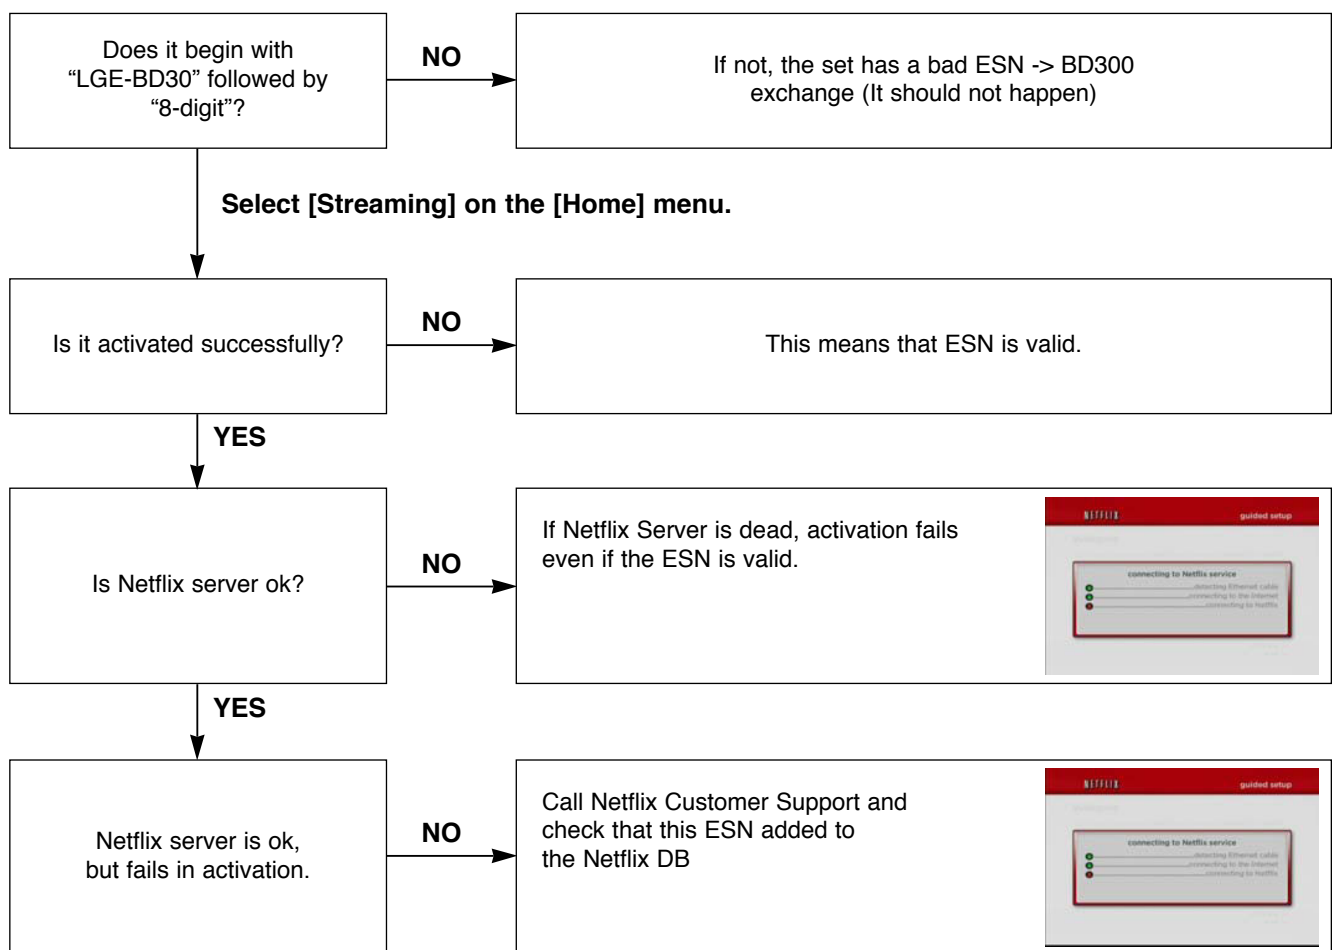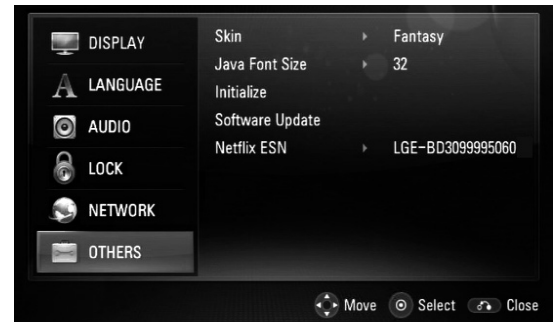


TRAINING MASTER FOR BLU-RAY (BD)

7-5. Less Bandwidth and less resolution movie than expected

The Quality indicator during movie retrieval corresponds to the following bandwidth requirements:


- 1 dot is 0.5 Mbps
- 2 dots is 1.0 Mbps
- 3 dots is 1.6 Mbps
- 4 dots is 2.2 Mbps

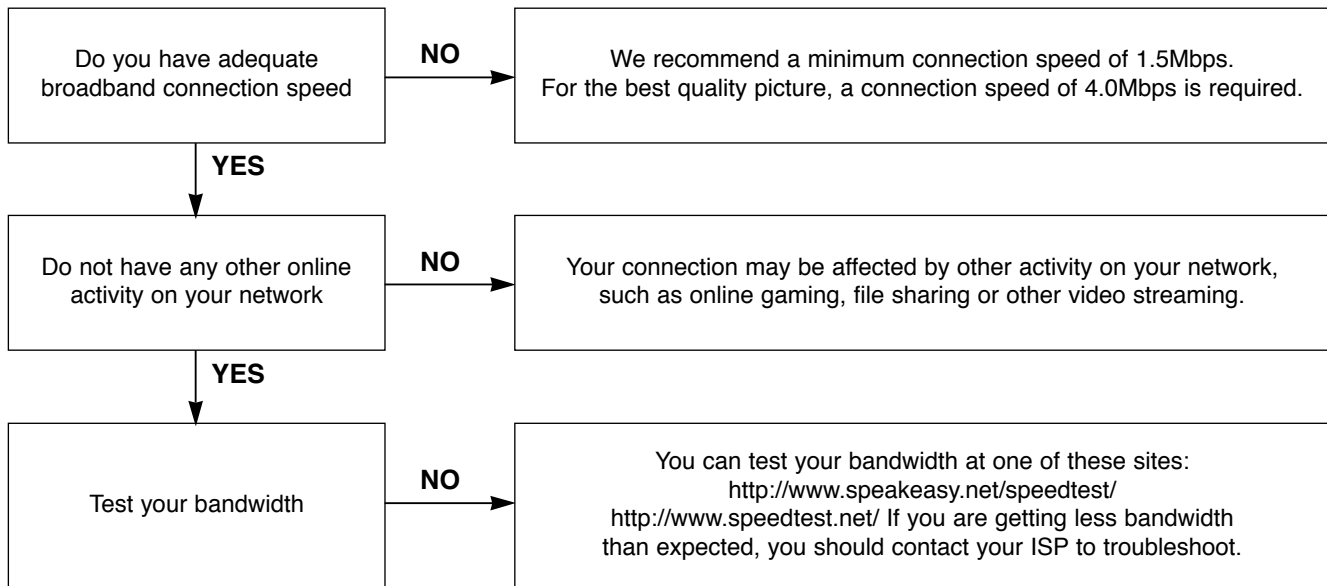

7-6. Errors from Netflix server


Following operations could be abnormal if Netflix server is dead

- Activation
- Queue retrieving
- Movie playback




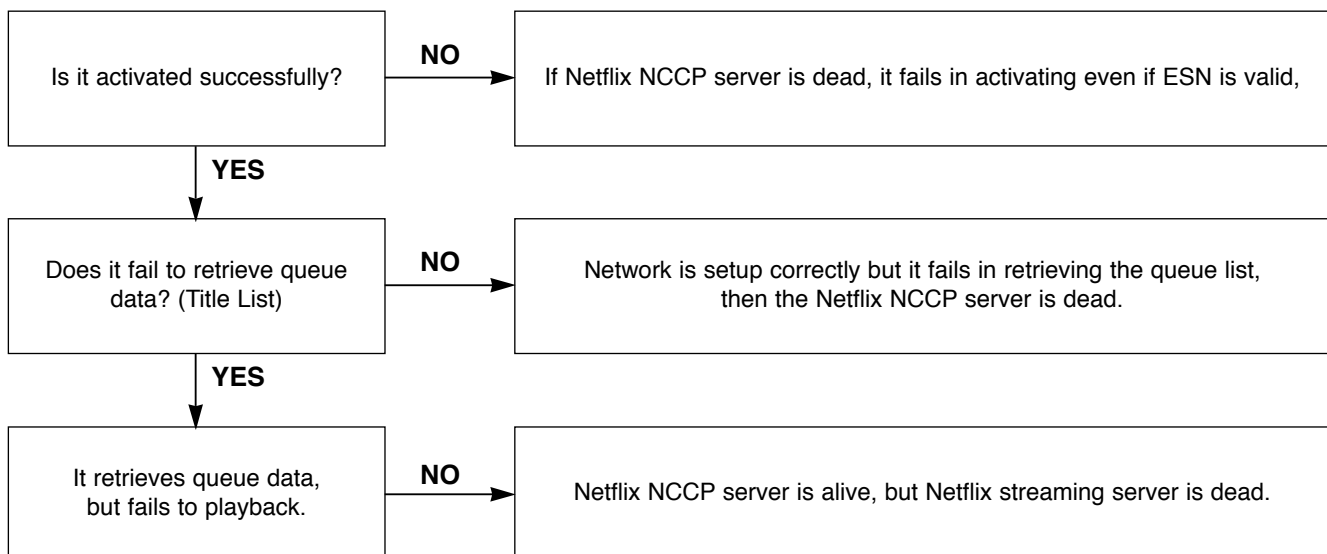


ELECTRICAL TROUBLESHOOTING GUIDE

1. POWER SUPPLY (SMPS)

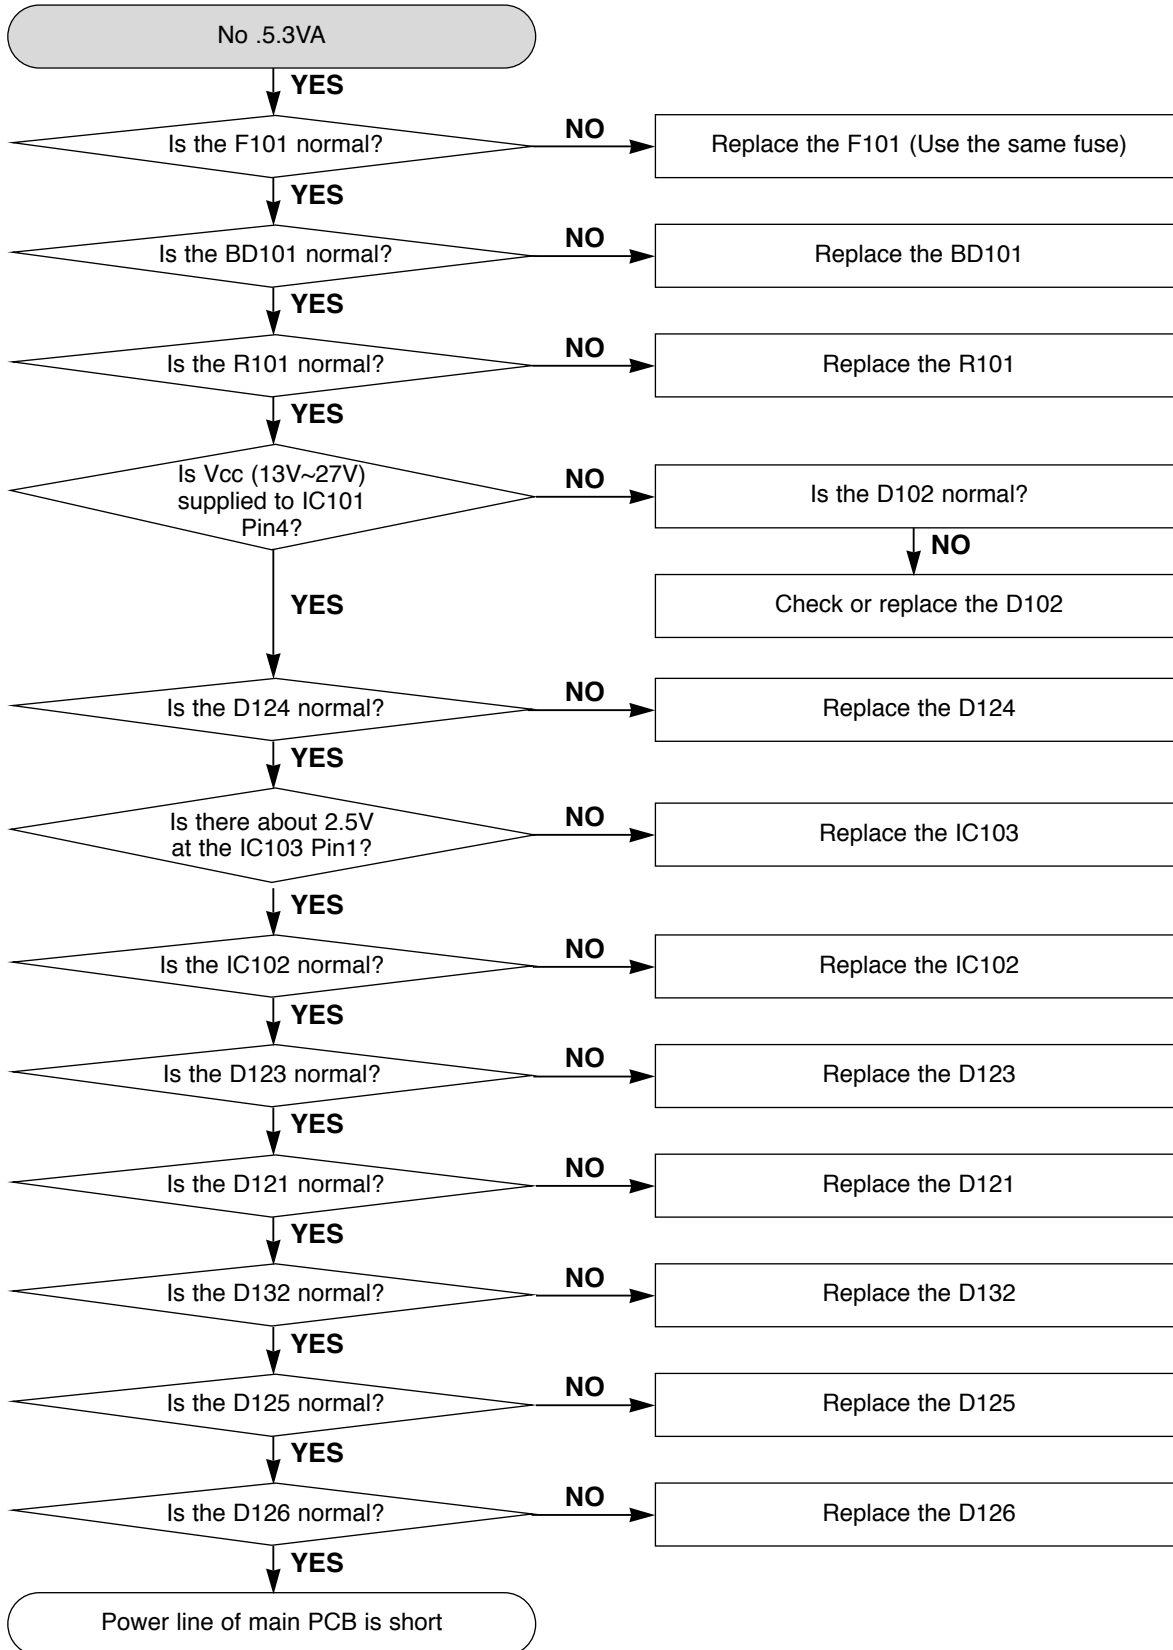


ELECTRICAL TROUBLESHOOTING GUIDE

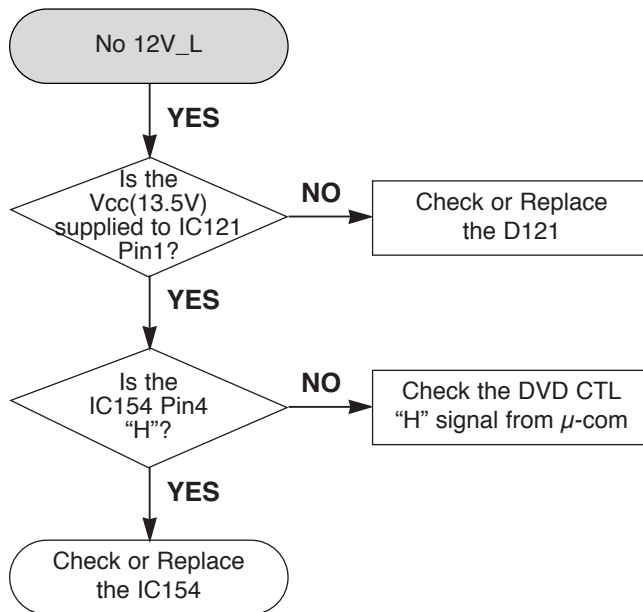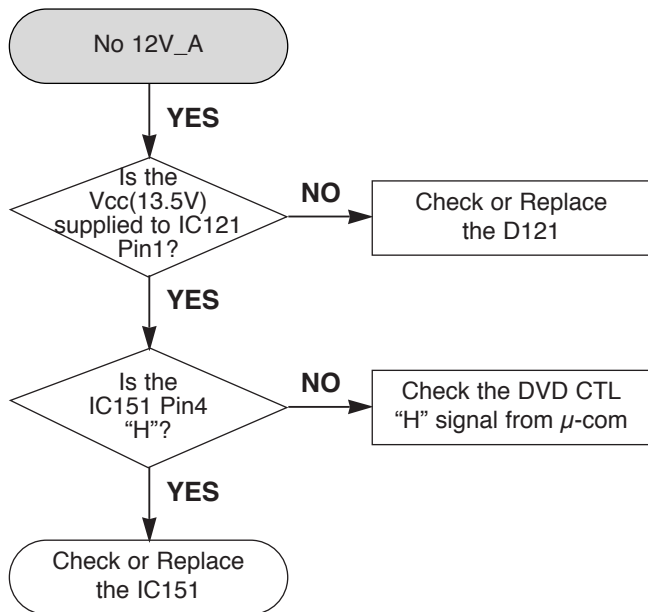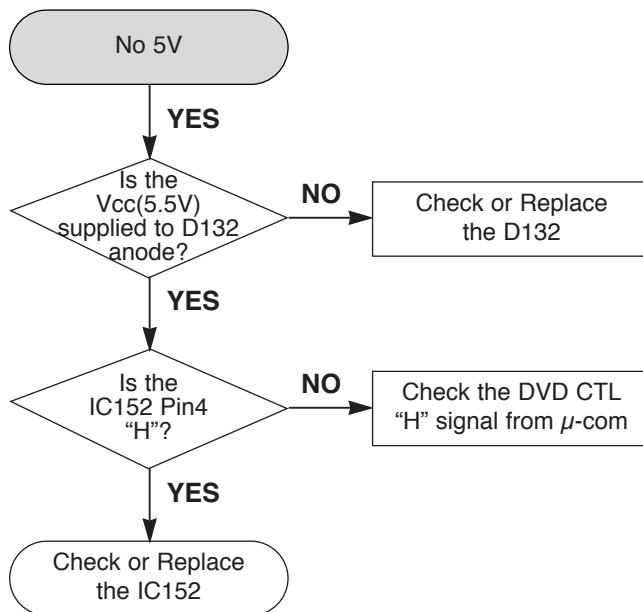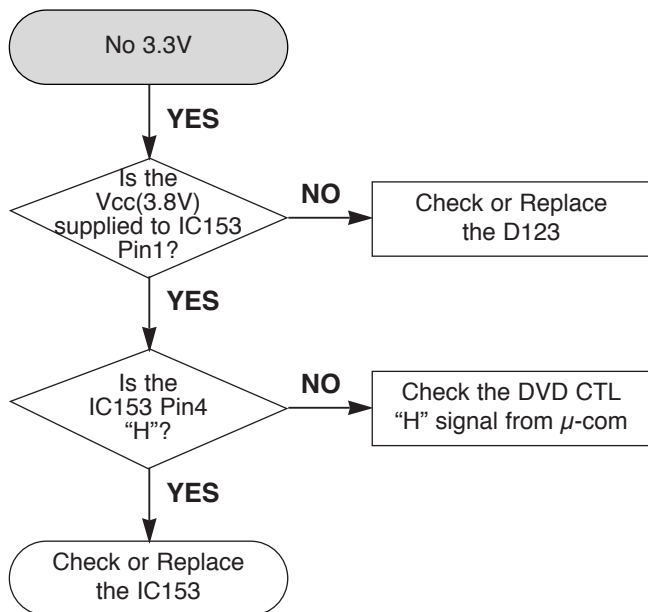


ELECTRICAL TROUBLESHOOTING GUIDE

2. POWER ON

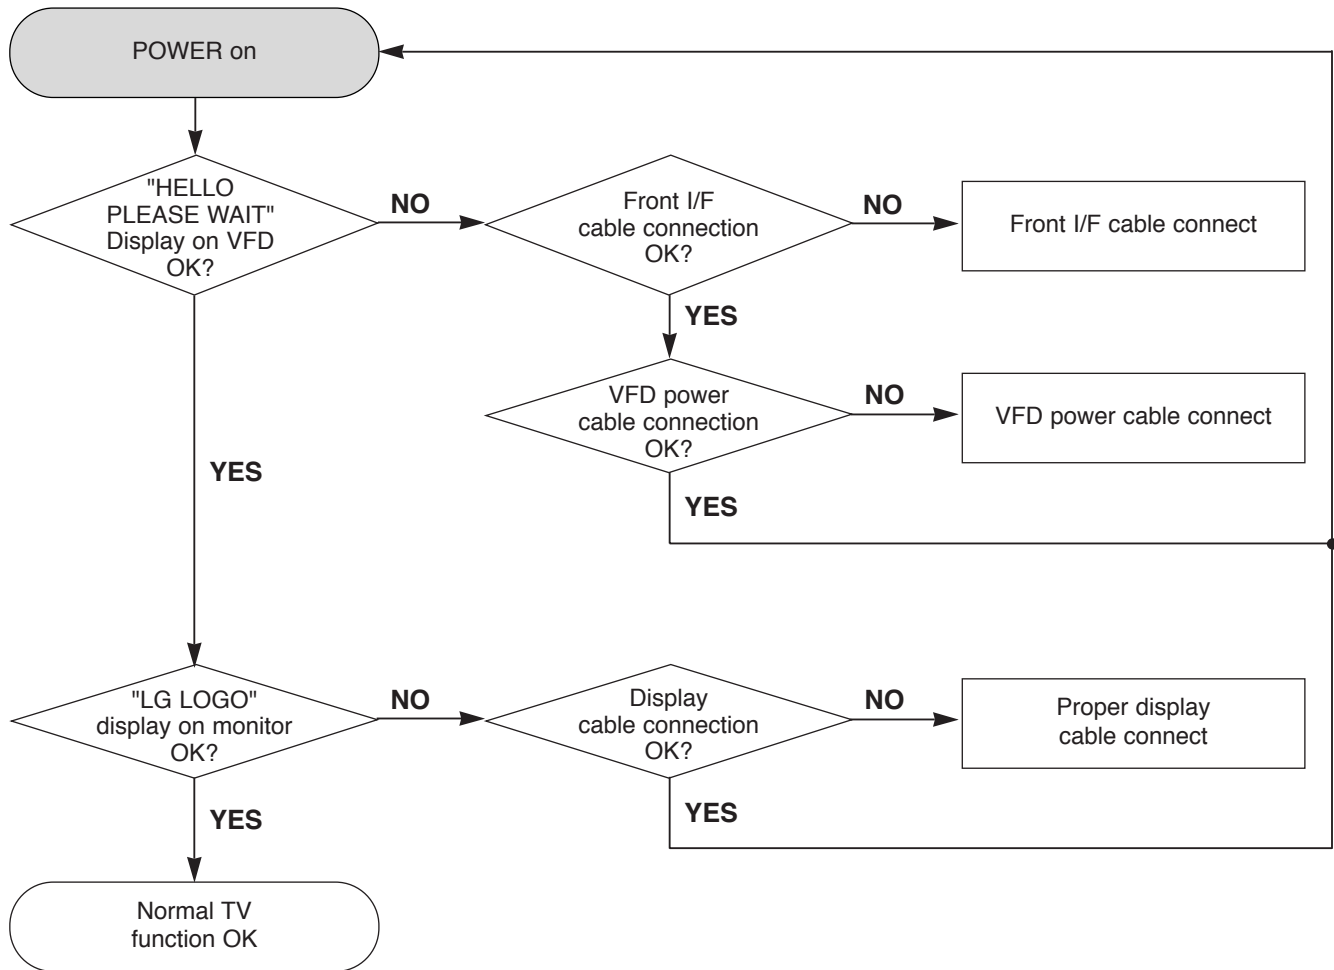


ELECTRICAL TROUBLESHOOTING GUIDE

3. SYSTEM PART

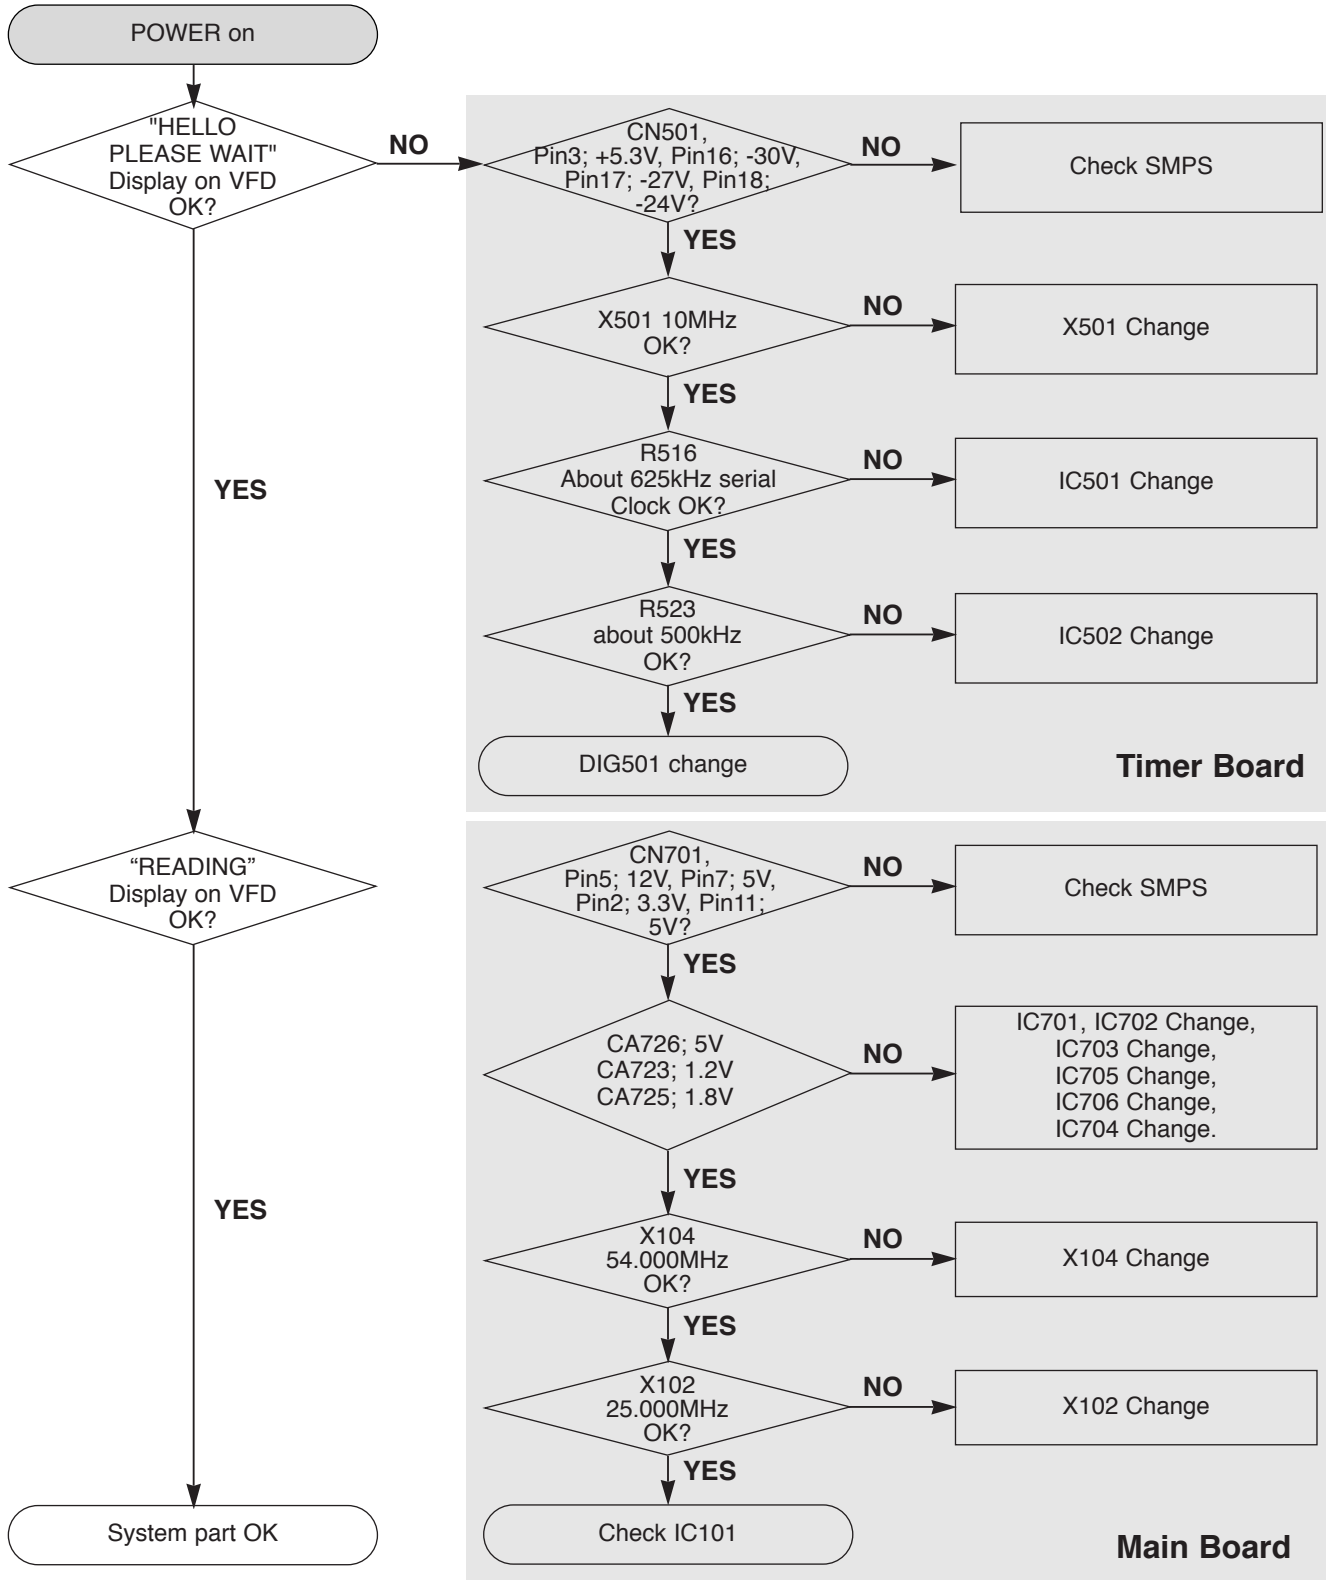


ELECTRICAL TROUBLESHOOTING GUIDE

4. COMPONENT (YPbPr) VIDEO OUT

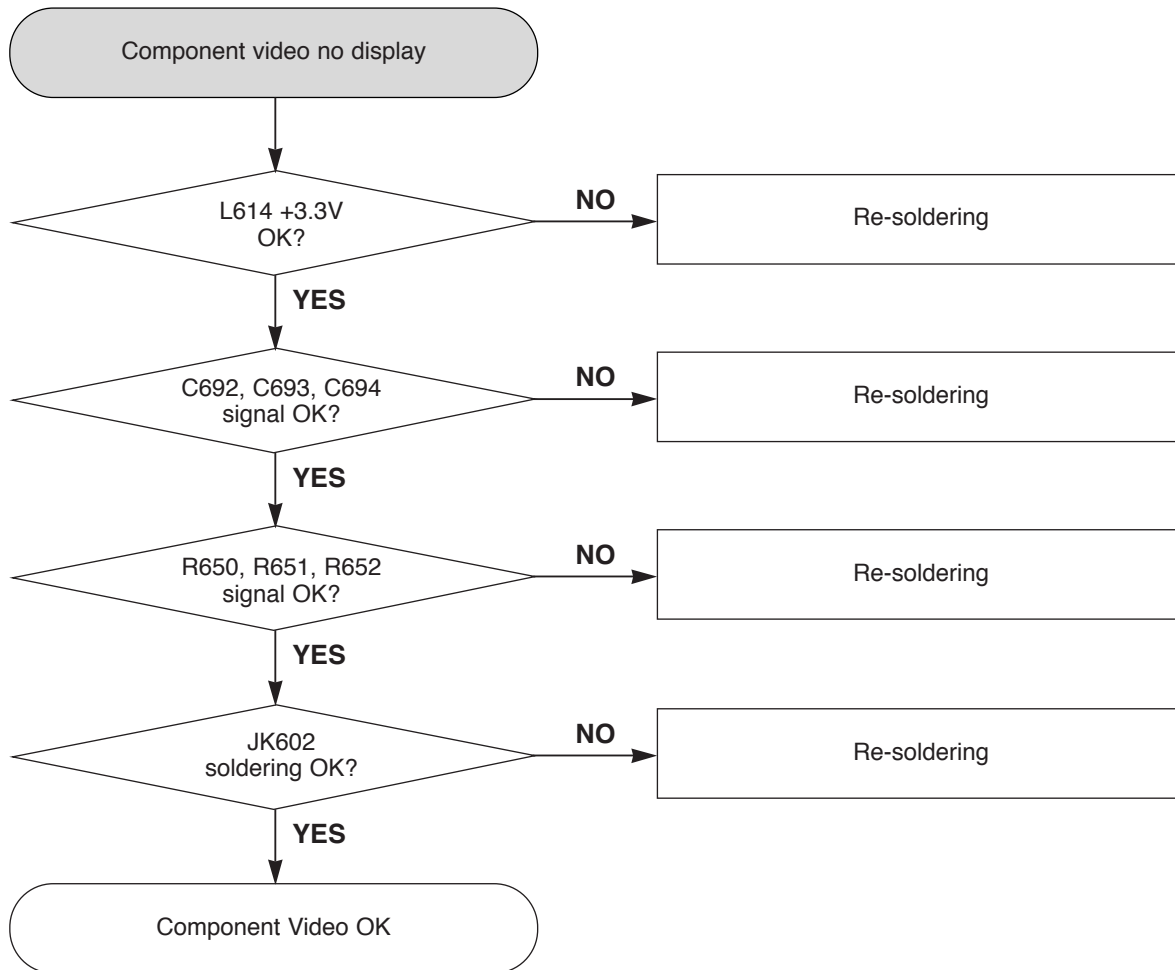


ELECTRICAL TROUBLESHOOTING GUIDE

5. CVBS VIDEO OUT

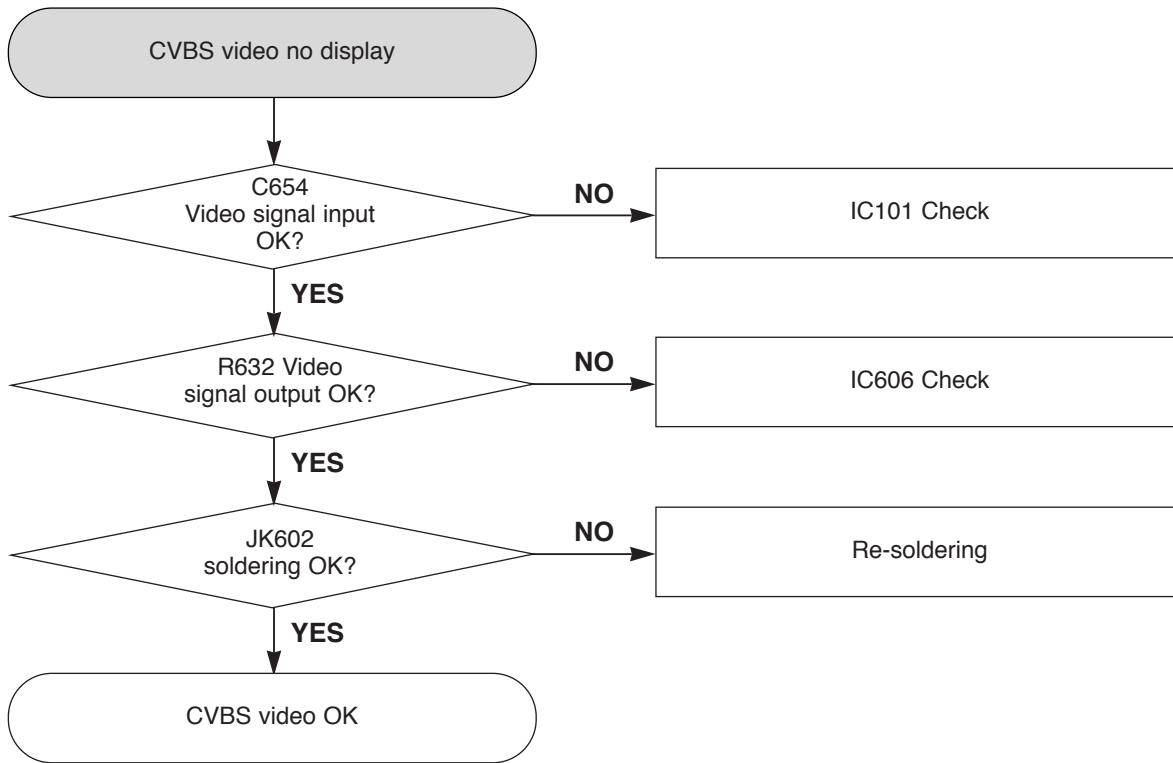


ELECTRICAL TROUBLESHOOTING GUIDE

6. AUDIO (S/PDIF, OPTICAL)

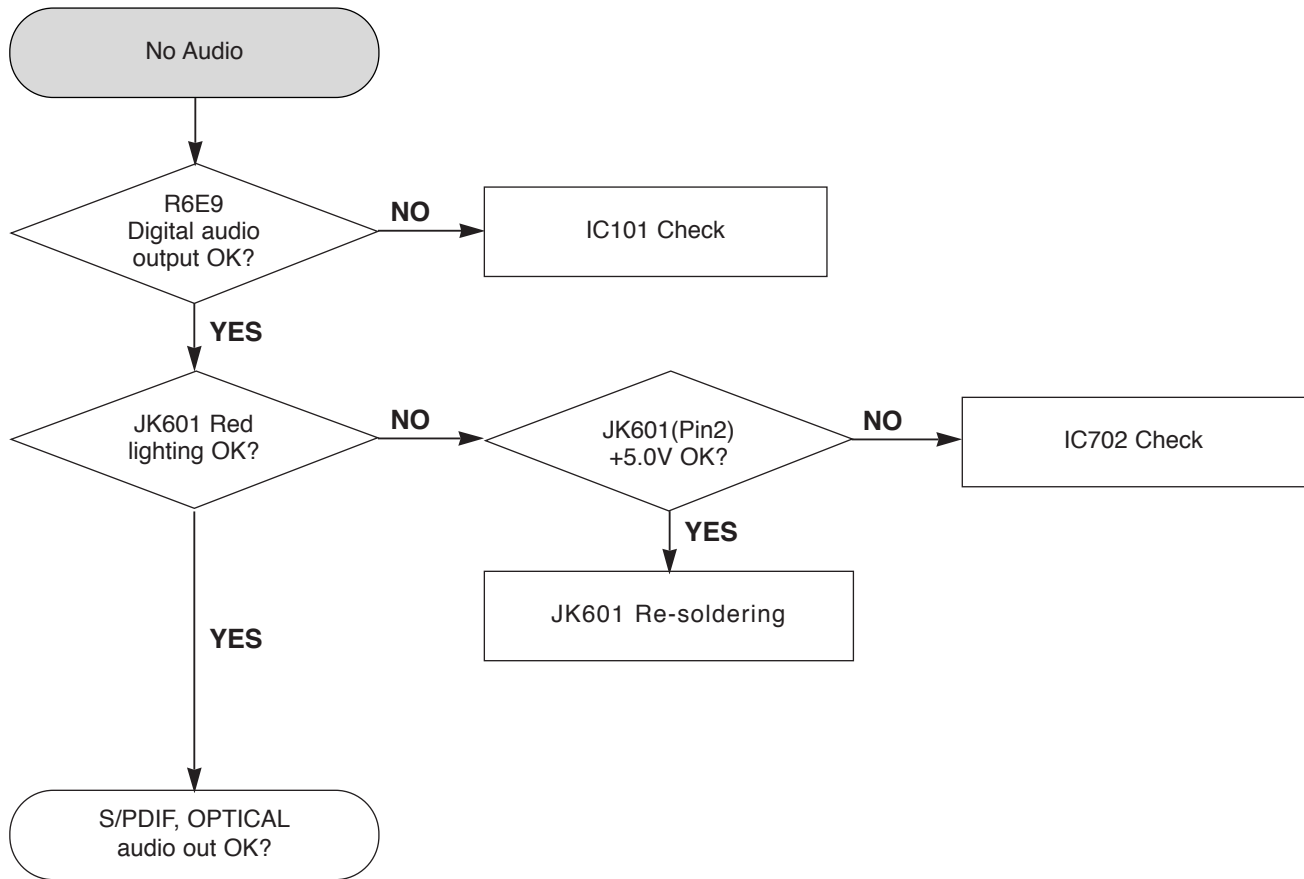


ELECTRICAL TROUBLESHOOTING GUIDE

7. AUDIO (ANALOG)

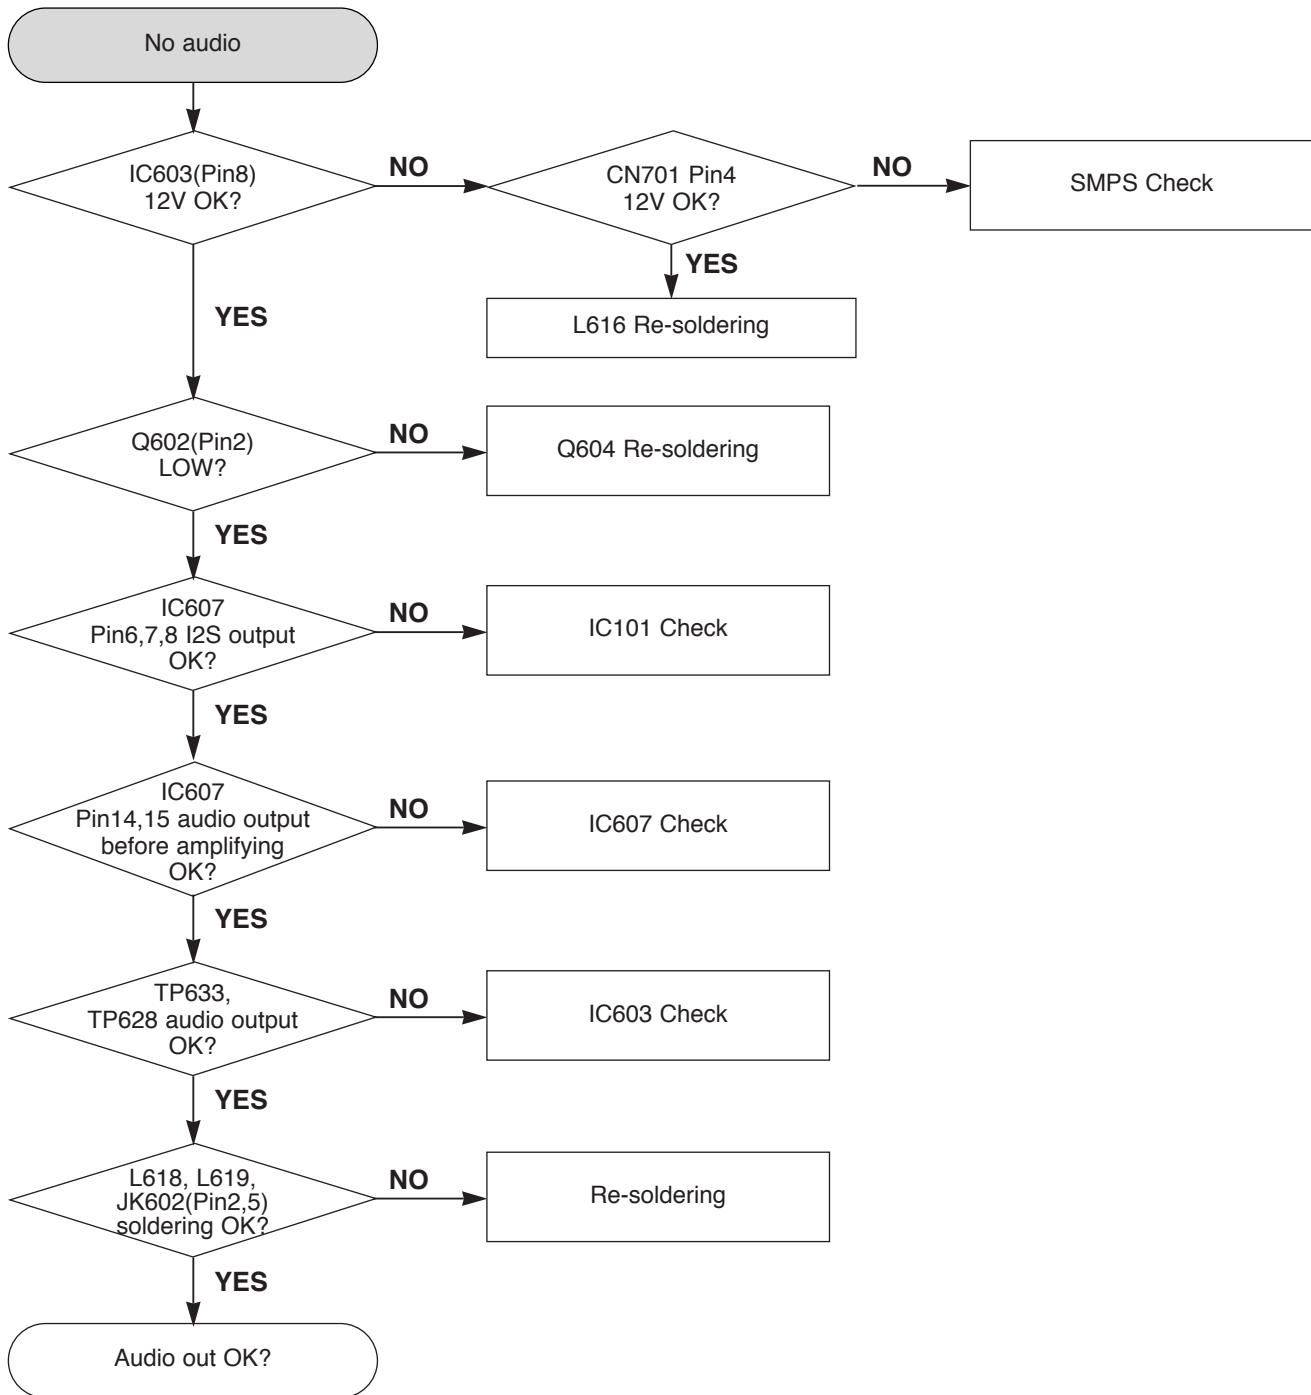

ELECTRICAL TROUBLESHOOTING GUIDE


8. HDMI

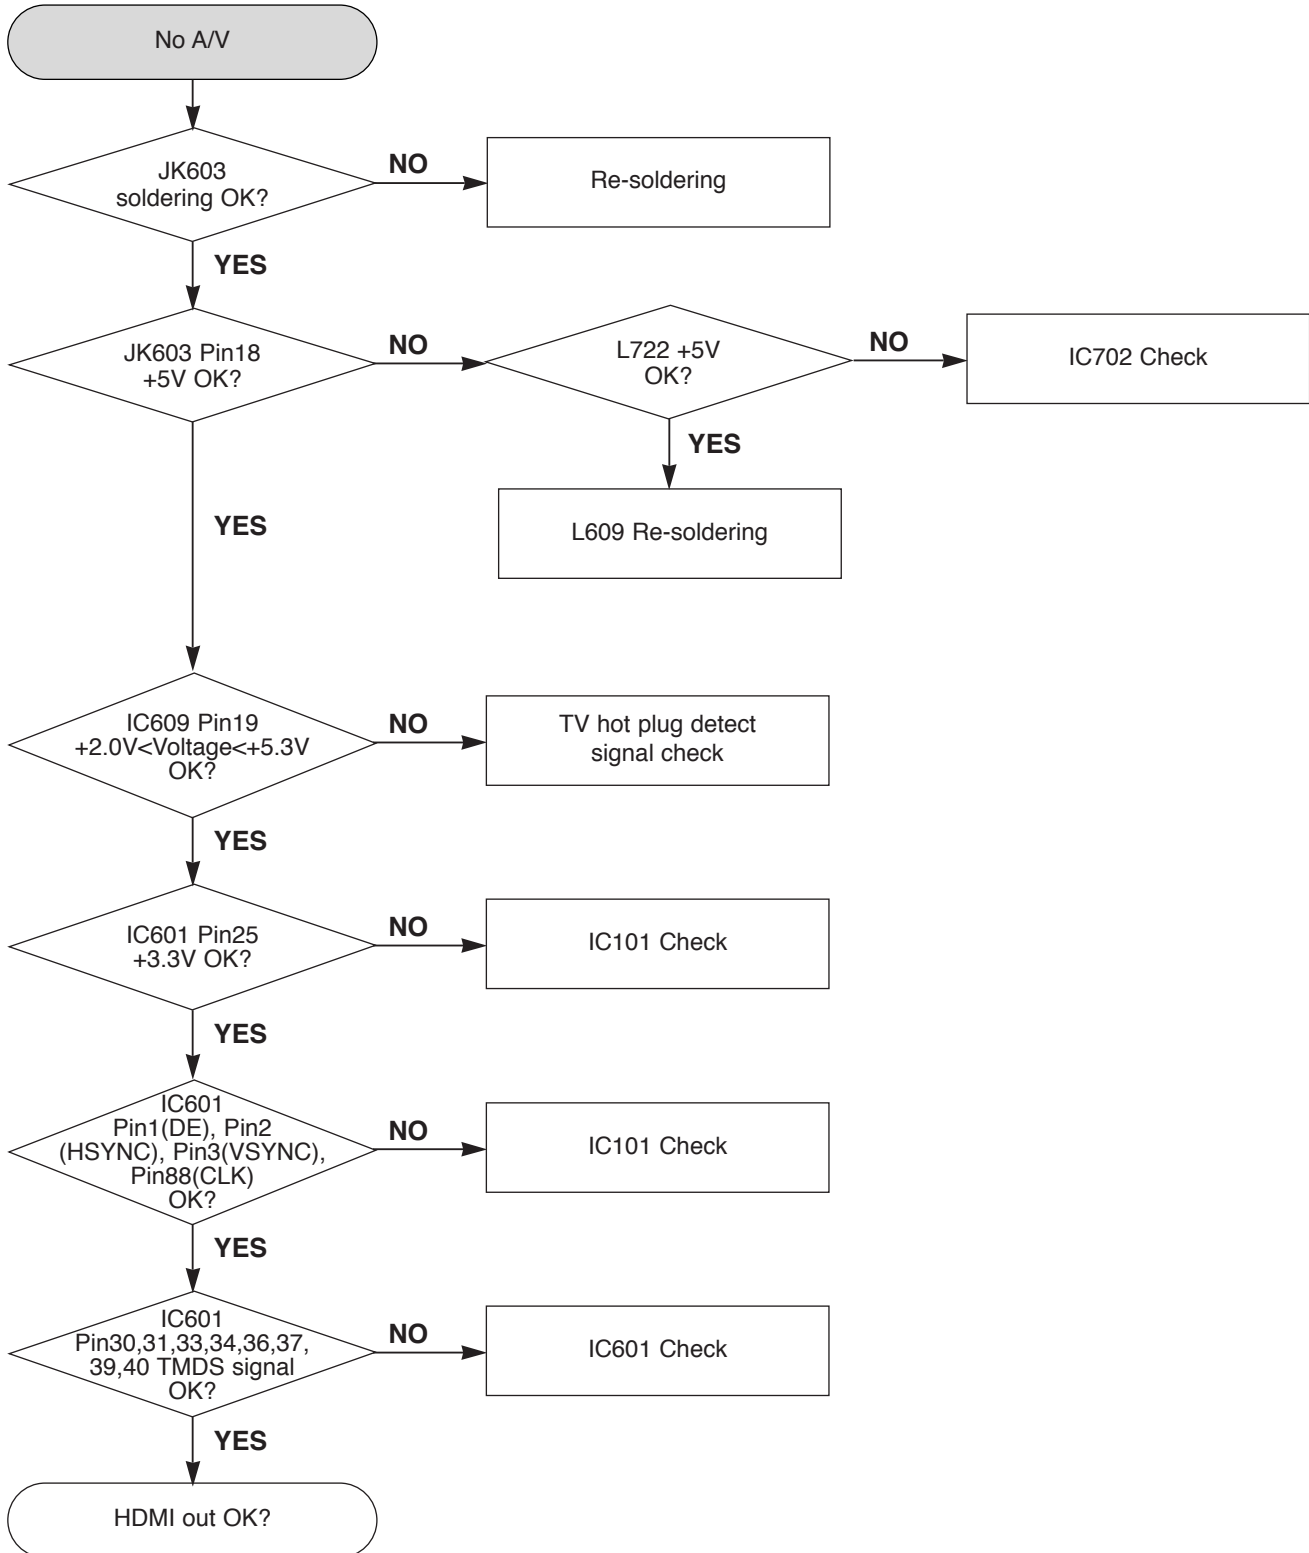


WAVEFORMS

1. SYSTEM PART-1


1

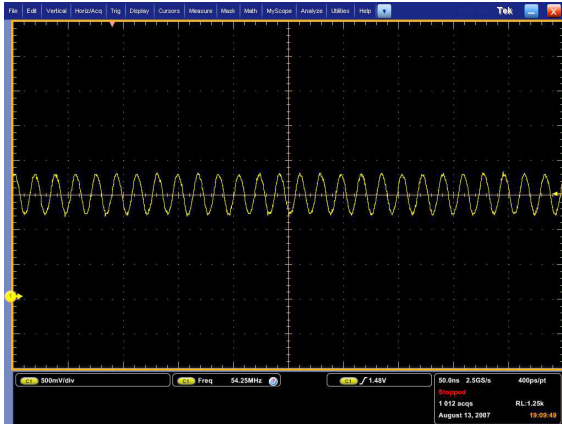


7440 XTAL (54MHz)

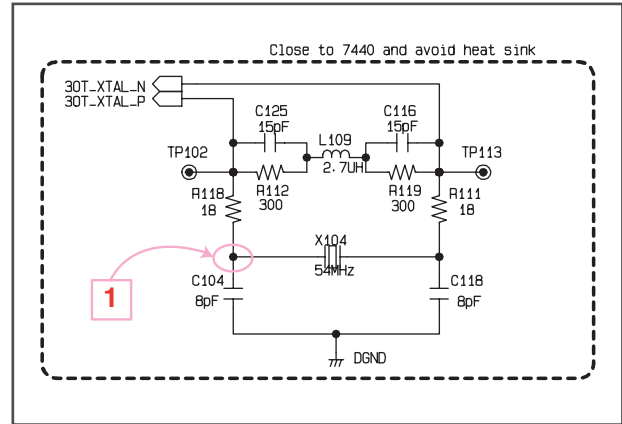

2

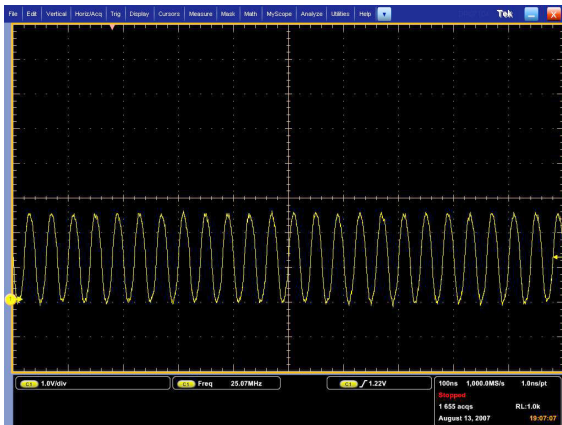

7440 XTAL for SATA loader (25MHz)

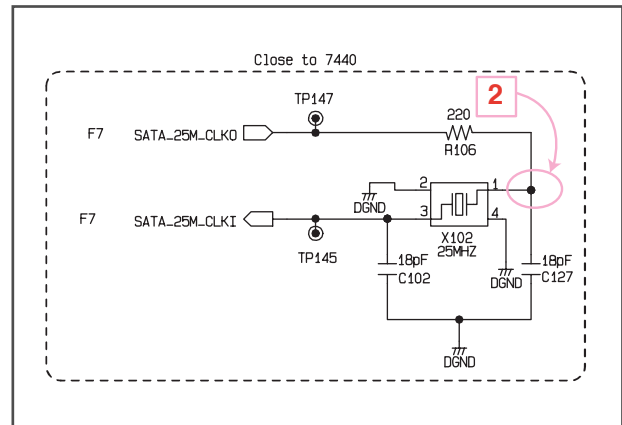

3



7440 DDR2_0_nWE



7440 DDR2_0_nCAS





The schematic diagram illustrates the video filter circuit. It features two main integrated circuits: IC606 THS7314 and IC610 THS7316. The circuit is powered by VCC_3V3 and VCC_3V3_Video. Key components include resistors (R606, R640, R637, R632, R604, R603, R602, R601, R605, R606, R607, R608, R609, R610, R611, R612, R613, R614, R615, R616, R617, R618, R619, R620, R621, R622, R623, R624, R625, R626, R627, R628, R629, R630, R631, R632, R633, R634, R635, R636, R637, R638, R639, R640, R641, R642, R643, R644, R645, R646, R647, R648, R649, R650, R651, R652, R653, R654, R655, R656, R657, R658, R659, R660, R661, R662, R663, R664, R665, R666, R667, R668, R669, R670, R671, R672, R673, R674, R675, R676, R677, R678, R679, R680, R681, R682, R683, R684, R685, R686, R687, R688, R689, R690, R691, R692, R693, R694, R695, R696, R697, R698, R699, R700, R701, R702, R703, R704, R705, R706, R707, R708, R709, R710, R711, R712, R713, R714, R715, R716, R717, R718, R719, R720, R721, R722, R723, R724, R725, R726, R727, R728, R729, R730, R731, R732, R733, R734, R735, R736, R737, R738, R739, R740, R741, R742, R743, R744, R745, R746, R747, R748, R749, R750, R751, R752, R753, R754, R755, R756, R757, R758, R759, R760, R761, R762, R763, R764, R765, R766, R767, R768, R769, R770, R771, R772, R773, R774, R775, R776, R777, R778, R779, R780, R781, R782, R783, R784, R785, R786, R787, R788, R789, R790, R791, R792, R793, R794, R795, R796, R797, R798, R799, R800, R801, R802, R803, R804, R805, R806, R807, R808, R809, R810, R811, R812, R813, R814, R815, R816, R817, R818, R819, R820, R821, R822, R823, R824, R825, R826, R827, R828, R829, R830, R831, R832, R833, R834, R835, R836, R837, R838, R839, R840, R841, R842, R843, R844, R845, R846, R847, R848, R849, R850, R851, R852, R853, R854, R855, R856, R857, R858, R859, R860, R861, R862, R863, R864, R865, R866, R867, R868, R869, R870, R871, R872, R873, R874, R875, R876, R877, R878, R879, R880, R881, R882, R883, R884, R885, R886, R887, R888, R889, R890, R891, R892, R893, R894, R895, R896, R897, R898, R899, R900, R901, R902, R903, R904, R905, R906, R907, R908, R909, R910, R911, R912, R913, R914, R915, R916, R917, R918, R919, R920, R921, R922, R923, R924, R925, R926, R927, R928, R929, R930, R931, R932, R933, R934, R935, R936, R937, R938, R939, R940, R941, R942, R943, R944, R945, R946, R947, R948, R949, R950, R951, R952, R953, R954, R955, R956, R957, R958, R959, R960, R961, R962, R963, R964, R965, R966, R967, R968, R969, R970, R971, R972, R973, R974, R975, R976, R977, R978, R979, R980, R981, R982, R983, R984, R985, R986, R987, R988, R989, R990, R991, R992, R993, R994, R995, R996, R997, R998, R999, R1000, R1001, R1002, R1003, R1004, R1005, R1006, R1007, R1008, R1009, R1010, R1011, R1012, R1013, R1014, R1015, R1016, R1017, R1018, R1019, R1020, R1021, R1022, R1023, R1024, R1025, R1026, R1027, R1028, R1029, R1030, R1031, R1032, R1033, R1034, R1035, R1036, R1037, R1038, R1039, R1040, R1041, R1042, R1043, R1044, R1045, R1046, R1047, R1048, R1049, R1050, R1051, R1052, R1053, R1054, R1055, R1056, R1057, R1058, R1059, R1060, R1061, R1062, R1063, R1064, R1065, R1066, R1067, R1068, R1069, R1070, R1071, R1072, R1073, R1074, R1075, R1076, R1077, R1078, R1079, R1080, R1081, R1082, R1083, R1084, R1085, R1086, R1087, R1088, R1089, R1090, R1091, R1092, R1093, R1094, R1095, R1096, R1097, R1098, R1099, R1100, R1101, R1102, R1103, R1104, R1105, R1106, R1107, R1108, R1109, R1110, R1111, R1112, R1113, R1114, R1115, R1116, R1117, R1118, R1119, R1120, R1121, R1122, R1123, R1124, R1125, R1126, R1127, R1128, R1129, R1130, R1131, R1132, R1133, R1134, R1135, R1136, R1137, R1138, R1139, R1140, R1141, R1142, R1143, R1144, R1145, R1146, R1147, R1148, R1149, R1150, R1151, R1152, R1153, R1154, R1155, R1156, R1157, R1158, R1159, R1160, R1161, R1162, R1163, R1164, R1165, R1166, R1167, R1168, R1169, R1170, R1171, R1172, R1173, R1174, R1175, R1176, R1177, R1178, R1179, R1180, R1181, R1182, R1183, R1184, R1185, R1186, R1187, R1188, R1189, R1190, R1191, R1192, R1193, R1194, R1195, R1196, R1197, R1198, R1199, R1200, R1201, R1202, R1203, R1204, R1205, R1206, R1207, R1208, R1209, R1210, R1211, R1212, R1213, R1214, R1215, R1216, R1217, R1218, R1219, R1220, R1221, R1222, R1223, R1224, R1225, R1226, R1227, R1228, R1229, R1230, R1231, R1232, R1233, R1234, R1235, R1236, R1237, R1238, R1239, R1240, R1241, R1242, R1243, R1244, R1245, R1246, R1247, R1248, R1249, R1250, R1251, R1252, R1253, R1254, R1255, R1256, R1257, R1258, R1259, R1260, R1261, R1262, R1263, R1264, R1265, R1266, R1267, R1268, R1269, R1270, R1271, R1272, R1273, R1274, R1275, R1276, R1277, R1278, R1279, R1280, R1281, R1282, R1283, R1284, R1285, R1286, R1287, R1288, R1289, R1290, R1291, R1292, R1293, R1294, R1295, R1296, R1297, R1298, R1299, R1300, R1301, R1302, R1303, R1304, R1305, R1306, R1307, R1308, R1309, R1310, R1311, R1312, R1313, R1314, R1315, R1316, R1317, R1318, R1319, R1320, R1321, R1322,



12

13

14

3-44

OPTICAL/COAXIAL OUT

BCM7440_AUD0_SPDIF
2:C4:2:I7

15

R6D7
100

TP619

PG712FBS23
D605

D605

VCC_5V_AV

C639
0.1uF

DGND

R6E9
120

C689
0.47uF

R6F0
56

TP641

C690
0.47uF

JK601

C687
100pF

R6F1
130

C688
100pF

DGND

DGND

DGND

DGND


OPT_OUT






The schematic diagram illustrates the HDMI interface circuit for the TDA9984. The TDA9984 is shown with its pins labeled 1 through 32. The diagram includes the following components and connections:

- CEC Line:** The CEC signal is connected to pin 13 (CEC-IN) and pin 22 (CEC-OUT). A 5K4 pull-up resistor is connected to the CEC line at the HDMI connector (HDMI_CEC_CON).
- TMDS Clock and Data Lines:** The TMDS clock and data lines are connected to pins 15 (TMDS_CLK+), 16 (TMDS_CLK-), 17 (TMDS_CLK+), 18 (TMDS_CLK-), 19 (TMDS_CLK+), 20 (TMDS_CLK-), 21 (TMDS_CLK+), and 22 (TMDS_CLK-). The TMDS data lines are connected to pins 23 (TMDS_DATA0+), 24 (TMDS_DATA0-), 25 (TMDS_DATA1+), 26 (TMDS_DATA1-), 27 (TMDS_DATA2+), 28 (TMDS_DATA2-), 29 (TMDS_DATA3+), and 30 (TMDS_DATA3-).
- VCC_5V_AV and VCC_5V_HDMI:** The VCC_5V_AV line is connected to pin 23 (TMDS_CLK+). The VCC_5V_HDMI line is connected to pin 24 (TMDS_DATA0-).
- Other Connections:** The diagram also shows connections for the HDMI_0_N, HDMI_0_P, HDMI_1_N, and HDMI_1_P lines to pins 11, 12, 13, and 14 respectively.

The diagram is annotated with red boxes and numbers 16, 17, 18, and 19, which correspond to the numbered callouts in the text. The callouts describe the connections for the CEC line, the TMDS clock and data lines, and the VCC_5V_AV and VCC_5V_HDMI lines.




7. FRONT I/F PART

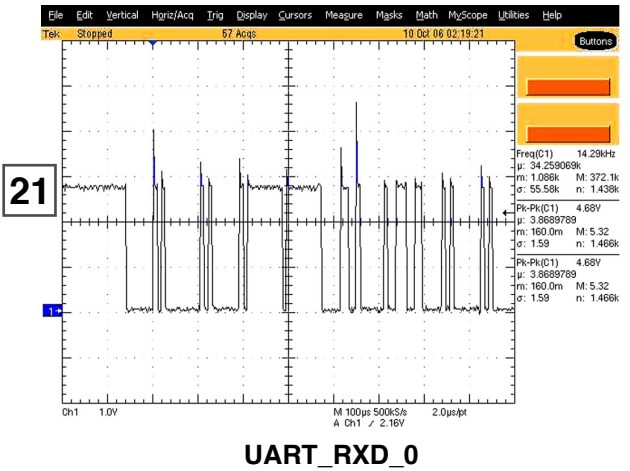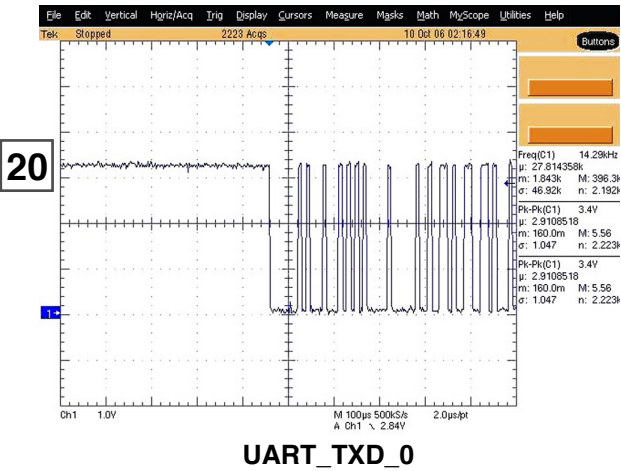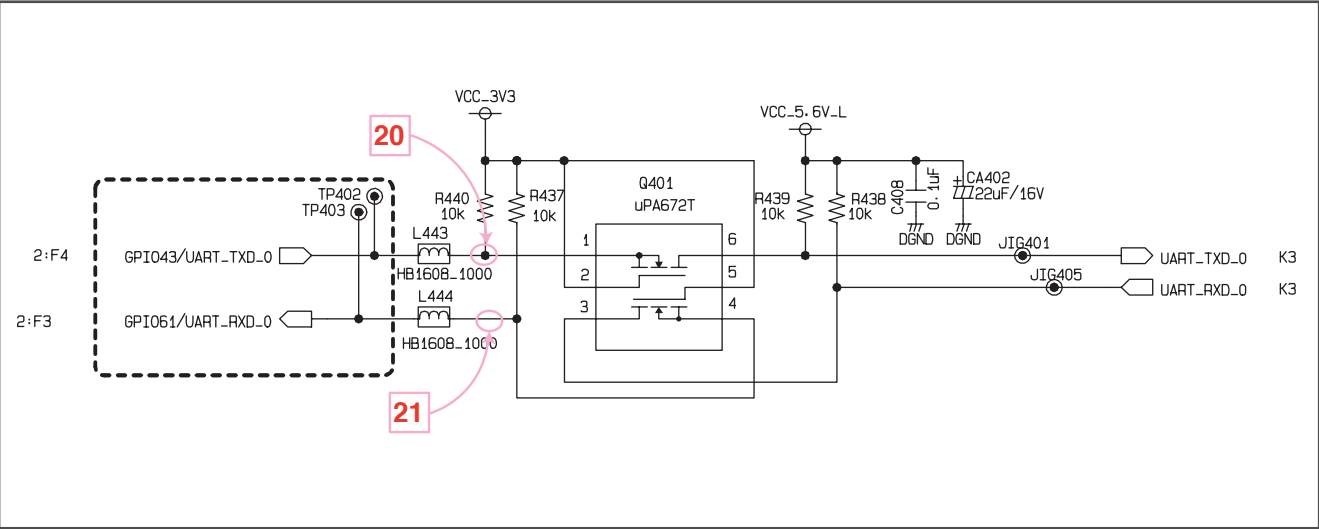


BLOCK DIAGRAMS


1. OVERALL BLOCK DIAGRAM

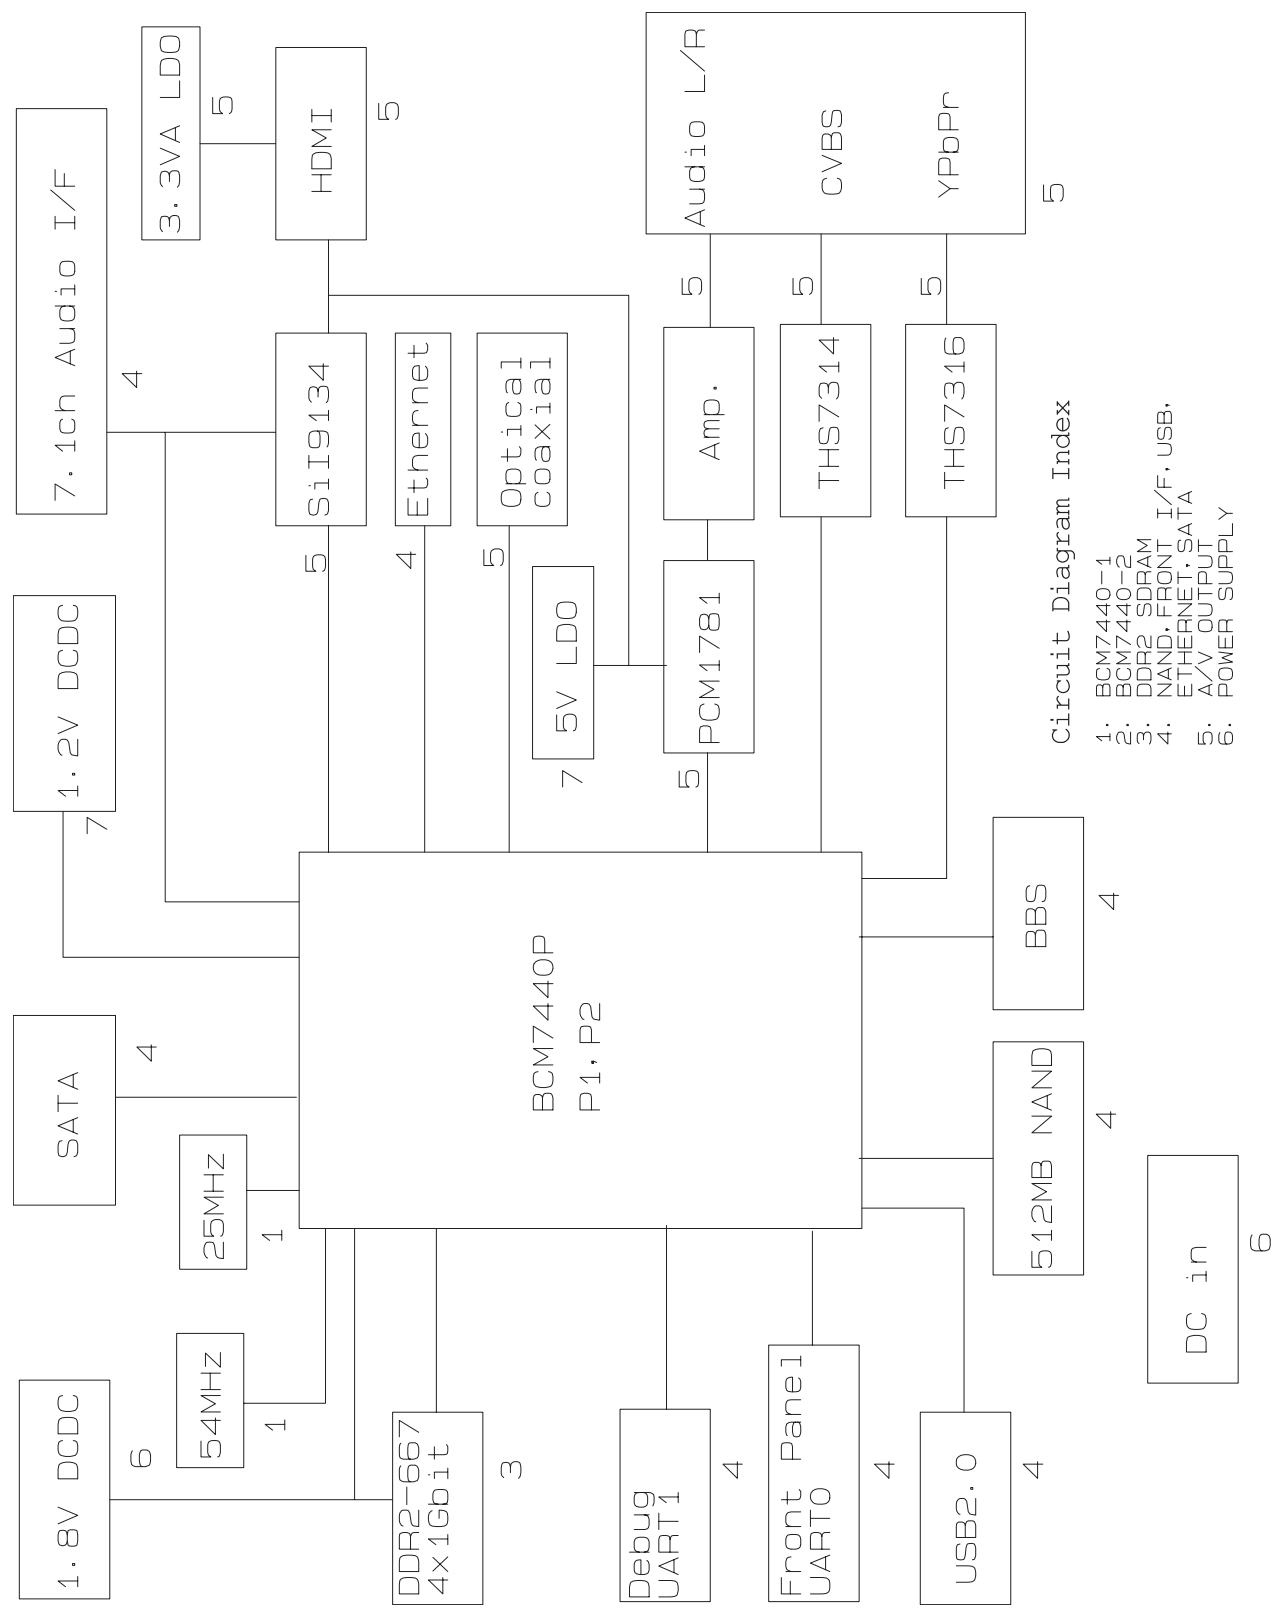


2. SMPS BLOCK DIAGRAM

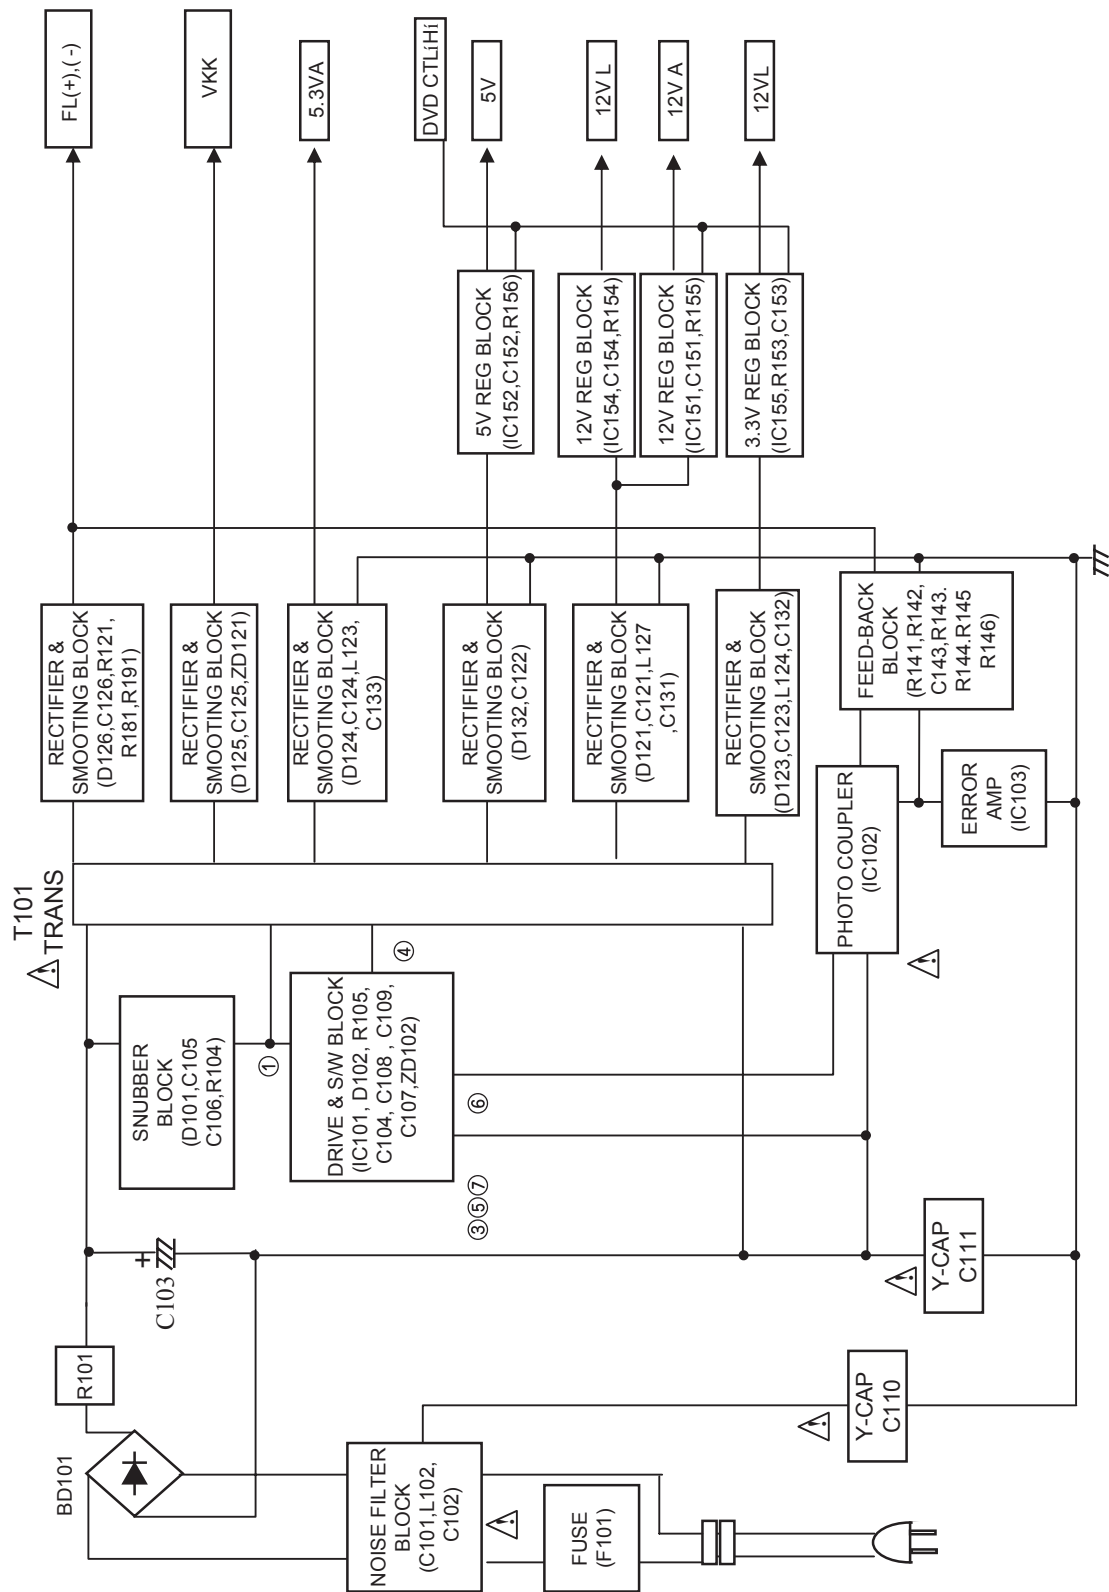


3. SYSTEM BLOCK DIAGRAM

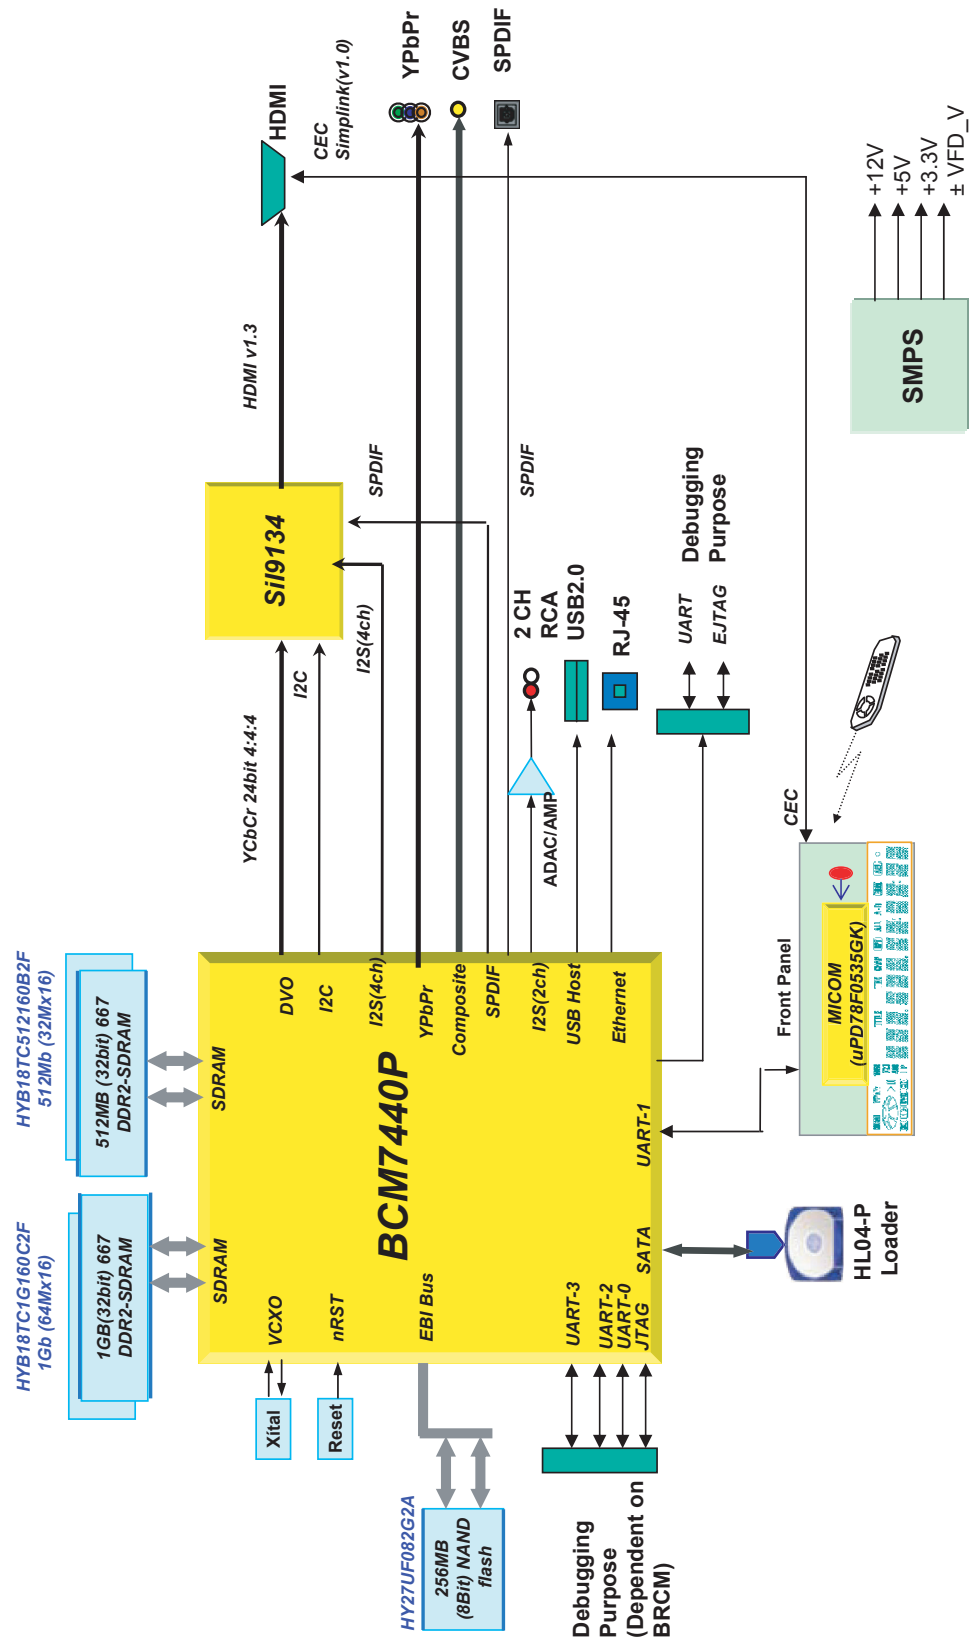


4. FRONT BLOCK DIAGRAM

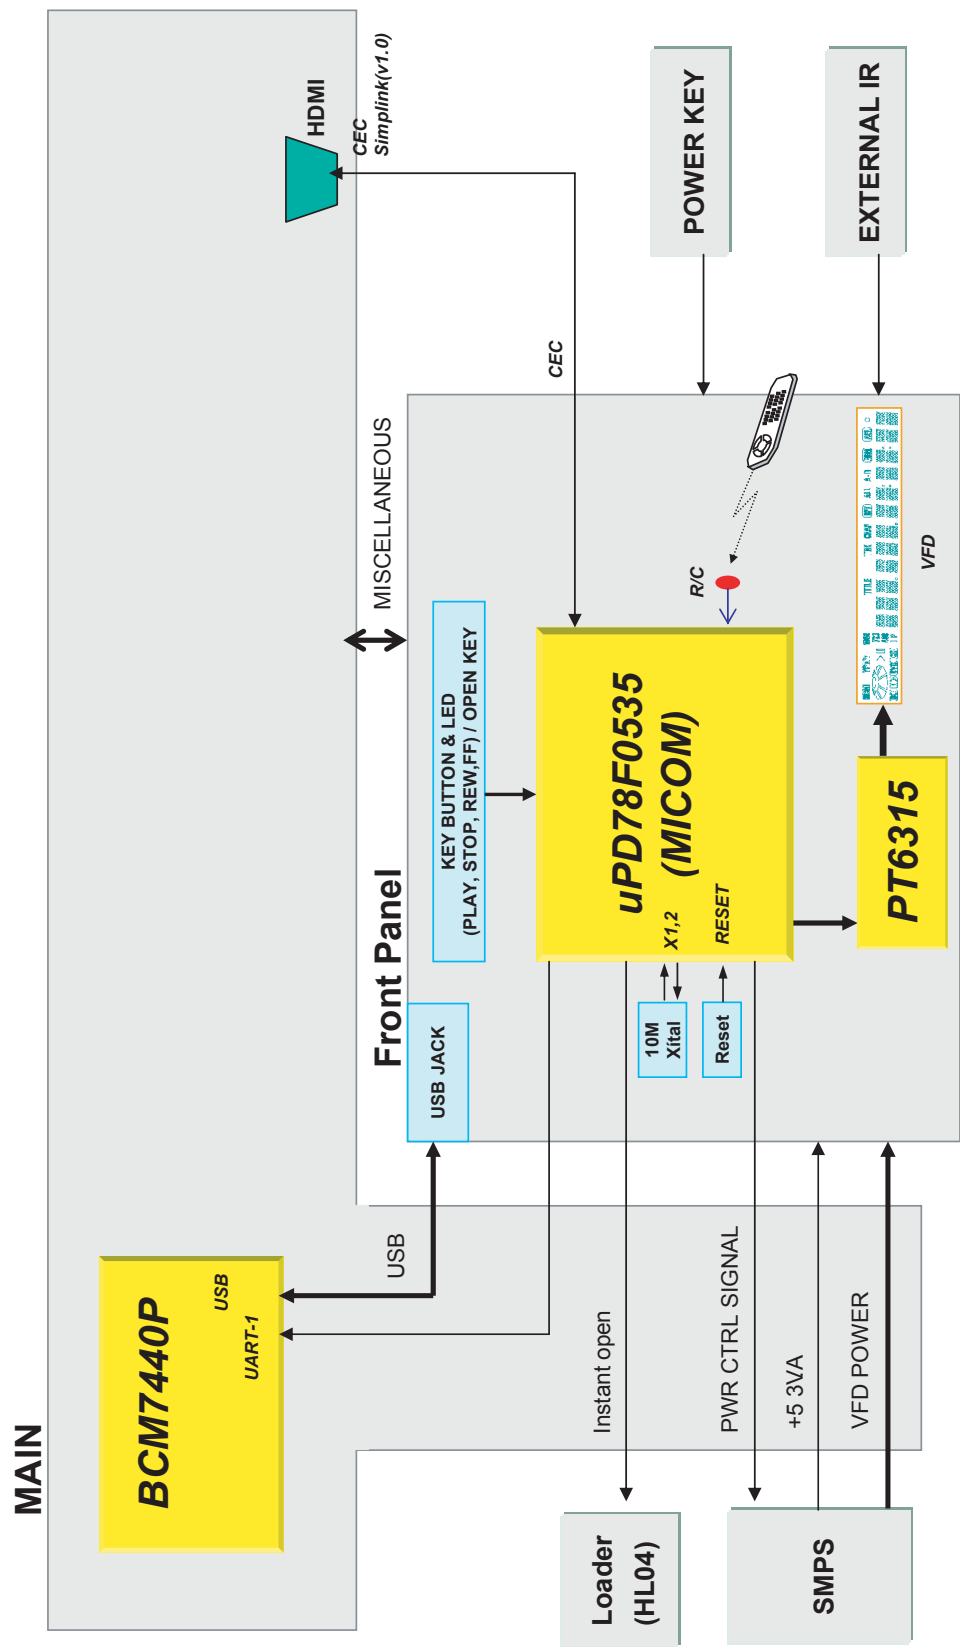


5. VIDEO BLOCK DIAGRAM

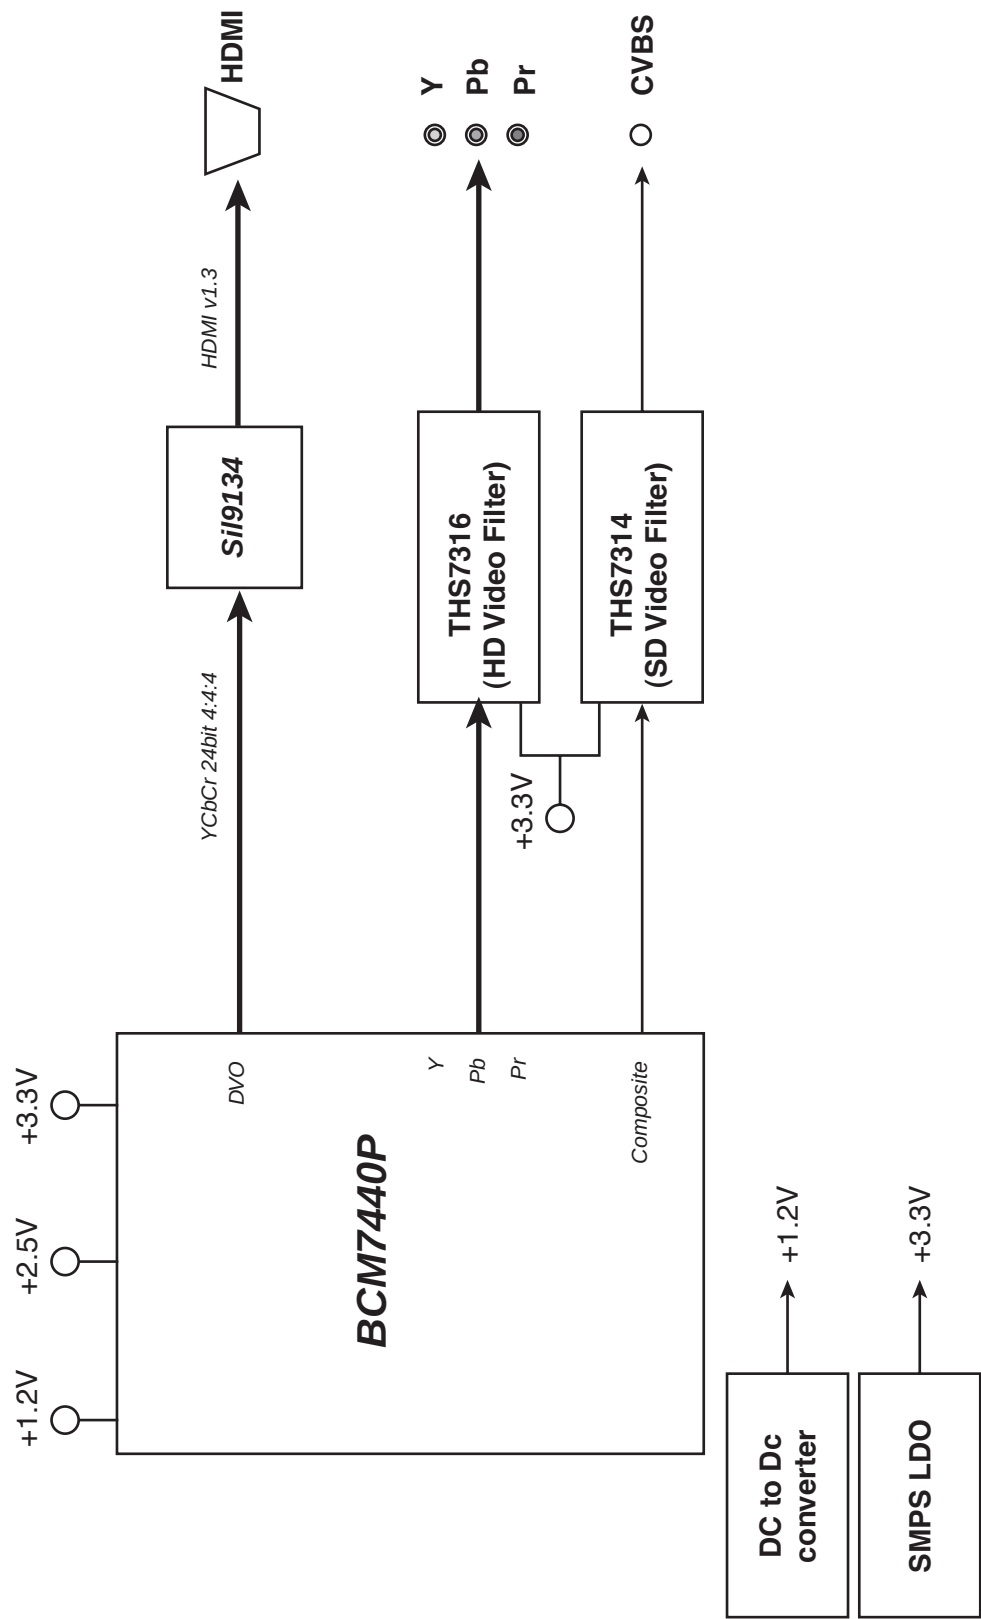

6. AUDIO EXTERNAL BLOCK DIAGRAM

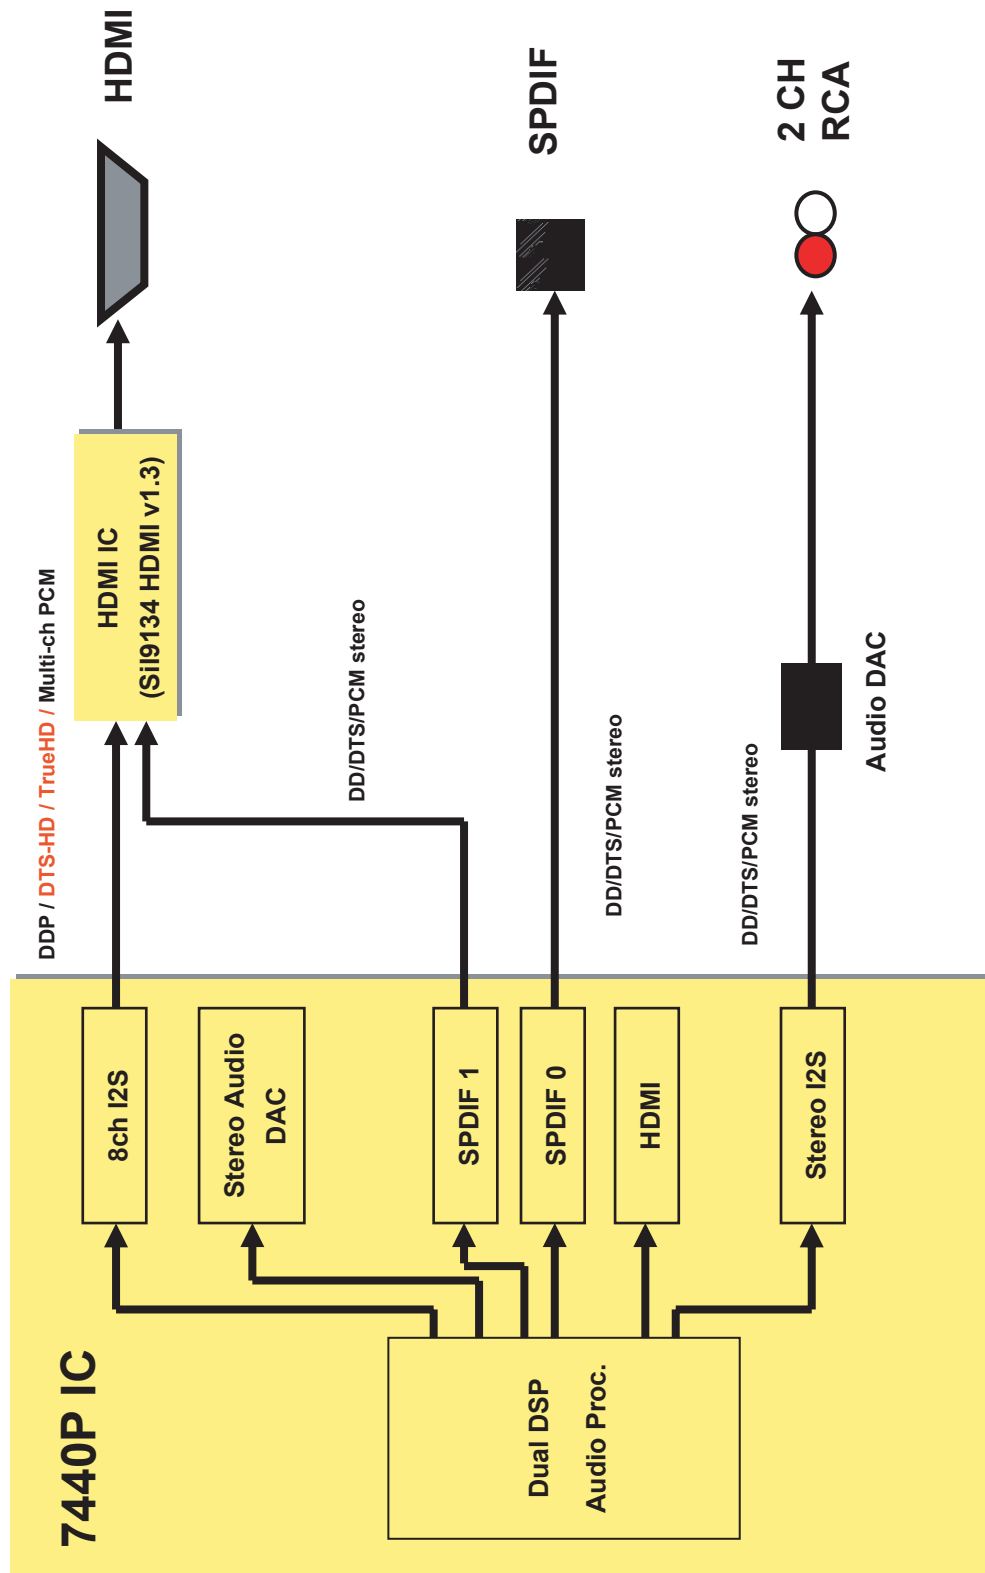

7. AUDIO INTERNAL BLOCK DIAGRAM

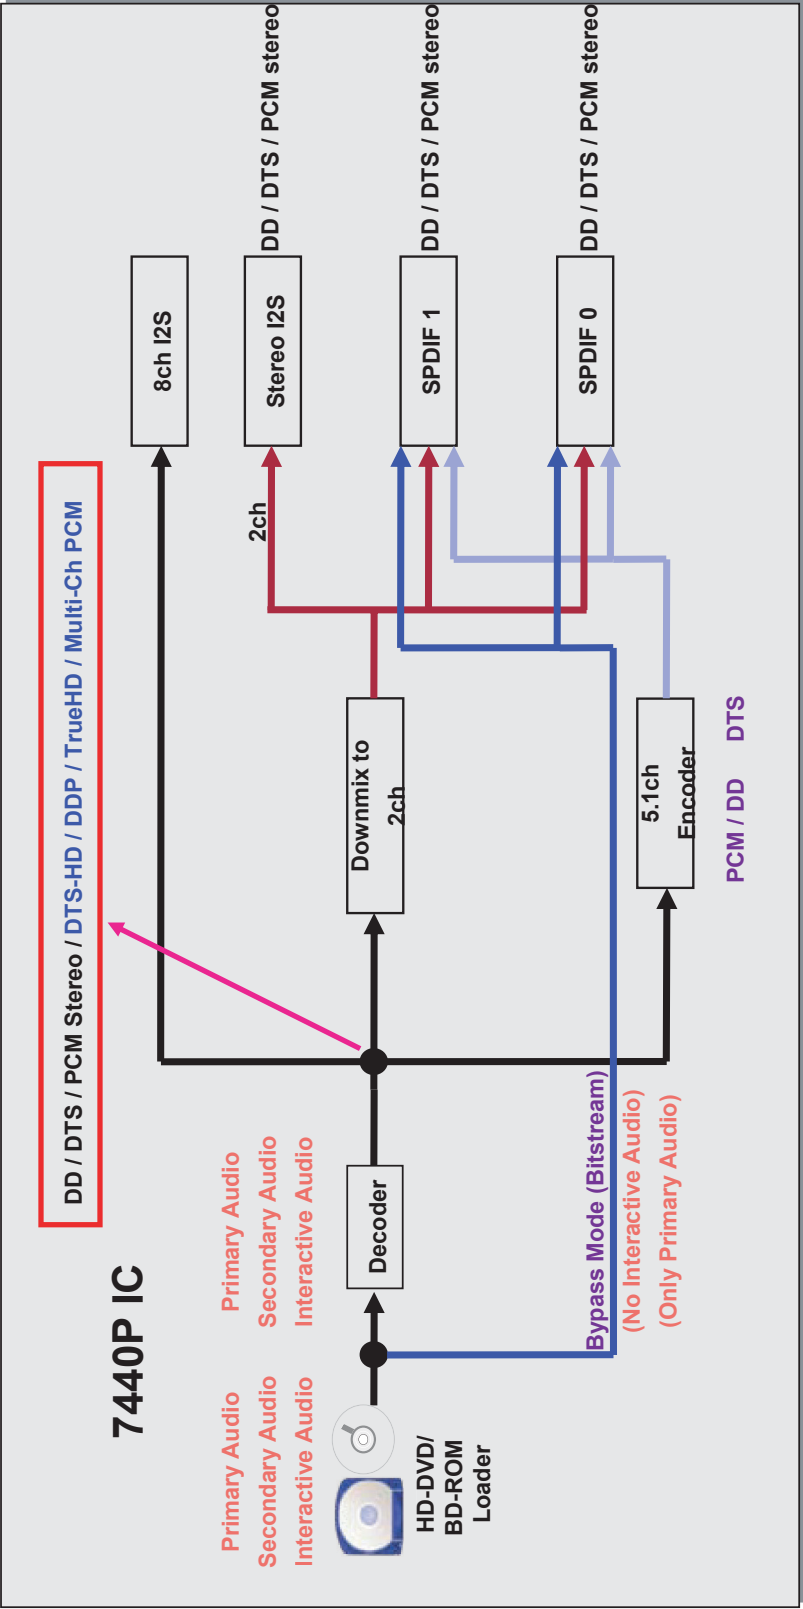

1. SMPS (POWER) CIRCUIT DIAGRAM



WHEN SERVICING THIS CHASSIS, UNDER NO CIRCUMSTANCES SHOULD THE ORIGINAL DESIGN BE MODIFIED OR ALTERED WITHOUT PERMISSION FROM THE NAD. ALL COMPONENTS SHOULD BE REPLACED ONLY WITH TYPES IDENTICAL TO THOSE IN THE ORIGINAL CIRCUIT. SPECIAL COMPONENTS ARE SHADED ON THE SCHEMATIC FOR

1. Shaded(■) parts are critical for safety. Replace only with specified part number.
2. Voltages are DC-measured with a digital voltmeter during Play mode.

VD EBY37800211

12


[illegible]

1. BCM7440-1

2008.07.16

2. BCM7440-2


4. DDR2-SDRAM CIRCUIT DIAGRAM

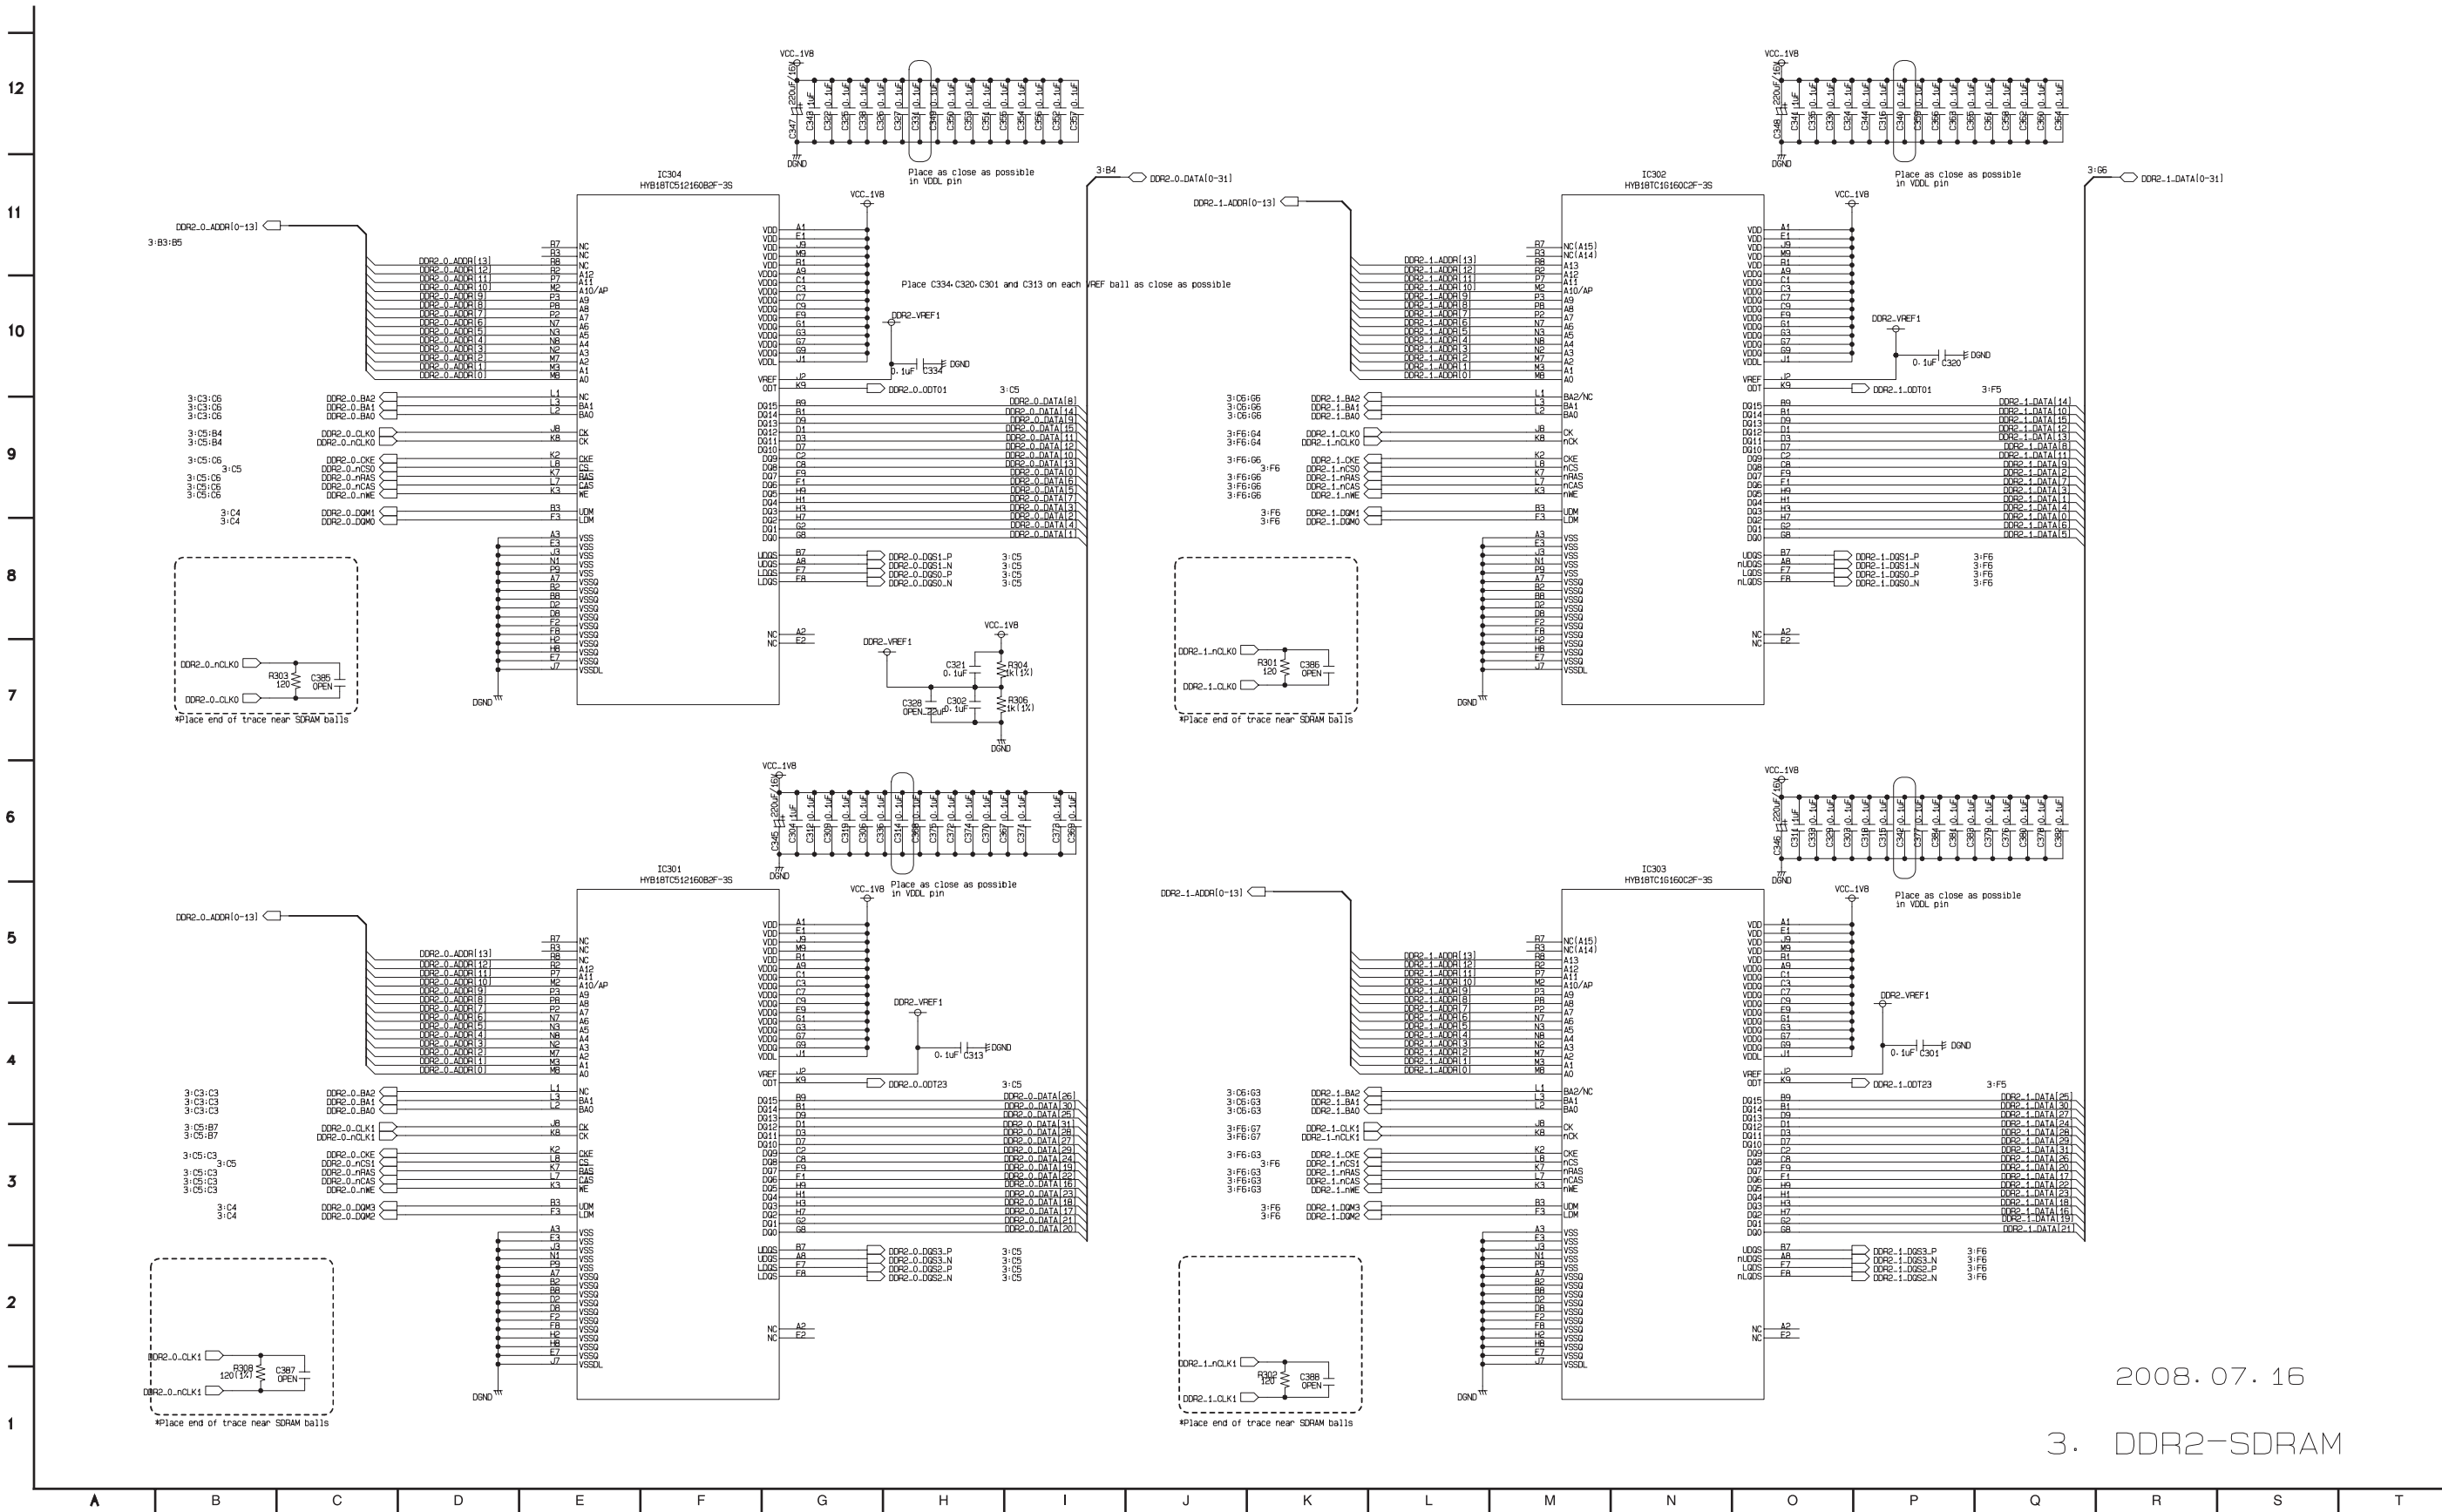

2008.07.16

3. DDR2-SDRAM


5. NAND, SATA, INTERFACE, ETHERNET CIRCUIT DIAGRAM

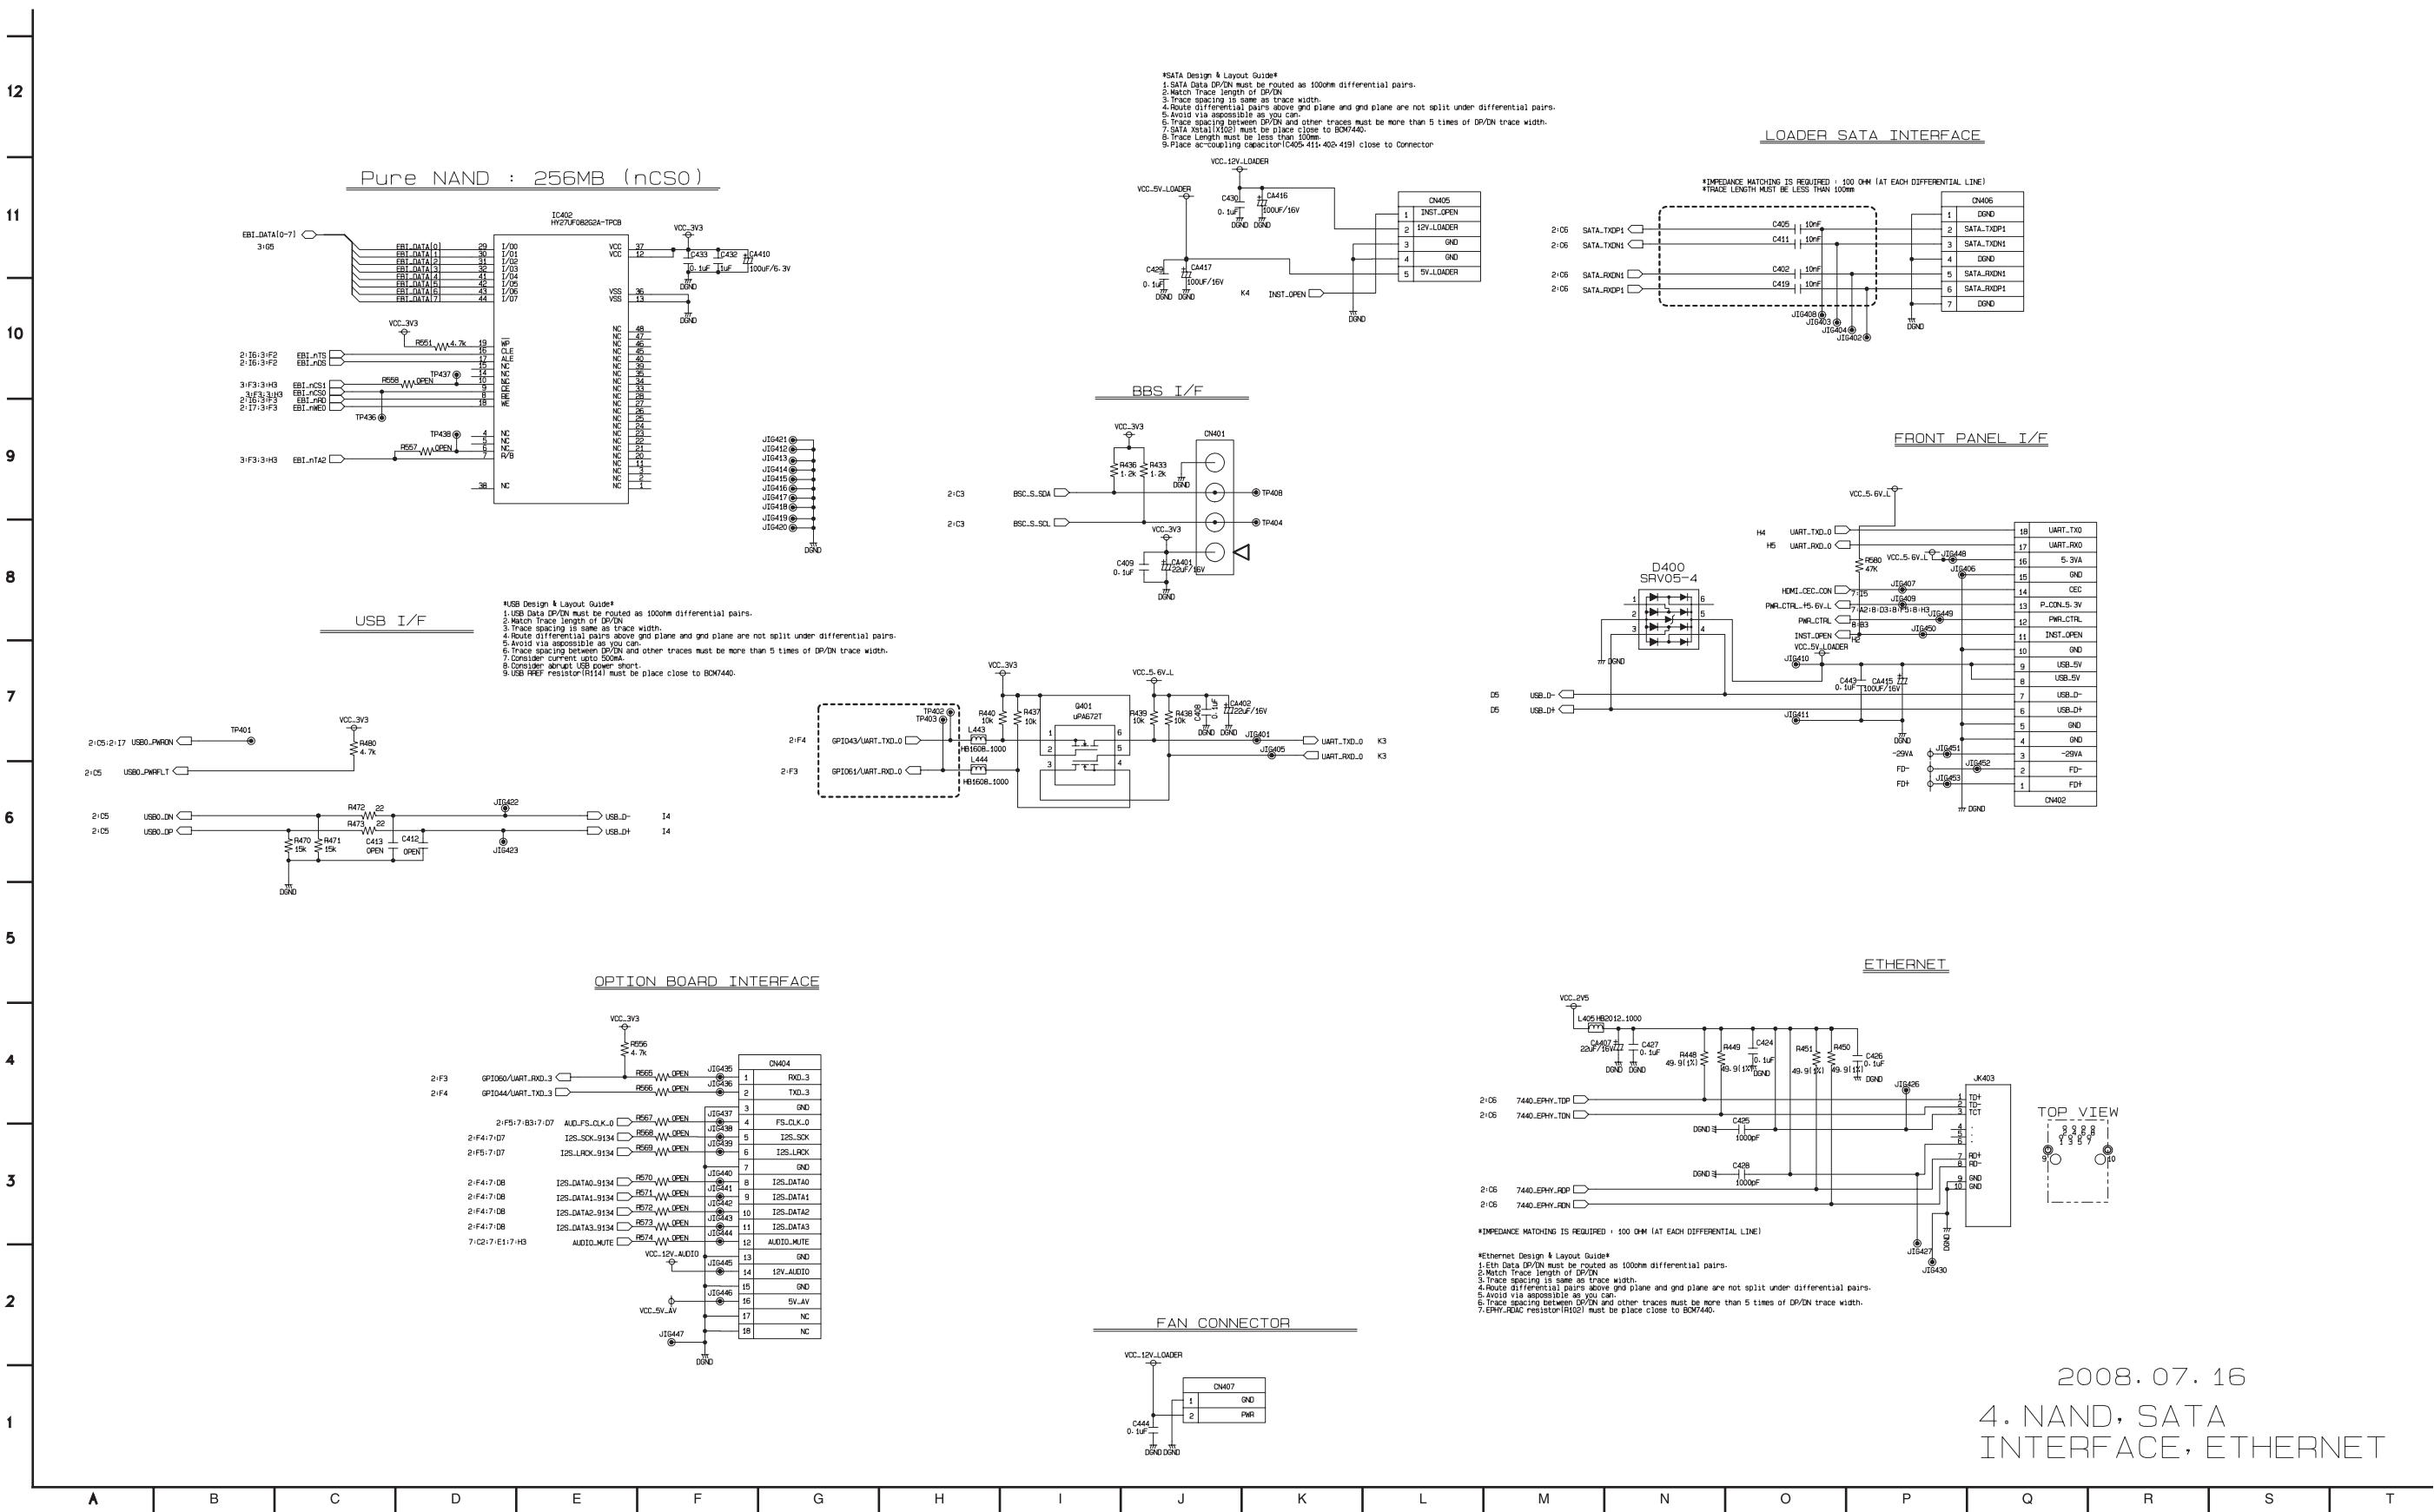

12
11
10
9
8
7
6
5
4
3
2
1




7. POWER SUPPLY CIRCUIT DIAGRAM

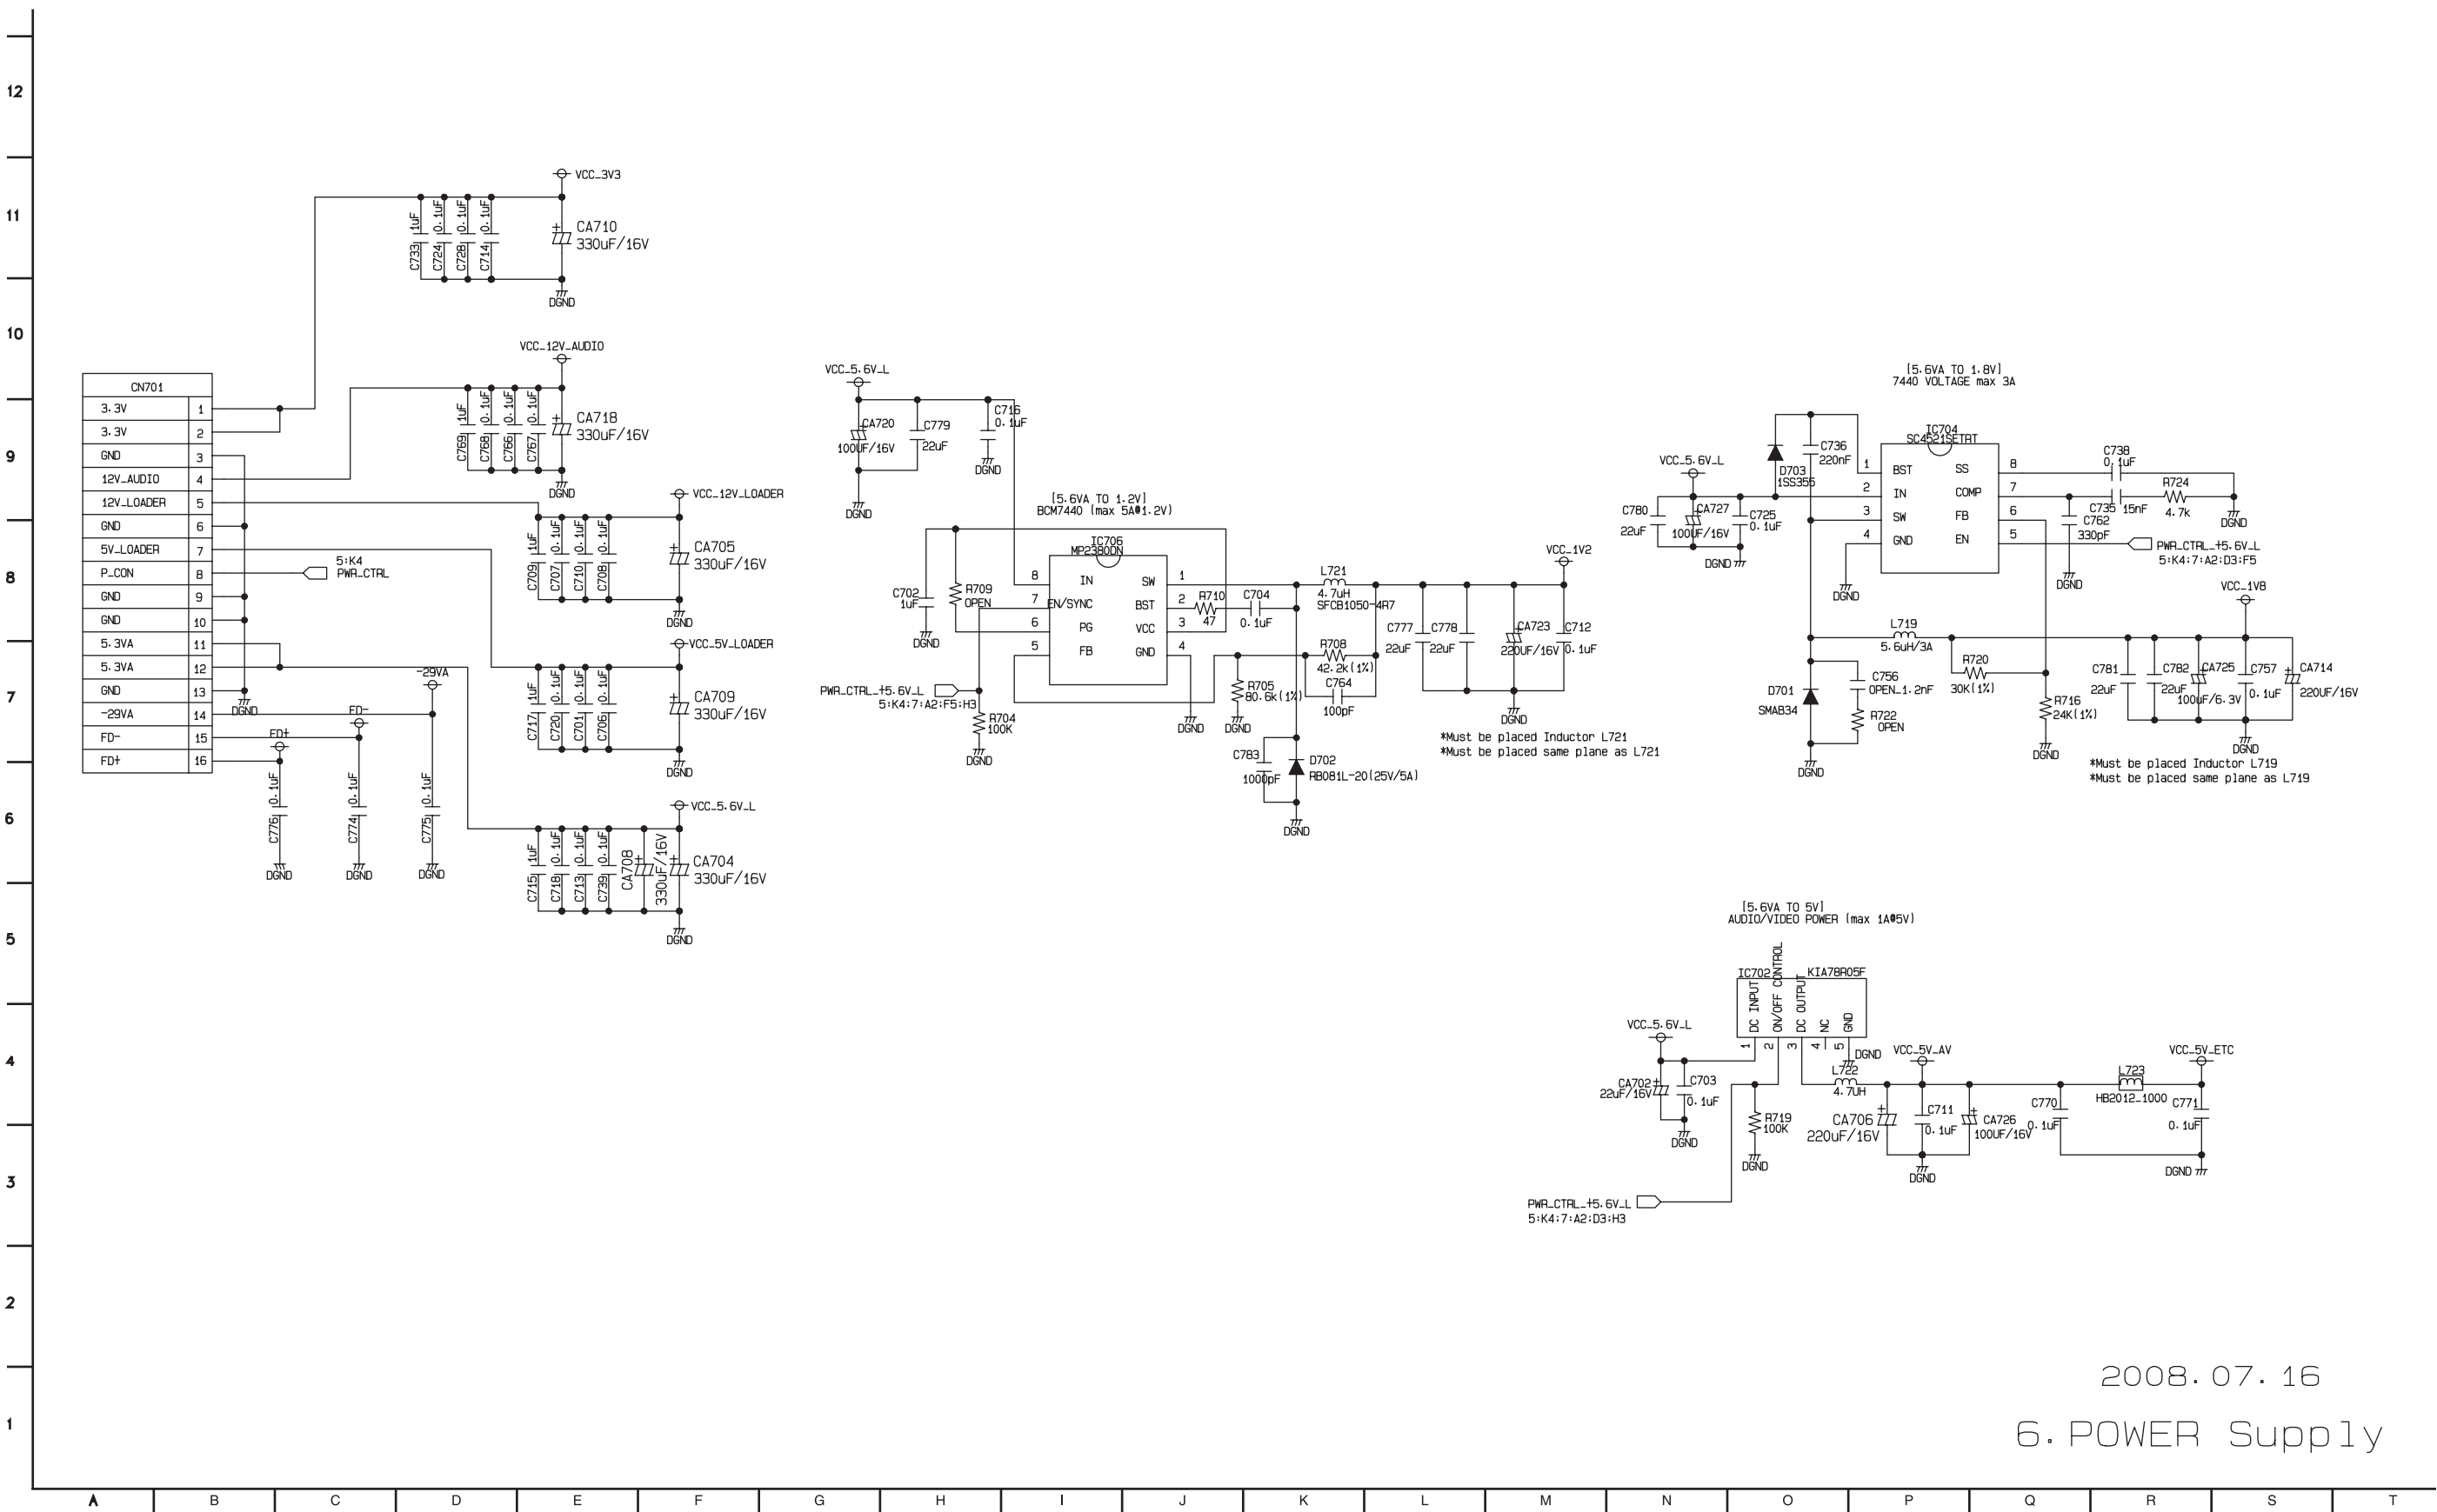




BD300 I/O u-COM
EBY48828903
2008.07.25

9. FRONT KEY CIRCUIT DIAGRAM

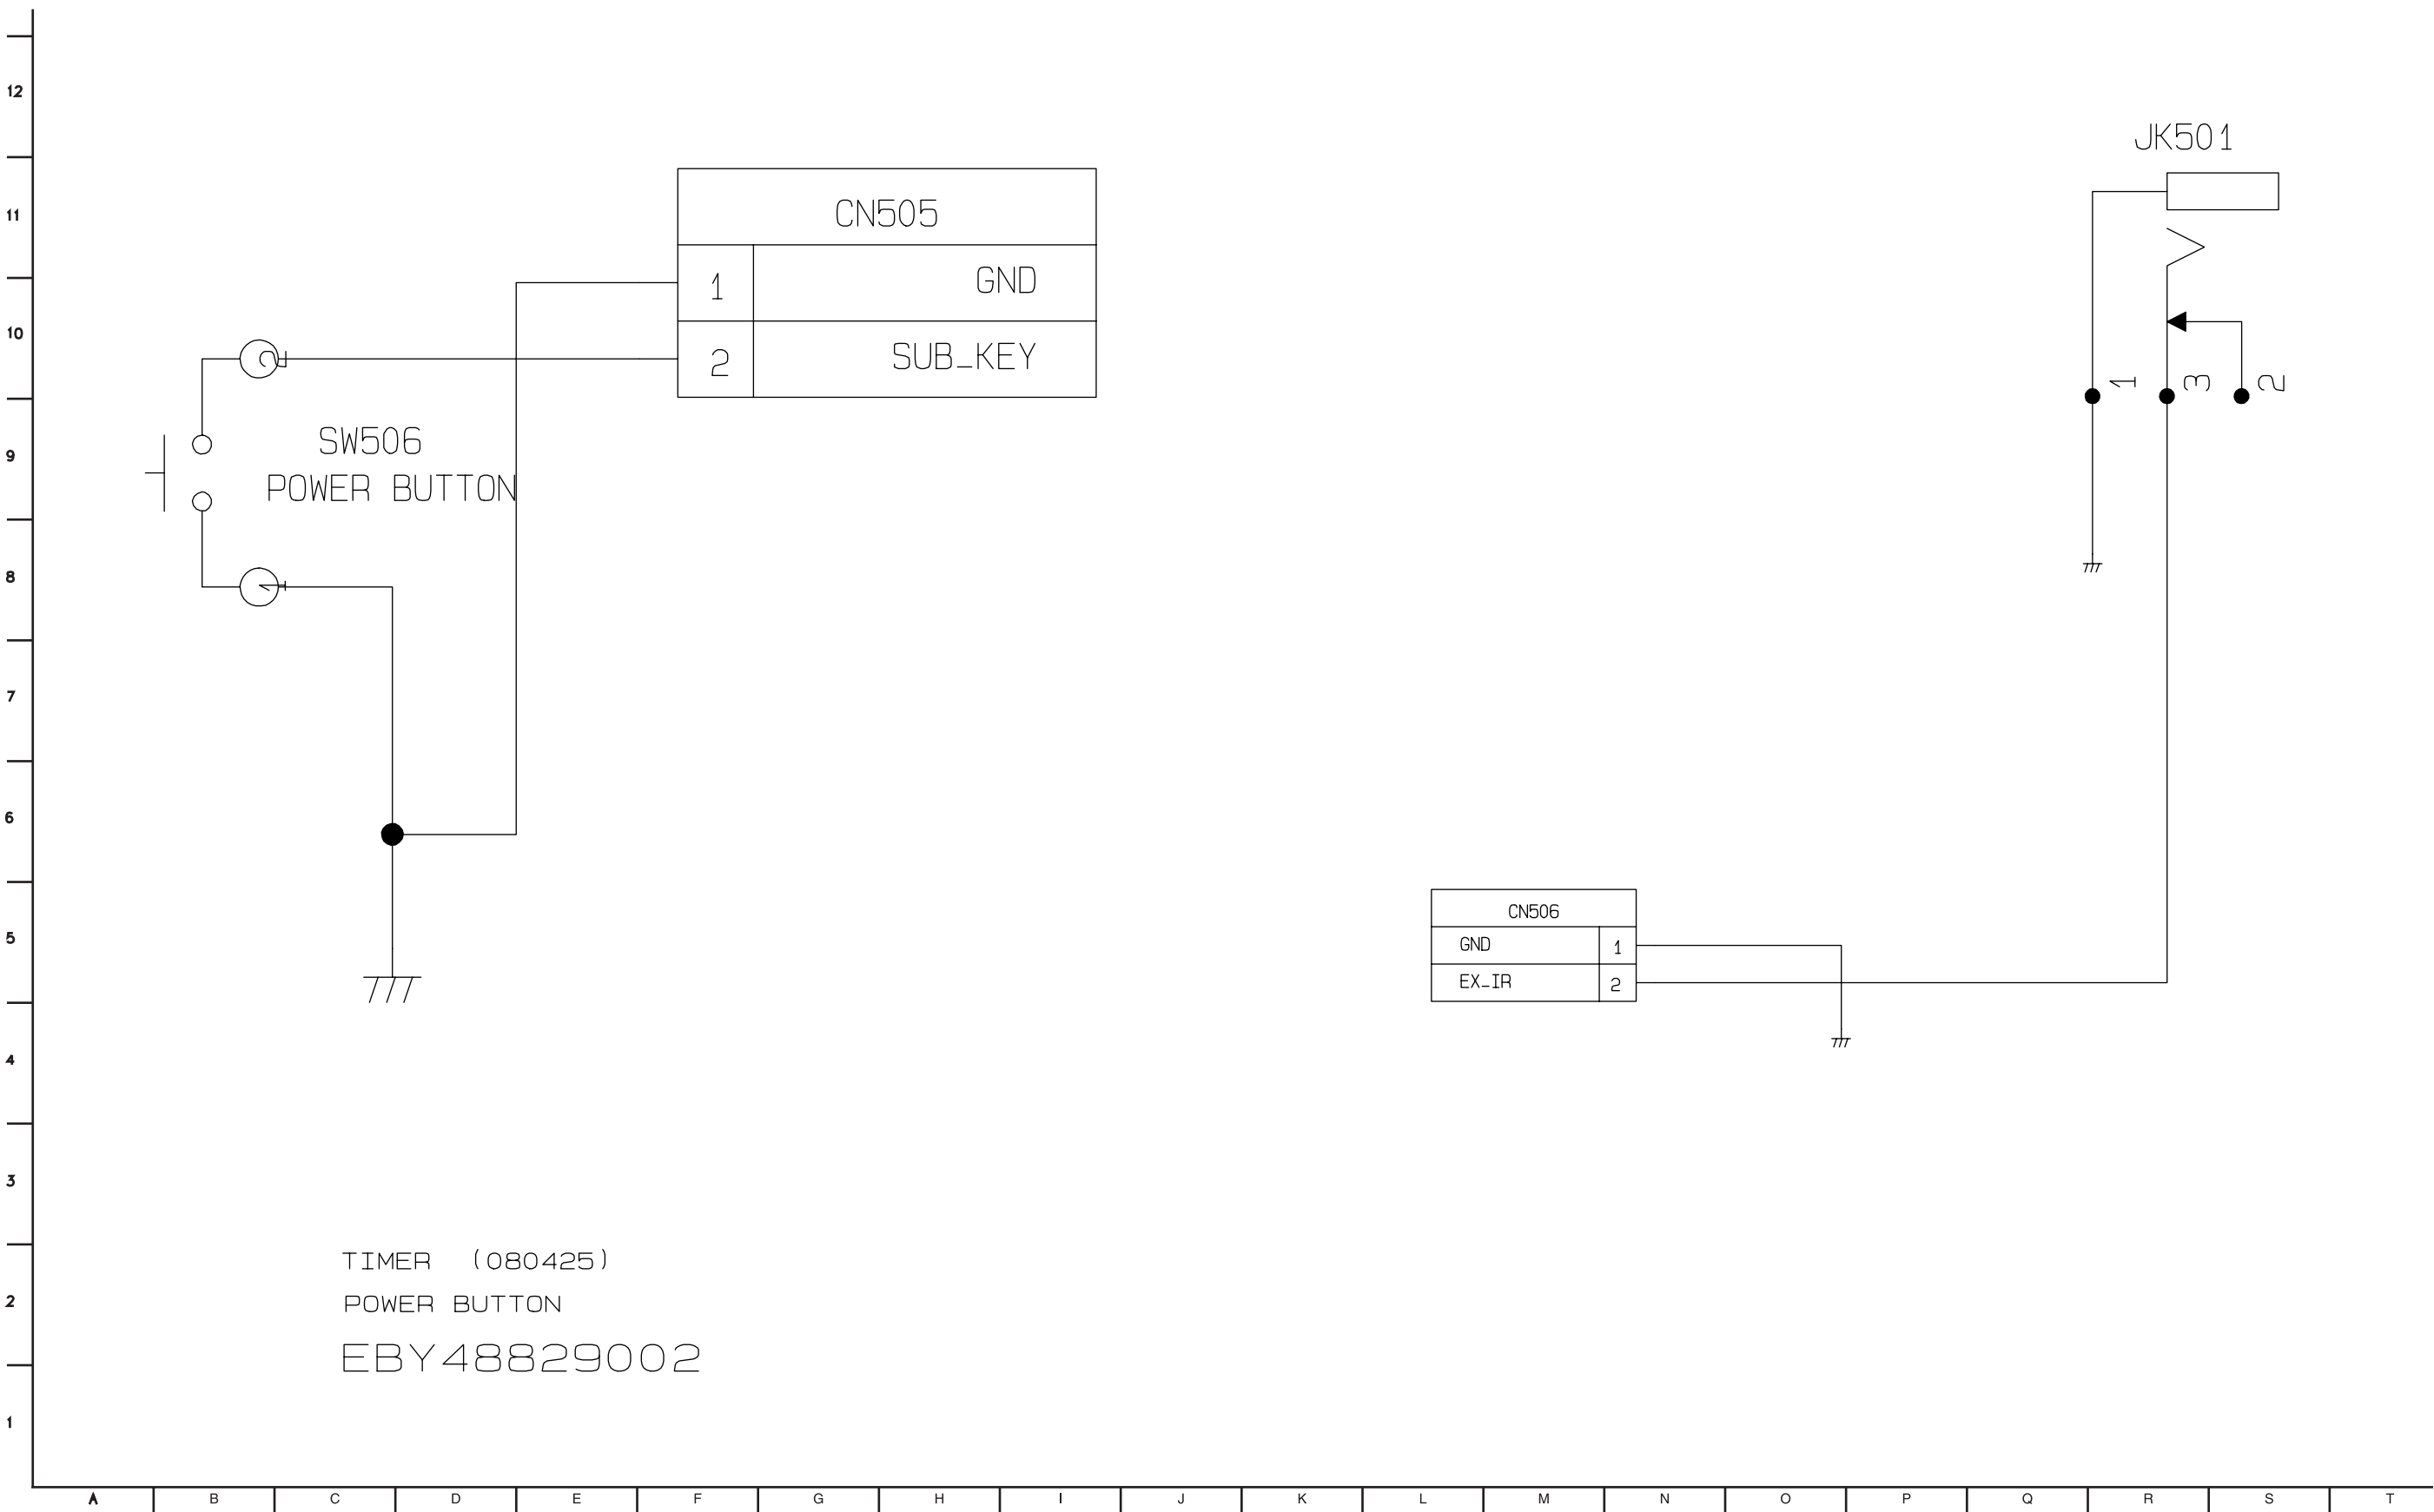

10. EXTERNAL IR CIRCUIT DIAGRAM

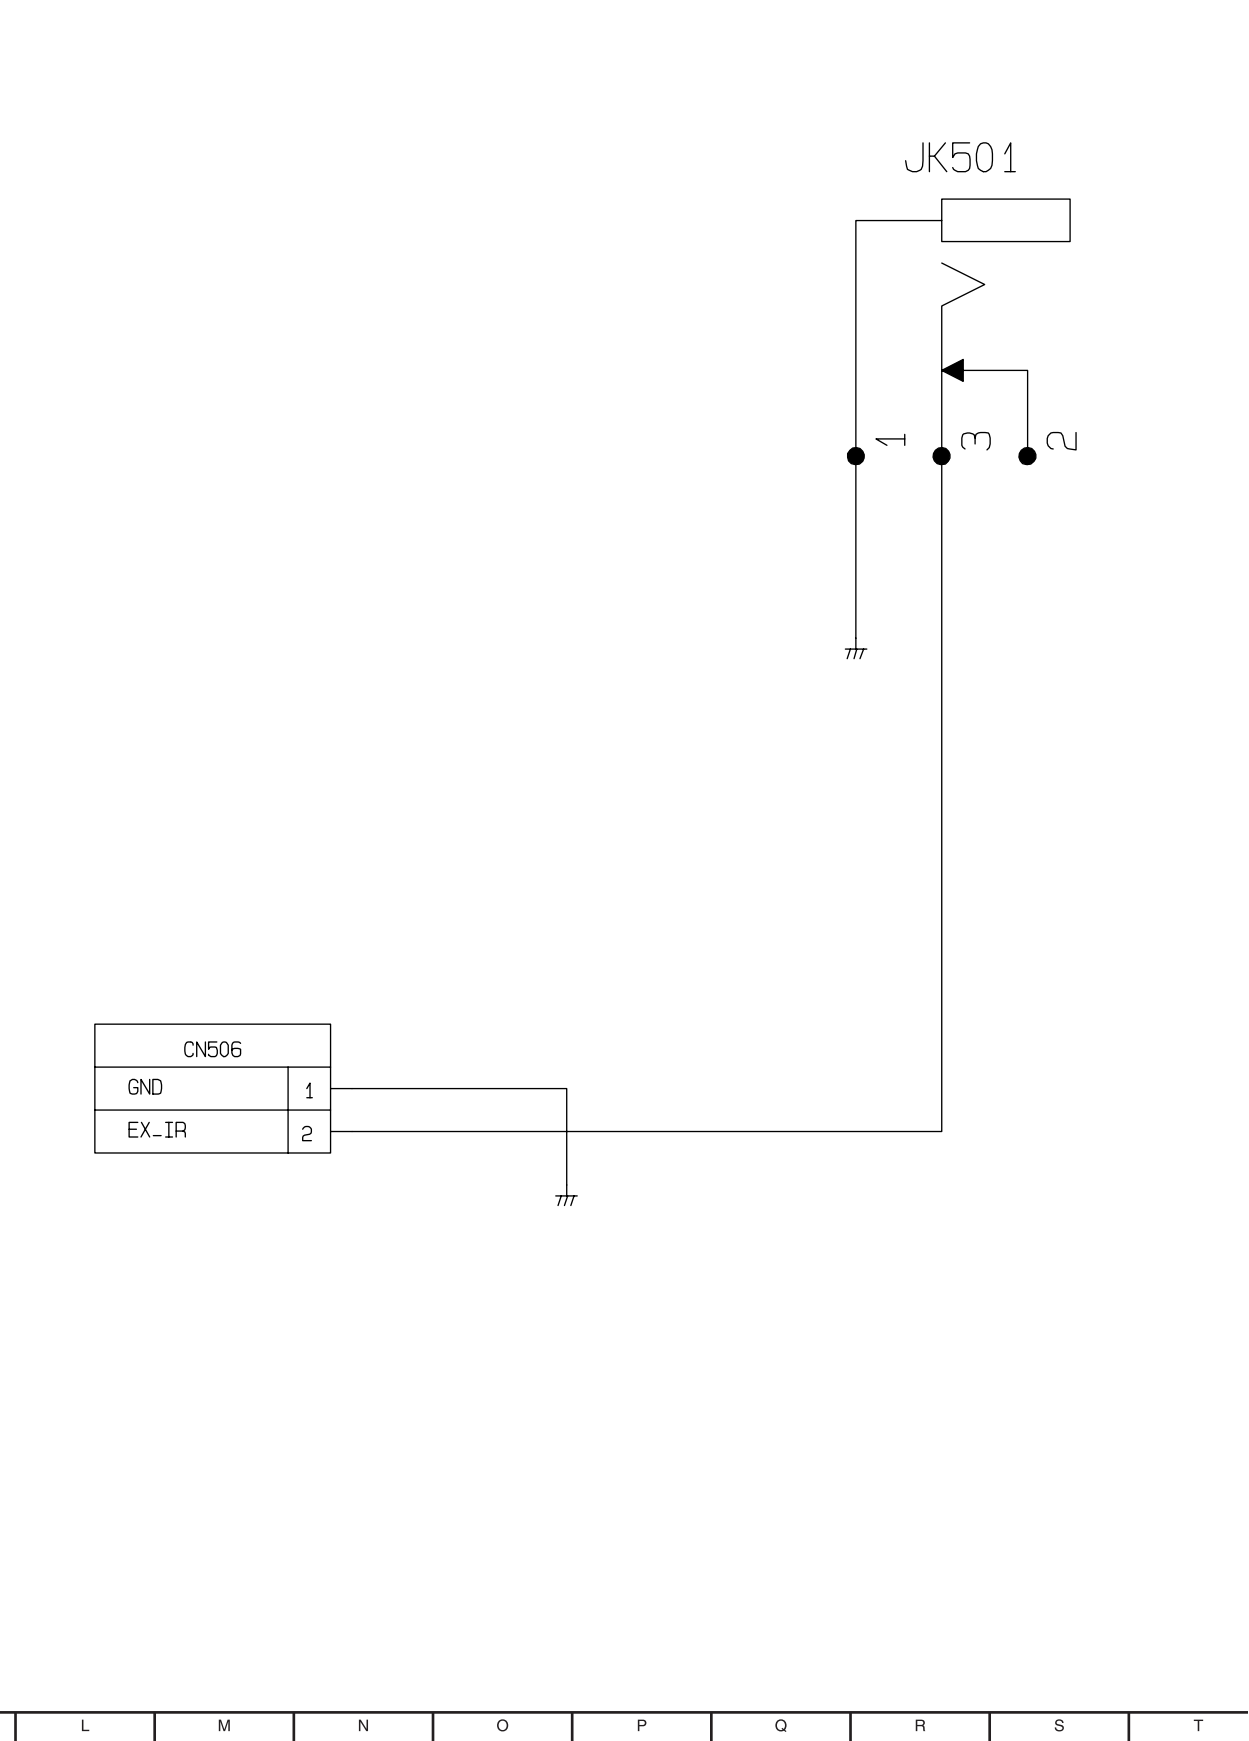

CIRCUIT VOLTAGE CHART

IC VOLTAGE MEASUREMENT (VOLT)

PIN	STOP	PLAY
IC402		
1	-	0.02
2	-	0.03
3	-	0.01
4	-	0.02
5	-	0.01
6	-	0.02
7	-	0.00
8	-	3.18
9	-	0.00
10	-	0.01
11	-	0.02
12	-	3.26
13	-	0.00
14	-	0.01
15	-	0.01
16	-	0.01
17	-	0.01
18	-	0.01
19	-	3.26
20	-	0.03
21	-	0.02
22	-	0.03
23	-	0.00
24	-	0.02
25	-	0.02
26	-	0.00
27	-	0.01
28	-	0.01
29	-	2.38
30	-	2.38
31	-	2.38
32	-	2.38
33	-	0.01
34	-	0.01
35	-	0.01
36	-	0.00
37	-	3.26
38	-	0.02
39	-	0.03
40	-	0.02
41	-	0.01
42	-	2.38
43	-	2.38
44	-	2.38
45	-	0.01
46	-	0.02
47	-	0.03
48	-	0.03
IC601		
1	2.75	2.73
2	0.06	0.05
3	0.03	0.02
4	1.63	1.63
5	1.45	1.43
6	0.00	0.00
7	0.00	0.00

PIN	STOP	PLAY
8	0.00	0.00
9	0.00	0.00
10	0.00	0.00
11	0.00	0.00
12	1.79	1.78
13	0.00	0.00
14	3.29	3.26
15	0.20	0.20
16	0.00	0.00
17	0.00	0.00
18	0.00	0.00
19	0.00	0.00
20	0.00	0.00
21	0.00	0.00
22	0.00	0.00
23	0.00	0.00
24	0.02	0.00
25	3.29	3.26
26	0.00	0.00
27	1.36	1.36
28	1.80	1.79
29	0.00	0.00
30	2.71	2.78
31	2.71	2.77
32	1.79	1.78
33	2.71	2.78
34	2.71	2.78
35	0.00	0.00
36	2.71	2.77
37	2.71	2.77
38	1.79	1.78
39	2.71	2.77
40	2.71	2.77
41	0.00	0.00
42	1.79	1.78
43	0.00	0.00
44	3.29	3.27
45	5.05	5.02
46	3.28	3.25
47	3.28	3.25
48	3.08	3.06
49	3.11	3.08
50	0.06	0.06
51	2.92	2.50
52	0.00	0.00
53	3.29	3.27
54	0.00	0.00
55	1.80	1.80
56	2.74	2.64
57	0.00	0.00
58	0.00	0.00
59	0.00	0.00
60	0.00	0.00
61	0.00	0.00
62	0.00	0.00
63	0.00	0.00
64	1.79	1.78

PIN	STOP	PLAY
65	0.00	0.00
66	3.29	3.27
67	0.00	0.00
68	0.00	0.00
69	0.00	0.00
70	0.00	0.00
71	0.00	0.00
72	0.00	0.00
73	0.00	0.00
74	2.73	1.80
75	0.00	0.00
76	1.79	1.78
77	0.00	0.00
78	0.00	0.00
79	0.00	0.00
80	0.00	0.00
81	0.00	0.00
82	0.00	0.00
83	0.00	0.00
84	2.71	2.65
85	0.00	0.00
86	0.00	0.00
87	0.00	0.00
88	1.51	1.50
89	3.29	3.27
90	0.00	1.50
91	0.00	0.00
92	0.00	0.00
93	0.00	0.00
94	0.00	0.00
95	0.00	0.00
96	0.00	0.00
97	0.00	0.00
98	0.00	0.00
99	1.79	1.78
100	0.00	0.00
IC603		
1	-	0.00
2	-	2.16
3	-	2.07
4	-	0.00
5	-	2.05
6	-	2.01
7	-	3.25
8	-	11.30
IC606		
1	-	0.53
2	-	0.00
3	-	0.00
4	-	3.16
5	-	0.00
6	-	0.29
7	-	0.31
8	-	1.34
IC607		
1	-	0.00
2	-	0.00

PIN	STOP	PLAY
3	-	0.00
4	-	0.00
5	-	1.42
6	-	1.19
7	-	1.61
8	-	1.63
9	-	0.00
10	-	0.00
11	-	5.10
12	-	0.00
13	-	2.51
14	-	2.46
15	-	2.44
16	-	0.00
IC609		
1	-	5.26
2	-	3.33
3	-	0.00
4	-	2.80
5	-	0.00
6	-	2.80
7	-	0.00
8	-	0.00
9	-	2.81
10	-	2.80
11	-	0.00
12	-	2.80
13	-	2.80
14	-	0.00
15	-	2.81
16	-	5.06
17	-	3.25
18	-	3.25
19	-	2.52
20	-	4.70
21	-	5.01
22	-	5.01
23	-	3.32
24	-	2.81
25	-	0.00
26	-	2.80
27	-	2.81
28	-	0.00
29	-	2.80
30	-	2.80
31	-	0.00
32	-	2.81
33	-	2.80
34	-	0.00
35	-	0.00
36	-	0.00
37	-	4.68
38	-	0.00
IC610		
1	-	0.43
2	-	0.00
3	-	0.00

PIN	STOP	PLAY
4	-	3.24
5	-	0.00
6	-	0.67
7	-	0.46
8	-	1.41
IC702		
1	-	5.28
2	-	5.25
3	-	5.03
4	-	0.00
5	-	0.00
IC704		
1	-	6.71
2	-	5.27
3	-	1.84
4	-	0.00
5	-	5.25
6	-	0.80
7	-	1.21
8	-	1.75
IC706		
1	-	1.28
2	-	5.74
3	-	5.08
4	-	0.00
5	-	0.80
6	-	0.23
7	-	5.25
8	-	5.26
(Timer)IC501		
1	-	0.00
2	-	4.98
3	-	0.00
4	-	0.00
5	-	0.00
6	-	4.87
7	-	0.00
8	-	0.00
9	-	0.00
10	-	4.98
11	-	4.97
12	-	0.00
13	-	0.00
14	-	0.00
15	-	5.02
16	-	5.01
17	-	0.00
18	-	0.00
19	-	0.00
20	-	5.02
21	-	5.02
22	-	0.00
23	-	0.00
24	-	0.00
25	-	0.00
26	-	0.00
27	-	4.98

PIN	STOP	PLAY
28	-	3.25
29	-	5.11
30	-	0.00
31	-	0.00
32	-	0.00
33	-	0.00
34	-	0.00
35	-	0.00
36	-	0.00
37	-	0.00
38	-	4.95
39	-	0.00
40	-	0.00
41	-	5.10
42	-	5.10
43	-	5.10
44	-	4.95
45	-	0.00
46	-	4.98
47	-	5.12
48	-	0.00
49	-	5.12
50	-	0.00
51	-	0.00
52	-	0.00
53	-	0.00
54	-	0.00
55	-	0.00
56	-	0.00
57	-	4.89
58	-	0.00
59	-	0.00
60	-	0.00
61	-	0.00
62	-	0.00
63	-	0.00
64	-	0.00
(Timer)IC502		
1	-	3.07
2	-	3.07
3	-	3.07
4	-	3.07
5	-	3.07
6	-	0.41
7	-	0.00
8	-	5.23
9	-	5.12
10	-	0.38
11	-	0.00
12	-	0.00
13	-	5.26
14	-	-1.10
15	-	-0.95
16	-	-1.10
17	-	-1.10
18	-	-1.13
19	-	-0.90

PIN	STOP	PLAY
20	-	-1.08
21	-	-1.05
22	-	-0.88
23	-	-1.05
24	-	-1.01
25	-	-1.12
26	-	-0.92
27	-	-1.79
28	-	-1.08
29	-	-29.60
30	-	-30.54
31	-	-30.02
32	-	-30.04
33	-	-30.04
34	-	-30.04
35	-	-30.04
36	-	-30.04
37	-	-30.02
38	-	-30.02
39	-	-30.02
40	-	-30.02
41	-	-30.02
42	-	-30.02
43	-	5.12
44	-	0.0

CAPACITOR VOLTAGE MEASUREMENT (VOLT)


NO	LOC	SPEC	PLAYBACK	
			(+)	(-)
1	C137	100u/6.3V	3.28	0.00
2	C141	100u/6.3V	2.45	0.00
3	C2E1	47u/16V	1.82	0.00
4	C2E2	47u/16V	3.31	0.00
5	C2E3	47u/16V	1.23	0.00
6	C2E4	47u/16V	2.49	0.00
7	C2E5	47u/16V	1.23	0.00
8	C2E6	47u/16V	1.82	0.00
9	C345	220u/16V	1.82	0.00
10	C346	220u/16V	1.81	0.00
11	C347	220u/16V	1.81	0.00
12	C384	220u/16V	1.81	0.00
13	CA101	22u/16V	3.29	0.00
14	CA102	100u/6.3V	3.28	0.00
15	CA401	22u/16V	3.29	0.00
16	CA402	22u/16V	5.42	0.00
17	CA404	22u/16V	4.98	0.00
18	CA407	22u/16V	2.49	0.00
19	CA410	100u/6.3V	3.27	0.00
20	CA415	100u/16V	4.98	0.00
21	CA416	100u/16V	11.95	0.00
22	CA417	100u/16V	4.98	0.00
23	CA601	22u/16V	1.81	0.00
24	CA603	22u/16V	1.78	0.00
25	CA604	22u/16V	3.28	0.00
26	CA607	22u/16V	1.78	0.00
27	CA609	22u/16V	3.28	0.00
28	CA611	22u/16V	4.97	0.43
29	CA612	22u/16V	1.78	0.21
30	CA614	100u/16V	11.98	0.00
31	CA616	220u/16V	5.24	0.00
32	CA618	470u/6V	3.26	0.00
33	CA628	100u/6.3V	3.27	0.00
34	CA630	100u/16V	11.98	0.00
35	CA631	100u/16V	4.98	0.00
36	CA632	100u/16V	4.97	0.00
37	CA633	100u/16V	4.98	0.00
38	CA634	22u/16V	3.78	0.00
39	CA635	22u/16V	3.82	0.00
40	CA702	22u/16V	5.13	0.00
41	CA704	330u/16V	5.12	0.00
42	CA705	330u/16V	12.15	0.00
43	CA706	220u/16V	5.02	0.00
44	CA708	330u/16V	5.02	0.00
45	CA709	330u/16V	5.12	0.00
46	CA710	330u/16V	3.32	0.00
47	CA714	220u/16V	1.82	0.00
48	CA718	330u/16V	12.11	0.00
49	CA720	100u/16V	5.02	0.00
50	CA723	220u/16V	1.24	0.00
51	CA725	100u/6.3V	1.82	0.00
52	CA726	100u/16V	5.01	0.00
53	CA727	100u/16V	5.11	0.00
Timer				
54	C518	47u/16V	5.26	0.00
55	C516	47u/16V	4.95	0.00
56	C523	22u/16V	4.95	0.00

(TOP VIEW)




3-76

2. SMPS (POWER) P.C.BOARD
(TOP VIEW)

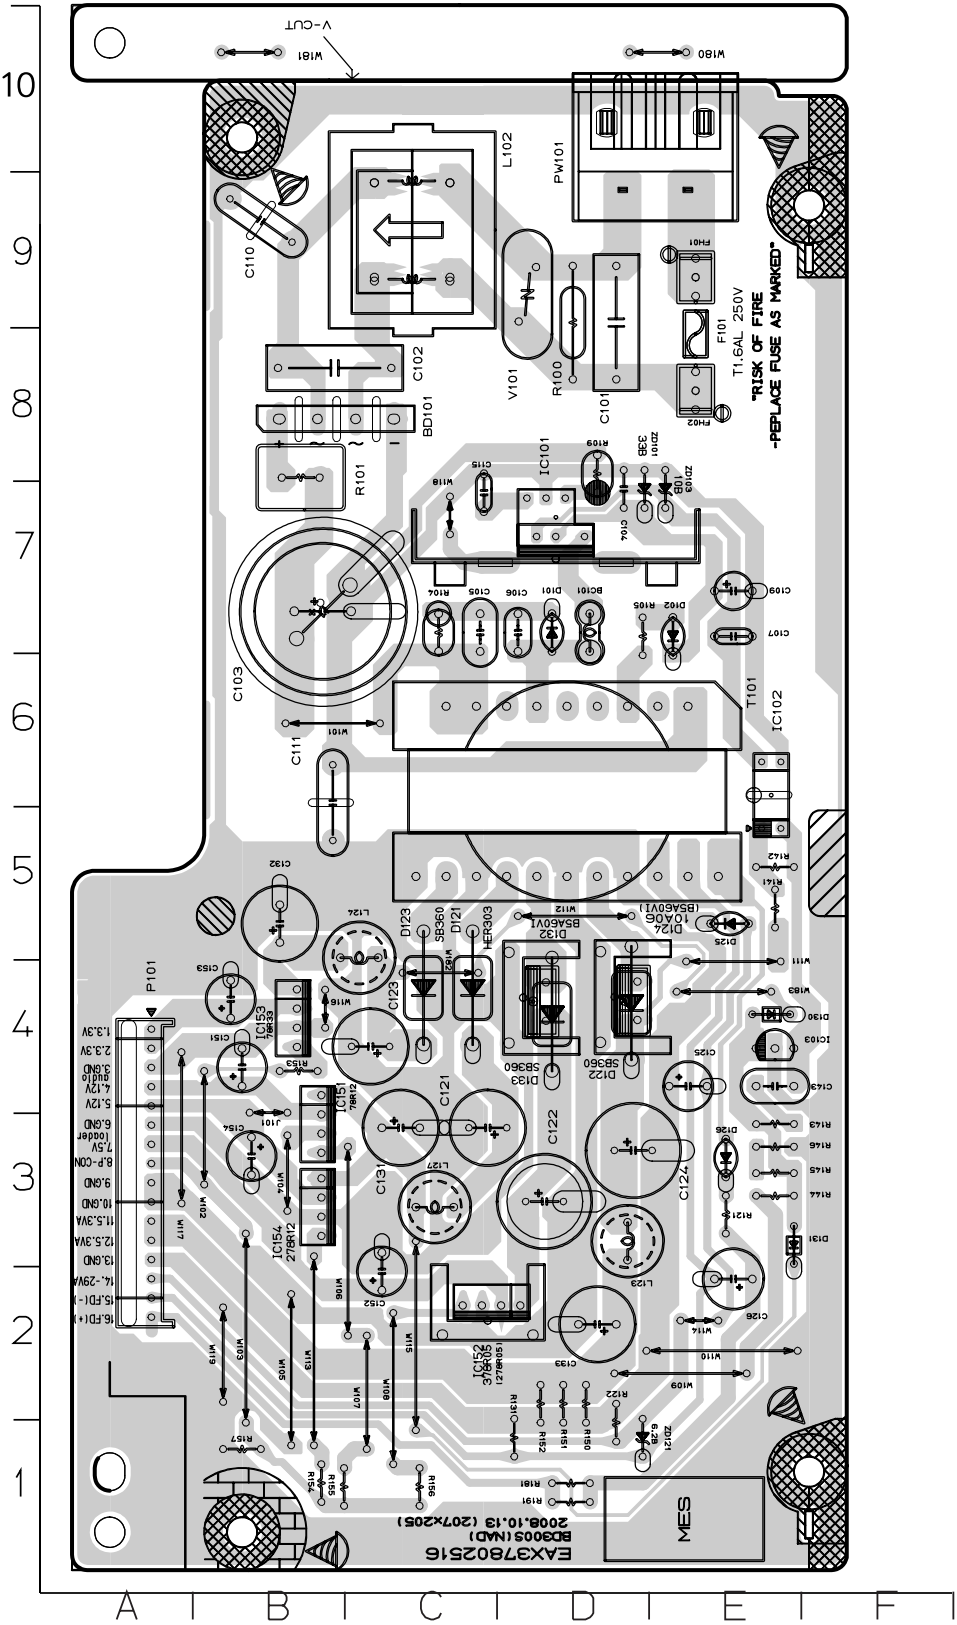


(BOTTOM VIEW)

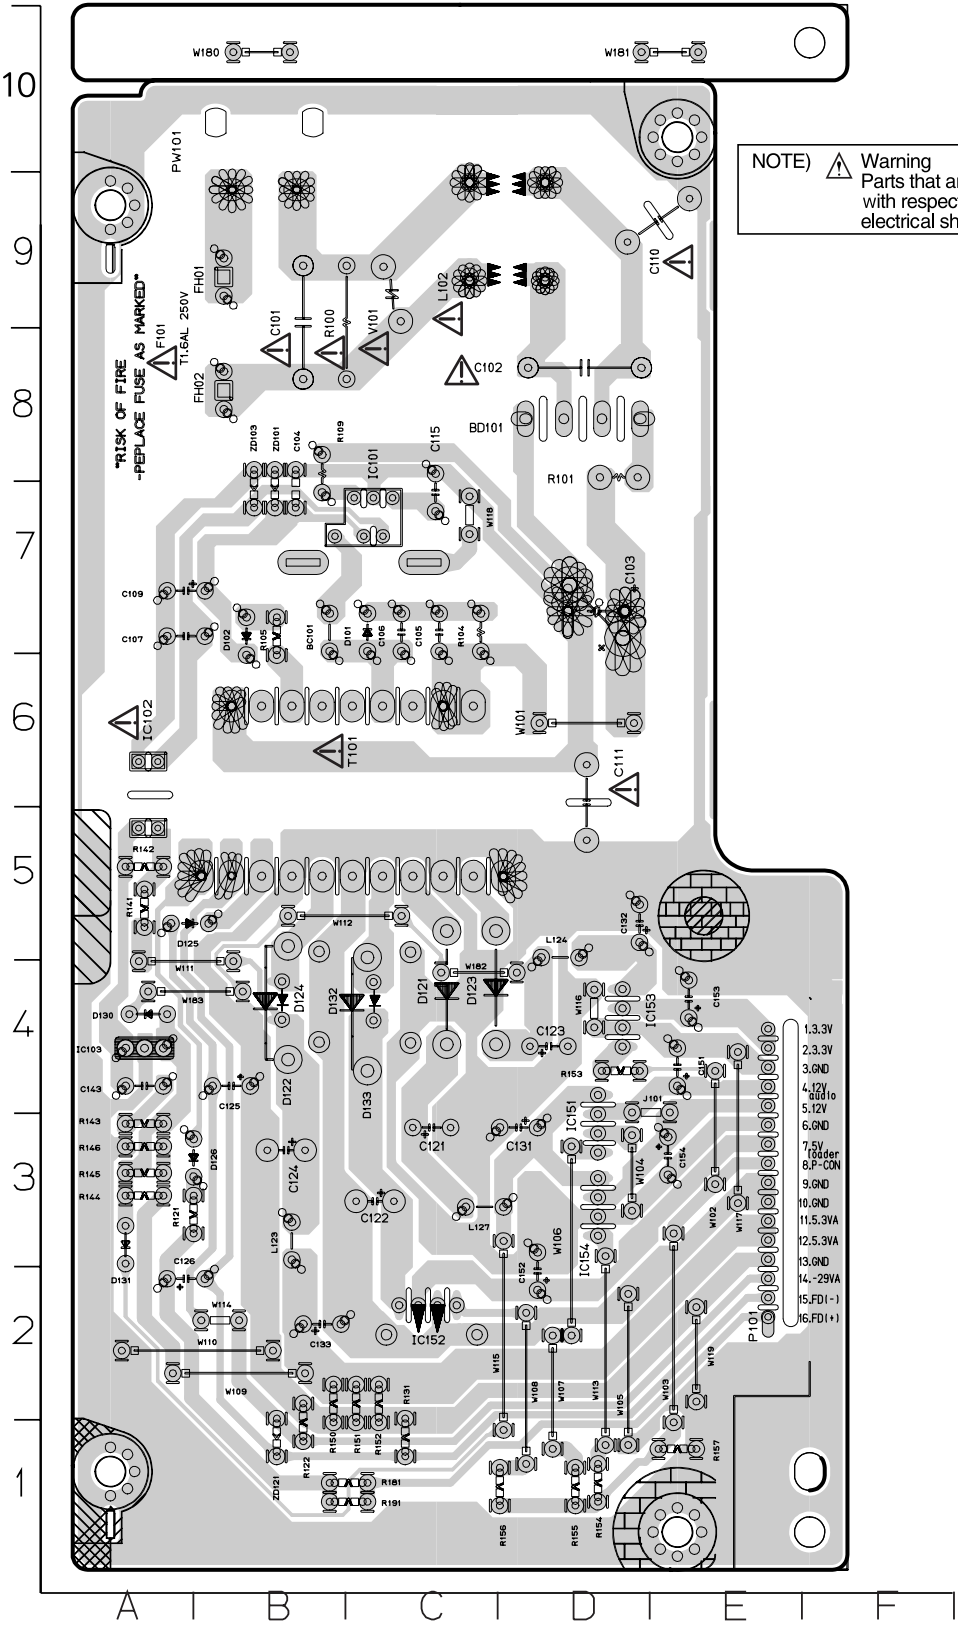


NOTE) ⚠ Warning
Parts that are shaded are critical
with respect to risk of fire or
electrical shock.


3. FRONT KEY P.C.BOARD (TOP VIEW)

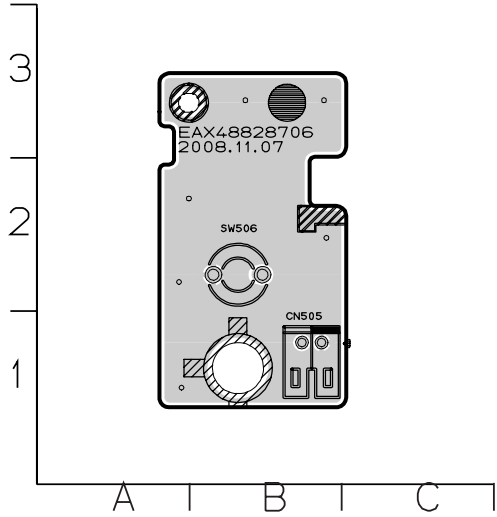


(BOTTOM VIEW)

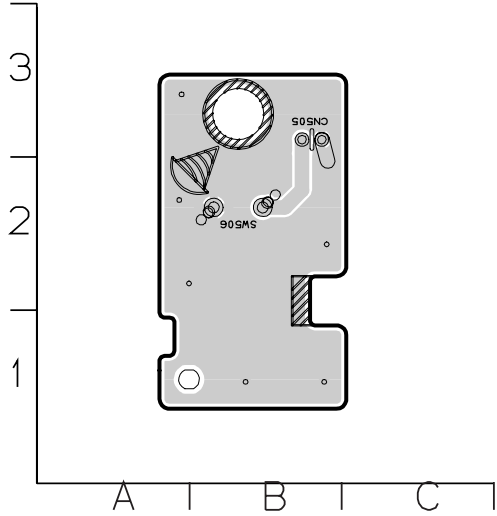


4. FRONT MICOM P.C.BOARD (TOP VIEW)

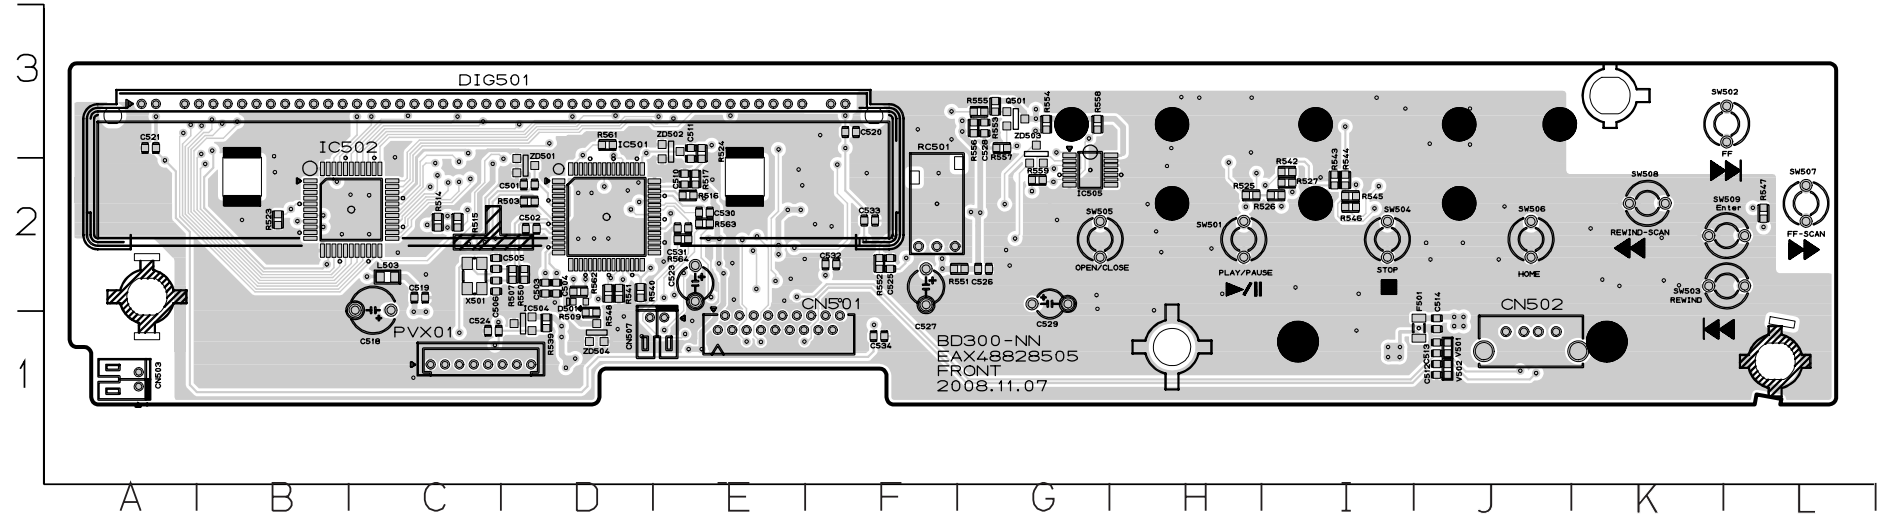


(BOTTOM VIEW)

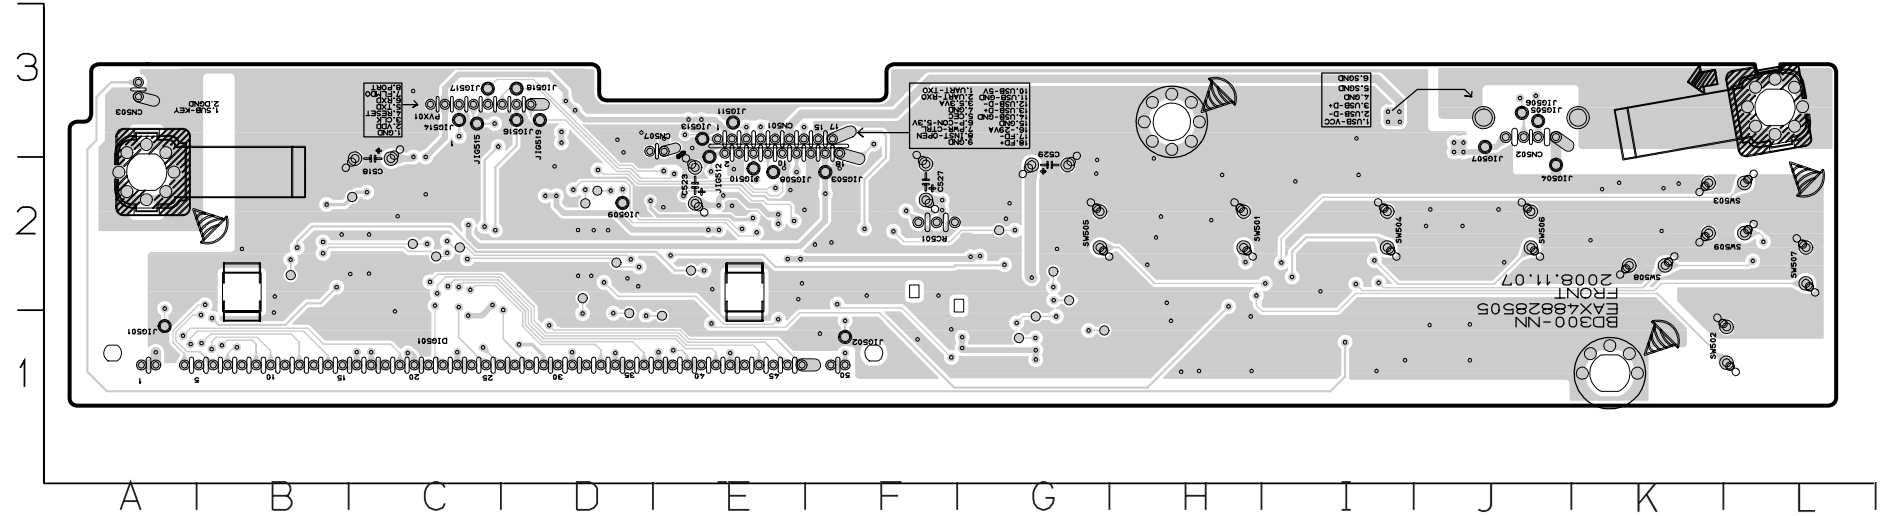

5. EXTERNAL IR P.C.BOARD
(TOP VIEW)

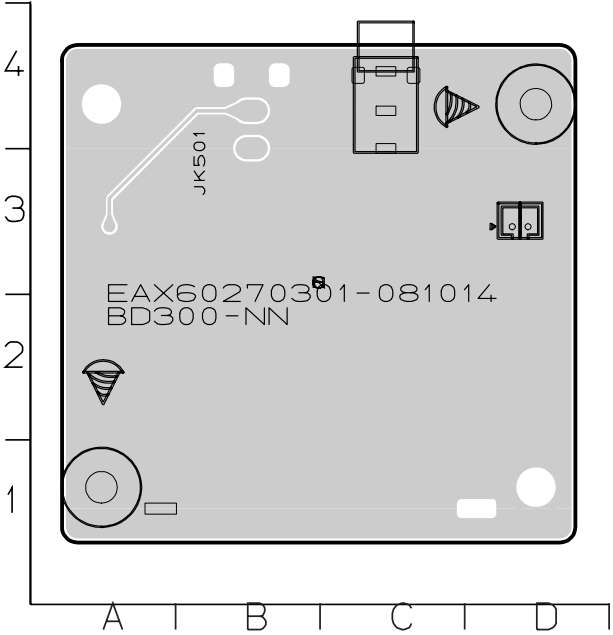

(BOTTOM VIEW)

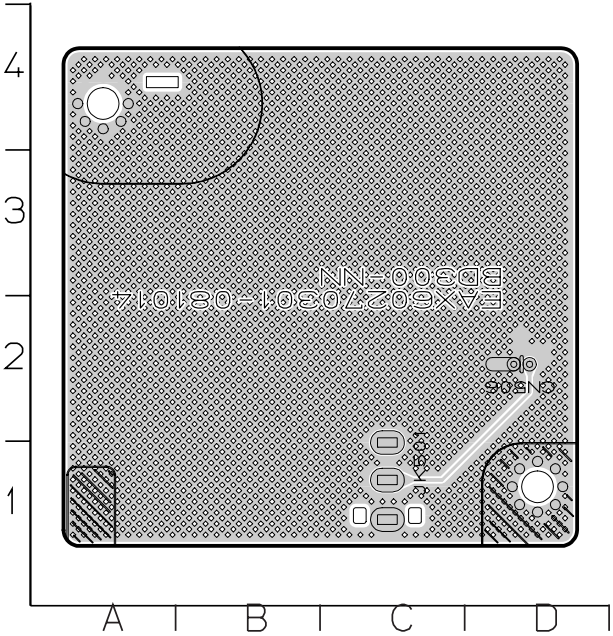

MEMO

Handwriting practice area with horizontal lines.

SECTION 4


HL-04P LOADER PART

CONTENTS

ELECTRICAL TROUBLESHOOTING GUIDE	4-2
1. RESET OR POWER CHECK	4-2
2. SYSTEM CHECK.....	4-3
3. TRAY OPERATING IS ABNORMAL	4-4
4. SLED OPERATING IS ABNORMAL	4-5
5. SPINDLE OPERATING IS ABNORMAL	4-6
6. FOCUS ACTUATOR OPERATING IS ABNORMAL	4-7
7. LASER OPERATING IS ABNORMAL.....	4-8
HOW TO USE THE BAR-CODE SCAN TOOL	4-9
1. BAR-CODE SCAN SYSTEM CONFIGURATION	4-9
2. PICK-UP BAR-CODE SCAN TOOL CONFIGURATION.....	4-9
3. RUNNING BAR-CODE SCAN TOOL	4-10
4. BAR-CODE SCAN PROCEDURE	4-11
INTERNAL STRUCTURE OF THE PICK-UP	4-12
1. OPTICAL LAYOUT.....	4-12
2. SF-BD411 PDIC COMPOSITION	4-13
3. PICK-UP CONNECTOR TERMINAL PIN ASSIGNMENTS	4-14
MAJOR IC INTERNAL BLOCK DIAGRAM AND PIN DESCRIPTION	4-15
1. LIC501 (MT8575) : BLU-RAY SIGNAL PROCESSOR SINGLE CHIP	4-15
2. LIC301 (R2A30232SP) : SPINDLE MOTOR AND 6CH ACTUATOR DRIVER	4-20
CIRCUIT DIAGRAM	4-23
CIRCUIT VOLTAGE CHART	4-25
PRINTED CIRCUIT BOARD DIAGRAMS	4-27


ELECTRICAL TROUBLESHOOTING GUIDE

1. RESET OR POWER CHECK

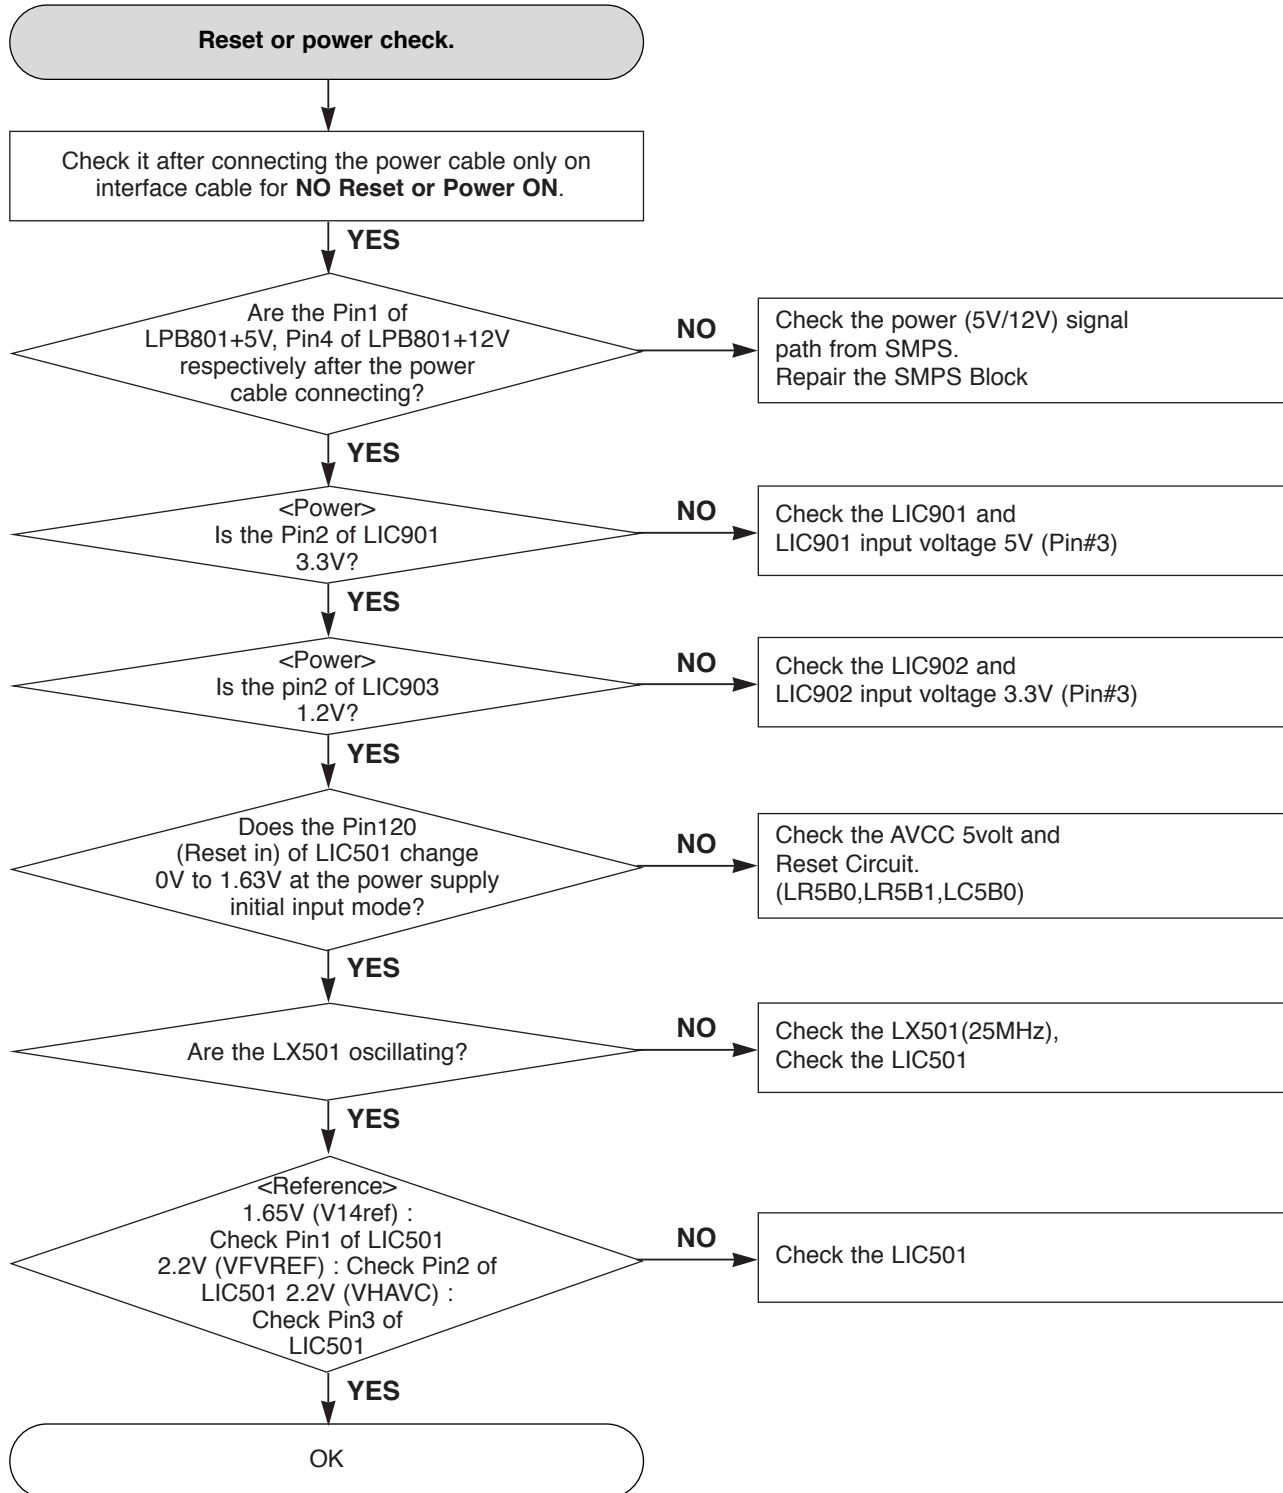


ELECTRICAL TROUBLESHOOTING GUIDE

2. SYSTEM CHECK

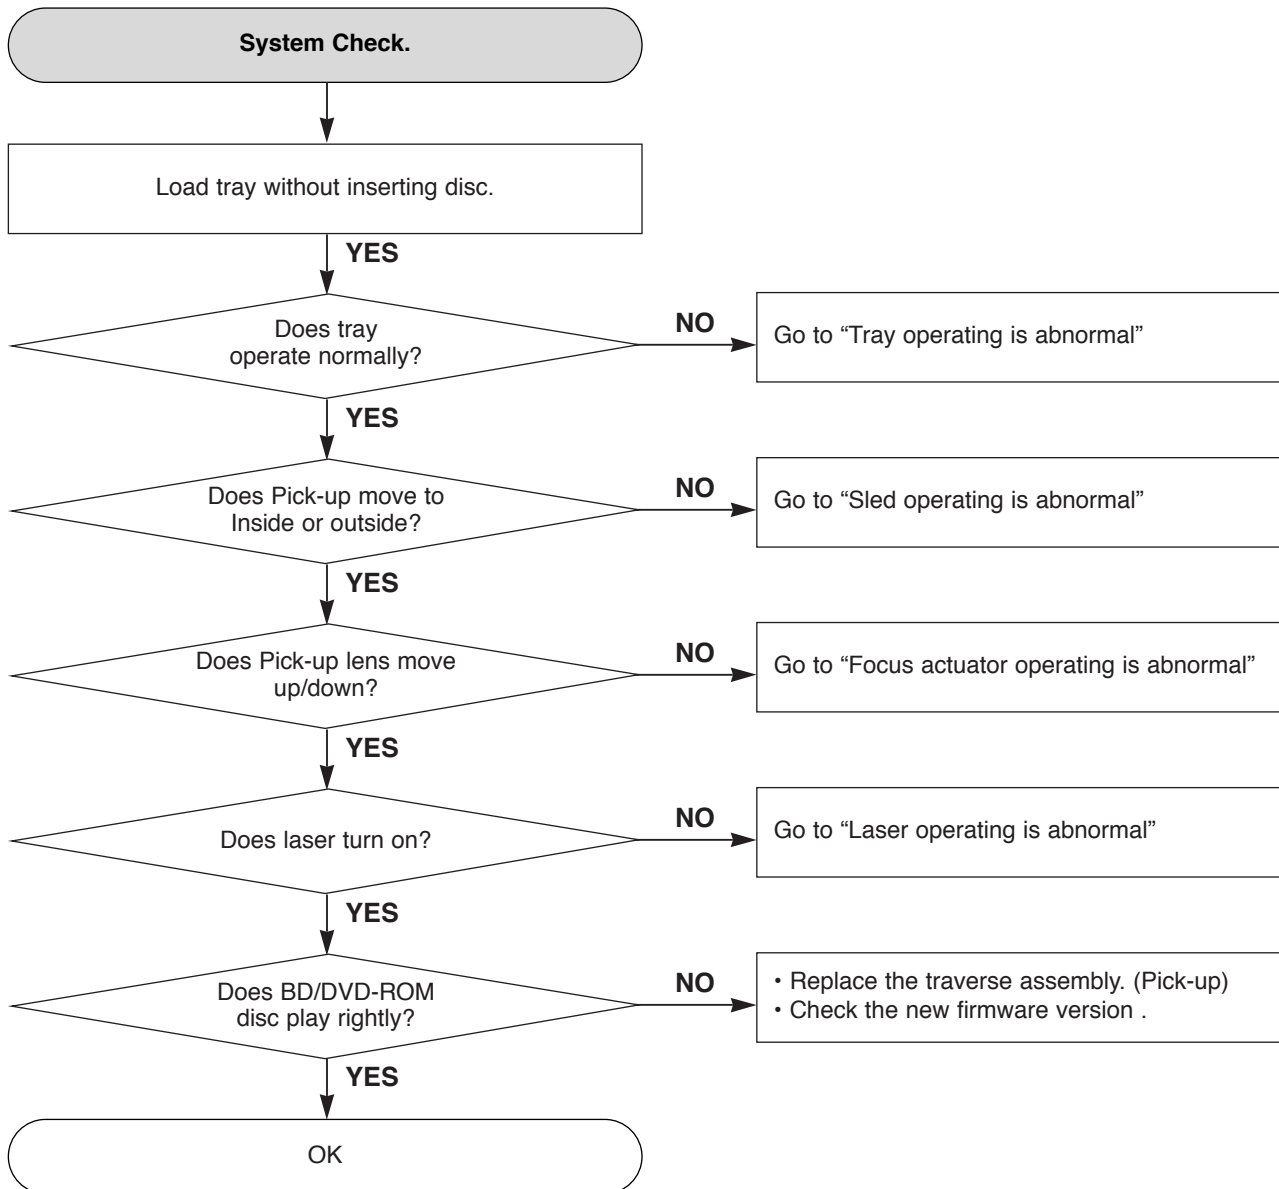


ELECTRICAL TROUBLESHOOTING GUIDE

3. TRAY OPERATING IS ABNORMAL

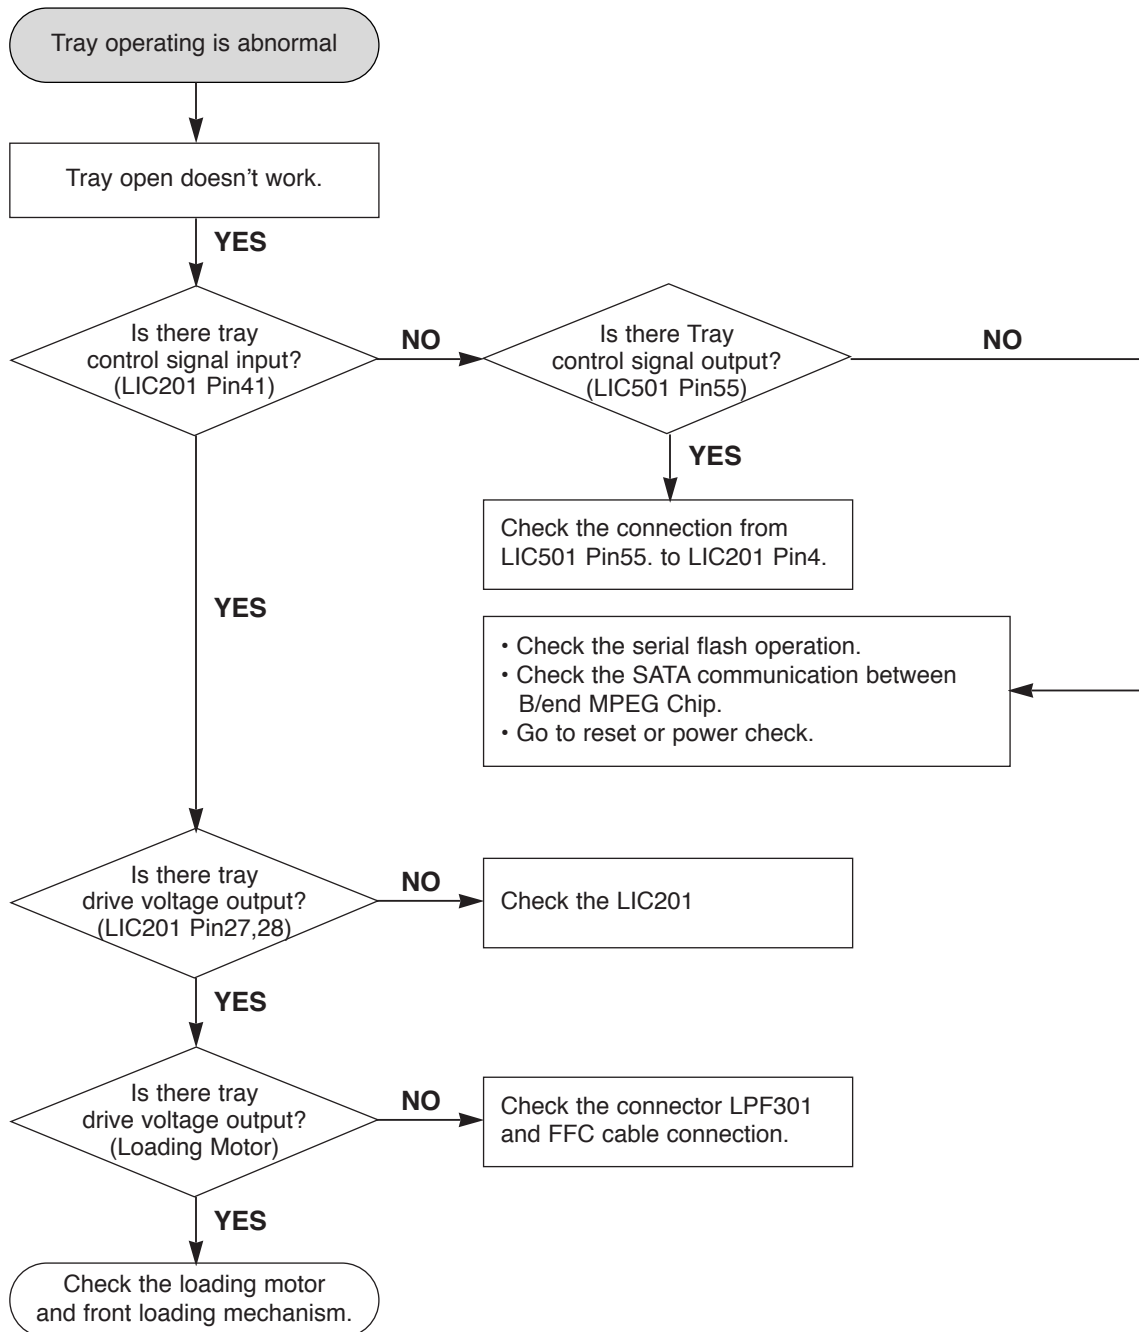


ELECTRICAL TROUBLESHOOTING GUIDE

4. SLED OPERATING IS ABNORMAL

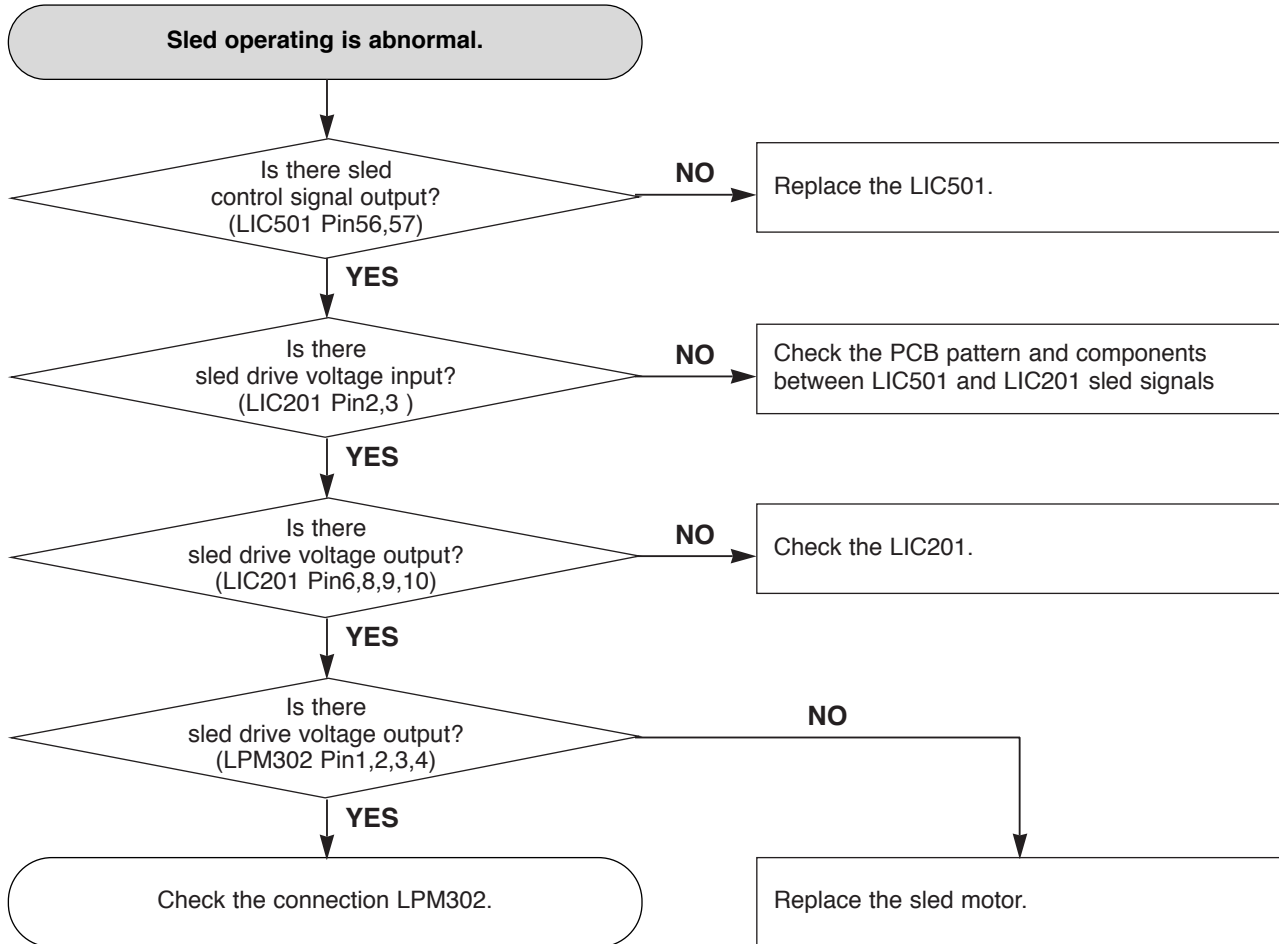


ELECTRICAL TROUBLESHOOTING GUIDE

5. SPINDLE OPERATING IS ABNORMAL

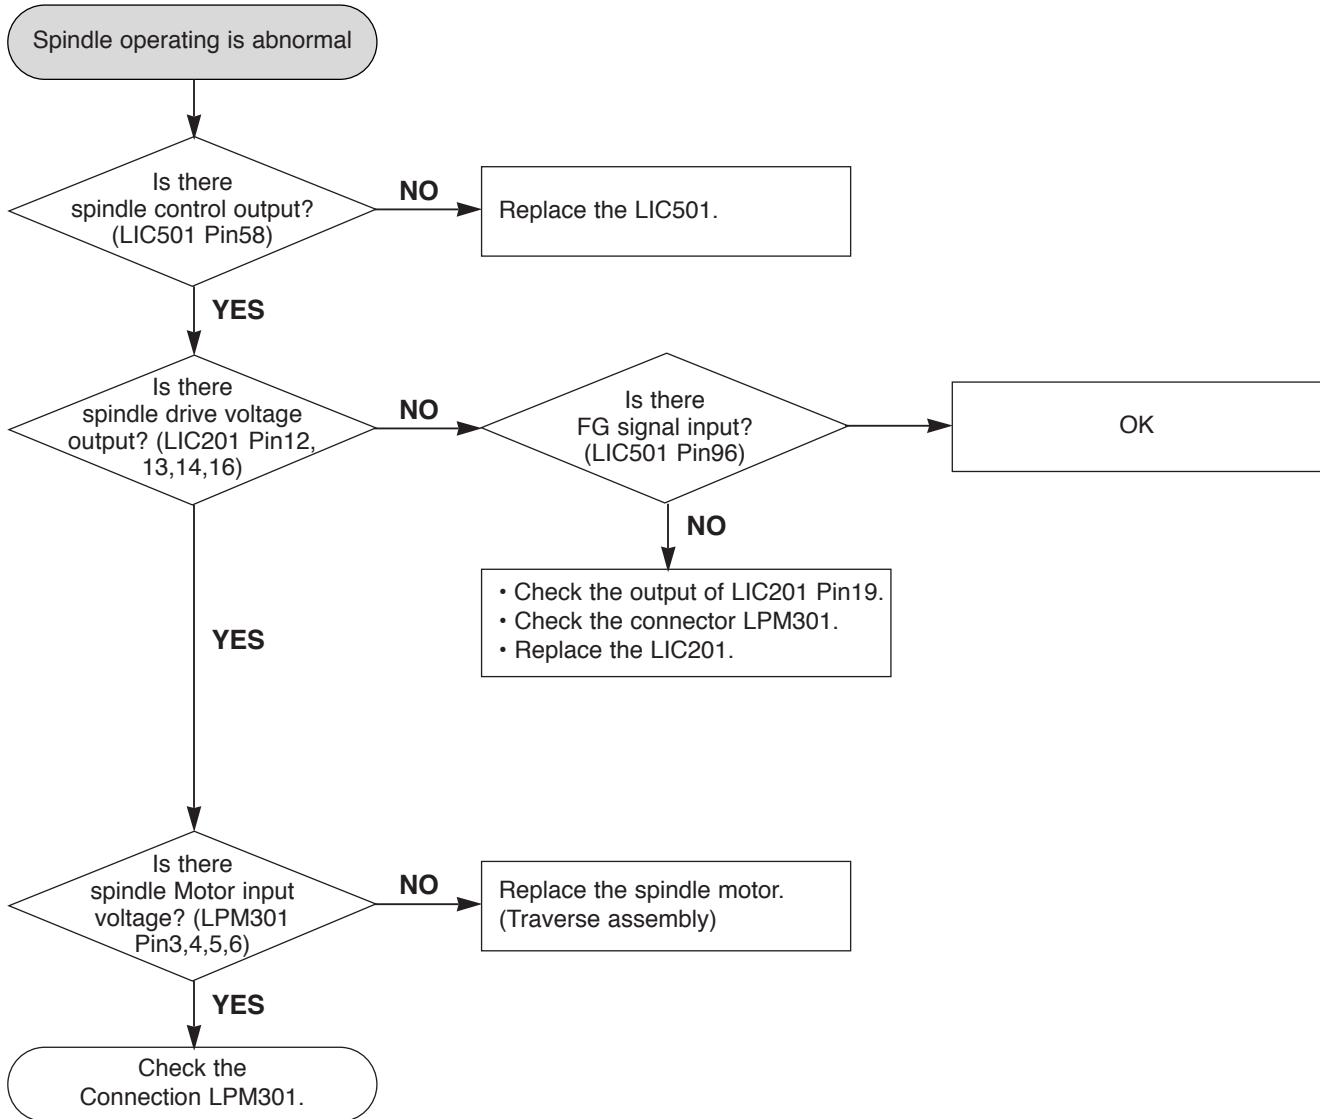


ELECTRICAL TROUBLESHOOTING GUIDE

6. FOCUS ACTUATOR OPERATING IS ABNORMAL

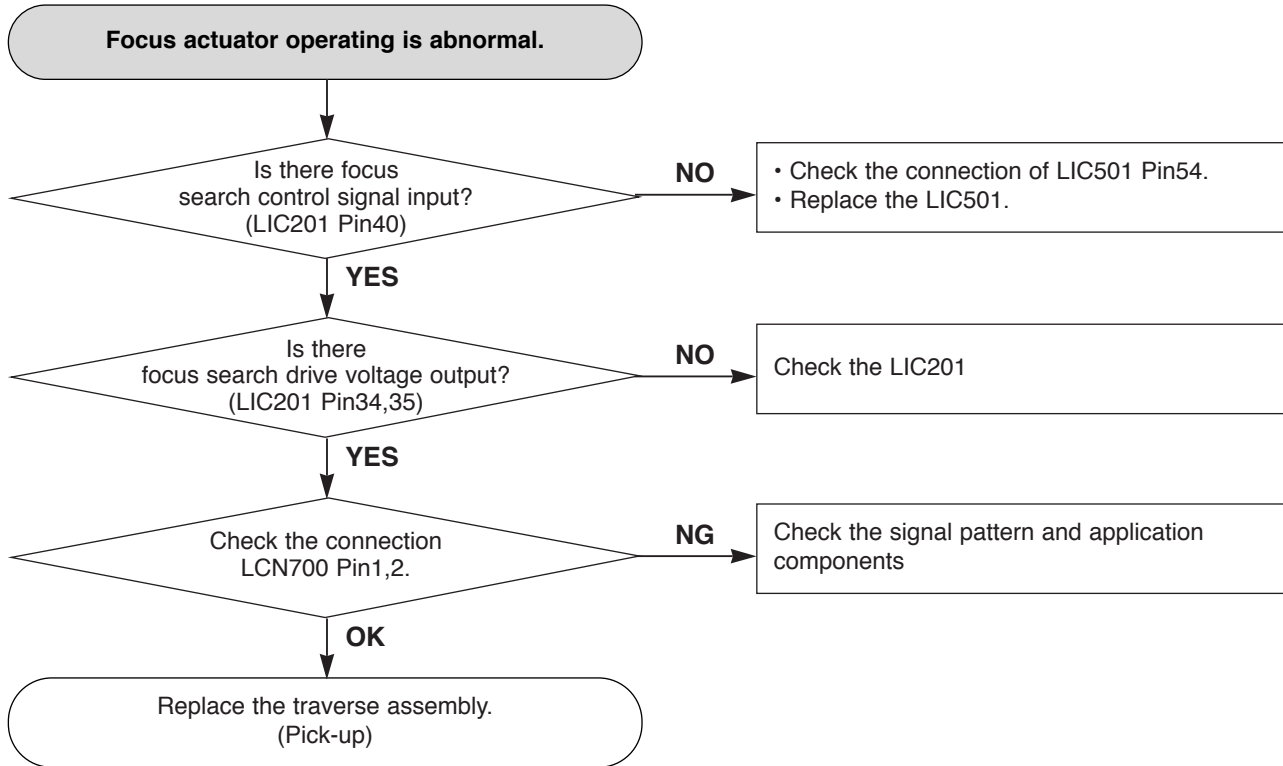

ELECTRICAL TROUBLESHOOTING GUIDE

7. LASER OPERATING IS ABNORMAL

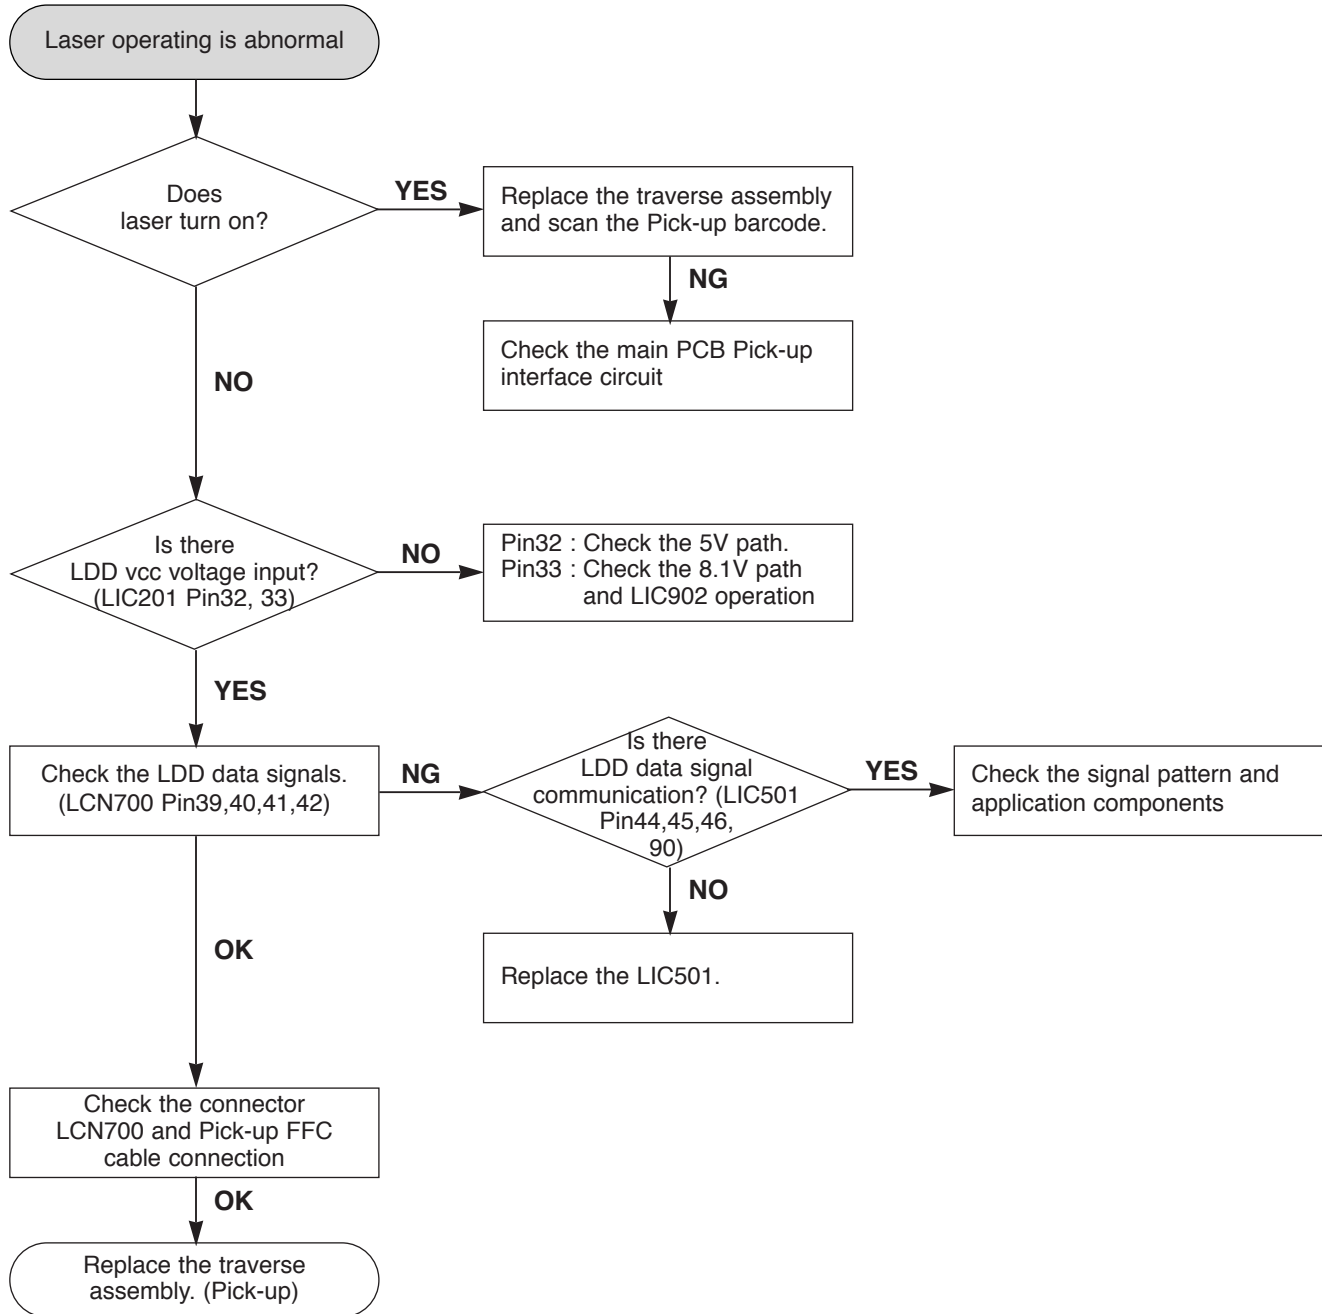

HOW TO USE THE BAR-CODE SCAN TOOL


Bar-Code Scan Tool inserts the Bar-code values (including Skew, Read power, HFM, LD power and so on) to the Flash-ROM in the Loader Main Board. So, In case of changing the Traverse assembly or Loader main board, It is required to pick-up Bar-code scan procedure.

1. BAR-CODE SCAN SYSTEM CONFIGURATION

In order to insert Bar-code values (including Skew, Read power, HFM, LD power and so on), the following equipments are needed.

Compulsory equipments

- 1) Personal Computer
- 2) Bar-Code Scan Tool (Loader Tester)
- 3) 2D Bar-Code Scanner
- 4) Target Loader Ass'y
- 5) USB to SATA Connector
- 6) Power Supply

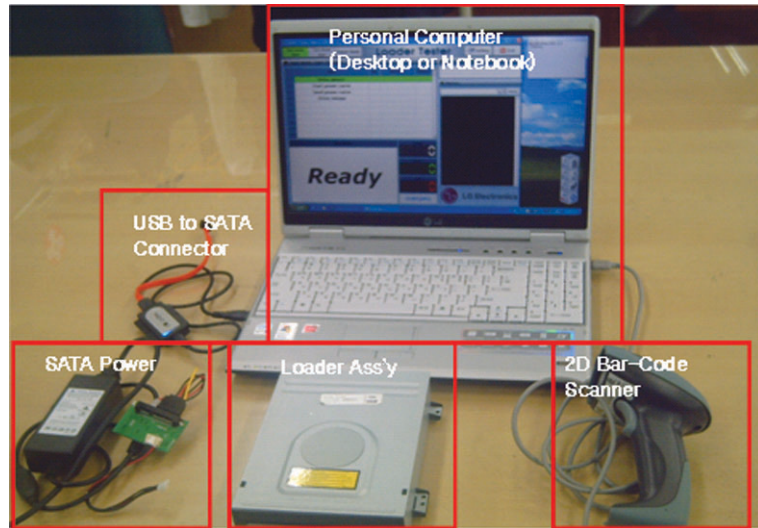

2. PICK-UP BAR-CODE SCAN TOOL CONFIGURATION.

The Loader Tester is the Application Tool for FA Test and also Bar-Code Scan.

The Bar-Code Scan is the one of functions in the Loader Tester.

Therefore the Bar-Code scan Users should check “only Bar Code” up in the Loader Tester.

Loader Tester Program consists of total 2 files.

Setup.exe

Setup.exe.txt

Setup.exe file is the installation file.

After you install the Loader Tester program, the **LoaderTest.exe** file will appear in the wallpaper(background) of Windows.

LoaderTest.exe is a program execution file.

Setup.exe.txt is the install Report file.

3. RUNNING BAR-CODE SCAN TOOL


When running “LoaderTester.exe” file in the wallpaper(background) of Windows, the following screen appears.

Before you start to click “Start” button, remind these.

1) “Test Mode Start” should be selected.

2) Check “only Bar Code”

3) Click “START”

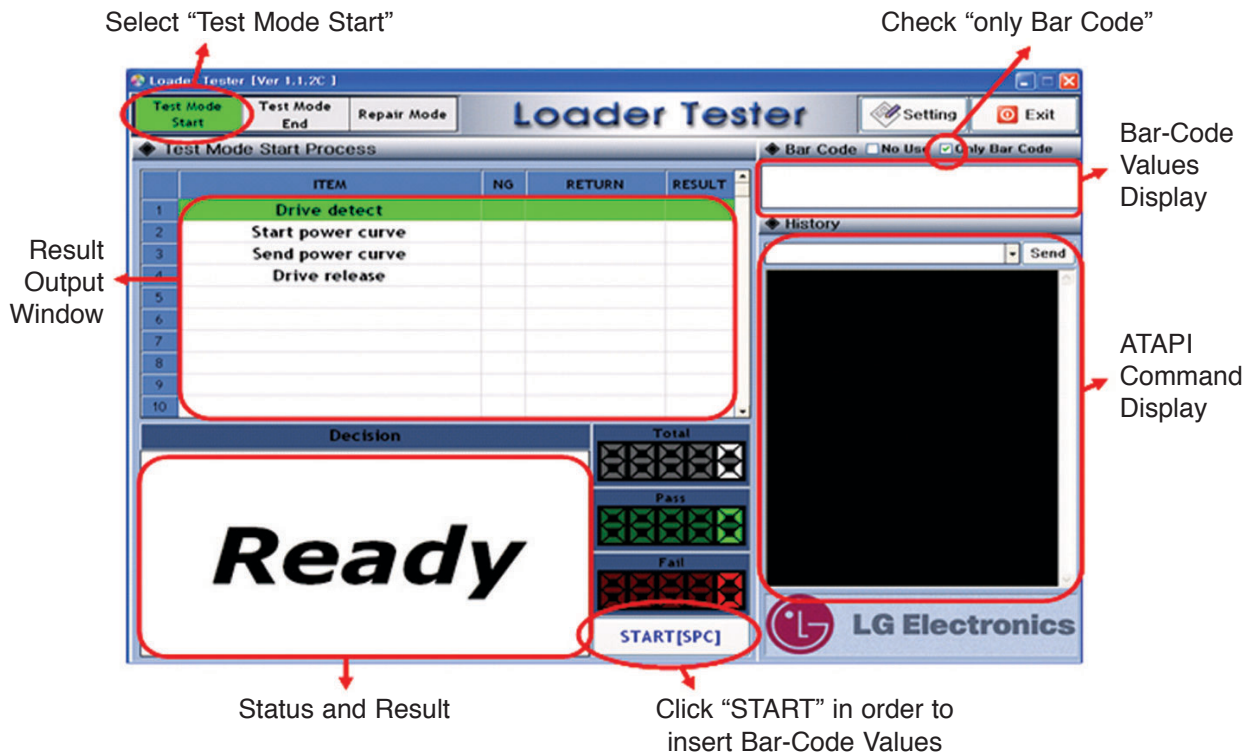


4. BAR-CODE SCAN PROCEDURE

- 1) Untie the screw of Loader.
- 2) Connect the “USB to SATA connector” and “SATA Power” to the Loader.
- 3) Connect the “USB to SATA connector” to the PC.
- 4) Connect the “Bar-Code Scanner” to the PC.
- 5) Run the Bar-Code Scan Tool (Loader Tester).
- 6) Click “Start” Button 


(Tip. If Drive can not be detected, please plug off and on again the “USB to SATA connector” to the PC and wait for 15 seconds.)

- 7) Sled will move the innermost.
- 8) Focus on the target of Bar-Code and Pull the trigger of Bar-Code scanner until Bar-Code can be scanned to the Bar-Code scan Tool (Loader Tester)
- 9) If Bar-Code scan succeeds, “OK” will display in the result windows.
However, Bar-Code scan fails, “NG” will display in the result windows.
In case you got “NG” result, please check procedure up from 2 to 8. then try it again.

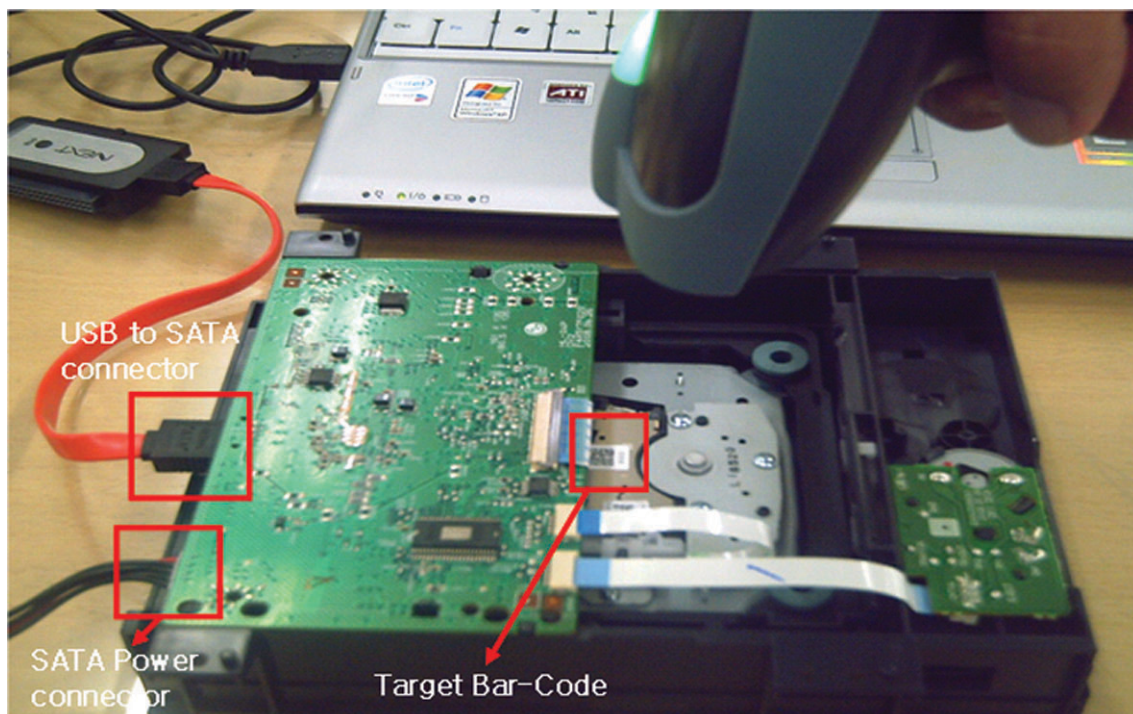


INTERNAL STRUCTURE OF THE PICK-UP

1. OPTICAL LAYOUT

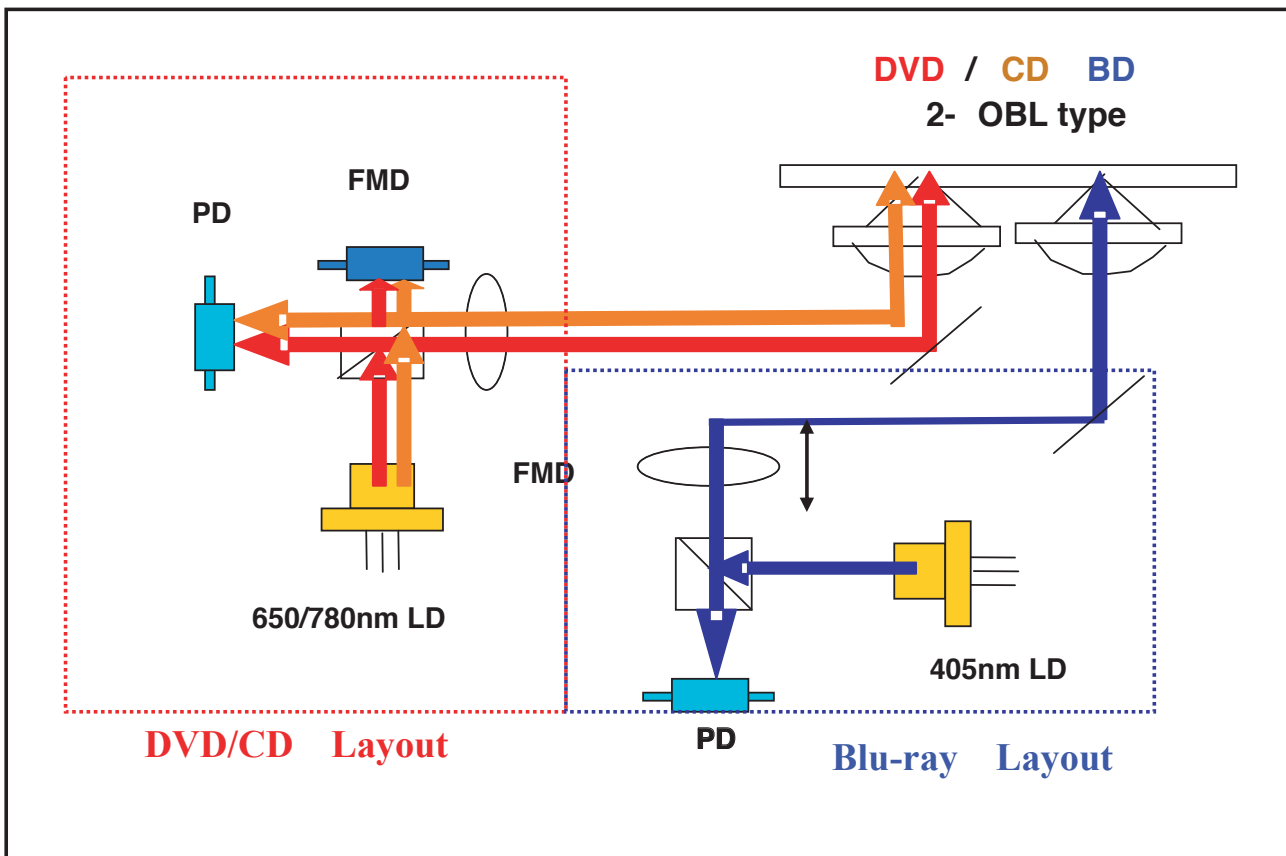

2. SF-BD411 PDIC COMPOSITION

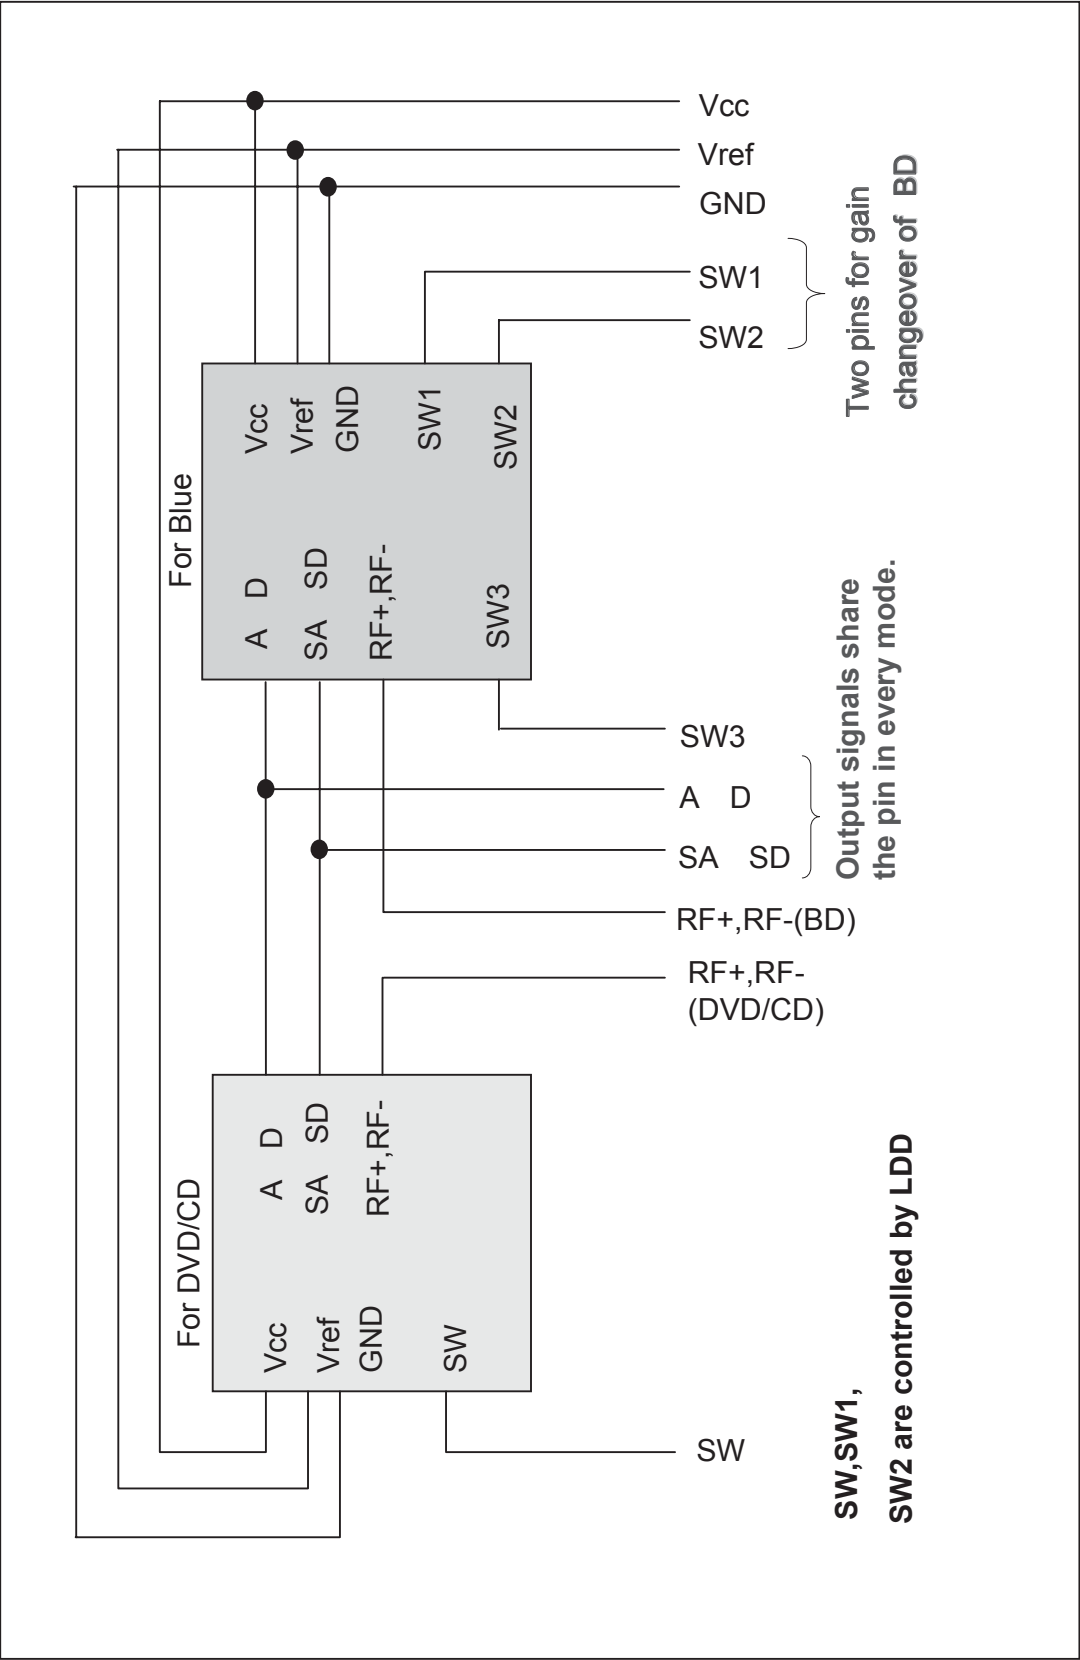


3. PICK-UP CONNECTOR TERMINAL PIN ASSIGNMENTS

PIN NO	PIN NAME		DESCRIPTION
1	FCS2+	ACT	FOCUSING2+
2	FCS2-		FOCUSING2-
3	TRK+		TRACKING+
4	FCS1+		FOCUSING1+
5	TRK-		TRACKING-
6	FCS1-		FOCUSING1-
7	A-	CL SHIFTER	Stepping Motor A- Terminal
8	B-		Stepping Motor B- Terminal
9	A+		Stepping Motor A+ Terminal
10	B+		Stepping Motor B+ Terminal
11	VCC_CLSFT		Sensor Power Supply 3.3V
12	SIG_PO		Output signal from the reference position sensor of BD COL SHIFTER
13	GND_CLSFT		GND for CL SHIFTER
14	A	PDIC	A output
15	B		B output
16	C		C output
17	D		D output
18	SA		SA output
19	SB		SB output
20	SC		SC output
21	SD		SD output
22	SW3		PDIC BD Sub Output Switch Port
23	RF+(BD)		RF(+) output for BD
24	RF-(BD)		RF(-) output for BD
25	RF+(DVDCD)		RF(+) output for DVDCD
26	RF-(DVDCD)		RF(-) output for DVDCD
27	VREF_PD		PDIC Reference Supply Terminal 2.1V
28	VCC_+5PD		PDIC Power Terminal 5V
29	NC		NC
30	GND_PD		GND for PDIC
31	NC(SW)		2-Wavelength PDIC DVD/CD/Sleep Changeover SW
32	VCC_LDR	LDD	LDD 5V-Power Supply for LD,DVD and CD
33	VCC_LDB		LDD 9V-Power Supply for LD,BD
34	NC		NC
35	GND1_LDD		LDD GND Terminal
36	GND1_LDD		LDD GND Terminal
37	VMON		Monitor Voltage Output Terminal
38	VCC		LDD 5V-Power Supply for Logic
39	LDEN		LD Enable Input Terminal
40	SEN		Serial Resistor Chip Select Input Terminal
41	SCLK		Serial Clock Input Terminal
42	SDIO		Serial Resistor Data Input/Output Terminal
43	XRST		Serial Resistor RESET Input Terminal
44	GND1_LDD		LDD GND Terminal
45	TEMP		Thermistor


MAJOR IC INTERNAL BLOCK DIAGRAM AND PIN DESCRIPTION

1. LIC501 (MT8575) : Blu-ray SIGNAL PROCESSOR SINGLE CHIP

1-1. Pin Assignment

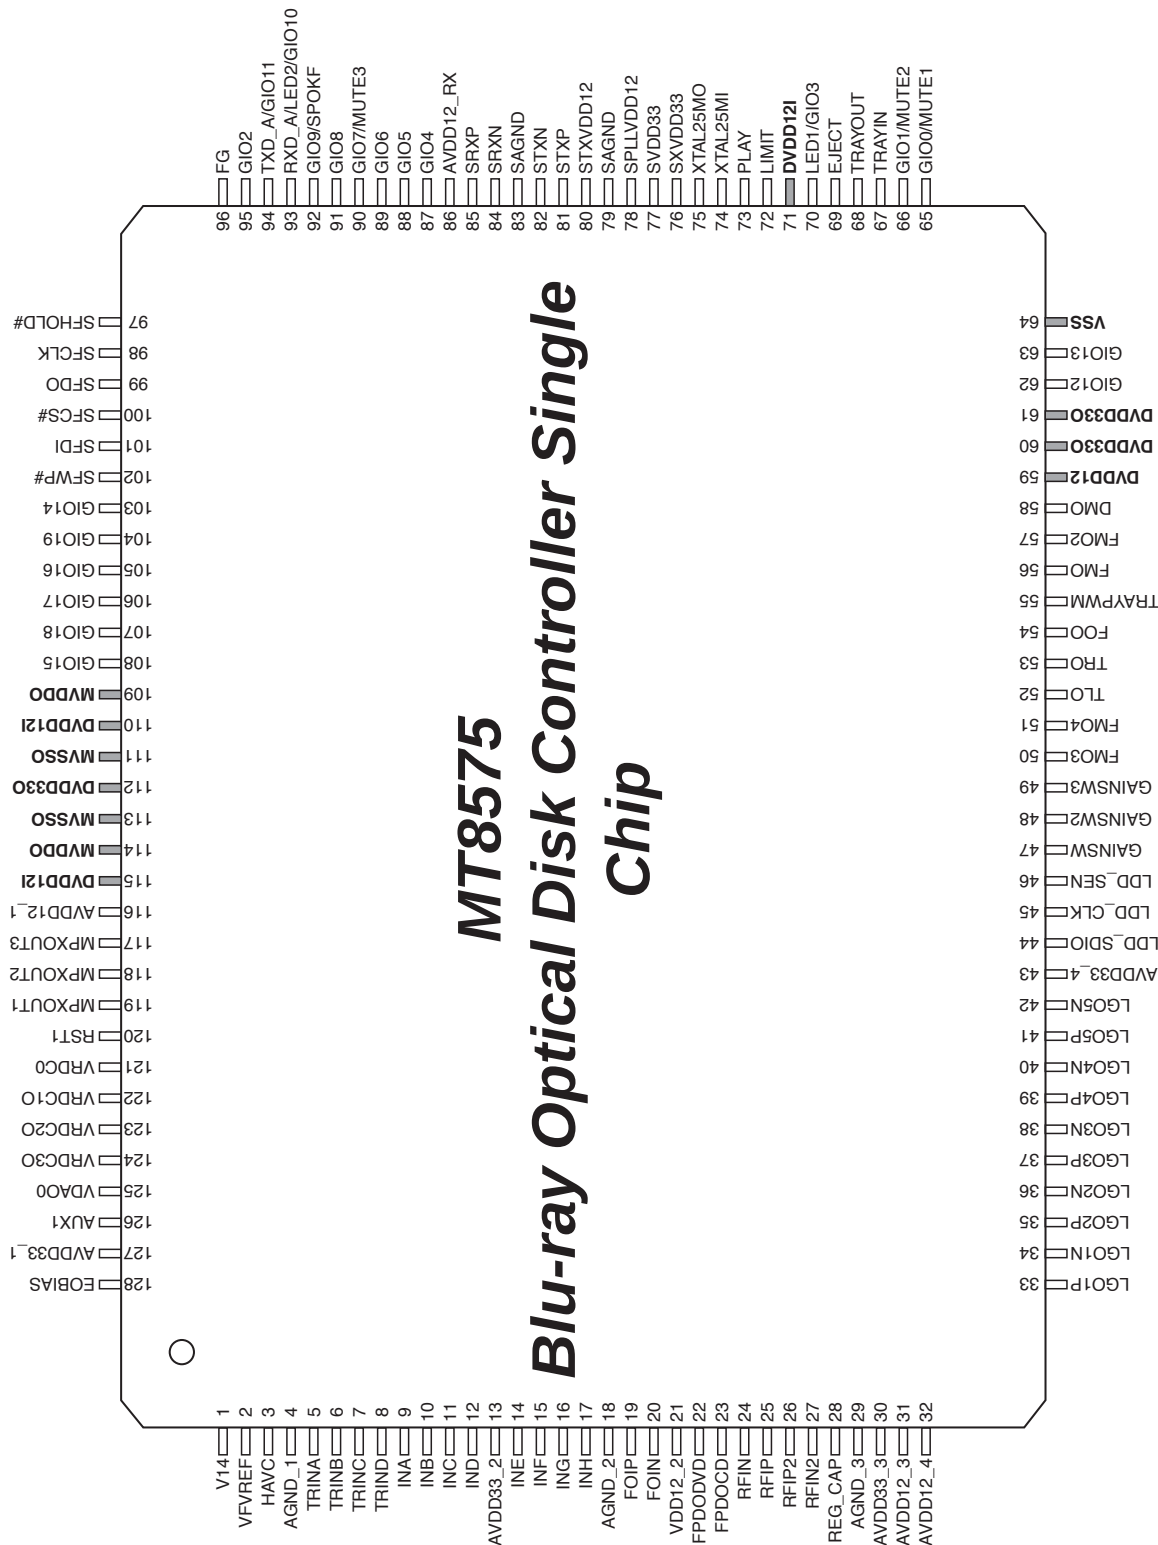

1-2. Block Diagram

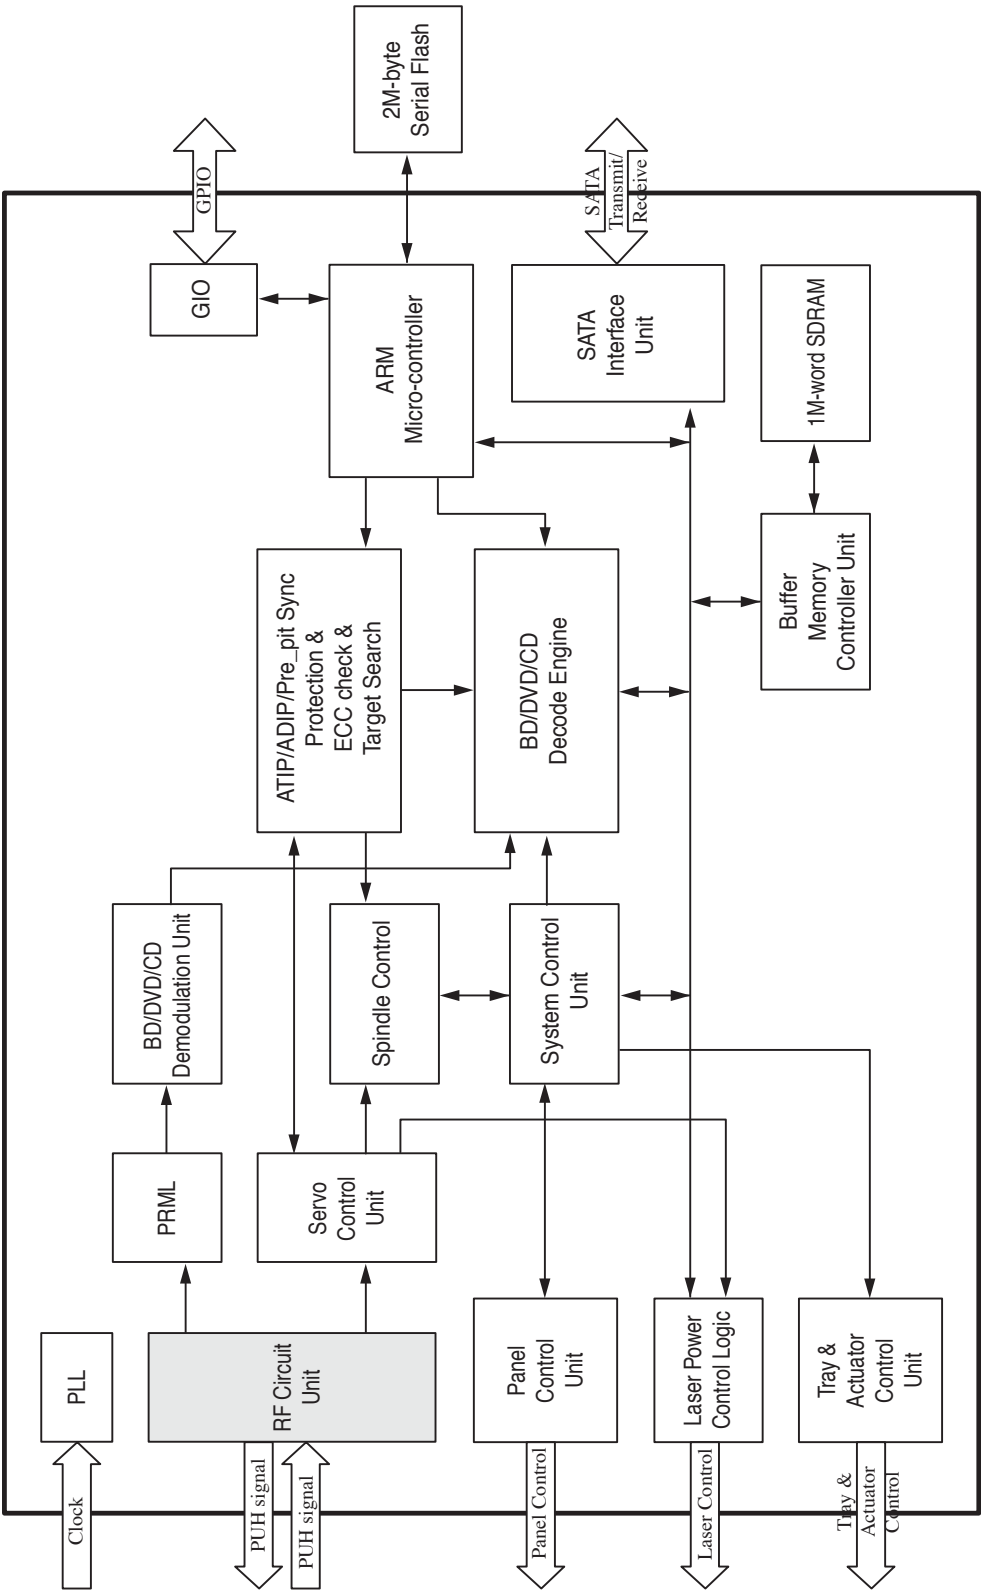


1-3. Pin Function

PIN NO	PIN NAME	TYPE	DESCRIPTION
RF Signals & S/H Control Pulses (21)			
5	TRINA	Analog Input	Input of Tracking Signal (A)
6	TRINB	Analog Input	Input of Tracking Signal (B)
7	TRINC	Analog Input	Input of Tracking Signal (C)
8	TRIND	Analog Input	Input of Tracking Signal (D)
9	INA	Analog Input	Input of Main Beam Signal (A)
10	INB	Analog Input	Input of Main Beam Signal (B)
11	INC	Analog Input	Input of Main Beam Signal (C)
12	IND	Analog Input	Input of Main Beam Signal (D)
14	INE	Analog Input	Input of Sub-Beam Signal (E)
15	INF	Analog Input	Input of Sub-Beam Signal (F)
16	ING	Analog Input	Input of Sub-Beam Signal (G)
17	INH	Analog Input	Input of Sub-Beam Signal (H)
19	FOIP/RRFSUM	Analog Input	Input of Focusing Signal (Positive) Alternative Function : Read RF sum
20	FOIN	Analog Input	Input of Focusing Signal (Negative)
24	RFIN	Analog Input	Differential Input of AC Coupling RF SUM Signal (Negative)
25	RFIP	Analog Input	Differential Input of AC Coupling RF SUM Signal (Positive)
26	RFIP2	Analog Input	Differential Input of AC Coupling RF SUM Signal (Positive)
27	RFIN2	Analog Input	Differential Input of AC Coupling RF SUM Signal (Negative)
47	GAINSW	Analog Output	Read gain switch. 1
48	GAINSW2	Analog Output	Read gain switch 2.
49	GAINSW3	Analog Output	Read gain switch 3.
EQRF Circuits (1)			
128	EQBIAS	Analog Output	External Bias Connection for Circuits in EQRF Block & SATA Block. The external resistor need meet the precision for SATA requirement. (23.1K, 1%)
APC (Auto Power Control for Laser) (6)			
22	FPDODVD	Analog Input	Laser Power Monitor Input for DVD APC / Differential positive input
23	FPDOCD	Analog Input	Laser Power Monitor Input for CD APC / Differential negative input
121	VRDCO	Analog Output	Output Voltage of Laser Diode Control in Read APC
122	VRDC1O	Analog Output	Output Voltage 1 of Laser Diode Control in Read APC
123	VRDC2O	Analog Output	Output Voltage 2 of Laser Diode Control in Read APC
124	VRDC3O	Analog Output	Output Voltage 3 of Laser Diode Control in Read APC
Reference Voltages & DACs (5)			
1	V14	Analog Output	Output of Voltage Reference (1.4V)
2	VFVREF	Analog Output	Output of Voltage Reference
3	HAVC	Analog Output	Decoupling Pin for Reference Voltage of Main and Sub Beams
28	REG_CAP	Analog Output	Output of Voltage Reference
125	VDAC0	Analog Output	Output of General DAC
MPXOUT (Multiplexer Circuit for Various Signals) and Testing Interface (4)			
117	MPXOUT3/MON/GO	Analog Output	Multiplexer Output 3 for Signal Monitoring. Alternate function : Internal monitored signal output / General output.
118	MPXOUT2/MON/GO	Analog Output	Multiplexer Output 2 for Signal Monitoring. Alternate function : Internal monitored signal output / General output.
119	MPXOUT1/MON/GO	Analog Output	Multiplexer Output 1 for Signal Monitoring. Alternate function : Internal monitored signal output / General output
126	AUX1	Analog I/O	Auxiliary Input.Alternative Function : Signal Monitoring
RF Power Supplies (11)			
4	AGND_1	Analog Ground	Ground Pin
13	AVDD33_2	Analog Power(3.3V)	Power Pin
18	AGND_2	Analog Ground	Ground Pin
21	AVDD12_2	Analog Power(1.2V)	Power Pin
29	AGND_3	Analog Ground	Ground Pin
30	AVDD33_3	Analog Power(3.3V)	Power Pin

PIN NO	PIN NAME	TYPE	DESCRIPTION
31	AVDD12_3	Analog Power(1.2V)	Power Pin
32	AVDD12_4	Analog Power(1.2V)	Power Pin
43	AVDD33_4	Analog Power(3.3V)	Power Pin
116	AVDD12_1	Analog Power(1.2V)	Power Pin
127	AVDD33_1	Analog Power(3.3V)	Power Pin
Low-Speed General Output (10)			
33	LGO1P	Analog Output	Lowspeed General Output 1P
34	LGO1N	Analog Output	Lowspeed General Output 1N
35	LGO2P	Analog Output	Lowspeed General Output 2P
36	LGO2N	Analog Output	Lowspeed General Output 2N
37	LGO3P	Analog Output	Lowspeed General Output 3P
38	LGO3N	Analog Output	Lowspeed General Output 3N
39	LGO4P	Analog Output	Lowspeed General Output 4P
40	LGO4N	Analog Output	Lowspeed General Output 4N
41	LGO5P	Analog Output	Lowspeed General Output 5P Alternative Function : Read gain switch 4
42	LGO5N	Analog Output	Lowspeed General Output 5N Alternative Function : Read gain switch 5
MOTOR (10)			
50	FMO3	Analog I/O	Feed motor 3 control. PWM output. Alternative Function : Auxiliary servo input
51	FMO4	Analog I/O	Feed motor 4 control. PWM output. Alternative Function : Auxiliary servo input
52	TLO	Analog Output	Tilt servo output
53	TRO	Analog Output	Tracking servo output. PDM output of tracking servo compensator.
54	FOO	Analog Output	Focus servo output. PDM output of focus servo compensator.
55	TRAYPWM	Analog Output	Tray PWM control output. Controlled by μ P.
56	FMO	Analog Output	Feed motor control. PWM output.
57	FMO2	Analog Output	Feed motor 2 control. PWM output.
58	DMO	Analog Output	Disk motor control output. PWM output.
96	FG	"3.3V LVTTL I/O, 5V-tolerance, 1 2mA PDR, 75K pull-up."	Motor Hall sensor input. The pin is spike-free at power-on stage.
SATA Interface (10)			
77	SVDD33	Analog Power(3.3V)	Power supply for SATA 3.3V circuitry
78	SPLLVD12	Analog Power(1.2V)	Power supply for SATA circuitry
79	SAGND	Analog Ground	Ground Pin for SATA circuitry
80	STXVDD12	Analog Power(1.2V)	Power supply for SATA transmit circuitry
81	STXP	Analog Output	Differential serial output transmit signal of SATA
82	STXN	Analog Output	Differential serial output transmit signal of SATA
83	SAGND	Analog Ground	Ground Pin for SATA circuitry
84	SRXN	Analog Input	Differential input receive signal of SATA
85	SRXP	Analog Input	Differential input receive signal of SATA
86	AVDD12_RX	Analog Power(1.2V)	Power supply for SATA circuitry
Crystal Interface (3)			
74	XTAL25MI	Input	X'tal input. The working frequency is 25MHz.
75	XTAL25MO	Output	X'tal output.
76	SXVDD33	Analog Power(3.3V)	Power supply for X'ftal circuitry
Serial Flash (6)			
97	SFHOLD#	3.3V LVTTL I/O, 5V-tolerance, 4,8,12,16mA PDR, 75K pull-up	Hold in normal serial flash mode but in quad I/O, as serial data input/data output
98	SFCLK		serial flash's clock output
99	SFDO		serial data output
100	SFCS#		chip select output
101	SFDI		serial data input
102	SFWP#		Write protection in normal serial flash mode but in quad I/O, as serial data input/data output

PIN NO	PIN NAME	TYPE	DESCRIPTION
LDD serial interface (3)			
44	LDD_SDIO	3.3V LVTTTL I/O, 5V-tolerance, 2,4,6,8mA PDR, 75K pull-up	LDD serial interface data. The pin is spike-free at power-on stage.
45	LDD_CLK		LDD serial interface CLK. The pin is spike-free at power-on stage.
46	LDD_SEN		LDD serial interface command enable. The pin is spike-free at power-on stage.
Panel & sense key (5)			
67	TRAYIN	3.3V LVTTTL I/O, 5V-tolerance, 12mA,75K pull-up	Tray_is_in Input, A Logical Low Indicates the Tray is IN. Feedback Flag is from Tray Connector. The pin is spike-free at power-on stage.
68	TRAYOUT		Tray_is_out Input. A Logical Low Indicates the Tray is OUT. Feedback Flag is from Tray Connector. The pin is spike-free at power-on stage.
69	EJECT		Eject/stop key input, active low. The pin is spike-free at power-on stage.
72	LIMIT		Sledge Inner Limit Input, Active Low. The pin is spike-free at power-on stage. Alternate function : 1. Internal monitored signal output
73	PLAY		Play/pause key input, active low. The pin is spike-free at power-on stage.
MISC & GIO function (21)			
120	RSTI	Analog Input	Internal power on reset detection input.
62	GIO12	3.3V LVTTTL I/O, 5V-tolerance, 4,8,12,16mA PDR, 75K pull-up	General IO
63	GIO13		General IO.
65	GIO0/MUTE1		General IO
66	GIO1/MUTE2	3.3V LVTTTL I/O, 5V-tolerance, 4,8,12,16mA PDR, 75K pull-down	General IO
70	LED1/GIO3		LED Control Output. Initial 0 Output. The pin is spike-free at power-on stage. Alternate function : General I/O
87	GIO4	3.3V LVTTTL I/O	General IO.
88	GIO5	3.3V LVTTTL I/O	General IO.
89	GIO6	3.3V LVTTTL I/O	General IO.
90	GIO7/MUTE3	3.3V LVTTTL I/O, 5V-tolerance, 4,8,12,16mA PDR, 75K pull-down	General IO. The pin is spike-free at power-on stage.
91	GIO8		General IO.
92	GIO9/SPOKE		General IO.The pin is spike-free at power-on stage. The pin is not allowed to pull-up in circuit layout. Alternate function : Spoke input.
93	RXD_A/ LED2/GIO10		PC RS232 serial receive data. The pin is spike-free at power-on stage. Alternate function : 1. LED Control Output. Initial “0” Output 2. General IO.
94	TXD_A/GIO11		PC RS232 serial transmit data. The pin is spike-free at power-on stage. Alternate function : 1. LED Control Output. Initial “0” Output 2. General IO.
95	GIO2		General IO
103	GIO14		General IO
104	GIO19		General IO
105	GIO16		General IO
106	GIO17		General IO
107	GIO18		General IO
108	GIO15		General IO The pin is not allowed to pull-up in circuit layout.
Digital Power Pins (11)			
60,61,112	DVDD33O	Digital Power (3.3V)	VDD for digital pad.
109,114	MVDDQ	DRAM Power (3.3V)	VDD for pad output buffer of DRAM die.
111,113	MVSSQ	DRAM Ground	VSS for pad output buffer of DRAM die.
59,71, 110,115	DVDD12I	Digital Power (1.2V)	VDD for internal circuit.
64	VSS	Digital Ground	VSS for digital pad

2-1. Block Diagram

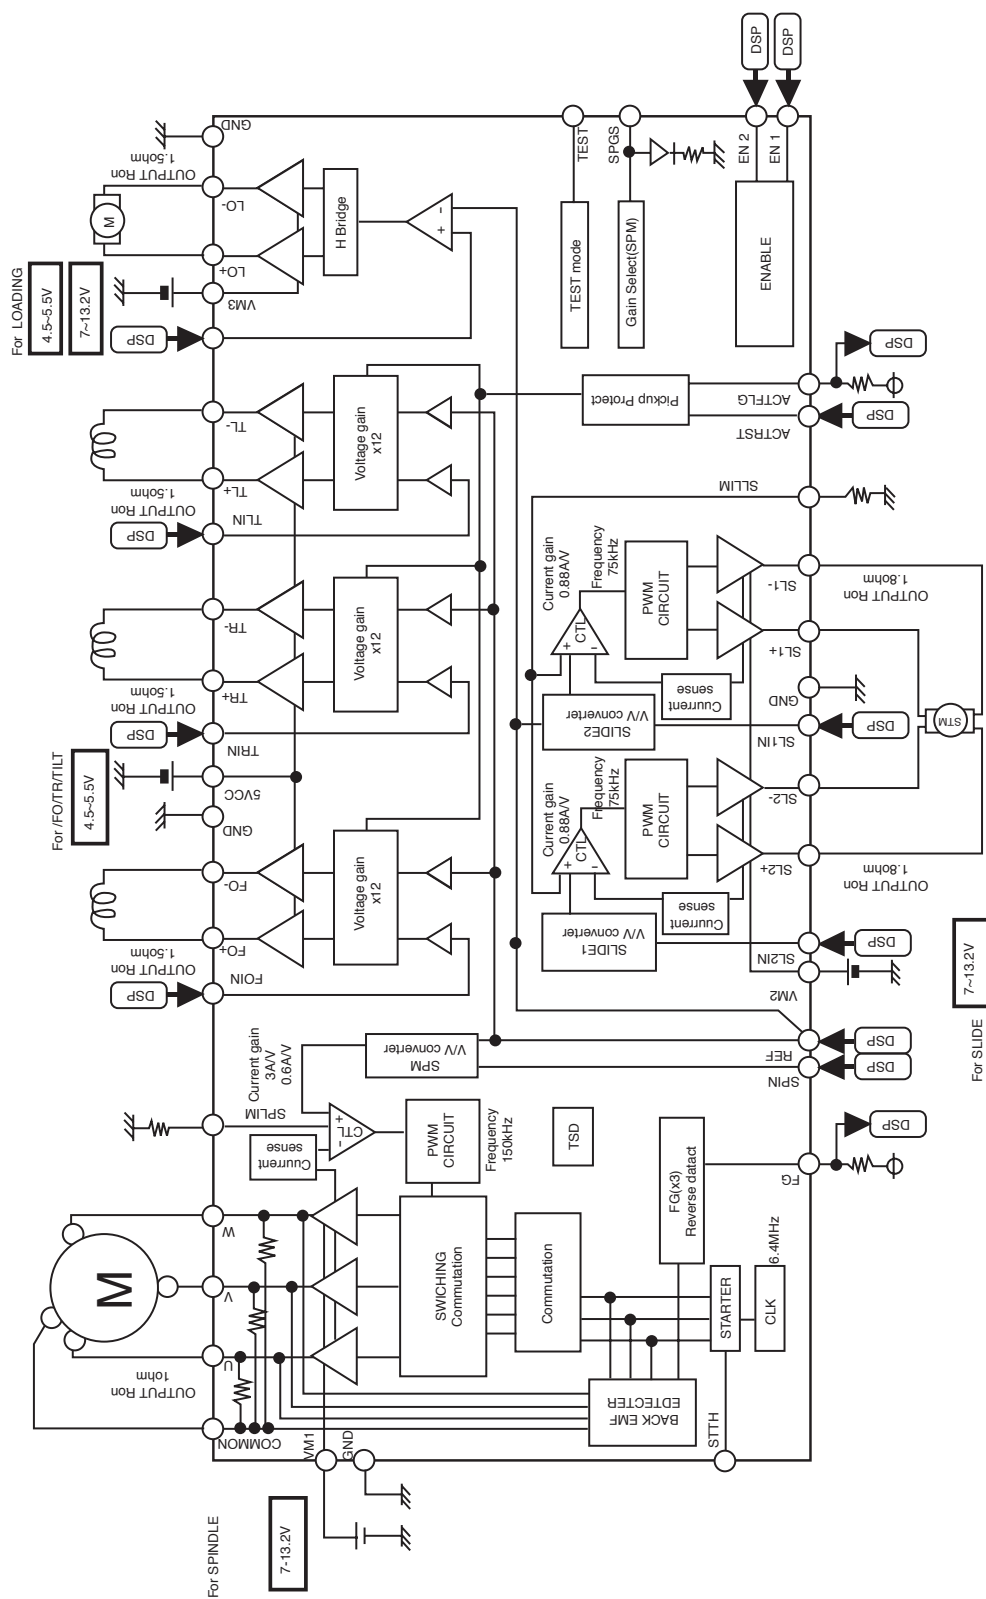

2-2. Pin Function

PIN NO	SYMBOL	FUNCTION
1	SPIN	Spindle control voltage input
2	SL1IN	Slide control voltage input 1
3	SL2IN	Slide control voltage input ÇQ
4	SPLIM	Input terminal for spindle current limit
5	VM2	Motor Power Supply ÇQ(for Slide)
6	SL2+	Slide non-inverted output 2
7	GND	GND
8	SL2-	Slide inverted output 2
9	SL1+	Slide non-inverted output 1
10	SL1-	Slide inverted output 1
11	GND	GND
12	U	Motor drive output U
13	V	Motor drive output V
14	W	Motor drive output W
15	ACTFLG	Pickup protect flag output
16	COMMON	Motor common
17	TEST	Test
18	SLLIM	Input terminal for slide current limit
19	FG	Frequency generator output
20	EN1	Input terminal for enable 1
21	EN2	Input terminal for enable 2
22	VM1	Motor Power Supply 1(for Spindle)
23	SPGS	Input terminal for gain select SPM
24	STTH	Reference voltage for spindle start up
25	ACTRST	Pickup protect Reset
26	VM3	Power Supply3(for Loading)
27	LO+	Loading non-inverted output
28	LO-	Loading inverted output
29	GND	GND
30	TO-	Tracking inverted output
31	TO+	Tracking non-inverted output
32	5VCC	5V Power Supply (for FS,TS,TL)
33	GND	GND
34	FO+	Focus non-inverted output
35	FO-	Focus inverted output
36	TL+	Tilt non-inverted output
37	TL-	Tilt inverted output
38	TLIN	Tilt control voltage input
39	TOIN	Tracking control voltage input
40	FOIN	Focus control voltage input
41	LOIN	Loading control input
42	REF	Reference voltage input

MEMO

CIRCUIT VOLTAGE CHART


PIN NO.	VOLTAGE
LIC100	
1	0.00
2	PULSE
3	3.30
4	0.00
5	0.00
6	0.00
7	3.30
8	3.30
LIC201	
1	1.41
2	1.41
3	1.41
4	0.00
5	12.19
6	PULSE
7	0.00
8	PULSE
9	PULSE
10	PULSE
11	0.00
12	5.80
13	5.80
14	5.80
15	0.90
16	3.29
17	0.00
18	0.00
19	3.59
20	0.00
21	0.00
22	12.19
23	0.00
24	0.00
25	5.06
26	12.19
27	1.07
28	1.07
29	0.00
30	1.23
31	1.23
32	5.06
33	0.00
34	1.25
35	1.25
36	0.98
37	0.98
38	1.41
39	1.41
40	1.41
41	1.41
42	1.41

PIN NO.	VOLTAGE
LIC501	
1	1.41
2	1.01
3	2.10
4	0.00
5	1.05
6	1.15
7	0.92
8	1.70
9	2.49
10	2.48
11	2.40
12	2.50
13	3.28
14	2.30
15	2.40
16	2.32
17	2.38
18	0.00
19	1.19
20	0.00
21	0.00
22	0.00
23	0.00
24	0.00
25	0.00
26	0.00
27	0.00
28	0.00
29	0.00
30	3.28
31	1.19
32	1.16
33	0.00
34	0.00
35	0.00
36	0.00
37	0.00
38	0.00
39	0.00
40	0.00
41	0.00
42	0.00
43	0.00
44	3.29
45	0.00
46	0.00
47	0.00
48	0.00
49	0.00
50	1.39
51	1.32

PIN NO.	VOLTAGE
52	1.34
53	1.34
54	1.35
55	2.57
56	1.33
57	1.33
58	1.33
59	1.19
60	3.28
61	3.28
62	0.00
63	0.00
64	0.00
65	0.00
66	0.00
67	3.30
68	3.30
69	3.30
70	0.00
71	1.19
72	3.30
73	3.30
74	3.22
75	3.24
76	3.24
77	1.17
78	0.00
79	1.19
80	1.20
81	1.19
82	1.19
83	0.00
84	1.19
85	1.19
86	1.19
87	0.00
88	0.00
89	0.00
90	0.00
91	0.00
92	0.00
93	3.30
94	3.30
95	0.00
96	3.29
97	3.30
98	0.00
99	0.00
100	0.00
101	PULSE
102	3.30
103	3.30

PIN NO.	VOLTAGE
104	3.30
105	3.30
106	3.30
107	3.30
108	3.30
109	3.30
110	1.19
111	0.00
112	3.30
113	0.00
114	3.30
115	1.19
116	1.19
117	1.12
118	1.12
119	3.29
120	1.67
121	0.00
122	0.00
123	0.00
124	1.67
125	1.67
126	1.16
127	3.30
128	1.39
LIC601	
1	5.07
2	1.19
3	0.00
4	4.50
5	1.19
6	0.00
7	PULSE
8	PULSE
9	PULSE
10	PULSE
LIC901	
1	0.00
2	3.30
3	5.05
LIC902	
1	6.93
2	8.18
3	12.19
LIC903	
1	0.00
2	1.20
3	3.30

(TOP VIEW)

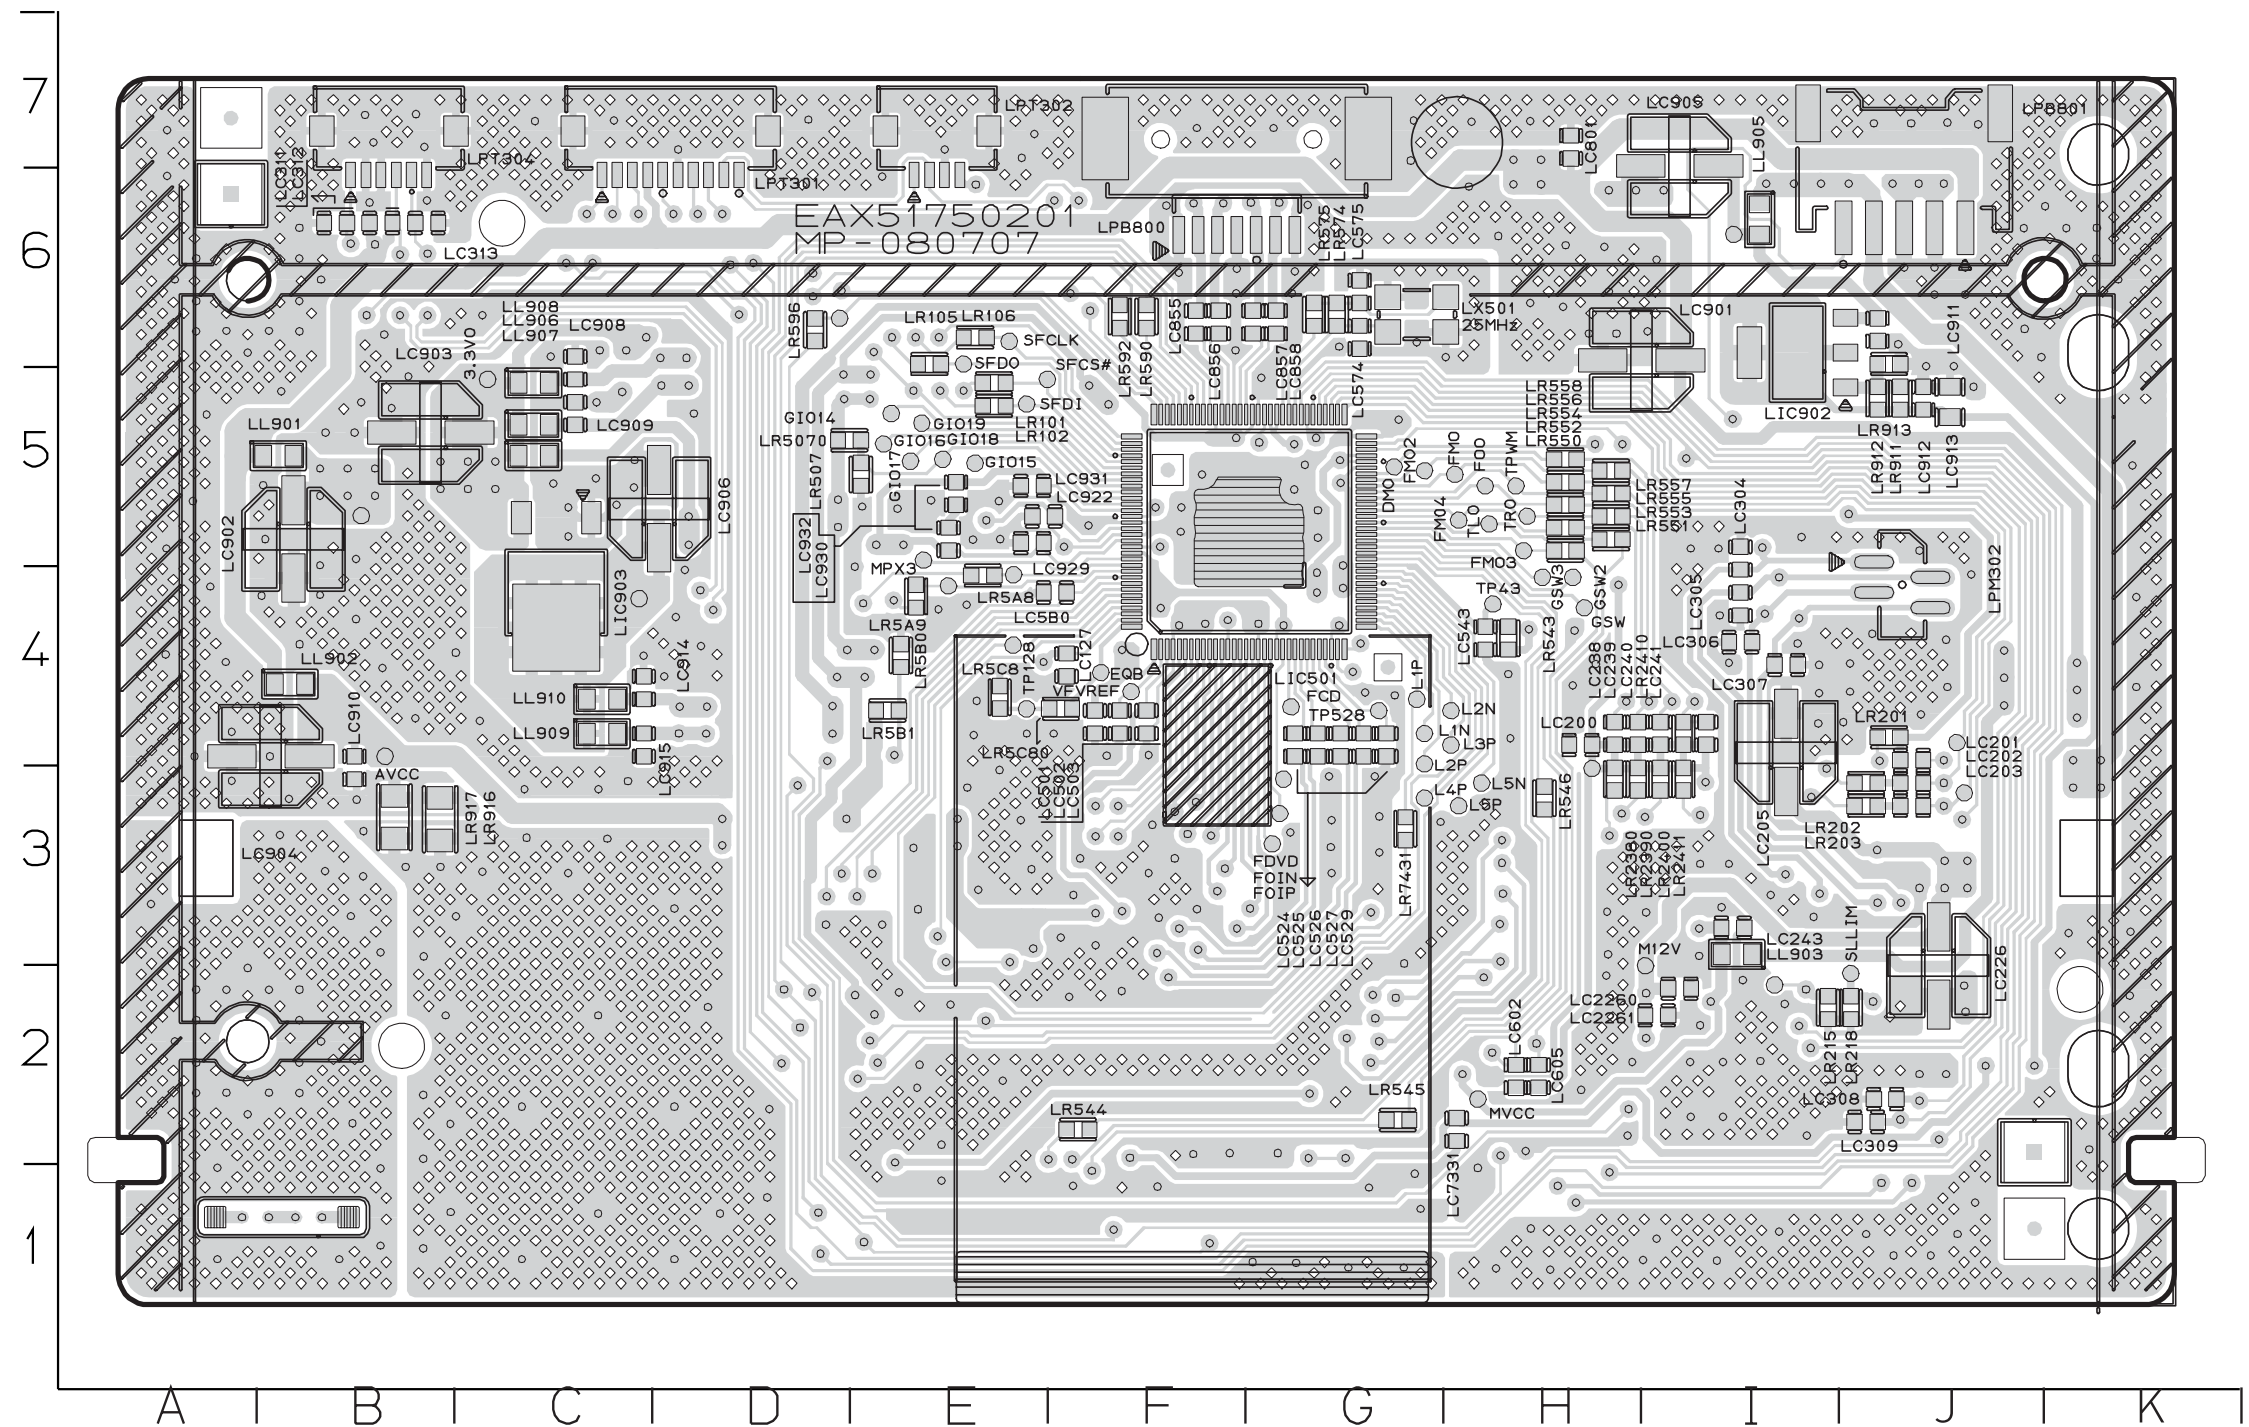

(BOTTOM VIEW)

