

Service Manual

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email:- enquiries@mauritron.co.uk

Nakamichi Cassette Deck 2



CONTENTS

1.	General	1
2.	Removal Procedures	3
2. 1.	Top Cover Ass'y	3
2. 2.	Cassette Case Cover Ass'y	3
2. 3.	Mechanism Ass'y	3
2. 4.	Front Panel Ass'y	4
2. 5.	Main P.C.B. Ass'y	4
2. 6.	Power Supply & Logic P.C.B. Ass'y	4
2. 7.	Control Switch & Display P.C.B. Ass'y	5
3.	Test Tapes and Gauges	5
4.	Mechanical Adjustments	5
4. 1.	Tape Guide Height Check for Record/Playback Head and Erase Head	5
4. 2.	Head Base Stroke Check	5
4. 3.	Record/Playback Head Azimuth Alignment and Height Check	6
4. 4.	Pressure Adjustment of Pressure Roller	6
4. 5.	Tape Travelling Check	6
4. 6.	Eject Damper Adjustment	6
4. 7.	Reel Motor Speed Adjustment in Play Mode	6
4. 8.	Tape Speed Adjustment	6
4. 9.	Lubrication	7
5.	Parts Location for Electrical Adjustment	8
6.	Electrical Adjustments	11
7.	Mechanism Ass'y and Parts List	11
7. 1.	Synthesis	12
7. 2.	Front Panel Ass'y (A01)	12
7. 3.	Front Chassis Ass'y (A02)	13
7. 4.	Chassis Ass'y (A03)	14
7. 5.	Mechanism Ass'y (A04)	15
8.	Mounting Diagrams and Parts List	15
8. 1.	Main P.C.B. Ass'y	17
8. 2.	Power Supply & Logic P.C.B. Ass'y	18
8. 3.	Timer Switch P.C.B. Ass'y	18
8. 4.	Headphone P.C.B. Ass'y	19
8. 5.	Pin Jack P.C.B. Ass'y	19
8. 6.	Shut-off P.C.B. Ass'y	19
8. 7.	Control Switch & Display P.C.B. Ass'y	20
9.	Schematic Diagrams	20
9. 1.	IC Block Diagrams	23
9. 2.	Schematic Diagrams	25
10.	Wiring Diagram	26
11.	Block Diagrams	26
11. 1.	Amplifier Section	27
11. 2.	Mechanism Control Section	28
12.	Timing Charts and Eq. Amp. Frequency Response	28
12. 1.	Timing Charts	29
12. 2.	Eq. Amp. Frequency Response	30
13.	Specifications	

1. GENERAL

1.1. Production No.
Production No.: A327

1.2. Destinations
USA, CAN, EP, UK, AUS, SAU, OTR, JPN

Abbreviation	
USA — U.S.A.	AUS — Australia
CAN — Canada	SAU — Saudi Arabia
EP — Europe	OTR — Other
UK — United Kingdom	JPN — Japan


1.3. Parts Supply

(1) Unstocked Parts
Parts marked with “★” at the head of part No. are not stocked. So, it takes time to supply the parts after we receive your order.

(2) Unsupplied Parts
Parts without part Nos. (indicated as “—” in the parts list) are not supplied.

1.4. CAUTIONS/WARNINGS

(1) Product Safety Notice

Parts marked with the symbol  in the schematic diagram have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

It is recommended that the unit be operated from a suitable DC supply or batteries during initial check-out procedures.

(2) Leakage Current Check/Resistance Check

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5


milliamp, or if the resistance from chassis to either side of the power cord is less than 240 k ohms, the unit is defective.

WARNING — DO NOT return the unit to the customer until the problem is located and corrected.

1.5. Voltage Selector

Voltage selector is installed on the Rear Panel of the Nakamichi Cassette Deck 2 (Other & Saudi Arabia). The voltage selector can select either 110 V/127 V or 220 V/240 V at customer's disposal.

1.6. Package Ass'y and Accessory Ass'y

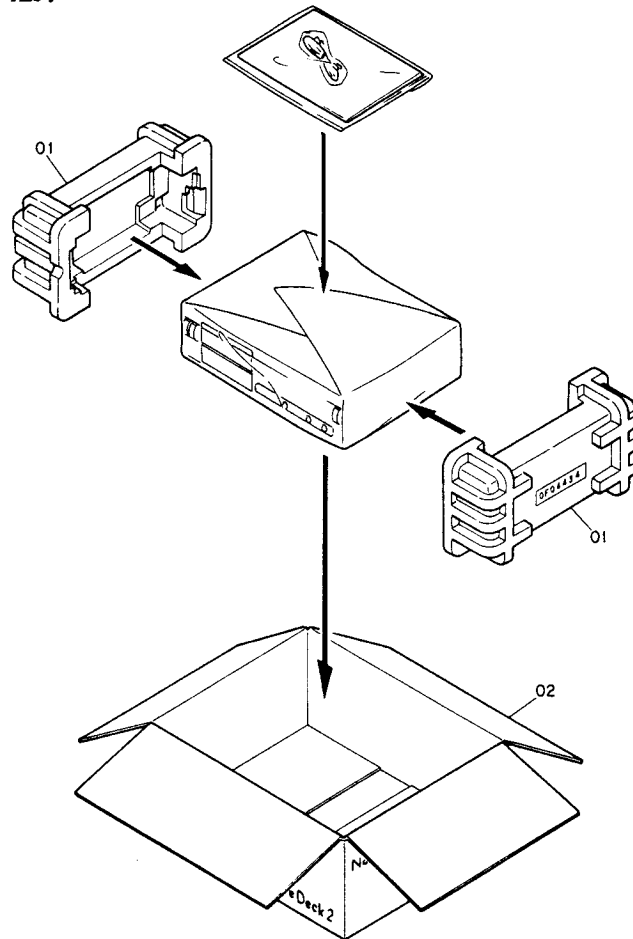

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

Fig. 1

Schematic Ref. No.	Part No.	Description	Qty	Schematic Ref. No.	Part No.	Description	Qty
01	0F04434A	Package Ass'y	2		DA04397A	Accessory Ass'y (USA, CAN)	1
	02	0F04456A			Packing Carton Box	1	DA04399A
					DA04406A	Accessory Ass'y (UK)	1
			DA04398A		Accessory Ass'y (AUS, SAU, OTR)	1	
			DA04396A		Accessory Ass'y (JPN)	1	
			OD06116A		Owner's Manual (English/French/Germany)	1	
			OD06115A		Owner's Manual (Japanese)	1	
			DA04388A		Pin-Pin Cord Ass'y	2	

2. REMOVAL PROCEDURES

2.1. Top Cover Ass'y

Refer to Fig. 2.1.

- (1) Loosen screws F01 (2 pcs.) and F02 (4 pcs.), and remove F03 (Top Cover Ass'y).

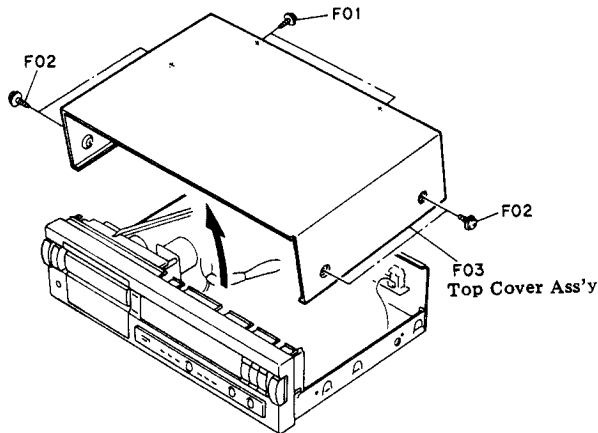


Fig. 2.1

2.2. Cassette Case Cover Ass'y

Refer to Fig. 2.2.

- (1) Press the Eject Knob Ass'y to open F01 (Cassette Case Cover Ass'y).
- (2) Pull F01 (Cassette Case Cover Ass'y) upward.

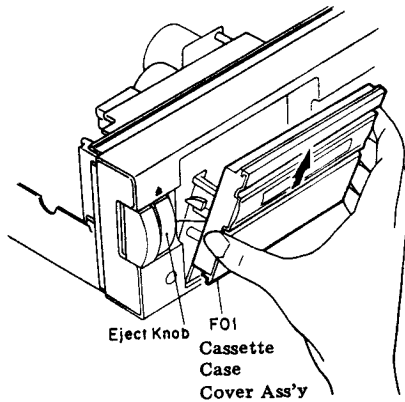


Fig. 2.2

2.3. Mechanism Ass'y

Refer to Fig. 2.3.

- (1) Remove the Top Cover Ass'y referring to item 2.1.
- (2) Remove the Cassette Case Cover Ass'y referring to item 2.2.
- (3) Loosen screws F01 (3 pcs.) and F02 (1 pce.).
- (4) Disconnect connectors (CN-4, CN-5, CN-6, CN-14 and CN-15).
- (5) Remove F03 (Mechanism Ass'y) in the direction of the arrow.

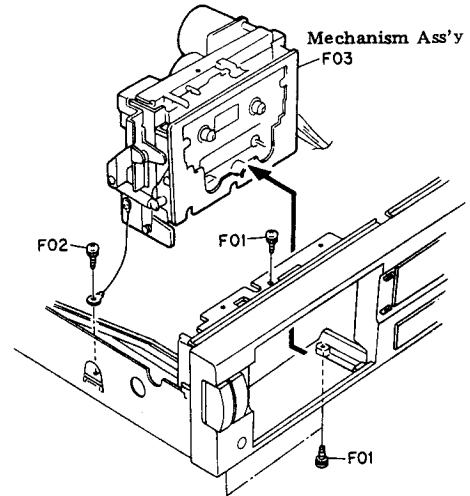


Fig. 2.3

2.4. Front Panel Ass'y

Refer to Figs. 2.4.1 and 2.4.2.

- (1) Remove the Top Cover Ass'y referring to item 2.1.
- (2) Loosen screws F03 (2 pcs.), F02 (1 pce.) and F03 (2 pcs.). See Fig. 2.4.1.
- (3) Press claws A (3 pcs.) downward to unhook them.
- (4) Disconnect a connector (CN-9) and remove F04 (Front Panel Ass'y). See Fig. 2.4.2.

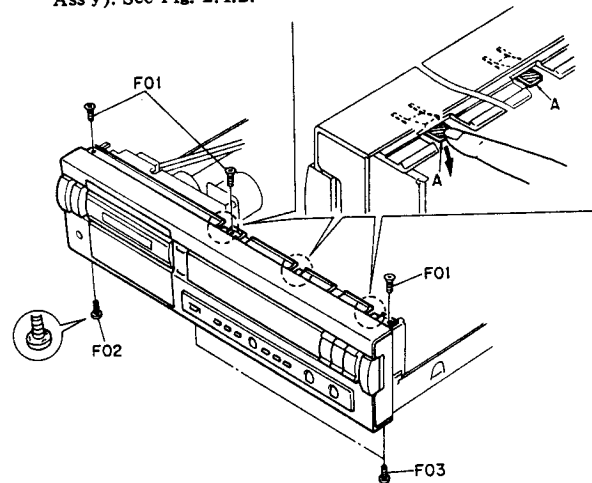


Fig. 2.4.1

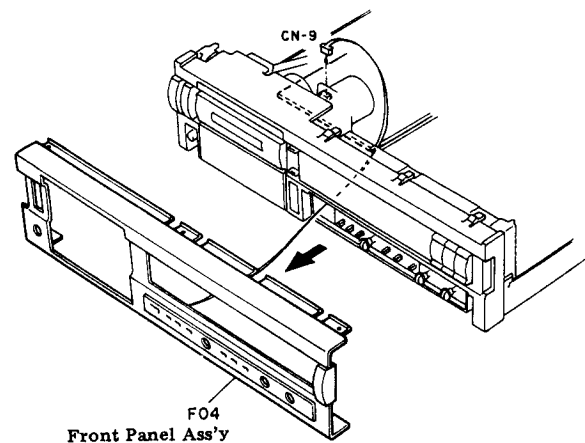


Fig. 2.4.2

2.5. Main P.C.B. Ass'y

Refer to Figs. 2.5.1 and 2.5.2.

- (1) Remove the Front Panel Ass'y referring to item 2.4.
- (2) Loosen screws F01 (4 pcs.), F02 (1 pce.) and F03 (2 pcs.). See Fig. 2.5.1.
- (3) Slide out F04 (Front Chassis Ass'y & Main P.C.B. Ass'y) forward.
- (4) Loosen screws F05 (2 pcs.) and F06 (2 pcs.), and remove F07 (Shield Plate). See Fig. 2.5.2.
- (5) Loosen screws F08 (2 pcs.) and remove F09 (Main P.C.B. Ass'y).

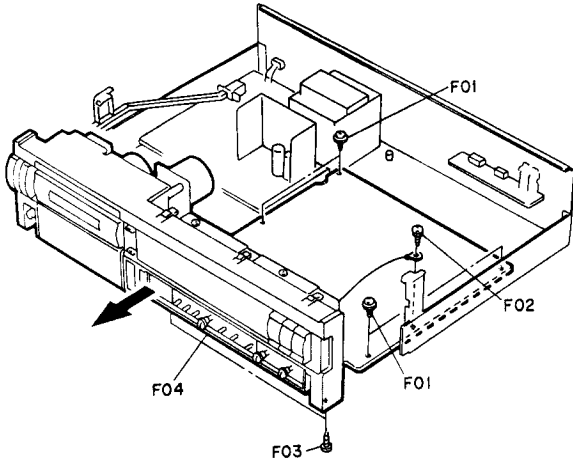


Fig. 2.5.1

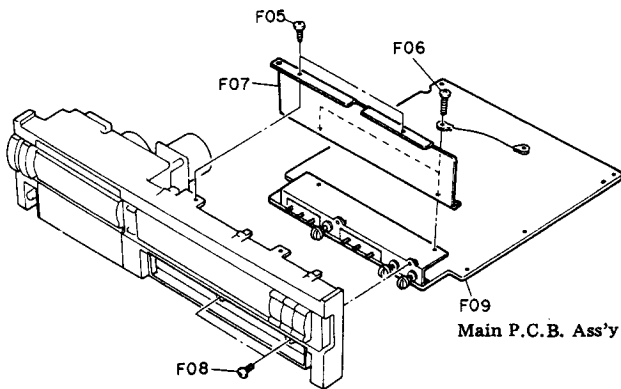


Fig. 2.5.2

2.6. Power Supply & Logic P.C.B. Ass'y

Refer to Fig. 2.6.

Caution: Unplug the power cord from the AC outlet.

- (1) Remove the Top Cover Ass'y referring to item 2.1.
- (2) Push F01 (Power Switch Joint) rearward (in the direction (A)).
- (3) Pull F01 (Power Switch Joint) frontward (in the direction (B)) and lift it in the direction (C) to disengage F01 (Power Switch Joint) from the Power Switch.
- (4) Remove F01 (Power Switch Joint).
- (5) Loosen screws F02 (1 pce.), F03 (3 pcs.) and F04 (1 pce.), and remove F05 (Power Supply & Logic P.C.B. Ass'y).

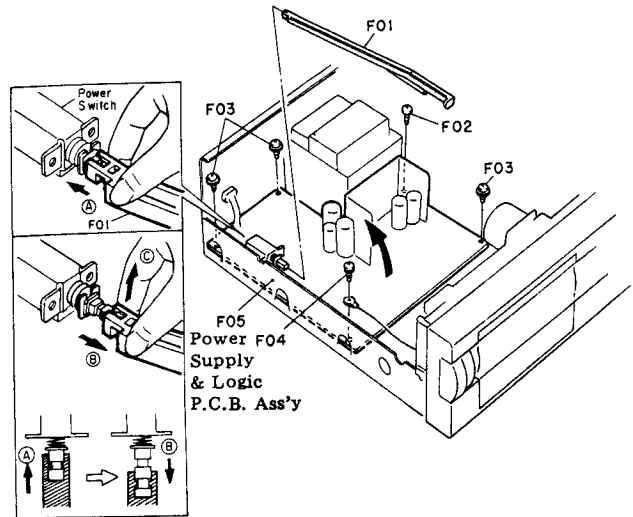


Fig. 2.6

2.7. Control Switch & Display P.C.B. Ass'y

Refer to Fig. 2.7.

- (1) Remove the Front Panel Ass'y referring to item 2.4.
- (2) Loosen screws F01 (2 pcs.) and F02 (2 pcs.), and remove F03 (Shield Plate).
- (3) Loosen screws F04 (2 pcs.), unhook claws (5 pcs.), and remove F05 (Control Switch & Display P.C.B. Ass'y).

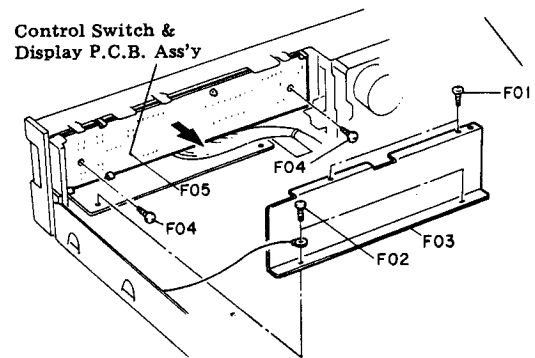


Fig. 2.7

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquires@mauritron.co.uk

3. TEST TAPES AND GAUGES

- (1) 400 Hz Level Tape (DA09005B)
- (2) 1 kHz Track Alignment Tape (DA09007B)
- (3) 10 kHz PB Frequency Response Tape (DA09003B)
- (4) 15 kHz PB Frequency Response Tape (DA09002B)
- (5) 20 kHz PB Frequency Response Tape (DA09001B)
- (6) 15 kHz Azimuth Tape (DA09004B)
- (7) 3 kHz Speed and Wow/Flutter Tape (DA09006C)
- (8) Tape Travelling Cassette (DA09071A)
- (9) Reference EXII Tape (DA09111A)
- (10) Reference SX Tape (DA09110A)
- (11) Reference ZX Tape (DA09109A)
- (12) Head Alignment Gauge (DA09092B)
- (13) Torque Gauge FWD (DA09082A)

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

4. MECHANICAL ADJUSTMENTS

4.1. Tape Guide Height Check for Record/Playback Head and Erase Head

With use of a Head Alignment Gauge (DA09092B), tape guide height check for the Record/Playback and Erase Heads shall be made, wherein a small block shall be pushed straight down to the base while in use of the Head Alignment Gauge (DA09092B). Refer to Fig. 4.1.

- (1) **Record/Playback Head Tape Guide Height**
 - (a) Load the base of the Head Alignment Gauge (DA09092B) carefully and set the cassette deck in Play mode.
 - (b) Place the small block of the Head Alignment Gauge (DA09092B) on the base.
 - (c) Slide the small block against the tape guide of the Record/Playback Head, and check to insure that the block is accepted by the tape guide.
 - (d) If not, loosen the screw and insert a shim (either 30 μm (OC80048A), 60 μm (OC80038A), or 100 μm (OC80039A)) to raise the Record/Playback Head, then tighten and apply a quantity of lock tight paint to the screw.
- (2) **Erase Head Tape Guide Height**
 - (a) Load the base of the Head Alignment Gauge (DA09092B) carefully and set the cassette deck in Play mode.
 - (b) Place the small block of the Head Alignment Gauge (DA09092B) on the base.
 - (c) Slide the small block against the tape guide of the Erase Head, and check whether the block is accepted by the tape guide.

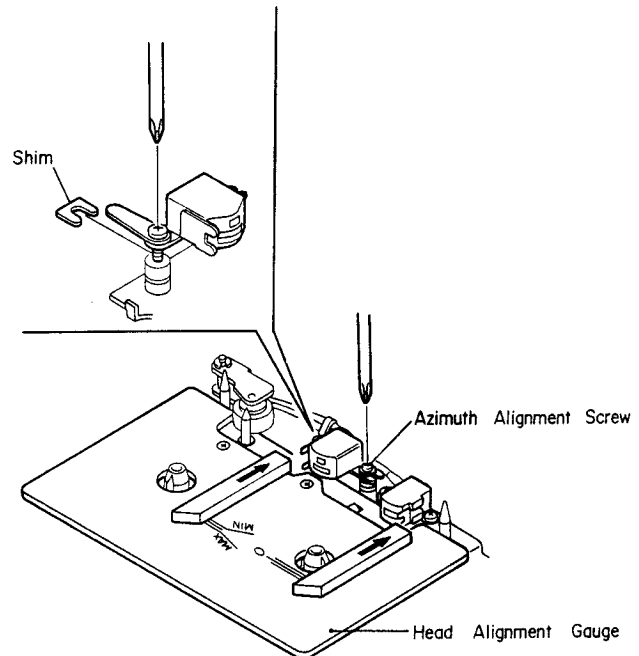


Fig. 4.1

4.2. Head Base Stroke Check

Refer to Fig. 4.2.

- (1) Load the base of the Head Alignment Gauge (DA09092B) carefully, then push the base toward the Record/Playback Head to eliminate the clearance between the reference pin and the base.
- (2) Set the cassette deck in Play mode.
- (3) Place the small block of the Head Alignment Gauge (DA09092B) on the base.
- (4) Contact the small block with the Record/Playback Head surface and the Erase Head surface, and check whether the end of the small block is located within the specified tolerance as shown in Fig. 4.2.

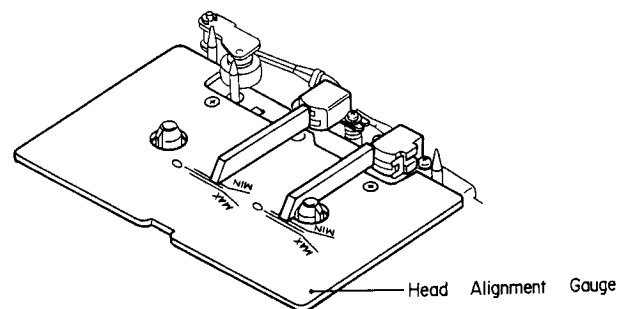


Fig. 4.2

4.3. Record/Playback Head Azimuth Alignment and Height Check

Refer to Fig. 4.1.

- (1) Contact an AC voltmeter to the Output Jacks.
- (2) Load a 15 kHz Azimuth Tape (DA09004B) and set the cassette deck in Play mode.
- (3) Turn the Azimuth Alignment Screw until the outputs of both channels become maximum.
- (4) Load a 1 kHz Track Alignment Tape (DA09007B) and set the cassette deck in Play mode.
- (5) Check to insure that the readings of both channels on the AC voltmeter are below -25 dB. If not, replacement of the Record/Playback Head will be required.
- (6) Apply a quantity of lock tight paint to the Azimuth Alignment Screw.

4.4. Pressure Adjustment of Pressure Roller

Refer to Fig. 4.3.

- (1) In Play mode, measure the Pressure of the Pressure Roller against the capstan and check whether the pressure is in a range of 360 ± 40 g.
- (2) If pressure is out of the range, correct it by changing the installation point of the Pressure Roller Spring.

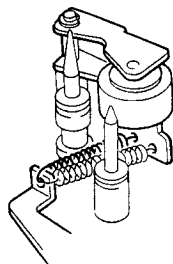


Fig. 4.3

4.5. Tape Travelling Check

Load a Tape Travelling Cassette (DA09071A) and set the cassette deck in Play mode to check the followings:

- (1) After more than 2 seconds, the fluctuation of the tape travelling on the Record/Playback Head is small.
- (2) Tape is in contact with the head sufficiently.
- (3) Tape waving is small on the heads and pressure roller.

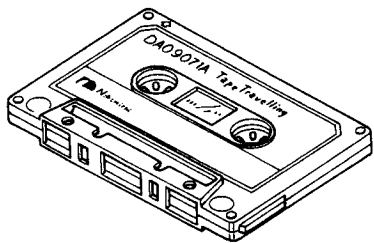


Fig. 4.4

4.6. Eject Damper Adjustment

Refer to Fig. 4.5. Load a cassette tape, and with opening the Cassette Case by pressing the Eject button and closing it by hand, adjust the speed of damper action by the Damper Adjustment Screw.

CCW: Damper moves fast.

CW: Damper moves slowly.

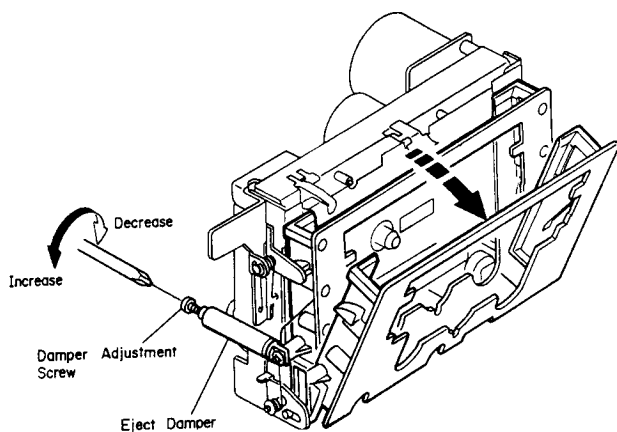


Fig. 4.5

4.7. Reel Motor Speed Adjustment in Play Mode

- (1) Load a Torque Gauge FWD (DA09082A) and set the cassette deck in Play mode.
- (2) After 5 to 10 seconds, adjust VR501 on the Power Supply & Logic P.C.B. Ass'y to obtain exactly 45 g-cm on the torque gauge.
- (3) Check that the back tension is in a range of 1.5 to 5 g-cm.

4.8. Tape Speed Adjustment

Refer to Fig. 4.6.

- (1) Connect a frequency counter to the Output Jacks.
- (2) Load a 3 kHz Speed and Wow/Flutter Tape (DA09006C) and play it back.
- (3) Adjust the Tape Speed Adjustment Volume incorporated in the Capstan Motor to obtain 3,000 Hz on the frequency counter.

CCW: Motor drives slowly.

CW: Motor drives fast.

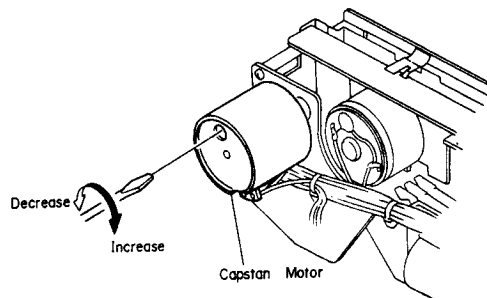


Fig. 4.6

4.9. Lubrication

The tape transport is of a lubrication-free type mechanism. When the following parts are replaced, apply the specified lubricant.

- (1) Molykote (R) Grease (X5-6020)
Cam Motor Pulley
Thrust portion on the Capstan Shaft
- (2) FLOIL GB-TS-1
Washer between Reel Hub Ass'y and Back Tension Spring
- (3) Diamond Oil (EP-56)
Reel Hub Shaft
- (4) Anderol 456
Capstan Shaft

Note: We suggest that you use the above specified lubricant or equivalent type.

The company dealing in the above lubricant is as follows:

- (a) Molykote (R) Grease (X5-6020)
Dowcorning Co., Ltd., 1-15-1 Nishishinbashi, Minato-ku, Tokyo, Japan
- (b) FLOIL GB-TS-1
Kanto Chemicals Co., Ltd., 2-7 Kanda Sakuma-cho, Chiyoda-ku, Tokyo, Japan
- (c) Diamond Oil (EP-56)
Mitsubishi Oil Co., Ltd., 1-2-4 Toranomom, Minato-ku, Tokyo, Japan
- (d) Anderol 456
Toyo Kokusai Oil Co., Ltd., 3-3-5 Hatchobori, Chuo-ku, Tokyo, Japan

6. ELECTRICAL ADJUSTMENTS

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
1	Preliminary Step			Balance - Center Bias Tune - Center Tape - Type IV MPX Filter - OFF Dolby NR - OFF		Set the Cassette Deck 2 as shown in MODE.
2	Reel Motor Speed Adjustment (Play)	Torque Gauge FWD (DA09082A)		Playback	Power Supply & Logic P.C.B. VR501	1. Play back a Torque Gauge FWD and adjust VR501 to obtain 45 g-cm on the torque gauge. 2. Check that the deviation of the torque value is within ± 5 g-cm of the center value.
3	Tape Speed Adjustment	3 kHz Speed and Wow/Flutter Tape (DA09006C)	Frequency Counter to Output Jacks	Playback Tape - Type IV	Tape Speed Adj. Volume (Capstan Motor)	Adjust the volume incorporated in the capstan motor to obtain 3 kHz ± 15 Hz on the frequency counter.
4	Meter Level Calibration	400 Hz to Input Jacks	AC Voltmeter to Output Jacks	Record, Pause	Main P.C.B. VR112L VR112R	1. Feed in 400 Hz and adjust the Rec Level control to obtain 500 mV -0.5 dB on the AC voltmeter. 2. Adjust VR112L (VR112R) so that the 0 dB segment of the level meter starts illuminating.
5	MPX Filter Adjustment	19 kHz ± 100 Hz to Input Jacks	AC Voltmeter to Output Jacks	Record, Pause MPX - OFF/ON	Main P.C.B. VL100L VL100R	1. Adjust the Rec Level control to obtain 500 mV (0 dB) on the AC voltmeter. 2. Set the MPX Filter switch to ON and adjust VL100L (VL100R) to obtain minimum reading on the AC voltmeter (minimum reading will be less than -30 dB).
6	Record/Playback Head Azimuth Alignment	15 kHz Azimuth Tape (DA09004B)	AC Voltmeter to Output Jacks	Playback Dolby NR - OFF MPX - OFF Tape - Type IV	Record/Playback Head Azimuth Alignment Screw	Adjust the Record/Playback Head Azimuth Alignment Screw to obtain maximum readings for both channels on the AC voltmeter.
7	Playback Level Calibration	400 Hz Level Tape (DA09005B)	AC Voltmeter to Output Jacks	Same as above	Main P.C.B. VR102L VR102R	Adjust VR102L (VR102R) to obtain 500 mV on the AC voltmeter.

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS	
8	Playback Frequency Response Adjustment	400 Hz Level Tape (DA09005B) 10 kHz PB Frequency Response Tape (DA09003B) 15 kHz PB Frequency Response Tape (DA09002B) 20 kHz PB Frequency Response Tape (DA09001B)	AC Voltmeter to Output Jacks	Playback Dolby NR - OFF MPX - OFF Tape - Type IV	Main P.C.B. VR111L VR111R	<p>1. Load a 400 Hz level tape, play it back, and read the playback level.</p> <p>2. Load 10 kHz, 15 kHz and 20 kHz PB frequency response tapes and play them back. Adjust the record/playback head azimuth to obtain maximum readings for both channels on the AC voltmeter with each tape. Check that the playback levels are as follows with respect to the level for 400 Hz level tape.</p> <p>10 kHz: -20 dB -2 to +2 dB 15 kHz: -20 dB -2 to +3 dB 20 kHz: -20 dB -2 to +4 dB</p> <p>If the level at 20 kHz is out of the range, adjust VR111L (VR111R) to obtain satisfactory results. VR111L (VR111R) compensates the playback frequency response at 20 kHz as shown below:</p> <div style="text-align: center;"> </div> <p>3. Conduct step 6 "Record/Playback Head Azimuth Alignment".</p>	
			<p>For Service Manuals Contact MAURITRON TECHNICAL SERVICES 8 Cherry Tree Rd, Chinnor Oxon OX9 4QY Tel: 01844-351694 Fax: 01844-352554 Email: enquires@mauritron.co.uk</p>				
9	Bias Oscillation Frequency and Erase Current Adjustment	None	Frequency Counter between terminals 1 and 2 of CN15 on Main P.C.B. and AC Voltmeter across the additional 0.1 ohm resistor	Record, Pause Tape - Type I Dolby NR - OFF MPX - OFF	Main P.C.B. VT100 JS100 VR106	<p>1. Connect an additional 0.1 ohm resistor in series to the Erase Head and connect the AC voltmeter across it.</p> <p>2. Adjust VT100 to obtain 105 kHz \pm1 kHz on the frequency counter. If bias oscillation frequency is above 106 kHz, short-circuit JS100 with a jumper wire as shown left and re-adjust VT100 again.</p> <p>3. Adjust VR106 to obtain 20 mV (200 mA) on the AC voltmeter.</p> <p>4. After completion of the erase current adjustment, re-check the bias oscillation frequency.</p> <p>5. Remove the additional 0.1 ohm resistor.</p>	
		[Serial No.: A32705801]	[Serial Nos.: A32701001-05800]				
10	Bias Trap Adjustment (Record Amp.)	None (remove input signals)	AC Voltmeter between pins 1 (Lch) and 2 (GND) or 3 (Rch) and 2 (GND) of TP100 on Main P.C.B.	Same as above	Main P.C.B. VL102L VL102R	Adjust VL102L (VL102R) to obtain minimum reading on the AC voltmeter.	

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
11	Record Level Calibration and Recording Bias Current Adjustment	400 Hz (0 dB) and 18 kHz (-20 dB) to Input Jacks	AC Voltmeter and Distortion Meter to Output Jacks	Record and Playback Tape - Type IV/II/ I Dolby NR - OFF/C MPX - OFF	Main P.C.B. (Level) Type IV VR105L VR105R Type II VR104L VR104R Type I VR103L VR103R (Bias) Type IV VR109L VR109R Type II VR108L VR108R Type I VR107L VR107R	Adjustment should be made in the order of ZX, SX and EX tapes. 1. Set the cassette deck in Record/Pause mode. 2. Feed in 400 Hz and adjust the Rec Level control to obtain 500 mV (0 dB) on the AC voltmeter. 3. Load a reference ZX tape, reference SX tape and reference EXII tape. 4. Set the Dolby NR switch to OFF. 5. Feed in 400 Hz (0 dB) and record, rewind, and play it back. Adjust VR105L (VR105R) for ZX tape, VR104L (VR104R) for SX tape and VR103L (VR103R) for EXII tape so that the played back output levels are 500 mV (0 dB) on the AC voltmeter. 6. Set the Dolby NR switch to C. 7. Feed in 18 kHz (-20 dB) and record, rewind, and play it back. Adjust VR109L (VR109R) for ZX tape, VR108L (VR108R) for SX tape and VR107L (VR107R) for EXII tape so that the played back output levels are 50 mV (-20 dB) on the AC voltmeter. 8. Repeat above 4 to 8 two or three times. 9. Set the Dolby NR switch to OFF. 10. Feed in 400 Hz (0 dB) and record, rewind, and play it back. Check to insure that the total harmonic distortion is less than 1.2% for ZX and EXII tapes and 1.6% for SX tape. If the total harmonic distortion exceeds the specified value, re-adjust VR111L (VR111R) in Step 8 "Playback Frequency Response Adjustment", and repeat above steps till satisfactory results are obtained.

7. MECHANISM ASS'Y AND PARTS LIST

7.1. Synthesis

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email:- enquiries@mauritron.co.uk

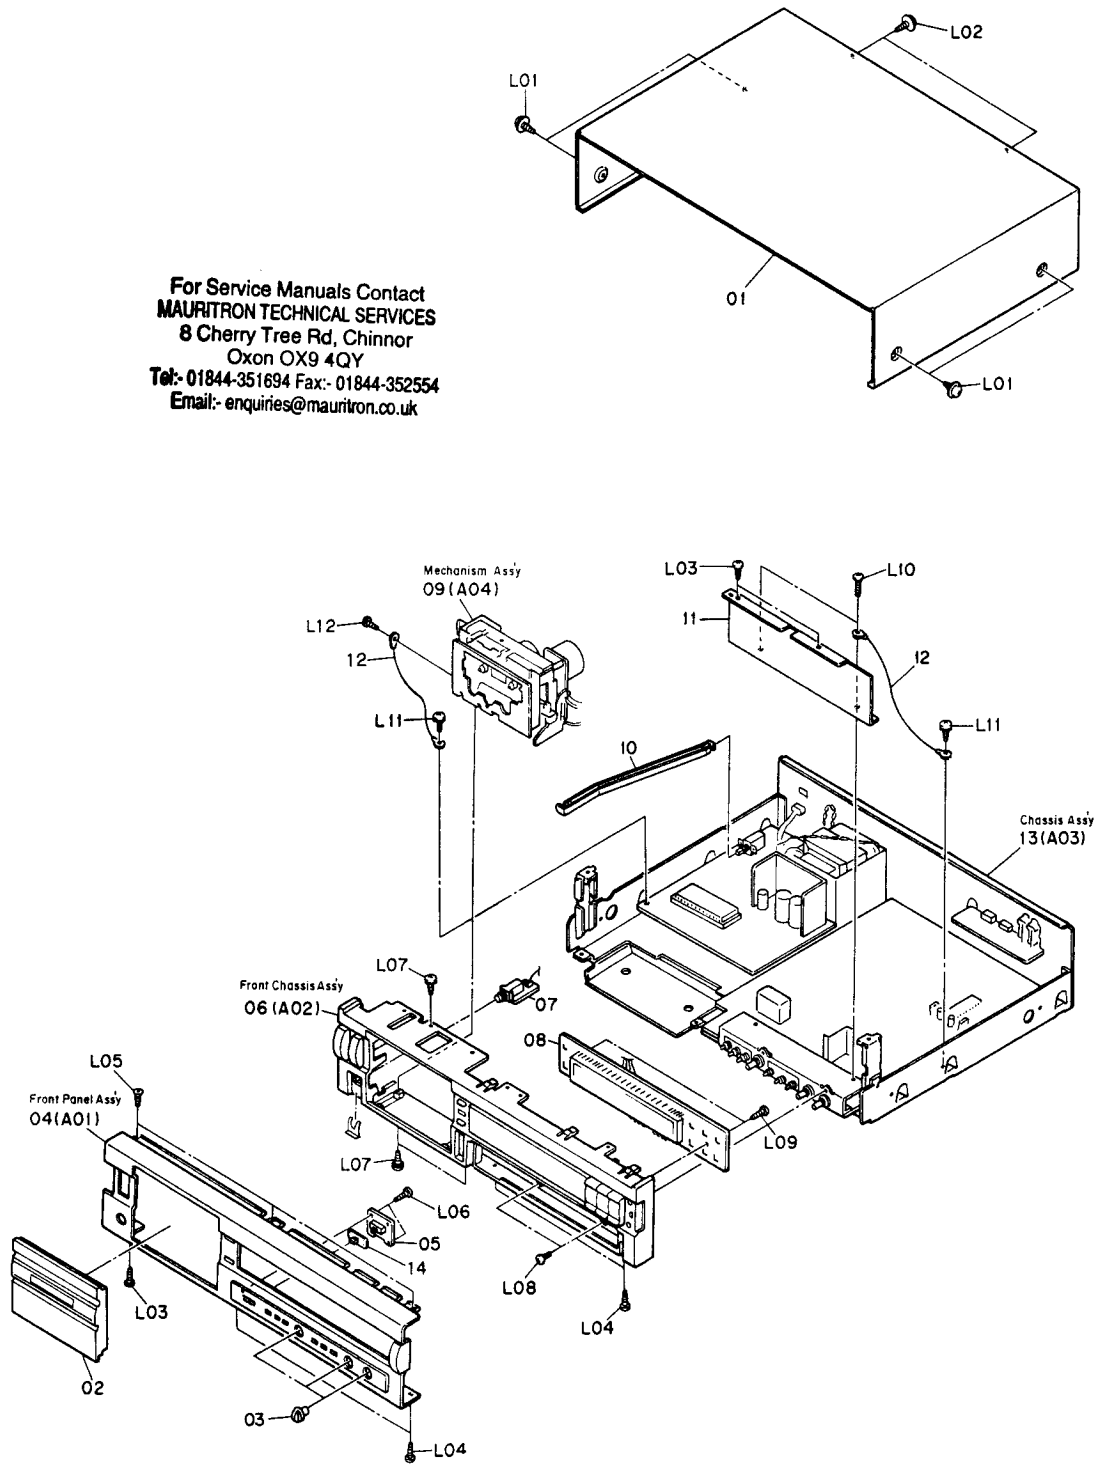


Fig. 7.1

*: Unstocked parts.

Schematic Ref. No.	Part No.	Description	Q'ty
7.1. Synthesis			
		Synthesis	
01	OH05710A	Top Cover	1
02	* HA05935A	Cassette Case Cover Ass'y	1
03	OH05711A	Volume Knob	3
04	* HA05930A	Front Panel Ass'y	1
05	* BA07947A	Timer Switch P.C.B. Ass'y	1
06	—	Front Chassis Ass'y	1
07	* BA07960A	Headphone P.C.B. Ass'y	1
08	* BA07945A	Control Switch & Display P.C.B. Ass'y	1
09	* CA09049A	Mechanism Ass'y	1
10	OJ06258A	Power Switch Joint	1
11	OJ06259A	Shield Plate	1
12	OB83916A	Mechanism GND Wire Ass'y	2
13	—	Chassis Ass'y	1
14	OH05824A	Slide Knob	1
L01	OE03032A	BT4x8 @ Binding Washer Faced (Black Chromate)	
L02	OE03632A	BT3x8 @ Binding Washer Faced (Black Chromate)	
L03	OE03366A	BT3x8 @ Binding (Black Chromate)	
L04	OE00921A	BT3x8 @ Binding (Black Chromate)	
L05	OE03054A	BT3x8 @ Countersunk	
L06	OE00860A	BT3x6 @ Binding	
L07	OE03212A	BT2.6x6 @ Binding with Toothed Lock Washer	
L08	OE00896A	M3x6 @ Binding	
L09	OE00868A	BT3x8 @ Binding (Black Chromate)	
L10	OE03551A	M3x8 @ Binding Projected	
L11	OE03157A	BT3x6 @ Binding with Washer	
L12	OE00859A	BT2.6x6 @ Binding	
7.2. Front Panel Ass'y			
A01	HA05930A	Front Panel Ass'y	1
01	OH05714A	Dummy Cap	1
02	OJ06253A	Push Knob Spring	6
03	OH05818A	Push Knob	6
L01	OE00855A	BT2x6 @ Binding	
7.3. Front Chassis Ass'y			
A02	—	Front Chassis Ass'y	1
01	OH05723A	Power Switch Button	1
02	OC09392A	Power Switch Spring	1
03	HA05929A	Eject Knob Ass'y	1
04	OJ06252A	Eject Spring	1
05	OH05716A	Control Knob A	3
06	OH05825A	Tact Knob	2

7.2. Front Panel Ass'y (A01)

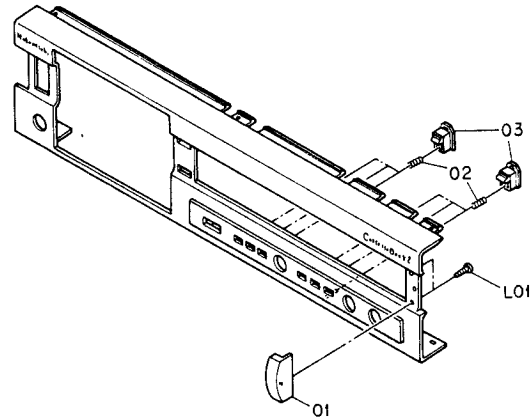


Fig. 7.2

7.3. Front Chassis Ass'y (A02)

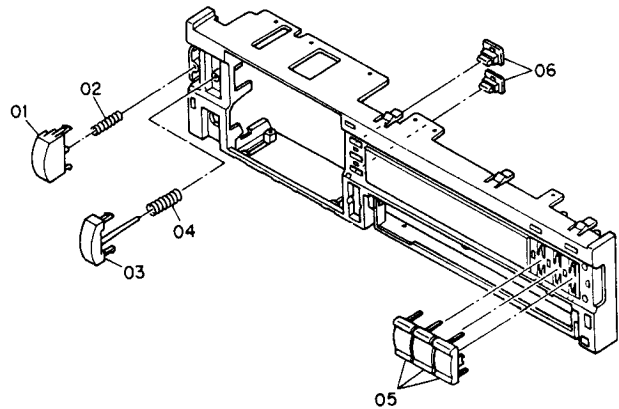


Fig. 7.3

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

7.4. Chassis Ass'y (A03)

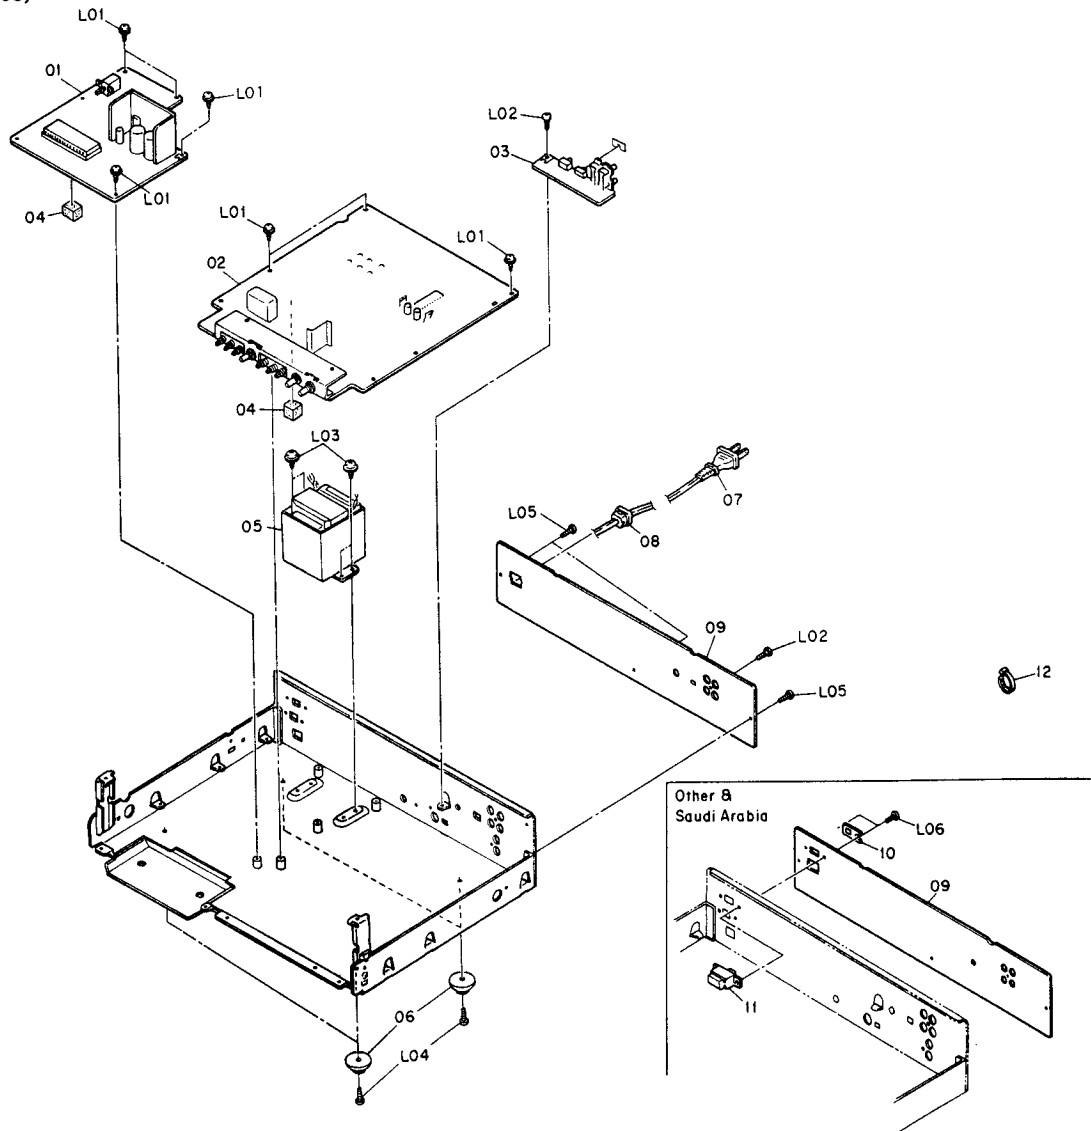


Fig. 7.4

*: Unstocked parts.

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
7.4. Chassis Ass'y				08	0B90280A	Cord Bushing (USA, CAN, EP, AUS)	1
A03	—	Chassis Ass'y	1	09	0B90283A	Cord Bushing (UK, SAU, OTR, JPN)	1
01	* BA07944A	Power Supply & Logic P.C.B. Ass'y (USA, CAN, EP, UK, AUS, SAU, OTR)	1	09	0H05830A	Rear Panel (USA, CAN, EP, UK, AUS, JPN)	1
01	* BA07961A	Power Supply & Logic P.C.B. Ass'y (JPN)	1	10	0H05847A	Rear Panel (SAU, OTR)	1
02	* BA07959A	Main P.C.B. Ass'y	1	10	0M05611A	Voltage Lock Plate (OTR, SAU)	1
03	* BA07946A	Pin Jack P.C.B. Ass'y	1	11	0B07092U	Voltage Selector Switch (SAU, OTR)	1
04	0J06267A	P.C.B. Cushion	5	12	0B90019A	Insu-Lock	2
05	0B50176A	Power Transformer 120V (USA, CAN)	1	L01	0E03157A	BT3x8 @ Binding With Washer	
	0B50178A	Power Transformer 230V (EP, UK, AUS)	1	L02	0E03366A	BT3x8 @ Binding Projected (Black Chromate)	
	0B50177A	Power Transformer (SAU, OTR)	1	L03	0E03592A	BT4x6 @ Binding Washer Faced (Black Chromate)	
	0B50175A	Power Transformer 100V (JPN)	1	L04	0E03012A	BT3x12 @ Binding (Black Chromate)	
06	HA05833A	Leg Ass'y	4	L05	0E00860A	BT3x6 @ Binding (Black Chromate)	
07	0B08504A	Power Cord (USA, CAN)	1	L06	0E00985A	M3x6 @ Binding (Black Chromate) (SAU, OTR)	
	0B08093U	Power Cord (EP)	1				
	0B08348A	Power Cord (UK)	1				
	0B05241A	Power Cord (AUS)	1				
	0B08219B	Power Cord (JPN)	1				
	0B08533A	Power Cord (SAU, OTR)	1				

*: Unstocked parts.

Schematic Ref. No.	Part No.	Description	Qty
7.5. Mechanism Assy			
A04 *	CA09049A	Mechanism Assy	1
01	OC85310A	Eject Arm Spring	1
02	OC85309A	Eject Arm	1
03	CA80006A	Damper Assy	1
04	OC82710A	Eject Lever Spring	1
05	OC85301A	Eject Lever	1
06	OC85301A	Cassette Case Holder L	1
07	OC80037A	Instr-Lock	4
08	OC80019B	Eject Spring	1
09	OC80013A	Lock Lever Spring	1
10	OC80014A	Lock Lever Collar	1
11	OC80014A	Lock Lever	1
12	CA80725A	Take-up Reel Hub Assy	1
13	OC80612A	Spring Holder	2
14	OC80613A	Reel Hub Spring	2
15	CA80001A	Cassette Case Assy	1
16	OC80136A	Eject Assy	1
17	OG01365A	Erase Head E2D	1
18	OC85303A	2P Connector Assy for Erase Head	1
19	OC80944A	Erase Head Collar	1
20	OC82710A	Head Base Hold Plate	2
21	OC80004A	Reel Ball 2mm	1
22	OC80004A	Reel Ball 3mm	1
23	OG01371A	Record/Playback Head 2G	1
24	OC85304A	6P Connector Assy for R/P Head	1
25	OC80945A	Record/Playback Head Collar	1
26	OC82703A	Azimuth Adjust Spring	1
27	CA80726A	Supply Reel Hub Assy	1
28	CA80726A	Pressure Roller Assy	1
29	CA80005A	Pressure Roller Spring	1
30	OC80008A	Steel Ball 2mm	1
31	OC80007A	Steel Ball 3mm	1
32	OC81648A	Cassette Motor Assy	1
33	OC80027A	Moose Switch	3
34	OC81415A	Worm Thrust Bush	1
35	OC85302A	Control Motor Holder	1
36	OC85311A	Motor Thrust Stopper	1
37	OC80017B	Record Protector Lever	1
38	OC82721A	Mechanism Chassis B	1
39	OC82709A	Cassette Holder Spring	1
40	OC80025A	Record Protector Holder	1
41	OC80014B	Record Protector Switch	1
42	OC80014B	Spring for P.C.B. Assy	1
43	CA80204A	Brake Assy B	1
44	OC80628A	Brake Spring B	1
45	OC80030A	Reel Motor Holder	1
46	CA81648A	Reel Motor Assy	1
47	OC80033A	Hold Spring	1
48	OC80033A	Hold Spring	1
49	OC80033A	Flywheel	1
50	OC80033A	Captain Belt	1
51	OC80033A	Sleeve	1
52	OC80035A	Flange	3
53	OC80035A	Flange	3
54	OC80035A	Flange	3
55	OC80035A	Flange	3
56	CA81847A	Capstan Motor Assy	1
57	OC80010D	Cassette Case Holder R	1
58	OC80012A	Eject Sensor Switch	1
59	OC85308A	6P Connector Assy	1
60	OC85308A	6P Connector Assy	1
61	OC83380A	Idler Gear	1
L01	OE00698A	E-Ring 2.5mm	1
L02	OE03052A	CS Stopper 2.4mm	1
L03	OE03235A	Damper Washer	1
L04	OE00181A	E-Ring 3mm	1
L05	OE00181A	E-Ring 3mm	1
L06	OE03043A	FT2.5x3.5 @ Pan	1
L07	OE03443A	FT2.5x3.5 @ Pan	1
L08	OE03049A	Washer 1.8x3.2x0.5	1
L09	OE03226A	Washer 2.1x4.5x0.1	1
L10	OE03038A	M2x12 @ Binding	1
L11	OE03038A	Washer 1.8x4.0x0.25	1
L12	OE03053A	Wire Holder	1
L13	OC80038A	Shim 0.09T	1
L14	OC80039A	Shim 0.11T	1
L15	OC80048A	Shim 0.09T	1
L16	OE03040A	FT2.5x3.5 @ Pan (2A)	1
L17	OE00222A	E-Ring 2mm	1
L18	OE03035A	M2x3.2 @ Truss	1
L19	OE03036A	M2x4 @ Pan (2A)	1
L20	OE03044A	FT2.5x2.0 @ Pan	1
L21	OE03044A	FT2.5x2.0 @ Pan	1
L22	OE03041A	FT2.5x4 @ Pan	1

7.5. Mechanism Assy (A04)

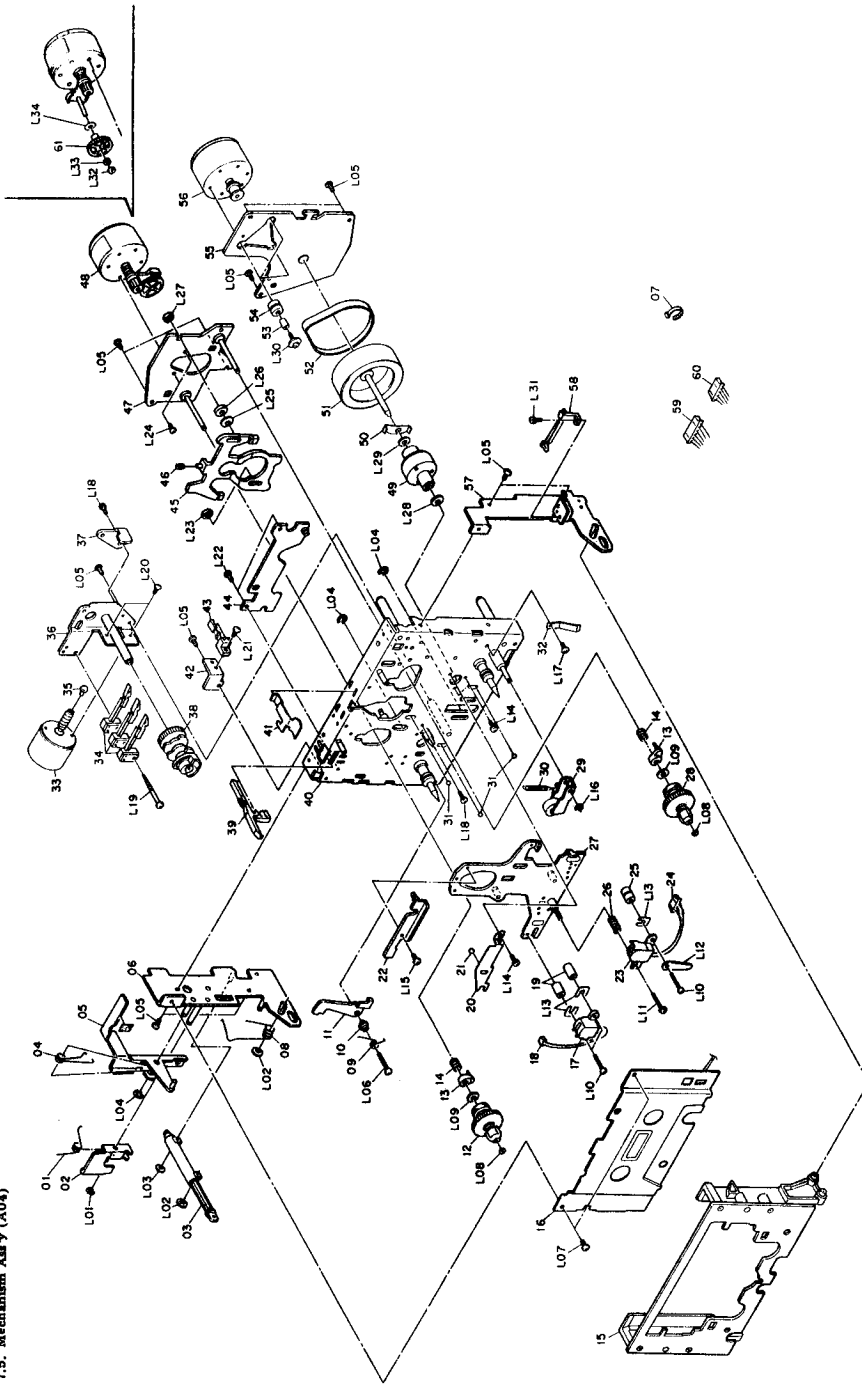


Fig. 7.5

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

8. MOUNTING DIAGRAMS AND PARTS LIST

Notes:

1. Mounting diagram shows a dip side view of the printed circuit board.
2. Diode is 1SS53, 1S1555, or 1SS176 unless otherwise specified.
3. Abbreviation for part name:
 TR - Transistor, SID - Silicon Diode,
 ZD - Zener Diode, Varicap - Variable Capacitance Diode,
 RK - Carbon Resistor, RM - Metal Film Resistor, RF - Fall Safe Type Resistor,
 RC - Cement Resistor
 CE - Electrolytic Capacitor, CML - Mylar Capacitor, CC - Ceramic Capacitor, CPP - PP Capacitor, CMM - Metallized Mylar Capacitor,
 CSP - Polystyrene Capacitor, C - Mica Capacitor, CT - Tantalum Capacitor

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
U100	C-5	Q115L	E-4
U101	C-9	Q115R	F-4
U102	F-9	Q116L	E-6
U103	I-9	Q116R	F-6
U104	H-6	Q117	E-2
U105	F-11	Q118L	C-11
U106	H-11	Q118R	C-11
Q100L	D-5	Q120	I-9
Q100R	D-5	Q121L	E-6
Q101L	D-6	Q121R	F-6
Q101R	C-7	ZD100	C-7
Q102R	F-10	ZD101	E-6
Q102R	F-10	ZD102	E-6
Q103	H-8	ZD103R	H-11
Q104	G-7	ZD103R	H-11
Q105L	L-7	ZD104L	I-11
Q105R	G-7	ZD104R	I-11
Q106L	I-6	D100	D-5
Q106R	G-6	D101	H-8
Q107L	E-2	D102	I-7
Q107R	F-3	D103	I-7
Q108L	F-3	D104	G-7
Q108R	F-3	D105	F-2
Q109	E-2	D106	E-7
Q110	I-4	D107	E-6
Q111	H-4	D108L	H-11
Q112	H-4	D108R	H-11
Q113L	E-2	D109R	H-11
Q113R	F-3	D110L	L-11
Q114L	E-4	D110R	L-11
Q114R	F-4	D111	F-6

8.1. Main P.C.B. Assy

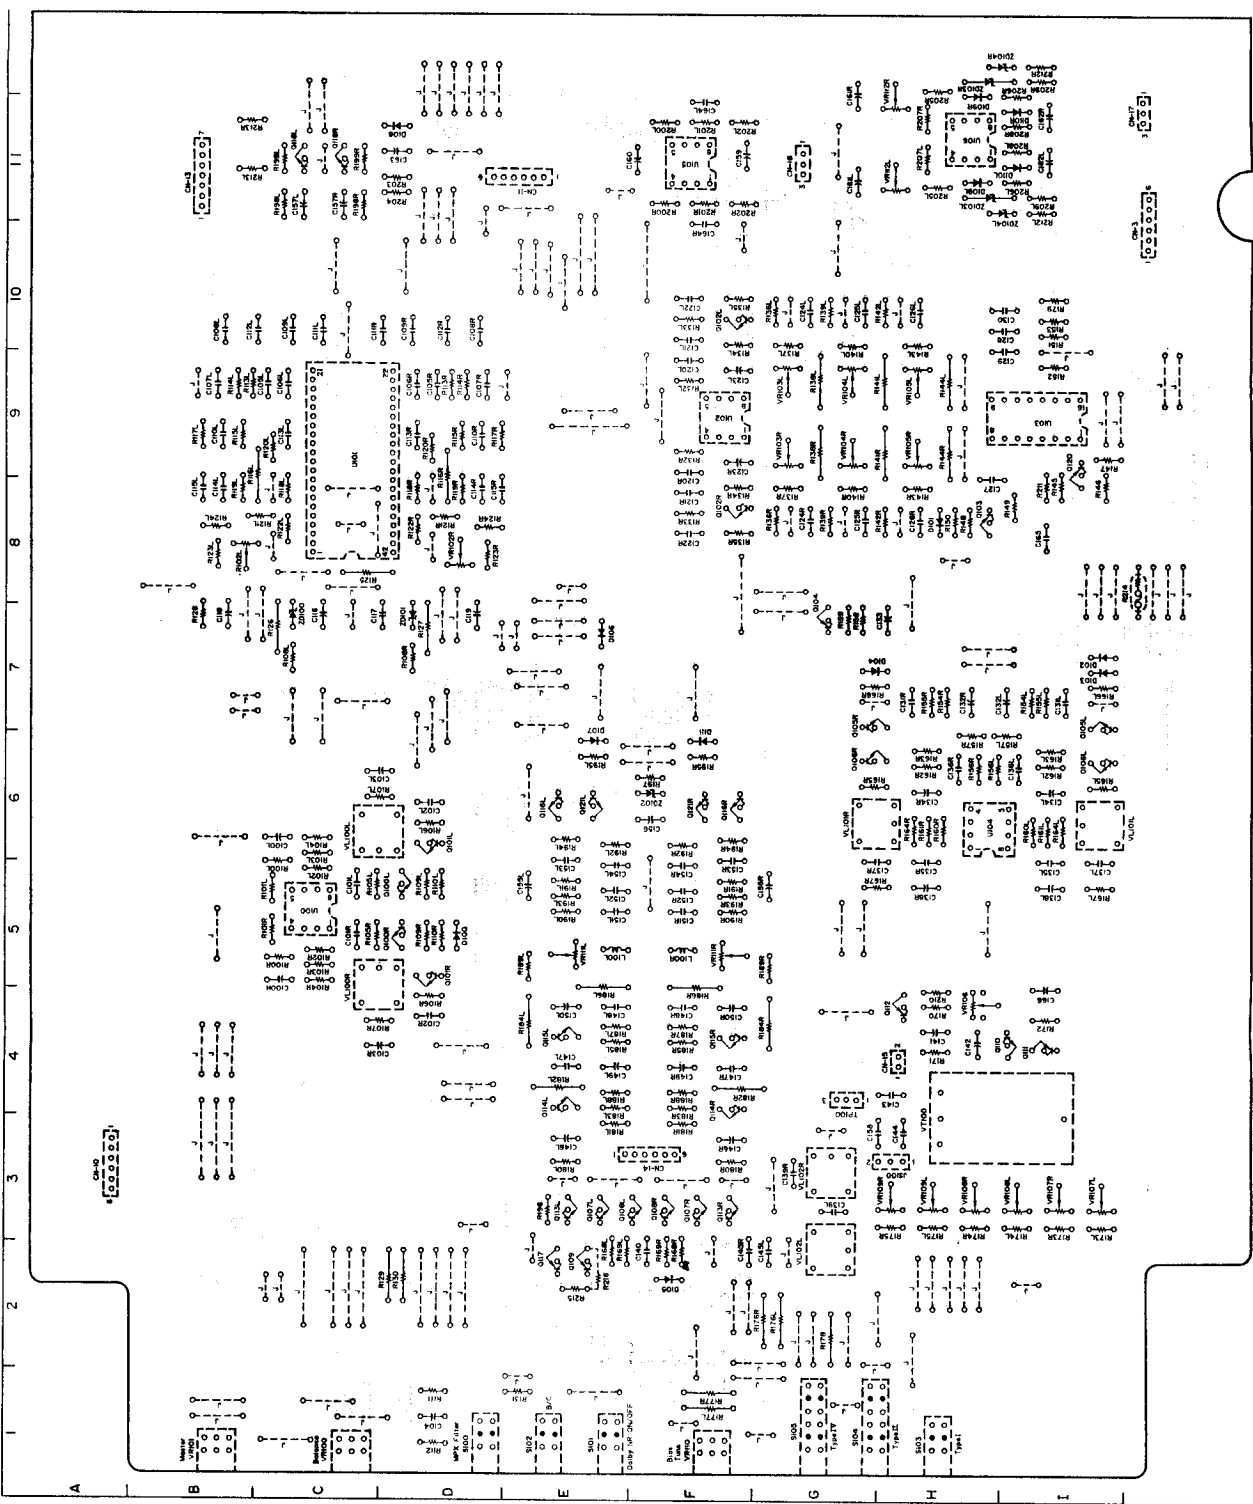


FIG. 8.1

*: Unstocked parts.

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
8.1. Main P.C.B. Ass'y								
	* BA07959A	Main P.C.B. Ass'y	R124L,R	OB09707A	RK 18K 1/6W J	C102L,R	OB41275A	CML 1200P 50V J
			R125	OB25398A	RM 130K 1/4W F	C103L,R	OB40756A	CE 1μ 50V (LN)
			R126,127	OB24272A	RF 68 1/4W J	C104	OB40115A	CE 4.7μ 50V
			R128	OB09709A	RK 22K 1/6W J	C105L,R	OB41286A	CML 0.01μ 50V J
			R129,130	OB09701A	RK 10K 1/6W J	C106L,R	OB41143A	CPP 5600P 100V G
			R131	OB09689A	RK 3.3K 1/6W J	C107L,R	OB41295A	CML 0.056μ 50V J
U100	OB60831B	Main P.C.B.	R132L,R	OB09705A	RK 15K 1/6W J	C108L,R	OB41296A	CML 0.068μ 50V J
U101	OB06146A	IC NJM4558DD	R133L,R	OB25277A	RM 7.15K 1/4W F	C109L,R	OB41302A	CML 0.22μ 50V J
U102	OB11027A	IC NJM4558DD	R134L,R	OB09749A	RK 1M 1/6W J	C110L,R	OB41288A	CML 0.015μ 50V J
U103	OB06387A	IC NJM2043DD	R135L,R	OB09701A	RK 10K 1/6W J	C111L,R	OB41300A	CML 0.15μ 50V J
U104	OB06370A	IC NJM4556D	R136L,R	OB09709A	RK 22K 1/6W J	C112L,R	OB41306A	CML 0.47μ 50V J
U105	OB06124A	IC NJM4558D	R137L,R	OB09693A	RK 4.7K 1/6W J	C113L,R	OB41139A	CPP 3900P 100V G
U106	OB10033A	TR 2SC1740S	R138L,R	OB09680A	RK 1.3K 1/6W J	C114L,R	OB41133A	CPP 2200P 100V G
Q100L,R	OB10033A	TR 2SC1740S	R139L,R	OB09705A	RK 15K 1/6W J	C115L,R	OB41133A	CPP 2200P 100V G
Q101L,R	OB10033A	TR 2SC1740S	R140L,R	OB09692A	RK 4.3K 1/6W J	C116,117	OB40092A	CE 220μ 25V
Q102L,R	OB10033A	TR 2SC1740S	R141L,R	OB09682A	RK 1.6K 1/6W J	C118	OB40115A	CE 4.7μ 50V
Q103	OB10029A	TR 2SA933S	R142L,R	OB09706A	RK 16K 1/6W J	C119	OB40090A	CE 47μ 25V
Q104	OB10053A	TR DTA144ES	R143L,R	OB09701A	RK 10K 1/6W J	C120L,R	OB41277A	CML 1800P 50V J
Q105L,R	OB10067A	TR DTC143TS	R144L,R	OB09684A	RK 2K 1/6W J	C121L,R	OB41394A	CPP 220P 50V J
Q106L,R	OB10033A	TR 2SC1740S	R145	OB09717A	RK 47K 1/6W J	C122L,R	OB41282A	CML 4700P 50V J
Q107L,R	OB06142A	TR 2SC2240 (BL)	R146	OB09685A	RK 2.2K 1/6W J	C123L,R	OB40487A	CE 10μ 25V
Q108L,R	OB06142A	TR 2SC2240 (BL)	R147	OB09695A	RK 5.6K 1/6W J	C124L,R	OB41280A	CML 3300P 50V J
Q109	OB10102A	TR 2SA1320	R148,149	OB09725A	RK 100K 1/6W J	C125L,R	OB41276A	CML 1500P 50V J
Q110	OB10033A	TR 2SC1740S	R150	OB09717A	RK 47K 1/6W J	C126L,R	OB41277A	CML 1800P 50V J
Q111	OB06069A	TR 2SB564	R151,152	OB09733A	RK 220K 1/6W J	C127	OB41298A	CML 0.1μ 50V J
Q112	OB10053A	TR DTA144ES	R153	OB09733A	RK 220K 1/6W J	C128,129	OB41286A	CML 0.01μ 50V J
Q113L,R	OB10067A	TR DTC143TS	R154L,R	OB09711A	RK 27K 1/6W J	C130	OB41286A	CML 3900P 50V J
Q114L,R	OB06142A	TR 2SC2240 (BL)	R155L,R	OB09719A	RK 56K 1/6W J	C131L,R	OB41281A	CE 1μ 50V
Q115L,R	OB06142A	TR 2SC2240 (BL)	R156L,R	OB09677A	RK 1K 1/6W J	C132L,R	OB40112A	CE 1μ 50V
Q116L,R	OB10033A	TR 2SC1740S	R157L,R	OB09741A	RK 470K 1/6W J	C133	OB40756A	CE 1μ 50V (LN)
Q117	OB10053A	TR DTA144ES	R158	OB09701A	RK 10K 1/6W J	C134L,R	OB41294A	CML 0.047μ 50V J
Q118L,R	OB10067A	TR DTC143TS	R159	OB09725A	RK 100K 1/6W J	C135L,R	OB41278A	CML 2200P 50V J
Q120	OB10053A	TR DTA144ES	R160L,R	OB09735A	RK 270K 1/6W J	C136L,R	OB41283A	CML 5600P 50V J
Q121L,R	OB10067A	TR DTC143TS	R161L,R	OB09719A	RK 56K 1/6W J	C137L,R	OB40487A	CE 10μ 35V
ZD100,101	OB12168A	ZD 10V	R162L,R	OB09689A	RK 3.9K 1/6W J	C138L,R	OB41709A	CC 47P 50V J
ZD102	OB12168A	RD10JSB2	R163L,R	OB09691A	RK 560 1/6W J	C139L,R	OB41974A	CC 100P 50V J
ZD103L,R	OB12273A	ZD 3.3V	R164L,R	OB09645A	RK 47 1/6W J	C140	OB40112A	CE 1μ 50V
ZD104L,R	OB12289A	RD3.3EB1	R165L,R	OB09705A	RK 15K 1/6W J	C141,142	OB41432A	CPP 8200P 50V J
		ZD 5.1V	R166L,R	OB09697A	RK 6.8K 1/6W J	C143	OB41414A	CPP 1500P 50V J
		MTZ5.1C	R167L,R	OB09695A	RK 5.6K 1/6W J	C144	OB41974A	CC 100P 50V J
		SiD 1SS176	R168L,R	OB09695A	RK 5.6K 1/6W J	C145L,R	OB40732A	CE 22μ 25V (LN)
D100,101	OB06398A	SiD 1SS176	R169L,R	OB09695A	RK 5.6K 1/6W J	C146L,R	OB41394A	CPP 220P 50V J
D102,103	OB06398A	SiD 1SS176	R170	OB09693A	RK 4.7K 1/6W J	C147L,R	OB41289A	CML 0.018μ 50V J
D104,105	OB06398A	SiD 1SS176	R171	OB09708A	RK 20K 1/6W J	C148L,R	OB40723A	CE 47μ 16V (LN)
D106,107	OB06398A	SiD 1SS176	R172	OB09701A	RK 10K 1/6W J	C149L,R	OB40114A	CE 3.3μ 50V
D108	OB06398A	SiD 1SS176	R173L,R	OB09705A	RK 15K 1/6W J	C150L,R	OB41274A	CML 1000P 50V J
D109L,R	OB06398A	SiD 1SS176	R174L,R	OB09695A	RK 5.6K 1/6W J	C151L,R	OB41400A	CPP 390P 50V J
D110L,R	OB06398A	SiD 1SS176	R175L,R	OB09653A	RK 100 1/6W J	C152L,R	OB41284A	CML 6800P 50V J
D111	OB06398B	SiD 1SS176	R176L,R	OB01683A	RM 15K 1/4W F	C153L,R	OB41402A	CPP 470P 50V J
VT100	OB51360B	BIAS OSC BO-1	R177L,R	OB01888A	RK 10K 1/4W J	C154L,R	OB40758A	CE 22μ 50V (LN)
VL100L,R	OB06690A	L-C Block	R178	OB09684A	RK 2K 1/6W J	C155L,R	OB40078A	CE 100μ 16V
VL101L,R	OB51361A	Rec. Peaking Coil	R179	OB09710A	RK 24K 1/6W J	C156	OB40114A	CE 3.3μ 50V
VL102L,R	OB06696A	L-C Block	R180L,R	OB09629A	RK 10 1/6W J	C157L,R	OB41420A	CPP 2700P 50V J
VL100L,R	OB03919C	Inductor 36mH	R181L,R	OB09741A	RK 470K 1/6W J	C158		Serial No.:
VR100	OB30128A	VR 100KMN	R182L,R	OB09330A	RK 100K 1/4W J			A32705801 -
VR101	OB30126A	VR 100Kax2	R183L,R	OB09651A	RK 82 1/6W J	C159,160	OB40078A	CE 100μ 16V
VR102L,R	OB32192A	Semi VR 5K	R184L,R	OB09330A	RK 100K 1/4W J	C161L,R	OB40758A	CE 2.2μ 50V (LN)
VR103L,R	OB32192A	Semi VR 5K	R185L,R	OB09731A	RK 180K 1/6W J	C162L,R	OB40758A	CE 2.2μ 50V (LN)
VR104L,R	OB32192A	Semi VR 5K	R186L,R	OB25287A	RM 9.09K 1/4W F	C163	OB40114A	CE 3.3μ 50V J
VR105L,R	OB32193A	Semi VR 10K	R187L,R	OB09711A	RK 27K 1/6W J	C164L,R	OB41386A	CPP 100P 50V J
VR106	OB32193A	Semi VR 10K	R188L,R	OB09685A	RK 2.2K 1/6W J	C165	OB41298A	CML 0.1μ 50V J
VR107L,R	OB32194A	Semi VR 20K	R189L,R	OB09655A	RK 120 1/6W J	C166	OB40092A	CE 220μ 25V
VR108L,R	OB32194A	Semi VR 20K	R190L,R	OB25301A	RM 12.7K 1/4W F	S100	OB70177A	Push Switch
VR109L,R	OB32194A	Semi VR 20K	R191L,R	OB25293A	RM 10.5K 1/4W F	S101	OB70177A	Push Switch
VR110	OB30127A	VR 100Kax2	R192L,R	OB09749A	RK 1M 1/6W J	S102	OB70177A	Push Switch
VR111L,R	OB32191A	Semi VR 2K	R193L,R	OB09716A	RK 43K 1/6W J	S103	OB70176A	Push Switch
VR112L,R	OB32192A	Semi VR 5K	R194L,R	OB09716A	RK 43K 1/6W J	S104	OB70176A	Push Switch
R100L,R	OB09653A	RK 100 1/6W J	R195L,R	OB09709A	RK 22K 1/6W J	S105	OB70176A	Push Switch
R101L,R	OB09725A	RK 100K 1/6W J	R196	OB09725A	RK 100K 1/6W J	JS100	OB84359A	Header 3P
R102L,R	OB25291A	RM 10K 1/4W F	R197	OB09677A	RK 1K 1/6W J			Serial No.:
R103L,R	OB25260A	RM 4.75K 1/4W F	R198L,R	OB09717A	RK 47K 1/6W J			A32705801 -
R104L,R	OB25236A	RM 2.67K 1/4W F	R199L,R	OB09685A	RK 2.2K 1/6W J			Header 2P
R105L,R	OB09749A	RK 1M 1/6W J	R200L,R	OB09718A	RK 51K 1/6W J			Serial Nos.:
R106L,R	OB09749A	RK 1M 1/6W J	R201L,R	OB09725A	RK 100K 1/6W J			A32701001 - 05800
R107L,R	OB25280A	RM 7.68K 1/4W F	R202L,R	OB09637A	RK 22 1/6W J			6P-T Post
R108L,R	OB09709A	RK 22K 1/6W J	R203	OB09677A	RK 1K 1/6W J	CN3	OB84288A	6P-T Post
R109L,R	OB09689A	RK 3.3K 1/6W J	R204	OB09725A	RK 100K 1/6W J	CN10	OB81463A	6P-T Post
R110L,R	OB09683A	RK 3.3K 1/6W J	R205L,R	OB09677A	RK 1K 1/6W J	CN11	OB84289A	6P-T Post
R111,112	OB09683A	RK 1.8K 1/6W J	R206L,R	OB09749A	RK 1M 1/6W J	CN13	OB81464A	7P-T Post
R113L,R	OB09673A	RK 680 1/6W J	R207L,R	OB09677A	RK 1K 1/6W J	CN14	OB81463A	6P-T Post
R114L,R	OB09700A	RK 9.1K 1/6W J	R208L,R	OB09741A	RK 470K 1/6W J	CN15	OB81459A	2P-T Post
R115L,R	OB09698A	RK 7.5K 1/6W J	R209L,R	OB09696A	RK 6.2K 1/6W J	CN16	OB81460A	3P-T Post
R116L,R	OB25324A	RM 22.1K 1/4W F	R210	OB09701A	RK 10K 1/6W J	CN17	OB84280A	3P-T Post
R117L,R	OB25244A	RM 3.24K 1/4W F	R211	OB09725A	RK 100K 1/6W J	TP100	OB81460A	3P-T Post
R118L,R	OB25251A	RM 3.83K 1/4W F	R212L,R	OB09682A	RK 1.6K 1/6W J		OE00868A	BT3x8 @ Binding (2)
R119L,R	OB25171A	RM 562 1/4W F	R213L,R	OB09653A	RK 100 1/6W J			Volume Holder (1)
R120L,R	OB09749A	RK 1M 1/6W J	R214	OB24023A	Fuse Resistor 1			Main Shield (1)
R121L,R	OB25287A	RM 9.09K 1/4W F	R215,216	OB09717A	RK 47K 1/6W J			
R122L,R	OB25195A	RM 1K 1/4W F	C100L,R	OB40756A	CE 1μ 50V (LN)			
R123L,R	OB09681A	RK 1.5K 1/6W J	C101L,R	OB41279A	CML 2700P 50V J			

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauratron.co.uk

8.2. Power Supply & Logic P.C.B. Ass'y

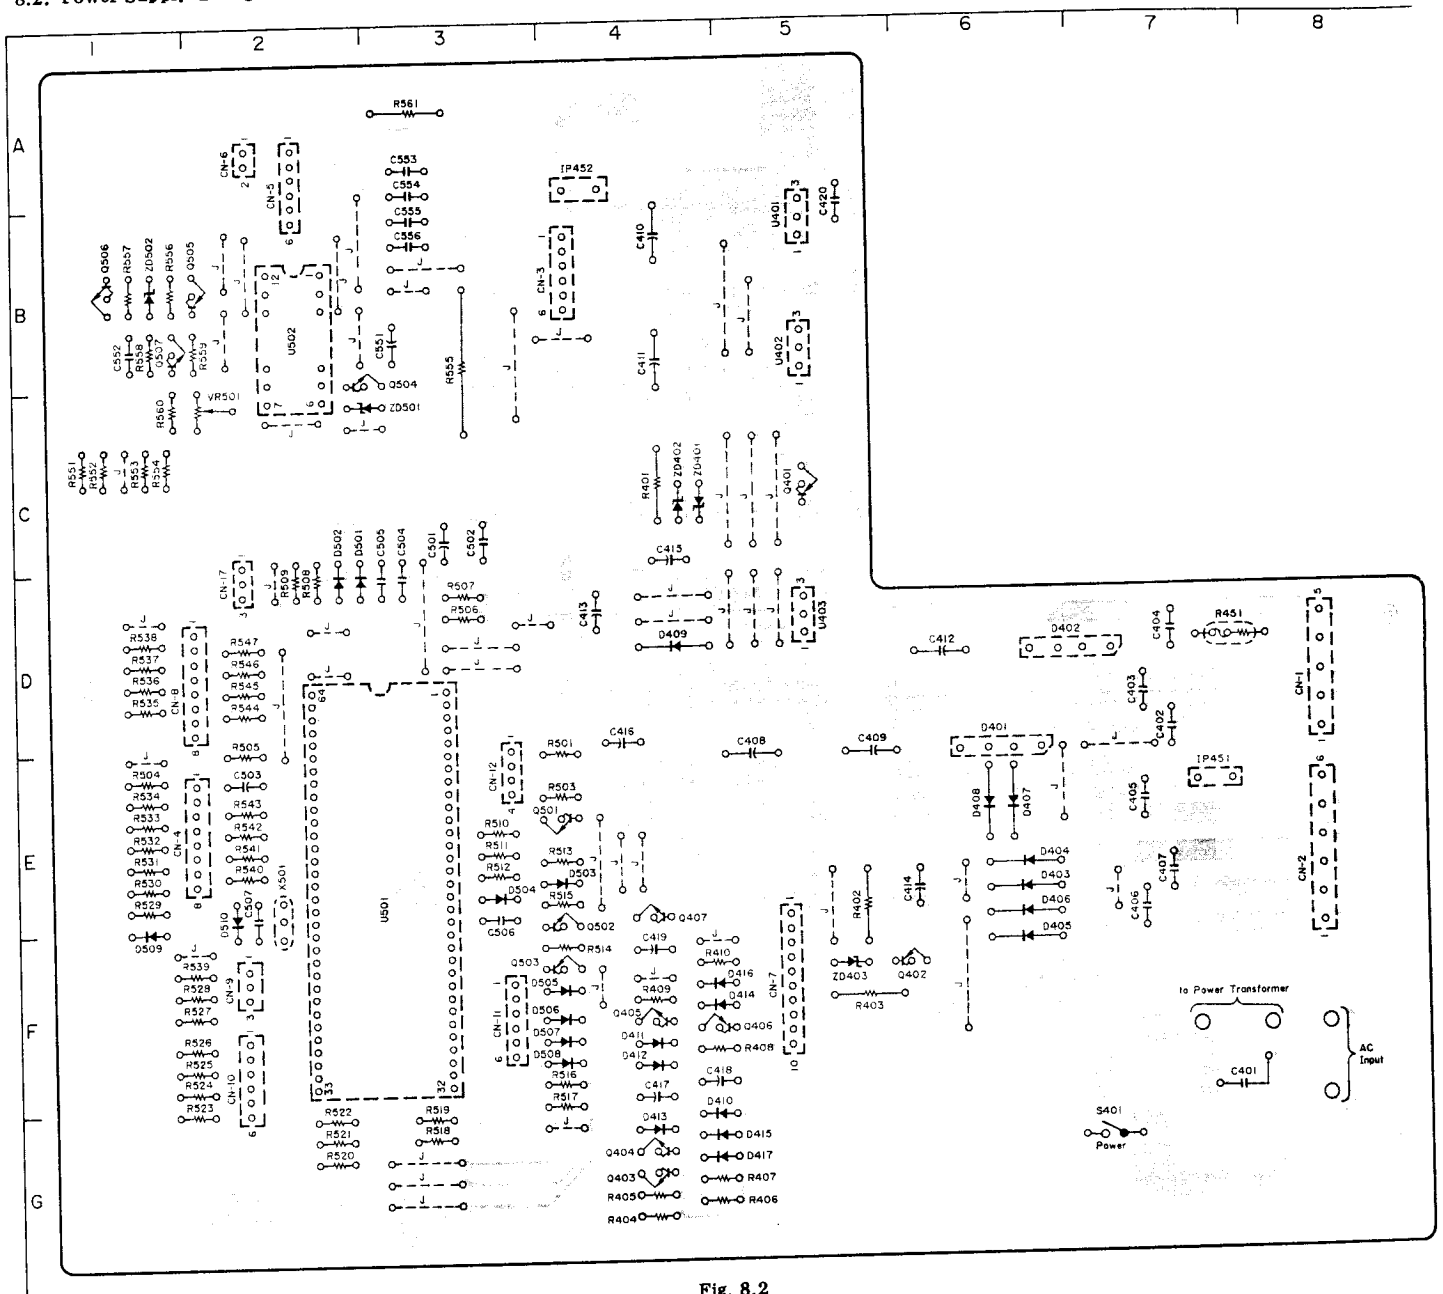


Fig. 8.2

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
U401	B-5	Q505	B-2	D411	F-4
U402	B-5	Q506	B-1	D412	F-4
U403	D-5	Q507	B-1	D413	G-4
U501	E-3	ZD401	C-4	D414	F-4
U502	B-2	ZD402	C-4	D415	G-4
IP451	E-7	ZD403	F-5	D416	F-4
IP452	A-4	ZD501	C-3	D417	G-4
Q401	C-5	ZD502	B-1	D501	D-2
Q402	F-6	D401	E-6	D502	D-2
Q403	G-4	D402	D-6	D503	E-4
Q404	G-4	D403	E-6	D504	E-3
Q405	F-4	D404	E-6	D505	F-4
Q406	F-4	D405	F-6	D506	F-4
Q407	E-4	D406	E-6	D507	F-4
Q501	E-4	D407	E-6	D508	F-4
Q502	E-4	D408	E-6	D509	F-1
Q503	F-4	D409	D-4	D510	E-2
Q504	B-3	D410	G-4		

*: Unstocked parts.

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
8.2. Power Supply & Logic P.C.B. Ass'y			— Power Supply —		
	* BA07944A	Power Supply & Logic P.C.B. Ass'y (USA, CAN, EP, UK, AUS, SAU, OTR)	Q402	OB06303A	TR 2SB772
	* BA07961A	Power Supply & Logic P.C.B. Ass'y (JPN)	Q403,404	OB10030A	TR 2SC1740S
	— Logic —		Q405	OB10062A	TR DTC144ES
			Q406	OB10053A	TR DTA144ES
			Q407	OB10062A	TR DTC144ES
			IP451	OB11725A	IC ICP-N10-T104RC 0.4A
			IP452	OB11638A	IC ICP-N20-T104RC 0.8A
U501	OB11861A	IC μ PD75106CW	ZD401	OB12314A	ZD 12V
U502	OB11368A	IC LB1649	ZD402	OB12317A	MTZ12B
Q501	OB10068A	TR DTC114ES	ZD403	OB12285A	ZD 13V
Q502	OB10030A	TR 2SC1740S			MTZ13B
Q503	OB10053A	TR DTA144ES	D401,402	OB06282A	ZD 4.7V
Q504	OB10062A	TR DTC144ES			MTZ4.7A
Q505	OB10026A	TR 2SA933S	D403,404	OB12365A	SiD DBA10B/DBA10C
Q506	OB10062A	TR DTC144ES	D405,406	OB12365A	SiD 1SR35-100A
Q507	OB10030A	TR 2SC1740S	D407,408	OB12365A	SiD 1SR35-100A
ZD501	OB12290A	ZD 5.6V	D409	OB12365A	SiD 1SR35-100A
ZD502	OB12288A	ZD 5.1V	D410,411	OB06398A	SiD 1SS176
D501,502	OB06398A	SiD 1SS176	D412,413	OB06398A	SiD 1SS176
D503,504	OB06398A	SiD 1SS176	D414,415	OB06398A	SiD 1SS176
D505,506	OB06398A	SiD 1SS176	D416,417	OB06398A	SiD 1SS176
D507,508	OB06398A	SiD 1SS176	R401	OB05629A	RK 2.7K 1/4W J
D509,510	OB06398A	SiD 1SS176	R402	OB01681A	RK 3.3K 1/4W J
X501	OB92033A	Crystal 4.0MHz	R403	OB01706A	RK 47 1/4W J
VR501	OB32192A	Semi VR 5K	R404	OB09709A	RK 22K 1/6W J
R501	OB09701A	RK 10K 1/6W J	R405	OB09703A	RK 12K 1/6W J
R503	OB09701A	RK 10K 1/6W J	R406	OB09733A	RK 220K 1/6W J
R504	OB09689A	RK 3.3K 1/6W J	R407	OB09725A	RK 100K 1/6W J
R505,506	OB09677A	RK 1K 1/6W J	R408	OB09717A	RK 47K 1/6W J
R507	OB09677A	RK 1K 1/6W J	R409	OB09733A	RK 220K 1/6W J
R508,509	OB09701A	RK 10K 1/6W J	R410	OB09701A	RK 10K 1/6W J
R510	OB09677A	RK 1K 1/6W J	R451	OB24023A	Fuse Resistor 1
R511,512	OB09677A	RK 1K 1/6W J	C401	OB41825A	CC 4700P 400V (USA, CAN, EP, UK, AUS, SAU, OTR)
R513	OB09693A	RK 4.7K 1/6W J			CC 4700P 250V (JPN)
R514,515	OB09701A	RK 10K 1/6W J			CC 0.1 μ 50V Z
R516	OB09693A	RK 4.7K 1/6W J			CC 0.1 μ 50V Z
R517	OB09701A	RK 10K 1/6W J			CC 0.1 μ 50V Z
R518,519	OB09701A	RK 10K 1/6W J			CE 3300 μ 25V
R520,521	OB09701A	RK 10K 1/6W J			CE 2200 μ 25V
R522,523	OB09701A	RK 10K 1/6W J			CE 3300 μ 16V
R524,525	OB09701A	RK 10K 1/6W J			CE 4700 μ 16V
R526	OB09701A	RK 10K 1/6W J			CE 1000 μ 16V
R527,528	OB09693A	RK 4.7K 1/6W J			CE 220 μ 50V
R529	OB09701A	RK 10K 1/6W J			CE 100 μ 35V
R530	OB09701A	RK 10K 1/6W J			CE 470 μ 25V
R531,532	OB09701A	RK 10K 1/6W J			CE 2.2 μ 50V (LN)
R533,534	OB09701A	RK 10K 1/6W J			CE 0.47 μ 50V (LN)
R535	OB09701A	RK 10K 1/6W J			CE 0.33 μ 50V (LN)
R536,537	OB09701A	RK 10K 1/6W J			CC 0.1 μ 50V Z
R538	OB09701A	RK 10K 1/6W J			OB71012A
R539	OB09677A	RK 1K 1/6W J			Power Switch
R540,541	OB09677A	RK 1K 1/6W J			
R542,543	OB09677A	RK 1K 1/6W J			
R544,545	OB09677A	RK 1K 1/6W J			
R546,547	OB09677A	RK 1K 1/6W J			
R551,552	OB09677A	RK 1K 1/6W J			
R553,554	OB09677A	RK 1K 1/6W J			
R555	OB24273A	RF 27 3W			
R556	OB09701A	RK 10K 1/6W J			
R557	OB09681A	RK 1.5K 1/6W J			
R558	OB09695A	RK 5.6K 1/6W J			
R559	OB09717A	RK 47K 1/6W J			
R560	OB09677A	RK 1K 1/6W J			
R561	OB05575A	RK 560 1/4W J			
C501	OB40078A	CE 100 μ 16V			
C502	OB47117A	CC 0.1 μ 50V Z			
C503	OB40023A	CML 0.22 μ 50V			
C504,505	OB41553A	CC 0.01 μ 25V Z			
C506,507	OB41944A	CC 1000P 50V K			
C551	OB40078A	CE 100 μ 16V			
C552	OB41286A	CML 0.01 μ 50V			
C553,554	OB41553A	CC 0.01 μ 25V Z			
C555,556	OB41553A	CC 0.01 μ 25V Z			
	— Heat Sink —				
U401	OB11862A	IC NJM7812FA			
U402	OB11863A	IC NJM7912FA			
U403	OB11753A	IC NJM7805FA			
Q401	OB06451A	TR 2SB1015			
	OE00766A	M3x8 \oplus Binding (4)			
	OJ06256A	Heat Sink (1)			

8.3. Timer Switch P.C.B. Ass'y

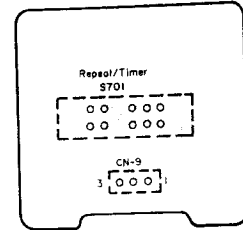


Fig. 8.3

8.4. Headphone P.C.B. Ass'y

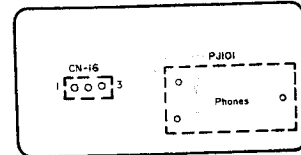


Fig. 8.4

Schematic Ref. No.	Part No.	Description
8.3. Timer Switch P.C.B. Ass'y		
	* BA07947A	Timer Switch P.C.B. Ass'y
S701	OB60837B	Timer Switch P.C.B. Slide Switch 2-4
CN9	OB83899A	3P Connector Ass'y
8.4. Headphone P.C.B. Ass'y		
	* BA07960A	Headphone P.C.B. Ass'y
PJ101	OB60832B	Headphone P.C.B. Headphone Jack
CN16	OB81478A	Slide Switch 2-4
	OB83904A	3P Connector Ass'y
<p>For Service Manuals Contact MAURITRON TECHNICAL SERVICES 8 Cherry Tree Rd, Chinnor Oxon OX9 4QY Tel: 01844-351694 Fax: 01844-352554 Email: enquiries@mauritron.co.uk</p>		

8.5. Pin Jack P.C.B. Ass'y

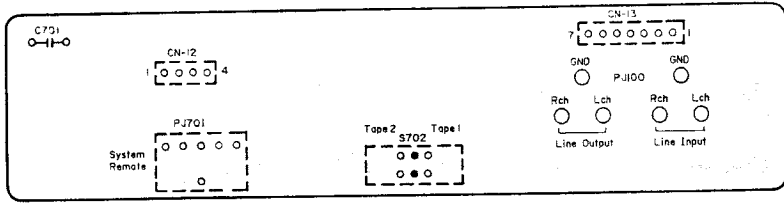


Fig. 8.5

8.6. Shut-off P.C.B. Ass'y

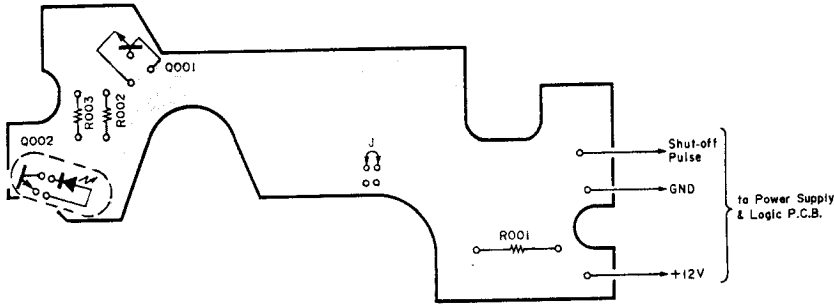


Fig. 8.6

8.7. Control Switch & Display P.C.B. Ass'y

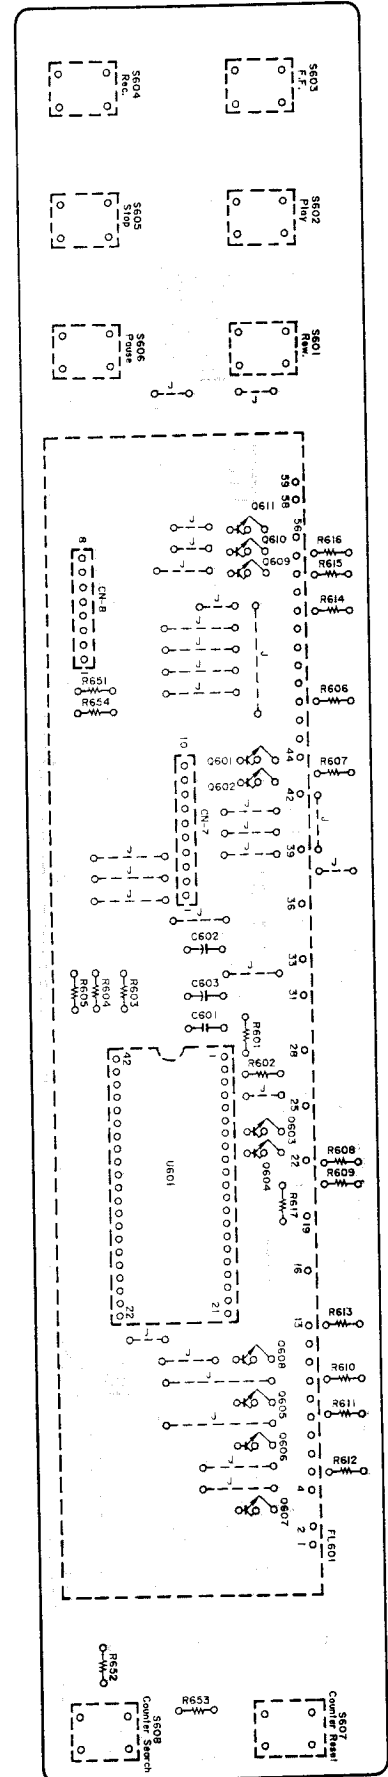


Fig. 8.7

*: Unstocked parts.

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
8.5. Pin Jack P.C.B. Ass'y			8.7. Control Switch & Display P.C.B. Ass'y		
*	BA07946A	Pin Jack P.C.B. Ass'y	*	BA07945A	Control Switch & Display P.C.B. Ass'y
C701	OB60836B	Pin Jack P.C.B.	OB60835B	Control Switch & Display P.C.B.	
S702	OB41553A	CC 0.01μ	U601	IC MSC7112-01SS	
PJ100	OB70178A	Slide Switch 2-2	Q601,602	OB10030A	TR 2SC1740S
PJ701	OB84334A	Pin Jack 4P	Q603,604	OB10030A	TR 2SC1740S
CN12	OB84028A	Stereo Mini	Q605,606	OB10030A	TR 2SC1740S
CN13	OB81461A	4P-T Post	Q607,608	OB10030A	TR 2SC1740S
	OB83903A	7P Connector Ass'y	Q609,610	OB10030A	TR 2SC1740S
	OE03355A	Earth Plate (1)	Q611	OB10030A	TR 2SC1740S
8.6. Shut-off P.C.B. Ass'y			R601	OB09713A	RK 33K 1/6W J
*	CA80011B	Shut-off P.C.B. Ass'y	R602	OB09701A	RK 10K 1/6W J
Q001	OC80047A	Shut-off P.C.B.	R603,604	OB09677A	RK 1K 1/6W J
Q002	OB06388A	TR 2SC2812	R605	OB09677A	RK 1K 1/6W J
	OB06389A	Photo Reflector	R606,607	OB09717A	RK 47K 1/6W J
		NJL5141	R608	OB09717A	RK 47K 1/6W J
R001	OC81330A	RM 750	R609,610	OB09717A	RK 47K 1/6W J
R002	OB09841A	RK 15K	R611,612	OB09717A	RK 47K 1/6W J
R003	OB09840A	RK 680	R613,614	OB09717A	RK 47K 1/6W J
			R615,616	OB09629A	RK 10 1/6W J
			R617	OB09701A	RK 10K 1/6W J
			R651	OB09693A	RK 4.7K 1/6W J
			R652	OB09705A	RK 15K 1/6W J
			R653	OB09701A	RK 10K 1/6W J
			R654	OB41974A	CC 100P 50V J
			C601	OB40158A	CE 100μ 6.3V
			C602	OB40173A	CE 1μ 50V
			C603	OB70161A	Tact Switch
			S601,602	OB70161A	Tact Switch
			S603,604	OB70161A	Tact Switch
			S605,606	OB70161A	Tact Switch
			S607,608	OB70161A	Tact Switch
			CN7	OB83897A	10P Connector Ass'y
			CN8	OB83898A	8P Connector Ass'y
			FL601	OB90461A	FL Display
				OJ06219C	FL Cushion (2)
				OJ06238A	FL Stopper (2)

9. SCHEMATIC DIAGRAMS

9.1. IC Block Diagrams


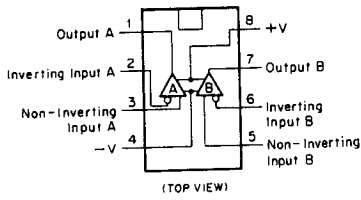


Fig. 9.1.1 Operational Amp. IC 4558D, 4558DD, 4556D, 2043DD

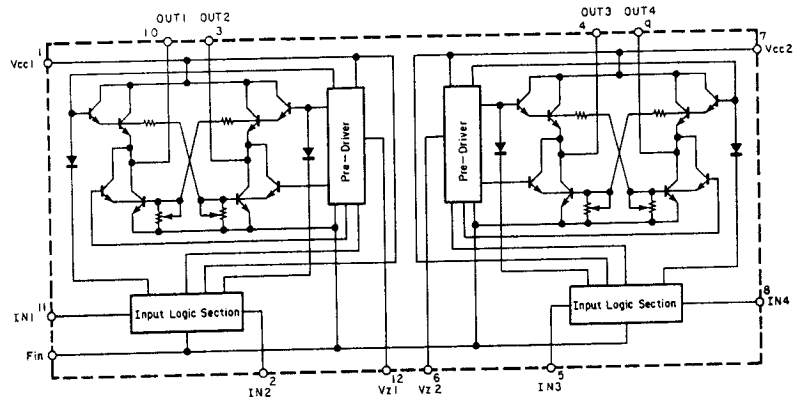

INPUT	OUTPUT	OPERATION		
IN1/3	IN2/4	OUT1/3	OUT2/4	
0	0	0	0	Braking
1	0	1	0	Forward (Reverse)
0	1	0	1	Reverse (Forward)
1	1	0	0	Braking

Fig. 9.1.2 Motor Driver IC LB1649

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351894 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

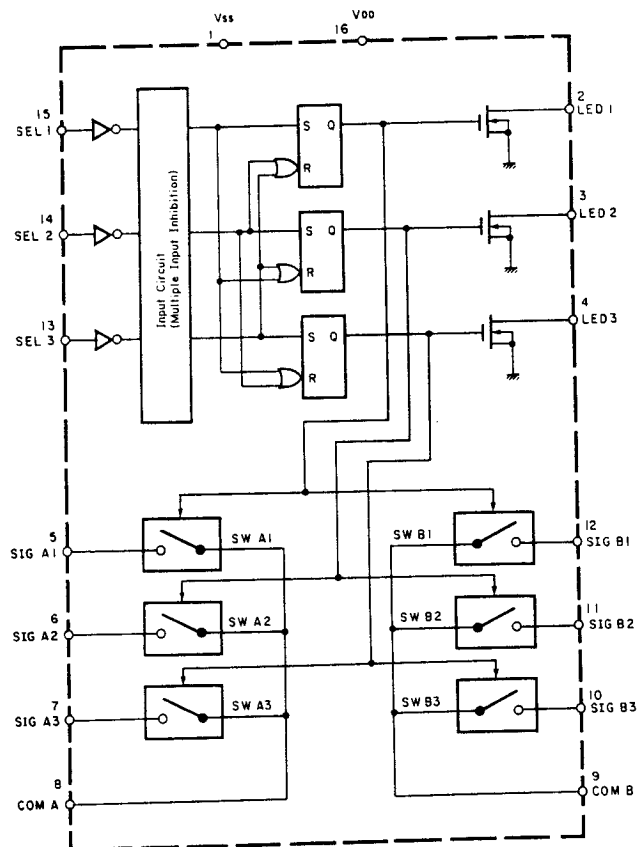
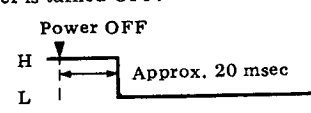
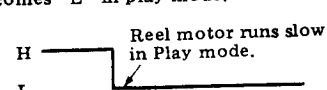
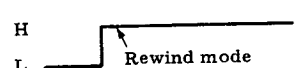
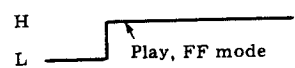
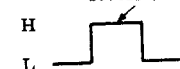
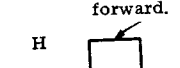
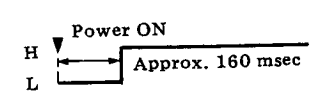


Fig. 9.1.3 Analog Switch Selector TC9145P

U501 μ PD75106CW (Microprocessing Unit (MPU))

Pin No.	Signal Name	In/Out	Function
1 2	—	I	Not used. Connected to GND.
3	REM	I	Remote control receiver signal input.
4	RELP	I	Reel motor pulse input. Pulse train is input while take-up reel hub is rotating, i.e., tape is running.
5	LVR	I	Rch input for level meter. Input level is A/D-converted in this IC and the converted result is transferred to the Display Control IC (U601) via pin 13 (DDAT).
6	LVL	I	Lch input for level meter. The function is the same as above LVR (Rch).
7	KS1	I	Record switch input. "L" when pressed.
8	KS0	I	Stop/Counter Search/Counter Reset switch input. Stop switch ON: 0 V Counter Search switch ON: 1.6 V Counter Reset switch ON: 3.3 V
9	MREM	I	System remote mode signal input. "L": "Tape 1" is selected. "H": "Tape 2" is selected.
10	HD2/3	I	Connected to GND.
11	—	O	Not used. (Open)
12	DCLK	O	Clock for serial data DDAT at pin 13.
13	DDAT	O	Serial data for Display Control IC (U601), which includes display data and control information.
14	DEN	O	Enable signal to Display Control IC (U601). Active "H".
15 16 17	—	I	Not used. Connected to GND.
18	POFF	I	Power OFF signal input. Becomes "L" when power is turned OFF. 
19	LMUT	O	Line mute signal output. Active "L".
20	RMUT	O	Record mute signal output. Active "L". Record mute is released only in Record/Play mode.
21	BIAS	O	Bias ON/OFF signal output. "L": Bias ON.
22 23 24	—	O	Not used. (Open)
25	HPLY	O	Record/Playback head select signal output. "L": Playback mode. "H": Record mode.
26	HREC	O	Record/Playback head select signal output. L: Record mode. "L": Playback mode
27	RMSP	O	Reel motor speed select signal output. Becomes "L" in play mode. 

Pin No.	Signal Name	In/Out	Function															
28	—	O	Not used. (Open)															
29	RMR	O	Reel motor drive control signal output. Becomes "H" in Rewind mode. 															
30	RMF	O	Reel motor drive control signal output. Becomes "H" in Play or Fast Forward mode. 															
31	NC	—	No connection.															
32	VDD	—	Supplied with +5 V.															
33 34	—	O	Not used. (Open)															
35	ASMR	O	Control motor reverse drive signal output. Becomes "H" when turning the control motor reverse (in the direction of Play-Pause-Stop-FF/REW). Turns control motor reverse. 															
36	ASMF	O	Control motor forward drive signal output. Becomes "H" when turning the control motor forward (in the direction of FF/REW-Stop-Pause-Play). Turns control motor forward. 															
37 38	TAP B TAP A	I	Tape type select signal input. <table border="1" data-bbox="1055 1120 1380 1254"> <thead> <tr> <th>Type</th> <th>TAP A</th> <th>TAP B</th> </tr> </thead> <tbody> <tr> <td>Type I</td> <td>H</td> <td>H</td> </tr> <tr> <td>Type II</td> <td>L</td> <td>H</td> </tr> <tr> <td>Type IV</td> <td>H/L</td> <td>L</td> </tr> </tbody> </table>	Type	TAP A	TAP B	Type I	H	H	Type II	L	H	Type IV	H/L	L			
Type	TAP A	TAP B																
Type I	H	H																
Type II	L	H																
Type IV	H/L	L																
39 40	B/C DLBY	I	Dolby NR mode select signal input. <table border="1" data-bbox="1055 1299 1412 1433"> <thead> <tr> <th>Mode</th> <th>DLBY</th> <th>B/C</th> </tr> </thead> <tbody> <tr> <td>Dolby NR OFF</td> <td>H</td> <td>H/L</td> </tr> <tr> <td>Dolby NR B</td> <td>L</td> <td>H</td> </tr> <tr> <td>Dolby NR C</td> <td>L</td> <td>L</td> </tr> </tbody> </table>	Mode	DLBY	B/C	Dolby NR OFF	H	H/L	Dolby NR B	L	H	Dolby NR C	L	L			
Mode	DLBY	B/C																
Dolby NR OFF	H	H/L																
Dolby NR B	L	H																
Dolby NR C	L	L																
41	MPX	I	MPX filter switch signal input. "L": MPX Filter ON, "H"=OFF															
42 43	TIM B TIM A	I	Repeat/Timer switch signal input. <table border="1" data-bbox="1055 1545 1412 1702"> <thead> <tr> <th>Mode</th> <th>TIM A</th> <th>TIM B</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>H</td> <td>H</td> </tr> <tr> <td>Auto Repeat</td> <td>L</td> <td>H</td> </tr> <tr> <td>Timer Play</td> <td>H</td> <td>L</td> </tr> <tr> <td>Timer Record</td> <td>L</td> <td>L</td> </tr> </tbody> </table>	Mode	TIM A	TIM B	OFF	H	H	Auto Repeat	L	H	Timer Play	H	L	Timer Record	L	L
Mode	TIM A	TIM B																
OFF	H	H																
Auto Repeat	L	H																
Timer Play	H	L																
Timer Record	L	L																
44	REC PRO	I	Record protect switch signal input. "H": Recording is allowed.															
45	RESET	I	System reset signal input. Active "L". 															




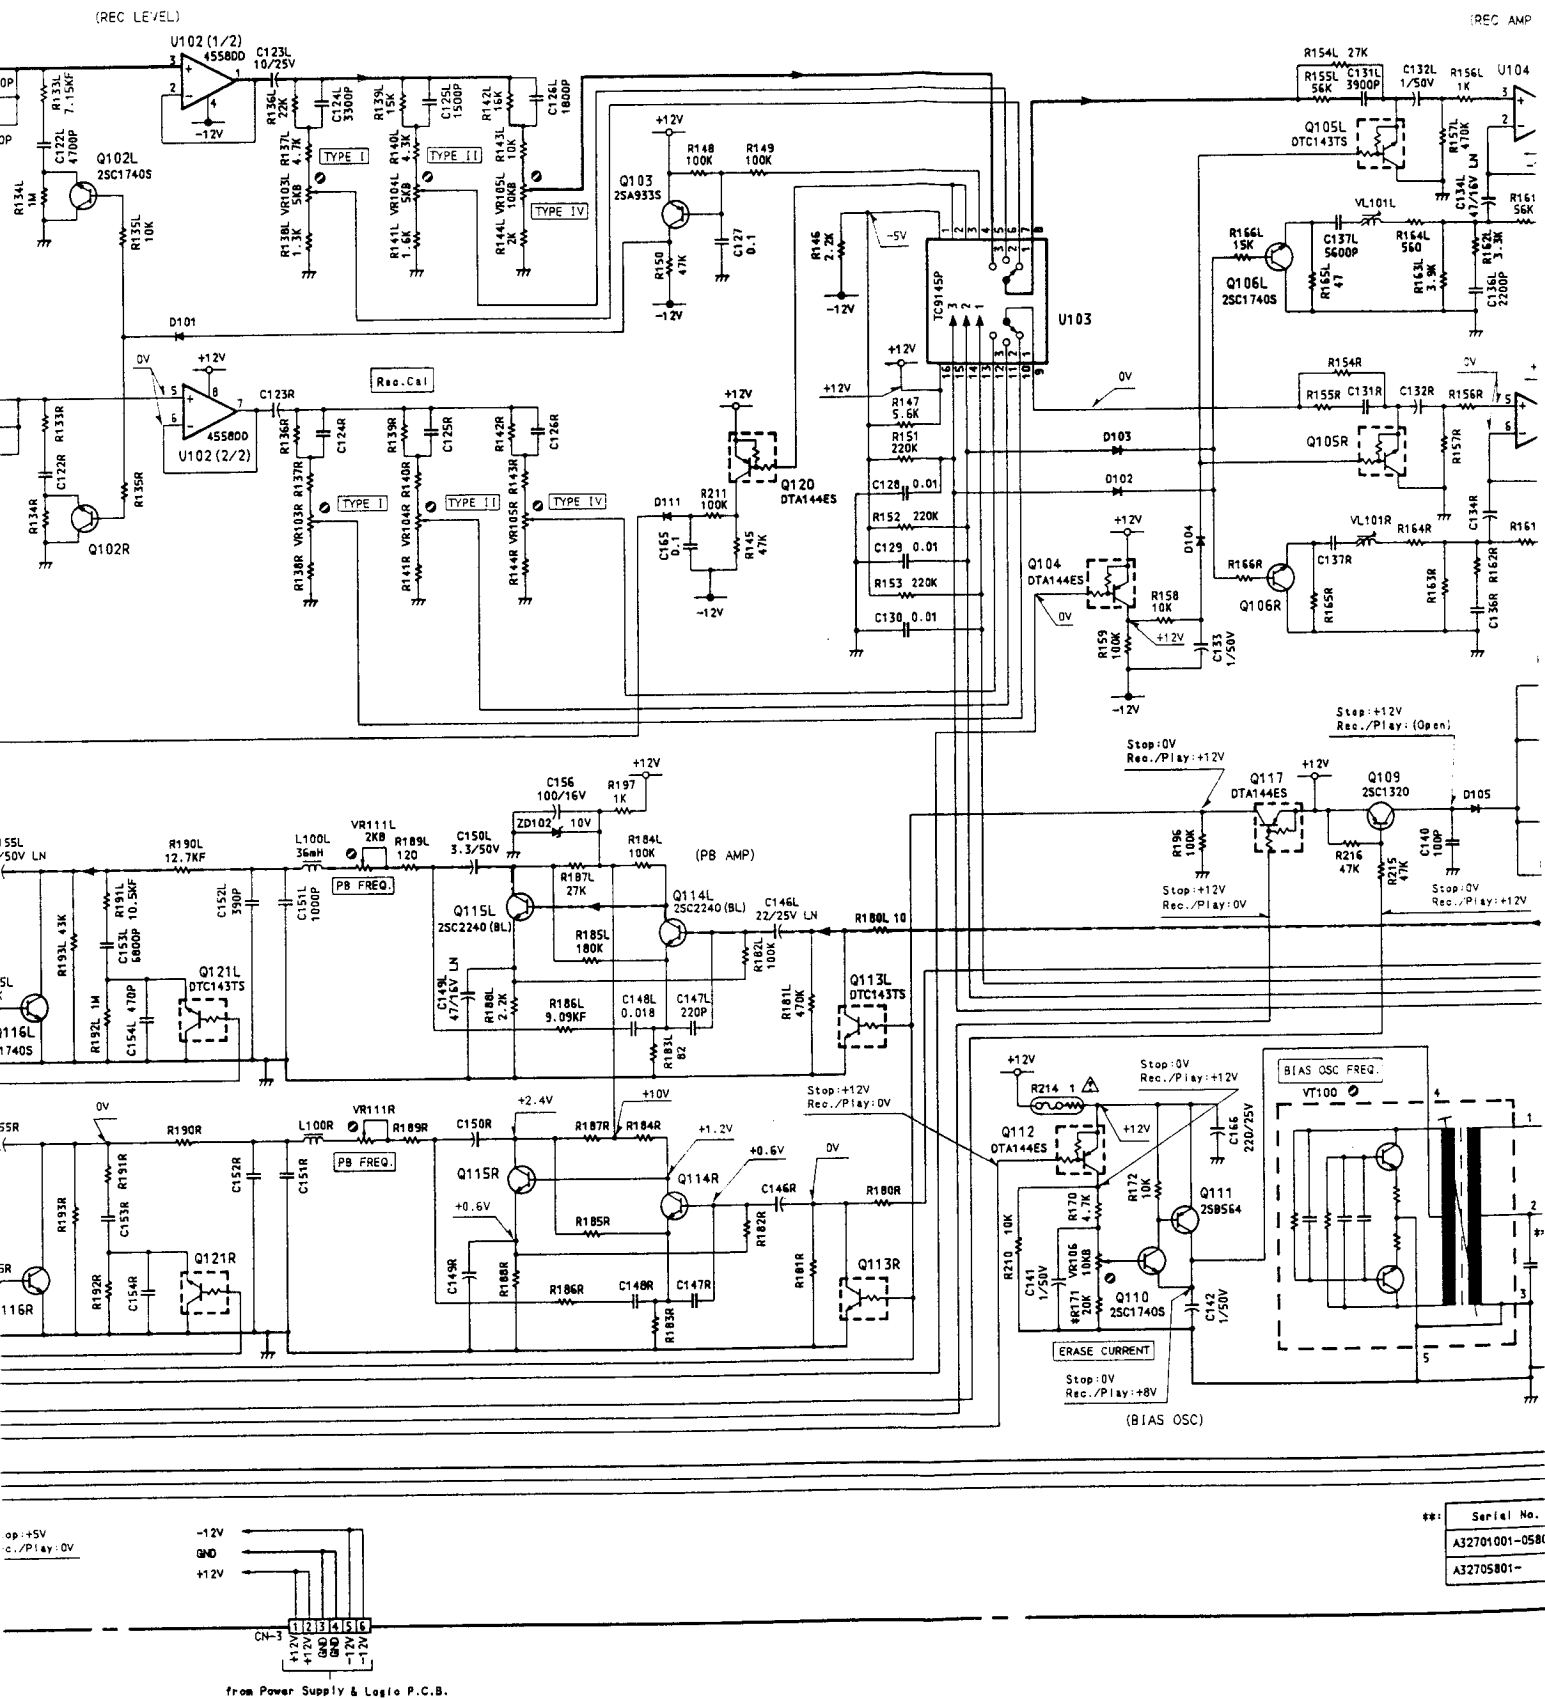



Fig. 9.2.1


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

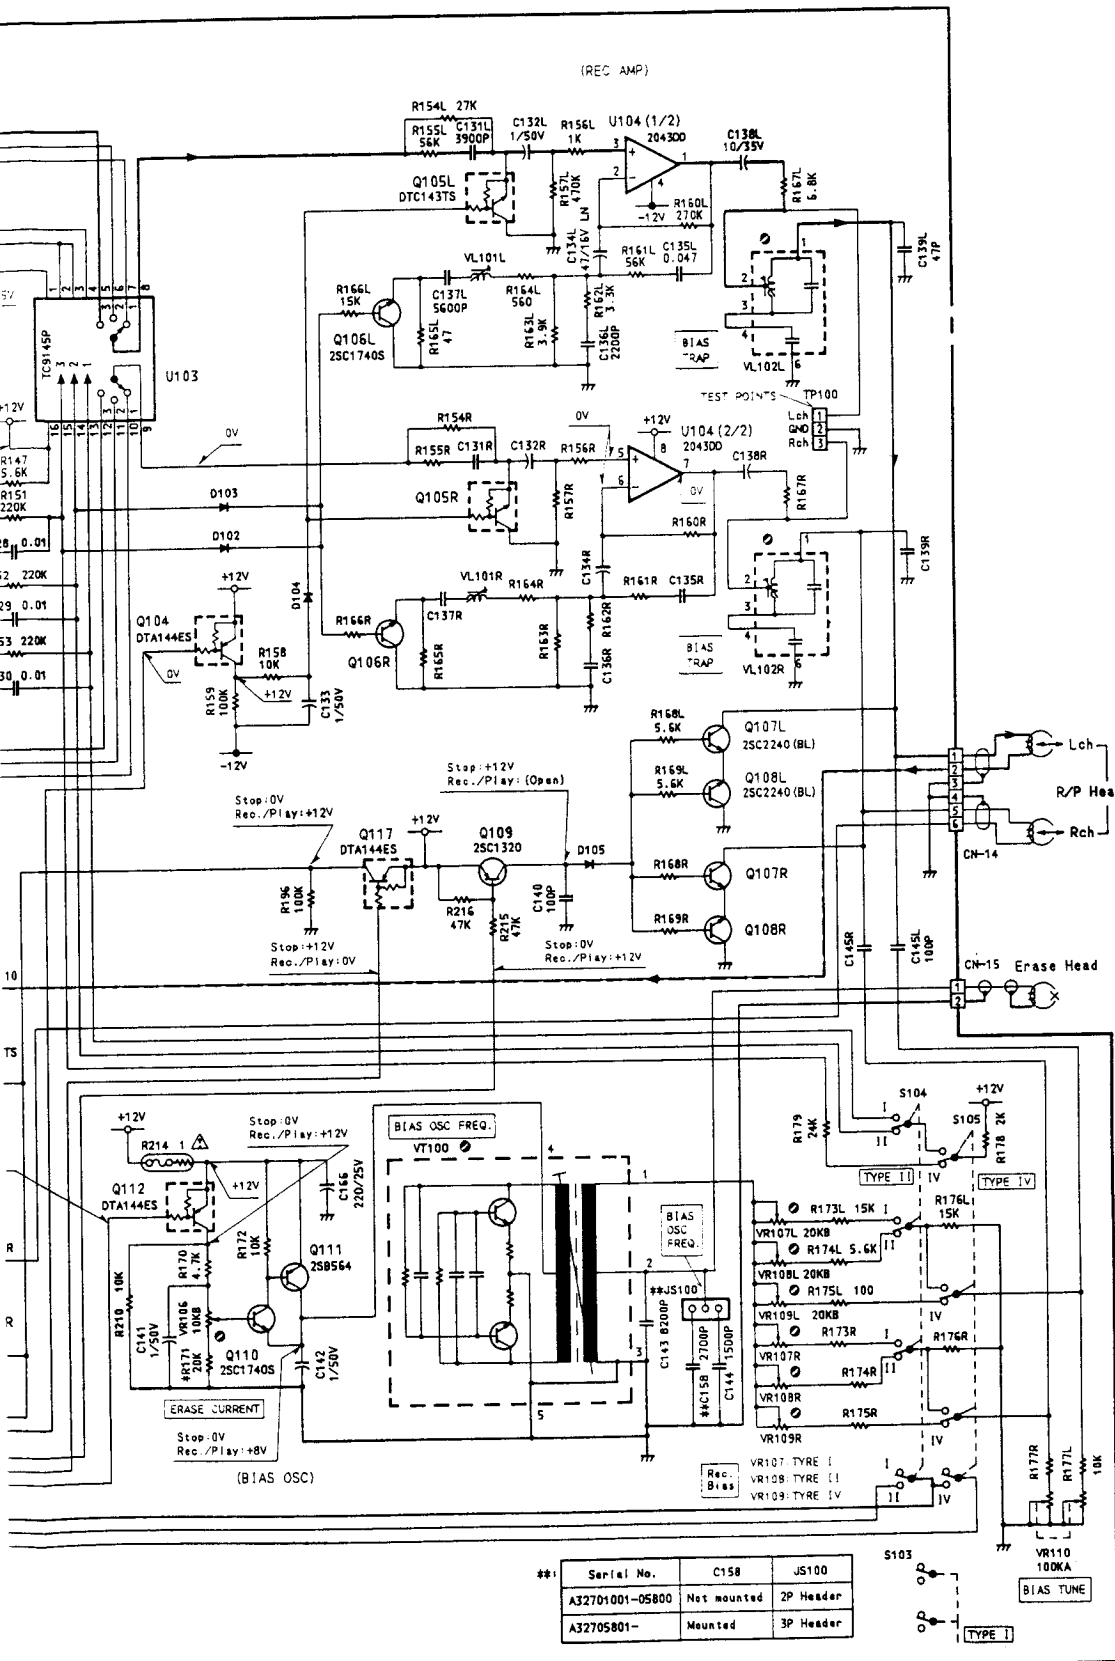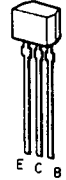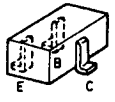



- 


2SA933S
2SC1740S
DTA144ES
DTC114ES
DTC143TS
DTC144ES
- 

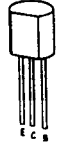
2SC2812
- 

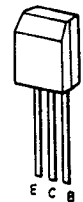2SA1320
2SC2240
- 

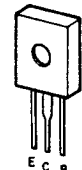2SB564
- 

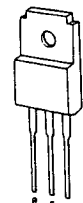2SB772
- 

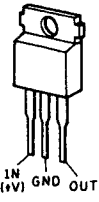2SB1015
- 

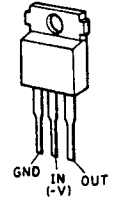
7812
7805
- 

7912

**:

Serial No.	C158	JS100
A32701001-05800	Not mounted	2P Header
A32705801-	Mounted	3P Header


*: Parts marked with * show typical value.

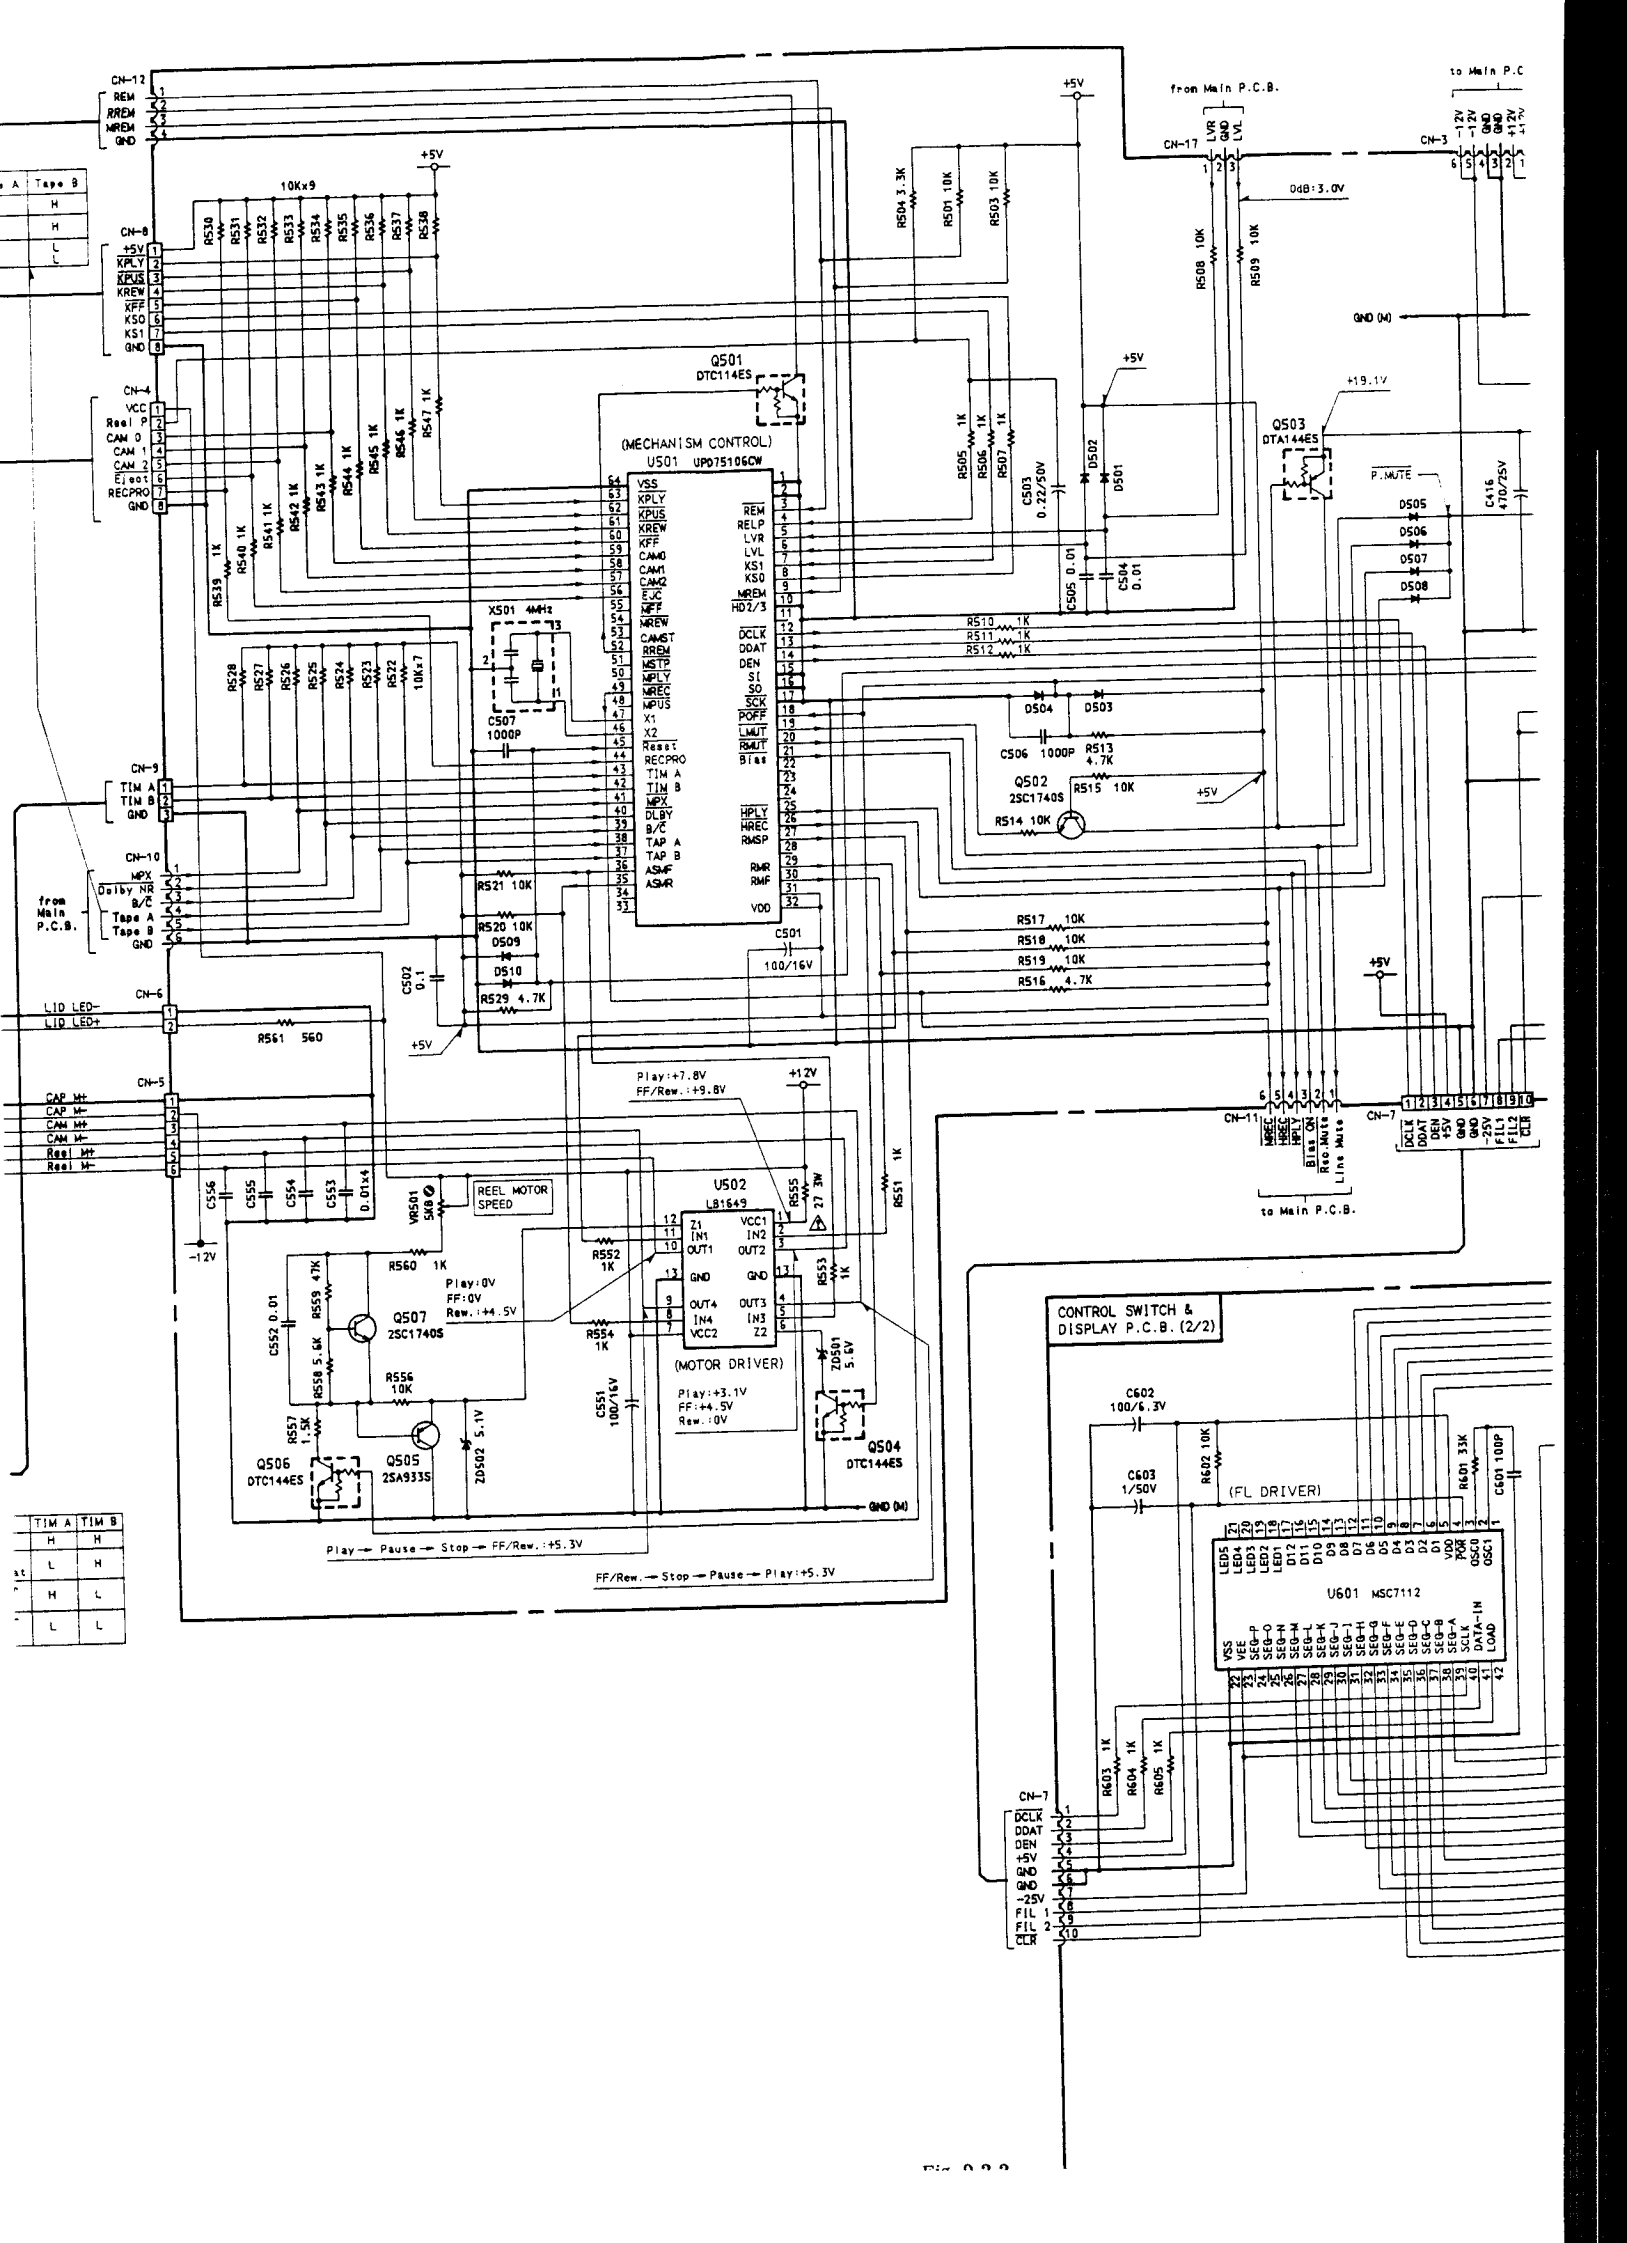


A	Type B
H	H
L	L


TIM A	TIM B
H	H
L	H
H	L
L	L

CONTROL SWITCH & DISPLAY P.C.B. (2/2)

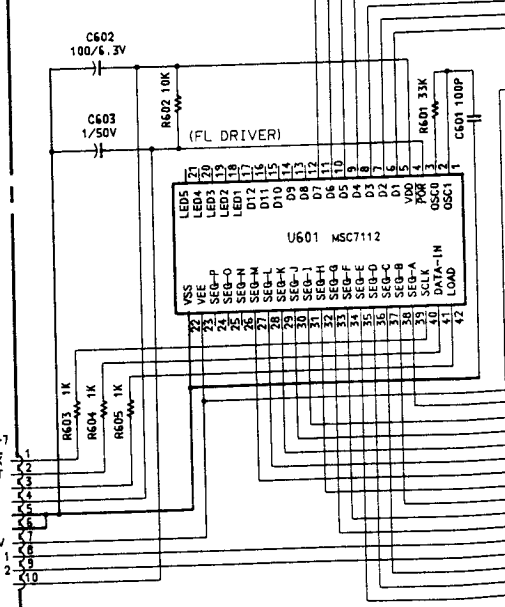

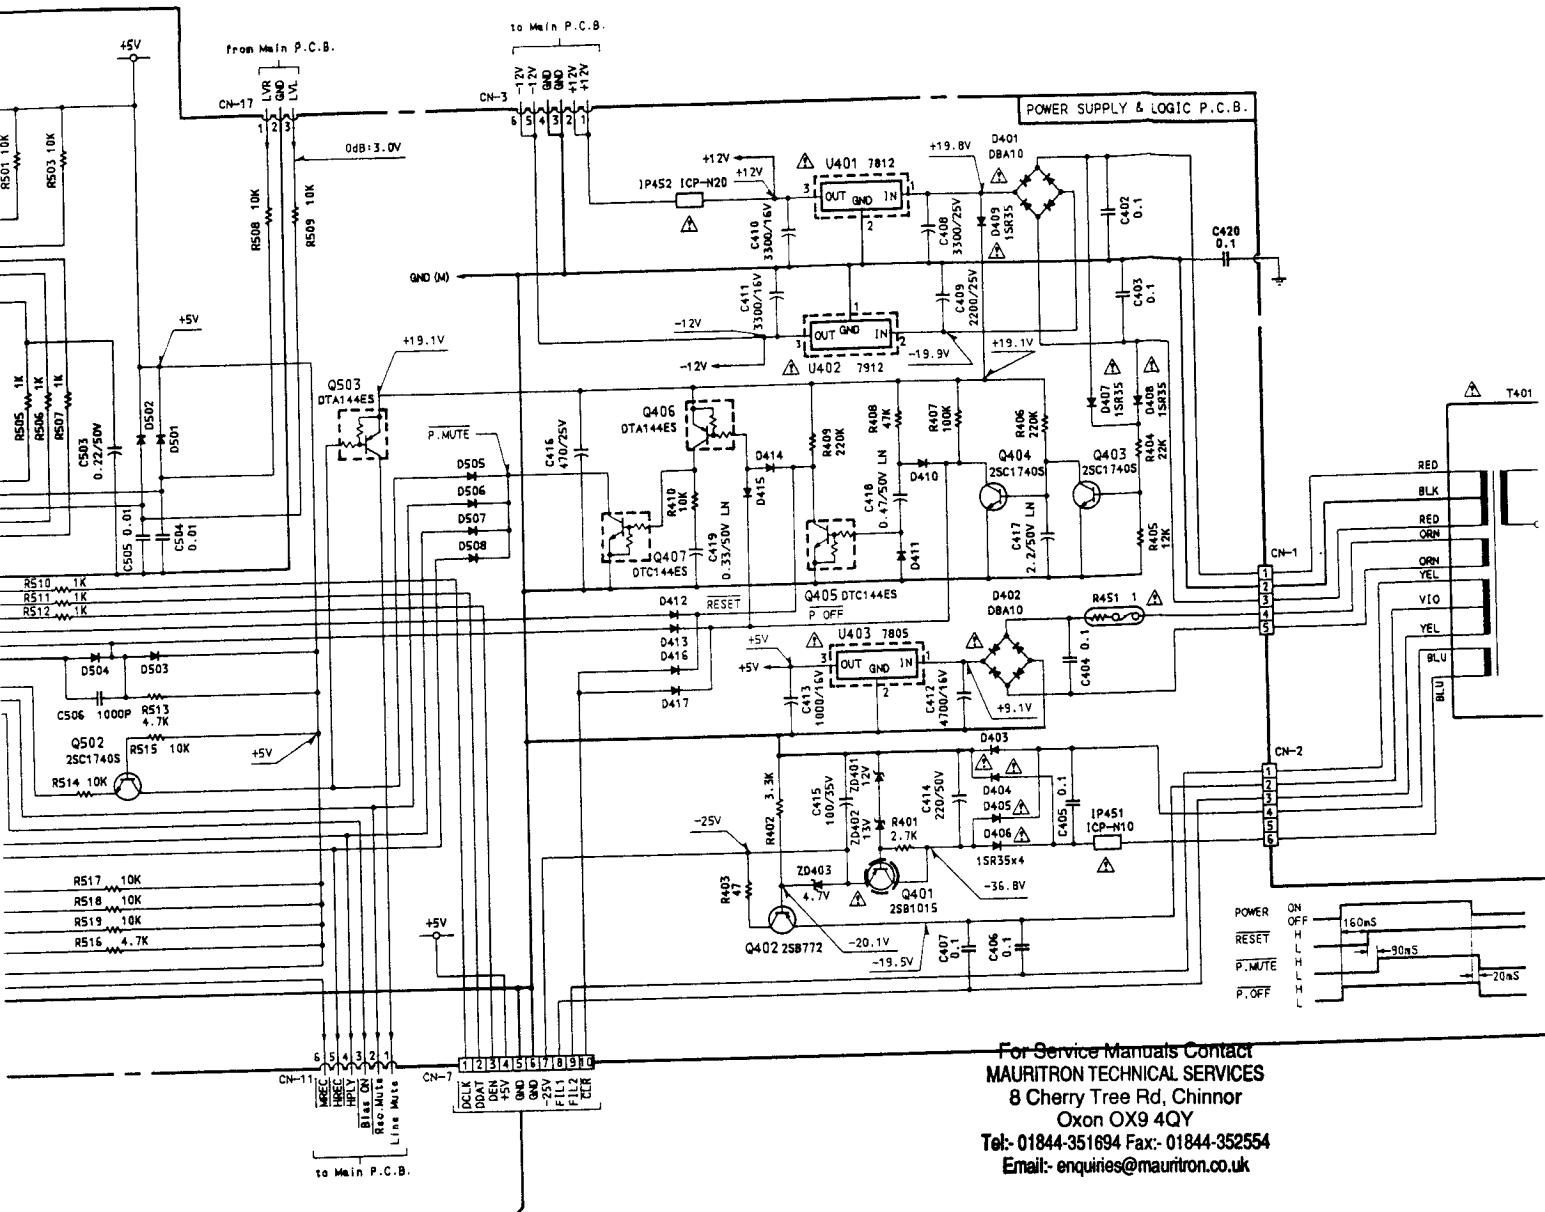


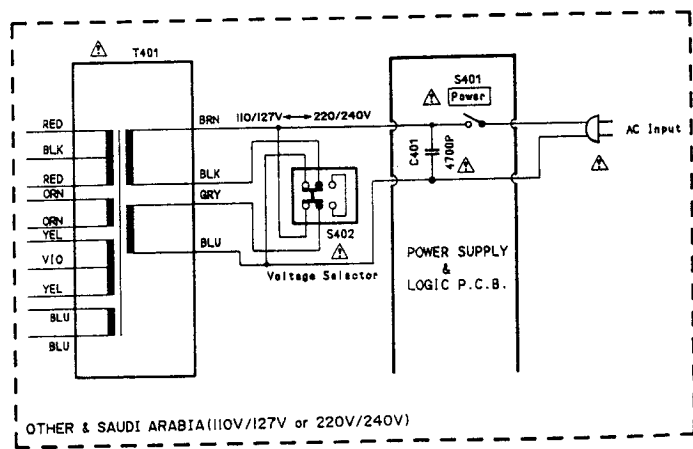
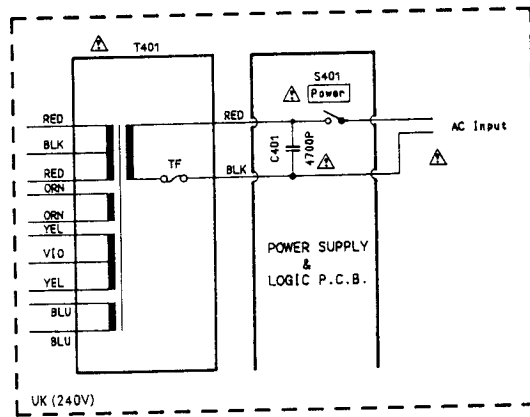
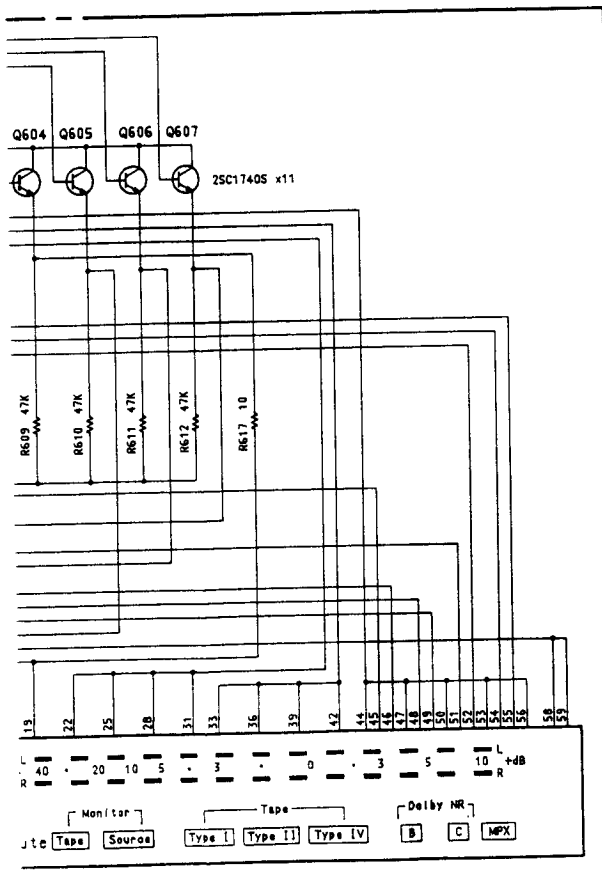
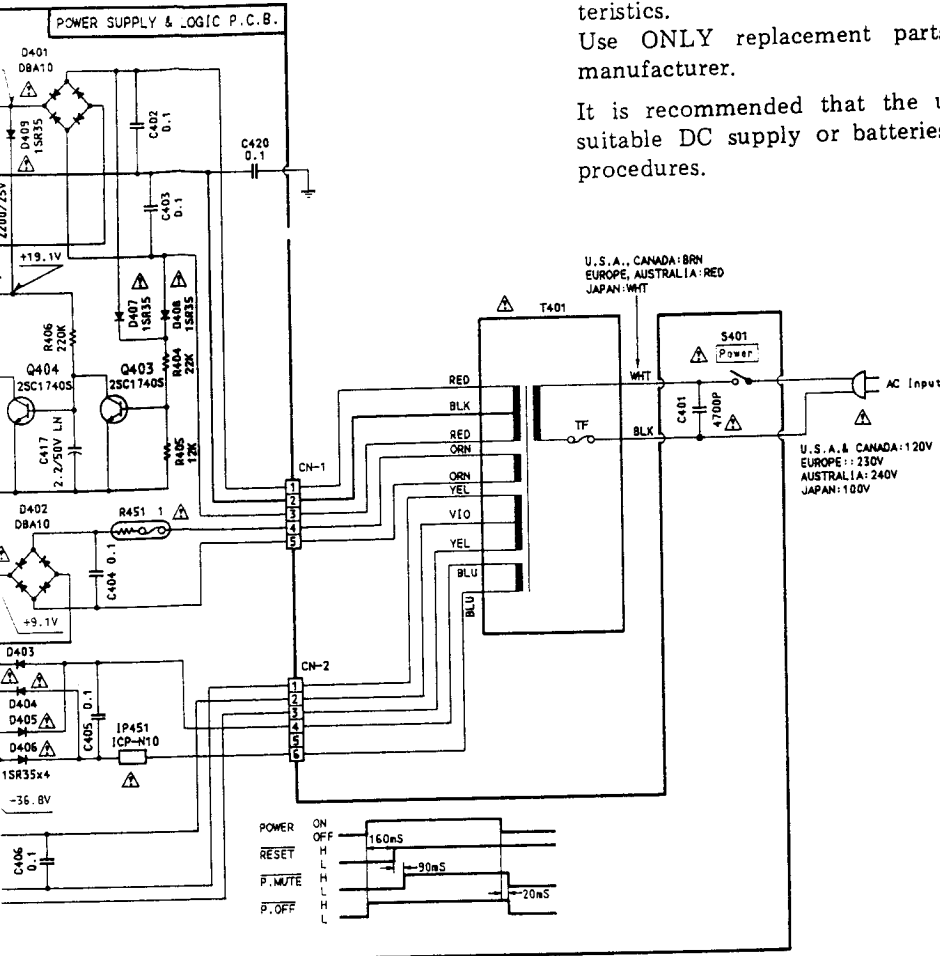
For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

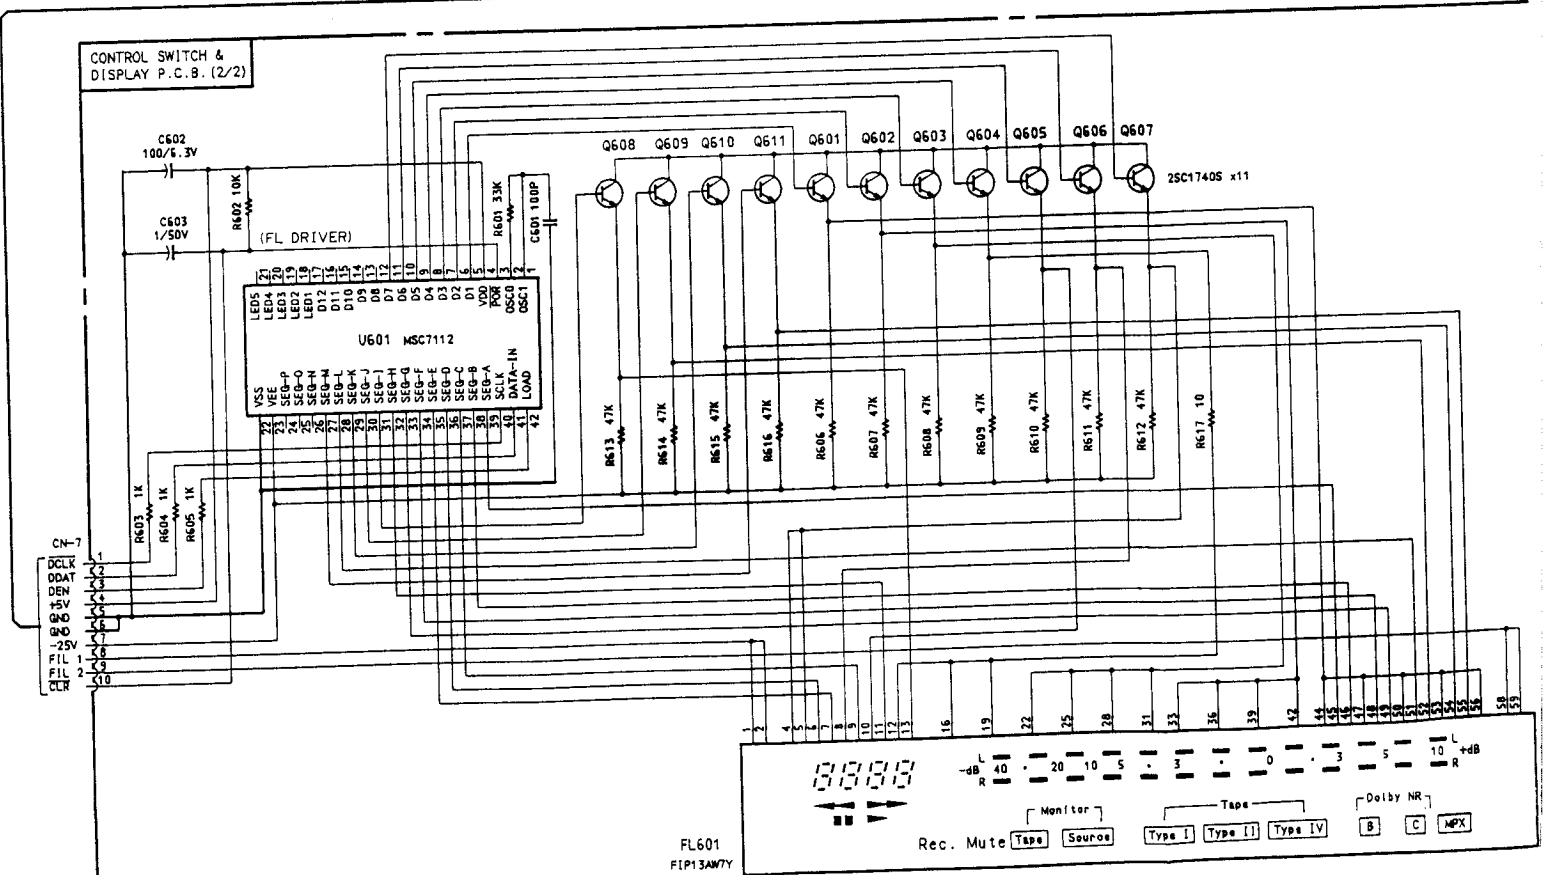


WARNING:

Parts marked with the symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

It is recommended that the unit be operated from a suitable DC supply or batteries during initial check-out procedures.



10. WIRING DIAGRAM

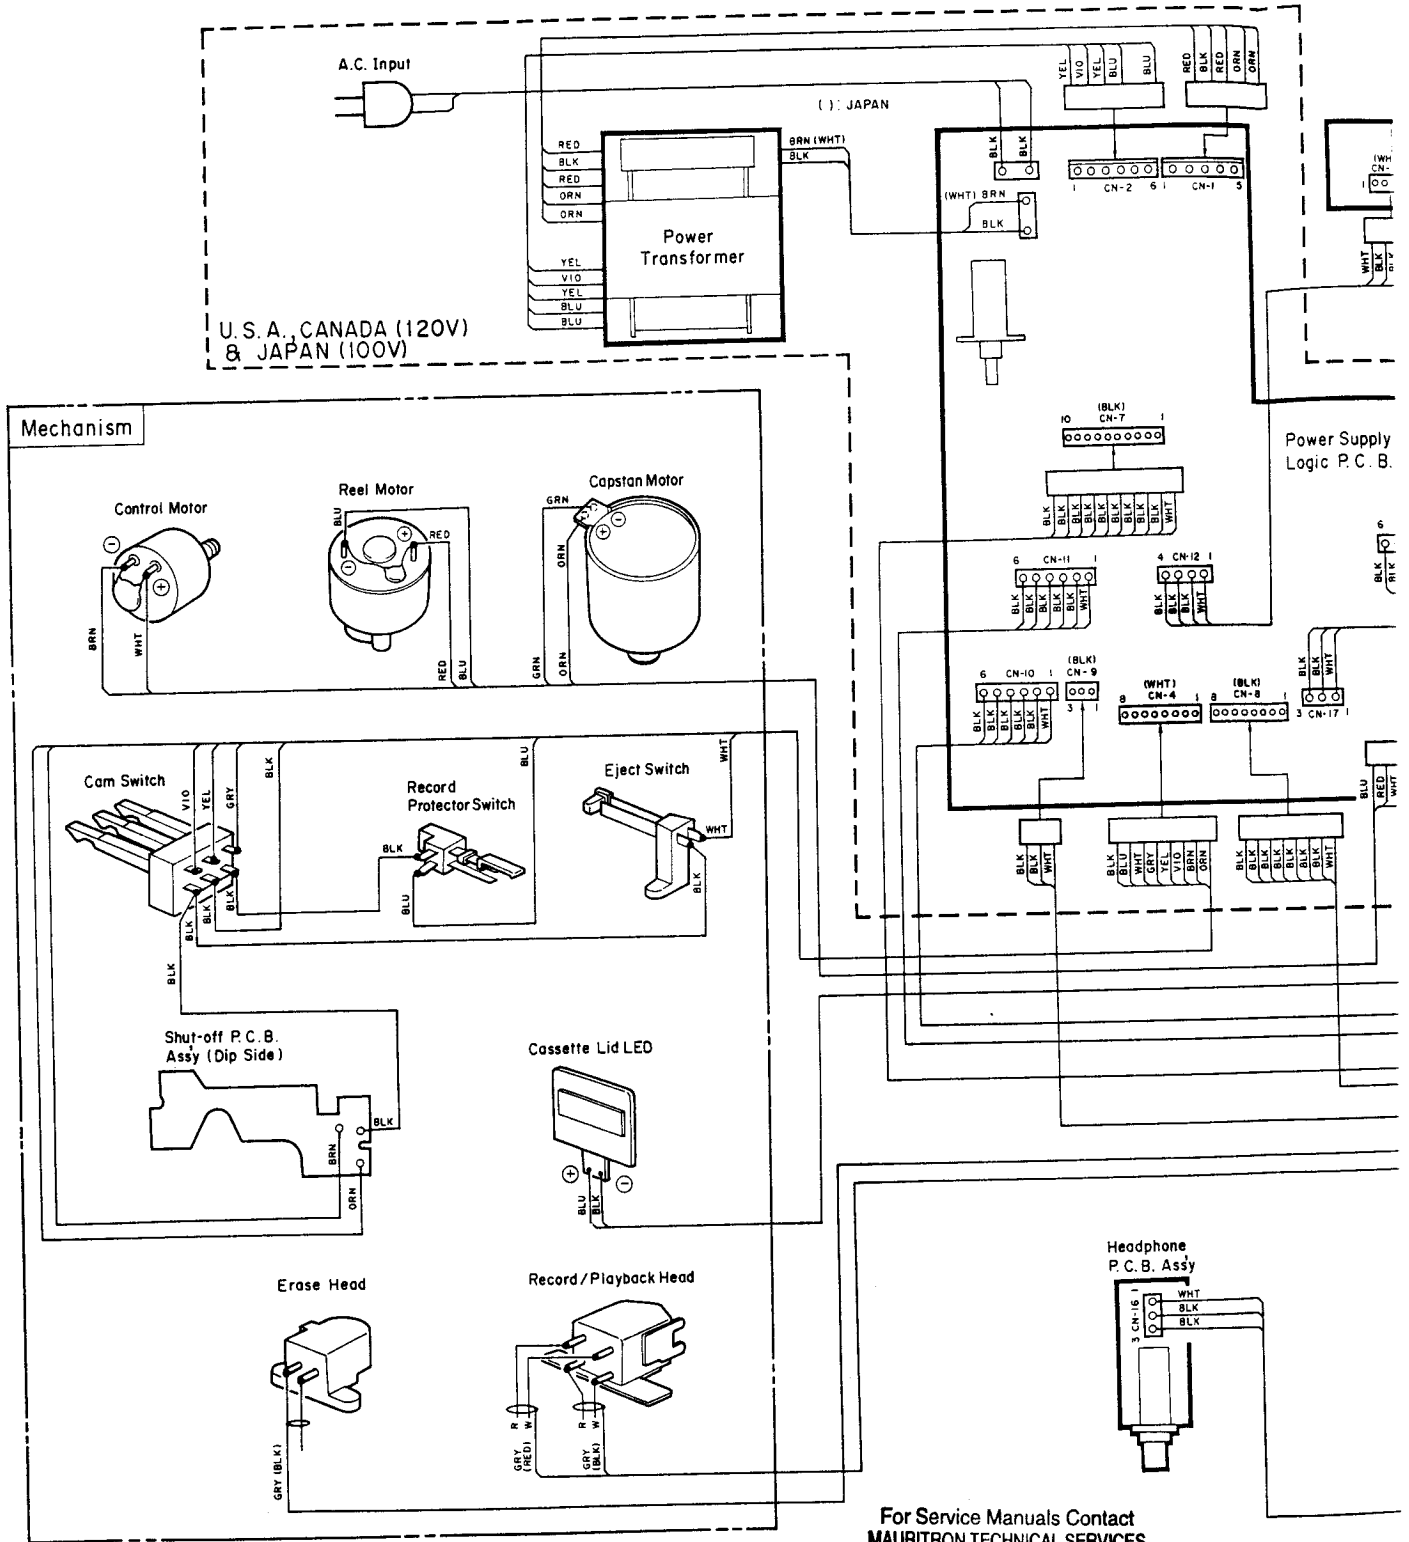



Notes: 1. Table of wire colors

BRN — Brown	BLU — Blue
RED — Red	VIO — Violet
ORN — Orange	GRY — Gray
YEL — Yellow	WHT — White
BRN — Green	BLK — Black

2. Component side view of the P.C.B. is illustrated unless otherwise specified.
3. Wire tube color is shown in ().

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

Fig. 10.1

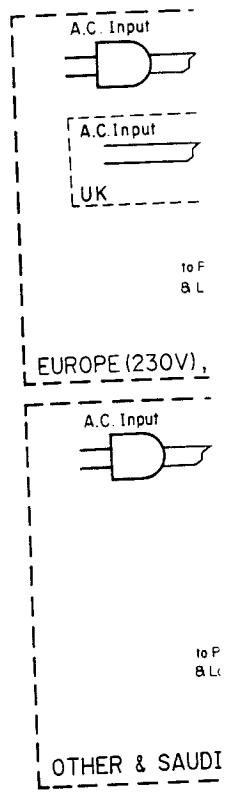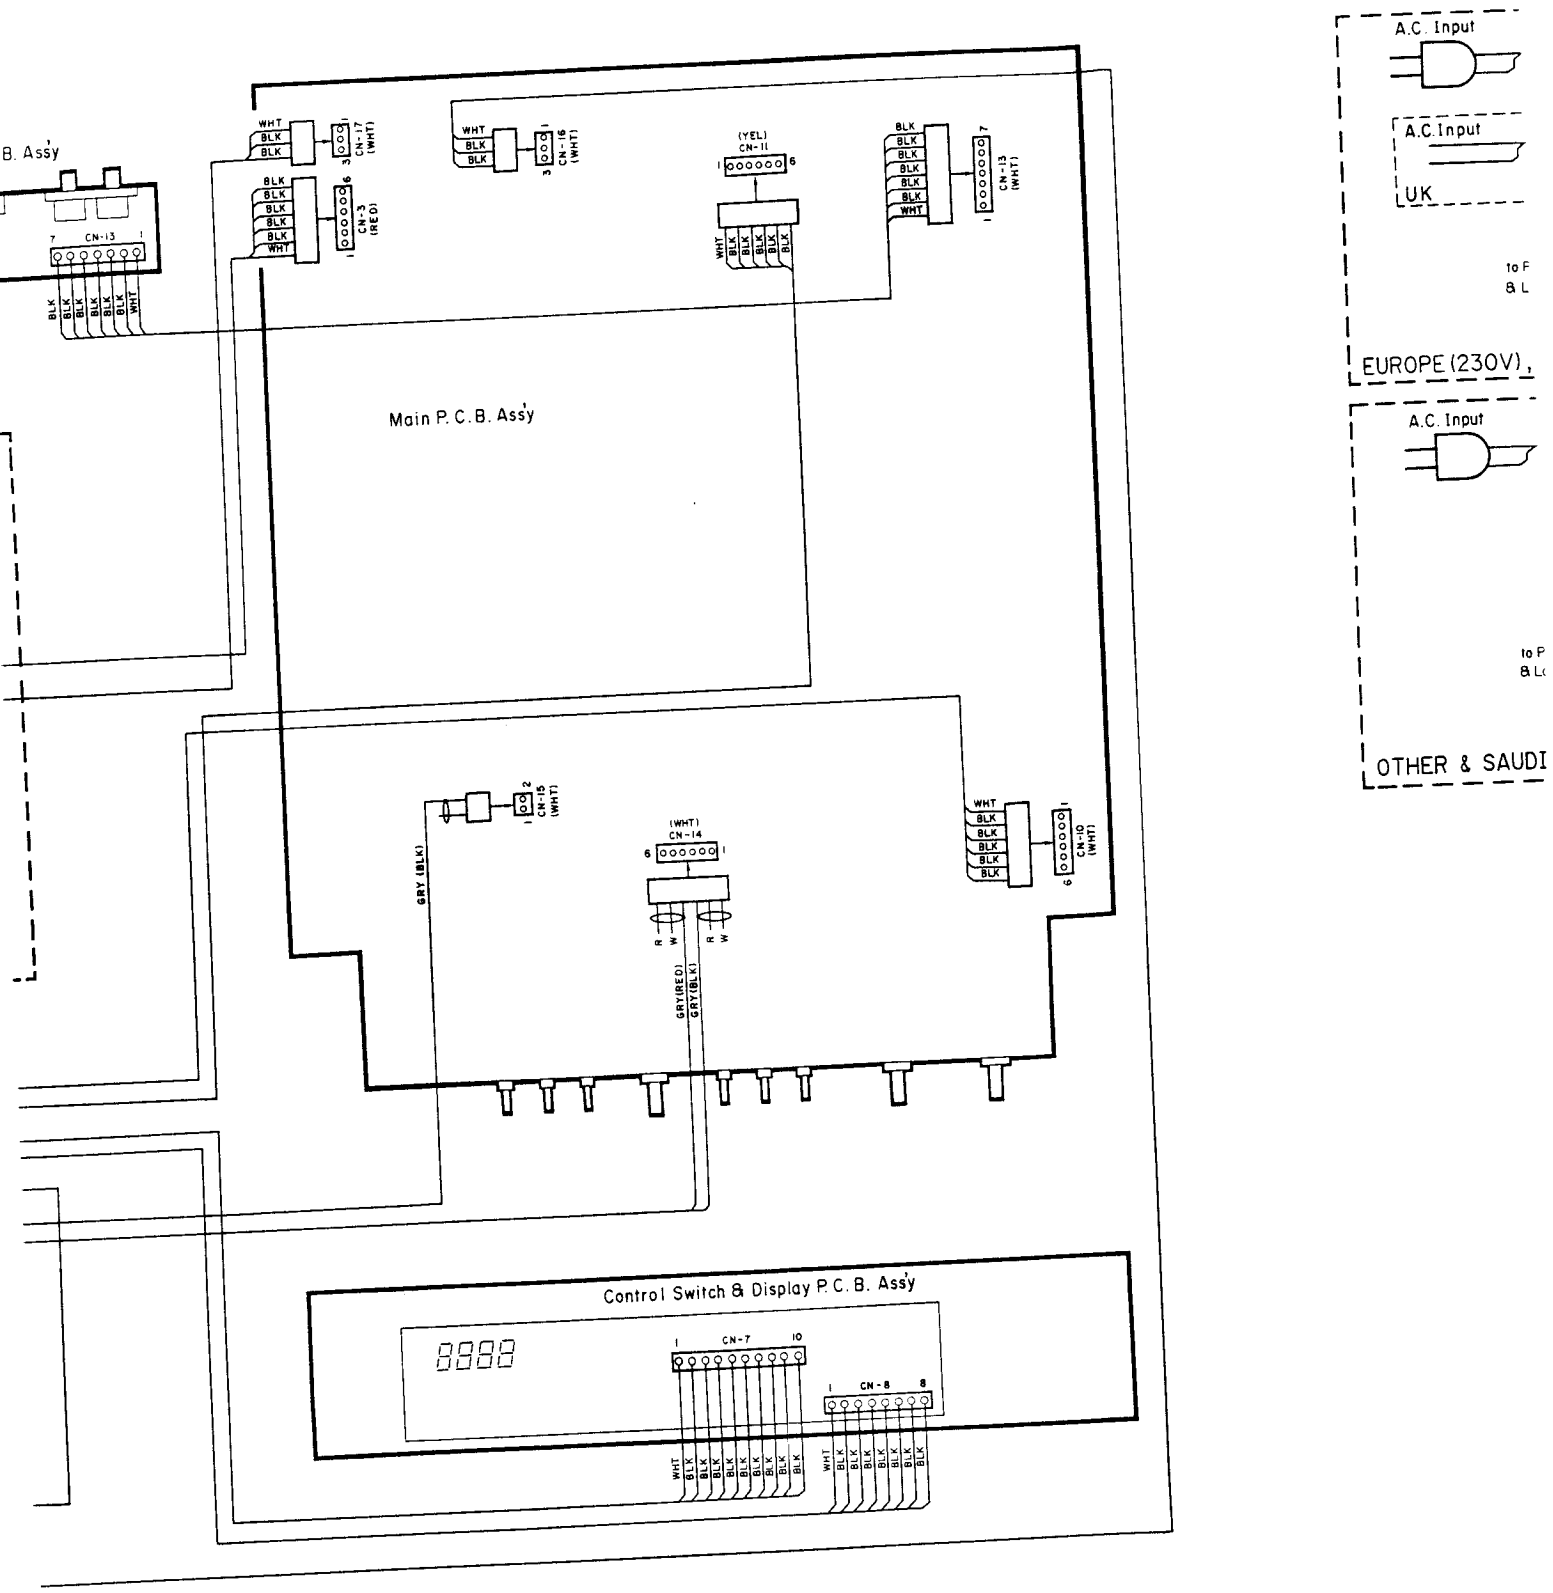

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@maurtron.co.uk


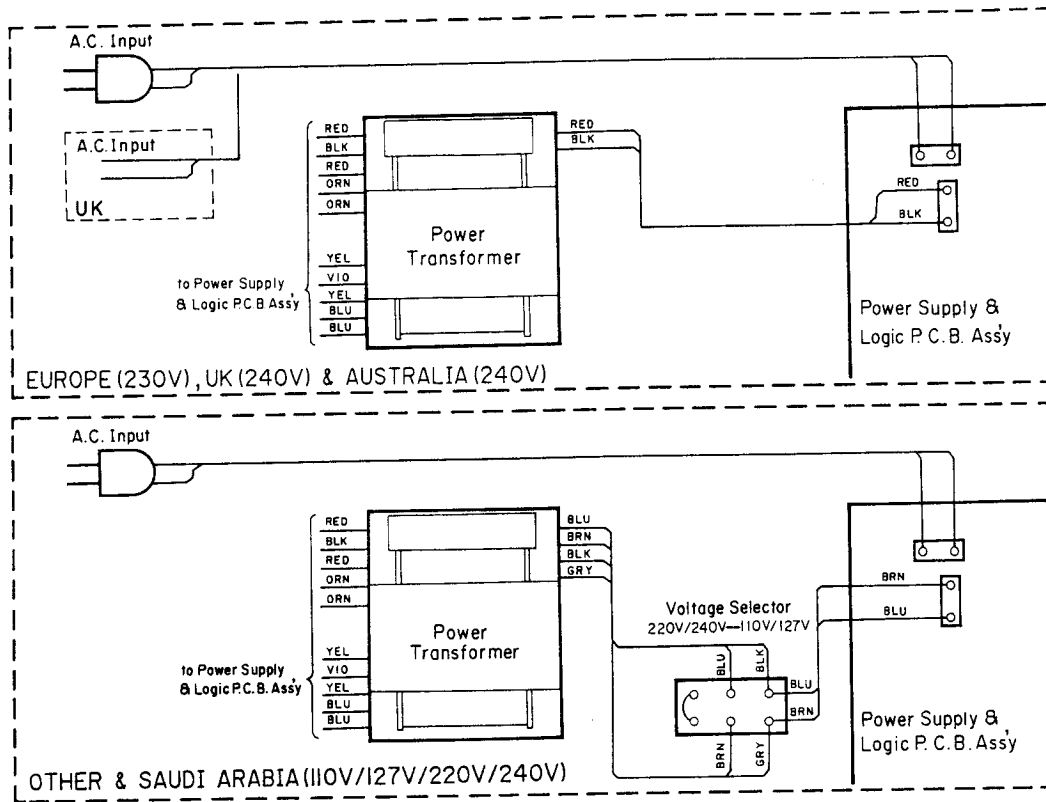


Fig. 10.2

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

11. BLOCK DIAGRAMS

11.1. Amplifier Section

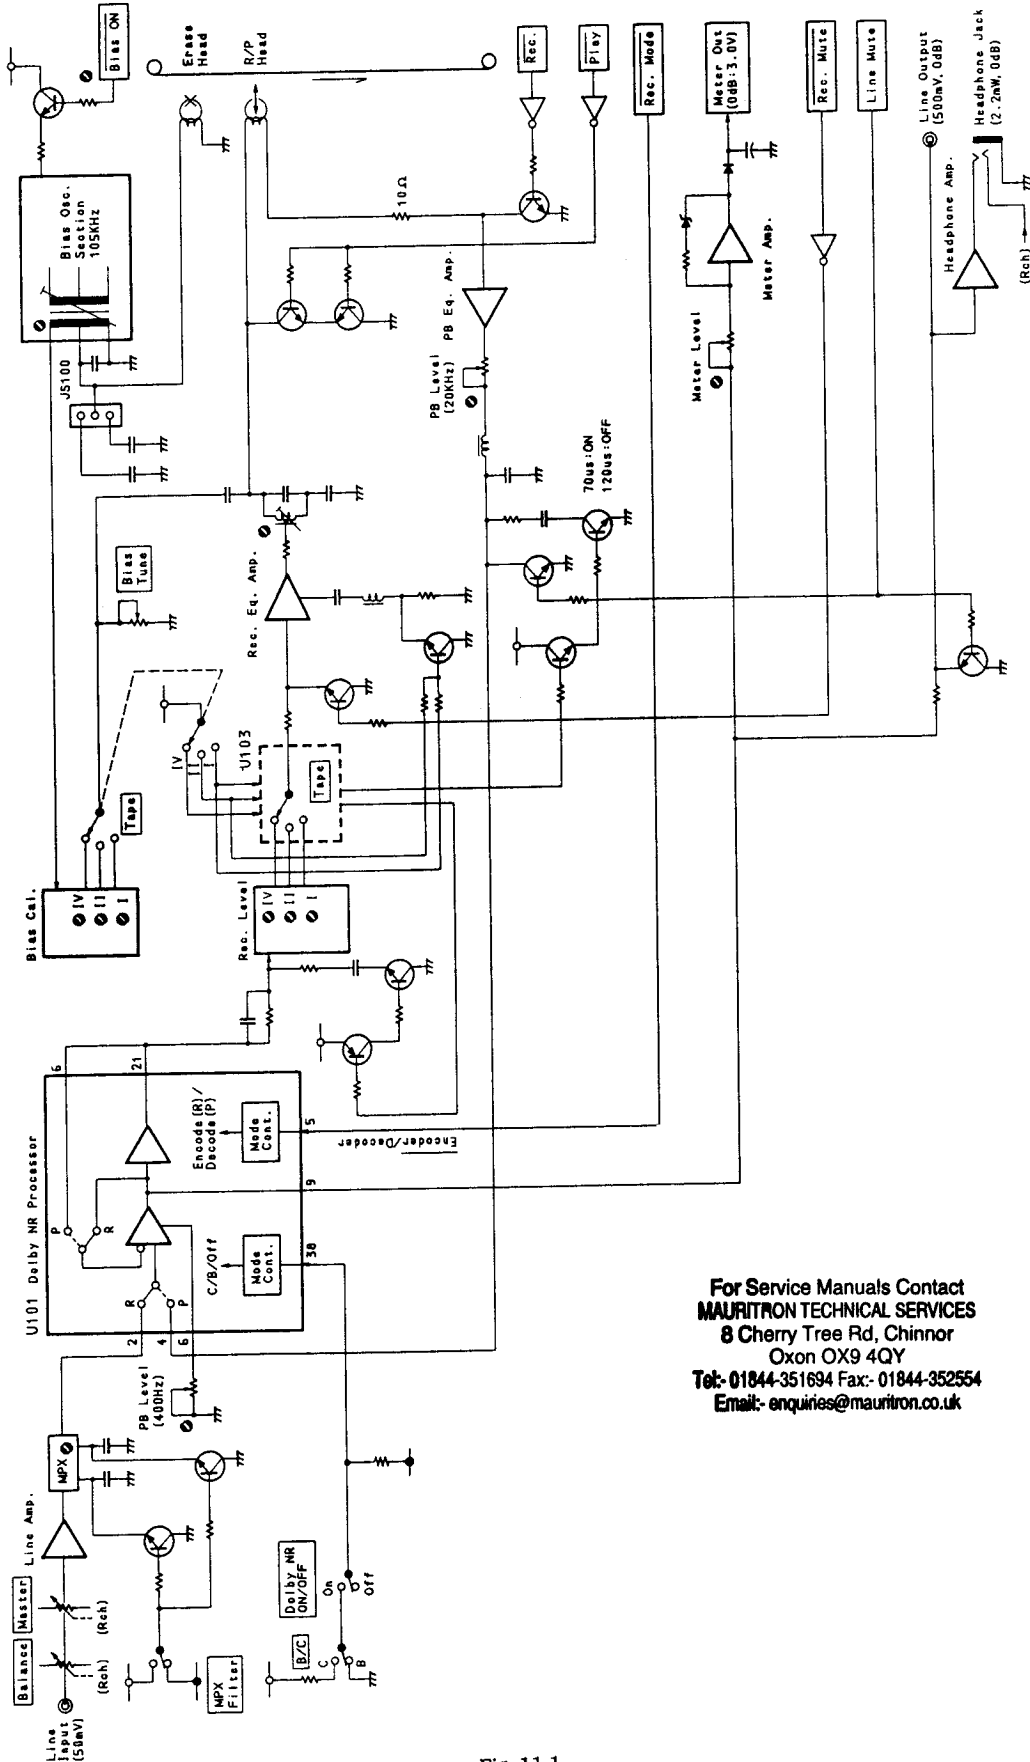

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

Fig. 11.1

11.2. Mechanism Control Section

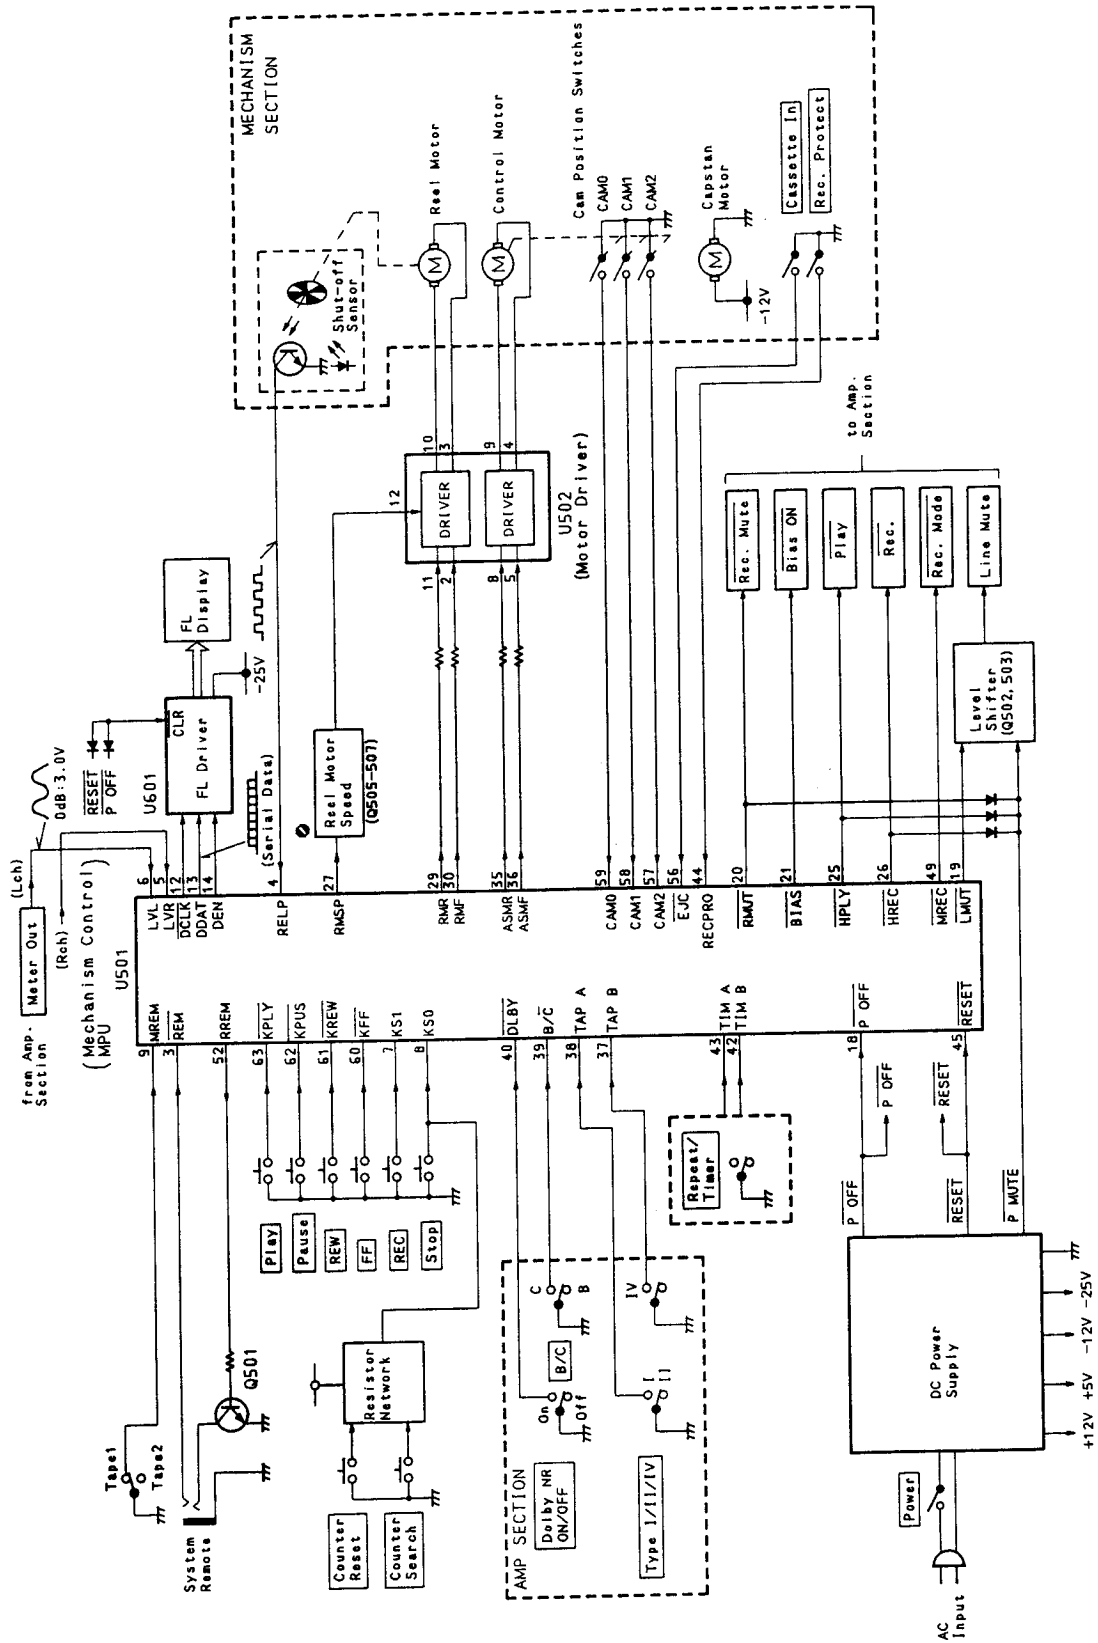


Fig. 11.2

12. TIMING CHARTS AND EQ. AMP. FREQUENCY RESPONSE

12.1. Timing Charts (1) Overall Timing Chart

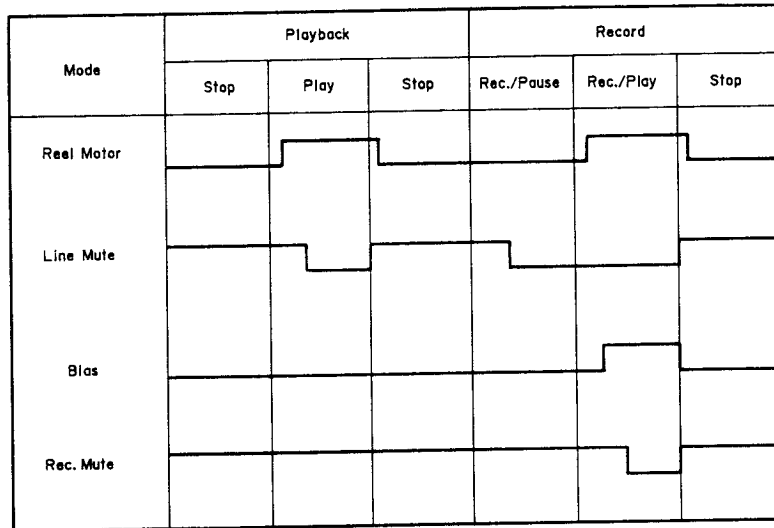


Fig. 12.1.1

(2) Mechanism Control Timing Chart

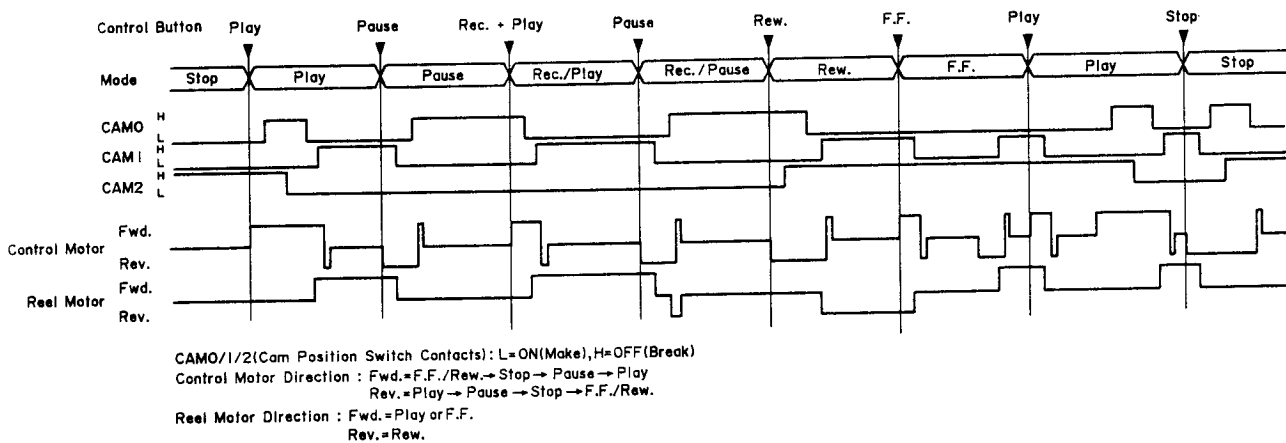


Fig. 12.1.2

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

12.2. Eq. Amp. Frequency Response
(1) Playback Frequency Response

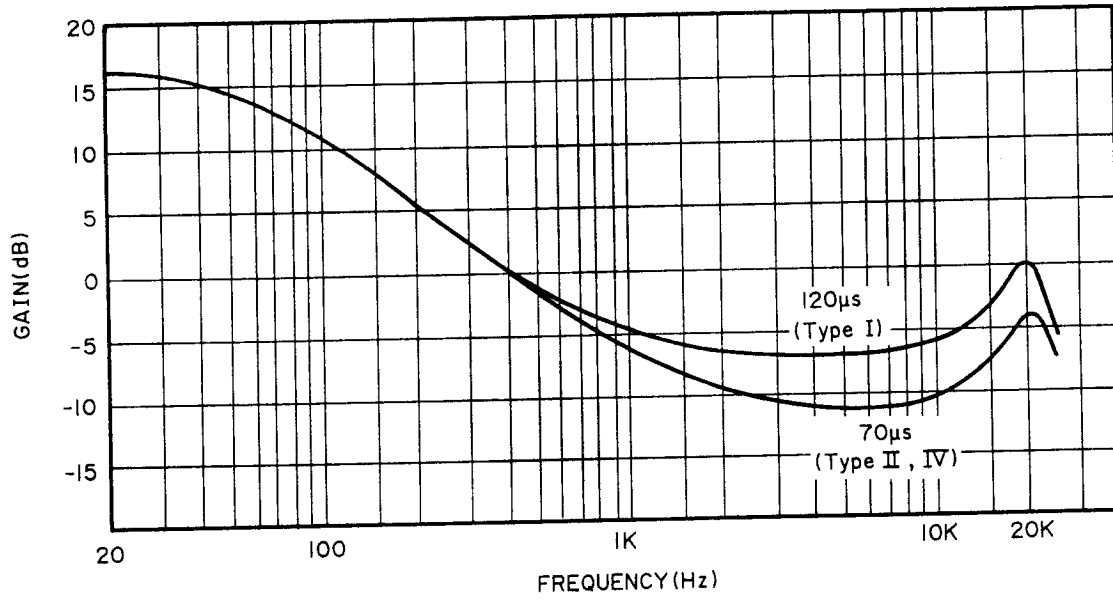


Fig. 12.2.1

(2) Record Current Frequency Response

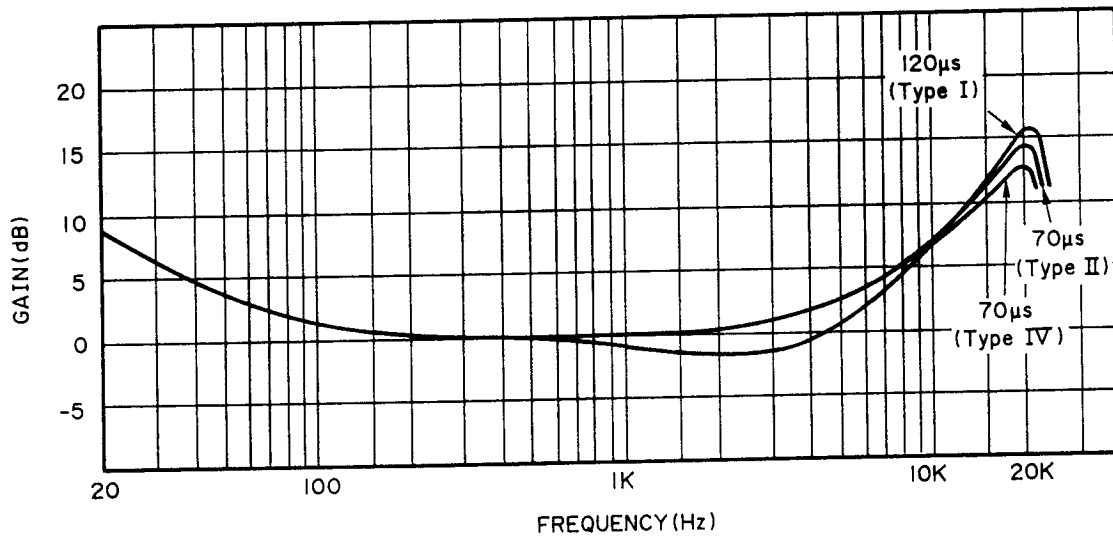


Fig. 12.2.2

13. SPECIFICATIONS

Track Configuration	4 tracks/2-channel stereo
Heads	2 (erase head x 1, record/playback x 1)
Motors	
<Tape Transport>	DC servo motor (capstan drive) x 1 DC motor (reel drive) x 1
<Mechanism>	DC motor (cam drive) x 1
Power Source	120, 220, 240 or 110/127/220/240 V, 50/60 Hz
Power Consumption	25 W max.
Tape Speed	1-7/8 ips. (4.8 cm/sec.) $\pm 0.5\%$
Wow and Flutter	less than $\pm 0.11\%$ WTD Peak less than 0.06% WTD RMS
Frequency Response	20–20,000 Hz ± 3 dB
Signal to Noise Ratio	
Dolby C-Type NR On	Better than 70 dB (400 Hz, 3% THD, IHF A-WTD RMS)
<70 μ s, Type IV>	
Dolby B-Type NR On	Better than 64 dB (400 Hz, 3% THD, IHF A-WTD RMS)
<70 μ s, Type IV>	
Total Harmonic Distortion	Less than 1.2% <400 Hz, 0 dB Type I/IV> Less than 1.6% <400 Hz, 0 dB, Type II>
Erasure	Better than 60 dB (100 Hz, +10 dB)
Channel Separation	Better than 36 dB (1 kHz, 0 dB)
Crosstalk	Better than 60 dB (1 kHz, 0 dB)
Bias Frequency	105 Hz
Input (Line)	50 mV/40 k Ω
Output	
Line	0.5 V (400 Hz, 0 dB)
Headphones	2.2 mW/8 Ω (400 Hz, 0 dB)
Fast-Wind Time	Approx. 95 seconds (with C-60 cassette)
Dimensions*	430 (W) x 100 (H) x 320 (D) mm 16-15/16 (W) x 3-15/16 (H) x 12-5/8 (D) inches
Approximate Weight	5.4 kg/11 lbs. 14 oz.

*: Dimensions do not include protruding parts. Height is the panel height.

- Specifications and Design are subject to change for further improvement without notice.
- Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
- "DOLBY" and the double-D symbol $\square\square$ are trademarks of Dolby Laboratories Licensing Corporation.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquires@maurtron.co.uk