


115

Service Manual

DR-1

Discrete Head Cassette Deck

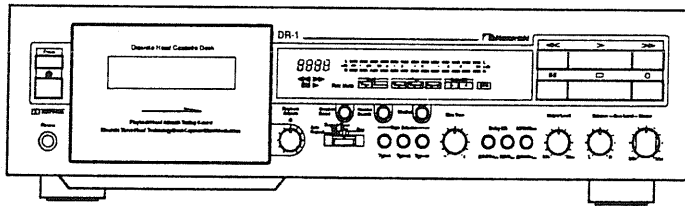

CONTENTS

1. General	1
2. Test Tapes and Gauges	2
3. Mechanism Ass'y and Parts List	3
3.1. Synthesis	3
3.2. Chassis Ass'y (A01)	4
3.3. Front Chassis Ass'y (B01)	5
3.4. Mechanism Ass'y (B02)	7
4. Mounting Diagrams and Parts List	8
4.1. Bias Volume P.C.B. Ass'y	8
4.2. Input Volume P.C.B. Ass'y	8
4.3. Output Volume P.C.B. Ass'y	8
4.4. Timer Switch P.C.B. Ass'y	8
4.5. Front P.C.B. Ass'y	8
4.6. Power Supply & Logic P.C.B. Ass'y	9
4.7. Main P.C.B. Ass'y	10
5. Schematic Diagrams	14

1. GENERAL

Reference Service Manual

The base Model of DR-1 is Cassette Deck 1. In this Service Manual, identical sections/items are omitted. So, please refer to the Service Manual of Cassette Deck 1 (0Q06137A).

1.1. Product Code

A137

1.2. Destinations


USA, CAN, EP, UK, AUS, SAU, OTR, JPN

Abbreviation

USA — U.S.A.	AUS — Australia
CAN — Canada	SAU — Saudi Arabia
EP — Europe	OTR — Other
UK — United Kingdom	JPN — Japan

1.3. Cautions/Warnings

(1) Product Safety Notice

Parts marked with the symbol  in the schematic diagram have critical characteristics.

Use ONLY replacement parts recommended by the manufacturer. It is recommended that the unit be operated from a suitable DC supply or batteries during initial check-out procedures.

(2) Leakage Current Check/Resistance Check

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamp, or if the resistance from chassis to either side of the power cord is less than 240 k ohms, the unit is defective.

WARNING — DO NOT return the unit to the customer until the problem is located and corrected.

1.5. Package Ass'y and Accessory Ass'y

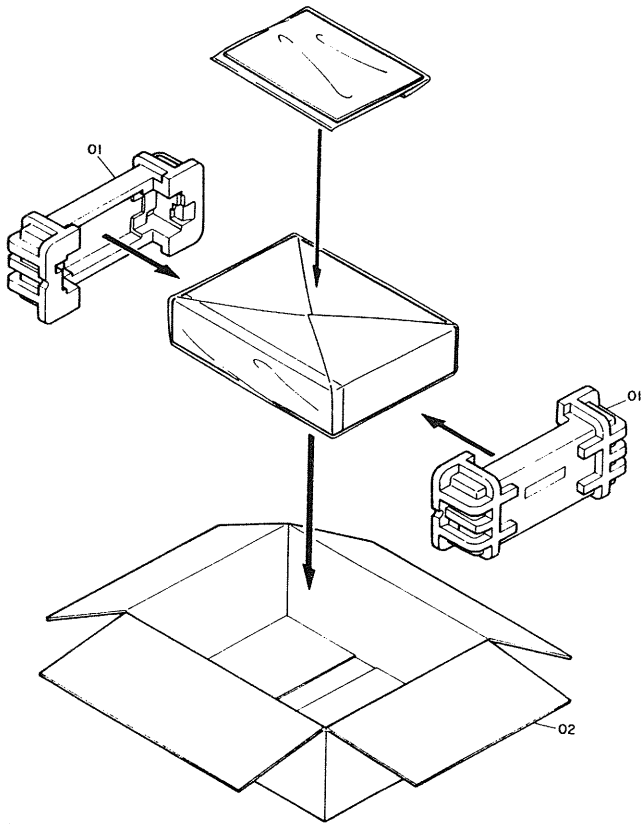


Fig. 1

Schematic Ref. No.	Part No.	Description	Qty
-	-	Package Ass'y	
01	0F04728A	Packing	2
02	0F04716A	Carton Box	1
-	0F04458A	Soft Sheet	1

Schematic Ref. No.	Part No.	Description	Qty
	DA04689A	Accessory Ass'y (USA, CAN)	1
	DA04691A	Accessory Ass'y (EP)	1
	DA04693A	Accessory Ass'y (UK)	1
	DA04690A	Accessory Ass'y (AUS, SAU, OTR)	1
	DA04688A	Accessory Ass'y (JPN)	1
	0D06400B	Owner's Manual (English)	1
	0D06416A	Owner's Manual (French) (USA, CAN, EP, UK)	1
	0D06417A	Owner's Manual (German) (EP, UK)	1
	0D06398A	Owner's Manual (Japanese)	1
	DA04439A	Pin-Plug Cord Ass'y	1

2. TEST TAPES AND GAUGES

- (1) 400 Hz Level Tape (DA09005C)
- (2) 1kHz Track Alignment B Tape (DA09007C)
- (3) 10 kHz PB Frequency Response Tape (DA09003C)
- (4) 15 kHz PB Frequency Response Tape (DA09002C)
- (5) 20 kHz PB Frequency Response Tape (DA09001C)
- (6) 15 kHz Azimuth Tape (DA09004C)
- (7) 3 kHz Speed and Wow/Flutter Tape (DA09006D)
- (8) Tape Travelling Cassette (DA09071A)
- (9) Reference EXII Tape (DA09168A)
- (10) Reference SX Tape (DA09167A)
- (11) Reference ZX Tape (DA09166A)
- (12) EH Tilt Check Gauge S (DA09088A)
- (13) Stroke Check Gauge S (DA09090A)
- (14) Tape Guide Height Check Gauge S (DA09091A)
- (15) Tilt Check Gauge S (DA09039C)
- (16) Torque Gauge FWD (DA09082A)
- (17) Playback Azimuth Centering Pin (0D09066A)

Playback Azimuth
Centering Pin
(0D09066A)



3. MECHANISM ASS'Y AND PARTS LIST

3.1. Synthesis

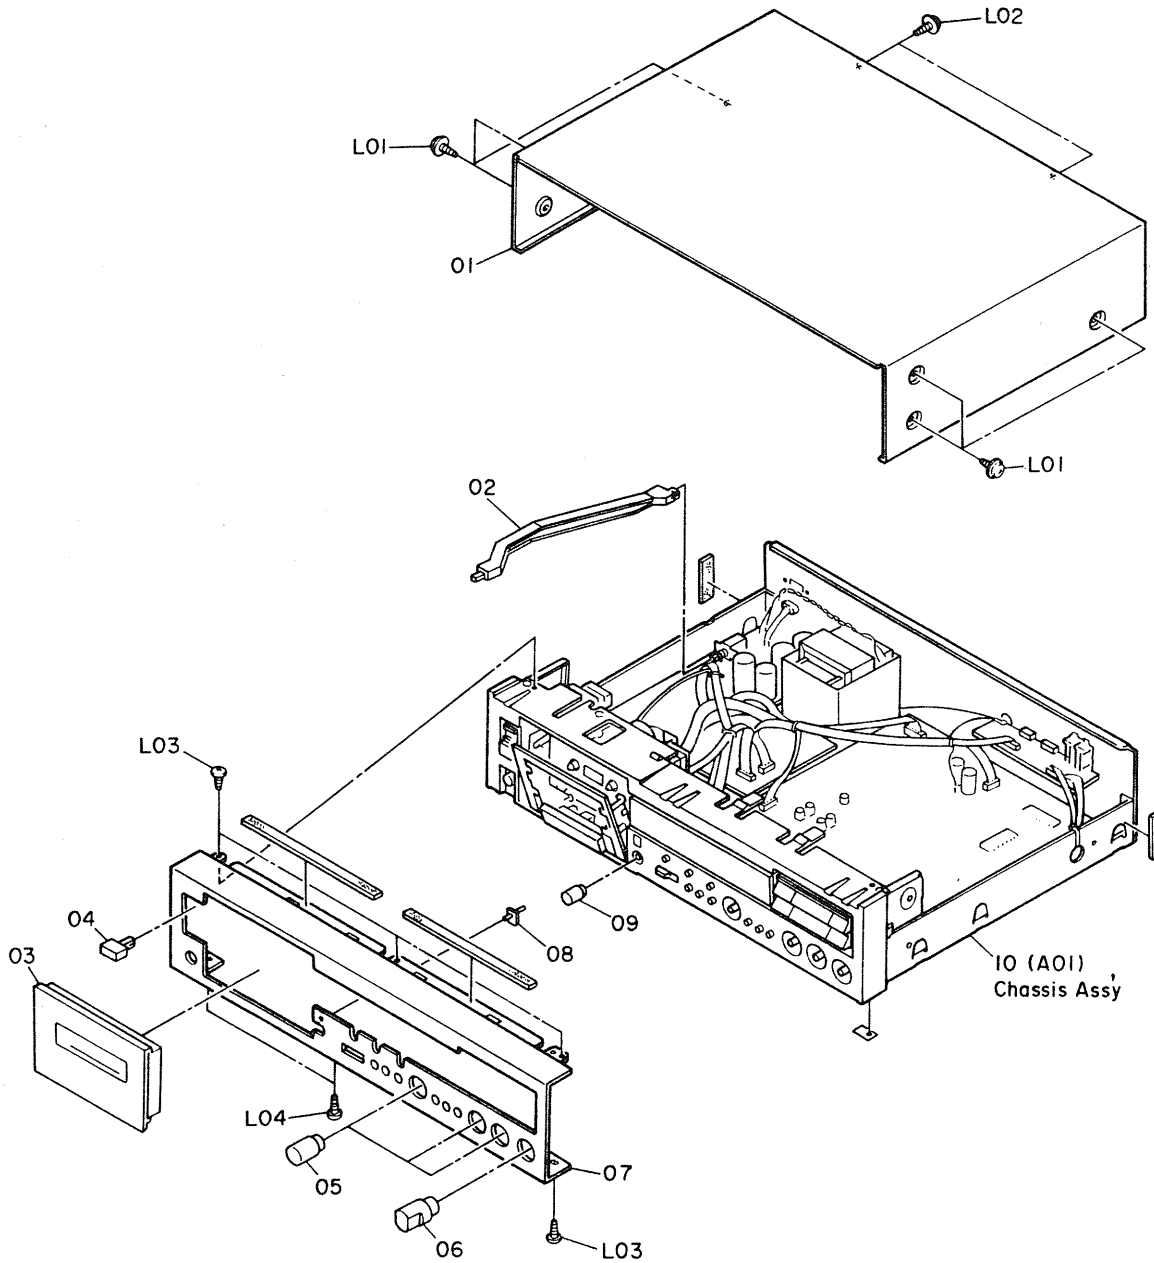


Fig. 3.1

3.1. Synthesis

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
	-	Synthesis					
01	0H06423A	Top Cover	1	L01	0E03032A	BT4x8 + Pan Washer Faced (Black Chromate)	
02	0J07037C	Power Switch Joint	1	L02	0E03632A	BT3x8 + Binding With Washer (Black Chromate)	
03	HA06577A	Cassette Case Cover Ass'y	1	L03	0E00921A	BT3x8 + Binding (Black Chromate)	
04	0H06418A	Power Knob	1	L04	0E03366A	BT3x8 + Binding Projected (Black Chromate)	
05	HA06502A	Volume Knob Ass'y CDR	3				
06	HA06503A	Volume Knob Ass'y DR	1				
07	0H06455C	Front Panel	1				
08	0H05845A	Center Lens	1				
09	HA06501B	Azimuth Knob Ass'y	1				
10	-	Chassis Assy	1				

3.2. Chassis Ass'y (A01)

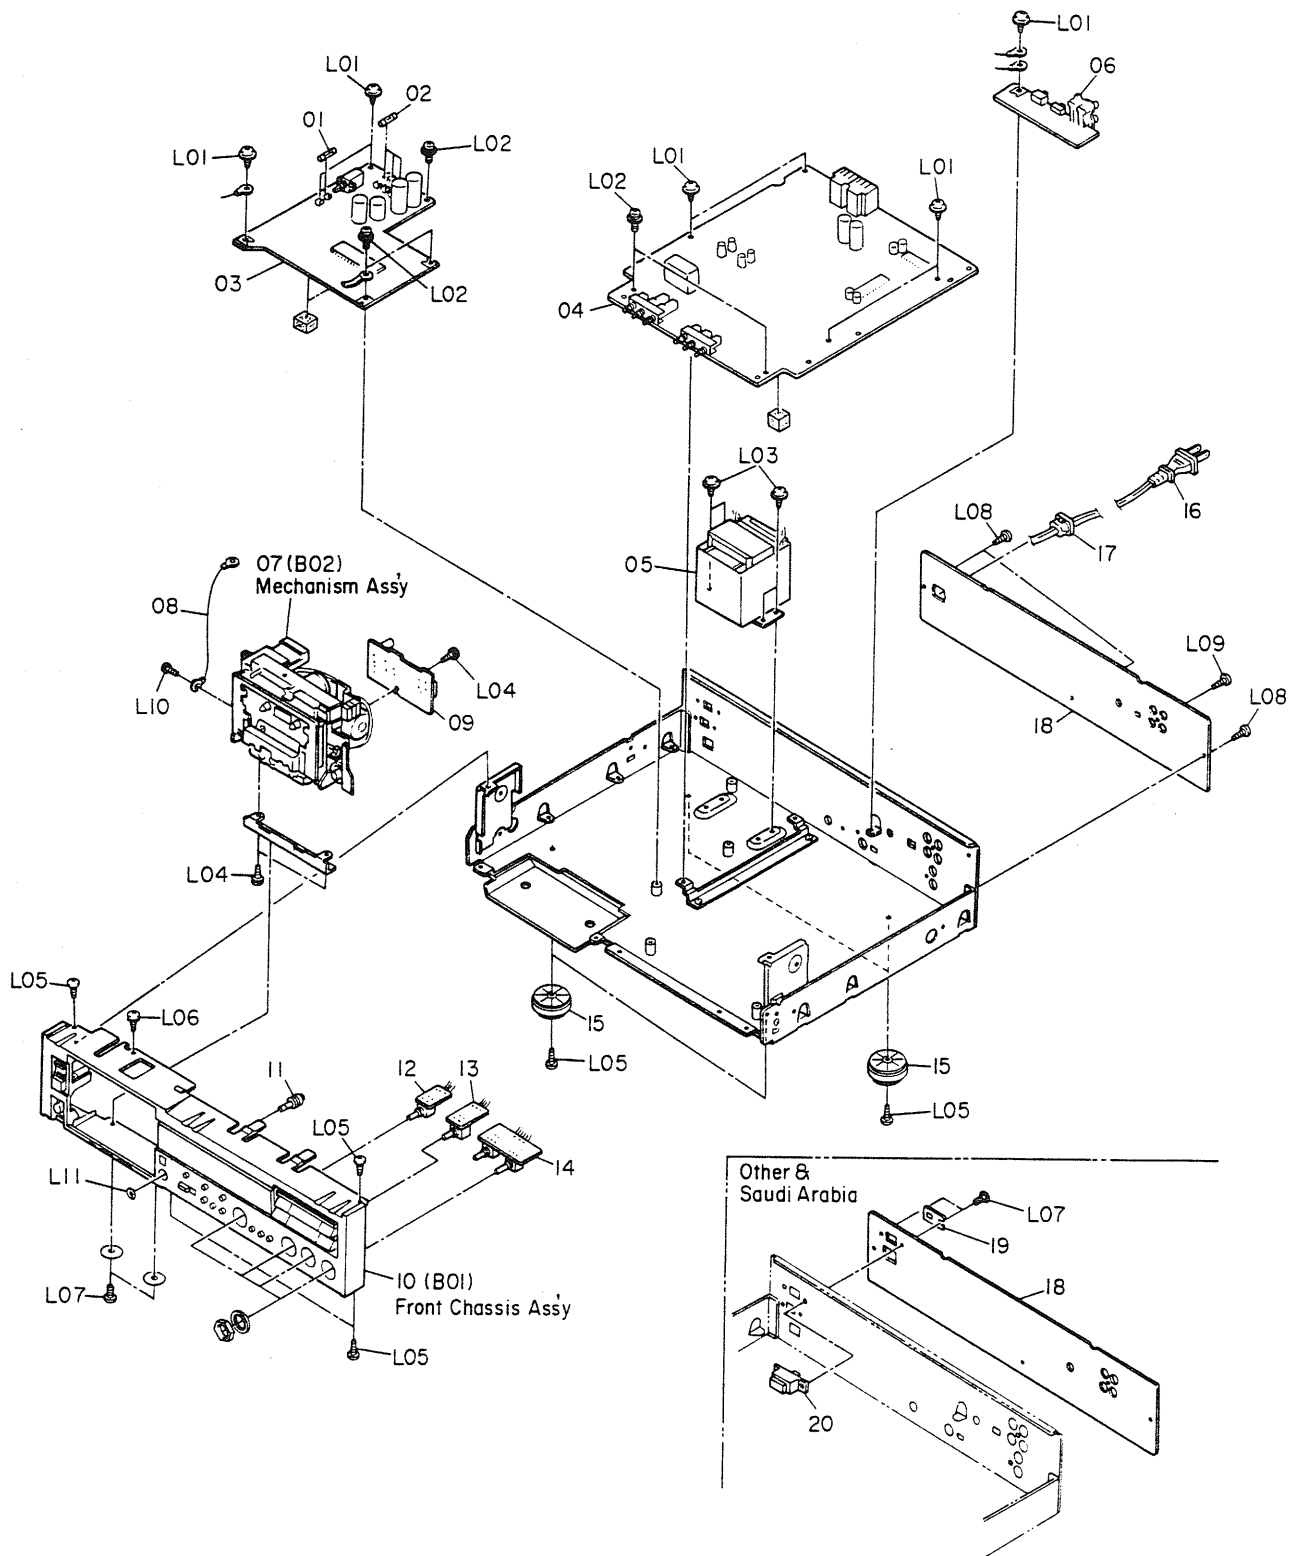


Fig. 3.2

3.3. Front Chassis Ass'y (B01)

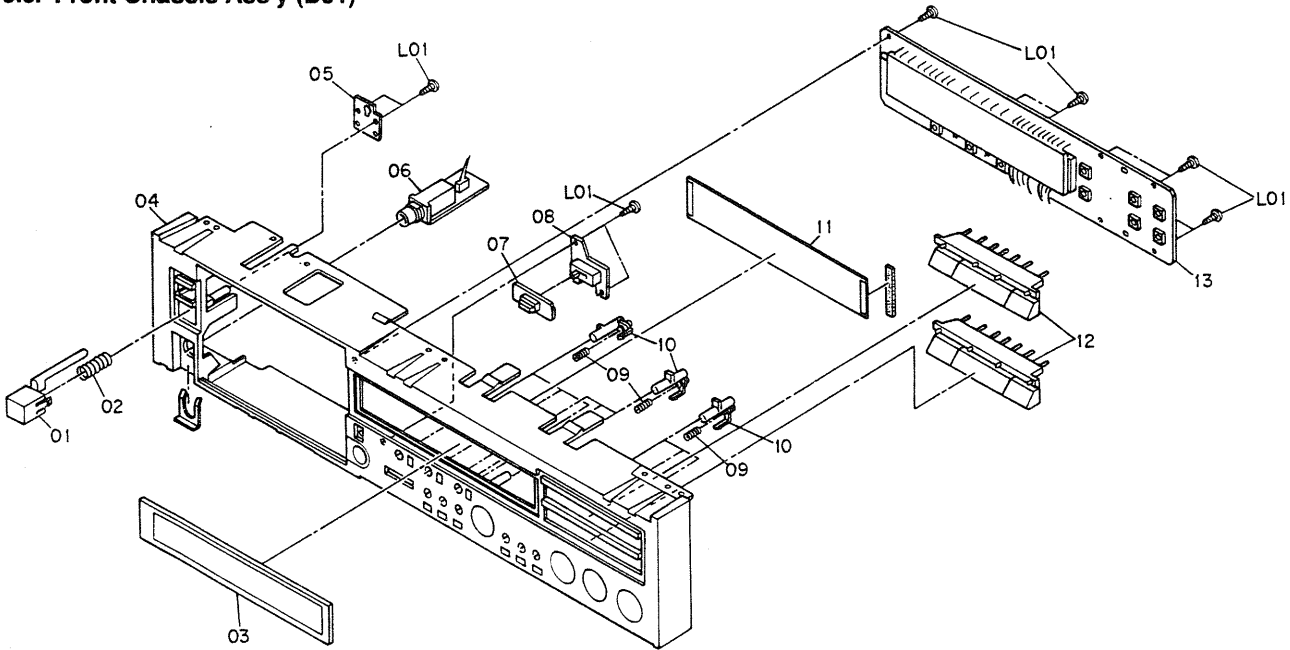


Fig. 3.3

3.2. Chassis Ass'y (A01)

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
A01	—	Chassis Ass'y	1	19	0H06524A	Rear Panel (OTR, SAU)	1
01	0B90493A	Fuse 500mA [F404] (USA, CAN, JPN)	1	20	0M05611A	Voltage Lock Plate (OTR, SAU)	1
	0B08505A	Fuse F500mA [F404] (EP, UK, AUS, OTR, SAU)	1	L01	0E03157A	BT3x8 + Binding With Washer	1
02	0B90375A	Fuse 1.6A [F401-403] (USA, CAN, JPN)	3	L02	0E00607A	M3x8 + Pan (3A)	
	0B90382A	Fuse T1.25A [F401-403] (EP, UK, AUS, OTR, SAU)	3	L03	0E03592A	BT4x6 + Binding Washer Faced (Black Chromate)	
03	BA08840A	Power Supply & Logic P.C.B. Ass'y (Except JPN)	1	L04	0E03435A	M2.6x6 + Binding With Toothed Lock	
	BA08843A	Power Supply & Logic P.C.B. Ass'y (JPN)	1	L05	0E00921A	BT3x8 + Binding (Black Chromate)	
04	BA08832A	Main P.C.B. Ass'y	1	L06	0E03212A	BT2.6x6 + Binding Toothed Lock	
05	0B50183A	Power Transformer 120V (USA, CAN)	1	L07	0E00985A	M3x6 + Binding (Black Chromate)	
	0B50182A	Power Transformer 230V (EP)	1	L08	0E00860A	BT3x6 + Binding (Black Chromate)	
	0B50179A	Power Transformer 240V (UK, AUS)	1	L09	0E03749A	PT3x8 + Binding (Black Chromate)	
	0B50181A	Power Transformer 115-230V (OTR, SAU)	1	L10	0E03042A	FT2.5x5 + Pan	
	0B50180A	Power Transformer 100V (JPN)	1	L11	0E03772A	Washer 10x5x5	
06	BA07985A	Pin Jack P.C.B. Ass'y	1	3.3. Front Chassis Ass'y (B01)			
07	CA09200A	Mechanism Ass'y	1	Schematic			
08	0C86111A	Mechanism GND Ass'y	1	Ref. No.	Part No.	Description	Q'ty
09	BA08477A	Playback Amp. P.C.B. Ass'y	1	B01	—	Front Chassis Ass'y	1
10	—	Front Chassis Ass'y	1	01	0H06432B	Eject Knob	1
11	0J06260A	Azimuth Joint	1	02	0J07048B	Eject Knob Spring	1
12	BA08836A	Bias Volume P.C.B. Ass'y	1	03	HA06566D	Display Lens Ass'y	1
13	BA08838A	Output Volume P.C.B. Ass'y	1	04	0H06430B	Front Chassis	1
14	BA08837A	Input Volume P.C.B. Ass'y	1	05	0J07077A	Eject Holder	1
15	0H06472A	Leg	4	06	BA07986A	Headphone P.C.B. Ass'y	1
16	0B90205A	Power Cord (USA, CAN)	1	07	0H06436B	Slide Knob	1
	0B08093U	Power Cord (EP)	1	08	BA08841A	Timer Switch P.C.B. Ass'y	1
	0B08348A	Power Cord (UK)	1	09	0J06253A	Push Knob Spring	9
	0B05241A	Power Cord (AUS)	1	10	0H06447B	Push Knob	9
	0B08533A	Power Cord (OTR, SAU)	1	11	HA06569C	Filter DR Ass'y	1
	0B08219B	Power Cord (JPN)	1	12	0H06426B	Control Knob 3CD	2
17	0B90280A	Cord Bushing (USA, CAN, EP, UK, AUS)	1	13	BA08846A	Front P.C.B. Ass'y	1
	0B90283A	Cord Bushing (OTR, SAU, JAN)	1	L01	0E00868A	BT3x8 + Binding	1
18	0H06523A	Rear Panel (USA, CAN, EP, UK, AUS, JPN)	1				

3.4. Mechanism Ass'y (B02)

Schematic				Schematic			
Ref. No.	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty
B02	CA09200A	Mechanism Ass'y	1	73	0C82699A	Supply Flywheel	1
01	0C85309A	Eject Arm	1	74	0C82698A	Take-up Flywheel	1
02	0C85310A	Eject Arm Spring	1	75	0C82702A	Capstan Belt	1
03	CA80006A	Pneumatic Damper Ass'y	1	76	0C82718A	Thrust Plate	2
04	0C82720A	Eject Lever Spring	1	77	0C82726A	Floating Rubber	3
05	0C85414A	Eject Lever	1	78	CA81988A	Capstan Motor Ass'y	1
06	0C85301A	Cassette Case Holder L	1	79	0C85320A	Flywheel Holder	1
07	0C80019B	Eject Spring	1	80	0C81417A	Cam Gear B	1
08	0C80620A	Back Tension Arm Pulley	1	81	0C81418A	Control Motor Holder	1
09	0C80621A	Back Tension Arm Belt	1	82	0C81416A	Thrust Spring B	1
10	0C80617A	Back Tension Arm Spring	1	83	0C80027A	Mode Switch	3
11	0C80618A	Back Tension Arm Collar	1	84	0C81415A	Warm Thrust Bush	1
12	0C80619A	Back Tension Arm	1	85	CA81646A	Control Motor Ass'y 30	1
13	0C85425A	Lock Lever Spring	1	86	0C85319A	Azimuth Arm Spring B	1
14	0C85426A	Lock Lever Collar	1	87	CA81670A	Azimuth Arm B Sub Ass'y	1
15	0C85427A	Lock Lever	1	88	CA81669A	Azimuth Plate Sub Ass'y	1
16	CA80726A	Supply Reel Hub Ass'y	1	89	0C85314A	Azimuth Cam Gear	1
17	0C80612A	Spring Holder	2	90	0C85315A	Cassette Case Spring	1
18	0C80614A	Supply Reel Hub Spring	1	91	0C85316A	Cassette Case Spring Collar	1
19	0C81421A	Supply Pressure Roller Arm Adjustment Nut	1	92	CA81667A	Azimuth Chassis Sub Ass'y	1
20	CA80366A	Supply Pressure Roller Arm Ass'y	1	93	0C85318A	Azimuth Cam Spring	1
21	0C81420A	Supply Pressure Roller Arm Spring	1	94	0C85317A	Azimuth Cam Switch	1
22	0C81422A	Supply Pressure Roller Arm Track Spring	1	95	CA81671A	Azimuth 2P Connector Ass'y	1
23	0H04415C	Head Mount Cover	1	96	0C80012A	Sensor Switch	1
24	CA80200B	Cassette Case Ass'y	1	97	CA81673A	5P Connector Ass'y	1
25	CA81949A	Cover Plate Ass'y	1	98	CA81672A	9P Connector Ass'y	1
26	0C08762A	Head Height Adjustment Gear	2	L01	0E00698A	E-Ring 2.5mm	1
27	0C08761A	Head Height Adjustment Screw	4	L02	0E00181A	E-Ring 3mm	1
28	0C08763A	Azimuth Alignment Screw	1	L03	0E00222A	E-Ring 2mm	1
29	0C85424A	Head Mount Plate	1	L04	0E00042A	E-Ring 1.5mm	1
30	CA08659C	R-3L Record Head Ass'y	1	L05	0E00165A	E-Ring 1.2mm	1
31	0C08776A	Head Plate Spring L	1	L06	0E03052A	CS Stopper 2.4mm	1
32	CA81676A	RH 4P Connector Ass'y	1	L07	0E03042A	FT2.5x 5 + Pan	1
33	0C08026D	PB Head Azimuth Alignment Screw	1	L08	0E03667A	FT2.5x8 + Pan	1
34	0C81391A	PB Head Azimuth Alignment Screw Stopper	1	L09	0E03202A	M2.6x3 + Binding (Black Chromate)	1
35	0C85313A	PB Head Azimuth Arm Shaft A	1	L10	0E03437A	FT2.5x3.5 + Pan (Black Chromate)	1
36	0C85312A	PB Head Azimuth Arm A	1	L11	0E03654A	M2x4 + Pan (3A)	1
37	CA08755B	P2H-3L Playback Head Ass'y	1	L12	0E03018A	M2x5 + Pan	1
38	0C08775A	Head Plate Spring R	1	L13	0E03232A	M1.7x7 + Pan	1
39	CA81675A	PH 4P Connector Ass'y	1	L14	0E03222A	Washer 1.8x3.8x0.3	1
40	CA81674A	EH 2P Connector Ass'y	1	L15	0E03655A	M2x5 + Pan (2A)	1
41	GA02201A	E-4F Erase Head	1	L16	0E03234A	M2x3 + Pan	1
42	0C08768A	E.H. Hold Plate	1	L17	0E03228A	FT3x4 + Pan	1
43	0C08889A	E.H. Hold Plate Tapering Spring	2	L18	0E03236A	M2x5 + Pan (2A)	1
44	0C08886A	E.H. Hold Plate Spring	1	L19	0E03231A	M2x30 + Pan	1
45	0C82710A	Head Base Hold Plate	1	L20	0E03041A	FT2.5x4 + Pan	1
46	0C80004A	Steel Ball 3mm	1	L21	0E03233A	Washer 2.6x8x1	1
47	0C08771A	Tape Guide Plate	1	L22	0E03230A	ST2.6x12 + Pan	1
48	CA80365A	Head Base Sub Ass'y	1	L23	0E03045A	M2.6x3 + Binding	1
49	0C80007A	Steel Ball 2mm	3	L24	0E03226A	Washer 2.1x4.5x0.1	1
50	CA80725A	Take-up Reel Hub Ass'y	1	L25	0C82725A	M2.6x9 Washer Faced	1
51	0C80613A	Take-up Reel Hub Spring	1	L26	0E00691A	M2x3 + Pan	1
52	CA80368A	Take-up Pressure Roller Arm Ass'y	1	L27	0E03044A	FT2.5x20 + Pan	1
53	0C81423A	Take-up Pressure Roller Arm Spring	1	L28	0E03220A	ST3x5 + Countersunk	1
54	0C85429A	Switch Hold Plate	1	L29	0E03666A	ST3.5x6 + Pan	1
55	0C80623A	Switch Plate	2	L30	0E03035A	M2x3.2 + Truss	1
56	0C85585A	Switch Collar A	2	L31	0E03235A	Washer 2x5x0.25	1
57	0C80626A	Leaf Switch	1	L32	0E03225A	Washer 1.8x3.8x0.5	1
58	0C85586A	Switch Collar B	2	L33	0E03194A	Washer 2.1mm	1
59	0C80017B	Record Protector Lever	1	L34	0C85423A	S. Thrust Spring Washer	1
60	0C80022B	Cassette Hold Spring	1	L35	0E03049A	Washer 1.8x3.2x0.5	1
61	CA80736A	Mechanism Chassis Ass'y	1	L36	0C08774A	Plate Washer L	1
62	CA80011B	Shut-off P.C.B. Ass'y	1	L37	0C08773A	Plate Washer R	1
63	CA80204A	Brake Ass'y	1	L38	0E03227A	Washer 2.7x5x0.5	1
64	0C80628A	Brake Spring B	1	L39	0E03237A	Nut Hex. M2.6	1
65	0C80630A	Brake Arm Collar	1	L40	0E00694A	Nut M2	1
66	0C80629A	Brake Arm	1	L41	0C82716A	Capstan Washer S	1
67	0C82724A	Reel Motor Holder	1	L42	0C82717A	Capstan Washer T	1
68	CA81699B	Reel Motor Ass'y	1	L43	0E00912A	Washer FT25 2.6x4.7x0.25	1
69	0C83380A	Idle Gear	1	L44	0E03509A	Washer 1.3x3.4x0.5	1
70	0C82701A	Supply Capstan Flange	1	L45	0E03653A	Washer 1.6x4x0.25	1
71	0C82700A	Take-up Capstan Flange	1	L46	0E03508A	Washer 1.7x6x0.25	1
72	0C80428A	Hold Spring	2	L47	0E03180A	Washer 2.6mm	1
				L48	0E03703A	Washer 1.6x5.5x0.25	1

4.6. Power Supply & Logic P.C.B. Ass'y

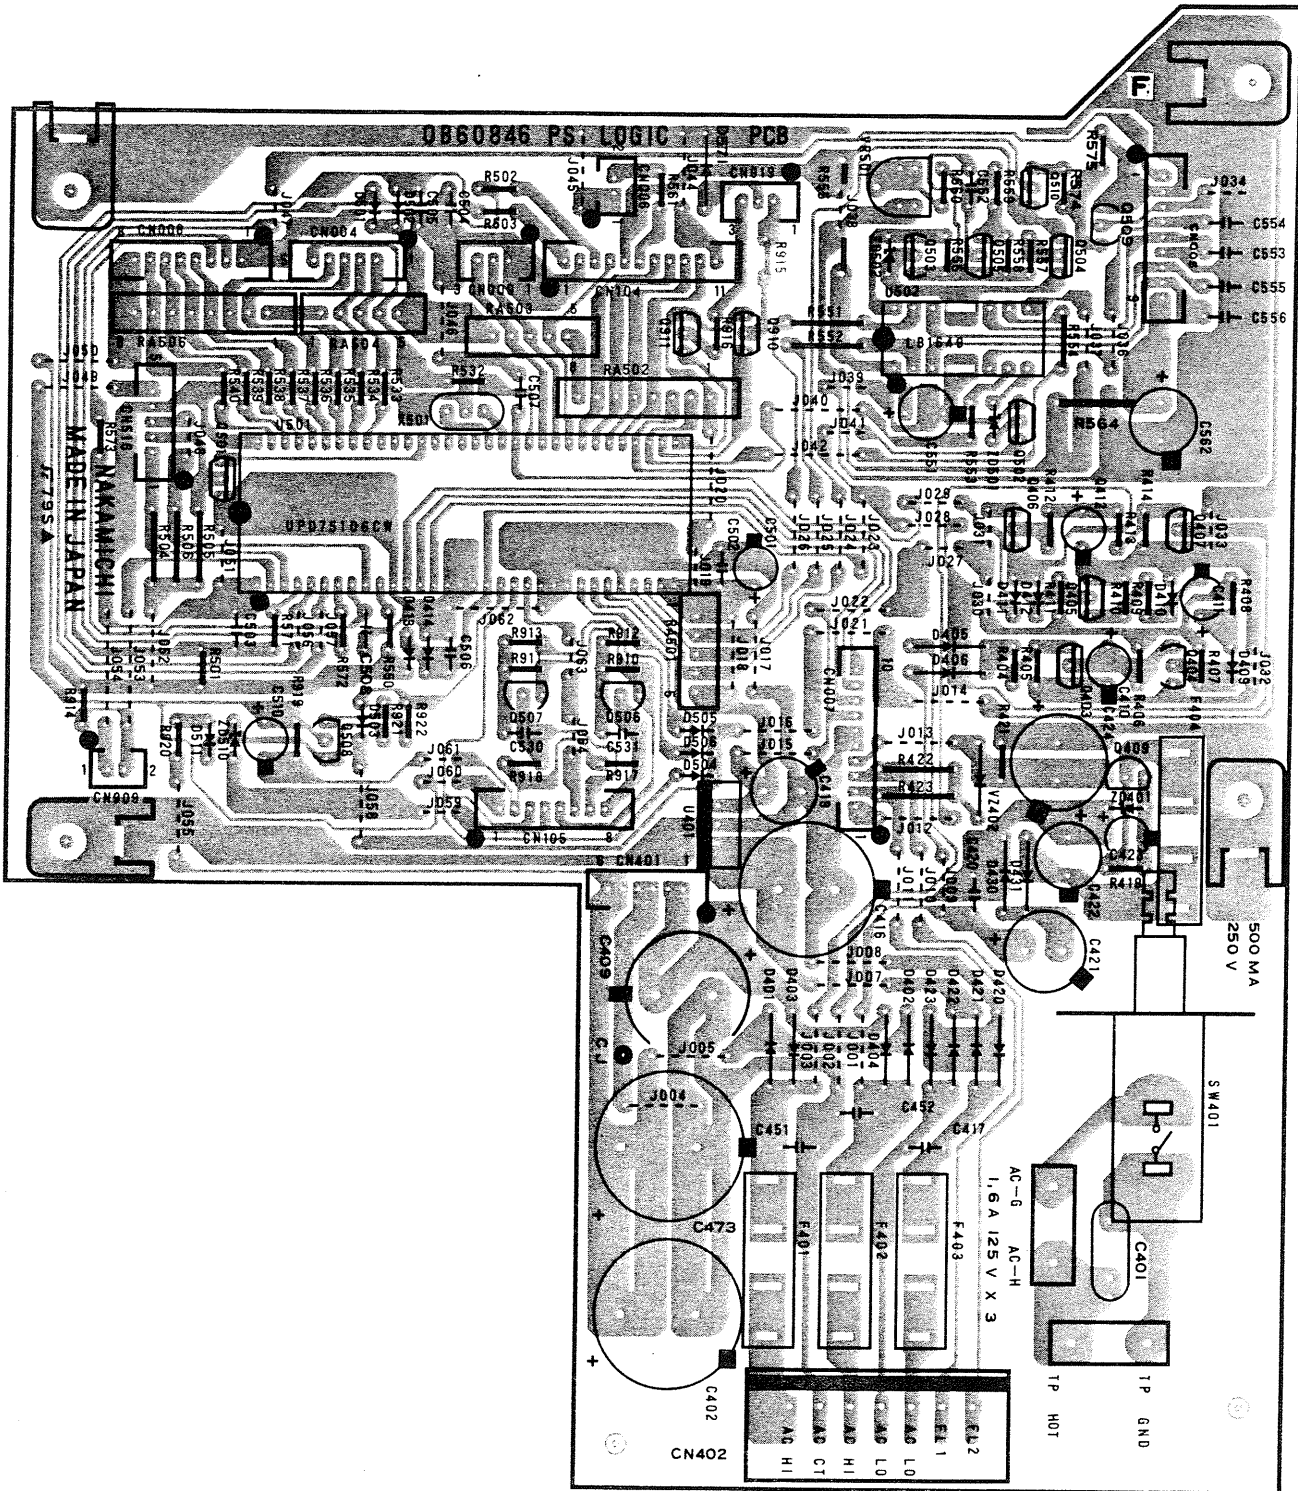


Fig. 4.6

4.7. Main P.C.B. Ass'y

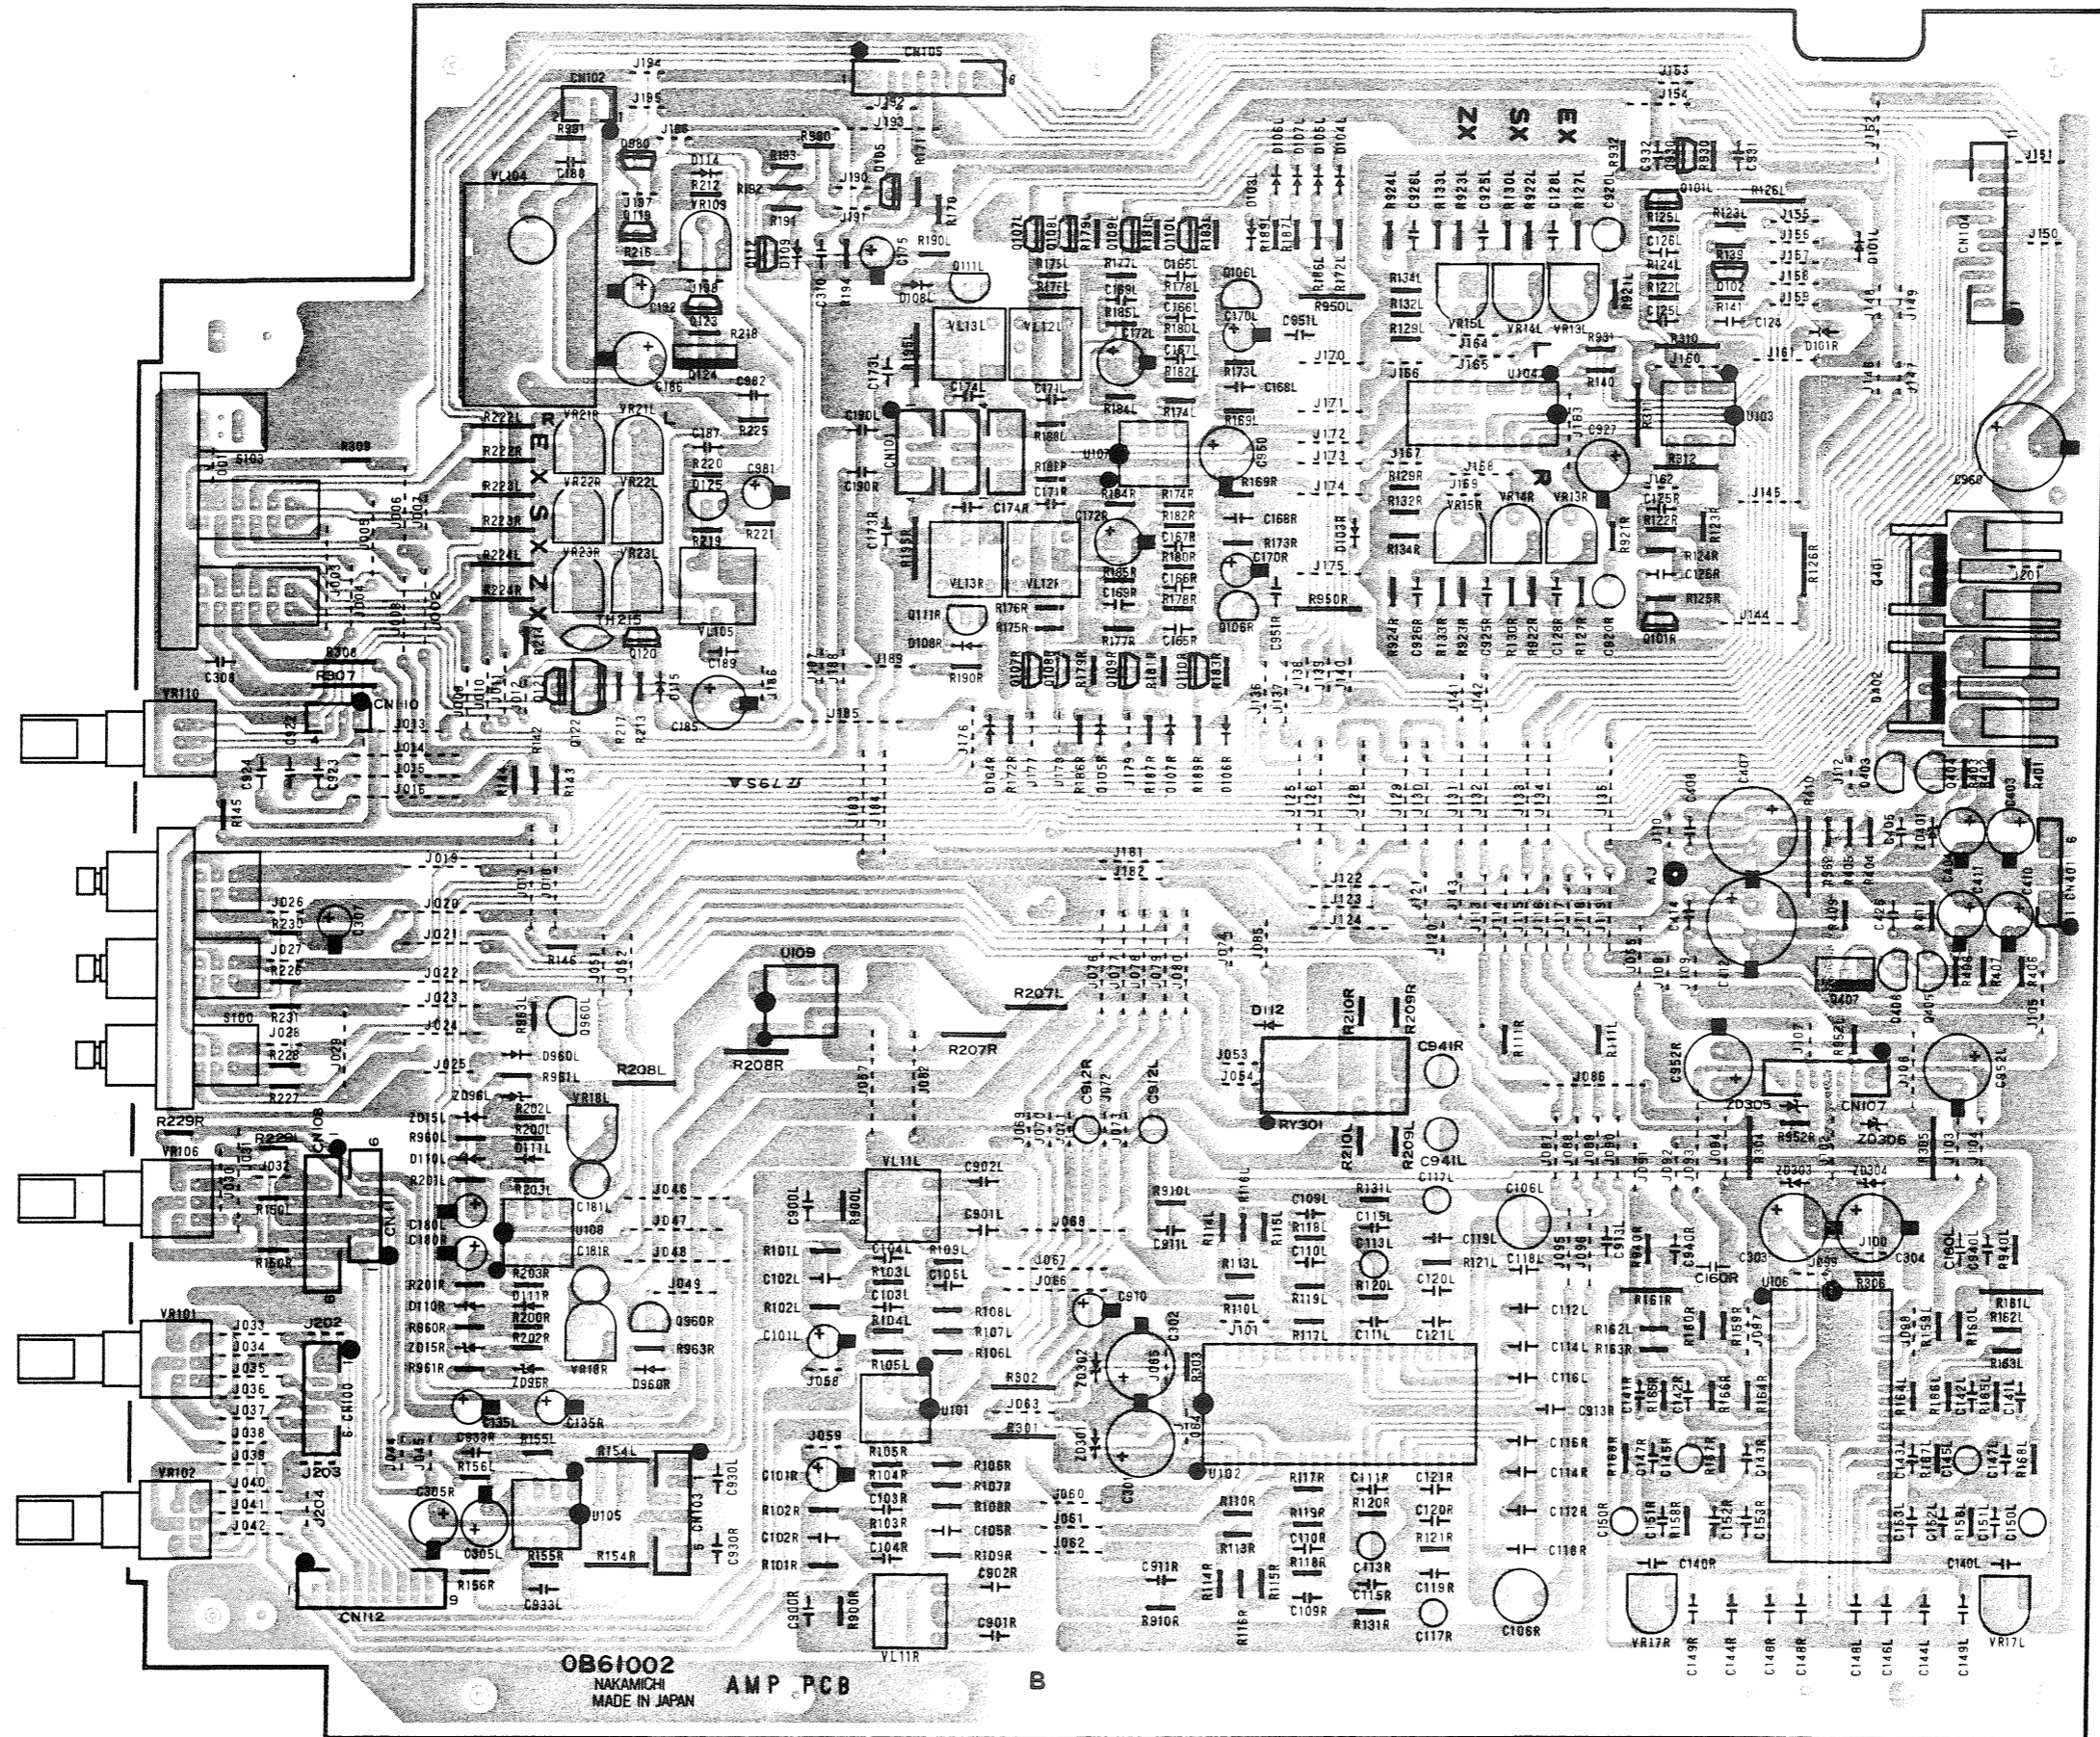


Fig. 4.7

NOTES: 1. Abbreviations

TR – Transistor, SID – Silicon Diode, ZD – Zener Diode, Varicap – Variable Capacitance Diode
 RK – Carbon Resistor, RM – Metal Film Resistor, RF – Fail Safe Type Resistor, RC – Cement Resistor
 CE – Electrolytic Capacitor, CML – Mylar Capacitor, CC – Ceramic Capacitor, CPP – PP Capacitor,
 CMM – Metalized Mylar Capacitor, CSP – Polystyrene Capacitor, C – Mica Capacitor,
 CT – Tantalum Capacitor

2. Description of capacitor: 10 16V = 10µ 16V

4.1. Bias Volume P.C.B. Ass'y

Schematic Ref. No.	Part No.	Description
	BA08836A	Bias Volume P.C.B. Ass'y
	0B61084A	Bias Volume P.C.B.
VR110	0B30159A	VR 10KBx2
CN110	0B85202A	4P Connector Ass'y

4.2. Input Volume P.C.B. Ass'y

Schematic Ref. No.	Part No.	Description
	BA08837A	Input Volume P.C.B. Ass'y
	0B61086A	Input Volume P.C.B.
VR101	0B30156A	VR 100KMN C.C
VR102	0B30157A	VR 100KAX2
CN112	0B85203A	9P Connector Ass'y

4.3. Output Volume P.C.B. Ass'y

Schematic Ref. No.	Part No.	Description
	BA08838A	Output Volume P.C.B. Ass'y
	0B61085A	Output Volume P.C.B.
VR106	0B30160A	VR 10KAX2
R150L,R	0B25661A	RM 2.2K 1/4W F
CN111	0B85204A	6P Connector Ass'y

4.4. Timer Switch P.C.B. Ass'y

Schematic Ref. No.	Part No.	Description
	BA08841A	Timer Switch P.C.B. Ass'y
	0B61087A	Timer Switch P.C.B.
S701	0B70175A	Slide Switch 2-4
CN009	0B83936A	3P H-Connector Ass'y

4.5. Front P.C.B. Ass'y

Schematic Ref. No.	Part No.	Description
	BA08846A	Front P.C.B. Ass'y
	0B61082B	Front P.C.B.
U601	0B11860A	IC MSC7112-01
Q601,602	0B10030A	TR 2SC1740S (S)
Q603,604	0B10030A	TR 2SC1740S (S)
Q605,606	0B10030A	TR 2SC1740S (S)
Q607,608	0B10030A	TR 2SC1740S (S)
Q609,610	0B10030A	TR 2SC1740S (S)
Q611	0B10030A	TR 2SC1740S (S)
ED601	0B12709A	LED TL5G126
R601	0B09713A	RK 33K 1/6W J

Schematic Ref. No.	Part No.	Description
R602	0B09701A	RK 10K 1/6W J
R603,604	0B09677A	RK 1K 1/6W J
R605	0B09677A	RK 1K 1/6W J
R606,607	0B09717A	RK 47K 1/6W J
R608,609	0B09717A	RK 47K 1/6W J
R610,611	0B09717A	RK 47K 1/6W J
R612,613	0B09717A	RK 47K 1/6W J
R614,615	0B09717A	RK 47K 1/6W J
R616	0B09717A	RK 47K 1/6W J
R617	0B09629A	RK 10 1/6W J
R651	0B09701A	RK 10K 1/6W J
R652	0B09693A	RK 4.7K 1/6W J
R653	0B09705A	RK 15K 1/6W J
R654	0B09701A	RK 10K 1/6W J
R655	0B09693A	RK 4.7K 1/6W J
C601	0B41681A	CC 100P 50V J
C602	0B40980A	CE 100 6.3V
C603	0B40173A	CE 1 50V
S601,602	0B70214A	Tact Switch
S603,604	0B70214A	Tact Switch
S605,606	0B70214A	Tact Switch
S607,608	0B70214A	Tact Switch
S609	0B70214A	Tact Switch
CN7	0B85205A	10P H-Connector Ass'y
CN8	0B85206A	8P H-Connector Ass'y
CN919	0B83937A	3P H-Connector Ass'y 250
FL601	0B90461A	FL Display FIP13BW7Y
	0J07086A	FL Cushion DR
	0J06238A	FL Stopper

4.6. Power Supply & Logic P.C.B. Ass'y

Schematic Ref. No.	Part No.	Description
	BA08840A	Power Supply & Logic P.C.B. Ass'y (Except JPN)
	BA08843A	Power Supply & Logic P.C.B. Ass'y (JPN)
		— Power Supply —
U401	0B11753A	IC NJM7805FA
Q403,404	0B10033A	TR 2SC1740S (S)
Q405	0B10033A	TR 2SC1740S (S)
Q406	0B10058A	TR DTA114ES
Q407	0B10033A	TR 2SC1740S (S)
Q409	0B10015A	TR 2SA1020
ZD401	0B12708A	ZD 24V MA4240N-H
ZD402	0B12707A	ZD 4.7V MA4047N
D401,402	0B12365A	SiD 1SR35-100A
D403,404	0B12365A	SiD 1SR35-100A
D405,406	0B12365A	SiD 1SR35-100A
D409,410	0B06398A	SiD 1SS176
D411,412	0B06398A	SiD 1SS176
D420,421	0B12365A	SiD 1SR35-100A
D422,423	0B12365A	SiD 1SR35-100A
D430,431	0B12365A	SiD 1SR35-100A
R404	0B09709A	RK 22K 1/6W J
R405	0B09703A	RK 12K 1/6W J
R406	0B09701A	RK 10K 1/6W J

Schematic Ref. No.	Part No.	Description
R407,408	0B09693A	RK 4.7K 1/6W J
R409	0B09719A	RK 56K 1/6W J
R410	0B09713A	RK 33K 1/6W J
R411,412	0B09693A	RK 4.7K 1/6W J
R413	0B09719A	RK 56K 1/6W J
R414	0B09713A	RK 33K 1/6W J
R419	0B09685A	RK 2.2K 1/6W J
R421	0B09701A	RK 10K 1/6W J
R422,423	0B09653A	RK 100 1/6W J
C401	0B41825A	CC 4700P AC400V (Except JPN)
	0B41826A	CC 4700P AC250 (JPN)
C402	0B40801A	CE 6800 25V
C409	0B40363A	CE 2200 25V
C410	0B40630A	CE 22 10V (LN)
C411,412	0B40255A	CE 1 50V (LN)
C416	0B40362A	CE 6800 16V
C417	0B41298A	CML 0.1 50V J
C419	0B40067A	CE 470 10V
C420	0B41298A	CML 0.1 50V J
C421	0B40798A	CE 330 35V
C422	0B40120A	CE 100 50V
C423	0B40100A	CE 10 35V
C424	0B40802A	CE 1000 35V
C451,452	0B41298A	CML 0.1 50V J
C473	0B40801A	CE 6800 25V
S401	0B71012A	Power Switch 1P TV-4
CN401	0B81463A	6P T-Post
CN402	0B81574A	7P T-Post
	0B08349B	Fuse Clip (8)
	0E06668A	Earth Lug for P.C.B. (4)
	0B84275A	Wrapping Terminal 1P (2)

— Motor Driver —

U502	0B11368A	IC LB1649
Q502	0B10062A	TR DTC144ES
Q503	0B10029A	TR 2SA933S (S)
Q504	0B10062A	TR DTC144ES
Q505	0B10033A	TR 2SC1740S (S)
Q509	0B06066A	TR 2SD471
Q510	0B10368A	TR DTC144TS
ZD501	0B12153A	ZD 6.2V RD6.2B2
ZD502	0B12288A	ZD 5.1V MTZ5.1B
D413,414	0B06398A	SiD 1SS176
D503,504	0B06398A	SiD 1SS176
D505,506	0B06398A	SiD 1SS176
VR501	0B32192A	Semi VR 5K
R551,552	0B01857A	RK 1K 1/4W J
R553,554	0B09677A	RK 1K 1/6W J
R555	0B24361A	Fuse Resistor 27 1W
R556	0B09701A	RK 10K 1/6W J
R557	0B09681A	RK 1.5K 1/6W J
R558	0B09695A	RK 5.6K 1/6W J
R559	0B09717A	RK 47K 1/6W J
R560	0B09677A	RK 1K 1/6W J
R561	0B09669A	RK 470 1/6W J
R564	0B09217A	RF 5.6 1/4W J
R574	0B09684A	RK 2K 1/6W J
R575	0B09725A	RK 100K 1/6W J
C551	0B40078A	CE 100 16V
C552	0B41286A	CML 0.01 50V J

Schematic Ref. No.	Part No.	Description
C553,554	OB41298A	CML 0.1 50V J
C555,556	OB41298A	CML 0.1 50V J
C562	OB40079A	CE 220 16V
CN005	OB84084A	9P T-Post
CN006	OB84278A	2P T-Post

— MPU —

U501	OB11884A	IC uPD75106CW
Q501	OB10068A	TR DTC114ES
Q506,507	OB10029A	TR 2SA933S (S)
Q508	OB10029A	TR 2SA933S (S)
Q910,911	OB10053A	TR DTA144ES
ZD510	OB12695A	ZD 10V MA4100(N)
D501,502	OB06398A	SiD 1SS176
D511	OB06398A	SiD 1SS176
D571	OB12634A	Varistor 02YS
X501	OB92045A	Crystal 4.0MHZ
RA501	OB21101A	R Network 10Kx3
RA502	OB21102A	R Network 10Kx6
RA503	OB21101A	R Network 10Kx3
RA504	OB21101A	R Network 10Kx3
RA506	OB21102A	R Network 10Kx6
R501	OB09689A	RK 3.3K 1/6W J
R502,503	OB09701A	RK 10K 1/6W J
R504,505	OB09701A	RK 10K 1/6W J
R506	OB09701A	RK 10K 1/6W J
R532,533	OB09677A	RK 1K 1/6W J
R534,535	OB09677A	RK 1K 1/6W J
R536,537	OB09677A	RK 1K 1/6W J
R538,539	OB09677A	RK 1K 1/6W J
R540	OB09677A	RK 1K 1/6W J
R550	OB09701A	RK 10K 1/6W J
R571	OB09677A	RK 1K 1/6W J
R572,573	OB09701A	RK 10K 1/6W J
R910,911	OB09709A	RK 22K 1/6W J
R912,913	OB09725A	RK 100K 1/6W J
R914	OB09701A	RK 10K 1/6W J
R915,916	OB09661A	RK 220 1/6W J
R917,918	OB09725A	RK 100K 1/6W J
R919	OB09721A	RK 68K 1/6W J
R920	OB09669A	RK 470 1/6W J
R921	OB09725A	RK 100K 1/6W J
R922	OB09701A	RK 10K 1/6W J
C501	OB40077A	CE 47 16V
C502	OB41298A	CML 0.1 50V J
C503	OB41302A	CML 0.22 50V J
C504,505	OB41286A	CML 0.01 50V J
C506,507	OB41274A	CML 1000P 50V J
C508	OB41944A	CC 1000P 50V K
C510	OB40756A	CE 1 50V (LN)
C530,531	OB41290A	CML 0.022 50V J
CN004	OB81462A	5P T-Post
CN007	OB84302A	10P T-Post
CN008	OB84296A	8P T-Post
CN009	OB84281A	3P T-Post
CN104	OB84305A	11P T-Post
CN105	OB81465A	8P T-Post
CN516	OB84286A	5P T-Post
CN909	OB81459A	2P T-Post
CN919	OB81460A	3P T-Post

— Miscellaneous —

OB60846F Power Supply & Logic P.C.B.

4.7. Main P.C.B. Ass'y

Schematic Ref. No.	Part No.	Description
	BA08832A	Main P.C.B. Ass'y

— Input Amp. —

U101	OB06146A	IC NJM4558DD
VL11L,R	OB51373A	MPX Filter
R101L,R	OB09749A	RK 1M 1/6W J
R102L,R	OB09717A	RK 47K 1/6W J
R103L,R	OB09717A	RK 47K 1/6W J
R104L,R	OB09709A	RK 22K 1/6W J
R105L,R	OB09677A	RK 1K 1/6W J
R106L,R	OB09677A	RK 1K 1/6W J
R107L,R	OB25236A	RM 2.67K 1/4W F
R108L,R	OB25236A	RM 2.67K 1/4W F
R109L,R	OB25267A	RM 5.62K 1/4W F
R900L,R	OB09725A	RK 100K 1/6W J
C101L,R	OB40778A	CE 10 25V
C102L,R	OB41976A	CC 33P 50V J
C103L,R	OB41978A	CC 68P 50V J
C104L,R	OB41976A	CC 33P 50V J
C105L,R	OB01802A	CML 2200P 50V J
C900L,R	OB09989A	CC 120P 50V J
C901L,R	OB09189A	CML 2700P 50V J
C902L,R	OB01804A	CML 3900P 50V J
CN112	OB84084A	9P T-Post

— Encoder —

U102	OB11363A	IC CX20188
ZD301,302	OB12695A	ZD 10V MA4100(N)
R110L,R	OB25267A	RM 5.62K 1/4W F
R113L,R	OB25195A	RM 1K 1/4W F
R114L,R	OB25304A	RM 13.7K 1/4W F
R115L,R	OB25251A	RM 3.83K 1/4W F
R116L,R	OB25244A	RM 3.24K 1/4W F
R117L,R	OB09749A	RK 1M 1/6W J
R118L,R	OB25171A	RM 562 1/4W F
R119L,R	OB25324A	RM 22.1K 1/4W F
R120L,R	OB09698A	RK 7.5K 1/6W J
R121L,R	OB09673A	RK 680 1/6W J
R131L,R	OB09700A	RK 9.1K 1/6W J
R301,302	OB09508A	RF 56 1/4W J
R303	OB25398A	RM 130K 1/4W F
R910L,R	OB25099A	RM 100 1/4W F
C106L,R	OB40474A	CE 47 16V (BP)
C109L,R	OB41133A	CPP 2200P 100V G
C110L,R	OB41133A	CPP 2200P 100V G
C111L,R	OB41139A	CPP 3900P 100V G
C112L,R	OB41306A	CML 0.47 50V J
C113L,R	OB40817A	CE 1 50V (BP)
C114L,R	OB41300A	CML 0.15 50V J
C115L,R	OB41288A	CML 0.015 50V J
C116L,R	OB41302A	CML 0.22 50V J
C117L,R	OB40817A	CE 1 50V (BP)
C118L,R	OB41296A	CML 0.068 50V J
C119L,R	OB41295A	CML 0.056 50V J
C120L,R	OB41143A	CPP 5600P 100V G
C121L,R	OB05681A	CML 0.01 50V J
C301,302	OB40608A	CE 470 16V
C910	OB40778A	CE 10 25V
C911L,R	OB09989A	CC 120P 50V J
C913L,R	OB09989A	CC 120P 50V J

— Rec. Eq. Amp. —

U103	OB06146A	IC NJM4558DD
U104	OB11027A	IC TC9145P
Q101L,R	OB10033A	TR 2SC1740S (S)
Q102	OB10029A	TR 2SA933S (S)
Q930	OB10029A	TR 2SA933S (S)
D101L,R	OB06398A	SiD 1SS176
VR13L,R	OB32193A	Semi VR 10K
VR14L,R	OB32193A	Semi VR 10K

Schematic Ref. No.	Part No.	Description
VR15L,R	OB32194A	Semi VR 20K
R111L,R	OB09733A	RK 220K 1/6W J
R122L,R	OB09705A	RK 15K 1/6W J
R123L,R	OB09703A	RK 12K 1/6W J
R124L,R	OB25276A	RM 6.98K 1/4W F
R125L,R	OB09749A	RK 1M 1/6W J
R126L,R	OB09701A	RK 10K 1/6W J
R127L,R	OB09701A	RK 10K 1/6W J
R129L,R	OB09693A	RK 4.7K 1/6W J
R130L,R	OB09697A	RK 6.8K 1/6W J
R132L,R	OB09689A	RK 3.3K 1/6W J
R133L,R	OB09701A	RK 10K 1/6W J
R134L,R	OB09701A	RK 10K 1/6W J
R139	OB09717A	RK 47K 1/6W J
R140,141	OB09725A	RK 100K 1/6W J
R142,143	OB09733A	RK 220K 1/6W J
R144	OB09733A	RK 220K 1/6W J
R145,146	OB09693A	RK 4.7K 1/6W J
R310	OB09693A	RK 4.7K 1/6W J
R311	OB09701A	RK 10K 1/6W J
R312	OB09693A	RK 4.7K 1/6W J
R921L,R	OB09705A	RK 15K 1/6W J
R922L,R	OB09694A	RK 5.1K 1/6W J
R923L,R	OB09701A	RK 10K 1/6W J
R924L,R	OB09701A	RK 10K 1/6W J
R930,931	OB09725A	RK 100K 1/6W J
R932	OB09717A	RK 47K 1/6W J
C124	OB41971A	CC 0.1 50V Z
C125L,R	OB09993A	CML 820P 50V J
C126L,R	OB05681A	CML 0.01 50V J
C128L,R	OB09045A	CML 0.027 50V J
C920L,R	OB40474A	CE 47 16V (BP)
C922,923	OB41971A	CC 0.1 50V Z
C924	OB41971A	CC 0.1 50V Z
C925L,R	OB09045A	CPP 0.027 50V J
C926L,R	OB05659A	CML 5600P 50V J
C927	OB40799A	CE 100 35V
C931,932	OB41971A	CML 0.1 50V Z

— Rec. Amp. —

U107	OB06387A	IC NJM2043DD
Q105	OB10053A	TR DTA144ES
Q106L,R	OB06299A	TR 2SC2878
Q107L,R	OB10033A	TR 2SC1740S (S)
Q108L,R	OB10033A	TR 2SC1740S (S)
Q109L,R	OB10033A	TR 2SC1740S (S)
Q110L,R	OB10033A	TR 2SC1740S (S)
Q111L,R	OB06299A	TR 2SC2878
Q112	OB10029A	TR 2SA933S (S)
D103L,R	OB06398A	SiD 1SS176
D104L,R	OB06398A	SiD 1SS176
D105L,R	OB06398A	SiD 1SS176
D106L,R	OB06398A	SiD 1SS176
D107L,R	OB06398A	SiD 1SS176
D108L,R	OB06398A	SiD 1SS176
D109	OB06398A	SiD 1SS176
VL12L,R	OB51374A	Coil 15.8mH
VL13L,R	OB51370A	Trap Coil 1.05mH
R169L,R	OB09711A	RK 27K 1/6W J
R170	OB09701A	RK 10K 1/6W J
R171	OB09725A	RK 100K 1/6W J
R172L,R	OB09709A	RK 22K 1/6W J
R173L,R	OB09733A	RK 220K 1/6W J
R174L,R	OB25195A	RM 1K 1/4W F
R175L,R	OB09685A	RK 2.2K 1/6W J
R176L,R	OB09677A	RK 1K 1/6W J
R177L,R	OB25252A	RM 3.92K 1/4W F
R178L,R	OB09694A	RK 5.1K 1/6W J
R179L,R	OB09741A	RK 470K 1/6W J
R180L,R	OB09693A	RK 4.7K 1/6W J
R181L,R	OB09741A	RK 470K 1/6W J
R182L,R	OB09695A	RK 5.6K 1/6W J
R183L,R	OB09741A	RK 470K 1/6W J
R184L,R	OB09733A	RK 220K 1/6W J

Schematic Ref. No.	Part No.	Description
R185L,R	0B25365A	RM 59.0K 1/4W F
R186L,R	0B09709A	RK 22K 1/6W J
R187L,R	0B09709A	RK 22K 1/6W J
R188L,R	0B22644A	RM 1.54K 1/4W F
R189L,R	0B09709A	RK 22K 1/6W J
R190L,R	0B09695A	RK 5.6K 1/6W J
R191	0B09717A	RK 47K 1/6W J
R192	0B09701A	RK 10K 1/6W J
R193	0B09721A	RK 68K 1/6W J
R194	0B09701A	RK 10K 1/6W J
R195L,R	0B09629A	RK 10 1/6W J
R950L,R	0B09701A	RK 10K 1/6W J
C165L,R	0B41133A	CPP 2200P 100V G
C166L,R	0B41278A	CML 2200P 50V J
C167L,R	0B05582A	CML 0.022 50V J
C168L,R	0B09045A	CML 0.027 50V J
C169L,R	0B05682A	CML 0.068 50V J
C170L,R	0B40557A	CE 1 50V
C171L,R	0B01914A	CML 3300P 50V J
C172L,R	0B40559A	CE 47 16V
C173L,R	0B09322A	CPP 330P 100V J
C174L,R	0B09834A	CPP 2200P 100V J
C175	0B40778A	CE 10 25V
C310	0B05550A	CML 1000P 50V J
C950	0B40798A	CE 330 35V
C951L,R	0B05550A	CML 1000P 50V J
CN101	0B81461A	4P T-Post

— Decoder —

U106	0B11363A	IC CX20188
ZD303,304	0B12695A	ZD 10V MA4100(N)
VR17L,R	0B32192A	Semi VR 5K
R158L,R	0B09673A	RK 680 1/6W J
R159L,R	0B09725A	RK 100K 1/6W J
R160L,R	0B25195A	RM 1K 1/4W F
R161L,R	0B09420A	RM 2.2K 1/4W F
R162L,R	0B25244A	RM 3.24K 1/4W F
R163L,R	0B25251A	RM 3.83K 1/4W F
R164L,R	0B09749A	RK 1M 1/6W J
R165L,R	0B25171A	RM 562 1/4W F
R166L,R	0B25324A	RM 22.1K 1/4W F
R167L,R	0B09698A	RK 7.5K 1/6W J
R168L,R	0B09700A	RK 9.1K 1/6W J
R304,305	0B09508A	RF 56 1/4W J
R306	0B25398A	RM 130K 1/4W F
R940L,R	0B25099A	RM 100 1/4W F
C140L,R	0B09989A	CC 120P 50V J
C141L,R	0B41133A	CPP 2200P 100V G
C142L,R	0B41133A	CPP 2200P 100V G
C143L,R	0B41139A	CPP 3900P 100V G
C144L,R	0B41306A	CML 0.47 50V J
C145L,R	0B40817A	CE 1 50V (BP)
C146L,R	0B41300A	CML 0.15 50V J
C147L,R	0B41268A	CML 0.015 50V J
C148L,R	0B41302A	CML 0.22 50V J
C149L,R	0B41296A	CML 0.068 50V J
C150L,R	0B40817A	CE 1 50V (BP)
C151L,R	0B41295A	CML 0.056 50V J
C152L,R	0B41143A	CPP 5600P 100V G
C153L,R	0B05681A	CML 0.01 50V J
C160L,R	0B41201A	CPP 100P 100V J
C303,304	0B40608A	CE 470 16V
C940L,R	0B09989A	CC 120P 50V J

— Headphone Amp. —

U105	0B11365A	IC M5216
R154L,R	0B09216A	RF 10 1/4W J
R155L,R	0B09717A	RK 47K 1/6W J
R156L,R	0B09717A	RK 47K 1/6W J
C135L,R	0B40778A	CE 10 25V
C305L,R	0B40800A	CE 100 25V
C930L,R	0B01804A	CML 3900P 100V J
C933L,R	0B41978A	CC 68P 50V J

Schematic Ref. No.	Part No.	Description
CN103	0B81637A	5P T-Post
CN111	0B81463A	6P T-Post
— Power Supply —		
Q401,402	0B06452A	TR 2SD1406
Q403,404	0B06142A	TR 2SC2240
Q405,406	0B10050A	TR 2SA970
Q407	0B06451A	TR 2SB1015
ZD401	0B12705A	ZD 5.1V MA4051N
R401,402	0B09685A	RK 2.2K 1/6W J
R403	0B09677A	RK 1K 1/6W J
R404	0B25667A	RM 3.9K 1/4W F
R405	0B25669A	RM 4.7K 1/4W F
R406,407	0B09685A	RK 2.2K 1/6W J
R408	0B09677A	RK 1K 1/6W J
R409	0B22570A	RM 12K 1/4W F
R410	0B25308A	RM 15K 1/4W F
R411	0B09669A	RK 470 1/6W J
R962	0B09682A	RK 1.6K 1/6W J
C403,404	0B40800A	CE 100 25V
C405	0B41971A	CC 0.1 50V Z
C407	0B40705A	CE 3300 16V
C408	0B41971A	CC 0.1 50V Z
C410,411	0B40800A	CE 100 25V
C412	0B40361A	CE 2200 16V
C414	0B41971A	CC 0.1 50V Z
C425	0B41971A	CC 0.1 50V Z
	0B90448A	Heat Sink

— Tape/Source Switch —

U109	0B06124B	IC NJM4558D
D112	0B06398A	SID 1SS176
R207L,R	0B09725A	RK 100K 1/6W J
R208L,R	0B09677A	RK 1K 1/6W J
R209L,R	0B09701A	RK 10K 1/6W J
R210L,R	0B09701A	RK 10K 1/6W J
C912L,R	0B40610A	CE 10 25V (BP)
C941L,R	0B40610A	CE 10 25V (BP)
RY301	0B90279A	DS Relay 24V

— Bias Osc. —

Q119	0B10055A	TR DTA124ES
Q120	0B10070A	TR DTC143ES
Q121	0B10033A	TR 2SC1740S (S)
Q122	0B06069A	TR 2SB564
Q123	0B10033A	TR 2SC1740S (S)
Q124	0B06451A	TR 2SB1015
Q125	0B10222A	TR 2SC2705 (Y)
Q980	0B10053A	TR DTA144ES
ZD305,306	0B12695A	ZD 10V MA4100(N)
D114,115	0B06398A	SID 1SS176
VL104	0B51047A	BIAS OSC
VL105	0B51372A	OSC Tune
VR109	0B32192A	Semi VR 5K
R212,213	0B09665A	RK 330 1/6W J
R214	0B09701A	RK 10K 1/6W J
R216	0B09703A	RK 12K 1/6W J
R217	0B09653A	RK 100 1/6W J
R218	0B09701A	RK 10K 1/6W J
R219	0B09725A	RK 100K 1/6W J
R220	0B09701A	RK 10K 1/6W J
R221	0B09617A	RK 3.3 1/6W J
R225	0B09701A	RK 10K 1/6W J
R952L,R	0B09648A	RK 62 1/6W J
R980	0B09717A	RK 47K 1/6W J
R981	0B09693A	RK 4.7K 1/6W J
C185,186	0B40800A	CE 100 25V
C187	0B09993A	CML 820P 50V J
C188	0B41255A	CPP 0.018 100V J
C189	0B41261A	CPP 0.033 100V J
C192	0B40778A	CE 10 25V
C952L,R	0B40608A	CE 470 16V

Schematic Ref. No.	Part No.	Description
C981	0B40115A	CE 4.7 50V
C982	0B09270A	CPP 470P 160V J
TH215	0B19006A	Thermistor 3.3K
CN102	0B81459A	2P T-Post (WHT)
CN110	0B81461A	4P T-Post (WHT)

— Bias Adj. —

VR21L,R	0B32195A	Semi VR 50K
VR22L,R	0B32194A	Semi VR 20K
VR23L,R	0B32193A	Semi VR 10K
R222L,R	0B09705A	RK 15K 1/6W J
R223L,R	0B09697A	RK 6.8K 1/6W J
R224L,R	0B09653A	RK 100 1/6W J

— Meter Amp. —


U108	0B06124B	IC NJM4558D
Q960L,R	0B06299A	TR 2SC2878
ZD15L,R	0B12714A	ZD 3.3V RD3.3ESB1
ZD96L,R	0B12289A	ZD 5.1V MTZ 5.1C
D110L,R	0B06398A	SID 1SS176
D111L,R	0B06398A	SID 1SS176
D960L,R	0B06398A	SID 1SS176
VR18L,R	0B32192A	Semi VR 5K
R200L,R	0B09749A	RK 1M 1/6W J
R201L,R	0B09741A	RK 470K 1/6W J
R202L,R	0B09677A	RK 1K 1/6W J
R203L,R	0B09677A	RK 1K 1/6W J
R960L,R	0B09696A	RK 6.2K 1/6W J
R961L,R	0B09682A	RK 1.6K 1/6W J
R963L,R	0B09701A	RK 10K 1/6W J
C180L,R	0B40257A	CE 3.3 50V (LN)
C181L,R	0B40817A	CE 1 50V (BP)
C960	0B40608A	CE 470 16V

— Push Switch —

R226	0B09701A	RK 10K 1/6W J
R227	0B09685A	RK 2.2K 1/6W J
R228	0B09709A	RK 22K 1/6W J
R230,231	0B09701A	RK 10K 1/6W J
R307	0B09711A	RK 27K 1/6W J
R308,309	0B09725A	RK 100K 1/6W J
C190L,R	0B09270A	CPP 470P 100V J
C307	0B40559A	CE 47 16V
C308	0B41971A	CML 0.1 50V Z
S100-102	0B70177A	Push Switch MPX-DOL (1)
S103-105	0B70176A	Push Switch Tape (1)


— Miscellaneous —


CN100	0B61002B	Main P.C.B.
	0B83926A	6P H Connector Ass'y 330
CN104	0B83932A	11P H Connector Ass'y 250
CN105	0B83931B	8P H Connector Ass'y 150
CN107	0B83928A	7P H Connector Ass'y 410
CN108	0B83925A	6P H Connector Ass'y 360
CN401	0B83930B	6P H Connector Ass'y 300

- Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
- "DOLBY" and the double-D-symbol  are trademarks of Dolby Laboratories Licensing Corporation.


Nakamichi Corporation	1-153 Suzukicho, Kodaira, Tokyo 187 Phone: (0423) 42-1115
Nakamichi America Corporation	19701 South Vermont Ave., Torrance, CA 90502 Phone: (310) 538-8150
Nakamichi Canada	276 South West, Marine Drive, Vancouver, B.C. V5X 2R4 Phone: (604) 324-7535
Nakamichi Australia	Unit 12 620-632 Botany Road, Alexandria, N.S.W. 2015 Phone: (02) 667-0811
Nakamichi GmbH	Praunheimer Landstraße 32 6000 Frankfurt Main 90 Phone: (069) 7682021 (Office), 7682025 (Service)

(2) Mechanism Control Section

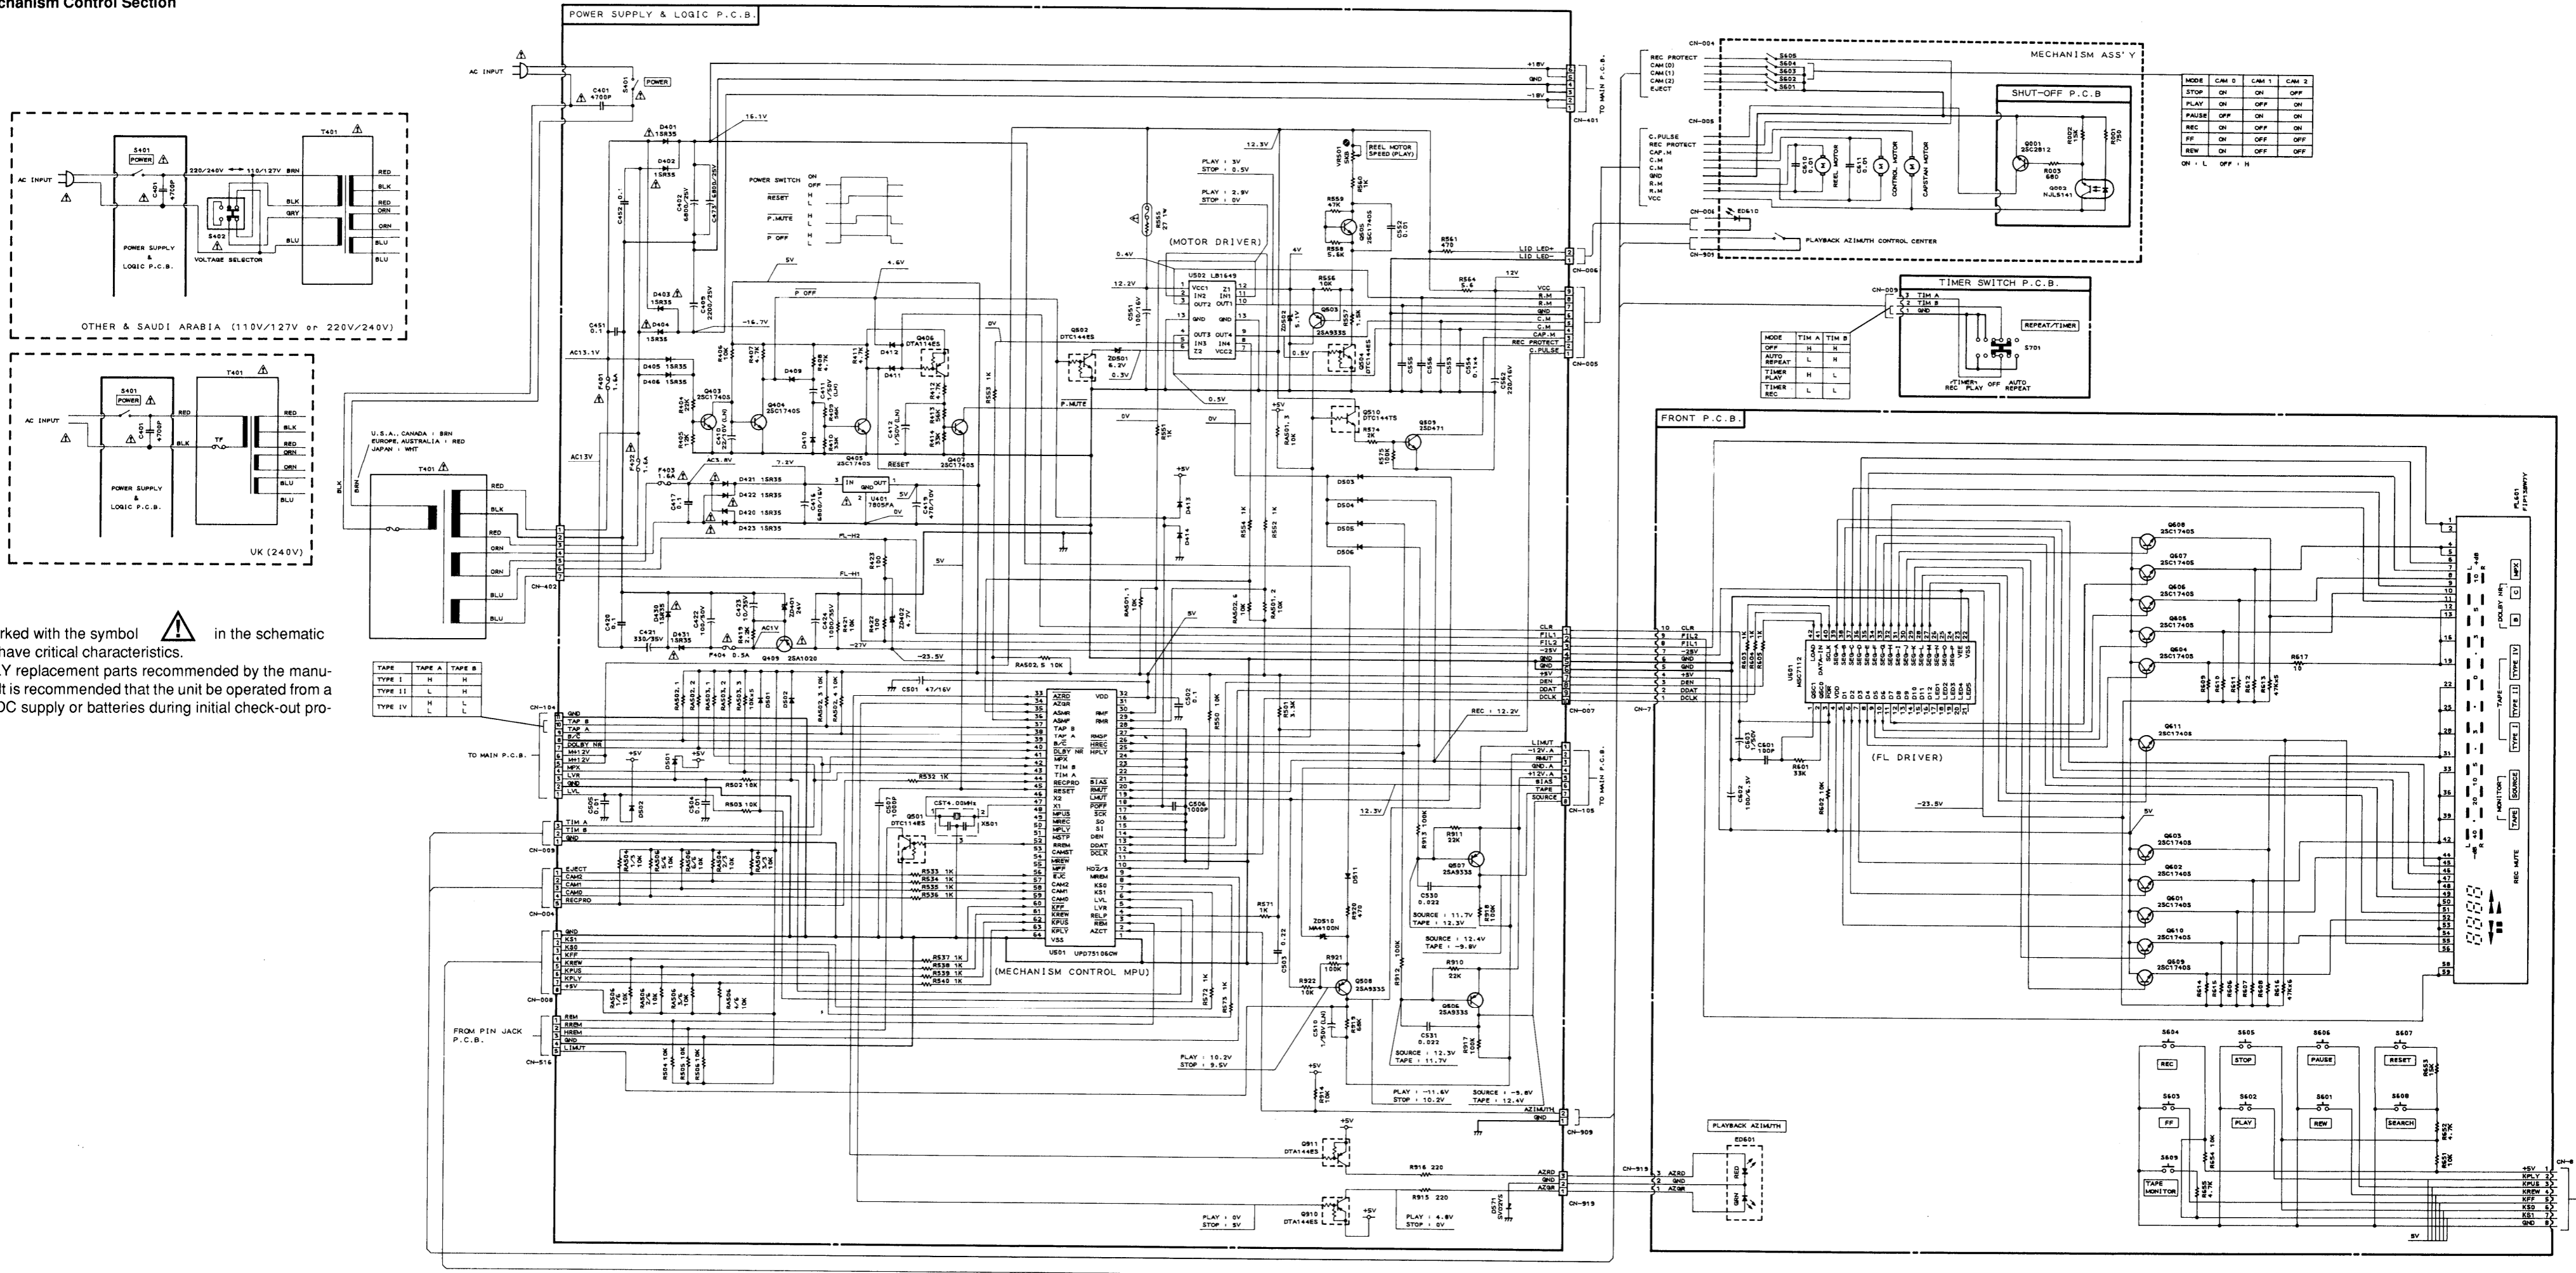

Parts marked with the symbol  in the schematic diagram have critical characteristics. Use ONLY replacement parts recommended by the manufacturer. It is recommended that the unit be operated from a suitable DC supply or batteries during initial check-out procedures.

5. SCHEMATIC DIAGRAMS (1) Amplifier Section

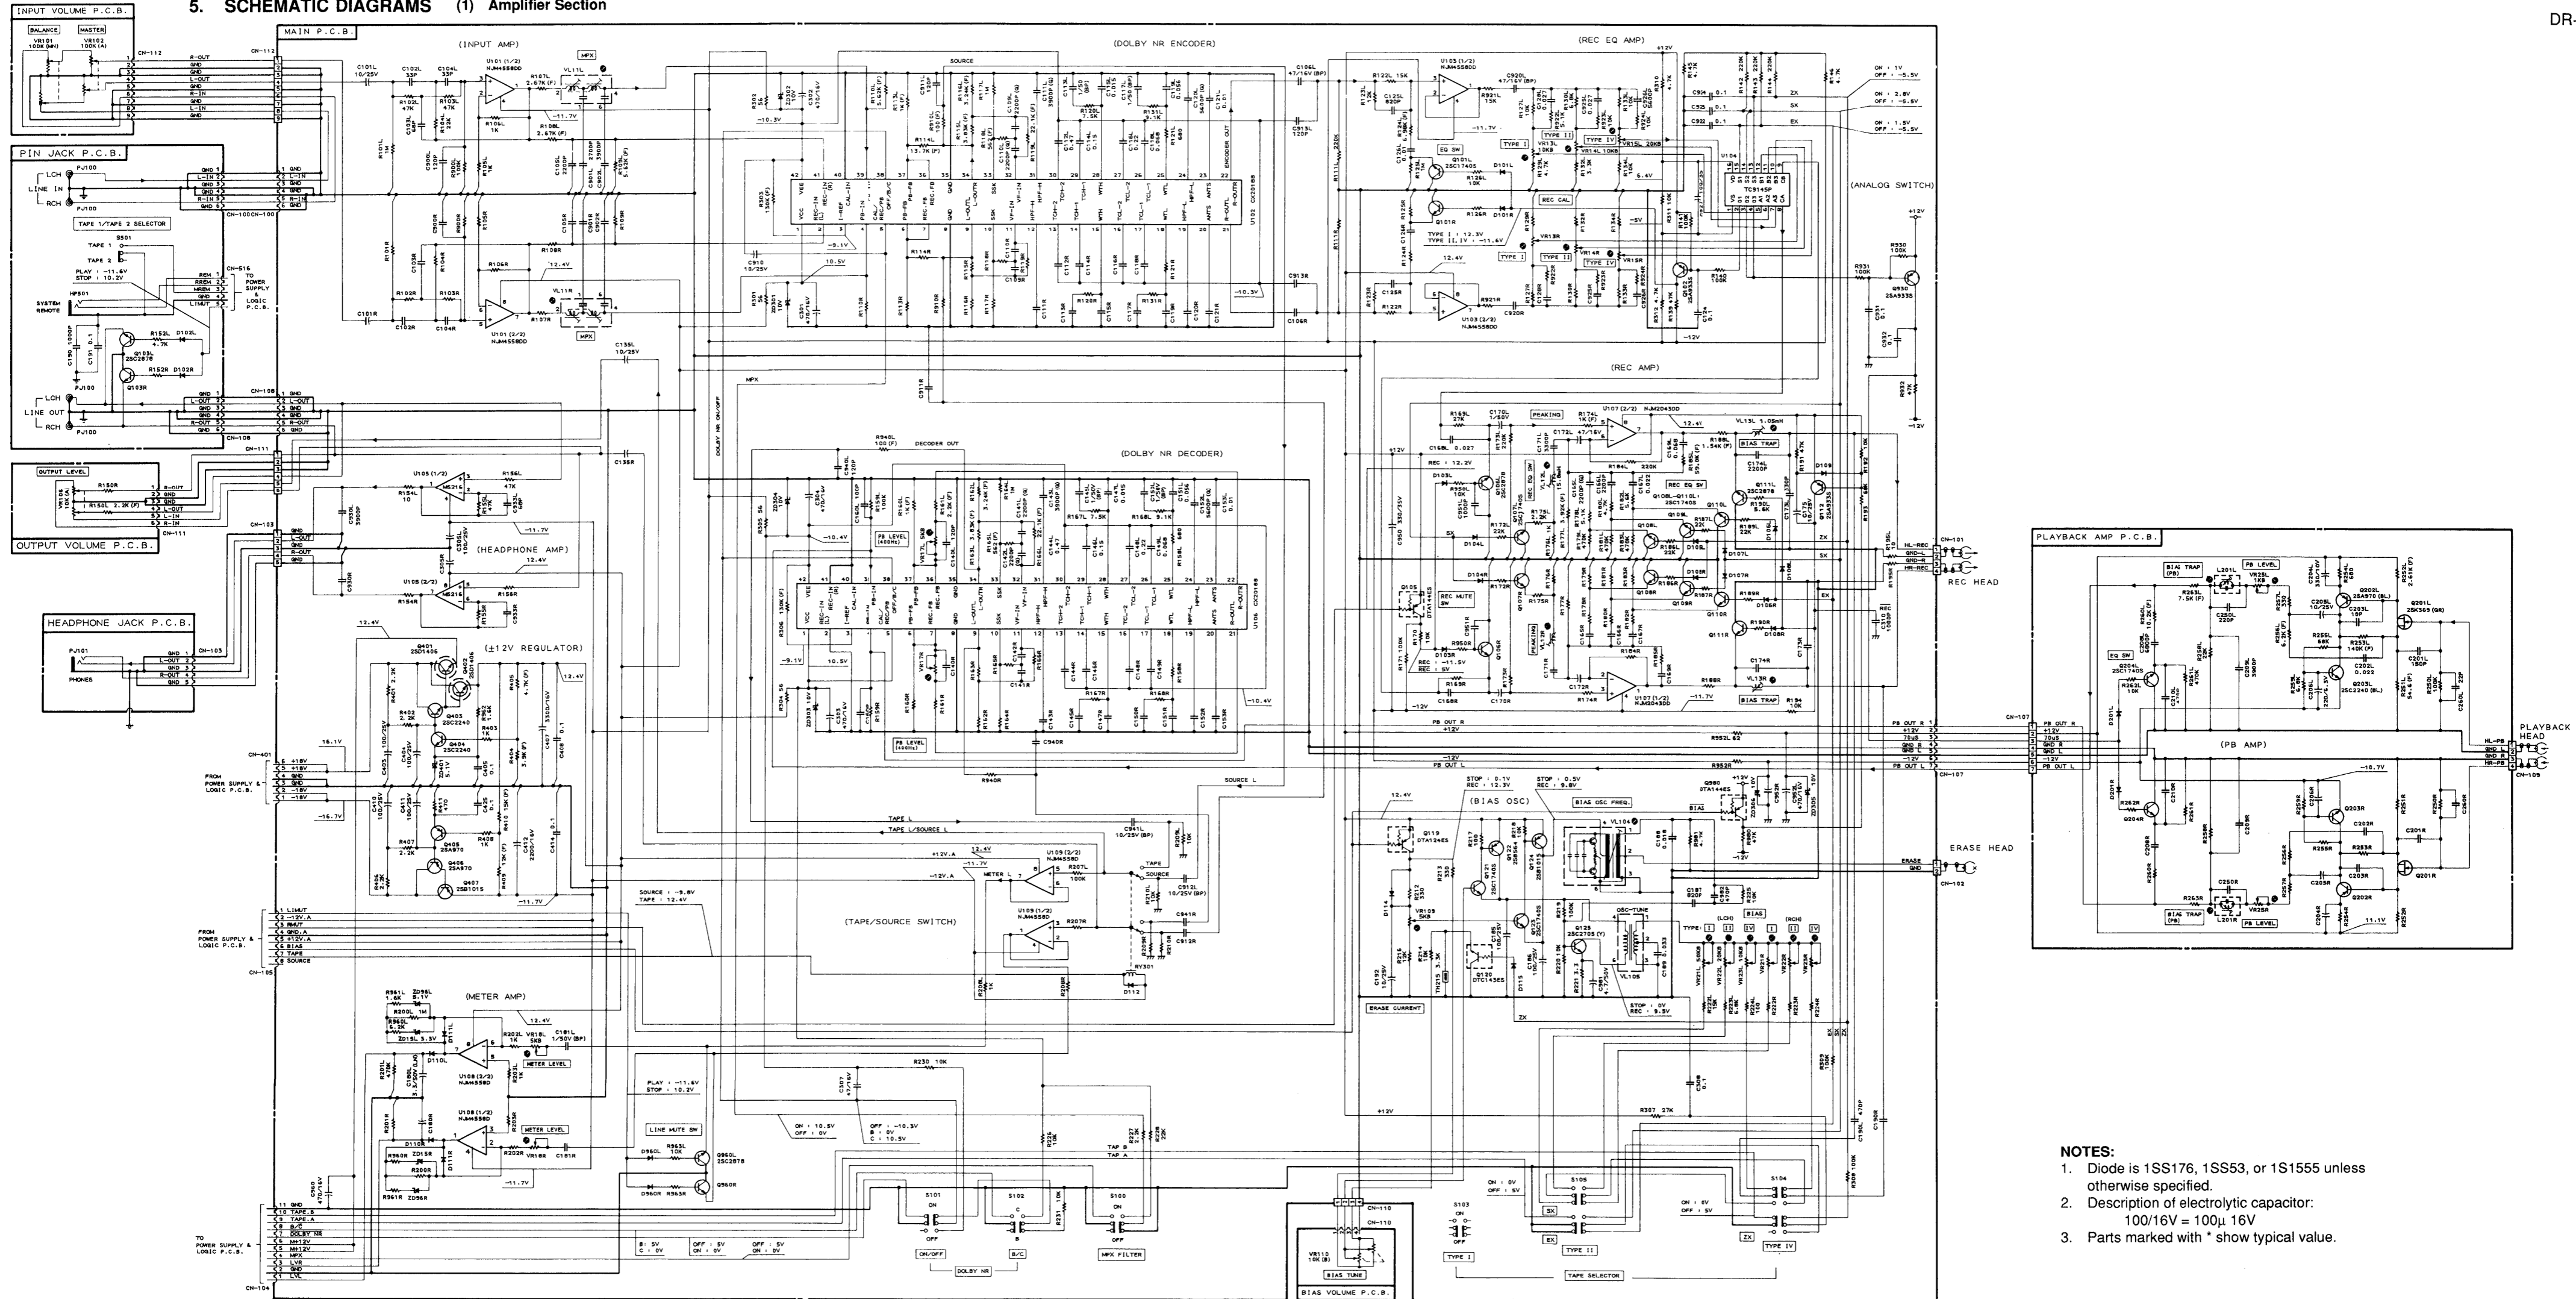

- NOTES:**
1. Diode is 1SS176, 1SS53, or 1S1555 unless otherwise specified.
 2. Description of electrolytic capacitor: 100/16V = 100µ 16V
 3. Parts marked with * show typical value.

Cassette Deck 1

(1 yr Warranty - Parts + Labor)

Service Manual

Nakamichi Cassette Deck 1



CONTENTS

1. General	1
2. Removal Procedures	3
2. 1. Top Cover Ass'y	3
2. 2. Cassette Case Cover Ass'y	3
2. 3. Sealing Panel Ass'y	3
2. 4. Front Panel	3
2. 5. Mechanism Ass'y	3
2. 6. Main P.C.B. Ass'y	4
2. 7. Power Switch Joint and Power Supply & Logic P.C.B. Ass'y	4
2. 8. Control Switch & Display P.C.B. Ass'y	4
2. 9. Head Mount Base Ass'y	5
3. Test Tapes and Gauges	5
4. Mechanical Adjustments	6
4. 1. Record Head and Playback Head Tilt Adjustment	6
4. 2. Head Base Stroke Check	6
4. 3. Erase Head Stroke Adjustment and Tape Guide Height Check	6
4. 4. Erase Head Height and Tilt Adjustment	7
4. 5. Playback Head and Record Head Height Adjustment and Azimuth Alignment	7
4. 6. Tape Travelling Check	8
4. 7. Eject Damper Adjustment	8
4. 8. Reel Motor Speed Adjustment in Play Mode	8
4. 9. Tape Speed Adjustment	8
4. 10. Lubrication	8
5. Parts Location for Electrical Adjustment	9
6. Electrical Adjustments	10
7. Mechanism Ass'y and Parts List	14
7. 1. Synthesis	14
7. 2. Chassis Ass'y (A01)	15
7. 3. Front Escutcheon Ass'y (B01)	16
7. 4. Mechanism Ass'y (B02)	18
8. Mounting Diagrams and Parts List	19
8. 1. Main P.C.B. Ass'y	19
8. 2. Power Supply & Logic P.C.B. Ass'y	21
8. 3. Shut-off P.C.B. Ass'y	22
8. 4. Timer Switch P.C.B. Ass'y	22
8. 5. Headphone P.C.B. Ass'y	22
8. 6. Pin Jack P.C.B. Ass'y	22
8. 7. Playback Amp. P.C.B. Ass'y	22
8. 8. Control Switch & Display P.C.B. Ass'y	23
9. Schematic Diagram	24
9. 1. IC Block Diagrams	24
9. 2. Schematic Diagram	27
10. Wiring Diagram	29
11. Block Diagrams	30
11. 1. Amplifier Section	30
11. 2. Mechanism Control Section	31
12. Timing Charts and Eq. Amp. Frequency Response	32
12. 1. Timing Charts	32
12. 2. Eq. Amp. Frequency Response	33
13. Specifications	34

1. GENERAL

1.1. Production No.

Production No.: A133

1.2. Destinations

USA, CAN, EP, UK, AUS, OTR, SAU, JPN

Abbreviation

USA — U.S.A.	AUS — Australia
CAN — Canada	OTR — Other
EP — Europe	SAU — Saudi Arabia
UK — United Kingdom	JPN — Japan

1.3. Parts Supply

(1) Unstocked Parts


Parts marked with "★" at the head of part No. are not stocked. So, it takes time to supply the parts after we receive your order.

(2) Unsupplied Parts

Parts without part Nos. (indicated as "—" in the parts list) are not supplied.

1.4. CAUTIONS/WARNINGS

(1) Product Safety Notice

Parts marked with the symbol  in the schematic diagram have critical characteristics.

Use ONLY replacement parts recommended by the manufacturer.

It is recommended that the unit be operated from a suitable DC supply or batteries during initial check-out procedures.

(2) Leakage Current Check/Resistance Check

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamp, or if the resistance from chassis to either side of the power cord is less than 240 k ohms, the unit is defective.

WARNING — DO NOT return the unit to the customer until the problem is located and corrected.

1.5. Voltage Selector

Voltage selector is installed on the Rear Panel of the Nakamichi Cassette Deck 1 (Other & Saudi Arabia). The voltage selector can select either 110V/127V or 220V/240V at customer's disposal.

1.6. Package Ass'y and Accessory Ass'y

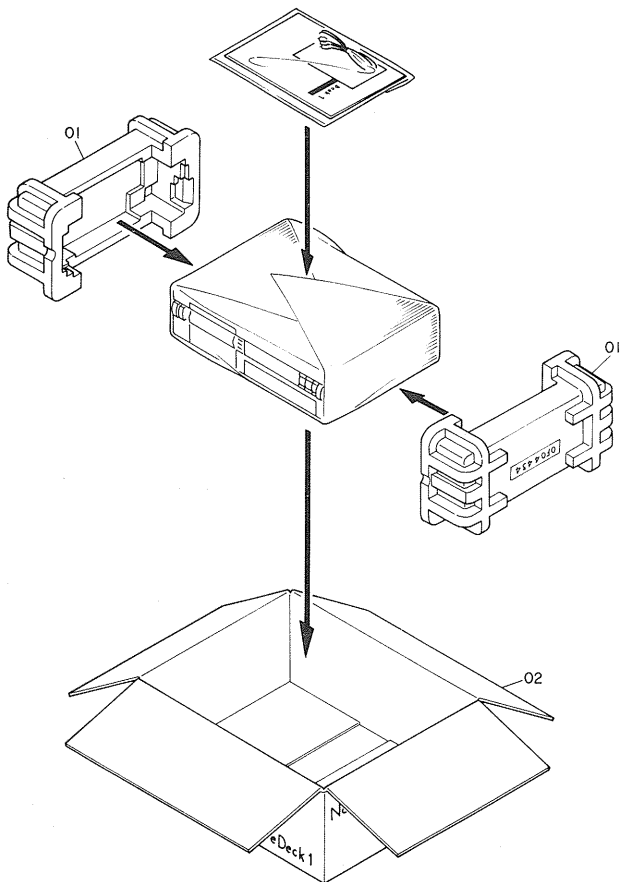


Fig. 1

Schematic Ref. No.	Part No.	Description	Qty
	—	Package Ass'y	
01	0F04483A	Packing	2
02	0F04457A	Carton Box	1
	DA04402A	Accessory Ass'y (USA, CAN)	1
	DA04407A	Accessory Ass'y (UK)	1
	DA04404A	Accessory Ass'y (EP)	1
	DA04403A	Accessory Ass'y (AUS, OTR, SAU)	1
	DA04401A	Accessory Ass'y (JPN)	1
	0D06122A	Onwer's Manual (Japanese)	1
	0D06123A	Onwer's Manual (English/French/Germany)	1
	DA04439A	Pin-Pin Cord Ass'y	1

2. REMOVAL PROCEDURES

2.1. Top Cover

Refer to Fig. 2.1.

- (1) Loosen screws F01 (2 pcs.) and F02 (4 pcs.), and remove F03 (Top Cover).

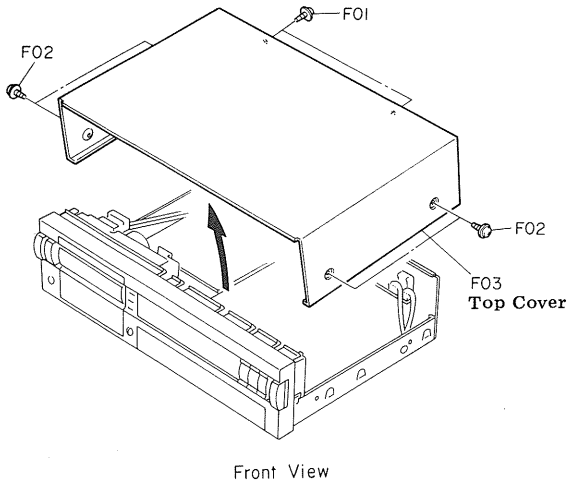


Fig. 2.1

2.2. Cassette Case Cover Ass'y

Refer to Fig. 2.2.

- (1) Press the Eject button to open F01 (Cassette Case Cover Ass'y).
- (2) Pull F01 (Cassette Case Cover Ass'y) upward.

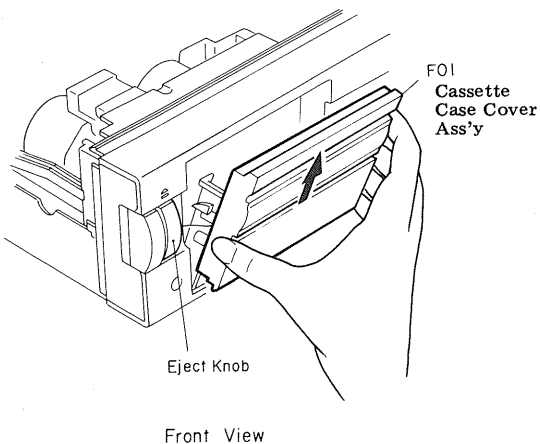


Fig. 2.2

2.3. Sealing Panel Ass'y

Refer to Fig. 2.3.

- (1) Open F01 (Sealing Panel Ass'y).
- (2) Hold by hand and pull F01 (Sealing Panel Ass'y) in the direction of the arrow.

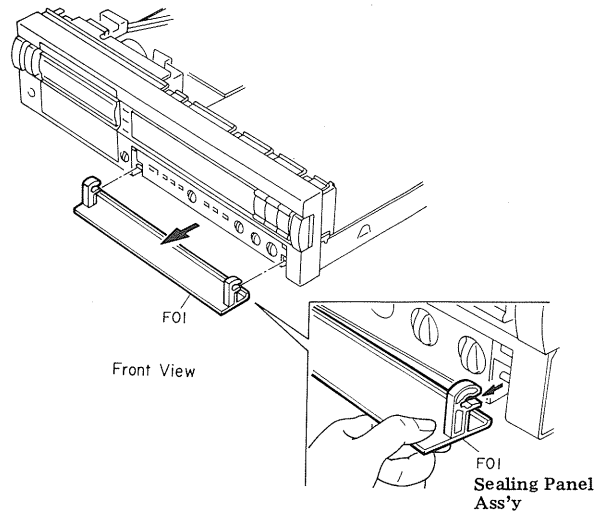


Fig. 2.3

2.4. Front Panel

Refer to Fig. 2.4.

- (1) Remove the Top Cover referring to item 2.1.
- (2) Loosen screws F01 (2 pcs.), F02 (1 pce.) and F03 (2 pcs.).
- (3) With pressing claws A (3 pcs.), remove F04 (Front Panel).

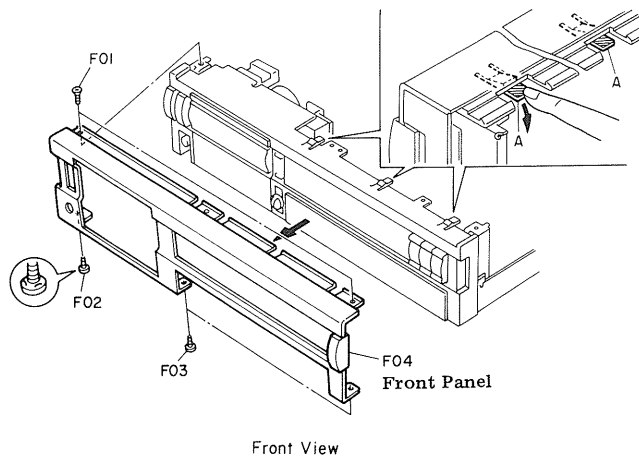


Fig. 2.4

2.5. Mechanism Ass'y

Refer to Fig. 2.5.

- (1) Remove the Top Cover and Cassette Case Cover Ass'y referring to item 2.1 and 2.2.
- (2) Loosen screws F01 (2 pcs.), F02 (1 pce.) and F03.
- (3) Remove F04 (Mechanism Ass'y) in the direction of the arrow.

Note: When installing the Mechanism Ass'y, perform the following:

- (1) Turn the Azimuth Cam Gear by hand so that it is set as shown in the figure. (In this position, playback head azimuth is set to zero.)
- (2) Set the Playback Azimuth control on the Front Panel to the center position.
- (3) Install the Mechanism Ass'y by reversing the above procedure.

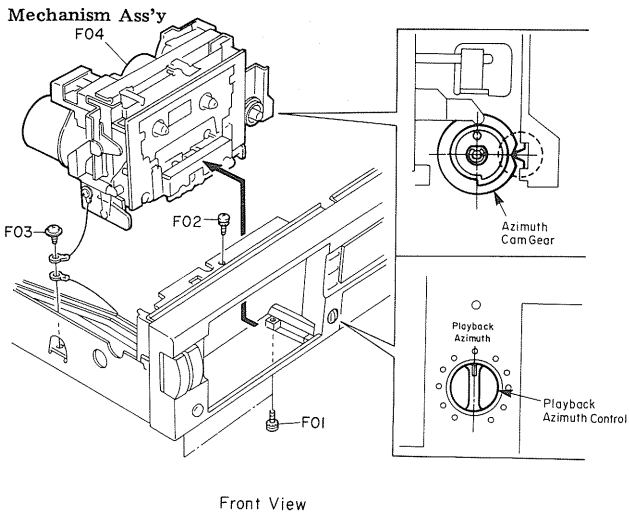


Fig. 2.5

2.6. Main P.C.B. Ass'y

Refer to Fig. 2.6.

- (1) Remove the Top Cover and Sealing Panel Ass'y referring to items 2.1 and 2.3.
- (2) Loosen screws F01 (1 pce.) and F02 (1 pce.), and remove F03 (Pin Jack P.C.B. Ass'y).
- (3) Loosen screws F04 (2 pcs.) and remove F05 (Inner Panel).
- (4) Loosen screws F06 (2 pcs.) and F07 (4 pcs.), and remove F08 (Main P.C.B. Ass'y) in the direction of the arrow.

Note: When installing F05 (Inner Panel), insert protrusions A (3 pcs.) into the claws of F05 (Inner Panel) and fasten F05 (Inner Panel) with screws F04 (2 pcs.).

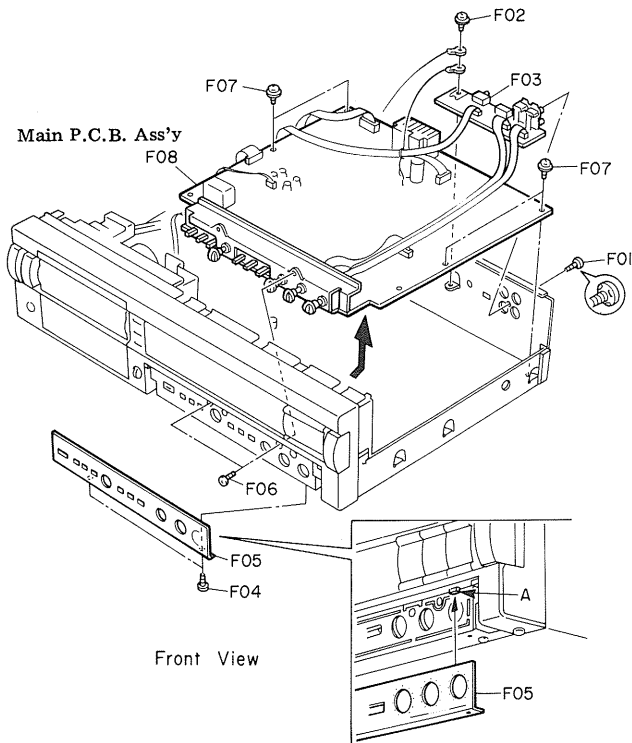


Fig. 2.6

2.7. Power Switch Joint and Power Supply and Logic P.C.B. Ass'y
Refer to Fig. 2.7.

- (1) Remove the Top Cover Ass'y referring to item 2.1.
- (2) Push F01 (Power Switch Joint) backward (in the direction of (A)).
- (3) Pull F01 (Power Switch Joint) forward (in the direction of (B)).
- (4) Pull F01 (Power Switch Joint) upward (in the direction of (c)) to remove it.
- (5) Loosen screws F02 (6 pcs.) and remove F03 (Power Supply and Logic P.C.B. Ass'y) in the direction of the arrow.

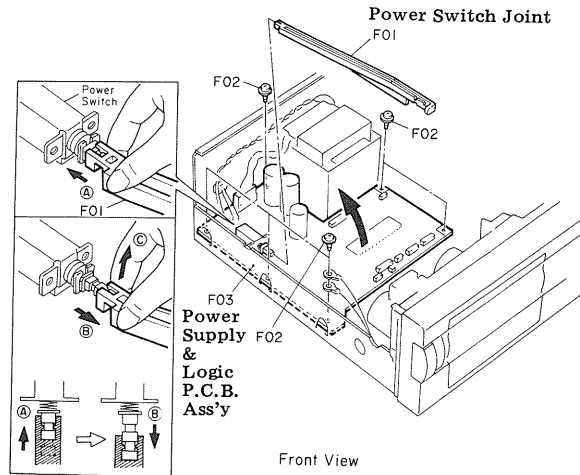


Fig. 2.7

2.8. Control Switch & Display P.C.B. Ass'y

Refer to Fig. 2.8.

- (1) Remove the Mechanism Ass'y referring to item 2.5 to gain access to the fastening screw.
- (2) Loosen screws F01 (2 pcs.), unhook the claws (6 pcs.), and remove F02 (Control Switch & Display P.C.B. Ass'y).

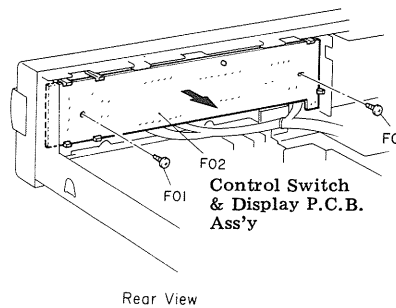


Fig. 2.8

3. TEST TAPES AND GAUGES

2.9. Head Mount Base Ass'y

Refer to Fig. 2.9.1.

- (1) Remove the Mechanism Ass'y referring to item 2.5.
- (2) Loosen screws F01 (2 pcs.) and remove F02 (Head Mount Cover).
- (3) Loosen screws F03 (2 pcs.) and remove F04 (Head Mount Base Ass'y).

Note: When installing the Head Mount Base Ass'y, follow the next steps. Refer to Figs. 2.9.2 and 2.9.3.

- (a) Insert the Plate Washers into the grooves of the shafts by hand. See Fig. 2.9.2.
- (b) Install F04 (Head Mount Base Ass'y) and fasten F03 (2 pcs.). Push the Plate Washers with a blade of the screwdriver so that the Plate Washers come off the grooves. See Fig. 2.9.3.

- (1) 400 Hz Level Tape (DA09005B)
- (2) 1 kHz Track Alignment B Tape (DA09007B)
- (3) 10 kHz PB Frequency Response Tape (DA09003B)
- (4) 15 kHz PB Frequency Response Tape (DA09002B)
- (5) 20 kHz PB Frequency Response Tape (DA09001B)
- (6) 15 kHz Azimuth Tape (DA09004B)
- (7) 3 kHz Speed and Wow/Flutter Tape (DA09006C)
- (8) Tape Travelling Cassette (DA09071A)
- (9) Reference EXII Tape (DA09111A)
- (10) Reference SX Tape (DA09110A)
- (11) Reference ZX Tape (DA09109A)
- (12) EH Tilt Check Gauge S (DA09088A)
- (13) Stroke Check Gauge S (DA09090A)
- (14) Tape Guide Height Check Gauge S (DA09091A)
- (15) Tilt Check Gauge S (DA09039B)
- (16) Torque Gauge FWD (DA09082A)
- (17) Playback Azimuth Centering Pin (OD09066A)

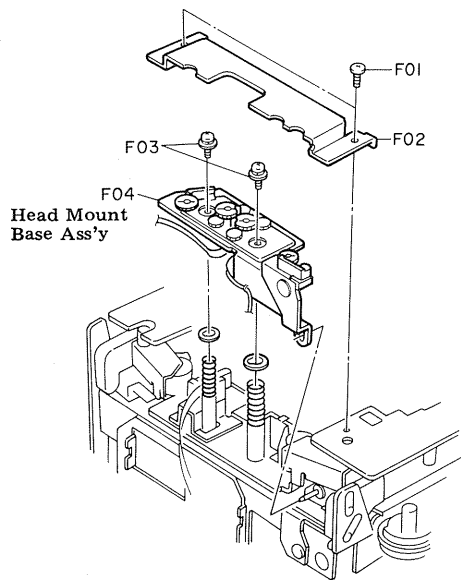


Fig. 2.9.1

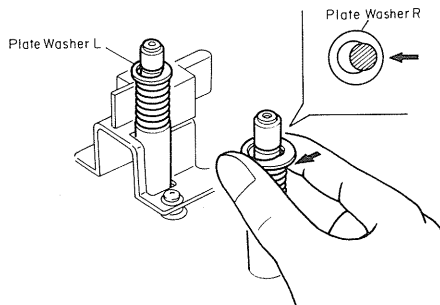


Fig. 2.9.2

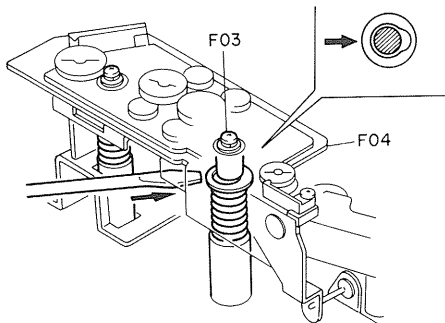


Fig. 2.9.3

Playback Azimuth
Centering Pin
(OD09066A)



4. MECHANICAL ADJUSTMENTS

4.1. Record Head and Playback Head Tilt Adjustment

Note: Before adjusting items 4.1 to 4.5, pull out the Cassette Case Cover Ass'y referring to item 2.2 and remove the Head Mount Cover by loosening two screws.

Refer to Fig. 4.1.

- (1) Remove the pad lifter from the playback head.
- (2) Load a Tilt Check Gauge S (DA09039B) in the cassette deck.
- (3) Clip the grounding terminal of the Tilt Check Gauge with one end of the cord with clip, and the chassis of the cassette deck with the other end.
- (4) Remove both of the Height Gears.
- (5) Set the cassette deck in Play mode. Check to insure whether the Beacons Playback Head "Upper" or "Lower" and Record Head "Upper" or "Lower" are illuminating. In order not to give damages onto the head surfaces, push both of slide knobs of the Gauge to away from the heads, then return them to the original place to be in contact with record head and playback head surfaces after Play mode is securely locked.
- (6) Beacon Playback Head "Lower" will light on when height adjustment screw (PH) turned counterclockwise but playback head "Upper" when clockwise. Adjust so that both "Upper" and "Lower" will light on even when you move the slide knob away from the heads and then return it to the original place.
- (7) Same procedures will apply to the Beacons Record Head "Upper" and "Lower", except for the height adjustment screw (RH).
- (8) Set the cassette deck in Stop mode and fit both of the serrated Height Gears. Then set the cassette deck again in Play mode and insure all of the 4 Beacons are illuminating. If not, (4) through (7) will have to be repeated till satisfactory results are obtained.
- (9) Mount the pad lifter on the playback head.

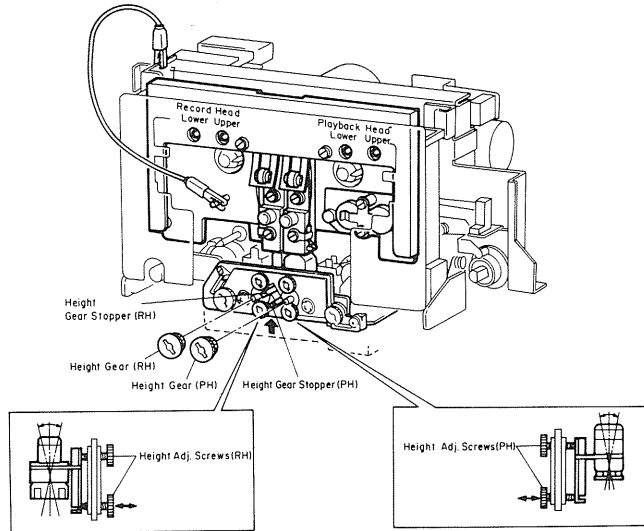


Fig. 4.1

4.2. Head Base Stroke Check

Remove the Cover Plate Ass'y.

Refer to Fig. 4.2.

Note: Before you conduct this adjustment, adjust with a "Tilt Check Gauge S" to insure freedom from tilt on the playback head and record head.

- (1) Load a Stroke Check Gauge S (DA09090A) in the cassette deck.
- (2) Move Record Head Indicator and Playback Head Indicator to the direction of arrow mark "A" with your finger tip and then set the cassette deck in Play mode. Then slowly release the Indicators and insure whether each of the Indicators is in contact with record and playback heads.
- (3) Check to insure whether the line "P" on the Playback Head Indicator meets the central line on the Indicator Plate.
- (4) Check to insure whether the line "P" on the Playback Head Indicator locates between the 2 lines on the Record Head Indicator, thus check can be made on record head stroke.

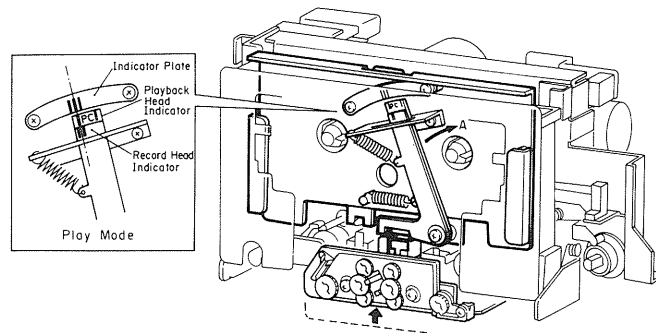


Fig. 4.2

4.3. Erase Head Stroke Adjustment and Tape Guide Height Check

Remove the Cover Plate Ass'y and the Head Mount Base Ass'y.

Refer to Fig. 4.3.

(1) Erase Head Stroke Adjustment

- (a) Load a Tape Guide Height Check Gauge S (DA09091A) in the cassette deck.
- (b) Set the cassette deck in Play mode, thus check can be made on erase head stroke through the EH Stroke Indicator.
- (c) Check to insure whether the erase head surface is aligned with red line on the EH Stroke Indicator. If not, adjust the erase head stroke by loosening screw A that assembles erase head with erase head plate.
- (d) After completion of adjustment, screw A shall be locked with lock tight paint.

(2) Supply Tape Guide Height Adjustment

- (a) Load a Tape Guide Height Check Gauge S (DA09091A) in the cassette deck.
- (b) Set the cassette deck in Play mode.
- (c) Slide the Supply Tape Guide Check Bar down against the supply tape guide, and check to insure that the Supply Tape Guide Check Bar is accepted by the supply tape guide. If not, adjust the supply tape guide height by turning screw B.

(3) Take-up Tape Guide Height Check

- (a) Load a Tape Guide Height Check Gauge S (DA09091A) in the cassette deck.
- (b) Set the cassette deck in Play mode.
- (c) Slide the Take-up Tape Guide Check Bar down against the take-up tape guide, and check to insure that the Take-up Tape Guide Check Bar is accepted by the take-up tape guide.

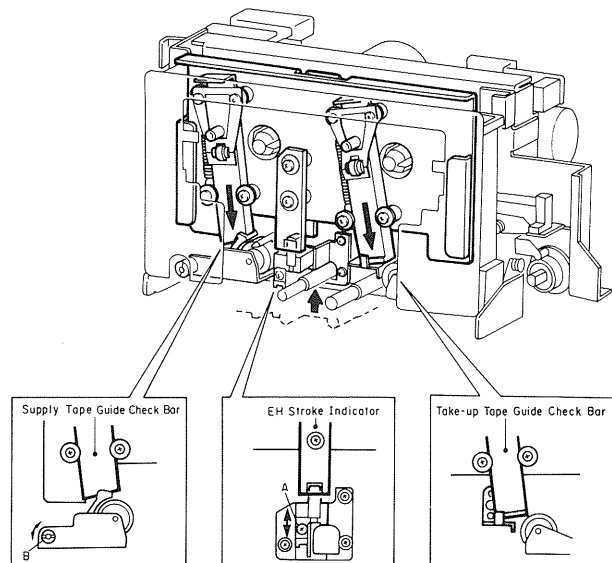


Fig. 4.3

4.4. Erase Head Height and Tilt Adjustment

Refer to Fig. 4.4.

- (1) Remove the Cassette Case Cover Ass'y, Cover Plate Ass'y, and Head Mount Base Ass'y.
- (2) Load an EH Tilt Check Gauge S (DA09088A) in the cassette deck.
- (3) Set the cassette deck in Stop mode.
- (4) Check to insure whether one of the 3 Beacons is illuminating. Look down the mirror and slowly turn the Screw "Height" counterclockwise (or clockwise) so that the two horizontal lines on the mirror will become superposed on the line (in different color) of the erase head, and check to insure whether the first Beacon is illuminating.
- (5) Turn Screw "Tilt" counterclockwise (or clockwise) to light on the second Beacon. Excessive turning will cause the first Beacon to light off. Adjustments of Screw "Tilt" will therefore be conducted till both of the first and the second Beacons illuminate.
- (6) Turn Screw "Azimuth" counterclockwise (or clockwise) to light on the third Beacon. Excessive turning will cause either the first or the second Beacon to light off, and therefore adjust Screw "Azimuth" until all of the 3 Beacons illuminate.

- (7) Check to insure whether the horizontal line on the mirror corresponds to that on the erase head. If not, (4) through (7) will have to be repeated till satisfactory results are obtained.
- (8) After completion of adjustment, 3 pcs. of screws shall be locked with lock tight paint.

Note: Before use of this gauge, check to insure freedom from dust or dirt, or overflow in the groove of the erase head surface.

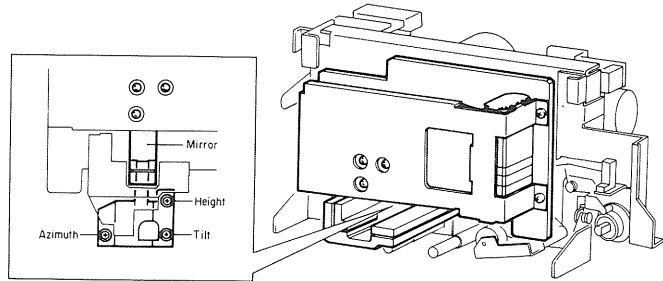


Fig. 4.4

4.5. Playback Head and Record Head Height Adjustment and Azimuth Alignment

Refer to Figs. 4.5.1 and 4.5.2.

(1) Playback Head Height Adjustment and Azimuth Alignment

Note: The Cassette Deck 1 is equipped with the playback azimuth control which can change the playback azimuth manually. So, before adjusting the playback head, perform the following to fix the playback head azimuth to the mechanical center.


1. Set the Playback Azimuth control on the Front Panel to the center position. (See Fig. 4.5.1.)
2. Insert the Playback Azimuth Centering Pin (OD09066A) securely as shown in Fig. 4.5.1.

- (a) Press the Monitor button to select TAP indication.
- (b) Connect an AC voltmeter to the Output Jacks.
- (c) Load a 1 kHz Track Alignment B Tape (DA09007B) and set the cassette deck in Play mode.
- (d) Turn the PH Height Gear until the outputs of both channels become minimum.
- (e) Load a 15 kHz Azimuth Tape (DA09004B) and set the cassette deck in Play mode.
- (f) Turn the PH Azimuth Alignment Screw until the outputs of both channels become maximum.
- (g) Repeat above steps (c) through (f) two or three times to obtain optimum performance.

(2) Record Head Height Adjustment and Azimuth Alignment

- (a) Connect an AC voltmeter to Output Jacks.
- (b) Press the Monitor button to select TAPE indication.
- (c) Press the Type IV button.
- (d) Load a reference ZX tape.

- (e) Feed in 400 Hz (0 dB) to the Input Jacks.
- (f) Set the cassette deck in Record and Play mode and turn the RH Height Gear until the outputs of both channels become maximum.
- (g) Feed in 15 kHz (-20 dB) to the Input Jacks and turn the RH Azimuth Alignment Screw until the outputs of both channels become maximum.
- (h) Repeat (e) to (g) two or three times to obtain optimum performance.
- (i) Set the cassette deck in Stop mode and remove the Playback Azimuth Centering Pin.

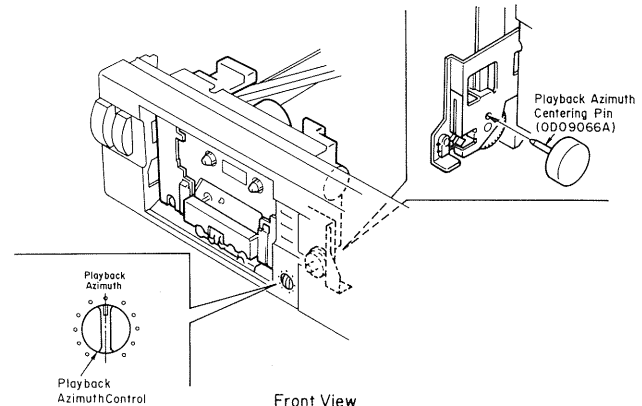

Front View

Fig. 4.5.1

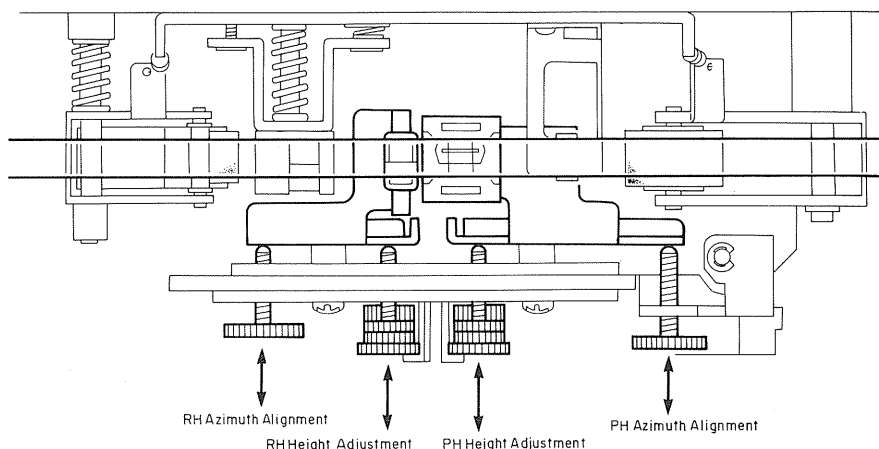


Fig. 4.5.2

4.6. Tape Travelling Check

Load and play back a Tape Travelling Cassette and check the following:

- (1) Tape is in contact with heads sufficiently.
- (2) Tape waving is small on the heads and pressure rollers.
- (3) Tape is free from waving or slippage from the tape guides.

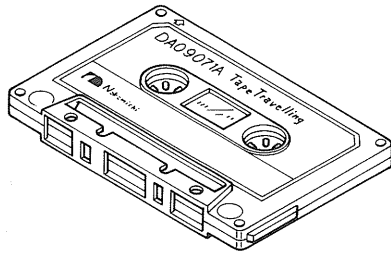


Fig. 4.6

4.7. Eject Damper Adjustment

Refer to Fig. 4.7. Load a cassette tape, and with opening the Cassette Case by pressing the Eject button and closing it by hand, adjust the speed of damper action by the Adjustment Screw.

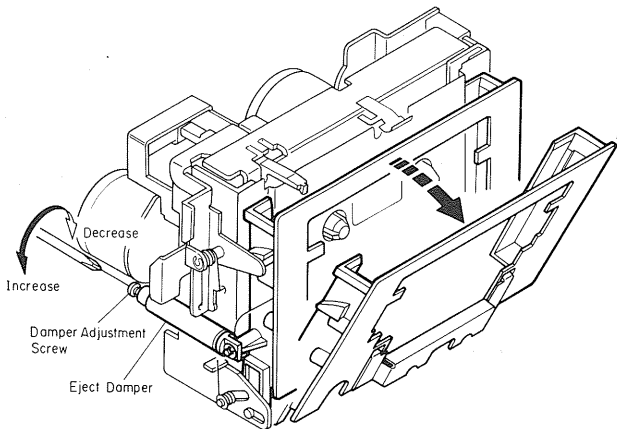


Fig. 4.7

4.8. Reel Motor Speed Adjustment in Play Mode

- (1) To warm-up the cassette deck, load a C-60 cassette tape and set the cassette deck in Play mode.
- (2) After more than four minutes, load a Torque Gauge FWD (DA09082A) and set the cassette deck in Play mode.
- (3) Adjust VR501 on the Power Supply & Logic P.C.B. Ass'y to obtain 47 ± 1 g-cm on the torque gauge.

4.9. Tape Speed Adjustment

Refer to Fig. 4.8.

- (1) Connect a frequency counter to the Output Jacks.
- (2) Load a 3 kHz Speed and Wow/Flutter Tape (DA09006C) and play it back.
- (3) Adjust the Tape Speed Adjustment Volume incorporated in the Capstan Motor to obtain 3,000 Hz on the frequency counter.

CCW: Motor drives slowly.

CW: Motor drives fast.

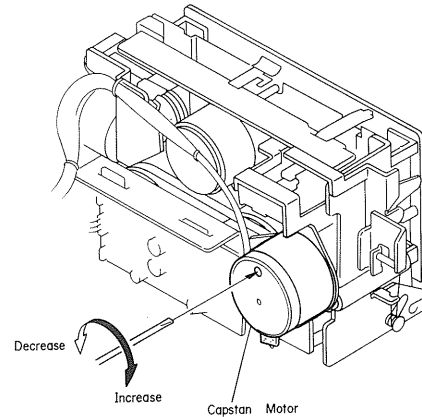


Fig. 4.8

4.10. Lubrication

The tape transport is of a lubrication-free type mechanism. When the following parts are replaced, apply the specified lubricant.

- (1) Molykote (R) Grease (X5-6020)
Cam Motor Pulley
Thrust portion on the Capstan Shaft
- (2) FLOIL GB-TS-1
Washer between Reel Hub Ass'y and Back Tension Spring
- (3) Diamond Oil (EP-56)
Reel Hub Shaft
- (4) Anderol 456
Capstan Shaft

Note: We suggest that you use the above specified lubricant or equivalent type.

The company dealing in the above lubricant is as follows:

- (a) Molykote (R) Grease (X5-6020)
Dowcoming Co., Ltd., 1-15-1 Nishishinbashi, Minato-ku, Tokyo, Japan
- (b) FLOIL GB-TS-1
Kanto Chemicals Co., Ltd., 2-7 Kanda Sakuma-cho, Chiyoda-ku, Tokyo, Japan
- (c) Diamond Oil (EP-56)
Mitsubishi Oil Co., Ltd., 1-2-4 Toranomom, Minato-ku, Tokyo, Japan
- (d) Anderol 456
Toyo Kokusai Oil Co., Ltd., 3-3-5 Hatchobori, Chuo-ku, Tokyo, Japan

5. PARTS LOCATION FOR ELECTRICAL ADJUSTMENT

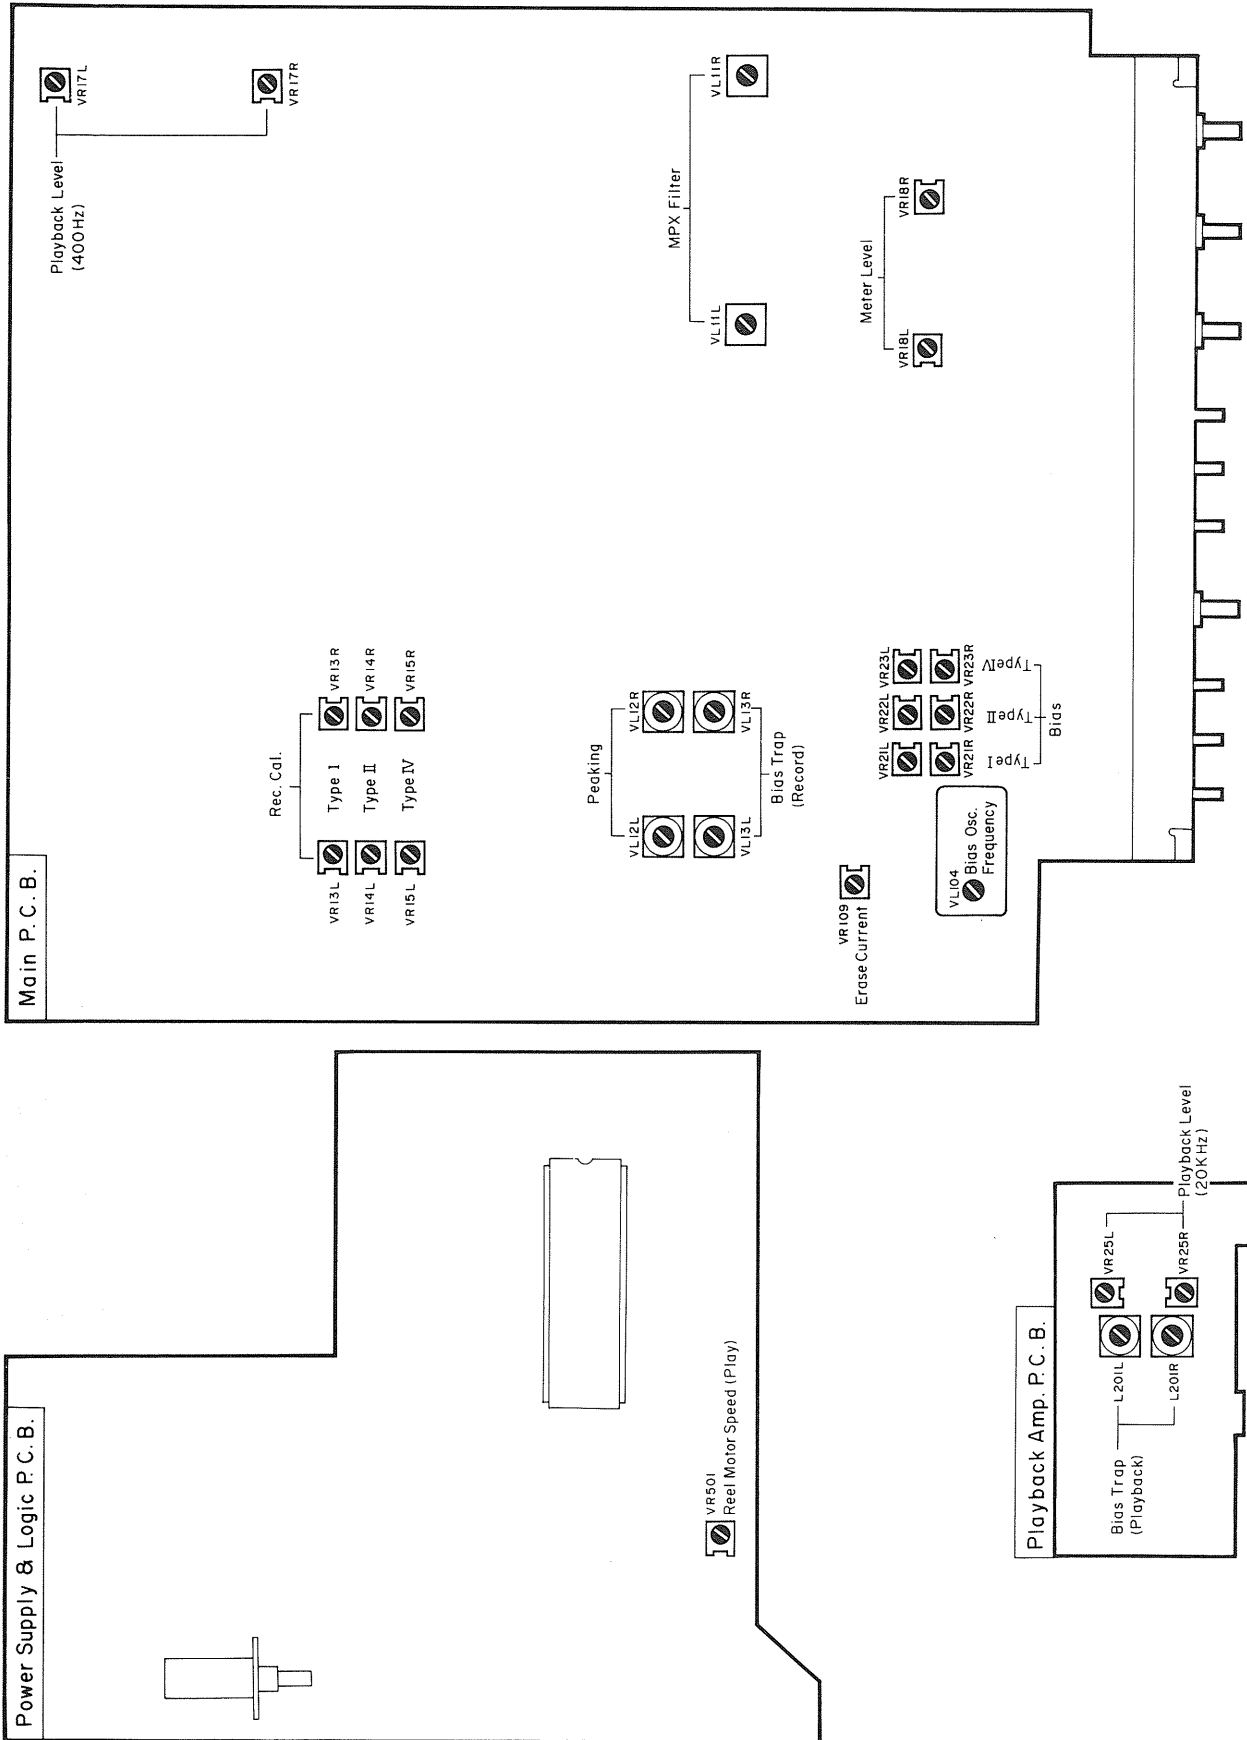
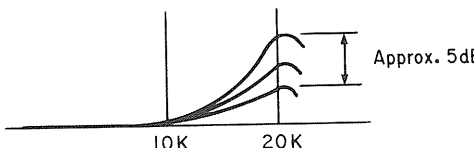


Fig. 5

6. ELECTRICAL ADJUSTMENTS

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
1	Preliminary Step			Output Level - Max. Balance - Center Bias Tune - Center Monitor - Tape Tape - IV MPX Filter - OFF Dolby NR - OFF		Set the Cassette Deck 1 as shown in MODE.
2	Reel Motor Speed Adjustment (Play)	Torque Guage FWD (DA09082A)		Playback	Power Supply & Logic P.C.B. VR501	Adjust VR501 to obtain 47 ± 1 g-cm on the torque gauge.
3	Tape Speed Adjustment	3 kHz Speed and Wow/Flutter Tape (DA09006C)	Frequency Counter to Output Jacks	Playback Monitor - Tape Tape - I	Tape Speed Adj. Volume (Capstan Motor)	Adjust the volume incorporated in the Capstan Motor Ass'y to obtain $3 \text{ kHz} \pm 15 \text{ Hz}$ on the frequency counter.
4	Meter Level Calibration	400 Hz to Input Jacks	AC Voltmeter to Output Jacks	Monitor - Source	Main P.C.B. VR18L VR18R	1. Feed in 400 Hz and adjust the Record Level control to obtain 500 mV -2 dB on the AC voltmeter. 2. Adjust VR18L (VR18R) so that the 0 dB segment on the level meter starts illuminating.
5	MPX Filter Adjustment	19 kHz ± 100 Hz to Input Jacks	AC Voltmeter to Output Jacks	Monitor - Source MPX - OFF/ON	Main P.C.B. VL11L VL11R	1. Adjust the Input Level control to obtain 500 mV (0 dB) on the AC voltmeter. 2. Set the MPX Filter switch to ON and adjust VL11L (VL11R) to obtain minimum reading on the AC voltmeter. (The minimum reading will be less than -30 dB.)
6	Playback Head Track Alignment	1 kHz Track Alignment B Tape (DA09007B)	AC Voltmeter to Output Jacks	Playback Monitor - Tape Tape - IV Dolby NR - OFF	PH Height Gear	Adjust the PH Height Gear to obtain the minimum readings on the AC voltmeter for both channels. Refer to "Playback Head Height Adjustment" in item 4.5. (Azimuth Centering Pin (OD09066A) must be set before adjusting.)
7	Playback Head Azimuth Alignment	15 kHz Azimuth Tape (DA09004B)	AC Voltmeter to Output Jacks	Same as above	Playback Head Azimuth Alignment Screw	Adjust the Playback Head Azimuth Alignment Screw to obtain maximum readings on the AC voltmeter for both channels. Refer to "Playback Head Height Adjustment and Azimuth Alignment" in item 3.5. (Azimuth Centering Pin (OD09066A) must be set before adjusting.) Note: Repeat Steps 6 and 7 two or three times to obtain optimum performance.

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARK
8	Playback Level Calibration	400Hz Level Tape (DA09005B)	AC Voltmeter to Output Jacks	Playback Monitor - Tape - IV Dolby NR - OFF	Main P.C.B. VR17L VR17R	Adjust VR17L (VR17R) to obtain 500 mV on the AC voltmeter.
9	Playback Frequency Response Adjustment	400Hz Level Tape (DA09005B) 10 kHz PB Frequency Response Tape (DA09003B) 15 kHz PB Frequency Response Tape (DA09002B) 20 kHz PB Frequency Response Tape (DA09001B)	AC Voltmeter to Output Jacks	Same as above	Playback Amp. P.C.B. VR25L VR25R	<p>1. Load a 400 Hz level tape, play it back, and read the playback level on the AC voltmeter.</p> <p>2. Load 10 kHz, 15 kHz and 20 kHz PB frequency response tapes and adjust the playback head azimuth to obtain maximum levels on the AC voltmeter with each tape.</p> <p>Check that the playback levels are as follows with respect to the level for 400 Hz level tape.</p> <p>10 kHz: -20 dB -2 dB to +2 dB 15 kHz: -20 dB -2 dB to +3 dB 20 kHz: -20 dB -2 dB to +4 dB</p> <p>If the levels are out of the ranges, play back the 20 kHz PB frequency response tape and adjust VR25L (VR25R) to obtain -20 dB +1.0 dB. VR25L (VR25R) compensates the playback frequency response at 20 kHz as shown below:</p>  <p>3. Conduct Step 7 "Playback Head Azimuth Alignment".</p>
10	Bias Oscillation Frequency and Erase Current Adjustment	None	AC Voltmeter across the additional 0.1 ohm resistor and Frequency Counter between terminals 1 and 2 of CN-102 (i.e., across Erase Head) on Main P.C.B.	Record, Playback Monitor - Source Tape - IV Dolby NR - OFF	Main P.C.B. VL104 VR109	<p>1. Connect an additional 0.1 ohm resistor in series to the Erase Head and connect the AC voltmeter across the resistor.</p> <p>2. Record and playback a reference ZX tape.</p> <p>3. Adjust VL104 to obtain 105 kHz on the frequency counter.</p> <p>4. Check the erase current by the AC voltmeter. Erase current will be within the range of 310 mA to 380 mA (typically approx. 350 mA). If erase current is less than 310 mA, adjust VR109 to obtain satisfactory results.</p> <p>5. If erase current is adjusted with VR109, re-check the bias oscillation frequency.</p> <p>6. Remove the additional 0.1 ohm resistor.</p>

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
11	Bias Trap Adjustment (Record Amp.)	Remove input signals	AC Voltmeter between emitter of Q111L/R and GND on Main P.C.B.	Record, Playback Monitor - Source Tape - IV Dolby NR - OFF	Main P.C.B. VL13L VL13R	1. Load a cassette without tape inside. 2. Adjust VL13L (VR13R) to obtain minimum reading on the AC voltmeter.
12	Record Head Height Adjustment	400 Hz (0 dB) to Input Jacks	AC Voltmeter to Output Jacks	Record, Playback Monitor - Tape Tape - II Dolby NR - OFF	RH Height Gear	1. Load a reference SX tape, and record and play it back. 2. Adjust the RH Height Gear to obtain maximum readings for both channels on the AC voltmeter. Refer to "Record Head Height Adjustment and Azimuth Alignment" in item 4.5.
13	Record Head Azimuth Alignment	15 kHz (-20 dB) to Input Jacks	AC Voltmeter to Output Jacks	Same as above	Record Head Azimuth Alignment Screw	Adjust the Record Head Azimuth Alignment Screw to obtain maximum readings for both channels on the AC voltmeter. Refer to "Record Head Height Adjustment and Azimuth Alignment" in item 4.5. Note: Repeat Steps 12 and 13 two or three times to obtain optimum performance.
14	Bias Trap Adjustment (Playback Amp.)	None	AC Voltmeter to Output Jacks	Record, Playback Monitor - Tape Tape - IV Dolby NR - OFF	Playback Amp. P.C.B. L201L L201R	1. Load a cassette without tape inside. 2. Adjust L201L (L201R) to obtain minimum reading on the AC voltmeter.
15	Record Level Calibration and Recording Bias Current Adjustment	400 Hz (0 dB), 20 kHz (-20 dB) and 10 kHz/20 kHz (-20 dB) to Input Jacks	AC Voltmeter to Output Jacks	Record, Playback Monitor - Source/Tape Tape - I/II/IV Dolby NR - OFF/B/C	Main P.C.B. (Level) IV:VR15L VR15R II:VR14L VR14R I:VR13L VR13R (Bias) IV:VR23L VR23R II:VR22L VR22R I:VR21L VR21R	Adjustment should be made in the order of tape type IV, II, and I. 1. Set the Monitor switch to Source and Dolby NR switch to OFF. 2. Feed in 400 Hz, and set the Input Level control to obtain 0 dB (500 mV) on the AC voltmeter. 3. Set the Monitor switch to tape. 4. Load a reference ZX tape, reference SX tape and reference EXII tape. 5. Feed in 400 Hz (0 dB) record and play back, and adjust the following semi-fixed volumes to obtain 0 dB on the AC voltmeter. ZX tape (IV): VR15L, VR15R SX tape (II): VR14L, VR14R EX tape (I) : VR13L, VR13R 6. Set the Dolby NR Switch to C. 7. Feed in 20 kHz (-20 dB) and adjust Bias VR23L (VR23R), VR22L (VR22R) and VR21L (VR21R) to obtain the same readings as source monitor levels on the AC voltmeter.

(to be continued)

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
						<p>8. Repeat above 6 and 7 two or three times to obtain optimum performance.</p> <p>9. Feed in 10 kHz and 20 kHz (-20 dB), record and play them back, and check whether the playback levels are within the following ranges.</p> <p>With Dolby NR OFF: -20 dB \pm3 dB Level difference between Dolby NR OFF and B: \pm2 dB Level difference between Dolby NR OFF and C: \pm3 dB</p> <p>10. Check that the total harmonic distortion is less than 0.8% for ZX and EXII tapes and 1.0% for SX tape. If satisfactory results are not obtained, re-adjust VR21L (VR21R) referring to Step 9 "Playback Frequency Response Adjustment" and repeat above steps.</p>
16	Overall Frequency Response Adjustment	400 Hz (0 dB) and 20 Hz to 20 kHz (-20 dB) to Input Jacks	AC Voltmeter to Output Jacks	Record, Playback Monitor - Source/Tape - I/II/IV Dolby NR - OFF	Main P.C.B. VL12L VL12R	<p>1. Set the Monitor switch to Source.</p> <p>2. Feed in 400 Hz and adjust the Input Level control to obtain -20 dB on the AC voltmeter.</p> <p>3. Set the Monitor switch to Tape.</p> <p>4. Feed in 20 Hz to 20 kHz (-20 dB) and check to insure whether the output levels are within -20 dB \pm3 dB.</p> <p>5. If above is not sufficient, adjust L12L (L12R) to obtain approx. -20 dB at 20 kHz.</p> <p>6. Conduct step 15 "Record Level Calibration and Recording Bias Current Adjustment".</p> <p>7. If above is not sufficient, precise re-adjustment of step 9 "Playback Frequency Response", replacement of Playback Head or Record Head, and check on item 4.7 "Tape Travelling Check" will be required.</p>

7. MECHANISM ASS'Y AND PARTS LIST

7.1. Synthesis

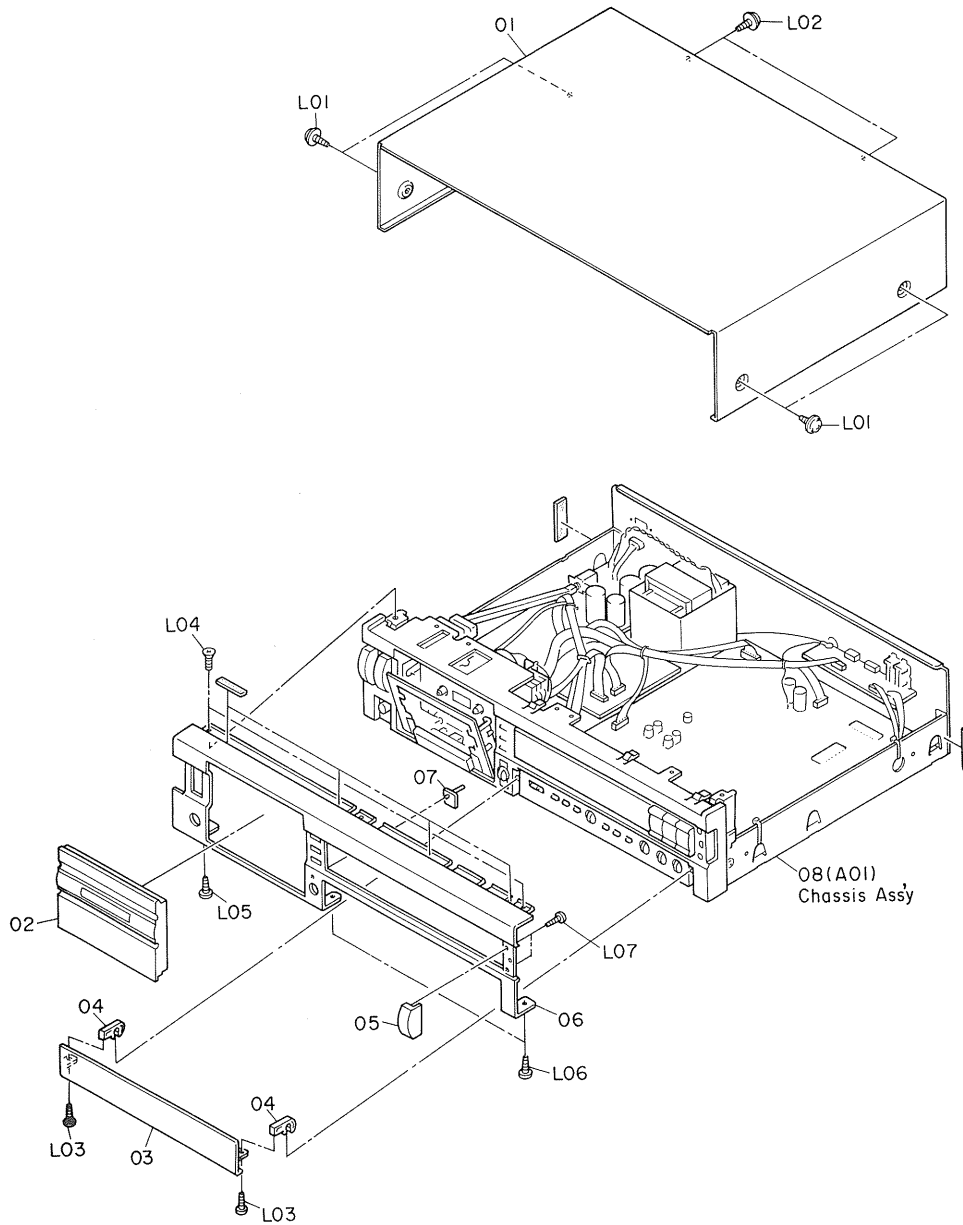


Fig. 7.1

Schematic Ref. No.	Part No.	Description	Qty	Schematic Ref. No.	Part No.	Description	Qty
7.1. Synthesis				L03	0E03641A	BT3x6 @ Pan (Black Chromate)	
	—	Synthesis		L04	0E03054A	BT3x8 @ Countersunk	
01	0H05710A	Top Cover	1	L05	0E03366A	BT3x8 @ Binding (Black Chromate)	
02	HA05935A	Cassette Case Cover Ass'y	1	L06	0E00921A	BT3x8 @ Binding (Black Chromate)	
03	0H05833A	Sealing Panel	1	L07	0E00855A	BT2x6 @ Binding	
04	0J06261B	Sealing Arm	2				
05	0H05714A	Dummy Cap	1				
06	0H05831A	Front Panel	1				
07	0H05845A	Center Lens	1				
08	—	Chassis Ass'y	1				
L01	0E03032A	BT4x8 @ Pan Washer Faced (Black Chromate)					
L02	0E03632A	BT3x8 @ Binding With Washer (Black Chromate)					

7.2. Chassis Ass'y (A01)

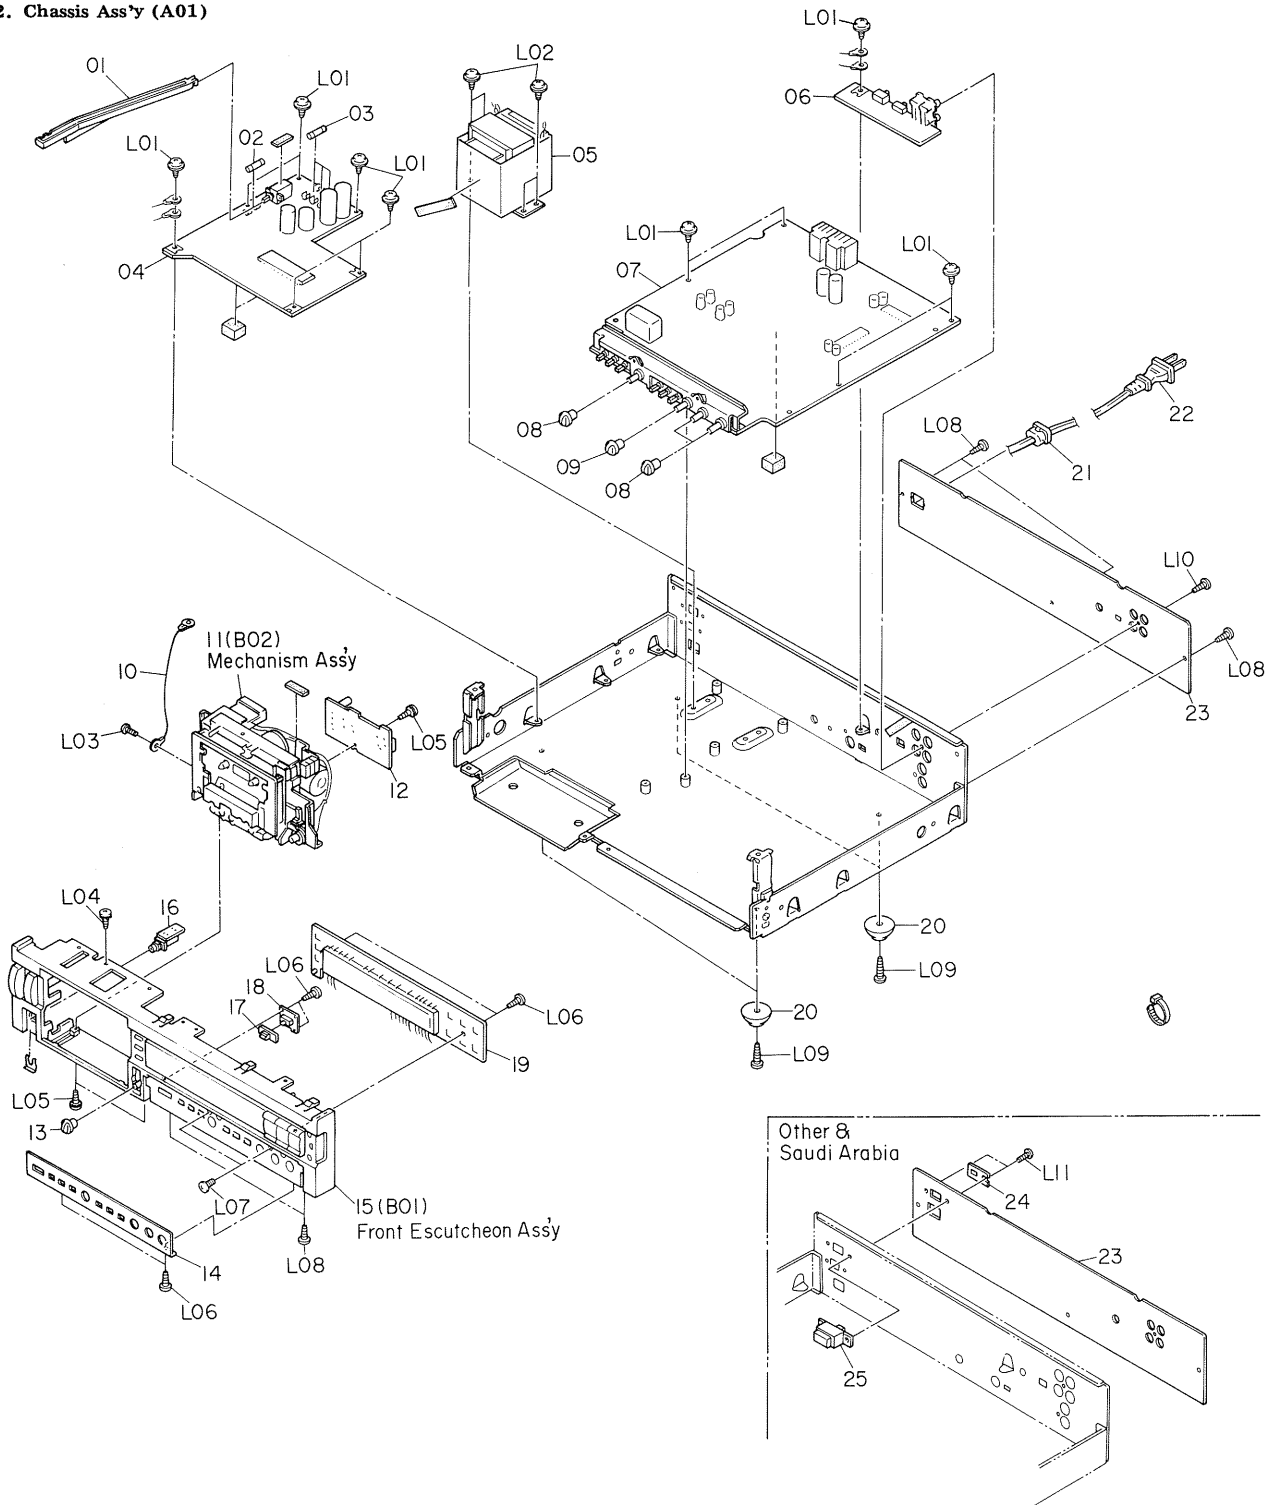


Fig. 7.2

7.3. Front Escutcheon Ass'y (B01)

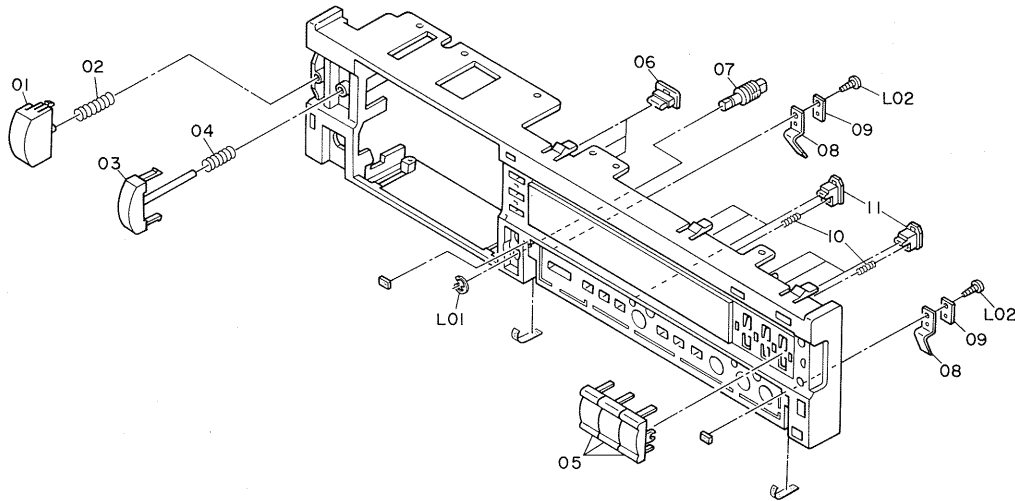


Fig. 7.3

*: Unstocked parts:

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
7.2. Chassis Ass'y				7.3. Front Escutcheon Ass'y (B01)			
A01	—	Chassis Ass'y	1	B01	—	Front Escutcheon Ass'y	1
01	0J06258B	Power Switch Joint	1	01	0H05723A	Power Switch Button	1
02	0B90493A	Fuse 500mA [F404] (USA, CAN, JPN)	1	02	0C09392A	Power Switch Spring	1
	0B08505A	Fuse F500mA [F404] (EP, UK, AUS, OTR, SAU)	1	03	HA05929A	Eject Knob Ass'y	1
03	0B90375A	Fuse 1.6A [F401-403] (USA, CAN, JPN)	3	04	0J06252A	Eject Spring	1
	0B90382A	Fuse T1.25A [F401-403] (EP, UK, AUS, OTR, SAU)	3	05	0H05716A	Control Knob A	3
04	* BA07988A	Power Supply & Logic P.C.B. Ass'y (USA, CAN, EP, UK, AUS, OTR, SAU)	1	06	0H05825B	Tact Knob	3
	* BA07981A	Power Supply & Logic P.C.B. Ass'y (JPN)	1	07	0J06260A	Azimuth Joint	1
05	0B50183A	Power Transformer 120V (USA, CAN)	1	08	0J06262A	Sealing Spring	2
	0B50182A	Power Transformer 230V (EP)	1	09	0J06334A	Lock Plate	2
	0B50179A	Power Transformer 240V (UK, AUS)	1	10	0J06253A	Push Knob Spring	6
	0B50181A	Power Transformer 115-230V (OTR, SAU)	1	11	0H05819A	Push Knob	6
	0B50180A	Power Transformer 100V (JPN)	1	L01	0E00134A	E-Ring 4mm	
06	* BA07985A	Pin Jack P.C.B. Ass'y	1	L02	0E00921A	BT3x8 @ Binding (Black Chromate)	
07	* BA07984A	Main P.C.B. Ass'y	1				
08	0H05821A	Input & Bias Tuning Volume Knob	3				
09	0H05822A	Output Volume Knob	1				
10	0B83916A	Mechanism GND Ass'y	1				
11	CA09048A	Mechanism Ass'y	1				
12	* BA07987A	Playback Amp. P.C.B. Ass'y	1				
13	0H05711A	Playback Azimuth Knob	1				
14	0H05834A	Inner Panel	1				
15	—	Front Escutcheon Ass'y	1				
16	* BA07986A	Headphone P.C.B. Ass'y	1				
17	0H05823A	Slide Knob	1				
18	* BA07983A	Timer Switch P.C.B. Ass'y	1				
19	* BA07982A	Control Switch & Display P.C.B. Ass'y	1				
20	HA05833A	Leg Ass'y	4				
21	0B90280A	Cord Bushing (USA, CAN, EP, UK, AUS)	1				
	0B90283A	Cord Bushing (OTR, SAU, JAN)	1				
22	0B08504A	Power Cord (USA, CAN)	1				
	0B08093U	Power Cord (EP)	1				
	0B08348A	Power Cord (UK)	1				
	0B05241A	Power Cord (AUS)	1				
	0B08533A	Power Cord (OTR, SAU)	1				
	0B08219B	Power Cord (JPN)	1				
23	0H05835A	Rear Panel (USA, CAN, EP, UK, AUS, JPN)	1				
	0H05848A	Rear Panel (OTR, SAU)	1				
24	0M05611A	Voltage Lock Plate (OTR, SAU)	1				

★: Unstocked parts:

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
7.4. Mechanism Ass'y (B02)				82	OC81416A	Thrust Spring B	1
				83	OC80027A	Mode Switch	3
				84	OC81415A	Warm Thrust Bush	1
				85	CA81646A	Control Motor Ass'y	1
				86	OC85319A	Azimuth Arm Spring B	1
				87	CA81670A	Azimuth Arm B Sub Ass'y	1
				88	CA81669A	Azimuth Plate Sub Ass'y	1
				89	OC85314A	Azimuth Cam Gear	1
				90	OC85315A	Cassette Case Spring	1
				91	OC85316A	Cassette Case Spring Collar	1
				92	CA81667A	Azimuth Chassis Sub Ass'y	1
				93	OC85318A	Azimuth Cam Spring	1
				94	OC85317A	Azimuth Cam Switch	1
				95	CA81671A	Azimuth 2P Connector Ass'y	1
				96	OC80012A	Sensor Switch	1
				97	CA81673A	5P Connector Ass'y	1
				98	CA81672A	9P Connector Ass'y	1
			L01	OE00698A	E-Ring 2.5mm		
			L02	OE00181A	E-Ring 3mm		
			L03	OE00222A	E-Ring 2mm		
			L04	OE00042A	E-Ring 1.5mm		
			L05	OE00165A	E-Ring 1.2mm		
			L06	OE03052A	CS Stopper 2.4mm		
			L07	OE03042A	FT2.5x 5 @ Pan		
			L08	OE03043A	FT2.5x10 @ Pan		
			L09	OE03202A	M2.6x3 @ Binding (Black Chromate)		
			L10	OE03437A	FT2.5x3.5 @ Pan (Black Chromate)		
			L11	OE03654A	M2x4 @ Pan (3A)		
			L12	OE03018A	M2x5 @ Pan		
			L13	OE03232A	M1.7x7 @ Pan		
			L14	OE03222A	Washer 1.8x3.8x0.3		
			L15	OE03655A	M2x5 @ Pan (2A)		
			L16	OE03234A	M2x3 @ Pan		
			L17	OE03228A	FT3x4 @ Pan		
			L18	OE03236A	M2x5 @ Pan (2A)		
			L19	OE03231A	M2x3 @ Pan		
			L20	OE03041A	FT2.5x4 @ Pan		
			L21	OE03233A	Washer 2.6x8x1		
			L22	OE03230A	ST2.6x12 @ Pan		
			L23	OE03045A	M2.6x3 @ Binding		
			L24	OE03229A	FT5x6 @ Pan		
			L25	OC82725A	M2.6x9 Washer Faced		
			L26	OE00691A	M2x3 @ Pan		
			L27	OE03044A	FT2.5x20 @ Pan		
			L28	OE00851A	ST3x5 @ Pan		
			L29	OE03666A	ST3.5x6 @ Pan		
			L30	OE03035A	M2x3.2 @ Truss		
			L31	OE03235A	Washer 2x5x0.25		
			L32	OE03225A	Washer 1.8x3.8x0.5		
			L33	OE03226A	Washer 2.1x4.5x0.1		
			L34	OC85423A	S. Thrust Spring Washer		
			L35	OE03049A	Washer 1.8x3.2x0.5		
			L36	OC08774A	Plate Washer L		
			L37	OC08773A	Plate Washer R		
			L38	OE03227A	Washer 2.7x5x0.5		
			L39	OE03237A	Nut Hex. M2.6		
			L40	OE00694A	Nut M2		
			L41	OC82716A	Capstan Washer S		
			L42	OC82717A	Capstan Washer T		
			L43	OE00912A	Polyslider FT25		
			L44	OE03509A	Washer 1.3x3.4x0.5		
			L45	OE03653A	Washer 1.6x4x0.25		
			L46	OE03508A	Washer 1.7x6x0.25		
			L47	OE03180A	Washer 2.6mm		
			L48	OE03645A	Washer 1.6x4x0.25		
			L49	OE03194A	Washer 2.1mm		
B02	CA09048A	Mechanism Ass'y	1				
01	OC85309A	Eject Arm	1				
02	OC85310A	Eject Arm Spring	1				
03	CA80006A	Pneumatic Damper Ass'y	1				
04	OC82720A	Eject Lever Spring	1				
05	OC85414A	Eject Lever	1				
06	OC85301A	Cassette Case Holder L	1				
07	OC80019B	Eject Spring	1				
08	OC80620A	Back Tension Arm Pulley	1				
09	OC80621A	Back Tension Arm Belt	1				
10	OC80617A	Back Tension Arm Spring	1				
11	OC80618A	Back Tension Arm Collar	1				
12	OC80619A	Back Tension Arm	1				
13	OC85425A	Lock Lever Spring	1				
14	OC85426A	Lock Lever Collar	1				
15	OC85427A	Lock Lever	1				
16	CA80726A	Supply Reel Hub Ass'y	1				
17	OC80612A	Spring Holder	2				
18	OC80614A	Supply Reel Hub Spring	1				
19	OC81421A	Supply Pressure Roller Arm Adjustment Nut	1				
20	CA80366A	Supply Pressure Roller Arm Ass'y	1				
21	OC81420A	Supply Pressure Roller Arm Spring	1				
22	OC81422A	Supply Pressure Roller Arm Track Spring	1				
23	OH04415C	Head Mount Cover	1				
24	CA80200B	Cassette Case Ass'y	1				
25	HA05937A	Cover Plate Ass'y	1				
26	OC08762A	Head Height Adjustment Gear	2				
27	OC08761A	Head Height Adjustment Screw	4				
28	OC08763A	Azimuth Alignment Screw	1				
29	OC85424A	Head Mount Plate	1				
30	CA08659B	R-3L Record Head Ass'y	1				
31	OC08776A	Head Plate Spring L	1				
32	CA81676A	RH 4P Connector Ass'y	1				
33	OC08026D	PB Head Azimuth Alignment Screw	1				
34	OC81391A	PB Head Azimuth Alignment Screw Stopper	1				
35	OC85313A	PB Head Azimuth Arm Shaft A	1				
36	OC85312A	PB Head Azimuth Arm A	1				
37	CA08755A	P2H-3L Playback Head Ass'y	1				
38	OC08775A	Head Plate Spring R	1				
39	CA81675A	PH 4P Connector Ass'y	1				
40	CA81674A	EH 2P Connector Ass'y	1				
41	GA02201A	E-4F Erase Head	1				
42	OC08768A	E.H. Hold Plate	1				
43	OC08889A	E.H. Hold Plate Tapering Spring	2				
44	OC08886A	E.H. Hold Plate Spring	1				
45	OC82710A	Head Base Hold Plate	1				
46	OC80004A	Steel Ball 3mm	1				
47	OC08771A	Tape Guide Plate	1				
48	CA80365A	Head Base Sub Ass'y	1				
49	OC80007A	Steel Ball 2mm	3				
50	CA80725A	Take-up Reel Hub Ass'y	1				
51	OC80613A	Take-up Reel Hub Spring	1				
52	CA80368A	Take-up Pressure Roller Arm Ass'y	1				
53	OC81423A	Take-up Pressure Roller Arm Spring	1				
54	OC85429A	Switch Hold Plate	1				
55	OC80623A	Switch Plate	2				
56	OC80624A	Switch Collar A	2				
57	OC80626A	Leaf Switch	1				
58	OC80625A	Switch Collar B	2				
59	OC80017B	Record Protector Lever	1				
60	OC80022B	Cassette Hold Spring	1				
61	CA80736A	Mechanism Chassis Ass'y	1				
62	★ CA80011B	Shut-off P.C.B. Ass'y	1				
63	CA08204A	Brake Ass'y	1				
64	OC80628A	Brake Spring B	1				
65	OC80630A	Brake Arm Collar	1				
66	OC80629A	Brake Arm	1				
67	OC82724A	Reel Motor Holder	1				
68	CA81699A	Reel Motor Ass'y	1				
69	OC83380A	Idle Gear	1				
70	OC82701A	Supply Capstan Flange	1				
71	OC82700A	Take-up Capstan Flange	1				
72	OC80428A	Hold Spring	2				
73	OC82699A	Supply Flywheel	1				
74	OC82698A	Take-up Flywheel	1				
75	OC82702A	Capstan Belt	1				
76	OC82718A	Thrust Plate	2				
77	OC82726A	Floating Rubber	3				
78	CA81698A	Capstan Motor Ass'y	1				
79	OC85320A	Flywheel Holder	1				
80	OC81417A	Cam Gear B	1				
81	OC81418A	Control Motor Holder	1				

7.4. Mechanism Ass'y (B02)

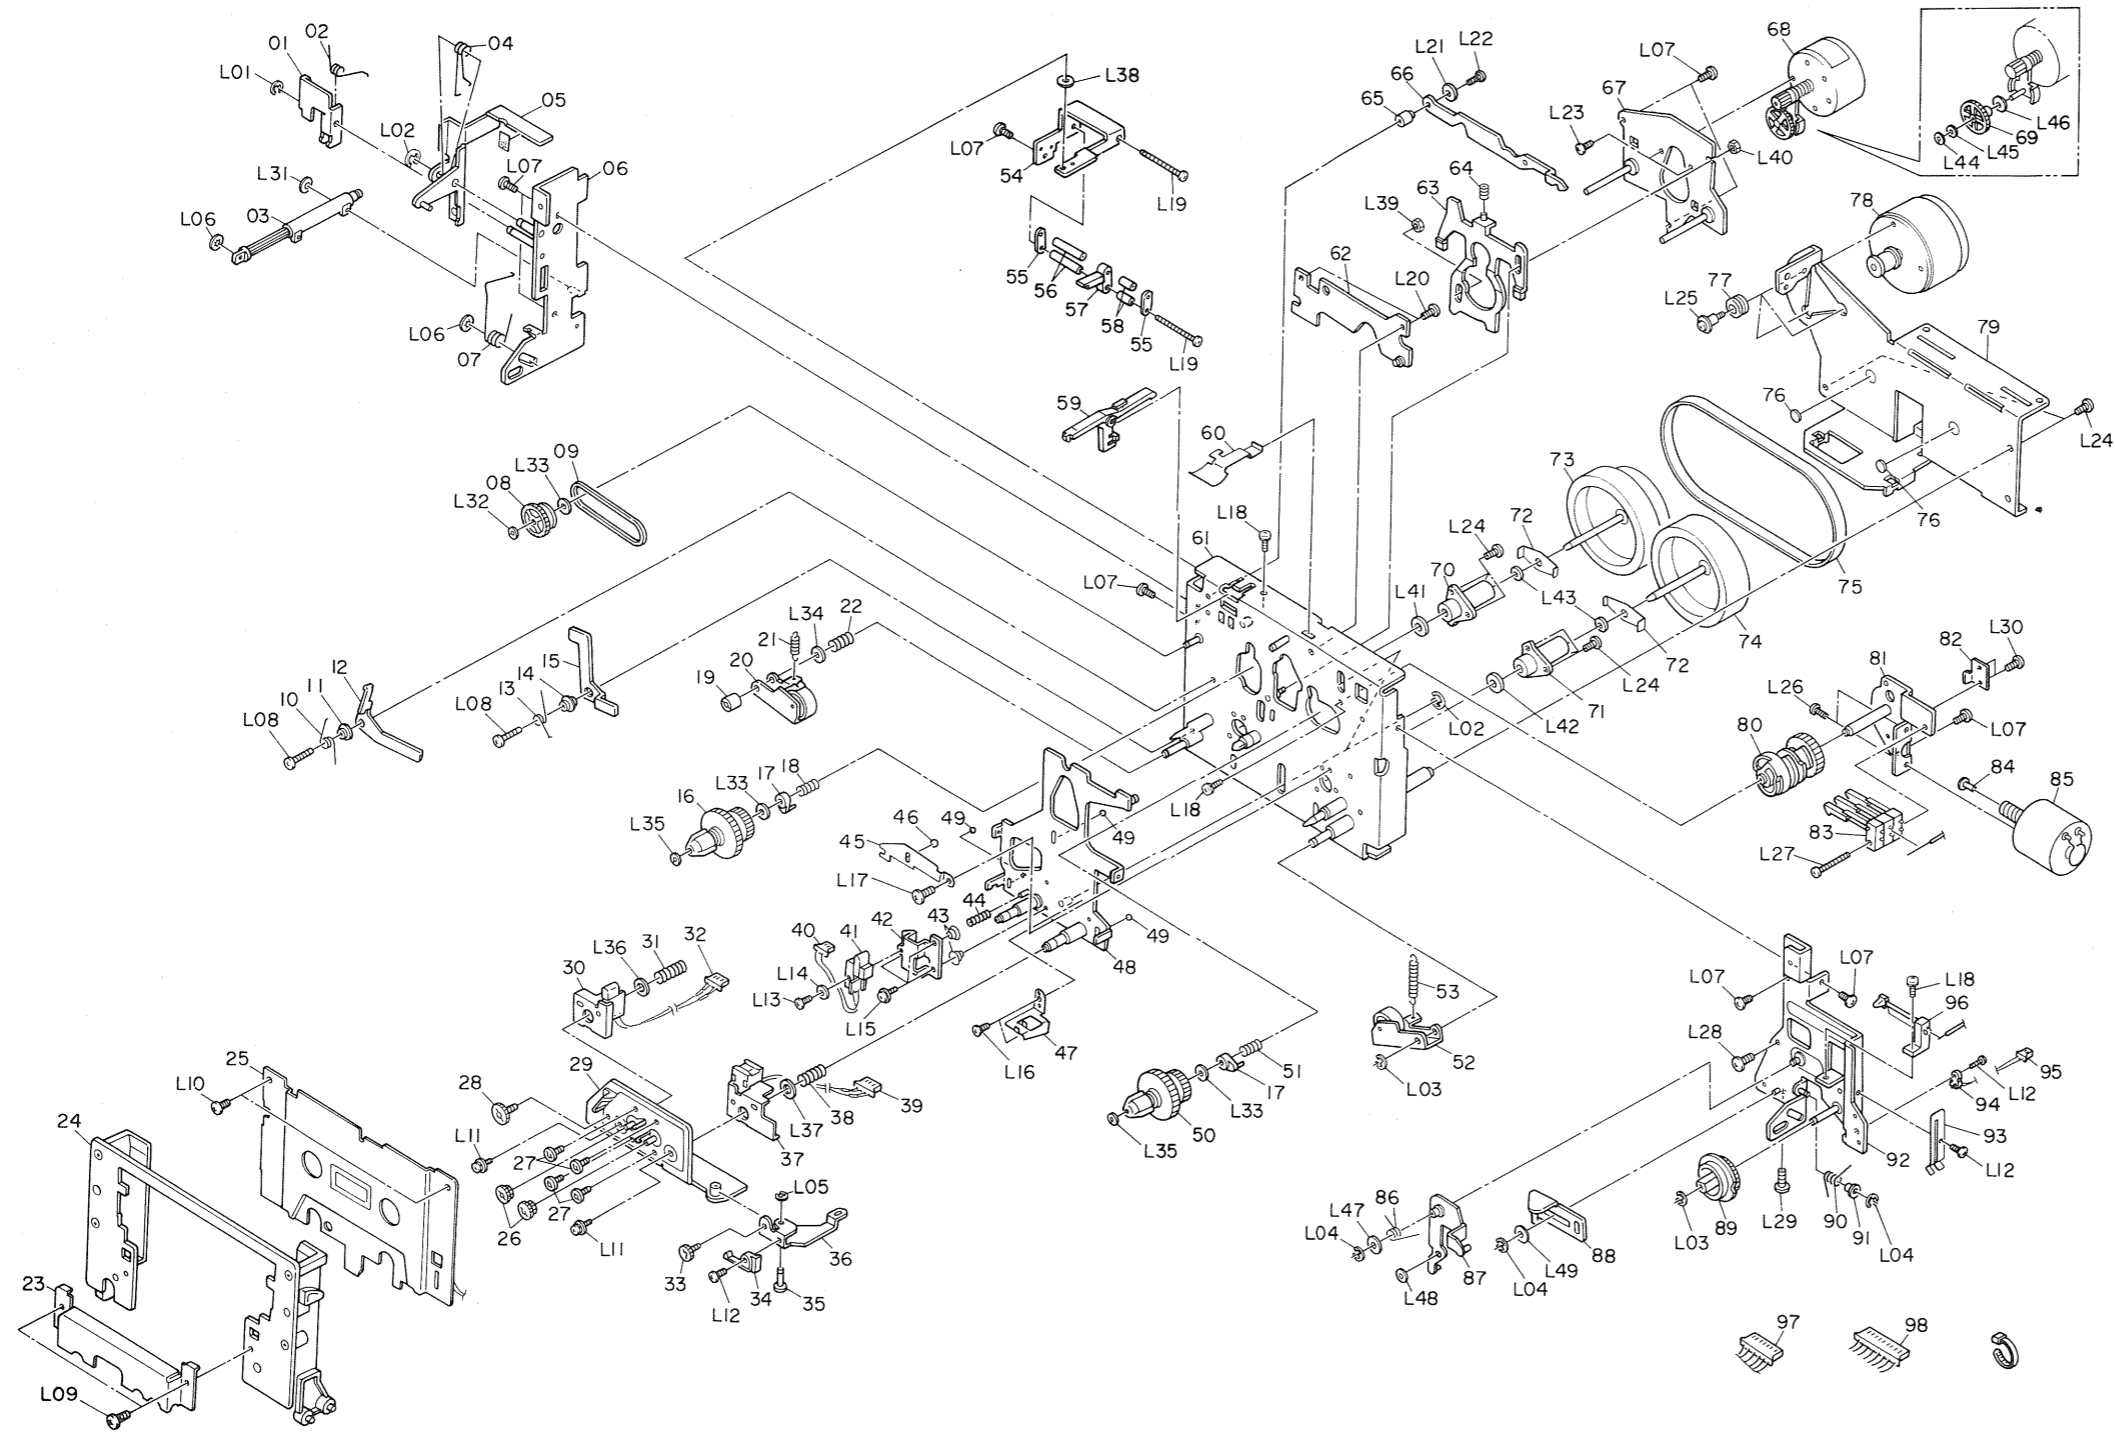


Fig. 7.4

8. MOUNTING DIAGRAMS AND PARTS LIST

8.1. Main P.C.B. Ass'y

Notes:

1. Mounting diagram shows a dip side view of the printed circuit board.
2. Diode is 1SS53, 1S1555, or 1SS176 unless otherwise specified.
3. Abbreviation for part name:
 TR — Transistor, SiD — Silicon Diode,
 ZD — Zener Diode, Varicap — Variable Capacitance Diode
 RK — Carbon Resistor, RM — Metal Film Resistor, RF — Fail Safe Type Resistor,
 RC — Cement Resistor
 CE — Electrolytic Capacitor, CML — Mylar Capacitor, CC — Ceramic Capacitor, CPP — PP Capacitor, CMM — Metalized Mylar Capacitor,
 CSP — Polystyrene Capacitor, C — Mica Capacitor, CT — Tantalum Capacitor

● Semiconductor Location

Ref. No.	Location	Ref. No.	Location
U101	I-8	Q405	F-2
U102	H-5	Q406	F-2
U103	C-3	Q407	F-2
U104	C-4	Q930	A-3
U105	I-10	Q960L	F-9
U106	I-2	Q960R	H-9
U107	C-6	Q980	B-9
U108	H-10	ZD15L	G-10
Q101L	B-3	ZD15R	H-10
Q101R	D-3	ZD96L	G-10
Q102	B-3	ZD96R	H-10
Q105	B-8	ZD301	I-6
Q106L	B-6	ZD302	H-6
Q106R	D-6	ZD303	G-2
Q107L	B-7	ZD304	G-2
Q107R	D-7	ZD401	E-2
Q108L	B-7	D101L	B-2
Q108R	D-7	D101R	B-2
Q109L	B-6	D103L	B-6
Q109R	D-6	D103R	D-5
Q110L	B-6	D104L	B-5
Q110R	D-6	D104R	E-6
Q111L	B-7	D105L	B-5
Q111R	D-7	D105R	E-6
Q112	B-8	D106L	B-5
Q115L	G-5	D106R	E-6
Q115R	G-5	D107L	B-5
Q116L	G-5	D107R	E-6
Q116R	G-4	D108L	B-7
Q117L	G-8	D108R	D-7
Q117R	G-7	D109	B-8
Q118L	G-8	D110L	G-10
Q118R	G-7	D110R	H-10
Q119	B-9	D111L	G-10
Q120	D-9	D111R	H-10
Q121	D-9	D112L	G-5
Q122	D-9	D112R	G-5
Q123	B-9	D113L	G-8
Q124	C-9	D113R	G-7
Q125	C-9	D114	B-9
Q401	D-2	D115	E-9
Q402	E-2	D960L	G-10
Q403	E-2	D960R	H-9
Q404	E-2		

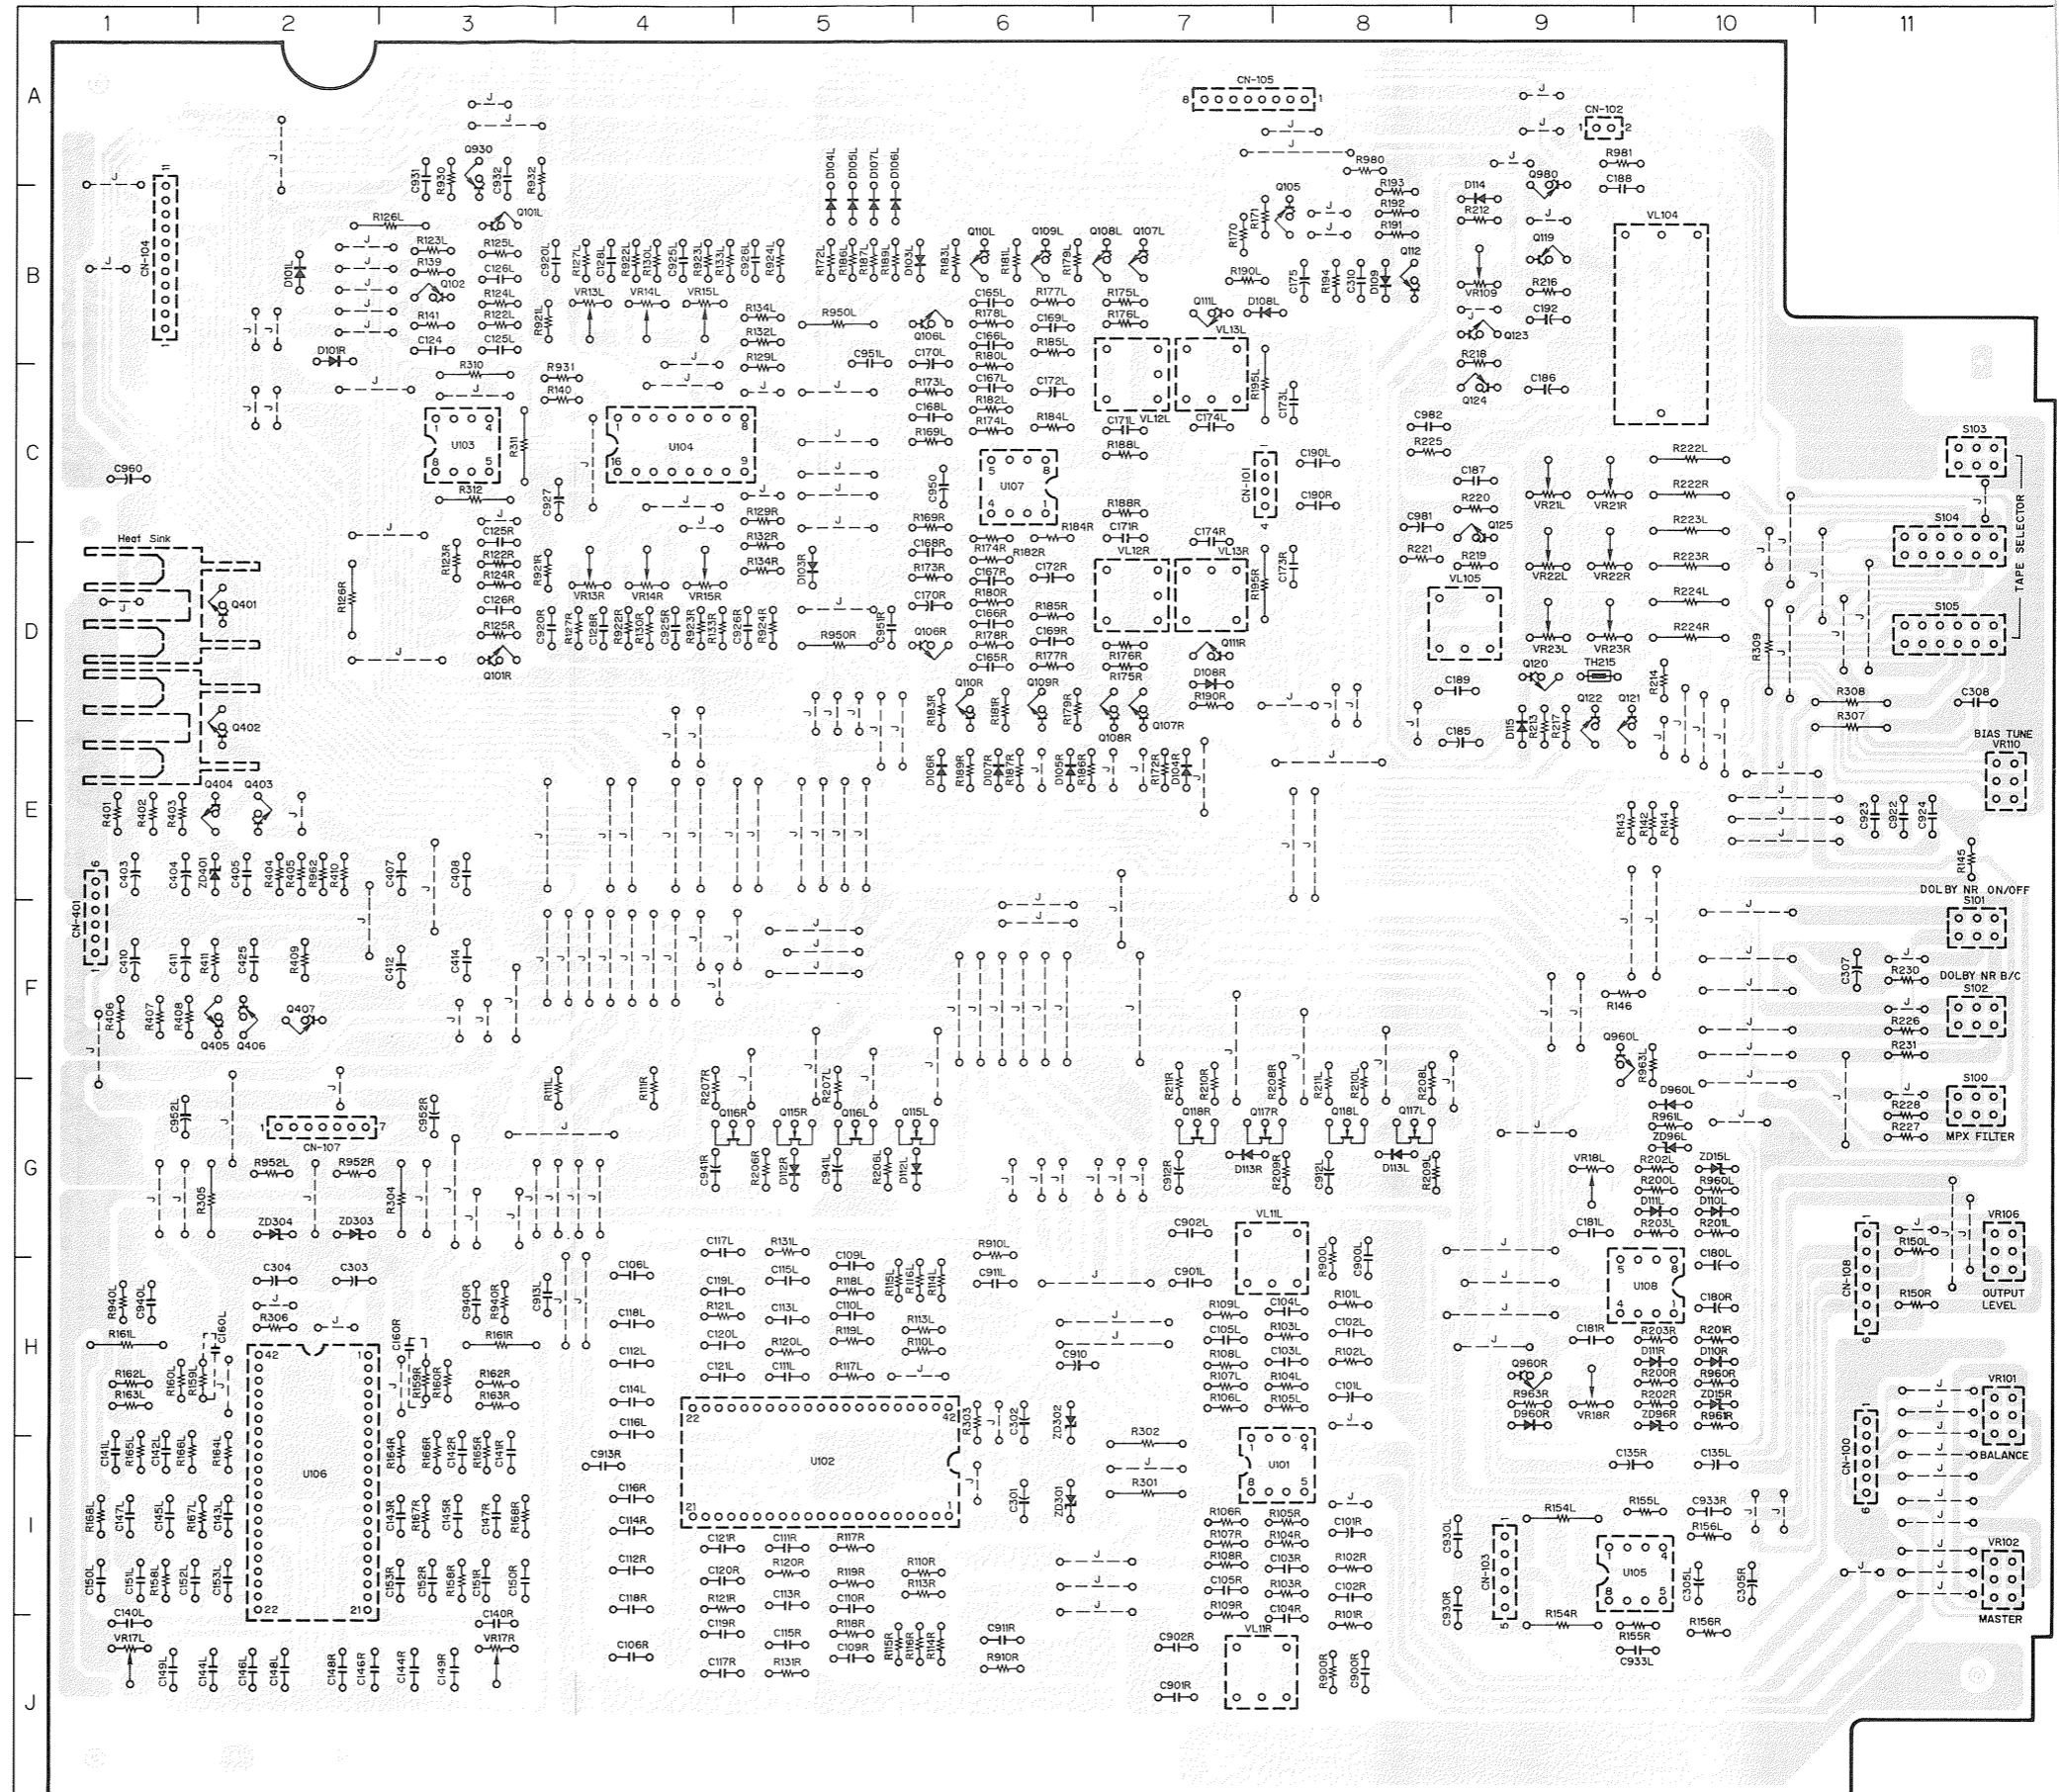


Fig. 8.1

*: Unstocked parts:

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
8.1. Main P.C.B. Ass'y			R171	OB09725A	RK 100K 1/6W J	-- Decoder --			R208L,R	OB09733A	RK 220K 1/6W J	S103-105	OB70176A	Push Switch TAPE (1)
	* BA07984A	Main P.C.B. Ass'y	R172L,R	OB09709A	RK 22K 1/6W J	U106	OB11363A	IC CX20188	R209L,R	OB09749A	RK 1M 1/6W J			
		-- Input Amp. --	R173L,R	OB09733A	RK 220K 1/6W J	ZD303,304	OB12695A	ZD 10V MA4100(N)	R210L,R	OB09733A	RK 220K 1/6W J			-- Miscellaneous --
			R174L,R	OB25195A	RM 1K 1/4W F	VR17L,R	OB32192A	Semi VR 5K	R211L,R	OB09725A	RK 100K 1/6W J			
			R175L,R	OB09685A	RK 2.2K 1/6W J	R158L,R	OB09673A	RK 680 1/6W J	C912L,R	OB40778A	CE 10μ 25V			
			R176L,R	OB09677A	RK 1K 1/6W J	R159L,R	OB09725A	RK 100K 1/6W J	C941L,R	OB40778A	CE 10μ 25V			
U101	OB11204A	IC NJM5532DD	R177L,R	OB25252A	RM 3.92K 1/4W F	R160L,R	OB25195A	RM 1K 1/4W F				CN100	OB60849A	Main P.C.B. 6P H-Connector Ass'y 330
VL11L,R	OB51373A	L-C Block (MPX)	R178L,R	OB09694A	RK 5.1K 1/6W J	R161L,R	OB09420A	RM 2.2K 1/4W F					OB83926A	5P H-Connector Ass'y 600
VR101	OB30132A	VR 100K (MN)	R179L,R	OB09741A	RK 470K 1/6W J	R162L,R	OB25244A	RM 3.24K 1/4W F	Q119	OB10055A	TR DTA124ES	CN103	OB83929B	11P H-Connector Ass'y 250
VR102	OB30133A	VR 100K (A)	R180L,R	OB09693A	RK 4.7K 1/6W J	R163L,R	OB25251A	RM 3.83K 1/4W F	Q120	OB10070A	TR DTC143ES	CN104	OB83932A	8P H-Connector Ass'y 150
R101L,R	OB09749A	RK 1M 1/6W J	R181L,R	OB09741A	RK 470K 1/6W J	R164L,R	OB09749A	RK 1M 1/6W J	Q121	OB10033A	TR 2SC1740S (S)	CN105	OB83931B	7P H-Connector Ass'y 410
R102L,R	OB09717A	RK 47K 1/6W J	R182L,R	OB09695A	RK 5.6K 1/6W J	R165L,R	OB25171A	RM 562 1/4W F	Q122	OB10033A	TR 2SC1740S (S)	CN107	OB83928A	6P H-Connector Ass'y 360
R103L,R	OB09717A	RK 47K 1/6W J	R183L,R	OB09741A	RK 470K 1/6W J	R166L,R	OB25324A	RM 22.1K 1/4W F	Q123	OB10033A	TR 2SC1740S (Y)	CN108	OB83925A	6P H-Connector Ass'y 270
R104L,R	OB09709A	RK 22K 1/6W J	R184L,R	OB09733A	RK 220K 1/6W J	R167L,R	OB09698A	RK 7.5K 1/6W J	Q124	OB10222A	TR DTA144ES	CN401	OB83930B	Earth Lug B-4 (2)
R105L,R	OB09677A	RK 1K 1/6W J	R185L,R	OB25365A	RM 59.0K 1/4W F	R168L,R	OB09700A	RK 9.1K 1/6W J	Q125	OB10053A	SID 1SS176		OE00174A	M3x6 @ Binding (Black Chromate) (2)
R106L,R	OB09677A	RK 1K 1/6W J	R186L,R	OB09709A	RK 22K 1/6W J	R304,305	OB09508A	RF 56 1/4W J	Q980	OB10053A	TR DTA144ES		OE00985A	Volume Holder (1)
R107L,R	OB25236A	RM 2.67K 1/4W F	R187L,R	OB09709A	RK 22K 1/6W J	R306	OB25398A	RM 130K 1/4W F	D114,115	OB06398A	Bias Osc.			
R108L,R	OB25236A	RM 2.67K 1/4W F	R188L,R	OB25213A	RM 1.54K 1/4W F	R940L,R	OB25099A	RM 100 1/4W F	VL104	OB51047A	Osc. Tune			
R109L,R	OB25267A	RM 5.62K 1/4W F	R189L,R	OB09709A	RK 22K 1/6W J	C140L,R	OB47154A	CML 120P 50V J	VL105	OB51372A	Thermistor 3.3K			
R900L,R	OB09725A	RK 100K 1/6W J	R190L,R	OB09695A	RK 5.6K 1/6W J	C141L,R	OB41133A	CPP 2200P 100V G	TH215	OB19006A	Semi VR 5K			
C101L,R	OB40778A	CE 10μ 25V	R191	OB09717A	RK 47K 1/6W J	C142L,R	OB41133A	CPP 2200P 100V G	VR109	OB32192A	Volume 10K			
C102L,R	OB47197A	CSP 33P 160V J	R192	OB09701A	RK 10K 1/6W J	C143L,R	OB41139A	CPP 3900P 100V G	VR110	OB30138A				
C103L,R	OB47142A	CSP 68P 160V J	R193	OB09721A	RK 68K 1/6W J	C144L,R	OB41306A	CML 0.47μ 50V J	R212,213	OB09665A	RK 330 1/6W J			
C104L,R	OB47197A	CSP 33P 160V J	R194	OB09701A	RK 10K 1/6W J	C145L,R	OB40817A	CE 1μ 50V (BP)	R214	OB09701A	RK 10K 1/6W J			
C105L,R	OB01802A	CML 2200P 50V J	R195L,R	OB09629A	RK 10 1/6W J	C146L,R	OB41300A	CML 0.15μ 50V J	R216	OB9711A	RK 27K 1/6W J			
C900L,R	OB47154A	CML 120P 50V J	R950L,R	OB09701A	RK 10K 1/6W J	C147L,R	OB41288A	CML 0.015μ 50V J	R217	OB09653A	RK 100 1/6W J			
C901L,R	OB09189A	CML 2700P 50V J	C165L,R	OB41133A	CPP 2200P 100V G	C148L,R	OB41302A	CML 0.22μ 50V J	R218	OB09701A	RK 10K 1/6W J			
C902L,R	OB41139A	CPP 3900P 100V J	C166L,R	OB01914A	CML 3300P 50V J	C149L,R	OB41296A	CML 0.068μ 50V J	R219	OB09725A	RK 100K 1/6W J			
		-- Encoder --	C167L,R	OB05582A	CML 0.022μ 50V J	C150L,R	OB40817A	CE 1μ 50V (BP)	R220	OB09701A	RK 10K 1/6W J			
			C168L,R	OB09045A	CML 0.027μ 50V J	C151L,R	OB41295A	CML 0.056μ 50V J	R221	OB09617A	RK 3.3 1/6W J			
			C169L,R	OB05682A	CML 0.068μ 50V J	C152L,R	OB41143A	CPP 5600P 100V G	R225	OB09701A	RK 10K 1/6W J			
			C170L,R	OB40557A	CE 1μ 50V	C153L,R	OB41286A	CML 0.01μ 50V J	R952L,R	OB09648A	RK 62 1/6W J			
U102	OB11363A	IC CX20188	C171L,R	OB01914A	CML 3300P 50V J	C154L,R	OB41201A	CPP 100P 100V J	R980	OB09717A	RK 47K 1/6W J			
ZD301,302	OB12695A	ZD 10V MA4100(N)	C172L,R	OB40559A	CE 47μ 16V	C155L,R	OB40608A	CE 470μ 16V	R981	OB09693A	RK 4.7K 1/6W J			
R110L,R	OB25267A	RM 5.62K 1/4W F	C173L,R	OB41795A	CSP 330P 160V J	C303,304	OB47154A	CML 120P 50V J	C185,186	OB40780A	CE 100μ 16V			
R113L,R	OB25195A	RM 1K 1/4W F	C174L,R	OB47146A	CSP 2200P 160V J	C940L,R			C187	OB09993A	CML 820P 50V J			
R114L,R	OB25304A	RM 13.7K 1/4W F	C175	OB40778A	CE 10μ 25V				C188	OB41255A	CPP 0.018μ 100V J			
R115L,R	OB25251A	RM 3.83K 1/4W F	C310	OB05550A	CML 1000P 50V J				C189	OB41261A	CPP 0.033μ 100V J			
R116L,R	OB25244A	RM 3.24K 1/4W F	C950	OB40798A	CE 330μ 35V				C192	OB40778A	CE 10μ 25V			
R117L,R	OB09749A	RK 1M 1/6W J	C951L,R	OB05550A	CML 1000P 50V J				C952L,R	OB40608A	CE 470μ 16V			
R118L,R	OB25171A	RM 562 1/4W F	CN101	OB81461A	4P T-Post				C981	OB40115A	CE 4.7μ 50V			
R119L,R	OB25324A	RM 22.1K 1/4W F							C982	OB41196A	CSP 470P 160V J			
R120L,R	OB09698A	RK 7.5K 1/6W J							CN102	OB81459A	2P T-Post			
R121L,R	OB09673A	RK 680 1/6W J												
R121L,R	OB09700A	RK 9.1K 1/6W J	U103	OB11204A	IC NJM5532DD									
R301,302	OB09508A	RF 56 1/4W J	U104	OB11027A	IC TC9145P									
R303	OB25398A	RM 130K 1/4W F	Q101L,R	OB10033A	TR 2SC1740S (S)									
R910L,R	OB25099A	RM 100 1/4W F	Q102	OB10029A	TR 2SA933S (S)									
C106L,R	OB40474A	CE 47μ 16V (BP)	Q930	OB10029A	TR 2SA933S (S)									
C109L,R	OB41133A	CPP 2200P 100V G	D101L,R	OB06398A	SID 1SS176									
C110L,R	OB41133A	CPP 2200P 100V G	VR13L,R	OB32193A	Semi VR 10K									
C111L,R	OB41139A	CPP 3900P 100V G	VR14L,R	OB32193A	Semi VR 10K									
C112L,R	OB41306A	CML 0.47μ 50V J	VR15L,R	OB32194A	Semi VR 20K									
C113L,R	OB40817A	CE 1μ 50V (BP)	R111L,R	OB09733A	RK 220K 1/6W J	Q401,402	OB06452A	TR 2SD1406						
C114L,R	OB41300A	CML 0.15μ 50V J	R112L,R	OB09705A	RK 15K 1/6W J	Q403,404	OB06142A	TR 2SC2240						
C115L,R	OB41288A	CML 0.015μ 50V J	R122L,R	OB09703A	RK 12K 1/6W J	Q405,406	OB10050A	TR 2SA970						
C116L,R	OB41302A	CML 0.22μ 50V J	R123L,R	OB09703A	RK 12K 1/6W J	Q407	OB06451A	TR 2SB1015						
C117L,R	OB40817A	CE 1μ 50V (BP)	R124L,R	OB25276A	RM 6.98K 1/4W F	ZD401	OB12705A	ZD 5.1V						
C118L,R	OB41296A	CML 0.068μ 50V J	R125L,R	OB09749A	RK 1M 1/6W J				U108	OB06124A	IC NJM4558D			
C119L,R	OB41295A	CML 0.056μ 50V J	R126L,R	OB09701A	RK 10K 1/6W J	R401,402	OB09685A	RK 2.2K 1/6W J	Q960L,R	OB06299A	TR 2SC2878			
C120L,R	OB41143A	CPP 5600P 100V G	R127L,R	OB09701A	RK 10K 1/6W J	R403	OB09677A	RK 1K 1/6W J	ZD15L,R	OB12714A	ZD 3.3V RD3.3ESB1			
C121L,R	OB41286A	CML 0.01μ 50V J	R129L,R	OB09693A	RK 4.7K 1/6W J	R404	OB25667A	RM 3.9K 1/4W F	ZD96L,R	OB12289A	ZD 5.1V MTZ5.1C			
C301,302	OB40608A	CE 470μ 16V	R130L,R	OB09697A	RK 6.8K 1/6W J	R405	OB25669A	RM 4.7K 1/4W F	D110L,R	OB06398A	SID 1SS176			
C910	OB40778A	CE 10μ 25V	R132L,R	OB09689A	RK 3.3K 1/6W J	R406,407	OB09685A	RK 2.2K 1/6W J	D111L,R	OB06398A	SID 1SS176			
C911L,R	OB47154A	CML 120P 50V J	R133L,R	OB09701A	RK 10K 1/6W J	R408	OB09677A	RK 1K 1/6W J	D960L,R	OB06398A	SID 1SS176			
C913L,R	OB47154A	CML 120P 50V J	R134L,R	OB09701A	RK 10K 1/6W J	R409	OB22570A	RM 12K 1/4W F	VR18L,R	OB32192A	Semi VR 5K			
		-- Rec. Amp. --	R139	OB09717A	RK 47K 1/6W J	R410	OB25308A	RM 15K 1/4W F	R200L,R	OB09749A	RK 1M 1/6W J			
			R140,141	OB09725A	RK 100K 1/6W J	R411	OB09669A	RK 470 1/6W J	R201L,R	OB09741A	RK 470K 1/6W J			
			R142,143	OB09733A	RK 220K 1/6W J	R962	OB09682A	RK 1.6K 1/6W J	R202L,R	OB09677A	RK 1K 1/6W J			
			R144	OB09733A	RK 220K 1/6W J	C403,404	OB40800A	CE 100μ 25V	R203L,R	OB09677A	RK 1K 1/6W J			
			R145,146	OB09693A	RK 4.7K 1/6W J	C405	OB41298A	CML 0.1μ 50V J	R960L,R	OB09696A	RK 6.2K 1/6W J			
			R310	OB09693A	RK 4.7K 1/6W J	C407	OB40705A	CE 3300μ 16V	R961L,R	OB09682A	RK 1.6K 1/6W J			
			R311	OB09701A	RK 10K 1/6W J	C408	OB41298A	CML 0.1μ 50V J						

8.2. Power Supply & Logic P.C.B. Ass'y

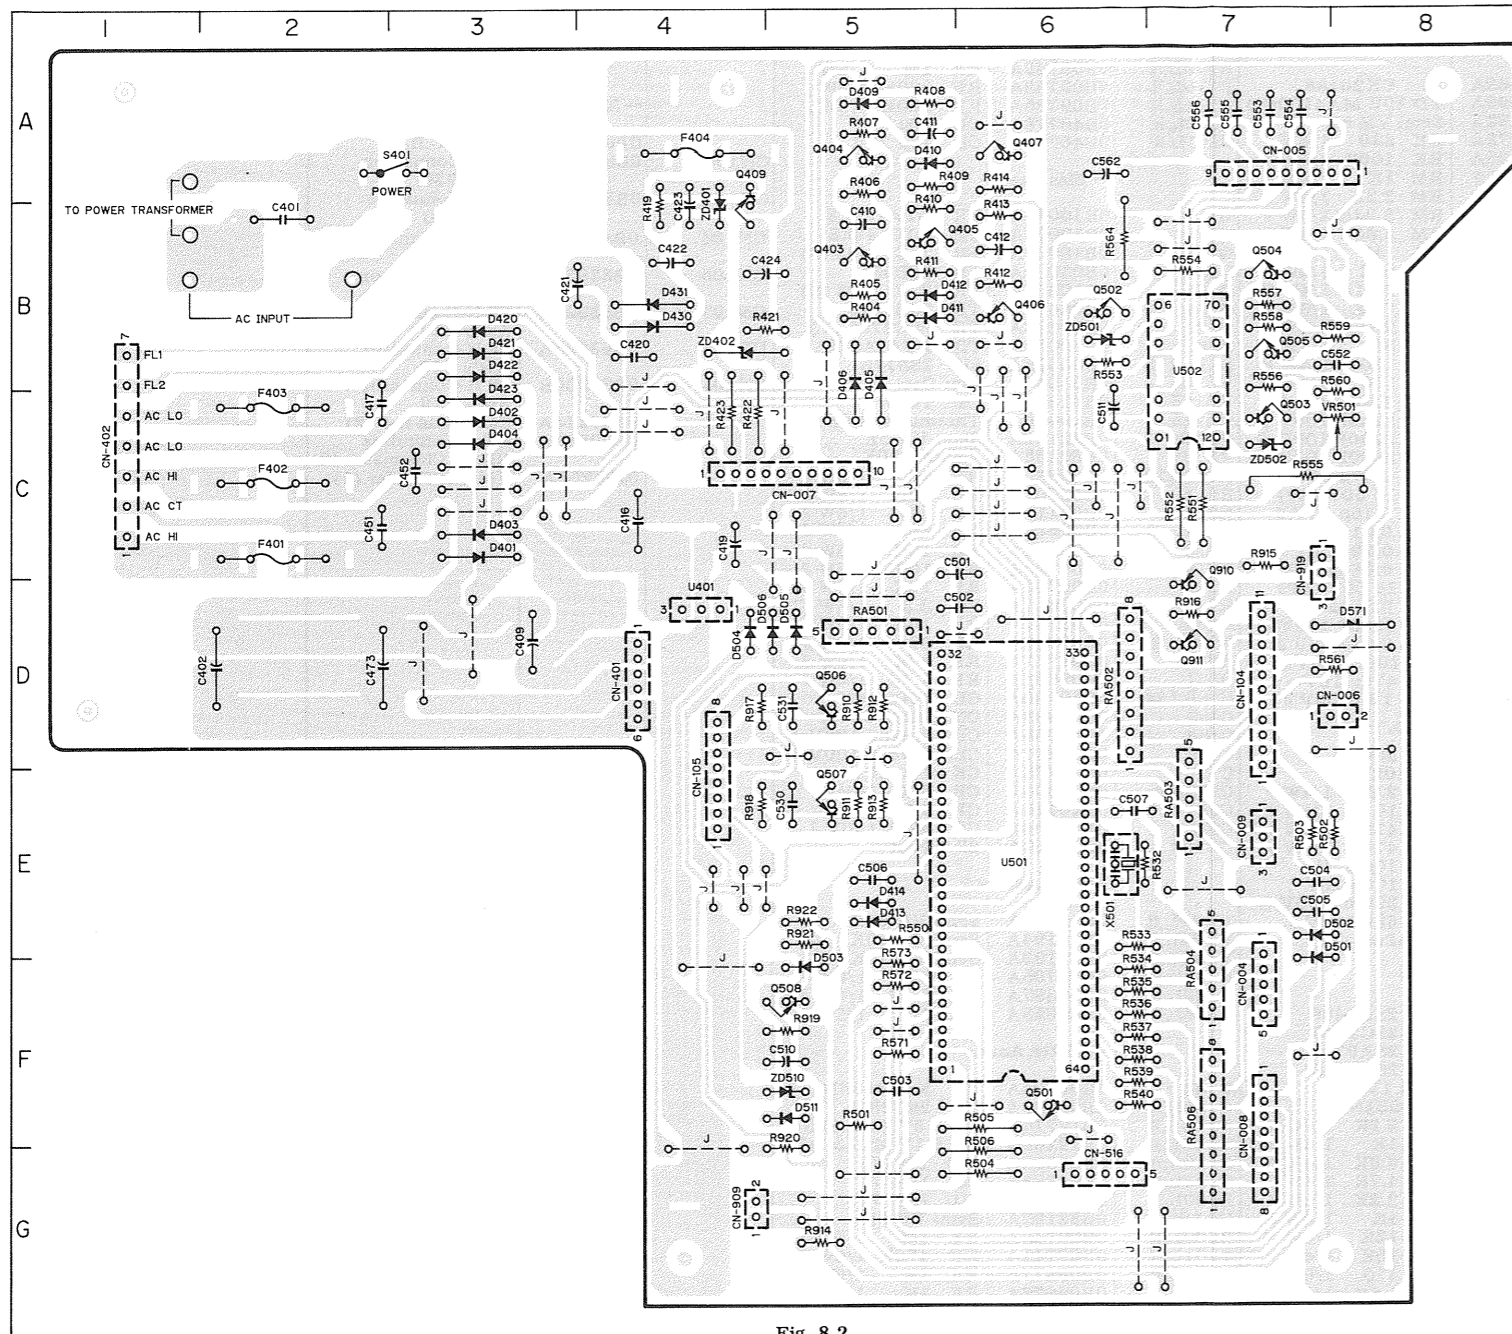


Fig. 8.2

● Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
U401	D-4	Q503	C-7	ZD502	C-7	D412	B-5	D503	F-5
U501	E-6	Q504	B-7	ZD510	F-5	D413	E-5	D504	D-4
U502	B-7	Q505	B-7	D401	C-3	D414	E-5	D505	D-5
Q403	B-5	Q506	D-5	D402	C-3	D420	B-3	D506	D-4
Q404	A-5	Q507	E-5	D403	C-3	D421	B-3	D511	F-5
Q405	B-5	Q508	F-5	D404	C-3	D422	B-3	D571	D-8
Q406	B-6	Q910	C-7	D405	B-5	D423	B-3		
Q407	A-6	Q911	D-7	D406	B-5	D430	B-4		
Q409	A-4	ZD401	B-4	D409	A-5	D431	B-4		
Q501	F-6	ZD402	B-4	D410	A-5	D501	E-7		
Q502	B-6	ZD501	B-6	D411	B-5	D502	E-7		

*: Unstocked parts:

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	
8.2. Power Supply & Logic P.C.B. Ass'y			R560	OB09677A	RK 1K 1/6W J	
			R561	OB09669A	RK 470 1/6W J	
			R564	OB09217A	RF 5.6 1/4W J	
			C551	OB40078A	CE 100μ 16V	
			C552	OB41286A	CML 0.01μ 50V J	
			C553,554	OB41298A	CML 0.1μ 50V J	
			C555,556	OB41298A	CML 0.1μ 50V J	
			C562	OB40079A	CE 220μ 16V	
			CN005	OB84084A	9P T-Post	
			CN006	OB84278A	2P T-Post	
		— Power Supply —			— MPU —	
U401	OB11753A	IC NJM7805FA	U501	OB11884A	IC μPD75106CW	
Q403,404	OB10033A	TR 2SC1740S (S)	Q501	OB10068A	TR DTC114ES	
Q405	OB10033A	TR 2SC1740S (S)	Q506,507	OB10029A	TR 2SA933S (S)	
Q406	OB10058A	TR DTA114ES	Q508	OB10029A	TR 2SA933S (S)	
Q407	OB10033A	TR 2SC1740S (S)	Q910,911	OB10053A	TR DTA144ES	
Q409	OB10015A	TR 2SA1020	ZD510	OB12695A	ZD 10V MA4100(N)	
ZD401	OB12708A	ZD 24V MA4240N-H	D501,502	OB06398A	SiD 1SS176	
ZD402	OB12707A	ZD 4.7V MA4047N	D511	OB06398A	SiD 1SS176	
D401,402	OB12365A	SiD 1SR35-100A	D571	OB12634A	Varistor 02YS	
D403,404	OB12365A	SiD 1SR35-100A	X501	OB92045A	Crystal 4.0MHZ	
D405,406	OB12365A	SiD 1SR35-100A	RA501	OB21101A	R Network 10Kx3	
D409,410	OB06398A	SiD 1SS176	RA502	OB21102A	R Network 10Kx6	
D411,412	OB06398A	SiD 1SS176	RA503	OB21101A	R Network 10Kx3	
D420,421	OB12365A	SiD 1SR35-100A	RA504	OB21101A	R Network 10Kx3	
D422,423	OB12365A	SiD 1SR35-100A	RA506	OB21102A	R Network 10Kx6	
D430,431	OB12365A	SiD 1SR35-100A	R501	OB09689A	RK 3.3K 1/6W J	
R404	OB09709A	RK 22K 1/6W J	R502,503	OB09701A	RK 10K 1/6W J	
R405	OB09703A	RK 12K 1/6W J	R504,505	OB09701A	RK 10K 1/6W J	
R406	OB09701A	RK 10K 1/6W J	R506	OB09701A	RK 10K 1/6W J	
R407,408	OB09693A	RK 4.7K 1/6W J	R532,533	OB09677A	RK 1K 1/6W J	
R409	OB09719A	RK 56K 1/6W J	R534,535	OB09677A	RK 1K 1/6W J	
R410	OB09713A	RK 33K 1/6W J	R536,537	OB09677A	RK 1K 1/6W J	
R411,412	OB09693A	RK 4.7K 1/6W J	R538,539	OB09677A	RK 1K 1/6W J	
R413	OB09719A	RK 56K 1/6W J	R540	OB09677A	RK 1K 1/6W J	
R414	OB09713A	RK 33K 1/6W J	R550	OB09701A	RK 10K 1/6W J	
R419	OB09685A	RK 2.2K 1/6W J	R571	OB09677A	RK 1K 1/6W J	
R421	OB09701A	RK 10K 1/6W J	R572,573	OB09701A	RK 10K 1/6W J	
R422,423	OB09653A	RK 100 1/6W J	R910,911	OB09709A	RK 22K 1/6W J	
C401	OB41825A	CC 4700P AC400V (USA, CAN, EP, UK, AUS, OTR, SAU)	R912,913	OB09725A	RK 100K 1/6W J	
			R914	OB09701A	RK 10K 1/6W J	
			R915,916	OB09661A	RK 220 1/6W J	
			R917,918	OB09725A	RK 100K 1/6W J	
			R919	OB09721A	RK 68K 1/6W J	
			R920	OB09669A	RK 470 1/6W J	
			R921	OB09725A	RK 100K 1/6W J	
			R922	OB09701A	RK 10K 1/6W J	
C402	OB40801A	CE 6800μ 25V	C501	OB40077A	CE 47μ 16V	
C409	OB40363A	CE 2200μ 25V	C502	OB41298A	CML 0.1μ 50V J	
C410	OB40630A	CE 22μ 10V (LN)	C503	OB41302A	CML 0.22μ 50V J	
C411,412	OB40255A	CE 1μ 50V (LN)	C504,505	OB41286A	CML 0.01μ 50V J	
C416	OB40362A	CE 6800μ 16V	C506,507	OB41274A	CML 1000P 50V J	
C417	OB41298A	CML 0.1μ 50V J	C510	OB40756A	CE 1μ 50V (LN)	
C419	OB40067A	CE 470μ 10V	C530,531	OB41290A	CML 0.022μ 50V J	
C420	OB41298A	CML 0.1μ 50V J	CN004	OB81462A	5P T-Post	
C421	OB40798A	CE 330μ 35V	CN007	OB84302A	10P T-Post	
C422	OB40120A	CE 100μ 50V	CN008	OB84296A	8P T-Post	
C423	OB40100A	CE 10μ 35V	CN009	OB84281A	3P T-Post	
C424	OB40802A	CE 1000μ 35V	CN104	OB84305A	11P T-Post	
C451,452	OB41298A	CML 0.1μ 50V J	CN105	OB81465A	8P T-Post	
C473	OB40801A	CE 6800μ 25V	CN516	OB84286A	5P T-Post	
S401	OB71012A	Power Switch 1P TV-4	CN909	OB81459A	2P T-Post	
CN401	OB81463A	6P T-Post	CN919	OB81460A	3P T-Post	
CN402	OB81574A	7P T-Post			— Miscellaneous —	
	OB08349B	Fuse Clip (8)			OB60846A	Power Supply & Logic P.C.B.
	OE03355A	Earth Lug for P.C.B. (4)				
		— Motor Driver —				
U502	OB11368A	IC IC LB1649				
Q502	OB10062A	TR DTC144ES				
Q503	OB10029A	TR 2SA933S (S)				
Q504	OB10062A	TR DTC144ES				
Q505	OB10033A	TR 2SC1740S (S)				
ZD501	OB12290A	ZD 5.6V MTZ5.6A				
ZD502	OB12288A	ZD 5.1V MTZ5.1B				
D413,414	OB06398A	SiD 1SS176				
D503,504	OB06398A	SiD 1SS176				
D505,506	OB06398A	SiD 1SS176				
VR501	OB32192A	Semi VR 5K				
R551,552	OB01857A	RK 1K 1/4W J				
R553,554	OB09677A	RK 1K 1/6W J				
R555	OB24349A	RF 27 1/2W				
R556	OB09701A	RK 10K 1/6W J				
R557	OB09681A	RK 1.5K 1/6W J				
R558	OB09695A	RK 5.6K 1/6W J				
R559	OB09717A	RK 47K 1/6W J				

8.3. Shut-off P.C.B. Ass'y

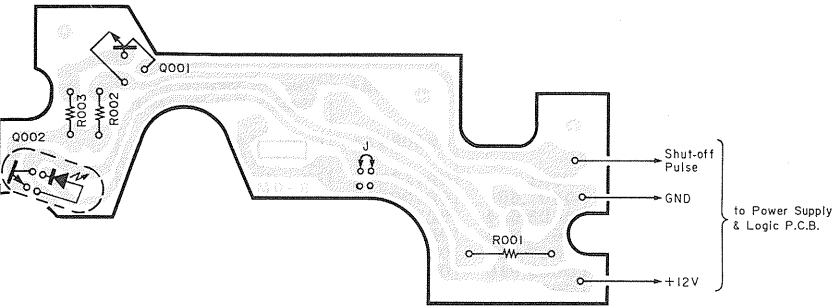


Fig. 8.3

8.4. Timer Switch P.C.B. Ass'y

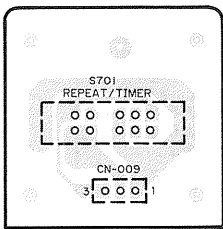


Fig. 8.4

8.5. Headphone P.C.B. Ass'y

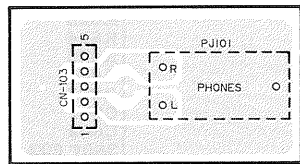


Fig. 8.5

8.6. Pin Jack P.C.B. Ass'y

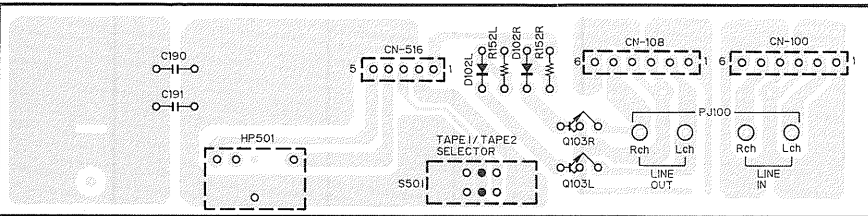


Fig. 8.6

8.7. Playback Amp. P.C.B. Ass'y


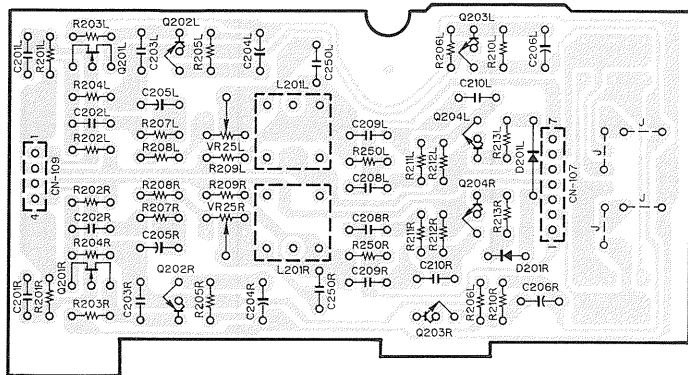


Fig. 8.7

*: Unstocked parts:

Schematic Ref. No.	Part No.	Description
8.3. Shut-off P.C.B. Ass'y		
*	CA80011B	Shut-off P.C.B. Ass'y
Q001	0C80047A	Shut-off P.C.B.
Q002	0B06388A	TR 2SC2812
	0B06389A	Photo Reflector NJL5141
R001	0C81330A	RM 750
R002	0B09841A	RK 15K
R003	0B09840A	RK 680
8.4. Timer Switch P.C.B. Ass'y		
*	BA07983A	Timer Switch P.C.B. Ass'y
S701	0B60848A	Timer Switch P.C.B.
CN009	0B70175A	Slide Switch 2-4
	0B83936A	3P H-Connector Ass'y
8.5. Headphone P.C.B. Ass'y		
*	BA07986A	Headphone P.C.B. Ass'y
PJ101	0B60851A	Headphone P.C.B. Headphone Jack
	0B81478A	Headphone Jack
8.6. Pin Jack P.C.B. Ass'y		
*	BA07985A	Pin Jack P.C.B. Ass'y
Q103L,R	0B60850A	Pin Jack P.C.B.
D102L,R	0B06299A	TR 2SC2878
R152L,R	0B06398A	SiD 1SS176
C190	0B09693A	RK 4.7K 1/6W J
C191	0B05550A	CML 1000P 50V J
S501	0B41298A	CML 0.1μ 50V J
HP501	0B70178A	Slide Switch 2-2
PJ100	0B84028A	Stereo Mini Jack
CN516	0B84350A	4P Pin Jack
	0B83927A	5P H-Connector Ass'y 300
	0E03355A	Earth Lug for P.C.B. (1)
8.7. Playback Amp. P.C.B. Ass'y		
*	BA07987A	Playback Amp. P.C.B. Ass'y
	0B60852A	Playback Amp. P.C.B.
Q201L,R	0B10383A	FET 2SK369 (GR)
Q202L,R	0B10050A	TR 2SA970 (BL)
Q203L,R	0B06142A	TR 2SC2240 (BL)
Q204L,R	0B10033A	TR 2SC1740S (S)
D201L,R	0B06398A	SiD 1SS176
L201L,R	0B51375A	PB Trap Coil
VR25L,R	0B32190A	Semi VR 1KB
R201L,R	0B09725A	RK 100K 1/6W J
R202L,R	0B25074A	RM 54.6 1/4W F
R203L,R	0B25235A	RM 2.61K 1/4W F
R204L,R	0B25401A	RM 140K 1/4W F
R205L,R	0B09673A	RK 680 1/6W J
R206L,R	0B09713A	RK 33K 1/6W J
R207L,R	0B25672A	RM 6.2K 1/4W F
R208L,R	0B09665A	RK 330 1/6W J
R209L,R	0B09709A	RK 22K 1/6W J
R210L,R	0B09697A	RK 6.8K 1/6W J
R211L,R	0B25292A	RM 10.2K 1/4W F
R212L,R	0B09741A	RK 470K 1/6W J
R213L,R	0B09701A	RK 10K 1/6W J
R250L,R	0B25279A	RM 7.5K 1/4W F
C201L,R	0B41754A	CSP 150P 160V J
C202L,R	0B05582A	CML 0.022μ 50V J
C203L,R	0B41763A	CSP 10P 160V J
C204L,R	0B40066A	CE 330μ 10V
C205L,R	0B40778A	CE 10μ 25V
C206L,R	0B40050A	CE 220μ 6.3V
C208L,R	0B05530A	CML 6800P 50V J
C209L,R	0B41139A	CPP 3900P 100V J
C210L,R	0B47027A	CML 470P 50V J
C250L,R	0B41816A	CSP 220P 160V J
CN107	0B81464A	7P T-Post
CN109	0B81461A	4P T-Post

8.8. Control Switch and Display P.C.B. Ass'y

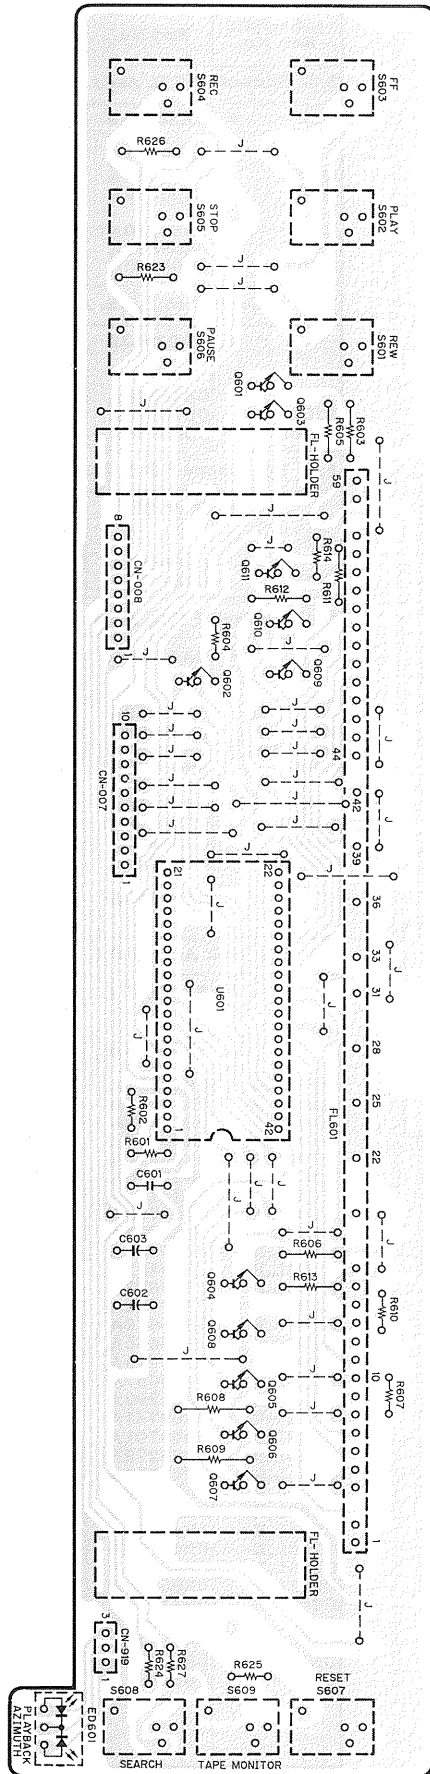

Schematic Ref. No.	Part No.	Description
8.8. Control Switch & Display P.C.B. Ass'y		
*	BA07982A	Control Switch & Display P.C.B. Ass'y
	OB60847A	Control Switch & Display P.C.B.
U601	OB11860A	IC MSC7112-01
Q601,602	OB10033A	TR 2SC1740S (S)
Q603,604	OB10033A	TR 2SC1740S (S)
Q605,606	OB10033A	TR 2SC1740S (S)
Q607,608	OB10033A	TR 2SC1740S (S)
Q609,610	OB10033A	TR 2SC1740S (S)
Q611	OB10033A	TR 2SC1740S (S)
ED601	OB12709A	LED TL5G126
R601	OB09713A	RK 33K 1/6W J
R602	OB09701A	RK 10K 1/6W J
R603,604	OB09717A	RK 47K 1/6W J
R605,606	OB09717A	RK 47K 1/6W J
R607,608	OB09717A	RK 47K 1/6W J
R609,610	OB09717A	RK 47K 1/6W J
R611,612	OB09717A	RK 47K 1/6W J
R613	OB09629A	RK 10 1/6W J
R614	OB09717A	RK 47K 1/6W J
R623	OB09701A	RK 10K 1/6W J
R624	OB09693A	RK 4.7K 1/6W J
R625	OB09705A	RK 15K 1/6W J
R626	OB09701A	RK 10K 1/6W J
R627	OB09693A	RK 4.7K 1/6W J
C601	OB41974A	CC 100P 50V J
C602	OB40158A	CE 100μ 6.3V
S601,602	OB70161A	Tact Switch
S603,604	OB70161A	Tact Switch
S605,606	OB70161A	Tact Switch
S607,608	OB70161A	Tact Switch
S609	OB70161A	Tact Switch
CN007	OB83935A	10P H-Connector Ass'y 400
CN008	OB83934A	8P H-Connector Ass'y 300
CN919	OB83937A	3P H-Connector Ass'y 250
FL601	OB90461A	FL Display FIP13BW7Y
	OJ06219C	FL Cushion
	OJ06238A	FL Stopper

Fig. 8.8

9. SCHEMATIC DIAGRAM

9.1. IC Block Diagrams

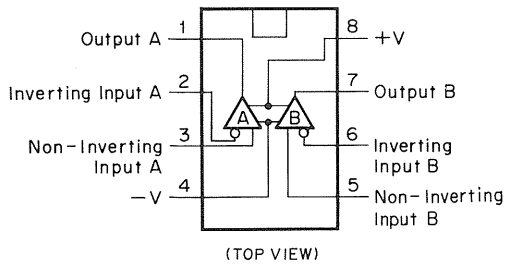


Fig. 9.1.1 Operational Amp. IC 4558D, 5532DD, 5216


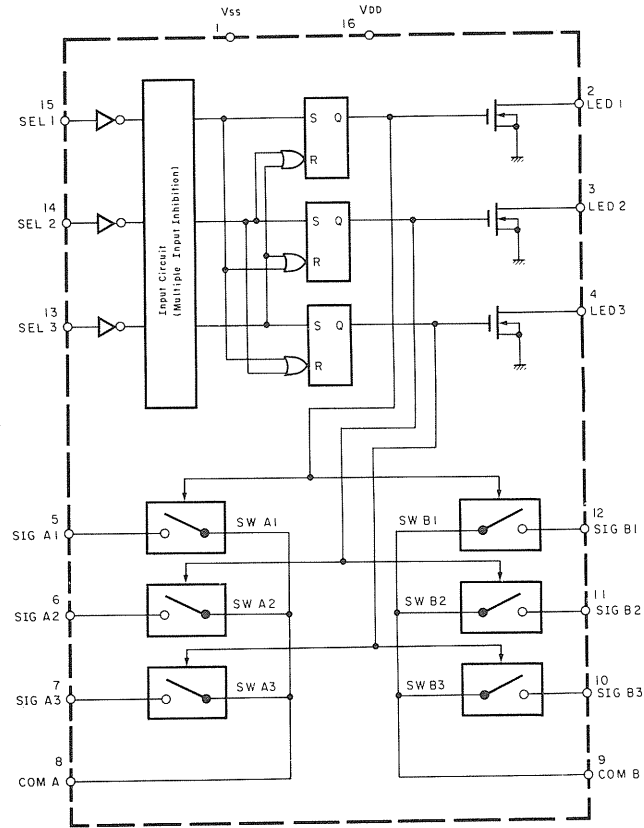



Fig. 9.1.2 Analog Switch Selector TC9145P




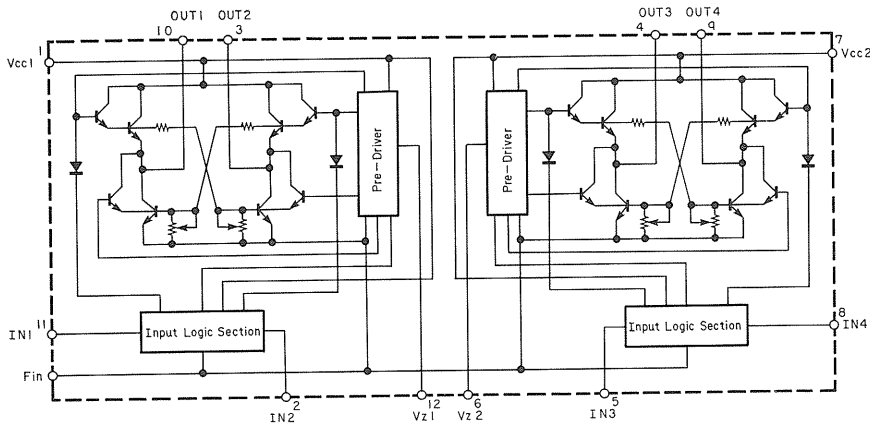



INPUT		OUTPUT		OPERATION
IN1/3	IN2/4	OUT1/3	OUT2/4	
0	0	0	0	Braking
1	0	1	0	Forward (Reverse)
0	1	0	1	Reverse (Forward)
1	1	0	0	Braking

Fig. 9.1.3 Motor Driver IC LB1649

U501 μ PD75106CW (Microprocessing Unit (MPU))

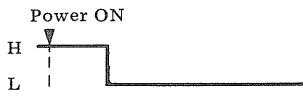Pin No.	Signal Name	In/Out	Function
1	—	I	Not used. Connected to GND.
2	AZCT	I	Playback azimuth control center detect switch is connected. Becomes "H" when the Playback Azimuth control on the Front Panel is set to the center position.
3	REM	I	Remote control receiver signal input.
4	RELP	I	Reel motor pulse input. Pulse train is input while take-up reel hub is rotating, i.e., tape is running.
5	LVR	I	Rch input for level meter. Input level is A/D-converted in this IC and the converted result is transferred to the Display Control IC (U601) via pin 13 (DDAT).
6	LVL	I	Lch input for level meter. The function is the same as above LVR (Rch).
7	KS1	I	Record/Monitor switch input. Record switch ON: 0 V Monitor switch ON: 1.6 V
8	KSO	I	Stop/Counter Search/Counter Reset switch input. Stop switch ON: 0 V Counter Search switch ON: 1.6 V Counter Reset switch ON: 3.3 V
9	MREM	I	System remote mode signal input. "L": "Tape 1" is selected, "H": "Tape 2" is selected.
10	HD $\bar{2}$ /3	I	Fixed to "H".
11	—	O	Not used.
12	DCLK	O	Clock for serial data DDAT at pin 13.
13	DDAT	O	Serial data for Display Control IC (U601), which includes display data and control information.
14	DEN	O	Enable signal to Display Control IC (U601). Active "H".
15 16 17	—	I	Not used. Connected to GND.
18	POFF	I	Power OFF signal input. Becomes "L" when power is turned OFF. 
19	LMUT	O	Line mute signal output. Active "L".
20	RMUT	O	Record mute signal output. Active "L". Record mute is released only in Record/Play mode.
21	BIAS	O	Bias ON/OFF signal output. "L": Bias ON.
22 23 24	—	O	Not used. (Open).
25	HPLY	O	Source signal output. Active "L".
26	HREC	O	Tape signal output. Active "L".

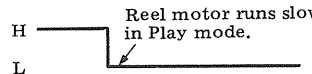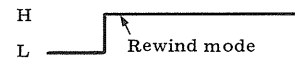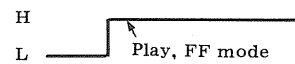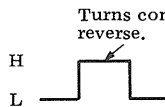Pin No.	Signal Name	In/Out	Function												
27	RMSP	O	Reel motor speed select signal output. Becomes "L" in play mode. 												
28	—	O	Not used.												
29	RMR	O	Reel motor drive control signal output. Becomes "H" in Rewind mode. 												
30	RMF	O	Reel motor drive control signal output. Becomes "H" in Play or Fast Forward mode. 												
31	NC	—	No connection.												
32	VDD	—	Supplied with +5 V.												
33	AZRD	O	Off center position indication signal of the Playback Azimuth control. Drives red LED in Rec./Play or Rec./Pause mode.												
34	AZGR	O	Center position indication signal of the Playback Azimuth control. Drives Green LED in Playback mode. <table border="1" data-bbox="1031 987 1429 1102"> <thead> <tr> <th>Mode</th> <th>Center</th> <th>Out of Center</th> </tr> </thead> <tbody> <tr> <td>Play</td> <td>Green</td> <td>—</td> </tr> <tr> <td>Rec./Play Rec./Pause</td> <td>Green</td> <td>Red</td> </tr> </tbody> </table>	Mode	Center	Out of Center	Play	Green	—	Rec./Play Rec./Pause	Green	Red			
Mode	Center	Out of Center													
Play	Green	—													
Rec./Play Rec./Pause	Green	Red													
35	ASMR	O	Control motor reverse drive signal output. Becomes "H" when turning the control motor reverse (in the direction of Play-Pause-Stop-FF/REW). 												
36	ASMF	O	Control motor forward drive signal output. Becomes "H" when turning the control motor forward (in the direction of FF/REW-Stop-Pause-Play). 												
37 38	TAP B TAP A	I	Tape type select signal input. <table border="1" data-bbox="1063 1533 1372 1659"> <thead> <tr> <th>Type</th> <th>TAP A</th> <th>TAP B</th> </tr> </thead> <tbody> <tr> <td>Type I</td> <td>H</td> <td>H</td> </tr> <tr> <td>Type II</td> <td>L</td> <td>H</td> </tr> <tr> <td>Type IV</td> <td>H/L</td> <td>L</td> </tr> </tbody> </table>	Type	TAP A	TAP B	Type I	H	H	Type II	L	H	Type IV	H/L	L
Type	TAP A	TAP B													
Type I	H	H													
Type II	L	H													
Type IV	H/L	L													
39 40	B/ \bar{C} DOLBY NR	I	Dolby NR mode select signal input. <table border="1" data-bbox="1047 1701 1396 1827"> <thead> <tr> <th>Mode</th> <th>DOLBY</th> <th>B/\bar{C}</th> </tr> </thead> <tbody> <tr> <td>Dolby NR OFF</td> <td>H</td> <td>H/L</td> </tr> <tr> <td>Dolby NR B</td> <td>L</td> <td>H</td> </tr> <tr> <td>Dolby NR C</td> <td>L</td> <td>L</td> </tr> </tbody> </table>	Mode	DOLBY	B/ \bar{C}	Dolby NR OFF	H	H/L	Dolby NR B	L	H	Dolby NR C	L	L
Mode	DOLBY	B/ \bar{C}													
Dolby NR OFF	H	H/L													
Dolby NR B	L	H													
Dolby NR C	L	L													
41	MPX	I	MPX filter switch signal input. "L": MPX Filter ON, "H"=OFF												

11. BLOCK DIAGRAMS

11.1. Amplifier Section

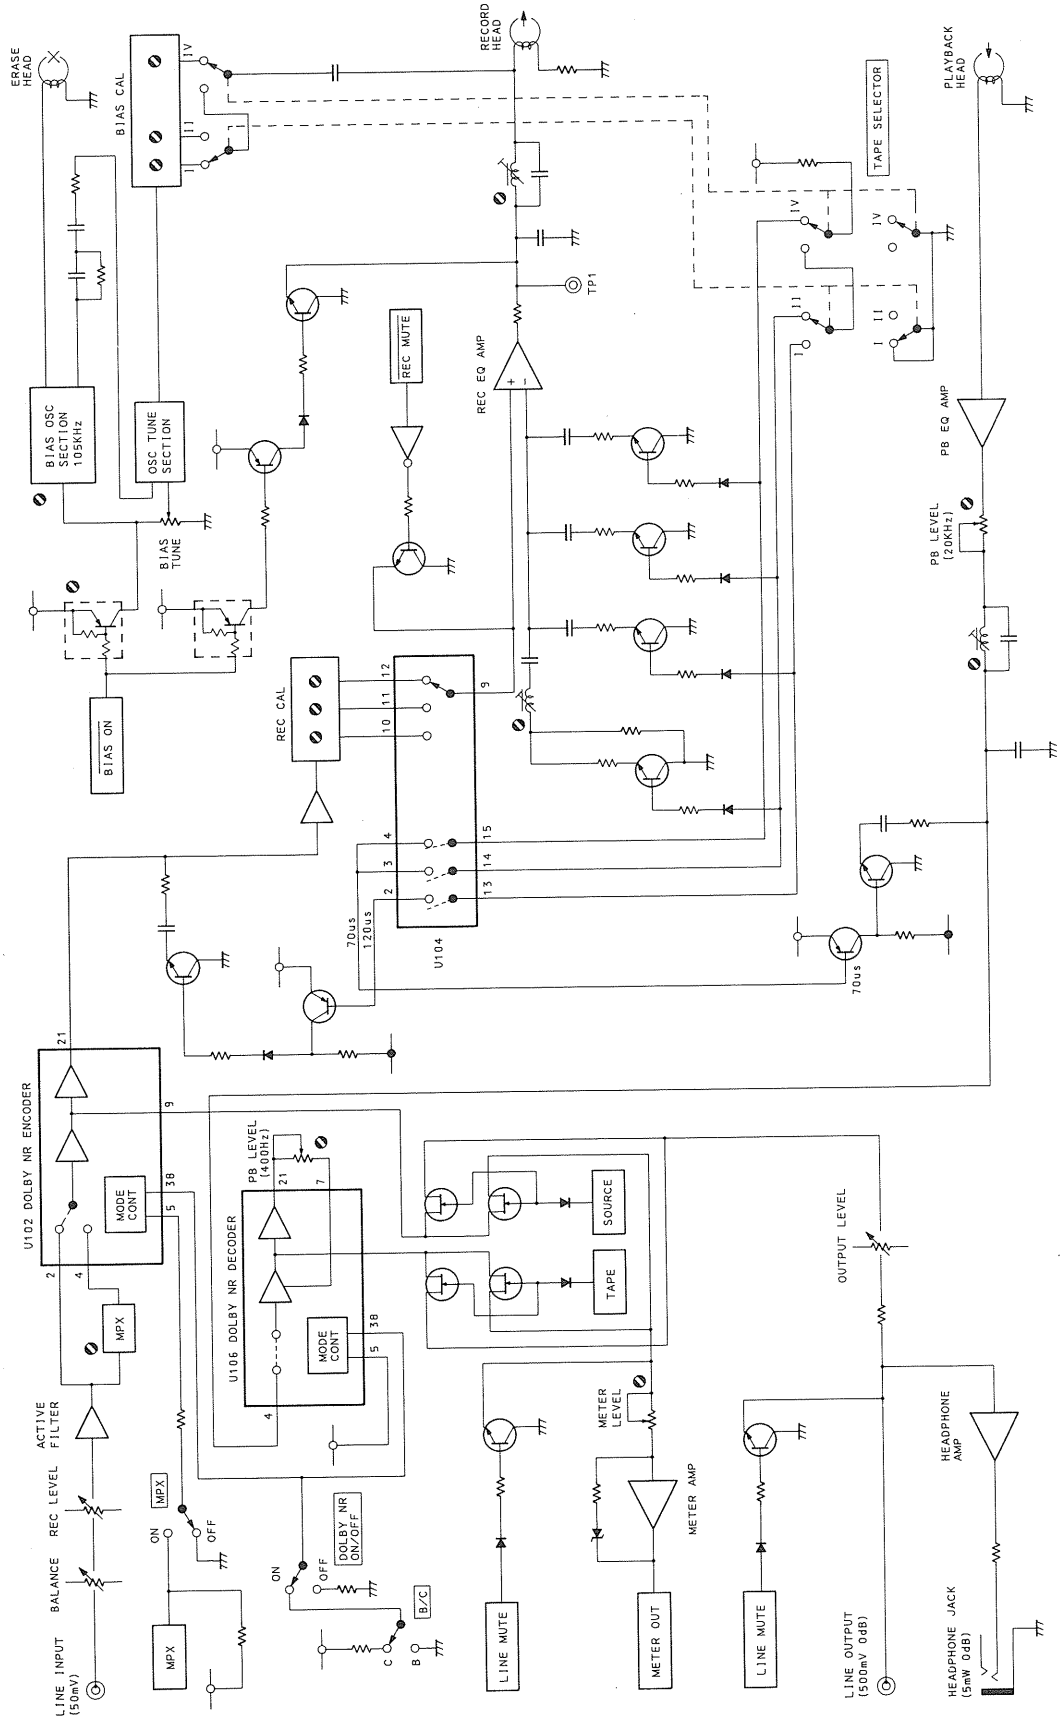


Fig. 11.1

11.2. Mechanism Control Section

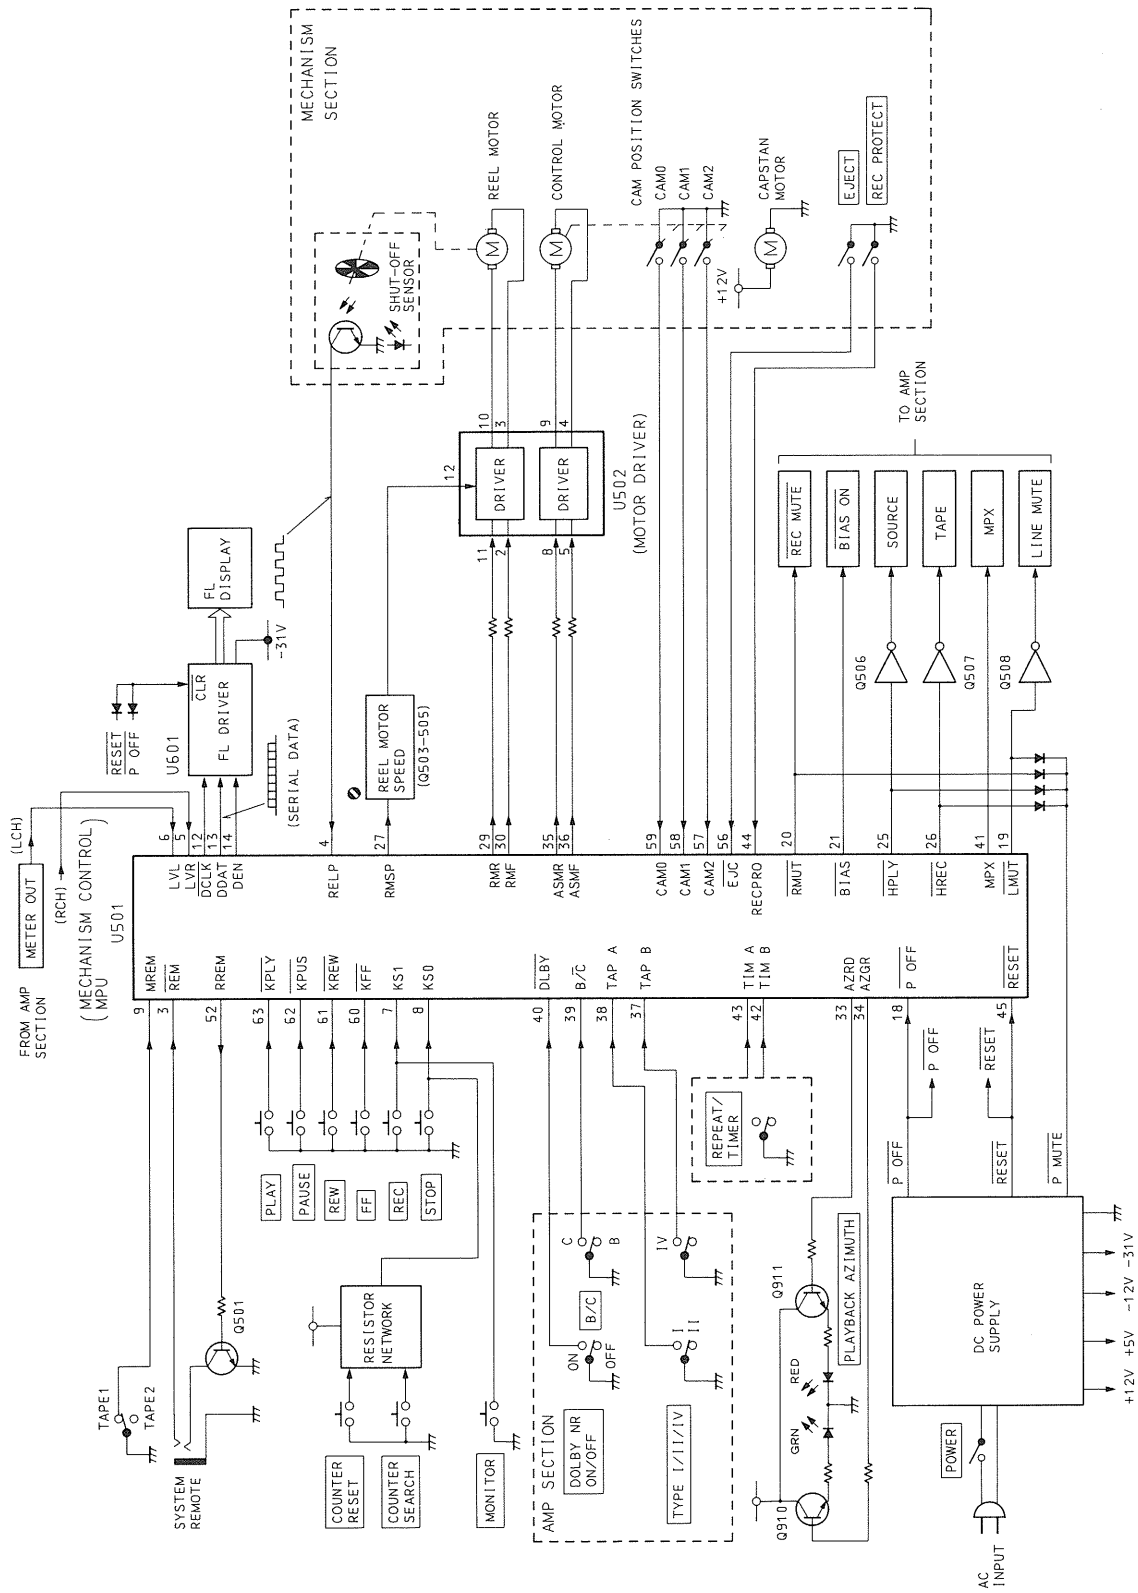


Fig. 11.2

12. TIMING CHARTS AND EQ. AMP. FREQUENCY RESPONSE

12.1. Timing Charts

(1) Overall Timing Chart

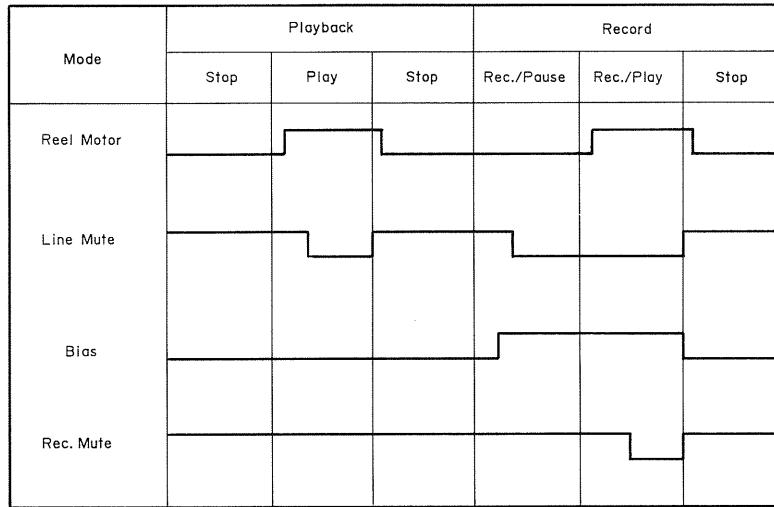


Fig. 12.1.1

(2) Mechanism Control Timing Chart

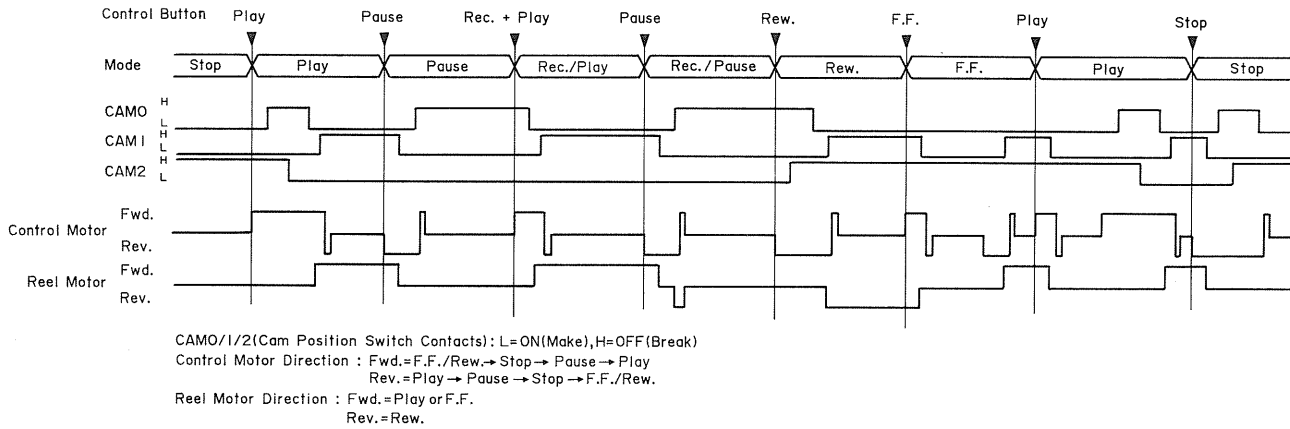


Fig. 12.1.2

12.2. Eq. Amp. Frequency Response
(1) Playback Frequency Response

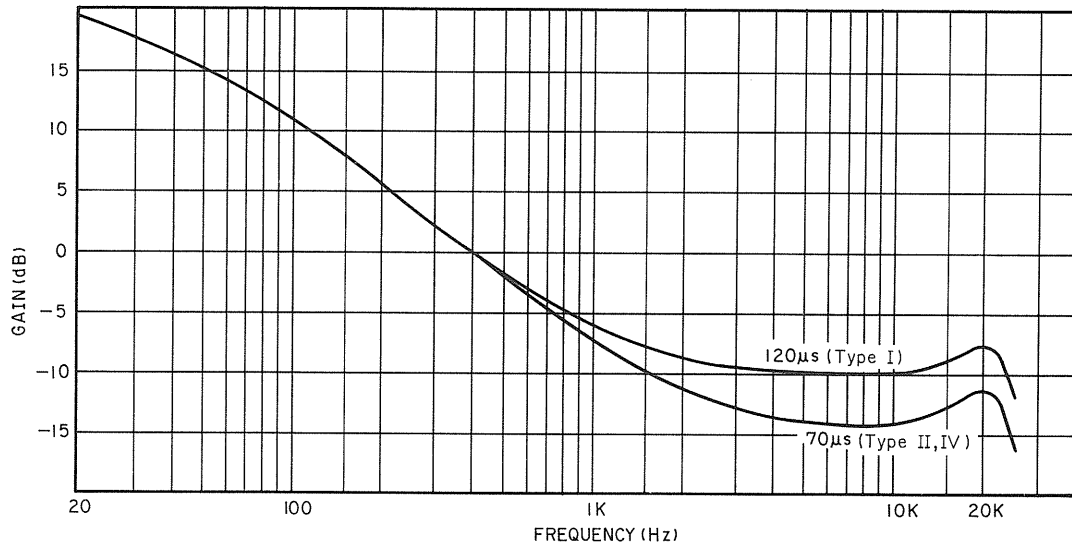


Fig. 12.2.1

(2) Record Current Frequency Response

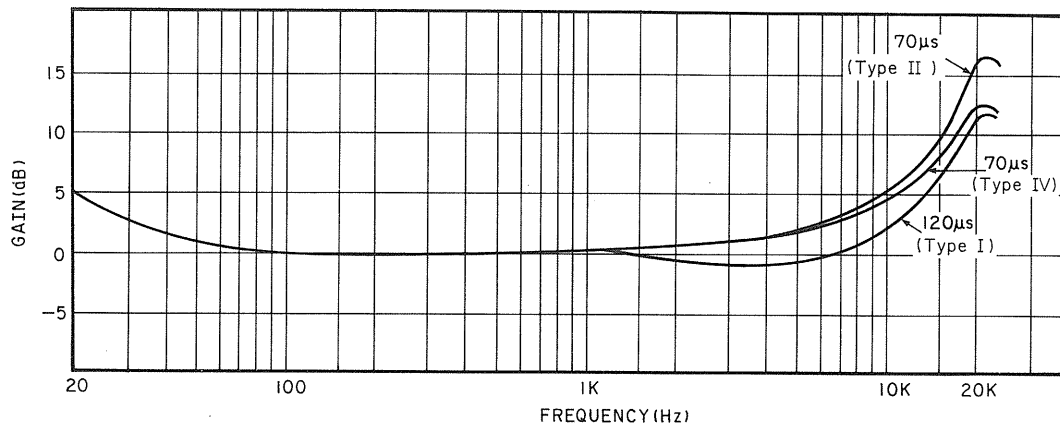


Fig. 12.2.2

13. SPECIFICATIONS

Track Configuration	4 tracks/2-channel stereo
Heads	3 (erase head x 1, record head x 1, playback head x 1)
Motors	
<Tape Transport>	DC servo motor (capstan drive) x 1 DC motor (reel drive) x 1
<Mechanism>	DC motor (cam drive) x 1
Wow and Flutter	Less than $\pm 0.06\%$ WTD Peak Less than 0.035% WTD RMS
Tape Speed	1-7/8 ips. (4.8 cm/sec.) $\pm 0.5\%$
Fast-Wind Time	Approx. 95 seconds (with C-60 cassette)
Frequency Response	20–21,000 Hz ± 3 dB (recording level –20 dB, Type I/II/IV)
Signal to Noise Ratio	
Dolby C-Type NR On	Better than 72 dB (400 Hz, 3% THD, IHF A-WTD RMS)
<70 μ s, Type IV>	
Dolby B-Type NR On	Better than 66 dB (400 Hz, 3% THD, IHF A-WTD RMS)
<70 μ s, Type IV>	
Total Harmonic Distortion	Less than 0.8% (400 Hz, 0 dB, Type I/IV) Less than 1.0% (400 Hz, 0 dB, Type II)
Channel Separation	Better than 37 dB (1 kHz, 0 dB)
Crosstalk	Better than 60 dB (1 kHz, 0 dB)
Erasure	Better than 60 dB (100 Hz, +10 dB)
Bias Frequency	105 kHz
Input (Line)	50 mV/40 k Ω
Output	
Line	0.5 V/2.2 k Ω (400 Hz, 0 dB, output level control at max.)
Headphones	5.0 mW/8 Ω (400 Hz, 0 dB, output level control at max.)
Power Source	120, 230, 240 V or 110–127/220–240 VAC, 50/60 Hz
Power Consumption	25 W max.
Dimensions*	430 (W) x 100 (H) x 320 (D) mm 16-15/16 (W) x 3-15/16 (H) x 12-5/8 (D) inches
Approximate Weight	5.4 kg/11 lbs. 14 oz.

*: Dimensions do not include protruding parts. Height is the panel height.

- Specifications and Design are subject to change for further improvement without notice.
- Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
- "DOLBY" and the double-D symbol \square are trademarks of Dolby Laboratories Licensing Corporation.

Service Manual

Cassette Deck 1

Nakamichi Corporation/Tokyo Office
Nakamichi America Corporation
Nakamichi Canada
Nakamichi Australia
Nakamichi GmbH

Shinjuku Daiichi Seimei Bldg., 2-7-1 Nishishinjuku, Shinjuku-ku, Tokyo 163 Phone: (03) 3342-4461 Telex: 2324721 (NAKAM)
19701 South Vermont Ave., Torrance, CA 90502 Phone: (213) 538-8150
276 South West, Marine Drive, Vancouver, B.C. V5X 2R4 Phone: (604) 324-7535
Level 2, 61A Dunning Ave., Rosebery, N.S.W. 2018 Phone: (02) 313-7071/7090
Praunheimer Landstraße 32, 6000 Frankfurt Main 90 Phone: (069) 768-2021 (Office), 2025 (Service)