


ONKYO® SERVICE MANUAL

Integrated Stereo Amplifier MODEL A-8850

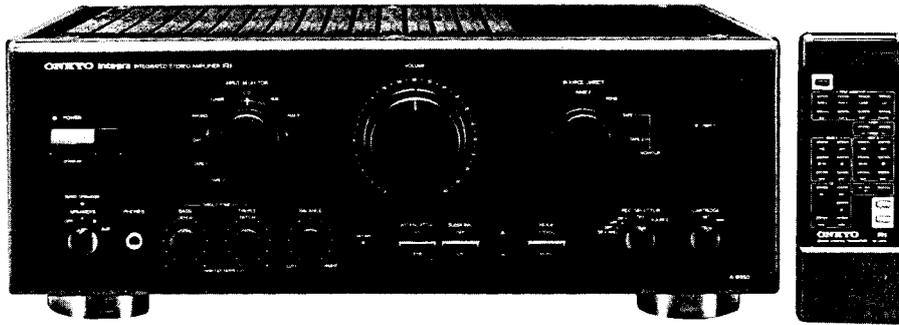

Black and silver models

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL. MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

| | |
|--|----|
| Specifications | 2 |
| Precautions | 2 |
| Adjustment procedures | 3 |
| IC block diagram | 4 |
| Block diagram | 7 |
| Chassis exploded view | 9 |
| Printed circuit board parts list | 12 |
| Printed circuit board view | 16 |
| Schematic diagram | 21 |
| Packing part list | 24 |
| Front panel facilities | 25 |
| System connections | 25 |

ONKYO
AUDIO COMPONENTS

SPECIFICATIONS

| | | |
|--------------------------------|---|--------------------------------------|
| Power Output: | 80 watts per channel, min. RMS, at 8 ohms, both channels driven from 20 Hz to 20 kHz, with no more than 0.008% Total harmonic distortion. | |
| Dynamic Power: | 210 watts at 2 ohms, 167 watts at 4 ohms 115 watts at 8 ohms | |
| Total Harmonic Distortion | 0.008% at rated power 0.008% at 1 watt output | |
| Intermodulation Distortion: | 0.005% at rated power | |
| Damping Factor: | 150 at 8 ohms (1 kHz) | |
| Input Sensitivity/Impedance: | Phono (MM): | 2.5 mV/50 kohms |
| | Phono (MC): | 160 μ V/130 ohms |
| | CD: | 150 mV/30 kohms |
| | TUNER: | 150 mV/30 kohms |
| | Tape Play: | 150 mV/30 kohms |
| Output Level/Impedance: | Tape Rec: | 150 mV/1.0 kohms (Phono) |
| Phono Overload: | Phono (MM): | 180 mV RMS, at 1 kHz, 0.015% THD. |
| Tone Control (Vol -20 dB): | BASS: | ± 8 dB at 100 Hz |
| | TREBLE: | ± 8 dB at 10 kHz |
| High Cut: | 6 kHz (6 dB/Octave) (TREBLE min.) | |
| Frequency Response: | CD, Tuner: | 2 Hz -50 kHz (+0, -1 dB) |
| RIAA Deviation: | Phono (MM): | ± 0.3 dB, 20 Hz -20 kHz |
| Subsonic Filter: | 20Hz (-3dB, 6dB/Oct) | |
| Signal to Noise Ratio (IHF-A): | Phono (MM): | 93 dB (5.0 mV input) |
| | Phono (MC): | 74 dB (0.5 mV input) |
| | CD (DIRECT): | 107 dB |
| Attenuator: | -20 dB | |
| Muting: | - ∞ | |
| Power Supply: | European models: | AC230V, 50 Hz |
| Dimensions (W x H x D): | 455 x 170 x 420 mm 17-15/16" x 6-11/16" x 16-9/16" | |
| Weight: | 15.5 kg | |

Specifications and features are subject to change without notice.

PRECAUTIONS

1. Replacing the fuses

For continued protection against risk fire, replace only with same type and same rating fuse.

| CIRCUIT NO. | PART NO. | DESCRIPTION, |
|-------------|----------|----------------------------|
| F901 | 252075 | 2.5A-SE-EAK, Primary fuse |
| F902 | 252076 | 3.15A-SE-EAK, Primary fuse |

ADJUSTMENT PROCEDURES

Adjustments and Checking the Protection Circuitry

1. Preparations

- 1) Place the unit on the workbench. (There should be about 15 mm of space between the base plate of the unit and the work surface.)
- 2) Set up the unit as follows.
 - (1) No load
 - (2) No signal
 - (3) Volume turned all the way down
 - (4) Speaker switch OFF
 - (5) Power switch OFF

Note) Check the following points before making adjustments

- (1) The power switch should be OFF.
- (2) The interior of the unit should not be warm.

2. Idling current adjustment

- 1) Turn the power switch ON and allow the unit to warm up for about 10 minutes.
 - (1) Adjust R535 (R536) so that the voltage at test point VCT-IID on the NAAF-4209 circuit board is $15\text{mV} \pm 5\text{mV}$.
- Note) Semi-fixed resistors enclosed in parentheses () are for the right channel.

3. Check of operation of protection circuitry


- 1) Check of operation of protection relay
 - (1) Confirm that the relay turns ON approximately 5 seconds after the power switch is turned ON.
 - (2) The SERVO indicator LED should light at the same time.
 - (3) The relay should turn OFF approximately 0.5 seconds after the power switch is turned OFF.
- 2) Check of DC detection and servo circuitry operation
 - (1) Turn the power on with no load.
 - (2) After the speaker relay turns ON, apply DC+200mV to the CD input terminals. Confirm that the relay turns OFF.
 - (3) Confirm that operation is the same as (2) above when an input of DC-200mV is applied.

Note) Under no circumstances connect a load or short the speaker terminals when performing the above test.

3) Signal input from the circuit illustrated below with no load.


- (1) Confirm that the speaker relay does not turn OFF even when a 2 ohm load is connected when a peak value of 30Vp is output.
- (2) Next, confirm that when a 1 ohm load is connected the speaker relay switches OFF and ON a couple of times and then stays OFF.

Note) The period before that relay stays OFF should not last for more than 1 minute.
Relay OFF status can be canceled by switching the power OFF.

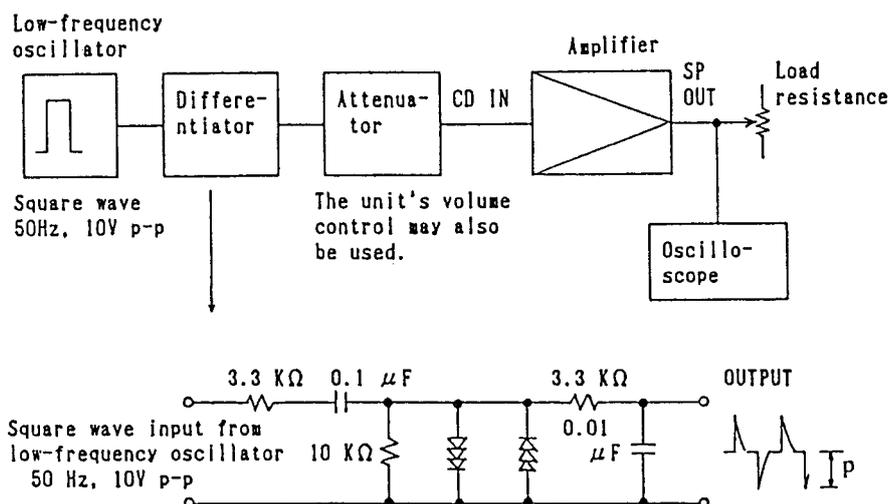

IC BLOCK DIAGRAM


TMP47C440AN (Microprocessor)

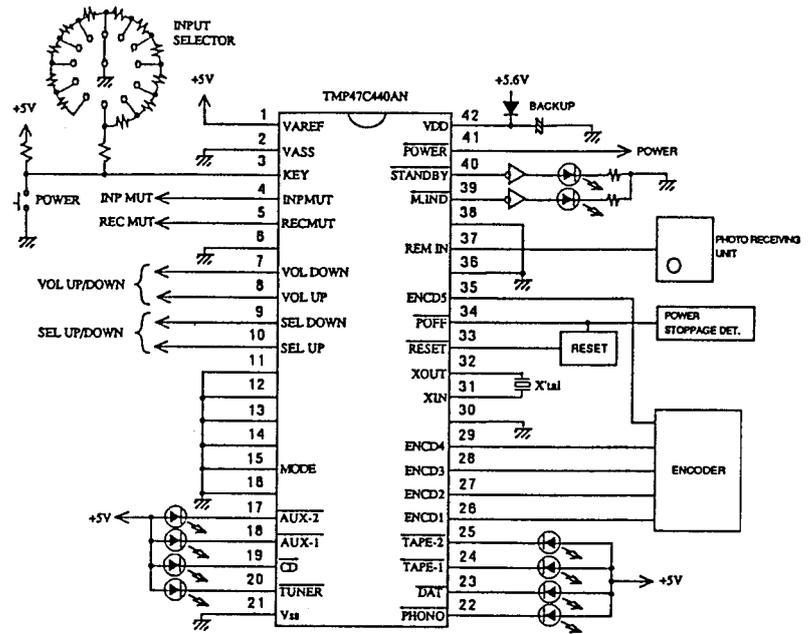

| Pin No. | Symbol | Description | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------|-----------|--|----------------|-----------|-----------|-----------|-----------|---|---|---|-----------|---|---|---|-----------|---|---|---|-----------|---|---|---|-----------------|---|---|---|
| 1 | VAREF | Analog reference voltage for A/D conversion | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | VASS | Analog reference GND for A/D conversion | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | KEY | Input Selector, Power key input terminal. To read Input Selector and Power key by means of A/D conversion | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | INPUT | Muting output terminal for Main amplifier input. Active "H" | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | RECMUT | Muting output terminal for Rec. output. Active "H" To be output when switching Input Selector. To be output continuously in case of Input Selector TAPE-1, TAPE-2, DAT, and DIGITAL-4. | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | PLAYER | Control output terminal for PLAYER. "L" will be output for 200ms if input K64 code for remote control and set Input Selector for PHONO. | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | VOL DOWN | UP/DOWN output terminal for volume. Active "H" | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | VOL UP | In case of UP (DOWN), VOL UP output will be "H" ("L"), while VOL DOWN output will be "L" ("H"). When not moving, both outputs shall be "H" (Brake). | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | SEL DOWN | UP/DOWN output terminal for Input Selector. Active "H" In case of UP (DOWN), SEL UP output will be "H" ("L"), While SEL DOWN output will be "L" ("H"). | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | SEL UP | When not moving, both outputs shall be "H" (Brake). | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 | S1 | Output terminal for switching digital signal. Switch as follows through the position of Input Selector. | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | S2 | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | S3 | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | <table border="1"> <thead> <tr> <th>Input selector</th> <th>Output S3</th> <th>Output S2</th> <th>Output S1</th> </tr> </thead> <tbody> <tr> <td>DIGITAL-1</td> <td>L</td> <td>L</td> <td>L</td> </tr> <tr> <td>DIGITAL-2</td> <td>L</td> <td>L</td> <td>H</td> </tr> <tr> <td>DIGITAL-3</td> <td>L</td> <td>H</td> <td>L</td> </tr> <tr> <td>DIGITAL-4</td> <td>L</td> <td>H</td> <td>H</td> </tr> <tr> <td>Others (Analog)</td> <td>H</td> <td>H</td> <td>H</td> </tr> </tbody> </table> | Input selector | Output S3 | Output S2 | Output S1 | DIGITAL-1 | L | L | L | DIGITAL-2 | L | L | H | DIGITAL-3 | L | H | L | DIGITAL-4 | L | H | H | Others (Analog) | H | H | H |
| Input selector | Output S3 | Output S2 | Output S1 | | | | | | | | | | | | | | | | | | | | | | | |
| DIGITAL-1 | L | L | L | | | | | | | | | | | | | | | | | | | | | | | |
| DIGITAL-2 | L | L | H | | | | | | | | | | | | | | | | | | | | | | | |
| DIGITAL-3 | L | H | L | | | | | | | | | | | | | | | | | | | | | | | |
| DIGITAL-4 | L | H | H | | | | | | | | | | | | | | | | | | | | | | | |
| Others (Analog) | H | H | H | | | | | | | | | | | | | | | | | | | | | | | |
| 14 | EXP/JPN | Input terminal for remote control initialization when energizing. | | | | | | | | | | | | | | | | | | | | | | | | |

| Pin No. | Symbol | Description | | | | | | | | | |
|---------|----------------|--|------|-------------|-------------|-------|-------|-------|-------|-------|-------|
| 15 | DIG-4/MODE | Output terminal for Input Selector display. Output of the position currently selected will be "L" (lighted). DIG-4/MODE output will be input terminal MODE for initialization of operation switch when energizing. Output DIG-1/AUX-1, DIG-2/AUX-2 will be switched by initializing MODE into; | | | | | | | | | |
| 16 | DIG-3 | | | | | | | | | | |
| 17 | DIG-2/AUX-2 | | | | | | | | | | |
| 18 | DIG-1/AUX-1 | | | | | | | | | | |
| 19 | CD | | | | | | | | | | |
| 20 | TUNER | <table border="1"> <tr> <td>MODE</td> <td>DIG-1/AUX-1</td> <td>DIG-2/AUX-2</td> </tr> <tr> <td>L (0)</td> <td>AUX-1</td> <td>AUX-2</td> </tr> <tr> <td>H (1)</td> <td>DIG-1</td> <td>DIG-2</td> </tr> </table> | MODE | DIG-1/AUX-1 | DIG-2/AUX-2 | L (0) | AUX-1 | AUX-2 | H (1) | DIG-1 | DIG-2 |
| MODE | DIG-1/AUX-1 | DIG-2/AUX-2 | | | | | | | | | |
| L (0) | AUX-1 | AUX-2 | | | | | | | | | |
| H (1) | DIG-1 | DIG-2 | | | | | | | | | |
| 21 | VSS | GND terminal | | | | | | | | | |
| 22 | PHONO | Output terminal for Input Selector display. The output of the position currently selected will be "L (lighted). | | | | | | | | | |
| 23 | DAT | | | | | | | | | | |
| 24 | TAPE-1 | | | | | | | | | | |
| 25 | TAPE-2 | | | | | | | | | | |
| 26 | ENCD1 | Input terminal for detecting position of rotary sw of input Selector. To be connected with Encoder output for position detecting of Rotary sw. | | | | | | | | | |
| 27 | ENCD2 | | | | | | | | | | |
| 28 | ENCD3 | | | | | | | | | | |
| 29 | ENCD4 | | | | | | | | | | |
| 30 | TEST | To be connected with GND. | | | | | | | | | |
| 31 | XIN | Terminal for connecting with ceramic oscillator (4 MHz) | | | | | | | | | |
| 32 | XOUT | | | | | | | | | | |
| 33 | RESET | Input terminal for reset signal. Active "L" | | | | | | | | | |
| 34 | POFF | Input terminal for detecting power suspension. Take a countermeasure as soon as possible against power failure when turned into "L". Set at HOLD mode. | | | | | | | | | |
| 35 | ENCD5 | Input terminal for detecting Rotary sw position of Input Selector. To be connected with Encoder output for position detecting of Rotary sw. | | | | | | | | | |
| 36 | SYS OUT/SYS EN | Output terminal for System code. Active "L" to be turned into SYS EN for initialization input when energizing. | | | | | | | | | |
| 37 | REM IN | Input terminal for remote control signal. Active "L" To be connected with output of photoreceivin unit. | | | | | | | | | |
| 38 | SYS IN | Input terminal for System code. Active "H". | | | | | | | | | |
| 39 | M. IND | Output terminal for Muting display. Lighted in case of "L" To be set "L" when Muting of remote control is ON. | | | | | | | | | |
| 40 | STANBY | Output terminal for Standby display. Lighted incase of "L" To be turned into "L" when Power is OFF. Except the case of power susupension, the level inverted of Power output is always output. | | | | | | | | | |
| 41 | POWER | Output terminal for Power control. "L" When Power is ON | | | | | | | | | |
| 42 | VDD | Power (+5V) Conntecting terminal. | | | | | | | | | |


LB1638 (Motor drive)

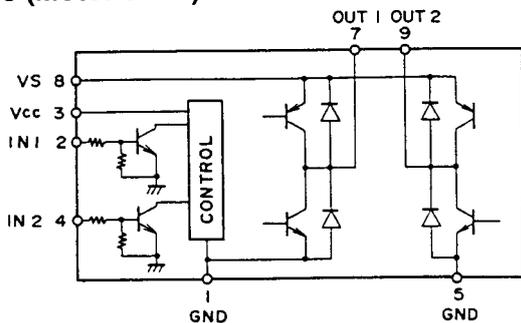

Tauth Table


| IN 1 | IN 2 | OUT 1 | OUT 2 | モード |
|------|------|-------|-------|---------|
| H | L | H | L | NORMAL |
| L | H | L | H | REVERSE |
| H | H | L | L | BRAKE |
| L | L | OFF | OFF | WAIT |

TA7291S (Motor drive)

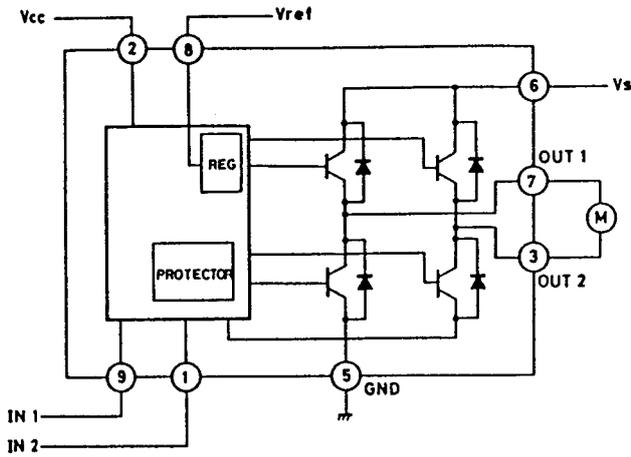


| INPUT | | OUTPUT | | MODE |
|-------|------|--------|-------|--------|
| IN 1 | IN 2 | OUT 1 | OUT 2 | |
| 0 | 0 | ∞ | ∞ | STOP |
| 1 | 0 | H | L | CW/CCW |
| 0 | 1 | L | H | CCW/CW |
| 1 | 1 | L | L | BRAKE |


M51943BSL (System reset)

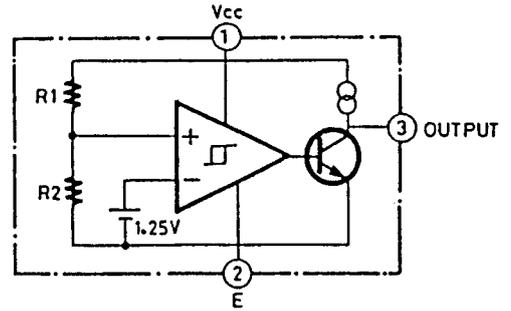


NJM5532DD (OP Amp)
NJM4560DX

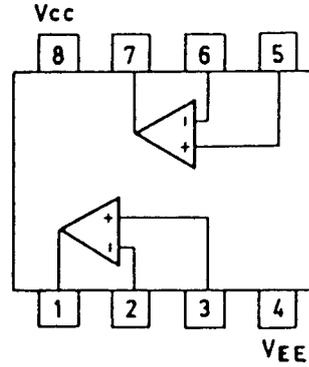


TA7317P (Protective circuit)

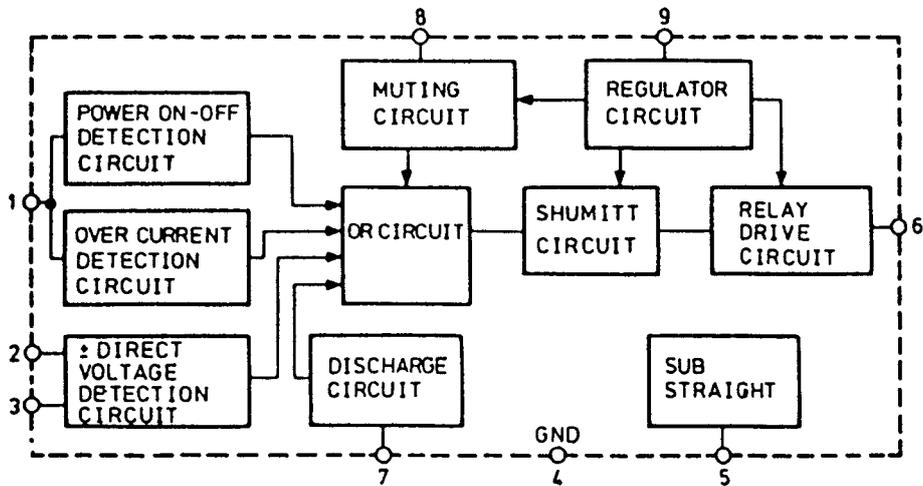

BLOCK DIAGRAM

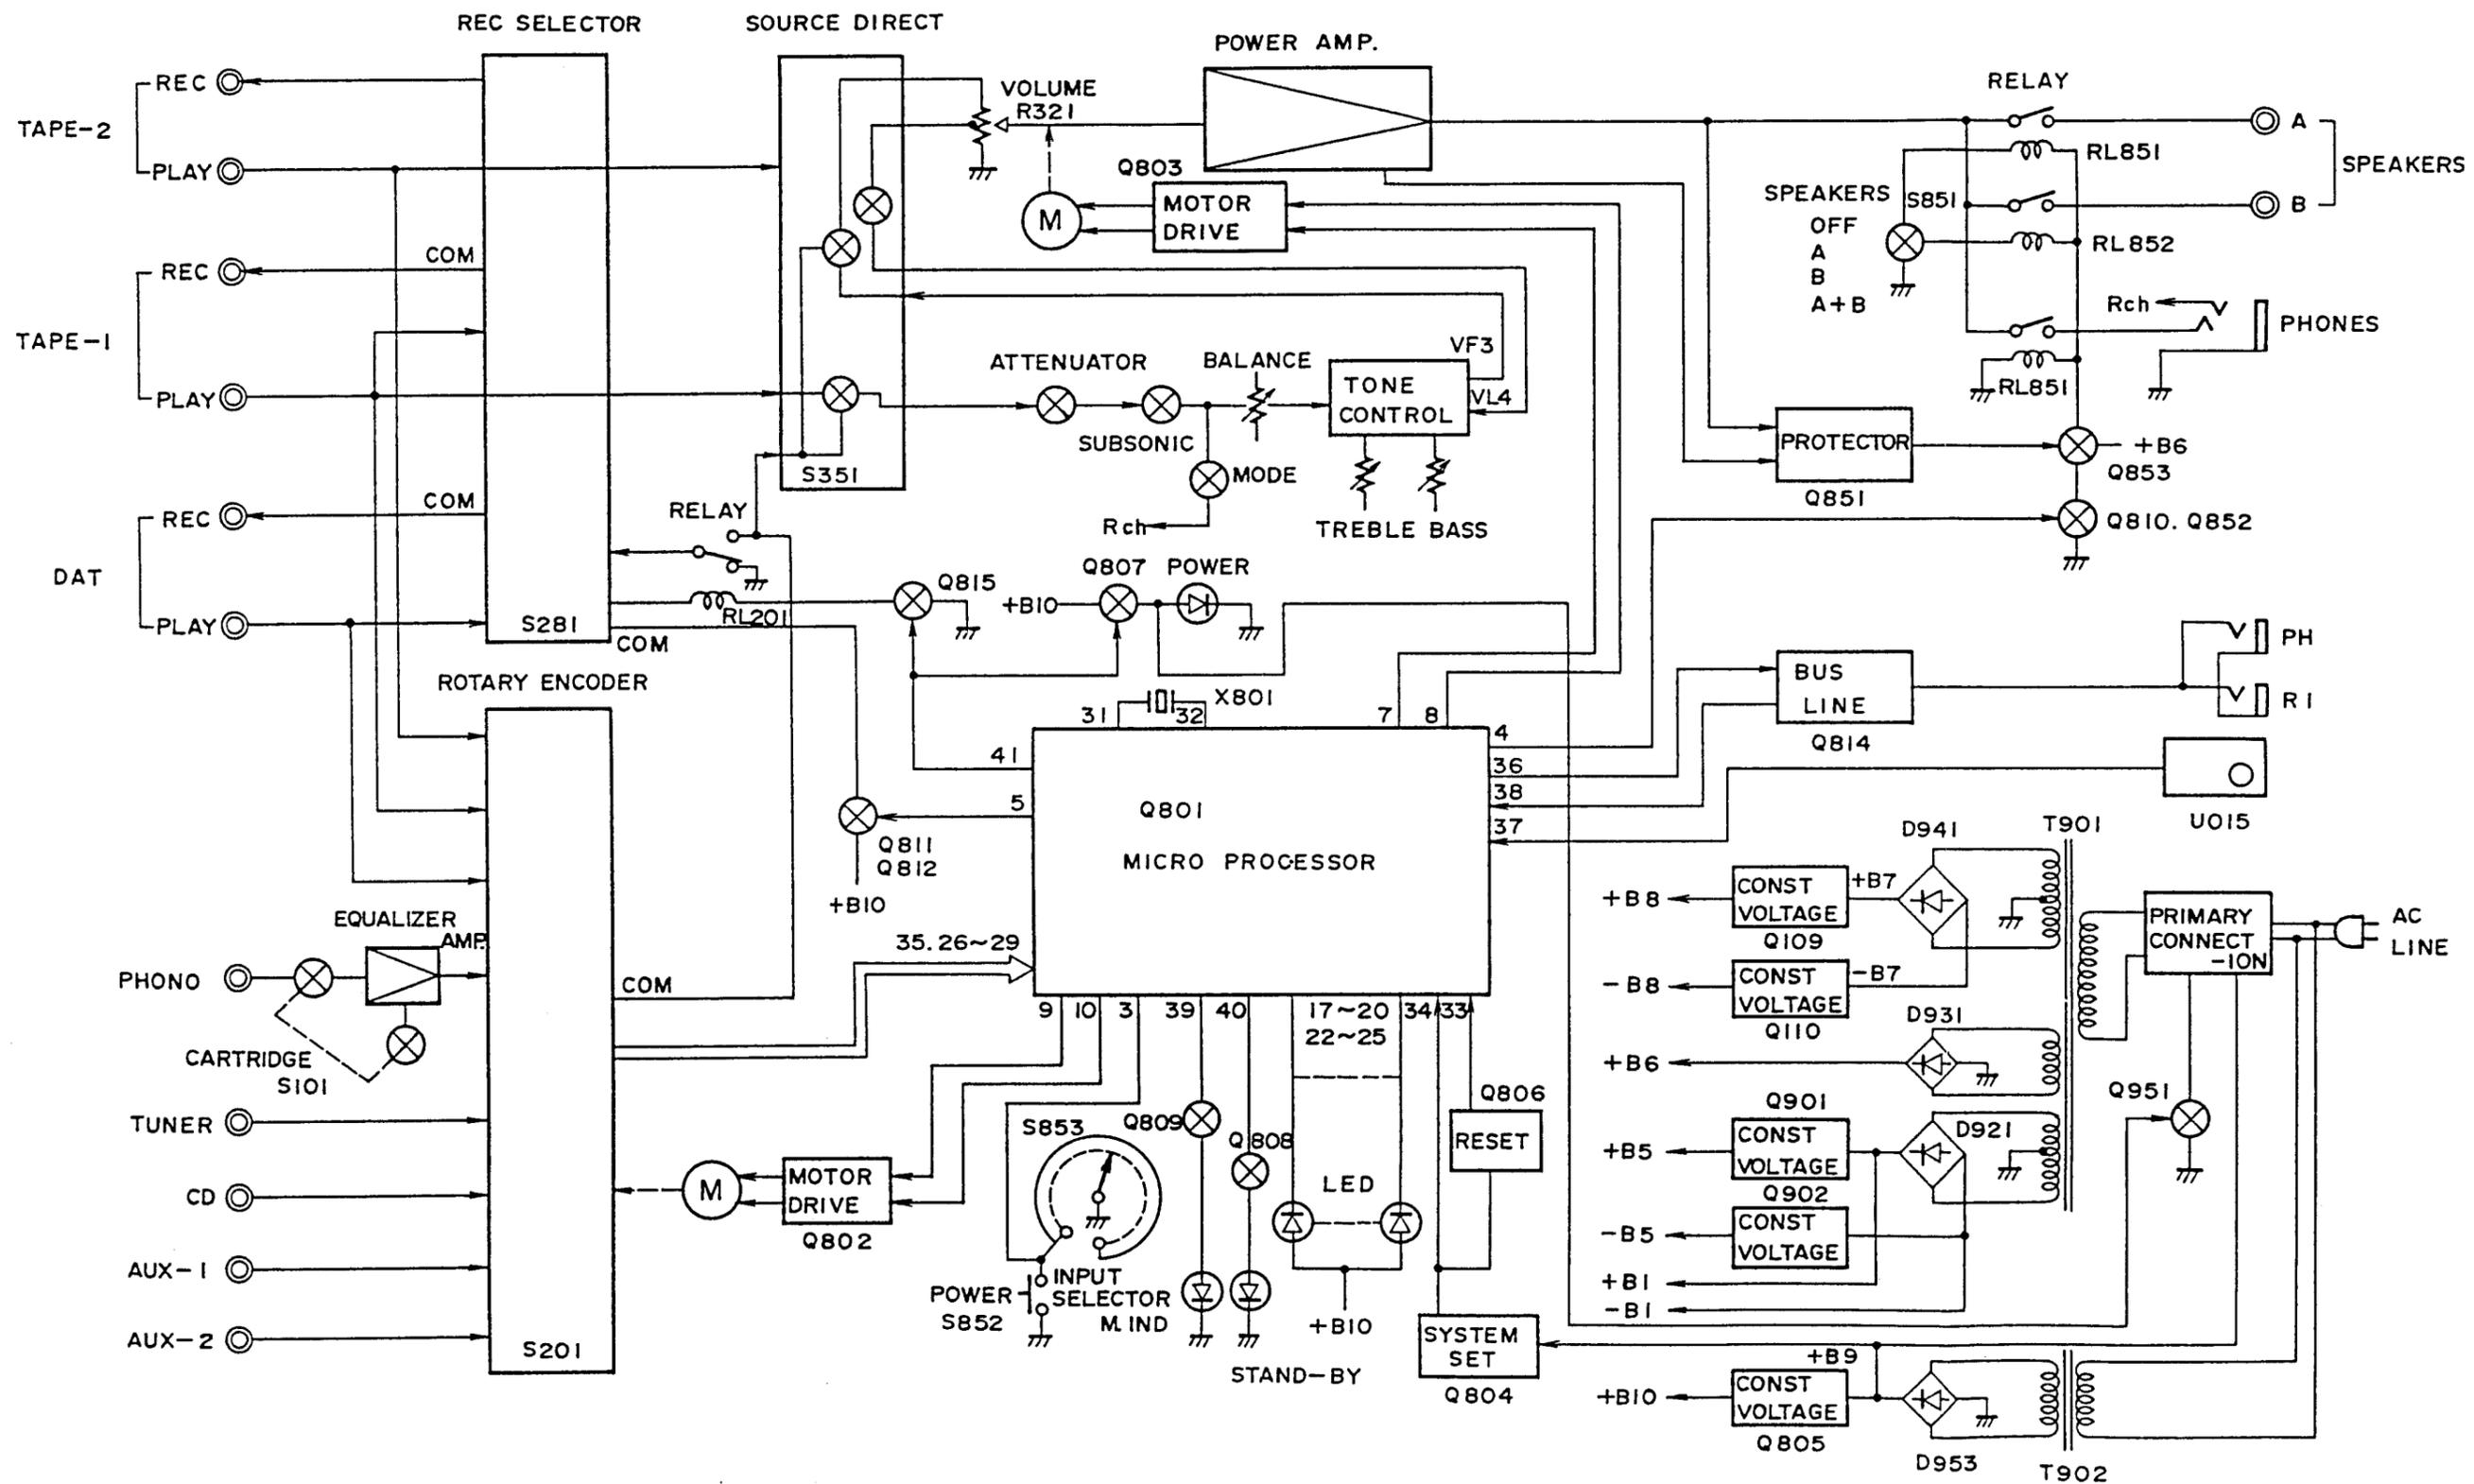

CHASSIS-EXPLODED VIEW

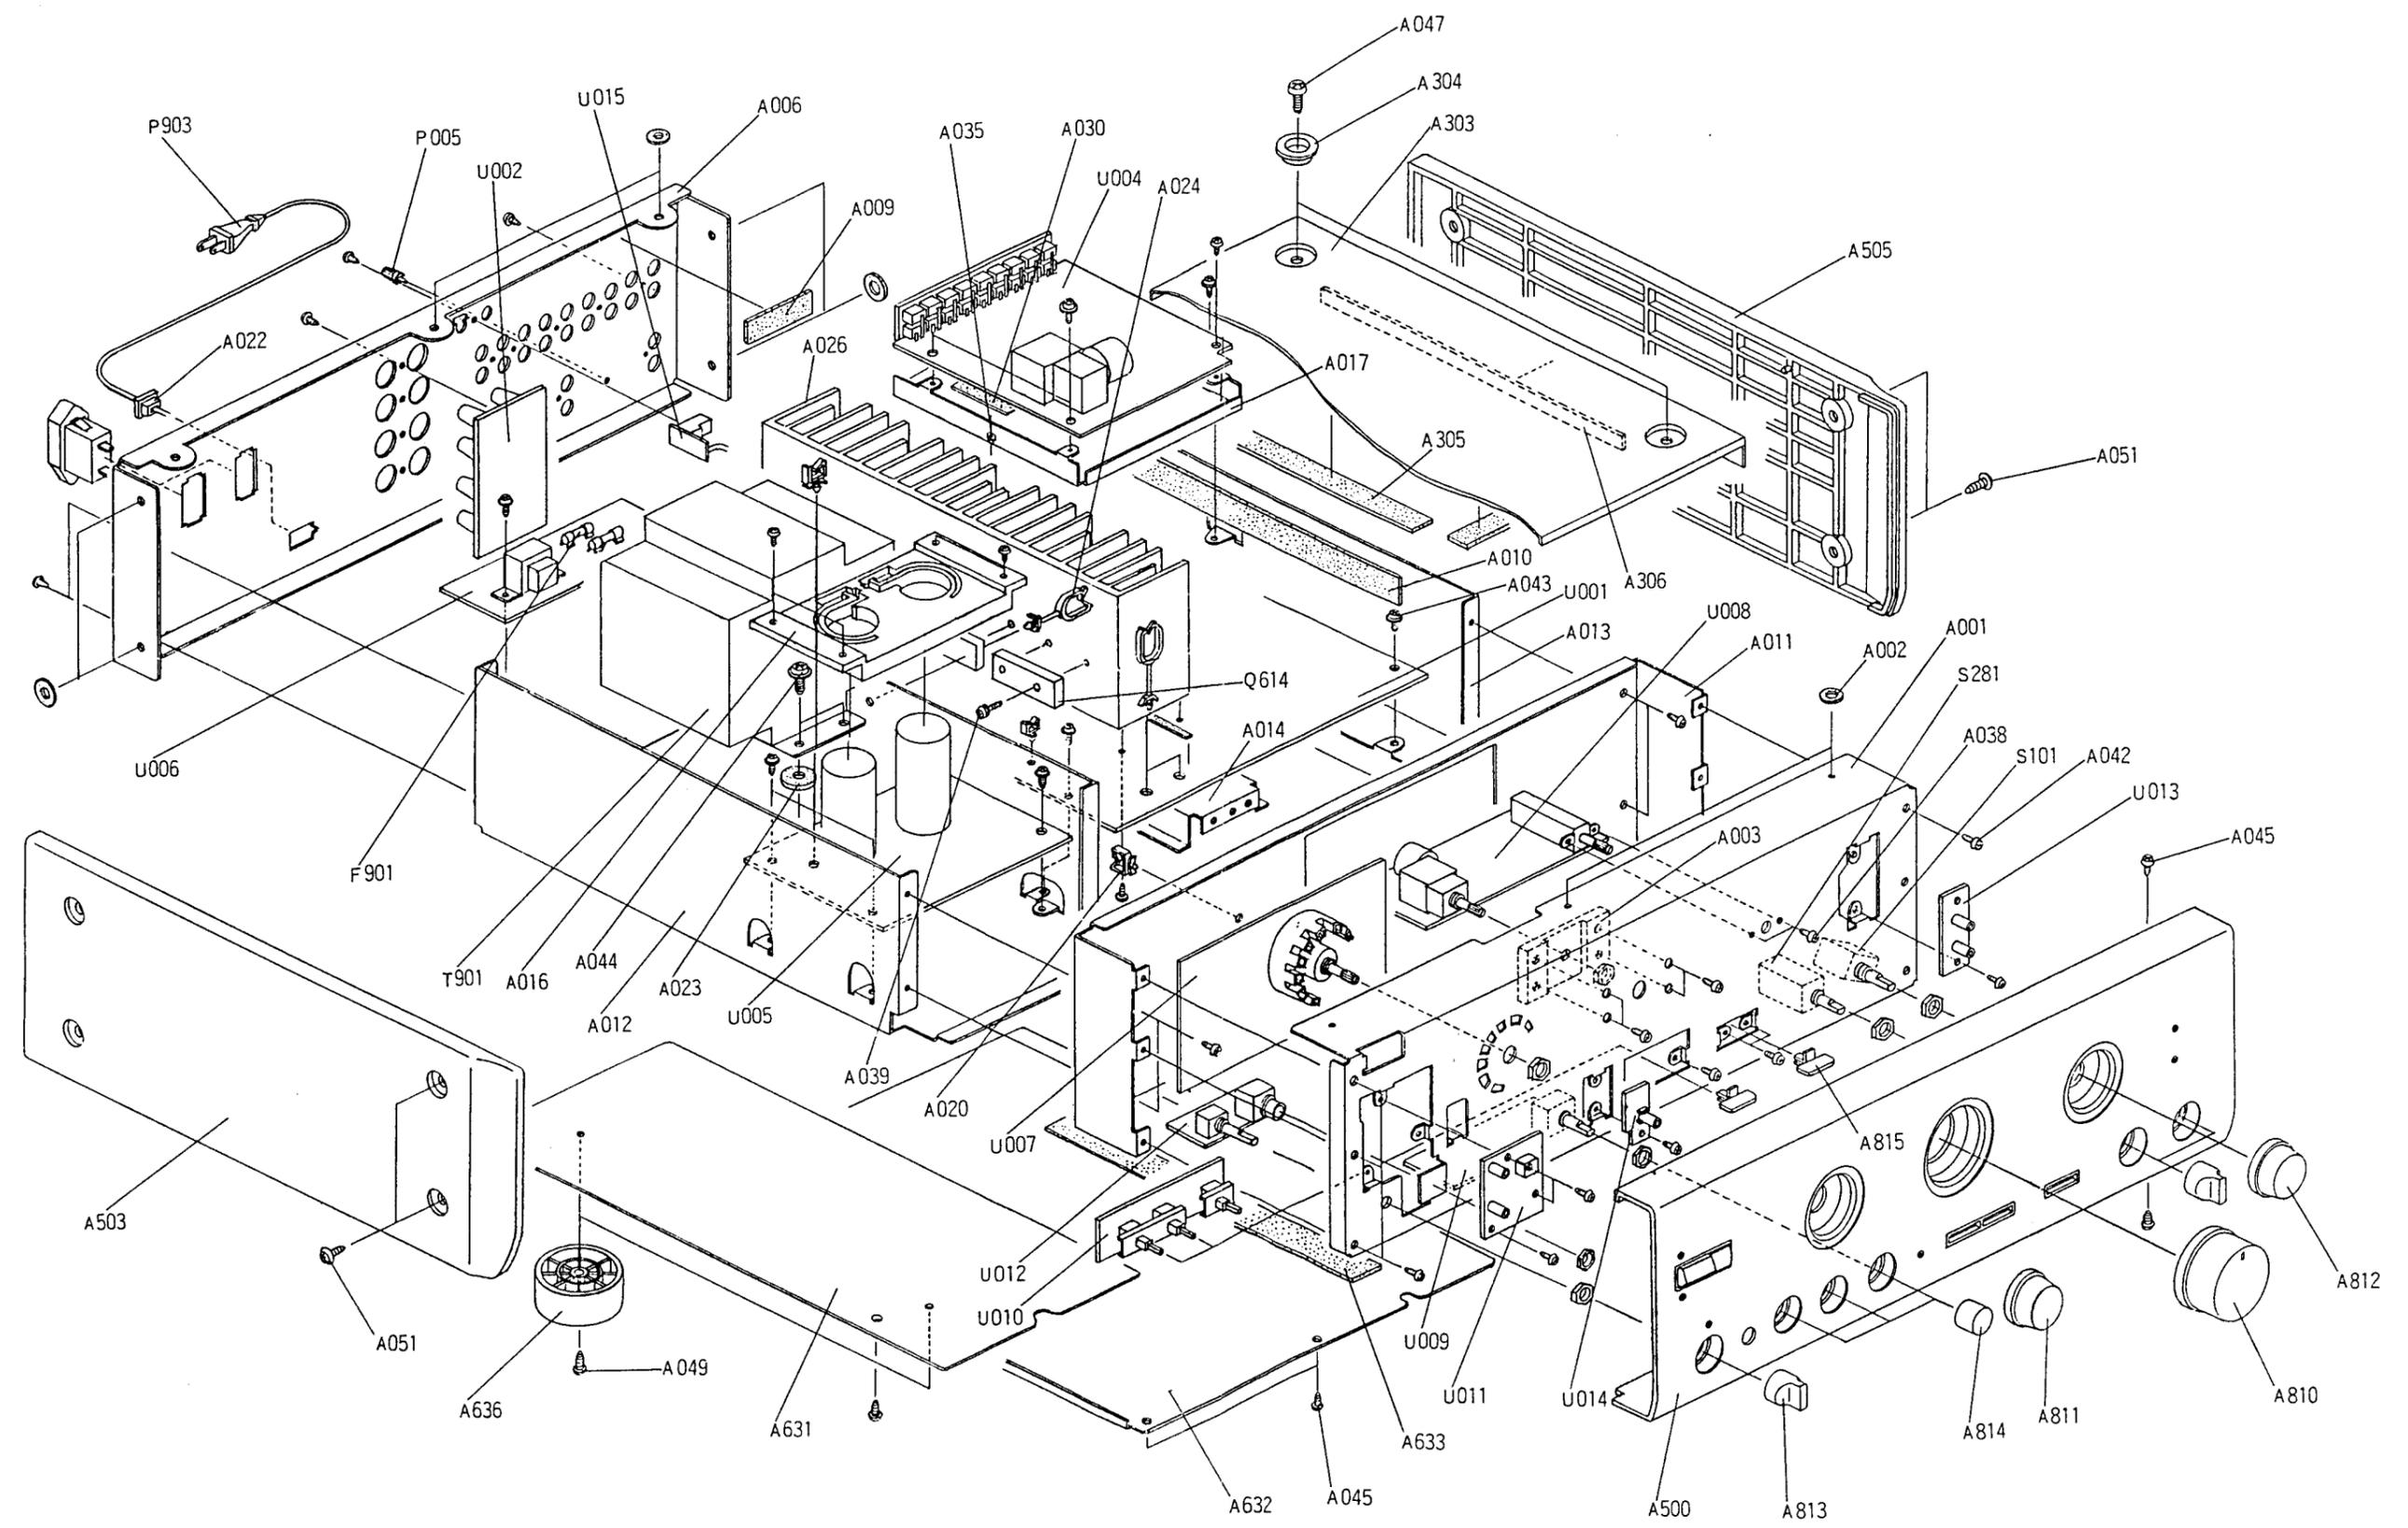

CHASSIS EXPLODED VIEW PARTS LIST

| REF. NO. | PART NO. | DESCRIPTION, | REF. NO. | PART NO. | DESCRIPTION, |
|----------|-------------|------------------------------|--------------|-------------|--------------------------------|
| A001 | 27110588-1C | FRONT BRACKET | A811 | 28324407 | KNOB (SEL) [BLK] |
| A002 | 27270212 | SPACER | A811 | 28324409 | KNOB (SEL) [SIL] |
| A006 | 27121483A | BACK PANEL | A812 | 28324408 | KNOB (D) [BLK] |
| A009 | 28140859 | 60 × 20 × 1.5T, CUSHION | A812 | 28324410 | KNOB (D) [SIL] |
| A010 | 28140695 | 25 × 240 × 1.5T, CUSHION | A813 | 28324086 | KNOB (SP) [BLK] |
| A011 | 27130622A | BRACKET (SHIELD) | A813 | 28324416 | KNOB (SP) [SIL] |
| A012 | 27130623 | BRACKET (L) | A814 | 28324411 | KNOB (TONE) [BLK] |
| A013 | 27130624 | BRACKET (R) | A814 | 28324412 | KNOB (TONE) [SIL] |
| A014 | 27130656A | BRACKET (C) | A815 | 28324088A | KNOB (PUSH) [BLK] |
| A016 | 27190846 | HOLDER (CAPACITOR) | A815 | 28324417 | KNOB (PUSH) [SIL] |
| A017 | 27130627 | BRACKET (EQ) | Q611, Q612 | 2201793 OR | 2SA1493-O OR |
| A020 | 27300833 | WS-2NS, CRAMP | | 2201796 OR | 2SA1493-P OR |
| A022 | 27300750 | #2271, BUSHING (AC CORD) | | 2201794 | 2SA1493-Y, TRANSISTOR |
| A023 | 27270213 | SPACER (PT) | Q613, Q614 | 2201803 OR | 2SC3857-O OR |
| A024 | 27301394 | HL-18-0, CRAMP | | 2201806 OR | 2SC3857-P OR |
| A026 | 27160284 | RADIATION | | 2201804 | 2SC3857-Y, TRANSISTOR |
| A030 | 28140808 | 50 × 50 × 3T, CUSHION | △ T901 | 2300715 | NPT-1118P, POWER |
| A035 | 800529 | BUSHING (PC) | | | TRANSFORMER |
| A038 | 82143006 | 3P+6FN(BC), PAN-HEAD SCREW | S101 | 25030348 | NRSF-102-20BU, SWITCH |
| A039 | 801433 | 3SMS8WSW+14B(BC), SPECIAL | | | OPERATION SECTION |
| | | TAP-TIGHT SCREW | S281 | 25030349 | NRSF-104-20BU, SWITCH |
| A042 | 834430088 | 3TTS+8B(BC), TAP-TIGHT SCREW | | | OPERATION SECTION |
| A043 | 831130088 | 3TTW+8B, TAP-TIGHT SCREW | P005 | 25060044 | TERMINAL (GROUND) |
| A044 | 830440109 | 4TTC+10C(BC), TAP-TIGHT | △ P901, P902 | 25050337 | NSCT-2P164, AC SOCKET |
| | | SCREW | △ P903 | 253148 OR | AS-CEE OR |
| A045 | 801230 | 3STS+8BQ(BC), TAP-TIGHT | | 253150 | AS-CEE, POWER SUPPLY CABLE |
| | | SCREW | | | |
| A047 | 838440089 | 4TTB+8C(BC), TAP-TIGHT SCREW | △ (F901 | 252075 | 2.5A-SE-EAK, FUSE) |
| A049 | 831430088 | 3TTW+8B(BC), TAP-TIGHT SCREW | △ F902 | 252076 | 3.15A-SE-EAK, FUSE |
| A051 | 837440169 | 4TTT+16C(BC), TAP-TIGHT | U001 | 1A299509-2A | NAAF-4209-2A, MAIN CIRCUIT PC |
| | | SCREW | | | BOARD ASS'Y |
| A303 | 28184464 | TOP COVER | U002 | 1A299510-2A | NAETC-4210-2A, SPEAKER |
| A304 | 27265155A | COSMETIC RING (COVER) | | | TERMINAL PC BOARD ASS'Y |
| A305 | 28140695 | 25 × 240 × 1.5T, CUSHION | U004 | 1A299512-2A | NASW-4212-2A, INPUT CIRCUIT PC |
| A306 | 28140693 | 10 × 185 × 1.5T, CUSHION | | | BOARD ASS'Y |
| A500 | 1A299121 | FRONT PANEL ASS'Y [BLK] | U005 | 1A297513-2 | NAPS-4213-2, POWER SUPPLY |
| (A511) | 27265219 | COSMETIC RING (L) [BLK] | | | CIRCUIT (1) PCBOARD ASS'Y |
| (A512) | 27265224A | COSMETIC RING ASS'Y (SEL) | U006 | 1A297514-2D | NAETC-4214-2D, POWER SUPPLY |
| | | [BLK] | | | CIRCUIT (2) PC BOARD ASS'Y |
| (A516) | 28198742 | FACET | U007 | 1A297515-2A | NADG-4215-2A, |
| (A518) | 27265223 | COSMETIC RING (D) [BLK] | | | MICROPROCESSOR CIRCUIT |
| (A519) | 27265220-3A | COSMETIC RING (R) [BLK] | | | PC BOARD ASS'Y |
| (A520) | 28198742 | FACET | U008 | 1A297517-1 | NAAF-4217-1, VOLUME & DIRECT |
| (A523) | 27265221-3 | COSMETIC RING (VOL) [BLK] | | | SWITCHCIRCUIT PC BOARD |
| (A524) | 28135199 | NAME PLATE | | | ASS'Y |
| (A801) | 28324082A | KNOB ASS'Y (POW) [BLK] | U009 | 1A297518-2 | NAAF-4218-2, MUTING/SUBSONIC |
| (A805) | 28191568 | CLEAR PLATE (RE) | | | SWITCH PC BOARD ASS'Y |
| (A806) | 28198753 | FACET | U010 | 1A297519-2 | NASW-4219-2, TONE CONTROL |
| (A807) | 28198742 | FACET | | | CIRCUIT PC BOARD ASS'Y |
| A808 | 28199190 | FILM | U011 | 1A297520-2 | NADIS-4220-2, PHOTO RECEIVING |
| A500 | 1A300121 | FRONT PANEL ASS'Y [SIL] | | | CIRCUIT PC BOARD ASS'Y |
| (A511) | 27265219-1 | COSMETIC RING (L) [SIL] | U012 | 1A297521-2 | NASW-4221-2, SPEAKER SWITCH |
| (A512) | 27265224-3A | COSMETIC RING ASS'Y (SEL) | | | CIRCUIT PC BOARD ASS'Y |
| | | [SIL] | U013 | 1A297522-2 | NADIS-4222-2, LED PC BOARD |
| (A518) | 27265223-3 | COSMETIC RING (D) [SIL] | | | ASS'Y |
| (A519) | 27265220-4 | COSMETIC RING (R) [SIL] | U014 | 1A297523-2 | NADIS-4223-2, LED PC BOARD |
| (A523) | 27265221-4 | COSMETIC RING (VOL) [SIL] | | | ASS'Y |
| (A801) | 28324414 | KNOB ASS'Y (POW) [SIL] | U015 | 1A297524-2A | NAETC-4224-2A, REMOTE |
| A503 | 28185359 | SIDE BOARD (L) | | | CONTROL TERMINAL PC BOARD |
| A505 | 28185360 | SIDE BOARD (R) | | | ASS'Y |
| A631 | 27170271 | BOTTOM BOARD (L) | U016 | 1A299525-2A | NAETC-4225-2A, TUNER TERMINAL |
| A632 | 27170272A | BOTTOM BOARD (R) | | | PC BOARD ASS'Y |
| A633 | 28141024 | 20 × 240 × 2.5T, CUSHION | | | |
| A636 | 27175251 | LEG ASS'Y | | | |
| A810 | 28324083A | KNOB (VOL) [BLK] | | | |
| A810 | 28324413A | KNOB (VOL) [SIL] | | | |

NOTE: [BLK]: ONLY BLACK MODEL
[SIL]: ONLY SILVER MODEL

NOTE:
THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL
FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY
WITH PARTS NUMBER SPECIFICED.

PRINTED CIRCUIT BOARD PARTS LIST

MAIN CIRCUIT PC BOARD (NAAF-4209-2A)

| CIRCUIT NO. | PART NO. | DESCRIPTION | CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|--------------------|----------------|-------------|-------------------|---|
| | ICs | | | Coils | |
| Q105, Q106 | 222570 | NJM4560D-X | L601, L602 | 231134 | S-0.8E |
| Q109 | 222780183 | 78L18 | L201-L203 | 230905 | BL02RN1-R62 |
| Q110 | 222790183 | 79L18 | | | |
| Q519, Q520 | 222570 | NJM4560D-X | | Capacitors | |
| Q851 | 222584 | TA7317P | C105, C106 | 372121214 | 120 pF, 50V, Styrene |
| | Transistors | | C111, C112 | 379122024 | 2000 pF, 50V, Film (DEW) |
| Q101, Q102 | 2211535 OR | 2SK146-GR OR | C113-C116 | 379122434 | 0.024 μ F, 50V, Film (DEW) |
| | 2211536 OR | 2SK146-BL OR | C117, C118 | 374724334 | 0.043 μ F, 50V, Film (TF) |
| | 2211537 | 2SK146-V | C119-C122 | 391251017 | 100 μ F, 25V, Elect.(MUSE) |
| Q501, Q502 | 2212805 OR | 2SK389-GR OR | C123, C124 | 374722024 | 2000 pF, 50V, Film (TF) |
| | 2212806 OR | 2SK389-BL OR | C147, C148 | 354764719 | 470 μ F, 35V, Elect. |
| | 2212807 | 2SK389-V | C151, C152 | 354761019 | 100 μ F, 35V, Elect. |
| Q503-Q506 | 2211733 OR | 2SC1845-E OR | C153, C154 | 354762219 | 220 μ F, 35V, Elect. |
| | 2211732 | 2SC1845-F | C155, C156 | | |
| Q507, Q508 | 2213666 OR | 2SA1240-F OR | C501, C502 | 372121014 | 100 pF, 50V, Styrene |
| | 2213667 | 2SA1240-G | C509, C510 | 372121014 | 100 pF, 50V, Styrene |
| Q511, Q512 | 2211455 OR | 2SA1015-GR OR | C511, C512 | 372123304 | 33 pF, 50V, Styrene |
| | 2211454 | 2SA1015-Y | C513-C516 | 391252207 | 22 μ F, 25V, Elect.(MUSE) |
| Q513, Q514 | 2211354 OR | 2SA949-Y OR | C523, C524 | 354742219 | 220 μ F, 16V, Elect. |
| | 2211353 | 2SA949-O | C525-C526 | 374722235 | 0.022 μ F, 50V, Film (TF) |
| Q517, Q518 | 2211255 OR | 2SC1815-GR OR | C527, C528 | 374794734 | 0.047 μ F, 63V, Film (TF) |
| | 2211256 | 2SC1815-BL | C529, C530 | 354790479 | 4.7 μ F, 100V, Elect. |
| Q581-Q584 | 2211634 OR | 2SC2229-Y OR | C605, C606 | 354741019 | 100 μ F, 16V, Elect. |
| Q601, Q602 | 2211633 | 2SC2229-O | C607, C608 | 374791044 | 0.1 μ F, 63V, Film (TF) |
| Q603, Q604 | 2211354 OR | 2SA949-Y OR | C609, C610 | 374794734 | 0.047 μ F, 63V, Film (TF) |
| | 2211353 | 2SA949-O | C619-C622 | 374791044 | 0.1 μ F, 63V, Film (TF) |
| Q605, Q606 | 2202034 OR | 2SD1763A-D OR | C851 | 354722219 | 220 μ F, 6.3V, Elect. |
| | 2202035 | 2SD1763A-E | C852 | 354742209 | 22 μ F, 16V, Elect. |
| Q607, Q608 | 2202024 OR | 2SB1186A-D OR | C853 | 354784799 | 0.47 μ F, 50V, Elect. |
| | 2202025 | 2SB1186A-E | C855 | 354743319 | 330 μ F, 16V, Elect. |
| Q617, Q618 | 2211634 OR | 2SC2229-Y OR | C858, C859 | 374721044 | 0.1 μ F, 50V, Film (TF) |
| | 2211633 | 2SC2229-O | C901-C903 | 354772219 | 220 μ F, 63V, Elect. |
| Q619, Q620 | 2211793 OR | 2SA992-E OR | C905, C906 | 354782219 | 220 μ F, 50V, Elect. |
| | 2211792 | 2SA992-F | C913, C914 | 354754719 | 470 μ F, 25V, Elect. |
| Q852 | 2212600 | DTA124ES | C915, C916 | 354761019 | 100 μ F, 35V, Elect. |
| Q853 | 2211504 | 2SA950-Y | C921 | | |
| Q901 | 2211634 OR | 2SC2229-Y OR | | Resistors | |
| | 2211633 | 2SC2229-O | R151, R152 | 442525604 | 56 Ω , 1/2W, Metal oxide film |
| Q902 | 2211354 OR | 2SA949-Y OR | R527, R528 | 442524734 | 47 k Ω , 1/2W, Metal oxide film |
| | 2211353 | 2SA949-O | R535, R536 | 5210062 | N06HR4.7KBBD, Semi-fixed |
| Q903, Q904 | 2211945 | 2SK246-GR | R601, R602 | 442522224 | 2.2 k Ω , 1/2W, Metal oxide film |
| | Diodes | | R603, R604 | 442522214 | 220 Ω , 1/2W, Metal oxide film |
| D505, D506 | 225251 | TLR112, LED | R609-R612 | 442520224 | 2.2 Ω , 1/2W, Metal oxide film |
| D511-D516 | 223163 | 1SS133 | R623-R626 | 4000078 | 0.33 Ω , 5W, Metal plate |
| D517-D520 | 225251 | TLR112, LED | R633, R634 | 442820824 | 8.2 Ω , 3W, Metal oxide film |
| D851, D852 | 223163 | 1SS133 | R862 | 442525114 | 510 Ω , 1/2W, Metal oxide film |
| D853 | 224450623 | MTZ6.2C, Zener | R875, R876 | 441623914 | 390 Ω , 1W, Metal oxide film |
| D854 | 223163 | 1SS133 | R901-R903 | 441621304 | 13 Ω , 1W, Metal oxide film |
| D901-D903 | 224450562 | MTZ5.6B, Zener | R905, R906 | 442525614 | 560 Ω , 1/2W, Metal oxide film |
| D905, D906 | 225251 | TLR112, LED | | | |
| D907, D908 | 224452204 | MTZ22D, Zener | | | |

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|--------------|-----------------------|-------------------------|
| | Switch | |
| S101 | 25065439 | NSS-62159, Slide switch |
| | Relaies | |
| RL851, RL852 | 25065275 | NRL-2P5A-DC12-38 |
| | Plug | |
| P104 | 25055100 | NPLG-3P84 |
| P256 | 25055133 | NPLG-3P117 |
| P321 | 25055137 | NPLG-7P121 |
| P852 | 25055139 | NPLG-9P123 |
| | Terminal | |
| P101 | 25045341 | NPJ-2PDBL-192 |
| | Socket ass'y | |
| P103 | 2000551 | NSAS-6P507 |
| P752 | 2009990003 | NSAS-06P0007 |
| P753 | 2009990004 | NSAS-06P0008 |
| | Jumper sockets | |
| JL211 | 25050268 | NSCT-4P96 |
| JL212, JL213 | 25050267 | NSCT-3P95 |
| JL951 | | |
| | Bracket | |
| | 27141059 | (Ground) |
| | 27301427 | (Bus) |
| | Cushion | |
| | 28140963 | |
| | Holder clamp | |
| | 27301186 | MSA-1606 |
| | 27301271 | MSA-1609 |

SPEAKER TERMINAL PC BOARD (NAETC-4210-2A)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|------------------|--------------|
| | Terminals | |
| P751, P752 | 25060162 | NTM-4PDMN088 |

INPUT CIRCUIT PC BOARD (NASW-4212-2A)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|------------------------|------------------------------|
| | Diode | |
| D201 | 223163 | 1SS133 |
| | Capacitor | |
| C201 | 374721034 | 0.01 μ F, 50V, Film (TF) |
| | Switches | |
| S201 | 25030330 | NRS-2211-BA, Rotary |
| S281 | 25065438 | NSS-84158, Slide |
| | Relay | |
| RL201 | 25065397 | NRL-2P1A-DC5-068 |
| | Input terminals | |
| P201-P204 | 25045305 | NPJ-4PDBL164 |
| P207 | 25045304 | NPJ-2PDBL163 |
| | Plugs | |
| P205, P206 | 25055133 | NPLG-3P117 |
| P103A | | |
| P211 | 25055139 | NPLG-9P123 |
| | Socket ass'y | |
| P256 | 2009990090 | NSAS-6P0128 |
| | Jumper socket | |
| JL201 | 25050267 | NSCT-3P95 |

POWER SUPPLY CIRCUIT (1) PC BOARD (NAPS-4213-2)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|----------------------|--|
| | Diodes | |
| D921 | 22380038 | RBV-602 |
| D922, D923 | 22380003 | 1N5402 |
| D931, D941 | 22380039 | 1D4B42 |
| | Coils | |
| L921, L922 | 230905 | BL02RN1-R62 |
| | Capacitors | |
| C921, C922 | 3504247 | 12000 μ F, 53V, Elect. |
| C923-C925 | 374503345 | 0.33 μ F, 125V, Film (ME) |
| C931, C932 | 374722235 | 0.022 μ F, 50V, Film (TF) |
| C933 | 354741029 | 1000 μ F, 16V, Elect. |
| C941, C942 | 354764719 | 470 μ F, 35V, Elect. |
| C943, C944 | 374722235 | 0.022 μ F, 50V, Film (TF) |
| C945 | | |
| | Resistors | |
| R931 | 442520104 | 1 Ω , 1/2W, Metal oxide film |
| R932 | 441623314 | 330 Ω , 1W, Metal oxide film |
| R941, R942 | 442522294 | 0.22 Ω , 1/2W, Metal oxide film |
| | Jumper socket | |
| JL941 | 25050267 | NSCT-3P95 |
| | Socket ass'y | |
| P104 | 2009990069 | NSAS-6P0106 |
| | Plug | |
| P951a | 25055133 | NPLG-3P117 |
| | Bracket | |
| | 27301367 | (Bus) |
| | Radiator | |
| D921a | 27160265 | RAD-82 |

POWER SUPPLY CIRCUIT (2) PC BOARD (NAETC-4214-2D)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|---------------|--------------------|--------------------------------------|
| | Transistor | |
| Q951 | 2213650 | DTD113ZS |
| | Diodes | |
| D951 | 223163 | 1SS133 |
| D952 | 22380039 | 1D4B42 |
| | Transformer | |
| Δ T902 | 2300711 | NPT-1117P |
| | Capacitors | |
| C951-C952 | 374721034 | 0.01 μ F, 50V, Film (TF) |
| C954, C955 | 374722235 | 0.022 μ F, 50V, Film (TF) |
| C956 | 354752229 | 2200 μ F, 25V, Elect. |
| Δ C971 | 3500065A | 0.01 μ F, AC400V/125V, Film (IS) |
| Δ C972 | 3500065A | 0.01 μ F, AC400V/125V, Film (IS) |


| CIRCUIT NO | PART NO. | DESCRIPTION |
|-------------------------|------------|-----------------------------|
| Condensior cover | | |
| ▲ C971a, C972a C973a | 27301216 | SB1925A |
| Resistors | | |
| R951 | 442520104 | 1 Ω, 1/2W, Metal oxide film |
| R952 | 441628214 | 820 Ω, 1W, Metal oxide film |
| Relay | | |
| ▲ RL901 | 25065248 | NRL-1P15A-DC12-29 |
| Terminals | | |
| | 25060092 | NTM-1S33 |
| Socket ass'y | | |
| P951 | 2009990180 | NSAS-6P0250 |
| Fuse holder | | |
| ▲ F901a, F902a | 25050065 | YSH403T |
| Fuse label | | |
| ▲ F902b | 29360374 | T4A/250V |

**MICROPROCESSOR CIRCUIT PC BOARD
(NADG-4215-2A)**

| CIRCUIT NO | PART NO. | DESCRIPTION |
|--------------------|-----------|------------------|
| ICs | | |
| Q801 | 22240377 | TMP47C440AN-1997 |
| Q802 | 22240358 | LB1638 |
| Q803 | 22240239 | TA7291S |
| Q804 | 222951 | M51943BSL |
| Q805 | 222780055 | 78M05HF |
| * (Q805) | 222780565 | 78M56 |
| Transistors | | |
| Q806 | 2213160 | DTC124ES |
| Q807-Q809 | 2213510 | DTA114ES |

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|---------------------|-------------|-----------------------------------|
| Q810 | 2211255 | 2SC1815-GR |
| Q811 | 2213090 | DTA114YS |
| Q812 | 2213650 | DTD113ZS |
| Q813 | 2211164 | 2SC2120-Y |
| Q814 | 2213090 | DTA114YS |
| Q815 | 2211504 | 2SA950-Y |
| Diodes | | |
| D801, D816 | 223163 | 1SS133 |
| D803-D807 | | |
| D802 | 224450562 | MTZ5.6B, Zener |
| D808-D815 | 225142DX2 | SEL2913K-DX2, LED |
| D817 | 224450562 | MTZ5.6B, Zener |
| Coils | | |
| L801 | 233409K220 | NCH-1284 |
| L802-L805 | 230906 | BL02RN2-R62 |
| Osc. element | | |
| X801 | 3010150 | CST4.00M3W |
| Capacitors | | |
| C803, C807 | 354744709 | 47 μF, 16V, Elect. |
| C808 | 375524744 | 0.47 μF, 50V, Film (MMT) |
| C810 | 3000051 | 0.047 F, 5.5V, Super |
| C816 | 374721044 | 0.1 μF, 50V, Film (TF) |
| C819 | 354724719 | 470 μF, 6.3V, Elect. |
| C821 | 354744709 | 47 μF, 16V, Elect. |
| C822 | 354761009 | 10 μF, 35V, Elect. |
| C824 | 354744709 | 47 μF, 16V, Elect. |
| C827 | 353741009 | 10 μF, 16V, Elect. |
| C829, C830 | 374721035 | 0.01 μF, 50V, Film (TF) |
| Resistors | | |
| R817, R818 | 49163103405 | RM1/10IJ10K × 5, Resistor network |
| R830 | 441620564 | 5.6 Ω, 1W, Metal oxide film |
| Socket ass'y | | |
| P211 | 2009990110 | NSAS-18P0167 |
| P801 | 2000871 | NSAS-6P827 |
| Radiator | | |
| Q805a | 27160145 | RAD-51 |
| Switch | | |
| S853 | 25030334 | NRS-112-25RSM |
| Holder | | |
| | 27190786 | (LED-8) |

NOTE:

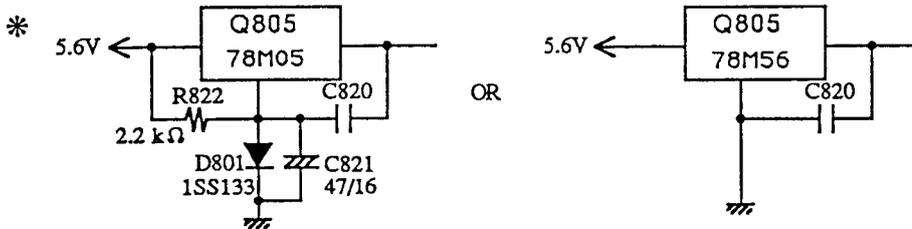

**VOLUME & DIRECT SWITCH CIRCUIT PC BOARD
(NAAF-4217-1)**

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|---------------------|-------------------------|
| | Resistor | |
| R321 | 5104293 | N16RGM50KBT25, Variable |
| | Switch | |
| S351 | 25030336A | NRS-184-25SS, Rotary |
| | Socket ass'y | |
| P205 | 2000809 | NSAS-6P765 |
| P206 | 2000630 | NSAS-6P586 |
| P321 | 2009990181 | NSAS-14P0251 |
| | Plug | |
| P401A | 25055133 | NPLG-3P117 |

MUTING/SUBSONIC SWITCH PC BOARD (NAAF-4218-2)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|-------------------|-------------------------------|
| | Capacitors | |
| C301~C304 | 374721635 | 0.016 μ F, 50V, Film (TF) |
| C305, C306 | 374721825 | 1800 pF, 50V, Film (TF) |
| C307, C308 | 374728234 | 0.082 μ F, 50V, Film (TF) |
| | Resistors | |
| R301 | 5148107A | N16RGMC250KMN25, Variable |
| R302 | 5142002 | N16RGM11C100K25, Variable |
| R303 | 5144011 | N16RGM11C70K88K25, Variable |

TONE CONTROL CIRCUIT PC BOARD (NASW-4219-2)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|-------------------|---------------------------|
| | Capacitors | |
| C331, C332 | 354784799 | 0.47 μ F, 50V, Elect. |
| | Switches | |
| S331 (S332) | 25035601 | NPS-222-L565 |
| S333 | 25035584 | NPS-122-L546 |

PHOTO RECEIVING CIRCUIT PC BOARD (NADIS-4220-2)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|-----------------------------|-------------------------|
| | Photo receiving unit | |
| U015 | 24130003 | GPIU50XS |
| | Diodes | |
| D831~D833 | 223163 | 1SS133 |
| D834~D836 | 225142DX2 | SEL2913K-DX2, LED |
| | Capacitor | |
| C831 | 354744709 | 47 μ F, 16V, Elect. |
| | Switch | |
| S852 | 25035548 | NRS-111-S510 |
| | Holder | |
| | 27190787 | (LED-1) |

SPEAKER SWITCH CIRCUIT PC BOARD (NASW-4221-2)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|---------------------|-----------------------|
| | Diode | |
| D855 | 223163 | 1SS133 |
| | Switch | |
| S851 | 25030335 | NRSF-124-20BU, Rotary |
| | Stereo jack | |
| P851 | 25045337 | HLJ4317-01-3120 |
| | Relay | |
| RL853 | 25065174 | NRL-2P1A-DC12-09 |
| | Socket ass'y | |
| P852 | 2009990185 | NSAS-18P0255 |
| | Shield plate | |
| | 27150208 | |

LED PC BOARD (NADIS-4222-2)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|----------------------|-------------------|
| | Diodes | |
| D203 | 225142DX2 | SEL2913K-DX2, LED |
| | Jumper socket | |
| JL210 | 25050267 | NSCT-3P95 |
| | Holder | |
| | 27190787 | (LED-1) |

LED PC BOARD (NADIS-4223-2)

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|---------------|--------------|
| | Diode | |
| D821 | 225142DX2 | SEL2913K-DX2 |
| | Holder | |
| | 27190787 | (LED-1) |


**REMOTE CONTROL TERMINAL PC BOARD
(NAETC-4224-2A)**

| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|------------------|----------------|
| | Mini jack | |
| P251 | 25045172 | HSJ1003-01-020 |
| | Plug | |
| P801a | 25055133 | NPLG-3P117 |

TUNER TERMINAL PC BOARD (NAETC-4225-2)


| CIRCUIT NO. | PART NO. | DESCRIPTION |
|-------------|-----------------|--------------|
| | Terminal | |
| P221 | 25045307 | NPJ-2PDBL166 |

NOTE:
THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL
FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY
WITH PARTS NUMBER SPECIFIED.

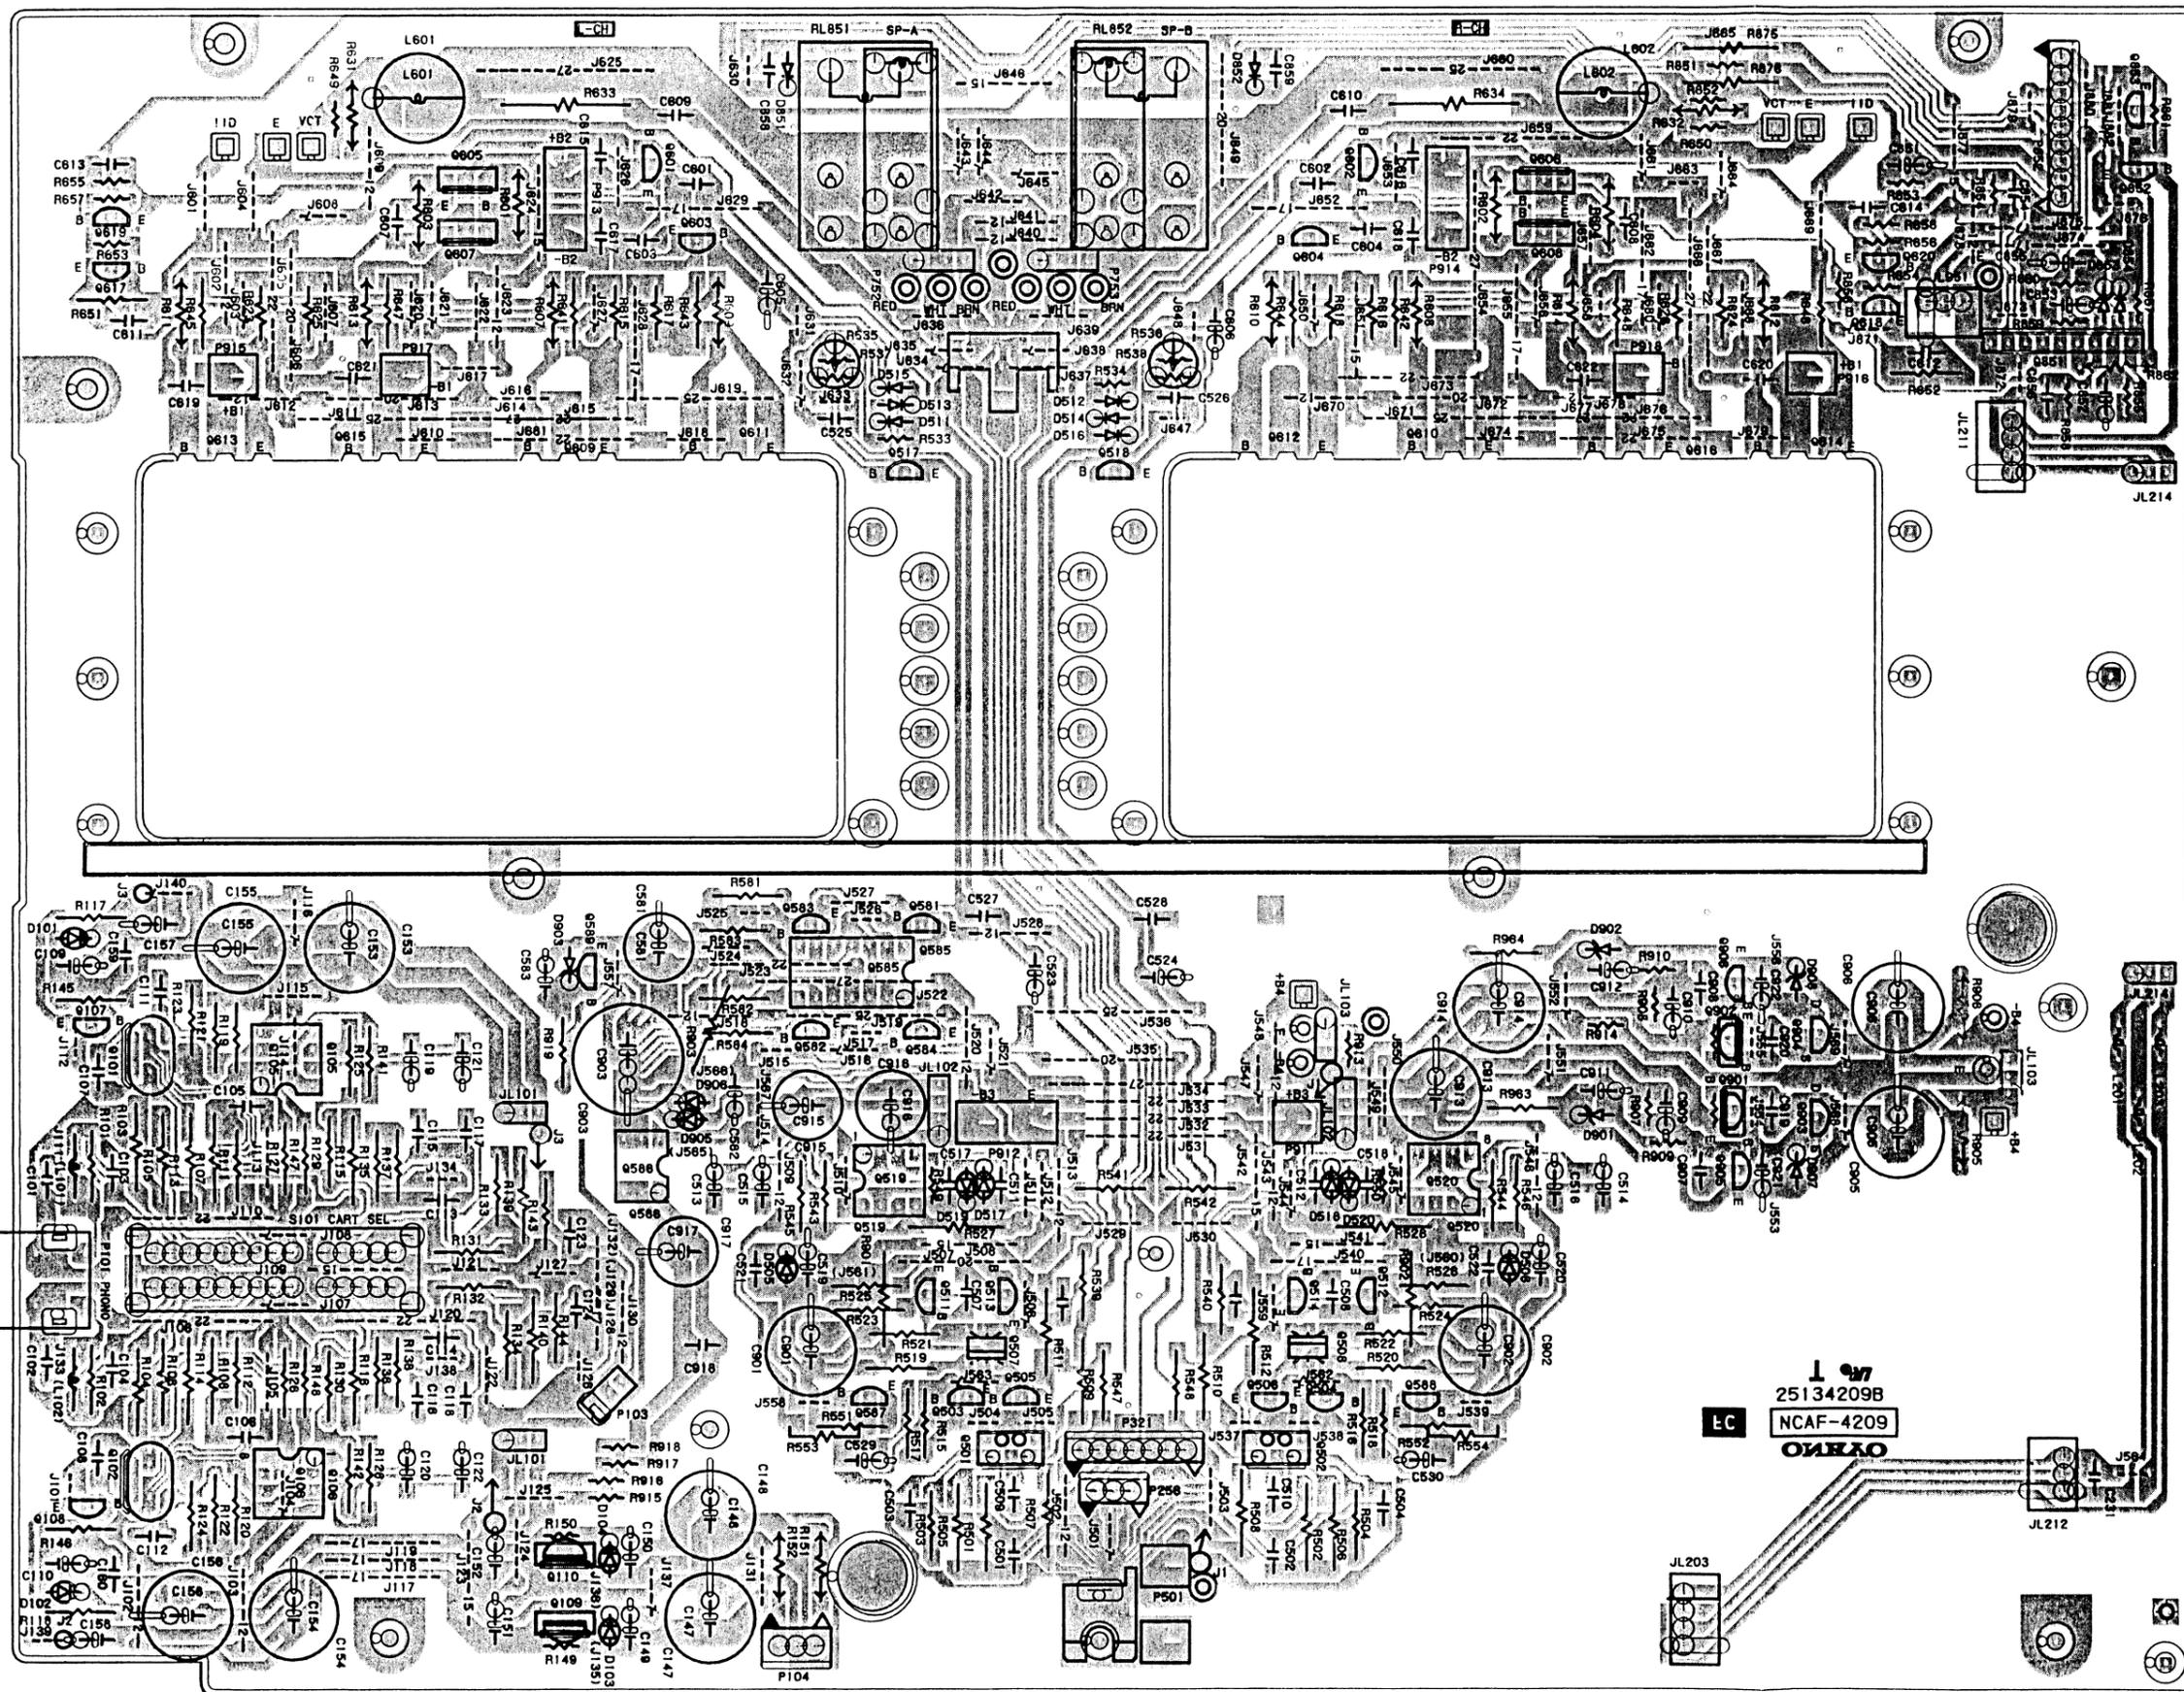

SCHEMATIC DIAGRAM


MODEL A-8850

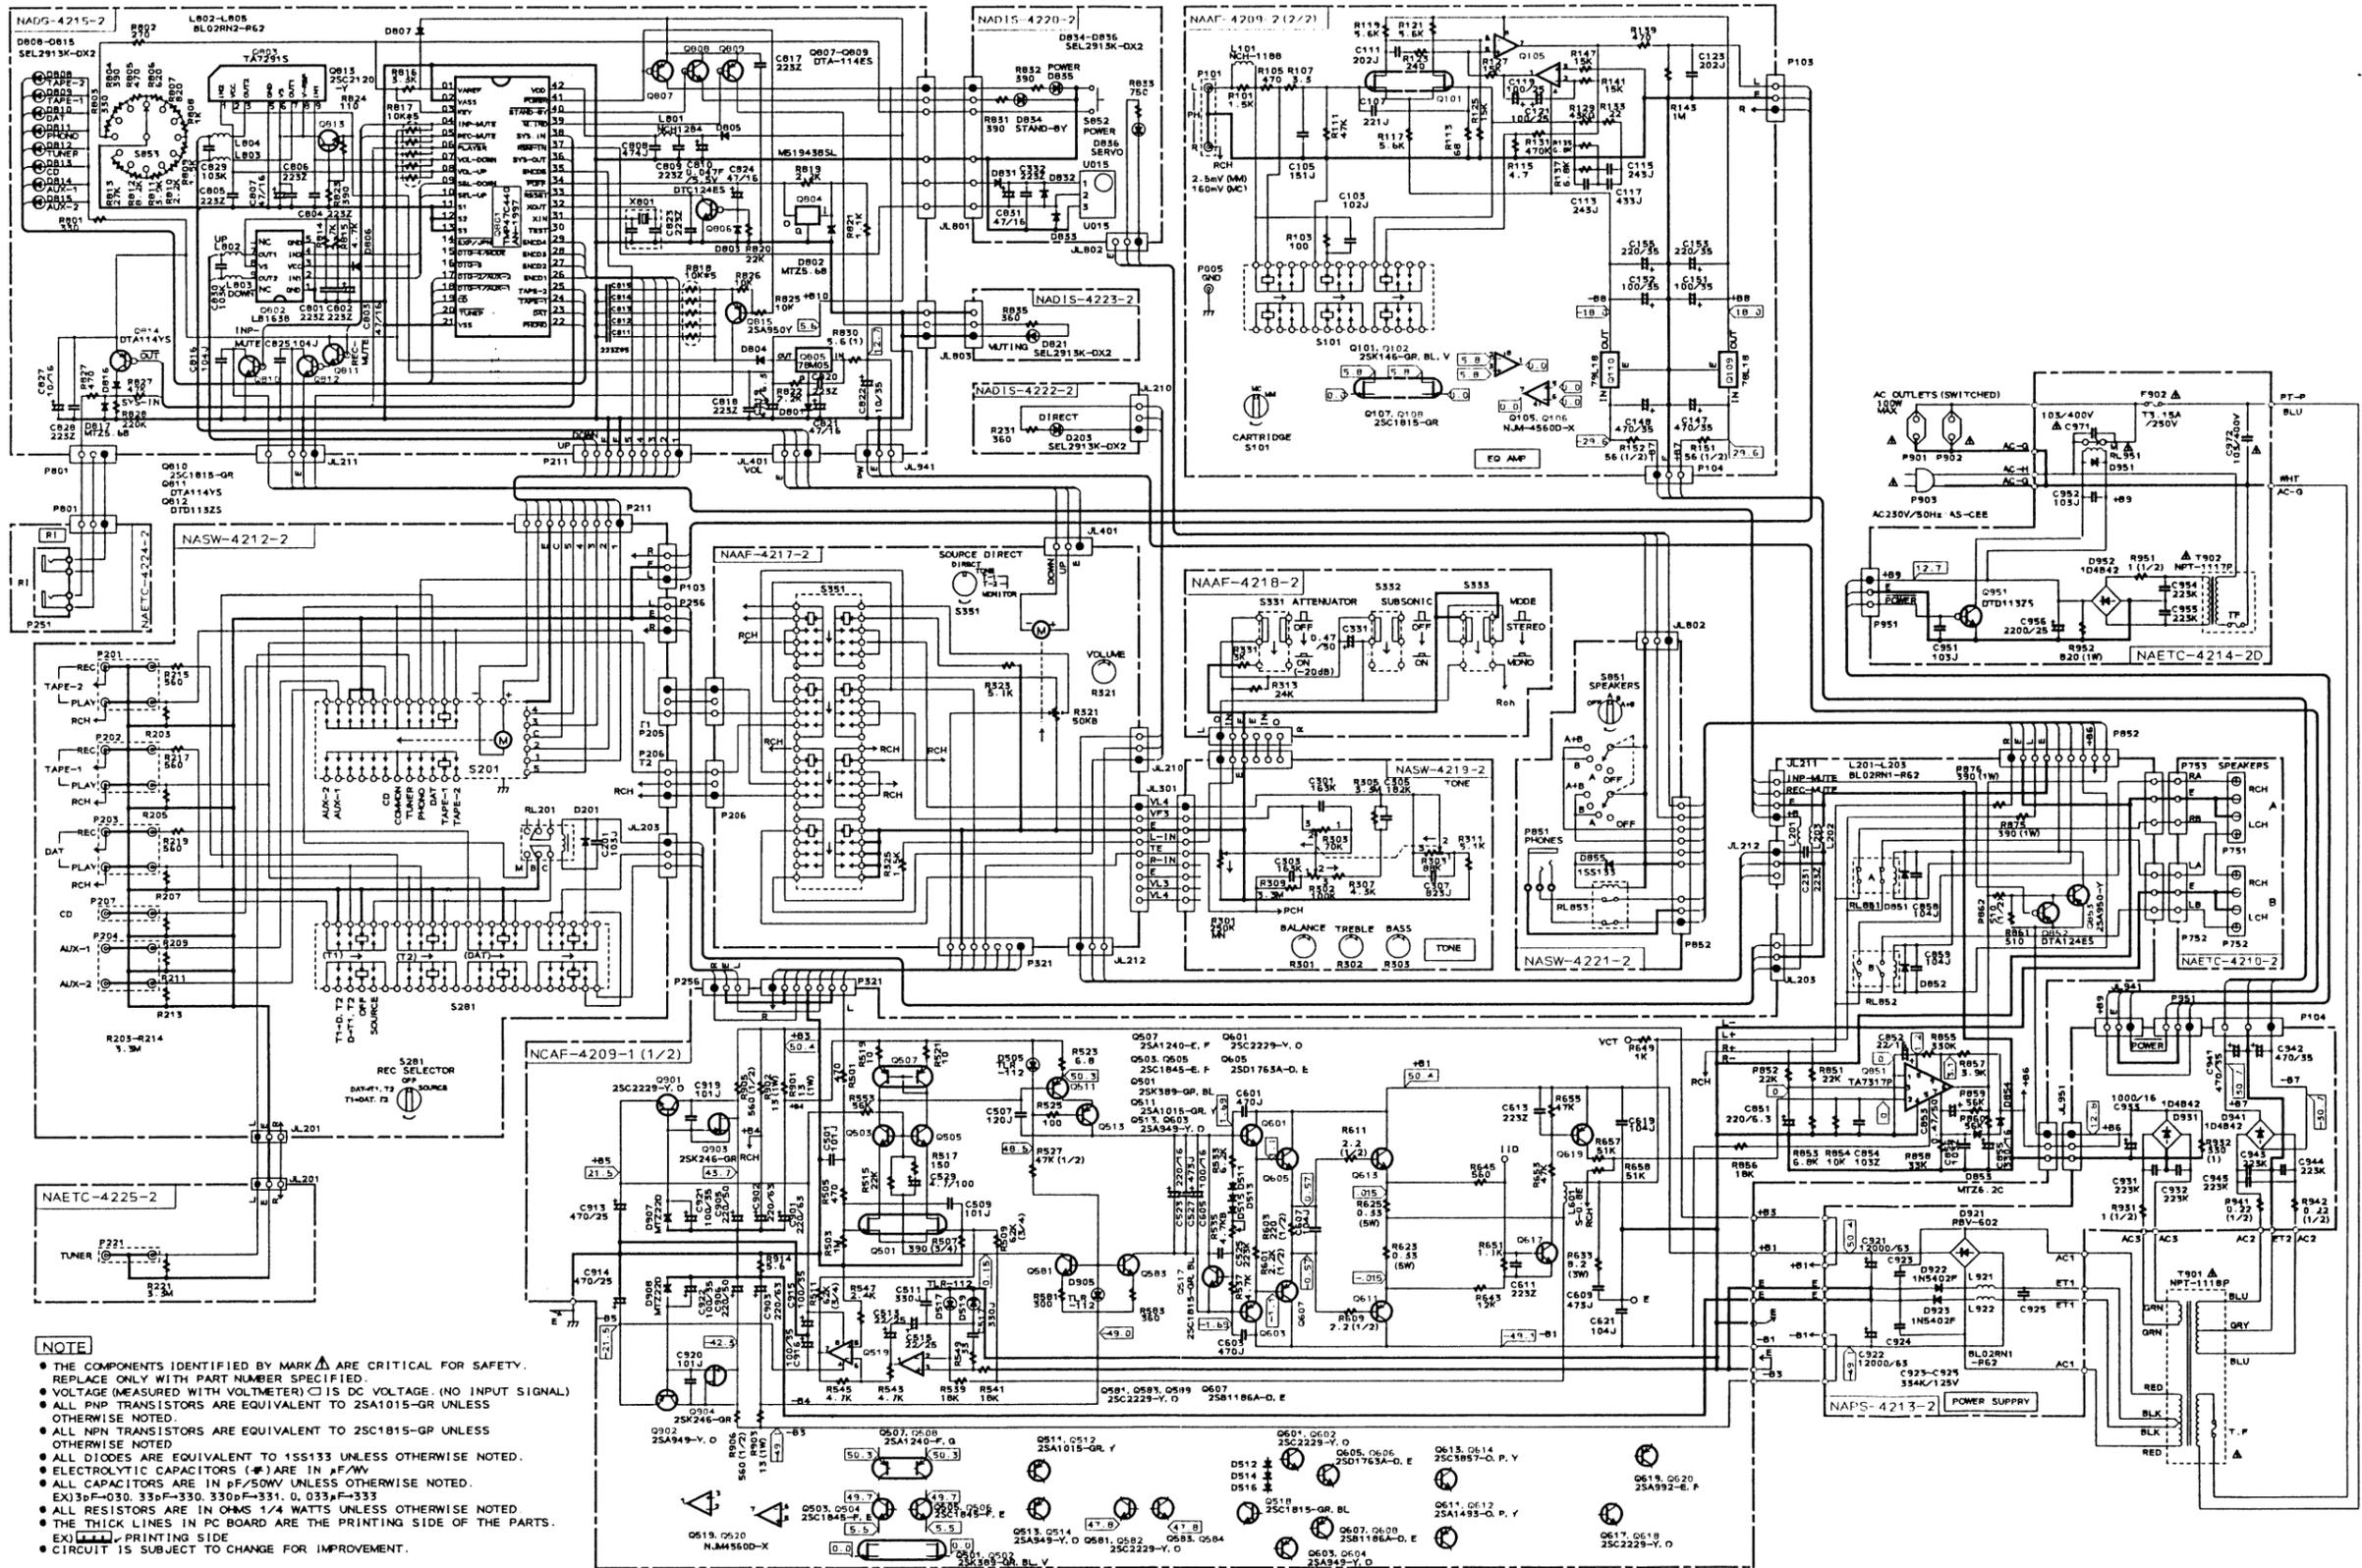


NOTE

- THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLTMETER) □ IS DC VOLTAGE. (NO INPUT SIGNAL).
- ALL PNP TRANSISTORS ARE EQUIVALENT TO 25A1015-GR UNLESS OTHERWISE NOTED.
- ALL NPN TRANSISTORS ARE EQUIVALENT TO 25C1815-GR UNLESS OTHERWISE NOTED.
- ALL DIODES ARE EQUIVALENT TO 15S133 UNLESS OTHERWISE NOTED.
- ELECTROLYTIC CAPACITORS (E) ARE IN μ F/V.
- ALL CAPACITORS ARE IN pF/SOMV UNLESS OTHERWISE NOTED. EX) 30p-030. 33pF-330. 330pF-331. 0.033 μ F-333.
- ALL RESISTORS ARE IN OHMS 1/4 WATTS UNLESS OTHERWISE NOTED.
- THE THICK LINES IN PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
- EX) PRINTING SIDE.
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.


NAAF4218

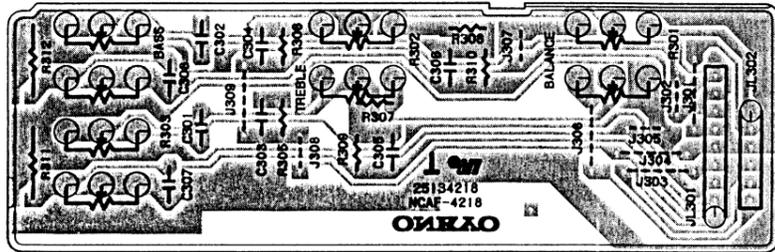


NASW-4219

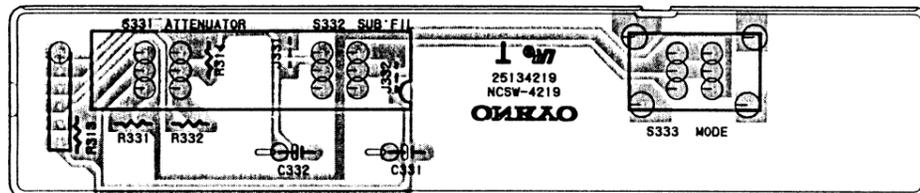

NADIS-4220

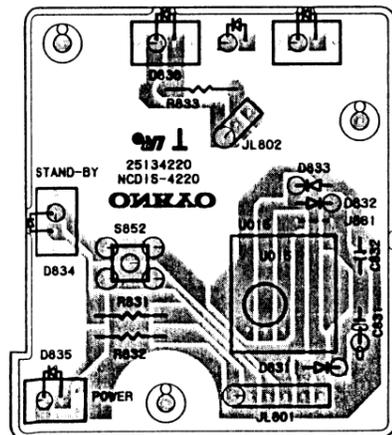

NASW-4221

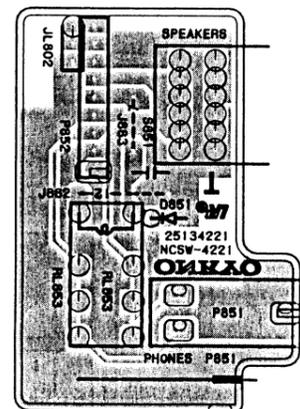


PARTS LIST OF PACKING

| REF. NO. | PART NO. | DESCRIPTION |
|----------------------|-----------|-------------------------------------|
| A851 | 29052263 | MASTER CARTON BOX [BLK] |
| A851 | 29052265 | MASTER CARTON BOX [SIL] |
| A852 | 29091425A | PAD, LEFT |
| A853 | 29091426A | PAD, RIGHT |
| A854 | 261504 | PAPER TAPE |
| A855 | 29100035A | 1020 x 720, POLY-VINYL BAG |
| A857 | 282320 | SEALING HOOK |
| A858 | 29110071 | DAMPLON TAPE (W=50) |
| | 29355133A | DBP CAUTION LABEL |
| ACCESSORY BAG | | |
| A901 | 29341650 | INSTRUCTION MANUAL |
| | 29365020C | WARRANTYCARD |
| | 29100094A | POLY-VINYL BAG |
| A903 | 24140207 | RC-207S, REMOTE CONTROL TRANSMITTER |
| A904 | 3010054 | UM-3, BATTERY |
| A905 | 2010200 | 3.5 mm, MINI PLUG ASS'Y |
| A906 | 29100097 | 350 x 250, POLY-VINYL BAG |


NOTE [BLK]: ONLY BLACK MODEL
[SIL]: ONLY SILVER MODEL

FRONT PANEL FACILITIES

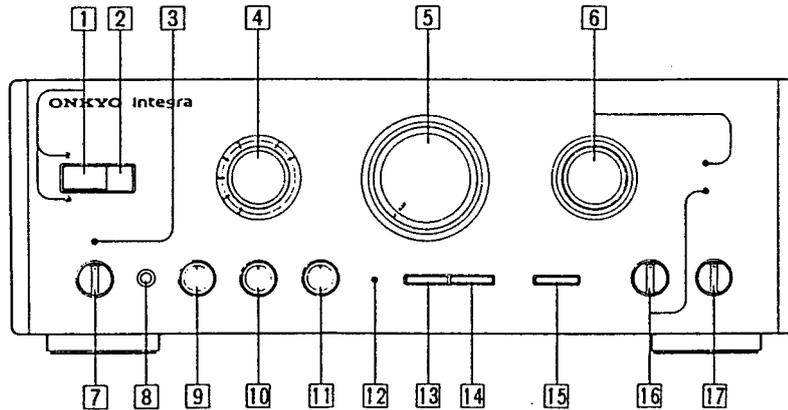

- | | |
|--|---|
| <ol style="list-style-type: none"> 1. Power switch (POWER) 2. Remote control sensor 3. Servo operation indicator (SERVO OPERATION) 4. Input selector switch (INPUT SELECTOR) TAPE-2, TAPE-1, DAT, PHONO, CD, AUX-1, AUX-2 5. Volume control (VOLUME) 6. Source direct switch (SOURCE DIRECT) DIRECT, TONE, MONITOR TAPE-1/TAPE-2 7. Speaker selector switch (SPEAKERS) OFF, A, B, A+B 8. Headphone jack (PHONES) 9. Bass control (BASS) | <ol style="list-style-type: none"> 10. Treble control (TREBLE) 11. Balance control (BALANCE) 12. Muting indicator 13. Attenuator switch (ATTENUATOR) 14. Subsonic filter switch (SUBSONIC) 15. Mode selector switch (MODE) STEREO, MONO 16. Recording source selector switch (REC SELECTOR) TAPE-1 → DAT & TAPE-2, DAT → TAPE-1 & 2 OFF SOURCE 17. Cartridge selector switch (CARTRIDGE) MC, MM |
|--|---|

SYSTEM CONNECTIONS

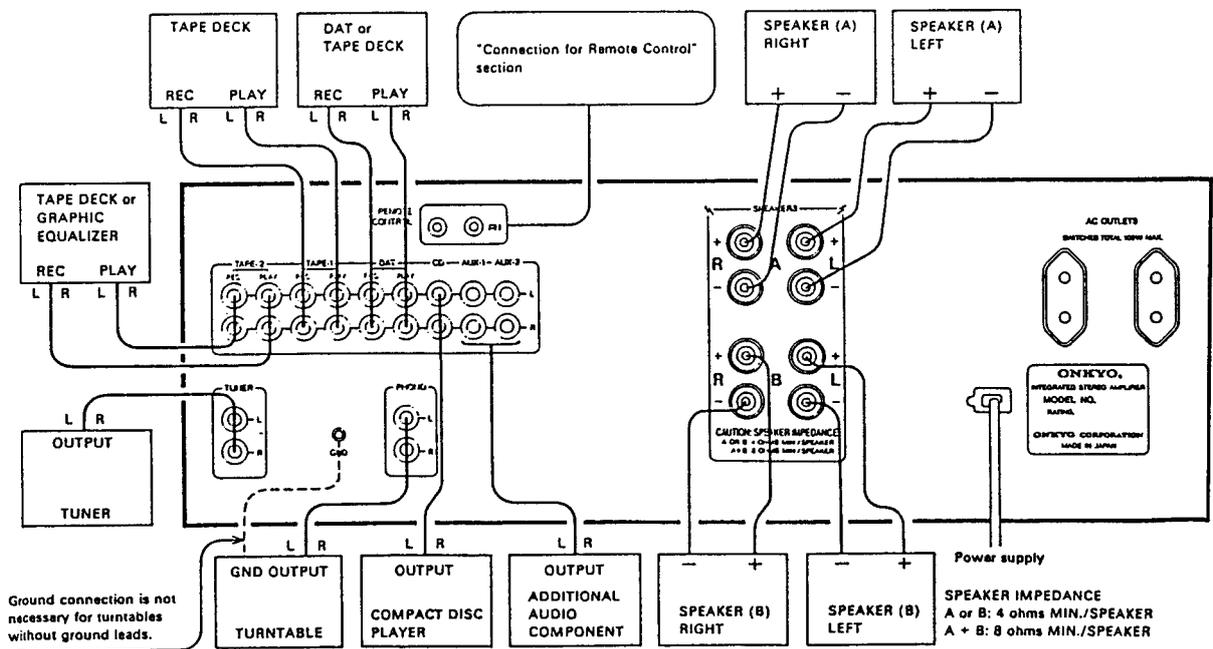

A-8850

ONKYO CORPORATION

International Division: Onarimon Yusen Bldg., 23-5, Nishi-Shimbashi 3-chome, Minato-ku,
TOKYO 105, JAPAN Tel: 03-3432-6987 Fax: 03-3436-6979

ONKYO DEUTSCHLAND GMBH ELECTRONICS
Industriestrasse 20, 8034 Germering, GERMANY
Tel: 089 84 93 20 Fax: 089 84 93 226