


ONKYO® SERVICE MANUAL

Integrated Stereo Amplifier MODEL A-8870

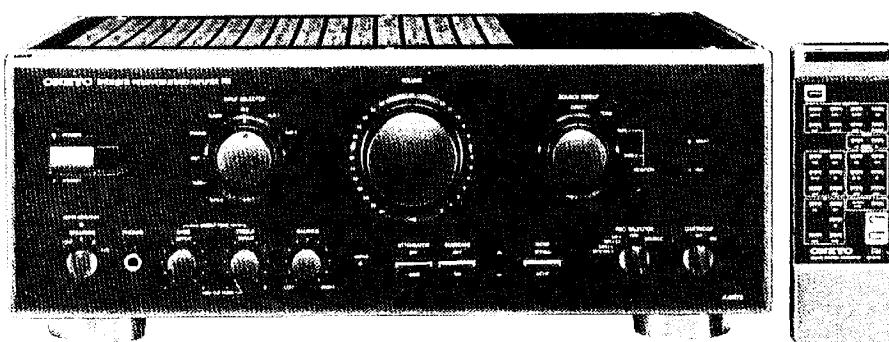

Black and silver models

SAFETY-RELATED COMPONENT WARNING!!
 COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.
 MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

Specifications	2
Precautions	2
Adjustment procedures	3
IC block diagram	4
Block diagram	7
Chassis exploded view	9
Printed circuit board parts list	12
Printed circuit board view	16
Schematic diagram	21
Packing part list	24
Front panel facilities	25
System connections	25

ONKYO
AUDIO COMPONENTS

SPECIFICATIONS

Power Output:	105 watts per channel, min. RMS, at 8 ohms, both channels driven from 20 Hz to 20 kHz, with no more than 0.008% Total harmonic distortion.
Dynamic Power:	303 watts at 2 ohms, 235 watts at 4 ohms 155 watts at 8 ohms
Total Harmonic Distortion	0.008% at rated power 0.008% at 1 watt output
Intermodulation Distortion:	0.005% at rated power
Damping Factor:	150 at 8 ohms (1 kHz)
Input Sensitivity/ Impedance:	Phono (MM): 2.5 mV/50 kohms Phono (MC): 160 μ V/130 ohms CD: 150 mV/30 kohms TUNER: 150 mV/30 kohms Tape Play: 150 mV/30 kohms
Output Level/Impedance:	Tape Rec: 150 mV/1.0 kohms (Phono)
Phono Overload:	Phono (MM): 200 mV RMS. at 1 kHz, 0.012% THD.
Tone Control (Vol -20 dB):	BASS: ± 8 dB at 100 Hz TREBLE: ± 8 dB at 10 kHz
High Cut:	6 kHz (6 dB/Octave) (TREBLE min.)
Frequency Response:	CD, Tuner: 2 Hz-50 kHz (+0, -1 dB)
RIAA Deviation:	Phono (MM): ± 0.3 dB, 20 Hz - 20 kHz
Subsonic Filter:	20Hz (-3dB, 6dB/Oct)
Signal to Noise Ratio (IHF-A):	Phono (MM): 94 dB (5.0 mV input) Phono (MC): 75 dB (0.5 mV input) CD (DIRECT): 107 dB
Attenuator:	-20 dB
Muting:	- ∞
Power Supply:	European models: AC230V, 50 Hz
Dimensions (W x H x D):	455 x 170 x 420 mm 17-15/16" x 6-11/16" x 16-9/16"
Weight:	16.7 kg

Specifications and features are subject to change without notice.

PRECAUTIONS

1. Replacing the fuses

For continued protection against risk fire, replace only with same type and same rating fuse.

CIRCUIT NO.	PART NO.	DESCRIPTION
F901	252075	2.5A-SE-EAK, Primary fuse
F902	252077	4A-SE-EAK, Primary fuse

ADJUSTMENT PROCEDURES

Adjustments and Checking the Protection Circuitry

1. Preparations

- 1) Place the unit on the workbench. (There should be about 15 mm of space between the base plate of the unit and the work surface.)
- 2) Set up the unit as follows.
 - (1) No load
 - (2) No signal
 - (3) Volume turned all the way down
 - (4) Speaker switch OFF
 - (5) Power switch OFF

Note) Check the following points before making adjustments

- (1) The power switch should be OFF.
- (2) The interior of the unit should not be warm.

2. Idling current adjustment


- 1) Turn the power switch ON and allow the unit to warm up for about 10 minutes.
 - (1) Adjust R535 (R536) so that the voltage at test point VCT-HID on the NAAF-4209 circuit board is $15mV \pm 5mV$.
 - (Note) Semi-fixed resistors enclosed in parentheses () are for the right channel.

3. Check of operation of protection circuitry

- 1) Check of operation of protection relay
 - (1) Confirm that the relay turns ON approximately 5 seconds after the power switch is turned ON.
 - (2) The SERVO indicator LED should light at the same time.
 - (3) The relay should turn OFF approximately 0.5 seconds after the power switch is turned OFF.
- 2) Check of DC detection and servo circuitry operation
 - (1) Turn the power on with no load.
 - (2) After the speaker relay turns ON, apply DC+200mV to the CD input terminals. Confirm that the relay turns OFF.
 - (3) Confirm that operation is the same as (2) above when an input of DC-200mV is applied.


Note) Under no circumstances connect a load or short the speaker terminals when performing the above test.
- 3) Signal input from the circuit illustrated below with no load.
 - (1) Confirm that the speaker relay does not turn OFF even when a 2 ohm load is connected when a peak value of 30Vp is output.
 - (2) Next, confirm that when a 1 ohm load is connected the speaker relay switches OFF and ON a couple of times and then stays OFF.

Note) The period before that relay stays OFF should not last for more than 1 minute.
Relay OFF status can be canceled by switching the power OFF.

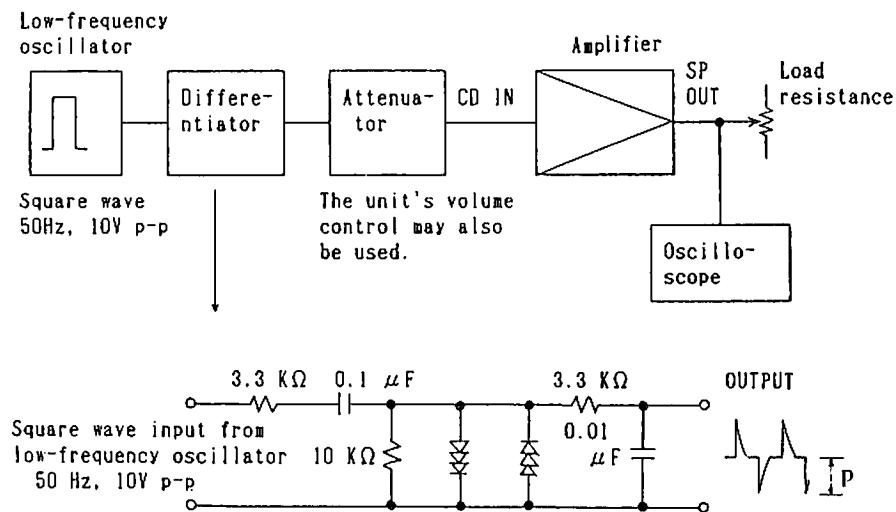


IC BLOCK DIAGRAM

TMP47C440AN (Microprocessor)

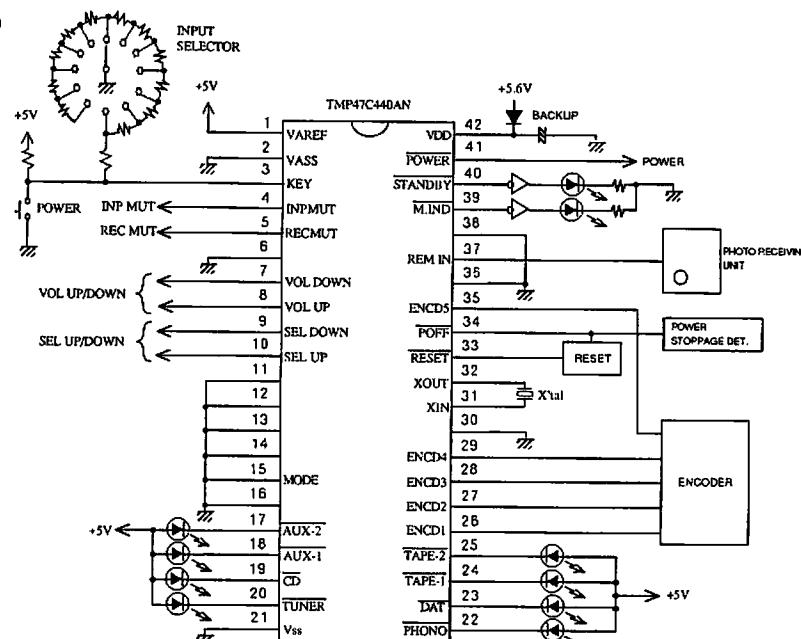


Pin No.	Symbol	Description																								
1	VAREF	Analog reference voltage for A/D conversion																								
2	VASS	Analog reference GND for A/D conversion																								
3	KEY	Input Selector, Power key input terminal. To read Input Selector and Power key by means of A/D conversion																								
4	INPUT	Muting output terminal for Main amplifier input. Active "H"																								
5	RECMUT	Muting output terminal for Rec. output. Active "H" To be output when switching Input Selector. To be output continuously in case of Input Selector TAPE-1, TAPE-2, DAT, and DIGITAL-4.																								
6	PLAYER	Control output terminal for PLAYER. "L" will be output for 200ms if input K64 code for remote control and set Input Selector for PHONO.																								
7	VOL DOWN	UP/DOWN output terminal for volume. Active "H" In case of UP (DOWN), VOL UP output will be "H" ("L"), while VOL DOWN output will be "L" ("H"). When not moving, both outputs shall be "H" (Brake).																								
8	VOL UP																									
9	SEL DOWN	UP/DOWN output terminal for Input Selector. Active "H" In case of UP (DOWN), SEL UP output will be "H" ("L"), While SEL DOWN output will be "L" ("H"). When not moving, both outputs shall be "H" (Brake).																								
10	SEL UP																									
11	S1																									
12	S2																									
13	S3	Output terminal for switching digital signal. Switch as follows through the position of Input Selector.																								
		<table border="1"> <thead> <tr> <th>Input selector</th> <th>Output S3</th> <th>Output S2</th> <th>Output S1</th> </tr> </thead> <tbody> <tr> <td>DIGITAL-1</td> <td>L</td> <td>L</td> <td>L</td> </tr> <tr> <td>DIGITAL-2</td> <td>L</td> <td>L</td> <td>H</td> </tr> <tr> <td>DIGITAL-3</td> <td>L</td> <td>H</td> <td>L</td> </tr> <tr> <td>DIGITAL-4</td> <td>L</td> <td>H</td> <td>H</td> </tr> <tr> <td>Others (Analog)</td> <td>H</td> <td>H</td> <td>H</td> </tr> </tbody> </table>	Input selector	Output S3	Output S2	Output S1	DIGITAL-1	L	L	L	DIGITAL-2	L	L	H	DIGITAL-3	L	H	L	DIGITAL-4	L	H	H	Others (Analog)	H	H	H
Input selector	Output S3	Output S2	Output S1																							
DIGITAL-1	L	L	L																							
DIGITAL-2	L	L	H																							
DIGITAL-3	L	H	L																							
DIGITAL-4	L	H	H																							
Others (Analog)	H	H	H																							
14	EXP/JPN	Input terminal for remote control initialization when energizing.																								

Pin No.	Symbol	Description									
15	DIG-4/MODE										
16	DIG-3	Output terminal for Input Selector display. Output of the position currently selected will be "L" (lighted).									
17	DIG-2/AUX-2	DIG-4/MODE output will be input terminal MODE for initialization of operation switch when energizing.									
18	DIG-1/AUX-1	Output DIG-1/AUX-1, DIG-2/AUX-2 will be switched by initializing MODE into;									
19	CD										
20	TUNER	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <th>MODE</th> <th>DIG-1/AUX-1</th> <th>DIG-2/AUX-2</th> </tr> <tr> <td>L (0)</td> <td>AUX-1</td> <td>AUX-2</td> </tr> <tr> <td>H (1)</td> <td>DIG-1</td> <td>DIG-2</td> </tr> </table>	MODE	DIG-1/AUX-1	DIG-2/AUX-2	L (0)	AUX-1	AUX-2	H (1)	DIG-1	DIG-2
MODE	DIG-1/AUX-1	DIG-2/AUX-2									
L (0)	AUX-1	AUX-2									
H (1)	DIG-1	DIG-2									
21	VSS	GND terminal									
22	PHONO										
23	DAT	Output terminal for Input Selector display. The output of the position currently selected will be "L (lighted)."									
24	TAPE-1										
25	TAPE-2										
26	ENCD1										
27	ENCD2										
28	ENCD3										
29	ENCD4										
30	TEST	To be connected with GND.									
31	XIN	Terminal for connecting with ceramic oscillator (4 MHz)									
32	XOUT										
33	RESET	Input terminal for reset signal. Active "L"									
34	P OFF	Input terminal for detecting power suspension. Take a countermeasure as soon as possible against power failure when turned into "L". Set at HOLD mode.									
35	ENCD5	Input terminal for detecting Rotary sw position of Input Selector. To be connected with Encoder output for position detecting of Rotary sw.									
36	SYS OUT/SYS EN	Output terminal for System code. Active "L" to be turned into SYS EN for initialization input when energizing.									
37	REM IN	Input terminal for remote control signal. Active "L." To be connected with output of photoreceivin unit.									
38	SYS IN	Input terminal for System code. Active "H".									
39	M. IND	Output terminal for Muting display. Lighted in case of "L" To be set "L" when Muting of remote control is ON.									
40	STANBY	Output terminal for Standby display. Lighted incase of "L" To be turned into "L" when Power is OFF. Except the case of power suspenion, the level inverted of Power output is always output.									
41	POWER	Output terminal for Power control. "L" When Power is ON									
42	VDD	Power (+5V) Conntecting terminal.									

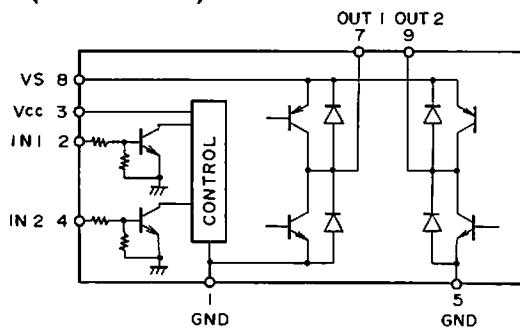
LB1638 (Motor drive)**Tauth Table**

IN 1	IN 2	OUT 1	OUT 2	モード
H	L	H	L	NORMAL
L	H	L	H	REVERSE
H	H	L	L	BRAKE
L	L	OFF	OFF	WAIT

TA7291S (Motor drive)

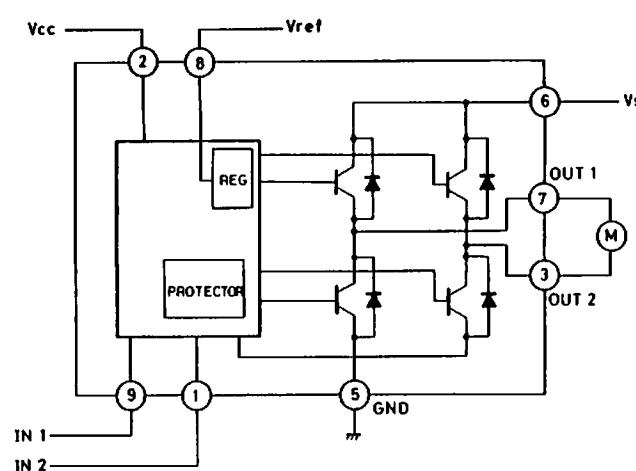


M51943BSL (System reset)

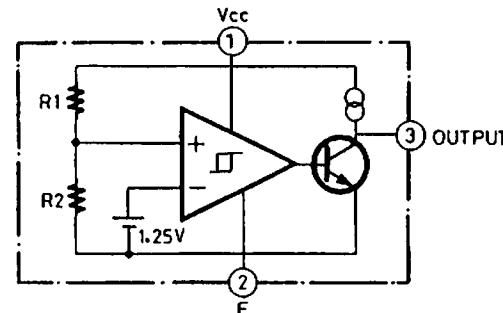


NJM2902N (OP Amp)


INPUT		OUTPUT		MODE
IN 1	IN 2	OUT 1	OUT 2	
0	0	∞	∞	STOP
1	0	H	L	CW/CCW
0	1	L	H	CCW/CW
1	1	L	L	BRAKE

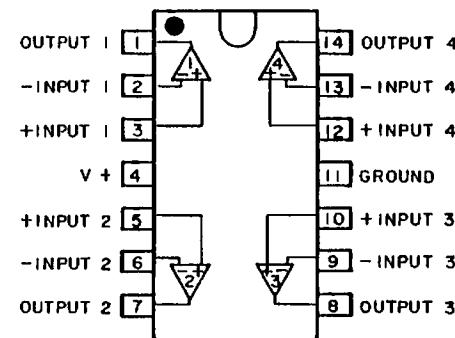

TA7317P (Protective circuit)

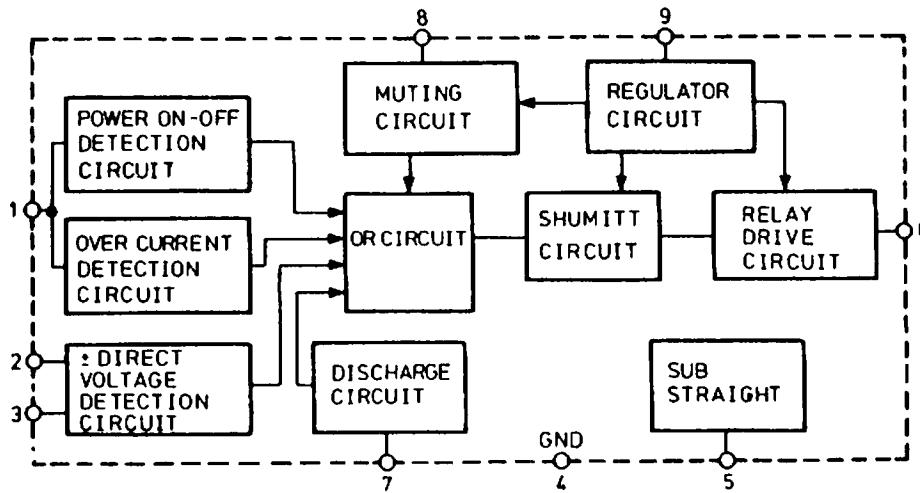


BLOCK DIAGRAM

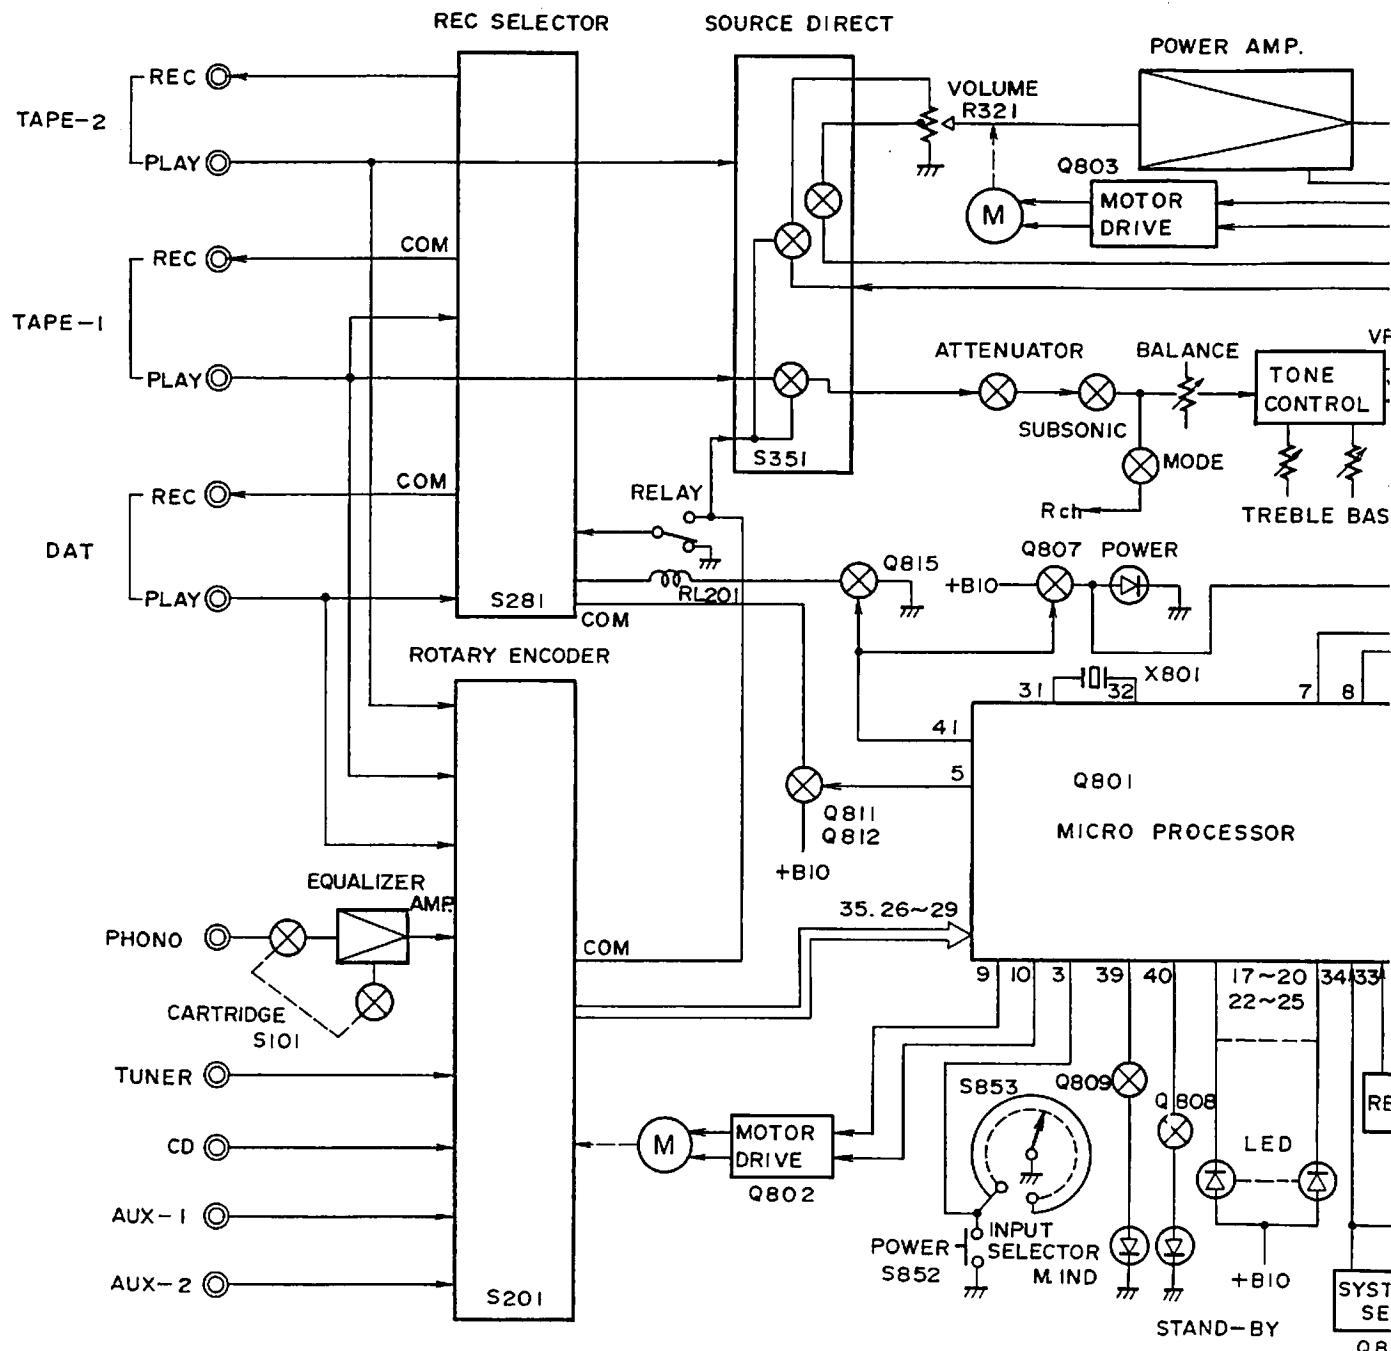



A-8870

A-8870

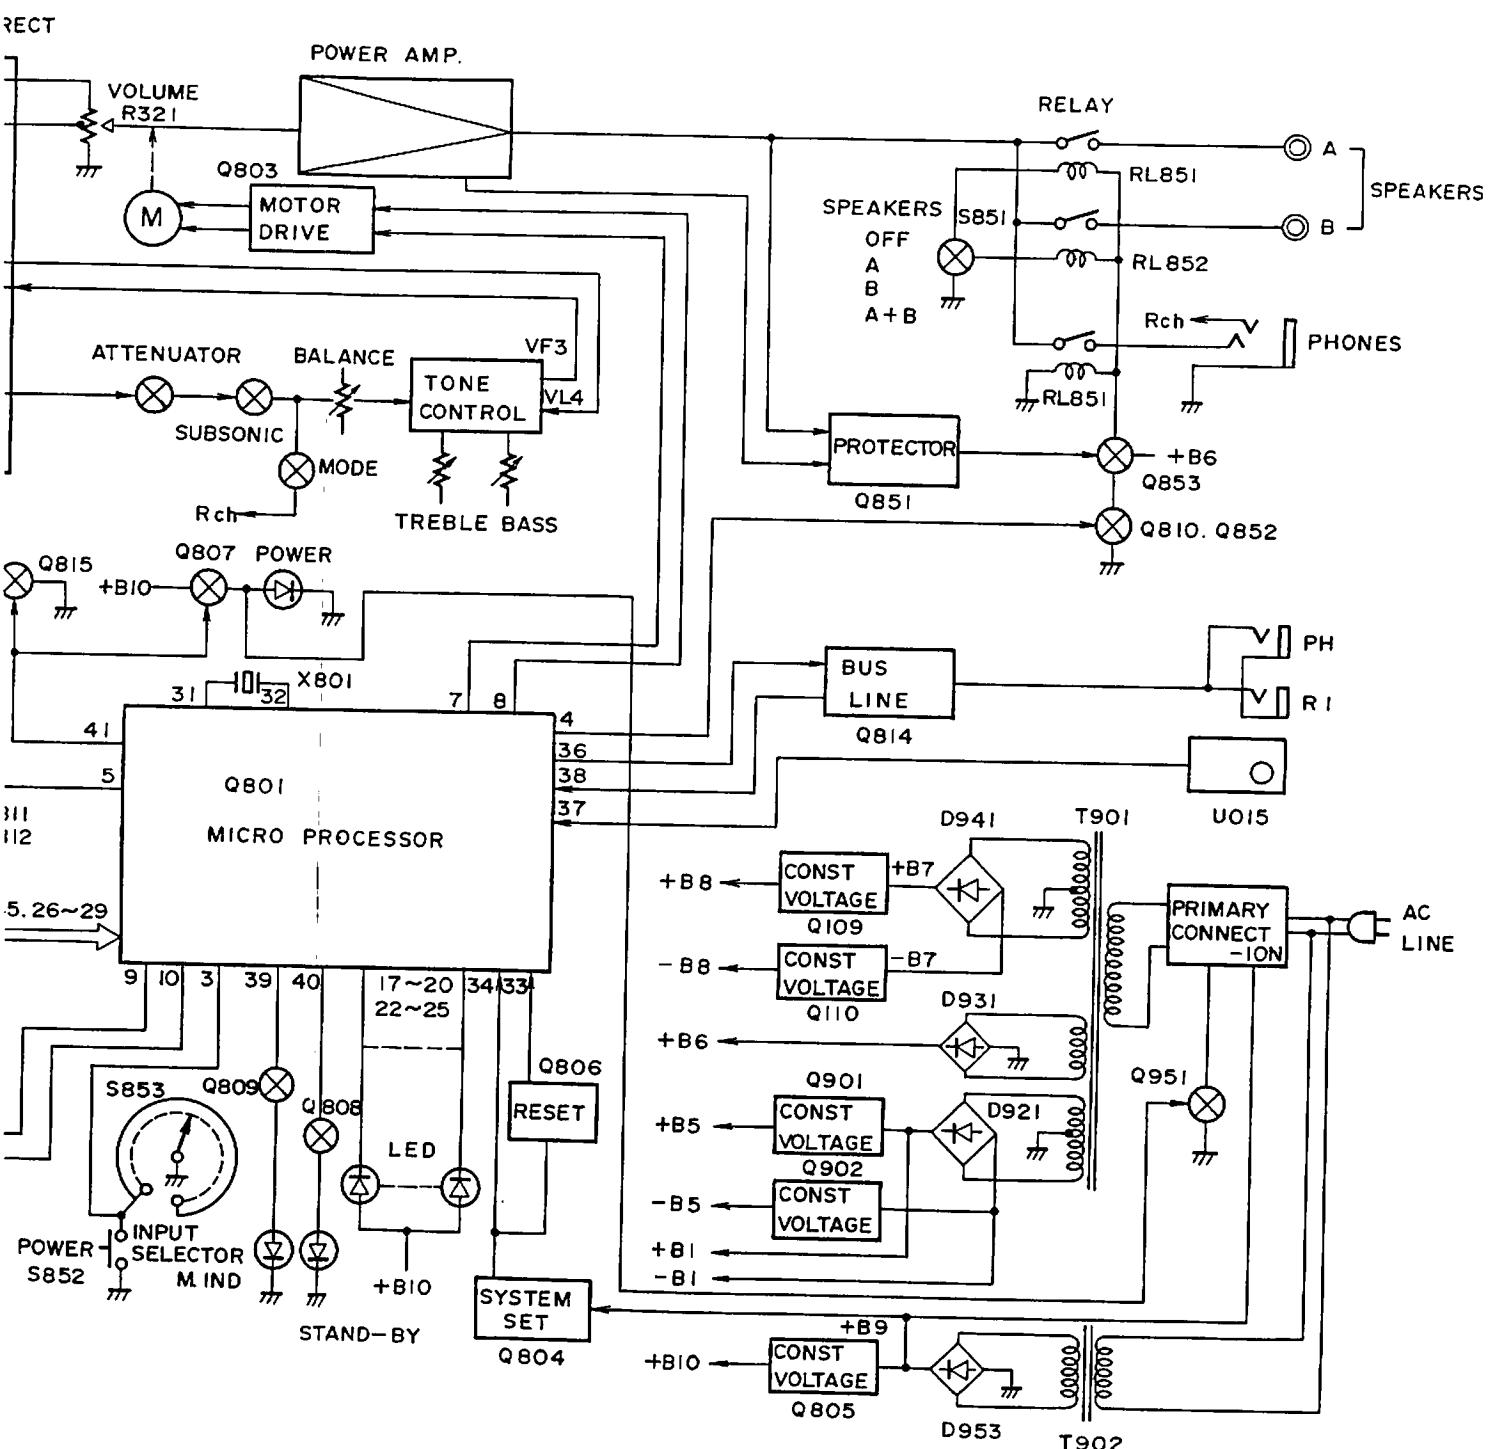

CHASSIS—EXPLODED VIEW

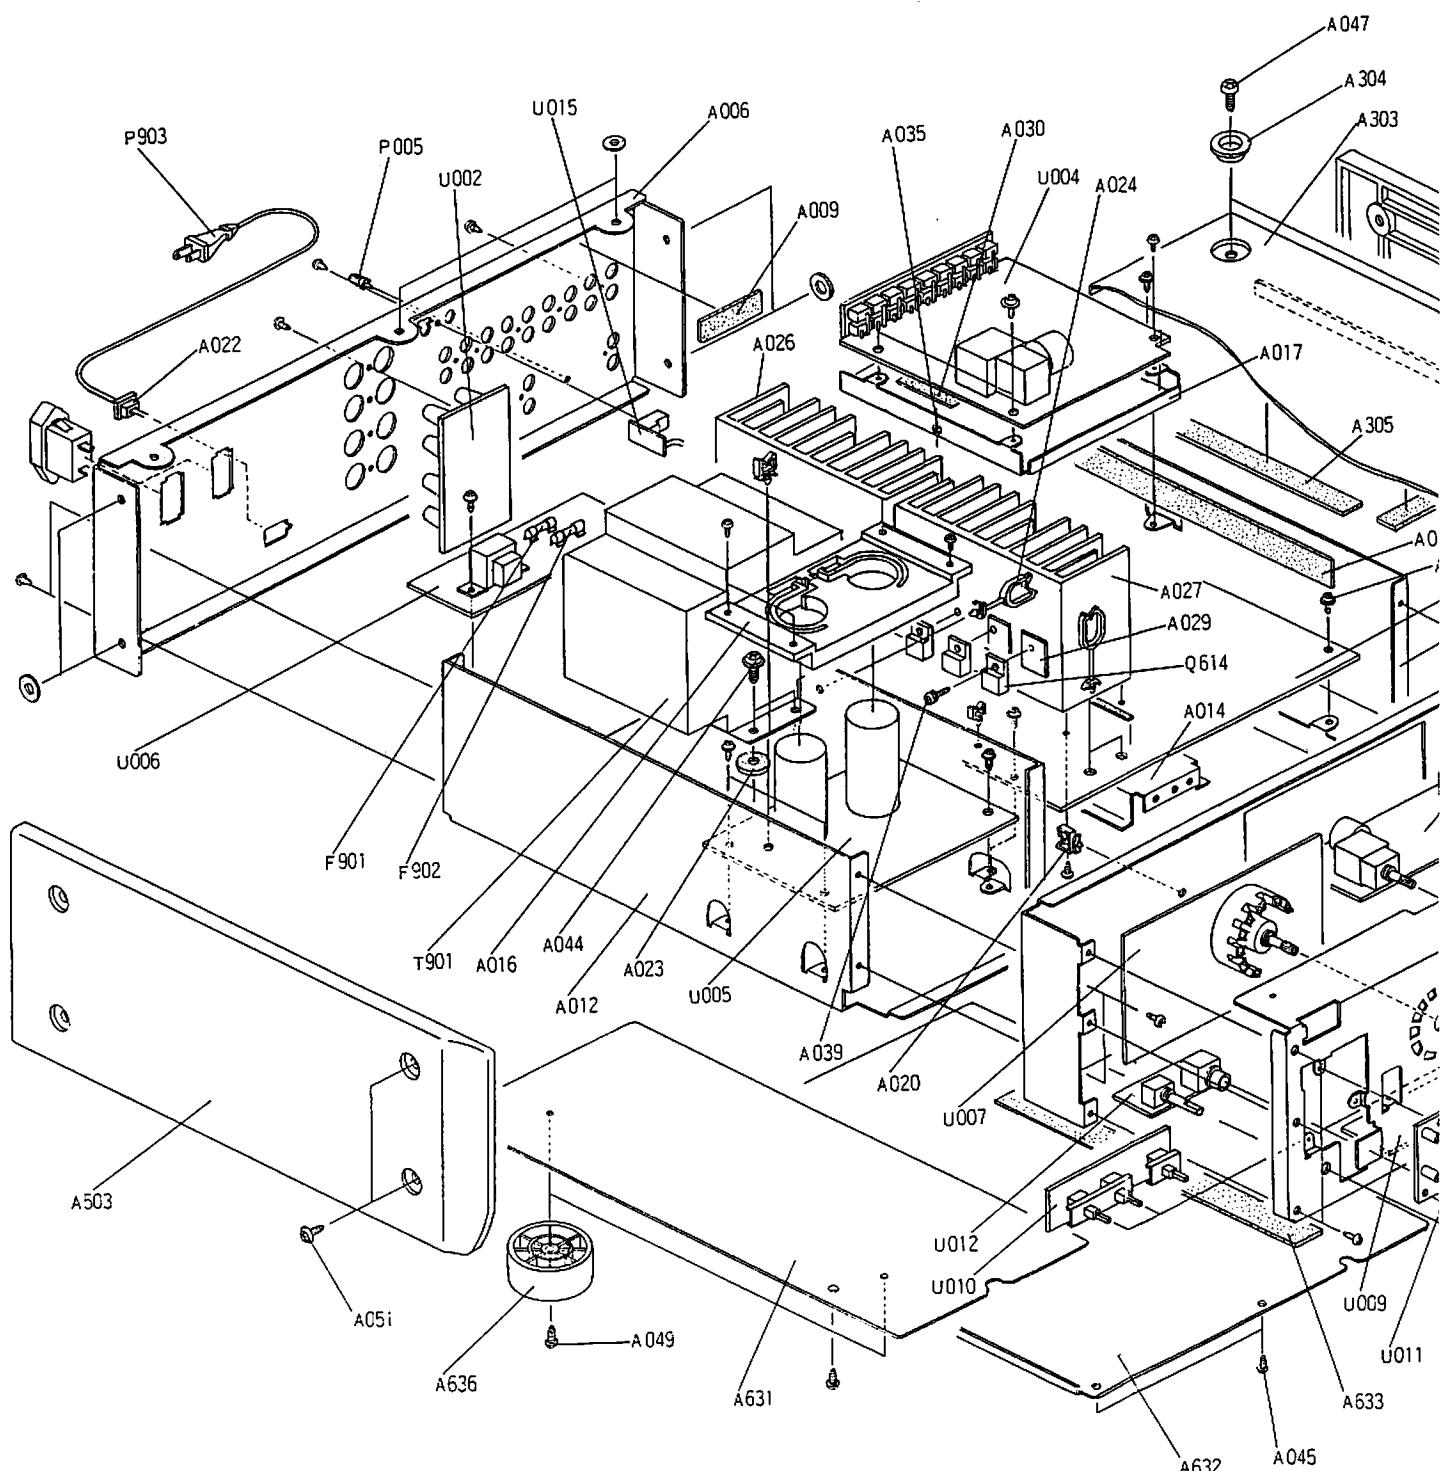

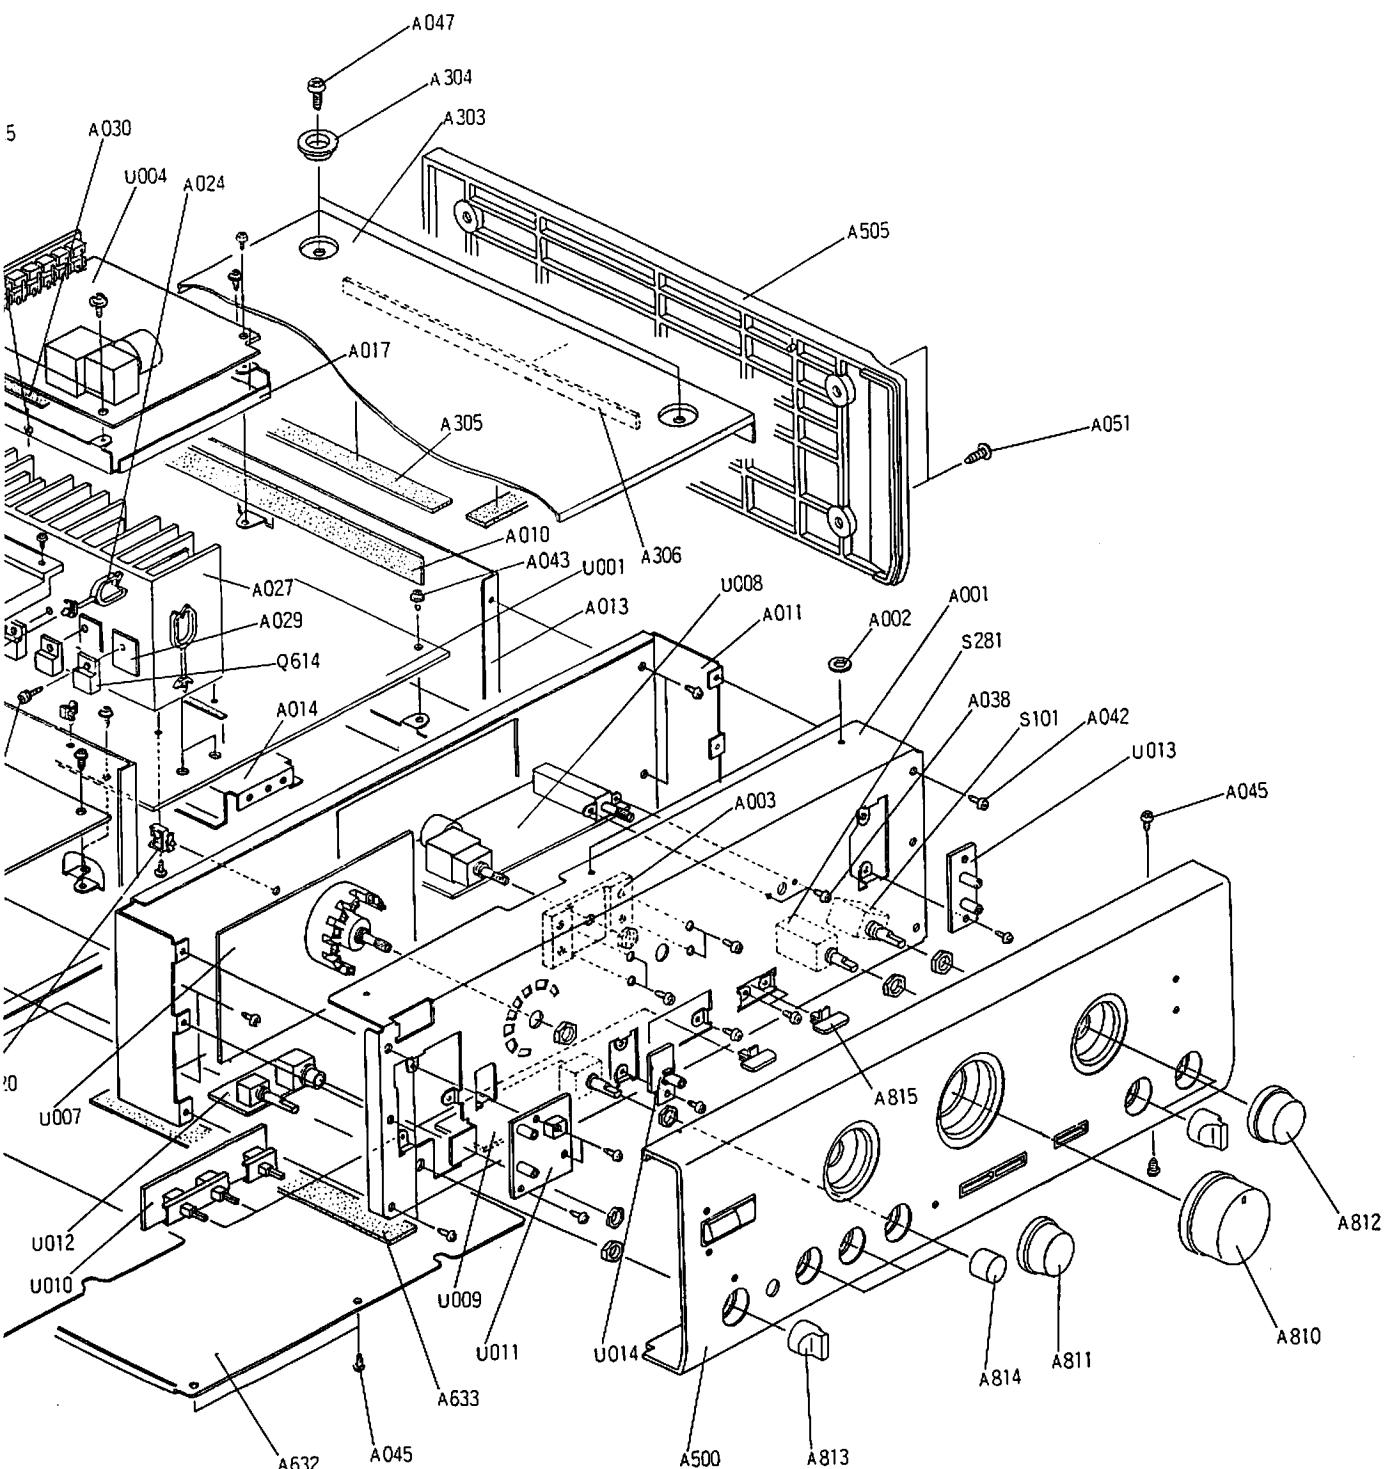

CHASSIS EXPLODED VIEW PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
A001	27110588-1C	FRONT BRACKET	A632	27170272A	BOTTOM BOARD (R)	
A002	27270212	SPACER	A633	28141024	20×240×2.5T, CUSHION	
A003	27270326A	SPACER (VOL.)	A634	27270212	SPACER	
A006	27121479A	BACK PANEL	A636	27175251	LEG ASS'Y	
A009	28140859	60×20×1.5T, CUSHION	A810	28324083A	KNOB (VOL.) [BLK]	
A010	28140695	25×240×1.5T, CUSHION	A810	28324413A	KNOB (VOL.) [SIL.]	
A011	27130622A	BRACKET (SHIELD)	A811	28324084A	KNOB (SEL.)[BLK]	
A012	27130623	BRACKET (L.)	A811	28324084-2	KNOB (SEL.)[SIL.]	
A013	27130624	BRACKET (R)	A812	28324085B	KNOB (D) [BLK]	
A014	27130656A	BRACKET (C)	A812	28324085-2	KNOB (D) [SIL.]	
A015	28170025	BUSHING	A813	28324086	KNOB (SP) [BLK]	
A016	27190846	HOLDER (CAPACITOR)	A813	28324416	KNOB (SP) [SIL.]	
A017	27130627	BRACKET (EQ)	A814	28324411	KNOB (TONE) [BLK]	
A020	27300833	WS-2NS, CRAMP	A814	28324412	KNOB (TONE) [SIL.]	
A022	27300750	#2271, BUSHING (AC CORD)	A815	28324088A	KNOB (PUSH) [BLK]	
A023	27270213	SPACER (PT)	A815	28324417	KNOB (PUSH) [SIL.]	
A024	27301394	III.-18-0, CRAMP	Q609, Q613	2201703	2SC3855-O OR	
A026	27160282	RADIATION	Q614, Q610	2201706	2SC3855-P OR	
A027	27160283	RADIATION		2201704	2SC3855-Y, TRANSISTOR	
A029	27301328	BFG-20, RADIATION SHEET	Q611, Q615	2201693	2SA1491-O OR	
A030	28140808	50×50×3T, CUSHION	Q616, Q612	2201696	2SA1491-P OR	
A035	800529	BUSHING (PC)		2201694	2SA1491-Y, TRANSISTOR	
A038	82143006	3P+6FN(BC), PAN-HEAD SCREW	▲ T901	2300707	NPT-1116P, POWER	
A039	801433	3SMS8WSW+14B(BC), SPECIAL TAP-TIGHT SCREW		25030348	TRANSFORMER [P]	
A042	834430088	3TT8+8B(BC), TAP-TIGHT SCREW	S101	25030349	NRSF-102-20BU, SWITCH	
A043	831130088	3TTW+8B, TAP-TIGHT SCREW	S281	25030349	OPERATION SECTION	
A044	830440109	4TTC+10C(BC), TAP-TIGHT SCREW		25060044	NRSF-104-20BU, SWITCH	
A045	801230	3STS+8BQ(BC), TAP-TIGHT SCREW	▲ P005	25050337	OPERATION SECTION	
A047	838440089	4TTB+8C(BC), TAP-TIGHT SCREW	▲ P901, P902	253148 OR	TERMINAL (GROUND)	
A049	831430088	3TTW+8B(BC), TAP-TIGHT SCREW	▲ P903	253150	NSCT-2P164, AC SOCKET	
A051	837440169	4TTT+16C(BC), TAP-TIGHT SCREW	▲ F901	252075	AS-CEE OR	
			▲ F902	252077	AS-CEE, POWER SUPPLY CABLE	
A303	28184464	TOP COVER	U001	IA295509-1A	▲ F901	2.5A-SE-EAK, FUSE
A304	27265155A	COSMETIC RING (COVER)	U002	IA295510-1A	▲ F902	4A-SE-EAK, FUSE
A305	28140695	25×240×1.5T, CUSHION	U004	IA295512-1A	NAAF-4209-1A, MAIN CIRCUIT PC	
A306	28140693	10×185×1.5T, CUSHION	U005	IA295513-1	BOARD ASS'Y	
A307	28141009	125×195×1.5T, CUSHION	U006	IA295514-1D	NAFTC-4210-1A, SPEAKER	
A500	1A295121	FRONT PANEL ASS'Y [BLK]	U007	IA295515-1A	TERMINAL PC BOARD ASS'Y	
(A511)	27265219	COSMETIC RING (L.) [BLK]	U008	IA295516-1	NASW-4212-1A, INPUT CIRCUIT PC	
(A512)	27265224A	COSMETIC RING ASS'Y (SEL.) [BLK]	U009	IA293513-1	BOARD ASS'Y	
(A516)	28198742	FACET	U010	IA293514-1D	NAPS-4213-1, POWER SUPPLY	
(A518)	27265223	COSMETIC RING (D) [BLK]	U011	IA293515-1A	CIRCUIT (1) PC BOARD ASS'Y	
(A519)	27265220C	COSMETIC RING (R) [BLK]	U012	IA293519-1	NADG-4215-1A, MICROPROCESSOR	
(A520)	28198742	FACET	U013	IA293520-1	CIRCUIT PC BOARD ASS'Y	
(A523)	27265221A	COSMETIC RING (VOL.) [BLK]	U014	IA293518-1	NAAF-4216-1, VOLUME & DIRECT	
(A524)	28135199	NAME PLATE		IA293516-1	SWITCH CIRCUIT PC BOARD	
(A801)	28324082A	KNOB ASS'Y (POW) [BLK]	U009	IA293518-1	ASS'Y	
(A805)	28191568	CLEAR PLATE (RE)	U010	IA293519-1	NAAF-4218-1, MUTING/SUBSONIC	
(A806)	28198753	FACET	U011	IA293520-1	SWITCH PC BOARD ASS'Y	
(A807)	28198742	FACET	U012	IA293521-1	NASW-4219-1, TONE CONTROL	
A808	28199190	FILM	U013	IA293521-1	CIRCUIT PC BOARD ASS'Y	
A500	1A296121	FRONT PANEL ASS'Y [SIL.]	U014	IA293522-1	NADIS-4220-1, PHOTO RECEIVING	
(A511)	27265219-2	COSMETIC RING (L.) [SIL.]		IA293522-1	CIRCUIT PC BOARD ASS'Y	
(A512)	27265224-3A	COSMETIC RING ASS'Y (SEL.) [SIL.]		IA293523-1	NADIS-4222-1, LED PC BOARD	
(A518)	27265223-3	COSMETIC RING (D) [SIL.]		ASS'Y	ASS'Y	
(A519)	27265220-2A	COSMETIC RING (R) [SIL.]			NADIS-4223-1, LED PC BOARD	
(A523)	27265221-1	COSMETIC RING (VOL) [SIL.]		ASS'Y	ASS'Y	
(A801)	28324414	KNOB ASS'Y (POW) [SIL.]				
A503	28185359	SIDE BOARD (L)				
A505	28185360	SIDE BOARD (R)				
A631	27170271	BOTTOM BOARD (L.)				

REF.NO.	PART NO.	DESCRIPTION
U015	1A293524-1A	NAETC-4224-1A, REMOTE CONTROL TERMINAL PC BOARD ASS'Y
U016	1A295525-1A	NAETC-4225-1A, TUNER TERMINAL PC BOARD ASS'Y

NOTE: [BLK]: ONLY BLACK MODEL.
[SIL]: ONLY SILVER MODEL

NOTE:
THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

PRINTED CIRCUIT BOARD PARTS LIST

MAIN CIRCUIT PC BOARD (NAAF-4209-1A)

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
		ICs			
Q105, Q106	222902	NJM5532D-D	Q901	2201512 OR	2SD1200-Q OR
Q109	222780205MIT	M5F78M20L	Q902	2201513	2SD1200-R
Q110	222790205MIT	M5F79M20L	Q903, Q904	2211945	2SB889-Q OR
Q519, Q520	222570	NJM4560D-X	Q905	2211255	2SB889-R
Q585	22240040	NJM2902N	Q906	2211455	2SK246-GR
Q586	226007	TLP-531			2SC1815-GR
Q851	222584	TA7317P			2SA1015-GR
		Transistors			Diodes
Q101, Q102	2211535 OR	2SK146-GR OR	D101~D104	225251	TLR112, LED
	2211536 OR	2SK146-BL OR	D505, Q506		
	2211537	2SK146-V	D511~D516	223163	ISS133
Q107, Q108	2211255	2SC1815-GR	D517~D520	225251	TLR112, LED
Q501, Q502	2212805 OR	2SK389-GR OR	D851, D852	223163	ISS133
	2212806 OR	2SK389-BL OR	D853	224450623	MTZ6.2C, Zener
	2212807	2SK389-V	D854	223163	ISS133
Q503~Q506	2211733 OR	2SC1845-E OR	D901~D903	224450562	MTZ5.6B, Zener
	2211732	2SC1845-F			
Q507, Q508	2213666 OR	2SA1240-F OR			Coils
	2213667	2SA1240-G	L101, L102	231133	NCH1188
Q511, Q512	2211455 OR	2SA1015-GR OR	L601, L602	231134	S-0.8E
	2211454	2SA1015-Y	L201~L203	230905	BL02RN1-R62
Q513, Q514	2211354 OR	2SA949-Y OR			Capacitors
	2211353	2SA949-O	C103, C104	373631024	1000 pF, 100V, Film (KP)
Q517, Q518	2211255 OR	2SC1815-GR OR	C105, C106	373631514	150 pF, 100 V, Film (KP)
	2211256	2SC1815-BL	C107, C108	372121014	100 pF, 50V, Styrene
Q581~Q584	2211634 OR	2SC2229-Y OR	C109, C110	391222217	220 μ F, 6.3V, Elect.(MUSE)
Q589, Q601	2211633	2SC2229-O	C111, C112	372122024	2000 pF, 50V, Styrene
Q602			C113~C116	379122434	0.024 μ F, 50V, Film (DEW)
Q603, Q604	2211354 OR	2SA949-Y OR	C117, C118	374724334	0.043 μ F, 50V, Film (TF)
	2211353	2SA949-O	C119~C122	391651017	100 μ F, 25V, Elect.(FS)
Q605, Q606	2202034 OR	2SD1763A-D OR	C123, C124	373632224	2200 pF, 100V, Film (KP)
	2202035	2SD1763A-E	C147, C148	354764719	470 μ F, 35V, Elect.
Q607, Q608	2202024 OR	2SB1186A-D OR	C149, C150	354741019	100 μ F, 16V, Elect.
	2202025	2SB1186A-E	C151, C152	354761019	100 μ F, 35V, Elect.
Q617, Q618	2211634 OR	2SC2229-Y OR	C153, C154	391254717	470 μ F, 25V, Elect.(MUSE)
	2211633	2SC2229-O	C155, C156		
Q619, Q620	2211793 OR	2SA992-E OR	C157, C158	354761019	100 μ F, 35V, Elect.
	2211792	2SA992-F	C159, C160	373732234	0.022 μ F, 100V, Film (MKT)
Q852	2212600	DTA124ES	C501, C502	373631014	100 pF, 100V, Film (KP)
Q853	2211504	2SA950-Y	C509, C510		

CIRCUIT NO.	PART NO.	DESCRIPTION
C511, C512	372123304	33 pF, 50V, Styrene
C513~C516	391252207	22 μ F, 25V, Elect.(MUSE)
C517, C518	372123304	33 pF, 50V, Styrene
C519, C520	354722219	220 μ F, 6.3V, Elect.
C521, C522	374791044	0.1 μ F, 63V, Film (TF)
C523, C524	391242217	220 μ F, 16V, Elect.(MUSE)
C525~C526	373732234	0.022 μ F, 100V, Film (MKT)
C527, C528	373734734	0.047 μ F, 100V, Film (MKT)
C529, C530	354790479	4.7 μ F, 100V, Elect.
C581	391221027	1000 μ F, 6.3V, Elect.(MUSE)
C582	354721019	100 μ F, 6.3V, Elect.
C583	354764709	47 μ F, 35V, Elect.
C605, C606	391241017	100 μ F, 16V, Elect.(MUSE)
C607, C608	373791044	0.1 μ F, 63V, Film (MKT)
C609, C610	374794734	0.047 μ F, 63V, Film (TF)
C611, C612	374722235	0.022 μ F, 50V, Film (TF)
C613, C614	379121035	0.01 μ F, 50V, Film (DEW)
C615~C622	373791044	0.1 μ F, 63V, Film (MKT)
C851	354722219	220 μ F, 6.3V, Elect.
C852	354742209	22 μ F, 16V, Elect.
C853	354784799	0.47 μ F, 50V, Elect.
C855	354743319	330 μ F, 16V, Elect.
C858, C859	374721044	0.1 μ F, 50V, Film (TF)
C901~C903	354774719	470 μ F, 63V, Elect.
C905, C906		
C909, C910	354761009	10 μ F, 35V, Elect.
C911, C912	354724719	470 μ F, 6.3V, Elect.
C913, C914	354751029	1000 μ F, 25V, Elect.
C915, C916	354754719	470 μ F, 25V, Elect.
C917	391221027	1000 μ F, 6.3V, Elect.(MUSE)
C918	374724734	0.047 μ F, 50V, Film (TF)
Resistors		
R151, R152	442523304	33 Ω , 1/2W, Metal oxide film
R527, R528	441622734	27 k Ω , 1W, Metal oxide film
R535, R536	5210062	N06HR4.7KBD, Semi-fixed
R601, R602	442522224	2.2 k Ω , 1/2W, Metal oxide film
R603, R604	442522214	220 Ω , 1/2W, Metal oxide film
R607~R614	442520224	2.2 Ω , 1/2W, Metal oxide film
R615~R618	4000078	0.33 Ω , 5W, Metal plate
R623~R626		
R633, R634	442820824	8.2 Ω , 3W, Metal oxide film
R862	442525114	510 Ω , 1/2W, Metal oxide film
R875, R876	441623914	390 Ω , 1W, Metal oxide film
R901~R903	441620684	6.8 Ω , 1W, Metal oxide film
R905, R906	442524314	430 Ω , 1/2W, Metal oxide film
Switch		
S101	25065439	NSS-62159, Slide switch
Relays		
RL851, RL852	25065316	NRL-2P7A-DC12-043
Plug		
P104	25055100	NPLG-3P84
P256	25055133	NPLG-3P117
P321	25055137	NPLG-7P121
P852	25055139	NPLG-9P123
Terminal		
P101	25045341	NPJ-2PDIB1-192
Socket ass'y		
P103	2009990200	NSAS-06P0282
P752	2009990003	NSAS-06P0007
P753	2009990004	NSAS-06P0008
Jumper sockets		
JL211, JL213	25050268	NSCT-4P96
JL212, JL951	25050267	NSCT-3P95
Bracket		
	27141059	(Ground)
	27301427	(Bus)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Cushion	
	28140963	
	Holder clamp	
	27301186	MSA-1606
	27301271	MSA-1609

SPEAKER TERMINAL PC BOARD (NAETC-4210-1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
P751, P752	25060162	NTM-4PDPMN088


INPUT CIRCUIT PC BOARD (NASW-4212-1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
D201	223163	ISS133
C201	374721034	0.01 μ F, 50V, Film (TF)
	Switches	
S201	25030330	NRS-2211-BA, Rotary
S281	25065438	NSS-84158, Slide
RL201	25065397	NRL-2P1A-DC5-068
P201~P204	25045305	NPJ-4PDDBL164
P207	25045304	NPJ-2PDDBL163
	Plugs	
P205, P206	25055133	NPLG-3P117
P103A	25055139	NPLG-9P123
P211	25055139	NPLG-9P123
P256	2009990090	NSAS-6P0128
JL201	25050267	NSCT-3P95

POWER SUPPLY CIRCUIT (1) PC BOARD (NAPS-4213-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
D921	22380040	RBV-602L
D922, D923	22380012	HIER303F
D931	22380039	ID4B42
D932	22380032	ISR139-100
D941	22380039	ID4B42
	Coils	
I921, I922	230906	BL02RN2-R62
	Capacitors	
C921, C922	3504246	18000 μ F, 63V, Elect.
C923~C925	374503345	0.33 μ F, 125V, Film (ME)
C931, C932	374722235	0.022 μ F, 50V, Film (TF)
C933	354741029	1000 μ F, 16V, Elect.
C934	354744719	470 μ F, 16V, Elect.
C941, C942	354761029	1000 μ F, 35V, Elect.
C943, C944	374722235	0.022 μ F, 50V, Film (TF)
C945	374501045	0.1 μ F, 125V, Film (ME)


CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
		Resistors			Fuse label
R931	442520104	1 Ω, 1/2W, Metal oxide film	△ F902b	29360374	T4A/250V
R932	441623314	330 Ω, 1W, Metal oxide film			
R941, R942	442522294	0.22 Ω, 1/2W, Metal oxide film			
		Jumper socket			MICROPROCESSOR CIRCUIT PC BOARD (NADG-4215-1A)
JL941	25050267	NSCT-3P95			
		Socket ass'y			
P104	2009990069	NSAS-6P0106			
		Plug			ICs
P951a	25055133	NPLG-3P117	Q801	22240377	TMP47C440AN-1997
		Bracket	Q802	22240358	LB1638
	27301367	(Bus)	Q803	22240239	TA7291S
		Radiator	Q804	222951	M51943BSL
D921a	27160265	RAD-82	Q805	222780055	78M05HF
			*	222780565	78M56)
		POWER SUPPLY CIRCUIT (2) PC BOARD (NAETC-4214-1D)			Transistors
			Q806	2213160	DT124ES
			Q807~Q809	2213510	DTA114ES
			Q810	2211255	2SC1815-GR
			Q811	2213090	DTA114YS
			Q812	2213650	DTD113ZS
			Q813	2211164	2SC2120-Y
			Q814	2213090	DTA114YS
			Q815	2211504	2SA950-Y
		Diodes			Diodes
D951	223163	ISS133	D801, D816	223163	ISS133
D952	22380039	ID4B42	D803~D807		
		Transformer	D802	224450562	MTZ5.6B, Zener
△ T902	2300711	NPT-1117P	D808~D815	225142DX2	SEL2913K-DX2, LED
		Capacitors	D817	224450562	MTZ5.6B, Zener
C951-C955	374721034	0.01 μF, 50V, Film (TF)			Coils
C956	354752229	2200 μF, 25V, Elect.	L801	233409K220	NCII-1284
△ C971	3500065A	0.01 μF, AC400V/125V, Film (IS)	L802~L807	230906	BL02RN2-R62
△ C972	3500065A	0.01 μF, AC400V/125V, Film (IS)			Osc. element
		Condensor cover	X801	3010150	CST4.00M3W
△ C972a, C973a	27301216	SB1925A			Capacitors
			C803, C807	354744709	47 μF, 16V, Elect.
		Resistors	C808	375524744	0.47 μF, 50V, Film (MMT)
R951	442520104	1 Ω, 1/2W, Metal oxide film	C810	3000051	0.047 F, 5.5V, Super
R952	441628214	820 Ω, 1W, Metal oxide film	C816	374721044	0.1 μF, 50V, Film (TF)
		Relay	C819	354724719	470 μF, 6.3V, Elect.
△ RL901	25065248	NRL-1P15A-DC12-29	C821	354744709	47 μF, 16V, Elect.
		Terminals	C822	354761009	10 μF, 35V, Elect.
			C824	354744709	47 μF, 16V, Elect.
			C827	353741009	10 μF, 16V, Elect.
P951	2009990180	NSAS-6P0250	C829, C830	374721035	0.01 μF, 50V, Film (TF)
		Fuse holder			Resistors
△ F901a, F902a	25050065	YS11403T	R817, R818	49163103405	RM1/10J10K×5, Resistor network
			R830	441620564	5.6 Ω, 1W, Metal oxide film
					Socket ass'y
			P211	2009990110	NSAS-18P0167
			P801	2000871	NSAS-6P827

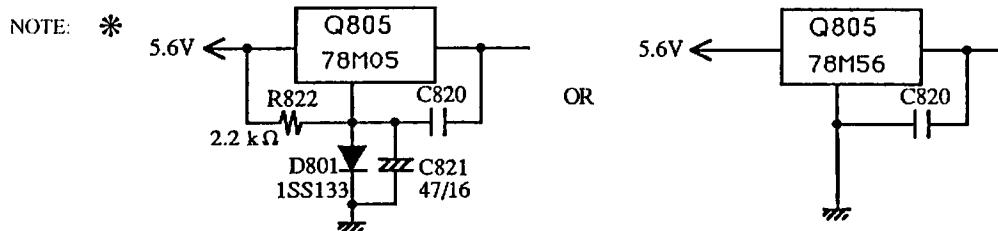


CIRCUIT NO.			DESCRIPTION			SPEAKER SWITCH CIRCUIT PC BOARD (NASW-4221-1)		
Q805a	Radiator 27160145	RAD-51	D855	Diode 223163	ISS133			
S853	Switch 25030334	NRS-112-25RSM	S851	Switch 25030335	NRSF-124-20BU, Rotary			
	Holder 27190786	(LED-8)	P851	Stereo jack 25045337	HLJ4317-01-3120			
VOLUME & DIRECT SWITCH CIRCUIT PC BOARD (NAAF-4216-1)			RL853	Relay 25065174	NRI-2P1A-DC12-09			
CIRCUIT NO.			DESCRIPTION					
R321	Resistor 5104294	N27DGL50KT30, Variable	P852	Socket ass'y 2009990185	NSAS-18P0255			
S351	Switch 25030336A	NRS-184-25SS, Rotary		Shield plate 27150208				
P205	Socket ass'y 2000809	NSAS-6P765	LED PC BOARD (NADIS-4222-1)					
P206	2000630	NSAS-6P586	CIRCUIT NO.	PART NO.	DESCRIPTION			
P321	2009990179	NSAS-14P0249	D203, D204	Diodes 225142DX2	SEI.2913K-DX2, LED			
JL401A	Jumper socket 25050267	NSCT-3P95	JL.210	Jumper socket 25050267	NSCT-3P95			
MUTING/SUBSONIC SWITCH PC BOARD (NAAF-4218-1)				Holder 27190787	(LED-1)			
CIRCUIT NO.			DESCRIPTION			LED PC BOARD (NADIS-4223-1)		
C301~C304	Capacitors 374721635	0.016 μ F, 50V, Film (TF)	CIRCUIT NO.	PART NO.	DESCRIPTION			
C305, C306	374721825	1800 pF, 50V, Film (TF)	D821	Diode 225142DX2	SEI.2913K-DX2			
C307, C308	374728234	0.082 μ F, 50V, Film (TF)		Holder 27190787	(LED-1)			
R301	Resistors 5148107A	N16RGMC250KMN25, Variable	REMOTE CONTROL TERMINAL PC BOARD (NAETC-4224-1A)					
R302	5142002	N16RGM11C100K25, Variable	CIRCUIT NO.	PART NO.	DESCRIPTION			
R303	5144011	N16RGM11C70K88K25, Variable	P251	Mini jack 25045172	HSJ1003-01-020			
TONE CONTROL CIRCUIT PC BOARD (NASW-4219-1)			P801a	Plug 25055133	NPLG-3P117			
CIRCUIT NO.			DESCRIPTION			TUNER TERMINAL PC BOARD (NAETC-4225-1A)		
C331, C332	Capacitors 374724744	0.47 μ F, 50V, Film (TF)	CIRCUIT NO.	PART NO.	DESCRIPTION			
S331 (S332)	Switches 25035601	NPS-222-L565	P221	Terminal 25045307	NPJ-2PDBL166			
S333	25035584	NPS-122-L546						
PHOTO RECEIVING CIRCUIT PC BOARD (NADIS-4220-1)								
CIRCUIT NO.			DESCRIPTION			<p>NOTE: THE COMPONENTS IDENTIFIED BY MARK  ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PARTS NUMBER SPECIFIED.</p>		
U015	Photo receiving unit 241300X3	GPIU50XS						
D831~D833	Diodes 223163	ISS133						
D834~D836	225142DX2	SEI.2913K-DX2, LED						
C831	Capacitor 354744709	47 μ F, 16V, Elect.						
S852	Switch 25035548	NRS-111-S510						
	Holder 27190787	(LED-1)						

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE


NAETC-4210

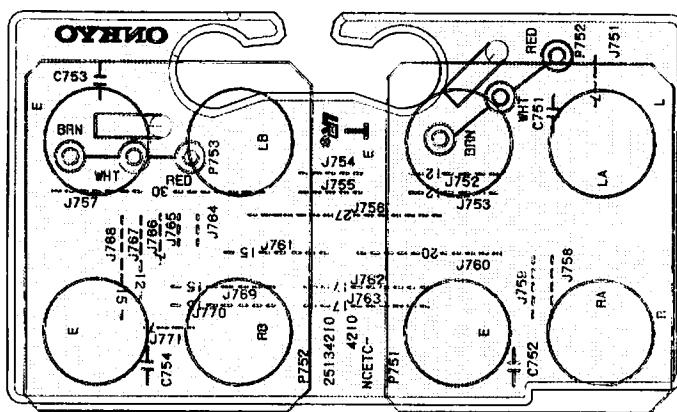


NAETC-4211

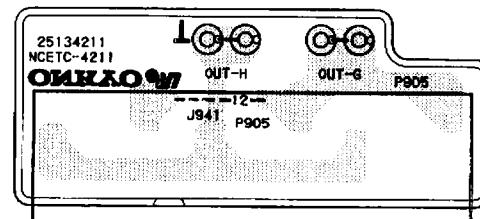


NASW-4212

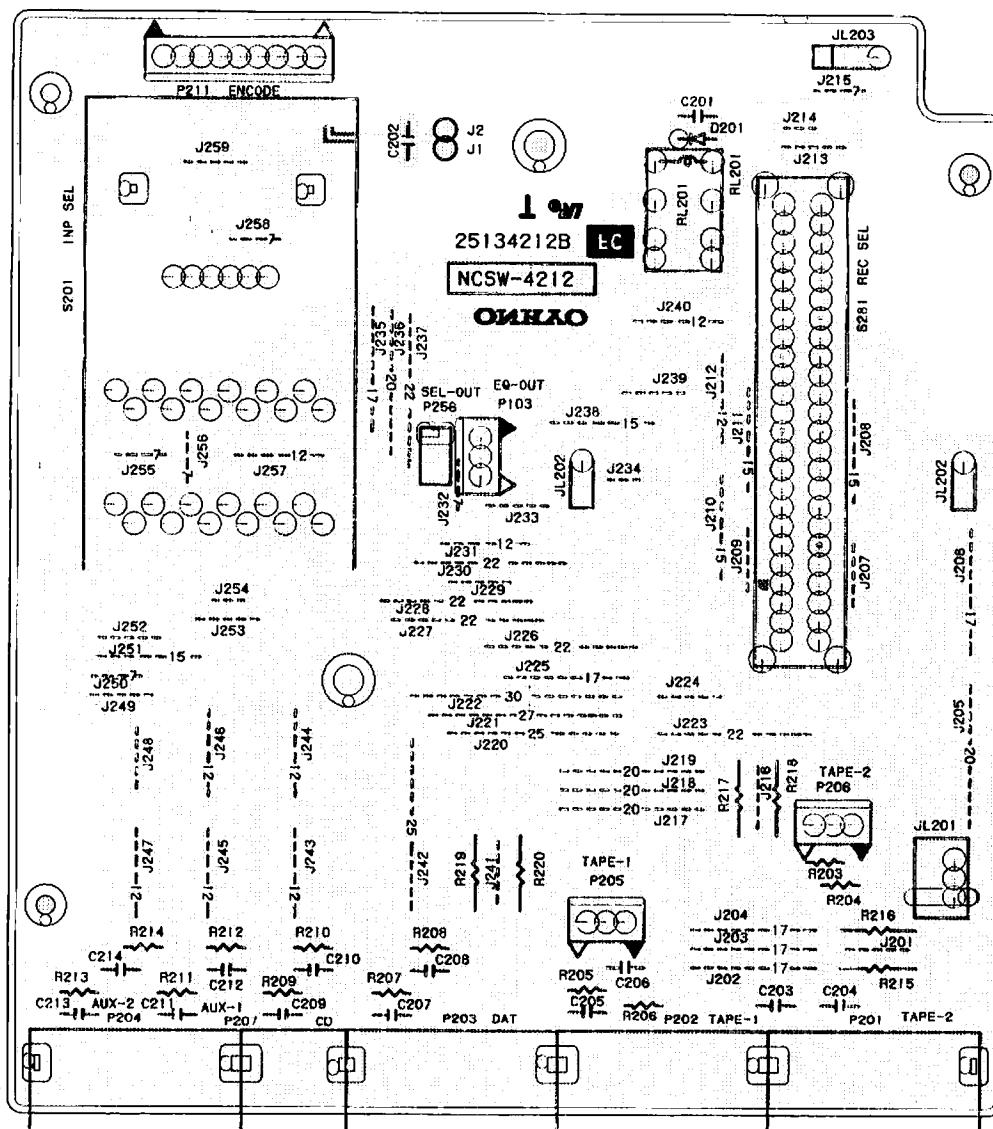


NAAF-4209

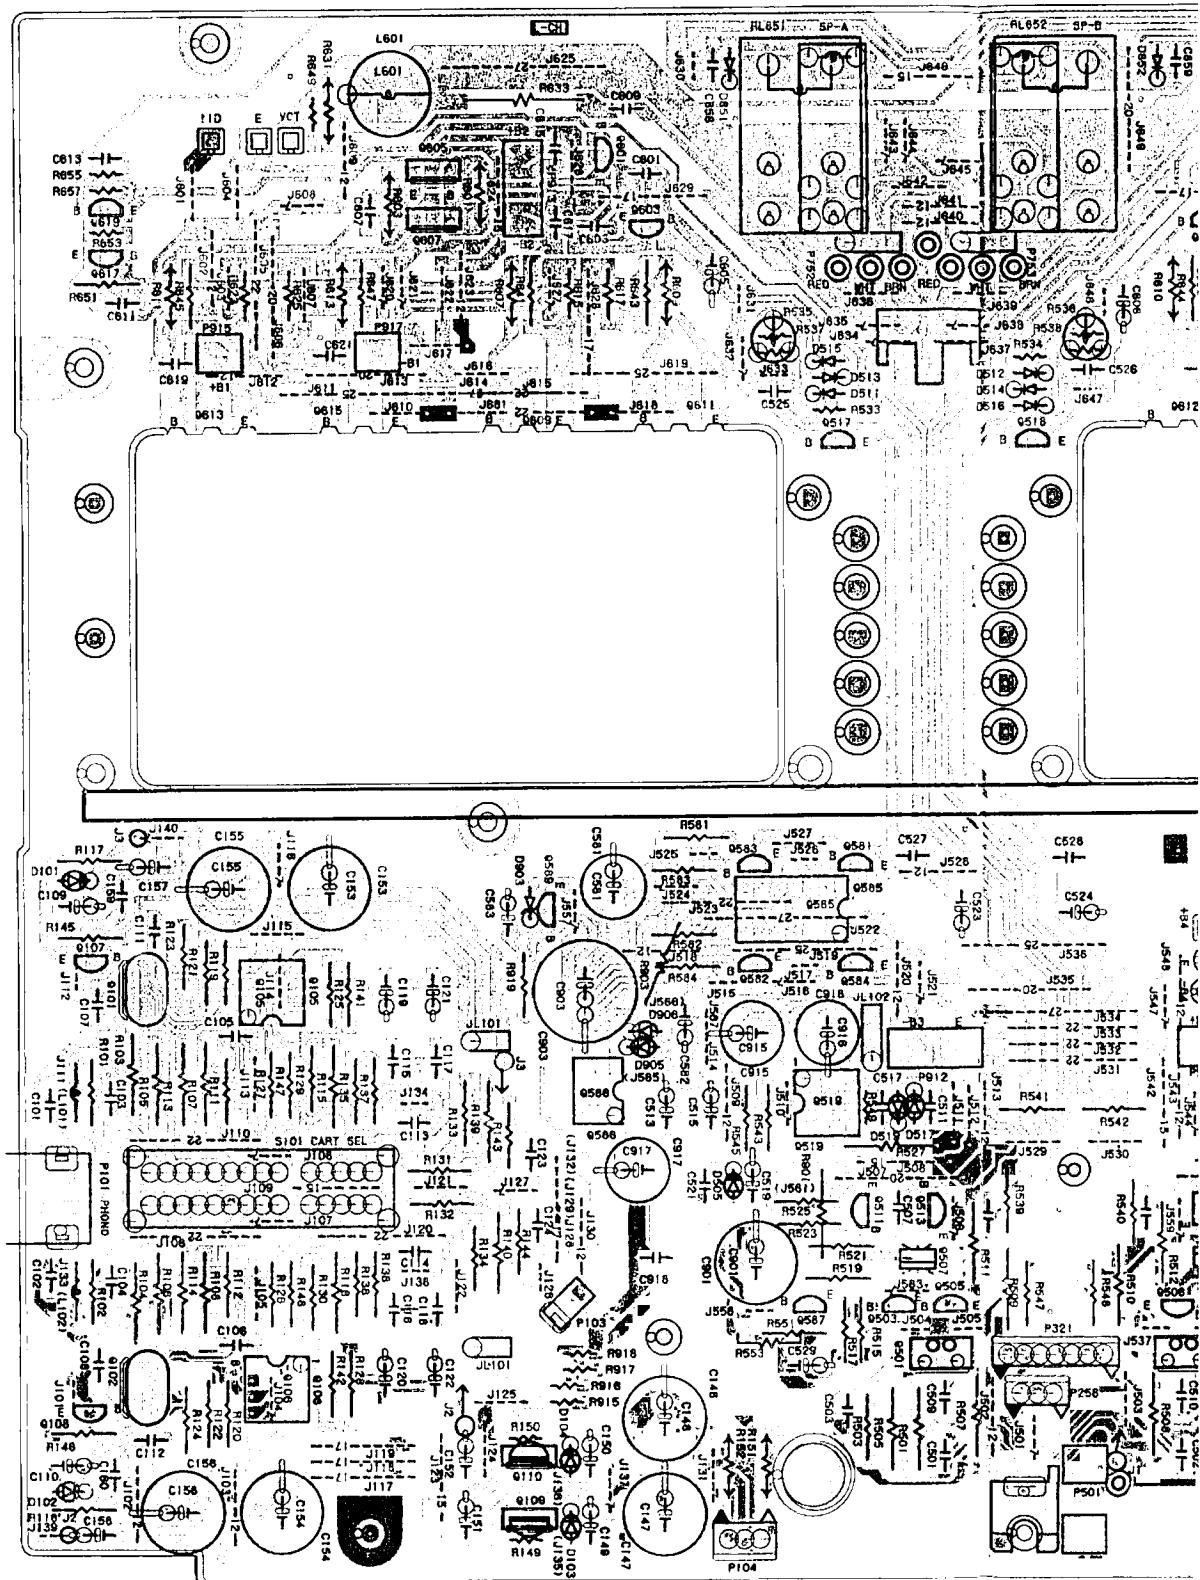


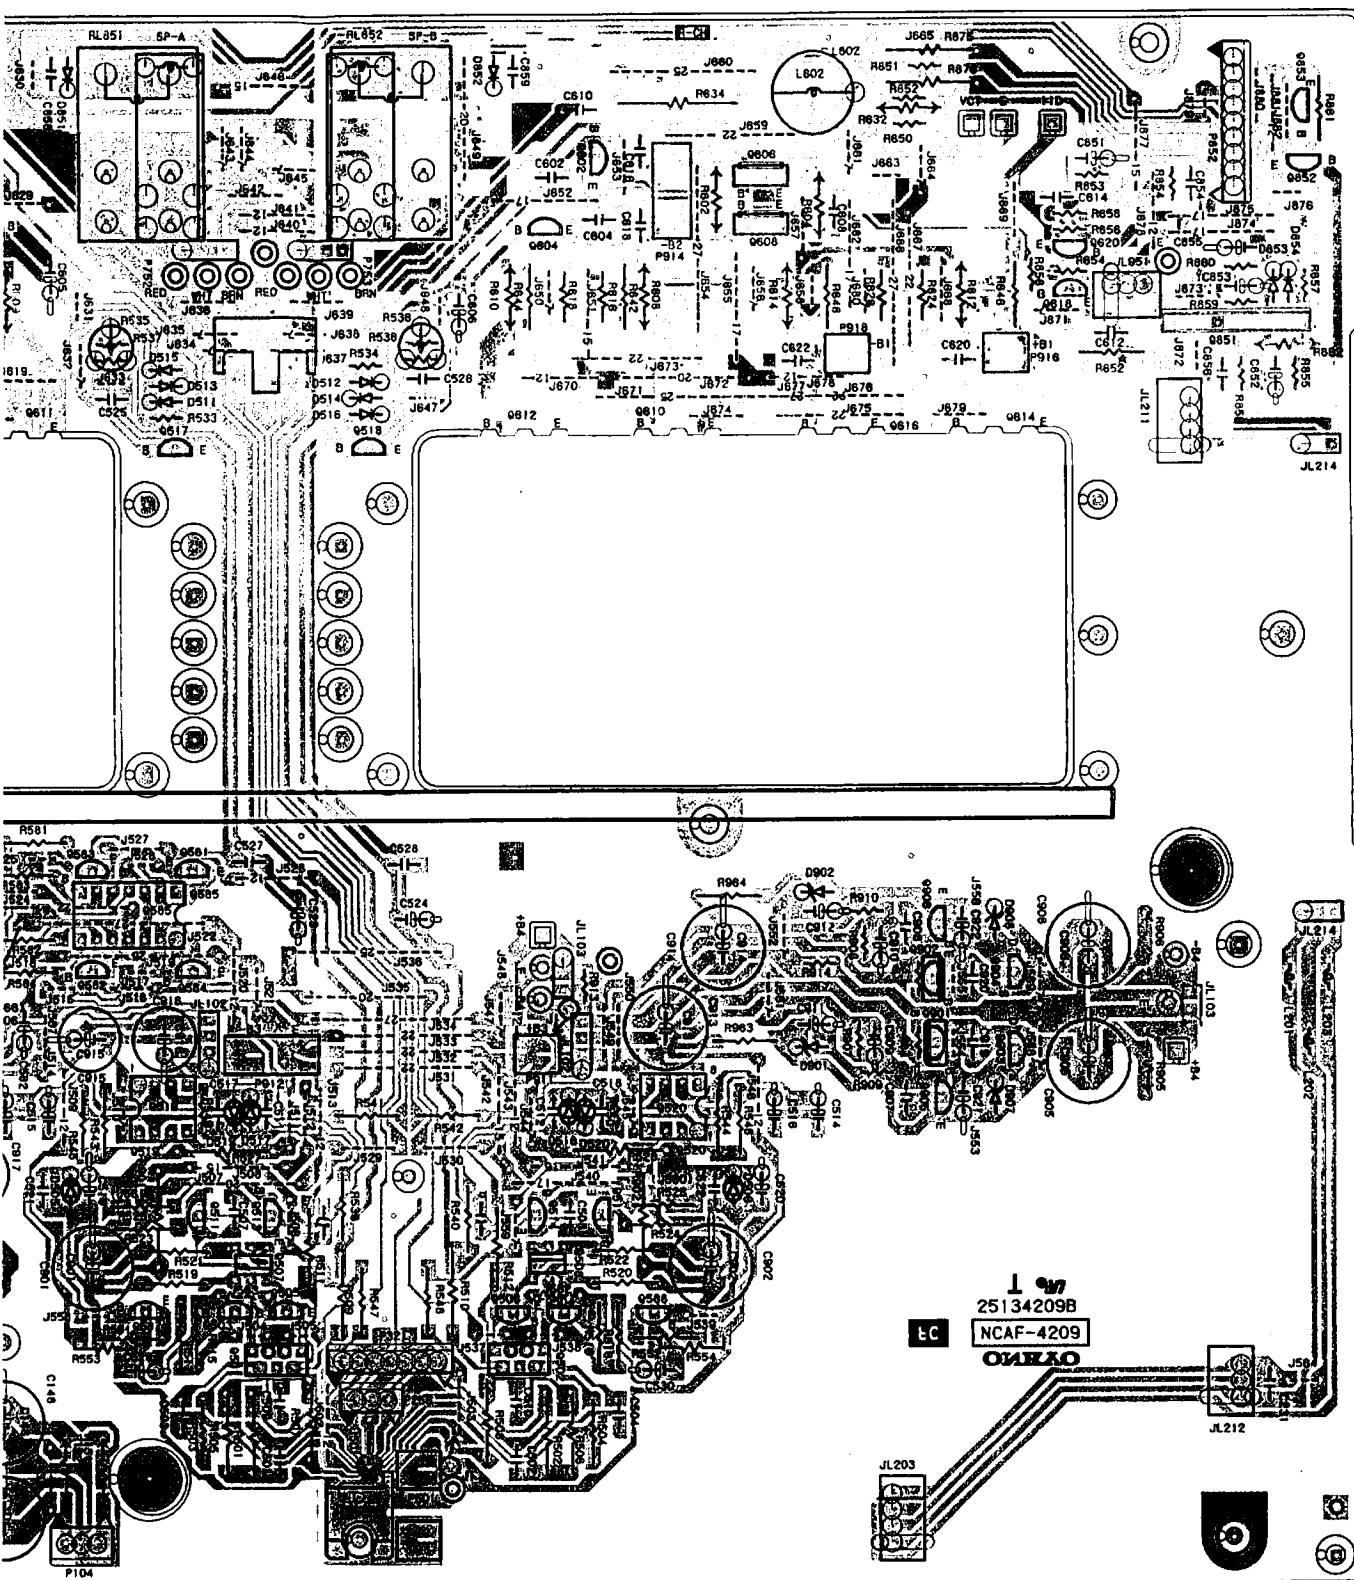


NAPS-4213

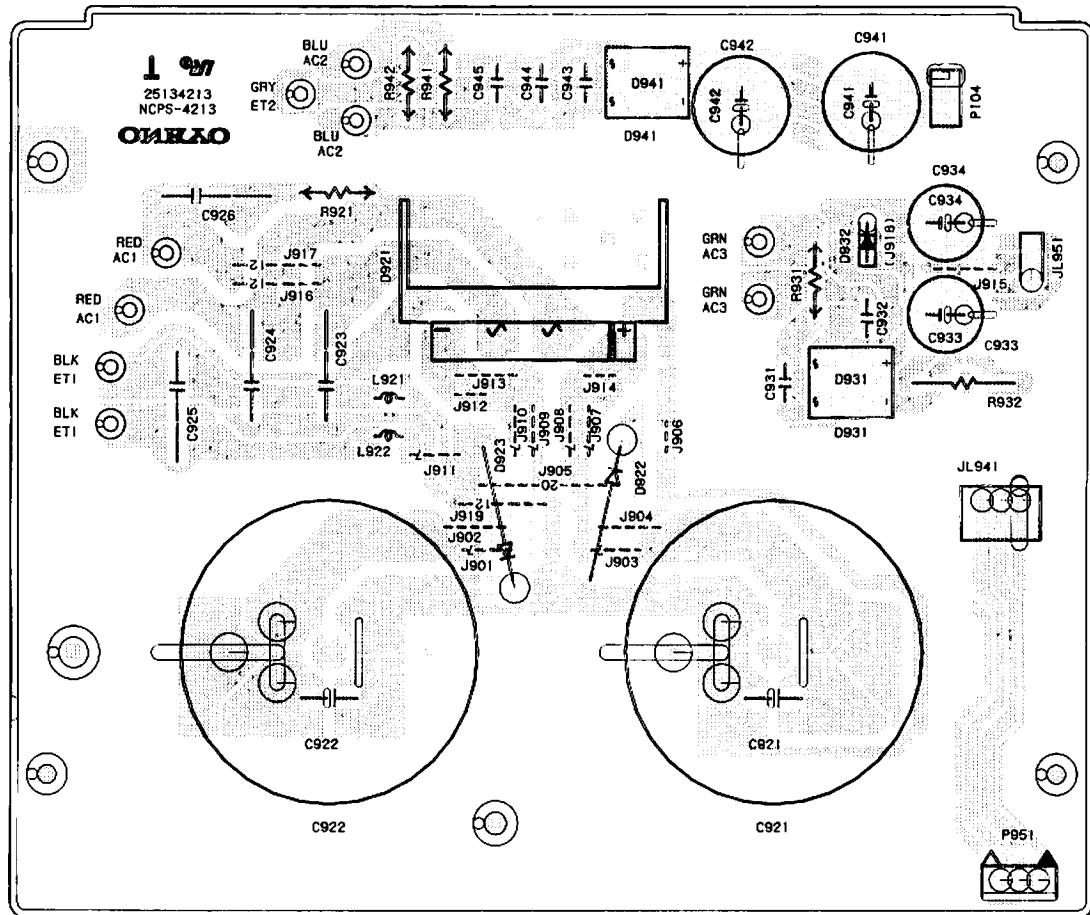


NAETC-4214

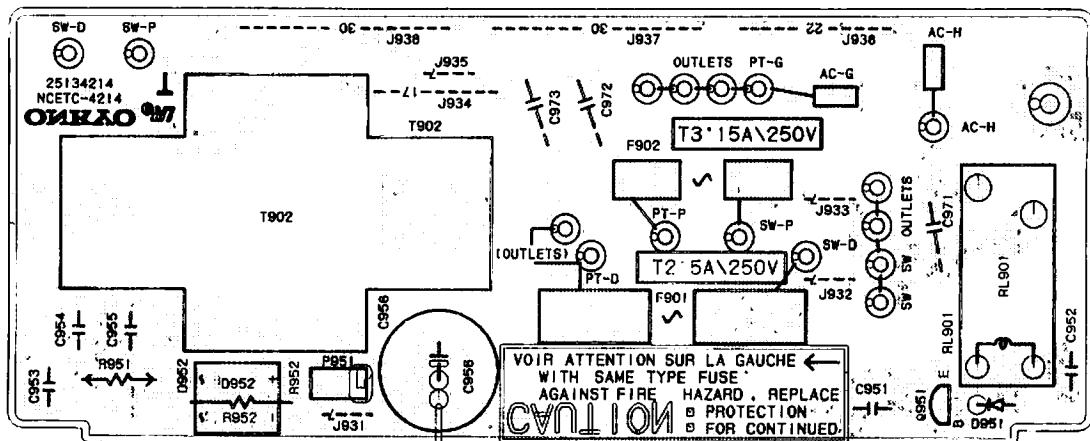


NADIS-4222

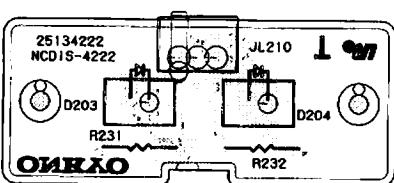


NADIS-4223

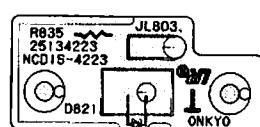


NADG-4215

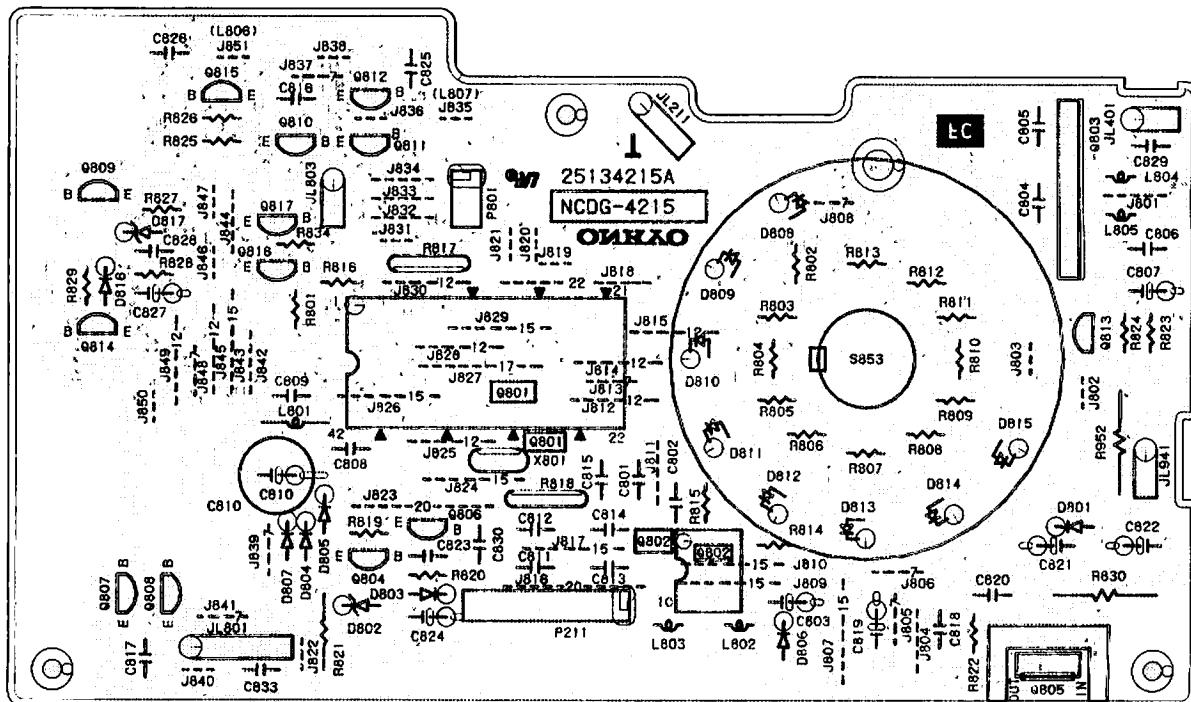


NAAF-4216

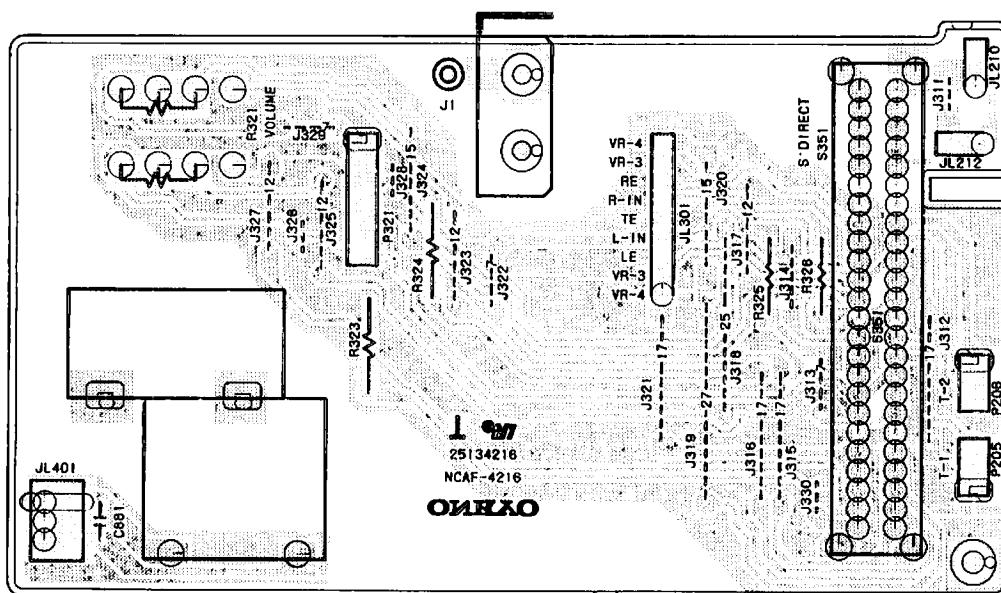

NAETC-4224

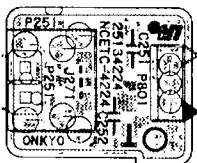

NAETC-4225

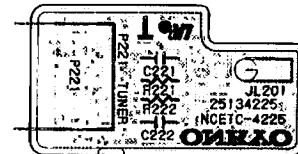

A


B

C

D

SCHEMATIC DIAGRAM

MODEL A-8870

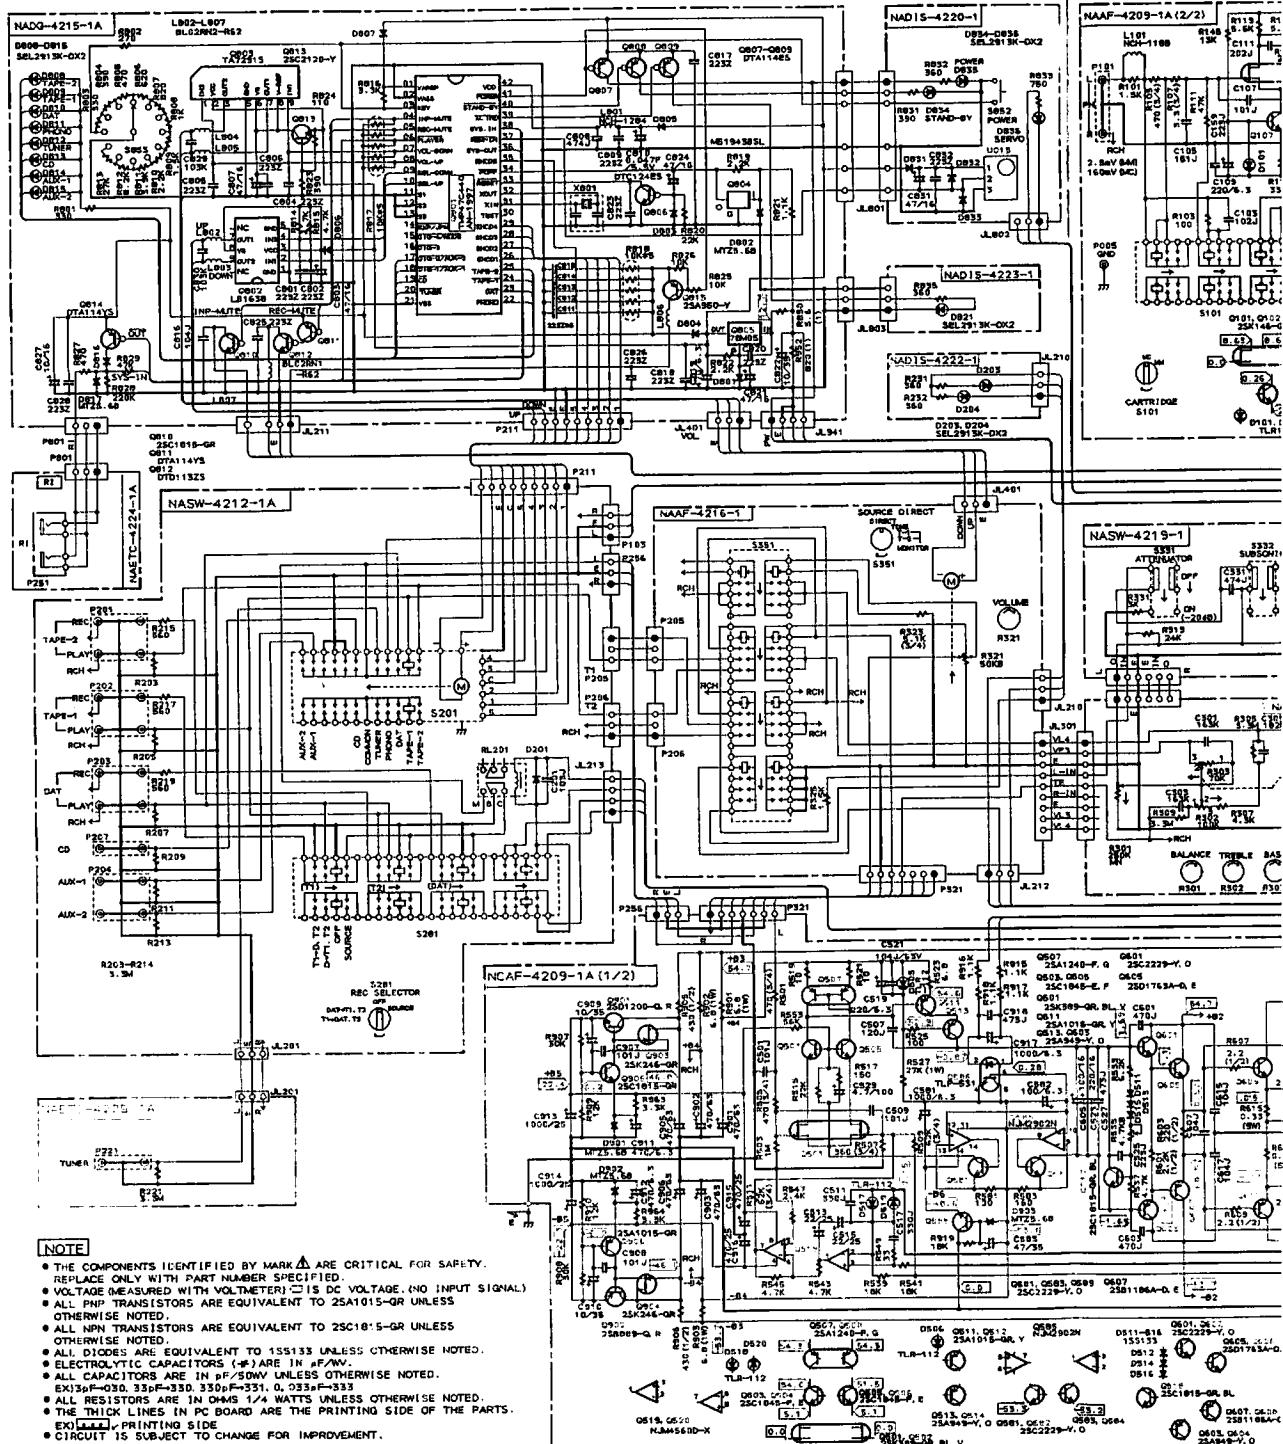

1

2

3

4

5

6


D

E

F


G

H

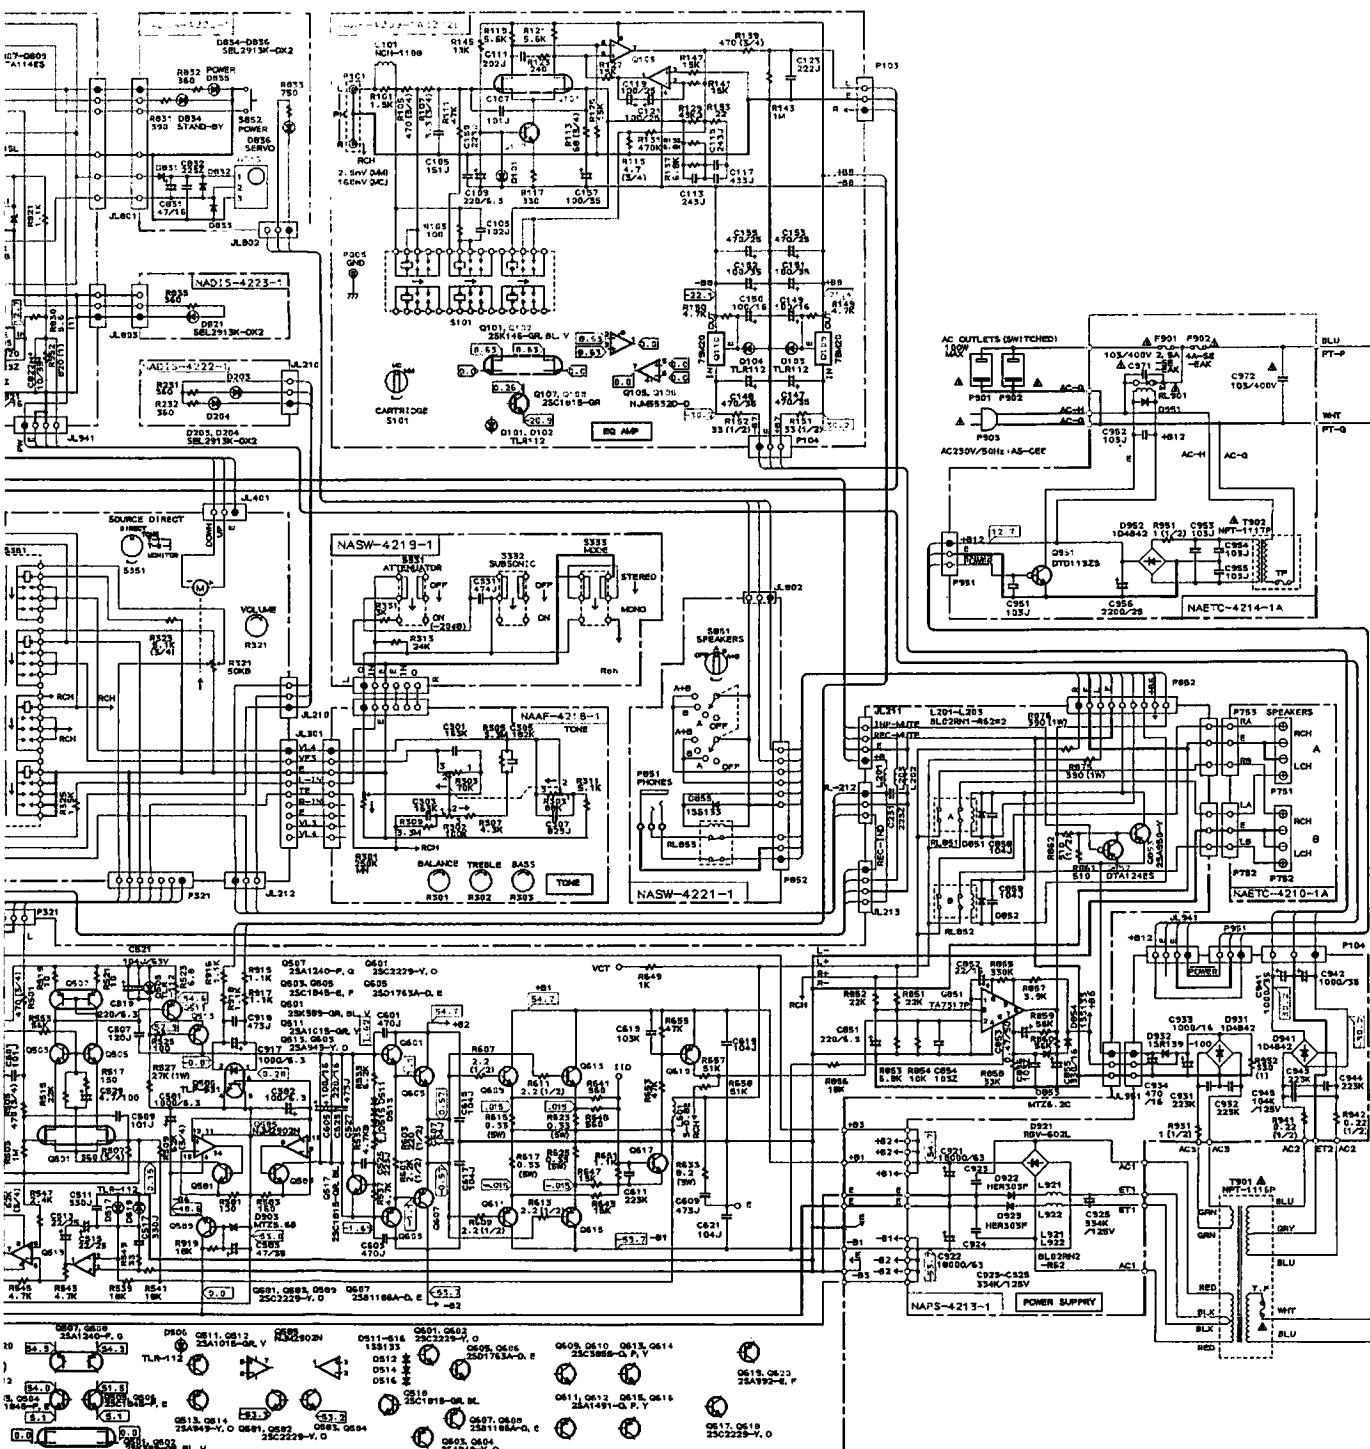


ONKYO CORPORATION


NAAF4218

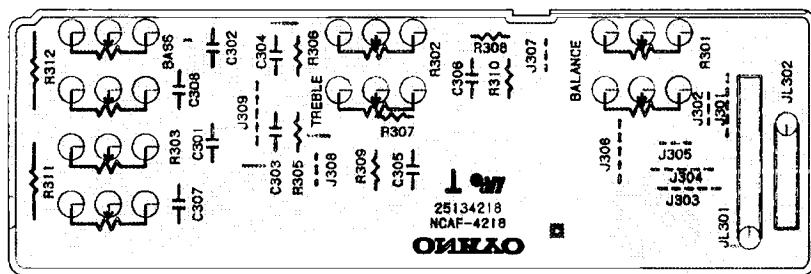


NASW-4219

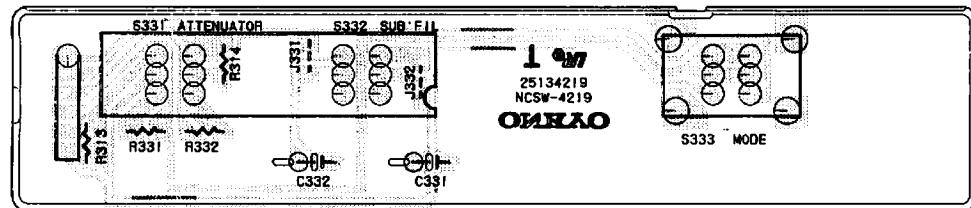

NADIS-4220

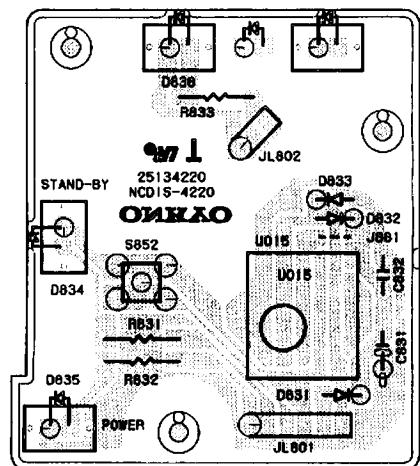

NASW-4221

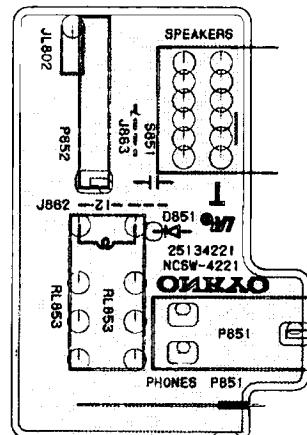


PARTS LIST OF PACKING

REF. NO.	PART NO.	DESCRIPTION
A851	29052259	MASTER CARTON BOX [BLK]
A851	29052261	MASTER CARTON BOX [SIL]
A852	29091425A	PAD, LEFT
A853	29091426A	PAD, RIGHT
A854	261504	PAPER TAPE
A855	29100035A	1020x720, POLY-VINYL BAG
A857	282320	SEALING HOOK
A858	29110071	DAMPION TAPE (W=50)
	29355133A	DBP CAUTION LABEL
		ACCESSORY BAG
A901	29341650	INSTRUCTION MANUAL
	29365020C	WARRANTYCARD
A903	24140207	RC-207S, REMOTE CONTROL TRANSMITTER
A904	3010054	UM-3, BATTERY
A905	2010200	3.5 mm, MINI PLUG ASS'Y
A906	29100097	350 x 250, POLY-VINYL BAG

NOTE [BLK]: ONLY BLACK MODEL


[SIL]: ONLY SILVER MODEL

FRONT PANEL FACILITIES

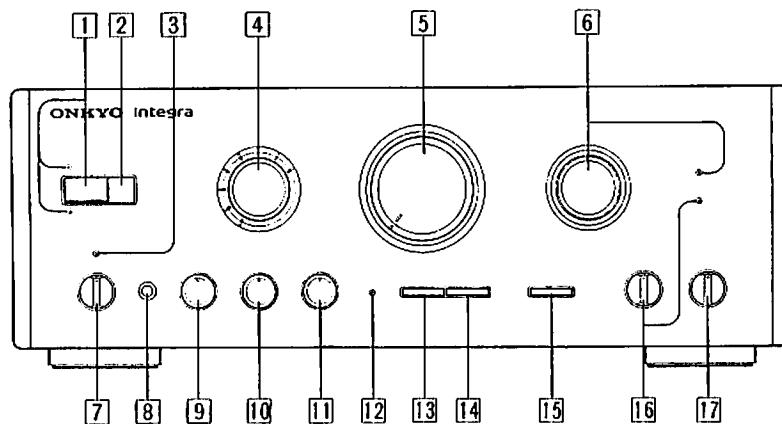

1. Power switch (POWER)
2. Remote control sensor
3. Servo operation indicator (SERVO OPERATION)
4. Input selector switch (INPUT SELECTOR)
TAPE-2, TAPE-1, DAT, PHONO, CD, AUX-1, AUX-2
5. Volume control (VOLUME)
6. Source direct switch (SOURCE DIRECT)
DIRECT, TONE, MONITOR TAPE-1/TAPE-2
7. Speaker selector switch (SPEAKERS)
OFF, A, B, A+B
8. Headphone jack (PHONES)
9. Bass control (BASS)
10. Treble control (TREBLE)
11. Balance control (BALANCE)
12. Muting indicator
13. Attenuator switch (ATTENUATOR)
14. Subsonic filter switch (SUBSONIC)
15. Mode selector switch (MODE)
STEREO, MONO
16. Recording source selector switch (REC SELECTOR)
TAPE-1→DAT & TAPE-2, DAT→TAPE-1 & 2
OFF
SOURCE
17. Cartridge selector switch (CARTRIDGE)
MC, MM

SYSTEM CONNECTIONS

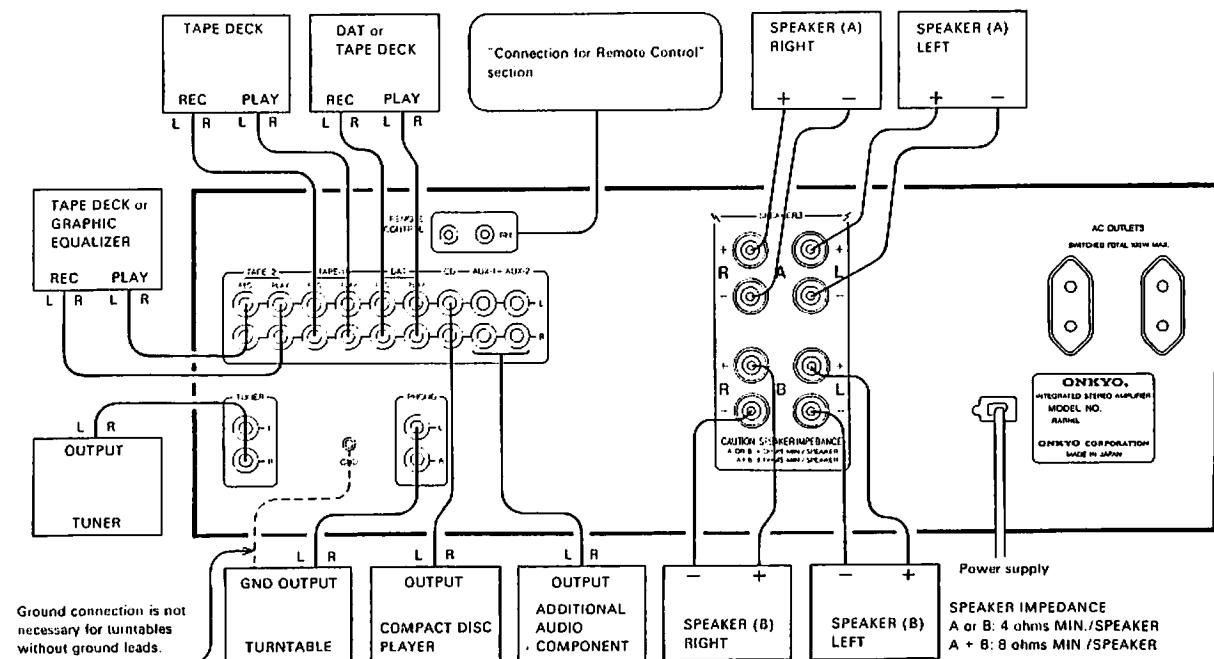

ONKYO CORPORATION

International Division: Onarimon Yusen Bldg., 23-5, Nishi-Shimbashi 3-chome, Minato-ku,
TOKYO 105, JAPAN Tel: 03-3432-6987 Fax: 03-3436-6979

ONKYO DEUTSCHLAND GMBH ELECTRONICS
Industriestrasse 20, 8034 Germering, GERMANY
Tel: 089 84 93 20 Fax: 089 84 93 226

OM3404 A106 Printed in Japan