

ONKYO® SERVICE MANUAL

LINEAR TRACKING DIRECT DRIVE TURNTABLE MODEL PL-33

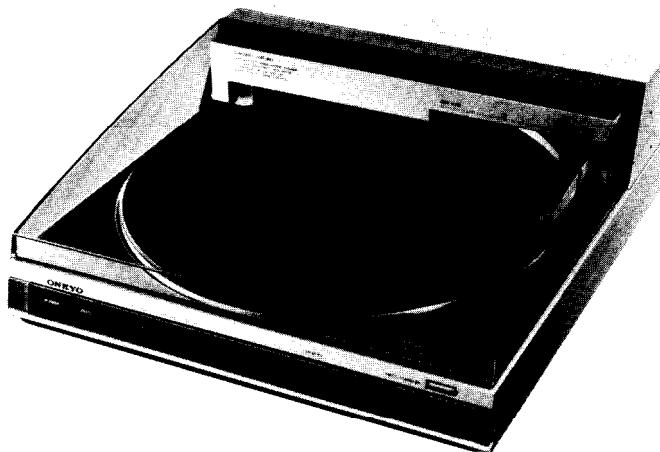



TABLE OF CONTENTS

Item	Page
Microcomputer operation	2
Adjustment procedures	3
Mechanism-exploded view	4
Exploded view	5
Component location	6
Printed circuit board view from component side	7
Schematic diagram	9
Packing view	11
Specifications	12



MICROCOMPUTER OPERATION

Q201 LM6405H-070

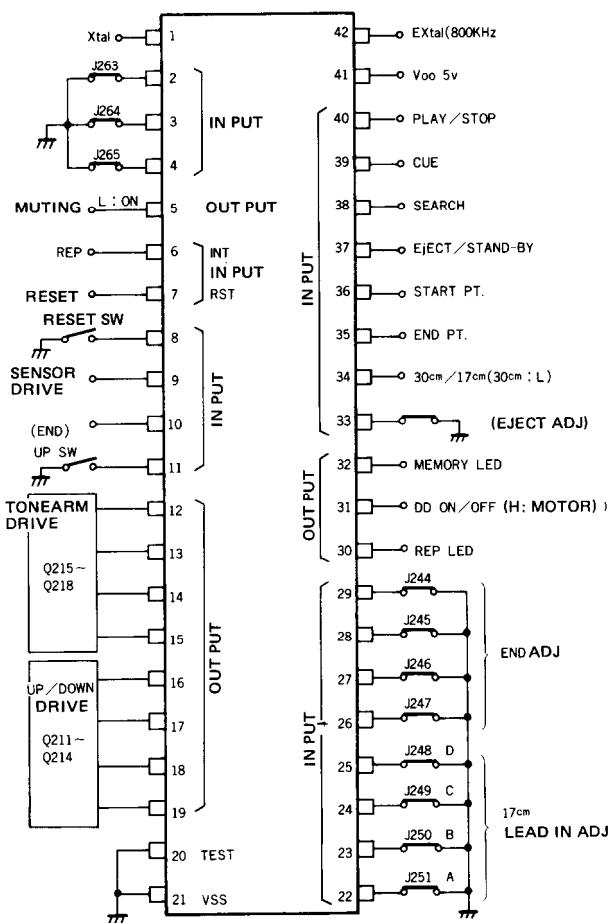

Pin	Function
1	Connect the 800kHz oscillator Xtal.
2	Pins for electrical adjustment of stylus height; adjust stylus height when tonearm goes open to standby.
3	Open J263 to lower the stylus height 1.9mm.
4	Open J264 to lower stylus height 3.8mm.
	Open J23, 264 to lower the stylus height 5.7mm.
	Open J263 to lower the stylus height 7.5mm.
5	Pin for muting on/off; low is on, high is off.
6	Pin for interruption of repeat operation.
7	Pin for reset; low for 80m sec when power is turned on.
8	Determines whether or not tonearm is above the stanby position; low when arm is above the standby position.
9	Sensor input; low to operate the air drive motor, high to stop the arm drive motor.
10	Pin for the record end detection signal from the sensor; low causes the tonearm to return.
11	Determines whether or not the tonearm is open or standby.
12	Pins for the tonearm drive (horizontal movement) pulse motor
13	
14	
15	Pins for the tonearm drive (vertical movement) pulse motor
16	
17	
18	
19	

20	Test pin
21	Ground pin
22	
23	Pin for adjustment of the 17cm lead-in position. See the adjustments section for details.
24	
25	
26	
27	Determines the point of return when the tonearm is moved inward in the search mode or when the end is reached.
28	
29	
30	Lights the repeat LED.
31	Pin for direct-drive motor on/off and the play flip-flop clear direct-drive motor; low is stop and high is start.
32	Lights the memory LED.
33	Pin for adjustment of how far the dust opens; when J243 is open, the angle can be adjusted by about 5°
34	Determines whether the record is 30cm or 17cm.
35	Pin to memorize the end point; the number of pulses from the arm standby position is memorized.
36	Pin to memorize the start point as described in 35 above.
37	Pin for open/standby operation; hole down and open-standby switching will be repeated.
38	Pin for search operation; press once and the pulse motor moves the tonearm inward, press again and the pulse motor rotates in the opposite direction to move the tonearm outward.
39	Pin for cueing up/down operation.
40	Pin for play/stop operation. An operation pulse is generated after about 1.5 seconds when the tonearm is in the standby position. Stop is ordered the instant the arm moves from the standby position toward the record.
41	V _{DD} : supplies 5 volts

ADJUSTMENT PROCEDURES

1. Adjusting Stylus Height

1. Move the tonearm slightly with the search button (check for rest switch operation).
2. Stop the turntable with your hand.
3. Lower the tonearm by pressing the cueing button.
4. Turn the power off and raise the tonearm.
5. Adjust with a philips head screwdriver on counter-weight so that the stylus is 3.5 to 6mm above the T.T mat. (see mechanism diagram)
6. Turn the power on and press the open/stand-by switch to raise the tonearm and return it to the stand-by position.
7. Adjust J263, 264 and 265 so that the stylus is 3.5 to 6mm above the T.T mat.
Cut J263 to lower the stylus 1.8mm.
Cut J264 to lower the stylus 3.6mm.
Cut J265 to lower the stylus 5.4mm.

2. Adjusting the Lead-in Position

- * 30cm adjustment
Using an ES-1008 test record, adjust with a flat head screwdriver on the counterweight (see mechanism diagram) so there are 25 to 32 counts.
- * 17cm adjustment
Using an ES-1008 test record, adjust J248, 249, 250 and 251 so there are 22 to 35 pulse counts. (Use a test record with the outer edge cut away or with small holes in it.)
Cut J251 to move the count 5 ~ 6 inward.
Cut J250 to move the count 11 ~ 12 inward.
Cut J248 to move the count 22 ~ 23 inward.
Cut J248 to move the count 44 ~ 45 inward.

3. Adjusting Sensor Sensitivity

1. Connect an oscilloscope to TP-A (Emitter of Q208).
2. In the stand-by position, move the stylus toward the center of the turntable platter (so the sensor holder is outside D601 and Q601) and adjust R208 so that 3 volts is produced.

4. Adjusting the Sensor Shutter

1. Connect an oscilloscope to TP-C (Collector of Q209).
2. In the stand-by position, adjust the sensor holder so that the sensor switches from high to low when the stylus is moved 3mm toward the center of the turntable platter.


5. Adjusting the Return Position

1. Connect an oscilloscope to TP-B (Base of Q210).
2. In the stand-by position, adjust R211 so that the V_{BE} voltage is 0.6 to 0.7 when the stylus is moved toward the center of the turntable platter.
3. Checkpoints (use an ES-1008 test record):
 - a) Set the speed selector to 33rpm.
 - b) When trace the 1mm pitch of record, V_{BE} voltage is -0.05 to -0.08 in relation to the adjustment voltage (0.6 to 0.7 volts).
 - c) Confirm that the tonearm returns within 7 counts at the 3mm pitch trace.
 - d) Confirm that the tonearm returns more than 21 counts at the 1mm pitch trace.

6. Adjustment of Motor Speed (rpm)


Adjust the semi-fixed resistors VR₃₃ and VR₄₅ so that the motor speed is within ±0.15%.

MECHANISM-EXPLODED VIEW

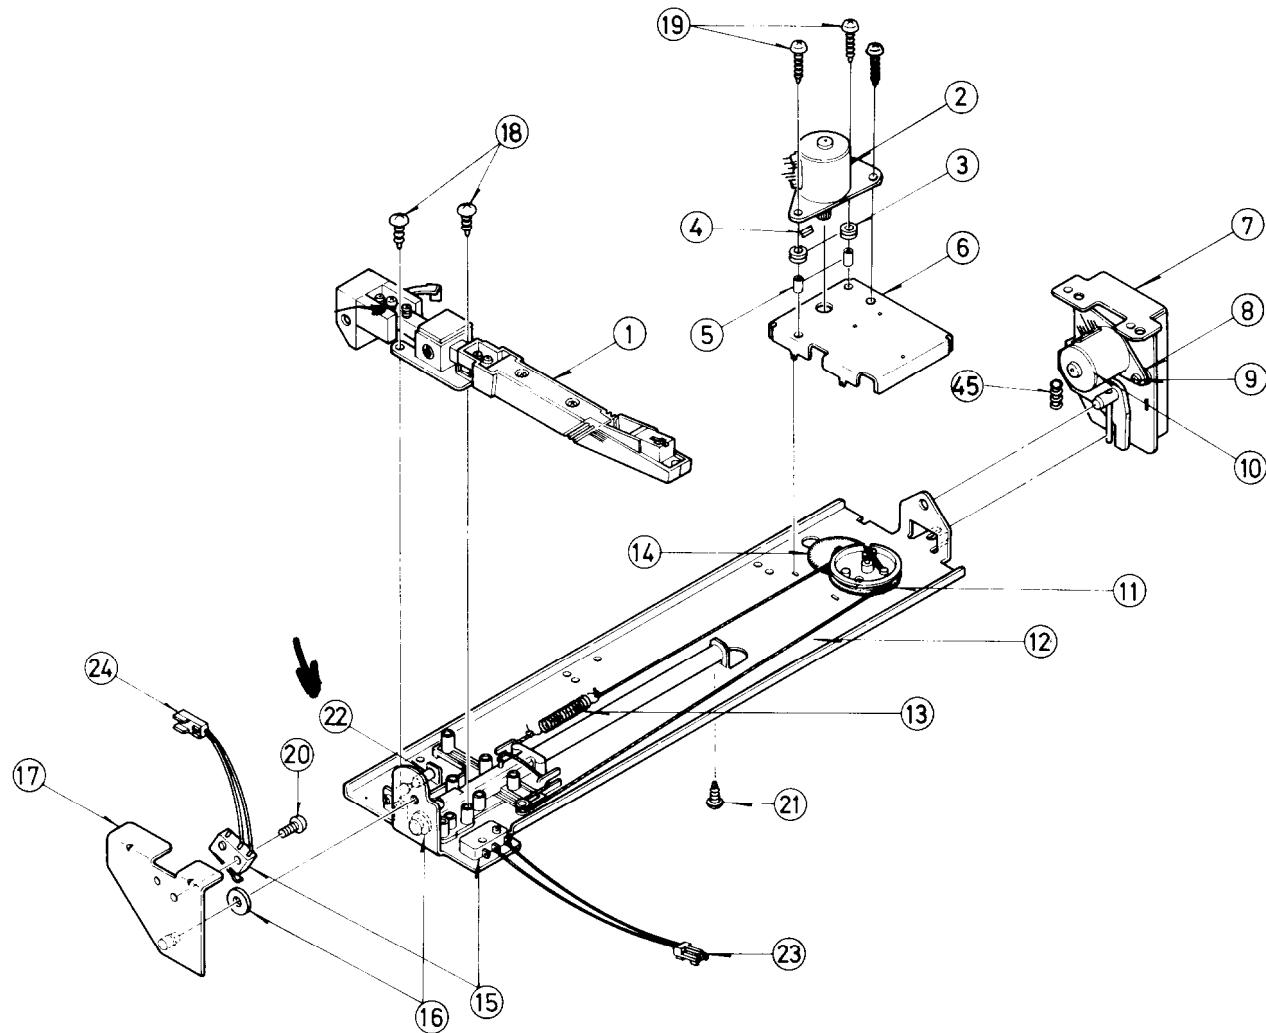


LINER MECHANISM-PARTS LIST


REF. NO.	PARTS NO.	DESCRIPTION	REF. NO.	PARTS NO.	DESCRIPTION
1	24506572A	Main mechanism ass'y	12	273903	Stringing
	24501417	Tonearm ass'y	13	24503119	Spring
	242943	OC-56V, Cartridge	14	24503118	Gear
	242944	DN-56ST, Stylus	15	24503108	Microswitch
	24501411	Stylus cover	16	28140418-1	Cushion
2	24502147A	Motor ass'y	17	24506574	Side plate ass'y
3	24610125	Cushion	18	833130100	3TTP+10P screw
4	24509268	Cushion	19	82113008	3P+8FN, Pan head screw
5	24610124	Collar	20	82112308	2.3P+8FN, Pan head screw
6	24504330A	Case ass'y	21	82113006	3P+6FN, Pan head screw
7	24506573A	Gear box ass'y	22	24504329A	Adjusting screw
8	24509267	Cushion	23	2000203-1	Socket
9	82113005	3P+5FN, Pan head screw	24	2000204	Socket
10	24502146	Motor	45	24503120A	Spring
11	24506582	Reel			

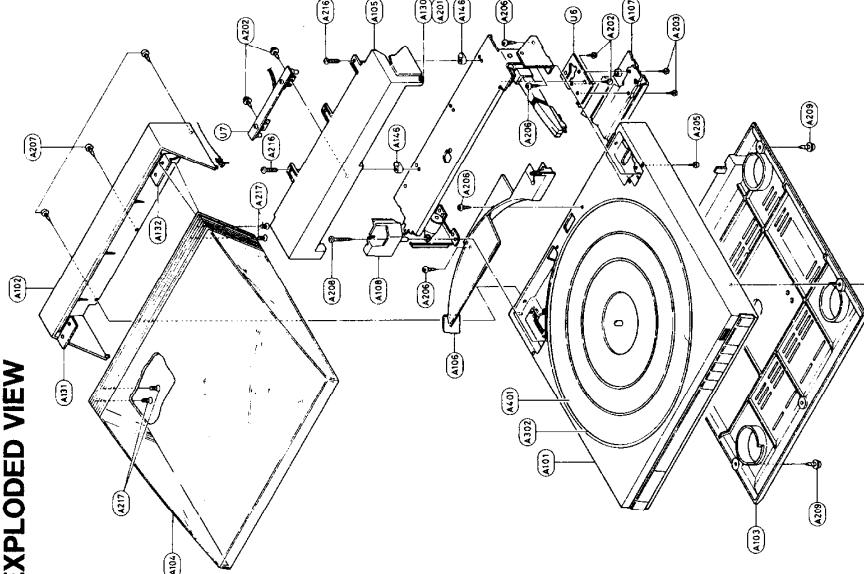EXPLODED VIEW**COMPONENT LOCATION**

REF. NO.	PARTS NO.	DESCRIPTION
A120	16621704	Knob, search
A121	16621705	Knob, repeat
A122	16621706	Knob, start
A123	16621707	Knob, end
A124	16621708	Knob, speed
A125	16621709	Knob, power
A127	28191122	Cleat plate S
A128	28191123	Cleat plate L
A130	27185011	Pulley
A131	27140647-A	Rail L
A132	27140648-A	Rail R
A133	28180071	Hinge, right
A134	28180072	Hinge, left
A135	24509264	Insulator
A136	24509232-1	Spring
A138	27140638	Bracket, power
A139	27140632	Bracket S
A140	27140640	Bracket AC
A141	27140671	Bracket AC
A143	27180122	Spring
A144	27180133	Spring
A145	27270058	Space: (D)
A146	27270058	Spacer (G/U/A)
A147	27270058	Spacer DIN
A148	28140209	Spacer
A149	28140414	Cushion
A150	28140418	Cushion
A160	28140422	Cushion
A161	28140432	Cushion
A199	27140634	Bracket U
A201	83312606	2.67TP+6P, Tapping screw
A202	83313008	3TP+8P, Tapping screw
A203	83313010	3TP+10P, Tapping screw
A204	83113010	3TTW+10P, Tapping screw
A205	83412606	2.67TBS+6B, Tapping screw
A206	83412608	3TTSB+8B, Tapping screw
A207	83412608	3TTSB+8B (NI), Tapping screw
A208	83413020	3TTSB+20B, Tapping screw
A209	83113008	3TTSB+8B, Tapping screw
A210	83413008	4TTSB+8B, Tapping screw
A211	83414012	4TTTS+16B, Tapping screw
A212	83415006	4TS+5C, Tapping screw
A213	83415006	3TTSB+6B, Tapping screw
A214	82142004	2P+4FN (EC), Pan head screw
A215	82113006	3P+6F Pan head screw
A217	82243005	3S+5FN (EC), Flat head screw
A218	8WP+12BN	Washer, flat washer head screw
A219	87614012	W4x12F, Flat washer
A218	27765035	4x5x7.5mm, Ring
A219	8930308	E-5x7mm, Retaining washer
A301	24502149	186V-A, Motor
A302	24502144	Turntable platter
A304	24506571A	Mechanism ass'y
A304-1	24506572A	Main mechanism ass'y
A304-1A	2000203-4	NSA-SP-107, Socket
A304-1B	28140418-1	Cushion
A304-2	24506573A	Gear box ass'y
A304-3	24506574A	Side plate ass'y
A304-3A	2000204	NSA-SP-108, Socket
PT101	230625	NFT-771D, Power transformer
	230626	NFT-771G, Power transformer
	230627	NFT-771ADGQ, Power transformer
	(U)	
P001	230628	NFT-771Q, Power transformer (A)
	2530909A	AS-UC-3, Power supply cable (D)
	253083	AS-CCE, Power supply cable (G/U)
	250771	Power supply cable (A)

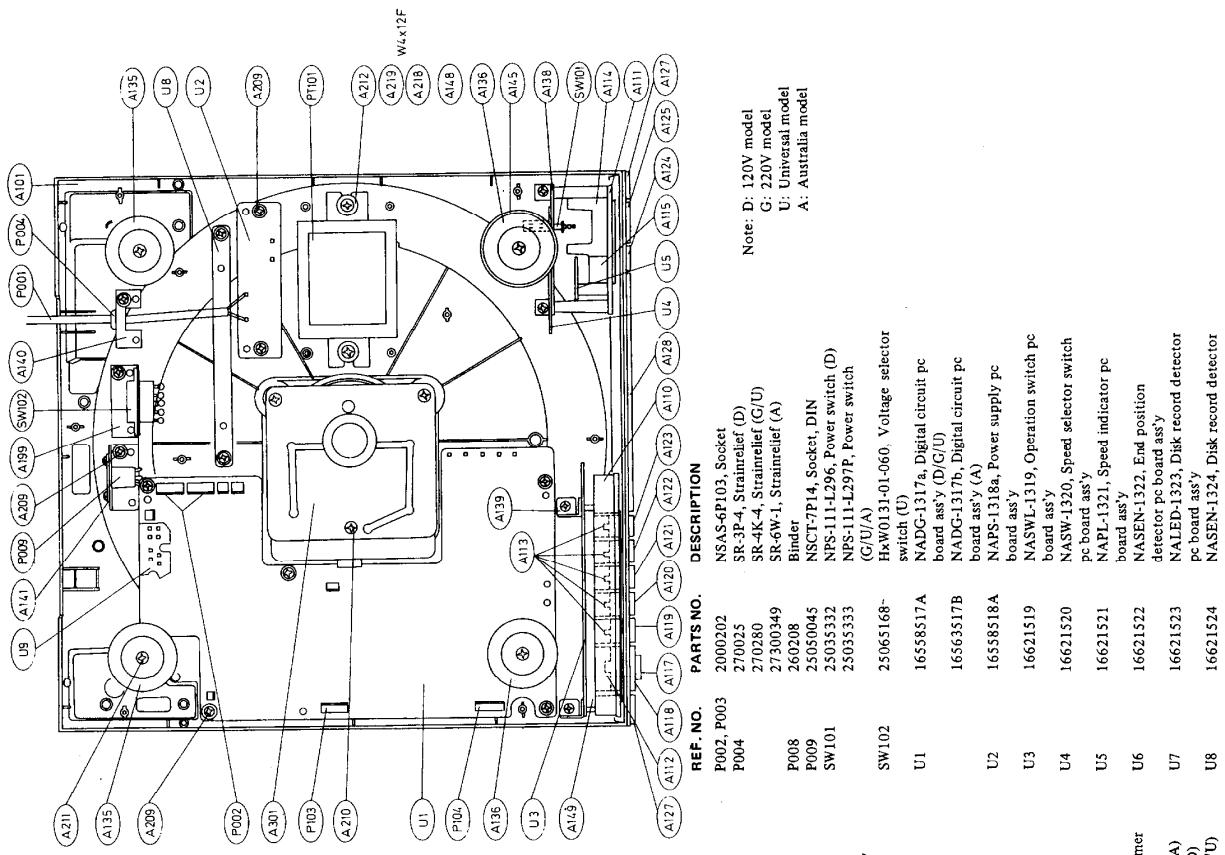

SCHEMATIC DIAGRAM

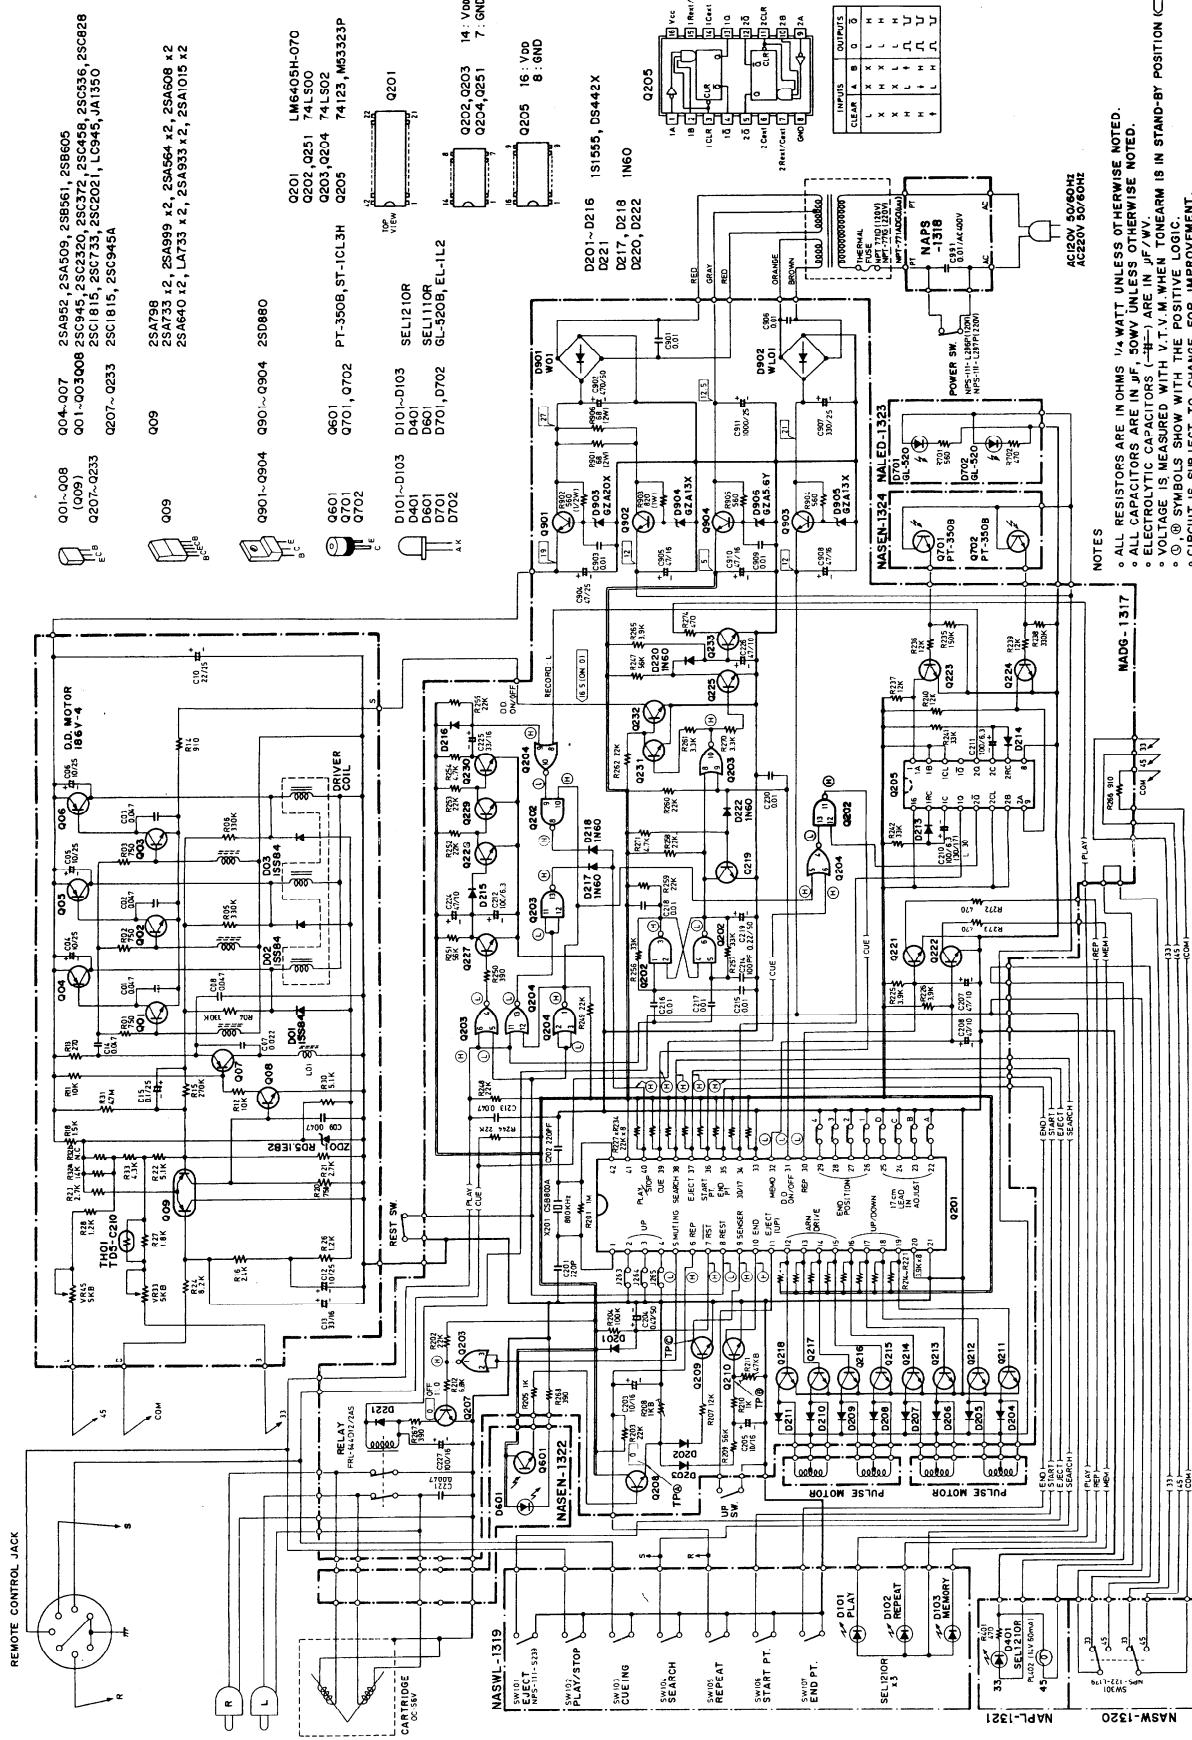


NOTES

- ALL RESISTORS ARE IN OHMS $\frac{1}{4}$ WATT UNLESS OTHERWISE NOTED.
- ALL CAPACITORS ARE IN μ F, 50V UNLESS OTHERWISE NOTED.
- ELECTROLYTIC CAPACITORS ($-\mu$ F-) ARE IN μ F/V.
- VOLTAGE IS MEASURED WITH V.T.V.M. WHEN TONEARM IS IN STAND-BY POSITION (—).
- , ⊗ SYMBOLS SHOW WITH THE POSITIVE LOGIC.
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

ONKYO CORPORATION

PACKING VIEW

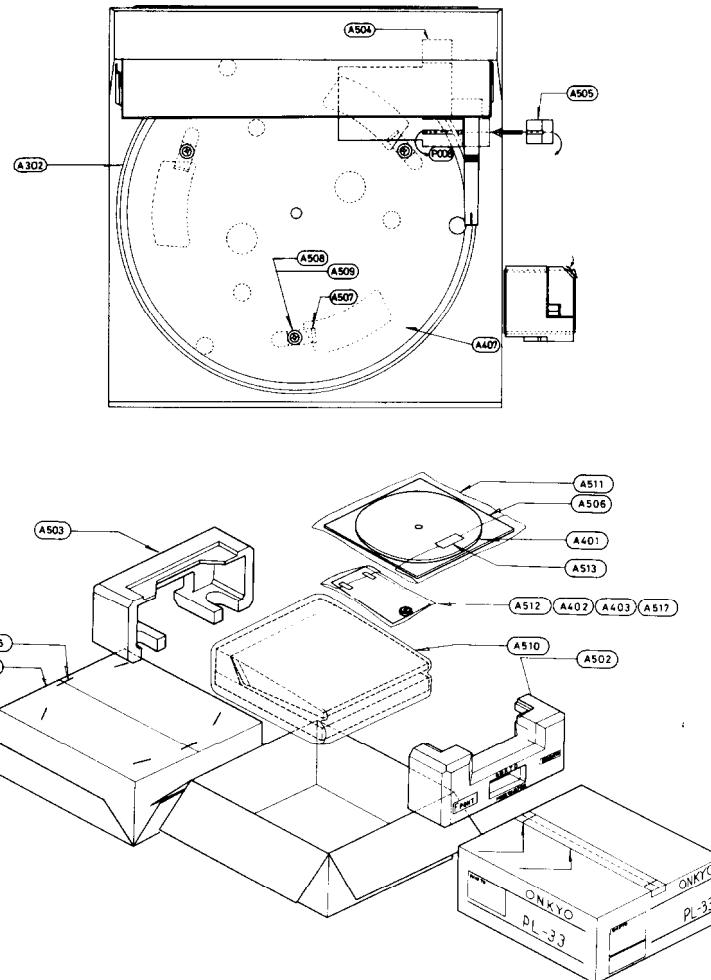

REF. NO.	PARTS NO.	DESCRIPTION	REF. NO.	PARTS NO.	DESCRIPTION
A501	29050573	Master carton box	A401	24509265	T.T sheet
A502	29090716	Pad F	A402	292049A	45rpm adaptor
A503	29090717	Pad B	A403	29340625	Instruction manual (D)
A504	29090686-1	Pad PU		29340626	Instruction manual (G/U/A)
A505	29090694A	Pad S	A404	29375059	DN56ST, Stylus label
A506	29090742	Pad sheet C	A405	29360574	Rating label (D)
A507	27270084	Spacer		29360575	Rating label (G)
A508	834140168	4TTS+16B, Tapping screw		29360576	Rating label (U)
A509	87614012	W4x12F, Flat washer		29360586	Rating label (A)
A510	29100049	640x620mm, Poly-vinyl bag	A407	29355088	Sheet, paper
A511	29100046	370x470mm, Poly-vinyl bag (Turntable platter)	A409	29360577	Label
A512	2910005A	220x330mm, Poly-vinyl bag (Accessory)		29360578	Lavel U (W)
A516	282301	Sealing hook		25055018 or 25055040	CV-K-1 or CV-K-2, Conversion plug (U)
A517	29365006-2	Wareanty card (D)	P008	260102	Twist wire
	29365005-3	Warranty card (G)	Note: D: 120V model		
	290358002	Service station list (D)	G: 220V model		
A302	24502144	Tuntable platter	U: universal model		
			A: Australia model		

SPECIFICATIONS

Type:	Direct drive linear tracking turntable with two microcomputer controlled motors and fully automatic operation
Turtable Platter:	300 mm (12") aluminum die-cast
Motor:	Brushless DC direct drive
Speeds:	33-1/3, 45 rpm
Wow & Flutter:	0.027% (WRMS)
Signal-to-Noise Ratio:	72 dB (DIN B)
Tonearm:	Statically balanced, carbon fiber
Cartridge:	Dual magnet type, model OC-56V
Frequency Response:	20 – 25,000 Hz
Output Voltage:	3.5 mV (1 kHz)
Compliance:	8 × 10 ⁻⁶ cm/dyne
Tracking Force:	2.0 grams
Stylus:	0.6 mil. round diamond
Replacement Stylus:	DN-56ST
Power Supply:	220 V, 50 Hz, 120/220 V, 50/60 Hz
Dimensions (W x H x D):	330 x 126 x 338 mm (13" x 5" x 13-1/4")
Weight:	6.5 kg (14.4 lbs.)

* Specifications are subject to change due to further product improvements.

ONKYO CORPORATION

International Division: No. 24 Mori Bldg., 23-5, 3-chome, Nishi-Shinbashi, Minato-ku, Tokyo, Japan
Telex: 2423551 ONKYO J. Phone: 03-432-6981

ONKYO U.S.A. CORPORATION

Eastern Office: 200 Williams Drive, Ramsey, N.J. 07446 Tel. 201-825-7950
Midwest Office: 2406 Martin Lane Rolling Meadows, Ill 60008 Tel. 312-577-4300
Western Office: 8607 Canoga Ave., Canoga Park, CA, 91304 Tel. 213-341-8114

ONKYO DEUTSCHLAND GMBH, ELECTRONICS

8034 München-Germering, Industriestrasse 18, West Germany. Telex: 521726 Telefon: (089)-84-3071