


ONKYO SERVICE MANUAL


QUARTZ SYNTHESIZED TUNER AMPLIFIER MODEL TX-900 MODEL TX-902

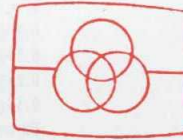

Free service manuals
Gratis schema's

Digitized by

www.freeservicemanuals.info

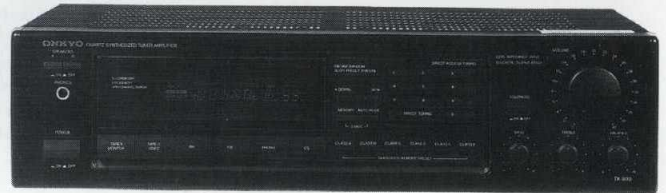

Black model

BHMD, BHMDN	120V AC, 60Hz
BHMP, BHMPF	230V AC, 50Hz
BHMW	120V or 220V AC, 50/60Hz
BHMQA	240V AC, 50Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

Specifications.....	2
Service procedures.....	3
Exploded view Model TX-902.....	4
Parts list Model TX-902.....	5
Exploded view Model TX-900.....	6
Parts list Model TX-900	7
Block diagram Model TX-902.....	8
Block diagram Model TX-900	10
IC block diagram and descriptions.....	12
Packing view	19
Adjustment procedures.....	20
Printed circuit board view from bottom side	23
Schematic diagram	
Model TX-902.....	25
Model TX-900.....	29
Printed circuit board-parts list	
Model TX-902	35
Model TX-900	38

ONKYO

AUDIO COMPONENTS

SPECIFICATIONS

AMPLIFIER SECTION

Power Output:

TX-902

50 watts per channel, min. RMS, at 8 ohms, both channels driven, from 40Hz to 20kHz, with no more than 0.2% THD.

TX-900

40 watts per channel, min. RMS, at 8 ohms, both channels driven, from 40kHz to 20kHz, with no more than 0.3% THD.

Musical Power Output:

2 × 120 watts at 4 ohms, 1kHz (DIN)
2 × 80 watts at 8 ohms, 1kHz (DIN)

2 × 95 watts at 4 ohms, 1kHz (DIN)
2 × 68 watts at 8 ohms, 1kHz (DIN)

Continuous Power Output:

2 × 65 watts at 4 ohms, 1kHz (DIN)
2 × 55 watts at 8 ohms, 1kHz (DIN)

2 × 55 watts at 4 ohms, 1kHz (DIN)
2 × 45 watts at 8 ohms, 1kHz (DIN)

Total Harmonic Distortion:

0.2% at rated power
0.1% at 30a watt output

0.3% at rated power
0.1% at 30 watt output

IM Distortion:

0.2% at rated power
0.1% at 30 watt output

0.3% at rated power
0.1% at 30 watt output

Damping Factor:

50 at 8 ohms

50 at 8 ohms

Frequency Response:

20 — 30,000 Hz ± 1dB

20 — 30,000 Hz ± 1dB

RIAA Deviation:

20 — 20,000 Hz ± 0.8dB

20 — 20,000 Hz ± 0.8dB

Sensitivity and Impedance:

Phono: 2.5mV/50 kohms

Phono: 2.5mV/50 kohms

CD/Tape Play: 150mV/50 kohms

CD/Tape Play: 150mV/50 kohms

Tape Rec: 150mV/3.5 kohms

Tape Rec: 150mV/3.5 kohms

Phono Overload:

120mV RMS at 1kHz, 0.2% THD

120mV RMS at 1kHz, 0.3% THD

Signal-to-Noise Ratio:

Phono: 80dB (at 5mV input, IHF-A)

Phono: 80dB (at 5mV input, IHF-A)

CD/Tape: 100dB (IHF-A)

CD/Tape: 100dB (IHF-A)

Tone Controls:

Bass: ± 10dB at 100Hz

Bass: ± 10dB at 100Hz

Treble: ± 10dB at 10kHz

Treble: ± 10dB at 10kHz

Muting:

— ∞

—

TUNER SECTION

FM:

—220V/Worldwidemodels—

—120V model—

Tuning Range:

87.50—108.00MHz (50kHz steps)
87.5—108.00MHz (50kHz steps) or
(200kHz steps) (Worldwide model)

87.9—107.9MHz (200kHz steps)

Usable Sensitivity:

Mono: 12.4dBf, 1.2 μV, 75ohms
1.2 μV (S/N26dB, 40kHz Devi.)
75ohms DIN

Mono: 12.4dBf, 2.3 μV

Stereo: 19.2dBf, 2.5 μV, 75ohms
25 μV (S/N 46dB, Devi.)
75ohms DIN

Stereo: 18.2dBf, 4.5 μV

50dB Quieting Sensitivity:

Mono: 18.2dBf, 2.2 μV, 75ohms
Stereo: 38.2dBf, 22 μV, 75ohms

Mono: 18.2dBf, 4.5 μV
Stereo: 38.2dBf, 45 μV

Caputure Ratio:

1.5dB

1.5dB

Image Rejection Ratio:

85dB

40dB

IF Rejection Ratio:

90dB

90dB

Signal-to-Noise Ratio:

Mono: 70dB

Mono: 70dB

Stereo: 65dB

Stereo: 65dB

Alternate Channel

Attenuation:

55dB

Selectivity:

50dB DIN (±300kHz, 40kHz dev.)

AM suppression Ratio:

50dB

50dB

Harmonic Distortion:

Mono: 0.15%

Mono: 0.15%

Stereo: 0.30%

Stereo: 0.30%

Frequency Response:

30—15,000Hz±1.5dB

30—15,000Hz±1.5dB

Stereo Separation:

40dB at 1kHz

40dB at 1kHz

30dB at 100—10,000Hz

30dB at 100—10,000Hz

Muting Level:

17.2dBf, 4 μV

17.2dBf, 4 μV

AM:

Tuning Range:

522—1610kHz (9kHz steps)
522—1610kHz (9kHz steps) or
530—1710kHz (10kHz steps) (Worldwide model)

530—1710kHz(10kHz steps)

Usable Sensitivity:

30 μV

30 μV

Image Rejection Ratio:

40dB

40dB

IF Rejection Ratio:

40dB

40dB

Signal-to-Noise Ratio:

40dB

40dB

Harmonic Distortion:

0.8%

0.8%

GENERAL

TX-902

TX-900

Dimensions (W×H×D):

455×120×316mm
17-15/16" ×4-6/8" ×12-7/16"

455×120×316mm
17-15/16" ×4-6/8" ×12-7/16"


Weight:

7.8kg, 17.2 lbs.

7.0kg, 15.4 lbs.

Remote control transmitter RC-183S/RC-184S (Only Model TX-902)

Transmitter: Infrared
 Signal range: Approx. 5 meters (16ft. 4")
 Power supply: Two "AA" batteries(1.5V X 2)

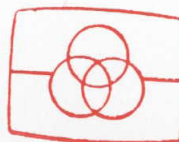

Free service manuals
 Gratis schema's
 Digitized by

www.freeservicemanuals.info

Specifications and features are subject to change without notice.

SERVICE PROCEDURES

1.Replacing the fuses

For continued protection against fire hazard,replace only with same type and same rating fuse.

D (120V) model

Circuit no.	Part no.	Description
F901	252049	4A(ST-6),Primary

P (230V) and Q (240V) models

Circuit no.	Part no.	Description
F902	252074	2A-SE-EAK,Primary
F951	252074	2A-SE-EAK,AC outlet (Only model TX-902)

W (Worldwide) model

Circuit no.	Part no.	Description
F901	252049	4A(ST-6),Primary
F902	252074	2A-SE-EAK,Primary

2.Safety-check out

(Only U.S.A. model)

After correcting the original service problem,perform the following safety check before releasing the set to the customer.

Connect the insulating-resistance tester between the plug of power supply cord and nickel screw on the back panel.

Specifications: 3.3Mohm \pm 10% at 500V.

3.Change of voltage

Worldwide models are equipped with a voltage selector to conform with local power supplies. This switch is located on the back panel. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on.

This swith is set to 220V at the factory. Voltage is changed by sliding the groove in the switch with the screwdriver to the right or left. Confirm that the switch has been moved all the way to the right or left before turning the power switch on.

4.Step band selector switch

Worldwide models are equipped with a step band selector switch. This switch is located on the back panel. This switch is set to 50kHz (FM) and 9kHz (AM) at the factory, but may have to be reset to 100kHz and 10kHz depending on the area where the unit is used.

De-emphasis	FM step	AM step
Europe: 50 μ sec	50kHz	9kHz
U.S.A.: 75 μ sec	200kHz	10kHz

5.Changing the band step


With the exception of the models below, a BAND STEP selector switch is not provided.

(FM)

MODEL	BAND STEP	R707(10k Ω)	J734
UD	200kHz \rightarrow 50kHz	Add	Cut
UP/UQ	50kHz \rightarrow 200kHz		Shorted

(AM)

MODEL	BAND STEP	R709(10k Ω)	J732
UD	10kHz \rightarrow 9kHz		Shorted
UP/UQ	9kHz \rightarrow 10kHz	Add	Cut

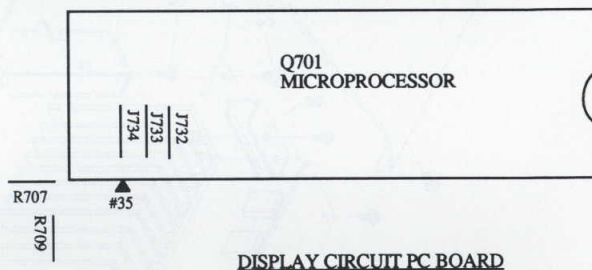


6.Memroy preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory,the power switch must be turned on and off a few times each month to keep the back-up system operative. The period of time during which memory contents are preserved after power has last been turned off varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of 3 to 4 weeks (a minimum of 2 weeks) after the last time power has been turned off. This period is shorter when the unit is exposed to very high humidity or used in an area with an extremely humid climate.

TX-902

EXPLODED VIEW MODEL TX-902

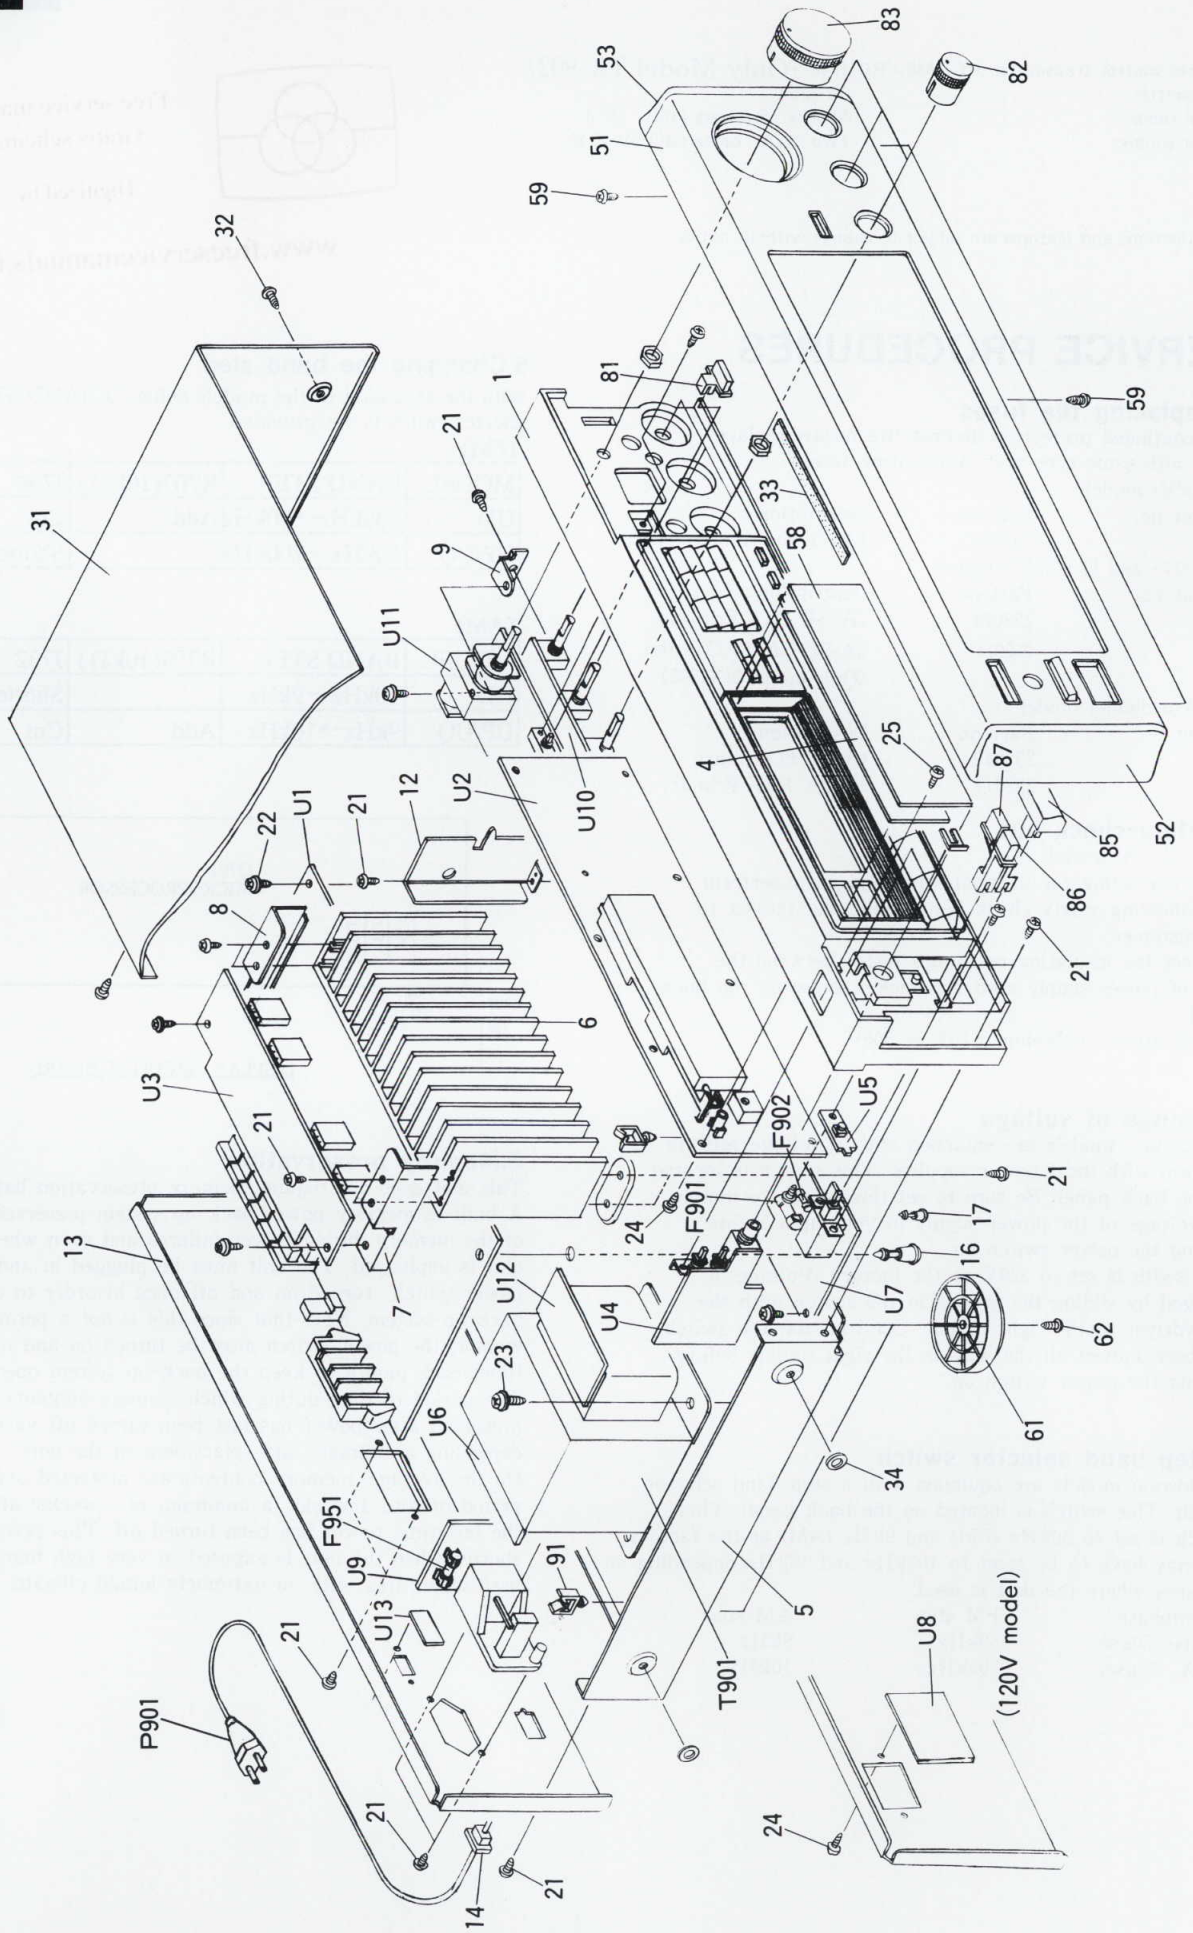


PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	27110604AY	Front bracket	P901	253163Y	AS-UC-6 #18,Power supply cord <D>	U7	1A244542-1	NAPS-4042-1,Power supply circuit pc board ass'y <D>
4	28133254Y	Back plate		253164Y	AS-CBE,Power supply cord <P/W>			
5	27100228Y	Chassis		253118	AS-SAA,Power supply cord <Q>		1A244542-1A	NAPS-4042-1A,Power supply circuit pc board ass'y <P>
6	27160272AY	Radiator	P951	25050346	NSCT-2P173,AC outlet <Q>		1A244542-1B	NAPS-4042-1B,Power supply circuit pc board ass'y <W>
7	27141441Y	Bracket LH	Q503,Q504	2202282,	2SA1265N-R,	U8	1A244542-1C	NAPS-4042-1C,Power supply circuit pc board ass'y <Q>
8	27141442Y	Bracket RH		2202283,	2SA1265N-O,			
9	27141443Y	Bracket PC		2201693,	2SA1491-O,	U9	1A244544-1	NAETC-4044-1,AC outlet pc board ass'y <P>
12	27130643Y	Bracket,shield		2201694 or	2SA1491-Y or			
13	27121406Y	Back panel <D>	Q505,Q506	2201696	2SA1491-P,Power amplifier transistor	U10	1A244545-1	NAAF-4045-1,Tone control circuit pc board ass'y <D>
	27121406-1Y	Back panel <P>		2202292,	2SC3182N-R,			
	27121406-3Y	Back panel <W>		2202293,	2SC3182N-O,			
	27121406-4Y	Back panel <Q>		2201703,	2SC3855-O,			
14	27300750	Bushing		2201704 or	2SC3855-Y or			
16	27190524	GLS-14R,Holder		2201706	2SC3855-P,Power amplifier transistor		1A244544-1A	NAETC-4044-1A,AC outlet pc board ass'y <W>
17	27190266	GLS-12R,Holder	T901	2300615Y	NPT-1093D,Power transformer <D>			
21	834430088	3TTS+8B(BC),Self-tapping screw		2300616Y	NPT-1093P,Power transformer <P>			
22	831130088	3TTW+8B,Self-tapping screw		2300617Y	NPT-1093DG,Power transformer <W>			
23	830440089	4TTC+8C(BC),Self-tapping screw		2300618Y	NPT-1093Q,Power transformer <Q>			
24	833430080	3TTP+8P(BC),Self-tapping screw	U1	1A244536-1	NARF-4036-1,Tuner circuit pc board ass'y <D>	U11	1A244546-1	NAETC-4046-1,Volume control pc board ass'y
25	82143006	3P+6FN(BC),Pan head screw		1A244536-1A	NARF-4036-1A,Tuner circuit pc board ass'y <P/Q>	U12	1A244596-1	NAETC-4096-1,Terminal pc board ass'y
26	801433	3SMS10W.SW+14B(BC),Sems self-tapping screw		1A244536-1B	NARF-4036-1B,Tuner circuit pc board ass'y <W>	U13	1A244597-1	NASW-4097-1,Voltage selector switch pc board ass'y <W>
31	28184471AY	Top cover	U2	1A244537-1	NADIS-4037-1,Display circuit pc board ass'y <D>			
32	834430088	3TTS+8B(BC),Self-tapping screw		1A244537-1A	NADIS-4037-1A,Display circuit pc board ass'y <P/Q>			
33	28140680	0.5 X 180 X 8,Cushion		1A244537-1B	NADIS-4037-1B,Display circuit pc board ass'y <W>			
34	27270212	Spacer <P/W/Q>		1A244538-1	NAAF-4038-1,Power amplifier circuit pc board ass'y <D>			
51	1A244121	Front panel ass'y	U3	1A244538-1A	NAAF-4038-1A,Power amplifier circuit pc board ass'y <P/W/Q>			
52	28125226AY	End cap L		1A244539-1	NASW-4039-1,Headphone terminal pc board ass'y <D>			
53	28125227AY	End cap R	U4	1A244539-1A	NASW-4039-1A,Headphone terminal pc board ass'y <P/W/Q>			
58	28191577Y	Clear plate		1A244540-1	NASW-4040-1,Power switch pc board ass'y			
59	833430080	3TTP+8P(BC),Self-tapping screw		1A244541-1	NAETC-4041-1,Terminal pc board ass'y			
60	28135199	Badge						
61	27175254Y	Leg						
62	834430088	3TTS+8B(BC),Self-tapping screw						
81	28324162Y	Knob LOUD	U5	1A244540-1	NASW-4040-1,Power switch pc board ass'y			
82	28324150-1Y	Knob LEV	U6	1A244541-1	NAETC-4041-1,Terminal pc board ass'y			
83	28324163	Knob VOL						
85	28324140Y	Knob POW						
86	28324170Y	Knob SP A						
87	28324171Y	Knob SP B						
91	27300833	WS-2NS,Clamp						
F901	252049	4A(ST-6),Fuse <D/W>						
F902	252074	2A-SE-EAK,Fuse <P/W/Q>						
F951	252074	2A-SE-EAK,Fuse <P/Q>						

NOTE: <D>:Only 120V model
<P>:Only 230V model
<W>:Only Worldwide model
<Q>:Only 240V model


NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

EXPLODED VIEW MODEL TX-900

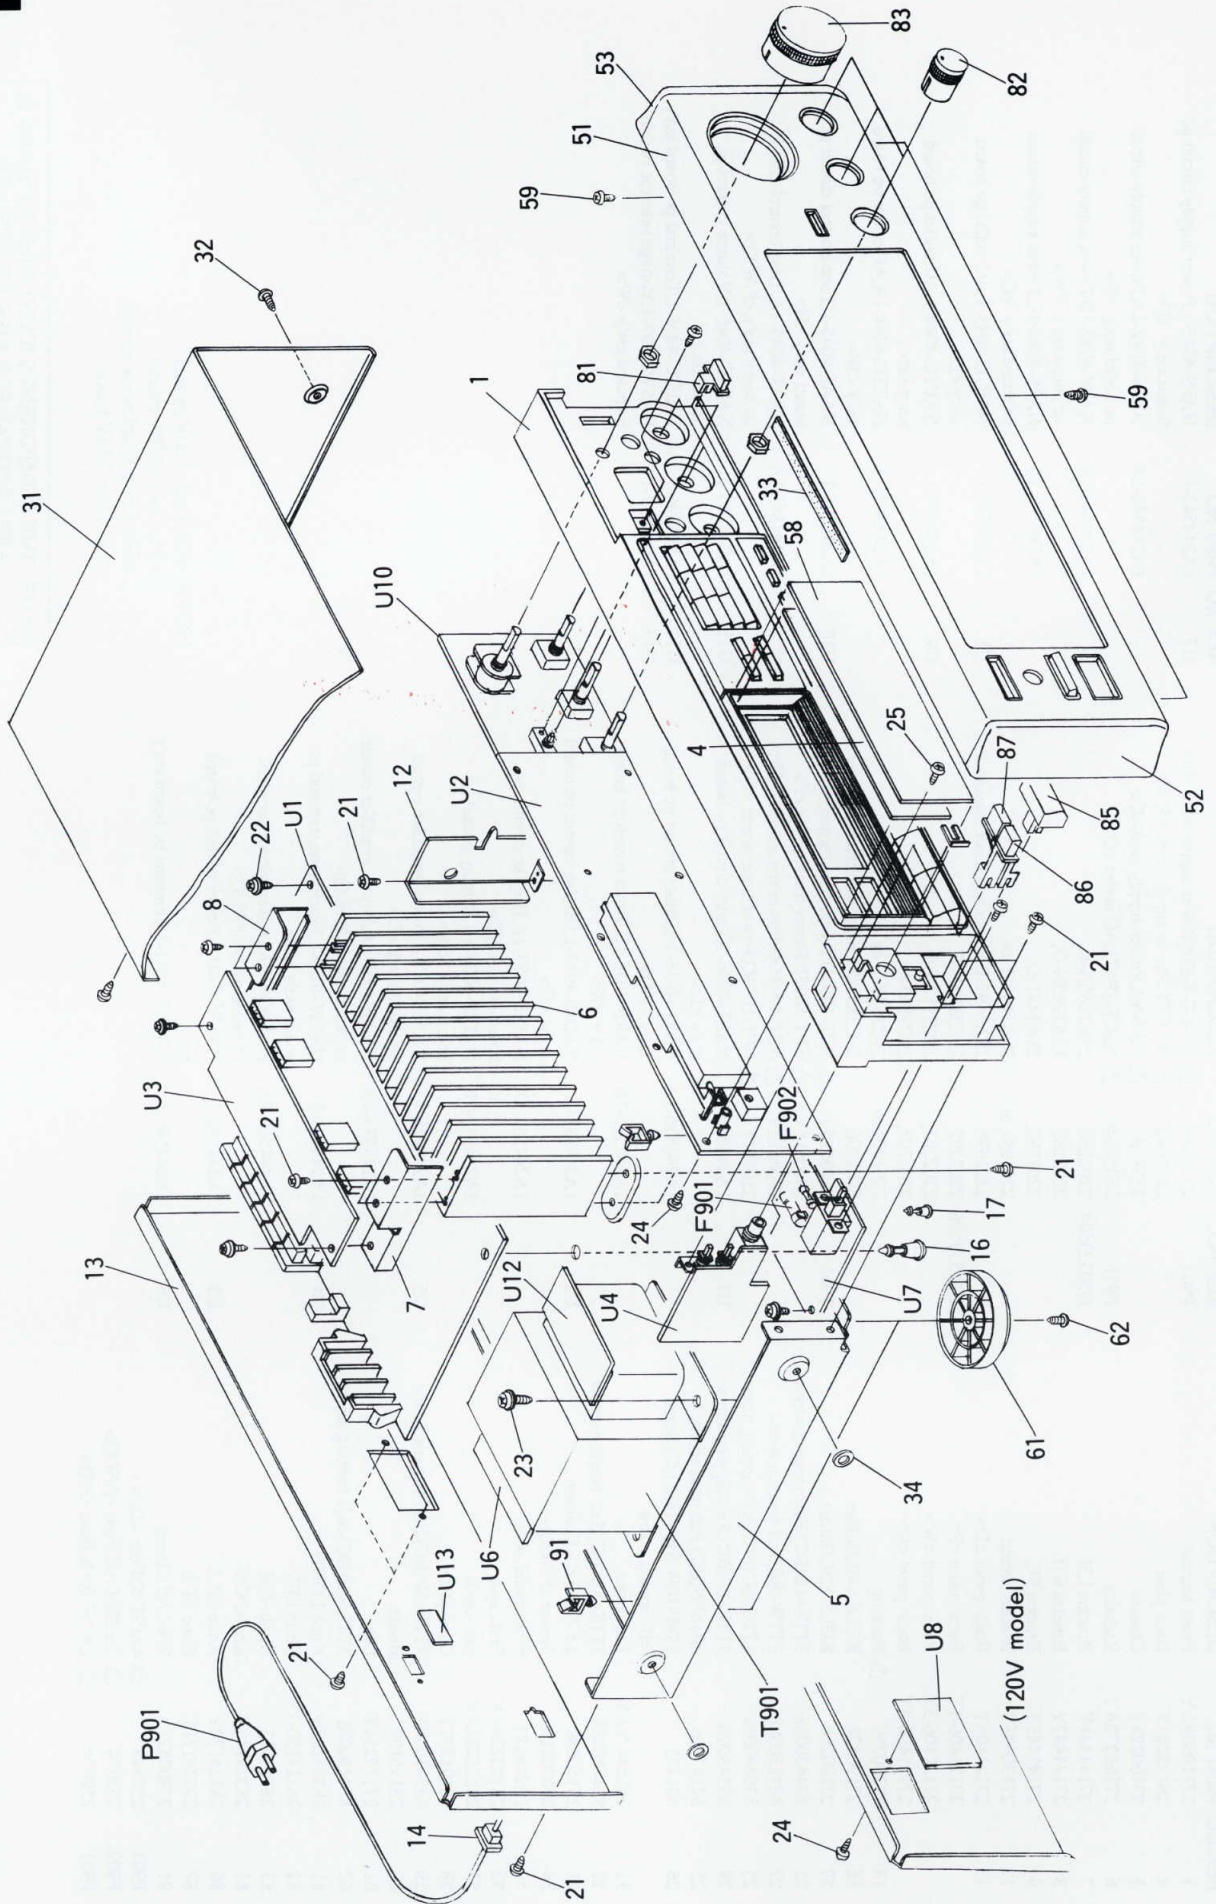

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	27110605AY	Front bracket	Q503,Q504	2202492, 2202493, 2202243, 2202244 or 2202246	2SA1265N-R, 2SA1265N-O, 2SA1491-O, 2SA1491-Y or 2SA1491-P,Power amplifier transistor	U7	1A248542-2	NAPS-4042-2,Power supply circuit pc board ass'y <D>
4	28133254Y	Back plate						
5	27100228Y	Chassis						
6	27160274AY	Radiator						
7	27141441Y	Bracket LH						
8	27141442Y	Bracket RH	Q505,Q506	2202502, 2202503, 2202253, 2202254 or 2202256	2SC3182N-R, 2SC3182N-O, 2SC3855-O, 2SC3855-Y or 2SC3855-P,Power amplifier transistor	U10	1A248542-2B	NAPS-4042-2B,Power supply circuit pc board ass'y <W>
12	27130643Y	Bracket,shield						
13	27121407Y	Back panel <D>						
	27121407-1Y	Back panel <P>						
	27121407-3Y	Back panel <W>						
	27121407-4Y	Back panel <Q>						
14	27300750	Bushing						
16	27190524	KGLS-14R,Holder						
17	27190266	KGLS-12R,Holder						
21	834430088	3TTS+8B(BC),Self-tapping screw						
22	831130088	3TTW+8B,Self-tapping screw						
23	830440089	4TTC+8C(BC),Self-tapping screw						
24	833430080	3TTP+8P(BC),Self-tapping screw						
25	82143006	3P+6FN(BC),Pan head screw						
26	801433	3SMS10W,SW+14B(BC),Sems self-tapping screw						
31	28184471AY	Top cover						
32	834430088	3TTS+8B(BC),Self-tapping screw						
33	28140680	0.5 X 180 X 8,Cushion						
34	27270212	Spacer <P/W/Q>						
51	1A248121	Front panel ass'y	U2	1A248537-2	NADIS-4037-2,Display circuit pc board ass'y <D>			
52	28125226AY	End cap L						
53	28125227AY	End cap R						
58	28191577Y	Clear plate						
59	833430080	3TTP+8P(BC),Self-tapping screw						
60	281315199	Badge						
61	27175254Y	Leg						
62	834430088	3TTS+8B(BC),Self-tapping screw						
81	28324162Y	Knob LOUD						
82	28324150-1	Knob LEV						
83	28324181	Knob VOL						
85	28324140Y	Knob POW						
86	28324170Y	Knob SP A						
87	28324171Y	Knob SP B						
91	27300833	WS-2NS,Clamp						
F901	252049	4A(ST-6),Fuse <D/W>						
F902	252074	2A-SE-EAK,Fuse <P/W/Q>						
F951	252074	2A-SE-EAK,Fuse <P/Q>						
P901	253163 Y	AS-UC-6 #18,Power supply cord <D>						
	253164 Y	AS-CEE,Power supply cord <P/W>						
	253118	AS-SAA,Power supply cord <Q>						

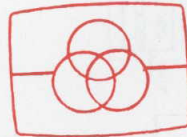

Free service manuals
Gratis schema's

Digitized by


www.freeservicemanuals.info

NOTE: <D>:Only 120V model
<P>:Only 230V model
<W>:Only Worldwide model
<Q>:Only 240V model


NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

BLOCK DIAGRAM


MODEL TX-902
120V MODEL

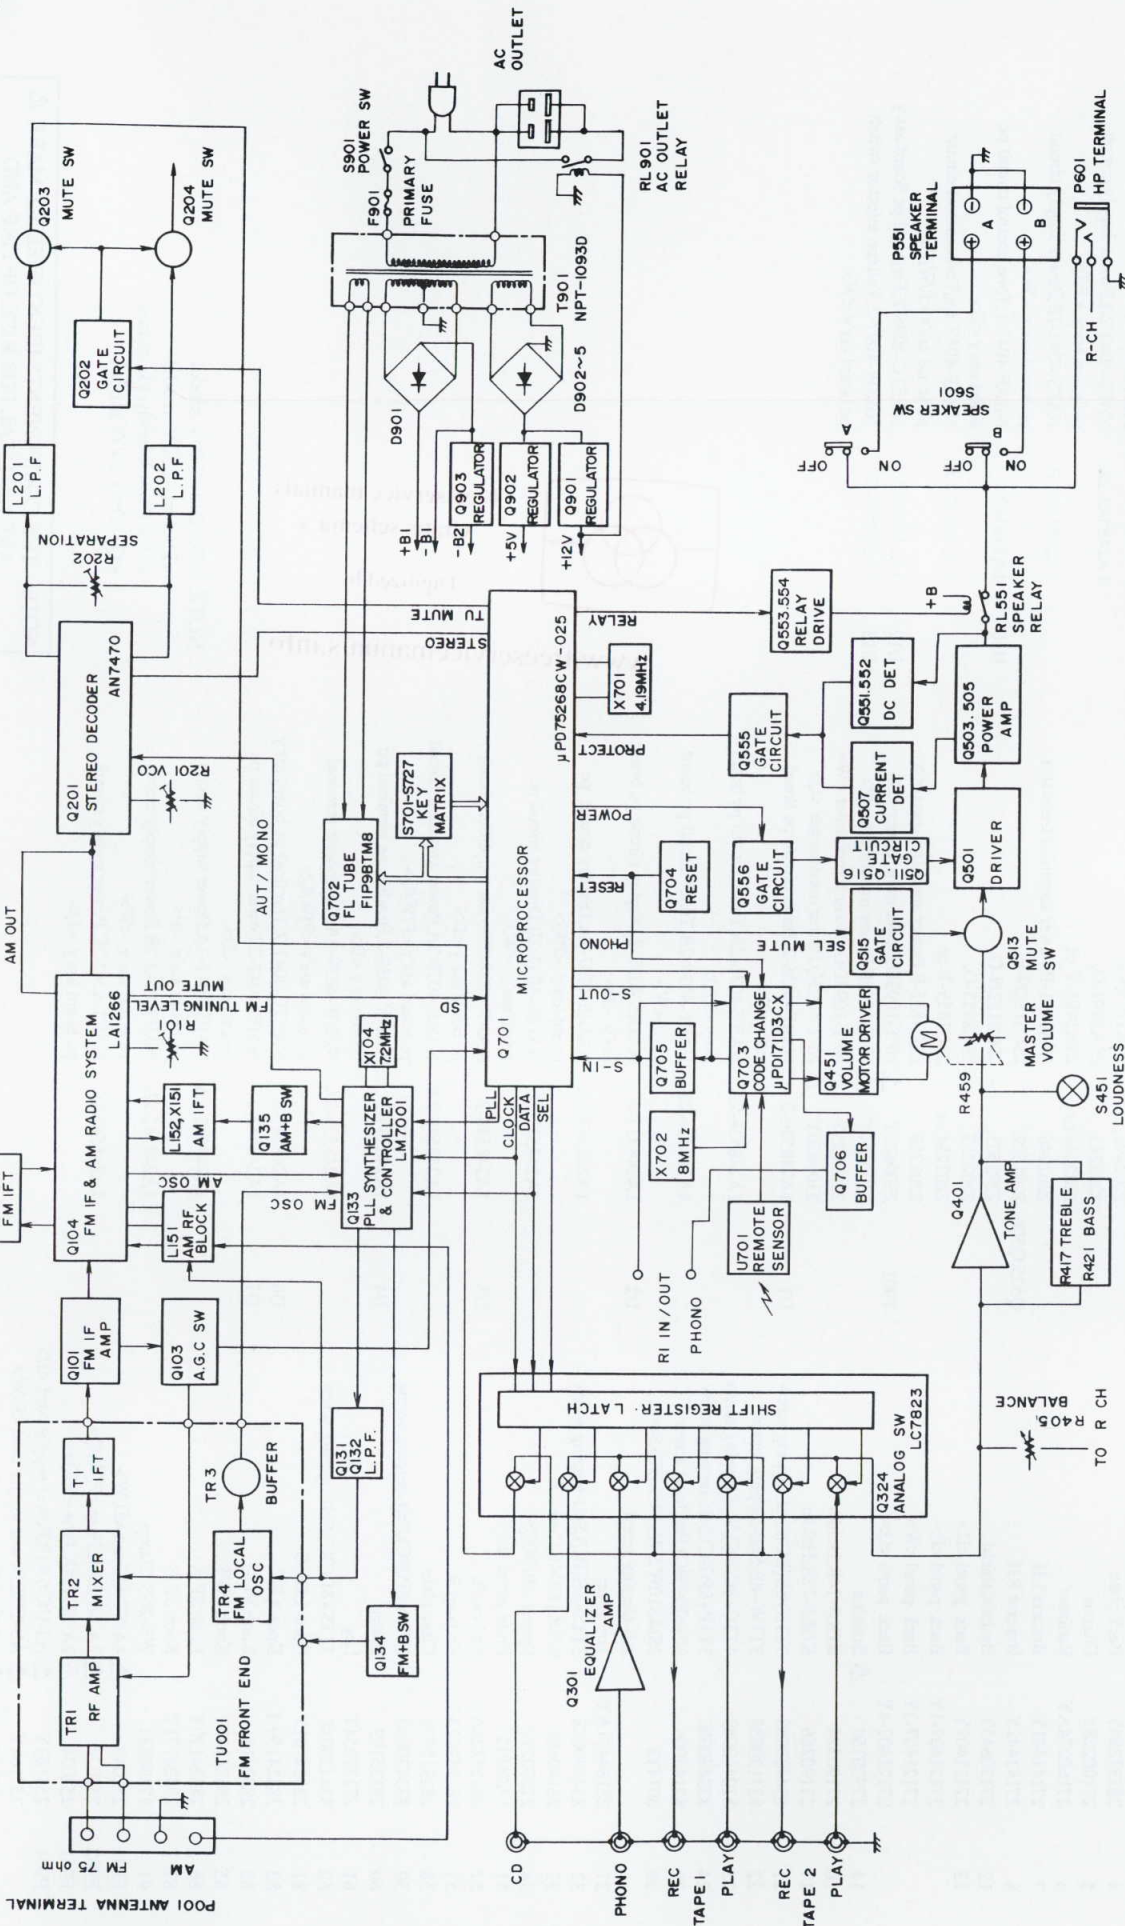



OTHER MODELS

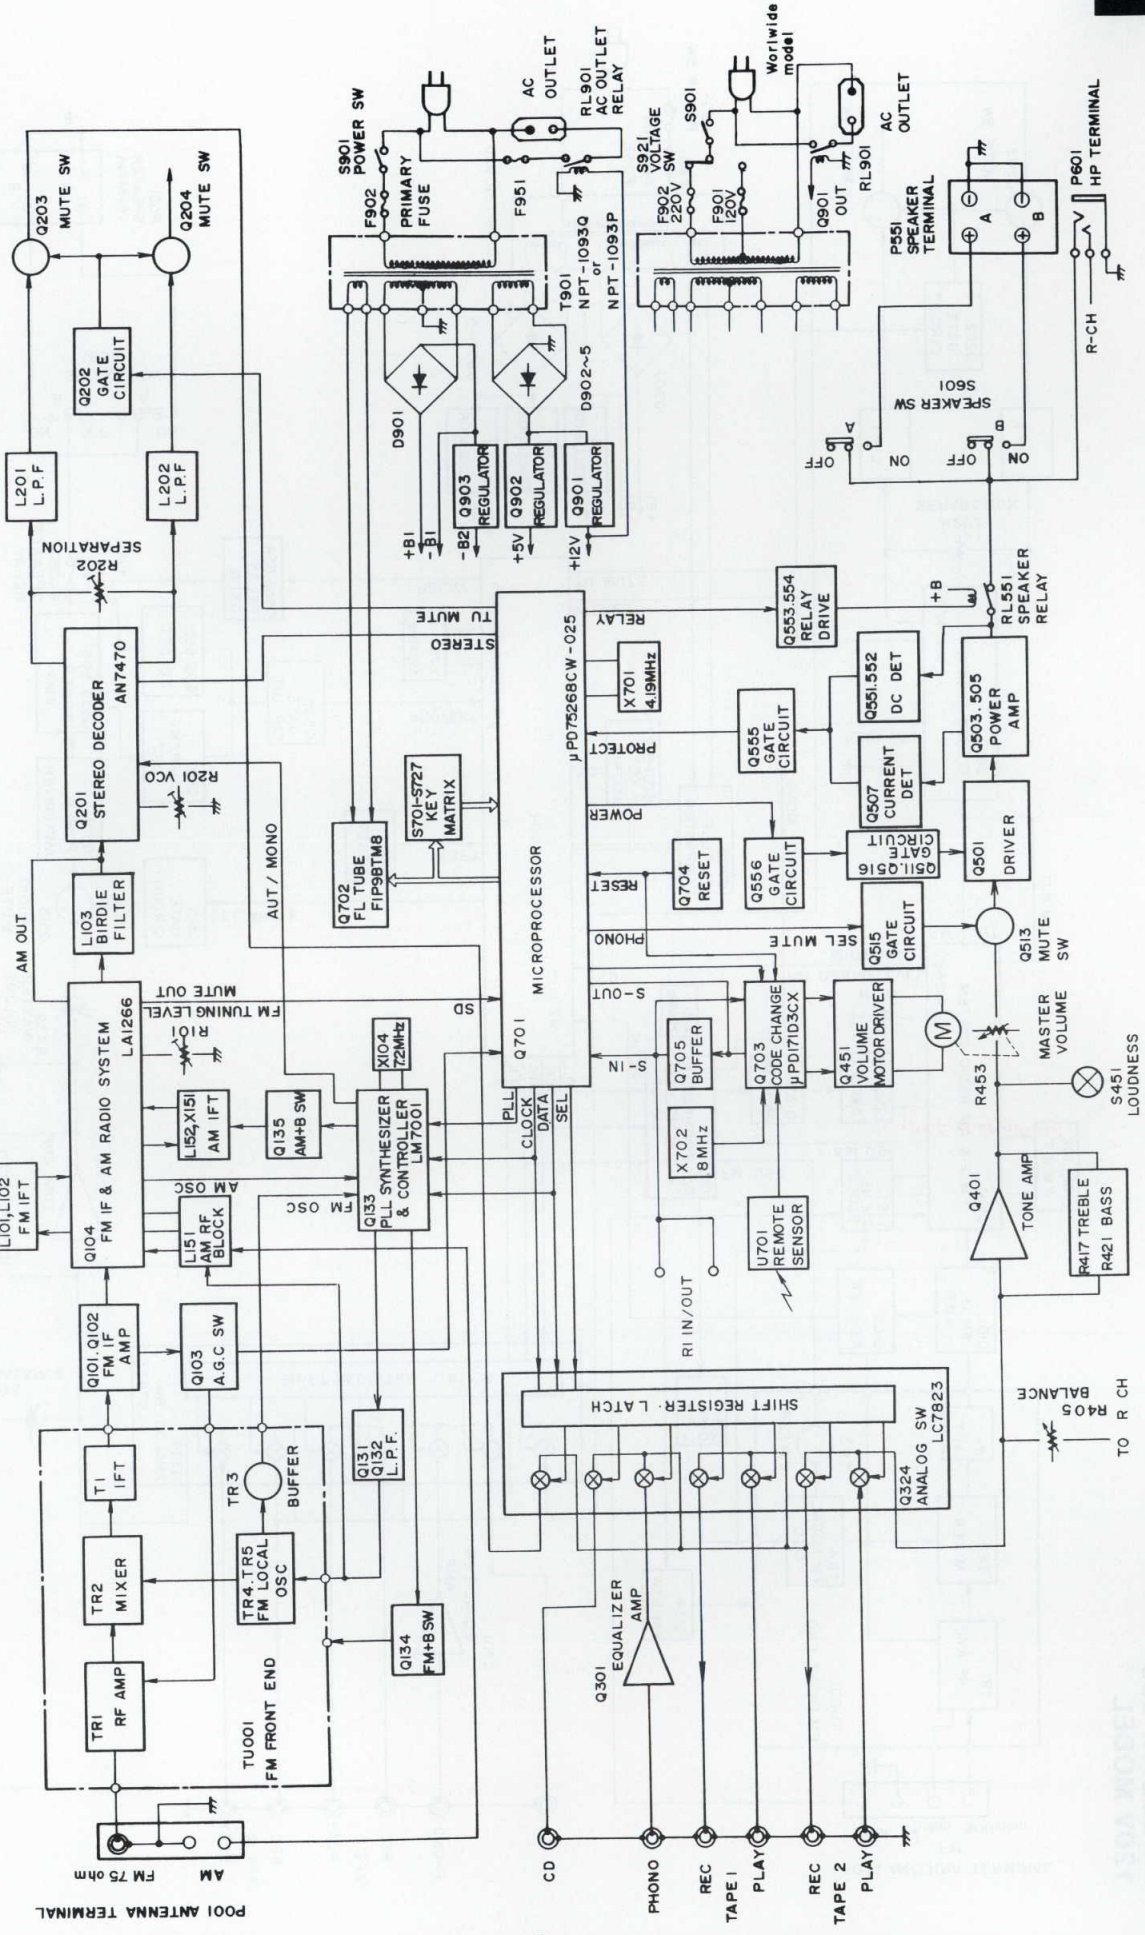

BLOCK DIAGRAM MODEL TX-900 120V MODEL

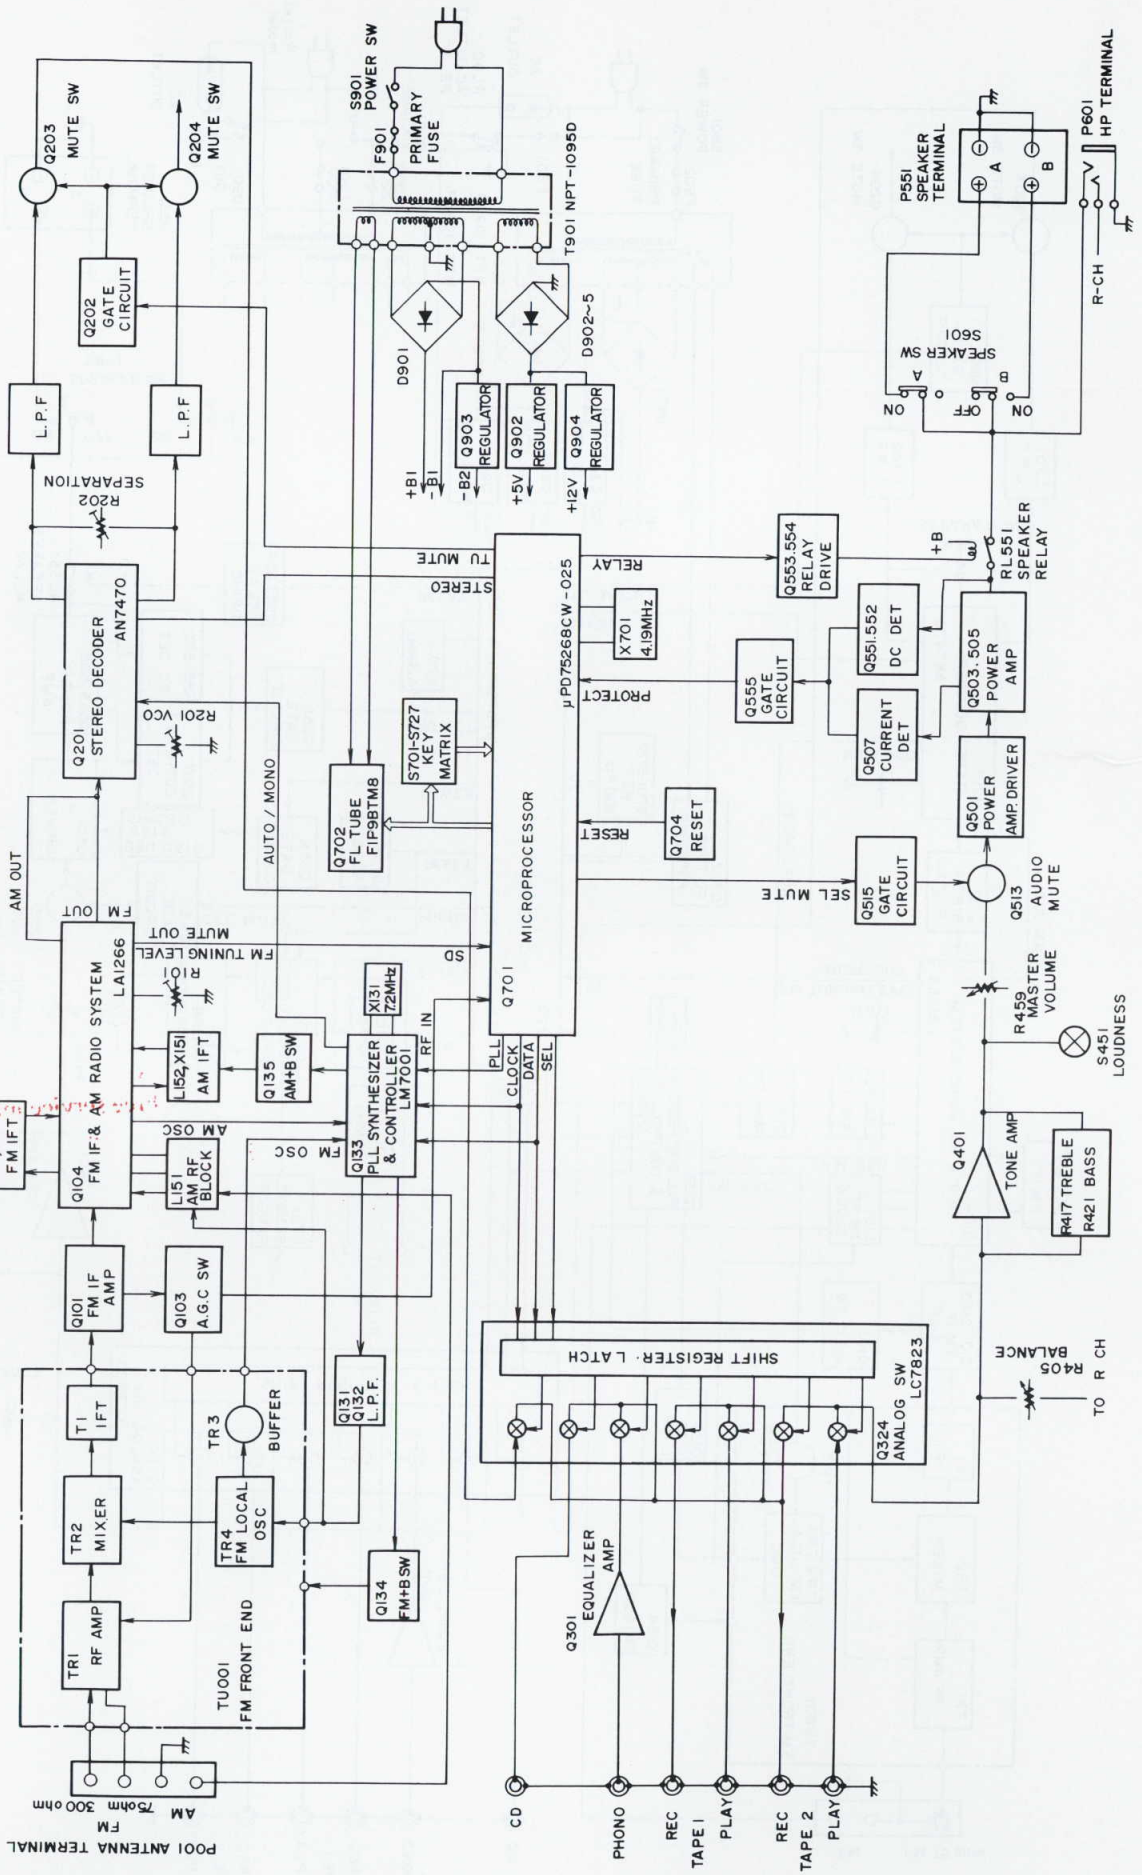

OTHER MODELS

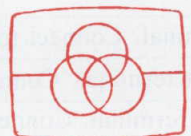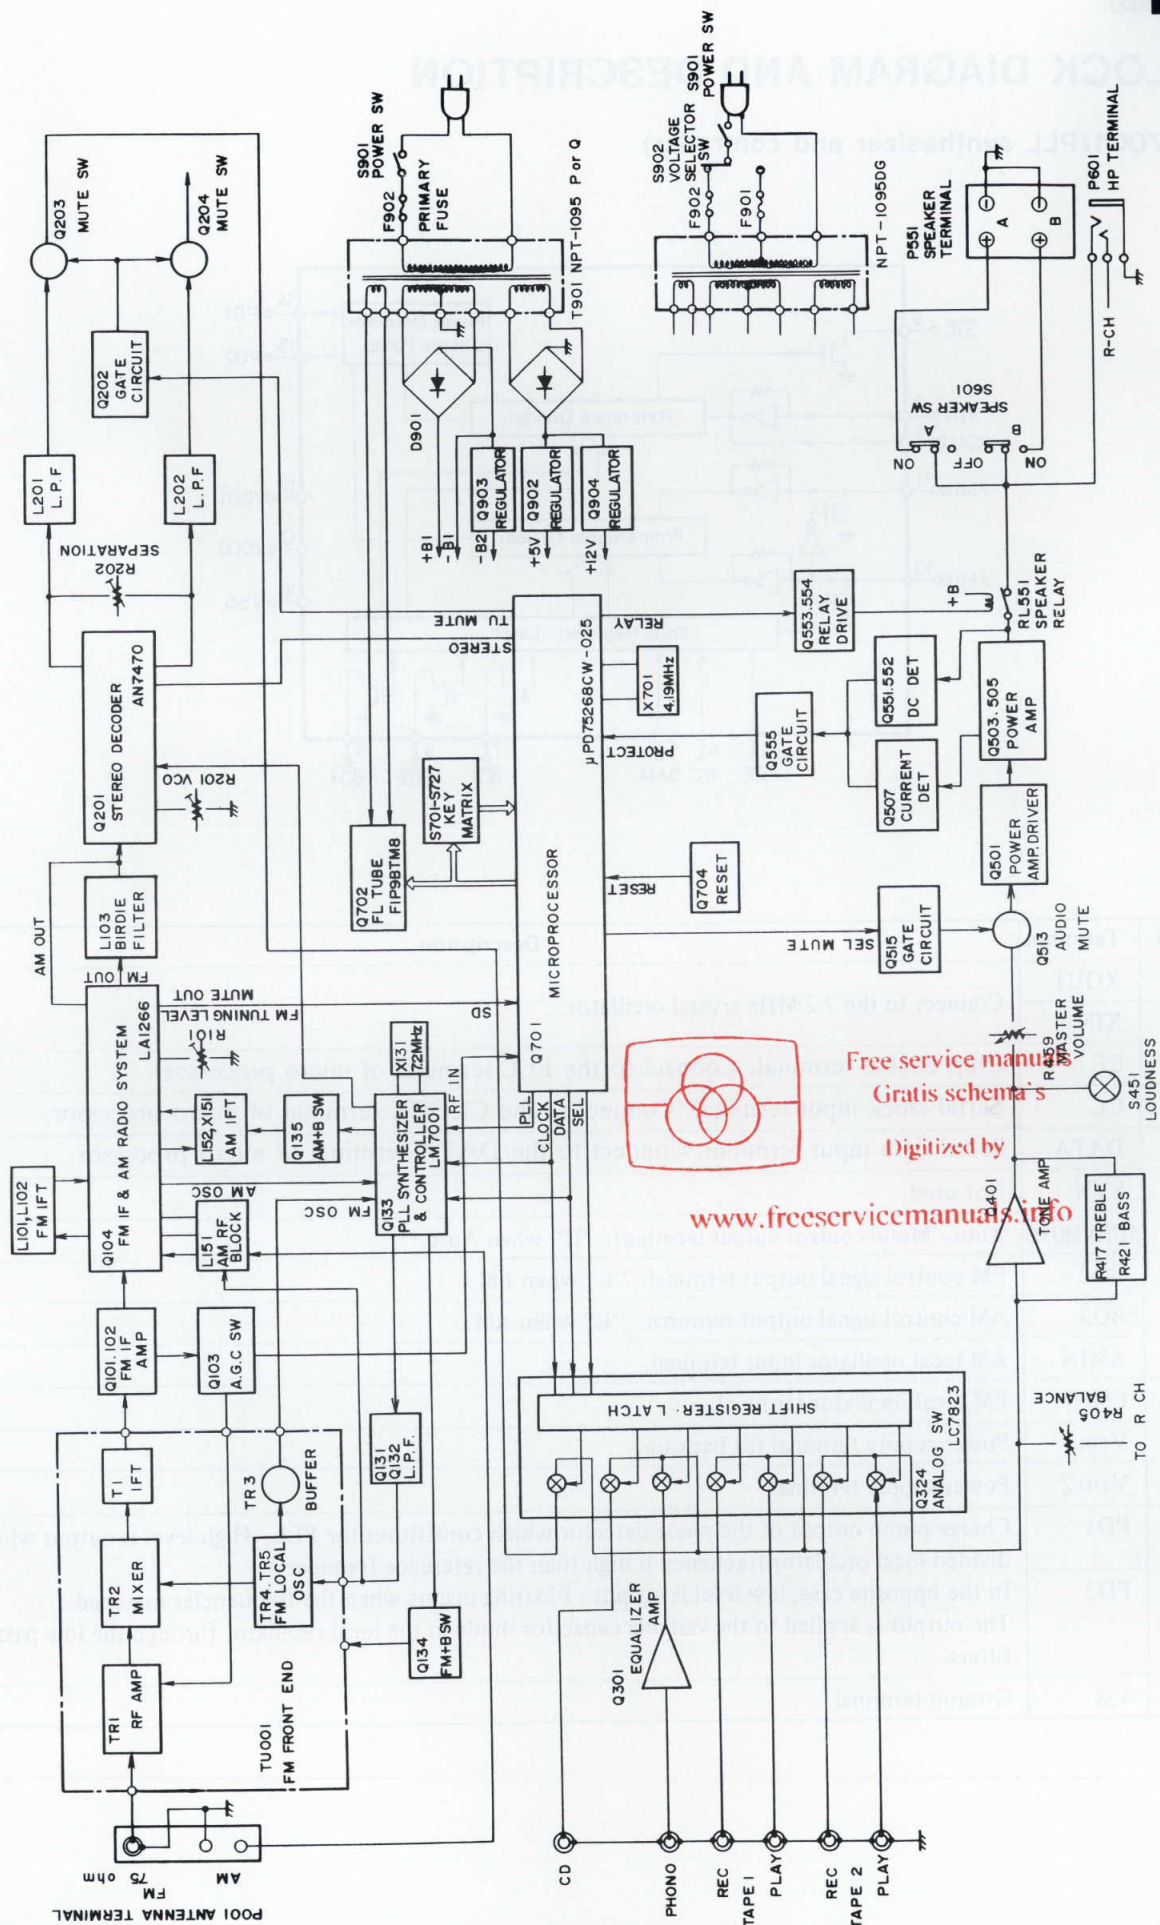


Free service manuals
 Gratis schema's
 Digitized by



www.freeservicemanuals.info

IC BLOCK DIAGRAM AND DESCRIPTION

LM7001(PLL synthesizer and controller)

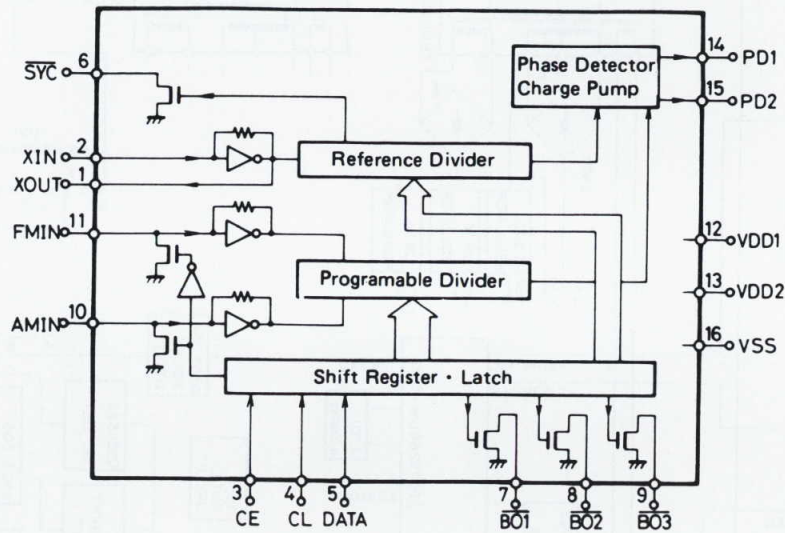


Pin No.	Terminal	Description
1	XOUT	Connect to the 7.2 MHz crystal oscillator.
2	XIN	
3	CE	Chip enable terminal. Connect to the PLL terminal of micro processor.
4	CL	Serial clock input terminal. Connect to the CLOCK terminal of micro processor.
5	DATA	Serial data input terminal. Connect to the DATA terminal of micro processor.
6	SYN	Not used.
7	AUTO/MONO	Auto/Mono control output terminal. "H" when Auto.
8	BO2	FM control signal output terminal. "L" when FM.
9	BO3	AM control signal output terminal. "L" when AM.
10	AMIN	AM local oscillator input terminal.
11	FMIN	FM local oscillator terminal.
12	VDD 1	Power supply terminal for back-up.
13	VDD 2	Power supply terminal.
14	PD1	Charge pump output of the phase detector which constitutes the PLL. High level is output when the divided local oscillator frequency is high than the reference frequency. In the opposite case, low level is output. Floating occurs when the frequencies matched. The output is applied to the variable capacitor diode in the local oscillator through the low pass filters.
15	PD2	
16	Vss	Ground terminal.

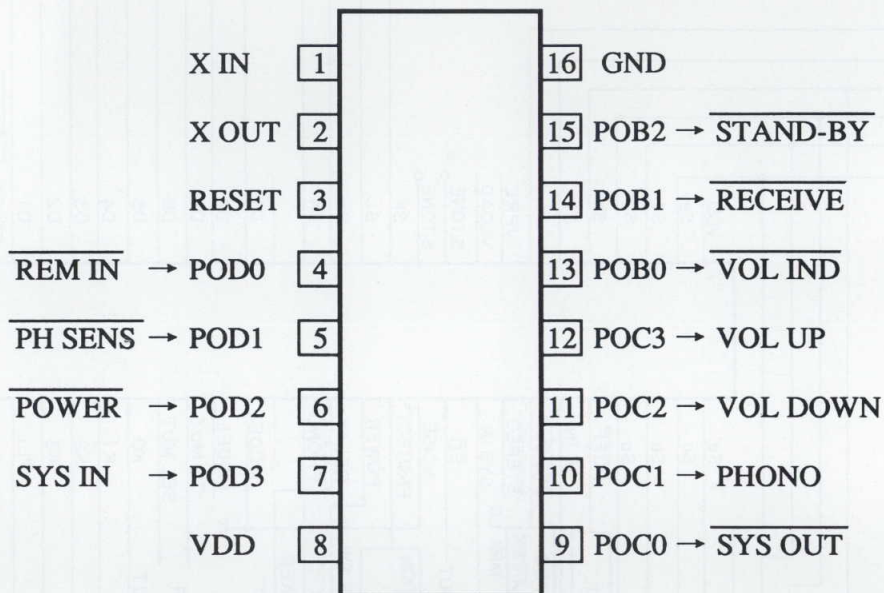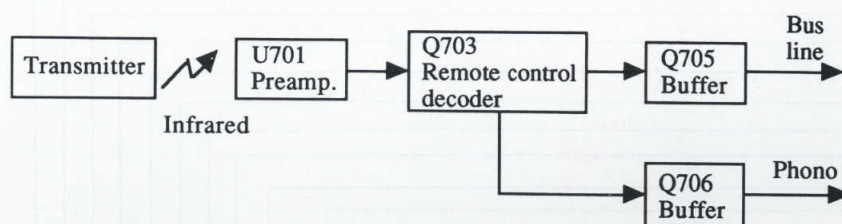μ PD17103CX-528(Remote control decoder)

Pin No.	Symbol	Terminal	Description
1	XIN	OSC	Connect to the 8.00MHz ceramic oscillator.
2	XOUT		
3	RES	$\overline{\text{RESET}}$	System reset terminal. Active low.
4	POD0	$\overline{\text{REMOTE IN}}$	Signal input terminal from preamp. for remote control. Active low.
5	POD1	$\overline{\text{PHONO SENS}}$	Phono detection input terminal. Active low.
6	POD2	$\overline{\text{POWER}}$	Stand-by detection input terminal. During low input, only the POWER code is decoded.
7	POD3	SYS IN	System code input terminal.
8	V _{DD}	+B	Power supply terminal.
9	POC0	$\overline{\text{SYS OUT}}$	Output at this terminal are the custom code (16bits) remote control code input to REMOTE IN, data code (8bits), and the serial code (12bits) that has been converted corresponding to the decoded data code (8bits)
10	POC1	PHONO	When the player PLAY/REEJECT is input, a high pulse of 200ms is output.
11	POC2	VOL DOWN	When the volume DOWN code is input, a high pulse of 120ms is output.
12	POC3	VOL UP	When the volume UP code is input, a high pulse of 120ms is output.
13	POB0	$\overline{\text{VOL IND}}$	During the output of VOLUME UP/DOWN, a pulse ($\overline{\text{T}}\text{T}\overline{\text{T}}\text{T}$) = 250ms) is output. (Not used.)
14	POB1	$\overline{\text{RECEIVE}}$	This is the display output for remote control reception. Output is low when decoded code is being received.
15	POB2	$\overline{\text{STAND-BY}}$	STAND-BY indication terminal.
16	V _{SS}	GND	Ground terminal.

μ PD75268CW-025 (Microprocessor)

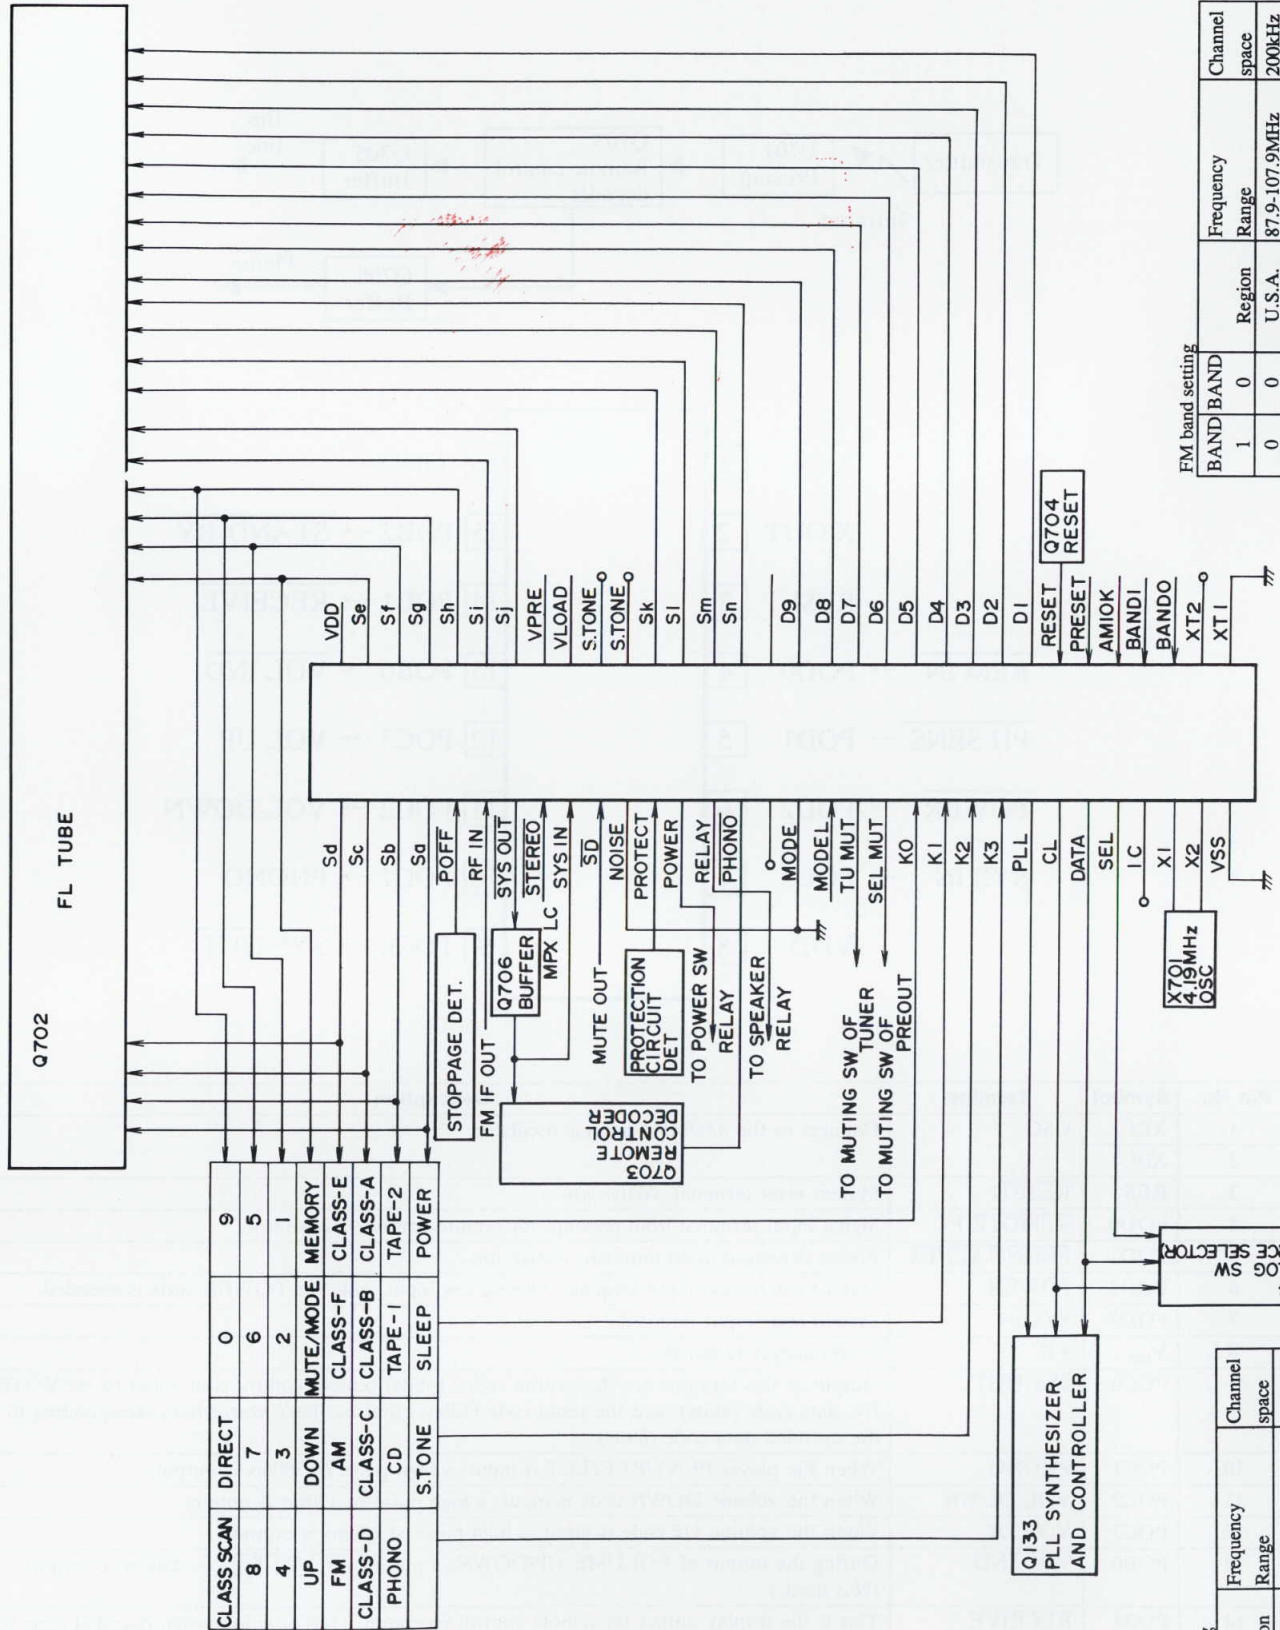

CLASS SCAN	DIRECT	0	9
8	7	6	5
4	3	2	1
UP	DOWN	MUTE/MODE	MEMORY
FM	AM	CLASS-F	CLASS-E
CLASS-D	CLASS-C	CLASS-B	CLASS-A
PHONO	CD	TAPE-1	TAPE-2
S.TONE	SLEEP	POWER	

FM band setting


BAND BAND	Region	Frequency Range	Channel space
1 0	U.S.A.	87.9-107.9MHz	200kHz
0 1	Europe	87.50-108.00MHz	50kHz
1 0	Saudi Arabia	87.50-108.00MHz	50kHz
1 1	Japan	76.0-90.0MHz	100kHz

AM band setting

AM	Region	Frequency Range	Channel space
AM 10K	Europe	522-1611kHz	9kHz
0*	Japan	531-1602kHz	9kHz
0*	Saudi Arabia	531-1602kHz	9kHz


Pin No.	Symbol	Description						
1	Sd							
2	Sc	Segment and key scan output terminals. "H" when active.						
3	Sb							
4	Sa							
5	POFF	This is the input terminal for detection of the stoppage of electric current. "L" when the stoppage of electric current.						
6	RF IN	RF mode input terminal. <table border="1" style="margin-left: 20px;"> <tr> <td>RF IN</td> <td>RF MODE</td> </tr> <tr> <td>L</td> <td>LOCAL</td> </tr> <tr> <td>H</td> <td>DX</td> </tr> </table>	RF IN	RF MODE	L	LOCAL	H	DX
RF IN	RF MODE							
L	LOCAL							
H	DX							
7	SYS OUT/ SYS EN	System code output terminal. "L" when active. Initializing input terminal when the power turns on.						
8	STEREO	Stereo broadcast detection input terminal. "L" when stereo broadcast.						
9	SYS IN	System code input terminal. "H" when active.						
10	SD	Broadcast detection input terminal. "L" when active. Control the stop of auto tuning and output TU MUT(#19).						
11	NOISE	Noise detection input terminal. Not used.						
12	PROTECT	Protection circuit operation detection input terminal.						
13	POWER	Power control output terminal.						
14	RELAY	Speaker relay control output terminal.						
15	PHONO	Phono control output terminal.						
16		Not used.						
17	MODE	Initializing input terminal for operation mode setting.						
18	MODEL	Initializing input terminal for model setting of receiver.						
19	TU MUT	Muting output terminal. "H" when active.						
20	SEL MUT	Audio muting output terminal. Not used.						
21	K0							
22	K1	Key scan input terminals.						
23	K2	"H" when active.						
24	K3							
25	PLL	Connect to the terminal CE of PLL IC (LM7001 Q133).						
26	CL	Connect to the terminal CL of PLL IC and analogue switch.						
27	DATA	Connect to the terminals DATA of PLL IC and analogue switch.						
28	SEL	Analog switch control output terminal. Connect to the terminal SEL of analogue switch (LC7823 Q324).						

Pin No.	Function	Description
29	IC	Internal connected.
30	X1	Ceramic oscillator connection terminal for main system clock.
31	X2	Connect to the 4.19MHz ceramic oscillator.
32	VSS	Ground terminal.
33	XT1	Ceramic oscillator connection terminal for sub system clock.
34	XT2	Not used.
35	BAND0	Initializing input terminal for region setting of FM band.
36	BAND1	
37	AM 10K	Initializing input terminal for region setting of AM band.
38	PRESET	Initializing input terminal for operation mode setting.
39	RESET	Reset input terminal. "L" when active.
40	D1	
41	D2	
42	D3	
43	D4	
44	D5	Digit output terminals. "H" when active.
45	D6	
46	D7	
47	D8	
48	D9	
49		Not used.
50	Sn	
51	Sm	Segment output terminals. "H" when active.
52	Sl	
53	Sk	
54	S.TONE	SELECTIVE TONE indication output terminal. Not used.
55	S.TONE	SELECTIVE TONE control output terminal. Not used.
56	VLOAD	Pull-down resistor connection terminal of FIP controller/driver.
57	VPRE	Power supply terminal of output buffer of FIP controller/driver.
58	Sj	
59	Si	
60	Sh	Segment and key scan output terminals.
61	Sg	"H" when active.
62	Sf	
63	Se	
64	VDD	Power supply terminal. (+5V)

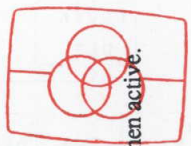


www.freeservicemanuals.info
 Free service manuals
 Gratis schema's
 Digitized by


LA1266(FM IF and AM radio system)

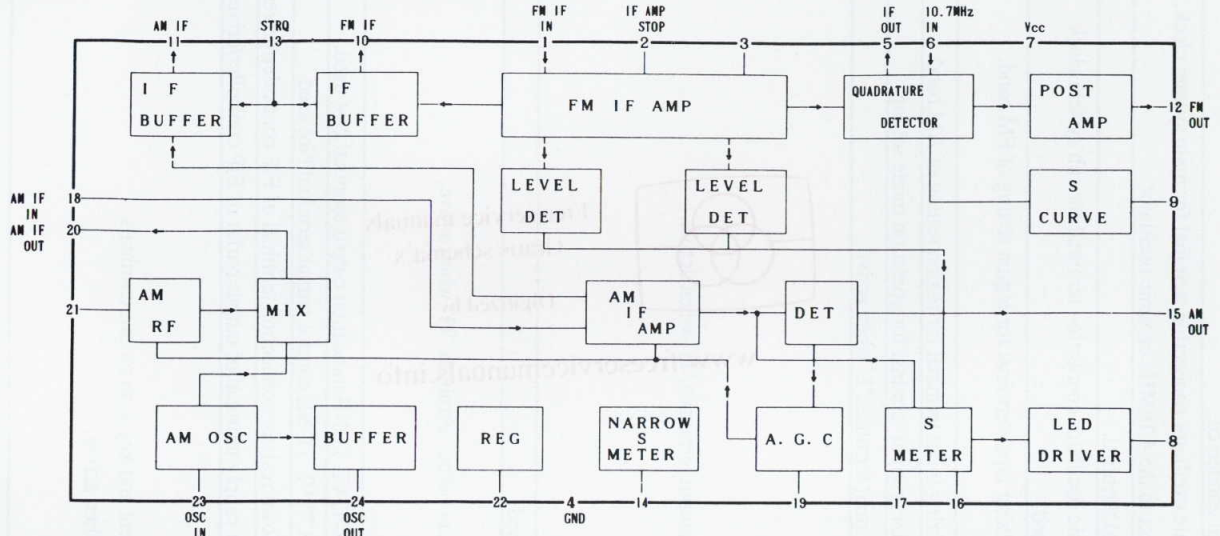

AN7470(Stereo decoder)

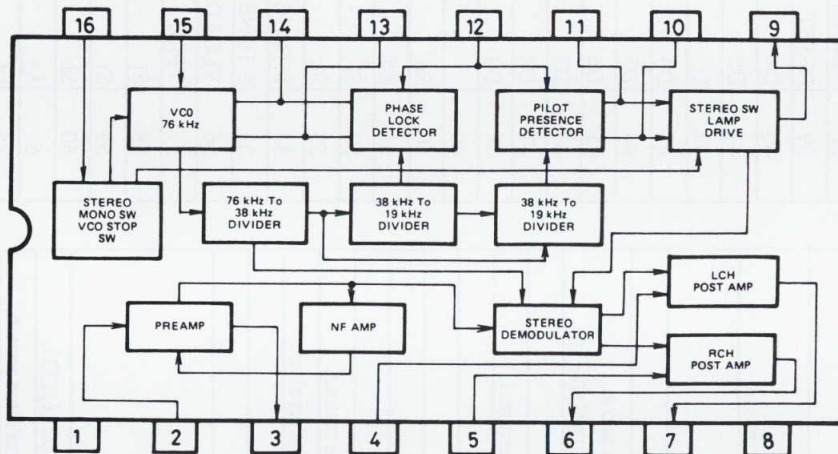


**LB1630 (Motor driver)
(Only Model TX-902)**

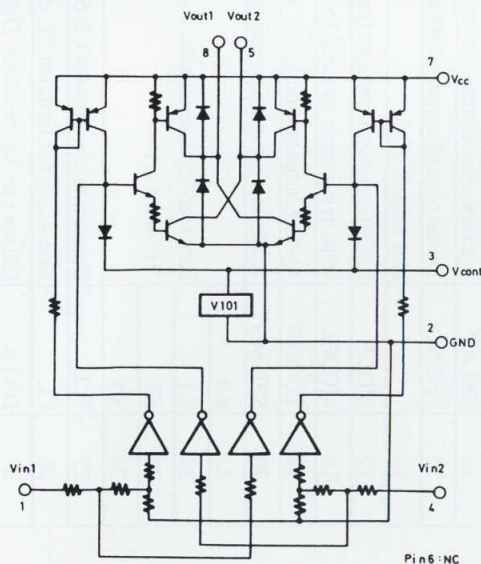

TRUTH TABLE

IN 1	IN 2	OUT 1	OUT 2	MOTOR
H	L	H	L	Normal
L	H	L	H	Reverse
H	H	OFF	OFF	Wait
L	L	OFF	OFF	Wait


FIP9BTM8(Fluorescent tube)

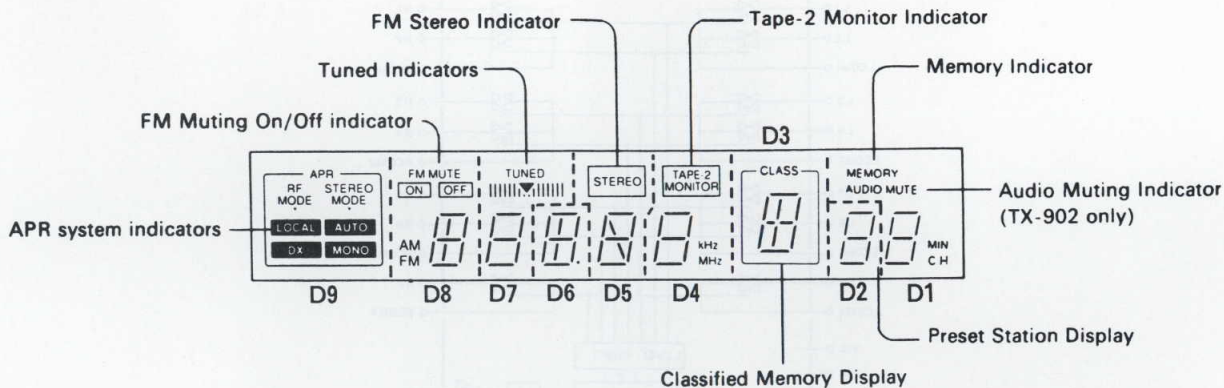

Terminal No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Electrode	F	F	NP	9G	NP	NP	NP	NP	NP	9G	NP	8G	NP	NP	8G	P(n)
Terminal No.	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	Note: F:Filament G:Grid P:Anode NP:No pin
Electrode	7G	7G	P(m)	6G	6G	P(l)	P(k)	5G	P(j)	P(i)	4G	P(h)	NP	4G	P(g)	
Terminal No.	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	
Electrode	3G	P(f)	P(e)	3G	P(a)	2G	2G	P(b)	1G	P(c)	P(d)	1G	NP	F	F	


	D9	D8	D7	D6	D5	D4	D3	D2	D1
Sa	APR	a	a	a	a	a	a	a	a
Sb	STEREO MODE	b	b	b	b	b	b	b	b
Sc	AUTO	c	c	c	c	c	c	c	c
Sd	MONO	d	d	d	d	d	d	d	d
Se	DX	e	e	e	e	e	e	e	e
Sf	LOCAL	f	f	f	f	f	f	f	f
Sg	RF MODE	g	g	g	g	g	g	g	g
Sh					h				
Si		i		i			i		
Sj		FM MUTE	TUNED		STEREO	TAPE-2	CLASS		MEMORY
Sk		ON	▼ (TUNED)				k		SLEEP
Sl		OFF							AUDIO MUTE
Sm		AM				kHz			MIN
Sn		FM				MHz			CH

LC7823/LC7823N(Analog switch)

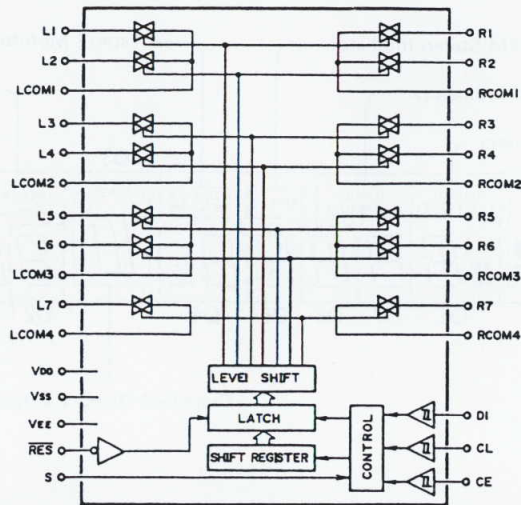


Pin No.	Terminal	Description
1,30	CD	On when the input selector is CD.
2,29	PHONO	On when the input selector is PHONO.
3,28	LCOM1,RCOM1	Common terminal.
4,27	TAPE-1 REC	Off when the input selector is TAPE-1.
5,26	TAPE-1 PB	On when the input selector is TAPE-1.
6,25	LCOM2,RCOM2	Common terminal.
7,24	TAPE-2 REC	Off when the input selector is TAPE-2.
8,23	TAPE-2 PB	On when the input selector is TAPE-2.
9,22	LCOM3,RCOM3	Common terminal.
10,21	TUNER	On when the input selector is TUNER.
11,20	LCOM4,RCOM4	Common terminal.
12	VEE	Negative power supply terminal.(-15V)
13	CE	Chip enable terminal.Connect to the terminal FUNC of the microprocessor.
14	DI	Serial data input terminal.Connect to the terminal DATA of the microprocessor.
15	CL	Serial clock terminal.Connect to the terminal CL of the microprocessor.
16	Vss	Ground terminal.
17	S	Select terminal.
18	RES	Reset terminal.
19	VDD	Power supply terminal.(+5V)


μPC1225H(Power amplifier driver)

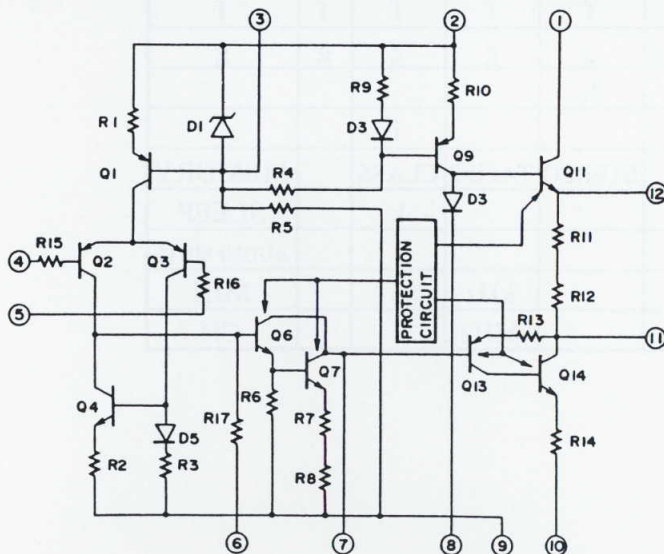

NJM4558D-X (Operation amplifier)

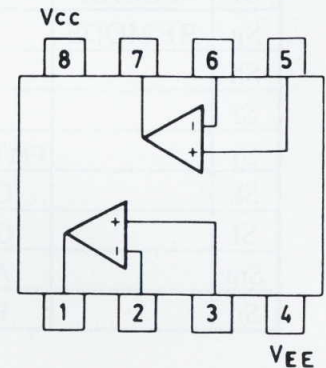

PACKING VIEW

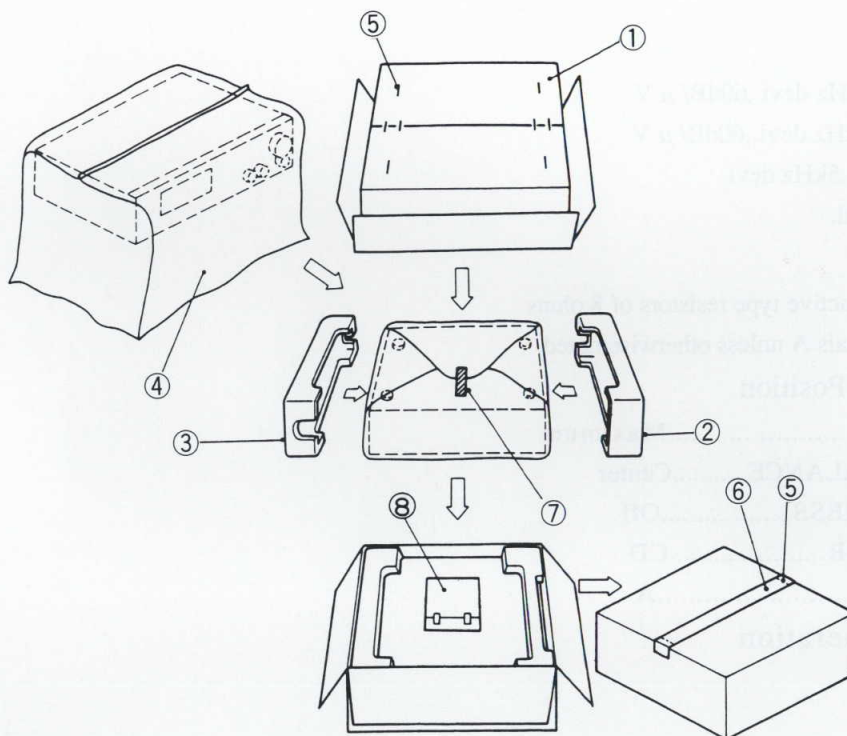

TX-902

REF. NO.	PART NO.	DESCRIPTION
1	29052137Y	Master carton box
2	29091440AY	Pad L
3	29091441AY	Pad R
4	29100034A	850×650,Styrene bag
5	282301	Sealing hook
6	29110071	Damplon tape
7	261504	Adhesive tape
8	Accessory bag ass'y	
	29341583Y	Instruction manual <D>
	29341585Y	Instruction manual <P/W/Q/C>
	29100097	350×250,Styrene bag
	292064B	FM antenna <D/W>
	292092	FM antenna <P/Q>
	25060123	YAE21-0120A,FM antenna adaptor <W/Q>
	232140	NMA-3057,AM loop antenna
	25055040	CV-K-2,Conversion plug <W>
	29365019A	Warranty card <N>
	29365024	Warranty card <F>
	29100107	Styrene bag for warranty card <F>
	29358002J	Service station list<N>
	3010165Y	UM-3,Two batteries
	24140183Y	RC-183S,Remote control unit
	24140184Y	RC-184S,Remote control unit
	2010200	Cord RI

TX-900

REF. NO.	PART NO.	DESCRIPTION
1	29052138Y	Master carton box
2	29091440AY	Pad L
3	29091441AY	Pad R
4	29100034A	850×650,Styrene bag
5	282301	Sealing hook
6	29110071	Damplon tape
7	261504	Adhesive tape
8	Accessory bag ass'y	
	29341583Y	Instruction manual <D>
	29341585Y	Instruction manual <P/W/Q/C>
	29100097	350×250,Styrene bag
	292064B	FM antenna <D/W>
	292092	FM antenna <P/Q>
	25060123	YAE21-0120A,FM antenna adaptor <W/Q>
	232140	NMA-3057,AM loop antenna
	25055040	CV-K-2,Conversion plug <W>
	29365019A	Warranty card <N>
	29365024	Warranty card <F>
	29100107	Styrene bag for warranty card <F>
	29358002J	Service station list<N>

NOTE: <D>:Only 120V model
 <P>:Only 230V model
 <W>:Only Worldwide model
 <Q>:Only 240V model
 <N>:Only U.S.A. model
 <F>:Only French model
 <C>:Only Canadian model

ADJUSTMENT PROCEDURES

Preparation

1. Input

FM mono: 1kHz, 75kHz devi., 60dB/μV

FM stereo: 1kHz, 75kHz devi., 60dB/μV

Pilot signal 19kHz 7.5kHz devi.

AM: 400Hz 30% mod.

2. Outputs

Connect the non-inductive type resistors of 8 ohms to the speaker terminals A unless otherwise noted.

3. Standard Knob Position

VOLUME.....Maximum

BASS/TREBLE/BALANCE.....Center

MUTING/LOUDNESS.....Off

INPUT SELECTOR.....CD

SPEAKERS.....A

Confirming Operation

1. Protection circuit

a. Speaker relay

The speaker relay turns on after the power switch turned on for 5 minutes.

The speaker relay turns off immediately after the power switch turns off.

b. Over-voltage confirmation

The speaker relay is off immediately after DC voltage ±6V is applied to the terminal CD.


Amplifier section

Idling Current Adjustment

Connect the DC voltmeter to the terminals LID(RID) and CT on the power amplifier pc board.

Adjust the semi-fixed resistor R511(R512) so that the indication of voltmeter is 5 ± 0.5mV.

Note: () : Right channel



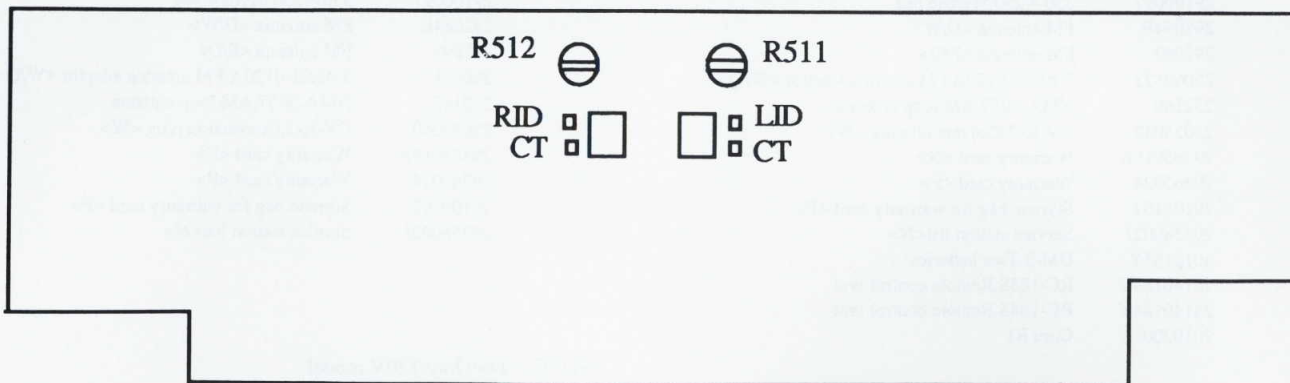


POWER AMPLIFIER PC BOARD

SOLDERING SIDE

FM section


Item	Step	Connection of instrument	FM SG output	Stereo modulator output	Tuned frequency	Output indicator	Adjustment point	Adjust for	Remarks
I F	1	Fig. 1	99.1MHz 1kHz,75kHz devi. 65dBf(60dB)	—	99.1MHz	DC voltmeter	L101	0 ± 20mV	Set the FM mode switch to MONO. Repeat the steps 1 and 2 until no further adjustment is necessary.
	Distortion analyzer					L102	Minimum		
V C O		Fig. 2	99.1MHz 1kHz,75kHz devi. 65dBf(60dB)	—	99.1MHz	Frequency counter	R201	19kHz ± 10Hz	Set the FM mode switch to AUTO.
Stereo distortion		Fig.3	99.1MHz Ext. modulation 65dBf(60dB)	L+R 1kHz 67.5kHz devi.	99.1MHz	Distortion analyzer	IF on front end	Minimum	
Stereo separation	1	Fig.3	99.1MHz Ext. modulation 65dBf(60dB)	Lch. 1kHz	99.1MHz	Rch. AC voltmeter	R202	Minimum	Maximum and same separation
	2			Rch. 1kHz		Lch. AC voltmeter		Minimum	
Tuned indicator level	1	Fig. 3	99.1MHz 1kHz, 75kHz devi. 19.2dBf(14dB)(120V model) 12dB (other models)	—	99.1MHz	TUNED indicator	R101	Light on	
	2		99.1MHz 1kHz, 75kHz devi. 18.2dBf(13dB) 11dB (other models)			Light off			

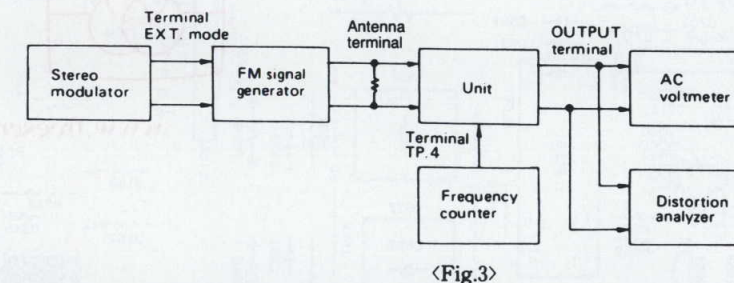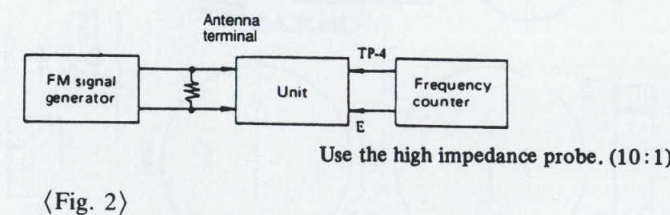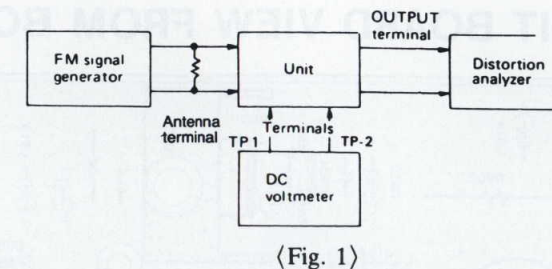

AM section

Step	AM SG output	Tuned Frequency	Output indicator	Adjustment point	Adjust for
1	—	522kHz (530kHz) (531kHz)	Digital DC voltmeter	OSC coil on RF block (L151)	1.5V ± 0.1V
2	603kHz, 60dB/m (600kHz) 400Hz 30% mod.	603kHz (600kHz)	A C voltmeter	RF coil on RF block (L151)	Maximum
3	990kHz, 60dB/m 400Hz 30% mod.	990kHz	A C voltmeter	L152	Maximum


Note: () : 120V model <10kHz step>
< > : Worldwide model

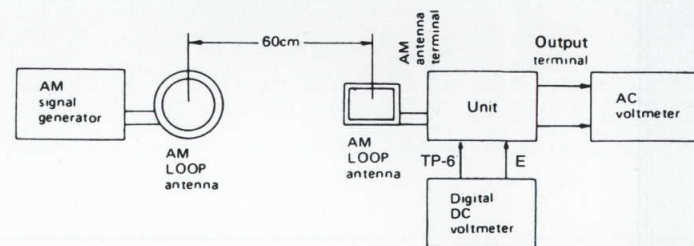


Reference specifications

Tuned voltage	AM 530kHz (U.S.A. model)	1.5 ± 0.4V
(Connet Digital DC voltmeter to test point TP-6)	522kHz (European model)	1.5 ± 0.4V
	1710kHz (U.S.A. model)	8.0 ± 0.5V
	1611kHz (European model)	7.5 ± 0.5V
FM 87.9MHz (U.S.A. model)		2.0 ± 0.5V
87.50MHz (European model)		2.0 ± 0.5V
107.9MHz (U.S.A. model)		7.5 ± 0.5V
108.0MHz (European model)		7.5 ± 0.5V


Muting width 35 ± 10kHz
Muting level (U.S.A. model) FM 14 ± 3dB
(European model) FM 12 ± 3dB
Auto stop level AM Less than 68dB/m
FM Less than 20dBμ

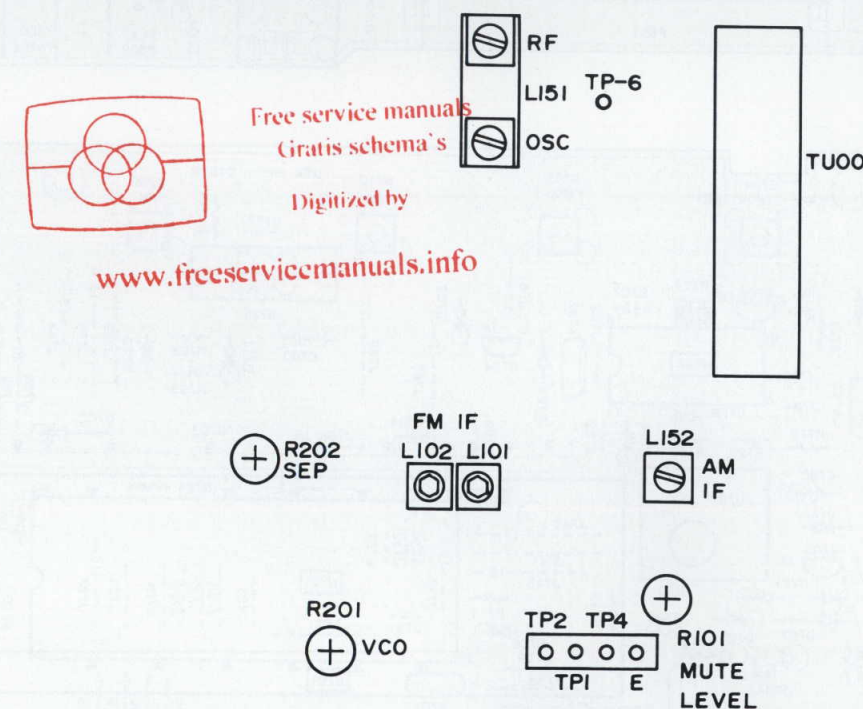


PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

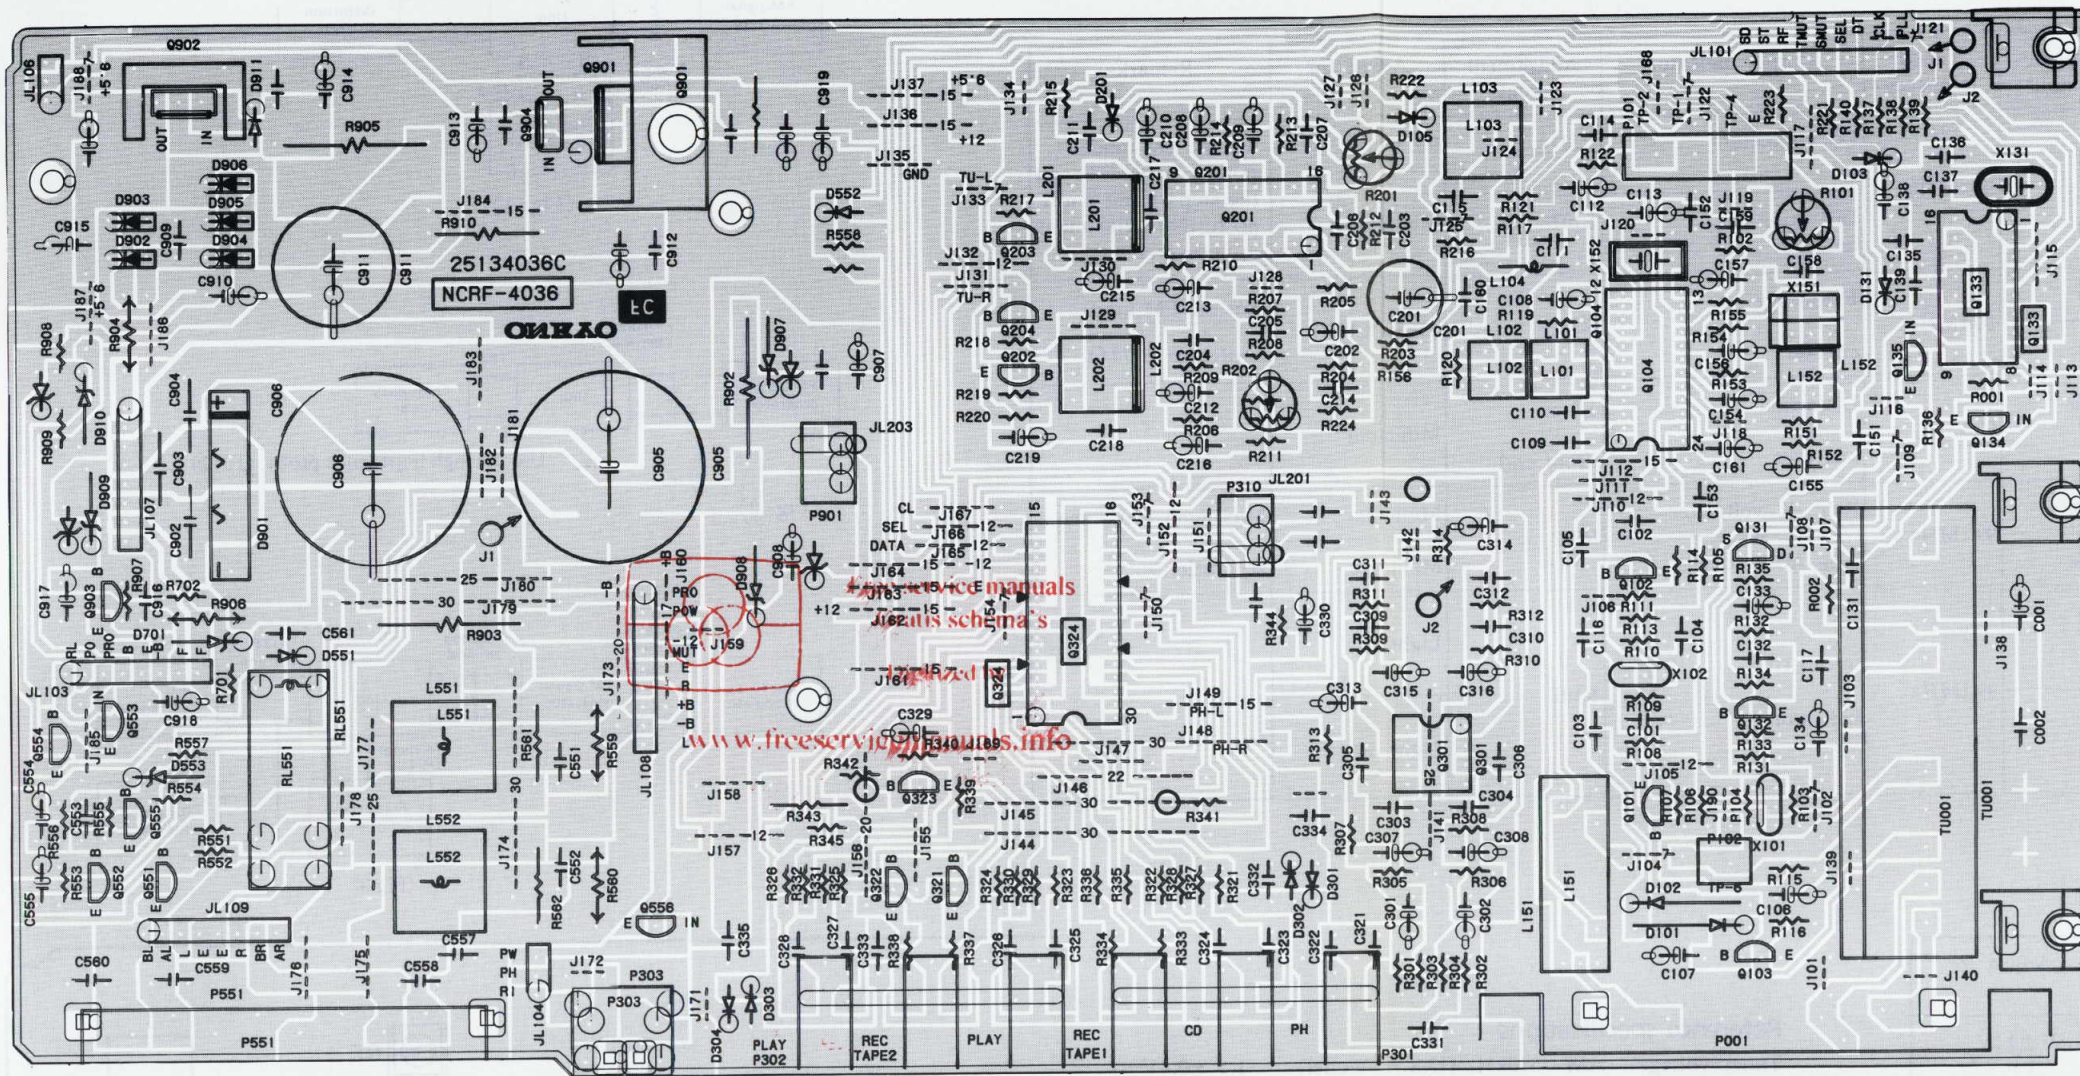

TUNER CIRCUIT PC BOARD

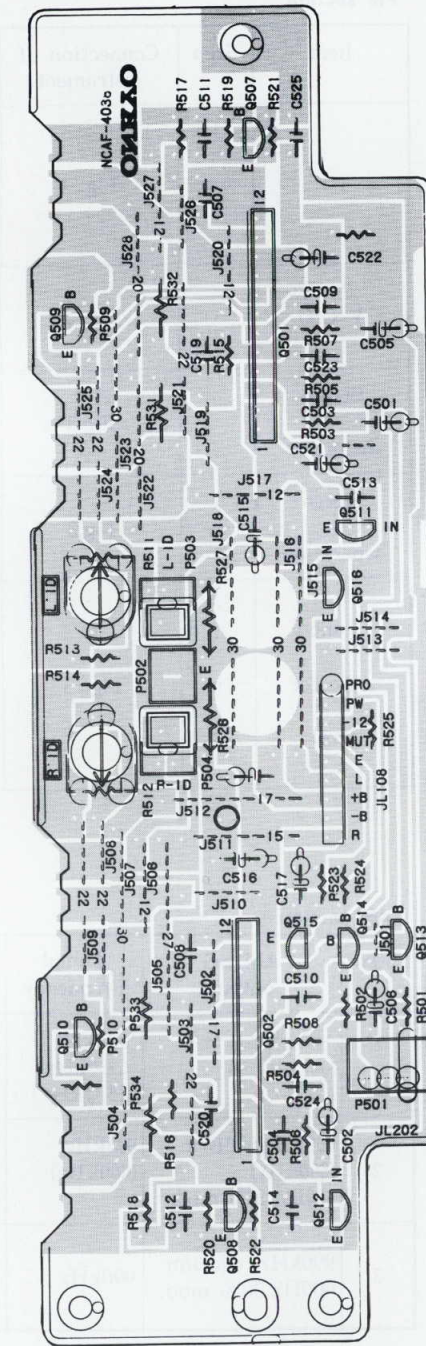


POWER AMPLIFIER CIRCUIT PC BOARD

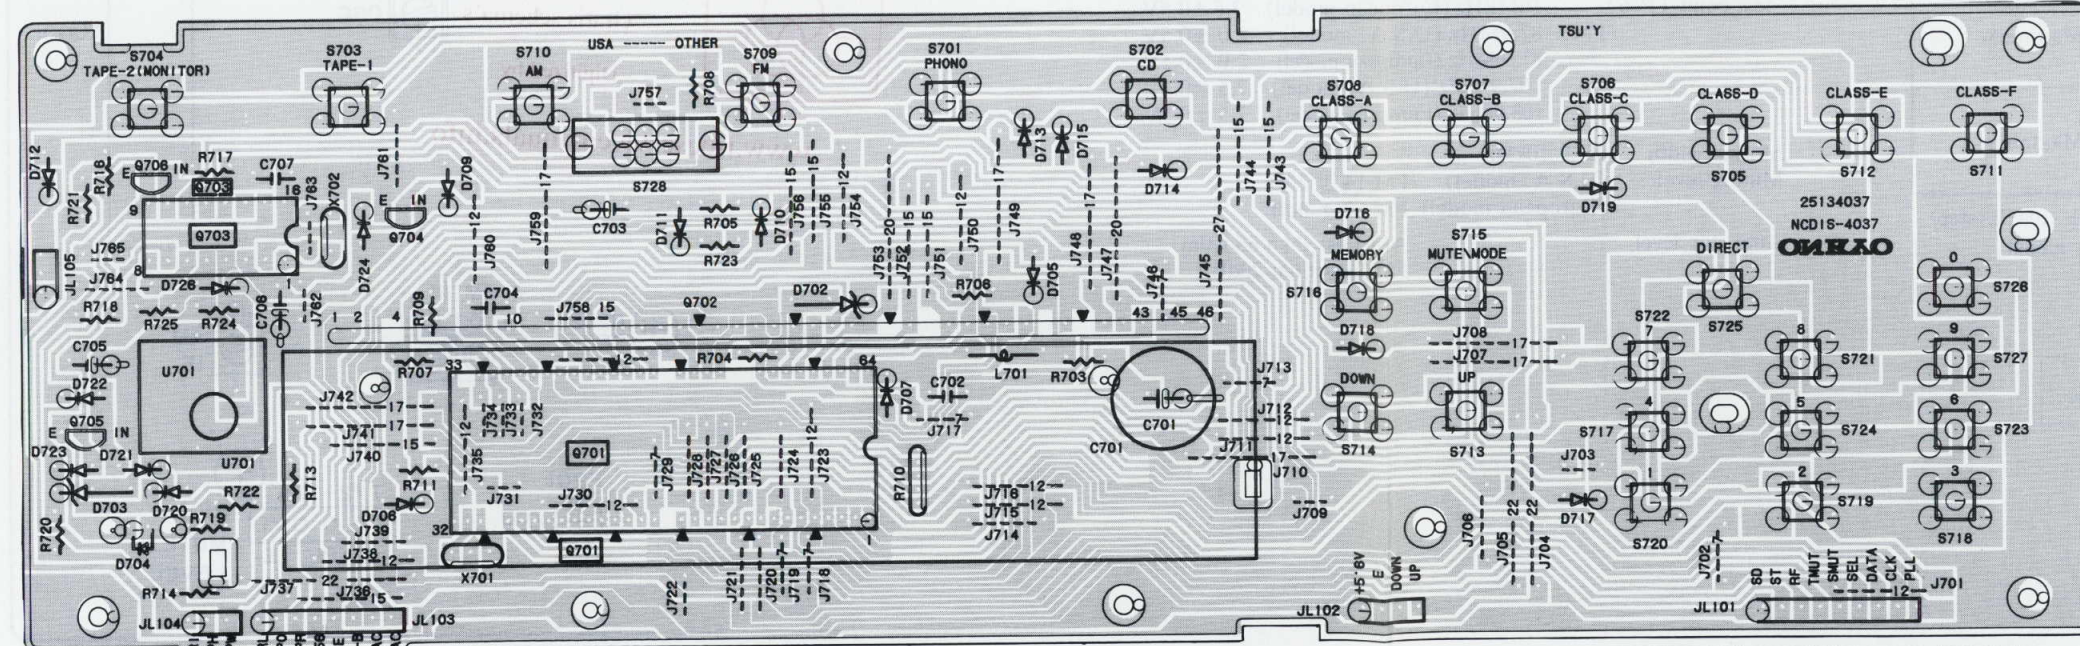

DISPLAY CIRCUIT PC BOARD

SCHEMATIC DIAGRAM MODEL TX-902 (120V model)


1
2
3
4
5

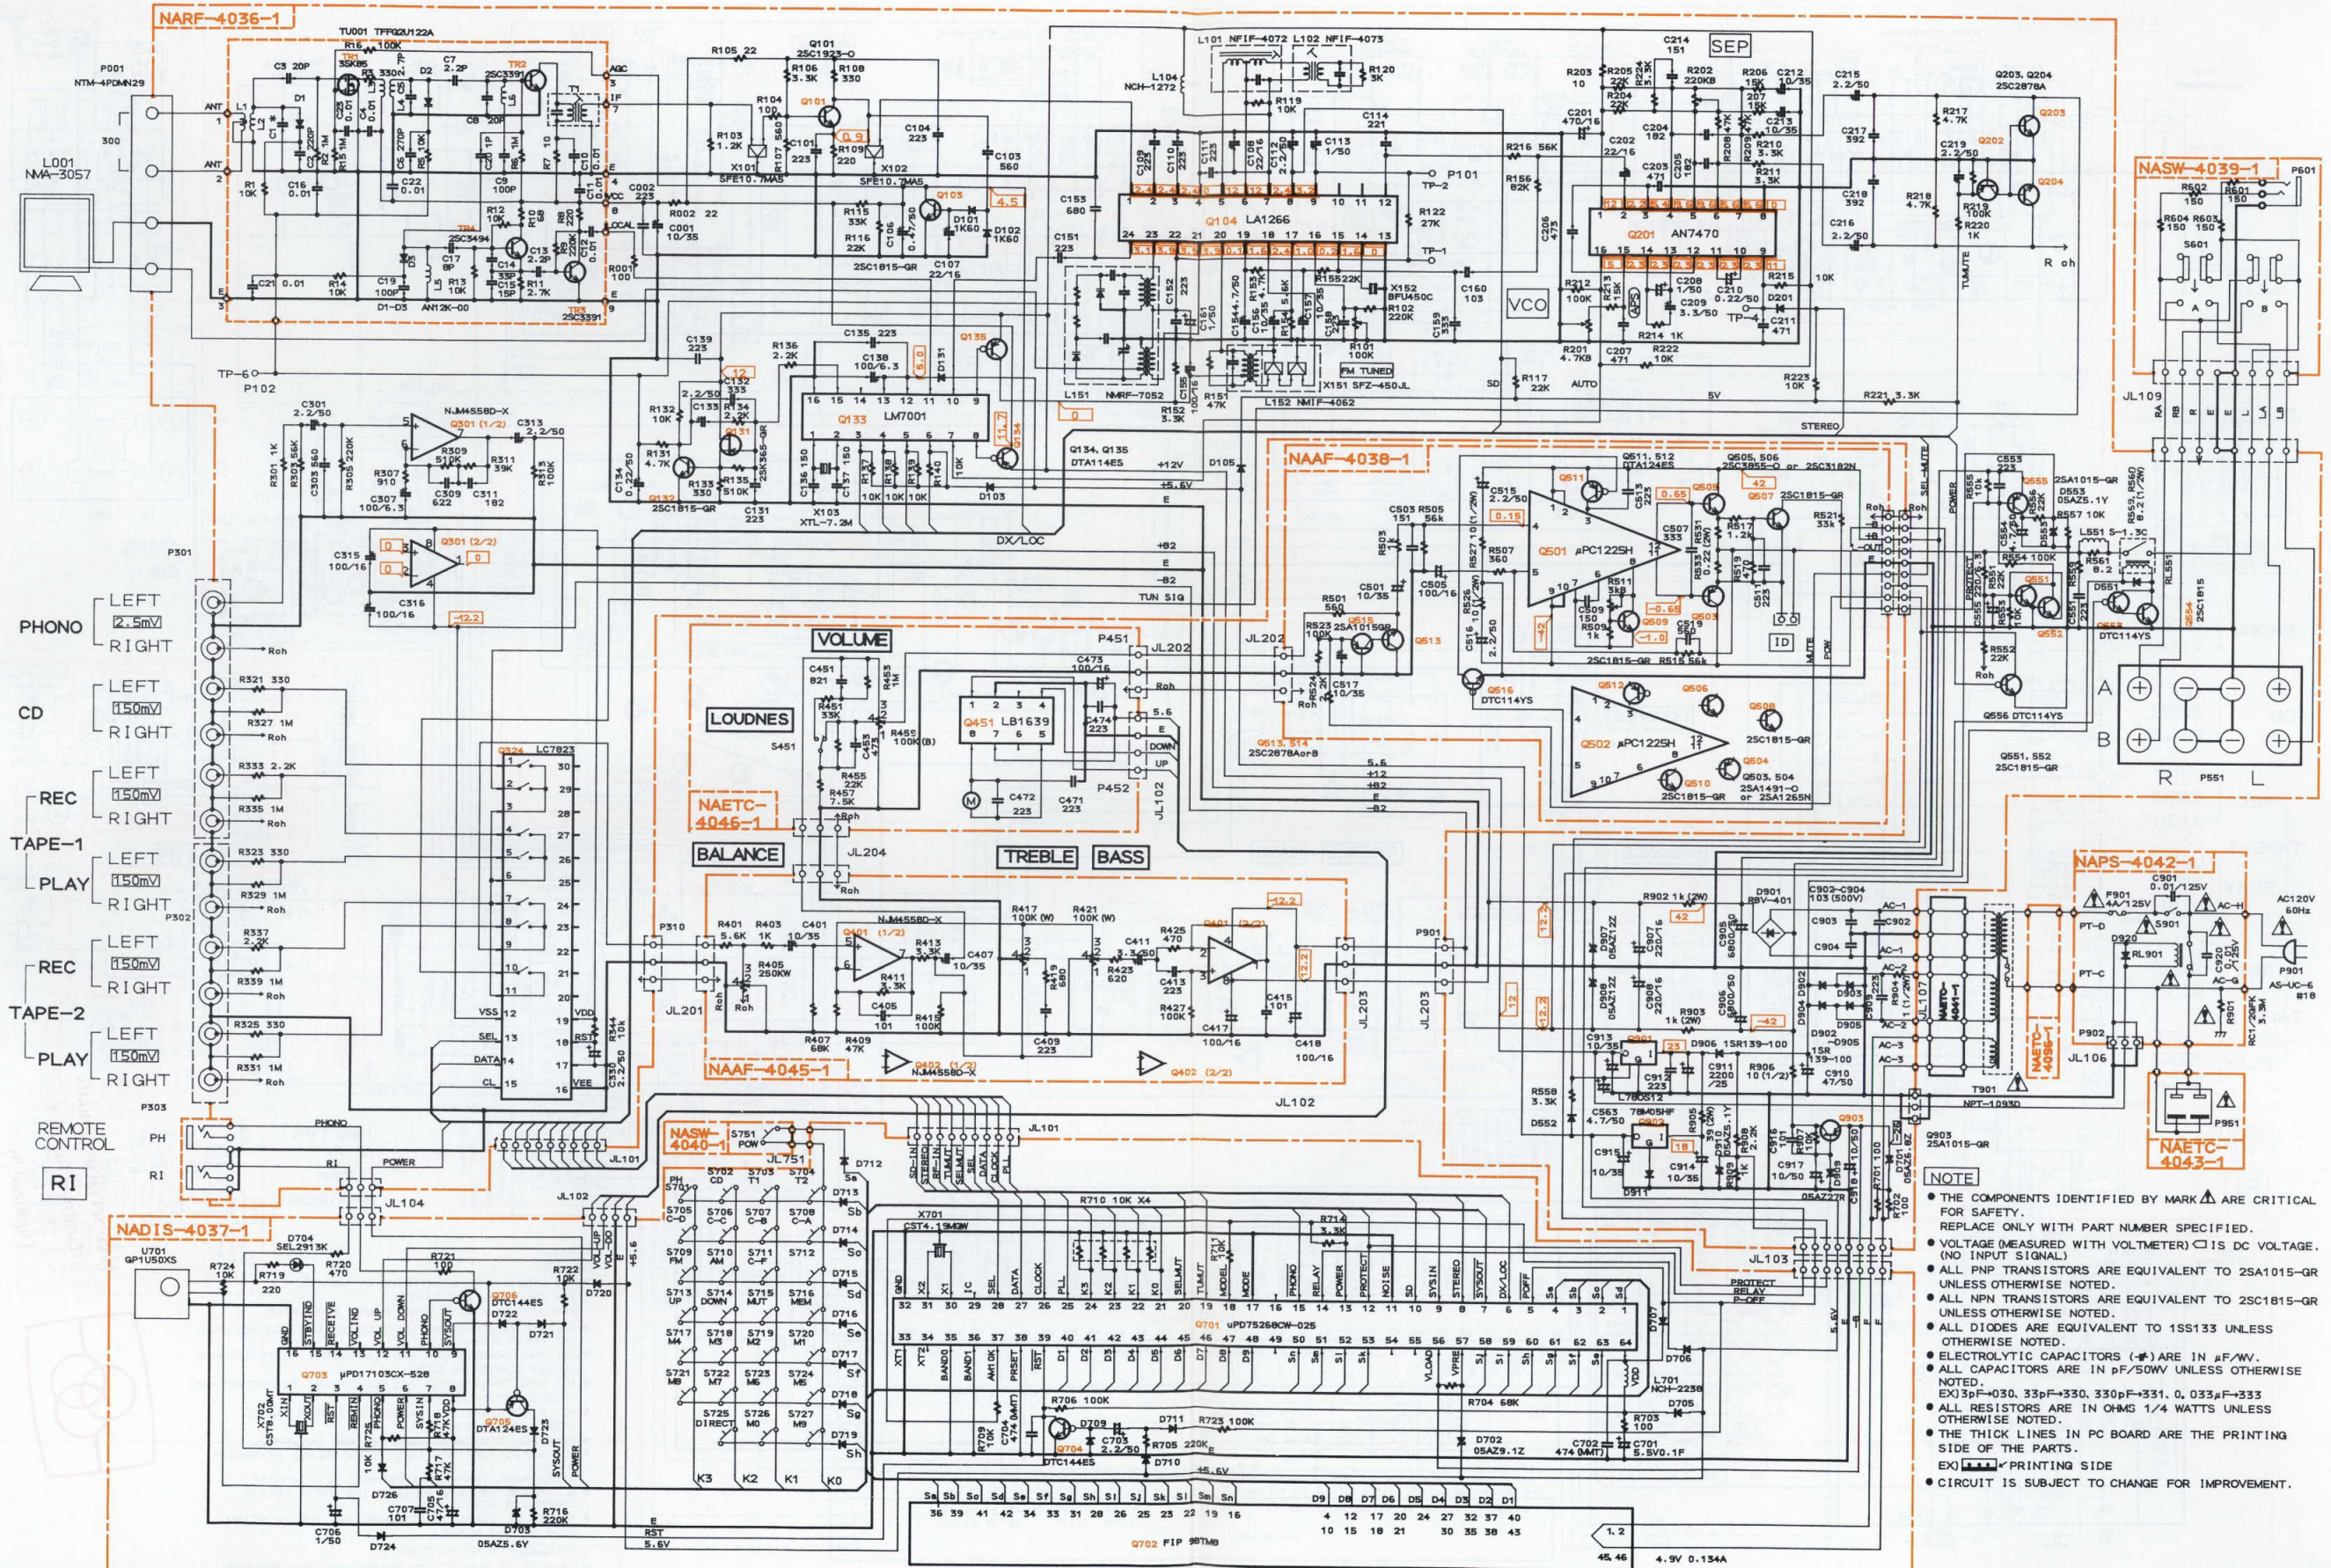

NOTE

- THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLTMETER) \square IS DC VOLTAGE. (NO INPUT SIGNAL)
- ALL PNP TRANSISTORS ARE EQUIVALENT TO 2SA1015-GR UNLESS OTHERWISE NOTED.
- ALL NPN TRANSISTORS ARE EQUIVALENT TO 2SC1815-GR UNLESS OTHERWISE NOTED.
- ALL DIODES ARE EQUIVALENT TO 1SS133 UNLESS OTHERWISE NOTED.
- ELECTROLYTIC CAPACITORS (Ψ) ARE IN μ F/WV.
- ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED.
- EX) 3pF-0.30, 33pF-0.330, 330pF-0.331, 0.033 μ F-333
- ALL RESISTORS ARE IN OHMS 1/4 WATTS UNLESS OTHERWISE NOTED.
- THE THICK LINES IN PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
- \square PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

SCHEMATIC DIAGRAM MODEL TX-902 (Other models)

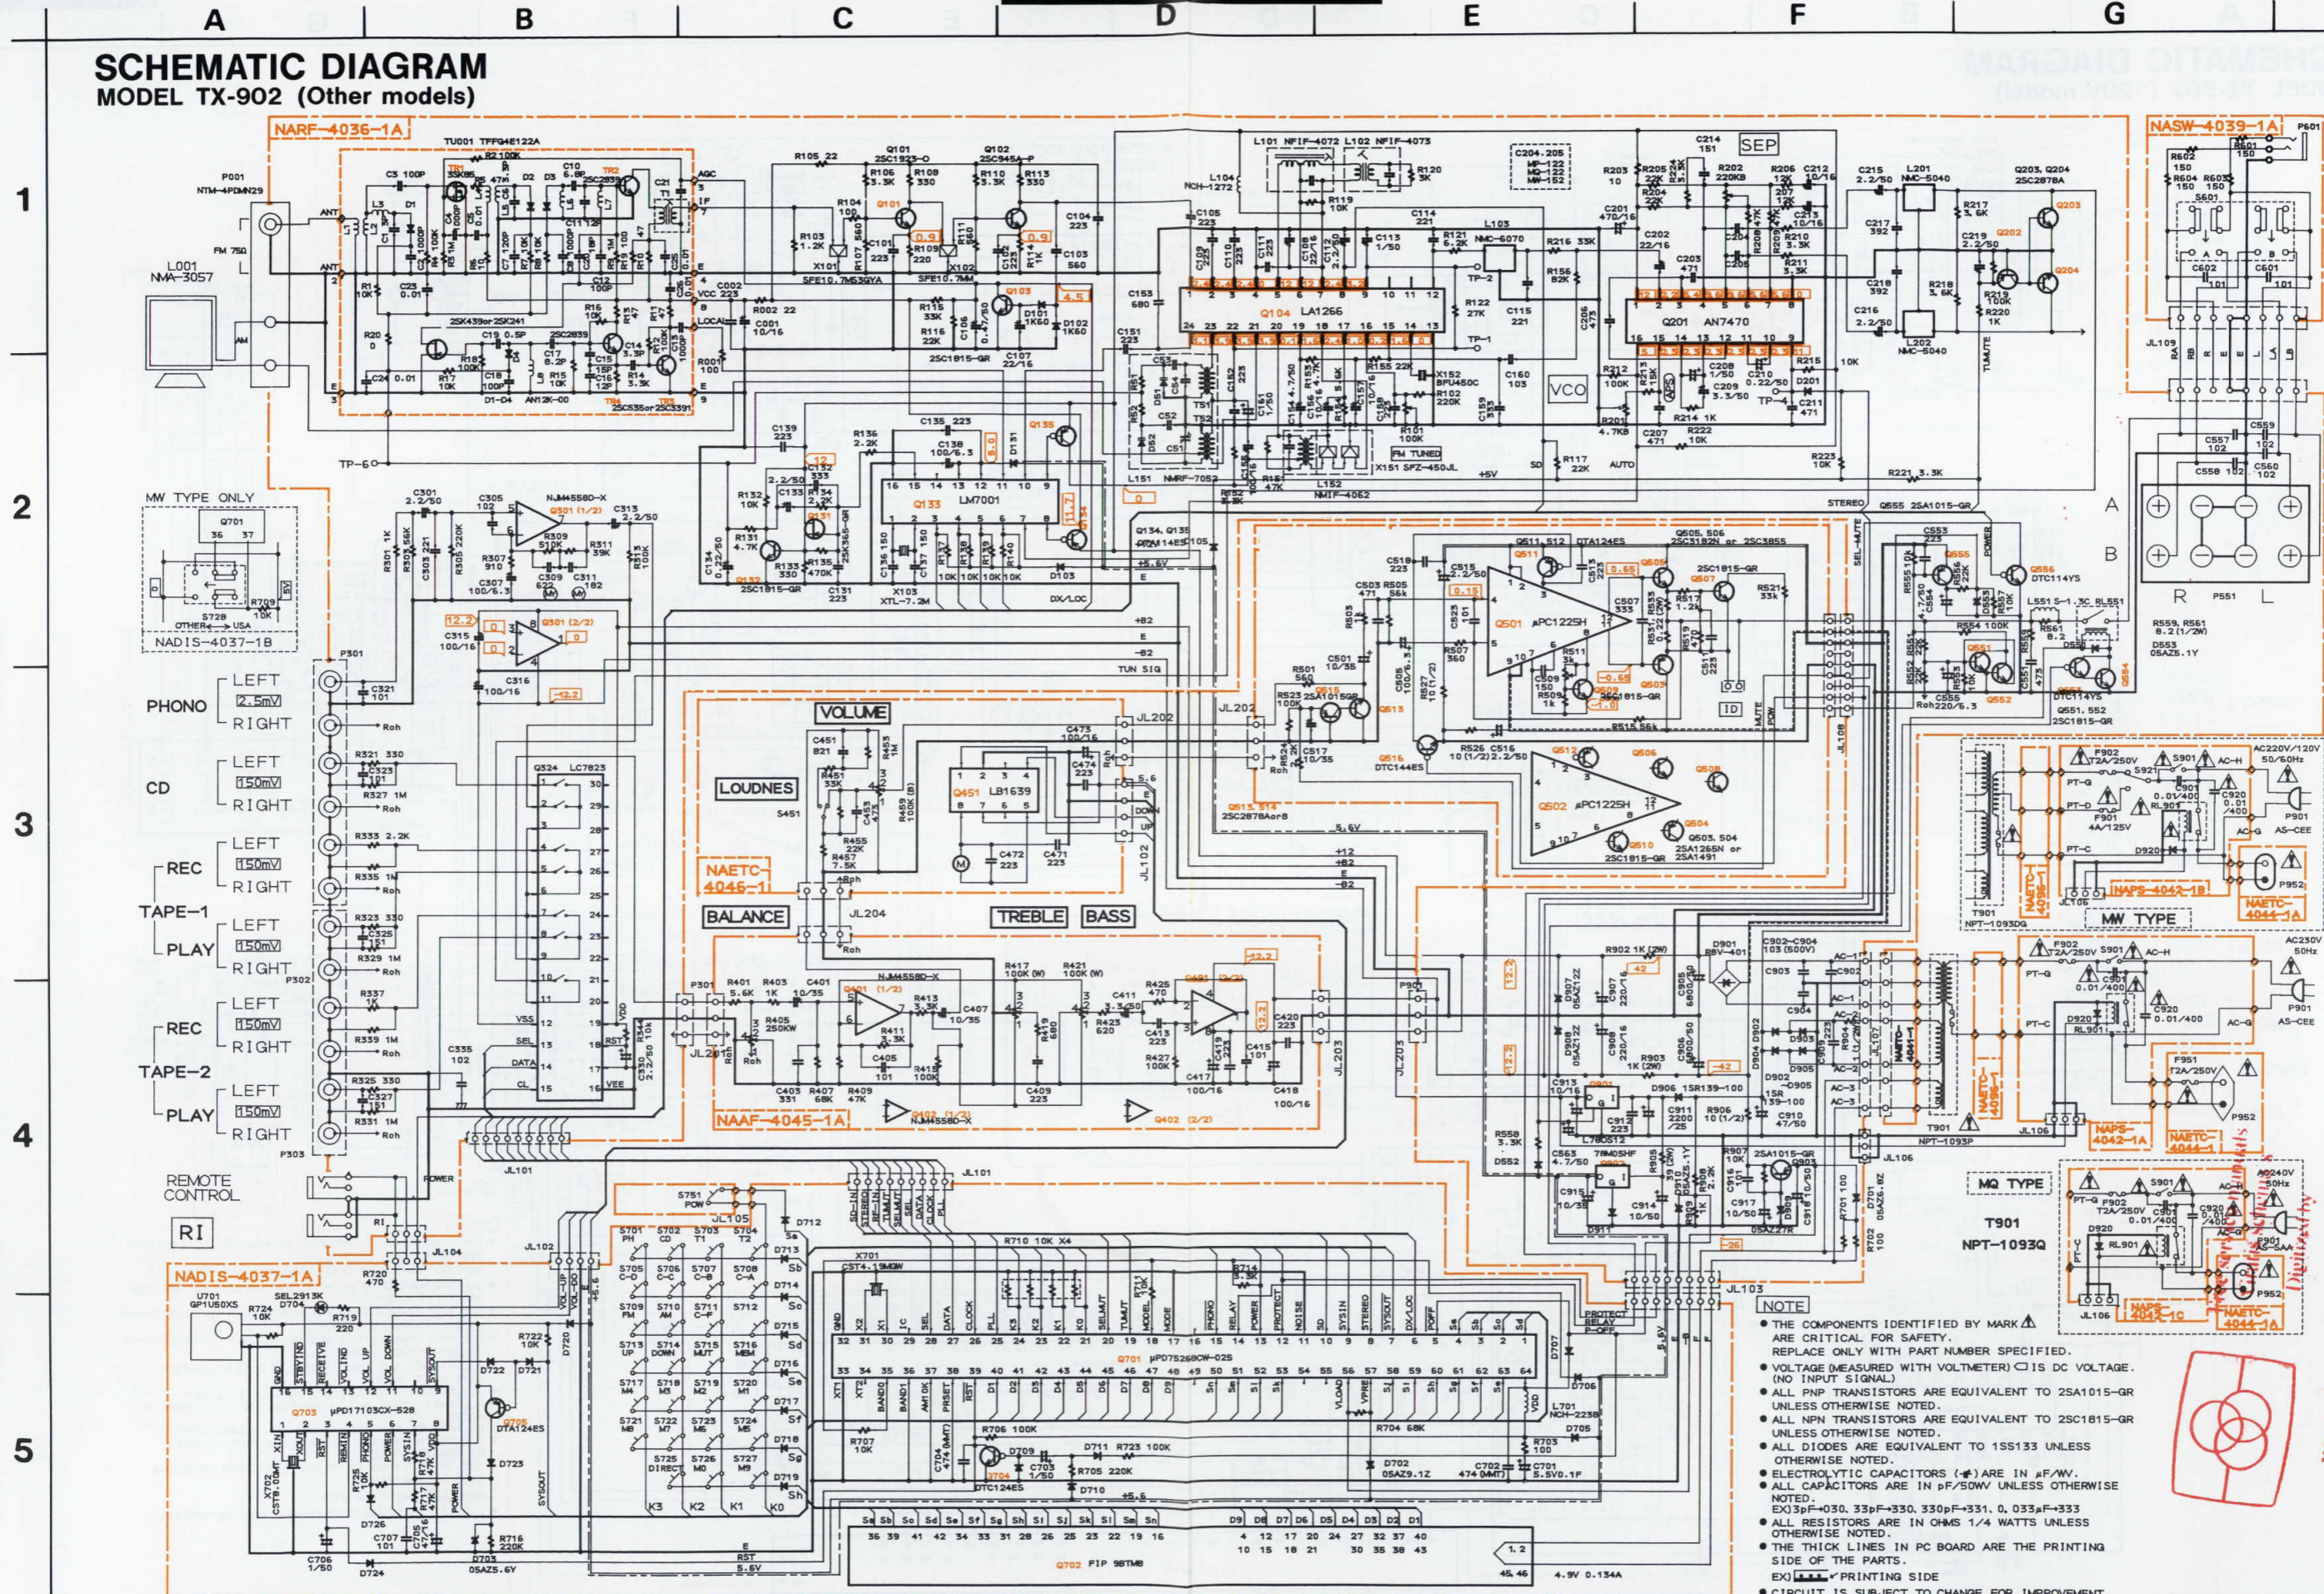

- NOTE**
- THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
 - VOLTAGE (MEASURED WITH VOLTMETER) \square IS DC VOLTAGE. (NO INPUT SIGNAL)
 - ALL PNP TRANSISTORS ARE EQUIVALENT TO 2SA1015-GR UNLESS OTHERWISE NOTED.
 - ALL NPN TRANSISTORS ARE EQUIVALENT TO 2SC1815-GR UNLESS OTHERWISE NOTED.
 - ALL DIODES ARE EQUIVALENT TO 1SS133 UNLESS OTHERWISE NOTED.
 - ELECTROLYTIC CAPACITORS (E) ARE IN μ F/WV.
 - ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED.
 - EX) 3pF-030, 33pF-330, 330pF-331, 0.033 μ F-333
 - ALL RESISTORS ARE IN OHMS 1/4 WATTS UNLESS OTHERWISE NOTED.
 - THE THICK LINES IN PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
 - EX) ∇ PRINTING SIDE
 - CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

ONKYO CORPORATION

www.freeservicemanuals.info

SCHEMATIC DIAGRAM MODEL TX-900 (120V model)


1

2

3

4

5

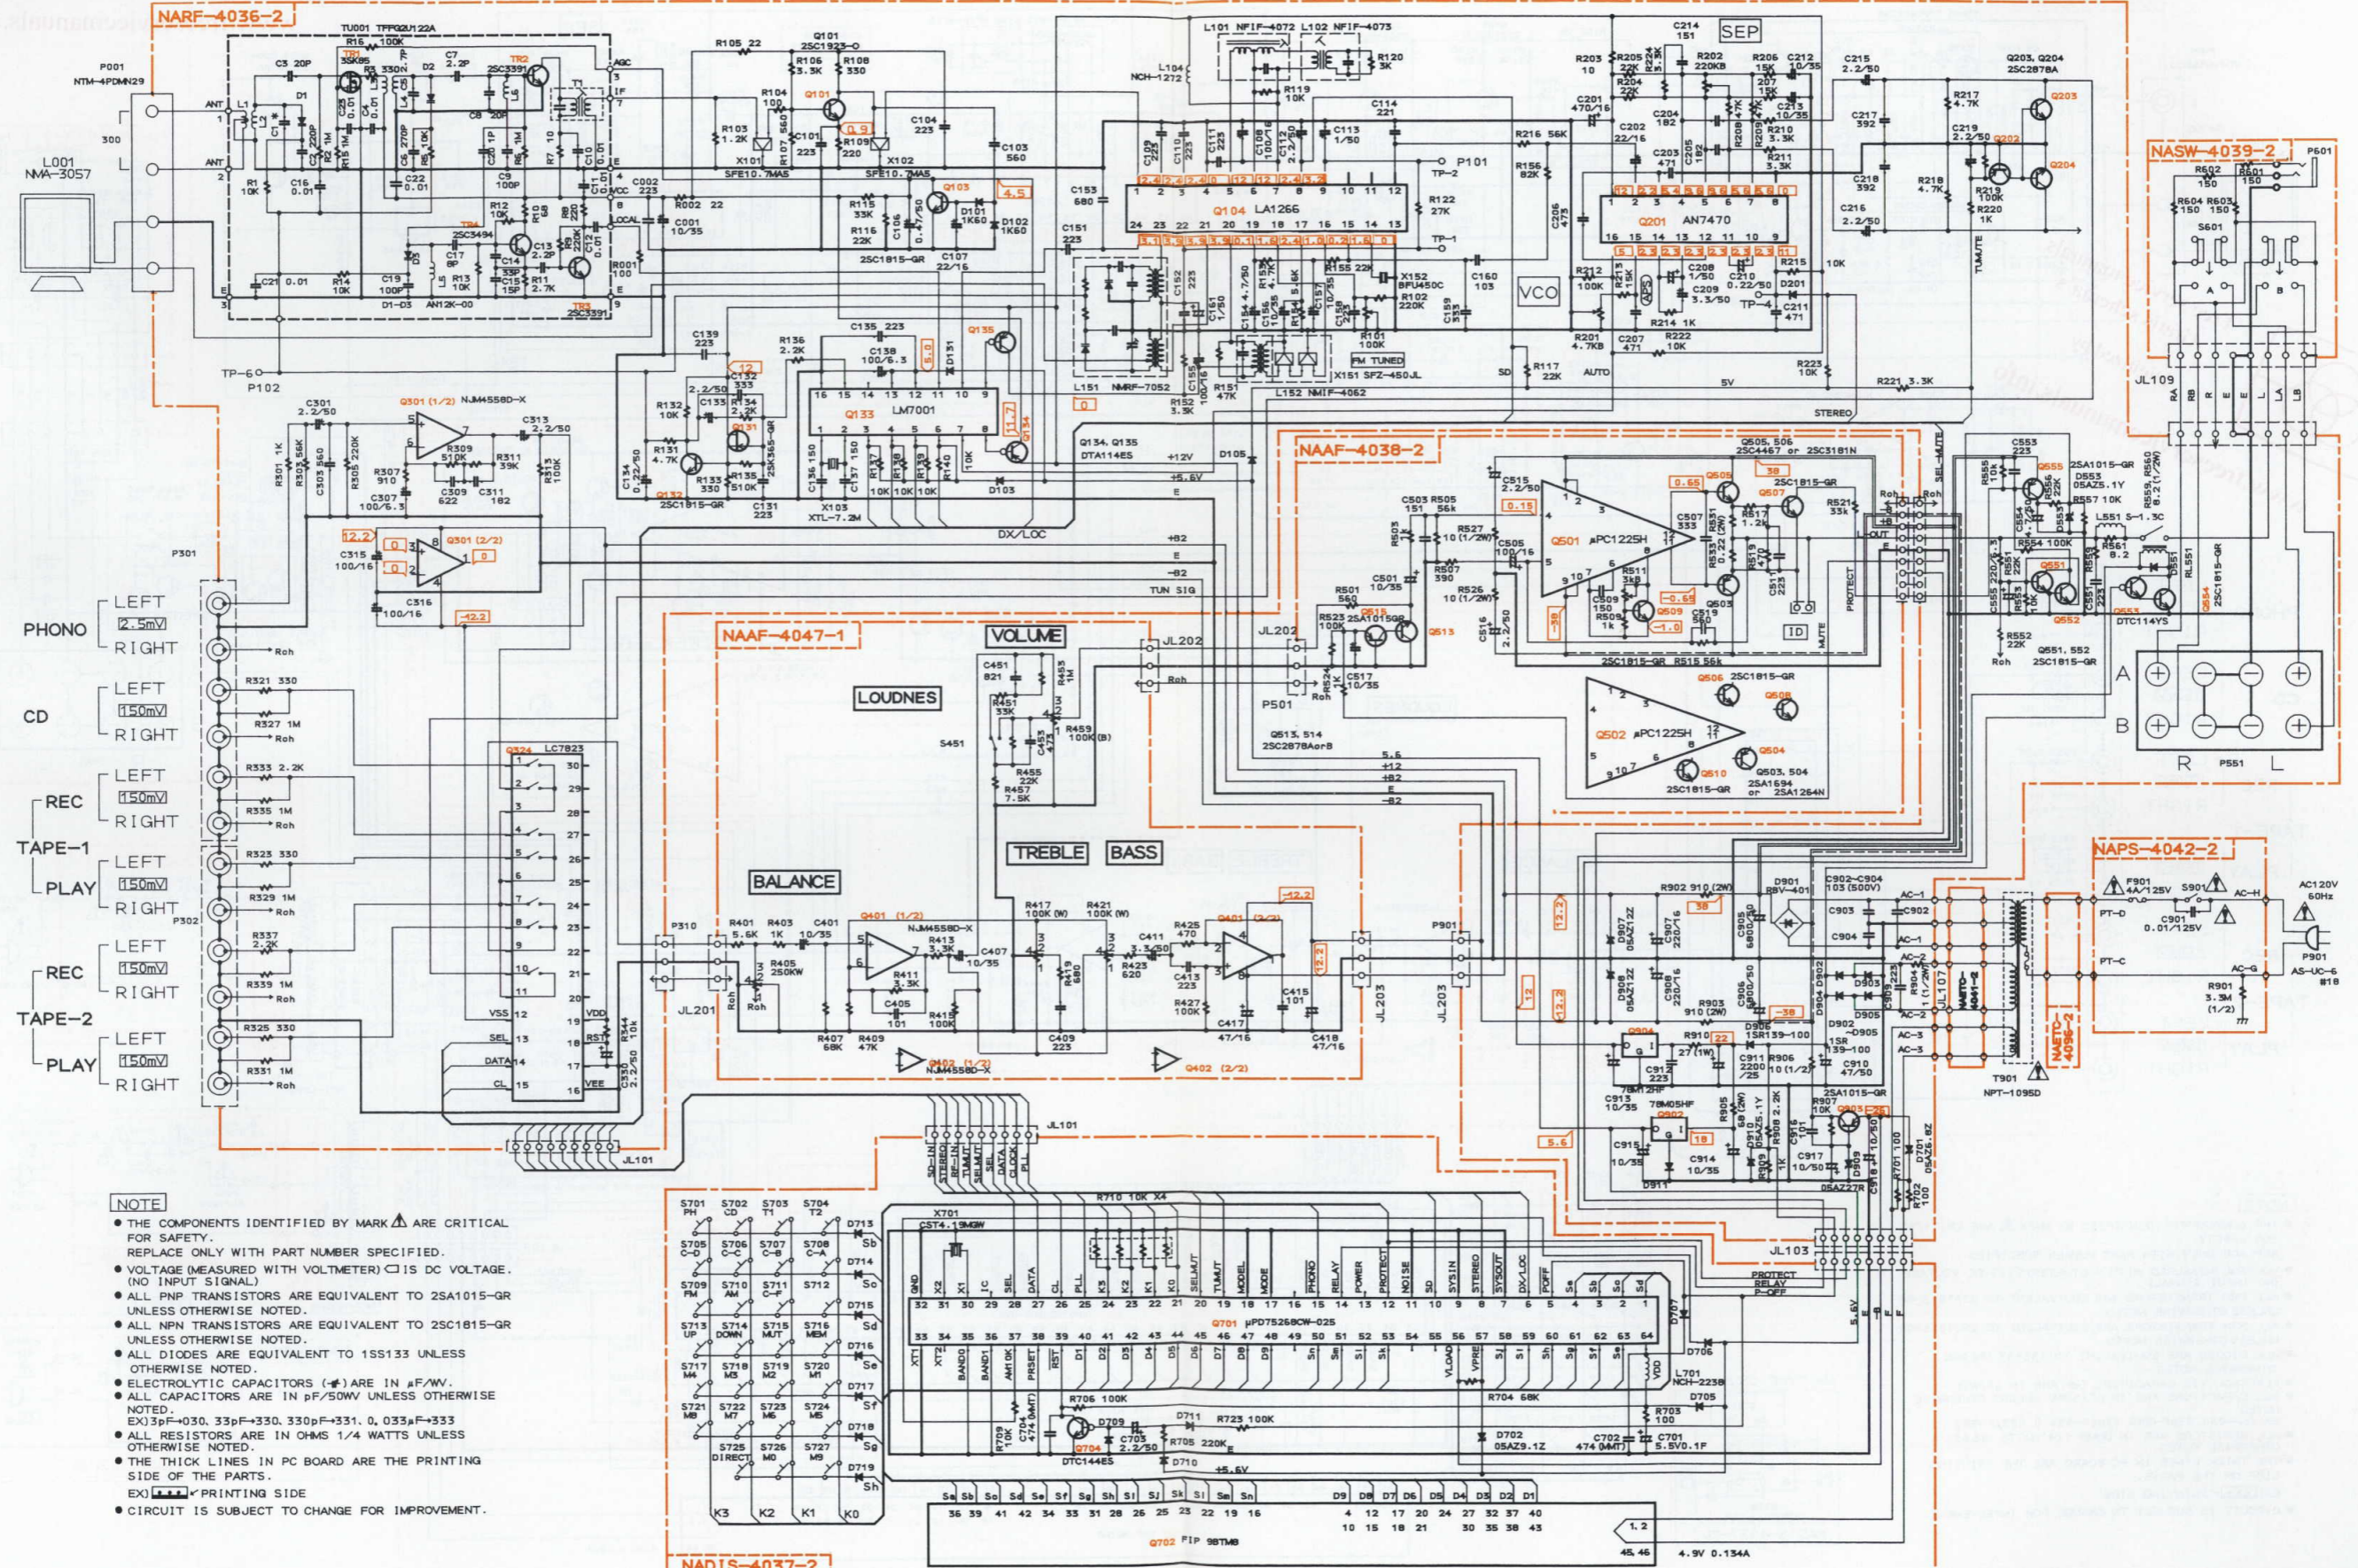

NOTE

- THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLTMETER) \square IS DC VOLTAGE. (NO INPUT SIGNAL)
- ALL PNP TRANSISTORS ARE EQUIVALENT TO 2SA1015-GR UNLESS OTHERWISE NOTED.
- ALL NPN TRANSISTORS ARE EQUIVALENT TO 2SC1815-GR UNLESS OTHERWISE NOTED.
- ALL DIODES ARE EQUIVALENT TO 1SS133 UNLESS OTHERWISE NOTED.
- ELECTROLYTIC CAPACITORS (μ) ARE IN μ F/V.
- ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED.
- EX) 3pF \rightarrow 030, 33pF \rightarrow 330, 330pF \rightarrow 331, 0.033 μ F \rightarrow 333
- ALL RESISTORS ARE IN OHMS 1/4 WATTS UNLESS OTHERWISE NOTED.
- THE THICK LINES IN PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
- EX) \square PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

NADIS-4037-2

Q702 PIP 98TMB

4.9V 0.134A

SCHEMATIC DIAGRAM

MODEL TX-900 (Other models)


1

2


3

4


5

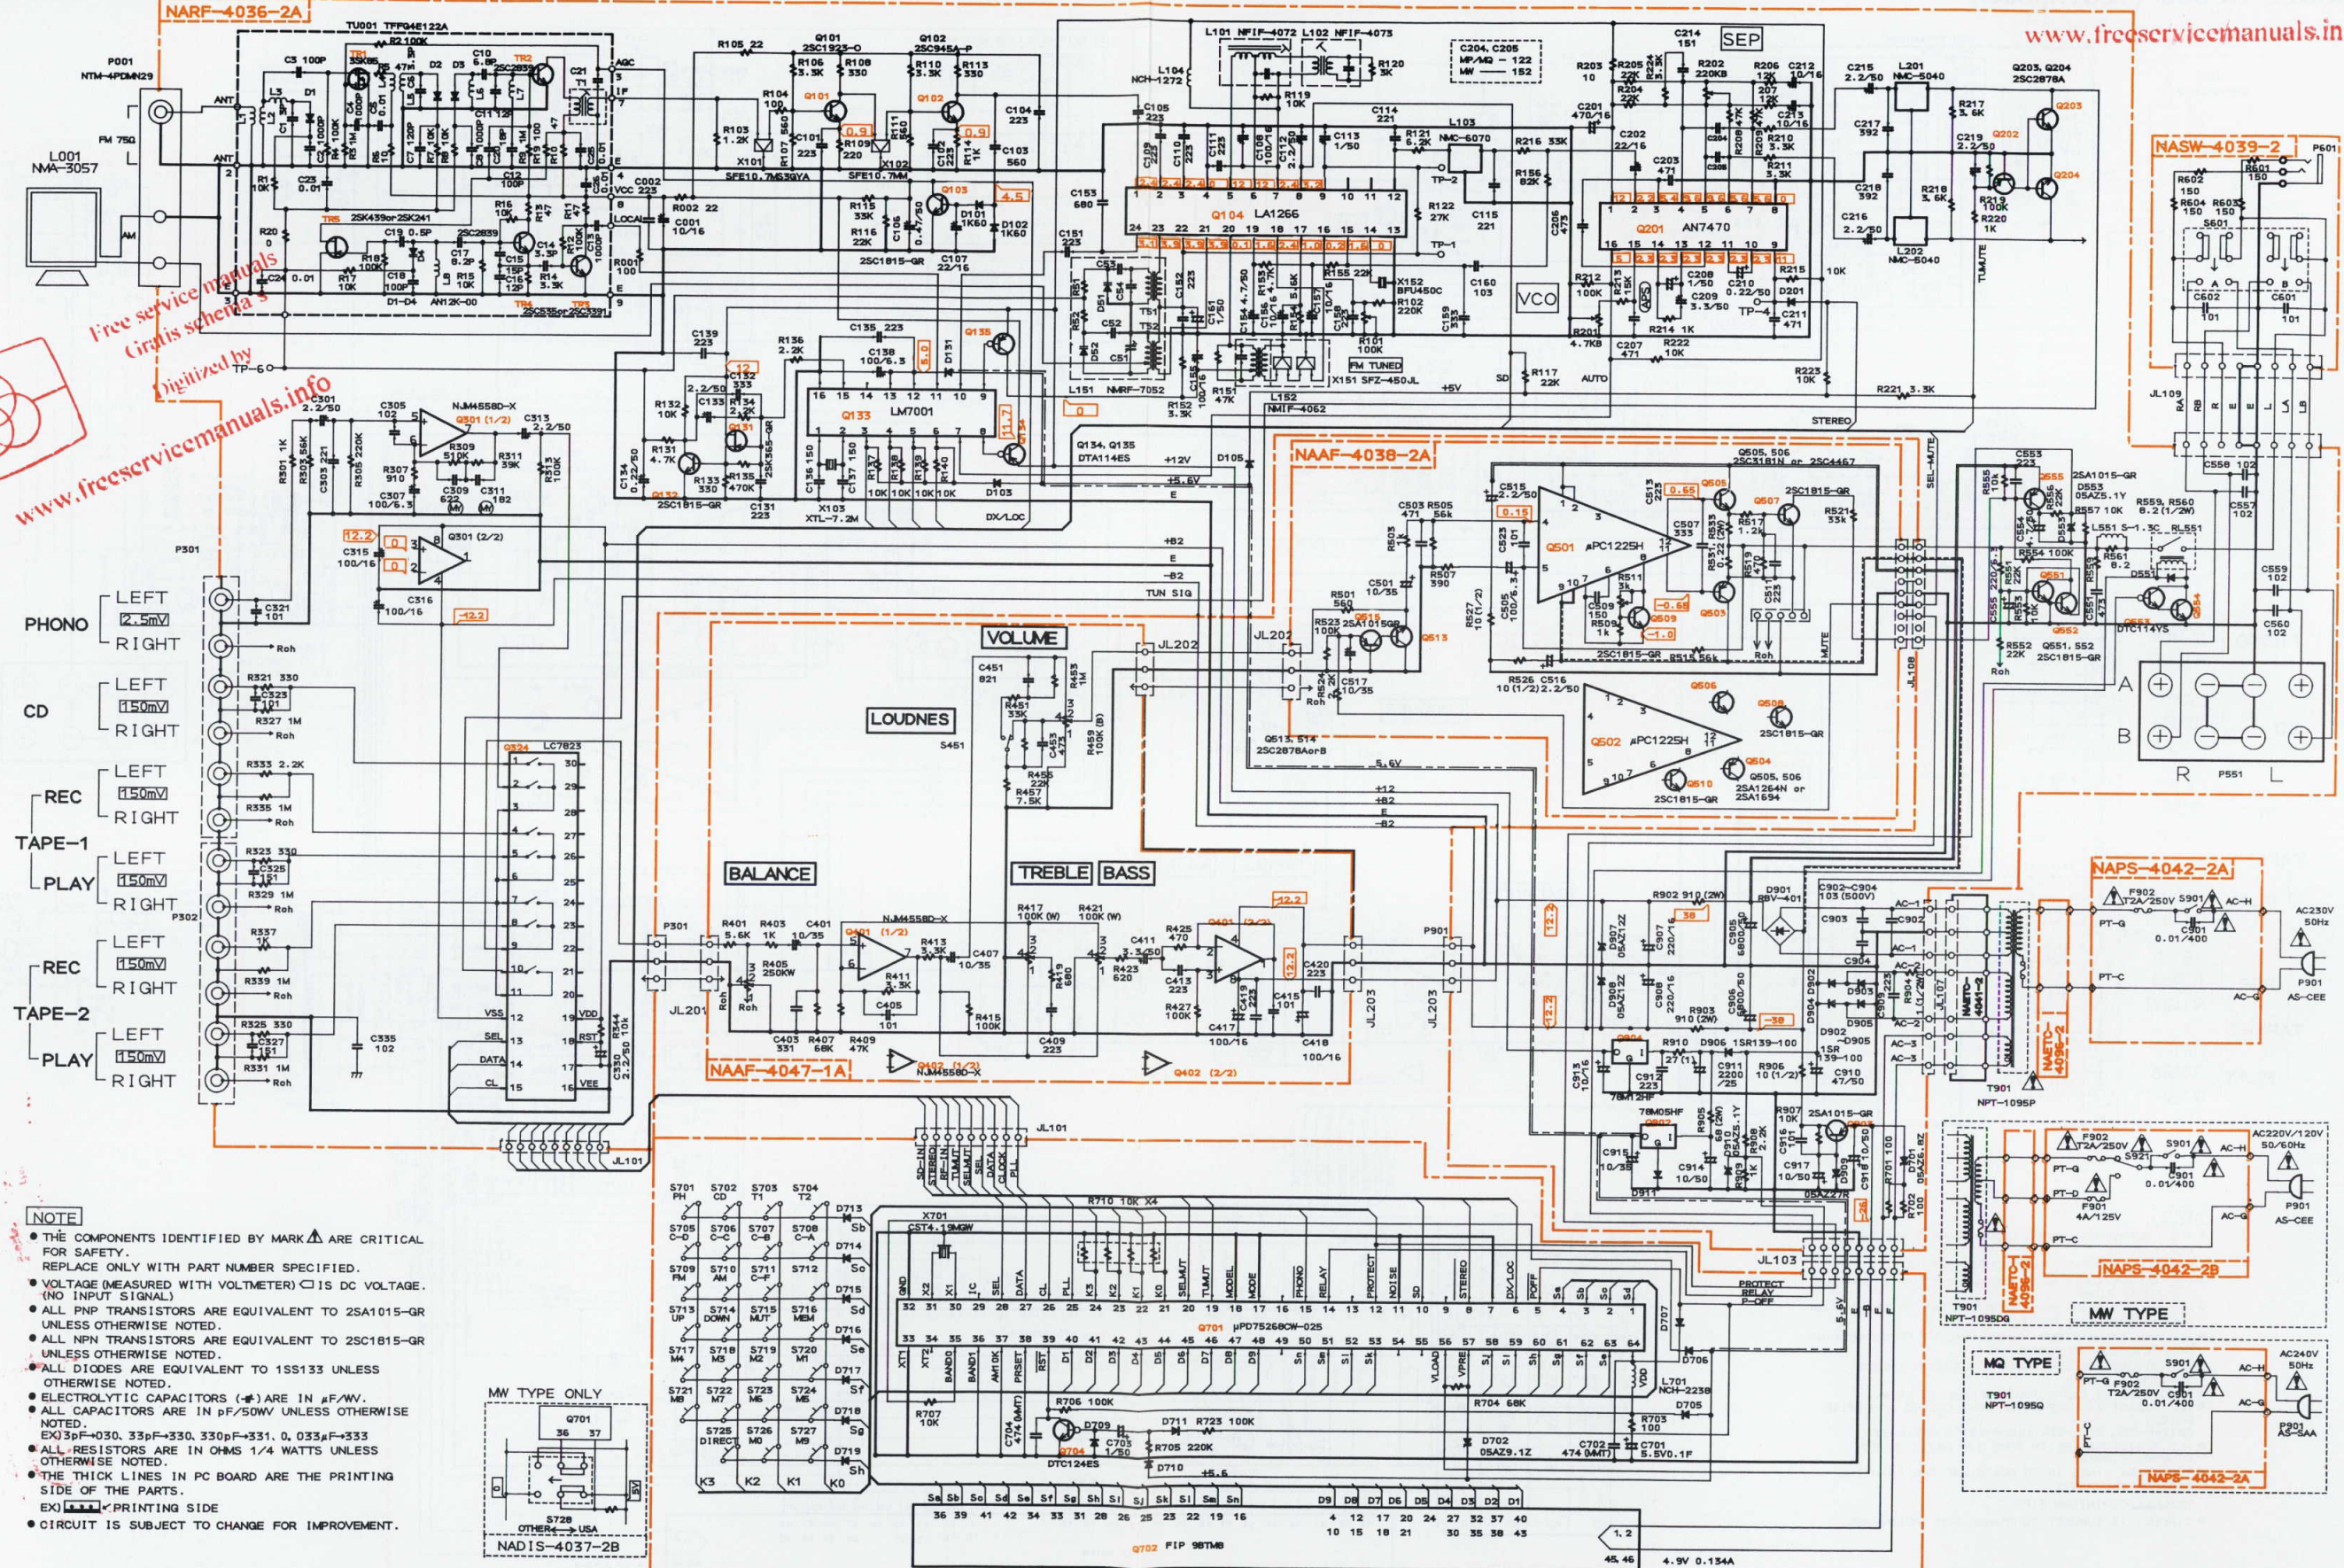


- NOTE**
- THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
 - VOLTAGE (MEASURED WITH VOLTMETER) \square IS DC VOLTAGE. (NO INPUT SIGNAL)
 - ALL PNP TRANSISTORS ARE EQUIVALENT TO 2SA1015-GR UNLESS OTHERWISE NOTED.
 - ALL NPN TRANSISTORS ARE EQUIVALENT TO 2SC1815-GR UNLESS OTHERWISE NOTED.
 - ALL DIODES ARE EQUIVALENT TO 1SS133 UNLESS OTHERWISE NOTED.
 - ELECTROLYTIC CAPACITORS (E) ARE IN μ F/VV.
 - ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED.
 - EX) 3pF \rightarrow 030, 33pF \rightarrow 330, 330pF \rightarrow 331, 0, 033 μ F \rightarrow 333
 - ALL RESISTORS ARE IN OHMS 1/4 WATTS UNLESS OTHERWISE NOTED.
 - THE THICK LINES IN PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
 - EX) \square PRINTING SIDE
 - CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

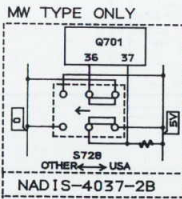


PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

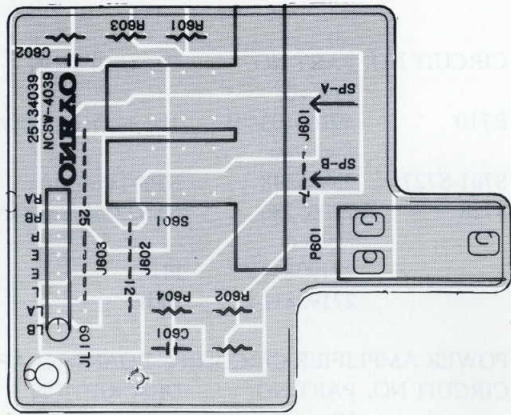


HEADPHONE TERMINAL PC BOARD

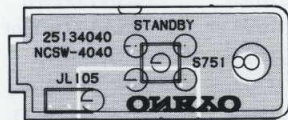


POWER SWITCH PC BOARD
(Only Model TX-902)

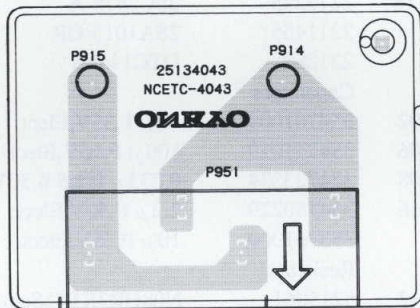


AC OUTLET PC BORA

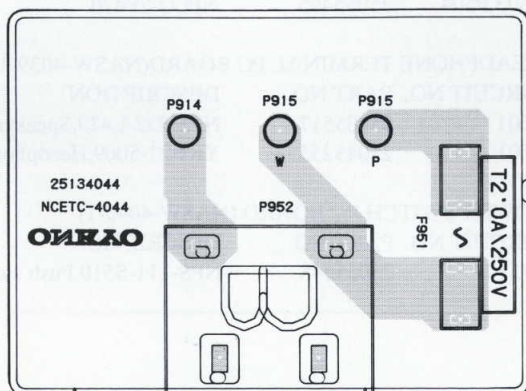


AC OUTLET PC BOARD

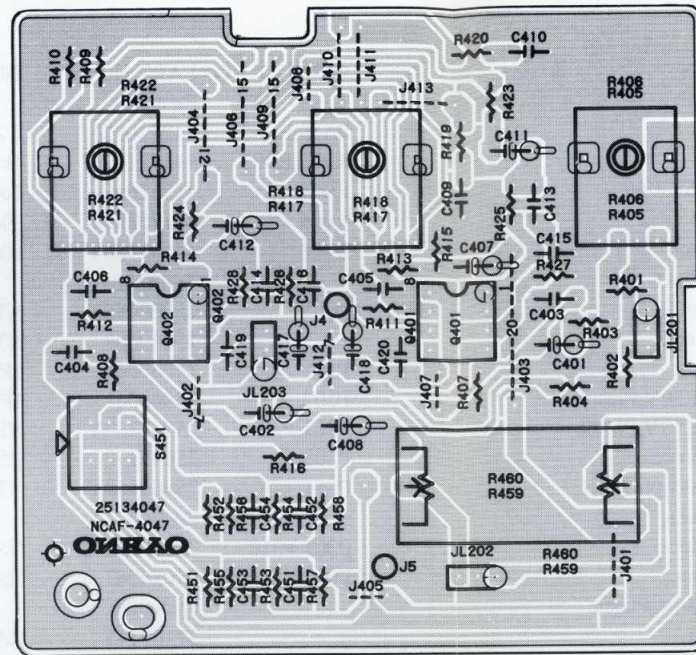


TONE CONTROL CIRCUIT PC BOARD
(Only Model TX-900)

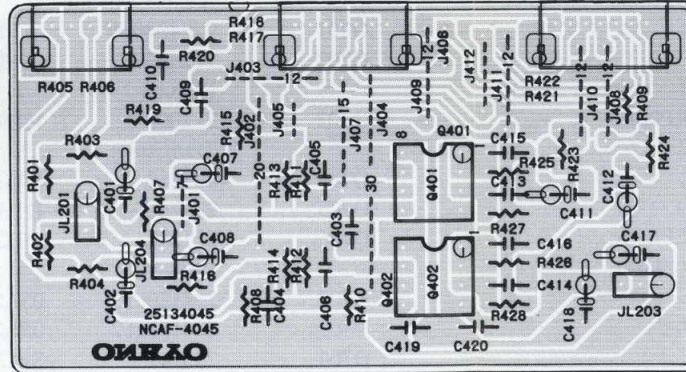


TONE CONTROL CIRCUIT PC BOARD
(Only Model TX-902)

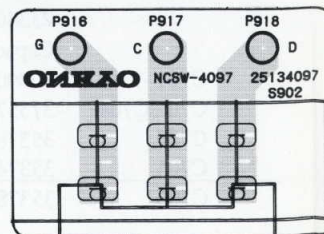


VOLTAGE SELECTOR PC BOARD
(Only Worldwide model)

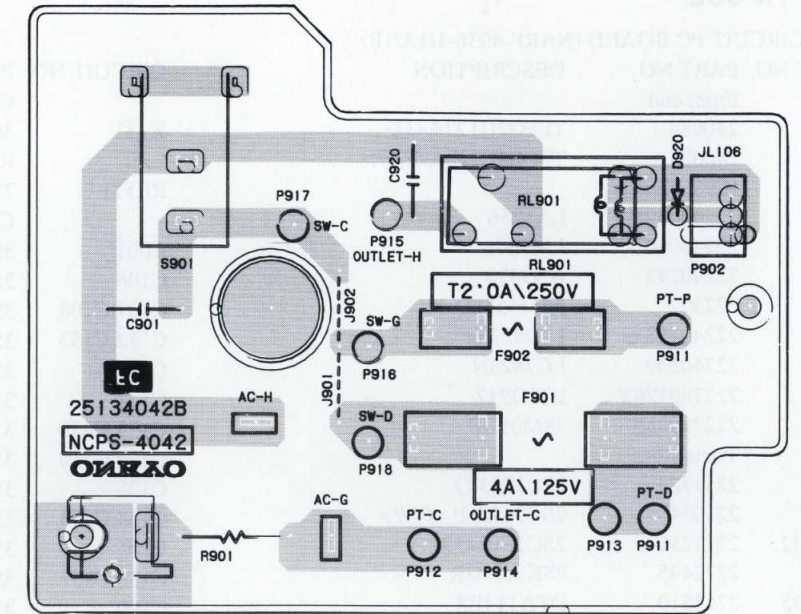

POWER SUPPLY CIRCUIT PC BOARD

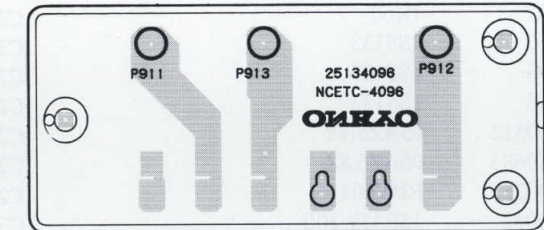

TERMINAL PC BOARD

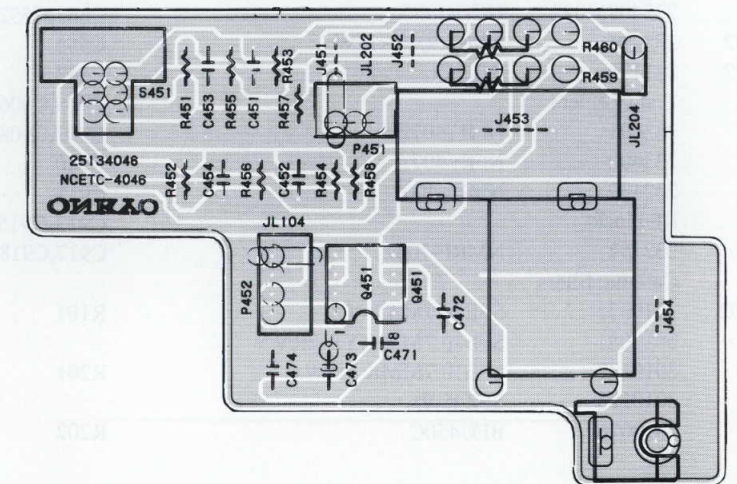

VOLUME CONTROL PC BOARD (Only Model TX-902)

POWER SUPPLY CIRCUIT PC BOARD(NAPS-4042-1/1A/1B/1C)

CIRCUIT NO.	PART NO.	DESCRIPTION
D920	223163	1SS133,Diode
S901	25035550	△ NPS-111-L512P,Push switch
RL901	25065269	△ NRL-1P5A-DC12-36,Relay <D>
	25065248	△ NRL-1P15A-DC12-29,Relay <P/W>
R901	431523355	△ 3.3Mohm,1/2W,Solid resistor <D>
C901,C920	3500065A	△ DE7150FZ103PAC400V/125V IS capacitors
P901	25050267	NSCT-3P95,Socket
F901	252049	△ 4A(ST-6),Fuse <D/W>
F902	252074	△ 2A-SE-EAK,Fuse <P/W>
F901a	250113	△ SN5051,Fuseholder <D/W>
F902a	25050065	△ YSH-403T,Fuseholder <P/W>
	29360626-1	Fuse label <D>

AC OUTLET PC BOARD(NAETC-4043-1)

(Only 120V model)

CIRCUIT NO.	PART NO.	DESCRIPTION
P951	25050409	NSCT-4P234,AC outlet

AC OUTLET PC BOARD(NAETC-4044-1/1A)

(230V and Worldwide models)

CIRCUIT NO.	PART NO.	DESCRIPTION
F951	252074	2A-SE-EAK,Fuse <P>
F951a	25050065	YSH403T,Fuseholders <P>
P952	25050410	NSCT-2P235,AC outlet

TONE CONTROL CIRCUIT PC BOARD (NAAF-4045-1/1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
ICs		
Q401,Q402	222502	NJM4558D-X
Capacitors		
C401,C402	354761009	10 μ F,35V,Elect.
C407,C408	354761009	10 μ F,35V,Elect.
C409,C410	374722234	0.022 μ F \pm 5%,50V,Plastic
C411,C412	354780339	3.3 μ F,50V,Elect.
C413,C414	374722234	0.022 μ F \pm 5%,50V,Plastic
C417,C418	354741019	100 μ F,16V,Elect.
Resistors		
R405,R406	5104225	N11RGLC250KWT22Z,Balance
R417,R421	5104230	N14RLC100KWT22Z,Tone
R418,R422		

VOLUME CONTROL PC BOARD(NAETC-4046-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q451	22240322	LB1639,IC
C453,C454	374724734	0.047 μ F \pm 5%,50V,Plastic capacitors
C473	354741019	100 μ F,16V,Elect. capacitor
R459,R460	5104243	N16RGM100KBTP25F, Volume, Variable resistor
P451	25050267	NSCT-3P95,Socket
P452	25050268	NSCT-4P96,Socket
S451	25035609	NPS-122-L571,Switch

VOLTAGE SELECTOR SWITCH PC BOARD (NASW-4097-1)

(Only Worldwide model)

CIRCUIT NO.	PART NO.	DESCRIPTION
S921	25065287	△ NSS-22113P,Slide switch

NOTE:<D>:Only 120V model

<P>:Only 230V and 240V models

<W>:Only Worldwide model

CAUTION:Replacement for transistor of mark *,if necessary,
must be made from the same beta group (H FE) as
the original type.NOTE: THE COMPONENTS IDENTIFIED BY MARK △
ARE CRITICAL FOR RISK OF FIRE AND
ELECTRIC SHOCK. REPLACE ONLY WITH
PART NUMBER SPECIFIED.

PRINTED CIRCUIT BOARD-PARTS LIST

Model TX-900

TUNER CIRCUIT PC BOARD (NARF-4036-2/2A/2B)

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
	Front end			Crystal	
TU001	240084	TFFG2U122A<D>	X131	3010158	XTL-7.2M
	240085	TFFG4E122A<P/W>		Relay	
	ICs		RL551	25065339	NRL-2P5ADC24-046
Q104	22240039	LA1266		Capacitors	
Q133	22240090	LM7001	C001	354761009	10 μ F,35V,Elect.
Q201	22240242	AN7470	C106	354784799	0.47 μ F,50V,Elect.
Q301	222502	NJM4558D-X	C107	354742209	22 μ F,16V,Elect.
Q324	22240158 or	LC7823 or	C108	354741019	100 μ F,16V,Elect.
	22240339	LC7823N	C112,C133	354780229	2.2 μ F,50V,Elect.
Q902	222780055	78M05HF	C113	354780109	1 μ F,50V,Elect.
Q904	222780125 Y	78M12HF	C131	374722234	0.022 μ F \pm 5%,50V,Plastic
	Transistors		C132,C159	374723334	0.033 μ F \pm 5%,50V,Plastic
Q101	2211723	2SC1923-O	C134,C210	353782299	0.22 μ F,50V,Elect.
Q102	2210746	2SC945A-P <P/W>	C138	354721019	100 μ F,6.3V,Elect.
Q103,Q132	2211255	2SC1815-GR	C154,C554	354780479	4.7 μ F,50V,Elect.
Q131	2212445	2SK365-GR	C155	354741019	100 μ F,16V,Elect.
Q134,Q135	2213510	DTA114ES	C156,C157	354761009	10 μ F,35V,Elect.
Q202,Q555	2211455	2SA1015-GR	C160	374721034	0.01 μ F \pm 5%,50V,Plastic
Q203,Q204	2212285	2SC2878-A	C161,C208	354780109	1 μ F,50V,Elect.
Q551,Q552	2211255	2SC1815-GR	C201	354744719	470 μ F,16V,Elect.
Q553	221281	DTC114YS	C202	354742209	22 μ F,16V,Elect.
Q554	2211255	2SC1815-GR	C204,C205	374721824	1800pF \pm 5%,50V,Plastic
Q903	2211455	2SA1015-GR		374721224	1200pF \pm 5%,50V,Plastic
	Diodes				<D>
D101,D102	223132	1K60			<P/W>
D103,D105	223163	1SS133	C206	374724734	0.047 μ F \pm 5%,50V,Plastic
D131,D201	223163	1SS133	C207	370134714	470pF \pm 5%,100V,Plastic
D551	223163	1SS133	C209	354780339	3.3 μ F,50V,Elect.
D553	224150512	05AZ5.1Y	C212,C213	354761009	10 μ F,35V,Elect.
D701	224150683	05AZ6.8Z	C215,C216	354780229	2.2 μ F,50V,Elect.
D901	22380023	RBV401	C217,C218	374723924	3900pF \pm 5%,50V,Plastic
D902-D906	22380032	1SR139-100	C219	354780229	2.2 μ F,50V,Elect.
D907,D908	224151203	05AZ12Z	C301,C302	354780229	2.2 μ F,50V,Elect.
D909	224152704	05AZ27R	C307,C308	354721019	100 μ F,6.3V,Elect.
D910	224150512	05AZ5.1Y	C309,C310	374726224	6200pF \pm 5%,50V,Plastic
D911	223163	1SS133	C311,C312	374721824	1800pF \pm 5%,50V,Plastic
	Coils		C313,C314	354780229	2.2 μ F,50V,Elect.
L103	233383	NMC-6070 <P/W>	C315,C316	354741019	100 μ F,16V,Elect.
L104	233409M022	NCH-1272	C330	354780229	2.2 μ F,50V,Elect.
L201,L202	233294	NMC-5040 <P/W>	C551,C552	374724734	0.047 μ F \pm 5%,50V,Plastic
L551,L552	231176	S-1.3C	C555	354722219	220 μ F,6.3V,Elect.
	Transformers		C905,C906	3504207	6800 μ F,50V,Elect.
L101	233401	NFIF-4072	C907,C908	354742219	220 μ F,16V,Elect.
L102	233402	NFIF-4073	C910	354784709	47 μ F,50V,Elect.
L152	232139	NMIF-4062	C911	354752229	2200 μ F,25V,Elect.
	RF block		C913-C915	354761009	10 μ F,35V,Elect.
L151	232152	NMRF-7052	C917,C918	354781009	10 μ F,50V,Elect.
	Ceramic filters		Resistors		
X101,X102	3010071	SFE10.7MA5 <D>	R101	5210221 or	N06HR100KBD
X101	3010081	SFE10.7MS3GYA <P/W>		5210070	Semi-fixed
X102	3010137	SFE10.7MMK <P/W>	R201	5210216 or	N06HR5KBD or
X151	3010123	SFZ450JL		5210062	N06HR4.7KBD ,Semi-fixed
X152	3010076	BFU450C	R202	5210222 or	N06HR200KBD or
				5210072	N06HR220KBD,Semi-fixed

POWER AMPLIFIER CIRCUIT PC BOARD(NAAF-4038-2/2A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q501,Q502	22240108	μ PC1225H
	Transistors	
Q503,Q504	2202492,	* 2SA1264N-R,
	2202493,	* 2SA1264N-O,
	2202243	* 2SA1694-O,
	2202244 or	* 2SA1694-Y or
	2202246	* 2SA1694-P
Q505,Q506	2202502,	* 2SC3181N-R,
	2202503,	* 2SC3181N-O,
	2202253	* 2SC4467-O,
	2202254 or	* 2SC4467-Y or
	2202256	* 2SC4467-P
Q507-Q510	2211255	2SC1815-GR
Q513,Q514	2212285	2SC2878-A
Q515	2211455	2SA1015-GR
	Capacitors	
C501,C502	354761009	10 μ F,35V,Elect.
C505,C506	354741019	100 μ F,16V,Elect.
C507,C508	374723334	0.033 μ F \pm 5%,50V,Plastic
C515,C516	354780229	2.2 μ F,50V,Elect.
C517	353761009	10 μ F,35V,Elect.
	Resistors	
R511,R512	5215061	N08HR3KBC,Semi-fixed
R526,R527	442521004	10ohm,1/2W,Metal oxide film
R531-R534	4500005	0.22ohm,2W,Metal plate
	Plugs	
P503,P504	25055495	NPLG-2P470
	Socket	
P501	25050267	NSCT-3P95

HEADPHONE TERMINAL PC BOARD(NASW-4039-2/2A)

CIRCUIT NO.	PART NO.	DESCRIPTION
S601	25035517	NPS-222-L479,Speaker switch
P601	25045255	YKB21-5009,Headphone terminal

POWER SUPPLY CIRCUIT PC BOARD(NAPS-4042-2/2A/2B)

CIRCUIT NO.	PART NO.	DESCRIPTION
S901	25035550	Δ NPS-111-L512P,Push switch
R901	431523355	Δ 3.3Mohm,1/2W,Solid resistor <D>
C901	3500065A	Δ DE7150FZ103PAC400V/125V IS capacitor
F901	252049	Δ 4A(ST-6),Fuse <D/W>
F902	252074	Δ 2A-SE-EAK,Fuse <P/W>
F901a	250113	Δ SN5051,Fuseholder <D/W>
F902a	25050065	Δ YSH-403T,Fuseholder <P/W>
	29360626-1	Fuse label <D>

CAUTION:Replacement for transistor of mark *,if necessary, must be made from the same beta group (H FE) as the original type.

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R559,R560	442520824	8.2ohm,1/2W,Metal oxide film
R902,R903	441729114	910ohm,2W,Metal oxide film
R904	442520104	1ohm,1/2W,Metal oxide film
R905	441726804	68ohm,2W,Metal oxide film
R906	442521004	10ohm,1/2W,Metal oxide film
R910	441622704	27ohm,1W,Metal oxide film
	Terminals	
P001	25060085	NTM-4PDMN29,Antenna <D>
	25060087	NTM-2PDMN31,Antenna <P/W>
P101	25060064	4P-5
P102	25060061	1P-5
P301,P302	25045323Y	NPJ-6PDBL180
P551	25060158Y	NTM-8PDML084,Speaker
	Sockets	
P310,P901	25050267	NSCT-3P95

DISPLAY CIRCUIT PC BOARD (NADIS-4037-2/2A/2B)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q701	22240406Y	μ PD75268CW-025
	FL tube	
Q702	212093Y	FIP9BTM8
	Transistor	
Q704	221282	DTC144ES
	Diodes	
D702	224150913	05AZ9.1Z
D705-D707	223163	1SS133
D709-D711	223163	1SS133
D713-D720	223163	1SS133
	Ceramic oscillator	
X701	3010163	CST4.19MGW
	Coil	
L701	233400M220 or	NCH-2238 or
	233409K220	NCH-1284
	Capacitors	
C701	3000057	0.1F,5.5V,Super
C702,C704	375524744	0.47 μ F \pm 5%,50V,Plastic
C703	353780229	2.2 μ F,50V,Elect.
	Resistor	
R710	49163103404	10kohm \times 4,1/10W,Network
	Switches	
S701-S727	25035548	NPS-111-S510
S728	25065286	NSS22112,Band <W>
	Holder	
	27190810Y	FL

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

TONE CONTROL CIRCUIT PC BOARD (NAAF-4047-1/1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
ICs		
Q401,Q402	222502	NJM4558D-X
Capacitors		
C401,C402	354761009	10 μ F,35V,Elect.
C407,C408	354761009	10 μ F,35V,Elect.
C409,C410	374722234	0.022 μ F \pm 5%,50V,Plastic
C411,C412	354780339	3.3 μ F,50V,Elect.
C413,C414	374722234	0.022 μ F \pm 5%,50V,Plastic
C417,C418	354744709	47 μ F,16V,Elect.
C453,C454	374724734	0.047 μ F \pm 5%,50V,Plastic
Resistors		
R405,R406	5104228	N11RHC250KWT22Z,Balance
R417,R421	5104229	N14RHC100KWT22Z,Tone
R418,R422		
R459,R460	5142001	N16RGP100KBTP25,Volume
Switch		
S451	25035611	NPS-122-L573,Switch

VOLTAGE SELECTOR SWITCH PC BOARD (NASW-4097-2)

(Only Worldwide model)

CIRCUIT NO.	PART NO.	DESCRIPTION
S921	25065287	Δ NSS-22113P,Slide switch

ONKYO CORPORATION

International Division: Onarimon Yusen Bldg., 23-5, Nishi-Shimbashi 3-chome, Minato-ku,
TOKYO 105, JAPAN Tel: 03-3432-6987 Fax: 03-3436-6979

ONKYO U.S.A CORPORATION

200 Williams Drive, Ramsey, N.J. 07446, U.S.A.
Tel: 201-825-7950 Fax: 201-825-8150

ONKYO Europe GmbH

Hellersbergstrasse 4, 4040 Neuss WEST GERMANY
Tel: 02101 12 00 75 Fax: 02101 10 33 06 TLX: 85 17 916 ONDU D

ONKYO FRANCE S.A.R.L.

Immeuble Le DIAMANT, Domaine Technologique De Saclay, 4 rue Rene Razel,
91892 SACLAY, FRANCE Tel: (1)69 41 35 10 Fax: (1)69 41 35 84