


ONKYO® SERVICE MANUAL


AUDIO VIDEO CONTROL RECEIVER MODEL TX-DS787

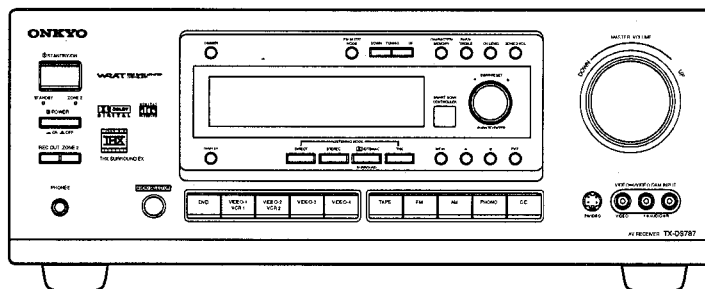

Black, Golden and Silver models

BMDD	120V AC, 60Hz
BMPP,SMPP BMPA,GMPA	230-240V AC, 50Hz
BMWT,BMWR GMWR,GMWT	220-230V/120V AC, 50/60 Hz
GMGT	220-230V AC, 50Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBER APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

Specifications.....	2
Service procedures.....	3
Panel views.....	4
Front panel.....	4
Remote controller.....	5
Rear panel.....	6
IC block diagrams and Descriptions.....	7
Main microprocessor-connection view.....	21
Main microprocessor-terminal descriptions.....	22
Sub microprocessor-connection view.....	23
Sub microprocessor-terminal descriptions.....	24
Adjustment and confirmation.....	25
Exploded view and parts list.....	27
Front panel section.....	27
Parts list.....	28
Chassis section.....	29
Wiring view.....	31
Terminal-connection view.....	33
Block diagram.....	35
PC board view,Schematic diagram and parts list.....	37
Main microprocessor.....	37
Power amplifier section A.....	44
Power amplifier section B.....	50
Digital, multi, and power source.....	55
Display.....	60
Preamplifier section.....	64
DSP circuit section.....	69
Video audio section.....	73
Video input/output section.....	77
Component video section.....	82
FL tube view.....	83
Packing view.....	84



SPECIFICATIONS

AMPLIFIER SECTION

Continuous Average Power output (FTC)

All channels: 100 W per channel min. RMS at 8 Ω , 2 channels driven from 20 Hz to 20 kHz with no more than 0.08% total harmonic distortion.
130 W min. RMS at 6 Ω , 2 channels driven from 1 kHz with no more than 0.1% total harmonic distortion.

Continuous Power output (DIN) 135 W at 6 Ω

Maximum Power output (EIAJ) 160 W at 6 Ω

Dynamic Power Output (Stereo) 2 \times 250 W at 3 Ω

2 \times 210 W at 4 Ω

2 \times 130 W at 8 Ω

Total Harmonic Distortion: 0.08% at rated power

0.08% at 1 W output

IM Distortion: 0.08% at rated power

0.08% at 1 W output

Damping Factor: 60 at 8 Ω

Input Sensitivity and Impedance

PHONO: 2.5 mV, 50 k Ω

LINE (CD, TAPE, DVD,

VIDEO 1-4): 200 mV, 50 k Ω

MULTICHANNEL INPUT

(FRONT L/C/R, SURROUND

L/R, SURROUND BACK L/R): 200 mV, 50 k Ω

(SUBWOOFER): 36 mV, 50 k Ω

COAXIAL 1, 2 (DIGITAL): 0.5 Vp-p, 75 Ω

DVD, VIDEO1-4: 1 Vp-p, 75 Ω

1 Vp-p, 75 Ω (Y)

0.28 Vp-p, 75 Ω (C)

COMPONENT VIDEO 1, 2: 1 Vp-p, 75 Ω (Y)

0.7 Vp-p, 75 Ω (PB, PR)

Output Level and Impedance

Rec out (TAPE, VIDEO 1, 2):

200 mV, 2.2 k Ω

Pre out: 1 V, 470 Ω

VIDEO (VIDEO 1, 2, MONITOR OUT):

1 Vp-p, 75 Ω

1 Vp-p, 75 Ω (Y)

0.28 Vp-p, 75 Ω (C)

COMPONENT VIDEO OUT: 1 Vp-p, 75 Ω (Y)

0.7 Vp-p, 75 Ω (PB, PR)

Phono Overload: 110 mV RMS at 1 kHz, 0.5% T.H.D.

Frequency Response: 20 Hz to 30 kHz: 1 dB

(CD in Direct mode)

10 Hz to 100 kHz: +1 dB, -3 dB

(CD in Direct mode)

20 Hz to 20 kHz: 0.8 dB

RIAA Deviation:

Tone Control

Bass: 12 dB at 100 Hz

Treble: 12 dB at 10 kHz

Signal-to-Noise Ratio (Stereo)

Phono: 80 dB (IHF A, 5 mV input)

CD/Tape: 100 dB (IHF A, 0.5 V input)

Muting: -50 dB

TUNER SECTION

FM

Tuning Range: 87.5 to 108.0 MHz (50 kHz steps)

Usable Sensitivity

Mono: 11.2 dBf, 1.0 μ V (75 Ω IHF)

0.9 μ V (75 Ω DIN)

Stereo: 17.2 dBf, 2.0 μ V (75 Ω IHF)

23 μ V (75 Ω DIN)

50 dB Quietening Sensitivity

Mono: 17.2 dBf, 2.0 μ V (75 Ω)

Stereo: 37.2 dBf, 20 μ V (75 Ω)

Capture Ratio: 2.0 dB

Image Rejection Ratio:

USA & Canadian models: 40 dB

Other area models: 85 dB

IF Rejection Ratio: 90 dB

Signal-to-Noise Ratio

Mono: 76 dB

Stereo: 70 dB

Alternate Channel Attenuation: 55 dB

Selectivity: 50 dB (DIN)

AM Suppression Ratio: 50 dB

Total Harmonic Distortion

Mono: 0.2%

Stereo: 0.3%

Frequency Response: 30 Hz to 15 kHz, 1.0 dB

Stereo Separation: 45 dB at 1 kHz

30 dB at 100 Hz to 10 kHz

AM

Tuning Range

USA & Canadian models: 530 to 1,710 kHz (10 kHz steps)

European & Australian models: 522 to 1,611 kHz (9 kHz steps)

Worldwide models: 531 to 1,602 kHz (9 kHz steps)

530 to 1,710 kHz (10 kHz steps)

Usable Sensitivity: 30 μ V

Image Rejection Ratio: 40 dB

IF Rejection Ratio: 40 dB

Signal-to-Noise Ratio: 40 dB

Total Harmonic Distortion: 0.7%

GENERAL

Power Supply:

AC 120 V, 60 Hz

(USA & Canadian models)

AC 230-240 V, 50 Hz

(European & Australian models)

AC 220-230 V, 50/60 Hz

(some Asian models)

AC 220-230 and 120 V switchable,

50/60 Hz (Worldwide models)

Power Consumption:

5.5 A

440 W

Dimensions (W \times H \times D):

435 \times 175 \times 453 mm

17-1/8" \times 6-7/8" \times 17-13/16"

Weight:

36.6 lbs. (USA & Canadian models)

16.9 kg (European models)

17.6 kg

(Australian & worldwide models)

17.4 kg (some Asian models)

REMOTE CONTROLLER

Transmitter:

Infrared

Signal range:

Approx. 5 meters, 16 ft.

Power supply:


Two "AA" batteries (1.5 V \times 2)


Specifications and features are subject to change without notice.

Power supply and voltage vary depending on the area in which the unit is purchased.

SERVICE PROCEDURES

1. Replacing the fuses

 This symbol located near the fuses indicates that the fuse used is fast operating type. For continued protection against fire hazard, replace with same type fuse. Fuse or fuse rating refer to the marking adjacent to the symbol.

 Ce symbole indique que le fusible utilisé est rapide. Pour une protection permanente, n'utiliser que fusibles de même type. Ce dernier est la qu le present symbol est appse.

CIRCUIT NO.	PART NO.	DESCRIPTION
F9001	252196	12A-UL/T-314,Fuse <D/WT/WR>
F9002	252244 or 252078	5A-SE-TL250V or 5A-SE-EAK,Fuse <P/WT/WR/GT/A>
F9003	252241 or 252075	2.5A-SE-TL250V or 2.5A-SE-EAK,Fuse <P/A>
F9201,F9202	252160 252241 or 252075	2.5A-UL/T-237,Fuse <D> 2.5A-SE-TL250V or 2.5A-SE-EAK,Fuse <P/A/WR/WT/GT>

Note: <D>:120V model only
 <P>: European model only
 <WT>: Worldwide model only
 <WR>: Asian model only for 230V
 <GT>: 220V model only
 <A>: Australian model only

2. To initialize the unit

This device employs a microprocessor to perform various functions and operations. If interference generated by an external power supply, radio wave, or other electrical source results in accident which causes the specified operations and functions to operate abnormally.

To perform a result, please follow the procedure below.

1. Press and hold down the VIDEO-1 button, then press the SPEAKER A button.
2. After "clear" is displayed, the preset memory and each mode stored in the memory, such as surround, are initialized and will return to the factory setting.

3. Safety-check out

(Only U.S.A. model)

After correcting the original service problem, perform the following safety check before releasing the set to the customer. Connect the insulating-resistance tester between the plug of power supply cord and screw on the back panel. Specifications: 3.3Mohm \pm 10% at 500V.

4. Memory Preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves the contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in order to charge the back-up system.

The memory preservation period after the unit has been unplugged varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of a few weeks after the last time the unit has been unplugged. This period is shorter when the unit is exposed to a highly humid climate.

5. Setting the AM tuning step frequency

(Worldwide models only)


Worldwide models are equipped with a switch that controls the AM band tuning steps. Please set this switch to match the AM band tuning step frequency in your area.

U.S.A. and Canada : 10 kHz
 Other areas : 9 kHz

6. Setting the Voltage selector (Worldwide models only)

Worldwide models are equipped with a voltage selector to conform with local power supplies. Be sure to set this switch to match the voltage of the power supply in your area before plugging in the unit.

1. Determine the proper voltage for your area: 220-230 V or 120 V.
2. If the preset voltage is not correct for your area, insert a screwdriver into the groove in the switch. Slide the switch all the way to the right (120 V) or to the left (220-230 V), whichever is appropriate.

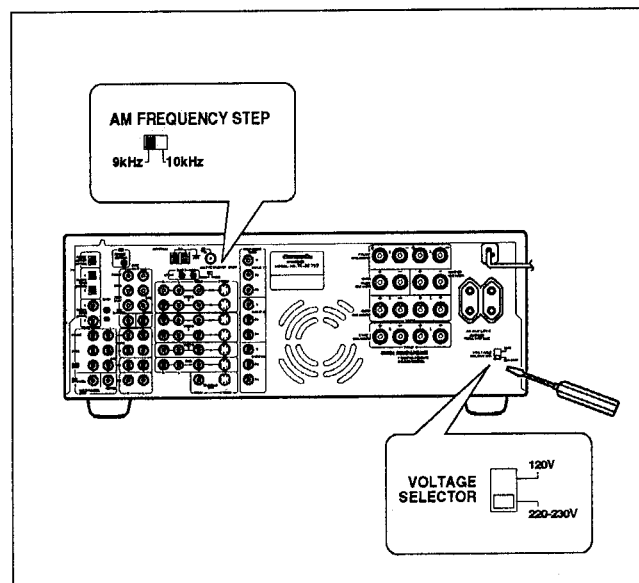


7. Changing the AM band step

With the exception of the worldwide models, a tuning step selector switch is not provided. When you change the band step, change the parts as shown below.


	To 10kHz	To 9kHz
R7079	Open	1k
R7078	1k	Open

PANEL VIEWS FRONT PANEL

Front panel

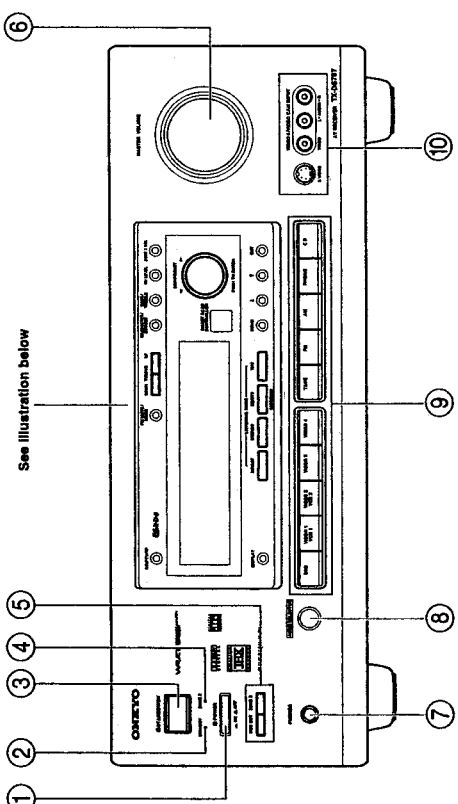


See illustration below

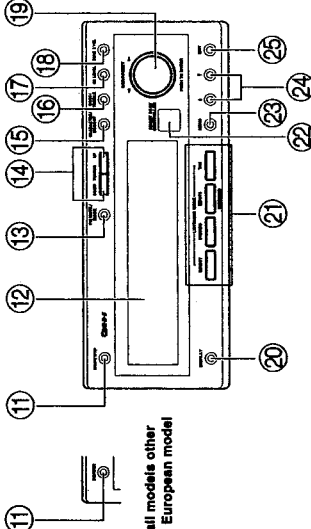

For all models other than European model

Front panel display

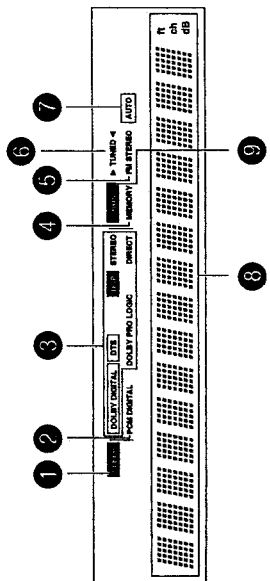

Front panel facilities

Front panel

- ① **POWER switch**
Turns on and off the main power supply for the TX-DS787.
 - Before turning on the power, make sure all cables are properly connected.
 - Turning on the TX-DS787 may cause a momentary power surge that might interfere with other electrical equipment on the same circuit. If this is a problem, plug the TX-DS787 into a different electrical circuit.
- ② **STANDBY indicator**
Lights when the TX-DS787 is in the standby state and flashes when a signal is received from the remote controller.
- ③ **STANDBY/ON button**
Pressing this button while the main power is turned on the STANDBY indicator lights up and the front display turns off. Pressing it again returns it to the standby state. This state turns off the display, disables control functions.
- ④ **ZONE 2 indicator**
Lights when a signal is output to the remote zone (Zone 2). When the ZONE 2 indicator is off, then either output to the remote zone is turned off or Rec Out is selected.
- ⑤ **REC OUTZONE 2 buttons**
These buttons allow you to use the TX-DS787 to output to a remote zone (Zone 2) or to another component for recording purposes (Rec Out). Press the REC OUT button to output the audio and video signals to a recording component for recording purposes. Press the ZONE 2 button to enjoy the output from the TX-DS787 in a different room, which is referred to as a remote zone (Zone 2).
When either button is pressed, the currently selected input source for recording or outputting to the remote zone is displayed in the front panel display. If "SOURCE" is displayed, then the same input source as that selected for the main zone will be output. To select an input source, press the desired button (REC OUT or ZONE 2) and then press one of the input source buttons within 3 seconds. That source will be output for recording or viewing in the remote zone. To turn off either the REC OUT or ZONE 2 output, when "SOURCE" is displayed, press the button again. "Off" appears in the front display.

Notes:

- The Rec Out and Zone 2 buttons use the same circuit and therefore cannot be used at the same time. When Rec Out is selected, nothing is output to Zone 2, and vice versa.
- When not using Rec Out or Zone 2, turn off the signal. If turned on and the connected component is not turned on, the electric signal will still be sent through the circuitry and the excess load may cause deterioration of the audio signal.

⑥ **MASTER VOLUME dial**

The MASTER VOLUME dial is used to control the volume for the main zone. The volume for the remote zone (Zone 2) is independent.

⑦ **PHONES jack**

This is a standard stereo jack for connecting stereo headphones. The audio for the front right and left speakers are sent to the headphone speakers. When the headphones are plugged in, the listening mode automatically changes to stereo and output to the speakers is stopped.

⑧ **AUDIO SELECTOR button**

This button is used to select the type of audio input signal. Each time pressed, the setting cycles from "AUTO" → "Multichannel" → "Analog" and back.

AUTO (automatic detection): With this setting, the TX-DS787 automatically detects whether the input signal is digital or analog. When a digital signal is not input, then the analog signal is played.

Multichannel: Select this setting to play back the input from the component connected to the MULTI CHANNEL INPUT port. This setting is effective when the Multichannel setting in the Audio Setup sub-menu is set to "Yes".

Analog: Select this setting to play back the input from a source component connected to an AUDIO IN jack. With this setting, even if a digital signal is input from the same component, only the analog signal will be output.

⑨ **Input Source Buttons (DVD, VIDEO 1-4, TAPE, FM, AM, PHONO, and CD)**

These buttons are used to select the input source for the main zone. To select the input source for the remote zone (Zone 2) or recording out (Rec Out), first press the Zone 2 or Rec Out button, and then the desired input source button.

⑩ **VIDEO 4/VIDEO CAM INPUT**

These inputs are for connecting video cameras and other such equipment.

⑪ **RT/PTY/TP (European models only) button**

This button is only available on European models. Use this button to help tune into the Radio Data System (RDS) for FM broadcasting. RDS was developed within the European Broadcasting Union (EBU) and is available in most European countries. Each time the button is pressed, the display changes from RT (radio text) to PTY (program type) to TP (traffic program) and then back to RT again.


⑪ **DIMMER (other than European models) button**

Press to set the brightness of the front display. There are 3 settings available: normal, dark, and very dark.

- The dimmer control for the front display can also be performed at the remote controller.


⑫ **Front display**

REMOTE CONTROLLER

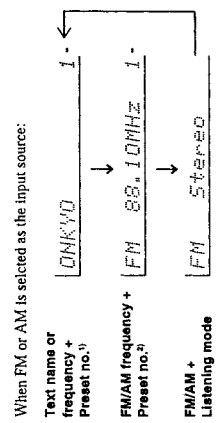

- ① EXIT/RETURN button
For entering the selected setting and returning to the previous screen.
- ② AUDIO button
For selecting the audio input signal. The setting changes from 'AUTO' to 'Multichannel' to 'Analog' and back each time this button is pressed.
- ③ TRACK button
For selecting a track when playing back a compact disc.
- ④ CD/TAPE/DVD/MD operation buttons
For operating Onkyo components connected to the TX-DS787.
- ⑤ INPUT SELECTOR buttons
For selecting the input source. To select Video 4, press the V- button and then 4 of the numerical keys.
- ⑥ Numeric key/STEREO/DIRECT/THX/ DSP ←, →/SURROUND/DIRECT/THX/ CH SEL/LEVEL+, -/DIMMER buttons
For entering the number of a track. You can also select a listening mode, set the speaker output level, and adjust the brightness of the front display (DIMMER).
- ⑦ LIGHT button
For illuminating the buttons of the remote controller.
- ⑧ MODE MACRO button
For executing and programming the Macro function.
- ⑨ OSD/MENU button
For displaying the OSD Menu. However, when in the DVD mode, this button displays the DVD menu.
- ⑩ ENTER/cursor button
When selecting items in the OSD Menu, press the upper and lower portions to move the on-screen cursor (or highlighted portion) upward and downward, press the right and left portions to select parameter values or modes, and press ENTER to display the screen for the selected item.
- ⑪ VOL +/- button
For adjusting the volume.
- ⑫ TEST/TV/VCR button
For setting the output levels for each speaker. Programs the TV/ VCR switching mode when programming the remote controllers of other components.
- ⑬ MUTING button
Activates the mute function.
- ⑭ DISC button
For selecting the compact disc for playback when using a CD changer.
- ⑮ ENT button
For entering setting when operating MD or DVD players.

FRONT PANEL FACILITIES

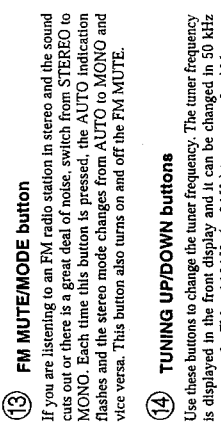

- ① SEND/LEARN Indicator
Lights red when sending a signal.
- ② LCD display
Displays the component being operated or the operation status.
- ③ ON/STANBY button
ON: Turns on the TX-DS787.
STANBY: Places the TX-DS787 in the standby state. Be aware that pressing the STANBY button only places the TX-DS787 in standby and does not turn the power completely off.
- ④ SLEEP button
For setting the sleep time.
- ⑤ DIRECT MACRO button
For executing and programming the Direct Macro function.
- ⑥ MODE buttons
For selecting the component to be operated by the remote controller.
- ⑦ DISPLAY/DVD SET button
For changing the display in the front display. However, when in the DVD mode, this button displays the DVD setup menu.
- ⑧ CH +/- button
For selecting a tuner preset channel.

When FM or AM is selected as the input source:

Text name or frequency + Preset no.¹⁾ → ONKYO → 1 →


FM/AM frequency + Preset no.²⁾ → FM 88.10MHz 1 →

FM/AM + Listening mode → FM Stereo

1) Not displayed if there is no text name programmed for the preset channel.

2) If a text name is programmed for the preset channel, display '-2' is displayed for 3 seconds each time the input is changed from FM to AM or vice versa.

- ⑬ LISTENING MODE buttons
Press these buttons to select a listening mode for the current input source.
DIRECT: Select for direct audio output that does not pass through sound alteration circuits and other filters.
STEREO: Select for normal stereo output.
DOLBY SURROUND: Select for the Dolby Pro Logic, Dolby Digital, or DTS listening modes.
THX: Select for the THX listening mode.
- ⑭ Remote control sensor
- ⑮ MENU button
Press to bring up the OSD menu. The OSD menu will appear on the TV monitor as well as the front display on the TX-DS787.
- ⑯ ▲ and ▼ buttons
When selecting items in the OSD Menu, press these buttons to move the on-screen cursor (or the highlighted portion) upward and downward.
- ⑰ EXIT button
Press to exit the OSD menu when at the Menu Screen, or move to one screen previous to the one that is displayed if at any other screen.

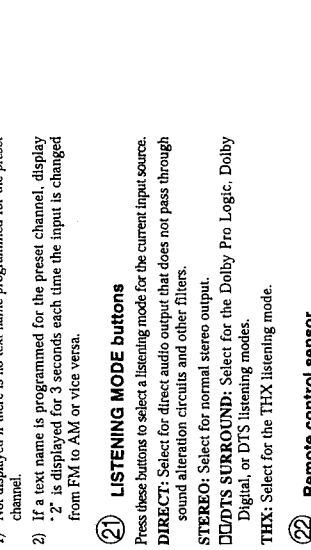

- ⑱ Front panel display
- ⑲ SLEEP Indicator
- ⑳ PCM DIGITAL Indicator
- ㉑ Listening mode or digital input format indicator
- ㉒ MEMORY indicator
- ㉓ FM STEREO indicator
Lights when tuned into an FM radio broadcast in stereo.
- ㉔ TUNED Indicator
- ㉕ AUTO Indicator
- ㉖ Multi function display
- ㉗ RDS indicator (European models only)

When an input source other than FM or AM is selected:

Input or text name + volume¹⁾ → DVD → 10 →

Program format²⁾ → Dolby D → 3/2.1 →

Input + Listening mode → DVD Dolby D


1) You can program text name for each input source. That text name will be displayed at this time.

2) If the input signal does not have a program format, then this will be skipped.

- ⑳ SMART SCAN CONTROLLER (SSC) dial
Turn clockwise or counterclockwise to select the setting for the parameter displayed in the front display. Press to move to the next parameter.
- ㉑ DISPLAY button
The DISPLAY button is used to display information about the current input source signal. Each time you press the display button, the screen changes to show you different information concerning the input signal.

- ⑳ FM MUTE/MODE button
If you are listening to an FM radio station in stereo and the sound cuts out or there is a great deal of noise, switch from STEREO to MONO. Each time this button is pressed, the AUTO indication flashes and the stereo mode changes from AUTO to MONO and vice versa. This button also turns on and off the FM MUTE.
- ㉑ TUNING UP/DOWN buttons
Use these buttons to change the tuner frequency. The tuner frequency is displayed in the front display and it can be changed in 50 kHz increments for FM and 10 kHz (or 9 kHz) increments for AM. When FM is selected, you can hold down one of the tuning buttons and then release it to activate the auto-search feature. It will search for a station in the direction of the button you pressed and stop when it tunes into one.
- ㉒ CHARACTER/MEMORY button
This button is used to program names to preset radio stations and input sources, to change names previously programmed, or to delete names. This button is also used to assign the radio station that is currently tuned in to a preset channel or delete a previously preset station.
- ㉓ BASS/TREBLE button
Press to enter the mode for adjusting the bass and treble levels.
- ㉔ CH LEVEL button
Press to select the channel whose level is to be adjusted.
- ㉕ ZONE 2 VOL button
Press to enter the mode for adjusting the volume in the remote zone (Zone 2).


MAIN MICROPROCESSOR-CONNECTION VIEW

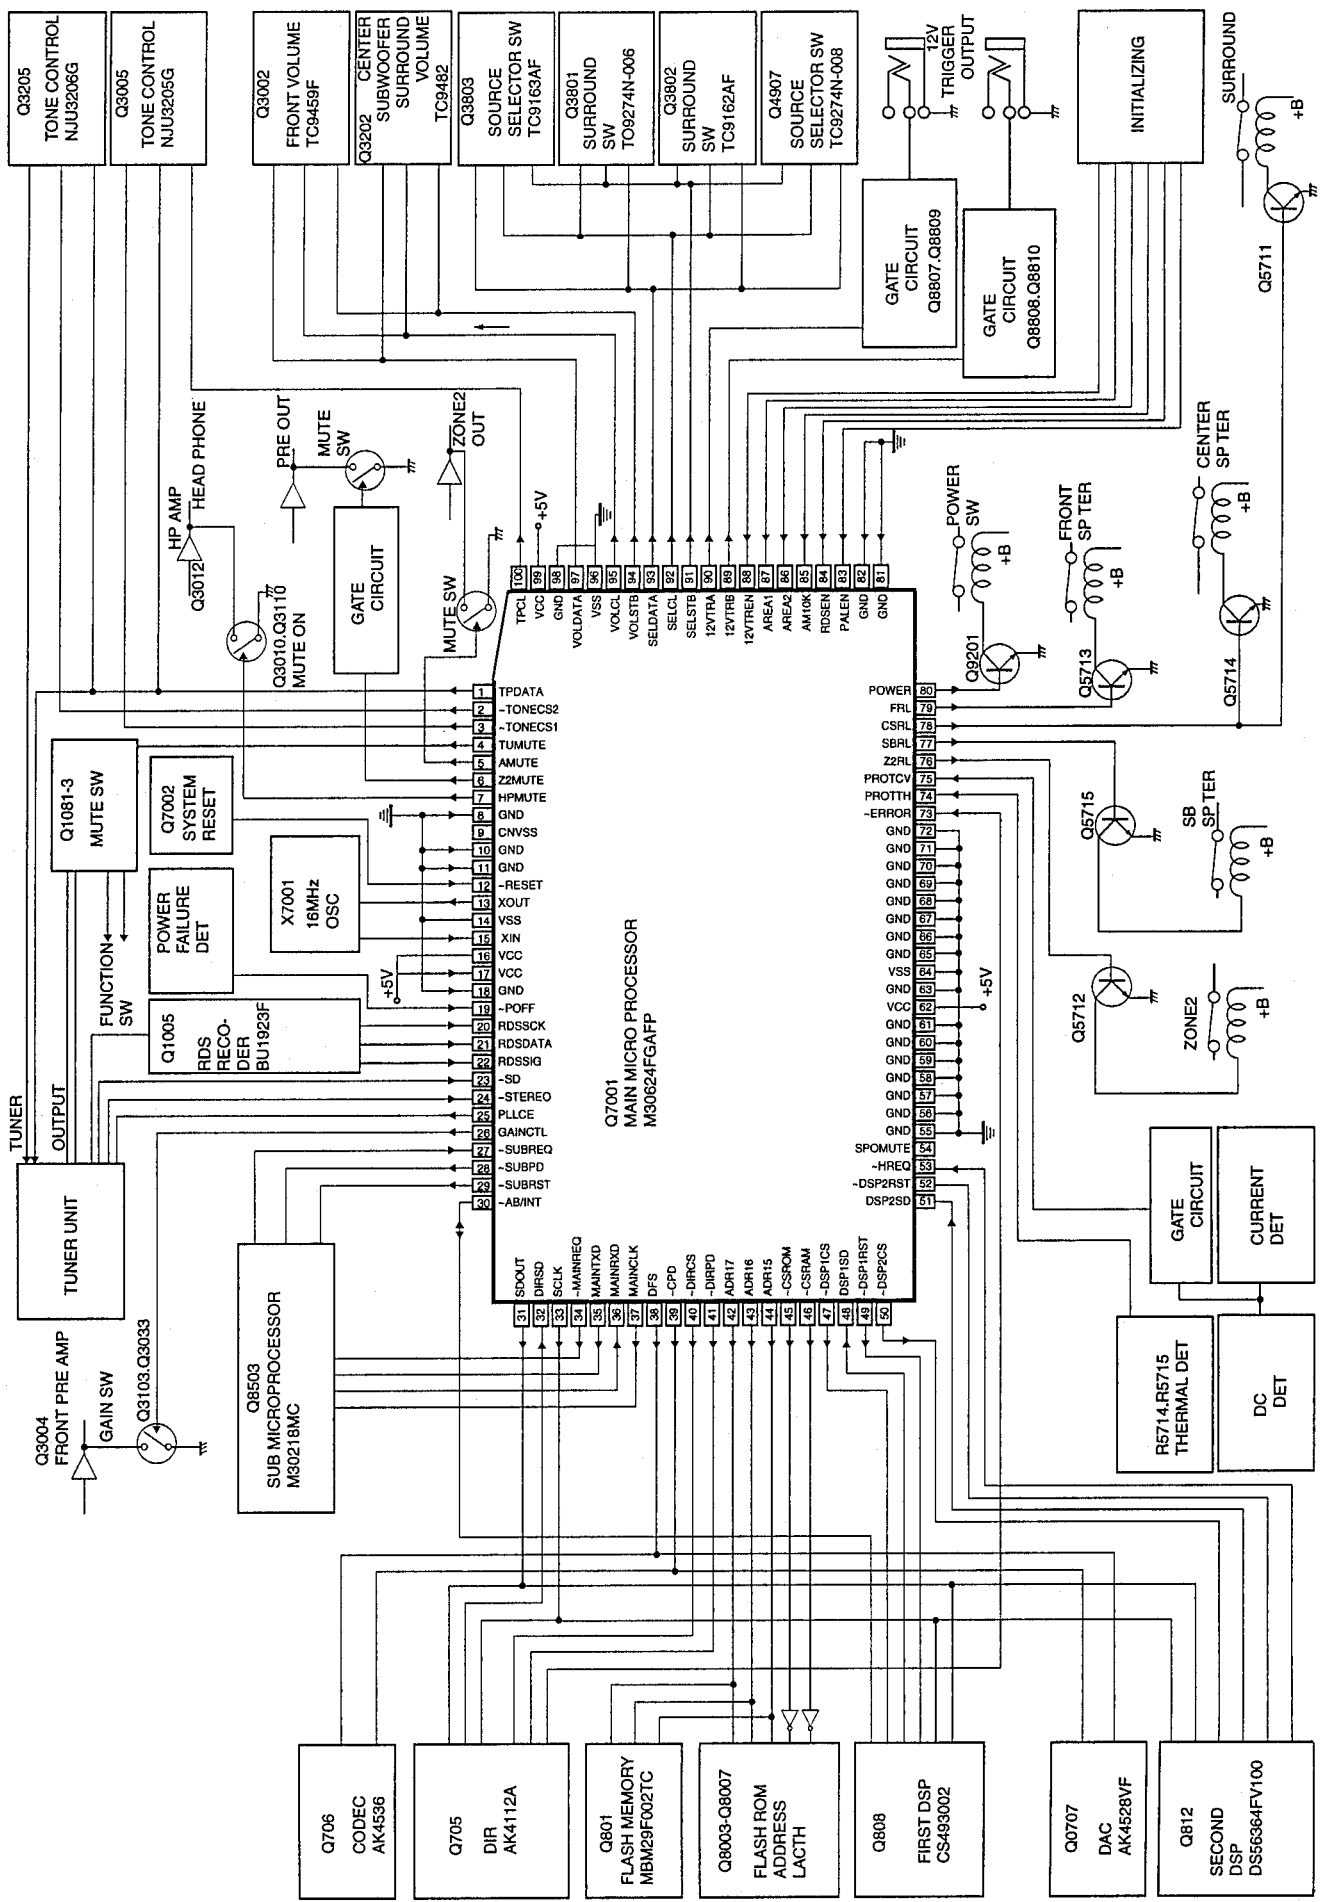

MAIN MICROPROCESSOR-TERMINAL DESCRIPTION

No.	Function	I/O	Act	Description	No.	Function	I/O	Act	Description
1	TPDATA	O	H	Data output terminal to the tone ICs and PLL IC.	45	-CSROM	O	L	Chop select output terminal to the mask ROM IC.
2	-TONECS2	O	L	Chip select output terminal for tone IC 2.	46	-CSRAM	O	L	Chip select signal output terminal for 1M bit SRAM.
3	-TONECS1	O	L	Chip select output terminal for tone IC 1.	47	-DSP1CS	O	L	Chip select output terminal of DSP IC 1.
4	TUMUTE	O	H	Muting control output terminal for tuner section	48	DSP1SD	I	H	Serial data input terminal from DSP IC 1.
5	AMUTE	O	H	Muting control output terminal for audio section	49	-DSP1RST	O	L	Reset signal output terminal to DSP IC 1.
6	ZMUTE	O	H	Muting control output terminal for zone 2 section	50	-DSP2CS	O	L	Chip select output terminal to DSP IC 2.
7	HPMUTE	O	H	Muting control output terminal for headphone amplifier section	51	DSP2SD	I	H	Serial data input terminal form DSP IC 2.
8	GND	I		Select input terminal for external data bus width. Connect to the ground	52	-DSP2RST	O	L	Reset output terminal for DSP IC 2.
9	CNVSS	I		Input terminal to change the processor mode.	53	-HREQ	I	L	Request input terminal for DSP IC 2.
10,11	GND	I		Not used. Connect to the ground terminal.	54	SPOMUTE	O	H	Muting output terminal for surround pre output.
12	-RESET	I	L	Reset signal input terminal of microprocessor	55-61	GND	I		Not used. Connect to the ground terminal.
13	XOUT	O		Output terminal of main clock oscillator circuit. Connect the 16MHz ceramic	62	VCC			Power supply terminal. Apply +5V.
14	VSS	I		Power supply terminal. Connect to the ground terminal.	63	GND	I		Not used. Connect to the ground terminal.
15	XIN	I		Input terminal of main clock oscillator circuit. Connect to the 16MHz ceramic	64	VSS			Power supply terminal. Connect to the ground terminal.
16	VCC			Power supply terminal. Apply +5V.	65-72	GND	I		Not used. Connect to the ground terminal.
17	VCC	I	L	Not used. Apply +5V.	73	-ERROR	I	L	Error detector input terminal of DIR IC.
18	GND	I		Not used. Connect to the ground terminal.	74	PROTH	I	L	Protect input terminal from the thermal detector circuit.
19	-POFF	I	L	Power failure detector input terminal.	75	PROTCV	I	H	Protect input terminal from the voltage and current detector circuits.
20	RDSACK	I	CLK	Clock signal input terminal from RDS decoder.	76	Z2RL	O	H	Speaker relay control output terminal for ZONE 2.
21	RDSDATA	I	H	Data signal input terminal from RDS decoder	77	SBRL	O	H	Speaker relay control output terminal for the surround back channel.
22	RDSIG	I	H	Quality check input terminal of data signal from RDS decoder.	78	CSRL	O	H	Speaker relay control output terminal for the center and the surround channels.
23	-SD	I	L	Broadcast detector input terminal	79	FRL	O	H	Speaker relay control output terminal for the front channel.
24	-STEREO	I	L	Stereo broadcast detection input terminal	80	POWER	O	H	Power control output terminal.
25	PLLCE	O	H	Chip enable signal output terminal to PLL IC.	81,82	GND	I		Not used. Connect to the ground terminal.
26	GAINCTL	O	H	Output terminal to control the gain of amplifier.	83	PALEN	I	H	Initializing input terminal for PAL. H=PAL/NTSC L=NTSC
27	-SUBREQ	I	L	Transfer request signal input terminal from sub microprocessor.	84	RDSEN	I	H	Initializing input terminal for RDS broadcast.
28	-SUBPD	O	L	Signal output terminal to announce the power failure to the sub microprocessor.	85	AM10K	I	H	Initializing input terminal for AM band step. H=10 kHz
29	-SUBRST	O	L	Reset output terminal to the sub microprocessor.	86	AREA2	I	H	Initializing input terminal for FM band region.
30	-AB/INT	I/O	H	Interrupter signal of DSP IC 1 and abort signal terminal.	87	AREA1	I	H	Initializing input terminal for FM band region.
31	SDOUT	O	H	Serial data output terminal for DIR and DSP ICs.	88	12VTREN	I	H	Initializing input terminal for 12V trigger.
32	DIRSD	I	H	Serial data input terminal for DIR IC.	89	12VTRB	O	H	12V trigger output terminal B.
33	SCLK	O	CLK	Serial clock output terminal for DIR and DSP ICs.	90	12VTRA	O	H	12V trigger output terminal A.
34	-MAINREQ	O	L	Transfer request signal output terminal to main microprocessor.	91	SELSTB	O	H	Strobe output terminal for analog switch ICs.
35	MAINTXD	O	H	Transfer output terminal to main microprocessor.	92	SELCL	O	CLK	Clock output terminal to analog switch ICs.
36	MAINRXD	I	H	Transfer input terminal from main microprocessor	93	SELDATA	O	H	Data output terminal to analog switch ICs.
37	MAINCLK	O	CLK	Transfer clock output terminal to microprocessor	94	VOLSTB	O	H	Strobe output terminal to electrical volume IC.
38	DFS	O	H	DFS signal output terminal to Codec and D/A converter ICs.	95	VOLCL	O	CLK	Clock signal output terminal to electric volume IC.
39	-CPD	O	L	Data output terminal to DAC and Codec ICs.	96	VSS			Power supply terminal for AD converter IC.
40	-DIRCS	O	L	Chip select output terminal for DIR IC.	97	VOLDATA	O	H	Data signal output terminal to electric volume IC.
41	-DIRPD	O	L	Data output terminal to the DIR IC.	98	GND			Reference voltage input terminal for AD converter. Not used.
42	ADRI7	O	H	External ROM address 17 for DSP IC 1.	99	VCC			Power supply terminal for AD converter. Apply +5V.
43	ADRI6	O	H	External ROM address 16 for DSP IC 1.	100	TPCL	O	CLK	Clock signal output terminal for tone and PLL ICs.
44	ADRI5	O	H	External ROM address 15 for DSP IC 1.					

SUB MICROPROCESSOR-CONNECTION VIEW

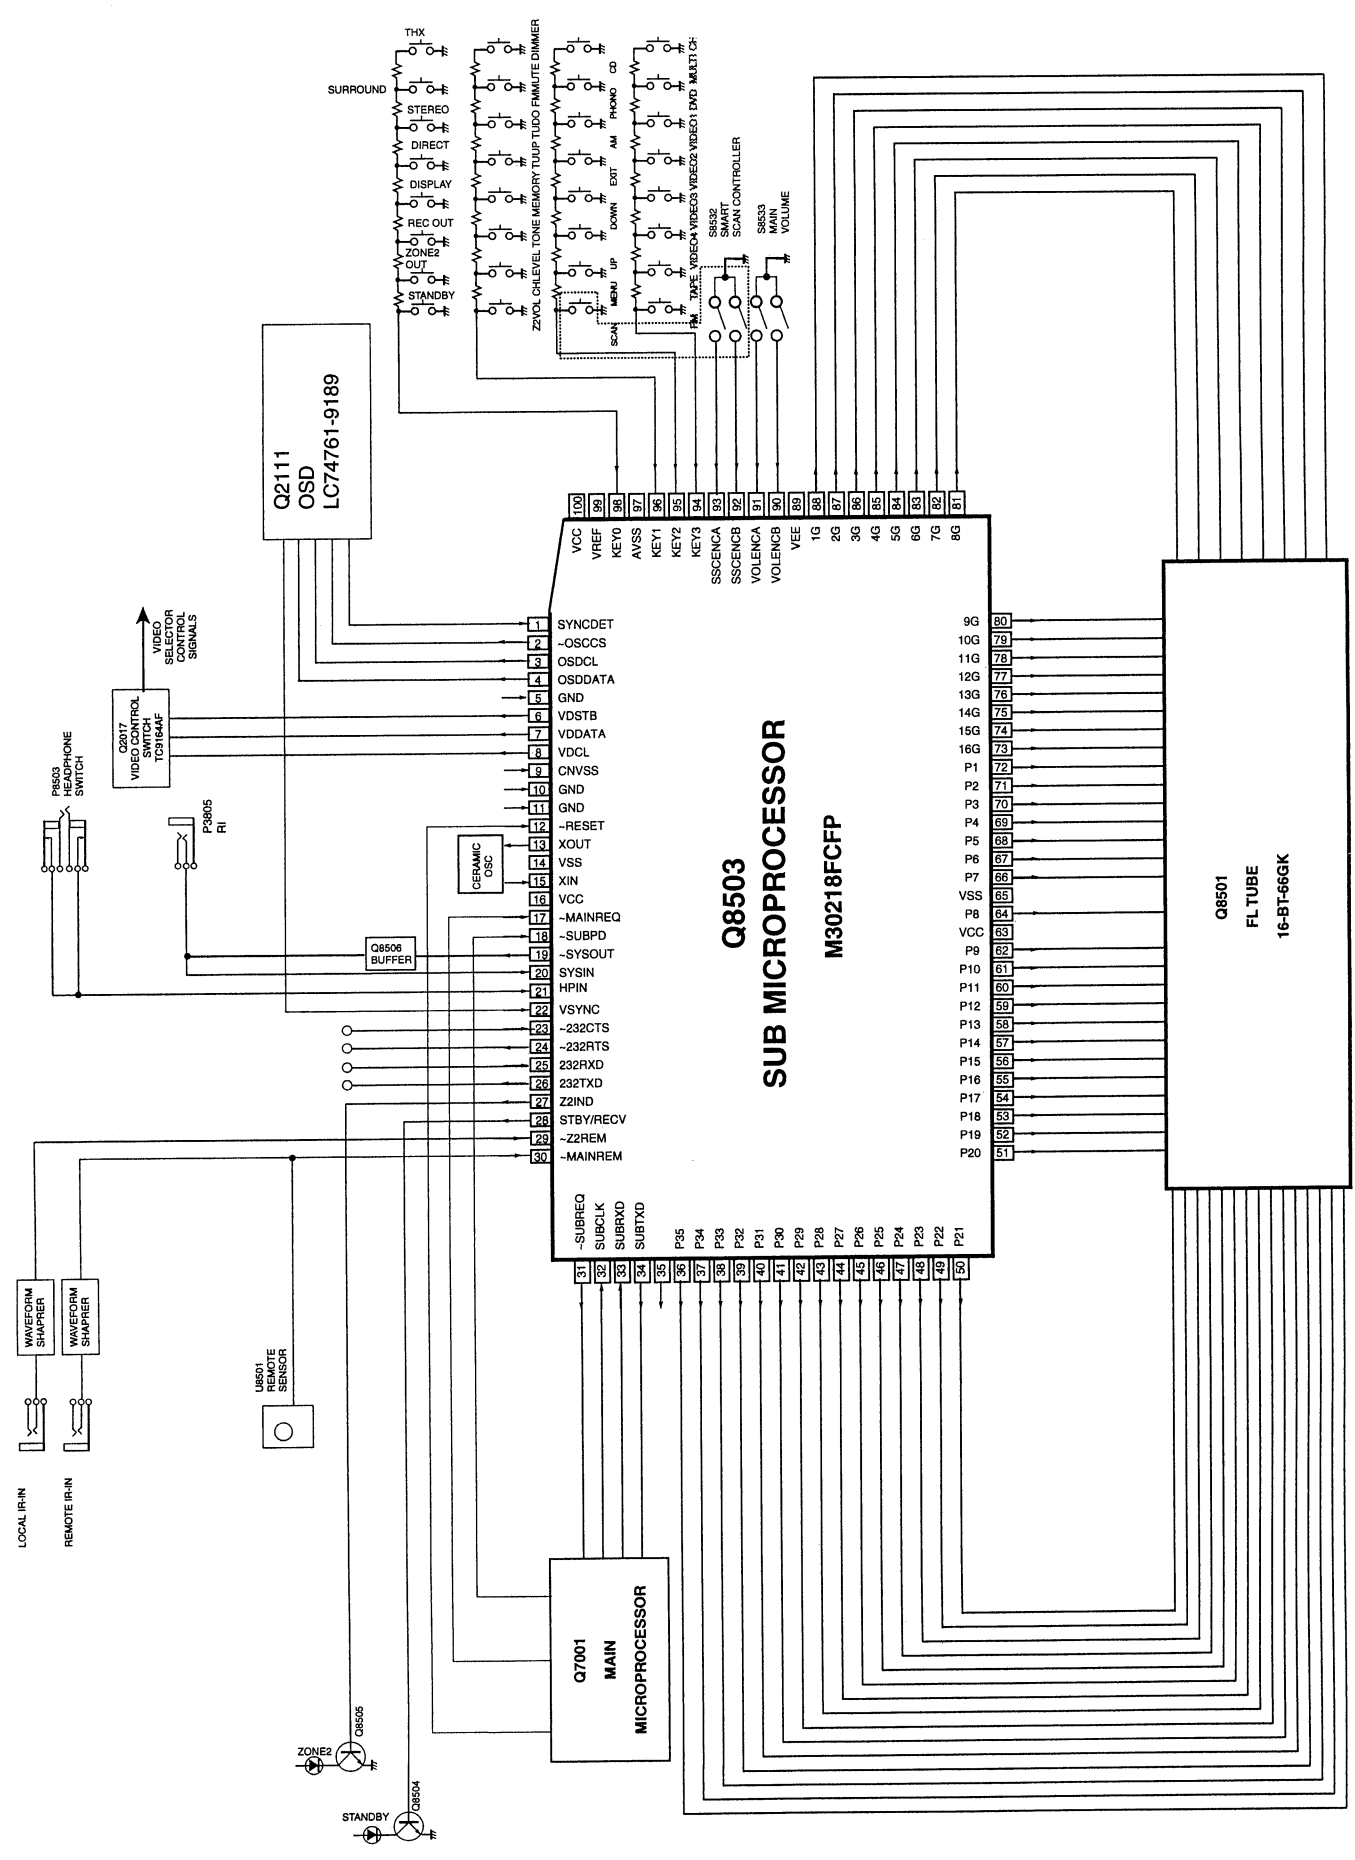


SUB MICROPROCESSOR-TERMINAL DESCRIPTION

No.	Function	I/O	Act	Descriptions	No.	Function	I/O	Act	Descriptions
1	SYNCDDET	I	H	Judge input terminal for external synchronizing of OSD. External synchronizing when high level.	31	~SUBREQ	O	L	Transfer request signal output terminal from sub microprocessor
2	~OSCCS	O	L	Chip select output pin of OSD IC	32	SUBCLK	I	CLK	Transfer clock input terminal between microprocessors.
3	OSDCL	O	CLK	Serial clock output terminal of OSD IC	33	SUBRXD	I	H	Transfer input terminal between microprocessors
4	OSDDATA	O	H	Serial data output terminal of OSD IC	34	SUBTXD	O	H	Transfer output terminal between microprocessors
5	GND	I		Not used. Connect to the ground terminal.	35		O	L	Not used.
6	VDSTB	O	H	Strobe output terminal of analog switch for video control.	36-62	P35-P9	O	H	Segment output terminals
7	VDDATA	O	H	Data output terminal of analog switch for video control	63	VCC			Power supply terminal. Connect to +5V.
8	VDCL	O	CLK	Clock output terminal of analog switch for video selector	64	P8	O	H	Segment output terminal
9	CNVSS	I		Input terminal to select the operation mode when the release of reset.	65	VSS			Power supply terminal. Connect to the ground terminal.
10	GND	I		Not used. Connect to the ground terminal.	66-72	P7-P1	O	H	Segment output terminals
11	GND	I		Not used. Connect to the ground terminal.	73-88	16G-1G	O	H	Grid output terminals
12	~RESET	I	L	Reset terminal of microprocessor	89	VEE			Power supply terminal for pull-down resistor.
13	XOUT	O		Output terminal of oscillator circuit for main clock. Connect the ceramic oscillator	90	VOLENCB	I	L	Rotary encoder input signal terminal B for main volume.
14	VSS			Ground terminal	91	VOLENC A	I	L	Rotary encoder input signal terminal A for main volume.
15	XIN	I		Input terminal of oscillator circuit for main clock. Connect the ceramic oscillator	92	SSCENCB	I	L	Rotary encoder signal input terminal B for SSC.
16	VCC			Power supply terminal (+5V)	93	SSCENCA	I	L	Rotary encoder signal input terminal A for SSC.
17	~MAINREQ	I	L	Transfer request signal input terminal from main microprocessor	94	KEY3	I	H	Operation key connection terminal
18	~SUBPD	I	L	Signal input terminal to announce the power stoppage from main microprocessor	95	KEY2	I	H	Operation key connection terminal
19	~SYSOUT	O	L	Output terminal for system code	96	KEY1	I	H	Operation key connection terminal
20	SYSIN	I	H	Input terminal for system code	97	AVSS			Power supply terminal for A/D converter
21	HPIN	I	H	Input terminal to detect the insertion of headphone jack.	98	KEY0	I	H	Operation key connection terminal
22	VSYNC	I	H	Vertical synchronizing signal input terminal. When there is the video signal, the negative vertical synchronizing signal is input to this terminal.	99	VREF			Reference voltage input terminal for A/D converter.
23	~232CTS	I	L	Judge input terminal for RS-232C data transfer	100	VCC			Power supply terminal for A/D converter. Connect to +5V.
24	~232RTS	O	L	RS-232C data transfer request terminal					
25	232FXD	I	H	RS-232C data input terminal					
26	232TXD	O	H	RS-232C data output terminal					
27	Z2IND	O	H	ZONE2 indicator control output terminal.					
28	STBY/RECV	O	H	STANDBY/RECEIVED indicator control output terminal					
29	~Z2REM	I	L	Remote control signal input terminal from ZONE 2 terminal.					
30	~MAINREM	I	L	Remote control input terminal.					

ADJUSTMENT AND CONFIRMATION


Idling current adjustment

Before Idling adjustment, turn the trimming resistors R5025, R5125, R5225, R5318, R5418 and R5518 to counter clockwise. Connect the DC voltmeter to sockets P5001, P5101, P5201, P5301, P5401 and P5501. After turn POWER to ON, adjust the trimming resistors R5025, R5125, R5225, R5318, R5418 and R5518 so that the reading of voltmeter becomes 8.0 mV. After adjustment, attach the top cover. Confirm the voltage of above points after five minutes. When less than 12 mV, readjust the above resistors so that the voltage becomes 12 mV. When 12 mV to 15 mV, you are not necessary to adjust. When more than 15 mV, readjust the above resistors so that the voltage becomes 15 mV. Note: No load and No signal

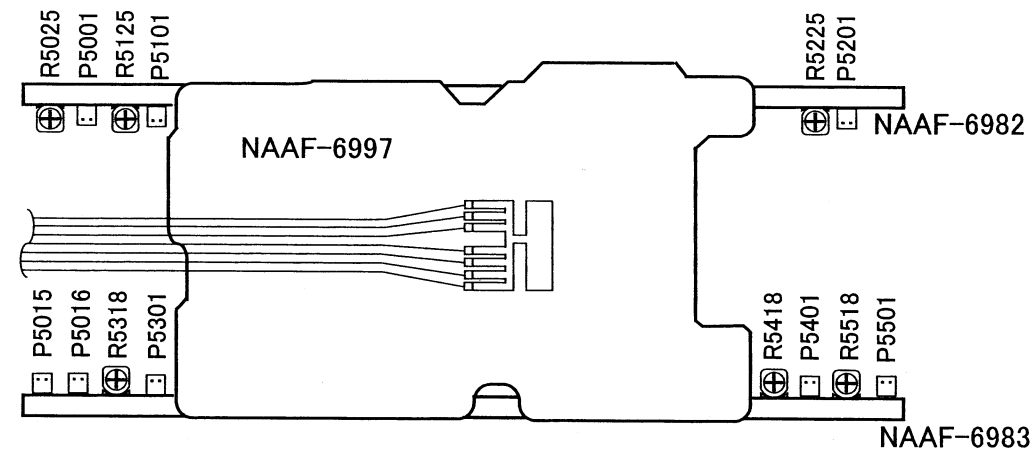

Confirmation of protection circuit

- Confirmation of speaker relay**
 Confirm that the speaker relay turns ON approximate 5 seconds after the power switch is turned ON. Confirm that the speaker relay turns OFF immediately after the power switch is turned OFF.
- Confirmation of DC detection circuit**
 Be short-circuited of the test terminal P5601 to prevent the protection circuit being fixed on with a short plug. Press and hold down CD button, then press REC OUT and ZONE 2 buttons at the same time. During "TEST-0" on the FL tube light on and off, press VIDEO 1 button to set the unit to TEST-1-00. Apply DC 1.5~3V to MULTI CHANNEL INPUT terminals with no load. Confirm that the speaker relay turns OFF. Apply DC -1.5~-3V to MULTI CHANNEL INPUT terminals with no load. Confirm that the speaker relay turns OFF. Note: Don't apply DC voltage more than 1 second.
- Confirmation of Current detection circuit**
 Be short-circuited of the test terminal P5601 to prevent the protection circuit being fixed on with a short plug. Press and hold down CD button, then press REC OUT and ZONE 2 buttons at the same time. During "TEST-0" on the FL tube light on and off, press VIDEO 1 button to set the unit to TEST-1-00. Connect Differentiator and apply the 200Hz square signal to the terminal of MULTI CHANNEL INPUT. Adjust the attenuator or Volume so that the output level becomes 35V p-p. Confirm that the speaker relay does not turn OFF when a 3.0 ohm load is connected. Confirm that the speaker relay turns OFF when a 1.5 ohm load is connected.

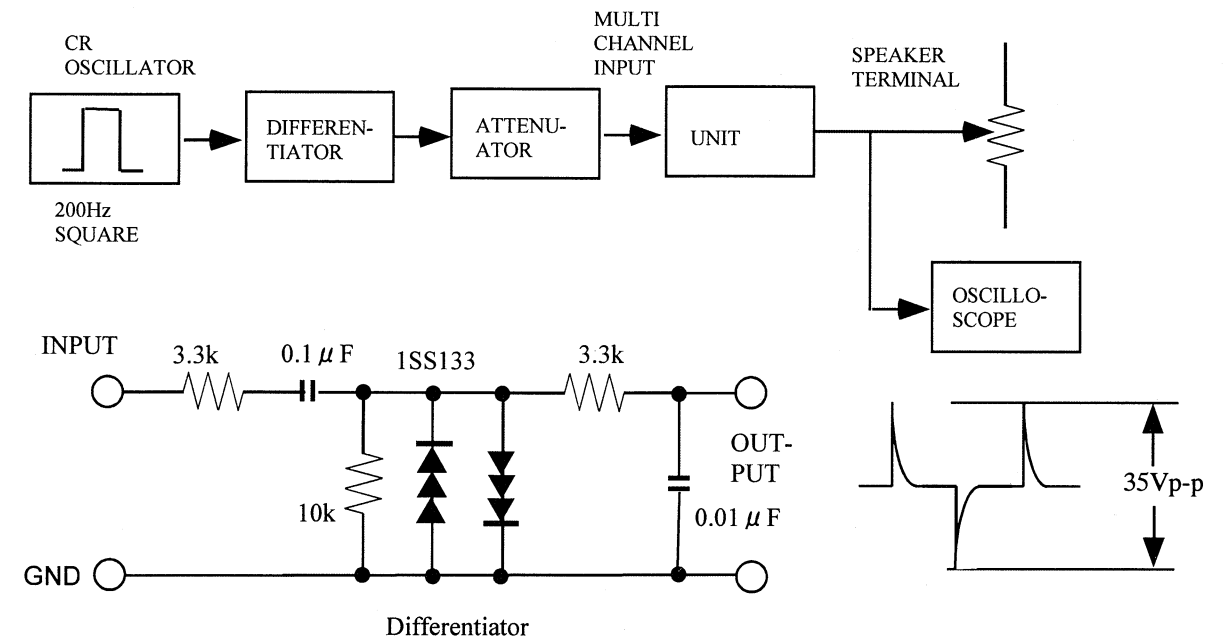

Confirmation of Fan



Set the unit to "TEST-1-00" and apply the signal 1kHz, -30dB (32 mV) to Multi channel inputs except Sub Woofer with no load. Confirm that the fan turns after few seconds. Connect the resistor 2.7kohms, 1W between terminal P5015 with no input. Confirm that the fan turns after few seconds.

Test Mode

- Turn POWER button on.
- Press and hold down CD button, then press REC OUT and ZONE 2 buttons at the same time.
- During "TEST-1" on the FL tube is displayed, press CD button to set the unit to the test mode of FL tube.
 Note: VIDEO 1 TEST-1 VIDEO 2 TEST-2
 VIDEO 3 TEST-3 VIDEO 4 TEST-4

Test mode of FL tube

Press ZONE 2 or REC OUT button to change the test mode of FL tube.

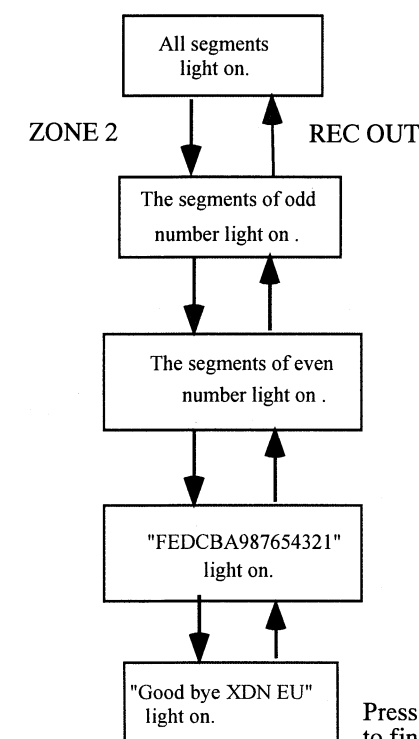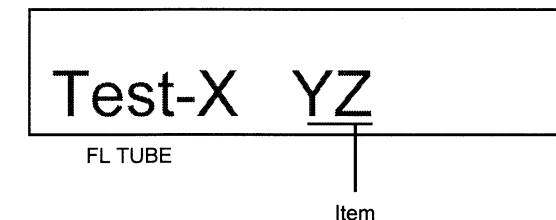


- XNO EU
 1 2 3 4
 1. 12V Trigger T: Use
 2. Video Mode N: NTSC P: PAL AUTO
 3. AM band step 9: 9 kHz step 0:10 kHz step
 4. Tuner band EU:Europe US: USA SA: Saudi JP: Japan

Press POWER button to finish the test mode of FL tube.

EXPLODED VIEW AND PARTS LIST

FRONT PANEL SECTION

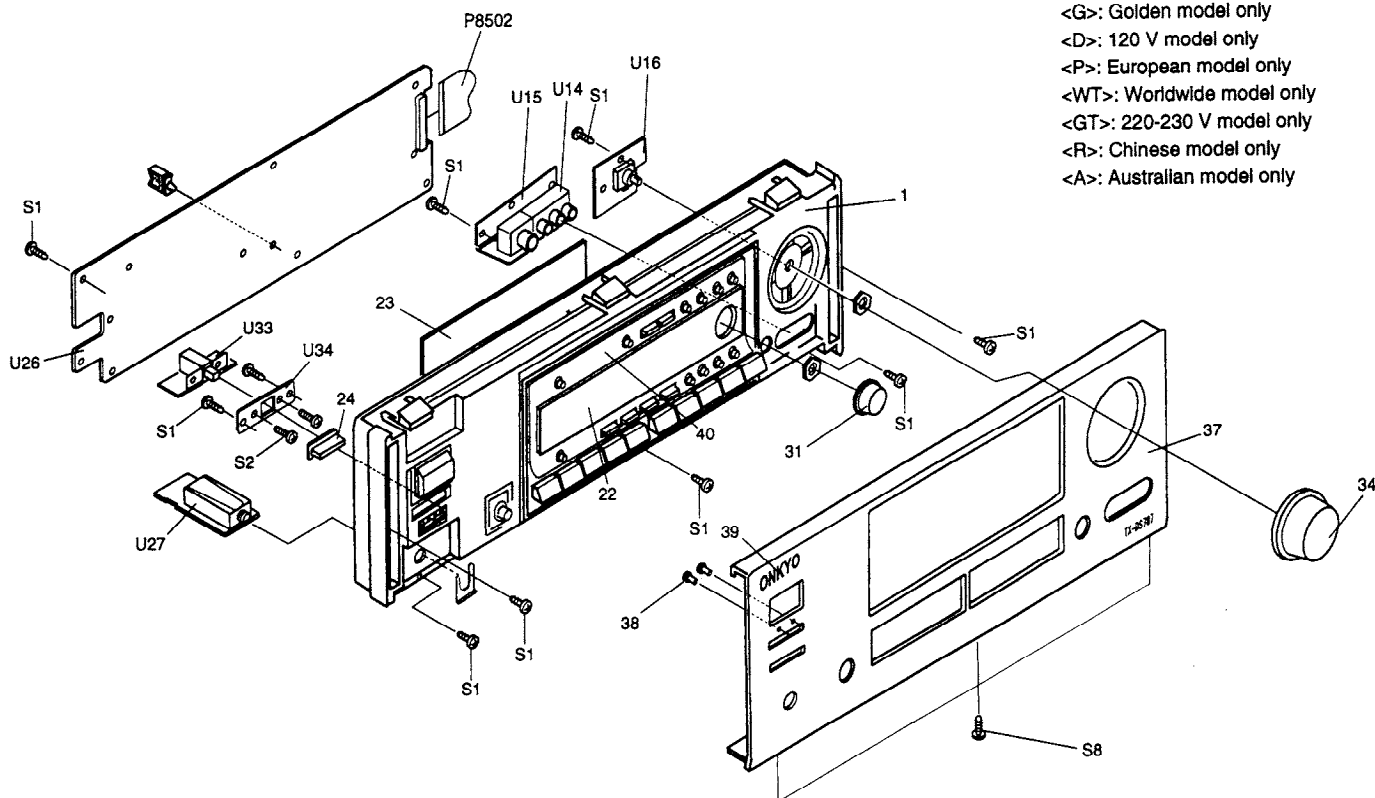

NOTE: : Black model only
 <S>: Silver model only
 <G>: Golden model only
 <D>: 120 V model only
 <P>: European model only
 <WT>: Worldwide model only
 <GT>: 220-230 V model only
 <R>: Chinese model only
 <A>: Australian model only


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	27111183	Front bracket 	U14	1A884592-1A	NAETC-6992-1A, Front terminal PC board ass'y <D>	
	27111184	Front bracket <S>		1A884592-1B	NAETC-6992-1B, Front terminal PC board ass'y <P>	
	27111185	Front bracket <G>		1A884592-1C	NAETC-6992-1C, Front terminal PC board ass'y <WT/GT/R/A>	
22	28191903A	Clear plate	U15	25136993	NCETC-6993, Holder PC board	
23	28133385	Back plate 		U16	1A884594-1A	NAETC-6994-1A, Volume PC board ass'y <D>
	28133386	Back plate <G/S>	1A884594-1B		NAETC-6994-1B, Volume PC board ass'y <P>	
24	28325497A	Knob, power 	1A884594-1C		NAETC-6994-1C, Volume PC board ass'y <WT/GT/R/A>	
	28325499A	Knob, power <G>	U26	1A884502-1A	NADIS-7002-1A, Display circuit PC board ass'y <D>	
	28325547A	Knob, power <S>		1A884502-1B	NADIS-7002-1B, Display circuit PC board ass'y <P>	
31	28325665	Knob SS 		1A884502-1C	NADIS-7002-1C, Display circuit PC board ass'y <GT/A>	
	28325666	Knob SS <G>	1A884502-1D	NADIS-7002-1D, Display circuit PC board ass'y <WT/R>		
	28325786	Knob SS <S>		U27	1A884503-1A	NAETC-7003-1A, Headphone terminal PC board ass'y <D>
34	28325651	Knob, volume 			1A884503-1B	NAETC-7003-1B, Headphone terminal PC board ass'y <P>
	28325652	Knob, volume <S>	1A884503-1C			NAETC-7003-1C, Headphone terminal PC board ass'y <GT/A>
	28325653	Knob, volume <G>		1A884503-1D		NAETC-7003-1D, Headphone terminal PC board ass'y <WT/R>
37	27212245	Front panel 			U33	1A884511-1A
	27212246	Front panel <S>	1A884511-1B			NASW-7011-1B, Power switch PC board ass'y <P>
	27212247	Front panel <G>	1A884511-1D	NASW-7011-1D, Power switch PC board ass'y <WT>		
38	28198778	Facet	1A884511-1E	NASW-7011-1E, Power switch PC board ass'y <R>		
39	28135244	Badge 	1A884511-1F	NASW-7011-1F, Power switch PC board ass'y <GT>		
	28135245	Badge <G/S>	1A884511-1I	NASW-7011-1I, Power switch PC board ass'y <A>		
40	27215340	Decorative frame <D/WT/R/A>				
	27215341A	Decorative frame <P>				
	27215342A	Decorative frame <S>				
	27215343	Decorative frame <G>				
P8502	2047351512	NCFC7-351512, Flexible flat cable				
S1	838130088	3TTB+8B, Self-tapping screw				
S2	82143010	3P+10FN(BC), Pan head screw				
S8	838130088	3TTB+8B, Self-tapping screw				


CAUTION: Replacement for transistor of mark *, if necessary must be made from the same data group (HFE) as the original type.

PARTS LIST


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
2	28141439	Cushion	T9001	2301483	△ NPT-1404D,Power transformer <D>
3	27100385	Chassis		2301484	△ NPT-1404P,Power transformer <P/A>
4	27130840	Bracket PT		2301486	△ NPT-1404DG,Power transformer <WT/GT/R>
5	27130841	Bracket PC	U1	1A884582-1A	NAAF-6982-1A,Power amplifier circuit A PC board ass'y <D>
6	27190009	KGLS-4S,Holder		1A884582-1B	NAAF-6982-1B,Power amplifier circuit A PC board ass'y <PWT/GT/R/A>
7	27190813	KGPS-10RF,Holder	U2	1A884583-1A	NAAF-6983-1A,Power amplifier circuit B PC board ass'y <D>
8	27190266	KGLS-12RF,Holder		1A884583-1B	NAAF-6983-1B,Power amplifier circuit B PC board ass'y <PWT/GT/R/A>
9	27130857	Bracket F		1A884584-1A	NAETC-6984-1A,Speaker terminal A PC board ass'y <D>
10	27300750	△ Cord,bushing		1A884584-1B	NAETC-6984-1B,Speaker terminal A PC board ass'y <PWT/GT/R/A>
11	27301396	HL-28-0,Clamp	U3	1A884585-1A	NAETC-6985-1A,Speaker terminal B PC board ass'y <D>
12	27160473A	Heatsink		1A884585-1B	NAETC-6985-1B,Speaker terminal B PC board ass'y <PWT/GT/R/A>
13	27141764	Retainer PC	U4	1A884586-1A	NAETC-6986-1A,Thermal detector PC board ass'y <D>
14	27130842	Bracket,display B		1A884586-1B	NAETC-6986-1B,Thermal detector PC board ass'y <PWT/GT/R/A>
15	27130843	Bracket,display A	U5	1A884589-1A	NADG-6989-1A,DSP circuit PC board ass'y <D>
16	27150458	Shield plate F		1A884589-1C	NADG-6989-1B,DSP circuit PC board ass'y <P>
17	880048	Plastic rivet		1A884590-1A	NADG-6989-1C,DSP circuit PC board ass'y <WT/GT/R/A>
18	29110083	Tape, cloth	U12	1A884590-1A	NAAF-6990-1A,Preamplifier PC board ass'y <D>
20	27150457	Shield plate E		1A884590-1B	NAAF-6990-1B,Preamplifier PC board ass'y <P>
21	27150459	Shield plate U		1A884590-1C	NAAF-6990-1C,Preamplifier PC board ass'y <WT/GT/R/A>
25	27130844	Bracket U	U21	1A884595-1A	NAVD-6995-1A,Video terminal PC board ass'y <D>
26	28141433	Cushion		1A884595-1B	NAVD-6995-1B,Video terminal PC board ass'y <PWT/GT/R/A>
27	28184798B	Top cover 	U22	1A884596-1A	NAVD-6996-1A,S video terminal PC board ass'y <D>
	28184797B	Top cover <G>		1A884596-1B	NAVD-6996-1B,S video terminal PC board ass'y <PWT/GT/R/A>
	28184798B	Top cover <S>	U23	1A884597-1A	NAAF-6997-1A,Power supply circuit PC board ass'y <D>
29	27175319A	Leg		1A884597-1B	NAAF-6997-1B,Power supply circuit PC board ass'y <PWT/GT/R/A>
30	28141332	Cushion	U24	1A884598-1A	NAVD-6998-1A,Component video terminal PC board ass'y <D>
35	27122746	Rear panel <D>		1A884598-1B	NAVD-6998-1B,Component video terminal PC board ass'y <PWT/GT/R/A>
	27122747	Rear panel <P>	U25	1A884501-1A	NAETC-7001-1A,Bridge diode PC board ass'y <D>
	27122749	Rear panel <WT>		1A884501-1B	NAETC-7001-1B,Bridge diode PC board ass'y <PWT/GT/R/A>
	27122750A	Rear panel <R>	U28	1A884504-1A	NAAF-7004-1A,Video input/output terminal PC board ass'y <D>
	27122751	Rear panel <GT>		1A884504-1B	NAAF-7004-1B,Video input/output terminal PC board ass'y <P>
	27122752	Rear panel <A>		1A884504-1C	NAAF-7004-1C,Video input/output terminal PC board ass'y <GT/A>
41	260220	WS-3NS,Wire clamp		1A884504-1D	NAAF-7004-1D,Video input/output terminal PC board ass'y <WT/R>
42	27301394	HL-18-0,Clamp	U29	1A884505-1A	NAETC-7005-1A,Digital and multi-channel terminal PC board ass'y <D>
43	260208	Wire tie		1A884505-1B	NAETC-7005-1B,Digital and multi-channel terminal PC board ass'y <P>
44	223025	AC262,Isolated sheet		1A884505-1C	NAETC-7005-1C,Digital and multi-channel terminal PC board ass'y <GT/A>
45	24502311	D08A-24TG(EX),Fan		1A884505-1D	NAETC-7005-1D,Digital and multi-channel terminal PC board ass'y <WT/R>
46	880048	P-3055B-8L,Plastic rivet <P/A>	U30	1A884506-1A	NAETC-7006-1A,IR terminal PC board ass'y <D>
49	29110153	Tape, copper		1A884506-1B	NAETC-7006-1B,IR terminal PC board ass'y <P>
51	27191130	Holder, outlet <R>		1A884506-1C	NAETC-7006-1C,IR terminal PC board ass'y <GT/A>
53	29362743A	Label		1A884506-1D	NAETC-7006-1D,IR terminal PC board ass'y <WT/R>
S1	838130088	3TTB+8B,Self-tapping screw	U31	1A884508-1A	NAAR-7008-1A,Microprocessor circuit PC board ass'y <D>
S3	830440089	4TTC+8C(BC),Self-tapping screw		1A884508-1B	NAAR-7008-1B,Microprocessor circuit PC board ass'y <P>
S4	831430088	3TTW+8B(BC),Self-tapping screw		1A884508-1D	NAAR-7008-1D,Microprocessor circuit PC board ass'y <WT>
S5	801433	3SMS8W.SW+14B(BC),Special screw		1A884508-1E	NAAR-7008-1E,Microprocessor circuit PC board ass'y <R>
S6	838430068	3TTB+6B(BC),Self-tapping screw		1A884508-1F	NAAR-7008-1F,Microprocessor circuit PC board ass'y <GT>
S7	838430088	3TTB+8B(BC),Self-tapping screw 	U32	1A884508-1I	NAAR-7008-1I,Microprocessor circuit PC board ass'y <A>
S7	838930088	3TTB+8B(UN),Self-tapping screw <G/S>		1A884509-1A	NAPS-7009-1A,Primary circuit PC board ass'y <R>
S8	838430088	3TTB+8B(BC),Self-tapping screw		1A884509-1B	NAPS-7009-1B,Primary circuit PC board ass'y <P>
S9	838430107	3TTB+10S(BC),Self-tapping screw		1A884509-1D	NAPS-7009-1D,Primary circuit PC board ass'y <WT>
S10	838450108	5TTB+10B(BC),Self-tapping screw		1A884509-1E	NAPS-7009-1E,Primary circuit PC board ass'y <R>
S11	838930088	3TTB+8B(UN),Self-tapping screw		1A884509-1F	NAPS-7009-1F,Primary circuit PC board ass'y <GT>
S12	87643010	W3*10F(BC),Flat washer	U35	1A884513-1A	NAETC-7013-1A,Secondary circuit PC board ass'y <D>
F9001	252196	△ 12A-UL/T-314,Fuse <D/WT/R>		1A884513-1B	NAETC-7013-1B,Secondary circuit PC board ass'y <P>
F9002	252244 or 252078	△ 5A-SE-TL250V or △ 5A-SE-EAK, Fuse <PWT/GT/R/A>	U36	1A884513-1D	NAETC-7013-1D,Secondary circuit PC board ass'y <WT>
F9003	252241 or 252075	△ 2.5A-SE-TL250V or △ 2.5A-SE-EAK,Fuse <P/A>		1A884513-1E	NAETC-7013-1E,Secondary circuit PC board ass'y <R>
F9201,F9202	252160 or 252241 or 252075	△ 2.5A-UL/T-237,Fuse <D> △ 2.5A-SE-TL250V or △ 2.5A-SE-EAK,Fuse <PWT/GT/R/A>		1A884513-1F	NAETC-7013-1F,Secondary circuit PC board ass'y <GT>
P8501	2047152012	△ NCF7-152012,Flexible flat cable		1A884513-1I	NAETC-7013-1I,Secondary circuit PC board ass'y <A>
P9001	253197HIT	△ AS-SAA, Power supply cord <A>		240134 or 240138A	ENG06501Q,Tuner unit <D>
	253233KAW	△ AS-CEE-2,Power supply cord <PWT/GT>		240135 or 240139A	ENG07501Q,Tuner unit <PWT/GT/R/A>
	253286VOL,	△ AS-CCEE,			
	253267KAW or 253285HIT	△ AS-CCEE or △ AS-CCEE,Power supply cord <R>			
	253279HIT or 253280VOL	△ AS-UC-2#18 or △ AS-UC-2#18, Power supply cord <D>			
Q5010,Q5110	2212654 or Q5210 2212653	* 2SC3421-Y or * 2SC3421-O,Transistor			
Q5016,Q5116	2202822 or Q5216, 2202823	* 2SC5200-R or * 2SC5200-O,Transistor			
Q5017,Q5117	2202812 or Q5217 2202813	* 2SA1943-R or * 2SA1943-O,Transistor			
Q5307,Q5407	2212654 or Q5507 2212653	* 2SC3421-Y or * 2SC3421-O,Transistor			
Q5311,Q5411	2202822 or Q5511 2202823	* 2SC5200-R or * 2SC5200-O,Transistor			
Q5312,Q5412	2202812 or Q5512 2202813	* 2SA1943-R or * 2SA1943-O,Transistor			

CHASSIS SECTION

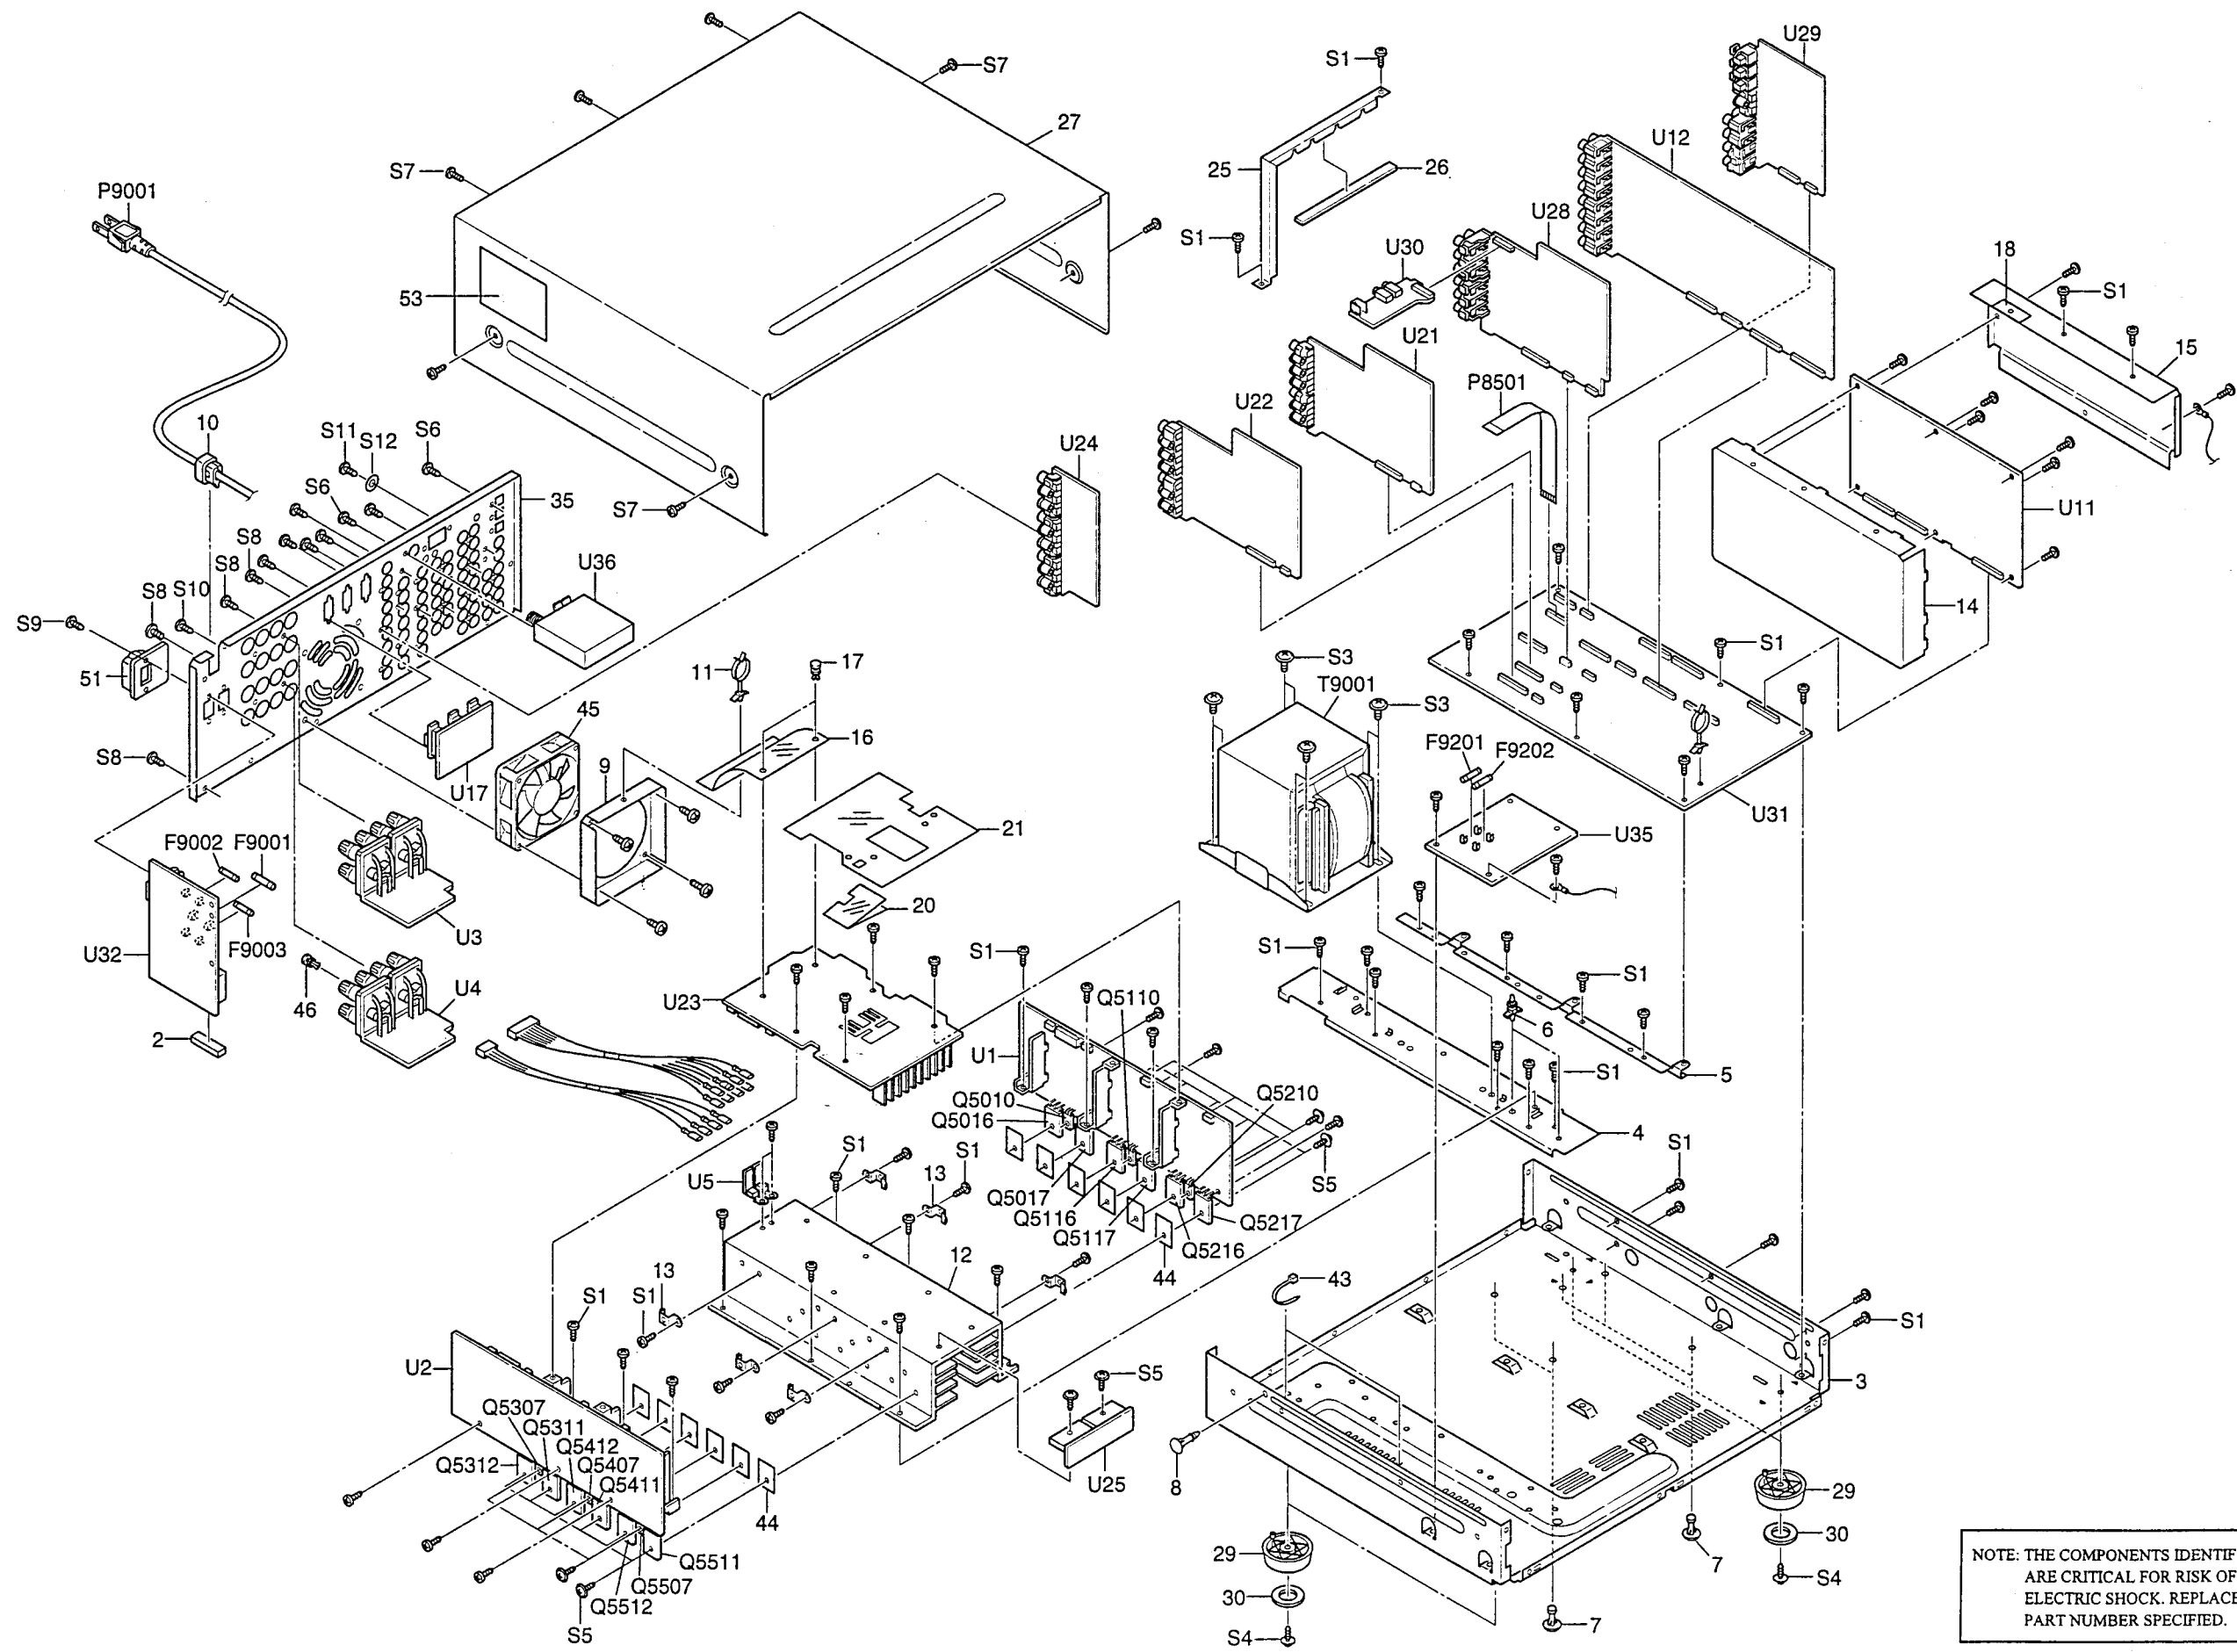


NOTE: THE COMPONENTS IDENTIFIED BY MARK  ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.


WIRING VIEW

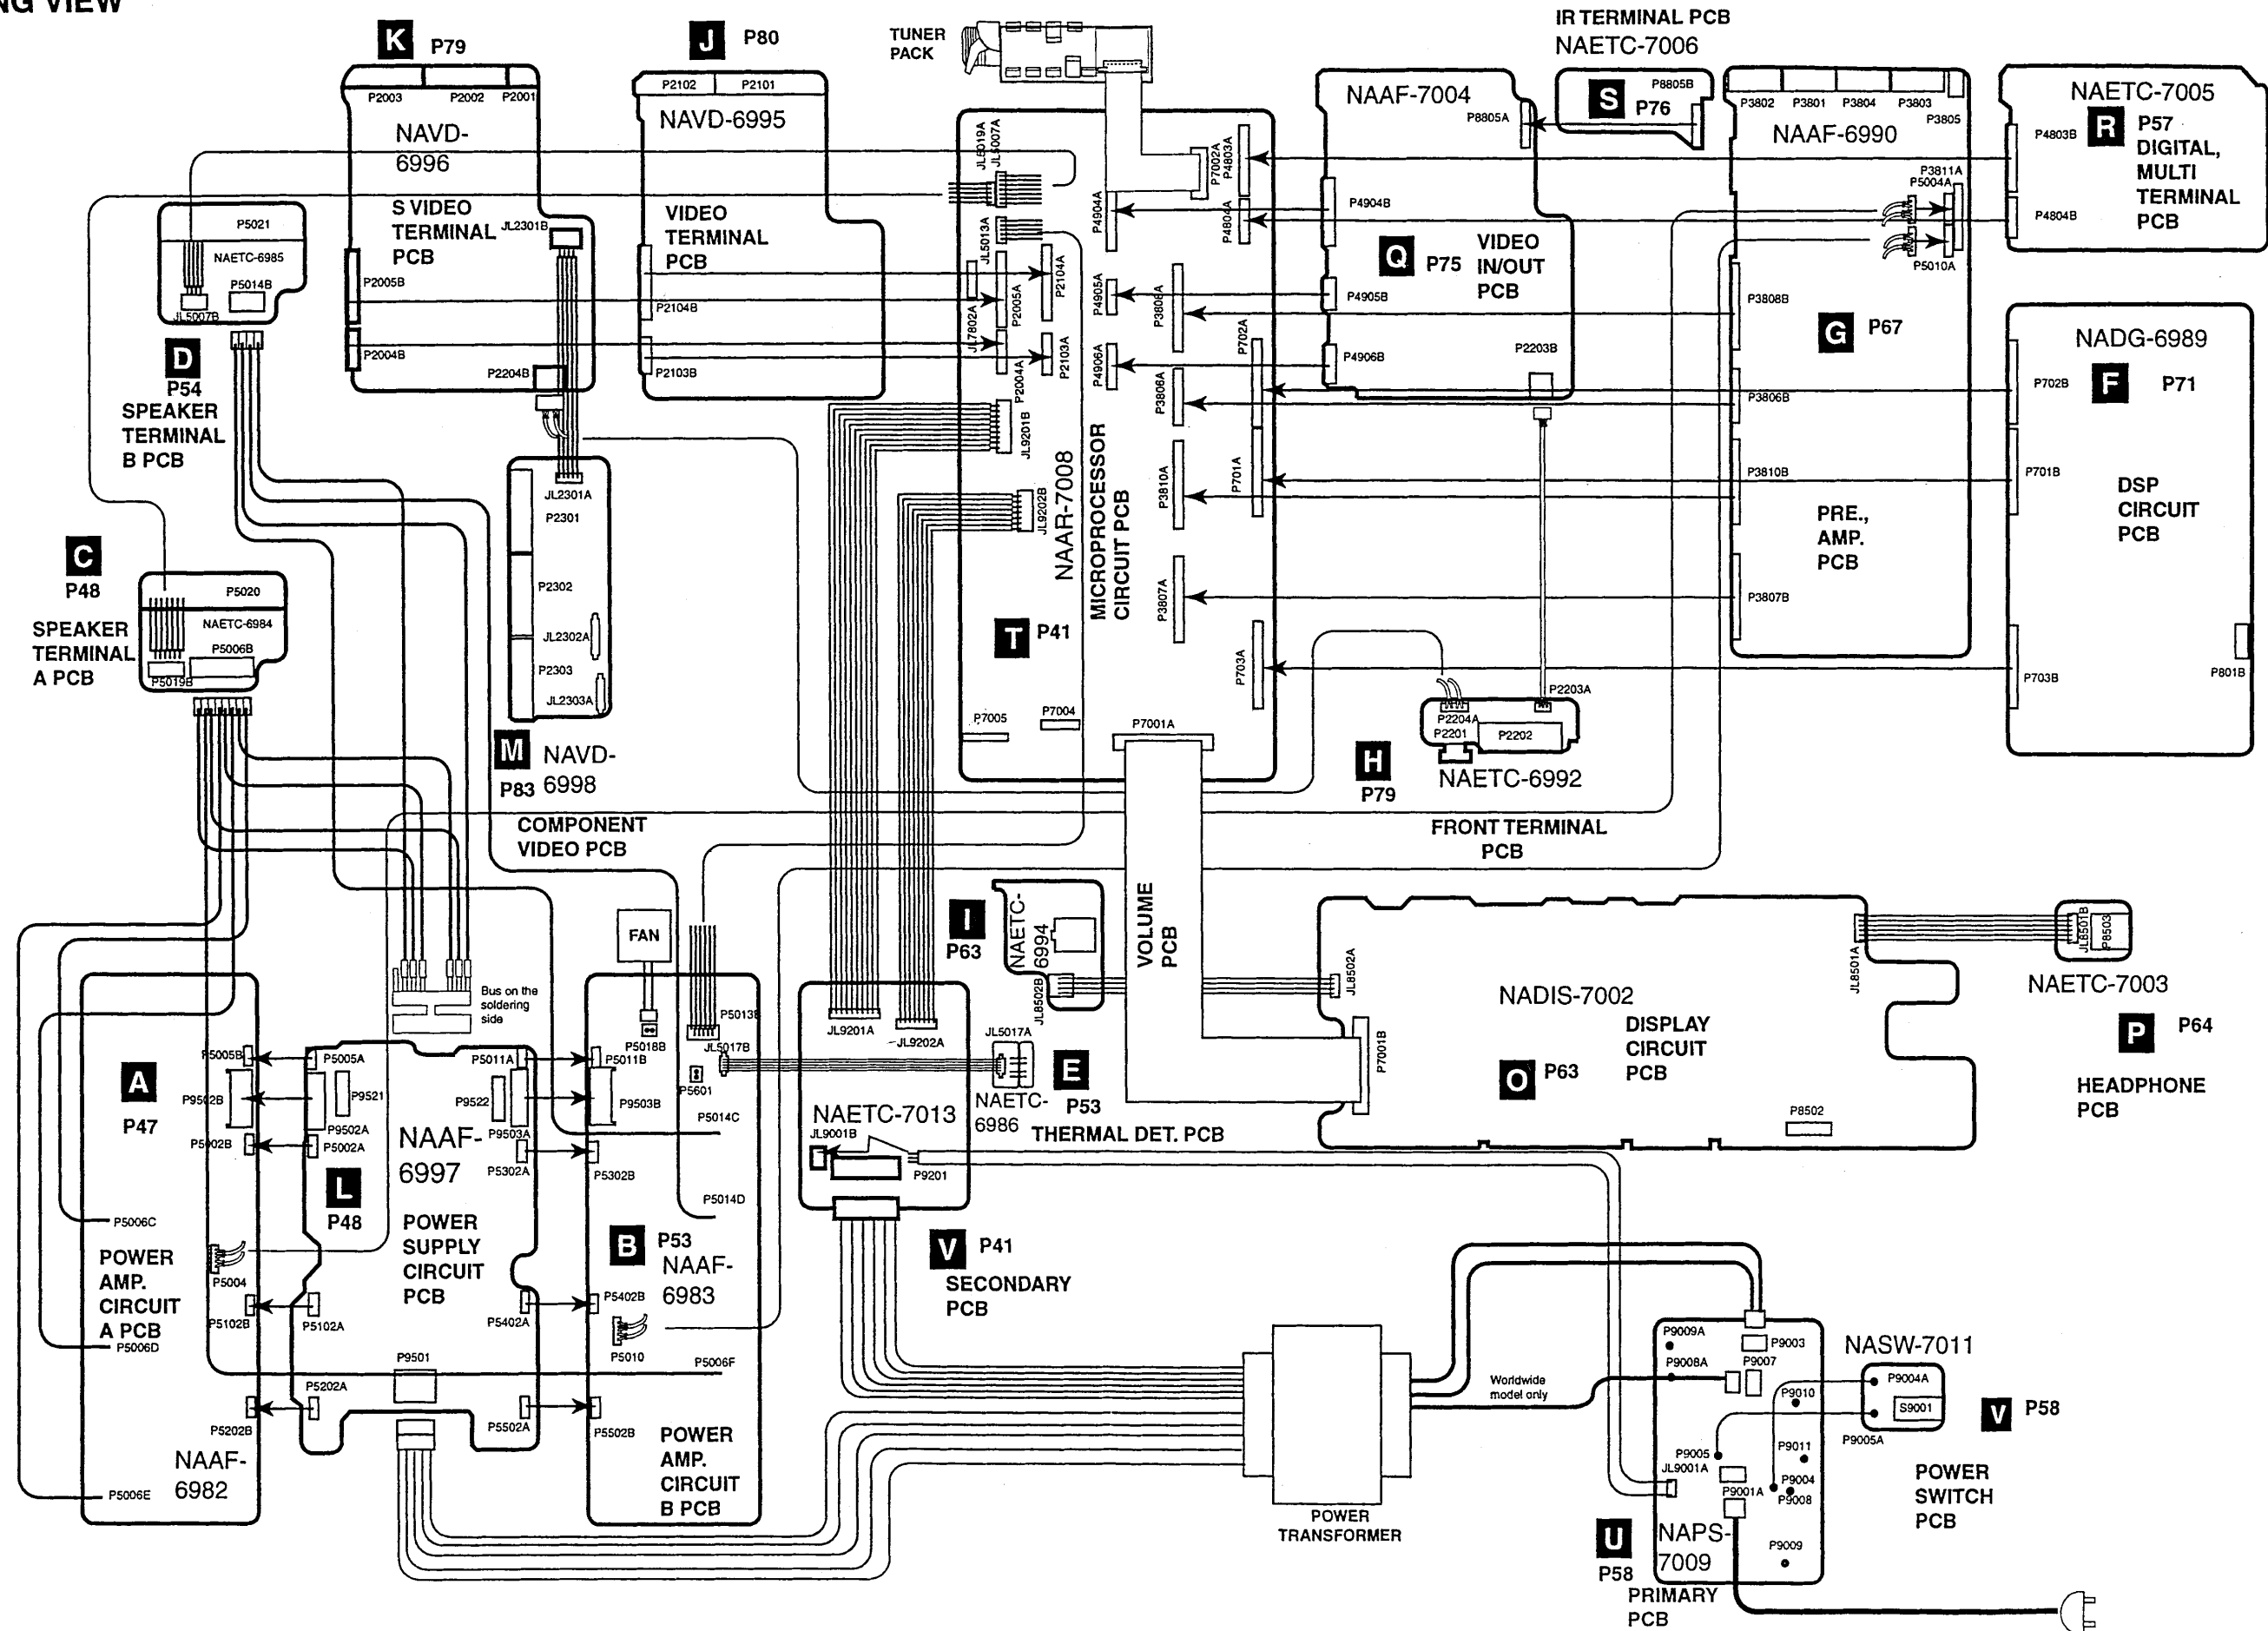

TERMINAL CONNECTION VIEW

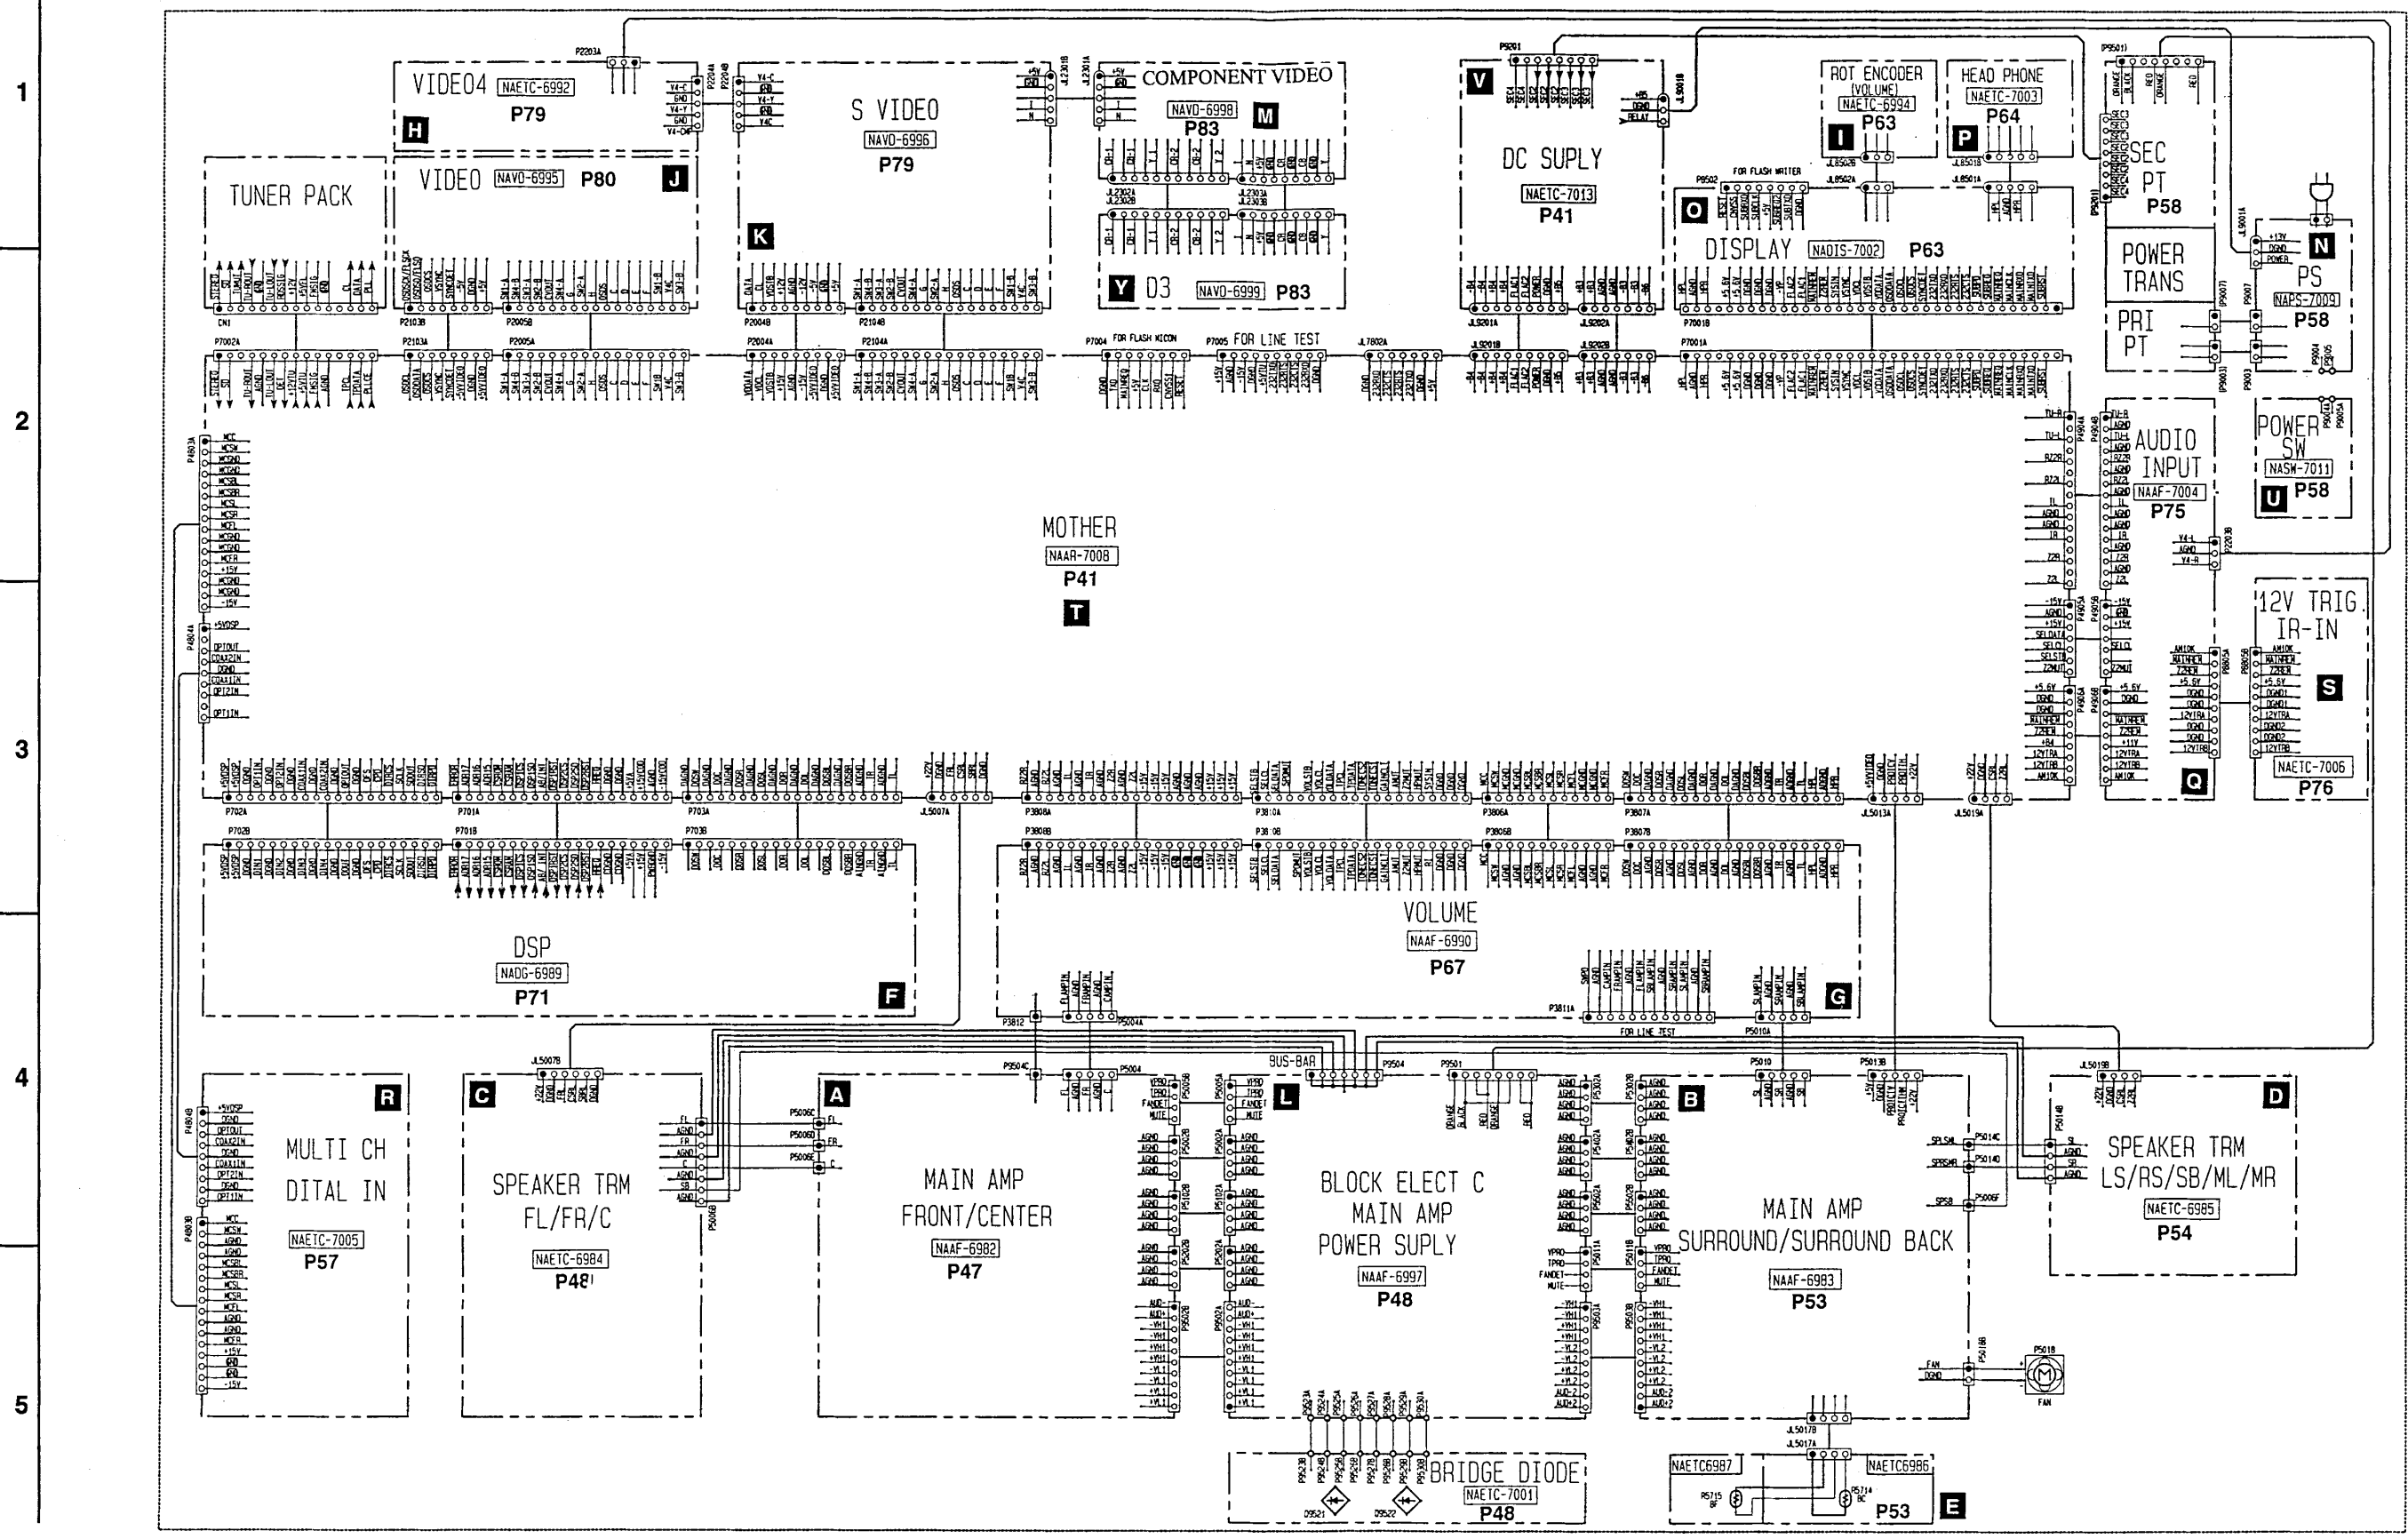


BLOCK DIAGRAM

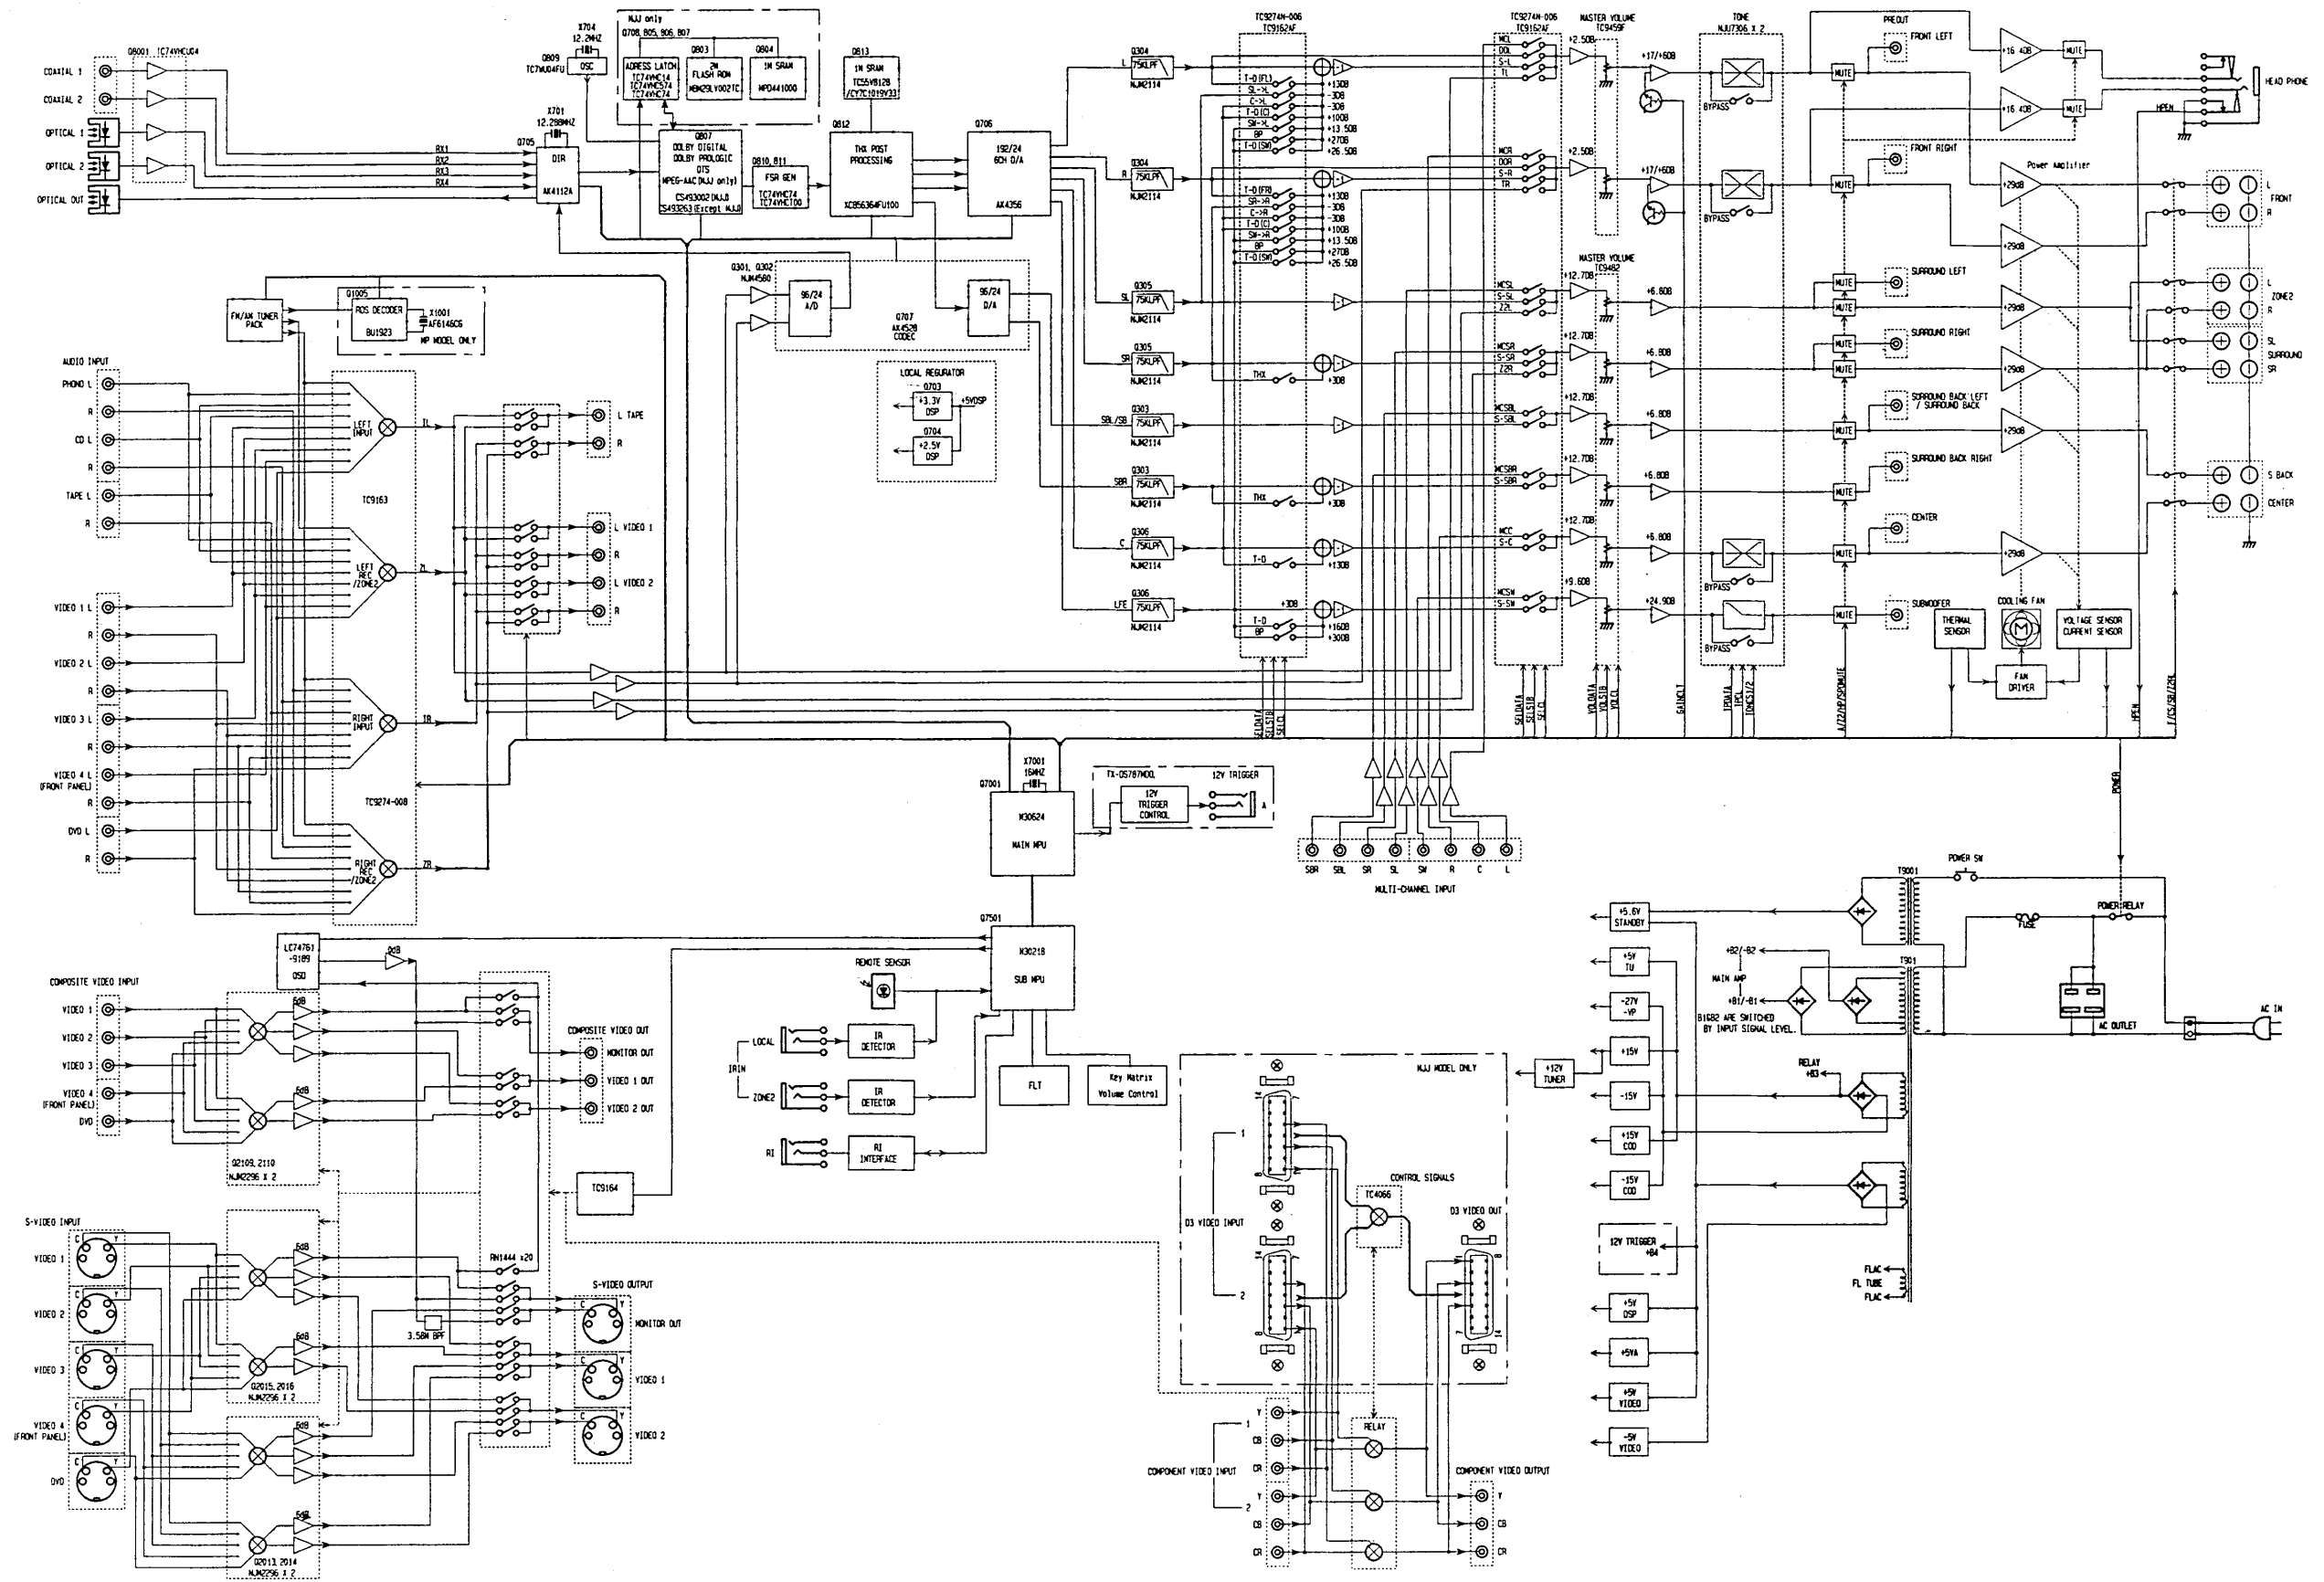

COMPONENT SIDE MICROPROCESSOR CIRCUIT PC BOARD

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors			Sockets	
C9208	354761029	1000 μ F,35V,Elect.	JL9001B	25050267	NSCT-3P95
C9211	354781019	100 μ F,50V,Elect.	JL9201A	25051113	NSCT-9P900
C9212	354771019	100 μ F,63V,Elect.	JL9202A	25051111	NSCT-7P898
	Resistors			Plug	
R9201,R9203	452530224	2.2 Ω \pm 5%,1/2W,Metal	P9201	25055171	NPLG-8P155
R9202	452532294	0.22 Ω \pm 5%,1/2W,Metal			
R9204	442625604	56 Ω \pm 5%,1W,Metal oxide			
	Labels				
F9201A,F9202A	29361747	T2.5AL250V <P/GT/WT/R/A>			
	Fuses				
F9201,F9202	252160	Δ 2.5A-1IL/T-237 <D>			
	252241 or	Δ 2.5A-SE-TL250V or			
	252075	Δ 2.5A-SE-EAK <P/A/R/WT/GT>			
	Fuse holders				
F9211-F9214	25052133	Δ NSCT-1P2031			

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

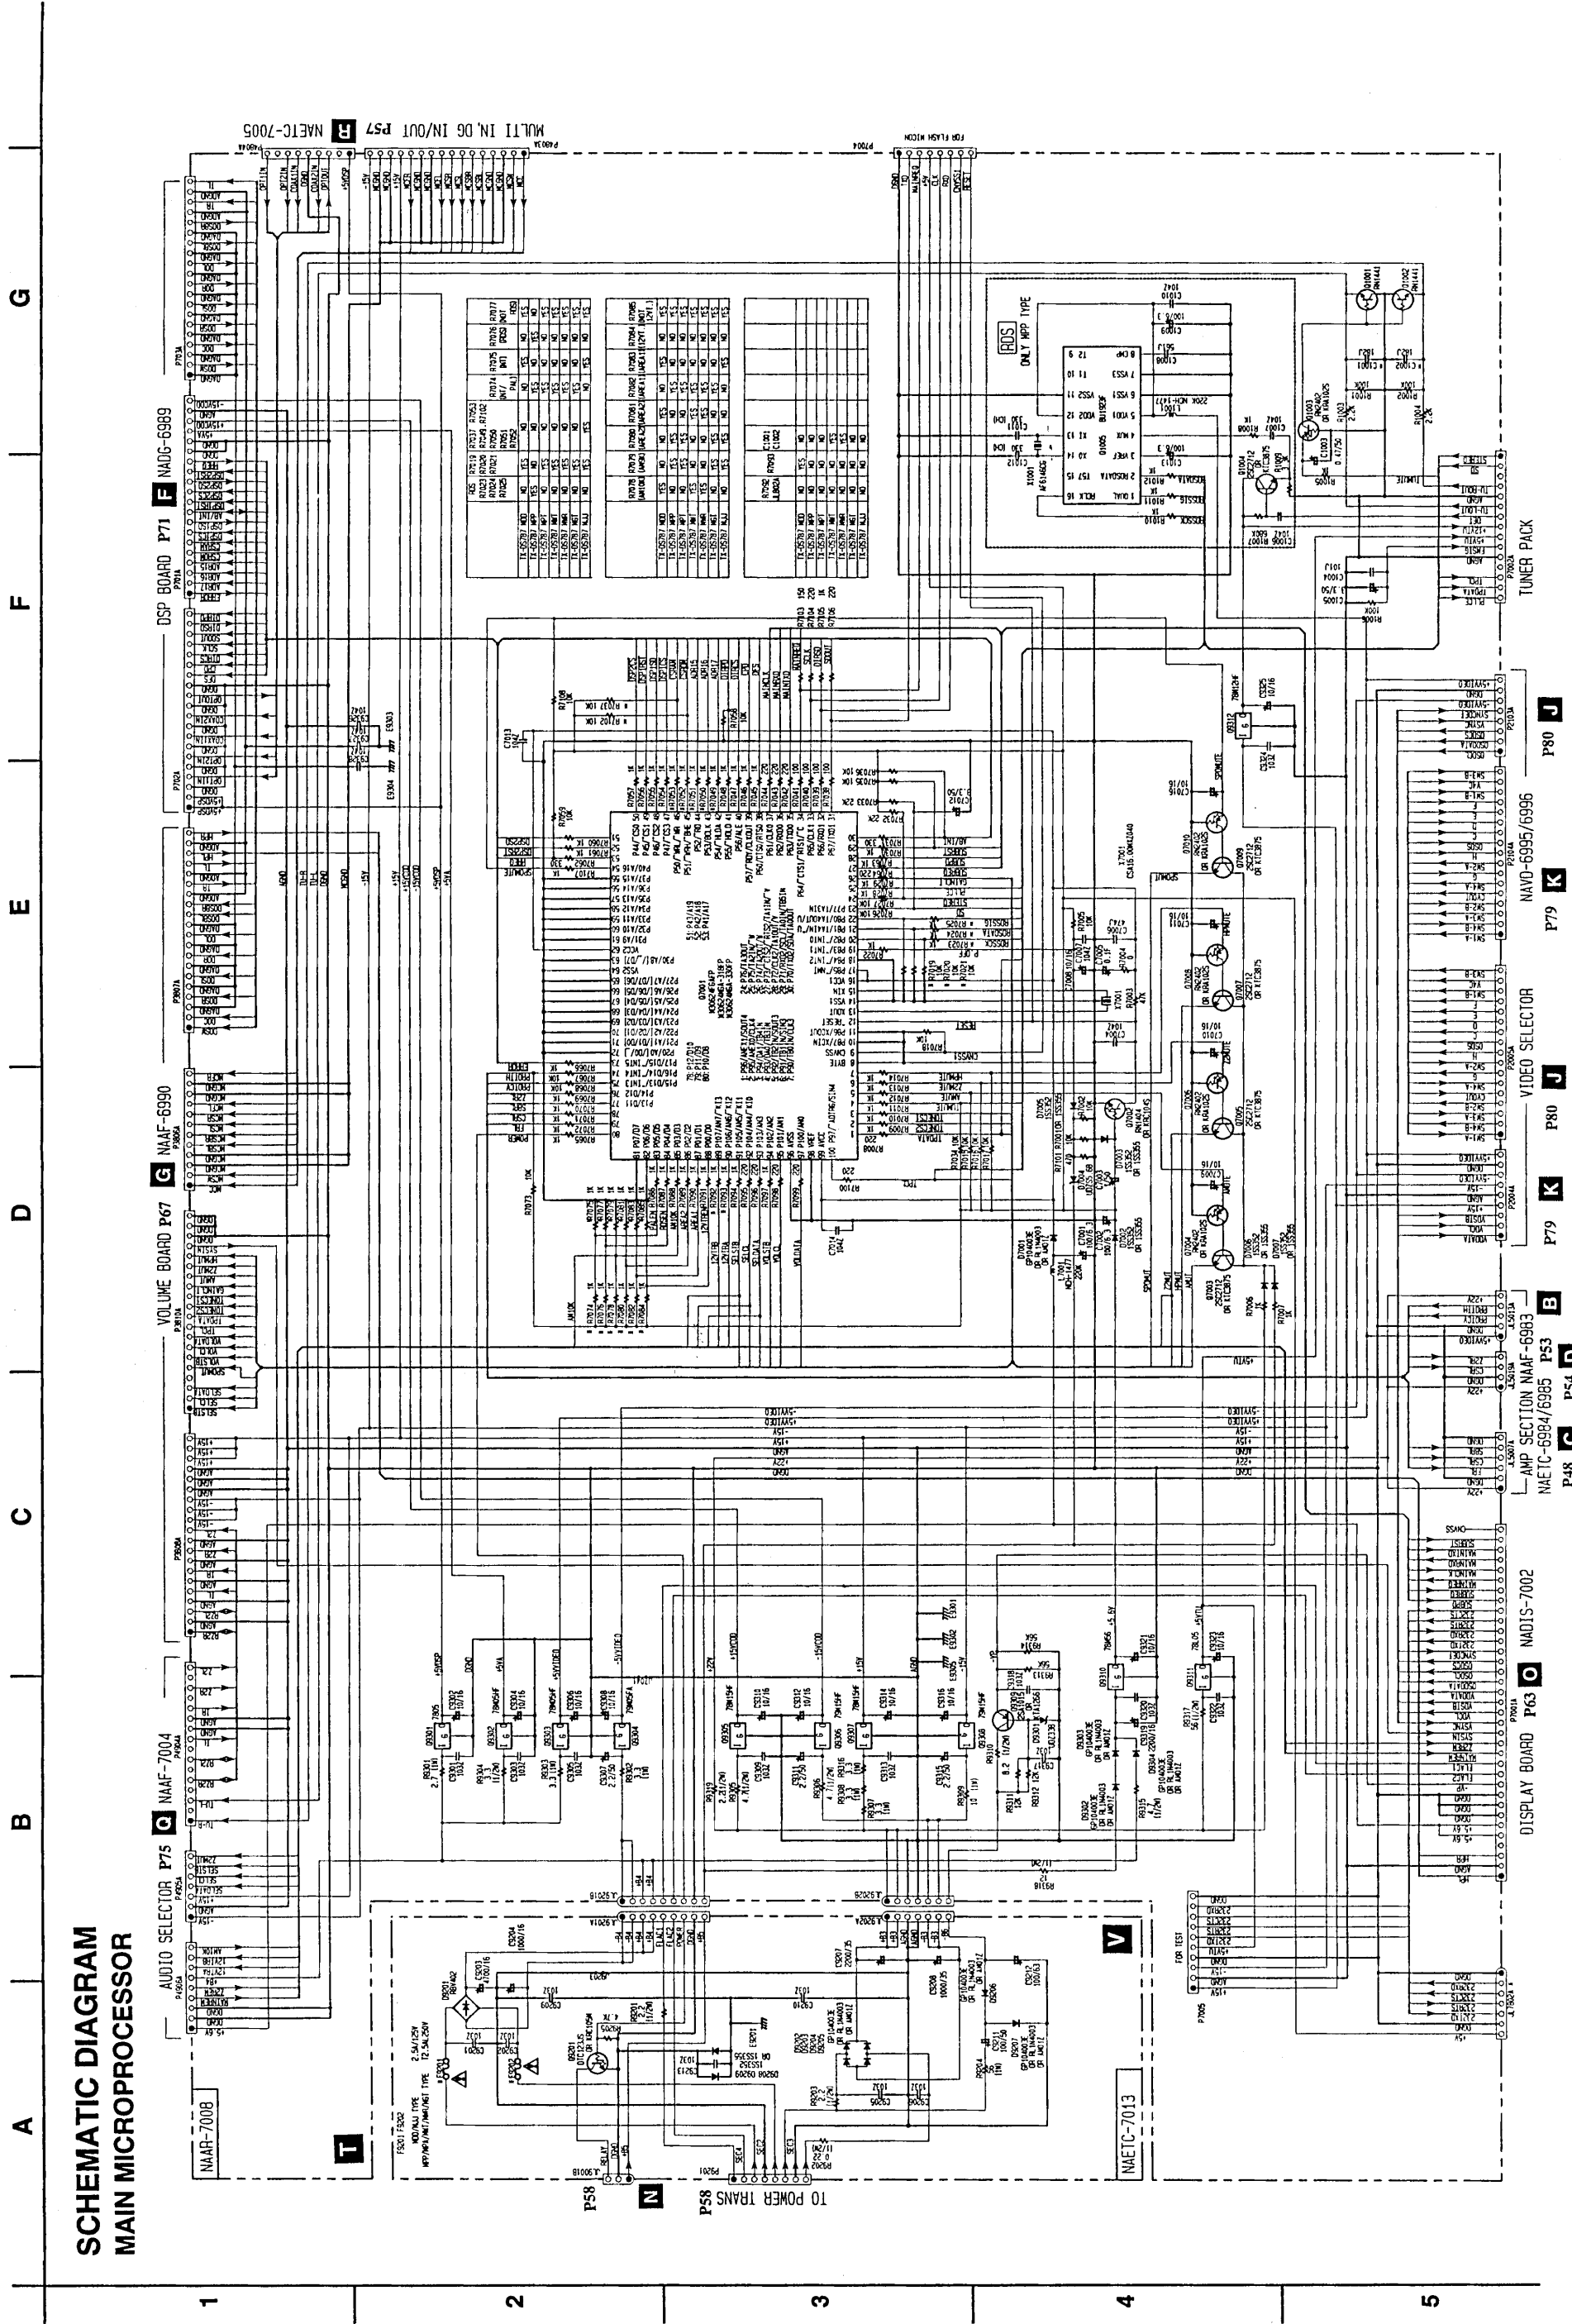

A

B

C

D

E

F

G

1

2

3

4

5

**SCHEMATIC DIAGRAM
MAIN MICROPROCESSOR**


MICROPROCESSOR CIRCUIT NO.	CIRCUIT DESCRIPTION	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
Q1005	ICs	BU1923F <P>	C1008	Capacitors	560pf±5%,50V,Plastic <P>
Q7001		M30624MGA-330FP	C1009,C1013		100µF,6.3V,Elect.<P>
Q9301		MPC7805HF or MPC7805FHA	C7001,C7002		100µF,6.3V,Elect.<P>
Q9302,Q9303		222780054JRC or 222780055JRC	C7003		1µF,50V,Elect.
Q9304		222780055JRC or 222780055MIT	C7005		DX-5R5L104 or 3000078 or 3000118
Q9305,Q9307		222780155JRC or 222780155MIT	C7006		EECCSR3T104S
Q9306,Q9308		222780155JRC or 222780155MIT	C7008-C7011		0.47µF,Fe5%,50V,Plastic <P>
Q9310		222780055JRC or 222780055MIT	C7012		10µF,16V,Elect.
Q9311		222780053JRC or 222780125JRC	C9304,C9306		3.3µF,50V,Elect.
Q9312		222780125JRC or 222780125MIT	C9307,C9311		10µF,16V,Elect.
Q1001,Q1002	Transistors	RN1441	C9308,C9310		10µF,16V,Elect.
Q1003		2214530R2 or 2216220R2	C9312,C9314		2.2µF,50V,Elect.
Q1004		2213145R2, 2213143R2, 2213144R2, 2216173R2, 2216174R2 or 2216175R2	C9315		10µF,16V,Elect.
Q7002		2214490R2 or 2216145R2	C9316,C9321		2.2µF,50V,Elect.
Q7003,Q7005		2213143R2, 2213144R2, 2216173R2, 2216174R2 or 2216175R2	C9319		2200µF,16V,Elect.
Q7007,Q7009		2213143R2, 2213144R2, 2216173R2, 2216174R2 or 2216175R2	C9323,C9325		10µF,16V,Elect.
Q7004,Q7006		2214530R2 or 2216175R2	R7101		470Ω,±5%,1/2W,Metal oxide
Q7008,Q7010		221455 or 2215975	R9301		2.70±5%,1W,Metal
Q9309		2215975	R9302,R9304		3.3Ω±5%,1W,Metal
D7001	Diodes	RL1N4003, 1SR139-100 or GP104003E	R9305,R9306		4.7Ω±5%,1/2W,Metal
D9302-D9304		22380032 or 22380035	R9307,R9308		3.3Ω±5%,1W,Metal
D7002,D7003		22324R2 or 22323R1	R9309		10Ω±5%,1W,Metal oxide
D7005-D7007		224550560R2 or 224493300R2	R9310		8.2Ω±5%,1/2W,Metal
D9301		224493300R2	R9315		4.7Ω±5%,1/2W,Metal
L1001	Coils	NCH-1477 <P>	R9316		3.3Ω±5%,1W,Metal
L7001		NCH-1477	R9317		56Ω±5%,1/2W,Metal oxide
X1001	Oscillators	AF6146CG,Crystal <P>	R9318		12Ω±5%,1/2W,Metal oxide
X7001		CST16.00MXW0C1,Ceramic	R9319		2.2Ω±5%,1/2W,Metal
C1001,C1002	Capacitors	1800pf±5%,50V,Plastic <WT/R>	JL5007A		NSCT-4P897
C1003		0.47µF,50V,Elect.	JL5013A		NSCT-3P896
C1005		3.3µF,50V,Elect.	JL5019A		NSCT-4P895
			JL9201B		NSCT-9P101
			JL9202B		NSCT-7P99
			P7001A		NSCT-35P2128 or NSCT-35P1831
			P7002A		NSCT-15P2108, NSCT-15P1609 or NSCT-15P1811
			P2103A		NPLG-8P660
			P2104A		NPLG-17P762
			P3806A		NPLG-12P664
			P3807A,P3808A		NPLG-20P668
			P3810A		NPLG-20P668
			P4803A,P4904A		NPLG-16P761
			P4804A,P4906A		NPLG-9P661
			P4905A		NPLG-7P659
			P7004		NPLG-8P660
			P7005		NPLG-10P662
			P701A-P703A		NPLG-20P668
			Q9301A,Q9303A		
			Q9302A		
			Q9307A		
			Q9301B,Q9302B		
					3P+10FN(B,C),Pan head

MICROPROCESSOR CIRCUIT PC BOARD (NAAR-7008-1A/1B/1D/1E/1F/1D)


CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
				Capacitors	
			C1008	374725614	560pF±5%,50V,Plastic <P>
			C1009,C1013	354721019	100 μ F,6.3V,Elect. <P>
			C7001,C7002	354721019	100 μ F,6.3V,Elect.
			C7003	354780109	1 μ F,50V,Elect.
			C7005	3000078 or 3000118	DX-5R5L104 or EECS5R5T104S
			C7006	375524744	0.47 μ F±5%,50V,Plastic
			C7008-C7011	354741009	10 μ F,16V,Elect.
			C7012	354780339	3.3 μ F,50V,Elect.
			C7016,C9302	354741009	10 μ F,16V,Elect.
			C9304,C9306	354741009	10 μ F,16V,Elect.
			C9307,C9311	354780229	2.2 μ F,50V,Elect.
			C9308,C9310	354741009	10 μ F,16V,Elect.
			C9312,C9314	354741009	10 μ F,16V,Elect.
			C9315	354780229	2.2 μ F,50V,Elect.
			C9316,C9321	354741009	10 μ F,16V,Elect.
			C9319	354742229S	2200 μ F,16V,Elect.
			C9323,C9325	354741009	10 μ F,16V,Elect.
				Resistors	
			R7101	443524714	470 Ω ±5%,1/2W,Metal oxide
			R9301	452630274	2.7 Ω ±5%,1W,Metal
			R9302-R9304	452630334	3.3 Ω ±5%,1W,Metal
			R9305,R9306	452530474	4.7 Ω ±5%,1/2W,Metal
			R9307,R9308	452630334	3.3 Ω ±5%,1W,Metal
			R9309	442621004	10 Ω ±5%,1W,Metal oxide
			R9310	452530824	8.2 Ω ±5%,1/2W,Metal
			R9315	452530474	4.7 Ω ±5%,1/2W,Metal
			R9316	452630334	3.3 Ω ±5%,1W,Metal
			R9317	443525604	56 Ω ±5%,1/2W,Metal oxide
			R9318	442521204F	12 Ω ±5%,1/2W,Metal oxide
			R9319	453530224	2.2 Ω ±5%,1/2W,Metal
				Sockets	
			JL5007A	25051110	NSCT-6P897
			JL5013A	25051109	NSCT-5P896
			JL5019A	25051108	NSCT-4P895
			JL9201B	25050273	NSCT-9P101
			JL9202B	25050271	NSCT-7P99
			P7001A	25052231 or 25052044	NSCT-35P2128 or NSCT-35P1831
			P7002A	25052211, 25051822 or 25052024	NSCT-15P2108, NSCT-15P1609 or NSCT-15P1811
				Plugs	
			P2103A	25055704	NPLG-8P660
			P2104A	25055806	NPLG-17P762
			P3806A	25055708	NPLG-12P664
			P3807A,P3808A	25055712	NPLG-20P668
			P3810A	25055712	NPLG-20P668
			P4803A,P4904A	25055805	NPLG-16P761
			P4804A,P4906A	25055705	NPLG-9P661
			P4905A	25055703	NPLG-7P659
			P7004	25055704	NPLG-8P660
			P7005	25055706	NPLG-10P662
			P701A-P703A	25055712	NPLG-20P668
				Heatsinks	
			Q9301A,Q9303A	27160391	
			Q9302A	27160211	RAD-68
			Q9307A	27160391	
				Screws	
			Q9301B,Q9302B	82143010	3P+10FN(BC),Pan head
Q1005	22241297R2	BU1923F <P>			
Q7001	22241568	M30624MGA-330FP			
Q9301	222780054NEC or 222780054JRC	MPC7805HF or NJM7805FA			
Q9302,Q9303	222780055NEC, 222780055JRC or 222780055MIT	MPC78M05HF, NJM78M05FA or M5F78M05L			
Q9304	222790055JRC or 222790055MIT	NJM79M05FA or M5F79M05L			
Q9305,Q9307	222780155MIT, 222780155JRC or 222780155NEC	M5F78M15L, NJM78M15FA or MPC78M15HF			
Q9306,Q9308	222790155MIT or 222790155JRC	M5F79M15L or NJM79M15FA			
Q9310	222780565JRC	NJM78M56FA			
Q9311	222780053JRC	NJM78L05A			
Q9312	222780125JRC or 222780125MIT	NJM78M12FA or M5F78M12L			
		Transistors			
Q1001,Q1002	2215410R2	RN1441			
Q1003	2214530R2 or 2216220R2	RN2402 or KRA102S			
Q1004	2213145R2, 2213143R2, 2213144R2, 2216173R2, 2216174R2 or 2216175R2	2SC2712-GR, 2SC2712-O, 2SC2712-Y, KTC3875-O, KTC3875-Y or KTC3875-GR <P>			
Q7002	2214490R2 or 2216210R2	RN1404 or KRC104S			
Q7003,Q7005	2213145R2, 2213143R2, 2213144R2, 2216173R2, 2216174R2 or 2216175R2	2SC2712-GR, 2SC2712-O, 2SC2712-Y, KTC3875-O, KTC3875-Y or KTC3875-GR			
Q7004,Q7006	2214530R2 or 2216220R2	RN2402 or KRA102S			
Q7008,Q7010	2211455 or 2215975	2SA1015-GR or KTA1266-GR			
Q9309					
		Diodes			
D7001	22380260,	RL1N4003,			
D9302-D9304	22380032 or 22380035	1SR139-100 or GP104003E			
D7002,D7003	223234R2 or 223233R1	1SS352 or 1SS355			
D7005-D7007	224550560R2 or 224490560R2	UDZ55.6B or UDZ5.6B			
D7004	224493300R2	UDZ33B			
D9301					
		Coils			
L1001	231237K220R2	NCH-1477 <P>			
L7001	231237K220R2	NCH-1477			
		Oscillators			
X1001	3010203	AF6146CG,Crystal <P>			
X7001	3010322	CST16.00MKW0C1,Ceramic			
		Capacitors			
C1001,C1002	374721824	1800pF±5%,50V,Plastic <WT/R>			
C1003	354784799	0.47 μ F,50V,Elect.			
C1005	354780339	3.3 μ F,50V,Elect.			

PRINTED CIRCUIT BOARD-PARTS LIST

POWER AMPLIFIER CIRCUIT A PC BOARD (NAAF-6982-1A/1B)

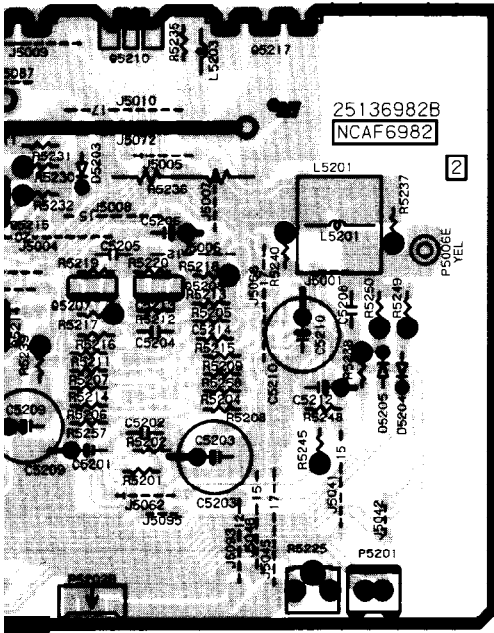

POWER AMPLIFIER CIRCUIT A PC BOARD

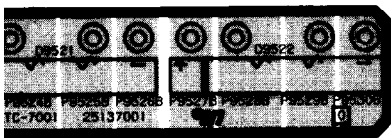

EDGE DIODE PC BOARD

CIRCUIT NO. PART NO. DESCRIPTION

CIRCUIT NO.	PART NO.	DESCRIPTION
Transistors		
Q5001,Q5002	2216154R2 or	* 2SC1622A(D18) or
Q5101,Q5102	2216153R2	* 2SC1622A(D17)
Q5003,Q5018	2216156R2,	2SC1622A-L,
Q5103,Q5118	2216295R2 or	KTC3911-GR or
Q5203,Q5218	2216296R2	KTC3911-BL
Q5004,Q5104	2214460R2 or	RN1401 or
Q5204	2216330R2	KRC101S
Q5005,Q5006	2216094R2	2SA1200-Y
Q5007 ,Q5107	2202094	2SA1360-Y
Q5008,Q5108	2202104	2SC3423-Y
Q5009,Q5109	2213145R2 or	2SC2712-GR or
Q5209	2216175R2	KTC3875-GR
Q5010,Q5110	2212654 or	2SC3421-Y or
Q5210	2212653	2SC3421-O
Q5016,Q5116	2202822 or	* 2SC5200-R or
Q5216	2202823	* 2SC5200-O
Q5017,Q5117	2202812 or	* 2SA1943-R or
Q5217	2202813	* 2SA1943-O
Q5011,Q5111	2214375R2 or	2SA1162-GR or
Q5211	2216185R2	KTA1504-GR
Q5012,Q5112	2215313R1	2SC3515-O
Q5013,Q5113	2216113R2	2SA1384-O
Q5014,Q5114	2203000	2SA1930
Q5015,Q5115	2203010	2SC5171
Q5105,Q5106	2216094R2	2SA1200-Y
Q5201,Q5202	2216154R2 or	* 2SC1622A(D18) or
	2216153R2	* 2SC1622A(D17)
Q5205,Q5206	2216094R2	2SA1200-Y
Q5207	2202094	2SA1360-Y
Q5208	2202104	2SC3423-Y
Q5212	2215313R1	2SC3515-O
Q5213	2216113R2	2SA1384-O
Q5214	2203000	2SA1930
Q5215	2203010	2SC5171
Diodes		
D5001,D5101	224490560R2	UDZ5.6B
D5002-D5005	223163 or	1SS133 or
D5102-D5105	223205	1SS270A
D5201	224490560R2	UDZ5.6B
D5202-D5205	223163 or	1SS133 or
	223205	1SS270A
Coils		
L5001,L5101	231176SY	S-1.3C
L5002,L5003	5597-45502	
L5102,L5103	5597-45502	
L5201	231176SY	S-1.3C
L5202,L5203	5597-45502	
Capacitors		
C5001,C5101,C5201	354761019	100 μ F,35V,Elect.
C5002,C5102,C5202	374722215	220pF \pm 10%,50V,Plastic
C5003,C5103,C5203	354762219	220 μ F,35V,Elect.
C5005,C5105,C5205	374721015	100pF \pm 10%,50V,Plastic
C5006,C5007	354781009	10 μ F,50V,Elect.
C5008,C5108,C5208	374721044	0.1 μ F \pm 5%,50V,Plastic
C5009,C5010	3500201	220 μ F,63V,Elect.
C5011,C5111	354783399	0.33 μ F,50V,Elect.
C5012,C5112	354781009	10 μ F,50V,Elect.
C5013,C5014	374723344	0.33 μ F \pm 5%,50V,Plastic
C5106,C5107	354781009	10 μ F,50V,Elect.
C5109,C5110	3500201	220 μ F,63V,Elect.
C5113,C5114	374723344	0.33 μ F \pm 5%,50V,Plastic
C5206,C5207	354781009	10 μ F,50V,Elect.
C5209,C5210	3500201	220 μ F,63V,Elect.
C5211	354783399	0.33 μ F,50V,Elect.
C5212	354781009	10 μ F,50V,Elect.
C5213,C5214	374723344	0.33 μ F \pm 5%,50V,Plastic

A B C D E F G

SCHEMATIC DIAGRAM POWER AMPLIFIER SECTION A

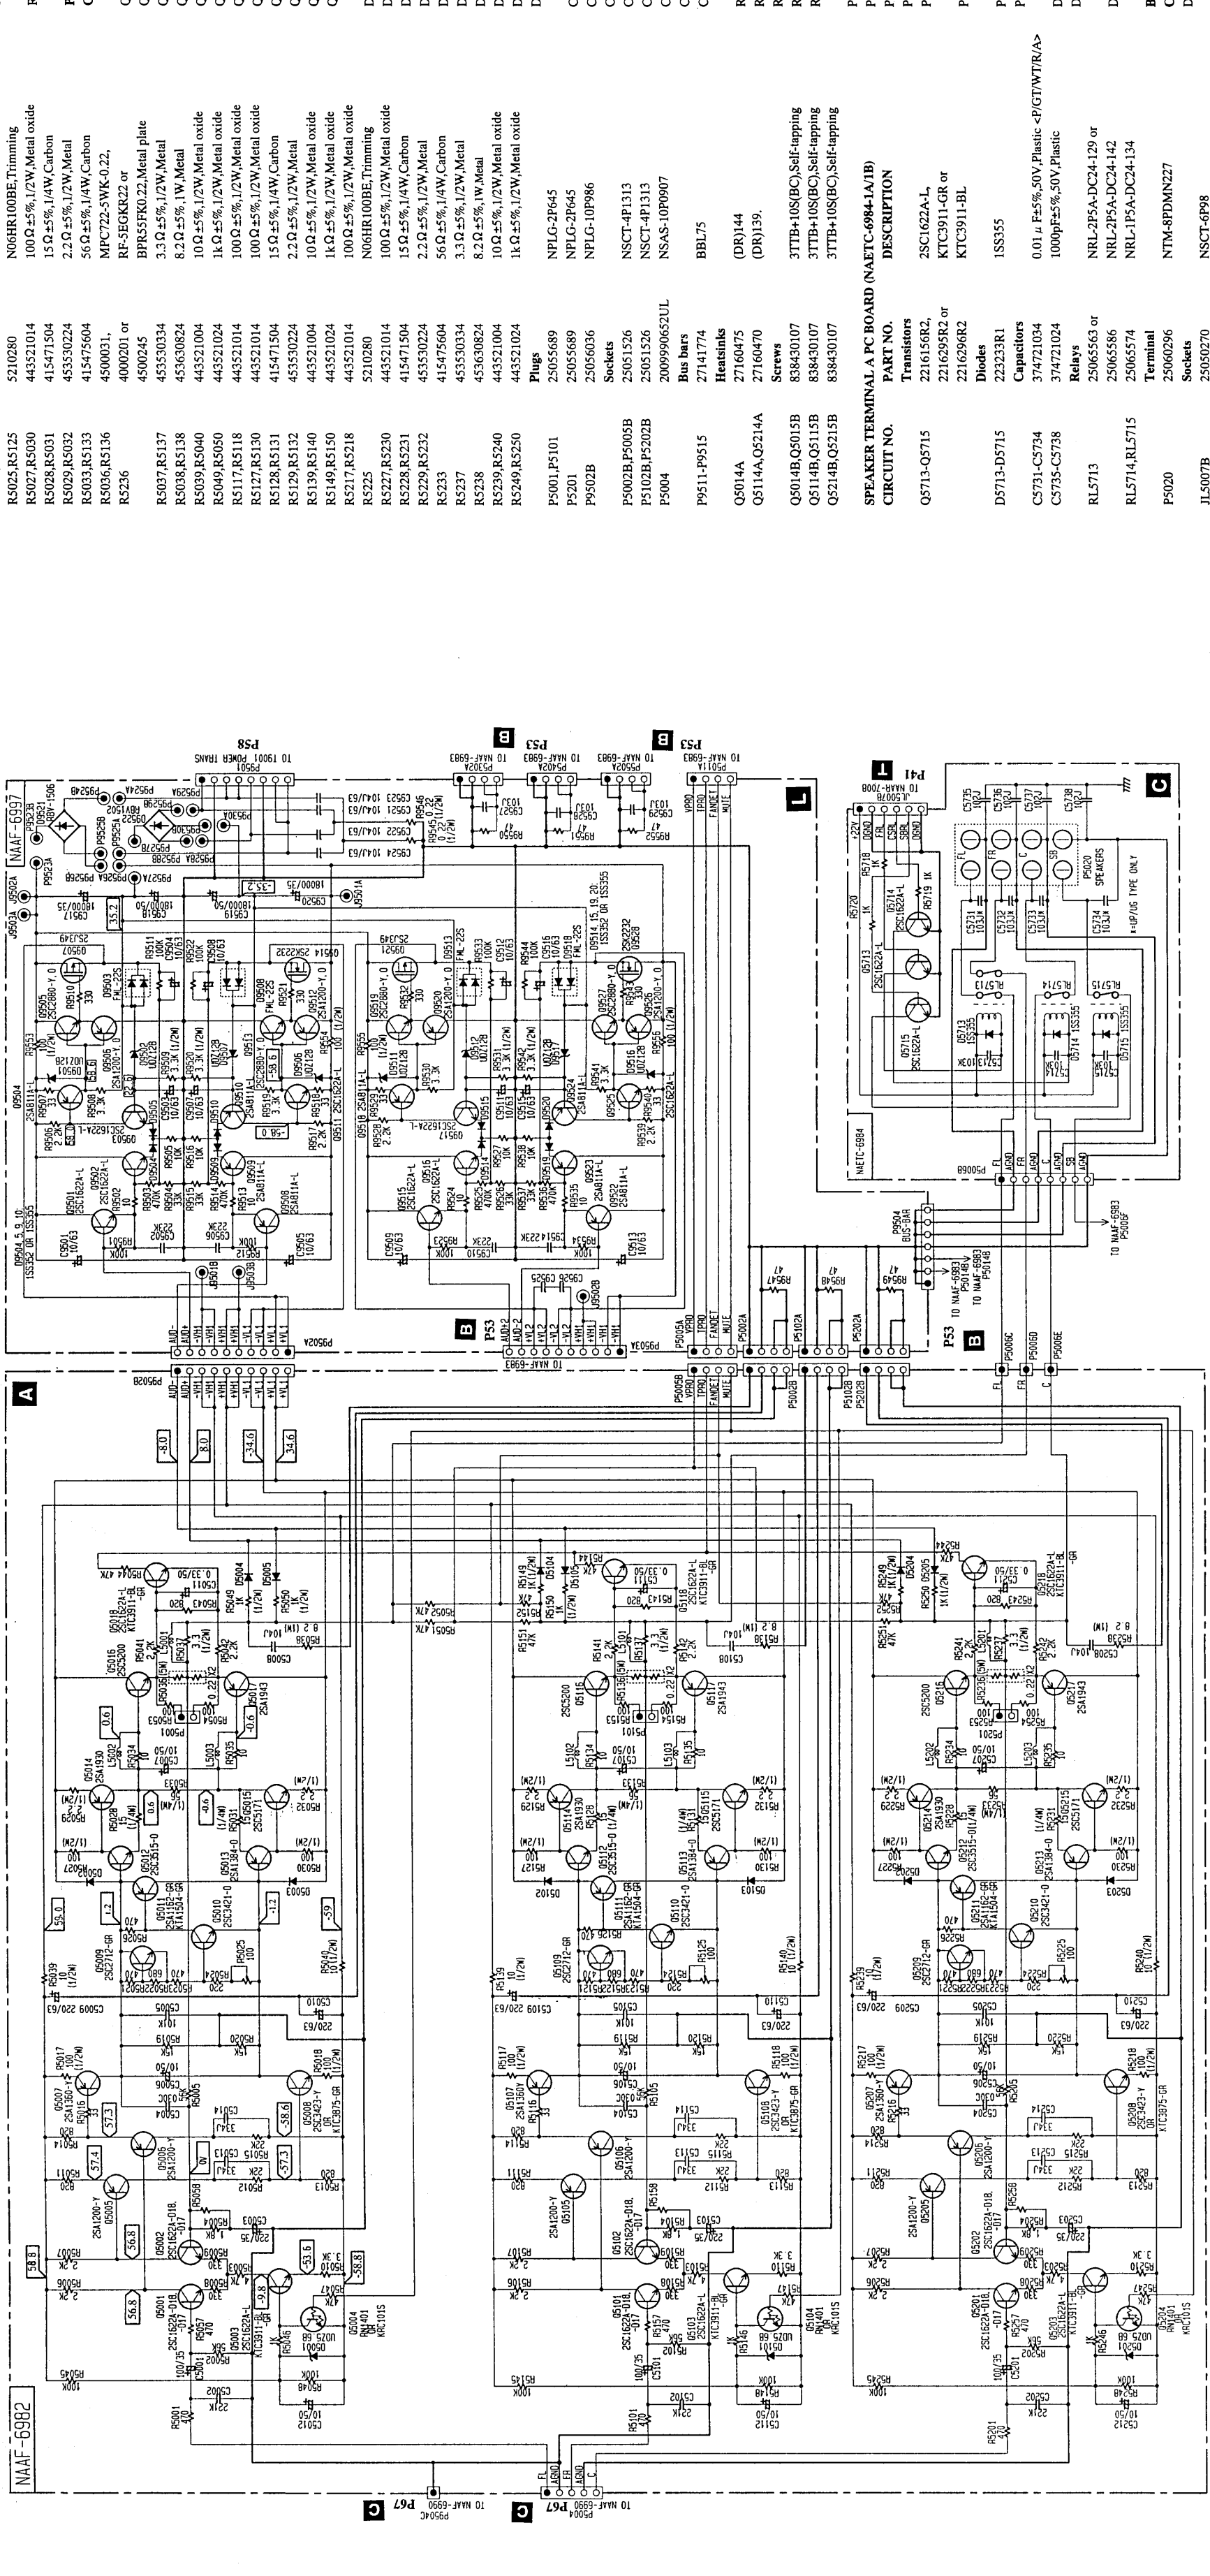


Table with columns: CIRCUIT NO., PART NO., DESCRIPTION, CIRCUIT NO., PART NO., DESCRIPTION, CIRCUIT NO., PART NO., DESCRIPTION. It lists various components and their specifications for the power amplifier section.

CAUTION: Replacement for transistor of mark * if necessary must be made from the same data group (HFE) as the original type.

BRIDGE DIODE PC BOARD (NAETC-7007-1A/1B) DESCRIPTION RBV-1506, Diode

PRINTED CIRCUIT BOARD-PARTS LIST

POWER AMPLIFIER CIRCUIT B PC BOARD (NAAF-6983-1A/1B)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q5301,Q5302	2216154R2	* 2SC1622A(D18)
Q5303,Q5313	2216156R2,	* 2SC1622A-L,
Q5401,Q5413	2216295R2 or	KTC3911-GR or
Q5503,Q5513	2216296R2	KTC3911-BL
Q5304,Q5404	2214460R2 or	RN1401 or
Q5504	2216330R2	KRC101S
Q5305,Q5405	2202094	2SA1360-Y
Q5306,Q5406	2202104	2SC3423-Y
Q5307,Q5407	2212654 or	2SC3421-Y or
Q5507	2212653	2SC3421-O
Q5308,Q5408	2214375R2 or	2SA1162-GR or
Q5508	2216185R2	KTA1504-GR
Q5309,Q5409	2203010	2SC5171
Q5310,Q5410	2203000	2SA1930
Q5311,Q5411	2202822 or	* 2SC3200-R or
Q5511	2202823	* 2SC5200-O
Q5312,Q5412	2202812 or	* 2SA1943-R or
Q5512	2202813	* 2SA1943-O
Q5314,Q5608	2216166R2,	2SA811A-L,
	2216305R2 or	KTA1517-GR or
	2216306R2	KTA1517-BL
Q5315,Q5415	2216094R2	2SA1200-Y
Q5401,Q5402	2216154R2	2SC1622A(D18)
Q5501,Q5502	2216154R2	2SC1622A(D18)
Q5505	2202094	2SA1360-Y
Q5506	2202104	2SC3423-Y
Q5509	2203010	2SC5171
Q5510	2203000	2SA1930
Q5515	2216094R2	2SA1200-Y
Q5601	2212445	2SK365-GR
Q5602-Q5604	2213145R2 or	2SC2712-GR or
Q5610-Q5612	2216175R2	KTC3875-GR
Q5605,Q5606	2214770R2	DTC144EK
Q5607	2202116 or	2SD2061-F or
	2202115	2SD2061-E
Q5609	2214374R2 or	2SA1162-Y or
	2214375R2	2SA1162-GR
Q5613	2214550R2	RN2404
	Diodes	
D5301,D5401	224490560R2	UDZ5.6B
D5302-D5305	223163 or	1SS133 or
D5402 D5405	223205	1SS270A
D5501	224490560R2	UDZ5.6B
D5502-D5505	223163 or	1SS133 or
	223205	1SS270A
D5601-D5607	223233R1	1SS355
D5608	224491300R2	UDZ13B
D5609,D5610	223233R1	1SS355
	Coils	
L5301,L5401,L5501	2311768Y	3-1.5C
	Capacitors	
C5301,C5401,C5501	354761019	100 μ F,35V,Elect.
C5302,C5402,C5502	374722215	220pF \pm 10%,50V,Plastic
C5303,C5403,C5503	354762219	220 μ F,35V,Elect.
C5304,C5306	354781009	10 μ F,50V,Elect.
C5305,C5405,C5505	374721015	100pF \pm 10%,50V,Plastic
C5307,C5407,C5507	374721044	0.1 μ F \pm 5%,50V,Plastic
C5308,C5309,C5408	3500201	220 μ F,63V,Elect.
C5310,C5312,C5604	354783399	0.33 μ F,50V,Elect.
C5311,C5404	354781009	10 μ F,50V,Elect.
C5406,C5411,C5511	354781009	10 μ F,50V,Elect.
C5409,C5508,C5509	3500201	220 μ F,63V,Elect.
C5410,C5510	354783399	0.33 μ F,50V,Elect.
C5504,C5506	354781009	10 μ F,50V,Elect.
C5601-C5603	354761019	100 μ F,35V,Elect.
C5605	354722219	220 μ F,6.3V,Elect.
C5606	354724709	47 μ F,6.3V,Elect.

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R5312,R5412,R5512	443523304	33 Ω \pm 5%,1/2W,Metal oxide
R5313,R5413,R5513	443521014	100 Ω \pm 5%,1/2W,Metal oxide
R5318,R5418,R5518	5210280	N06HR100BE,Trimming
R5320,R5420,R5520	443525604	56 Ω \pm 5%,1/2W,Metal oxide
R5321,R5421	4500031,	MPC722-5WK-0.22,
R5521	4000201 or	RF-5EGKR22 or
	4500245	BPR55FK0.22,Metal plate
R5322,R5422,R5522	453530334	3.3 Ω \pm 5%,1/2W,Metal
R5324,R5424,R5524	453630824	8.2 Ω \pm 5%,1W,Metal
R5325,R5326,R5425	443521004	10 Ω \pm 5%,1/2W,Metal oxide
R5335,R5536	443521024	1k Ω \pm 5%,1/2W,Metal oxide
R5346,R5446,R5546	443524714	470 Ω \pm 5%,1/2W,Metal oxide
R5347,R5348,R5447	4500171	2.2 Ω \pm 5%,1/4W,Metal
R5426,R5525,R5526	443521004	10 Ω \pm 5%,1/2W,Metal oxide
R5435,R5436	443521024	1k Ω \pm 5%,1/2W,Metal oxide
R5448,RR47,R5548	4500171	2.2 Ω \pm 5%,1/4W,Metal
R5535,R5536	443521024	1k Ω \pm 5%,1/2W,Metal oxide
R5611,R5612	443626814	680 Ω \pm 5%,1W,Metal oxide
R5625	453530474	4.7 Ω \pm 5%,1/2W,Metal
	Sockets	
P5011B,P5302B	25051526	NSCT-4P1313
P5013B	25050269	NSCT-5P97
P5402B,P5502B	25051526	NSCT-4P1313
P5010	2009990575UL	NSAS-10PU/84
JL5017B	25051088	NSCT-4P875
	Plugs	
P5015,P5016	25055689	NPLG-2P645
P5018B	25055099	NPLG-2P83
P5301,P5401,P5501	25055689	NPLG-2P645
P5601	25055038	NPLG-2P29
P9503B	25056036	NPLG-10P986
	Bus bars	
P9516-P9522	27141753	BBL50
	Heatsinks	
Q5309A,Q5409A	27160470	(DR)139.
Q5509A	27160475	(DR)144
	Screws	
Q5309B,Q5310B	838430107	3TTB+10S(BC),Self-tapping
Q5409B,Q5410B	838430107	3TTB+10S(BC),Self-tapping
Q5509B,Q5510B	838430107	3TTB+10S(BC),Self-tapping


SPEAKER TERMINAL B PC BOARD (NAETC-6985-1A/1B)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q5711,Q5712	2216156R2,	2SC1622A-L,
	2216295R2 or	KTC3911-GR or
	2216296R2	KTC3911-BL
	Diodes	
D5711,D5712	223233R1	1SS355
	Capacitors	
C5721-C5724	374721034	0.01 μ F \pm 5%,50V,Plastic -P/GT/WT/R/A-
C5725,C5726	374721024	1000pF \pm 5%,50V,Plastic
	Relays	
RL5711,RL5712	25065563 or	NRL-2P5A-DC24-129 or
	25065586	NRL-2P5A-DC24-142
	Terminal	
P5021	25060296	NTM-8PDMN227
	Sockets	
JL5019B	25050268	NSCT-4P96
P5014	2009990628A	NSAS-4P0859
	Plug	
P5014B	25055167	NPLG-4P151

THERMAL DETECTOR PC BOARD (NAETC-6986-1A/1B)

CIRCUIT NO.	PART NO.	DESCRIPTION
R5714	4000150	PTH9M04BC222TS2F333, Thermister
R5715	4000153	PTH9M04BF222TS2F333, Thermister
JL5017A	25051088	NSCT-4P875,Socket



SCHEMATIC DIAGRAM POWER AMPLIFIER SECTION B

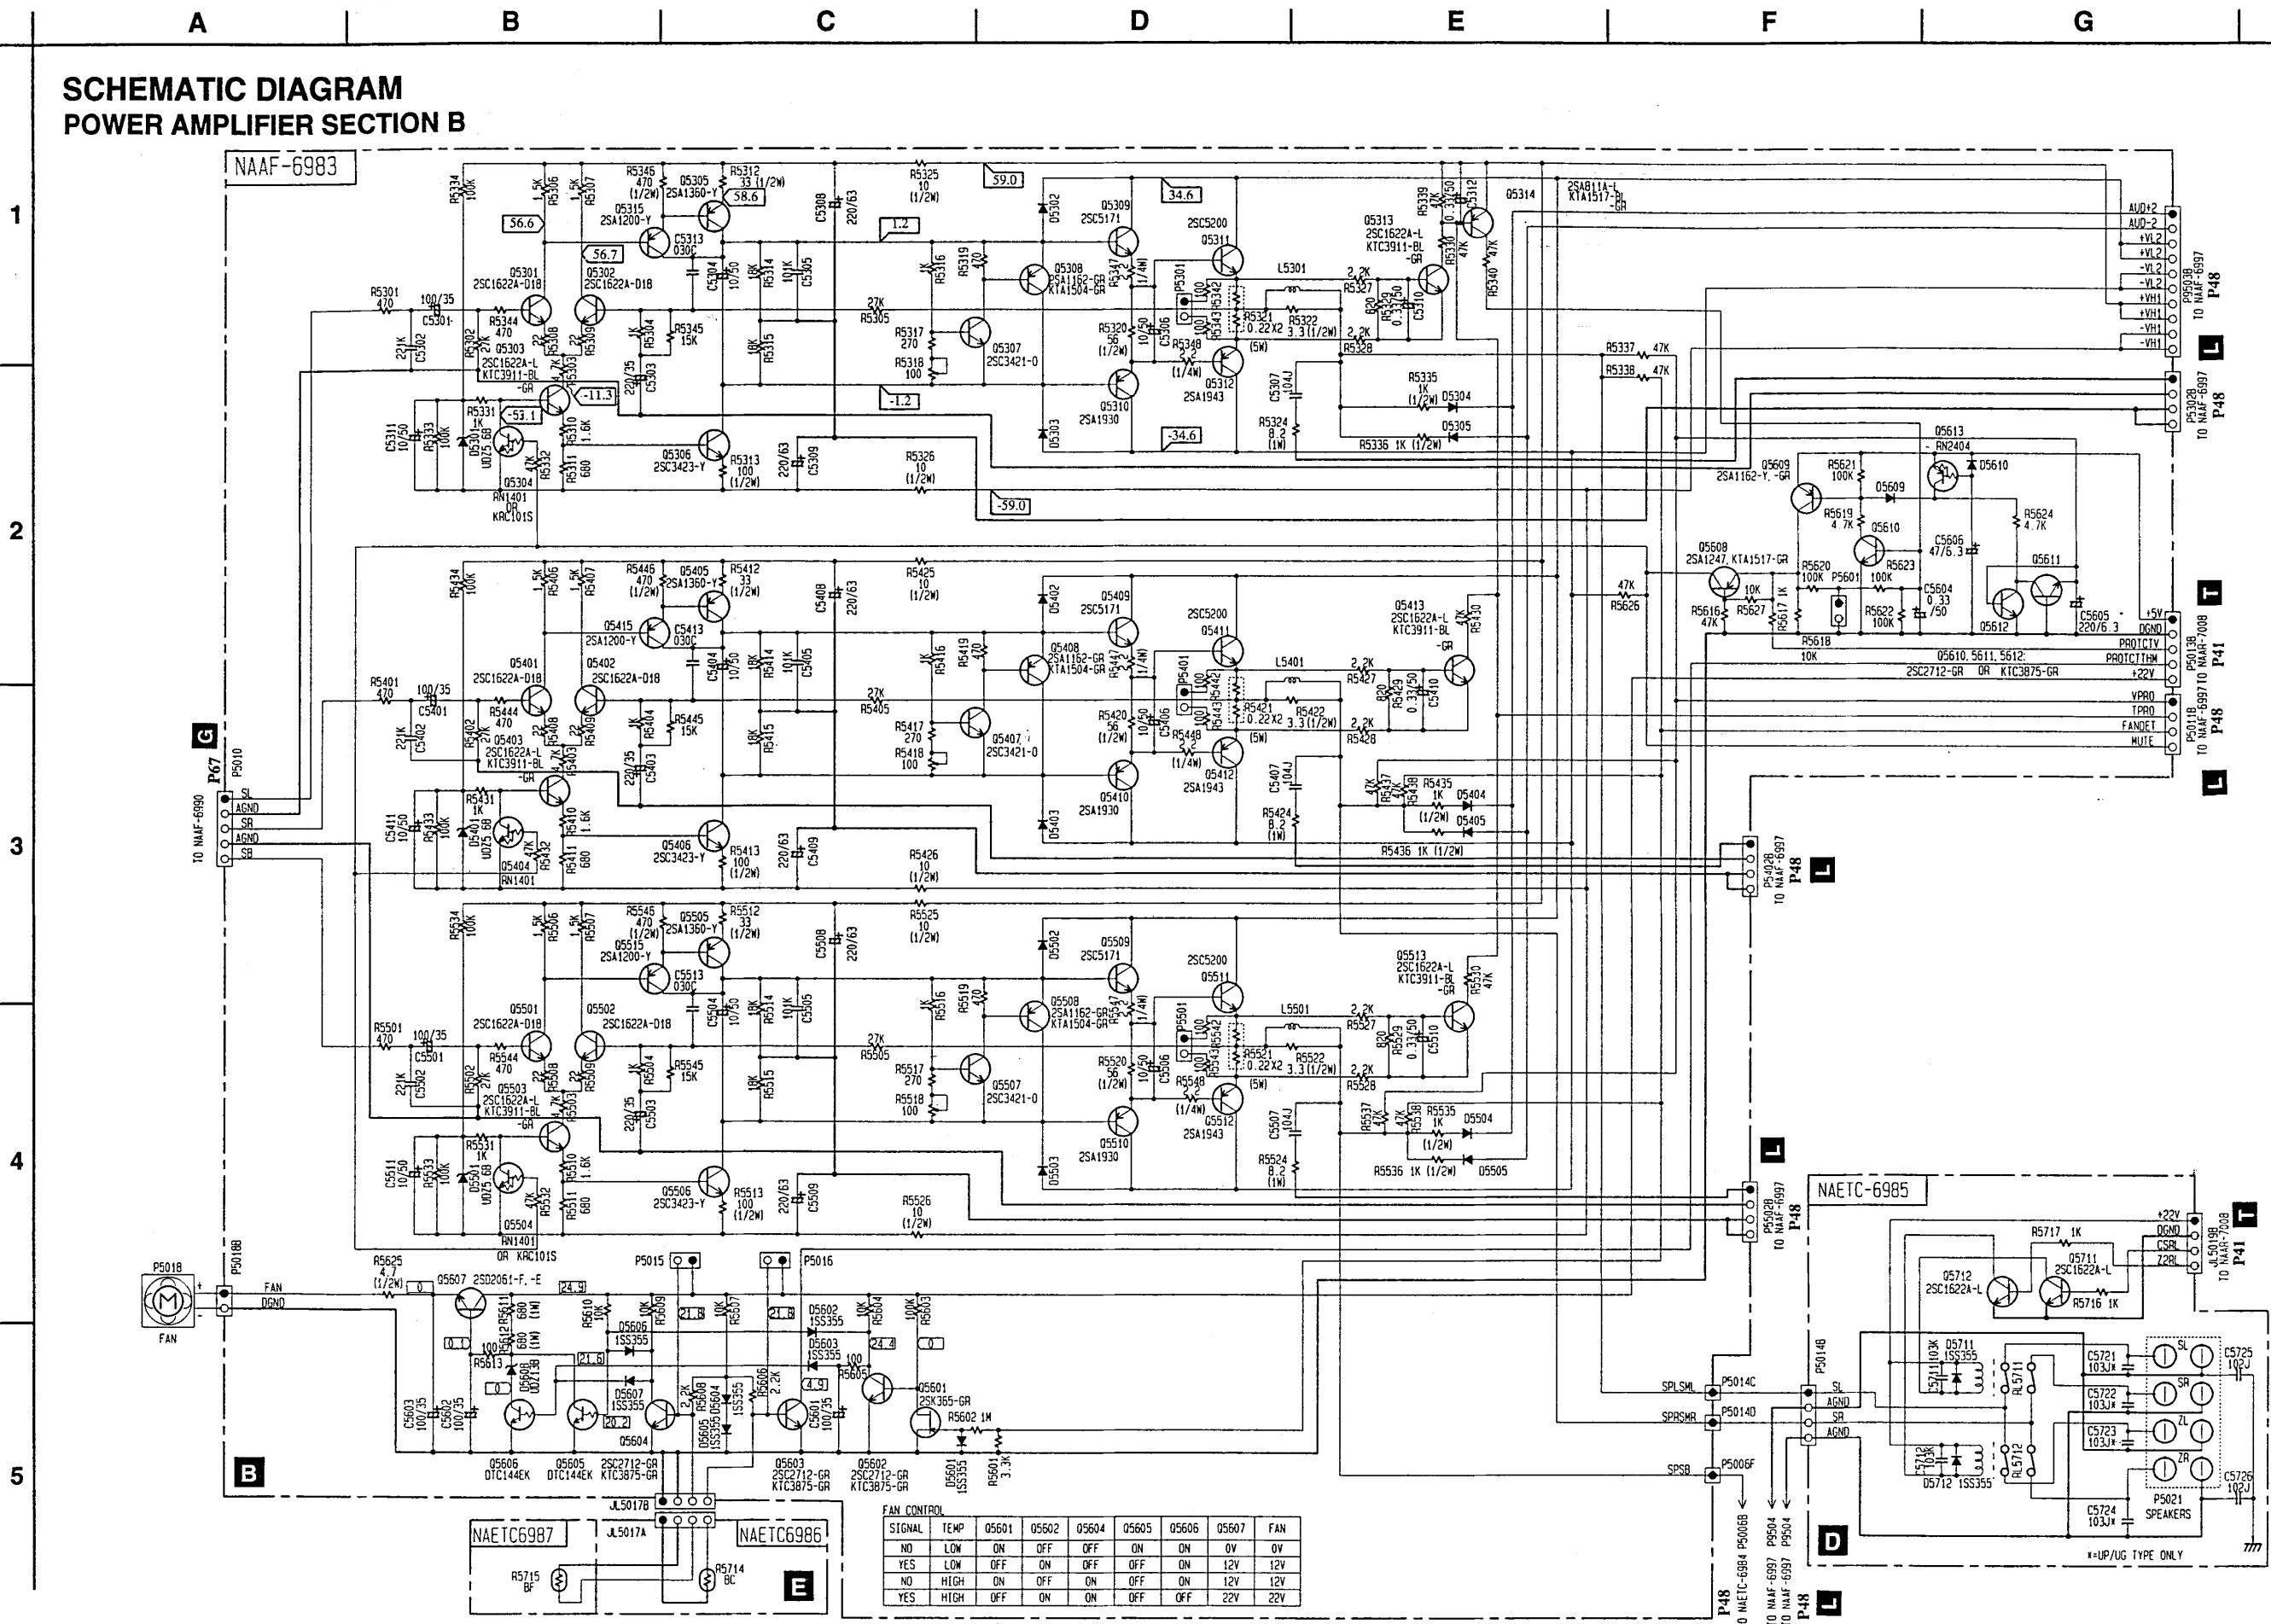

FAN CONTROL

SIGNAL	TEMP	Q5601	Q5602	Q5604	Q5605	Q5606	Q5607	FAN
NO	LOW	ON	OFF	OFF	ON	ON	0V	0V
YES	LOW	OFF	ON	OFF	ON	ON	12V	12V
NO	HIGH	ON	OFF	ON	OFF	ON	12V	12V
YES	HIGH	OFF	ON	ON	OFF	OFF	22V	22V

**SCHEMATIC DIAGRAM
DIGITAL MULTI, AND POWER SOURCE**

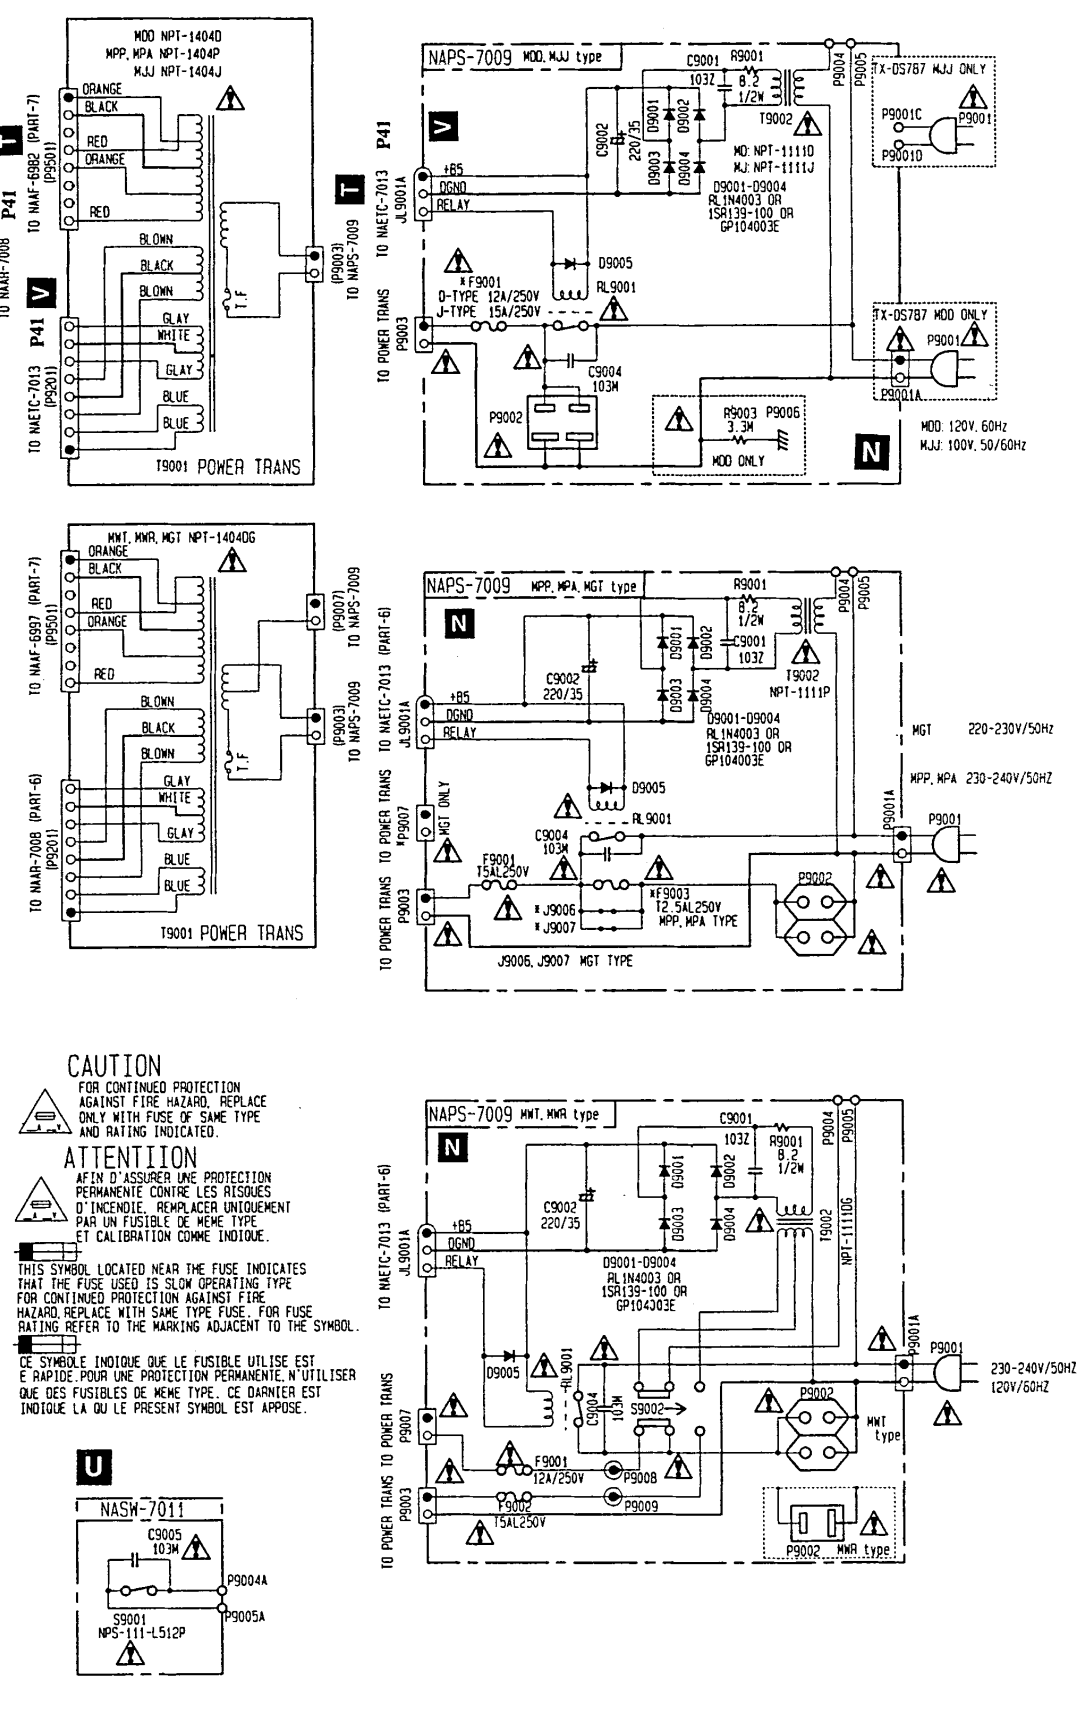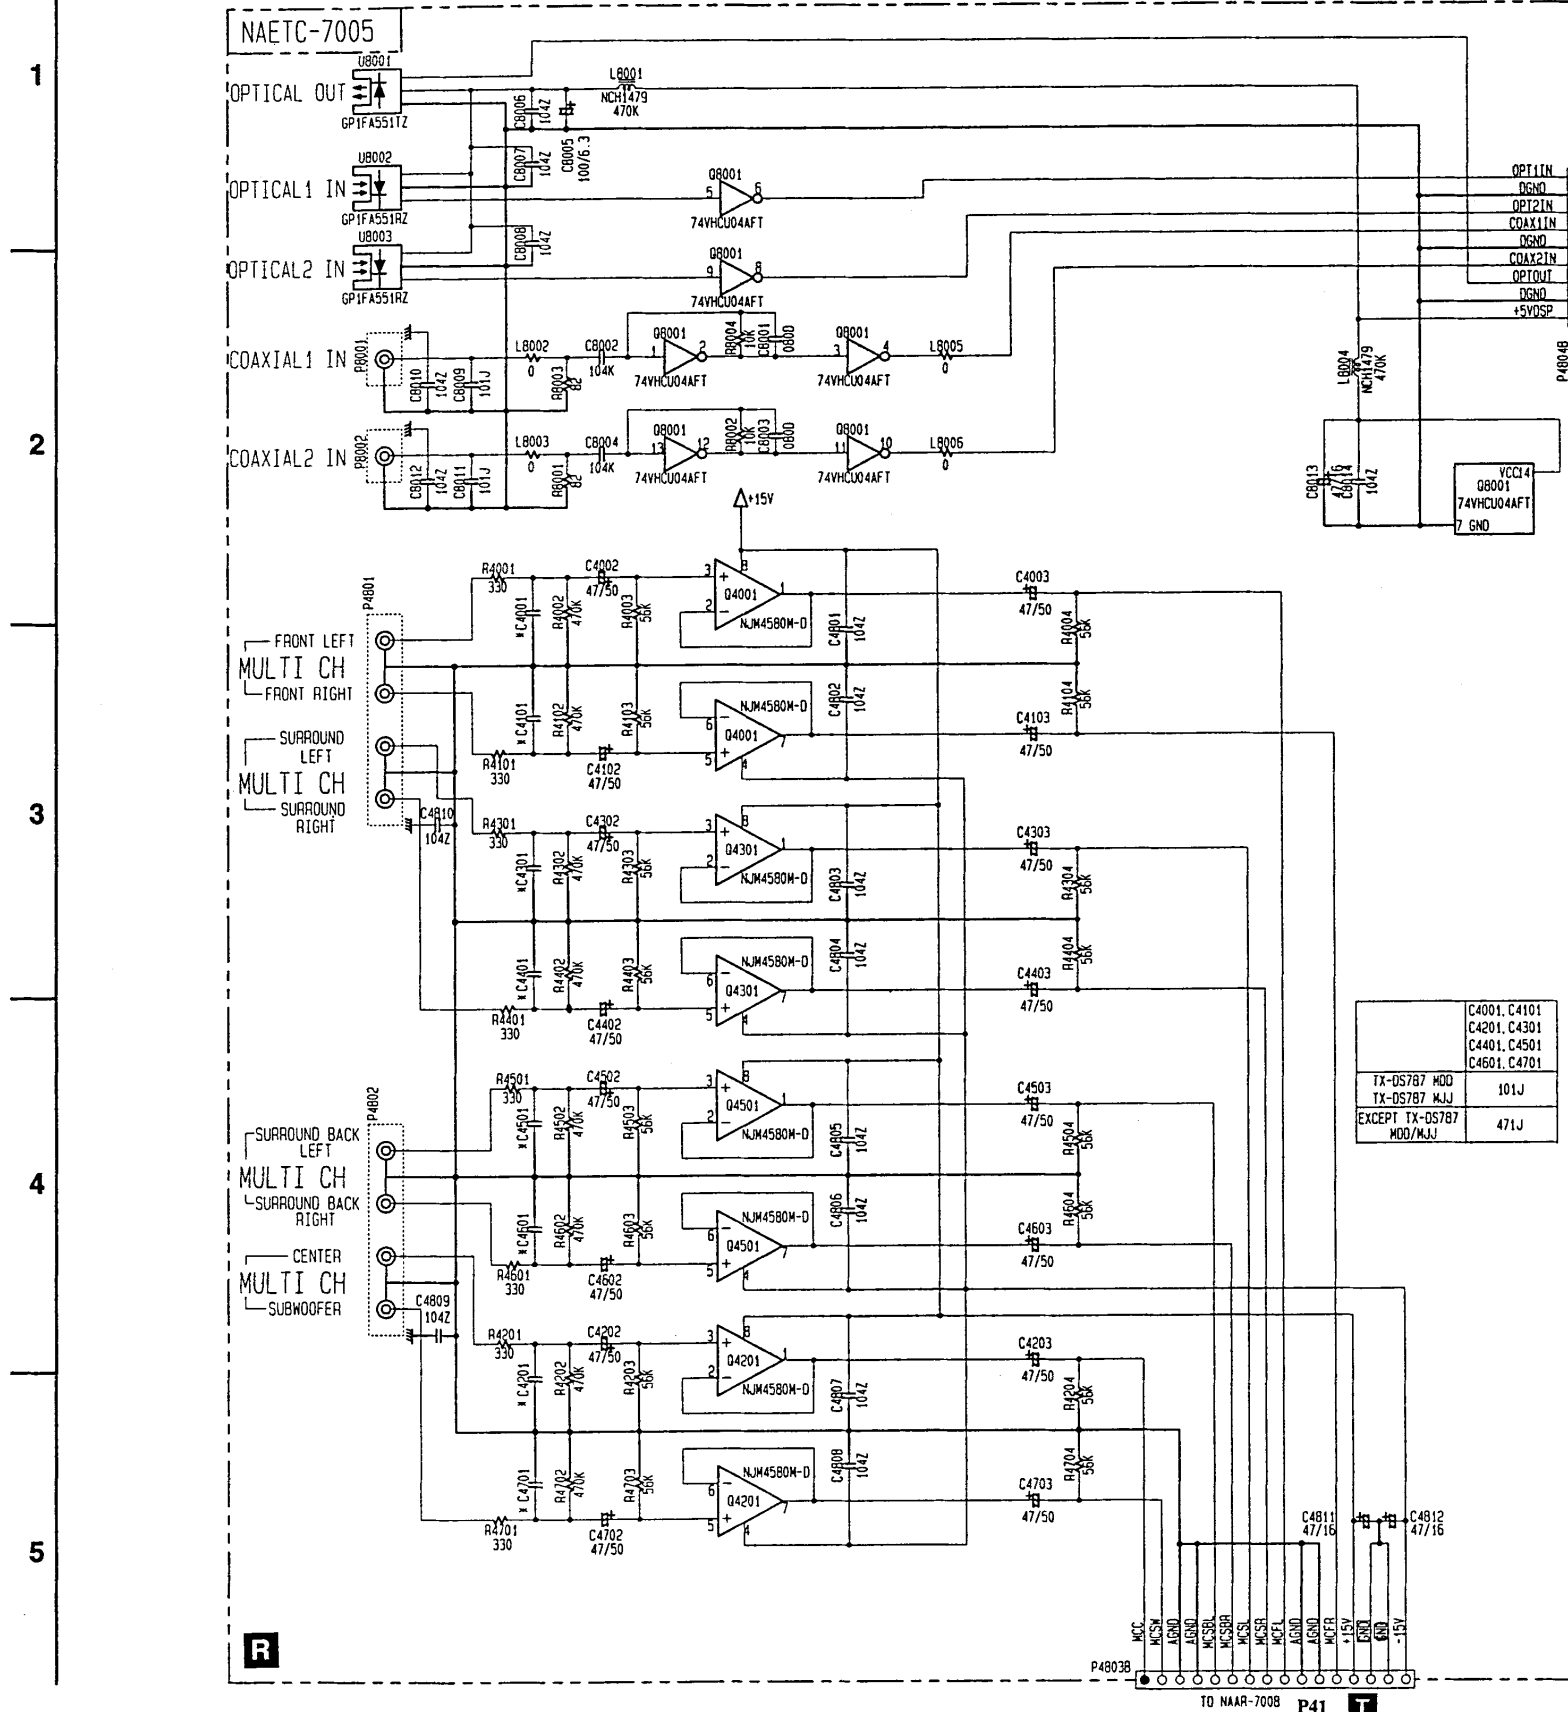

CAUTION
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH FUSE OF SAME TYPE AND RATING INDICATED.

ATTENTION
AFIN D'ASSURER UNE PROTECTION PERMANENTE CONTRE LES RISQUES D'INCENDIE, REMPLACER UNIQUEMENT PAR UN FUSIBLE DE MEME TYPE ET CALIBRATION COMME INDIQUE.

THIS SYMBOL LOCATED NEAR THE FUSE INDICATES THAT THE FUSE USED IS SLOW OPERATING TYPE FOR CONTINUED PROTECTION AGAINST FIRE HAZARD. REPLACE WITH SAME TYPE FUSE. FOR FUSE RATING REFER TO THE MARKING ADJACENT TO THE SYMBOL.

CE SYMBOLE INDIQUE QUE LE FUSIBLE UTILISE EST A RAPIDE POUR UNE PROTECTION PERMANENTE. N'UTILISER QUE DES FUSIBLES DE MEME TYPE. CE DERNIER EST INDIQUE LA OU LE PRESENT SYMBOLE EST ADPOSE.

C4001, C4101	101J
C4201, C4301	47/50
C4401, C4501	47/50
C4601, C4701	47/50
C4801	47/50
C4901	47/50
C4002, C4102	101J
C4202, C4302	47/50
C4402, C4502	47/50
C4602, C4702	47/50
C4802	47/50
C4902	47/50

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
Q4001, Q4201	22241448R2,	NJM4580M-D,	P9002	25051125	△ NSCT-4P912<P/WT/GT>
Q4301, Q4501	22240489R1NE or 22241555R2	MPC4570G2-T1 or NJM4580M		25051126	△ NSCT-4P913<D>
Q8001	22274004HR2TO	TC74VHC04FT		25052115	△ NSCT-2P2013 <A>
				25052381	△ NSCT-2P2278 <R>
U8001	24120085	GP1FA551TZ	P9003	25055675 or	△ NPLG-2P631 or
U8002, U8003	24120086	GP1FA551RZ		25056028	△ NPLG-2P0978
L8001, L8004	231237K470R2	NCH-1479	P9007	25055675 or	△ NPLG-2P631 or
				25056028	NPLG-2P0978 <WT/R/GT>
C4002, C4003	354784709	47 μ F, 50V, Elect.	R9001	435350824	8.2 Ω ±5%, 1/2W, Metal
C4102, C4103	354784709	47 μ F, 50V, Elect.	R9003	43153355	△ RC1/2GFKUL-3.3M <D>
C4202, C4203	354784709	47 μ F, 50V, Elect.	RL9001	25065584,	△ NRL-1P10A-DC12-140,
C4302, C4303	354784709	47 μ F, 50V, Elect.		25065516,	△ NRL-1P10A-DC12-097,
C4402, C4403	354784709	47 μ F, 50V, Elect.		25065588 or	△ NRL-1P10A-DC12-143 or
C4502, C4503	354784709	47 μ F, 50V, Elect.		25065248	△ NRL-1P15A-DC12-29 <D/WT/R>
C4602, C4603	354784709	47 μ F, 50V, Elect.	RL9001	25065604,	△ NRL-1P5A-DC12-153,
C4702, C4703	354784709	47 μ F, 50V, Elect.		25065583,	△ NRL-1P5A-DC12-139,
C4811, C4812	354741019	100 μ F, 16V, Elect.		25065526 or	△ NRL-1P5A-DC12-102 or
C8005	354721019	100 μ F, 6.3V, Elect.		25065515	△ NRL-1P5A-DC12-096 <P/GT/A>
C8013	354744709	47 μ F, 16V, Elect.			
P4801	25045575 or	NPJ-4PDRW389 or	RL9001	29110083	Cloth
P4802	25045303	NPJ-4PDBL162			
P8001, P8002	25045586	NPJ-4PDBRW397	S9002	25065437	△ NSS-22157P <WT/R>
P4803B	25051527	NSCT-16P1314	T9002	2300670A	△ NPT-1111D <D>
P4804B	25051234	NSCT-9P1024	T9002	2300671A	△ NPT-1111P <P/A>
			T9002	2300672A	△ NPT-1111DG <WT/R/GT>
P8805A	25055706	NPLG-10P662			
PRIMARY CIRCUIT PC BOARD (NAPS-7009-1A/1B/1D/1E/1F/1I)					
CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
D9001-D9004	22380260,	RL1N4003,			
	22380032 or	1SR139-100 or			
	22380035	GP104003E			
D9005	223234R2 or	1SS352 or			
	223233R1	1SS355			
C9002	354762219	220 μ F, 35V, Elect.			
C9004	3500196S	△ RE275V-103M, IS			
F9001	252196	△ 12A-UL/T-314 <D/WT/WR>			
F9002	252244 or	△ 5A-SE-TL250V or			
	252078	△ 5A-SE-EAK <P/WT/WR/GT/A>			
F9003	252241 or	△ 2.5A-SE-TL250V or			
	252075	△ 2.5A-SE-EAK <P/A>			
F9004, F9005	25052133	△ NSCT-1P2031<P/WT/WR/GT/A>			
F9006, F9007	25052133	△ NSCT-1P2031<P/A>			
F9008, F9009	250113	△ SNS051<D/WT/WR>			
JL9001A	25051107	NSCT-3P894			
P9001A	25055675 or	△ NPLG-2P631 or			
	25056028	△ NPLG-2P0978			

NOTE: THE COMPONENTS IDENTIFIED BY MARK △ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

Note: <D>: 120V model only
<P>: European model only
<WT>: Worldwide model only
<GT>: 220-230 V model only
<A>: Australian model only
<R>: Chinese model only

PRINTED CIRCUIT BOARD-PARTS LIST

DISPLAY CIRCUIT PC BOARD (NADIS-7002-1A/1B/1C/1D)

CIRCUIT NO.	PART NO.	DESCRIPTION
	FL tube	
Q8501	212199A	16-BT-66GK
	Remote sensor	
U8501	241330	PIC-26043TE2
	IC	
Q8503	22241598	M30218MC-A208FP
	Transistors	
Q8502	2213145R2,	2SC2712-GR,
	2213143R2,	2SC2712-O,
	2213144R2,	2SC2712-Y,
	2213146R2,	2SC2712-BL,
	2216173R2,	KTC3875-O,
	2216174R2,	KTC3875-Y,
	2216175R2 or	KTC3875-GR or
	2216176R2	KTC3875-BL
Q8504,Q8505	2214480R2 or	RN1403 or
	2216200R2	KRC103S
Q8506	2214540R2 or	RN2403 or
	2216230R2	KRA103S
	Diodes	
D8501	223234R2 or	ISS352 or
D8505,D8506	223233R1	ISS355
D8502	225290	SEL4110R
D8503	225291D	SEL4910D-D
D8504	224490820R2	UDZ8.2B
D8507	224490510R2	UDZ5.1B
	Coils	
L8501	231237M022R2	NCH-1471
L8505	231237K470R2	NCH-1479
	Oscillator	
X8501	3010334	CSTS1000MG03,Ceramic
	Capacitors	
C8506	354744709	47 μ F,16V,Elect.
C8514	354784709	47 μ F,50V,Elect.
C8517	375524744	0.47 μ F \pm 5%,50V,Plastic
C8518	355722219	220 μ F,6.3V,Elect.
	Resistor	
R8547	49163104415	RM1/10IJ-100K*15,Array
	Switches	
S8501-S8531	25035652	NPS-111-S604
S8532	25065608	EC11B30C17
	Sockets	
JL8501A	25051109	NSCT-5P896
JL8502A	25051107	NSCT-3P894
P7001B	25052081,	NSCT-35P1868,
	25050941,	NSCT-35P728,
	25051339,	NSCT-35P1128,
	25051879 or	NSCT-35P1666 or
	25052268	NSCT-35P2165
	Holder	
Q8501A	27191074	(FL)
VOLUME PC BOARD (NAETC-6994-1A/1B/1C)		
CIRCUIT NO.	PART NO.	DESCRIPTION
S8533	25065575	EC16B2425,Encoder
JL8502B	25050280	NSCT-3P108,Socket


HEADPHONE TERMINAL PC BOARD (NAETC-7003-1A/1B/1C/1D)

CIRCUIT NO.	PART NO.	DESCRIPTION
L8502-L8504	231237M022R2	NCH-1471,Coil
P8503	25045514	YKB26-5005,Headphone <D/P>
P8503	25045385	YKB26-5153,Headphone <GT/A/WT/R>
JL8501B	25051109	NSCT-5P896,Socket

PREAMPLIFIER PC BOARD (NAAF-6990-1A/1B/1C)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q3001,Q3004	22241448R2,	NJM4580M-D,
Q3041,Q3201	22240489R1NE or	MPC4570G2-T1 or
Q3204,Q3251	22241555R2	NJM4580M
Q3002	22241220R2	TC9459F
Q3005	22241451R9	NJU7306G
Q3006,Q3206	22241450R2 or	NJM2082M-D or
	22241567R2	NJM2082M
Q3007,Q3207	22241472R2	NJM2114M-D
Q3012	22240191	NJM4565D-D
Q3051	22241472R2,	NJM2114M-D,
	22241409R2,	BA15532F,
	22241449R2 or	NJM5532M-D or
	22241556R2	NJM2114M
Q3202	22241371	TC9482N
Q3205	22241451R9	NJU7306G
Q3301,Q3304	22241448R2,	NJM4580M-D,
Q3351,Q3501	22240489R1NE or	MPC4570G2-T1 or
Q3504,Q3551	22241555R2	NJM4580M
Q3801	22240786	TC9274N-006
Q3802	22240981R2	TC9162AF
Q3803	22240943R2	TC9163AF
Q3807	22241448R2	NJM4580M-D
CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q3003,Q3103	2215410R2	RN1441
Q3008-Q3011	2215410R2	RN1441
Q3108-Q3111	2215410R2	RN1441
Q3208,Q3209	2215410R2	RN1441
Q3308-Q3311	2215410R2	RN1441
Q3408-Q3411	2215410R2	RN1441
Q3508,Q3509	2215410R2	RN1441
Q3608,Q3609	2215410R2	RN1441
Q3708,Q3709	2215410R2	RN1441
Q3901	2214530R2 or	RN2402 or
	2216220R2	KRA102S
	Diodes	
D3901	224550510R2 or	UDZS5.1B or
	224490510R2	UDZ5.1B
D3902	223234R2 or	ISS352 or
	223233R1	ISS355
	Capacitors	
C3001,C3011	393884707	47 μ F,50V,Elect.
C3005,C3006	393881007	10 μ F,50V,Elect.
C3009,C3044	393881017	100 μ F,50V,Elect.
C3012,C3112	374724724	4700pF \pm 5%,50V,Plastic
C3017,C3117	374721044	0.1 μ F \pm 5%,50V,Plastic
C3018,C3105	393881007	10 μ F,50V,Elect.

SCHEMATIC DIAGRAM
DISPLAY SECTION

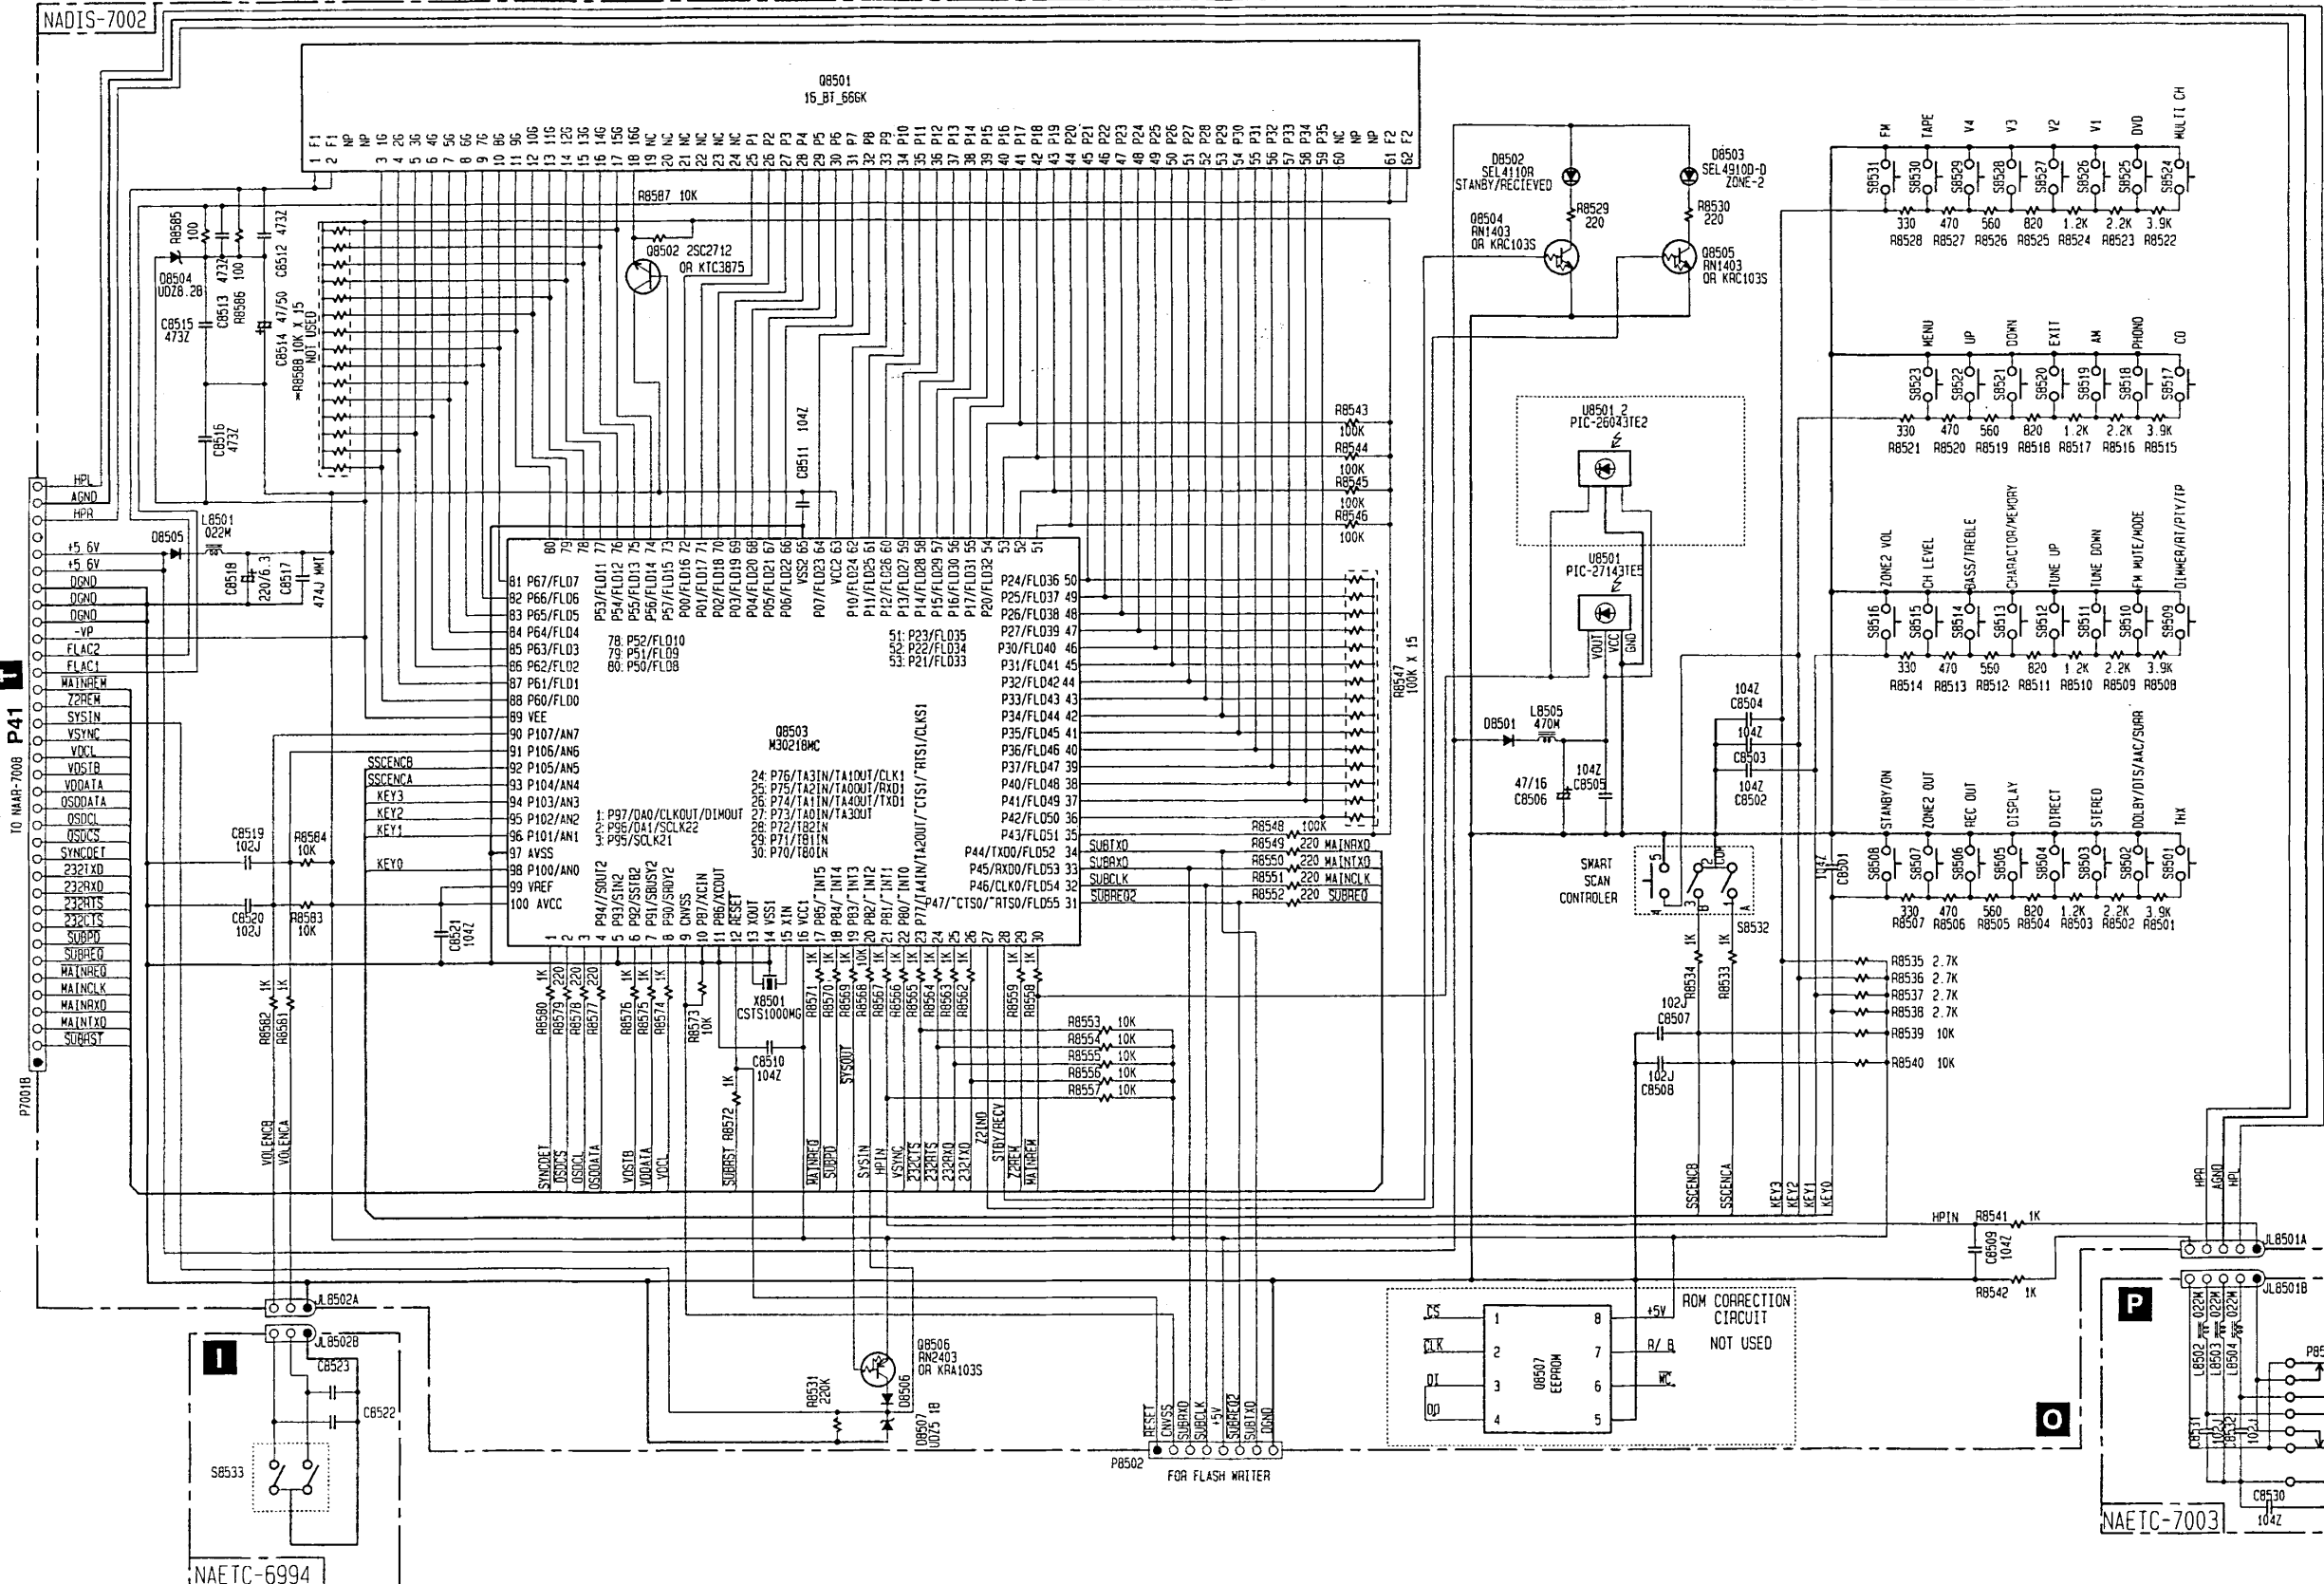

CIRCUIT NO.	PART NO.	DESCRIPTION
C8804	353780109	1 μ F, 50V, Elect. <P/T/W/A/R>
	Thermistor	
R8901	4000195	RXE030 <D>
R8902	4000195	RXE030 <P/T/W/A/R>
	Terminals	
P4901, P4902	25045571 or	NPJ-6PDRW386 or
	25045300	NPJ-6PDBL159
	Sockets	
P4904B	25051527	NSCT-16P1314
P4905B	25051232	NSCT-7P1022
P4906B	25051234	NSCT-9P1024
	Plug	
P2203B	25055234	NPLG-3P218

IR TERMINAL PC BOARD (NAETC-7006-1A/1B/1C/1D)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q8803-Q8806	2214470R2 or	RN1402 or
	2216190R2	KRC102S
	Photo couplers	
Q8801, Q8802	24120043,	ON3131,
	24120044 or	ON3131-R or

CIRCUIT NO.	PART NO.	DESCRIPTION
	24120045	ON3131-S
	Diode	
D8801	223234R2 or	1S9252 or
	223233R1	1S8355
	Capacitors	
C8801, C8802	374722234	0.022 μ F \pm 5%, 50V, Plastic
C8805	353721019	100 μ F, 6.3V, Elect.
	Switches	
S8801	25065414	NSS-22155 <WT/R>
	Terminals	
P8801, P8802	25045504	NPJ-1PDBL319
P8803	25045504	NPJ-1PDBL319 <D>
	Socket	
P8805B	25051235	NSCT-10P1025

Note: <D>: 120V model only
 <P>: European model only
 <WT>: Worldwide model only
 <GT>: 220-230 V model only
 <A>: Australian model only
 <R>: Chinese model only

From Page - 74 -

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C3019, C3041	393884707	47 μ F, 50V, Elect.
C3020, C3120	374721024	1000pF \pm 5%, 50V, Plastic <D>
	374726814	680pF \pm 5%, 50V, Plastic <P/W/T/W/A/R>
C3021, C3022	354741009	10 μ F, 16V, Elect.
C3023, C3123	354721019	100 μ F, 6.3V, Elect.
C3024, C3124	354780229	2.2 μ F, 50V, Elect.
C3043, C3051	393884707	47 μ F, 50V, Elect.
C3052, C3054	393844707	47 μ F, 16V, Elect.
C3101, C3111	393884707	47 μ F, 50V, Elect.
C3106, C3118	393881007	10 μ F, 50V, Elect.
C3109, C3144	393881017	100 μ F, 50V, Elect.
C3119, C3141	393884707	47 μ F, 50V, Elect.
C3121, C3122	354741009	10 μ F, 16V, Elect.
C3143, C3151	393884707	47 μ F, 50V, Elect.
C3152, C3154	393844707	47 μ F, 16V, Elect.
C3201, C3211	393884707	47 μ F, 50V, Elect.
C3205, C3206	393881007	10 μ F, 50V, Elect.
C3212	374724724	4700pF \pm 5%, 50V, Plastic
C3217	374721044	0.1 μ F \pm 5%, 50V, Plastic
C3218	393881007	10 μ F, 50V, Elect.
C3219	393884707	47 μ F, 50V, Elect.
C3220, C3320	374721024	1000pF \pm 5%, 50V, Plastic
C3251, C3253	393844707	47 μ F, 16V, Elect.

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C3301, C3311	354744709	47 μ F, 16V, Elect.
C3305, C3306	354781009	10 μ F, 50V, Elect.
C3321, C3420	374721024	1000pF \pm 5%, 50V, Plastic
C3351, C3353	354744709	47 μ F, 16V, Elect.
C3401, C3411	354744709	47 μ F, 16V, Elect.
C3405, C3406	354781009	10 μ F, 50V, Elect.
C3421, C3520	374721024	1000pF \pm 5%, 50V, Plastic
C3451, C3453	354744709	47 μ F, 16V, Elect.
C3501, C3511	354744709	47 μ F, 16V, Elect.
C3505, C3506	354781009	10 μ F, 50V, Elect.
C3552, C3652	354744709	47 μ F, 16V, Elect.
C3601, C3611	354744709	47 μ F, 16V, Elect.
C3605, C3606	354781009	10 μ F, 50V, Elect.
C3620	374721024	1000pF \pm 5%, 50V, Plastic
C3701, C3711	354744709	47 μ F, 16V, Elect.
C3705, C3706	354781009	10 μ F, 50V, Elect.
C3719, C3751	354744709	47 μ F, 16V, Elect.
C3720	374723324	3300pF \pm 5%, 50V, Plastic
C3753	354744709	47 μ F, 16V, Elect.
C3803, C3804	354741009	10 μ F, 16V, Elect.
C3805, C3806	374721524	1500pF \pm 5%, 50V, Plastic
C3807, C3808	354721019	100 μ F, 6.3V, Elect.
C3809, C3810	374726824	6800pF \pm 5%, 50V, Plastic
C3811, C3812	374721824	1800pF \pm 5%, 50V, Plastic
C3813, C3814	354741009	10 μ F, 16V, Elect.
C3905-C3908	354744709	47 μ F, 16V, Elect.
C3917-C3920	354744709	47 μ F, 16V, Elect.
C3925, C3926	354764709	47 μ F, 35V, Elect.
C3931, C3932	354744719	470 μ F, 16V, Elect.
C3945, C3946	354744709	47 μ F, 16V, Elect.
C3951	354721019	100 μ F, 6.3V, Elect.
C3958	354782299	0.22 μ F, 50V, Elect.

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R3033, R3133	453530224	2.2 Ω \pm 5%, 1/2W, Metal
	Terminals	
P3801-P3803	25045575 or	NPJ-4PDRW389 or
	25045303	NPJ-4PDBL162
P3804	25045586	NPJ-4PDBRW397
P3805	25045504	NPJ-1PDBL319
	Sockets	
P3806B	25051237	NSCT-12P1027
P3807B, P3808B	25051241	NSCT-20P1031
P3810B	25051241	NSCT-20P1031
	Plugs	
P3811A	25055142	NPLG-12P126
P5004A, P5010A	25055135	NPLG-5P119

A

B

C

D

SCHEMATIC DIAGRAM PREAMPLIFIER SECTION


1

2

3

4

5

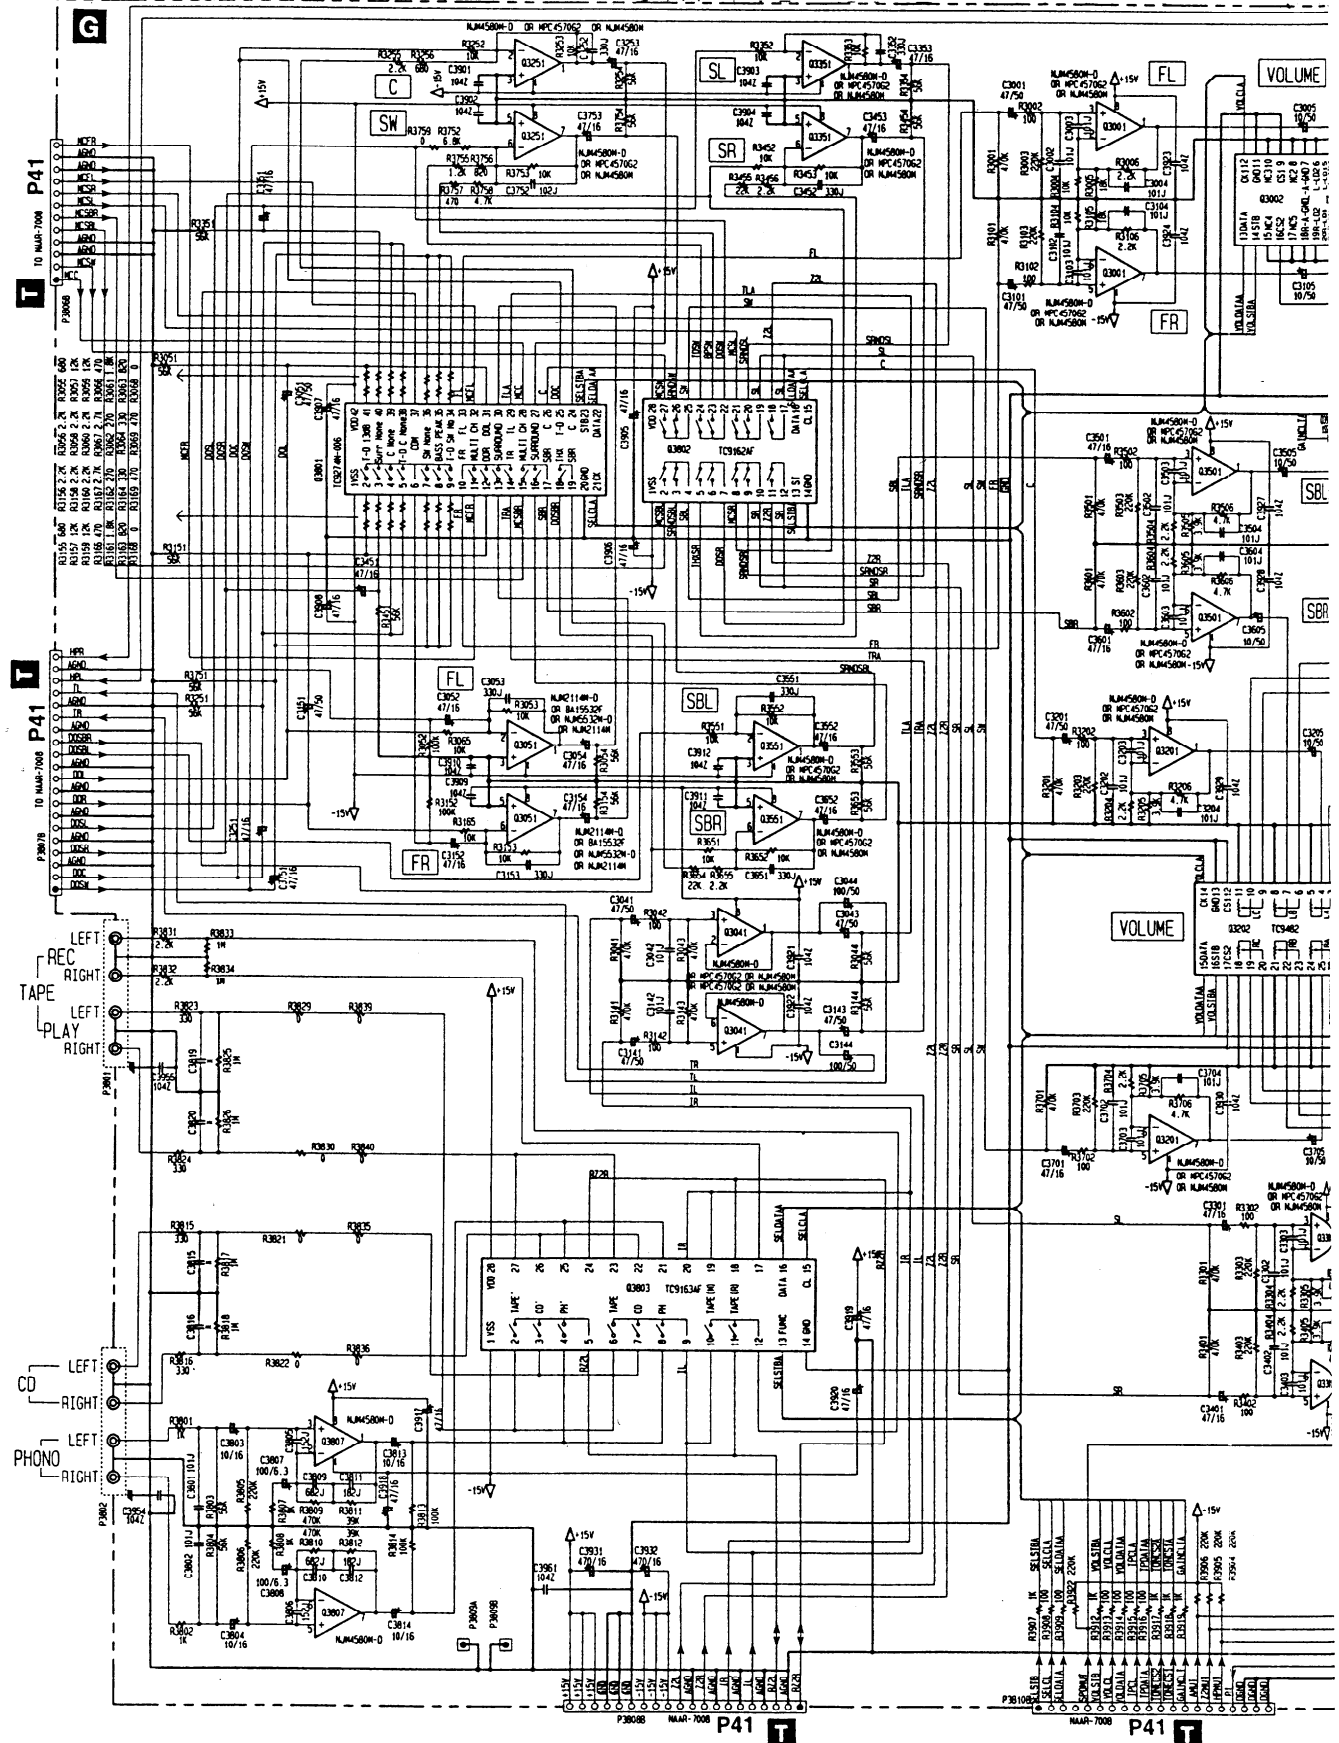


D

E

F

G

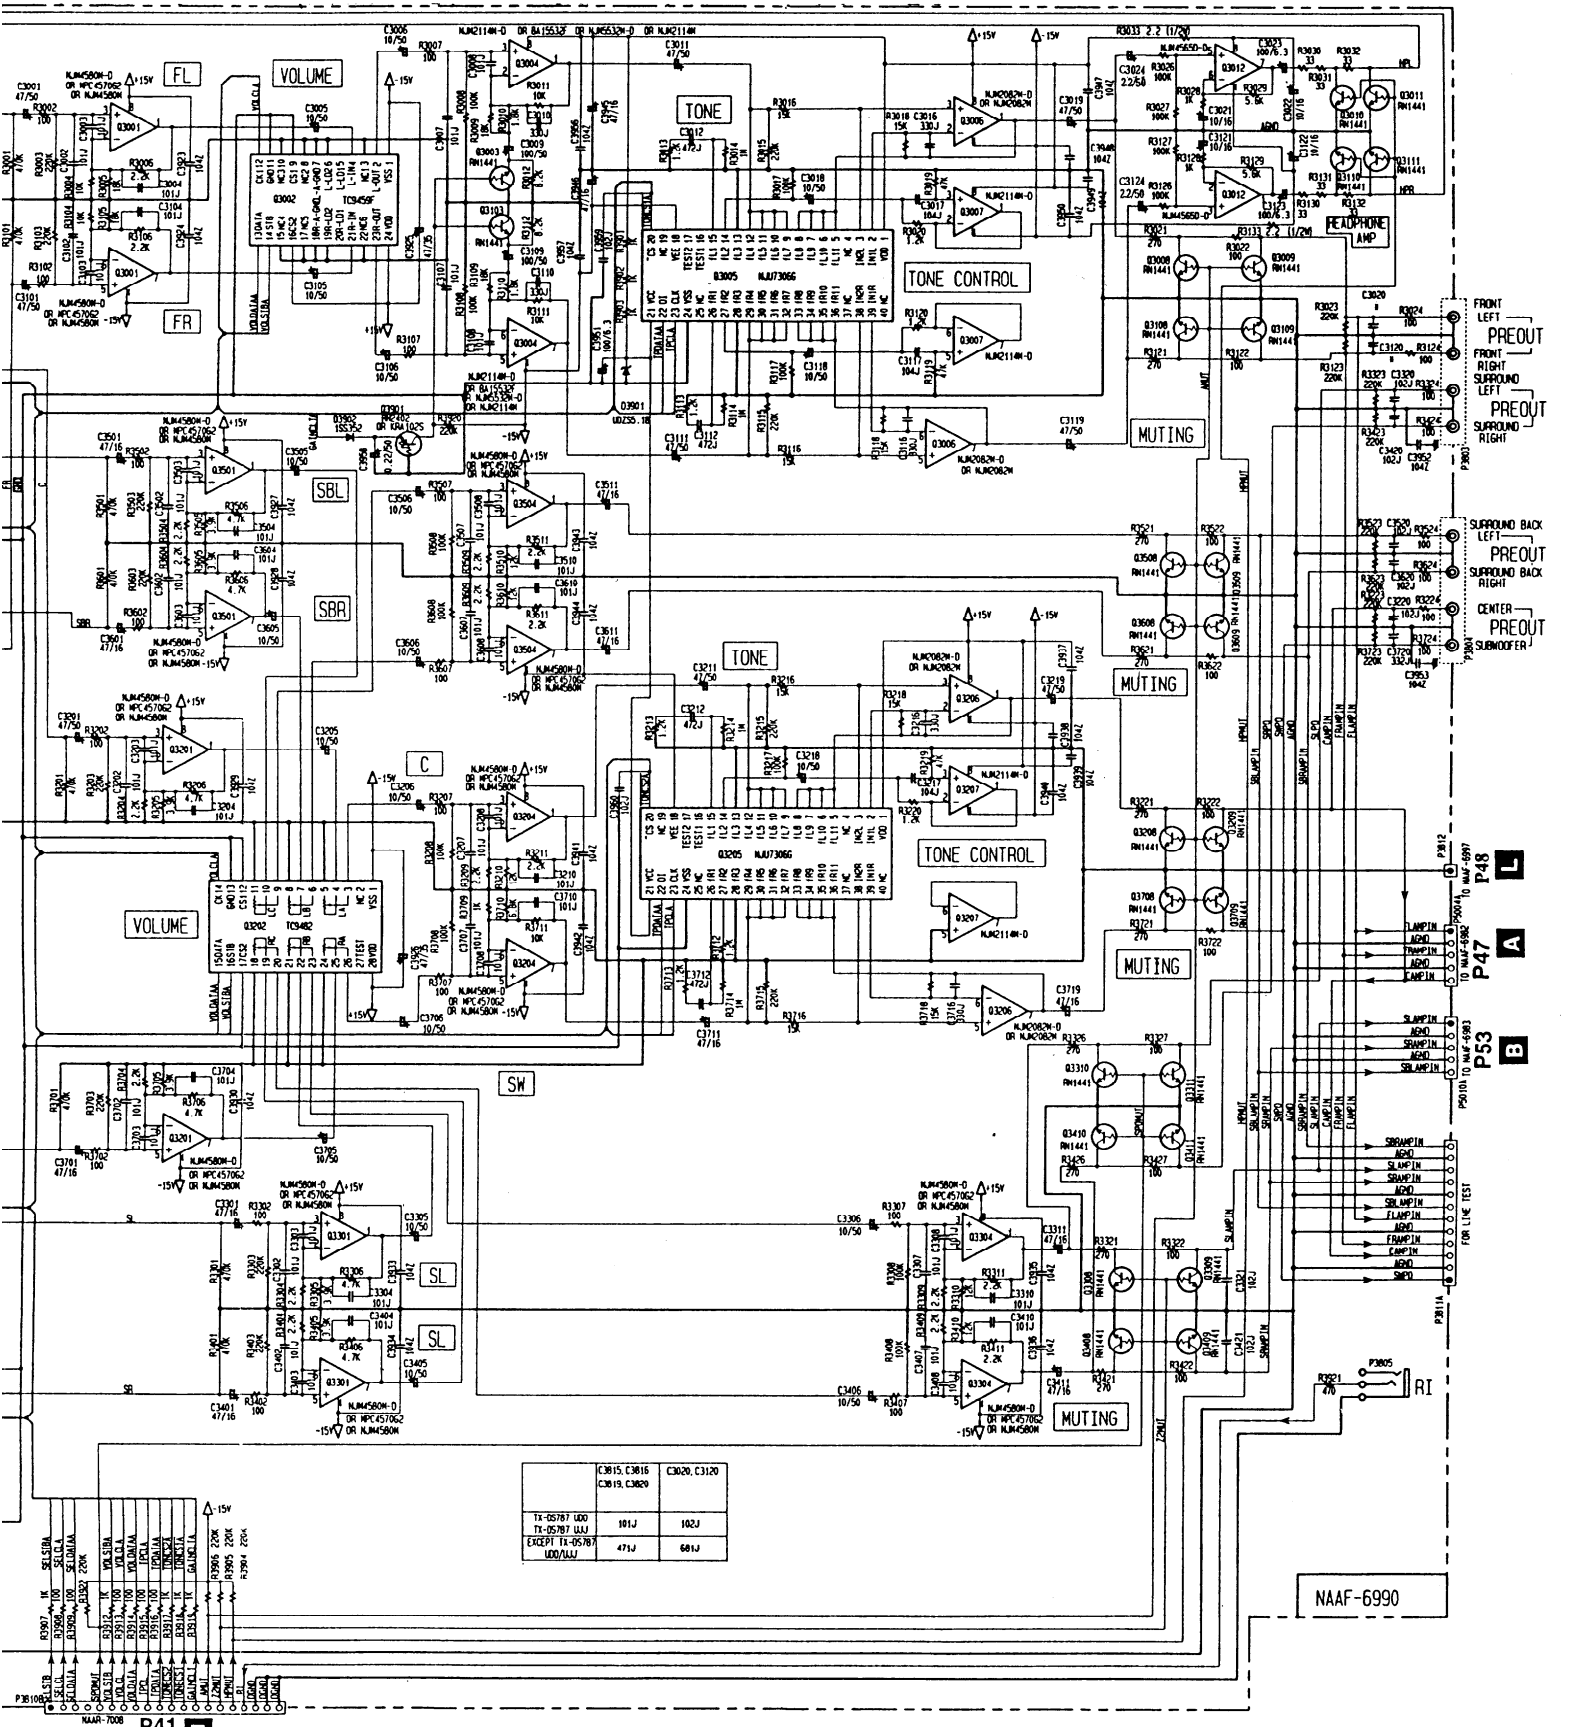

	C3815, C3816 C3819, C3820	C3020, C3120
TI-05787 000	101J	102J
EXCEPT TI-05787	471J	681J
000/001		

NAAF-6990

COMPONENT VIDEO TERMINAL PC BOARD (NAVD-6998-1A/1B)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q2303,Q2304	Transistors	
	2213145R2,	2SC2712-GR,
	2213143R2,	2SC2712-O,
	2213144R2,	2SC2712-Y,
	2216173R2,	KTC3875-O,
	2216174R2 or	KTC3875-Y or
	2216175R2	KTC3875-GR
D2301-D2304	Diodes	
	223234R2 or	1SS352 or
	223233R1	1SS355
KL2301-RL2304	Relays	
	25065610	NKL-2P1A-DC4.5-156
P2301-P2303	Terminals	
	25045629	NPJ-3PDGLR436
JL2301A	Socket	
	25051109	NSCT-5P896

From Page - 82 -

VIDEO INPUT/OUTPUT TERMINAL PC BOARD (NAAF-7004-1A/1B/1C/1D)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q4906	ICs	
	22241448R2,	NJM4580M-D,
	22240489R1NE or	MPC4570G2-T1 or
	22241555R2	NJM4580M
Q4907	22240829	TC9274N-008
Q8807	Transistors	
	2212855 or	2SB1068-U or
	2212853	2SB1068-K <D>
Q8808	Diodes	
	2212855 or	2SB1068-U or
	2212853	2SB1068-K <P/T/W/A/R>
Q8809	Resistors	
	2214470R2 or	RN1402 or
	2216190R2	KRC102S <D>
Q8810	Resistors	
	2214470R2 or	RN1402 or
	2216190R2	KRC102S <P/T/W/A/R>
C4917-C7920	Capacitors	
	354780229	2.2 μ F,50V,Elect.
	354780229	2.2 μ F,50V,Elect.
	354784709	47 μ F,50V,Elect.
	354744709	47 μ F,16V,Elect.
	354744709	47 μ F,16V,Elect.
	352780109	1 μ F,50V,Elect. <D>

From Page - 73 -

DSP CIRCUIT PC BOARD (NADG-6989-1A/1B/1C)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q301,Q302	ICs	
	22241448R2,	NJM4580M-D,
	22240489R1NE or	MPC4570G2-T1 or
	22241555R2	NJM4580M
Q303-Q306	Diodes	
	22241472R2,	NJM2114M-D,
	22241409R2,	BA15532F,
	22241449R2 or	NJM5532M-D or
	22241556R2	NJM2114M
Q701	22274541ER2TO	TC74VHC541FT
Q702	222740077R2TO	TC74HCT7007AF
Q703	22278033DR2NEC	MPC2933T
Q704	22241515R2	PQ025EZ5MZP
Q705	22241520R2	AK4112AVF
Q706	22241521R3	AK4356VQ
Q707	22241522R2	AK4528VF
Q808	22241518R9	CS493263-CL
Q809	22240935R2	TC7WU04FU
Q810	22274074ER2TO	TC74VHC74FT
Q811	22274000GR2TO	TC74VHCT00AFT
Q812	22241519R3	XCB56364FU100
Q813	Resistors	
	22241516R3,	TC55V8128BFT-10,
	22241538R3 or	TC55V8128BFT-12 or

CIRCUIT NO.	PART NO.	DESCRIPTION
D301-D308	ICs	
	22241560R2	CY7C1019V33-15VCT
D801,D802	Diodes	
	223234R2 or	1SS352 or
	223233R1	1SS355
L301,L302	Coils	
	231237M022R2	NCH-1471
	231237M022R2	NCH-1471
	230959R1	BK1608LL241-T
	230958R1	BK1608LM182-T
	231237M022R2	NCH-1471
	231237M022R2	NCH-1471
	L802-L808	
X701	Oscillators	
	3010320,	AT-4912.288MHz,
	3010327 or	AT-4912.288MHz or
	3010335	AT-49H12.288MHz,Crystal
X704	Capacitors	
	3010278	CST12.2MTW040,Ceramic
C301,C302	Capacitors	
	354744709	47 μ F,16V,Elect.
	354744709	47 μ F,16V,Elect.
	374721524	1500pF \pm 5%,50V,Plastic
	354744709	47 μ F,16V,Elect.
	374722224	2200pF \pm 5%,50V,Plastic


CIRCUIT NO.	PART NO.	DESCRIPTION
C338-C345	374724724	4700pF±5%,50V,Plastic
C346-C361	374726814	680pF±5%,50V,Plastic
C370-C377	354744709	47 μ F,16V,Elect.
C388,C389	354742219	220 μ F,16V,Elect.
C390	354724719	470 μ F,6.3V,Elect.
C391	354744709	47 μ F,16V,Elect.
C740,C744	354724719	470 μ F,6.3V,Elect.
C743,C747	354721019	100 μ F,6.3V,Elect.
C750,C757	354744709	47 μ F,16V,Elect.
C773,C783	354744709	47 μ F,16V,Elect.
C824,C830	354744709	47 μ F,16V,Elect.
C857	354744709	47 μ F,16V,Elect.
C861	374725624	5600pF±5%,50V,Plastic
	Sockets	
P701B-P703B	25051241	NSCT-20P1031

SECONDARY CIRCUIT PC BOARD (NAETC-7013-1A/1B/1D/1E/1F/1I)


CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistor			Capacitors	
Q9201	2213640 or 2215830	DTC123JS or KRC105M	C9208	354761029	1000 μ F,35V,Elect.
	Diodes		C9211	354781019	100 μ F,50V,Elect.
D9201	22380022 or 22380285	RBV402 or RS403M	C9212	354771019	100 μ F,63V,Elect.
D9202-D9207	22380260, 22380032 or 22380035	RL1N4003, 1SR139-100 or GP104003E		Resistors	
D9208,D9209	223234R2 or 223233R1	1SS352 or 1SS355	R9201,R9203	452530224	2.2 Ω ±5%,1/2W,Metal
	Capacitors		R9202	452532294	0.22 Ω ±5%,1/2W,Metal
C9203	354744729	4700 μ F,16V,Elect.	R9204	442625604	56 Ω ±5%,1W,Metal oxide
C9204	354741029	1000 μ F,16V,Elect.		Labels	
C9207	354762229	2200 μ F,35V,Elect.	F9201A,F9202A	29361747	T2.5AL250V <P/GT/WT/R/A>
				Fuses	
			F9201,F9202	252160	Δ 2.5A-UL/T-237 <D>
				252241 or	Δ 2.5A-SE-TL250V or
				252075	Δ 2.5A-SE-FAK <P/A/R/WT/GT>
				Fuse holders	
			F9211-F9214	25052133	Δ NSCT-1P2031

FL TUBE VIEW


From page 85

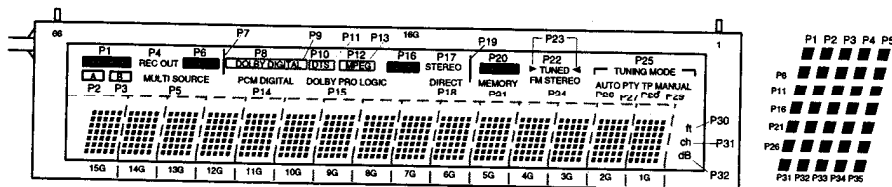


SCHEMATIC DIAGRAM DSP SECTION

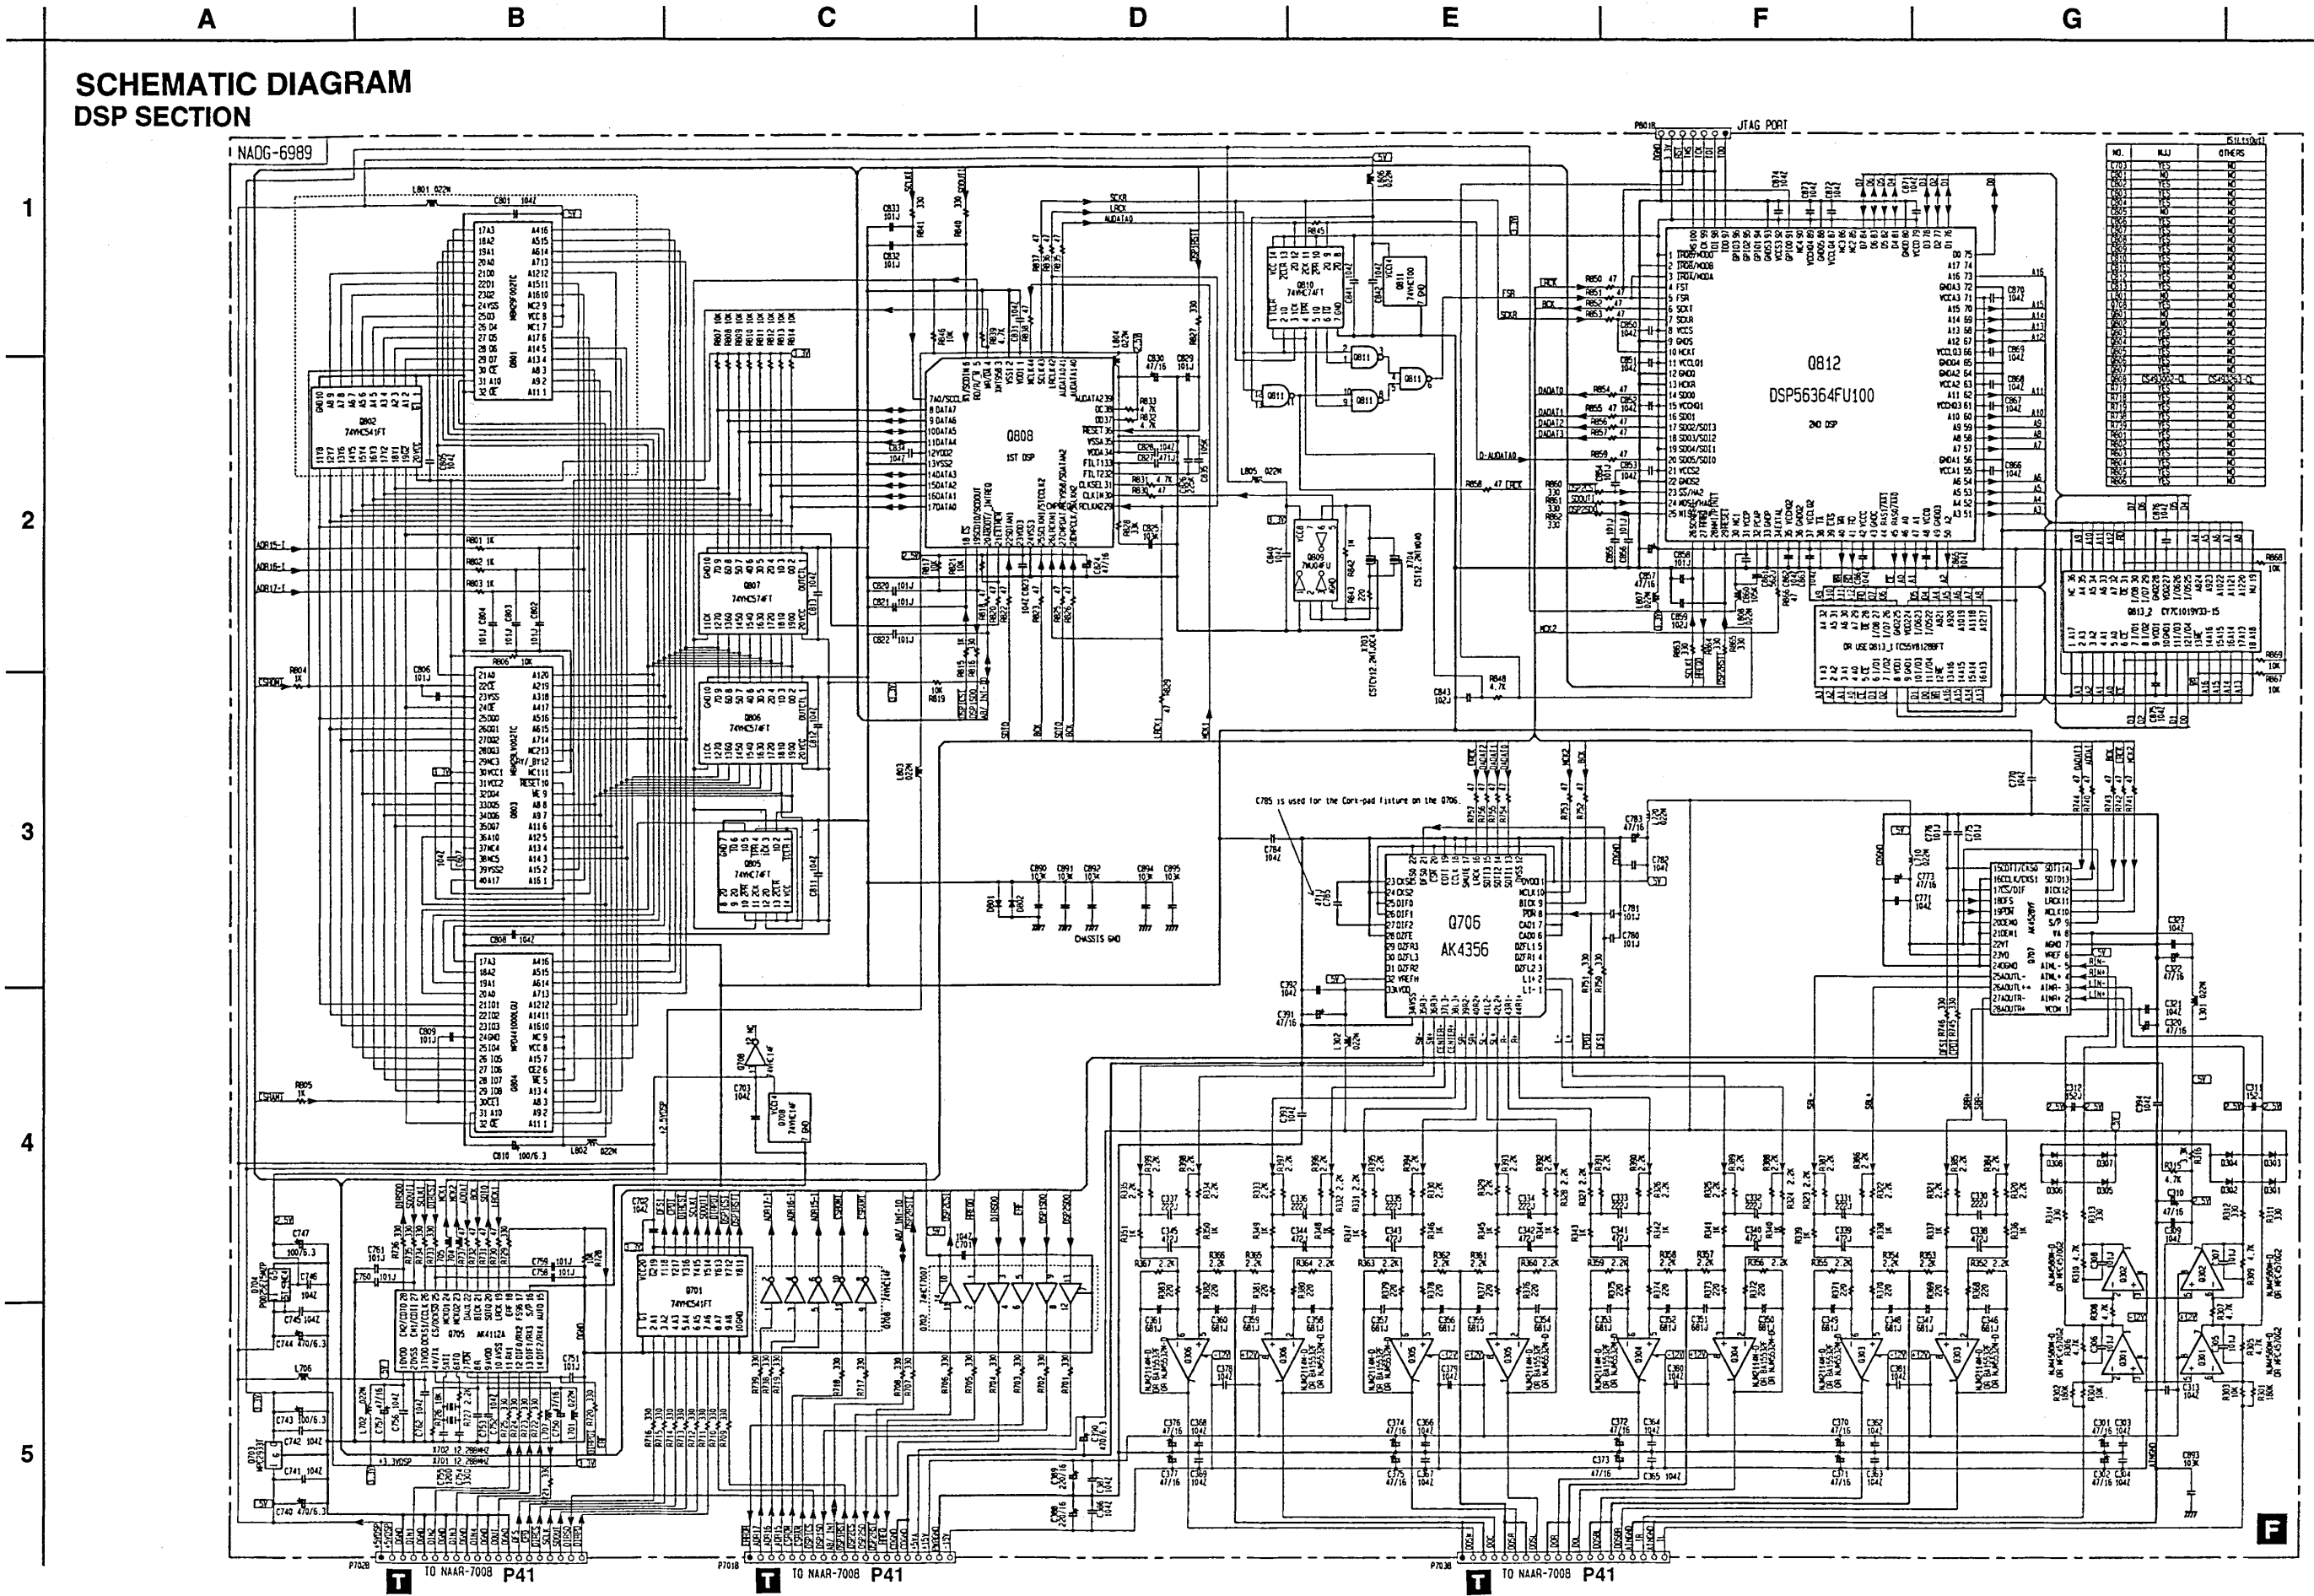

**SCHEMATIC DIAGRAM
VIDEO AUDIO SECTION**

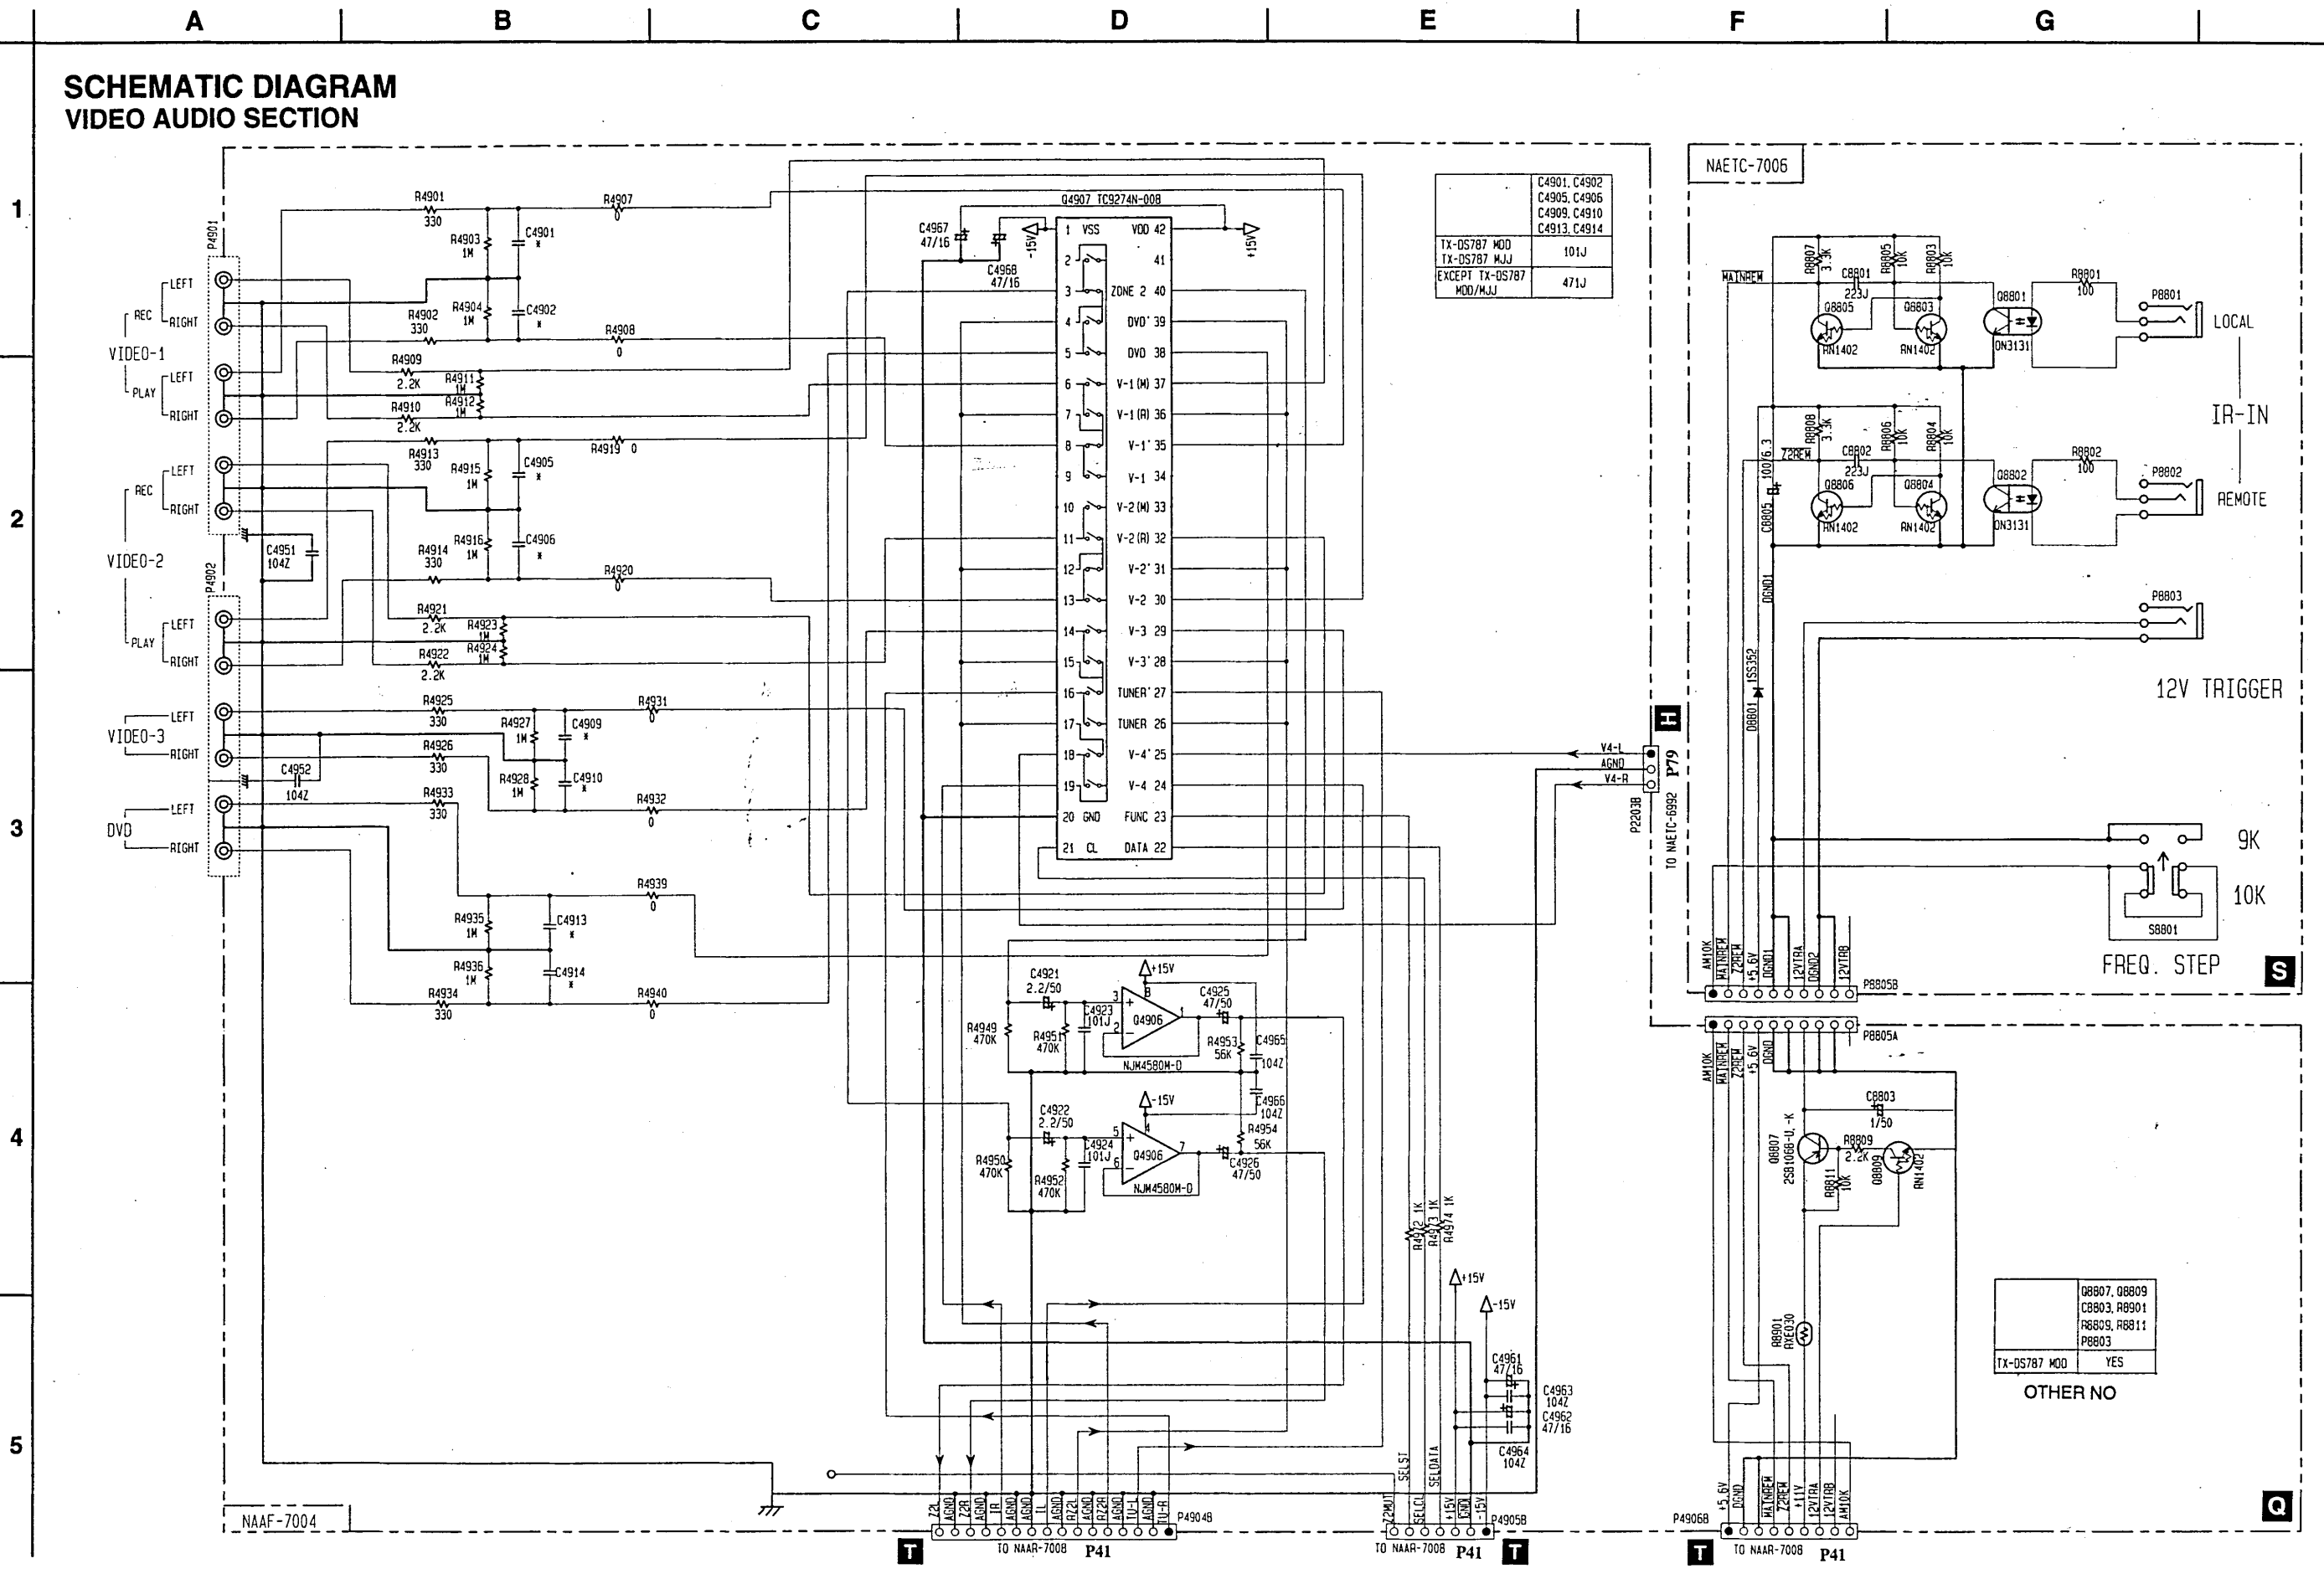

SCHEMATIC DIAGRAM
VIDEO INPUT/OUTPUT SECTION

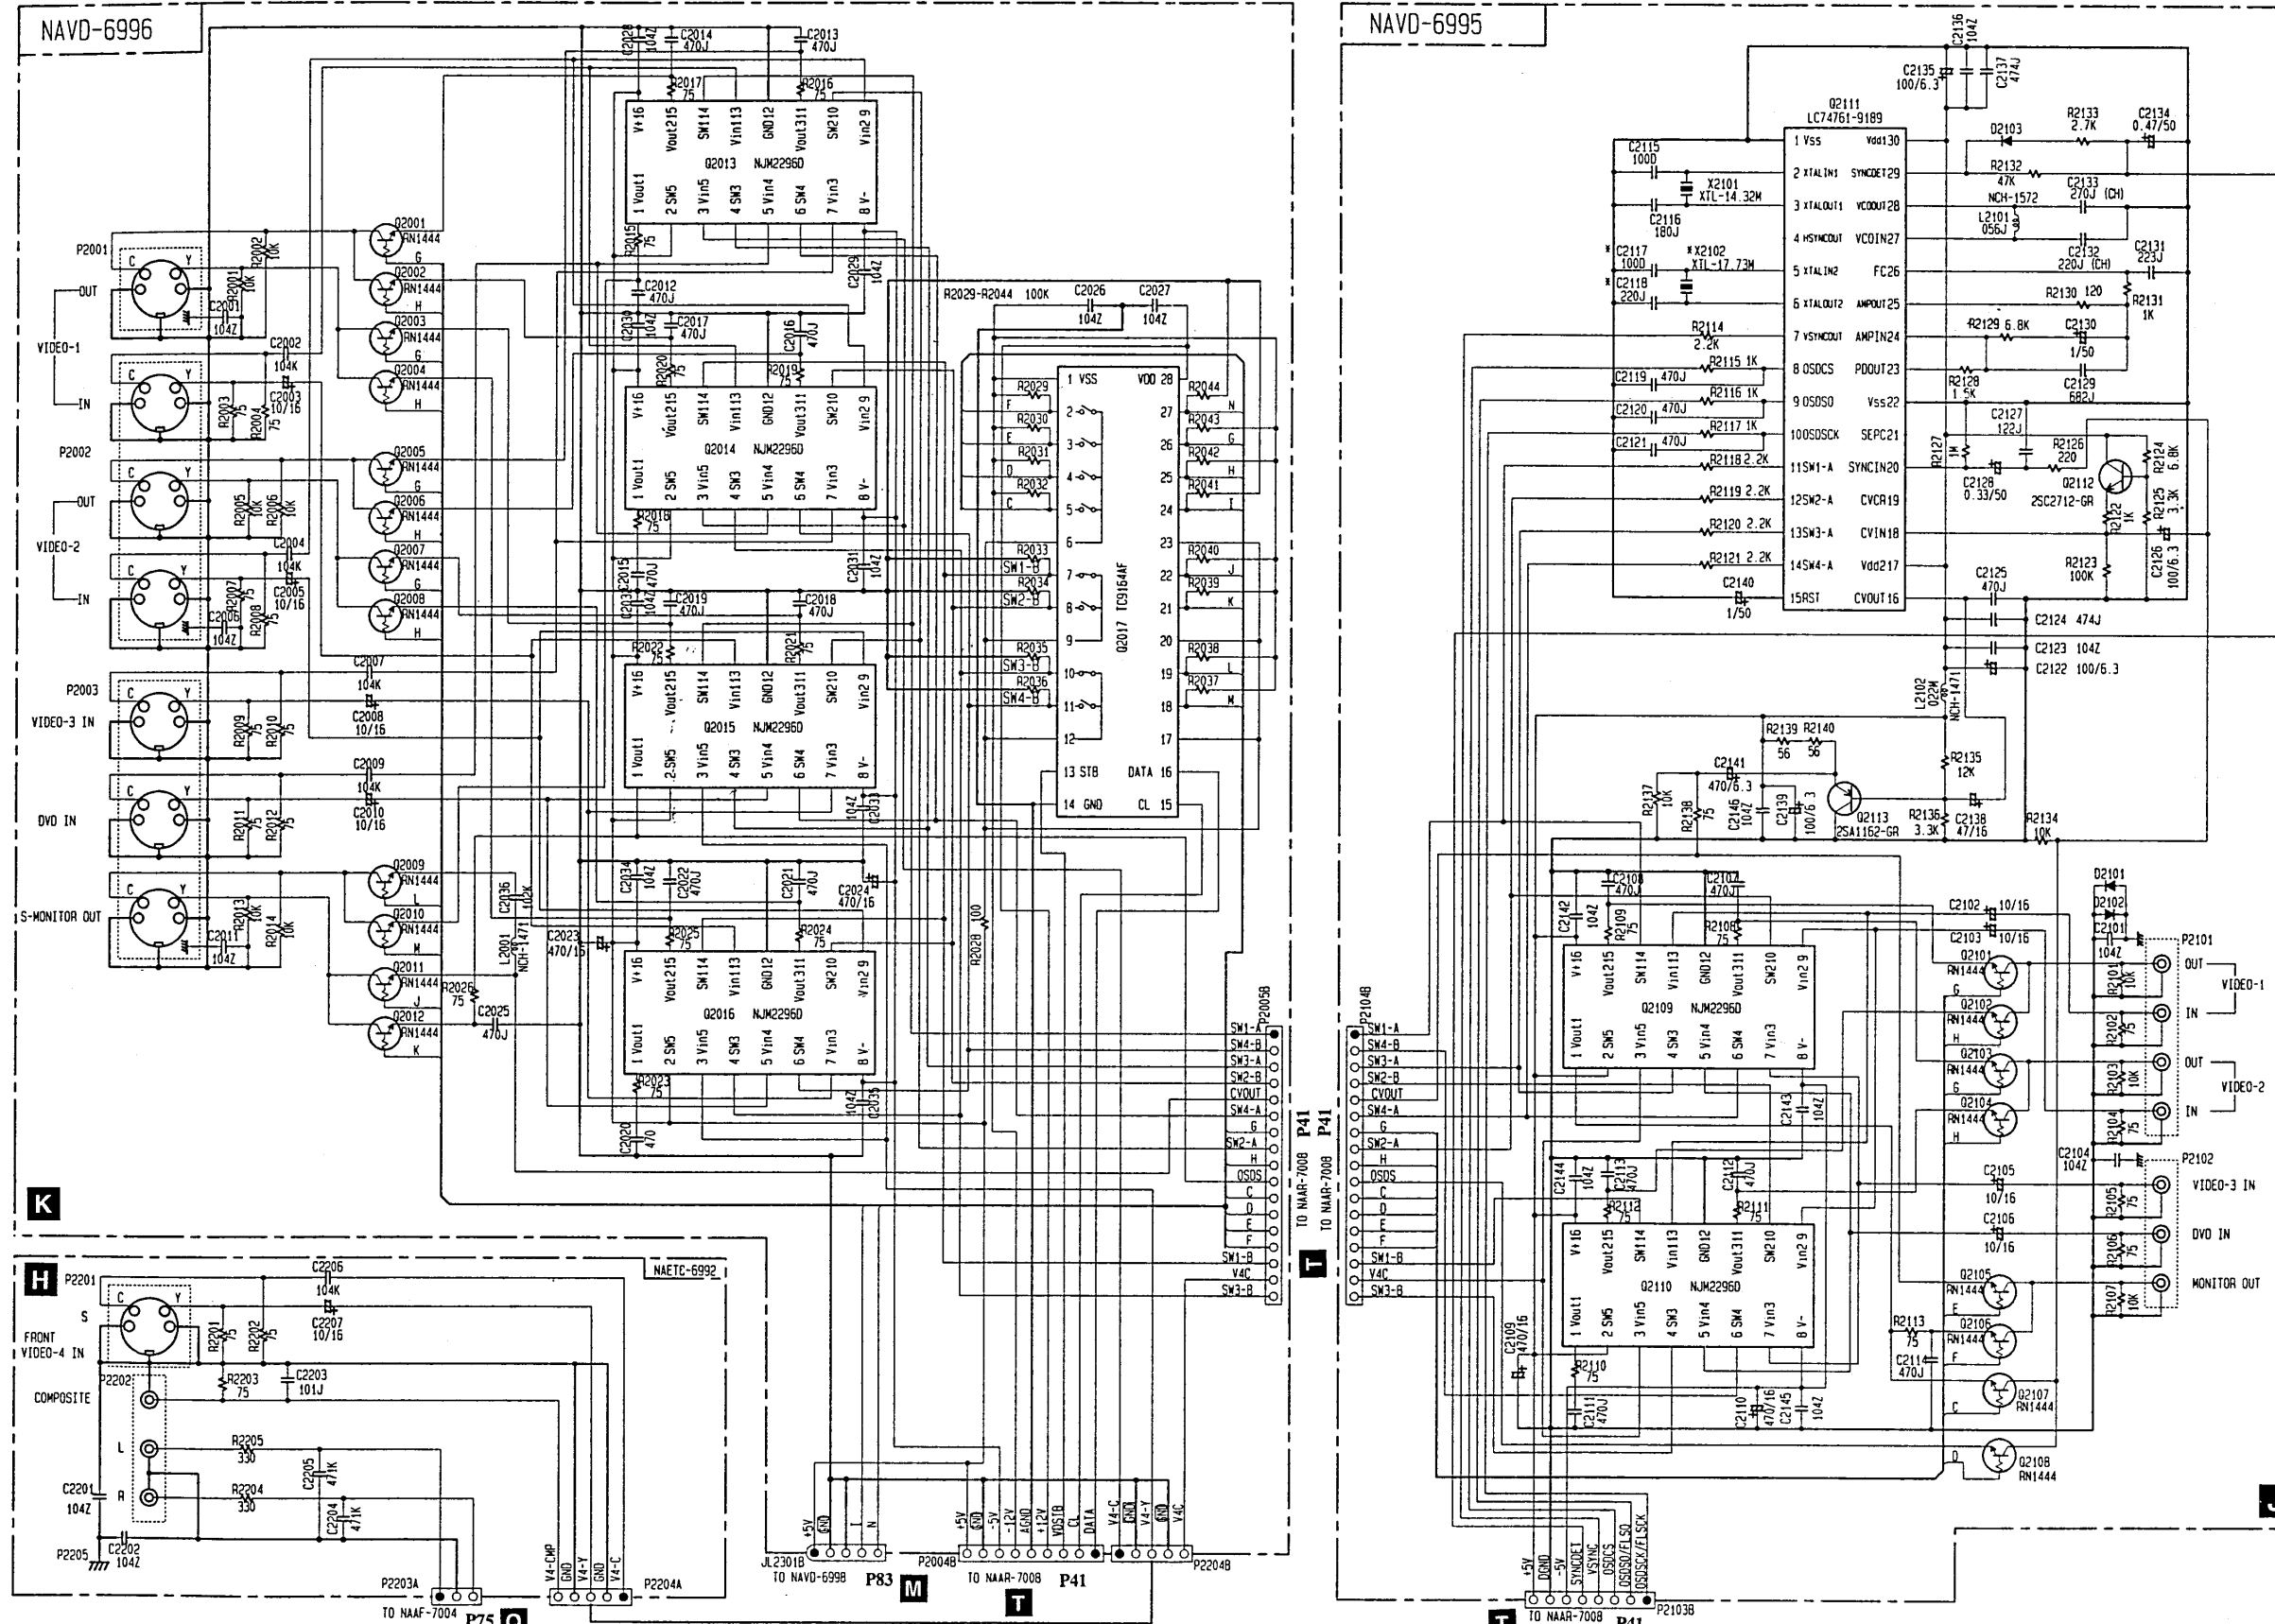

PRINTED CIRCUIT BOARD-PARTS LIST

FRONT TERMINAL PC BOARD (NAETC-6992-1A/1B/1C)

CIRCUIT NO.	PART NO.	DESCRIPTION
C2207	353741009	10 μF,16V,Elect.
P2202	25045630	NPJ-3PDB437 <D/P>
P2202	25045631	NPJ-3PDB438 <GT/WT/R/A>
P2201	25051961	NSCT-4P1748 <D/P>
P2201	25051569	NSCT-4P1356 <GT/WT/R/A>
P2203A	2009990513UL	NSAS-6P0675
P2204A	2009990434UL	NSAS-10P0578

S VIDEO TERMINAL PC BOARD (NAVD-6996-1A/1B)


CIRCUIT NO.	PART NO.	DESCRIPTION
Q2013-Q2016	22241347	NJM2296D
Q2017	22241221R2	TC9164AF
Q2109,Q2110	22241347	NJM2296D
Q2111	22241037	22241037
Q2001-Q2012	2216031R2 or	RN1444-A or
Q2101-Q2108	2216032R2	RN1444-B
Q2112	2213145R2,	25C2712-GR,
	2213143R2,	25C2712-O,
	2213144R2,	25C2712-Y,
	2216173R2,	KTC3875-O,
	2216174R2 or	KTC3875-Y or
	2216175R2	KTC3875-GR
Q2113	2214375R2,	2SA1162-GR,
	2214373R2,	2SA1162-O,
	2214374R2,	2SA1162-Y,
	2216183R2,	KTA1504-O,
	2216184R2 or	KTA1504-Y or
	2216185R2	KTA1504-GR

VIDEO TERMINAL PC BOARD (NAVD-6995-1A/1B)

CIRCUIT NO.	PART NO.	DESCRIPTION
D2101-D2103	223234R2 or	1SS352 or
	223233R1	1SS355
L2101	231292J056R2	NCH-1572
L2102	231237M022R2 or	NCH-1471 or
	231237K022R2	NCH-1471
X2101	3010167	XTL-14.32M
X2102	3010238	XTL-17.73M <P/WT/GT/A>

CIRCUIT NO.	PART NO.	DESCRIPTION
C2102,C2103	354741009	10 μF,16V,Elect.
C2105,C2106	354741009	10 μF,16V,Elect.
C2109,C2110	354744719	470 μF,16V,Elect.
C2122,C2126	354721019	100 μF,6.3V,Elect.
C2124,C2137	375524744	0.47 μF±5%,50V,Plastic
C2127	374721224	1200pF±5%,50V,Plastic
C2128	354783399	0.33 μF,50V,Elect.
C2129	374726824	6800pF±5%,50V,Plastic
C2130,C2140	354780109	1 μF,50V,Elect.
C2131	374722234	0.022 μF±5%,50V,Plastic
C2134	354784799	0.47 μF,50V,Elect.
C2135,C2139	354721019	100 μF,6.3V,Elect.
C2138	354744709	47 μF,16V,Elect.
C2141	354724719	470 μF,6.3V,Elect.

CIRCUIT NO.	PART NO.	DESCRIPTION
P2101	25045339	NPJ-4PDYE190
P2101	25045566	NPJ-4PDYE381
P2102	25045299	NPJ-3PDYE158
P2102	25045363	NPJ-3PDYE208
P2103B	25051233	NSCT-8P1023
P2104B	25051528	NSCT-17P1315
P2004A	25055705	NPLG-9P661
P2005A	25055806	NPLG-17P762

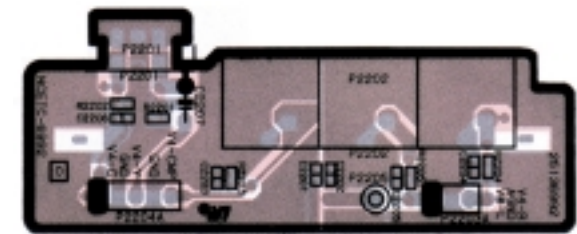

FRONT TERMINAL PC BOARD

SCHEMATIC DIAGRAM COMPONENT VIDEO SECTION

A


B

C


D

E

TX-DS787 TX-DS787

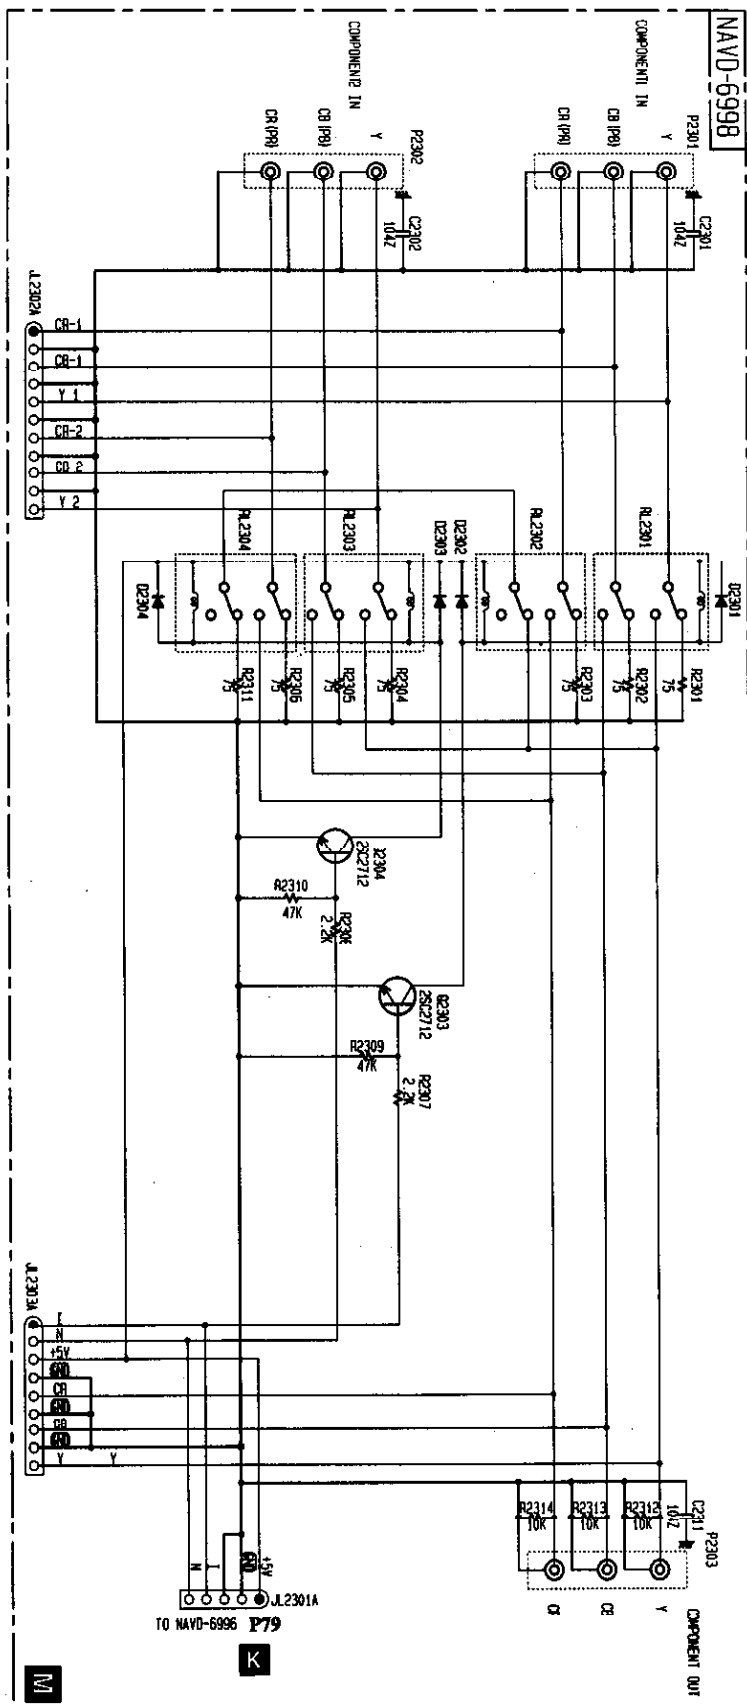

PACKING VIEW

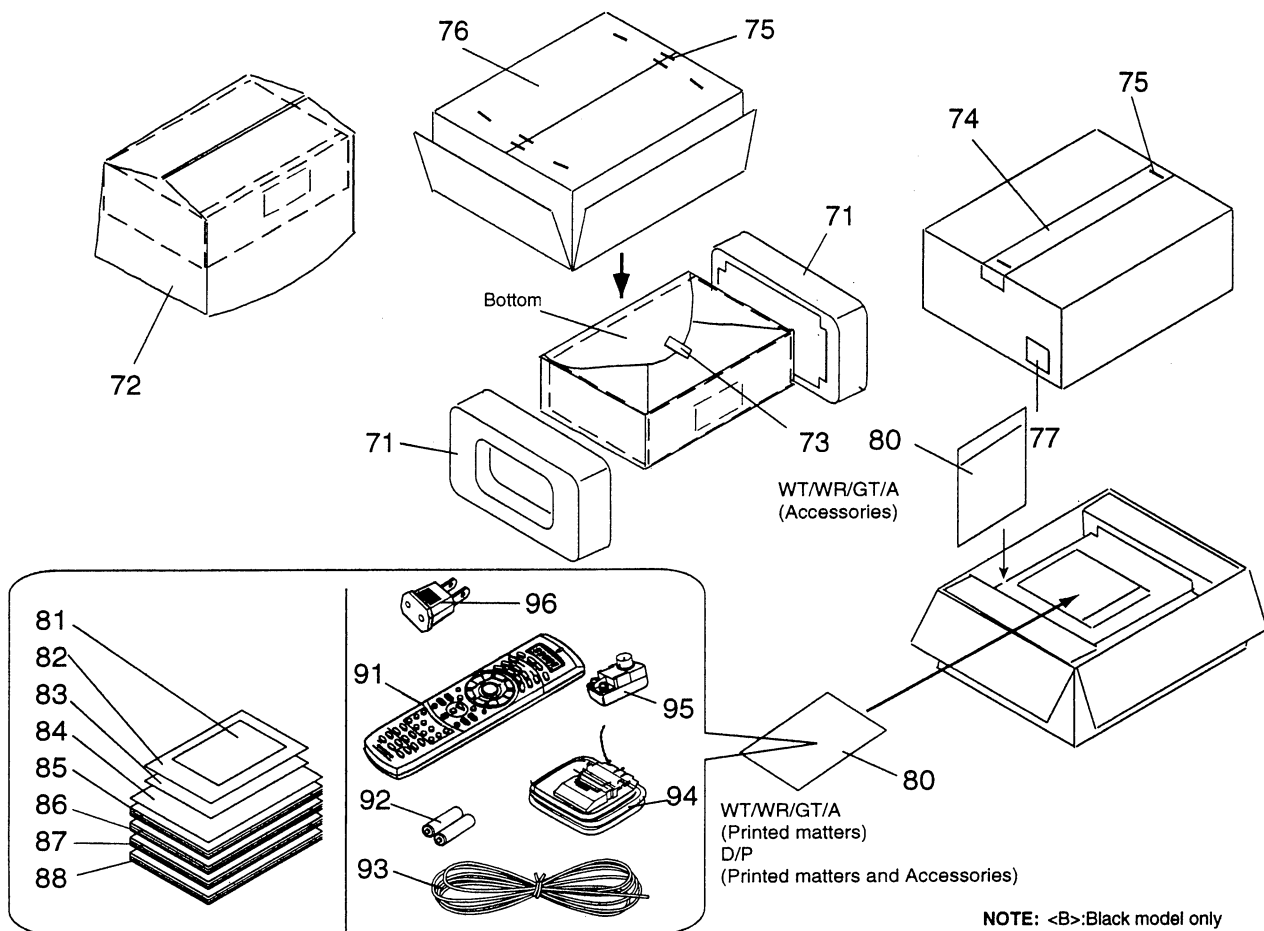

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
71	29091956	Pad	83	29342968	Instruction sheet <D>
72	29100153	1020x720,Poly-bag	84	29355349	Instruction sheet U10
73	261504	Paper tape	85	29342963A	Instruction manual E
74	29110098	PP tape	86	29342964A	Instruction manual GDSW <P>
75	282301	Staple	87	29342965A	Instruction manual FSI <P>
76	29053635	Carton box <D>	88	29342969A	Instruction manual T <WT/GT>
	29053636	Carton box <P>		29342970A	Instruction manual C <R>
	29053637	Carton box <G> <WT/A/R>	91	24140390B	RC-390M,Remote controller
	29053638	Carton box 	92	3010054	UM-3,Battery
	29053639	Carton box <S>	93	292115	FM antenna <P/WT/GT/R/A>
77	29362738	Label EAN <P/WT/A/R>		292142	FM antenna <D>
	29362739	Label EAN <S>	94	232140	NMA-3057
	29362740	Label EAN <G>	95	25065462	YAE21-0237,Antenna adapter <WT/GT/R/A>
	29362741	Label UPC <D>	96	25055018 or 25056005	CV-K-1 or CV-K-1,Conversion plug <WT>
80	29100097-1A	350*250,Poly bag			
81	29365083A	Warranty card <D>			
82	29095866	Sheet <D>			

NOTE: :Black model only
 <S>: Silver model only
 <G>: Golden model only
 <D>: 120 V model only
 <P>: European model only
 <WT>: Worldwide model only
 <GT>: 220-230 V model only
 <R>: Chinese model only
 <A>: Australian model only

ONKYO CORPORATION

Sales & Product Planning Div. : 2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN
 Tel: 072-831-8111 Fax: 072-833-5222

ONKYO U.S.A. CORPORATION
 18 Park Way, Upper Saddle River, NJ 07458, U.S.A.
 Tel: 201-785-2600 Fax: 201-758-2650 E-mail: onkyo@onkyousa.com

ONKYO EUROPE ELECTRONICS GmbH
 Industriestrasse 20, 82110 Germering, GERMANY
 Tel: 089-849-320 Fax: 089-849-3265 E-mail: info@onkyo.de

ONKYO CHINA LIMITED
 Units 2102-2107, Metroplaza Tower I, 223 Hing Fong Road, Kwai Chung,
 N.T., HONG KONG Tel: 852-2429-3118 Fax: 852-2428-9039



PN 0M3667 NS002 Printed in Japan