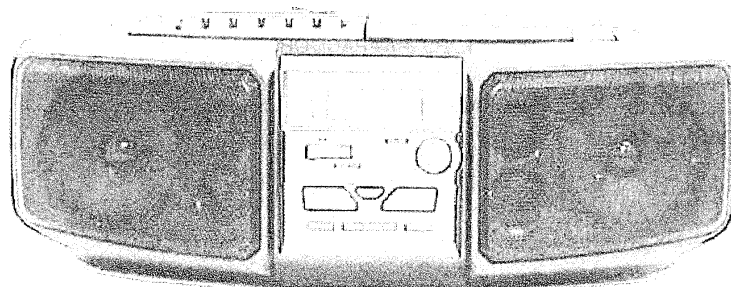


# Service Manual

Portable Stereo CD System

**MASH\***  
 multi-stage noise shaping

**COMPACT**  
**disc**  
**DIGITAL AUDIO**
**RX-DS5**
**Colour**

(S) ... Silver Type

**Area**

Suffix for Model No.	Area	Colour
(E)	Europe	(S)
(EB)	Great Britain	
(EG)	Germany and Italy	

**TAPE SECTION : SG20 Mechanism Series****CD SECTION : RAE0152Z-M Traverse Deck Series**

\* MASH is a trademark of NTT.

## ■ Specifications

### ■ RADIO

Frequency range	
FM	87.9 - 108.0 MHz (50 kHz steps)
AM	522 - 1629 kHz (9 kHz steps)
Intermediate frequency	
FM	10.7 MHz
AM	459 kHz
Sensitivity	
FM	20 dB / 0.5 mW
AM	53 dB / 0.5 mW

### ■ CD PLAYER

Sampling frequency	44.1 kHz
Decoding	16 bit linear
Beam source	Semiconductor laser (wavelength 780 nm)
No. of channels	2 channels, stereo
Wow and flutter	Less than possible measurement data
Digital filter	4 fs
D/A converter	MASH (1bit DAC)

### ■ TAPE RECORDER

Track system	4 track, 2 channel, stereo
Monitor system	Variable sound monitor
Recording system	AC bias
Erasing system	Multi Pole magnet
Tape speed	4.8 cm/s
Frequency range ( Normal position)	50 -12000 Hz

### ■ General

Speakers	10 cm 4Ω x 2
Jacks output	PHONES : 3.5 mm stereo (32 Ω)
Power consumption	11 W
Power supply	
AC	230 - 240 V, 50 Hz
Batteries	9 V (Six R20/LR20,D,UM-1 batteries)
Memory back-up	•Do not use rechargeable type batteries.
	6 V (Four R6/LR6, AA,UM-3 batteries)
	•Do not use rechargeable type batteries.
Dimensions (W x H x D)	456 x 167 x 266 mm
Weight	3.1 kg without batteries

**Notes :** Specifications are subject to change without notice. Weight and dimensions are approximate.

### ⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.


**Panasonic®**

© 1998 Matsushita Electronics (S) Pte. Ltd.  
 All rights reserved. Unauthorized copying  
 and distribution is a violation of law.


## Contents

	PAGE		PAGE
• ACCESSORIES .....	2	• TERMINAL FUNCTION OF IC's .....	14 ~16
• HANDLE PRECAUTIONS FOR TRAVERSE DECK .....	2	• SCHEMATIC DIAGRAM .....	17 ~ 23
• PRECAUTION OF LASER DIODE .....	3	• PRINTED CIRCUIT BOARD .....	24 ~ 26
• CAUTION FOR AC MAINS LEADS .....	4	• WIRING CONNECTION DIAGRAM .....	27
• LOCATION OF CONTROLS .....	5	• TROUBLESHOOTING GUIDE .....	28
• PRESETTING RADIO BROADCASTS .....	5	• MECHANISM PARTS LIST .....	29
• LISTENING TO RADIO BROADCASTS .....	6	• MECHANISM PARTS LOCATION .....	30
• LISTENING TO CDS .....	7~8	• CABINET PARTS LOCATIONS .....	31
• LISTENING TO TAPES .....	9	• REPLACEMENT PARTS LIST .....	32 ~ 33
• BEFORE RECORDING & RECORDINGS .....	10	• RESISTORS & CAPACITORS .....	33 ~ 35
• OPERATION CHECKS .....	11 ~12	• PACKING MATERIALS & ACCESSORIES .....	36
• MEASUREMENTS AND AJUSTMENTS .....	13	• PACKAGING .....	36
• TERMINAL GUIDE OF IC's TRANSISTORS AND DIODES .....	14		

## Accessories

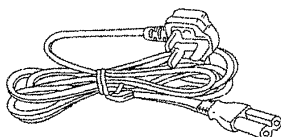

AC power cord for  
United Kingdom



AC power cord for  
Others

## Handling Precautions for Traverse Deck

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body. So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

### Handling of traverse deck (optical pickup)

1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
2. The short land between the No.4 (LD) and No.5 (GND) pins on the flexible boards (FPC) is shorted with a solder build-up to prevent damage to the laser diode.

To connect to the PC board, be sure to open by removing the solder build-up, and finish the work quickly.

3. Take care not to apply excessive stress to the flexible board (FFC board).

4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

### Grounding for electrostatic breakdown prevention

1. Human body grounding


Use the anti-static wrist strap to discharge the static electricity from your body.

2. Work table grounding

Put a conductive material (sheet) or steel sheet on the area where the traverse deck (optical pickup) is placed, and ground the sheet.

### Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

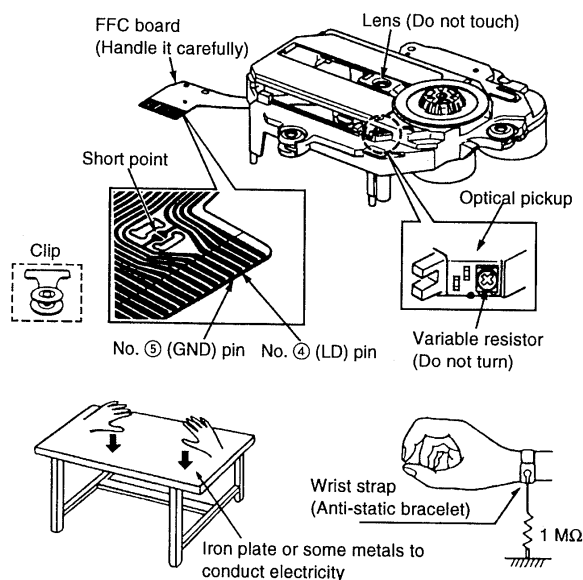

## ■ Precaution of Laser Diode

**CAUTION:** This product utilizes a laser diode with the unit turned "ON", invisible laser radiation is emitted from the pick up lens.

Wavelength: 780 nm

Maximum output radiation power from pick up: 100μW/VDE

Laser radiation from pick up unit is safety level, but be sure the followings:

1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pick up unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

**ACHTUNG:** Dieses produkt enthält eine laserdioden. Im eingeschalteten zustand wird unsichtbare laserstrahlung von der lasereinheit abgestrahlt.

Wellenlänge : 780nm

Maximale strahlungsleistung der lasereinheit : 100μ W/VDE

Die strahlung an der lasereinheit ist ungefährlich, wenn folgende punkte beachtet werden:

1. Die lasereinheit nicht zerlegen, da die strahlung an der freigelegten laserdioden gefährlich ist.
2. Den werkseitig justierten einstellregler der lasereinheit nicht verstellen.
3. Nicht mit optischen instrumenten in die fokussierlinse blicken.
4. Nicht über längere zeit in die fokussierlinse blicken.


**ADVASEL:** I dette a apparat anvendes laser.

### CAUTION!


THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

## ■ Use of Caution Labels

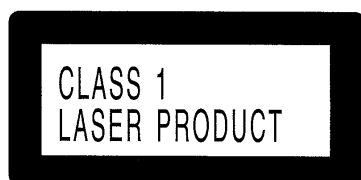

**LUOKAN 1 LASERLAITE  
KLASS 1 LASER APPARAT**

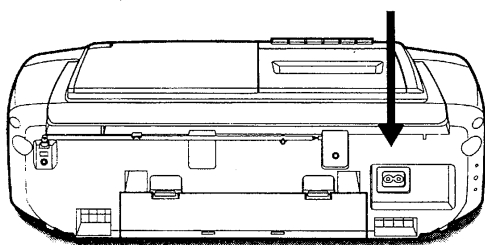

DANGER	INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.	(Inside of product)
ADVASEL	USYNLIG LASERSTRÅLING VED ÅBNING. NÅR SIKKERHEDSÅFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.	(Indersiden af apparatet)
VARO!	AVATTAESSA JA SUOJALUKUTUS OHITETTAESSA OLET ALTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESSEEN.	(Tuotteen sisällä)
VARNING	OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÅRREN ÄR UTKOPPLAD. BETRÄKTA EJ STRÅLEN.	(Apparatens insida)
ADVASEL	USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.	(Produktets innside)
VORSICHT	UNISICHTBARE LASERSTRABUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.	(Im Inneren des Gerätes)

## ■ Caution for AC Mains Lead

### (For United Kingdom)



(For "EB" area code model only.)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover, the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

#### CAUTION !

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OFF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

#### IMPORTANT


The wires in this mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

**WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW.**

**THIS PLUG IS NOT WATERPROOF—KEEP DRY.**

#### Before use

Remove the connector cover.

#### How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

Figure A


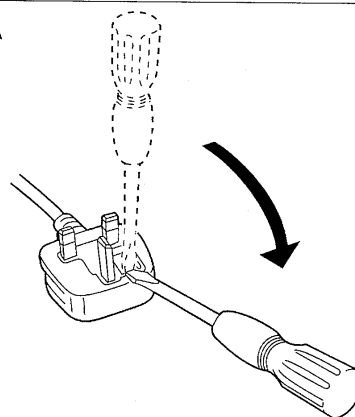


Figure B

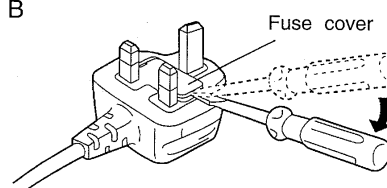

2. Replace the fuse and close or attach the fuse cover.

Figure A


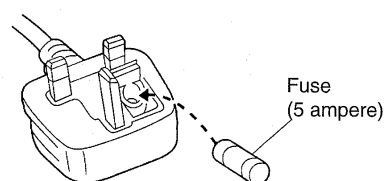


Figure B

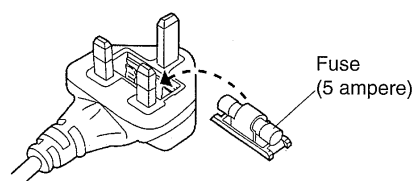

## Location of Controls

A	Number	Designation
---	--------	-------------

- ① Deck (Recording/playback)
- ② Recording button (● **REC**)
- ③ Playback button (▶ **PLAY**)
- ④ Rewind/review button (◀◀ **REW/REV**)
- ⑤ Fast forward/cue button (▶▶ **FF/CUE**)
- ⑥ Stop/eject button (■ **STOP/EJECT**)
- ⑦ Pause button (⏸ **PAUSE**)
- ⑧ CD lid
- ⑨ CD lid open button (⏏ **CD**)

B	Designation
---	-------------

- ⑩ Display panel
- ⑪ Function selector (**SELECTOR**)  
The function selector switch does not separate entire unit from mains even if in "TAPE/CD" position.

- ⑫ XBS button (XBS)
- ⑬ CD stop/program clear, stereo/monaural button (■ **CLEAR**, FM MODE)
- ⑭ Tuning mode, CD play mode select button (TUNE MODE, CD PLAY MODE)
- ⑮ Tuning/CD skip, search buttons (◀◀ **FM**, ▶▶ **FM**)
- ⑯ CD program, tuner preset button (MEMORY)
- ⑰ CD play/pause, band select button (▶ **FM**, BAND)
- ⑱ Volume control (**VOLUME**)
- ⑲ Speaker

## Changing the sound quality


### Adjusting the deep-bass (XBS)

When the XBS level control is adjusted, the level of the dynamic low frequency sound range is boosted.


#### Press [XBS].

Every time you press the button: XBS ↔ OFF


A

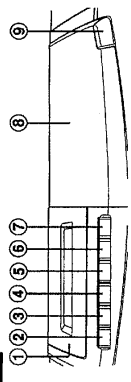

B

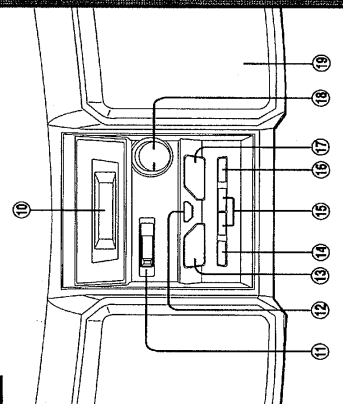

C

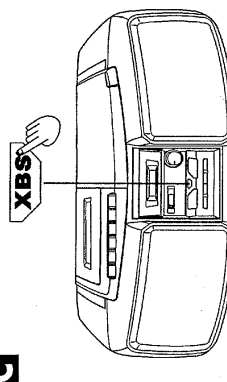

## Presetting Radio Broadcasts

- Up to ten FM and AM stations each can be programmed.
- If broadcast frequencies are preset in the memory, you can easily tune in any of these frequencies.
- You can preset just those stations you like.

### 1 Set [SELECTOR] to "TUNER".

### 2 Press [BAND] to select "FM" or "AM".

Every time you press the button: FM ↔ AM

### 3 Press [MEMORY].

"PCM" and the frequency flash.

### 4 While "PCM" and the frequency are flashing: Press [◀◀] or [▶▶] to select the desired station.

"ST" lights when an FM stereo program is being received.

#### Reference

You can select the desired broadcast by using "Automatic tuning".

### 5 Press [MEMORY].

"PCM" and the preset channel number flash.

### 6 While "PCM" and the preset channel number are flashing: Press [◀◀] or [▶▶] to select the preset channel.

### 7 Press [MEMORY].

If the "PCM" indicator goes off during programming, return to step 3.

### 8 Repeat steps 3 to 7 to program other stations.

To listen through headphones (not included)


Turn down the volume and connect the headphones to the [PHONES] jack.

Plug type : 3.5 mm stereo

#### NOTE

Avoid listening for prolonged periods of time to prevent hearing damage.

A

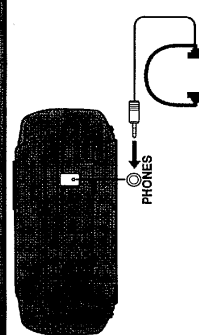

## Listening to Radio Broadcasts

### A Listening to programmed stations (Preset tuning)

Make sure you have completed the procedure for "Presetting radio broadcasts".

- 1 Set [SELECTOR] to "TUNER".
- 2 Press [BAND] to select "FM" or "AM".  
Every time you press the button: FM ↔ AM.
- 3 Press [TUNE MODE] to display the preset indicator.  
The unit is set to the preset tuning mode.
- 4 Press [←/→] or [↔] to select the preset channel.
- 5 Adjust the volume.

### B Listening to broadcast stations which have not been programmed (Manual tuning)

- 1 Set [SELECTOR] to "TUNER".
- 2 Press [BAND] to select "FM" or "AM".  
Every time you press the button: FM ↔ AM.
- 3 Press [TUNE MODE] to clear the preset indicator.  
The unit is set to the manual tuning mode.
- 4 Press [←/→] or [↔] to tune in the station.
- 5 Adjust the volume.

#### Automatic tuning:

This is a simple way of tuning in stations that have not been preset. Keep [←/→] or [↔] depressed, and release it when the frequency display starts to change. A station with good reception is automatically selected and the selection process then stops.

To stop automatic tuning, press [←/→] or [↔] again.



#### Tip

Automatic tuning may stop without a station having been tuned in when interference is encountered on neighbouring airwaves. In such a case, tune in a station by tapping [←/→] or [↔].

#### To turn off the unit:

Set [SELECTOR] to "TAPE/CD".

If the tape is travelling, press [STOP/EJECT] as well.

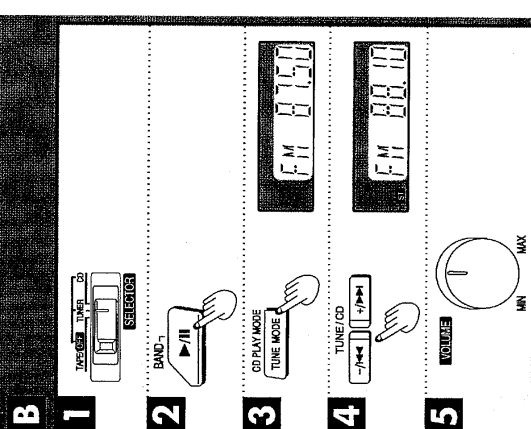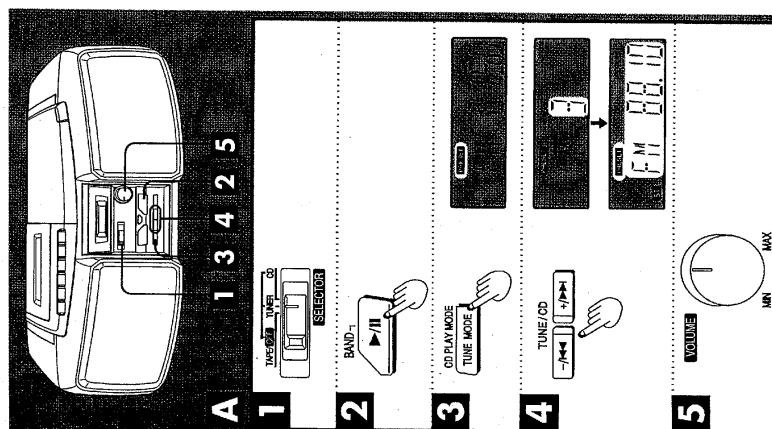

### Adjusting the antennas A

#### For FM reception:

Pull out the telescopic antenna and adjust its length and angle for optimum reception.

#### For AM reception:

Turn the unit in the direction which gives the best results.

#### Reference

Radio broadcasts may be hard to receive in a moving vehicle or in a building because the signal may be weakened. In such cases, use the unit near a window.

### When there is a lot of noise in an FM stereo broadcast B

Reduce the interference by setting the sound to monaural.

#### Example:

When an FM stereo program is being received;

Press [FM MODE].

"MONO" is displayed.

To return to stereo reception, repeat the same procedure to turn off the "MONO" display.

## Listening to CDs

### Sequential play

- 1 Set [SELECTOR] to "CD".  
"NO DISC" appears when no CD is loaded.
- 2 Press [▲ CD], then insert the CD.
- 3 Press [••• CLOSE] to close the CD lid by hand.  
The total number of tracks and total play time of the CD are displayed.
- 4 Press [▶/II] to start play.  
Play starts from the first track and continues to the last track, after which it automatically stops.
- 5 Adjust the volume.

#### To stop the disc:

Press [■/CLEAR].

To pause	Press [▶/II] during playback. To resume playback, press [▶/II].
To search forward/backward	Hold down [◀◀◀] (backward) or [▶▶▶] (forward) during playback or pause mode.
To skip forward/backward	Press [◀◀] (backward) or [▶▶] (forward).

#### Notes

- If interference occurs to radios or televisions, place the unit as far as possible from this equipment.
- Do not press [▲ CD] during play, pause or immediately after when you inserted the CD and closed the CD tray. CD may be scratched.

#### To prevent damage **A**

Do not use irregular shape CDs.

#### To turn off the unit:


Set [SELECTOR] to "TAPE/OFF".

If the tape is travelling, press [■/▲ STOP/EJECT] as well.

### Repeat play and random play

Press [CD PLAY MODE] before or during play. **B**

Every time you press the button:



Press [▶/II] to begin play if you are in the stop mode.

#### To repeat just one track:

Press [CD PLAY MODE] to select "1-[CD]".

#### To repeat all tracks:

Press [CD PLAY MODE] to select "[CD]".

#### To start random play:

Press [CD PLAY MODE] to select "[RANDOM]".

All tracks on the loaded CD will be played in random order. Playback will stop automatically when all tracks have been played.

#### To cancel repeat play and random play:


Press [CD PLAY MODE] to clear "1-[CD]", "[CD]" and "[RANDOM]". Pressing [▲ CD] also cancels repeat function and random function.


#### To repeat programmed tracks:

1. Program desired tracks (steps 1 to 4 on page 9).
2. Press [CD PLAY MODE] to display "[CD]".
3. Press [▶/II] to begin play.

#### Notes

- During random play, you cannot skip to tracks which have already been played.
- During random play, you can search forward or backward only within the current track.
- Random play cannot be used in combination with program play.

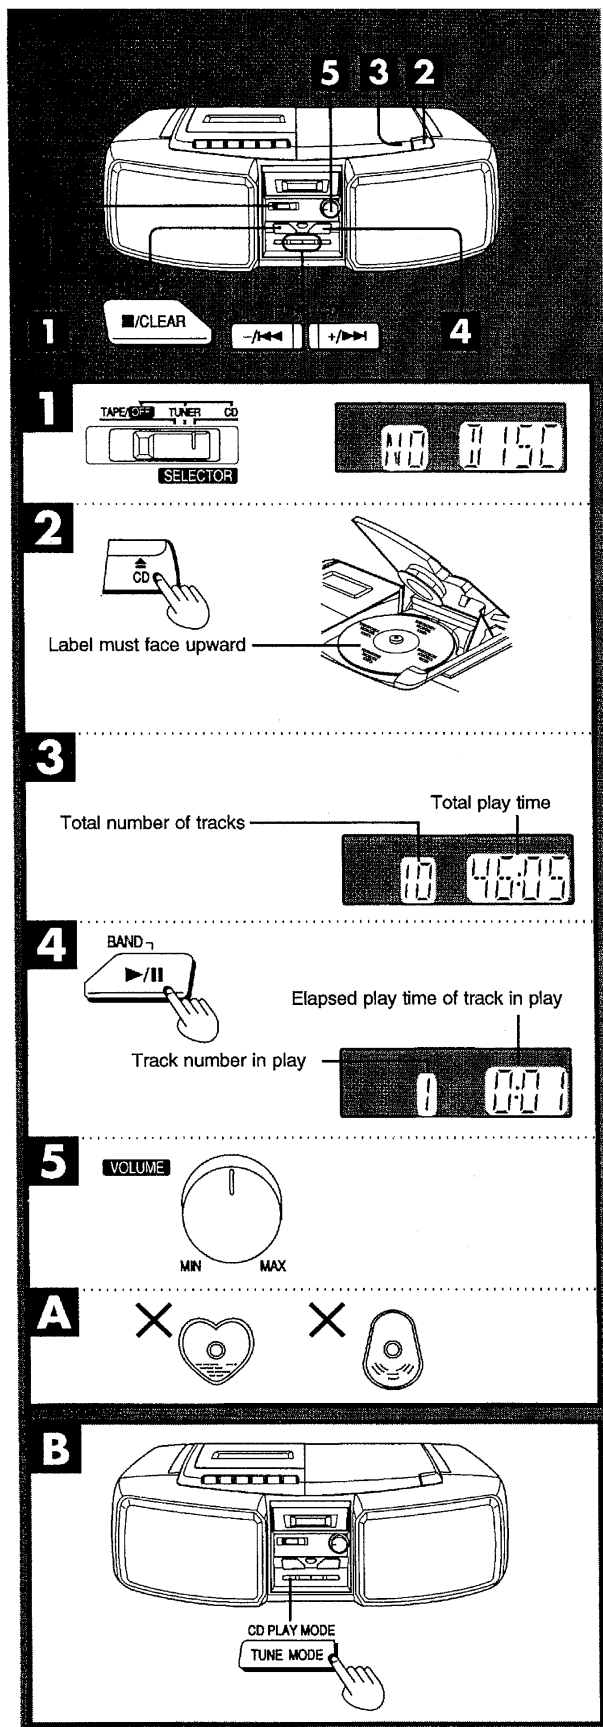

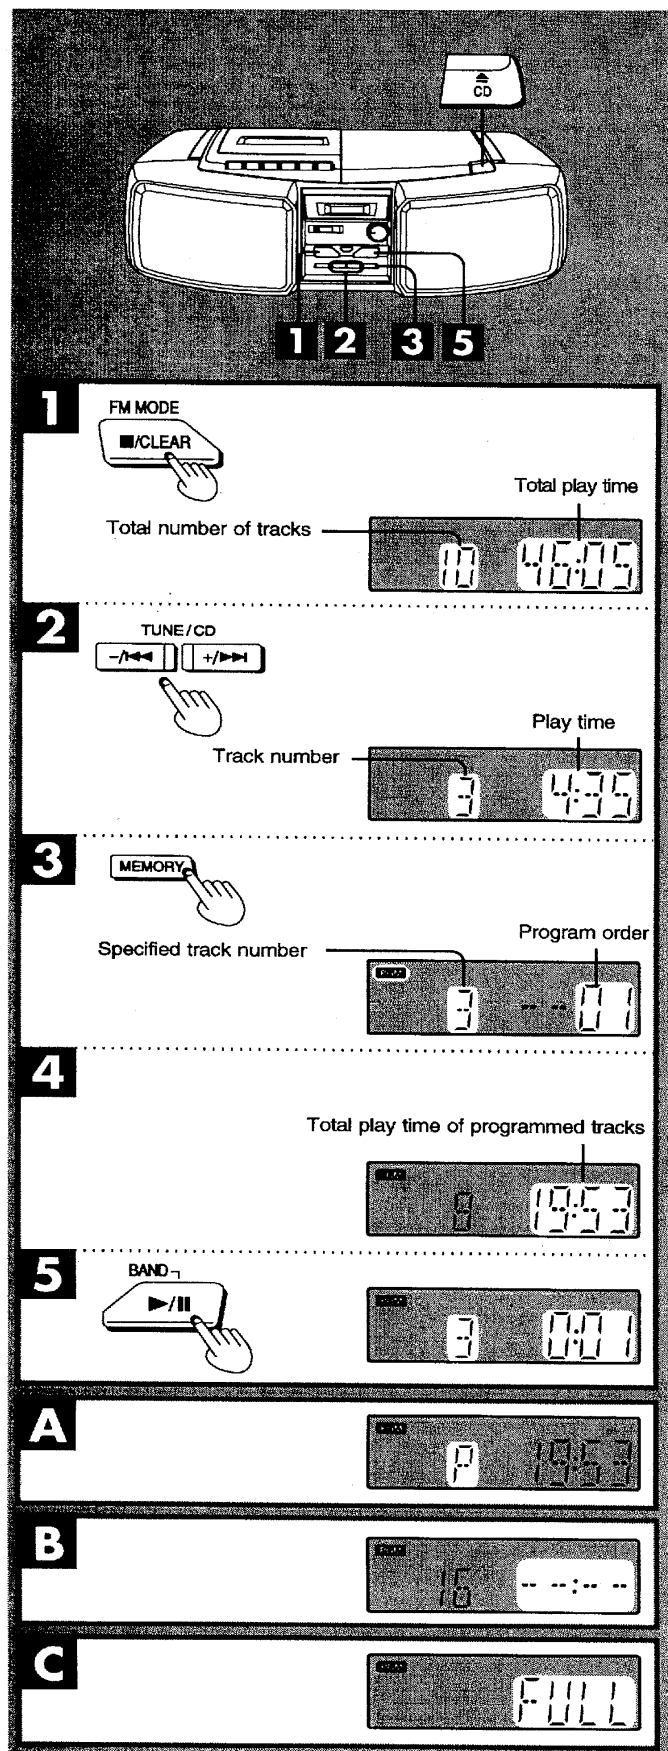

## Listening to CDs

### Program play

You can program up to 24 tracks.

#### Before operation:

- Set [SELECTOR] to "CD".
- Program play cannot be used in combination with random play. When "RANDOM" is displayed, press [CD PLAY MODE] to clear the display.

- 1 Press [■/CLEAR].**  
The total number of tracks and total play time of the CD are displayed.
- 2 Press [-/◀◀] or [+/▶▶] to select the desired track.**
- 3 Press [MEMORY].**  
"PGM" is displayed.
- 4 Repeat steps 2 and 3 until you have programmed all the tracks you want.**
- 5 Press [▶/II].**  
Play will start in the programmed sequence.

When all programmed tracks have been played, "P" and the total play time will be displayed. **A**

#### To cancel program play:

Press [■/CLEAR] in the stop mode to display "CLR". Pressing [▲ CD] will cancel program function.

#### When "--:--" appears: **B**

This means that the total play time of the programmed tracks has exceeded 100 minutes. Tracks can still be programmed and played.

#### When "FULL" appears: **C**

The number of programmed tracks is limited to 24. No further tracks can be programmed.

#### To check what has been programmed:

Press [-/◀◀] or [+/▶▶] when "P" is displayed at the end of the program play. The display will show the track number and programmed sequence.

#### Memory retention of programmed tracks:

The memory retains the program even if play is stopped or the unit is turned off.

#### Notes

- During program play, you can search forward or backward only within the current track.
- During program play, skipping is always in the programmed order, whether forward or backward.



## Listening to Tapes

Type of tapes which can be played on this unit:

Normal position/TYPE I	○
High position/TYPE II	×
Metal position/TYPE IV	×

This unit will not be able to do full justice to characteristics of high-position tapes and metal position tapes even if they are played back.

- 1** Set [SELECTOR] to "TAPE/OFF".
- 2** Press [■/▲ STOP/EJECT], load the tape and close the tape lid.
- 3** Press [▶ PLAY] to start play.
- 4** Adjust the volume.

**To stop play:**

Press [■/▲ STOP/EJECT].

**To stop play temporarily:**

Press [|| PAUSE].

**To resume play:**

Press [|| PAUSE] again.

The unit's power is on in the pause mode. Stop tape and turn the unit off by pressing [■/▲ STOP/EJECT] when leaving the unit.

### To fast-forward or rewind the tape **A**

Press [◀◀ REW/REV] or [▶▶ FF/CUE] in the stop mode.

To rewind	To fast-forward
◀◀ REW/REV	▶▶ FF/CUE

#### Note

Do not press [▶ PLAY] when rewinding or fast forwarding, as this may jam the tape.

Be sure to press [■/▲ STOP/EJECT] before the next operation.


### To find a particular spot on a tape **A**


Press [◀◀ REW/REV] or [▶▶ FF/CUE] during playback. Tape play is resumed when the button is released.

To search backward	To search forward
◀◀ REW/REV	▶▶ FF/CUE









#### Full auto-stop:

The automatic stop system will release the buttons when the tape reaches the end during play or when recording, fast forwarding or rewinding.

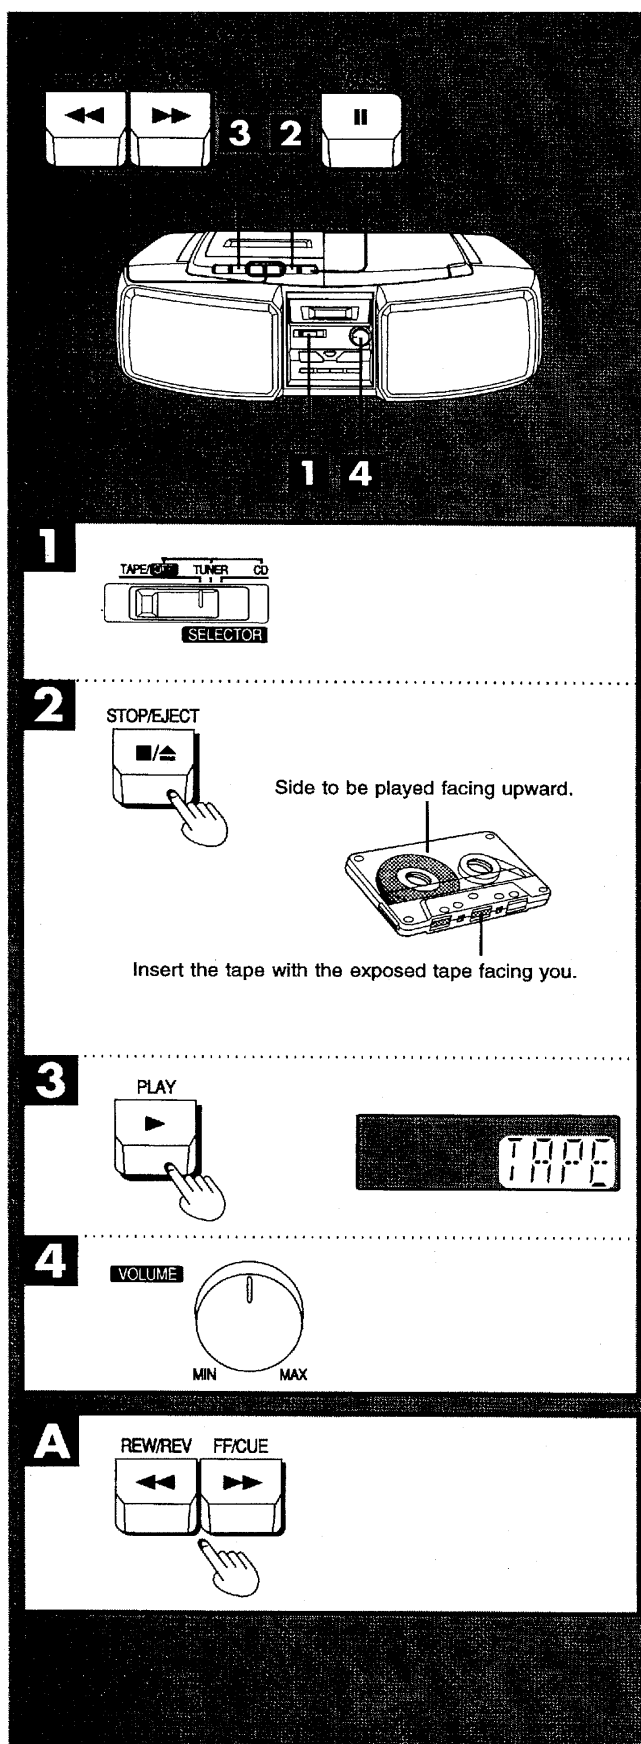

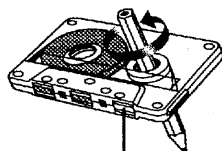**A**

Leader tape  
(Recording cannot be made.)

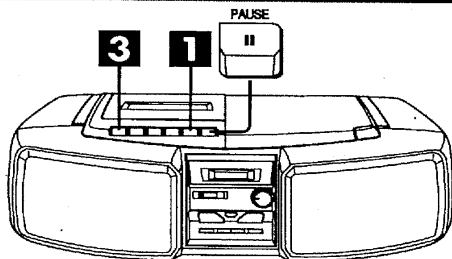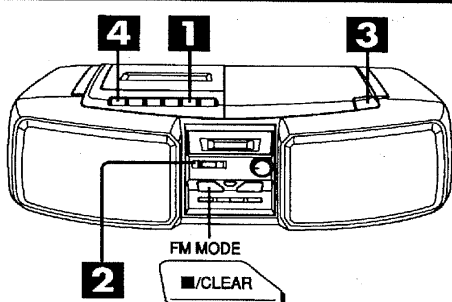**B****1****3****C****1****2****3****4**

## Before Recording & Recordings

### To take up the leader tape: **A**

Only normal tapes can be used.

The sound may not be recorded properly if high position tapes and metal position tapes are used with this unit.

### References

- Any changes made to the volume or sound quality during recording will not affect the recording.
- In order to prevent trouble caused by flat batteries, it is recommended that you either supply power to the unit from the household AC outlet or replace all the batteries with new ones when you are recording something which is important to you.
- The recording level is set automatically.

### Note

If the unit is brought near a TV set during recording, noise may be recorded due to the effects of the signals from the TV set. Maintain a distance of at least 1.5 metres between the unit and a TV set.

### To make a blank tape:

1. Load the recorded tape with the side to be erased facing upward.
2. Set [SELECTOR] to "TAPE/OFF".
3. Press [● REC].  
[▶ PLAY] is also depressed with [● REC].

Your attention is drawn to the fact that recording pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

## Recording from radio broadcasts **B**

- 1** Press [■/▲ STOP/EJECT] and load the tape.  
Load the tape with the side to be recorded facing upward.
- 2** Tune in the station.
- 3** Press [● REC] to start recording.  
[▶ PLAY] is also depressed with [● REC].

### To stop the recording:

Press [■/▲ STOP/EJECT].

### To stop the recording temporarily:

Press [|| PAUSE].

To resume recording, press [|| PAUSE] again.

## Recording from CDs **C**

- 1** Press [■/▲ STOP/EJECT] and load the tape.  
Load the tape with the side to be recorded facing upward.
- 2** Set [SELECTOR] to "CD".
- 3** Press [▲ CD] and insert the CD.  
The total number of tracks and total play time of the CD are displayed.
- 4** Press [● REC] to start recording.  
[▶ PLAY] is also depressed with [● REC].  
CD play starts simultaneously.

### To stop the recording:

Press [■/CLEAR] and [■/▲ STOP/EJECT].

### Recording favourite tracks

1. Program desired tracks (refer to steps **2** to **4** on page 9) after step **3**.
2. Press [● REC] to start recording.  
[▶ PLAY] is also depressed with [● REC].

## ■ Operation Checks

**"ATTENTION SERVICER"** Some chassis components may have sharp edges. Be careful when disassembling and servicing.

1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
2. For reassembly after operation checks or replacement, reverse the respective procedures.  
Special reassembly procedures are described only when required.
3. Select items from the following index when checks or replacement are required.


### • Contents

	page
• Checking Procedure For Each Major P.C.B. ....	11 ~12

**Warning** : This product uses a laser diode. Refer to caution statement on page 3.

**ACHTUNG** : • Die lasereinheit nicht zerlegen.  
• Die lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

## ■ Checking Procedure For Each Major P.C.B.

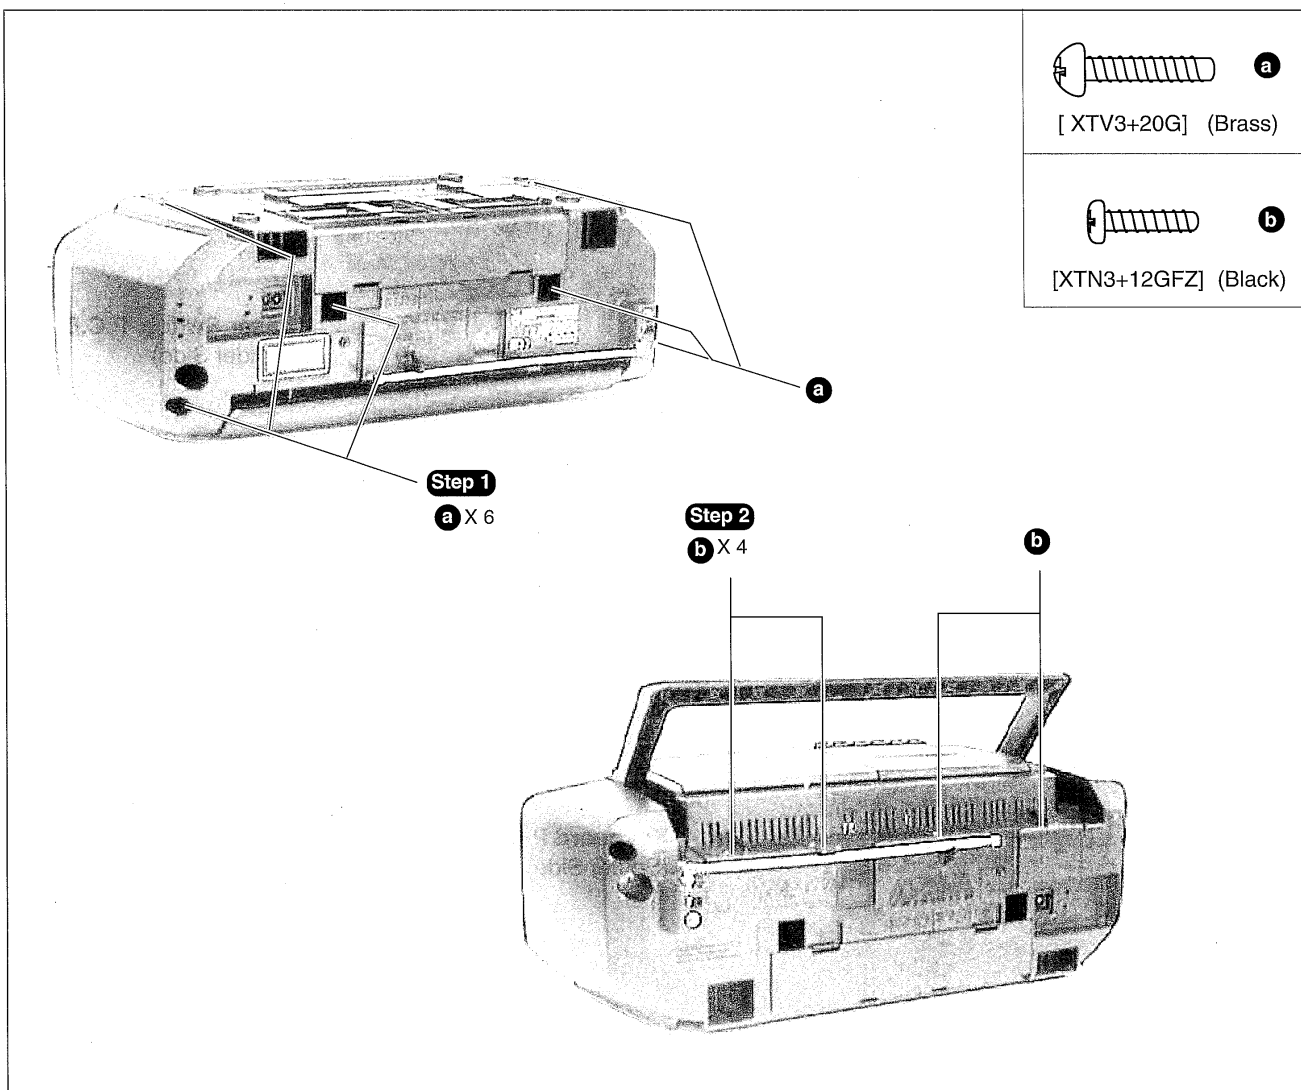


**Step 3**


Pull out the front cabinet slightly in the direction of the arrow ① to remove the cable to (CP302) before pulling it all out.

**Step 4**

Pull up the top cabinet in the direction of the arrow ② to remove the top cabinet.

**C**

[XTV26+10G] (Brass)

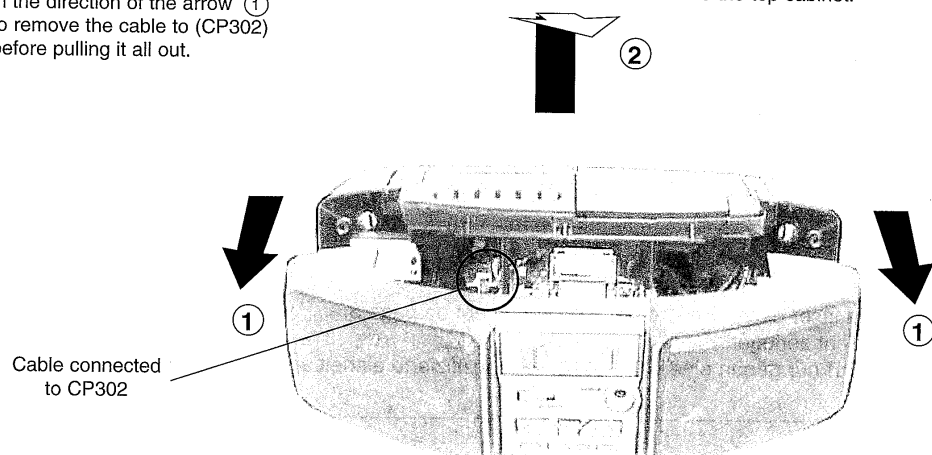


**Power P.C.B.**  
(Component Side)

**Main P.C.B.**  
(Solder Side)

**Tuner P.C.B.**  
(Component Side)

**Laser Switch P.C.B.**  
(Solder Side)

**Servo P.C.B.**  
(Solder Side)

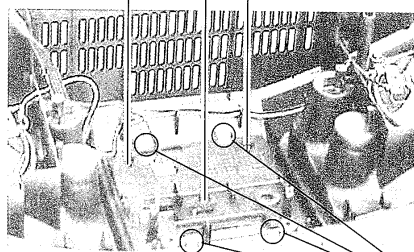**Step 5****C** X 3


Claws

**Step 6**

Release the claws to detach the ornament. Hence, check the keyboard PCB inside.

**Keyboard P.C.B.**  
(Solder Side)

Ornament

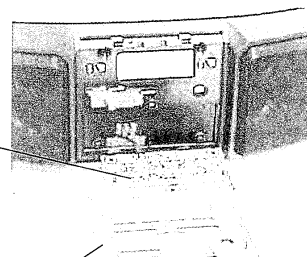

## ■ Measurements and Adjustments

### ● Tuner Section

#### ■ ALIGNMENT INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

##### Measuring Condition

1. Set volume control to maximum.
2. Set power source voltage to 9V DC.
3. Output of signal generator should be no higher than necessary to obtain an output reading.

Note: No AM IF and FM STEREO alignment is necessary as Tuner IC is used.

#### ■ AM - RF ALIGNMENT

SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	INDICATOR (ELECTRONIC VOLTMETER or OSCILLOSCOPE)	ADJUSTMENT (Shown in Fig.1)	REMARKS
CONNECTIONS	FREQUENCY				
Fashion a loop of several turns of wire and radiate signal into the loop ant. of receiver.	540 kHz	Tune to signal	Headphone Jack (32 $\Omega$ )  ( Fabricate the plug as shown in Fig. 2 and then connect the lead wires of the plug to the measuring instrument.	L3 (AM ANT Coil)	Adjust for maximum output.
"	1400 kHz	"	"	CT1 (AM ANT Trimmer)	Adjust for maximum output.

### ● Cassette Deck Section

#### ■ ALIGNMENT INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

##### Measuring Instruments

- Digital frequency counter

##### Test Tape

- Tape speed adjustment (3kHz, -10 dB) : QZZCWAT

##### Measuring condition

- Make sure the heads are clean.
- Make sure the capstan and pressure roller are clean.

Note: No Azimuth Head Alignments is required due to Aztec Head is used in the cassette mechanism.

#### ● Tape Speed Specification

TEST TAPE	EQUIPMENT CONNECTION ELECTRONIC COUNTER	ADJUSTMENT	SPECIFICATION	REMARKS
QZZCWAT (3 kHz, -10dB)	Headphone Jack (32 $\Omega$ )  ( Fabricate the plug as shown in Fig. 2 and then connect the lead wires of the plug to the measuring instrument.	—	3000 $\pm$ 60 Hz	Playback mode

#### ● ALIGNMENT POINTS

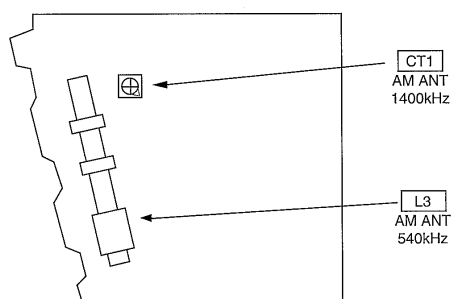


Fig. 1

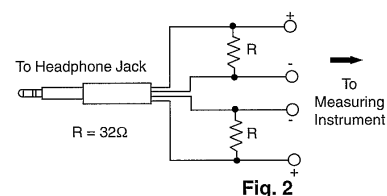
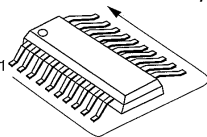
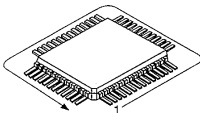
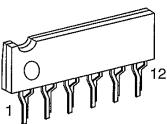
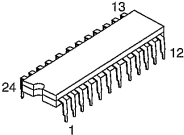
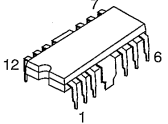
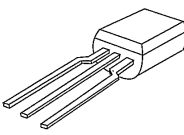
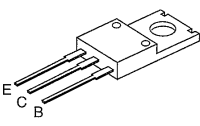
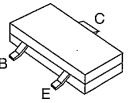
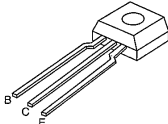
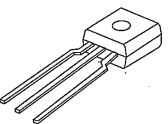
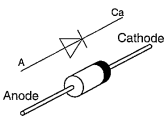
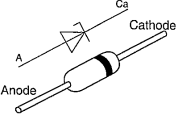
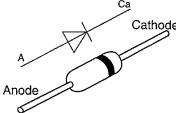


Fig. 2

## ■ Terminal Guide of ICs, Transistors and Diodes

 <p>AN8837SBE1 (28p) AN8780NSBE2 (28p) LC72131D (22p)</p>	 <p>M38223M4M156 (80p) MN662746RPK1 (80p)</p>	 <p>BA3313L</p>	 <p>TA2008AN</p>	 <p>TA8227P</p>
 <p>PST9131T S81250SGY-Z KTA12710YTA KV1360NTM</p>	 <p>2SB1566E</p>	 <p>DTC114YKA146 2SA1037AKSTX</p>	 <p>KRA102MTA KRC104MTA KRA111MTA KTC3199BLTA KTC3199GRTA</p>	
 <p>KV1520ATS2</p>	 <p>RL1N4003S-P</p>	 <p>MTZJ5R1BTA MTZJ6R2CTA MTJZ7R5CTA</p>		 <p>RVD1SS133TA RB441QT-77</p>

## ■ Terminal Function Of IC's

### • IC703 (AN8780NSBE2) Focus coil / tracking coil / traverse motor / spindle motor drive

Pin No.	Mark	I/O	Function
1	RESET OUT	O	Reset output
2	NC	-	-
3	IN2	I	Motor driver 2 input
4	PC2	I	Power out 2 input
5	NC	-	-
6	IN1	I	Motor driver 1 input
7	PVCC1	I	Power supply for Driver 1
8	PGND1	-	Ground for Driver 1
9	NC	-	-
10	D1-	O	Motor driver 1(-) output
11	D1+	O	Motor driver 1(+) output
12	D2-	O	Motor driver 2(-) output
13	D2+	O	Motor driver 2(+) output
14	D3-	O	Motor driver 3(-) output
15	D3+	O	Motor driver 3(+) output

Pin No.	Mark	I/O	Function
16	D4-	O	Motor driver 4(-) output
17	D4+	O	Motor driver 4(+) output
18	NC	-	-
19	PGND2	-	Ground for Driver 2
20	PVCC2	I	Power supply for Driver 2
21	VCC	I	Power supply
22	VREF	I	Reference voltage
23	IN4	I	Motor driver 4 input
24	IN3	I	Motor driver 3 input
25	RESET IN	I	Reset input
26	NC	-	-
-	FIN	-	Ground

### • IC701 (AN8837SBE1) Servo Amplifier

Pin No.	Mark	I/O	Function
1	PDE	I	Tracking signal input 1
2	PDF	I	Tracking signal input 2
3	VCC	I	Power supply
4	PDA	I	Focus signal input 1
5	PDB	I	Focus signal input 2
6	LPD	I	APC Amp. Input
7	LD	O	APC Amp. Output
8	RF	O	RF addition output
9	RFIN	I	RF signal input
10	CSBRT	-	Capacitor for OFTR connection terminal
11	CEA	-	HPF Amp.
12	BDO	O	BDO output
13	LDON	-	APC control
14	GND	-	Ground

Pin No.	Mark	I/O	Function
15	RFDET	O	NRFDET output
16	CROSS	O	CROSS output
17	OFTR	O	OFTR output
18	VDET	O	VDET output
19	ENV	O	3 TENV output
20	ENVOFF	-	ENV control
21	TEBPF	I	VDET input
22	TEIN	I	TE Amp. input
23	TEOUT	O	TE Amp. output
24	FEOUT	O	FE Amp. output
25	FEIN	I	FE Amp. input
26	VREF	O	Reference voltage output
27	TBAL	-	TBAL control
28	FBAL	-	FBAL control

### • IC702 (MN662746RPK1) Servo processor / digital signal processor / digital filter / D/A converter

Pin No.	Mark	I/O	Function
1	BCLK	O	Bit clock for SRDATA
2	LRCK	O	L,R discriminatory signal "H": Lch audio data, "L": Rch audio data
3	SRDATA	O	Serial data output
4	DVDDI	I	Power supply for digital circuit
5	DVSSI	I	Ground for digital circuit
6	TX	O	Digital/ Audio/ Interface signal output
7	MCLK	I	Microcomputer/ Command/ Clock signal
8	MDATA	I	Microcomputer/ Command/ Data signal input
9	MLD	I	Microcomputer/ Command/ Load signal input "L": Load
10	SENSE	O	Sense signal output (OFT, FESL, NACEND, NWTEND, DATA)
11	/FLOCK	O	Focus/ Servo drawback signal "L": drawback
12	/TLOCK	O	Switching command, Tracking/ Servo drawback,
	/VDET		Vibration detect signal "L": drawback "H": detection
13	BLKCK	O	Subcode/Block/Clock signal (fBLKCK=75Hz)
14	SQCK	I	Clock signal for Subcode Q register
15	SUBQ	O	Subcode Q data output
16	DMUTE	I	Muting input "H": mute
17	STAT	O	Status signal (CRC, RESY, CLVS, TTSTOP, SQOK, FLAG6, SENSE,/FLOCK,/TLOCK)
18	/RST	I	Reset input "L": reset
19	SMCK	O	MSEL=at "H" clock signal 8.4672MHz output MSEL=at "L" clock signal 4.2336MHz output
20	PMCK	O	Clock signal 88.2KHz output
21	TRV	O	Test terminal (this terminal should be opened)
22	TVD	O	Drive and forced drive for Traverse output
23	PC	O	Spindle motor ON output "L": ON
24	ECM	O	Spindle motor driving signal (forced mode)
25	ECS	O	Spindle motor driving signal (servo error signal)

Pin No.	Mark	I/O	Function
26	KICK	O	Test terminal (Hi-z fixed)
27	TRD	O	Tracking drive and Kick pulse output
28	FOD	O	Focus drive output (TVD, ECS, TRD, FOD, FBAL, TBAL, DSLF2)
29	VREF	I	Reference voltage (TVD, ECS, TRD, FOD, FBAL, TBAL, DSLF2)
30	FBAL	O	Focus balance adjustment output
31	TBAL	O	Tracking balance adjustment output
32	FE	I	Focus error signal input (analog input)
33	TE	I	Tracking error signal input (analog input)
34	RFENV	I	RF envelope signal input (analog input)
35	VDET	I	Test terminal (fixed to VDD or VSS)
36	OFT	I	Off track signal input "H": off track
37	TRCRS	I	Test terminal (fixed to VDD or VSS)
38	/RFDET	I	RF detection signal input "L": detection
39	BDO	I	Dropout signal input "H": dropout
40	LDON	O	Laser ON signal output "H": on
41	TES	O	Tracking error shunt signal output "H": shunt
42	PLAY	O	Play signal output "H": play
43	WVEL	O	Double speed status signal output "H": double speed
44	ARF	I	RF signal input
45	IREF	I	Reference current input
46	DRF	I	Bias for DSL
47	DSLIF	I/O	Loop filter for DSL
48	PLLIF	I/O	Loop filter for PLL
49	DSLIF2	O	DSL unbalance current correction
50	AVDD2	I	Power supply for analog circuit (DSL, PLL, DA output, AD)
51	AVSS2	I	Ground for analog circuit (DSL, PLL, DA output, AD)
52	EFM/CK384	O	Switching command signal • EFM signal output • 16.9344 MHz clock output
53	PCK	O	PLL sampling clock output fPCK=4.3218MHz

Pin No.	Mark	I/O	Function
54	CK176	O	176.4KHz clock output
55	SUBC	O	Subcode serial output
56	SBCK	I	Clock for subcode serial output
57	VSS	I	Ground for oscillation circuit
58	X1	O	Crystal oscillation circuit input f=16.9344MHz
59	X2	O	Crystal oscillation circuit output f=16.9344MHz
60	VDD	I	Power supply for oscillation circuit
61	TRVSTP	O	Traverse STOP signal "H": STOP mode
62	/CLDCK	O	Subcode frame clock signal fCLDCK=7.35KHz
63	FCLK	O	Crystal frame clock signal fFCLK=7.35KHz
64	IPFLAG	O	Compensation flag signal "H": compensation
65	FLAG	O	Flag signal output
66	CLVS	O	Spindle servo phase synchronizing signal output "H": CLV "L": rough servo
67	CRC	O	Sub-code CRC checked output "H": OK "L": NG
68	RESY	O	Frame resynchronizing signal output "H": synchronized "L": out of synchronizing
69	FLAG6	O	Flag6 output "L": address reset
70	ARST	I	Test terminal usually "H"
71	/TEST	I	Test terminal normally "H"

Pin No.	Mark	I/O	Function
72	AVDD1	I	Power supply for analog circuit
73	OUTL	O	Lch audio output
74	AVSS1	I	Ground for analog circuit
75	OUTR	I	Rch audio output
76	RSEL	I	RF signal polarity assignment input at "H" level RSEL="H", at "L" level RSEL="L"
77	FSEL	I	Noise filter on/off switching input "H": filter off "L": filter on
78	PSEL	I	Switching command input • Test terminal (normally: "L") • SRDATA input
79	MSEL	I	Switching command input • Switching frequency of SMCK output "H": SMCK=8.4672MHz "L": SMCK=4.2336MHz • LRCK input (SMCK=4.2336MHz fixed) "H": Lch data "L": Rch data
80	SSEL	I	Switching command input • Switching mode of SUBQ terminal "H": Q code buffer mode "L": CLDCK synchronized mode • BCLK input (Q code buffer mode fixed)

### • IC601 (M38223M4M156) System microprocessor

Pin No.	Mark	I/O	Function
1	VLCD2	I	LCD bias reference voltage input V2
2	VLCD1	I	LCD bias reference voltage input V1
3	KEY1	I	KEY input 1
4	TUNER/BAND	I	TUNER/BAND Key input
5	REG2	I	Area setting input 2
6	REG1	I	Area setting input 1
7	R.CTL	O	Remote control power control signal output
8	P.DET	I	SW VCC voltage detection input
9	T.MUTE	O	TUNER FUNCTION & MUTE output
10	PLL DO	I	PLL IC DATA input
11	PLL DATA	O	PLL IC DATA output
12	PLL CLK	O	PLL IC CLK output
13	PLL CE	O	PLL IC CE output
14	REC H	O	REC detect signal output
15	B.P1	O	AM Rec. beat proof output 1
16	DECK MUTE	O	DECK MUTE output
17	D PLAY/PAUS	I	CD PLAY/PAUSE key input
18	REM IN	I	Remote control signal input
19	AC DET	I	AC Power detection input
20	SQCK	O	CD subcode clock output
21	P.CNT	O	Power control output
22	SUBQ	I	CD subcode data input
23	MTRL	I	Deck motor detection input
24	BLK CK	I	CD subcode block clock input
25	MEGA	-	Not used
26	Vcc DET	I	Vcc detection input (main power detection)
27	RESET	I	System reset signal input
28	X OSC IN	I	Crystal oscillator input (32.768kHz)
29	X OSC OUT	O	Crystal oscillator output (32.768kHz)
30	OSC IN	I	Clock input (4.19kHz)

Pin No.	Mark	I/O	Function
31	OSC OUT	I	Clock output (4.19kHz)
32	VSS	-	GND
33	MBP1	O	Beatproof control signal output 1
34	MBP2	O	Beatproof control signal output 2
35	MUTE A	O	Audio Mute output A
36	CD L	O	CD power control output
37	CLOSE SW	I	CD close detection switch input
38	STAT	I	CD status signal input
39	CD RESET	I	CD reset signal output
40	REST SW	I	CD limit switch input
41	MCLK	O	CD clock control signal output
42	MDATA	O	CD data control signal output
43	MLD	O	CD loading control signal output
44	VOL DATA	O	PMW data signal output for electric volume circuit (IC604)
45	VOL CLK	O	PMW clock signal output for electric volume circuit (IC604)
46	TONE1	O	Tone control output 1
47	TONE2	O	Tone control output 2
48	S.V	O	Sound Virtualizer control output
49			
51	NC	-	Not used
52	SEG0	O	LCD segment signal output
72	SEG20		
73	Vcc	I	Power supply (+5V)
74	VREF	I	A/D converter reference voltage
75	AVSS	-	GND
76	COM3	O	LCD common signal output
79	COM0		
80	VLCD3	I	LCD bias reference voltage input V3



## Schematic Diagram

	Page		Page
<b>A</b> MAIN CIRCUIT .....	18-19	<b>E</b> BATTERY TERMINAL CIRCUIT .....	23
<b>B</b> TUNER CIRCUIT .....	22	<b>G</b> KEYBOARD CIRCUIT .....	23
<b>C</b> POWER CIRCUIT .....	23	<b>H</b> LASER SWITCH CIRCUIT .....	23
<b>D</b> BATTERY CIRCUIT .....	23	<b>I</b> CD SERVO CIRCUIT .....	20-21

(All schematic diagrams may be modified at any time with the development of new technology)

- Note :**
- S701 : CD rest switch
  - SW301 : Record/playback switch
  - SW302 : Selector switch
  - SW501 : AC Inlet switch (JK501)
  - SW602 : CD leaf switch
  - SW801 : REV / skip switch
  - SW802 : FWD / skip switch
  - SW803 : FM Mode / Stop / Clear switch
  - SW804 : Band select / CD play / Pause switch
  - SW805 : Play / Tune Mode switch
  - SW806 : Memory Program switch
  - SW807 : Tone Select (XBS) switch
  - VR301 : Volume control

• **Battery current :**





Vol. min. .... 106 mA (RADIO)  
151 mA (TAPE)  
260 mA (CD)



Vol. max. .... 310 mA (RADIO)  
520 mA (TAPE)  
940 mA (CD)

Measurement Instruction

( RADIO : AM - 74 dB/m , 30% Mod.  
FM - 60 dB/M , 30% Mod.  
TAPE : 315 Hz , 0 dB  
CD : 1 kHz , 0 dB )

• **Signal line**


———— : +B Line  
 : FM/AM Signal Line  
 : AM Signal Line  
 : AM OSC Signal Line  
 : Main Signal Line

 : FM Signal Line  
 : Record Signal Line  
 : CD Signal Line  
 : Playback Signal Line

- The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis.  
Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

< > : FM      ( ) : AM      No mark : Playback      (( )) : CD

• **Importance safety notice:**

Components identified by  mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

**Caution !**


IC, LSI and VLSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminium foil.
- Ground the soldering iron.
- Do not touch the pins of IC, LSI or VLSI with fingers directly.
- Put a conductive mat on the work table.

## A MAIN CIRCUIT


 : +B line     
  : Record signal line     
  : CD signal line  
 : Main signal line     
  : FM/AM signal line     
  : Playback signal line

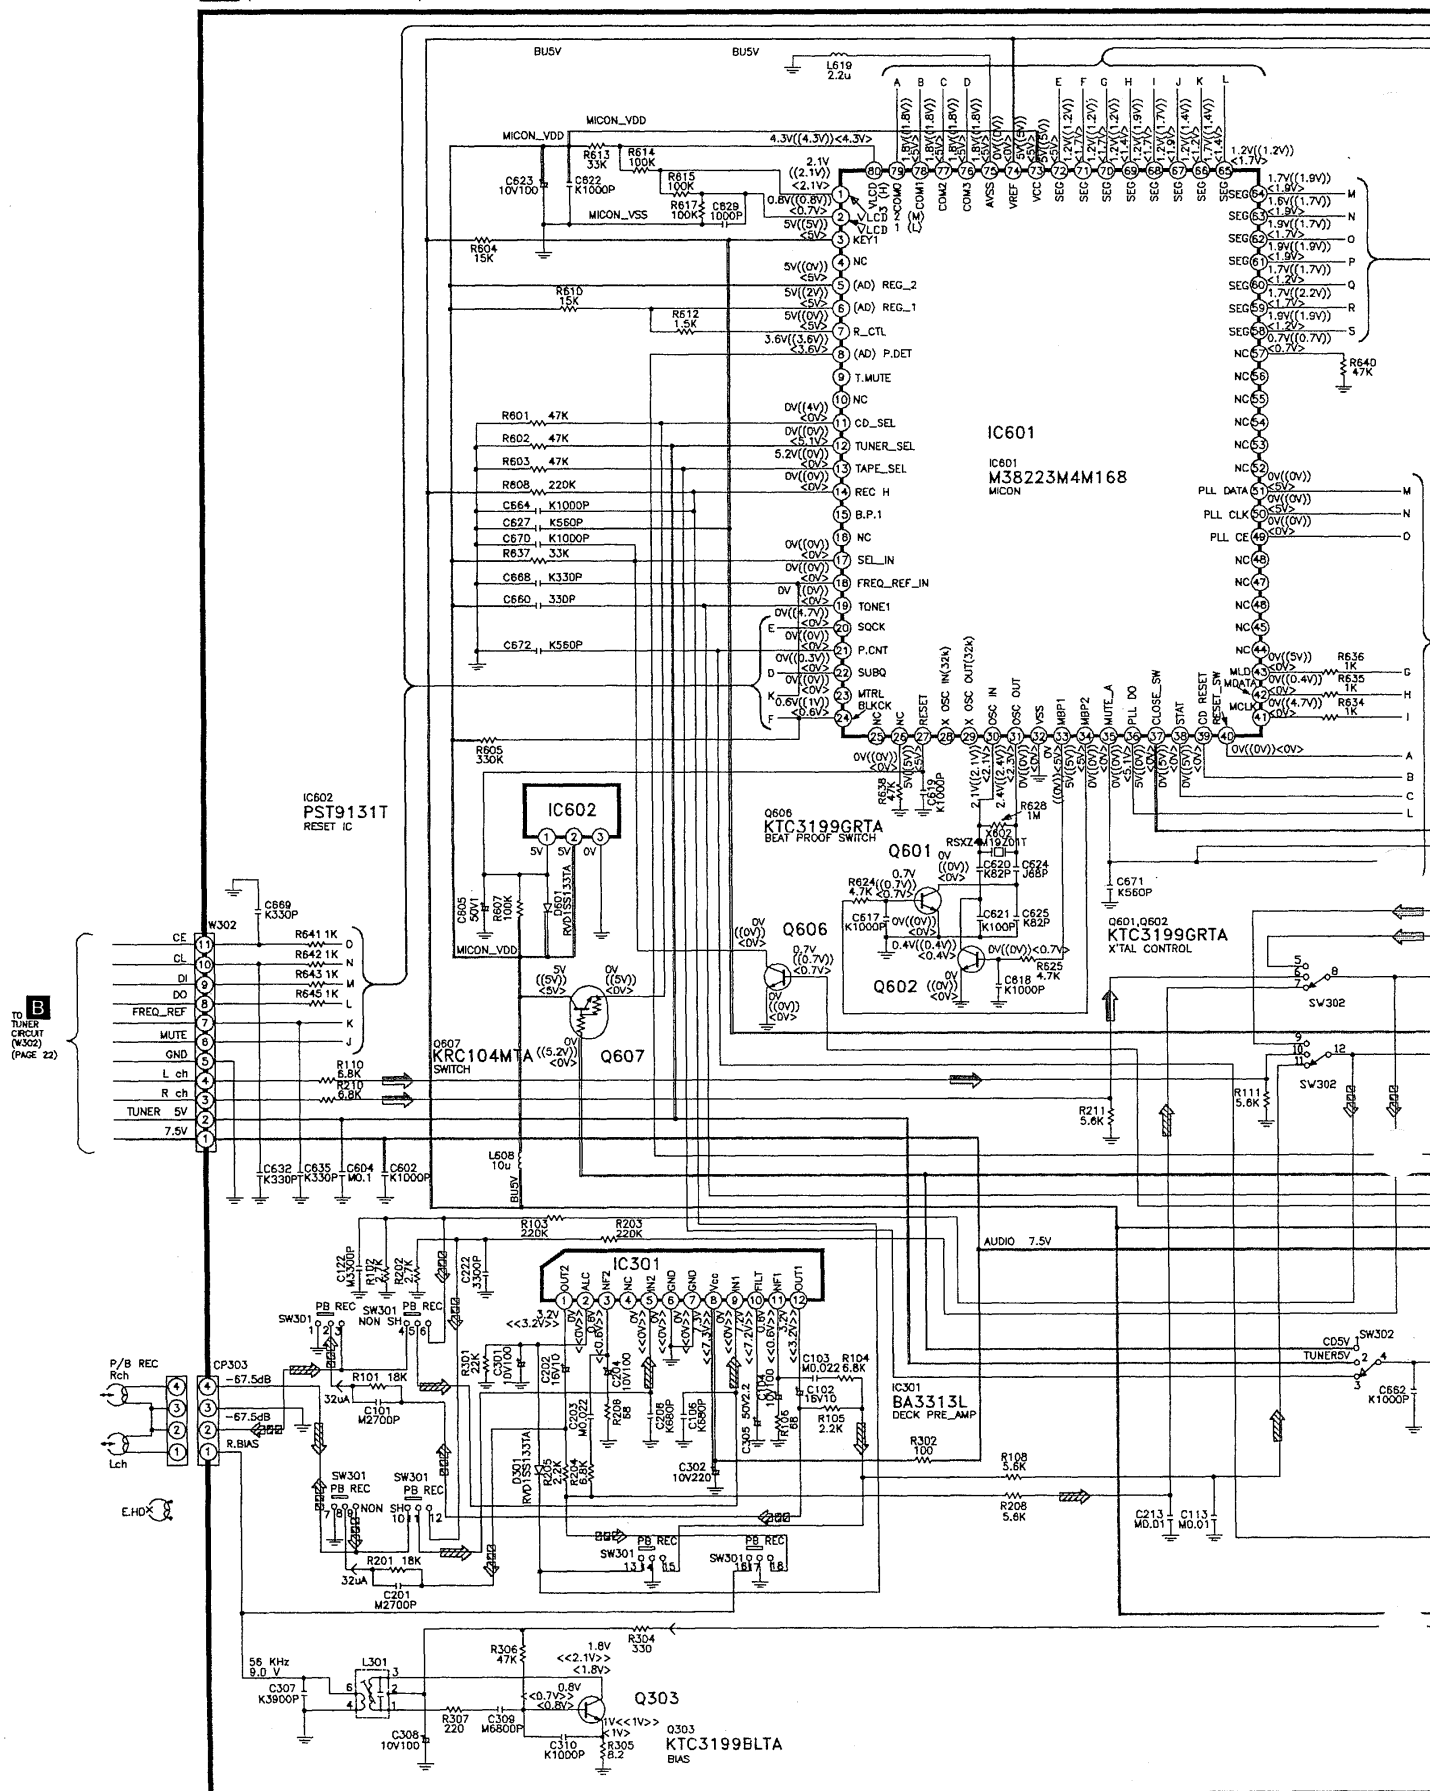

— : +B line

⇒ : Main signal line


⇨ : CD signal line

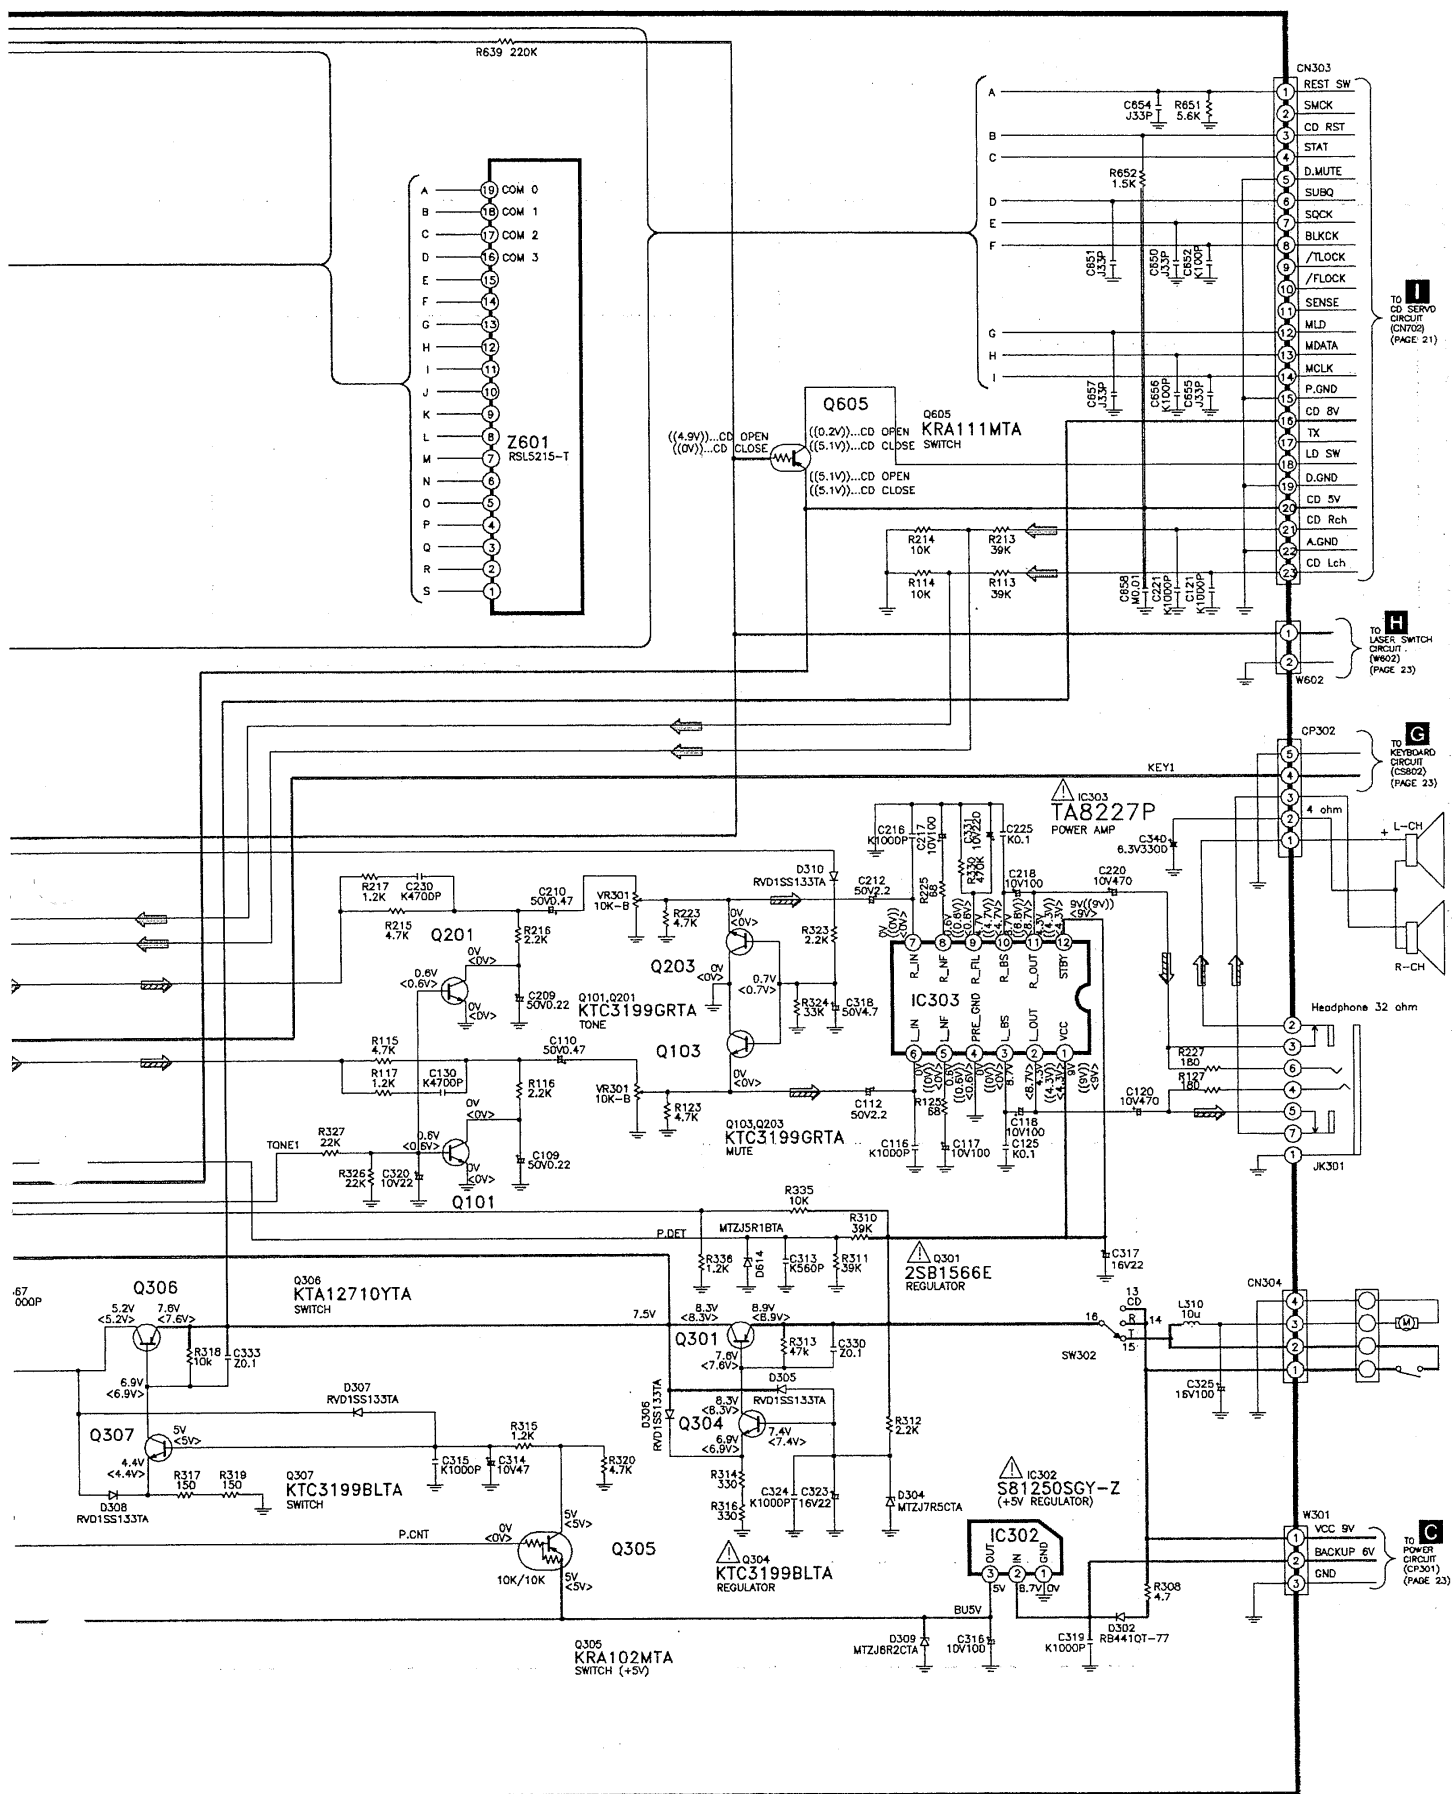


## CD SERVO CIRCUIT


(P.C. BOARD ON PAGE 26)

\_\_\_\_\_ : +B signal line

 : CD signal line

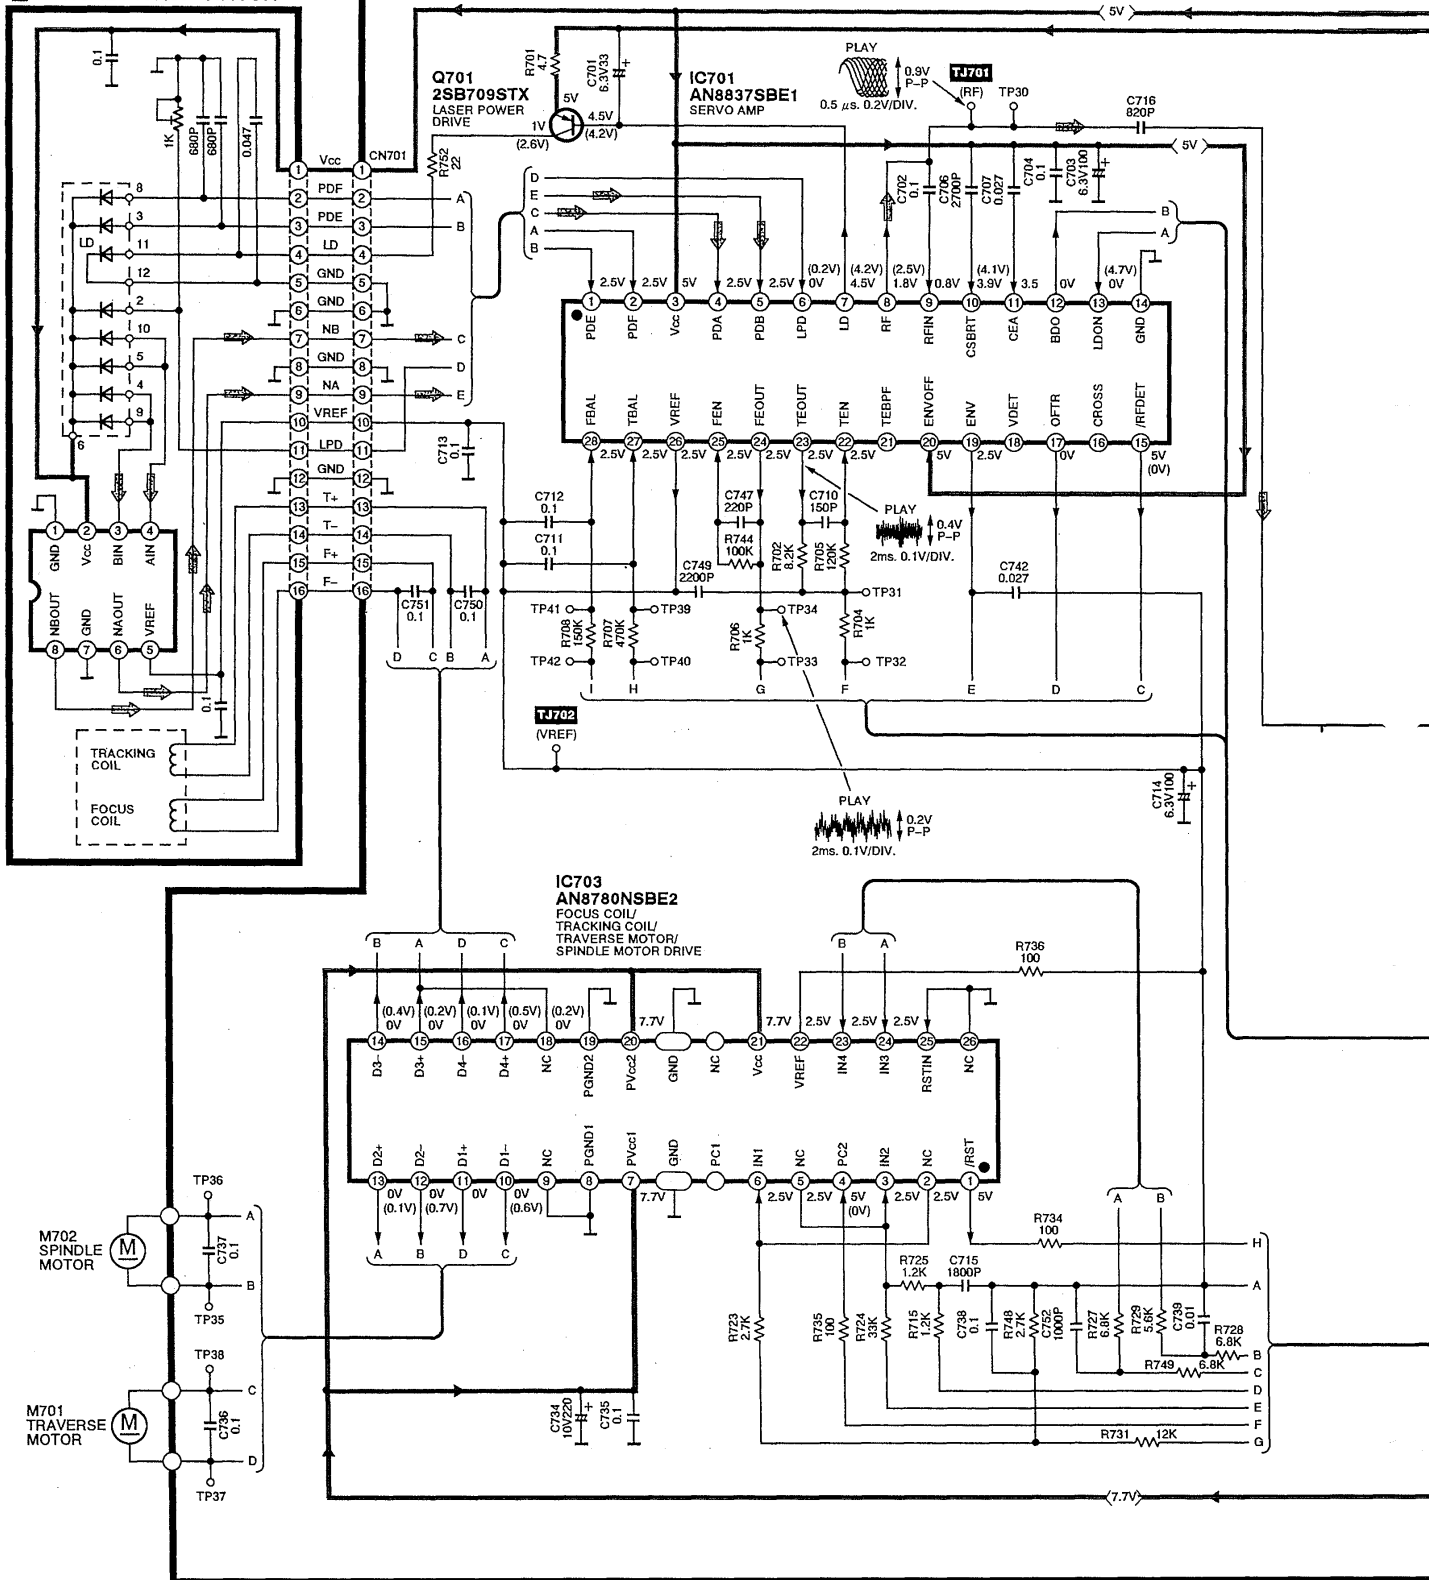

➡ : CD signal line

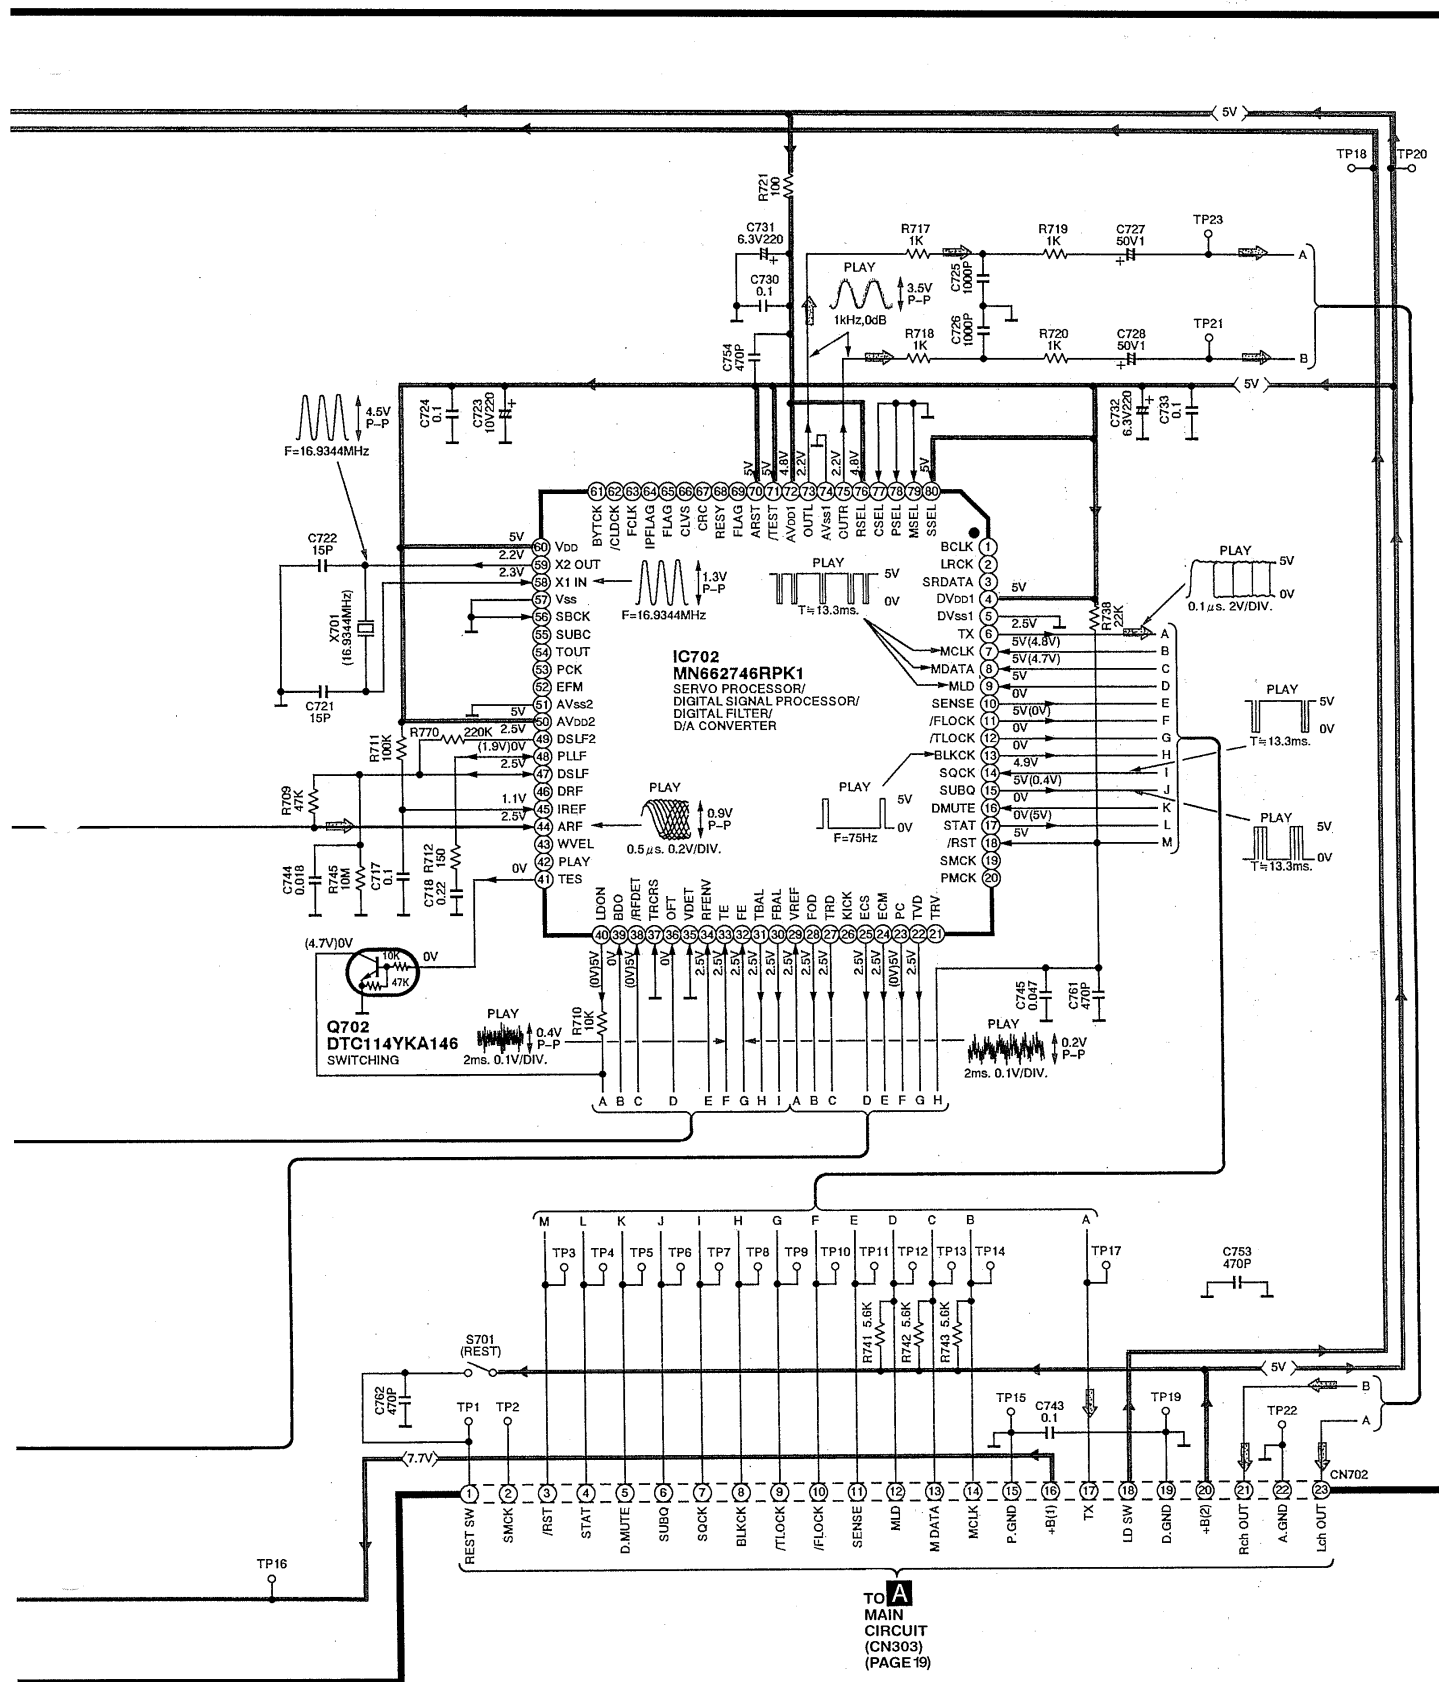

# **B** TUNER CIRCUIT (P.C.BOARD ON PAGE 25)


— : +B line

⇨ : FM signal line

⇨ : AM signal line

⇨ : AM OSC signal line


⇨ : FM/AM signal line

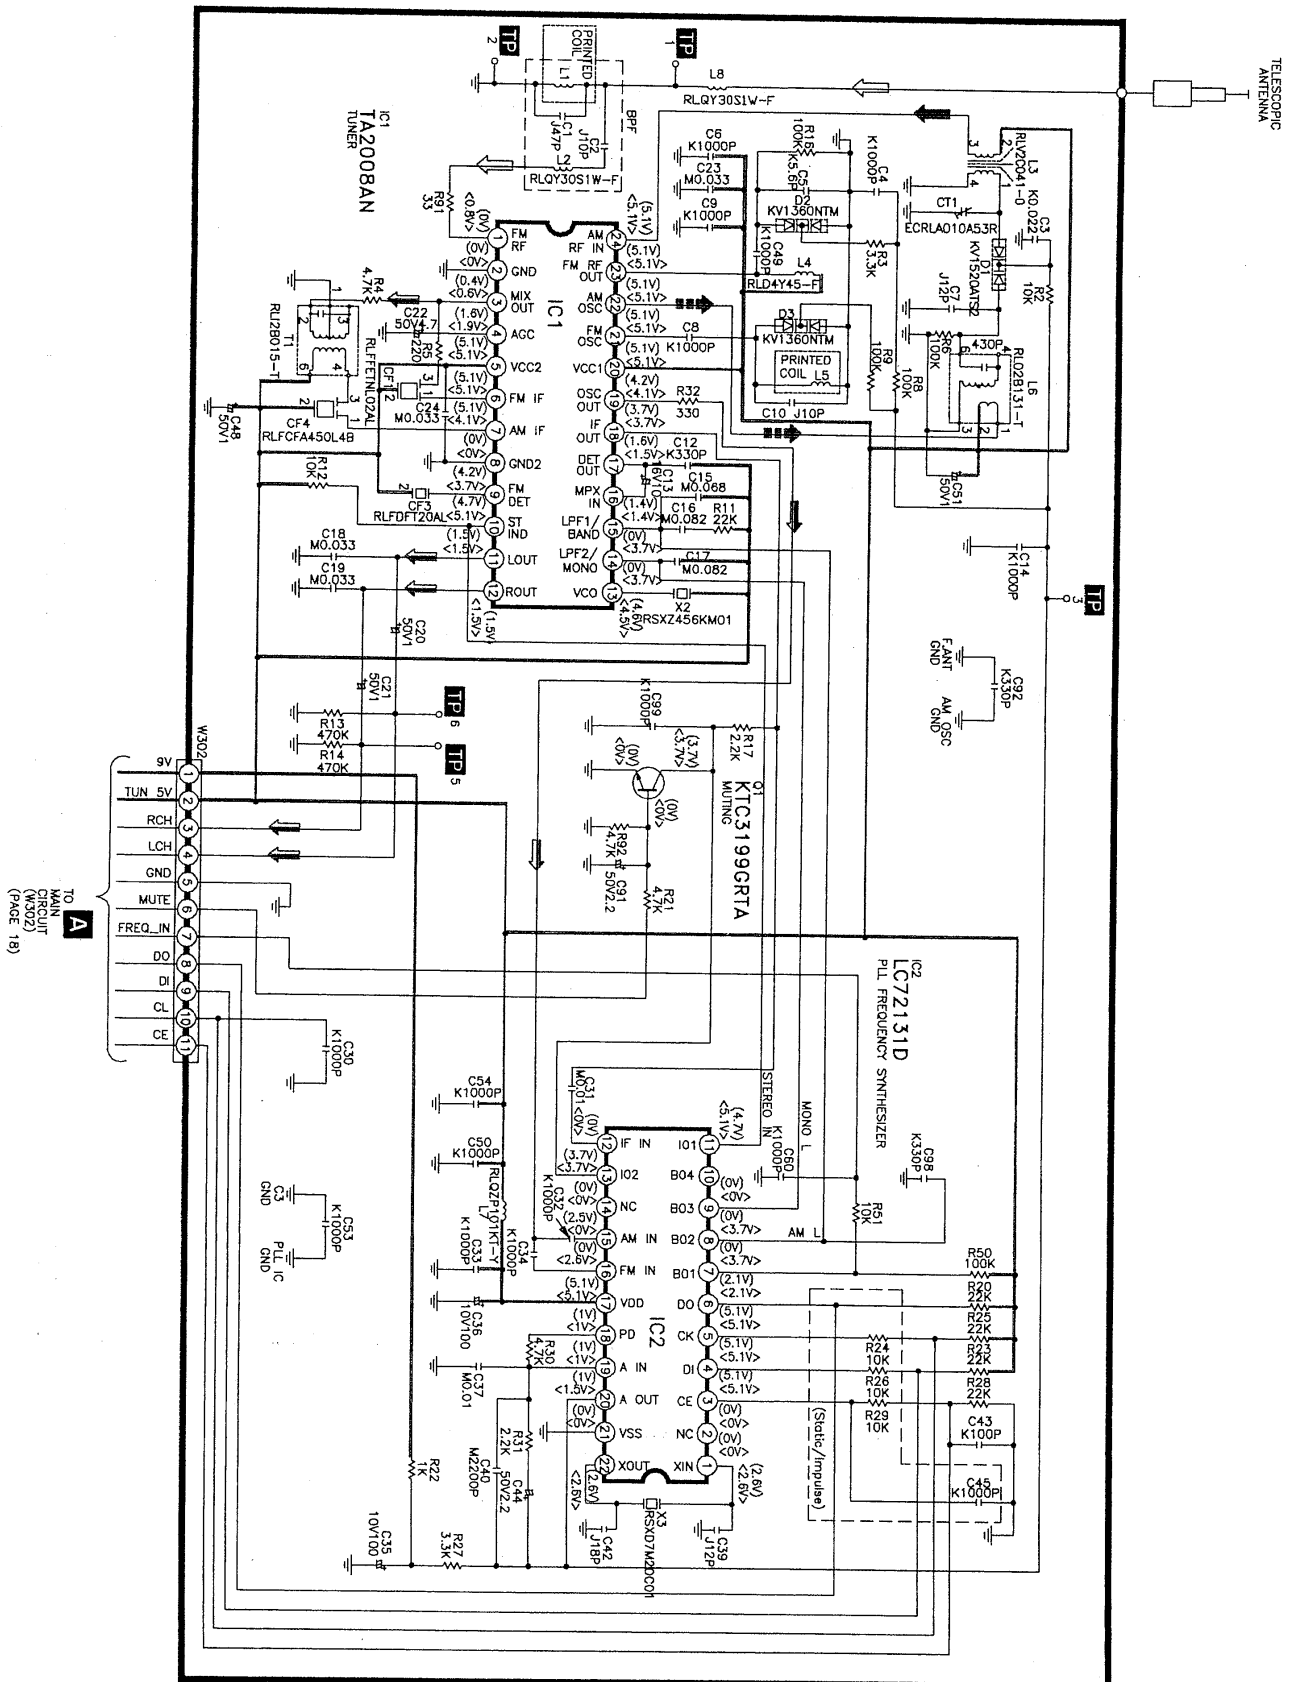

— : +B line


## H LASER SWITCH CIRCUIT

( P.C.BOARD ON PAGE 25 )

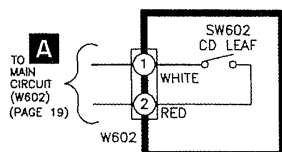


## G KEYBOARD CIRCUIT

( P.C.BOARD ON PAGE 26 )

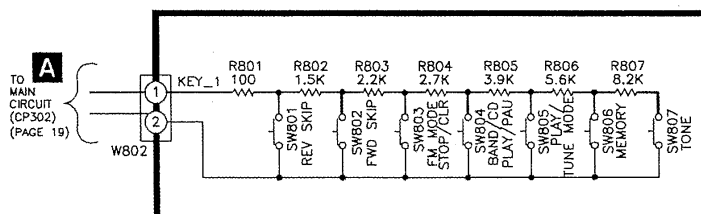


## C POWER CIRCUIT

( P.C.BOARD ON PAGE 26 )

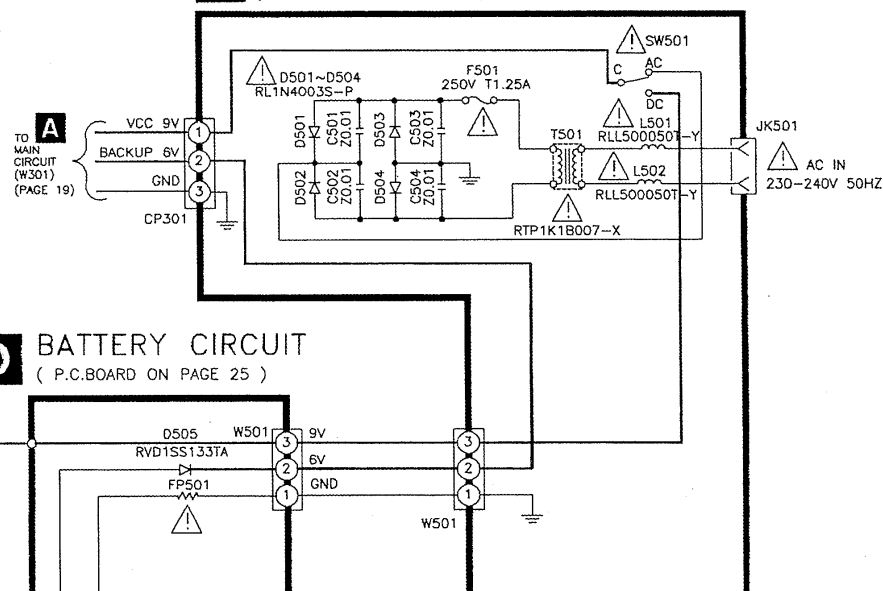

## D BATTERY CIRCUIT

( P.C.BOARD ON PAGE 25 )

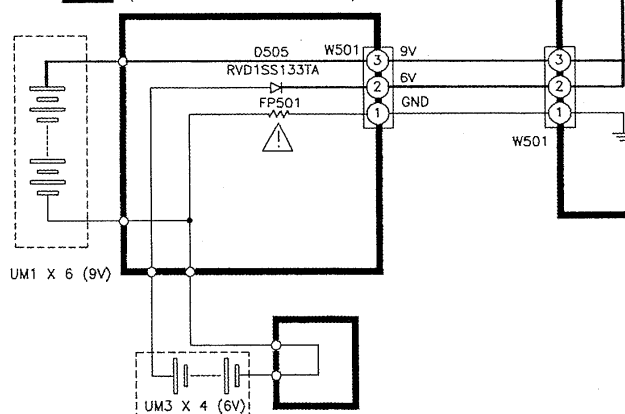


## E BATTERY TERMINAL CIRCUIT




( P.C.BOARD ON PAGE 25 )

## Printed Circuit Board

## A MAIN P.C.B. (REPX0167C)

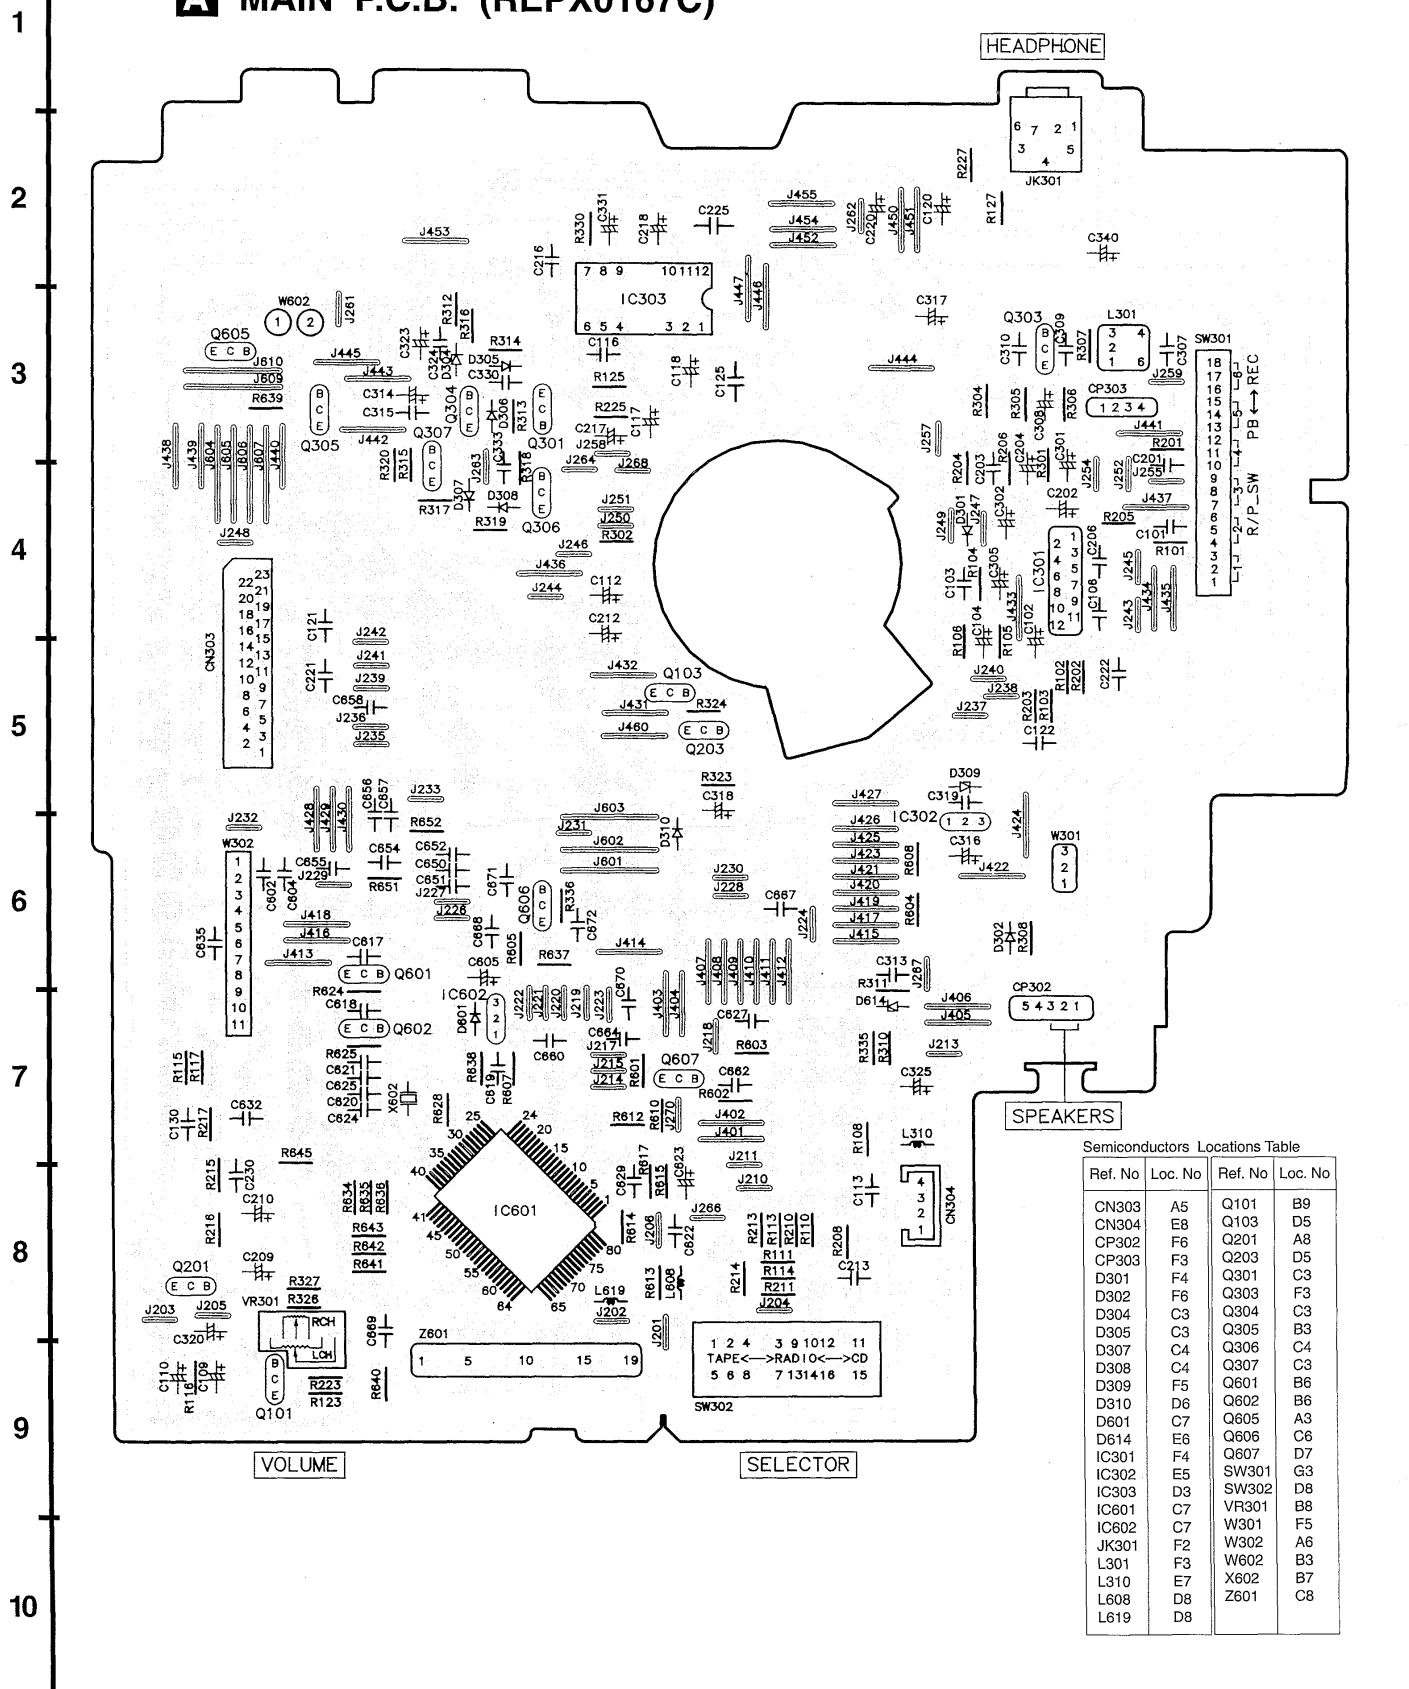


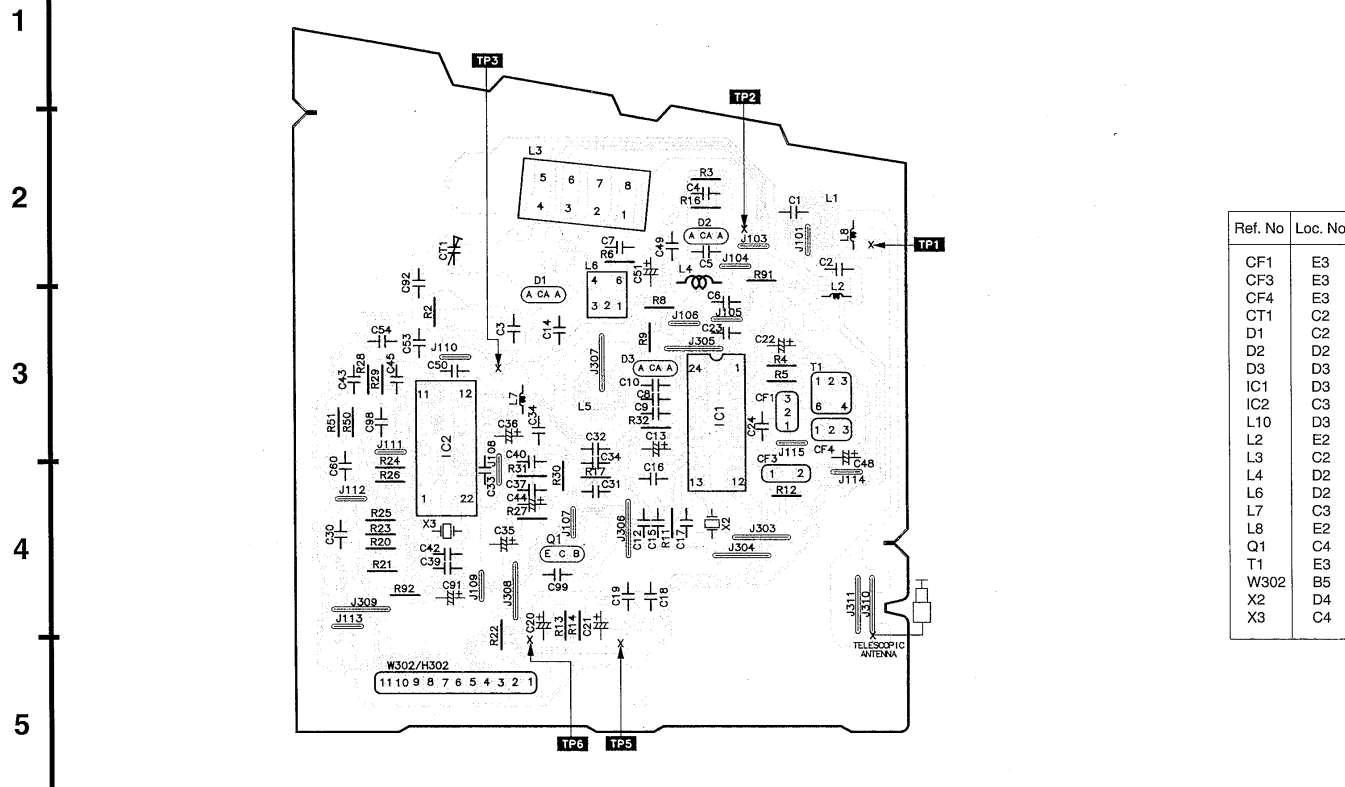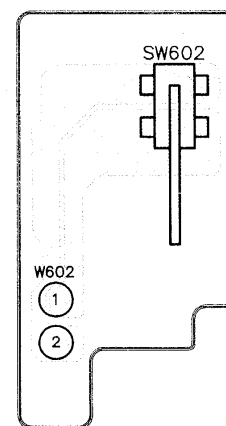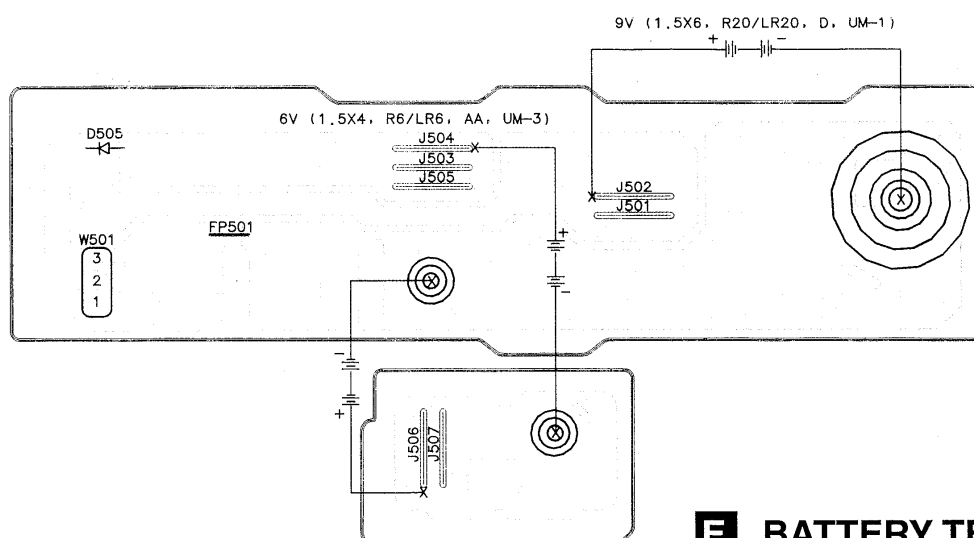


**B** TUNER P.C.B. (REPX0167C)**H** LASER SWITCH P.C.B. (REPX0167C)**D** BATTERY P.C.B. (REPX0167C)**E** BATTERY TERMINAL P.C.B. (REPX0167C)



# Wiring Connection Diagram

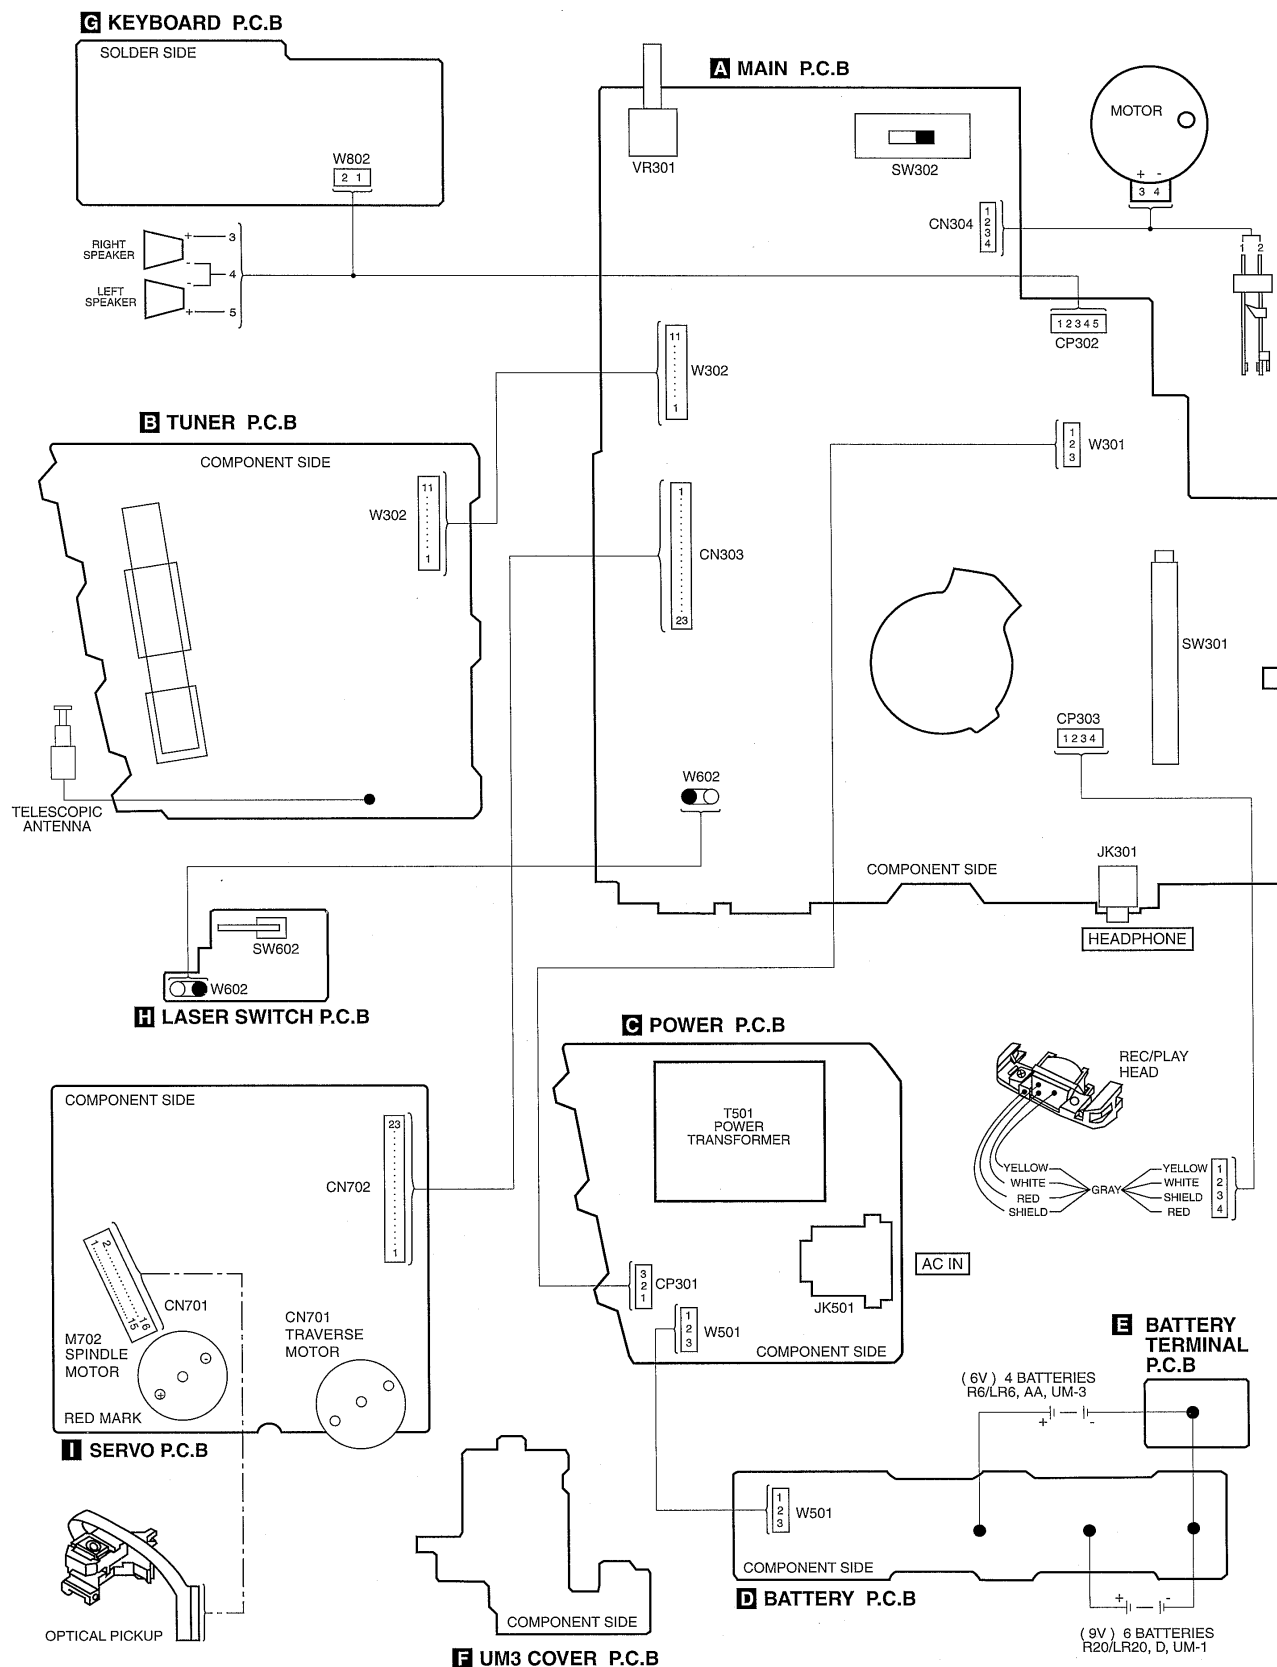

## ■ Troubleshooting Guide

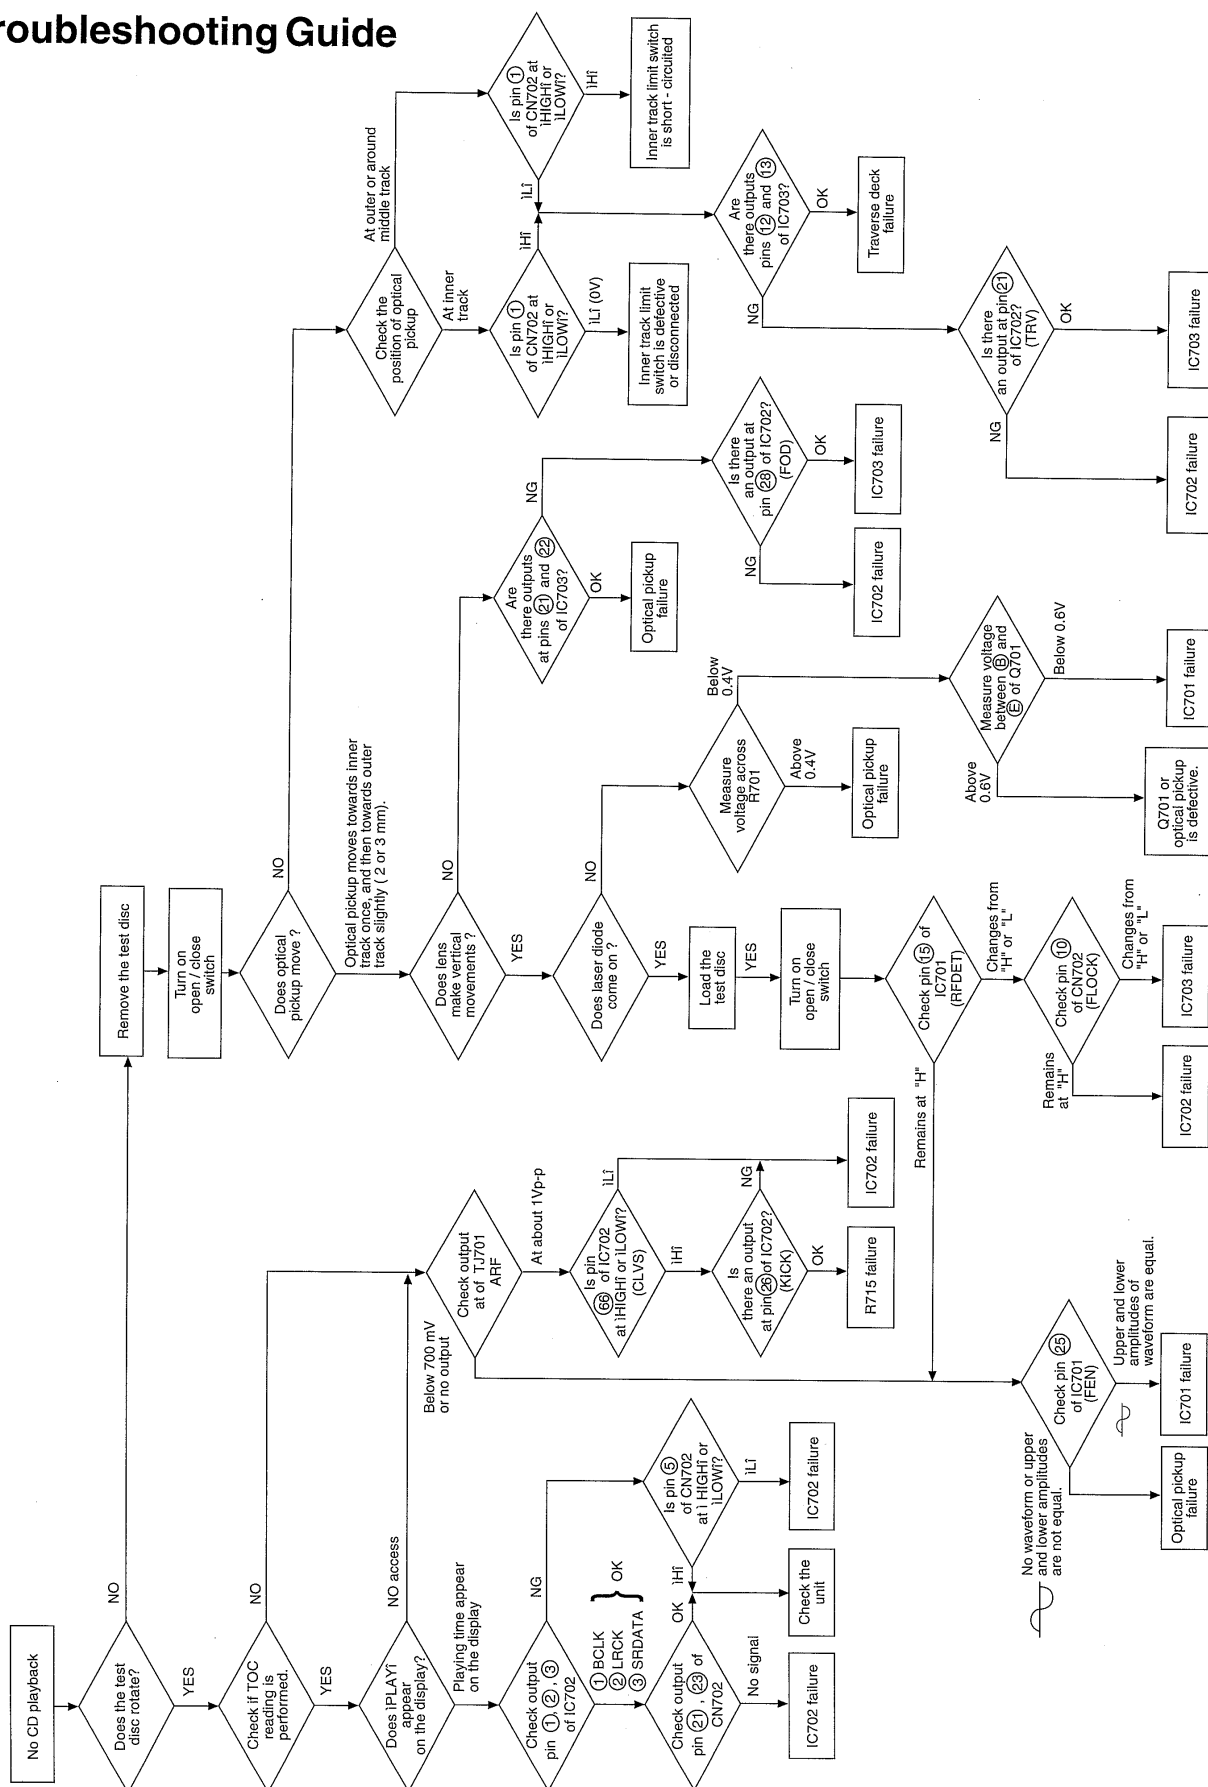


## Mechanism Parts List

Notes : [M] in Remarks column indicates parts supplied by MESA.

Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
		<b>CASSETTE DECK</b>		124	RML0074-1	IDLER LEVER	[M]	145-1	RMB0049	PINCH ARM SPRING	[M]
101	RDV0021	MAIN BELT 'D'	[M]	125	RML0076	EJECT SELECTION LEVE	[M]	146	RBR4CM005-T	R/P HEAD	[M]
103	RMB0109-1	BRAKE SPRING	[M]	126	RML0077-1	LOCK PLATE	[M]	147	RMB0059	AZIMUT SPRING	[M]
104	RML0116	BRAKE	[M]	127	RML0078	FUNCTION PLATE	[M]	148	RHD20049	AZIMUT SCREW	[M]
105	RBR2CY009	ERASE HEAD	[M]	128	XTN2+4F	EARTH LUG SCREW	[M]	149	XTN2+8F	R/P SCREW	[M]
106	RDG0057-1	IDLER GEAR	[M]	129	RML0081-2	RECORD SAFETY LEVER	[M]	151	RMR0149	HEAD BASE	[M]
107	RDG0059	FF RELAY GEAR	[M]	130	RML0082	PAUSE LEVER	[M]	154	RXR0004	TAKE UP REEL ASSY	[M]
108	RDK0005-1	CAM GEAR	[M]	131	RMM0023-1	PLAY ROD	[M]	155	RXR0005	SUPPLY REEL ASSY	[M]
109	RDV0006-1	RF BELT	[M]	132	RMM0024	REW ROD	[M]	156	XTN2+6J	BACK PLATE SCREW	[M]
110	RHW16009	CAPSTAN WASHER	[M]	133	RMM0025	FF ROD	[M]	158	RHD26002	MOTOR SCREW	[M]
111	RMA0109	BACK PLATE	[M]	134	RMM0026	STOP ROD	[M]	160	RMG0102-1	MOTOR RUB. CUSHION	[M]
112	RMB0043-1	ROD OPERATION SPRING	[M]	135	RMM0027	PAUSE ROD	[M]	162	RFM179ZA	DC MOTOR ASS'Y	[M]
113	RMB0045-1	A.S. SPRING	[M]	136	RMM0028	REC ROD	[M]	163	RMA0108	MOTOR BK	[M]
114	RMB0046-1	LOCK PLATE SPRING	[M]	137	RMM0029-1	EJECT SLIDE LEVER	[M]	164	XTN26+8J	MOTOR BK SCREW	[M]
115	RMB0047	HEAD PANEL SPRING	[M]	138	RMR0211-1	PAUSE BUSH	[M]	165	RME0098-2	E SLIDE LEVER SPRING	[M]
116	RMB0048-1	IDLER LEVER SPRING	[M]	139	RMR0227	IDLER GEAR BUSH	[M]	166	RJR0033	EARTH LUG	[M]
117	RMB0053	PAUSE LEVER SPRING	[M]	140	RMS0055-1	REEL SHAFT	[M]	167	RML0080	ERASE HEAD ARM	[M]
118	RMB0125	BACK TENSION SPRING	[M]	141	RXF0020	FLYWHEEL ASSY	[M]	168	RSH1A006-U	LEAF SWITCH	[M]
119	RMC0061	PACK SPRING	[M]	141-1	RHW21008	FLYWHEEL WASHER	[M]				
120	RFKRCT090P-K	CHASSIS ASS'Y	[M]	142	RMB0044	TRIGGER SPRING	[M]				
121	RML0071-1	SWING LEVER	[M]	143	RML0075	TRIGGER LEVER	[M]				
122	RML0072-1	AS RELEASE LEVER	[M]	144	RXP0014	RF CLUTCH ASSY	[M]				
123	RML0073-1	AS PROTECT LEVER	[M]	145	RXP0015	PINCH ROLLER ASSY	[M]				


## ■ Mechanism Parts Location (RAA0940)

Note : Refer to **Mechanism Parts List** on page 29.

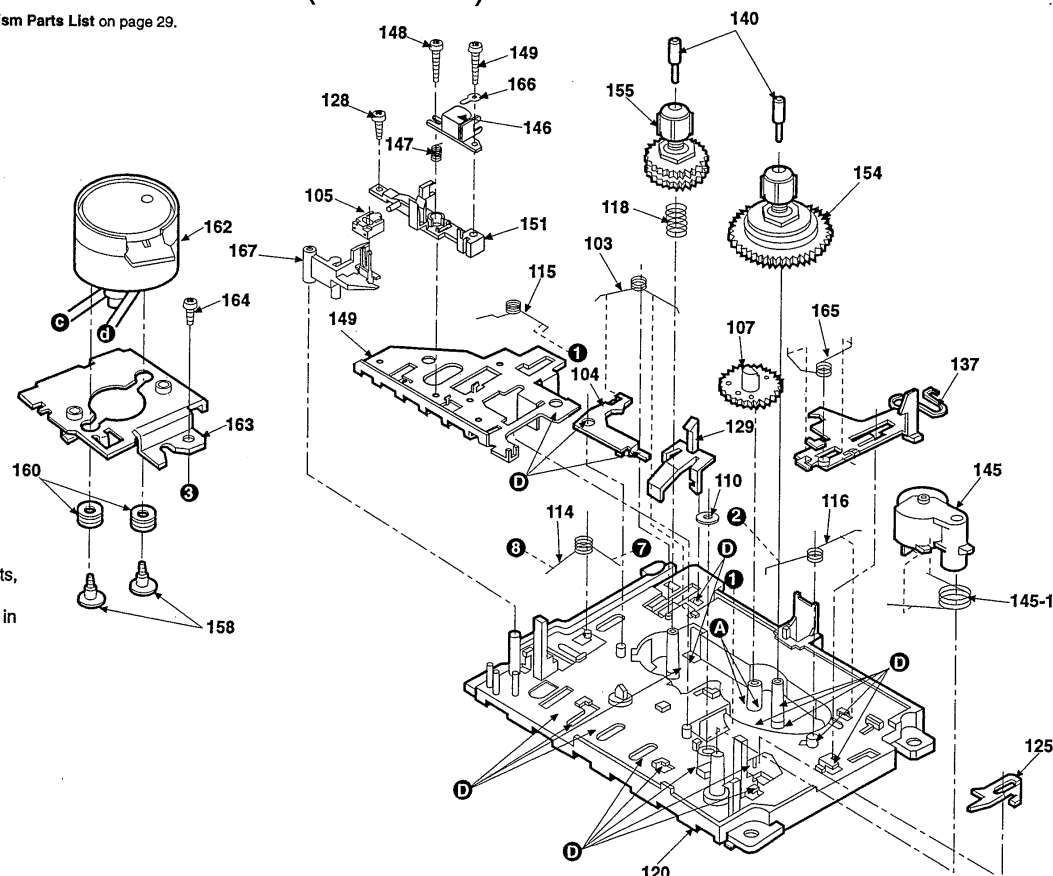

**Note :**  
When changing mechanism parts,  
apply the specified grease to  
arrow indicated areas as shown in  
the drawing.


Ref No.	Part No.
<b>A</b>	SZZ0L25
<b>B</b>	SZZ0L06
<b>D</b>	SZZ0L30

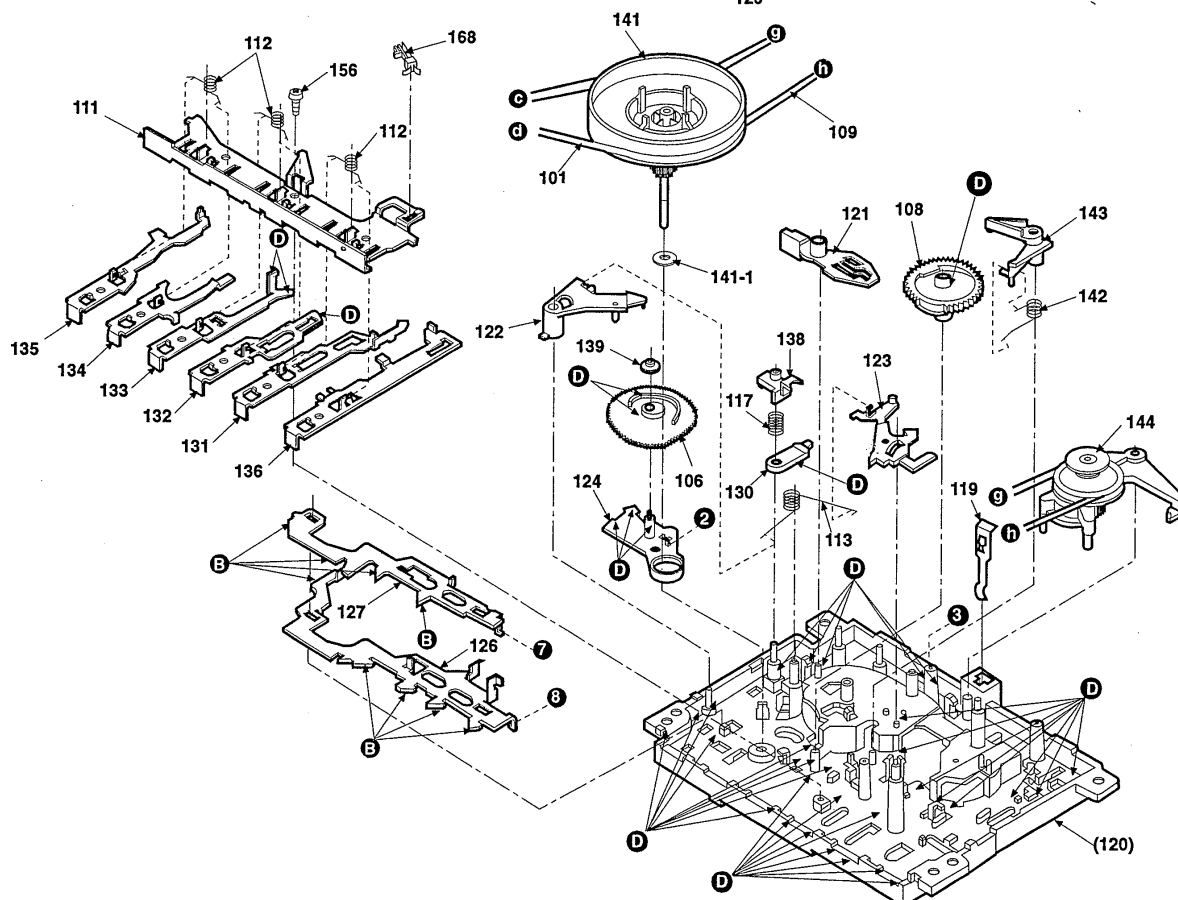



## ■ Replacement Parts List

**Notes:** \* Important safety notice :

Components identified by  mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

\* The parenthesized in the Remarks columns specify the areas. (Refer to the cover page for area.)









Parts without these indication can be used for all areas.

\* [M] in Remarks column indicates parts that are supplied by MESA.

\* **Warning** : This product uses a laser diode. Refer to caution statement on page 3.

\* **ACHTUNG** : • Die Lasereinheit nicht zerlegen.

• Die Lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
		<b>CABINET AND CHASSIS</b>									
1	REEX0051	CD FFC WIRE	[M]	38	XTN2+3F	SCREW (REC SPRING)	[M]	Q303	KTC3199BLTA	TRANSISTOR	[M]
2	REX0835Y	MOTOR + LEAF SW. WIR	[M]	39	XTN3+12GFZ	SCREW (TOP CAB)	[M]	Q304	KTC3199BLTA	TRANSISTOR	[M] 
3	REX0836	TAPE HEAD WIRE	[M]	40	XTV26+10G	SCREW (ORNAMENT)	[M]	Q305	KRA102MTA	TRANSISTOR	[M]
4	RAS10P10-G	SPEAKER	[M]	41	XTV3+10G	SCREW (SPEAKER)	[M]	Q306	KTA12710YTA	TRANSISTOR	[M]
6	RFXNXDS5PCS	LCD PANEL ASS'Y	[M]	42	XTV3+12G	SCREW (POWER PCB 3 /	[M]	Q307	KTC3199BLTA	TRANSISTOR	[M]
6-1	RKWX0128-Q	LCD PANEL	[M]	43	XTV3+20G	SCREW (BACK CAB)	[M]	Q601	KTC3199GRTA	TRANSISTOR	[M]
6-2	RGKX0033A-1S	ORNAMENT	[M]	44	XTWS3+8T	SCREW (MECHA BUTTON	[M]	Q602	KTC3199GRTA	TRANSISTOR	[M]
7	RFXGKXDS5PCS	FRONT CAB. ASS'Y	[M]	45	XYN3+F15FY	SCREW (ROD. ANT)	[M]	Q605	KRA111MTA	TRANSISTOR	[M]
8	RFXHXDS5EBS	BACK CAB. ASS'Y	[M]EB					Q606	KTC3199GRTA	TRANSISTOR	[M]
8	RFXHXDS5EGS	BACK CAB. ASS'Y	[M]EG			<b>TRAVERSE DECK</b>		Q607	KRC104MTA	TRANSISTOR	[M]
8	RFXHXDS5E-S	BACK CAB. ASS'Y	[M]E	358	RAE0152Z-M	TRAVERSE	[M]	Q701	2SA1037AKSTX	TRANSISTOR	[M]
8-1	RJC91006-1	BATT. TERMINAL	[M]	358-1	SHGD113-1	FLOATING CUSHION	[M]	Q702	DTC114YKA146	TRANSISTOR	[M]
9	RGUX0295-H	CD BUTTON	[M]	358-2	SNSD38	TRV MOTOR ASS'Y SCRE	[M]				
10	RFXLXDS5PCS	CASS LID ASS'Y	[M]	359	RME0109	FLOATING SPRING B	[M]			<b>DIODES</b>	
11	RDG0288	DAMPER GEAR	[M]	360	RME0142	FLOATING SPRING A	[M]	D1	KV1520ATS2	DIODE	[M]
12	RFXNXDT37-K	CD CLAMPER ASS'Y	[M]	361	RMR0698-K	TRY CHASSIS	[M]	D2	KV1360NTM	DIODE	[M]
13	RGKX0034-H	CD LID	[M]	362	RMS0123-1	FIXED PIN B	[M]	D3	KV1360NTM	DIODE	[M]
14	RGUX0296A-H	OPERATION BUTTON	[M]	363	XTN2+6G	PCB SCREW	[M]	D301	RVD1SS133TA	DIODE	[M]
15	RGZX0033-H	MECHA BTN	[M]	364	RMS0350	FIXED PIN A	[M]	D302	RB441QT-77	DIODE	[M]
16	RKHX0010-H	HANDLE	[M]					D304	MTZJ7R5CTA	DIODE	[M]
17	RKK318ZC7	BATT. COVER	[M]			<b>INTEGRATED CIRCUITS</b>		D305	RVD1SS133TA	DIODE	[M]
18	RKQX0009A-H	TOP CAB	[M]	IC1	TA2008AN	IC, TUNER	[M]	D306	RVD1SS133TA	DIODE	[M]
19	RGWX0043-H	VOLUME KNOB	[M]	IC2	LC72131D	IC, PLL	[M]	D307	RVD1SS133TA	DIODE	[M]
20	RME0228	CD OPEN SPRING	[M]	IC301	BA3313L	IC, DECK PRE AMP	[M]	D308	RVD1SS133TA	DIODE	[M]
21	RMB0509	SPRING (CD BUTTON)	[M]	IC302	S81250SGY-Z	IC, 5V REGULATOR	[M] 	D309	MTZJ6R2CTA	DIODE	[M]
23	RME0229	CASSETTE OPEN SPRING	[M]	IC303	TA8227P	IC, POWER AMP	[M] 	D310	RVD1SS133TA	DIODE	[M]
24	RGVX0019-H	FUNCTION KNOB	[M]	IC601	M38223M4M168	IC, MICON	[M]	D501	RL1N4003S-P	DIODE	[M] 
25	RMV0205	HEATSINK	[M]	IC602	PST9131T	IC, RESET	[M]	D502	RL1N4003S-P	DIODE	[M] 
28	RMEX0007	ANTENNA TERMINAL	[M]	IC701	AN8837SBE1	IC, HEAD AMP	[M]	D503	RL1N4003S-P	DIODE	[M] 
29	RMXX0004	MECHA SPACER	[M]	IC702	MN662746RPK1	IC, LSI	[M]	D504	RL1N4003S-P	DIODE	[M] 
30	RMNX0022	LCD HOLDER	[M]	IC703	AN8780NSBE2	IC	[M]	D505	RVD1SS133TA	DIODE	[M]
31	RMA1007	SHIELD PLATE	[M]					D601	RVD1SS133TA	DIODE	[M]
32	RMXX0016	RECORD SPRING	[M]			<b>TRANSISTORS</b>		D614	MTZJ5R1BTA	DIODE	[M]
33	RWJ0205430DX	SPEAKER WIRE	[M]	Q1	KTC3199GRTA	TRANSISTOR	[M]				
34	SUX102	MECHA BUTTON SHAFT	[M]	Q101	KTC3199GRTA	TRANSISTOR	[M]			<b>VARIABLE RESISTORS</b>	
35	XEARR210CA-C	ROD ANTENNA	[M]	Q103	KTC3199GRTA	TRANSISTOR	[M]	VR301	RRV12B01B14B	VR, VOLUME	[M]
36	RMQ0152-E	FIXTURE	[M]	Q201	KTC3199GRTA	TRANSISTOR	[M]				
37	RHM0001	MAGNET	[M]	Q203	KTC3199GRTA	TRANSISTOR	[M]			<b>SWITCHES</b>	
				Q301	2SB1566E	TRANSISTOR	[M] 	S701	RSH1A043-U	SW, REST	[M]



Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
SW301	RSS2F001-B	SW, RECORD	[M]	L6	RL02B131-T	AM OSC COIL	[M]	FH501	RJF0028	FUSECLIP	[M]
SW302	RSS3D002-B	SW, FUNCTION	[M]	L7	RLQZP101KT-Y	INDUCTOR	[M]	FH502	RJF0028	FUSECLIP	[M]
SW501	RJJ1SE01-X	SW, AC INLET (JK501)	[M] ⚠	L8	RLQY30S1W-F	FM COIL	[M]	FP501	RSFMB20KT-L	FUSE PROTECTOR	[M] ⚠
SW602	RSH1A033-U	SW, CD LEAF	[M]	L301	RL09B17-T	BIAS COIL	[M]				
SW801	EVQPAD05R	SW, REW SKIP	[M]	L310	RLQZB100KT-D	INDUCTOR	[M]			<b>HOLDERS</b>	
SW802	EVQPAD05R	SW, FWD SKIP	[M]	L501	RLL500050T-Y	INDUCTOR	[M] ⚠	H302	RJS1A5511	WIRE HOLDER	[M]
SW803	EVQPAD05R	SW, FM MODE/STOP/CLR	[M]	L502	RLL500050T-Y	INDUCTOR	[M] ⚠				
SW804	EVQPAD05R	SW, BAND/CD PLAY/PAU	[M]	L608	RLQZP100KT-Y	INDUCTOR	[M]			<b>JACKS</b>	
SW805	EVQPAD05R	SW, PLAY/TUNE MODE	[M]	L619	RLQZP2R2KT-Y	INDUCTOR	[M]	JK301	RJJ37TK01-1C	JK, HEADPHONE	[M]
SW806	EVQPAD05R	SW, MEMORY PROGRAM	[M]	T1	RLI2B015-T	AM IFT	[M]	JK501	RJJ1SE01-X	JK, AC INLET	[M] ⚠
SW807	EVQPAD05R	SW, TONE	[M]	T501	RTP1K1B007-X	TRANSFORMER	[M] ⚠				
										<b>WIRES</b>	
		<b>CONNECTORS</b>				<b>COMPONENT COMBINATION</b>		W301	REXX0197	MAIN TO POWER WIRE	[M]
CN303	RJS1A6823-J	FFC CONN (CD)	[M]	Z601	RSL5215-T	LCD	[M]	W302	RWJ0111210QS	MAIN TO TUNER WIRE	[M]
CN304	RJT029W04V	4P CONN (LEAF SW)	[M]					W501	RWJ0103190SS	BATTERY WIRE	[M]
CN701	RJS2A6016	16P FFC CONNECTOR	[M]			<b>CERAMIC FILTERS</b>		W602	RWJ7102210KK	CD LEAF SW WIRE	[M]
CN702	RJS1A6723-1Q	23P FFC CONNECTOR	[M]	CF1	RLFFETNL02AL	FM CERAMIC FILTER	[M]				
CP301	RJP3G9YA	3P CONN (POWER-MAIN)	[M]	CF3	RLFDFT20AL	FM DISCRIMINATOR	[M]				
CP302	RJS5T7ZA	SPEAKER CONNECTOR	[M]	CF4	RLFCFA459L4B	AM FILTER	[M]				
CP303	RJP4G18ZA	4P CONN (TAPE HEAD)	[M]								
						<b>OSCILLATORS</b>					
		<b>TRIMMER</b>		X2	RSXZ456KM01	CRYSTAL	[M]				
CT1	ECRLA010A53R	TRIMMER CAPACITOR	[M]	X3	RSXD7M20C01	CRYSTAL	[M]				
				X602	RSXZ4M19Z01T	MICON CRYSTAL	[M]				
		<b>COILS &amp; TRANSFORMERS</b>		X701	RSXZ16M9M01T	CERAMIC OSC	[M]				
L2	RLQY30S1W-F	FM COIL	[M]								
L3	RLV2C041-0	FERRITE ANTENNA	[M]			<b>FUSES &amp; FUSES HOLDER</b>					
L4	RLD4Y45-F	FM COIL	[M]	F501	XBA2C12TB0L	FUSE	[M] ⚠				

## Resistors & Capacitors

- Notes :
- Important safety notice:  
Components identified by ⚠ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
  - The parenthesized in the Remarks columns specify the areas. (Refer to the cover page for area.) Parts without these indication can be used for all areas.
  - [M] in Remarks column indicates parts that are supplied by MESA.
  - Capacitor values are in microfarad (μF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
  - Resistors values are in ohms, unless specified otherwise, 1k=1,000(OHM), 1M=1,000k(OHM)

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
	<b>RESISTORS</b>		R11	ERDS2TJ223T	22K 1/4W [M]	R23	ERDS2TJ223T	22K 1/4W [M]	R32	ERDS2TJ331T	330 1/4W [M]
			R12	ERDS2TJ103T	10K 1/4W [M]	R24	ERDS2TJ103T	10K 1/4W [M]	R50	ERDS2TJ104T	100K 1/4W [M]
R2	ERDS2TJ103T	10K 1/4W [M]	R13	ERDS2TJ474T	470K 1/4W [M]	R25	ERDS2TJ223T	22K 1/4W [M]	R51	ERDS2TJ103T	10K 1/4W [M]
R3	ERDS2TJ332T	3.3K 1/4W [M]	R14	ERDS2TJ474T	470K 1/4W [M]	R26	ERDS2TJ103T	10K 1/4W [M]	R91	ERDS2TJ330T	33 1/4W [M]
R4	ERDS2TJ472T	4.7K 1/4W [M]	R16	ERDS2TJ104T	100K 1/4W [M]	R27	ERDS2TJ332T	3.3K 1/4W [M]	R92	ERDS2TJ472T	4.7K 1/4W [M]
R5	ERDS2TJ221T	220 1/4W [M]	R17	ERDS2TJ222T	2.2K 1/4W [M]	R28	ERDS2TJ223T	22K 1/4W [M]	R101	ERDS2TJ183T	18K 1/4W [M]
R6	ERDS2TJ104T	100K 1/4W [M]	R20	ERDS2TJ223T	22K 1/4W [M]	R29	ERDS2TJ103T	10K 1/4W [M]	R102	ERDS2TJ272T	2.7K 1/4W [M]
R8	ERDS2TJ104T	100K 1/4W [M]	R21	ERDS2TJ472T	4.7K 1/4W [M]	R30	ERDS2TJ472T	4.7K 1/4W [M]	R103	ERDS2TJ224T	220K 1/4W [M]
R9	ERDS2TJ104T	100K 1/4W [M]	R22	ERDS2TJ102T	1K 1/4W [M]	R31	ERDS2TJ222T	2.2K 1/4W [M]	R104	ERDS2TJ682T	6.8K 1/4W [M]

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
R105	ERDS2TJ222T	2.2K 1/4W [M]	R323	ERDS2TJ222T	2.2K 1/4W [M]	R717	ERJ6GEYJ102A	1K 1/10W[M]	C15	ECFR1C683MR	0.068 16V [M]
R106	ERDS2TJ680T	68 1/4W [M]	R324	ERDS2TJ333T	33K 1/4W [M]	R718	ERJ6GEYJ102A	1K 1/10W[M]	C16	ECFR1C823MR	0.082 16V [M]
R108	ERDS2TJ562T	5.6K 1/4W [M]	R326	ERDS2TJ223T	22K 1/4W [M]	R719	ERJ6GEYJ102A	1K 1/10W[M]	C17	ECFR1C823MR	0.082 16V [M]
R110	ERDS2TJ682T	6.8K 1/4W [M]	R327	ERDS2TJ223T	22K 1/4W [M]	R720	ERJ6GEYJ102A	1K 1/10W[M]	C18	ECFR1C333MR	0.033 16V [M]
R111	ERDS2TJ562T	5.6K 1/4W [M]	R330	ERDS2TJ474T	470K 1/4W [M]	R721	ERJ6GEYJ101A	100 1/10W[M]	C19	ECFR1C333MR	0.033 16V [M]
R113	ERDS2TJ393T	39K 1/4W [M]	R335	ERDS2TJ103T	10K 1/4W [M]	R723	ERJ6GEYJ272A	2.7K 1/10W[M]	C20	ECEA1HU010B	1 50V [M]
R114	ERDS2TJ103T	10K 1/4W [M]	R336	ERDS2TJ122T	1.2K 1/4W [M]	R724	ERJ6GEYJ333A	33K 1/10W[M]	C21	ECEA1HU010B	1 50V [M]
R115	ERDS2TJ472T	4.7K 1/4W [M]	R601	ERDS2TJ473T	47K 1/4W [M]	R725	ERJ6GEYJ122A	1.2K 1/10W[M]	C22	ECEA1HU4R7B	4.7 50V [M]
R116	ERDS2TJ222T	2.2K 1/4W [M]	R602	ERDS2TJ473T	47K 1/4W [M]	R727	ERJ6GEYJ682A	6.8K 1/10W[M]	C23	ECFR1C333MR	0.033 16V [M]
R117	ERDS2TJ122T	1.2K 1/4W [M]	R603	ERDS2TJ473T	47K 1/4W [M]	R728	ERJ6GEYJ682A	6.8K 1/10W[M]	C24	ECFR1C333MR	0.033 16V [M]
R123	ERDS2TJ472T	4.7K 1/4W [M]	R604	ERDS2TJ153T	15K 1/4W [M]	R729	ERJ6GEYJ562A	5.6K 1/10W[M]	C30	ECBT1H331KB5	330P 50V [M]
R125	ERDS2TJ680T	68 1/4W [M]	R605	ERDS2TJ334T	330K 1/4W [M]	R731	ERJ6GEYJ123A	12K 1/10W[M]	C31	ECBT1C103MS5	0.01 16V [M]
R127	ERDS2TJ181T	180 1/4W [M]	R607	ERDS2TJ104T	100K 1/4W [M]	R734	ERJ6GEYJ101A	100 1/10W[M]	C32	ECBT1H102KB5	1000P 50V [M]
R201	ERDS2TJ183T	18K 1/4W [M]	R608	ERDS2TJ224T	220K 1/4W [M]	R735	ERJ6GEYJ101A	100 1/10W[M]	C33	ECBT1H102KB5	1000P 50V [M]
R202	ERDS2TJ272T	2.7K 1/4W [M]	R610	ERDS2TJ153T	15K 1/4W [M]	R736	ERJ6GEYJ101A	100 1/10W[M]	C34	ECBT1H102KB5	1000P 50V [M]
R203	ERDS2TJ224T	220K 1/4W [M]	R612	ERDS2TJ152T	1.5K 1/4W [M]	R738	ERJ6GEYJ223A	22K 1/10W[M]	C35	ECEA1AU101B	100 10V [M]
R204	ERDS2TJ682T	6.8K 1/4W [M]	R613	ERDS2TJ333T	33K 1/4W [M]	R741	ERJ6GEYJ562A	5.6K 1/10W[M]	C36	ECEA1AU101B	100 10V [M]
R205	ERDS2TJ222T	2.2K 1/4W [M]	R614	ERDS2TJ104T	100K 1/4W [M]	R742	ERJ6GEYJ562A	5.6K 1/10W[M]	C37	ECBT1C103MS5	0.01 16V [M]
R206	ERDS2TJ680T	68 1/4W [M]	R615	ERDS2TJ104T	100K 1/4W [M]	R743	ERJ6GEYJ562A	5.6K 1/10W[M]	C39	ECBT1H120JC5	12P 50V [M]
R208	ERDS2TJ562T	5.6K 1/4W [M]	R617	ERDS2TJ104T	100K 1/4W [M]	R744	ERJ6GEYJ104A	100K 1/10W[M]	C40	ECBT1C222MR5	2200P 16V [M]
R210	ERDS2TJ682T	6.8K 1/4W [M]	R624	ERDS2TJ472T	4.7K 1/4W [M]	R745	ERJ6GEYJ155A	1.5M 1/10W[M]	C42	ECBT1H180JC5	18P 50V [M]
R211	ERDS2TJ562T	5.6K 1/4W [M]	R625	ERDS2TJ472T	4.7K 1/4W [M]	R748	ERJ6GEYJ272A	2.7K 1/10W[M]	C43	ECBT1H101KB5	100P 50V [M]
R213	ERDS2TJ393T	39K 1/4W [M]	R628	ERDS2TJ105T	1M 1/4W [M]	R749	ERJ6GEYJ682A	6.8K 1/10W[M]	C44	ECEA1HU2R2B	2.2 50V [M]
R214	ERDS2TJ103T	10K 1/4W [M]	R634	ERDS2TJ102T	1K 1/4W [M]	R752	ERJ8GEYJ220A	22 1/8W [M]	C45	ECBT1H102KB5	1000P 50V [M]
R215	ERDS2TJ472T	4.7K 1/4W [M]	R635	ERDS2TJ102T	1K 1/4W [M]	R770	ERJ6GEYJ224A	220K 1/10W[M]	C48	ECEA1HU010B	1 50V [M]
R216	ERDS2TJ222T	2.2K 1/4W [M]	R636	ERDS2TJ102T	1K 1/4W [M]	R801	ERDS2TJ101T	100 1/4W [M]	C49	ECBT1H102KB5	1000P 50V [M]
R217	ERDS2TJ122T	1.2K 1/4W [M]	R637	ERDS2TJ333T	33K 1/4W [M]	R802	ERDS2TJ152T	1.5K 1/4W [M]	C50	ECBT1H102KB5	1000P 50V [M]
R223	ERDS2TJ472T	4.7K 1/4W [M]	R638	ERDS2TJ473T	47K 1/4W [M]	R803	ERDS2TJ222T	2.2K 1/4W [M]	C51	ECEA1HU010B	1 50V [M]
R225	ERDS2TJ680T	68 1/4W [M]	R639	ERDS2TJ224T	220K 1/4W [M]	R804	ERDS2TJ272T	2.7K 1/4W [M]	C53	ECBT1H102KB5	1000P 50V [M]
R227	ERDS2TJ181T	180 1/4W [M]	R640	ERDS2TJ473T	47K 1/4W [M]	R805	ERDS2TJ392T	3.9K 1/4W [M]	C54	ECBT1H102KB5	1000P 50V [M]
R301	ERDS2TJ223T	22K 1/4W [M]	R641	ERDS2TJ102T	1K 1/4W [M]	R806	ERDS2TJ562T	5.6K 1/4W [M]	C60	ECBT1H102KB5	1000P 50V [M]
R302	ERDS2TJ101T	100 1/4W [M]	R642	ERDS2TJ102T	1K 1/4W [M]	R807	ERDS2TJ822T	8.2K 1/4W [M]	C91	ECEA1HU2R2B	2.2 50V [M]
R304	ERDS2TJ331T	330 1/4W [M]	R643	ERDS2TJ102T	1K 1/4W [M]				C92	ECBT1H331KB5	330P 50V [M]
R305	ERDS2TJ8R2T	8.2 1/4W [M]	R645	ERDS2TJ102T	1K 1/4W [M]		<b>CAPACITORS</b>		C98	ECBT1H331KB5	330P 50V [M]
R306	ERDS2TJ473T	47K 1/4W [M]	R651	ERDS2TJ562T	5.6K 1/4W [M]				C99	ECBT1H102KB5	1000P 50V [M]
R307	ERDS2TJ221T	220 1/4W [M]	R652	ERDS2TJ152T	1.5K 1/4W [M]	C1	ECBT1H470J5	47P 50V [M]	C101	ECBT1C272MR5	2700P 16V [M]
R308	ERD2FCVJ4R7T	4.7 1/4W [M]	R701	ERJ6GEYJ4R7A	4.7 1/10W[M]	C2	ECBT1H100JC5	10P 50V [M]	C102	ECEA1CU100B	10 16V [M]
R310	ERDS2TJ393T	39K 1/4W [M]	R702	ERJ6GEYJ822A	8.2K 1/10W[M]	C3	ECFR1C223KR	0.022 16V [M]	C103	ECBT0J223MS5	0.022 6.3V [M]
R311	ERDS2TJ393T	39K 1/4W [M]	R704	ERJ6GEYJ102A	1K 1/10W[M]	C4	ECBT1H102KB5	1000P 50V [M]	C104	ECEA1AU101B	100 10V [M]
R312	ERDS2TJ222T	2.2K 1/4W [M]	R705	ERJ6GEYJ124A	120K 1/10W[M]	C5	ECBT1H5R6KC5	5.6P 50V [M]	C106	ECBT1H681KB5	680P 50V [M]
R313	ERDS2TJ473T	47K 1/4W [M]	R706	ERJ6GEYJ102A	1K 1/10W[M]	C6	ECBT1H102KB5	1000P 50V [M]	C109	ECEA1HUR22B	0.22 50V [M]
R314	ERDS2TJ331T	330 1/4W [M]	R707	ERJ6GEYJ474A	470K 1/10W[M]	C7	ECBT1H120JC5	12P 50V [M]	C110	ECEA1HUR47B	0.47 50V [M]
R315	ERDS2TJ122T	1.2K 1/4W [M]	R708	ERJ6GEYJ154A	150K 1/10W[M]	C8	ECBT1H102KB5	1000P 50V [M]	C112	ECEA1HU2R2B	2.2 50V [M]
R316	ERDS2TJ331T	330 1/4W [M]	R709	ERJ6GEYJ473A	47K 1/10W[M]	C9	ECBT1H102KB5	1000P 50V [M]	C113	ECBT1C103MS5	0.01 16V [M]
R317	ERDS2TJ151T	150 1/4W [M]	R710	ERJ6GEYJ103A	10K 1/10W[M]	C10	ECBT1H100JC5	10P 50V [M]	C116	ECBT1H102KB5	1000P 50V [M]
R318	ERDS2TJ103T	10K 1/4W [M]	R711	ERJ6GEYJ154A	150K 1/10W[M]	C12	ECBT1H331KB5	330P 50V [M]	C117	ECEA1AU101B	100 10V [M]
R319	ERDS2TJ151T	150 1/4W [M]	R712	ERJ6GEYJ221A	220 1/10W[M]	C13	ECEA1CU100B	10 16V [M]	C118	ECEA1AU101B	100 10V [M]
R320	ERDS2TJ472T	4.7K 1/4W [M]	R715	ERJ6GEYJ122A	1.2K 1/10W[M]	C14	ECBT1H102KB5	1000P 50V [M]	C120	ECEA1AU471B	470 10V [M]

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
C121	ECBT1H102KB5	1000P 50V [M]	C604	ECFR1C104MR	0.1 16V [M]	C722	ECUZ1H150JCN	15P 50V [M]	RJ726	ERJ6GEY0R00A	0 1/10W [M]
C122	ECBT1C332MR5	3300P 16V [M]	C605	ECEA1HU010B	1 50V [M]	C723	ECEA1AKA221I	220 10V [M]	RJ727	ERJ6GEY0R00A	0 1/10W [M]
C125	RCQB2A104KM	0.1 100V [M]	C617	ECBT1H102KB5	1000P 50V [M]	C724	ECUZ1E104MBN	0.1 25V [M]	RJ728	ERJ6GEY0R00A	0 1/10W [M]
C130	ECBT1C472KR5	4700P 16V [M]	C618	ECBT1H102KB5	1000P 50V [M]	C725	ECUZ1H102KBN	1000P 50V [M]	RJ750	ERJ6GEY0R00A	0 1/10W [M]
C201	ECBT1C272MR5	2700P 16V [M]	C619	ECBT1H102KB5	1000P 50V [M]	C726	ECUZ1H102KBN	1000P 50V [M]			
C202	ECEA1CU100B	10 16V [M]	C620	ECBT1H820KB5	82P 50V [M]	C727	ECA1HAK010XI	1 50V [M]		<b>TEST JUMPERS</b>	
C203	ECBT0J223MS5	0.022 6.3V [M]	C621	ECBT1H101KB5	100P 50V [M]	C728	ECA1HAK010XI	1 50V [M]			
C204	ECEA1AU101B	100 10V [M]	C622	ECBT1H102KB5	1000P 50V [M]	C730	ECUZ1E104ZFN	0.1 25V [M]	TJ701	EYF8CU	TEST JUMPER [M]
C206	ECBT1H681KB5	680P 50V [M]	C623	ECEA1AU101B	100 10V [M]	C731	ECEA0JKA221I	220 6.3V [M]			
C209	ECEA1HUR22B	0.22 50V [M]	C624	ECBT1H680J5	68P 50V [M]	C732	ECEA0JKA221I	220 6.3V [M]			
C210	ECEA1HUR47B	0.47 50V [M]	C625	ECBT1H820KB5	82P 50V [M]	C733	ECUZ1E104MBN	0.1 25V [M]			
C212	ECEA1HU2R2B	2.2 50V [M]	C627	ECBT1H561KB5	560P 50V [M]	C734	ECEA1AKA221I	220 10V [M]			
C213	ECBT1C103MS5	0.01 16V [M]	C629	ECBT1H102KB5	1000P 50V [M]	C735	ECUZ1E104ZFN	0.1 25V [M]			
C216	ECBT1H102KB5	1000P 50V [M]	C632	ECBT1H331KB5	330P 50V [M]	C736	ECUZ1E104ZFN	0.1 25V [M]			
C217	ECEA1AU101B	100 10V [M]	C635	ECBT1H331KB5	330P 50V [M]	C737	ECUZ1E104ZFN	0.1 25V [M]			
C218	ECEA1AU101B	100 10V [M]	C650	ECBT1H330J5	33P 50V [M]	C738	ECUZ1E104MBN	0.1 25V [M]			
C220	ECEA1AU471B	470 10V [M]	C651	ECBT1H330J5	33P 50V [M]	C739	ECUZ1H103KBN	0.01 50V [M]			
C221	ECBT1H102KB5	1000P 50V [M]	C652	ECBT1H101KB5	100P 50V [M]	C742	ECUZ1E273KBN	0.027 25V [M]			
C222	ECBT1C332MR5	3300P 16V [M]	C654	ECBT1H330J5	33P 50V [M]	C743	ECUZ1E104ZFN	0.1 25V [M]			
C225	RCQB2A104KM	0.1 100V [M]	C655	ECBT1H330J5	33P 50V [M]	C744	ECUZ1E123KBN	0.012 25V [M]			
C230	ECBT1C472KR5	4700P 16V [M]	C656	ECBT1H101KB5	100P 50V [M]	C745	ECUZ1C473KBN	0.047 16V [M]			
C301	ECEA1AU101B	100 10V [M]	C657	ECBT1H330J5	33P 50V [M]	C747	ECUV1H221KBN	220P 50V [M]			
C302	ECEA1AU221B	220 10V [M]	C658	ECBT1C103MS5	0.01 16V [M]	C749	ECUZ1H222KBN	2200P 50V [M]			
C305	ECEA1HU2R2B	2.2 50V [M]	C660	ECBT1H331KB5	330P 50V [M]	C750	ECUZ1E104MBN	0.1 25V [M]			
C307	RCQB2A392KM	3900P 100V [M]	C662	ECBT1H102KB5	1000P 50V [M]	C751	ECUZ1E104MBN	0.1 25V [M]			
C308	ECEA1AU101B	100 10V [M]	C664	ECBT1H102KB5	1000P 50V [M]	C752	ECUZ1H102KBN	1000P 50V [M]			
C309	ECBT1C682MR5	6800P 16V [M]	C667	ECBT1H102KB5	1000P 50V [M]	C753	ECUZ1H471KBM	470P 50V [M]			
C310	ECBT1H102KB5	1000P 50V [M]	C668	ECBT1H331KB5	330P 50V [M]	C754	ECUZ1H471KBN	470P 50V [M]			
C313	ECBT1H561KB5	560P 50V [M]	C669	ECBT1H331KB5	330P 50V [M]	C761	ECUZ1H471KBN	470P 50V [M]			
C314	ECEA1AU470B	47 10V [M]	C670	ECBT1H102KB5	1000P 50V [M]	C762	ECUZ1H471KBN	470P 50V [M]			
C315	ECBT1H102KB5	1000P 50V [M]	C671	ECBT1H561KB5	560P 50V [M]						
C316	ECEA1AU101B	100 10V [M]	C672	ECBT1H561KB5	560P 50V [M]		<b>CHIP JUMPERS</b>				
C317	ECA1CM222EV	22 16V [M]	C701	ECEA0JKA330I	33 6.3V [M]						
C318	ECEA1HU4R7B	4.7 50V [M]	C702	ECUZ1E104MBN	0.1 25V [M]	RJ701	ERJ6GEY0R00A	0 1/10W [M]			
C319	ECBT1H102KB5	1000P 50V [M]	C703	ECEA0JKA101I	100 6.3V [M]	RJ702	ERJ8GEY0R00A	0 1/8W [M]			
C320	ECEA1AU220B	22 10V [M]	C704	ECUZ1E104MBN	0.1 25V [M]	RJ703	ERJ8GEY0R00A	0 1/8W [M]			
C323	ECEA1CU220B	22 16V [M]	C706	ECUZ1H272KBN	2700P 50V [M]	RJ704	ERJ8GEY0R00A	0 1/8W [M]			
C324	ECBT1H102KB5	1000P 50V [M]	C707	ECUZ1E273KBN	0.027 25V [M]	RJ705	ERJ8GEY0R00A	0 1/8W [M]			
C325	ECEA1CU101B	100 16V [M]	C710	ECUV1H151KCN	150P 50V [M]	RJ706	ERJ8GEY0R00A	0 1/8W [M]			
C330	ECBT1H104ZF5	0.1 50V [M]	C711	ECUZ1E104ZFN	0.1 25V [M]	RJ707	ERJ8GEY0R00A	0 1/8W [M]			
C331	ECEA1AU221B	220 10V [M]	C712	ECUZ1E104ZFN	0.1 25V [M]	RJ708	ERJ8GEY0R00A	0 1/8W [M]			
C333	ECBT1H104ZF5	0.1 50V [M]	C713	ECUZ1E104MBN	0.1 25V [M]	RJ709	ERJ8GEY0R00A	0 1/8W [M]			
C340	ECA0JM332EV	3300 6.3V [M]	C714	ECEA0JKA101I	100 6.3V [M]	RJ710	ERJ8GEY0R00A	0 1/8W [M]			
C501	ECKR1H103ZF5	0.01 50V [M]	C715	ECUZ1H182KBN	1800P 50V [M]	RJ721	ERJ6GEY0R00A	0 1/10W [M]			
C502	ECKR1H103ZF5	0.01 50V [M]	C716	ECUZ1H821KBN	820P 50V [M]	RJ722	ERJ6GEY0R00A	0 1/10W [M]			
C503	ECKR1H103ZF5	0.01 50V [M]	C717	ECUZ1E104ZFN	0.1 25V [M]	RJ723	ERJ6GEY0R00A	0 1/10W [M]			
C504	ECKR1H103ZF5	0.01 50V [M]	C718	ECUZ1C224KBN	0.22 16V [M]	RJ724	ERJ6GEY0R00A	0 1/10W [M]			
C602	ECBT1H102KB5	1000P 50V [M]	C721	ECUZ1H150JCN	15P 50V [M]	RJ725	ERJ6GEY0R00A	0 1/10W [M]			


## ■ Packing Materials & Accessories

- Notes : \*
- Important safety notice : Components identified by  $\triangle$  mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
  - \* The parenthesized in the Remarks columns specify the areas. (Refer to the cover page for area.)
  - \* Parts without these indication can be used for all areas.
  - \* [M] in Remarks column indicates parts supplied by MESA.
  - \* The "(SF)" marks denotes standard part.
  - \* Reference for O/I book languages are as follows :
 

Ar : Arabic	Cf : Canadian French	Ch : Chinese	Cz : Czech	Da : Danish
Du : Dutch	En : English	Fr : French	Ge : German	It : Italian
Ko : Korean	Po : Polish	Ru : Russian	Sp : Spanish	Sw : Swedish

Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
		<b>PACKING MATERIALS</b>				<b>ACCESSORIES</b>					
P1	RPGX0507	PACKING CASE	[M]EB EG	A1	RJA0019-2K	AC CORD (SF) $\triangle$	[M]EG E				
P1	RPGX0508	PACKING CASE	[M]E	A1	RJA0053-2X	AC CORD $\triangle$	[M]EB				
P2	RPNX0089	POLYFOAM	[M]	A2	RQT4653-E	O/I BOOK (En/Sp/Sw)	[M]E				
P3	RPH0131	MIRAMAT SHEET	[M]	A2	RQT4654-R	O/I BOOK (Ru/Cz/Po)	[M]E				
P4	RPNX0092	CENTER POLYFOAM	[M]	A2	RQT4655-D	O/I BOOK (Ge/It/Fr)	[M]EG				
				A2	RQT4656-H	O/I BOOK (Du/Da)	[M]EG				
				A2	RQT4657-B	O/I BOOK (En)	[M]EG				

## ■ Packaging

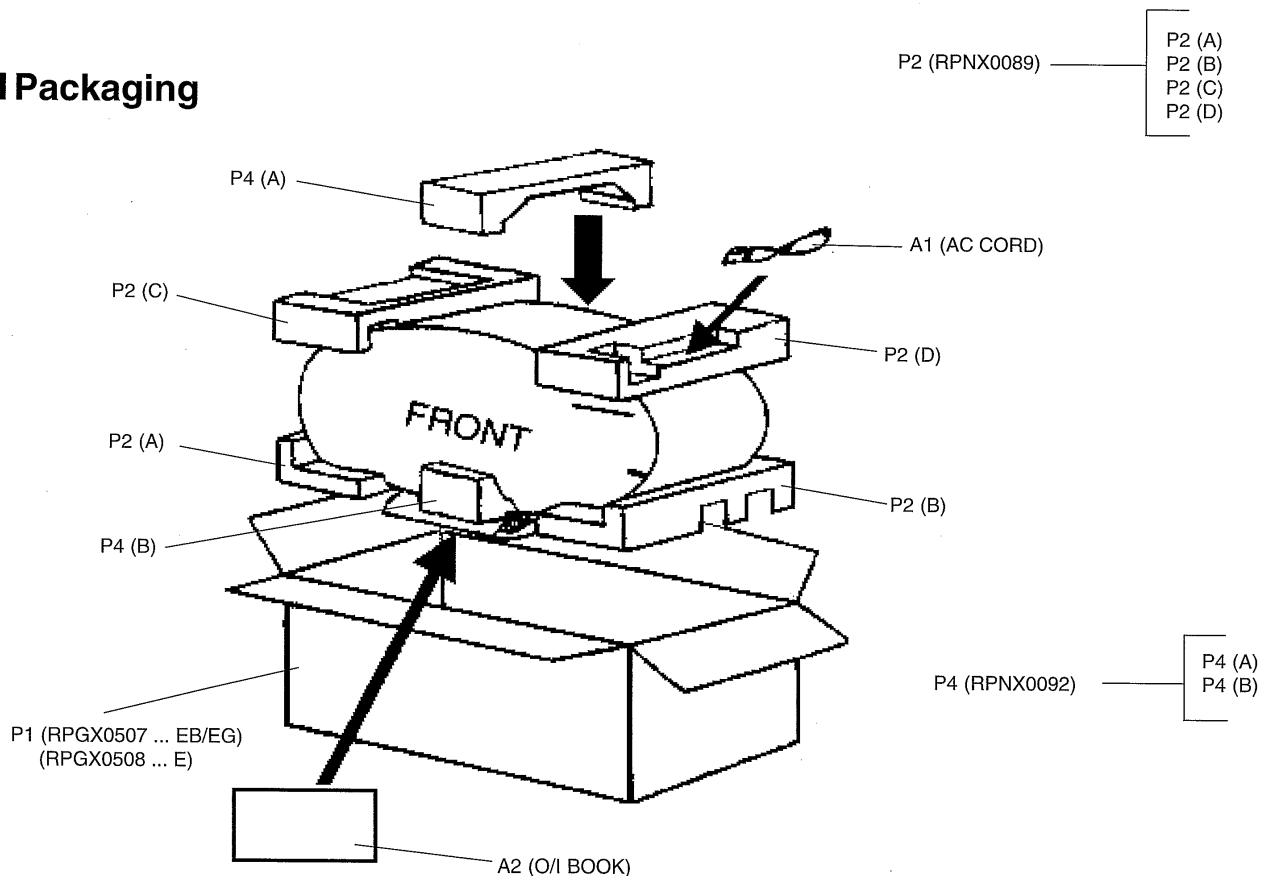

**MESA** Printed in Singapore  
G981107500P/F/M/J/S