CD Stereo System

250 W

250 mV

13.3 kΩ

2.2 µV

560 μV/m

DC servo motor


AC bias 100 kHz

AC erase 100 kHz

1

Service Manua



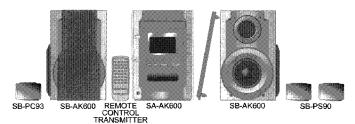

SA-AK600P SA-AK600PC

Colour

(S)... Silver Type

TAPE SECTION:

SG2 MECHANISM SERIES

CD SECTION:

RAE0152Z-3 TRAVERSE DECK SERIES

Specifications

n AMPLIFIER SECTION (10% THD) Power output Input sensitivity 10% THD, both channels driven AUX 1, AUX 2 75 Hz Input impedance 78 W Subwoofer AUX 1, AUX 2 (Total effective impedance: 4Ω) Digital input 1 kHz Optical Front 48 W per ch (6Ω) Coaxial n FM TUNER SECTION Center 54 W (8Ω) 46 W per ch (8Ω) 87.9 - 107.9 MHz (200 kHz steps) Surround Frequency range 87.5 - 108.0 MHz (100 kHz steps) Total power in stereo mode (Front and Subwoofer) 174 W Sensitivity 2.5 μV (IHF) Total power in DOLBY DIGITAL mode S/N 26 dB 320 W Antenna terminal(s) 75 Ω (unbalanced) n AM TUNER SECTION Power output 10% THD, both channels drive Frequency range 520 - 1710 kHz (10 kHz steps) 55 Hz - 100 Hz Sensitivity 55 W Subwoofer S/N 20 dB (at 1000 kHz) (Total effective impedance: 4Ω) n CASSETTE DECK SECTION 100 Hz - 15 kHz Track system 4 track, 2 channel Front 40 W per ch (6Ω) Heads Center 45 W (8 Ω) Record/playback Solid permalloy head Surround 35 W per ch (8Ω) **Erasure** Double gap ferrite head

(Front and Subwoofer) 135 W

Motor

Recording system

Erasing system

anasonic

Total power in stereo mode (10% THD)

Total power in DOLBY DIGITAL mode

© 2002 Matsushita Electronics (S) Pte. Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

SA-AK600P / SA-AK600PC

Tape speed	speed 4.8 cm/s (1 7/8 ips)		mode
Overall frequency response (+3 dE	3, -6 dB at DECK OUT)		0.34 W
NORMAL (TYPE I)	35 Hz - 14 kHz	Dimensions (W x H x D)	215.4 x 315 x 350 mm
S/N ratio	50 dB (A_WTD)		(8 1/2" x 12 13/32" x 13 25/32")
Wow and flutter	0.18 % (WRMS)	Mass	
Fast forward and rewind time	Approx. 120 seconds with	For U.S.A.	Approx 7.1 kg (15.7 lb.)
	C-60 cassette tape	For Canada	Approx 6.7 kg (14.8 lb.)
n DISC SECTION		n SYSTEM	
Sampling frequency	44.1 kHz	SC-AK600(P)	Music center: SA-AK600(P)
Decoding	16 bit linear		Front speaker: SB-AK600(P)
Beam source/wave length	Semiconductor laser/780 nm		Surround speaker: SB-PT93(P1)
Number of channels	Stereo	SC-AK600(PC)	Music center: SA-AK600(PC)
Frequency response	20 Hz - 20 kHz (+1, -2 dB)		Front speaker: SB-AK600(P)
Wow and flutter	Below measurable limit		Surround speaker: SB-PT93(P)
Digital filter	8 fs	Notes:	
D/A converter MASH (1 bit DAC)		1. Specifications are subject t	o change without notice. Mass and
n GENERAL		dimensions are aproximate	•
Power supply	AC 120 V, 60Hz		measured by the digital spectrum
Power consumption	180 W	analyzer.	

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

Page	Page
1 Safety Precaution3	10 Description of Error Code 18
2 Before Repair and Adjustment3	11 CD Test Mode Function 19
3 Protection Circuitry4	12 Measurements and Adjustments20
4 Accessories4	13 Illustration of IC 痴, Transistors and Diodes21
5 Handling Precautions For Traverse Deck5	14 Terminal Function of IC 痴22
6 Precaution of Laser Diode 6	15 Schematic Diagram25
7 Operation Procedures7	16 Printed Circuit Board42
8 Disassembly and Main Component Replacement Procedures	17 Wiring Connection Diagram 53
9	18 Troubleshooting Guide54
9 Self-Diagnostic Function17	19 Parts Location and Replacement Parts List55

Safety Precaution

(This "Safety Precaution" is applied only in U.S.A.)

- 1. Before servicing, unplug the power cord to prevent an electric shock.
- 2. When replacing parts, use only manufacturer's recommended components for safety.
- 3. Check the condition of the power cord. Replace if wear or damage is evident.
- 4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
- 5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.

1.1. Insulation Resistance Test


- 1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
- 2. Turn on the power switch.
- 3. Measure the resistance value with ohmmeter between the jumper AC plug and each exposed metal cabinet part, such as screwheads, antenna, control shafts, handle brackets,

Equipment with antenna terminals should read between $2.7M\Omega$ and $3.9M\Omega$ to all exposed parts*. (Fig.1)

Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig.2)

*Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

4. If the measurement is outside the specified limits, there is a possibility of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer.

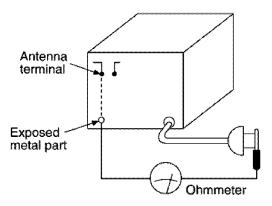

Resistance = $2.7M\Omega - 3.9M\Omega$

Fig.1

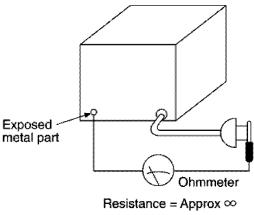


Fig.2

Before Repair and Adjustment

Disconnect AC power, discharge Power Supply Capacitors C528, C529 and C960 through a 10Ω , 5W resistor to ground. DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices. After repairs are completed, restore power gradually using a variac, to avoid overcurrent.

Current consumption at AC 120V, 60 Hz in NO SIGNAL mode should be ~800mA.

3 Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- · No sound is heard when the power is turned on.
- · Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:

- 1. Turn off the power.
- 2. Determine the cause of the problem and correct it.
- 3. Turn on the power once again after one minute.

Note

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.


4 Accessories



Remote Control Transmitter



FM indoor antenna

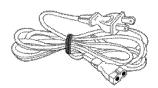

AC mains lead



AM Loop antenna


5 Handling Precautions For Traverse Deck

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body.

So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

· Handling of traverse deck (optical pickup)

- 1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
- 2. The short land between the No.4(LD) and No.5(GND) pins on the flexible board (FFC) is shorted with a solder build-up to prevent damage to the laser diode. To connect to the PC board, be sure to open by removing the solder build-up, and finishthe work quickly.
- 3. Take care not to apply excessive stress to the flexible board (FFC).
- 4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

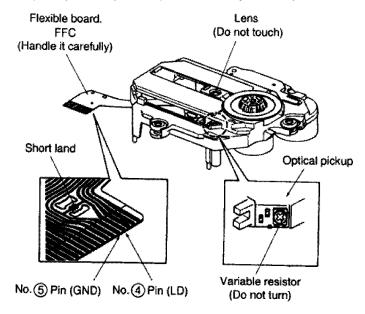

· Grounding for electrostatic breakdown prevention

1. Human body grounding

Use the anti-static wrist strap to discharge the static electricity from your body.

2. Work table grounding


Put a conductive material (sheet) or steel sheet on the area where the traverse deck (optical pickup) is placed, and ground the sheet.

Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

Caution when Replacing the Traverse Deck:

The traverse deck has a short point shorted with solder to protect the laer diode against electroststics breakdown. Be sure to remove the solder from the short point before making connections.

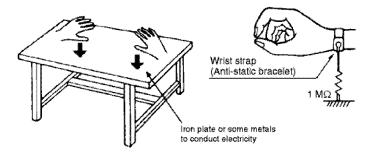

6 Precaution of Laser Diode

CAUTION:

This unit utilizes a class 1 laser.

Invisible laser radiation is emitted from the optical pickup lens.

When the unit is turned on:


- 1. Do not look directly into the pick up lens.
- 2. Do not use optical instruments to look at the pick up lens.
- 3. Do not adjust the preset variable resistor on the pickup lens.
- 4. Do not disassemble the optical pick up unit.
- 5. If the optical pick up is replaced, use the manufacturer's specified replacement pick up only.
- 6. Use of control or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


CAUTION!

THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

7 Operation Procedures

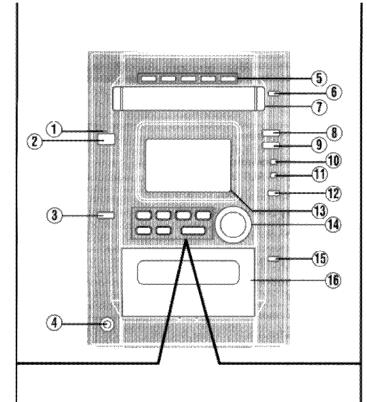

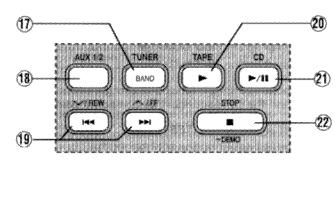

Location of controls

No. Name


AC supply indicator (AC IN)


This indicator lights when the unit is connected to the AC power supply.

② Standby/on switch (O/I, POWER)

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

- ③ Record button (REC)
- ④ Headphone jack (PHONES)
- Disc direct play buttons (CD 1 ~ CD 5)
- ⑥ Disc tray open/close button (▲ OPEN/CLOSE)
- ⑦ Disc tray
- B Digital input, PCM FIX mode select button and indicator (DIGITAL INPUT 1/2)
- Dolby Pro Logic button and indicator (III PL)
- Super sound EQ button (SUPER SOUND EQ)
- Preset EQ select button (PRESET EQ)
- ② Subwoofer button and indicator (SUBWOOFER)
- ① Display
- Wolume control (VOL)
- ⑤ Cassette holder open button (▲ OPEN)
- (ii) Cassette holder
- Tuner/band select button (TUNER, BAND)
- (8) AUX 1/2 button (AUX 1/2)
- CD skip/search, tape fast-forward/rewind, tune/preset channel select, time adjust buttons (I◄◄, ∨/REW, ▶►I, ∧/FF)
- ② Tape play button (► TAPE)
- ② CD play/pause button (►/ II CD)
- Stop/program clear and demonstration button
 (■ STOP, -DEMO)

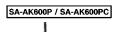

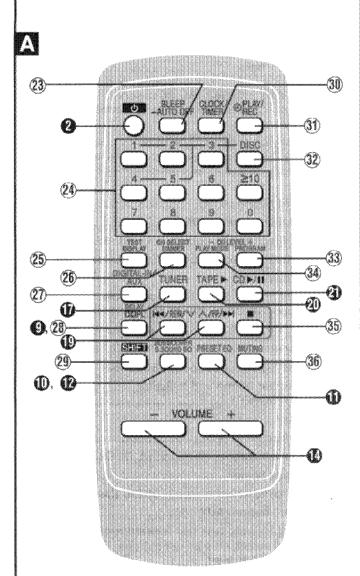

The remote control

A Buttons

Buttons such as ② function in exactly the same way as the buttons on the main unit.

No. Nan

- Sleep timer/auto off button (SLEEP, -AUTO OFF)
- ② Numbered buttons (≥10, 1–9, 0)
- (2) Display button (DISPLAY)
- ② Dimmer button (DIMMER)
- ② Digital input/AUX select button (DIGITAL-IN/AUX)
- Shift button (SHIFT) See below.
- (3) Clock/timer button (CLOCK/TIMER)
- ③ Play timer/record timer button (②PLAY/REC)
- ② Disc button (DISC)
- Program button (PROGRAM)
- Play mode select button (PLAY MODE)

 Use this for selecting repeat mode, CD play mode, tune mode, FM mode and AM beat proof.
- ⑤ Stop/program clear button (■)
- 6 Muting button (MUTING)

To operate functions labeled in orange, press [SHIFT] (29) and the corresponding button at the same time.


- (2) Test signal button (TEST)
- Channel select button (CH SELECT)
- ② Delay time adjust button (DELAY)
- 33, 39 Channel level adjust buttons (- CH LEVEL +)


8 Disassembly and Main Component Replacement Procedures

Gear for servicing (jig) information

- This unit has a gear which is used for checking items (Open/close of disc tray, up/down operation of traverse unit by manually)
 when servicing.
- 2. For preparation of gear (for servicing), Perform the procedures as follows.
- In case of re-servicing the same set, the "gear for servicing" may has been taken off because it has been used.The "gear for servicing" must be stored.
- Remove the gear provided with mechanism cover as shown below.

Insert the hexagonal screwdriver (2mm) into the gear, and then project the tip of screwdriver for 1~2mm in length.

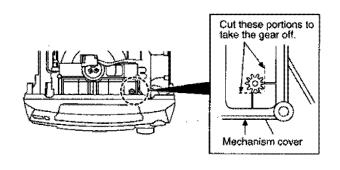

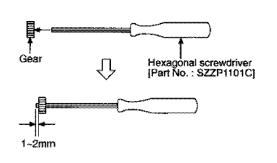

"ATTENTION SERVICER"

Some chassis components may have sharp edges.

Be careful when disassembling and servicing.

- 1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
- 2. For reassembly after operation checks or replacement, reverse the respective procedures.

Special reassembly procedures are described only when required.

3. Select items from the following index when checks or replacement are required.

Contents

- · Disassembly Procedure for each major P.C.B.
 - 1. Checking of the Main, Panel, AC Transformer, Sub-Transformer, Deck P.C.B.
 - 2. Checking of Power P.C.B.
- · Main Component Replacement Procedures
 - 1. Replacement of the Traverse Deck.
 - 2. Replacement of the Power Amplifier IC.
- · Disassembly and assembly of the Traverse Unit
- · Disassembly and assembly of the Disc Tray


Warning:

This product uses a laser diode. Refer to caution statement "Precaution of Laser Diode.


8.1. Disassemly Procedure for each major P.C.B.

8.1.1. Checking of the Main, Panel, AC Transformer, Sub-Transformer, Deck and Power P.C.B.


Step 1 Remove 3 screws each side and 5 screws at rear panel.

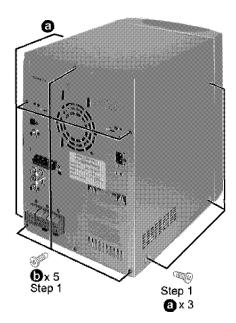


Step 2 Remove the Top Cabinet.

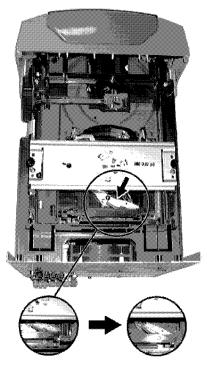


Step 3 Push the lever in the direction of the arrow.

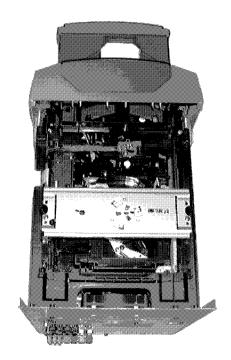


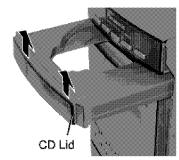


Step 4 Pull out the CD tray as shown and remove the CD lid. Push back the CD tray after the CD lid has been removed.

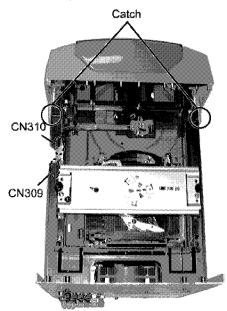


Step 5 Release the 2 catches, disconnect CN309 and CN310. Rremove the CD changer base together with the CD changer.

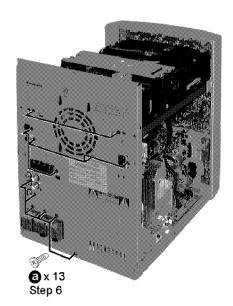


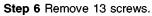


· Checking for Main, Panel, AC Transformer, Sub-Transformer and Deck P.C.B

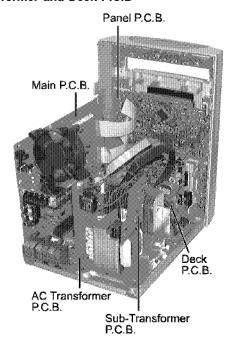

· Checking for Power P.C.B.

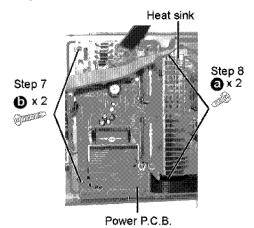


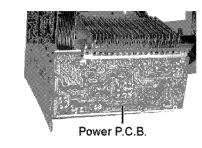

8.2. Main Component Replacement Procedures


8.2.1. Replacement of the Traverse Deck

Step 1 Follow the procedures in 'Disassembly of the Traverse Unit' (**Step 1 - Step 4**).

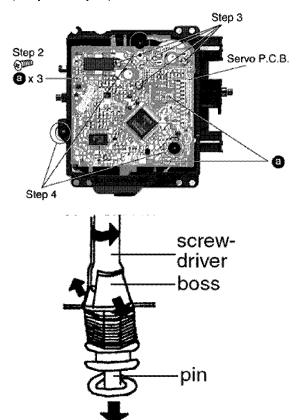

Step 3 Desolder the 4 legs of the 2 motors and pull out the Servo P.C.B.

Step 4 Widen the 3 bosses with a flat screwdriver and pull out the 3 pins. Then remove the Traverse Deck.

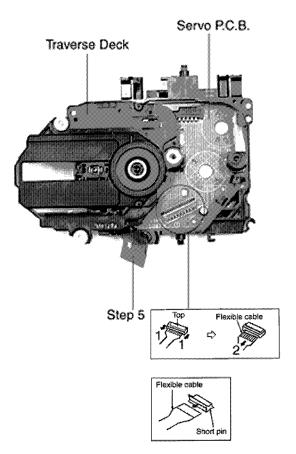

Step 5 Remove the flexible cable CN701.

• Removal of the flexible cable. Push the top of the connector in the direction of the arrow 1, and then pull out the flexible cable in the direction of the arrow 2.


Note:

Insert a short pin into the flexible cable for traverse unit.

· Installation of the CD servo P.C.B. after replacement

Step 1 Connect the FFC board.


 $\mbox{\bf Step 2}$ Install the CD servo P.C.B. in the traverse deck assembly.

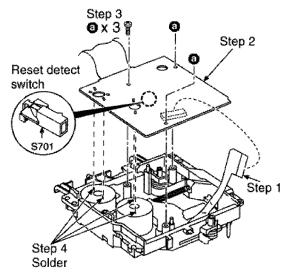

Note:


Before installing the CD servo P.C.B., move the optical pickup towards the outer edge from the marking (black triangle).

[Otherwise, the reset detect switch (S701) mounted on the CD servo P.C.B. may be damaged.]

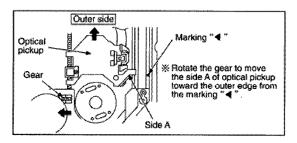


8.2.2. Replacement of the Power Amplifier IC


Step 1 Follow the procedures in 'Checking Procedure for each major P.C.B.' (**Step 1 - Step 4**).

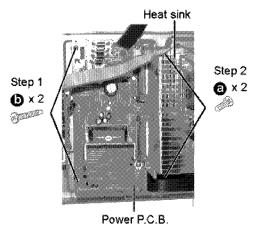


Step 2 Remove the wires at CN302, CN303 and CN304 and pull out the Main PCB.

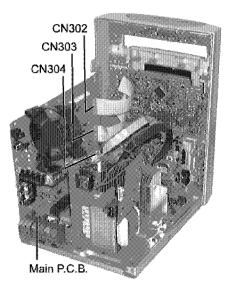

Step 3 Remove the 4 screws fixed to the Power Amplifier IC.

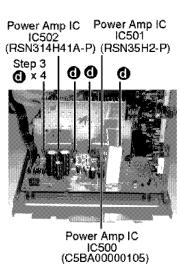


Step 4 Unsolder the terminals of Power Amp IC and replace the respective component.

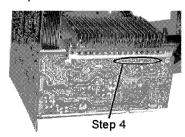


8.3. Disassembly and assembly of the Traverse Unit

- Step 1 Push the lever from position A to B.
- **Step 2** Pull the stopper (black) in the direction of arrow 1 and push the lever in the direction of arrow 2.

Step 3 Push the stopper (black) down until the white lever eject out.

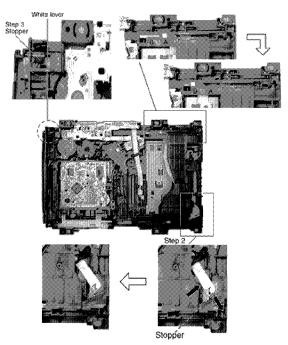


Step 4 Lift up the traverse unit and slide out the unit as shown.

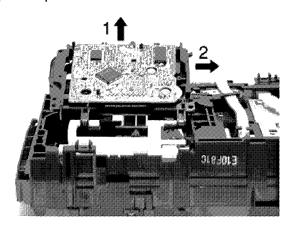


· Replacement of Traverse Unit

Step 1 Place the traverse unit as shown.


Step 2 Press in the lever shaft in the direction of arrow 1 as shown and push the traverse unit into the position in the direction of arrow 2.

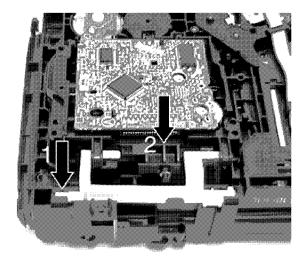


Step 3 Pull the stopper in the direction of arrow 1 and release the lever in the direction of arrow 2 as shown.

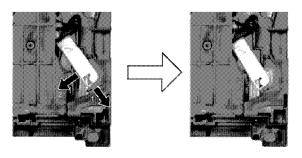


Step 4 Pull out the tray half way and push it back fully.

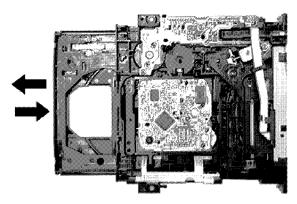

Step 5 Push the lever to the initial position indicated '|---|'.

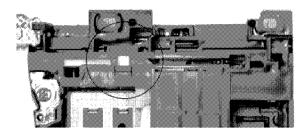


8.4. Disassembly and assembly of the Disc Tray

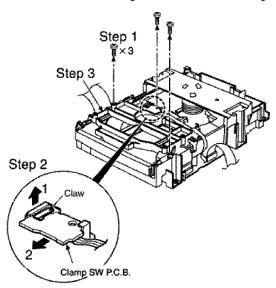


Step 2 With lifting the claw in the direction of arrow 1, draw the clamp SW P.C.B. in the direction of arrow 2.


Step 3 Remove the mechanism cover.

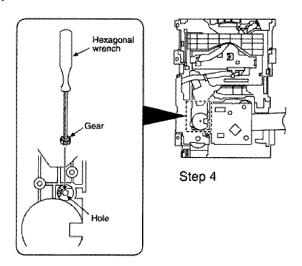

Step 4 Insert the gear with hexagonal wrench into the hole.

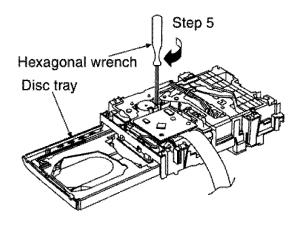


Step 5 Rotate the hexagonal wrench in the direction of arrow (clockwise), and then open the disc tray fully.

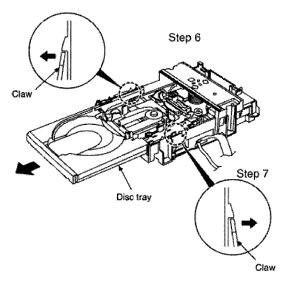


Step 6 Upset the CD changer unit again.

Step 7 Release both the claws, and then draw the disc tray.

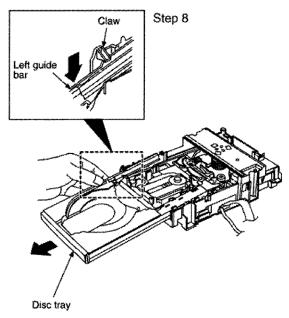


Step 8 With forcing the left guide bar manually because the left guide bar interferes with claw, draw the disc tray.

· Installation of the disc tray after replacement

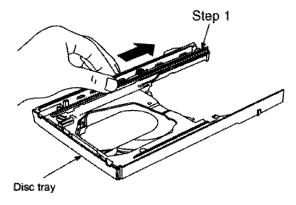


Step 1 Slide the drive rack fully in the direction of the arrow.

the disc tray.

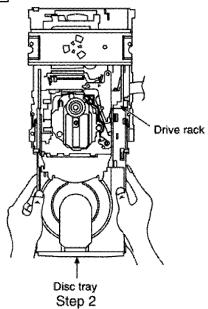


Step 2 Holding the drive rack, not to move, install the disc tray.

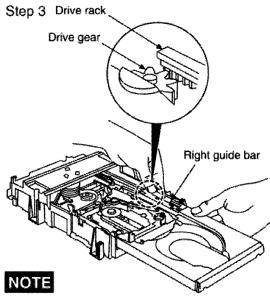

Force the right guide bar of tray base manually not to move upwards.

Step 3 Align the drive rack with the drive gear.

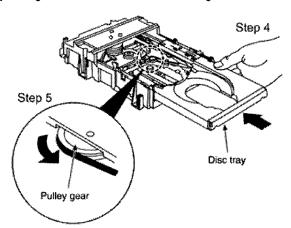

Step 4 Holding the disc tray manually, rotate the pulley gear in the direction of arrow.

Step 5 Rotate the gear 5 or 6 times manually, and then push


9 Self-Diagnostic Function

9.1. Self-diagnostic display

This unit is equipped with a self-diagnostic display function which, if a problem occurs, will display an error code corresponding to the problem.

Use this function when performing maintenance on the unit.

9.2. How to enter the Self-Diagnostic Function

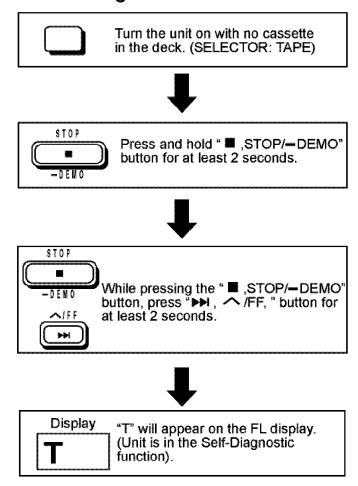

9.3. Cassette Mechanism Test (For error code H01, H02, H03, F01, F02)

- 1. Press "TAPE, DECK 1/2" to select Deck 2.
- 2. Load a cassette tape with the erasure prevention tab, remove from left side only and close the cassette holder.
- 3. Press "FAST FORWARD MEMORY" (Tape will be stop after 2 seconds)
- 4. Load a cassette tape with the erasure prevention tab, remove from right side only and close the cassette holder.
- 5. Press "REVERSE FM MODE/BP" (Tape will be stop after 2 seconds)
- 6. Load a pre-recorded tape with both side record tabs intact and close the cassette holder.
- 7. Press "PLAY/TUNE/TIME ADJ UP" (After TPS function, tape will stop automatically)
- 8. Press "REC/STOP" (Tape will not move)
- 9. Press "STOP/TUNE MODE" to indicate Error code.
 - \cdot If several problem exist, error code will change each time when "n /TUNE MODE" is pressed.

(e.g.
$$H01 \rightarrow H03 \rightarrow F01$$
etc.)

- 10. Press "TAPE, DECK 1/2" to select Deck 1.
- 11. Repeat step 2 to 9 to test Deck 1. (Tape Deck 1 will not check H02 because of no recording function)

9.4. CD Mechanism Test (F15, F26, F16, F17, F27, F28, F29, H15)

- 1. Press "CD".
- 2. Press "OPEN/CLOSE (1)" and place a CD.
- 3. Press "OPEN/CLOSE (1)" to close the tray.
- 4. Press "OPEN/CLOSE (5)" and wait until the tray is open.
- 5. Press "OPEN/CLOSE (1)" and remove the CD.
- 6. Press "OPEN/CLOSE (1)" to close the tray.
- 7. Press "n/TUNE MODE" to indicate Error Code.
 - If several problem exist, error code will change each time when "n/TUNE MODE" is pressed. (e.g. F15 \rightarrow F26 \rightarrow F16etc).

9.5. To clear all Error code

- 1. Press "STOP/TUNE MODE" button for 5 seconds.
- 2. FL indicator shows "CLEAR" for 1 second and change to "T".

9.6. How to get out from Self-Diagnostic function

1. Press "Power" button OFF.

9.7. Power Amplifier Failure (F61)

1. When power amplifier fail, F61 will indicate automatically.

10 Description of Error Code

10.1. Error detection for Cassette Mechanism block

No.	Error	Error Display	Problem condition
1	MODE SW detection error	H01	Faulty operation of cassette mechanism. Faulty contact or short-circuit of mechanism mode switch (S951, S971).
2	REC INH SW detection error	H02	Recording not possible. Faulty contact or short-circuit of REC INH switch (S974, S975).
3	HALF SW detection error	H03	Playback cannot perform. Faulty contact or short-circuit of HALF siwtch (S952, S972).
4	Reel Pulse detection error	F01	The tape advances slightly and then stops. Faulty reel pulse, faulty hole detect IC (IC951, IC971).
5	TPS abnormal	F02	Cassette deck will not perform TPS function. Faulty playback EQ/recording amplifier IC (IC101).

10.2. Error detection for CD/Changer block

No.	Error	Error Display	Problem condition
1	REST SW detection error	F15	CD does not function. This error occurs when the Optical Pick Up REST SW (S701) is not detected within the specified time (about 8 seconds)
2	CD tray opens automatically	F16	CLAMP switch (S4) NG (Check & Replace)
3	Does not startup when [PLAY] button is pressed	F17	BOTTOM switch (S5) NG (Check & Replace)
4	Transmission error between CD servo LSI and micon	F26	CD does not function. This error occurs when the POWER is ON for the CD block and an error is detected after the transmission has started.
5	Startup fails even when you insert CD or the selected disc tray does not open	F27	Tray 1 detect switch or Tray 2 detect switch NG (Check & Replace)
6	Cannot insert CD	F28	Tray 1 detect switch NG (Check & Replace)
7	Cannot eject CD	F29	Check if disc is stuck. Tray 2 detect switch NG (Confirm & Replace)
8	The CD tray closes	H15	CD disc tray detect switch NG (S3) (Check & Replace)


10.3. Power Supply related error detection

No.	Error	Error	Problem condition
		Display	
1	POWER AMP output abnormal		When POWER is switched on, power become off automatically. During normal operation, if DC DET become L, PCNT shall become L and the error display on the left shall be displayed. (IC501)

11 CD Test Mode Function


This CD test mode is provided to check CD unit without connecting to changer loading mechanism. This mode shall operate CD PLAY with CD unit being connected only and CD Automatic Alignment result is shown on FL display.

11.1. How to set CD test mode

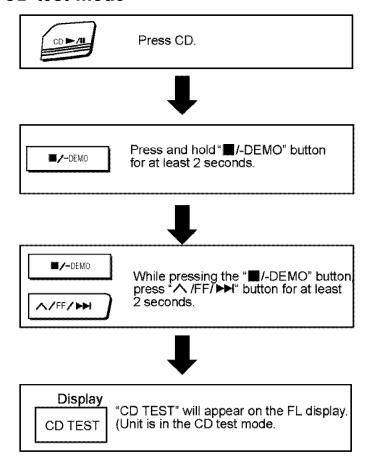

11.2. CD Automatically Adjustment result indication

Under CD test mode, pressing the numeric key '0' on the remote controller will display the auto adjustment result. FLOCK, TLOCK and CLVS status shall be shown as below:

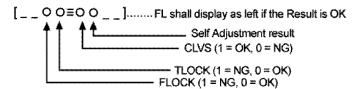

During the above display, executing CD PLAY will display auto adjustment result for CD PLAY mode.

12 Measurements and Adjustments


12.1. Cassette Deck Section

- · Measurement Condition
 - Make sure head, capstan and press roller are clean.
 - Judgeable room temperature 20 \pm 5 °C (68 \pm 9°F)
- Measuring instrument
 - EVM (Electronic Volmeter)
 - Digital quency counter
- · Test Tape
 - Tape speed gain adjustment (3 kHz, -10 dB);
 QZZCWAT

12.1.1. Tape Speed Adjustment

- 1. Insert the test tape (QZZCWAT) to DECK and playback (FWD side) the middle portion of it.
- 2. Adjust Motor VR for the output value shown below.

Adjustment target: 2940 ~ 3060 Hz (NORMAL speed)

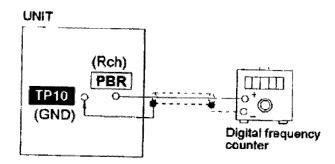

12.1.2. Bias and Erase Voltage Check

- 1. Set the unit "AUX" position.
- 2. Insert the Normal blank tape (QZZCRA) into DECK and the


12.2. Alignment Points

Cassette Deck Section

unit to "REC" mode (use "I REC" key).


3. Measure and make sure that the output is within the standard value.


Bias voltage 16 ± 4mV (Normal) Erase voltage 47mV ~ 80mV (Normal)

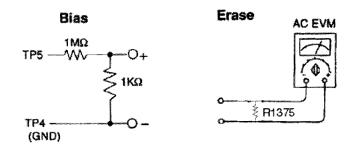

12.1.3. Bias Frequency check

- 1. Set the unit to "AUX" position.
- 2. Insert the Normal blank tape (QZZCRA) into DECK and set the unit to "REC" mode (I use "REC" key).
- Check so that the output frequency is within the standard value.

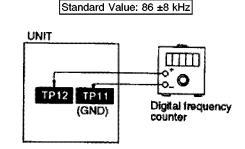

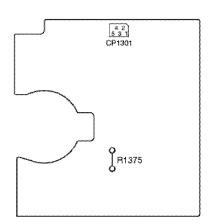

13 Illustration of IC's, Transistors and Diodes

C1BB00000654 (42P) C0F13ZK000005 (44P) C2BBGF000314 (100P) C2HBZH000001 (100P)	C1BB00000574 M62444FPE1 AN8885SBE1 C0ABBB000067	No. 1	TC74HC4050EL (16P) TC74HCU04AF	RSN314H41A-P	COGAM0000005
C0AABB000117 BR93LC46FE2 (8P)	CNB13030R2AU	AN8739SBTE2	AN7326K	C1AA0000612	C5AB00000105
\$ 55 1 4	1 3 3 3 3 4 3 1 4	21 20 20 11	28 22 21 1 7 8 14	1 5	- 12
UPC29M33HF	COJBAS000056	KRA102MTA KRC102MTA	B1GACFGG0004 KTC3199GRTA B1AAAL000002 B1AAGC000007	B1AAKD000009 KTA12710YTA KTA1504GRTA KTC3205YTA 2SD09650RA 2SB621ARSTA 2SD0592ARA	B
KRA102STA KRC101STA KRC102STA KTC3875GRTA KTD1304TA 2SA1037AKSTX B1GDCFJJ0002 B1ADCF000001	KRC103STA KRC111STA B1GDCFGH0002 B1ABGC000001 B1GDCFGH0002 B1GBCFJJ0002 B1ABCF000011 B1GDCFJJ0002	B1GBCFJJ0002 C B E	1SS355TE17 1SS380TE-17 UDZSTE1710B B0BC5R000009 B0BC5R600003 B0BC7R500001 MAZ80680HL	Cathode Ca Anode	B0ADCJ000020 Ca Cathode A Anode
MA729TX B0AACK000004 MA2C16500E Ca Cathode A	B0BA01500003 B0BA03100002 B0BA4R600003 B0BA6R00008	Ca Cathode A	1D3E RL1N4003S-P	SLR325MCT31W SLR325YCT31 Anode Cathode A Ga	MA2J72800L Cathode Anode
KBP152G4R5	LNJ201LPQJA Anode Cathode	B0ADCC000002 Anode Cathode	MA8047MTX Cathode Ca Anode		

14 Terminal Function of IC's

14.1. IC701 (AN8885SBE1) Servo Amplifier

Pin No. Mark I/O Function 1 PDE I Tracking signal input 1 2 PDF I Tracking signal input 1 3 VCC I Power supply 4 PDA I Focus signal input terminal 1 5 PDB I Focus signal input terminal 2 6 LPD I APC amp input 7 LD O APC amp output 8 RF O RFsumming output 9 RFIN I Detector's input 10 CSBRT I Capacitor for OFTR connection 11 CEA I Capacitor for HPF amp connection 12 BDO O BDO output ("H": drop out) 13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L": detection) 16 PDOWN O Power-down input 17 OFTR		-		
PDF I Tracking signal input 2 Tracking signal input 2 Tracking signal input 2 PDA I Focus signal input terminal 1 Focus signal input terminal 2 PDB I Focus signal input terminal 1 PDB I Focus signal input terminal 2 PDB I Focus signal input terminal 1 PDB I Focus signal input terminal 1 PDD I APC amp output PDB I POCUS I Capacitor for OFTR connection PDB I Capacitor for OFTR connection PDD I Capacitor for HPF amp connection PDD I APC control PD I APC co	Pin No.	Mark	1/0	Function
VCC		1	I	Tracking signal input 1
4 PDA I Focus signal input terminal 1 5 PDB I Focus signal input terminal 2 6 LPD I APC amp input 7 LD O APC amp output 8 RF O RFsumming output 9 RFIN I Detector's input 10 CSBRT I Capacitor for OFTR connection 11 CEA I Capacitor for HPF amp connection 12 BDO O BDO output ("H" : drop out) 13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 24 FEOUT O FE amp output 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	2	PDF	ı	Tracking signal input 2
Focus signal input terminal 2 Focus signal input terminal 2		VCC	I	Power supply
6 LPD I APC amp input 7 LD O APC amp output 8 RF O RFsumming output 9 RFIN I Detector's input 10 CSBRT I Capacitor for OFTR connection 11 CEA I Capacitor for HPF amp connection 12 BDO O BDO output ("H" : drop out) 13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 24 FEOUT O FE amp output 25		PDA	I	Focus signal input terminal 1
7 LD O APC amp output 8 RF O RFsumming output 9 RFIN I Detector's input 10 CSBRT I Capacitor for OFTR connection 11 CEA I Capacitor for HPF amp connection 12 BDO O BDO output ("H" : drop out) 13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 24 FEOUT O FE amp output 25 FEN I FE amp input 26		PDB	I	Focus signal input terminal 2
8 RF O RFsumming output 9 RFIN I Detector's input 10 CSBRT I Capacitor for OFTR connection 11 CEA I Capacitor for HPF amp connection 12 BDO O BDO output ("H" : drop out) 13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O FE amp output 24 FEOUT O Fe amp input 26 VREF O Reference voltage output		LPD	I	APC amp input
9 RFIN I Detector's input 10 CSBRT I Capacitor for OFTR connection 11 CEA I Capacitor for HPF amp connection 12 BDO O BDO output ("H" : drop out) 13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp input 25 FEN I FE amp input 26 VREF O Reference voltage output		LD	0	APC amp output
10 CSBRT I Capacitor for OFTR connection 11 CEA I Capacitor for HPF amp connection 12 BDO O BDO output ("H" : drop out) 13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O FE amp output 24 FEOUT O FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control		RF	0	RFsumming output
11 CEA I Capacitor for HPF amp connection 12 BDO O BDO output ("H" : drop out) 13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp input 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	9	RFIN	1	Detector's input
12 BDO O BDO output ("H" : drop out) 13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp input 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	10	CSBRT	1	Capacitor for OFTR connection
13 LDON I APC control 14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp input 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	11	CEA	Ti .	Capacitor for HPF amp connection
14 GND — Ground 15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp input 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	12	BDO	0	BDO output ("H" : drop out)
15 /RFDET O NRFDET output ("L" : detection) 16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp input 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	13	LDON	1	APC control
16 PDOWN O Power-down input 17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp input 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	14	GND	_	Ground
17 OFTR O OFTR output 18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp output 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	15	/RFDET	0	NRFDET output ("L" : detection)
18 NC O N.C. 19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp input 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	16	PDOWN	0	Power-down input
19 ENV O 3T-ENV output 20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp output 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	17	OFTR	0	OFTR output
20 NC I N.C. 21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp output 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	18	NC	0	N.C.
21 NC I N.C. 22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp output 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	19	ENV	0	3T-ENV output
22 TEN I TE amp input 23 TEOUT O TE amp output 24 FEOUT O FE amp output 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	20	NC	Ti .	N.C.
23 TEOUT O TE amp output 24 FEOUT O FE amp output 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control		NC	Ti .	N.C.
24 FEOUT O FE amp output 25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	22	TEN	ı	TE amp input
25 FEN I FE amp input 26 VREF O Reference voltage output 27 TBAL I Tracking balance control	23	TEOUT	0	TE amp output
26 VREF O Reference voltage output 27 TBAL I Tracking balance control		FEOUT	0	FE amp output
26 VREF O Reference voltage output 27 TBAL I Tracking balance control	25	FEN	1	FE amp input
27 TBAL I Tracking balance control		VREF	0	Reference voltage output
28 FBAL I Focus balance control	27	TBAL	1	
	28	FBAL	l	Focus balance control

14.2. IC702 (MN662790RSC) Servo processor/ Digital signal processor/ Digital filter/ D/A converter

Pin No.	Mark	I/O	Function
1	BCLK	0	N.C.
3	LRCK	0	N.C.
	SRDATA	0	N.C.
4	DVDD1	1	Power supply input (for digital circuit)
5	DVSS1	I	GND (for digital circuit)
6	TX	0	Digital audio interface signal output (Latches data at first transition)
7	MCLK	I	Microprocessor command clock signal input
8	MDATA	I	Microprocessor command data signal input
9	MLD	I	Microprocessor command load signal input
10	SENSE	0	Sense signal output (OFT, FESL,MAGEND,NAJEND, POSAD,SFG) (Not used, open)
11	/FLOCK	0	Focus servo feeding signal output ("L" : Feed)
12	/TLOCK	0	Tracking servo feeding signal output ("L" : Feed)
13	BLKCK	0	Sub-code block clock signal output (BLKCKf = 75Hz during normal playback)

B1- 11-	T	1/0	
Pin No.	Mark	1/0	Function
14	SQCK	1	External clock signal input for sub-code Q resistor
15	SUBQ	0	Sub-code Q code output
16	DMUTE	ı	Muting input ("H" : mute)
17	STAT	0	Status signal output (CRC,CUE,CLVS,TTSTVP, FCLV,SQCK)
18	/RST	I	Reset signal input
19	SMCK	0	1/2-diveded clock signal of crystal osscillating at MSEL = "H" (fSMCK = 8.4672 MHz) 1/4-divided clock signal of crystal oscillating at MSEL = "L" (fSMCK = 4.2336MHz)
20	CSEL	I	Frequency Selection Terminal H = 33.8688 MHz ; L = 16.9344 MHz
21	TRV	0	N.C
22	TVD	0	Traverse drive output
23	PC	0	Spindle motor ON output ("L" : ON)
24	ECM	0	Spindle motor drive signal output(forced mode output)
25	ECS	0	Spindle motor drive signal output (servo error signal output)
26	кіск	0	N.C.
27	TRD	ō	Tracking drive output
28	FOD	ō	Focus drive output
29	VREF	I	D/A (drive) output (TVD, ECS, TRD, FOD, FBAL, TBAL) Reference voltage input
30	FBAL	0	Focus balance adjustment output
31	TBAL	0	Tracking balance adjustment output
32	FE	l	Focus error signal input (analog input)
33	TE	I	Tracking error signal input (analog input)
34	RFENV	ı	RF envelope signal input
35	VDET	1	Vibration detection signal input ("H" :detection)
36	OFT	1	Off-track signal input ("H" : off track)
37	TRCRS	ı	Track cross signal input
38	/RFDET	I	RF detection signal input ("L" : detection)
39	BDO	ı	Dropout signal input ("H" : Dropout)
40	LDON	0	Laser on signal output ("H" : ON)
41	PLLF2	1/0	N.C.
42	DSLF2	0	Tracking Offset alignment output/DSL Balance Output (DA Output)
43	WVEL	0	N.C.
44	ARF	I	RF signal input
45	IREF	ı	Reference current input
46	DRF	I	DSL bias terminal (Not used, open)
47	DSLF	1/0	DSL loop filter terminal
48	PLLF	1/0	PLL loop filter terminal
49	VCOF	1/0	VCO loop filter terminal
50	AVDD2	1	Power supply input (for analog circuit)
51	AVSS2	ı	GND (for analog circuit)
52	EFM	-	EFM signal output

Pin No.	Mark	I/O	Function
53	PCK	1.	PLL extraction clock output
	li Oik		(fPCK = 4.321 MHz during
			normal playback)
54	VCOF2	1/0	VCO Loop filter for 33.8688
	" " " " " " " " " " " " " " " " " " "	" "	MHz conversation terminal for
			16.9344 MHz crystal mode,
			must use other circuit
55	SUBC	0	Sub-code serial data output
56	SBCK	1	Clock input for sub-code
		-	serial data
57	vss	i ₁	GND
58	X1 IN	1	Crystal oscillating circuit input
	· · · · ·		(f = 16.9344MHz)
59	X2 OUT	0	Crystal oscillating circuit input
	/ - OO !	١	(f = 16.9344 MHz)
60	VDD	1	Power supply input (for
	1,22	-	oscillating circuit)
61	вутск	1_	Byte clock output
62	/CLDCK	-	Sub-code frame clock signal
02	POLIDOR		output (fCLDCK = 7.35 kHz
			during normal playback)
63	FCLK	1_	Crystal frame clock signal
			output (fCLK = 7.35 kHz,
			double = 14.7 kHz)
64	IPFLAG	-	Interpolation flag output ("H":
			Interpolation)
65	FLAG	1-	Flag output
66	CLVS	-	Spindle servo phase
			synchronizing signal output
			("H" : CLV, "L" : rough servo)
67	CRC	-	Sub-code CRC checked
			output ("H' :OK, "L" :NG)
68	DEMPH	-	De-emphassis ON signal
			output ("H" :ON)
69	RESY	-	Frame re-synchronizing signal
			output
70	IOSEL	1	Mode Switching Terminal
71	/TEST	İı	Test input
72	AVDD1	1	Power supply input (for
		ľ	analog circuit)
73	OUTL	0	Left channel audio signal
			output
74	AVSS1	ı	GND
75	OUTR	0	Right channel audio signal
1. 0	1	١	output
76	RSEL	i	RF signal polarity assignment
1. 2	1		input (at "H" level, RSEL="H",
1			at "L" level, RESL="L")
77	IOVOD	ı	5V supply input
78	PSEL	1	Test terminal (connected to
	1	ľ	Gnd)
79	MSEL	i	SMCK oscillating frequency
1 -		ľ	designation input ("L":4.2336
1			MHz, "H":8.4672 MHz)
80	SSEL	ı	SUBQ output mode select
1			("H":Q-code buffer mode)
-	-	-	

14.3. IC703 (AN8739SBE2) Focus coil/ Tracking coil/ Traverse motor/ Spindle motor driver

Pin No.	Mark	I/O	Function
1	/RST	-	RESET output terminal
2	NC	-	N.C.
3	IN2	I	Motor Drive (2) input
4	PC2	I	Turntable motor drive signal ("L:ON)
5	NC	-	N.C.
6	IN1	l	Motor driver (1) input
7	NC	l	N.C.
8	PVCC1	l	Power supply (1) for driver

			SA-AK600P / SA-
Pin No.	Mark	I/O	Function
9	PGND1	-	Ground connection (1) for driver
10	NC	-	N.C.
11	D1-	0	Motor driver (1) reverse-action output
12	D1+	0	Motor driver (1) forward-action output
13	D2-	0	Motor driver (2) reverse-action output
14	D2+	0	Motor driver (2) forward-action output
15	D3-	0	Motor driver (3) reverse-action output
16	D3+	0	Motor driver (3) forward-action output
17	D4-	0	Motor driver (4) reverse-action output
18	D4+	0	Motor driver (4) forward-action output
19	NC	-	N.C.
20	PGND2	-	Ground connection (2) for driver
21	PVCC2	ı	Power supply (2) for driver
22	NC	-	N.C.
23	VCC	ı	Power supply terminal
24	VREF	l	Reference voltage input
25	IN4	I	Motor driver (4) input
26	IN3	1	Motor driver (3) input
27	RSTIN	ı	Reset terminal
28	NC	-	N.C.

14.4. IC600 (C2BBGF000314) System Microprocessor

Pin No.	Mark	I/O	Function
1	SD_IN	I	Tuner signal detect input
2	MK_IN2	I/O	Mech condition input 1
3	MK_IN1	I/O	mech condition input 1
4	KEY2	I	Key 2 input
5	KEY1	I	Key 1 input
6	LM_SL	I	Level meter left
7	LM_SR	1	Level meter right
8	CHG_AD2		Changer SW A-D detection input 2
9	CHG_AD1	_	Changer SW A-D detection input 1
10	LM_L	I	Level meter left
11	LM_R	I	Level meter right
12	ST/DO/ SQCK	I/O	Tuner IF Data/Stereo Input and CD Sub Code Clock Output
13	STATUS	I	CD signal processor status input (INV)
14	SUBQ	I	CD subcode data output (INV)
15	MCLK/ PLLCK	0	Tuner PLL clock output
16	MDATA/ PLLDA	0	tuner PLL data output
17	CNVss	-	Flash Mode Terminal
18	/RESET	-	RESET Input
19	XCOUT	-	32.768 kHz Sub Clock
20	XCIN	-	32.768 kHz Sub Clock
21	vss	-	Ground (0V)
22	XIN	-	4.19 MHz Main Clock
23	XOUT	-	4.19 MHz Main Clock
24	VCC	-	Power Supply (+5V)
25	РНОТО	I	Tape mecha condition input
26	/CDRST	0	CD reset output
27	MLD/ PLLCE	0	CD command load output/ Tuner PLL chip enable

Pin No.	Mark	1/0	Function
28	MILP	0	DDD latch pulse
29	RMT	I	Remote Control Input
30	BLKCK	I	CD block clock input (Inverted)
31	DCDET	1/0	DC detect input
32	SYNC	Ţ.	AC Failure Detect Input
33	CHG_CCW	0	Changer motor counter clockwise output
34	CHG_CW	0	Changer motor clockwise output
35	CHG_HLF	0	Changer half drive output
36	CHG_PGR	0	Changer plunger output
37	CHG_SW2	1	CD changer switch 2 input
38	CHG_SW1	1	CD changer switch 1 input
39	/RESTSW	I	CD limit switch input for the most inner point (Active low)
40	PCONT	1/0	Main transformer control output
41	V_JOG_A	I	Volume Jog A
42	V_JOG_B	1	Volume Jog B
43	REG_IN	I	Region and function setting input
44	PDN	l	Reset detection & power down mode
45	PO2	ı	State change detection output
46	DSP_CLK	0	Dolby digital decoder clock
47	LOCK	l l	Lock terminal
48-78	SEG31- SEG1	0	Segment driver
79-80	GRID10-9	0	Digital drive output(Grid drive output)
81-88	GRID8 (REG8)- GRID1 (REG1)	0	Digit drive output (Grid drive output) For regional setting/function selection use
89	VEE	-	Power supply (-30V)
90	EE_CS	0	EEPROM chip select
91	SER6	0	EXP_CLK/EE_CLK
92	SER5	0	EXP_DAT/EE_DAT
93	SER4	0	DDD_CS
94	SER3	0	MK_DAT/ASP_DAT
95	SER2	0	DDD_DAT/VOL_DAT/ ASP_CLK
96	SER1	0	VOL_CLK/MK_CLK
97	AVss	-	Analog ground (0V)
98	Vref	-	Reference for A-D
99	SER7	0	4ch volume latch
100	DSP_ MIACK	l	DDD_MIACK

15 Schematic Diagram

(All schematic diagrams may be modified at any time with the development of the new technology)

Note:

S601 : Deck Open switch S602 : Subwoofer switch : Preset EQ switch S603 S604 : SS EQ switch : DPL switch S605 S606 : Power switch S607 : REC switch **S608** : Digital switch S701 : Reset switch : CD switch S901 : Tape switch S902 S903 : Tuner Band switch

S904 : AUX switch

: REW/ Tune Down switch S905 S906 : FF/ Tune Up switch S907 : Stop/ Demo switch : CD 1 switch S908

: CD 2 switch S909 S910 : CD 3 switch S911 : CD 4 switch S912 : CD 5 switch

S913 : CD Open/ Close switch

S951 : Mode switch : Half switch S952 S953 : CR02 switch S954 : Recinh_f switch

· The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Accordingly, there may arise some error in voltage values and waveformsdepending upon the internal impedance of the tester or the measuring unit.

(()) : FM

· Importance safety notice :

Components identified by A mark characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), highquality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

Caution!

IC, LSI and VLSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during

- · Cover the parts boxes made of plastics with aluminium foil.
- · Put a conductive mat on the work table.
- · Ground the soldering iron.
- · Do not touch the pins of IC, LSI or VLSI with fingers directly.

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD. REPLACE ONLY WITH SAME TYPE F1, 3.15A, 125V FUSE.




RISK OF FIRE-REPLACE FUSE AS MARKED.

FUSE CAUTION


These symbols located near the fuse indicates that the fuse used is a fast operating type. For continued protection against fire harzard, replace with the same type fuse. For fuse rating, refer to the marking adjacent to the symbol.


Ce symbole indique que le fusible utilisé est à rapide. Pour une protection permanente. ni utiliser que des fusibles de même type. Ce dernier est indiqué là qui le présent symbole est apposé.

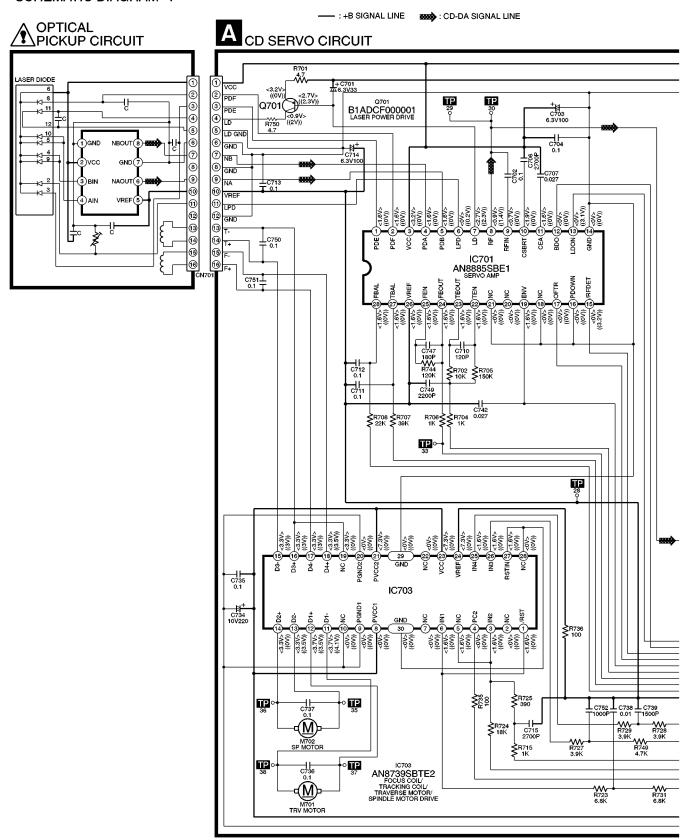

----: +B SIGNAL LINE *: CD-DA SIGNAL LINE :: CD SIGNAL LINE




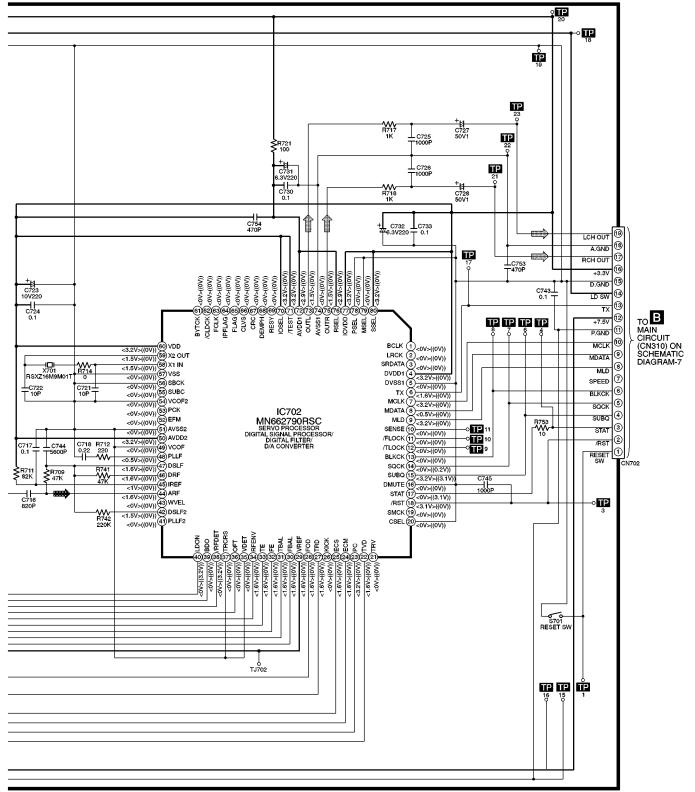

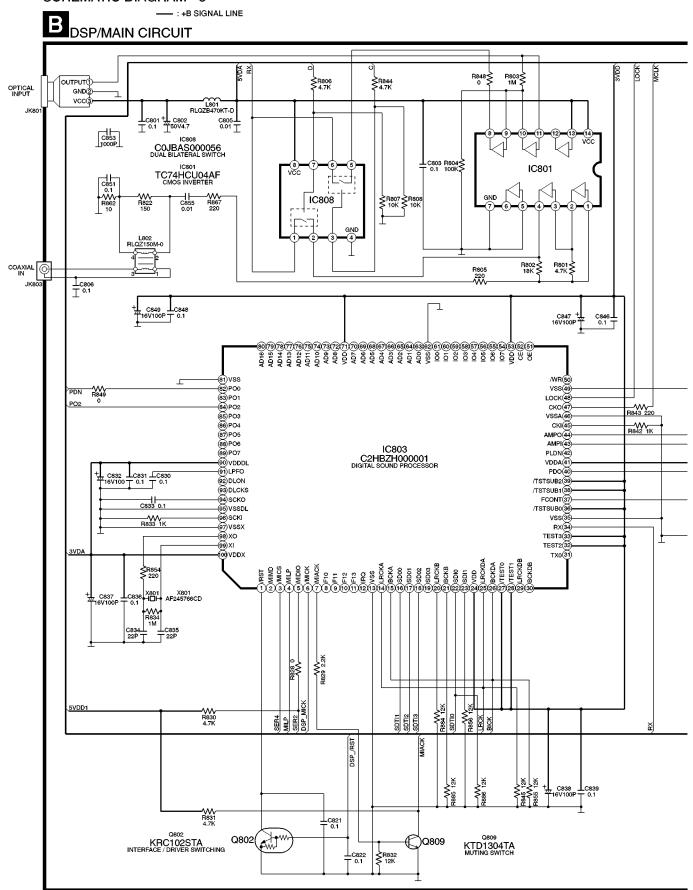


— : +B SIGNAL LINE (MAIN SIGNAL LINE)


DSP/MAIN CIRCUIT

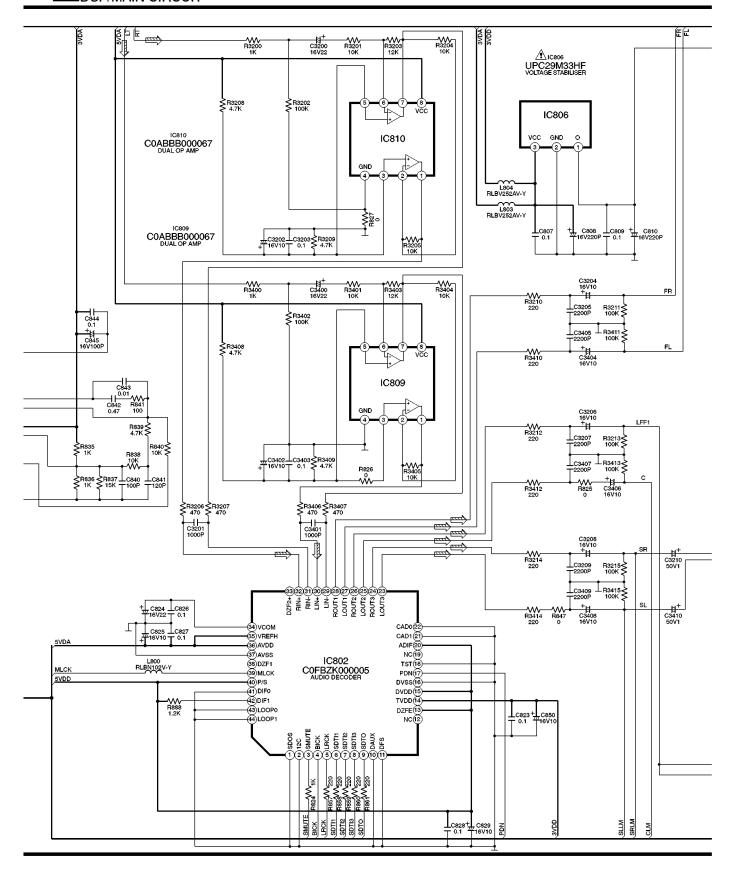

----: +B SIGNAL LINE --:-B SIGNAL LINE : MAIN SIGNAL LINE




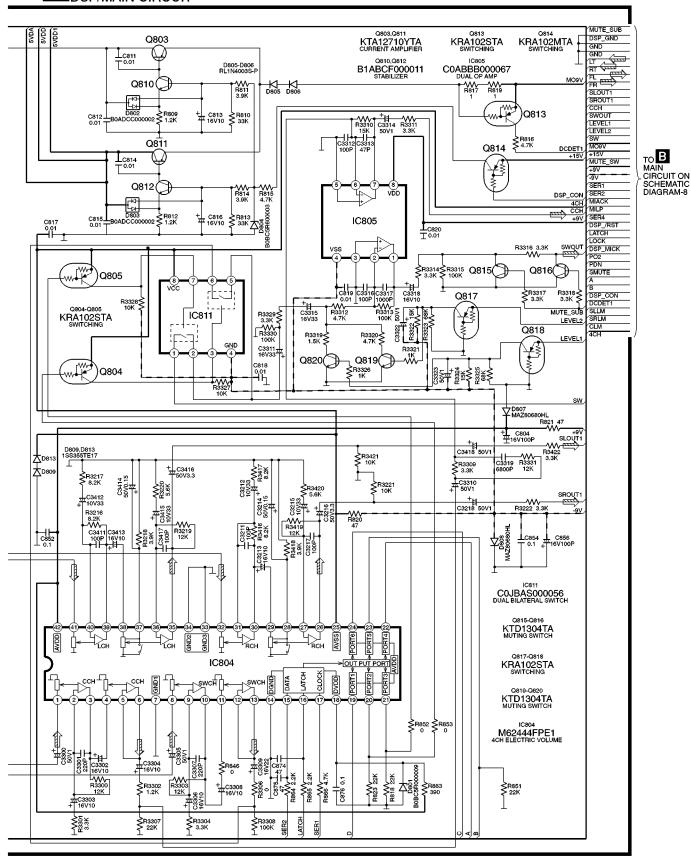

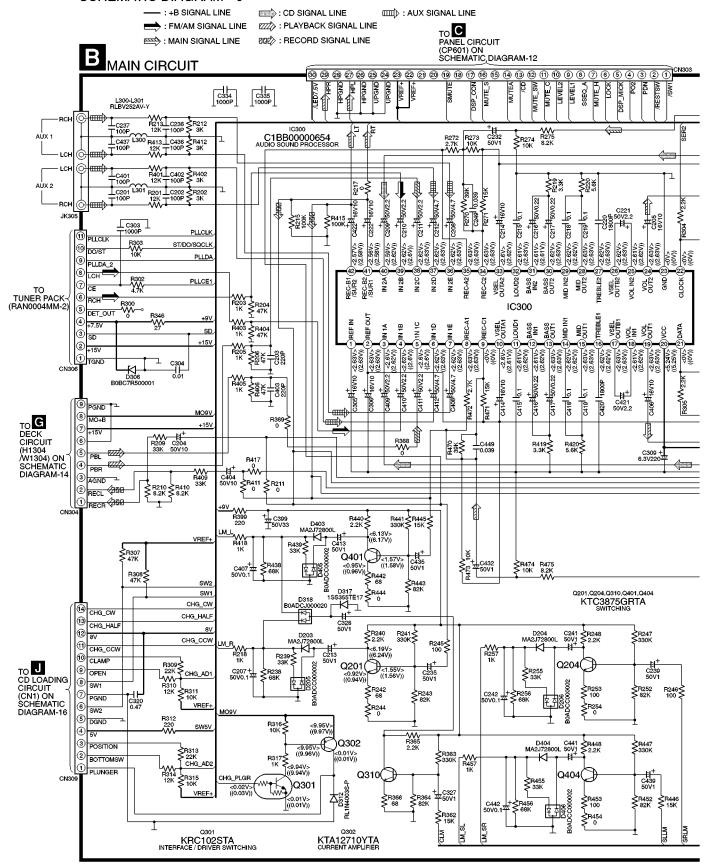

---: +B SIGNAL LINE : CD SIGNAL LINE : RECORD SIGNAL LINE : MAIN SIGNAL LINE




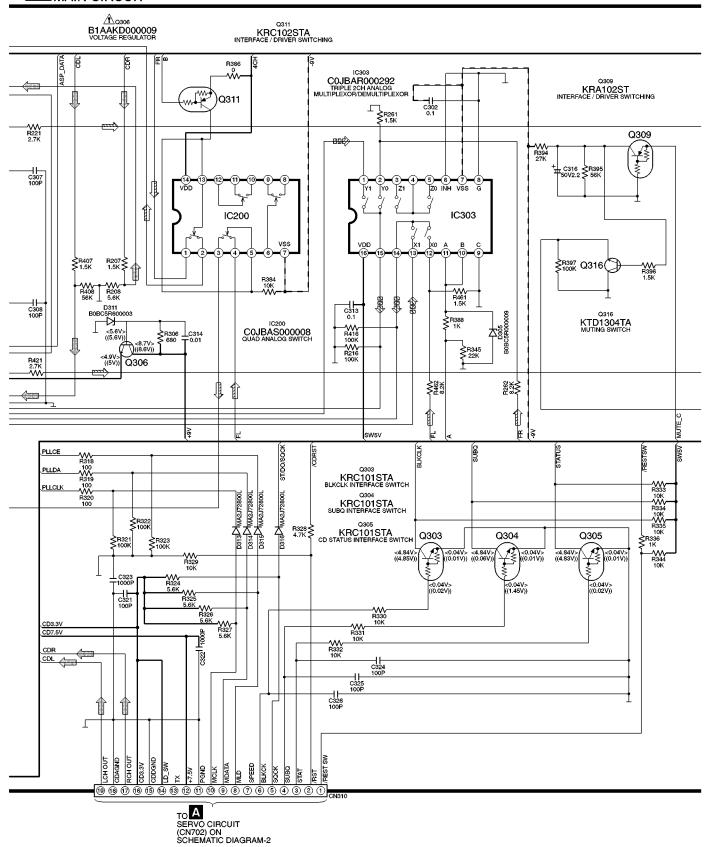

----: +B SIGNAL LINE : MAIN SIGNAL LINE

- - : -B SIGNAL LINE


TO C PANEL CIRCUIT (CP600) ON SCHEMATIC DIAGRAM-12

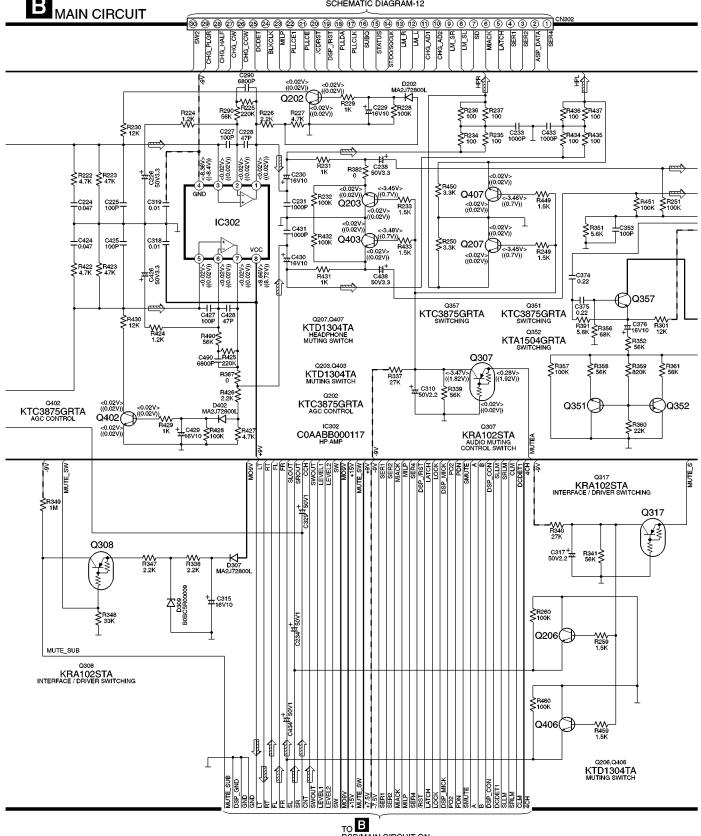


33

DSP/MAIN CIRCUIT ON SCHEMATIC DIAGRAM-5

—— : +B SIGNAL LINE —— : -B SIGNAL LINE 🚞 : MAIN SIGNAL LINE

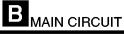

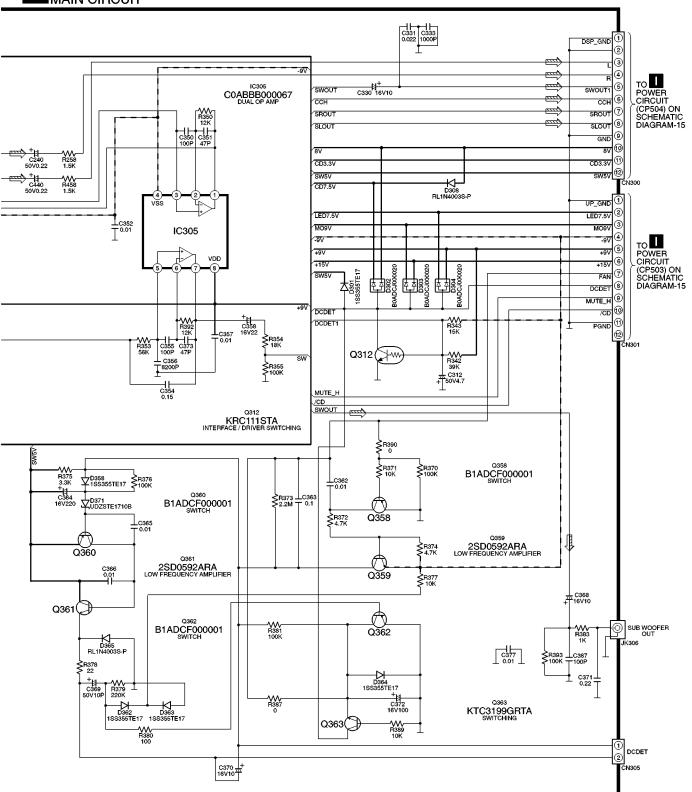

HEADPHONE

C904

1905 L905

L904-L905 RLBV252AV-Y


L901-L902 G0C101JA0030 L903 G0C100JA0030

SCHEMATIC DIAGRAM - 10 - : +B SIGNAL LINE : MAIN SIGNAL LINE C PANEL CIRCUIT TACT SWITCH 1 CIRCUIT Q601 VR900 Z900 EVEKE2F3024M B3RAB0000016 JOG VOL REMOTE SENSOR LED7.5V DMT PL_L MRT_L сом -(2)-\$904 AUX 2SB621ARSTA LF OP AMP S903 TUNER BAND IC601 C1BB00000574 I/O EXPANDER Ī 6 KEY1_ (5) VREF D611-D614 SLR325MCT31W v_jog_a 4 4 3 GND 3 ② ① GND 2 \$₈ ¥ \$R661 100 MUTE_S MRP2 MBP1 SER1 MUTEA MUTEH SSEQ_A LEVEL1 LEVEL2 MUTEC MUTE_SW SW_LV2(SW_LV1(DSP_CON TACT SWITCH 2 CIRCUIT C646 100P 100P 282 C647 282 100P R912 1.2K -WV-R914 2.2K R913 1.8K SYS6V SER5 SER6 SER6
DDD_RST
DSP_CON
SMUTE
VRC
V_JOG_B
V_JOG_A -**VV**-R607 4.7K H602B /W602 IC603 C1BB00000574 I/O EXPANDER HEADPHONE CIRCUIT \$R916 10K T_{C907} KEY1 6 <u>(5)</u> (5) C902 4 C901 HP_L 3 HP_R

2

--- : +B SIGNAL LINE - - : -B SIGNAL LINE



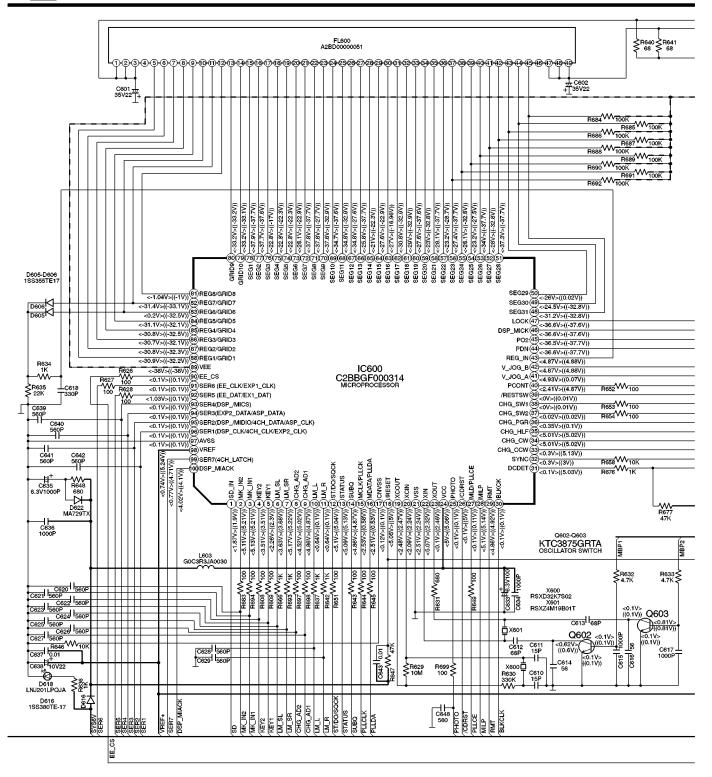


SCHEMATIC DIAGRAM - 12 ----: +B SIGNAL LINE --: -B SIGNAL LINE : MAIN SIGNAL LINE C PANEL CIRCUIT TO M AC TRANS CIRCUIT - (CN502) ON SCHEMATIC DIAGRAM-16 SER4 SER4 SER3 SER3 SYNC 4 L602 G0C101JA0030 (3) SER2 SER2 C619 50V3.3 GND SER1 SER1 SER7 SER7 Q604 KRC102STA PCONT SWITCH DSP_MIACK DSP_MIACK SD LM_SL LM_SL MRT_L <0.1V> ((0.1V)) LM_SR LM_SR TO G DECK CIRCUIT (CN1303) ON SCHEMATIC DIAGRAM-14 Q604 CHG_AD2 CHG_AD2 DGND A Q607 B1ADCF000001 VREF SUPPLY SWITCH CHG_AD1 CHG_AD1 DVREF LM_L LM_L Q605 B1ADCF000001 DECK SUPPLY SWITCH MK IN1 TO B MAIN CIRCUIT (CN302) ON SCHEMATIC DIAGRAM-8 LM R LM_R MK_IN ST/DO/SQCK ST/DO/SQCk DMT STATUS STATUS Q605 (5.12V> RP SUBQ SUBQ <5.1V> ((5.1V)) PLLCLK PLLCLK)Q607 R679 (4.6V) 10K R937 ((4.6V)) 470K PLLDA PLLDA <5.3V> ((5.2V)) 19 DDD RST DDD_RST 20 7CDRST /CDRST SYS6V (21) D619 1SS380TE-17 PLLCE PLLCE D625 1SS355TE17 PLLCE1 ₹8678 4.7K 23 MILP BLKCLK BLKCLK LOCK 25 DCDET DCDET DSP_MICK 26 CHG_CCW CHG_CCW PDN 27 CHG_CW CHG_CW 28 CHG_HALF CHG_HALF V JOG B V_JOG_A CHG_PLGR @ CHG_PLGR PCONT SW2 30 SW2 /RESTSW SW1 \$R650 \$R674 5.6K \$22K SW2 CHG_PLGR CHG_HALF DVREF+ D624 1SS355TE17 CHG_CW CHG_CCW SYNC R656 W 470 C606 KRC103STA POWER RESET SWITCH SW1 SW: /RESTSW /RESTSW PDN PDN D621 188355TE17 C630_ PO2 PO2 DCDET Q606/ DSP_MICK DSP_MICK ((5.01V)) C632 50V2.2 LOCK R675 MUTEH MUTEH SSEQ_A SSEQ_A 9 LEVEL1 LEVEL1 \$R624 ⊥C608 22K ⊤560P LEVEL2 LEVEL2 MUTEC MUTEC MUTE SW MUTE SW R673 /CD1 /CD TO B MAIN CIRCUIT (CN303) ON SCHEMATIC MUTEA MUTEA CS VCC NC MUTE_S MUTE_S IC602 DIAGRAM-6 BR93LC46FE2 DSP CON DSP CON SMUTE SMUTE DO GND 20 VRC VREF+ 23 VREF+ VREF-24) SFR5 DGND R660 0 C609 330P DGND 23 26 HP_GND Ø HP L THP L 28 HP_GND HP_GND

HP_R WWW


HP_R 29

----: +B SIGNAL LINE ZZZ : PLAYBACK SIGNAL LINE ZZZ : RECORD SIGNAL LINE

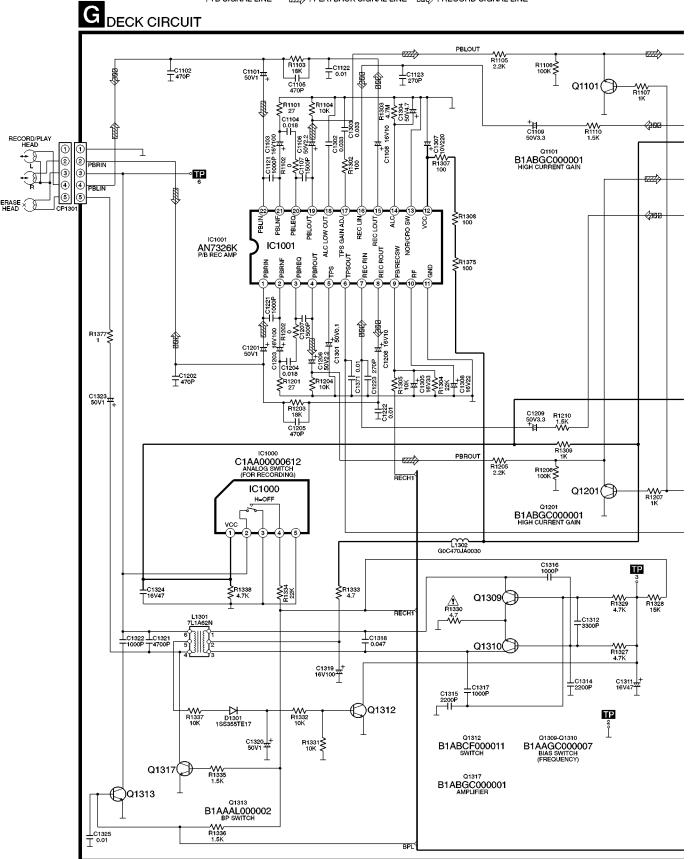


----: +B SIGNAL LINE --: -B SIGNAL LINE 四次: PLAYBACK SIGNAL LINE 回政 :RECORD SIGNAL LINE



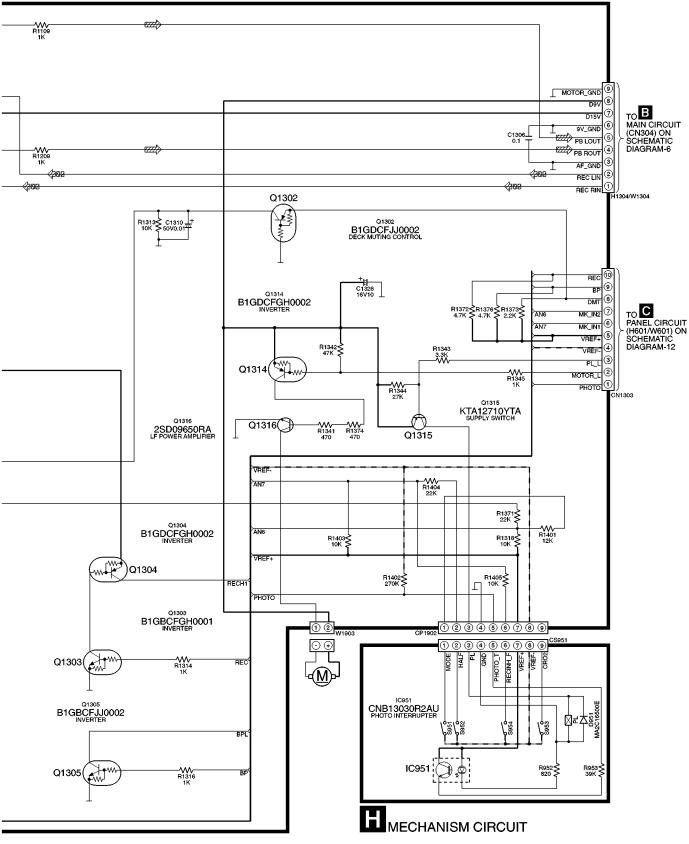


- : +B SIGNAL LINE POWER CIRCUIT 10502 RSN314H41A-P RSN35H2-P IC502 IC501 H_R OUT)IN GND AC DET)+IN_R)IN GND -vccM)-vccM GND (① R570 R571 R572 C504 330 330 330 820P (3) тоО C544 100V10 SPEAKER
TERMINAL
CIRCUIT
(CP520) ON
SCHEMATIC
DIAGRAM-16 D519 C518 (5) 6 __C503 ___820P C543 16V22 7 R530 56K R523 R524 9 -**VVV**-R538 27K 10 __C519 __470P ⊥_{C506}⊥ ⊤820P ⊤ H521 /W521 R533 \$R531 56K \$3.9K C542 + C517 T 0.01 C501 820P C502 I 820P T R507 3.9K ≸ R502 2.2K \$R501 2.2K C520_ 0.01 -**VV**-R527 180K ٧ R503 4.7K W R504 4.7K ₹R508 3.9K R575 \$ R574 10K ≥ DSP_AGND ⊥C583 **T** 0.1 **Q**510 AGND ③ FLOUT ESS R509 3.9K TO B MAIN CIRCUIT (CN300) ON SCHEMATIC DIAGRAM-9 4 FROUT (3) SWOOFER D503 B0AACK000004 R506 15K R505 15K 6 ССН Q501-Q502 KTC3199GRTA SWITCHING Ø # C582 + 50V2.2 SROUT SLOUT Q501(🕽 Q502(🕽) 8 9 DGND C5BA00000105 VOLTAGE REGULATOR D506 PL1N4003S-P 100 ① CD3.3V IC500 12 SW5V R569 12K ≸ 1 MPGND LED7.5V MO9V TO B MAIN CIRCUIT (CN301) ON SCHEMATIC DIAGRAM-9 4 -7.5V ⑤ +7.5V 6 +15V 17 FAN +L C580 #50V47 1N5402BM21 ® DCDET2 9 MUTE_H 100 /CD D504 RL1N4003S-P + C571 2750V2200F 100 PGND **★**D513 **★**D520 12 50V47 C574 50V2200F 25/330 25/330 **★**D514 **★**D512 <u>↑</u> D523 KBP152G4R5 C530 ⋈ GND ① TO M AC TRANS CIRCUIT (CN501) ON SCHEMATIC DIAGRAM-16 C581 + 25V2200P44 SUB+B AC

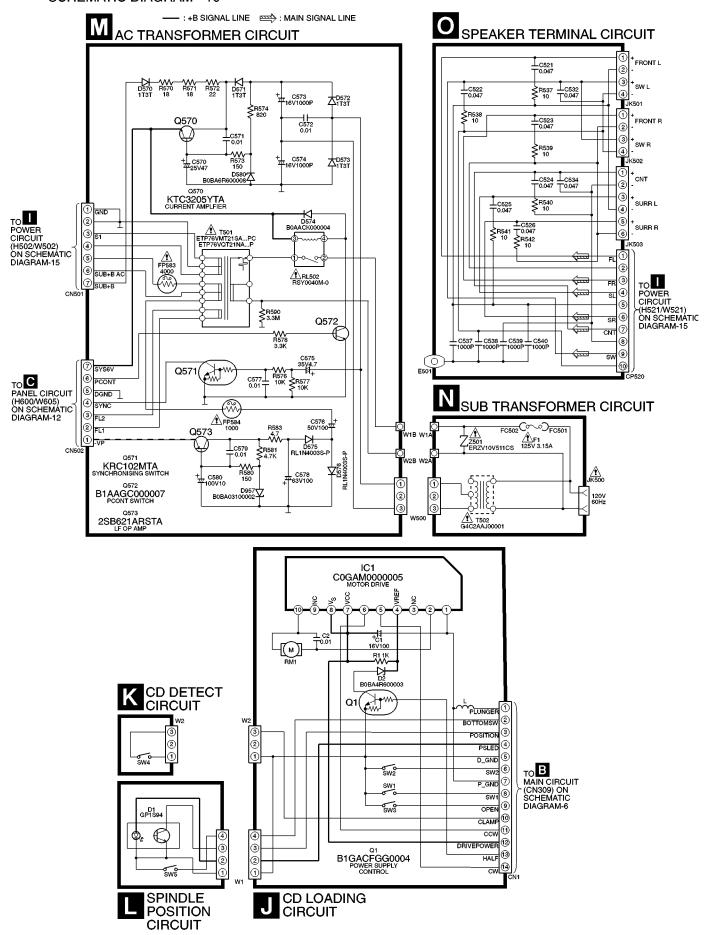



16 Printed Circuit Board


Note: Circuit board diagrams may be modified at any time with the development of new technology.

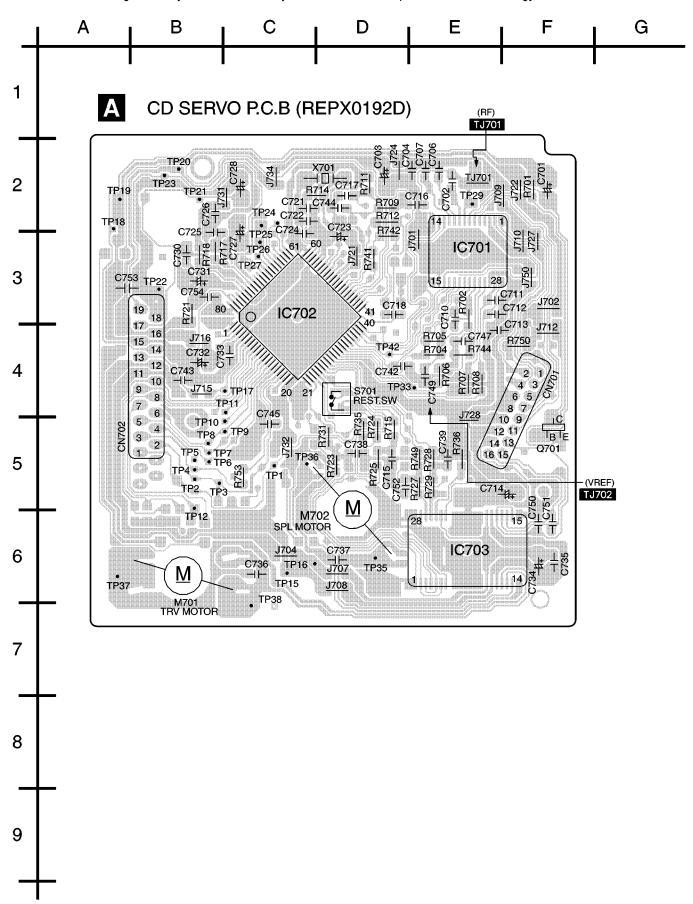



9

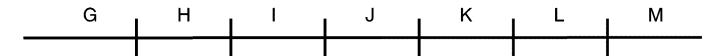


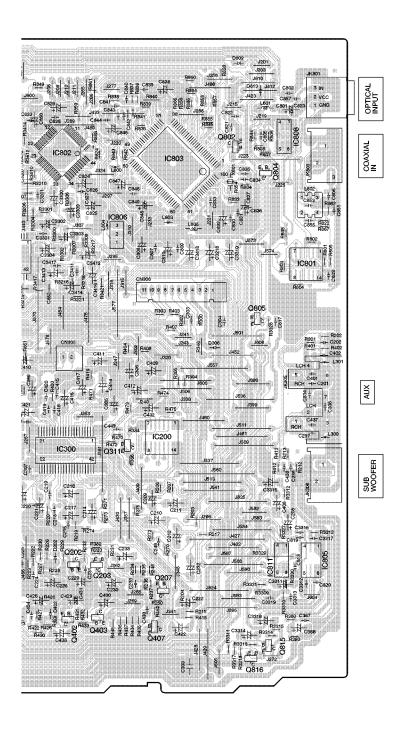


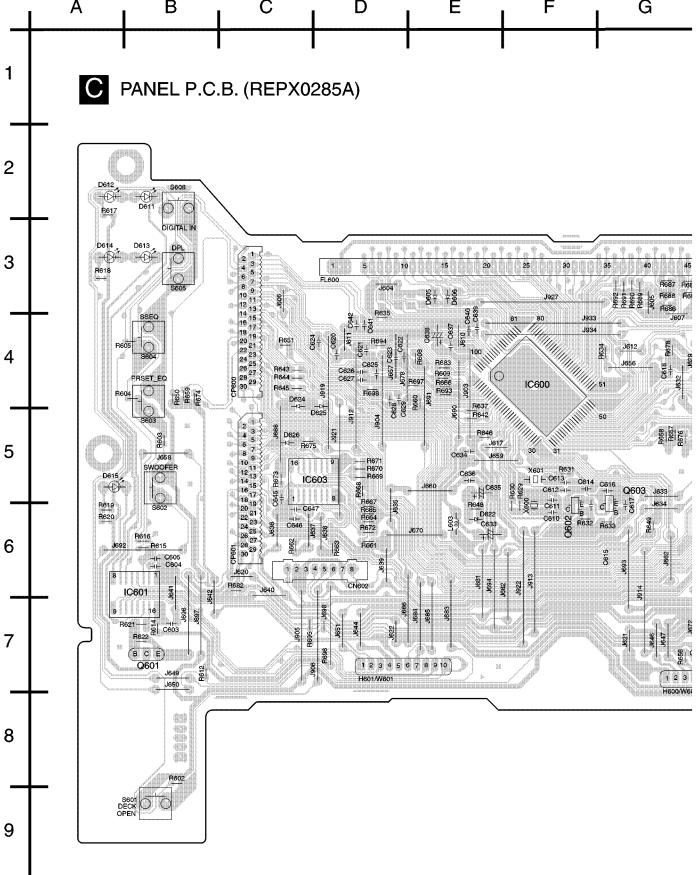


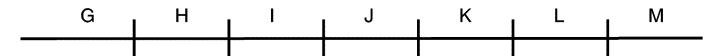


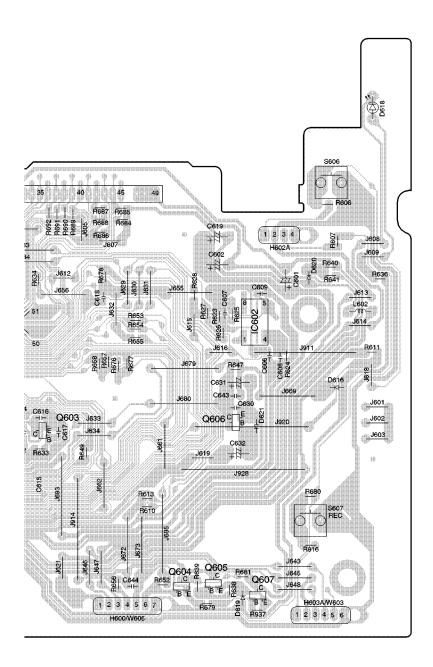


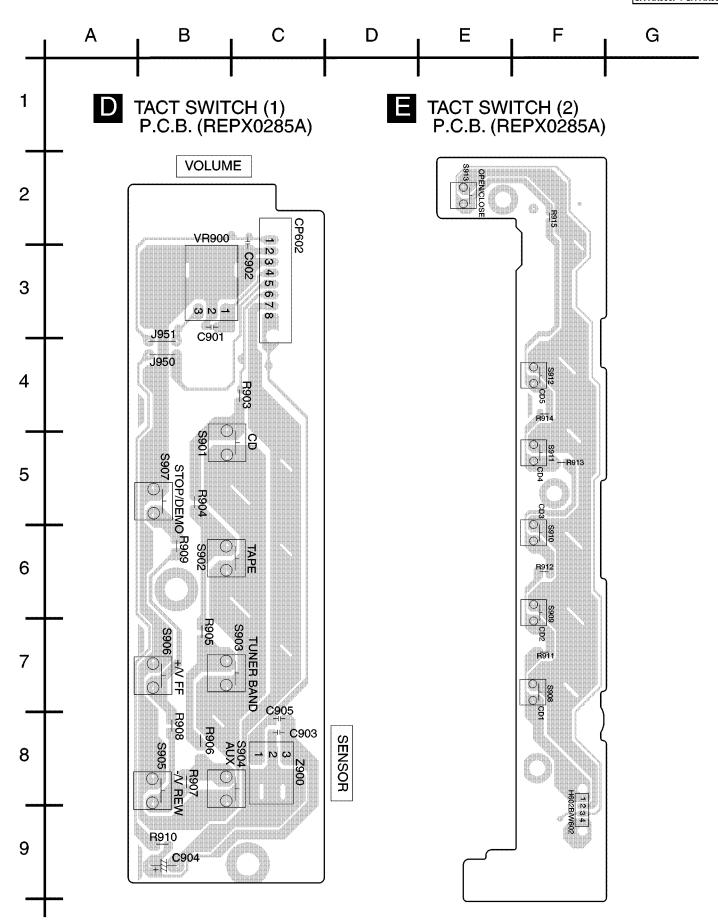


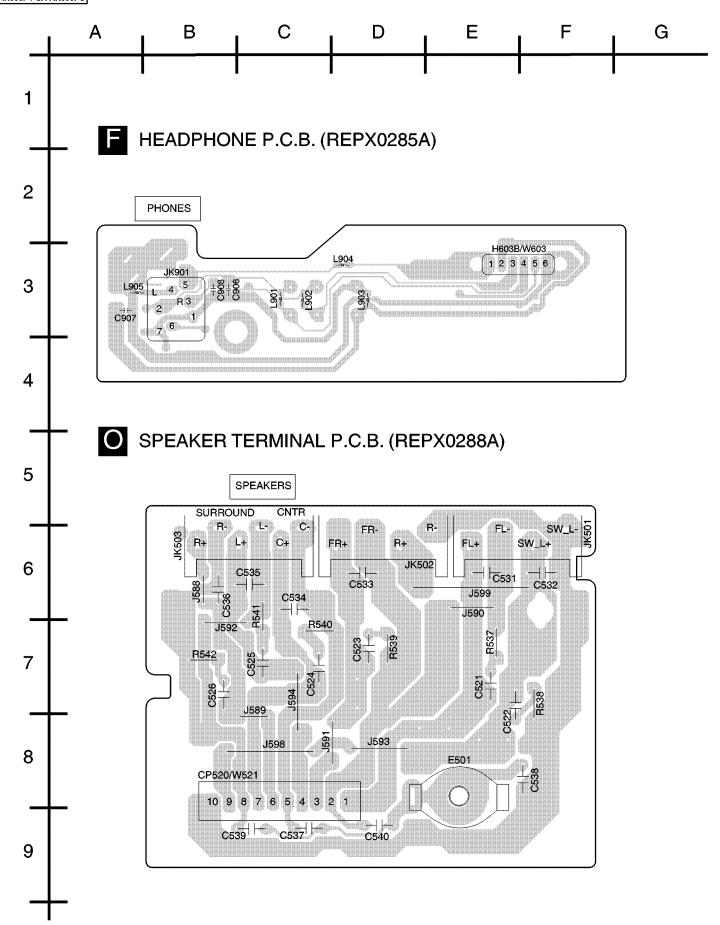

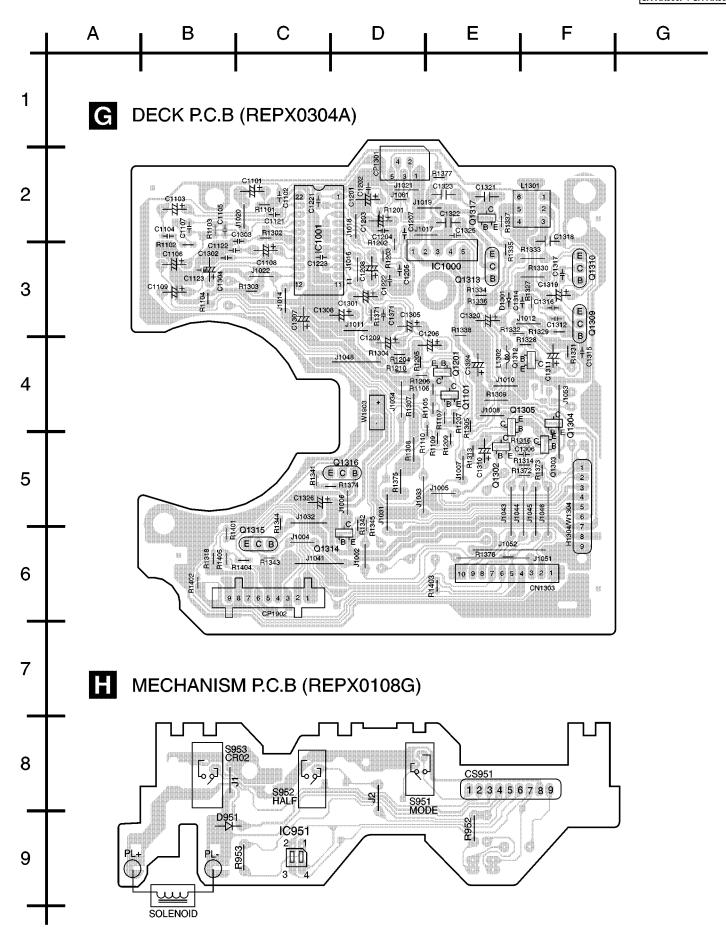


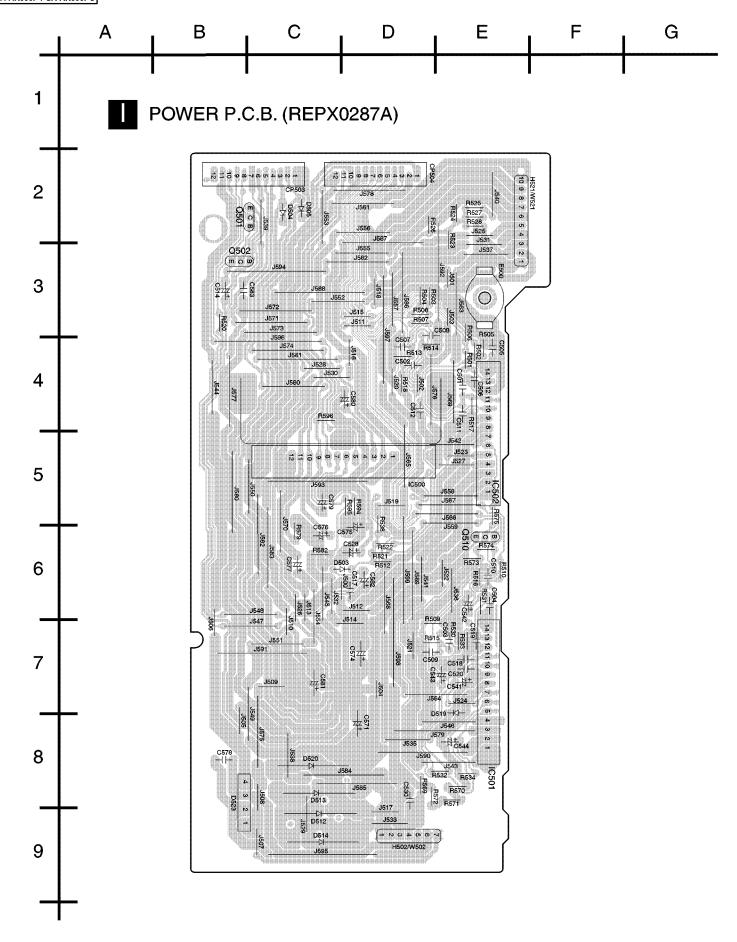

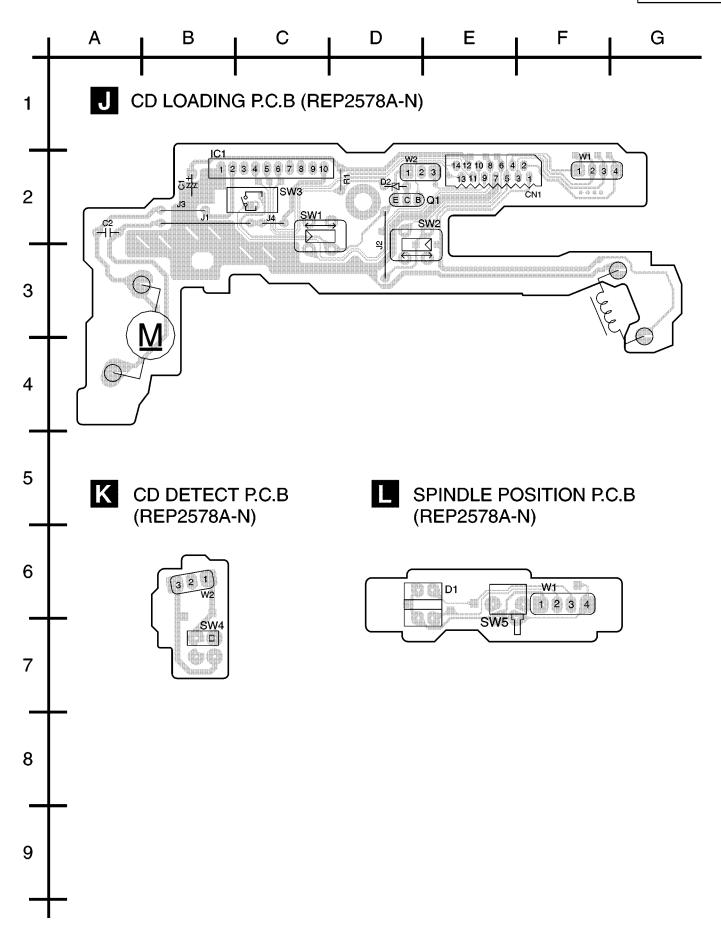


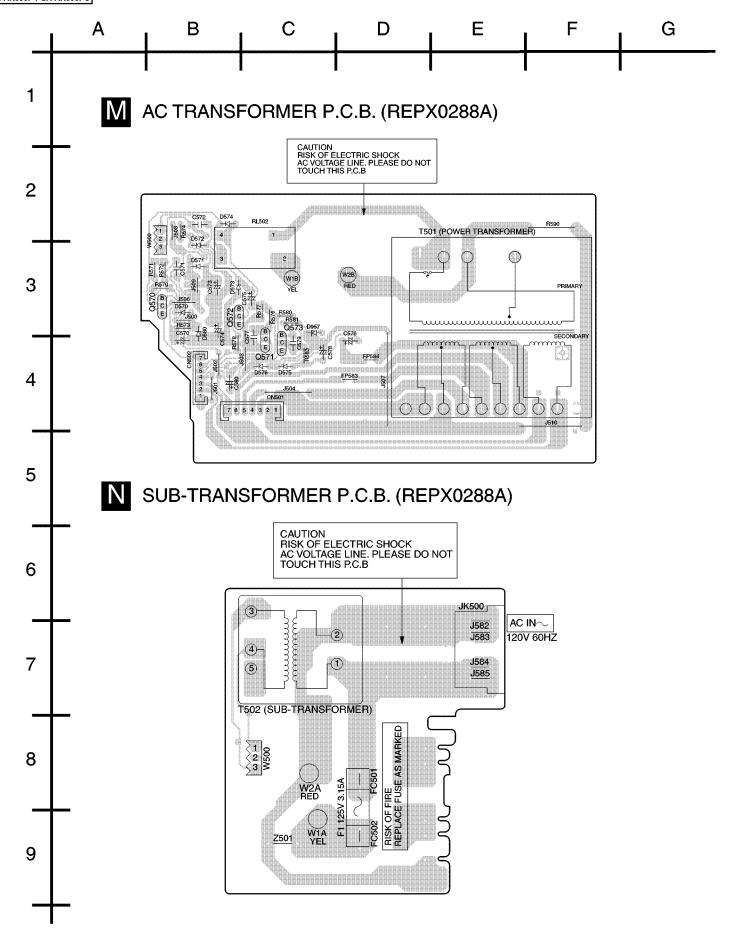

17 Wiring Connection Diagram

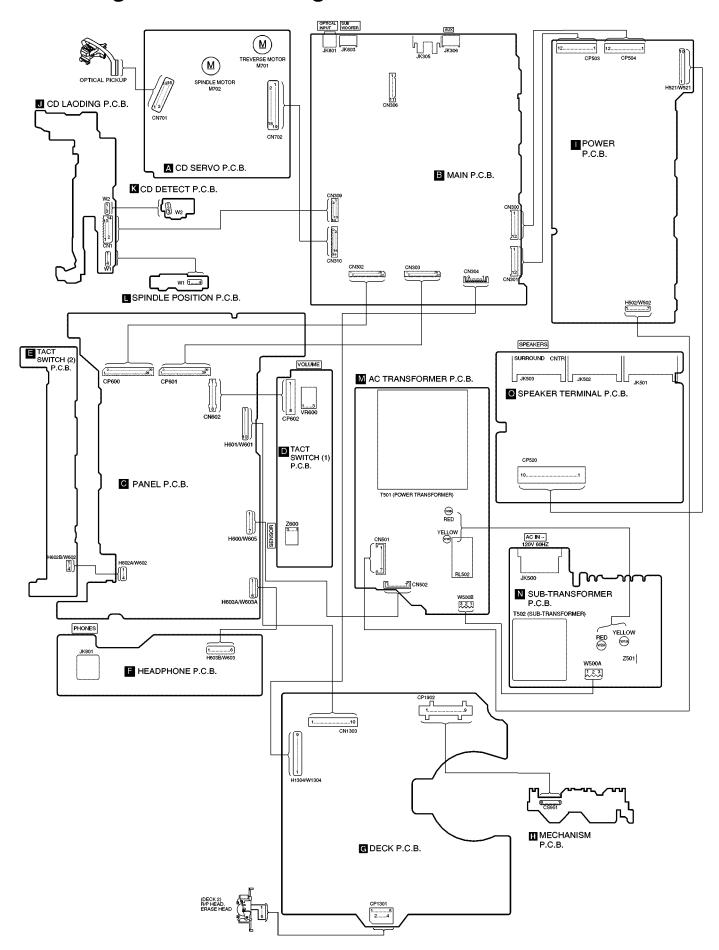

18 Troubleshooting Guide

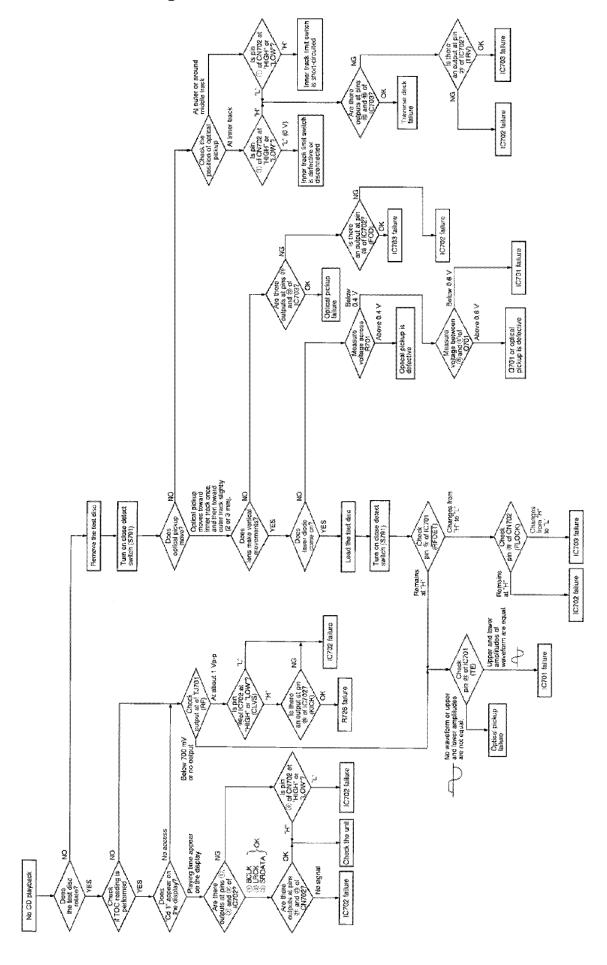

19 Parts Location and Replacement Parts List

Notes:

· Important safety notice:

Components identified by A mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardent (resistors), high-quality sound (capacitors), low noise (resistors), etc are used.

When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list.


- The parenthesized indications in the Remarks columns specify the areas or colour. (Refer to teh cover page for area or colour)

 Parts without these indications can be used for all areas.
- · Warning: This product uses a laser diode. Refer to caution statements on "Precaution of Laser Diode".
- · Capacitor values are in microfarads (µF) unless specified otherwise, P= Pico-farads (pF), F= Farads.
- · Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM).
- The marking (RTL) indicates that the Retention Time is limited for this items. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of a availability dependent on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.
- · [M] Indicates in the Remarks columns indicates parts supplied by MESA.
- · The "(SF)" mark denotes the standard part.
- · Reference for O/I book languages are as follows:

Ar:	Arabic	Du:	Dutch	lt:	Italian	Sp:	Spanish
Cf:	Canadian French	En:	English	Ko:	Korean	Sw:	Swedish
Cz:	Czech	Fr:	French	Po:	Polish	Co:	Traditional Chinese
Da :	Danish	Ge:	German	Ru:	Russian	Cn:	Simplified Chinese

19.1. Deck Mechanism (RAA4402-S)

19.1.1. Deck Mechanism Parts Location

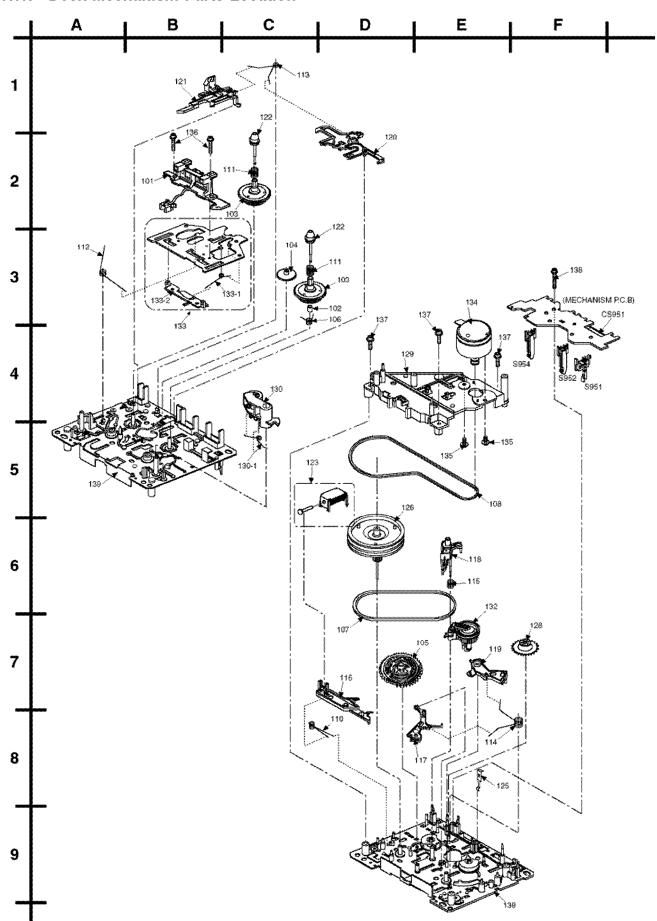



19.1.2. Deck Mechanism Parts List

Ref. No	Part No.	Part Name & Description	Remarks
		CASSETTE DECK	
101	RED0067	R/P HEAD BLOCK UNIT	[M]
102	RDB0069	OILLKSS METALF	[M]
103	RDG0300	REEL BASE GEAR	[M]
104	RDG0301	WINDING RELAY GEAR	[M]
105	RDK0026	MAIN GEAR	[M]
106	RMB0399	METAL EARTH SPRING	[M]
107	RDV0033-4	WINDING BELT	[M]
108	RDV0064	CAPSTAN BELT	[M]
110	RMB0312	TRIGGER LEVER SPRING	[M]
111	RMB0400	REEL SPRING	[M]
112	RMB0403	HEAB PANEL SPRING	[M]
113	RMB0404	BRAKE ROD SPRING	[M]
114	RMB0406	FR LEVER SPRING	[M]
115	RMB0408	THRUST SPRING	[M]
116	RML0370	TRIGGER LEVER	[M]
117	RML0371	FR LEVER	[M]
118	RML0372	WINDING LEVER	[M]
119	RML0374	EJECT LEVER	[M]
120	RMM0131	BRAKE ROD	[M]
121	RMM0133-1	EJECT ROD	[M]
122	RMQ0519	REEL HUB	[M]
123	RMS0398-1	MOVING CORE	[M]
125	RMC0061	PACK SPRING	[M]
126	RXF0061	FLYWHEEL F ASSY	[M]
128	RXG0040	FF RELAY GEAR ASSY	[M]
129	RMK0283A-J	SUB-CHASSIS	[M]
130	RXL0124	PINCH ROLLER F ASSY	[M]
130-1	RMB0401	PINCH ARM SPRING F	[M]
132	RXL0126	WINDING ARM ASSY	[M]
133	RXQ0412	HEAD PANEL ASSY	[M]
133-1	RMB0405	FR ROD SPRING	[M]
133-2	RMM0132	FR ROD	[M]
134	REM0098	CAP MOTOR ASSY	[M]
135	RHD26022	MOTOR SCREW	[M]
136	XTW2+5L	HEAD BLOCK UNIT SCRE	[M]
137	XTW26+10S	SUB-CHASSIS SCREW	[M]
138	XYC2+JF17	PCB EARTH SCREW	[M]
139	RMK0294	MECHA CHASSIS	[M]

19.2. CD Loading Mechanism (RD-DAC026-S)

19.2.1. CD Loading Mechanism Parts Location

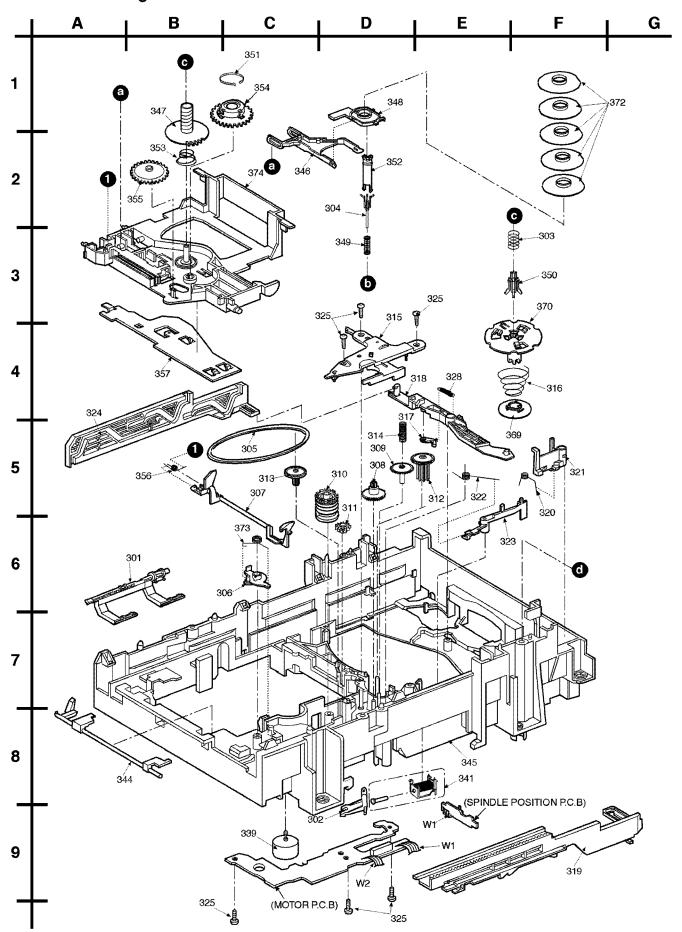

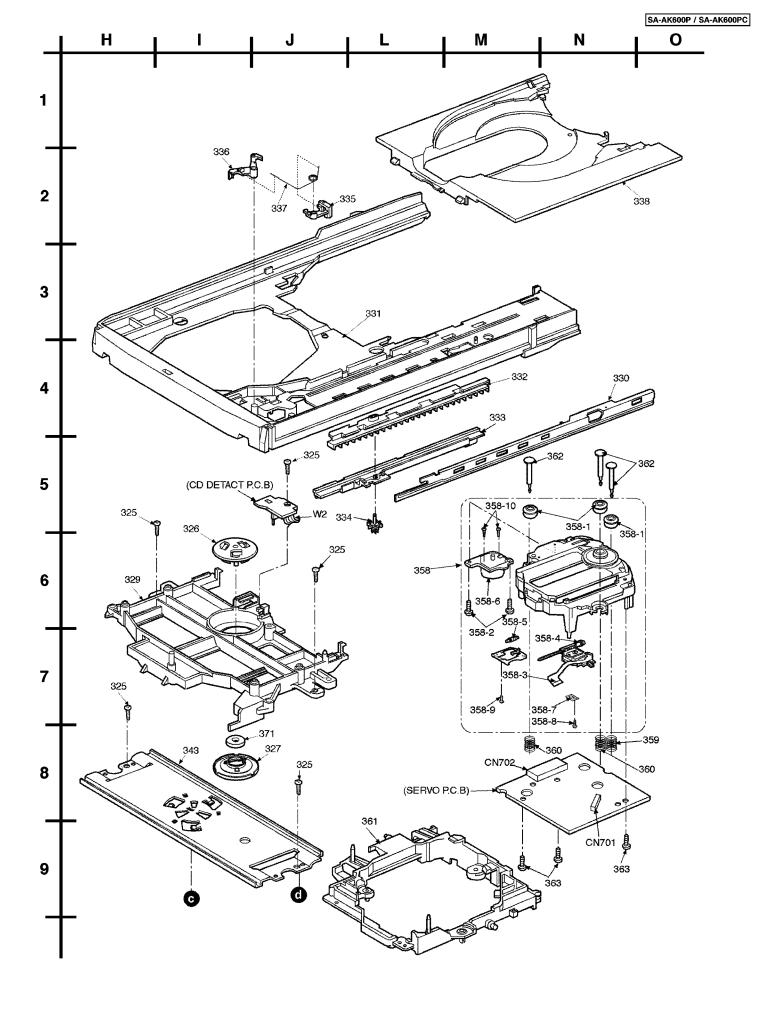


19.2.2. CD Loading Mechanism Parts List


Ref. No.	Part No.	Part Name & Description	Remark
		TRAVERSE DECK	
			1
301	RML0517	TIMING LEVER	[M]
302	RML0516	PLUNGER LEVER	[M]
303 304	RMD0551 RMQ0744	UPPER SPINDLE SPRING LOWER HOOK	[M]
305	RDV0056	BELT	[M]
306	RML0525	FRONT LOCK LEVER	[M]
307	RML0526	DISC LEVER	[M]
308	RDG0424	DRIVE GEAR	[M]
309	RDG0425	CHANGE GEAR	[M]
310	RDG0427	TRAVERSE CAM GEAR	[M]
311	RDG0428	TRAVERSE RELAY GEAR	[M]
312	RDG0426	UP/DOWN GEAR	[M]
313	RDG0429	PULLEY GEAR	[M]
314 315	RMB0549-1	CHANGE GEAR SPRING	[M]
316	RMQ0748 RMB0553	PITCH PLATE PUSH SPRING	[M]
317	RML0530	ASSIST LEVER	[M]
318	RML0518	CONNECTION LEVER	[M]
319	RMM0201	SLIDE PLATE 1	[M]
320	RME0258	REAR LOCK SPRING	[M]
321	RML0521	REAR LOCK	[M]
322	RME0257	TRAY LOCK LEVER SPRI	[M]
323	RML0520	TRAY LOCK	[M]
324	RMM0202	SLIDE PLATE 2	[M]
325	XTB3+10J	SCREW	[M]
326 327	RMR0334 RMR0624-W2	FIXED PLATE CLAMPER	[M]
328	RMB0561	ASSIST LEVER SPRING	[M]
329	RMR1121-K	MECHA COVER	[M]
330	RMA1110-2	TRAY ANGLE	[M]
331	RMR1122-H1	TRAY BASE	[M]
332	RMM0204	CARRIER	[M]
333	RMM0203	DRIVE RACK	[M]
334	RDG0432	SPEED UP GEAR	[M]
335	RML0524	SLIDE LOCK	[M]
336	RML0523	CARRIER LOCK	[M]
337	RME0260-1	SLIDE LOCK SPRING	[M]
338 339	RMR1123-H RXQ0595	MOTOR SUB ASS'Y	[M]
341	RSJ0003	SOLENOLD ASS'Y	[M]
343	RMA1106	UPPER PLATE	[M]
344	RML0519	8CD LEVER	[M]
345	RFKNAAK27GCS	MECHA BASE ASS'Y	[M]
346	RML0522	TURNING STOPPER	[M]
347	RMQ0745	LOWER SPINDLE	[M]
348	RMQ0746	UP/DOWN BASE	[M]
349	RMB0550	LOWER SPINDLE SPRING	[M]
350	RMQ0747	UPPER HOOK	[M]
351	RME0263	CLICK SPRING	[M]
352 353	RMQ0743 RMB0552	SPINDLE SHAFT CUSHION SPRING	[M]
354	RDG0430	RELAY GEAR 'A'	[M]
355	RDG0431	RELAY GEAR 'B'	[M]
356	RME0262	DISK LEVER SP.	[M]
357	RMA1105	SUPPORT PLATE	[M]
358	RAE0152Z-3	TRAVERSE	[M]
358-1	SHGD113-1	FLOATING CUSHION	[M]
358-2	SNSD38	TRV MOTOR ASSY SCREW	[M]
358-3	RAF0150A-4S	50A OPTICAL PICKUP	[M]
358-4	RDG0247	DRIVE GEAR	[M]
358-5	RDG0248	RELAY GEAR	[M]
358-6 358-7	RXQ0339	TRAVERSE MOTOR ASSY	[M]
358-7 358-8	RXQ0304-1 XQN17+CG5	NUT PLATE ASSY NUT PLATE ASSY SCREW	[M]
358-9	XQS2+A3FZ	SPINDLE MOTOR SCREW	[M]
358-10	XQS17+A35FZ	TRAVERSE MOTOR SCREW	[M]
359	RME0142	FLOATING SPRING A	[M]
360	RME0109	FLOATING SPRING B	[M]
361	RMR1124-K1	TRAVERSE CHASSIS	[M]


Ref. No.	Part No.	Part Name & Description	Remarks
363	XTN2+6G	SCREW	[M]
369	RMX0141	PUSH SPACER	[M]
370	RMQ0749	UPPER SPINDLE	[M]
371	RHM0001	MAGNET	[M]
372	RMX0140	DISC SPACER	[M]
373	RME0261	FRONT LOCK SPRING	[M]
374	RMQ0742	SPINDLE BASE	[M]

19.3. Cabinet

19.3.1. Cabinet Parts Location

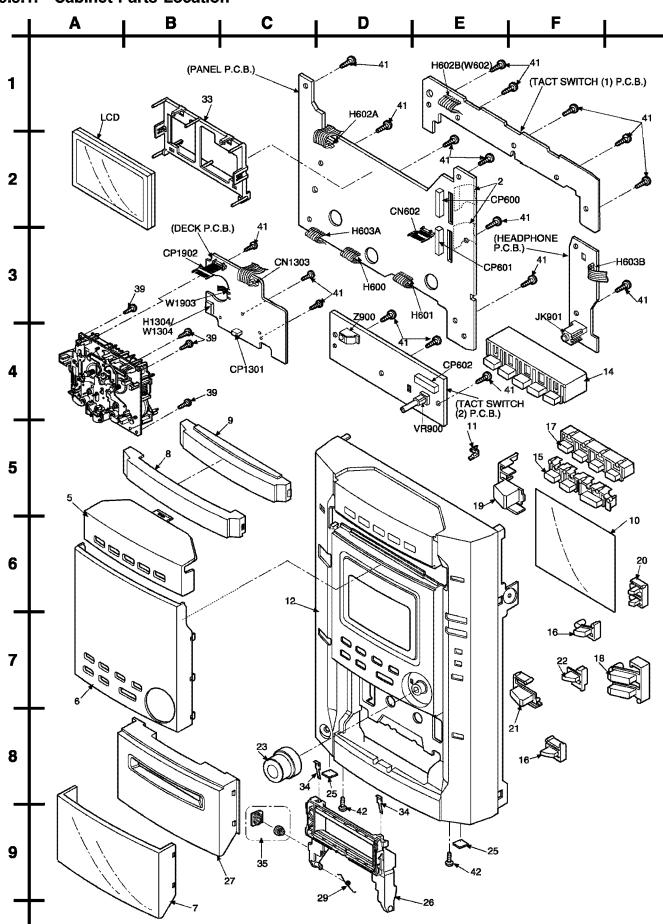

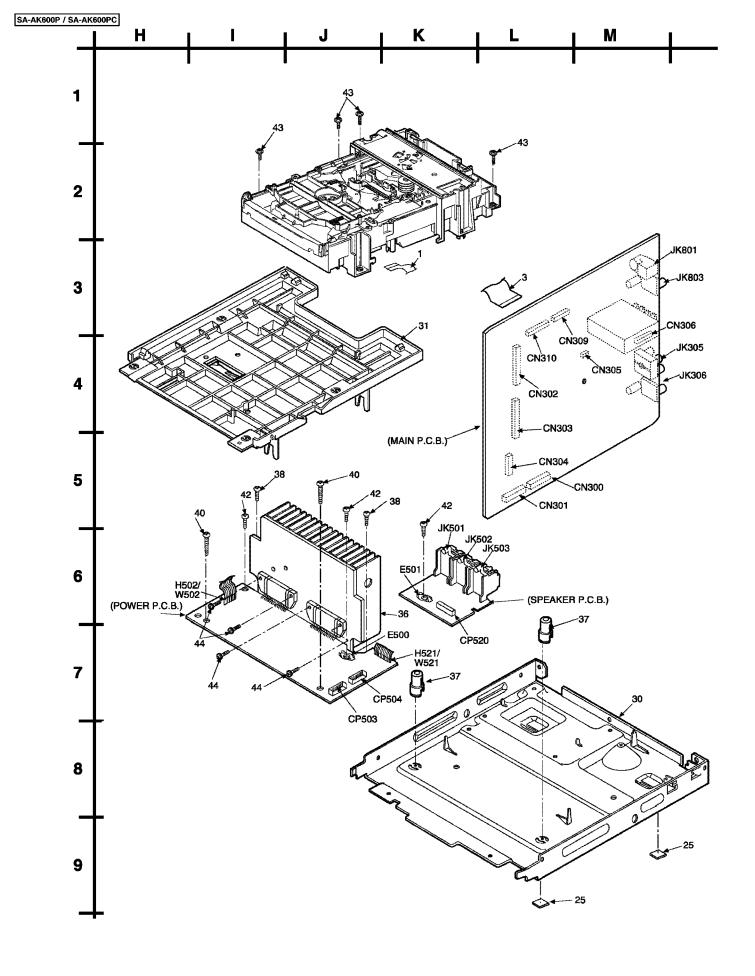

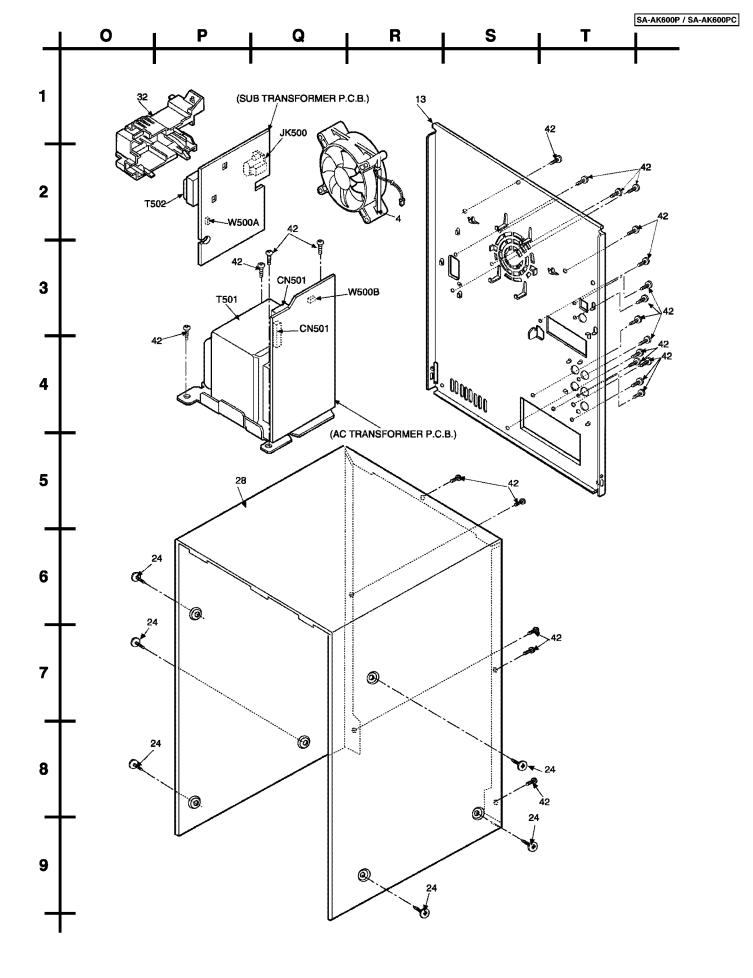

19.3.2. Cabinet Parts List

Ref.	No.	Part No.	Part Name & Description	Remarks
			CABINET AND CHASSIS	
_			44	Pare 2
1		REEX0083	14P FFC WIRE	[M]
2		REEX0156	30P FFC WIRE	[M]
3		REEX0170	19P FFC WIRE	[M]
4		REM0072-3	FAN	[M]
5		RGK1342B-Q	TOP ORNAMENT	[M]
6		RGK1344A-Q	PANEL ORNAMENT	[M]
7		RGK1345A-Q	CASS. ORNAMENT	[M]
8		RGKX0106-H	CD LID ORNAMENT	[M]
9		RGKX0107-S	CD LID	[M]
10		RGKX0108	FL FILTER	[M]
11		RGL0538-W	LIGHTING CHIP	[M]
12		RGPX0061-S	FRONT PANEL	[M]
13		RGRX0021A-A1	REAR PANEL	[M] P
13		RGRX0021A-B1	REAR PANEL	[M] PC
14		RGU1956A-S	DISC BUTTON	[M]
15		RGU1957A-S	MAIN BUTTON	[M]
16		RGU1959-S	OPEN/CLOSE BUTTON	[M]
17		RGU1961A-Q	FUNCTION BUTTON	[M]
18		RGU1962A-Q	DPL BUTTON	[M]
19		RGUX0432-S	POWER BUTTON	[M]
20		RGUX0433-S	EQ BUTTON	[M]
21		RGUX0434-S	RECORD BUTTON	[M]

Ref. No	. Part No.	Part Name & Description	Remarks
22	RGUX0435-Q	S-WOOFER BUTTON	[M]
23	RGW0361-S	MAIN VOLUME KNOB	[M]
24	RHD30002-H	SCREW	[M]
25	RKA0059-K	LEG RUBBER	[M]
26	RKF0585-K2J	CASS. HOLDER (L)	[M]
27	RKF0615-S	CASSETTE LID	[M]
28	RKM0433B-S1	TOP CABINET (BENT)	[M]
29	RMB0474	CASS. OPEN SPRING	[M]
30	RMK0479-1	BOTTOM CHASSIS	[M]
31	RMKX0059	CD CHASSIS	[M]
32	RMNX0029C-A	SUB TRANS HOLDER	[M]
33	RMNX0066	FL HOLDER	[M]
34	RUS757ZAA	CASSETTE HALF SPRING	[M]
35	RXG0049	DAMPER GEAR UNIT	[M]
36	RXXX0032	HEAT SINK UNIT	[M]
37	SHE187-6J	PCB SUPPORT	[M]
38	XTB3+10J	SCREW	[M]
39	XTB3+10JFZ	SCREW	[M]
40	XTB3+20J	SCREW	[M]
41	XTBS26+10J	SCREW	[M]
42	XTBS3+8JFZ1	SCREW	[M]
43	XTW3+12T	SCREW	[M]
44	XTW3+15T	SCREW	[M]

19.4. Electrical Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PRINTED CIRCUIT BOARD	
	REPX0192D	CD SERVO P.C.B.	[M] (RTL)
	REPX0286A	MAIN P.C.B.	[M] (RTL)
	REPX0285A	PANEL P.C.B.	[M] (RTL)
	REPX0285A	TACT SWITCH (1) P.C.B.	[M] (RTL)
	REPX0285A	TACT SWITCH (2) P.C.B.	[M] (RTL)
	REPX0285A	HEADPHONE P.C.B.	[M] (RTL)
	REPX0288A	SPEAKER TERMINAL P.C.B.	[M] (RTL)
	REPX0304A	DECK P.C.B.	[M] (RTL)
	REPX0108G	MECHANISM P.C.B.	[M] (RTL)
	REPX0287A	POWER P.C.B.	[M] (RTL)
	REP2578A-N	CD LOADING P.C.B.	[M] (RTL)
	REP2578A-N	CD DETECT P.C.B.	[M] (RTL)
	REP2578A-N REPX0288A	SPINDLE POSITION P.C.B.	[M] (RTL)
		AC TRANSFORMER P.C.B.	[M] (RTL)
	REPX0288A	SUB-TRANSFORMER P.C.B.	[M] (RTL)
		INTEGRATED CIRCUITS	
		INIEGRATED CIRCUITS	
IC1	C0GAM0000005	IC DRIVE	[M]
IC200	COGAMOUOUUS COJBASOOOOO8	IC QUAD ANALOG SW	[M]
IC300	C1BB00000654	IC ASP	[M]
IC300 IC302	C0AABB000117	IC OP-AMP (HP AMP)	[M]
IC302	C0ABB000117	IC TRIPLE 2CH ANALOG	
10303	COODAROUUZJZ	MULTIPLEXOR	Lazj
IC305	C0ABBB000067	IC DUAL OF AMP	[M]
IC500	C5BA00000105	IC VOLTAGE REGULATOR	[M] <u></u>
IC501	RSN35H2-P	IC HIC	[M] A
IC502	RSN314H41A-P	IC POWER AMP HIC	[M] <u></u>
IC600	C2BBGF000314	IC MICROPROCESSOR	[M]
IC601	C1BB00000574	IC I/O EXPANDER	[M]
IC602	BR93LC46FE2	IC EPROM	[M]
IC603	C1BB00000574	IC I/O EXPANDER	[M]
IC701	AN8885SBE1	IC SERVO AMP	[M]
IC702	MN662790RSC	IC SERVO PROCESSOR	[M]
IC703	AN8739SBTE2	IC 4CH DRIVER	[M]
IC801	TC74HCU04AF	IC CMOS INVERTER	[M]
IC802	COFBZK000005	IC AUDIO DECODER	[M]
IC803	C2HBZH000001	IC DSP	[M]
IC804	M62444FPE1	IC 4CH VOL	[M]
IC805	C0ABBB000067	IC DUAL OP AMP	[M]
IC806	UPC29M33HF	IC VOLTAGE STABILISER	[M] A
IC808	C0JBAS000056	IC DUAL BILATERAL SWITCH	[M]
IC809	C0ABBB000067	IC DUAL OP AMP	[M]
IC810	C0ABBB000067	IC DUAL OF AMP	[M]
IC811	COJBASO00056	IC DUAL BILATERAL SWITCH	[M]
IC951	CNB13030R2AU	IC PHOTO INTERRUPTER	[M]
IC1000	C1AA00000612	IC SW ANALOG	[M]
IC1000 IC1001	AN7326K	IC REC / PB	[M]
-01001	AU SU SUN	IC REC / FB	Fari
		TRANSISTORS	
Q1	B1GACFGG0004	TRANSISTOR	[M]
Q1 Q201	KTC3875GRTA	TRANSISTOR	[M]
Q201 Q202	KTC3875GRTA	TRANSISTOR	[M]
Q203	KTD1304TA	TRANSISTOR	[M]
Q204	KTC3875GRTA	TRANSISTOR	[M]
Q204 Q206	KTD1304TA	TRANSISTOR	[M]
Q207	KTD1304TA	TRANSISTOR	[M]
Q301	KRC102STA	TRANSISTOR	[M]
Q301 Q302	KTA12710YTA	TRANSISTOR	[M]
Q302 Q303	KRC101STA	TRANSISTOR	[M]
Q304	KRC101STA	TRANSISTOR	[M]
Q30 1 Q305	KRC101STA	TRANSISTOR	[M]
Q305 Q306	B1AAKD000009	TRANSISTOR	[M] A
Q306 Q307	KRA102STA	TRANSISTOR	[M] Z:X
Q307 Q308			
	KRA102STA	TRANSISTOR	[M]
Q309 Q310	KRA102STA	TRANSISTOR	[M]
Q310 Q311	KTC3875GRTA KRA102STA	TRANSISTOR TRANSISTOR	[M]
		AUIGIGNALL	I IVI I

Ref. No.	Part No.	Part Name & Description	Remarks
Q316	KTD1304TA	TRANSISTOR	[M]
Q317	KRA102STA	TRANSISTOR	[M]
Q351	KTC3875GRTA	TRANSISTOR	[M]
Q352	KTA1504GRTA	TRANSISTOR	[M]
Q357	KTC3875GRTA	TRANSISTOR	[M]
Q358	B1ADCF000001	TRANSISTOR	[M]
Q359	2SD0592ARA	TRANSISTOR	[M]
Q360	B1ADCF000001	TRANSISTOR	[M]
Q361 Q362	2SD0592ARA	TRANSISTOR	[M]
	B1ADCF000001 KTC3199GRTA	TRANSISTOR	[M]
Q363 Q401	KTC3875GRTA	TRANSISTOR	[M]
Q401 Q402	KTC3875GRTA	TRANSISTOR	[M]
Q403	KTD1304TA	TRANSISTOR	[M]
Q404	KTC3875GRTA	TRANSISTOR	[M]
Q406	KTD1304TA	TRANSISTOR	[M]
Q407	KTD1304TA	TRANSISTOR	[M]
Q501	KTC3199GRTA	TRANSISTOR	[M]
Q502	KTC3199GRTA	TRANSISTOR	[M]
Q510	BlaagC000007	TRANSISTOR	[M]
Q570	KTC3205YTA	TRANSISTOR	[M]
Q570 Q571	KRC102MTA	TRANSISTOR	[M]
Q572	B1AAGC000007	TRANSISTOR	[M]
Q572 Q573	2SB621ARSTA	TRANSISTOR	[M]
Q601	2SB621ARSTA	TRANSISTOR	[M]
Q602	KTC3875GRTA	TRANSISTOR	[M]
Q603	KTC3875GRTA	TRANSISTOR	[M]
Q604	KRC102STA	TRANSISTOR	[M]
Q605	B1ADCF000001	TRANSISTOR	[M]
Q606	KRC103STA	TRANSISTOR	[M]
Q607	B1ADCF000001	TRANSISTOR	[M] A
Q701	B1ADCF000001	TRANSISTOR	[M]
Q802	KRC102STA	TRANSISTOR	[M]
Q803	KTA12710YTA	TRANSISTOR	[M]
Q804	KRA102STA	TRANSISTOR	[M]
Q805	KRA102STA	TRANSISTOR	[M]
Q809	KTD1304TA	TRANSISTOR	[M]
Q810	B1ABCF000011	TRANSISTOR	[M]
Q811	KTA12710YTA	TRANSISTOR	[M]
Q812	B1ABCF000011	TRANSISTOR	[M]
Q813	KRA102STA	TRANSISTOR	[M]
Q814	KRA102MTA	TRANSISTOR	[M]
2815	KTD1304TA	TRANSISTOR	[M]
Q816	KTD1304TA	TRANSISTOR	[M]
Q817	KRA102STA	TRANSISTOR	[M]
Q818	KRA102STA	TRANSISTOR	[M]
Q819	KTD1304TA	TRANSISTOR	[M]
Q820	KTD1304TA	TRANSISTOR	[M]
Q1101	BlabGC000001	TRANSISTOR	[M]
Q1201	BlabGC000001	TRANSISTOR	[M]
Q1302	B1GDCFJJ0002	TRANSISTOR	[M]
Q1302 Q1303	B1GBCFGH0001	TRANSISTOR	[M]
Q1304	B1GDCFGH0002	TRANSISTOR	[M]
Q1305	B1GBCFJJ0002	TRANSISTOR	[M]
Q1309	B1AAGC000007	TRANSISTOR	[M]
Q1310	B1AAGC000007	TRANSISTOR	[M]
Q1312	BlabCF000011	TRANSISTOR	[M]
Q1313	B1AAAL000002	TRANSISTOR	[M]
Q1314	B1GDCFGH0002	TRANSISTOR	[M]
Q1315	KTA12710YTA	TRANSISTOR	[M]
Q1316	2SD09650RA	TRANSISTOR	[M]
Q1317	B1ABGC00001	TRANSISTOR	[M]
		DIODES	
D2	B0BA4R600003	DIODE	[M]
D202	MA2J72800L	DIODE	[M]
D203	MA2J72800L	DIODE	[M]
D204	MA2J72800L	DIODE	[M]
	MA2J72800L B0ADCC000002 B0ADCC000002	DIODE DIODE	[M] [M]

Ref. No.	Part No.	Part Name & Description	Remarks
D302	B0ADCJ000020	DIODE	[M]
D303	B0ADCJ000020	DIODE	[M]
D304	B0ADCJ000020	DIODE	[M]
D305	B0BC5R000009	DIODE	[M]
D306	B0BC7R500001	DIODE	[M]
D307	MA2J72800L	DIODE	[M]
D308 D309	RL1N4003S-P	DIODE	[M]
D309 D311	B0BC5R000009 B0BC5R600003	DIODE	[M]
D312	RL1N4003S-P	DIODE	[M]
D313	MA2J72800L	DIODE	[M]
D314	MA2J72800L	DIODE	[M]
D315	MA2J72800L	DIODE	[M]
D316	MA2J72800L	DIODE	[M]
D317	1SS355TE17	DIODE	[M]
D318	B0ADCJ000020	DIODE	[M]
D358	1SS355TE17	DIODE	[M]
D362	1SS355TE17	DIODE	[M]
D363	1SS355TE17	DIODE	[M]
D364	1SS355TE17	DIODE	[M]
D365	RL1N4003S-P	DIODE	[M]
D371	UDZSTE1710B	DIODE	[M]
D402	MA2J72800L	DIODE	[M]
D403	MA2J72800L	DIODE	[M]
D404	MA2J72800L	DIODE	[M]
D405	BOADCC000002	DIODE	[M]
D406 D503	B0ADCC000002 B0AACK000004	DIODE	[M] [M]
D503	RL1N4003S-P	DIODE	[M]
D505	RL1N40035-P	DIODE	[M]
D512	1N5402BM21	DIODE	[M] A
D513	1N5402BM21	DIODE	[M] A
D514	1N5402BM21	DIODE	[M] A
D519	B0BA01500003	DIODE	[M]
D520	1N5402BM21	DIODE	[M] A
D523	KBP152G4R5	DIODE	[M] <u></u>
D570	1T3T	DIODE	[M]
D571	1T3T	DIODE	[M]
D572	1T3T	DIODE	[M]
D573	1T3T	DIODE	[M]
D574	B0AACK000004	DIODE	[M]
D575	RL1N4003S-P	DIODE	[M]
D576	RL1N4003S-P	DIODE	[M]
D580 D605	B0BA6R600008 1SS355TE17	DIODE	[M]
D606	188355TE17	DIODE	[M]
D611	SLR325MCT31W	DIODE	[M]
D612	SLR325MCT31W	DIODE	[M]
D613	SLR325MCT31W	DIODE	[M]
D614	SLR325MCT31W	DIODE	[M]
D615	SLR325MCT31W	DIODE	[M]
D616	1SS380TE-17	DIODE	[M]
D618	LNJ201LPQJA	DIODE	[M]
D619	1SS380TE-17	DIODE	[M]
D620	MA8047MTX	DIODE	[M]
D621	1SS355TE17	DIODE	[M]
D622	MA729TX	DIODE	[M]
D624	1SS355TE17	DIODE	[M]
D625	1SS355TE17	DIODE	[M]
D626 D801	1SS355TE17 B0BC5R000009	DIODE	[M]
D801 D802	B0ADCC000002	DIODE	[M]
D802 D803	B0ADCC000002	DIODE	[M]
D804	B0BC5R600003	DIODE	[M]
D805	RL1N4003S-P	DIODE	[M]
D806	RL1N4003S-P	DIODE	[M]
D807	MAZ80680HL	DIODE	[M]
D808	MAZ80680HL	DIODE	[M]
D809	1SS355TE17	DIODE	[M]
D813	1SS355TE17	DIODE	[M]
D951	MA2C16500E	DIODE	[M]
D957	B0BA03100002	DIODE	[M]
D1301	1SS355TE17	DIODE	[M]
		1	1

	1	1	
Ref. No.	Part No.	Part Name & Description	Remarks
		VARIABLE RESISTORS	
VR900	EVEKE2F3024M	VR VOLUME JOG	[M]
		SWITCHES	
S601	EVQ21405R	SW DECK OPEN	[M]
S602	EVQ21405R	SW S. WOOFER	[M]
S603	EVQ21405R	SW PRESET EQ	[M]
S604	-		
	EVQ21405R	SW SS EQ	[M]
S605	EVQ21405R	SW DPL	[M]
S606	EVQ21405R	SW POWER	[M]
S607	EVQ21405R	SW REC	[M]
s608	EVQ21405R	SW DIGITAL	[M]
S701	RSH1A043-U	SW REST	[M]
S901	EVQ21405R	SW CD	[M]
S902	EVQ21405R	SW TAPE	[M]
S903	EVQ21405R	SW TUNER BAND	[M]
S904	EVQ21405R	SW AUX	[M]
S905	EVQ21405R	SW REW/TUNE DOWN	[M]
S906	EVQ21405R	SW FF/TUNE UP	[M]
S907	EVQ21405R	SW STOP/DEMO	[M]
S908	EVQ21405R	SW CD 1	[M]
S909	~	SW CD 2	
	EVQ21405R	SW CD 2	[M]
S910	EVQ21405R		[M]
S911	EVQ21405R	SW CD 4	[M]
S912	EVQ21405R	SW CD 5	[M]
S913	EVQ21405R	SW CD OPEN/CLOSE	[M]
S951	RSH1A018-3U	SW MODE	[M]
8952	RSH1A019-2U	SW LEAF	[M]
S953	RSH1A019-2U	SW LEAF	[M]
S954	RSH1A019-2U	SW LEAF	[M]
		SWITCHES	
SW1	RSH1A032-U	SW PUSH	[M]
SW2	RSH1A032-U	SW PUSH	[M]
SW3	RSH1A005-1U	sw	[M]
-		SW CD	
	RSH1A91ZA-A	SW CD	[M]
SW4	TOT 1 D D 0 0 0 0 0 5	are roam	Faci
SW5	K0L1BB000005	SW LOCK	[M]
-	K0L1BB000005		[M]
-	K0L1BB000005	SW LOCK CONNECTORS	[M]
SW5		CONNECTORS	
-	K0L1BB000005		[M]
SW5		CONNECTORS	
SW5	K1MN14A00049	CONNECTORS 14P FFC CONNECTOR	[M]
SW5 CN1 CN300	K1MN14A00049 RJU057G12	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR	[M]
CN1 CN300 CN301	K1MN14A00049 RJU057G12 RJU057G12	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR	[M] [M]
SW5 CN1 CN300 CN301 CN302	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR	[M] [M] [M]
CN1 CN300 CN301 CN302 CN303	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR	[M] [M] [M] [M]
CN1 CN300 CN301 CN302 CN303 CN304	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX	[M] [M] [M] [M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR	[M] [M] [M] [M] [M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR	[M] [M] [M] [M] [M] [M] [M] [M] [M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONNECTOR 7P PLUG IN CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONNECTOR 7P PLUG IN CONNECTOR 7P CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONNECTOR 7P PLUG IN CONNECTOR 7P CONNECTOR 8P BTB CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 7P CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 7P CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR 19P FFC CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 7P CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702 CN702 CN1303	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONNECTOR 7P PLUG IN CONNECTOR 7P CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR 19P FFC CONNECTOR 9P DECK TO MAIN WIRE	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN501 CN502 CN602 CN701 CN702 CN702 CN1303 CP503	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 7P CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR 19P FFC CONNECTOR 9P DECK TO MAIN WIRE	[M]
CN1 CN300 CN301 CN301 CN302 CN303 CN304 CN305 CN306 CN306 CN309 CN310 CN501 CN501 CN502 CN602 CN701 CN702 CN1303 CP503 CP503	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 7P PLUG IN CONNECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN501 CN502 CN701 CN702 CN702 CN702 CN702 CN702 CN701 CN702 CN702 CN702 CN703 CP503 CP504 CP520	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 11P CONNECTOR 11P CONNECTOR 14P CONNECTOR 14P CONNECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 10P CONNECTOR	[M]
CN1 CN300 CN301 CN301 CN302 CN303 CN304 CN305 CN306 CN306 CN309 CN310 CN501 CN501 CN502 CN602 CN701 CN702 CN1303 CP503 CP503	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 7P PLUG IN CONNECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN501 CN502 CN701 CN702 CN702 CN702 CN702 CN702 CN701 CN702 CN702 CN702 CN703 CP503 CP504 CP520	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 11P CONNECTOR 11P CONNECTOR 14P CONNECTOR 14P CONNECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 10P CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702 CN1303 CP503 CP504 CP520 CP600	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184 K1KA10A00114 K1MN30A00046	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 11P CONNECTOR 14P CONNECTOR 14P CONNECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 10P CONNECTOR 10P CONNECTOR 10P CONNECTOR 10P FFC CONNECTOR 10P FFC CONNECTOR 10P FFC CONNECTOR 10P CONNECTOR 10P FFC CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN501 CN502 CN602 CN701 CN702 CN1303 CP503 CP504 CP520 CP600 CP601	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184 K1KA10A00114 K1MN30A00046 K1MN30A00046	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 4P CONNECTOR 11P CONNECTOR 14P CONNECTOR 14P CONNECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 16P FFC CONNECTOR 19P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 10P CONNECTOR 10P CONNECTOR 10P CONNECTOR 10P FFC CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702 CN1303 CP503 CP504 CP520 CP600 CP601 CP602	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00068 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184 K1KA10A00114 K1MN30A00046 RJU066H08	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONNECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 10P FPC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 10P CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702 CN1303 CP503 CP503 CP504 CP520 CP600 CP601 CP602 CP1301	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184 K1KA10A00114 K1MN30A00046 RJU066H08 RJS1A6805-J	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 19P FFC CONNECTOR 10P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 10P CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 8P B-B SOCKET 5P CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702 CN702 CN701 CN702 CN702 CN1303	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184 K1KA10A00114 K1MN30A00046 RJU066H08 RJS1A6805-J	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 19P FFC CONNECTOR 10P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 10P CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 8P B-B SOCKET 5P CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702 CN1303 CP503 CP504 CP520 CP600 CP601 CP602 CP1301 CP1902	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184 K1KA10A00114 K1MN30A00046 RJU066H08 RJS1A6805-J RJT071K09A	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 10P CONNECTOR 10P CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 8P B-B SOCKET 5P CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702 CN1303 CP503 CP504 CP520 CP600 CP601 CP602 CP1301 CP1902	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184 K1KA10A00114 K1MN30A00046 RJU066H08 RJS1A6805-J RJT071K09A	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 8P B-B SOCKET 5P CONNECTOR 8P B-B SOCKET 5P CONNECTOR CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702 CN1303 CP503 CP504 CP520 CP600 CP601 CP602 CP1301 CP1902	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184 K1KA10A00114 K1MN30A00046 RJU066H08 RJS1A6805-J RJT071K09A	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 9P MOLEX CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 19P FC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 10P CONNECTOR 10P CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 8P B-B SOCKET 5P CONNECTOR	[M]
CN1 CN300 CN301 CN302 CN303 CN304 CN305 CN306 CN309 CN310 CN501 CN502 CN602 CN701 CN702 CN702 CN701 CN702 CN1303 CP503 CP504 CP520 CP600 CP601 CP602 CP1301 CP1902	K1MN14A00049 RJU057G12 RJU057G12 K1MN30A00046 K1MN30A00046 RJS1A5209 K1KA02A00008 RJT100W11 RJS1A9414-1 RJS1A9414-1 RJS1A9419-1 K1KA07A00060 K1KA07A00058 RJT066H08G RJS2A8616 RJS1A6719-1Q K1MP10B00002 K1KA12A00184 K1KA12A00184 K1KA12A00184 K1KA10A00114 K1MN30A00046 RJU066H08 RJS1A6805-J RJT071K09A	CONNECTORS 14P FFC CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 11P CONNECTOR 14P CONNECTOR 19P CONECTOR 7P PLUG IN CONNECTOR 8P BTB CONNECTOR 19P FFC CONNECTOR 19P FFC CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 12P P2 MQ CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 30P FFC CONNECTOR 8P B-B SOCKET 5P CONNECTOR 8P B-B SOCKET 5P CONNECTOR CONNECTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
L301	RLBV252AV-Y	LINE COIL	[M]
L602	G0C101JA0030	INDUCTOR	[M]
L603	G0C3R3JA0030	COIL	[M]
7800	RLBN102V-Y	CHIP INDUCTOR	[M]
1801	RLQZB470KT-D	RF CHOKE COIL	[M]
1802	RLQZ150M-0	COIL	[M]
1803	RLBV252AV-Y	LINE COIL	[M]
L804	RLBV252AV-Y	LINE COIL	[M]
1901	G0C101JA0030	INDUCTOR	[M]
1902	G0C101JA0030	INDUCTOR	[M]
1903	G0C100JA0030	INDUCTOR	[M]
L904	RLBV252AV-Y	COIL	[M]
L905	RLBV252AV-Y	COIL	[M]
1301	7L1A62N	BIAS OSC COIL	[M]
L1302	G0C470JA0030	RF CHOKE COIL	[M]
			1
r501	ETP76VMT21SA	MAIN TRANSFORMER	[M] PC A
r501	ETP76VQT21NA	MAIN TRANSFORMER	[M] P A
r502	G4C2AAJ00001	BACK UP TRANSFORMER	[M] A
1502	G4C2AAJ00001	BACK UP TRANSFORMER	[MJ ZX
		COMPONENT COMPTANT	+
		COMPONENT COMBINATION	+
7507			Fact A
2501	ERZV10V511CS	ZENER	[M] <u>A</u>
2900	B3RAB0000016	REMOTE SENSOR	[M]
		RELAY	1
			1
RAL301	RAN0004MM-2	TUNER PACK	[M]
			1
		RELAY	
RL502	RSY0040M-0	PRIMARY RELAY	[M] <u></u>
		OSCILLATORS	
X600	RSXD32K7S02	CRYSTAL OSCILLATOR	[M]
K601	RSXZ4M19B01T	CRYSTAL OSCILLATOR	[M]
K701	RSXZ16M9M01T	CERAMIC OSCILLATOR	[M]
X801	AF245766CD	CRYSTAL OSCILLATOR	[M]
		DISPLAY TUBE	
FL600	A2BD00000051	FL	[M]
. 1000	AZDDOOOOOSI		Lazi
		PILORO	
		FUSES	
			PP A
F1	K5D312AQ0003	PRIMARY FUSE 3.15A	[M] <u>A</u>
			-
		FUSE HOLDERS	
			1
FC501	EYF52BC	FUSE HOLDER	[M]
FC502	EYF52BC	FUSE HOLDER	[M]
		FUSE PROTECTOR	
FP583	K5G402AA0002	FUSE PROTECTOR	[M] <u>^</u>
FP584	K5G102AA0002	FUSE PROTECTOR	[M] A
		HOLDERS	
H502	K1YF07000003	7P WIRE HOLDER	[M]
H521	RJS1A5510	WIRE HOLDER	[M]
1600	RMR0316	7P CABLE HOLDER	[M]
1601	RMR0319	10P CABLE HOLDER	[M]
H602A	RMR0313	4P CABLE HOLDER	[M]
H602B	RMR0313	4P CABLE HOLDER	[M]
H603A	RMR0315		
		6P CABLE HOLDER	[M]
H603B	RMR0315	6P CABLE HOLDER	[M]
H1304	RMR0318	9P CABLE HOLDER	[M]
			1
		JACKS	
			1
		TTE 4 DIN DON	I Frei
JK305 JK306	RJH2405L	JK 4 PIN RCA	[M]

	1	J.	KOUUP / SA-A
Ref. No.	Part No.	Part Name & Description	Remarks
JK500	K2AB2B000002	JK AC INLET	[M] A
JK501	RJR0054M-J	JK SPEAKER	[M]
JK502	RJR0054M-J	JK SPEAKER	[M]
JK503	RJH5603-9	JK SPEAKER	[M]
JK801	B3ZAZ0000012	JK OPTICAL INPUT	[M]
JK803	RJH2110N-1	JK SUB-WOOFER	[M]
JK901	RJJ37TK07-X	JK HP/MIC	[M]
		EARTH TERMINAL	
E500	SNE1004-2	EARTH TERMINAL	[M]
E501	SNE1004-2	EARTH TERMINAL	[M]
		WIRES	
W1	REEXO059	WIRE (BLUE)	[M]
W1	REZ1023-1	4P WIRE	[M]
W2	REEXO060	WIRE (RED)	[M]
W2	REZ1024	3P WIRE	[M]
W500	REX1076	WIRE (INLET TO PT)	[M]
W502	REXX0277-1	WIRE (TRANS-POWER)	[M]
W521	REX1073	WIRE (POWER-SPEAKER)	[M]
W601	RWJ6510110XX	10P WIRE	[M]
W602	REXX0276	WIRE (TRANS-PANEL)	[M]
W603	RWJ1104215XX	WIRE	[M]
W605	RWJ1106100XX	WIRE (BABY PT-MAIN)	[M]
W1304	RWJ1109085XX	9P FLAT WIRE	[M]
W1903	RWJ0102050CK	MAIN-MECHA MOTOR	[M]
		101011	13
		RESISTORS	
		NADIDIOND	
R1	ERDS2TJ102T	1K 1/4W	[M]
R201		12K 1/16W	
	ERJ3GEYJ123V		[M]
R202	D0GB302JA008	3K 1/16W	[M]
R203	ERJ3GEYJ102V	1K 1/16W	[M]
R204	ERJ3GEYJ473V	47K 1/16W	[M]
R205	ERJ3GEYJ102V	1K 1/16W	[M]
R206	ERJ3GEYJ473V	47K 1/16W	[M]
R207	D0GB152JA002	1.5K 1/16W	[M]
R208	D0GB562JA002	5.6K 1/16W	[M]
R209	D0GB333JA002	33K 1/16W	[M]
R210	ERJ3GEYJ822V	8.2K 1/16W	[M]
R211	ERJ3GEY0R00V	0 1/16W	[M]
R212	D0GB302JA008	3K 1/16W	[M]
R213	ERJ3GEYJ123V	12K 1/16W	[M]
R215	ERJ3GEYJ104V	100K 1/16W	[M]
R216	ERJ3GEYJ104V	100K 1/16W	[M]
R217	ERJ3GEY0R00V	0 1/16W	[M]
R218	ERJ3GEYJ102V	1K 1/16W	[M]
R219	D0GB332JA002	3.3K 1/16W	[M]
R220	D0GB562JA002	5.6K 1/16W	[M]
R221	D0GB272JA002	2.7K 1/16W	[M]
R222	ERJ3GEYJ472V	4.7K 1/16W	[M]
R223	ERJ3GEYJ473V	47K 1/16W	[M]
R224	D0GB122JA019	1.2K 1/16W	[M]
R225	ERJ3GEYJ224V	220K 1/16W	[M]
R226	ERJ3GEYJ222V	2.2K 1/16W	[M]
R227	ERJ3GEYJ472V	4.7K 1/16W	[M]
R228	ERJ3GEYJ104V	100K 1/16W	[M]
R229	ERJ3GEYJ102V	1K 1/16W	[M]
R230	ERJ3GEYJ123V	12K 1/16W	[M]
R231	ERJ3GEYJ102V	1K 1/16W	[M]
R232	ERJ3GEYJ104V	100K 1/16W	[M]
R233	D0GB152JA002	1.5K 1/16W	[M]
R234	D0GB101JA002	100 1/16W	[M]
R235	DOGB101JA002	100 1/16W	[M]
R236	D0GB101JA002	100 1/16W	[M]
R237	DOGBIOIJA002	100 1/16W	[M]
R238	D0GB683JA002	68K 1/16W	[M]
R239	D0GB333JA002	33K 1/16W	[M]
R240	ERJ3GEYJ222V	2.2K 1/16W	[M]
R241	D0GB334JA002	330K 1/16W	[M]
R241 R242	D0GB3343A002 D0GB680JA019	68 1/16W	[M]
		· .	
R243	ERJ3GEYJ823V	82K 1/16W	[M]

	OPC		
Ref. No.	Part No.	Part Name & Description	Remarks
R244	ERJ3GEY0R00V	0 1/16W	[M]
R245	D0GB101JA002	100 1/16W	[M]
R246	D0GB101JA002	100 1/16W	[M]
R247	D0GB334JA002	330K 1/16W	[M]
R248	ERJ3GEYJ222V	2.2K 1/16W	[M]
R249	D0GB152JA002	1.5K 1/16W	[M]
R250	D0GB332JA002	3.3K 1/16W	[M]
R251	ERJ3GEYJ104V ERJ3GEYJ823V	100K 1/16W	[M]
R252 R253	D0GB101JA002	82K 1/16W 100 1/16W	[M]
R254	ERJ3GEY0R00V	0 1/16W	[M]
R255	D0GB333JA002	33K 1/16W	[M]
R256	D0GB683JA002	68K 1/16W	[M]
R257	ERJ3GEYJ102V	1K 1/16W	[M]
R258	D0GB152JA002	1.5K 1/16W	[M]
R259	D0GB152JA002	1.5K 1/16W	[M]
R260	ERJ3GEYJ104V	100K 1/16W	[M]
R261	D0GB152JA002	1.5K 1/16W	[M]
R262	ERJ3GEYJ822V	8.2K 1/16W	[M]
R270	D0GB393JA002	39K 1/16W	[M]
R271	ERJ3GEYJ153V	15K 1/16W	[M]
R272	D0GB272JA002	2.7K 1/16W	[M]
R273	ERJ3GEYJ103V ERJ3GEYJ103V	10K 1/16W	[M]
R274 R275	ERJ3GEYJ103V ERJ3GEYJ822V	10K 1/16W 8.2K 1/16W	[M]
R275	D0GB563JA002	56K 1/16W	[M]
R300	ERJ3GEY0R00V	0 1/16W	[M]
R301	ERJ3GEYJ123V	12K 1/16W	[M]
R302	ERJ3GEYJ472V	4.7K 1/16W	[M]
R303	ERJ3GEYJ103V	10K 1/16W	[M]
R304	ERJ3GEYJ222V	2.2K 1/16W	[M]
R305	ERJ3GEYJ222V	2.2K 1/16W	[M]
R306	ERJ3GEYJ681V	680 1/16W	[M]
R307	ERJ3GEYJ473V	47K 1/16W	[M]
R308	ERJ3GEYJ473V	47K 1/16W	[M]
R309	ERJ3GEYJ223V	22K 1/16W	[M]
R310	ERJ3GEYJ123V ERJ3GEYJ103V	12K 1/16W	[M]
R311 R312	ERJ3GEYJ221V	10K 1/16W 220 1/16W	[M]
R313	ERJ3GEYJ223V	22K 1/16W	[M]
R314	ERJ3GEYJ123V	12K 1/16W	[M]
R315	ERJ3GEYJ103V	10K 1/16W	[M]
R316	ERJ3GEYJ103V	10K 1/16W	[M]
R317	ERJ3GEYJ102V	1K 1/16W	[M]
R318	D0GB101JA002	100 1/16W	[M]
R319	D0GB101JA002	100 1/16W	[M]
R320	D0GB101JA002	100 1/16W	[M]
R321	ERJ3GEYJ104V	100K 1/16W	[M]
R322	ERJ3GEYJ104V	100K 1/16W	[M]
R323	ERJ3GEYJ104V	100K 1/16W	[M]
R324 R325	D0GB562JA002 D0GB562JA002	5.6K 1/16W	[M]
R325 R326	D0GB562JA002	5.6K 1/16W 5.6K 1/16W	[M]
R327	D0GB562JA002	5.6K 1/16W	[M]
R328	ERJ3GEYJ472V	4.7K 1/16W	[M]
R329	ERJ3GEYJ103V	10K 1/16W	[M]
R330	ERJ3GEYJ103V	10K 1/16W	[M]
R331	ERJ3GEYJ103V	10K 1/16W	[M]
R332	ERJ3GEYJ103V	10K 1/16W	[M]
R333	ERJ3GEYJ103V	10K 1/16W	[M]
R334	ERJ3GEYJ103V	10K 1/16W	[M]
R335	ERJ3GEYJ103V	10K 1/16W	[M]
R336	ERJ3GEYJ102V	1K 1/16W	[M]
R337	DOGB273JA002	27K 1/16W	[M]
R338 R339	DOGB563JA002	2.2K 1/16W 56K 1/16W	[M]
R340	D0GB363JA002 D0GB273JA002	27K 1/16W	[M]
R341	D0GB563JA002	56K 1/16W	[M]
R342	D0GB393JA002	39K 1/16W	[M]
R343	ERJ3GEYJ153V	15K 1/16W	[M]
R344	ERJ3GEYJ103V	10K 1/16W	[M]
	ERJ3GEYJ223V	22K 1/16W	[M]
R345			
R345 R346	ERDS1FVJ270T	27 1/2W	[M]

Ref.	No.	Part No.	Part Name & Description	Remarks
R348	110.	D0GB333JA002	33K 1/16W	[M]
R349		D0GB105JA002	1M 1/16W	[M]
R350		ERJ3GEYJ123V	12K 1/16W	[M]
R351		D0GB562JA002	5.6K 1/16W	[M]
R352		D0GB563JA002	56K 1/16W	[M]
R353		D0GB563JA002	56K 1/16W	[M]
R354		D0GB183JA002	18K 1/16W	[M]
R355 R356		ERJ3GEYJ104V D0GB683JA002	100K 1/16W 68K 1/16W	[M]
R357		ERJ3GEYJ104V	100K 1/16W	[M]
R358		D0GB563JA002	56K 1/16W	[M]
R359		ERJ3GEYJ824V	820K 1/16W	[M]
R360		ERJ3GEYJ223V	22K 1/16W	[M]
R361		D0GB563JA002	56K 1/16W	[M]
R362		ERJ3GEYJ153V	15K 1/16W	[M]
R363		D0GB334JA002	330K 1/16W	[M]
R364 R365		ERJ3GEYJ823V ERJ3GEYJ222V	82K 1/16W 2.2K 1/16W	[M]
R366		D0GB680JA019	68 1/16W	[M]
R367		ERJ3GEY0R00V	0 1/16W	[M]
R368		ERJ3GEY0R00V	0 1/16W	[M]
R369		ERJ3GEY0R00V	0 1/16W	[M]
R370		ERJ3GEYJ104V	100K 1/16W	[M]
R371		ERJ3GEYJ103V	10K 1/16W	[M]
R372		ERJ3GEYJ472V	4.7K 1/16W	[M]
R373		ERJ3GEYJ225V	2.2M 1/16W	[M]
R374		ERJ3GEYJ472V	4.7K 1/16W	[M]
R375 R376		DOGB332JA002 ERJ3GEYJ104V	3.3K 1/16W 100K 1/16W	[M]
R377		ERJ3GEYJ103V	10K 1/16W	[M]
R378		ERDS1FVJ220T	22 1/2W	[M]
R379		ERJ3GEYJ224V	220K 1/16W	[M]
R380		D0GB101JA002	100 1/16W	[M]
R381		ERJ3GEYJ104V	100K 1/16W	[M]
R382		ERJ3GEY0R00V	0 1/16W	[M]
R383		ERJ3GEYJ102V	1K 1/16W	[M]
R384 R386		ERJ3GEYJ103V ERJ3GEY0R00V	10K 1/16W 0 1/16W	[M]
R387		ERJ3GEY0R00V	0 1/16W	[M]
R388		ERJ3GEYJ102V	1K 1/16W	[M]
R389		ERJ3GEYJ103V	10K 1/16W	[M]
R390		ERJ3GEY0R00V	0 1/16W	[M]
R391		D0GB562JA002	5.6K 1/16W	[M]
R392		ERJ3GEYJ123V	12K 1/16W	[M]
R393 R394		ERJ3GEYJ104V D0GB273JA002	100K 1/16W	[M]
R395		D0GB2730A002	27K 1/16W 56K 1/16W	[M]
R396		D0GB3030A002	1.5K 1/16W	[M]
R397		ERJ3GEYJ104V	100K 1/16W	[M]
R399		ERJ3GEYJ221V	220 1/16W	[M]
R401		ERJ3GEYJ123V	12K 1/16W	[M]
R402		D0GB302JA008	3K 1/16W	[M]
R403		ERJ3GEYJ102V	1K 1/16W	[M]
R404		ERJ3GEYJ473V	47K 1/16W	[M]
R405		ERJ3GEYJ102V	1K 1/16W	[M]
R406 R407		DOGB152JA002	47K 1/16W 1.5K 1/16W	[M]
R407		D0GB152JA002 D0GB562JA002	56K 1/16W	[M]
R409		D0GB382UA002	33K 1/16W	[M]
R410		ERJ3GEYJ822V	8.2K 1/16W	[M]
R411		ERJ3GEY0R00V	0 1/16W	[M]
R412		D0GB302JA008	3K 1/16W	[M]
R413		ERJ3GEYJ123V	12K 1/16W	[M]
R415		ERJ3GEYJ104V	100K 1/16W	[M]
R416		ERJ3GEYJ104V	100K 1/16W	[M]
R417		ERJ3GEY0R00V	0 1/16W	[M]
R418 R419		ERJ3GEYJ102V D0GB332JA002	1K 1/16W 3.3K 1/16W	[M]
R419		D0GB332JA002 D0GB562JA002	5.6K 1/16W	[M]
R421		D0GB272JA002	2.7K 1/16W	[M]
R422		ERJ3GEYJ472V	4.7K 1/16W	[M]
R423		ERJ3GEYJ473V	47K 1/16W	[M]
R424		D0GB122JA019	1.2K 1/16W	[M]
R425		ERJ3GEYJ224V	220K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R426	ERJ3GEYJ222V	2.2K 1/16W	[M]
R427	ERJ3GEYJ472V	4.7K 1/16W	[M]
R428	ERJ3GEYJ104V	100K 1/16W	[M]
R429	ERJ3GEYJ102V	1K 1/16W	[M]
R430	ERJ3GEYJ123V	12K 1/16W	[M]
R431	ERJ3GEYJ102V	1K 1/16W	[M]
R432	ERJ3GEYJ104V	100K 1/16W	[M]
R433	D0GB152JA002	1.5K 1/16W	[M]
R434	D0GB101JA002	100 1/16W	[M]
R435	D0GB101JA002	100 1/16W	[M]
R436	D0GB101JA002	100 1/16W	[M]
R437	D0GB101JA002	100 1/16W	[M]
R438	D0GB683JA002	68K 1/16W	[M]
R439	D0GB333JA002	33K 1/16W	[M]
R440	ERJ3GEYJ222V	2.2K 1/16W	[M]
R441	D0GB334JA002	330K 1/16W	[M]
R442	D0GB680JA019	68 1/16W	[M]
R443	ERJ3GEYJ823V	82K 1/16W	[M]
R444	ERJ3GEY0R00V	0 1/16W	[M]
R445	ERJ3GEYJ153V	15K 1/16W	[M]
R446	ERJ3GEYJ153V	· ·	[M]
R445 R447	D0GB334JA002	15K 1/16W 330K 1/16W	[M]
R447	ERJ3GEYJ222V		
		2.2K 1/16W	[M]
R449	D0GB152JA002	1.5K 1/16W	[M]
R450	D0GB332JA002	3.3K 1/16W	[M]
R451	ERJ3GEYJ104V	100K 1/16W	[M]
R452	ERJ3GEYJ823V	82K 1/16W	[M]
R453	DOGB101JA002	100 1/16W	[M]
R454	ERJ3GEY0R00V	0 1/16W	[M]
R455	D0GB333JA002	33K 1/16W	[M]
R456	D0GB683JA002	68K 1/16W	[M]
R457	ERJ3GEYJ102V	1K 1/16W	[M]
R458	D0GB152JA002	1.5K 1/16W	[M]
R459	D0GB152JA002	1.5K 1/16W	[M]
R460	ERJ3GEYJ104V	100K 1/16W	[M]
R461	DOGB152JA002	1.5K 1/16W	[M]
R462	ERJ3GEYJ822V	8.2K 1/16W	[M]
R470	D0GB393JA002	39K 1/16W	[M]
R471	ERJ3GEYJ153V	15K 1/16W	[M]
R472	D0GB272JA002	2.7K 1/16W	[M]
R473	ERJ3GEYJ103V	10K 1/16W	[M]
R474	ERJ3GEYJ103V	10K 1/16W	[M]
R475	ERJ3GEYJ822V	8.2K 1/16W	[M]
R490	D0GB563JA002	56K 1/16W	[M]
R501	ERDS2TJ222T	2.2K 1/4W	[M]
R502	ERDS2TJ222T	2.2K 1/4W	[M]
R503	ERDS2TJ472T	4.7K 1/4W	[M]
R504	ERDS2TJ472T	4.7K 1/4W	[M]
R505	ERDS2TJ153T	15K 1/4W	[M]
R506	ERDS2TJ153T	15K 1/4W	[M]
R507	ERDS2TJ392T	3.9K 1/4W	[M]
R508	ERDS2TJ392T	3.9K 1/4W	[M]
R509	ERDS2TJ392T	3.9K 1/4W	[M]
R510	ERDS2TJ392T	3.9K 1/4W	[M]
R512	ERDS2TJ224T	220K 1/4W	[M]
R513	ERDS2TJ104T	100K 1/4W	[M]
R514	ERDS2TJ104T	100K 1/4W	[M]
R515	ERDS2TJ563T	56K 1/4W	[M]
R516	ERDS2TJ563T	56K 1/4W	[M]
R517	ERDS2TJ563T	56K 1/4W	[M]
R518	ERDS2TJ563T	56K 1/4W	[M]
R520	ERDS2TJ104T	100K 1/4W	[M]
R521	ERDS2TJ103T	10K 1/4W	[M]
R522	ERDS2TJ273T	27K 1/4W	[M]
R523	ERDS2TJ104T	100K 1/4W	[M]
R524	ERDS2TJ394T	390K 1/4W	[M]
R525	ERDS2TJ154T	150K 1/4W	[M]
R526	ERDS2TJ124T	120K 1/4W	[M]
R527	ERDS2TJ184T	180K 1/4W	[M]
1-1-4	ERDS2TJ184T	68K 1/4W	[M]
R528	-WD5100031	56K 1/4W	[M]
R528	足りひらうか.すらそうか		
R530	ERDS2TJ563T		
R530 R531	ERDS2TJ392T	3.9K 1/4W	[M]
R530			

Dof No	David Ma	Doub Name & Denguinties	Damasalan
Ref. No.	Part No.	Part Name & Description	Remarks
R534	ERDS2TJ334T	330K 1/4W	[M]
R537	ERDS1FVJ100T	10 1/2W	[M]
R538	ERDS1FVJ100T	10 1/2W	[M]
R538	ERDS2TJ273T	27K 1/4W	[M]
R539	ERDS1FVJ100T	10 1/2W	[M]
R540	ERDS1FVJ100T	10 1/2W	[M]
R541	ERDS1FVJ100T	10 1/2W	[M]
R542	ERDS1FVJ100T	10 1/2W	[M]
R569	ERDS2TJ123T	12K 1/4W	[M]
R570	ERDS1FVJ180T	18 1/2W	[M]
R570	ERDS1FVJ331T	330 1/2W	[M]
R571	ERDS1FVJ180T	18 1/2W	[M]
R571	ERDS1FVJ331T	330 1/2W	[M]
R572	ERDS1FVJ220T	22 1/2W	[M]
R572	ERDS1FVJ331T	330 1/2W	[M]
R573	ERDS2TJ151T	150 1/4W	[M]
R573	ERDS2TJ223T	22K 1/4W	[M]
R574	ERDS2TJ103T	10K 1/4W	[M]
R574	ERDS2TJ821T	820 1/4W	[M]
R575	ERDS2TJ103T	10K 1/4W	[M]
R576	ERDS2TJ103T	10K 1/4W	[M]
R577	ERDS2TJ103T	10K 1/4W	[M]
R578	ERDS2TJ332T	3.3K 1/4W	[M]
R579	ERDS1FVJ2R2T	2.2 1/2W	[M]
R580	ERDS2TJ151T	150 1/4W	[M]
R581	ERDS2TJ472T	4.7K 1/4W	[M]
R582	ERDS1FVJ2R2T	2.2 1/2W	[M]
R583	ERD2FCVJ4R7T	4.7 1/4W	[M]
R590	ERC12UGK335D	3.3M 1/2W	[M]
R594	ERDS2TJ152T	1.5K 1/4W	[M]
R595	ERDS2TJ152T	1.5K 1/4W	[M]
R596	ERDS2TJ471T	470 1/4W	[M]
R602	ERJ3GEYJ182V	1.8K 1/16W	[M]
R603	D0GB122JA019	1.2K 1/16W	[M]
R604	ERJ3GEYJ102V	1K 1/16W	[M]
R605	ERJ3GEYJ102V	1K 1/16W	[M]
R606	ERJ3GEYJ102V	1K 1/16W	[M]
R607	ERJ3GEYJ472V	4.7K 1/16W	[M]
R608	D0GB101JA002	100 1/16W	[M]
R609	D0GB101JA002	100 1/16W	[M]
R610	ERJ3GEYJ473V	47K 1/16W	[M]
R611	ERJ3GEYJ103V	10K 1/16W	[M]
R612	ERJ3GEYJ103V	10K 1/16W	[M]
R613	ERJ3GEYJ473V	47K 1/16W	[M]
R614	D0GB101JA002	100 1/16W	[M]
R615	ERJ3GEYJ102V	1K 1/16W	[M]
R616	ERJ3GEYJ102V	1K 1/16W	[M]
R617	D0GB271JA002	270 1/16W	[M]
R618	D0GB271JA002	270 1/16W	[M]
R619	D0GB151JA008	150 1/16W	[M]
R620	D0GB121JA002	120 1/16W	[M]
R621	D0GB152JA002	1.5K 1/16W	[M]
R622	ERJ3GEYJ223V	22K 1/16W	[M]
R623	ERJ3GEYJ223V	22K 1/16W	[M]
R624	ERJ3GEYJ223V	22K 1/16W	[M]
R625	ERJ3GEYJ472V	4.7K 1/16W	[M]
R626	D0GB101JA002	100 1/16W	[M]
R627	D0GB101JA002	100 1/16W	[M]
R628	D0GB101JA002	100 1/16W	[M]
R629	D0GB106JA008	10M 1/16W	[M]
R630	D0GB334JA002	330K 1/16W	[M]
R631	ERJ3GEYJ681V	680 1/16W	[M]
R632	ERJ3GEYJ472V	4.7K 1/16W	[M]
R633	ERJ3GEYJ472V	4.7K 1/16W	[M]
R634	ERJ3GEYJ102V	1K 1/16W	[M]
R635	ERJ3GEYJ223V	22K 1/16W	[M]
R636	ERJ3GEYJ102V	1K 1/16W	[M]
R637	ERJ3GEYJ102V	1K 1/16W	[M]
R638	D0GB474JA002	470K 1/16W	[M]
R639	ERJ3GEYJ472V	4.7K 1/16W	[M]
R640	D0GB680JA019	68 1/16W	[M]
R641	D0GB680JA019	68 1/16W	[M]
R642	ERJ3GEYJ102V	1K 1/16W	[M]
R643	D0GB101JA002	100 1/16W	[M]

00P / SA-AK60	OPC		
Ref. No.	Part No.	Part Name & Description	Remarks
R644	D0GB101JA002	100 1/16W	[M]
R645	D0GB101JA002	100 1/16W	[M]
R646	ERJ3GEYJ103V	10K 1/16W	[M]
R647	ERJ3GEYJ473V	47K 1/16W	[M]
R648	ERJ3GEYJ681V	680 1/16W	[M]
R649	DOGBIOIJA002	100 1/16W	[M]
R650	D0GB562JA002	5.6K 1/16W	[M]
R651	D0GB101JA002	100 1/16W	[M]
R652 R653	D0GB101JA002 D0GB101JA002	100 1/16W 100 1/16W	[M]
R654	D0GB101JA002	100 1/16W	[M]
R655	ERJ3GEYJ104V	100K 1/16W	[M]
R656	ERJ3GEYJ471V	470 1/16W	[M]
R657	ERJ3GEYJ223V	22K 1/16W	[M]
R658	ERJ3GEYJ103V	10K 1/16W	[M]
R659	ERJ3GEYJ103V	10K 1/16W	[M]
R660	ERJ3GEY0R00V	0 1/16W	[M]
R661	D0GB101JA002	100 1/16W	[M]
R662	ERJ3GEYJ102V	1K 1/16W	[M]
R663	ERJ3GEYJ102V	1K 1/16W	[M]
R664	ERJ3GEYJ102V	1K 1/16W	[M]
R665	ERJ3GEYJ102V	1K 1/16W	[M]
R666	ERJ3GEYJ102V	1K 1/16W	[M]
R667	ERJ3GEYJ102V	1K 1/16W	[M]
R668	ERJ3GEYJ472V	4.7K 1/16W	[M]
R669	ERJ3GEYJ472V	4.7K 1/16W	[M]
R670 R671	ERJ3GEYJ472V ERJ3GEYJ472V	4.7K 1/16W 4.7K 1/16W	[M]
R672	ERJ3GEYJ102V	1K 1/16W	[M]
R673	ERJ3GEYJ104V	100K 1/16W	[M]
R674	ERJ3GEYJ223V	22K 1/16W	[M]
R675	D0GB151JA008	150 1/16W	[M]
R676	ERJ3GEYJ102V	1K 1/16W	[M]
R677	ERJ3GEYJ473V	47K 1/16W	[M]
R678	ERJ3GEYJ472V	4.7K 1/16W	[M]
R679	ERJ3GEYJ103V	10K 1/16W	[M]
R680	ERJ3GEYJ682V	6.8K 1/16W	[M]
R681	ERJ3GEYJ102V	1K 1/16W	[M]
R682	ERJ3GEYJ102V	1K 1/16W	[M]
R683	D0GB101JA002	100 1/16W	[M]
R684	ERJ3GEYJ104V	100K 1/16W	[M]
R685	ERJ3GEYJ104V	100K 1/16W	[M]
R686	ERJ3GEYJ104V	100K 1/16W	[M]
R687	ERJ3GEYJ104V	100K 1/16W	[M]
R688	ERJ3GEYJ104V ERJ3GEYJ104V	100K 1/16W	[M]
R689 R690	ERJ3GEYJ104V	100K 1/16W 100K 1/16W	[M]
R691	ERJ3GEYJ104V	100K 1/16W	[M]
R692	ERJ3GEYJ104V	100K 1/16W	[M]
R693	ERJ3GEYJ102V	1K 1/16W	[M]
R694	D0GB101JA002	100 1/16W	[M]
R697	D0GB101JA002	100 1/16W	[M]
R698	D0GB101JA002	100 1/16W	[M]
R699	D0GB101JA002	100 1/16W	[M]
R701	D0GB4R7JA008	4.7 1/16W	[M]
R702	ERJ3GEYJ103V	10K 1/16W	[M]
R704	ERJ3GEYJ102V	1K 1/16W	[M]
R705	D0GB154JA002	150K 1/16W	[M]
R706	ERJ3GEYJ102V	1K 1/16W	[M]
R707	D0GB393JA002	39K 1/16W	[M]
R708	ERJ3GEYJ223V	22K 1/16W	[M]
R709	ERJ3GEYJ473V	47K 1/16W	[M]
R711	ERJ3GEYJ823V	82K 1/16W	[M]
R712 R714	ERJ3GEYJ221V ERJ3GEY0R00V	220 1/16W 0 1/16W	[M]
R715	ERJ3GEYJ102V	1K 1/16W	[M]
R717	ERJ3GEYJ102V	1K 1/16W	[M]
R718	ERJ3GEYJ102V	1K 1/16W	[M]
R721	D0GB101JA002	100 1/16W	[M]
R723	ERJ3GEYJ682V	6.8K 1/16W	[M]
R724	ERJ6GEYJ183V	18K 1/10W	[M]
R725	ERJ3GEYJ391V	390 1/16W	[M]
R727	D0GB392JA002	3.9K 1/16W	[M]
R728	D0GB392JA002	3.9K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R729	D0GB392JA002	3.9K 1/16W	[M]
R731	ERJ6GEYJ682V	6.8K 1/10W	[M]
R735	ERJ6GEYJ101V	100 1/10W	[M]
R736	D0GB101JA002	100 1/16W	[M]
R741	ERJ3GEYJ473V	47K 1/16W	[M]
R742	ERJ6GEYJ224V	220K 1/10W	[M]
R744	D0GB124JA002	120K 1/16W	[M]
R749	ERJ3GEYJ472V	4.7K 1/16W	[M]
R750	ERJ6GEYJ4R7V	4.7 1/10W	[M]
R753	DOGB100JA002	10 1/16W	[M]
R801	ERJ3GEYJ472V	4.7K 1/16W	[M]
R802	D0GB183JA002	18K 1/16W	[M]
R803	D0GB105JA002	1M 1/16W	[M]
R804	ERJ3GEYJ104V	100K 1/16W	[M]
R805	ERJ3GEYJ221V	220 1/16W	[M]
R806	ERJ3GEYJ472V	4.7K 1/16W	[M]
R807	ERJ3GEYJ103V	10K 1/16W	[M]
R808	ERJ3GEYJ103V	10K 1/16W	[M]
R809	DOGB122JA019	1.2K 1/16W	[M]
R810	D0GB333JA002	33K 1/16W	[M]
R811	D0GB392JA002	3.9K 1/16W	[M]
R812	D0GB122JA019	1.2K 1/16W	[M]
R813	D0GB333JA002	33K 1/16W	[M]
R814	D0GB392JA002	3.9K 1/16W	[M]
R815	ERJ3GEYJ472V	4.7K 1/16W	[M]
R816	ERJ3GEYJ472V	4.7K 1/16W	[M]
R817	DOGB1R0JA002	1 1/16W	[M]
R818	ERJ3GEYJ223V	22K 1/16W	[M]
R819	DOGB1R0JA002	1 1/16W	[M]
R820	ERDS1FVJ470T	47 1/2W	[M]
R821	ERDS1FVJ470T	47 1/2W	[M]
R822	D0GB151JA008	150 1/16W	[M]
R823	ERJ3GEYJ223V	22K 1/16W	[M]
R824	ERJ3GEYJ102V	1K 1/16W	[M]
R825	ERJ3GEY0R00V	0 1/16W	[M]
R826	ERJ3GEY0R00V	0 1/16W	[M]
R827	ERJ3GEY0R00V	0 1/16W	[M]
R828	ERJ3GEY0R00V	0 1/16W	[M]
R829	ERJ3GEYJ222V	2.2K 1/16W	[M]
R830	ERJ3GEYJ472V	4.7K 1/16W	[M]
R831	ERJ3GEYJ472V	4.7K 1/16W	[M]
R832	ERJ3GEYJ123V	12K 1/16W	[M]
R833	ERJ3GEYJ102V	1K 1/16W	[M]
R834	D0GB105JA002	1M 1/16W	[M]
R835	ERJ3GEYJ102V	1K 1/16W	[M]
R836	ERJ3GEYJ102V	1K 1/16W	[M]
R837	ERJ3GEYJ153V	15K 1/16W	[M]
R838	ERJ3GEYJ103V	10K 1/16W	[M]
R839	ERJ3GEYJ472V	4.7K 1/16W	[M]
R840	ERJ3GEYJ103V	10K 1/16W	[M]
R841	DOGB101JA002	100 1/16W	[M]
R842	ERJ3GEYJ102V	1K 1/16W	[M]
R843	ERJ3GEYJ221V	220 1/16W	[M]
R844	ERJ3GEYJ472V	4.7K 1/16W	[M]
R845	ERJ3GEYJ123V	12K 1/16W	[M]
R846	ERJ3GEY0R00V ERJ3GEY0R00V	0 1/16W	[M]
R847		0 1/16W	[M]
R848	ERJ3GEY0R00V	0 1/16W	[M]
R849	ERJ3GEY0R00V	0 1/16W	[M]
R851	ERJ3GEYJ223V	22K 1/16W	[M]
R852 R853	ERJ3GEY0R00V ERJ3GEY0R00V	0 1/16W 0 1/16W	[M]
R854	ERJ3GEYJ221V	220 1/16W	[M]
R855	ERJ3GEYJ123V	12K 1/16W	[M]
R856	ERJ3GEYJ123V	12K 1/16W	[M]
R857	ERJ3GEYJ221V	220 1/16W	[M]
R858	ERJ3GEYJ221V ERJ3GEYJ221V		[M]
R859	ERJ3GEYJ221V	220 1/16W 220 1/16W	[M]
R860	ERJ3GEYJ221V	220 1/16W	[M]
R861	ERJ3GEYJ221V	220 1/16W	[M]
R862	D0GB100JA002	10 1/16W	[M]
R863	ERJ3GEYJ391V	390 1/16W	[M]
R864	ERJ3GEYJ222V	2.2K 1/16W	[M]
R865	ERJ3GEYJ222V	2.2K 1/16W	[M]
1	V	/ -/	F==4

Ref. No.	Part No.	Part Name & Description	Remarks
R866	ERJ3GEYJ472V	4.7K 1/16W	[M]
R867	ERJ3GEYJ221V	220 1/16W	[M]
R884	ERJ3GEYJ123V	12K 1/16W	[M]
R885	ERJ3GEYJ123V	12K 1/16W	[M]
R886	ERJ3GEYJ123V	12K 1/16W	[M]
R888	D0GB122JA019	1.2K 1/16W	[M]
R903	ERJ3GEYJ222V	2.2K 1/16W	[M]
R904	D0GB272JA002	2.7K 1/16W	[M]
R905 R906	ERJ3GEYJ472V ERJ3GEYJ682V	4.7K 1/16W 6.8K 1/16W	[M]
R907	ERJ3GEYJ103V	10K 1/16W	[M]
R908	ERJ3GEYJ223V	22K 1/16W	[M]
R909	D0GB683JA002	68K 1/16W	[M]
R910	D0GB101JA002	100 1/16W	[M]
R911	ERJ3GEYJ102V	1K 1/16W	[M]
R912	D0GB122JA019	1.2K 1/16W	[M]
R913	ERJ3GEYJ182V	1.8K 1/16W	[M]
R914	ERJ3GEYJ222V	2.2K 1/16W	[M]
R915	D0GB272JA002	2.7K 1/16W	[M]
R916	ERJ3GEYJ103V	10K 1/16W	[M]
R937	D0GB474JA002	470K 1/16W	[M]
R952	ERDS2TJ821T	820 1/4W	[M]
R953	ERDS2TJ393T	39K 1/4W	[M]
R1101	D0GB220JA002	22 1/16W	[M]
R1102	ERJ3GEY0R00V	0 1/16W	[M]
R1103	D0GB183JA002	18K 1/16W	[M]
R1104	ERJ3GEYJ103V	10K 1/16W	[M]
R1105 R1106	ERJ3GEYJ222V ERJ3GEYJ104V	2.2K 1/16W 100K 1/16W	[M]
R1107	ERJ3GEYJ102V	1K 1/16W	[M]
R1109	ERJ3GEYJ102V	1K 1/16W	[M]
R1110	D0GB333JA002	33K 1/16W	[M]
R1201	D0GB220JA002	22 1/16W	[M]
R1202	ERJ3GEY0R00V	0 1/16W	[M]
R1203	D0GB183JA002	18K 1/16W	[M]
R1204	ERJ3GEYJ103V	10K 1/16W	[M]
R1205	ERJ3GEYJ222V	2.2K 1/16W	[M]
R1206	ERJ3GEYJ104V	100K 1/16W	[M]
R1207	ERJ3GEYJ102V	1K 1/16W	[M]
R1209	ERJ3GEYJ102V	1K 1/16W	[M]
R1210	D0GB333JA002	33K 1/16W	[M]
R1302	D0GB101JA002	100 1/16W	[M]
R1303	D0GB475JA008	4.7M 1/16W	[M]
R1304	ERJ3GEYJ223V	22K 1/16W	[M]
R1305	ERJ3GEYJ103V	10K 1/16W	[M]
R1307	ERD25FVJ101T	100 1/4W	[M]
R1308	ERD25FVJ101T	100 1/4W	[M]
R1309	ERD25FVJ102T	1K 1/4W	[M]
R1313 R1314	ERJ3GEYJ103V ERJ3GEYJ102V	10K 1/16W 1K 1/16W	[M]
R1314	ERJ3GEYJ102V	1K 1/16W	[M]
R1318	ERJ3GEYJ103V	10K 1/16W	[M]
R1327	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1328	ERJ3GEYJ153V	15K 1/16W	[M]
R1329	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1330	ERD2FCVJ4R7T	4.7 1/4W	[M] A
R1331	ERJ3GEYJ103V	10K 1/16W	[M]
R1332	ERJ3GEYJ103V	10K 1/16W	[M]
R1333	ERD2FCVJ4R7T	4.7 1/4W	[M]
R1334	ERJ3GEYJ223V	22K 1/16W	[M]
R1335	D0GB152JA002	1.5K 1/16W	[M]
R1336	D0GB152JA002	1.5K 1/16W	[M]
R1337	ERJ3GEYJ103V	10K 1/16W	[M]
R1338	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1341	ERJ3GEYJ471V	470 1/16W	[M]
R1342	ERJ3GEYJ473V	47K 1/16W	[M]
R1343	D0GB332JA002	3.3K 1/16W	[M]
R1344	DOGB273JA002	27K 1/16W	[M]
D1345	ERJ3GEYJ102V ERJ3GEYJ223V	1K 1/16W 22K 1/16W	[M]
		/	Lead
		4.7K 1/16W	[M]
R1371 R1372	ERJ3GEYJ472V	4.7K 1/16W 2.2K 1/16W	[M]
R1371		4.7K 1/16W 2.2K 1/16W 470 1/16W	[M] [M]

Ref. No.	Part No.	Part Name & Description	Remarks
R1376	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1377	D0GB1R0JA002	1 1/16W	[M]
R1401	ERJ3GEYJ123V	12K 1/16W	[M]
R1402	D0GB274JA002	270K 1/16W	[M]
R1403	ERJ3GEYJ103V	10K 1/16W	[M]
R1404	ERJ3GEYJ223V	22K 1/16W	[M]
R1405	ERJ3GEYJ103V	10K 1/16W	[M]
R3200	ERJ3GEYJ102V	1K 1/16W	[M]
R3201	ERJ3GEYJ103V	10K 1/16W	[M]
R3202	ERJ3GEYJ104V	100K 1/16W	[M]
R3203	ERJ3GEYJ123V	12K 1/16W	[M]
R3204	ERJ3GEYJ103V	10K 1/16W	[M]
R3205	ERJ3GEYJ103V	10K 1/16W	[M]
R3206	ERJ3GEYJ471V	470 1/16W	[M]
R3207	ERJ3GEYJ471V	470 1/16W	[M]
R3208	ERJ3GEYJ472V	4.7K 1/16W	[M]
R3209	ERJ3GEYJ472V	4.7K 1/16W	[M]
R3210	ERJ3GEYJ221V	220 1/16W	[M]
R3211	ERJ3GEYJ104V	100K 1/16W	[M]
R3212	ERJ3GEYJ221V	220 1/16W	[M]
R3213	ERJ3GEYJ104V	100K 1/16W	[M]
R3214	ERJ3GEYJ221V	220 1/16W	[M]
R3215	ERJ3GEYJ104V	100K 1/16W	[M]
R3216		8.2K 1/16W	[M]
	ERJ3GEYJ822V		
R3217	ERJ3GEYJ822V	8.2K 1/16W	[M]
R3218	D0GB392JA002	3.9K 1/16W	[M]
R3219	ERJ3GEYJ123V	12K 1/16W	[M]
R3220	D0GB562JA002	5.6K 1/16W	[M]
R3221	ERJ3GEYJ103V	10K 1/16W	[M]
R3222	D0GB332JA002	3.3K 1/16W	[M]
R3300	ERJ3GEYJ123V	12K 1/16W	[M]
R3301	D0GB562JA002	3.3K 1/16W	[M]
R3302	D0GB122JA019	1.2K 1/16W	[M]
		· ·	
R3303	ERJ3GEYJ123V	12K 1/16W	[M]
R3304	D0GB272JA002	3.3K 1/16W	[M]
R3306	ERJ3GEY0R00V	0 1/16W	[M]
R3307	ERJ3GEYJ223V	22K 1/16W	[M]
R3308	ERJ3GEYJ104V	100K 1/16W	[M]
R3309	D0GB392JA002	3.3K 1/16W	[M]
R3310	ERJ3GEYJ153V	15K 1/16W	[M]
R3311	D0GB332JA002	3.3K 1/16W	[M]
R3312	ERJ3GEYJ472V	4.7K 1/16W	[M]
		· ·	
R3313	ERJ3GEYJ104V	100K 1/16W	[M]
R3314	D0GB332JA002	3.3K 1/16W	[M]
R3315	ERJ3GEYJ104V	100K 1/16W	[M]
R3316	D0GB332JA002	3.3K 1/16W	[M]
R3317	D0GB332JA002	3.3K 1/16W	[M]
R3318	D0GB332JA002	3.3K 1/16W	[M]
R3319	D0GB152JA002	1.5K 1/16W	[M]
R3320	ERJ3GEYJ472V	4.7K 1/16W	[M]
R3321		·	
	ERJ3GEYJ102V	1K 1/16W	[M]
R3322	ERJ3GEYJ153V	15K 1/16W	[M]
R3323	D0GB683JA002	68K 1/16W	[M]
R3324	ERJ3GEYJ153V	15K 1/16W	[M]
R3325	D0GB683JA002	68K 1/16W	[M]
R3326	ERJ3GEYJ102V	1K 1/16W	[M]
R3327	ERJ3GEYJ103V	10K 1/16W	[M]
R3328	ERJ3GEYJ103V	10K 1/16W	[M]
R3329	D0GB332JA002	3.3K 1/16W	[M]
R3330	ERJ3GEYJ104V	100K 1/16W	[M]
R3331	ERJ3GEYJ123V	12K 1/16W	[M]
R3400	ERJ3GEYJ102V	1K 1/16W	[M]
R3401	ERJ3GEYJ103V	10K 1/16W	[M]
R3402	ERJ3GEYJ104V	100K 1/16W	[M]
R3403	ERJ3GEYJ123V	12K 1/16W	[M]
R3404	ERJ3GEYJ103V	10K 1/16W	[M]
R3405	ERJ3GEYJ103V	10K 1/16W	[M]
R3406	ERJ3GEYJ471V	470 1/16W	[M]
R3407	ERJ3GEYJ471V	470 1/16W	[M]
R3408	ERJ3GEYJ472V	4.7K 1/16W	[M]
R3409	ERJ3GEYJ472V	4.7K 1/16W	[M]
R3410	ERJ3GEYJ221V	220 1/16W	[M]
R3411	ERJ3GEYJ104V	100K 1/16W	[M]
R3412	ERJ3GEYJ221V	220 1/16W	[M]
•	•		

00P / SA-AK60	00PC		
Ref. No.	Part No.	Part Name & Description	Remarks
R3413	ERJ3GEYJ104V	100K 1/16W	[M]
R3414	ERJ3GEYJ221V	220 1/16W	[M]
R3415	ERJ3GEYJ104V	100K 1/16W	[M]
R3416	ERJ3GEYJ822V	8.2K 1/16W	[M]
R3417	ERJ3GEYJ822V	8.2K 1/16W	[M]
R3418	D0GB392JA002	3.9K 1/16W	[M]
R3419	ERJ3GEYJ123V	12K 1/16W	[M]
R3420	D0GB562JA002	5.6K 1/16W	[M]
R3421	ERJ3GEYJ103V	10K 1/16W	[M]
R3422	D0GB332JA002	3.3K 1/16W	[M]
		CAPACITORS	
C1	ECEA1CKA101B	100 16V	[M]
C2	ECBT1E103ZF5	0.01 25V	[M]
C201	ECUV1H101JCV	100P 50V	[M]
C202	ECJ1VC1H101K	100P 50V	[M]
C203	ECJ1VB1H221K	220P 50V	[M]
C204	ECEA1HKA100B		+::
		10 50V	[M]
C205	ECEA1CKA100B	10 167	[M]
C207	ECEA1HKA0R1B	0.1 50V	[M]
C208	ECEA1HKA4R7B	4.7 50V	[M]
C209	ECEA1HKA2R2B	2.2 50V	[M]
C210	ECEA1HKA2R2B	2.2 50V	[M]
C211	ECEA1HKA2R2B	2.2 50V	[M]
C212	ECEA1HKA4R7B	4.7 50V	[M]
C213	ECEA1HKA010B	1 50V	[M]
C214	ECEA1CKA100B	10 16V	[M]
C215	ECUV1C104KBV	0.1 16V	[M]
C216	ECEA1HKAR22B	0.22 50V	[M]
C217	ECEA1HKAR22B	0.22 50V	[M]
C218	ECUV1C104KBV	0.1 16V	[M]
C219	ECUV1C104KBV	0.1 16V	[M]
C220	ECJ1VB1H182K	1800P 50V	[M]
C221	ECEA1HKA2R2B	2.2 50V	[M]
C222	ECEA1CKA100B	10 16V	[M]
C224	ECUV1H473KBV	0.047 50V	[M]
C225	ECJ1VC1H101K	100P 50V	[M]
C226	ECEA1HKA3R3B	3.3 50V	[M]
C227	ECJ1VC1H101K	100P 50V	[M]
C228	ECUV1H470JCV	47P 50V	[M]
C229			
	ECEA1CKA100B	10 16V 10 16V	[M]
C230	ECEA1CKA100B		[M]
C231	ECJ1VB1H102K	1000P 50V	[M]
C232	ECEA1HKA010B	1 50V	[M]
C233	ECJ1VB1H102K	1000P 50V	[M]
C234	ECEA1HKA010B	1 50V	[M]
C235	ECEA1HKA010B	1 50V	[M]
C236	ECJ1VC1H101K	100P 50V	[M]
C237	ECUV1H101JCV	100P 50V	[M]
C238	ECEA1HKA3R3B	3.3 50V	[M]
C239	ECEA1HKA010B	1 50V	[M]
C240	ECEA1HKAR22B	0.22 50V	[M]
C241	ECEA1HKA010B	1 50V	[M]
C242	ECEA1HKA0R1B	0.1 50V	[M]
C249	F1H1C393A089	0.039 16V	[M]
C290	ECJ1VB1H682K	6800P 50V	[M]
C302	ECUV1C104ZFV	0.1 16V	[M]
C303	ECJ1VB1H102K	1000P 50V	[M]
C304	ECJ1VB1E103K	0.01 25V	[M]
C305	ECEA1CKA100B	10 16V	[M]
C306	ECEA1CKA100B	10 16V	[M]
C307	ECJ1VC1H101K	100P 50V	[M]
C308	ECJ1VC1H101K	100P 50V	[M]
C309	ECEA0JKA221B	220 6.3V	[M]
C310	ECEA1HKN2R2B	2.2 50V	[M]
C312	ECEA1HKA4R7B	4.7 50V	[M]
C313	ECUV1C104ZFV	0.1 16V	[M]
C314	F1H1H103A753	0.01 50V	[M]
C315	ECEA1CKA100B	10 16V	[M]
C316	ECEA1HKN2R2B	2.2 50V	[M]
0310	I — ——— a	2.2 50V	[M]
C317	ECEA1HKN2R2B	2.2 307	13
	ECEA1HKN2R2B ECJ1VB1E103K	0.01 25V	[M]
C317			

	1		
Ref. No.	Part No.	Part Name & Description	Remarks
C320	ECJ1VF1C474Z	0.47 16V	[M]
C321	ECJ1VC1H101K	100P 50V	[M]
C322	ECJ1VB1H102K	1000P 50V	[M]
C323	ECJ1VB1H102K	1000P 50V	[M]
C324	ECJ1VC1H101K	100P 50V	[M]
C325 C326	ECJ1VC1H101K	100P 50V 100P 50V	[M]
C327	ECEA1HKA010B	1 50V	[M]
C328	ECEA1HKA010B	1 50V	[M]
C329	ECEA1HKA010B	1 50V	[M]
C330	ECEA1CKA100B	10 16V	[M]
C331	F1H1H223A761	0.022 50V	[M]
C333	ECKR1H102ZF5	1000P 50V	[M]
C334	ECJ1VB1H102K	1000P 50V	[M]
C335	ECJ1VB1H102K	1000P 50V	[M]
C350	ECJ1VC1H101K	100P 50V	[M]
C351	ECUV1H470JCV	47P 50V	[M]
C352	ECJ1VB1E103K	0.01 25V	[M]
C353	ECJ1VC1H101K	100P 50V	[M]
C354	ECUVNA154KBV	0.15 10V	[M]
C355	ECJ1VC1H101K	100P 50V	[M]
C356	F1H1H822A022	8200P 50V	[M]
C357	ECJ1VB1E103K	0.01 25V	[M]
C358	ECEA1CKA220B	22 16V	[M]
C362	ECJ1VB1E103K	0.01 25V	[M]
C363	ECUVICIO4KBV	0.1 16V	[M]
C364	ECEA1CM221B	220 16V	[M]
C365 C366	ECJ1VB1E103K ECJ1VB1E103K	0.01 25V 0.01 25V	[M]
C367	ECJ1VC1H101K	100P 50V	[M]
C368	ECEA1CKA100B	10 16V	[M]
C369	RCE1HKN100BG	10P 50V	[M]
C370	ECEA1CKA100B	10 16V	[M]
C371	ECUV1A224KBV	0.22 10V	[M]
C372	ECEA1CM101B	100 16V	[M]
C373	ECUV1H470JCV	47P 50V	[M]
C374	F1H1A2240004	0.22 10V	[M]
C375	F1H1A2240004	0.22 10V	[M]
C376	ECEA1CKA100B	10 16V	[M]
C377	ECUV1C103KBV	0.01 16V	[M]
C399	ECEA1HKA330B	33 50V	[M]
C401	ECUV1H101JCV	100P 50V	[M]
C402	ECJ1VC1H101K	100P 50V	[M]
C403	ECJ1VB1H221K	220P 50V	[M]
C404	ECEA1HKA100B	10 500	[M]
C406	ECEA1CKA100B	10 16V	[M]
C407	ECEA1HKA0R1B	0.1 50V	[M]
C408	ECEA1HKA4R7B	4.7 50V	[M]
C409	ECEA1HKA2R2B	2.2 50V	[M]
C410 C411	ECEA1HKA2R2B ECEA1HKA2R2B	2.2 50V 2.2 50V	[M]
C411 C412	ECEA1HKA4R7B	4.7 50V	[M]
C412	ECEA1HKA010B	1 50V	[M]
C414	ECEA1CKA100B	10 16V	[M]
C415	ECUV1C104KBV	0.1 16V	[M]
C416	ECEA1HKAR22B	0.22 50V	[M]
C417	ECEA1HKAR22B	0.22 50V	[M]
C418	ECUV1C104KBV	0.1 16V	[M]
C419	ECUV1C104KBV	0.1 16V	[M]
C420	ECJ1VB1H182K	1800P 50V	[M]
C421	ECEA1HKA2R2B	2.2 50V	[M]
C422	ECEA1CKA100B	10 16V	[M]
C424	ECUV1H473KBV	0.047 50V	[M]
C425	ECJ1VC1H101K	100P 50V	[M]
C426	ECEA1HKA3R3B	3.3 50V	[M]
C427	ECJ1VC1H101K	100P 50V	[M]
C428	ECUV1H470JCV	47P 50V	[M]
C429	ECEA1CKA100B	10 16V	[M]
C430	ECEA1CKA100B	10 16V	[M]
C431	ECJ1VB1H102K	1000P 50V	[M]
C432	ECEA1HKA010B	1 50V	[M]
C433	ECJ1VB1H102K	1000P 50V	[M]
C434	ECEA1HKA010B	1 50V	[M]
C435	ECEA1HKA010B	1 50V	[M]

Ref.	No.	Part No.	Part Name & Description	Remarks
C436		ECJ1VC1H101K	100P 50V	[M]
C437		ECUV1H101JCV	100P 50V	[M]
C438		ECEA1HKA3R3B	3.3 50V	[M]
C439		ECEA1HKA010B	1 50V	[M]
C440		ECEA1HKAR22B	0.22 50V	[M]
C441		ECEA1HKA010B	1 50V	[M]
C442		ECEA1HKA0R1B	0.1 50V	[M]
C449		F1H1C393A089	0.039 16V	[M]
C490 C501		ECJ1VB1H682K ECBT1H821KB5	6800P 50V 820P 50V	[M]
C502		ECBT1H821KB5	820P 50V	[M]
C503		ECBT1H821KB5	820P 50V	[M]
C504		ECBT1H821KB5	820P 50V	[M]
C505		ECBT1H821KB5	820P 50V	[M]
C506		ECBT1H821KB5	820P 50V	[M]
C507		ECBT1H220JC5	22P 50V	[M]
C508		ECBT1H220JC5	22P 50V	[M]
C509		ECBT1H220JC5	22P 50V	[M]
C510		ECBT1H220JC5	22P 50V	[M]
C511		ECBT1H220JC5	22P 50V	[M]
C512		ECBT1H220JC5	22P 50V	[M]
C514		ECEA0JKA101B	100 6.3V	[M]
C517		ECBT1H103KB5	0.01 50V	[M]
C518		ECBT1H471KB5	470P 50V	[M]
C519		ECBT1H471KB5	470P 50V	[M]
C520		ECBT1H103KB5	0.01 50V	[M]
C521 C522		ECBT1H473KB5 ECBT1H473KB5	0.047 50V 0.047 50V	[M]
C523		ECBT1H473KB5	0.047 50V	[M]
C524		ECBT1H473KB5	0.047 50V	[M]
C525		ECBT1H473KB5	0.047 50V	[M]
C526		ECBT1H473KB5	0.047 50V	[M]
C528		ECA1HM470B	47 50V	[M]
C530		ECQE1104KF3	0.1 100V	[M]
C532		ECBT1H473KB5	0.047 50V	[M]
C534		ECBT1H473KB5	0.047 50V	[M]
C537		ECBT1H102KB5	1000P 50V	[M]
C538		ECBT1H102KB5	1000P 50V	[M]
C539		ECBT1H102KB5	1000P 50V	[M]
C540		ECBT1H102KB5	1000P 50V	[M]
C541		ECA2EM2R2B	2.2 250V	[M]
C542		ECEA1HKA010B	1 50V	[M]
C543		ECEA1CKA220B	22 16V	[M]
C544 C570		ECEA2AU100B ECEA1EKA470B	10 100V 47 25V	[M]
C571		ECKR1H103ZF5	0.01 50V	[M]
C571		F2A1H222A202	2200P 50V	[M] A
C572		ECKR1H103ZF5	0.01 50V	[M]
C573		RCA1CM102BT	1000P 16V	[M]
C574		F2A1H222A202	2200P 50V	[M] A
C574		RCA1CM102BT	1000P 16V	[M]
C575		ECA1HM470B	47 50V	[M]
C575		ECEA1VKA4R7B	4.7 35V	[M]
C576		ECA1HM101B	100 50V	[M]
C576		ECA1EM331B	330 25V	[M]
C577		ECA1EM331B	330 25V	[M]
C577		ECKR1H103ZF5	0.01 50V	[M]
C578		ECA1JM101B	100P 63V	[M]
C578		ECKR1H103MD5	0.01 50V	[M]
C579		ECA1HM470B	47 50V	[M]
C579		ECKR1H103MD5	0.01 50V	[M]
C580 C580		ECA1HM470B ECA2AM100B	47 50V 10 100V	[M]
C581		F2A1E222A172	2200P 25V	[M]
C582		ECEA1HKA2R2B	2.2 50V	[M]
C583		ECQV1H104JZ3	0.1 50V	[M]
C601		ECEA1VKA220B	22 35V	[M]
C602		ECEA1VKA220B	22 35V	[M]
C603		ECUV1C104ZFV	0.1 16V	[M]
C604		ECJ1VC1H101K	100P 50V	[M]
C605		ECJ1VC1H101K	100P 50V	[M]
C606		F1H1H223A761	0.022 50V	[M]
C607		F1H1H331A022	330P 50V	[M]
C608		ECUV1H561KBV	560P 50V	[M]

D. 6 37.	D 17.		D
Ref. No.	Part No.	Part Name & Description	Remarks
C609	F1H1H331A022	330P 50V	[M]
C610	ECJ1VC1H150J	15P 50V	[M]
C611	ECJ1VC1H180J	15P 50V	[M]
C612	ECUV1H680JCV	68P 50V	[M]
C613	ECUV1H680JCV	68P 50V	[M]
C614	ECJ1VC1H560J	56 50V	[M]
C615	ECJ1VB1H102K	1000P 50V	[M]
C616	ECJ1VC1H560J	56 50V	[M]
C617	ECJ1VB1H102K	1000P 50V	[M]
C618	F1H1H331A022	330P 50V	[M]
C619	ECEA1HKA3R3B	3.3 50V	[M]
C620	ECUV1H561KBV	560P 50V	[M]
C621	ECUV1H561KBV	560P 50V	[M]
C622	ECUV1H561KBV	560P 50V	[M]
	ECUV1H561KBV		
C623		560P 50V	[M]
C624	ECUV1H561KBV	560P 50V	[M]
C625	ECUV1H561KBV	560P 50V	[M]
C626	ECUV1H561KBV	560P 50V	[M]
C627	ECUV1H561KBV	560P 50V	[M]
C628	ECUV1H561KBV	560P 50V	[M]
C629	ECUV1H561KBV	560P 50V	[M]
C630	ECJ1VB1H103K	0.01 50V	[M]
C631	ECEA1HKA010B	1 50V	[M]
C632	ECEA1HKA2R2B	2.2 50V	[M]
C633	ECEA0JKA101B	100 6.3V	[M]
C634	ECJ1VB1H102K	1000P 50V	[M]
C635	F2A0J102A204	1000P 6.3V	[M]
C636	ECJ1VB1H102K	1000P 50V	[M]
C637	F1H1H103A753	0.01 50V	[M]
C638	ECEA1AKA220B	22 10V	[M]
C639	ECUV1H561KBV	560P 50V	[M]
C640	ECUV1H561KBV	560P 50V	[M]
C641	ECUV1H561KBV	560P 50V	[M]
C642	ECUV1H561KBV	560P 50V	[M]
C643	ECJ1VB1H103K	0.01 50V	[M]
C644	ECJ1VC1H101K	100P 50V	[M]
C645	ECUV1C104ZFV	0.1 16V	[M]
C646	ECJ1VC1H101K	100P 50V	[M]
C647	ECJ1VC1H101K	100P 50V	[M]
C648	ECUV1H561KBV	560 50V	[M]
C701	ECEA0JKA330I	33 6.3V	[M]
C702	ECUV1C104KBV	0.1 16V	[M]
C703	ECEA0JKA101I	100 6.3V	[M]
C704	ECUV1C104KBV	0.1 16V	[M]
C706	ECJ1VB1H272K	2700P 50V	[M]
C707	F1H1E273A074	0.027 25V	[M]
C710	F1H1H121A755	120P 50V	[M]
C711	ECUV1C104ZFV	0.1 16V	[M]
C712	ECUV1C104ZFV	0.1 16V	[M]
C713	ECUV1C104KBV	0.1 16V	[M]
C714	ECEA0JKA101I	100 6.3V	[M]
C715	ECJ1VB1H272K	2700P 50V	[M]
C716	ECJ2VB1H821K	820P 50V	[M]
C717	ECUV1C104ZFV	0.1 16V	[M]
C718	F1H1A2240004	0.22 10V	[M]
C721	ECJ1VC1H100D	10P 50V	[M]
C721	ECJ1VC1H100D	10P 50V	[M]
C722	ECEA1AKA221I	220 10V	[M]
C724	ECJ2ZB1E104M	0.1 25V	[M]
C725	ECJ1VB1H102K	1000P 50V	[M]
C726	ECJ1VB1H102K	1000P 50V	[M]
C727	ECA1HAK010XI	1 50V	[M]
C728	ECA1HAK010XI	1 50V	[M]
C730	ECUV1C104ZFV	0.1 16V	[M]
C731	ECEA0JKA221I	220 6.3V	[M]
C732	ECEA0JKA221I	220 6.3V	[M]
C733	ECUV1C104KBV	0.1 16V	[M]
C734	ECEA1AKA221I	220 10V	[M]
C735	ECUVNE104ZFN	0.1 25V	[M]
C736	ECUV1C104ZFV	0.1 16V	[M]
C737	ECUV1C104ZFV	0.1 16V	[M]
C738	ECJ2VB1H103K	0.01 50V	[M]
C739	ECUV1H152KBV	1500P 50V	[M]
C742	F1H1E273A074	0.027 25V	[M]
•	•		

00P / SA-AK60	OOPC		
Ref. No.	Part No.	Part Name & Description	Remarks
C743	ECUV1C104ZFV	0.1 16V	[M]
C744	ECJ1VB1H562K	5600P 50V	[M]
C745	ECJ1VB1H102K	1000P 50V	[M]
C747	F1H1H181A797	180P 50V	[M]
C749	ECJ1VB1H222K	2200P 50V	[M]
C750	ECJ2ZB1E104M	0.1 25V	[M]
C751	ECUV1C104KBV	0.1 16V	[M]
C752	ECJ1VB1H102K	1000P 50V	[M]
C753	ECJ1VB1H471K	470P 50V	[M]
C754	ECJ1VB1H471K	470P 50V	[M]
C801	ECUV1C104KBV	0.1 16V	[M]
C802	ECEA1HKA4R7B	4.7 50V	[M]
C803	ECUVICIO4KBV ECEAICKA101B	0.1 16V 100P 16V	[M]
C805	F1H1H103A753	0.01 50V	[M]
C806	ECUV1C104ZFV	0.1 16V	[M]
C807	ECUV1C104ZFV	0.1 16V	[M]
C808	VCEA1CJH221B	220P 16V	[M]
C809	ECUV1C104ZFV	0.1 16V	[M]
C810	VCEA1CJH221B	220P 16V	[M]
C811	ECJ1VB1H103K	0.01 50V	[M]
C812	ECJ1VB1H103K	0.01 50V	[M]
C813	ECEA1CKA100B	10 16V	[M]
C814	ECJ1VB1H103K	0.01 50V	[M]
C815	ECJ1VB1H103K	0.01 50V	[M]
C816	ECEA1CKA100B	10 16V	[M]
C817	F1H1H103A753	0.01 50V	[M]
C818	F1H1H103A753	0.01 50V	[M]
C819	F1H1H103A753	0.01 50V	[M]
C820	F1H1H103A753	0.01 50V	[M]
C821	ECUV1C104KBV	0.1 16V	[M]
C822	ECUV1C104KBV	0.1 16V	[M]
C823	ECUV1C104KBV	0.1 16V	[M]
C824	ECEA1CKA220B	22 16V	[M]
C825	ECEA1CKA100B	10 16V	[M]
C826	ECUV1C104KBV	0.1 16V	[M]
C827	ECUV1C104KBV	0.1 16V	[M]
C828	ECUV1C104KBV	0.1 16V	[M]
C829	ECEA1CKA100B	10 16V	[M]
C830	ECUVICIO4KBV	0.1 16V	[M]
C831	ECUV1C104KBV	0.1 16V	[M]
C832 C833	VCEA1CJH101B	0.1 16V	[M]
	ECUV1C104KBV ECJ1VC1H220J		[M]
C834 C835	ECJ1VC1H220J	22P 50V 22P 50V	[M]
C836	ECUV1C104KBV	0.1 16V	[M]
C837	VCEA1CJH101B	100P 16V	[M]
C838	VCEA1CJH101B	100P 16V	[M]
C839	ECUV1C104KBV	0.1 16V	[M]
C840	ECJ1VC1H101K	100P 50V	[M]
C841	F1H1H121A755	120P 50V	[M]
C842	ECUV1A474KBV	0.47 10V	[M]
C843	ECJ1VB1H103K	0.01 50V	[M]
C844	ECUV1C104KBV	0.1 16V	[M]
C845	VCEA1CJH101B	100P 16V	[M]
C846	ECUV1C104KBV	0.1 16V	[M]
C847	VCEA1CJH101B	100P 16V	[M]
C848	ECUV1C104ZFV	0.1 16V	[M]
C849	VCEA1CJH101B	100P 16V	[M]
C850	ECEA1CKA100B	10 16V	[M]
C851	ECUV1C104ZFV	0.1 16V	[M]
C852	ECUVICIO4ZFV	0.1 16V	[M]
C853	ECJ1VB1H102K	1000P 50V	[M]
C854	ECUV1C104ZFV	0.1 16V	[M]
C855	F1H1H103A753	0.01 50V	[M]
C856 C857	ECEA1CKA101B ECJ1VB1H103K	0.01 50V	[M]
C857	ECJIVEIHIU3K ECJIVC1H470K	47 50V	[M]
C875	ECJ1VC1H470K	47 50V	[M]
C876	ECUV1C104ZFV	0.1 16V	[M]
F	ECJ1VC1H101K	100P 50V	[M]
C901		!	+
C901	ECJ1VC1H101K	100P 50V	[M]
	ECJ1VC1H101K F1H1H103A753	100P 50V 0.01 50V	[M]
C902			T

	T		
Ref. No.	Part No.	Part Name & Description	Remarks
C905	ECJ1VB1H102K	1000P 50V	[M]
C906	F1H1H473A761	0.047 50V	[M]
C907	ECJ1VB1H102K	1000P 50V	[M]
C908	F1H1H473A761	0.047 50V	[M]
C1101	ECA1HAK010XB	1 50V	[M]
C1102	ECJ1VB1H471K	470P 50V	[M]
C1103	ECA1CAK101XB	100 16V	[M]
C1104	F1H1C183A089	0.018 16V	[M]
C1105	ECJ1VB1H471K	470P 50V	[M]
C1106	ECA1HAK2R2XB	2.2 50V	[M]
C1107	ECUV1H152KBV ECA1CAK100XB	1500P 50V 10 16V	[M]
C1109	ECA1HAK3R3XB	3.3 50V	[M]
C1121	ECJ1VB1H102K	1000P 50V	[M]
C1122	ECJ1VB1H103K	0.01 50V	[M]
C1123	ECUV1H271KBV	270P 50V	[M]
C1201	ECA1HAK010XB	1 50V	[M]
C1202	ECJ1VB1H471K	470P 50V	[M]
C1203	ECA1CAK101XB	100 16V	[M]
C1204	F1H1C183A089	0.018 16V	[M]
C1205	ECJ1VB1H471K	470P 50V	[M]
C1206	ECA1HAK2R2XB	2.2 50V	[M]
C1207	ECUV1H152KBV	1500P 50V	[M]
C1208	ECA1CAK100XB	10 16V	[M]
C1209	ECA1HAK3R3XB	3.3 50V	[M]
C1221	ECJ1VB1H102K	1000P 50V	[M]
C1222	ECJ1VB1H103K	0.01 50V	[M]
C1223	ECUV1H271KBV	270P 50V	[M]
C1301	ECEA1HKA0R1B	0.1 50V	[M]
C1302	ECUVNC333KBV	0.033 16V	[M]
C1303	ECUVNC333KBV ECEA1HKA4R7B	0.033 16V 4.7 50V	[M]
C1305	ECA1CAK330XB	33 16V	[M]
C1306	ECUV1C104KBV	0.1 16V	[M]
C1307	ECA1AAK221XQ	220 10V	[M]
C1308	ECA1CAK220XB	22 16V	[M]
C1310	ECA1HAKOR1XB	0.01 50V	[M]
C1311	ECA1CAK470XB	47 16V	[M]
C1312	ECJ1VB1H332K	3300P 50V	[M]
C1314	ECJ1VB1H222K	2200P 50V	[M]
C1315	ECJ1VB1H222K	2200P 50V	[M]
C1316	ECJ1VB1H102K	1000P 50V	[M]
C1317	ECJ1VB1H102K	1000P 50V	[M]
C1318	ECQV1H473JZ3 ECA1CAK101XB	0.047 50V	[M]
C1320	ECA1HAK010XB	100 16V 1 50V	[M]
C1321	F0A2A472A015	4700P 100V	[M]
C1322	ECQP2A102JZT	1000P 100V	[M]
C1323	ECEA1HKN010B	1 50V	[M]
C1324	ECA1CAK470XB	47 16V	[M]
C1325	ECJ1VB1E103K	0.01 50V	[M]
C1326	ECA1CAK100XB	10 16V	[M]
C1371	ECJ1VB1H103K	0.01 50V	[M]
C3200	ECEA1CKA220B	22 16V	[M]
C3201	ECJ1VB1H102K	1000P 50V	[M]
C3202	ECEA1CKA100B	10 16V	[M]
C3203	ECUV1C104KBV	0.1 16V	[M]
C3204	ECEA1CKA100B	10 16V	[M]
C3205	ECJ1VB1H222K ECEA1CKA100B	2200P 50V 10 16V	[M]
C3206	ECHAICKAIOUB ECJ1VB1H222K	2200P 50V	[M]
C3207	ECEA1CKA100B	10 16V	[M]
C3209	ECJ1VB1H222K	2200P 50V	[M]
C3210	ECEA1HKA010B	1 50V	[M]
C3211	ECJ1VC1H101K	100P 50V	[M]
C3212	ECEA1AKA330B	33 10V	[M]
C3213	ECEA1CKA100B	10 16V	[M]
C3214	ECEA1HKAR15B	0.15 50V	[M]
l a 2 0 7 F	ECEA1AKA330B	33 10V	[M]
C3215	I	3.3 50V	[M]
C3216	ECEA1HKA3R3B		
C3216 C3217	ECJ1VC1H101K	100P 50V	[M]
C3216 C3217 C3218	ECJ1VC1H101K ECEA1HKA010B	100P 50V 1 50V	[M]
C3216 C3217	ECJ1VC1H101K	100P 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C3302	ECEA1CKA100B	10 16V	[M]
C3303	ECEA1CKA100B	10 16V	[M]
C3304	ECEA1CKA100B	10 16V	[M]
C3305	ECEA1HKA010B	1 50V	[M]
C3306	ECEA1CKA100B	10 16V	[M]
C3307	ECJ1VB1H221K	220P 50V	[M]
C3308	ECEA1CKA100B	10 16V	[M]
C3309	ECEA1CKA220B	22 16V	[M]
C3310	ECEA1HKA010B	1 50V	[M]
C3311	ECEA1CKA330B	33 16V	[M]
C3312	ECJ1VC1H101K	100P 50V	[M]
C3313	ECJ1VC1H470K	47P 50V	[M]
C3314	ECEA1HKA010B	1 50V	[M]
C3315	ECEA1CKA330B	33 16V	[M]
C3316	ECJ1VC1H101K	100P 50V	[M]
C3317	ECJ1VB1H102K	1000P 50V	[M]
C3318	ECEA1CKA100B	10 16V	[M]
C3319	ECJ1VB1H682K	6800P 50V	[M]
C3322	ECEA1HKA010B	1 50V	[M]
C3323	ECEA1HKA010B	1 50V	[M]
C3400	ECEA1CKA220B	22 16V	[M]
C3401	ECJ1VB1H102K	1000P 50V	[M]
C3402	ECEA1CKA100B	10 16V	[M]
C3403	ECUV1C104KBV	0.1 16V	[M]
C3404	ECEA1CKA100B	10 16V	[M]
C3405	ECJ1VB1H222K	2200P 50V	[M]
C3406	ECEA1CKA100B	10 16V	[M]
C3407	ECJ1VB1H222K	2200P 50V	[M]
C3408	ECEA1CKA100B	10 16V	[M]
C3409	ECJ1VB1H222K	2200P 50V	[M]
C3410	ECEA1HKA010B	1 50V	[M]
C3411	ECJ1VC1H101K	100P 50V	[M]
C3412	ECEA1AKA330B	33 10V	[M]
C3413	ECEA1CKA100B	10 16V	[M]
C3414	ECEA1HKAR15B	0.15 50V	[M]
C3415	ECEA1AKA330B	33 10V	[M]
C3416	ECEA1HKA3R3B	3.3 50V	[M]
C3417	ECJ1VC1H101K	100P 50V	[M]

Ref. No.	Part No. ECEA1HKA010B	Part Name & Description 1 50V	Remarks [M]
C3418	ECEA1HKA010B	1 50V	[M]
			ļ
		CHIP JUMPER	
RJ701	ERJ6GEY0R00V	0 1/10W	[M]
RJ702	ERJ6GEY0R00V	0 1/10W	[M]
RJ704	ERJ6GEY0R00V	0 1/10W	[M]
RJ710	ERJ6GEY0R00V	0 1/10W	[M]
RJ712	ERJ6GEY0R00V	0 1/10W	[M]
RJ713	ERJ6GEY0R00V	0 1/10W	[M]
RJ714	ERJ6GEY0R00V	0 1/10W	[M]
RJ721	ERJ3GEY0R00V	0 1/16W	[M]
RJ722	ERJ3GEY0R00V	0 1/16W	[M]
RJ723	ERJ3GEY0R00V	0 1/16W	[M]
RJ724	ERJ3GEY0R00V	0 1/16W	[M]
RJ725	ERJ3GEY0R00V	0 1/16W	[M]
RJ726	ERJ3GEY0R00V	0 1/16W	[M]
RJ727	ERJ3GEY0R00V	0 1/16W	[M]
RJ728	ERJ3GEY0R00V	0 1/16W	[M]
RJ729	ERJ3GEY0R00V	0 1/16W	[M]
RJ730	ERJ3GEY0R00V	0 1/16W	[M]
RJ731	ERJ3GEY0R00V	0 1/16W	[M]
RJ732	ERJ3GEY0R00V	0 1/16W	[M]
RJ733	ERJ3GEY0R00V	0 1/16W	[M]
RJ734	ERJ3GEY0R00V	0 1/16W	[M]
RJ735	ERJ3GEY0R00V	0 1/16W	[M]
RJ736	ERJ3GEY0R00V	0 1/16W	[M]
RJ737	ERJ3GEY0R00V	0 1/16W	[M]
RJ738	ERJ3GEY0R00V	0 1/16W	[M]
RJ739	ERJ3GEY0R00V	0 1/16W	[M]
RJ740	ERJ3GEY0R00V	0 1/16W	[M]
RJ741	ERJ3GEY0R00V	0 1/16W	[M]
RJ742	ERJ3GEY0R00V	0 1/16W	[M]
		TEST JUMPER	
тJ701	EYF8CU	TEST JUMPER	[M]

19.5. Packing Materials & Accessories Parts List

Ref.	No.	Part No.	Part Name & Description	Remarks
			PACKING MATERIALS	
P1		RPGX0870	PACKING CASE	[M] P
P1		RPGX0871	PACKING CASE	[M] PC
P 2		RPN1406-1	POLYFOAM	[M]
P 3		RPFX0007	MIRAMAT BAG	[M]
			ACCESSORIES	

Ref. No.	Part No.	Part Name & Description	Remarks
A1	N2QAGB000018	REMOTE CONTROLLER	[M]
A1-1	251200F1F	R/C BATTERY COVER	[M]
A2	RJA0065-1D	AC CORD	[M] A
A3	RQT6243-1P	O/I BOOK	[M]
A3	RQT6244-1M	O/I BOOK	[M] P
A3	RQT6245-1C	O/I BOOK	[M] PC
A4	RSA0006-J	FM ANTENNA	[M]
A5	RSA0033	AM LOOP ANTENNA	[M]

19.6. Packaging

