

Service Manual

COMPACT
disc
 DIGITAL AUDIO


MASH^{*1}
 multi-stage noise shaping

^{*2} **DD** **DOLBY B NR**

 CD Stereo System
SA-CH74

Colour

(K) ... Black Type

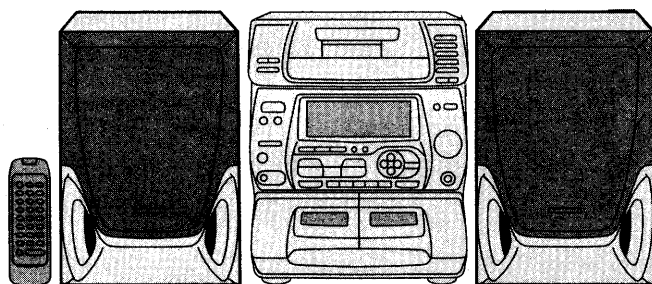Remote Control
Transmitter

SB-CH74

SA-CH74

SB-CH74

TAPE SECTION : AR2 MECHANISM SERIES
CD SECTION : RAE0150Z TRAVERSE DECK SERIES

Specifications

Amplifier Section

1 kHz continuous power output	
Both channels driven	2 x 35 W (THD 1%, 4 Ω)
RMS	2 x 50 W (THD 10%, 4 Ω)
Total harmonic distortion	
Half power at 1 kHz	0.06 % (4 Ω)
Frequency response	
AUX	60 Hz – 20 kHz (–3 dB)
Input sensitivity and impedance	
AUX	250 mV, 28 kΩ
MIC	0.6 mV, 680 Ω
Tone controls	
6 EQ SPACE	HEAVY, CLEAR, SOFT, DISCO, LIVE, HALL
V. BASS (volume at –30 dB)	63 Hz, 7 dB
Load impedance	4 Ω

FM Tuner Section

Frequency range	87.50 – 108.00 MHz
Sensitivity	23.3 dBf
Total harmonic distortion	
MONO	0.3 %
STEREO	0.5 %
S/N (MONO)	60 dB
Image rejection at 98 MHz	35 dB
Stereo separation at 1 kHz	35 dB
Antenna terminal(s)	75 Ω (unbalanced)

AM Tuner Section

Frequency range	
MW	522 – 1611 kHz
LW	144 – 288 kHz
Sensitivity (for 500 mW)	
MW (at 999 kHz)	250 μV/m
LW (at 252 kHz)	500 μV/m

Cassette Deck Section

Track system	4 track, 2 channel
Heads	
Playback	Solid permalloy head (Rotary head)
Record/playback	Solid permalloy head (Rotary head)
Erase	Double gap ferrite head
Motor	DC servo motor
Recording system	AC bias 100 kHz
Erasing system	AC erase 100 kHz
Tape speed	4.8 cm/s (1 ⁷ / ₈ ips)
Frequency response [(+3 dB, –6 dB) at deck out]	
NORMAL	35 Hz – 14 kHz
HIGH	35 Hz – 14 kHz
S/N (HIGH POSITION)	
Dolby NR off	50 dB (A weighted)
Dolby NR on	60 dB (CCIR)
Wow and flutter	0.18 % (WRMS)
Fast forward and rewind times	Approx. 120 seconds with C-60 cassette tape

CD Section

Sampling frequency	44.1 kHz
Decoding	16 bit linear
Beam source/wave length	Semiconductor laser / 780 nm
Number of channels	Stereo
Frequency response	20 Hz – 20 kHz (+1 dB, –2 dB)
S/N (CD UNIT OUT)	95 dB (JIS. A)
Wow and flutter	Below measurable limit
Digital filter	8 fs
D/A converter	MASH (1 bit DAC)

^{*2} Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
 "Dolby" and the double-D symbol are trade marks of Dolby Laboratories Licensing Corporation.

*1

MASH is a trademark of NTT.

Panasonic[®]

 © 1996 Matsushita Electronics (S) Pte. Ltd.
 All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experience repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

■ General

Power consumption	150 W
Power supply	AC 50 Hz, 230 V (E, EG)
	AC 50 Hz, 230 – 240 V (EB)
Dimensions (W x H x D)	270 x 331.5 x 331 mm
Weight	7.6 kg

Notes :

1. Specifications are subject to change without notice.
Weight and dimensions are approximate.
2. Total harmonic distortion is measured by the digital spectrum analyzer.

■ Contents

	Page		Page
BEFORE REPAIR AND ADJUSTMENT	2	BLOCK DIAGRAM	23 ~ 29
HANDLING PRECAUTIONS FOR TRAVERSE DECK	2	PRINTED CIRCUIT BOARD	30 ~ 38
PROTECTION CIRCUITRY	3	SCHEMATIC DIAGRAM	39 ~ 55
PRECAUTION OF LASER DIODE	3	TROUBLESHOOTING GUIDE	56
CAUTION FOR AC MAINS LEAD	4	MECHANISM PARTS LIST	57
BEFORE MOVING OR SHIPPING THIS UNIT	5	CD LOADING UNIT PARTS LIST	57
OPERATION CHECKS AND MAIN COMPONENT REPLACEMENT	5 ~ 10	MECHANISM PARTS LOCATION (RAA3404)	58 ~ 59
SELF-DIAGNOSTIC DISPLAY FUNCTION	11 ~ 12	CABINET PARTS LOCATION	60 ~ 61
CD TEST MODE FUNCTION	13	CD LOADING UNIT PARTS LOCATION	62
RELIABILITY TEST MODE FOR CD/CD CHANGER	14	REPLACEMENT PARTS LIST	63 ~ 66
MEASUREMENTS AND ADJUSTMENTS	15 ~ 16	RESISTORS & CAPACITORS	66 ~ 71
TERMINAL FUNCTION OF ICs	17 ~ 19	PACKING MATERIALS & ACCESSORIES	72
WIRING CONNECTION DIAGRAM	20 ~ 21	PACKAGING	72
TERMINAL GUIDE OF ICs, TRANSISTORS AND DIODES..	22		

■ Before Repair and Adjustment

Disconnect AC power, discharge both Power Supply Capacitors C522 and C523 through a 10Ω, 5W resistor to ground. DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices. After repairs are completed, restore power gradually using a variac, to avoid overcurrent. Current consumption at 230V, 50 Hz in NO SIGNAL mode should be ~200mA.

■ Handling Precautions for Traverse Deck

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body. So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

• Handling of traverse deck (optical pickup)


1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
2. To prevent the breakdown of the laser diode, an antistatic shorting pin is inserted into the flexible board (FPC board).
When removing or connecting the short pin, finish the job in as short time as possible.
3. Take care not to apply excessive stress to the flexible board (FPC board).
4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

• Grounding for electrostatic breakdown prevention

1. Human body grounding
Use the anti-static wrist strap to discharge the static electricity from your body.
2. Work table grounding
Put a conductive material (sheet) or steel sheet on the area where the traverse deck (optical pickup) is placed, and ground the sheet.

Caution :

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

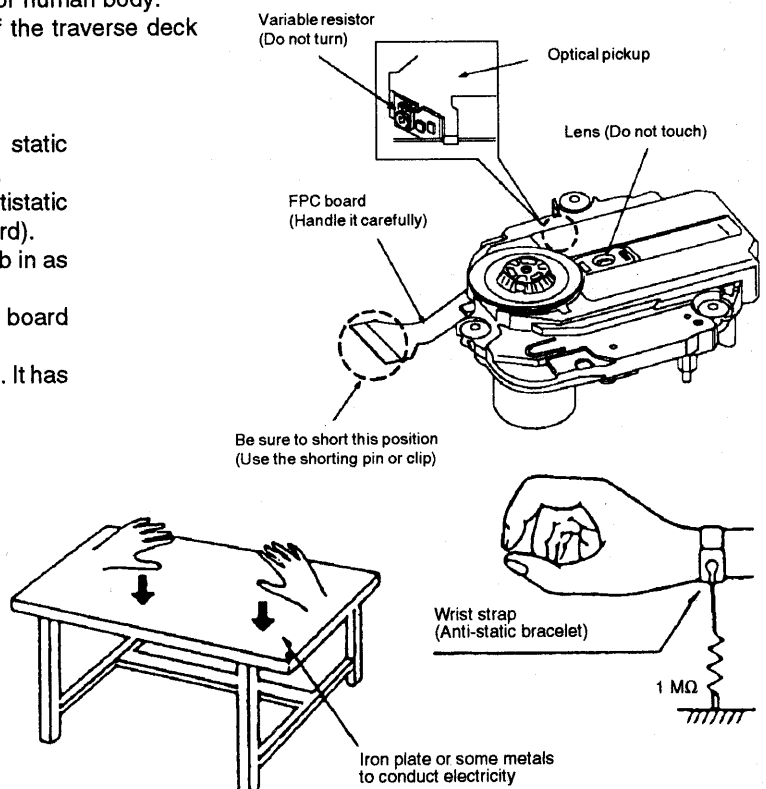

■ Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

■ Precaution of Laser Diode

CAUTION : This product utilizes a laser diode with the unit turned "ON", invisible laser radiation is emitted from the pick up lens.
Wavelength : 780 nm
Maximum output radiation power from pick up : 100 μ W/VDE

Laser radiation from pick up unit is safety level, but be sure the followings:

1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pick up unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

ACHTUNG: Dieses produkt enthält eine laserdioden. Im eingeschalteten zustand wird unsichtbare laserstrahlung von der lasereinheit abgestrahlt.

Wellenlänge : 780nm
Maximale strahlungsleistung der lasereinheit : 100 μ W/VDE

Die strahlung an der lasereinheit ist ungefährlich, wenn folgende punkte beachtet werden:

1. Die lasereinheit nicht zerlegen, da die strahlung an der freigelegten laserdioden gefährlich ist.
2. Den werkseitig justierten einstellregler der lasereinheit nicht verstellen.
3. Nicht mit optischen instrumenten in die fokussierlinse blicken.
4. Nicht über längere zeit in die fokussierlinse blicken.



ADVARSEL: I dette a apparat anvendes laser.

CAUTION!


THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

■ Use of Caution Labels

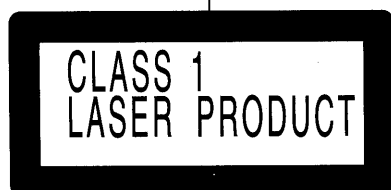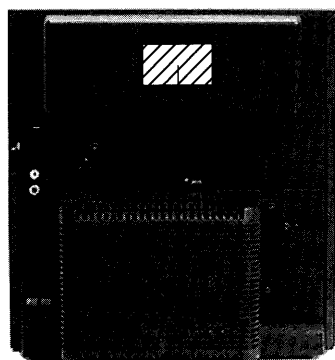

LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

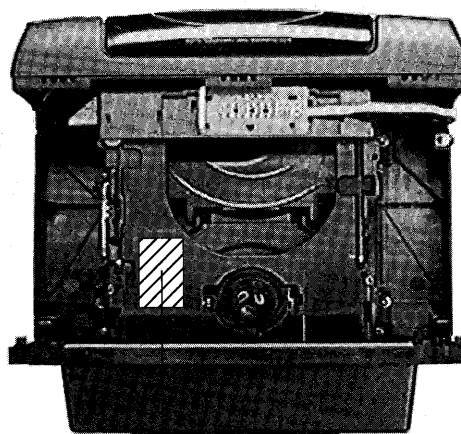



DANGER	INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.
ADVARSEL	USYNLIG LASERSTRÅLING VED ÅBNING. NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALLTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLÄ. ÄLÄ KATSO SÄTEESEEN.
VARNING	OSYNLIG LASERSTRÅLING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.
ADVARSEL	USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT	UNSIHTBARE LASERSTRÄHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.

■ Caution for AC Mains Lead

[For [EB] area.]

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 5-ampere fuse is fitted in this plug. Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover, the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from your local dealer.

CAUTION !

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OFF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below. If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either or these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth symbol \perp .


Before use

Remove the connector cover as follows.

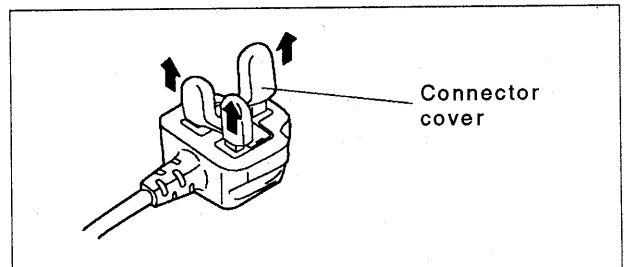


How to replace the fuse

1. Remove the fuse cover with a screwdriver.

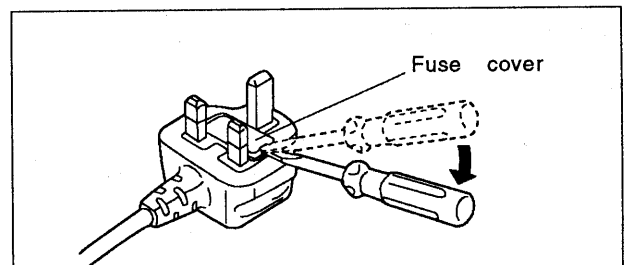

2. Replace the fuse and attach the fuse cover.

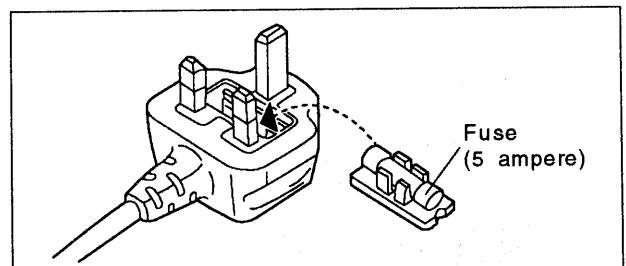

■ Operation Checks and Main Component Replacement Procedures

1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
2. For reassembly after operation checks or replacement, reverse the respective procedures.
Special reassembly procedures are described only when required.
3. Select items from the following index when checks or replacement are required.
4. Refer the Parts No. on the page of "Main Component Replacement Procedures", if necessary.

• Contents

• Disassembly Procedures

- | | |
|---|-------|
| 1. Removal of the CD Changer Unit | 5 |
| 2. Disassembly of the Traverse Unit | 6 |
| 3. Disassembly of the CD Changer Unit | 6 & 7 |

• Assembly of the CD Changer Unit

7 & 8

• Checking Procedure for each major P.C.B.

- | | |
|--|---|
| 1. Checking of the Servo P.C.B. | 8 |
| 2. Checking of the Main, Tuner, Panel and Deck P.C.B. | 9 |

• Main Component Replacement Procedures


- | | |
|--|----|
| 1. Replacement of the Traverse Deck | 9 |
| 2. Replacement of the Power Amplifier IC and Regulator Transistors | 10 |

Warning : This product uses a laser diode. Refer to caution statements on page 3.

ACHTUNG : • Die lasereinheit nicht zerlegen.

• Die lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

■ Removal of the CD Changer Unit

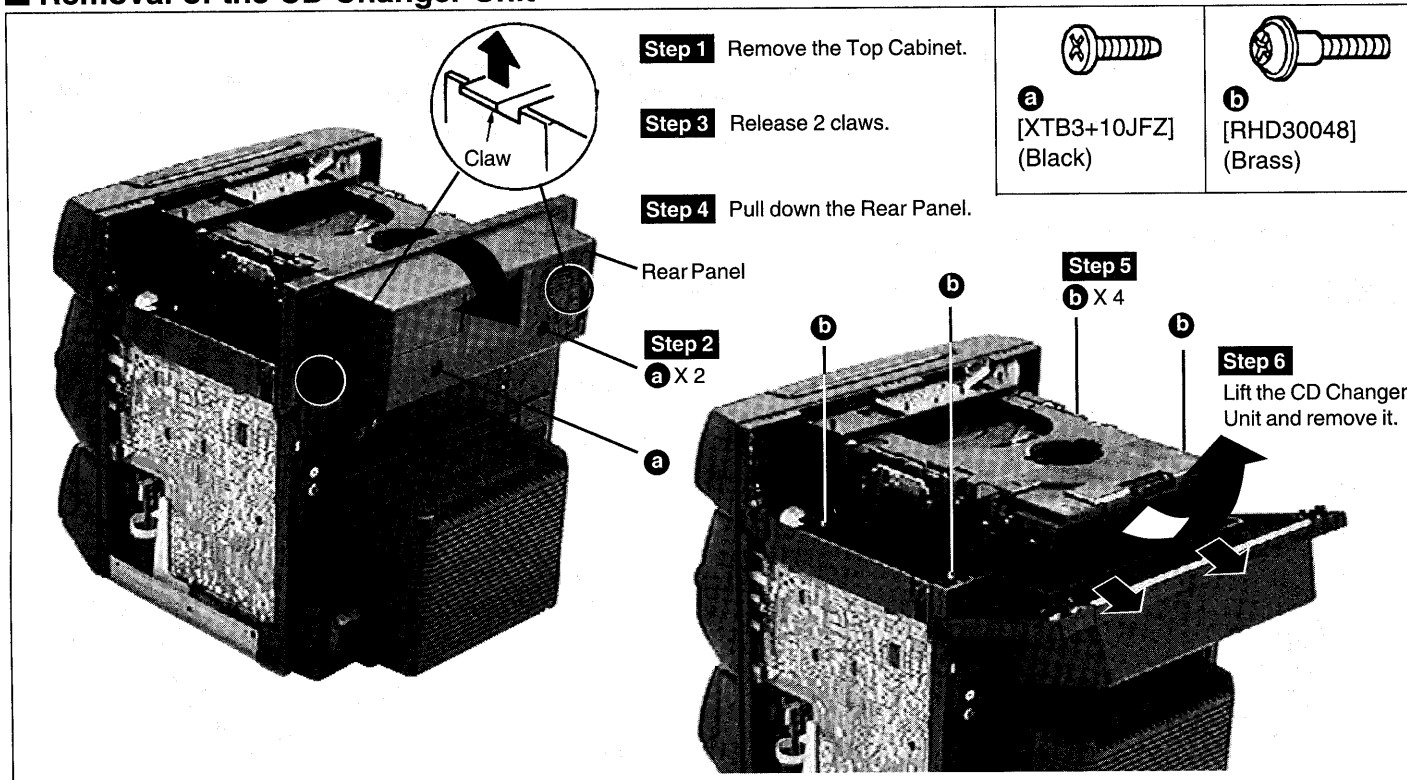


■ Before Moving or Shipping This Unit

Before moving or shipping this system:

Prepare the system as described below to prevent damage to the mechanism.


1. Remove all CDs.
2. Press CD.
3. Hold down stop button (■) for 2 seconds and then without releasing it, hold down both it and DISC 5 for 2 more seconds.
(This will turn OFF the power and set the so-called "shipping mode".)
4. Unplug the system.

Avoid strong vibrations or impact while moving the equipment. The shipping mode will turn OFF automatically when you turn the power ON the next time.

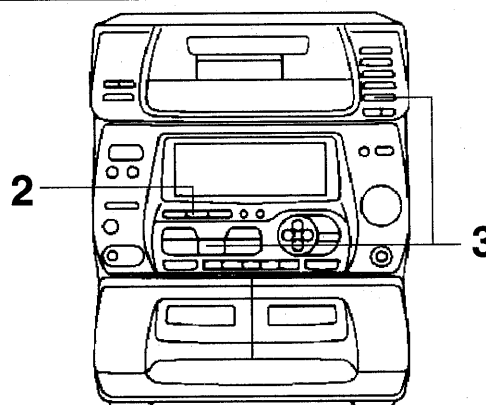


■ Disassembly of the Traverse Unit

Step 1 Follow the procedures in 'Remove of the CD Changer Unit' (Step 1 ~ Step 6).

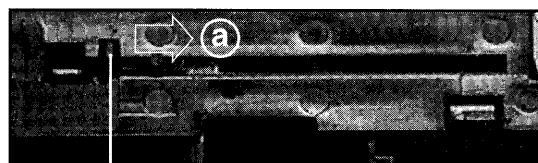


Slide Plate Lever(1)

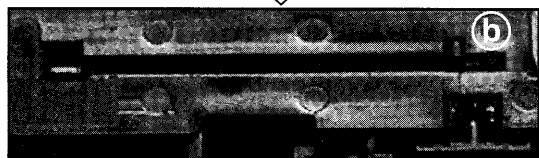


Step 2

Move the Slide Plate Lever(1) in the direction of arrow (a) to the position (b) and hold it, then lift up the stopper (c) until the Slide Plate Lever(2) eject out. Now the 3 slide plate will be open as shown in the figure 1 on the right and the traverse unit can be removed.

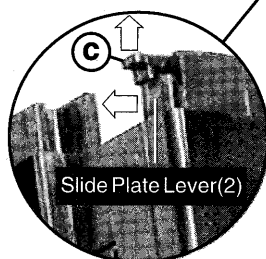

Slide Plate Lever(2)

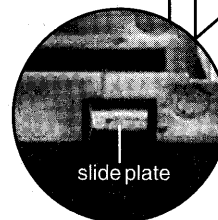

slide plate


Fig. 1

Bottom view of CD Changer Unit

Traverse unit

■ Disassembly of the CD Changer Unit

Step 1 Follow the procedures in 'Remove of the CD Changer Unit' (Step 1 ~ Step 6).

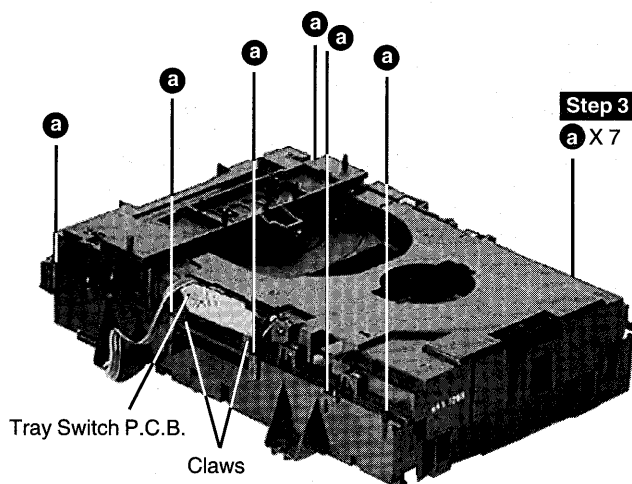


Step 2 Remove the Tray Switch P.C.B.



a
[XTB3+10JFZ]
(Black)


Step 4 Remove the Mechanism Cover Ass'y.

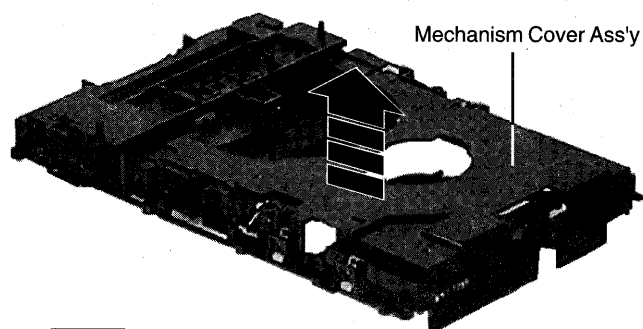

Mechanism Cover Ass'y

Step 5

Remove the Disc Tray sided on the Mechanism Base Ass'y.


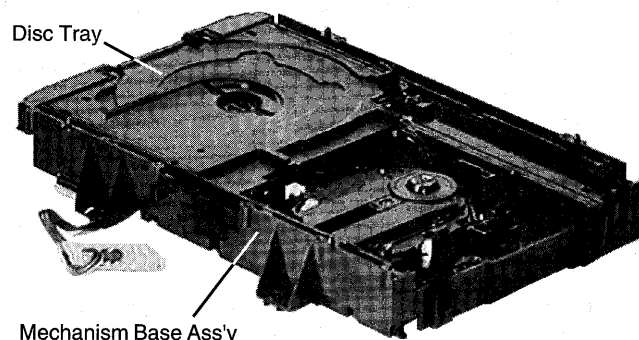


Disc Tray


Mechanism Base Ass'y

Step 6

Unlock the Base Lock Lever in the direction of arrow (a).

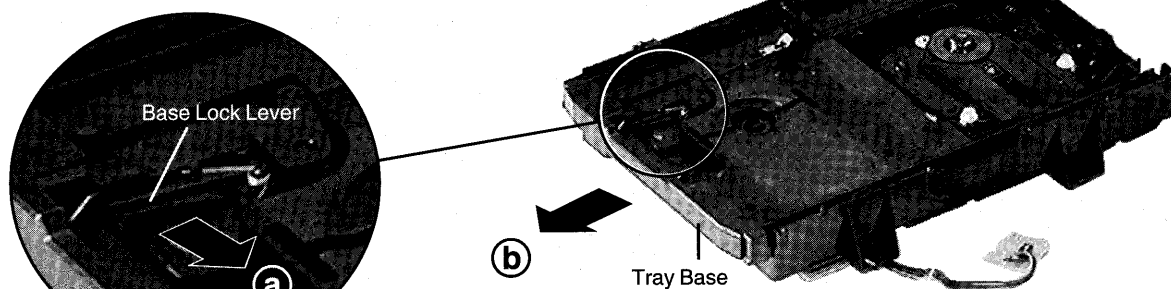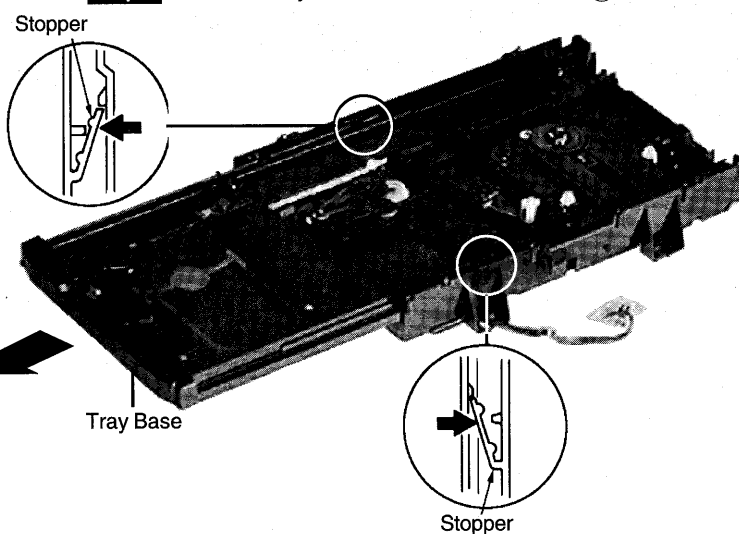**Step 7** Draw the Tray Base in the direction of arrow (b) until it will be stopped.**Step 8**


Release 2 stoppers manually and pull out the Tray Base in the direction of arrow (c).

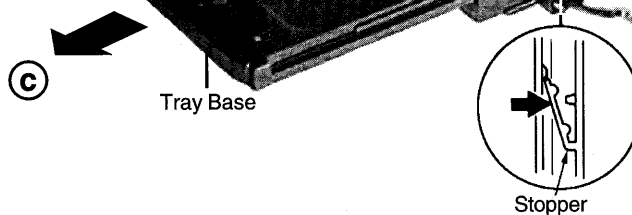


■ Assembly of the CD Changer Unit

Step 1

Move the Drive Rack in the direction of arrow (a) to the position as shown in the diagram below and the Carrier Lever in the direction of arrow (b) fully until the Carrier Lever is locked.

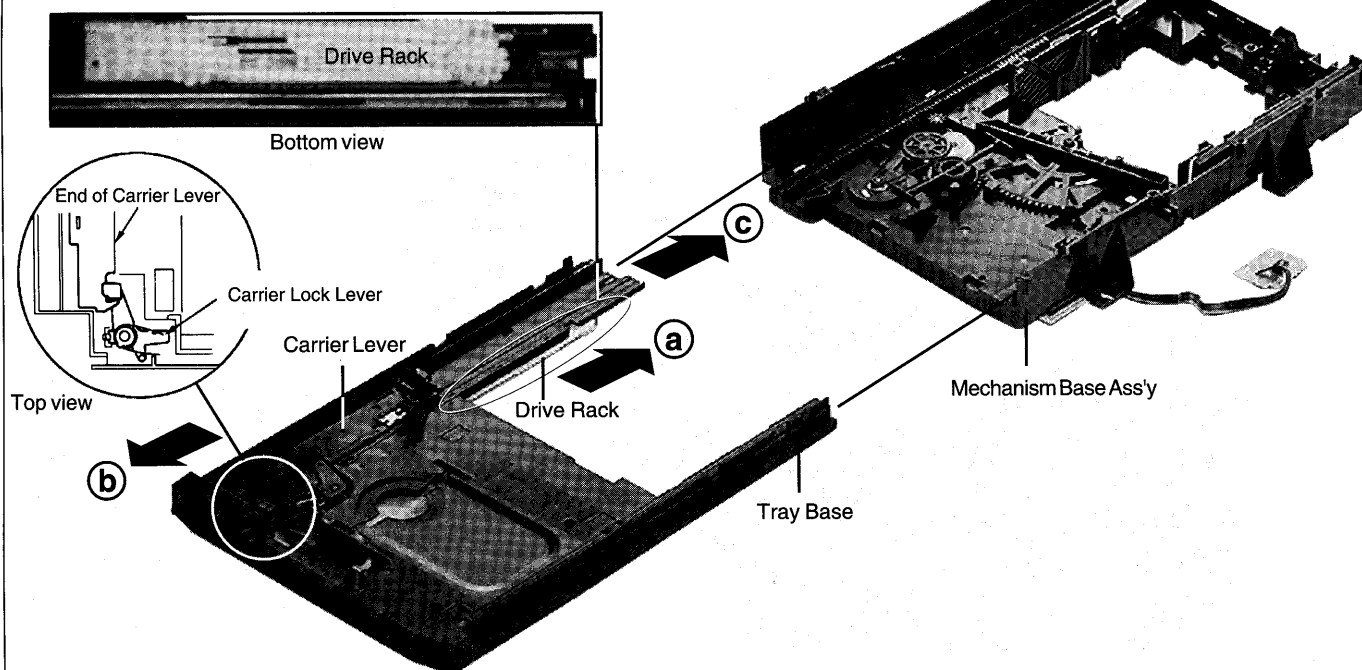

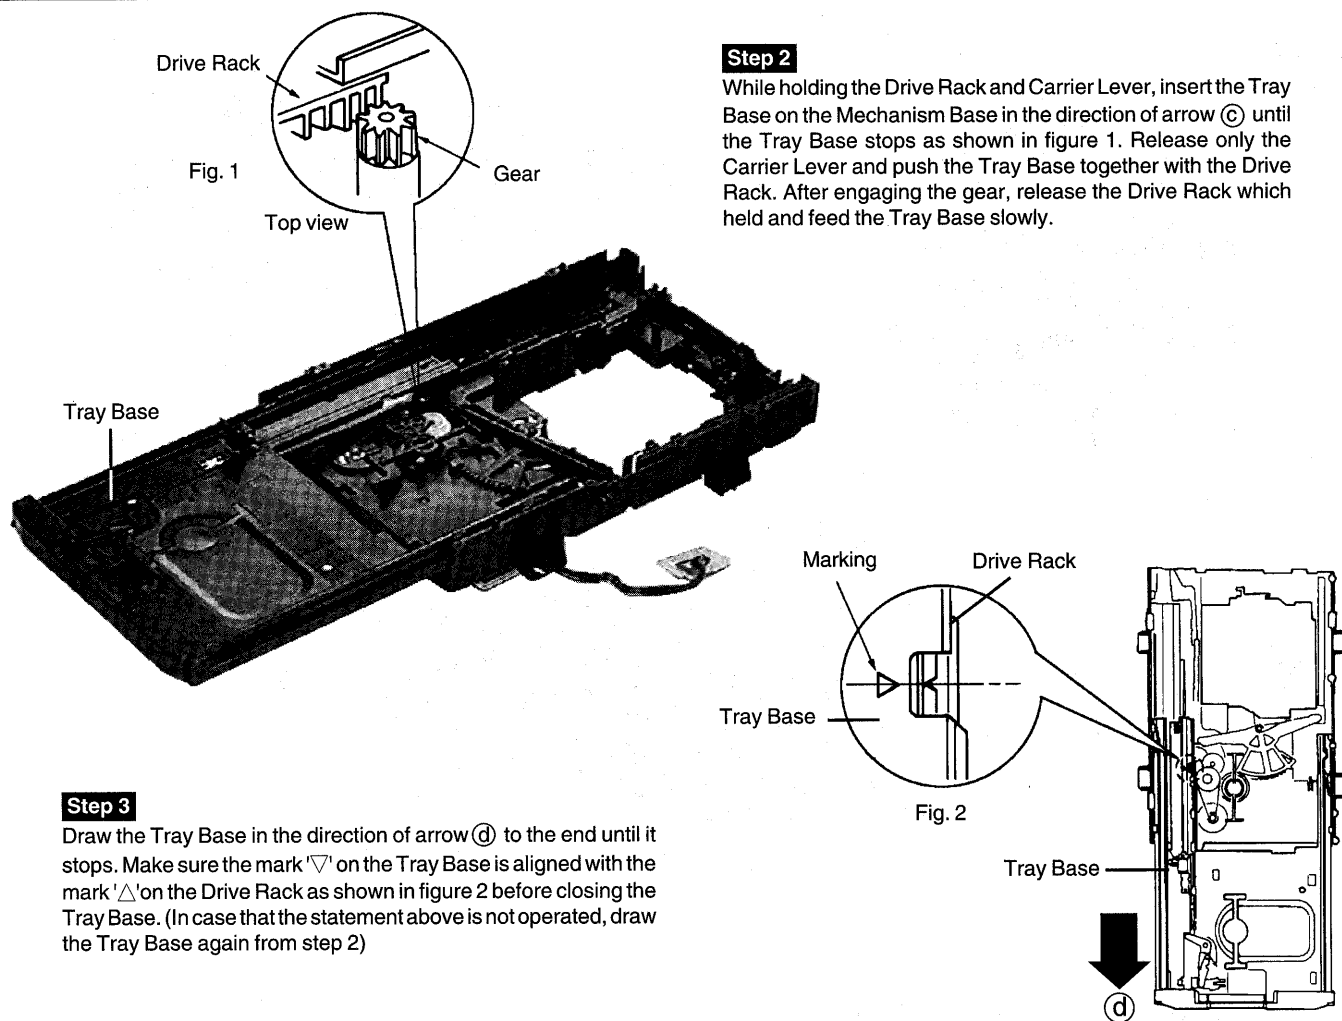


■ Checking Procedure for each major P.C.B.

1. Checking of the Servo P.C.B.

Step 1 Follow the procedures in 'Disassembly of the Traverse Unit' (**Step 1** ~ **Step 2**).

Step 2


Slide in the Traverse Unit into a slot on the top of the CD Changer Unit and then stand it.

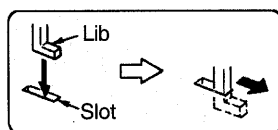

Servo P.C.B.

Traverse unit

Disc

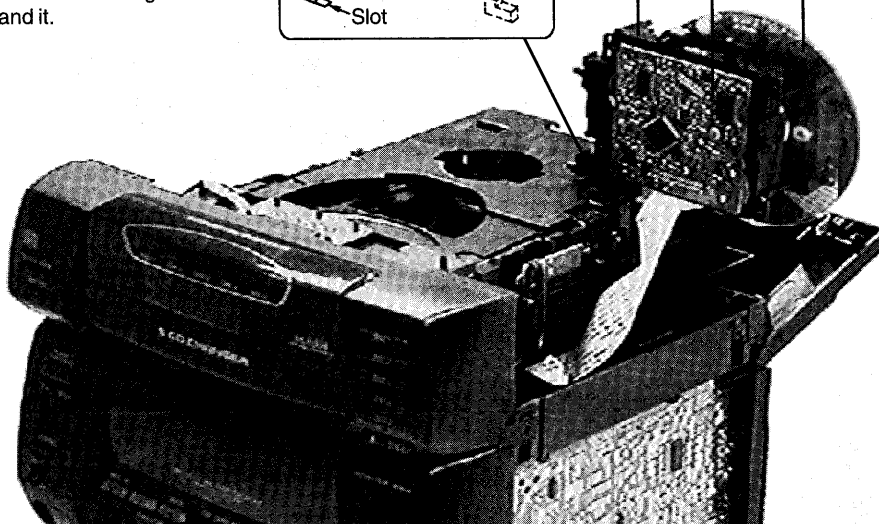


Step 3

Attach the disc and clumper with magnet to the Traverse Unit as shown in the diagram on the left, then check the Servo P.C.B. (Refer to page 13 of how to check the CD Unit without connecting to the CD Changer Loading Mechanism.)


2. Checking of the Main, Tuner, Panel and Deck P.C.B.

Step 1 Follow the procedures in 'Removal of the CD Changer Unit' (**Step 1** ~ **Step 4**).

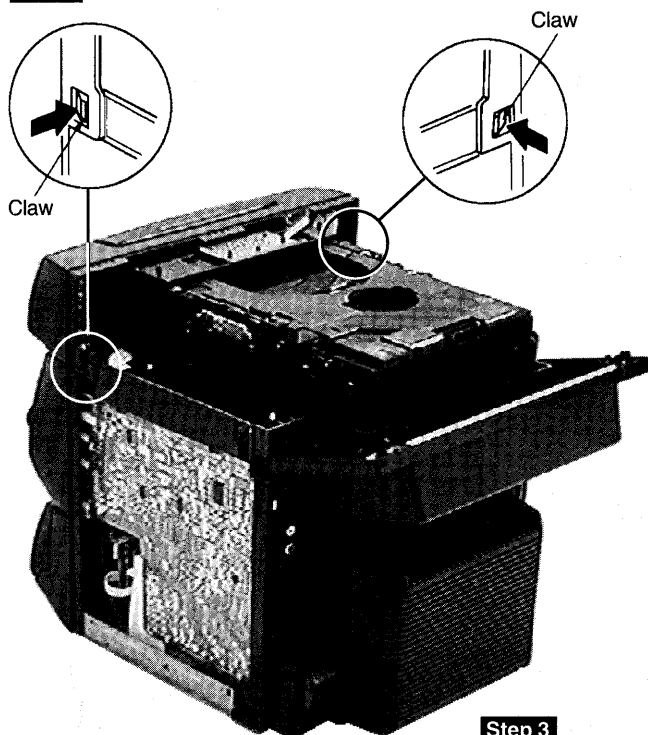

Step 2

Remove the CD Changer Chassis and CD Changer Unit with releasing the claws. (Put the CD Changer Chassis and Unit to the left side of the set)

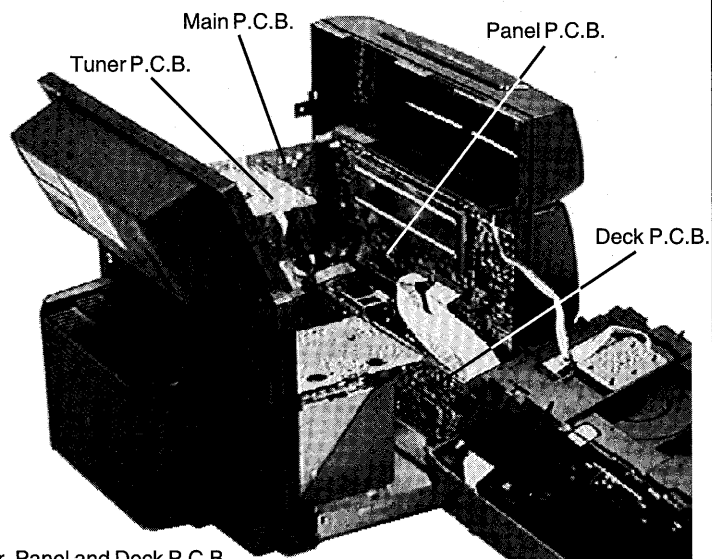

Step 3

Check the Main, Tuner, Panel and Deck P.C.B.


■ Main Component Replacement Procedures

1. Replacement of the Traverse Deck

Step 1 Follow the procedures in 'Disassembly of the Traverse Unit' (**Step 1** ~ **Step 2**).

Step 2

a X 2

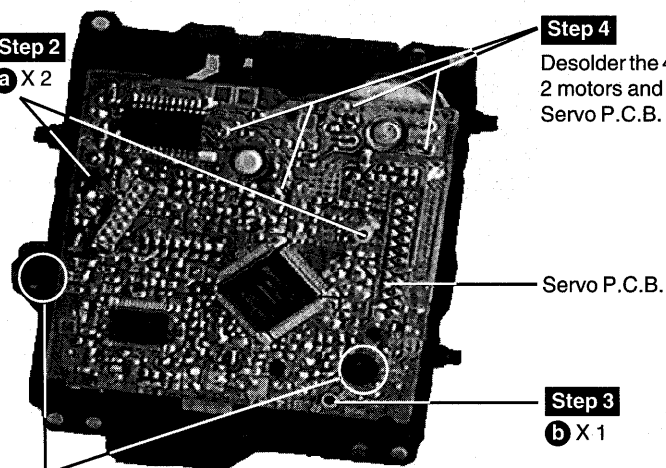


Step 4

Desolder the 4 legs of the 2 motors and pull out the Servo P.C.B.


Step 3

b X 1

Step 5 Widen the 2 bosses with a flat screwdriver and pull out the 2 pins. Then remove the Traverse Deck.

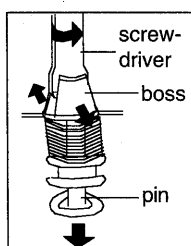


Note :
Insert a short pin into the flexible cable for traverse unit.

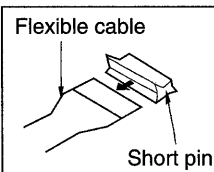

Traverse Deck


Servo P.C.B.

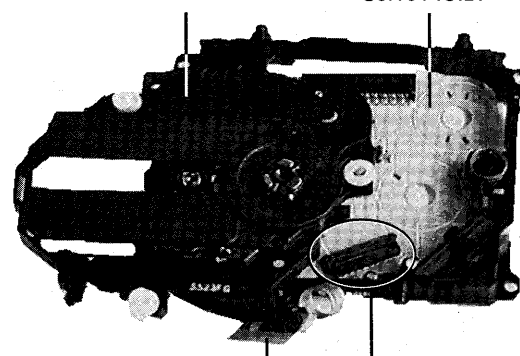

Step 6

Remove the flexible cable CN701.

• Removal of the flexible cable
Push the top of the connector in the direction of the arrow ①, and then pull out the flexible cable in the direction of the arrow ②.

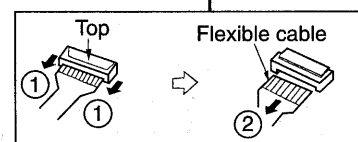

a



[XTV2+6G] (Brass)


b



[XTN2+6G] (Brass)

2. Replacement of the Power Amplifier IC and Regulator Transistors.

Step 1 Follow the procedures in 'Checking of the Main, Tuner, Panel and Deck P.C.B.' and remove the Front Panel.

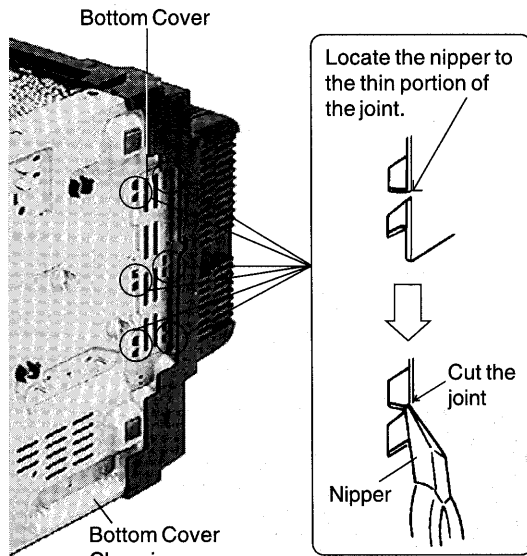

Step 2

Cut the joints (6 portion) between bottom cover and bottom cover chassis ass'y with a nipper.

Step 3



After cutting the joints (6 portions), bend the portions of the bottom chassis ass'y in the direction of arrow @ with pliers. (Step 2 must be performed to avoid injury by sharp edge.)

Step 4

Unsolder the terminals of Power IC or Regulator Transistors on the solder surface.





Step 5

Remove 3 screws fixed to the Power IC and Transistor Holder, then remove Power IC, Transistor Holder and Regulator Transistors.

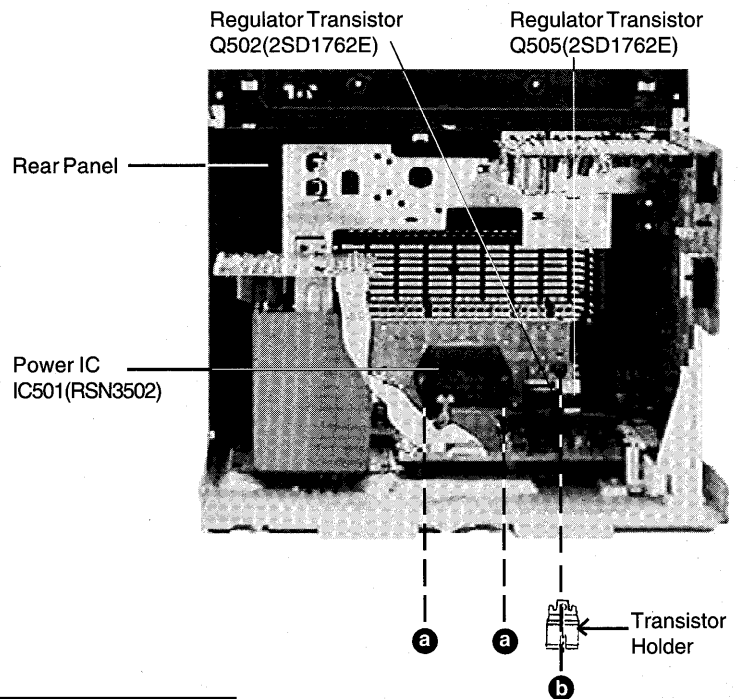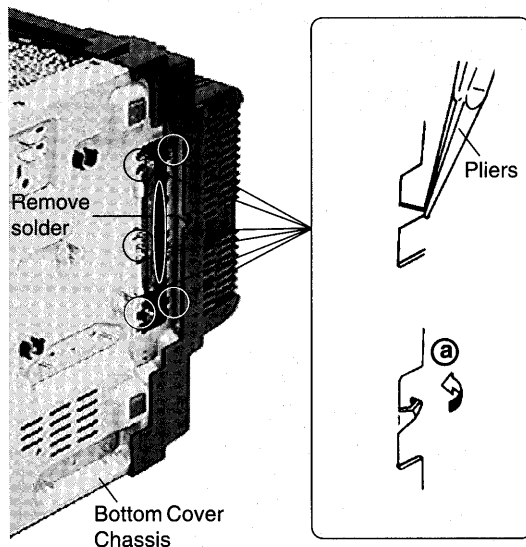

Assembly of Bottom Cover

After replacing the Power IC or Regulator Transistor, upset the bottom cover and align the ribs of bottom cover to the lugs on the bottom chassis ass'y. After mounting the bottom cover on the bottom chassis ass'y, fix it with a screw.

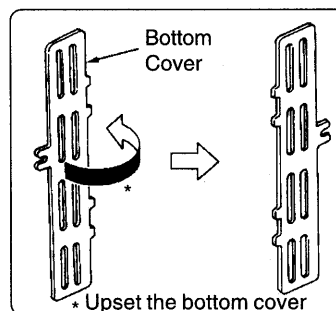
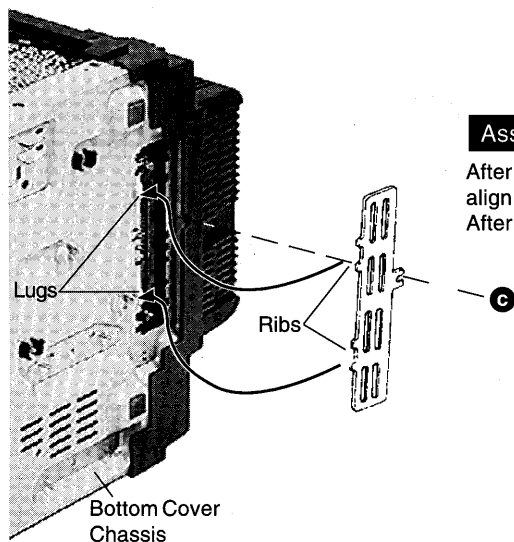


■ Self-Diagnostic Display Function

■ Self-diagnostic display

This unit is equipped with a self-diagnostic display function which, if a problem occurs, will display an error code corresponding to the problem. Use this function when performing maintenance on the unit.

■ How to enter the Self-Diagnostic Function

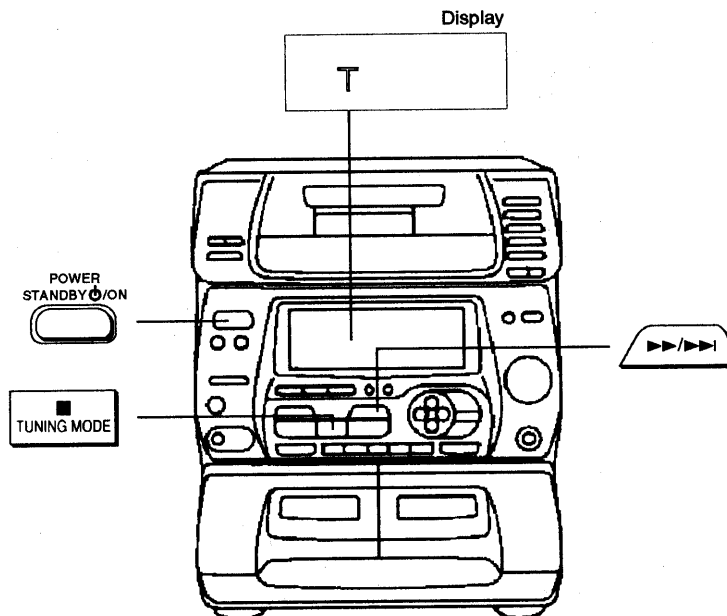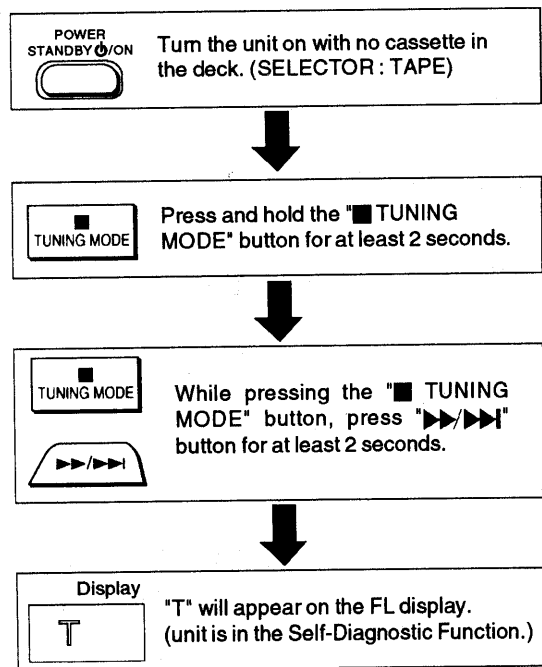

■ Cassette Mechanism Test (For error code H01, H02, H03, F01, F02)

1. Press "TAPE, DECK 1/2" to select Deck 2.
2. Load a cassette tape with the erasure prevention tab, remove from left side only and close the cassette holder.
3. Press "F.F." (Tape will be stop after 2 seconds).
4. Load a cassette tape with the erasure prevention tab, remove from right side only and close the cassette holder.
5. Press "R.R." (Tape will be stop after 2 seconds).
6. Load a pre-recorded tape with both side and close the cassette holder.
7. Press "▶ FM MODE/BP" (After TPS function, tape will stop automatically).
8. Press "REC START/STOP" (Tape will not move).
9. Press "TUNING MODE" to indicate Error code.
 - If several problem exist, error code will change each time when "TUNING MODE" is pressed. (e.g. H01 → H03 → F01 etc.)
10. Press "TAPE, DECK 1/2" to select Deck 1.
11. Repeat step 2 to 9 to test Deck 1. (Tape Deck 1 will not check H02 because of no recording function)

■ CD Mechanism Test (F15, F16, F25 ~ F28, F75)

1. Press "CD".
2. Press "CHECK-NEXT/-AUTO".
3. Press "TUNING MODE" to indicate Error Code.
 - If several problem exist, error code will change each time when "TUNING MODE" is pressed. (e.g. F15 → F16 → F25 etc.)

■ To clear all Error code

1. Press "TUNING MODE" button for 5 seconds.
2. FL indicator shows "CLEAR" for 1 second and change to "T".

■ How to get out from Self-Diagnostic function

1. Press "POWER" button OFF.

■ Power Amplifier Failure (F61)

1. When power amplifier fail, F61 will indicate automatically.

■ Description of Error Code

(1) Error detection for Cassette Mechanism block

No.	Error	Error Display	Problem condition
1	MODE SW detection error	H01	Faulty operation of cassette mechanism. Faulty contact or short-circuit of mechanism mode switch (S951, S971).
2	REC INH SW detection error	H02	Recording not possible. Faulty contact or short-circuit of REC INH switch (S974, S975).
3	HALF SW detection error	H03	Playback can not perform. Faulty contact or short-circuit of HALF switch (S952, S972).
4	Reel Pulse detection error	F01	The tape advances slightly and then stops. Faulty reel pulse, faulty hole detect IC (IC951, IC971).
5	TPS abnormal	F02	Cassette deck will not perform TPS function. Faulty playback EQ/recording amplifier IC (IC101).

(2) Error detection for CD/Changer block

No.	Error	Error Display	Problem condition
1	REST SW detection error	F15	CD does not function. This error occurs when the Optical Pick Up REST SW (S701) is not detected within the specified time (about 8 seconds)
2	S3 (TUP) detection error	F16	CD does not function. This error occurs when S3 (Traverse up detection) is not ON or OFF within the specified time.
3	S4 (DRO) detection error	F25	Tray does not stay open. This error occurs when S4 (Tray open detection) is not ON or OFF during OPEN/CLOSE operation within the specified time.
4	Transmission error between CD servo LSI and micon	F26	CD does not function. This error occurs when the POWER is ON for the CD block and an error is detected after the transmission has started.
5	S5 (TNO) detection error	F27	Tray number does not detect correctly. This error occurs when S5 (Tray number detection) can not be detected normally or when the TRAY No. is uncertain.
6	S1 (STK), S2 (PLY) detection error	F28	CD loading mechanism does not move correctly. This error occurs when S1 (stocker position detection) is not ON or OFF, or S2 (play position detection) is not ON or OFF within the specified time.
7	CD power error	F75	CD does not function. Check if CDRST is H for SELECTOR at CD. If it is not H after 1 second, it shall be memorised as an error. (IC702)


(3) Power Supply related error detection

No.	Error	Error Display	Problem condition
1	POWER AMP output abnormal	F61	When POWER is switched on, power become off automatically. During normal operation, if DC DET become L, PCNT shall become L and the error display on the left shall be displayed. (IC501)

■ CD Test Mode Function

This CD test mode is provided to check CD unit without connecting to changer loading mechanism. This mode shall operate CD PLAY with CD unit being connected only and CD Automatic Alignment result is shown on FL display.

■ How to set CD test mode

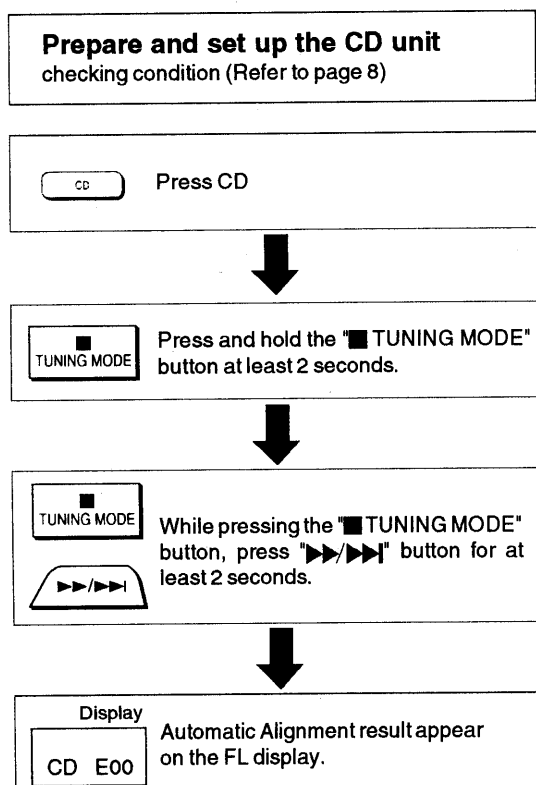

■ CD Automatic Alignment result indication

This function provided indication of error code as the result of Automatic Alignment of CD (Tracking, Focus, Offset, etc.). Based on these error codes, the faulty area can be located.

■ Error code Explanation

- The unit is satisfactory if the error code is E00
- Before testing, make sure that the test disc is free of scratches, dirt and that the optical pick up lens is clean.

Error code	E00	E01	E02	E03	E04	E05	E06	E07	E08	E09	E0A	E0B	E0C	E0D	E0E	E0F
Focus offset	○	✖	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tracking offset	○	✖	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Focus Gain (Rough)	○	✖	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tracking Gain (Rough)	○	—	○	✖	○	✖	○	✖	○	✖	○	✖	○	✖	○	✖
Tracking balance	○	—	✖	✖	○	✖	✖	✖	○	○	✖	✖	○	○	✖	✖
Focus balance	○	—	○	○	✖	✖	✖	✖	○	○	○	○	✖	✖	✖	✖
Tracking or Focus Gain (Fine)	○	—	○	○	○	○	○	○	✖	✖	✖	✖	✖	✖	✖	✖

○ Satisfy


✖ Fault

(✖ Fault either items)

■ Reliability test mode for CD / CD CHANGER

This function provided to check CD player and CD CHANGER mechanism. Use this function to check CD player and loading mechanism operation after repair or to find intermittent problem.

■ How to set reliability test mode.

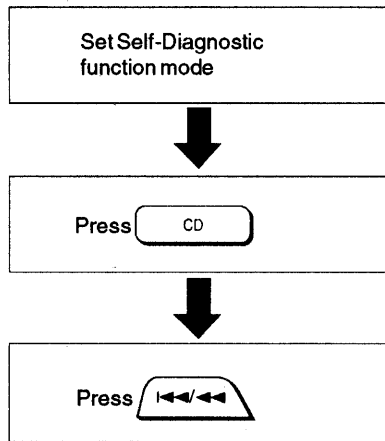

■ Operation and function

In the reliability test mode, the set repeat the following operation:

- 1) Open tray 1;
- 2) Fully OPEN condition, CLOSE 1 sec after drawer stops;
- 3) PLAY the first track of disc 1 for 2 sec;
- 4) Skip to the last track, play for 2 sec and stop;
- 5) Open tray 3;
- 6) Fully OPEN condition, CLOSE 1 sec after drawer stops;
- 7) PLAY the first track of the disc 3 for 2 sec;
- 8) Open tray 5;
- 9) Fully OPEN condition, CLOSE 1 sec after drawer stops;
- 10) Return to above step 1) after 1 sec.

- During this series of operation, the number of its operation shall be shown in the alphanumeric display repeatedly.

It shall start from

- It shall move up one counter when step 1- 10 of the above operations end.

It shall display after has been reached.

- During operation, if TNO SW and tray number detected are different, this error is counted and shown at the upper 2 digits of display. (e.g. Tray 3 pulse could not detected even when tray 3 is operating).

~

- Execute POWER OFF to cancel the reliability test mode and the self-diagnostic mode.

■ Measurements and Adjustments

< TUNER SECTION >


• LW ALLOCATION SETTING

By adjusting the allocation, you can enable this tuner to receive LW broadcasts allocated in 1 kHz steps.

1. Press and hold TUNER, BAND for approximately 5 seconds. The frequency display will be returned to the minimum frequency of the LW band and the display will begin to flash. Keep holding for approximately 5 more seconds.
2. When the display stops flashing, release TUNER, BAND. To return to the original frequency, repeat step 1 to 2.

Note

After changing the allocation setting, the frequencies you previously preset to the memory will be cleared.

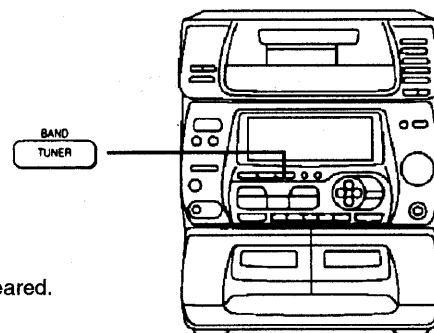

< CASSETTE DECK SECTION >

- Measurement Condition
 - Reverse-mode selector switch :
 - Tape edit : NORMAL
 - Record timer : OFF
 - Dolby NR : OFF
 - Make sure head, capstan and pressure roller are clean.
 - Judgeable room temperature $20 \pm 5^{\circ}\text{C}$ ($68 \pm 9^{\circ}\text{F}$)
- Measuring instrument
 - EVM (Electronic Voltmeter)
 - Digital frequency counter
- Test tape
 - Head azimuth adjustment (8 kHz, -20 dB); QZZCFM
 - Tape speed adjustment (3 kHz, -10 dB); QZZCWAT
 - Playback gain adjustment (315 Hz, 0 dB); QZZCFM
 - Normal reference blank tape; QZZCRA
 - CrO₂ tape; QZZCRX

• Head Azimuth Adjustment (Deck 1/2)

Caution :

- Please replace both azimuth adjustment screws (RHE5152ZB) and springs (RMB0331) simultaneously when readjusting the head azimuth. (shown in Fig. 2)
- Even if you wish to readjust the head azimuth without replacing the screws and springs, a fine adjustment cannot be done because of the screw-locking bond adhered to the azimuth screw and spring.
- Please remove the screw-locking bond left on the head base when replacing the azimuth screw.
- If you wish to readjust the head azimuth, be sure to adjust with adhering the cassette tape closely to the mechanism by pushing the center of cassette tape with your finger. (shown in Fig. 3)

1. Playback the azimuth adjustment portion (8 kHz, -20 dB) of the test tape (QZZCFM) in the forward play mode. Vary the azimuth adjusting screw until the output of the R-CH (PB OUT-R) are maximized.
2. Perform the same adjustment in the reverse play mode.
3. After the adjustment, apply screwlock to the azimuth adjusting screw.

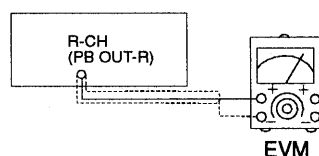


Fig. 1




Fig. 2

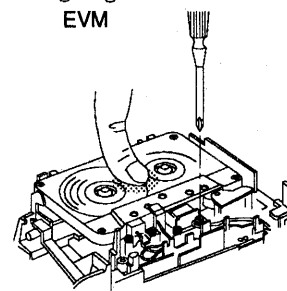


Fig. 3

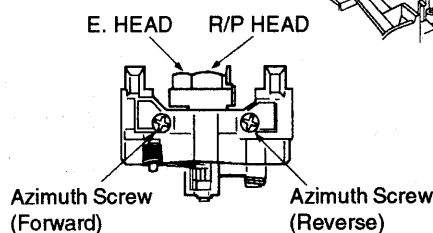


Fig. 4

• Tape Speed Adjustment (Deck 1/2)


1. Set the tape edit button to "NORMAL" position.
2. Insert the test tape (QZZCWAT) to DECK 2 and playback (FWD side) the middle portion of it.
3. Adjust VR201 (DECK 2) for the output value shown below.

Adjustment target : 2980 ~ 3020 Hz (NORMAL speed)

4. After alignment, assure that the output frequency of the DECK 2 REV and DECK 1 FWD/REV are within ± 60 Hz of the value of the output frequency of DECK 2 FWD.
5. Set the tape edit button to "HIGH" position.
6. Short-circuit between TP200 and TP10.
7. Assure that the output from DECK 1/2 are within the standard value.

Standard value : 5000 \pm 210 Hz (HIGH speed)



UNIT

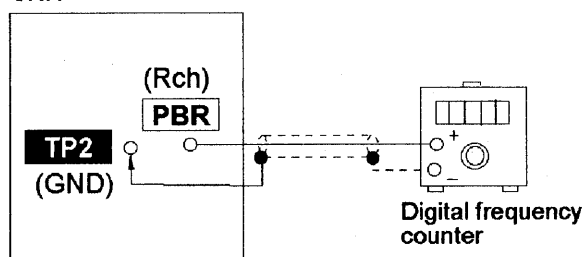

• Bias and Erase Voltage Check

1. Set the unit to "AUX" position.
2. Insert the Normal blank tape (QZZCRA) into DECK 2 and set the unit to "REC" mode (use "REC START/STOP" key).
3. Measure and make sure that the output is within the standard value.
4. Insert the CrO₂ tape (QZZCRX).
5. Repeat steps 2 and 3.

Bias voltage for Deck 2 (Standard value): $19 \pm 4\text{mV}$ (Normal)
 $27 \pm 5\text{mV}$ (CrO₂)
Erase voltage for Deck 2 (Standard value): more than 100mV (Normal)
more than 150mV (CrO₂)

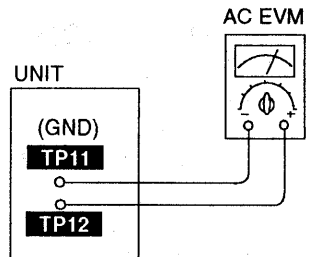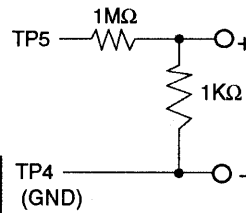


• Bias Frequency Adjustment (Deck 2)

1. Set the unit to "AUX" position.
2. Insert the Normal blank tape (QZZCRA) into DECK 2 and set the unit to "REC" mode (use "REC START/STOP" key).
3. Adjust L201 so that the output frequency is within the standard value.

Standard Value : $98 \pm 8\text{ kHz}$

• Alignment Points

<Cassette Deck Section>

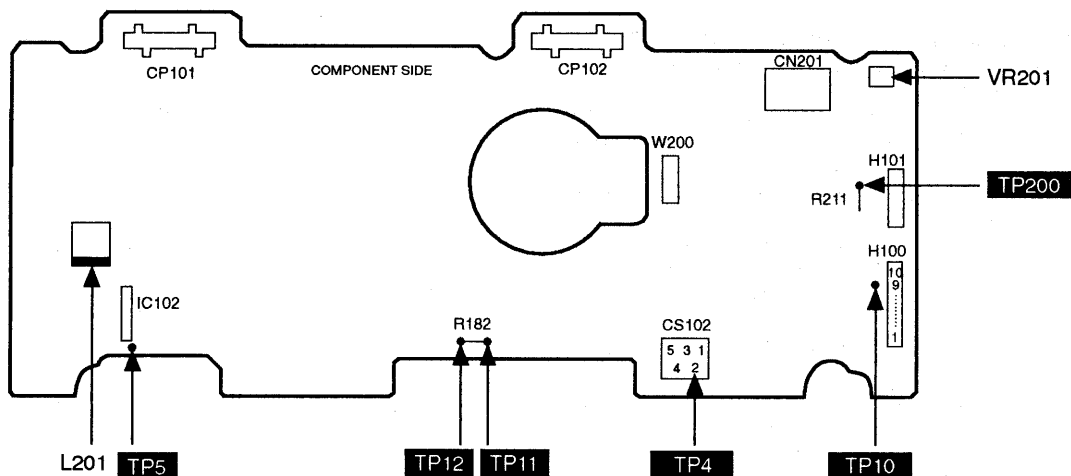

■ Terminal Function of ICs

• IC701 (AN8835SBE1) Servo Amplifier

Pin No.	Mark	I/O	Function
1	PDA	I	PD signal input
2	PDB	I	PD signal input
3	VCC	I	Power supply connection
4	LPD	I	Laser PD connection
5	LD	O	Power out for LD driving
6	RF	O	RF signal output
7	RFIN	I	RF signal input
8	CAGC	I	AGC loop filter connection
9	ARF	O	RF-AGC output
10	CSBRT	I	Capacitor for detection connection
11	CEA	I	Capacitor connection for HPF amplifier
12	BDO	O	BDO output ("H" : drop out)
13	LDON	I	LD APC input ("H" : ON, "L" : OFF)
14	GND	—	Ground connection

Pin No.	Mark	I/O	Function
15	/RFDET	O	NRFDET output ("L" : detection)
16	CROSS	O	CROSS output (Track cross signal output)
17	OFTR	O	Off-track output("L" : ON track, "H" : OFF track)
18	VDET	O	VDET output("H" : Vibration detected)
19	ENV	O	RF envelope detection
20	TEBPF	I	Vibration detection signal input
21	CCRS	I	Capacitor for LPF connection
22	TE	O	Tracking error signal output
23	FE	O	Focus error signal output
24	TBAL	I	Tracking balance signal input
25	FBAL	I	Focus balance signal input
26	VREF	O	Reference voltage output
27	PDE	I	PD signal input
28	PDF	I	PD signal input

• IC703 (AN8389SE1) Focus coil / Tracking coil / Traverse motor / Spindle motor driver

Pin No.	Mark	I/O	Function
1	VCC	I	Power supply terminal
2	VREF	I	Reference voltage input
3	IN4	I	Motor driver (4) input
4	IN3	I	Motor driver (3) input
5	GND	—	Ground connection
6	NC	—	Ground connection
7	NRESET	I	Reset input
8	GND	—	Ground connection
9	IN2	I	Motor driver (2) input
10	PC2	I	PC2 (power cut) input
11	IN1	I	Motor driver (1) input
12	PC1	I	PC1 (power cut) input (Not used, open)

Pin No.	Mark	I/O	Function
13	PVCC1	I	Power supply (1) for driver
14	PGND1	—	Ground connection (1) for driver
15	D1-	O	Motor driver (1) reverse-action output
16	D1+	O	Motor driver (1) forward-action output
17	D2-	O	Motor driver (2) reverse-action output
18	D2+	O	Motor driver (2) forward-action output
19	D3-	O	Motor driver (3) reverse-action output
20	D3+	O	Motor driver (3) forward-action output
21	D4-	O	Motor driver (4) reverse-action output
22	D4+	O	Motor driver (4) forward-action output
23	PGND2	—	Ground connection (2) for driver
24	PVCC2	I	Power supply (2) for driver

• IC702 (MN662741RPA) Servo processor / Digital signal processor / Digital filter / D/A converter

Pin No.	Mark	I/O	Function
1	BCLK	O	Serial bit clock terminal (Not used, open)
2	LRCK	O	L/R discriminating signal (Not used, open)
3	SRDATA	O	Serial data (Not used, open)
4	DVDD1	I	Power supply (digital circuit) terminal
5	DVSS1	—	GND (digital circuit) terminal
6	TX	O	Digital audio interface signal
7	MCLK	I	Microprocessor command clock signal
8	MDATA	I	Microprocessor command data signal
9	MLD	I	Microprocessor command load signal
10	SENSE	O	Sense signal output (OFT,FESL,MAGEND,NAJEND,POSAD,SFG)
11	/FLOCK	O	Optical servo condition(focus)("L" : lead-in)
12	/TLOCK	O	Optical servo condition(tracking)("L" : lead-in)
13	BLCK	O	Sub-code block clock (f=75Hz)
14	SQCK	I	External clock signal input for sub-code Q register.
15	SUBQ	O	Sub-code Q code output
16	DMUTE	I	Muting input ("H" : mute)
17	STAT	O	Status signal output (CRC,CUE,CLVS,TTSTVP,FCLV,SQCK)
18	/RST	I	Reset input
19	SMCK	O	1/2-divided clock signal of crystal oscillating at MSEL = "H" (fSMCK=8.4672MHz) 1/4-divided clock signal of crystal oscillating at MSEL="L" (fSMCK=4.2336MHz)
20	PMCK	O	1/192-divided clock signal of crystal oscillating (fPMCK=88.2kHz) (Not used, open)
21	TRV	O	Traverse servo control output
22	TVD	O	Traverse drive signal output
23	PC	O	Spindle motor ON signal output ("L" : ON)
24	ECM	O	Spindle motor drive signal output (forced mode output)
25	ECS	O	Spindle motor drive signal output (servo error signal output)
26	KICK	O	Kick pulse output
27	TRD	O	Tracking drive output
28	FOD	O	Focus drive output
29	VREF	I	D/A (drive) output (TVD,ECS,TRD,FOD, FBAL,TBAL) Reference voltage input.
30	FBAL	O	Focus balance adjustment output (Not used,open)
31	TBAL	O	Tracking balance adjustment output
32	FE	I	Focus error signal input (analog input)
33	TE	I	Tracking error signal input (analog input)
34	RFENV	I	RF envelope signal input
35	VDET	I	Vibration detection signal input ("H" : detection)

Pin No.	Mark	I/O	Function
36	OFT	I	Off-track signal input ("H" : off track)
37	TRCRS	I	Track cross signal input
38	/RFDET	I	RF detection signal input ("L" : detection)
39	BDO	I	Dropout signal input ("H" : Dropout)
40	LDON	O	Laser on signal output ("H" : ON)
41	TES	O	Tracking error shunt signal output ("H" : shunt)
42	PLAY	O	Play signal out ("H" : PLAY)
43	WVEL	O	Double speed status signal output ("H" : DS)
44	ARF	I	RF signal input
45	IREF	I	Reference current input
46	DRF	I	DSL bias (Not used, open)
47	DSLIF	I/O	DSL loop filter
48	PLLIF	I/O	PLL loop filter
49	VCOF	I/O	VCO loop filter (Not used, open)
50	AVDD2	I	Power supply input (for analog circuit)
51	AVSS2	—	GND (for analog circuit)
52	EFM	O	EFM signal output (Not used, open)
53	PCK	O	PLL extraction clock output (Not used, open) (fPCK=4.321 MHz during normal playback)
54	PDO	O	Phase comparison signal of EFM and PCK signals (Not used, open)
55	SUBC	O	Sub-code serial data output (Not used, open)
56	SBCK	I	Sub-code frame clock signal output (fCLDCK=7.35kHz during normal playback)
57	VSS	—	GND
58	X1	I	Crystal oscillating circuit input (f=16.9344MHz)
59	X2	O	Crystal oscillating circuit output (f=16.9344MHz)
60	VDD	I	Power supply input (for oscillating circuit)
61	BYTCK	O	Byte clock output (Not used, open)
62	/CLDCK	O	Clock input for sub-code serial data (Not used, open)
63	FCLK	O	Crystal frame clock signal output (fCLK=7.35kHz, double=14.7kHz)
64	PFLAG	O	Interpolation flag output ("H" : interpolation) (Not used, open)
65	FLAG	O	Flag output (Not used, open)
66	CLVS	O	Spindle servo phase synchronizing signal output ("H" : CLV, "L" : rough servo) (Not used, open)
67	CRC	O	Sub-code CRC checked output ("H" : OK, "L" : NG) (Not used, open)
68	DEMPH	O	De-emphasis ON signal output ("H" : ON) (Not used, open)
69	RESY	O	Frame resynchronizing signal output (Not used, open)
70	/RST2	I	Reset input through MASH circuit ("L" : Reset)
71	/TEST	I	Test input

Pin No.	Mark	I/O	Function
72	AVDD1	I	Power supply input (for analog circuit)
73	OUTL	O	Left channel audio signal output
74	AVSS1	—	GND
75	OUTR	O	Right channel audio signal output
76	RSEL	I	RF signal polarity assignment input (at "H" level, RSEL="H", at "L" level, RSEL="L")
77	CSEL	I	Crystal oscillating frequency designation input


Pin No.	Mark	I/O	Function
			"L" : 16.9344MHz "H" : 33.8688MHz
78	PSEL	I	Test input (normally "L") (Not used, open)
79	MSEL	I	Output mode switching of SUBQ terminal ("H" : Q code buffer mode)
80	SSEL	I	Output frequency switching for SMCK terminal "H" : SMCK=8.4672MHz "L" : MCK=4.2336MHz (Not used, open)


• IC601 (M38197MA136F) System Microprocessor

Pin No.	Mark	I/O	Function
1	DECK 2	I	Mecha condition input (PLAY, FF/RW, MOTOR)
2	DECK 1	I	Mecha condition input (PLAY, FF/RW, MOTOR)
3	TPS	I	TPS input
4	CRT	—	CR timer
5	KEY 4	I	Key 4 input
6	KEY 3	I	Key 3 input
7	KEY 2	I	Key 2 input
8	KEY 1	I	Key 1 input
9	SER 1	O	LED drive clock output
10	VOL OUT	O	Volume control DA output
11	SER 2	O	LED drive data output
12	SER 3	O	LED drive data output
13	SER 4	O	Key control clock output
14	SER 5	O	Key control strobe output
15	SPEANA INPUT	I	Spectrum analyser input
16	CHG SW1	I	CD changer SW input (STK_SW, TUP_SW)
17	CHG SW2	I	CD changer SW input (DR0_SW, PLY_SW, TNO_SW)
18	CDRST	I	CD reset input
19	STATUS	I	CD signal processor status input
20	SQCK	O	CD subcode clock output
21	NC	—	No connection
22	SUBQ	I	CD subcode data input
23	TLOCK	I	CD tracking lock input
24	FLOCK	I	CD focus lock input
25	SENSE	I	CD servo processor sense input
26	MLD/ PLLCE	O	CD command load output
27	MDATA/ PLLDATA	O	CD command data output
28	MCLK/ PLLCLK	O	CD command clock output
29	RESTSW	I	CD REST detect SW input
30	BLKCK	I	CD block clock input















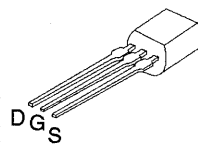
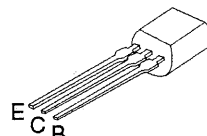
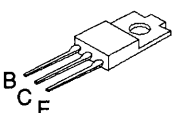
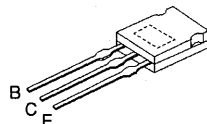
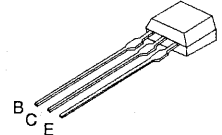
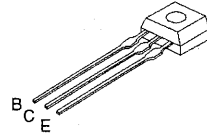
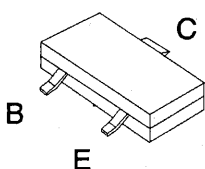
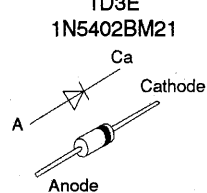
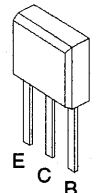
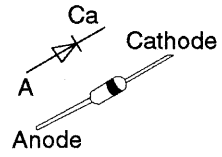
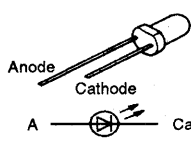
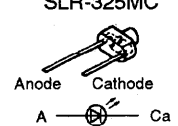
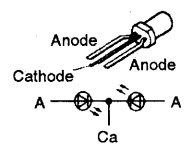
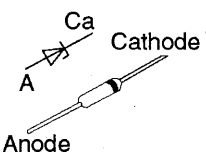
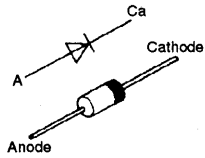
Pin No.	Mark	I/O	Function
31	RMT	I	Remote control signal input
32	DCDET	I	DC detect input
33	P.CONT	O	Power control output
34	/HALT	I	AC failure detect input
35	/RESET	I	RESET input
36	XCIN	I	X'tal oscillator (f = 32.768 kHz sub clock)
37	XCOUT	O	X'tal oscillator (f = 32.768 kHz sub clock)
38	XIN	I	X'tal oscillator (f = 6.0 MHz Main clock)
39	XOUT	O	X'tal oscillator (f = 6.0 MHz Main clock)
40	VSS	—	Ground (0V)
41	MBP1	O	MPU beat proof output 1
42	MBP2	O	MPU beat proof output 2
43	CDGMUTE	—	No connection
44	/CDGRESET	—	No connection
45	CD DMUTE	O	CD digital mute output
46	SPE CONT A	—	No connection
47	SPE CONT B	—	No connection
48	SPE CONT C	—	No connection
49-52	GRD16-GRD13	—	No connection
53	GRD12	O	FL digit (grid) drive signal output
54-55	GRD11-GRD10	—	No connection
56-64	GRD9-GRD1	O	FL digit (grid) drive signal output
65-88	AND1-AND24	O	FL segment (anode) drive output
89	JOG A	I	Jog dial signal input A
90	JOG B	I	Jog dial signal input B
91	VCC	I	Power supply (+5V)
92	REGION IN	I	Area setting terminal
93	MKCLK	O	Cassette deck control clock signal output
94	MKDATA	O	Cassette deck control data output
95	SD IN	I	Tuner signal DET input
96	STEREO IN	I	Tuner stereo DET input
97	DO IN	I	Tuner PLL if data input
98	VP	I	Power input (-30V)
99	VSS	—	Ground (0V)
100	VREF	I	Reference for A-D

■ Wiring Connection Diagram

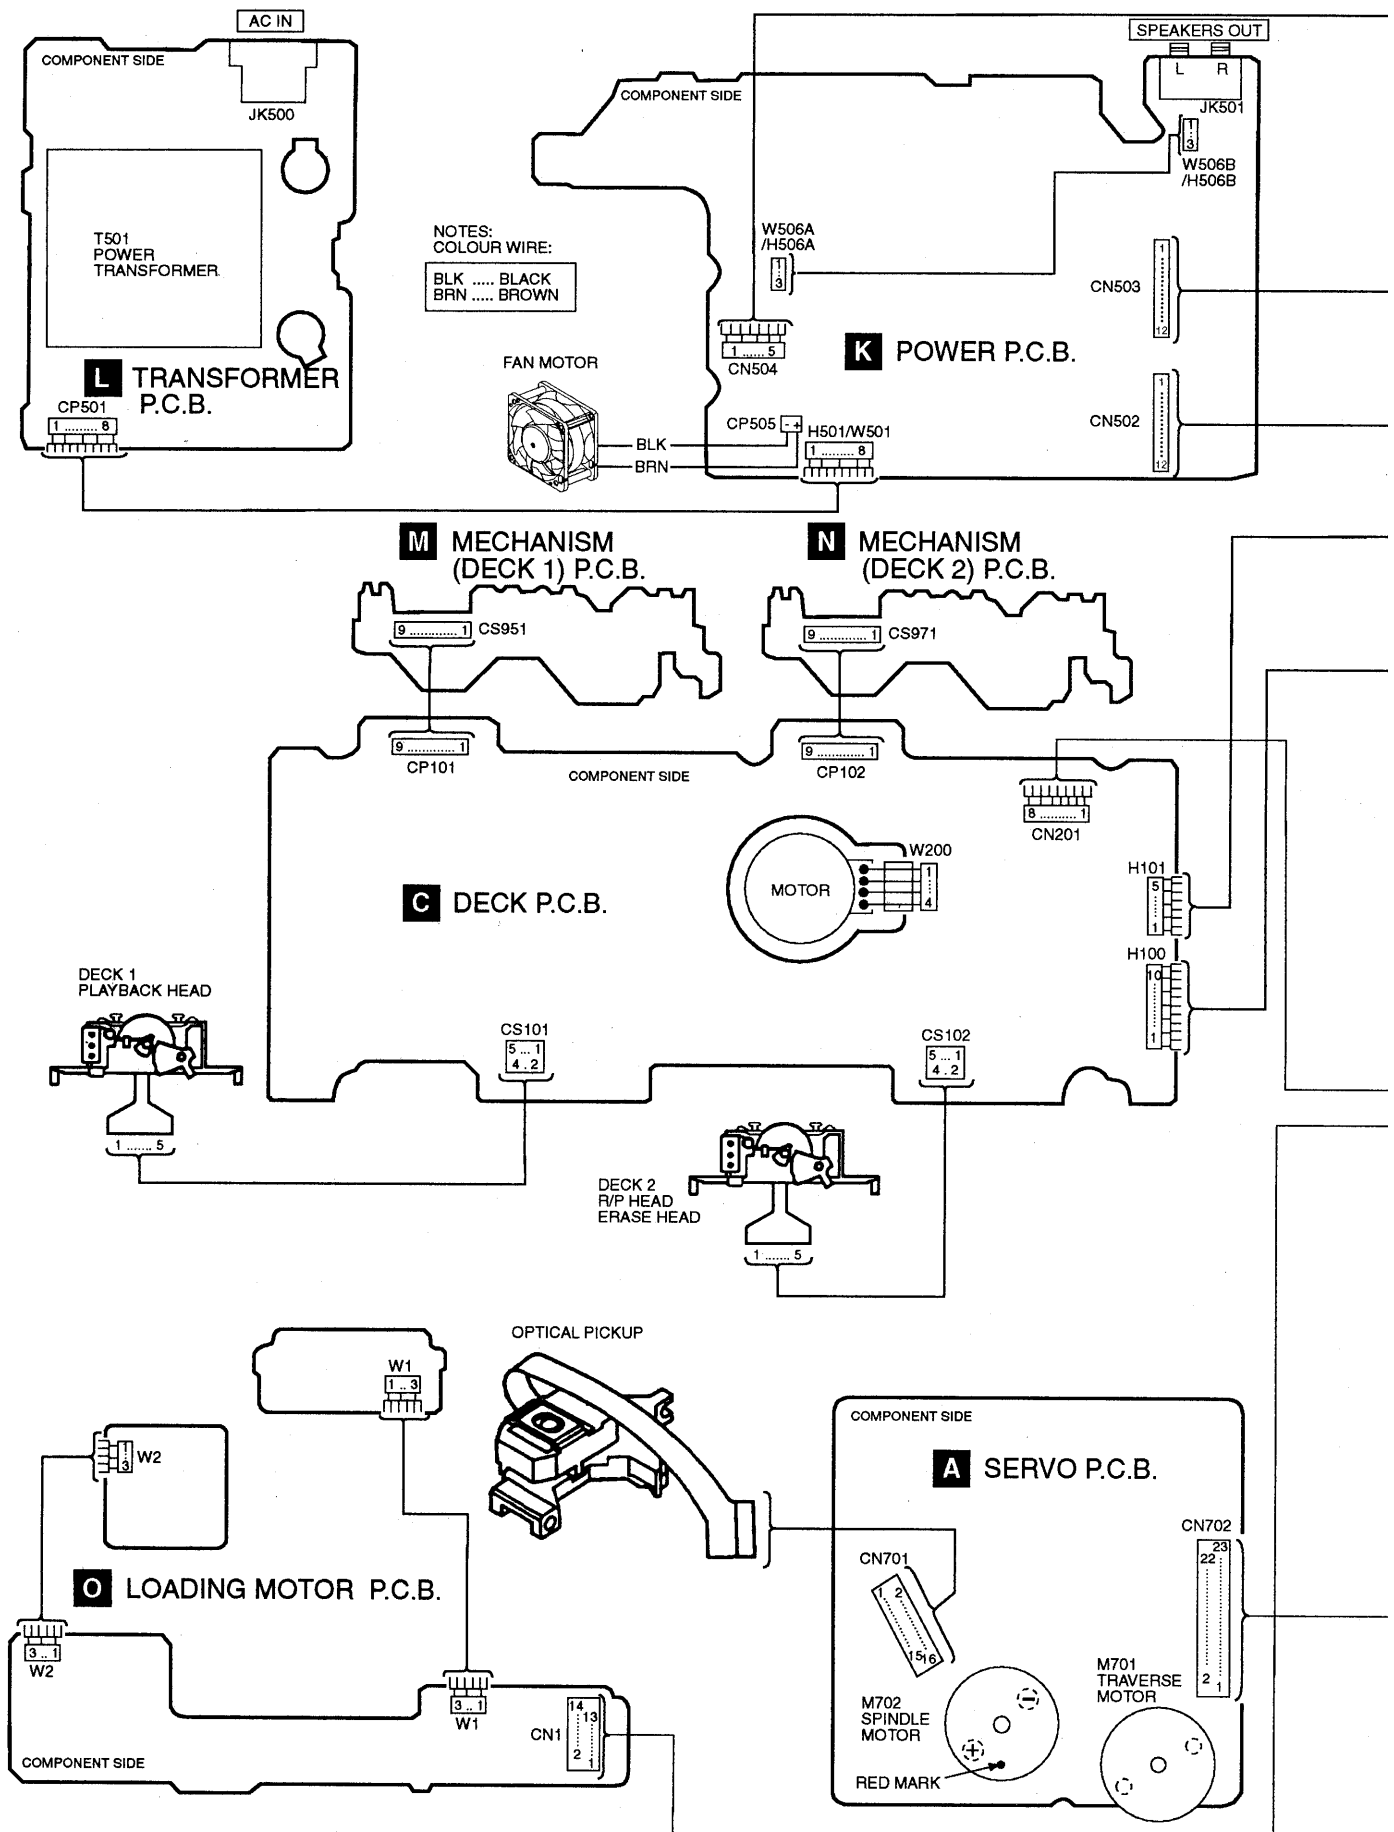


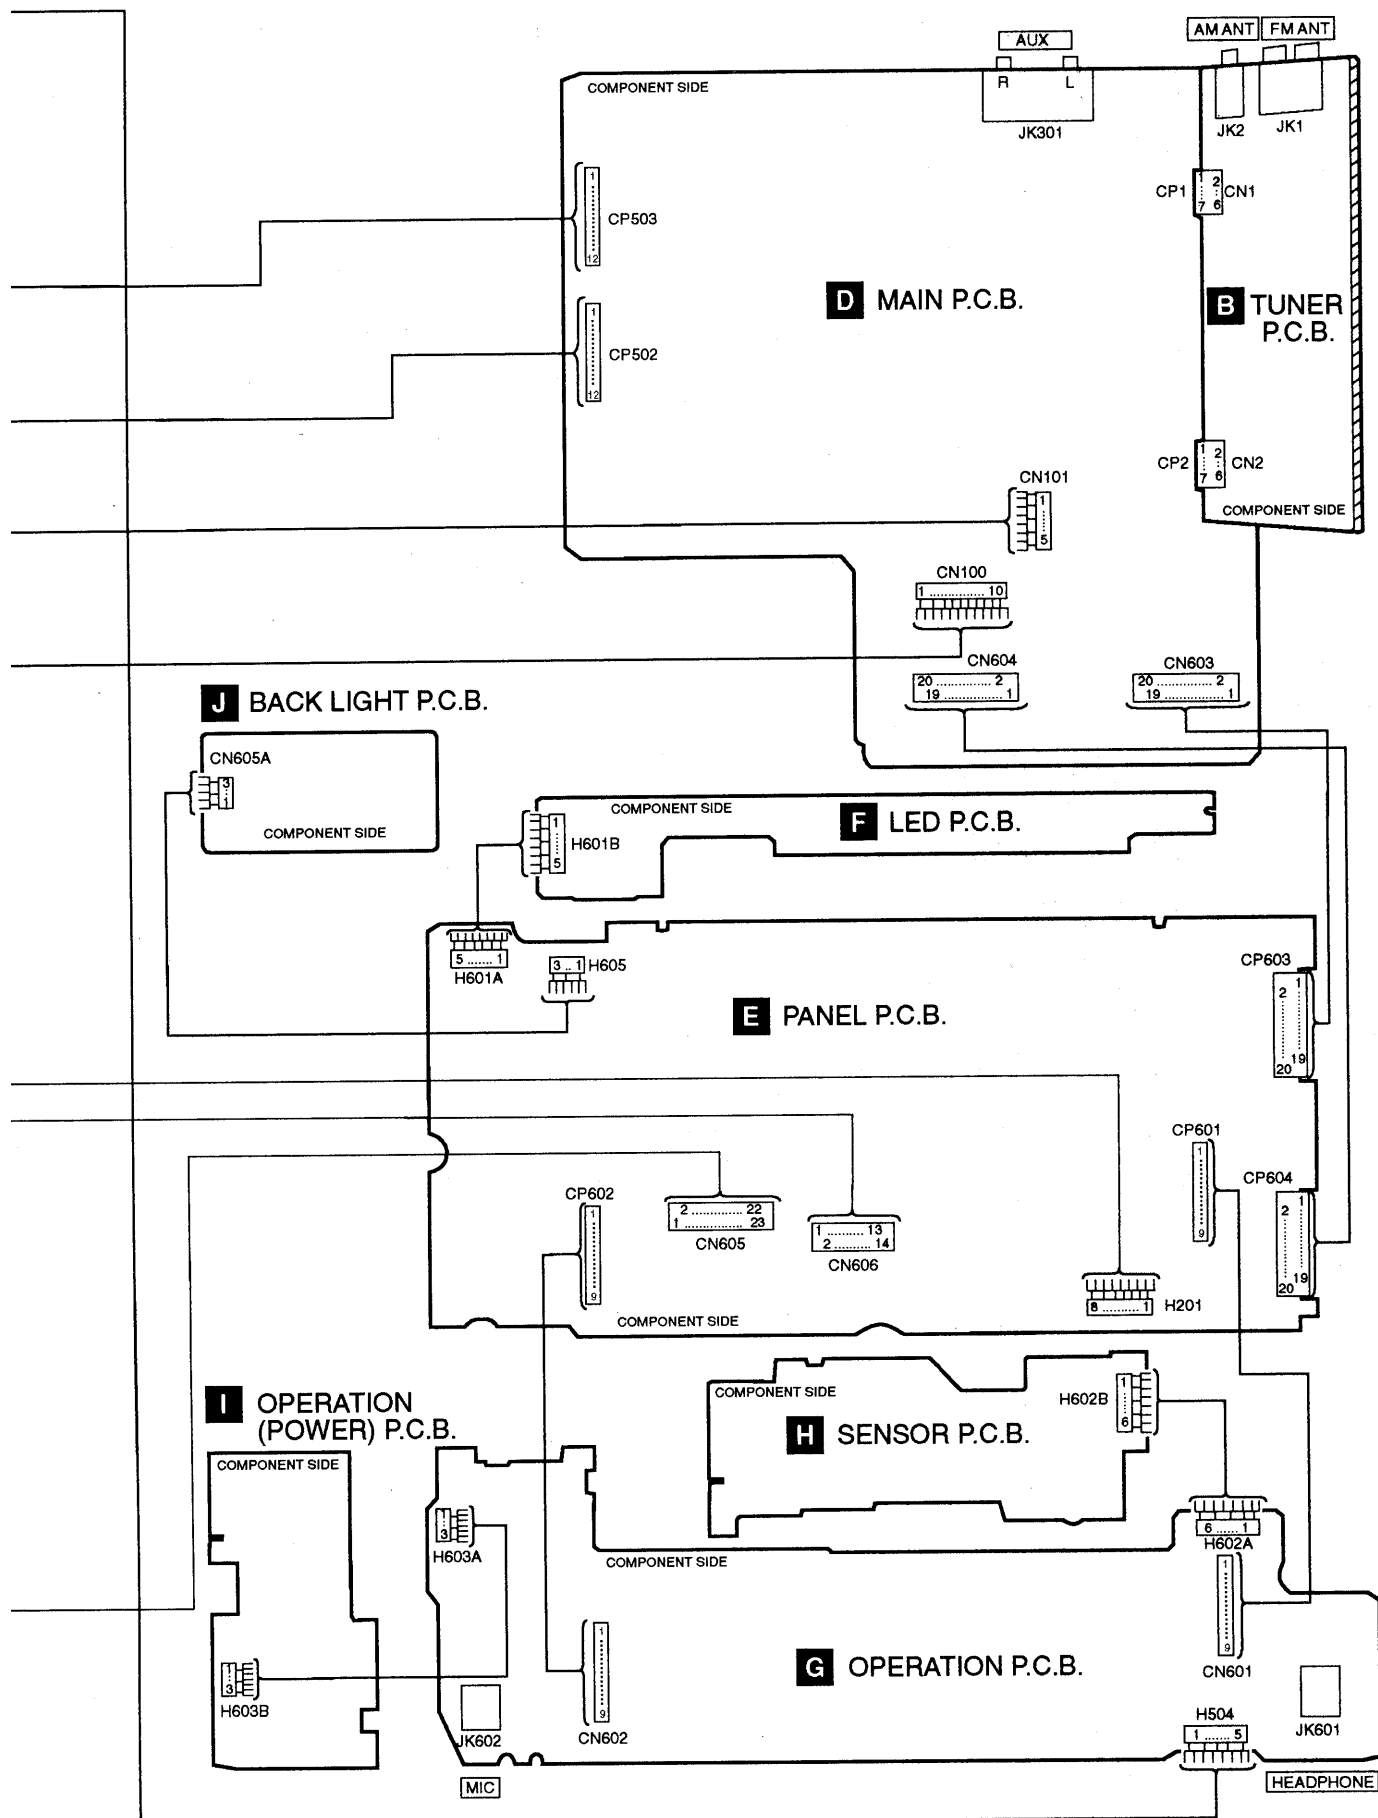



■ Terminal Guide of ICs, Transistors and Diodes

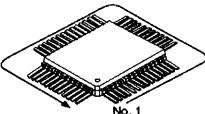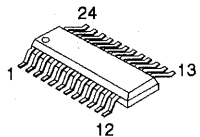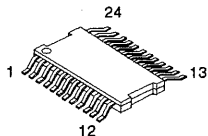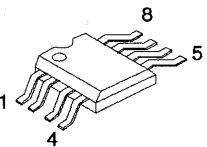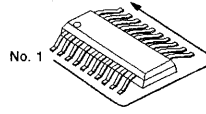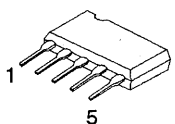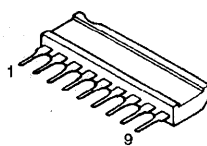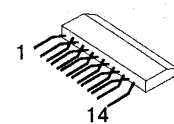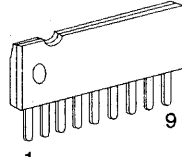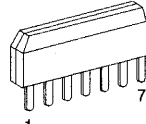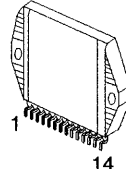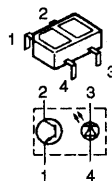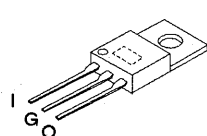
M38197MA136F(100P) MN662741RPA(80P) 	LA1832A LC7218 	AN8389SE1 	BA4558FDXE2 	AN8835SBE1 (28P) BU2040F-E2 (16P) BU2090F-E2 (16P) BU4052BCF-E2 (16P) BU4066BCF-E2 (14P) CXA1102M-T4 (16P) M51167BFP-E1 (36P) M62422FPE1 (42P) 	
BA7755A 	DAP803 	M51131L-702 	BA6418N 	TA2011S 	RSN3502 
ON2180RLC 	LM2940T5M 	2SJ164QRTA 	2SK301QTA 	2SB621ARTA 2SB621RTA 2SC2001KTA 2SD1302STA 2SD965RTA 	
2SB1185E 2SD1762E 	2SD2037ETA 	2SA933SSTA 2SC1740SLNET 2SC1740SSTA RVTDTA143XST 		2SC2785FETA 2SC2785FTA 2SC2787LTA 2SD1020HTA BA1A4ZTA BA1F4MTA BA1L3ZTA BN1L3NTA 	
2SB709S 	1D3E 1N5402BM21 	2SC2784FTA 2SD1450STA BA1L4MTA BA1L4ZTA BN1A4MTA 		1SS254TA 1SS291TA MA165TA MA167TA MA700ATA RVD1SS133TA 	
SLR325DCT31 	SLR342DCTB7 SLR342MCTB7 SLR-325MC 	SPR505MDTT 	MTZJ11CTA MTZJ12BTA MTZJ13ATA MTZJ15BTA MTZJ15CTA MTZJ20BTA MTZJ33CTA MTZJ3R6BTA	MTZJ4R7BTA MTZJ5R1CTA MTZJ5R6BTA MTZJ6R8BTA MTZJ6R8CTA MTZJ7R5CTA MTZJ8R2BTA MTZJ9R1ATA 	
RL1N4003N02 					


■ Block Diagram

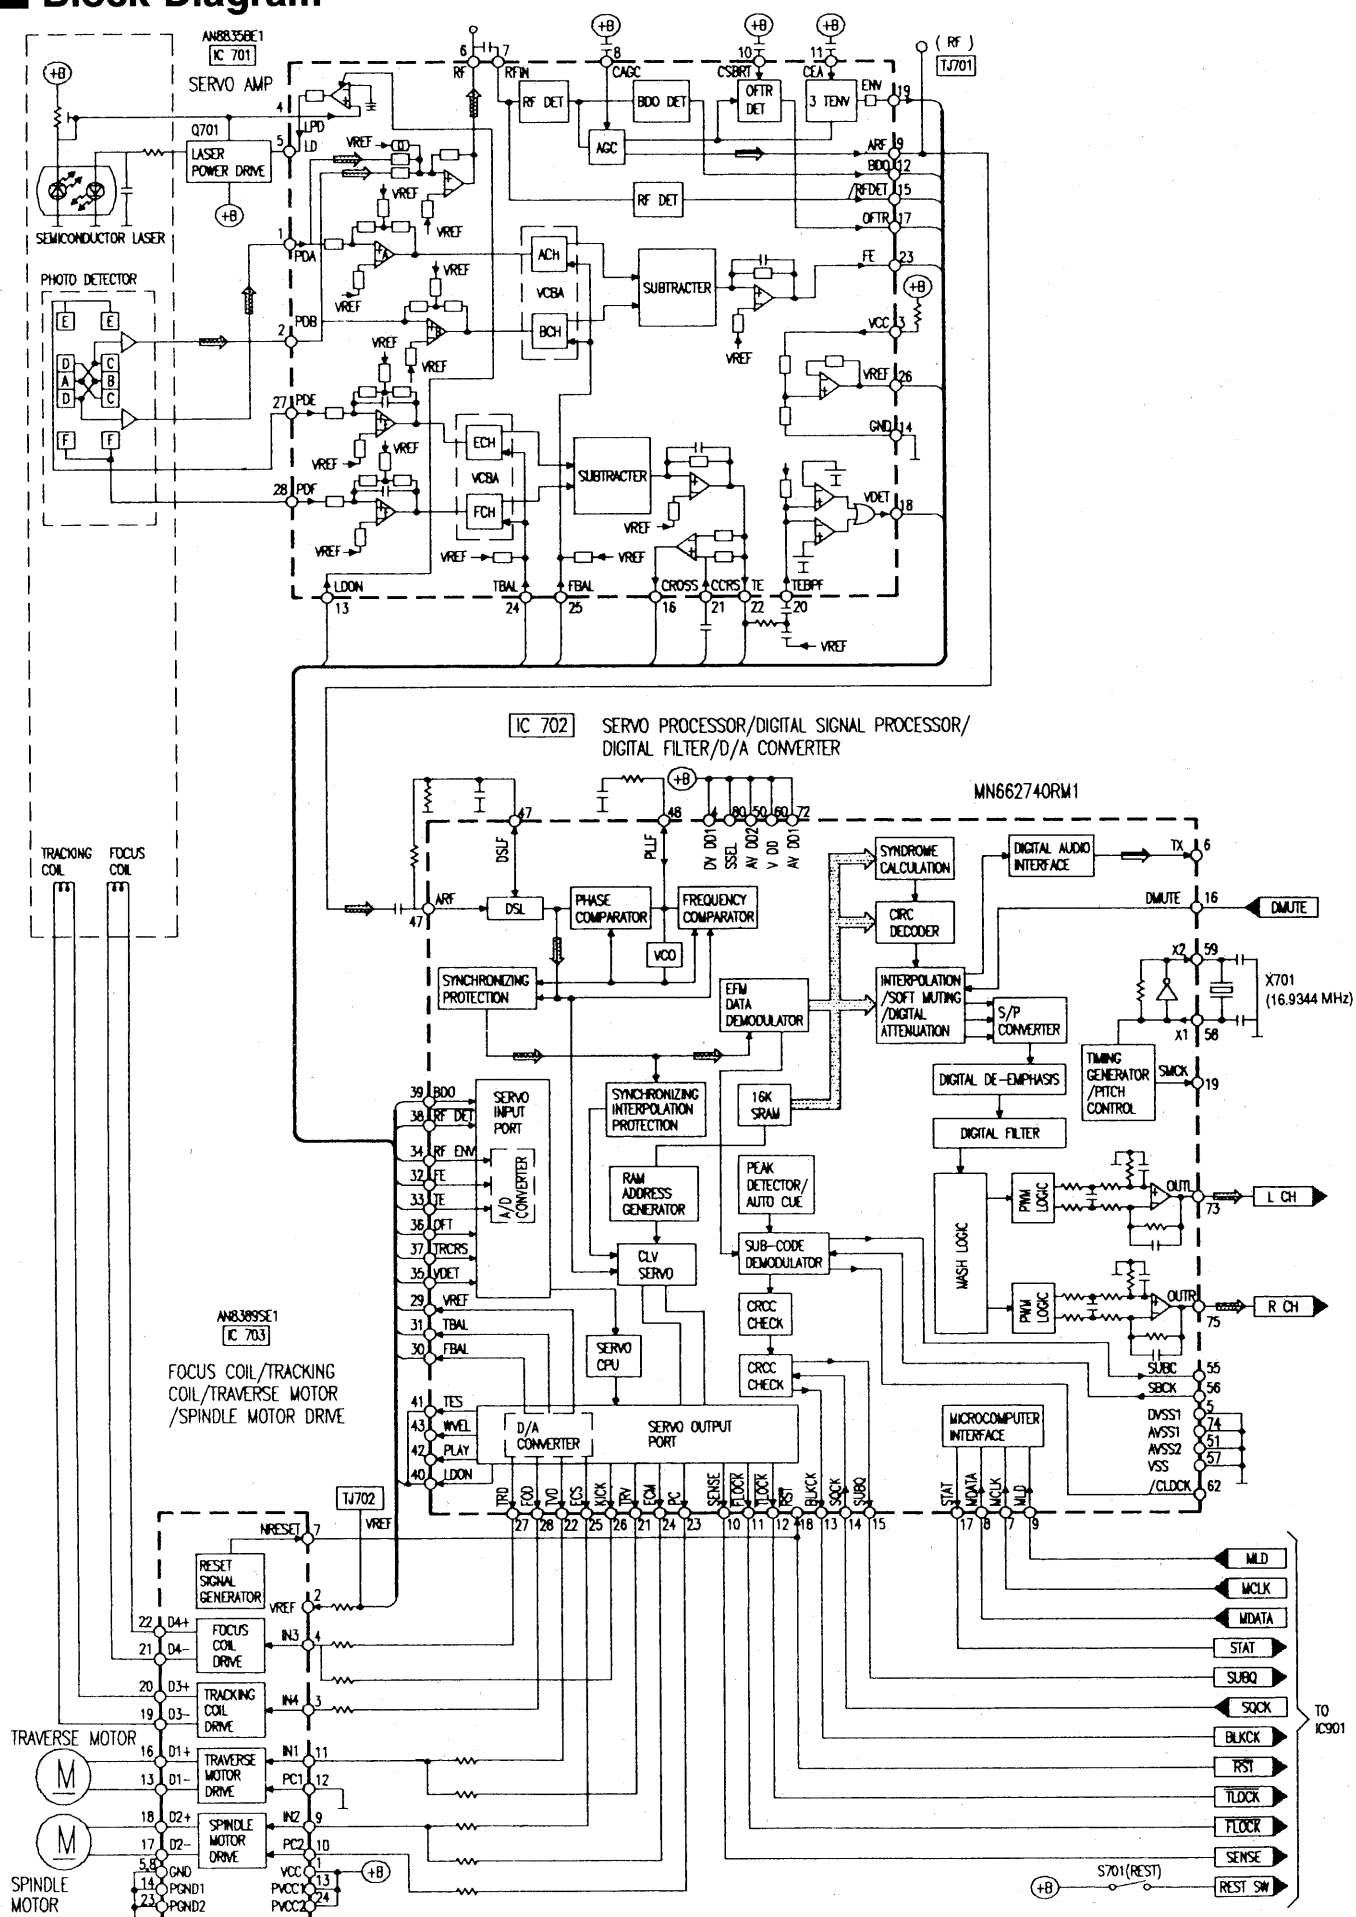


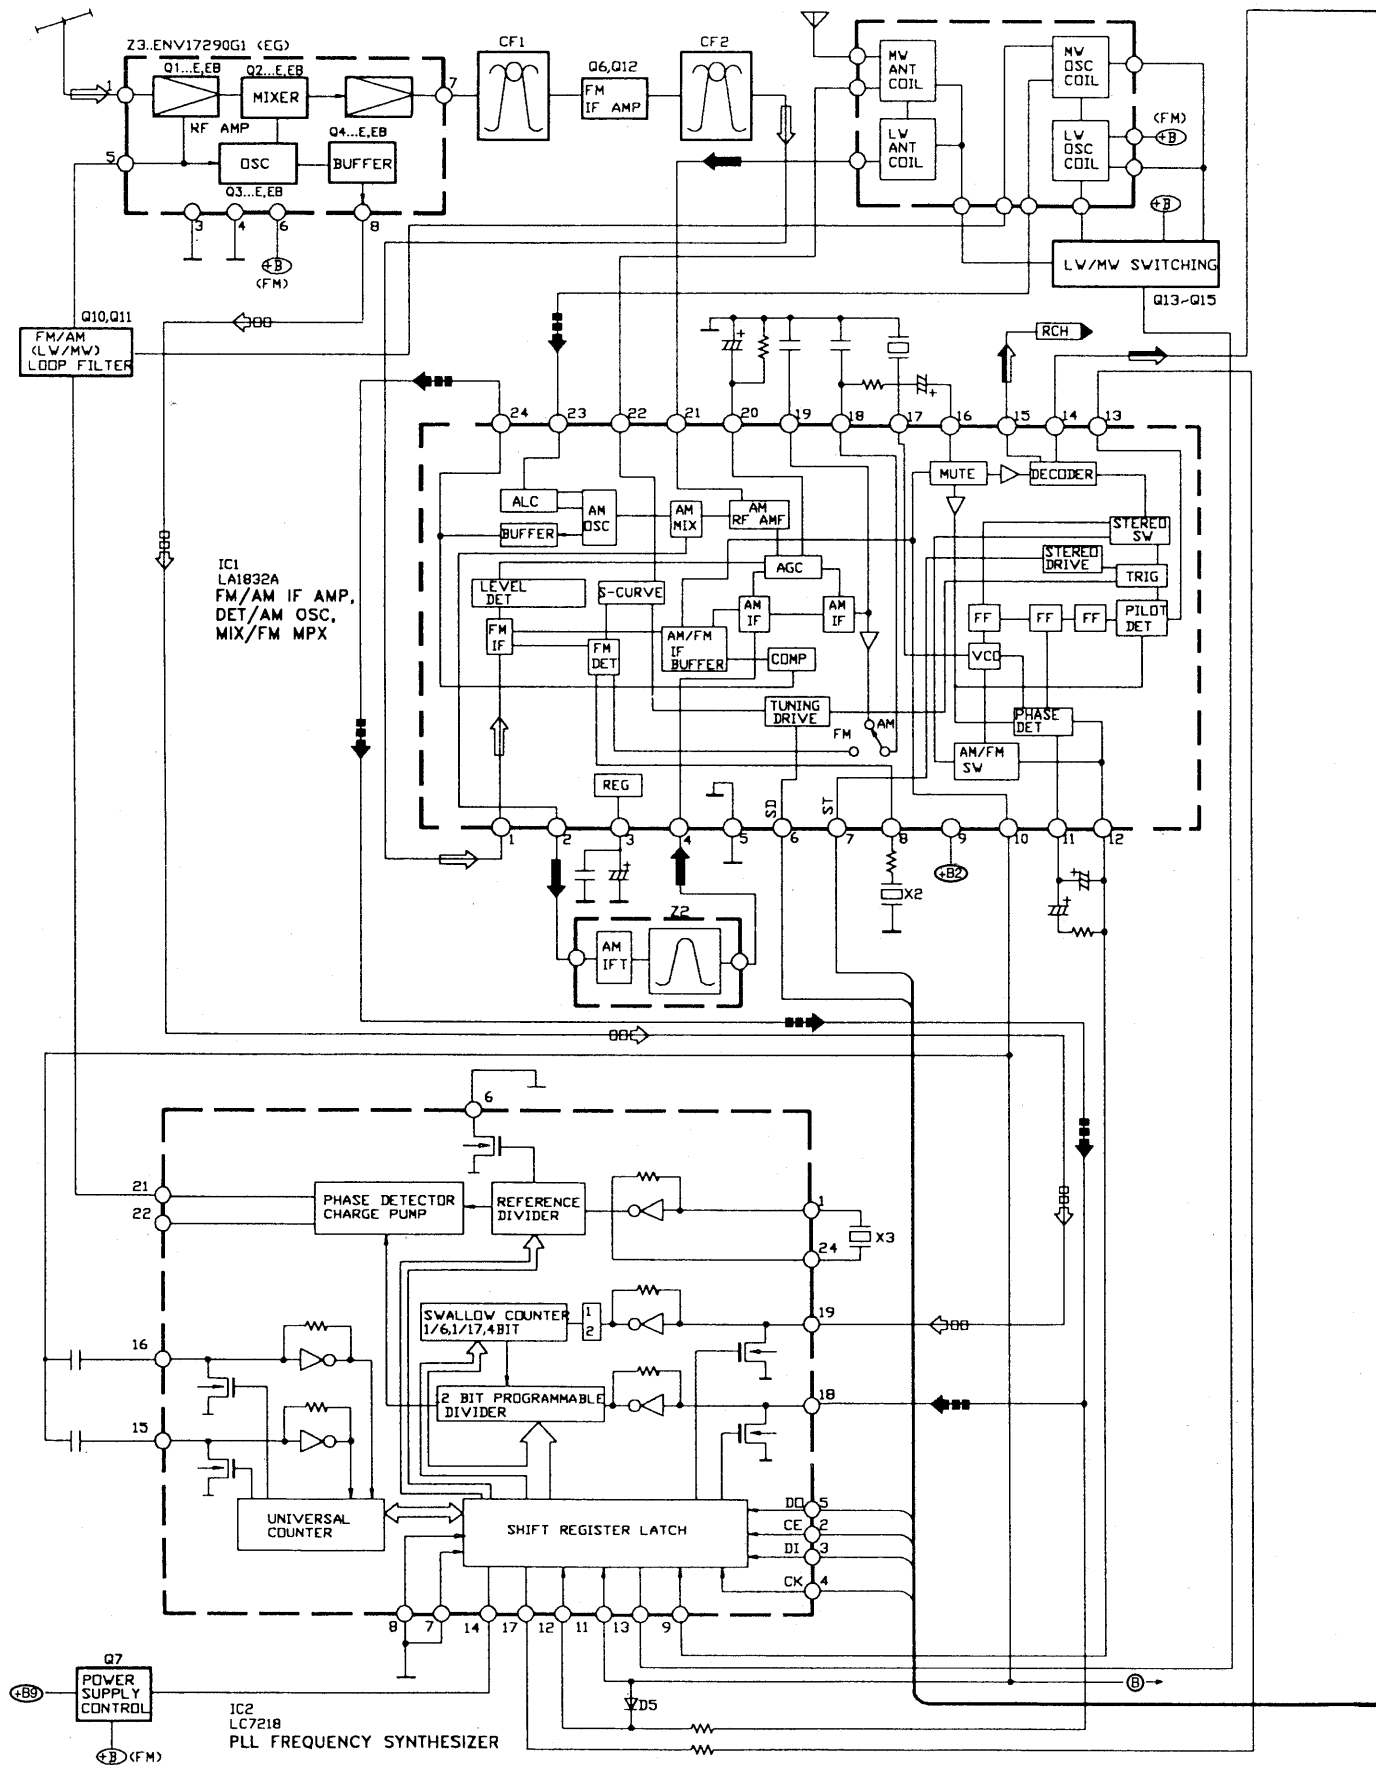


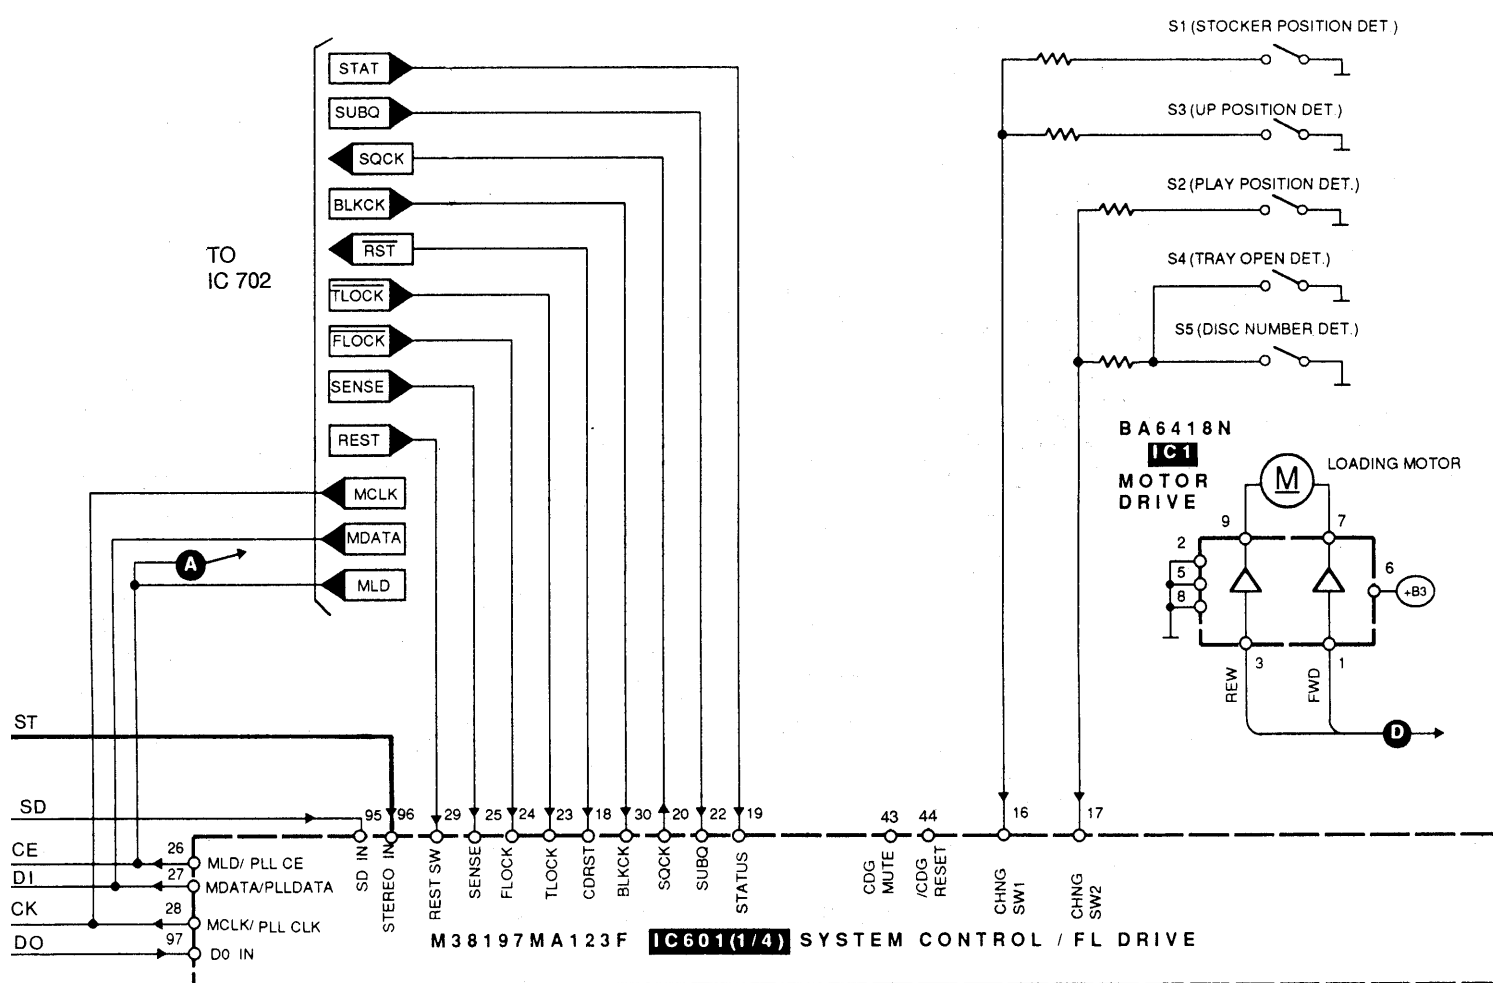

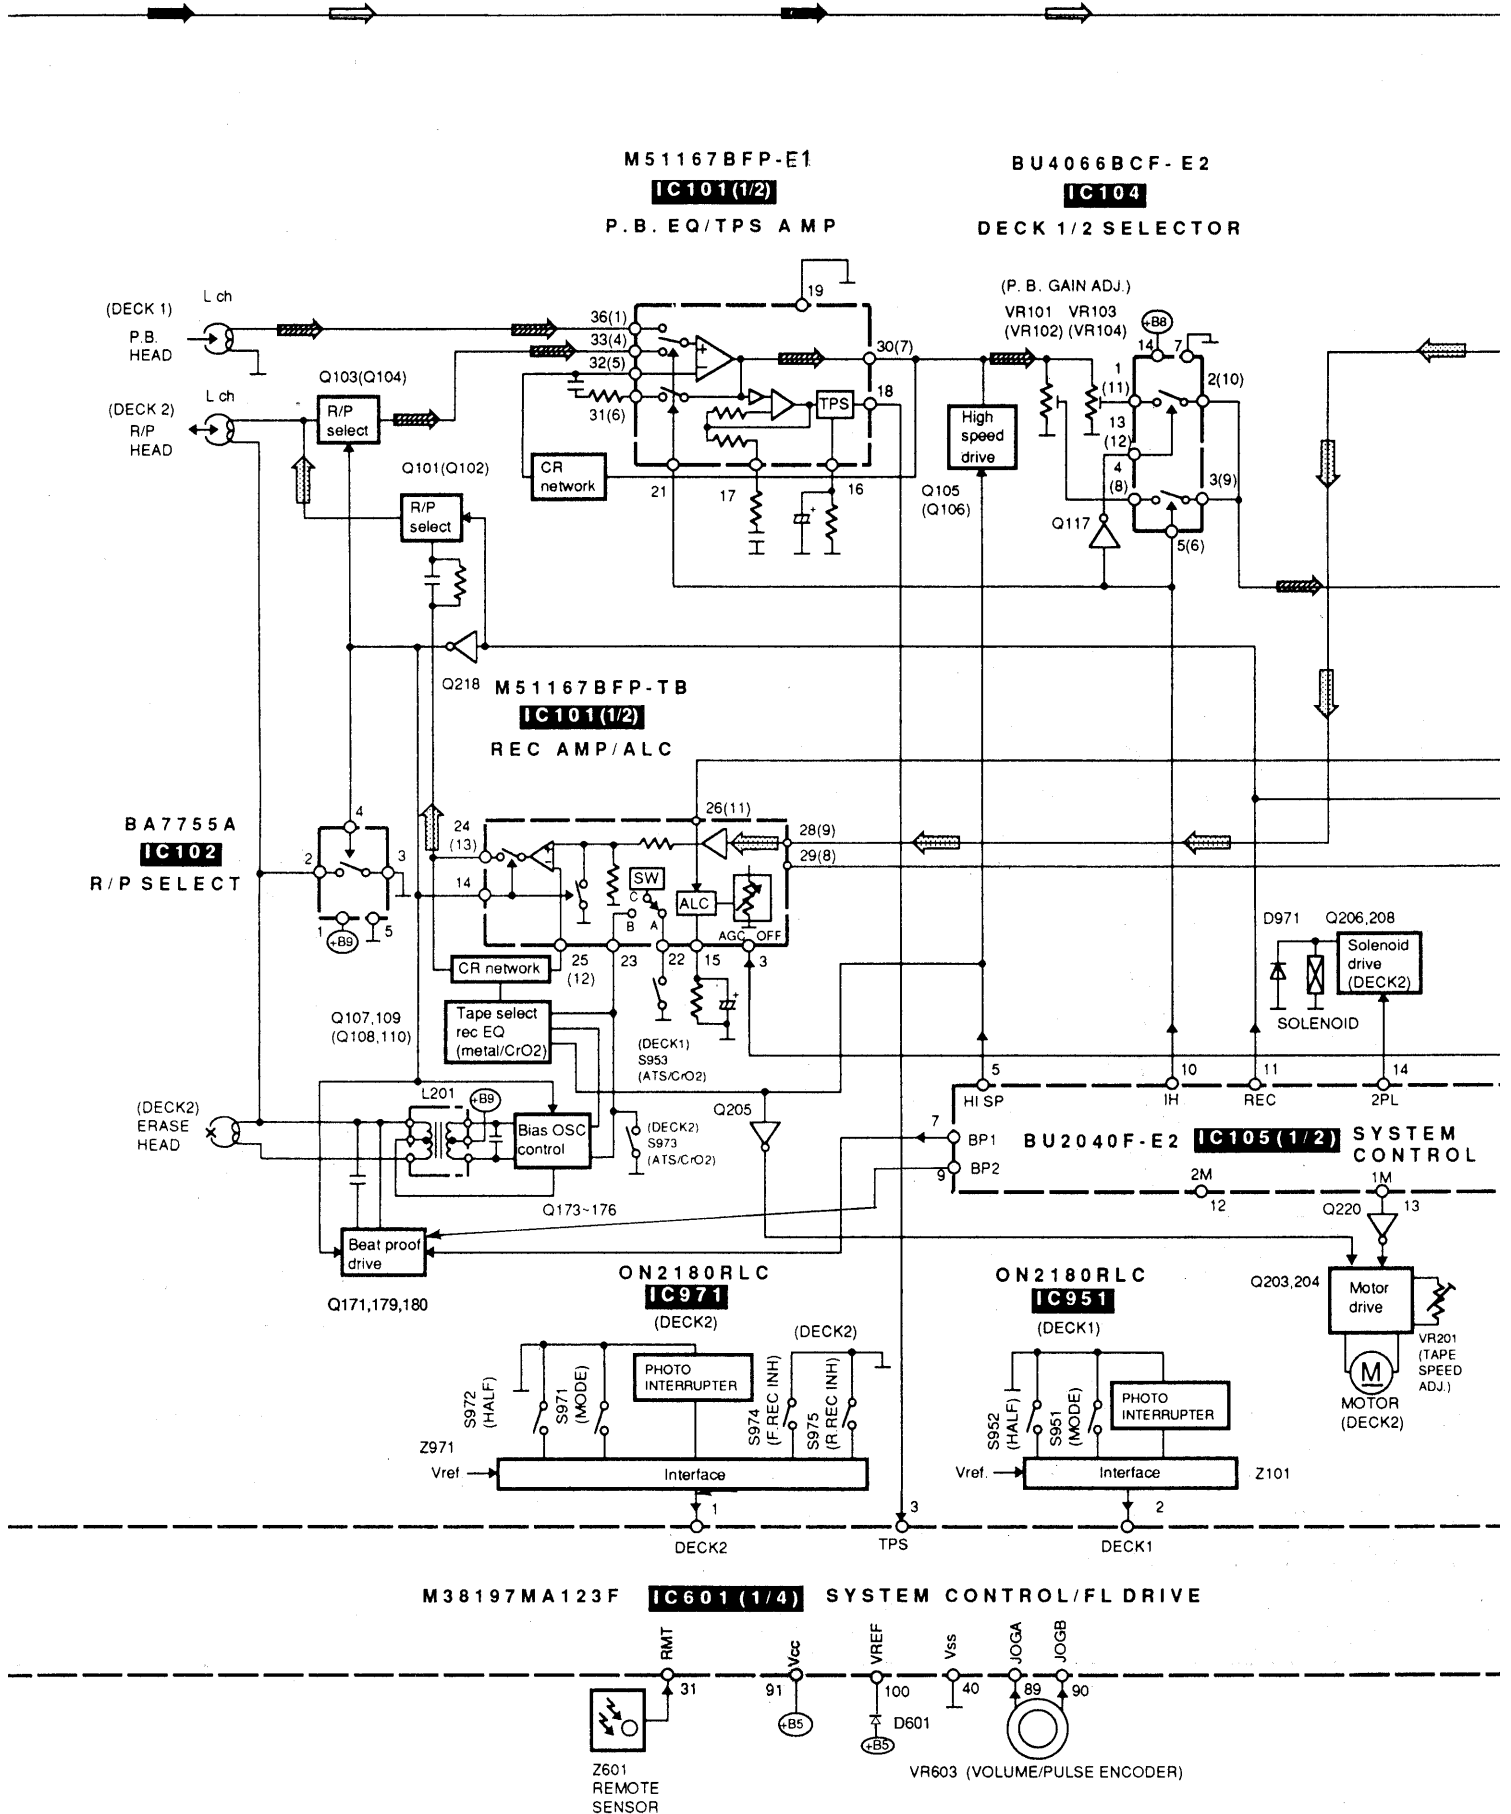

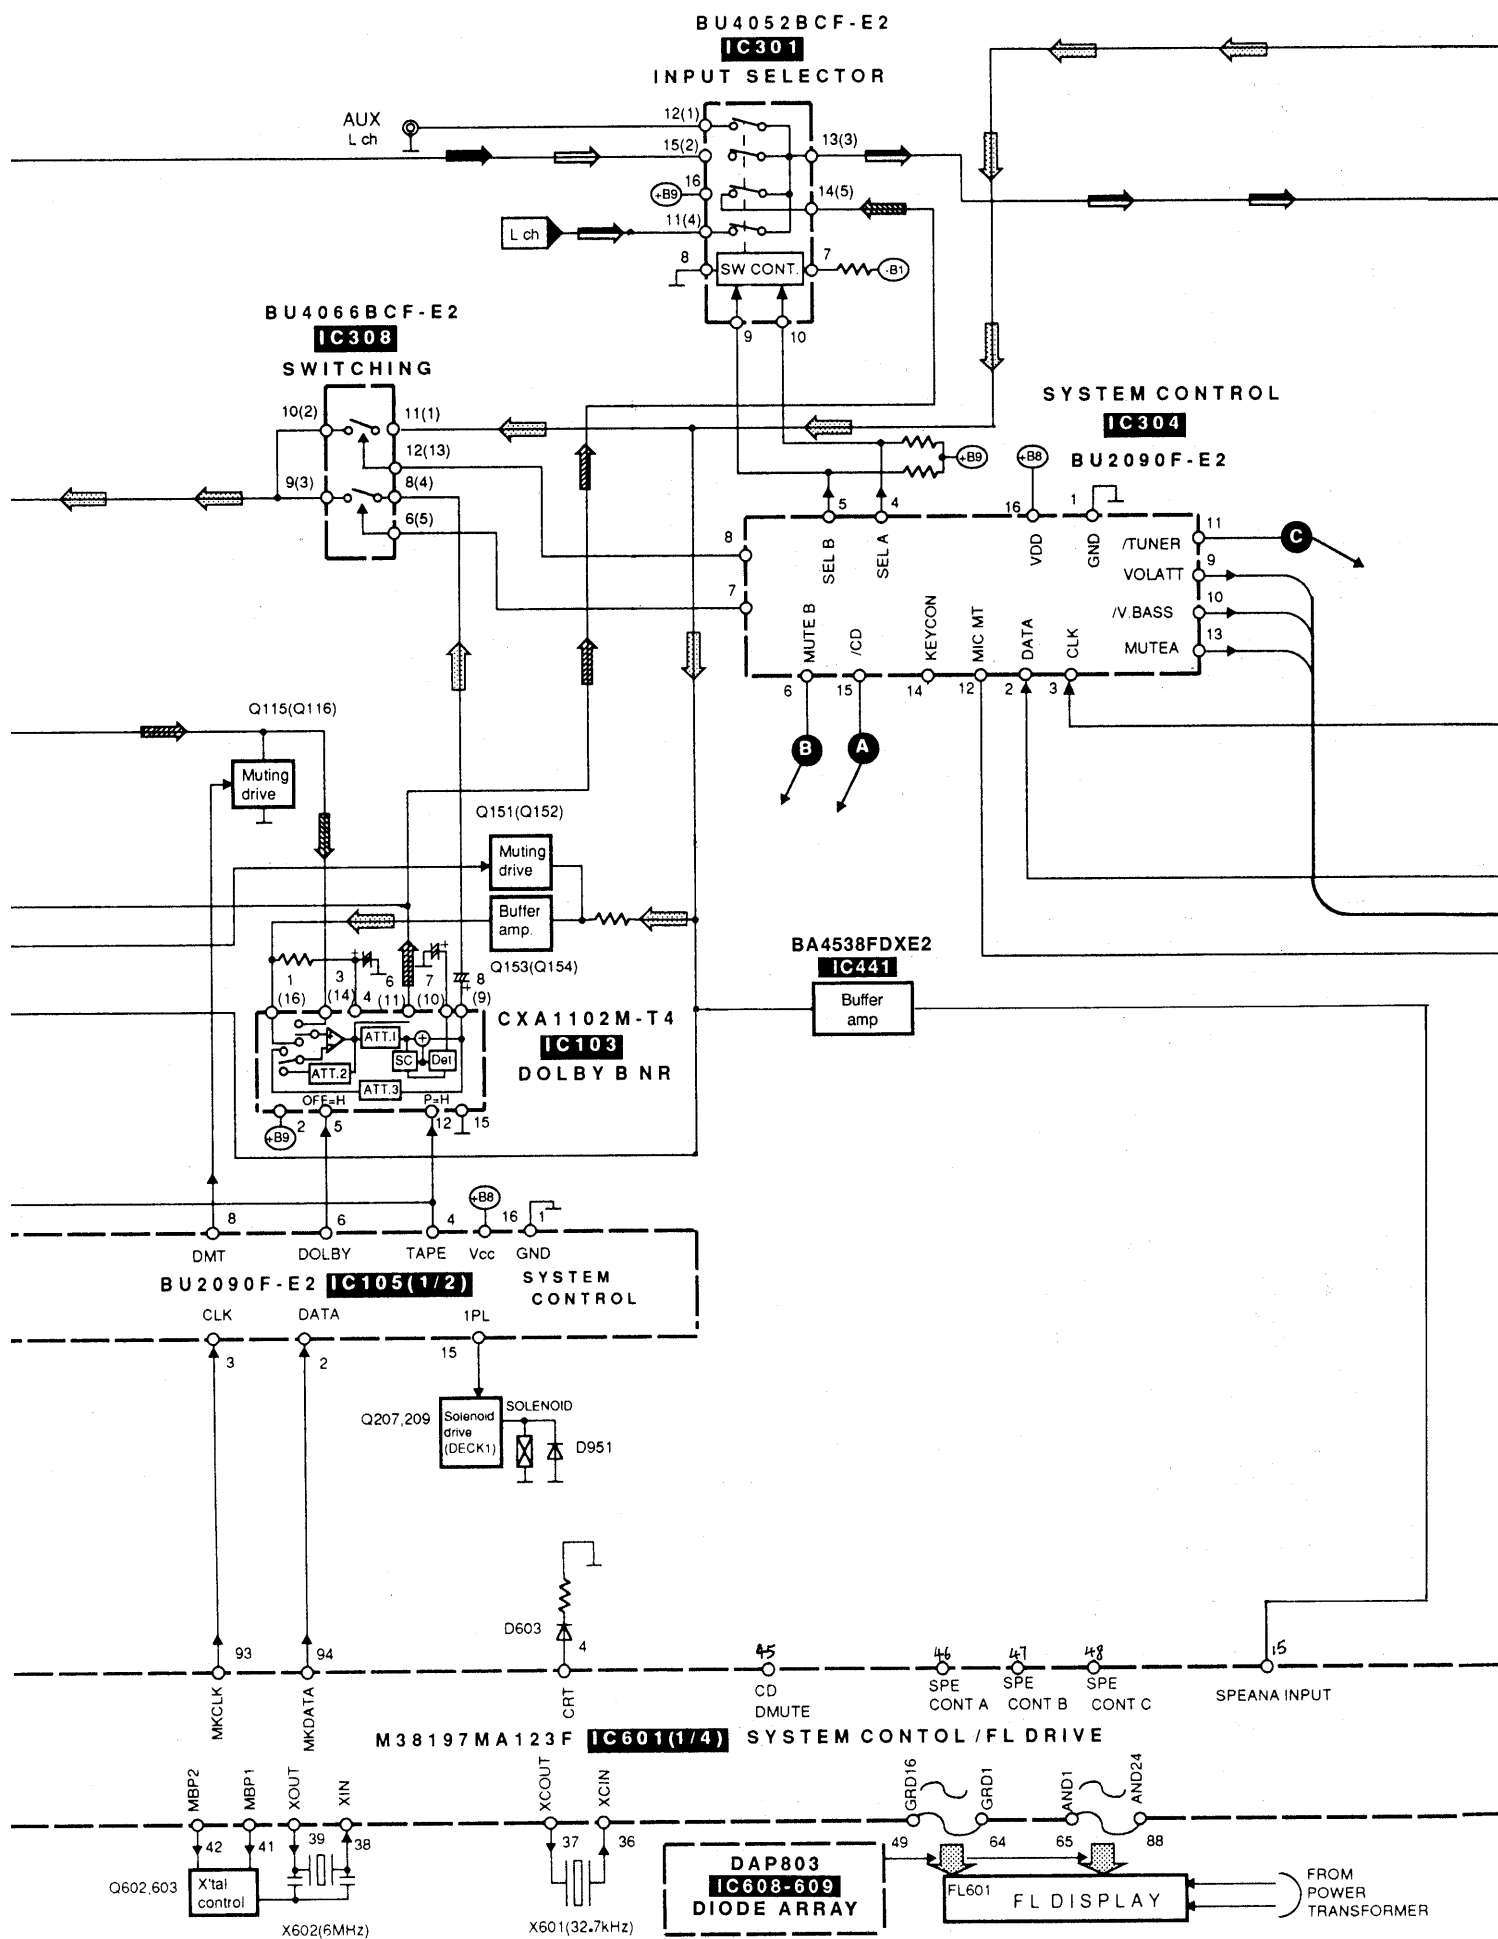


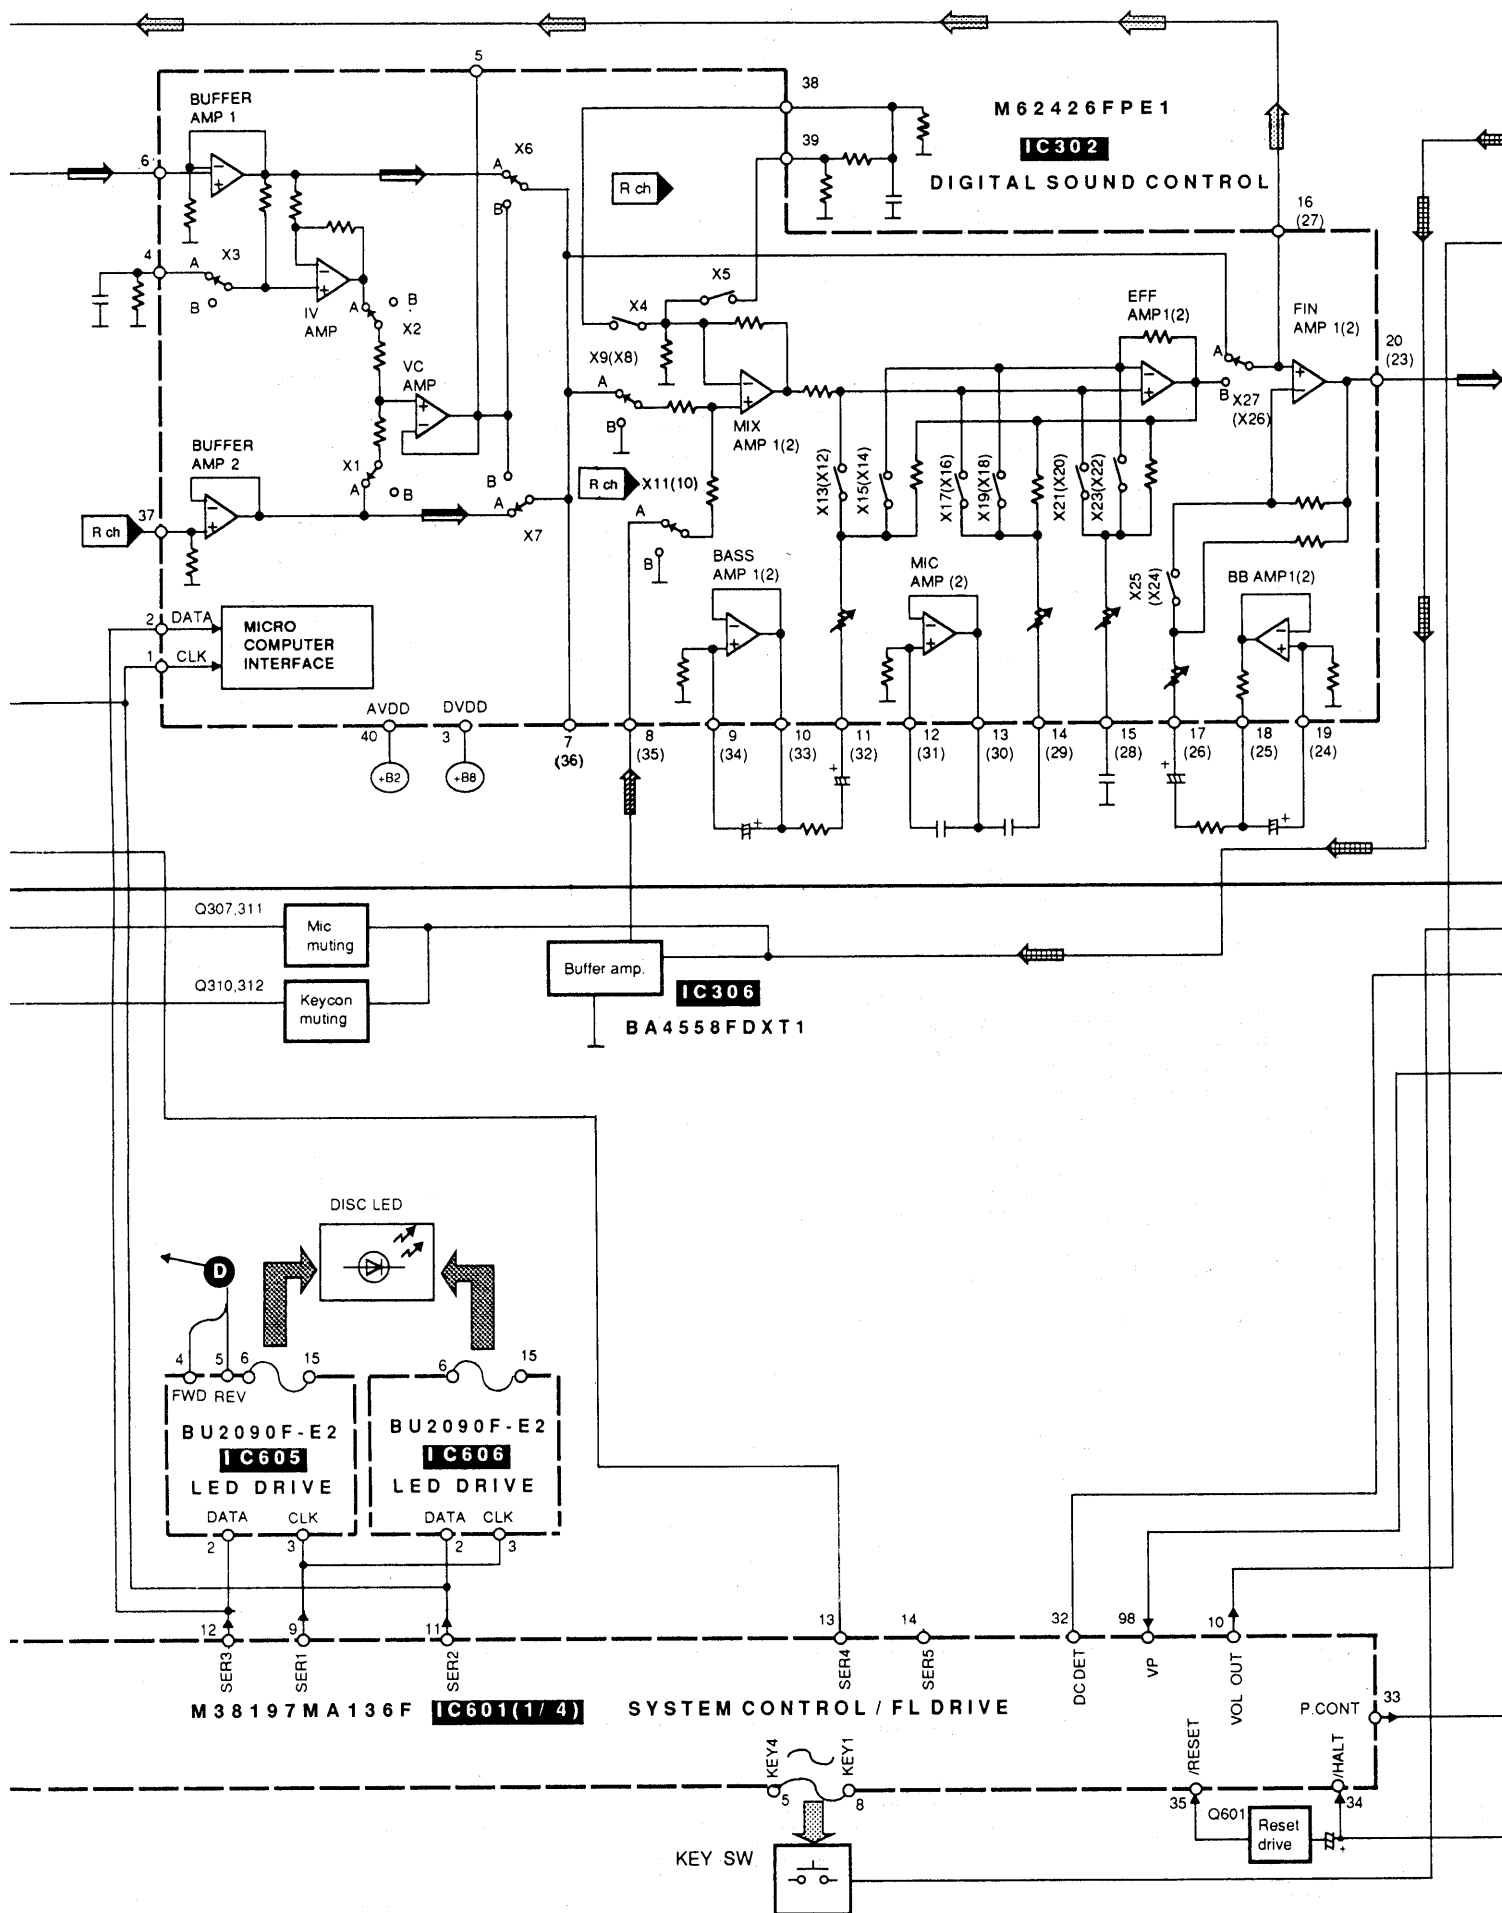

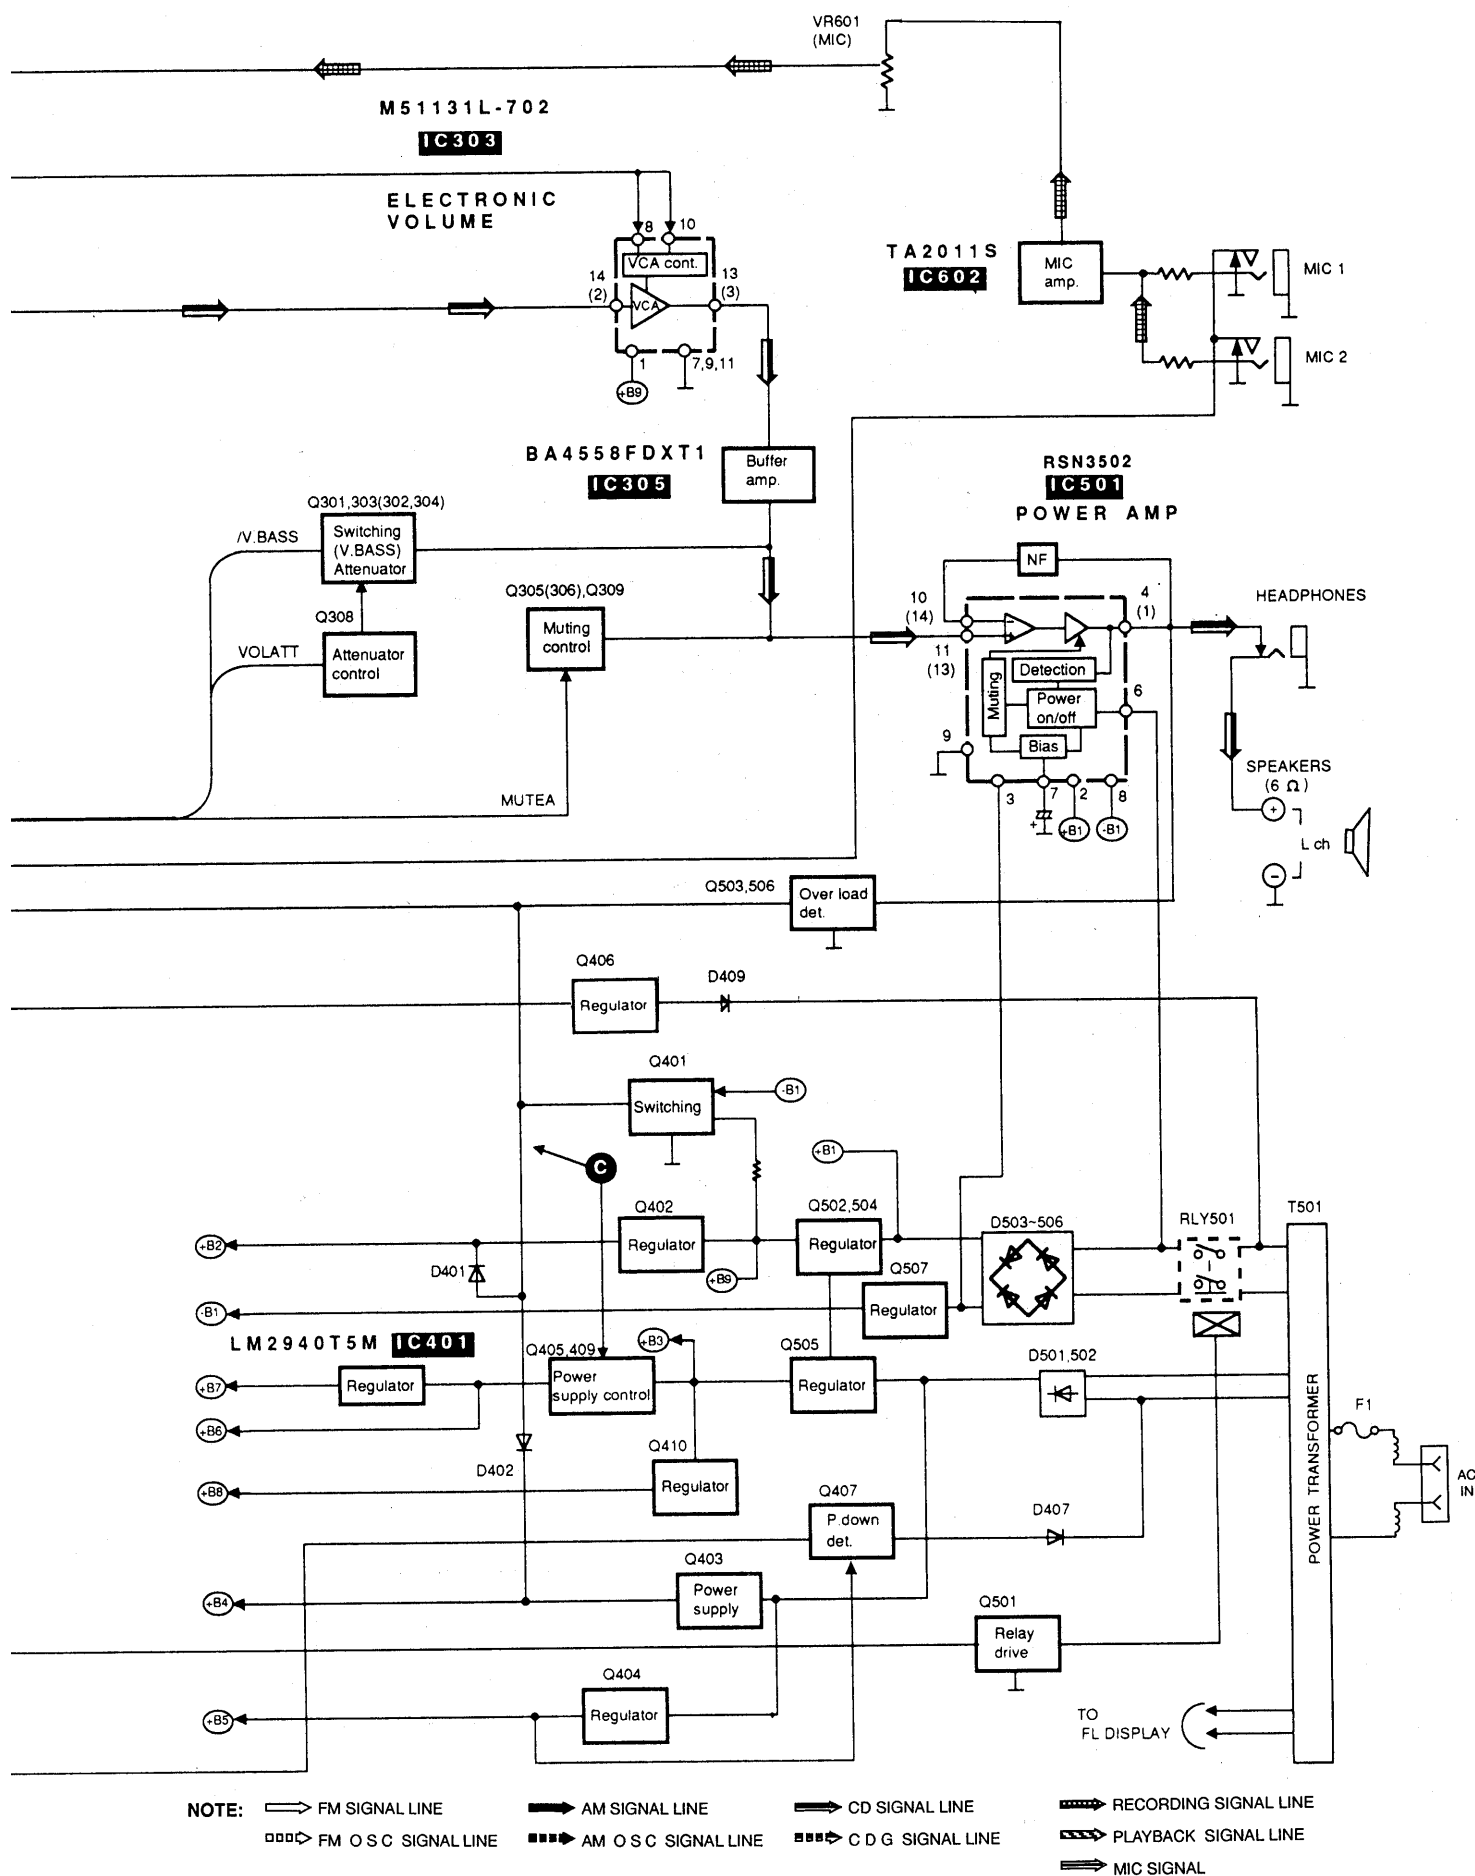


Printed Circuit Board


A SERVO P.C.B. (REPX0109)

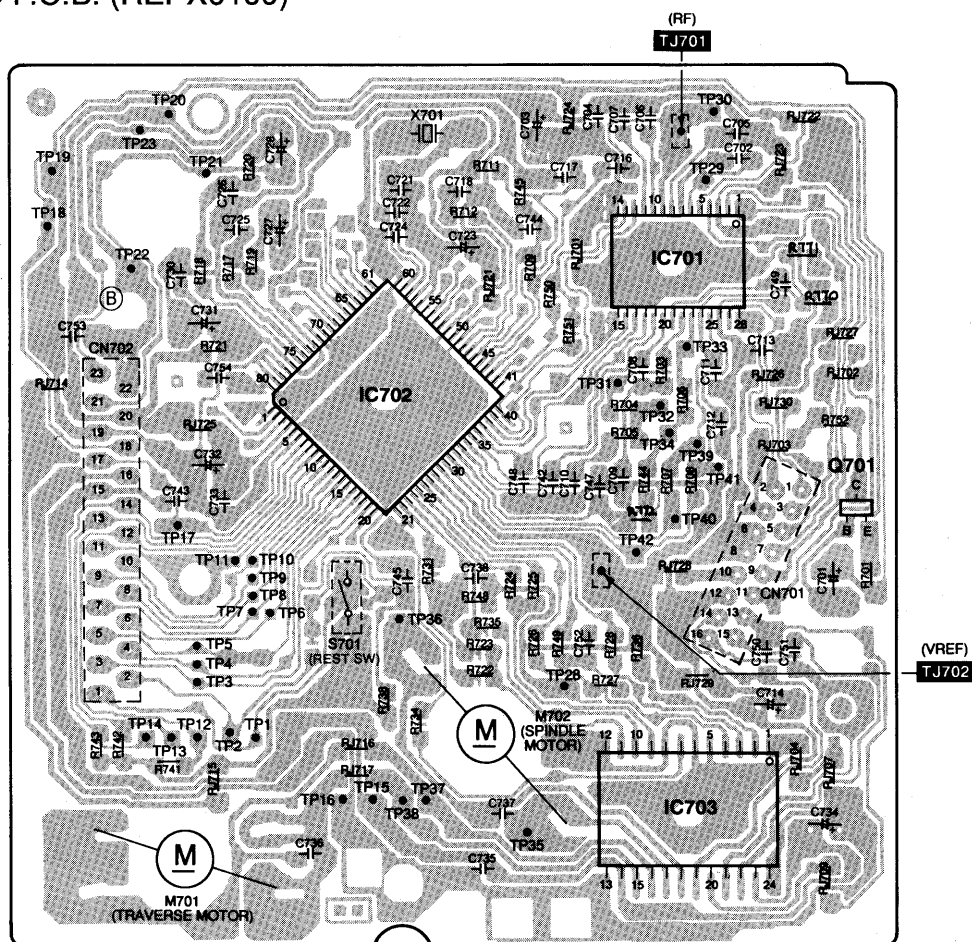


O LOADING MOTOR P.C.B. (REP2182A-N)

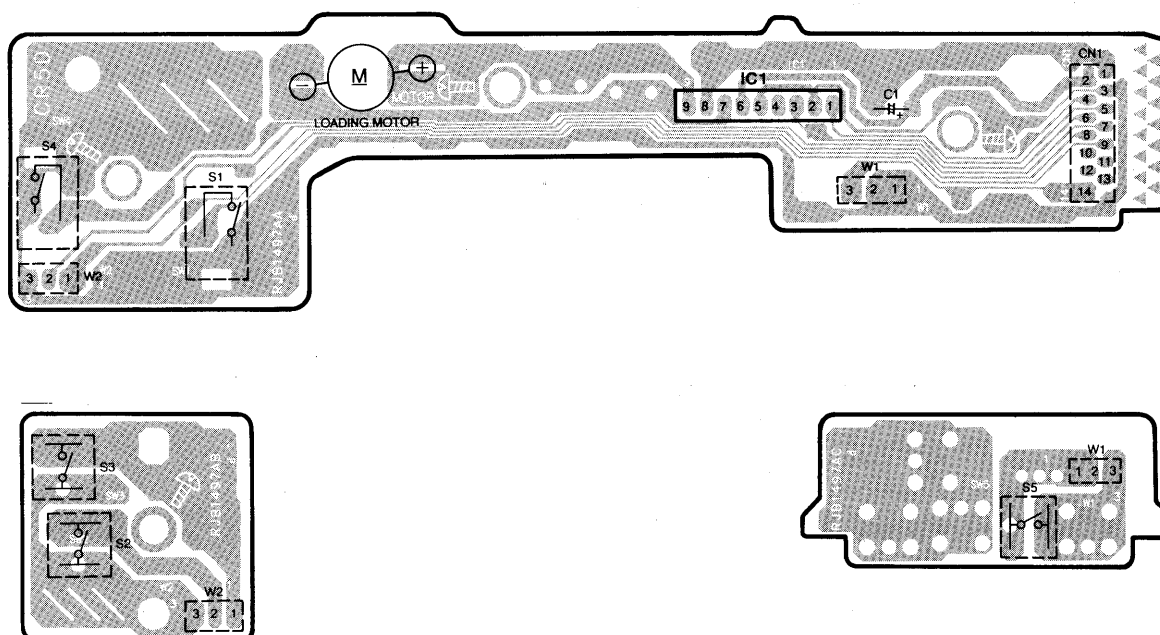


D MAIN P.C.B. (REP2196D)

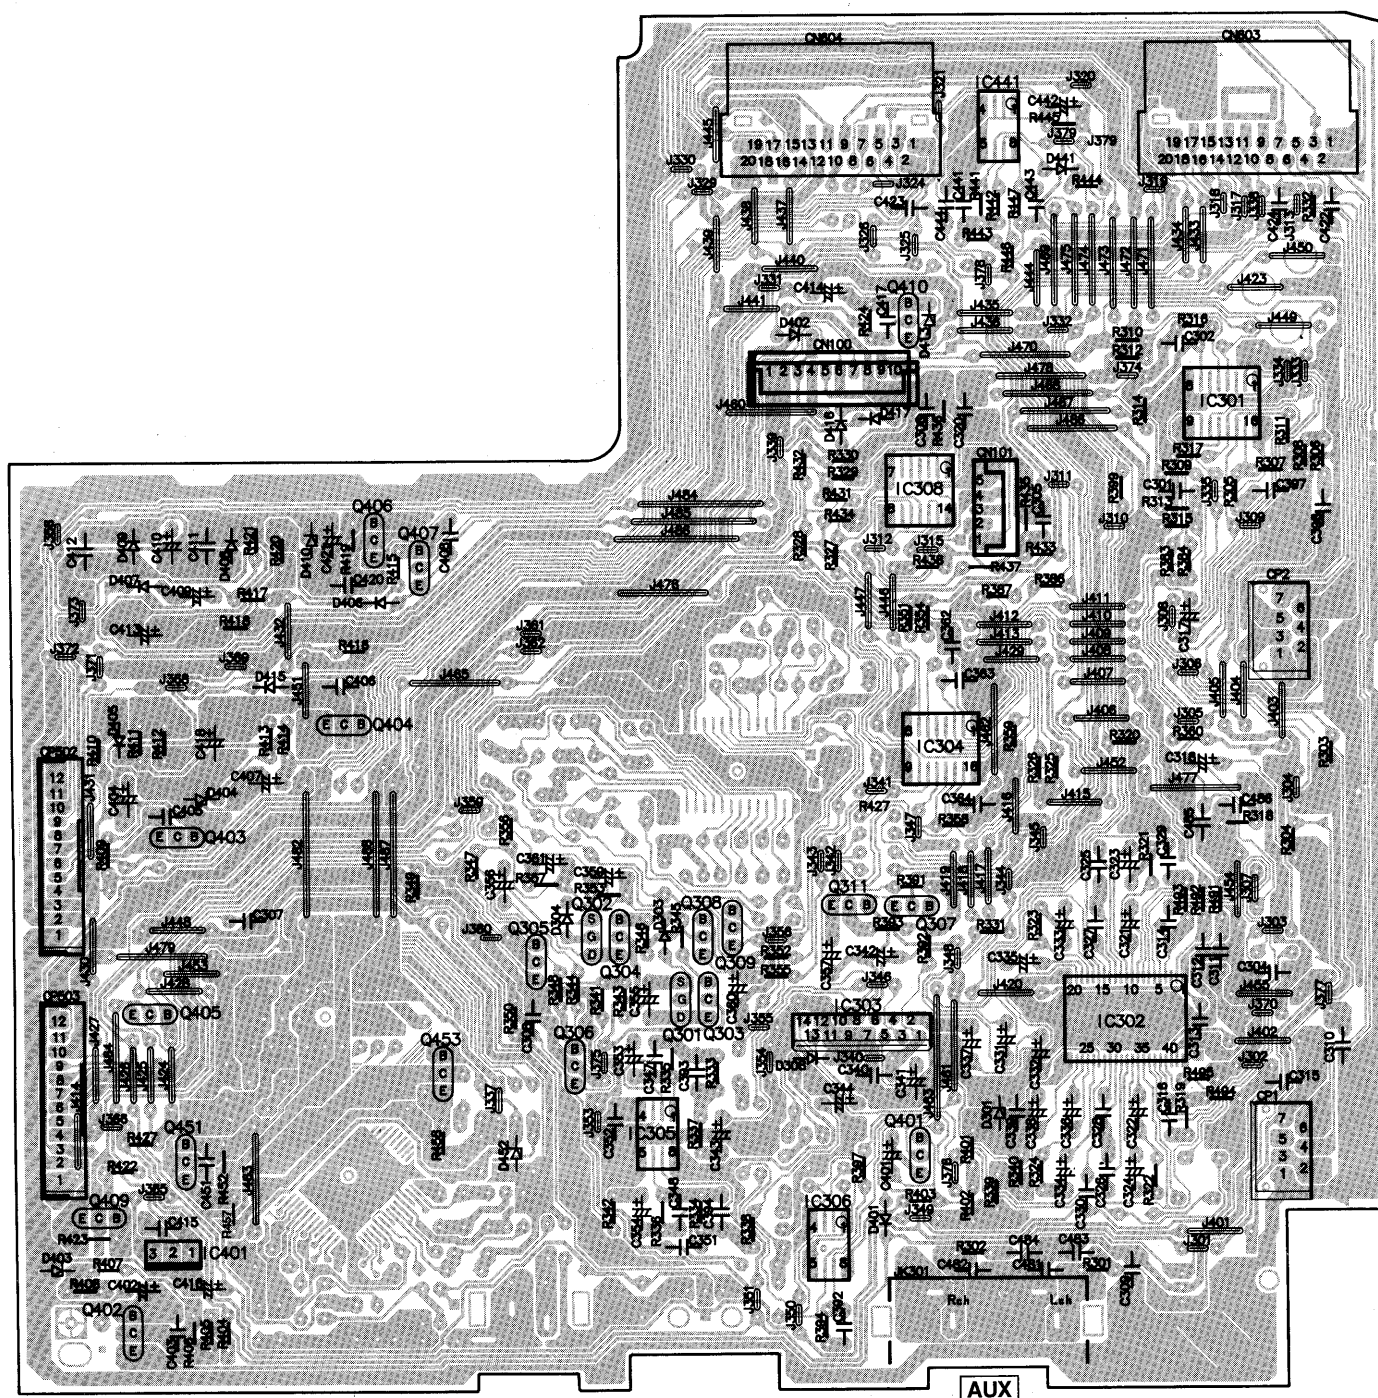


B TUNER P.C.B. (REP2000G)

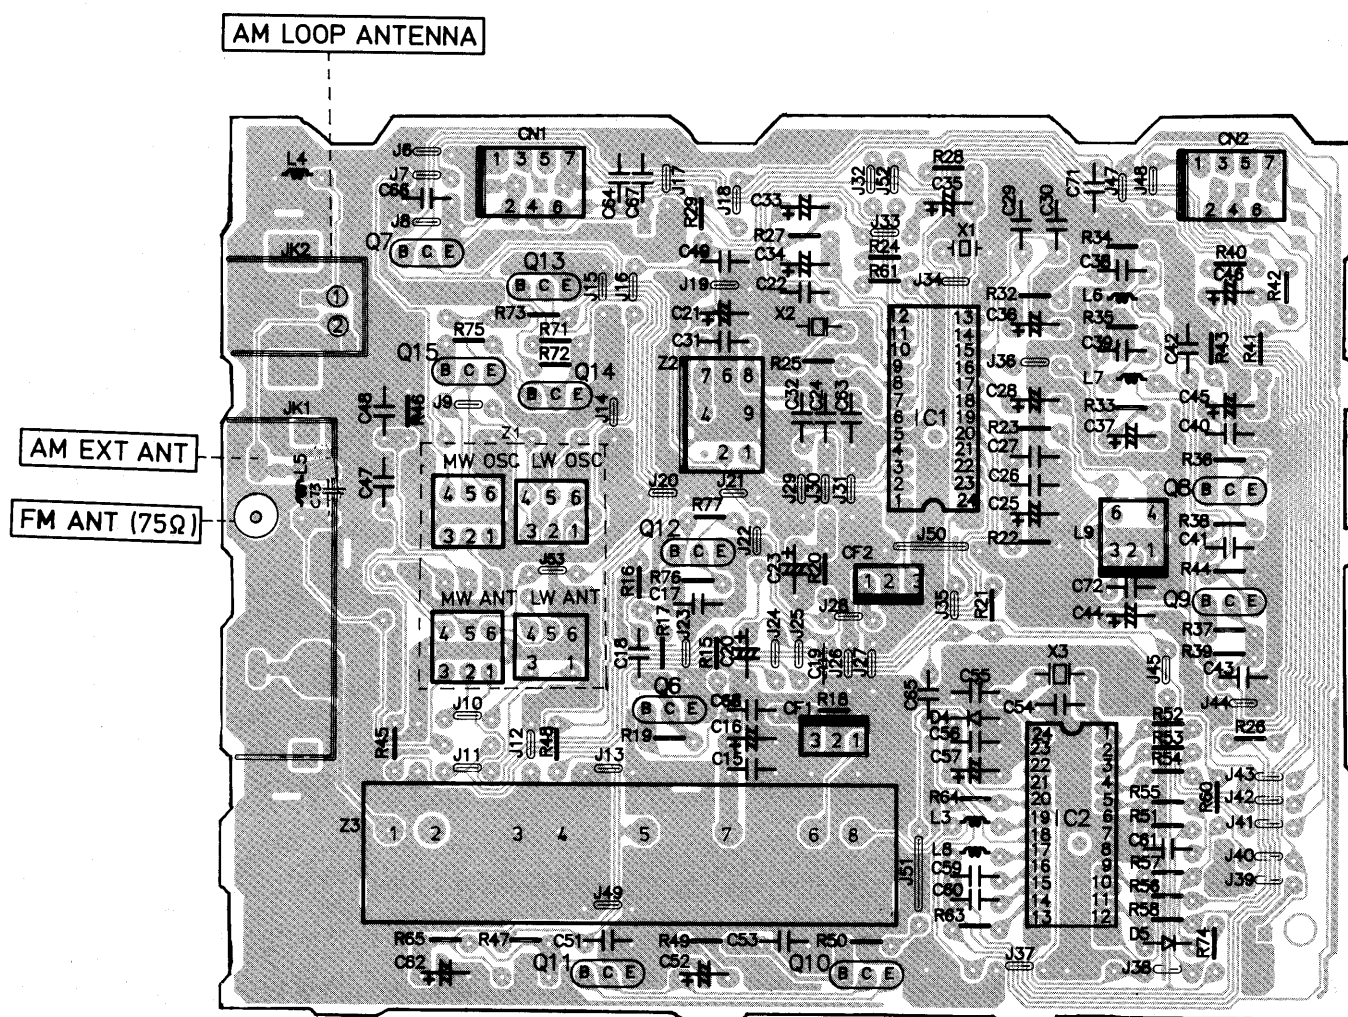


M MECHANISM (DECK 1) P.C.B. (REPX0108A)

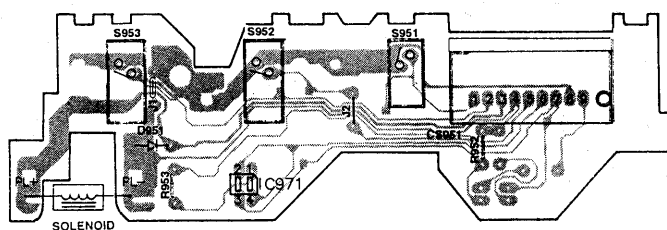


N MECHANISM (DECK 2) P.C.B. (REPX0108)

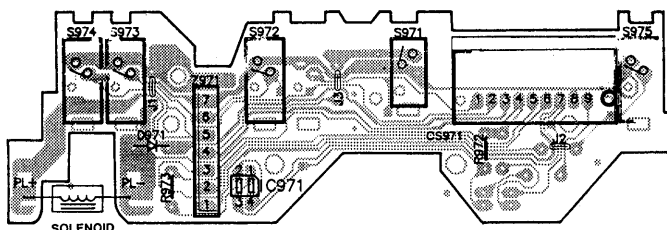


E PANEL P.C.B. (REP2199D)


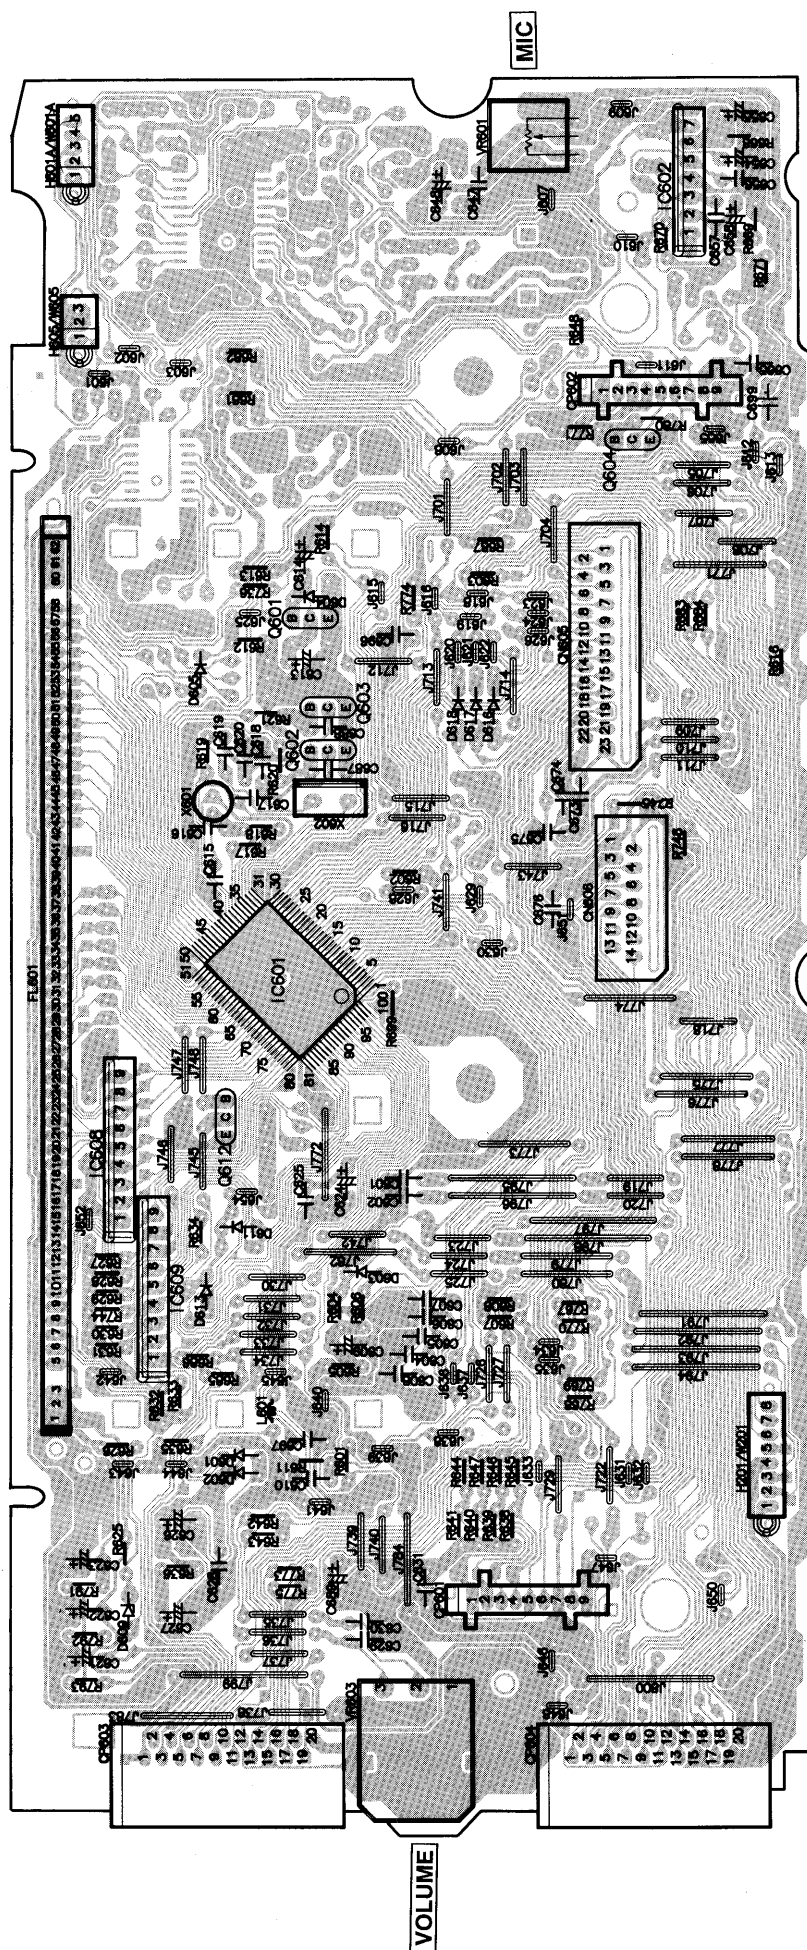


G OPERATION P.C.B. (REP2199D)

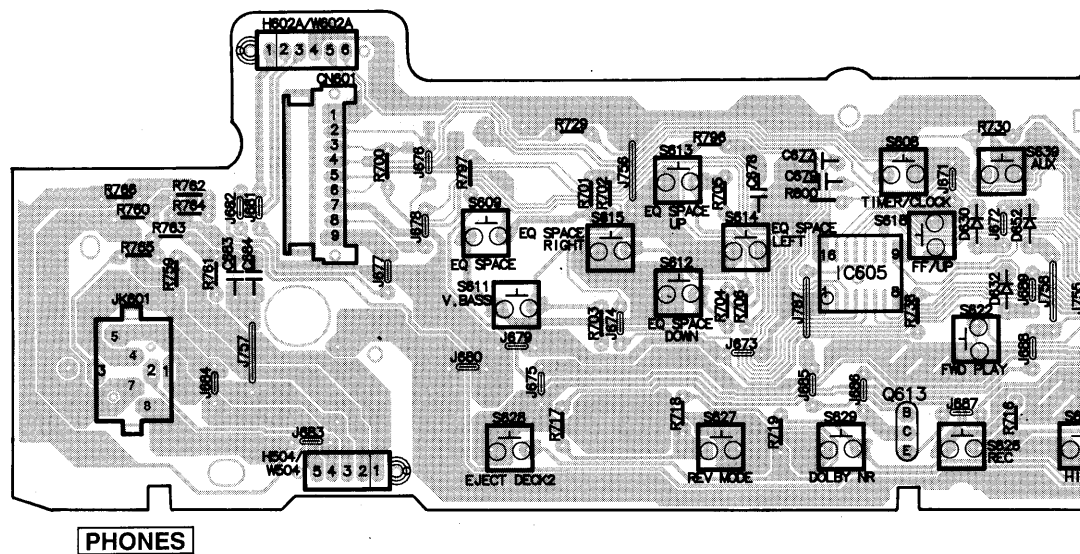


C DECK P.C.B. (REP2200C)

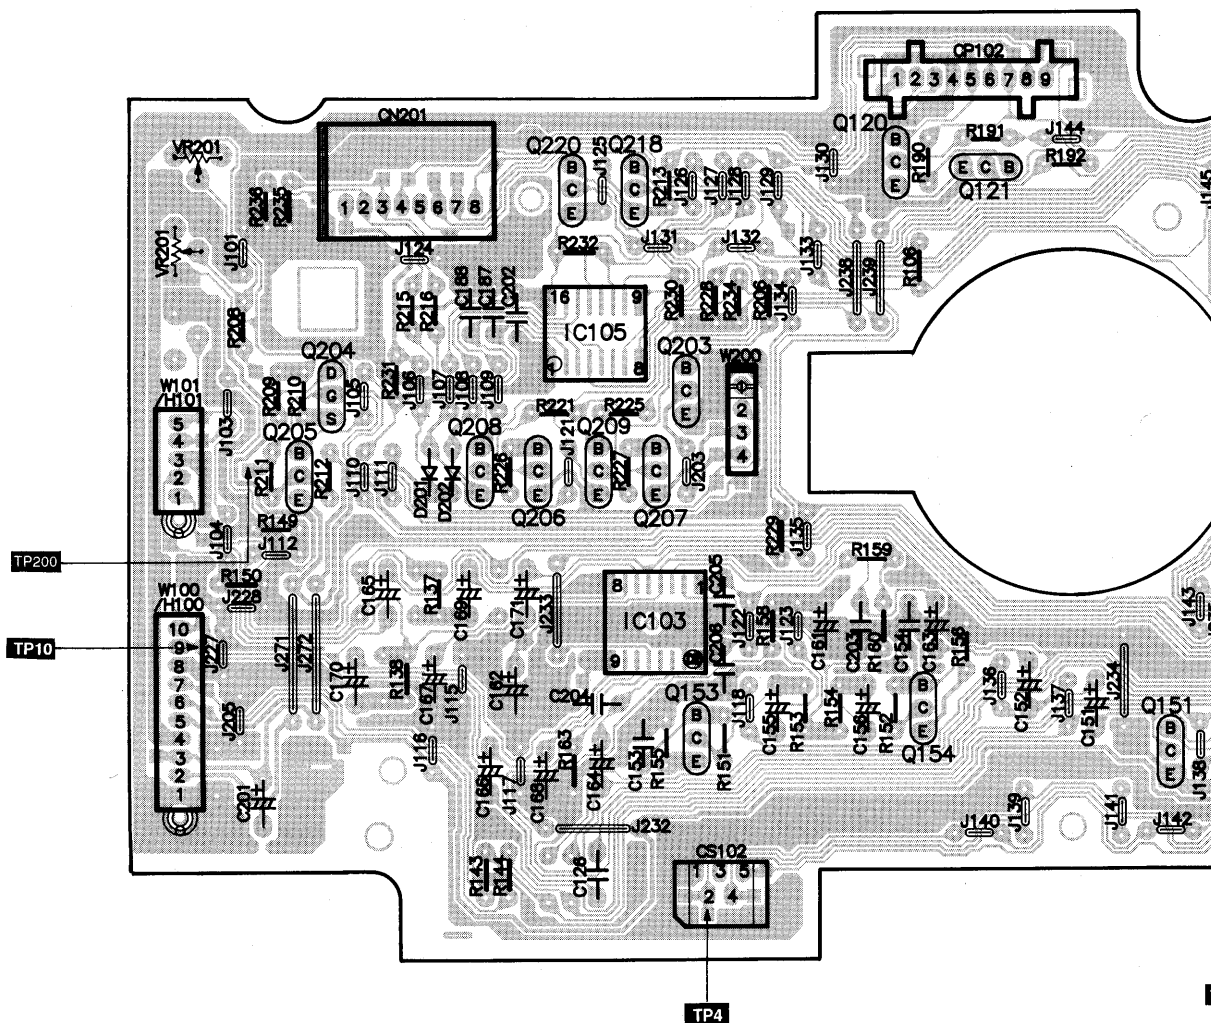


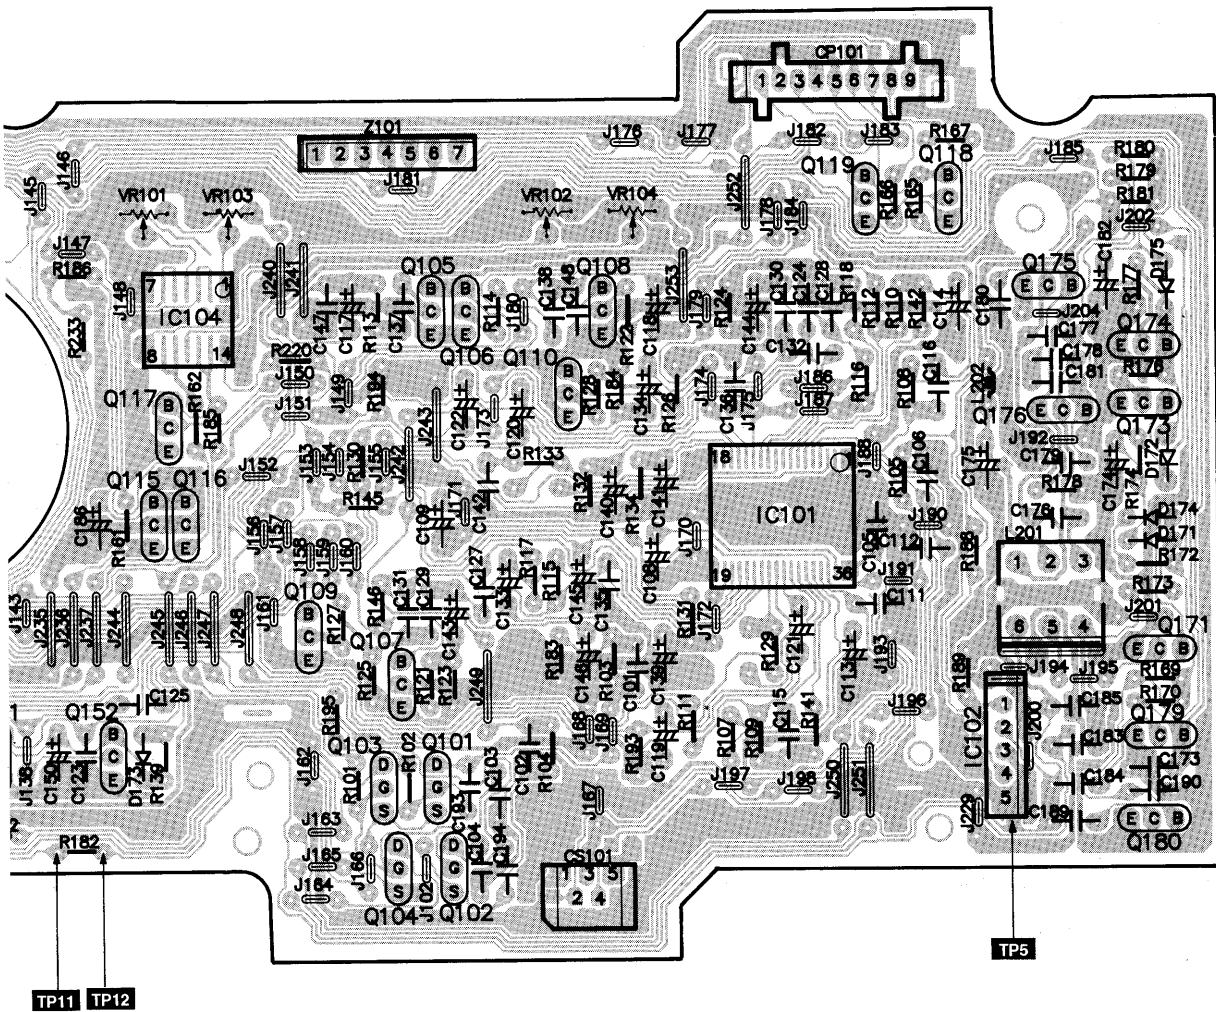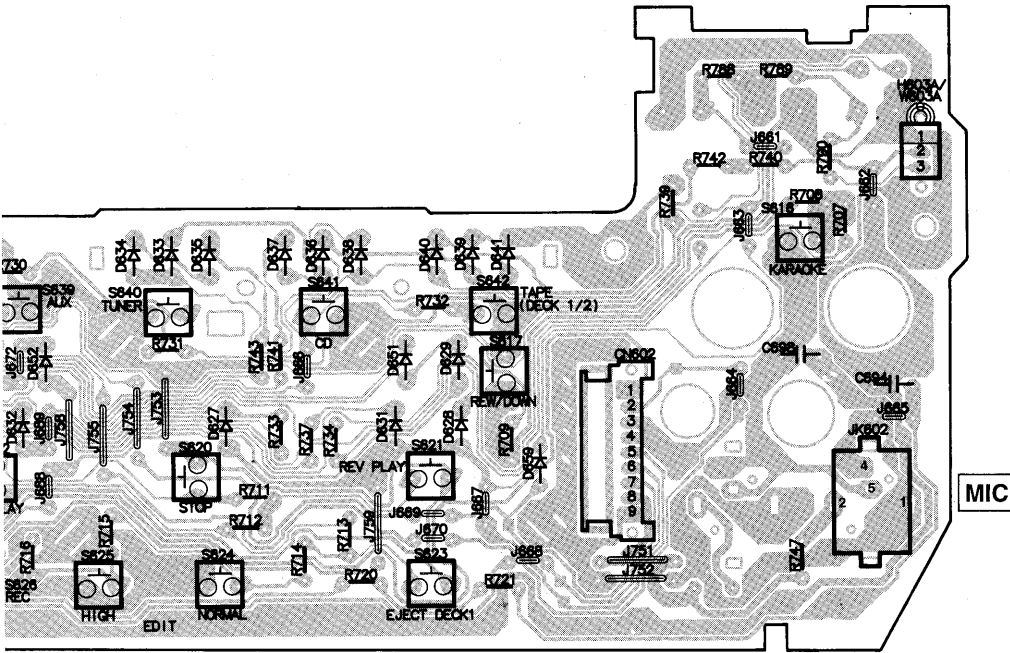


F LED P.C.B. (REP2199D)

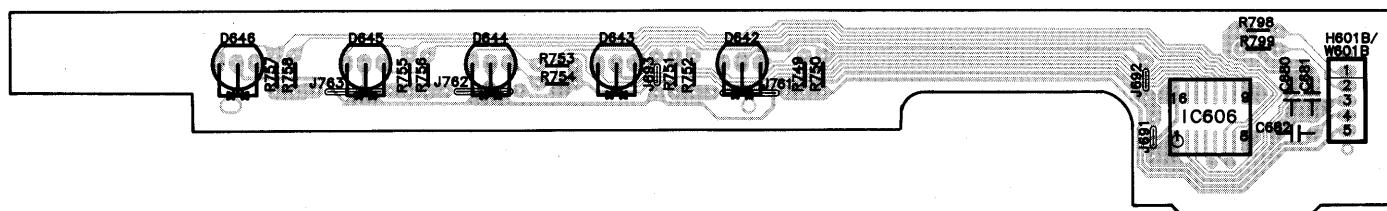


H SENSOR P.C.B. (REP2199D)

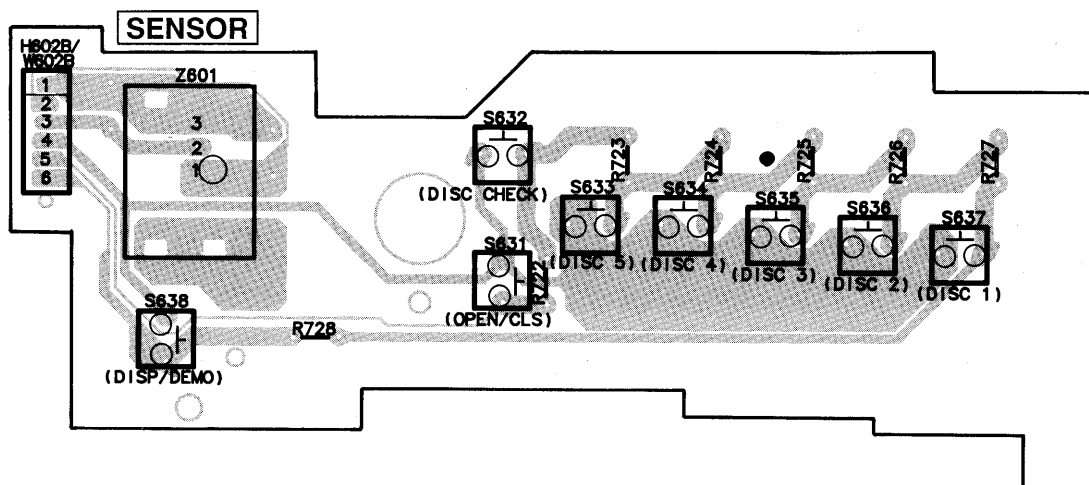


I OPERATION(POWER) P.C.B. (REP2199D)

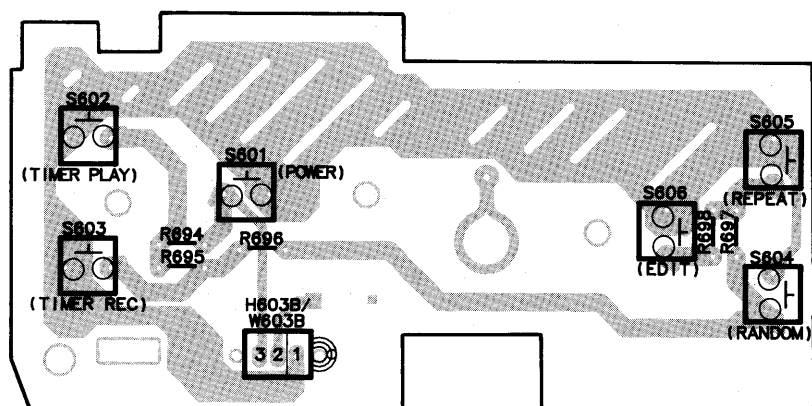


J BACK LIGHT P.C.B. (REP2196D)

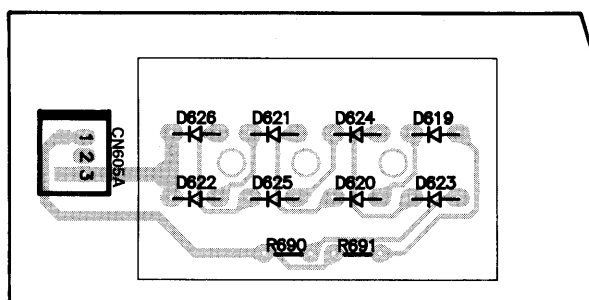




L TRANSFORMER P.C.B. (REP2197C) E, EG

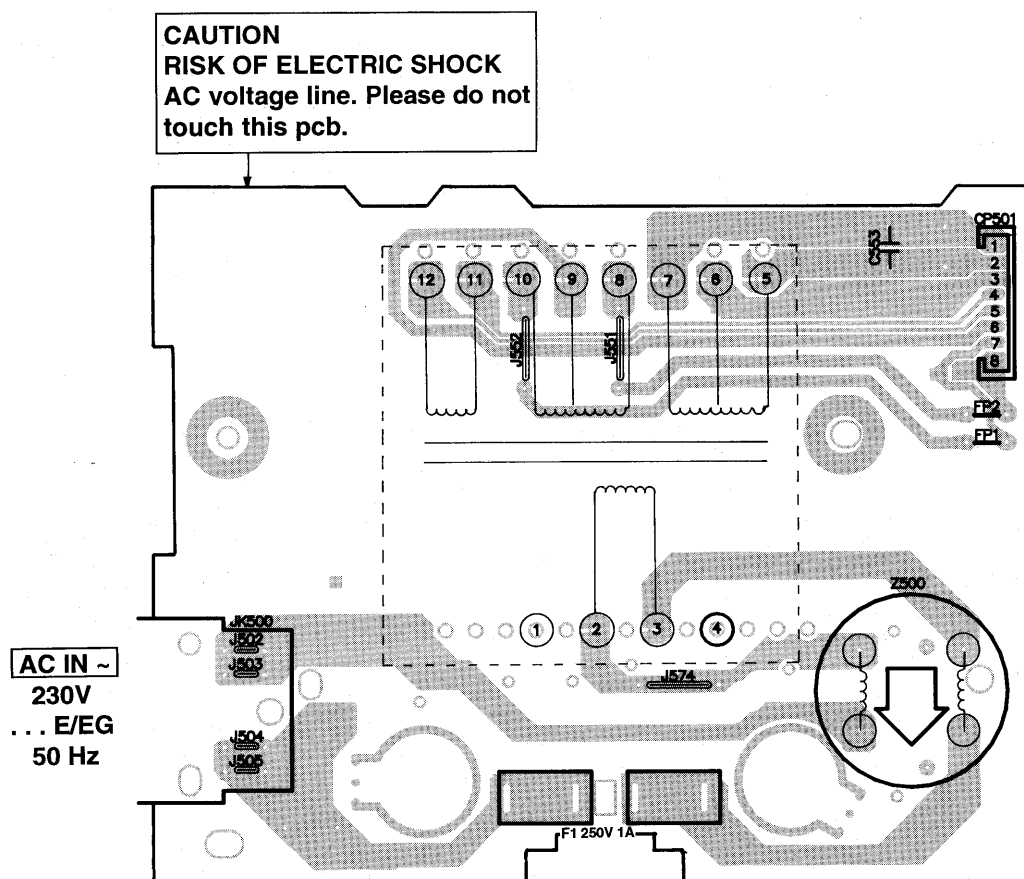

L TRANSFORMER P.C.B. (REP2197D) EB

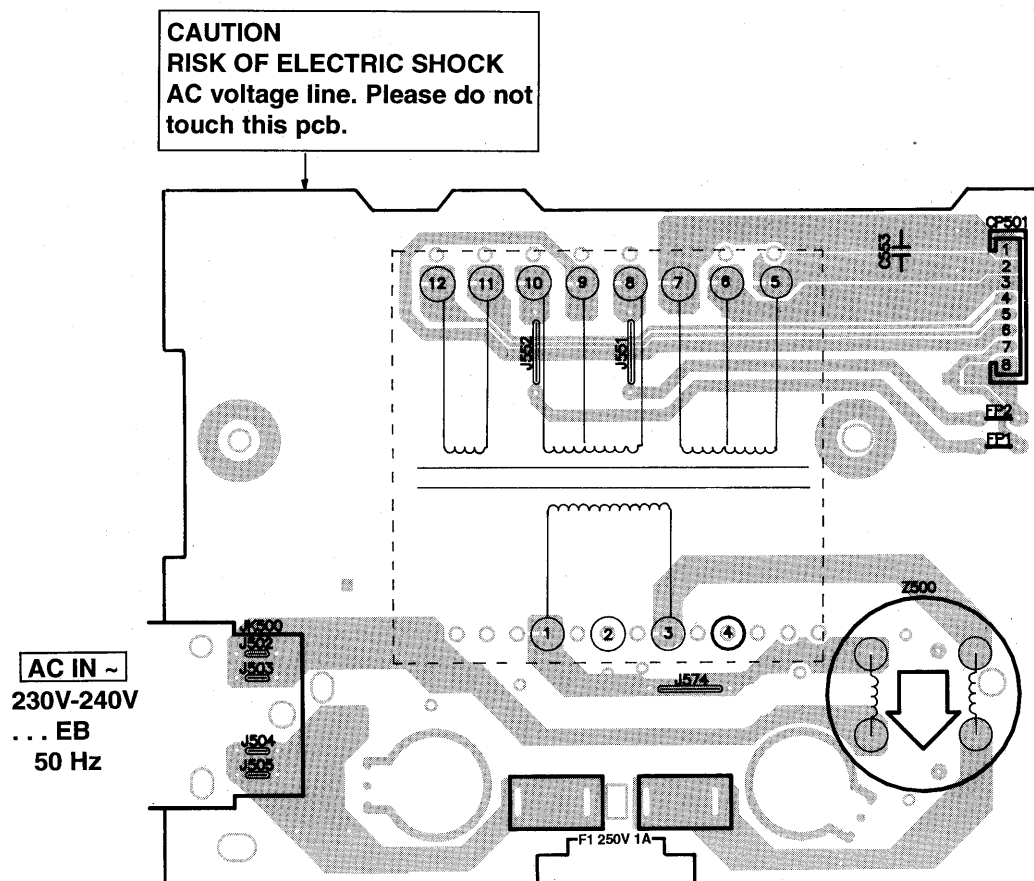

■ Schematic Diagram

(All schematic diagrams may be modified at any time with the development of new technology)

Note :

< for Servo circuit > (Page 41)

- S701 : Reset switch

< for Panel circuit, Sensor Circuit, Operation Circuit and Operation(Power) circuit > (Page 44 – 46)

- | | | | | | |
|--------|---|------------------------|---------|---|-------------------------|
| • S601 | : | Power switch | • S624 | : | Tape Edit Normal switch |
| • S602 | : | Timer Play switch | • S625 | : | Tape Edit High switch |
| • S603 | : | Timer Record switch | • S626 | : | Record switch |
| • S604 | : | Random switch | • S627 | : | Reverse Mode switch |
| • S605 | : | Repeat switch | • S628 | : | Eject Deck 2 switch |
| • S606 | : | Easy Edit switch | • S629 | : | DOLBY NR switch |
| • S608 | : | Clock/Timer switch | • S631 | : | CD Open/Close switch |
| • S609 | : | EQ. Space switch | • S632 | : | CD Disc Check switch |
| • S611 | : | V. Bass switch | • S633 | : | CD Disc 5 switch |
| • S612 | : | EQ. Space Down switch | • S634 | : | CD Disc 4 switch |
| • S613 | : | EQ. Space Up switch | • S635 | : | CD Disc 3 switch |
| • S614 | : | EQ. Space Left switch | • S636 | : | CD Disc 2 switch |
| • S615 | : | EQ. Space Right switch | • S637 | : | CD Disc 1 switch |
| • S616 | : | Karaoke switch | • S638 | : | Display/Demo switch |
| • S617 | : | REW/Down switch | • S639 | : | AUX switch |
| • S618 | : | FF/Up switch | • S640 | : | Tuner switch |
| • S620 | : | Stop switch | • S641 | : | CD switch |
| • S621 | : | Reverse Play switch | • S642 | : | Deck 1/2 switch |
| • S622 | : | Forward Play switch | • VR601 | : | Mic control |
| • S623 | : | Eject Deck 1 switch | • VR603 | : | Volume control |













< for Deck circuit, Mechanism (Deck 1) circuit and Mechanism (Deck 2) circuit > (Page 51 – 53)

- | | | | | | |
|--------|---|--|---------|---|---|
| • S951 | : | Deck 1 Mode detect switch. | • S975 | : | Deck 2 Record detect switch. |
| • S952 | : | Deck 1 Tape detect switch. | • VR101 | : | Deck 1 Lch playback gain adjustment VR (DOLBY). |
| • S953 | : | Deck 1 CrO ₂ detect switch. | • VR102 | : | Deck 1 Rch playback gain adjustment VR (DOLBY). |
| • S971 | : | Deck 2 Mode detect switch. | • VR103 | : | Deck 2 Lch playback gain adjustment VR (DOLBY). |
| • S972 | : | Deck 2 Tape detect switch. | • VR104 | : | Deck 2 Rch playback gain adjustment VR (DOLBY). |
| • S973 | : | Deck 2 CrO ₂ detect switch. | • VR201 | : | Deck 2 Normal speed adjustment. |
| • S974 | : | Deck 2 Record detect switch. | | | |

< for Loading Motor circuit > (Page 55)

- S1, S4 : Leaf switch.
- S2, S3, S5 : Mecha switch.

•Signal line


- | | | | | | | | | |
|---|---|-------------------|---|---|----------------------|---|---|--------------------|
|  | : | +B line |  | : | Playback signal line |  | : | AM signal line |
|  | : | -B line |  | : | Record signal line |  | : | AM OSC signal line |
|  | : | FM/AM signal line |  | : | CD signal line |  | : | FM OSC signal line |
|  | : | Main signal line |  | : | FM signal line |  | : | Aux signal line |

•The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis.

Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

No mark : Playback << >>.....Rec { } : Tuner (()) : CD ()AM < >FM

•Importance safety notice:

Components identified by  mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

Caution !

IC, LSI and VLSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during repair.


•Cover the parts boxes made of plastics with aluminium foil.


•Put a conductive mat on the work table.

•Ground the soldering iron.

•Do not touch the pins of IC, LSI or VLSI with fingers directly.


OPTICAL PICKUP

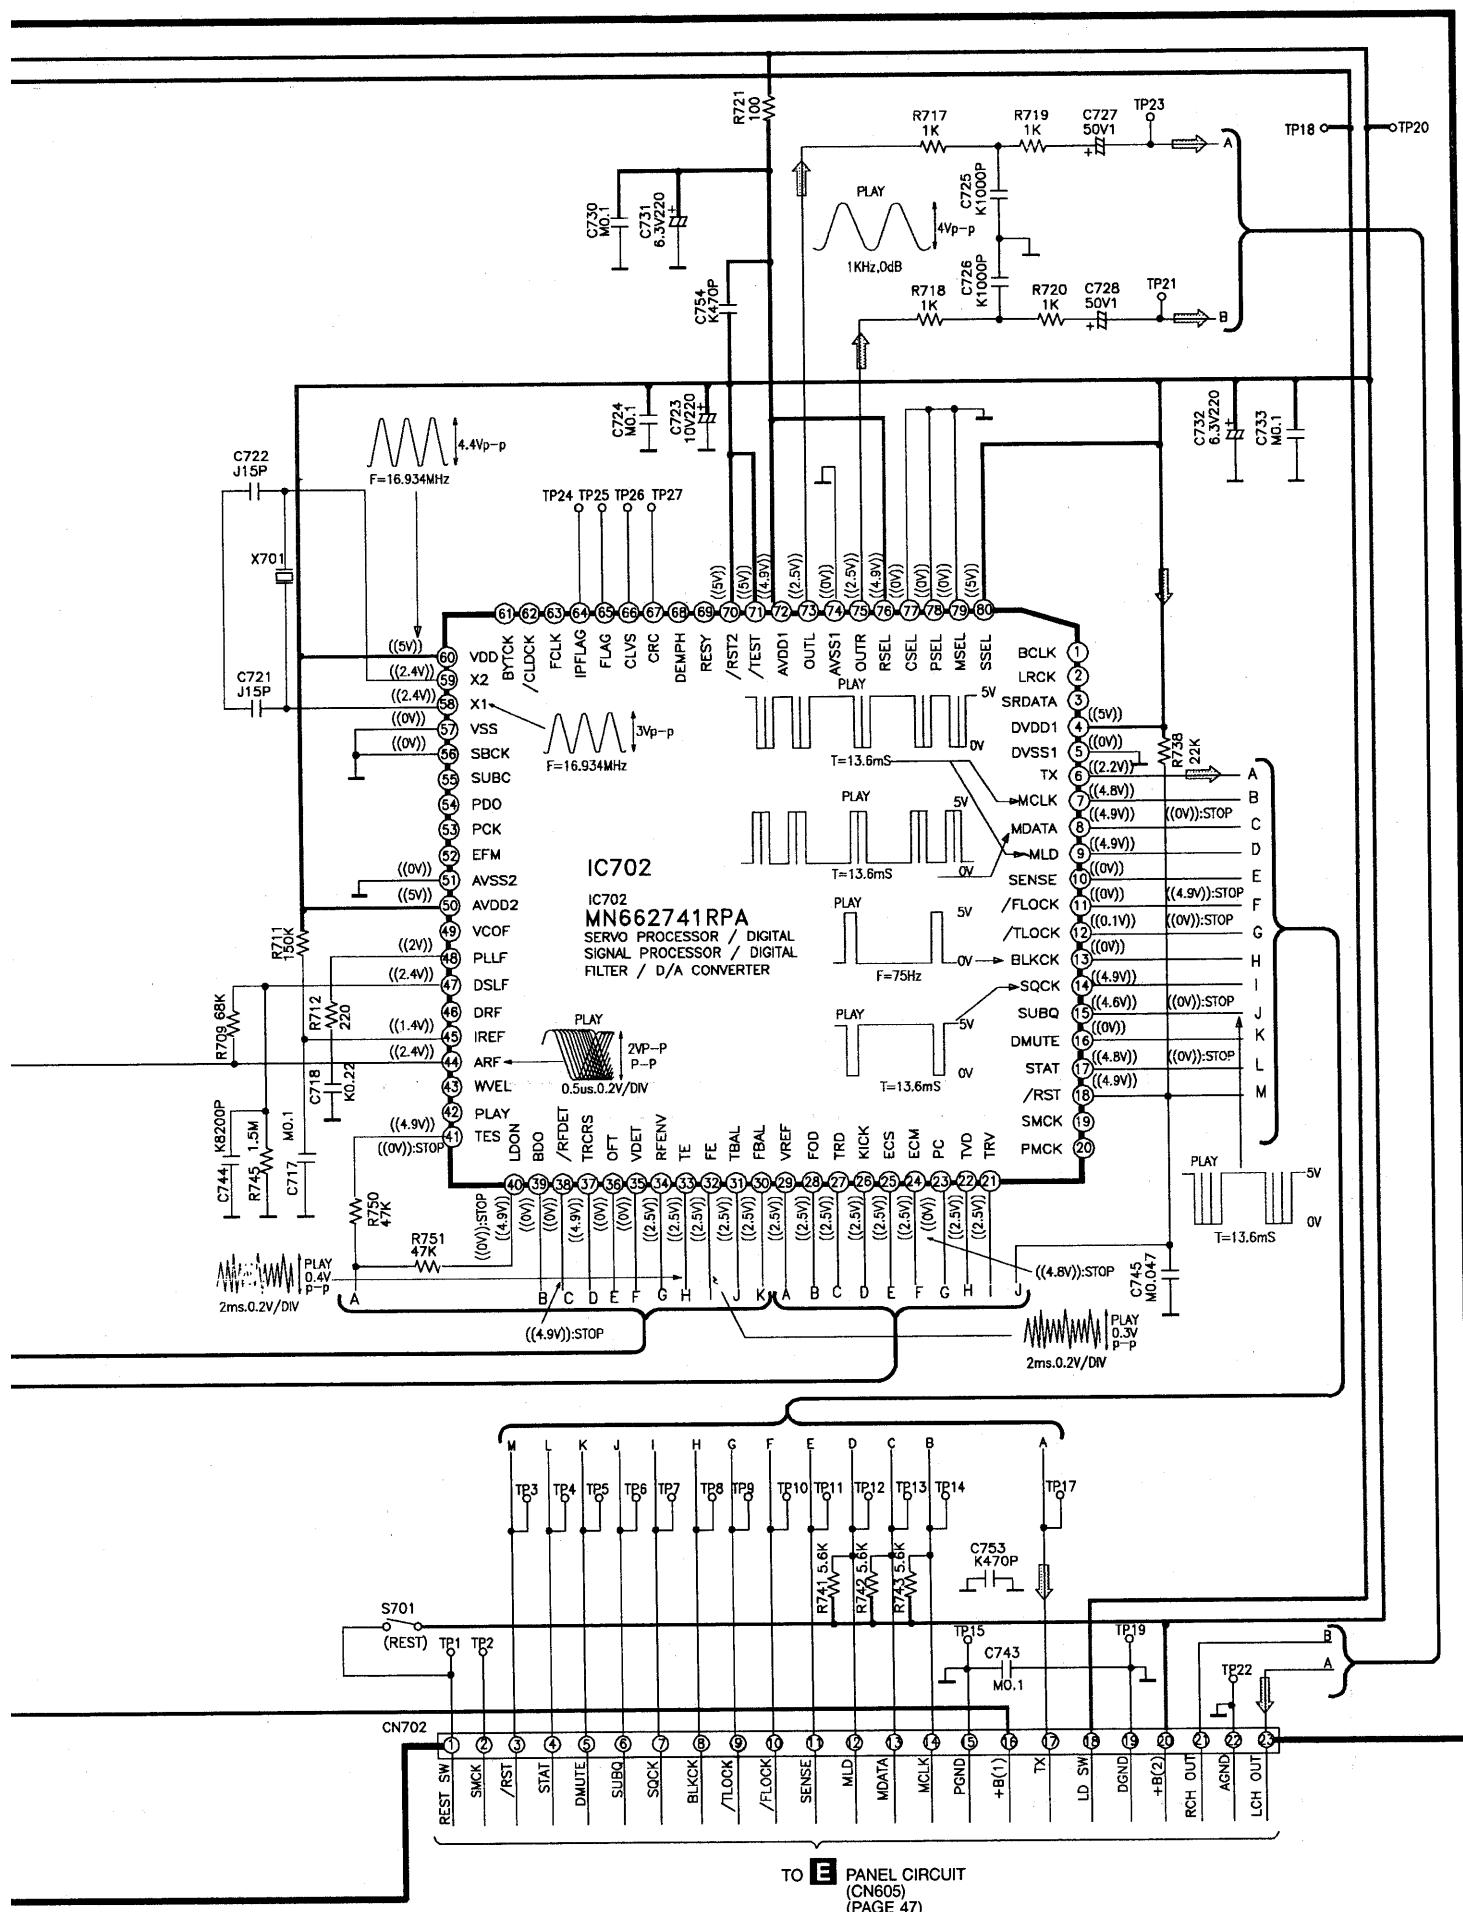


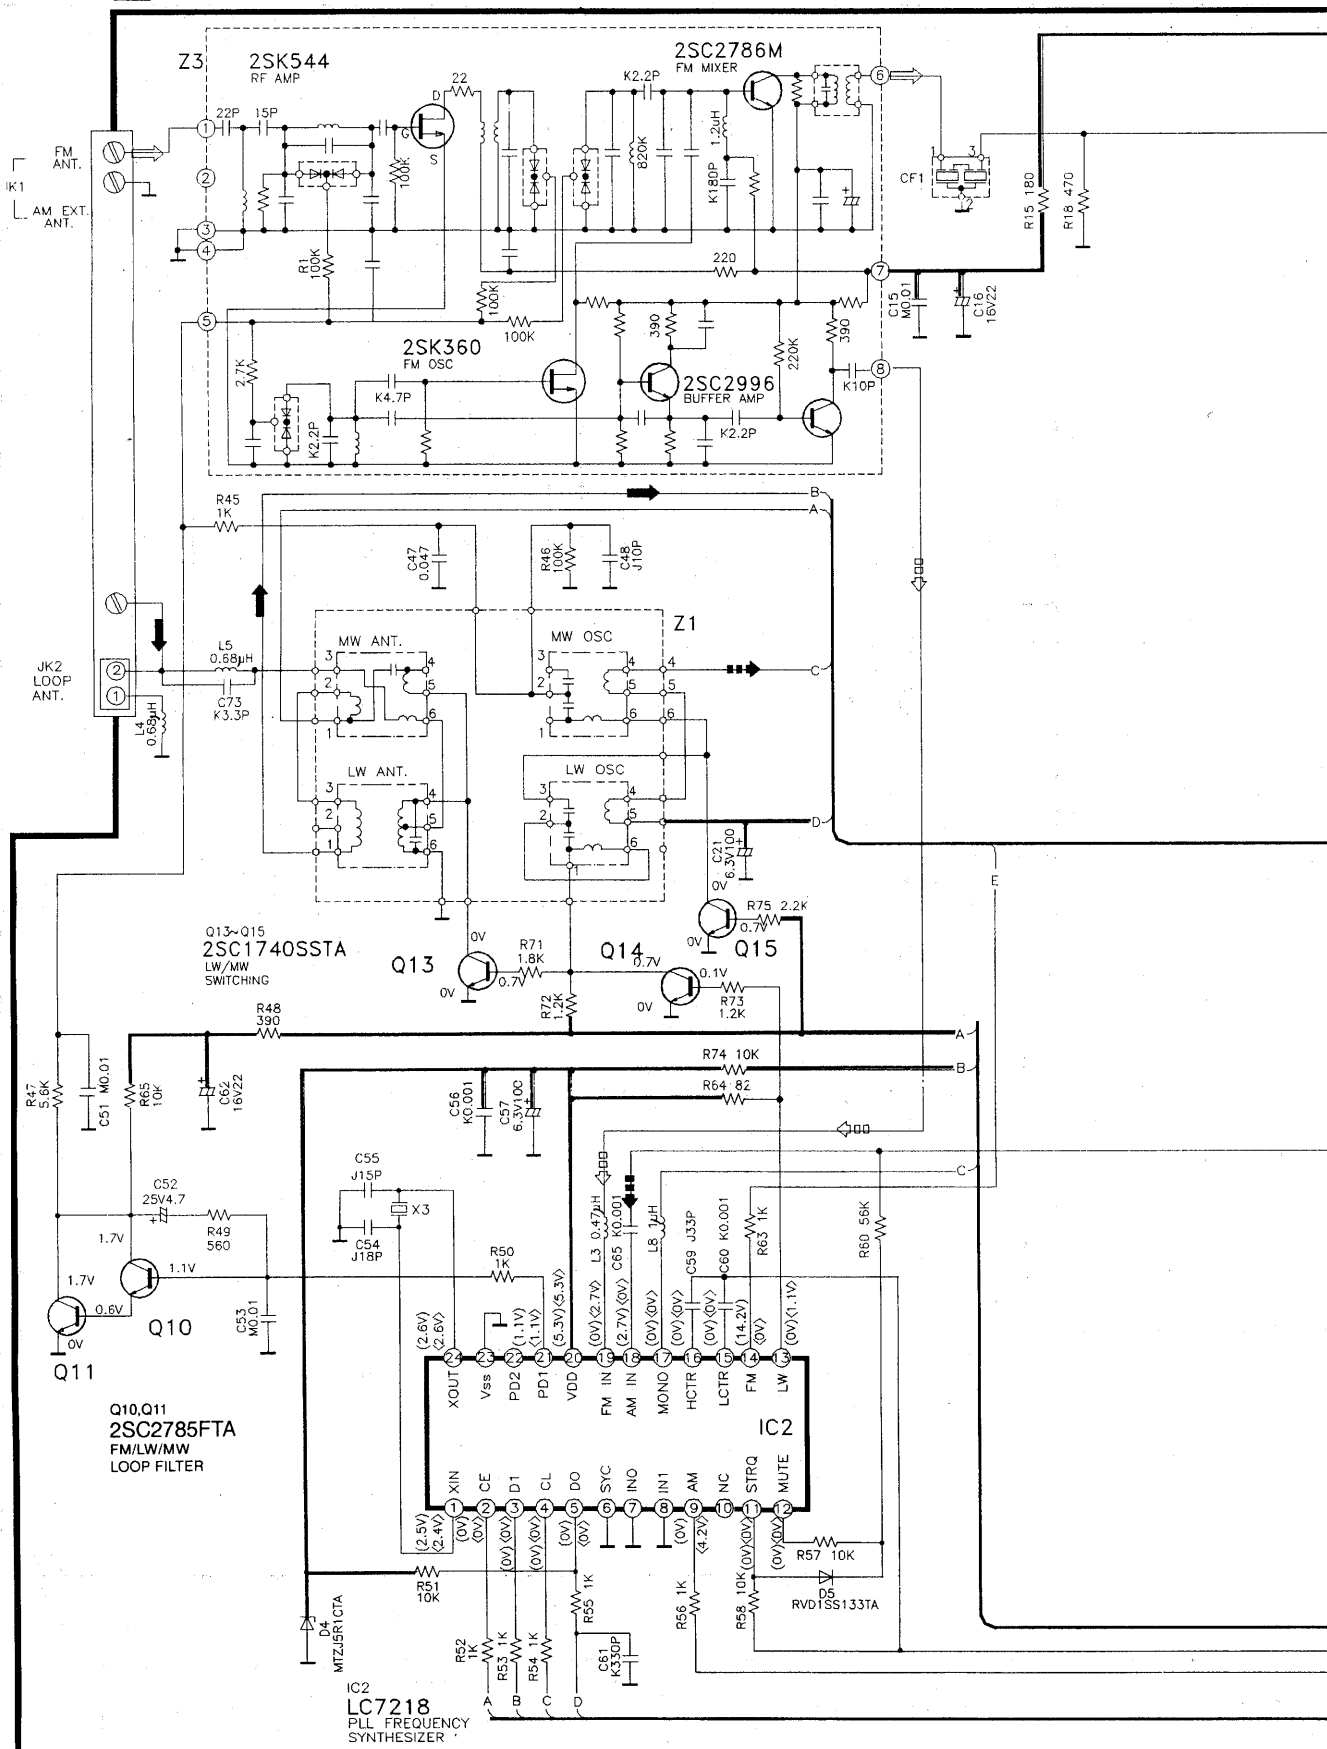
B TUNER CIRCUIT



OPERATION (POWER) CIRCUIT

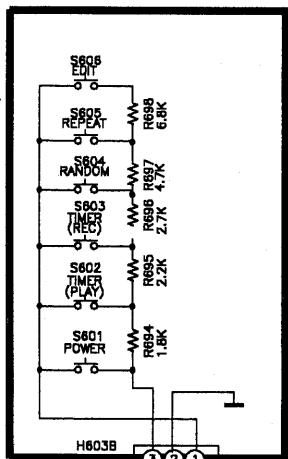


H SENSOR CIRCUIT

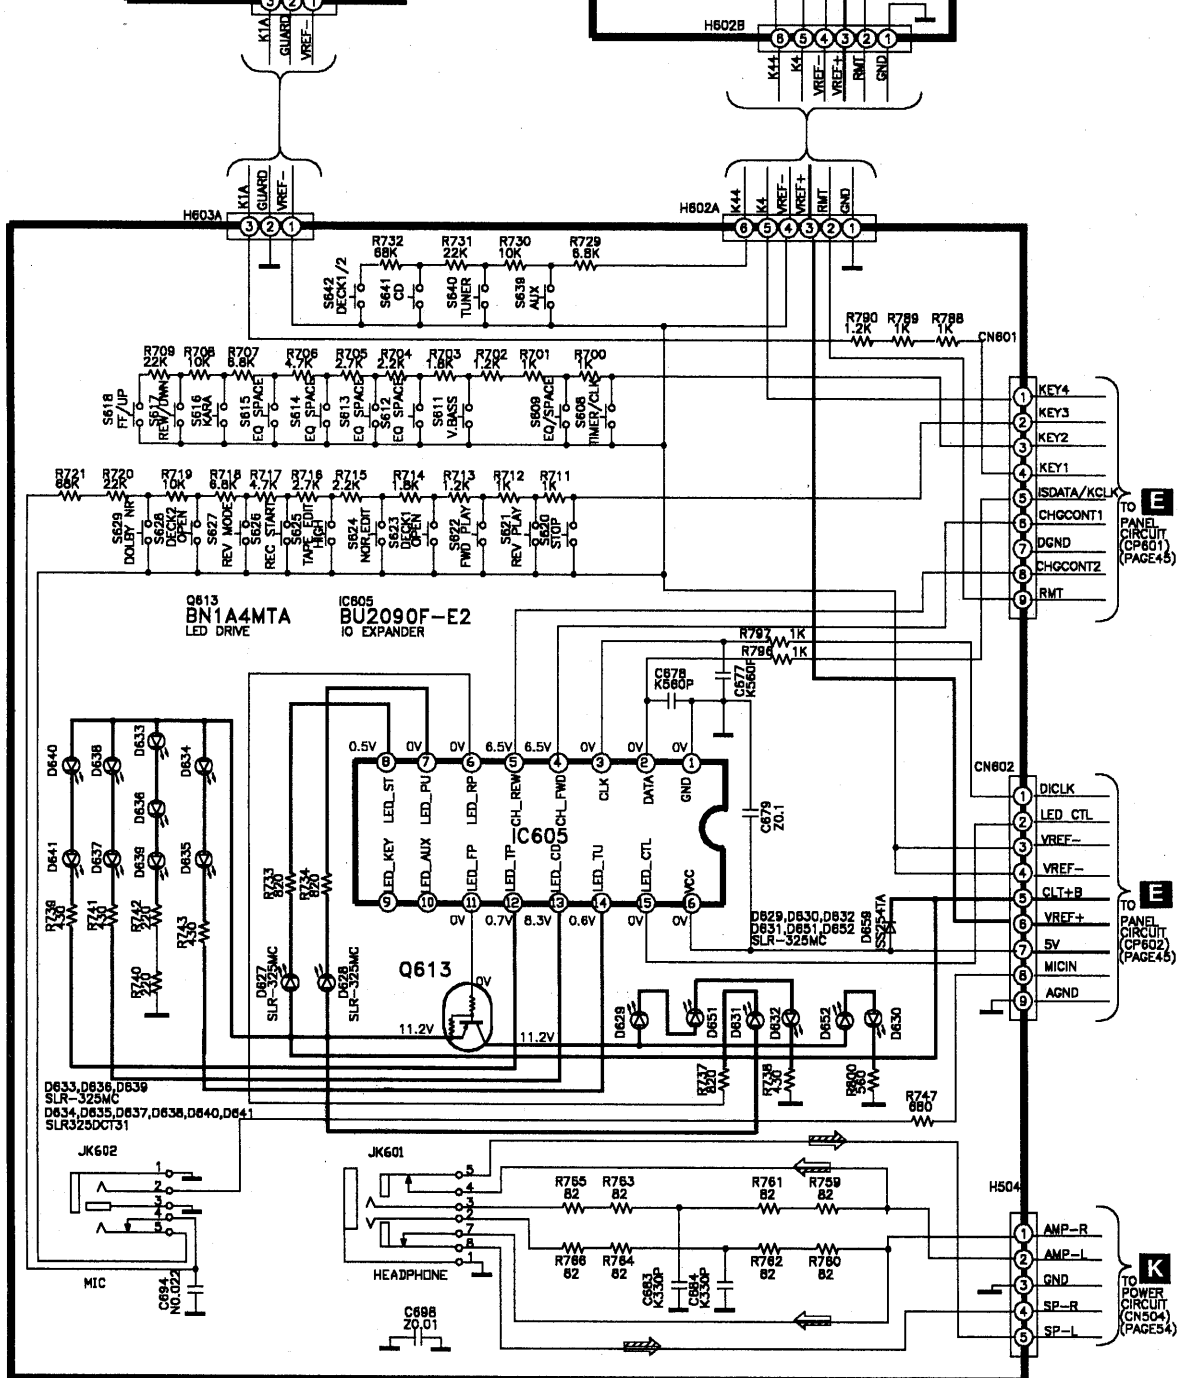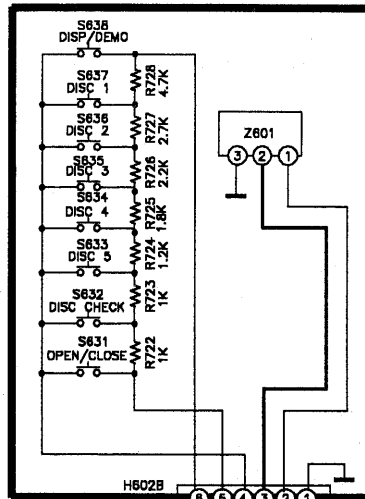



G OPERATION CIRCUIT

E PANEL CIRCUIT

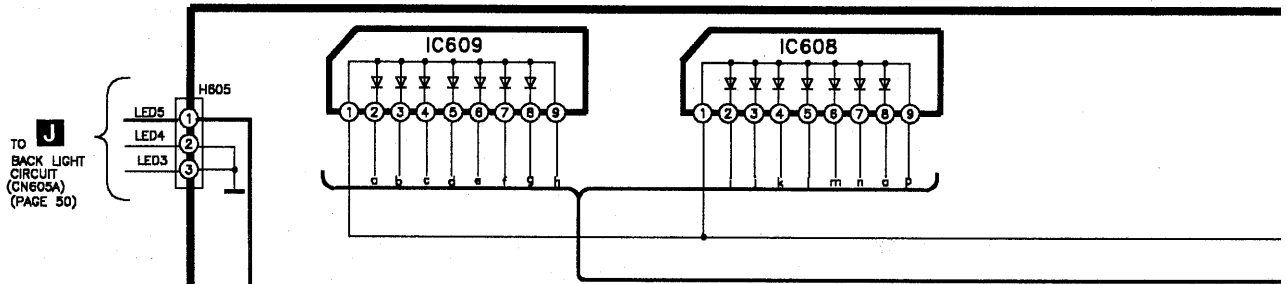


F LED CIRCUIT

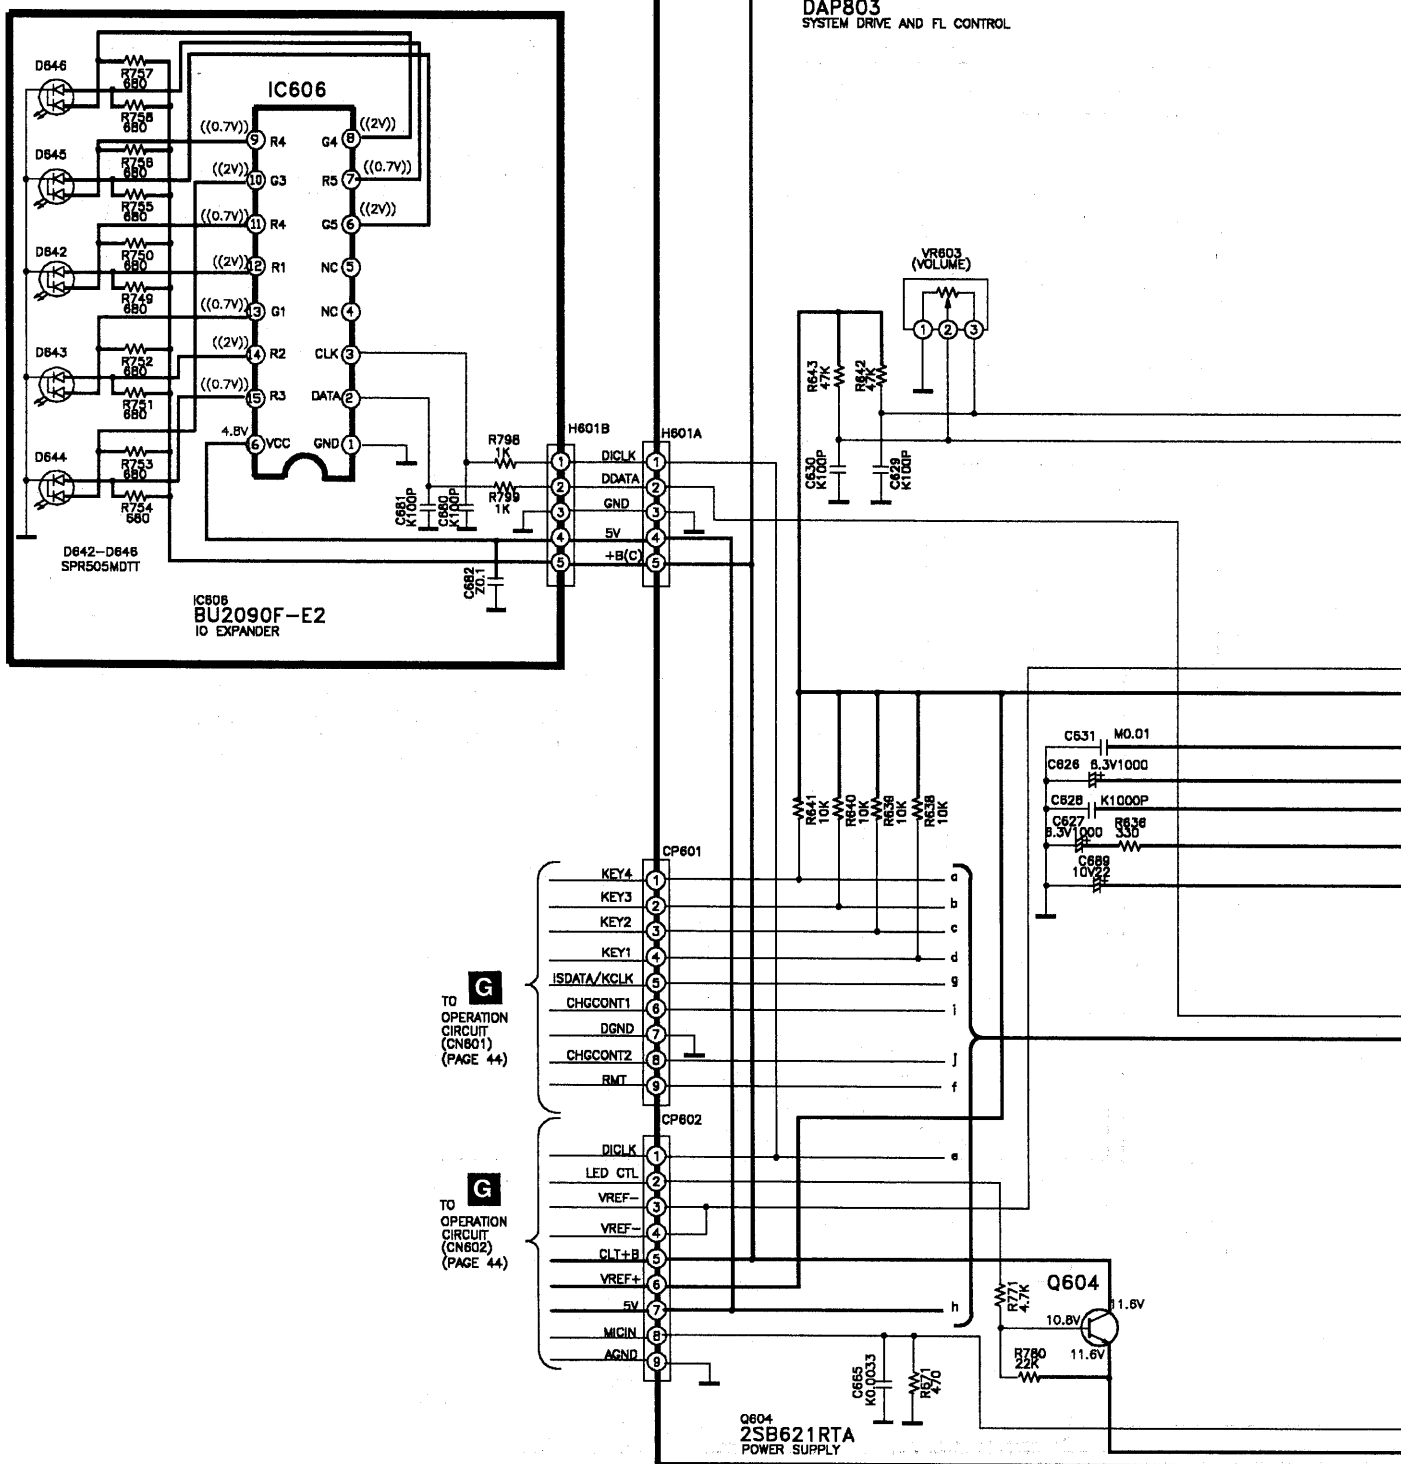


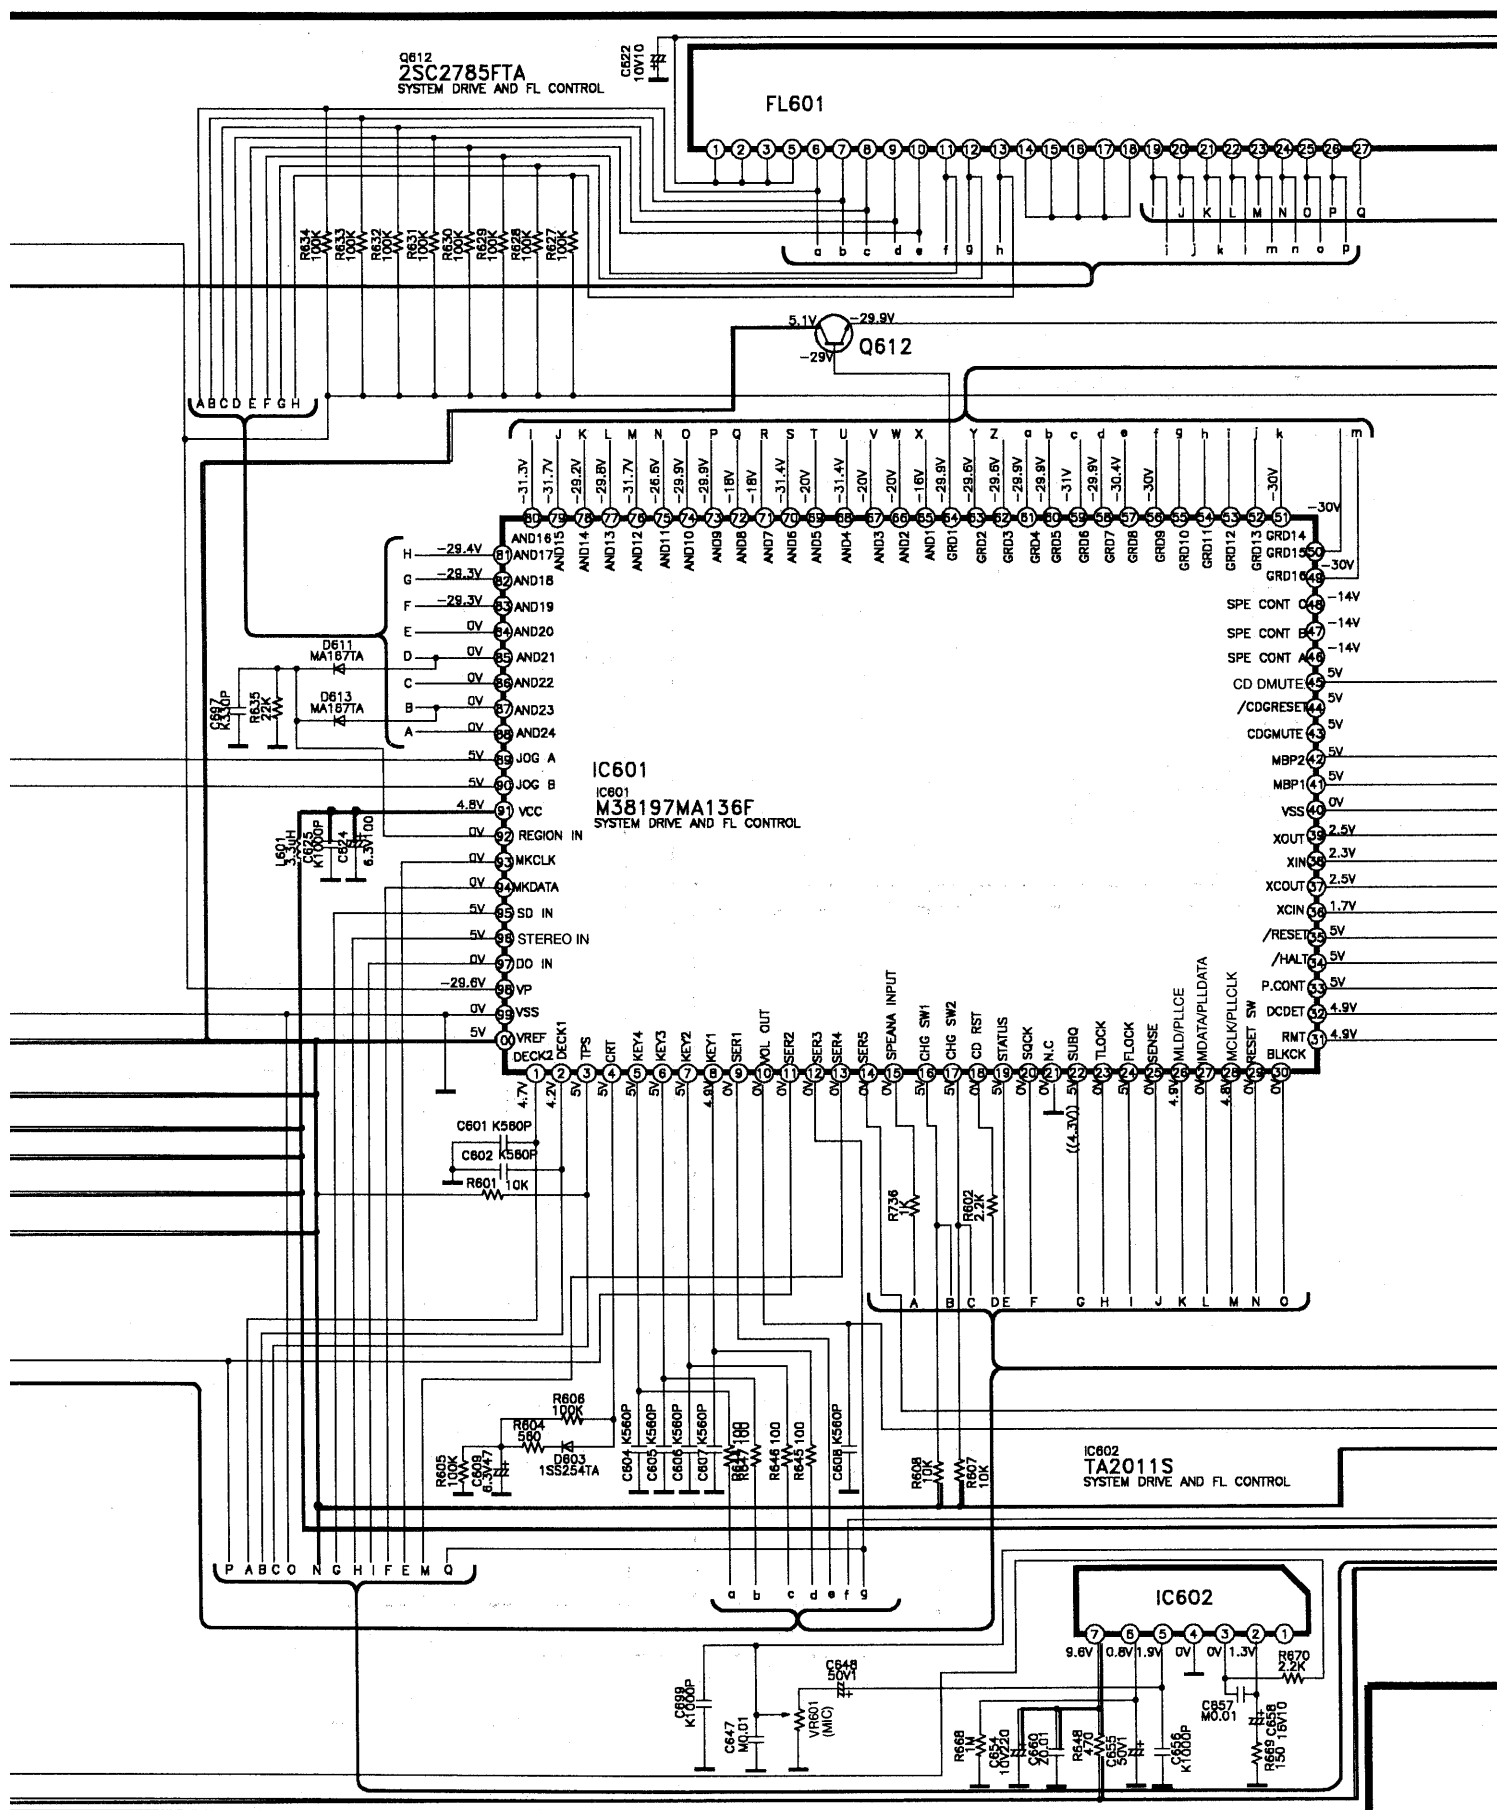








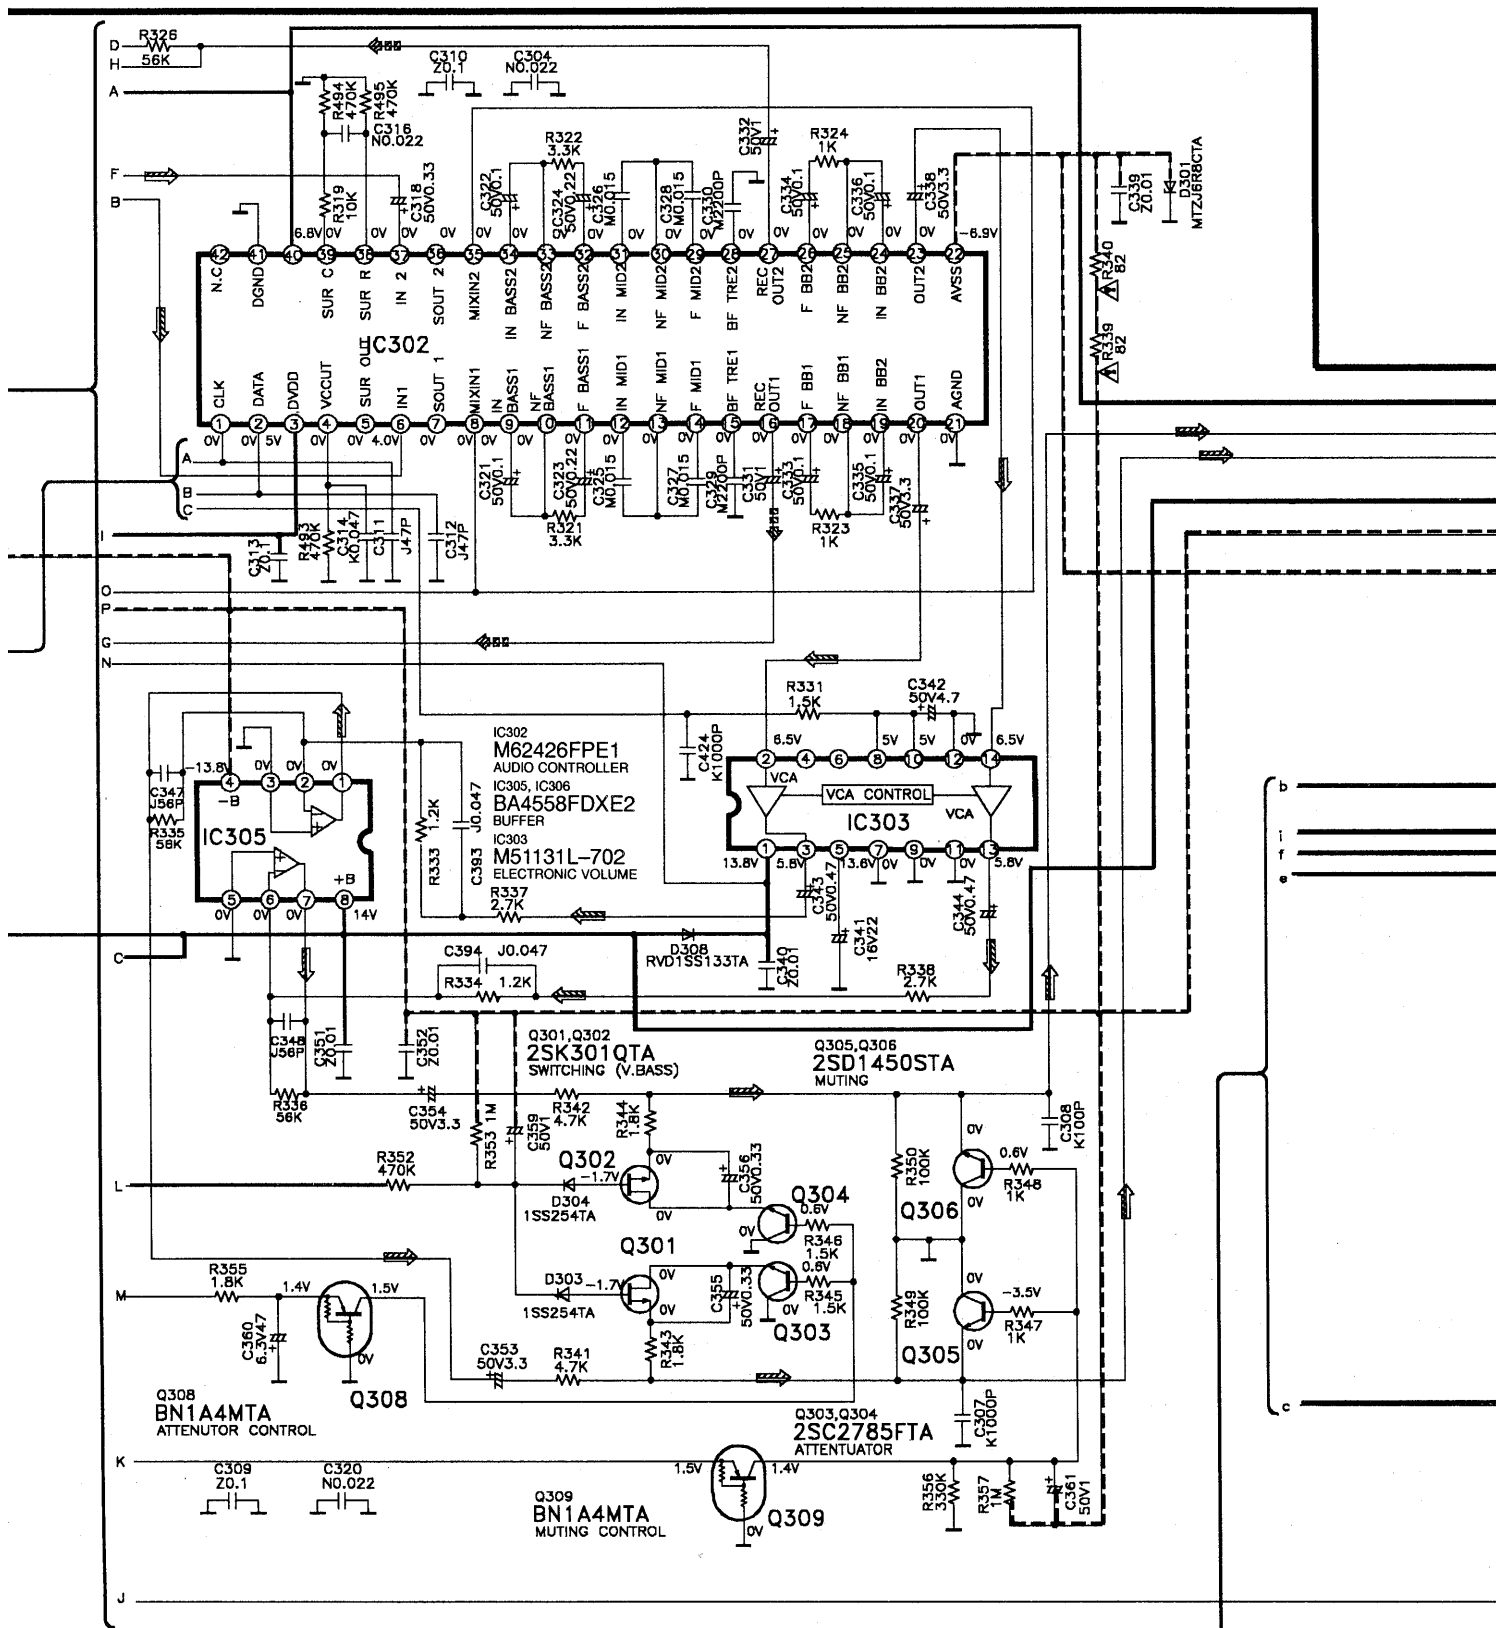


J BACK LIGHT CIRCUIT

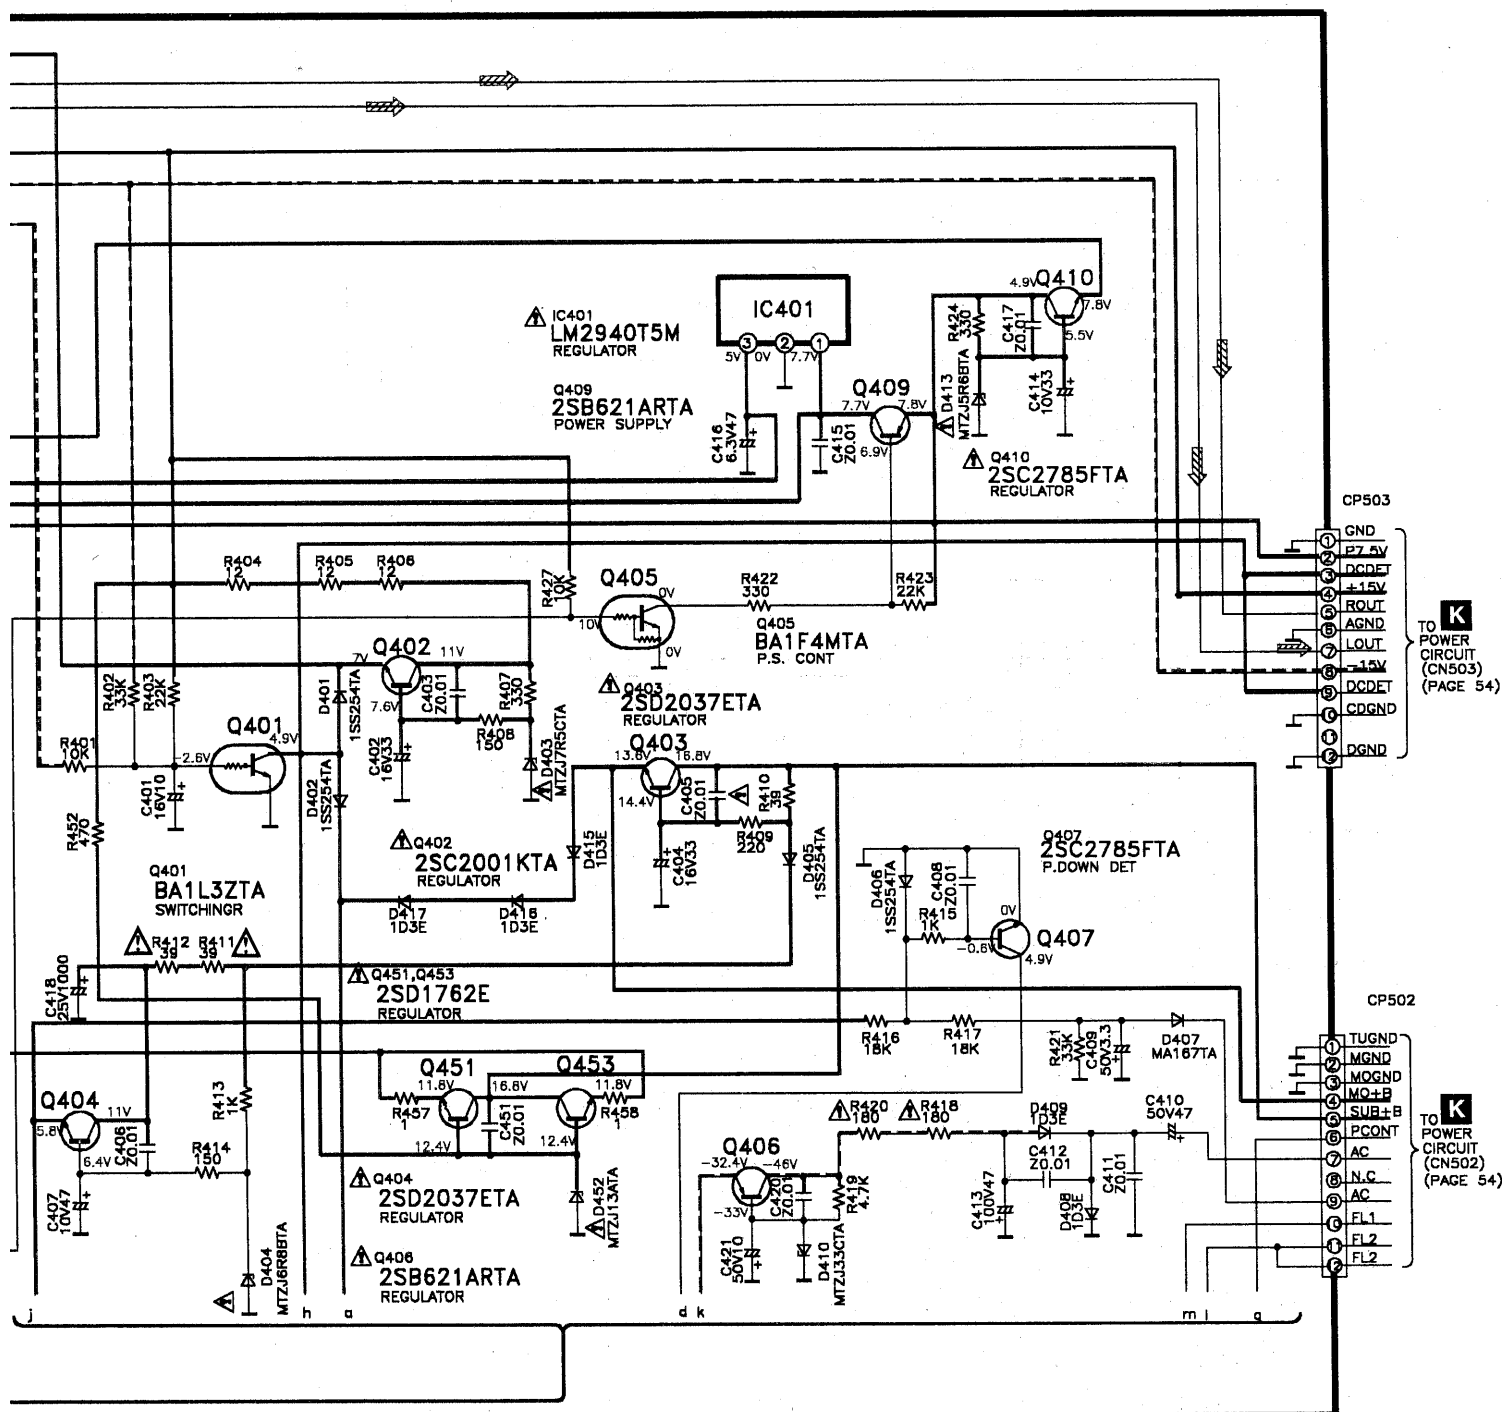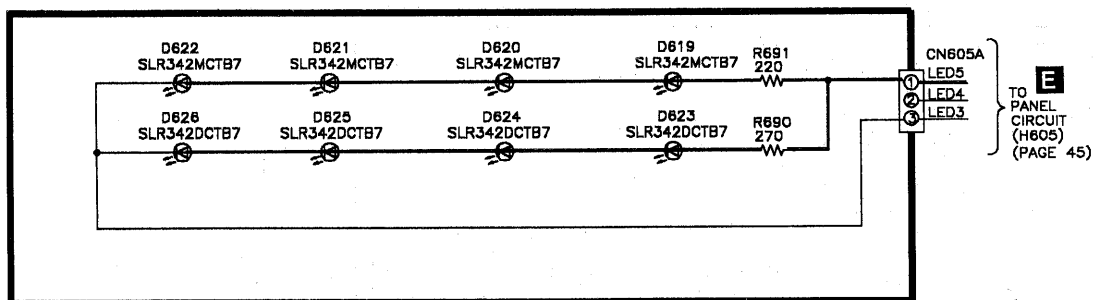




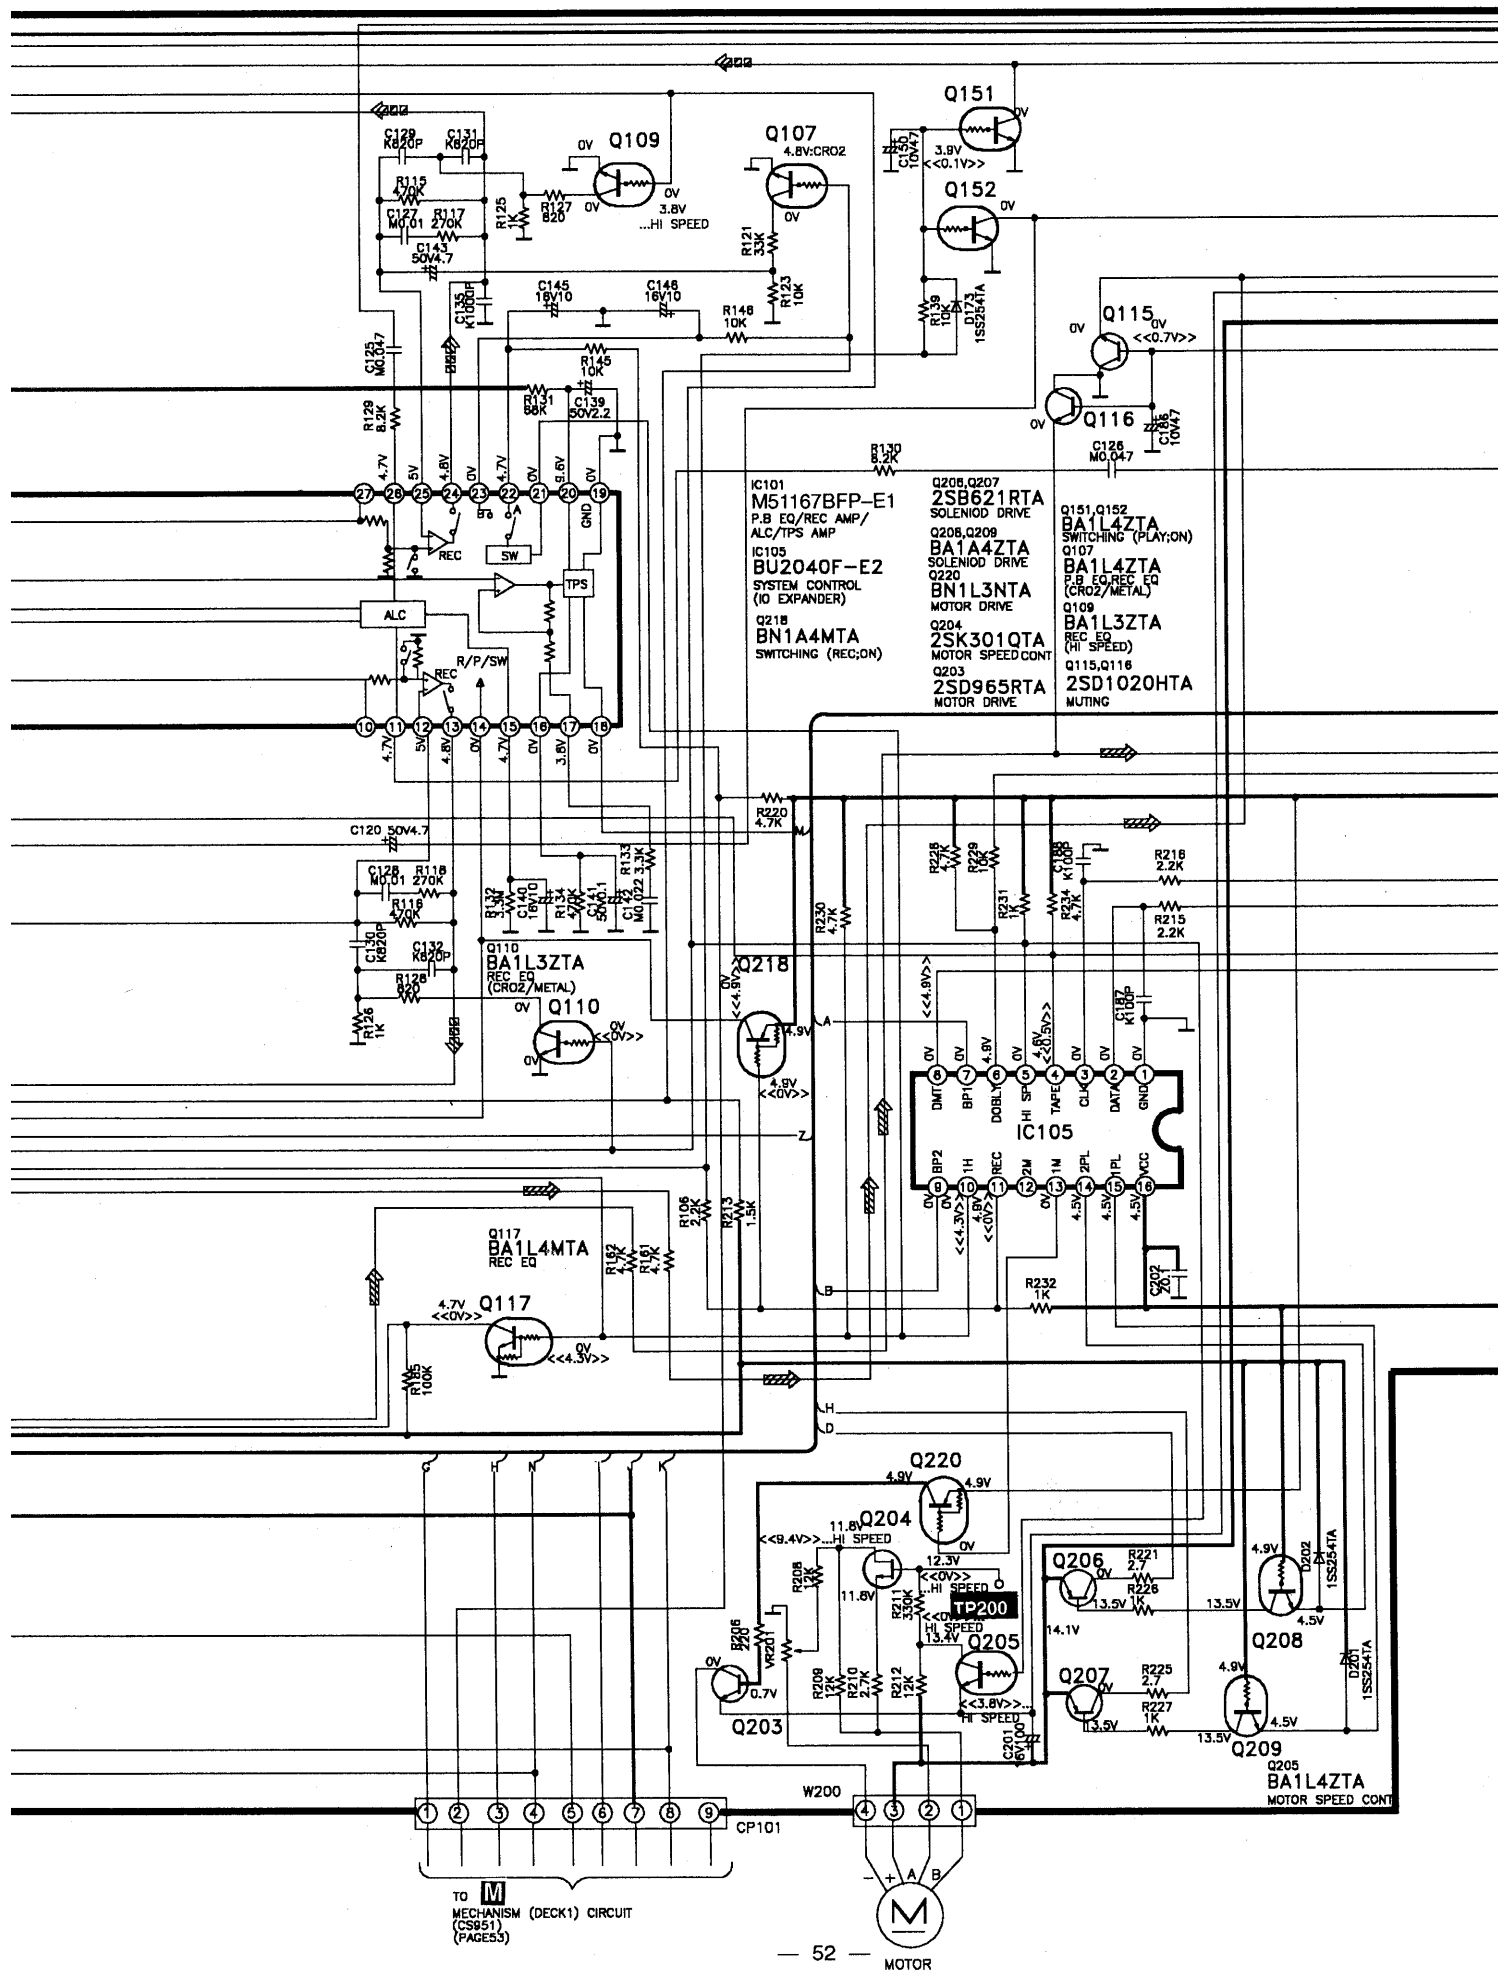




N MECHANISM (DECK 2)
CIRCUIT






DETECTING SWITCH (1) CIRCUIT DETECTING SWITCH (2) CIRCUIT

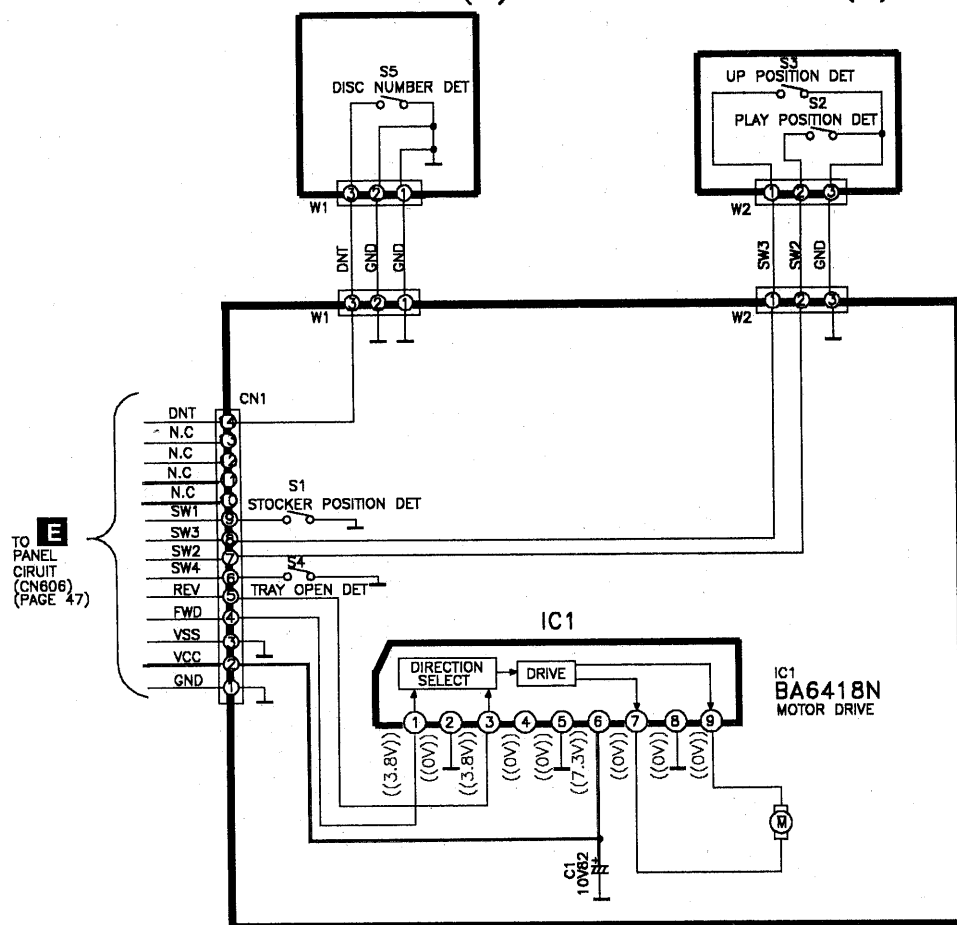


O LOADING MOTOR CIRCUIT

L TRANSFORMER CIRCUIT FOR EB

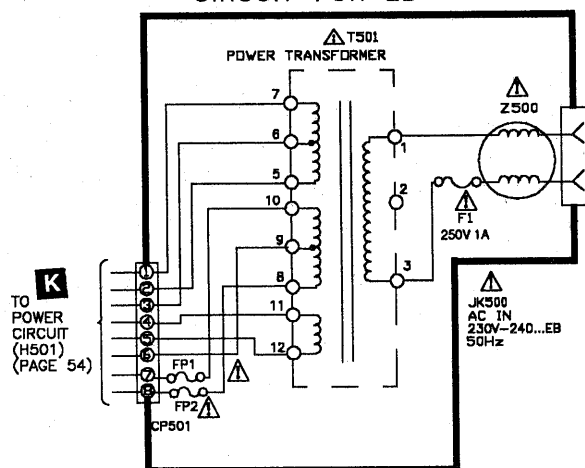

Troubleshooting Guide

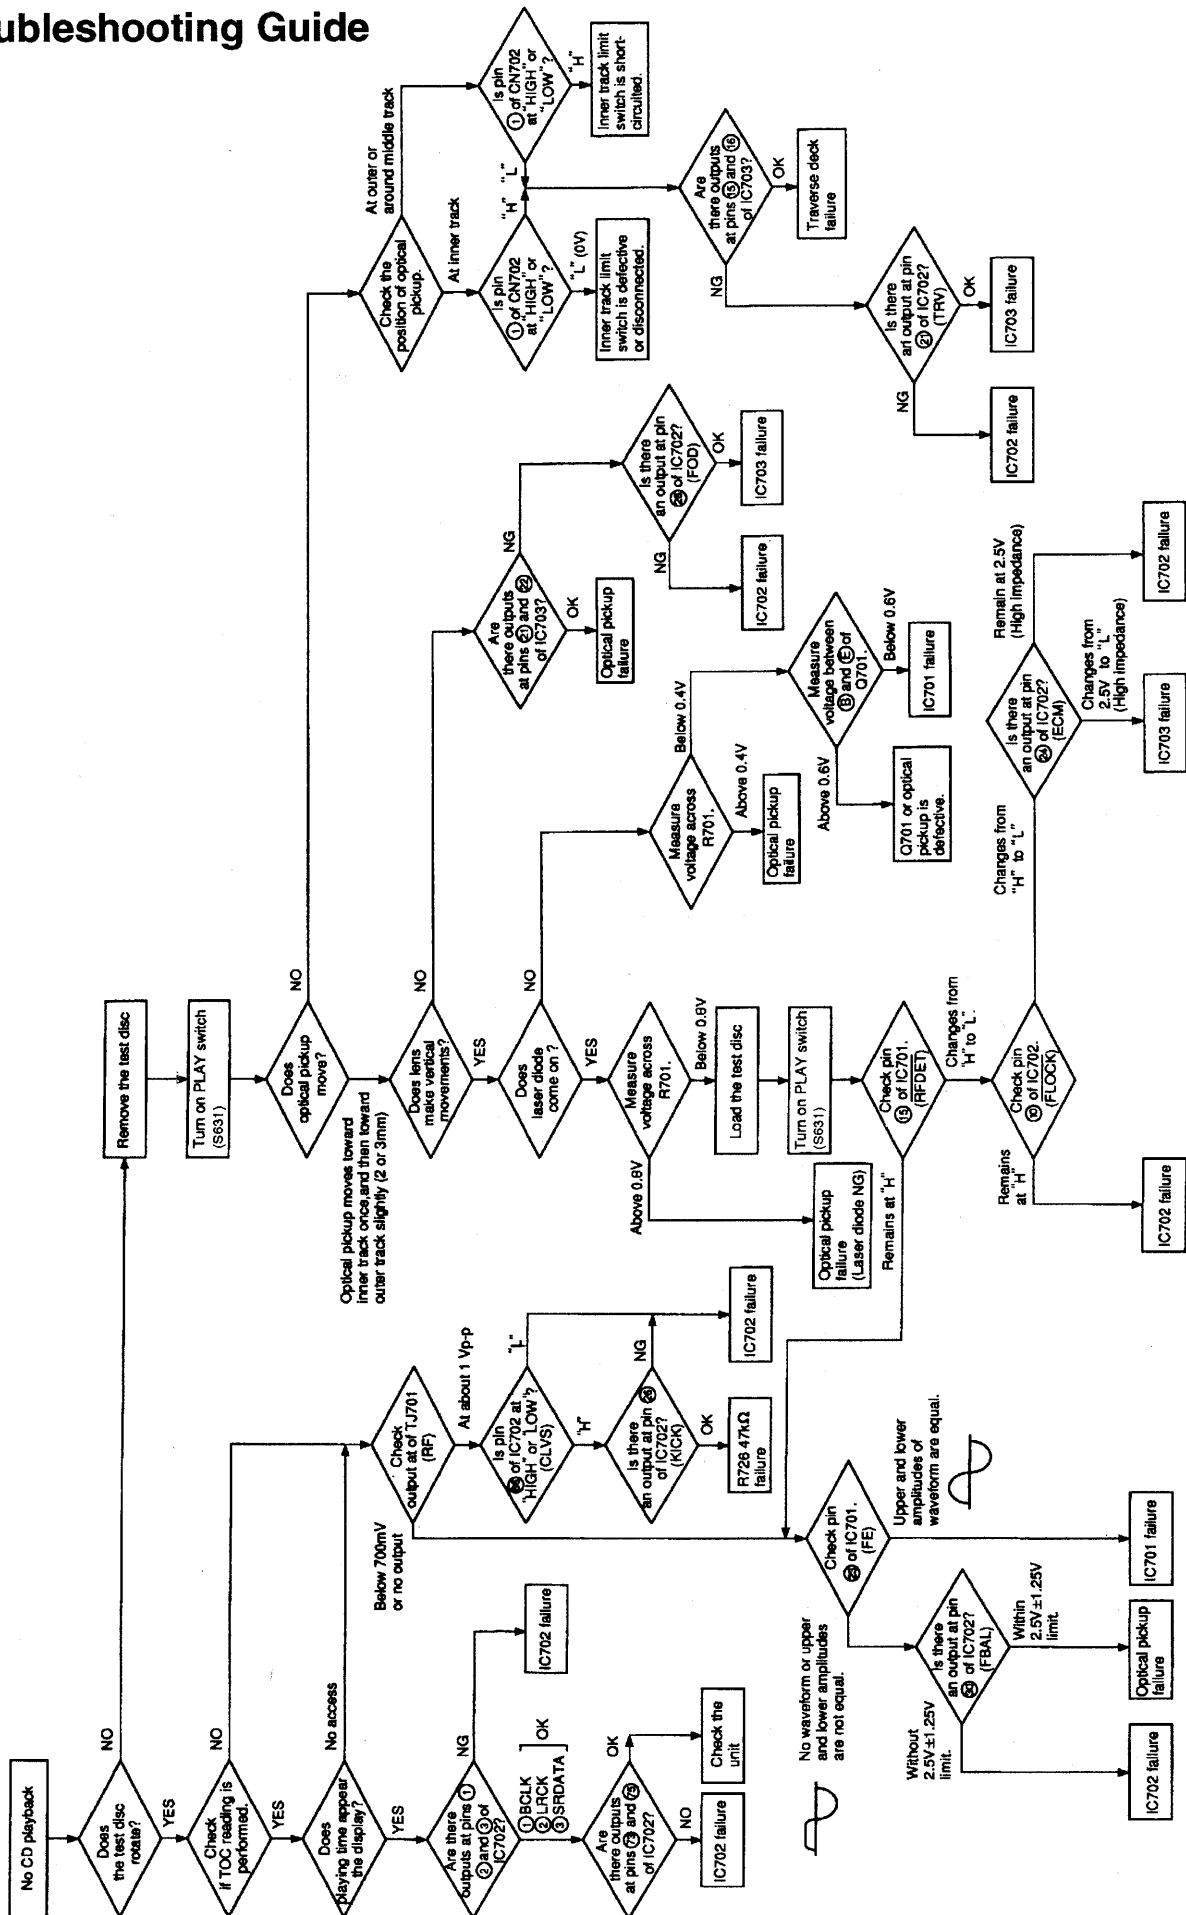

■ Mechanism Parts List

Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
		CASSETTE DECK		113	RMB0404	SPRING		129	RMK0283	PLATE	
				114	RMB0406	SPRING		130	RXL0124	PINCH ROLLER ASS'Y	
101	RED0038	P/B HEAD BLOCK ASS'Y		115	RMB0408	SPRING		130-1	RMB0401	SPRING	
101-1	RHE5152ZB	SCREW		116	RML0370	LEVER		131	RXL0125	PINCH ROLLER ASS'Y	
102	RED0037	R/P HEAD BLOCK ASS'Y		117	RML0371	LEVER		131-1	RMB0402	SPRING	
102-1	RHE5152ZB	SCREW		118	RML0372	ARM		132	RXL0126	GEAR	
103	RDG0300	REEL TABLE BASE		119	RML0374	LEVER		133	RXQ0412	ROD	
104	RDG0301	GEAR		120	RMM0131	LEVER		133-1	RMB0405	SPRING	
105	RDG0026	GEAR		121	RMM0133	LEVER		133-2	RMM0132	ROD	
106	RDR0029	RELAY PULLY		122	RMQ0519	REEL TABLE HEAD		134	REM0055	MOTOR ASS'Y	
107	RDV0033-1	BELT		123	RMS0398-1	SHAFT		135	RHD26022	SCREW	
108	RDV0034	BELT		124	RSJ0003	PLUNGER		136	XTW2+5L	SCREW	
109	RDV0035	BELT		125	RUS609ZC	SPRING		137	XTW26+10S	SCREW	
110	RUW147ZA	SPRING		126	RXF0049	FLYWHEEL ASS'Y		138	XYC2+JF17	SCREW	
111	RMB0400	REEL TABLE SPRING		127	RXF0050	FLYWHEEL ASS'Y		139	RFKJXED70-K	CHASSIS ASS'Y	
112	RMB0403	SPRING		128	RXG0040	GEAR					

■ CD Loading Unit Parts List


Note : [M] mark in Remarks column indicates parts that are supplied by MESA.


Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
		LOADING MECHANISM		321	RMM0141	SLIDE PLATE LEVER (2		344-1	RMF0221	FELT	
				322	RGQ0175-K	TRAY ORNAMENT		345	RML0381	HOLDING CATCH (1)	
301	RDG0309	RELAY GEAR	[M]	323	RHD20010	SCREW DRIVE RACK	[M]	346	RML0382	HOLDING CATCH (2)	
302	RDG0310	PULLEY GEAR	[M]	324	RMA0868	SUPPORT ANGLE	[M]	347	RML0384	UP PREVENTION LEVER	[M]
303	RDG0311	DRIVE GEAR	[M]	325	RME0171	BASE LOCK LEVER SP.		348	RHM245ZA	MAGNET	[M]
304	RDG0313	UP/DOWN GEAR LEVER		326	RME0172	CARRIER LOCK LEVER SP.		349	RME0174	CLAMP BASE SPRING	
305	RDV0036	BELT	[M]	327	RML0377	BASE LOCK LEVER		350	RFKNACH430GE	CLAMP BASE ASS'Y	
306	RFPKDS790PK1	MOTOR ASS'Y	[M]	328	RML0378	CARRIER LOCK LEVER		351	RML0388-1	CLAMP LEVER	
307	RGQ0170-K	TRAY 1	[M]	329	RMR0884-K	TRAY BASE		352	RMR0761-W	MAGNET HOLDER LEVER	
308	RGQ0171-K	TRAY 2	[M]	330	RHD20009-1	SCREW CARRIER		353	RMR0899-K	FIXED PLATE	
309	RGQ0172-K	TRAY 3	[M]	331	RMC0274	TRAY FOOK SPRING	[M]	354	XTB3+10JFZ	SCREW PB, LID	
310	RGQ0173-K	TRAY 4	[M]	332	RME0173	CARRIER ARM SPRING		355	RMR0975-W	TRV CAP	
311	RGQ0174-K	TRAY 5	[M]	333	RML0376-1	CARRIER ARM		358	RAE0150Z	TRAVERSE UNIT	
312	RME0170	LOCK LEVER SPRING	[M]	334	RMM0137	CARRIER LEVER		358-1	SHGD113-1	FLOATING RUBBER	
313	RME0179	ASSIST SPRING	[M]	335	RDG0312	SPEED UP GEAR	[M]	358-2	SNSD38	SCREW	
314	RME0180	TRAY HOLDER SPRING		336	RMM0134	DRIVE RACK	[M]	359	RME0109	FLOATING SPRING (1)	
315	RFKNACH430GC	MECHA BASE ASS'Y		337	RMM0135	CUSHION RACK	[M]	360	RME0142	FLOATING SPRING (2)	
315-1	RMF0221	FELT		338	XTN2+6F	SCREW SUPPORT ANGLE	[M]	361	RMK0293	TRAVERSE CHASSIS	[M]
315-2	RMG0402-K	RUBBER WASHER		339	XTS3+8J	SCREW		362	RMS0123-1	FIXED PIN	
316	RML0379	CHANGE LEVER	[M]	340	XWE4E10	CUSHION		363	XTN2+6G	SCREW	
317	RML0380	LOCK LEVER	[M]	341	RME0178	HOLDING SPRING		364	XTV2+6G	SCREW	
318	RML0383	TRAY HOLDING LEVER		342	RME0181	UP PREVENTION SP (R)	[M]	365	REZ0792	3P WIRE KIT	
319	RML0385	UP/DOWN LEVER		343	RME0182	UP PREVENTION SP (L)	[M]	366	REZ0793	3P WIRE KIT	
320	RMM0139	SLIDE PLATE LEVER (1		344	RFKNACH430GD	MECHA COVER ASS'Y		367	RMG0430-Q	RUBBER TUBE	

Mechanism Parts Location (RAA3404)

DECK 2 (REC/PLAYBACK)

DECK 1 (PLAYBACK)

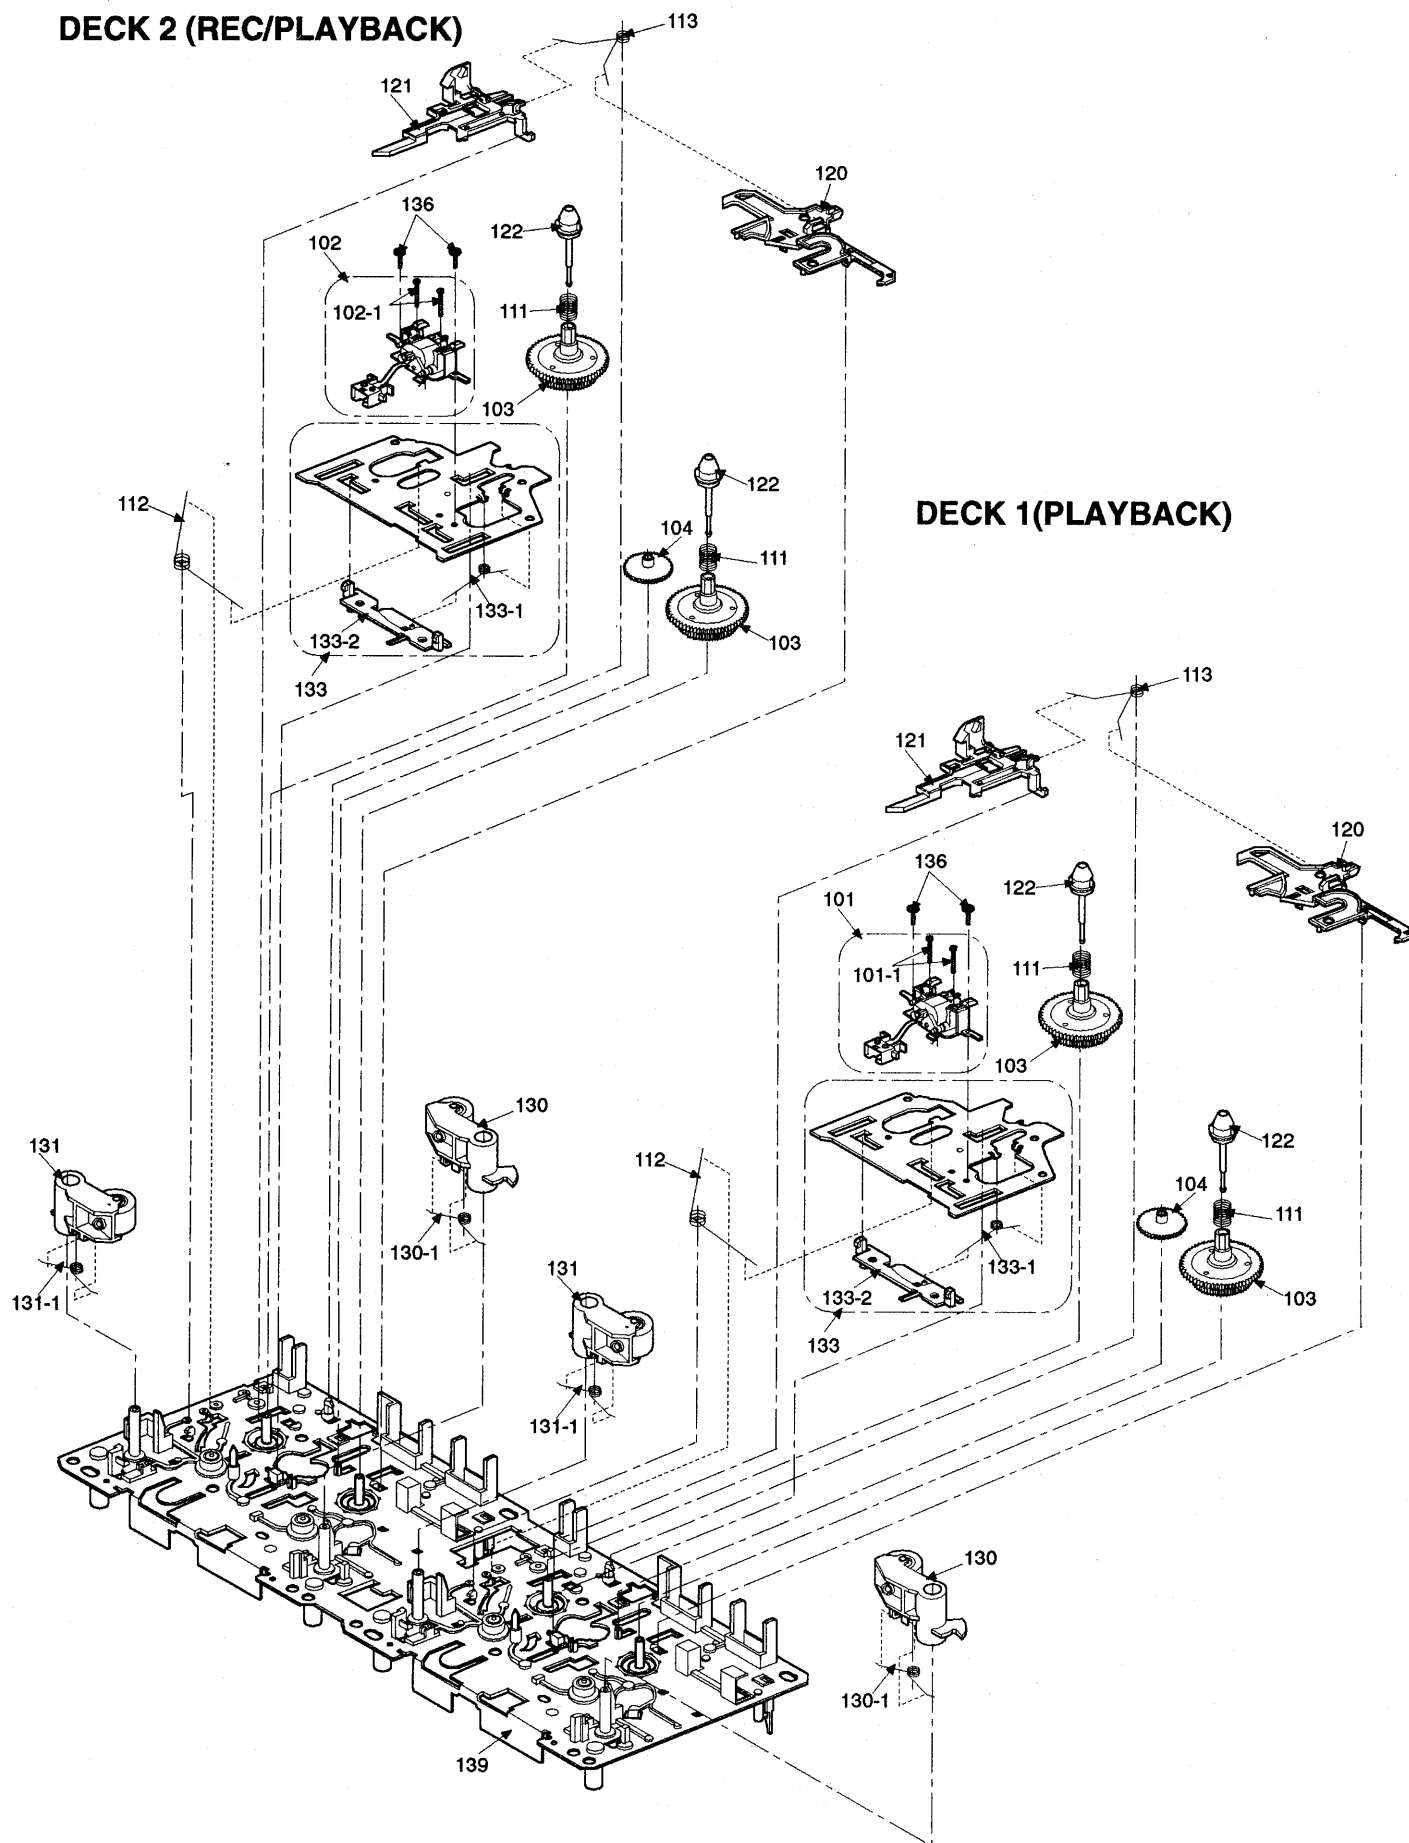


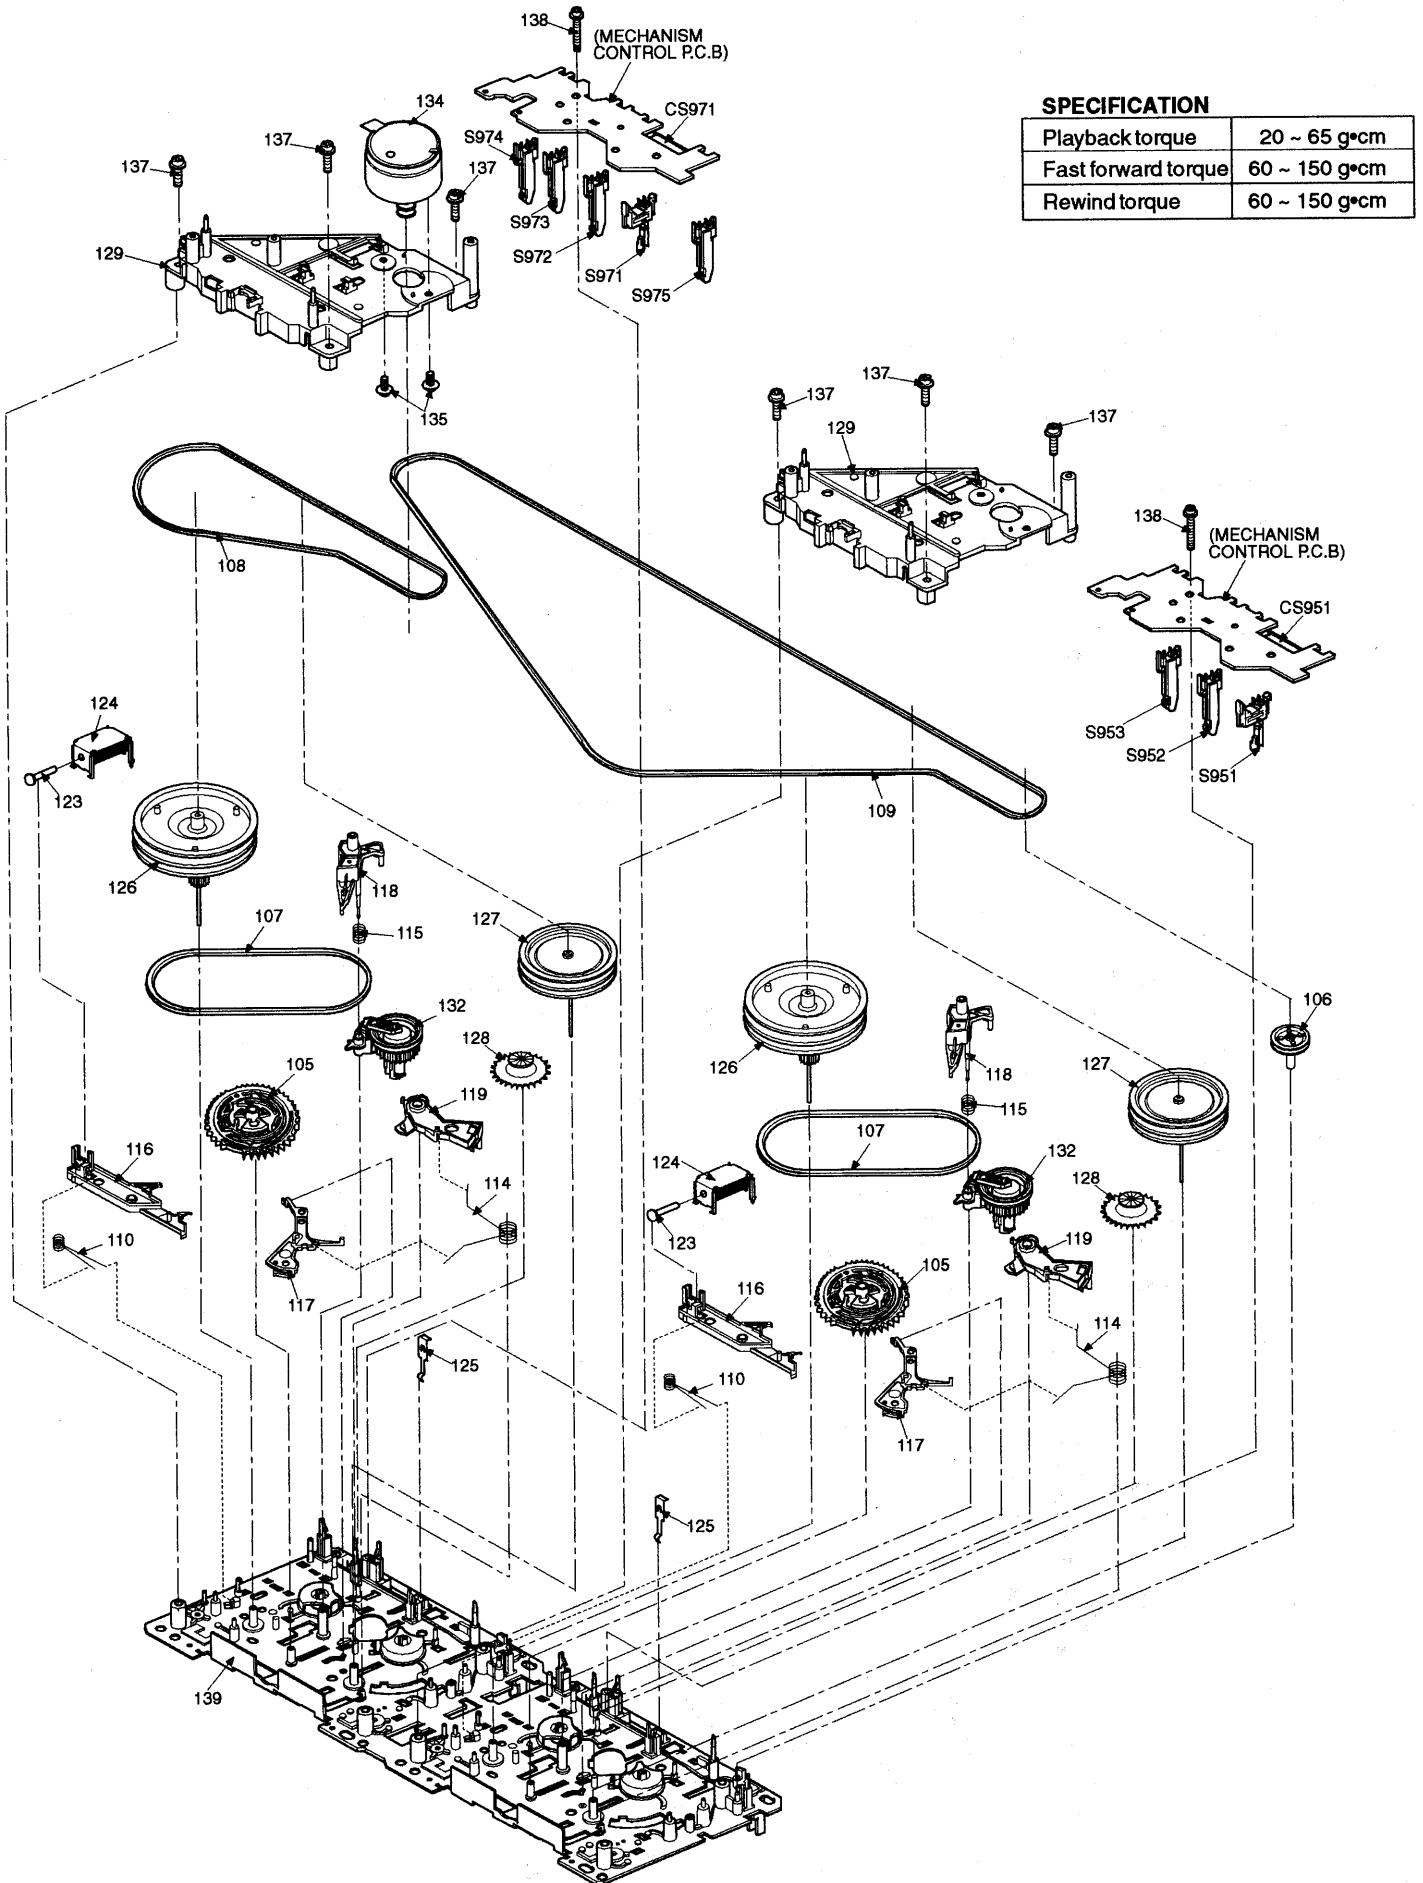


SPECIFICATION

Playback torque	20 ~ 65 g•cm
Fast forward torque	60 ~ 150 g•cm
Rewind torque	60 ~ 150 g•cm


■ Cabinet Parts Location

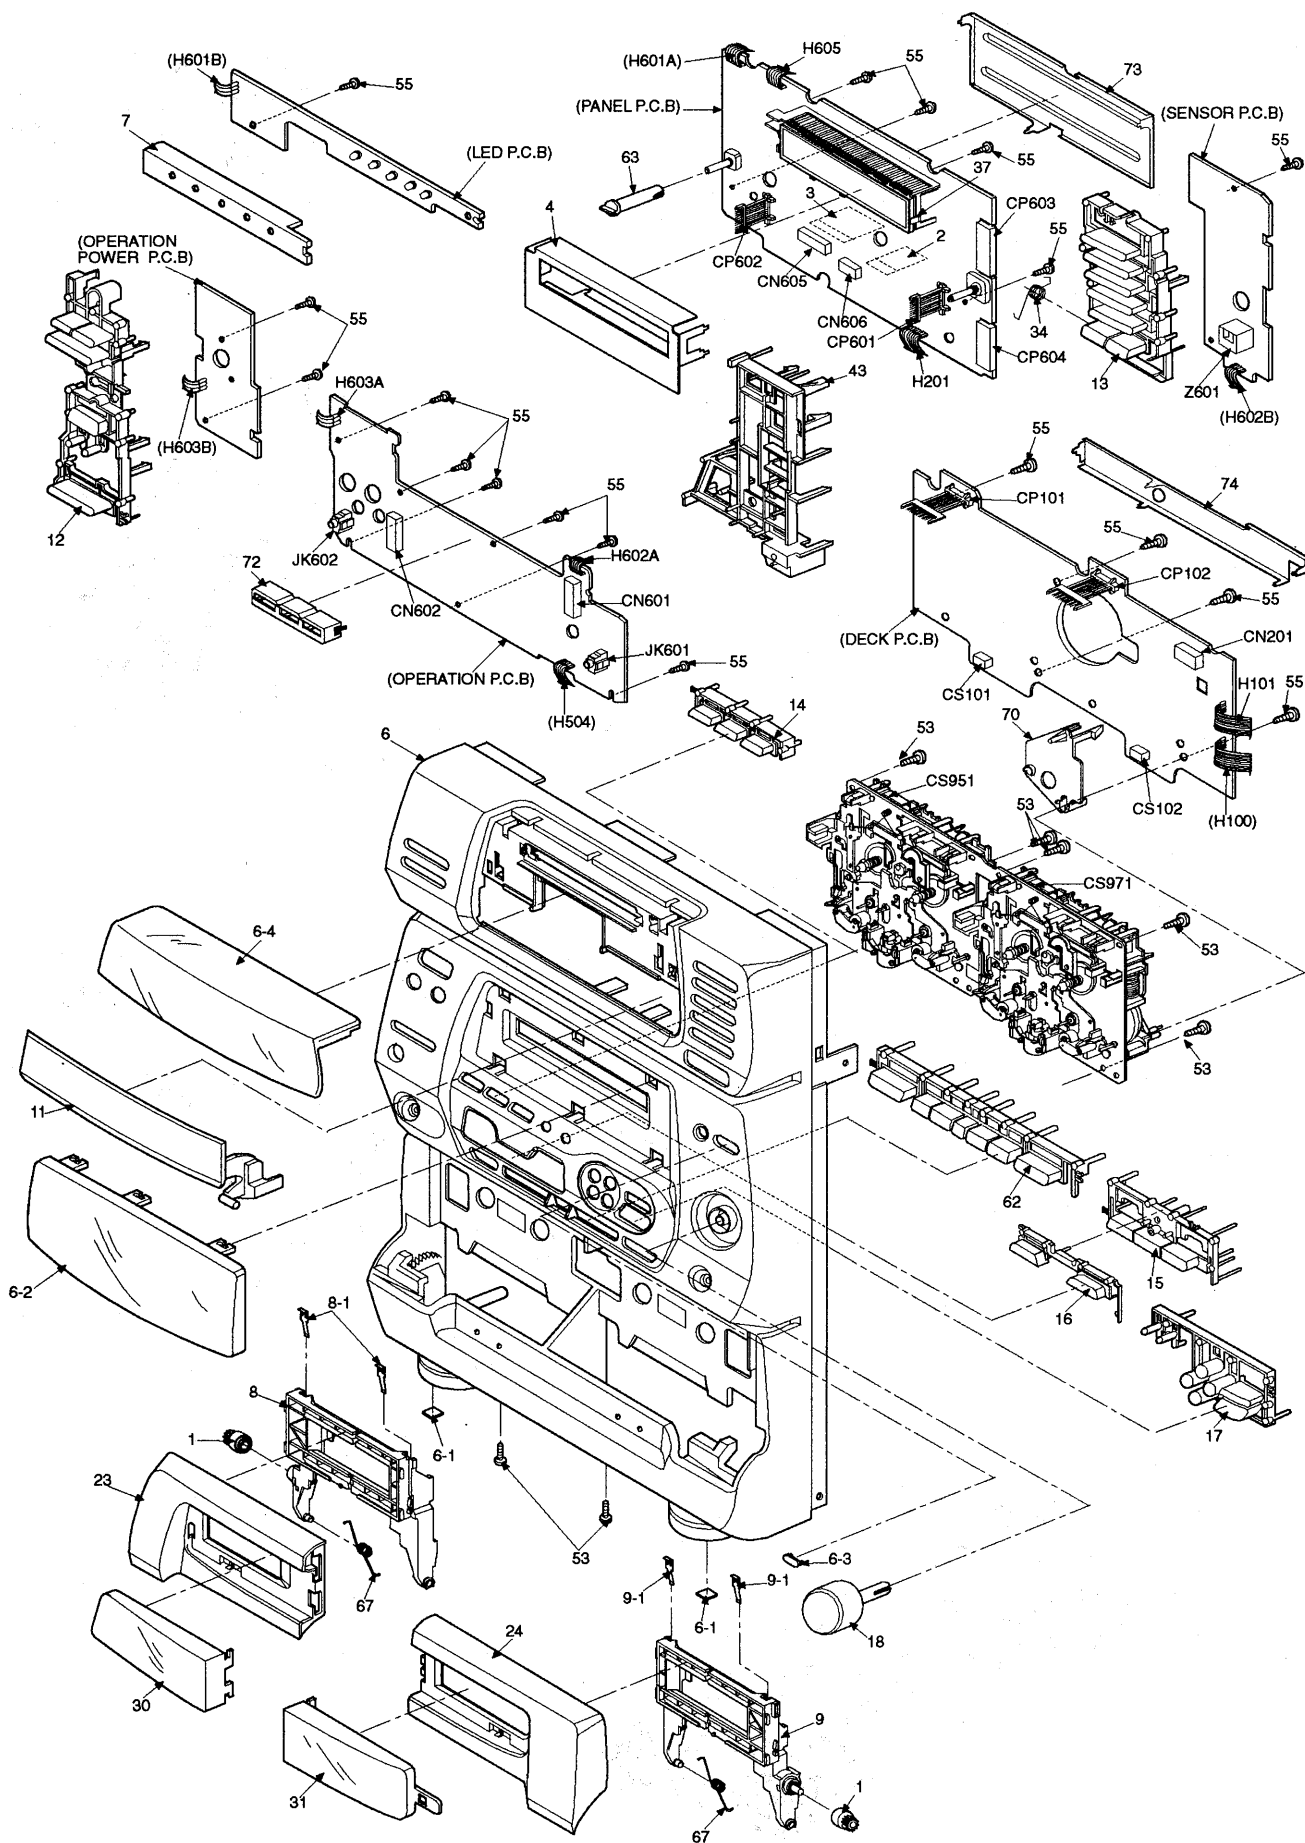

■ Cabinet Parts Location

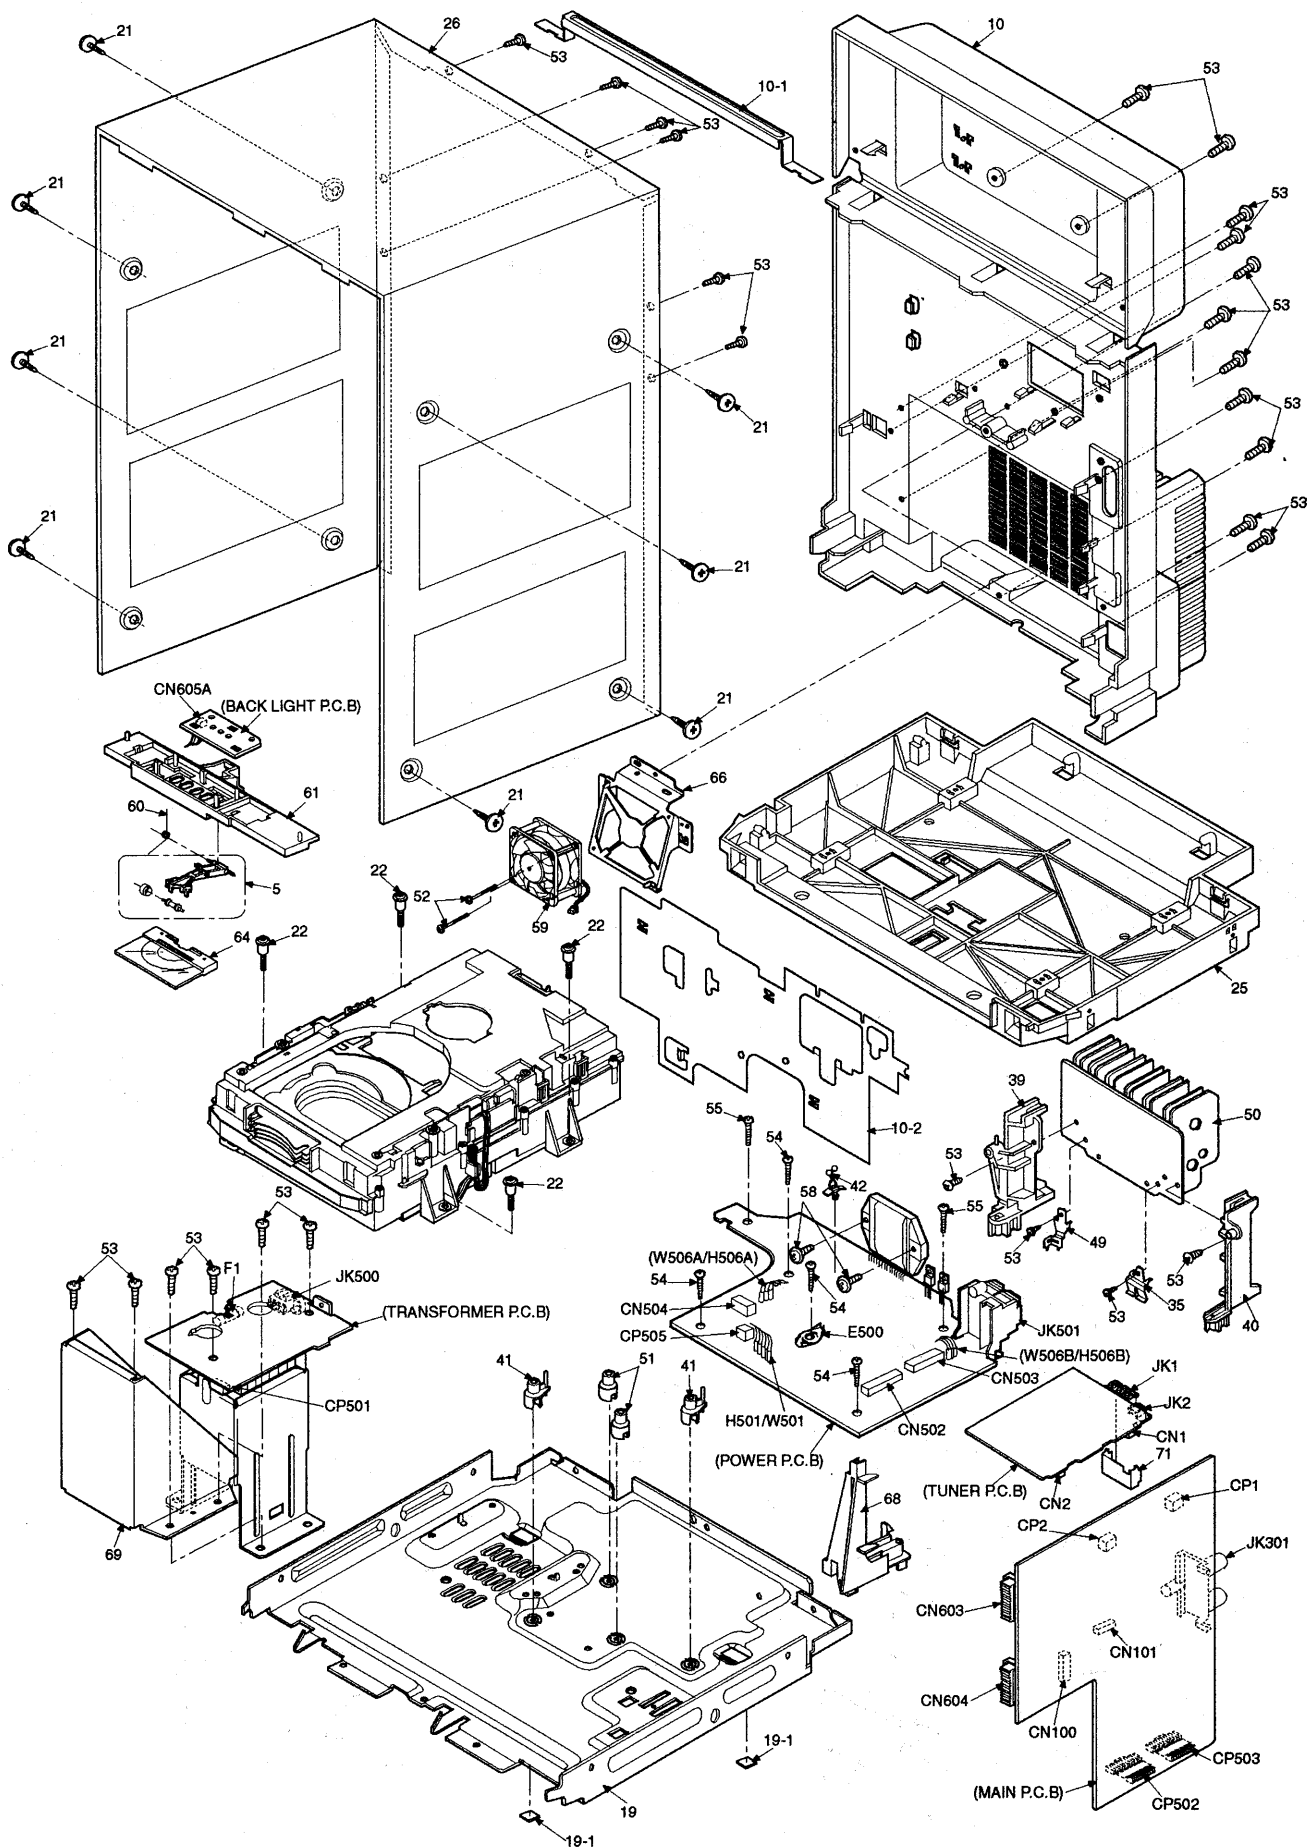

■ CD Loading Unit Parts Location

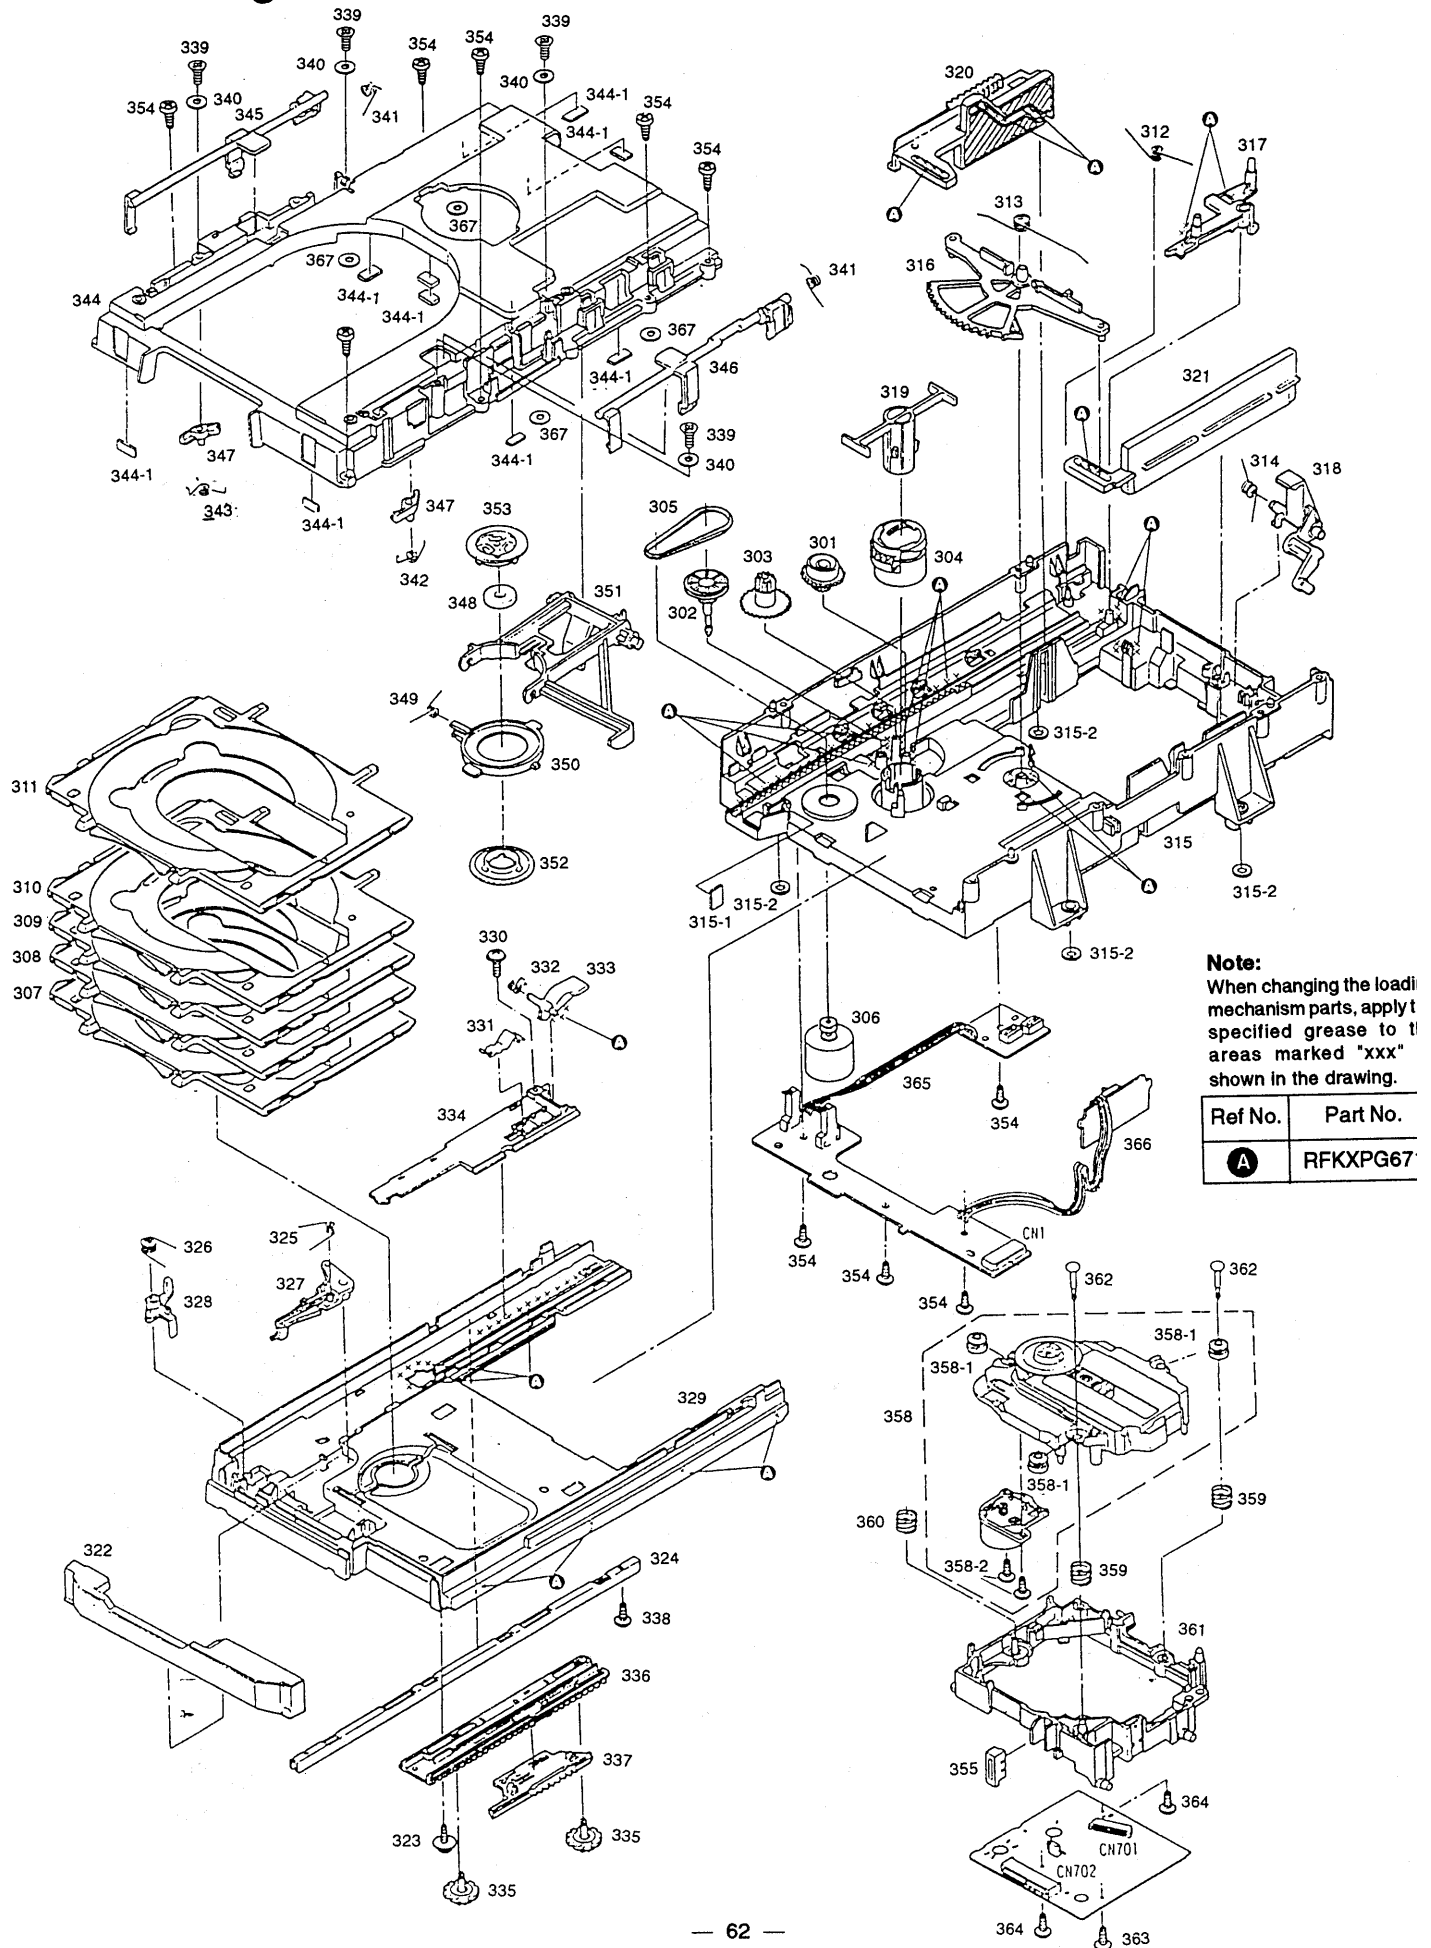

■ Replacement Parts List

Notes: • Important safety notice :

 Components identified by  mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- The parenthesized indications in the Remarks column specify the areas. (refer to the cover page for area.)

Parts without these indications can be used for all areas.

- [M] indicates in Remarks column parts that are supplied by MESA.

- **Warning:** This product uses a laser diode. Refer to caution statements on page 3.

ACHTUNG: • Die Lasereinheit nicht zerlegen.

• Die Lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
CABINET AND CHASSIS				35	RMC0158-S	TR FIXTURE	[M]	IC301	BU4052BCF-E2	IC, ANALOG SWITCH	
				37	RMN0352	FL HOLDER	[M]	IC302	M62422FPE1	IC, IO EXPANDER	
1	RDG0129	DAMPER GEAR	[M]	39	RMR0653-K	HEAT SINK SUPPORT(L)	[M]	IC303	M51131L-702	IC, SOUND PROCESSOR	
2	REE0657	14P FFC		40	RMR0654-K	HEAT SINK SUPPORT(R)	[M]	IC304	BU2090F-E2	IC, IO EXPANDER	[M]
3	REE0658	23P FFC		41	RMR0741-X	PCB SUPPORT (PIN)	[M]	IC305	BA4558FDXE2	IC, OP AMP	[M]
4	RFKNACH330-K	FL SHIELD PLATE ASS'Y	[M]	42	RMR0824-W	WIRE CLAMPER		IC306	BA4558FDXE2	IC, REC PLAYBACK	[M]
5	RFKNACH34PK	HOLDER ARM ASS'Y	[M]	43	RMR0908-X	PANEL PCB SUPPORT	[M]	IC308	BU4066BCF-E2	IC, SWITCH	[M]
6	RFKGACH74EK	FRONT PANEL ASS'Y	[M]	49	RSC0362	EARTH TERMINAL	[M]	IC401	LM2940T5M	IC, AMP	
6-1	RKA0059-K	LEG RUBBER	[M]	50	RXX0102	HEAT SINK UNIT	[M]	IC441	BA4558FDXE2	IC, OP AMP	[M]
6-2	RKW0416A-Q	FL WINDOW	[M]	51	SHE187-4	PCB SUPPORT (NO PIN)	[M]	IC501	RSN3502	IC, HIC	
6-3	RKW0414-Q	SENSOR WINDOW	[M]	52	XTB3+30J	FAN UNIT SCREW		IC601	M38197MA136F	IC, MICRO PROCESSOR	[M]
6-4	RKW0415-Q	CHANGER WINDOW	[M]	53	XTB3+10JFZ	REAR PANEL SCREW		IC602	TA2011S	IC, MIC AMP	
7	RFKNACH430GB	5-LED REFLECTOR ASS'Y		54	XTB3+20J	POWER PCB SCREW		IC605	BU2090F-E2	IC, IO EXPANDER	[M]
8	RFKLACH330AK	CASS HOLDER ASS'Y(L)	[M]	55	XTBS26+10J	PANEL PCB SCREW		IC606	BU2090F-E2	IC, IO EXPANDER	[M]
8-1	RUS757ZAA	CASS. HALF SPRING	[M]	58	XTW3+15T	POWER IC SCREW		IC608	DAP803	IC, DIODE ARRAY	
9	RFKLACH330BK	CASS HOLDER ASS'Y(R)	[M]	59	FBA08A12M2CZ	FAN UNIT	[M]	IC609	DAP803	IC, DIODE ARRAY	
9-1	RUS757ZAA	CASS. HALF SPRING	[M]	60	RME0221	HOLDER ARM SPRING	[M]	IC951	0N2180RLC	IC, HALL	
10	RFKHACH74EBK	REAR PANEL ASS'Y	[M](EB)	61	RMN0350	8 LED HOLDER	[M]	IC971	0N2180RLC	IC, HALL	
10	RFKHACH74EK	REAR PANEL ASS'Y	[M](E,EG)	62	RGU1305-K	DECK BUTTON	[M]				
10-1	RMA0938	REAR SUPPORT ANGLE	[M]	63	RGW0237-K	MIC KNOB	[M]	TRANSISTORS			
10-2	RSC0449-1	FTZ SHIELD	[M]	64	RKW0418-Q	8 LED REFLECTOR	[M]				
11	RGK0767A-K	CHANGER LID	[M]	66	RMA0980	FAN HOLDER	[M]	Q6	2SC2787LTA	TRANSISTOR	
12	RGU1303-K	POWER BUTTON	[M]	67	RMB0446	CASS OPEN SPRING	[M]	Q7	RVTDTA143XST	TRANSISTOR	
13	RGU1304-K	DISK BUTTON	[M]	68	RMR0821-X	MAIN PCB SUPPORT	[M]	Q8	2SC1740SSTA	TRANSISTOR	
14	RGU1300-C	FUNCTION BUTTON	[M]	69	RSC0455	TRANS. SHIELD PLATE		Q9	2SC1740SSTA	TRANSISTOR	
15	RGU1301-K	CONTROL BUTTON (A)	[M]	70	RMR0909-X	DECK PCB SUPPORT	[M]	Q10	2SC2785FETA	TRANSISTOR	
16	RGU1302-K	CONTROL BUTTON (B)	[M]	71	RSC0403	TUNER SHIELD PLATE	[M]	Q11	2SC2785FETA	TRANSISTOR	
17	RGU1306A-K	EQ BUTTON	[M]	72	RMN0348	FUNCTION LED HOLDER	[M]	Q12	2SC2787LTA	TRANSISTOR	
18	RGW0238-K	MAIN VOLUME KNOB	[M]	73	RSC0447	FL SHIELD PLATE(PCB)	[M]	Q13	2SC1740SSTA	TRANSISTOR	
19	RFKJACH430GK	BOTTOM CHASSIS ASS'Y		74	RSC0452-1	DECK PCB SHIELD PLATE	[M]	Q14	2SC1740SSTA	TRANSISTOR	
19-1	RKA0059-K	LEG RUBBER	[M]					Q15	2SC1740SSTA	TRANSISTOR	
21	RHD30007	CABINET SCREW		INTEGRATED CIRCUITS				Q101	2SJ164QRTA	TRANSISTOR	
22	RHD30048	CD MECHANISM SCREW	[M]					Q102	2SJ164QRTA	TRANSISTOR	
23	RGK0765-K	CASSETTE LID (L)	[M]	IC1	LA1832A	IC, DRIVER		Q103	2SJ164QRTA	TRANSISTOR	
24	RGK0766-K	CASSETTE LID (R)	[M]	IC2	LC7218	IC, PLL		Q104	2SJ164QRTA	TRANSISTOR	
25	RKM0309-K	CHANGER CHASSIS	[M]	IC101	M51167BFP-E1	IC, R/P	[M]	Q105	BA1L4ZTA	TRANSISTOR	[M]
26	RKM0310A-K	CABINET	[M]	IC102	BA7755A	IC, SW	[M]	Q106	BA1L4ZTA	TRANSISTOR	[M]
30	RKW0412-Q	CASSETTE WINDOW (L)	[M]	IC103	CXA1102M-T4	IC, DOLBY		Q107	BA1L4ZTA	TRANSISTOR	[M]
31	RKW0413-Q	CASSETTE WINDOW (R)	[M]	IC104	BU4066BCF-E2	IC, ANALOG SWITCH	[M]	Q108	BA1L4ZTA	TRANSISTOR	[M]
34	RMB0447	CD LID SPRING	[M]	IC105	BU2040F-E2	IC, I/O	[M]	Q109	BA1L3ZTA	TRANSISTOR	[M]

Ref No	Part No.	Part Name & Description	Remarks	Ref No	Part No.	Part Name & Description	Remarks	Ref No	Part No.	Part Name & Description	Remarks
Q110	BA1L3ZTA	TRANSISTOR	[M]	Q453	2SD1762E	TRANSISTOR	[M]▲	D415	1D3E	DIODE	[M]
Q115	2SD1020HTA	TRANSISTOR	[M]	Q501	2SC2785FTA	TRANSISTOR		D416	1D3E	DIODE	[M]
Q116	2SD1020HTA	TRANSISTOR	[M]	Q502	2SD1762E	TRANSISTOR	[M]▲	D417	1D3E	DIODE	[M]
Q117	BA1L4MTA	TRANSISTOR	[M]	Q503	2SC2785FTA	TRANSISTOR		D441	1SS254TA	DIODE	
Q118	2SC2785FTA	TRANSISTOR		Q504	2SA933SSTA	TRANSISTOR	▲	D452	MTZJ13ATA	DIODE	▲
Q119	2SC2785FTA	TRANSISTOR		Q505	2SD1762E	TRANSISTOR	[M]▲	D501	RL1N4003N02	DIODE	
Q120	2SC2785FTA	TRANSISTOR		Q506	2SC2785FTA	TRANSISTOR		D502	RL1N4003N02	DIODE	
Q121	2SC2785FTA	TRANSISTOR		Q507	2SB1185E	TRANSISTOR	▲	D503	1N5402BM21	DIODE	▲
Q151	BA1L4ZTA	TRANSISTOR	[M]	Q561	2SC2785FTA	TRANSISTOR		D504	1N5402BM21	DIODE	▲
Q152	BA1L4ZTA	TRANSISTOR	[M]	Q562	2SC2785FTA	TRANSISTOR		D505	1N5402BM21	DIODE	▲
Q153	2SC1740SLNET	TRANSISTOR		Q563	2SC2785FTA	TRANSISTOR		D506	1N5402BM21	DIODE	▲
Q154	2SC1740SLNET	TRANSISTOR		Q564	2SB621ARTA	TRANSISTOR		D507	MTZJ12BTA	DIODE	
Q171	2SD1302STA	TRANSISTOR		Q565	2SC2001KTA	TRANSISTOR		D516	MTZJ15CTA	DIODE	
Q173	BA1L4ZTA	TRANSISTOR	[M]	Q567	2SC2785FTA	TRANSISTOR		D517	MTZJ15BTA	DIODE	[M]
Q174	2SC2785FTA	TRANSISTOR		Q568	2SC2785FTA	TRANSISTOR		D518	MTZJ9R1ATA	DIODE	▲
Q175	2SD1302STA	TRANSISTOR		Q601	BA1L4MTA	TRANSISTOR	[M]	D561	1SS254TA	DIODE	
Q176	2SD1302STA	TRANSISTOR		Q602	2SC2785FTA	TRANSISTOR		D562	1SS254TA	DIODE	
Q179	2SC2784FTA	TRANSISTOR	[M]	Q603	2SC2785FTA	TRANSISTOR		D563	1SS254TA	DIODE	
Q180	2SC2784FTA	TRANSISTOR	[M]	Q604	2SB621RTA	TRANSISTOR		D564	1SS254TA	DIODE	
Q203	2SD965RTA	TRANSISTOR		Q612	2SC2785FTA	TRANSISTOR		D565	1SS254TA	DIODE	
Q204	2SK301QTA	TRANSISTOR	[M]	Q613	BN1A4MTA	TRANSISTOR	[M]	D566	1SS254TA	DIODE	
Q205	BA1L4ZTA	TRANSISTOR	[M]					D567	MTZJ8R2BTA	DIODE	[M]
Q206	2SB621RTA	TRANSISTOR				DIODES		D568	MTZJ11CTA	DIODE	
Q207	2SB621RTA	TRANSISTOR						D569	MA700ATA	DIODE	
Q208	BA1A4ZTA	TRANSISTOR	[M]	D4	MTZJ5R1CTA	DIODE	[M]	D570	1SS254TA	DIODE	
Q209	BA1A4ZTA	TRANSISTOR	[M]	D5	RVD1SS133TA	DIODE		D571	MTZJ20BTA	DIODE	[M]
Q218	BN1A4MTA	TRANSISTOR	[M]	D171	1SS254TA	DIODE		D601	1SS291TA	DIODE	
Q220	BN1L3NTA	TRANSISTOR	[M]	D172	MTZJ4R7BTA	DIODE		D602	1SS291TA	DIODE	
Q301	2SK301QTA	TRANSISTOR	[M]	D173	1SS254TA	DIODE		D603	1SS254TA	DIODE	
Q302	2SK301QTA	TRANSISTOR	[M]	D174	MTZJ3R6BTA	DIODE	[M]	D604	1SS254TA	DIODE	
Q303	2SC2785FTA	TRANSISTOR		D175	1SS254TA	DIODE		D605	MA167TA	DIODE	
Q304	2SC2785FTA	TRANSISTOR		D201	1SS254TA	DIODE		D609	MTZJ5R6BTA	DIODE	
Q305	2SD1450STA	TRANSISTOR		D202	1SS254TA	DIODE		D611	MA167TA	DIODE	
Q306	2SD1450STA	TRANSISTOR		D301	MTZJ6R8CTA	DIODE		D613	MA167TA	DIODE	
Q307	2SD1450STA	TRANSISTOR		D303	1SS254TA	DIODE		D616	1SS254TA	DIODE	
Q308	BN1A4MTA	TRANSISTOR	[M]	D304	1SS254TA	DIODE		D617	1SS254TA	DIODE	
Q309	BN1A4MTA	TRANSISTOR	[M]	D308	1SS254TA	DIODE		D618	1SS254TA	DIODE	
Q311	BN1A4MTA	TRANSISTOR	[M]	D401	1SS254TA	DIODE		D619	SLR342MCTB7	DIODE	
Q401	BA1L3ZTA	TRANSISTOR	[M]	D402	1SS254TA	DIODE		D620	SLR342MCTB7	DIODE	
Q402	2SC2001KTA	TRANSISTOR	▲	D403	MTZJ7R5CTA	DIODE	▲	D621	SLR342MCTB7	DIODE	
Q403	2SD2037ETA	TRANSISTOR	[M]▲	D404	MTZJ6R8BTA	DIODE	▲	D622	SLR342MCTB7	DIODE	
Q404	2SD2037ETA	TRANSISTOR	[M]▲	D405	1SS254TA	DIODE		D623	SLR342DCTB7	DIODE	
Q405	BA1F4MTA	TRANSISTOR	[M]	D406	1SS254TA	DIODE		D624	SLR342DCTB7	DIODE	
Q406	2SB621ARTA	TRANSISTOR	▲	D407	MA167TA	DIODE		D625	SLR342DCTB7	DIODE	
Q407	2SC2785FTA	TRANSISTOR		D408	1D3E	DIODE	[M]	D626	SLR342DCTB7	DIODE	
Q409	2SB621ARTA	TRANSISTOR		D409	1D3E	DIODE	[M]	D627	SLR-325MC	DIODE	
Q410	2SC2785FTA	TRANSISTOR	▲	D410	MTZJ33CTA	DIODE	[M]	D628	SLR-325MC	DIODE	
Q451	2SD1762E	TRANSISTOR	[M]▲	D413	MTZJ5R6BTA	DIODE	▲	D629	SLR-325MC	DIODE	

Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
D630	SLR-325MC	DIODE		S615	EVQ21405R	SW, EQ SPACE RIGHT		CN604	RJU077K20	CONNECTOR (20P)	[M]
D631	SLR-325MC	DIODE		S616	EVQ21405R	SW, KARAOKE		CN605	RJS1A6223-1	CONNECTOR (23P)	
D632	SLR-325MC	DIODE		S617	EVQ21405R	SW, REW/DOWN		CN605A	RJS1A5203	SOCKET (3P)	
D633	SLR-325MC	DIODE		S618	EVQ21405R	SW, FF/UP		CN606	RJS1A6214-1	CONNECTOR (14P)	
D634	SLR325DCT31	DIODE		S620	EVQ21405R	SW, STOP		CP1	RJT063W07T	CONNECTOR (7 P)	
D635	SLR325DCT31	DIODE		S621	EVQ21405R	SW, REV PLAY		CP2	RJT063W07T	CONNECTOR (7 P)	
D636	SLR-325MC	DIODE		S622	EVQ21405R	SW, FWD PLAY		CP101	RJT071H09A	CONNECTOR (9 P)	
D637	SLR325DCT31	DIODE		S623	EVQ21405R	SW, EJECT DECK 1		CP102	RJT071H09A	CONNECTOR (9 P)	
D638	SLR325DCT31	DIODE		S624	EVQ21405R	SW, TAPE EDIT NORMAL		CP501	RJP8G18ZA	CONNECTOR (8P)	
D639	SLR-325MC	DIODE		S625	EVQ21405R	SW, TAPE EDIT HIGH		CP502	RJT005W012	CONNECTOR (12P)	
D640	SLR325DCT31	DIODE		S626	EVQ21405R	SW, REC		CP503	RJT005W012	CONNECTOR (12P)	
D641	SLR325DCT31	DIODE		S627	EVQ21405R	SW, REV MODE		CP505	RJP2G4YA	CONNECTOR (2P)	
D642	SPR505MDTT	DIODE		S628	EVQ21405R	SW, EJECT DECK 2		CP601	RJT071H09A	CONNECTOR (9 P)	
D643	SPR505MDTT	DIODE		S629	EVQ21405R	SW, DOLBY NR		CP602	RJT071H09A	CONNECTOR (9 P)	
D644	SPR505MDTT	DIODE		S631	EVQ21405R	SW, CD OPEN/CLOSE		CP603	RJT077K20	CONNECTOR (20P)	[M]
D645	SPR505MDTT	DIODE		S632	EVQ21405R	SW, CD DISC CHECK		CP604	RJT077K20	CONNECTOR (20P)	[M]
D646	SPR505MDTT	DIODE		S633	EVQ21405R	SW, DISC 5		CS101	RJS1A6805-J	CONNECTOR SOCKET(5P)	[M]
D647	1SS254TA	DIODE		S634	EVQ21405R	SW, DISC 4		CS102	RJS1A6805-J	CONNECTOR SOCKET(5P)	[M]
D651	SLR-325MC	DIODE		S635	EVQ21405R	SW, DISC 3		CS951	RJU071H09M1	9P CONNECTOR	[M]
D652	SLR-325MC	DIODE		S636	EVQ21405R	SW, DISC 2		CS971	RJU071H09M1	9P CONNECTOR	[M]
D659	1SS254TA	DIODE		S637	EVQ21405R	SW, DISC 1					
D951	MA165TA	DIODE		S638	EVQ21405R	SW, DISPLAY/DEMO				COILS & TRANSFORMERS	
D971	MA165TA	DIODE		S639	EVQ21405R	SW, AUX					
				S640	EVQ21405R	SW, TUNER		L3	RLQZPR47KT-Y	COIL	
		VARIABLE RESISTORS		S641	EVQ21405R	SW, CD		L4	ELEPKR68MA	RF CHOKE COIL	
				S642	EVQ21405R	SW, DECK 1/2		L5	ELEPKR68MA	RF CHOKE COIL	
VR101	RRN6B05B24TA	VR, SEMIFIXED		S951	RSH1A018-1U	SW, MODE DETECT(1)		L6	ELELN822KL	RF CHOCK COIL	
VR102	RRN6B05B24TA	VR, SEMIFIXED		S952	RSH1A019-2U	SW, TAPE DETECT(1)		L7	ELELN822KL	RF CHOCK COIL	
VR103	RRN6B05B24TA	VR, SEMIFIXED		S953	RSH1A019-2U	SW, Cr02 DETECT(1)		L8	RLQZP1R0KT-Y	AXIAL COIL	
VR104	RRN6B05B24TA	VR, SEMIFIXED		S971	RSH1A018-1U	SW, MODE DETECT(2)		L9	SLM1B10-1M	A.B. FILTER	
VR201	RRN6B05B73TA	VR, SEMIFIXED		S972	RSH1A019-2U	SW, TAPE DETECT(2)		L201	RL08C002M-T	BIAS OSC COIL	
VR601	RRV09A03B14A	VR, MIC		S973	RSH1A019-2U	SW, Cr02 DETECT(2)		L202	RLQZB470KT-D	RF CHOKE COIL	
VR603	RRV16B24104B	VR, VOLUME	[M]	S974	RSH1A019-2U	SW, REC DETECT(2)		L501	SLQY07G-40	SP COIL	
				S975	RSH1A019-2U	SW, REC DETECT(2)		L502	SLQY07G-40	SP COIL	
		SWITCHES						L601	RLQZP3R3KT-Y	COIL	
						CONNECTORS		T501	RTP2M3B003	POWER TRANSFORMER	[M]▲
S601	EVQ21405R	SW, POWER									
S602	EVQ21405R	SW, TIMER PLAY		CN1	RJU063W07T	CONNECTOR (20P)				COMPONENT COMBINATION	
S603	EVQ21405R	SW, TIMER REC		CN2	RJU063W07T	CONNECTOR (20P)		Z1	RLA6Z005M-T	AM ANT/OSC	
S604	EVQ21405R	SW, RANDOM		CN100	RJS1A5210	CONNECTOR (10P)	[M]	Z2	RLI2Z006M-T	AM IFT	
S605	EVQ21405R	SW, REPEAT		CN101	RJS1A5205	CONNECTOR (5P)	[M]	Z3	ENV17290G1R	FM TUNER PACK	
S606	EVQ21405R	SW, EASY EDIT		CN201	RJS8T7ZA	CONNECTOR (8P)		Z101	EXBF7L355SYV	RADA RESISTOR	
S608	EVQ21405R	SW, CLOCK/TIMER		CN502	RJU005A012	CONNECTOR (12P)		Z500	SLQZ650MH49	AC LINE COIL	▲
S609	EVQ21405R	SW, EQ. SPACE		CN503	RJU005A012	CONNECTOR (12P)		Z601	RCDHC-278N	REMO-CON SENSOR	[M]
S611	EVQ21405R	SW, V. BASS		CN504	RJS1A5205	CONNECTOR (5P)	[M]				
S612	EVQ21405R	SW, EQ SPACE DOWN		CN601	RJU071H09M	CONNECTOR (9 P)				CERAMIC FILTERS	
S613	EVQ21405R	SW, EQ SPACE UP		CN602	RJU071H09M	CONNECTOR (9 P)		CF1	RLFFETNGA01L	FM CF	
S614	EVQ21405R	SW, EQ SPACE LEFT		CN603	RJU077K20	CONNECTOR (20P)	[M]	CF2	RLFFETNGA02L	FM CF	

Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
		OSCILLATORS				JACKS					
X1	RSXZ456KM01	19KHZ OSC		JK1	RJH8201	JK, ANTENNA TERMINAL	[M]	S2	RSH1A032-U	SW, MECHA	
X2	RLFDF12DD	FM RESONATOR		JK2	SJS208	JK, AM LOOP ANT TERMINAL		S3	RSH1A032-U	SW, MECHA	
X3	SVQ49U722T-S	7.2MHZ X'TAL		JK301	RJH3209N	JK, LINE-IN	[M]	S4	RSH1A005	SW, LEAF	
X601	RSXD32K7S02	32.768HKZ X'TAL	[M]	JK500	SJS9236	JK, AC INLET	⚠	S5	RSH1A032-U	SW, MECHA	
X602	EF0EN6004T4	CERAMIC OSC	[M]	JK501	RJR0054	JK, SP TERMINAL				CONNECTOR	
				JK601	RJJ37TK04-C	JK, HP JACK		CN1	RJS1A6714	14P CONNECTOR	
				JK602	RJJ34MK01-C	JK, MIC JACK					
		DISPLAY TUBE								< SERVO P.C.B. >	
FL601	RSL0211-F	FL	[M]			HOLDERS				INTEGRATED CIRCUITS	
		EARTH TERMINAL		H100	RMR0319	10P CABLE HOLDER	[M]	IC701	AN8835SBE1	IC, SERVO AMP.	
				H101	RMR0314	5P CABLE HOLDER	[M]	IC702	MN662741RPA	IC, DIGITAL LSI	
E500	SNE1004-2	EARTH TERMINAL		H201	RMR0317	8P CABLE HOLDER	[M]	IC703	AN8389SE1	IC, COIL/MOTOR DRIVE	
				H501	RMR0317	8P CABLE HOLDER	[M]				
		RELAY		H504	RMR0314	5P CABLE HOLDER	[M]			TRANSISTOR	
				H601A	RMR0314	5P CABLE HOLDER	[M]				
RLY501	RSY0017-0	RELAY	[M] ⚠	H602A	RMR0315	6P CABLE HOLDER	[M]	Q701	2SB709S	TRANSISTOR	
				H603A	RMR0312	3P CONNECTOR	[M]				
		FUSES		H605	RMR0312	3P CONNECTOR	[M]			SWITCH	
F1	XBA2C10TB0	FUSE	⚠			WIRE		S701	RSM0006-P	SW, RESET	
		FUSE CLIPS		W501	REX0773	WIRE	[M]			CONNECTORS	
FC1	SJT388	FUSE CLIP				<LOADING MOTOR>		CN701	RJU035T016-1	16 PIN FFC CONNECTOR	
FC2	SJT388	FUSE CLIP				INTEGRATED CIRCUIT		CN702	RJS1A6723-1Q	23 PIN FFC CONNECTOR	
		FUSE PROTECTORS		IC1	BA6418N	IC, MOTOR DRIVER				OSCILLATOR	
FP1	RSFMB40KT-L	FUSE PROTECTOR	⚠			SWITCHES		X701	RSXZ16M9M01T	CERAMIC OSC	
FP2	RSFMB40KT-L	FUSE PROTECTOR	⚠	S1	RSH1A005	SW, LEAF					

Resistors & Capacitors

Notes : • Important safety notice:



Components identified by ⚠ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- [M] indicates in Remarks column parts that are supplied by MESA.
- Capacitor values are in microfarad (μF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
- Resistors values are in ohms, unless specified otherwise, 1k=1,000(OHM), 1M=1,000k(OHM)

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
	RESISTORS										
			R20	ERDS2TJ562T	5.6K 1/4W	R27	ERDS2TJ272T	2.7K 1/4W	R36	ERDS2TJ474T	470K 1/4W
			R21	ERDS2TJ822T	8.2K 1/4W	R28	ERDS2TJ473T	47K 1/4W	R37	ERDS2TJ474T	470K 1/4W
R15	ERDS2TJ181T	180 1/4W	R22	ERDS2TJ473T	47K 1/4W	R29	ERDS2TJ680T	68 1/4W	R38	ERDS2TJ272T	2.7K 1/4W
R16	ERDS2TJ153T	15K 1/4W	R23	ERDS2TJ332T	3.3K 1/4W	R32	ERDS2TJ272T	2.7K 1/4W	R39	ERDS2TJ272T	2.7K 1/4W
R17	ERDS2TJ331T	330 1/4W	R24	ERDS2TJ472T	4.7K 1/4W	R33	ERDS2TJ272T	2.7K 1/4W	R40	ERDS2TJ391T	390 1/4W
R18	ERDS2TJ471T	470 1/4W	R25	ERDS2TJ271T	270 1/4W	R34	ERDS2TJ103T	10K 1/4W	R41	ERDS2TJ102T	1K 1/4W
R19	ERDS2TJ474T	470K 1/4W	R26	ERDS2TJ471T	470 1/4W	R35	ERDS2TJ103T	10K 1/4W	R42	ERDS2TJ102T	1K 1/4W

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
R43	ERDS2TJ102T	1K 1/4W	R123	ERDS2TJ103T	10K 1/4W	R181	ERDS2TJ332T	3.3K 1/4W	R312	ERDS2TJ392T	3.9K 1/4W
R44	ERDS2TJ102T	1K 1/4W	R124	ERDS2TJ103T	10K 1/4W	R182	ERDS2TJ1R0T	1 1/4W	R313	ERDS2TJ562T	5.6K 1/4W
R45	ERDS2TJ102T	1K 1/4W	R125	ERDS2TJ102T	1K 1/4W	R183	ERDS2TJ104T	100K 1/4W	R314	ERDS2TJ562T	5.6K 1/4W
R46	ERDS2TJ104T	100K 1/4W	R126	ERDS2TJ102T	1K 1/4W	R184	ERDS2TJ104T	100K 1/4W	R315	ERDS2TJ332T	3.3K 1/4W
R47	ERDS2TJ562T	5.6K 1/4W	R127	ERDS2TJ821T	820 1/4W	R185	ERDS2TJ104T	100K 1/4W	R316	ERDS2TJ332T	3.3K 1/4W
R48	ERDS2TJ391T	390 1/4W	R128	ERDS2TJ821T	820 1/4W	R186	ERDS2TJ102T	1K 1/4W	R317	ERDS2TJ104T	100K 1/4W
R49	ERDS2TJ561T	560 1/4W	R129	ERDS2TJ822T	8.2K 1/4W	R188	ERDS2TJ102T	1K 1/4W	R318	ERDS2TJ104T	100K 1/4W
R50	ERDS2TJ102T	1K 1/4W	R130	ERDS2TJ822T	8.2K 1/4W	R189	ERDS2TJ472T	4.7K 1/4W	R319	ERDS2TJ103T	10K 1/4W
R51	ERDS2TJ103T	10K 1/4W	R131	ERDS2TJ683T	68K 1/4W	R190	ERDS2TJ104T	100K 1/4W	R320	ERDS2TJ474T	470K 1/4W
R52	ERDS2TJ102T	1K 1/4W	R132	ERDS2TJ335T	3.3M 1/4W	R191	ERDS2TJ563T	56K 1/4W	R321	ERDS2TJ332T	3.3K 1/4W
R53	ERDS2TJ102T	1K 1/4W	R133	ERDS2TJ332T	3.3K 1/4W	R192	ERDS2TJ470T	47 1/4W	R322	ERDS2TJ332T	3.3K 1/4W
R54	ERDS2TJ102T	1K 1/4W	R134	ERDS2TJ474T	470K 1/4W	R193	ERDS2TJ104T	100K 1/4W	R323	ERDS2TJ102T	1K 1/4W
R55	ERDS2TJ102T	1K 1/4W	R137	ERDS2TJ103T	10K 1/4W	R194	ERDS2TJ104T	100K 1/4W	R324	ERDS2TJ102T	1K 1/4W
R56	ERDS2TJ102T	1K 1/4W	R138	ERDS2TJ103T	10K 1/4W	R195	ERDS2TJ104T	100K 1/4W	R325	ERDS2TJ563T	56K 1/4W
R57	ERDS2TJ103T	10K 1/4W	R139	ERDS2TJ103T	10K 1/4W	R206	ERDS2TJ221T	220 1/4W	R326	ERDS2TJ563T	56K 1/4W
R58	ERDS2TJ103T	10K 1/4W	R141	ERDS2TJ682T	6.8K 1/4W	R208	ERDS2TJ123T	12K 1/4W	R327	ERDS2TJ472T	4.7K 1/4W
R60	ERDS2TJ563T	56K 1/4W	R142	ERDS2TJ682T	6.8K 1/4W	R209	ERDS2TJ123T	12K 1/4W	R328	ERDS2TJ472T	4.7K 1/4W
R61	ERDS2TJ102T	1K 1/4W	R143	ERDS2TJ222T	2.2K 1/4W	R210	ERDS2TJ272T	2.7K 1/4W	R329	ERDS2TJ681T	680 1/4W
R63	ERDS2TJ102T	1K 1/4W	R144	ERDS2TJ222T	2.2K 1/4W	R211	ERDS2TJ334T	330K 1/4W	R330	ERDS2TJ681T	680 1/4W
R64	ERDS2TJ820T	82 1/4W	R145	ERDS2TJ103T	10K 1/4W	R212	ERDS2TJ123T	12K 1/4W	R331	ERDS2TJ152T	1.5K 1/4W
R65	ERDS2TJ103T	10K 1/4W	R146	ERDS2TJ103T	10K 1/4W	R213	ERDS2TJ152T	1.5K 1/4W	R332	ERDS2TJ472T	4.7K 1/4W
R71	ERDS2TJ182T	1.8K 1/4W	R149	ERDS2TJ272T	2.7K 1/4W	R215	ERDS2TJ222T	2.2K 1/4W	R333	ERDS2TJ122T	1.2K 1/4W
R72	ERDS2TJ122T	1.2K 1/4W	R150	ERDS2TJ272T	2.7K 1/4W	R216	ERDS2TJ222T	2.2K 1/4W	R334	ERDS2TJ122T	1.2K 1/4W
R73	ERDS2TJ122T	1.2K 1/4W	R151	ERDS2TJ105T	1M 1/4W	R220	ERDS2TJ472T	4.7K 1/4W	R335	ERDS2TJ563T	56K 1/4W
R74	ERDS2TJ103T	10K 1/4W	R152	ERDS2TJ105T	1M 1/4W	R221	ERDS2TJ2R7T	2.7 1/4W	R336	ERDS2TJ563T	56K 1/4W
R75	ERDS2TJ222T	2.2K 1/4W	R153	ERDS2TJ102T	1K 1/4W	R225	ERDS2TJ2R7T	2.7 1/4W	R337	ERDS2TJ272T	2.7K 1/4W
R76	ERDS2TJ331T	330 1/4W	R154	ERDS2TJ102T	1K 1/4W	R226	ERDS2TJ102T	1K 1/4W	R338	ERDS2TJ272T	2.7K 1/4W
R77	ERDS2TJ474T	470K 1/4W	R155	ERDS2TJ681T	680 1/4W	R227	ERDS2TJ102T	1K 1/4W	R339	ERDS1FVJ820T	82 1/2W 
R101	ERDS2TJ334T	330K 1/4W	R156	ERDS2TJ681T	680 1/4W	R228	ERDS2TJ472T	4.7K 1/4W	R340	ERDS1FVJ820T	82 1/2W 
R102	ERDS2TJ104T	100K 1/4W	R158	ERDS2TJ221T	220 1/4W	R229	ERDS2TJ103T	10K 1/4W	R341	ERDS2TJ472T	4.7K 1/4W
R103	ERDS2TJ153T	15K 1/4W	R159	ERDS2TJ222T	2.2K 1/4W	R230	ERDS2TJ472T	4.7K 1/4W	R342	ERDS2TJ472T	4.7K 1/4W
R104	ERDS2TJ153T	15K 1/4W	R160	ERDS2TJ222T	2.2K 1/4W	R231	ERDS2TJ102T	1K 1/4W	R343	ERDS2TJ182T	1.8K 1/4W
R105	ERDS2TJ271T	270 1/4W	R161	ERDS2TJ472T	4.7K 1/4W	R232	ERDS2TJ102T	1K 1/4W	R344	ERDS2TJ182T	1.8K 1/4W
R106	ERDS2TJ222T	2.2K 1/4W	R162	ERDS2TJ472T	4.7K 1/4W	R233	ERDS2TJ222T	2.2K 1/4W	R345	ERDS2TJ152T	1.5K 1/4W
R107	ERDS2TJ330T	33 1/4W	R163	ERDS2TJ433T	43K 1/4W	R234	ERDS2TJ472T	4.7K 1/4W	R346	ERDS2TJ152T	1.5K 1/4W
R108	ERDS2TJ330T	33 1/4W	R165	ERDS2TJ563T	56K 1/4W	R235	ERDS2TJ472T	4.7K 1/4W	R347	ERDS2TJ102T	1K 1/4W
R109	ERDS2TJ432T	4.3K 1/4W	R166	ERDS2TJ104T	100K 1/4W	R236	ERDS2TJ472T	4.7K 1/4W	R348	ERDS2TJ102T	1K 1/4W
R110	ERDS2TJ432T	4.3K 1/4W	R167	ERDS2TJ470T	47 1/4W	R301	ERDS2TJ223T	22K 1/4W	R349	ERDS2TJ104T	100K 1/4W
R111	ERDS2TJ222T	2.2K 1/4W	R169	ERDS2TJ102T	1K 1/4W	R302	ERDS2TJ223T	22K 1/4W	R350	ERDS2TJ104T	100K 1/4W
R112	ERDS2TJ222T	2.2K 1/4W	R170	ERDS2TJ102T	1K 1/4W	R303	ERDS2TJ822T	8.2K 1/4W	R351	ERDS2TJ473T	47K 1/4W
R113	ERDS2TJ122T	1.2K 1/4W	R172	ERDS2TJ331T	330 1/4W	R304	ERDS2TJ822T	8.2K 1/4W	R352	ERDS2TJ474T	470K 1/4W
R114	ERDS2TJ122T	1.2K 1/4W	R173	ERDS2TJ103T	10K 1/4W	R305	ERDS2TJ222T	2.2K 1/4W	R353	ERDS2TJ105T	1M 1/4W
R115	ERDS2TJ474T	470K 1/4W	R174	ERDS2TJ103T	10K 1/4W	R306	ERDS2TJ222T	2.2K 1/4W	R354	ERDS2TJ153T	15K 1/4W
R116	ERDS2TJ474T	470K 1/4W	R176	ERDS2TJ822T	8.2K 1/4W	R307	ERDS2TJ332T	3.3K 1/4W	R355	ERDS2TJ182T	1.8K 1/4W
R117	ERDS2TJ274T	270K 1/4W	R177	ERDS2TJ472T	4.7K 1/4W	R308	ERDS2TJ332T	3.3K 1/4W	R356	ERDS2TJ334T	330K 1/4W
R118	ERDS2TJ274T	270K 1/4W	R178	ERDS2TJ1R2T	1.2 1/4W	R309	ERDS2TJ222T	2.2K 1/4W	R357	ERDS2TJ105T	1M 1/4W
R121	ERDS2TJ333T	33K 1/4W	R179	ERDS2TJ472T	4.7K 1/4W	R310	ERDS2TJ222T	2.2K 1/4W	R358	ERDS2TJ222T	2.2K 1/4W
R122	ERDS2TJ333T	33K 1/4W	R180	ERDS2TJ472T	4.7K 1/4W	R311	ERDS2TJ392T	3.9K 1/4W	R359	ERDS2TJ682T	6.8K 1/4W

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
R360	ERDS2TJ103T	10K 1/4W	R445	ERDS2TJ333T	33K 1/4W	R540	ERDS2TJ330T	33 1/4W(EB)	R627	ERDS2TJ104T	100K 1/4W
R383	ERDS2TJ224T	220K 1/4W	R446	ERDS2TJ102T	1K 1/4W	R541	ERDS1FVJ330T	33 1/2W	R628	ERDS2TJ104T	100K 1/4W
R384	ERDS2TJ224T	220K 1/4W	R447	ERDS2TJ182T	1.8K 1/4W	R542	ERDS1FVJ330T	33 1/2W	R629	ERDS2TJ104T	100K 1/4W
R386	ERDS2TJ102T	1K 1/4W	R452	ERDS2TJ471T	470 1/4W	R544	ERDS2TJ151T	150 1/4W	R630	ERDS2TJ104T	100K 1/4W
R387	ERDS2TJ102T	1K 1/4W	R457	ERDS2TJ1R0T	1 1/4W	R551	ERDS2TJ100T	10 1/4W	R631	ERDS2TJ104T	100K 1/4W
R391	ERDS2TJ102T	1K 1/4W	R458	ERDS2TJ1R0T	1 1/4W	R552	ERDS2TJ100T	10 1/4W	R632	ERDS2TJ104T	100K 1/4W
R392	ERDS2TJ392T	3.9K 1/4W	R491	ERDS2TJ222T	2.2K 1/4W	R561	ERDS2TJ103T	10K 1/4W	R633	ERDS2TJ104T	100K 1/4W
R393	ERDS2TJ102T	1K 1/4W	R492	ERDS2TJ222T	2.2K 1/4W	R562	ERDS2TJ103T	10K 1/4W	R634	ERDS2TJ104T	100K 1/4W
R394	ERDS2TJ153T	15K 1/4W	R493	ERDS2TJ474T	470K 1/4W	R563	ERDS2TJ224T	220K 1/4W	R635	ERDS2TJ223T	22K 1/4W
R397	ERDS2TJ222T	2.2K 1/4W	R494	ERDS2TJ474T	470K 1/4W	R564	ERDS2TJ224T	220K 1/4W	R636	ERDS2TJ331T	330 1/4W
R399	ERDS2TJ472T	4.7K 1/4W	R495	ERDS2TJ474T	470K 1/4W	R565	ERDS2TJ183T	18K 1/4W	R638	ERDS2TJ103T	10K 1/4W
R401	ERDS2TJ103T	10K 1/4W	R501	ERDS2TJ102T	1K 1/4W	R566	ERDS2TJ104T	100K 1/4W	R639	ERDS2TJ103T	10K 1/4W
R402	ERDS2TJ333T	33K 1/4W	R502	ERDS2TJ102T	1K 1/4W	R567	ERDS2TJ103T	10K 1/4W	R640	ERDS2TJ103T	10K 1/4W
R403	ERDS2TJ223T	22K 1/4W	R503	ERDS2TJ683T	68K 1/4W	R568	ERDS2TJ152T	1.5K 1/4W	R641	ERDS2TJ103T	10K 1/4W
R404	ERDS2TJ120T	12 1/4W	R504	ERDS2TJ683T	68K 1/4W	R569	ERDS2TJ273T	27K 1/4W	R642	ERDS2TJ473T	47K 1/4W
R405	ERDS2TJ120T	12 1/4W	R505	ERDS2TJ682T	6.8K 1/4W	R570	ERDS2TJ103T	10K 1/4W	R643	ERDS2TJ473T	47K 1/4W
R406	ERDS2TJ120T	12 1/4W	R506	ERDS2TJ682T	6.8K 1/4W	R571	ERDS2TJ103T	10K 1/4W	R644	ERDS2TJ101T	100 1/4W
R407	ERDS2TJ331T	330 1/4W	R507	ERDS2TJ683T	68K 1/4W	R572	ERDS2TJ335T	3.3M 1/4W	R645	ERDS2TJ101T	100 1/4W
R408	ERDS2TJ151T	150 1/4W	R508	ERDS2TJ683T	68K 1/4W	R573	ERDS2TJ104T	100K 1/4W	R646	ERDS2TJ101T	100 1/4W
R409	ERDS2TJ221T	220 1/4W	R509	ERDS1FVJ100T	10 1/2W	R574	ERDS2TJ101T	100 1/4W	R647	ERDS2TJ101T	100 1/4W
R410	ERDS1FVJ390T	39 1/2W	R510	ERDS1FVJ100T	10 1/2W	R575	ERDS2TJ561T	560 1/4W	R648	ERDS2TJ471T	470 1/4W
R411	ERDS1FVJ390T	39 1/2W	R511	ERDS2TJ823T	82K 1/4W	R577	ERDS1FVJ100T	10 1/2W	R668	ERDS2TJ105T	1M 1/4W
R412	ERDS1FVJ390T	39 1/2W	R512	ERDS2TJ124T	120K 1/4W	R578	ERDS2TJ124T	120K 1/4W	R669	ERDS2TJ151T	150 1/4W
R413	ERDS2TJ102T	1K 1/4W	R513	ERDS2TJ334T	330K 1/4W	R579	ERDS1FVJ4R7T	4.7 1/2W	R670	ERDS2TJ222T	2.2K 1/4W
R414	ERDS2TJ151T	150 1/4W	R514	ERDS2TJ563T	56K 1/4W	R580	ERDS1FVJ4R7T	4.7 1/2W	R671	ERDS2TJ471T	470 1/4W
R415	ERDS2TJ102T	1K 1/4W	R515	ERDS2TJ103T	10K 1/4W	R581	ERDS2TJ101T	100 1/4W	R681	ERDS2TJ272T	2.7K 1/4W
R416	ERDS2TJ183T	18K 1/4W	R516	ERD25FVJ470T	47 1/4W	R582	ERDS2TJ223T	22K 1/4W	R682	ERDS2TJ272T	2.7K 1/4W
R417	ERDS2TJ183T	18K 1/4W	R517	ERDS2TJ563T	56K 1/4W	R583	ERDS2TJ473T	47K 1/4W	R683	ERDS2TJ471T	470 1/4W
R418	ERDS1FVJ181T	180 1/2W	R518	ERDS1FVJ390T	39 1/2W	R601	ERDS2TJ103T	10K 1/4W	R684	ERDS2TJ471T	470 1/4W
R419	ERDS2TJ472T	4.7K 1/4W	R519	ERDS1FVJ390T	39 1/2W	R602	ERDS2TJ222T	2.2K 1/4W	R685	ERDS2TJ223T	22K 1/4W
R420	ERDS1FVJ181T	180 1/2W	R521	ERDS1FVJ152T	1.5K 1/2W	R603	ERDS2TJ102T	1K 1/4W	R686	ERDS2TJ223T	22K 1/4W
R421	ERDS2TJ333T	33K 1/4W	R522	ERDS1FVJ2R2T	2.2 1/2W	R604	ERDS2TJ561T	560 1/4W	R687	ERDS2TJ103T	10K 1/4W
R422	ERDS2TJ331T	330 1/4W	R524	ERDS1FVJ220T	22 1/2W	R605	ERDS2TJ104T	100K 1/4W	R690	ERDS2TJ271T	270 1/4W
R423	ERDS2TJ223T	22K 1/4W	R525	ERDS1FVJ330T	33 1/2W	R606	ERDS2TJ104T	100K 1/4W	R691	ERDS2TJ221T	220 1/4W
R424	ERDS2TJ331T	330 1/4W	R526	ERDS1FVJ330T	33 1/2W	R607	ERDS2TJ103T	10K 1/4W	R694	ERDS2TJ182T	1.8K 1/4W
R427	ERDS2TJ103T	10K 1/4W	R527	ERDS2TJ152T	1.5K 1/4W	R608	ERDS2TJ103T	10K 1/4W	R695	ERDS2TJ222T	2.2K 1/4W
R431	ERDS2TJ391T	390 1/4W	R528	ERDS2TJ151T	150 1/4W	R611	ERDS2TJ473T	47K 1/4W	R696	ERDS2TJ272T	2.7K 1/4W
R432	ERDS2TJ391T	390 1/4W	R529	ERDS1FVJ2R2T	2.2 1/2W	R612	ERDS2TJ103T	10K 1/4W	R697	ERDS2TJ472T	4.7K 1/4W
R433	ERDS2TJ562T	5.6K 1/4W	R530	ERDS2TJ681T	680 1/4W	R613	ERDS2TJ102T	1K 1/4W	R698	ERDS2TJ682T	6.8K 1/4W
R434	ERDS2TJ562T	5.6K 1/4W	R531	ERDS2TJ151T	150 1/4W	R614	ERDS2TJ102T	1K 1/4W	R699	ERDS2TJ473T	47K 1/4W
R435	ERDS2TJ332T	3.3K 1/4W	R532	ERDS2TJ222T	2.2K 1/4W	R616	ERDS2TJ103T	10K 1/4W	R700	ERDS2TJ102T	1K 1/4W
R436	ERDS2TJ471T	470 1/4W	R533	ERDS2TJ472T	4.7K 1/4W	R617	ERDS2TJ106T	10M 1/4W	R701	ERDS2TJ102T	1K 1/4W
R437	ERDS2TJ224T	220K 1/4W	R534	ERDS1FVJ2R2T	2.2 1/2W	R618	ERDS2TJ334T	330K 1/4W	R702	ERDS2TJ122T	1.2K 1/4W
R438	ERDS2TJ224T	220K 1/4W	R535	ERDS1FVJ2R2T	2.2 1/2W	R619	ERDS2TJ681T	680 1/4W	R703	ERDS2TJ182T	1.8K 1/4W
R441	ERDS2TJ104T	100K 1/4W	R537	ERDS2TJ151T	150 1/4W	R620	ERDS2TJ472T	4.7K 1/4W	R704	ERDS2TJ222T	2.2K 1/4W
R442	ERDS2TJ682T	6.8K 1/4W	R538	ERDS1FVJ2R2T	2.2 1/2W	R621	ERDS2TJ472T	4.7K 1/4W	R705	ERDS2TJ272T	2.7K 1/4W
R443	ERDS2TJ182T	1.8K 1/4W	R539	ERDS1FVJ390T	39 1/2W	R625	ERDS2TJ101T	100 1/4W	R706	ERDS2TJ472T	4.7K 1/4W
R444	ERDS2TJ182T	1.8K 1/4W	R540	ERDS1FVJ330T	33 1/2W	R626	ERDS2TJ101T	100 1/4W	R707	ERDS2TJ682T	6.8K 1/4W

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
R708	ERDS2TJ103T	10K 1/4W	R759	ERDS2TJ820T	82 1/4W	C28	ECEA1HKA010B	1 50V	C108	ECEA1CKA330B	33 16V
R709	ERDS2TJ223T	22K 1/4W	R760	ERDS2TJ820T	82 1/4W	C29	ECFR1C103KR	0.01 16V	C109	ECEA1CKA101B	100 16V
R711	ERDS2TJ102T	1K 1/4W	R761	ERDS2TJ820T	82 1/4W	C30	ECFR1C103KR	0.01 16V	C111	ECBT1H561KB5	560P 50V
R712	ERDS2TJ102T	1K 1/4W	R762	ERDS2TJ820T	82 1/4W	C31	ECBT1H150JC5	15P 50V	C112	ECBT1H561KB5	560P 50V
R713	ERDS2TJ122T	1.2K 1/4W	R763	ERDS2TJ820T	82 1/4W	C32	ECBT1C103MS5	0.01 16V	C113	ECEA0JKA221B	220 6.3V
R714	ERDS2TJ182T	1.8K 1/4W	R764	ERDS2TJ820T	82 1/4W	C33	ECEA1HKA2R2B	2.2 50V	C114	ECEA0JKA221B	220 6.3V
R715	ERDS2TJ222T	2.2K 1/4W	R765	ERDS2TJ820T	82 1/4W	C34	ECEA1HKA010B	1 50V	C115	ECFR1C333JR	0.033 16V
R716	ERDS2TJ272T	2.7K 1/4W	R766	ERDS2TJ820T	82 1/4W	C35	ECEA1HKA010B	1 50V	C116	ECFR1C333JR	0.033 16V
R717	ERDS2TJ472T	4.7K 1/4W	R767	ERDS2TJ223T	22K 1/4W	C36	ECEA1HKA010B	1 50V	C117	ECEA1HKA010B	1 50V
R718	ERDS2TJ682T	6.8K 1/4W	R768	ERDS2TJ123T	12K 1/4W	C37	ECEA1HKA010B	1 50V	C118	ECEA1HKA010B	1 50V
R719	ERDS2TJ103T	10K 1/4W	R769	ERDS2TJ223T	22K 1/4W	C38	ECBT1C822MS5	8200P 16V	C119	ECEA1HKA4R7B	4.7 50V
R720	ERDS2TJ223T	22K 1/4W	R770	ERDS2TJ123T	12K 1/4W	C39	ECBT1C822MS5	8200P 16V	C120	ECEA1HKA4R7B	4.7 50V
R721	ERDS2TJ683T	68K 1/4W	R771	ERDS2TJ472T	4.7K 1/4W	C40	ECBT1H561KB5	560P 50V	C121	ECEA1HKA010B	1 50V
R722	ERDS2TJ102T	1K 1/4W	R773	ERDS2TJ104T	100K 1/4W	C41	ECBT1H561KB5	560P 50V	C122	ECEA1HKA010B	1 50V
R723	ERDS2TJ102T	1K 1/4W	R774	ERDS2TJ104T	100K 1/4W	C42	ECBT1C562MR5	5600P 16V	C123	ECBT1H102KB5	1000P 50V
R724	ERDS2TJ122T	1.2K 1/4W	R775	ERDS2TJ104T	100K 1/4W	C43	ECBT1C562MR5	5600P 16V	C124	ECBT1H102KB5	1000P 50V
R725	ERDS2TJ182T	1.8K 1/4W	R780	ERDS2TJ223T	22K 1/4W	C44	ECEA1CU101B	100 16V	C125	ECFR1C473MR	0.047 16V
R726	ERDS2TJ222T	2.2K 1/4W	R788	ERDS2TJ102T	1K 1/4W	C45	ECEA1HKA010B	1 50V	C126	ECFR1C473MR	0.047 16V
R727	ERDS2TJ272T	2.7K 1/4W	R789	ERDS2TJ102T	1K 1/4W	C46	ECEA1HKA010B	1 50V	C127	ECBT1C103MS5	0.01 16V
R728	ERDS2TJ472T	4.7K 1/4W	R790	ERDS2TJ122T	1.2K 1/4W	C47	ECBT1H473ZF5	0.047 50V	C128	ECBT1C103MS5	0.01 16V
R729	ERDS2TJ682T	6.8K 1/4W	R791	ERDS2TJ1R2T	1.2 1/4W	C48	ECBT1H100JC5	10P 50V	C129	ECBT1H821KB5	820P 50V
R730	ERDS2TJ103T	10K 1/4W	R792	ERDS2TJ1R2T	1.2 1/4W	C49	ECBT1H331KB5	330P 50V	C130	ECBT1H821KB5	820P 50V
R731	ERDS2TJ223T	22K 1/4W	R793	ERDS2TJ1R2T	1.2 1/4W	C51	ECBT1C103MS5	0.01 16V	C131	ECBT1H821KB5	820P 50V
R732	ERDS2TJ683T	68K 1/4W	R796	ERDS2TJ102T	1K 1/4W	C52	ECEA25M4R7RB	4.7 25V	C132	ECBT1H821KB5	820P 50V
R733	ERDS2TJ821T	820 1/4W	R797	ERDS2TJ102T	1K 1/4W	C53	ECBT1C103MS5	0.01 16V	C133	ECEA1HKA4R7B	4.7 50V
R734	ERDS2TJ821T	820 1/4W	R798	ERDS2TJ102T	1K 1/4W	C54	ECBT1H180JC5	18P 50V	C134	ECEA1HKA4R7B	4.7 50V
R736	ERDS2TJ102T	1K 1/4W	R799	ERDS2TJ102T	1K 1/4W	C55	ECBT1H150JC5	15P 50V	C135	ECBT1H102KB5	1000P 50V
R737	ERDS2TJ821T	820 1/4W	R800	ERDS2TJ561T	560 1/4W	C56	ECBT1H102KB5	1000P 50V	C136	ECBT1H102KB5	1000P 50V
R738	ERDS2TJ431T	430 1/4W	R952	ERDS2TJ821T	820 1/4W	C57	ECEA0JU101B	100 6.3V	C137	ECFR1C183KR	0.018 16V
R739	ERDS2TJ431T	430 1/4W	R953	ERDS2TJ393T	39K 1/4W	C59	ECBT1H330J5	33P 50V	C138	ECFR1C183KR	0.018 16V
R740	ERDS2TJ221T	220 1/4W	R972	ERDS2TJ821T	820 1/4W	C60	ECBT1H102KB5	1000P 50V	C139	ECEA1HKA2R2B	2.2 50V
R741	ERDS2TJ431T	430 1/4W	R973	ERDS2TJ393T	39K 1/4W	C61	ECBT1H331KB5	330P 50V	C140	ECEA1CKA100B	10 16V
R742	ERDS2TJ221T	220 1/4W				C62	ECEA1CU220B	22 16V	C141	ECEA1HKA0R1B	0.1 50V
R743	ERDS2TJ431T	430 1/4W		CAPACITORS		C63	ECBT1C103MS5	0.01 16V	C142	ECFR1C223MR	0.022 16V
R744	ERDS2TJ104T	100K 1/4W				C64	ECBT1C103MS5	0.01 16V	C143	ECEA1HKA4R7B	4.7 50V
R745	ERDS2TJ472T	4.7K 1/4W	C15	ECBT1C103MS5	0.01 16V	C65	ECBT1H102KB5	1000P 50V	C144	ECEA1HKA4R7B	4.7 50V
R746	ERDS2TJ472T	4.7K 1/4W	C16	ECEA1CU220B	22 16V	C66	ECBT1H102KB5	1000P 50V	C145	ECEA1CKA100B	10 16V
R747	ERDS2TJ681T	680 1/4W	C17	ECBT1C103MS5	0.01 16V	C67	ECBT1H102KB5	1000P 50V	C146	ECEA1CKA100B	10 16V
R749	ERDS2TJ681T	680 1/4W	C18	ECBT1H102KB5	1000P 50V	C68	ECBT1H102KB5	1000P 50V	C147	ECBT1C152KR5	1500P 16V
R750	ERDS2TJ681T	680 1/4W	C19	ECBT1C103MS5	0.01 16V	C71	ECBT1C103MS5	0.01 16V	C148	ECBT1C152KR5	1500P 16V
R751	ERDS2TJ681T	680 1/4W	C20	ECEA1HKA3R3B	3.3 50V	C72	ECBT1H471KB5	470P 50V	C150	ECEA1AKA470B	47 10V
R752	ERDS2TJ681T	680 1/4W	C21	ECEA0JU101B	100 6.3V	C73	ECBT1H2R7KC5	2.7P 50V	C151	ECEA1HKA010B	1 50V
R753	ERDS2TJ681T	680 1/4W	C22	ECBT1C103MS5	0.01 16V	C101	ECBT1H102KB5	1000P 50V	C152	ECEA1HKA010B	1 50V
R754	ERDS2TJ681T	680 1/4W	C23	ECEA1CU220B	22 16V	C102	ECBT1H102KB5	1000P 50V	C153	ECBT1H102KB5	1000P 50V
R755	ERDS2TJ681T	680 1/4W	C24	ECBT1H473ZF5	0.047 50V	C103	ECBT1H681KB5	680P 50V	C154	ECBT1H102KB5	1000P 50V
R756	ERDS2TJ681T	680 1/4W	C25	ECEA1HKA4R7B	4.7 50V	C104	ECFR1C223MR	0.022 16V	C155	ECEA1CKA100B	10 16V
R757	ERDS2TJ681T	680 1/4W	C26	ECBT1C822MS5	8200P 16V	C105	ECBT1H681KB5	680P 50V	C156	ECEA1CKA100B	10 16V
R758	ERDS2TJ681T	680 1/4W	C27	ECQP1821JZT	820P 100V[M]	C106	ECBT1H681KB5	680P 50V	C161	ECEA1CKA101B	100 16V

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
C162	ECEA1CU471B	470 16V	C314	ECFR1C473KR	0.047 16V	C397	ECBT1C472MR5	4700P 16V	C513	ECKR1H223ZF5	0.022 50V
C163	ECEA1HKA010B	1 50V	C315	ECBT1E103ZF5	0.01 25V	C398	ECBT1C472MR5	4700P 16V	C514	ECKR1H223ZF5	0.022 50V
C164	ECEA1HKA010B	1 50V	C316	ECBT0J223NS5	0.022 6.3V	C401	ECEA1CKA100B	10 16V	C515	ECKR1H103ZF5	0.01 50V
C165	ECEA1CKA100B	10 16V	C317	ECEA1HKA3R3B	3.3 50V	C402	ECEA1AKA330B	33 10V	C516	ECKR1H103ZF5	0.01 50V
C166	ECEA1CKA100B	10 16V	C318	ECEA1HKA3R3B	3.3 50V	C403	ECBT1E103ZF5	0.01 25V	C517	ECEA1EU222E	2200 25V
C167	ECEA1HKAR68B	0.68 50V	C320	ECBT0J223NS5	0.022 6.3V	C404	ECEA1CKA330B	33 16V	C518	ECKR1H103ZF5	0.01 50V
C168	ECEA1HKAR68B	0.68 50V	C321	ECEA1HKA0R1B	0.1 50V	C405	ECBT1E103ZF5	0.01 25V	C519	ECKR1H103ZF5	0.01 50V
C169	ECEA1HKA4R7B	4.7 50V	C322	ECEA1HKA0R1B	0.1 50V	C406	ECBT1E103ZF5	0.01 25V	C520	ECKR1H103ZF5	0.01 50V
C170	ECEA1HKA4R7B	4.7 50V	C323	ECEA1HKAR22B	0.22 50V	C407	ECEA1AU470B	47 10V	C521	ECKR1H103ZF5	0.01 50V
C171	ECEA1CKA100B	10 16V	C324	ECEA1HKAR22B	0.22 50V	C408	ECBT1E103ZF5	0.01 25V	C522	ECEA1HU332	3300 50V ^Δ
C173	ECBT1C103MS5	0.01 16V	C325	ECFR1C153MR	0.015 16V	C409	ECEA1HKA3R3B	3.3 50V	C523	ECEA1HU332	3300 50V ^Δ
C174	ECEA1HKA4R7B	4.7 50V	C326	ECFR1C153MR	0.015 16V	C410	ECEA1HU470B	47 50V	C524	ECEA0JU101B	100 6.3V
C175	ECEA1VU221B	220 10V	C327	ECFR1C153MR	0.015 16V	C411	ECKR1H103ZF5	0.01 50V	C528	ECEA1AKA470B	47 10V
C176	ECQV1H473JZ3	0.047 50V	C328	ECFR1C153MR	0.015 16V	C412	ECKR1H103ZF5	0.01 50V	C529	ECBT1E103ZF5	0.01 25V
C177	ECBT1H102KB5	1000P 50V	C329	ECBT1C222MR5	2200P 16V	C413	ECEA2AU470	47 100V	C536	ECEA1CU101B	100 16V
C178	ECBT1H102KB5	1000P 50V	C330	ECBT1C222MR5	2200P 16V	C414	ECEA1AKA330B	33 10V	C537	ECBT1E103ZF5	0.01 25V
C179	ECBT1C103MS5	0.01 16V	C331	ECEA1HKA010B	1 50V	C415	ECBT1E103ZF5	0.01 25V	C538	ECEA1CKA470B	47 16V
C180	ECBT1C103MS5	0.01 16V	C332	ECEA1HKA010B	1 50V	C416	ECEA0JKA470B	47 6.3V	C539	ECBT1E103ZF5	0.01 25V
C181	ECBT1C103MS5	0.01 16V	C333	ECEA1HKA0R1B	0.1 50V	C417	ECBT1E103ZF5	0.01 25V	C551	ECKR1H223ZF5	0.022 50V
C182	ECEA1HKA4R7B	4.7 50V	C334	ECEA1HKA0R1B	0.1 50V	C418	ECA1EM102E	1000P 25V	C552	ECKR1H223ZF5	0.022 50V
C183	ECQV1H474JZ3	0.47 50V	C335	ECEA1HKA0R1B	0.1 50V	C420	ECBT1E103ZF5	0.01 25V	C553	ECQE1224KF3	0.22 100V[M]
C184	ECQP1152JZT	1500P 100V[M]	C336	ECEA1HKA0R1B	0.1 50V	C421	ECEA1HU100B	10 50V	C559	ECBT1E103ZF5	0.01 25V
C185	ECQP2A472JZT	4700P 100V	C337	ECEA1HKA3R3B	3.3 50V	C422	ECBT1H102KB5	1000P 50V	C561	ECEA1HKA2R2B	2.2 50V
C186	ECEA1AKA470B	47 10V	C338	ECEA1HKA3R3B	3.3 50V	C423	ECBT1C103MS5	0.01 16V	C562	ECBT1E103ZF5	0.01 25V
C187	ECBT1H101KB5	100P 50V	C339	ECBT1E103ZF5	0.01 25V	C424	ECBT1H102KB5	1000P 50V	C563	ECEA1AU221B	220 10V
C188	ECBT1H101KB5	100P 50V	C340	ECBT1E103ZF5	0.01 25V	C441	ECBT1H220J5	22P 50V	C564	ECBT1E103ZF5	0.01 25V
C189	ECQP2A272JZT	2700P 100V	C341	ECEA1CKA220B	22 16V	C442	ECEA1HKA2R2B	2.2 50V	C565	ECEA1CKA100B	10 16V
C190	ECBT1C103MS5	0.01 16V	C342	ECEA1HKA4R7B	4.7 50V	C443	ECBT1E103ZF5	0.01 25V	C566	ECEA1CKA100B	10 16V
C193	ECBT1H102KB5	1000P 50V	C343	ECEA1HKAR47B	0.47 50V	C444	ECBT1E103ZF5	0.01 25V	C567	ECEA0JU471B	470 6.3V
C194	ECBT1H102KB5	1000P 50V	C344	ECEA1HKAR47B	0.47 50V	C451	ECBT1E103ZF5	0.01 25V	C597	ECBT1E103ZF5	0.01 25V
C201	ECEA1CKA101B	100 16V	C347	ECBT1H560J5	56P 50V	C481	ECBT1H101KB5	100P 50V	C599	ECEA1HU470B	47 50V
C202	ECBT1H104ZF5	0.1 50V	C348	ECBT1H560J5	56P 50V	C482	ECBT1H101KB5	100P 50V	C601	ECBT1H561KB5	560P 50V
C203	ECBT1H331KB5	330P 50V	C351	ECBT1E103ZF5	0.01 25V	C483	ECBT1H101KB5	100P 50V	C602	ECBT1H561KB5	560P 50V
C204	ECBT1H331KB5	330P 50V	C352	ECBT1E103ZF5	0.01 25V	C484	ECBT1H101KB5	100P 50V	C604	ECBT1H561KB5	560P 50V
C205	ECBT1C222KR5	2200P 16V	C353	ECEA1HKA3R3B	3.3 50V	C485	ECBT1H101KB5	100P 50V	C605	ECBT1H561KB5	560P 50V
C206	ECBT1C222KR5	2200P 16V	C354	ECEA1HKA3R3B	3.3 50V	C486	ECBT1H101KB5	100P 50V	C606	ECBT1H561KB5	560P 50V
C301	ECBT1E103ZF5	0.01 25V	C355	ECEA1HKAR33B	0.33 50V	C501	ECEA1HKA3R3B	3.3 50V	C607	ECBT1H561KB5	560P 50V
C302	ECBT1E103ZF5	0.01 25V	C356	ECEA1HKAR33B	0.33 50V	C502	ECEA1HKA3R3B	3.3 50V	C608	ECBT1H101KB5	100P 50V
C304	ECBT0J223NS5	0.022 6.3V	C357	ECEA0JKA470B	47 6.3V	C503	ECBT1H102KB5	1000P 50V	C609	ECEA0JKA470B	47 6.3V
C305	ECBT1E103ZF5	0.01 25V	C359	ECEA1HU010B	1 50V	C504	ECBT1H102KB5	1000P 50V	C610	ECBT1C103MS5	0.01 16V
C306	ECBT1E103ZF5	0.01 25V	C360	ECEA0JKA470B	47 6.3V	C505	ECBT1H331KB5	330P 50V	C613	ECEA1HKA010B	1 50V
C307	ECBT1H101KB5	100P 50V	C361	ECEA1HKA010B	1 50V	C506	ECBT1H331KB5	330P 50V	C614	ECEA1HKA010B	1 50V
C308	ECBT1H101KB5	100P 50V	C362	ECBT1H101KB5	100P 50V	C507	ECBT1H150J5	15P 50V	C615	ECBT1H150JC5	15P 50V
C309	ECBT1H104ZF5	0.1 50V	C363	ECBT1H101KB5	100P 50V	C508	ECBT1H150J5	15P 50V	C616	ECBT1H180JC5	18P 50V
C310	ECBT1H104ZF5	0.1 50V	C364	ECFR1C104MR	0.1 16V	C509	ECEA1HKA010B	1 50V	C617	ECBT1H680J5	68P 50V
C311	ECBT1H470J5	47P 50V	C392	ECBT1H100JC5	10P 50V	C510	ECEA1HKA010B	1 50V	C618	ECBT1H560J5	56P 50V
C312	ECBT1H470J5	47P 50V	C393	ECQV1H473JZ3	0.047 50V	C511	ECEA1HU330B	33 50V	C619	ECBT1H680J5	68P 50V
C313	ECBT1H104ZF5	0.1 50V	C394	ECQV1H473JZ3	0.047 50V	C512	ECEA2AU100B	10 100V	C620	ECBT1H560J5	56P 50V

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
C621	ECEA1HKA3R3B	3.3 50V	R707	ERJ6GEYJ474V	470K 1/10W	C711	ECUZNE104MBN	0.1 25V	RJ721	ERJ8GEY0R00A	0 1/8W
C622	ECEA1VKA100B	10 10V	R708	ERJ6GEYJ154V	150K 1/10W	C712	ECUZNE104MBN	0.1 25V	RJ722	ERJ8GEY0R00A	0 1/8W
C623	ECEA1VKA100B	10 10V	R709	ERJ6GEYJ683V	68K 1/10W	C713	ECUV1C104MBM	0.1 16V	RJ723	ERJ8GEY0R00A	0 1/8W
C624	ECEA0JKA101B	100 6.3V	R711	ERJ6GEYJ154V	150K 1/10W	C714	ECEA0JKA101I	100 6.3V	RJ724	ERJ8GEY0R00A	0 1/8W
C625	ECBT1H102KB5	1000P 50V	R712	ERJ6GEYJ221V	220 1/10W	C716	ECUV1H561KBN	560P 50V	RJ725	ERJ8GEY0R00A	0 1/8W
C626	ECEA0JU102B	1000 6.3V	R717	ERJ6GEYJ102V	1K 1/10W	C717	ECUZNE104MBN	0.1 25V	RJ726	ERJ8GEY0R00A	0 1/8W
C627	ECEA0JU102B	1000 6.3V	R718	ERJ6GEYJ102V	1K 1/10W	C718	ECUV1C224KBN	0.22 16V	RJ727	ERJ8GEY0R00A	0 1/8W
C628	ECBT1H102KB5	1000P 50V	R719	ERJ6GEYJ102V	1K 1/10W	C721	ECUV1H150JCN	15P 50V	RJ728	ERJ8GEY0R00A	0 1/8W
C629	ECBT1H101KB5	100P 50V	R720	ERJ6GEYJ102V	1K 1/10W	C722	ECUV1H150JCN	15P 50V	RJ729	ERJ8GEY0R00A	0 1/8W
C630	ECBT1H101KB5	100P 50V	R721	ERJ6GEYJ101V	100 1/10W	C723	ECEA1AKA221I	220 10V	RJ730	ERJ8GEY0R00A	0 1/8W
C631	ECBT1C103MS5	0.01 16V	R722	ERJ6GEYJ563V	56K 1/10W	C724	ECUV1C104MBM	0.1 16V			
C647	ECBT1C103MS5	0.01 16V	R723	ERJ6GEYJ182V	1.8K 1/10W	C725	ECUV1H102KBN	1000P 50V		TEST JUMPERS	
C648	ECEA1HKA010B	1 50V	R724	ERJ6GEYJ333V	33K 1/10W	C726	ECUV1H102KBN	1000P 50V			
C654	ECEA1AU221B	220 10V	R725	ERJ6GEYJ472V	4.7K 1/10W	C727	ECEA1HPK010I	1 50V	TJ701	EYF8CU	TEST JUMPER
C655	ECEA1HKA010B	1 50V	R726	ERJ6GEYJ473V	47K 1/10W	C728	ECEA1HPK010I	1 50V	TJ702	EYF8CU	TEST JUMPER
C656	ECBT1H102KB5	1000P 50V	R727	ERJ6GEYJ822V	8.2K 1/10W	C730	ECUZNE104MBN	0.1 25V			
C657	ECBT1C103MS5	0.01 16V	R728	ERJ6GEYJ103V	10K 1/10W	C731	ECEA0JKA221I	220 6.3V		<LOADING MOTOR>	
C658	ECEA1CKA100B	10 16V	R731	ERJ6GEYJ822V	8.2K 1/10W	C732	ECEA0JKA221I	220 6.3V		CAPACITOR	
C665	ECBT1C332MR5	3300P 16V	R734	ERJ6GEYJ101V	100 1/10W	C733	ECUZNE104MBN	0.1 25V			
C673	ECBT1H102KB5	1000P 50V	R735	ERJ6GEYJ101V	100 1/10W	C734	ECEA1AKA221I	220 10V	C1	ECA1AKF820E	82 10V
C674	ECBT1H102KB5	1000P 50V	R736	ERJ6GEYJ101V	100 1/10W	C735	ECUZNE104MBN	0.1 25V			
C675	ECBT1C103MS5	0.01 16V	R738	ERJ6GEYJ223V	22K 1/10W	C736	ECUZNE104MBN	0.1 25V			
C676	ECBT1C103MS5	0.01 16V	R741	ERJ6GEYJ562V	5.6K 1/10W	C737	ECUZNE104MBN	0.1 25V			
C677	ECBT1H561KB5	560P 50V	R742	ERJ6GEYJ562V	5.6K 1/10W	C738	ECUV1C154KBN	0.15 16V			
C678	ECBT1H561KB5	560P 50V	R743	ERJ6GEYJ562V	5.6K 1/10W	C742	ECUV1E273KBN	0.027 25V			
C679	ECBT1H104ZF5	0.1 50V	R744	ERJ6GEYJ103V	10K 1/10W	C743	ECUZNE104MBN	0.1 25V			
C680	ECBT1H101KB5	100P 50V	R745	ERJ6GEYJ155V	1.5M 1/10W	C744	ECUV1E822KBN	8200P 25V			
C681	ECBT1H101KB5	100P 50V	R748	ERJ6GEYJ182V	1.8K 1/10W	C745	ECUV1C473MBN	0.047 16V			
C682	ECBT1H104ZF5	0.1 50V	R749	ERJ6GEYJ682V	6.8K 1/10W	C747	ECUV1H222KBN	2200P 50V			
C683	ECBT1H331KB5	330P 50V	R750	ERJ6GEYJ473V	47K 1/10W	C748	ECUV1H471KBM	470P 50V			
C684	ECBT1H331KB5	330P 50V	R751	ERJ6GEYJ473V	47K 1/10W	C749	ECUZNE104MBN	0.1 25V			
C687	ECBT1H102KB5	1000P 50V	R752	ERJ8GEYJ220V	22 1/8W	C751	ECUZNE104MBN	0.1 25V			
C688	ECBT1H102KB5	1000P 50V	R770	ERJ6GEYJ155V	1.5M 1/10W	C752	ECUV1H152KBN	1500P 50V			
C689	ECEA1AKA220B	22 10V	R771	ERJ6GEYJ155V	1.5M 1/10W	C753	ECUV1H471KBM	470P 50V			
C694	ECBT0J223NS5	0.022 6.3V	R772	ERJ6GEYJ273V	27K 1/10W	C754	ECUV1H471KBN	470P 50V			
C696	ECBT1H471KB5	470P 50V									
C697	ECBT1H331KB5	330P 50V		CAPACITORS			CHIP JUMPERS				
C698	ECBT1E103ZF5	0.01 25V									
C699	ECKR1H102KBD	1000P 50V	C701	ECEA0JKA330I	33 6.3V	RJ701	ERJ8GEY0R00A	0 1/8W			
			C702	ECUZNE104MBN	0.1 25V	RJ702	ERJ8GEY0R00A	0 1/8W			
	<SERVO P.C.B>		C703	ECEA0JKA101I	100 6.3V	RJ703	ERJ8GEY0R00A	0 1/8W			
	RESISTORS		C704	ECUZNE104MBN	0.1 25V	RJ704	ERJ8GEY0R00A	0 1/8W			
			C705	ECUZNE104MBN	0.1 25V	RJ707	ERJ8GEY0R00A	0 1/8W			
R701	ERJ6GEYJ4R7V	4.7 1/10W	C706	ECUV1H272KBN	2700P 50V	RJ709	ERJ8GEY0R00A	0 1/8W			
R703	ERJ6GEYJ823	82K 1/10W	C707	ECUV1E273KBN	0.027 25V	RJ714	ERJ8GEY0R00A	0 1/8W			
R704	ERJ6GEYJ102V	1K 1/10W	C708	ECUV1H472KBN	4700P 50V	RJ715	ERJ8GEY0R00A	0 1/8W			
R705	ERJ6GEYJ103V	10K 1/10W	C709	ECUV1C473KBN	0.047 16V	RJ716	ERJ8GEY0R00A	0 1/8W			
R706	ERJ6GEYJ102V	1K 1/10W	C710	ECUV1H182KBN	1800P 50V	RJ717	ERJ8GEY0R00A	0 1/8W			

■ Packing Materials & Accessories

Notes: • Important safety notice :

Components identified by Δ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- The parenthesized indications in the Remarks column specify the areas. (refer to the cover page for area.)

Parts without these indications can be used for all areas.

- [M] indicates in Remarks column parts that are supplied by MESA.

- [VRD] indicates in Remarks column parts that are supplied by Video Recorder Division.

- The "(SF)" mark denotes the standard part.

- Remote Control Unit : Supply period for three years from terminal of production.

- **Warning:** This product uses a laser diode. Refer to caution statements on page 3.

ACHTUNG : • Die lasereinheit nicht zerlegen.

• Die lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

Ref.No.	Part.No.	Part Name & Description	Remarks	Ref.No.	Part.No.	Part Name & Description	Remarks	Ref.No.	Part.No.	Part Name & Description	Remarks
		PACKING MATERIALS				ACCESSORIES		A4	RSA0010	AM LOOP ANT	
P1	RPF0100	BAG (SET)	[M]	A1	EUR643804	REMOTE CONTROL	[M]	A5	RJA0019-2K	AC CORD (SF) (E,EG)	Δ
P2	RPG2796	PACKING CASE	[M]	A2	RFKSACH74EK	INSTRU MNL ASS'Y	[M](E)	A5	VJA0733	AC CORD Δ (SF) [VRD](EB)	
P3	RPN0922-2	POLYFOAM	[M]	A2	RQT3309-B	INSTRUCTION MANUAL	[M](EB)	A6	SJP9009	ANT ADAPTER	(EB)
P4	SPSD155	ACCESSORY CASE		A2	RQT3311-1D	INSTRUCTION MANUAL	[M](EG)				
P5	SPB1061	VINYL BAG		A3	RSA0007	FM ANTENNA					

■ Packaging

P4 (SPSD155) : ACCESSORY CASE

A1 (EUR643804) : REMOTE CONTROL

P5 (SPB1061) : VINYL BAG

A2 (RFKSACH74EK ... E) : INSTRUCTION MANUAL ASS'Y

A2 (RQT3309-B ... EB) : INSTRUCTION MANUAL

A2 (RQT3311-1D ... EG) : INSTRUCTION MANUAL

A3 (RSA0007) : FM ANTENNA

A4 (RSA0010) : AM LOOP ANTENNA SET

A5 (RJA0019-2K ... E,EG) : AC CORD

A6 (SJP9009 ... EB) : ANTENNA ADAPTER

For only EB area

- * Put the AC power supply cord (VJA0733) on the top rear polyfoam.

