

ORDER NO. MD0206154C3

Service Manual

DVD Stereo System




SA-DK20GN

Colour

(S)... Silver Type

TAPE SECTION :

AR2 MECHANISM SERIES

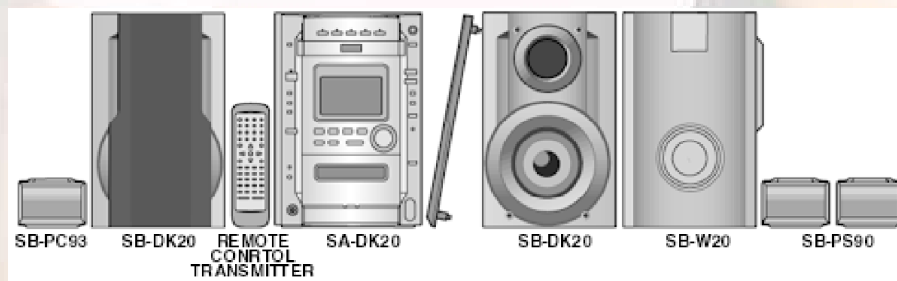

SPECIFICATIONS

Specifications

■ AMPLIFIER SECTION

RMS power output

10% THD, both channels driven

75 Hz

Subwoofer 150 W (4 Ω)

1 kHz

Front 45 W per ch (6 Ω)

Center 70 W (8 Ω)

Surround 40 W per ch (8 Ω)

Total power in stereo mode

(Front and Subwoofer) 240 W

Total power in Home Theater mode

390 W

Input sensitivity

AUX 250 mV

Input Impedance

AUX 10 k Ω

■ FM TUNER SECTION

Frequency range 87.50 - 108.00 MHz (50 kHz steps)

Sensitivity 1.8 μ V (IHF)

S/N 26 dB 1.5 μ V

Antenna terminal(s) 75 Ω (unbalanced)

■ AM TUNER SECTION

Frequency range 522 - 1629 kHz (9 kHz steps)

Sensitivity

S/N 20 dB (at 999 kHz) 500 μ V/m

■ CASSETTE DECK SECTION

Track system 4 track, 2 channel

Heads

Record/playback Solid permalloy head

Erase Double gap ferrite head

Motor DC servo motor

Recording system AC bias 100 kHz

Erasing system AC erase 100 kHz

Tape speed 4.8 cm/s (1 7/8 ips)

Overall frequency response (+3 dB, -6 dB at DECK OUT)

NORMAL (TYPE I) 35 Hz - 14 kHz

HIGH (TYPE II) 35 Hz - 14 kHz

S/N ratio 50 dB (A weighted)

Wow and flutter 0.18 % (WRMS)
Fast forward and rewind time Approx. 120 seconds with
C-60 cassette tape

■ Disc SECTION

Disc
DVD-Video
8 cm/12 cm single-sided, single-layer
8 cm/12 cm single-sided, double-layer
8 cm/12 cm double-sided, double-layer
(One layer per side)
Video CD/CD 8 cm/12 cm (CD-R/RW)
Video
Signal system NTSC/PAL
(depending on disc
format)
Output level
Composite video 1 Vp-p (75 Ω)
S-Video Y 1 Vp-p (75 Ω)
S-Video C 0.300 Vp-p (75 Ω)(PAL)
0.286 Vp-p (75 Ω)(NTSC)
Audio
Sampling frequency
CD 44.1 kHz
DVD 48kHz/96 kHz
Decoding 16/20/24 bit linear
Wow and flutter Below measurable limit
D/A converter Delta-sigma DAC)
Pick up
Beam source Semiconductor Laser
Wavelength
DVD 658 nm
VCD/CD 790 nm

■ GENERAL

Power supply AC 230 - 240 V, 50Hz
Power consumption 186 W
Power consumption in standby mode 0.6 W
Dimensions (W x H x D) 215.4 X 315 X 350 mm
Mass 8.1 kg

■ SYSTEM

SC-DK20(GN) Music Center: SA-
DK20(GN)

Front Speaker: SB-DK20(P)
Surround & Centre Speaker: SB-PT93(P1)
Sub woofer: SB-W20(P)

Notes:

1. Specifications are subject to change without notice. Mass and dimensions are approximate.
2. Total harmonic distortion is measured by the digital spectrum analyzer.

1

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

1. Before Repair and Adjustment

Disconnect AC power, discharge Power Supply Capacitors C566~C569, C782 and C591 through a 10 Ω , 5W resistor to ground.

DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.

After repairs are completed, restore power gradually using a variac, to avoid overcurrent.

Current consumption at AC 240V, 50Hz in NO SIGNAL mode should be ~350mA respectively.

2. Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- ▀ No sound is heard when the power is turned on.
- ▀ Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are “shorted”, or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:


1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note :


When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

3. Accessories


Remote Control Transmitter

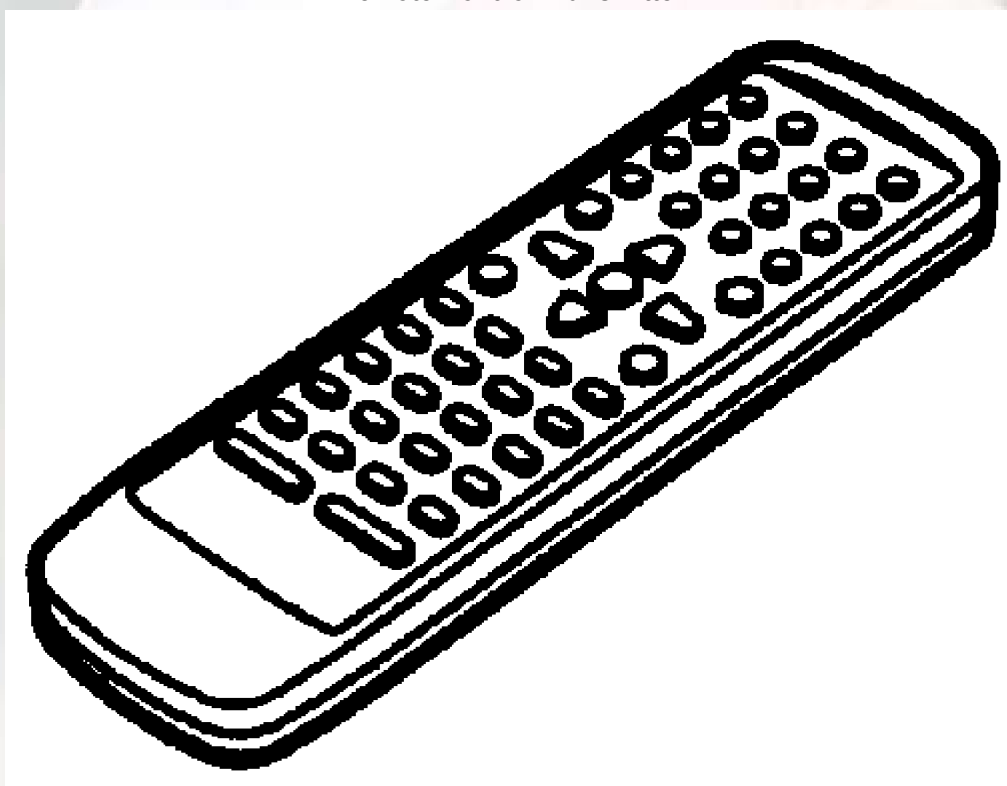


FM indoor antenna

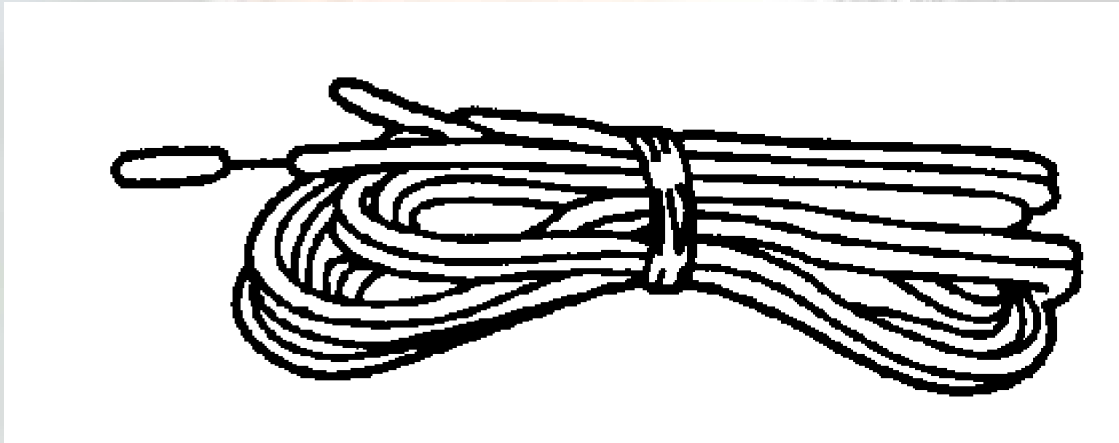

AC mains lead

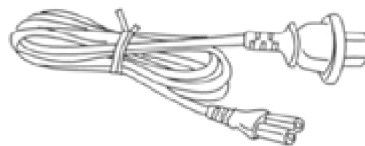

AM Loop antenna

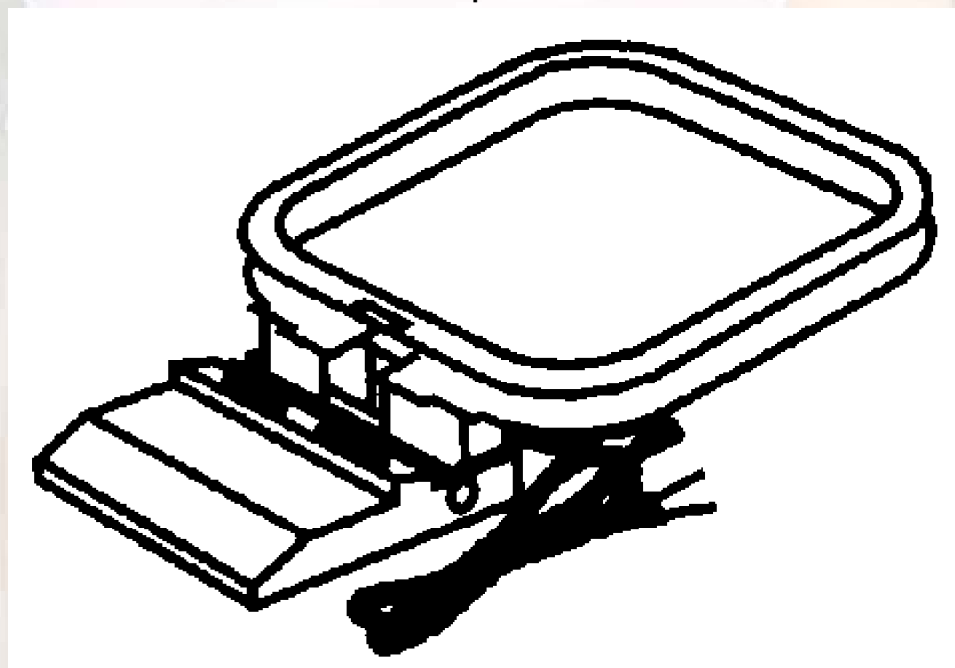

Video cable



4. Handling Precaution for Traverse Deck (Optical Pickup)

The laser diode in the traverse unit (optical pickup) may break down due to static electricity of clothes or human body.

Use due caution to electrostatic breakdown when servicing and handling the laser diode.

4.1. Grounding for electrostatic breakdown prevention

Some devices such as the DVD player use the optical pickup (laser diode) and the optical pickup will be damaged by static electricity in the working environment. Proceed servicing works under the working environment where grounding works is completed.

4.1.1. Workable grounding

1. Put a conductive materials (sheet) or iron sheet on the area where the optical pickup is placed, and ground the sheet.

4.1.2. Human body grounding

1. Use the anti-static wrist strap to discharge the static electricity from your body.


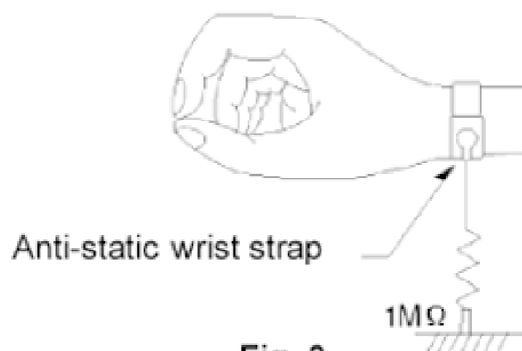


Fig. 3

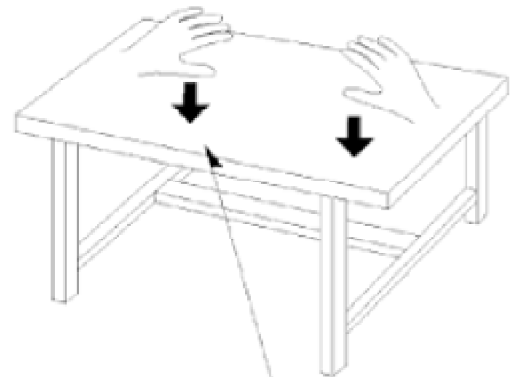

Conductive material
(sheet) or iron sheet

Fig. 4

4.1.3. Handling of optical pickup

1. To keep the good quality of the optical pickup maintenance parts during transportation and before installation, the both ends of the laser diode are short-circuited. After replacing the parts with new ones, remove the short circuit according to the correct procedure. (See this Technical Guide.)
2. Do not use a tester to check the laser diode for the optical pickup. Failure to do so will damage the laser diode due to the power supply in the tester.

4.2. Handling Precautions for Traverse Unit (Optical Pickup)

1. Do not give a considerable shock to the traverse unit (optical pickup) as it has an extremely high-precise structure.
2. When replacing the optical pickup, install the flexible cable and cut its short land with a nipper. See the optical pickup replacement procedure in this Technical Guide. Before replacing the traverse unit, remove the short pin for preventing static electricity and install a new unit. Connect the connector as short times as possible.
3. The flexible cable may be cut off if an excessive force is applied to it. Use caution when handling the cable.
4. The half-fixed resistor for laser power adjustment cannot be adjusted. Do not turn the resistor.

5. Precaution of Laser Diode

Caution :

This product utilizes a laser diode with the unit turned "ON", invisible laser radiation is emitted from the pick up lens.

Wavelength : 780 nm

Maximum output radiation power from pick up : 100 μ W/VDE

Laser radiation from pick up unit is safety level, but be sure the followings:

1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pick up unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

ACHTUNG :

Dieses Produkt enthält eine Laserdiode. Im eingeschalteten Zustand wird unsichtbare Laserstrahlung von der Lasereinheit abgestrahlt.

Wellenlänge : 780nm

Maximale Strahlungsleistung der Lasereinheit :100 μ W/VDE

Die Strahlung an der Lasereinheit ist ungefährlich, wenn folgende Punkte beachtet werden:

1. Die Lasereinheit nicht zerlegen, da die Strahlung an der freigelegten Laserdiode gefährlich ist.
2. Den werkseitig justierten Einstellregler der Lasereinheit nicht verstellen.
3. Nicht mit optischen Instrumenten in die Fokussierlinse blicken.
4. Nicht über längere Zeit in die Fokussierlinse blicken.

ADVARSEL :

I dette a apparat anvendes laser.

CAUTION!



THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

■ Use of Caution Labels


DANGER	- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM. (FDA 21 CFR)
CAUTION	- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. (IEC60825-1)
ATTENTION	- RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
ADVARSEL	- SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	- AVATTAESSA OLET ALTTIIN NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILYLLÄ. ÄLÄ KATSO SÄTEESEEN.
VARNING	- SYNIG OCH OSYNIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN.
ADVARSEL	- SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT	- SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
注意	- 打开时有可见及不可见激光辐射。避免激光束照射。
注意	- ここを開くと可視及び不可視のレーザー光が出ます。 ビームを直接見たり、触れたりしないでください。 ROLS0233

(Inside of product)

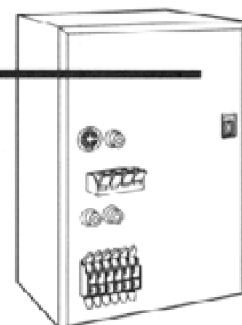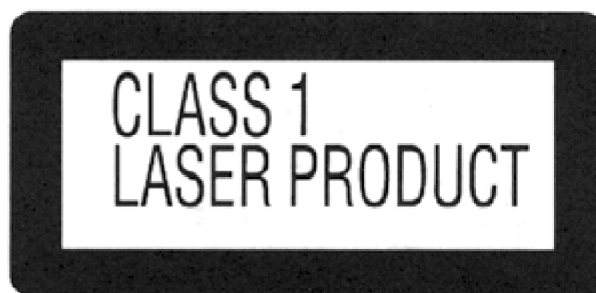

6. Operation Procedures

The illustration is the model for the Middle East, South Africa and Asia.

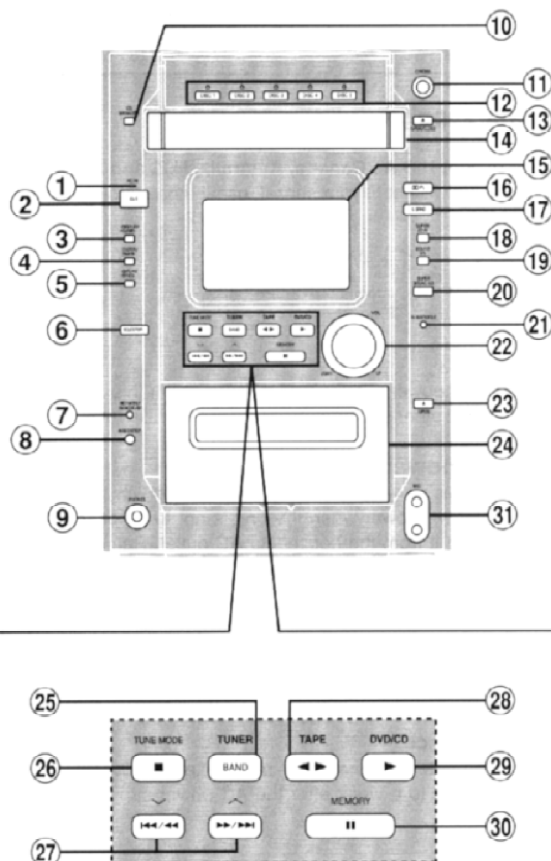

Front panel controls

Main unit


- ① **AC supply indicator (AC IN)**
This indicator lights when the unit is connected to the AC mains supply.
- ② **Standby/on switch (⏻/⏻)**
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ③ **Display select/demonstration button (-DISPLAY/-DEMO)**
- ④ **Clock/timer button (CLOCK/TIMER)**
- ⑤ **Timer button (⏻PLAY/⏻REC)**
- ⑥ **Source select button (SELECTOR)**
Each time you press the button:
TUNER → TAPE → DVD/CD → AUX
- ⑦ **Tape reverse mode, FM mode, AM beat proof button (REV MODE/FM MODE/BP)**
- ⑧ **Recording start/stop button (●REC/STOP)**
- ⑨ **Headphones jack (PHONES)**
- ⑩ **CD MANAGER button (CD MANAGER)**
- ⑪ **CINEMA mode button and indicator (CINEMA)**
- ⑫ **Disc direct select buttons and disc indicators (DISC 1 – DISC 5)**
- ⑬ **Disc tray open/close button (⏻ OPEN/CLOSE)**
- ⑭ **Disc tray**
- ⑮ **Display**
- ⑯ **DOLBY PRO LOGIC button and indicator (⏻ PL)**
- ⑰ **Super surround button and indicator (S.SRND)**
- ⑱ **Super 3D AI EQ button (SUPER 3D AI)**
- ⑲ **Sound EQ button (SOUND EQ)**
- ⑳ **Super sound EQ button and indicator (SUPER SOUND EQ)**
- ㉑ **Subwoofer button and indicator (SUBWOOFER)**
- ㉒ **Volume control (VOL)**
- ㉓ **Cassette holder open button (⏻ OPEN)**
- ㉔ **Cassette holder**
- ㉕ **Tuner, band select button (TUNER, BAND)**
Press to select TUNER as the source.
Lights when TUNER is selected as the source.
- ㉖ **Disc/tape stop, tuning mode select button (■, TUNE MODE)**
- ㉗ **Disc skip/search, tape fast-forward/rewind/TPS, tune/time adjust buttons (⏻⏻⏻⏻, ⏻, ⏻⏻⏻⏻, ⏻, ⏻⏻⏻⏻)**
- ㉘ **Tape play button (TAPE ⏻▶)**
Press to select TAPE as the source.
Lights when TAPE is selected as the source.
- ㉙ **Disc play button (DVD/CD ▶)**
Press to select DVD/CD as the source.
Lights when DVD/CD is selected as the source.
- ㉚ **Disc pause, memory button (⏻, MEMORY)**
- ㉛ **Microphone jacks (MIC)**

Front panel controls

Remote control

The illustration shows the remote control for areas except Australia, N.Z., the Middle East, South Africa and Asia.

Buttons such as ❸ function in the same way as the controls on the main unit.

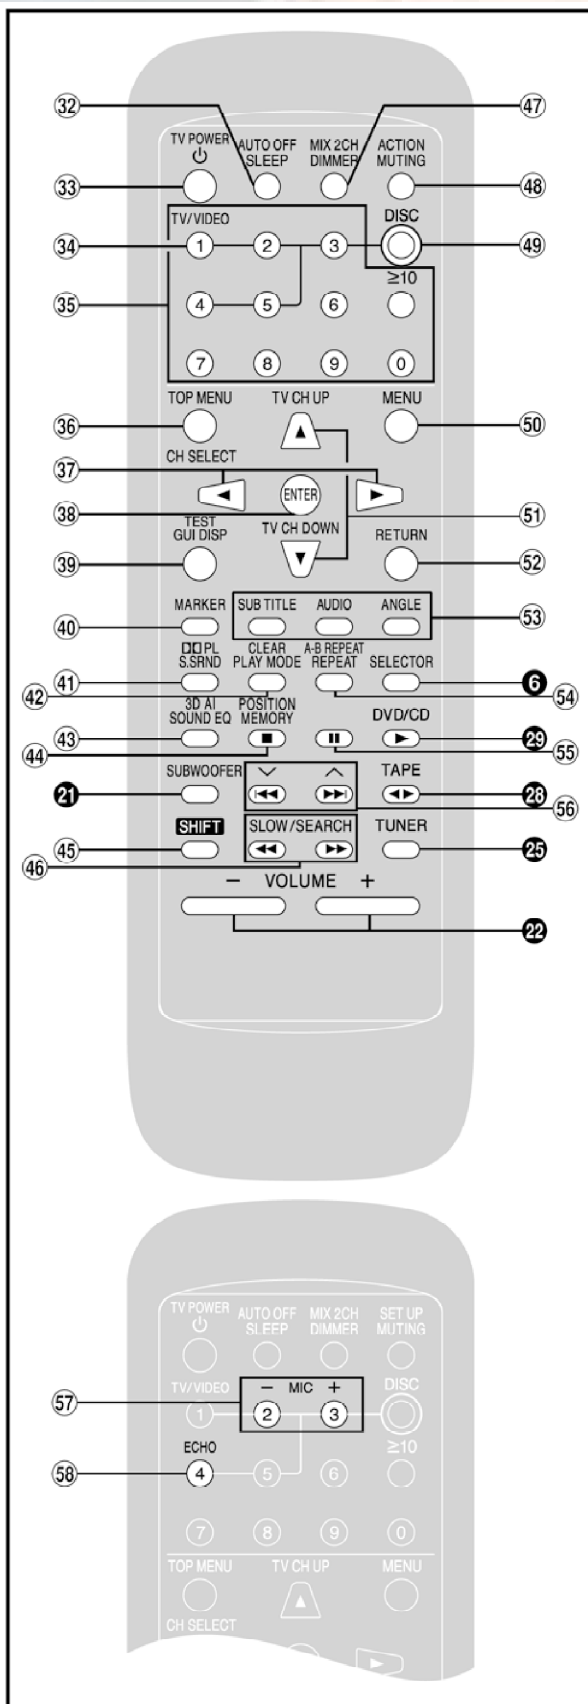

- ❷ Sleep button (SLEEP)
- ❸ Standby/on switch (⏻)
- ❹ Numbered buttons (0–9, ≥10)
- ❺ Top menu button (TOP MENU)
- ❻ ❿ Cursor buttons (⬅, ➡, ⬆, ⬆)
- Ⓜ Enter button (ENTER)
- Ⓝ GUI display button (GUI DISP)
- Ⓞ Marker button (MARKER)
- Ⓟ Super surround button (S.SRND)
- Ⓠ Play mode select button (PLAY MODE)
- Ⓡ Sound EQ button (SOUND EQ)
- Ⓢ Stop button (■)
- Ⓣ Shift button (SHIFT)
See below.
- Ⓤ Disc slow/search button (SLOW/SEARCH ◀, ▶)
- Ⓥ Display dimmer button (DIMMER)
- Ⓦ Muting button (MUTING)
- Ⓧ Disc button (DISC)
- Ⓨ Menu button (MENU)
- Ⓩ Return button (RETURN)
- ⓐ Subtitle/audio/angle buttons (SUB TITLE) (AUDIO) (ANGLE)
- ⓑ Repeat button (REPEAT)
- ⓓ Pause button (⏸)
- ⓔ Disc skip, tape fast-forward/rewind/TPS, tuning button (◀◀, ⏮, ▶▶, ⏭)

To operate functions labeled in orange, press [SHIFT] (❸) and the corresponding button at the same time.

- ❷ Auto power-off button (AUTO OFF)
- ❸ TV power on/off button (TV POWER)
- ❹ TV/video input mode select button (TV/VIDEO)
- ❺ Channel select button (CH SELECT)
- ❻ Test signal button (TEST)
- Ⓜ DOLBY PRO LOGIC button (DOLBY)
- Ⓝ Clear button (CLEAR)
- Ⓞ Super 3D AI EQ button (3D AI)
- Ⓟ Position memory button (POSITION MEMORY)
- Ⓠ 2 channel down-mixing button (MIX 2CH)
- Ⓡ Initial settings button (ACTION)
This button is labeled "SET UP" on the remote control for Australia, N.Z., the Middle East, South Africa and Asia.
- Ⓢ TV channel select buttons (TV CH UP, TV CH DOWN)
- Ⓣ A-B repeat button (A-B REPEAT)

The numbered buttons are also used for karaoke functions on the remote control for the Middle East, South Africa and Asia.

- ❷ Microphone volume buttons (– MIC +)
- ❸ Echo button (ECHO)

7. Self-Diagnostic Function

7.1. Outline

- Self-Diagnosis of error conditions on user equipment according to conditions set by the head office.
- Occurance of an error condition and results of operations that occurred after entering self-diagnostic mode are displayed via the front (FL) display panel.

7.1.1. Outline of Functions

Selector	Complex Operation	Front Panel Display (Mode-in)	Next Operation	Test Content
VD/CD	Main unit [STOP]Main unit [>>]	Y_-----	[OPEN/CLOSE]	Changer mechanism operation; -Diagnostic code acquisition
			[STOP] Single press	Display self-diagnostic code
			[STOP] Long press	Clear recorded content of error conditions
			Remote Control [5]	Changer mechanism continuous operation test
VD/CD	Main unit [STOP]Remote Control [0]		None	Display DVD module self-diagnostic(Display error code)
	Main unit [STOP]Other Remote Control button			Remote control [5] [6] [7] [9] [>=] → [0].[>=10] → [ENTER] [PAUSE] [DISPLAY] etc.Special command for DVD module
Inner	Main unit [STOP]Main unit [>>]	Button check display	All buttons	Button check, blink all front display panel lights
VD/CD	Main unit [STOP]Main unit [>>]	T_-----	[PAUSE]	Display analog device (AD) input value [FF FF FF FF FF]Front display panel (from left) [AN0] [AN1] [AN2] [AN3] [AN4]

Cautions:

Self-diagnostics displayed via the [STOP] key display all recorded self-diagnostic codes.

7.2. Self-Diagnostic Mode Settings and Display

1. Power-source related

* Example display



* Self-Diagnostic Codes

No.	Error Display	Error Item	Detection Method
	F61	Power Amp output error or power supply circuit error	When DCDET is L during normal operation do not POWER OFF normally, immediately set PCNT to "GOODBYE" display and display F error. Do not start demonstrations while error F61 is being displayed. Record content of error occurrence and display content in error detection mode.

2. CD/DVD Changer Mechanism (CR20)

Step	Operating Procedure	Micro-controller operation, processing, etc.
	Switch the SELECTOR to CD/DVD, close tray without disk	
	Press the [FF] button while holding down the [STOP] button for two seconds or more. Self-diagnostic mode is entered when the [STOP] button is released.	Self-diagnostic mode will not be entered if there is a disk in the tray.
	[T] is displayed by the front display (FL) panel when entering self-diagnostic mode.	
	Press the [OPEN/CLOSE] button.	Operations below will be continued. While operations are in progress buttons relating to the micro-controller will be ignored. 1. Change disc 1 and open the tray. 2. Close the tray 1 second after opening. 3. Initialize the mechanism. 4. Insert disc 5 in the play position and quit.
	Confirm recorded error content by pressing the [STOP] button while stopped in the self-diagnostic mode and displaying the results of the error check.	Each time the [STOP] button is pressed error item codes are displayed in sequence on the front display panel Example of a DVD module content display: [DVD_H05_] Example of a normal self diagnostic code display: [T_ _ _H02_]
	Clear recorded error content by pressing the [STOP] button for 5 seconds or more while stopped in the self-diagnostic mode.	Recorded error content is cleared and the following is shown on the front display panel: [CLEAR] is displayed for one second followed by a return to [T_ _ _ _ _]

Step	Operating Procedure	Micro-controller operation, processing, etc.
	Cancel self-diagnostic mode by pressing the [POWER] button.	Power is turned off. At the next power on normal operation will resume.

* If an error occurs while checking the RAM during a micro-controller reset all recorded error detection content will be cleared while initializing the RAM.

* By skipping step 4 of the above procedure and moving directly to step 6 it is possible to just display the self-diagnostic codes.

* Example display



* Self-Diagnostic Codes

No.	Error Display	Error Item	Detection Method
1	H15	OPEN SW error	If there is a failsafe for a SW error that occurs during normal operation it will be recorded and displayed in self-diagnostic mode.
2	H16	CLOSE SW error	SW errors will be detected even in error detection mode.
3	H16	UP SW error	
4	H17	DOWN SW error	
5	H27	POSITION SW error	
7	F28	DISC mount error	
8	F29	DISC unmount error	

* While stopped in conditions 3 or higher above it is possible to start a CR20 continuous test. Described in detail separately.

3. Analog Device (AD) input value display

* Pressing the [PAUSE] button on the main unit after having entered self-diagnostic mode through SELECTOR [DVD/CD] will show the analog device conversion input value on the front display panel.

* Each time the button is pressed the value will be read again and the display refreshed.

* Front display Panel:



AD Input	Usage
AN 0	Key 1 input : Key input 1
AN 1	Key 2 input : Key input 2
AN 2	Key 3 input : Key input 3
AN 3	MK_IN1 : DECK input 1
AN 4	MK_IN2 : DECK input 2

- Exit the Analog Device input value display mode by cutting off the AC power source and next time could start the device.

4. DVD/CD module

Step	Operating Procedure	Micro-controller operation, processing, etc.
	Set the SELECTOR to CD/DVD	
	While pressing the [STOP] button on the main unit press [0] button on the remote control	See the "DVD/CD/ Changer Control" section of "Error Display" for a detailed explanation.

* Since error detection for the DVD/CD module occurs in the system component and is sent through the mechanism component codes are received and displayed at the operating console.

* Since self-diagnostic codes for the DVD/CD module duplicate prior audio codes the self-diagnostic codes are displayed prefixed by "DVD".



* Self-Diagnostic Codes

No.	Error Display	Error Explanation	Cause (IC number, etc.)
	F010	Specified value is larger than the specified parental value.	Disk → IC7001
	F020	No TT_SRPT (RLBN is 0)	Disk → IC7001
	F021	TT_SRP number is 0	Disk → IC7001
	F022	Specified value is larger than the TT_SRP number	Disk → IC7001
	F023	No matching SRP for VTSN or VTS_TTN	Disk → IC7001
	F024	Specified value is larger than TT_SRP.PTT_Ns	Disk → IC7001
	F030	TTU_SRP number is 0	Disk → IC7001
	F031	Specified value is larger than TTU_SRP number	Disk → IC7001
	F040	SRP1 number is 0	Disk → IC7001
0	F041	PGCI_SRP number is 0	Disk → IC7001
1	F042	Specified value is larger than the PGCI_SRP number	Disk → IC7001
2	F043	No matching PGCI_SRP for this Menu ID	Disk → IC7001
3	F050	TMAP_SRP number is 0	Disk → IC7001
4	F051	Specified value is larger than the TMAP_SRP number	Disk → IC7001
5	F052	Specified TMAP_SA is 0	Disk → IC7001
6	F053	MAP_EN number is 0	Disk → IC7001
7	F060	C_POSIT exists, but there is no PGMAP in the PGC	Disk → IC7001
8	F061	C_POSIT exists, but the PG number in the PGC is 0	Disk → IC7001
9	F062	Specified value is larger than the PG number in the PGC	Disk → IC7001
0	F063	C_POSIT exists, but there is no C_PBIT in the PGC	Disk → IC7001
1	F064	C_POSIT exists, but the PG number in the PGC is 0	Disk → IC7001
2	F065	Specified Cell number is 0	Disk → IC7001
3	F066	Specified value is larger than the Cell number in the PGC	Disk → IC7001
4	F067	Must be a block array	Disk → IC7001
5	F070	Is not NV_PCK data	Disk → IC7001
6	FOB0	No Cell number for current search	Disk → IC7001
7	F0E0	No user guide PGC control file for DFD, cannot resolve	

No.	Error Display	Error Explanation	Cause (IC number, etc.)
8	F0E1	DFD main micro-controller type not compatible, cannot download	
9	F0E2	DFD download start; PGC playback error	
0	F0E3	Waiting for DFD download completion; PGC playback error	
1	F0E4	AVDEC during DFD download	
2	F0E5	Firmware file read error during DFD download	
3	F0E6	Interpolation check error in read-in DFD firmware	
4	F0F0	No firmware file for DFD; download unnecessary	
5	F0F1	No firmware matching the DFD download parameters; download unnecessary	
6	F103	Illegal Highlight Position	Disk → IC7001
7	F4FF	No ACK when requesting forced initialization of panel component	Panel Component → IC6001
8	F500	DSC Error	IC2001
9	F501	DSC Not Ready Error	IC2001
0	F502	DSC Time Out Error	IC2001
1	F503	DSC Communication Failure	IC2001
2	F504	Error adjusting DSC data slice offset	IC2001
3	F505	DSC Attention Error	IC2001
4	F506	Can't determine media type (invalid media type)	IC2001
5	F600	Can't access administrative data due to demodulation error	IC7001
6	F601	Undefined sector ID requested	IC7001
7	F602	Can't access LEAD_IN data due to demodulation error	IC7001
8	F603	Can't access KEY_DET due to demodulation error	IC7001
9	F610	Can't control ODC	IC7001
0	F611	No CRCOK within the set time period (CD related)	IC7001
1	F612	No CRCOK within the set time period (DVD related)	IC7001
2	F620	Laser safeguard: high temperature condition	
3	F621	Laser safeguard: circuit failure condition	
4	F700	MBX Overflow	System component bug → IC6201

No.	Error Display	Error Explanation	Cause (IC number, etc.)
5	F701	Message Command Not Complete Error	System component bug → IC6201
6	F702	Message Command Changed	System component bug → IC6201
7	F880	Task number not relevant	System component bug → IC6201
8	F890	Attempted to send message while sending to an AV task (mailbox overflow, etc.)	System component bug → IC6201
9	F891	Couldn't send message to AV task (mailbox overflow, etc.)	System component bug → IC6201
0	F8A0	Message command is not relevant	System component bug → IC6201
1	F893	Flash ROM is interpolated	IC6302
2	F894	EEPROM is not normal	IC6303

No.	Error Display	Error Explanation	Cause (IC number,etc.)
1	U11	Focus servo error	
2	H01	Tray loading error	
3	H02	Spindle server error	
		DSC disc motor error	
		6626 CLVS FAILURE	
4	H03	Traverse motor error	
5	H04	Tracking server error	
6	H05	SEEK timeout error	

7.3. Additional Functions

7.3.1. Tray Lock Function

- There are two tray lock functions
- Power on through the SELECTOR /DVD/CD. While holding down the [CD STOP] button on the main unit press the [POWER] button on the main unit or the remote control. Lock Mode A will be entered, [_ _ _ LOCKED _] will be displayed for 3 seconds, and the current disc will begin playing.
- Lock Mode A will disable the button below while turning the power on or off. [OPEN/CLOSE]
- When locked in Lock Mode A pressing the [POWER] button on the main unit or the remote control while holding down the [CD STOP] button on the main unit will display [_ _ UNLOCKED _] and unlock the unit.

- Power on through the SELECTOR DVD/CD. While holding down the [CD PLAY] button on the main unit press the [POWER] button on the main unit or the remote control. Lock Mode B will be entered, [_ _ LOCKED _ _] will be displayed for 3 seconds, and the current disc will begin playing.
- In Lock Mode B the button below, mainly selector and disc operation related items, will be disabled.
 Main Unit: [DISC 1] ~ [DISC 5] [OPEN/CLOSE] [DISPLAY/DEMO] [CLOCK/TIMER] [T.PLAY/REC] [SELECTOR] [STOP] [TUNER/BAND] [TAPE < >] [I<</<<] [>>/>>I] [PAUSE] [TAPE EJECT] [REV MODE] [REC/STOP]
 Remote Control: [SLEEP] [AUTO OFF] [DIMMER] [MIX 2ch] [MUTING] [0] ~ [9] [>=10] [DISC]
 [RETURN] [DISPLAY] [TEST] [CH SELECT] [TUNER/BAND] [TAPE < >] [SELECTOR] [REPEAT]
 [MARKER] [STOP] [PAUSE] [I<<] [>>I] [<<] [>>]
 [KARAOKE ON/OFF] [KARAOKE DISP] [KARAOKE MODE] [ONE TOUCH] [ECHO]
 [KEYCON b] [KEYCON #] [MIC -] [MIC +] [SETUP]
 While playing it is not necessary to re-disable buttons disabled under Lock Mode B.
 Also, button related to sound quality are not disabled. The buttons below are not disabled.
 Main Unit: [POWER] [CD MANAGER] [AMAZING] [DVD/CD] [CINEMA] [DPL] [SSS]
 Remote Control: [POWER] [SET UP] [PLAY MODE] [CLEAR] [EQ] [3D AI] [SUPER W] [VOL -] [VOL +]
 [DVD/CD >] [MENU] [TOP MENU] [<] [>] [^] [v] [ENTER] [SUB TITLE] [AUDIO] [ANGLE]
- When locked in Lock Mode B pressing the [POWER] button on the main unit or the remote control while holding down the [CD PLAY] button on the main unit will unlock the unit after displaying [_ _ UNLOCKED _ _] for 3 seconds.
- Tray lock is canceled when AC power is cut.
- Tray lock A and B functions are exclusive operations. The first one enabled will have priority.
- When a disabled button is pressed while in lock mode [_ _ LOCKED _ _] will be displayed for 3 seconds on the front display panel.
- Lock mode will be cancelled when a loading error occurs with the CR20.
 (If the [OPEN/CLOSE] button were disabled when the tray is opened by a TAKE OUT DISC error recovery would be impossible)

7.3.2. Special Commands for the DVD Module

- When the SELECTOR is set to DVD/CD the commands for the operations below will be sent to the mechanism component micro-controller.
- The mechanism component micro-controller relays these commands without alteration to the DVD module.
- The DVD module sends data resulting from commands to the mechanism component, where they are then relayed to the operating console.
- Data received from the DVD module by the operating console is displayed by the right 10 digits.
- Command Table

Special Operation	Command	Operation/Display	Release/Remarks
After Display servo test mode)	B5	Main Unit [STOP] + Remote Control [5] xxx: jitter measurement (DEC) [xxx_yyy_zz] yyy: read error counter (DEC) zz: focus drive measurement (HEX) Test string from DVD MODULE :[J_xxx_yyy_zz]	Send STOP command from operating console
Region display location display)	B6	Main Unit [STOP] + Remote Control [6] w: region number [_w_xy_zzz] x: N noPAL P PAL y: N NTSC 6 PAL60 zzz: panel component jumper data Text string from DVD MODULE: [_w_xy_zzz]	5 seconds after activation 1 text string from the DVD MODULE disappears and display is automatically turned off.
Version display	B7	Main Unit [STOP] = Remote Control [7] s: panel component mode type [srrrxyzzz] rrr: panel component release number [_ _xyzzz] x: generation of system component (45) y: system component model type zzz: system component release number Text string from DVD MODULE: [srrr_ _xyzzz] srrr will be blank with mini-components	5 seconds after activation 1 text string from the DVD MODULE disappears and display is automatically turned off.

Special Operation	Command	Operation/Display	Release/Remarks
Error Code display	BA + request record number	Main Unit [STOP] + Remote Control [0] [__DVD_Fxxx] xxx: error number [__DVD_Uxxx] [__DVD_Hxxx]	5 seconds after activation 1 text string from the DVD MODULE dissappears and display is automatically turned off.
User Current initial measurement (saved laser power value)	C2	Main Unit [STOP] + Remote Control [PAUSE] [DO_034_028] 034: DVD current measurement (mA) (DEC) 028: CD current measurement (mA) (DEC) Text string from DVD MODULE: [LDO_034_028]	
DVD Laser current measurement	C3	Main Unit [STOP] + Remote Control [DISPLAY] 034: saved in EEPROM [DD_034_032] initial current mearement (mA) (DEC) 032: present current measurement (mA) (DEC) Text string from DVD MODULE: [LDD_034_032]	Laser lighting remains on until POWER OFF of the tray opens.
DSC internal RAM display A	C4	Main Unit [STOP] + Remote Control [1] [A_0FA_6901] 0FA: address (HEX) 6901: RAM value of display address (HEX)	STOP command is sent from the operating console to the DVD MODULE
DSC internal RAM display B	C5	Main Unit [STOP] + Remote Control [2] [A_0FA_6901] 0FA: address (HEX) 6901: RAM value of display address (HEX)	STOP command is sent from the operating console to the DVD MODULE
Link measurement (invalid pick detection)	C6	Main Unit [STOP] + Remote Control [9] [FK_109_101] 109: maximum value of calculated value (DEC) 101 : ratio of maximum value to minimum value [FK_ER_9101] ER: display error occurrence 9101: ADSC command error code	STOP command is sent from the operating console to the DVD MODULE
User initialization (for users)	BC+ Model Table + 0 x 00	Main Unit [STOP] + Remote Control [>=10] [INITIALIZED] display on the operating console for 2 seconds. When display clears the user initialization commands is output the system component. Returns user settings to factory values.	When the [INITIALIZED] on front panel dissappears the operation is complete. GUI is INITIALIZE.

Special Operation	Command	Operation/Display	Release/Remarks
Full Reset (for design service)	BC+ Model Table + 0 x 3C	While [INITIALIZED] is being displayed from the user initialization operation press [STOP] on the main unit and [ENTER] on the remote control. [_DVD_RESET] is displayed on the operating console and the all reset command is output instead of the user initialization command. Returns user settings to factory values. Panel component jumpers are referenced, and the appropriate model number's initialization values are written to the EEPROM and global region. Laser times and spindle times are not initialized.	If NO DISC or ---READ can't be confirmed after DVD RESET is displayed on the front display panel the operation is completed. No GUI. All items temporarily disappear.
Full set (for industrial production)	F1	Receipt of remote control code [B0 00 F1]. Also, Main Unit [STOP] + Remote Control [1DDF] [_ALL_SET] (display text string from system component). Returns user settings to factory values. Panel component jumpers are referenced, and the appropriate model number's initialization values are written to the EEPROM and the global region. Laser times and spindle times are also initialized.	If NO DISC or ---READ can't be confirmed after ALL SET is displayed on the front display panel the operation is completed. ALL SET is displayed on the front display panel the operation is completed. GUI is ALL SET.
Device Name Display	B1+ 0 x 13	Main Unit [STOP] + Remote Control [4] [FEP_??????] [SRV_??????] [ODC_??????] [Av_??????] [SYS_??????]	Display cycles every 3 seconds. Display automatically turns off after the last device name is displayed.
User Time Set	B1+ 0 x 14	Main Unit [STOP] + Remote Control [^] 1234 : DVD laser use time [_1234_5678] 5678: CD laser use time 10 hour units displayed in 4 digits Text string from DVD MODULE: [T1_1234_5678]	5 seconds after activation 1 text string from the DVD MODULE disappears and display is automatically turned off.

Special Operation	Command	Operation/Display	Release/Remarks
Reset Laser me Use	B2 + 0 x 14	While use time is being displayed press Main Unit [STOP] + Remote Control [V] [_0000_0000] DVD and CD are both reset at the same time.	5 seconds after activation 1 text string from the DVD MODULE disappear and display is automatically turned off.
Spindle Use me	B1 + 0 x 15	Main Unit [STOP] + Remote Control [>] [_T2_1234] 1234: 10 hour units displayed in 4 digits Text string from DVD MODULE: [T2_1234_]	5 seconds after activation 1 text string from the DVD MODULE disappear and display is automatically turned off.
Reset Spindle se Time	B2 + 0 x 15	While use time is being displayed press Main Unit [STOP] + Remote Control [<] [_T2_0000]	5 seconds after activation 1 text string from the DVD MODULE disappear and display is automatically turned off.
D Laser urrent easurement	B1 + 0 x 92	Main Unit [STOP] + Remote Control [3] 028: initial current value [DC_028_026] stored in EEPROM (mA) 026: Present current value (mA) Text string from DVD MODULE: [LDG_028_026]	Laser lighting continues ur POWER OFF or the tray op
Region and rmware ersion splay	BF + 0 x 92	Main Unit [STOP] + Remote Control [8] r: region number [_r_xyzzz] x: generation of system component y: system component model type zzz: system component model type Text string from DVD MODULE: [_r_xyzzz]	5 seconds after activation 1 text string from the DVD MODULE disappear and display is automatically turned off.

7.3.3. Jitter Offset Correction

- The jitter offset correction function below is necessary for D5, but is not necessary for D8.
- While displaying K objects, certain remote control operations correct the offset of the DVD MODULE jitter value.
- When the DVD module firmware rewriting connector is inserted K objects will

be displayed [KC 00 0000].

- Key codes of input from the remote control's ten key while displaying K objects are relayed to the system component by the operating console.
- Inputting [2] [0] from the remote control returns a 14 hex value from the system component. The value is converted from hex → dec and displayed as [KC 20 0000].
- Continuously pressing the [PLAY] button returns the offset result as a text string from the system component, which is displayed as [KC 20 0002].
- The DVD Module has functions that support buttons other than [2] [0] [PLAY], so when K objects are being displayed key codes are as below.
[0] [1] [2] [3] [4] [5] [6] [7] [8] [9] [≥10] [PLAY]

7.4. Pseudo ROM Correction

7.4.1. Outline

- Since the Mitsubishi M3819 series micro-controller is capable of making programs operate in RAM the pseudo ROM corrections below are possible.
- Program the process calling the modifying sub-routine in advance.
- Program the process to read-out the program from the EEPROM into RAM in advance.
- Processes previous to the read-out cannot be modified.
- In pseudo ROM corrections defective processes cannot be completely bypassed.


7.4.2. EERPOM Flag Indicator Interpretation

- Regardless of the EEPROM flag indicator CS/CLK/DATA is output and the DATA read-in process occurs.
Accordingly, even if there is no EEPROM hardware processing at the terminal is necessary.
- If the data read-out below is valid then an EEPROM will be determined to be present, and the modifying program will be read-out.
- When the MASK ROM file name (8 character ASCII code, 8 bytes) and the EEPROM file name match.


- When the modifying points flag indicator data (8 points, 1 byte) written at two places on the EEPROM match.

7.4.3. CHECK SUM Display


- In order to confirm that the EEPROM is loaded, the operations below display the CHECK SUMs for the Operating Console, mechanism component, and DSP micro-controller EEPROMs.
- Receiving [1DDF or 1CDF] when in Process Check Mode with Process Check Mode-in [1DDF or 1 CDF] will display the operating console's version and EEPROM CHECK SUM.

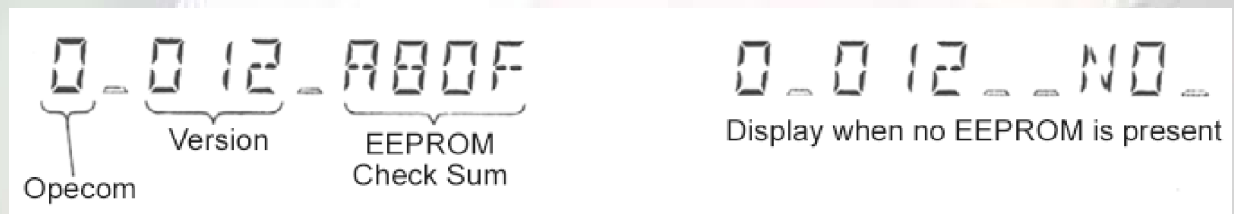

- If [1DDF or 1CDF] are received while the operating console's version and EEPROM CHECK SUM are being displayed the mechanism component's version and EEPROM CHECK SUM are displayed.

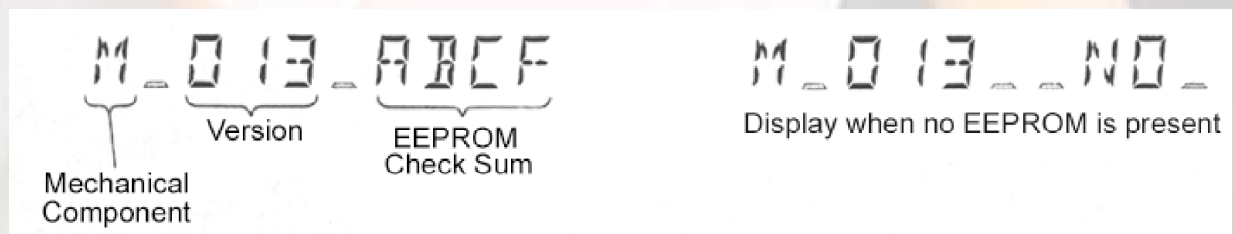

- If [1DDF or 1CDF] are received while the mechanism component's version and EEPROM CHECK SUM are being displayed the DSP micro-controller's version and EEPROM CHECK SUM are displayed.

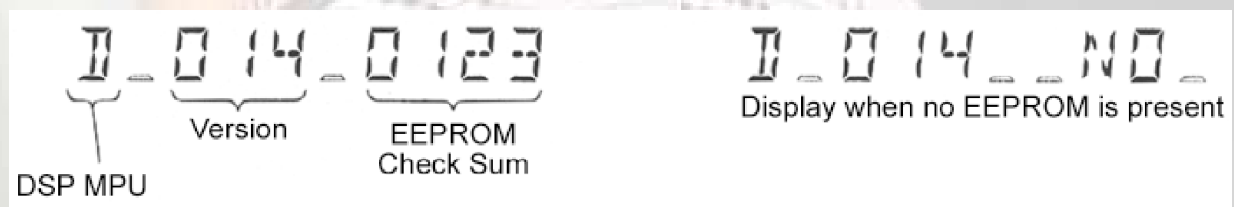

- If a valid remote control code is received while the CHECK SUM is being displayed the CHECK SUM display will be erased to confirm with that operation and display.

- When the result of referencing the EEPROM is a differing file name [NO] will be displayed, just as when no EEPROM is present.

7.4.4. Insertion Points for ROM Correction Processing


- Processing read-outs from EEPROM
- RCaccE2PrSUB: Insert after port or control register setting (AC check).
It is also necessary for the EEPROM's power supply to be in power-off (AC positive).
- Processing Modifying Program Calls
- RCtimerinsSUB: Insert at the end of the timer interrupt.
- RCSchedulerSUB: Insert in the OS scheduler.
- RCinitialSUB: Insert after initialization, immediately before jumping to the main process.
- RCstandbySUB: Insert immediately before the power failure process STP command.
- RCimagetskSUB: Insert immediately before branching to individual image processing.
- RCdisptskSUB: Insert immediately before processing the data settings for the display RAM.
- Rcreserve0SUB: Insert in the transmission process to the CD mechanism component.
- Rcreserve1SUB: Insert in the transmission process to the DSP control micro-controller.
- Data inside the EPROM (Required RAM capacity)
- EEPROM flag indicator determination data: 10 bytes
- Modifying Program's starting address: 16 bytes
- Modifying Program: remaining bytes

8. Disassembly and Main Component Replacement Procedures


Gear for servicing (jig) information

1. This unit has a gear which is used for checking items (Open/close of disc tray, up/down operation of traverse unit by manually) when servicing.
2. For preparation of gear (for servicing), Perform the procedures as follows.
3. In case of re-servicing the same set, the "gear for servicing" may has been taken off because it has been used.
The "gear for servicing" must be stored.

1. Remove the gear provided with mechanism cover as shown below.

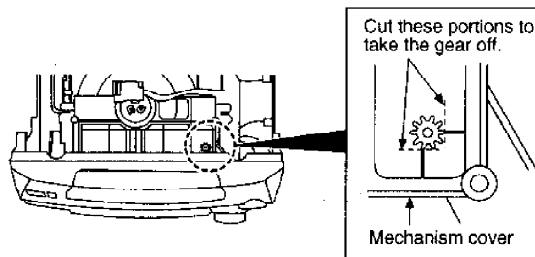

2. Insert the hexagonal screwdriver (2mm) into the gear, and then project the tip of screwdriver for 1~2mm in length.

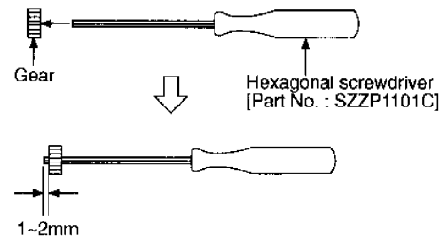

“ATTENTION SERVICER”

Some chassis components may have sharp edges.


Be careful when disassembling and servicing.

1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
2. For reassembly after operation checks or replacement, reverse the respective procedures.
Special reassembly procedures are described only when required.
3. Select items from the following index when checks or replacement are required.

Warning:

This product uses a laser diode. Refer to caution statement Precaution of Laser Diode.

8.1. Checking for the Main and DVD F/E Module (1/2) and (2/2) P.C.B.


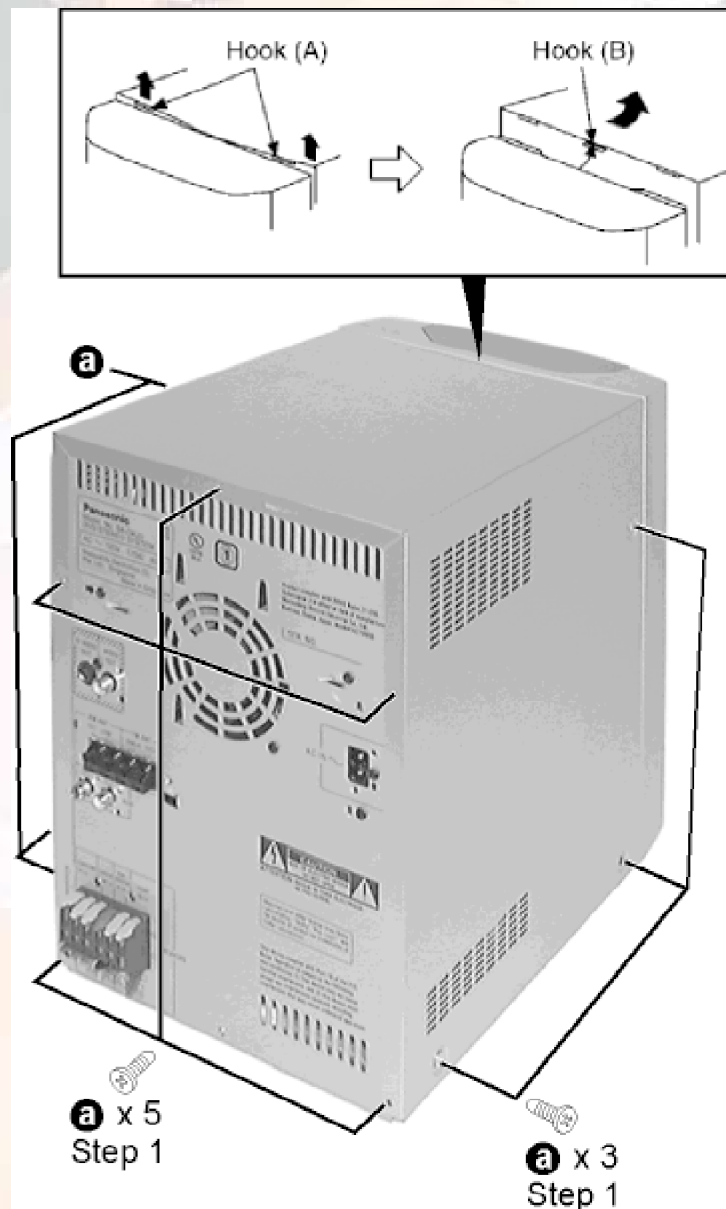


Step 1 Remove 3 screws each both side and 5 screws at rear panel.


Step 2 Lift up the both sides cabinet ass'y to release the hook (A). Then pull the cabinet ass'y toward the rear and release the hook (B) to remove the cabinet ass'y.

NOTE: When installing the cabinet ass'y, take care not to damage the front cabinet ass'y from hook (B).


- Check the Main P.C.B. and DVD F/E Module (1/2) P.C.B..

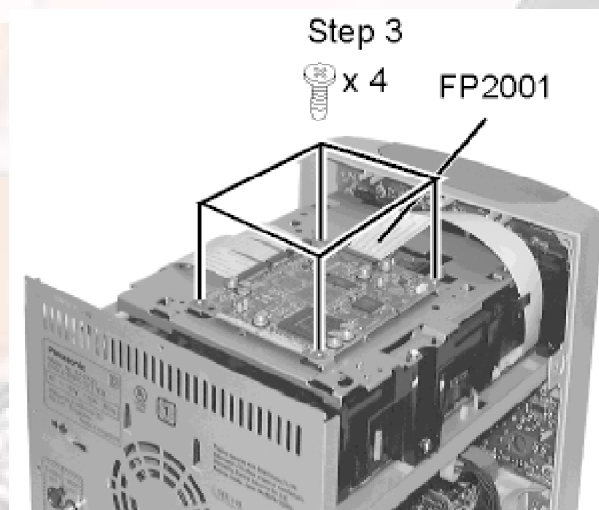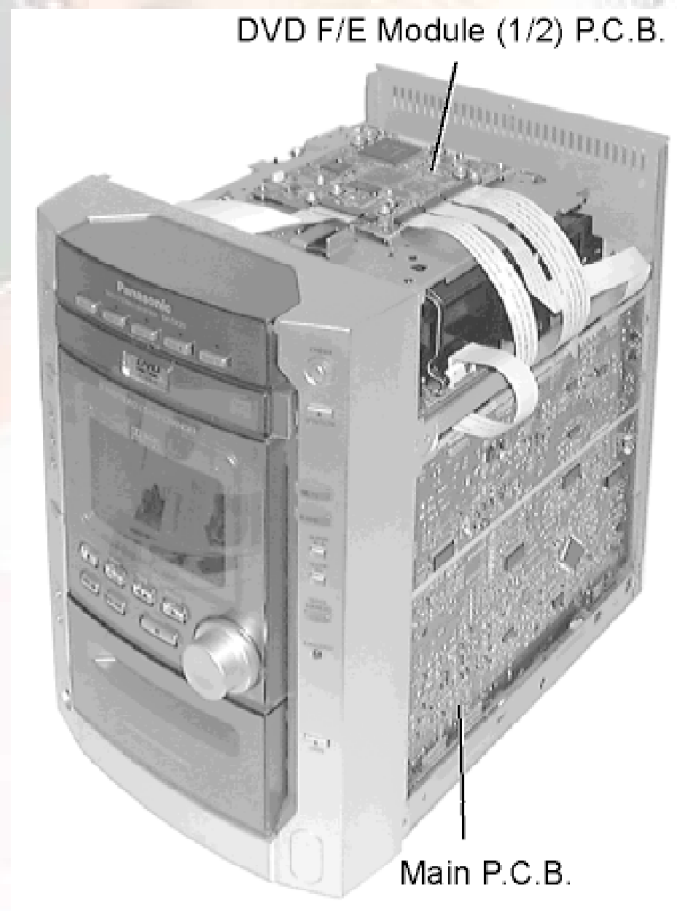

- Step 3 Remove 4 screws.**
Step 4 Remove 4 connectors.
Step 5 Pull out 4 FFCs.

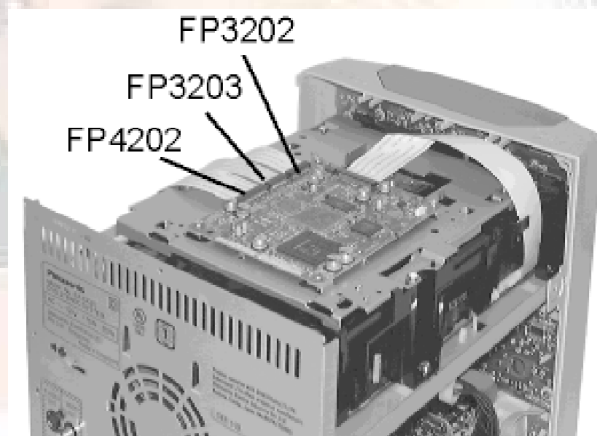

- Checking the DVD F/E Module (2/2) P.C.B. as shown below.
Step 7 Re-connect the FFCs to the connector.

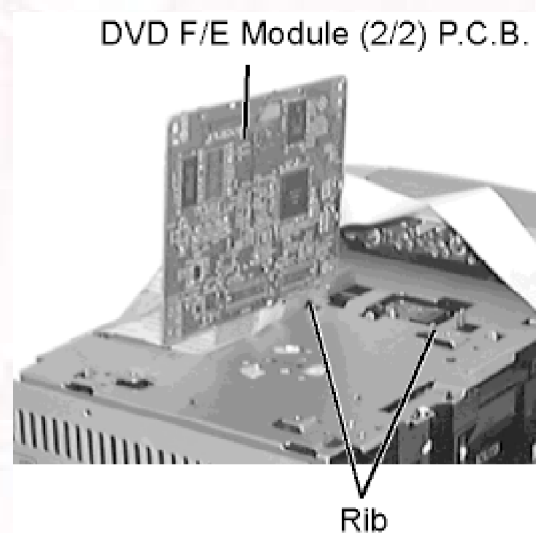


- Step 8 Lift up DVD F/E Module (2/2) P.C.B. as shown.

8.2. Disassembly for DVD/CD changer unit

8.2.1. Disassembly for the disc tray ornament


- Follow the (Step 1) - (Step 2) of item 9.1
When opening the disc tray automatically

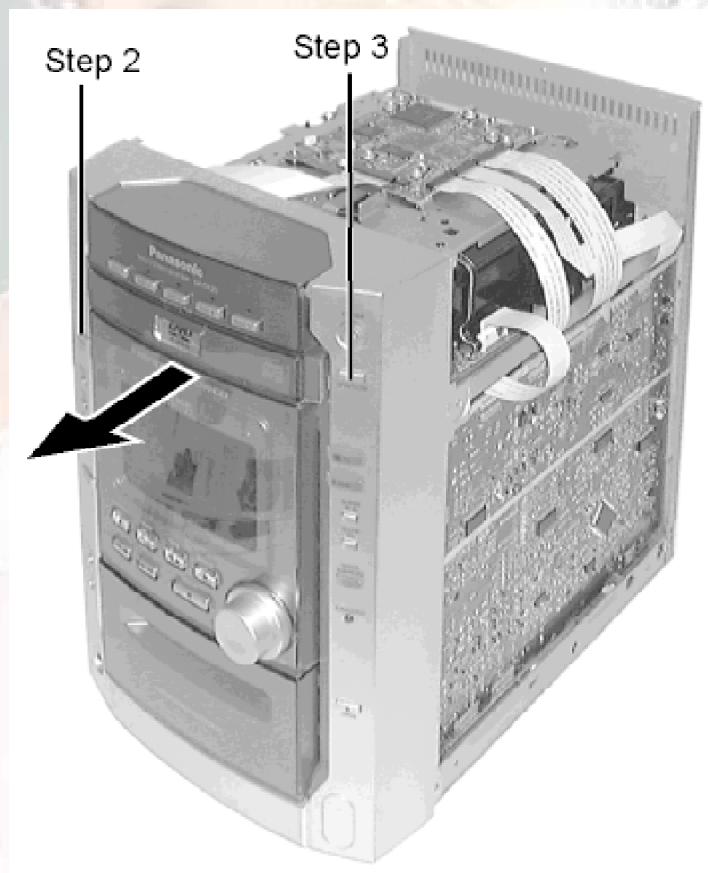

Step 1 Connect the power.

Step 2 Push the button and the power turns ON.

Step 3 Push the open/close button, so the disc tray will be open automatically. (If the other buttons would be push, disc tray would be open.)

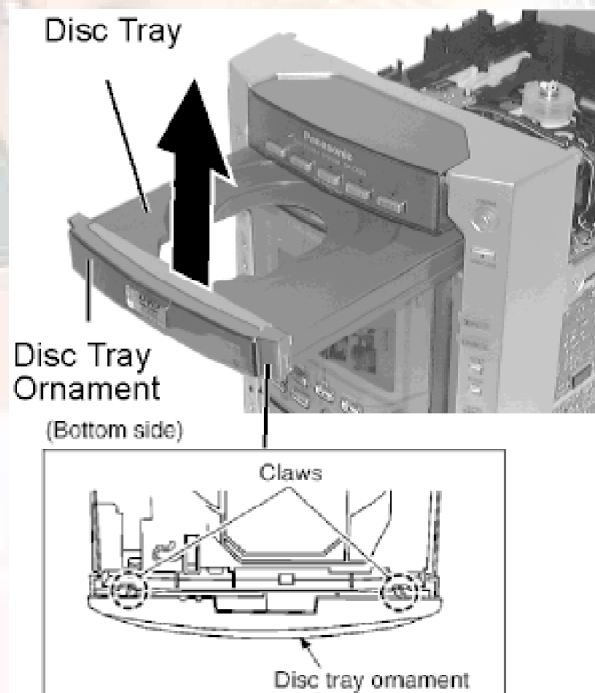

Step 4 Disconnect the power.

Step 5 Release the 2 claws, and then remove the disc tray ornament.

Step 6 Connect the power again.


Step 7 Push the power button and the power turns ON.




Step 8 Push the open/close button¹, so the disc tray will be close.

When opening the disc tray manually


Step 1 Upset the unit.

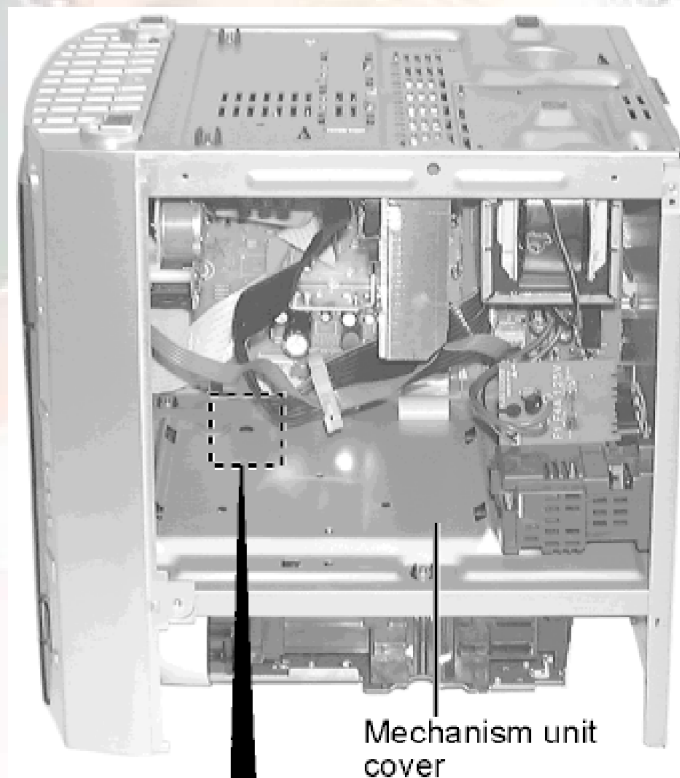

Mechanism unit cover

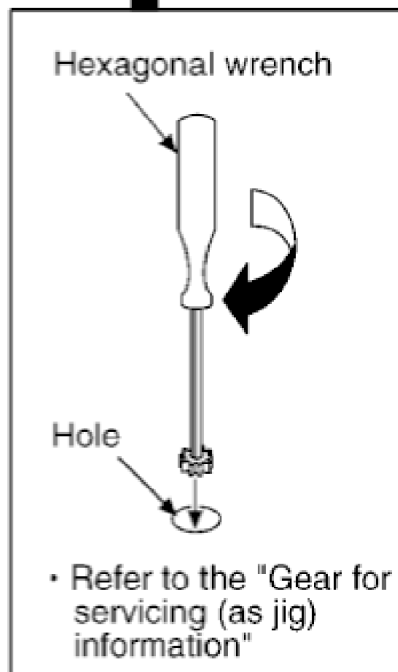

Step 2 Insert the gear for servicing into the bottom hole of mechanism unit cover, and then rotate the hexagonal wrench clockwise so the disc tray will be open.

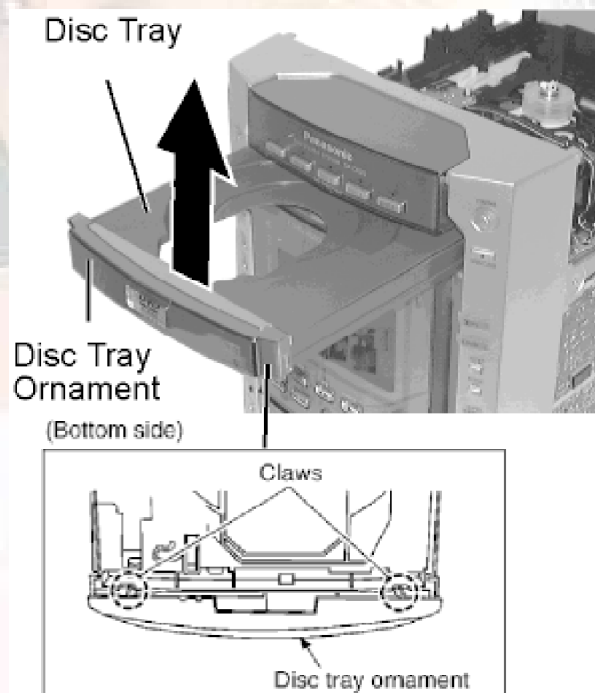

Step 3 Release 2 claws, and then remove the disc tray ornament.




Step 4 Push the disc tray.

8.2.2. Disassembly for the DVD/CD changer unit.


- Follow the (Step 1) - (Step 2) of item 9.1
 - Follow the disassembly instruction for the disc tray ornament .
- Step 1 Remove the wire from the holder.**



Step 2 Remove 2 screws at rear panel.

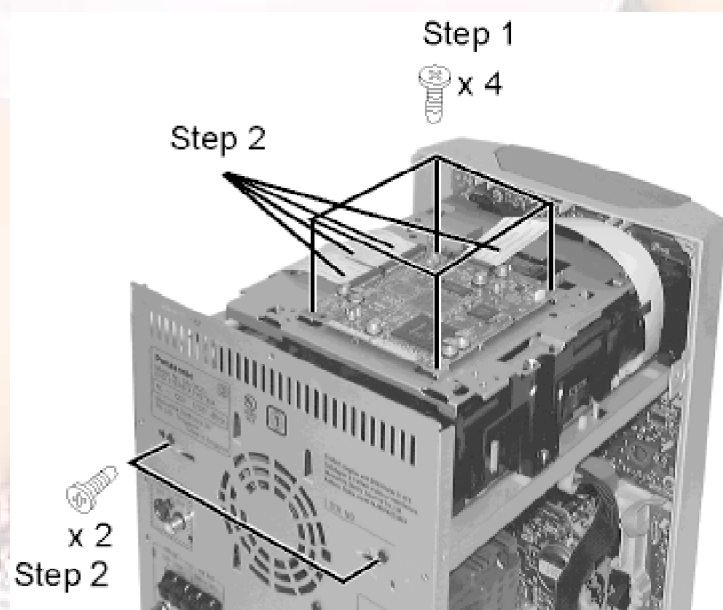

Step 3 Release the claws of both ends, and then lift up the DVD changer unit.

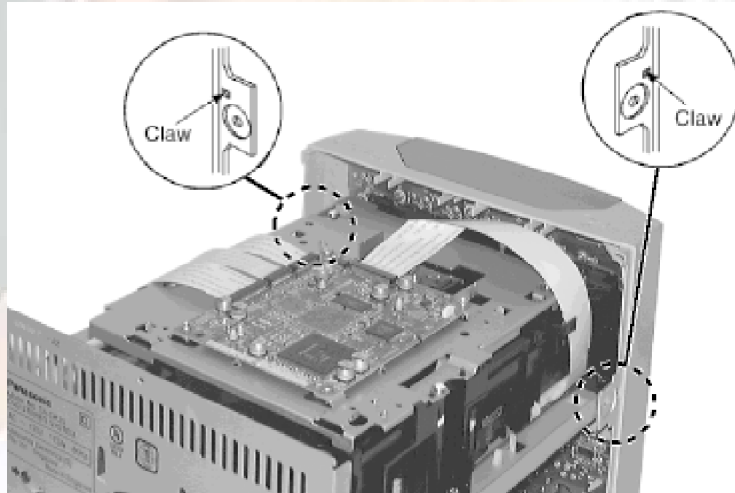


Step 4 Remove the DVD/CD changer and place the DVD/CD changer unit on the unit.




The preparation of checking procedures in operational condition is completed.

8.3. Disassembly Procedure for each major P.C.B. Checking


- Follow the (Step 1) - (Step 2) of item 9.1
- Follow the Steps in 9.2 to remove disc tray ornament.

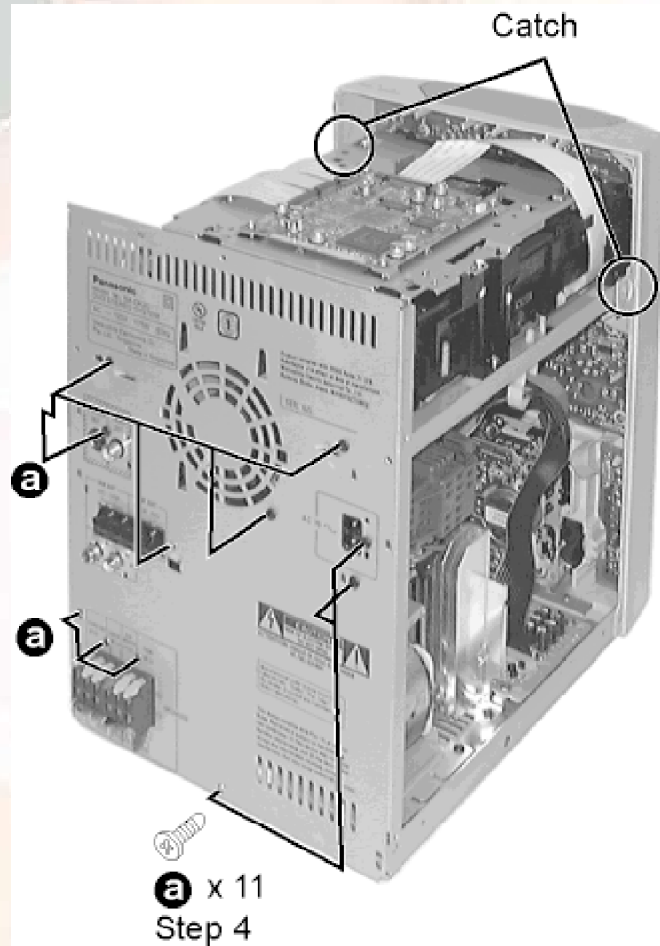

Step 1 Remove 11 screws and catches both side.

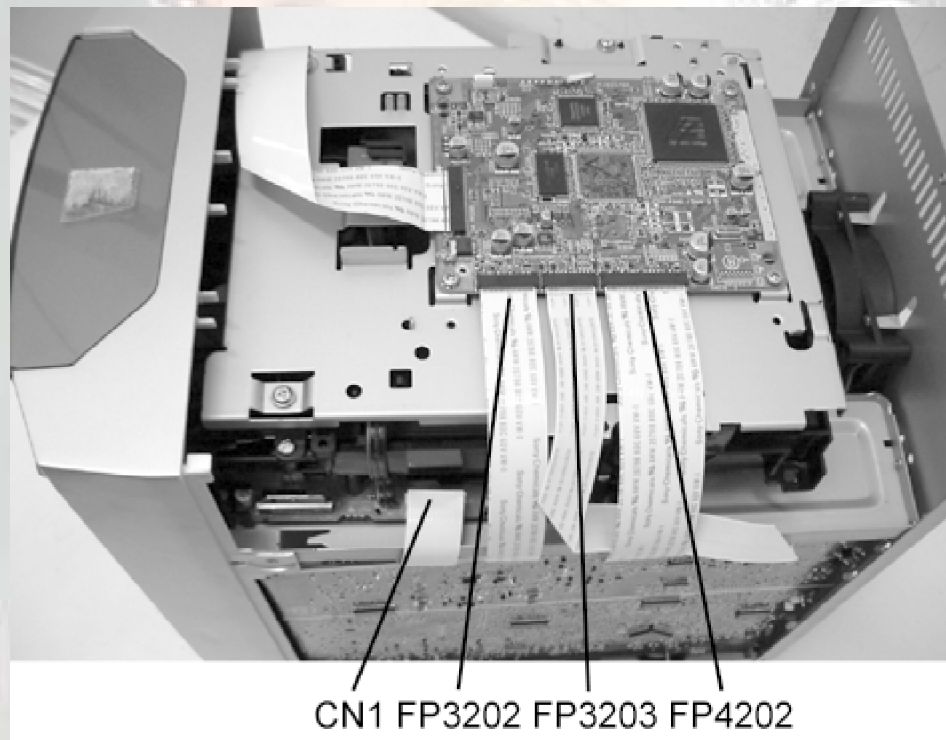



Step 2 Remove the FFC at CN1, FP3202, FP3203, and FP4202.

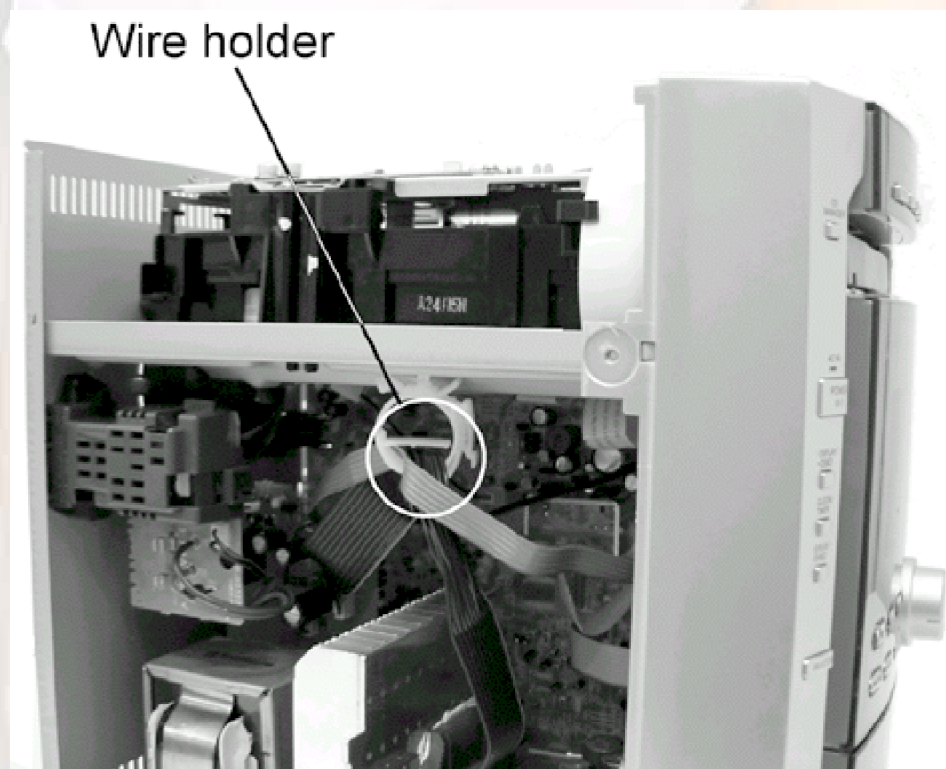


Step 3 Release the wire from holder, remove the CD changer base together with the CD changer.

- **Checking for Panel P.C.B., Main P.C.B., AC Transformer P.C.B. and Deck**

P.C.B..

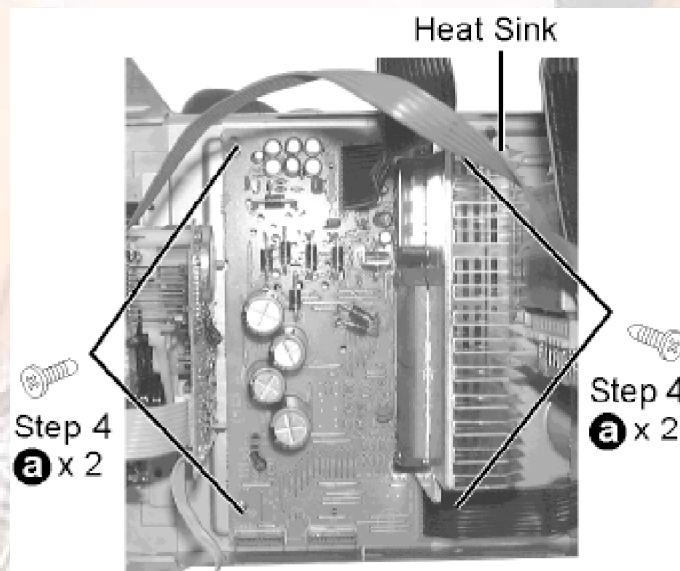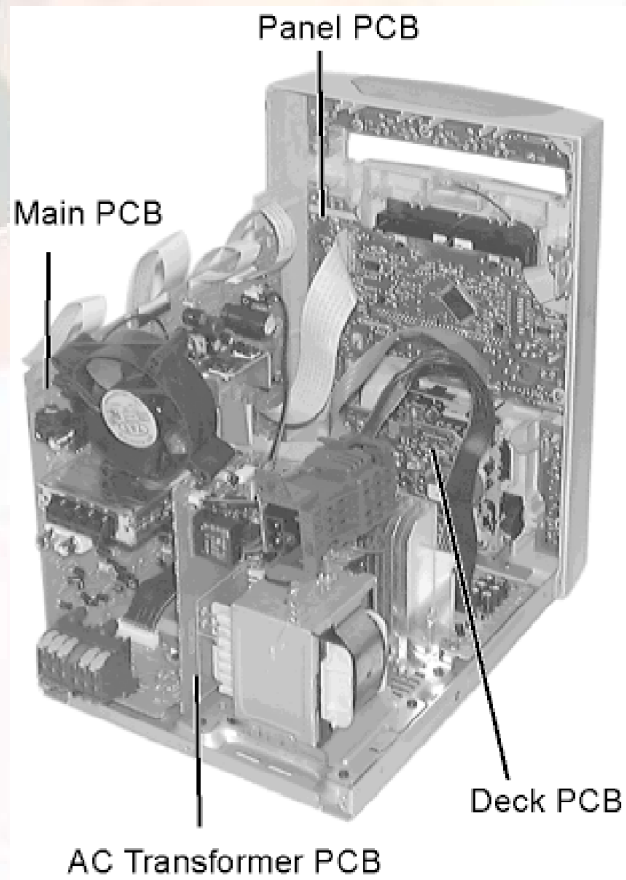


- Checking for Power P.C.B.

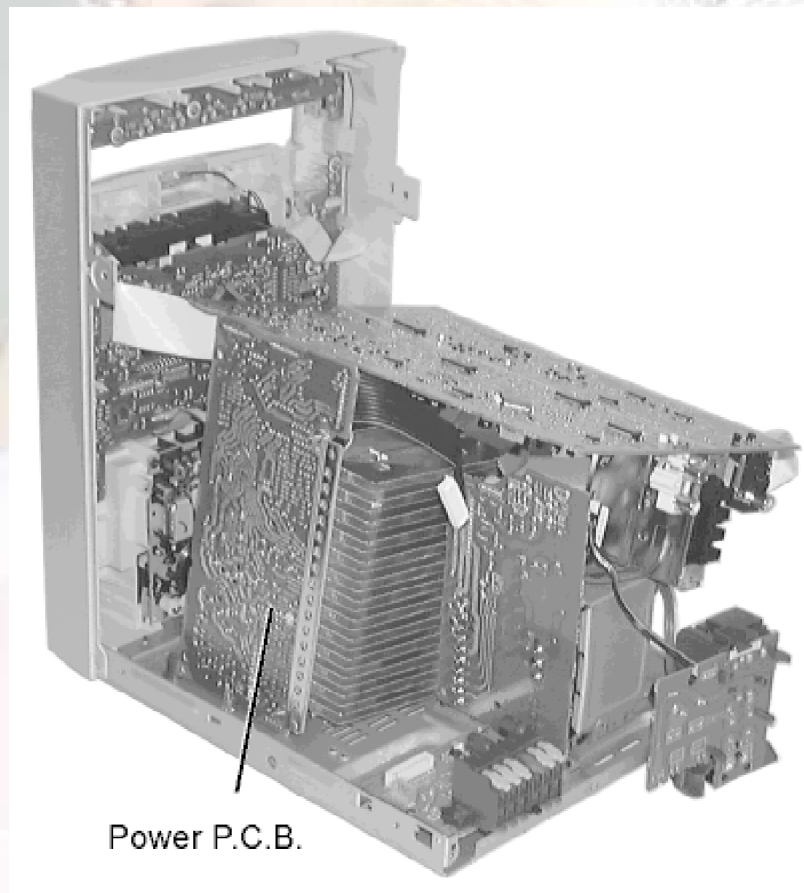


- **Replacement of the Power Amplifier IC and Regulator Transistor.**
Step 1 Follow the (Step 1) - (Step 2) of item 9.1.
Step 2 Follow the Steps in 9.2 to remove disc tray ornament and DVD/CD changer unit.
Step 3 Remove 2 screws at the bottom of front cabinet.




Step 4 Remove the wires at CN501, CN603A, CN100 and detach the front cabinet.

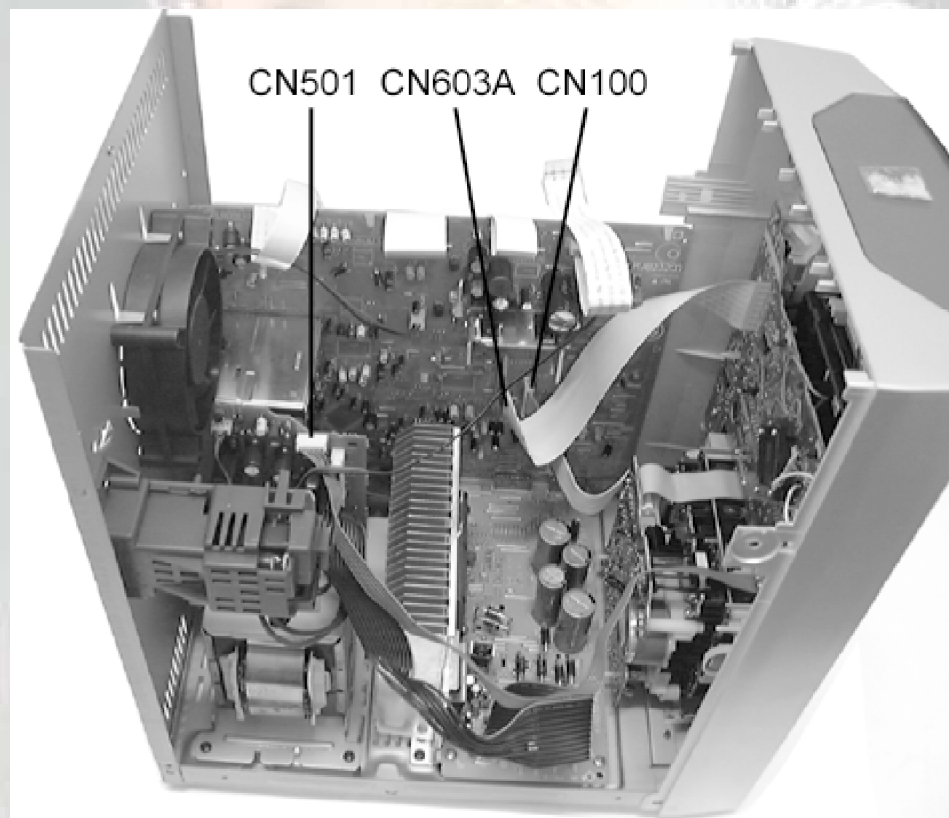


Step 5 Remove 3 screws fixed to the Power Amplifier IC and Transistor Holders.

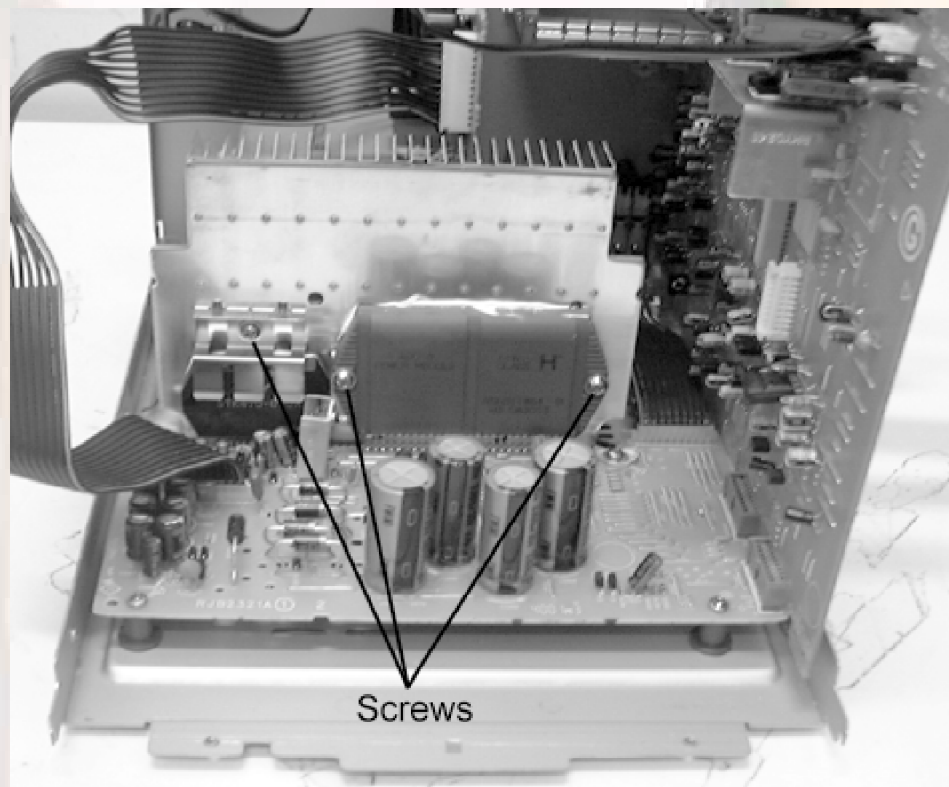


Step 6 Break the joint with a metal cutter as shown below.

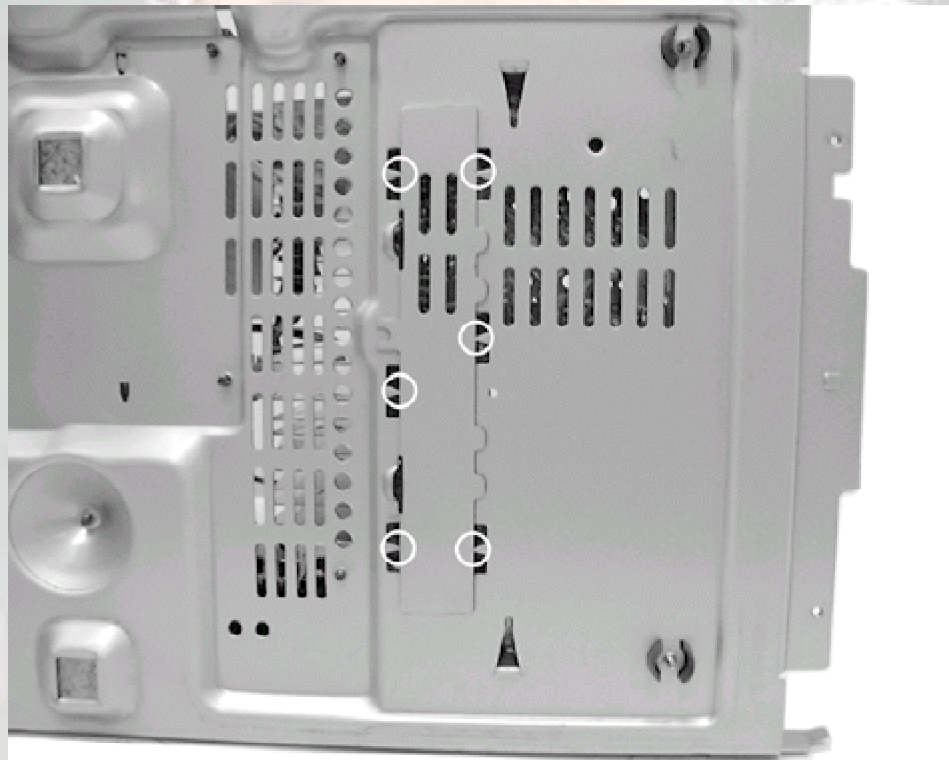

Step 7 Unsolder the terminals of Power Amp IC, transistor and replace the component.

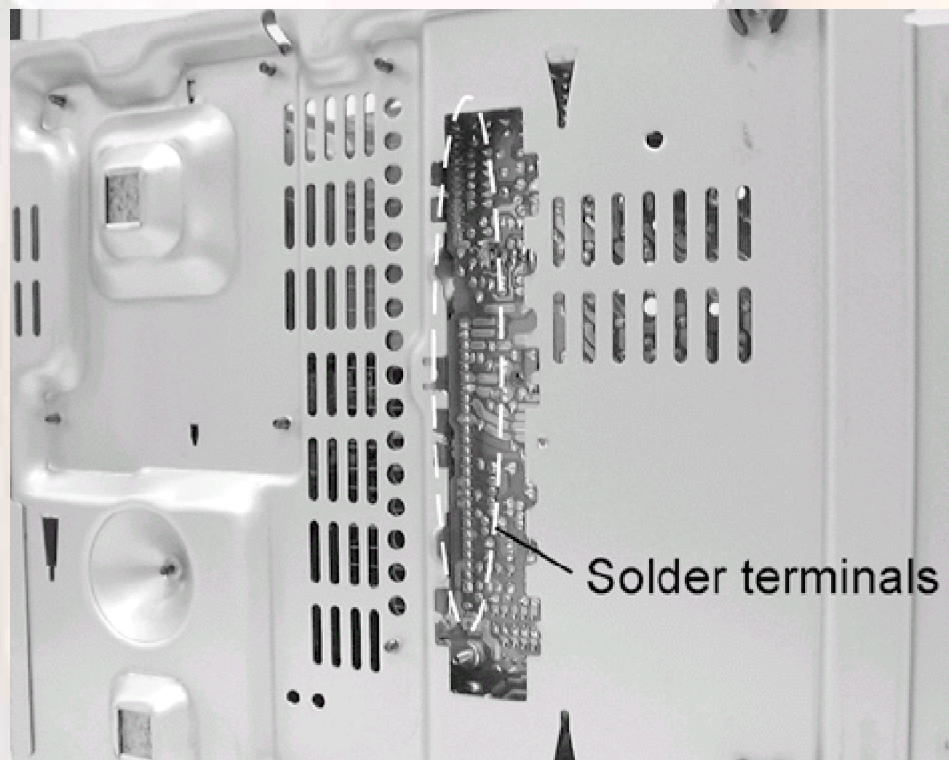

Step 8 Fix back the bottom chassis with a screw as shown.

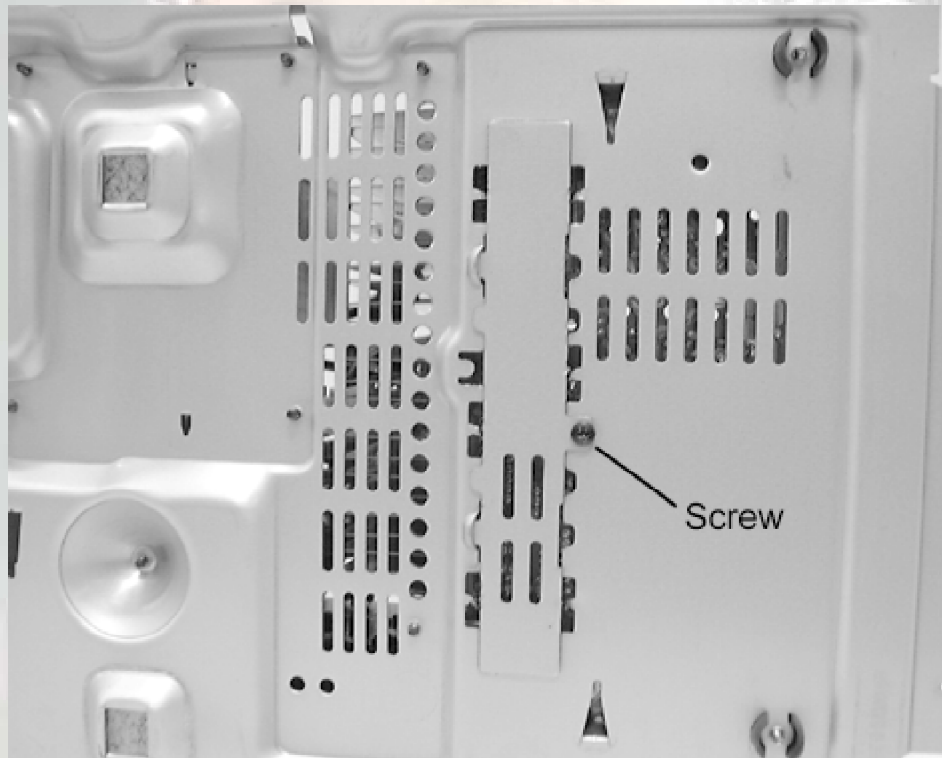



8.4. Disassembling the Middle Chassis

Step 1 Remove the holder pins.

Step 2 Remove the tab.

Step 3 It lifts while pulling it in the direction of the arrow.

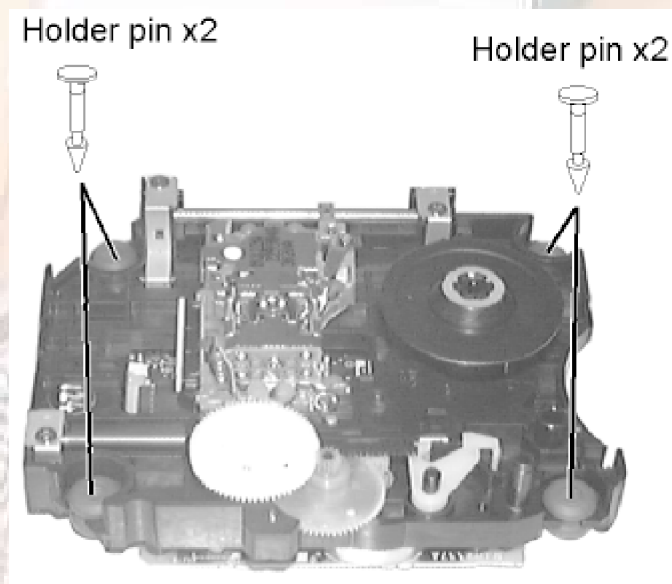

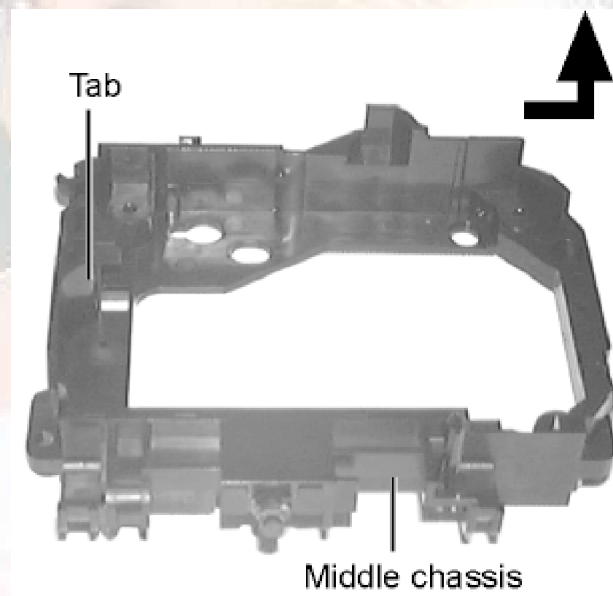


8.5. Terminal P.C.B.

Step 1 Unscrew the screw.

Step 2 Remove the solders.



Step 3 Remove the connector.

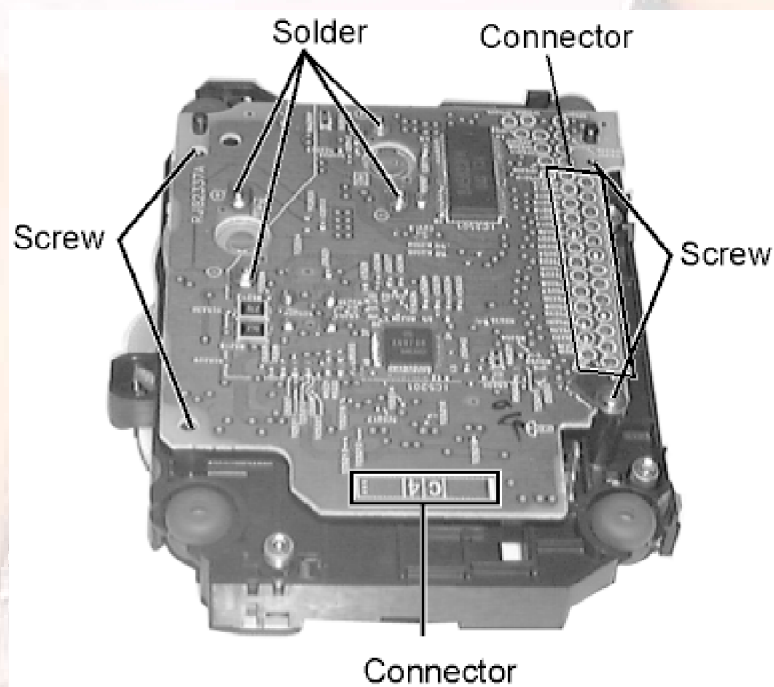

8.6. Traverse Gear

Step 1 Disengage the tabs from the traverse gear.

Step 2 Remove the traverse gear.

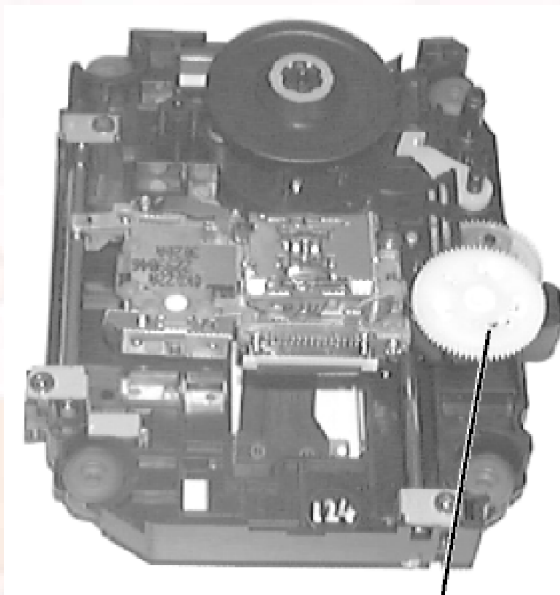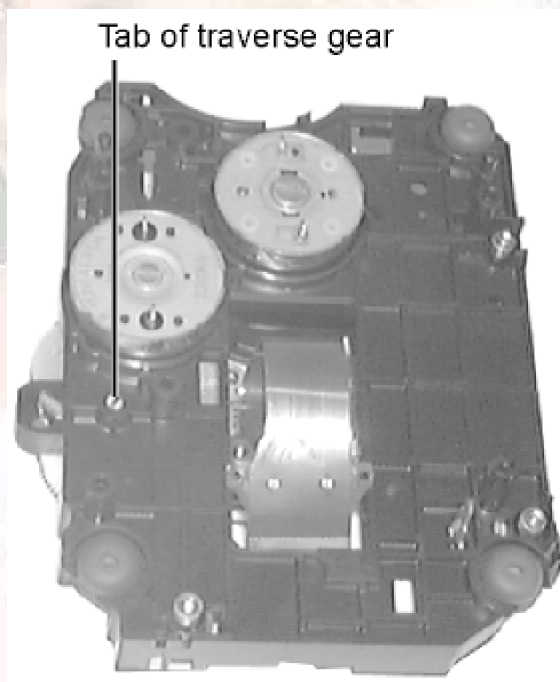


Traverse gear

8.7. Optical Pickup Unit

Step 1 Unscrew the screws.

Step 2 Remove the spring holders and the springs.

Step 3 Pull out the drive shaft and guide shaft.

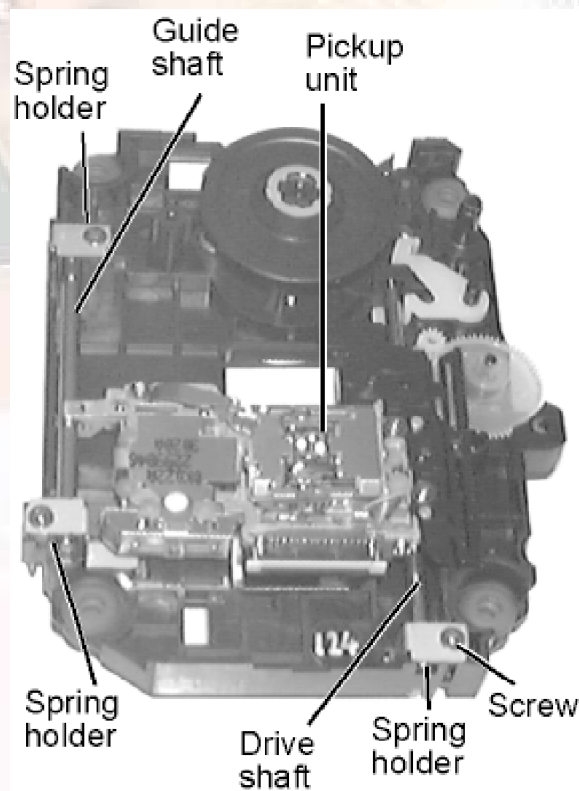


8.7.1. Precautions in optical pickup replacement

The optical pickup can be damaged by static electricity from your body. Be sure to take static electricity countermeasures when working around the optical pickup. (Refer to the related page in this Manual about the countermeasures.)

1. Do not touch laser diode, actuator and their peripheries.
2. Do not use tester to check laser diode. (Laser diode can be damaged easily.)
3. The use of soldering iron with anti-static feature is recommended when providing short-circuit to laser diode or when removing it.
4. Solder the land on flexible cable of optical pickup unit.


Caution

- When using the soldering iron without anti-static feature, short circuit the flexible cable terminal with a clip before short-circuiting the land.
- After intended repair is finished, remove the solder for short-circuit of laser diode in a correct way following the procedure described in this Manual.

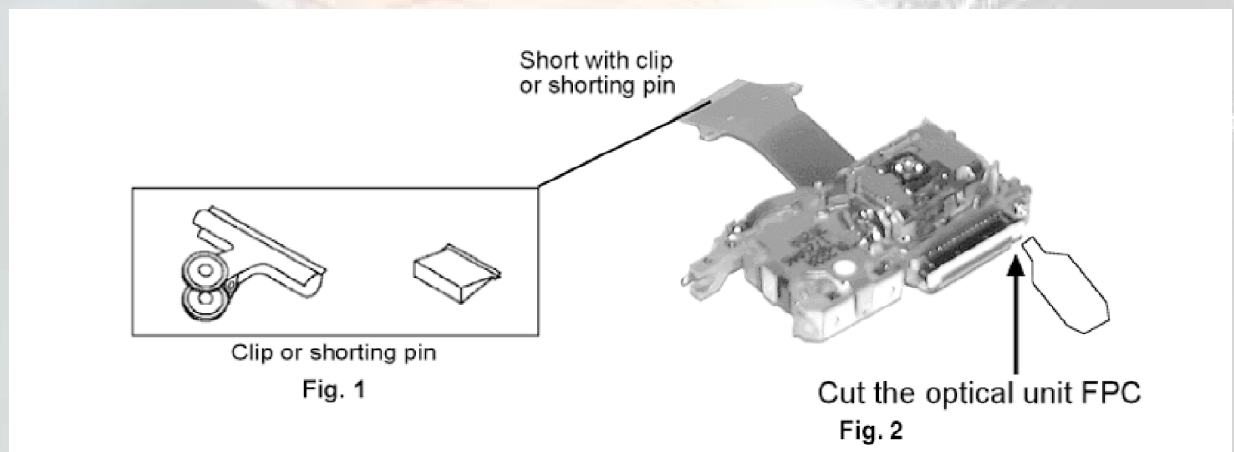

8.8. Disassembling the Spindle Motor Unit

Step 1 Remove the floating rubbers.

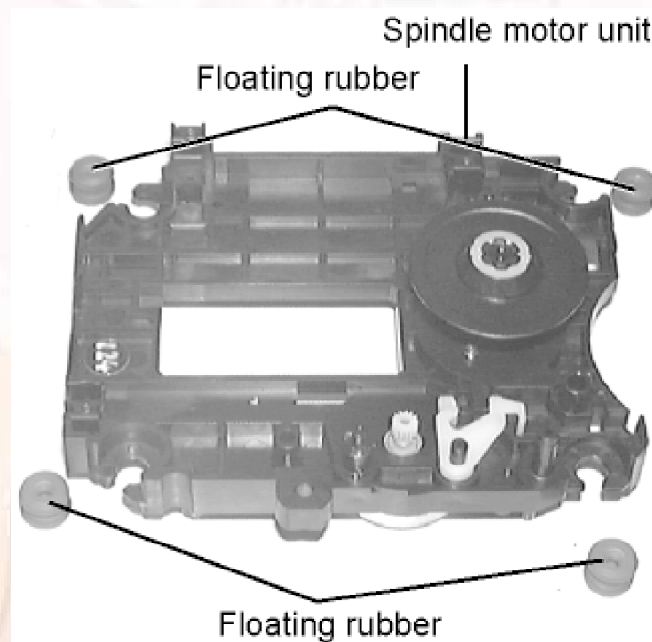


8.9. Disassembly and assembly of the Traverse Unit


Step 1 Push the lever from position A to B.

Step 2 Pull the stopper (black) in the direction of arrow 1 and push the lever in the direction of arrow 2.

Step 3 Push the steeper (black) down until the white lever eject out.

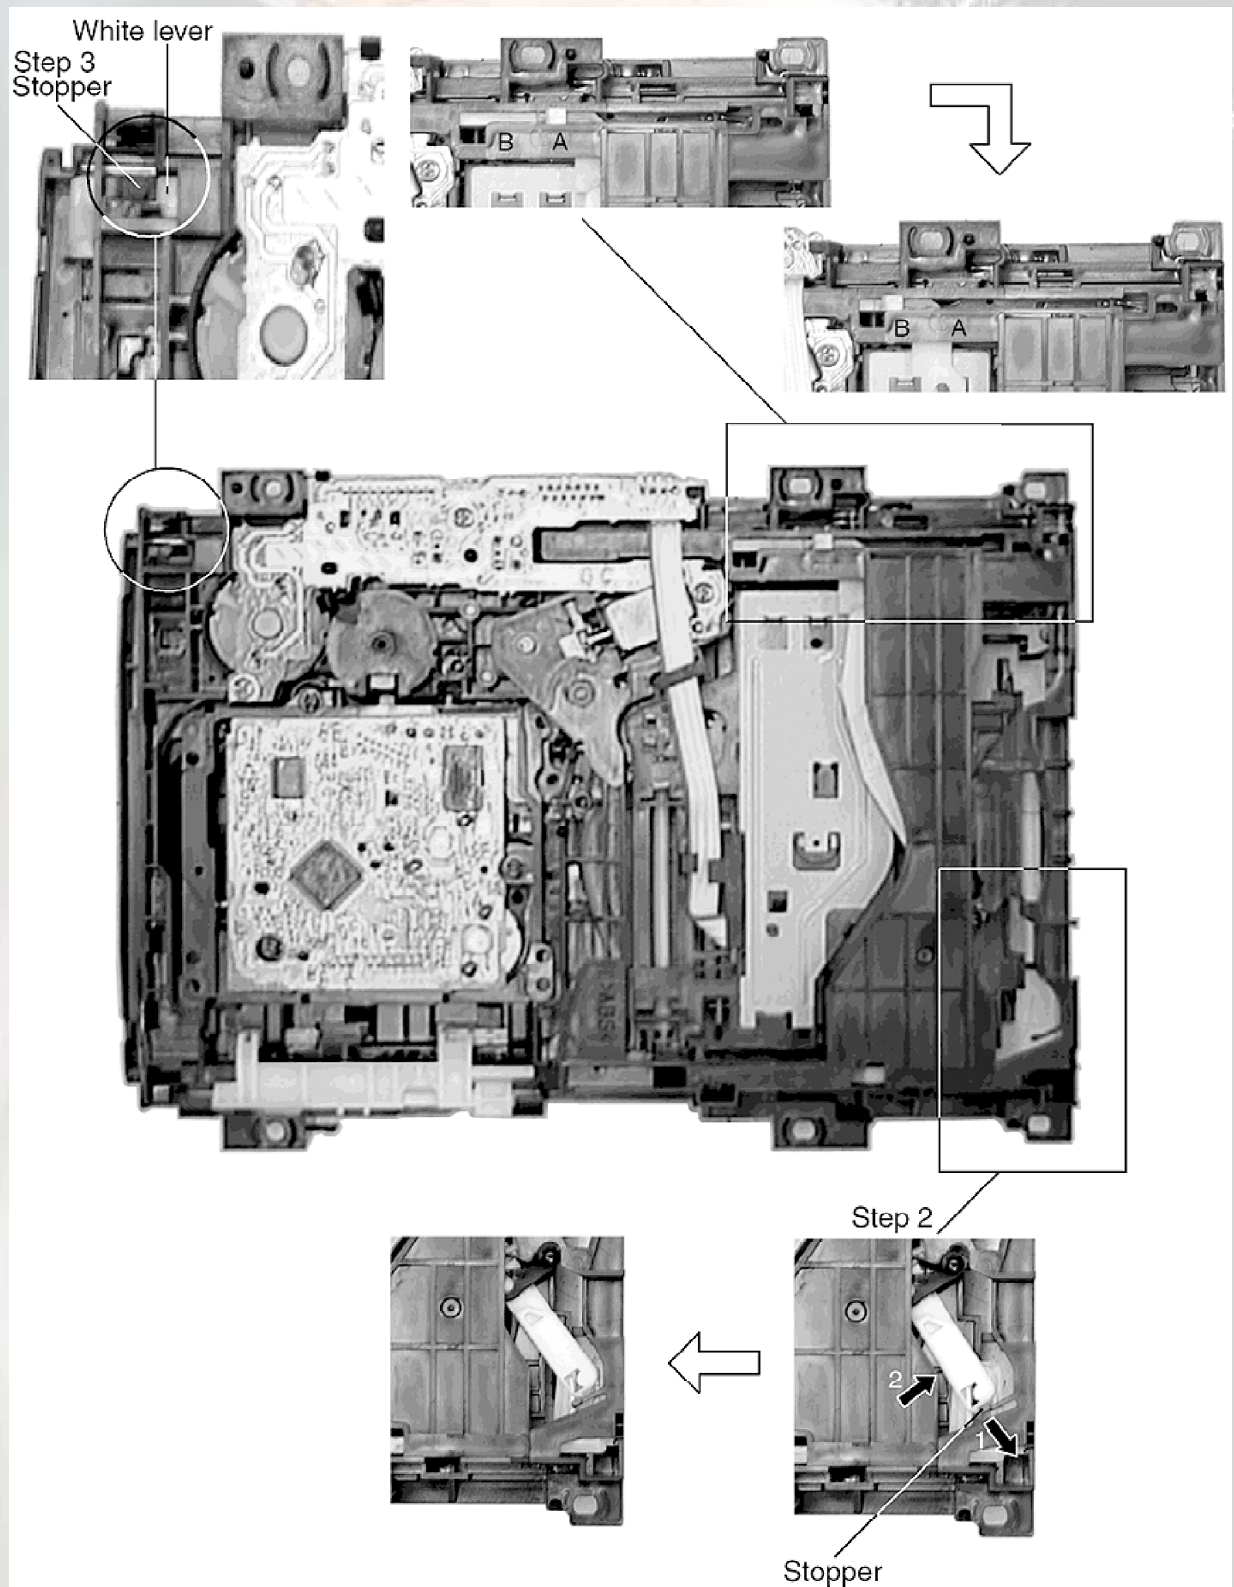


Step 4 Lift up the traverse unit and slide out the unit as shown.

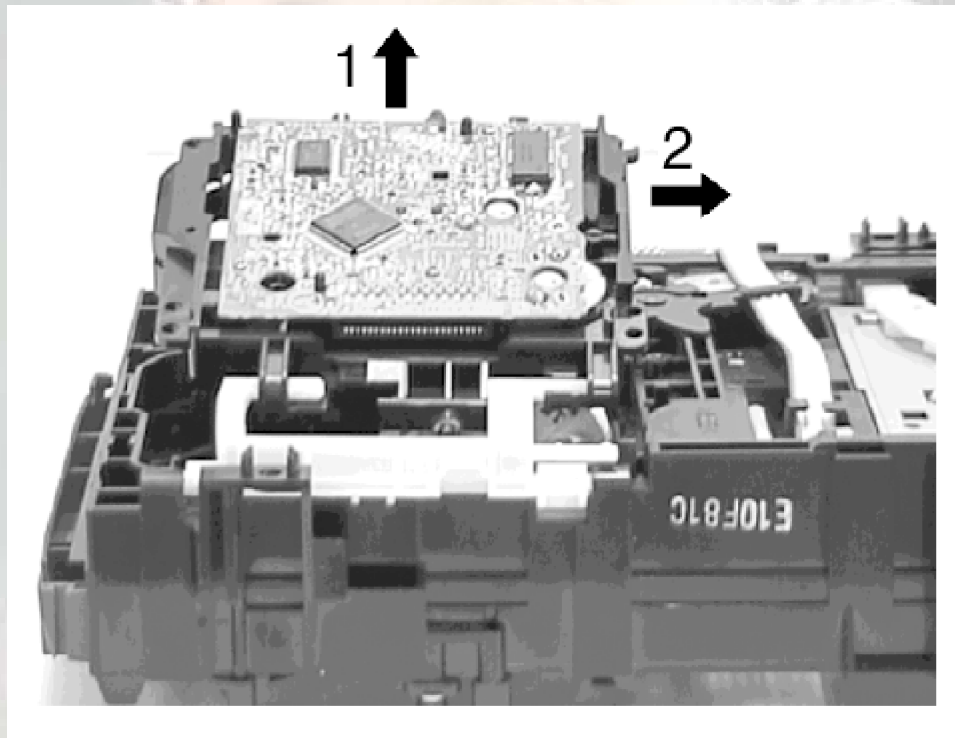


▪ **Replacement of Traverse Unit**

Step 1 Place the traverse unit as shown.


Step 2 Press in the lever shaft in the direction of arrow 1 as shown and push the traverse unit into the position in the direction of arrow 2.

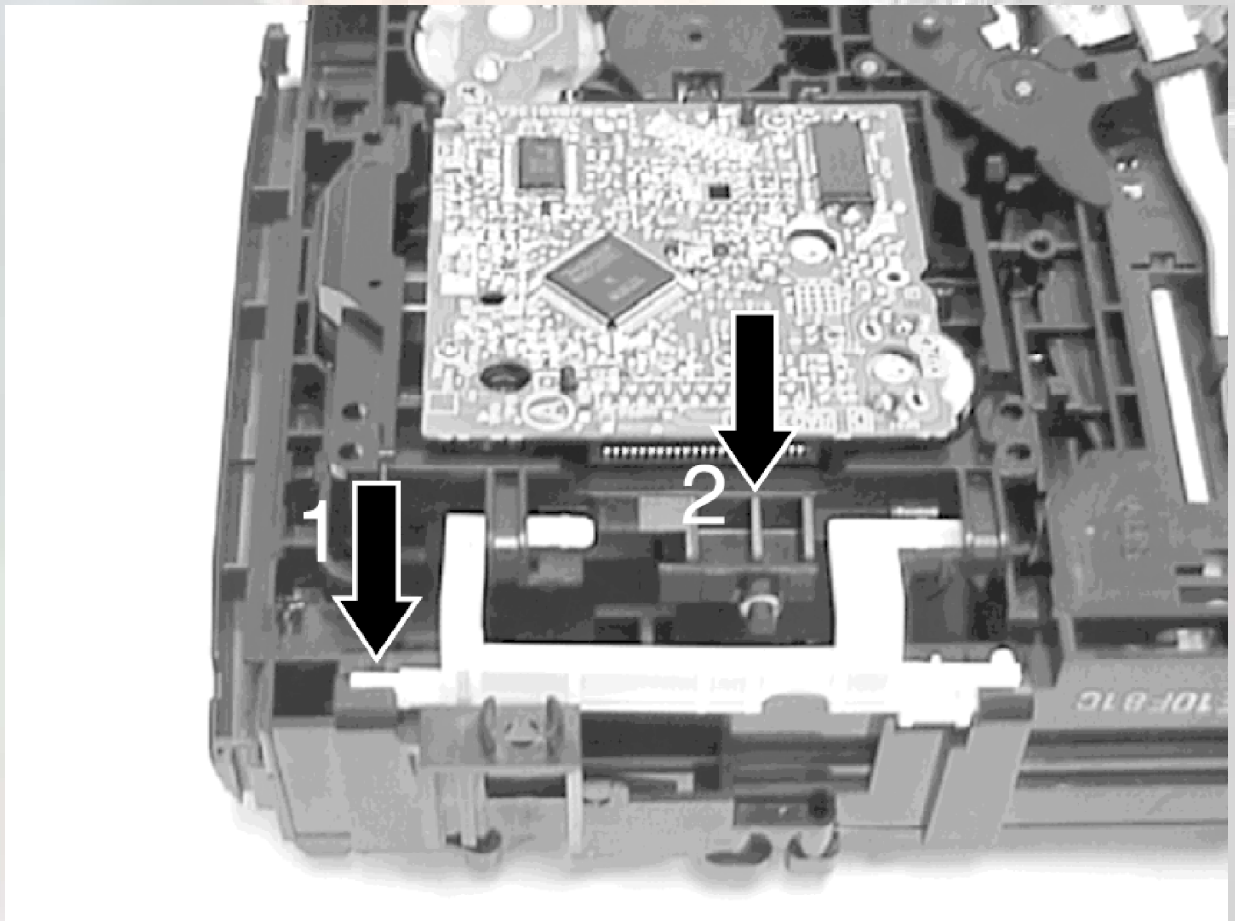


Step 3 Pull the stopper in the direction of arrow 1 and release the lever in the direction of arrow 2 as shown.

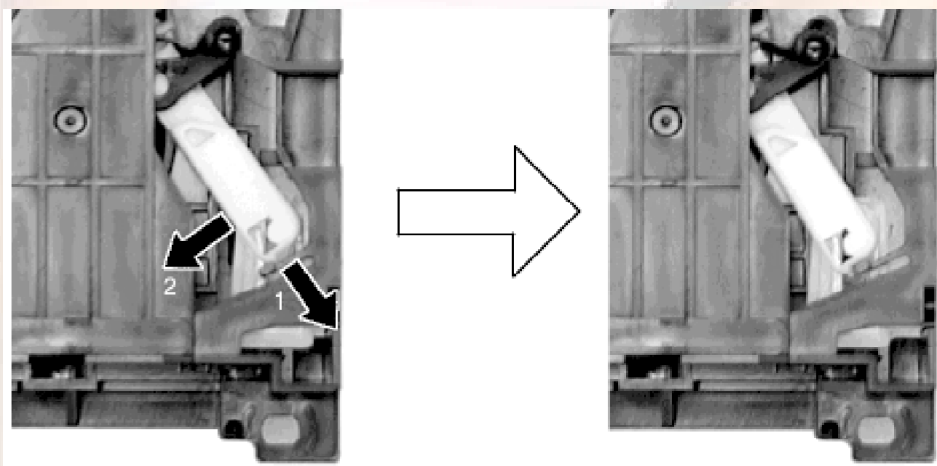


Step 4 Pull out the tray half way and push it back fully.

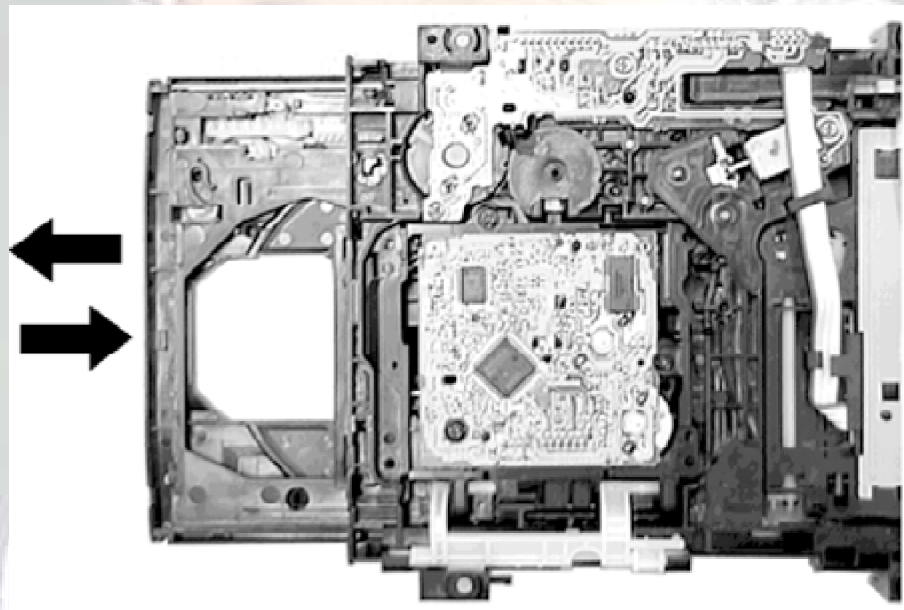

Step 5 Push the lever to the initial position indicated 'I---I'.

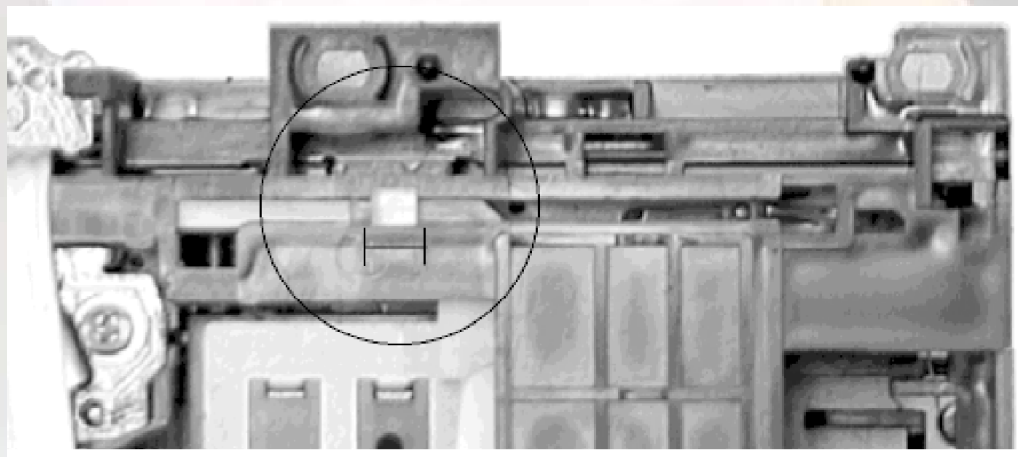


8.10. Disassembly and assembly of the Disc Tray

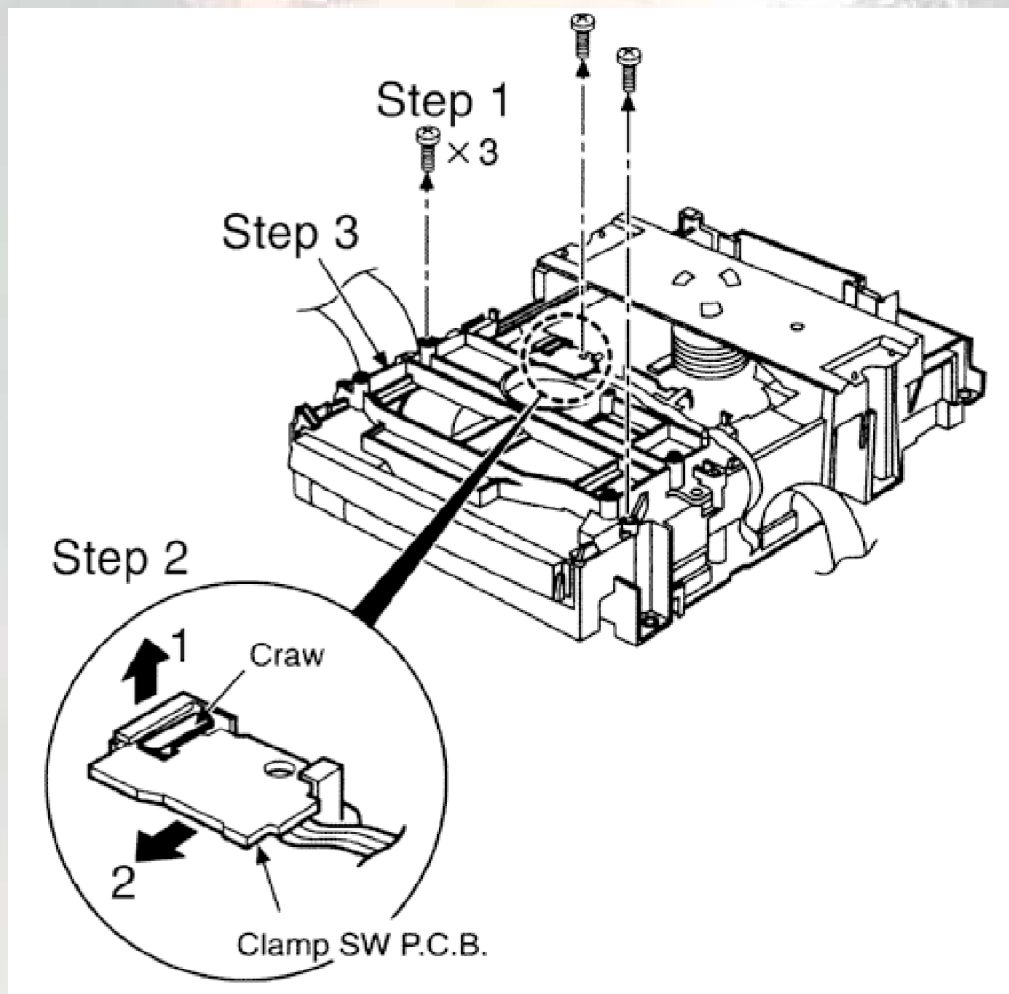


Step 2 With lifting the claw in the direction of arrow 1, draw the clamp SW P.C.B. in the direction of arrow 2.


Step 3 Remove the mechanism cover.

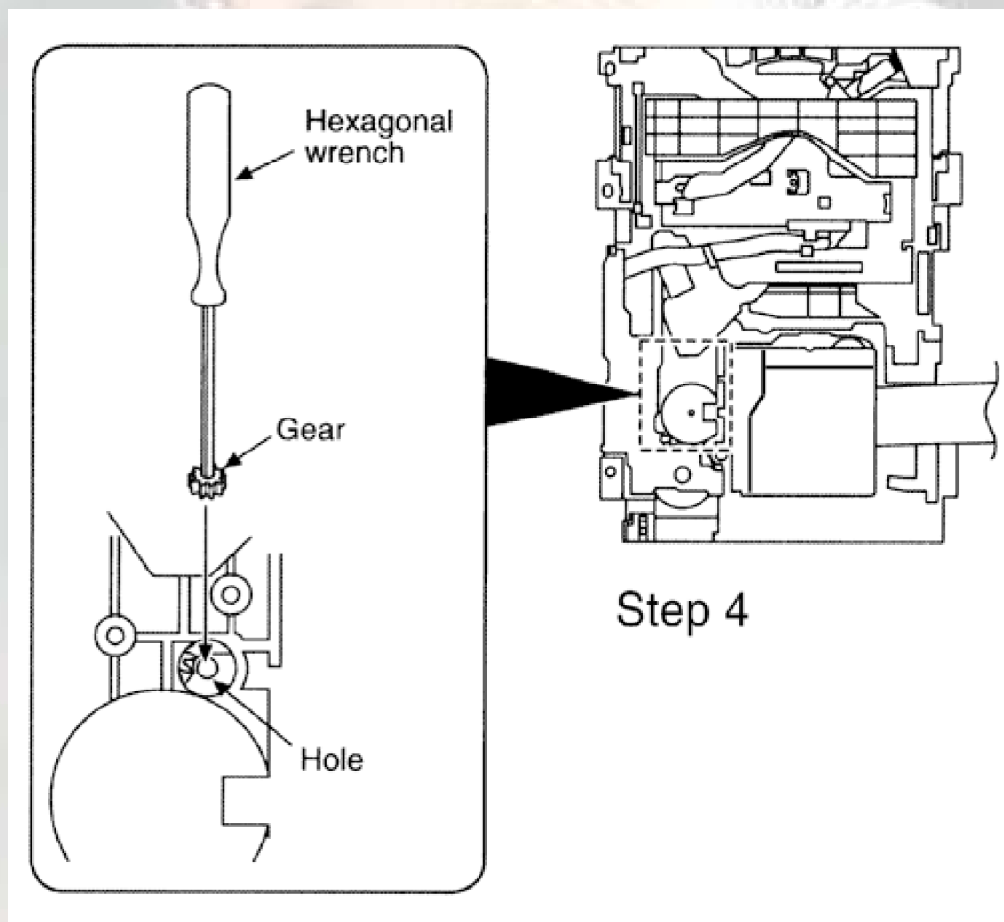

Step 4 Insert the gear with hexagonal wrench into the hole.

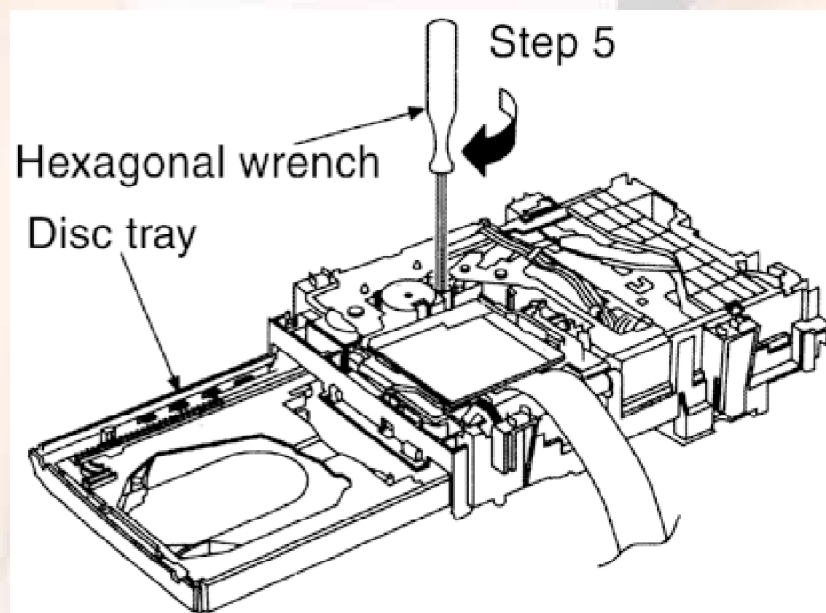


Step 5 Rotate the hexagonal wrench in the direction of arrow (clockwise), and then open the disc tray fully.

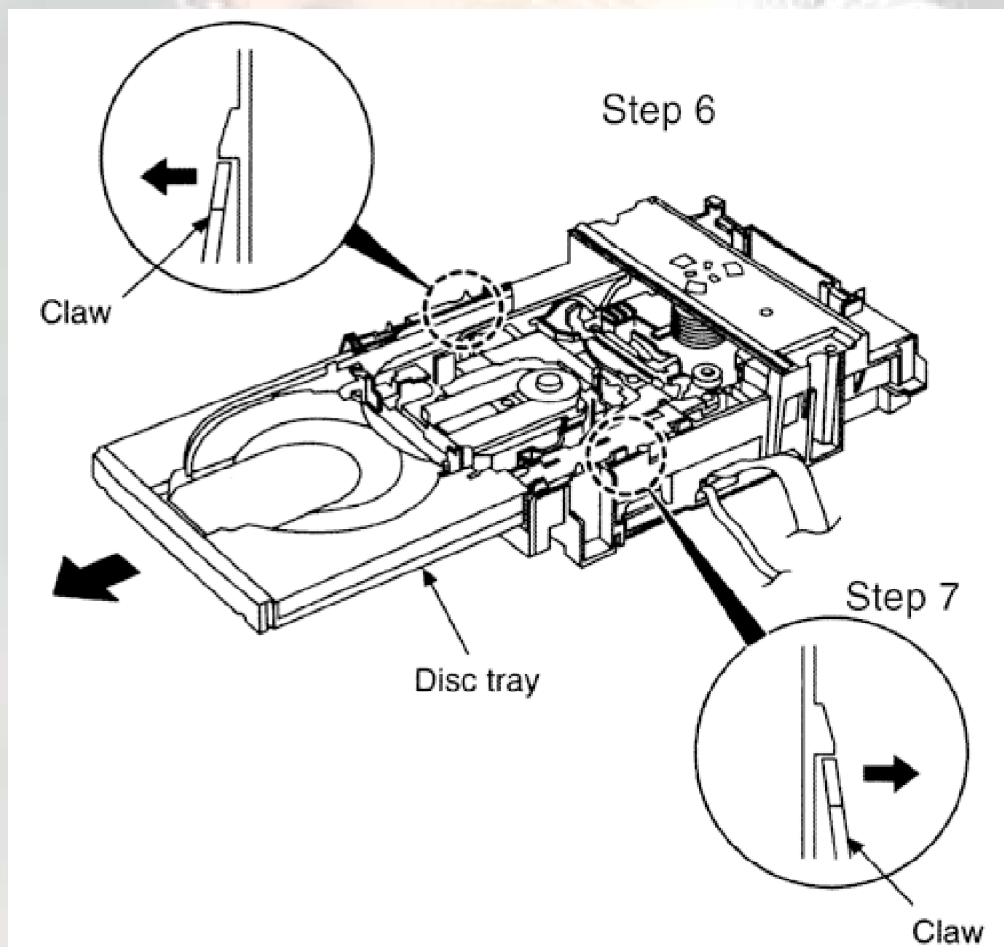


Step 6 Upset the CD changer unit again.

Step 7 Release both the claws, and then draw the disc tray.

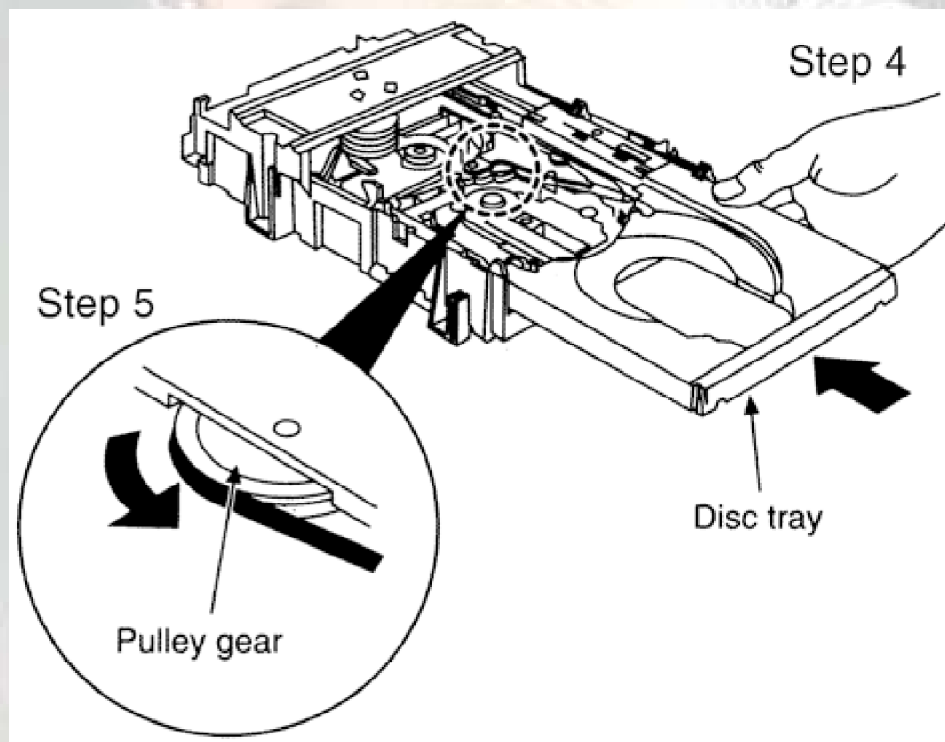


Step 8 With forcing the left guide bar manually because the left guide bar interferes with claw, draw the disc tray.

- **Installation of the disc tray after replacement**

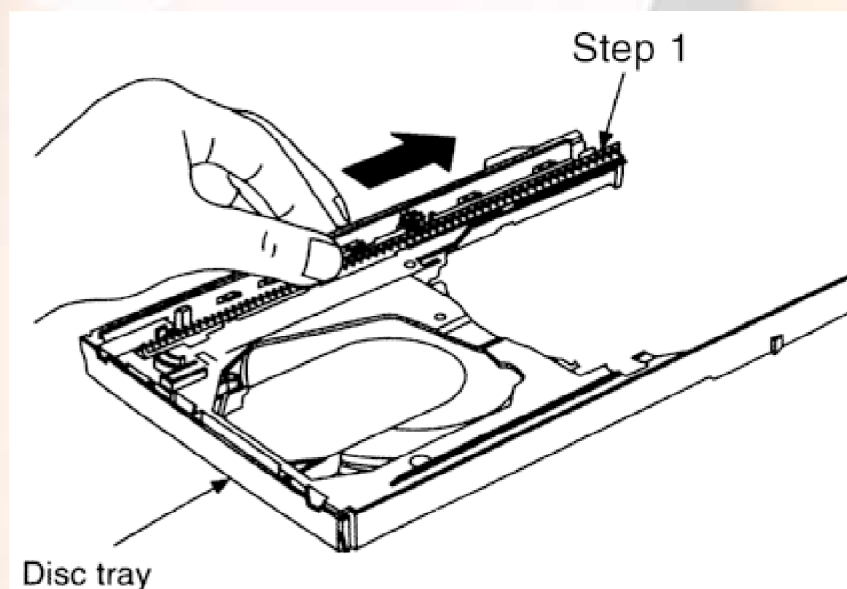


Step 1 Slide the drive rack fully in the direction of arrow.

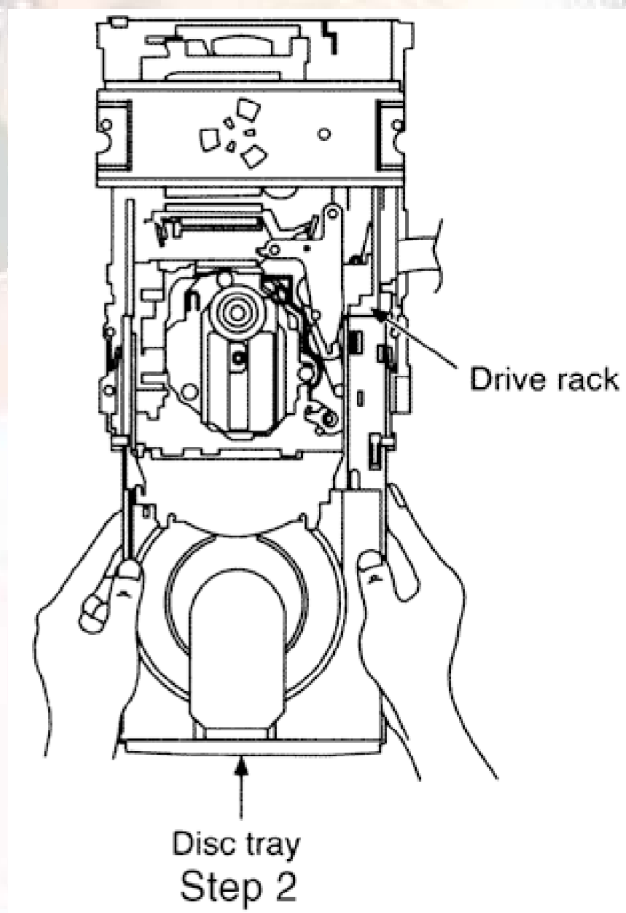

Step 2 Holding the drive rack not to move, install the disc tray.


Step 3 Drive rack

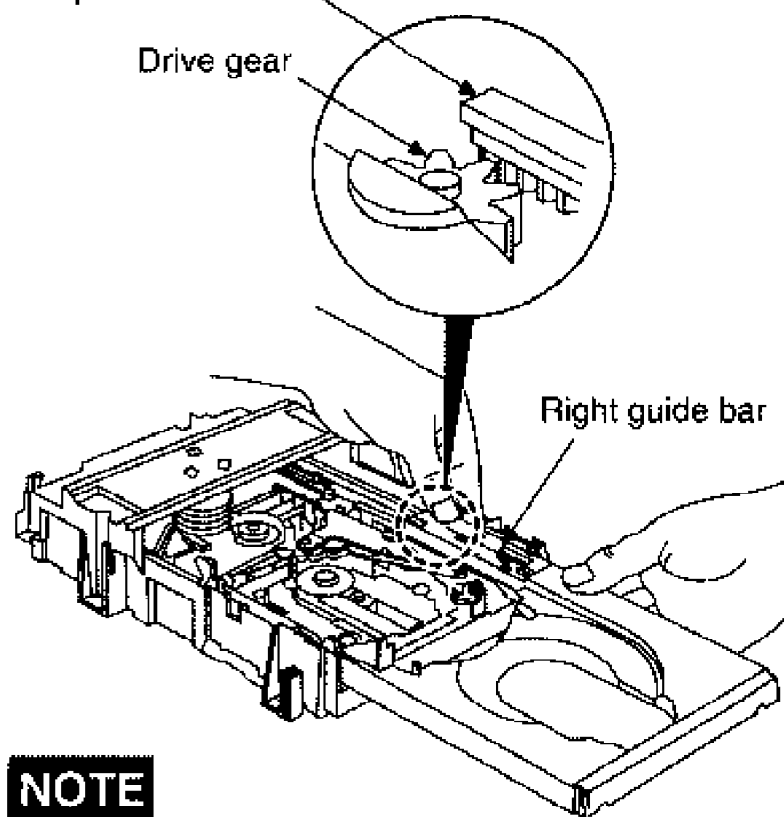

NOTE

Force the right guide bar of tray base manually not to move upwards.

Step 3 Align the drive rack with the driver gear.

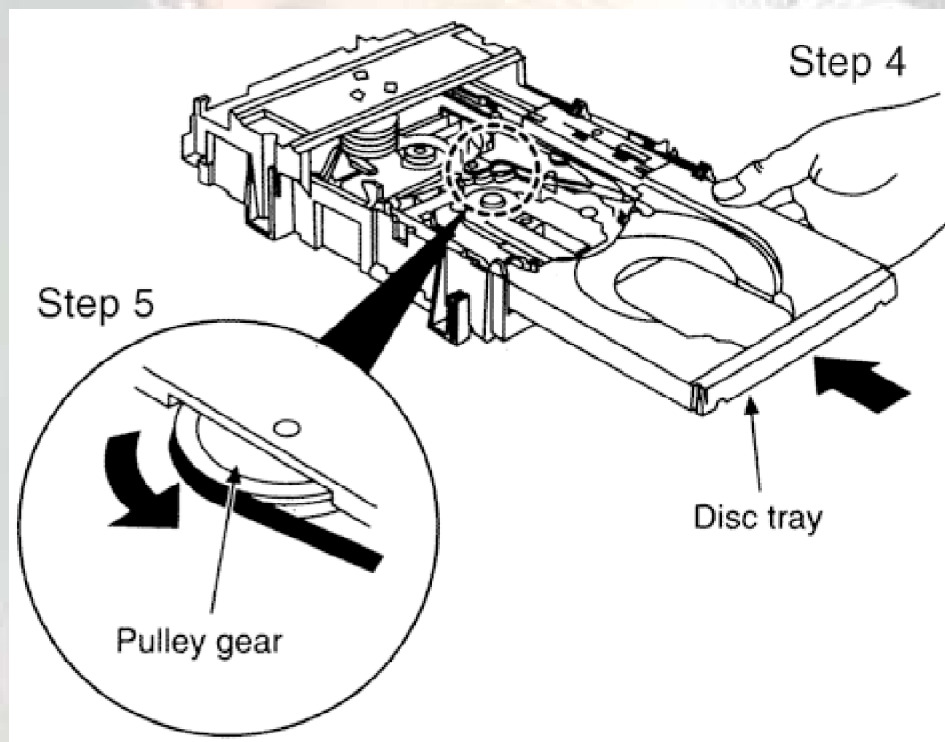


Step 4 Holding the disc tray manually, rotate the pulley gear in the direction of arrow.

Step 5 Rotate the gear 5 or 6 times manually, and then push the disc tray.

9. Measurements and Adjustments

9.1. Cassette Deck Section

▀ Measurement Condition



▀ Reverse-mode selector switch:

▀ Tape edit: NORMAL

▀ Record timer: OFF

▀ Make sure head, capstan and press roller are clean.

▀ Judgeable room temperature $20 \pm 5^\circ\text{C}$ ($68 \pm 9^\circ\text{F}$)

▀ Measuring instrument

▀ EVM (Electronic Voltmeter)

- Digital quency counter
- Test Tape
- Head azimuth adjustment (8 kHz, -20 dB); QZZCFM
- Tape speed gain adjustment (3 kHz, -10 dB); QZZCWAT
- Playback gain adjustment (315 Hz, 0 dB); QZZCFM
- CrO2 tape, QZZCRX

9.1.1. Head Azimuth Adjustment

Note :

If you wish to readjust the head azimuth, be sure to adjust with adhering the cassette tape closely to the mechanism by pushing the center of cassette tape with your finger. (Shown in Fig. 1)

1. Connect the measuring instrument as shown in Fig. 2.
2. Replace azimuth screws for both forward and reverse direction after removing the screw-locking bond left on the head base.
3. Playback the azimuth adjustment portion(8kHz, -20dB) of test tape(QZZCFM).
Adjust the azimuth adjusting screw until the outputs of the L/Rch are maximized. (Refer to Fig. 3)
Make sure that the difference in the peak level between the left and right channels does not exceed 5dB.
4. Perform the same adjustment in reverse playback mode.
Check of the level difference forward and reverse directions
5. Playback the playback gain adjustment portion(315Hz, 0dB) of test tape(QZZCFM). Check if level difference between forward and reverse direction is within 1.5dB.
6. After the adjustment, apply screwlock to the azimuth adjusting screw.

Fig. 1

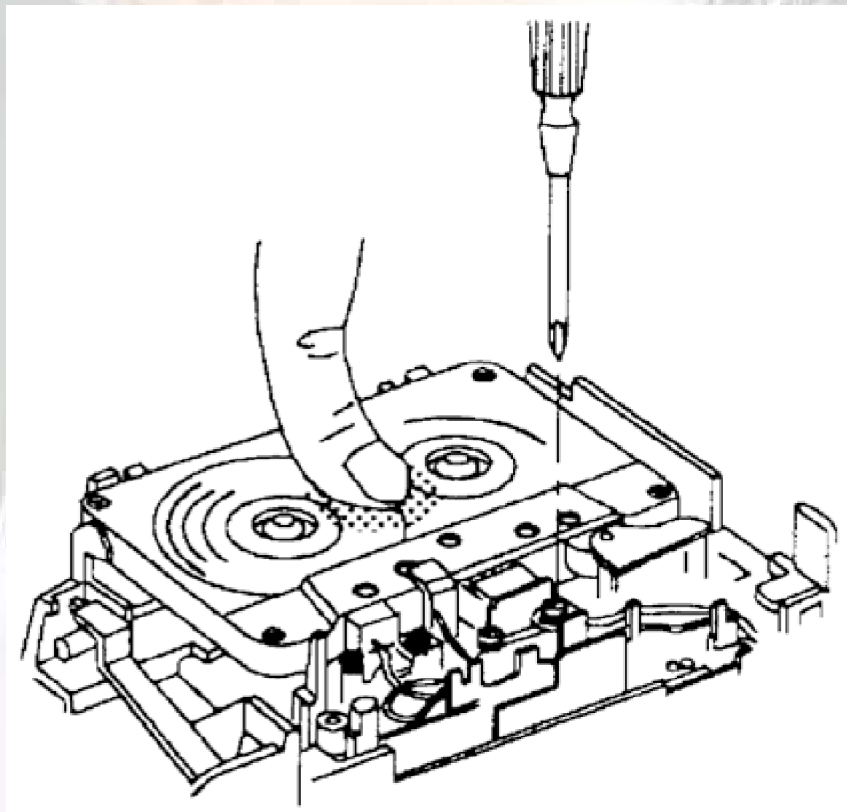


Fig. 2


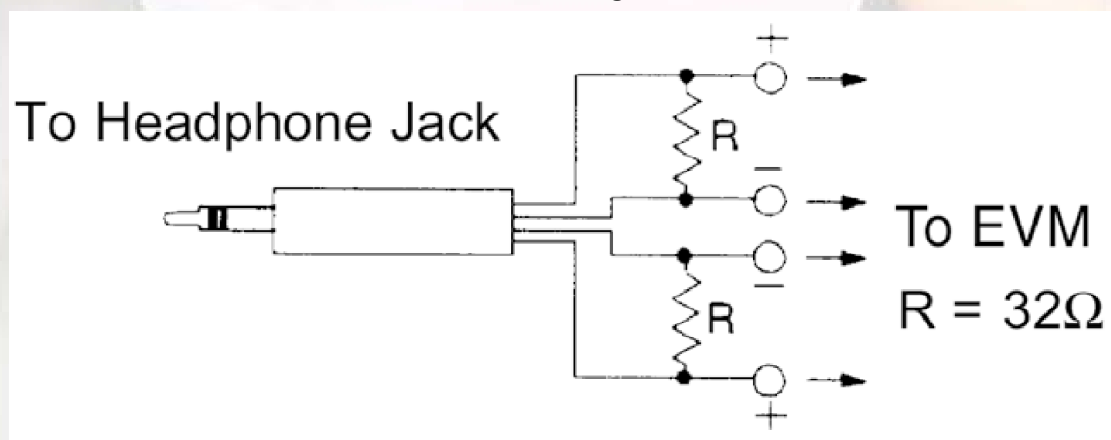


Fig. 3

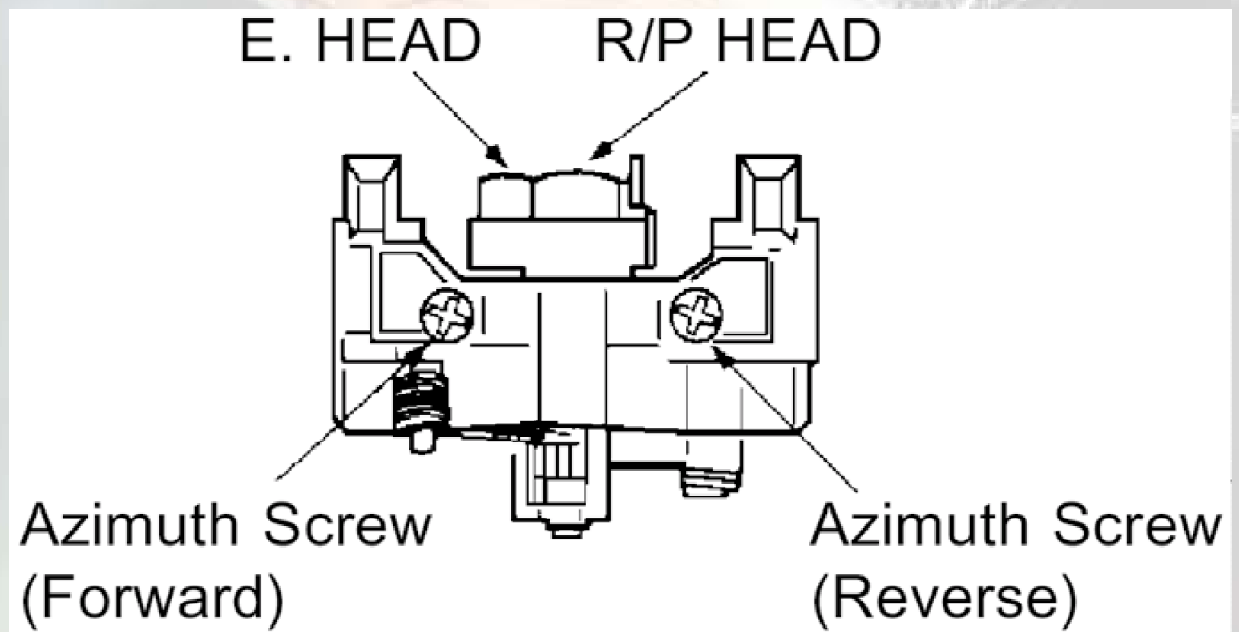


9.1.2. Tape Speed Adjustment (Deck 1/2)

1. Set the tape edit button to "NORMAL" position.
2. Insert the test tape (QZZCWAT) to DECK and playback (FWD side) the middle portion of it.
3. Adjust Motor VR for the output value shown below.

Adjustment target: 2940 ~ 3060 Hz
(NORMAL speed)

4. After alignment, assure that the output frequency of the DECK REV is within ± 60 Hz respectively of the value of the output frequency of DECK FWD.


UNIT

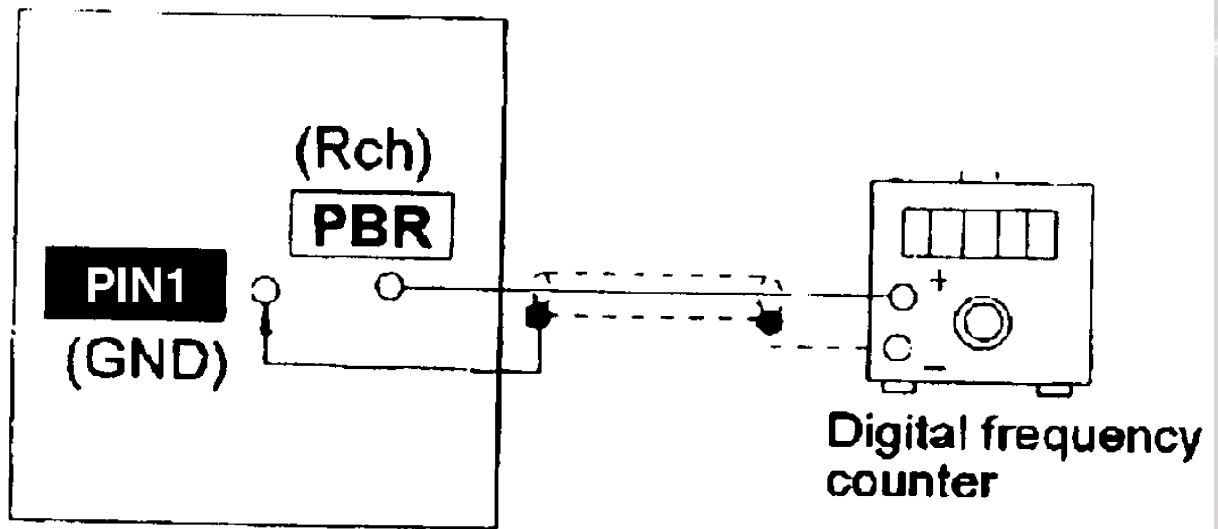

9.1.3. Bias and Erase Voltage Check

1. Set the unit "AUX" position.
2. Insert the Normal blank tape (QZZCRA) into DECK and the unit to "REC" mode (use "● REC/PAUSE" key).
3. Measure and make sure that the output is within the standard value.

Bias voltage	$16 \pm 4\text{mV}$ (Normal)
Erase voltage for Deck 2	47mV ~ 80mV

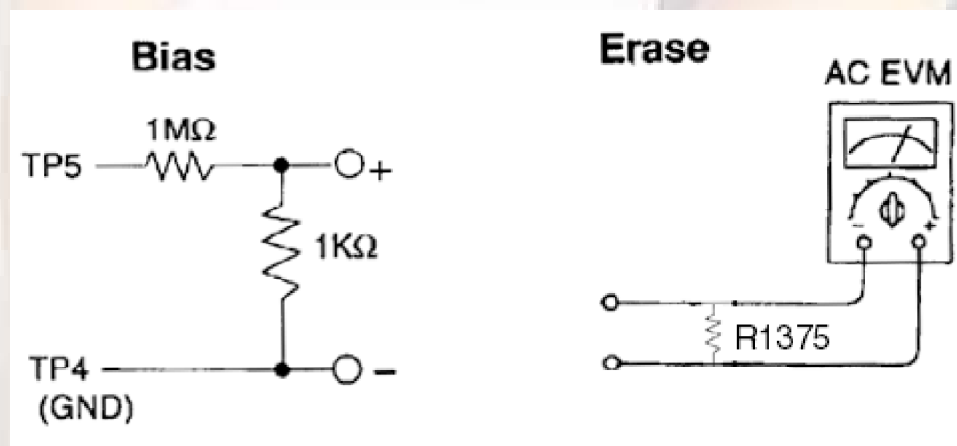


9.1.4. Bias Frequency check

1. Set the unit to "AUX" position.
2. Insert the Normal blank tape (QZZCRA) into DECK 2 and set the unit to "REC"

mode (● use “REC/PAUSE” key).


3. Check so that the output frequency is within the standard value.

Standard Value: 86
 ± 8 kHz

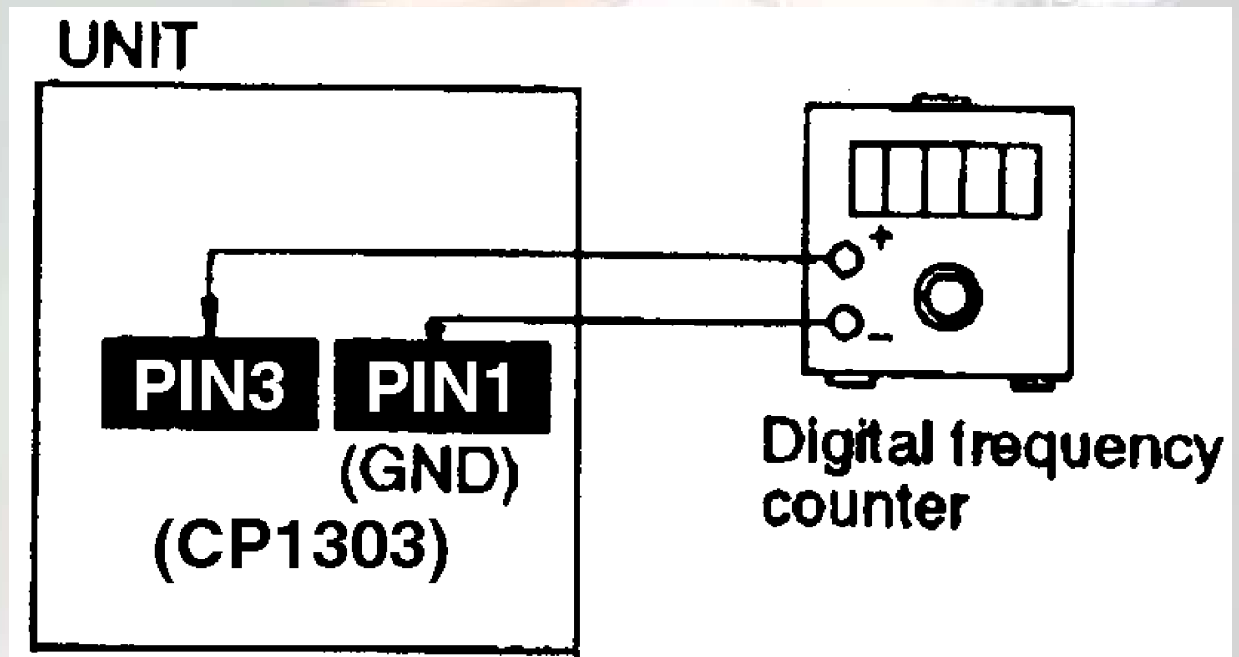

9.2. Alignment Points

Cassette Deck Section

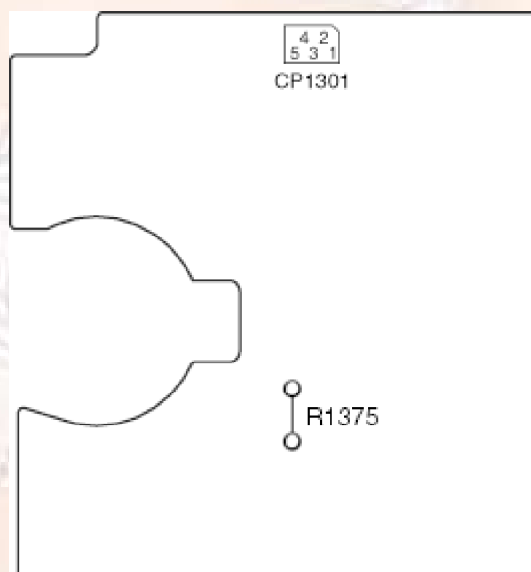

10. Illustration of ICs, Transistors and Diodes



11. Terminal Function of IC's

11.1. IC601 (C2BBGF000359) System Microprocessor

Pin No.	Mark	I/O	Function
1	SER5	I/O	Searal 5 output (PLL/ DSP DA)
2	MK_IN2	I/O	Mech condition input 2 (TPS/PHOTO)
3	MK_IN1	I/O	Mech condition input 1 (HALF/MODE/R_INHF/ R_INHR)
4	KEY 3	I/O	Key 3 input
5	KEY 2	I/O	Key 2 input
6	KEY 1	I/O	Key 1 input
7	JOG1B	I/O	JOG 1 input B Main Volume
8	JOG1A	I/O	JOG 1 input A Main Volume
9	SP_IN	I/O	Speana input
10	SP_A	I/O	Speana control output A
11	SP_B	I/O	Speana control output B
12	SP_C	I/O	Speana control output C
13	N.C.	I/O	No use
14	N.C.	I/O	No use
15	N.C.	I/O	No use
16	SER9	I/O	Searal 9 output (Echo LA)
17	VSS	-	Ground
18	RESET	I	RESET input (Active L)
19	XCOUT	I/O	32.768 kHz sub clock
20	XCIN	I/O	32.768 kHz sub clock
21	VSS	-	Ground (0V)
22	XIN	I	4.00 MHz main clock
23	XOUT	O	4.00 MHz main clock
24	VCC	-	Power supply (+5V)
25	MBP1	I/O	MPU beat proof output 1
26	MBP2	I/O	MPU beat proof output 2

Pin No.	Mark	I/O	Function
27	PCONT	I/O	PCNT output
28	N.C.	I/O	No use
29	DCDET	I/O	DCDET input
30	SER4	I/O	Searal 4 output (ROM CS)
31	RMT	I/O	Remoco input
32	SYNC	I/O	AC failure detect input
33	SER3	I/O	Searal 3 output (Exp2 CK/ ROM CK)
34	SER2	I/O	Searal 2 output (Exp1CK/ ROM DA)
35	SER1	I/O	Searal 1 output (EXP1/2 DA)
36	DSPRST	I/O	DSP reset output
37	DSPACK	I/O	DSP ACK input
38	SENSE	I/O	DSP sense input
39	MIC SW	I/O	MIC output sw
40	PHONE	I/O	Phone output sw
41	DO/ST	I/O	Tuner D0/ST input
42	SD IN	I/O	Tuner signal DET input
43	REGION IN	I/O	Region input
44-55	AND12-1/ REG12-1	I/O	Grid drive output (Digit drive output)
56-88	SEG1-33	I/O	Segment drive output (Anode drive output)
89	-VP	-	Power supply (-30V)
90	MECHSI	I/O	Mecha control data input
91	MECHSO	I/O	Mecha control data output
92	MECHCK	I/O	Mecha control clock input
93	MECHRQ	I/O	Mecha con request output
94	MECHCS	I/O	Mecha control CS input
95	MECRST	I/O	Mechcon reset output
96	SER8	I/O	Searal 8 output (DSP LA)
97	AVSS	-	Analog ground (0V)
98	VREF	-	Reference for A-D
99	SER7	I/O	Searal 7 output (PLL CE)
100	SER6	I/O	Searal 6 output (PLL/ DSP CK)

12. Block Diagram



13. Schematic Diagram

(All schematic diagrams may be modified at any time with the development of the new technology)

Note:

S601

: DPL Switch

S602

: SSS Switch

S603

: 3D AI Switch

S604

: Preset EQ Switch

S605

: Amazing Switch

S606

: Super Woofer Switch

S607

: Tape Eject Switch

S610

: FM /BP /Rev Switch

S611

: Rec/Stop Switch

S612

: Display/Demo Switch

S613

: Clock/Timer Switch

S614

: Play/Rec Switch

S615

: Selector Switch

- 
- S616**
: Tune Mode Switch
- S617**
: DVD/CD Switch
- S618**
: Tuner / Band Switch
- S619**
: Tape Switch
- S620**
: Volume (-) Switch
- S621**
: Volume (+) Switch
- S622**
: Memory Switch
- S623**
: Power Switch
- S625**
: Manager Switch
- S626**
: Disc 1 Switch
- S627**
: Disc 2 Switch
- S628**
: Disc 3 Switch
- S629**
: Disc 4 Switch
- S630**
: Disc 5 Switch
- S631**
: Cinema Switch
- S632**
: Open/Close Switch
- S971**
: Switch Mode
- S972**
: Switch Half

S973
: Switch CR02

S974
: Switch RECINH_R

S975
: Switch RECINH_F

SW1
: Switch Push

SW2
: Switch Push

SW3
: Switch

SW4
: Switch CD

SW5
: Switch Lock

SW2501
: Switch

VR600
: Volume Jog

- The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

(()) : CD

< > : FM

- Importance safety notice :

Components identified by  mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

Caution !

IC, LSI and VLSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminium foil.
- Put a conductive mat on the work table.
- Ground the soldering iron.
- Do not touch the pins of IC, LSI or VLSI with fingers directly.





14. Printed Circuit Board





15. Wiring Connection Diagram

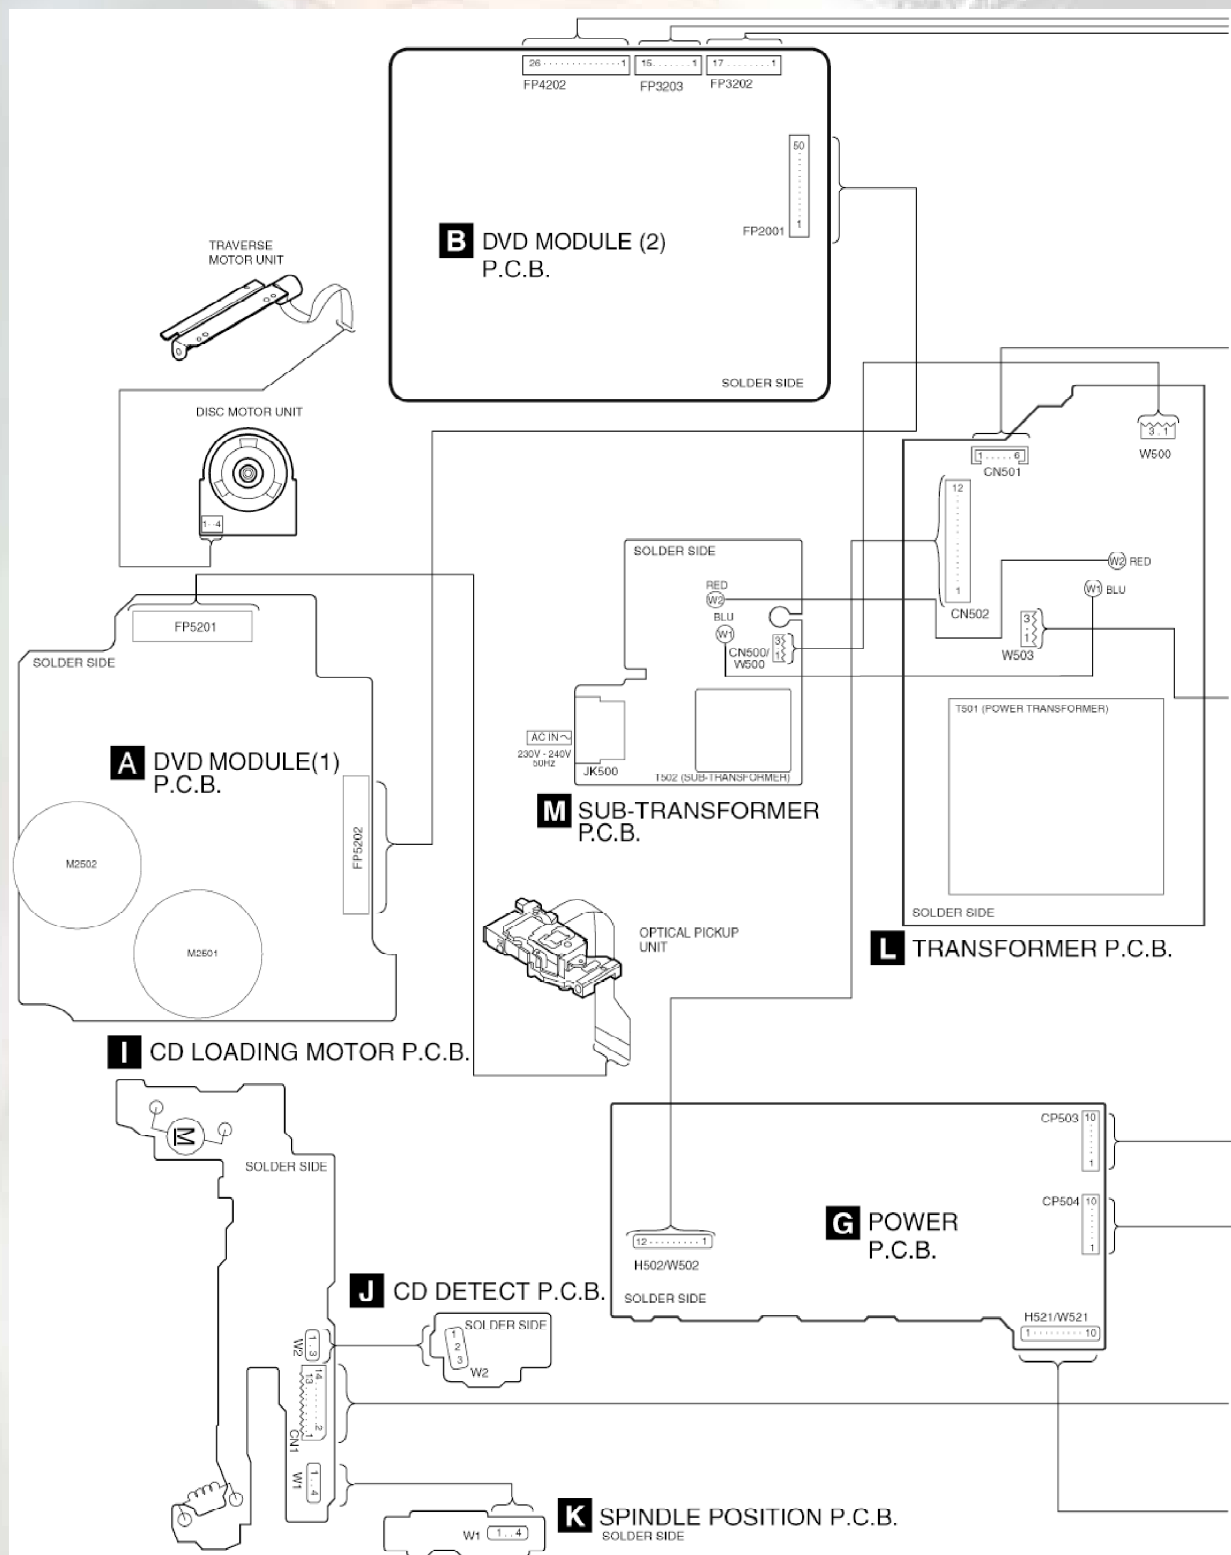

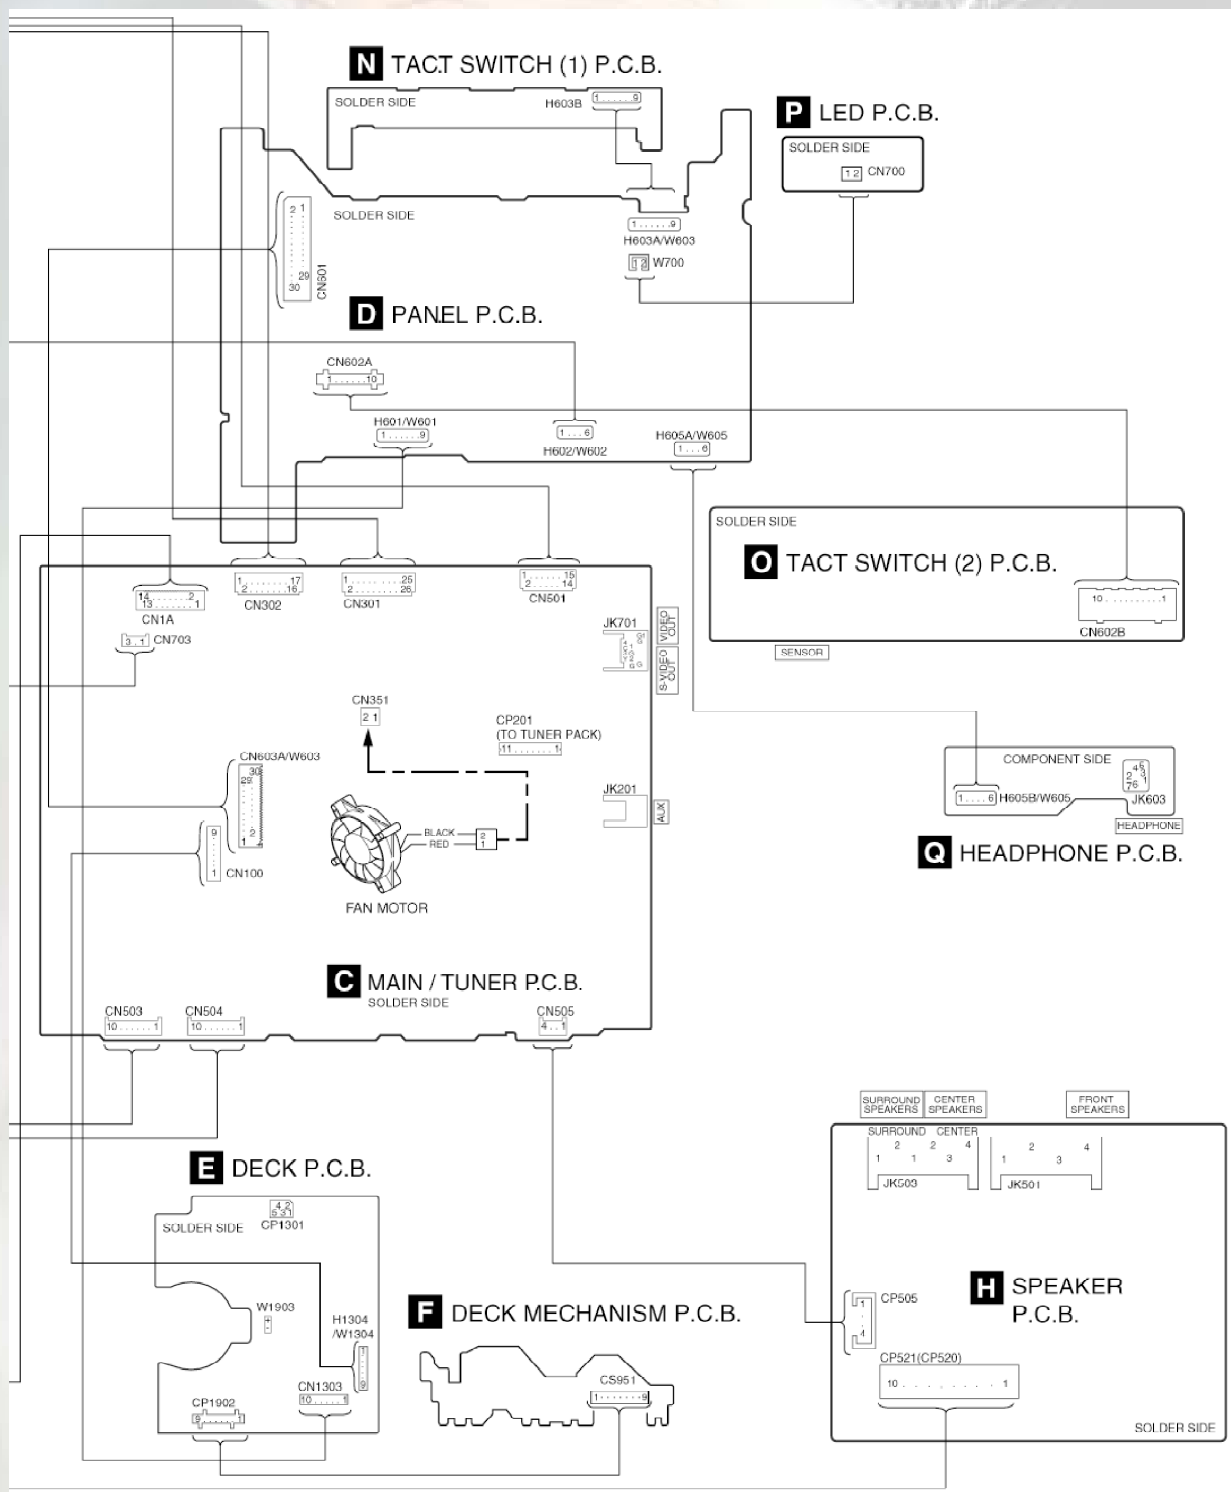

16. Parts Location and Replacement Parts List

Notes:

- Important safety notice:

Components identified by  mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low noise (resistors), etc are used.

When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list.

- The parenthesized indications in the Remarks columns specify the areas or colour. (Refer to the cover page for area or colour)
Parts without these indications can be used for all areas.
- **Warning:** This product uses a laser diode. Refer to caution statements on "Precaution of Laser Diode".
ACHTUNG:
 - Die Lasereinheit nicht zerlegen.
 - Die Lasereinheit darf nur gegen eine vom Hersteller spezifizierte Einheit ausgetauscht werden.
- Capacitor values are in microfarads (μ F) unless specified otherwise, P= Pico-farads (pF), F= Farads.
- Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM).
- The marking (RTL) indicates that the Retention Time is limited for this item.
After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of a availability is dependent on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.
- The "(SF)" mark denotes the standard part.
- Reference for O/I book languages are as follows:

r :	Arabic	Du :	Dutch	It :	Italian	Sp :	Spanish
f :	Canadian French	En :	English	Ko :	Korean	Sw :	Swedish
z :	Czech	Fr :	French	Po :	Polish	Co :	Traditional Chinese
a :	Danish	Ge :	German	Ru :	Russian	Cn :	Simplified Chinese

16.1. Deck Mechanism (RAA4110-S)

16.1.1. Deck Mechanism Parts Location



16.1.2. Deck Mechanism Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CASSETTE DECK	
101	RED0071	R/P HEAD BLOCK UNIT	[M]
103	RDG0300	REEL BASE GEAR	[M]
104	RDG0301	WINDING RELAY GEAR	[M]
105	RDK0026	MAIN GEAR	[M]
107	RDV0033-4	WINDING BELT	[M]
108	RDV0034-1	CAPSTAN BELT A	[M]
110	RMB0312	TRIGGER LEVER SPRING	[M]
111	RMB0400	REEL SPRING	[M]
112	RMB0403	HEAB PANEL SPRING	[M]
113	RMB0404	BRAKE ROD SPRING	[M]
114	RMB0406	FR LEVER SPRING	[M]
115	RMB0408	THRUST SPRING	[M]
116	RML0370	TRIGGER LEVER	[M]
117	RML0371	FR LEVER	[M]
118	RML0372	WINDING LEVER	[M]
119	RML0374	EJECT LEVER	[M]
120	RMM0131	BRAKE ROD	[M]
121	RMM0133-1	EJECT ROD	[M]
122	RMQ0519	REEL HUB	[M]
123	RMS0398-1	MOVING CORE	[M]
124	RSJ0003	PLUNGER	[M]
125	RMC0061	PACK SPRING	[M]
126	RXF0061	FLYWHEEL F ASSY	[M]
127	RXF0062	FLYWHEEL R ASSY	[M]
128	RXG0040	FF RELAY GEAR ASSY	[M]
129	RMK0283A-J	SUB-CHASSIS	[M]
130	RXL0124	PINCH ROLLER F ASSY	[M]
130-1	RMB0401	PINCH ARM SPRING F	[M]
131	RXL0125	PINCH ROLLER R ASSY	[M]
131-1	RMB0402	PINCH ARM SPRING R	[M]
132	RXL0126	WINDING ARM ASSY	[M]
133	RXQ0412	HEAD PANEL ASSY	[M]
133-1	RMB0405	FR ROD SPRING	[M]
133-2	RMM0132	FR ROD	[M]
134	REM0098	CAP MOTOR ASSY	[M]
135	RHD26022	MOTOR SCREW	[M]
136	XTW2+5L	HEAD BLOCK UNIT SCRE	[M]
137	XTW26+10S	SUB-CHASSIS SCREW	[M]
138	XYC2+JF17	PCB EARTH SCREW	[M]
139	RFKJSTR280PP	MAIN CHASSIS ASS'Y	[M]

16.2. CD Loading Mechanism (RD-DAC036-S)

16.2.1. CD Loading Mechanism Parts Location



16.2.2. CD Loading Mechanism Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		TRAVERSE DECK	
301	RML0517	TIMING LEVER	[M]
302	RML0516	PLUNGER LEVER	[M]
303	RMB0551	UPPER SPINDLE SPRING	[M]
304	RMQ0744	LOWER HOOK	[M]
305	RDV0056	BELT	[M]
306	RML0525	FRONT LOCK	[M]
307	RML0526	DISC LEVER	[M]
308	RDG0424	DRIVE GEAR	[M]
309	RDG0425	CHANGE GEAR	[M]
310	RDG0427	TRV CAM GEAR	[M]
311	RDG0428	TRV RELAY GEAR	[M]
312	RDG0426	UP/DOWN GEAR	[M]
313	RDG0429	PULLEY GEAR	[M]
314	RMB0549-1	CHANGR GEAR SPRING	[M]
315	RMQ0748	PITCH PLATE	[M]
316	RMB0553	PUSH SPRING	[M]
317	RML0530	ASSIST LEVER	[M]
318	RML0518	CONNECTION LEVER	[M]
319	RMM0201	SLIDE PLATE 1	[M]
320	RME0258	REAR LOCK SPRING	[M]
321	RML0521	REAR LOCK LEVER	[M]
322	RME0257	TRAY LOCK LEVER SPRI	[M]
323	RML0520	TRAY LOCK	[M]
324	RMM0202	SLIDE PLATE 2	[M]
325	XTB3+10J	SCREW	[M]
326	RMR1367-K	FIXED PLATE	[M]
327	RMR0624-W	CLAMPER	[M]
328	RMB0561	ASSIST LEVER SPRING	[M]
329	RMR1121-K	MECHA COVER	[M]
330	RMA1110-2	TRAY ANGLE	[M]
331	RMR1122-H1	TRAYBASE	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
332	RMM0204	CARRIER	[M]
333	RMM0203	DRIVE RACK	[M]
334	RDG0432	SPEED UP GEAR	[M]
335	RML0524	SLIDE LOCK	[M]
336	RML0523	CARRIER LOCK	[M]
337	RME0260-1	SLIDE LOCK SPRING	[M]
338	RMR1123-H	TRAY	[M]
339	RXQ0595	MOTOR ASSY	[M]
341	RSJ0003	SOLENOID ASSY	[M]
344	RML0519	8CD LEVER	[M]
345	RFKNAAK27GCS	MECHA BASE ASS'Y	[M]
346	RML0522	TURNING STOPPER	[M]
347	RMQ0745	LOWER SPINDLE	[M]
348	RMQ0746	UP/DOWN BASE	[M]
349	RMB0550	LOWER SPINDLE SP	[M]
350	RMQ0747	UPPER HOOK	[M]
351	RME0263	CLICK SPRING	[M]
352	RMQ0743	SPINDLE SHAFT	[M]
353	RMB0552	CUSHION SPRING	[M]
354	RDG0430	RELAY GEAR A	[M]
355	RDG0431	RELAY GEAR B	[M]
356	RME0262	DISK LEVER SP.	[M]
357	RMA1105	SUPPORT PLATE	[M]
369	RMX0141	PUSH SPACER	[M]
370	RMQ0749	UPPER SPINDLE	[M]
371	RHM0001	MAGNET	[M]
372	RMX0140	DISC SPACER	[M]
373	RME0261	FRONT LOCK SPRING	[M]
374	RMQ0742	SPINDLE BASE	[M]
375	RMA1435	PB ANGLE	[M]
376	RMC0387	SUPPORT SPRING	[M]
377	RMA1003	BACK YOKE	[M]
378	XTV2+6G	PCB SCREW	[M]
379	XTW3+10T	SCREW	[M]
401	RMG0558-K	P.C.B. RUBBER	[M]
402	RHD20060	P.C.B. SCREW	[M]
403	RDG0499	TRV GEAR A	[M]
404	RDG0500	TRV GEAR B	[M]
405	RDG0501	TRV GEAR C	[M]
406	RHD17036	DRIVE RACK SCREW	[M]
409	RMC0415	ADJUST SPRING HOLDER	[M]
410	RMC0416	ADJUST SPRING HOLDER	[M]
412	RME0319	TRV GEAR SPRING	[M]
413	RME0320	ADJUSTMENT SPRING	[M]
414	RMM0234-1	TRV DRIVE RACK	[M]
415	RMR1366-K	UNIT CHASSIS	[M]
416	RMG0545-A	FLOATING RUBBER	[M]
417	RMS0711	GUIDE SHAFT	[M]
418	RMS0712-1	FIXED PIN	[M]
419	RMX0192	INNER STOPPER	[M]
420	RXQ0810	OPU UNIT	[M]
421	VHD1224	AJD SPRING H. SCCREW	[M]
422	RXQ0749	SPINDLE MOTOR ASS'Y	[SPC]

16.3. Cabinet

16.3.1. Cabinet Parts Location



16.3.2. Cabinet Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	REE1074-1	15P FFC WIRE	[M]
2	REE1075	17P FFC WIRE	[M]
3	REE1076-1	26P FFC WIRE	[M]
4	REE1077-1	30P FFC WIRE	[M]
5	REE1078-J	50P FFC	[M]
6	REE1112	14P FFC WIRE	[M]
7	REM0072-3	FAN	[M]
8	RGB0124-S	DVD BADGE	[M]
9	RGC0028-W	REFLECTION PLATE	[M]
10	RGK1342C-Q	TOP ORNAMENT	[M]
11	RGK1343-Q	CD LID ORNAMENT	[M]
12	RGK1344-Q	PANEL ORNAMENT	[M]
13	RGK1345-Q	CASS ORNAMENT	[M]
14	RGK1346-S	CD LID	[M]
15	RGK1348-V	FL FILTER	[M]
16	RGK1349-Q	LED COVER	[M]
17	RGK1375-S	FL SHEET	[M]
18	RGK1376-W	BADGE FILTER	[M]
19	RGL0538-W	LIGHTING CHIP	[M]
20	RGL0539-W	DISC LIGHTING CHIP	[M]
21	RGP0846F-S2	F/PANEL	[M]
22	RGR0307D-C2	REAR PANEL	[M]
24	RGU1955A-S	POWER BUTTON	[M]
25	RGU1956-S	DISC BUTTON	[M]
26	RGU1957-S	MAIN BUTTON	[M]
27	RGU1958-S	REC BUTTON	[M]
28	RGU1959-S	OPEN/CLOSE BUTTON	[M]
29	RGU1960-S	DEMO BUTTON	[M]
30	RGU1961-Q	FUNCTION BUTTON	[M]
31	RGU1962-Q	DPL BUTTON	[M]
32	RGU1977A-Q	EQ BUTTON	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
33	RGU1977A-S	EQ BUTTON	[M]
34	RGW0361-S	MAIN VOLUME KNOB	[M]
37	RHD30002-H	SCREW	[M]
38	RHD30078	SCREW	[M]
39	RKA0059-K	LEG RUBBER	[M]
40	RKF0585-K2J	CASS. HOLDER (L)	[M]
41	RKF0615-S	CASSETTE LID	[M]
42	RKM0433-S	TOP CABINET	[M]
43	RMK0479-1	BOTTOM CHASSIS	[M]
44	RMR1350-K	WIRE CLIP	[M]
46	RMNX0029C-A	SUB TRANS HOLDER	[M]
47	RMY0241	SUB HEAT SINK	[M]
48	RMY0285	SMALL HEAT SINK	[M]
50	RXG0049	DAMPER GEAR UNIT	[M]
51	RXX0234	HEAT SINK UNIT	[M]
52	RYQ0351-Q	CINEMA BUTTON UNIT	[M]
53	SHE187-6J	PCB SUPPORT	[M]
54	SHR301	LEAD CLAMPER	[M]
55	XTB3+10J	SCREW	[M]
56	XTB3+10JFZ	SCREW	[M]
57	XTB3+20J	SCREW	[M]
58	XTBS26+10J	SCREW	[M]
59	XTBS3+8JFZ1	SCREW	[M]
61	XTW3+15T	SCREW	[M]
62	XTW3+8T	SCREW	[M]
63	RUS757ZAA	CASSETTE HALF SPRING	[M]
64	RGQ0319-W	FUNCTION LIGHTING SH	[M]
65	RMQ1042	CD LID SPACER	[M]
66	RMK0480-1	CD CHASSIS	[M]
67	RMC0432	REGULATOR CLUMPER	[M]
68	RMB0474	CASS. OPEN SPRING	[M]

16.4. Electrical Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PRINTED CIRCUIT BOARD	
	REP3091A-N	DVD MODULE (1) (SIDE: A) P.C.B.	[M](RTL)
	REP3091A-N	DVD MODULE (1)(SIDE: B) P.C.B.	[M](RTL)
	REP3303P	DVD MODULE (2)(SIDE: A) P.C.B.	[M](RTL)
	REP3303P	DVD MODULE (2) (SIDE: B)P.C.B.	[M](RTL)
	REPX0315F	MAIN / TUNER P.C.B.	[M](RTL)
	REPX0316F	PANEL P.C.B.	[M](RTL)
	REP3079A	DECK P.C.B.	[M](RTL)
	REP3077A	POWER P.C.B.	[M](RTL)
	REPX0317D	SPEAKER P.C.B.	[M](RTL)
	REPX0316F	LED P.C.B.	[M](RTL)
	REPX0316F	HEADPHONE P.C.B.	[M](RTL)
	REP2578A-N	CD LOADING P.C.B.	[M](RTL)
	REP2578A-N	CD DETECT P.C.B.	[M](RTL)
	REP2578A-N	SPINDLE POSITION P.C.B.	[M](RTL)
	REPX0317D	AC TRANSFORMER P.C.B.	[M](RTL)
	REPX0317D	SUB-TRANSFORMER P.C.B	[M](RTL)
	REPX0316F	TACT SWITCH (1) P.C.B.	[M](RTL)
	REPX0316F	TACT SWITCH (2) P.C.B.	[M](RTL)
		INTEGRATED CIRCUITS	
IC1	C0GAM0000005	IC DRIVE	[M]
IC201	NJU7313AMT2	IC SELECTOR	[M]
IC202	M5218AFPE3	IC OP AMP	[M]
IC203	M5218AP	IC OP AMP	[M]
IC204	M62456FPE1	IC BTL	[M]
IC205	M62444FPE1	IC 4CH VOL	[M]
IC206	C0JBAR000292	IC ANALOG SW	[M]
IC301	M5228FPE1	IC QUAD OP AMP	[M]
IC451	C2BBFD000307	IC MECHA CON	[M]
IC453	C2BBFD000308	IC DSP CON	[M]
IC501	RSN311W64B-P	IC HIC	[M] ⚠
IC503	STK470-050A	IC HIC	[M] ⚠
IC601	C2BBGF000359	IC MICRO-P	[M]
IC602	M62457AFPE1	IC SPECTRUM ANALYSER	[M]
IC603	C1BB00000574	IC I/O EXPANDER	[M]
IC604	C1BB00000574	IC I/O EXPANDER	[M]
IC702	C0DBAJG000002	IC REGULATOR	[M] ⚠
IC703	LM2940T5M	IC REGULATOR	[M] ⚠
IC705	M5228FPE1	IC QUAD OP AMP	[M]
IC706	M5228FPE1	IC QUAD OP AMP	[M]
IC801	C2HBZC000012	IC BH	[M]
IC971	CNB13030R2AU	IC PHOTO INTERRUPTER	[M]
IC1000	C1AA00000612	IC SW ANALOG	[M]
IC1001	AN7326K	IC REC/PB	[M]
IC2001	MN677203NP1	IC NODC	[M]
IC2061	C3ABKG000057	IC 4M DRAM	[M]
IC2501	C0GBG0000033	IC MOTOR DRIVER	[M]
IC3001	MN677533MP	I AV DECODER	[M]
IC3061	C3ABMG000103	IC 16M SDRAM	[M]
IC3071	C3ABMG000103	IC 16M SDRAM	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
IC3301	C1AB00001393	IC VIDEO BUFFER	[M]
IC4211	C0FBBK000021	IC 6CH AUDIO D/A CONVERTER	[M]
IC5201	AN8708FHK	IC FEP	[M]
IC6201	MN102H60GFC	IC CPU	[M]
IC6221	C0JBAA000001	IC INVERTER	[M]
IC6222	C0JBAA000001	IC INVERTER	[M]
IC6251	C0DBCGE00002	IC REGULATOR	[M] ⚠
IC6301	C0EBE0000070	IC RESET	[M]
IC6302	RFKFMA62F080	IC FLASH. ROM	[SPC]
IC6303	C3EBFC000030	IC 8M EEPROM	[M]
IC6501	C1DB00000582	IC CLK	[M]
		TRANSISTORS	
Q1	B1GACFGG0004	TRANSISTOR	[M]
Q201	B1GFGCAA0001	TRANSISTOR	[M]
Q202	B1ADCF000001	TRANSISTOR	[M]
Q203	B1ADCF000001	TRANSISTOR	[M]
Q204	B1GFGCAA0001	TRANSISTOR	[M]
Q205	B1ADCF000001	TRANSISTOR	[M]
Q301	B1GFGCAA0001	TRANSISTOR	[M]
Q302	B1GFGCAA0001	TRANSISTOR	[M]
Q306	B1ADCF000001	TRANSISTOR	[M]
Q351	KTA12710YTA	TRANSISTOR	[M]
Q352	B1ABCF000011	TRANSISTOR	[M]
Q353	B1ABCF000011	TRANSISTOR	[M]
Q354	B1ABCF000011	TRANSISTOR	[M]
Q373	B1ABCF000011	TRANSISTOR	[M]
Q374	B1GBCFJA0002	TRANSISTOR	[M]
Q375	B1ADCF000001	TRANSISTOR	[M]
Q381	2SB14170QA	TRANSISTOR	[M]
Q382	B1ABCF000011	TRANSISTOR	[M] ⚠
Q383	2SB621ARSTA	TRANSISTOR	[M]
Q384	B1ABCF000011	TRANSISTOR	[M] ⚠
Q385	B1GDCFJJ0002	TRANSISTOR	[M]
Q451	2SB621ARSTA	TRANSISTOR	[M]
Q452	B1GBCFJN0004	TRANSISTOR	[M]
Q501	KTC3199GRTA	TRANSISTOR	[M]
Q502	KTC3199GRTA	TRANSISTOR	[M]
Q503	KTC3199GRTA	TRANSISTOR	[M]
Q505	KTC3199GRTA	TRANSISTOR	[M]
Q506	KRA102MTA	TRANSISTOR	[M] ⚠
Q576	KTC2026	TRANSISTOR	[M] ⚠
Q580	2SB621ARSTA	TRANSISTOR	[M] ⚠
Q591	KTC3199GRTA	TRANSISTOR	[M]
Q592	2SC3940ARA	TRANSISTOR	[M] ⚠
Q594	KRC102MTA	TRANSISTOR	[M]
Q601	KRC103STA	TRANSISTOR	[M]
Q608	2SB621ARSTA	TRANSISTOR	[M]
Q609	B1GBCFJJ0002	TRANSISTOR	[M]
Q610	B1ADCF000001	TRANSISTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
Q701	B1GDCFJJ0002	TRANSISTOR	[M] ⚠
Q702	B1GBCFJN0004	TRANSISTOR	[M] ⚠
Q703	KTA1046YU	TRANSISTOR	[M] ⚠
Q704	B1ABCF000011	TRANSISTOR	[M] ⚠
Q705	B1ADCF000001	TRANSISTOR	[M] ⚠
Q706	B1GBCFJN0004	TRANSISTOR	[M]
Q708	KTA1046YU	TRANSISTOR	[M] ⚠
Q709	B1ABGC000001	TRANSISTOR	[M]
Q710	2SB621ARSTA	TRANSISTOR	[M] ⚠
Q711	B1ABCF000011	TRANSISTOR	[M]
Q712	2SB621ARSTA	TRANSISTOR	[M] ⚠
Q713	B1ABCF000011	TRANSISTOR	[M]
Q714	B1GDCFJJ0002	TRANSISTOR	[M]
Q715	B1GBCFJN0004	TRANSISTOR	[M]
Q716	B1GFGCAA0001	TRANSISTOR	[M]
Q718	B1GFGCAA0001	TRANSISTOR	[M]
Q719	B1GFGCAA0001	TRANSISTOR	[M]
Q1101	B1ABGC000001	TRANSISTOR	[M]
Q1201	B1ABGC000001	TRANSISTOR	[M]
Q1302	B1GDCFJJ0002	TRANSISTOR	[M]
Q1303	B1GBCFGH0001	TRANSISTOR	[M]
Q1304	B1GDCFGH0002	TRANSISTOR	[M]
Q1305	B1GBCFJJ0002	TRANSISTOR	[M]
Q1306	B1ABCF000011	TRANSISTOR	[M]
Q1307	B1ABCF000011	TRANSISTOR	[M]
Q1308	B1GBCFNA0002	TRANSISTOR	[M]
Q1309	B1AAGC000007	TRANSISTOR	[M]
Q1310	B1AAGC000007	TRANSISTOR	[M]
Q1312	B1ABCF000011	TRANSISTOR	[M]
Q1313	B1AAAL000002	TRANSISTOR	[M]
Q1314	B1GDCFGH0002	TRANSISTOR	[M]
Q1315	KTA12710YTA	TRANSISTOR	[M]
Q1316	2SD09650RA	TRANSISTOR	[M]
Q1317	B1ABGC000001	TRANSISTOR	[M]
Q5211	B1BDBF000004	TRANSISTOR	[M]
Q5215	B1BDBF000004	TRANSISTOR	[M]
QR3301	UN5212TX	CHIP TRANSISTOR	[M]
QR5251	UNR212100L	CHIP TRANSISTOR	[M] ⚠
QR6301	UN5212TX	CHIP TRANSISTOR	[M]
		DIODES	
D2	B0BA4R600003	DIODE	[M]
D201	1SS355TE17	DIODE	[M]
D202	1SS355TE17	DIODE	[M]
D203	B0BC5R000009	DIODE	[M]
D216	B0BC5R000009	DIODE	[M]
D315	1SS355TE17	DIODE	[M]
D317	1SS355TE17	DIODE	[M]
D351	B0ADCJ000020	DIODE	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
D371	B0ADCJ000020	DIODE	[M]
D373	1SS355TE17	DIODE	[M]
D381	B0ADCC000002	DIODE	[M]
D383	B0ADCC000002	DIODE	[M]
D385	RL1N4003N02	DIODE	[M]
D386	B0BC5R000009	DIODE	[M]
D401	1SS355TE17	DIODE	[M]
D451	RL1N4003N02	DIODE	[M]
D454	RL1N4003N02	DIODE	[M]
D456	RL1N4003N02	DIODE	[M]
D500	B0AACK000004	DIODE	[M]
D501	RK306LFU1	DIODE	[M]
D502	RK306LFU1	DIODE	[M]
D503	B0AACK000004	DIODE	[M]
D551	B0EAKM000085	DIODE	[M] ⚠
D552	B0EAKM000085	DIODE	[M] ⚠
D553	B0EAKM000085	DIODE	[M] ⚠
D554	B0EAKM000085	DIODE	[M] ⚠
D561	1N5402BM21	DIODE	[M] ⚠
D562	1N5402BM21	DIODE	[M] ⚠
D563	1N5402BM21	DIODE	[M] ⚠
D565	1N5402BM21	DIODE	[M] ⚠
D566	1N5402BM21	DIODE	[M] ⚠
D568	1N5402BM21	DIODE	[M] ⚠
D569	B0EAKM000085	DIODE	[M]
D570	B0EAKM000085	DIODE	[M]
D572	B0EAKM000085	DIODE	[M]
D573	B0AACK000004	DIODE	[M]
D579	B0BA9R000007	DIODE	[M]
D580	B0BA01500036	DIODE	[M]
D581	B0EAKM000085	DIODE	[M] ⚠
D582	B0EAKM000085	DIODE	[M] ⚠
D583	B0EAKM000085	DIODE	[M] ⚠
D584	B0EAKM000085	DIODE	[M] ⚠
D585	B0EAKM000085	DIODE	[M] ⚠
D586	B0EAKM000085	DIODE	[M] ⚠
D587	B0BA02800001	DIODE	[M]
D592	B0EAKM000085	DIODE	[M]
D594	B0EAKM000085	DIODE	[M]
D595	B0BA6R800007	DIODE	[M]
D596	MA2C700A0F	DIODE	[M]
D601	LNJ201LPQJA	DIODE	[M]
D615	SLR325MCT31W	DIODE	[M]
D616	SLR325MCT31W	DIODE	[M]
D617	SLR325MCT31W	DIODE	[M]
D618	SLR325MCT31W	DIODE	[M]
D619	SLR325MCT31W	DIODE	[M]
D620	SELS5923C	DIODE	[M]
D621	SLR325MCT31W	DIODE	[M]



Ref. No.	Part No.	Part Name & Description	Remarks
D622	SLR325MCT31W	DIODE	[M]
D623	SLR325MCT31W	DIODE	[M]
D624	SLR325MCT31W	DIODE	[M]
D627	SLR325MCT31W	DIODE	[M]
D628	SLR325MCT31W	DIODE	[M]
D629	SLR325MCT31W	DIODE	[M]
D630	SELS5923C	DIODE	[M]
D631	SLR325MCT31W	DIODE	[M]
D632	SLR325MCT31W	DIODE	[M]
D633	SLR325MCT31W	DIODE	[M]
D634	SLR325MCT31W	DIODE	[M]
D635	SLR325MCT31W	DIODE	[M]
D637	SLR325MCT31W	DIODE	[M]
D640	MA729TX	DIODE	[M]
D652	1SS380TE-17	DIODE	[M]
D653	1SS380TE-17	DIODE	[M]
D654	1SS355TE17	DIODE	[M]
D656	1SS355TE17	DIODE	[M]
D658	MA8047MTX	DIODE	[M]
D672	1SS355TE17	DIODE	[M]
D701	RL1N4003N02	DIODE	[M] 
D702	RL1N4003N02	DIODE	[M] 
D703	RL1N4003N02	DIODE	[M] 
D704	RL1N4003N02	DIODE	[M] 
D705	B0ADCC000002	DIODE	[M]
D706	1SS355TE17	DIODE	[M]
D707	1SS355TE17	DIODE	[M]
D708	1SS355TE17	DIODE	[M]
D709	1SS355TE17	DIODE	[M]
D711	SFPB-72V	DIODE	[M]
D712	B0ADCC000002	DIODE	[M]
D713	1SS355TE17	DIODE	[M]
D714	B0ADCC000002	DIODE	[M]
D715	1SS355TE17	DIODE	[M]
D716	B0ADCC000002	DIODE	[M]
D718	B0BC7R500001	DIODE	[M]
D720	RL1N4003N02	DIODE	[M]
D727	B0BC9R000008	DIODE	[M]
D728	B0BC5R000009	DIODE	[M]
D729	1SS355TE17	DIODE	[M]
D730	1SS355TE17	DIODE	[M]
D971	MA2C16500E	DIODE	[M]
D1301	1SS355TE17	DIODE	[M]
D2001	MA2J11100L	DIODE	[M]
D5251	MA2J72800L	DIODE	[M]
D6201	MA2J72800L	DIODE	[M]
D6301	MA2SD2400L	DIODE	[M]
LB2001	J0JHC0000045	CHIP CAPACITOR	[M]
LB2011	VLP0323A601R	CHIP INDUCTOR	[M]
LB2012	VLP0323A601R	CHIP INDUCTOR	[M]
LB2013	VLP0323A601R	CHIP INDUCTOR	[M]
LB2014	VLP0323A601R	CHIP INDUCTOR	[M]



Ref. No.	Part No.	Part Name & Description	Remarks
LB2015	VLP0323A601R	CHIP INDUCTOR	[M]
LB2016	VLP0323A601R	CHIP INDUCTOR	[M]
LB2017	VLP0323A601R	CHIP INDUCTOR	[M]
LB2018	VLP0323A601R	CHIP INDUCTOR	[M]
LB2019	VLP0323A601R	CHIP INDUCTOR	[M]
LB2020	VLP0323A601R	CHIP INDUCTOR	[M]
LB2021	VLP0323A601R	CHIP INDUCTOR	[M]
LB2022	VLP0323A601R	CHIP INDUCTOR	[M]
LB2023	VLP0323A601R	CHIP INDUCTOR	[M]
LB2024	VLP0323A601R	CHIP INDUCTOR	[M]
LB2025	VLP0323A601R	CHIP INDUCTOR	[M]
LB2026	VLP0323A601R	CHIP INDUCTOR	[M]
LB2027	VLP0323A601R	CHIP INDUCTOR	[M]
LB2028	VLP0323A601R	CHIP INDUCTOR	[M]
LB2029	VLP0323A601R	CHIP INDUCTOR	[M]
LB2030	VLP0323A601R	CHIP INDUCTOR	[M]
LB2031	VLP0323A601R	CHIP INDUCTOR	[M]
LB2032	VLP0323A601R	CHIP INDUCTOR	[M]
LB2033	VLP0323A601R	CHIP INDUCTOR	[M]
LB2034	VLP0323A601R	CHIP INDUCTOR	[M]
LB2035	VLP0323A601R	CHIP INDUCTOR	[M]
LB2036	VLP0323A601R	CHIP INDUCTOR	[M]
LB2037	VLP0323A601R	CHIP INDUCTOR	[M]
LB2038	VLP0323A601R	CHIP INDUCTOR	[M]
LB2039	VLP0323A601R	CHIP INDUCTOR	[M]
LB2040	VLP0323A601R	CHIP INDUCTOR	[M]
LB2041	VLP0323A601R	CHIP INDUCTOR	[M]
LB2042	J0JHC0000045	CHIP CAPACITOR	[M]
LB2043	J0JHC0000045	CHIP CAPACITOR	[M]
LB3001	J0JHC0000045	CHIP CAPACITOR	[M]
LB3002	J0JHC0000045	CHIP CAPACITOR	[M]
LB3202	D0GB101JA002	100 1/16W	[M]
LB3203	D0GB101JA002	100 1/16W	[M]
LB3204	D0GB101JA002	100 1/16W	[M]
LB3206	VLP0155-T	CHIP BEAD	[M]
LB3207	VLP0155-T	CHIP BEAD	[M]
LB3303	VLP0155-T	CHIP BEAD	[M]
LB3304	VLP0155-T	CHIP BEAD	[M]
LB3305	VLP0155-T	CHIP BEAD	[M]
LB4200	VLP0323A601R	CHIP INDUCTOR	[M]
LB4201	VLP0323A601R	CHIP INDUCTOR	[M]
LB4207	VLP0323A601R	CHIP INDUCTOR	[M]
LB4208	VLP0323A601R	CHIP INDUCTOR	[M]
LB4209	VLP0323A601R	CHIP INDUCTOR	[M]
LB4210	VLP0323A601R	CHIP INDUCTOR	[M]
LB4211	VLP0323A601R	CHIP INDUCTOR	[M]
LB4212	VLP0323A601R	CHIP INDUCTOR	[M]
LB4213	VLP0323A601R	CHIP INDUCTOR	[M]
LB4214	VLP0323A601R	CHIP INDUCTOR	[M]
LB4215	VLP0323A601R	CHIP INDUCTOR	[M]
LB4216	VLP0323A601R	CHIP INDUCTOR	[M]
LB4217	VLP0323A601R	CHIP INDUCTOR	[M]
LB5201	JALBK2HS470T	CHIP INDUCTOR	[M]
LB5202	VLP0323A601R	CHIP INDUCTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
LB5203	VLP0155-T	CHIP BEAD	[M]
LB5204	VLP0155-T	CHIP BEAD	[M]
LB5205	VLP0323A601R	CHIP INDUCTOR	[M]
LB5206	VLP0323A601R	CHIP INDUCTOR	[M]
LB6201	VLP0323A601R	CHIP INDUCTOR	[M]
LB6202	VLP0155-T	CHIP BEAD	[M]
LB6221	VLP0323A601R	CHIP INDUCTOR	[M]
LB6501	VLP0323A601R	CHIP INDUCTOR	[M]
LB6502	VLP0323A601R	CHIP INDUCTOR	[M]
LB6512	VLP0155-T	CHIP BEAD	[M]
LB6513	VLP0155-T	CHIP BEAD	[M]
LB6514	VLP0155-T	CHIP BEAD	[M]
LB6515	VLP0157-T	CHIP INDUCTOR	[M]
		VARIABLE RESISTORS	
VR601	EVEKE2F3024M	VR VOLUME JOG	[M]
		SWITCHES	
S601	EVQ21405R	SW DPL	[M]
S602	EVQ21405R	SW SSS	[M]
S603	EVQ21405R	SW 3D AI	[M]
S604	EVQ21405R	SW PRESET EQ	[M]
S605	EVQ21405R	SW AMAZING	[M]
S606	EVQ21405R	SW SUB WOOFER	[M]
S607	EVQ21405R	SW TAPE EJECT	[M]
S610	EVQ21405R	SW FM MODE/BP/REV	[M]
S611	EVQ21405R	SW REC/STOP	[M]
S612	EVQ21405R	SW DISPLAY DEMO	[M]
S613	EVQ21405R	SW CLOCK/TIMER	[M]
S614	EVQ21405R	SW PLAY/REC	[M]
S615	EVQ21405R	SW SELECTOR	[M]
S616	EVQ21405R	SW TUNE MODE	[M]
S617	EVQ21405R	SW DVD/CD	[M]
S618	EVQ21405R	SW TUNER/BAND	[M]
S619	EVQ21405R	SW TAPE	[M]
S620	EVQ21405R	SW -/VOLUME	[M]
S621	EVQ21405R	SW +/VOLUME	[M]
S622	EVQ21405R	SW MEMORY	[M]
S623	EVQ21405R	SW POWER	[M]
S625	EVQ21405R	SW MANAGER	[M]
S626	EVQ21405R	SW DISC 1	[M]
S627	EVQ21405R	SW DISC 2	[M]
S628	EVQ21405R	SW DISC 3	[M]
S629	EVQ21405R	SW DISC 4	[M]
S630	EVQ21405R	SW DISC 5	[M]
S631	EVQ21405R	SW CINEMA	[M]
S632	EVQ21405R	SW OPEN/CLOSE	[M]
S971	RSH1A018-3U	SW MODE	[M]
S972	RSH1A019-2U	SW HALF	[M]
S973	RSH1A019-2U	SW CR20	[M]
S974	RSH1A019-2U	SW RECINH_R	[M]
S975	RSH1A019-2U	SW RECINH_F	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
		SWITCHES	
SW1	RSH1A032-U	SW PUSH	[M]
SW2	RSH1A032-U	SW PUSH	[M]
SW3	RSH1A005-1U	SW	[M]
SW4	RSH1A91ZA-A	SW CD	[M]
SW5	K0L1BB000005	SW LOCK	[M]
SW2501	RSH1A048-A	SW LEAF	[M]
		CONNECTORS	
CN1	K1MN14A00049	14P FFC CONNECTOR	[M]
CN1A	RJS1A9414-1	14P CONNECTOR	[M]
CN100	RJS1A5209	9P MOLEX	[M]
CN301	RJS2A7726	FFC CONNECTOR	[M]
CN302	RJS2A7717	FFC CONNECTOR	[M]
CN351	K1KA02A00008	CONNECTOR	[M]
CN501	K1KA06A00008	SOCKET	[M]
CN501	RJS2A7715	FFC CONNECTOR	[M]
CN502	K1KA12A00066	CONNECTOR	[M]
CN503	K1KB10B00041	10P P2 MQ CONNECTOR	[M]
CN504	K1KB10B00041	10P P2 MQ CONNECTOR	[M]
CN505	RJU057W004	4P SOCKET	[M]
CN601	RJS2A8430	CONNECTOR	[M]
CN602A	RJT066H10G	CONNECTOR	[M]
CN602B	RJU066H10M	10 B-B	[M]
CN603A	RJS2A8030	P1 FFC CONNECTOR ST	[M]
CN700	K1KA02B00045	CONNECTOR	[M]
CN703	RJT029W03VT	2.5MM CONNECTOR	[M]
CN1303	RJS9T7ZA	9P DECK TO MAIN	[M]
CP201	RJT100W11	11P CONNECTOR	[M]
CP503	K1KA10A00257	10P P2 MQ CONNECTOR	[M]
CP504	K1KA10A00257	10P P2 MQ CONNECTOR	[M]
CP505	K1KA04A00205	4P B/B CONNECTOR	[M]
CP521	K1KA10A00114	10P CONNECTOR	[M]
CP1301	RJS1A6805-J	5P CONNECTOR SOCKET	[M]
CP1902	RJT071K09A	9P B/B CONNECTOR	[M]
CS971	RJU071H09M1	CONNECTOR	[M]
PS6201	K1MN10A00030	CONNECTOR	[M]
		COILS & TRANSFORMERS	
L303	G0C470JA0030	RF CHOKE COIL	[M]
L451	G0C100JA0030	INDUCTOR	[M]
L452	G0C100JA0030	INDUCTOR	[M]
L453	G0C100JA0030	INDUCTOR	[M]
L500	RLQZ371	LINE FILTER	[M] 
L601	RLBN102V-Y	CHIP INDUCTOR	[M]
L602	RLBN102V-Y	CHIP INDUCTOR	[M]
L604	G0C101JA0030	INDUCTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
L605	RLBV252AV-Y	LINE COIL	[M]
L606	G0C101JA0030	INDUCTOR	[M]
L607	RLBV252AV-Y	LINE COIL	[M]
L701	RLQT200T-J	LINE FILTER	[M]
L703	RLQT200T-J	LINE FILTER	[M]
L704	RLQT200T-J	LINE FILTER	[M]
L705	RLQT200T-J	LINE FILTER	[M]
L712	G0ZZ00001930	COIL	[M]
L750	VLP0145-T	CHIP INDUCTOR	[M]
L751	VLP0145-T	CHIP INDUCTOR	[M]
L752	VLP0145-T	CHIP INDUCTOR	[M]
L801	RLBN102V-Y	CHIP INDUCTOR	[M]
L803	RLBN102V-Y	CHIP INDUCTOR	[M]
L805	RLQT200T-J	LINE FILTER	[M]
L807	G0C100JA0030	INDUCTOR	[M]
L808	G0C100JA0030	INDUCTOR	[M]
L809	RLBN102V-Y	CHIP INDUCTOR	[M]
L814	RLQT200T-J	LINE FILTER	[M]
L1301	7L1A62N	BIAS OSC COIL	[M]
L2001	G1C100K00020	CHIP INDUCTOR	[M]
L3092	G1C100K00020	CHIP INDUCTOR	[M]
L3301	G1C220KA0038	CHIP CAPACITOR	[M]
L4211	G1C220KA0038	CHIP CAPACITOR	[M]
L5201	ELJEA100KF	CHIP INDUCTOR	[M]
L5202	ELJEA100KF	CHIP INDUCTOR	[M]
L5251	ELJEA100KF	CHIP INDUCTOR	[M]
L6501	G1C220KA0038	CHIP CAPACITOR	[M]
L6502	G1C220KA0038	CHIP CAPACITOR	[M]
T501	ETP76VST613A	POWER TRANSFORMER	[M] ⚠
T502	G4C2AAJ00001	BACK UP TRANSFORMER	[M] ⚠
		COMPONENT COMBINATION	
Z501	ERZV10V511CS	ZENER	[M] ⚠
Z601	B3RAB0000016	REMOTE SENSOR	[M]
Z971	RGSD12A1445T	RADA RESISTOR	[M]
RAL201	RAN0004MM-2	TUNER PACK	[M]
		RELAY	
RLY502	RSY0040M-0	PRIMARY RELAY	[M]
		OSCILLATORS	
X451	RSXY8M00D01T	CERAMIC RESONATOR	[M]
X452	RSXY8M00D01T	CERAMIC RESONATOR	[M]
X601	RSXD32K7S02	CRYSTAL OSCILLATOR	[M]
X602	H2B400400013	OSCILLATOR	[M]
X801	RSXZ36M8M01T	RESONATOR	[M]
X6501	VSX1044	CRYSTAL OSCILLATOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
		DISPLAY TUBE	
FL601	A2BD00000050	FL DISPLAY	[M]
FL4201	F1H0J1050018	1 6.3V	[M]
FL6251	F1H0J1050018	1 6.3V	[M]
FL6253	F1H0J1050018	1 6.3V	[M]
FL6254	F1H0J1050018	1 6.3V	[M]
FL6255	VL1491S104T	CHIP FILTER	[M]
		FUSES	
F1	K5D202BK0005	250V 2A FUSE	[M] ⚠
		FUSE HOLDERS	
FC501	EYF52BC	FUSE HOLDER	[M]
FC502	EYF52BC	FUSE HOLDER	[M]
		FUSE PROTECTOR	
FP501	K5G402AA0002	FUSE PROTECTOR	[M] ⚠
FP701	K5G402AA0002	FUSE PROTECTOR	[M] ⚠
FP2001	K1MN50B00010	CONNECTOR	[M]
FP3202	K1MN17B00041	CONNECTOR	[M]
FP3203	K1MN15B00037	CONNECTOR	[M]
FP4202	K1MN26B00037	CONNECTOR	[M]
FP5201	K1MN30B00098	CONNECTOR	[M]
FP5202	K1MN50B00010	CONNECTOR	[M]
		HOLDERS	
H502	RJS1A5512	12P WIRE HOLDER	[M]
H521	RJS1A5510	WIRE HOLDER	[M]
H601	RMR0318	9P CABLE HOLDER	[M]
H602	RMR0315	6P CABLE HOLDER	[M]
H603A	RMR0318	9P CABLE HOLDER	[M]
H603B	RMR0318	9P CABLE HOLDER	[M]
H605A	RMR0315	6P CABLE HOLDER	[M]
H605B	RMR0315	6P CABLE HOLDER	[M]
H1304	RMR0318	9P CABLE HOLDER	[M]
H0L1	RMN0635	FL HOLDER	[M]
		JACKS	
JK201	RJH2213N	JK 2P RCA PIN	[M]
JK500	K2AA2B000004	JK AC INLET	[M] ⚠
JK501	RJH5603-10	JK SPEAKER TERMINAL	[M]
JK503	RJH5603-9	JK SPEAKER	[M]
JK603	RJJ37TK07-X	JK HP/MIC	[M]
JK701	K1U208B00002	JK VIDEO	[M]
		EARTH TERMINAL	



Ref. No.	Part No.	Part Name & Description	Remarks
E500	SNE1004-2	EARTH TERMINAL	[M]
E501	SNE1004-2	EARTH TERMINAL	[M]
		WIRES	
W1	REEX0059	WIRE (BLUE)	[M]
W1	REZ1023-1	4P WIRE	[M]
W2	REEX0060	WIRE (RED)	[M]
W2	REZ1024	3P WIRE	[M]
W500	REX1076	INLET-PT FLAT WIRE	[M]
W502	REX1071-1	TRANS-POWER FLAT	[M]
W503	REX1075	PT-MAIN FLAT WIRE	[M]
W521	REX1073	POWER-SPEAKER FLAT	[M]
W601	RWJ1109100XX	PANEL-DECK FLAT WIRE	[M]
W602	REX1072	TRANS-PANEL FLAT	[M]
W603	RWJ1109230XX	WIRE	[M]
W605	RWJ1106100XX	BABY PT-MAIN FLAT	[M]
W700	REX1074	2P WIRE	[M]
W1304	RWJ1109140XX	WIRE	[M]
W1903	RWJ0102050CK	MAIN-MECHA MOTOR WIR	[M]
		RESISTORS	
R1	ERDS2TJ102T	1K 1/4W	[M]
R5	ERJ3GEY0R00V	0 1/16W	[M]
R200	ERJ3GEYJ472V	4.7K 1/16W	[M]
R201	ERJ3GEYJ123V	12K 1/16W	[M]
R202	ERJ3GEYJ123V	12K 1/16W	[M]
R203	D0GB122JA019	1.2K 1/16W	[M]
R204	D0GB122JA019	1.2K 1/16W	[M]
R205	ERJ3GEYJ472V	4.7K 1/16W	[M]
R206	ERJ3GEYJ102V	1K 1/16W	[M]
R207	D0GB183JA002	18K 1/16W	[M]
R208	ERJ3GEYJ223V	22K 1/16W	[M]
R211	ERJ3GEYJ102V	1K 1/16W	[M]
R212	ERJ3GEYJ102V	1K 1/16W	[M]
R213	ERJ3GEYJ682V	6.8K 1/16W	[M]
R214	ERJ3GEYJ682V	6.8K 1/16W	[M]
R215	ERJ3GEYJ682V	6.8K 1/16W	[M]
R216	ERJ3GEYJ682V	6.8K 1/16W	[M]
R217	D0GB183JA002	18K 1/16W	[M]
R218	D0GB183JA002	18K 1/16W	[M]
R219	D0GB272JA002	2.7K 1/16W	[M]
R220	D0GB272JA002	2.7K 1/16W	[M]
R221	ERJ3GEYJ123V	12K 1/16W	[M]
R222	ERJ3GEYJ103V	10K 1/16W	[M]
R223	D0GB272JA002	2.7K 1/16W	[M]
R224	ERJ3GEYJ473V	47K 1/16W	[M]
R225	D0GB392JA002	3.9K 1/16W	[M]
R226	D0GB392JA002	3.9K 1/16W	[M]
R227	D0GB392JA002	3.9K 1/16W	[M]
R228	D0GB392JA002	3.9K 1/16W	[M]
R229	ERJ3GEYJ473V	47K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R230	ERJ3GEYJ473V	47K 1/16W	[M]
R231	ERJ3GEYJ472V	4.7K 1/16W	[M]
R232	ERJ3GEYJ472V	4.7K 1/16W	[M]
R233	ERJ3GEYJ472V	4.7K 1/16W	[M]
R234	ERJ3GEYJ472V	4.7K 1/16W	[M]
R235	ERJ3GEYJ221V	220 1/16W	[M]
R236	ERJ3GEYJ221V	220 1/16W	[M]
R237	ERJ3GEYJ104V	100K 1/16W	[M]
R238	ERJ3GEYJ104V	100K 1/16W	[M]
R239	ERJ3GEYJ473V	47K 1/16W	[M]
R240	ERJ3GEYJ473V	47K 1/16W	[M]
R241	D0GB563JA002	56K 1/16W	[M]
R242	D0GB563JA002	56K 1/16W	[M]
R243	ERJ3GEYJ822V	8.2K 1/16W	[M]
R244	ERJ3GEYJ822V	8.2K 1/16W	[M]
R245	D0GB333JA002	33K 1/16W	[M]
R246	D0GB333JA002	33K 1/16W	[M]
R247	D0GB272JA002	2.7K 1/16W	[M]
R248	D0GB272JA002	2.7K 1/16W	[M]
R249	ERJ3GEYJ471V	470 1/16W	[M]
R250	ERJ3GEYJ471V	470 1/16W	[M]
R251	D0GB1R0JA002	1 1/16W	[M]
R252	D0GB1R0JA002	1 1/16W	[M]
R253	ERJ3GEYJ222V	2.2K 1/16W	[M]
R254	ERJ3GEYJ222V	2.2K 1/16W	[M]
R255	D0GB154JA002	150K 1/16W	[M]
R256	ERJ3GEYJ102V	1K 1/16W	[M]
R259	ERJ3GEYJ103V	10K 1/16W	[M]
R260	ERJ3GEYJ103V	10K 1/16W	[M]
R261	D0GB334JA002	330K 1/16W	[M]
R262	D0GB334JA002	330K 1/16W	[M]
R263	ERJ3GEYJ223V	22K 1/16W	[M]
R264	ERJ3GEYJ223V	22K 1/16W	[M]
R265	ERJ3GEYJ102V	1K 1/16W	[M]
R266	ERJ3GEYJ102V	1K 1/16W	[M]
R267	D0GB332JA002	3.3K 1/16W	[M]
R268	D0GB332JA002	3.3K 1/16W	[M]
R269	D0GB683JA002	68K 1/16W	[M]
R270	D0GB683JA002	68K 1/16W	[M]
R271	D0GB390JA019	39 1/16W	[M]
R272	D0GB390JA019	39 1/16W	[M]
R273	D0GB390JA019	39 1/16W	[M]
R274	D0GB390JA019	39 1/16W	[M]
R275	ERJ3GEYJ561V	560 1/16W	[M]
R276	ERJ3GEYJ561V	560 1/16W	[M]
R277	ERJ3GEYJ123V	12K 1/16W	[M]
R278	ERJ3GEYJ473V	47K 1/16W	[M]
R279	ERJ3GEYJ182V	1.8K 1/16W	[M]
R280	ERJ3GEYJ473V	47K 1/16W	[M]
R281	D0GB183JA002	18K 1/16W	[M]
R282	ERJ3GEYJ473V	47K 1/16W	[M]
R283	D0GB393JA002	39K 1/16W	[M]
R284	D0GB393JA002	39K 1/16W	[M]
R285	ERJ3GEYJ153V	15K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R286	ERJ3GEYJ104V	100K 1/16W	[M]
R287	D0GB273JA002	27K 1/16W	[M]
R288	ERJ3GEYJ824V	820K 1/16W	[M]
R289	ERJ3GEYJ472V	4.7K 1/16W	[M]
R290	ERJ3GEYJ472V	4.7K 1/16W	[M]
R292	D0GB183JA002	18K 1/16W	[M]
R293	ERJ3GEYJ223V	22K 1/16W	[M]
R294	ERJ3GEYJ102V	1K 1/16W	[M]
R296	D0GB274JA002	270K 1/16W	[M]
R299	D0GB183JA002	18K 1/16W	[M]
R301	D0GB273JA002	27K 1/16W	[M]
R302	D0GB273JA002	27K 1/16W	[M]
R303	D0GB332JA002	3.3K 1/16W	[M]
R304	D0GB332JA002	3.3K 1/16W	[M]
R305	D0GB563JA002	56K 1/16W	[M]
R306	D0GB563JA002	56K 1/16W	[M]
R307	ERJ3GEYJ102V	1K 1/16W	[M]
R308	ERJ3GEYJ102V	1K 1/16W	[M]
R309	ERJ3GEYJ123V	12K 1/16W	[M]
R310	D0GB332JA002	3.3K 1/16W	[M]
R311	ERJ3GEYJ184V	180K 1/16W	[M]
R312	D0GB273JA002	27K 1/16W	[M]
R313	D0GB272JA002	2.7K 1/16W	[M]
R314	D0GB332JA002	3.3K 1/16W	[M]
R315	D0GB563JA002	56K 1/16W	[M]
R316	D0GB563JA002	56K 1/16W	[M]
R317	ERJ3GEYJ102V	1K 1/16W	[M]
R318	ERJ3GEYJ102V	1K 1/16W	[M]
R336	ERJ3GEYJ153V	15K 1/16W	[M]
R351	ERJ3GEYJ103V	10K 1/16W	[M]
R352	D0GB563JA002	56K 1/16W	[M]
R353	ERJ3GEYJ472V	4.7K 1/16W	[M]
R354	ERJ3GEYJ824V	820K 1/16W	[M]
R355	D0GB562JA002	5.6K 1/16W	[M]
R356	D0GB101JA002	100 1/16W	[M]
R357	ERJ3GEYJ103V	10K 1/16W	[M]
R358	D0GB563JA002	56K 1/16W	[M]
R359	ERDS1FVJ180T	18 1/2W	[M]
R361	D0GB563JA002	56K 1/2W	[M]
R362	ERJ3GEYJ103V	10K 1/16W	[M]
R363	ERJ3GEYJ104V	100K 1/16W	[M]
R366	ERJ3GEYJ224V	220K 1/16W	[M]
R368	D0GB333JA002	33K 1/16W	[M]
R374	D0GB332JA002	3.3K 1/16W	[M]
R375	D0GB393JA002	39K 1/16W	[M]
R376	ERJ3GEYJ472V	4.7K 1/16W	[M]
R377	ERJ3GEYJ103V	10K 1/16W	[M]
R378	ERJ3GEYJ102V	1K 1/16W	[M]
R379	ERJ3GEYJ224V	220K 1/16W	[M]
R380	D0GB683JA002	68K 1/16W	[M]
R381	D0GB122JA019	1.2K 1/16W	[M]
R382	D0GB122JA019	1.2K 1/16W	[M]
R383	ERJ3GEYJ472V	4.7K 1/16W	[M]
R384	D0GB1R0JA002	1 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R385	ERJ3GEYJ472V	4.7K 1/16W	[M]
R386	ERJ3GEYJ472V	4.7K 1/16W	[M]
R387	D0GB1R0JA002	1 1/16W	[M]
R388	ERJ3GEYJ823V	82K 1/16W	[M]
R390	ERJ3GEYJ473V	47K 1/16W	[M]
R401	ERJ3GEYJ104V	100K 1/16W	[M]
R402	D0GB332JA002	3.3K 1/16W	[M]
R403	ERJ3GEYJ473V	47K 1/16W	[M]
R404	ERJ3GEYJ102V	1K 1/16W	[M]
R405	D0GB183JA002	18K 1/16W	[M]
R406	ERJ3GEYJ223V	22K 1/16W	[M]
R407	ERJ3GEYJ103V	10K 1/16W	[M]
R408	ERJ3GEYJ823V	82K 1/16W	[M]
R409	ERJ3GEYJ823V	82K 1/16W	[M]
R410	ERJ3GEYJ822V	8.2K 1/16W	[M]
R411	ERJ3GEYJ153V	15K 1/16W	[M]
R414	ERJ3GEYJ103V	10K 1/16W	[M]
R415	D0GB333JA002	33K 1/16W	[M]
R416	ERJ3GEYJ103V	10K 1/16W	[M]
R417	D0GB332JA002	3.3K 1/16W	[M]
R418	D0GB332JA002	3.3K 1/16W	[M]
R419	ERJ3GEYJ472V	4.7K 1/16W	[M]
R420	ERJ3GEYJ104V	100K 1/16W	[M]
R427	ERJ3GEYJ102V	1K 1/16W	[M]
R431	ERJ3GEYJ102V	1K 1/16W	[M]
R432	D0GB152JA002	1.5K 1/16W	[M]
R433	ERJ3GEYJ331V	330 1/16W	[M]
R434	ERJ3GEYJ331V	330 1/16W	[M]
R435	ERJ3GEYJ331V	330 1/16W	[M]
R436	ERJ3GEYJ472V	4.7K 1/16W	[M]
R437	ERJ3GEYJ472V	4.7K 1/16W	[M]
R438	ERJ3GEYJ472V	4.7K 1/16W	[M]
R439	ERJ3GEYJ472V	4.7K 1/16W	[M]
R441	ERJ3GEYJ103V	10K 1/16W	[M]
R447	ERJ3GEYJ153V	15K 1/16W	[M]
R448	ERJ3GEYJ153V	15K 1/16W	[M]
R451	ERJ3GEYJ102V	1K 1/16W	[M]
R452	ERJ3GEYJ103V	10K 1/16W	[M]
R454	ERJ3GEYJ103V	10K 1/16W	[M]
R455	ERJ3GEYJ221V	220 1/16W	[M]
R456	ERJ3GEYJ221V	220 1/16W	[M]
R457	ERJ3GEYJ221V	220 1/16W	[M]
R458	ERJ3GEYJ221V	220 1/16W	[M]
R459	ERJ3GEYJ221V	220 1/16W	[M]
R460	ERJ3GEYJ681V	680 1/16W	[M]
R461	ERJ3GEYJ472V	4.7K 1/16W	[M]
R462	ERJ3GEYJ473V	47K 1/16W	[M]
R463	ERJ3GEYJ472V	4.7K 1/16W	[M]
R464	ERJ3GEYJ103V	10K 1/16W	[M]
R465	ERJ3GEYJ472V	4.7K 1/16W	[M]
R471	ERJ3GEYJ221V	220 1/16W	[M]
R472	ERJ3GEYJ221V	220 1/16W	[M]
R473	ERJ3GEYJ221V	220 1/16W	[M]
R474	ERJ3GEYJ221V	220 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R475	ERJ3GEYJ103V	10K 1/16W	[M]
R476	ERJ3GEYJ102V	1K 1/16W	[M]
R477	ERJ3GEYJ221V	220 1/16W	[M]
R478	ERJ3GEYJ681V	680 1/16W	[M]
R479	ERJ3GEYJ472V	4.7K 1/16W	[M]
R480	ERJ3GEYJ104V	100K 1/16W	[M]
R481	ERJ3GEYJ472V	4.7K 1/16W	[M]
R483	ERJ3GEYJ472V	4.7K 1/16W	[M]
R485	ERJ3GEYJ103V	10K 1/16W	[M]
R486	ERJ3GEYJ472V	4.7K 1/16W	[M]
R487	ERJ3GEYJ104V	100K 1/16W	[M]
R488	ERJ3GEYJ104V	100K 1/16W	[M]
R489	ERJ3GEYJ221V	220 1/16W	[M]
R490	ERJ3GEYJ221V	220 1/16W	[M]
R491	ERJ3GEYJ221V	220 1/16W	[M]
R492	ERJ3GEYJ221V	220 1/16W	[M]
R493	ERJ3GEYJ221V	220 1/16W	[M]
R494	ERJ3GEYJ102V	1K 1/16W	[M]
R495	ERJ3GEYJ472V	4.7K 1/16W	[M]
R496	ERJ3GEYJ221V	220 1/16W	[M]
R497	ERJ3GEYJ221V	220 1/16W	[M]
R498	ERJ3GEYJ102V	1K 1/16W	[M]
R499	ERJ3GEYJ102V	1K 1/16W	[M]
R501	ERDS2TJ392T	3.9K 1/4W	[M]
R502	ERDS2TJ392T	3.9K 1/4W	[M]
R503	ERDS2TJ153T	15K 1/4W	[M]
R504	ERDS2TJ153T	15K 1/4W	[M]
R505	ERDS2TJ153T	15K 1/4W	[M]
R506	ERDS2TJ153T	15K 1/4W	[M]
R507	ERDS2TJ392T	3.9K 1/4W	[M]
R508	ERDS2TJ392T	3.9K 1/4W	[M]
R509	ERDS2TJ332T	3.3K 1/4W	[M]
R510	ERDS2TJ392T	3.9K 1/4W	[M]
R511	ERDS2TJ153T	15K 1/4W	[M]
R512	ERDS2TJ224T	220K 1/4W	[M]
R513	ERDS2TJ563T	56K 1/4W	[M]
R514	ERDS2TJ563T	56K 1/4W	[M]
R515	ERDS2TJ563T	56K 1/4W	[M]
R516	ERDS2TJ563T	56K 1/4W	[M]
R517	ERDS2TJ563T	56K 1/4W	[M]
R518	ERDS2TJ563T	56K 1/4W	[M]
R519	ERDS2TJ824T	820K 1/4W	[M]
R520	ERDS2TJ103T	10K 1/4W	[M]
R521	ERDS2TJ103T	10K 1/4W	[M]
R522	ERDS2TJ273T	27K 1/4W	[M]
R523	ERDS2TJ124T	120K 1/4W	[M]
R524	ERDS2TJ124T	120K 1/4W	[M]
R525	ERDS2TJ154T	150K 1/4W	[M]
R526	ERDS2TJ124T	120K 1/4W	[M]
R527	ERDS2TJ124T	120K 1/4W	[M]
R528	ERDS2TJ154T	150K 1/4W	[M]
R529	ERDS2TJ223T	22K 1/4W	[M]
R537	ERDS1FVJ100T	10 1/2W	[M]
R538	ERDS1FVJ100T	10 1/2W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R539	ERDS1FVJ100T	10 1/2W	[M]
R540	ERDS1FVJ100T	10 1/2W	[M]
R541	ERDS1FVJ100T	10 1/2W	[M]
R542	ERDS1FVJ100T	10 1/2W	[M]
R545	ERDS2TJ153T	15K 1/4W	[M]
R567	ERDS2TJ2R2T	2.2 1/4W	[M]
R568	ERDS2TJ2R2T	2.2 1/4W	[M]
R570	ERD2FCVG390T	39 1/4W	[M]
R571	ERDS2TJ473T	47K 1/4W	[M]
R572	ERDS2TJ153T	15K 1/4W	[M]
R573	ERDS2TJ392T	3.9K 1/4W	[M]
R574	ERDS2TJ474T	470K 1/4W	[M]
R575	ERDS2TJ154T	150K 1/4W	[M]
R576	ERDS2TJ562T	5.6K 1/4W	[M]
R578	ERDS2TJ152T	1.5K 1/4W	[M]
R579	ERDS2TJ332T	3.3K 1/4W	[M]
R580	ERDS2TJ824T	820K 1/4W	[M]
R581	ERDS1FVJ472T	4.7K 1/2W	[M]
R585	ERDS2TJ122T	1.2K 1/4W	[M]
R586	ERDS2TJ152T	1.5K 1/4W	[M]
R587	ERDS2TJ103T	10K 1/4W	[M]
R588	ERDS2TJ472T	4.7K 1/4W	[M]
R589	ERDS2TJ151T	150 1/4W	[M]
R592	ERDS2TJ180T	18 1/4W	[M]
R593	ERDS2TJ103T	10K 1/4W	[M]
R594	ERDS2TJ103T	10K 1/4W	[M]
R595	ERDS2TJ332T	3.3K 1/4W	[M]
R596	ERDS2TJ151T	150 1/4W	[M]
R597	ERDS2TJ472T	4.7K 1/4W	[M]
R598	ERDS2TJ2R2T	2.2 1/4W	[M]
R599	ERDS2TJ180T	18 1/4W	[M]
R601	ERJ3GEYJ102V	1K 1/16W	[M]
R607	ERJ3GEYJ102V	1K 1/16W	[M]
R608	ERJ3GEYJ681V	680 1/16W	[M]
R609	ERJ3GEYJ473V	47K 1/16W	[M]
R610	ERJ3GEYJ102V	1K 1/16W	[M]
R611	ERJ3GEYJ102V	1K 1/16W	[M]
R612	D0GB101JA002	100 1/16W	[M]
R613	ERJ3GEYJ102V	1K 1/16W	[M]
R614	ERJ3GEYJ102V	1K 1/16W	[M]
R615	ERJ3GEYJ102V	1K 1/16W	[M]
R616	D0GB122JA019	1.2K 1/16W	[M]
R617	ERJ3GEYJ182V	1.8K 1/16W	[M]
R618	ERJ3GEYJ472V	4.7K 1/16W	[M]
R619	ERJ3GEYJ682V	6.8K 1/16W	[M]
R623	ERJ3GEYJ102V	1K 1/16W	[M]
R624	ERJ3GEYJ102V	1K 1/16W	[M]
R625	D0GB122JA019	1.2K 1/16W	[M]
R626	ERJ3GEYJ222V	2.2K 1/16W	[M]
R627	D0GB272JA002	2.7K 1/16W	[M]
R629	ERJ3GEYJ473V	47K 1/16W	[M]
R630	ERJ3GEYJ473V	47K 1/16W	[M]
R631	D0GB121JA002	120 1/16W	[M]
R632	D0GB101JA002	100 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R636	D0GB152JA002	1.5K 1/16W	[M]
R637	ERJ3GEYJ223V	22K 1/16W	[M]
R638	D0GB101JA002	100 1/16W	[M]
R639	D0GB101JA002	100 1/16W	[M]
R640	D0GB101JA002	100 1/16W	[M]
R641	D0GB101JA002	100 1/16W	[M]
R642	D0GB101JA002	100 1/16W	[M]
R643	D0GB101JA002	100 1/16W	[M]
R644	D0GB101JA002	100 1/16W	[M]
R645	ERJ3GEYJ103V	10K 1/16W	[M]
R646	ERJ3GEYJ103V	10K 1/16W	[M]
R647	ERJ3GEYJ103V	10K 1/16W	[M]
R649	ERJ3GEYJ473V	47K 1/16W	[M]
R650	ERJ3GEYJ223V	22K 1/16W	[M]
R651	ERJ3GEYJ102V	1K 1/16W	[M]
R652	ERJ3GEYJ103V	10K 1/16W	[M]
R653	D0GB106JA008	10M 1/16W	[M]
R654	D0GB334JA002	330K 1/16W	[M]
R655	ERJ3GEYJ331V	330 1/16W	[M]
R656	ERJ3GEYJ223V	22K 1/16W	[M]
R657	ERJ3GEYJ473V	47K 1/16W	[M]
R661	ERJ3GEYJ104V	100K 1/16W	[M]
R662	ERJ3GEYJ104V	100K 1/16W	[M]
R663	ERJ3GEYJ104V	100K 1/16W	[M]
R664	ERJ3GEYJ104V	100K 1/16W	[M]
R671	ERJ3GEYJ104V	100K 1/16W	[M]
R672	ERJ3GEYJ104V	100K 1/16W	[M]
R673	ERJ3GEYJ104V	100K 1/16W	[M]
R674	ERJ3GEYJ104V	100K 1/16W	[M]
R675	ERJ3GEYJ104V	100K 1/16W	[M]
R676	ERJ3GEYJ104V	100K 1/16W	[M]
R677	ERJ3GEYJ104V	100K 1/16W	[M]
R678	ERJ3GEYJ104V	100K 1/16W	[M]
R679	ERJ3GEYJ104V	100K 1/16W	[M]
R680	ERJ3GEYJ223V	22K 1/16W	[M]
R682	ERJ3GEYJ103V	10K 1/16W	[M]
R683	ERJ3GEYJ103V	10K 1/16W	[M]
R684	ERJ3GEYJ103V	10K 1/16W	[M]
R685	ERJ3GEYJ104V	100K 1/16W	[M]
R686	ERJ3GEYJ104V	100K 1/16W	[M]
R687	ERJ3GEYJ104V	100K 1/16W	[M]
R688	D0GB680JA019	68 1/16W	[M]
R689	D0GB680JA019	68 1/16W	[M]
R690	D0GB474JA002	470K 1/16W	[M]
R691	ERJ3GEYJ472V	4.7K 1/16W	[M]
R694	ERJ3GEYJ104V	100K 1/16W	[M]
R695	ERJ3GEYJ223V	22K 1/16W	[M]
R697	ERJ3GEYJ472V	4.7K 1/16W	[M]
R698	ERJ3GEYJ223V	22K 1/16W	[M]
R699	ERJ3GEYJ102V	1K 1/16W	[M]
R701	ERJ3GEYJ222V	2.2K 1/16W	[M]
R703	ERJ3GEYJ104V	100K 1/16W	[M]
R704	ERJ3GEYJ103V	10K 1/16W	[M]
R707	ERJ3GEYJ223V	22K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R709	D0GB183JA002	18K 1/16W	[M]
R710	ERJ3GEYJ472V	4.7K 1/16W	[M]
R711	ERJ3GEYJ561V	560 1/16W	[M]
R712	ERJ3GEYJ331V	330 1/16W	[M]
R714	ERJ3GEYJ102V	1K 1/16W	[M]
R716	ERJ3GEYJ102V	1K 1/16W	[M]
R717	ERJ3GEYJ153V	15K 1/16W	[M]
R718	ERJ3GEYJ473V	47K 1/16W	[M]
R719	D0GB154JA002	150K 1/16W	[M]
R720	ERJ3GEYJ472V	4.7K 1/16W	[M]
R721	ERJ3GEYJ681V	680 1/16W	[M]
R722	D0GB151JA008	150 1/16W	[M]
R723	ERJ3GEYJ102V	1K 1/16W	[M]
R724	ERJ3GEYJ822V	8.2K 1/16W	[M]
R725	ERJ3GEYJ222V	2.2K 1/16W	[M]
R726	D0GB183JA002	18K 1/16W	[M]
R727	ERJ3GEYJ222V	2.2K 1/16W	[M]
R728	ERJ3GEYJ102V	1K 1/16W	[M]
R729	ERJ3GEYJ103V	10K 1/16W	[M]
R730	ERJ3GEYJ153V	15K 1/16W	[M]
R731	ERJ3GEYJ104V	100K 1/16W	[M]
R732	ERJ3GEYJ153V	15K 1/16W	[M]
R733	ERJ3GEYJ103V	10K 1/16W	[M]
R734	ERJ3GEYJ223V	22K 1/16W	[M]
R735	ERJ3GEYJ223V	22K 1/16W	[M]
R736	ERJ3GEYJ104V	100K 1/16W	[M]
R737	ERJ3GEYJ472V	4.7K 1/16W	[M]
R738	D0GB183JA002	18K 1/16W	[M]
R739	ERJ3GEYJ102V	1K 1/16W	[M]
R740	ERJ3GEYJ153V	15K 1/16W	[M]
R741	ERJ3GEYJ102V	1K 1/16W	[M]
R742	ERJ3GEYJ153V	15K 1/16W	[M]
R743	ERJ3GEYJ473V	47K 1/16W	[M]
R744	ERJ3GEYJ103V	10K 1/16W	[M]
R745	D0GB334JA002	330K 1/16W	[M]
R746	D0GB1R0JA002	1 1/16W	[M]
R747	D0GB1R0JA002	1 1/16W	[M]
R748	ERJ3GEYJ473V	47K 1/16W	[M]
R749	ERJ3GEYJ102V	1K 1/16W	[M]
R750	ERJ3GEYJ473V	47K 1/16W	[M]
R751	ERJ3GEYJ102V	1K 1/16W	[M]
R752	ERJ3GEYJ223V	22K 1/16W	[M]
R753	D0GB563JA002	56K 1/16W	[M]
R754	D0GB563JA002	56K 1/16W	[M]
R755	D0GB1R0JA002	1 1/16W	[M]
R756	D0GB1R0JA002	1 1/16W	[M]
R757	D0GB183JA002	18K 1/16W	[M]
R759	ERJ3GEYJ102V	1K 1/16W	[M]
R760	ERJ3GEYJ102V	1K 1/16W	[M]
R761	ERJ3GEYJ102V	1K 1/16W	[M]
R762	ERJ3GEYJ102V	1K 1/16W	[M]
R763	ERJ3GEYJ473V	47K 1/16W	[M]
R764	ERJ3GEYJ473V	47K 1/16W	[M]
R765	D0GB154JA002	150K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R766	D0GB154JA002	150K 1/16W	[M]
R767	ERJ3GEYJ681V	680 1/16W	[M]
R768	ERJ3GEYJ472V	4.7K 1/16W	[M]
R769	ERJ3GEYJ561V	560 1/16W	[M]
R770	ERJ3GEYJ223V	22K 1/16W	[M]
R771	ERJ6GEYJ1R0V	1 1/10W	[M]
R772	ERJ6GEYJ1R0V	1 1/10W	[M]
R773	ERJ6GEYJ1R0V	1 1/10W	[M]
R774	ERJ6GEYJ1R0V	1 1/10W	[M]
R775	ERJ3GEYJ102V	1K 1/16W	[M]
R776	ERJ3GEYJ223V	22K 1/16W	[M]
R778	ERJ3GEYJ102V	1K 1/16W	[M]
R779	ERJ3GEYJ472V	4.7K 1/16W	[M]
R781	ERJ3GEYJ102V	1K 1/16W	[M]
R782	ERJ3GEYJ104V	100K 1/16W	[M]
R783	ERJ3GEYJ104V	100K 1/16W	[M]
R784	ERJ3GEYJ103V	10K 1/16W	[M]
R785	ERJ3GEYJ103V	10K 1/16W	[M]
R786	D0GB183JA002	18K 1/16W	[M]
R787	D0GB333JA002	33K 1/16W	[M]
R788	ERJ3GEYJ223V	22K 1/16W	[M]
R789	ERJ3GEYJ223V	22K 1/16W	[M]
R790	ERJ3GEYJ104V	100K 1/16W	[M]
R791	ERJ3GEYJ104V	100K 1/16W	[M]
R792	ERJ3GEYJ103V	10K 1/16W	[M]
R793	ERJ3GEYJ103V	10K 1/16W	[M]
R795	ERJ3GEYJ223V	22K 1/16W	[M]
R796	D0GB183JA002	18K 1/16W	[M]
R798	ERJ3GEYJ102V	1K 1/16W	[M]
R799	ERJ3GEYJ472V	4.7K 1/16W	[M]
R801	ERJ3GEYJ102V	1K 1/16W	[M]
R802	ERJ3GEYJ102V	1K 1/16W	[M]
R805	ERJ3GEYJ102V	1K 1/16W	[M]
R806	ERJ3GEYJ102V	1K 1/16W	[M]
R807	ERJ3GEYJ102V	1K 1/16W	[M]
R810	ERJ3GEYJ470V	47 1/16W	[M]
R811	D0GB105JA002	1M 1/16W	[M]
R812	ERJ3GEYJ221V	220 1/16W	[M]
R813	D0GB271JA002	270 1/16W	[M]
R814	D0GB122JA019	1.2K 1/16W	[M]
R815	D0GB271JA002	270 1/16W	[M]
R816	D0GB122JA019	1.2K 1/16W	[M]
R817	D0GB271JA002	270 1/16W	[M]
R818	D0GB122JA019	1.2K 1/16W	[M]
R819	D0GB271JA002	270 1/16W	[M]
R820	D0GB122JA019	1.2K 1/16W	[M]
R826	ERJ3GEYJ472V	4.7K 1/16W	[M]
R827	ERJ3GEYJ104V	100K 1/16W	[M]
R828	ERJ3GEYJ331V	330 1/16W	[M]
R829	ERJ3GEYJ331V	330 1/16W	[M]
R830	ERJ3GEYJ331V	330 1/16W	[M]
R850	ERJ3GEYJ102V	1K 1/16W	[M]
R851	ERJ3GEYJ123V	12K 1/16W	[M]
R852	D0GB122JA019	1.2K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R853	ERJ3GEYJ123V	12K 1/16W	[M]
R854	D0GB332JA002	3.3K 1/16W	[M]
R855	D0GB122JA019	1.2K 1/16W	[M]
R856	ERJ3GEYJ391V	390 1/16W	[M]
R857	ERJ3GEYJ222V	2.2K 1/16W	[M]
R858	ERJ3GEYJ222V	2.2K 1/16W	[M]
R859	ERJ3GEYJ472V	4.7K 1/16W	[M]
R860	ERJ3GEYJ682V	6.8K 1/16W	[M]
R862	ERJ3GEYJ223V	22K 1/16W	[M]
R865	ERJ3GEYJ223V	22K 1/16W	[M]
R866	ERJ3GEYJ123V	12K 1/16W	[M]
R867	ERJ3GEYJ103V	10K 1/16W	[M]
R869	ERJ3GEYJ102V	1K 1/16W	[M]
R870	D0GB392JA002	3.9K 1/16W	[M]
R871	ERJ3GEYJ103V	10K 1/16W	[M]
R873	ERJ3GEYJ123V	12K 1/16W	[M]
R874	ERJ3GEYJ102V	1K 1/16W	[M]
R875	D0GB392JA002	3.9K 1/16W	[M]
R876	D0GB1R8JA008	1.8 1/16W	[M]
R877	ERJ3GEYJ102V	1K 1/16W	[M]
R878	ERJ3GEYJ104V	100K 1/16W	[M]
R879	ERJ3GEYJ104V	100K 1/16W	[M]
R880	ERJ3GEYJ104V	100K 1/16W	[M]
R881	ERJ3GEYJ104V	100K 1/16W	[M]
R886	ERJ3GEYJ104V	100K 1/16W	[M]
R887	ERJ3GEYJ223V	22K 1/16W	[M]
R888	ERJ3GEYJ223V	22K 1/16W	[M]
R889	ERJ3GEYJ102V	1K 1/16W	[M]
R901	D0GB101JA002	100 1/16W	[M]
R902	D0GB101JA002	100 1/16W	[M]
R903	D0GB101JA002	100 1/16W	[M]
R904	ERJ3GEYJ473V	47K 1/16W	[M]
R905	D0GB101JA002	100 1/16W	[M]
R906	D0GB101JA002	100 1/16W	[M]
R907	D0GB101JA002	100 1/16W	[M]
R908	D0GB101JA002	100 1/16W	[M]
R909	D0GB101JA002	100 1/16W	[M]
R911	ERJ3GEYJ102V	1K 1/16W	[M]
R912	D0GB101JA002	100 1/16W	[M]
R913	D0GB101JA002	100 1/16W	[M]
R914	D0GB101JA002	100 1/16W	[M]
R915	ERJ3GEYJ221V	220 1/16W	[M]
R916	ERJ3GEYJ221V	220 1/16W	[M]
R917	D0GB101JA002	100 1/16W	[M]
R918	ERJ3GEYJ221V	220 1/16W	[M]
R921	D0GB122JA019	1.2K 1/16W	[M]
R922	ERJ3GEYJ182V	1.8K 1/16W	[M]
R923	ERJ3GEYJ222V	2.2K 1/16W	[M]
R924	D0GB272JA002	2.7K 1/16W	[M]
R925	ERJ3GEYJ472V	4.7K 1/16W	[M]
R926	ERJ3GEYJ682V	6.8K 1/16W	[M]
R927	ERJ3GEYJ103V	10K 1/16W	[M]
R928	D0GB151JA008	150 1/16W	[M]
R929	D0GB151JA008	150 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R930	D0GB151JA008	150 1/16W	[M]
R931	D0GB151JA008	150 1/16W	[M]
R932	D0GB151JA008	150 1/16W	[M]
R933	D0GB151JA008	150 1/16W	[M]
R934	D0GB151JA008	150 1/16W	[M]
R935	D0GB151JA008	150 1/16W	[M]
R936	D0GB151JA008	150 1/16W	[M]
R937	D0GB151JA008	150 1/16W	[M]
R938	D0GB121JA002	120 1/16W	[M]
R942	ERJ3GEYJ331V	330 1/16W	[M]
R943	ERJ3GEYJ331V	330 1/16W	[M]
R944	ERJ3GEYJ331V	330 1/16W	[M]
R945	ERJ3GEYJ102V	1K 1/16W	[M]
R946	ERJ3GEYJ102V	1K 1/16W	[M]
R947	ERJ3GEYJ331V	330 1/16W	[M]
R952	D0GB151JA008	150 1/16W	[M]
R955	D0GB151JA008	150 1/16W	[M]
R956	D0GB151JA008	150 1/16W	[M]
R957	D0GB121JA002	120 1/16W	[M]
R958	D0GB101JA002	100 1/16W	[M]
R959	D0GB121JA002	120 1/16W	[M]
R960	ERJ3GEYJ472V	4.7K 1/16W	[M]
R961	ERJ3GEYJ682V	6.8K 1/16W	[M]
R962	ERJ3GEYJ103V	10K 1/16W	[M]
R963	ERJ3GEYJ223V	22K 1/16W	[M]
R964	D0GB271JA002	270 1/16W	[M]
R965	D0GB271JA002	270 1/16W	[M]
R971	ERJ3GEYJ182V	1.8K 1/16W	[M]
R972	ERDS2TJ821T	820 1/4W	[M]
R972	ERJ3GEYJ222V	2.2K 1/16W	[M]
R973	D0GB272JA002	2.7K 1/16W	[M]
R973	ERDS2TJ393T	39K 1/4W	[M]
R995	D0GB101JA002	100 1/4W	[M]
R997	ERJ3GEYJ103V	10K 1/16W	[M]
R998	ERJ3GEYJ682V	6.8K 1/16W	[M]
R1101	ERJ3GEYJ270V	27 1/16W	[M]
R1103	D0GB183JA002	18K 1/16W	[M]
R1104	ERJ3GEYJ103V	10K 1/16W	[M]
R1105	ERJ3GEYJ222V	2.2K 1/16W	[M]
R1106	ERJ3GEYJ104V	100K 1/16W	[M]
R1107	ERJ3GEYJ102V	1K 1/16W	[M]
R1109	ERJ3GEYJ102V	1K 1/16W	[M]
R1110	D0GB333JA002	33K 1/16W	[M]
R1201	ERJ3GEYJ270V	27 1/16W	[M]
R1203	D0GB183JA002	18K 1/16W	[M]
R1204	ERJ3GEYJ103V	10K 1/16W	[M]
R1205	ERJ3GEYJ222V	2.2K 1/16W	[M]
R1206	ERJ3GEYJ104V	100K 1/16W	[M]
R1207	ERJ3GEYJ102V	1K 1/16W	[M]
R1209	ERJ3GEYJ102V	1K 1/16W	[M]
R1210	D0GB333JA002	33K 1/16W	[M]
R1302	ERJ3GEYJ221V	220 1/16W	[M]
R1303	D0GB475JA008	4.7M 1/16W	[M]
R1304	ERJ3GEYJ223V	22K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R1305	ERJ3GEYJ103V	10K 1/16W	[M]
R1306	ERJ3GEYJ103V	10K 1/16W	[M]
R1307	ERD25FVJ101T	100 1/4W	[M]
R1308	ERD25FVJ101T	100 1/4W	[M]
R1309	ERD25FVJ102T	1K 1/4W	[M]
R1310	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1313	ERJ3GEYJ103V	10K 1/16W	[M]
R1314	ERJ3GEYJ102V	1K 1/16W	[M]
R1315	ERJ3GEYJ473V	47K 1/16W	[M]
R1316	ERJ3GEYJ102V	1K 1/16W	[M]
R1317	ERJ3GEYJ473V	47K 1/16W	[M]
R1318	ERJ3GEYJ103V	10K 1/16W	[M]
R1319	ERJ3GEYJ123V	12K 1/16W	[M]
R1320	ERJ3GEYJ104V	100K 1/16W	[M]
R1321	ERJ3GEYJ470V	47 1/16W	[M]
R1322	ERJ3GEYJ823V	82K 1/16W	[M]
R1323	D0GB332JA002	3.3K 1/16W	[M]
R1324	ERJ3GEYJ222V	2.2K 1/16W	[M]
R1326	ERJ3GEYJ822V	8.2K 1/16W	[M]
R1327	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1328	ERJ3GEYJ153V	15K 1/16W	[M]
R1329	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1330	ERD2FCVJ4R7T	4.7 1/4W	[M] 
R1331	ERJ3GEYJ103V	10K 1/16W	[M]
R1332	ERJ3GEYJ103V	10K 1/16W	[M]
R1334	ERJ3GEYJ223V	22K 1/16W	[M]
R1335	D0GB152JA002	1.5K 1/16W	[M]
R1336	D0GB152JA002	1.5K 1/16W	[M]
R1337	ERJ3GEYJ103V	10K 1/16W	[M]
R1338	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1341	ERJ3GEYJ471V	470 1/16W	[M]
R1342	ERJ3GEYJ473V	47K 1/16W	[M]
R1343	D0GB332JA002	3.3K 1/16W	[M]
R1344	D0GB273JA002	27K 1/16W	[M]
R1345	ERJ3GEYJ102V	1K 1/16W	[M]
R1371	ERJ3GEYJ223V	22K 1/16W	[M]
R1372	ERJ3GEYJ472V	4.7K 1/16W	[M]
R1373	ERJ3GEYJ222V	2.2K 1/16W	[M]
R1374	ERJ3GEYJ471V	470 1/16W	[M]
R1375	D0GB1R0JA002	1 1/16W	[M]
R1375	ERD25FVJ101T	100 1/4W	[M]
R1376	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2001	ERJ3GEYJ102V	1K 1/16W	[M]
R2011	D0GB332JA002	3.3K 1/16W	[M]
R2012	D0GB563JA002	56K 1/16W	[M]
R2013	ERJ3GEY0R00V	0 1/16W	[M]
R2014	D0GB332JA002	3.3K 1/16W	[M]
R2015	ERJ3GEYJ223V	22K 1/16W	[M]
R2016	ERJ3GEY0R00V	0 1/16W	[M]
R2017	D0GB332JA002	3.3K 1/16W	[M]
R2018	ERJ3GEYJ223V	22K 1/16W	[M]
R2019	D0GB332JA002	3.3K 1/16W	[M]
R2020	ERJ3GEYJ223V	22K 1/16W	[M]
R2021	D0GB332JA002	3.3K 1/16W	[M]



Ref. No.	Part No.	Part Name & Description	Remarks
R2022	ERJ3GEYJ123V	12K 1/16W	[M]
R2023	D0GB332JA002	3.3K 1/16W	[M]
R2024	ERJ3GEYJ123V	12K 1/16W	[M]
R2026	ERJ3GEYJ473V	47K 1/16W	[M]
R2028	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2029	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2030	ERJ3GEYJ103V	10K 1/16W	[M]
R2031	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2032	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2033	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2034	D0GB183JA002	18K 1/16W	[M]
R2035	ERJ3GEYJ822V	8.2K 1/16W	[M]
R2036	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2037	D0GB333JA002	33K 1/16W	[M]
R2038	ERJ3GEYJ102V	1K 1/16W	[M]
R2040	ERJ3GEY0R00V	0 1/16W	[M]
R2041	ERJ3GEYJ470V	47 1/16W	[M]
R2047	ERJ3GEYJ104V	100K 1/16W	[M]
R2048	ERJ3GEYJ104V	100K 1/16W	[M]
R2051	ERJ3GEYJ104V	100K 1/16W	[M]
R2061	ERJ3GEYJ330V	33 1/16W	[M]
R2502	ERJ3GEYJ153V	15K 1/16W	[M]
R2503	ERJ3GEYJ153V	15K 1/16W	[M]
R2504	ERJ3GEYJ823V	82K 1/16W	[M]
R2505	ERJ3GEYJ823V	82K 1/16W	[M]
R2507	D0GF6R8JA017	6.8 1/8W	[M]
R3001	D0GB220JA002	22 1/8W	[M]
R3002	ERJ3GEYJ472V	4.7K 1/16W	[M]
R3003	D0GB101JA002	100 1/16W	[M]
R3004	ERJ3GEYJ221V	220 1/16W	[M]
R3005	ERJ3GEYJ473V	47K 1/16W	[M]
R3007	ERJ3GEY0R00V	0 1/16W	[M]
R3071	ERJ3GEYJ103V	10K 1/16W	[M]
R3080	ERJ3RBD752V	7.5K 3W	[M]
R3082	ERJ3RBD202V	2K 3W	[M]
R3083	ERJ3RBD132V	1.3K 3W	[M]
R3084	ERJ3RBD752V	7.5K 3W	[M]
R3085	ERJ3RBD183V	18K 3W	[M]
R3086	ERJ3RBD432V	4.3K 3W	[M]
R3087	ERJ3RBD752V	7.5K 3W	[M]
R3088	ERJ3RBD752V	7.5K 3W	[M]
R3089	ERJ3RBD332V	3.3K 3W	[M]
R3090	ERJ3RBD222V	2.2K 3W	[M]
R3101	ERJ3RED750V	75 3W	[M]
R3106	ERJ3RED750V	75 3W	[M]
R3111	ERJ3RED750V	75 3W	[M]
R3115	ERJ3RED750V	75 3W	[M]
R3117	ERJ3RED750V	75 3W	[M]
R3301	ERJ3GEYJ682V	6.8K 1/16W	[M]
R3302	D0GB332JA002	3.3K 1/16W	[M]
R3304	D0HB750ZA003	75 3W	[M]
R3305	D0HB750ZA003	75 3W	[M]
R3306	D0HB750ZA003	75 3W	[M]
R3307	D0GB562JA002	5.6K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R4211	ERJ3GEY0R00V	0 1/16W	[M]
R4213	ERJ3GEY0R00V	0 1/16W	[M]
R5203	D0GB563JA002	56K 1/16W	[M]
R5204	ERJ3GEYJ223V	22K 1/16W	[M]
R5211	ERJ3GEYJ2R2V	2.2 1/16W	[M]
R5212	ERJ12YJ270H	27 1/2W	[M]
R5213	ERJ3GEYJ473V	47K 1/16W	[M]
R5214	ERJ3GEYJ223V	22K 1/16W	[M]
R5215	ERJ3GEYJ2R2V	2.2 1/16W	[M]
R5216	ERJ12YJ270H	27 1/2W	[M]
R5217	ERJ3GEYJ473V	47K 1/16W	[M]
R5221	ERJ3GEYJ822V	8.2K 1/16W	[M]
R5222	ERJ3GEYJ822V	8.2K 1/16W	[M]
R5232	ERJ3RBD123V	12K 3W	[M]
R5235	D0GB105JA002	1M 1/16W	[M]
R5236	ERJ3GEY0R00V	0 1/16W	[M]
R5252	ERJ3GEYJ102V	1K 1/16W	[M]
R6201	ERJ3GEYJ103V	10K 1/16W	[M]
R6205	ERJ3GEYJ102V	1K 1/16W	[M]
R6206	ERJ3GEYJ103V	10K 1/16W	[M]
R6208	ERJ3GEYJ102V	1K 1/16W	[M]
R6301	ERJ3GEYJ472V	4.7K 1/16W	[M]
R6303	ERJ3GEYJ472V	4.7K 1/16W	[M]
R6512	ERJ3RBD331V	330 3W	[M]
R6513	ERJ3GEYJ103V	10K 1/16W	[M]
R6514	ERJ3GEYJ470V	47 1/16W	[M]
R6515	D0GB100JA002	10 1/16W	[M]
K2001	ERJ3GEY0R00V	0 1/16W	[M]
K3001	ERJ3GEY0R00V	0 1/16W	[M]
K3011	ERJ3GEY0R00V	0 1/16W	[M]
K3012	ERJ3GEY0R00V	0 1/16W	[M]
K3013	ERJ3GEY0R00V	0 1/16W	[M]
K3071	ERJ3GEY0R00V	0 1/16W	[M]
K3101	ERJ3GEY0R00V	0 1/16W	[M]
K3106	ERJ3GEY0R00V	0 1/16W	[M]
K3112	ERJ3GEY0R00V	0 1/16W	[M]
K3117	ERJ3GEY0R00V	0 1/16W	[M]
K3201	ERJ3GEY0R00V	0 1/16W	[M]
K4001	ERJ3GEY0R00V	0 1/16W	[M]
K4002	ERJ3GEY0R00V	0 1/16W	[M]
K4003	ERJ3GEY0R00V	0 1/16W	[M]
K4031	ERJ3GEY0R00V	0 1/16W	[M]
K6231	ERJ3GEY0R00V	0 1/16W	[M]
K6232	ERJ3GEY0R00V	0 1/16W	[M]
K6233	ERJ3GEY0R00V	0 1/16W	[M]
K6234	ERJ3GEY0R00V	0 1/16W	[M]
K6235	ERJ3GEY0R00V	0 1/16W	[M]
K6236	ERJ3GEY0R00V	0 1/16W	[M]
K6237	ERJ3GEY0R00V	0 1/16W	[M]
K6238	ERJ3GEY0R00V	0 1/16W	[M]
K6301	ERJ3GEY0R00V	0 1/16W	[M]
RA2061	EXBV4V330JV	33 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
RA2501	EXBV8V473JV	47K 1/16W	[M]
RA3008	EXBV4V103JV	10K 1/16W	[M]
RA3009	EXBV4V221JV	220 1/16W	[M]
RA3010	EXBV4V221JV	220 1/16W	[M]
RA3011	EXBV4V473JV	47K 1/16W	[M]
RA5231	EXBV8V101JV	100 1/16W	[M]
RA6201	EXBV4V103JV	10K 1/16W	[M]
RA6202	EXBV4V103JV	10K 1/16W	[M]
RA6203	EXBV4V103JV	10K 1/16W	[M]
RA6204	EXBV4V103JV	10K 1/16W	[M]
RA6205	EXBV8V473JV	47K 1/16W	[M]
RA6206	EXBV4V103JV	10K 1/16W	[M]
RA6207	EXBV4V472JV	4.7K 1/16W	[M]
NJ3091	ERJ3GEY0R00V	0 1/16W	[M]
		CAPACITORS	
C1	ECEA1CKA101B	100 16V	[M]
C2	ECBT1E103ZF5	0.01 25V	[M]
C202	ECJ2VB1H223K	0.022 50V	[M]
C205	ECJ2VC1H101K	100P 50V	[M]
C206	ECJ2VC1H101K	100P 50V	[M]
C209	ECJ2VB1H102K	1000P 50V	[M]
C210	ECJ2VB1H102K	1000P 50V	[M]
C211	ECEA1HKA4R7B	4.7 50V	[M]
C212	ECEA1HKA4R7B	4.7 50V	[M]
C213	ECEA1HKA4R7B	4.7 50V	[M]
C214	ECEA1HKA4R7B	4.7 50V	[M]
C215	ECJ2VB1H681K	680P 50V	[M]
C216	ECJ2VB1H681K	680P 50V	[M]
C217	ECJ1VC1H151J	150P 50V	[M]
C218	ECJ1VC1H151J	150P 50V	[M]
C219	ECJ2VB1H103K	0.01 50V	[M]
C220	ECJ2VB1H103K	0.01 50V	[M]
C221	ECEA1HKA3R3B	3.3 50V	[M]
C224	ECJ2VB1H102K	1000P 50V	[M]
C225	ECJ1VB1H332K	3300P 50V	[M]
C226	ECJ1VB1H332K	3300P 50V	[M]
C229	F1J1E104A137	0.1 25V	[M]
C230	ECJ2VB1H102K	1000P 50V	[M]
C232	ECJ2VB1H102K	1000P 50V	[M]
C233	ECJ2VC1H470J	47 50V	[M]
C234	ECJ2VC1H470J	47 50V	[M]
C235	ECJ2VC1H470J	47 50V	[M]
C236	ECJ2VB1H103K	0.01 50V	[M]
C241	ECJ2ZC1H101J	100P 50V	[M]
C261	ECEA1HKA4R7B	4.7 50V	[M]
C262	ECEA1HKA4R7B	4.7 50V	[M]
C263	ECJ2VC1H101K	100P 50V	[M]
C264	ECJ2VC1H101K	100P 50V	[M]
C265	ECJ2VC1H101K	100P 50V	[M]
C266	ECJ2VC1H101K	100P 50V	[M]
C267	ECJ2VB1H102K	1000P 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C268	ECJ2VB1H102K	1000P 50V	[M]
C269	ECEA1CKA100B	10 16V	[M]
C270	ECEA1CKA100B	10 16V	[M]
C271	ECJ2VB1H103K	0.01 50V	[M]
C272	ECJ2VB1H103K	0.01 50V	[M]
C273	ECEA1HKA3R3B	3.3 50V	[M]
C274	ECEA1HKA3R3B	3.3 50V	[M]
C275	ECEA1CKA220B	22 16V	[M]
C280	ECJ1VB1C563K	0.056 16V	[M]
C281	ECJ1VB1C563K	0.056 16V	[M]
C282	ECEA1HKA4R7B	4.7 50V	[M]
C283	ECEA1AKA470B	47 10V	[M]
C284	ECEA1AKA470B	47 10V	[M]
C285	F1H1C683A075	0.068 16V	[M]
C286	ECUVNA154KBV	0.15 10V	[M]
C287	ECJ2VB1H472K	4700P 50V	[M]
C288	F1H1C683A075	0.068 16V	[M]
C289	F1H1C683A075	0.068 16V	[M]
C290	ECEA1AKA330B	33 10V	[M]
C292	ECEA1HKA4R7B	4.7 50V	[M]
C293	ECJ1VB1C563K	0.056 50V	[M]
C294	ECJ1VB1C563K	0.056 50V	[M]
C301	ECJ2VC1H101K	100P 50V	[M]
C302	ECJ2VC1H101K	100P 50V	[M]
C303	ECUV1H330JCN	33P 50V	[M]
C304	ECUV1H330JCN	33P 50V	[M]
C305	ECEA1HKA010B	1 50V	[M]
C306	ECEA1HKA010B	1 50V	[M]
C307	ECEA1CKA100B	10 16V	[M]
C308	ECEA1CKA100B	10 16V	[M]
C309	ECJ2VC1H101K	100P 50V	[M]
C310	ECJ2VC1H101K	100P 50V	[M]
C311	ECJ2VB1H102K	1000P 50V	[M]
C312	ECJ2VC1H470J	47P 50V	[M]
C313	ECJ2VB1H103K	0.01 50V	[M]
C314	ECJ2VB1H103K	0.01 50V	[M]
C315	ECEA1CKA100B	10 16V	[M]
C316	ECEA1HKA010B	1 50V	[M]
C318	ECEA1CKA100B	10 16V	[M]
C319	ECEA1HKA010B	1 50V	[M]
C320	ECEA1HKA010B	1 50V	[M]
C321	ECEA1HKA010B	1 50V	[M]
C322	ECEA1HKA010B	1 50V	[M]
C332	ECEA1AKN100B	10 10V	[M]
C351	ECEA1CKA330B	33 16V	[M]
C352	F1J1E104A137	0.1 25V	[M]
C353	ECEA0JKA101B	100 6.3V	[M]
C354	ECEA0JKA221B	220 6.3V	[M]
C355	ECEA1HKA2R2B	2.2 50V	[M]
C371	ECEA1HKA4R7B	4.7 50V	[M]
C381	ECJ2VB1H103K	0.01 50V	[M]
C382	ECJ2VB1H103K	0.01 50V	[M]
C383	ECEA1CKA100B	10 16V	[M]
C384	ECEA1CKA100B	10 16V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C385	ECJ2VB1H103K	0.01 50V	[M]
C386	ECJ2VB1H103K	0.01 50V	[M]
C401	ECJ2VB1E223K	0.022 25V	[M]
C441	ECJ2ZC1H101J	100P 50V	[M]
C451	ECJ2VB1H103K	0.01 50V	[M]
C452	ECJ2VB1H103K	0.01 50V	[M]
C453	ECJ2VB1E223K	0.022 25V	[M]
C456	ECJ2VB1H103K	0.01 50V	[M]
C457	ECEA0JKA470B	47 6.3V	[M]
C458	F1J1E104A137	0.1 25V	[M]
C461	ECJ2VB1H103K	0.01 50V	[M]
C462	ECJ2VB1H103K	0.01 50V	[M]
C463	ECEA0JKA470B	47 6.3V	[M]
C501	ECBT1H681KB5	680P 50V	[M]
C502	ECBT1H681KB5	680P 50V	[M]
C503	ECBT1H681KB5	680P 50V	[M]
C504	ECBT1H681KB5	680P 50V	[M]
C505	ECBT1H681KB5	680P 50V	[M]
C506	ECBT1H681KB5	680P 50V	[M]
C507	ECBT1H180JC5	18P 50V	[M]
C508	ECBT1H180JC5	18P 50V	[M]
C509	ECBT1H220JC5	22P 50V	[M]
C510	ECBT1H220JC5	22P 50V	[M]
C511	ECBT1H220JC5	22P 50V	[M]
C512	ECBT1H220JC5	22P 50V	[M]
C513	ECBT1H473KB5	0.047 50V	[M]
C514	ECEA0JKA101B	100 6.3V	[M]
C515	ECKR2H103ZF5	0.01 500V	[M]
C516	ECKR2H103ZF5	0.01 500V	[M]
C517	ECBT1C103NS5	0.01 16V	[M]
C520	ECBT1H104KB5	0.1 50V	[M]
C521	ECBT1H473KB5	0.047 50V	[M]
C522	ECBT1H473KB5	0.047 50V	[M]
C523	ECBT1H473KB5	0.047 50V	[M]
C524	ECBT1H473KB5	0.047 50V	[M]
C525	ECBT1H473KB5	0.047 50V	[M]
C526	ECBT1H473KB5	0.047 50V	[M]
C527	ECA0JM221B	220 6.3V	[M]
C531	ECBT1H473KB5	0.047 50V	[M]
C532	ECBT1H473KB5	0.047 50V	[M]
C533	ECBT1H473KB5	0.047 50V	[M]
C534	ECBT1H473KB5	0.047 50V	[M]
C535	ECBT1H473KB5	0.047 50V	[M]
C536	ECBT1H473KB5	0.047 50V	[M]
C537	ECBT1H102KB5	1000P 50V	[M]
C538	ECBT1H102KB5	1000P 50V	[M]
C539	ECBT1H102KB5	1000P 50V	[M]
C540	ECBT1H102KB5	1000P 50V	[M]
C565	ECBT1C103NS5	0.01 16V	[M]
C566	F2A1V332A156	3300P 35V	[M] ⚠
C567	F2A1V562A157	5600P 35V	[M] ⚠
C568	F2A1V562A157	5600P 35V	[M] ⚠
C569	F2A1V332A156	3300P 35V	[M] ⚠



Ref. No.	Part No.	Part Name & Description	Remarks
C570	ECQE1104KF3	0.1 100V	[M]
C571	ECQE1104KF3	0.1 100V	[M]
C572	ECBT1H102KB5	1000P 50V	[M]
C574	ECA1HM470B	47 50V	[M]
C575	ECBT1H103KB5	0.01 50V	[M]
C576	ECA1EM101B	100 25V	[M]
C577	ECBT1H103KB5	0.01 50V	[M]
C578	ECEA1AKA330B	33 10V	[M]
C579	ECEA1CKA470B	47 16V	[M]
C580	ECBT1H102KB5	1000P 50V	[M]
C581	ECEA1HKAR47B	0.47 50V	[M]
C582	ECA1EM331B	330 25V	[M]
C583	ECA1EM331B	330 25V	[M]
C584	ECA1HM101B	100 50V	[M]
C585	ECA1HM101B	100 50V	[M]
C586	ECA1JM101B	100 63V	[M]
C587	ECA1JM101B	100 63V	[M]
C588	ECKR2H102ZF5	1000P 500V	[M]
C589	ECA1HM100B	10 50V	[M]
C591	ECA1EM222B	2200 25V	[M] 
C592	ECBT1H103KB5	0.01 50V	[M]
C593	RCA1CM102BT	1000P 16V	[M]
C595	ECEA1VKA4R7B	4.7 35V	[M]
C596	ECBT1H103KB5	0.01 50V	[M]
C597	ECEA1AKA470B	47 10V	[M]
C599	ECQE1104KF3	0.1 100V	[M]
C601	ECJ1VC1H101K	100P 50V	[M]
C602	ECJ1VC1H101K	100P 50V	[M]
C603	ECUVNC104KBV	0.1 16V	[M]
C604	ECUV1H561KBV	560P 50V	[M]
C605	ECUV1H561KBV	560P 50V	[M]
C606	ECUV1H561KBV	560P 50V	[M]
C607	ECUV1H561KBV	560P 50V	[M]
C610	ECUV1H561KBV	560P 50V	[M]
C612	F1H1H103A753	0.01 50V	[M]
C613	F1H1H103A753	0.01 50V	[M]
C614	ECEA1HKA2R2B	2.2 50V	[M]
C615	F1H1H150A797	15P 50V	[M]
C616	ECJ1VC1H180J	18P 50V	[M]
C621	ECJ1VB1H102K	1000P 50V	[M]
C622	F1H1H331A022	330P 50V	[M]
C623	ECEA0JKA101B	100 6.3V	[M]
C624	ECJ1VB1H102K	1000P 50V	[M]
C625	ECJ1VB1H102K	1000P 50V	[M]
C626	ECA0JM102B	1000 6.3V	[M]
C627	ECJ1VB1E103K	0.01 25V	[M]
C629	ECEA1AKA220B	22 10V	[M]
C630	ECUVNC104KBV	0.1 16V	[M]
C631	ECUVNC104KBV	0.1 16V	[M]
C632	ECEA1HKA0R1B	0.1 50V	[M]
C633	ECEA1CKA100B	10 16V	[M]
C634	ECJ1VB1E103K	0.01 25V	[M]
C635	ECJ1VB1E103K	0.01 25V	[M]
C636	ECEA1HKA3R3B	3.3 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C637	ECEA1HKA3R3B	3.3 50V	[M]
C638	F1H1H103A753	0.01 50V	[M]
C639	ECEA1HKA3R3B	3.3 50V	[M]
C640	ECUVNE223KBV	0.022 25V	[M]
C641	ECUVNE223KBV	0.022 25V	[M]
C651	ECJ1VC1H101K	100P 50V	[M]
C652	ECJ1VC1H101K	100P 50V	[M]
C653	F1J1E104A137	0.1 25V	[M]
C673	F1H1H103A753	0.01 50V	[M]
C674	F1J1E104A137	0.1 25V	[M]
C701	ECEA1CKA100B	10 16V	[M]
C703	ECEA1CKA220B	22 16V	[M]
C704	ECJ2VB1H471K	470P 50V	[M]
C706	ECJ1VB1C103K	0.01 16V	[M]
C707	ECJ2VC1H470J	47P 50V	[M]
C708	F1J1E104A137	0.1 25V	[M]
C709	F1J1E104A137	0.1 25V	[M]
C710	ECEA1CKA100B	10 16V	[M]
C711	ECEA1CKA220B	22 16V	[M]
C713	ECJ2VB1H222K	2200P 50V	[M]
C715	ECEA1CKA220B	22 16V	[M]
C716	ECJ2VB1H222K	2200P 50V	[M]
C718	ECJ2VB1H103K	0.01 50V	[M]
C719	ECJ2VB1H103K	0.01 50V	[M]
C720	ECEA1CKA100B	10 16V	[M]
C722	ECEA1CKA100B	10 16V	[M]
C723	ECEA1CKA220B	22 16V	[M]
C724	ECJ2VB1H222K	2200P 50V	[M]
C726	ECJ2VB1H471K	470P 50V	[M]
C727	ECJ2VC1H470J	47 50V	[M]
C728	ECJ2VC1H470J	47 50V	[M]
C729	ECEA1CKA220B	22 16V	[M]
C730	ECEA1CKA100B	10 16V	[M]
C731	ECJ2VB1H222K	2200P 50V	[M]
C732	ECJ1VB1H102K	1000P 50V	[M]
C733	ECJ1VB1H102K	1000P 50V	[M]
C736	ECEA1CKA100B	10 16V	[M]
C739	ECUVNA105KBN	1 10V	[M]
C740	ECA1EM101B	100 25V	[M]
C741	ECEA1CKA100B	10 16V	[M]
C742	ECEA1CKA100B	10 16V	[M]
C743	ECEA1CKA100B	10 16V	[M]
C744	ECEA1CKA100B	10 16V	[M]
C748	ECJ2VB1H103K	0.01 50V	[M]
C749	ECEA1CKA220B	22 16V	[M]
C750	ECEA1CKA220B	22 16V	[M]
C757	ECJ2VB1H222K	2200P 50V	[M]
C758	ECJ2VB1H222K	2200P 50V	[M]
C759	ECUV1H221KBN	220P 50V	[M]
C760	ECUV1H221KBN	220P 50V	[M]
C761	ECJ2VB1H102K	1000P 50V	[M]
C762	ECEA1CKA100B	10 16V	[M]
C763	ECJ2VB1H102K	1000P 50V	[M]
C764	ECJ2VB1H103K	0.01 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C765	ECEA1AKA101B	100 10V	[M]
C766	ECJ2VB1H102K	1000P 50V	[M]
C767	ECEA1CKA100B	10 16V	[M]
C768	ECA1AM222B	2200 10V	[M]
C769	ECUV1H221KBN	220P 50V	[M]
C770	ECUV1H152KBV	1500P 50V	[M]
C771	ECUV1H152KBV	1500P 50V	[M]
C774	EEUFC0J821B	820P 6.3V	[M]
C775	ECEA1AKA101B	100 10V	[M]
C779	ECA0JM102B	1000 6.3V	[M]
C780	ECA0JM102B	1000 6.3V	[M]
C781	ECEA1HKA3R3B	3.3 50V	[M]
C782	ECA1EM472E	4700 25V	[M] 
C783	ECQE1104KF3	0.1 100V	[M]
C784	F1J1E104A137	0.1 25V	[M]
C785	ECJ2VB1H471K	470P 50V	[M]
C786	ECJ2VB1H471K	470P 50V	[M]
C788	EEUFC0J821B	820P 6.3V	[M]
C789	ECJ2VC1H470J	47 50V	[M]
C790	ECJ2VC1H470J	47 50V	[M]
C791	F1J1E104A137	0.1 25V	[M]
C792	F1J1E104A137	0.1 25V	[M]
C793	ECJ2VB1H471K	470P 50V	[M]
C794	ECJ2VB1H471K	470P 50V	[M]
C795	ECJ2VC1H470J	47 50V	[M]
C796	ECJ2VC1H470J	47 50V	[M]
C801	ECEA1HKA010B	1 50V	[M]
C802	ECEA1HKA010B	1 50V	[M]
C803	ECEA1HKA010B	1 50V	[M]
C804	ECEA1HKA010B	1 50V	[M]
C805	ECEA1HKA010B	1 50V	[M]
C806	ECEA1HKA010B	1 50V	[M]
C807	ECEA1HKA010B	1 50V	[M]
C808	ECEA1HKA010B	1 50V	[M]
C809	ECUVNA105KBN	1 10V	[M]
C810	ECJ2VB1H103K	0.01 50V	[M]
C811	ECJ2VC1H050D	5P 50V	[M]
C812	ECJ2VC1H120J	12P 50V	[M]
C813	ECEA1HKA010B	1 50V	[M]
C814	ECJ2VB1H103K	0.01 50V	[M]
C815	EEAFC0J101B	100P 6.3V	[M]
C816	ECJ2VB1H222K	2200P 50V	[M]
C817	ECJ2VB1H103K	0.01 50V	[M]
C818	ECEA1HKA010B	1 50V	[M]
C819	ECJ2VB1H103K	0.01 50V	[M]
C820	ECJ2VB1H222K	2200P 50V	[M]
C821	ECJ2VB1H103K	0.01 50V	[M]
C822	ECEA0JKA470B	47 6.3V	[M]
C823	EEAFC0J101B	100P 6.3V	[M]
C824	ECEA0JKA470B	47 6.3V	[M]
C825	ECEA0JKA101B	100 6.3V	[M]
C826	ECJ2VB1H103K	0.01 50V	[M]
C827	ECEA1HKA010B	1 50V	[M]
C828	ECJ2VB1H222K	2200P 50V	[M]



Ref. No.	Part No.	Part Name & Description	Remarks
C829	ECEA1HKA010B	1 50V	[M]
C830	ECJ2VB1H222K	2200P 50V	[M]
C831	ECEA1HKA010B	1 50V	[M]
C832	ECEA1HKA010B	1 50V	[M]
C833	ECUVNA105KBN	1 10V	[M]
C835	ECJ2VB1H103K	0.01 50V	[M]
C836	ECJ2VB1E223K	0.022 25V	[M]
C837	ECUVNA105KBN	1 10V	[M]
C838	ECUVNA105KBN	1 10V	[M]
C839	ECUVNA105KBN	1 10V	[M]
C840	ECEA1AKA221Q	220 10V	[M]
C841	ECJ2VB1E223K	0.022 25V	[M]
C842	ECJ2VB1H103K	0.01 50V	[M]
C843	ECEA1HKA4R7B	4.7 50V	[M]
C844	ECEA1HKA4R7B	4.7 50V	[M]
C845	ECEA0JKA101B	100 6.3V	[M]
C846	ECEA1HKA2R2B	2.2 50V	[M]
C847	ECEA1HKA2R2B	2.2 50V	[M]
C848	ECUV1H331KBN	330P 50V	[M]
C850	ECEA1HKA010B	1 50V	[M]
C851	ECEA1CKA100B	10 16V	[M]
C852	ECEA1CKA100B	10 16V	[M]
C853	ECJ1VB1H221K	220P 50V	[M]
C854	ECEA1CKA100B	10 16V	[M]
C855	ECEA1HKA010B	1 50V	[M]
C856	ECEA1CKA100B	10 16V	[M]
C857	ECEA1CKA100B	10 16V	[M]
C858	ECJ1VB1H221K	220P 50V	[M]
C859	ECEA1HKA2R2B	2.2 50V	[M]
C860	ECJ2VC1H470J	47 50V	[M]
C861	ECJ2VC1H470J	47 50V	[M]
C862	F1J1E104A137	0.1 25V	[M]
C863	F1H1H103A753	0.01 50V	[M]
C864	ECJ1VC1H101K	100P 50V	[M]
C865	ECEA1HKA3R3B	3.3 50V	[M]
C867	ECEA1AKA330B	33 10V	[M]
C868	ECEA1HKAR15B	0.15 50V	[M]
C869	ECEA1CKA100B	10 16V	[M]
C870	ECEA1HKA010B	1 50V	[M]
C871	ECEA1HKA3R3B	3.3 50V	[M]
C872	ECJ1VC1H101K	100P 50V	[M]
C874	ECEA1AKA330B	33 10V	[M]
C875	ECEA1HKAR15B	0.15 50V	[M]
C876	ECEA1CKA100B	10 16V	[M]
C877	F1J1E104A137	0.1 25V	[M]
C878	ECEA1HKA010B	1 50V	[M]
C884	F1J1E104A137	0.1 25V	[M]
C885	F1J1E104A137	0.1 25V	[M]
C886	ECJ2VC1H470J	47 50V	[M]
C887	ECEA1CKA100B	10 16V	[M]
C889	ECJ2VB1H223K	0.022 50V	[M]
C890	ECJ2VB1H223K	0.022 50V	[M]
C945	ECEA1HKA010B	1 50V	[M]
C1101	ECA1HAK010XB	1 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C1102	ECJ1VB1H102K	1000P 50V	[M]
C1103	ECA1CAK101XB	100 16V	[M]
C1104	ECUVNC333KBV	0.033 16V	[M]
C1105	ECJ1VB1H681K	680 50V	[M]
C1106	ECA1HAK3R3XB	3.3 50V	[M]
C1107	ECUV1H152KBV	1500P 50V	[M]
C1108	ECA1CAK100XB	10 16V	[M]
C1109	ECA1HAK3R3XB	3.3 50V	[M]
C1201	ECA1HAK010XB	1 50V	[M]
C1202	ECJ1VB1H102K	1000P 50V	[M]
C1203	ECA1CAK101XB	100 16V	[M]
C1204	ECUVNC333KBV	0.033 16V	[M]
C1205	ECJ1VB1H681K	680 50V	[M]
C1206	ECA1HAK3R3XB	3.3 50V	[M]
C1207	ECUV1H152KBV	1500P 50V	[M]
C1208	ECA1HAK3R3XB	3.3 50V	[M]
C1209	ECA1HAK3R3XB	3.3 50V	[M]
C1301	ECEA1HKA0R1B	0.1 50V	[M]
C1302	ECUVNC333KBV	0.033 16V	[M]
C1303	ECUVNC333KBV	0.033 16V	[M]
C1304	ECEA1HKA4R7B	4.7 50V	[M]
C1305	ECA1CAK330XB	33 16V	[M]
C1306	ECA1CAK100XB	10 16V	[M]
C1307	ECA1AAK221XQ	220 10V	[M]
C1308	ECA1CAK220XB	22 16V	[M]
C1310	ECA1HAK0R1XB	0.1 50V	[M]
C1311	ECA1CAK470XB	47 16V	[M]
C1312	ECJ1VB1H332K	3300P 50V	[M]
C1314	ECJ1VB1H222K	2200P 50V	[M]
C1315	ECJ1VB1H222K	2200P 50V	[M]
C1316	ECJ1VB1H102K	1000P 50V	[M]
C1317	ECJ1VB1H102K	1000P 50V	[M]
C1318	ECQV1H473JL3	0.047 50V	[M]
C1319	ECA1CAK101XB	100 16V	[M]
C1320	ECA1HAK010XB	1 50V	[M]
C1321	F0A2A472A015	4700P 100V	[M]
C1322	ECQP2A102JZT	1000P 100V	[M]
C1323	ECEA1HKN010B	1 50V	[M]
C1324	ECA1CAK470XB	47 16V	[M]
C1325	ECJ1VB1E103K	0.01 25V	[M]
C1326	ECA1CAK100XB	10 16V	[M]
C1371	ECJ1VB1H103K	0.01 50V	[M]
C1372	ECJ2VB1E223K	0.022 25V	[M]
C1373	ECJ2VB1E223K	0.022 25V	[M]
C2001	ECEV0JA331P	330 6.3V	[M]
C2002	EEVHB0J101P	100P 6.3V	[M]
C2003	ECUVNC104ZFV	0.1 16V	[M]
C2004	ECUVNC104ZFV	0.1 16V	[M]
C2005	ECUVNC104ZFV	0.1 16V	[M]
C2006	ECUVNC104ZFV	0.1 16V	[M]
C2007	ECUVNC104ZFV	0.1 16V	[M]
C2008	ECUVNC104ZFV	0.1 16V	[M]
C2009	ECUVNC104ZFV	0.1 16V	[M]
C2010	ECUVNC104ZFV	0.1 16V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2011	ECUVNC104ZFV	0.1 16V	[M]
C2015	ECUVNC104ZFV	0.1 16V	[M]
C2021	F1H1H822A022	8200P 50V	[M]
C2022	F1H1C393A089	0.039 16V	[M]
C2023	ECJ1VB1H681K	680 50V	[M]
C2024	ECJ1VB1H681K	680 50V	[M]
C2025	F1H1C473A088	0.047 16V	[M]
C2026	F1H1C473A088	0.047 16V	[M]
C2027	ECJ1VB1H332K	3300P 50V	[M]
C2028	ECUV1H152KBV	1500P 50V	[M]
C2029	ECUV1H152KBV	1500P 50V	[M]
C2030	ECJ1VB1H471K	470P 50V	[M]
C2031	ECJ1VB1H332K	3300 50V	[M]
C2032	F1H1C473A088	0.047 16V	[M]
C2033	ECJ1VB1H332K	3300 50V	[M]
C2034	ECUVNC104KBV	0.1 16V	[M]
C2035	F1H1C473A088	0.047 16V	[M]
C2036	ECJ1VB1H332K	3300 50V	[M]
C2037	ECJ1VB1H102K	1000P 50V	[M]
C2038	F1H1A474A025	0.47 10V	[M]
C2039	ECJ1VB1H103K	0.01 50V	[M]
C2041	F1J1A2250007	22 10V	[M]
C2042	ECUVNC104KBV	0.1 16V	[M]
C2043	ECUVNC104KBV	0.1 16V	[M]
C2044	ECUVNC104ZFV	0.1 16V	[M]
C2045	ECUV1H101JCV	100P 50V	[M]
C2046	ECUV1C333KBV	0.033 16V	[M]
C2047	ECUVNC104KBV	0.1 16V	[M]
C2048	ECJ1VB1H332K	3300 50V	[M]
C2051	ECJ1VB1H103K	0.01 50V	[M]
C2052	ECJ1VB1H102K	1000P 50V	[M]
C2061	RCST1AY106RE	10 10V	[M]
C2062	ECUVNC104ZFV	0.1 16V	[M]
C2063	ECUVNC104ZFV	0.1 16V	[M]
C2064	ECUVNC104ZFV	0.1 16V	[M]
C2501	EEVFC0J221P	220P 6.3V	[M]
C2502	ECEV1CA101WP	100 16V	[M]
C2503	ECEV1CA220WR	22 16V	[M]
C2504	ECUVNC104ZFV	0.1 16V	[M]
C2505	ECUVNC104ZFV	0.1 16V	[M]
C2506	ECUVNC104ZFV	0.1 16V	[M]
C2507	ECUVNC104ZFV	0.1 16V	[M]
C2508	ECUVNC104ZFV	0.1 16V	[M]
C2509	EEVFC1C100R	10P 16V	[M]
C2511	ECUVNC104ZFV	0.1 16V	[M]
C2512	ECUVNC104ZFV	0.1 16V	[M]
C2513	ECUVNC104ZFV	0.1 16V	[M]
C3001	ECEV0JA331P	330 6.3V	[M]
C3002	EEVFC0J221P	220P 6.3V	[M]
C3004	ECJ1VF1A105Z	1 10V	[M]
C3005	ECUVNC104ZFV	0.1 16V	[M]
C3006	ECUVNC104ZFV	0.1 16V	[M]
C3007	ECJ1VF1A105Z	1 10V	[M]
C3008	ECJ1VF1A105Z	1 10V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C3009	ECUVNC104ZFV	0.1 16V	[M]
C3010	ECUVNC104ZFV	0.1 16V	[M]
C3011	ECUVNC104ZFV	0.1 16V	[M]
C3012	ECJ1VF1A105Z	1 10V	[M]
C3013	ECJ1VF1A105Z	1 10V	[M]
C3014	ECUVNC104ZFV	0.1 16V	[M]
C3015	ECUVNC104ZFV	0.1 16V	[M]
C3016	ECJ1VF1A105Z	1 10V	[M]
C3017	ECUVNC104ZFV	0.1 16V	[M]
C3018	ECUVNC104ZFV	0.1 16V	[M]
C3019	ECJ1VF1A105Z	1 10V	[M]
C3020	ECJ1VF1A105Z	1 10V	[M]
C3021	ECUVNC104ZFV	0.1 16V	[M]
C3022	ECUVNC104ZFV	0.1 16V	[M]
C3023	ECUVNC104ZFV	0.1 16V	[M]
C3024	ECJ1VF1A105Z	1 10V	[M]
C3025	ECUVNC104ZFV	0.1 16V	[M]
C3026	ECJ1VF1A105Z	1 10V	[M]
C3027	ECUVNC104ZFV	0.1 16V	[M]
C3028	ECUVNC104ZFV	0.1 16V	[M]
C3029	ECUVNC104ZFV	0.1 16V	[M]
C3030	ECJ1VF1A105Z	1 10V	[M]
C3031	ECUVNC104ZFV	0.1 16V	[M]
C3032	ECUVNC104ZFV	0.1 16V	[M]
C3033	ECUVNC104ZFV	0.1 16V	[M]
C3034	ECUVNC104ZFV	0.1 16V	[M]
C3035	ECUVNC104ZFV	0.1 16V	[M]
C3036	ECJ1VC1H220J	22P 50V	[M]
C3041	ECUVNC104ZFV	0.1 16V	[M]
C3042	ECUVNC104ZFV	0.1 16V	[M]
C3043	ECUVNC104ZFV	0.1 16V	[M]
C3044	ECUVNC104ZFV	0.1 16V	[M]
C3045	ECUVNC104ZFV	0.1 16V	[M]
C3060	ECUVNC104ZFV	0.1 16V	[M]
C3061	ECUVNC104ZFV	0.1 16V	[M]
C3062	ECUVNC104ZFV	0.1 16V	[M]
C3063	ECUVNC104ZFV	0.1 16V	[M]
C3064	ECUVNC104ZFV	0.1 16V	[M]
C3065	ECJ1VF1A105Z	1 10V	[M]
C3066	ECUVNC104ZFV	0.1 16V	[M]
C3071	ECUVNC104ZFV	0.1 16V	[M]
C3072	ECUVNC104ZFV	0.1 16V	[M]
C3073	ECUVNC104ZFV	0.1 16V	[M]
C3074	ECUVNC104ZFV	0.1 16V	[M]
C3075	ECJ1VF1A105Z	1 10V	[M]
C3076	ECUVNC104ZFV	0.1 16V	[M]
C3080	ECEV0JA331P	330 6.3V	[M]
C3081	ECUVNC104ZFV	0.1 16V	[M]
C3082	ECUVNC104ZFV	0.1 16V	[M]
C3083	F1H0J1050013	1 6.3V	[M]
C3084	F1H0J1050013	1 6.3V	[M]
C3085	F1H0J1050013	1 6.3V	[M]
C3086	F1H0J1050013	1 6.3V	[M]
C3087	ECUVNC104ZFV	0.1 16V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C3088	ECUVNC104ZFV	0.1 16V	[M]
C3089	ECUVNC104ZFV	0.1 16V	[M]
C3209	ECUVNC104ZFV	0.1 16V	[M]
C3210	ECUVNC104ZFV	0.1 16V	[M]
C3215	ECUVNC104ZFV	0.1 16V	[M]
C3301	EEVHB0J101P	100P 6.3V	[M]
C3302	ECUVNC104ZFV	0.1 16V	[M]
C3303	EEVHB1C100R	10P 16V	[M]
C3305	ECJ1VB1H103K	0.01 50V	[M]
C3307	ECJ1VB1H103K	0.01 50V	[M]
C3308	ECJ1VC1H150J	15P 50V	[M]
C4207	ECUVNC104ZFV	0.1 16V	[M]
C4208	ECUVNC104ZFV	0.1 16V	[M]
C4209	ECUVNC104ZFV	0.1 16V	[M]
C4210	ECUVNC104ZFV	0.1 16V	[M]
C4213	RCST1AY106RE	10 10V	[M]
C4215	ECUVNC104ZFV	0.1 16V	[M]
C4216	EEVHB0J101P	100P 6.3V	[M]
C4218	ECUVNC104ZFV	0.1 16V	[M]
C4222	ECEV0JA331P	330 6.3V	[M]
C5201	EEVHB1C100R	10P 16V	[M]
C5202	EEVHB1C100R	10P 16V	[M]
C5203	ECUVNC104ZFV	0.1 16V	[M]
C5204	ECUVNC104ZFV	0.1 16V	[M]
C5205	ECJ1VC1H102J	1000P 50V	[M]
C5206	ECJ1VC1H102J	1000P 50V	[M]
C5207	ECJ1VC1H102J	1000P 50V	[M]
C5208	ECJ1VC1H102J	1000P 50V	[M]
C5211	EEVHB0J470R	47 6.3V	[M]
C5215	EEVHB0J470R	47 6.3V	[M]
C5221	ECUVNC104ZFV	0.1 16V	[M]
C5223	ECUVNC104ZFV	0.1 16V	[M]
C5224	ECUVNC104KBV	0.1 16V	[M]
C5225	ECUVNC104KBV	0.1 16V	[M]
C5231	ECUV1H101JCV	100P 50V	[M]
C5232	ECUVNC104ZFV	0.1 16V	[M]
C5233	ECUVNC104ZFV	0.1 16V	[M]
C5234	ECJ1VB1H222K	2200P 50V	[M]
C5235	F1H1H391A765	390P 50V	[M]
C5236	ECJ1VC1H102J	1000P 50V	[M]
C5237	ECUVNC104KBV	0.1 16V	[M]
C5238	F1H1A2240004	0.22 10V	[M]
C5239	ECUVNC104KBV	0.1 16V	[M]
C5240	F1H1H561A765	560P 50V	[M]
C5242	ECJ1VB1H472K	4700P 50V	[M]
C5251	ECUVNC104ZFV	0.1 16V	[M]
C5252	VCS1AS106R	10 10V	[M]
C5253	ERJ3GEYJ472V	4.7K 1/16W	[M]
C6201	EEVHB0J330R	33 6.3V	[M]
C6202	ECUVNC104ZFV	0.1 16V	[M]
C6203	ECUVNC104ZFV	0.1 16V	[M]
C6204	ECUVNC104ZFV	0.1 16V	[M]
C6205	ECUVNC104ZFV	0.1 16V	[M]
C6206	ECUVNC104ZFV	0.1 16V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C6211	ECUV1H101JCV	100P 50V	[M]
C6221	ECUVNC104ZFV	0.1 16V	[M]
C6222	ECUVNC104ZFV	0.1 16V	[M]
C6251	ECUVNC104KBV	0.1 16V	[M]
C6253	RCST1AY106RE	10 10V	[M]
C6257	EEVHB0J101P	100P 6.3V	[M]
C6301	ECUVNC104ZFV	0.1 16V	[M]
C6302	ECUVNC104KBV	0.1 16V	[M]
C6303	ECUVNC104ZFV	0.1 16V	[M]
C6304	ECUVNC104ZFV	0.1 16V	[M]
C6305	ECUVNC104ZFV	0.1 16V	[M]
C6501	EEVHB0J330R	33 6.3V	[M]
C6502	EEVHB0J330R	33 6.3V	[M]
C6503	ECUVNC104ZFV	0.1 16V	[M]
C6504	ECUVNC104ZFV	0.1 16V	[M]
C6505	ECUVNC104ZFV	0.1 16V	[M]
C6511	ECJ1VC1H150J	15P 50V	[M]
C6512	ECJ1VC1H150J	15P 50V	[M]


16.5. Packing Materials & Accessories Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PACKING MATERIALS	
P1	RPGX0878	PACKING CASE	[M]
P2	RPN1406-1	POLYFOAM	[M]
P3	RPF0007	MIRAMAT BAG	[M]
		ACCESSORIES	
A1	N2QAJB000059	REMOTE CONTROL	[M]
A1-1	RKK-SA958WK	R/C BATTERY COVER	[M]
A2	RJA0035-X	AC CORD (SF)	[M] 
A3	RQT6345-1P	O/I BOOK	[M]
A4	RSA0006-J	FM ANTENNA	[M]
A5	RSA0033	AM LOOP ANTENNA	[M]
A6	RJL1P016B15A	VIDEO CABLE	[M]

16.6. Packaging





Printed in Singapore
P020600001 D/S/K/J/N/L/A/PRT

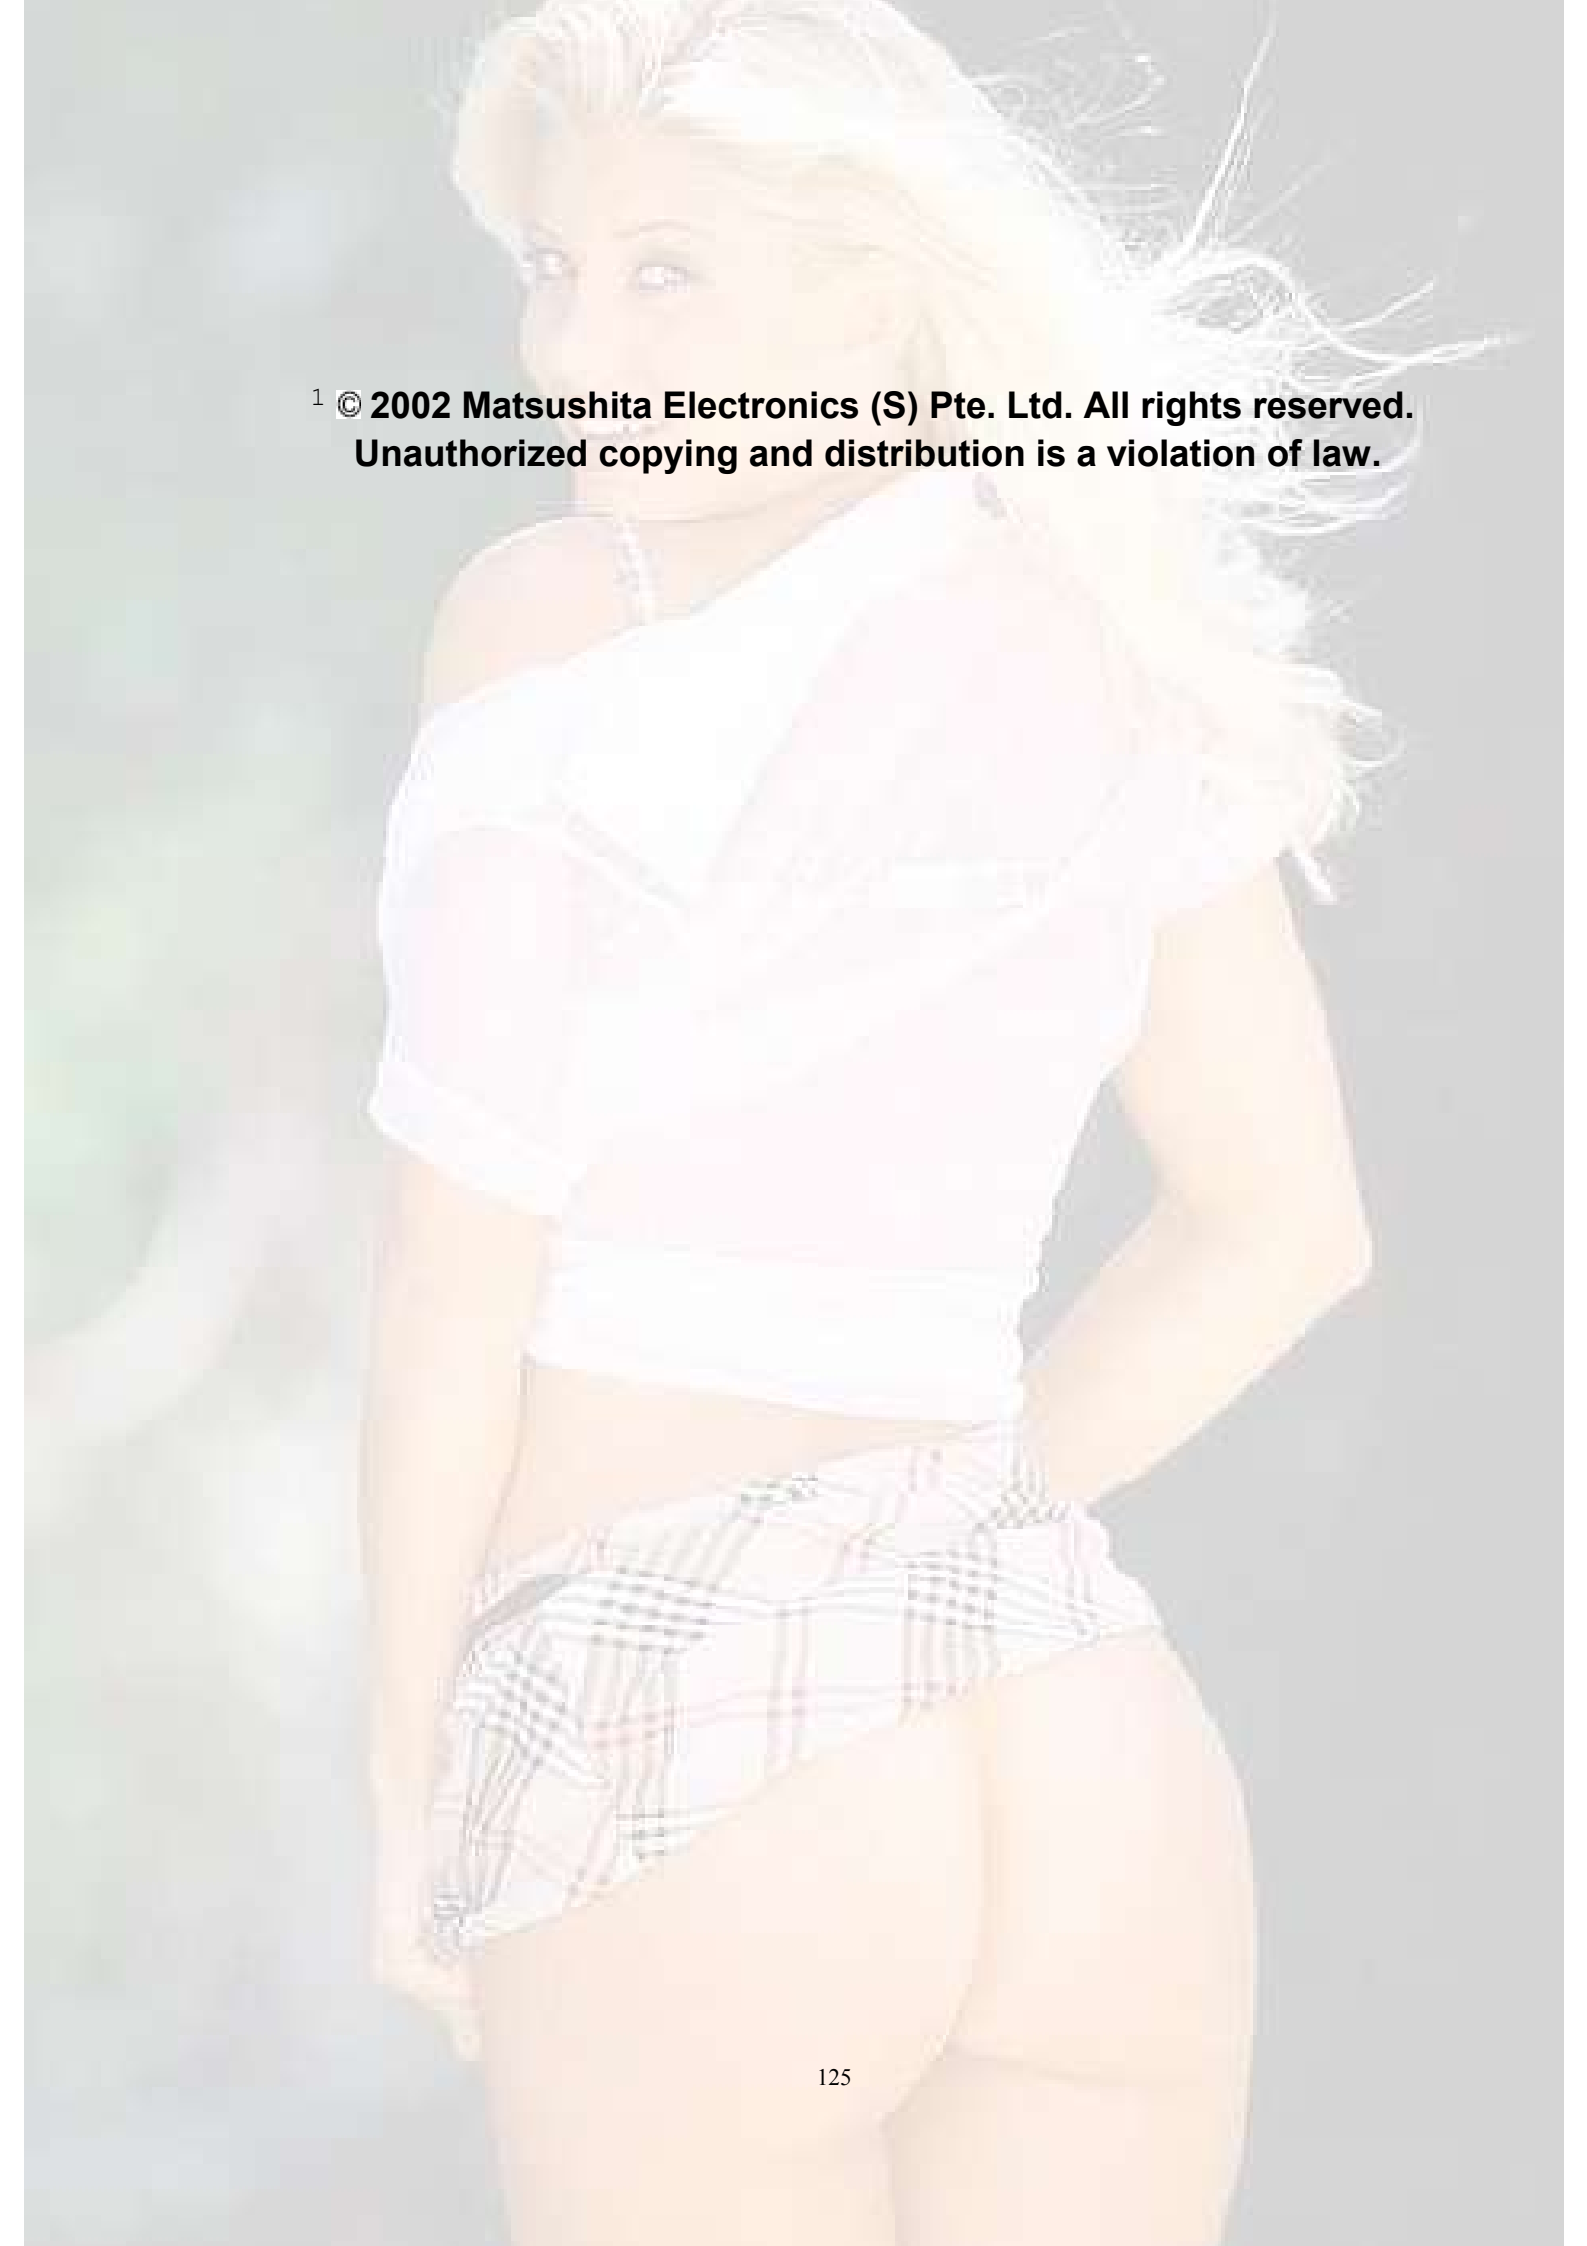



¹ © 2002 Matsushita Electronics (S) Pte. Ltd. All rights reserved.
Unauthorized copying and distribution is a violation of law.


C0JBAR000292 (14P) C1BB00000574 (16P) M62457AFPE1 (16P) NJU7313AMT2 (30P) M5218AFPE3 (8P) M5228FPE1 (14P) M62444FPE1		C2BBFD000307 (42P) C2BBFD000308 (42P) C3ABKG000057 C3ABMG000103 C1AB00001393 C1DB00000582 C3EBFC000030 (8P)		AN8708FHK (48P) C0FBBK000021 (48P) C2BBGF000359 (100P) MN677533MP (208P) MN677203NP1 (144P) C2HBZC000012 (80P) MN102H60GFC (100P)		RFKFMA62F080	LM2940T5M
C0DBAJG000002	M5218AP	C1AA00000612	C0JBAA000001 C0EBE0000070	STK470-050A	C0GAM0000005	AN7326K C0GBG0000033	
2SB14170QA	RSN311W64B-P	CNB13030R2AU	C3EBFC000030	KTC2026 KTA1046YU	B1BDBF000004	B1GFGCAA0001	
	B1AAGC000007 KRA102MTA KRC102MTA KTC3199GRTA B1GACFGG0004 B1AAAL000002		B1ADCF000001 B1ABCF000011 B1GDCFJJ0002 B1GBCFGH0001 B1GBCFJN0004 B1ABGC000001	B1GBCFJJ0002 B1GBCFJA0002 UN5212TX KRC103STA B1GDCFGH0002 B1GBCFNA0002	2SB621ARSTA 2SD09650RA KTA12710YTA	2SC3940ARA	
MA2C16500E MA2C700A0F MA729TX B0AACK000004			B0BA02800001 B0BA4R600003 B0BA01500036 B0BA9R000007		MA2J11100L	SFPB-72V	
	B0BC5R000009 B0BC7R500001 B0BC9R000008		B0EAKM000085 RL1N4003N02 1N5402BM21	MA2J72800L	1SS355TE17 1SS380TE-17	B0ADCJ000020 B0ADCC000002	
SELS5923C	LNJ201LPQJA	SLR325MCT31W					

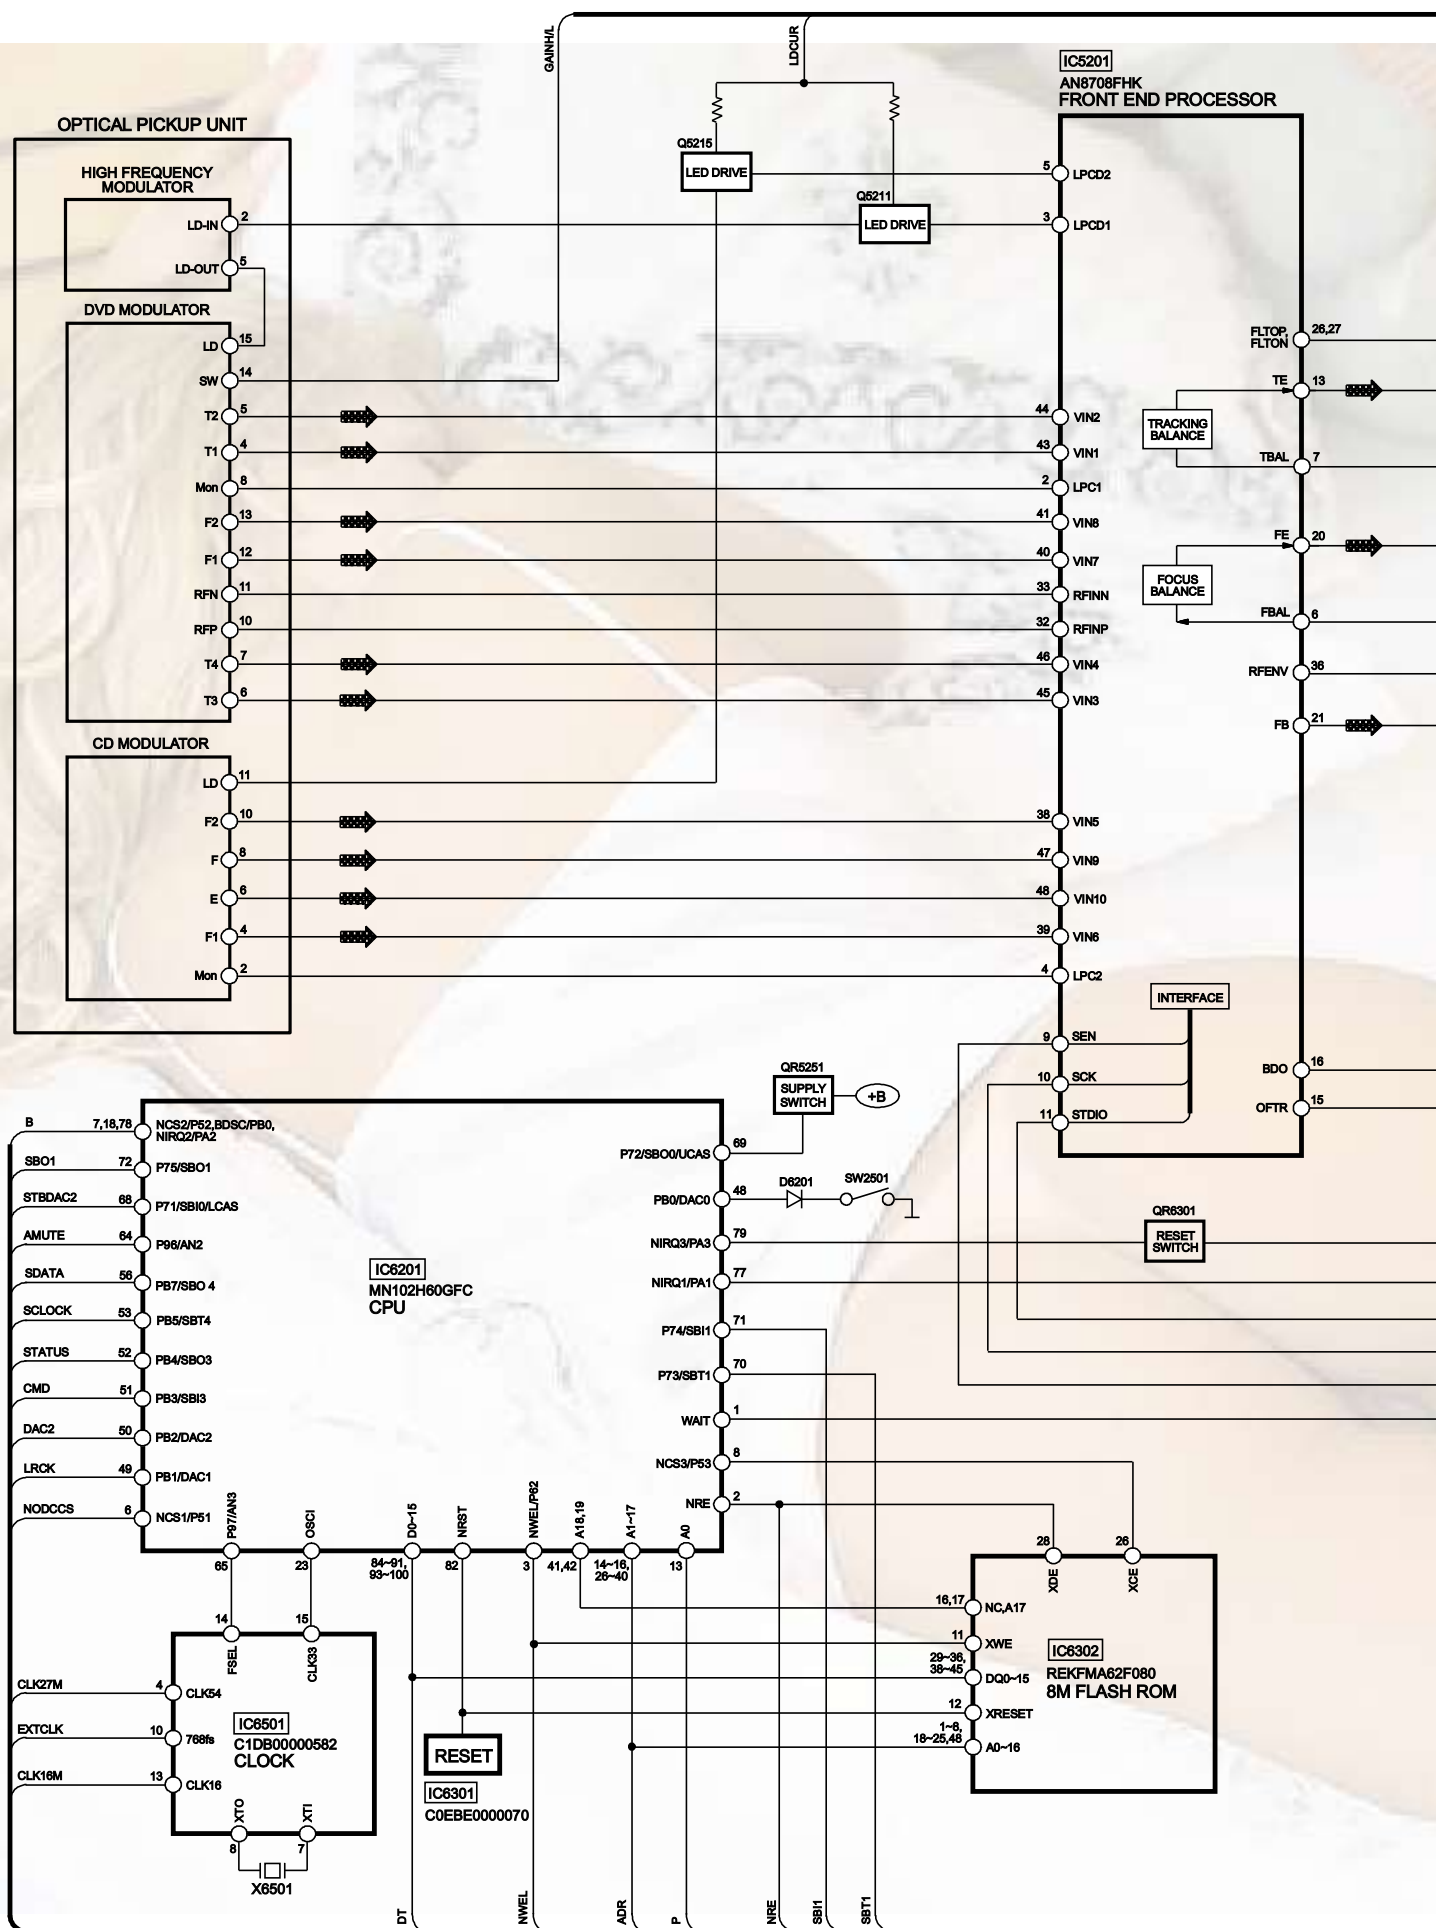


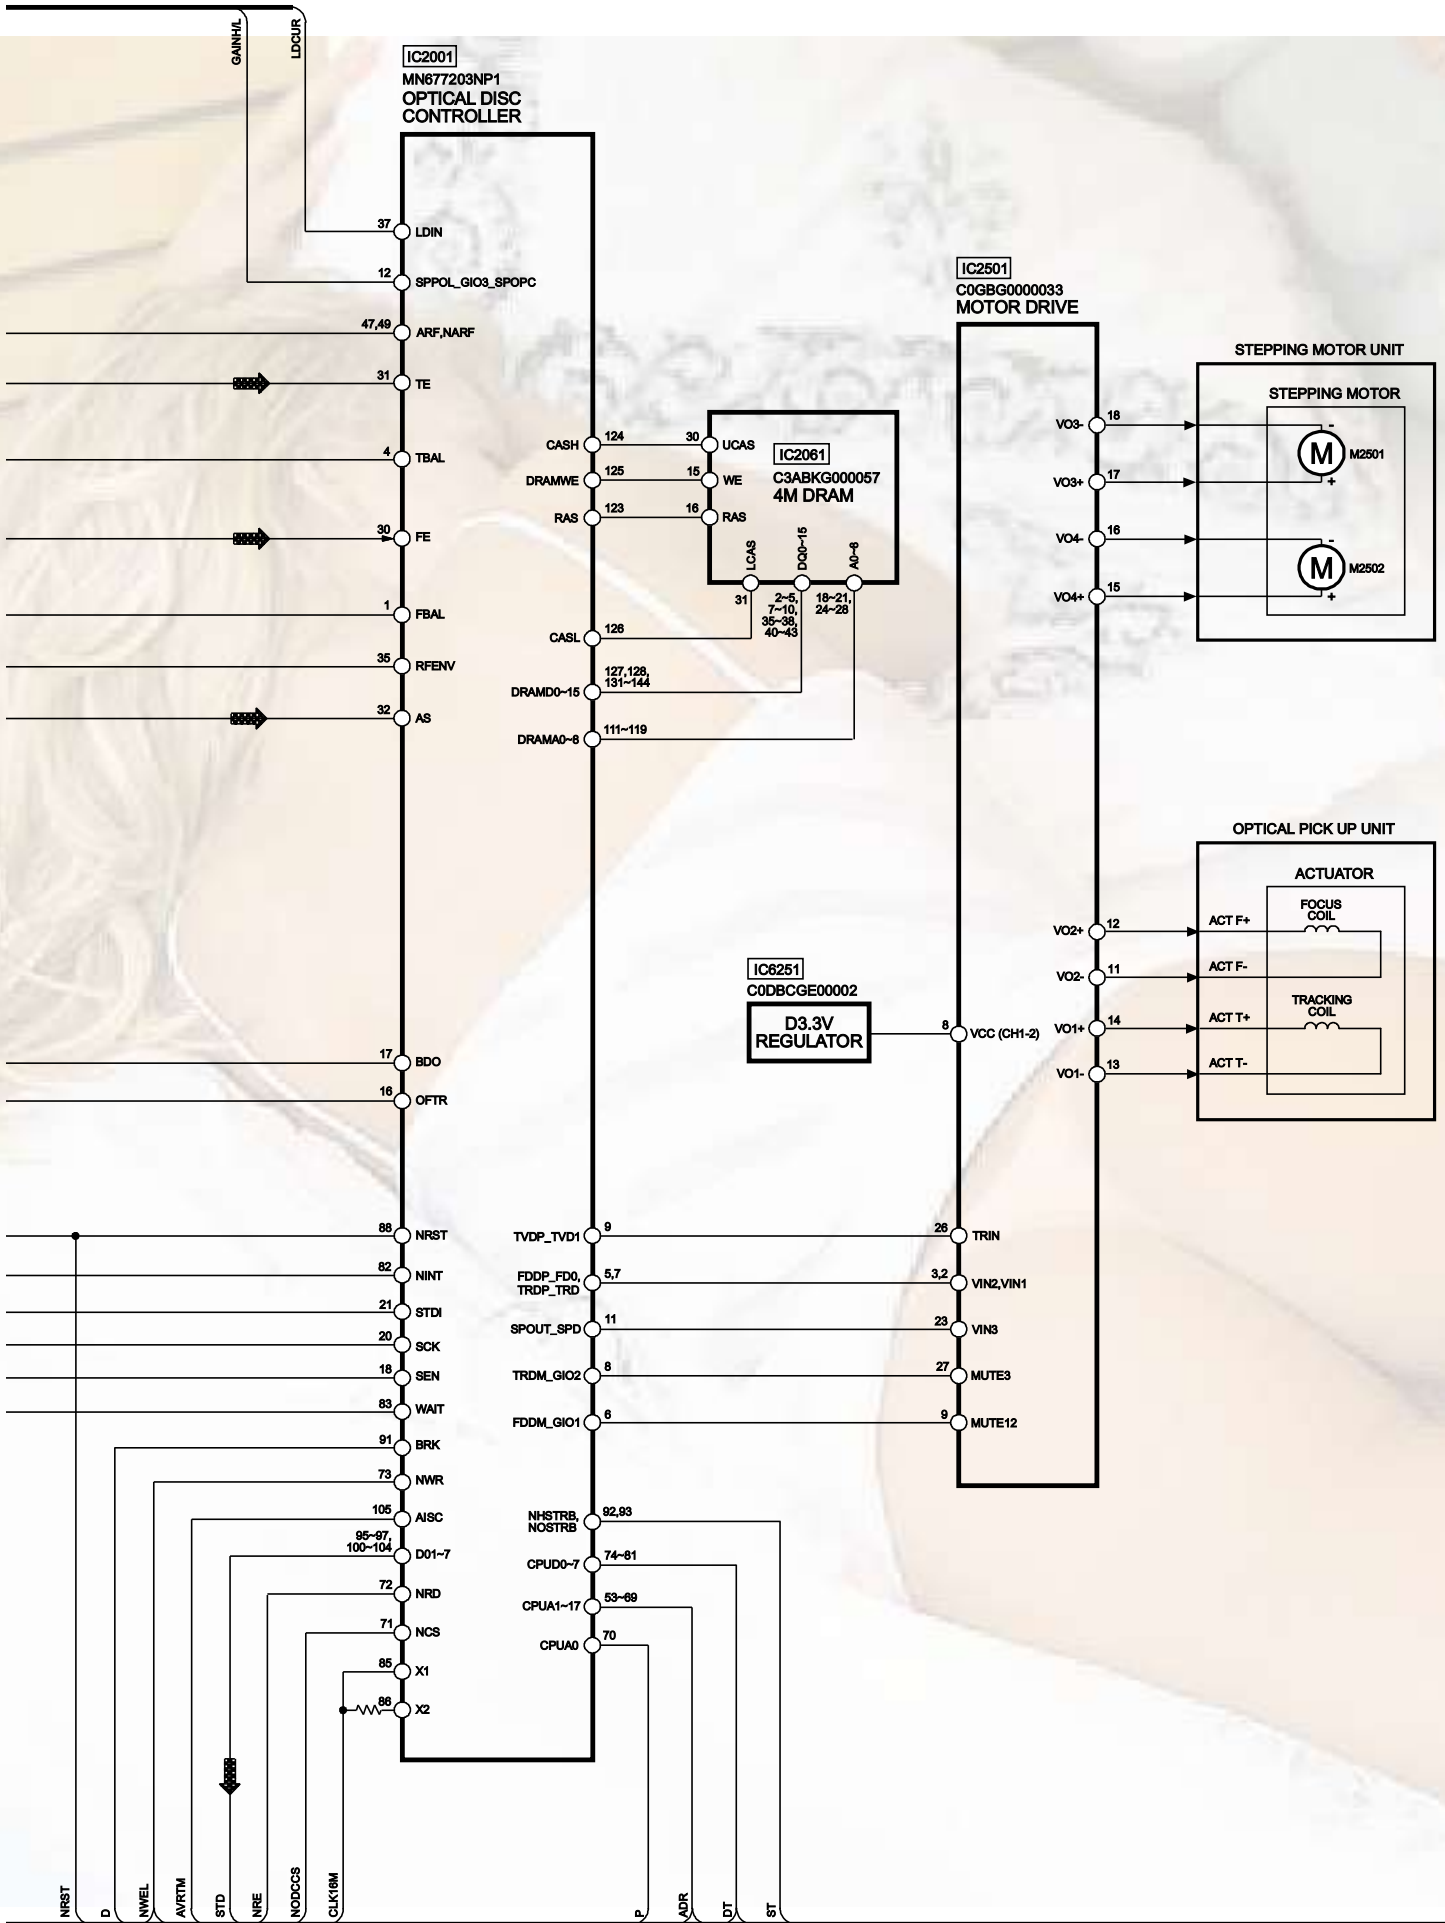


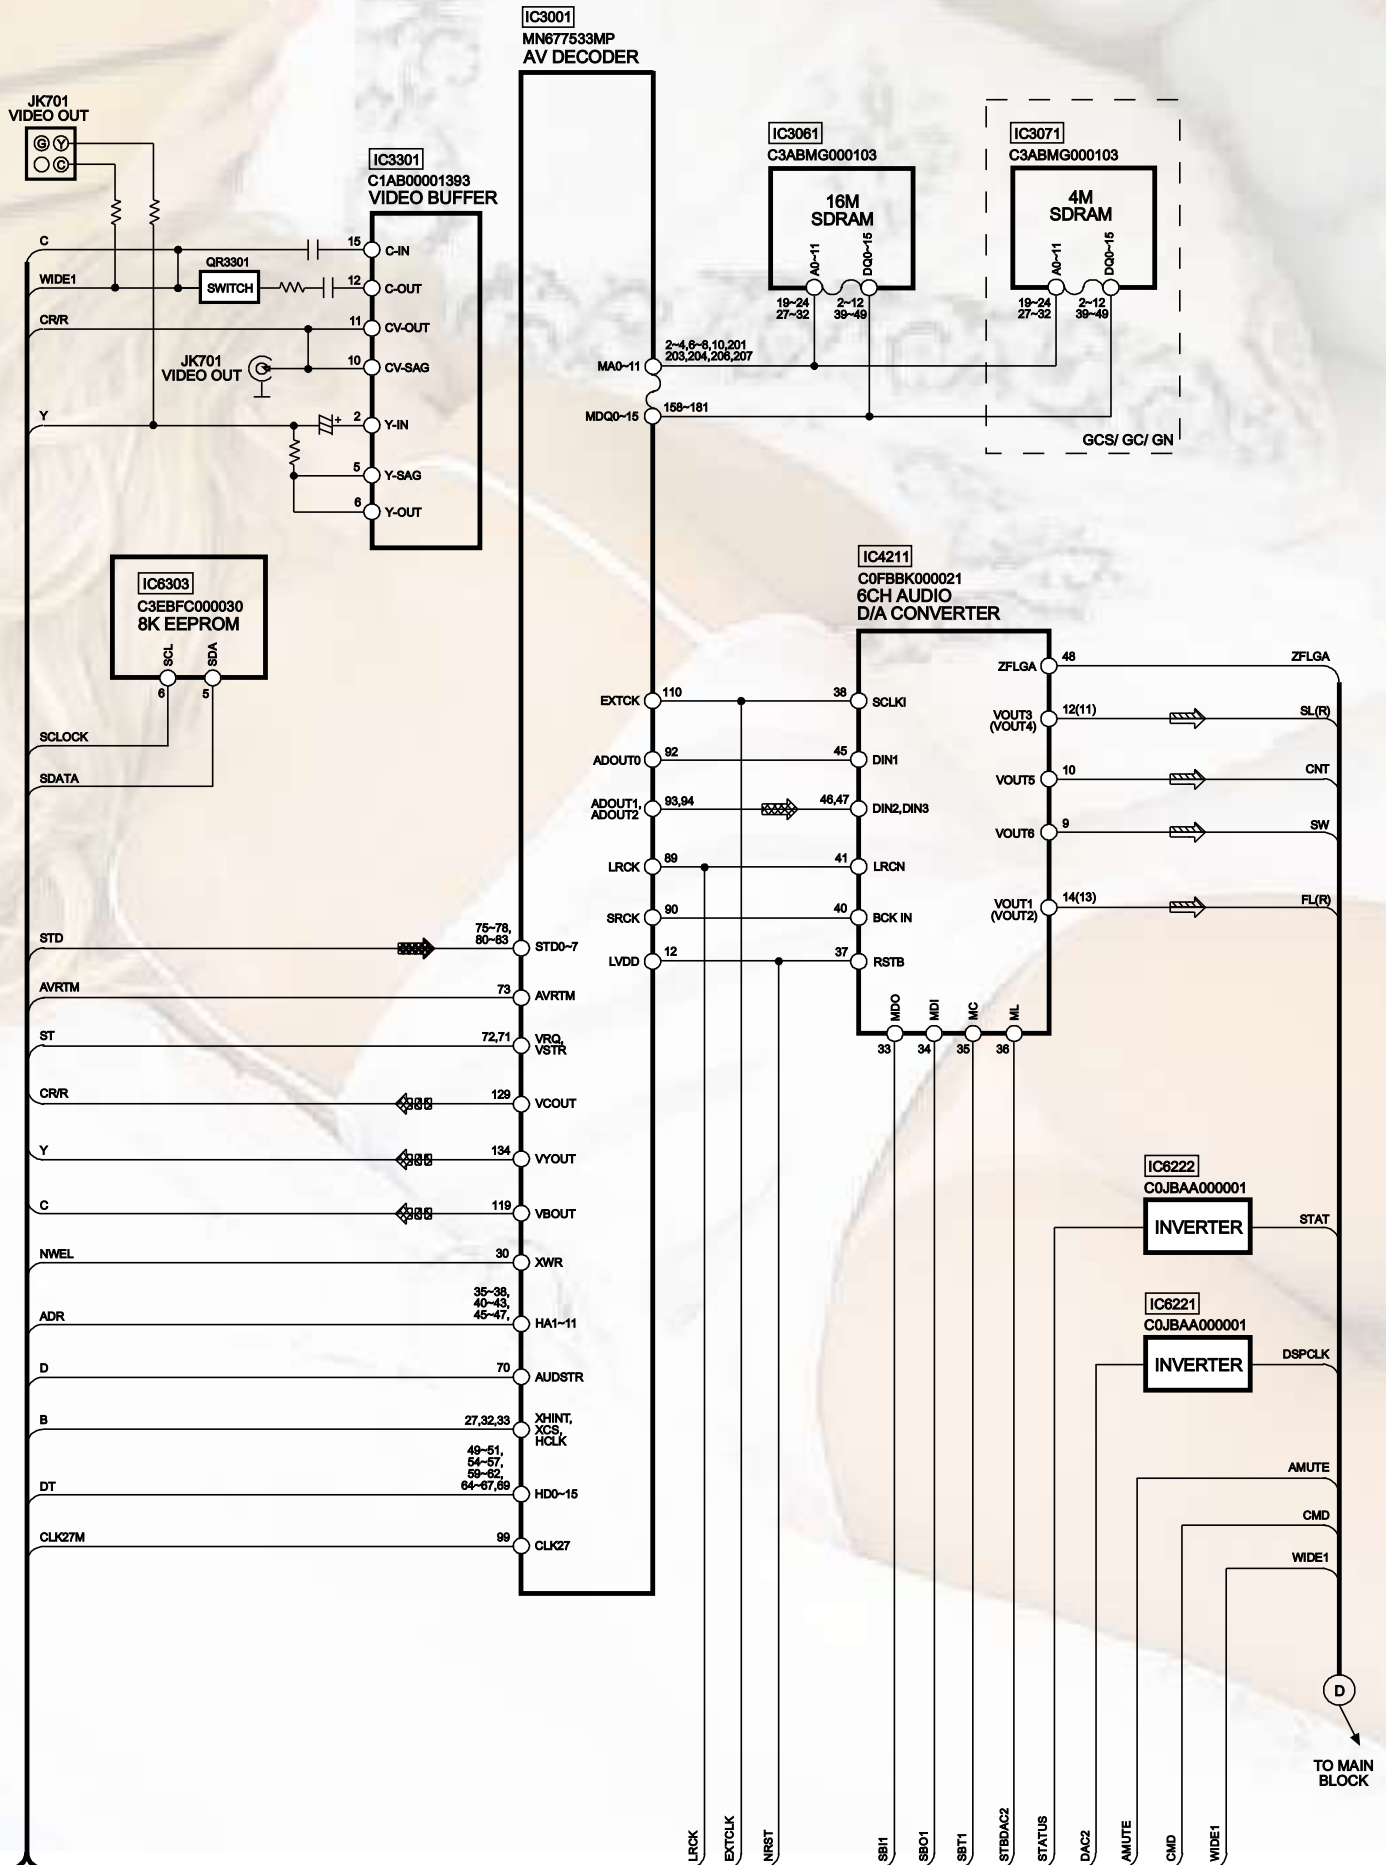

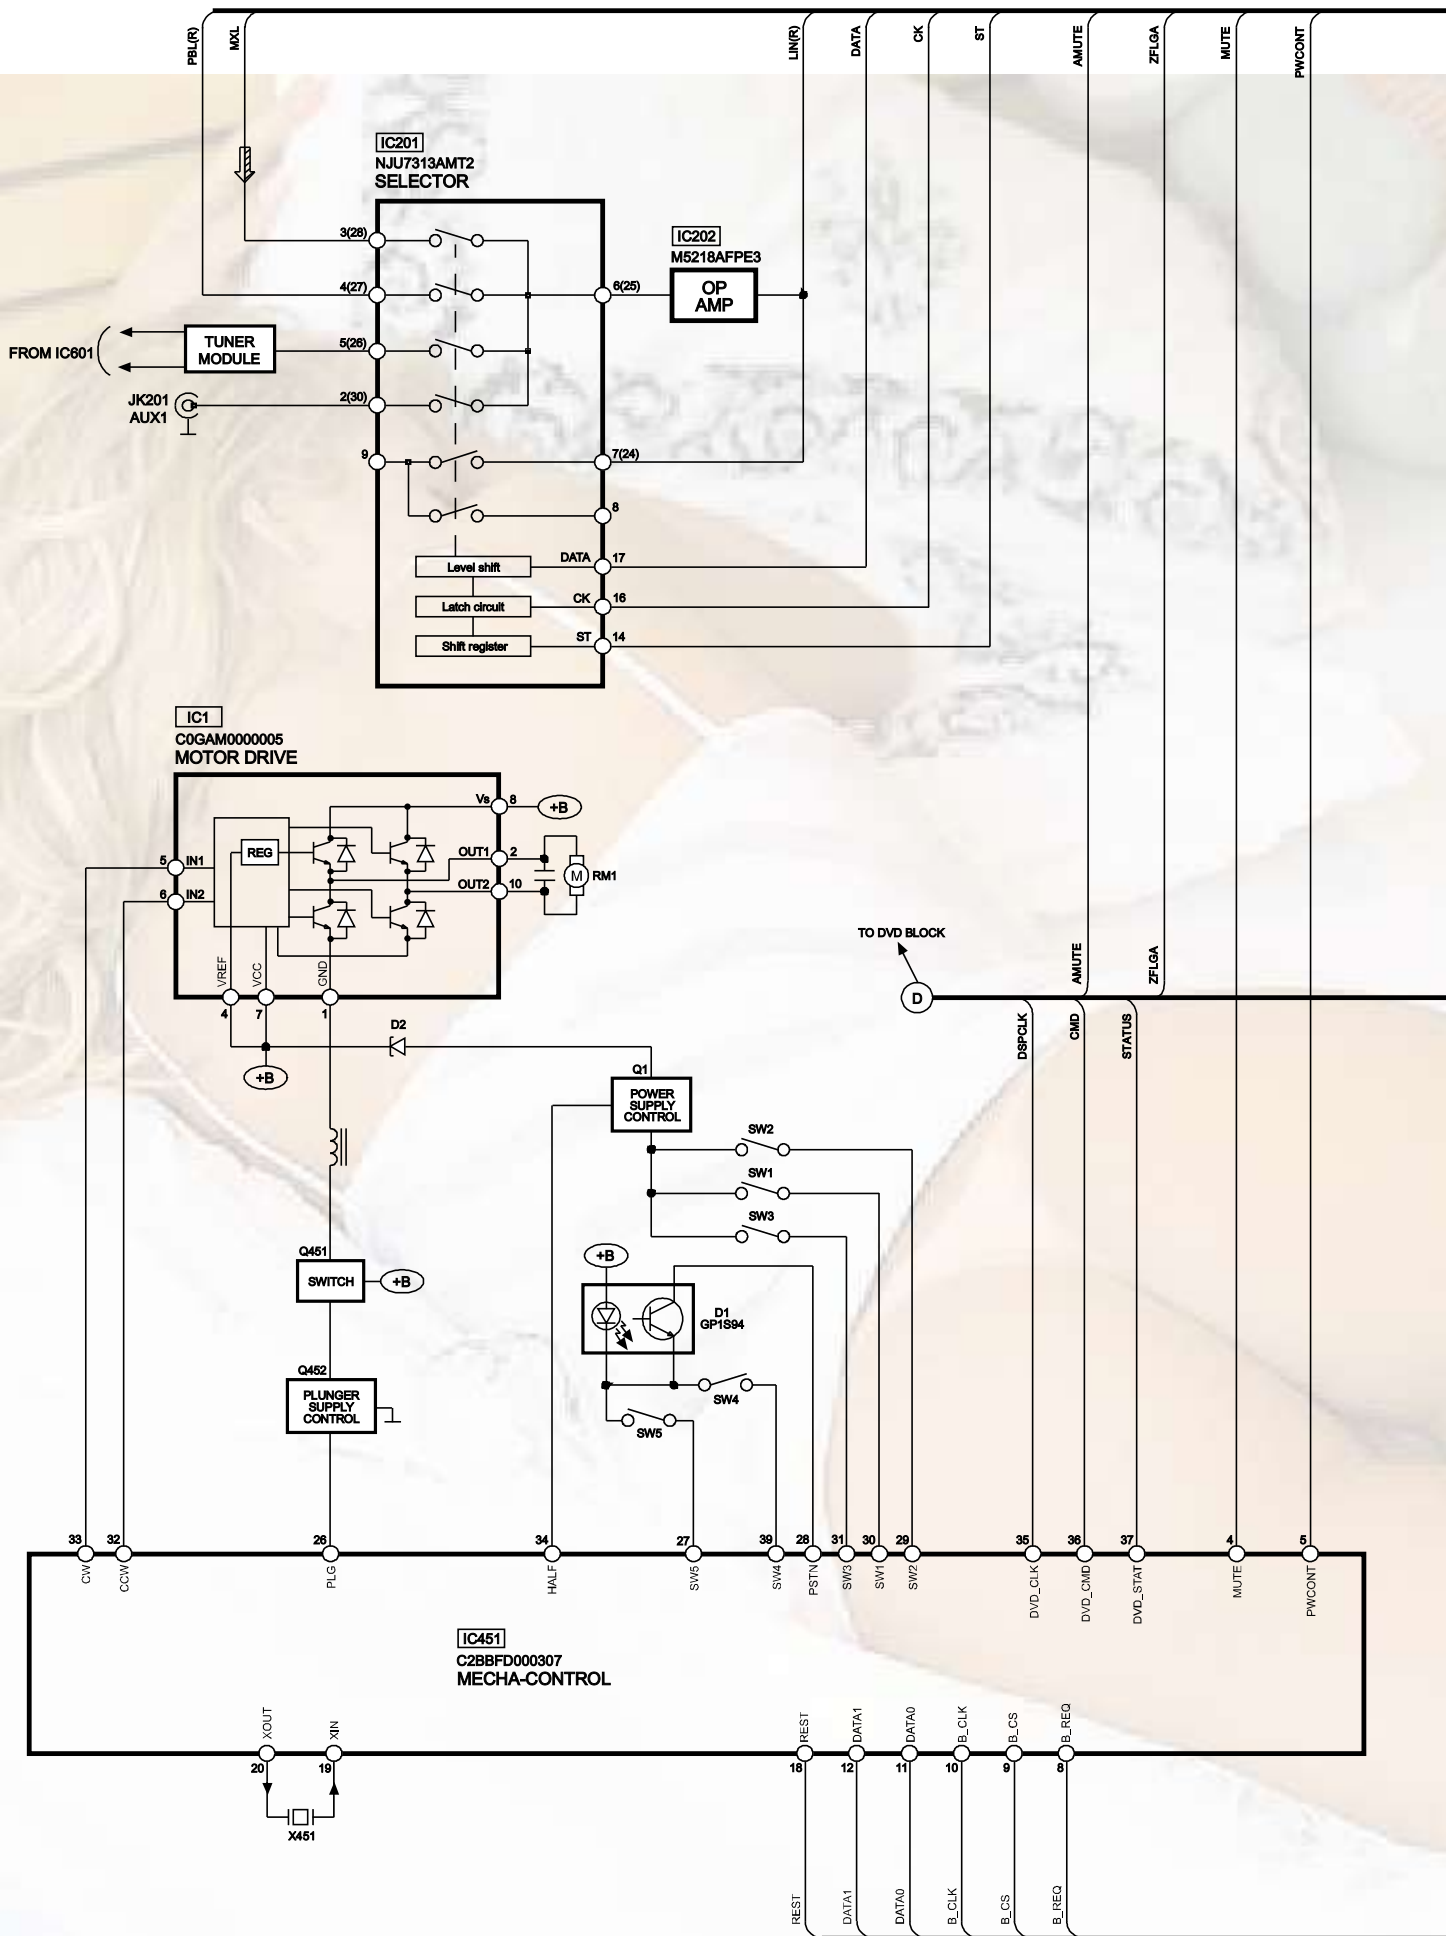

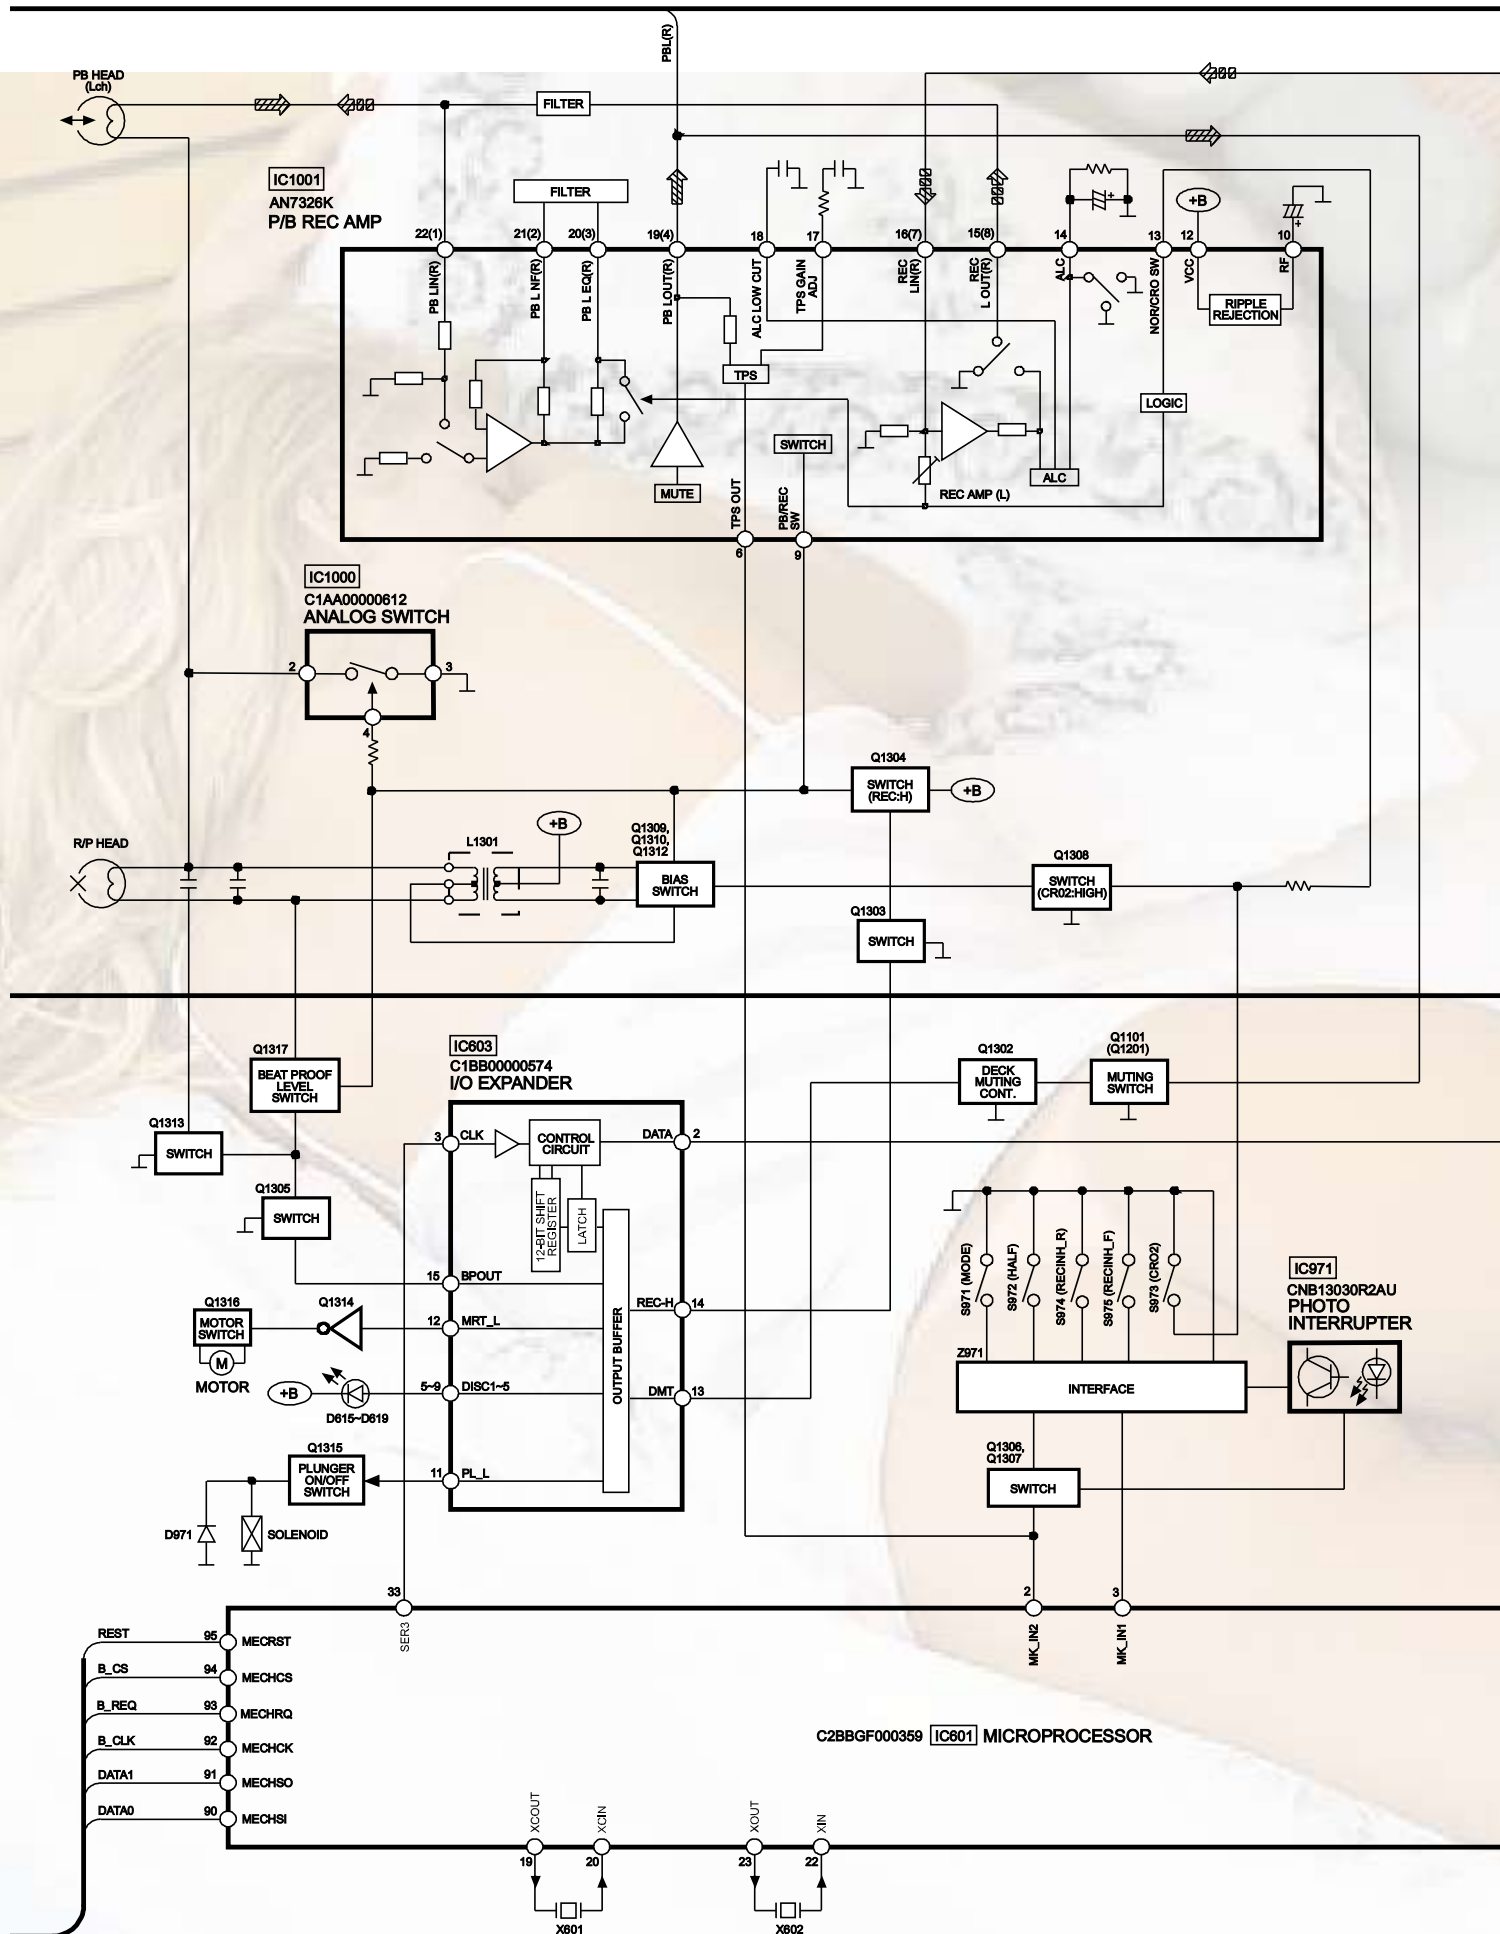

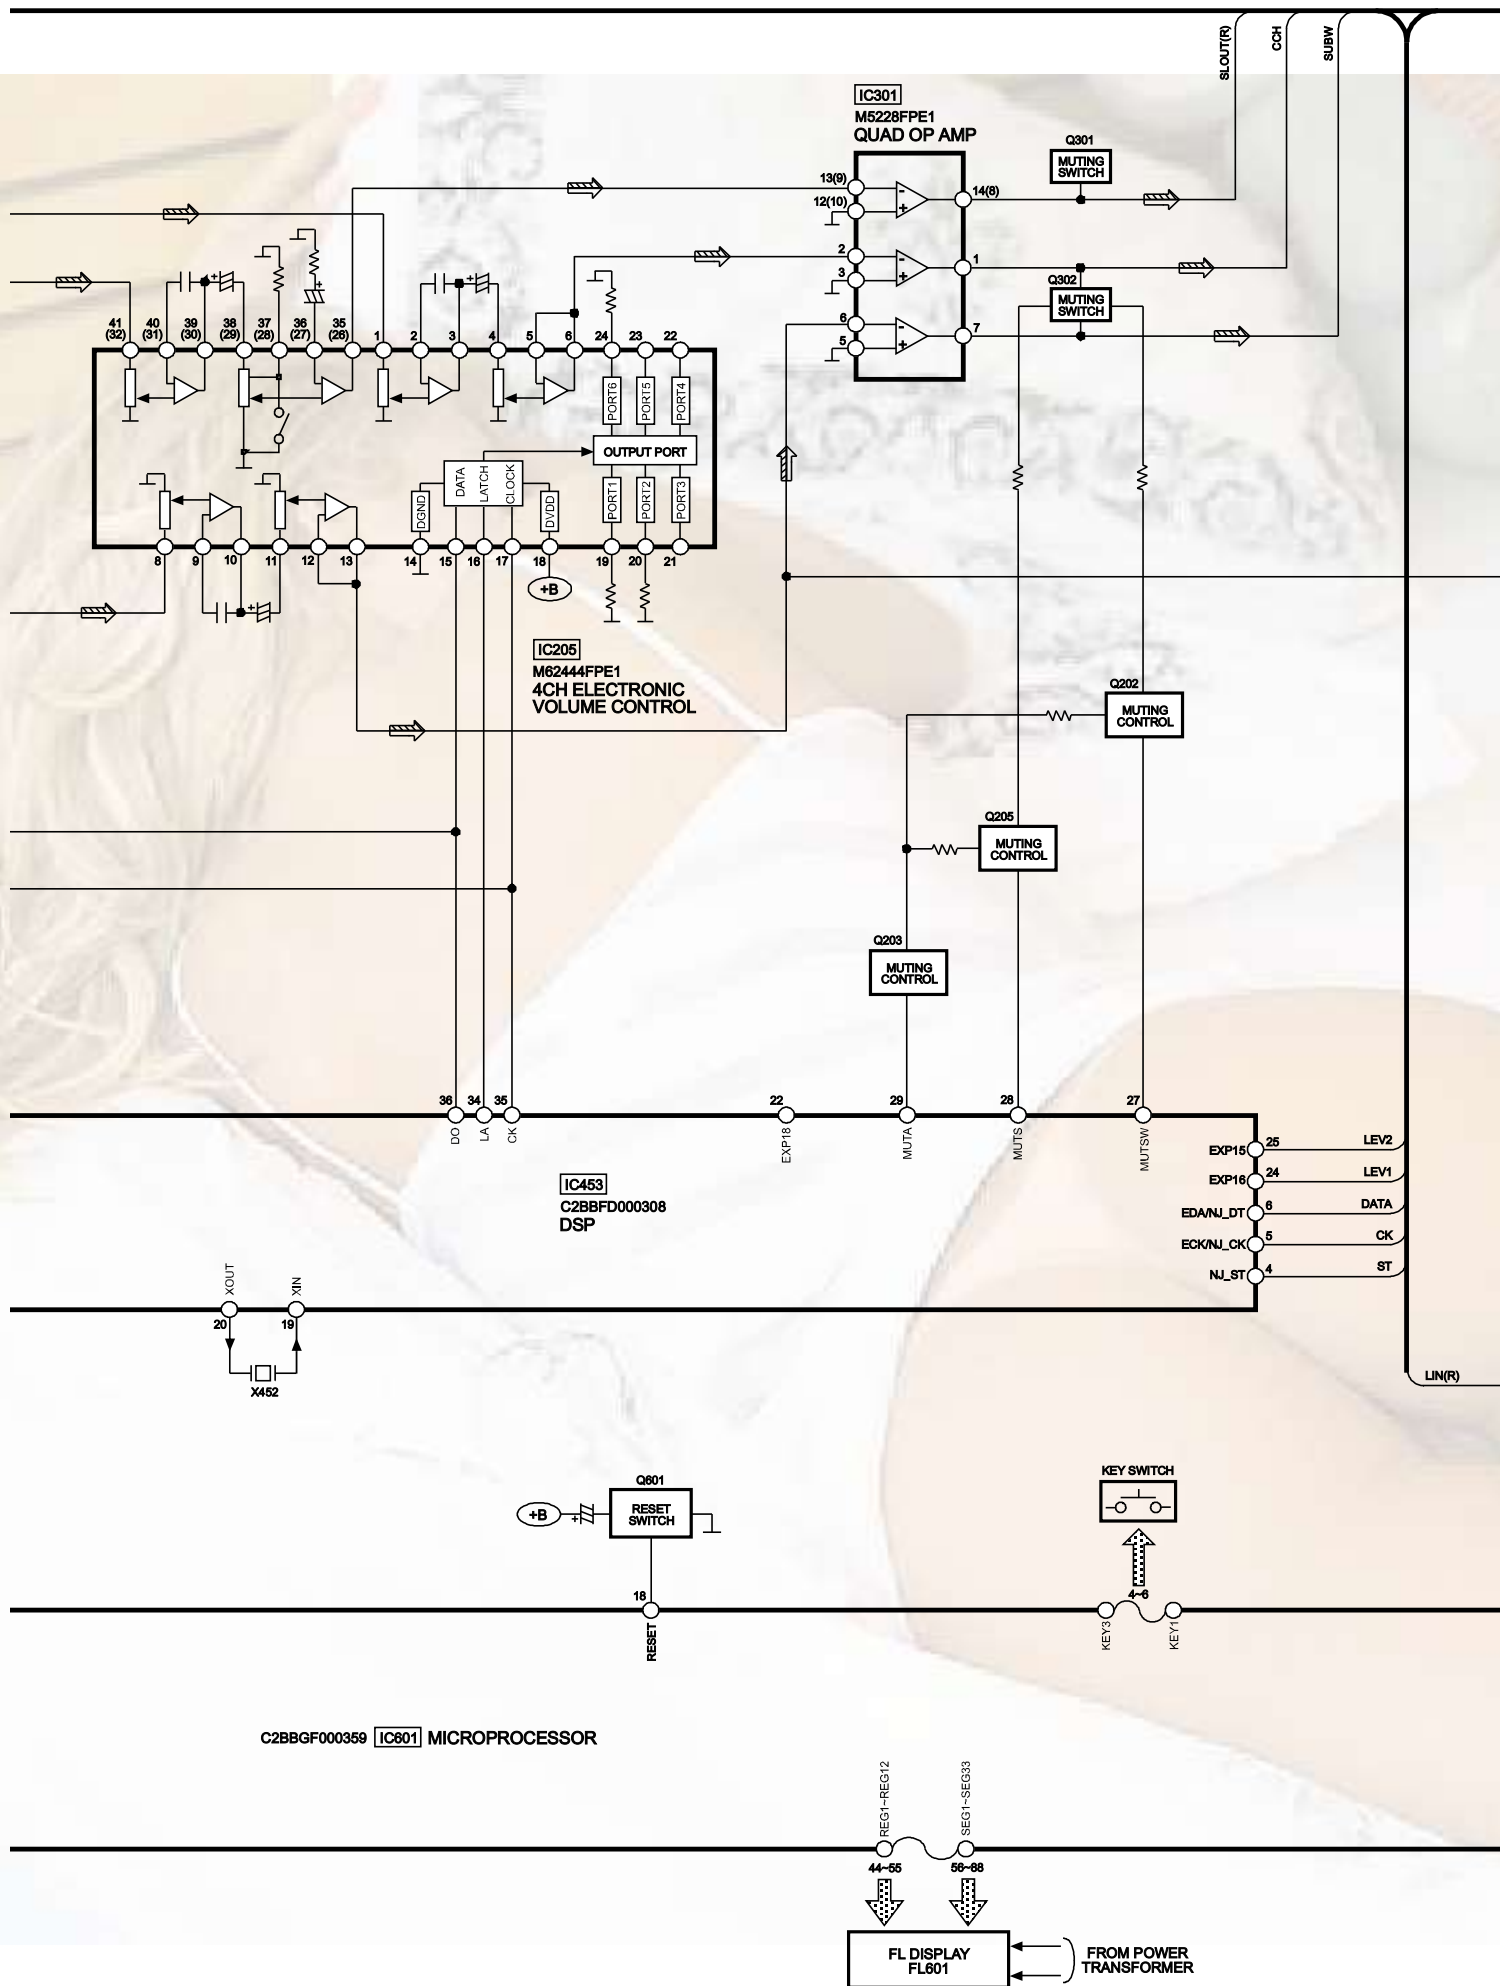

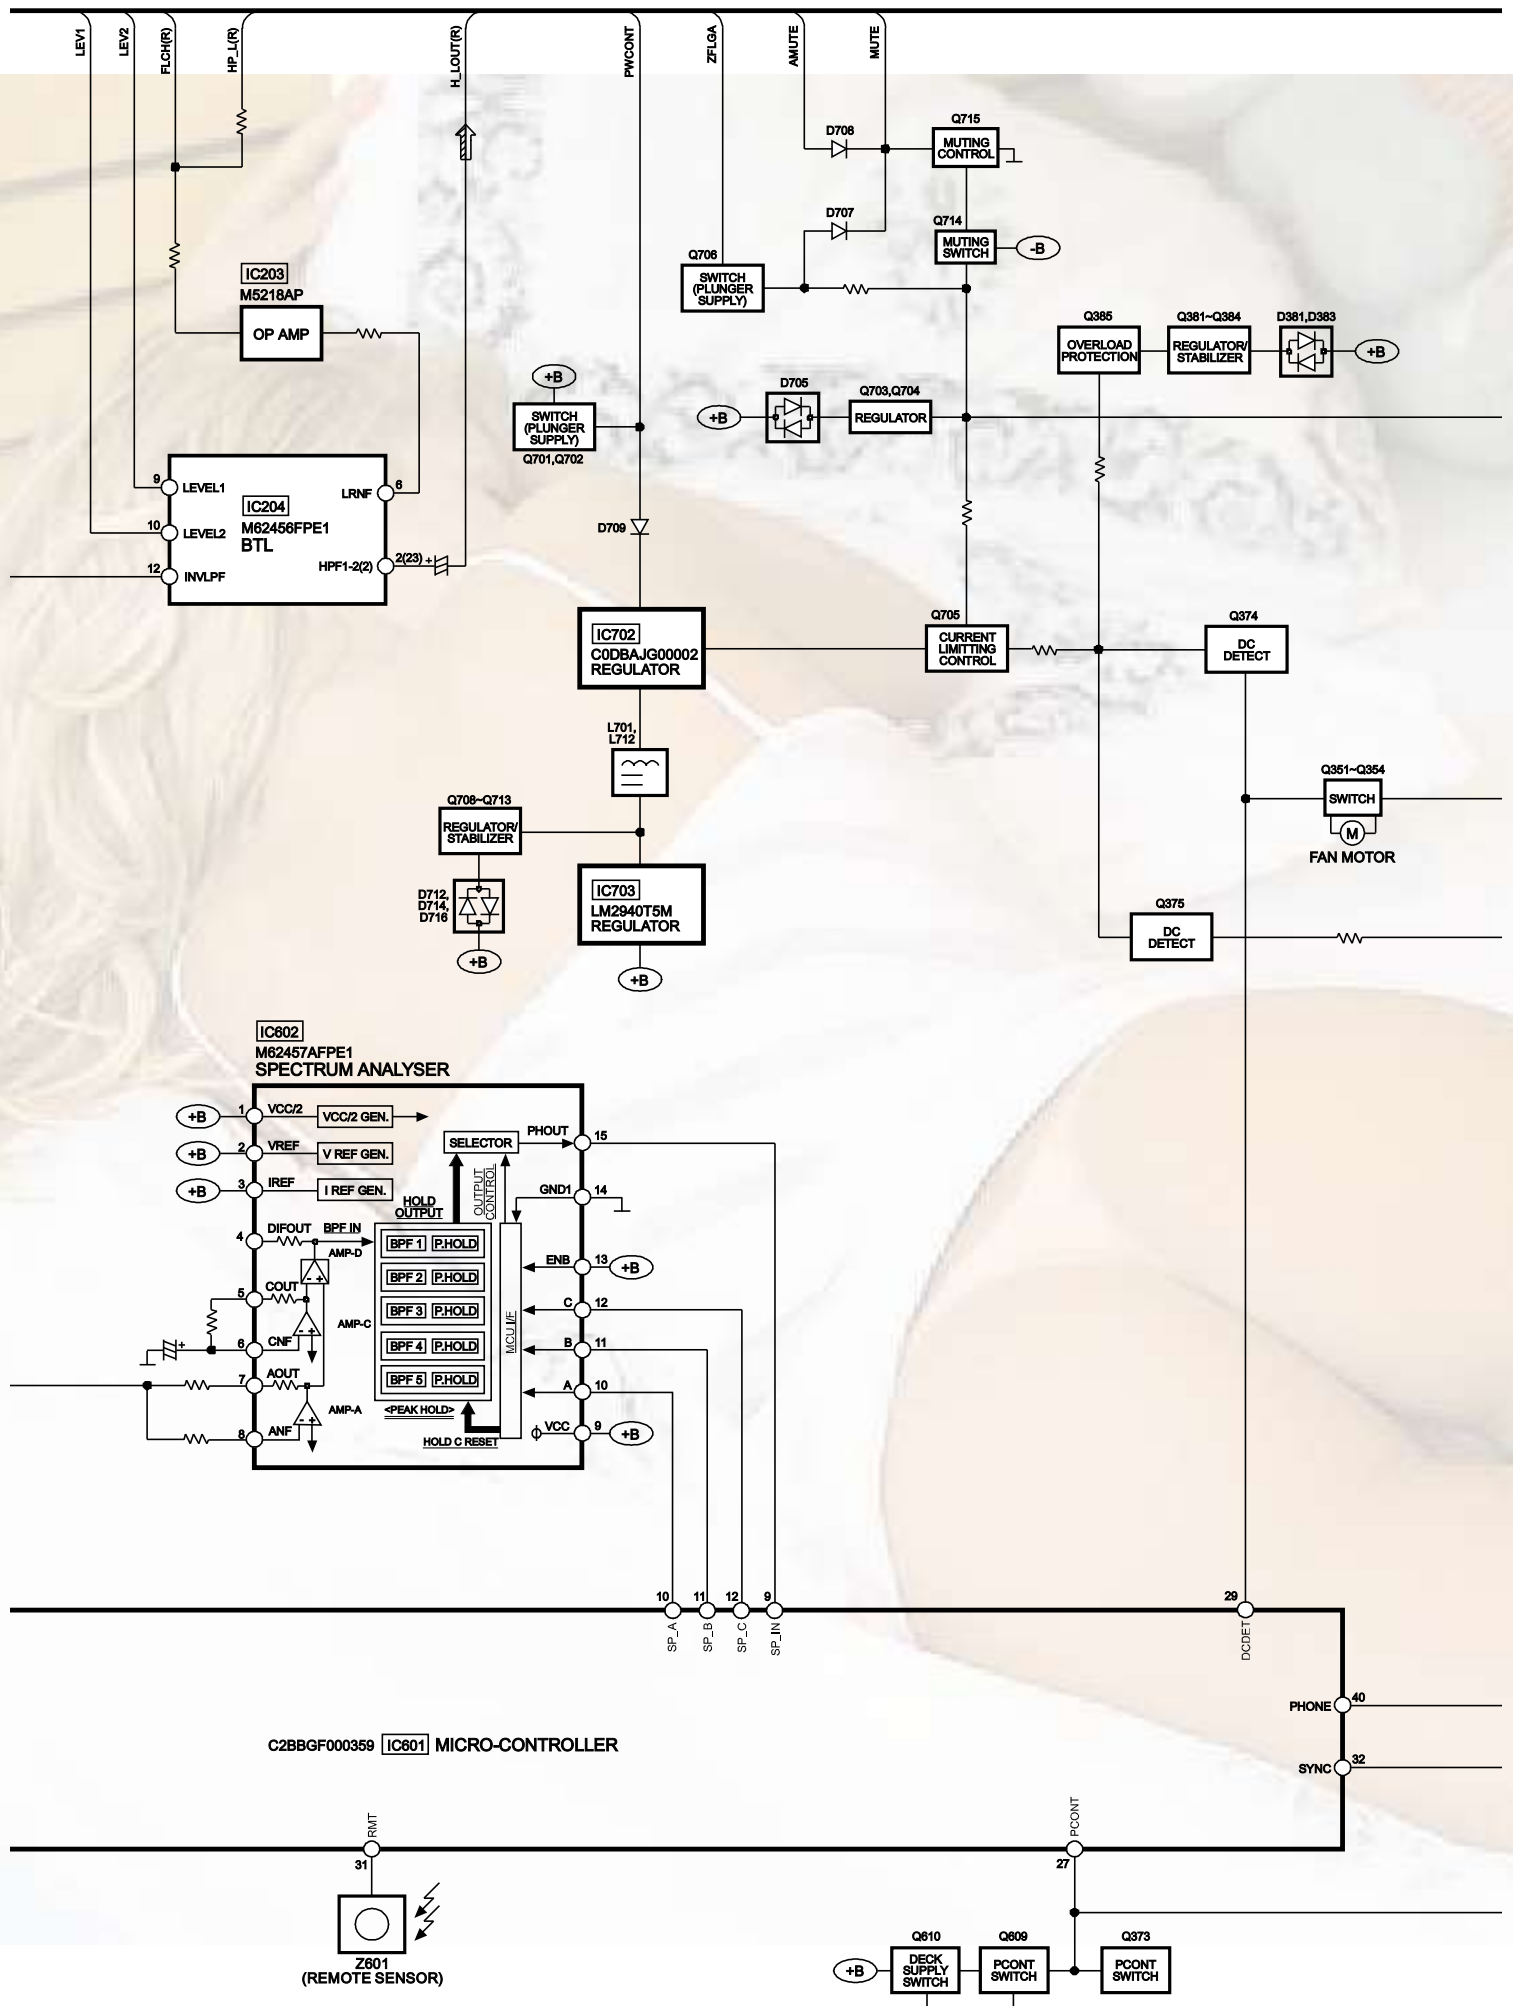

SIGNAL LINES

➡ : MAIN SIGNAL LINE

⬆ : CD/DVD AUDIO SIGNAL LINE


⬆ : PLAYBACK SIGNAL LINE

⬆ : DVD AUDIO/VIDEO SIGNAL LINE

⬆ : DVD VIDEO SIGNAL LINE

⬆ : RECORD SIGNAL LINE

() Indicates the Pin No. of Right channel.

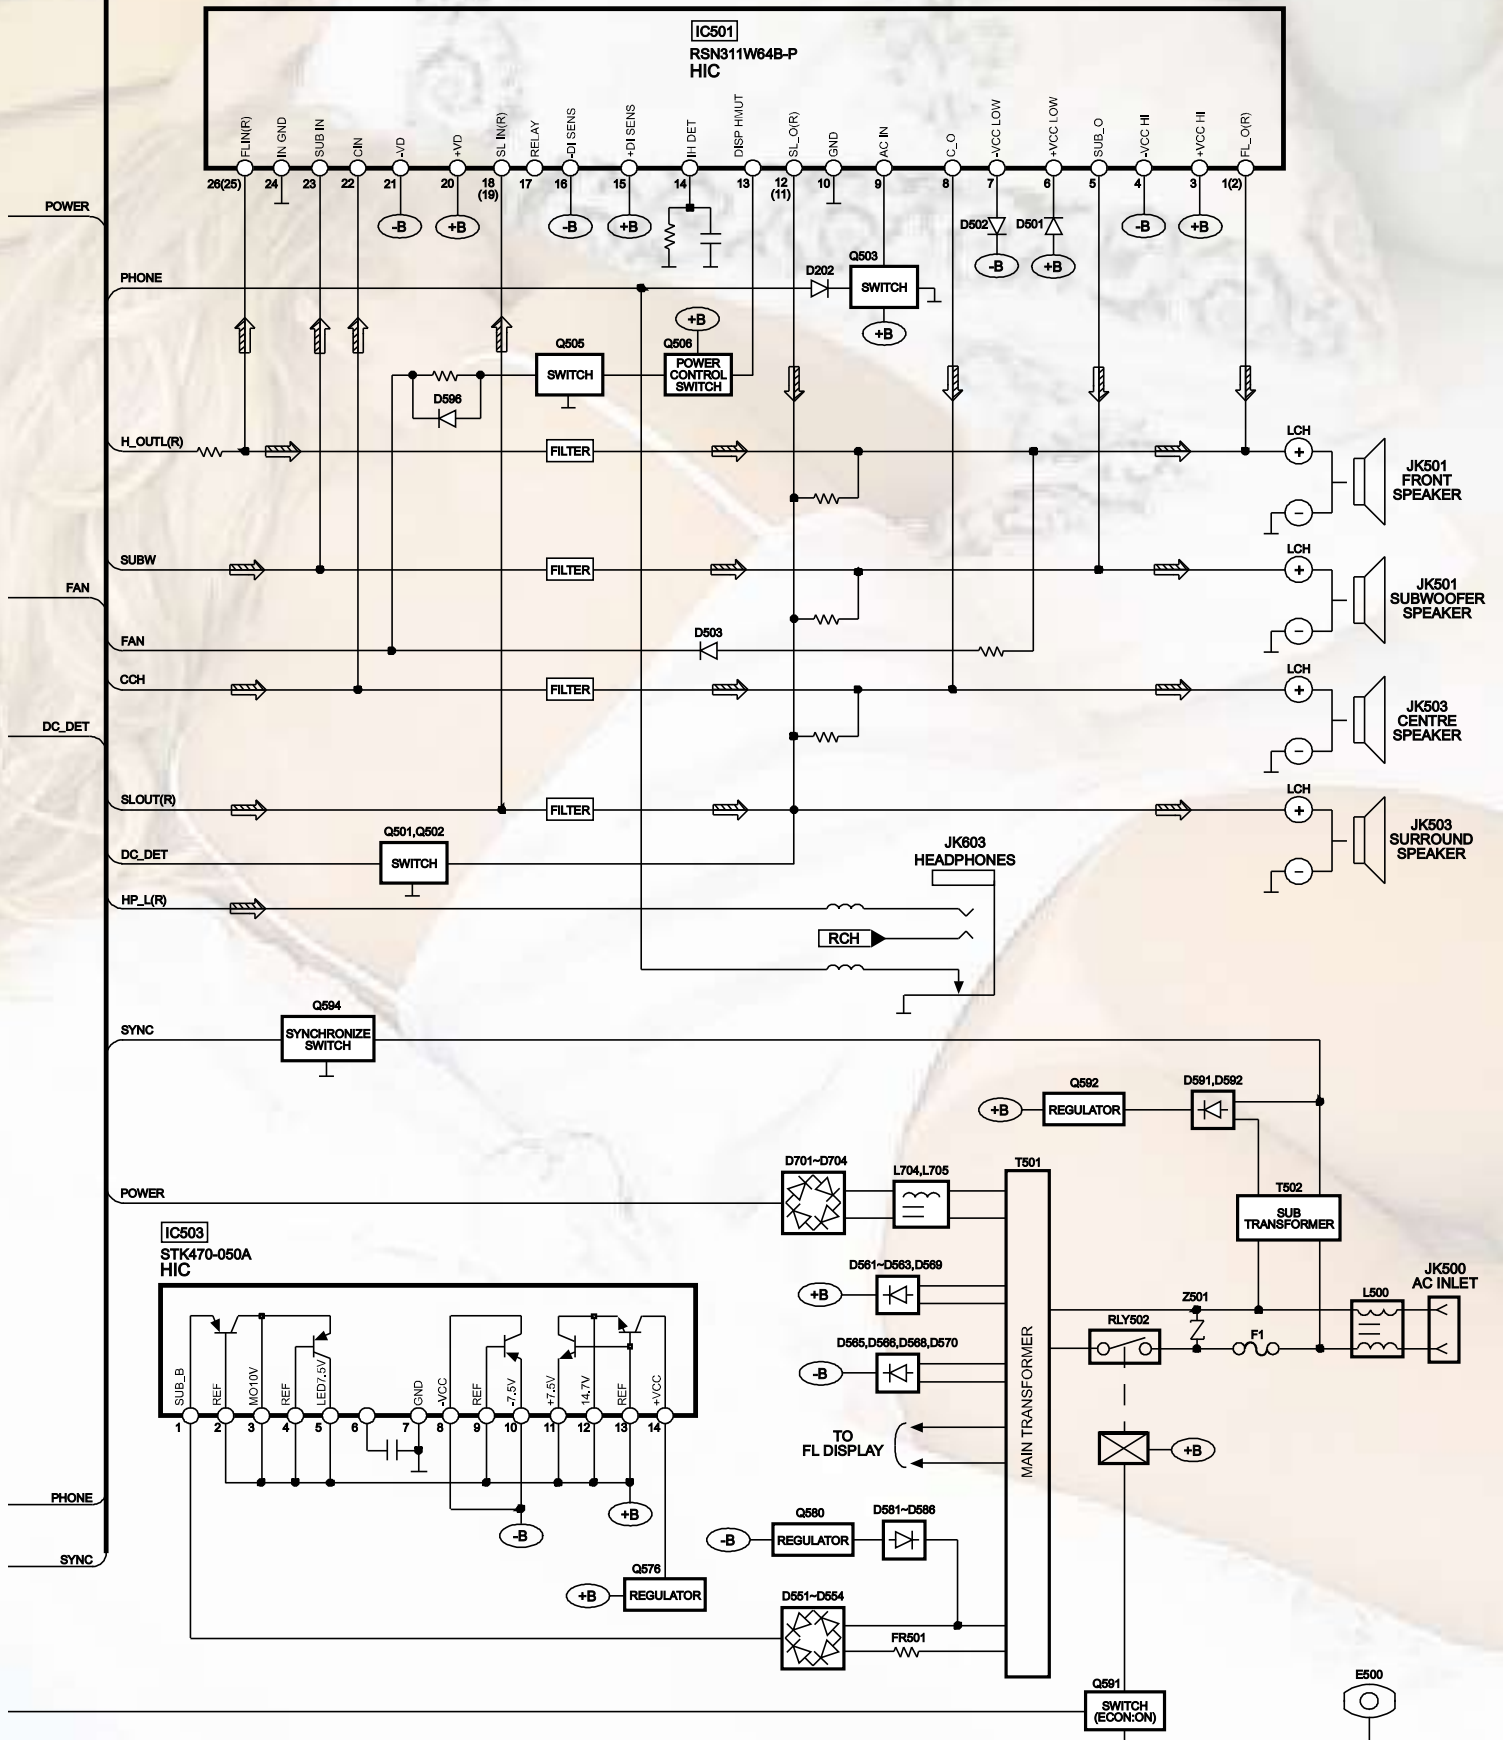


SCHEMATIC DIAGRAM-1



OPTICAL PICKUP UNIT

— : +B SIGNAL LINE

⬡ : CD-DA SIGNAL LINE

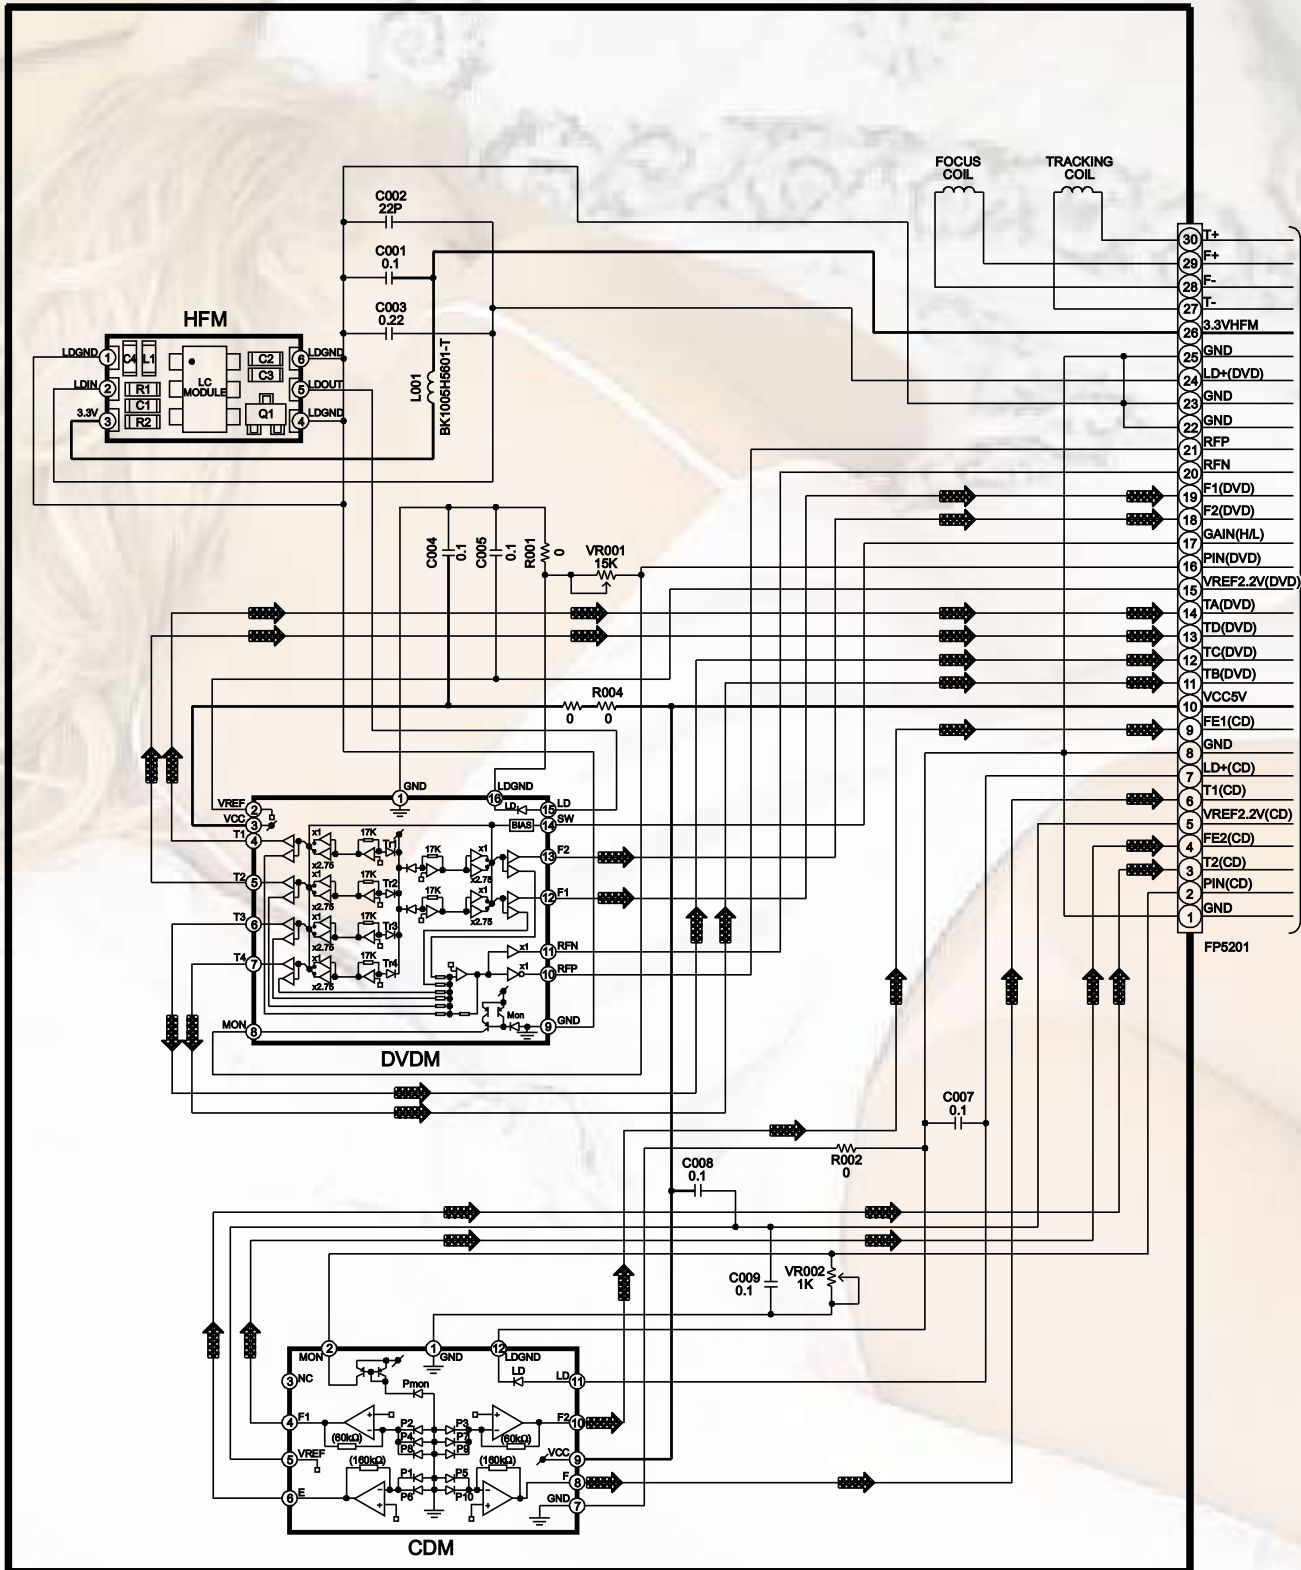

TO DVD MODULE(1)
CIRCUIT
(FP5201) ON
SCHEMATIC
DIAGRAM-2


SCHEMATIC DIAGRAM-2

A

DVD MODULE(1) CIRCUIT

— : +B SIGNAL LINE
 : CD-DA SIGNAL LINE

TO OPTICAL PICKUP UNIT
 (FP5201) ON
 SCHEMATIC
 DIAGRAM-1

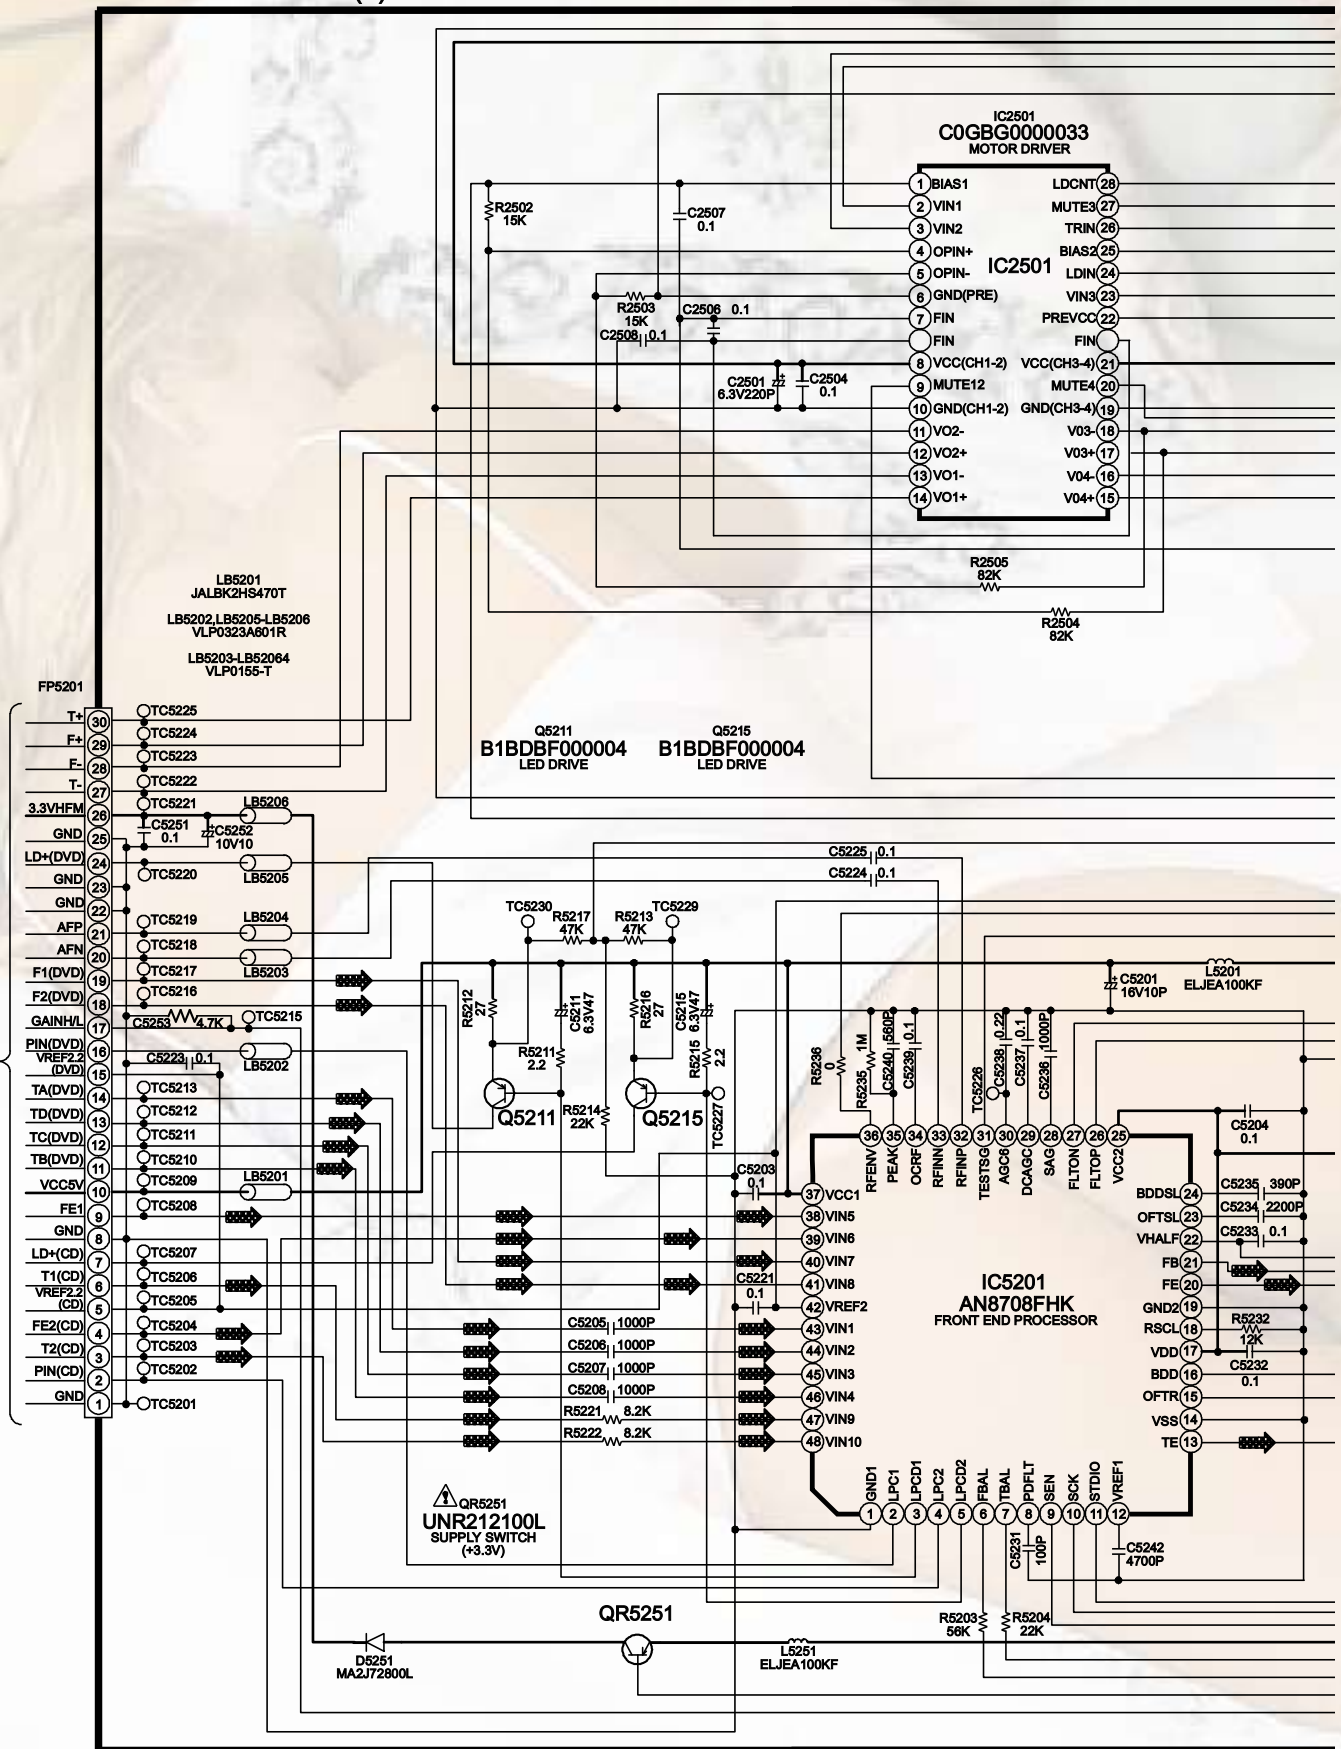


SCHEMATIC DIAGRAM-3

A

DVD MODULE(1) CIRCUIT

— : +B SIGNAL LINE
 : CD-DA SIGNAL LINE

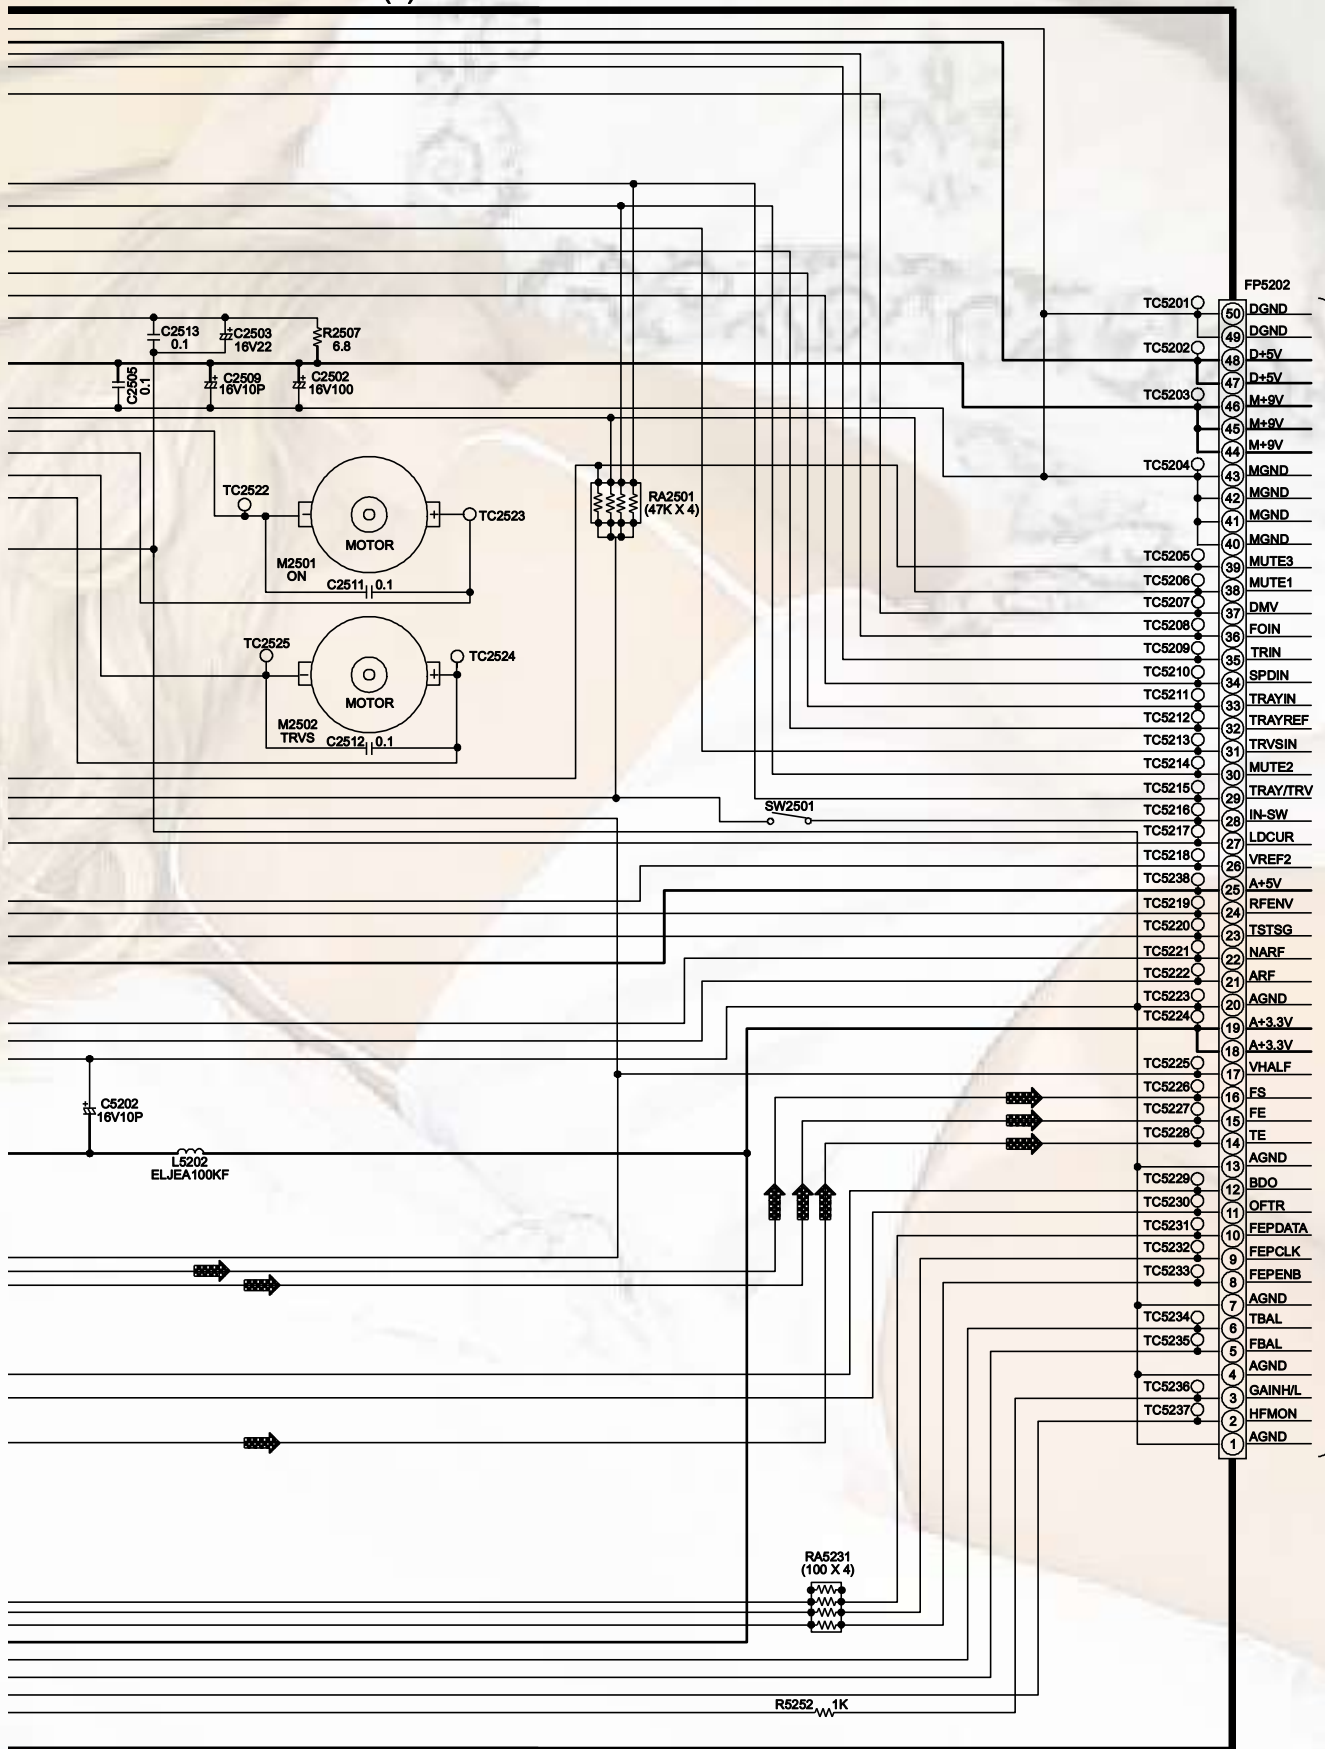

TO **B**
 DVD MODULE(2)
 (FP2001) ON
 SCHEMATIC
 DIAGRAM-4


SCHEMATIC DIAGRAM-4

B DVD MODULE (2) CIRCUIT

— : +B SIGNAL LINE

▢ : CD-DA SIGNAL LINE

TO DVD MODULE (1) CIRCUIT (FP5202) ON SCHEMATIC DIAGRAM-3

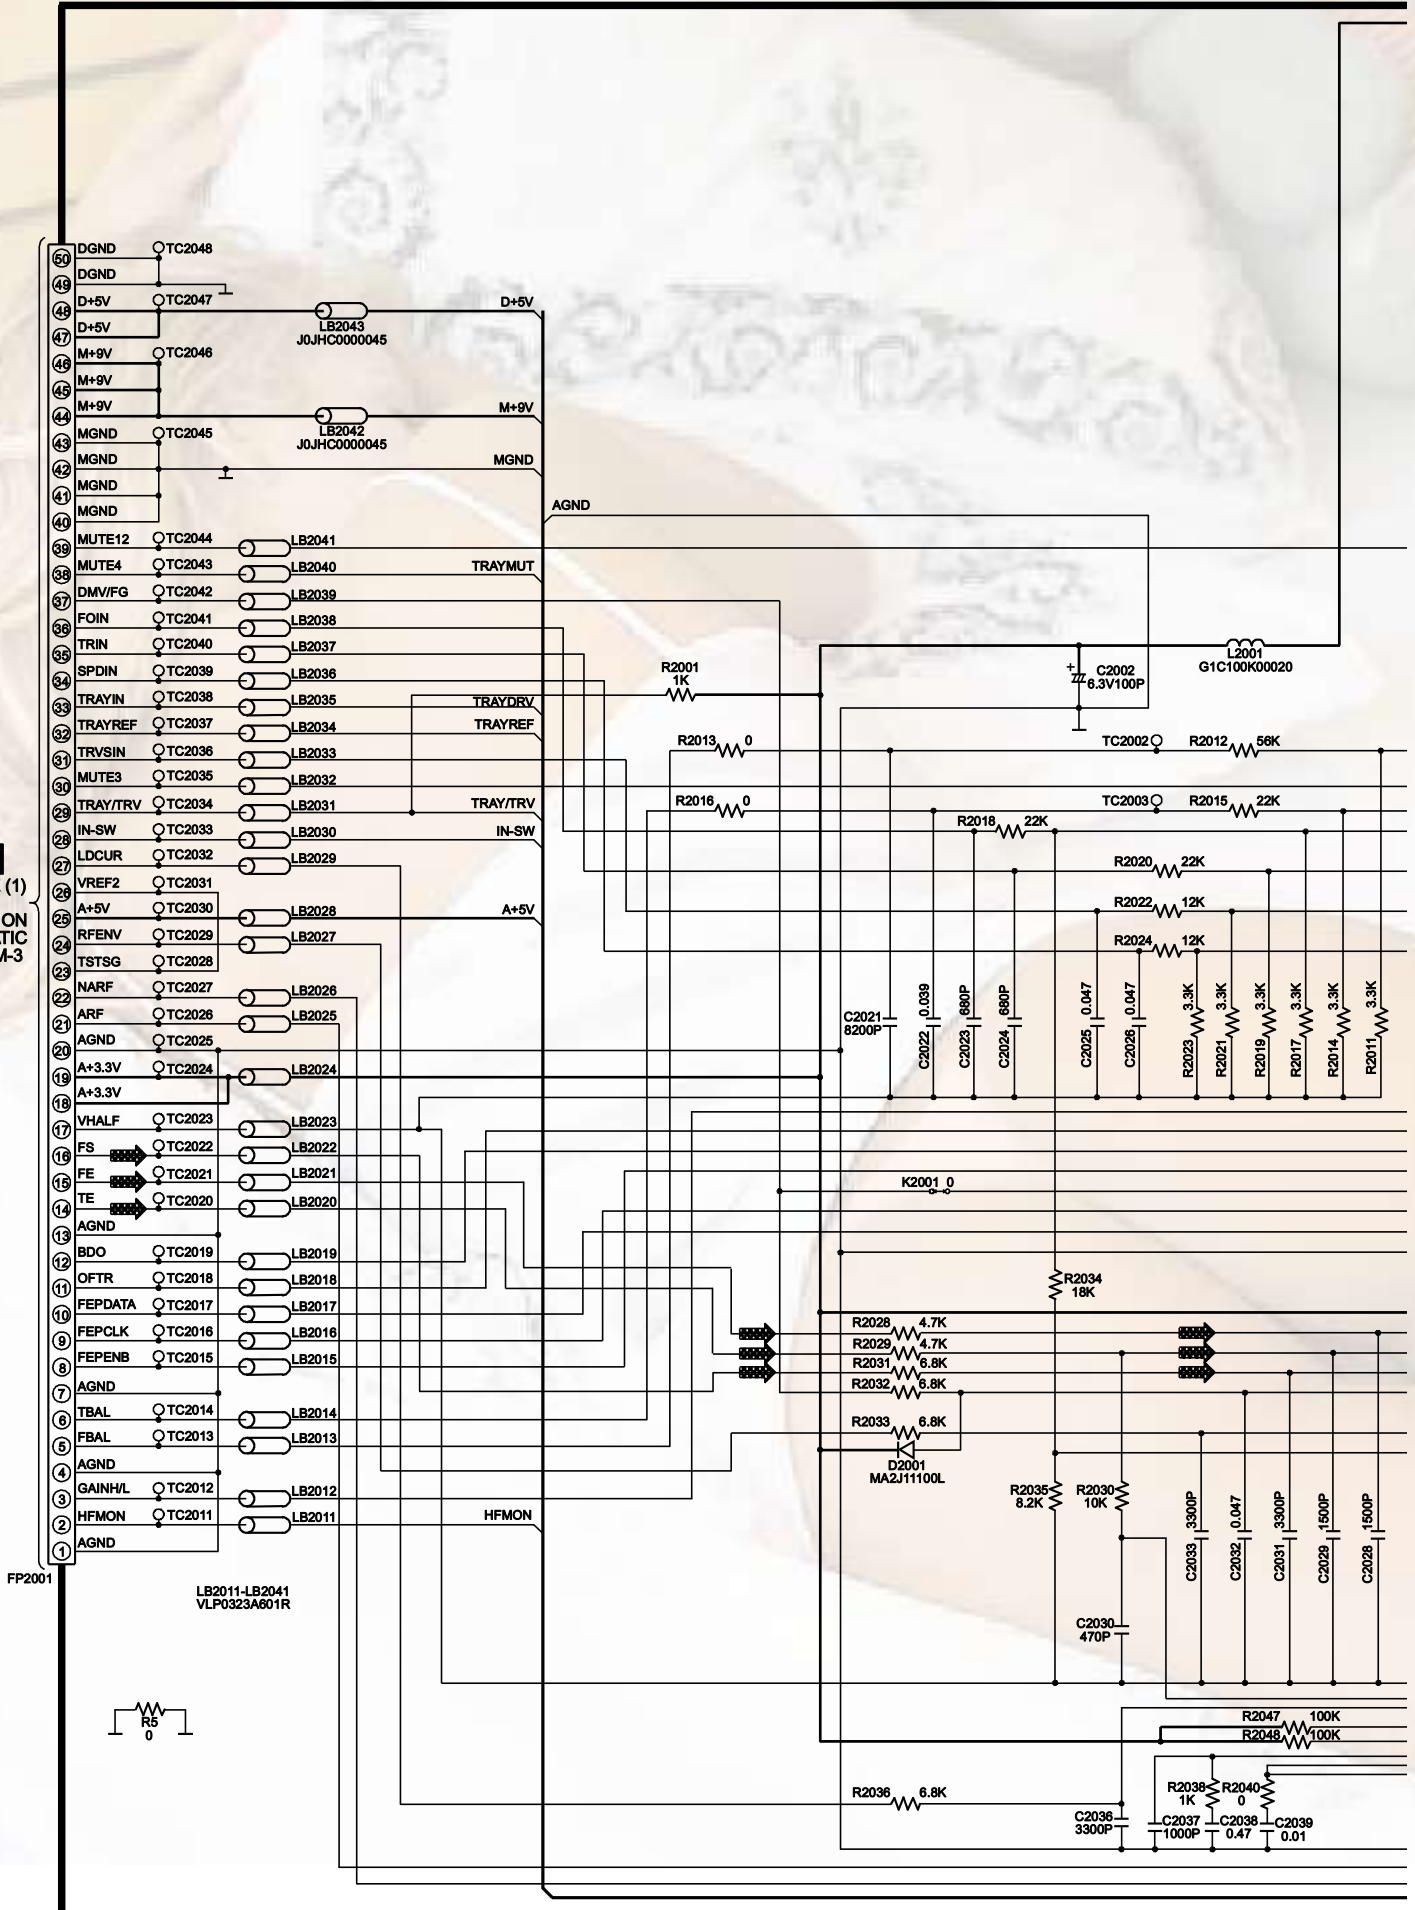


SCHEMATIC DIAGRAM-5

B DVD MODULE (2) CIRCUIT


— : +B SIGNAL LINE

➡ : CD-DA SIGNAL LINE

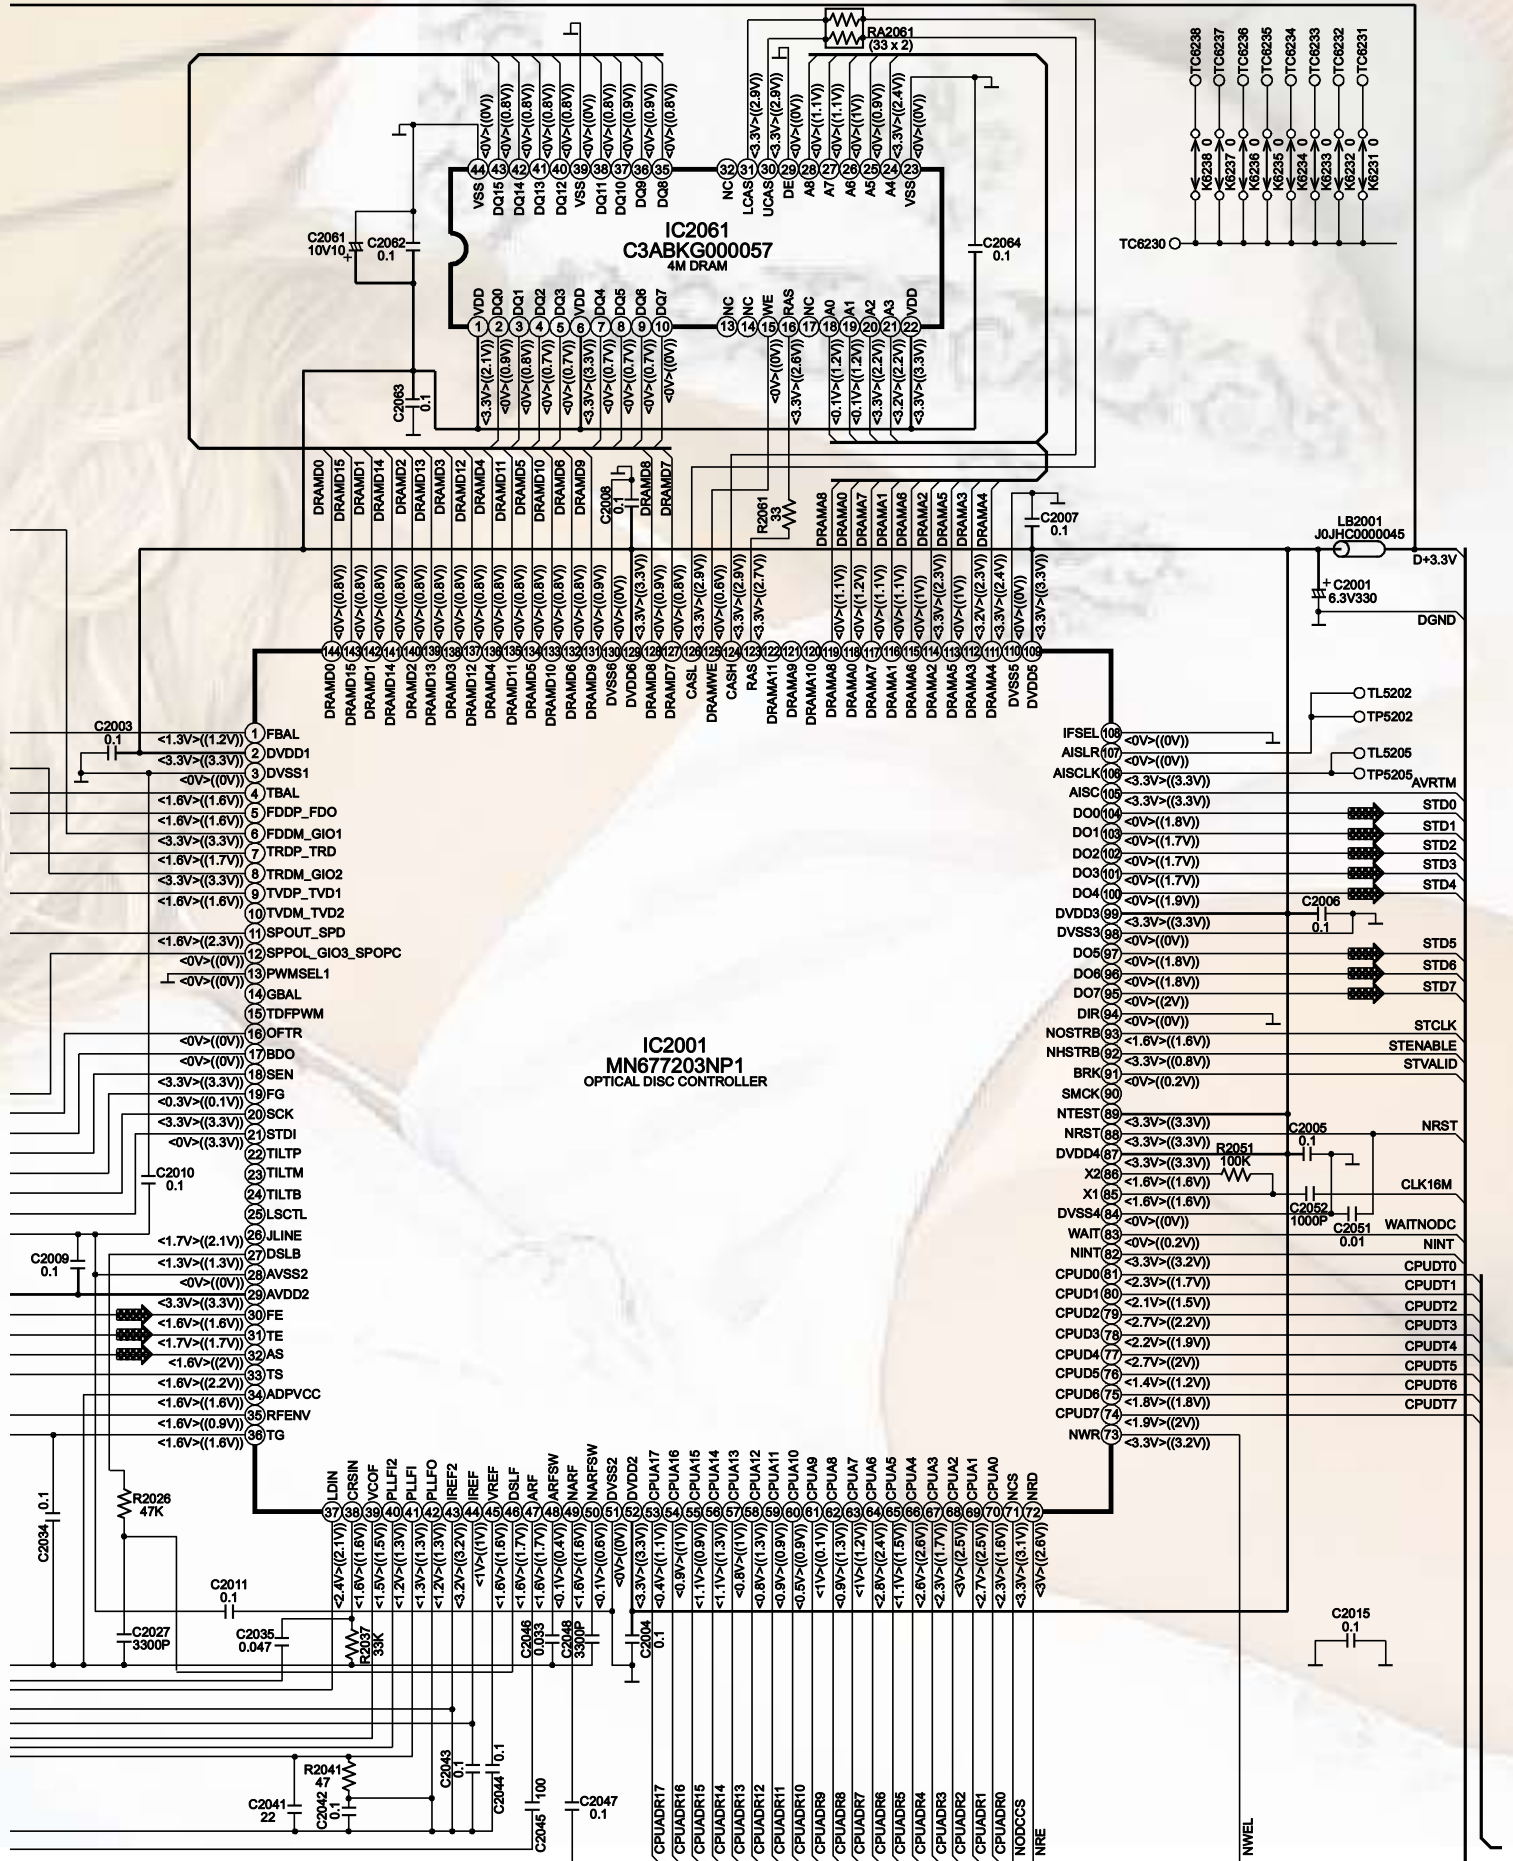


B DVD MODULE (2) CIRCUIT

———— : +B SIGNAL LINE

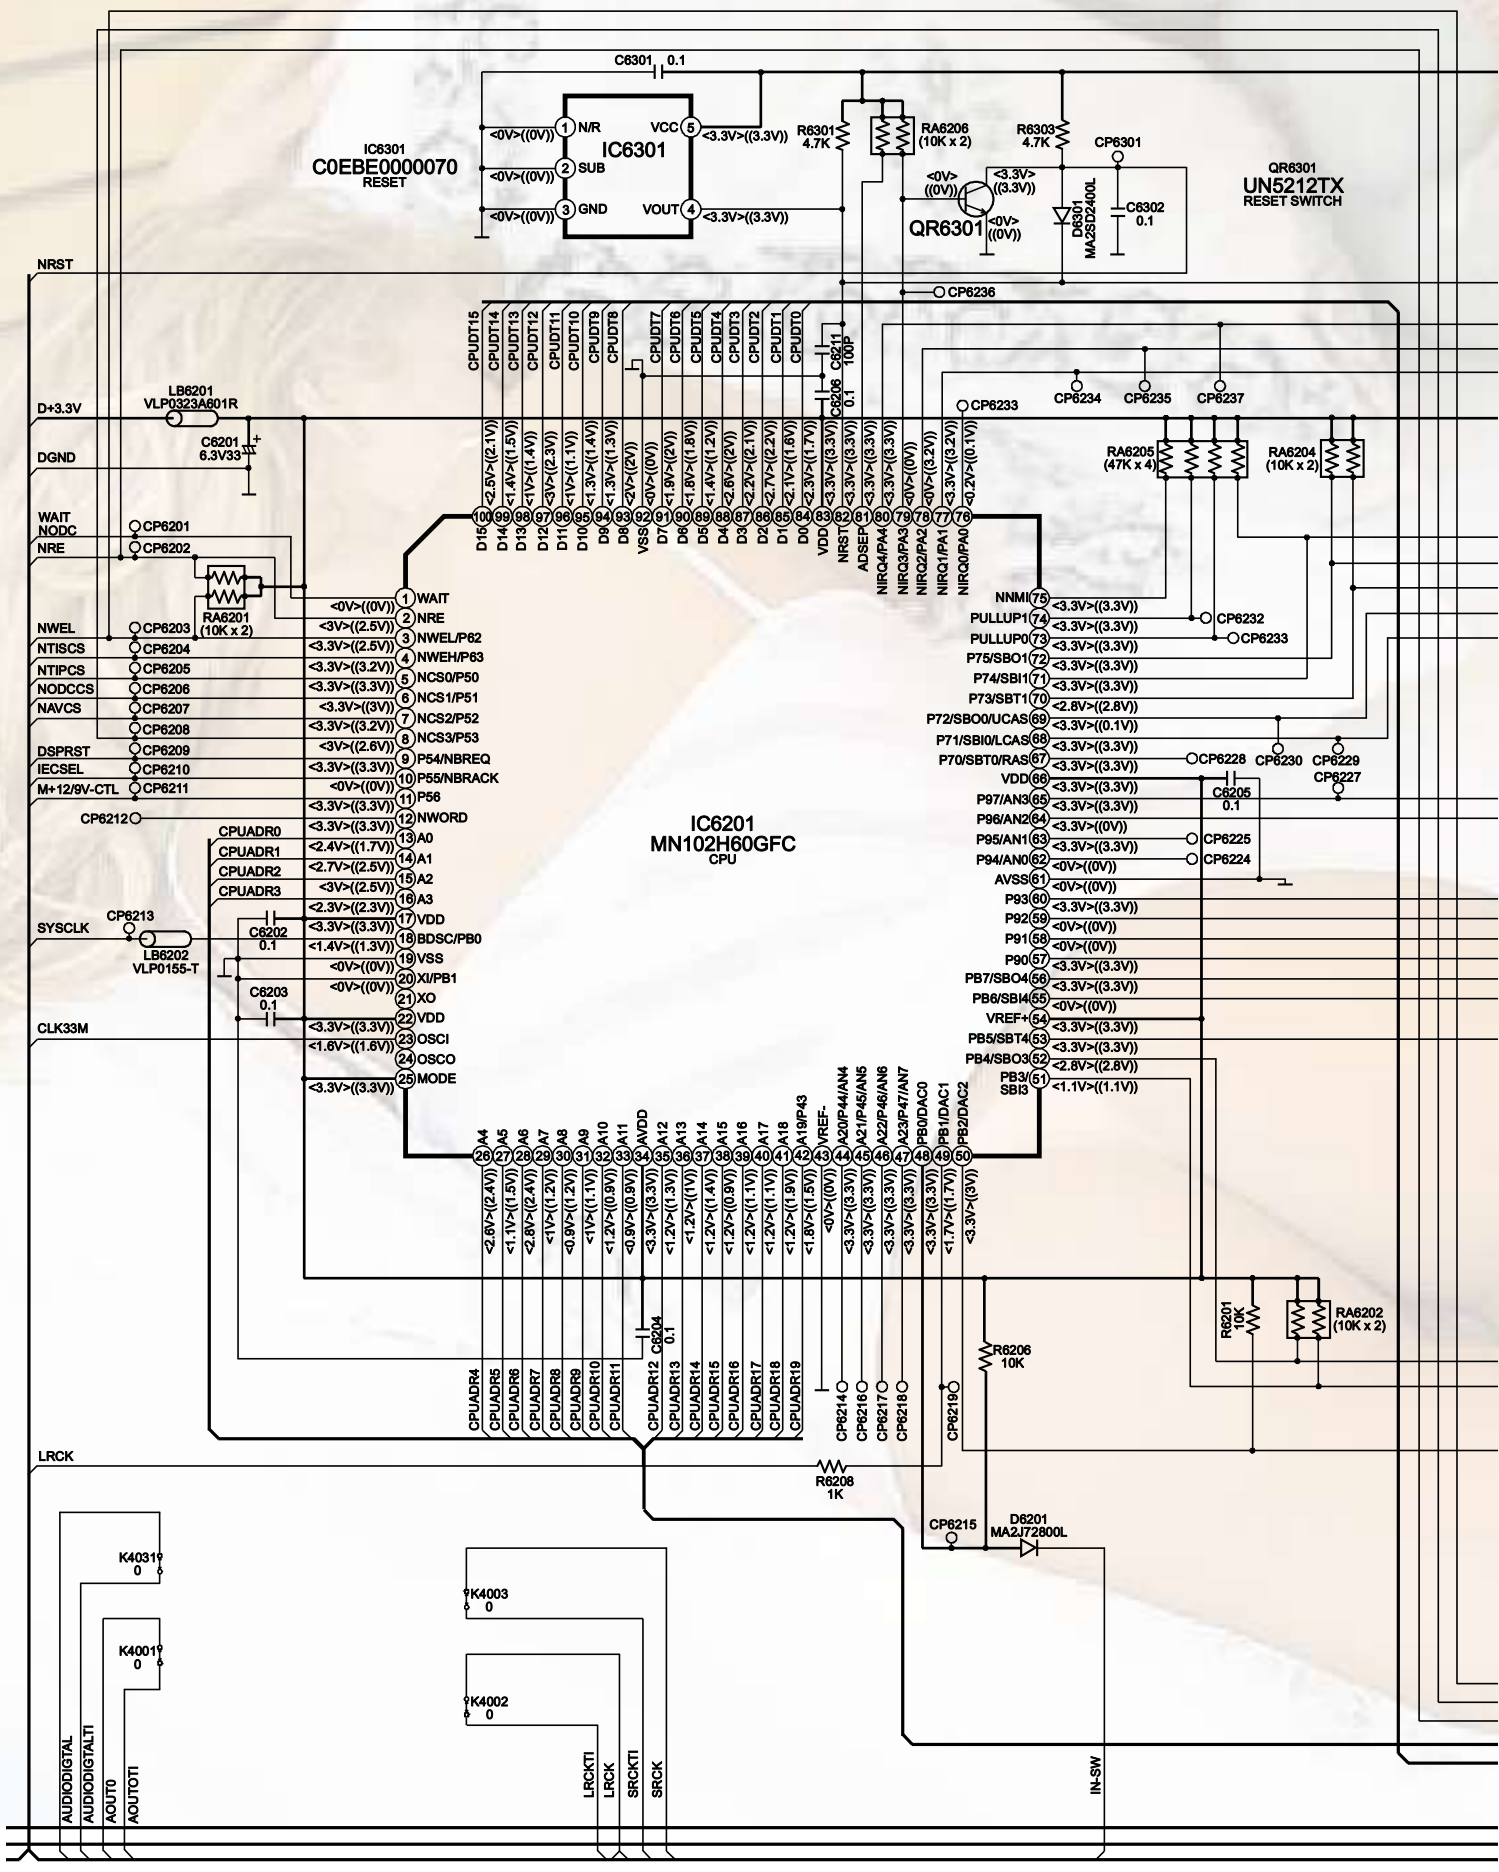

SCHEMATIC DIAGRAM-7


B DVD MODULE (2) CIRCUIT — : +B SIGNAL LINE

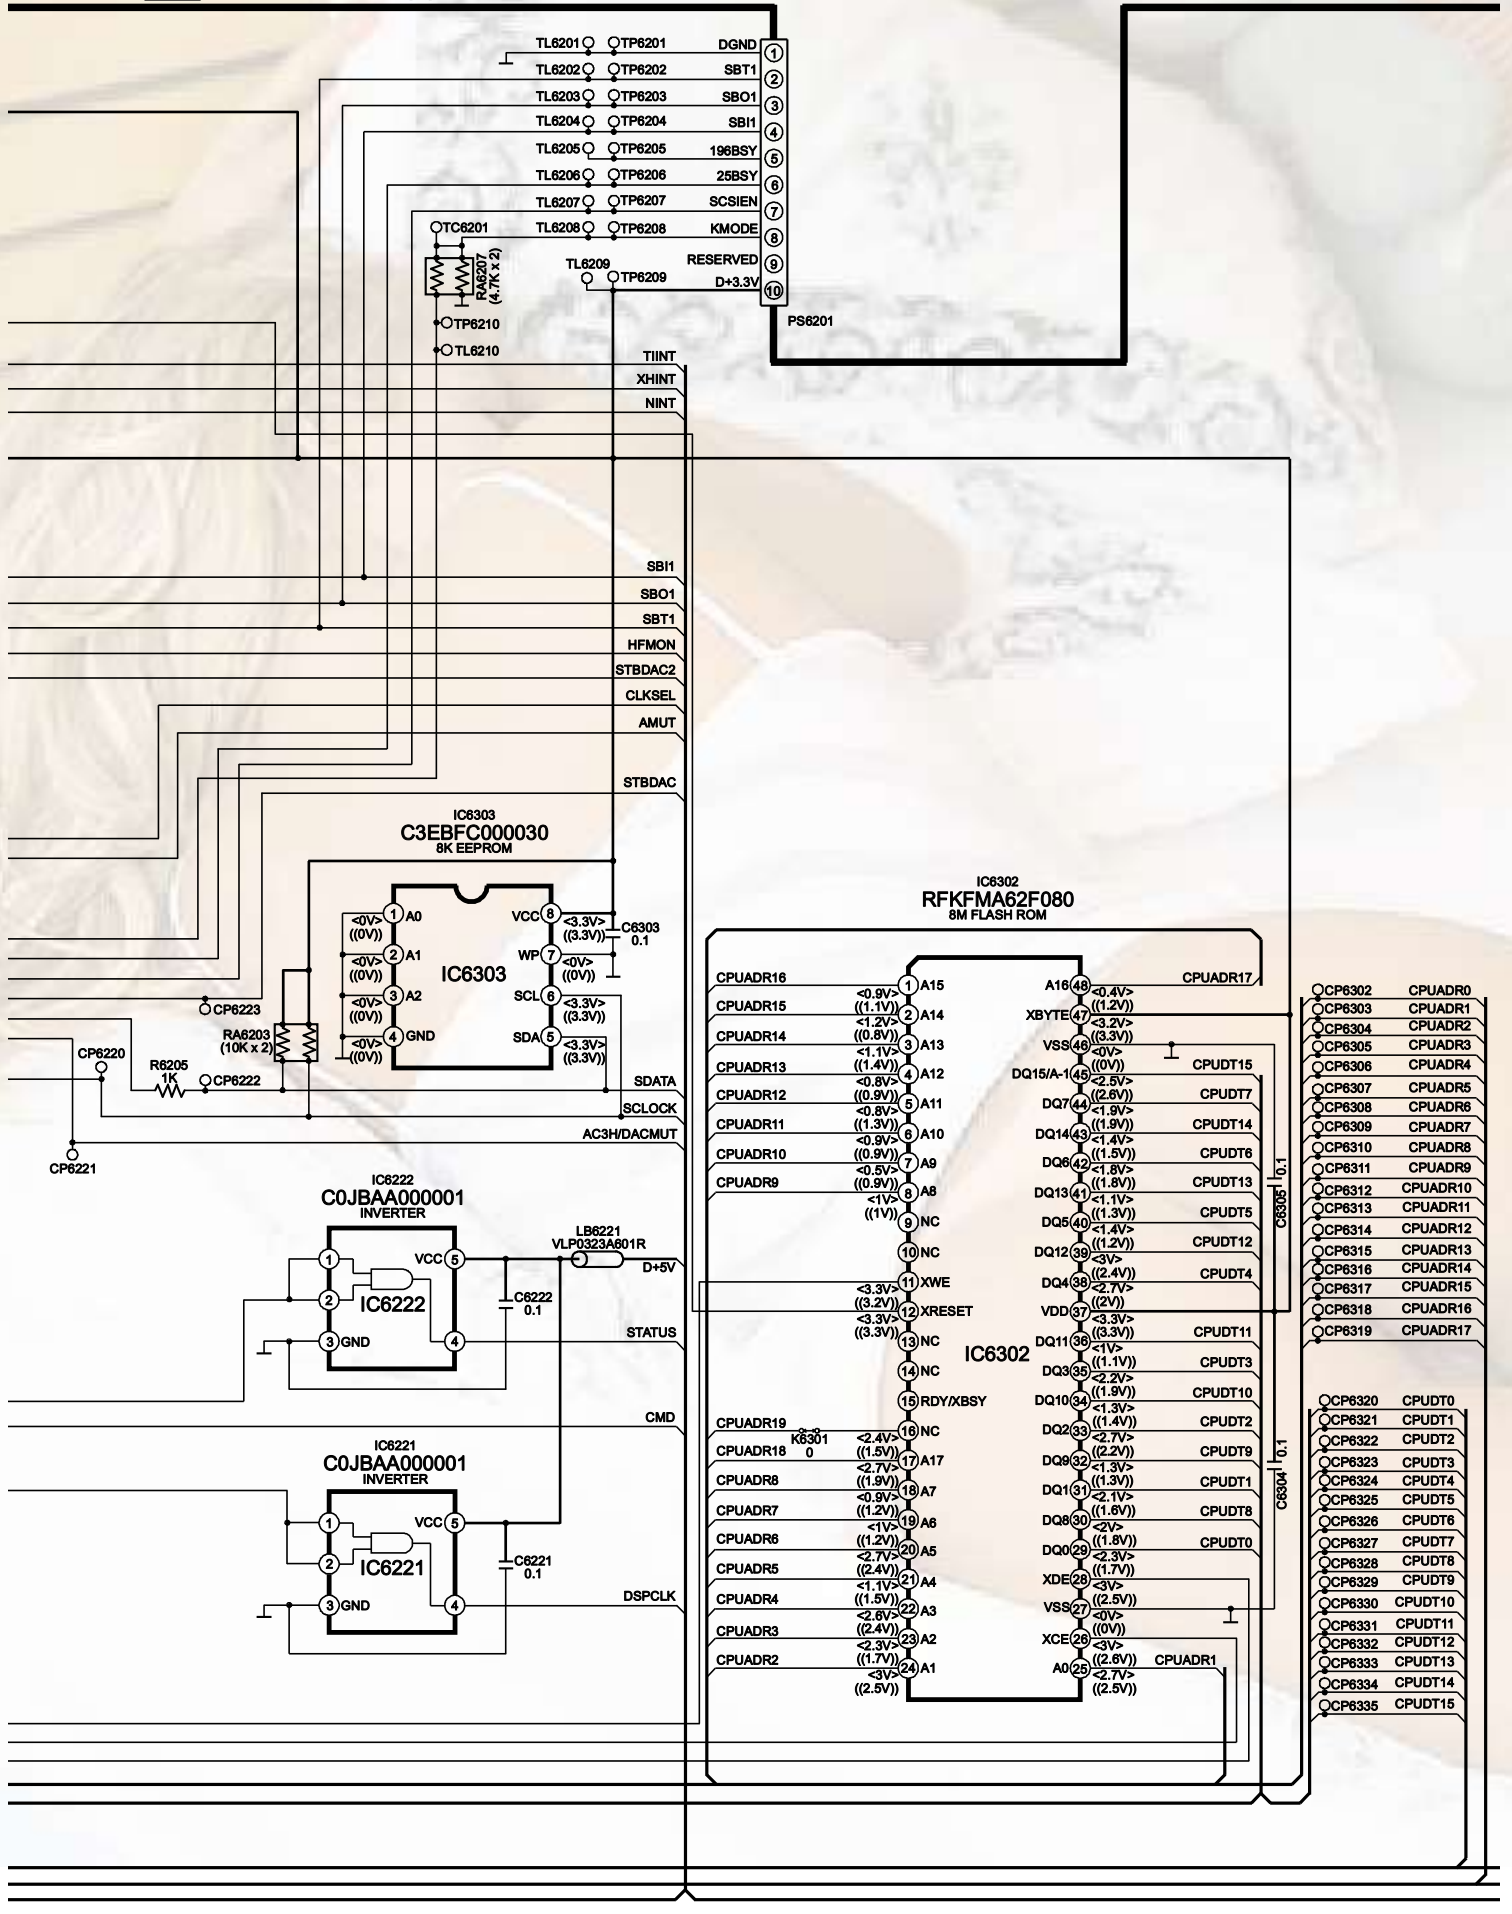

SCHEMATIC DIAGRAM-8

B DVD MODULE (2) CIRCUIT

— : +B SIGNAL LINE

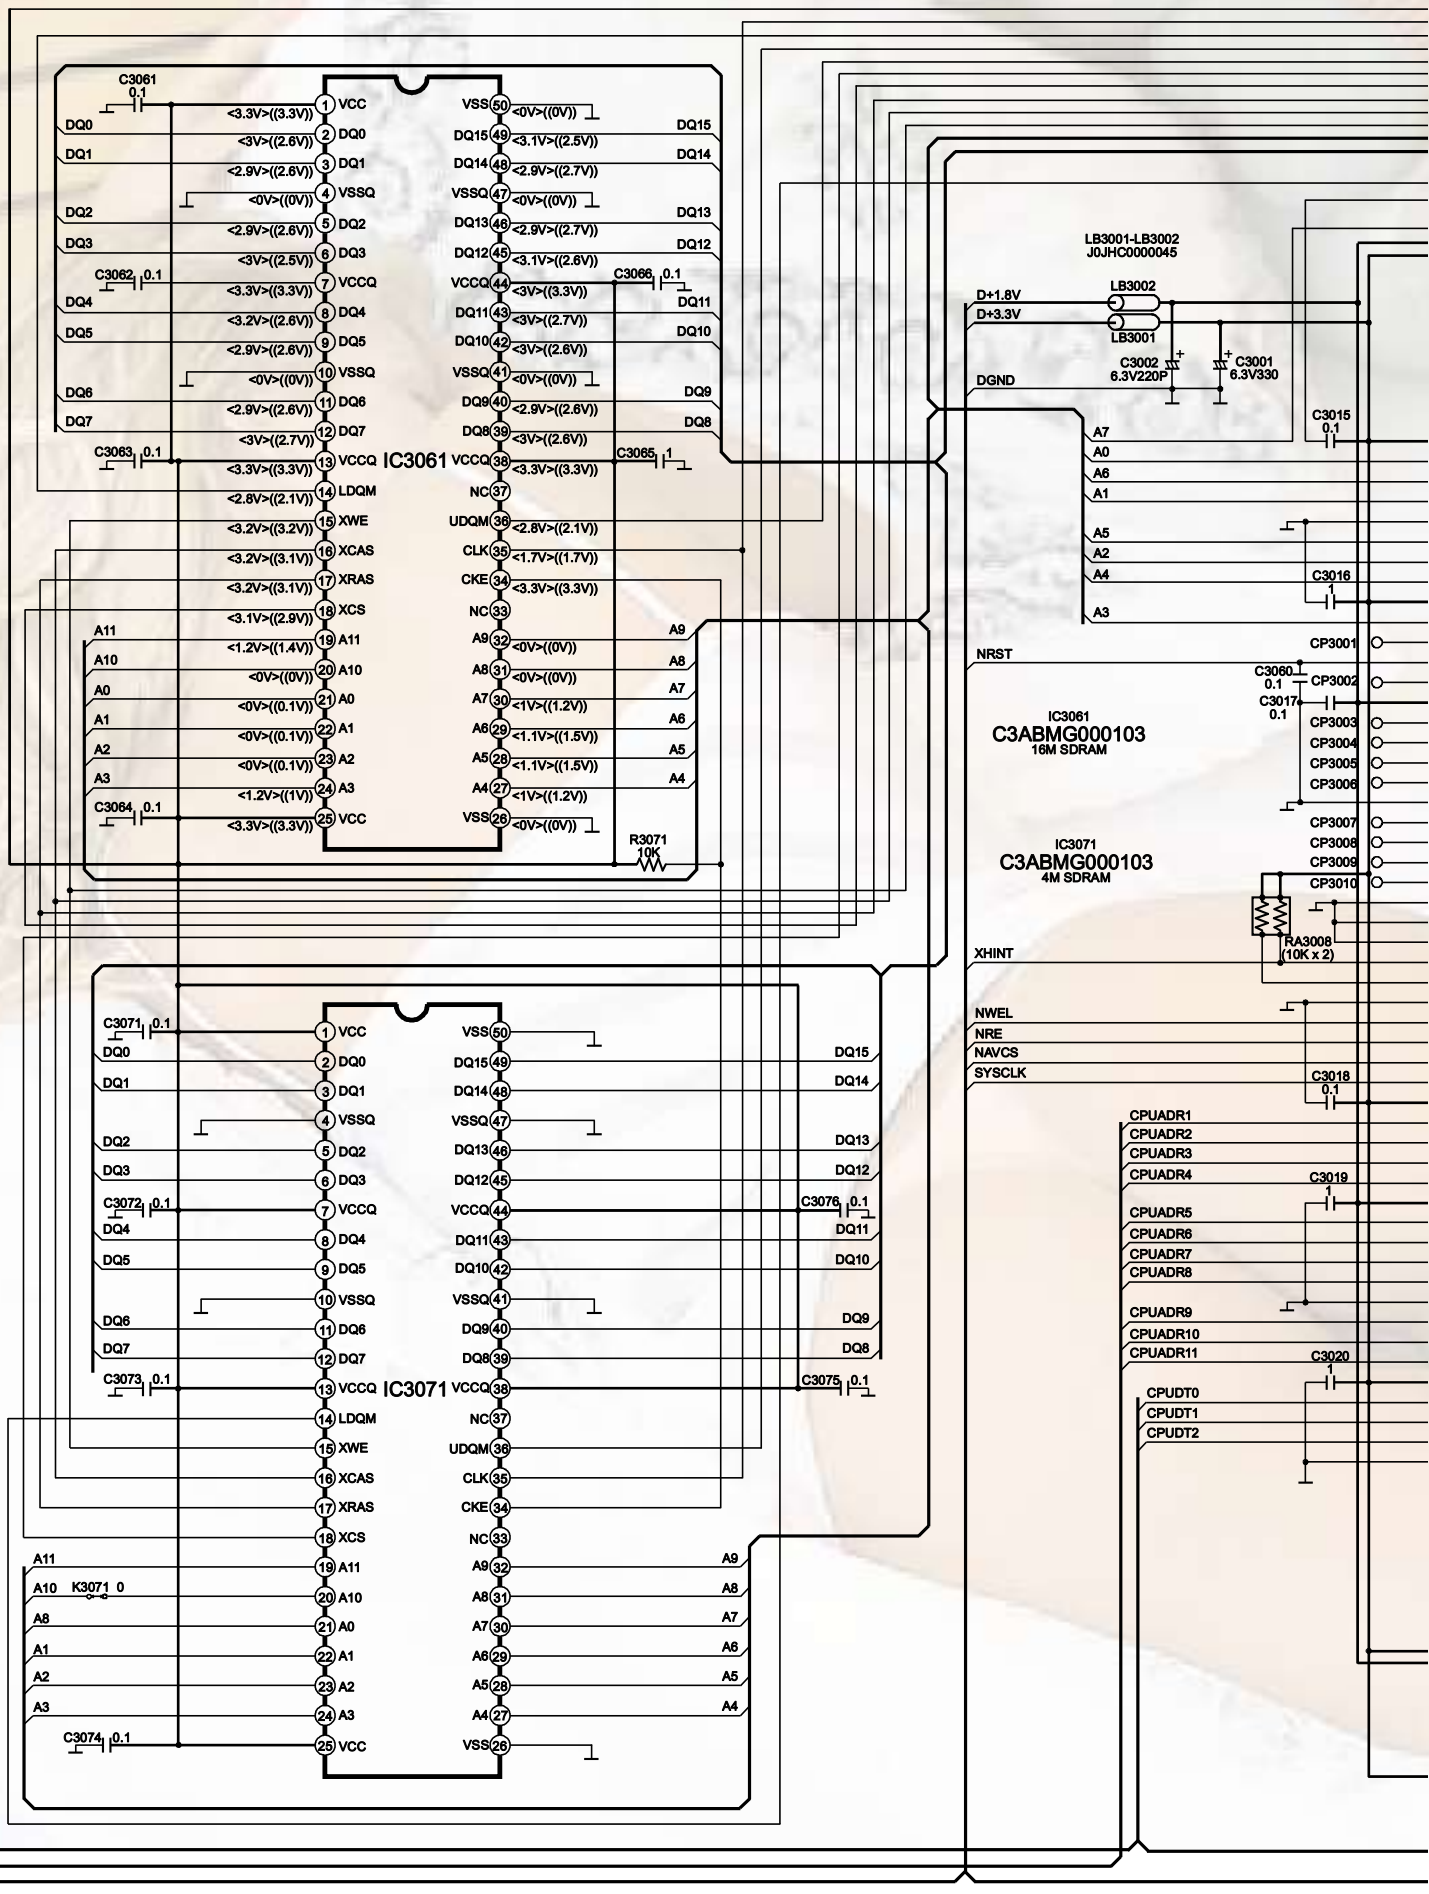


SCHEMATIC DIAGRAM-9

B DVD MODULE (2) CIRCUIT

DVD(AUDIO) SIGNAL LINE


: +B SIGNAL LINE

CD-DA SIGNAL LINE

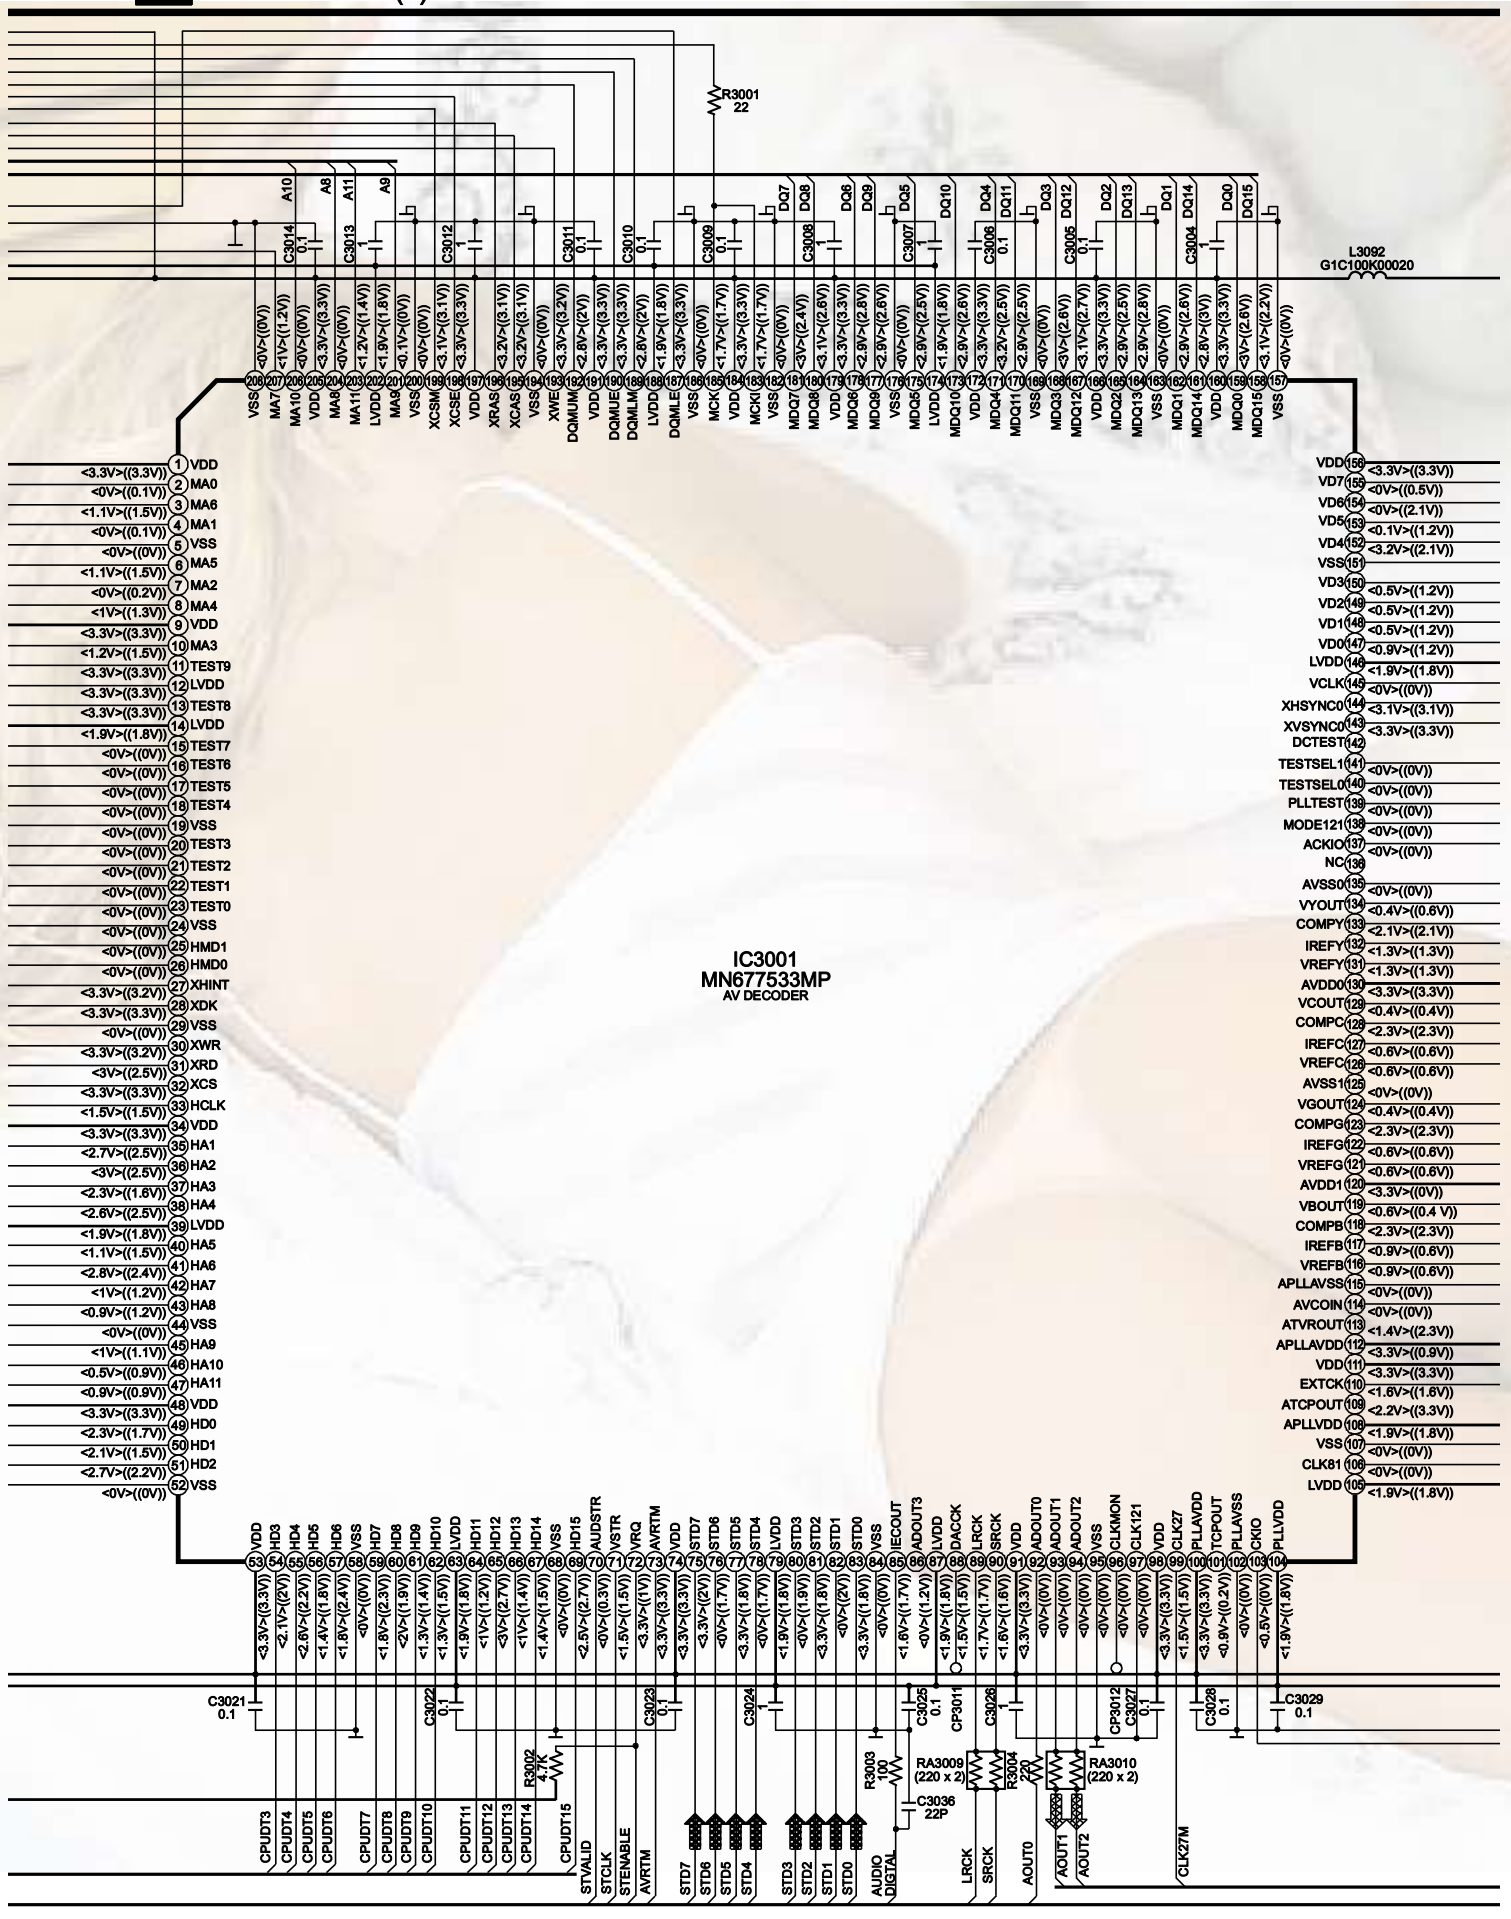

B DVD MODULE (2) CIRCUIT

 : DVD(VIDEO) SIGNAL LINE

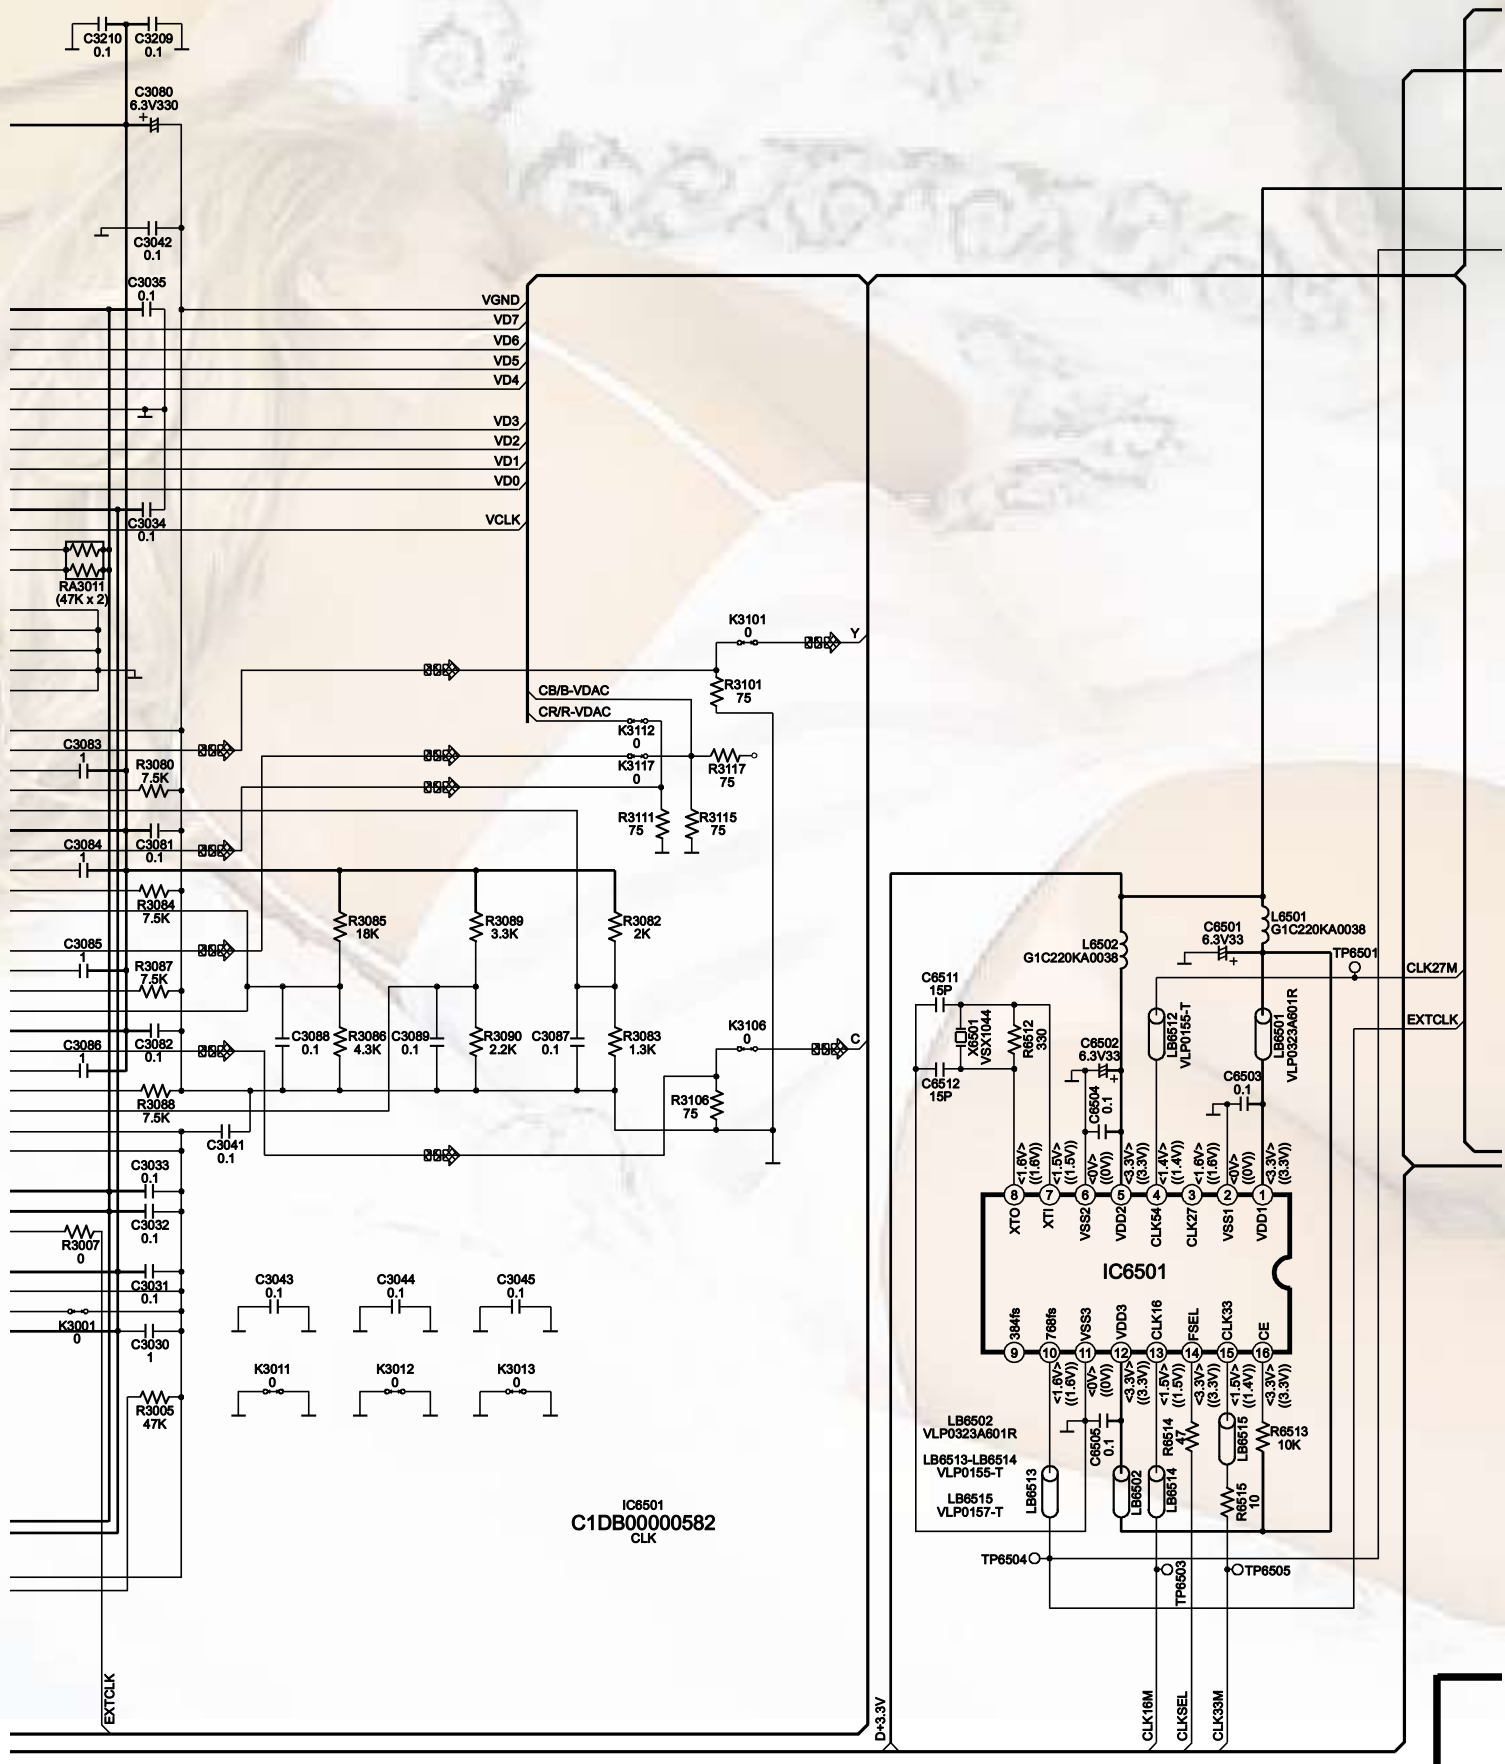


SCHEMATIC DIAGRAM-11

B DVD MODULE (2) CIRCUIT

⊞ : DVD(AUDIO) SIGNAL LINE

— : +B SIGNAL LINE

➡ : MAIN SIGNAL LINE

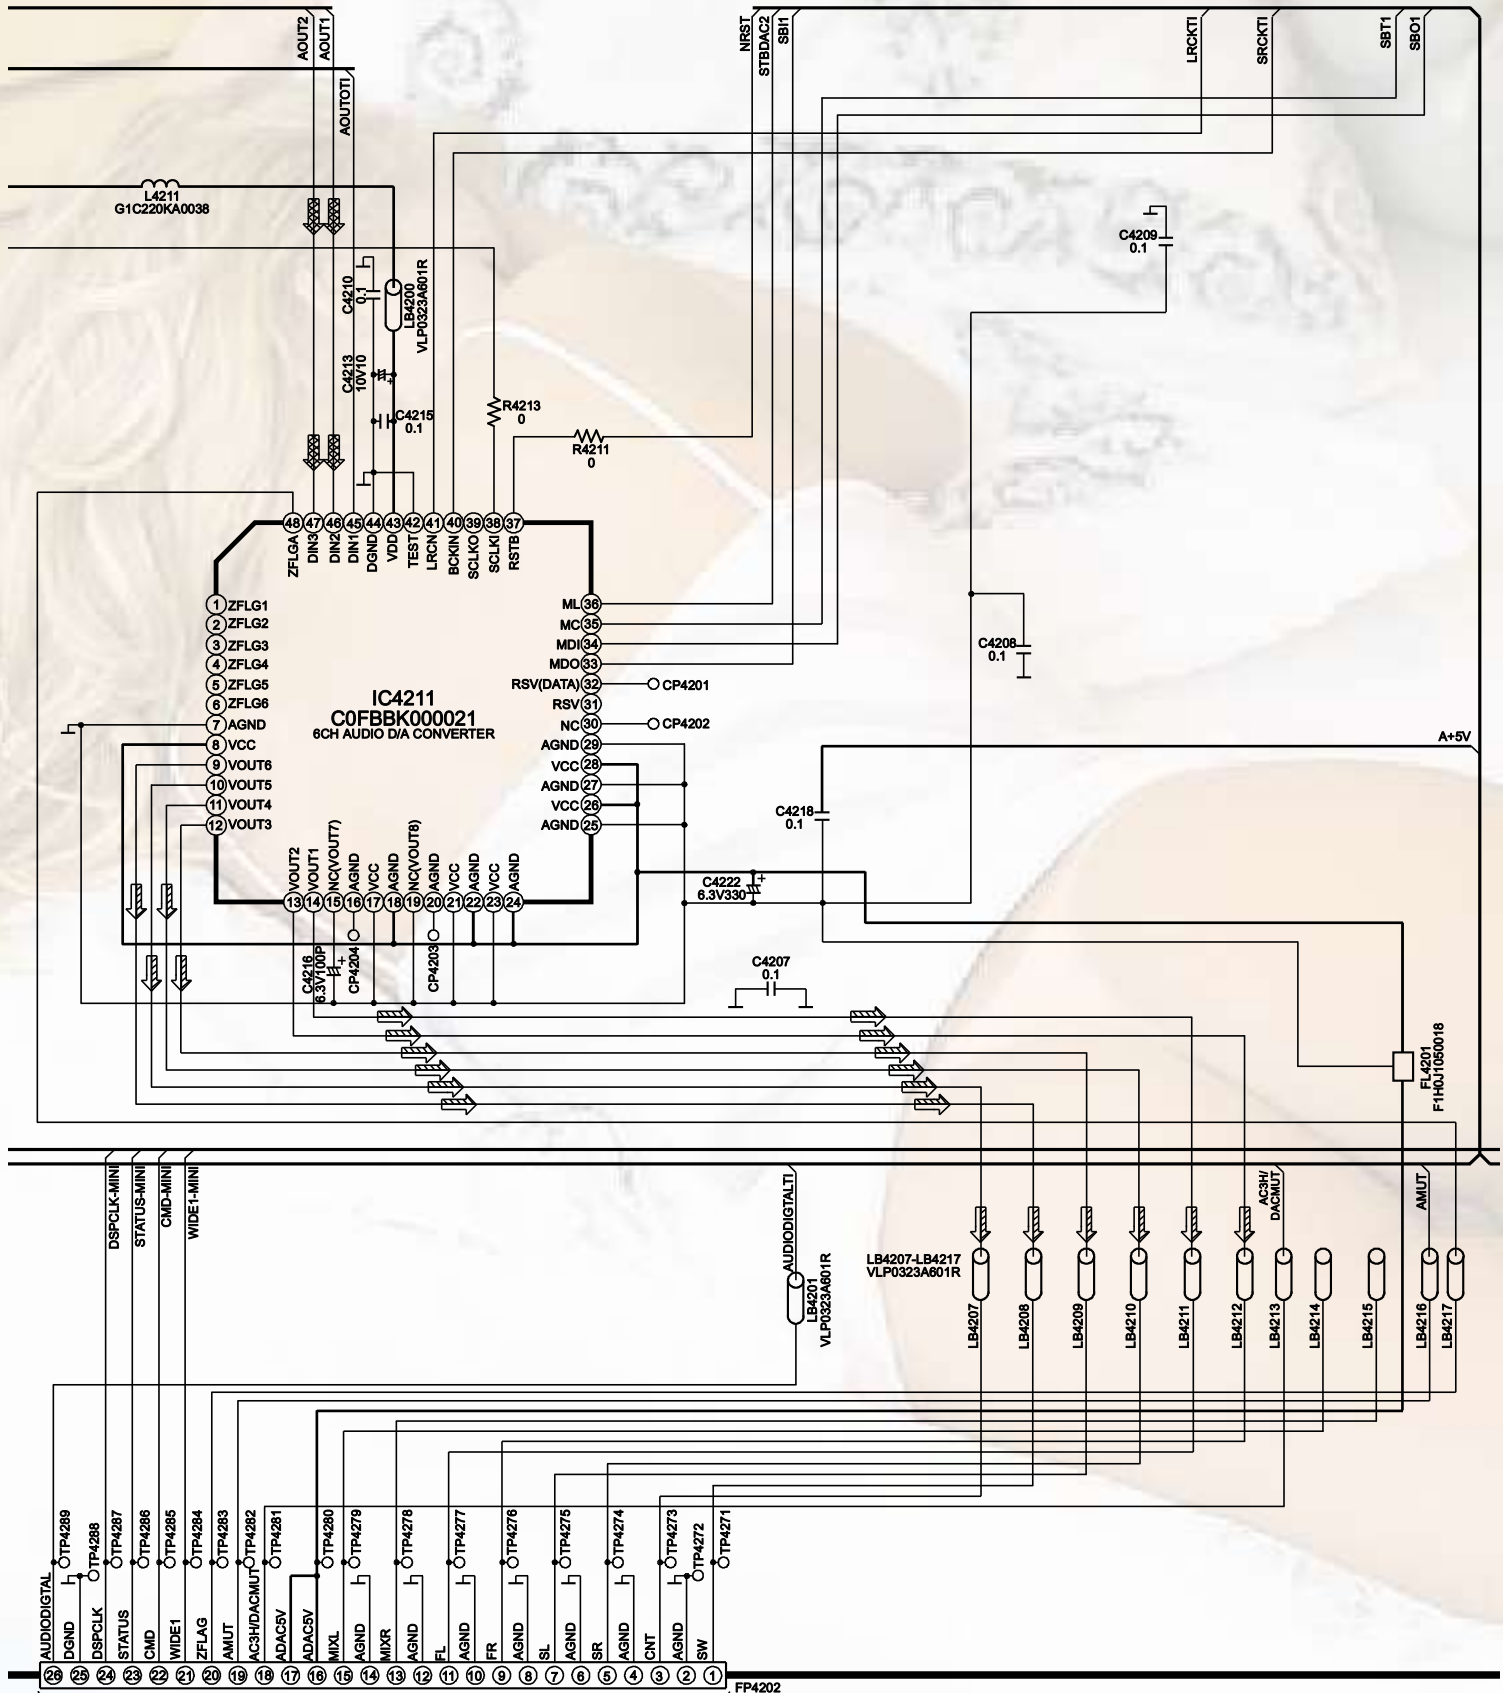

TO
MAIN CIRCUIT
(CN301) ON
SCHEMATIC DIAGRAM-13

SCHEMATIC DIAGRAM-12


B DVD MODULE (2) CIRCUIT

— : +B SIGNAL LINE

⬮ : DVD(VIDEO) SIGNAL LINE

IC6251
C0DBCGE00002
D3.3V REGULATOR

IC6251

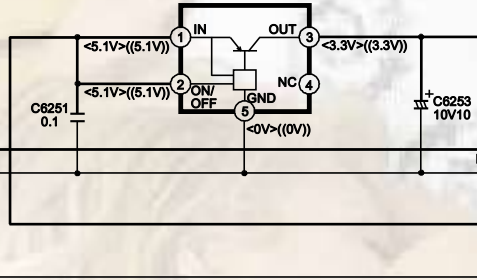

C3215
0.1

LB3202-LB3204
D0GB101JA002

CMD-MINI

STATUS-MINI

DSPCLK-MINI

CB/B

DSPCLK

STATUS

CMD

M+12/9V-CTL

M+9V

MGND

D+5V

DGND

D+1.8V

DGND

A+5V

AGND

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

Y

C

CR/R

VGND

NJ3091

ERJ3GEY0R00V

IC3301
C1AB00001393
VIDEO BUFFER

QR3301
UN5212TX
SWITCH

WIDE1-MINI

TRAYREF

TRAYDRV

TRAYMUT

IN-SW

TRAY/TRV

TRAYREF

TRAYDRV

TRAYMUT

TRV-SW+

TRAY/TRV


TRAYREF

TRAYDRV

TRAYMUT


TRV-SW+

TRAY/TRV

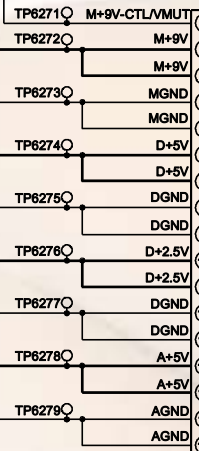

TO MAIN CIRCUIT (CN302) ON SCHEMATIC DIAGRAM-19

FP3202

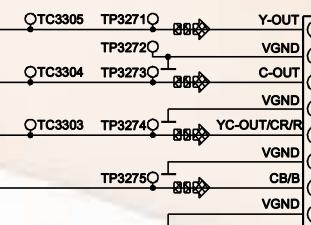

TO MAIN CIRCUIT (CN501) ON SCHEMATIC DIAGRAM-19


FP3203

SCHEMATIC DIAGRAM - 13

— : +B SIGNAL LINE — : -B SIGNAL LINE ➡ : MAIN SIGNAL LINE 8888 : DVD(VIDEO) SIGNAL LINE
 ▢ : AUX SIGNAL LINE


C MAIN CIRCUIT

TO DVD MODULE
 (2) CIRCUIT
 (FP4202) ON
 SCHEMATIC
 DIAGRAM-11

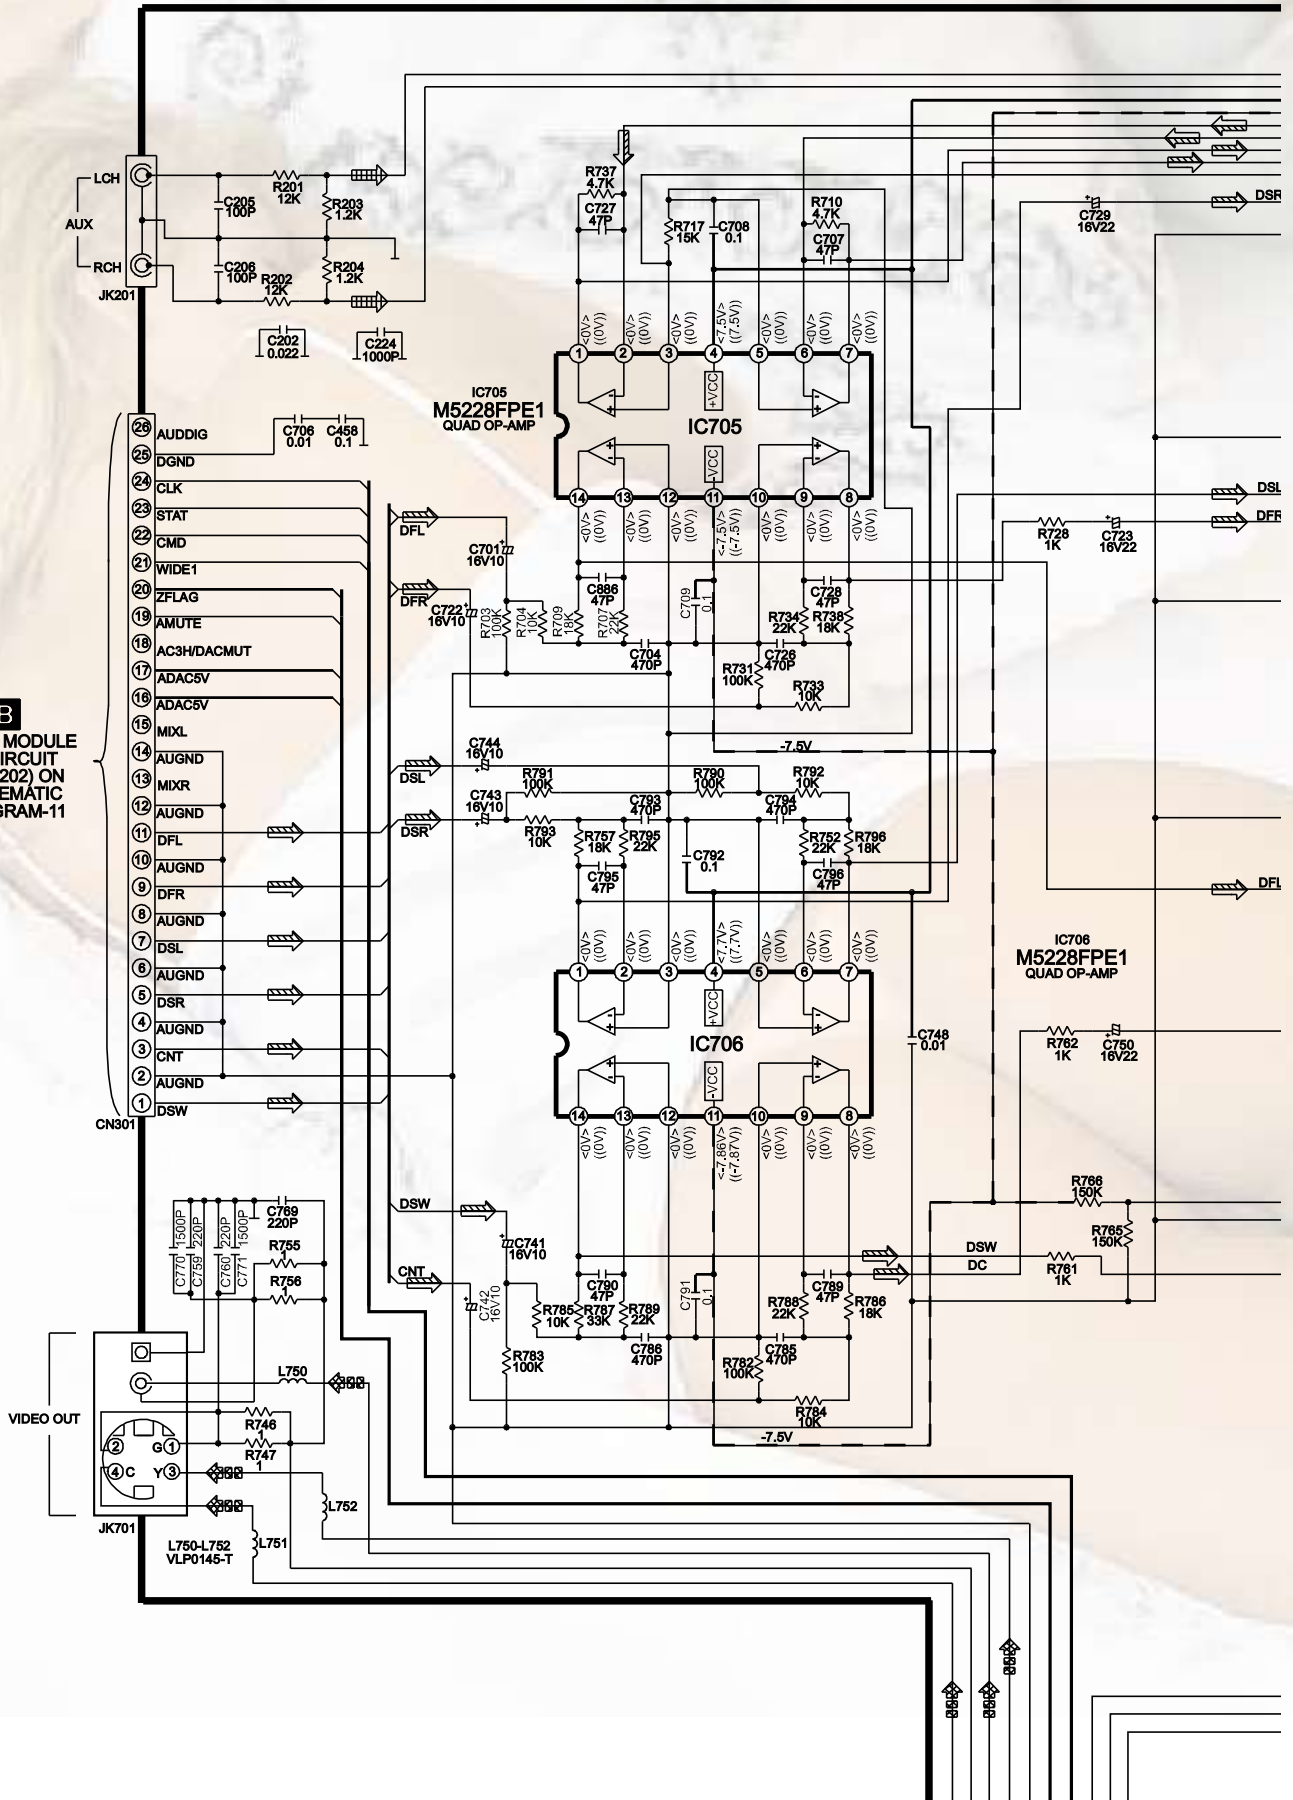

C


 : +B SIGNAL LINE
 : -B SIGNAL LINE
 : MAIN SIGNAL LINE
 : FM/AM SIGNAL LINE
 : AUX SIGNAL LINE
 : PLAYBACK SIGNAL LINE

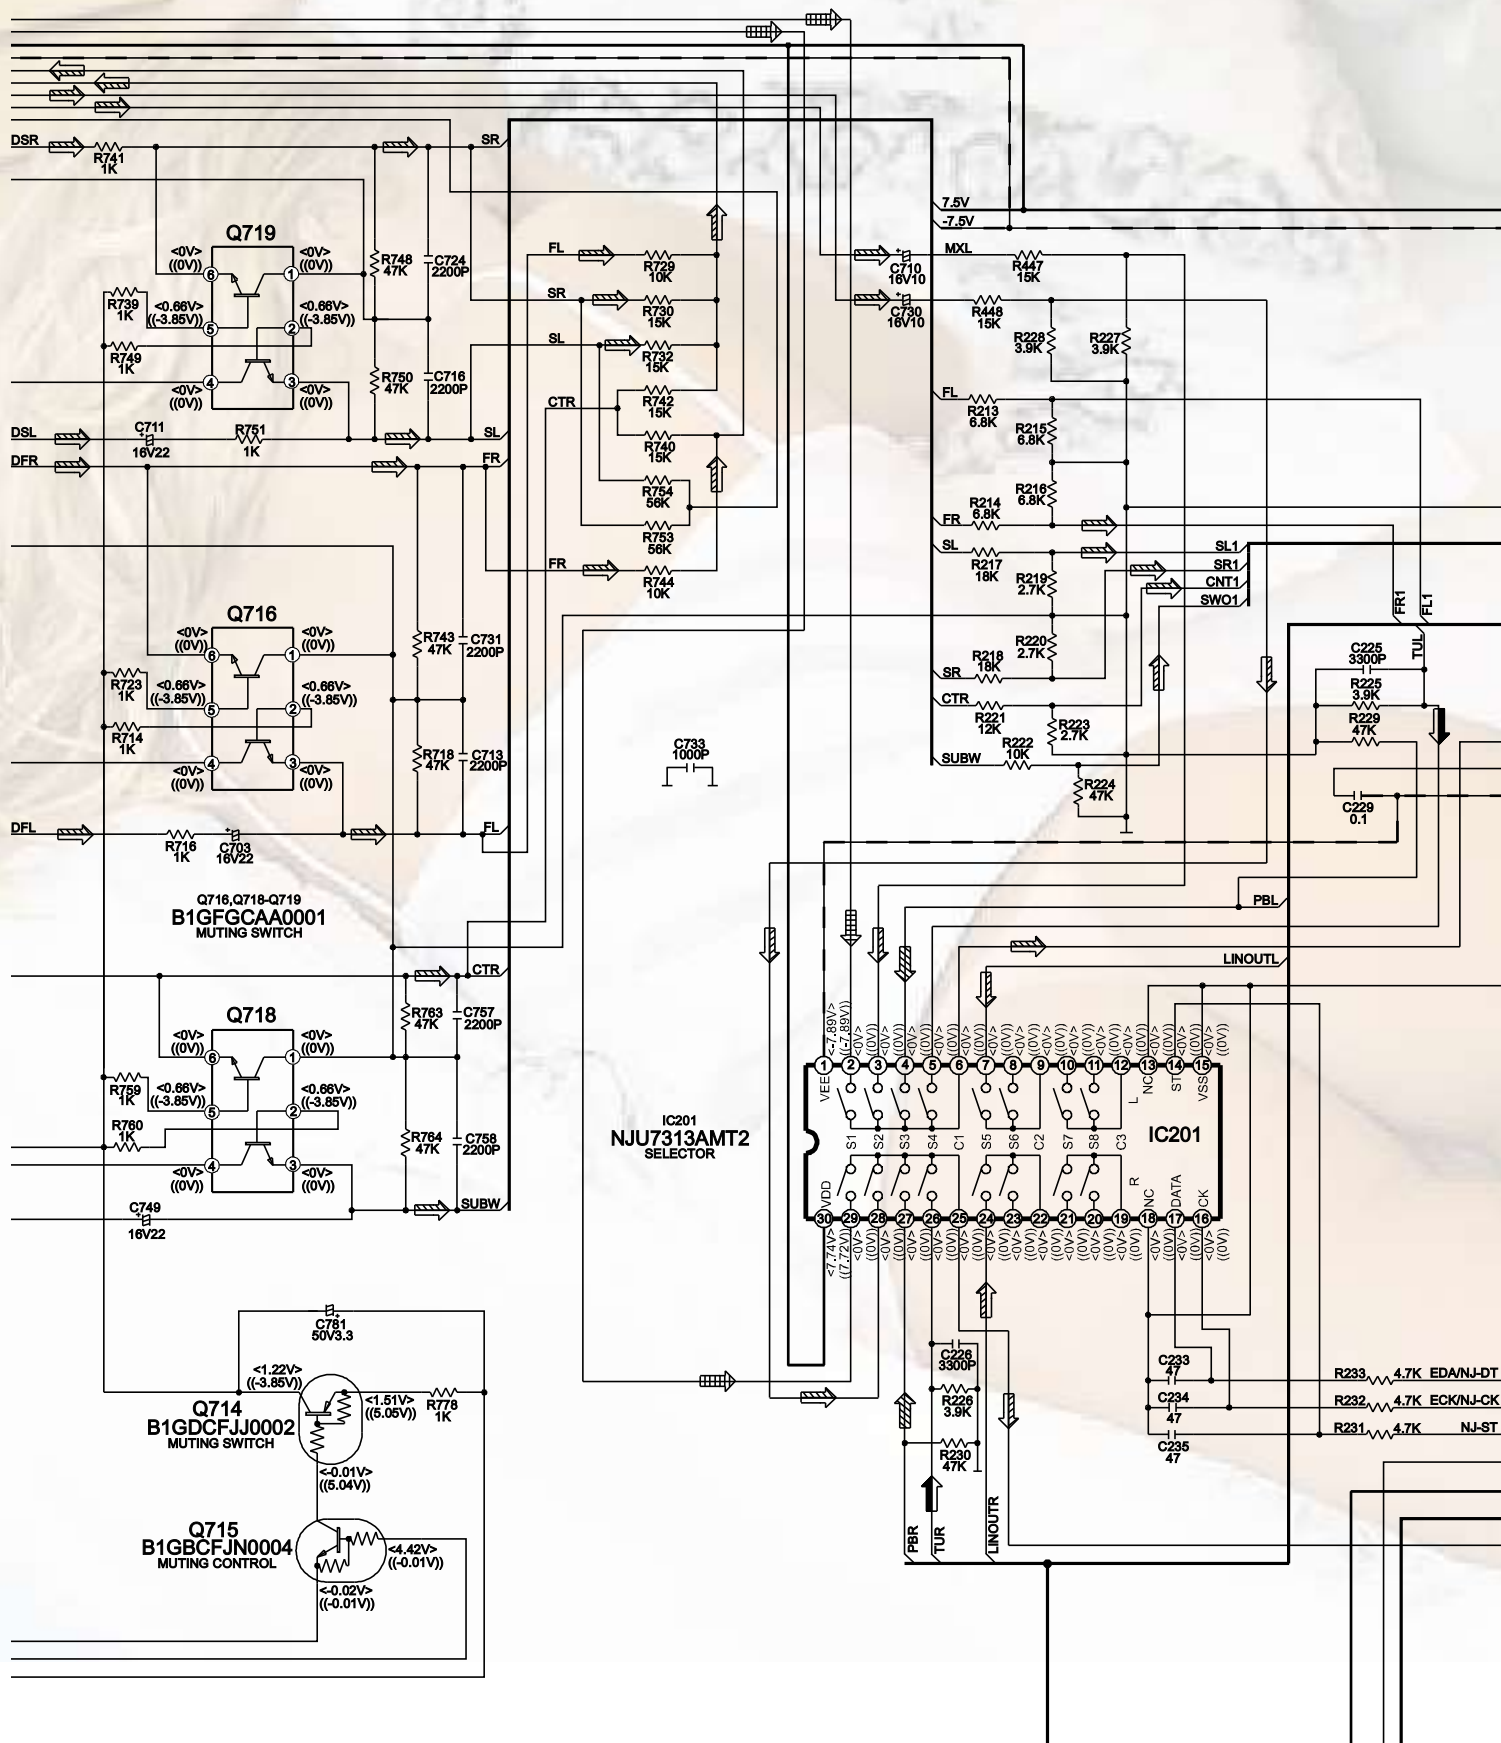

SCHEMATIC DIAGRAM - 15

— : +B SIGNAL LINE — : -B SIGNAL LINE ⇨ : MAIN SIGNAL LINE


C MAIN CIRCUIT

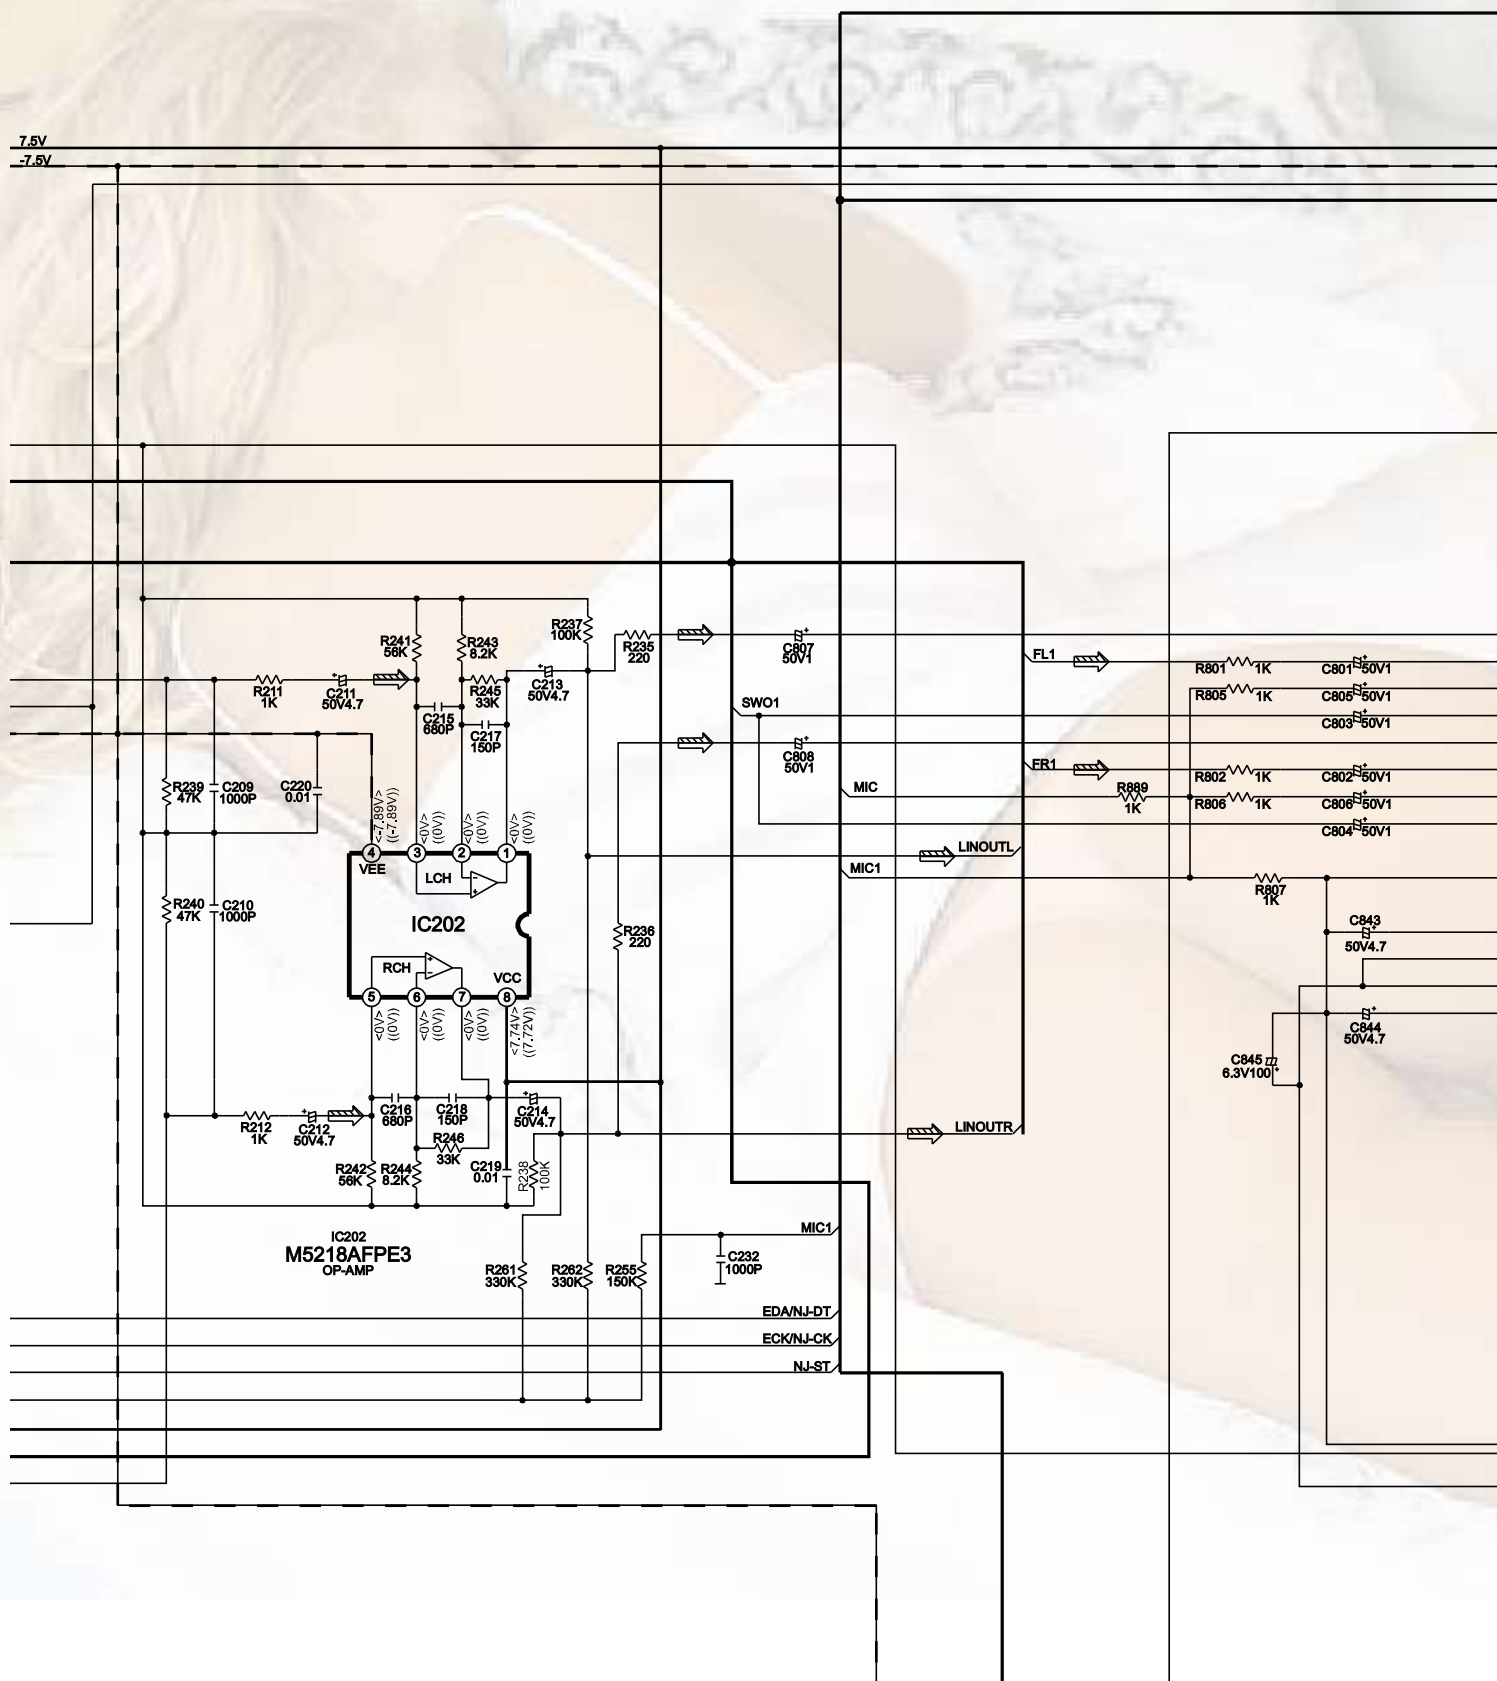

C MAIN CIRCUIT

 : MAIN SIGNAL LINE

TO **D**
PANEL CIRCUIT (CN601)
ON SCHEMATIC DIAGRAM-25

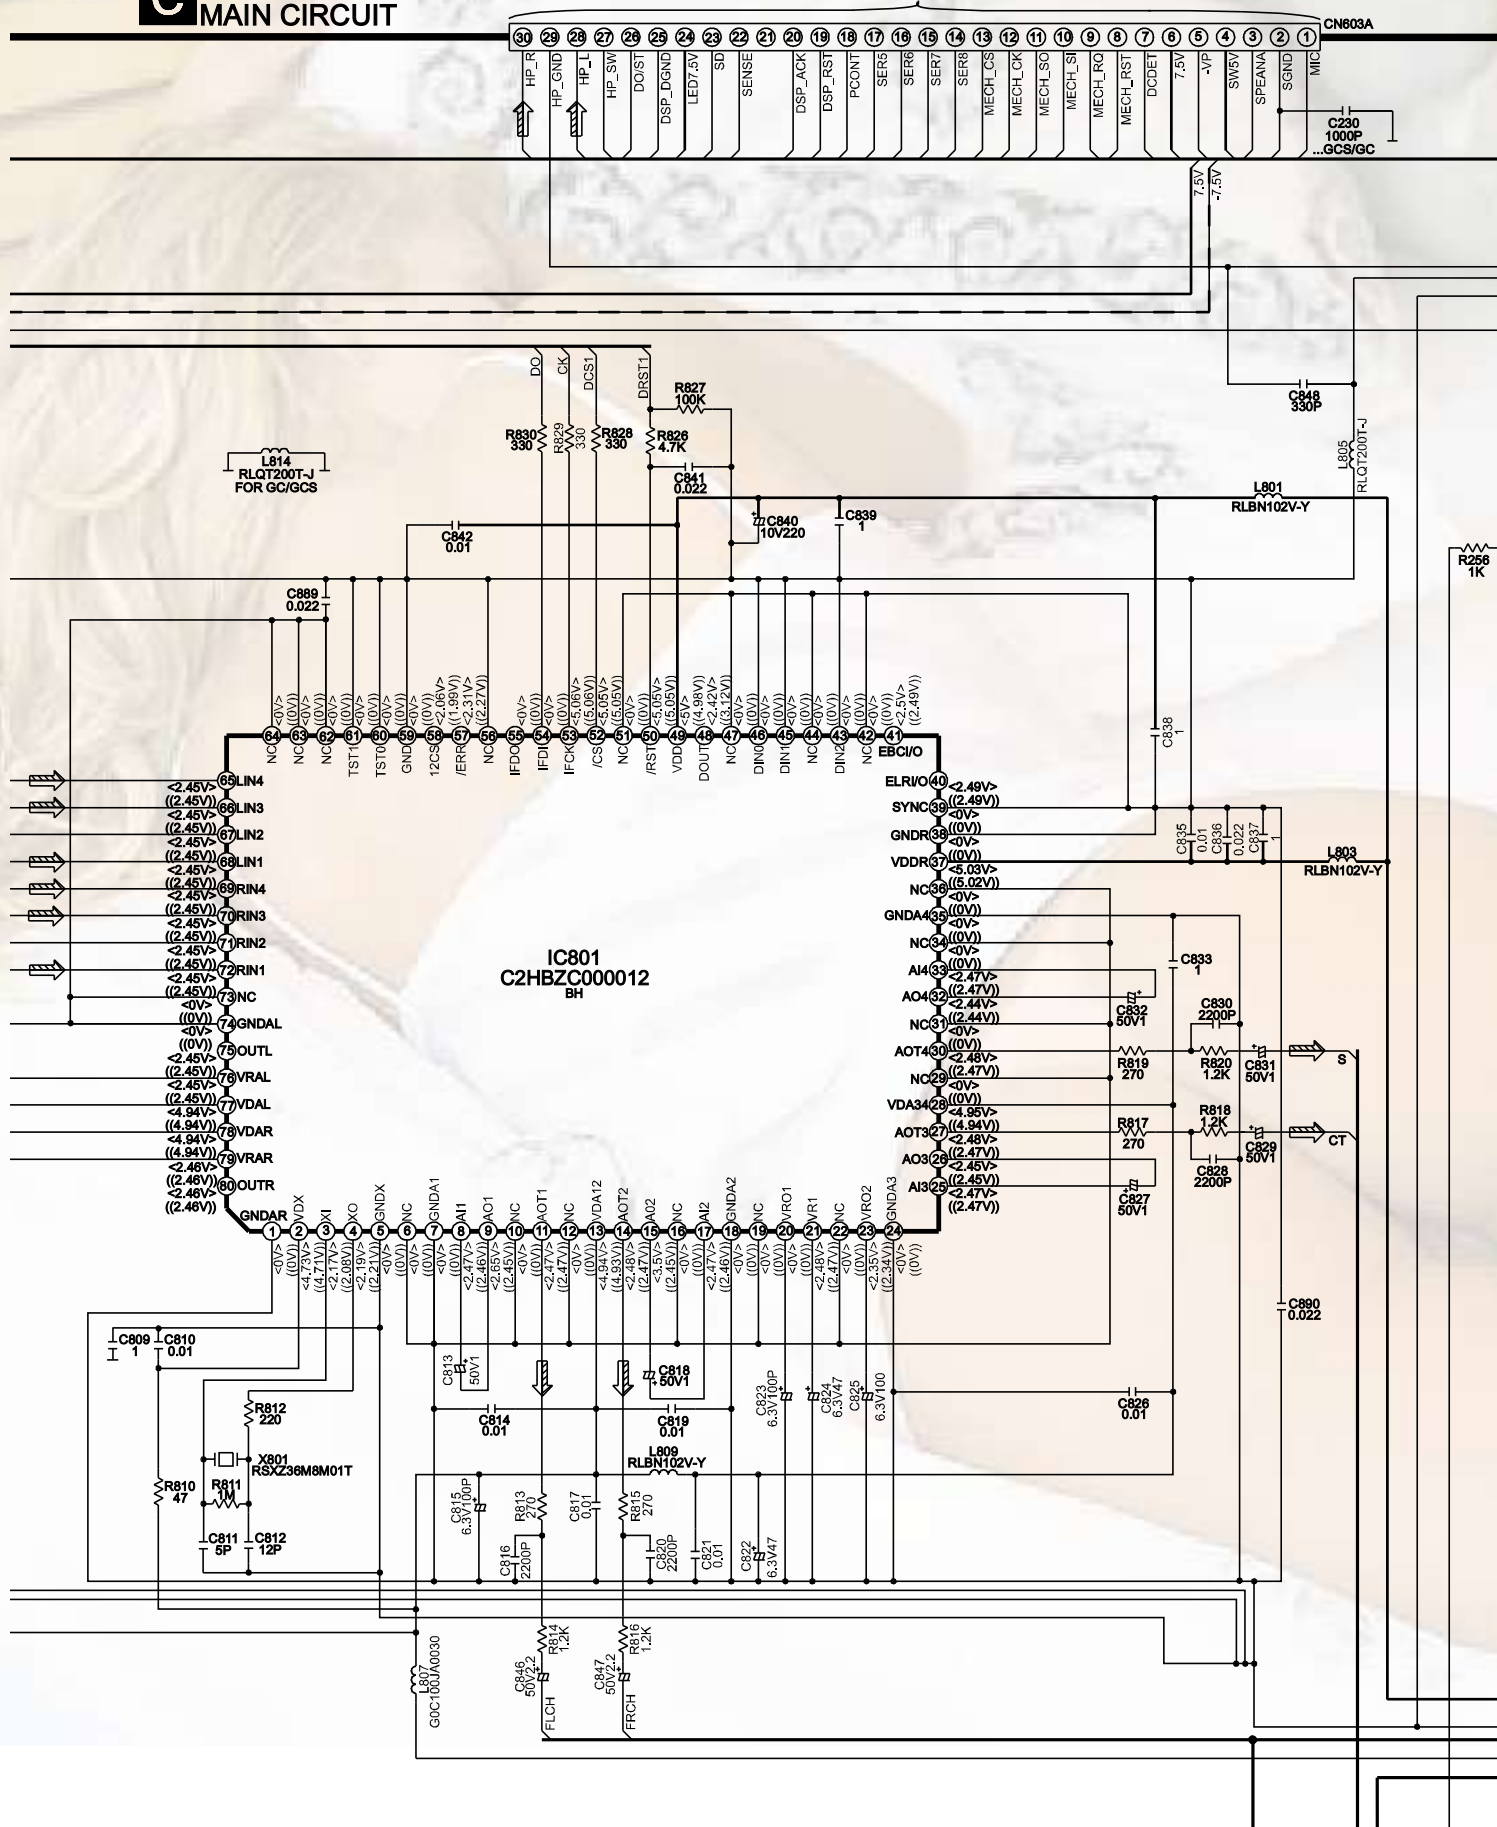


C

— : +B SIGNAL LINE


— : -B SIGNAL LINE

 : MAIN SIGNAL LINE

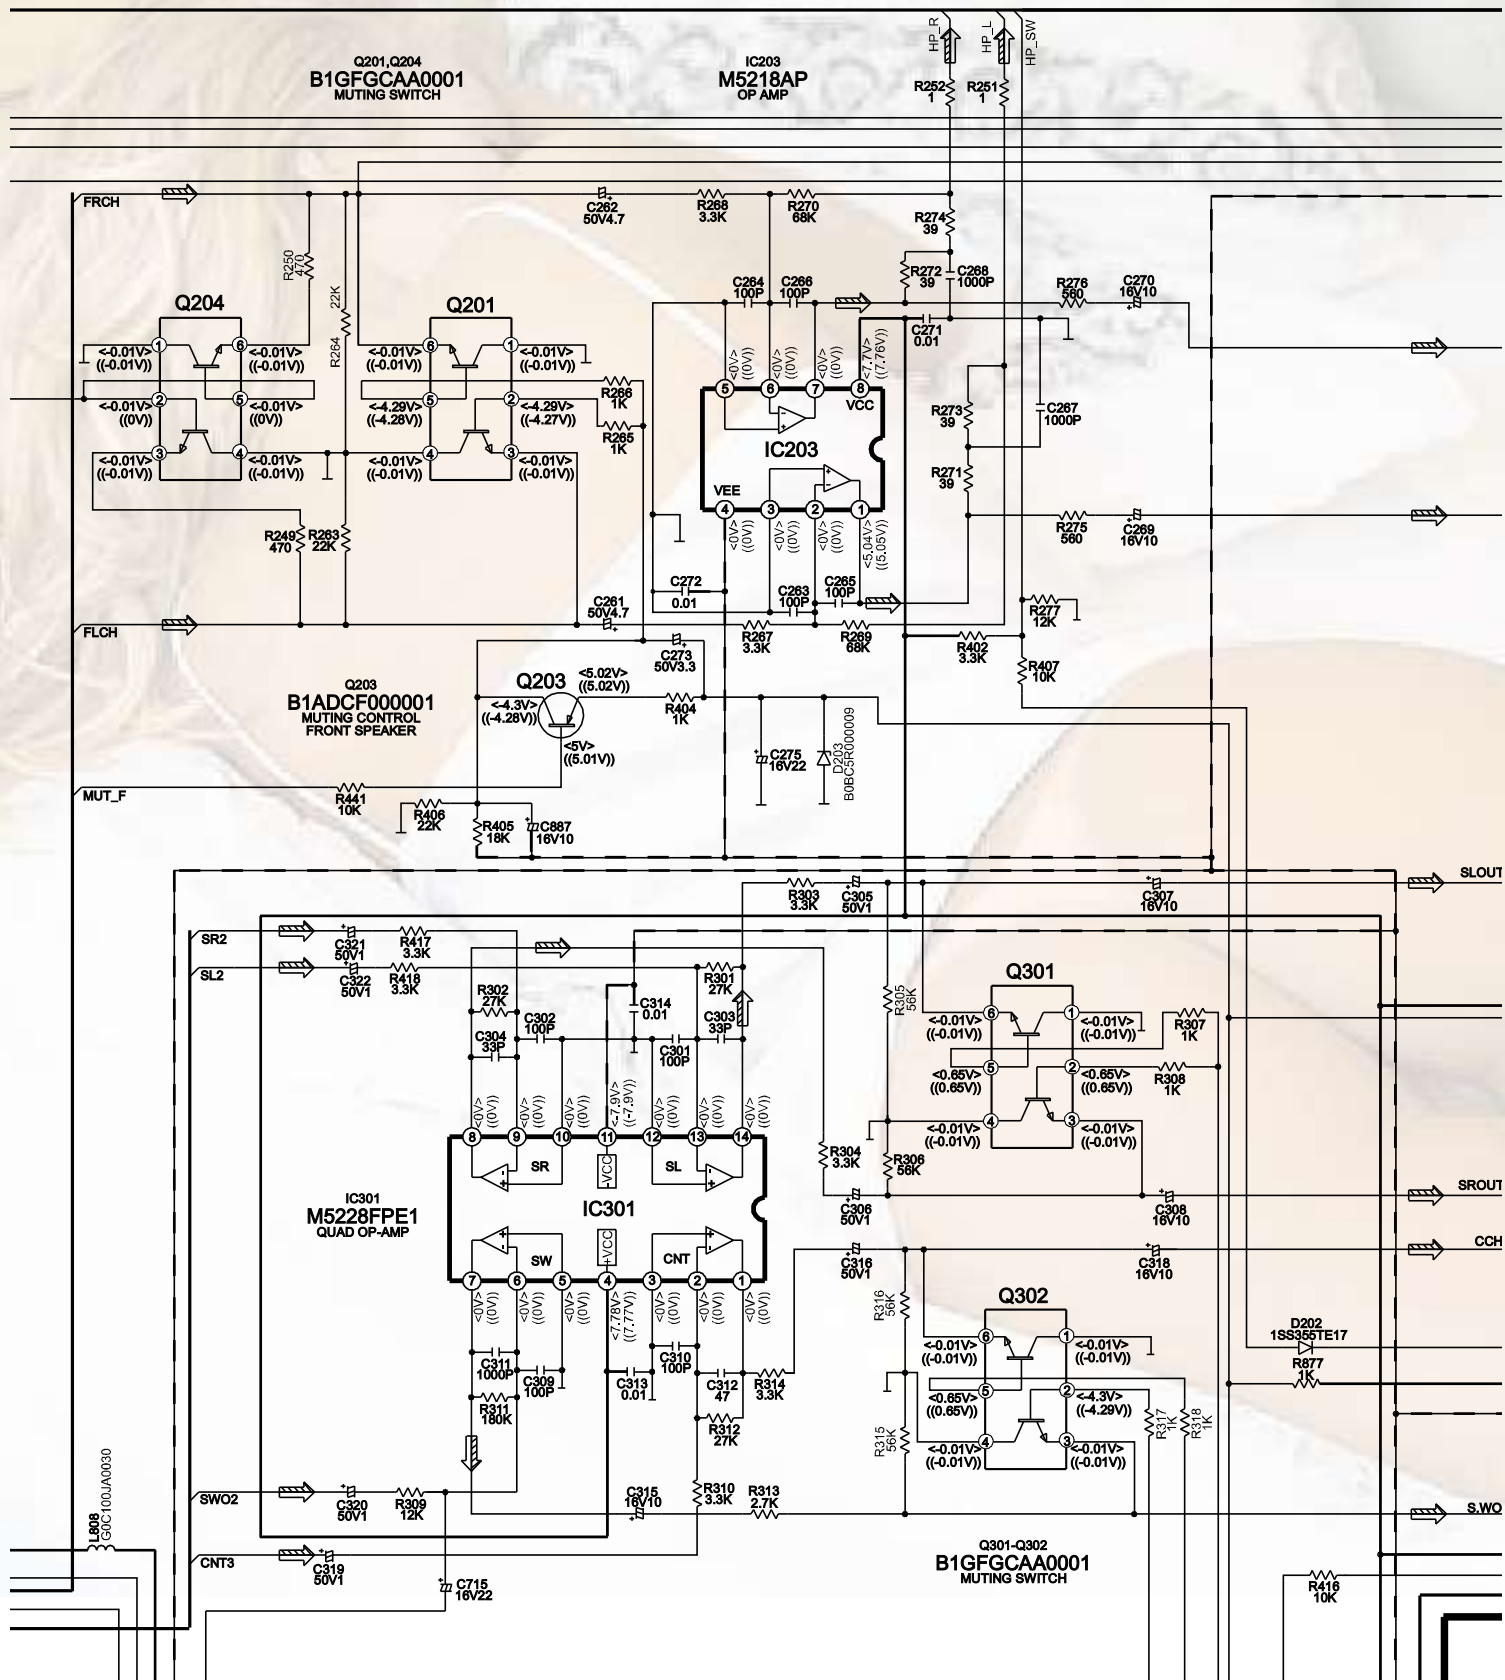

C MAIN CIRCUIT

 : MAIN SIGNAL LINE

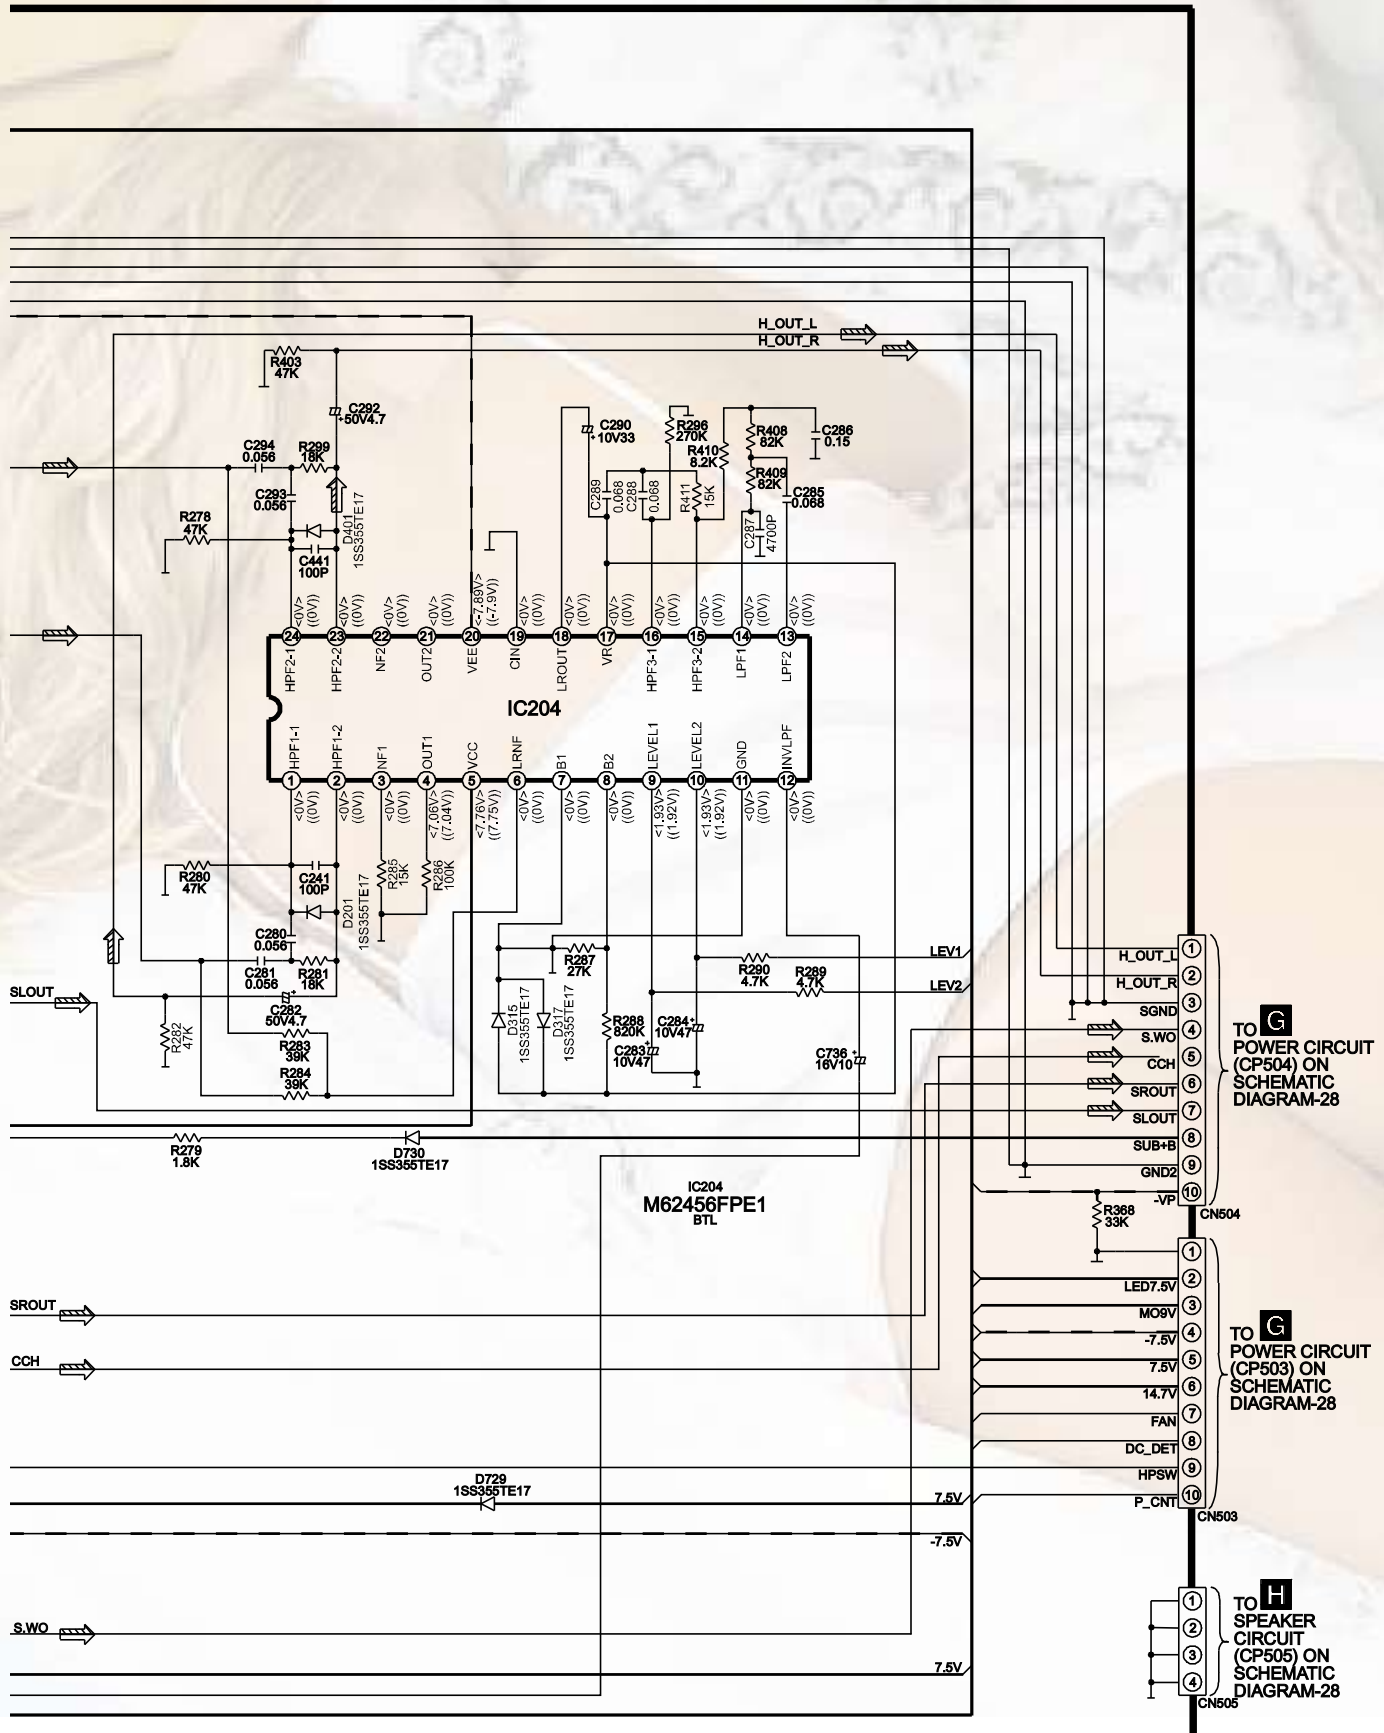


SCHEMATIC DIAGRAM - 19

C MAIN CIRCUIT

— : +B SIGNAL LINE  : DVD(VIDEO) SIGNAL LINE

TO **B**
DVD MODULE
(2) CIRCUIT
(FP3203) ON
SCHEMATIC
DIAGRAM-12

TO **B**
DVD MODULE
(2) CIRCUIT
(FP3202) ON
SCHEMATIC
DIAGRAM-12

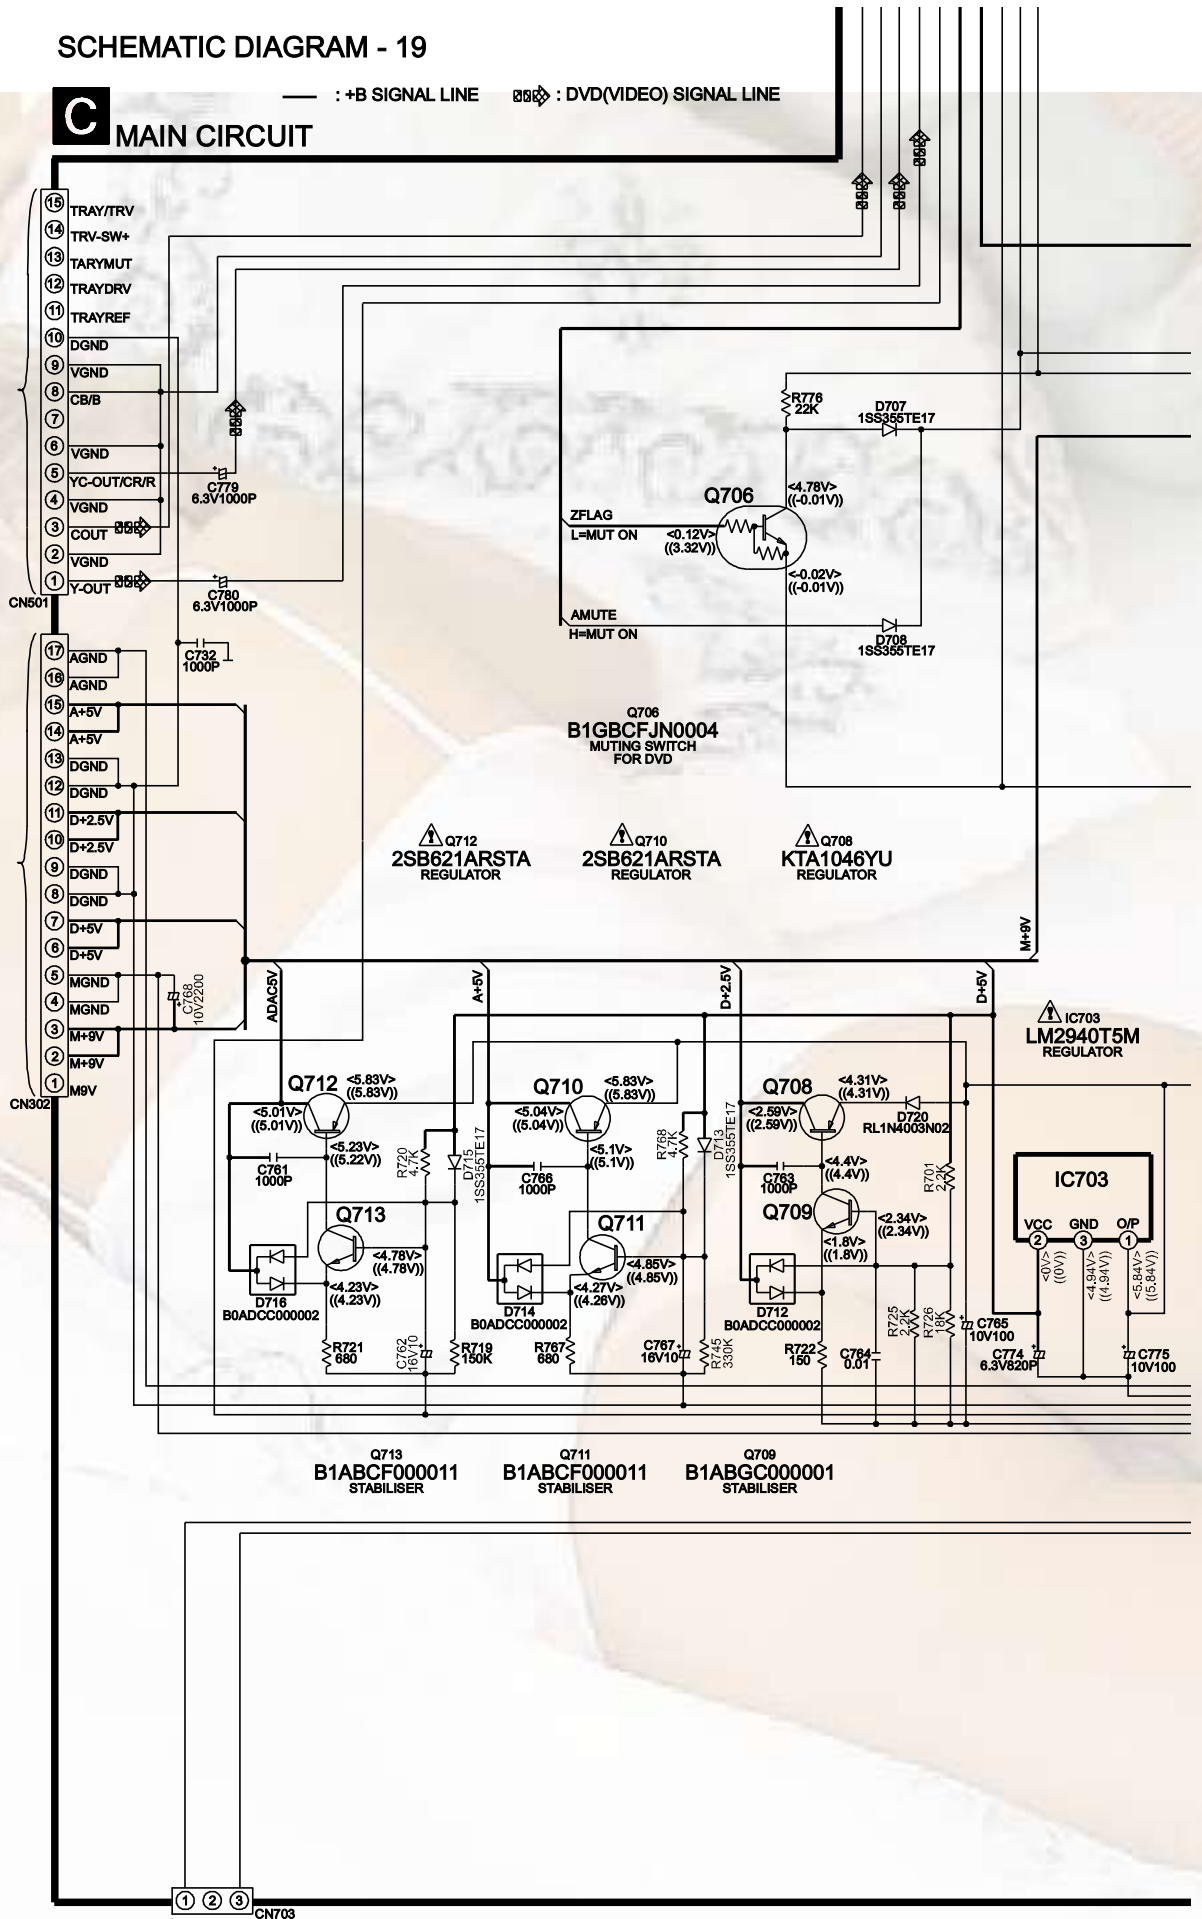

TO **L**
TRANS CIRCUIT (W503) ON
SCHEMATIC
DIAGRAM-29





SCHEMATIC DIAGRAM - 20

C

MAIN CIRCUIT


— : +B SIGNAL LINE ➡ : FM/AM SIGNAL LINE  : RECORD SIGNAL LINE

➡ : MAIN SIGNAL LINE  : PLAYBACK SIGNAL LINE

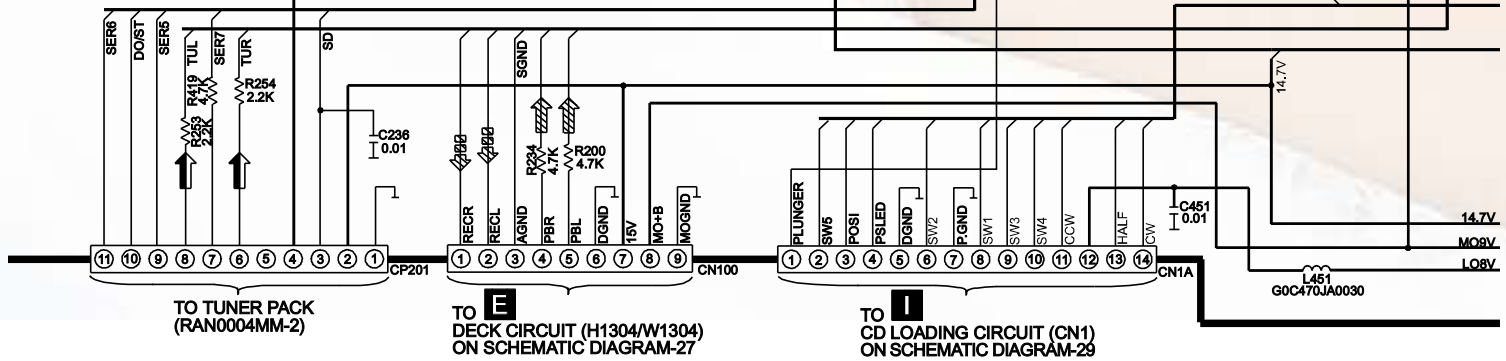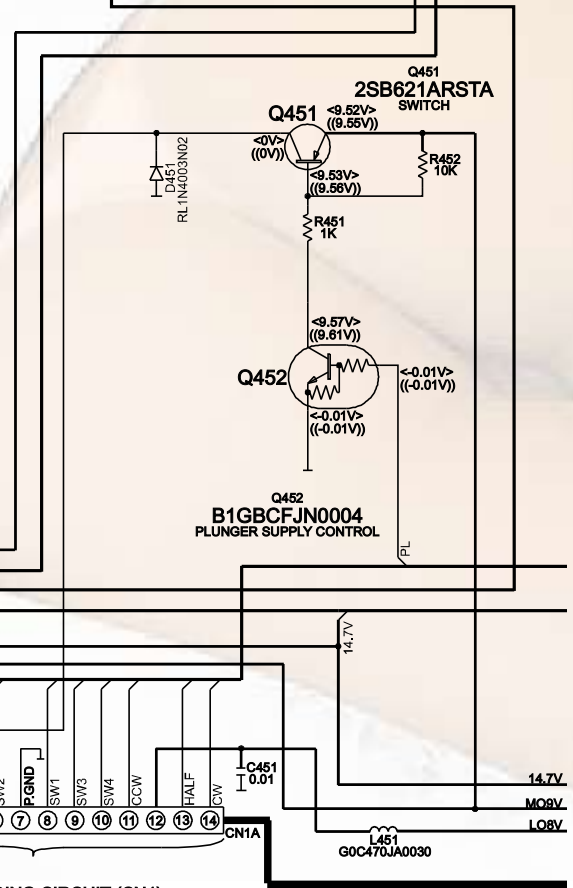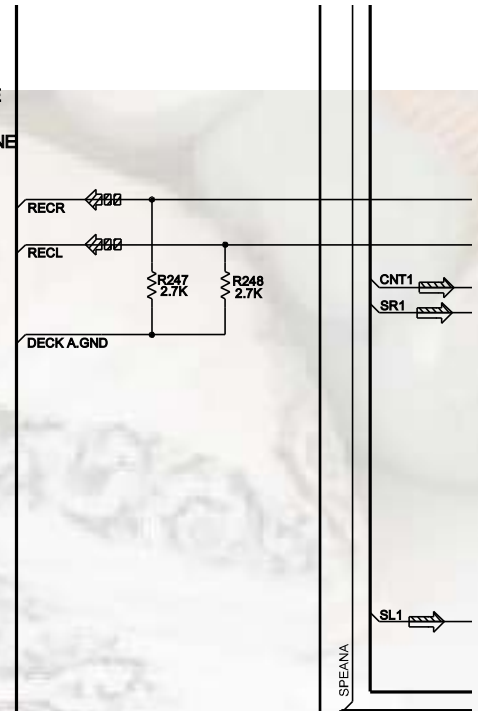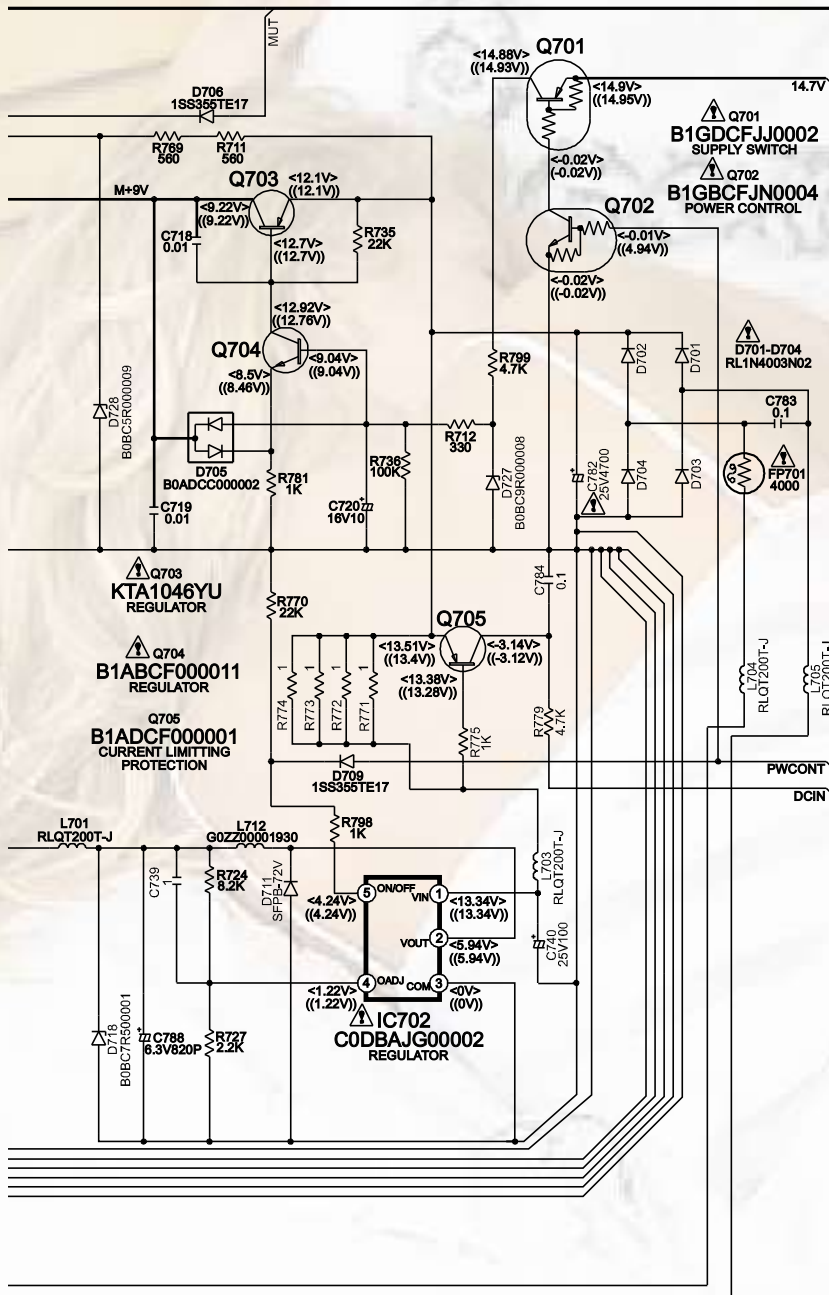

C MAIN CIRCUIT


: MAIN SIGNAL LINE : RECORD SIGNAL LINE

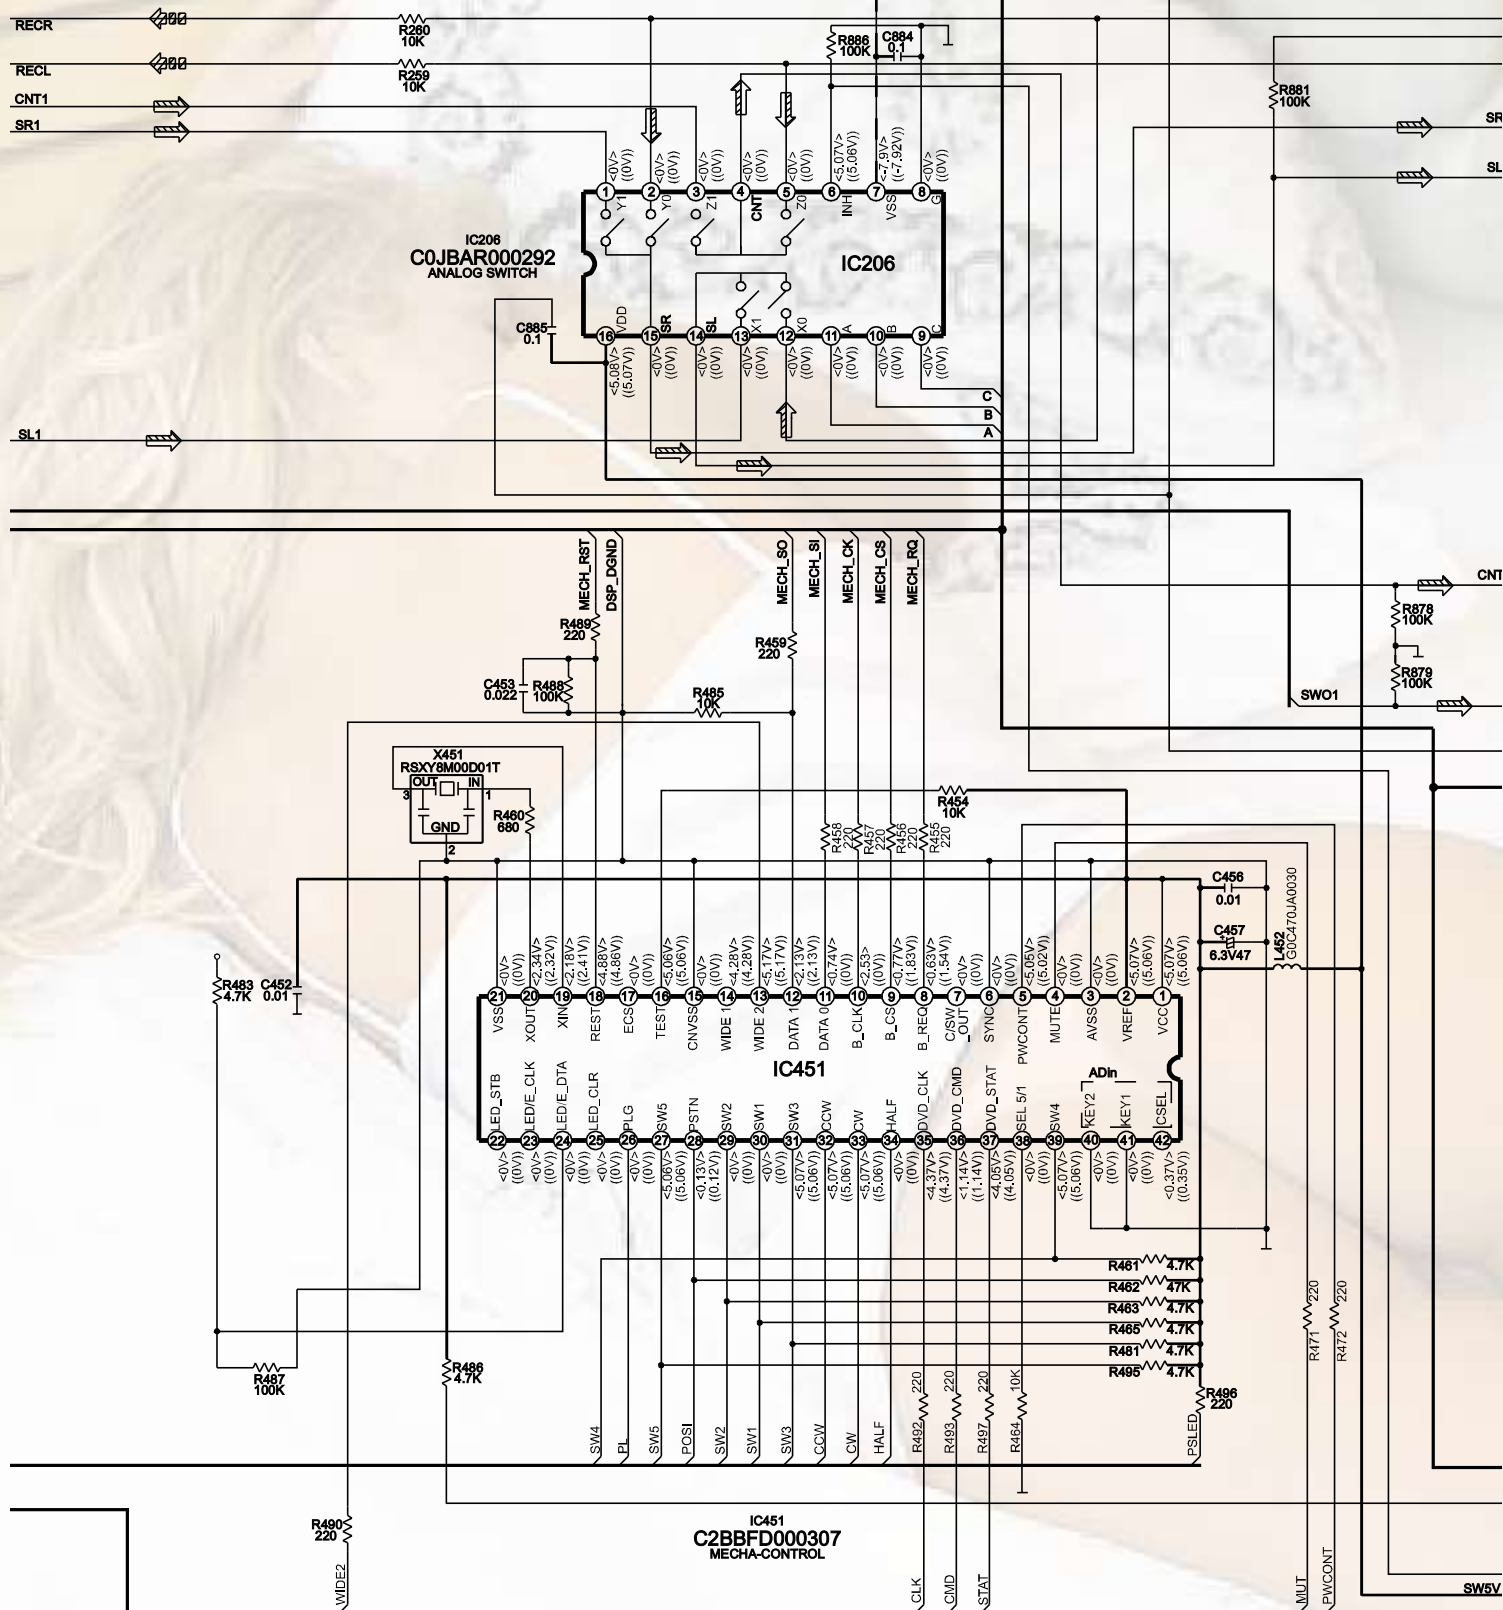

LO8V

C MAIN CIRCUIT

C

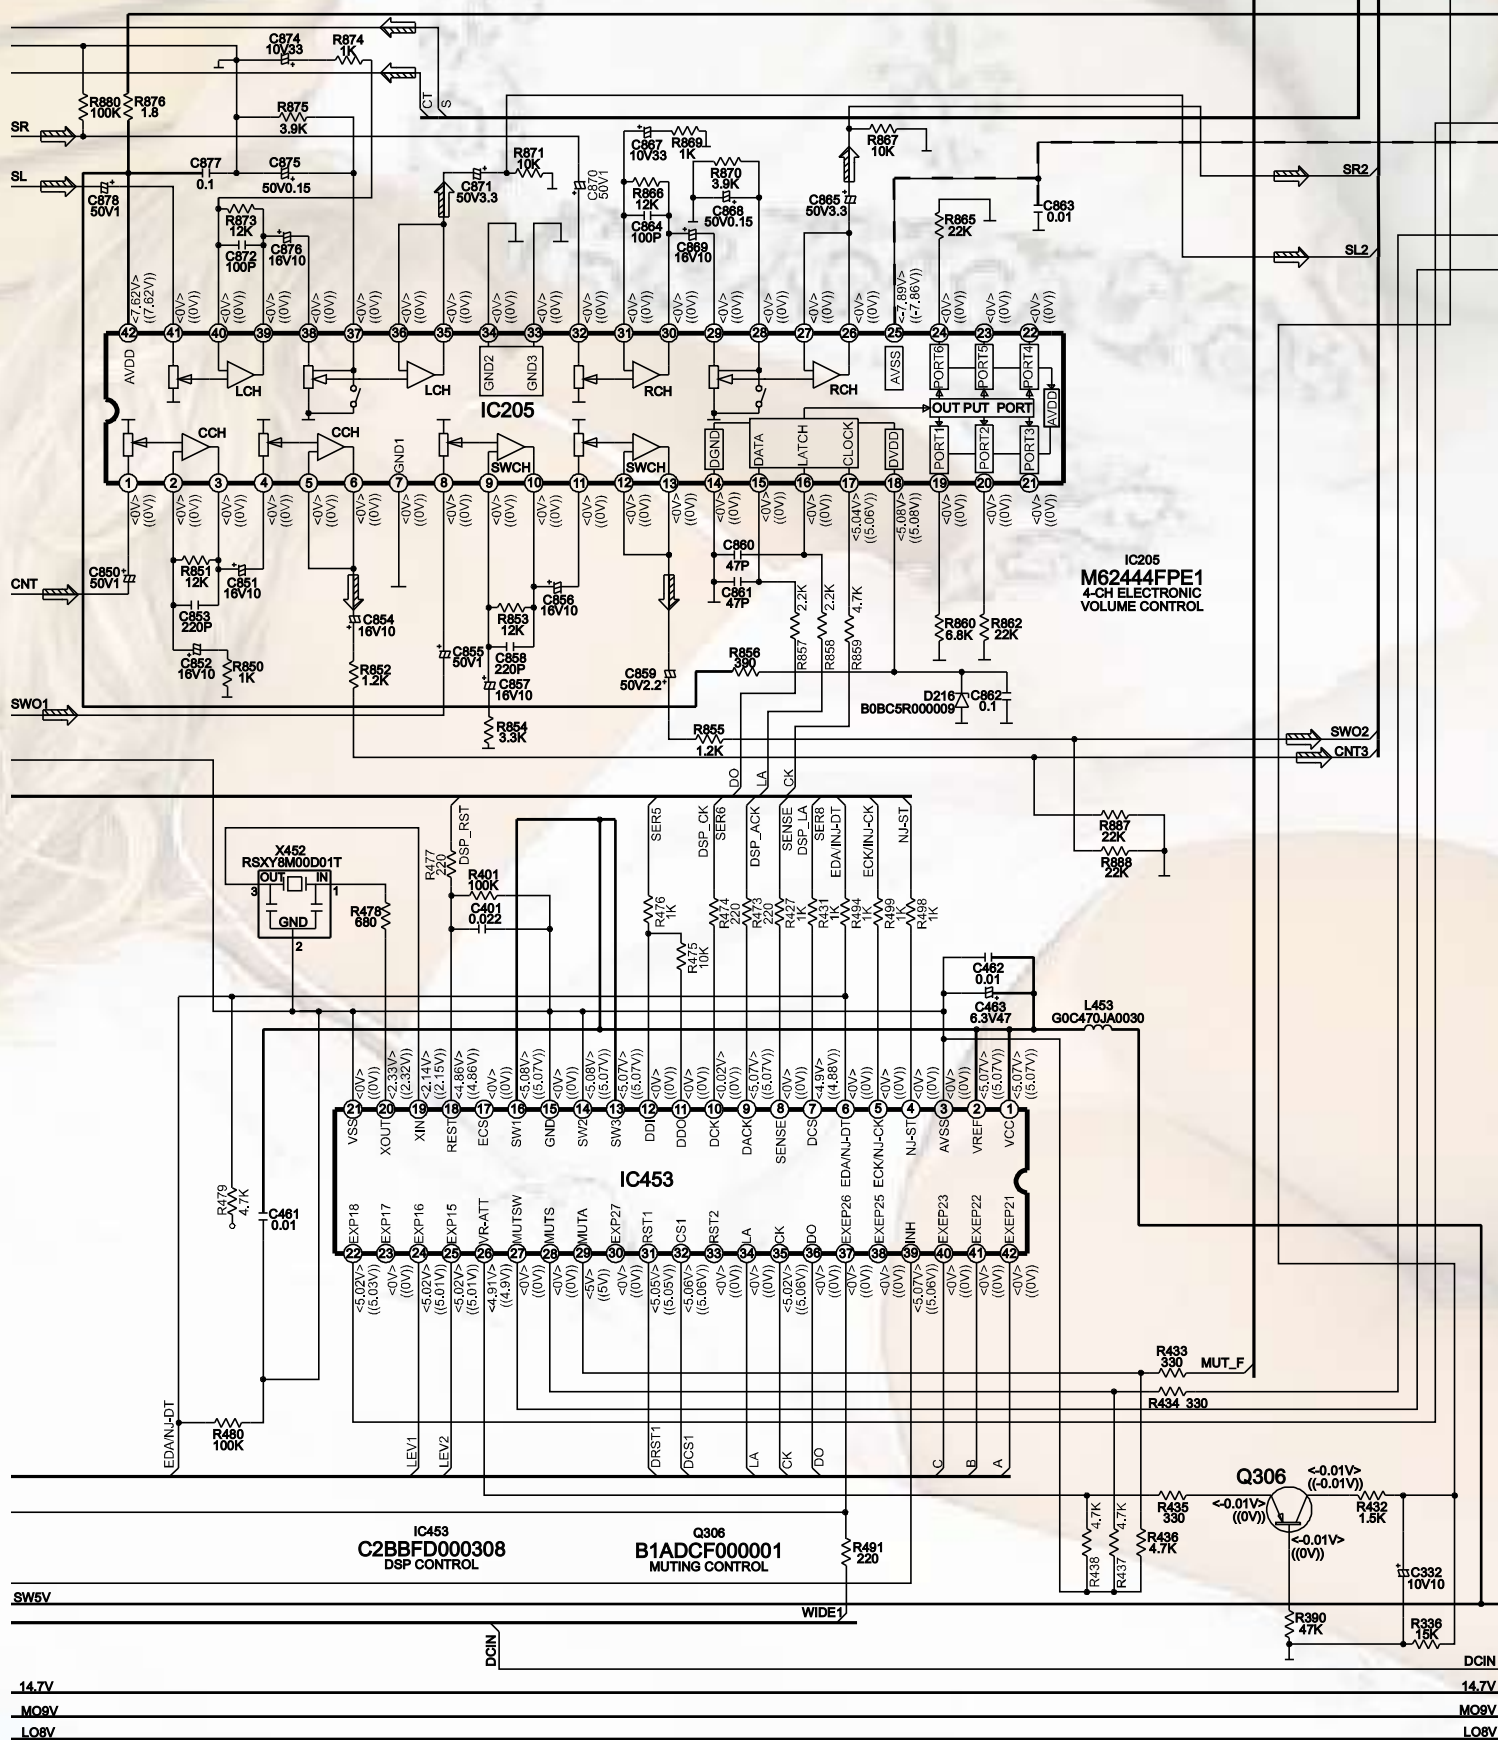


SCHEMATIC DIAGRAM - 23



MAIN CIRCUIT


— : +B SIGNAL LINE — : -B SIGNAL LINE

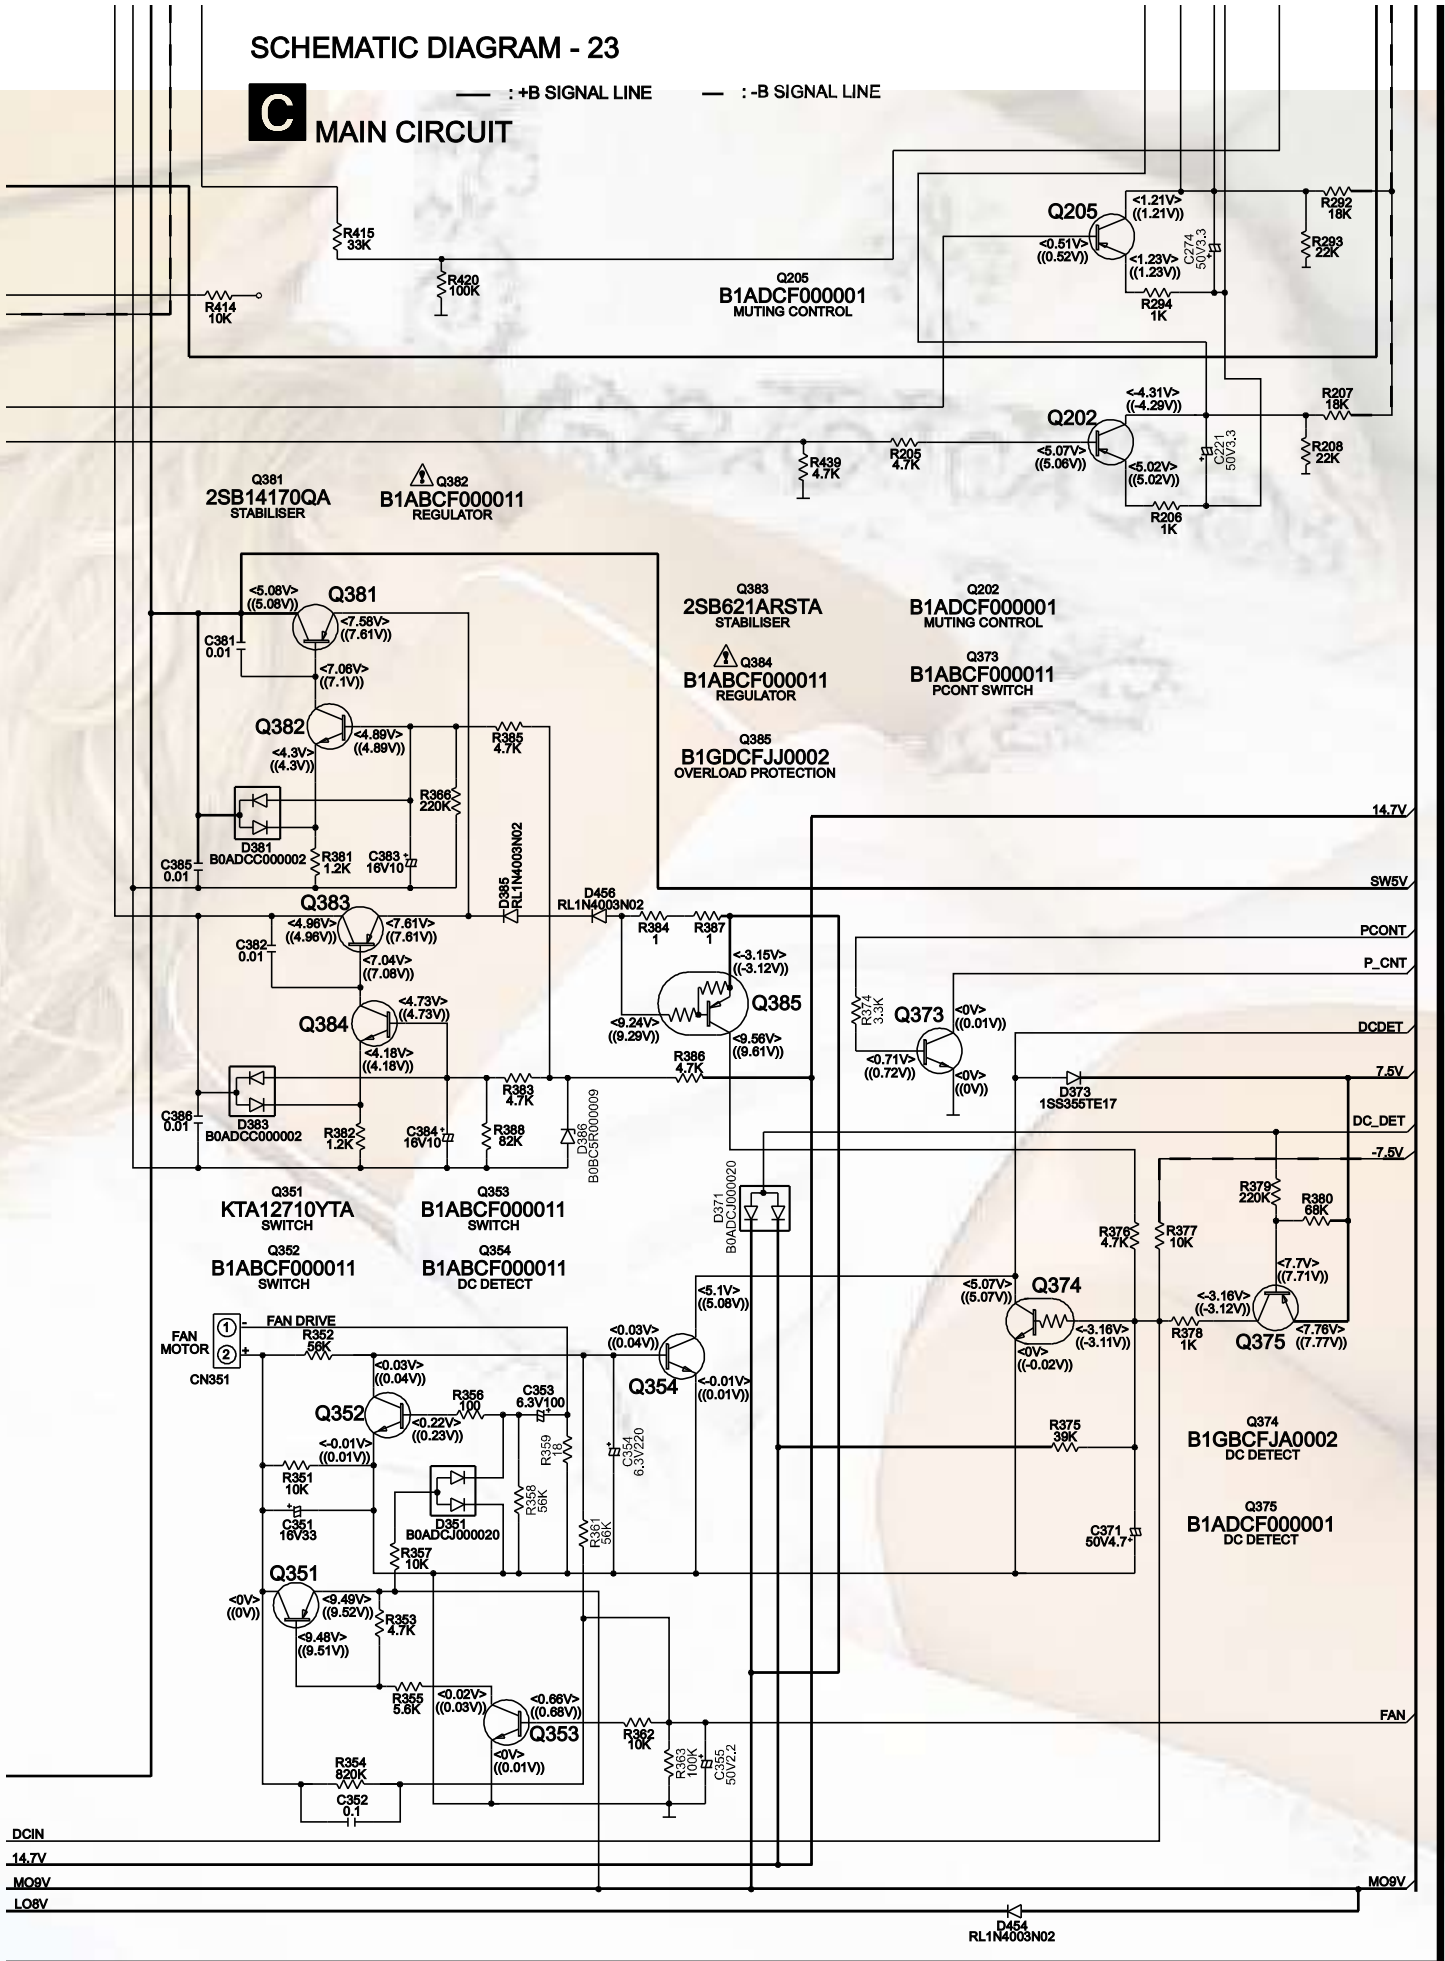


SCHEMATIC DIAGRAM - 24

— : +B SIGNAL LINE — : -B SIGNAL LINE




N TACT SWITCH 1 CIRCUIT

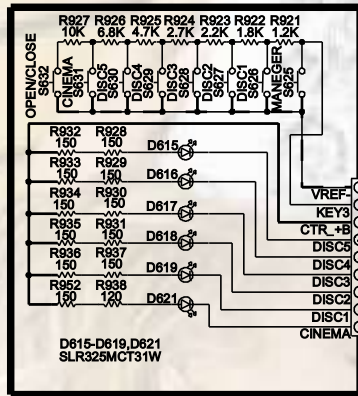

P LED CIRCUIT

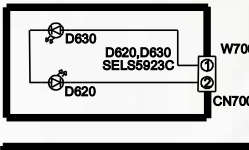

D PANEL CIRCUIT

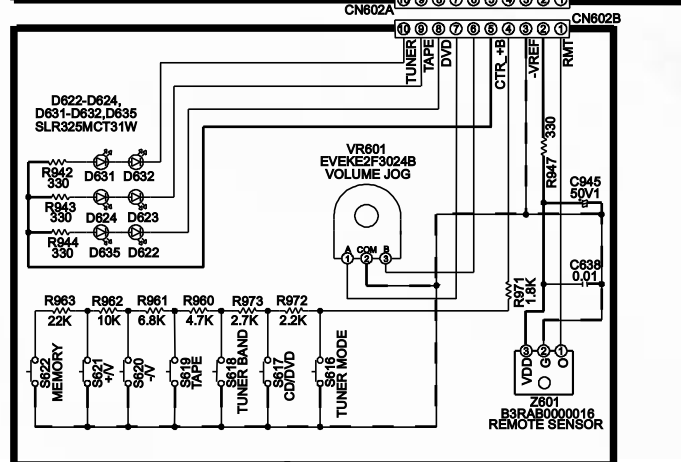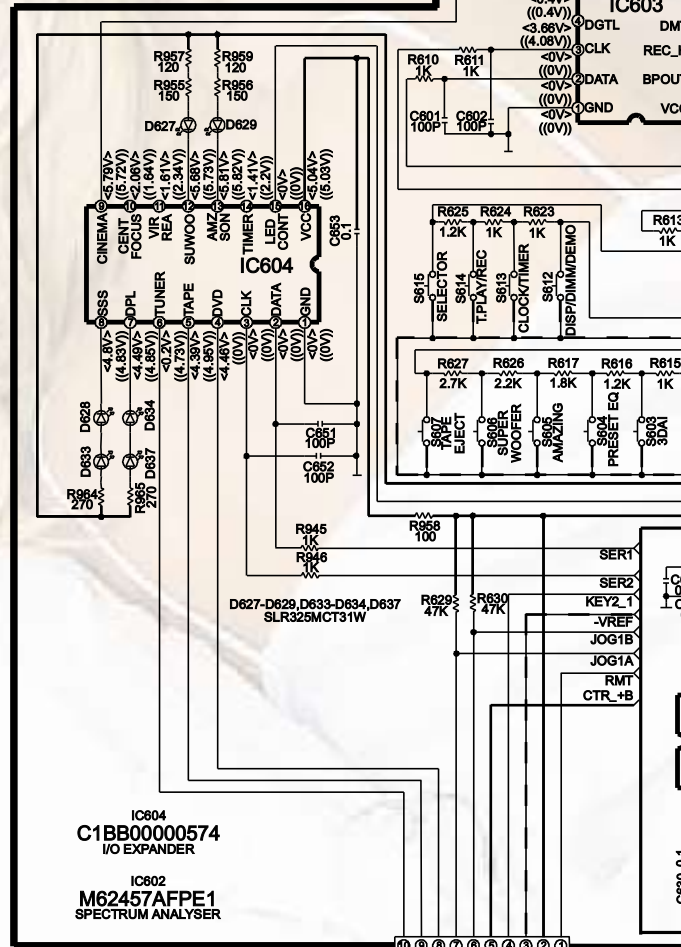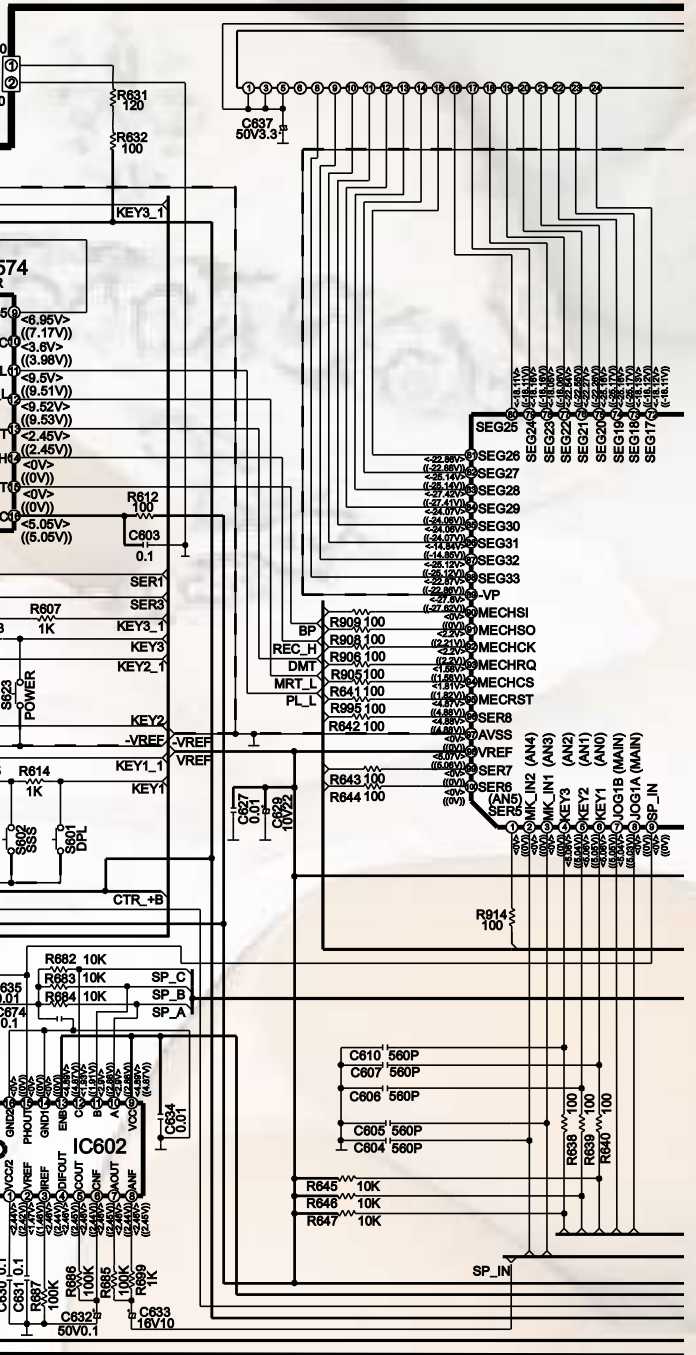


O TACT SWITCH 2 CIRCUIT



SCHEMATIC DIAGRAM - 25

— : +B SIGNAL LINE — : -B SIGNAL LINE  : MAIN SIGNAL LINE


D PANEL CIRCUIT

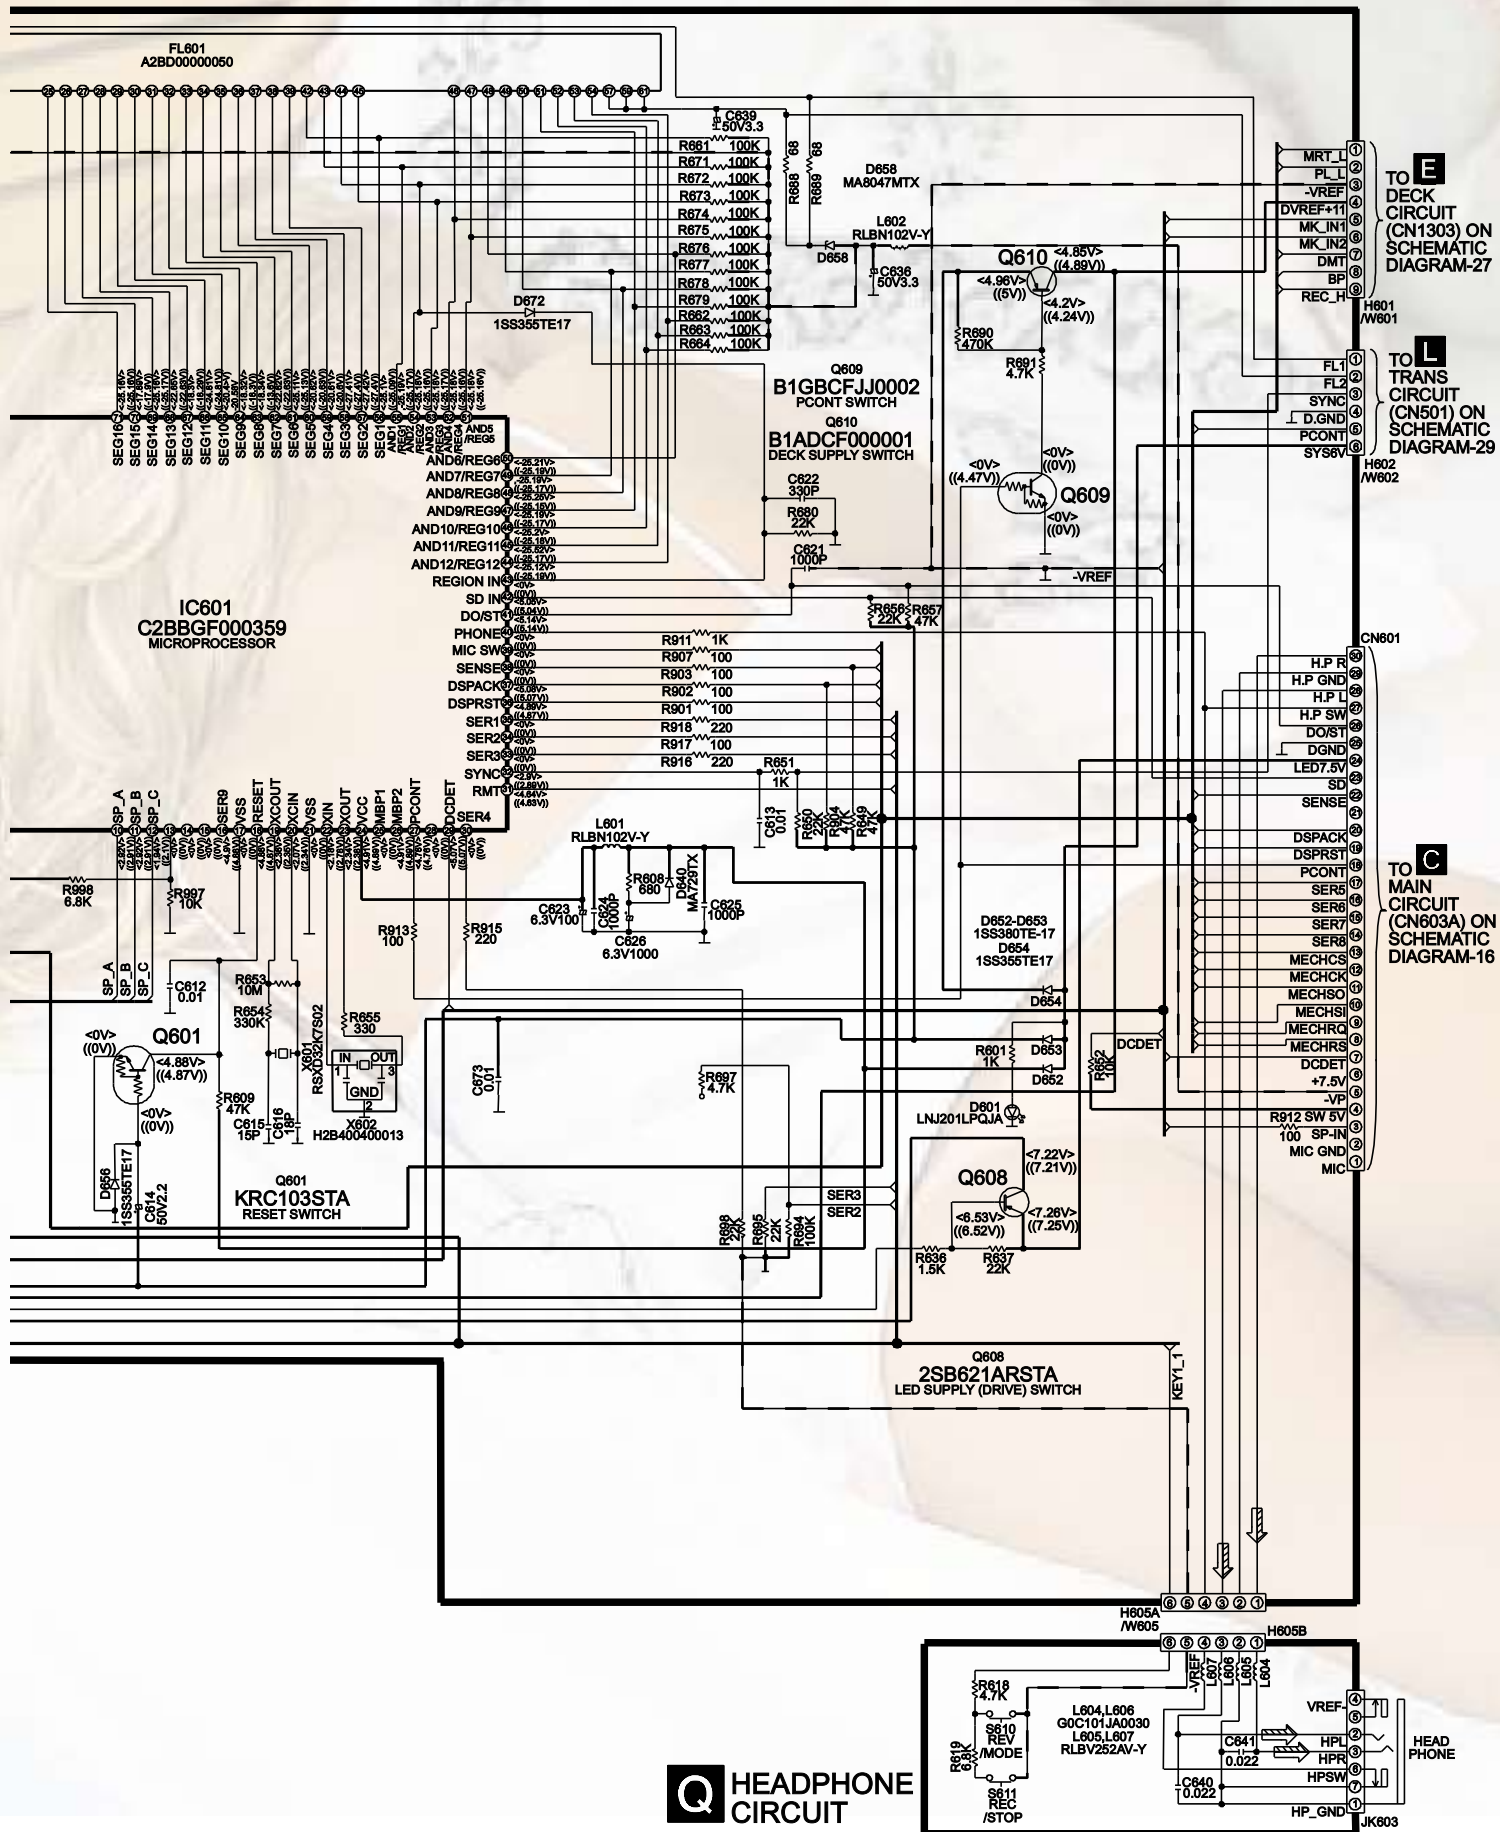


SCHEMATIC DIAGRAM - 26

— : +B SIGNAL LINE — : -B SIGNAL LINE  : RECORD SIGNAL LINE  : PLAYBACK SIGNAL LINE

E DECK CIRCUIT

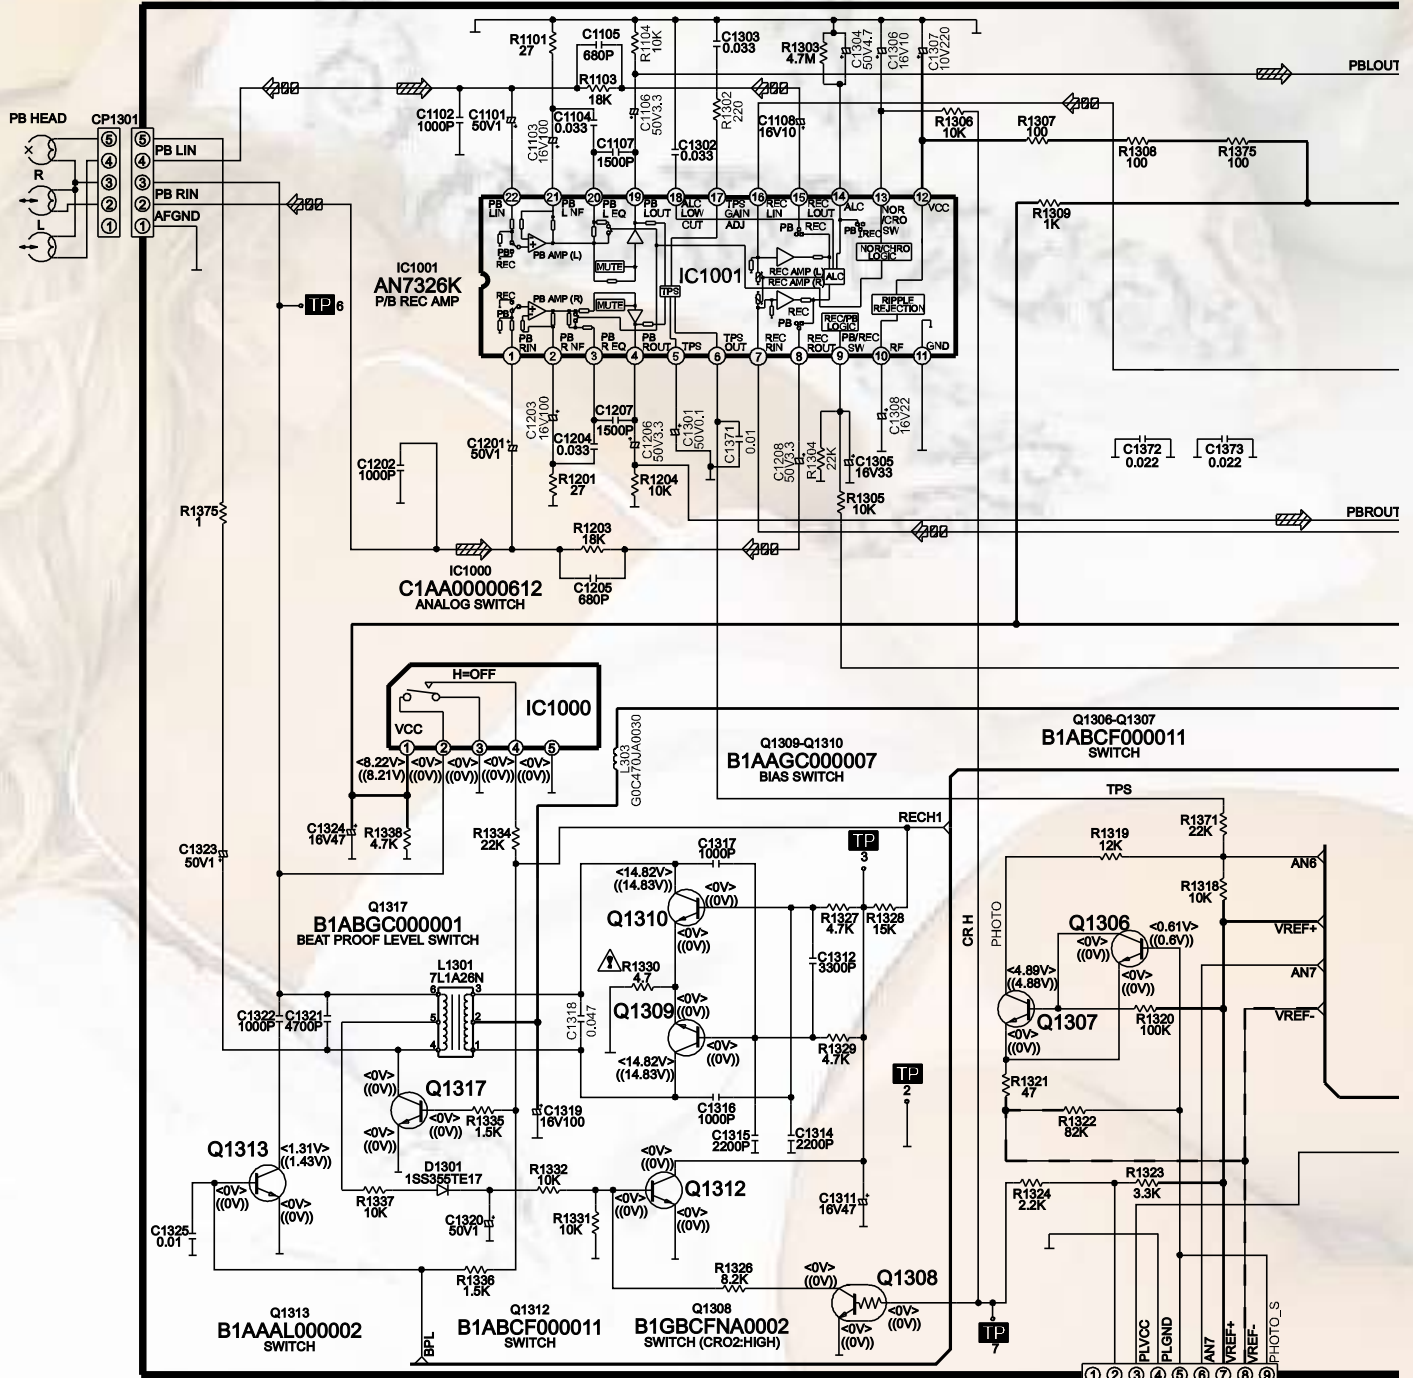


F MECHANISM DECK CIRCUIT

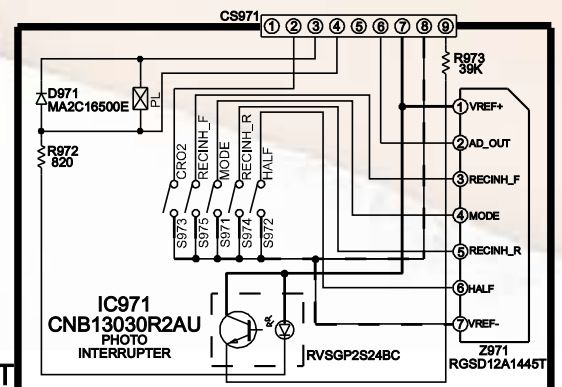

SCHEMATIC DIAGRAM - 27

— : +B SIGNAL LINE — : -B SIGNAL LINE  : RECORD SIGNAL LINE  : PLAYBACK SIGNAL LINE

E DECK CIRCUIT

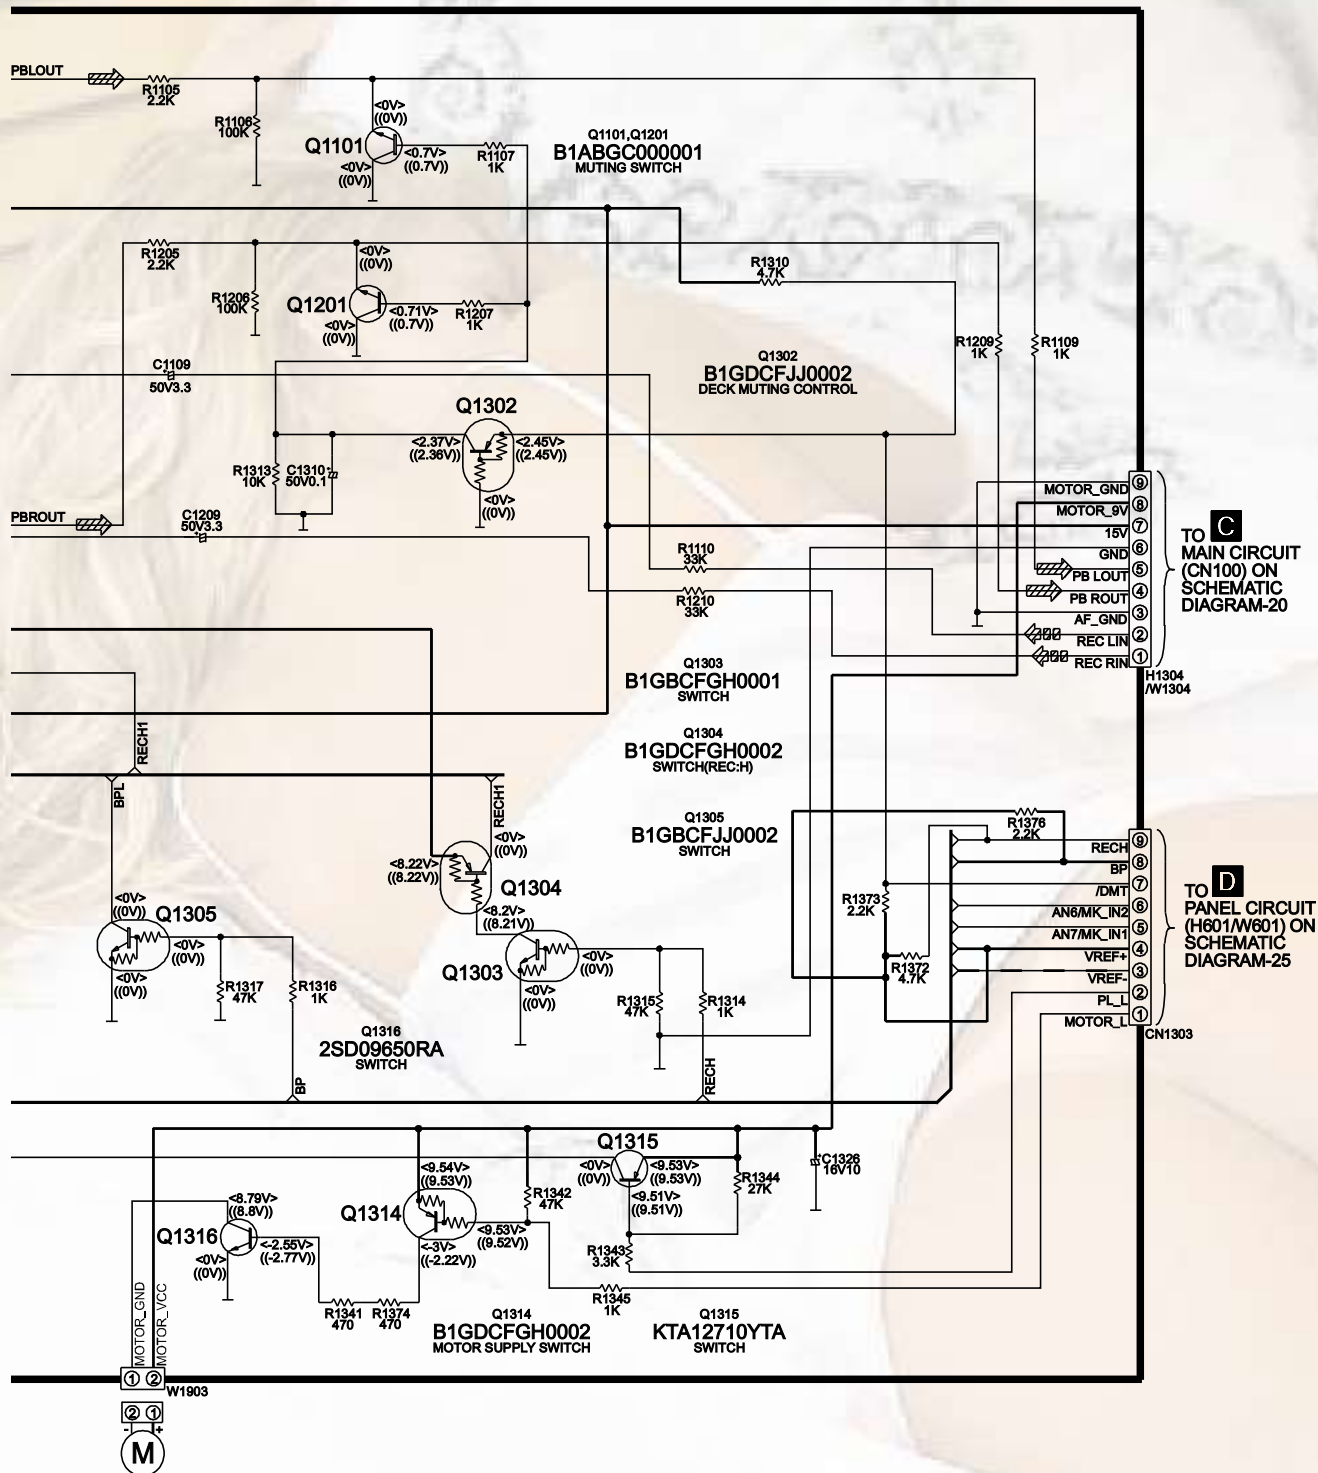

G POWER CIRCUIT

The schematic diagram illustrates the internal circuitry of a car stereo, organized into three main functional blocks:

- IC501 (RSN311W64B-P HIC):** This integrated circuit handles the main signal processing. It includes input sections for FL, FR, SGND, SUB, CCH, SR, SL, HB, DGND, and VP. The output section drives the speakers through a series of resistors (R501-R580) and capacitors (C501-C580). It also includes a power control switch (Q506) and a power control switch (Q505).
- IC503 (STK470-050A HIC):** This integrated circuit is responsible for the power regulation and switching. It includes a power control switch (Q506) and a power control switch (Q505). It also includes a power control switch (Q506) and a power control switch (Q505).
- IC502 (2SB621ARSTA REGULATOR (VP)):** This integrated circuit is a voltage regulator that provides a stable 16V supply to the other components. It includes a power control switch (Q506) and a power control switch (Q505).

The diagram also shows the speaker circuit, which includes front speakers (LCH, RCH), a subwoofer (SUB), and surround speakers (LCH, RCH). The transformer circuit (E500) is used to provide the necessary power to the speakers.

