


# Service Manual

**COMPACT**  
**disc**  
**DIGITAL AUDIO**

**MASH\***  
multi-stage noise shaping

Portable CD Player  
**SL-S112**

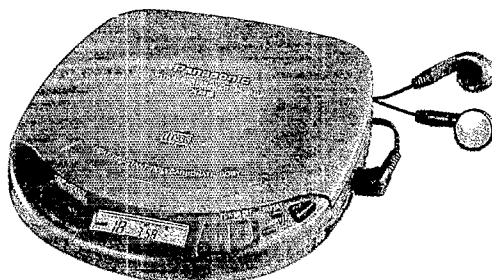

## Colour

(H) ..... Gray Type  
(A) ..... Blue Type  
(S) ..... Silver Type

## Areas

(E) ..... Europe.  
(EG) ..... Germany.

## Traverse Deck: RAE0144Z Mechanism Series

## Specifications

### Audio

**No. of channels:** 2 channels (left and right, stereo)  
**Frequency response:** 20 to 20,000 Hz (+0.5 dB to -1.5 dB)  
**Output voltage:** 0.6 V (50 k $\Omega$ )  
Stereo mini jack, diameter 3.5  
**S/N:** more than 94 dB  
**Wow and flutter:** Below measurable limit  
**DA converter:** 1 bit, MASH \*  
**Headphone output level:** Max. 9 mW+9 mW/16  $\Omega$  (adjustable)  
Stereo mini jack, diameter 3.5

### Pickup

**Light source:** Semiconductor laser  
**Wavelength:** 780 nm

### General

**Operational temperature range:** 0°C - 40°C  
**Rechargeable temperature range:** 5°C - 40°C  
**Power supply:** DC 4.5 V

### Power consumption:

Using AC adaptor; 5.5 W

### Playing time:

(When used in hold mode, at 25°C temperature and on flat and stable surface)

|                                 |   |
|---------------------------------|---|
| 2 Alkaline batteries            | About 10 hours  |
| Optional rechargeable batteries | P-3GAVE/2B: About 5.5 hours<br>SH-CD8D: About 3.0 hours |

The play time may be less depending on the operating conditions.

### Recharging time:

**P-3GAVE/2B;** About 5 hours

**SH-CBD8D;** About 3 hours

**Dimensions (W x H x D):** 128 x 28.0 x 144 mm

**Weight:** 265 g with batteries

220 g without batteries

**Notes:** Specifications are subject to change without notice.  
Weight and dimensions are approximate.

\* MASH is a trademark of NTT.

## ⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.

Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

**Panasonic**®

© 1998 Matsushita Electric Industrial Co., Ltd.  
All rights reserved. Unauthorized copying and distribution is a violation of law.

## Contents

|  | Page   |   | Page    |
|--|--------|---|---------|
| Accessories .....                              | 2      | Checking the Operation Problems                           |         |
| Precaution of Laser Diode .....                | 2      | on the Traverse Deck (Optical Pickup) .....               | 11      |
| Location of Controls .....                     | 3      | Automatic Adjustment Results Display Function             |         |
| Power Supply Preparations .....                | 3      | (Self-check Function) .....                               | 12      |
| HOLD Function .....                            | 4      | Type Illustration of IC's, Transistors and Diodes .....   | 13      |
| Sequential Play .....                          | 4      | Schematic Diagram .....                                   | 13 - 17 |
| Other Play Methods .....                       | 5      | Printed Circuit Board and Wiring Connection Diagram ..... | 18, 19  |
| Using the Unit with Optional Accessories ..... | 6      | Measurement and Adjustments .....                         | 20      |
| Cautions .....                                 | 6      | Block Diagram .....                                       | 21 - 23 |
| Troubleshooting Guide .....                    | 7      | Terminal Function of IC's .....                           | 24 - 27 |
| Handling Precaution for Traverse Deck .....    | 7      | Replacement Parts List .....                              | 28, 29  |
| Operation Checks                               |        | Cabinet Parts Location .....                              | 30      |
| and Component Replacement Procedures .....     | 8 - 10 | Packaging .....   | 31      |

## Accessories

- Stereo earphones  
(RFEV317P-KS) ..... 1pc.

### CAUTION:

THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

## Precaution of Laser Diode

**CAUTION:** This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pick up lens.  
Wave length: 780 nm  
Maximum output radiation power from pick up: 100  $\mu$ W/VDE


Laser radiation from the pick up unit is safety level, but be sure the followings:

1. Do not disassemble the pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pick up unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

**ACHTUNG:** Dieses produkt enthält eine laserdioden. Im eingeschalteten zustand wird unsichtbare laserstrahlung von der lasereinheit adgestrahlt.  
Wellenlänge: 780 nm  
Maximale strahlungsleistung der lasereinheit: 100  $\mu$ W/VDE

Die strahlung an der lasereinheit ist ungefährlich, wenn folgende punkte beachtet werden:

1. Die lasereinheit nicht zerlegen, da die strahlung an der freigelegten laserdioden gefährlich ist.
2. Den werksseitig justierten einstellregler der lasereinheit nicht verstellen.
3. Nicht mit optischen instrumenten in die fokussierlinse blicken.
4. Nicht über längere zeit in die fokussierlinse blicken.

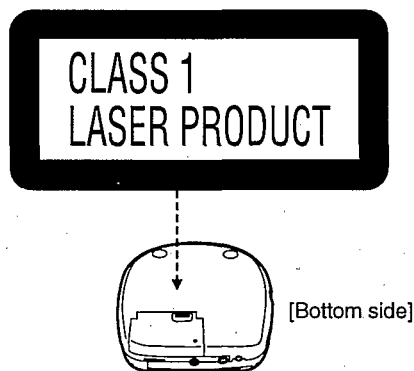

|          |   |
|----------|---|
| DANGER   | INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. AVOID DIRECT EXPOSURE TO BEAM.                              |
| ADVARSEL | USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSTRÆLSELSE FOR STRÅLING.          |
| VARO!    | AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTÖNÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.                  |
| VARNING  | OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STÅRÅLEN.                          |
| ADVARSEL | USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.                          |
| VORSICHT | UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN. |

(Inside of product)

(Indersiden at apparatet)


(Tuotteen sisällä)

(Apparatens insida)

(Produktets innsida)

(Im Inneren des Gerätes)

## Location of Controls

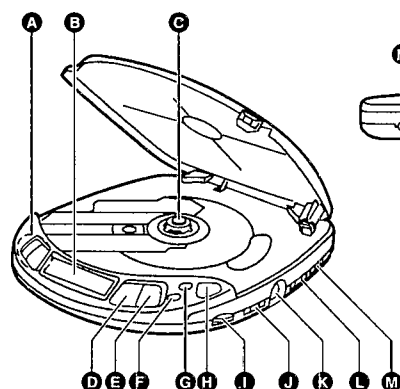


N Back panel of the unit

- A Skip/search buttons (◀◀, ▶▶ •SKIP — SEARCH)
- B Display
- C CD release button (PUSH)
- D Play/pause button (▶ II)
- E Stop/operation off button (■, POWER OFF)
- F Memory/recall button (MEMORY/RECALL)
- G Repeat button (REPEAT)

- H Open button (OPEN)
- I Headphones volume control (VOLUME)
- J XBS selector (XBS)
- K Headphones jack (🔌)
- L Play mode selector (RESUME, NORMAL, RANDOM)
- M Hold switch (HOLD)
- N Out jack (OUT)
- O DC in jack (🔌 DC IN 4.5 V)
- P Hole for car insulator mounting screw

## Power Supply Preparations

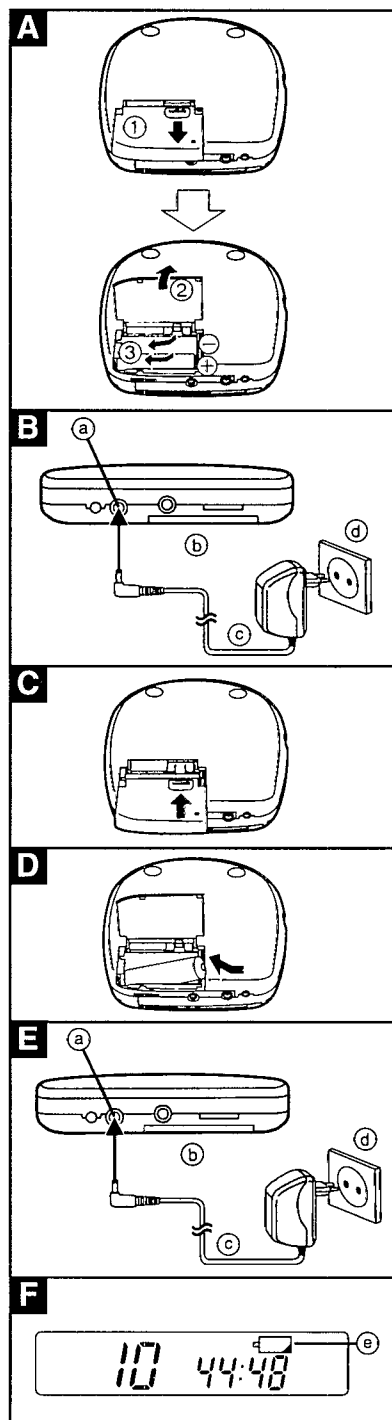

### Using rechargeable batteries (not included)

Obtain the optional rechargeable batteries. Make sure to recharge the batteries before using them. The unit cannot be used to charge rechargeable batteries other than those specifically designed for it.

- Optional batteries (P-3GAVE/2B, SH-CDB8D)

#### Recharging procedure

1 Insert the special rechargeable batteries into the unit. **A**

2 Connect the AC adaptor. **B**

- a DC IN jack (🔌 DC IN 4.5 V)
- b Back panel of the unit
- c AC adaptor
- d AC power outlet

AC adaptor is not included in some countries.

Be sure to obtain the AC adaptor, available as an optional accessories.

- For United Kingdom (RFEA403B-S)
- For others (RFEA401E-3S)

3 When recharging is complete, unplug the AC adaptor from the power outlet and the DC IN jack.

#### Notes

- Rechargeable batteries have a service life of approximately 300 charge-discharge cycles. If the operating time on one full charge becomes noticeably shorter than it used to be, the battery has reached the end of its service life and should be replaced.
- The AC adaptor and rechargeable batteries may become warm while recharging is in progress. This is not a malfunction.
- You can operate the unit with AC adaptor while recharging the batteries, but it will lengthen the recharging time.

#### If the battery lid compartment comes loose **C**

Slide the lid back into place horizontally.

#### Removing batteries **D**

Push up on the battery in the direction indicated by the arrow. Then lift it out.

### Using the AC adaptor

#### Connect the AC adaptor supplied. **B**

- a DC IN jack (🔌 DC IN 4.5 V)
- b Back panel of the unit
- c AC adaptor
- d AC power outlet

AC adaptor is not included in some countries.

Be sure to obtain the AC adaptor, available as an optional accessories.

- For United Kingdom (RFEA403B-S)
- For others (RFEA401E-3S)

#### Note

The unit is in the standby condition when the AC adaptor is connected. The primary circuit is always "live" as long as the AC adaptor is connected to an electrical outlet.

### Using dry-cell batteries (not included)

After disconnecting the AC adaptor, insert two LR6 (UM-3) alkaline batteries.

The procedure for inserting and removing dry-cell batteries is identical to that for rechargeable batteries.

### Battery indicator **E**

- e Battery indicator

This indicator flashes on and off when the batteries are almost out of power. Power is cut off completely a short while later.

**Rechargeable batteries: Recharge batteries.**

**Dry-cell batteries: Replace batteries with new ones.**

#### Notes


- The length of time the unit will continue to operate between when the battery indicator starts flashing and when the power is cut off differs depending on the type of batteries used.
- The battery indicator may not flash if rechargeable batteries, other than those designated by Panasonic, are used.

### Using the car adaptor (not included)

Be sure to obtain the car adaptor (SH-CDC9), available as an optional accessory. The car adaptor can be used to recharge the unit's batteries while in the car.

If the unit malfunctions or freezes during use, then disconnect the power sources (the AC adaptor and batteries). Re-connect the power source and continue operation.

## ■ Hold Function

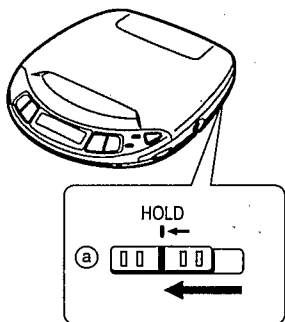

This function causes the unit to ignore short, accidental button presses. (The disc lid can still be opened and closed.)

### The HOLD function prevents the following:

- Powering on the unit accidentally (which can cause the batteries to go dead).
- Play being cut off unexpectedly in the middle of a selection.

### To use the HOLD function

Set HOLD to the HOLD position.

- Ⓐ HOLD mode


### "hold" Indication

When the unit is in hold status, pressing any button (other than the OPEN button) causes the indication "hold" to appear on the display.

### When the unit is powered off

The "hold" indication appears only when the ►|| button is pressed.

## ■ Sequential Play

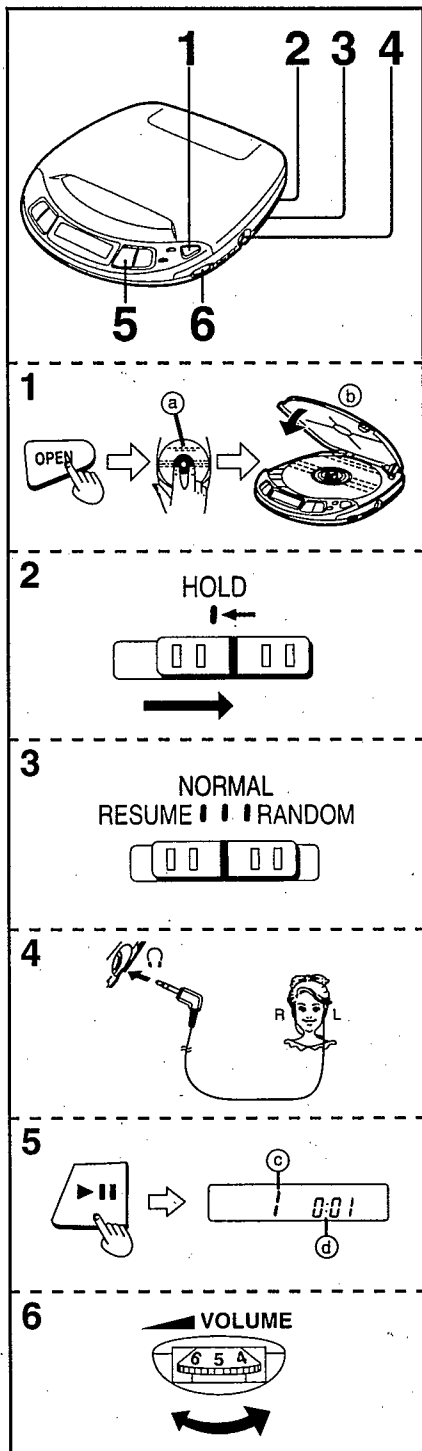

### Using rechargeable batteries (not included)

Obtain the optional rechargeable batteries.

Make sure to recharge the batteries before using them. The unit cannot be used to charge rechargeable batteries other than those specifically designed for it.

- Optional batteries (P-3GAVE/2B, SH-CDB8D)

### Recharging procedure

#### 1 Insert the special rechargeable batteries into the unit. Ⓐ

#### 2 Connect the AC adaptor. Ⓑ

- Ⓐ DC IN jack (⚡ DC IN 4.5 V)
- Ⓑ Back panel of the unit
- Ⓒ AC adaptor
- Ⓓ AC power outlet

AC adaptor is not included in some countries.

Be sure to obtain the AC adaptor, available as an optional accessories.

- For United Kingdom (RFEA403B-S)
- For others (RFEA401E-3S)

#### 3 When recharging is complete, unplug the AC adaptor from the power outlet and the DC IN jack.

### Notes

- Rechargeable batteries have a service life of approximately 300 charge-discharge cycles. If the operating time on one full charge becomes noticeably shorter than it used to be, the battery has reached the end of its service life and should be replaced.
- The AC adaptor and rechargeable batteries may become warm while recharging is in progress. This is not a malfunction.
- You can operate the unit with AC adaptor while recharging the batteries, but it will lengthen the recharging time.

### If the battery lid compartment comes loose Ⓒ

Slide the lid back into place horizontally.

### Removing batteries Ⓓ

Push up on the battery in the direction indicated by the arrow. Then lift it out.

### To pause play Ⓐ

Press during play.

Press again to resume play.

### To stop play [Stop mode] Ⓑ

Press during play.

- Ⓐ Total number of tracks
- Ⓑ Total playing time

### To turn off the unit [Off mode] Ⓒ

Press during stop mode.

### Skip forward/backward (skip function) Ⓓ

Press during play.

- Ⓒ Backward direction
- Ⓓ Forward direction

### Rapid forward/backward (search function) Ⓓ

Press and hold during play.

- Ⓒ Backward direction
- Ⓓ Forward direction

- During program play, these buttons are used to skip forward or back through the programmed sequence of tracks.

- During random play, the skip buttons cannot be used to skip back to tracks that were played previously in the random sequence.


- During program play, random play or 1 track repeat play, search operation is limited to the current track only.

### Removing discs Ⓔ





After the disc has stopped rotating, press the PUSH button to release the disc. (To protect the disc, never open the cover while it is playing.)

### Note

Never insert foreign objects into the unit body.

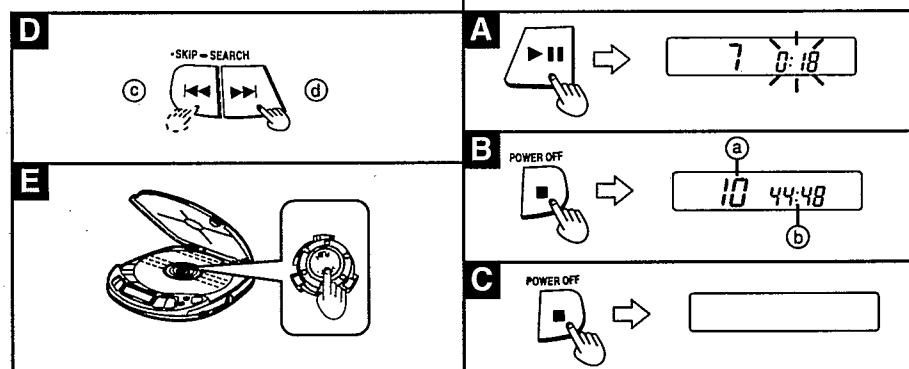

## Other Play Methods

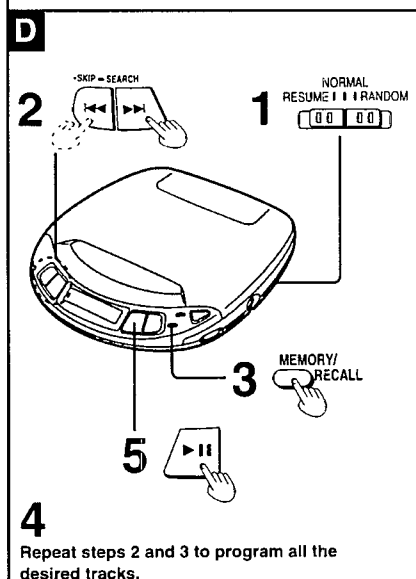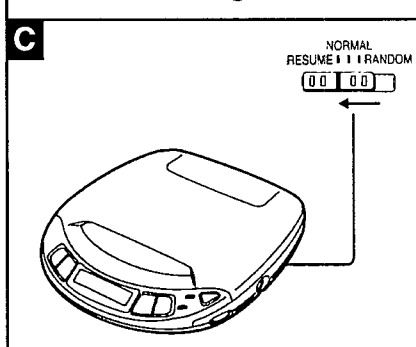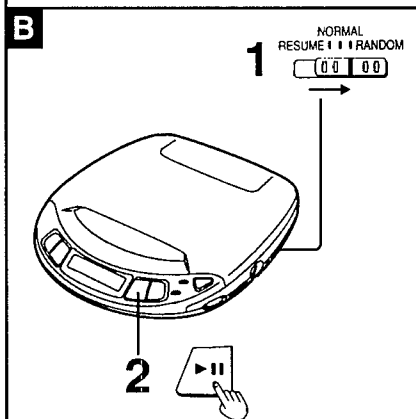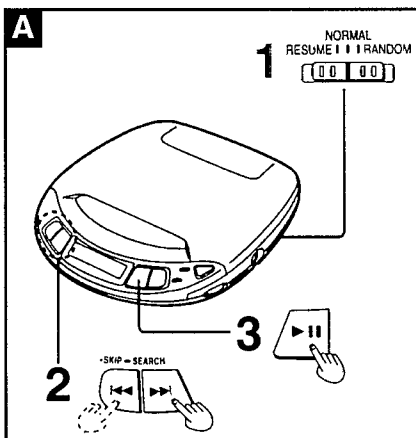

### Skip play

The disc plays from the specific track through to the end, then play stops automatically.

**Preparation:** Put unit in stop mode.

**Following steps 1-3.**

In step 2, select the desired track.

### Random play

**Following steps 1-2.**

**To cancel the random mode**

Set play mode selector to NORMAL.

**For your reference:**

- It is also possible to press the button while the unit is in stop status to change the first track to be played. (All tracks are played eventually, regardless of which is played first.)
- Program play is not possible in the random mode.

### Resume play

This function allows you to listen from the beginning to the track where play stopped because the unit was powered off (or switched to stop status). It is useful when listening to CDs in the car, etc.

**To cancel the resume mode**

Set play mode selector to NORMAL.

**For your reference:**

- If the RESUME, NORMAL, RANDOM (play mode) slider is put in the RESUME position, the all-repeat function will be activated automatically as soon as the unit is powered on.
- If power is cut off near the end of a track (power off status), playback may resume from the beginning of the next track in some cases.
- If the unit is powered off while a disc was playing and then a new disc is inserted, play will begin from the middle of the new disc because the unit remembers the position where play stopped on the previous disc.

### Program play

Up to 24 tracks can be entered in the programmed sequence.

**Preparation:** Put unit in stop mode.

**Following steps 1-5.**

In step 2, select the desired track.

In step 3, register in sequence.

(The indication "M" and the programmed sequence appear on the display panel.)

■ **To program the same track in the sequence more than once**

After step 3, press MEMORY/RECALL the desired number of times.

■ **If "f" is displayed**

No more tracks can be added to the sequence.

■ **To confirm the contents of the program**

Press MEMORY/RECALL while the disc is playing. (The number of the programmed tracks appear on the display panel in sequence.)

■ **To delete the entire programmed sequence**

Press , POWER OFF.

### Repeat function

Press REPEAT while disc is playing or when unit is in stop status.

The setting is switched in the sequence indicated below each time REPEAT is pressed.

**1-track repeat (1 )**

One track is repeated.

↓ **All-track repeat (ALL )**

All the tracks on the disc are repeated.

↓ **Cancel**

**For your reference:**

If REPEAT is pressed during program play, only the tracks in the programmed sequence are repeated. (The indication "ALL" is not displayed.)

### Changing the sound quality

**XBS ON:**



Select this setting to boost the low-range response.

**OFF:**


Select this setting to turn off the XBS function.

**Note**

This function is not available when using the OUT jack.

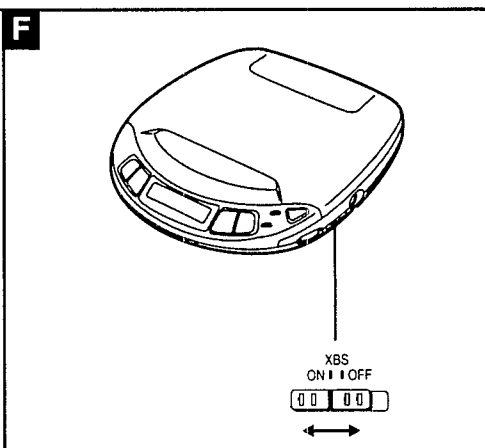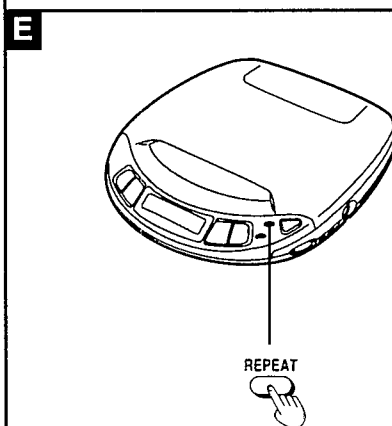

## ■ Using the Unit with Optional Accessories

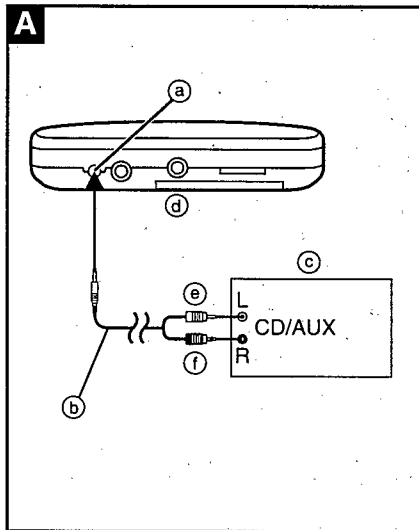

### Using the unit with an audio system

**A**

Using the stereo connection cable (not included), you can hear CDs on your audio system.

- Connect the cable to the amplifier after turning off its power.
- Do not connect the cable to the PHONO jacks on the amplifier.
- Obtain the optional connecting cable if the amplifier comes with mini-phone jacks.
- Adjust the volume level on the amplifier.

- (a) OUT jack
- (b) Stereo connection cable (not included)
- (c) Amplifier
- (d) Back panel of the unit
- (e) (White)
- (f) (Red)

### Using the unit with a car audio system stereo

#### Items to be purchased

For connection to the car audio system:

- Car stereo cassette adaptor (SH-CDM10A)

Connect the car stereo cassette adaptor to the unit's headphones jack. (When doing this, keep the unit's VOLUME control at a setting between 4 and 6.)

For securing the unit and connecting the power supply:

- Car adaptor (SH-CDC9)
- Car mounting kit (SH-CDF7)

#### Note

It may not be possible to use the unit with some types of car stereos owing to restrictions imposed by the construction of the car stereo cassette adaptor.

For further details, refer to the instructions of the part concerned.

## ■ Caution

### Rechargeable batteries

- Only the P-3GAVE/2B, SH-CDB8D batteries can be recharged.
- If the power delivered by the batteries lasts for a very short time after recharging, it means that the batteries' service life is over. Do not use them any more.
- Recharging already charged batteries will shorten their service life.
- When recharging batteries for the first time or when they have not been used for a long period of time, the play time may be shorter than usual. In a case like this, repeatedly recharge and discharge the batteries. This will restore them to their regular state.
- Do not allow any metal objects to touch the terminals of rechargeable batteries since this may cause short-circuiting which is dangerous.

### Dry cell batteries/rechargeable batteries

To prevent damage to the batteries and electrolyte leakage, heed the following points.

- Align the ⊕ and ⊖ polarities properly when inserting the batteries.
- Do not mix different types or makes of batteries or old and new batteries.
- Remove the batteries if you do not plan to use the unit for a long period of time.
- Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.
- Do not peel off the plastic covering on the rechargeable batteries. Short-circuiting may occur which is dangerous.

### Carrying dry cell batteries/rechargeable batteries around

When putting dry cell or rechargeable batteries in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.

Be absolutely sure to carry the rechargeable batteries in the battery carrying case.

### Precautions for Listening with the Headphones or Earphones

- Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headphones or earphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

### AC adaptor

- Handle the AC adaptor carefully. Improper handling is dangerous.
  - Do not touch it with wet hands.
  - Do not place heavy objects on top of it.
  - Do not forcibly bend it.
- Be sure to connect only the AC adaptor provided with the unit.
- Disconnect the AC adaptor from the power outlet if the unit is not going to be used for a long time.

### Unit

#### No altering or remodeling

This can cause malfunctioning.

#### No dropping or strong impacts

This may damage the unit.

#### Locations to be avoided

Avoid using the unit in the following locations since they can cause malfunctioning.

1. Bathrooms and other moisture-prone places.
2. Warehouses and other dusty places
3. Very hot places near heating appliances, etc.

#### Do not leave the unit exposed to direct sunlight for long periods of time

This may deform or discolor the cabinet and may also cause malfunctioning.

### When driving a car

In the interest of traffic safety, do not operate the unit while driving.

### When purchasing rechargeable batteries

As a safety precaution, the portable CD players made by Panasonic have a construction designed to make it impossible to recharge ordinary batteries.


To use rechargeable batteries, be absolutely sure to purchase the rechargeable Ni-Cd batteries designed especially for this unit.

#### Special rechargeable Ni-Cd batteries:


P-3GAVE/2B, SH-CDB8D (set of 2)

For details, check with your dealer.

Special rechargeable batteries



Ordinary dry cell batteries/rechargeable batteries



#### Notice about the rechargeable battery

The battery is designated recyclable.

Please follow your local recycling regulations.

## ■ Troubleshooting Guide

| Problem   | Check this  |
|---|---|
| Cannot close cover.   | Is the disc properly secured in place?  |
| Cannot play discs.  | <ul style="list-style-type: none"> <li>Is the unit in hold status?</li> <li>Is the disc properly secured in place?</li> <li>Is there moisture condensation on the lens?<br/>(Wait for about an hour and then try again.)</li> </ul> |
| Cannot remove disc.   | Did you press the PUSH button to release the disc?  |
| Tracks on disc do not play in order, starting with the first track. | Is the RESUME, NORMAL, RANDOM (play mode) slider in the NORMAL position?  |
| Cannot hear music —too noisy.                                       | <ul style="list-style-type: none"> <li>Has earphones plug been inserted as far as it will go?</li> <li>Is earphones plug dirty?</li> </ul>  |
| TV picture is distorted.<br>Radio reception is noisy.               | Are you using the unit body too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)   |

## ■ Handling Precautions for Traverse Deck

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body.

So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

### • Handling of traverse deck (optical pickup)

1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
2. To protect the laser diode against electrostatic breakdown, short the flexible board (FFC board) with a clip or similar object.
3. Take care not to apply excessive stress to the flexible board (FFC board).
4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

### • Grounding for electrostatic breakdown prevention


1. Human body grounding  
Use the anti-static wrist strap to discharge the static electricity from your body.
2. Work table grounding  
Put a conductive material (sheet) or steel sheet on the area where the traverse deck (optical pickup) is placed, and ground the sheet.

### Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

### Caution when Replacing the Traverse Deck:

The traverse deck has a short point shorted with solder to protect the laser diode against electrostatic breakdown. Be sure to remove the solder from the short point before making connections.

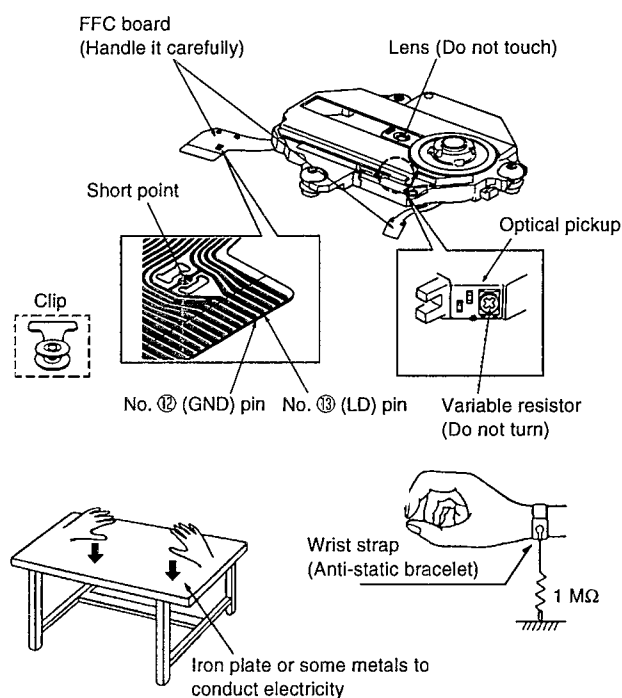


## ■ Operation Checks and Component Replacement Procedures


- NOTE** 1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
2. For reassembly after operation checks or replacement, reverse the respective procedures. Special reassembly procedures are described only when required.
3. [ ] indicates parts No.

### 1. Checking for the P.C.B.

〈Checking for the P.C.B. (A side)〉


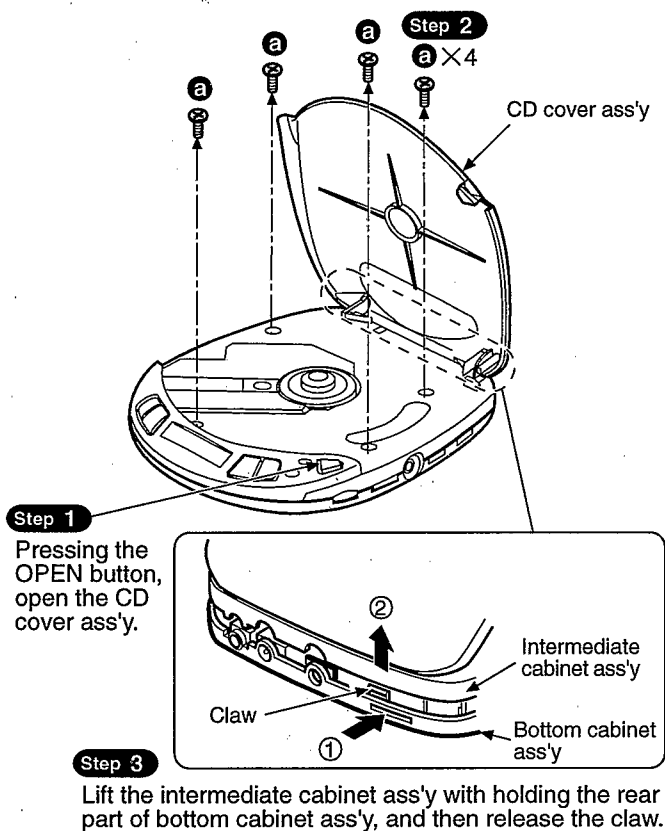


- Step 4**  
Release the 2 claws, and then remove the intermediate cabinet ass'y.

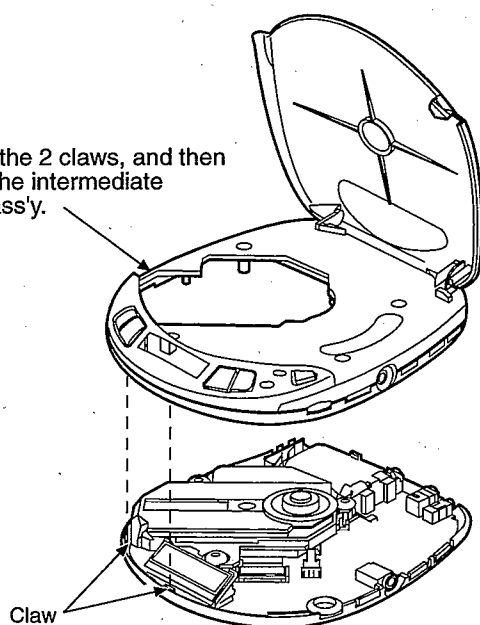


### NOTE

- After checking, unsolder the short land to open circuit.
- The tip of screw must not protrude above the floating rubber.
- To keep insulation, place the insulator sheet (paper etc.) between the P.C.B. and the head of screws.

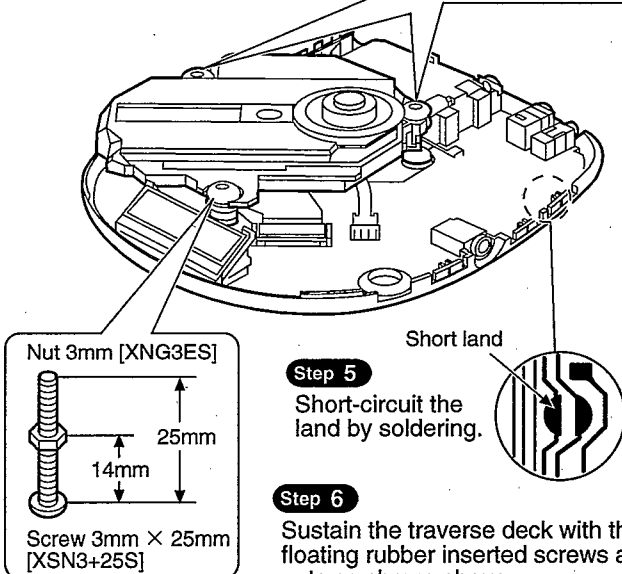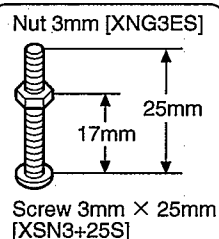

- Check the P.C.B. (A side) as shown below.


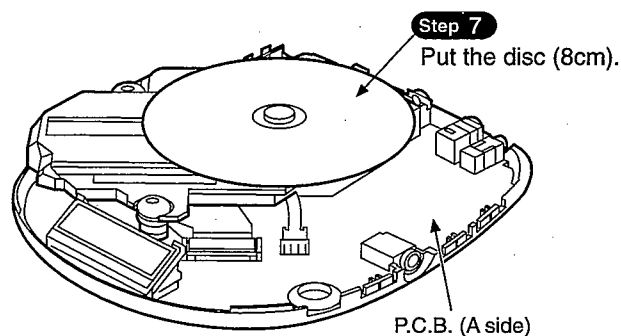


### NOTE


After checking, unsolder the short land to open circuit.




# 〈Checking for the P.C.B. (B side)〉

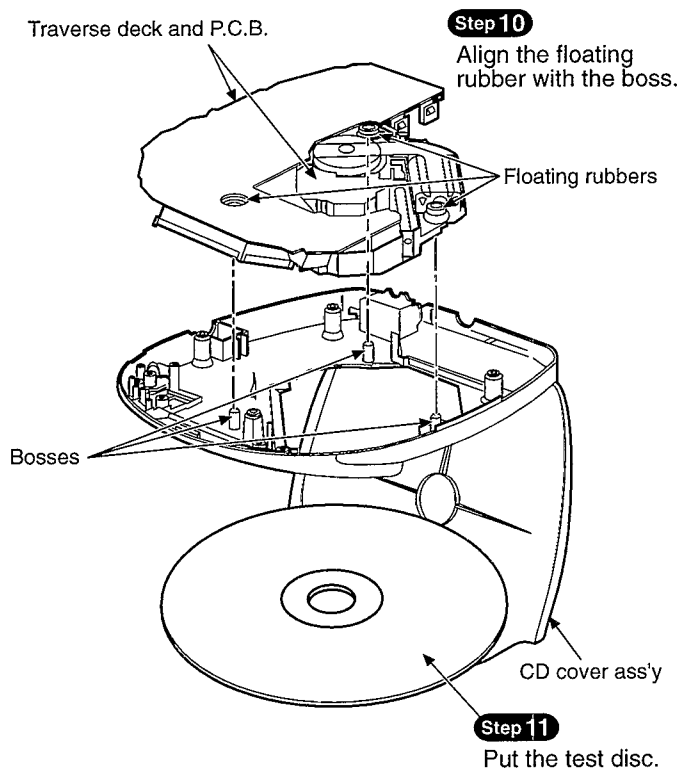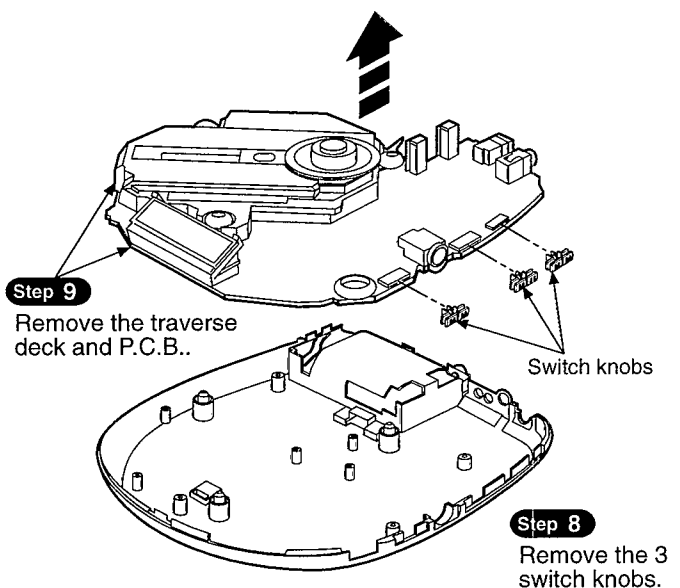

• Check the P.C.B. (B side) as shown below.

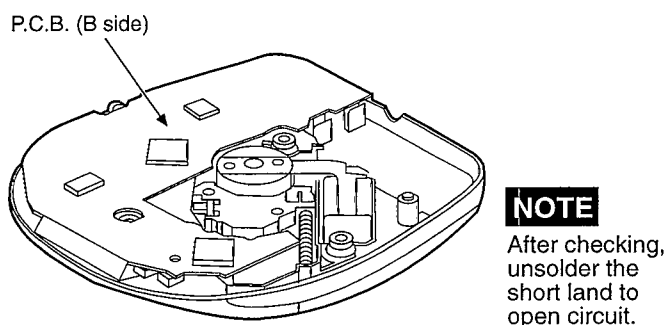


## Notice for installation of switch knobs

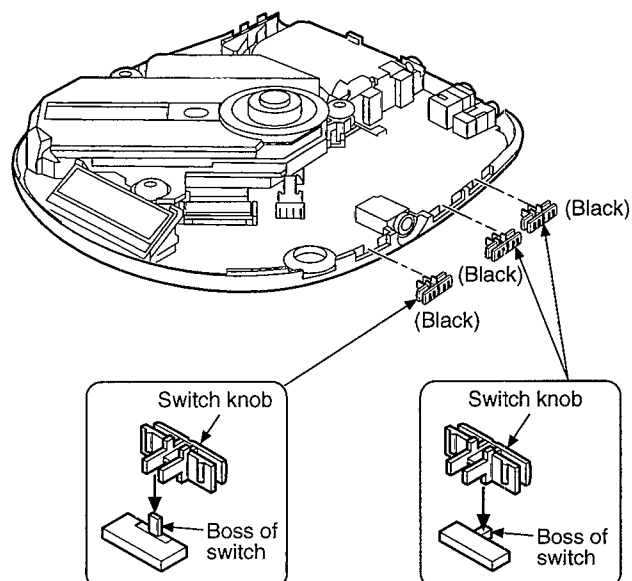

## 2. Replacement for the traverse deck

• Follow the **Step 1** ~ **Step 4** in item 1 on page 9.

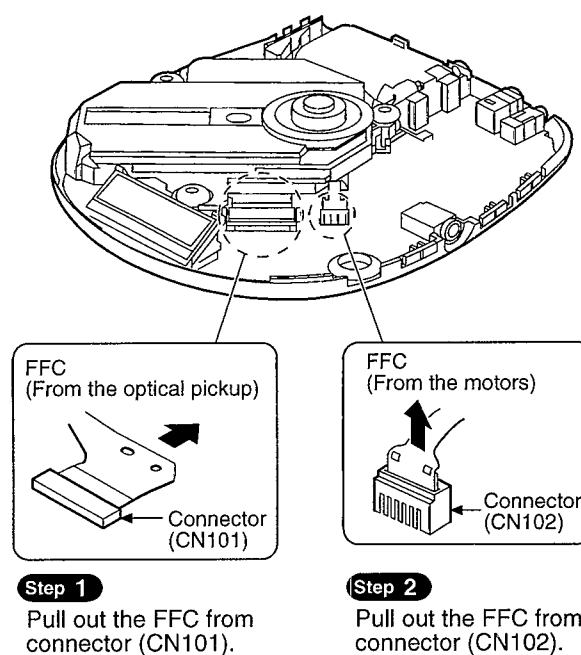


## NOTE

Solder the point between pin ⑫ (LD GND) and pin ⑬ (LD) of FFC board.  
(Refer to "Handling Precautions for Traverse Deck" on page 7.)


### 3. Replacement for the CD cover ass'y

Follow the **Step 1** ~ **Step 4** in item 1 on page 8.

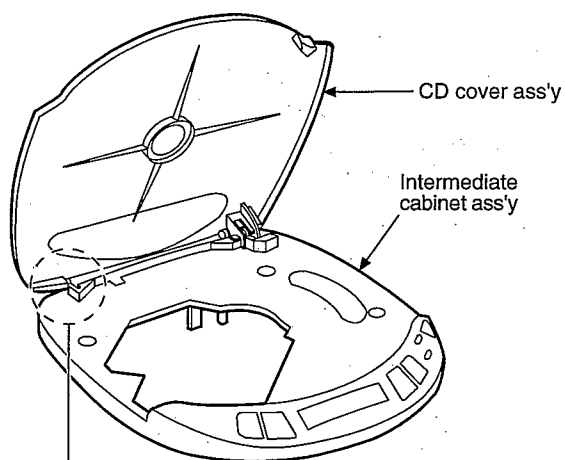


#### Step 1

Push the rid in the direction of arrow with thin tip of minus screwdriver, and then remove the CD cover ass'y.

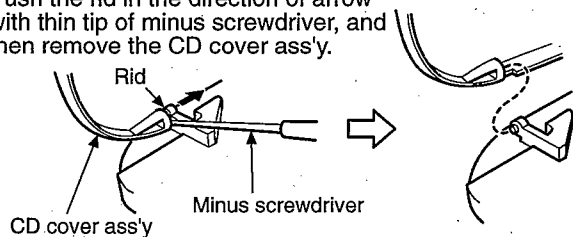


CD cover ass'y

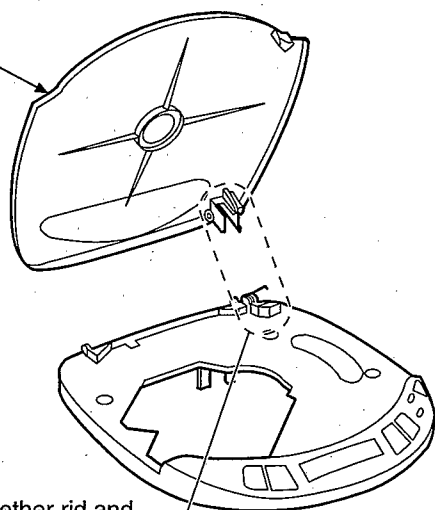


#### Step 2

Then release the other rid and remove the CD cover ass'y.

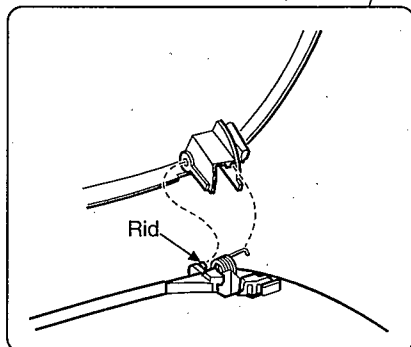

## ■ Checking the Operation Problems on the Traverse Deck (Optical Pickup)

Make sure to follow the procedures below to check the operation problems of the traverse deck (optical pickup) before replacing it. Replace the traverse deck only after the problem is identified.

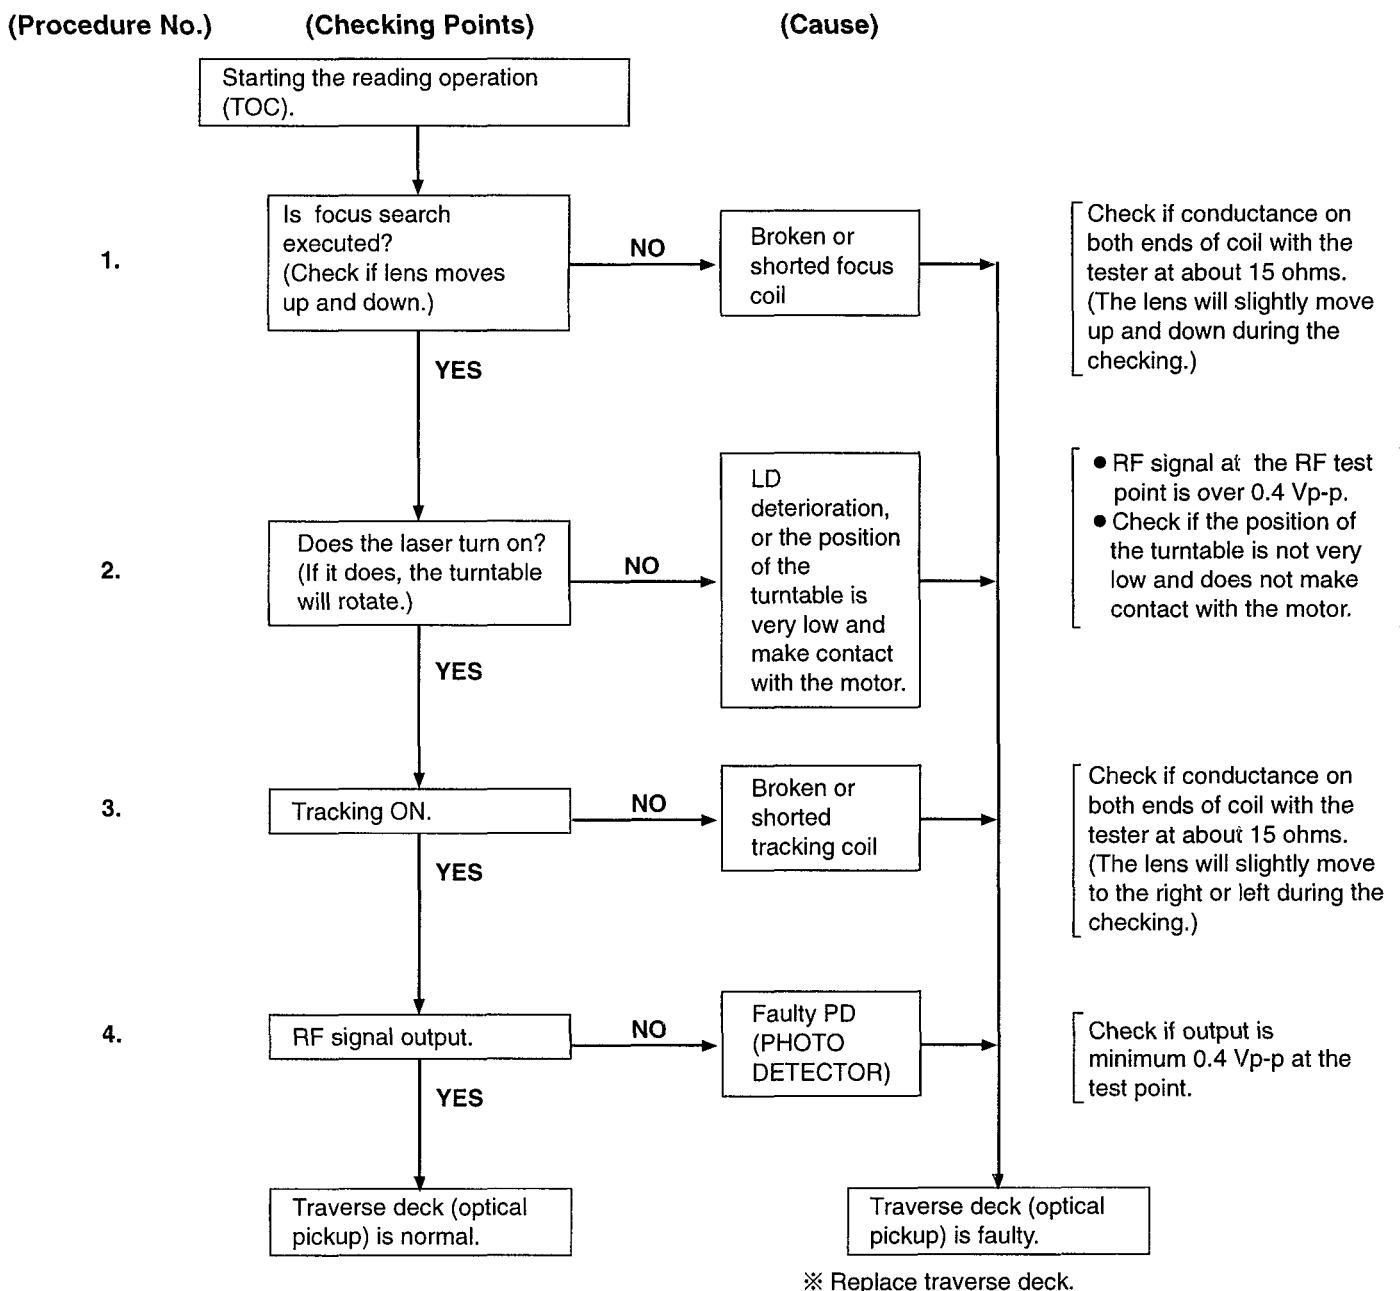

- Check electrical circuit.
- Check for flaws on disc or if it is wrapped or not centered.

### • Check the operations described below on the traverse deck after replacing it.

#### \* Checking Skip Search

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (in both the forward and reverse directions).

#### \* Checking Manual Search

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and reverse directions).

#### \* Checking Playability

1. Play the 0.7 mm black dot and the 0.7 mm wedge on the playability test disc (SZZP1054C) and verify that no sound skip or noise occurs.
2. Play the middle tracks of the uneven test disc (SZZP1056C) and verify that no sound skip or noise occurs.

## Automatic Adjustment Results Display Function (Self-check Function)


On the unit (SL-S112), each automatic adjustment result are displayed on the LCD. This function is convenient to check or identify which automatic adjustment circuit is incorrect. The followings are the contents of the automatic adjustment result displays (self-check function).

### How to display automatic adjustment results

1. Load the test disc (SZZP1054C).
2. Press the ◀◀ (SKIP/SEARCH) and ▶▶ (SKIP/SEARCH) Buttons simultaneously and hold them, and additionally press the ▶/II (PLAY/PAUSE) Button.
3. Press the ■ (STOP/POWER OFF) Button once.
4. An automatic adjustment result is displayed on the LCD.

### Display of automatic adjustment results (self-check function)

LCD Display

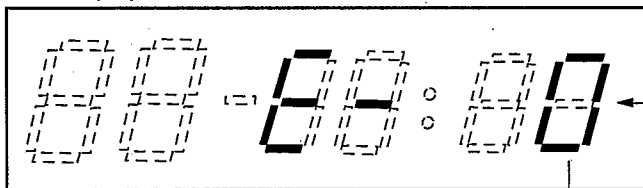

4 bits (TGC, FGC, TBC, FBC) are displayed in hexadecimal system from 0 ~ F.

MSB
LSB

|     |     |     |     |
|-----|-----|-----|-----|
| TGC | FGC | TBC | FBC |
|-----|-----|-----|-----|

(Each bit ... TGC,FGC,TBC,FBC)

0 ... OK  
 1 ... NG

<Example>

|    |                           |              |   |   |
|----|---------------------------|--------------|---|---|
| 1) | 0                         | 0            | 0 | 0 |
|    | (All adjustments are OK.) | ..... Normal |   |   |

|    |   |      |      |      |
|----|---|------|------|------|
| 2) | 0   | 0    | 0    | 1    |
|    | (OK)  | (OK) | (OK) | (NG) |
|    | (Focus balance adjustment is NG (incorrect).) |      |      |      |

|    |                                |      |      |      |
|----|--------------------------------|------|------|------|
| 3) | 0                              | 1    | 0    | 0    |
|    | (OK)                           | (NG) | (OK) | (OK) |
|    | (Focus gain adjustment is NG.) |      |      |      |

|    |                          |   |   |   |
|----|--------------------------|---|---|---|
| 4) | 1                        | 1 | 1 | 1 |
|    | (All adjustments is NG.) |   |   |   |

|    |                                   |      |      |      |
|----|-----------------------------------|------|------|------|
| 5) | 1                                 | 0    | 0    | 0    |
|    | (NG)                              | (OK) | (OK) | (OK) |
|    | (Tracking gain adjustment is NG.) |      |      |      |

⇒ "E—0" is displayed.

⇒ "E—1" is displayed.

⇒ "E—4" is displayed.

⇒ "E—F" is displayed.

⇒ "E—8" is displayed.

**Note:** If any other disc than the test is used, an "E—8" may be

**Note:** If any other disc than the test disc (SZZP1054C) is used, an "E—8" may be displayed.

#### <Example> Follow the below steps when "E—1" is displayed.

(Cause: Focus balance (FBC) is set beyond the limit.)

##### • Check if

- (1) the waveform or voltage of the focus servo circuit is correct, and
- (2) the optical pickup returns to the normal state by exchanging the traverse deck.

#### Follow the below steps when "E—4" is displayed.

(Cause: Focus gain (FGC) is set beyond the limit.)

##### • Check if

- (1) the waveform or voltage of the focus servo circuit is correct,
- (2) the focus coil of the optical pickup is correct (around 15 ohms), and
- (3) the optical pickup returns to the normal state by exchanging the traverse deck.

#### Follow the below steps when "E—F" is displayed.

(Cause: All adjustments (TGC,FGC,TBC,FBC) are set beyond the limit.)

##### • Check if

- (1) the optical pickup returns to the normal state by exchanging the traverse deck, and
- (2) the waveform or voltage of the servo IC's(IC101,501) are correct.










##### **Note:**

It is not always necessary to exchange the traverse deck when an error message is displayed.  
Be sure to check if the circuit is defective or not before exchanging the traverse deck.

##### **Note:**

If any other disc than the test disc (SZZP1054C) is used, an error message may be displayed. This is not a malfunction.

## ■ Type Illustration of IC's, Transistors and Diodes
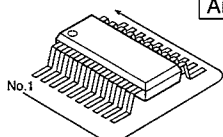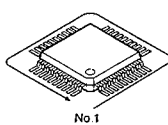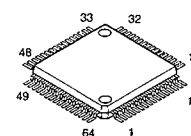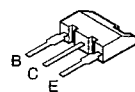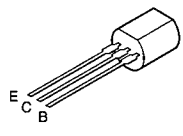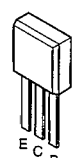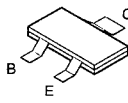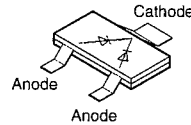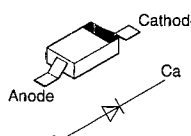
|   |   |   |  |   |   |            |       |              |       |   |  |
|---|---|---|--|---|---|------------|-------|--------------|-------|---|--|
| <div></div> <div><table><tr><td>NJU7082AME1</td><td>8PIN</td></tr><tr><td>AN8839SBE1</td><td>28PIN</td></tr></table></div> | NJU7082AME1   | 8PIN  | AN8839SBE1   | 28PIN   | <div></div> <div><table><tr><td>AN8789FBEB</td><td>44PIN</td></tr><tr><td>MNG746RPK1AL</td><td>80PIN</td></tr></table></div> | AN8789FBEB | 44PIN | MNG746RPK1AL | 80PIN | <div>SC440303CFU</div> <div></div> | <div>2SD2074HWRST</div> <div></div> |
| NJU7082AME1   | 8PIN  |   |  |   |   |            |       |              |       |   |  |
| AN8839SBE1  | 28PIN   |   |  |   |   |            |       |              |       |   |  |
| AN8789FBEB  | 44PIN   |   |  |   |   |            |       |              |       |   |  |
| MNG746RPK1AL  | 80PIN   |   |  |   |   |            |       |              |       |   |  |
| <div>2SD1302STTA</div> <div></div>   | <div>2SD1450STTA</div> <div></div> | <div><div>2SD1328TX<br/>DTA114YUA106<br/>DTC114TUA106<br/>DTC144TUA106<br/>MSB709RST1</div><div></div></div> | <div>M1MA141WKT1</div> <div><div></div><div>Cathode<br/>Anode<br/>Anode</div></div> | <div>MA110TX</div> <div><div></div><div>Cathode<br/>Anode<br/>Ca<br/>A</div></div> |   |            |       |              |       |   |  |

## ■ Schematic Diagram

(This schematic diagram may be modified at any time with the development of new technology.)

### Notes:

- S201: Laser ON/OFF switch in "OFF" position.  
(It turns "ON" with disc holder closed.)
- S202: Rest detector in "OFF" position.  
(It turns "ON" when optical pickup comes to innermost periphery.)
- S301: Memory/recall (MEMORY/RECALL) switch.
- S302: Repeat (REPEAT) switch.
- S303, 304: Skip/search (◀◀ • SKIP/ • SEARCH ▶▶) switches.  
(S303: ◀◀ , S304: ▶▶)
- S305: Stop/power off (■ POWER OFF) switch.
- S306: Play/pause (▶ ||) switch.
- S307: Play mode selector (MODE) in "RANDOM" position.  
(RANDOM↔NORMAL↔RESUME)
- S308: Hold (HOLD) switch in "ON" position.
- S701: XBS Selector (XBS) switch in "OFF" position.
- VR11: Power supply voltage adjustment VR.
- VR701-1, VR701-2: Volume control VR.

- The voltage value and waveforms are the reference voltage of this measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of GND terminal (DC IN Jack). Accordingly, there may arise some errors in the voltage values and waveforms depending upon the internal impedance of the tester or measuring unit.
- The parenthesized is the voltage for test disc (1kHz, L+R, 0 dB) in play mode, and the other, for no disc in stop mode.
- AC adaptor is used for power supply.
- Signal line

⚡ : Positive voltage line.

🔊 : Audio signal line.


- Important safety notice:  
Components identified by ⚠ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.

### Caution!

- IC and LSI are sensitive to static electricity.  
Secondary trouble can be prevented by taking care during repair.
- Cover the parts boxes made of plastics with aluminum foil.
- Ground the soldering iron.
- Put a conductive mat on the work table.
- Do not touch the pins of IC or LSI with fingers directly.











→ : Positive voltage line


→ : Audio signal line

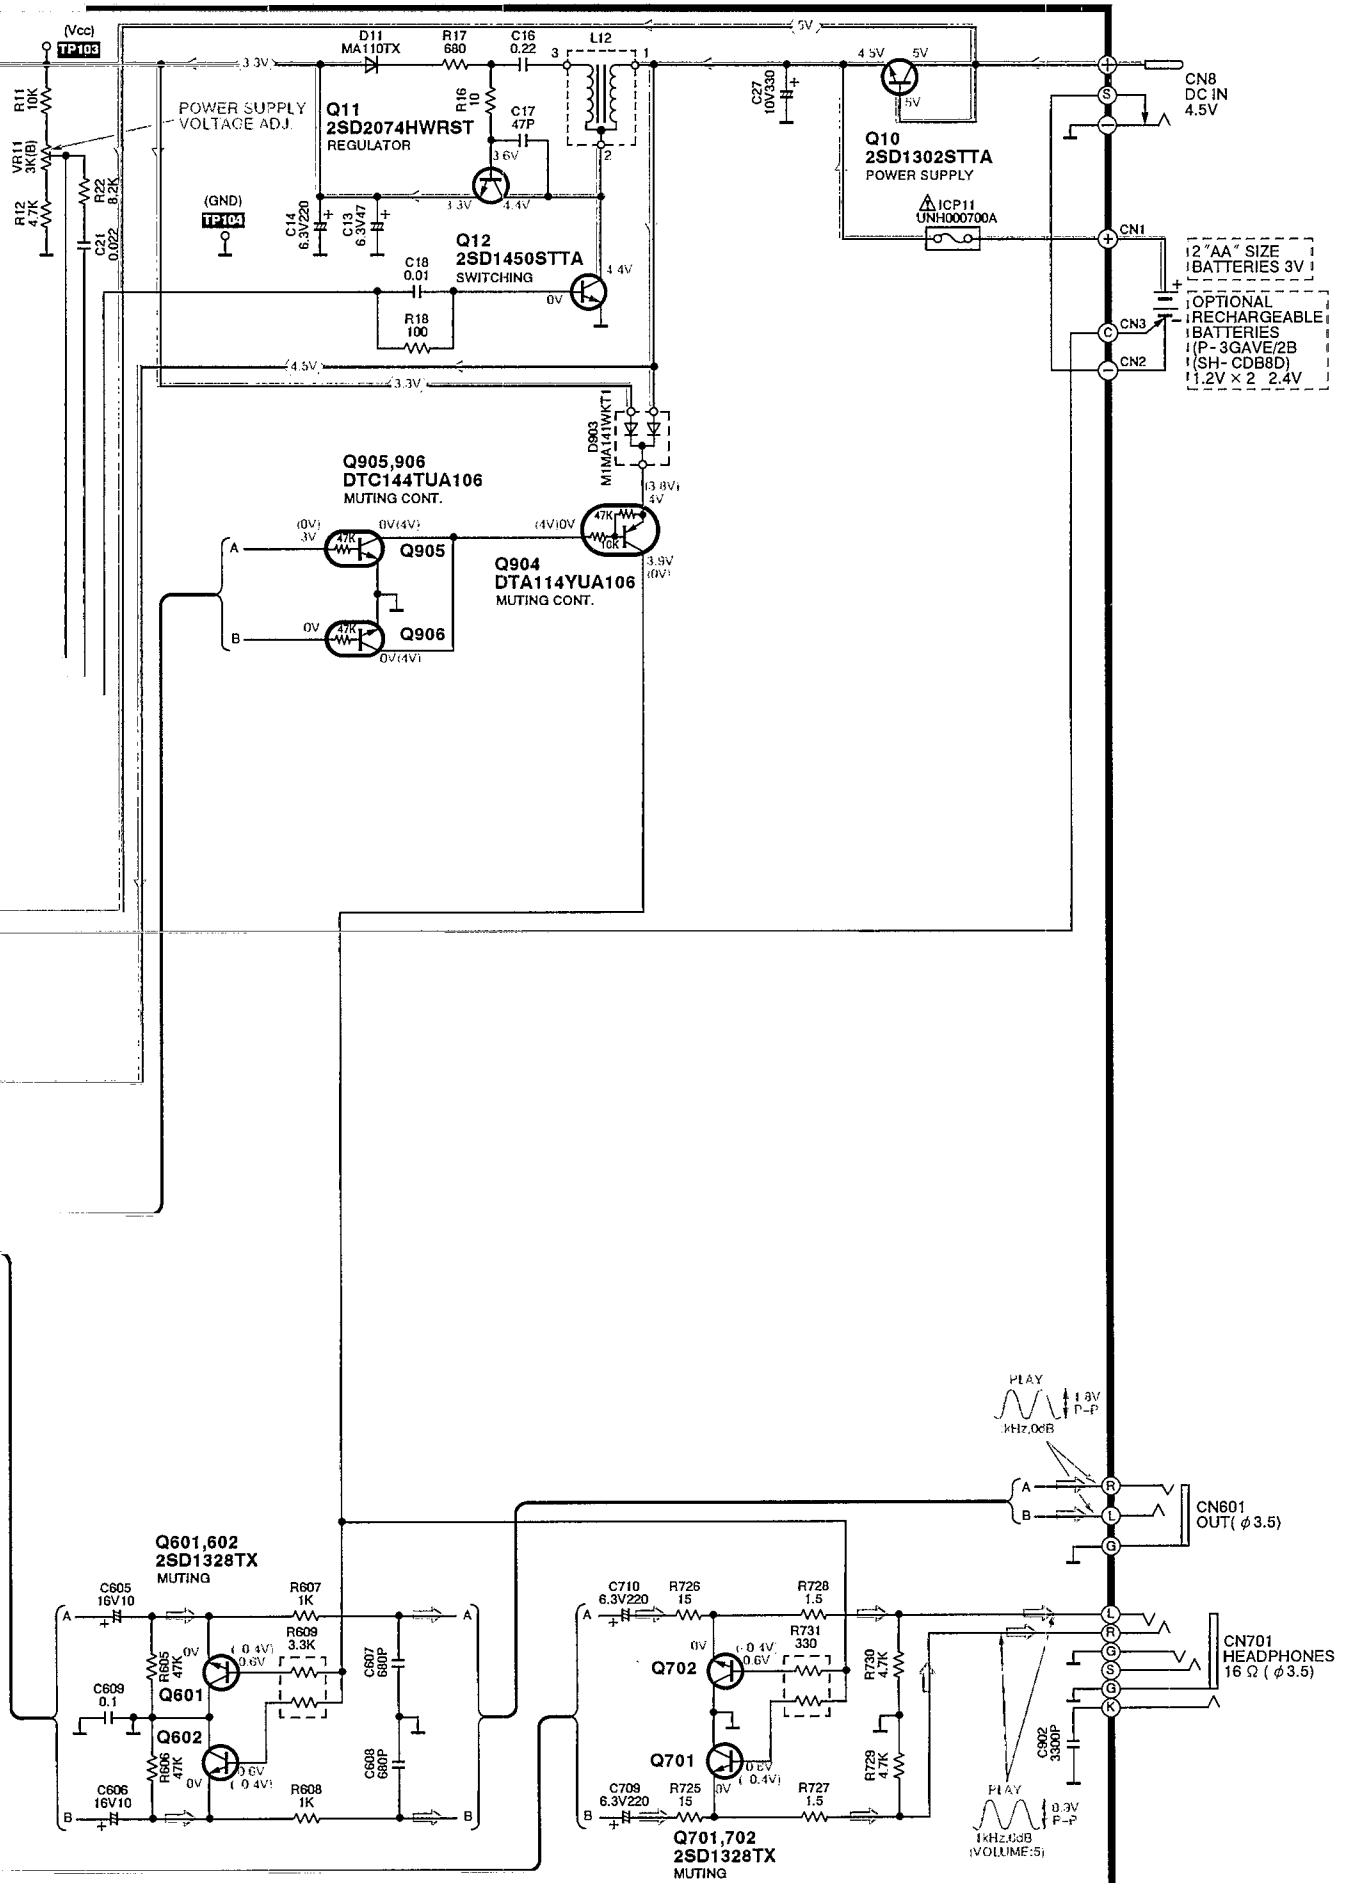

# Printed Circuit Board and Wiring Connection Diagram

- This circuit board diagram may be modified at any time with the development of new technology.

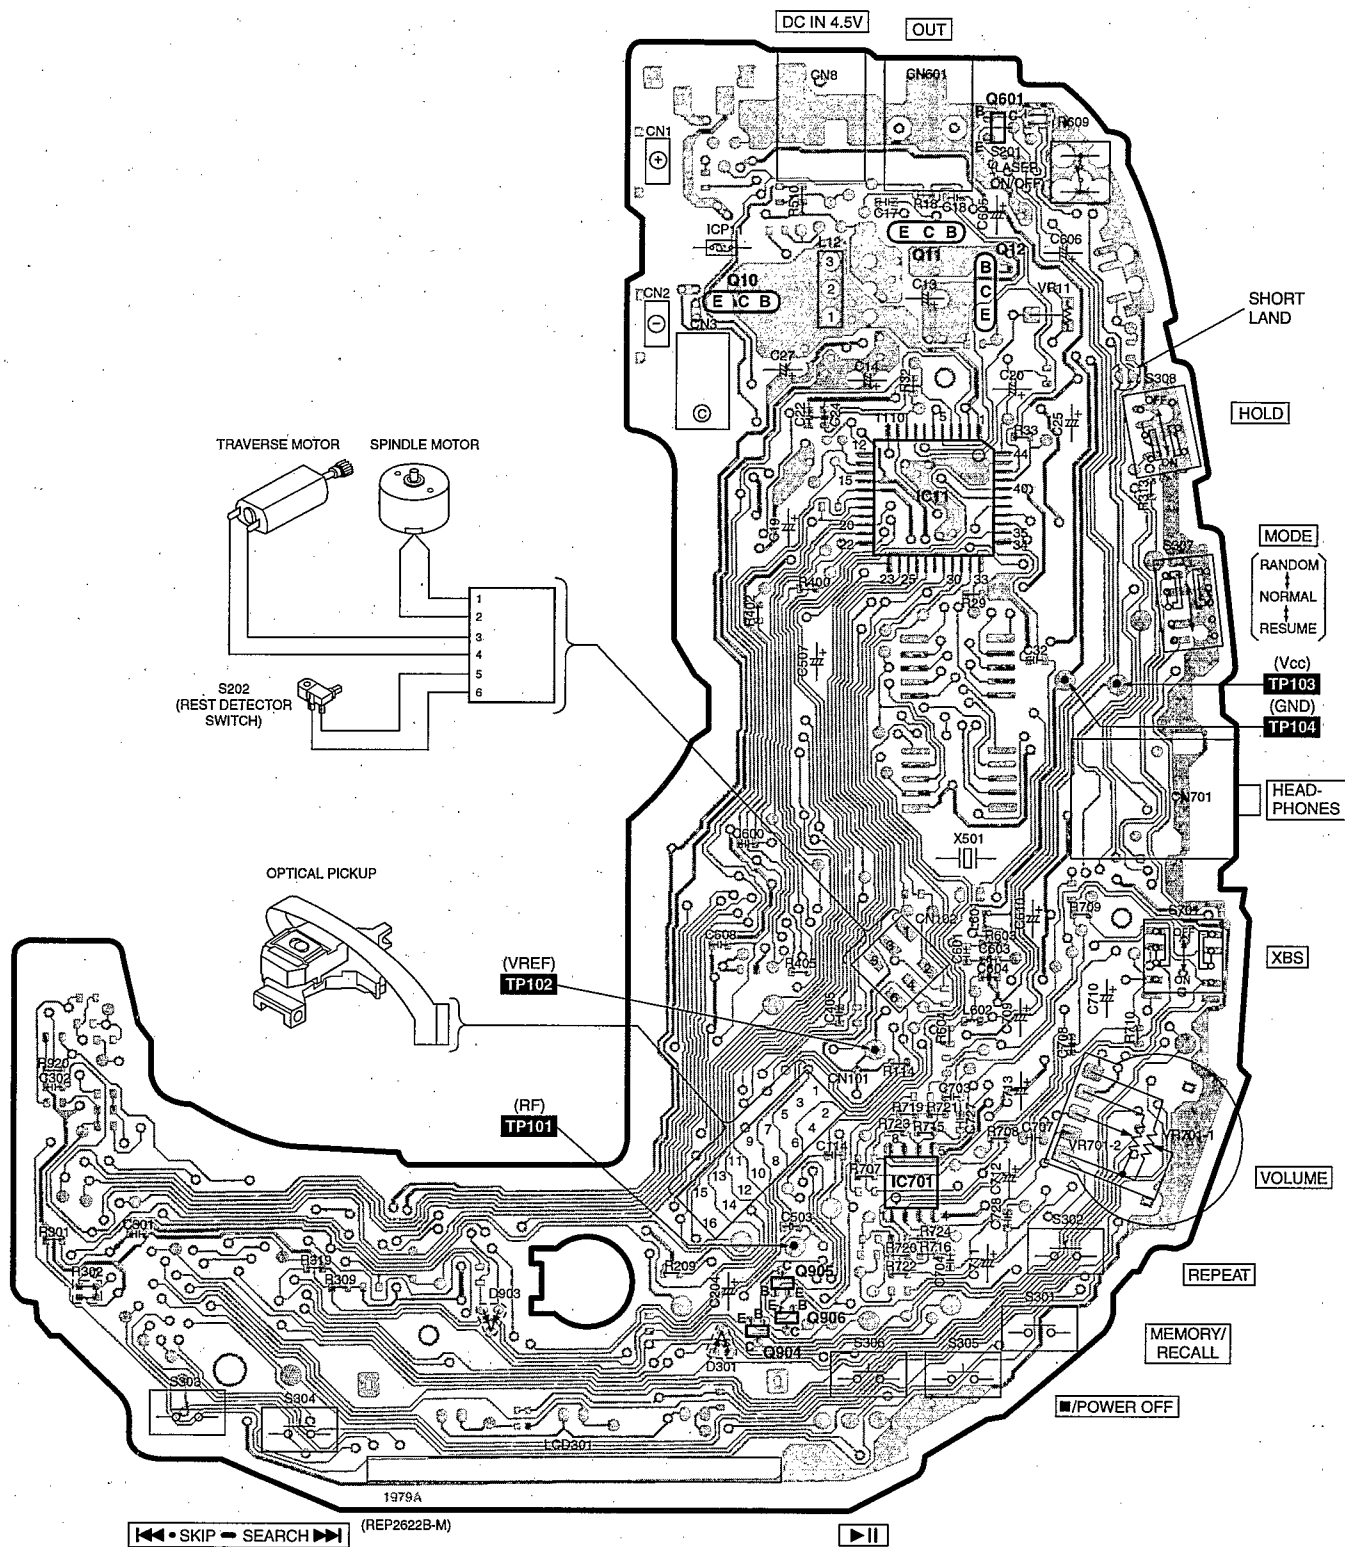

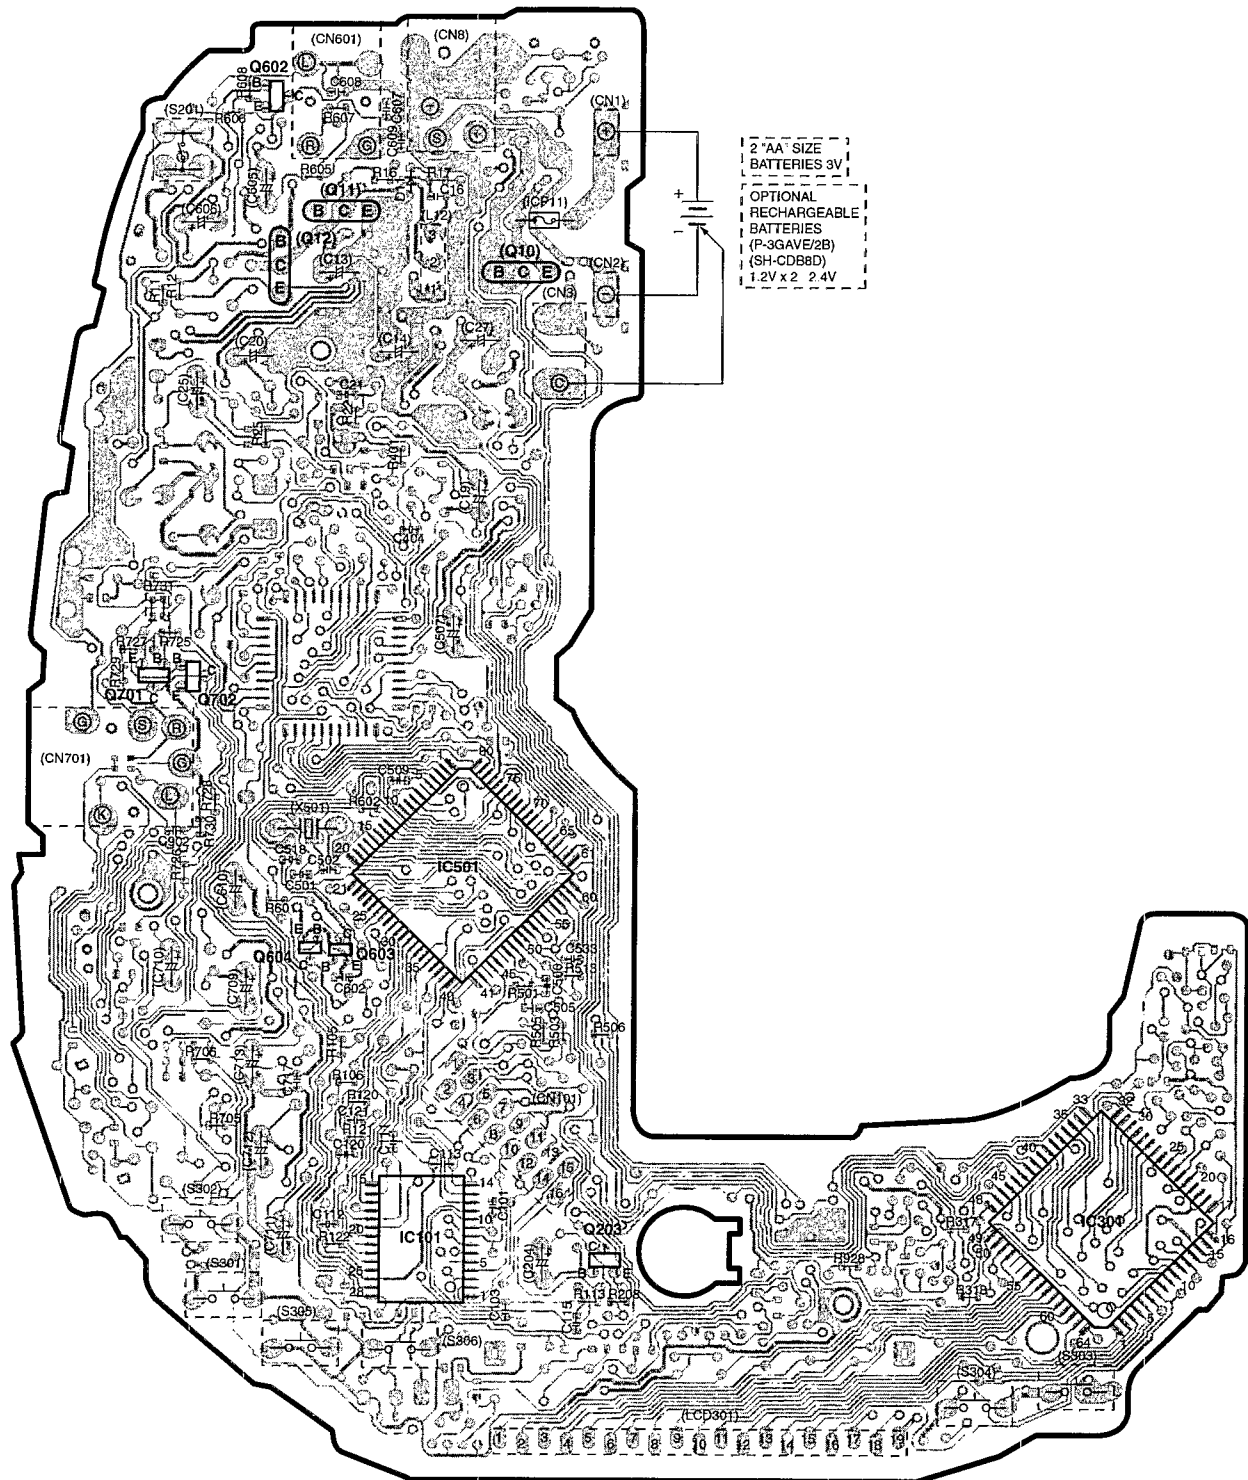

## ■ Measurements and Adjustments

**Warning:** This product uses a laser diode. Refer to caution statements on frontcover.

### • Measuring instruments and special tools

#### • Test discs

1. Playability test disc (SZZP1054C)
2. Uneven test disc (SZZP1056C)

- Musical program disc (ordinary)
- DC voltmeter
- Lead wire (for test points)

#### • Test short land

Short-circuit the lands of the laser ON/OFF switch (S201) by soldering them. It turns "ON" position. (Refer to below Fig. 1. or printed circuit board and wiring connection diagram for short land location on page 18.)

**Note:** Remove the solders from the lands after adjustment.

#### • Adjustment point

**Notes:** 1. Please refer to the printed circuit board and wiring connection diagram for test point locations.

2. Take care to connect CN101 (as shown in Fig.1).

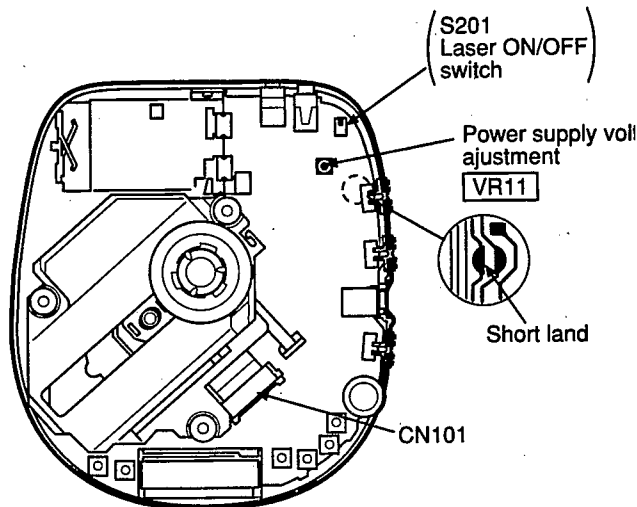


Fig. 1

### • Adjustment procedure

#### (1) POWER SUPPLY VOLTAGE ADJUSTMENT

1. Connect the DC voltmeter to **TP103** (VCC) (+) and **TP104** (GND) on the P.C.B.
2. Connect the AC adaptor cord to the DC (IN) port and move the PLAY switch to the ON position. Anti-shock is set in OFF position. (Use a new dry cell battery or a rechargeable battery that is full charged.)
3. Insert the test disc, and switch the player power ON.
4. Adjust **VR11** on the P.C.B. at  $3.12 \pm 0.02V$ , as shown in Fig.1.

#### (2) CHECK OF PLAY OPERATION

##### \* Checking Skip Search

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (in both the forward and backward directions).


##### \* Checking Manual Search

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and backward directions).


##### \* Checking Playability

1. Play the 0.7 mm black dot and the 0.7 mm wedge on the playability test disc (SZZP1054C) and verify that no sound skip or noise occurs.
2. Play the middle tracks of the uneven test disc (SZZ1056C) and verify that no sound skip or noise occurs.


# Block Diagram


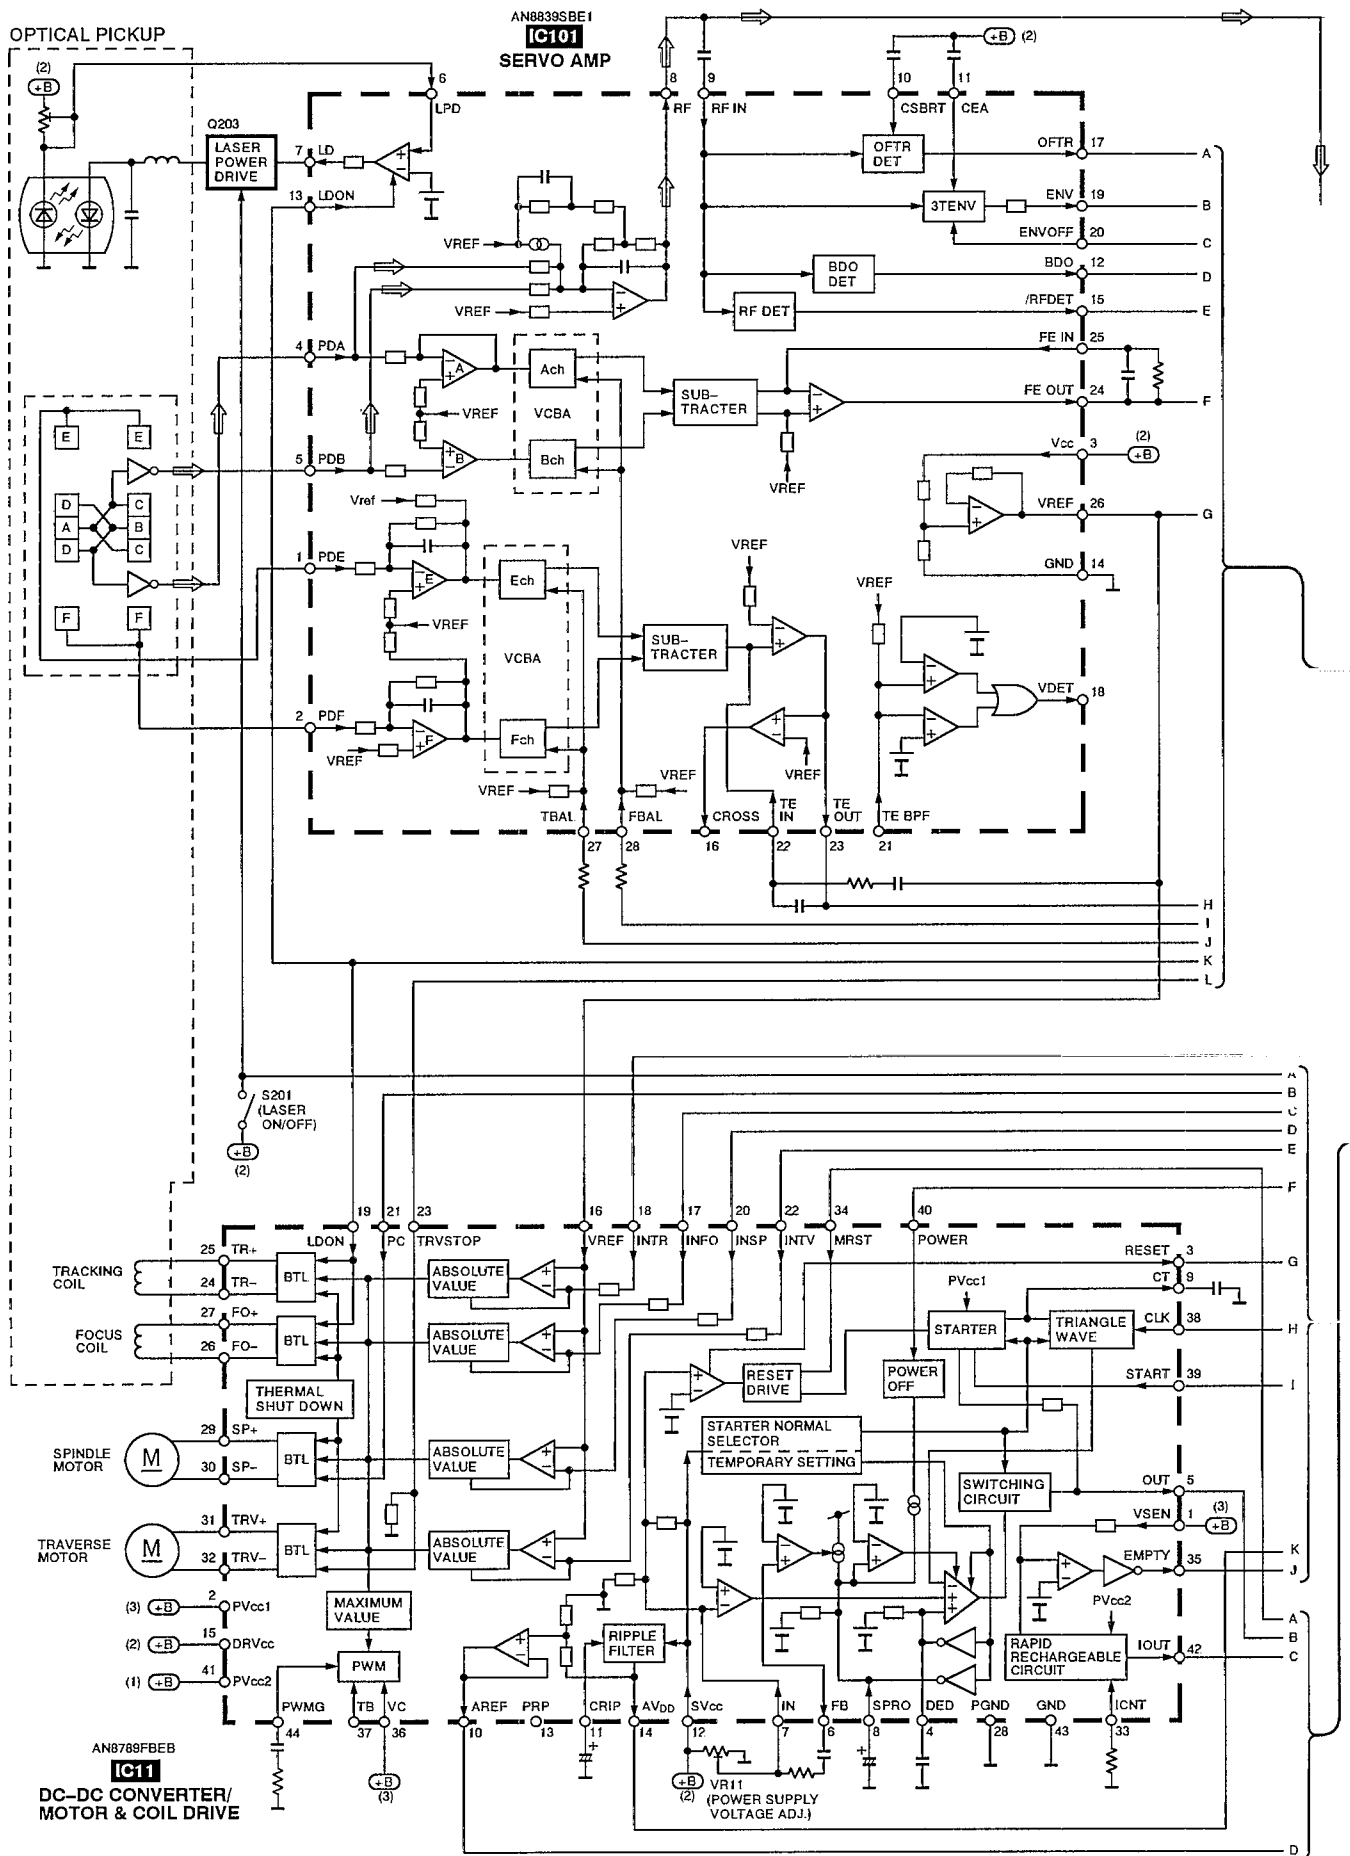


MNG746RPK1AL

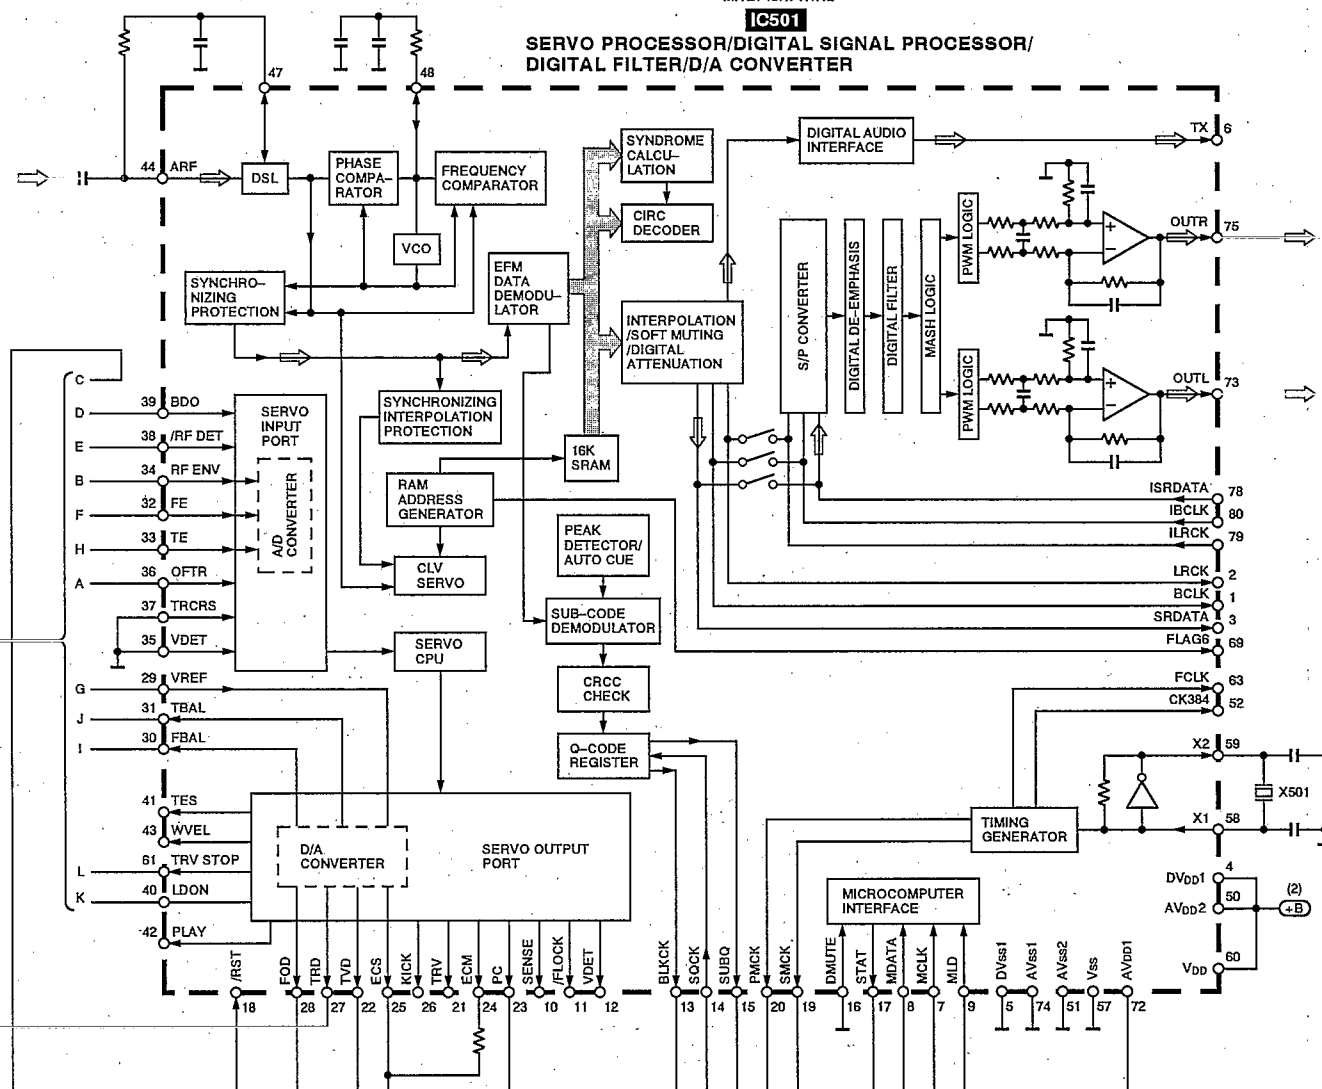**IC501**
**SERVO PROCESSOR/DIGITAL SIGNAL PROCESSOR/  
DIGITAL FILTER/D/A CONVERTER**


SC440303CFU

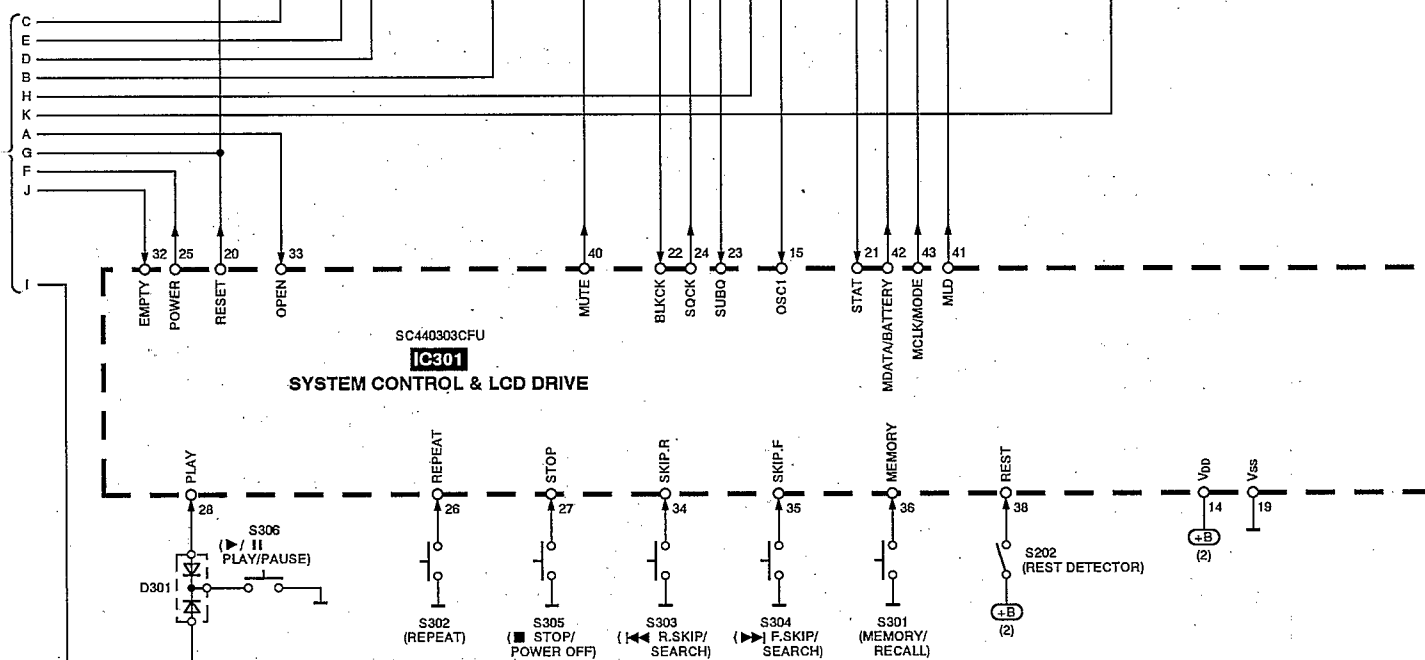**IC301**
**SYSTEM CONTROL & LCD DRIVE**

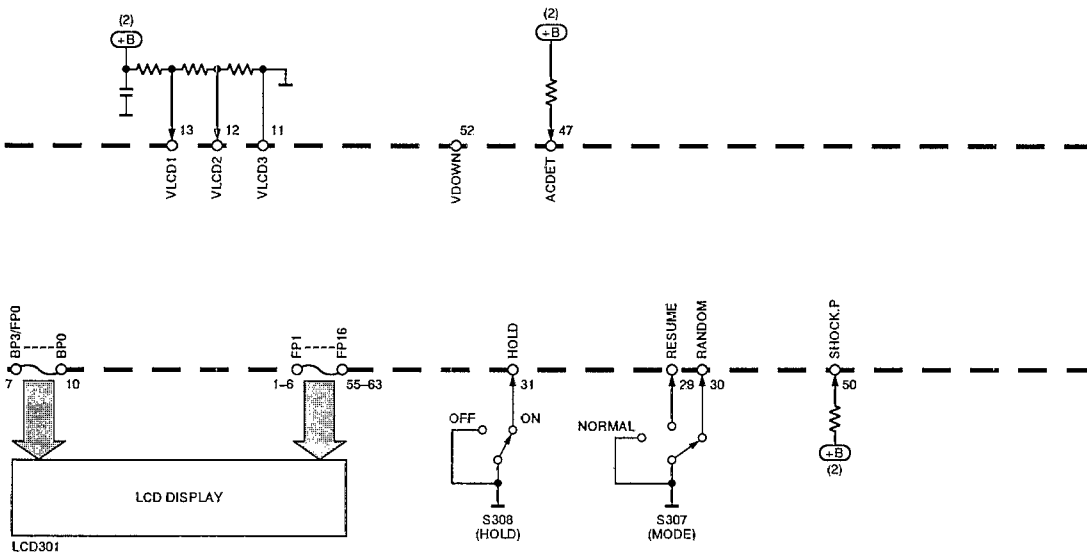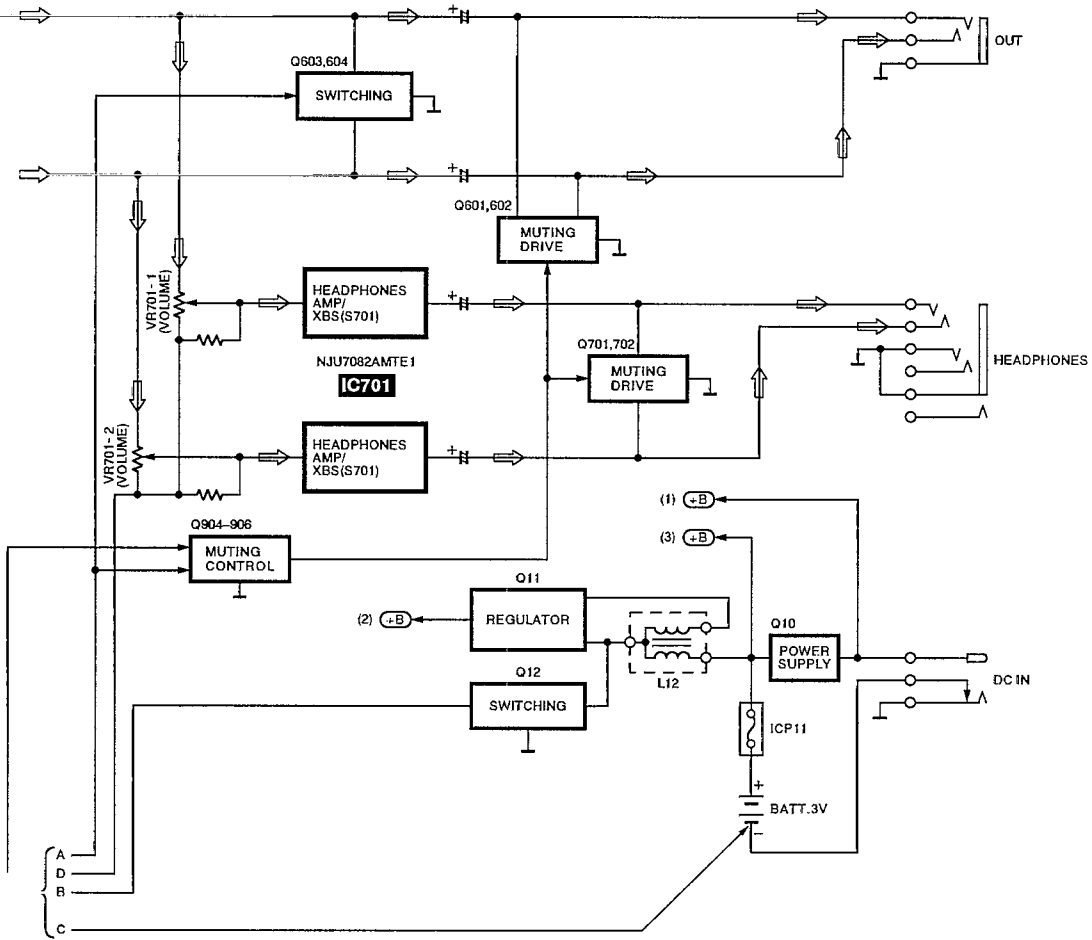


## ■ Terminal Function of IC's

### ● IC11 (AN8789FBEB): DC-DC Converter / Motor & Coil Drive

| Pin No. | Terminal Name | I/O | Function                               |
|---------|---------------|-----|--|
| 1       | VSEN          | I   | Empty detect input terminal            |
| 2       | PVCC1         | I   | Power supply terminal                  |
| 3       | RESET         | O   | Reset signal input terminal            |
| 4       | DED           | I   | Deduction time signal input terminal   |
| 5       | OUT           | O   | DC/DC converter output terminal        |
| 6       | FB            | O   | Error amp output terminal              |
| 7       | IN            | I   | Error amp input terminal               |
| 8       | SPRO          | I   | Short protection signal input terminal |
| 9       | CT            | O   | Triangular wave output terminal        |
| 10      | AREF          | O   | 1/2 AVDD signal output terminal        |
| 11      | CRIP          | I   | Ripple removal capacitor terminal      |
| 12      | SVCC          | I   | Power supply terminal                  |
| 13      | PRP           | –   | Not used, open                         |
| 14      | AVDD          | O   | Ripple filter output terminal          |
| 15      | DRVCC         | I   | Power supply terminal                  |
| 16      | VREF          | I   | Reference voltage input terminal       |
| 17      | INFO          | I   | Focus coil driver input terminal       |
| 18      | INTR          | I   | Tracking coil driver input terminal    |
| 19      | LDON          | I   | Driver ON/OFF control terminal         |
| 20      | INSP          | I   | Spindle motor driver input terminal    |
| 21      | PC            | I   | Driver ON/OFF control terminal         |
| 22      | INTV          | I   | Traverse motor driver input terminal   |

| Pin No. | Terminal Name | I/O | Function                                |
|---------|---------------|-----|---|
| 23      | TRVSTOP       | I   | Driver ON/OFF control terminal          |
| 24      | TR-           | O   | Tracking coil driver output terminal    |
| 25      | TR+           | O   | Tracking coil driver output terminal    |
| 26      | FO-           | O   | Focus coil driver output terminal       |
| 27      | FO+           | O   | Focus coil driver output terminal       |
| 28      | PGND          | –   | GND terminal                            |
| 29      | SP+           | O   | Spindle motor driver output terminal    |
| 30      | SP-           | O   | Spindle motor driver output terminal    |
| 31      | TRV+          | O   | Traverse motor driver output terminal   |
| 32      | TRV-          | O   | Traverse motor driver output terminal   |
| 33      | ICNT          | I   | Charge current setting terminal         |
| 34      | MRST          | O   | Muting reset output terminal            |
| 35      | EMPTY         | O   | Empty detect output terminal            |
| 36      | VC            | I   | Not used, connected to PVCC1            |
| 37      | TB            | –   | Not used, open                          |
| 38      | CLK           | I   | Clock input terminal                    |
| 39      | START         | I   | Oscillation start input terminal        |
| 40      | POWER         | I   | Power ON/OFF signal input terminal      |
| 41      | PVCC2         | I   | Power supply terminal                   |
| 42      | IOUT          | O   | Charge / Battery detect output terminal |
| 43      | GND           | –   | GND terminal                            |
| 44      | PWMG          | –   | Not used, open                          |



## ● IC301 (SC44302CFU): System Control / LCD Drive

| Pin No. | Terminal Name | I/O | Function   |
|---------|---------------|-----|--|
| 1~6     | FP6~FP1       | O   | LCD segment signal output terminal                                   |
| 7       | BP3/FP0       |     |  |
| 8~10    | BP2~BP0       |     |  |
| 11~13   | VLCD3~VLCD1   | I   | LCD voltage control input terminal<br>(Pin No.11 : connected to GND) |
| 14      | VDD           | I   | Power supply terminal  |
| 15      | OSC1          | I   | Main system clock input terminal                                     |
| 16      | OSC2          | —   | Not used, open   |
| 17      | XOSC2         | —   | Not used, open   |
| 18      | XOSC1         | —   | Not used, connected to GND   |
| 19      | VSS           | —   | GND terminal   |
| 20      | RESET         | O   | Reset signal input terminal  |
| 21      | STAT          | I   | Status signal input terminal<br>(CRC,CUE,CLVS,TT STOP,FCLV,SQOK)     |
| 22      | BLKCK         | I   | Sub-code block clock input terminal<br>(f=75Hz with normal play)     |
| 23      | SUBQ          | I   | Sub-code Q data input terminal                                       |
| 24      | SQCK          | O   | Sub-code Q register clock signal output terminal                     |
| 25      | POWER         | O   | Power ON/OFF signal output terminal                                  |
| 26      | REPEAT        | I   | REPEAT key input terminal  |
| 27      | STOP          | I   | STOP key input terminal  |
| 28      | PLAY          | I   | PLAY key input terminal  |
| 29      | RESUME        | I   | RESUME switch input terminal   |
| 30      | RANDOM        | I   | RANDOM switch input terminal   |
| 31      | HOLD          | I   | HOLD switch input terminal   |
| 32      | EMPTY         | I   | Empty detect input terminal  |

| Pin No. | Terminal Name     | I/O | Function  |
|---------|-------------------|-----|---|
| 33      | OPEN              | I   | CD cover open detection terminal ("L" : open)       |
| 34      | SKIP.R            | I   | SKIP/SERCH.R key input terminal                     |
| 35      | SKIP.F            | I   | SKIP/SERCH.F key input terminal                     |
| 36      | MEMORY            | I   | MEMORY key input terminal                           |
| 37      | BUZ               | —   | Not used, open                                      |
| 38      | REST              | I   | REST (innermost position) detect input terminal     |
| 39      | WLSRCN/<br>RSENSE | I   | Connected to GND via resistor                       |
| 40      | MUTE              | O   | Muting signal output terminal ("H" : mute)          |
| 41      | MLD               | O   | Command load signal output terminal<br>("L" : load) |
| 42      | MDATA/<br>BATTERY | O   | Command data signal output terminal                 |
| 43      | MCLK/<br>MODE1    | O   | Command clock signal output terminal                |
| 44      | SP RST            | —   | Not used, open                                      |
| 45      | STROBE1           | —   | Not used, open                                      |
| 46      | RDATA/<br>STROBE2 | —   | Not used, open                                      |
| 47      | ACDET             | I   | Power detect input terminal                         |
| 48      | CHARGE/<br>LIGHT  | —   | Not used, open                                      |
| 49      | WRDRCN/<br>LCDREM | O   | Connected to GND via resistor                       |
| 50      | SHOCK.P           | I   | SHOCK.P key input terminal                          |
| 51      | ZSENSE            | I   | Sense signal input terminal                         |
| 52      | VDOWN             | —   | Not used, open                                      |
| 53,54   | FP18,FP17         | —   | Not used, open                                      |
| 55~63   | FP16~FP8          | O   | LCD segment signal output terminal                  |
| 64      | FP7               | —   | Not used, open                                      |

● IC501 (MNG746RPK1AL): Servo Processor / Digital Signal Processor / Digital Filter & D/A Converter

| Pin No. | Terminal Name | I/O | Function  |
|---------|---------------|-----|---|
| 1       | BCLK          | —   | Serial bit clock output terminal (Not used, open)                     |
| 2       | LRCK          | —   | L/R discriminating signal output terminal (Not used, open)            |
| 3       | SRDATA        | —   | Serial data signal output terminal (Not used, open)                   |
| 4       | DVDD1         | I   | Power supply terminal   |
| 5       | DVSS1         | —   | GND terminal  |
| 6       | TX            | —   | Not used, open  |
| 7       | MCLK          | I   | Command clock signal input terminal                                   |
| 8       | MDATA         | I   | Command data signal input terminal                                    |
| 9       | MLD           | I   | Command load signal input ("L" : load)                                |
| 10      | SENSE         | —   | Not used, open  |
| 11      | FLOCK         | —   | Not used, open  |
| 12      | VDET          | —   | Not used, open  |
| 13      | BLKCK         | O   | Sub-code block clock output terminal (f=75Hz)                         |
| 14      | SQCK          | I   | Sub-code Q resister clock input terminal                              |
| 15      | SUBQ          | O   | Sub-code Q code output terminal                                       |
| 16      | DMUTE         | —   | Not used, connected to GND  |
| 17      | STAT          | O   | Status signal output terminal (CRC,CUE,CLVS,TTSTOP,FCLV,SQCK)         |
| 18      | RESET         | I   | Reset signal input terminal ("L" : reset)                             |
| 19      | SMCK          | O   | System clock output terminal (f=4.236MHz)                             |
| 20      | PMCK          | O   | Frequency division clock signal output terminal (f=1/1.92xck=88.2kHz) |
| 21      | TRV           | —   | Not used, open  |
| 22      | TVD           | O   | Traverse data signal output terminal                                  |
| 23      | PC            | O   | Spindle motor drive signal ("L" : ON)                                 |
| 24      | ECM           | O   | Spindle motor drive signal (Forced mode)                              |
| 25      | ECS           | O   | Spindle motor drive signal (Servo error signal)                       |
| 26      | KICK          | —   | Not used, open  |
| 27      | TRD           | O   | Tracking drive signal output terminal                                 |
| 28      | FOD           | O   | Focus drive signal output terminal                                    |
| 29      | VREF          | I   | Reference voltage input terminal                                      |
| 30      | FBAL          | O   | Focus balance adjustment output terminal                              |
| 31      | TBAL          | O   | Tracking balance adjustment output terminal                           |
| 32      | FE            | I   | Focus error signal input terminal                                     |
| 33      | TE            | I   | Tracking error signal input terminal                                  |
| 34      | RFENV         | I   | RF envelope signal input terminal                                     |

| Pin No. | Terminal Name | I/O | Function                                       |
|---------|---------------|-----|--|
| 35      | VDET          | —   | Not used, connected to GND                     |
| 36      | OFTR          | I   | Off track signal input ("H" : off track)       |
| 37      | TRCRS         | —   | Not used, connected to GND                     |
| 38      | RFDET         | I   | RF detection signal input ("L" : detection)    |
| 39      | BDO           | I   | Dropout detection signal input ("L" : dropout) |
| 40      | LDON          | O   | Laser power control signal output ("H" : ON)   |
| 41      | TES           | —   | Not used, open                                 |
| 42      | PLAY          | —   | Not used, open                                 |
| 43      | WVEL          | —   | Not used, open                                 |
| 44      | ARF           | I   | RF signal input terminal                       |
| 45      | IREF          | I   | Reference current input terminal               |
| 46      | DRF           | —   | Not used, open                                 |
| 47      | DSLIF         | I/O | DSL loop filter input/output terminal          |
| 48      | PLLIF         | I/O | PLL loop filter input/output terminal          |
| 49      | DSLIF2        | I   | VCO loop filter input terminal                 |
| 50      | AVDD2         | I   | Power supply terminal                          |
| 51      | AVSS2         | —   | GND terminal                                   |
| 52      | CK384         | —   | Not used, open                                 |
| 53      | PCK           | —   | Not used, open                                 |
| 54      | CK176         | —   | Not used, open                                 |
| 55      | SUBC          | —   | Not used, open                                 |
| 56      | SBCK          | —   | Not used, connected to GND                     |
| 57      | VSS           | —   | GND terminal                                   |
| 58      | X1            | I   | Crystal oscillator input (f=16.9344MHz)        |
| 59      | X2            | O   | Crystal oscillator output (f=16.9344MHz)       |
| 60      | VDD           | I   | Power supply terminal                          |
| 61      | TRVSTOP       | O   | Driver ON/OFF control signal output terminal   |
| 62      | CLDCK         | —   | Not used, open                                 |
| 63      | FCLK          | —   | Not used, open                                 |
| 64      | IPFLAG        | —   | Not used, open                                 |
| 65      | FLAG0         | —   | Not used, open                                 |
| 66      | CLVS          | —   | Not used, open                                 |
| 67      | CRC           | —   | Not used, open                                 |
| 68      | RESY          | —   | Not used, open                                 |

## ● IC101 (AN8839SBE1): Servo Amp

| Pin No. | Terminal Name | I/O | Function  |
|---------|---------------|-----|---|
| 69      | FLAG6         | –   | Not used, open  |
| 70      | ARST          | I   | Reset signal input terminal                               |
| 71      | TEST          | I   | Test terminal ("H" : nomal)                               |
| 72      | AVDD1         | I   | Power suply terminal                                      |
| 73      | OUTL          | O   | Lch audio signal output terminal                          |
| 74      | AVSS1         | –   | GND terminal  |
| 75      | OUTR          | O   | Rch audio signal output terminal                          |
| 76      | RSEL          | –   | Not used, connected to Vcc                                |
| 77      | FSEL          | –   | Not used, connected to GND                                |
| 78      | ISRDATA       | –   | Serial data signal input terminal (Not used, open)        |
| 79      | ILRCK         | –   | L/R discriminating signal input terminal (Not used, open) |
| 80      | IBCLK         | –   | Serial bit clock input signal (Not used, open)            |

| Pin No. | Terminal Name | I/O | Function   |
|---------|---------------|-----|--|
| 1       | PDE           | I   | Tracking signal input terminal (1)                 |
| 2       | PDF           | I   | Tracking signal input terminal (2)                 |
| 3       | VDD           | I   | Power supply terminal                              |
| 4       | PDA           | I   | Focus signal input terminal (1)                    |
| 5       | PDB           | I   | Focus signal input terminal (2)                    |
| 6       | LPD           | I   | APC amp input terminal                             |
| 7       | LD            | O   | APC amp output terminal                            |
| 8       | RF            | O   | RF summing output terminal                         |
| 9       | RF IN         | I   | RF signal input terminal                           |
| 10      | CSBRT         | I   | Capacitor connection terminal for OFTR             |
| 11      | CEA           | I   | Capacitor connection terminal for H.P.F. amp       |
| 12      | BDO           | O   | Dropout signal output terminal ("H" : Dropout)     |
| 13      | LDON          | I   | APC control input terminal                         |
| 14      | GND           | –   | GND terminal                                       |
| 15      | /RFDET        | O   | RF det. signal output terminal ("L" : Det.)        |
| 16      | NC            | –   | Not used, open                                     |
| 17      | OFTR          | O   | Off track signal output terminal ("H" : Off track) |
| 18      | NC            | –   | Not used, open                                     |
| 19      | ENV           | O   | RF envelope signal output terminal                 |
| 20      | ENV OFF       | I   | ENV control input terminal                         |
| 21      | NC            | –   | Not used, open                                     |
| 22      | TE IN         | I   | Tracking error amp input terminal                  |
| 23      | TE OUT        | O   | Tracking error amp output terminal                 |
| 24      | FE OUT        | O   | Focus error amp output terminal                    |
| 25      | FE IN         | I   | Focus error amp input terminal                     |
| 26      | VREF          | O   | Reference voltage output terminal                  |
| 27      | TBAL          | I   | Tracking balance signal input terminal             |
| 28      | FBAL          | I   | Focus balance signal input terminal                |

# Replacement Parts List

## Notes: \* Important safety notice:

Components identified by  $\Delta$  mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.

\* ALL parts are supplied by MESA.

\* The "IA, IB, IC" marks in Remarks indicate language of instruction manual.

IA : English, Spanish, Swedish

IB : German, Italian, French

IC : Dutch, Danish, Russian


This item is not attached to merchandise, but it is supplied as a replacement parts. (Ref. No. "A8")

| Ref.No.     | Part No.     | Part Name & Description | Pcs | Remarks  |
|-------------|--------------|-------------------------|-----|----------|
| 1           | RFKJLS112E-S | BOTTOM CABINET ASS'Y    | 1   | (E)      |
| 1           | RFKJLS112EGS | BOTTOM CABINET ASS'Y    | 1   | (EG)     |
| 1-1         | RKA0063-K    | FOOT                    | 2   |          |
| 2           | RKK0102-K    | BATTERY COVER           | 1   |          |
| 3           | RJF0030      | LCD HOLDER              | 1   |          |
| 4           | RSL5203-C    | LCD (LCD301)            | 1   |          |
| 5           | RJC93020     | BATTERY TERMINAL        | 1   |          |
| 6           | RMA0677      | FIXER                   | 1   |          |
| 7           | RYF0441H-A   | CD COVER ASS'Y          | 1   | (A)      |
| 7           | RYF0441H-H   | CD COVER ASS'Y          | 1   | (H)      |
| 7           | RYF0441H-S   | CD COVER ASS'Y          | 1   | (S)      |
| 8           | RYK0718-K    | MIDDLE CABINET UNIT     | 1   |          |
| 8-1         | RGU1495-K    | BUTTON, SKIP/SEARCH     | 1   |          |
| 8-2         | RGU1494-K    | BUTTON, PLAY/STOP       | 1   |          |
| 8-3         | RMED0241     | SPRING                  | 1   |          |
| 8-4         | RML0472      | STOPPER                 | 1   |          |
| 9           | XTN17+6GFZ   | SCREW                   | 4   |          |
| 10          | RAE0144Z     | TRAVERSE UNIT           | 1   |          |
| 10-1        | RMG0449-H    | FLOATING RUBBER         | 2   |          |
| 11          | RGV0200-K    | KNOB, XBS/HOLD          | 3   |          |
| 12          | RJC93015-1   | BATTERY TERMINAL        | 2   |          |
| PCB1        | REP2622B-M   | P.C.B. ASSY             | 1   |          |
| A1          | RFEV317P-KS  | STEREO EARPHONE         | 1   |          |
| $\Delta$ A2 | RFEA401E-3S  | AC ADAPTOR              | 1   |          |
| A3          | RQA0117      | WARRANTY CARD           | 1   |          |
| A4          | RQCB0169     | SERVICE CENTER LIST     | 1   |          |
| A5          | RQT4338-E    | INSTRUCTION MANUAL      | 1   | <IA>     |
| A6          | RQT4340-D    | INSTRUCTION MANUAL      | 1   | <IB>     |
| A7          | RQT4341-H    | INSTRUCTION MANUAL      | 1   | (EG)<IC> |
| A8          | RKB205ZA-O   | EAR PADS                | 1   |          |
| C13         | RCE0JSC4701X | 6.3V 47U                | 1   |          |
| C14         | RCE0JKA2211G | 6.3V 220U               | 1   |          |
| C16         | ECUVNA224KBV | 10V 0.22U               | 1   |          |
| C17         | ECUV1H470KCV | 50V 47P                 | 1   |          |
| C18         | ECUV1E103KBV | 25V 0.01U               | 1   |          |
| C19         | ECEA1KA220I  | 10V 22U                 | 1   |          |
| C20         | ECEA1HKA010I | 50V 1U                  | 1   |          |


| Ref.No.        | Part No.     | Part Name & Description  | Pcs | Remarks |
|----------------|--------------|--------------------------|-----|---------|
| C21            | ECUV1C223KBV | 16V 0.022U               | 1   |         |
| C22            | ECUZNC104ZV  | 16V 0.1U                 | 1   |         |
| C24            | ECUV1H681KBV | 50V 680P                 | 1   |         |
| C25            | ECEA1HKA010I | 50V 1U                   | 1   |         |
| C27            | RCE1AMT3311V | 10V 330U                 | 1   |         |
| C32            | ECUVNA105ZV  | 10V 1U                   | 1   |         |
| C101           | ECUV1C104KBV | 16V 0.1U                 | 1   |         |
| C103           | ECUV1E103KBV | 25V 0.01U                | 1   |         |
| C111           | ECUV1C273KBV | 16V 0.027U               | 1   |         |
| C112           | ECUV1H391KBV | 50V 390P                 | 1   |         |
| C113           | ECUVNE104ZFN | 25V 0.1U                 | 1   |         |
| C114           | ECUZNC104ZV  | 16V 0.1U                 | 1   |         |
| C115           | ECUV1C223KBV | 16V 0.022U               | 1   |         |
| C120           | ECUV1H332KBV | 50V 3300P                | 1   |         |
| C121           | ECUV1H221KBV | 50V 220P                 | 1   |         |
| C204           | RCE1AKA470IG | 10V 47U                  | 1   |         |
| C301, 02       | ECUZNC104ZV  | 16V 0.1U                 | 2   |         |
| C404           | ECUVNA105ZV  | 10V 1U                   | 1   |         |
| C405           | ECUV1C104KBV | 16V 0.1U                 | 1   |         |
| C501, 02       | ECUV1H050CCV | 50V 5P                   | 2   |         |
| C503           | ECUV1H561KBV | 50V 560P                 | 1   |         |
| C505           | ECUV1C223KBV | 16V 0.022U               | 1   |         |
| C506           | ECUVNA224KBV | 10V 0.22U                | 1   |         |
| C507           | RCE0JKA2211G | 6.3V 220U                | 1   |         |
| C508, 09       | ECUZNC104ZV  | 16V 0.1U                 | 2   |         |
| C518           | ECUV1E103KBV | 25V 0.01U                | 1   |         |
| C533           | ECUZNC104ZV  | 16V 0.1U                 | 1   |         |
| C600           | ECUZNC104ZV  | 16V 0.1U                 | 1   |         |
| C601, 02       | ECUV1H102KBV | 50V 1000P                | 2   |         |
| C603, 04       | ECUV1H272KBV | 50V 2700P                | 2   |         |
| C605, 06       | ECEA1CKA100I | 16V 10U                  | 2   |         |
| C607, 08       | ECUV1H681KBV | 50V 680P                 | 2   |         |
| C609           | ECUZNC104ZV  | 16V 0.1U                 | 1   |         |
| C610           | RCE1AKA470IG | 10V 47U                  | 1   |         |
| C703, 04       | ECUV1C223KBV | 16V 0.022U               | 2   |         |
| C707           | ECUV1H102KBN | 50V 1000P                | 1   |         |
| C708           | ECUV1H102KBV | 50V 1000P                | 1   |         |
| C709, 10       | ECA0JAK221XH | 6.3V 220U                | 2   |         |
| C711, 12       | ECEA1CPK100I | 16V 10U                  | 2   |         |
| C713           | RCE1AKA470IG | 10V 47U                  | 1   |         |
| C717           | ECUZNC104ZV  | 16V 0.1U                 | 1   |         |
| C727, 28       | ECUV1C223KBV | 16V 0.022U               | 2   |         |
| C902           | ECUV1H332KBV | 50V 3300P                | 1   |         |
| CN1, N2        | RJC93015-1   | BATTERY TERMINAL         | 2   |         |
| CN3            | RJH5104      | RECHARGE. BATT. TERMINAL | 1   |         |
| CN8            | RJJ43K09-C   | JACK, DC IN              | 1   |         |
| CN101          | RJS2A4716M1  | CONNECTOR (16P)          | 1   |         |
| CN102          | RJS2A5106T1  | CONNECTOR (6P)           | 1   |         |
| CN601          | RJJD3S5ZA-C  | JACK, LINE OUT           | 1   |         |
| CN701          | RJJ33TK07-C  | JACK, HEADPHONE          | 1   |         |
| D11            | MA110TX      | DIODE                    | 1   |         |
| D301           | M1MA141WKT1  | DIODE                    | 1   |         |
| D903           | M1MA141WKT1  | DIODE                    | 1   |         |
| IC11           | AN8789FBEB   | IC                       | 1   |         |
| IC101          | AN8839SBE1   | IC                       | 1   |         |
| IC301          | SC440303CFU  | IC                       | 1   |         |
| IC501          | MNG746RPK1AL | IC                       | 1   |         |
| IC701          | NJU7082AMTE1 | IC                       | 1   |         |
| $\Delta$ ICP11 | UNH000700A   | IC PROTECTOR             | 1   |         |
| LT2            | RLZ0028T-M   | COIL, SWITCHING          | 1   |         |
| L601, 02       | RLBV121AV-I  | COIL, CHOKE              | 2   |         |
| P1             | RPK1040      | GIFT BOX                 | 1   | (H)     |
| P1             | RPK1041      | GIFT BOX                 | 1   | (A)     |
| P1             | RPK1076      | GIFT BOX                 | 1   | (S)     |
| P2             | RPQ0753      | SPACER                   | 1   |         |
| P3             | RPQ0836      | PAD                      | 1   |         |
| P4             | RPF0046      | POLYETHYLENE COVER       | 1   |         |
| P5             | RPF0111      | PROTECTION COVER         | 1   |         |

| Ref.No.  | Part No.     | Part Name & Description | Pcs | Remarks | Ref.No. | Part No. | Part Name & Description | Pcs | Remarks |
|----------|--------------|-------------------------|-----|---------|---------|----------|-------------------------|-----|---------|
| Q10      | 2SD1302STTA  | TRANSISTOR              | 1   |         |         |          |                         |     |         |
| Q11      | 2SD2074HWRST | TRANSISTOR              | 1   |         |         |          |                         |     |         |
| Q12      | 2SD1450STTA  | TRANSISTOR              | 1   |         |         |          |                         |     |         |
| Q203     | MSB709RST1   | TRANSISTOR              | 1   |         |         |          |                         |     |         |
| Q601, 02 | 2SD1328TX    | TRANSISTOR              | 2   |         |         |          |                         |     |         |
| Q603, 04 | DTC114TUA106 | TRANSISTOR              | 2   |         |         |          |                         |     |         |
| Q701, 02 | 2SD1328TX    | TRANSISTOR              | 2   |         |         |          |                         |     |         |
| Q904     | DTA114YUA106 | TRANSISTOR              | 1   |         |         |          |                         |     |         |
| Q905, 06 | DTC144TUA106 | TRANSISTOR              | 2   |         |         |          |                         |     |         |
|          |              |                         |     |         |         |          |                         |     |         |
| R11      | ERJ3GEYJ103Z | 1/16W 10K               | 1   |         |         |          |                         |     |         |
| R12      | ERJ3GEYJ472V | 1/16W 4.7K              | 1   |         |         |          |                         |     |         |
| R16      | ERJ3GEYJ100V | 1/16W 10                | 1   |         |         |          |                         |     |         |
| R17      | ERJ3GEYJ681V | 1/16W 680               | 1   |         |         |          |                         |     |         |
| R18      | ERJ3GEYJ101V | 1/16W 100               | 1   |         |         |          |                         |     |         |
| R22      | ERJ3GEYJ822V | 1/16W 8.2K              | 1   |         |         |          |                         |     |         |
| R25      | ERJ3GEYJ104Z | 1/16W 100K              | 1   |         |         |          |                         |     |         |
| R29      | ERJ3GEYJ821V | 1/16W 820               | 1   |         |         |          |                         |     |         |
| R32      | ERJ3GEYJ105V | 1/16W 1M                | 1   |         |         |          |                         |     |         |
| R33      | ERJ3GEYJ270V | 1/16W 27                | 1   |         |         |          |                         |     |         |
| R105     | ERJ3GEYJ393V | 1/16W 39K               | 1   |         |         |          |                         |     |         |
| R106     | ERJ3GEYR00V  | 1/16W 0                 | 1   |         |         |          |                         |     |         |
| R113     | ERJ3GEYJ101V | 1/16W 100               | 1   |         |         |          |                         |     |         |
| R114     | ERJ3GEYJ330V | 1/16W 33                | 1   |         |         |          |                         |     |         |
| R120     | ERJ3GEYJ472V | 1/16W 4.7K              | 1   |         |         |          |                         |     |         |
| R121, 22 | ERJ3GEYJ683V | 1/16W 68K               | 2   |         |         |          |                         |     |         |
| R208     | ERJ3GEYJ487V | 1/16W 4.7               | 1   |         |         |          |                         |     |         |
| R209     | ERJ3GEYJ223V | 1/16W 22K               | 1   |         |         |          |                         |     |         |
| R301     | ERJ3GEYJ473V | 1/16W 47K               | 1   |         |         |          |                         |     |         |
| R302     | EXBV4V473JV  | 1/16W 47K               | 1   |         |         |          |                         |     |         |
| R309     | ERJ3GEYJ124V | 1/16W 120K              | 1   |         |         |          |                         |     |         |
| R313     | ERJ3GEYJ102Z | 1/16W 1K                | 1   |         |         |          |                         |     |         |
| R317, 18 | ERJ3GEYJ104Z | 1/16W 100K              | 2   |         |         |          |                         |     |         |
| R319     | ERJ3GEYJ334V | 1/16W 330K              | 1   |         |         |          |                         |     |         |
| R400     | ERJ3GEYJ182V | 1/16W 1.8K              | 1   |         |         |          |                         |     |         |
| R401     | ERJ3GEYJ823V | 1/16W 82K               | 1   |         |         |          |                         |     |         |
| R402     | ERJ3GEYJ122V | 1/16W 1.2K              | 1   |         |         |          |                         |     |         |
| R405     | ERJ3GEYJ332V | 1/16W 3.3K              | 1   |         |         |          |                         |     |         |
| R501     | ERJ3GEYJ683V | 1/16W 68K               | 1   |         |         |          |                         |     |         |
| R503     | ERJ3GEYJ473V | 1/16W 47K               | 1   |         |         |          |                         |     |         |
| R505     | ERJ3GEYJ821V | 1/16W 820               | 1   |         |         |          |                         |     |         |
| R506     | ERJ3GEYJ681V | 1/16W 680               | 1   |         |         |          |                         |     |         |
| R510     | ERJ3GEYJ120V | 1/16W 12                | 1   |         |         |          |                         |     |         |
| R513     | ERJ3GEYJ184V | 1/16W 180K              | 1   |         |         |          |                         |     |         |
| R601, 02 | ERJ3GEYJ681V | 1/16W 680               | 2   |         |         |          |                         |     |         |
| R603, 04 | ERJ3GEYJ561V | 1/16W 560               | 2   |         |         |          |                         |     |         |
| R605, 06 | ERJ3GEYJ473V | 1/16W 47K               | 2   |         |         |          |                         |     |         |
| R607, 08 | ERJ3GEYJ102Z | 1/16W 1K                | 2   |         |         |          |                         |     |         |
| R609     | EXBV4V332JV  | 1/16W 3.3K              | 1   |         |         |          |                         |     |         |
| R705, 06 | ERJ3GEYJ473V | 1/16W 47K               | 2   |         |         |          |                         |     |         |
| R707, 08 | ERJ3GEYJ223V | 1/16W 22K               | 2   |         |         |          |                         |     |         |
| R709, 10 | ERJ3GEYJ105V | 1/16W 1M                | 2   |         |         |          |                         |     |         |
| R715, 16 | ERJ3GEYJ183V | 1/16W 18K               | 2   |         |         |          |                         |     |         |
| R719, 20 | ERJ3GEYJ103Z | 1/16W 10K               | 2   |         |         |          |                         |     |         |
| R721, 22 | ERJ3GEYJ273V | 1/16W 27K               | 2   |         |         |          |                         |     |         |
| R723, 24 | ERJ3GEYJ104Z | 1/16W 100K              | 2   |         |         |          |                         |     |         |
| R725, 26 | ERJ3GEYJ150V | 1/16W 15                | 2   |         |         |          |                         |     |         |
| R727, 28 | ERJ3GEYJ1R5V | 1/16W 1.5               | 2   |         |         |          |                         |     |         |
| R729, 30 | ERJ3GEYJ472V | 1/16W 4.7K              | 2   |         |         |          |                         |     |         |
| R731     | EXBV4V331JV  | 1/16W 330               | 1   |         |         |          |                         |     |         |
| R920     | ERJ3GEYJ473V | 1/16W 47K               | 1   |         |         |          |                         |     |         |
| R928     | ERJ3GEYJ473V | 1/16W 47K               | 1   |         |         |          |                         |     |         |
|          |              |                         |     |         |         |          |                         |     |         |
| S201     | ESE11SV6     | SW, LASER ON/OFF        | 1   |         |         |          |                         |     |         |
| S301-06  | EVQ11G05R    | SW, PUSH                | 6   |         |         |          |                         |     |         |
| S307     | RSS3A007-1A  | SW, MODE                | 1   |         |         |          |                         |     |         |
| S308     | RSS2A010-1A  | SW, HOLD                | 1   |         |         |          |                         |     |         |
| S701     | RSS2B028-A   | SW, XBS                 | 1   |         |         |          |                         |     |         |
|          |              |                         |     |         |         |          |                         |     |         |
| VR11     | RRN3A05B33WL | VR, VOLTAGE ADJ.        | 1   |         |         |          |                         |     |         |
| VR701    | EVUTUFBI1C54 | VR, VOLUME              | 1   |         |         |          |                         |     |         |
|          |              |                         |     |         |         |          |                         |     |         |
| X501     | RSXZ16W9W01T | OSCILLATOR              | 1   |         |         |          |                         |     |         |
|          |              |                         |     |         |         |          |                         |     |         |
|          |              |                         |     |         |         |          |                         |     |         |
|          |              |                         |     |         |         |          |                         |     |         |

## ■ Cabinet Parts Location

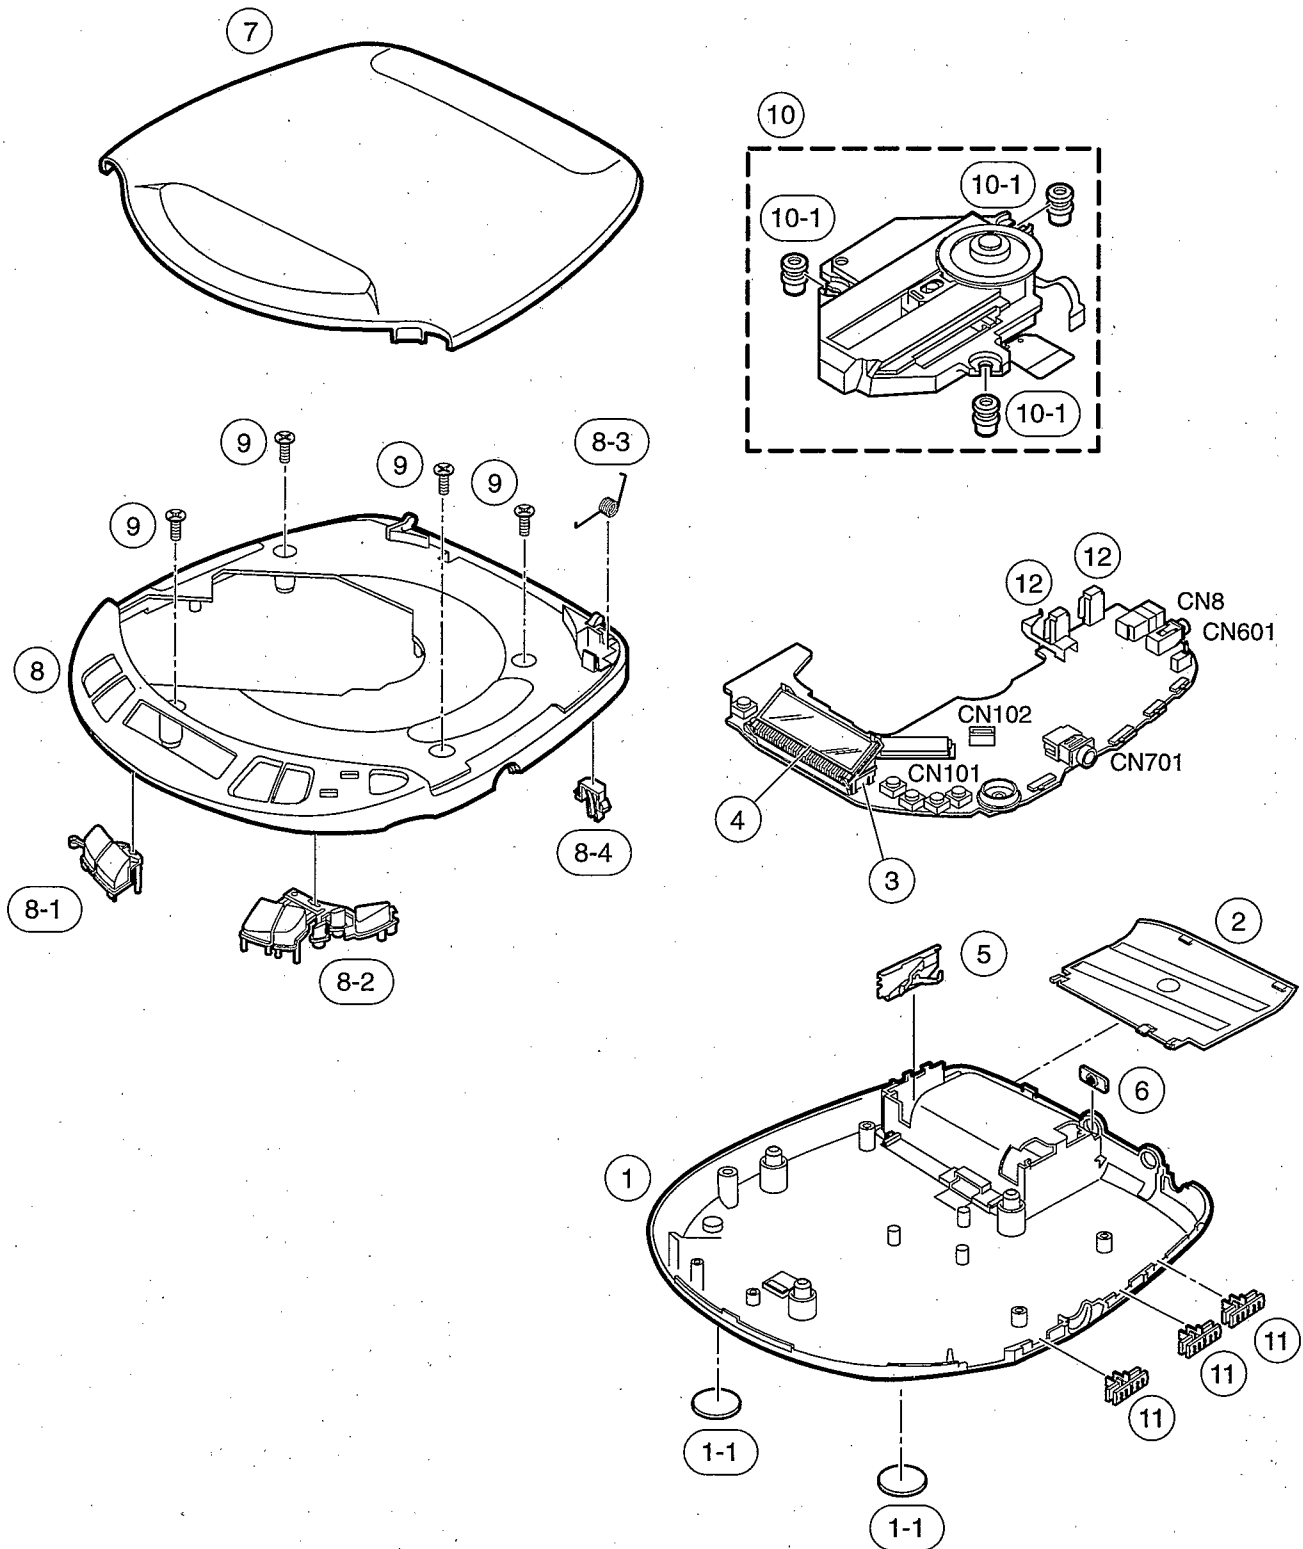

## ■ Packaging

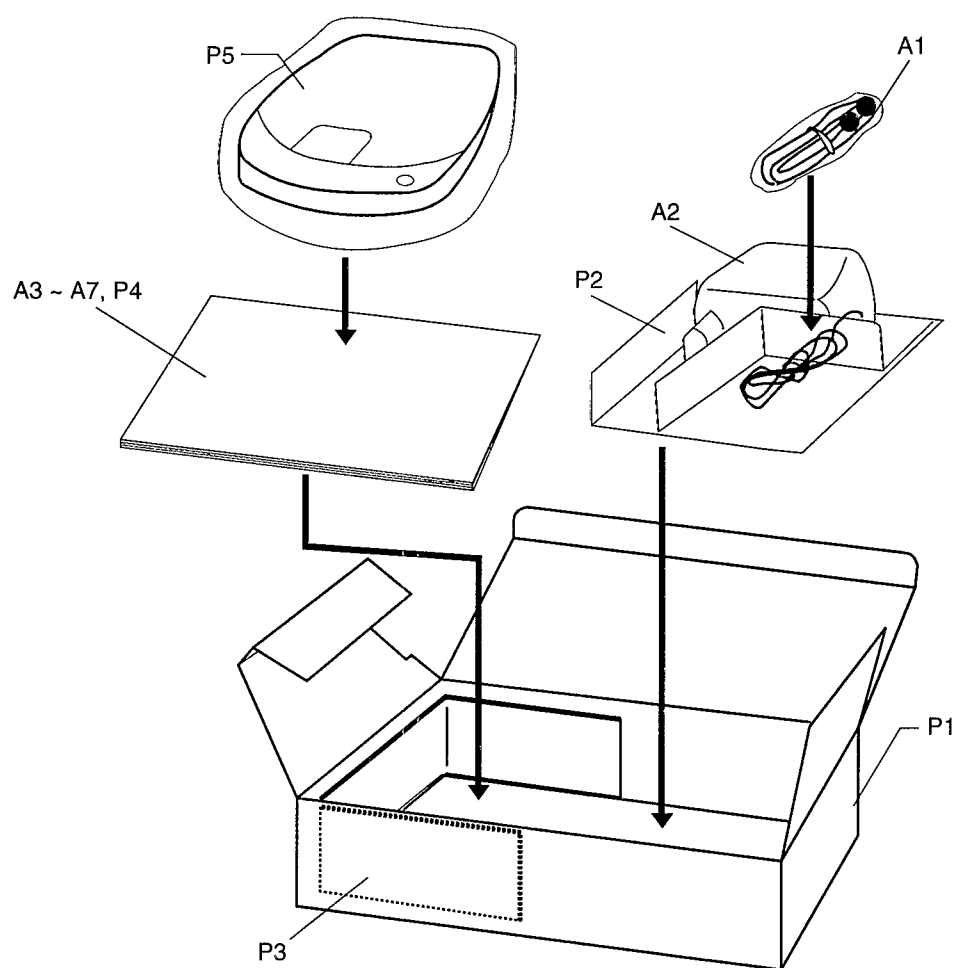

600