

Service Manual

COMPACT
disc
DIGITAL AUDIO

MASH^{*}
multi-stage noise shaping

※ • MASH is a trademark of NTT.

Portable CD Player
SL-S480



Colour

(A) Blue Type

(S) Silver Type

Areas

GH Hong Kong.

Traverse Deck: RAE0142Z Mechanism Series

Specifications

Audio

No. of channels:	2 channels (left and right, stereo)
Output voltage:	0.6 V(50 kohm)
Frequency response:	20 ~ 20,000 Hz (+0.5 dB, -1.5 dB)
S/N:	more than 96 dB*
Wow and flutter:	Below measurable limit
DA converter:	1 bit, MASH ※
Headphones output level:	max. 9 mW+9 mW/16 ohm (variable)

The above battery charge retention period totals apply when measured using a cycle of 4 hours of play followed by 15 hours of suspended operation. The play time may be less depending on the operating conditions.

General

Operation temperature range:	0 - 40 degree
Rechargeable temperature range:	5 - 40 degree
Power supply:	DC 4.5 V

Pickup

Light source:	Semiconductor laser
Wavelength:	780 nm

Power consumption

Power source:X-DSSP,ANTI-SHOCK OFF/ON	
When using AC adaptor:	2.8W/3.2W
When recharging:	Approx . 5.9W

Play time

(When used in hold mode, at 25 degree temperature and on flat and stable surface.)

Batteries used: X-DSSP ANTI-SHOCK OFF/ON

2 Alkaline batteries :	About 20h / About 13h
Rechargeable batteries :	About 10.5h/About 6.5h
4 Alkaline batteries :	About 45h /About 30h
2 Rechargeable and 2 Alkaline batteries:	About 30h / About 20h

Dimensions:	128(Wide)/25.7(High)/142(Depth)mm
Weight:	230 g without batteries 275 g with batteries
Recarging time:	About 3 h

*These specifications were measured in the X-DSSP ANTI-SHOCK OFF mode.

Note: Specifications are subject to change without notice.
Weight and dimensions are approximate.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic[®]

© 1997 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying and distribution is a violation of law.

Contents

	Page		
Precaution of Laser Diode	2	Checking the Operation Problems on	
Accessories	3	the Traverse Deck (Optical Pickup)	13
Location of Controls	3	Automatic Adjustment Results	
Power Supply Preparations	3, 4	Display Function (Self-check Function)	14, 15
Sequential Play (Basic Play)	4	Mesurements and Adjustments	15, 16
Accidental Operation Prevention Function	5	Outline of 10-Second Sound Keeper Technique	
Maintenance	5	Used for Prevention of Sound from Skipping	17
Other Play Methods	5	Type Illustration of IC's, Transistors and Diodes	17
Extra Digital Sound Shock Protector		Block Diagram	18 ~ 21
/Extra Anti-Shock Memory	6	Schematic Diagram	22 ~ 27
Using the Remote Controller	6	Printed Circuit Board and	
Using the Unit with Optional Accessories	6	Wiring Connection Diagram	28, 29
Cautions	7	Terminal Function of IC's	30 ~ 35
Concerning compact Discs	7	Supply of Rechargeable Battery Ass'y	
Troubleshooting Guide	7	as Replacement Parts	36
Handling Precautions for Traverse Deck	8	Caution in Use of Rechargeable Battery Ass'y	36
Operation Checks and Main		Replacement Parts List	36 ~ 39
Component Replacement Procedures	9 ~ 12	Cabinet Parts Location	40
		Packaging	41

Precaution of Laser Diode

CAUTION: This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pickup lens.
Wave length: 780 nm
Maximum output radiation power from pickup: 100 μ W/VDE

Laser radiation from the pickup lens is safety level, but be sure the followings:

1. Do not disassemble the optical pickup unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pickup lens for a long time.

ACHTUNG: Dieses Produkt enthält eine Laserdiode. Im eingeschalteten Zustand wird unsichtbare Leserstrahlung von der Lasereinheit abgestrahlt.


Wellenlänge: 780 nm
Maximale Strahlungsleistung der Lasereinheit: 100 μ W/VDE

Die Strahlung an der Lasereinheit ist ungefährlich, wenn folgende Punkte beachtet werden:

1. Die Lasereinheit nicht zerlegen, da die Strahlung an der freigelegten Laserdiode gefährlich ist.
2. Den werkseitig justierten Einstellregler der Lasereinheit nicht verstellen.
3. Nicht mit optischen Instrumenten in die Fokussierlines blicken.
4. Nicht über längere Zeit in die Fokussierlines blicken.

ADVARSEL: I dette a apparat anvendes laser.

[Bottom side]

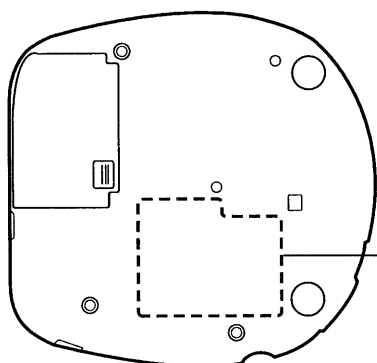


RQLS077-2

CLASS 1 LASER PRODUCT		VARO! Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömän lasersäteilylle. Älä katso säteeseen.
ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING. NÅR SIKKERHEDSÅFBRYDERE ER UDE AF FUNKTION, UNDGÅ UDSÆTTELSE FOR STRÅLING.		VARNING! Osynlig laserstråling når denne del er åben og snåren er urkoplet. Betrakta ej strålen.
VORSICHT: Unsichtbare Laserstrahlung, wenn Abdeckung geöffnet und Sicherheitsverriegelung überbrückt. Nicht dem Strahl aussetzen.	DANGER: Invisible laser radiation when open and interlock defeated. AVOID DIRECT EXPOSURE TO BEAM.	ADVARSEL! Usynlig laserstråling når deksel åbnes og sikkerhedsåbs brytes. Undgå eksponering for strålen. RQLS0077-2

Accessories

- AC adaptor(RFEA403H-S) 1pc.
- Stereo earphones(RFEV316P-K1S) 1pc.
- Wired remote controller(RFEV006PCKM) 1pc.
- Soft case(RFC0041-K) 1pc.
- Battery case(RFA0627-K4) 1pc.
- Rechargeable battery ass'y
(RFKFP3GAVT2S) 1pc.

Location of Controls

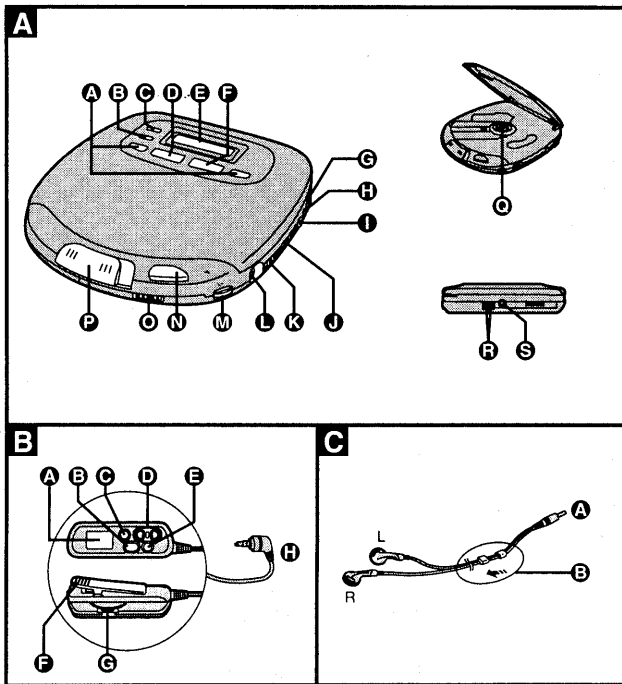

Portable CD player

- A** Skip/search buttons
(◀◀, ▶▶/◀◀, ▶▶)
- B** Memory/recall button
(MEMORY/RECALL)
- C** Repeat button (REPEAT)
- D** Stop/power off button
(■, POWER OFF)
- E** Display
- F** Play/pause button (▶ II)
- G** DC in jack (DC IN 4.5 V)
- H** Out jack (OUT)
- I** Optical digital out jack (OPT OUT)
- J** Play mode selector
(RESUME, NORMAL, RANDOM)
- K** Train/S-XBS selector
(TRAIN, S-XBS, OFF)
- L** Headphones jack ()
- M** Headphones volume control
(VOLUME)
- N** Open button (OPEN)
- O** Optical digital out/Extra anti-shock
memory switch
(OPT OUT/ANTI-SHOCK)

- P** Hold switch (HOLD-LOCK)
- O** Push button (PUSH)
- I** Connection terminal for battery
case
- S** Hole for car mounting base/bat-
tery case

Wired remote controller


- A** Display
- B** Play/stop/off button
- C** Repeat button (REPEAT)
- D** Skip/search buttons (◀◀, ▶▶)
- E** Light/hold button
(•LIGHT/ = HOLD)
- F** Clip
- G** Volume control
- H** Plug

Stereo earphones

- A** Plug
- B** Slider

Power Supply Preparations

Refer to specifications (cover page) for information on operating times when using rechargeable batteries or dry-cell batteries.

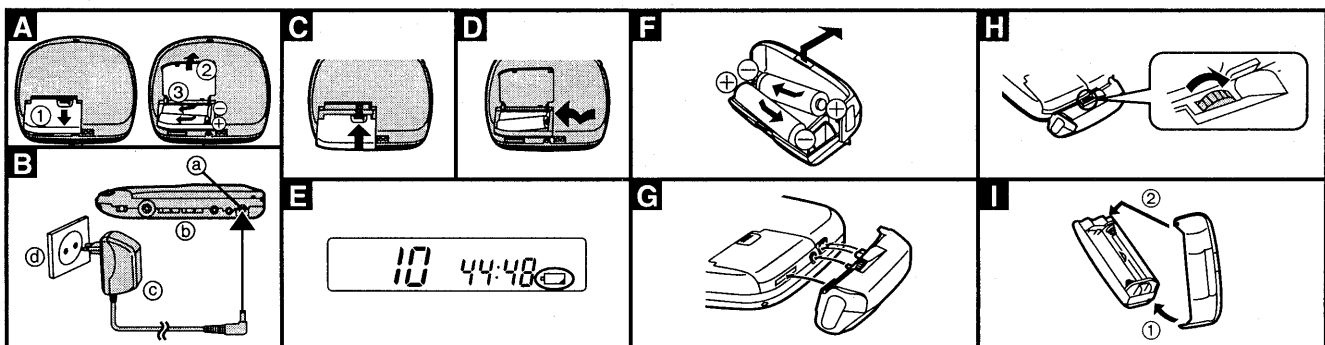

Using rechargeable batteries

Make sure to recharge the batteries before using them. The unit cannot be used to charge rechargeable batteries other than those specifically designed for it.

- Supplied batteries (RFKFP3GAVT2S)
- Optional batteries
(SH-CDB8D)

Recharging procedure

- 1** Insert the special rechargeable batteries into the unit.
A
- 2** Connect the AC adaptor. **E**
 - ① DC IN jack (DC IN 4.5 V)
 - ② Side panel of the unit
 - ③ AC adaptor
 - ④ AC power outlet

The configuration of the AC adaptor differs according to the area.
- 3** When recharging is complete, unplug the AC adaptor from the power outlet and the DC IN jack.

Notes

- It takes approximately three hours to fully recharge the supplied rechargeable batteries.
- Rechargeable batteries have a service life of approximately 300 charge-discharge cycles. If the operating time on one full charge becomes noticeably shorter than it used to be, the battery has reached the end of its service life and should be replaced.
- When recharging starts, the "48" charging indicator flashes on and off on the unit's display panel.

- The AC adaptor and rechargeable batteries may become warm while recharging is in progress. This is not a malfunction.
- Recharging may only be performed when the unit is powered off. (It is not possible to recharge the batteries while playing a CD.)

If the battery lid compartment comes loose **D**

Slide the lid back into place horizontally.

Removing batteries **D**

Push up on the battery in the direction indicated by the arrow. Then lift it out.

Using dry-cell batteries (not included)

After disconnecting the AC adaptor, insert two LR6 (UM-3) alkaline batteries.

The procedure for inserting and removing dry-cell batteries is identical to that for rechargeable batteries.

Using the AC adaptor

Connect the AC adaptor supplied.

Refer to "Using rechargeable batteries" for connection instructions.

Note

The unit is in the standby condition when the AC adaptor is connected. The primary circuit is always "live" as long as the AC adaptor is connected to an electrical outlet.

Battery indicator

This indicator flashes on and off when the batteries are almost out of power. Power is cut off completely a short while later.

Rechargeable batteries:

Recharge batteries.

Dry-cell batteries:

Replace batteries with new ones.

Notes

- The length of time the unit will continue to operate between when the battery indicator starts flashing and when the power is cut off differs depending on the type of batteries used.
- The battery indicator may not flash if rechargeable batteries, other than those designated by Panasonic, are used.

Using the battery case

The battery case allows you to extend the maximum playing time of the unit by loading an additional two LR6 (UM-3) alkaline batteries.

Notes

- When using the battery case, always insert batteries in the unit body as well. (The unit cannot be operated on the batteries in the external battery case alone.)
- Do not use rechargeable batteries in the battery case.
- If rechargeable batteries and dry-cell batteries are used together, make sure to use fully charged rechargeable batteries and new dry-cell batteries.
- When using four dry-cell batteries, do not mix new and old batteries.

1 Open the cover of the battery case and insert the batteries.

Insert the end marked (–) first.

2 Mount the battery case on the unit body.

Insert the protrusions on the battery case into the four indentations in the unit body.

3 Secure in place with the screw.

Reverse the above procedure to remove the external battery case.

For your reference:

The maximum playing time will differ depending on the type of batteries (rechargeable/dry-cell) loaded in the unit body.


If the cover of the battery case comes loose:

Insert the protrusions into the holes on either end of the lid.

Using the car adaptor (not included)

Be sure to obtain the car adaptor (SH-CDC9), available as an optional accessory. The car adaptor can be used to recharge the unit's batteries while in the car.

Sequential Play (Basic Play)

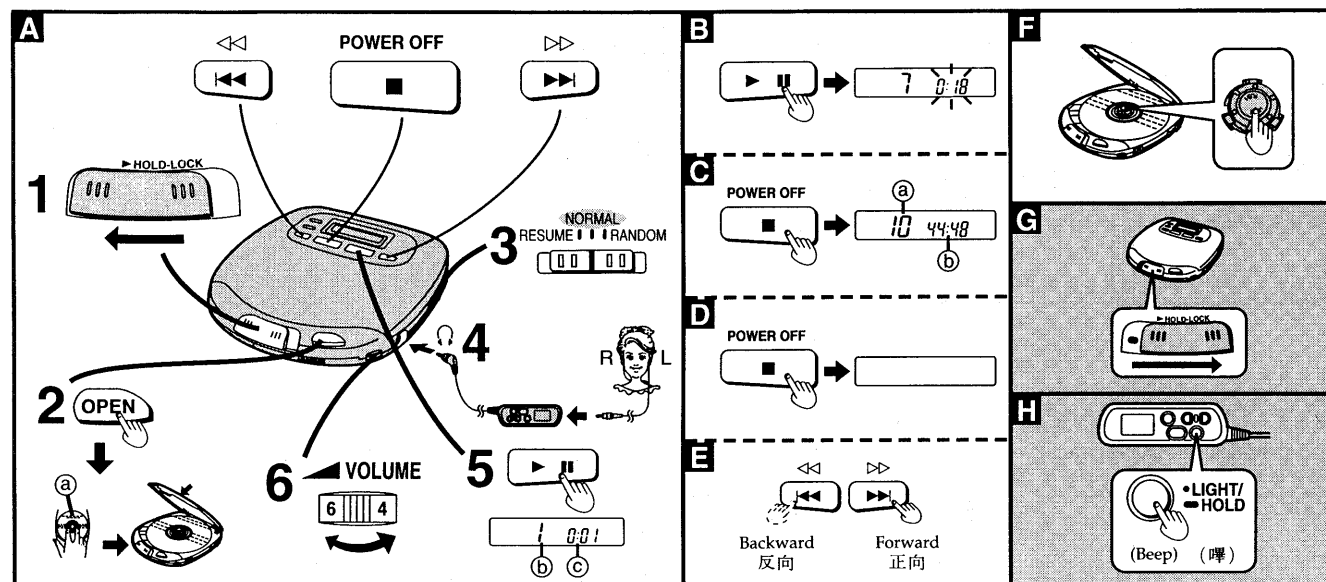

Following steps 1–6.

- ① Label side up
- ② Track number in play
- ③ Elapsed playing time of each track
- Play stops automatically when all the tracks have been played.
- If the unit has been connected to the car audio system, adjust the volume level between 4 and 6 on the unit, then adjust the volume level on the system.

To pause play

Press during play

To stop play

Press during play

④ Total number of tracks

⑤ Total playing time

To turn off the unit

Press during stop mode

Skip forward/backward (skip function)

Press during play

Rapid forward/backward (search function)

Press and hold during play.

- During program play (See page 5), these buttons are used to skip forward or back through the programmed sequence of tracks.
- During random play (See page 5), the skip buttons cannot be used to skip back to tracks that were played previously in the random sequence.
- During program play, random play or 1 track repeat play (See page 5), search operation is limited to the current track only.

Removing discs

After the disc has stopped rotating, press the PUSH button to release the disc. (To protect the disc, never open the cover while it is playing.)

Note

Never insert foreign objects into the unit body.

"no disc" indication

This indication appears for about 30 seconds if the ► button is pressed when no disc is loaded in the unit or if the disc is not completely seated.

"open" indication

This indication appears for about 10 minutes when the cover is opened. (However, the indication does not appear when the unit is powered off.)

Auto power off function

If the unit is left in stop or paused status for approximately 10 minutes, the unit powers itself off automatically in order to prevent the battery from running down.

Accidental Operation Prevention Function

This function causes the unit to ignore short, accidental button presses. (When the unit is in hold status, the cover will not open even when the OPEN button is pressed.)

The misoperation prevention function prevents the following:

- Powering on the unit accidentally (which can cause the batteries to go dead).
- Play being cut off unexpectedly in the middle of a selection:
- The cover opening unexpectedly in the middle of a selection.

The unit body and remote control are equipped with a HOLD-LOCK slider and a HOLD button, respectively, and each operates independently of the other to activate hold status.

To use the accidental operation prevention function

Slide the HOLD-LOCK slider on the unit body to the HOLD position. (The remote control still functions.)
Hold down the HOLD button on the remote control until the confirmation beep sounds. (The controls on the unit body still function.)

"ho!d"/"HOLD" Indication

Unit body: When the unit is in hold status, pressing any operation button (other than the OPEN button) causes the indication "ho!d" to appear on the display.

When the unit is powered off

The "ho!d" indication appears only when the ► button is pressed.

Remote control: The indication "HOLD" appears on the display when hold status is activated.

Maintenance

Maintaining the unit

Wipe the unit with a soft cloth. Remove stubborn dirt using a cloth which has been dipped in water or soapy water and wrung out, and then wipe dry.


- If you intend to use a chemical cleaning cloth, read its directions first.
- Do not use alcohol or paint thinners.

Maintaining the lens

Open the lid and clean the lens as shown in the figure.


Use a cotton swab to gently wipe off any finger-prints.

Recommended product: Lens cleaner kit (SZZP1038C)

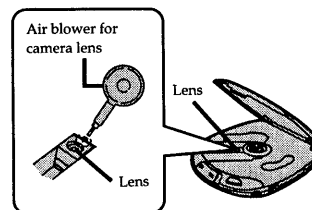

Other Play Methods

The letters such as A in the various illustrations refer to the descriptions in the "Location of Controls" section.

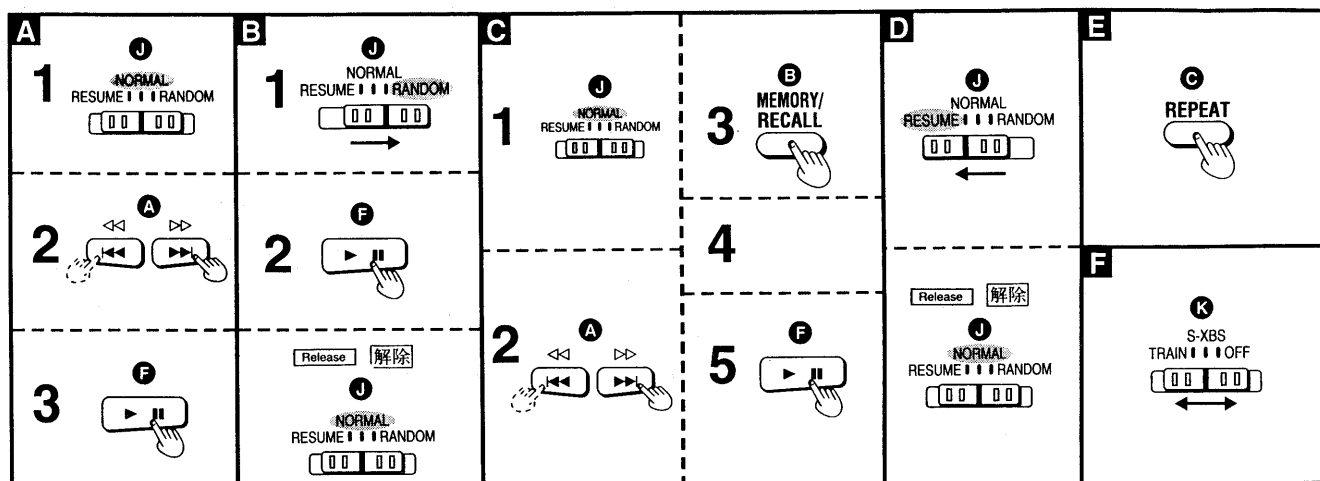

Skip play A

The disc plays from the specific track through to the end, then play stops automatically.

Preparation: Put unit in stop mode. (See page 4)

Following steps 1-3.

In step 2, select the desired track.

Random play B

Following steps 1-2.

For your reference:

- It is also possible to press the ► button while the unit is in stop status to change the first track to be played. (All tracks are played eventually, regardless of which is played first.)
- Program play is not possible in the random mode.

Program play C

Up to 24 tracks can be entered in the programmed sequence.

Preparation: Put unit in stop mode. (See page 4)

Following steps 1-5.

In step 2, select the desired track.

In step 3, register in sequence.

(The indication "M" and the programmed sequence appear on the display panel.)

In step 4, repeat steps 2 and 3 to program all the desired tracks.

■ To program the same track in the sequence more than once

After step 3, press MEMORY/RECALL the desired number of times.

■ If "f" is displayed

No more tracks may be added to the sequence.

■ To confirm the contents of the programmed sequence

Press MEMORY/RECALL while the disc is playing. (The number of the programmed tracks appear on the display panel in sequence.)

■ To delete the entire programmed sequence

Press ■, POWER OFF.

Resume play D

This function allows you to listen from the beginning to the track where play stopped because the unit was powered off (or switched to stop status). It is useful when listening to CDs in the car, etc.

For your reference:

- If the RESUME, NORMAL, RANDOM (play mode switch) slider is put in the RESUME position, the all-repeat function will be activated automatically as soon as the unit is powered on.
- If power is cut off near the end of a track (power off status), playback may resume from the beginning of the next track in some cases.
- If the unit is powered off while a disc was playing and then a new disc is inserted, play will begin from the middle of the new disc because the unit remembers the position where play stopped on the old disc.

Repeat function E

Press REPEAT while disc is playing or when unit is in stop status.

For your reference:

If REPEAT is pressed during program play, only the tracks in the programmed sequence are repeated. (The indication "ALL" is not displayed.) The setting is switched in the sequence indicated below each time REPEAT is pressed.

1-track repeat (1) ←

One track is repeated.

All-track repeat (ALL) ←

All the tracks on the disc are repeated.

Cancel

Changing the sound quality F

S-XBS:

Select this setting to boost the low-range response.

TRAIN:

Select this setting to avoid annoying other passengers with noise from your earphones while riding on the train, or to reduce fatigue when listening for a long period of time.

OFF:

Select this setting to turn off the S-XBS and TRAIN functions.

Note

The sound quality setting does not affect the output from the OUT (analog output) and OPT OUT (optical digital output) jacks.

Extra Digital Sound Shock Protector/Extra Anti-Shock Memory


SL-S480

This function minimizes sound interruption when vibrations are encountered by utilizing audio data that has been stored ahead of time (up to approximately 40 seconds' worth).

Optical digital out jack cannot be used when the X-DSSP, ANTI-SHOCK slider is in the ON position.

Notes


- The position of the X-DSSP, ANTI-SHOCK slider can be changed during play, but this may cause a slight interruption in the sound because the disc's rotational speed changes.
- During X-DSSP, EXTRA ANTI-SHOCK MEMORY operation, the disc rotates at a higher rate than usual in order to collect extra audio data. This may cause the batteries to run out faster and could result in a slight increase in disc rotation noise.

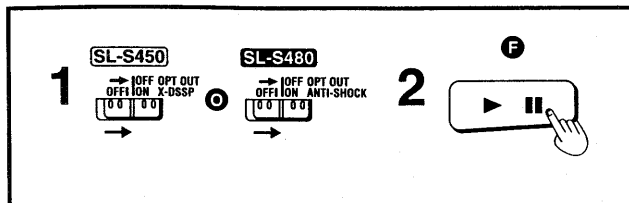

M.RESERVE indicator status	Unit body status	Play status (audio data status)
	Stable	Normal (plenty of data is stored)
	Bump encountered (considerably unstable state)	Normal (stored data is used)
	Bumping stops	Normal (data again starts to be stored)
	Bumps continue repeatedly	Sound is interrupted (data buffer empty)

Using the unit with an audio system

The X-DSSP, EXTRA ANTI-SHOCK MEMORY uses digital signal compression technology. It is recommended that the X-DSSP, ANTI-SHOCK be kept in the OFF position if the unit is connected to a home audio system.

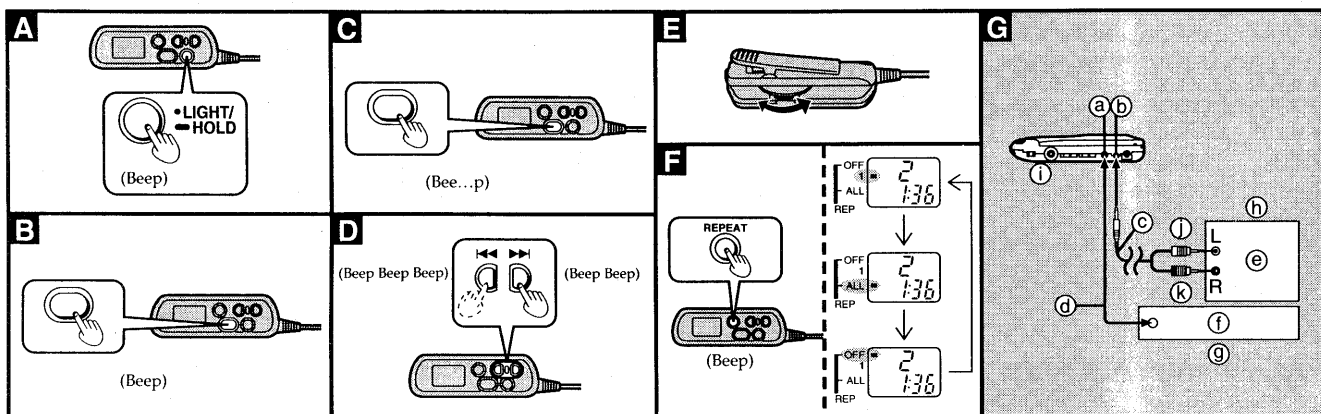

Using the Remote Controller

The wired remote controller can be operated regardless of the hold mode of the unit

Display panel illumination

When hold status is canceled and the remote control is operated, the display panel illuminates for approximately five seconds. This is useful when operating the unit in a dark location.

Also, the display panel illuminates when the •LIGHT/•HOLD button is pressed once while the unit is in hold status.

Operation confirmation beep

When an operation button is pressed, a confirmation beep sounds. However, no confirmation beep sounds when the •LIGHT/•HOLD button is pressed once (causing the display panel to illuminate). Refer to the explanations in parentheses () in the illustration above, etc., for information on the different types of confirmation beeps that sound.

How to use the wired remote controller

Preparation:

Release the remote controller from the hold mode. Hold down until "HOLD" indication disappears.

To start play

Press once during off or stop mode.

To stop play

Press once during play.

To turn off the unit

Press and hold during play or stop mode.

Skip forward/backward

Press once during play

▶▶: Forward direction

◀◀: Backward direction

Rapid forward/backward

Press and hold during play.

To adjust the volume

When adjusting the volume using the remote controller, position the volume control on the unit to between 4 and 6.

How to use the repeat button

Press during play or stop mode.

Each time you press REPEAT, the repeat function changes as follows.

One track repeat

↓

All tracks repeat

↓

Cancel

Note

When the repeat button is operated, the sound will be interrupted for an instant. This is normal and not indicative of a malfunction.

Using the Unit with Optional Accessories

Using the unit with an audio system

Using the stereo connection cable (not included), you can hear CDs on your audio system.

- Connect the cable to the amplifier after turning off its power.
- Do not connect the cable to the PHONO jacks on the amplifier.

- Obtain the optional connecting cable if the amplifier comes with mini-phone jacks.

- Adjust the volume level on the amplifier.

- ① Optical digital out jack
- ② OUT jack
- ③ Stereo connection cable (not included)
- ④ Optical cable (not included)
- ⑤ To CD or AUX terminals
- ⑥ To optical digital in jack
- ⑦ MD recorder etc.
- ⑧ Amplifier
- ⑨ Side panel of the unit
- ⑩ (White)
- ⑪ (Red)

- To use the player with an optical cable, use the AC adaptor and check that the X-DSSP, ANTI-SHOCK selector is OFF. Operation is not possible when rechargeable batteries or dry cell batteries are used to power the player.

Using the unit with a car audio system stereo

Items to be purchased

For connection to the car audio system:

- Car stereo cassette adaptor (SH-CDM9A/SH-CDM10A)

For securing the unit and connecting the power supply:

- Car mounting kit (SH-CDF20)
- Car mounting arm, Car mounting base

Note

It may not be possible to use the unit with some types of car stereo owing to restrictions imposed by the construction of the car stereo cassette adaptor.

For further details, refer to the instructions of the part concerned.

Cautions

Rechargeable batteries

- Only the RFKFP3GAVT2S, SH-CDB8D batteries can be used.
- If the power delivered by the batteries lasts for a very short time after recharging, it means that the batteries' service life is over. Do not use them any more.
- Recharging already charged batteries will shorten their service life.
- When recharging batteries for the first time or when they have not been used for a long period of time, the play time may be shorter than usual. In a case like this, repeatedly recharge and discharge the batteries. This will restore them to their regular state.
- Do not allow any metal objects to touch the terminals of rechargeable batteries since this may cause short-circuiting which is dangerous.
- Do not insert rechargeable batteries into the battery case.

Dry cell batteries/rechargeable batteries

To prevent damage to the batteries and electrolyte leakage, heed the following points.

- Align the \oplus and \ominus polarities properly when inserting the batteries.
- Do not mix different types or makes of batteries or old and new batteries.
- Remove the batteries if you do not plan to use the unit for a long period of time.

- Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.
- Do not peel off the plastic covering on the rechargeable batteries. Short-circuiting may occur which is dangerous.

Carrying dry cell batteries/rechargeable batteries around

When putting dry cell or rechargeable batteries in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.

Be absolutely sure to carry the rechargeable batteries in the battery carrying case.

When driving a car

In the interest of traffic safety, do not operate the unit while driving.


When purchasing rechargeable batteries

As a safety precaution, the portable CD players made by Panasonic have a construction designed to make it impossible to recharge ordinary batteries.

To use rechargeable batteries, be absolutely sure to purchase the rechargeable Ni-Cd batteries designed especially for this unit.

Special rechargeable Ni-Cd batteries:
RFKFP3GAVT2S, SH-CDB8D (set of 2)

For details, check with your dealer.

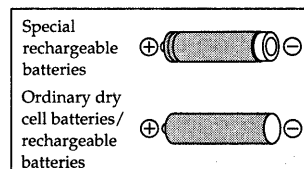

AC adaptor

- Handle the AC adaptor carefully. Improper handling is dangerous.
 - Do not touch it with wet hands.
 - Do not place heavy objects on top of it.
 - Do not forcibly bend it.
- Be sure to connect only the AC adaptor provided with the unit.
- Disconnect the AC adaptor from the power outlet if the unit is not going to be used for a long time.

Unit

No altering or remodeling

This can cause malfunctioning.

No dropping or strong impacts

This may damage the unit.

Locations to be avoided

Avoid using the unit in the following locations since they can cause malfunctioning.

- Bathrooms and other moisture-prone places.
- Warehouses and other dusty places
- Very hot places near heating appliances, etc.


Do not leave the unit exposed to direct sunlight for long periods of time

This may deform or discolor the cabinet and may also cause malfunctioning.

Precautions for Listening with the Headphones

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headset is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Concerning compact Discs

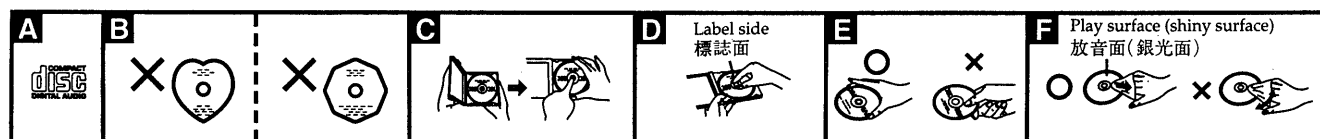

Only compact discs bearing this mark can be used with this unit. **A**
However, continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit. **B**

How to remove a disc from its case **C**

How to store the disc in its case **D**

How to hold a disc **E**

If the surface is dirty **F**

Wipe it with a damp cloth and then wipe dry. Wipe from the center toward the outer circumference.

If moisture has formed on a disc

When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe it off using a soft dry cloth.

When storing discs

- Avoid locations which are
 - Exposed to direct sunlight.
 - Susceptible to high levels of humidity or dust.
 - Directly exposed to heat from a heating appliance.
- On top of a car dashboard or near the rear window.

Handling precautions

- On the label side (the side with writing)
 - Do not write anything using a pencil, ball-point pen, etc. Do not stick paper or labels.
- On the disc (shiny) side
 - Handle this side carefully to keep it free from fingerprints or scratches. Do not use record cleaners, solvents, etc.

Troubleshooting Guide

First, consult the table below. If the problem persists, contact the dealer from whom you purchased the unit.

Problem	Check this
Cannot open/close cover.	<ul style="list-style-type: none"> Is the disc properly secured in place? Is the unit body in hold status?
Cannot play discs.	<ul style="list-style-type: none"> Is the unit in hold status? Is the disc properly secured in place? Is there moisture condensation on the lens? (Wait for about an hour and then try again.)
Cannot remove disc.	Did you press the PUSH button to release the disc?
Tracks on disk do not play in order, starting with the first track.	Is the RESUME, NORMAL, RANDOM (play mode switch) slider in the NORMAL position?
Cannot hear music—too noisy.	<ul style="list-style-type: none"> Are the earphone plug and the remote control plug inserted all the way? Are the plugs dirty?
TV picture is distorted. Radio reception is noisy.	Are you using the unit body too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)


■ Handling Precautions for Traverse Deck

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body.

So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

● Handling of traverse deck (optical pickup)

1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
2. The short land between the No. ⑫ (LD GND) and No. ⑬ (LD) pins on the flexible board (FFC) is shorted with a solder build-up to prevent damage to the laser diode. To connect to the PC board, be sure to open by removing the solder build-up, and finish the work quickly.
3. Take care not to apply excessive stress to the flexible board (FFC).
4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.


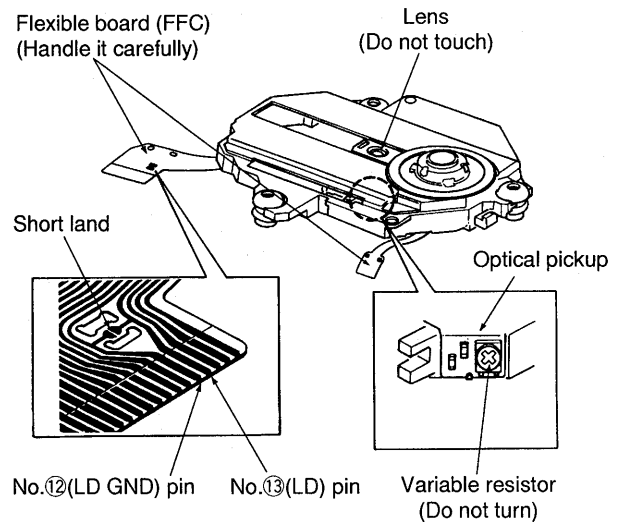


● Grounding for electrostatic breakdown prevention

1. Human body grounding
Use the anti-static wrist strap to discharge the static electricity from your body.
2. Work table grounding
Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed, and ground the sheet.

Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

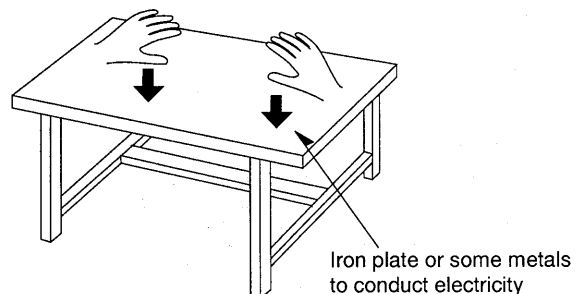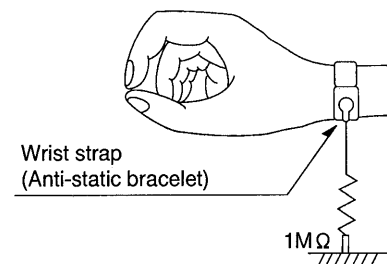

■ Operation Checks and Main Component Replacement Procedures


- NOTE**
1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
 2. For reassembly after operation checks or replacement, reverse the respective procedures. Special reassembly procedures are described only when required.
 3. [] indicates parts No.

1. Checking for the main P.C.B.

〈Checking for the main P.C.B. (Component side)〉

Step 2


Pressing the OPEN button, open the CD cover ass'y.

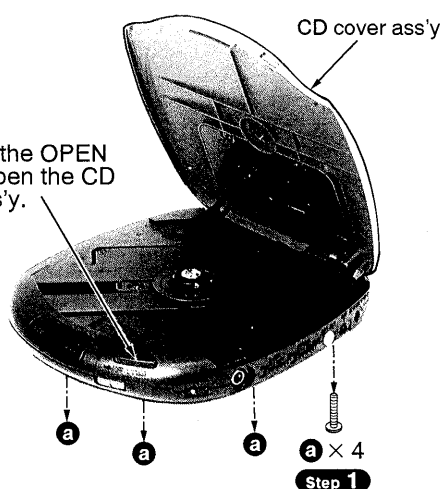



Step 1

Step 4

Sustain the traverse deck with the floating rubber inserted screws and nuts as shown below.

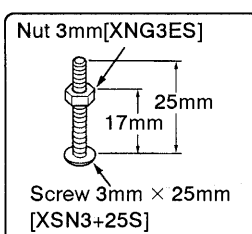

Insulator sheet

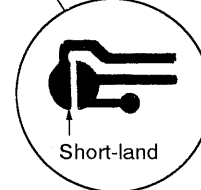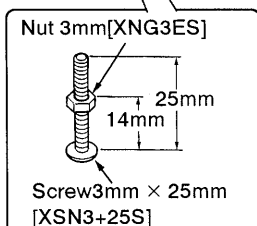


Step 5

Short-circuit the land by soldering.

Step 3


Open the intermediate cabinet ass'y in the direction of arrow.

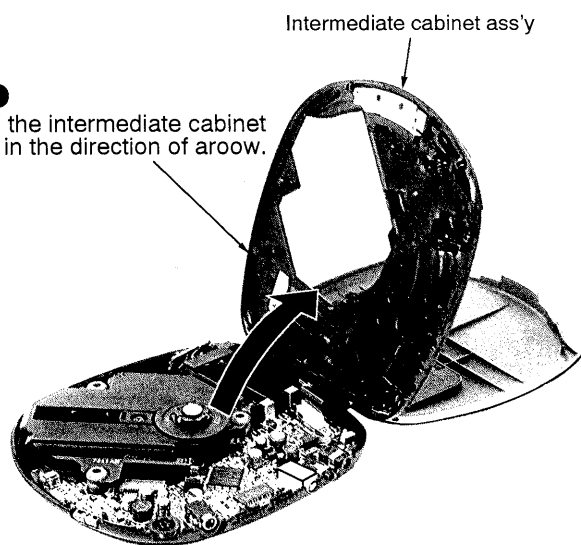


NOTE

- After checking, unsolder the short land to open circuit.
- The tip of screw must not protrude above the floating rubber.
- To keep insulation, place the insulator sheet (paper etc.) between the main P.C.B. and the head of screws.


- Check the main P.C.B. (Component side) as shown below.

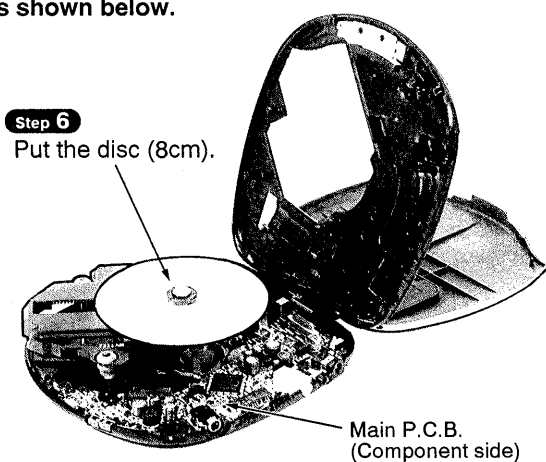


〈Checking for the main P.C.B. (Solder side)〉

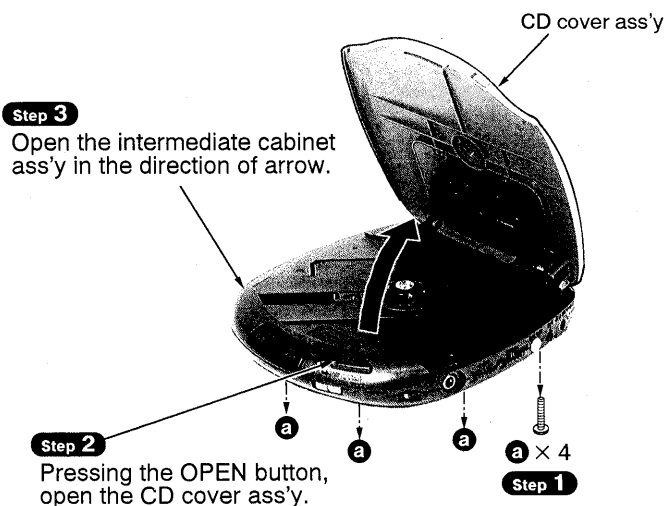

- Step 7**
Align the floating rubber with the boss.

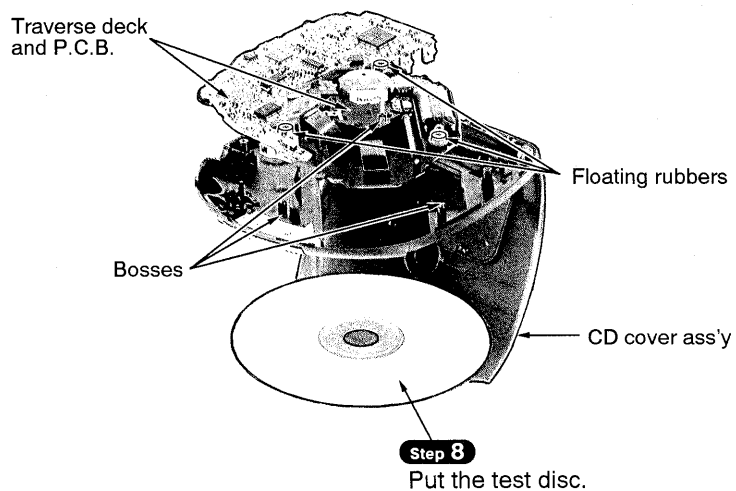

- Check the main P.C.B. (solder side) as shown below.


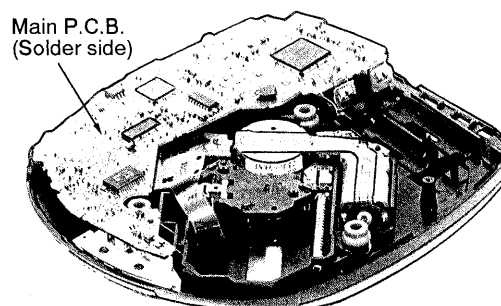


NOTE

After checking, unsolder the short land to open circuit.


Notice for installation of switch knobs

- Make sure the bosses of switch are fin in the knobs of switch.

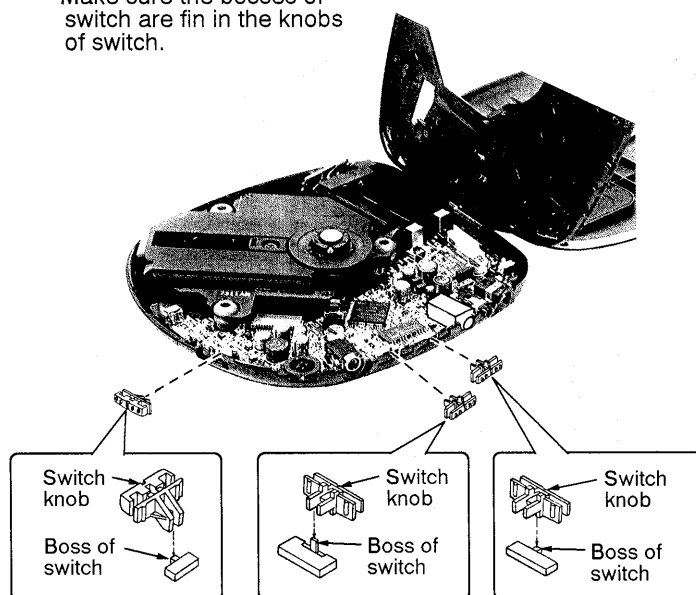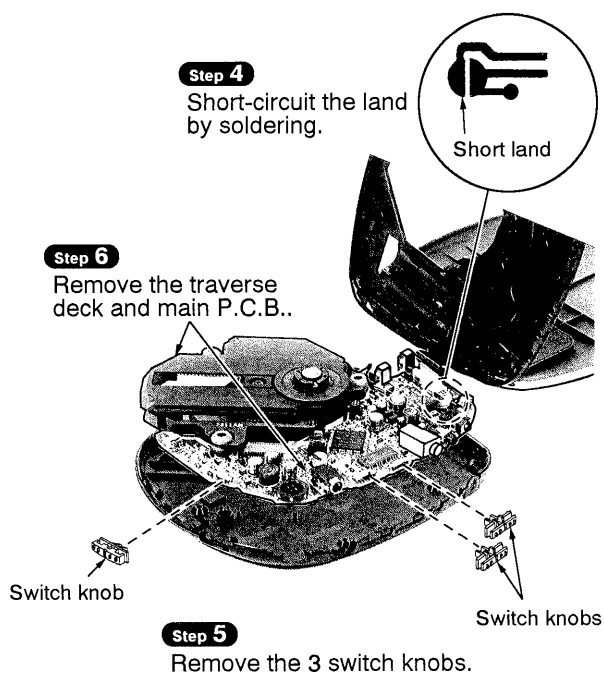

2. Replacement for the traverse deck

- Follow the **Step 1** ~ **Step 3** in item 1 on page 9.


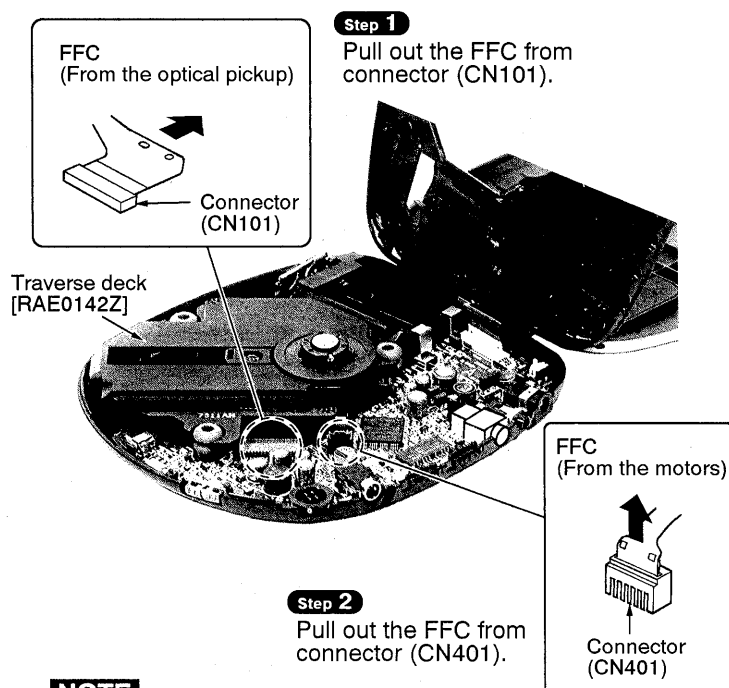


NOTE

Solder the point between pin 4 (LD) and pin 5 (GND) of FFC board.
(Refer to "Handling Precautions for Traverse Deck" on page 8.)



3. Replacement for the CD cover ass'y and LCD

- Follow the **Step 1** ~ **Step 3** in item 1 on page 9.

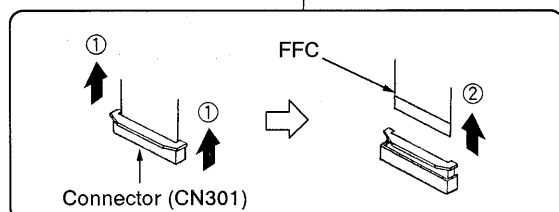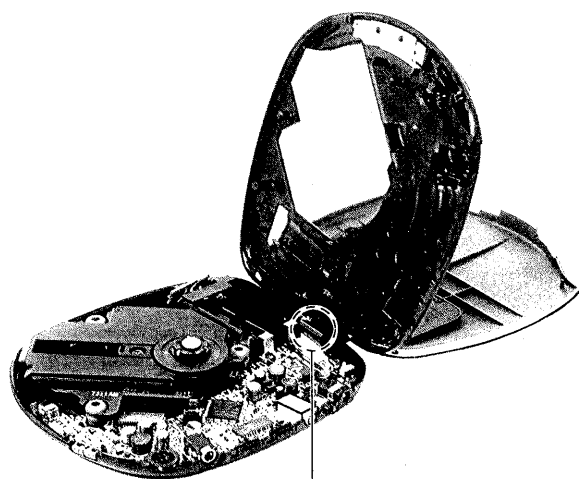


Step 1

Remove the FFC from the connector (CN301).

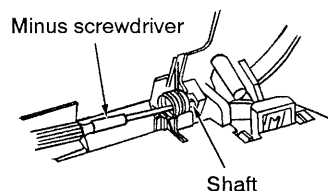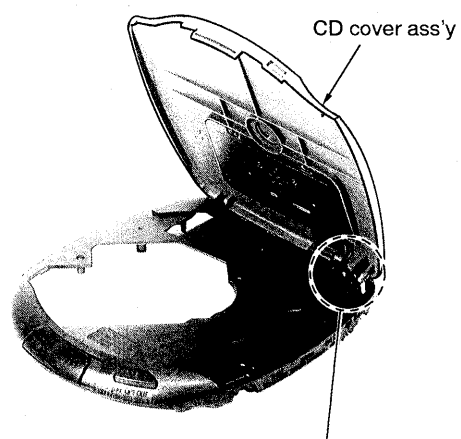

Step 2

Push the shaft with the thin minus screwdriver.


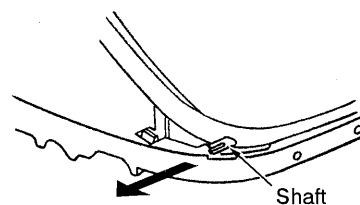


Step 3

Pull out the shaft.

Step 4



Remove the CD cover ass'y from rib.

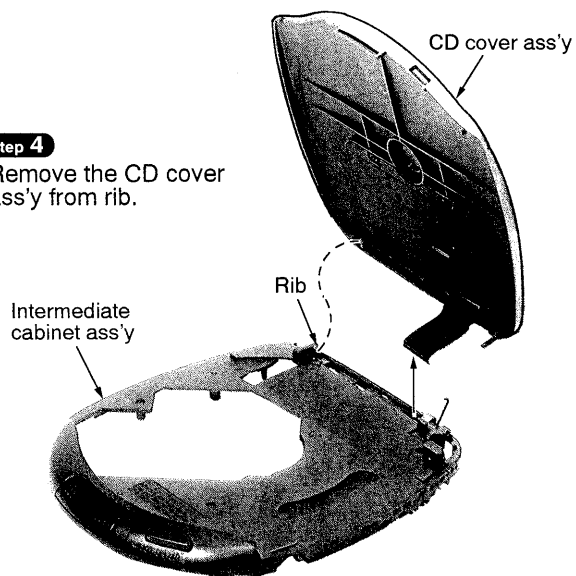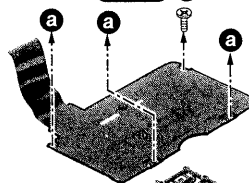**Step 5** a × 4**Step 6**



Remove the lid cover.

Step 7


Remove the operation button.

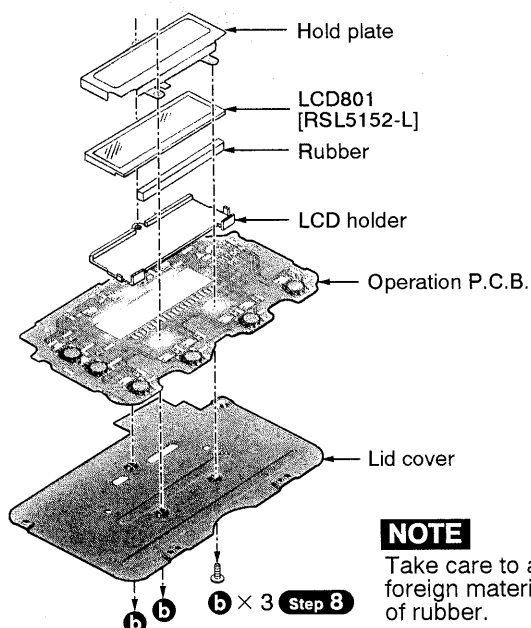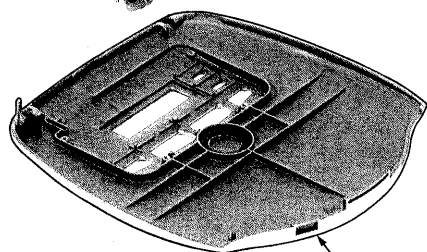**NOTE**

Take care to avoid the dust or foreign material on the surface of rubber.

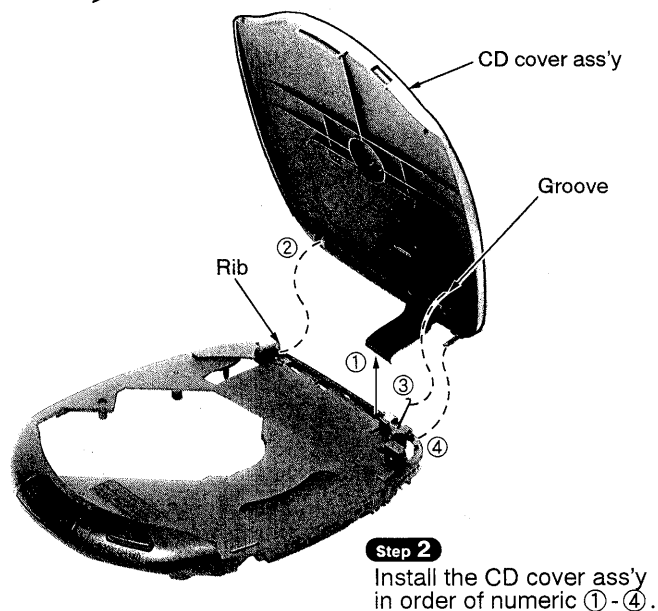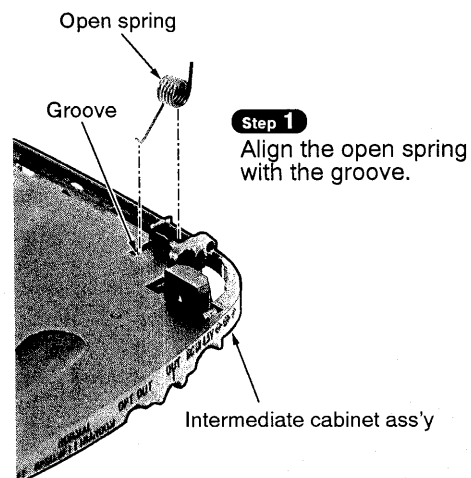Reassembly procedures of CD cover ass'y**Step 3**


Close the CD cover ass'y.

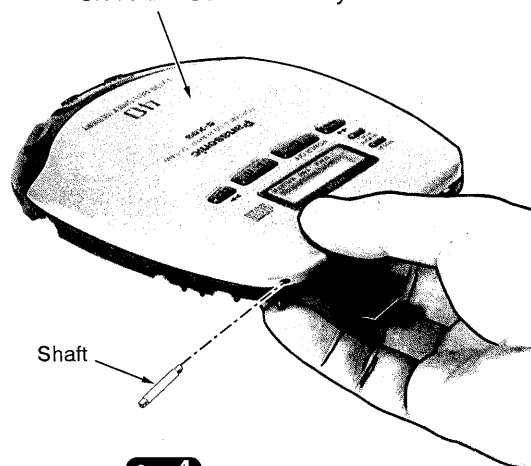**Step 4**

Holding the CD cover ass'y not to be detached the open spring and push the shaft, install the shaft.

■ Checking the Operation Problems on the Traverse Deck (Optical Pickup)

Make sure to follow the procedures below to check the operation problems of the traverse deck (optical pickup) before replacing it. Replace the traverse deck only after the problem is identified.

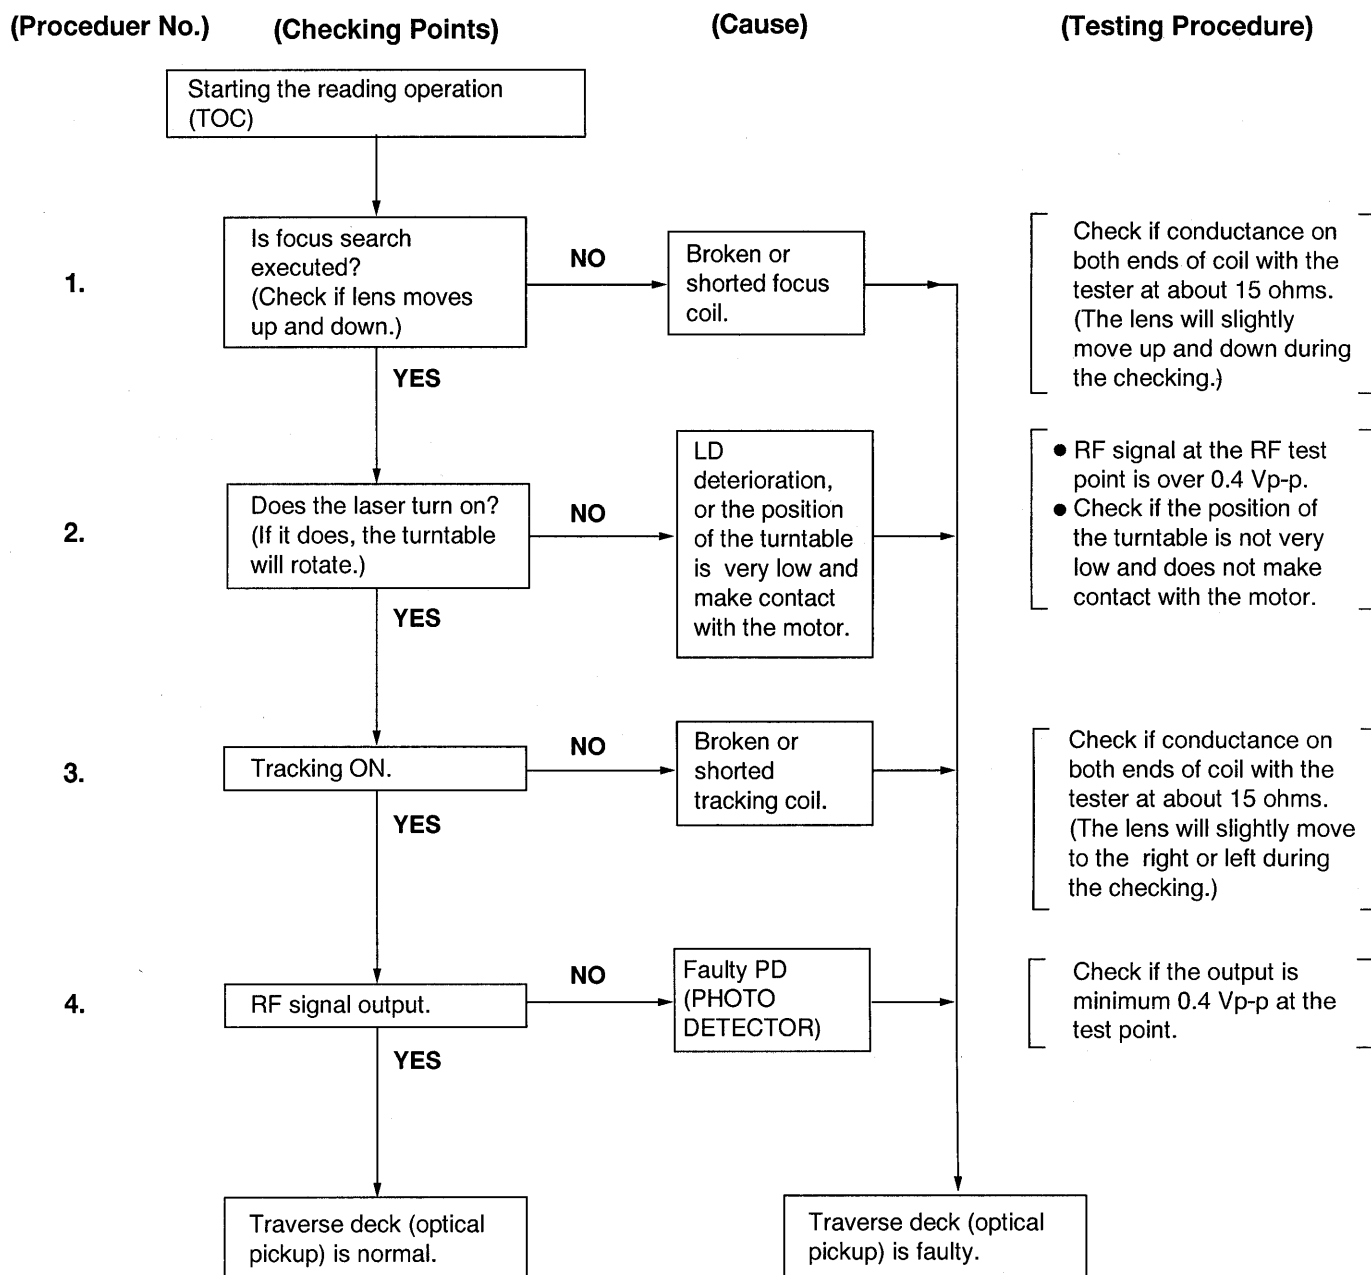

※ Replace the traverse deck.

- Check electrical circuit.
- Check for flaws on disc or if it is warped or not centered.

● Check the operations described below on the traverse deck after replacing it.

* Checking Skip Search

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (in both the forward and reverse directions).

* Checking Manual Search

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and reverse directions).

* Checking Playability

1. Play the 0.7 mm black dot and the 0.7 mm wedge on the playability test disc (SZZP1054C) and verify that no sound skip or noise occurs.
2. Play the middle tracks of the uneven test disc (SZZP1056C) and verify that no sound skip or noise occurs.


■ Automatic Adjustment Results Display Function (Self-check Function)

On this unit (SL-S480), each automatic adjustment result are displayed on the LCD. This function is convenient to check or identify which automatic adjustment circuit is incorrect. The followings are the contents of the automatic adjustment result displays (self-check function).

● How to display automatic adjustment results

1. Load the test disc (SZZP1054C).
2. Press the ◀◀ (SKIP/SEARCH) and ▶▶ (SKIP/SEARCH) Buttons simultaneously and hold them, and additionally press the ▶/|| (PLAY/PAUSE) Button.
3. Press the ■ (STOP/POWER OFF) Button once.
4. An automatic adjustment result is displayed on the LCD.

● Display of automatic adjustment results (self-check function)

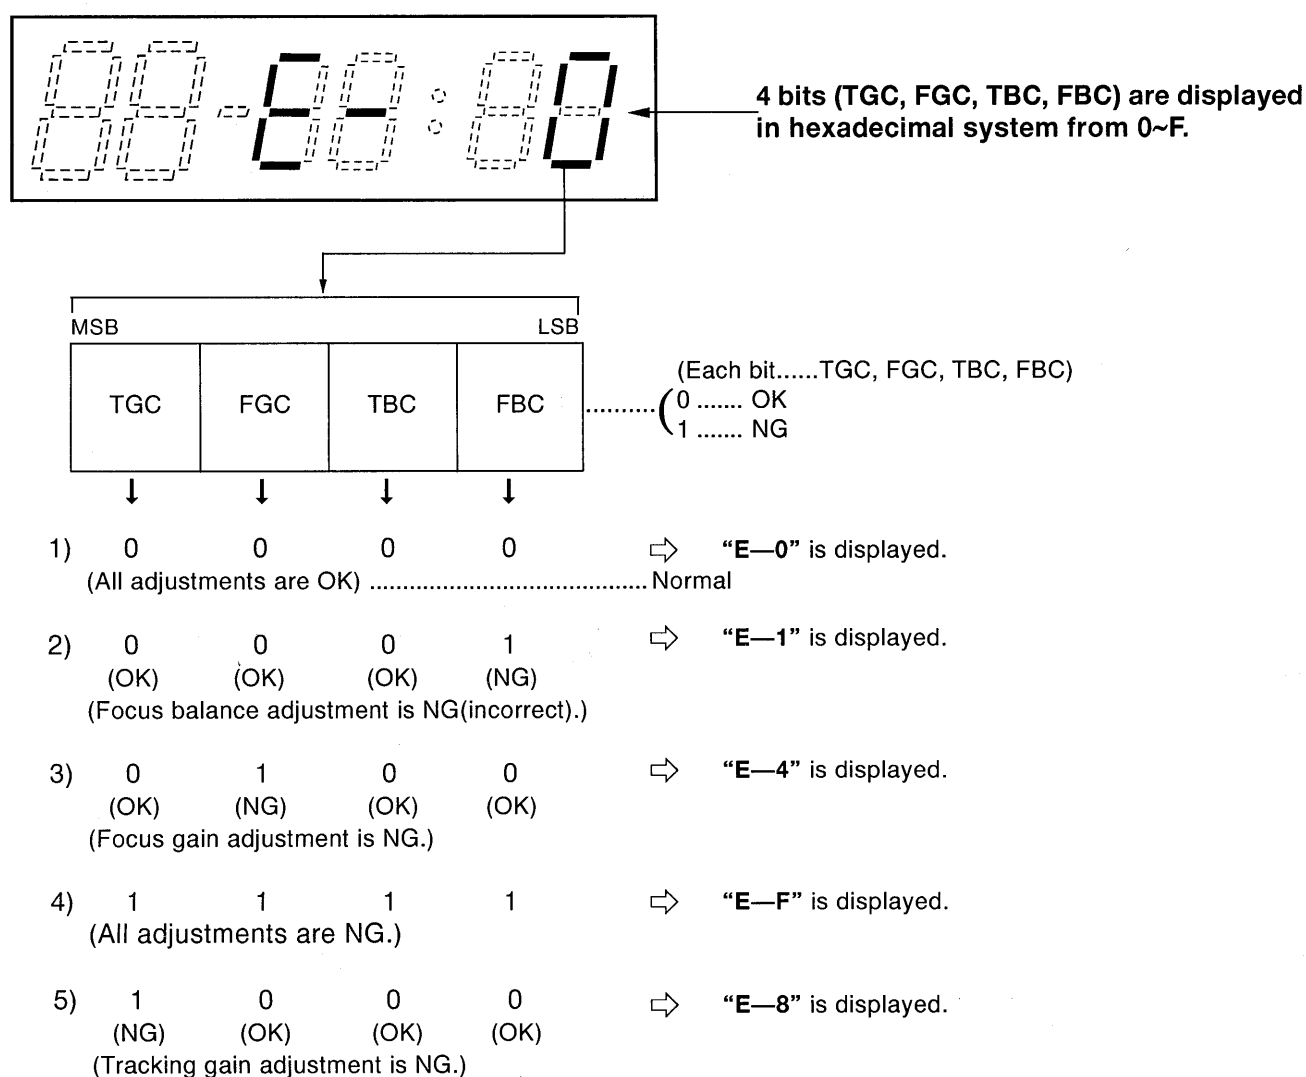

Note: If any other disc than the test disc (SZZP1054C) is used, an "E—8" may be displayed.

〈Example〉 **Follow the below steps when “E—1” is displayed.**

(Cause: Focus balance (FBC) is set beyond the limit.)

- Check if
 - (1) the waveform or voltage of the focus servo circuit is correct.
 - (2) the optical pickup returns to the normal state by exchanging the traverse deck.

Follow the below steps when “E — 4” is displayed.

(Cause: Focus gain (FGC) is set beyond the limit.)

- Check if
 - (1) the waveform or voltage of the focus servo circuit is correct.
 - (2) the focus coil of the optical pickup is correct (around 15 ohms).
 - (3) the optical pickup returns to the normal state by exchanging the traverse deck.

Follow the below steps when “E — F” is displayed.

(Cause : All adjustments (TGC, FGC, TBC, FBC) are set beyond the limit.)

- Check if
 - (1) the optical pickup returns to the normal state by exchanging the traverse deck.
 - (2) the waveform or voltage of the servo IC's (IC101, 501) are correct.

Note:

It is not always necessary to exchange the traverse deck when an error message is displayed. Be sure to check if the circuit is defective or not before exchanging the traverse deck.

Note:

If any other disc than the test disc (SZZP1054C) is used, an error message may be displayed. This is not a malfunction.

■ Measurements and Adjustments

Warning: This product uses a laser diode. Refer to caution statements on page 2.

ACHTUNG: ● Die lasereinheit nicht zerlegen.
● Die lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

● Measuring instruments and special tools

● **Test discs**

1. Playability test disc (SZZP1054C)
2. Uneven test disc (SZZP1056C)

● Musical program disc (ordinary)

- DC voltmeter
- Lead wire (for test points)

● Test short land

Short-circuit the lands of the laser ON/OFF switch (S201) by soldering them. It turns “ON” position. (Refer to below **Fig. 1** or printed circuit board and wiring connection diagram for short land location on page 26.)

Note: Remove the solders from the lands after adjustment.

● Adjustment point

- Notes:** 1. Please refer to the printed circuit board and wiring connection diagram for test point locations on page 26.
2. Take care to connect CN101 and CN102, as shown in **Fig.1**.

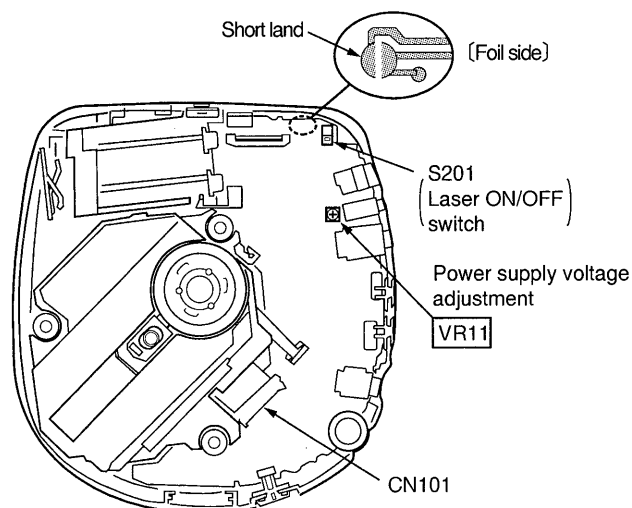


Fig. 1

(1) POWER SUPPLY VOLTAGE ADJUSTMENT

1. Connect the DC voltmeter to **TP103** (VCC) (+) and **TP104** (GND) on the P.C.B.

2. Connect the AC adaptor cord to the DC (IN) port and move the PLAY switch to the ON position.
(Use a new dry cell battery or a rechargeable battery that is full charged.)
3. Insert the test disc, and switch the player power ON.

4. Adjust **VR11** on the P.C.B. at **3.10 ~ 3.14 V**, as shown in **Fig. 1**.

(2) CHECK OF PLAY OPERATION

- * **Checking Skip Search**

1. Play an ordinary musical program disc.

2. Press the skip button to check for normal skip search operation (in both the forward and backward directions).

* **Checking Manual Search**

1. Play an ordinary musical program disc.

2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and backward directions).

* **Checking Playability**
1. Play the 0.7 mm black dot and the 0.7 mm wedge on the playability test disc (SZZP1054C) and verify that no sound skip or noise occurs.

2. Play the middle tracks of the uneven test disc (SZZP1056C) and verify that no sound skip or noise occurs.

● Automatic adjustment

On our conventional type portable CD player, there were mounted 6 semi-fixed controls for each adjustment. Since the SL-S480 servo circuit is equipped with an automatic adjusting circuit, these controls are removed from SL-S480.

On conventional portable CD player Use for Old Servo IC (AN8373SE2, AN8374SE2)	On SL-S480 Use for New Servo IC (AN8837SBE1, MN662746RPK1)
1. Tracking Offset Adjustment VR (TOC) <input type="checkbox"/>	➡ Non Adjustment
2. Focus Offset Adjustment VR (FOC) <input type="checkbox"/>	
3. Tracking Gain Adjustment VR (TGC) <input type="checkbox"/>	
4. Focus Gain Adjustment VR (FGC) <input type="checkbox"/>	➡ Automatic Adjusting Circuit
5. Tracking Balance Adjustment VR (TBC) <input type="checkbox"/>	
6. Focus Balance Adjustment VR (FBC) <input type="checkbox"/>	
Total 6 Adjustment VRs	➡ No Adjustment VR

Although all discs are manufactured according to the same specifications, their characteristics are not always precisely the same because they are produced by different manufacturers in various lots, or have different warp etc.
SL-S480 automatically controls the servo circuit to obtain optimum performance according to any disc's characteristics.
Therefore, no malfunction occurs because of mis-adjustment.

Outline of 10 - Second Sound Keeper Technique Used for Prevention of Sound from Skipping


1. Conventional Shockproofing Technique

Input information read out of the CD at double speed is demodulated, stored in the memory, and while sound-marking signal is supplied at normal speed from the memory to the D/A converter, the residual data is accumulated in the memory.

If reaccess to the break point is accomplished before the memory becomes empty, apparent playback sound is entirely kept free from breaking even when information pauses due to vibration, etc. It was necessary to use the 4M bit memory for securing the accumulation time of about 10 seconds.

The data compression technique has conducted to reduction of required memory capacity from 4M bits to 1M bit for securing the accumulation time equivalent to the conventional.











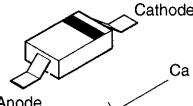
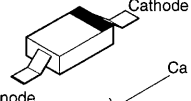
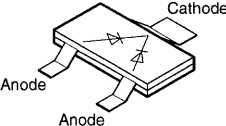
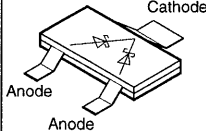
All-inclusive Block Diagram

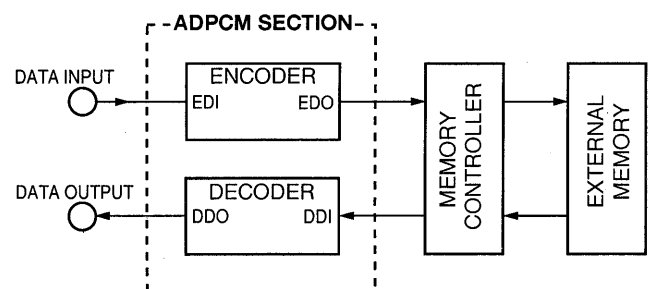


2. Compression-shockproofing [Outline]


Fig. 1 is a block diagram showing the compression-shockproofing mechanism, the difference of which from the conventional mechanism is as follows: Input information read out at double speed undergoes data compression (16 bits → 4 bits) by the encoder in the ADPCM (Adaptive Difference PCM) and stored in the external memory; the stored memory information undergoes data elongation (4 bits → 16 bits) by the decoder in the ADPCM and supplied at normal speed to the D/A converter.


Type Illustration of IC's, Transistors and Diodes

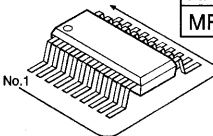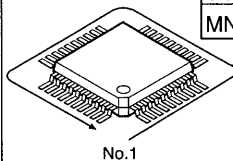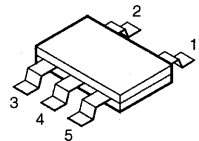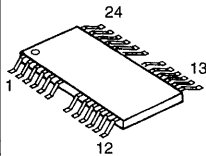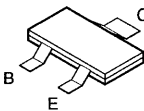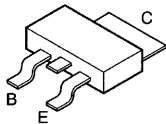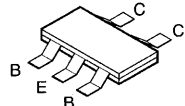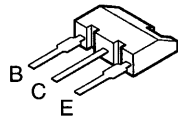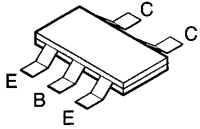
 <p>No.1</p>	<table><tr><td>NJU7082AMTE1</td><td>8PIN</td></tr><tr><td>AN8086SE2</td><td>16PIN</td></tr><tr><td>AN8839SBE1</td><td>28PIN</td></tr><tr><td>MPC17A50VMEL</td><td>36PIN</td></tr></table>	NJU7082AMTE1	8PIN	AN8086SE2	16PIN	AN8839SBE1	28PIN	MPC17A50VMEL	36PIN	 <p>No.1</p>	<table><tr><td>SM5902AF</td><td>44PIN</td></tr><tr><td>SC436021CFU</td><td>80PIN</td></tr><tr><td>MN662746RPK1</td><td>80PIN</td></tr></table>	SM5902AF	44PIN	SC436021CFU	80PIN	MN662746RPK1	80PIN	 <p>2 1 3 4 5</p>	 <p>24 13 12</p>							
NJU7082AMTE1	8PIN																									
AN8086SE2	16PIN																									
AN8839SBE1	28PIN																									
MPC17A50VMEL	36PIN																									
SM5902AF	44PIN																									
SC436021CFU	80PIN																									
MN662746RPK1	80PIN																									
 <p>C B E</p>	<table><tr><td>2SB1218ATX</td><td>UN5115TX</td></tr><tr><td>2SB709ATX</td><td>UN5210TX</td></tr><tr><td>2SB970RSTX</td><td>UN5211TX</td></tr><tr><td>2SD1328TX</td><td>UN5213TX</td></tr><tr><td>2SD1328STTX</td><td>UN5215TX</td></tr><tr><td>2SD1819ATX</td><td></td></tr><tr><td>DTA114YUA106</td><td></td></tr><tr><td>UN511NTX</td><td></td></tr></table>	2SB1218ATX	UN5115TX	2SB709ATX	UN5210TX	2SB970RSTX	UN5211TX	2SD1328TX	UN5213TX	2SD1328STTX	UN5215TX	2SD1819ATX		DTA114YUA106		UN511NTX		 <p>C B E</p>	 <p>C C B E B</p>	<table><tr><td>XN1210TX</td></tr><tr><td>XN1213TX</td></tr><tr><td>XN1215TX</td></tr><tr><td>XN1501TX</td></tr><tr><td>XP0121N00L</td></tr></table>	XN1210TX	XN1213TX	XN1215TX	XN1501TX	XP0121N00L	 <p>B C E</p>
2SB1218ATX	UN5115TX																									
2SB709ATX	UN5210TX																									
2SB970RSTX	UN5211TX																									
2SD1328TX	UN5213TX																									
2SD1328STTX	UN5215TX																									
2SD1819ATX																										
DTA114YUA106																										
UN511NTX																										
XN1210TX																										
XN1213TX																										
XN1215TX																										
XN1501TX																										
XP0121N00L																										
 <p>C C E B E</p>	 <p>E C B</p>	 <p>Cathode Anode Ca A</p>	 <p>Cathode Anode Ca A</p>	 <p>Cathode Anode Anode</p>	 <p>Cathode Anode Anode</p>																					

Block Diagram

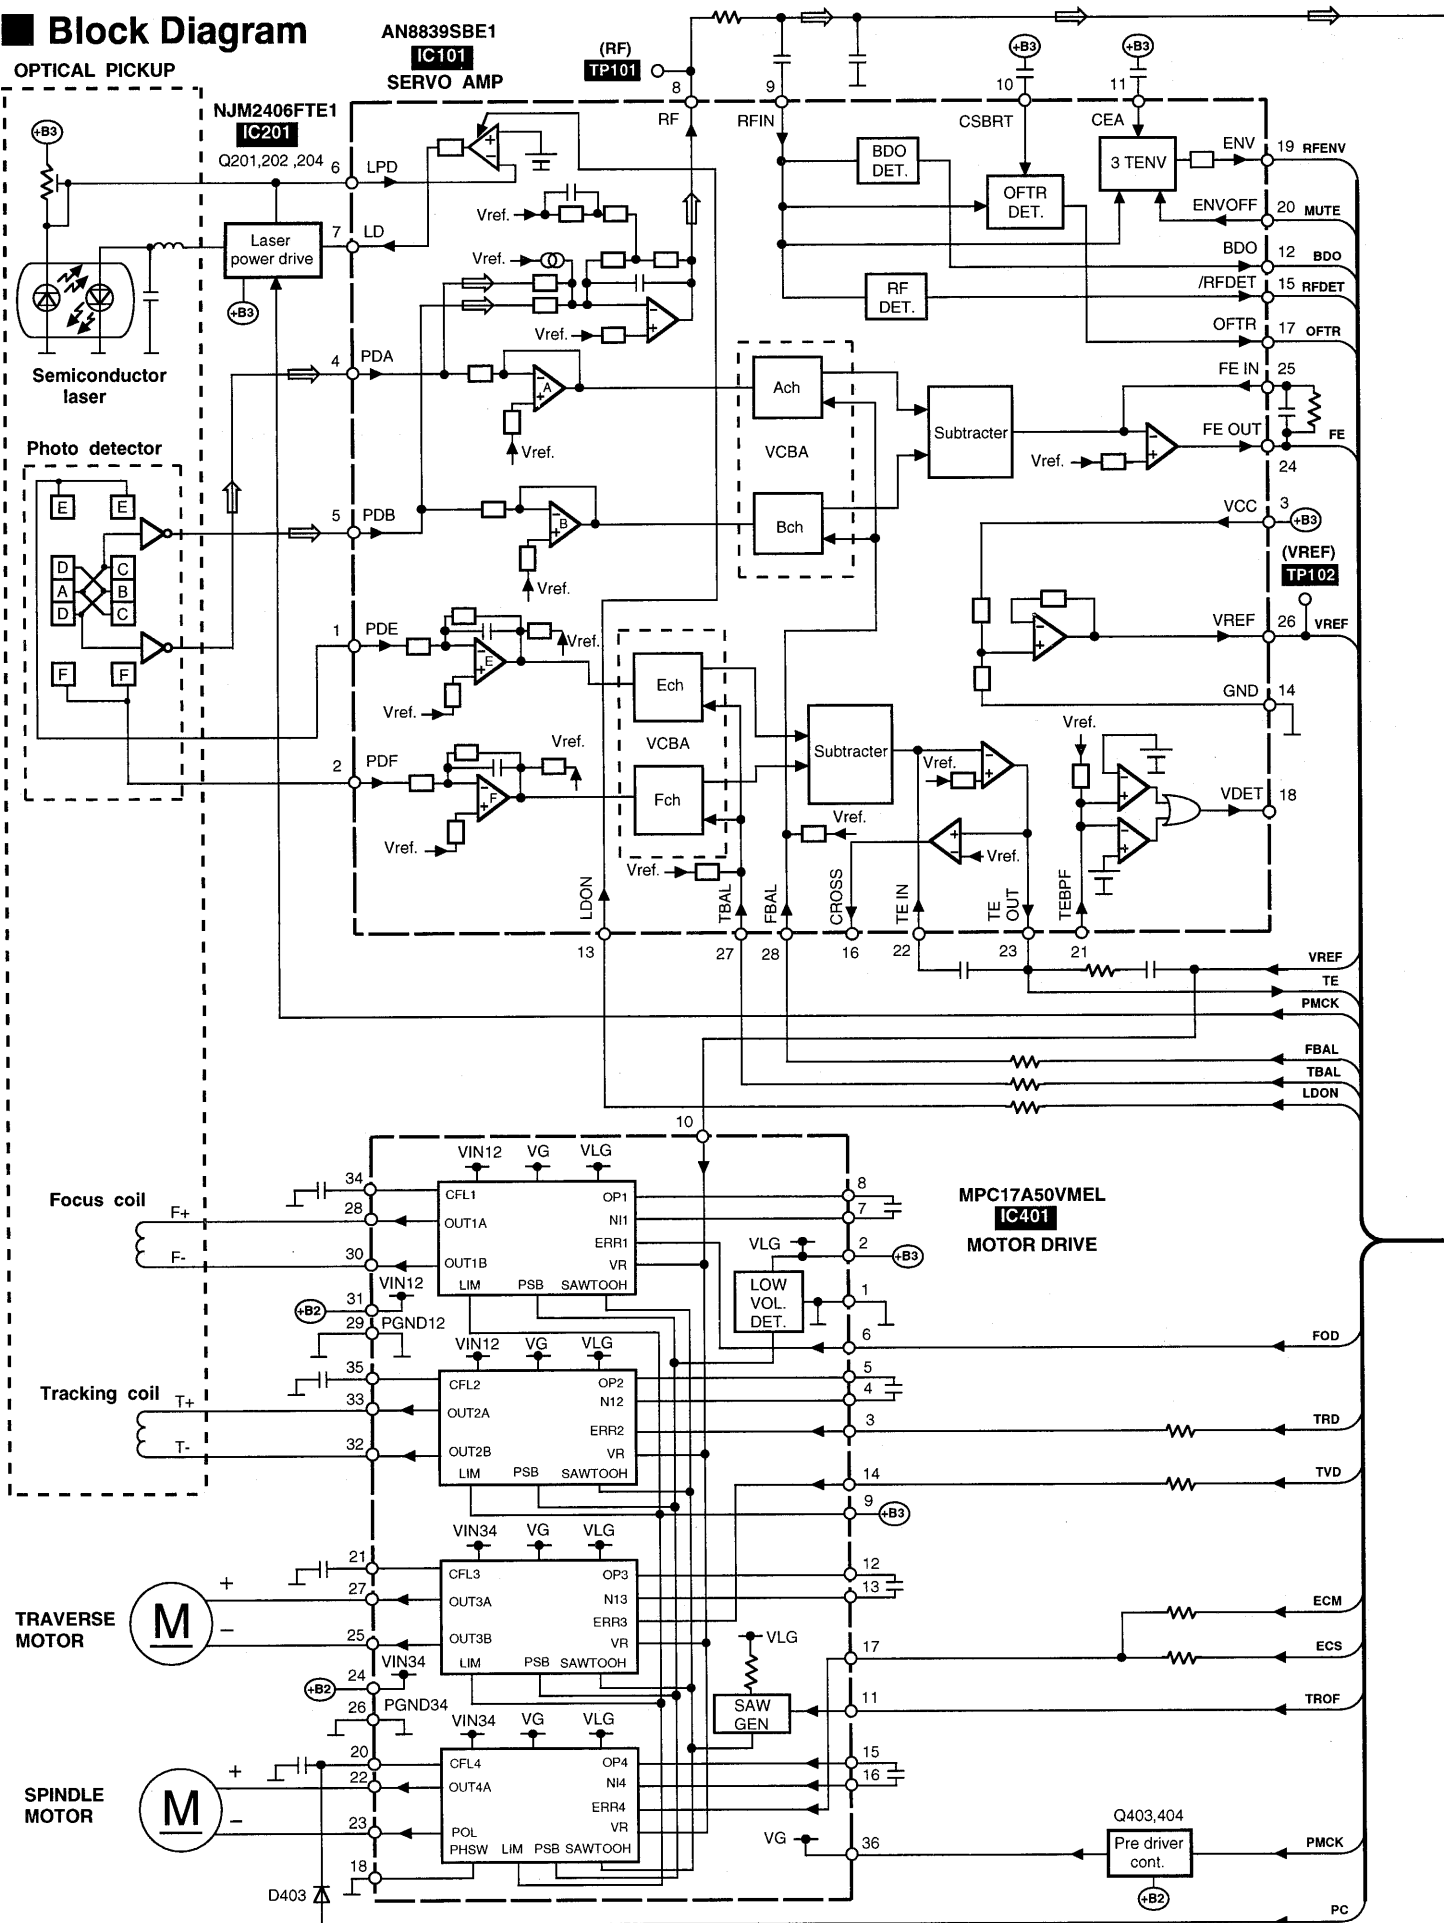

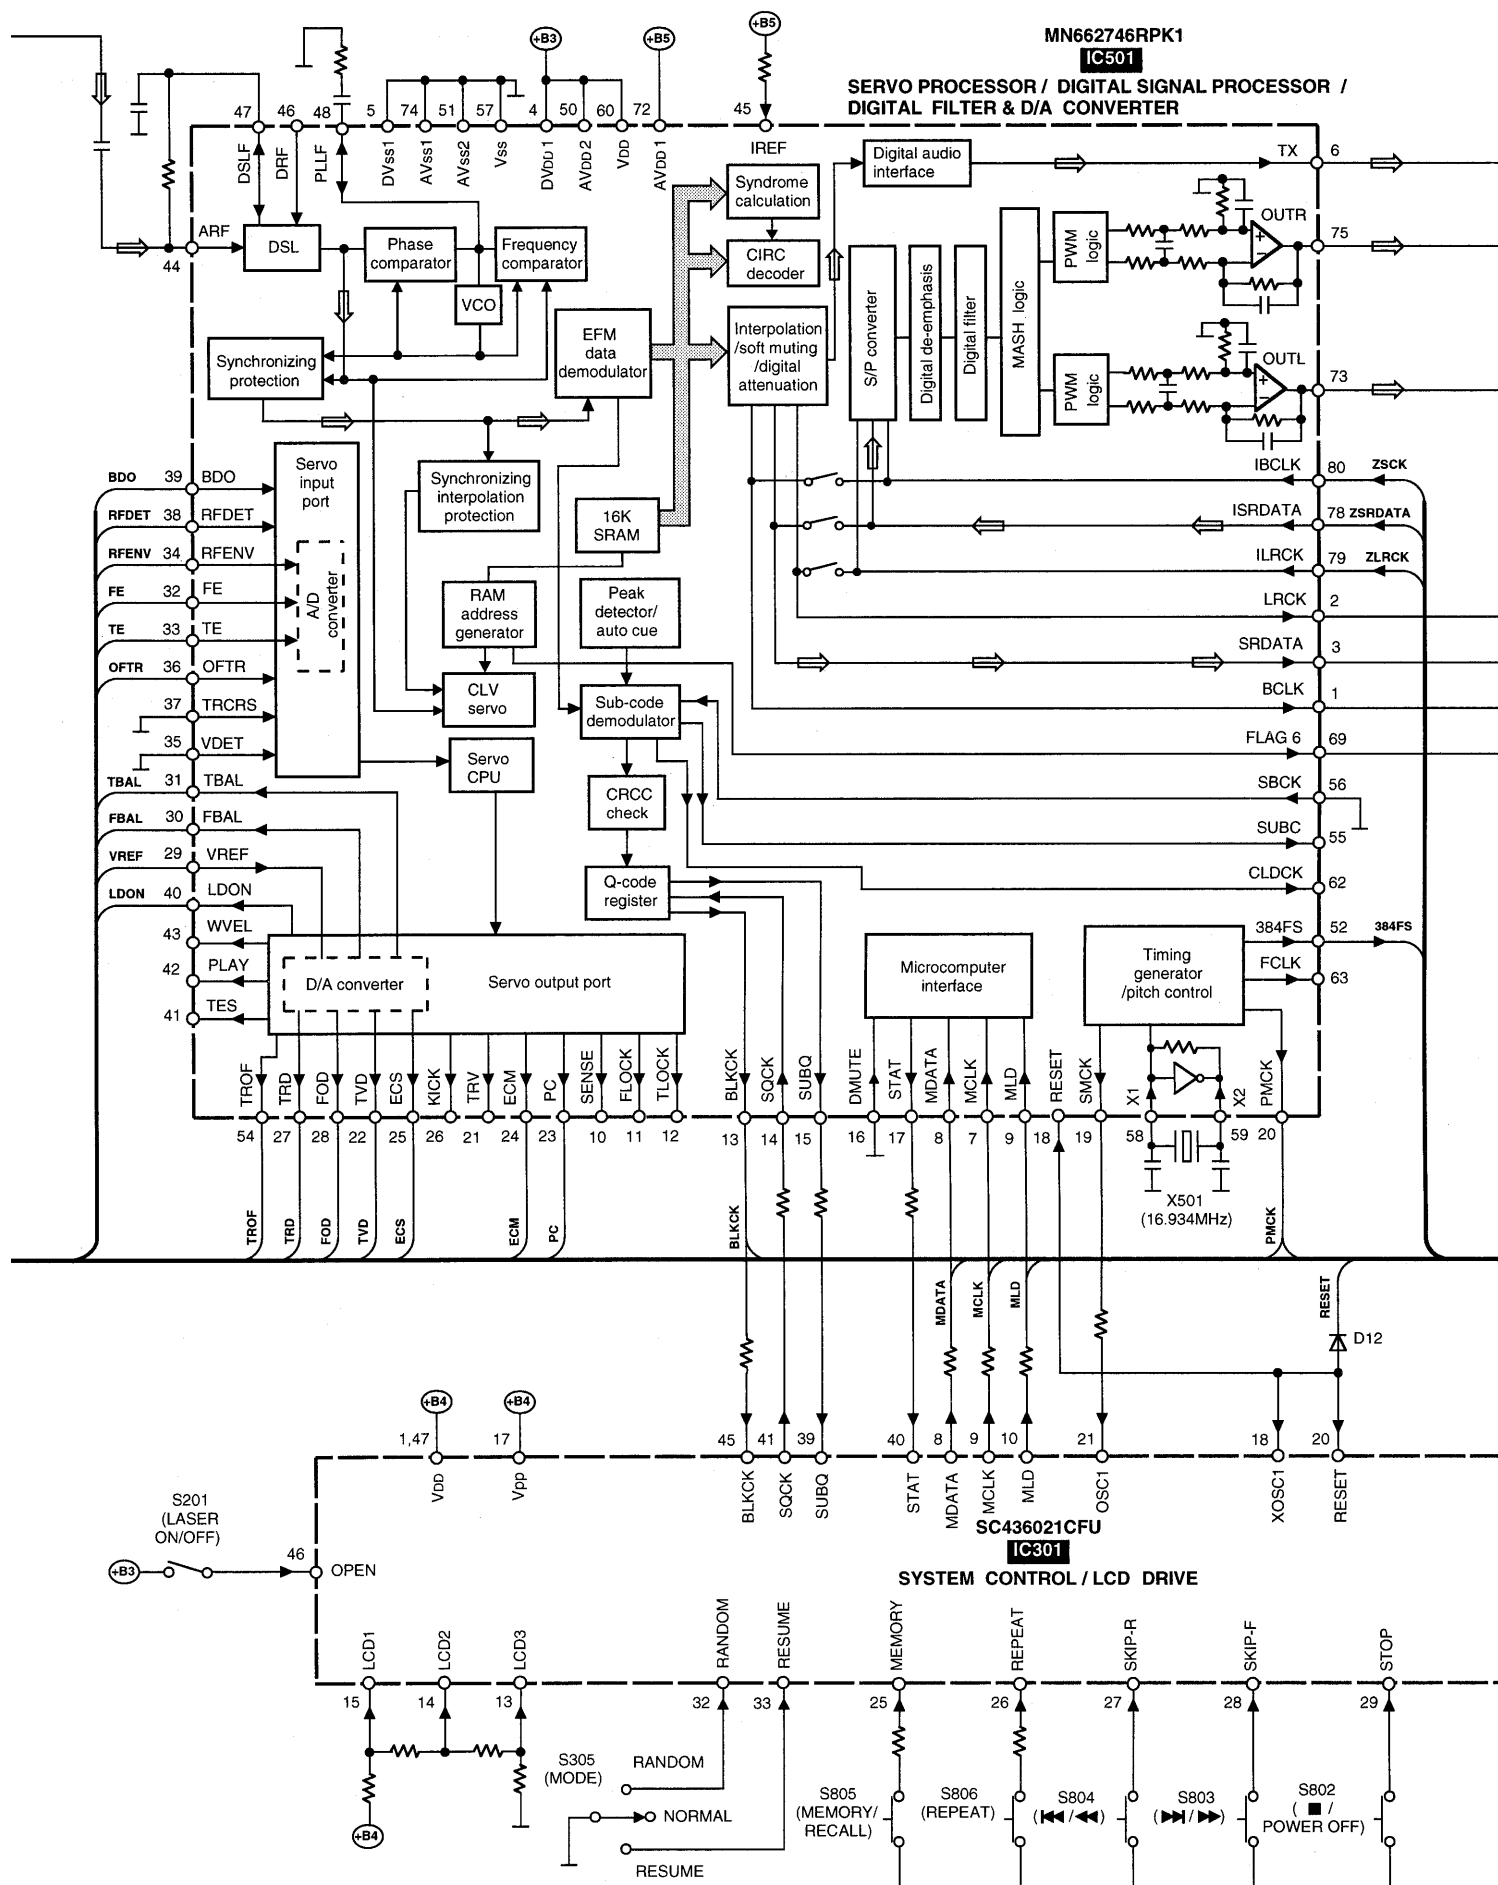

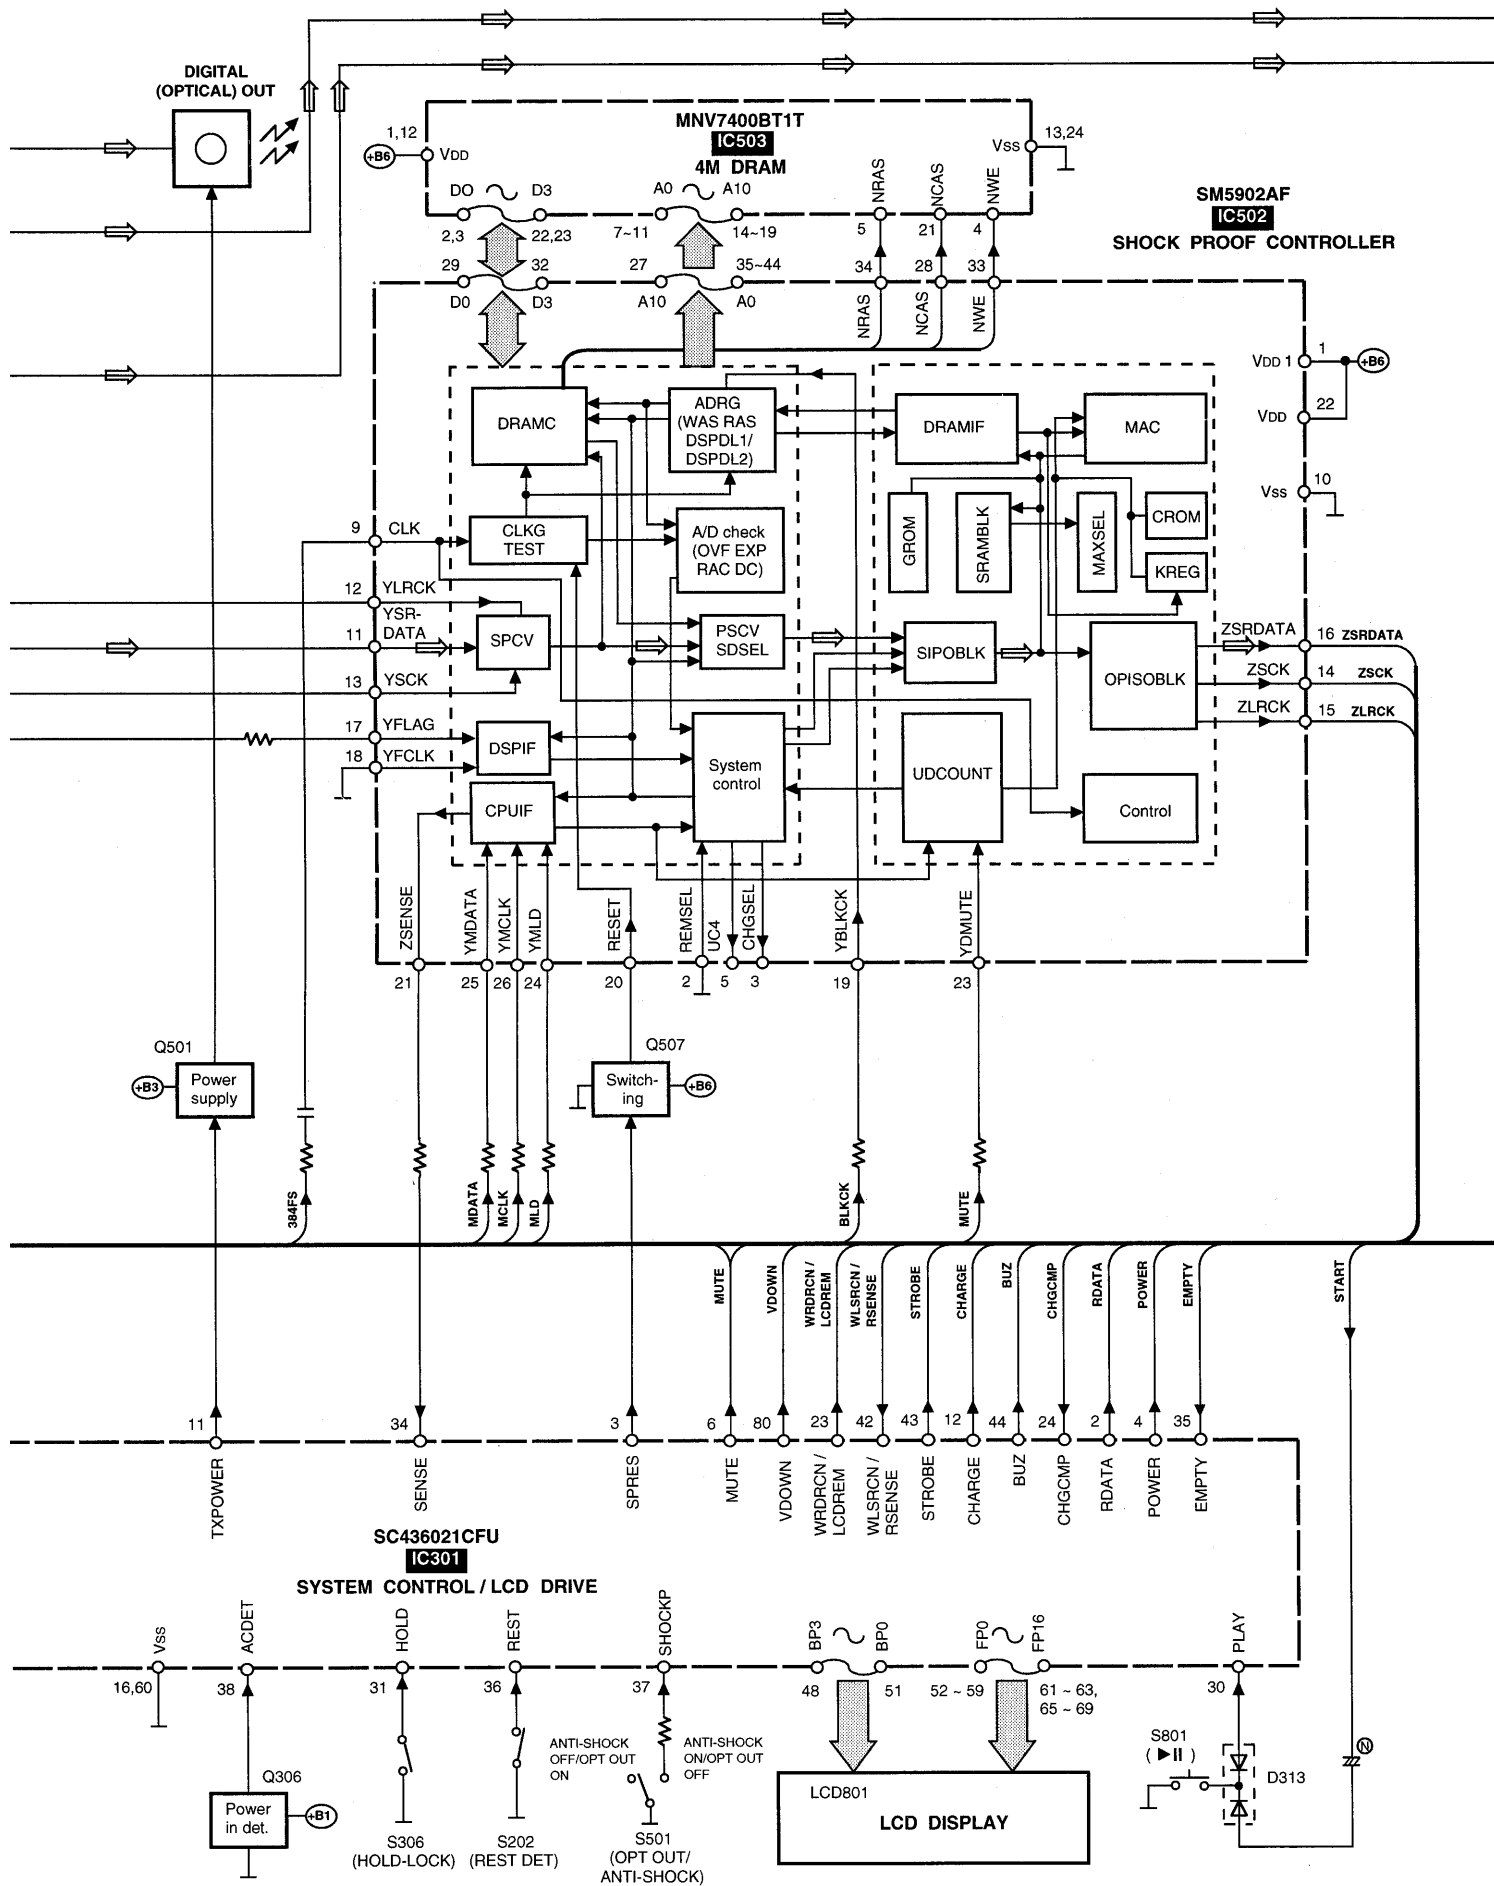



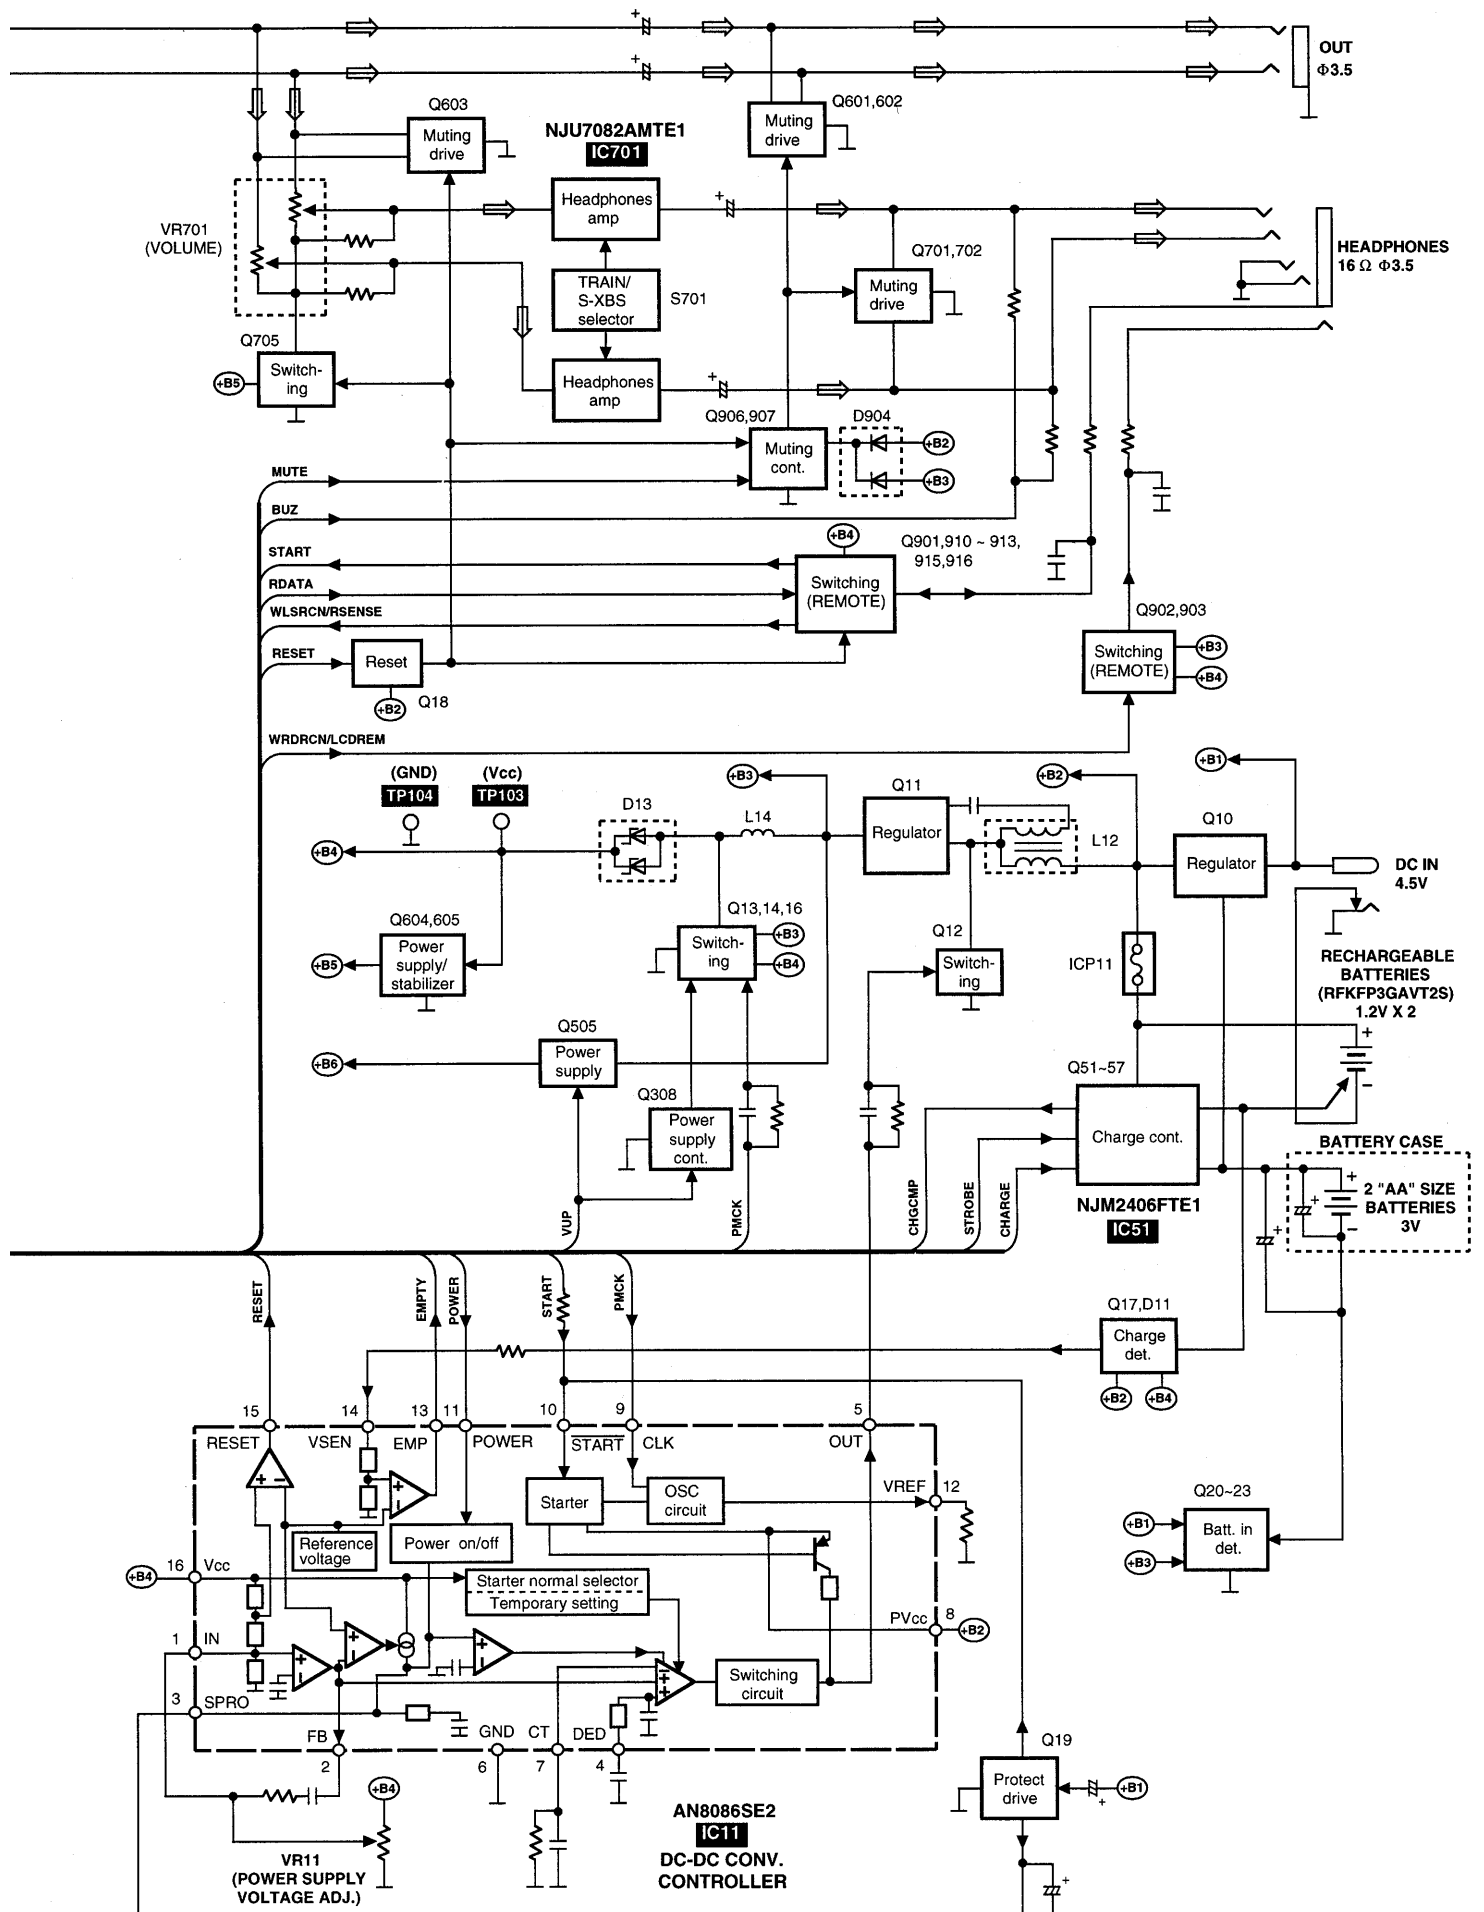Note: \Rightarrow : Audio signal

■ Schematic Diagram (See parts list on pages 30~35.)

(This schematic diagram may be modified at any time with the development of new technology.)

Notes:

- **S201**: Laser ON/OFF switch in "OFF" position.
(It turns "ON" with disc holder closed.)
- **S202**: Rest detector in "OFF" position.
(It turns "ON" when optical pickup comes to innermost periphery.)
- **S305**: Play mode selector (MODE) in "RANDOM" position.
(RANDOM⇄NORMAL⇄RESUME)
- **S306**: Hold lock (HOLD-LOCK) switch in "OFF" position.
- **S501**: Optical Pickup/sound keeper (OPT OUT/X-DSSP) switch in "OFF" position.
[X-DSSP OFF⇄ON(OPT OUT OFF)]
- **S701**: S-XBS switch in "OFF" position.
(TRAIN/S-XBS/OFF)
- **S801**: Play/pause (▶/⏸) switch.
- **S802**: Stop/power off (■/POWER OFF) switch.
- **S803**: Skip/search (▶▶/▶▶, ◀◀/◀◀) switches.
- **S804**: [S804: GO BACK, S803: ADVANCE]
- **S805**: Memory/recall (MEMORY/RECALL) switch.
- **S806**: Repeat (REPEAT) switch.
- The voltage value and waveforms are the reference voltage of this measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of GND terminal (DC IN Jack).
Accordingly, there may arise some errors in the voltage values and waveforms depending upon the internal impedance of the tester or measuring unit.
- Measurement conditions:
 - * Set the hold lock and X-DSSP switches to ON.
 - * The parenthesized is the voltage for test disc
(1 kHz, L+R, 0 dB) in play mode, and the other, for no disc in stop mode.
 - * AC adaptor is used for power supply.
-  : Positive voltage lines.
-  : Audio signal lines.
- Important safety notice:
Components identified by Δ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.

Caution!

IC and LSI are sensitive to static electricity.


Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminum foil.
- Ground the soldering iron.
- Put a conductive mat on the work table.
- Do not touch the pins of IC or LSI with fingers directly.


Note: ● ➡: Audio signal lines.


B MAIN CIRCUIT (P.C.Board: on pages 28,29)

A OPERATION CIRCUIT (P.C.Board: on page 28)

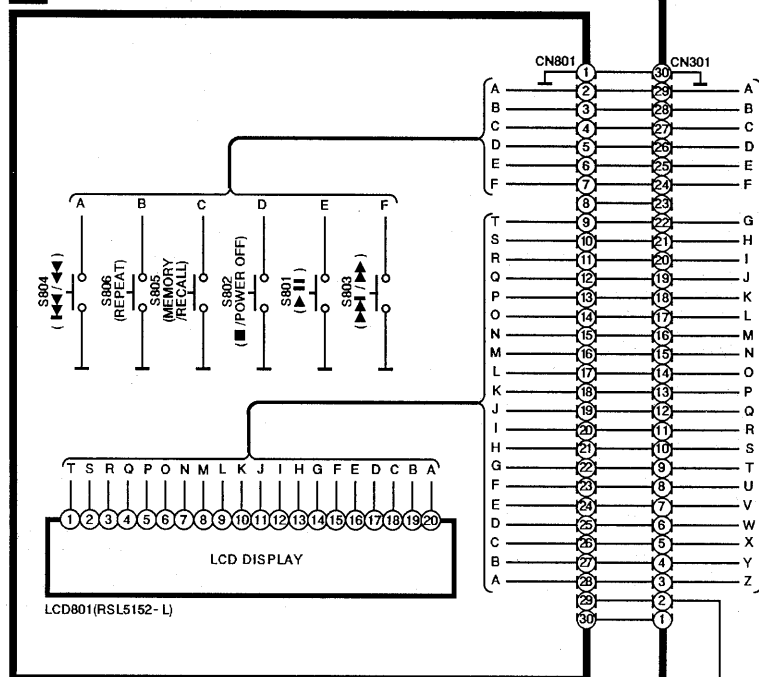


△ OPTICAL PICKUP

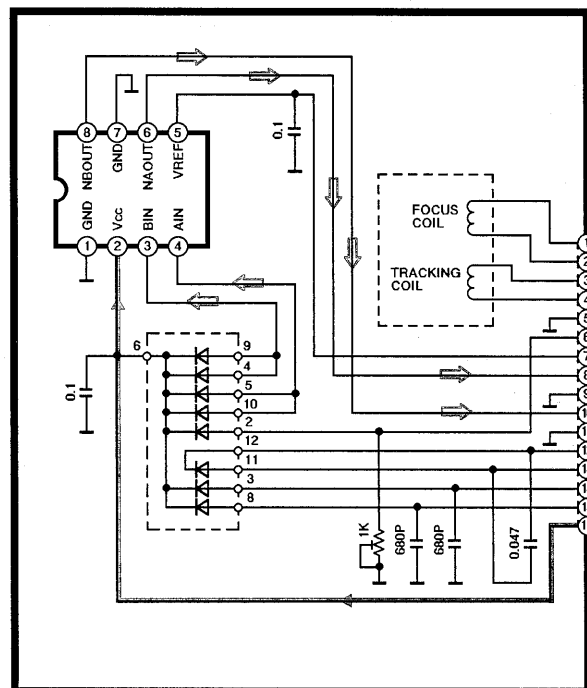


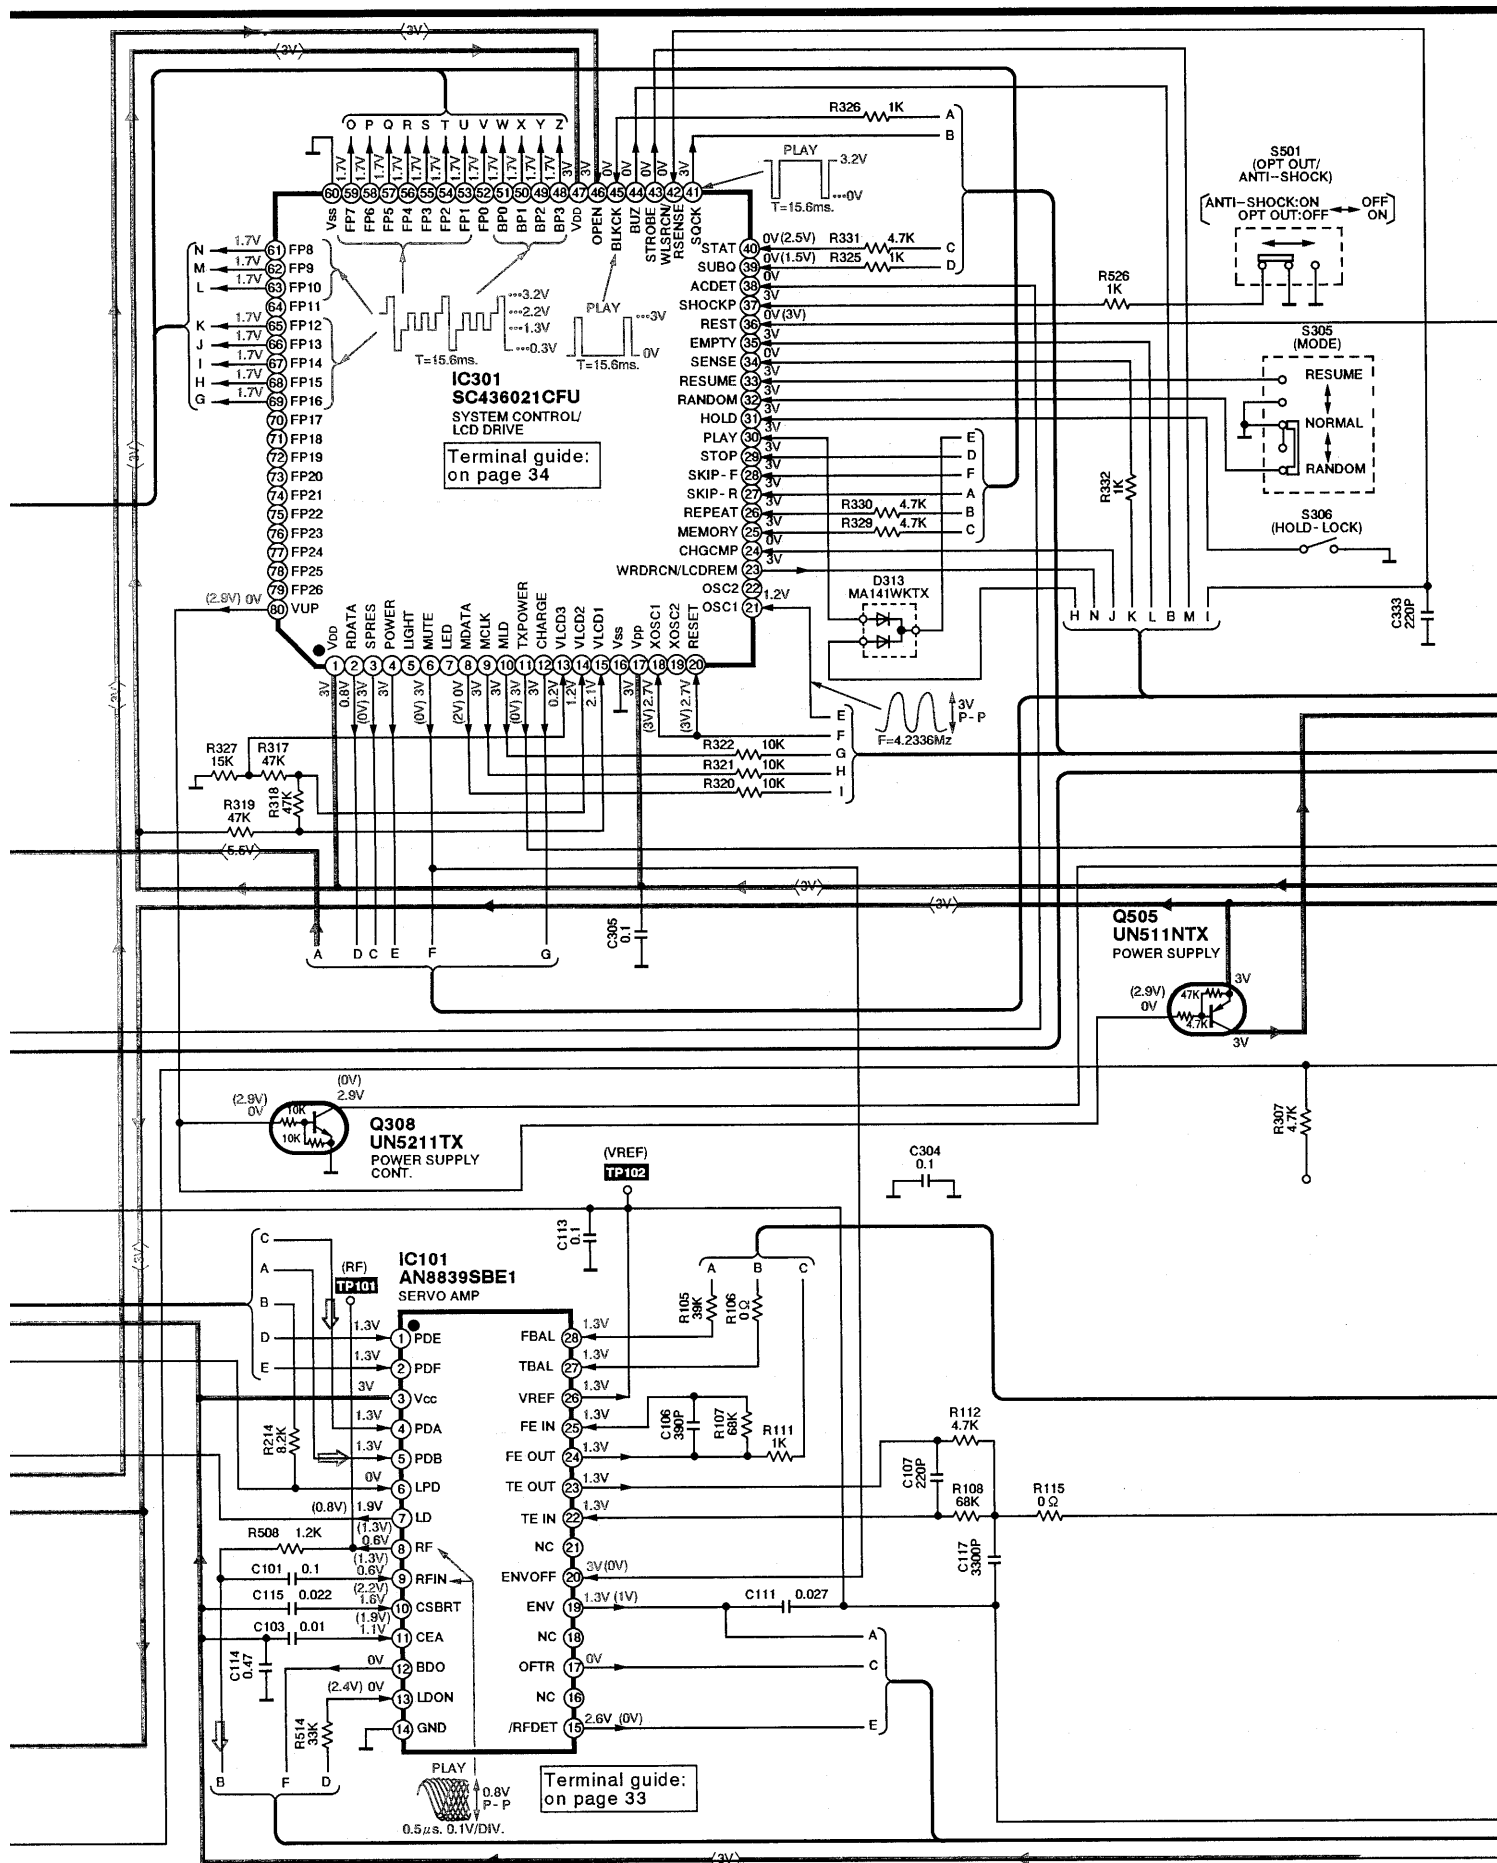


B MAIN CIRCUIT (P.C.Board: on pages 28,29)

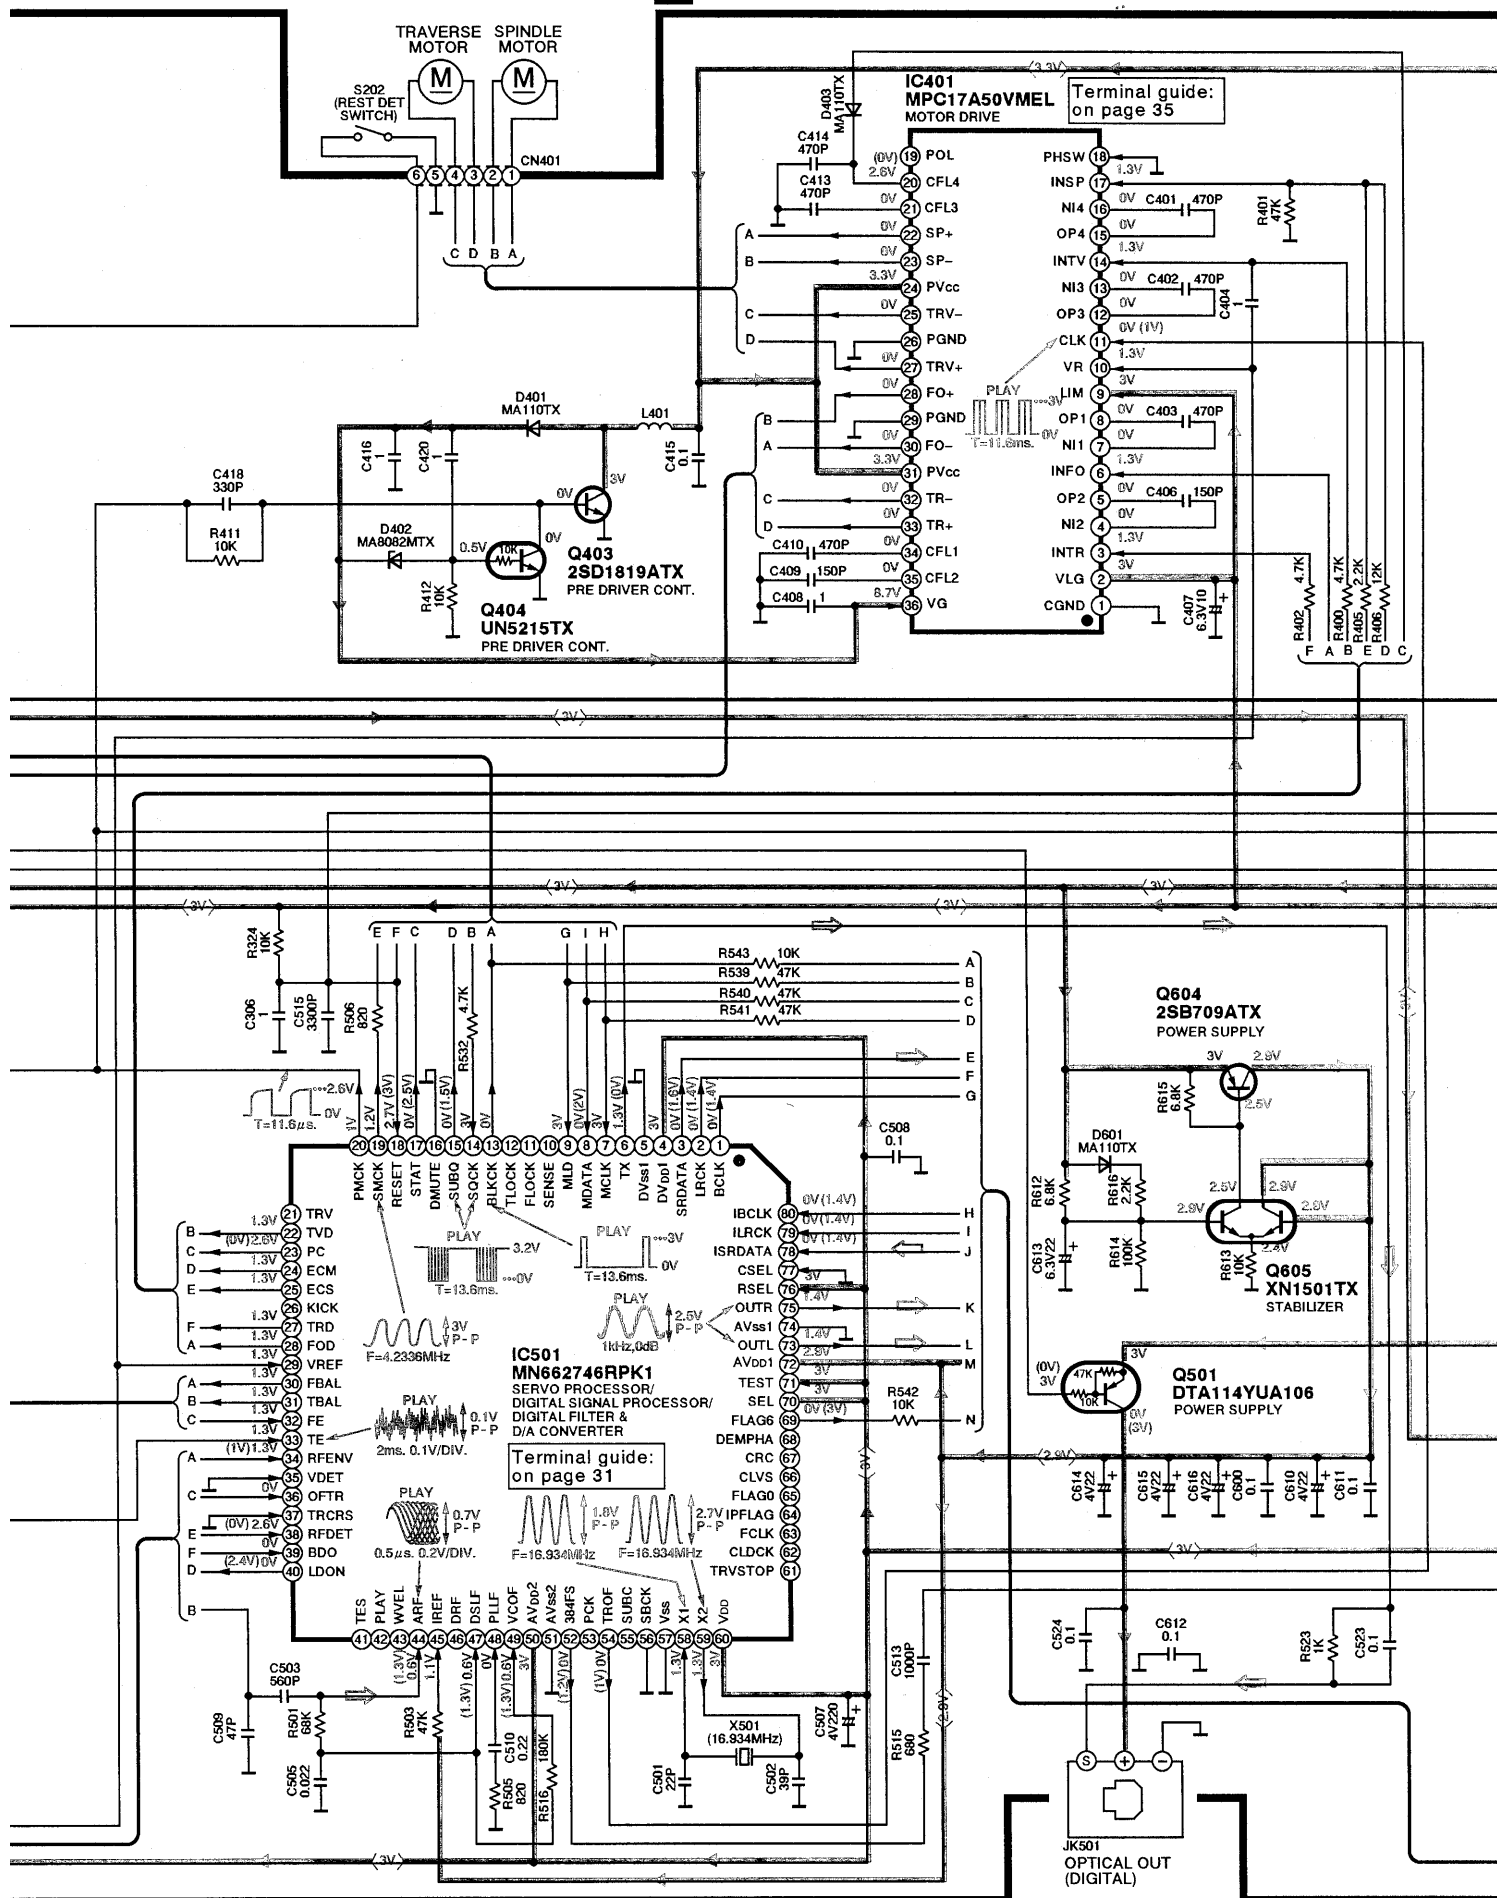



Note: • →: Audio signal lines.

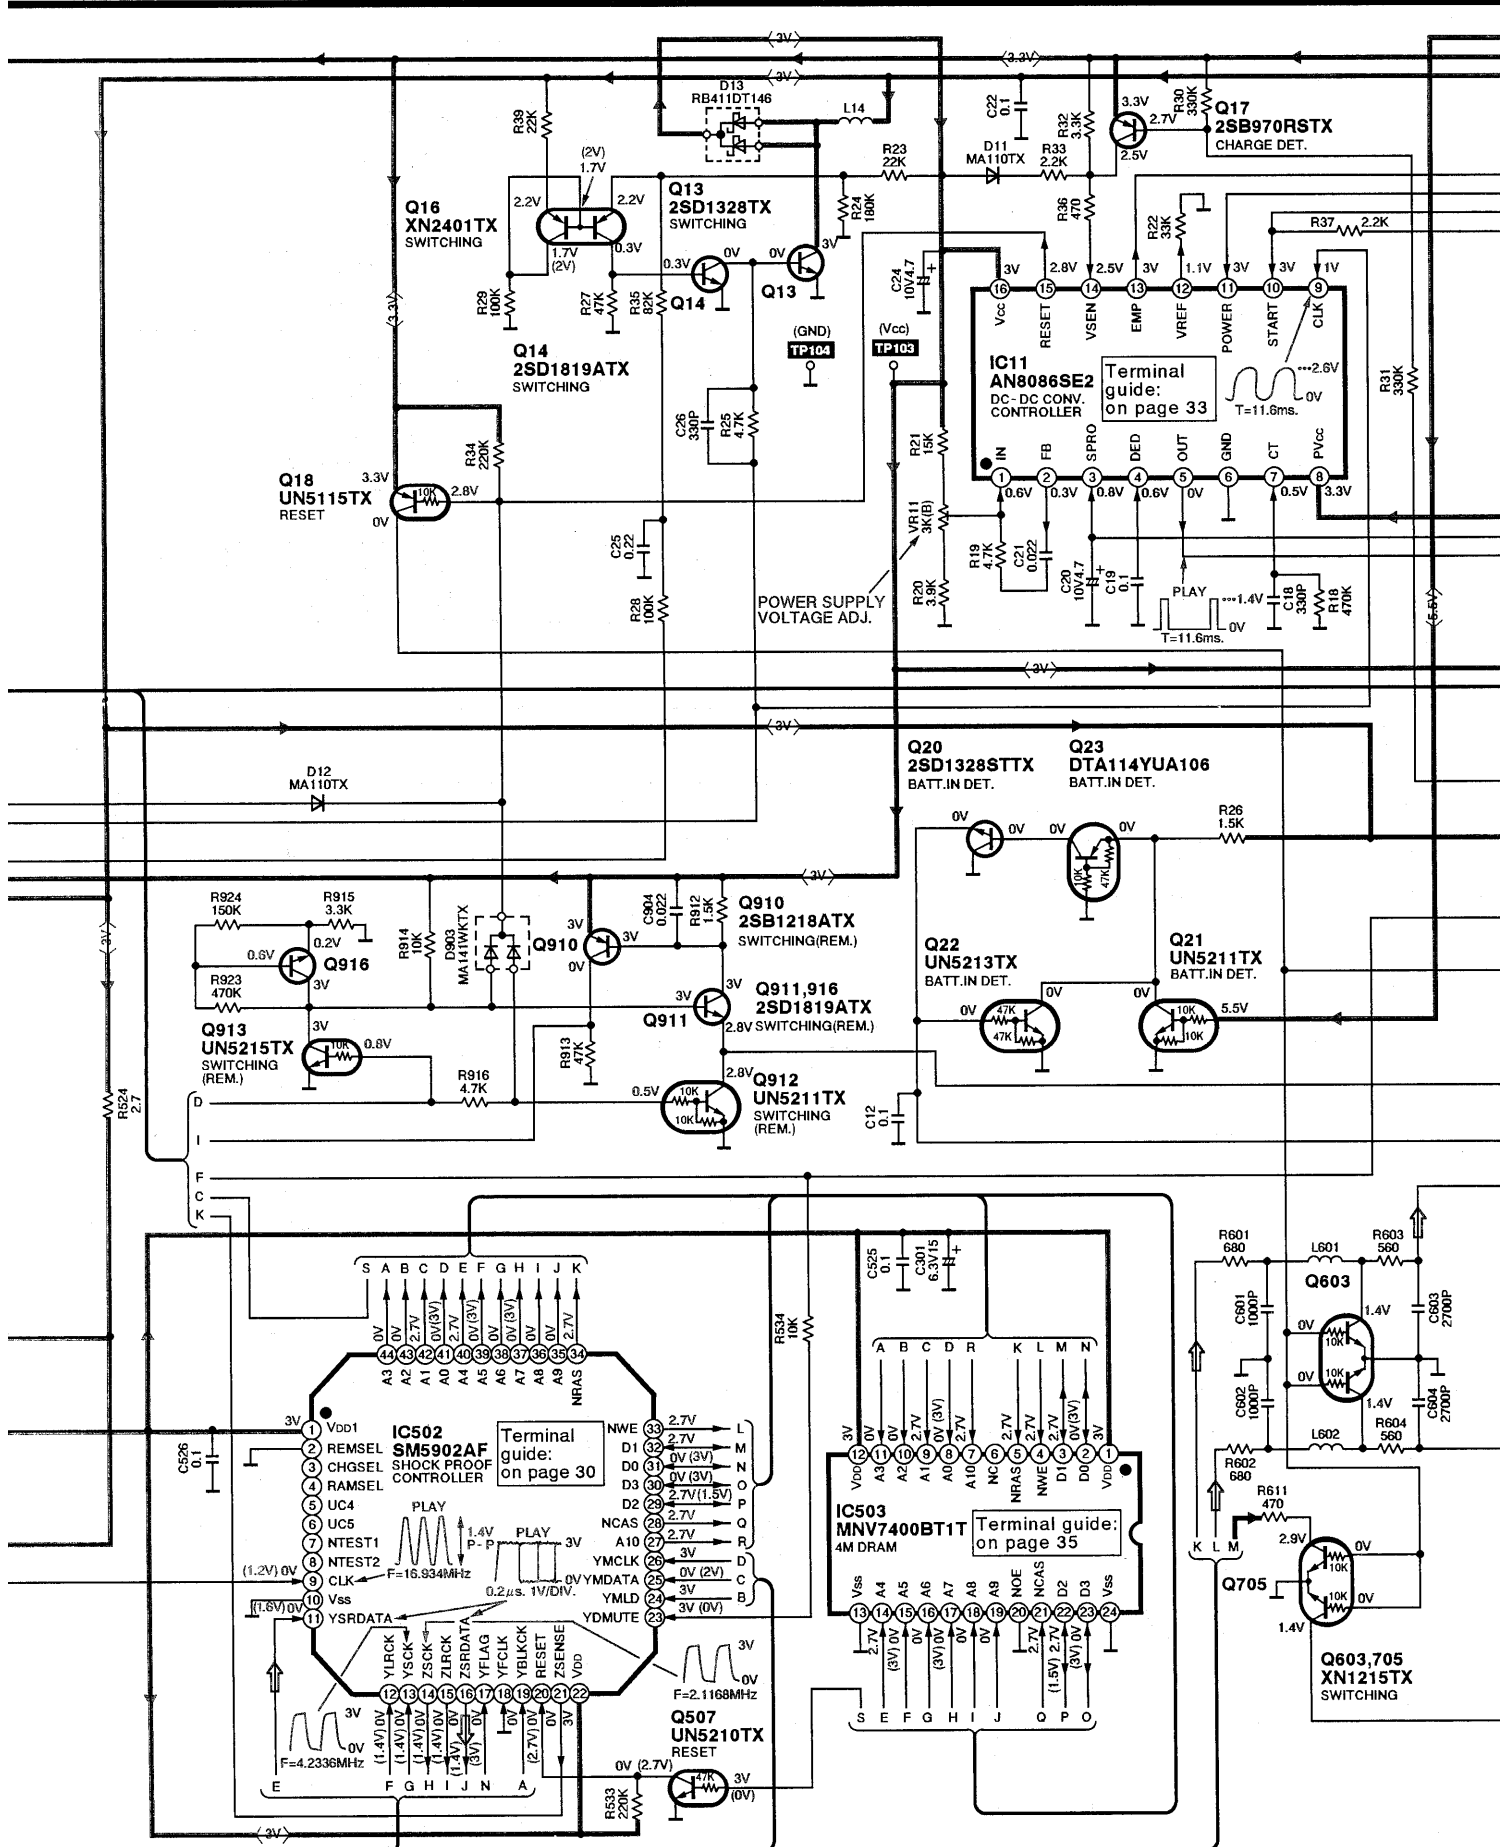

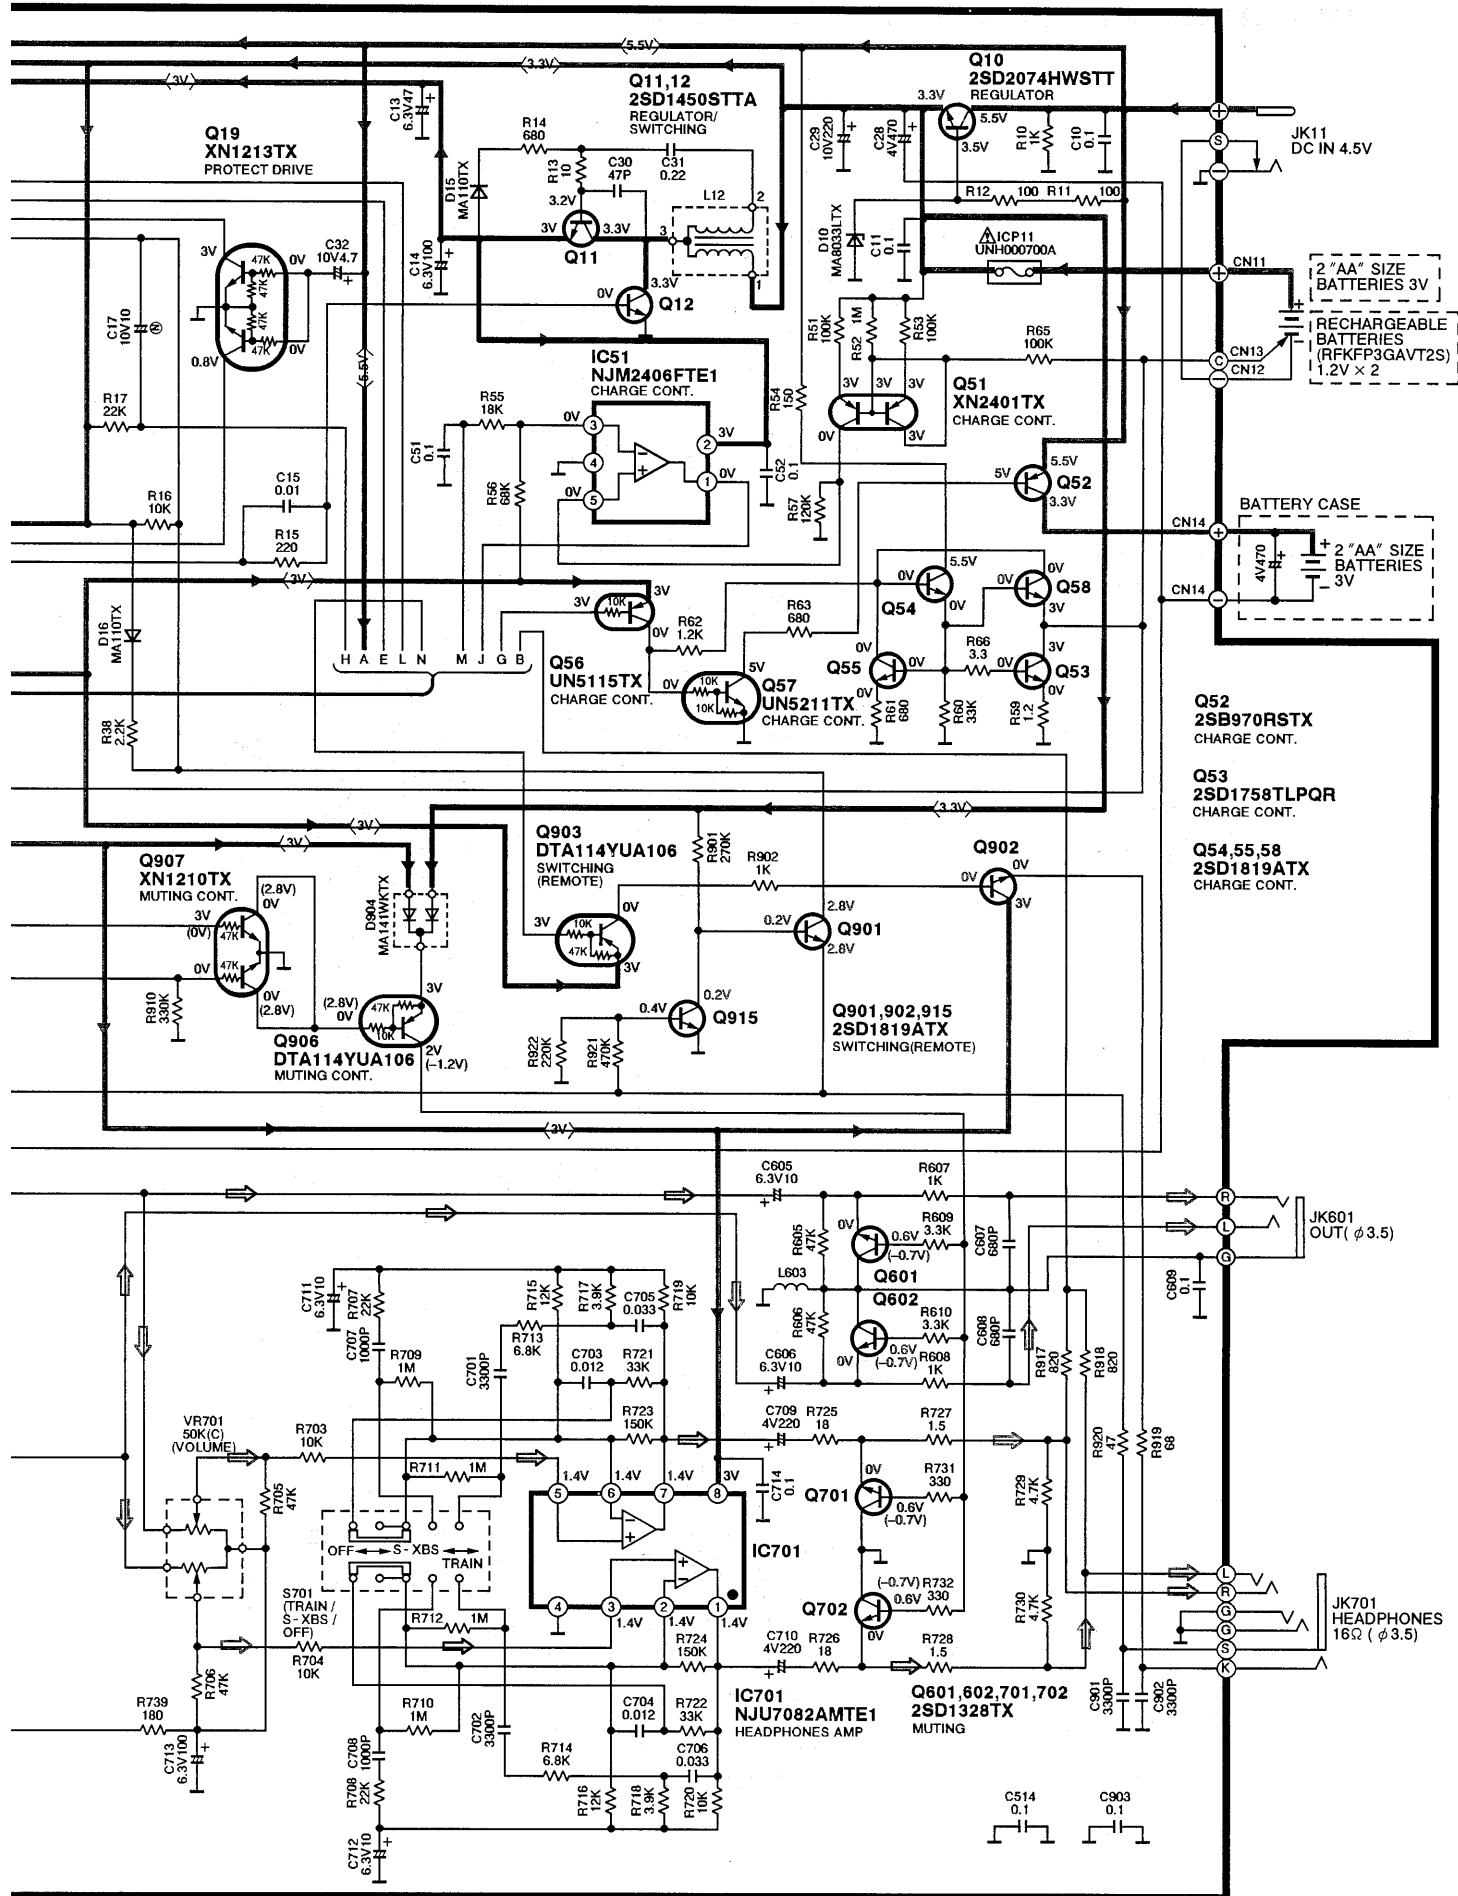B MAIN CIRCUIT (P.C.Board on pages 28,29)

Printed Circuit Board and Wiring Connection Diagram

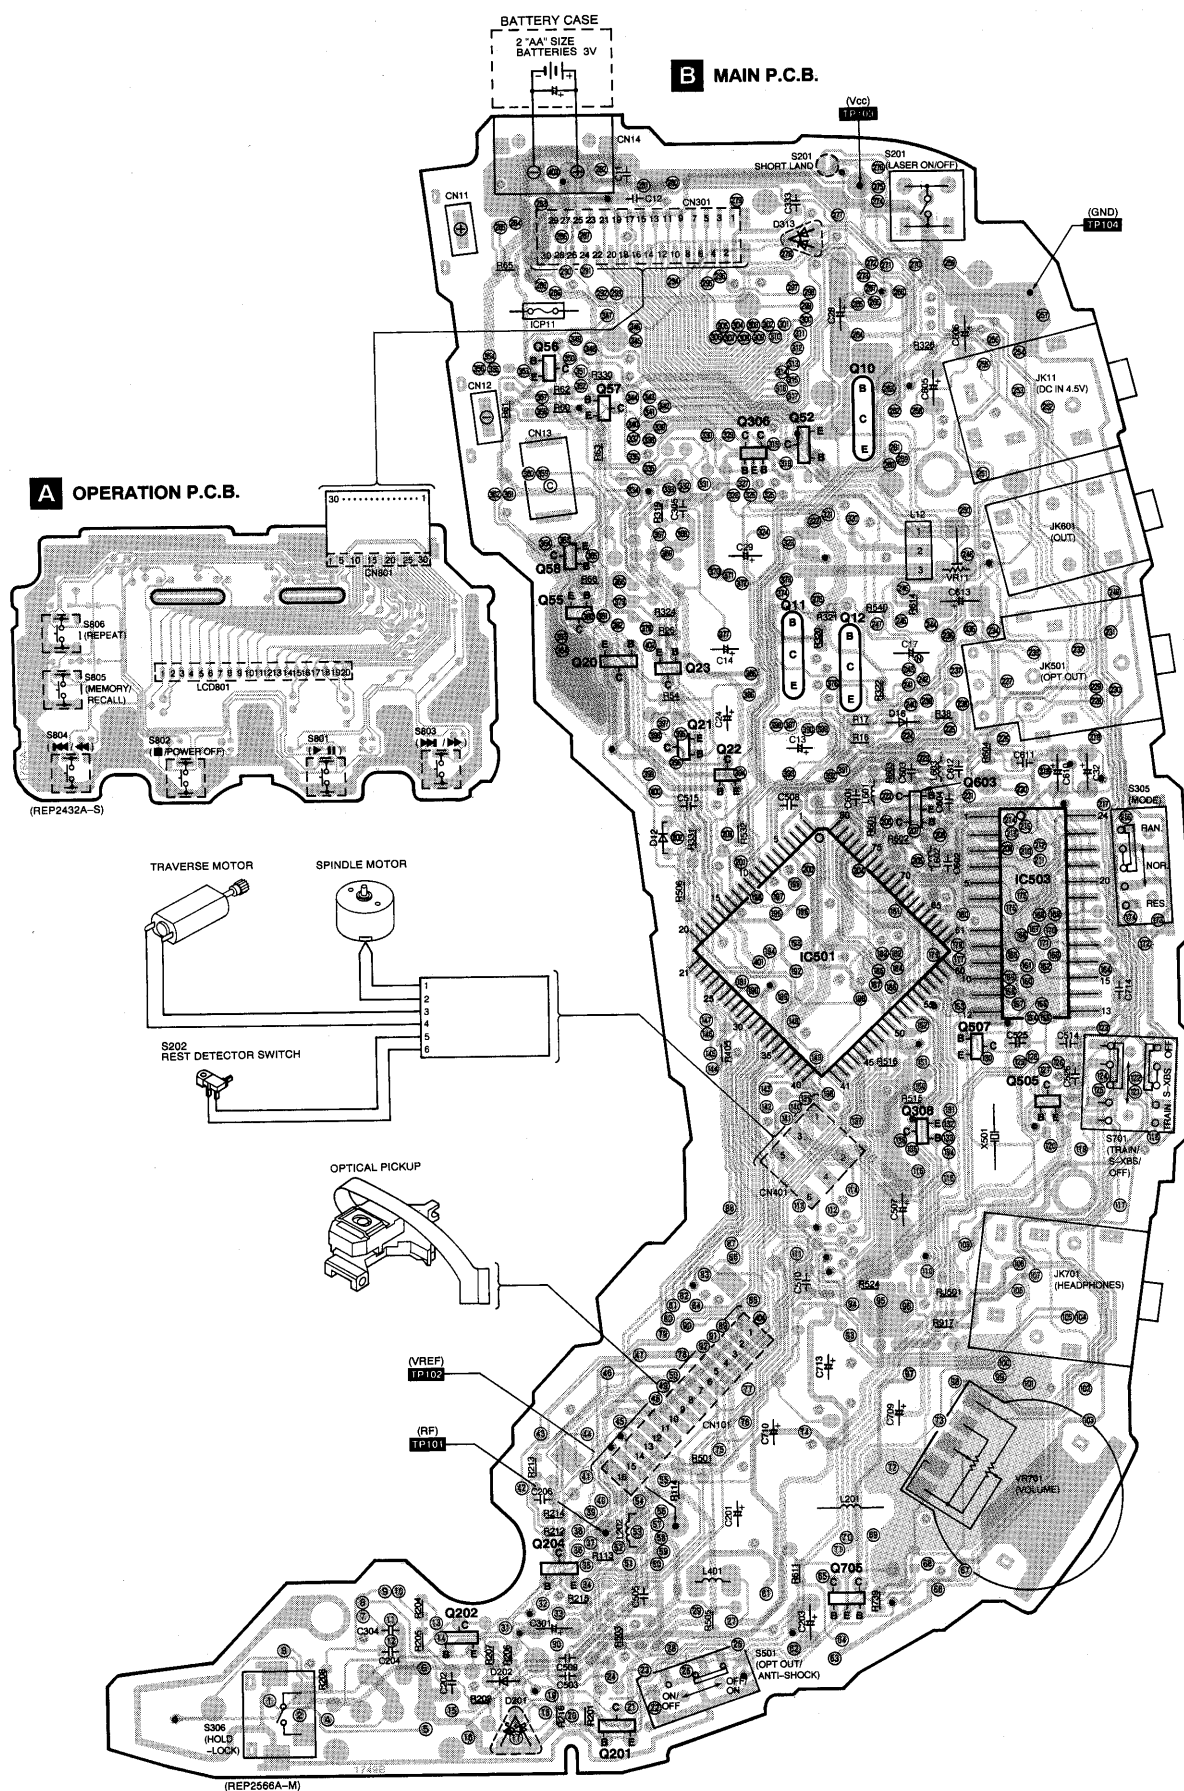

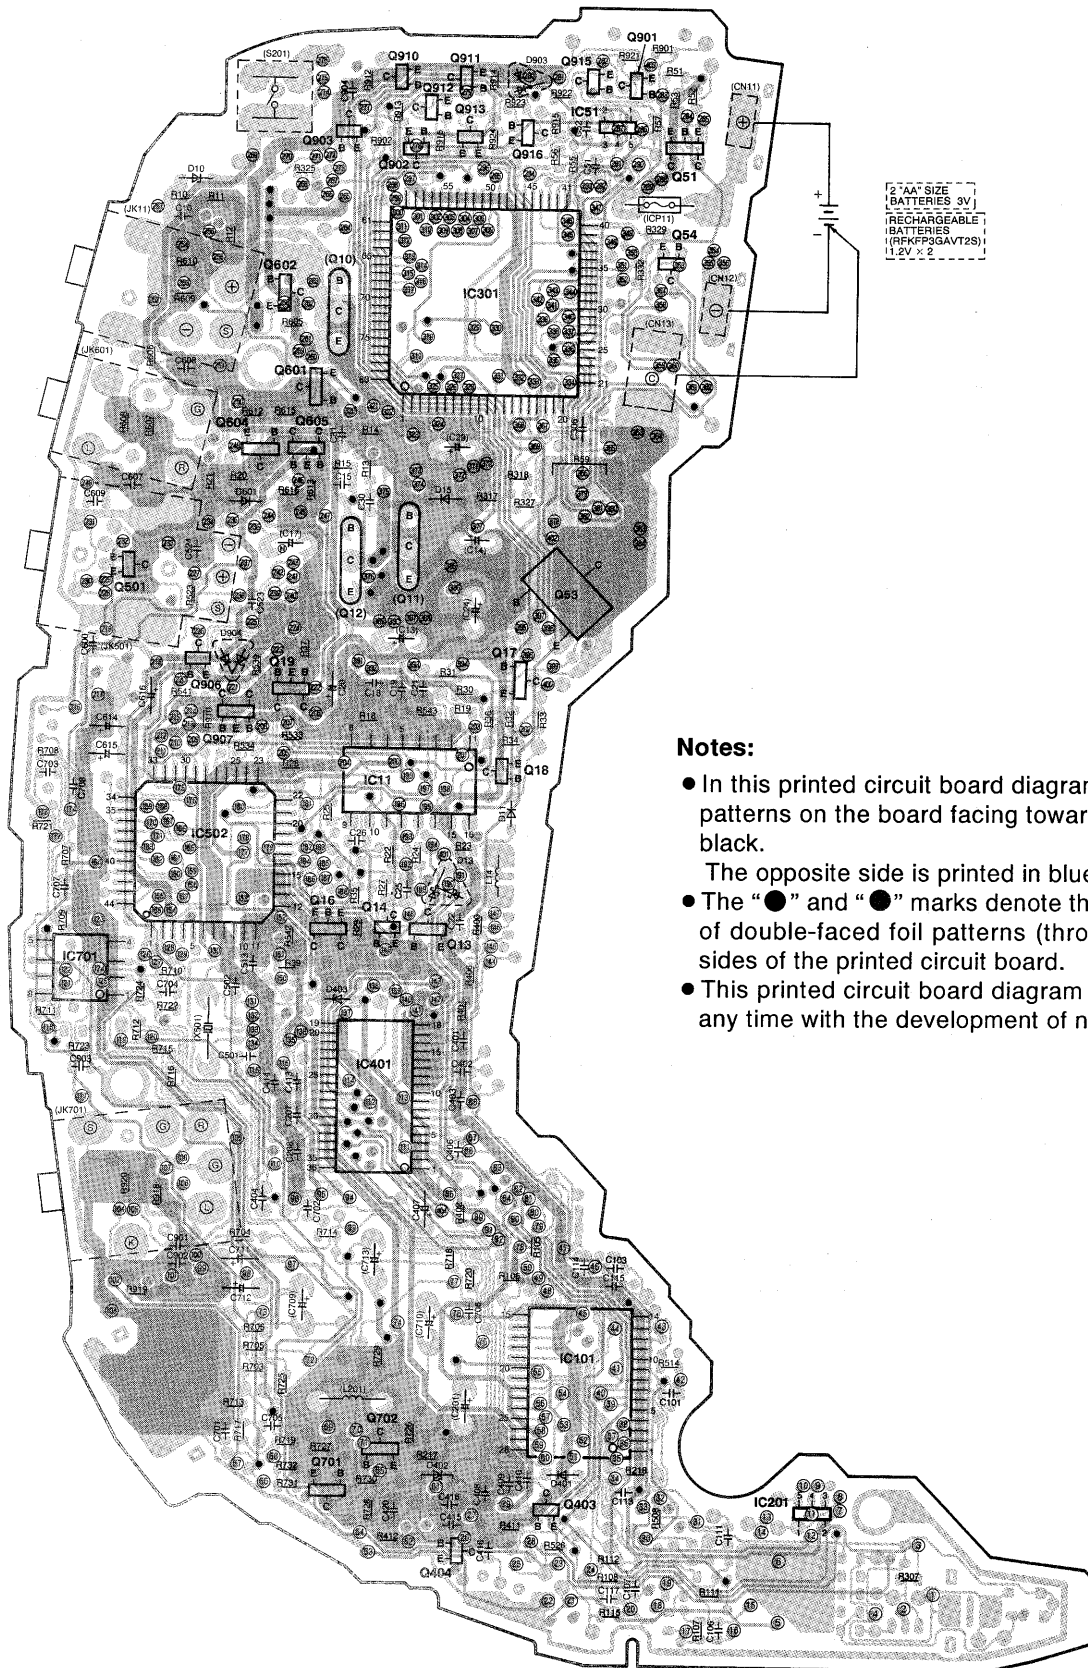

2"AA" SIZE
BATTERIES 3V
RECHARGEABLE
BATTERIES
(RPFKPGSAVT2S)
1.2V x 2

Notes:

- In this printed circuit board diagram, the parts and foil patterns on the board facing toward you are printed in black.
The opposite side is printed in blue.
- The "●" and "●" marks denote the connection points of double-faced foil patterns (through holes) on both sides of the printed circuit board.
- This printed circuit board diagram may be modified at any time with the development of new technology.

■ Terminal Function of IC's

● IC502(SM5902AF): Shock proof controller

No.	Mark	I/O Division	Function
1	VDD1	I	Power supply terminal
2	REMSEL	—	Not used, connected to GND
3	CHGSEL	—	Not used, open
4	RAMSEL	—	Not used, open
5	UC4	—	Not used, open
6	UC5	—	Not used, open
7	NTEST1	—	Test terminal (Not used, open)
8	NTEST2		
9	CLK	I	Clock signal input (f=16.9344MHz)
10	VSS	—	GND terminal
11	YSRDATA	I	Serial data input terminal
12	YLRCK	I	Serial L/R clock input terminal
13	YSCK	I	Serial bit clock input terminal
14	ZSCK	O	Serial bit clock output terminal
15	ZLRCK	O	L/R clock output terminal
16	ZSRDATA	O	Serial data output terminal
17	YFLAG	I	RAM over-flow flag terminal

No.	Mark	I/O Division	Function
18	YFCLK	I	Crystal frame clock input
19	YBLKCK	I	Sub-code block clock input terminal
20	RESET	I	Reset input terminal
21	ZSENSE	O	Microcomputer states output terminal
22	VDD	I	Power supply terminal
23	YDMUTE	I	Mute input terminal
24	YMLD	I	Microcomputer latch clock input terminal
25	YMDATA	I	Microcomputer serial data input terminal
26	YMCLK	I	Microcomputer shift clock input terminal
27	A10	O	D-RAM address output terminal
28	NCAS	O	D-RAM column address strobe terminal
29 { 32	D0 { D3	I/O	D-RAM data input/output terminal
33	NWE		D-RAM write enable terminal
34	NRAS	O	D-RAM low address strobe terminal
35 { 44	A0 { A9	O	D-RAM address output terminal

● IC501(MN662746RPK1): Servo processor/digital processor/ digital filter D/A converter

No.	Mark	I/O Division	Function
1	BCLK	O	Serial bit clock output
2	LRCK	O	L/R discriminating signal output
3	SRDATA	O	Serial data signal output
4	DVDD1	I	Power supply (digital circuit) terminal
5	DVSS1	—	GND (digital circuit) terminal
6	TX	O	Digital audio interface signal
7	MCLK	I	Command clock signal
8	MDATA	I	Command data signal
9	MLD	I	Command load signal ("L": LOAD)
10	SENSE	O	Sense signal (OFT, FESL, NACEND, NAJEND, POSAD, SFG) (Not used, open)
11	FLOCK	O	Optical servo condition (focus) ("L": lead-in) (Not used, open)
12	TLOCK	O	Optical servo condition (tracking) ("L": lead-in) (Not used, open)
13	BLKCK	O	Sub-code block clock (f=75Hz)
14	SQCK	I	Sub-code Q register clock
15	SUBQ	O	Sub-code Q code
16	DMUTE	I	Muting input ("H": MUTE) (Not used, connected to GND)
17	STAT	O	Status signal (CRC, CUE, CLVS, TTSTOP, FCLV, SQCK)
18	RESET	I	Reset signal ("L": reset)
19	SMCK	O	System clock (f=4.2336MHz)
20	PMCK	O	Frequency division clock signal (f=1/1.92xck=88.2kHz)
21	TRV	—	Not used, open
22	TVD	O	Traverse drive signal

No.	Mark	I/O Division	Function
23	PC	O	Spindle motor drive signal ("L": ON)
24	ECM	O	Spindle motor drive signal (Forced mode)
25	ECS	O	spindle motor drive signal (Servo error signal)
26	KIKC	O	Kick pulse output
27	TRD	O	Tracking drive signal output
28	FOD	O	Focus drive signal output
29	VREF	I	D/A drive output (TVD, ECS, TRD, FOD, FBAL, TBAL) normal voltage input terminal
30	FBAL	O	Focus balance adj. output
31	TBAL	O	Tracking balance adj. output
32	FE	I	Socus error signal (analog input)
33	TE	I	Tracking error signal (analog input)
34	RFENV	I	RF envelope signal
35	VDET	I	Oscillation det. signal ("H": det)
36	OFTR	I	Off track signal ("H": Off track)
37	TRCRS	—	GND terminal
38	RFDET	I	RF detection signal ("L": detection)
39	BDO	I	Dropout detection signal ("L": dropout)
40	LDON	O	Laser power control ("H": ON)
41	TES	O	Tracking error shunt output ("H": shunt) (Not used, open)
42	PLAY	O	Play signal ("H": play) (Not used, open)
43	WVEL	O	Double velocity status signal ("H": double) (Not used, open)
44	ARF	I	RF signal input

No.	Mark	I/O Division	Function
45	IREF	I	Reference current input
46	DRF	—	DSL bias terminal (Not used, open)
47	DSLIF	I/O	DSL loop filter terminal
48	PLLIF	I	PLL loop filter terminal
49	VCOF	I	VCO loop filter terminal
50	AVDD2	I	Power supply (analog circuit) terminal (2)
51	AVSS2	—	GND (analog circuit) terminal
52	FS384	O	384fs (16.9344MHz) output
53	PCK	—	PLL extra clock (f=4.3218MHz) (Not used, open)
54	TROF	—	Tracking servo OFF signal (Not used, open)
55	SUBC	—	Sub-code serial output data (Not used, open)
56	SBCK	—	Sub-code serial output data (Not used open)
57	VSS	—	GND terminal
58	X1	I	Crystal oscillator input terminal (f=16.9344MHz)
59	X2	O	Crystal oscillator output terminal (f=16.9344MHz)
60	VDD	I	Power supply terminal
61	TRVSTOP	—	Not used,open
62	CLDCK	—	Sub-code frame clock signal (f CLDCK=7.35kHz: Normal) (Not used, open)
63	FCLK	—	Crystal frame clock signal [fFCLK=7.35kHz: 2speed(14.7kHz)] (Not used, open)

No.	Mark	I/O Division	Function
64	IPFLAG	—	Interpolation flag terminal (Not used, open)
65	FLAG0	—	Flag terminal (Not used, open)
66	CLVS	—	Turntable servo phase syncro signal ("H":CLV, "L": Rough servo) (Not used, open)
67	CRC	—	Sub-code CRC check terminal ("H": OK, "L": NG) (Not used, open)
68	DEMPHA	—	De-emphasis ON signal ("H": ON) (Not used, open)
69	FLAG6	O	Flag terminal
70	SEL	—	Not used, connected to GND
71	TEST	I	Test terminal (Normal: "H")
72	AVDD1	I	Power supply (analog circuit) terminal (1)
73	OUTL	O	Lch audio signal
74	AVSS1	—	GND (analog circuit)terminal (1)
75	OUTR	O	Rch audio signal
76	RSEL	I	Polarity direction control terminal of RF signal (Not used, connected to power suply)
77	CSEL	I	Frequency control terminal of crystal oscillator
78	ISRDATA	I	Serial data signal input
79	ILRCK	I	L/R discriminating signal input
80	IBCLK	I	Serial bit clock input

● IC101(AN8839SBE1): Servo amp.

No.	Mark	I/O Division	Function
1	PDE	I	Tracking signal input terminal(1)
2	PDF	I	Tracking signal input terminal(2)
3	Vcc	I	Power supply terminal
4	PDA	I	Focus signal input terminal(1)
5	PDB	I	Focus signal input terminal(2)
6	LPD	I	APC amp input terminal
7	LD	O	APC amp output terminal
8	RF	O	RF summing output terminal
9	RF IN	I	RF signal input terminal
10	CSBRT	I	Capacitor connection terminal for OFTR
11	CEA	I	Capacitor connection terminal for H.P.F. amp
12	BDO	O	Dropout signal output terminal ("H": Dropout)
13	LDON	I	APC control input terminal
14	GND	—	GND terminal

No.	Mark	I/O Division	Function
15	/RFDET	O	RF det. signal output terminal ("L": Det.)
16	NC	—	Not used, open
17	OFTR	O	Off track signal output terminal ("H": Off track)
18	NC	—	Not used, open
19	ENV	O	RF envelope signal output terminal
20	ENV OFF	I	ENV control input terminal
21	NC	—	Not used, open
22	TE IN	I	Tracking error amp input terminal
23	TE OUT	O	Tracking error amp output terminal
24	FE OUT	O	Focus error amp output terminal
25	FE IN	I	Focus error amp input terminal
26	VREF	O	Reference voltage output terminal
27	TBAL	I	Tracking balance signal input terminal
28	FBAL	I	Focus balance signal input terminal

● IC11 (AN8086SE2): DC-DC converter controller

No.	Mark	I/O Division	Function
1	IN	I	Error amp input
2	FB	O	Error amp output
3	SPRO	I	Short protect circuit
4	DED	I	Dead time input
5	OUT	O	Switching output
6	GND	—	GND terminal
7	CT	I	Triangular wave oscillator capacitor input
8	PVcc	I	Power supply terminal

No.	Mark	I/O Division	Function
9	CLK	I	Clock signal input (f=88.2kHz)
10	START	I	Start detection input
11	POWER	I	Power ON/OFF detection terminal
12	VREF	O	Reference voltage input
13	EMP	O	Empty signal output
14	VSEN	I	Empty detect terminal
15	RESET	O	Reset signal output
16	Vcc	I	Power supply terminal

● IC301(SC436021CFU): System control & LCD drive

No.	Mark	I/O Division	Function
1	VDD	I	Power supply terminal
2	RDATA	O	Signal output for R.C.T
3	SPRES	O	Reset terminal
4	POWER	O	Power ON/OFF signal output
5	LIGHT	O	LCD backlight control signal output
6	MUTE	O	Muting signal output ("H": MUTE)
7	LED	O	LED drive command signal (Not used, open)
8	MDATA	O	Command data signal output
9	MCLK		Command clock output
10	MLD	I	Command load signal output
11	TX POWER		Voltage control terminal
12	CHARGE	—	Not used, open
13	VLCD3	I	Power supply terminal (LCD drive)
14	VLCD2	I	
15	VLCD1	—	
16	VSS	I	GND terminal
17	VPP	I	Power supply terminal
18	XOSC1	—	Reset signal input terminal
19	XOSC2	I/O	Not used, open
20	RESET	O	Reset detect terminal
21	OSC1	I	Main-system clock input
22	OSC2	I	Not used, open
23	LCDREM	I	Remote control signal output
24	CHGCMP	I	Remote control signal output
25	MEMORY	I	Key input terminal (MEMORY/RECALL)
26	REPEAT	I	Key input terminal (REPEAT)
27	SKIP-R	I	Key input terminal (SKIP.R)
28	SKIP-F	I	Key input terminal (SKIP.F)
29	STOP	I	Key input terminal (■/POWER OFF)

No.	Mark	I/O Division	Function
30	PLAY	I	Key input terminal (PLAY/PAUSE)
31	HOLD	I	Key input terminal (HOLD)
32	RANDOM	I	Play mode(RANDOM) selector terminal
33	RESUME	I	Play mode(RESUME) selector terminal
34	SENSE	I	Sense signal input
35	EMPTY	I	Empty detection input terminal
36	REST	I	Reset detection terminal
37	SHOCKP	I	X-DSSP/OPT OUT ON/OFF selector terminal
38	ACDET	I	Power supply detection signal input
39	SUBQ	I	Sub-code(Q data) input
40	STAT	I	Status signal(CRC, CUE, CLVS, TTSTOP, FCLV, SQCK) input
41	SQCK	O	Sub-code Q register clock output
42	WLSRCN/ RSENSE	I	Remote control signal input
43	STROBE	I/O	Rechargeable control input/output terminal
44	BUZ	O	Beep control output
45	BLKCK	I	Sub-code block(Q data) clock (75Hz) input
46	OPEN	I	Disc holder OPEN det. terminal (Not used, connected to power supply)
47	VDD	I	Power supply terminal
48 ┌ 51	BP3 ┌ BP0	O	LCD segment signal output
52 ┌ 59	FP0 ┌ FP7	O	LCD segment signal output
60	VSS	—	GND terminal
61 ┌ 69	FP8 ┌ FP16	O	LCD segment signal output
70 ┌ 79	FP7 ┌ FP26	—	Loop filter control output terminal LCD segment signal output (Not used, open)
80	VUP	O	

● IC401(MPC17A50VMEL): Motor drive

No.	Mark	I/O Division	Function
1	CGND	—	GND terminal (control circuit)
2	VLG	I	Power supply terminal (control circuit)
3	INTR	I	Tracking coil control signal input
4	NI2	—	Connected to capacitor filter
5	OP2		
6	INFO	I	Focus coil control signal input
7	NI1	—	Connected to capacitor filter
8	OP1		
9	LIM	I	Limit control level signal input
10	VR	I	Voltage control terminal
11	CLK	I	Clock signal input
12	OP3	—	Connected to capacitor filter
13	NI3		
14	INTV	I	Traverse motor control signal input
15	OP4	—	Connected to capacitor filter
16	NI4		
17	INSP	I	Spindle motor control signal input
18	PHSW	I	CH4 mode input terminal

No.	Mark	I/O Division	Function
19	POL	O	CH4 monitor output terminal (Not used, open)
20	CFL4	—	Connected to capacitor filter
21	CFL3		
22	SP+	O	Spindle motor drive signal output
23	SP-		
24	PVCC	I	(CH3, CH4 output) Powerd supply terminal
25	TRV-	O	Traverse motor drive signal output
26	PGND	—	GND terminal (CH3, CH4 output)
27	TRV+	O	Traverse motor drive signal output
28	FO+	O	Focus coil drive signal output
29	PGND	—	GND terminal (CH1, CH2 output)
30	FO-	O	Focus coil drive signal output
31	PVCC	I	(CH1, CH2 output) Power supply terminal
32	TR-	O	Tracking coil drive signal output
33	TR+		
34	CFL1	—	Connected to capacitor filter
35	CFL2		
36	VG	I	Power supply terminal (Print driver circuit)

● IC503(MNV7400BT1T): 4M DRAM

No.	Mark	I/O Division	Function
1	VDD	I	Power supply terminal
2	D0	I/O	Data input/output terminal
3	D1	I/O	Data input/output terminal
4	NWE	I	Write enable terminal
5	NRAS	I	Low and address strobe terminal
6	NC	—	Not used, open
7	A10	I	Address input terminal
8 ┌ 11	A0 ┌ A3	I	Address input terminal

No.	Mark	I/O Division	Function
12	VDD	I	Power supply terminal
13	VSS	—	GND terminal
14 ┌ 19	A4 ┌ A9	I	Address input terminal
20	NOE	I	Output enable terminal
21	NCAS	I	Column address strobe terminal
22	D2	I/O	Data input/output terminal
23	D3	I/O	Data input/output terminal
24	VSS	—	GND terminal


■ Supply of Rechargeable Battery Ass'y as Replacement Parts

Please take note of the following points relating to Battery Carrying Case to be used for protection of Rechargeable Battery Ass'y from shorting.

Replacement Parts:

- Rechargeable Battery Ass'y (RFKFP3GAVT2S) to be supplied will be provided with Battery Carrying Case (RFKNLS370-K).
- No replacement parts will be supplied for Rechargeable Battery Ass'y without Battery Carrying Case.
- Replacement parts will be supplied for Battery Carrying Case (RFKNLS370-K) without Rechargeable Battery Ass'y.
- To your customers, delivery Rechargeable Battery Ass'y together with Battery Carrying Case to prevent shorting accidents that may occur when Rechargeable Battery Ass'y is carried about without Battery Carrying Case.


Rechargeable Battery Ass'y
(Rechargeable Batteries with Carrying Case)
(RFKFP3GAVT2S)

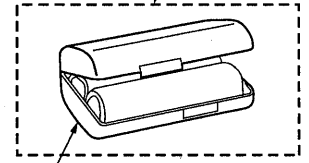

Battery Carrying Case (RFKNLS370-K)

■ Caution in Use of Rechargeable Battery Ass'y

- Take Rechargeable Battery Ass'y out of Battery Carrying Case and use it.
- Be sure to carry Rechargeable Battery Ass'y in this Battery Carrying Case.
If not, it may either heat or ignite by shorting with a metal.

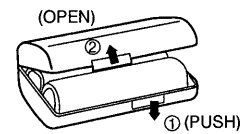

■ Replacement Parts List

Notes: ● Important safety notice:

Components identified by Δ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
Parts without these indications can be used for all areas.

- Warning: This product uses a laser diode. Refer to caution statements on page 2.

- ACHTUNG: Die Lasereinheit nicht zerlegen.

Die Lasereinheit darf nur gegen eine vom Hersteller spezifizierte Einheit ausgetauscht werden.

- Capacity values are in microfarads (μ F) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
- Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM), 1M=1,000k (OHM)
- The marking (RTL) indicates that the Retention Time is limited for this item. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.
- (A) and (S) marks in Remarks indicate color of the unit.
[(A): Blue, (S): Silver]
- * : This item is not attached merchandise, but it is supplied as a replacement part.
- [M] indicates in Remarks columns parts that are supplied by MESA.

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
1	RKK0102-K	BATTERY COVER	1 [M]	
2	RGV0199-H	X-DSSP/OPT OUT OFF KNOB	1 [M]	
3	RGV0200-K	TRAIN/S-XBS, PLAY MODE KNOB	2 [M]	
4	RJC93020	COMMON BATTERY TERMINAL	1 [M]	
5	RFKJLS480GHS	BOTTOM CABINET ASS'Y	1 [M]	
5-1	RKA0063-K	FOOT	2 [M]	
6	RMA0677	REAR ORNAMENT	1 [M]	
7	RME0239	OPEN SPRING	1 [M]	
8	RMS0570	SHAFT	1 [M]	
9	RFKLLS480-A	CD COVER ASS'Y	1 [M] (A)	
9	RFKLLS480-S	CD COVER ASS'Y	1 [M] (S)	
10	RGU1488-1H	OPERATION BUTTON	1 [M]	
11	RHE5119YA	SCREW	4 [M]	
12	RHE5155YA	SCREW	3 [M]	
13	RJB1819A	FFC (30P)	1 [M]	
14	RJF0027	LCD HOLDER	1 [M]	
15	RMA0937	HOLD PLATE	1 [M]	
16	RMA1029-1	LID COVER	1 [M]	
17	RSQ0048	ZEBRA RUBBER	1 [M]	
18	RYK0690B-K	INTERMEDIATE CABINET ASS'Y	1 [M]	
18-1	RGU1489-K1	OPEN BUTTON	1 [M]	
18-2	RGV0198-K	HOLD-LOCK KNOB	1 [M]	
18-3	RME0238	HOLD SPRING	1 [M]	
18-4	RMR1048-G	LOCK PLATE (A)	1 [M]	
18-5	RMR1049-G	LOCK PLATE (B)	1 [M]	
18-6	RMR1050-K	STOPPER	1 [M]	
18-7	RHE5119YA	SCREW	2 [M]	
19	XTN17+6GFZ	SCREW	4 [M]	
△ 20	RAE0142Z	TRAVERSE DECK	1 [M]	
20-1	RWG0449-H	FLOATING RUBBER	3 [M]	
A1	RQT4086-K	INSTRUCTION MANUAL	1 [M]	
A2	RFKFP3GAVT2S	RECHARGEABLE BATTERY ASS'Y	1 [M]	
A2-1	RFKNLS370-K	BATTERY CARRYING CASE	1 [M]	
A3	RFA0627-K4	BATTERY CASE	1 [M]	
A4	RFC0041-K	SOFT CASE	1 [M]	
△ A5	RFEA403H-S	AC ADAPTOR	1 [M]	
A6	RFEV006PKM	WIRED REMOTO CONTROLLER	1 [M]	
A7	RFEV316P-K1S	STEREO EARPHONES	1 [M]	
A8*	RKB2052A-O	EAR PADS	1 [M]	
C10-12	ECUZNC104ZFY	16V 0.1U	3 [M]	
C13	ROE0JSA4701X	6.3V 47U	1 [M]	
C14	ECEAOJKA101I	6.3V 100U	1 [M]	
C15	ECUV1E103KBV	25V 0.01U	1 [M]	
C17	ECEA1AKN100I	10V 10U	1 [M]	
C18	ECUV1H331KBV	50V 330P	1 [M]	
C19	ECUV1C104KBV	16V 0.1U	1 [M]	
C20	ECST1AY475RR	10V 4.7U	1 [M]	
C21	ECUV1E223KBV	25V 0.022U	1 [M]	
C22	ECUZNC104ZFY	16V 0.1U	1 [M]	
C24	ROE1ASC4R71X	10V 4.7U	1 [M]	
C25	ECUVNC224KBN	16V 0.22U	1 [M]	
C26	ECUV1H331KBV	50V 330P	1 [M]	
C28	ECEVOGA471P	4V 470U	1 [M]	
C29	ECEA1AKA221I	10V 220U	1 [M]	
C30	ECUV1H470KCV	50V 47P	1 [M]	
C31	ECUVNC224KBN	16V 0.22U	1 [M]	
C32	ECST1AY475RR	10V 4.7U	1 [M]	
C51	ECUV1C104KBV	16V 0.1U	1 [M]	
C52	ECUZNC104ZFY	16V 0.1U	1 [M]	
C101	ECUV1C104KBV	16V 0.1U	1 [M]	
C103	ECUV1E103KBV	25V 0.01U	1 [M]	
C106	ECUV1H331KBV	50V 330P	1 [M]	
C107	ECUV1H221KBV	50V 220P	1 [M]	
C111	ECUV1C273KBV	16V 0.027U	1 [M]	
C113	ECUZNC104ZFY	16V 0.1U	1 [M]	
C114	ECUVNC474KBN	16V 0.47U	1 [M]	
C115	ECUV1E223KBV	25V 0.022U	1 [M]	
C117	ECUV1H332KBV	50V 3300P	1 [M]	
C201	RCE0JSL4701X	6.3V 47U	1 [M]	
C202	ECUVNC224KBN	16V 0.22U	1 [M]	
C203	ECST1AY225RR	10V 2.2U	1 [M]	
C204	ECUV1H101KCV	50V 100P	1 [M]	


Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
C206	ECUV1E103KBV	25V 0.01U	1 [M]	
C207, 08	ECUV1H102KBV	50V 1000P	2 [M]	
C301	ECST0JY156RR	6.3V 15U	1 [M]	
C304, 05	ECUZNC104ZFY	16V 0.1U	2 [M]	
C306	ECUVNC105ZFN	16V 1U	1 [M]	
C333	ECUV1H221KBV	50V 220P	1 [M]	
C401-03	ECUV1H471KBV	50V 470P	3 [M]	
C404	ECUVNC105ZFN	16V 1U	1 [M]	
C406	ECUV1H151KBV	50V 150P	1 [M]	
C407	ECST0JY106RR	6.3V 10U	1 [M]	
C408	ECUVNC105ZFN	16V 1U	1 [M]	
C409	ECUV1H151KBV	50V 150P	1 [M]	
C410	ECUV1H471KBV	50V 470P	1 [M]	
C413, 14	ECUV1H471KBV	50V 470P	2 [M]	
C415	ECUZNC104ZFY	16V 0.1U	1 [M]	
C416	ECUVNC105ZFN	16V 1U	1 [M]	
C418	ECUV1H331KBV	50V 330P	1 [M]	
C420	ECUVNC105ZFN	16V 1U	1 [M]	
C501	ECUV1H220KCV	50V 22P	1 [M]	
C502	ECUV1H390KCV	50V 39P	1 [M]	
C503	ECUV1H561KBV	50V 560P	1 [M]	
C505	ECUV1E223KBV	25V 0.022U	1 [M]	
C507	ECEVOGA221SP	4V 220U	1 [M]	
C508	ECUZNC104ZFY	16V 0.1U	1 [M]	
C509	ECUV1H470KCV	50V 47P	1 [M]	
C510	ECUVNC224KBN	16V 0.22U	1 [M]	
C513	ECUV1H102KBV	50V 1000P	1 [M]	
C514	ECUZNC104ZFY	16V 0.1U	1 [M]	
C515	ECUV1H332KBV	50V 3300P	1 [M]	
C523-26	ECUZNC104ZFY	16V 0.1U	4 [M]	
C600	ECUZNC104ZFY	16V 0.1U	1 [M]	
C601, 02	ECUV1H102KBV	50V 1000P	2 [M]	
C603, 04	ECUV1H272KBV	50V 2700P	2 [M]	
C605, 06	ECST0JY106RR	6.3V 10U	2 [M]	
C607, 08	ECUV1H681KBV	50V 680P	2 [M]	
C609	ECUZNC104ZFY	16V 0.1U	1 [M]	
C610	ECST0GY226RR	4V 22U	1 [M]	
C611, 12	ECUZNC104ZFY	16V 0.1U	2 [M]	
C613	ECST0JY226RR	6.3V 22U	1 [M]	
C614-16	ECST0GY226RR	4V 22U	3 [M]	
C701, 02	ECUV1H332KBV	50V 3300P	2 [M]	
C703, 04	ECUV1E123KBV	25V 0.012U	2 [M]	
C705, 06	ECUV1C333KBV	16V 0.033U	2 [M]	
C707, 08	ECUV1H102KBV	50V 1000P	2 [M]	
C709, 10	ECEA0GPK221I	4V 220U	2 [M]	
C711, 12	ECST0JY106RR	6.3V 10U	2 [M]	
C713	ECEA0JPK101I	6.3V 100U	1 [M]	
C714	ECUZNC104ZFY	16V 0.1U	1 [M]	
C901, 02	ECUV1H332KBV	50V 3300P	2 [M]	
C903	ECUZNC104ZFY	16V 0.1U	1 [M]	
C904	ECUV1E223KBV	25V 0.022U	1 [M]	
CN11, 12	RJC93015-1	BATTERY TERMINAL (+) (-)	2 [M]	
CN13	RJH5102-1	R. BATTERY TERMINAL	1 [M]	
CN14	RJH9208	BATT. CASE CONNECT. TERMINAL	1 [M]	
CN101	RJS2A5016T	CONNECTOR (16P)	1 [M]	
CN301	RJS1A8830T	CONNECTOR (30P)	1 [M]	
CN401	RJS2A5106T1	CONNECTOR (6P)	1 [M]	
CN801	RJS2A4530T	CONNECTOR (30P)	1 [M]	
D10	MA8033LTX	DIODE	1 [M]	
D11, 12	MA110TX	DIODE	2 [M]	
D13	RB411DT146	DIODE	1 [M]	
D15, 16	MA110TX	DIODE	2 [M]	
D201	RB411DT146	DIODE	1 [M]	
D202	MA110TX	DIODE	1 [M]	
D313	MA141WKTXX	DIODE	1 [M]	
D401	MA110TX	DIODE	1 [M]	
D402	MA8082MTX	DIODE	1 [M]	
D403	MA110TX	DIODE	1 [M]	
D601	MA110TX	DIODE	1 [M]	
D903, 04	MA141WKTXX	DIODE	2 [M]	
IC11	AN8086SE2	IC	1 [M]	
IC51	NJM2406FTE1	IC	1 [M]	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
IC101	AN8839SBE1	IC	1	[M]
IC201	NJM2406FTE1	IC	1	[M]
IC301	SC436021CFU	IC	1	[M]
IC401	MPC17A50VMEL	IC	1	[M]
IC501	MN662746RPK1	IC	1	[M]
IC502	SM5902AF	IC	1	[M]
IC503	MNV7400BT1T	IC	1	[M]
IC701	NJU7082AMTE1	IC	1	[M]
△ ICP11	UNH000700A	IC PROTECTOR	1	[M]
JK11	RJJ43K09-C	DC IN JACK	1	[M]
JK501	GP1F366X	OPTICAL DIGITAL OUT	1	[M]
JK601	RJJD355ZA-C	OUT JACK	1	[M]
JK701	RJJ36T02-C	HEADPHONES JACK	1	[M]
L12	ELL7URD001	COIL	1	[M]
L14	RLQU331KT-W	COIL	1	[M]
L201	RLQB471KT1-K	COIL	1	[M]
L202	RLQG330JT2-Y	COIL	1	[M]
L401	RLQU331KT-W	COIL	1	[M]
L601-03	RLBV102V-Y	COIL	3	[M]
LCD801	RSL5152-L	LCD DISPLAY	1	[M]
P1	RPK0980	PACKING CASE	1	[M] (S)
P1	RPK0981	PACKING CASE	1	[M] (A)
P2	RPFO111	PROTECTION BAG (UNIT)	1	[M]
P3	RP00753	SPACER	1	[M]
PCB1	REP2566A-M	MAIN P. C. B.	1	[M] (RTL)
PCB2	REP2432A-S	OPERATION P. C. B.	1	[M] (RTL)
Q10	2SD2074HWSST	TRANSISTOR	1	[M]
Q11, 12	2SD1450STA	TRANSISTOR	2	[M]
Q13	2SD1328TX	TRANSISTOR	1	[M]
Q14	2SD1819ATX	TRANSISTOR	1	[M]
Q16	XN2401TX	TRANSISTOR	1	[M]
Q17	2SB970RSTX	TRANSISTOR	1	[M]
Q18	UN5115TX	TRANSISTOR	1	[M]
Q19	XN1213TX	TRANSISTOR	1	[M]
Q20	2SD1328STTX	TRANSISTOR	1	[M]
Q21	UN5211TX	TRANSISTOR	1	[M]
Q22	UN5213TX	TRANSISTOR	1	[M]
Q23	DTA114YUA106	TRANSISTOR	1	[M]
Q51	XN2401TX	TRANSISTOR	1	[M]
Q52	2SB970RSTX	TRANSISTOR	1	[M]
Q53	2SD1758TLPOR	TRANSISTOR	1	[M]
Q54, 55	2SD1819ATX	TRANSISTOR	2	[M]
Q56	UN5115TX	TRANSISTOR	1	[M]
Q57	UN5211TX	TRANSISTOR	1	[M]
Q58	2SD1819ATX	TRANSISTOR	1	[M]
Q201	2SB970RSTX	TRANSISTOR	1	[M]
Q202	2SB709ATX	TRANSISTOR	1	[M]
Q204	2SB709ATX	TRANSISTOR	1	[M]
Q306	XP0121NOOL	TRANSISTOR	1	[M]
Q308	UN5211TX	TRANSISTOR	1	[M]
Q403	2SD1819ATX	TRANSISTOR	1	[M]
Q404	UN5215TX	TRANSISTOR	1	[M]
Q501	DTA114YUA106	TRANSISTOR	1	[M]
Q505	UN511NTX	TRANSISTOR	1	[M]
Q507	UN5210TX	TRANSISTOR	1	[M]
Q601, 02	2SD1328TX	TRANSISTOR	2	[M]
Q603	XN1215TX	TRANSISTOR	1	[M]
Q604	2SB709ATX	TRANSISTOR	1	[M]
Q605	XN1501TX	TRANSISTOR	1	[M]
Q701, 02	2SD1328TX	TRANSISTOR	2	[M]
Q705	XN1215TX	TRANSISTOR	1	[M]
Q901, 02	2SD1819ATX	TRANSISTOR	2	[M]
Q903	DTA114YUA106	TRANSISTOR	1	[M]
Q906	DTA114YUA106	TRANSISTOR	1	[M]
Q907	XN1210TX	TRANSISTOR	1	[M]
Q910	2SB1218ATX	TRANSISTOR	1	[M]
Q911	2SD1819ATX	TRANSISTOR	1	[M]
Q912	UN5211TX	TRANSISTOR	1	[M]

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
Q913	UN5215TX	TRANSISTOR	1	[M]
Q915, 16	2SD1819ATX	TRANSISTOR	2	[M]
R10	ERJ3GEYJ102Z	1/16W 1K	1	[M]
R11, 12	ERJ3GEYJ101V	1/16W 100	2	[M]
R13	ERJ3GEYJ100V	1/16W 10	1	[M]
R14	ERJ3GEYJ681V	1/16W 680	1	[M]
R15	ERJ3GEYJ221V	1/16W 220	1	[M]
R16	ERJ3GEYJ103Z	1/16W 10K	1	[M]
R17	ERJ3GEYJ223V	1/16W 22K	1	[M]
R18	ERJ3GEYJ474V	1/16W 470K	1	[M]
R19	ERJ3GEYJ472V	1/16W 4.7K	1	[M]
R20	ERJ3GEYJ392V	1/16W 3.9K	1	[M]
R21	ERJ3GEYJ153V	1/16W 15K	1	[M]
R22	ERJ3GEYJ333V	1/16W 33K	1	[M]
R23	ERJ3GEYJ223V	1/16W 22K	1	[M]
R24	ERJ3GEYJ184V	1/16W 180K	1	[M]
R25	ERJ3GEYJ472V	1/16W 4.7K	1	[M]
R26	ERJ3GEYJ152V	1/16W 1.5K	1	[M]
R27	ERJ3GEYJ473V	1/16W 47K	1	[M]
R28, 29	ERJ3GEYJ104Z	1/16W 100K	2	[M]
R30, 31	ERJ3GEYJ334V	1/16W 330K	2	[M]
R32	ERJ3GEYJ332V	1/16W 3.3K	1	[M]
R33	ERJ3GEYJ222V	1/16W 2.2K	1	[M]
R34	ERJ3GEYJ224V	1/16W 220K	1	[M]
R35	ERJ3GEYJ823V	1/16W 82K	1	[M]
R36	ERJ3GEYJ471V	1/16W 470	1	[M]
R37, 38	ERJ3GEYJ222V	1/16W 2.2K	2	[M]
R39	ERJ3GEYJ223V	1/16W 22K	1	[M]
R51	ERJ3GEYJ104Z	1/16W 100K	1	[M]
R52	ERJ3GEYJ105V	1/16W 1M	1	[M]
R53	ERJ3GEYJ104Z	1/16W 100K	1	[M]
R54	ERJ3GEYJ151V	1/16W 150	1	[M]
R55	ERJ3GEYJ183V	1/16W 18K	1	[M]
R56	ERJ3GEYJ683V	1/16W 68K	1	[M]
R57	ERJ3GEYJ124V	1/16W 120K	1	[M]
R59	ERJ12YJ1R2H	1/2W 1.2	1	[M]
R60	ERJ3GEYJ333V	1/16W 33K	1	[M]
R61	ERJ3GEYJ681V	1/16W 680	1	[M]
R62	ERJ3GEYJ122V	1/16W 1.2K	1	[M]
R63	ERJ3GEYJ681V	1/16W 680	1	[M]
R65	ERJ3GEYJ104Z	1/16W 100K	1	[M]
R66	ERJ3GEYJ3R3V	1/16W 3.3	1	[M]
R105	ERJ3GEYJ393V	1/16W 39K	1	[M]
R106	ERJ3GEYR00V	CHIP JUMPER	1	[M]
R107, 08	ERJ3GEYJ683V	1/16W 68K	2	[M]
R111	ERJ3GEYJ102Z	1/16W 1K	1	[M]
R112	ERJ3GEYJ472V	1/16W 4.7K	1	[M]
R113, 14	ERJ3GEYJ330V	1/16W 33	2	[M]
R115	ERJ3GEYR00V	CHIP JUMPER	1	[M]
R201	ERJ3GEYJ102Z	1/16W 1K	1	[M]
R202	ERJ3GEYJ122V	1/16W 1.2K	1	[M]
R204	ERJ3GEYJ104Z	1/16W 100K	1	[M]
R205	ERJ3GEYJ332V	1/16W 3.3K	1	[M]
R206	ERJ3GEYJ333V	1/16W 33K	1	[M]
R207	ERJ3GEYJ473V	1/16W 47K	1	[M]
R208	ERJ3GEYJ563V	1/16W 56K	1	[M]
R212	ERJ3GEYJ333V	1/16W 33K	1	[M]
R213	ERJ3GEYJ103Z	1/16W 10K	1	[M]
R214	ERJ3GEYJ822V	1/16W 8.2K	1	[M]
R215	ERJ3GEYJ393V	1/16W 39K	1	[M]
R216, 17	ERJ3GEYJ223V	1/16W 22K	2	[M]
R218	ERJ3GEYJ224V	1/16W 220K	1	[M]
R307	ERJ3GEYJ472V	1/16W 4.7K	1	[M]
R317-19	ERJ3GEYJ473V	1/16W 47K	3	[M]
R320-22	ERJ3GEYJ103Z	1/16W 10K	3	[M]
R324	ERJ3GEYJ103Z	1/16W 10K	1	[M]
R325, 26	ERJ3GEYJ102Z	1/16W 1K	2	[M]
R327	ERJ3GEYJ153V	1/16W 15K	1	[M]
R329-31	ERJ3GEYJ472V	1/16W 4.7K	3	[M]
R332	ERJ3GEYJ102Z	1/16W 1K	1	[M]
R400	ERJ3GEYJ472V	1/16W 4.7K	1	[M]
R401	ERJ3GEYJ473V	1/16W 47K	1	[M]
R402	ERJ3GEYJ472V	1/16W 4.7K	1	[M]
R405	ERJ3GEYJ222V	1/16W 2.2K	1	[M]

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
R406	ERJ3GEYJ123V	1/16W 12K	1	[M]					
R411, 12	ERJ3GEYJ103Z	1/16W 10K	2	[M]					
R501	ERJ3GEYJ683V	1/16W 68K	1	[M]					
R503	ERJ3GEYJ473V	1/16W 47K	1	[M]					
R505, 06	ERJ3GEYJ821V	1/16W 820	2	[M]					
R508	ERJ3GEYJ122V	1/16W 1.2K	1	[M]					
R514	ERJ3GEYJ333V	1/16W 33K	1	[M]					
R515	ERJ3GEYJ681V	1/16W 680	1	[M]					
R516	ERJ3GEYJ184V	1/16W 180K	1	[M]					
R523	ERJ3GEYJ102Z	1/16W 1K	1	[M]					
R524	ERJ3GEYJ2R7V	1/16W 2.7	1	[M]					
R526	ERJ3GEYJ102Z	1/16W 1K	1	[M]					
R532	ERJ3GEYJ472V	1/16W 4.7K	1	[M]					
R533	ERJ3GEYJ224V	1/16W 220K	1	[M]					
R534	ERJ3GEYJ103Z	1/16W 10K	1	[M]					
R539-41	ERJ3GEYJ473V	1/16W 47K	3	[M]					
R542, 43	ERJ3GEYJ103Z	1/16W 10K	2	[M]					
R601, 02	ERJ3GEYJ681V	1/16W 680	2	[M]					
R603, 04	ERJ3GEYJ561V	1/16W 560	2	[M]					
R605, 06	ERJ3GEYJ473V	1/16W 47K	2	[M]					
R607, 08	ERJ3GEYJ102Z	1/16W 1K	2	[M]					
R609, 10	ERJ3GEYJ332V	1/16W 3.3K	2	[M]					
R611	ERJ3GEYJ471V	1/16W 470	1	[M]					
R612	ERJ3GEYJ682V	1/16W 6.8K	1	[M]					
R613	ERJ3GEYJ103Z	1/16W 10K	1	[M]					
R614	ERJ3GEYJ104Z	1/16W 100K	1	[M]					
R615	ERJ3GEYJ682V	1/16W 6.8K	1	[M]					
R616	ERJ3GEYJ222V	1/16W 2.2K	1	[M]					
R703, 04	ERJ3GEYJ103Z	1/16W 10K	2	[M]					
R705, 06	ERJ3GEYJ473V	1/16W 47K	2	[M]					
R707, 08	ERJ3GEYJ223V	1/16W 22K	2	[M]					
R709-12	ERJ3GEYJ105V	1/16W 1M	4	[M]					
R713, 14	ERJ3GEYJ682V	1/16W 6.8K	2	[M]					
R715, 16	ERJ3GEYJ123V	1/16W 12K	2	[M]					
R717, 18	ERJ3GEYJ392V	1/16W 3.9K	2	[M]					
R719, 20	ERJ3GEYJ103Z	1/16W 10K	2	[M]					
R721, 22	ERJ3GEYJ333V	1/16W 33K	2	[M]					
R723, 24	ERJ3GEYJ154V	1/16W 150K	2	[M]					
R725, 26	ERJ3GEYJ180V	1/16W 18	2	[M]					
R727, 28	ERJ3GEYJ1R5V	1/16W 1.5	2	[M]					
R729, 30	ERJ3GEYJ472V	1/16W 4.7K	2	[M]					
R731, 32	ERJ3GEYJ331V	1/16W 330	2	[M]					
R739	ERJ3GEYJ181V	1/16W 180	1	[M]					
R901	ERJ3GEYJ274V	1/16W 270K	1	[M]					
R902	ERJ3GEYJ102Z	1/16W 1K	1	[M]					
R910	ERJ3GEYJ334V	1/16W 330K	1	[M]					
R912	ERJ3GEYJ152V	1/16W 1.5K	1	[M]					
R913	ERJ3GEYJ473V	1/16W 47K	1	[M]					
R914	ERJ3GEYJ103Z	1/16W 10K	1	[M]					
R915	ERJ3GEYJ332V	1/16W 3.3K	1	[M]					
R916	ERJ3GEYJ472V	1/16W 4.7K	1	[M]					
R917, 18	ERJ3GEYJ821V	1/16W 820	2	[M]					
R919	ERJ3GEYJ680V	1/16W 68	1	[M]					
R920	ERJ3GEYJ470V	1/16W 47	1	[M]					
R921	ERJ3GEYJ474V	1/16W 470K	1	[M]					
R922	ERJ3GEYJ224V	1/16W 220K	1	[M]					
R923	ERJ3GEYJ474V	1/16W 470K	1	[M]					
R924	ERJ3GEYJ154V	1/16W 150K	1	[M]					
RJ501	ERJ3GEYOR00V	CHIP JUMPER	1	[M]					
S201, 02	ESE11SV6	SW	2	[M]					
S305	RSS3A007-1A	SW	1	[M]					
S306	ESE11MH1T	SW	1	[M]					
S501	RSS2A010-1A	SW	1	[M]					
S701	RSS3B018-A	SW	1	[M]					
S801-06	RSG0030-P	SW	6	[M]					
SA1	SZZP1054C	PLAYABILITY TEST DISC	1	[M]					
SA2	SZZP1056C	UNEVEN TEST DISC	1	[M]					
VR11	RRN3A05B33WL	V. R	1	[M]					
VR701	EVUTUEB09C54	V. R	1	[M]					
X501	RSXC16M8S01T	OSCILLATOR	1	[M]					

■ Cabinet Parts Location

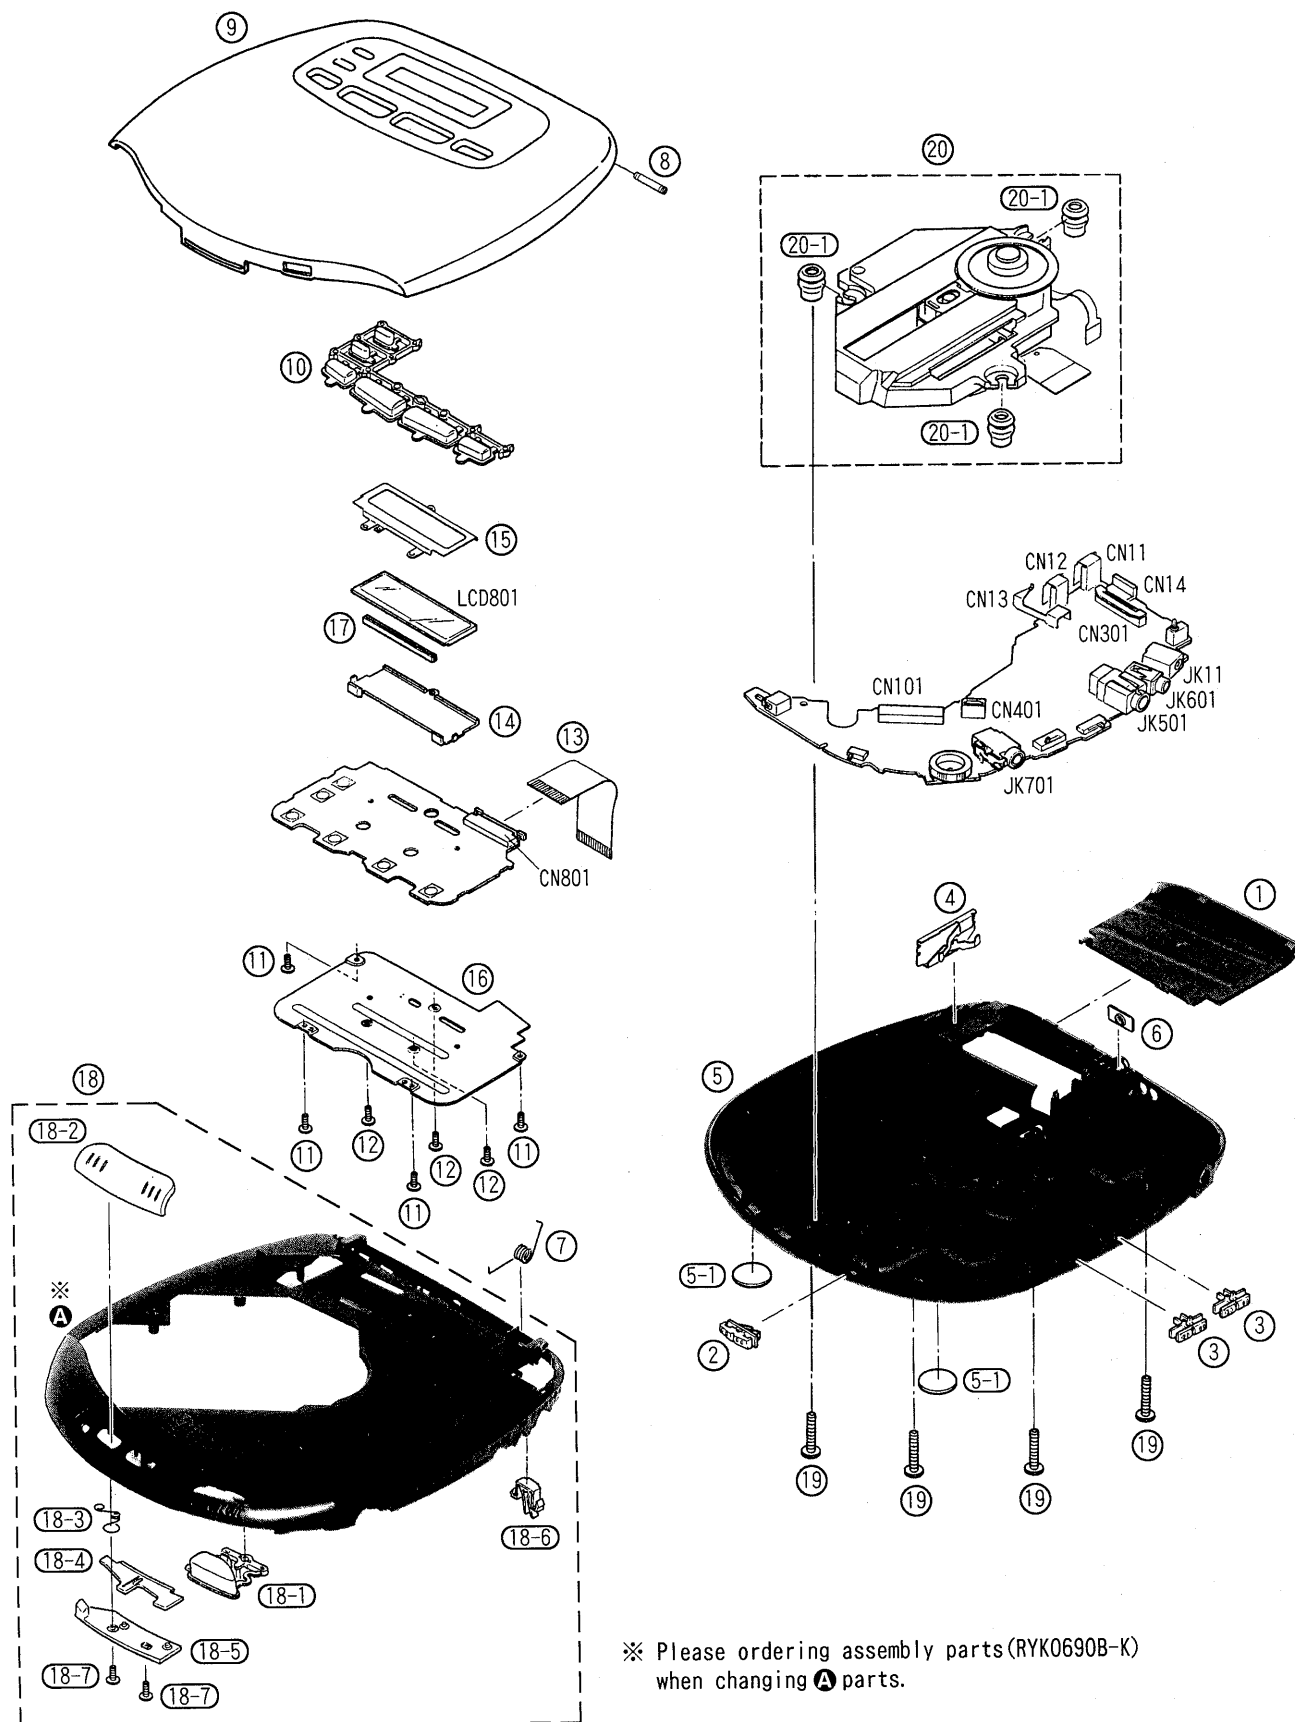

※ Please ordering assembly parts (RYK0690B-K) when changing **A** parts.

■ Packaging

