

# Service Service Service



CL 96532086\_000.eps

080999

# Service Manual



## SERVICING

For servicing CDR779, the set can be divided into three parts

1. The display board (partly) 1002, the I/O board 1004, the headphone board (partly) 1002, the IR board (partly) 1002, the ON/OFF & Standby LED board (partly) 1002 and the CD-out board (partly) 1002 have to be repaired at component level. The power supply unit 1003 is available as spare part, but can also be repaired at component level.
2. The CDR module (containing the CDR loader 81, CDR main board 1001 and loader bracket 82, 83) can also be repaired at component level with the help of COMPAIR release 1.6 and higher. With this tool the diagnosing of the set can be done in an interactive way. In the tool also the adjustment procedure has been implemented. This is absolutely necessary in case the CDR mainboard and/or (CDR loader) CDM is disconnected from the matched production combination. Only designated workshops can perform these repairs. Please send the complete set to the designated workshop.
3. The CD module (containing the CD loader 131, CD mainboard 1005 and loader bracket 132) is a new module with VAL1250 loader assy but also a separate CDM and separate loader parts will be available via service stock. The CD mainboard can be repaired at component level.

Also available : Circuit Description "The Basics of Compact Disc Recordable/Rewriteable". Service codenumber 4822 725 25242. Second line Repairmanual . Service codenumber 3104 125 40110.

## Contents

	Page
1. Technical Specifications	2
2. Warning and Servicing Hints	4
3. User Instructions	7
4. Mechanical Instructions	
Wiring Diagram CDR	19
Wiring Diagram CD loader	20
Exploded View CDR	21
Exploded View CD loader	22
Dismantling Instructions	23
5. Block diagram, Circuit diagrams and PWB's	Diagram PWB
Overall Blockdiagram	24
Display Board	25
IR / On/Off &Standby LED Board	27
Headphone / CD-out Board	28
I/O Board: EXT DAC	(Diagram 1)
I/O Board: Cinch	(Diagram 2)
I/O Board: Mic ADC	(Diagram 3)
I/O Board: Power supply	(Diagram 4)
I/O Board: DAC filter	(Diagram 5)
I/O Board: DAC	(Diagram 6)
Power Supply Unit	36
CD-Mainboard: Decoder & Servo	(Diagram 1A)
CD-Mainboard: Servo drivers	(Diagram 1B)
CD-Mainboard: Audio	(Diagram 1C)
CD-Mainboard: Microprocessor	(Diagram 2)
6. Diagnostic Software	45
7. Faultfinding Trees	49
8. Faultfinding Guide	55
9. List of Abbreviations	69
10. Partslist (mechanical and electrical)	75

© Copyright 2000 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.  
All rights reserved. No part of this publication may be reproduced, stored in a  
retrieval system or transmitted, in any form or by any means, electronic, mechanical,  
photocopying, or otherwise without the prior permission of Philips.



# PHILIPS

# 1. Technical Specifications CDR779

## 1.1 General

Mains voltage	: all range version 84-230V	Dynamic range	: typical: 98dB. : > 94dB. at 1kHz.
Mains frequency	: 50-60 Hz	THD+N	: typical: 95dB.
Power consumption	: 12W		: > 89dB from 20Hz. until 20kHz.
DC output	: +5V ± 10%, 50mA max.		: typical: 90dB.

## 1.2 Input/output

### 1.2.1 Line output (CDR & CD)

Output level	: 2Vrms at 0dB
Output resistance	: 200Ω

### 1.2.2 Line input

Input sensitivity	: 500mVrms
Input impedance	: 50kΩ
Max. input voltage	: 2.5Vrms

### 1.2.3 Digital output (CDR & CD)

Format	: AES/EBU format according IEC958 (consumer format)
Sampling frequency	: 44.1kHz
Output resistance	: 75Ω

### 1.2.4 Digital input

Format	: AES/EBU format according IEC958 (consumer format)
Sampling frequency	: 32 to 48kHz
Input resistance	: 75Ω

### 1.2.5 Optical input

Format	: AES/EBU format according IEC958 (consumer format)
Sampling frequency	: 32 to 48kHz

## 1.3 Audio performance

### 1.3.1 Cinch analog output (CDR play-back)

Output voltage	: 2Vrms ± 2dB. (0dB digital).
Frequency range F.R.	: 20Hz < F.R. < 20kHz.
Amplitude linearity	: ± 0.15dB. : typical: ± 0.1dB.
Channel unbalance	: <0.3dB at 1kHz. : typical: ± 0.2dB.
Phase non-linearity	: <0.2deg at 1kHz.
Outband attenuation	: 50dB above 30kHz.
Channel separation	: >100dB at 1kHz. : typical: 110dB. : >84dB from 20Hz. until 20kHz.
S/N-ratio A-weighted	: typical: >85dB. : >99dB. : typical: 100dB.
S/N-ratio unweights	: >97dB.

### 1.3.2 Cinch analog input/output (monitor path CDR)

Measured with Audio precision system one. Input voltage is 2Vrms.	
input voltage	: 2Vrms ± 2dB. (0dB digital).
Frequency range F.R.	: 20Hz < F.R. < 20kHz.
Amplitude linearity	: ± 0.2dB. : typical: ± 0.1dB.
Channel unbalance	: < 0.2dB at 1kHz. : typical: ± 0.15dB.
Input resistance	: 25kΩ
Phase non-linearity	: < 0.2deg at 1kHz.
Outband attenuation	: 50dB above 30kHz.
Channel separation	: > 90dB at 1kHz. : typical: 100dB.
S/N-ratio A-weighted	: > 87dB. : typical: 93dB.
S/N-ratio unweighted	: > 87dB. : typical: 90dB.
Dynamic range	: > 86dB. at 1kHz. : typical: 90dB. : > 86dB from 20Hz. until 20kHz.
THD+N	: typical: 90dB. : > 86dB from 20Hz. until 20kHz.
Output voltage	: 2Vrms ± 2dB. (0dB digital).
Frequency range F.R.	: 20Hz < F.R. < 20kHz.
Amplitude linearity	: ± 0.3dB. : typical: ± 0.1dB.
Channel unbalance	: < 0.3dB at 1kHz. : typical: ± 0.2dB.
Output resistance	: 200Ω
Phase non-linearity	: < 0.2deg at 1kHz.
Outband attenuation	: 60dB above 30kHz.
Channel separation	: > 95dB at 1kHz. : typical: 100dB. : > 90dB from 20Hz. until 20kHz.
S/N-ratio A-weighted	: typical: > 93dB. : > 98dB. : typical: 100dB.
S/N-ratio unweighted	: > 92dB. : typical: 95dB.
Dynamic range	: > 92dB. at 1kHz. : typical: 96dB. : > 90dB from 20Hz. until 20kHz.
THD+N	: typical: 96dB. : > 82dB from 20Hz. until 20kHz.

**1.3.4 Headphone output (all functions)**

Output voltage	: 2Vrms (0dB)/16Ω
S/N	: > 80dB
THD+N	: > 78dB
Channel separation	: > 60dB between 20Hz until 20kHz

**1.4 Laser device**

Material	: GaAlAs
Wave length	: between 780 and 800nm (at 25°C)
Laser output	: 1mW max. during reading, 20mW max. during writing
Class	: 3B

**1.5 Dimensions and weight**

Number and height of feet	: 4x11mm foiled
Apparatus tray closed (WxDxH)	: 435x305x75mm (without feet)
Weight without packaging	: 3.2kg
Weight with packaging	: 4.2kg

## 2. Warnings and Servicing Hints



### WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.



### WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor elektrostatische ontladingen (ESD). Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat. Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.



### ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation. Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfiler le bracelet servi d'une résistance de sécurité. Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.



### WARNUNG

Alle IC und viele andere Halbleiter sind empfindlich gegen elektrostatische Entladungen (ESD). Unsorgfältige Behandlung bei der Reparatur kann die Lebensdauer drastisch vermindern. Sorgen Sie dafür, dass Sie im Reparaturfall über ein Pulsarmband mit Widerstand mit dem Massepotential des Gerätes verbunden sind. Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.



### AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD). La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cauzione alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza. Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.



Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.



Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt terug gebracht en dat onderdelen, identiek aan de gespecificeerde worden toegepast.



Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.



Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Geräts darf nicht verändert werden. Für Reparaturen sind Original-Ersatzteile zu verwenden.



Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati pezzi di ricambio idetici a quelli specificati.



### CAUTION VARO! WARNING ADVERSEL DANGER VORSICHT

INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.

AVATTAESSA OLET ALTIINA NÄKYMÄTÖWÄLLE LASER SÄTEILYLLÉ ÄLÄ KATSO SÄTEESEN.

OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD BETRAKTA EJ STRÅLEN.

USYNLIG LASERSTRÅLNING VED ÅBNING. UNDGÅ UNSAETTELSE FOR STRÅLING.

INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.


UNSICHTBARE LASERSTRÄHLUNG WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.

### SHOCK, FIRE HAZARD SERVICE TEST:

**CAUTION:** After servicing this appliance and prior to returning to customer, measure the resistance between either primary AC cord connector pins (with unit NOT connected to AC mains and its Power switch ON), and the face or Front Panel of product and controls and chassis bottom, Any resistance measurement less than 1 Megohms should cause unit to be repaired or corrected before AC power is applied, and verified before return to user/customer. Ref.UL Standard NO.1492.


### NOTE ON SAFETY:

Symbol : Fire or electrical shock hazard. Only original parts should be used to replace any part with symbol Any other component substitution(other than original type), may increase risk or fire or electrical shock hazard.

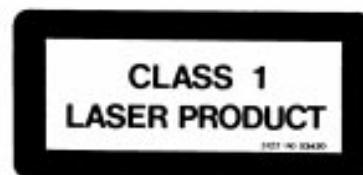

**SERVICING HINTS**

In the set, chip components have been applied. For disassembly and assembly check the figure below.

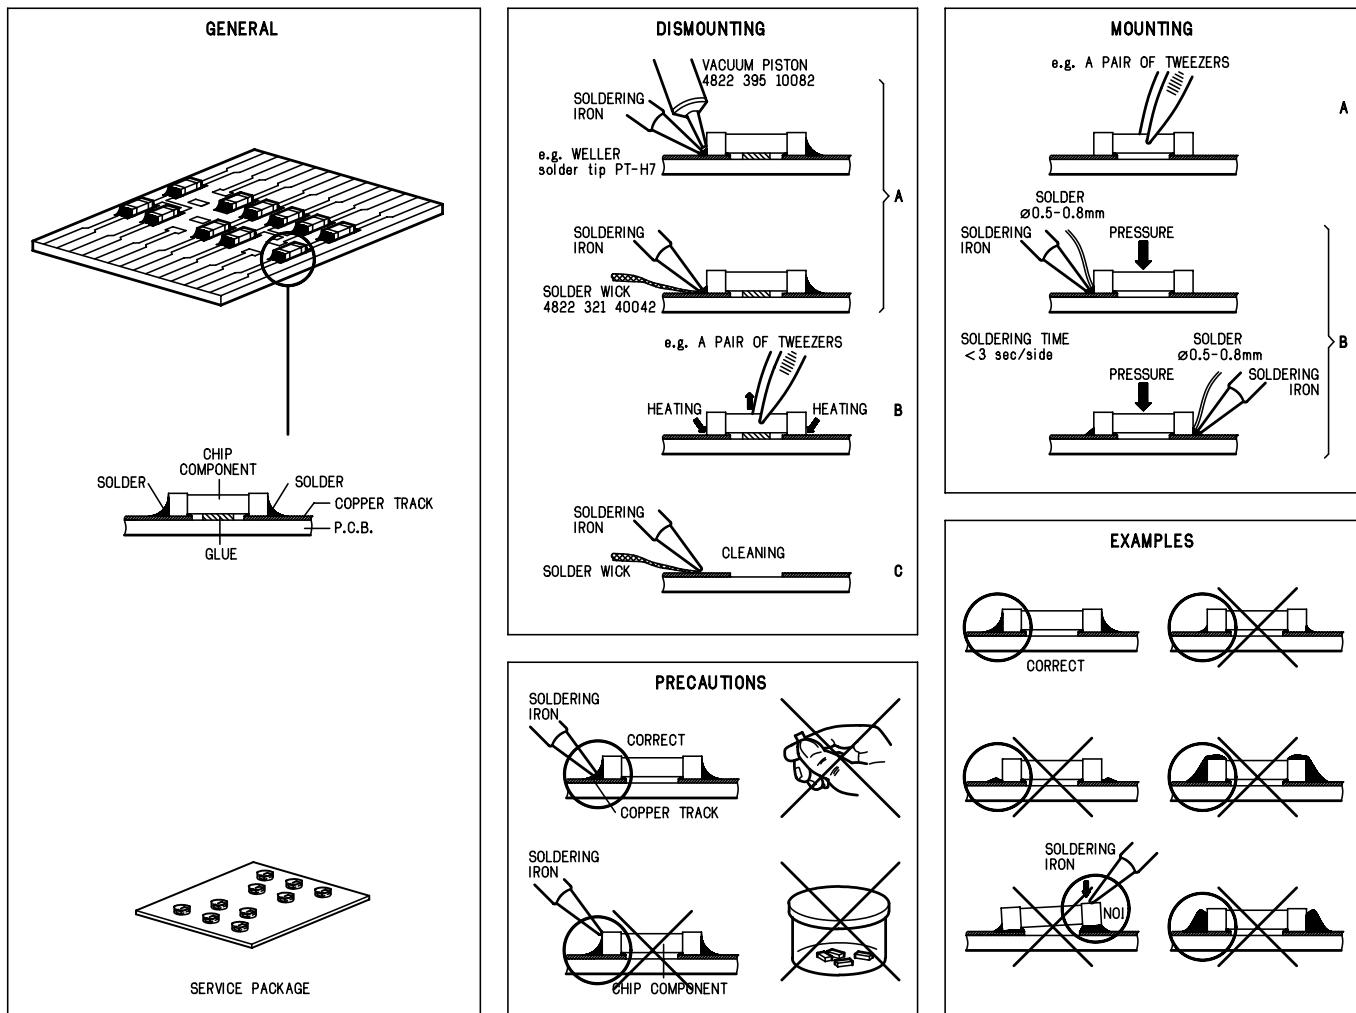

## **SAFETY GUIDELINES FOR THE PROFESSIONAL SERVICE TECHNICIAN**

## **Important**

Proper service and repair is important to the safe, reliable operation of all Philips equipment. The service procedures recommended by Philips and described in this service manual are effective methods of performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tools should be used when and as recommended.

It is important to note that this manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Philips could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Philips has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Philips must first satisfy himself thoroughly that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

## Safety Checks

After the original service problem has been corrected, a complete safety check should be made. Be sure to check over the entire set, not just the areas where you have worked. Some previous servicer may have left an unsafe condition, which could be unknowingly passed on to your customer. Be sure to check all of the following:

#### **Fire and Shock Hazard**

1. Be sure all components are positioned in such a way as to avoid the possibility of adjacent component shorts. This is especially important on those units which are transported to and from the service shop.
  2. Never release a repaired unit unless all protective devices such as insulators, barriers, covers, strain reliefs, and other hardware have been installed according to the original design.
  3. Soldering and wiring must be inspected to locate possible cold solder joints, solder splashes, sharp solder points, frayed leads, pinched leads, or damaged insulation (including the ac cord). Be certain to remove loose solder balls and all other loose foreign particles.
  4. Check across-the-line components and other components for physical evidence of damage or deterioration and replace if necessary. Follow original layout, lead length, and dress.
  5. No lead or component should touch a resistor rated at 1 watt or more. Lead tension around protruding metal surfaces or edges must be avoided.
  6. Critical components having special safety characteristics are identified with a ▲ by the Ref. No. in the parts list and enclosed within a broken line\* (where several critical components are grouped in one area) along with the safety symbol ▲ on the schematic diagrams and/or exploded views.

- 7. Replacement parts without the same safety characteristics may create shock, fire, or other hazards.
- 7. When servicing any unit, always use a separate Isolation transformer for the chassis. Failure to use a separate isolation transformer may expose you to possible shock hazard, and may cause damage to servicing instruments.
- 8. Many electronic products use a polarized ac line cord (one wide pin on the plug). Defeating this safety feature may create a potential hazard to the servicer and the user. Extension cords which do not incorporate the polarizing feature should never be used.


### **Fire and Shock Hazard (Continued)**

- After reassembly of the unit, always perform an ac leakage test or resistance test from the line cord to all exposed metal parts of the cabinet. Also, check all metal control shafts (with knobs removed), antenna terminals, handles, screws, etc. to be sure the unit is safe to operate without danger of electrical shock.

\* Broken line:

### **Leakage Current Cold Check**

1. Unplug the ac line cord and connect a jumper between the two prongs of the plug.
  2. Turn on the power switch.
  3. Measure the resistance value between the jumpered ac plug and all exposed cabinet parts of the receiver, such as screw heads, antennas, and control shafts. When the exposed metallic part has a return path to the chassis, the reading should be between 1 megohm and 5.2 megohms. When the exposed metal does not have a return path to the chassis, the reading must be infinity. Remove the jumper from the ac line cord.

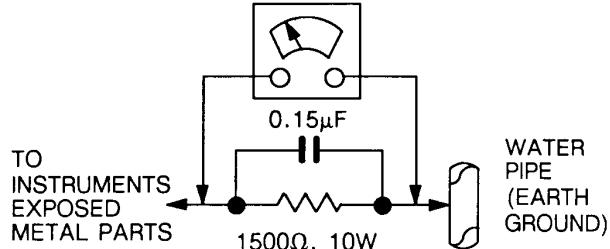

## **Leakage Current Hot Check**

1. Do not use an isolation transformer for this test. Plug the completely reassembled unit directly into the ac outlet.
  2. Connect a 1.5k, 10W resistor paralleled by a 0.15uF. capacitor between each exposed metallic cabinet part and a good earth ground such as a water pipe, as shown above.
  3. Use an ac voltmeter with at least 5000 ohms/volt sensitivity to measure the potential across the resistor.
  4. The potential at any point should not exceed 0.75 volts. A leakage current tester may be used to make this test; leakage current must not exceed 0.5 millamps. If a measurement is outside of the specified limits, there is a possibility of shock hazard. The receiver should be repaired and rechecked before returning it to the customer.
  5. Repeat the above procedure with the ac plug reversed. (Note: An ac adapter is necessary when a polarized plug is used. Do not defeat the polarizing feature of the plug.)

## **Parts Replacement**

1. Many electrical and mechanical parts in Philips equipment have special safety related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. The use of a substitute part which does not have the same safety characteristics as the Philips recommended replacement part shown in this service manual may create shock, fire, or other hazards. Under no circumstances should the original design be modified or altered without written permission from Philips. Philips assumes no liability, express or implied, arising out of any unauthorized modification of design. Servicer assumes all liability.
  2. All ICs and many other semiconductor parts are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce the life of the part drastically.

**LASER NOTE:**

**DANGER -** Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

**CAUTION -** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**CAUTION - The use of optical instruments with this product will increase eye hazard.**

### 3. Directions for use

<p><b>CONTROLS AND CONNECTIONS</b></p> <p><b>DISPLAY</b></p> <p><b>Connections at the back</b></p> <p><b>CD recorder</b></p> <p><b>CD player</b></p> <p><b>General</b></p> <p><b>Note:</b> Unless stated otherwise, all controls are on the front of the CD recorder. When provided on the remote control, you can also use the corresponding buttons, after selecting the CD recorder deck or CD player deck by pressing CDR or CD.</p> <p><b>Controls on the front</b></p> <p><b>CD recorder</b></p> <ol style="list-style-type: none"> <li>1 <b>ON/OFF</b> ..... turns the CD recorder ON or OFF (if the recorder is in Standby mode, any key press will activate the CD recorder)</li> <li>2 Standby indicator</li> <li>3 Disc tray</li> <li>4 <b>OPEN/CLOSE ▲</b> ..... opens/closes disc tray</li> <li>5 <b>PLAY/PAUSE ▶ II</b> ..... starts play/interrupts play or recording</li> <li>6 <b>STOP ■</b> ..... stops/clears a program</li> <li>7 <b>RECORD TYPE</b> ..... selects recording modes</li> <li>8 <b>RECORD</b> ..... starts recording, finalizing, erasing</li> <li>9 <b>FINALIZE</b> ..... selects finalize mode</li> <li>10 <b>ERASE</b> ..... selects erasing mode (disc or track)</li> <li>11 <b>EXT SOURCE</b> ..... selects external input source</li> <li>12 <b>CDR</b> ..... selects CD recorder deck display/keys</li> <li>13 <b>DISP</b> ..... information screen</li> <li>14 <b>CD</b> ..... selects CD player deck display/keys</li> <li>15 <b>SEARCH ▲</b> ..... searches backward</li> <li>16 <b>SEARCH ▼</b> ..... searches forward</li> <li>17 <b>EASY JOG ▶ [rotate]</b> ..... previous/next track (Play and Program mode) - recording level control (recording) - selects settings (menu on)</li> <li>18 <b>ENTER</b> ..... [push] - selects settings in Menu mode - programs track numbers - stores Menu settings</li> <li>19 <b>STORE/MENU</b> ..... - enters Menu mode - deletes Tracks from a program - deletes text in Menu mode - returns to a higher level in the menu</li> <li>20 <b>CANCEL/DELETE</b> ..... - receives signals from the remote control - socket for headphones</li> <li>21 <b>REPEAT ■</b> ..... separate play of CD recorder deck and CD player deck</li> <li>22 <b>REPEAT</b> ..... repeats play (All, program or track) - activates scrolling or text over the display (once)</li> <li>23 <b>OPEN/CLOSE ▲</b> ..... permanent text scrolling and time display (CUE/RW) or program in random order - opens/closes program memory</li> <li>24 <b>DISPLAY</b> ..... permanent text scrolling and time display (CUE/RW) or program in random order - opens/closes program memory</li> <li>25 <b>PHONES</b> ..... socket for headphones</li> <li>26 <b>DJ MODE</b> ..... separate play of CD recorder deck and CD player deck</li> <li>27 <b>REPLAY</b> ..... repeats play (All, program or track)</li> <li>28 <b>SCROLL</b> ..... activates scrolling or text over the display (once)</li> <li>29 <b>SHUFFLE</b> ..... selects display information, permanent text scrolling and time display (CUE/RW) or program in random order</li> <li>30 <b>PROG[ram]</b> ..... permanent text scrolling and time display (CUE/RW) or program in random order - cursor control in Manu/Prog. review mode</li> </ol> <p><b>DISPLAY indications</b></p> <p><b>CDR779</b></p> <p><b>English</b></p>	<p>Directions for use</p> <p>CDR779</p> <p>3.</p> <p>GB 7</p> <p><b>DISPLAY indications</b></p> <p>1 <b>REM/REC TIME</b> ..... remaining time/remaining recording time/recording time</p> <p>2 <b>TRACK</b> ..... track number</p> <p>3 <b>BALANCE</b> ..... balance (lights during balance adjustment)</p> <p>4 <b>TOTAL REM</b> ..... total or remaining time of disc or track</p> <p>5 <b>ON</b> ..... remote control active</p> <p>6 <b>STEP</b> ..... indicates the number of tracks in a program</p> <p>7 <b>TRACK BAR</b> ..... indicates</p> <ul style="list-style-type: none"> <li>- tracks on a disc or in a program</li> <li>- track in play</li> <li>- disc or program contains more than 20 tracks</li> <li>- flashes during programming/lights in program mode</li> <li>- REPEAT TRACK/ALL lights up when a track/complete disc (or program) is repeated</li> <li>- SCAN lights up when the first 10 seconds of each track are played</li> <li>- SHUFFLE plays tracks in random order</li> <li>- CD player deck selected</li> <li>- CD inserted (a pre-recorded CD or finalized CDR or CDRW disc)</li> <li>- RECORD - lights during recording from the internal CD recorder</li> <li>- L/R HI ..... record level bar. Indicates the audio signal level</li> <li>- DJ mode selected</li> <li>- changer mode selected</li> <li>- pause function active</li> <li>- lights during play</li> <li>- unfinalized (CDRW) disc inserted</li> <li>- analog input I selected for external recording</li> <li>- automatic or synchronised start of external recording</li> <li>- analog recording</li> <li>- optical input I selected for external recording</li> <li>- digital input I selected for external recording</li> <li>- SYNC ..... automatic or synchronised start of external recording</li> <li>- MANUAL ..... manual operation of external recording</li> </ul> <p><b>Note:</b> Unless stated otherwise, all controls are on the front of the CD recorder. When provided on the remote control, you can also use the corresponding buttons, after selecting the CD recorder deck or CD player deck by pressing CDR or CD.</p> <p><b>General</b></p> <p><b>Display</b></p> <p><b>SEARCH ▲</b> ..... cursor control in Manu/Prog. review mode</p> <p><b>SEARCH ▼</b> ..... cursor control in Manu/Prog. review mode</p> <p><b>13 Display</b> ..... information screen</p> <p><b>14 CD</b> ..... cursor control in Manu/Prog. review mode</p> <p><b>15 ▲</b> ..... cursor control in Manu/Prog. review mode</p> <p><b>16 ▼</b> ..... cursor control in Manu/Prog. review mode</p>
--	--

## DISPLAY

## DISPLAY messages

Messages, as listed and explained here, may appear on the display for your guidance.

## General

- PRESS FINISH .....time countdown when finalizing a disc
- PRESS RECORD .....to start manual recording
- START SOURCE .....to start synchronised recording from a source (e.g. CD player)
- FINALIZED CD .....when trying to record on a finalized CD or a prerecorded CD
- UNFINALIZE/ .....when trying to record on a finalized CRW
- PRESS ENTER .....when a professional source is connected
- PROF. SOURCE .....when reading CD text from source disc for recording
- REC TEXT .....when reading CD text from source disc for recording
- TEXT PROTECT .....when CD text or source disc is subjected to copy protection (CD text will not be recorded)

## Play

- CHANGER MODE .....CD changer-mode selected
- DJ MODE .....CD mode selected when recording keys are pressed in DJ-mode
- PROGRAM .....program mode selected
- RL BLM TITLE .....will be followed by album title
- TRACK TITLE .....will be followed by track title
- RL BLM ARTIST .....will be followed by artist name
- TRACK ARTIST .....will be followed by track artist name
- UPDATE .....no more recording possible
- DIGITAL .....digital coaxial input 1 selected
- OPTICAL .....digital optical input selected
- ANALOG .....analog input selected
- COPY PROTECT .....no digital recording can be made of the external source
- NO FINALIZED .....when opening the tray with an unfinished disc inserted (CD recorder)
- RECORD FIRST .....high speed recording selected
- REC LISTEN .....listen speed recording selected
- FREE CD .....high speed recording of a complete disc and Auto Finalize function selected
- REC EDIT DISC .....synchronized start of recording from external source selected
- REC EDIT MAN .....manual start of recording from external source selected
- xx dB .....level is being adjusted
- DOES NOT FIT .....time left on CDR(W) disc is not enough for proposed recording
- PROLOG REC .....copy prohibited track found during recording, track will be copied
- ERASE TRACK .....when erasing one or more tracks
- ERASE DISC .....when finalizing an already finalized disc
- CHECK INPUT .....when RECORD is pressed while no digital source is selected
- xx xx ERASE .....time countdown when erasing a track or a disc

## Others

- RL ADDED TR .....when the recorder enters a data track during recording
- FINALIZE CD .....laser power calibration performed 96 times, finalize disc needed
- INITIALIZING .....during laser power calibration for unfinished discs
- DISC RECOVER .....during disc recovering after power failure
- OPC ERROR .....OPC failure during OPC procedure (OPC = Optimum Power Calibration)
- RECORD ERROR .....recording error in menu mode
- DISC ERROR .....when trying to record on or initialize a recovered disc
- MEMORY FULL .....when text memory is full. To add a CD to the list, first finalize or erase another disc from the list
- NOT POSSIBLE .....when trying to erase a CDR

## INSTALLATION

## English

## MENU messages - See Menu mode



For playback on the CD recorder (and/or CD player deck) the following outputs are present:

- Digital coaxial output (CD & CDR).
- Analog output (CD & CDR).

We advise you to connect these to the TAPE or CDR input on your amplifier.

For external recording the following inputs are present:

- Digital optical input.
- Digital coaxial input.
- Analog input.

For playback of CD player deck separately (DJ mode) from the CD recorder the following outputs are present:

- Digital coaxial output (CD).
- Analog output (CD).

We advise you to connect these to the CD input on your amplifier.

For external recording the following inputs are present:

- Digital optical input.
- Digital coaxial input.
- Analog input.

For playback of CD player deck separately (DJ mode) from the CD recorder this following outputs are present:

- Digital coaxial output (CD).
- Analog output (CD).

We advise you to connect these to the CD input on your amplifier.

For external recording the following inputs are present:

- Digital optical input.
- Digital coaxial input.
- Analog input.

For playback of CD player deck separately (DJ mode) from the CD recorder this following outputs are present:

- Digital coaxial output (CD).
- Analog output (CD).

We advise you to connect these to the CD input on your amplifier.

For external recording the following inputs are present:

- Digital optical input.
- Digital coaxial input.
- Analog input.

For playback of CD player deck separately (DJ mode) from the CD recorder this following outputs are present:

- Digital coaxial output (CD).
- Analog output (CD).

We advise you to connect these to the CD input on your amplifier.

For external recording the following inputs are present:

- Digital optical input.
- Digital coaxial input.
- Analog input.

For playback of CD player deck separately (DJ mode) from the CD recorder this following outputs are present:

- Digital coaxial output (CD).
- Analog output (CD).

We advise you to connect these to the CD input on your amplifier.

For external recording the following inputs are present:

- Digital optical input.
- Digital coaxial input.
- Analog input.

For playback of CD player deck separately (DJ mode) from the CD recorder this following outputs are present:

- Digital coaxial output (CD).
- Analog output (CD).

We advise you to connect these to the CD input on your amplifier.

For playback of CD player deck separately (DJ mode) from the CD recorder this following outputs are present:

- Digital coaxial output (CD).
- Analog output (CD).

We advise you to connect these to the CD input on your amplifier.


## INSTALLATION

English

## INSTALLATION

Analog connections CD player deck

*This connection must be made for playback on the CD recorder deck as well as the CD player deck (cable ②). Cable ① is only required if you want to make recordings from an external analog source.*

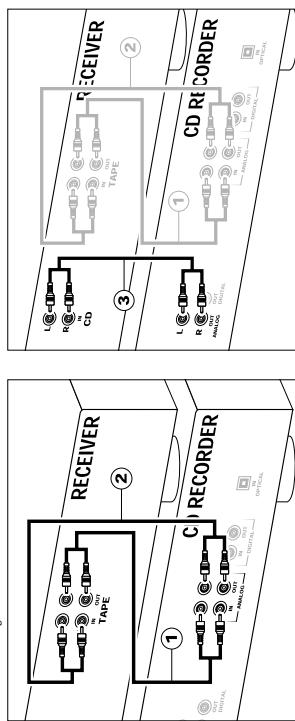

Use the audio cables supplied. Connect the red plugs to the R sockets, and the white plugs to the L sockets.  
1 For recording, connect cable ① between the ANALOG IN-sockets on the CD recorder and the CDR LINE- or TAPE OUT-sockets of an amplifier e.g. CDR, or AUX. (Connect the red plugs to the R sockets, and the white plugs to the L socket.)

*Note: For recording directly from a CD player, the analog input of the CD recorder should be connected to the analog output of the CD player.*

2 For playback, connect cable ② between the ANALOG OUT-sockets on the CD recorder and the input sockets of an amplifier e.g. TAPE IN, CDR or AUX.


*Note: Never use the PHONO input.*

- Never use the PHONO input.
- Your CD recorder/player is equipped with a digital coaxial output for the CD player deck. This output can be used for digital playback.

English

Digital optical connections CD recorder

*This connection is only required if you want to make recordings from an external CD player with a digital optical output.*

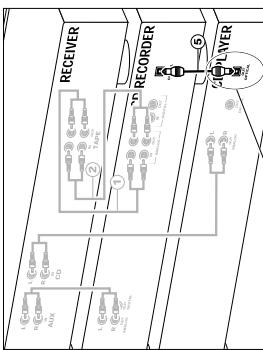


When connecting the Digital Optical cable, make sure it is fully inserted until there is a click.

- 1 Remove the dust caps from the digital optical connection. (We recommend you save the cap.)
- 2 For external recording, connect the cable ④ between the DIGITAL IN-socket on the CD recorder and the DIGITAL OUT-socket of an external CD player.

*Note: For playback, the digital coaxial outputs or analog outputs of the CD Player and CD recorder should be connected to an amplifier.*

Digital coaxial connections CD recorder

*This connection is only required if you want to make recordings from an external CD player with a digital coaxial output.*

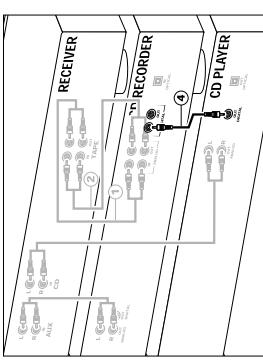


Use the digital coaxial cable supplied.

- 1 For external recording, connect the cable ④ between the DIGITAL IN-socket on the CD recorder and the DIGITAL OUT-socket of an external CD player.
- Note: Your CD recorder is equipped with a digital coaxial output (common output for CD recorder & CD player deck). This output can be used for digital playback.*

Digital optical connections CD recorder

*This connection is only required if you want to make recordings from an external CD player with a digital optical output.*

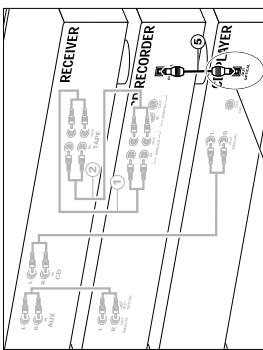


When connecting the Digital Optical cable, make sure it is fully inserted until there is a click.

- 1 Remove the dust caps from the digital optical connection. (We recommend you save the cap.)
- 2 For external recording, connect the cable ④ between the DIGITAL IN-socket on the CD recorder and the DIGITAL OUT-socket of an external CD player.

*Note: For playback, the digital coaxial outputs or analog outputs of the CD Player and CD recorder should be connected to an amplifier.*

Analog connections CD recorder & CD player

*This connection must be made for playback on the CD recorder deck as well as the CD player deck (cable ②). Cable ① is only required if you want to make recordings from an external analog source.*

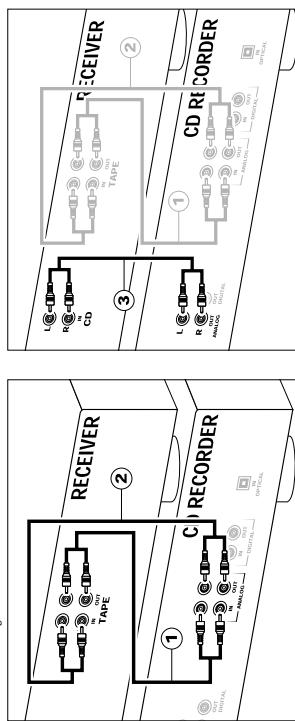

Use the audio cables supplied. Connect the red plugs to the R sockets, and the white plugs to the L sockets.  
1 For recording, connect cable ① between the ANALOG IN-sockets on the CD recorder and the CDR LINE- or TAPE OUT-sockets of an amplifier e.g. CDR, or AUX. (Connect the red plugs to the R sockets, and the white plugs to the L socket.)


*Note: For recording directly from a CD player, the analog input of the CD recorder should be connected to the analog output of the CD player.*

2 For playback, connect cable ② between the ANALOG OUT-sockets on the CD recorder and the input sockets of an amplifier e.g. TAPE IN, CDR or AUX.

*Note: Never use the PHONO input.*

## REMOTE CONTROL


English

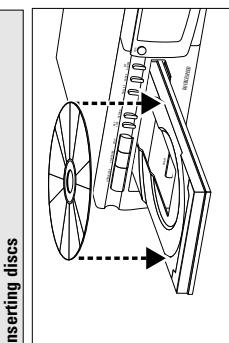1 Press OPEN/CLOSE to open the disc tray.  
→ C/FN lights up.

2 Insert a CD, CDR or CDRW in the appropriate recess in the tray label side up.

3 Press OPEN/CLOSE to close the tray (see also Playing a CD).  
C/L CLOSE lights up, followed by REFTT/US and the display will show the type of disc you inserted.

## Remote control commands

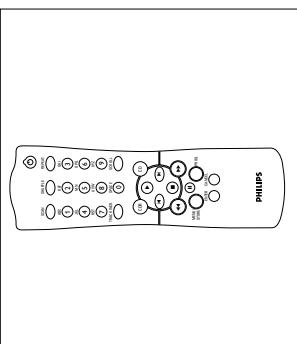

**STANDBY** ..... switches to Standby/On  
**SCAN** ..... plays the first 10 seconds of each track  
**SHUFFLE** ..... plays CDRW or program in random order  
**REPEAT** ..... repeat play  
**Number/alpha/keys 0-9** ..... selects a track by number  
                        - selects character for text input  
                        - increases track numbers during recording  
                        - inserts a space character during text input  
**TRACK INCR[ement]** ..... activates scrolling of text over the display  
**SPACE** ..... selects CD recorder deck  
**SCROLL** ..... selects CD player deck  
**CDR** ..... starts CDRW play  
**CD** ..... - previous track (Play and Program mode)  
                        - cursor control in Menu/Prog.  
**▲** ..... review mode  
                        - next track (Play and Program mode)  
                        - cursor control in Menu/Prog.

**REFTT/US** ..... cursor control in Review mode  
**REFTT/CD** ..... stops CDRW and clears a program  
                        - searches backward  
                        - searches forward  
                        - interrupts CDRW play/recording  
**ARTIST** ..... enters Artist mode  
**REFTT/ARTIST** ..... - stores Menu settings  
                        - selects settings in Menu mode  
                        - programs track numbers  
                        - starts playback of selected track  
**MENU/STORE** ..... - deletes tracks from a program  
                        - deletes text in Menu mode  
                        - returns to a higher level in the menu

• If a CD/RW is finalized it will show **CD** on the display.• If CD-text is available the **TITLE/ARTIST** will scroll by.


Note:

- Only Audio CDs will be accepted. If a non-audio disc is inserted, the display shows **REFTT/ DISC/ USE REFTT/CD**.

- Reading an uninitialized disc in the CD recorder deck could take approximately 1 minute.  
   - For recording it is important that the blank disc is completely free from dust particles or scratches. (see maintenance).

## INSTALLATION

English

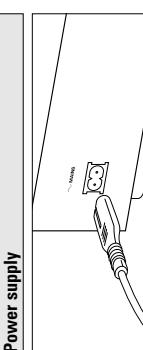

1 Plug the power cord supplied into the MAINS connector on the CD recorder, then into a mains socket.

2 Press ON/OFF.

→ The CD recorder will switch on.

3 The recorder switches automatically to active mode.

Note: When the CD recorder is in the **OFF** position, it is still consuming some power. If you wish to disconnect your player completely from the mains, withdraw the plug from the AC outlet.

## Setup recommendations

- Place the CD recorder on a solid, vibration free surface.
- Do not place the CD recorder near a source of heat or in direct sunlight.
- Do not use the CD recorder under extremely damp conditions.
- If the CD recorder is placed in a cabinet, make sure that a 2.5 cm space remains free on all sides of the CD recorder for proper ventilation.
- Important:**
- Do not put the CD recorder on top of other equipment that heats up the CD recorder (e.g. receiver or amplifier).

**Important:**

- Do not put the CD recorder on top of other equipment that heats up the CD recorder (e.g. receiver or amplifier).

## RECORDING

### Remarks about recording

- You will soon discover how easy it is to make your own CDs. Nevertheless, it is advisable to use a CDRW disc for your first try. We will describe:
- Recording from internal CD player deck; high speed or listen mode.
  - Recording from an external CD player deck; synchronized start with CD player or manual start; analog or digital.
  - If the disc is a CDRW and is already finalized you must unfinalize it first.
  - The recording procedure is the same for CDRs and CDRWs.

- If the disc already contains recordings, the CD recorder will automatically search for the end of the last track, so that recording can start from there.
- CD text can be added to a recording in Stop mode and during recording.

- For recording from external sources:**
- REC EXT DISC (automatic start of recording) - to make an automatic recording of an external source simply by starting the source.
  - REC EXT MANUAL (manual start of recording) - to start a manual recording from an external source.

- Some remarks on recording:**
- During high speed recording, the original recording quality will be maintained.
  - When Auto track is on (default setting), track numbers will automatically be increased during recording.
  - By programming tracks first, a compilation can be recorded.
  - If a finalized CD recordable disc is inserted in the CD recorder F/TNLZET C, REC TYPE will be displayed when REC TYPE is pressed. Recording is not possible.

- The **Serial Copy Management System (SCMS)** only allows digital recording under specific conditions:
  - This means that it is not possible to make a digital copy from a digital copy.
  - Analog recording is always possible!
  - The number of recordings from the original is unlimited.

- A maximum of 99 tracks can be recorded on a disc. Minimum allowable track length is 4 seconds.
- Recordings from DAT or DCC players will not always stop automatically.

- Important:**  
If you want to play the recorded CDR disc on any regular CD player, it must first be finalized. See finalizing discs.
- Finalized CDRW discs play only on CDRW compatible CD players.**
- For recording from CD changers always use REC E<sub>z</sub>T**

## RECORDING


### Recording modes

Your recorder offers several recording modes.

#### For recording from internal CD-deck:

- RECORD FAST (high speed digital recording) - fast recording of a disc or programmed tracks.
- REC LISTEN (normal speed digital recording) - listening to a recording while making it.
- MAKE CD (high speed digital recording and auto-finalize) - fast recording of a disc or programmed tracks. Recording will be finalized automatically.

**Warning:** No more recording possible after finalizing CDR

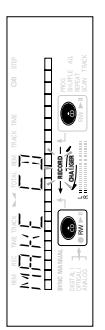

#### For recording from external sources:

- REC EXT DISC (automatic start of recording) - to make an automatic recording of an external source simply by starting the source.
- REC EXT MANUAL (manual start of recording) - to start a manual recording from an external source.

#### Some remarks on recording:


- During high speed recording, the original recording quality will be maintained.
- When Auto track is on (default setting), track numbers will automatically be increased during recording.
- By programming tracks first, a compilation can be recorded.
- If a finalized CD recordable disc is inserted in the CD recorder F/TNLZET C, REC TYPE will be displayed when REC TYPE is pressed. Recording is not possible.

- The **Serial Copy Management System (SCMS)** only allows digital recording under specific conditions:
  - This means that it is not possible to make a digital copy from a digital copy.
  - Analog recording is always possible!
  - The number of recordings from the original is unlimited.
- A maximum of 99 tracks can be recorded on a disc. Minimum allowable track length is 4 seconds.
- Recordings from DAT or DCC players will not always stop automatically.

- Important:**  
If you want to play the recorded CDR disc on any regular CD player, it must first be finalized. See finalizing discs.
- Finalized CDRW discs play only on CDRW compatible CD players.**
- For recording from CD changers always use REC E<sub>z</sub>T**

## RECORDING

### High speed recording from internal CD player

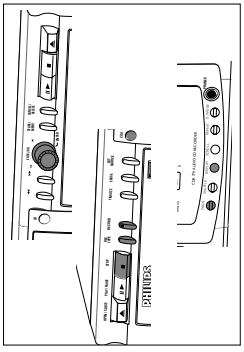

During high speed recording the sound is not audible.

#### Preparing for high speed recording

- 1 Make sure that the recording disc is absolutely free of scratches and dust particles.

- 2 Press REC TYPE to choose the type of recording:  
Once to select REC F/T REC E<sub>z</sub>T

- If you wish to make a fast recording of a disc or programmed tracks, three times to select REC E<sub>z</sub>T. If you wish to make a fast recording of a disc or programmed tracks and to automatically finalize the recording,

- The REC label starts blinking. After 3 seconds the display shows the remaining CDRW recording time on the left and total time of source on the right. Every 2 seconds REC E<sub>z</sub>T (REC) is displayed.) The left selection indicator is lit.

- L/F/T/E lights up. → RECORD goes out and recording stops. (Minimal track length must be 4 seconds otherwise silence will be added to the track.)

- If STOP was pressed within 3 seconds after RECORD, no recording will take place.

- After recording, the display shows L/F/T/E for several seconds. The total time indications can differ slightly. However, no music information is lost.

- Note: In this Recording mode, the Pause function is not operative.

#### Important:

- If you want to play the recorded CDR disc on any regular CD player, it must first be finalized. See finalizing discs.
- Finalized CDRW discs play only on CDRW compatible CD players.**

#### Recording modes

### English

### English

- If **REC NOT FIT** appears on the display there is not enough recording space left on the CDRW disc. You can press RECORD only complete tracks that still fit on the CDRW will recorded.
- Or
  - You can press PROG to select one or more tracks for recording (see programming):
  - rotate the EASY JOG/ENTER key to the required track number, then press the key for ENTER on the remote control)
  - or
    - directly select the track number via the 10-keypad on the remote control then press the ENTER key to confirm your selection and go to the next step.

#### Start high speed recording

- 1 Press RECORD to start recording.

- L/F/T lights up. The display shows the total remaining time for the selected recording. High speed recording starts. → RECORD – lights continuously.
- Recording will stop automatically.
- Note:** Copy prohibited tracks will be copied analog. REC is displayed.

- To check the track number and track time, press DISPLAY. This can be done during recording.

- Recording will stop automatically.

- Note:** Copy prohibited tracks will be copied analog. REC is displayed.

- If STOP was pressed within 3 seconds after RECORD, no recording will take place.

- After recording, the display shows L/F/T/E for several seconds. The total time indications can differ slightly. However, no music information is lost.

- Note:** In this Recording mode, the Pause function is not operative.

#### Important:


- If you want to play the recorded CDR disc on any regular CD player, it must first be finalized. See finalizing discs.
- Finalized CDRW discs play only on CDRW compatible CD players.**



## RECORDING

### RECORDING

#### Autostart recording from external CD player

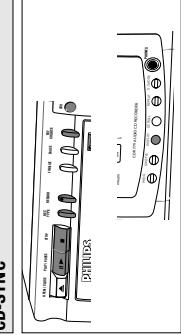

If however you start the source during a track, CD-SYNC recording starts at the beginning of the next track or after 27 seconds of silence in analog recordings.

- To check the remaining recording time on the CDRW, press DISPLAY. (This can also be done during recording)
- The EASY JOG/ENTER key can be used to adjust the recording level.

The recorder stops automatically.

- 2** To stop recording manually, press STOP on the CD recorder.  
→ UPDATE lights up and SYNC and **L**, go out.

- STOP was pressed within 3 seconds after pressing PLAY, no recording will take place.

- To interrupt recording, press PAUSE on the CD recorder.  
→ **L** starts to flash. (Autostart recording is disabled.) To resume, press RECORD on the CD recorder.

- After recording the display will show UP/DOWN for several seconds.

- Note: Auto track is always active.  
**Important:** If you want to play the recorded CDR disc on any regular CD player, it must first be finalized. See finalizing discs.


**Finalized CDRW discs play only on CDRW compatible CD players.**

**For recording from CD changers a always use REC E/F/**



## RECORDING

## Erasing CDRW discs

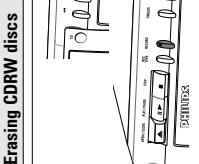

For uninitialized CDRW discs only.

You can erase:

- Tracks can only be erased from the end.
- Tracks: 1, 2, 3, 4, 5, 6, 7, 8, 9, X

*Note: It is not possible to erase tracks within the sequence.*

- It is also possible to erase the entire disc at once.

## To erase one or more tracks from the end:

1 Press ERASE once.

- The display shows the number of tracks and their total playing time. ERASE, TRACK, and PRESS RECORD lights up.

lights up.

- If the disc is finalized, **CD** appears on the display after inserting a CDRW in the recorder. The recorder will ask you to confirm uninitializing first. Confirm by pressing the EASY JOG/ENTER key or ENTER on the remote control.

- 2 Select the tracks you wish to erase by turning the EASY JOG/ENTER key to the left.

- The selected track numbers start blinking on the track bar.


- The display shows the remaining time after erasing the selected track(s). The shown track will also be included in the erase of tracks.

## To erase the entire disc:

1 In stop mode press ERASE twice.

→ ERASE, TRACK, and PRESS RECORD light up.

- If the disc is finalized, **CD** appears on the display after inserting a CDRW in the recorder. The recorder will ask you to confirm uninitializing first. Confirm by pressing the EASY JOG/ENTER key or ENTER on the remote control.

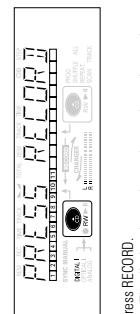

Erasure of a complete disc may take up to 15 seconds.


## PLAYING

## English

## Playing CDs on Deck 1 and/or Deck 2 (DJ mode)

With this double deck it is possible to play the CD recorder deck and/or the CD player deck individually (at the same time). In this case the extra CD output must also be connected to an amplifier.

- 1 Select DJ mode using the DJ MODE key.  
→ **CHANGER** appears on the display and **L** lights up.

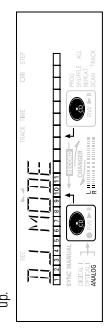

- 2 On the deck you want to play, press PLAY/PAUSE ▶ to start CD play.  
→ lights up, and the track number and track time of the track in play appear on the display.  
→ After playing the first disc, the second disc will automatically be played.

- Press DISPLAY once, twice or three times to see:  
→ remaining track time, total remaining time, permanent text information (see Menu mode).

- Press RECORD once, twice or three times to see:  
→ remaining track time, total remaining time, permanent text information (see Menu mode).

- To interrupt play temporarily, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- To continue play, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- If you want to see the information about the other deck, press the CDR key or the CD key in the display frame.  
→ The number of tracks and the total playing time appear on the display.

- To interrupt play temporarily, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- To continue play, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- 3 To stop play, press STOP ■.  
→ The number of tracks and the total playing time appear on the display.

- If you want to see this information about the other deck, press the CDR key or the CD key in the display frame.  
→ The number of tracks and the total playing time appear on the display.

1 In stop mode press SCAN on the remote control.

- 2 The first 10 seconds of each track on the CD (or program if set) are played.

3 Press SCAN again to return to normal CD play mode.

## Play a 2-disc changer (Changer mode)

Your CD recorder is able to play the two decks sequentially (CHANGER mode). This is the default setting.

- 1 Select Changer mode using the DJ MODE key.

- **CHANGER** appears on the display and **CHANGER** lights up.



- 2 On the deck you want to play, press PLAY/PAUSE ▶ to start CD play.  
→ lights up, and the track number and track time of the track in play appear on the display.

- You can also play the two decks at the same time. By pressing the CDR key or the CD key you can choose the deck you want to listen to.

- Press DISPLAY once, twice or three times to see:  
→ remaining track time, total remaining time, permanent text information (see Menu mode).

- Press RECORD once, twice or three times to see:  
→ remaining track time, total remaining time, permanent text information (see Menu mode).

- To interrupt play temporarily, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- To continue play, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- If you want to see the information about the other deck, press the CDR key or the CD key in the display frame.  
→ The number of tracks and the total playing time appear on the display.

- To interrupt play temporarily, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- To continue play, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- 3 To stop play, press STOP ■.  
→ The number of tracks and the total playing time appear on the display.

- If you want to see this information about the other deck, press the CDR key or the CD key in the display frame.  
→ The number of tracks and the total playing time appear on the display.

- To interrupt play temporarily, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- To continue play, press PLAY/PAUSE ▶ again.  
→ **L** lights on the display.

- 3 Press RECORD.  
→ The display shows the total countdown time and ERASE.  
→ After the selected track(s) have erased, the display shows the remaining tracks and their total playing time.





- 1 Press REPEAT one or more times during CD play.  
 → When REPEAT TRACK lights up, the current track plays repeatedly. When REPEAT ALL lights up, the disc or program plays repeatedly.
- 2 Press SHUFFLE before or during CD play to start shuffle play.  
 → The tracks on the CD (or program if set) play in random order.
- 3 Press SHUFFLE again to disable the Shuffle mode.  
 → CD recorder goes to Stop mode.






- 2 To return to normal play, press REPEAT one or more times until:  
 → the REPEAT label disappears from the display.

Note:  
 - You can use Shuffle in combination with REPEAT ALL or programmed play of the 2-disc changer.  
 - REPEAT is also cleared if you open the disc tray.

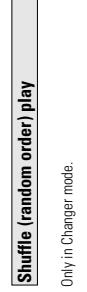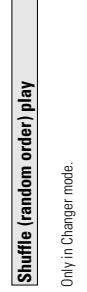

- Only in Changer mode.
- 1 Select Changer mode, if necessary, using the DJ MODE key.  
 2 Press SHUFFLE before or during CD play to start shuffle play.  
 → The tracks on the CD (or program if set) play in random order.
- 3 Press SHUFFLE again to disable the Shuffle mode.  
 → CD recorder goes to Stop mode.

Note: Shuffle is also cleared if you open the disc tray.

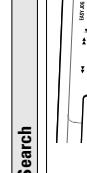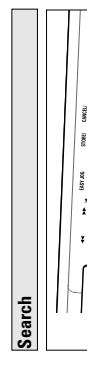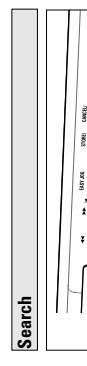

- 1 Hold down ▶ or ▶ (In play mode).  
 → The player first searches backwards or forwards at 10 times normal speed with sound at low volume, then goes to 50 times normal speed with sound muted.
- 2 Release the button at the desired passage.  
 → Play starts at the desired passage.

Note: During Shuffle, Repeat Track or Programmed play, search is restricted to within the track being played at the time.



**Selecting a track during play**

- 1 Turn the EASY JOG/ENTER key until the required track number appears on the display.  
 → Play skips to the beginning of the selected track.  
 or  
 Select CDR or CD on the remote control and key in the required track number using the numerical keys on the remote control. For 2-digit track numbers, press the keys in rapid succession. For 3 digits on the other disc, first press CD or CDR as applicable.  
 → Play skips to the beginning of the selected track.
- Press ▶ or ▶ on the remote control one or more times.  
 → Play skips to the beginning of the present, previous or subsequent tracks, including tracks on the disc in the other deck. (Changer mode only.)

**Selecting a track when CD play is stopped**

- 1 Turn the EASY JOG/ENTER key until the required track number appears on the display.
- 2 Press EASY JOG/ENTER or ENTER on the remote control to confirm or press PLAY/PAUSE ▶ to start playing.  
 or  
 1 Select CDR or CD on the remote control and key in the required track number using the numerical keys. For 2-digit track numbers, press the keys in rapid succession. Play starts.  
 or  
 1 Briefly press ▶ or ▶ one or more times.  
 2 Start playback by pressing PLAY/PAUSE ▶ EASY JOG/ENTER or ENTER on the remote control.

**MENU MODE****PROGRAMMING****Note:**




- To review the program, press PROG/PLAY, followed by **◀** or **▶** or with the CD player or CD recorder in stop mode.
- To add more tracks to the program, repeat steps **2 to 6**.
- If you try to store more than 99 tracks, PROG / FUL appears on the display.

**Programming for recording**

- 1 Press REC TYPE to select the required recording mode (see "Recording").
- 2 Compile your programme as described in "programming for playback" (steps **3 to 5**).
- 3 Press RECORD to start recording.

**Programming for playback**

- 1 Select Changer mode or DJ mode using the DJ MODE key.  
→ CHANGER / REC / STOP or ▶ / ▶/PAUSE appears on the display.
- 2 Press CDR or CD to select the required deck.  
→ Selected key lights up.
- 3 Press PROGRAM to enter Program mode.  
→ PROG flashes and PROG/PLAY followed by track information appears on the display.

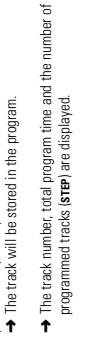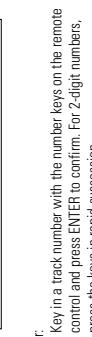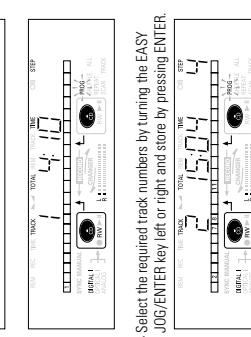

- 4 Select the required track numbers by turning the EASY JOG/ENTER key left or right and store by pressing ENTER.
- 5 Press STOP ■ or PROG/PLAY to end erasing.  
→ PROG lights continuously.
- 6 Repeat step **4** for all tracks to be programmed.
- 7 Press PLAY/PAUSE ▶ to start programmed play.


26

**Remarks about Menu mode**


- In Menu mode you will have access to a number of features which are not available via the regular keys (on the deck's front and the remote control).
- The TEXT submenus (A-B) allow you to give names to discs and tracks. The disc and track names will be displayed during playback.
- In the RECORDING submenus (D-E), you can set Auto Track and Balance.
- All settings (except Balance) made in Menu mode will be stored in the deck's memory and can be called up and changed at any time.
- Note: Text can only be edited for uninitialized discs. Finalized CD-RW discs must be uninitialized first!

**General operation of Menu**

- Menu active in Recording or Stop mode.
- 1 When using the remote control select first CDR.
- 2 Press STORE/MENU on the deck or the remote control to enter Menu mode.  
→ TEXT EDIT appears on the display.
- 3 Rotate EASY JOG/ENTER to select the required submenus.
- 4 Press EASY JOG/ENTER to confirm selections.
- 5 Rotate EASY JOG/ENTER to select options in the submenus.
- 6 Press EASY JOG/ENTER to confirm selections.
- 7 Press STORE/MENU to store settings and return to the submenu.
- 8 Press STOP ■ to store settings and exit Menu mode.

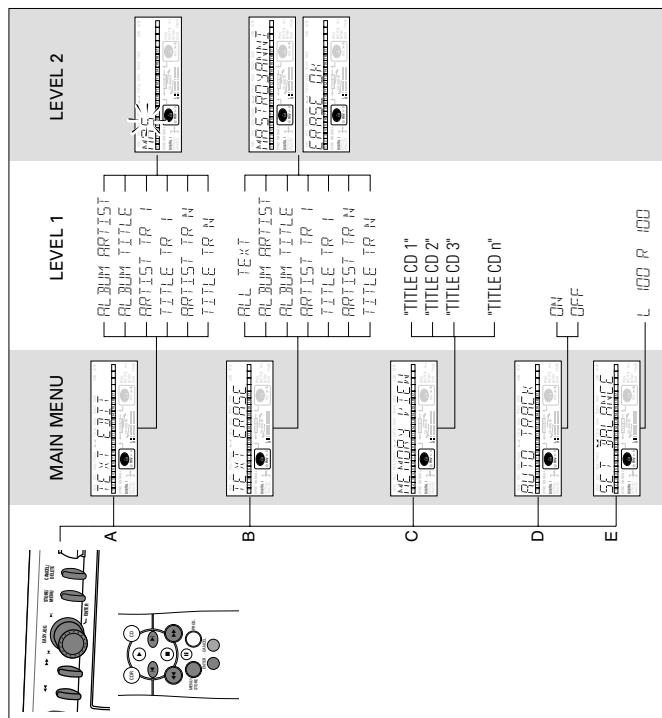

27

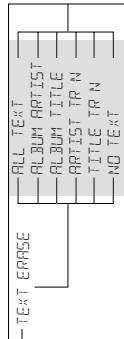**MENU MODE/CD TEXT****English****B. Erasing text/text erase**

CD text can be added to a recording or changed. This can be done in Stop mode or during recording.

Text will be stored in the recorder memory and can be edited until the CDR is finalized. Text on a (unfinalized) CDRW can be edited at any time.

1 Press STORE/MENU

→ TEXT EDIT appears on the display.

2 Rotate the EASY JOG/ENTER key to select the TEXT ERASE submenu.

→ TEXT ERASE appears on the display.  
(When there is no text available the message NO TEXT appears on the display)

3 Press EASY JOG/ENTER to confirm.

→ If text is available ROLL TEXT appears on the display.  
(When there is no text available the message NO TEXT appears on the display)

4 Rotate EASY JOG/ENTER to select the required option in the submenu ROLL TEXT, ALBUM ARTIST, ALBUM TITLE, TITLE, ARTIST TR, LITTLE TR, etc.

5 Press EASY JOG/ENTER to confirm.

→ The display will ask you to reconfirm your selection.  
ERASE DR appears on the display.

6 Press EASY JOG/ENTER to reconfirm.

→ UP/DOWN appears on the display.  
Press STORE/MENU to return to the submenu or STOP ■ to exit.

7 Press EASY JOG/ENTER to confirm.


→ ERASE ME-CD3 appears on the display.



8 Press STORE/MENU to store a name you have entered and return to the submenu resulting at 3 or STOP ■ to exit.

Note:

- A maximum of 60 characters can be stored per item.
- By pressing the EASY JOG/ENTER key or ENTER on the remote control without selecting a character first, you can insert a space between characters.
- When an artist's name has been stored for a certain track, the name will automatically be copied for the next track. The name can be confirmed by pressing STORE/MENU or a new name can be entered as described above.

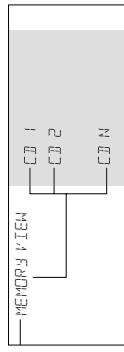**MENU MODE/CD TEXT****English****C. Reviewing CD Text in memory/memory view**

CD text is stored in the recorder memory. When a CDRW will be finalized the CD text will be written on the disc and removed from the recorder's memory. With the MEMORY VIEW function one can view/delete the CD Text in the recorder's memory per unfinished disc. The amount of memory used is displayed each time the tray opens with an uninitialized CDRW inserted.

1 Press STORE/MENU.

→ TEXT EDIT appears on the display.

2 Rotate the EASY JOG/ENTER key to select the MEMORY VIEW submenu.

→ MEMORY VIEW appears on the display.

3 Press EASY JOG/ENTER to confirm.

→ The first album title in the recorder memory appears on the display.

4 Select the album title you wish to erase by rotating the EASY JOG/ENTER key.

→ ERASE ME-CD3 appears on the display.




5 Press EASY JOG/ENTER to confirm.

→ ERASE ME-CD3 appears on the display.


6 Press EASY JOG/ENTER to return to the submenu or STOP ■ to exit.

7 Press STORE/MENU to return to the submenu or STOP ■ to exit.

## FIXING PROBLEMS

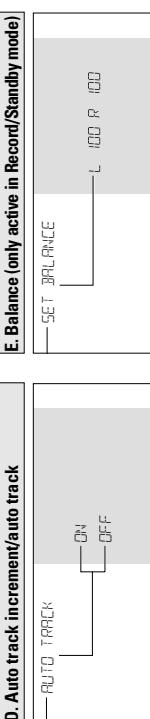

- 1 Press STORE/MENU.  
→ **TEST EDIT** appears on the display.
  - 2 Rotate the EASY JOG/ENTER key to select the SET BALANCE submenu.  
→ **AUTO TRACK** appears on the display.
  - 3 Press EASY JOG/ENTER to confirm.  
→ **On** or **Off** appears on the display.
  - 4 Turn the EASY JOG/ENTER key to select Auto track **On** or **Off**.  
• When **On** is selected, you can number the recorded tracks automatically during recording.
  - 5 Press EASY JOG/ENTER to confirm.
  - 6 Press STORE/MENU to store settings.
- Note: The balance setting will not be stored permanently.*

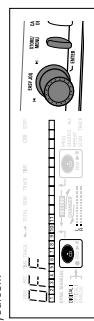


<b>TROUBLESHOOTING</b>	
<b>Will not record</b>	<ul style="list-style-type: none"> <li>clean the disc</li> <li>check if CDRW is an unfinalized disc</li> <li>check that the disc is recordable and replace if necessary</li> <li>the disc is not an AUDIO disc (CD-RW/DISC)</li> </ul>
<b>Warning!</b> <i>Under no circumstances should you attempt to repair the CD recorder yourself as this will invalidate the guarantee.</i>	<ul style="list-style-type: none"> <li>wrong input source chosen. Input label flashing (CHECK INPUT) / FLASH (DISC)</li> <li>text memory full (RECORDED FULL / FLASHED CD). When a CDRW has to be unfinalized for recording, erase text from other disc(s) or finalize other disc(s) to obtain memory space           <ul style="list-style-type: none"> <li>total remaining time not sufficient, try programming tracks (see programming)</li> </ul> </li> </ul>
<b>Symptom</b>	<ul style="list-style-type: none"> <li>possible solution:</li> </ul>
<b>No power</b>	<ul style="list-style-type: none"> <li>ensure that the ON/OFF button is on red led on; the CD Recorder is in standby mode.</li> <li>press any key to activate it</li> <li>ensure that the mains cable is plugged in correctly</li> <li>switch the recorder OFF and then immediately back ON</li> </ul>
<b>Auto track does not work</b>	<ul style="list-style-type: none"> <li>check if auto track is selected in the menu between the tracks (analog recording only)</li> <li>check if there are 2 seconds silence in between the tracks (analog recording only)</li> <li>check if the source is a consumer source with the digital output according to the EEC audio standard</li> </ul>
<b>No sound</b>	<ul style="list-style-type: none"> <li>source is DVD player (no track information)</li> <li>check the audio connections</li> <li>if using an amplifier, try using a different source</li> </ul>
<b>Amplifier sound is distorted</b>	<ul style="list-style-type: none"> <li>check that the CD recorder analog output is not connected to the amplifier Phono input</li> </ul>
<b>Play will not start</b>	<ul style="list-style-type: none"> <li>ensure that the label of the CD is facing up</li> <li>clean the disc</li> <li>check that the disc is not defective by trying another disc.</li> </ul>
<b>Remote control does not work</b>	<ul style="list-style-type: none"> <li>point the remote control towards the CD recorder</li> <li>check the batteries and replace if necessary</li> <li>select the correct source first</li> </ul>

#### **4. Mechanical instructions**

## **Wiring diagram**


# WIRING DIAGRAM CDR779

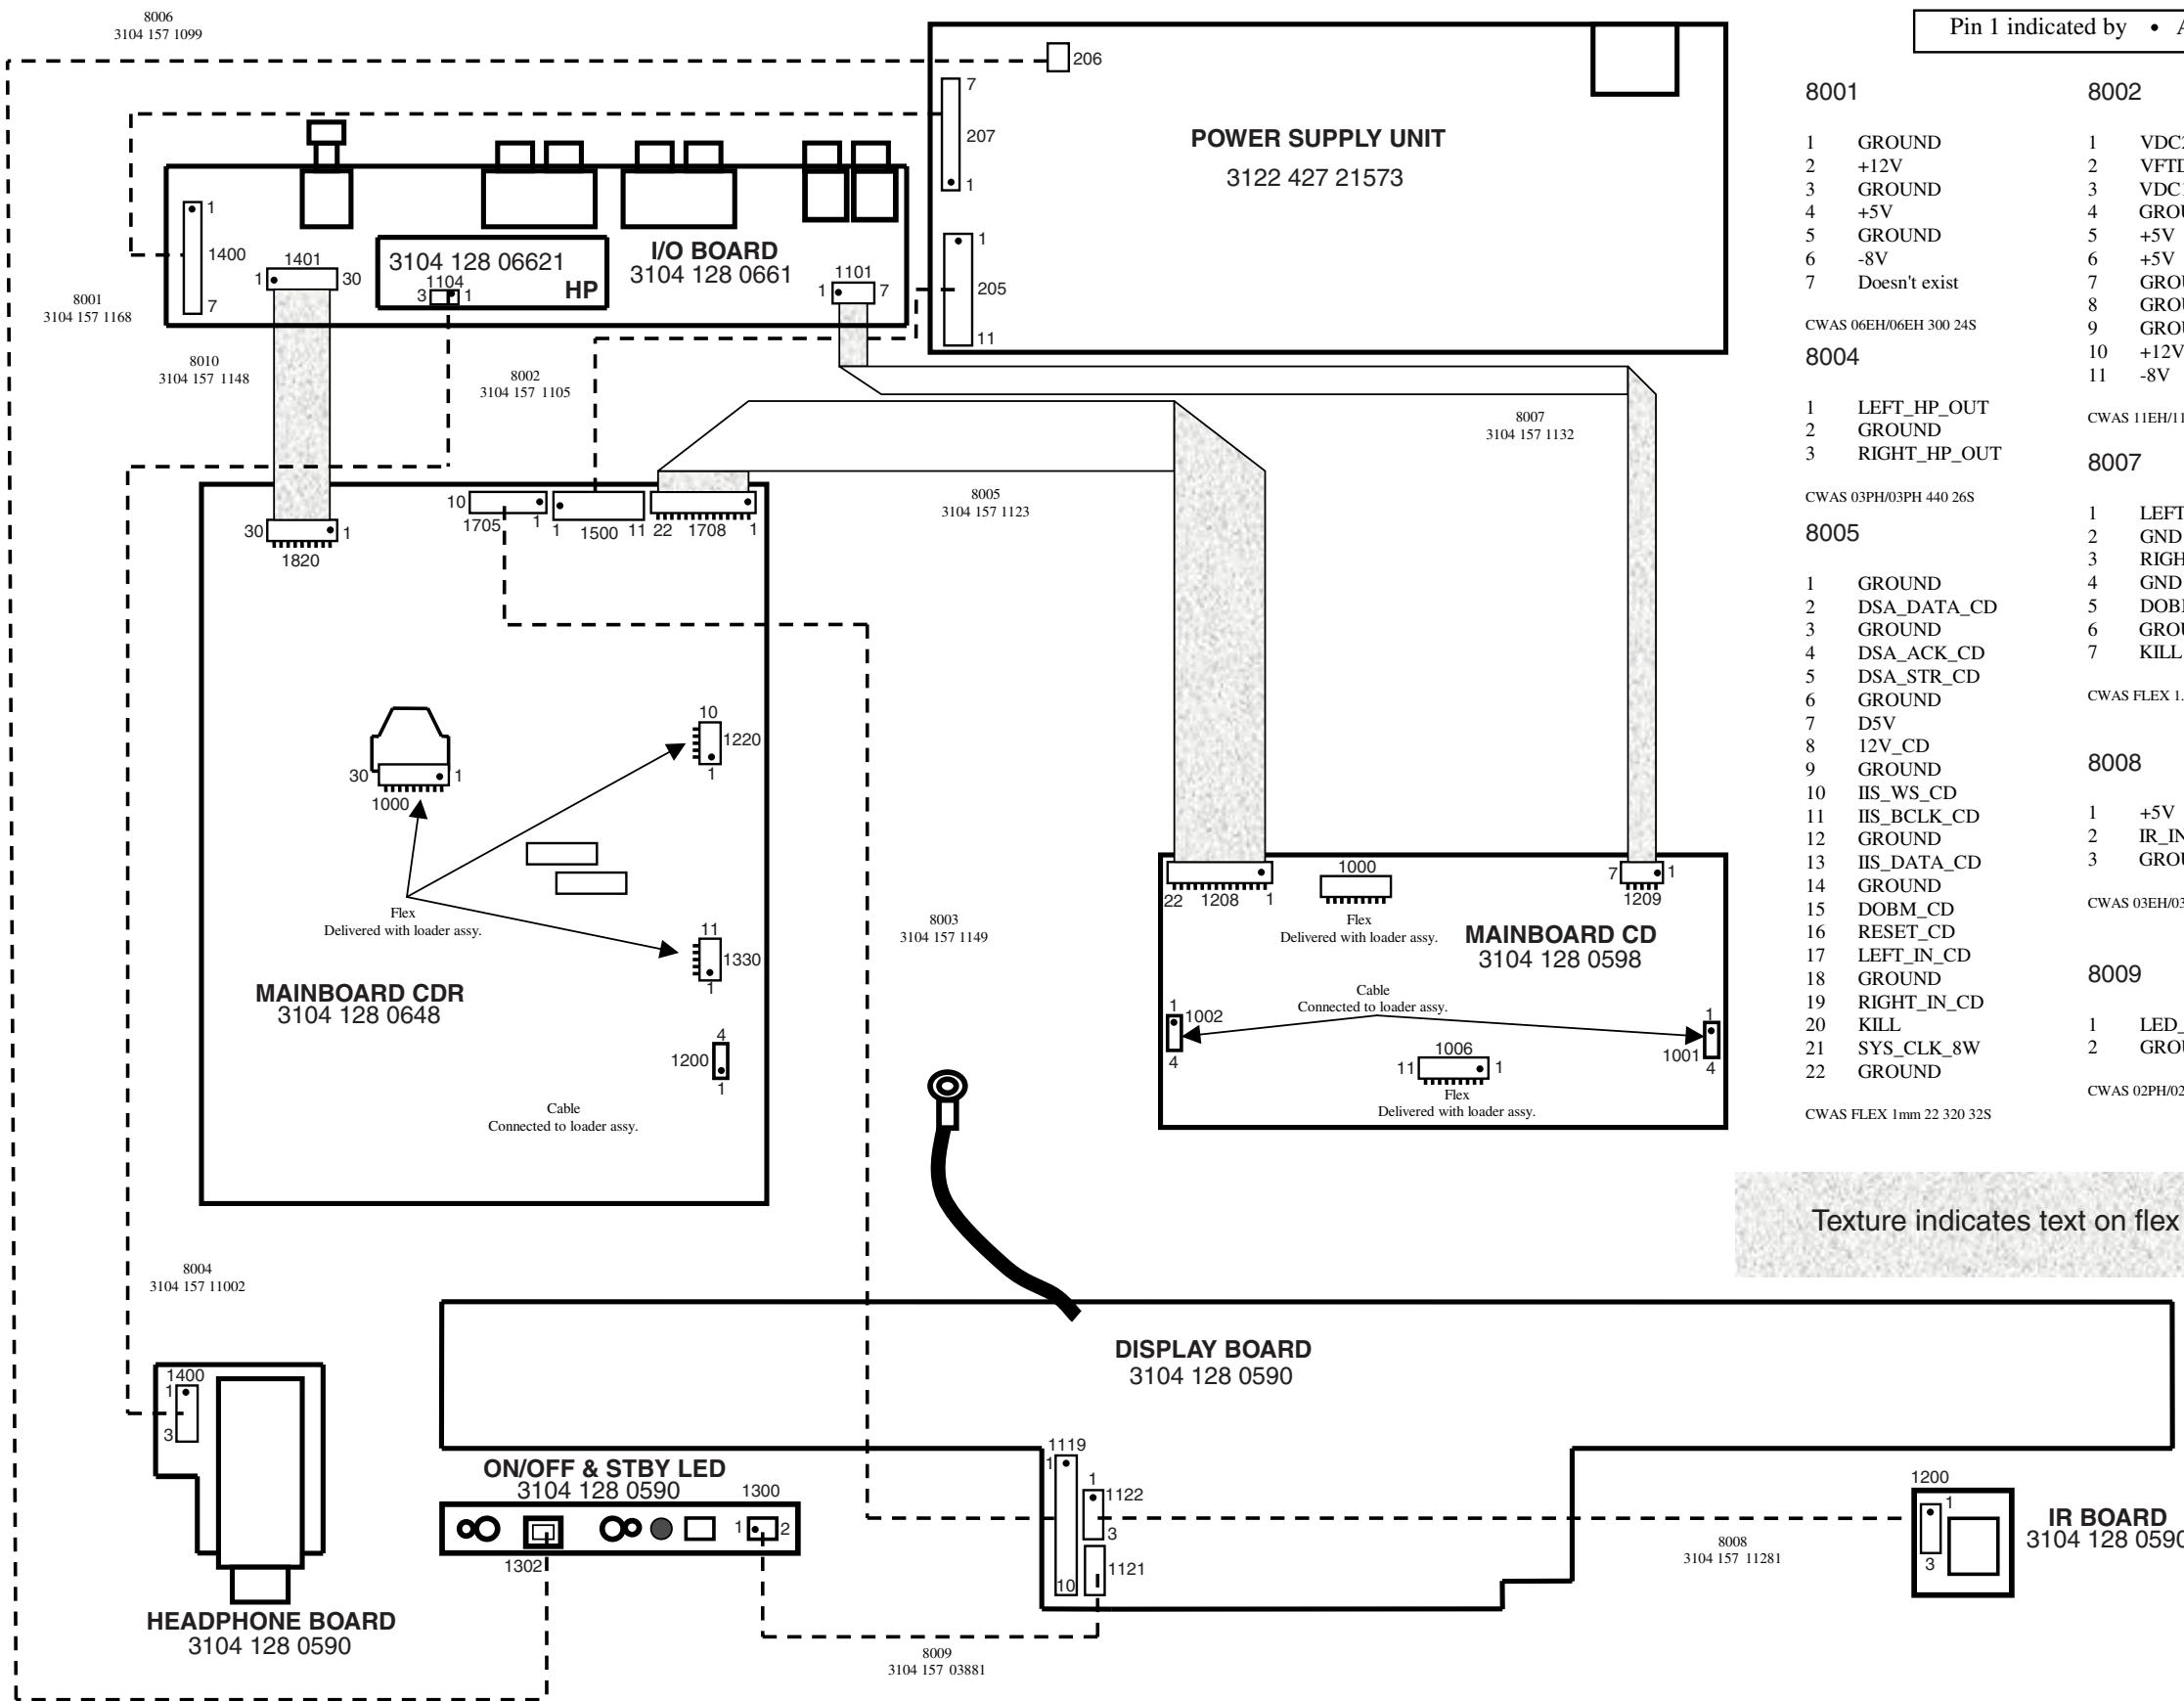

Pin 1 indicated by • All Wires are 1/1

8001		8002		8003					
1	GROUND	1	VDC2	1	VDC2				
2	+12V	2	VFTD	2	VFTD				
3	GROUND	3	VDC1	3	VDC1				
4	+5V	4	GROUND	4	SYS_RESET				
5	GROUND	5	+5V	5	IIC_DATA				
6	-8V	6	+5V	6	GROUND				
7	Doesn't exist	7	GROUND	7	IIC_CLK				
CWAS 06EH/06EH 300 24S		8	GROUND	8	DISPL_INT				
8004		9	GROUND	9	GROUND				
CWAS 06EH/06EH 300 24S		10	+12V	10	D5V				
CWAS 10PH/10EH 440 26S		11	-8V	CWAS 10PH/10EH 440 26S					
1	LEFT_HP_OUT	CWAS 11EH/11EH 240 24S		8006					
2	GROUND	8007		8006					
3	RIGHT_HP_OUT	CWAS 03PH/03PH 440 26S		8006					
8005		1	LEFT_CD	1	ON!				
8005		2	GND	2	OFF!				
8005		3	RIGHT_CD	CWAS 02EH/02EH 560 26S					
1	GROUND	4	GND	8010					
2	DSA_DATA_CD	5	DOBM_CD	8010					
3	GROUND	6	GROUND	8010					
4	DSA_ACK_CD	7	KILL	8010					
5	DSA_STR_CD	CWAS FLEX 1.25mm 7 300 32S		8010					
6	GROUND	CWAS FLEX 1.25mm 7 300 32S		8010					
7	D5V	CWAS FLEX 1.25mm 7 300 32S		8010					
8	12V_CD	CWAS FLEX 1.25mm 7 300 32S		8010					
9	GROUND	8008		8010					
10	IIS_WS_CD	CWAS FLEX 1.25mm 7 300 32S		8010					
11	IIS_BCLK_CD	1	+5V	8010					
12	GROUND	2	IR_IN	8010					
13	IIS_DATA_CD	3	GROUND	8010					
14	GROUND	CWAS 03EH/03EH 240 24S		8010					
15	DOBM_CD	CWAS 03EH/03EH 240 24S		8010					
16	RESET_CD	CWAS 03EH/03EH 240 24S		8010					
17	LEFT_IN_CD	8009		8010					
18	GROUND	8009		8010					
19	RIGHT_IN_CD	8009		8010					
20	KILL	1	LED_ON	8010					
21	SYS_CLK_8W	2	GROUND	8010					
22	GROUND	CWAS 02PH/02PH 120 26S		8010					
CWAS FLEX 1mm 22 320 32S									
Texture indicates text on flex									

## Texture indicates text on flex

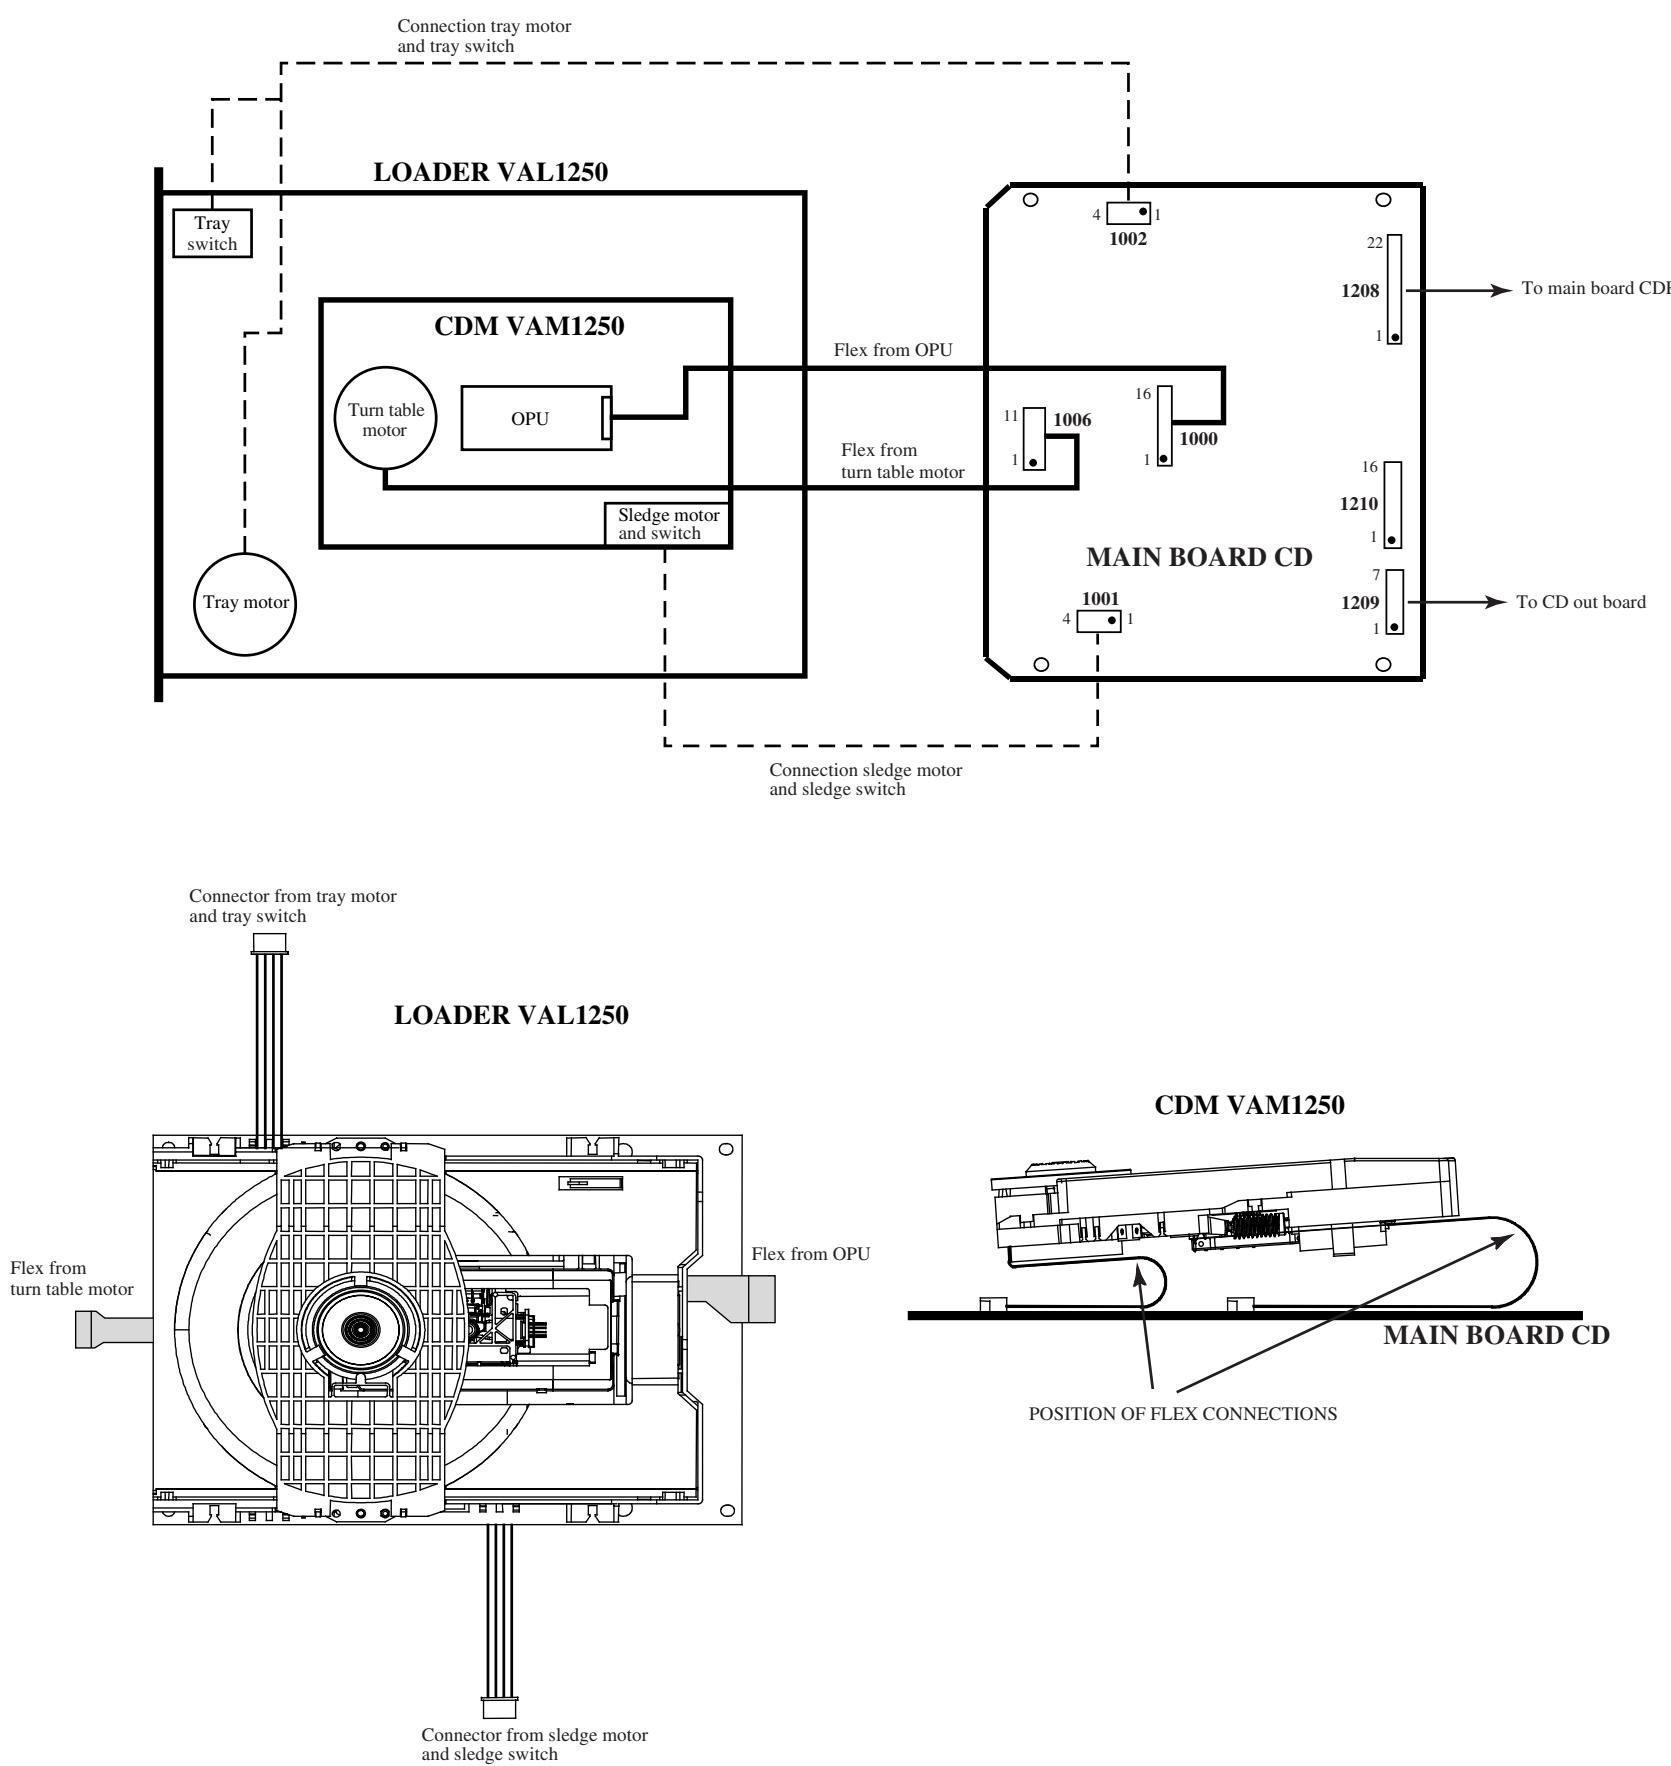**Wiring CD****WIRING DIAGRAM CD LOADER VAL1250****CONNECTOR 1006**

- HALL +
- W-
- W+
- V+
- HALL-
- U+
- V-
- U-
- UCOIL
- VCOIL
- WCOIL

**CONNECTOR 1002**

- HOMESW
- SGND
- TRAY+
- TRAY-

**CONNECTOR 1001**

- HOMESW
- SGND
- SL-
- SL+

**CONNECTOR 1000**

- VSUB
- HFGND
- VDD
- RF
- LDON
- R2
- R1
- D4/D3
- D2
- D1
- FTC
- RW
- FOC+
- FOC-
- RAD+
- RAD-

**CONNECTOR 1209**


- AUDIO R (RIGHT\_CD)
- GND
- AUDIO L (LEFT\_CD)
- GND
- DOBM5\_CD (DOBM\_CD)
- GND
- KILL


**CONNECTOR 1208**

- GND
- CRIN (SYS\_CLK\_8W)
- KILL
- AUDIO R (RIGHT\_IN\_CD)
- GND
- AUDIO L (LEFT\_IN\_CD)
- DSA\_RST (SYS\_RESET)
- DOBM (DOBM\_CD)
- GND
- SCLK (I<sup>2</sup>S\_BCLK\_CD)
- GND
- WCLK (I<sup>2</sup>S\_WS\_CD)
- DATA (I<sup>2</sup>S\_DATA\_CD)
- GND
- +12V
- +5V
- GND
- DSA\_ACK (DSA\_ACK\_CD)
- DSA\_STROBE (DSA\_STR\_CD)
- GND
- DSA\_DATA (DSA\_DATA\_CD)
- GND

## Exploded view CDR779


## EXPLODED VIEW CDR779

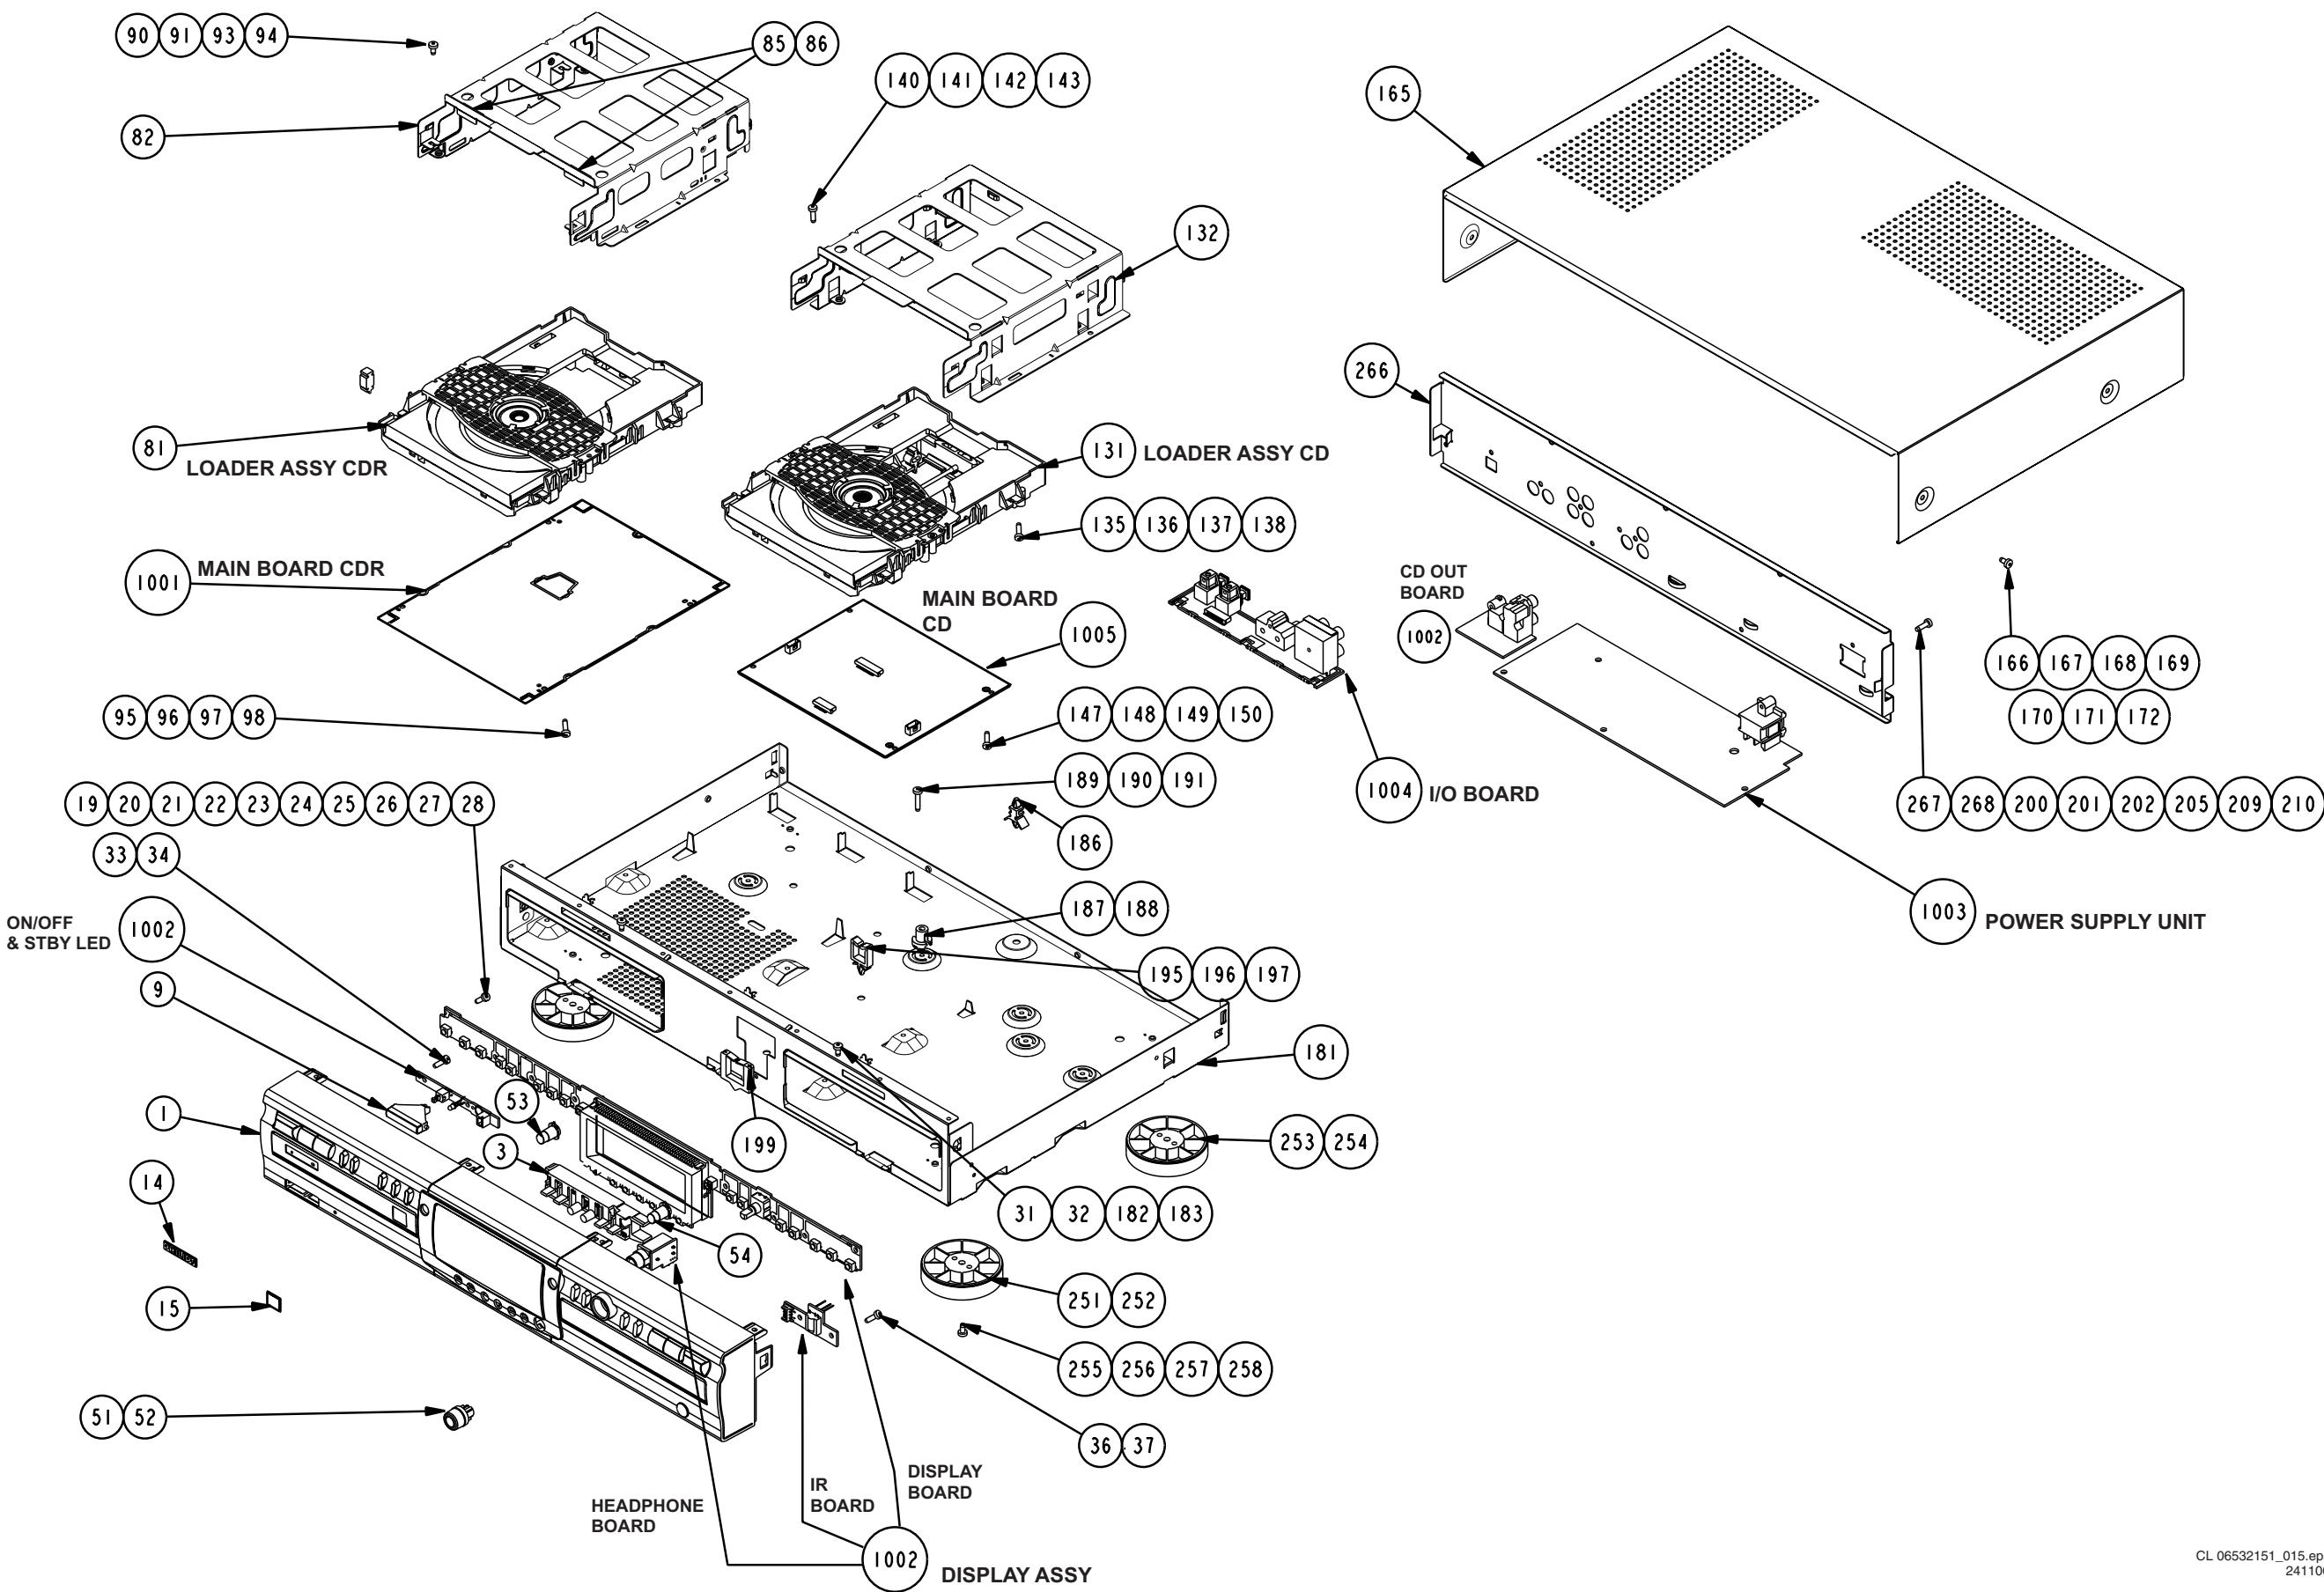

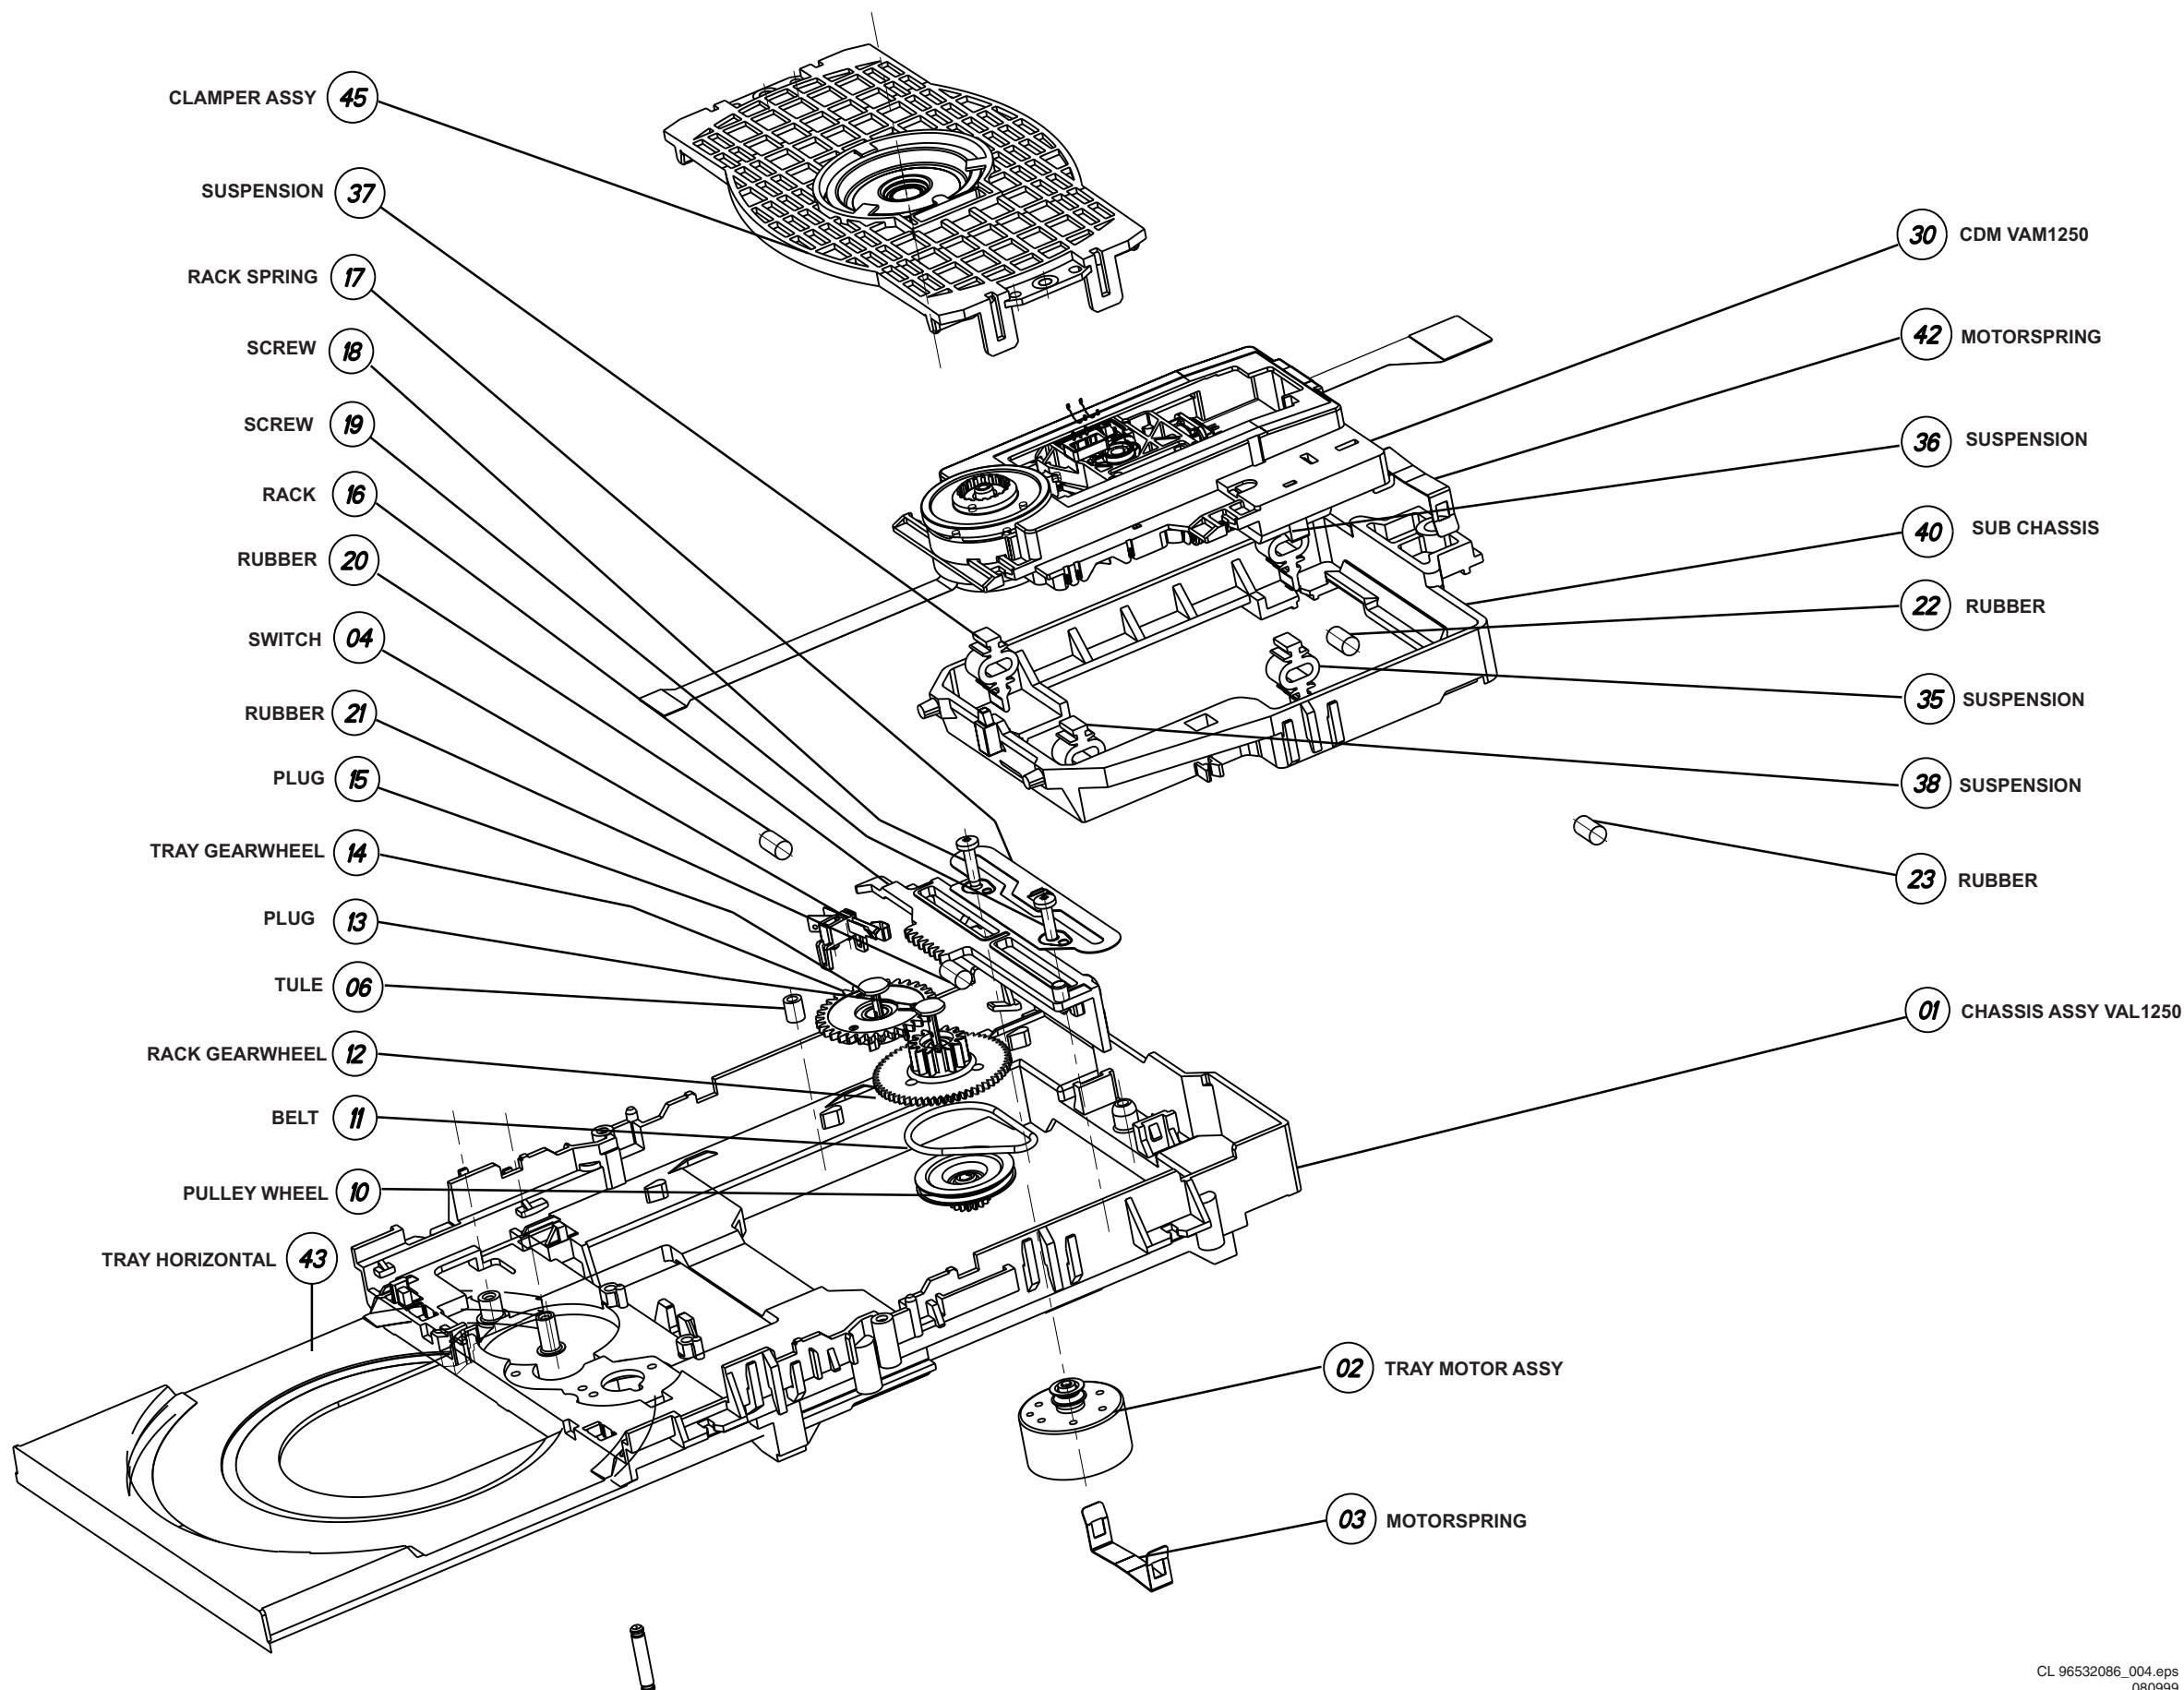**Exploded view CD****EXPLODED VIEW CD LOADER VAL1250**

**Dismantling 779****DISMANTLING INSTRUCTIONS CDR779**


See exploded views for item numbers

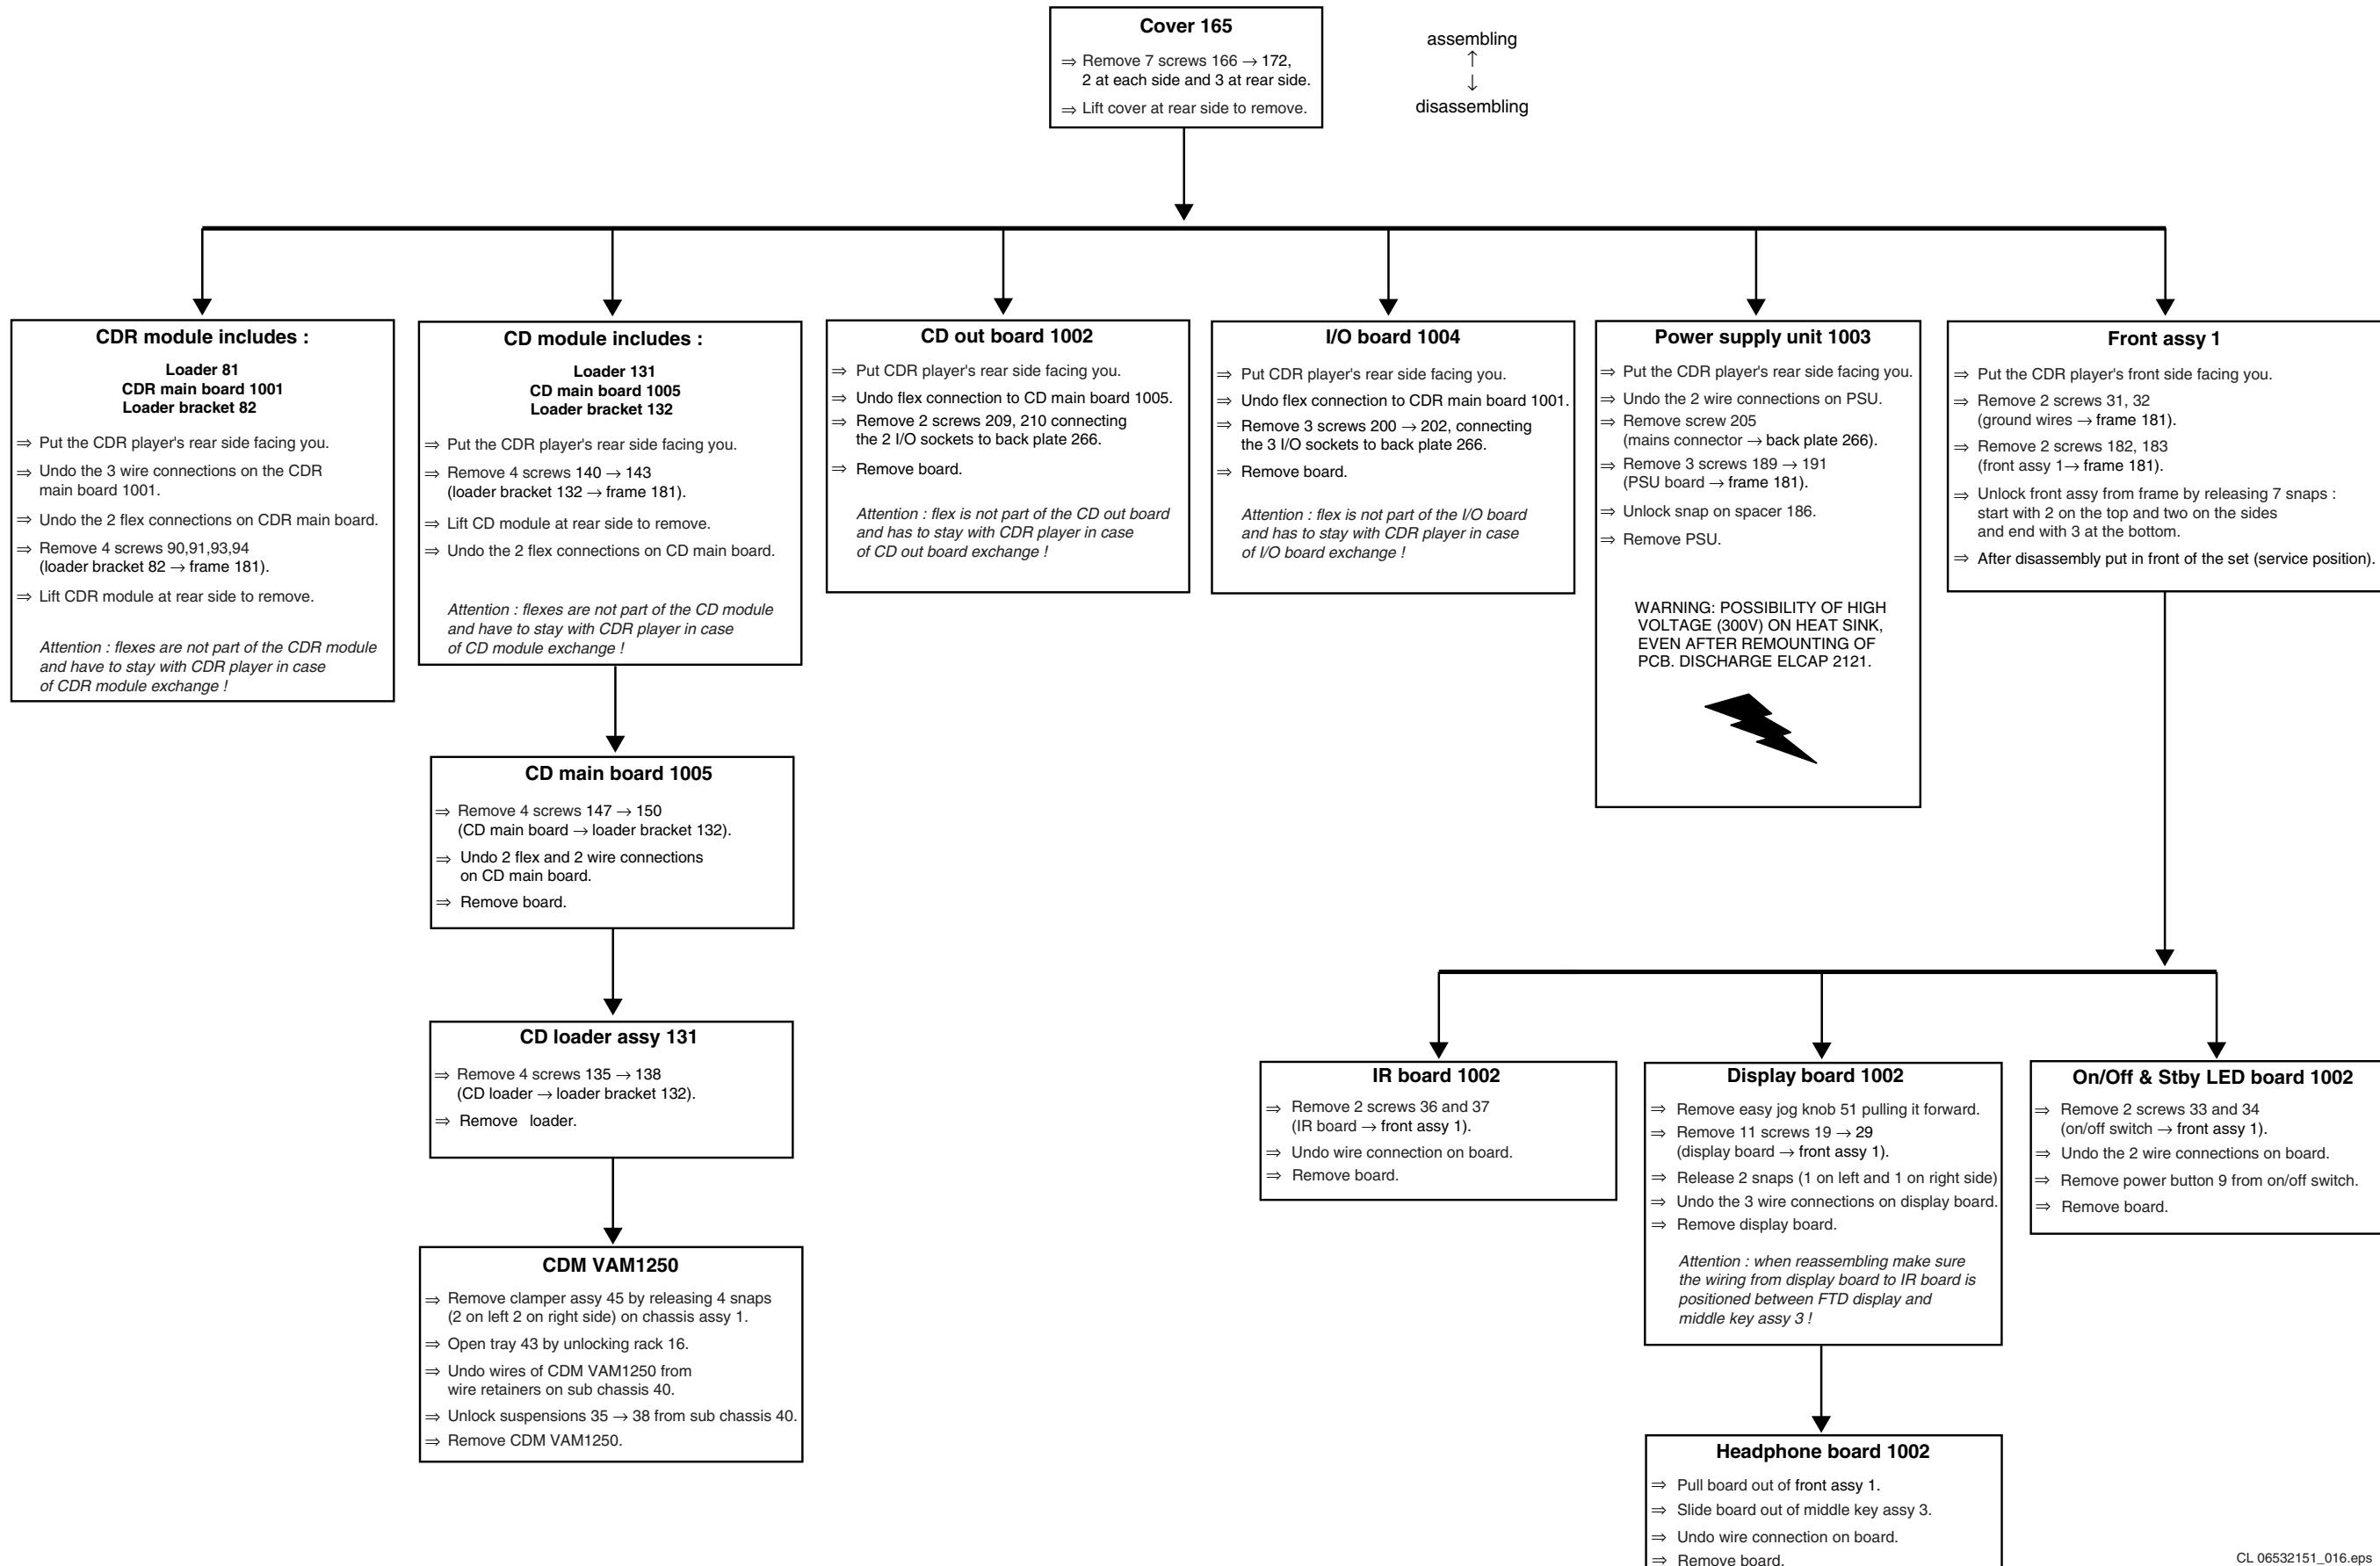


## **5. Block diagrams, Circuit diagrams and PWB's**

## Blockdiagram 779

# OVERALL BLOCK DIAGRAM CDR779

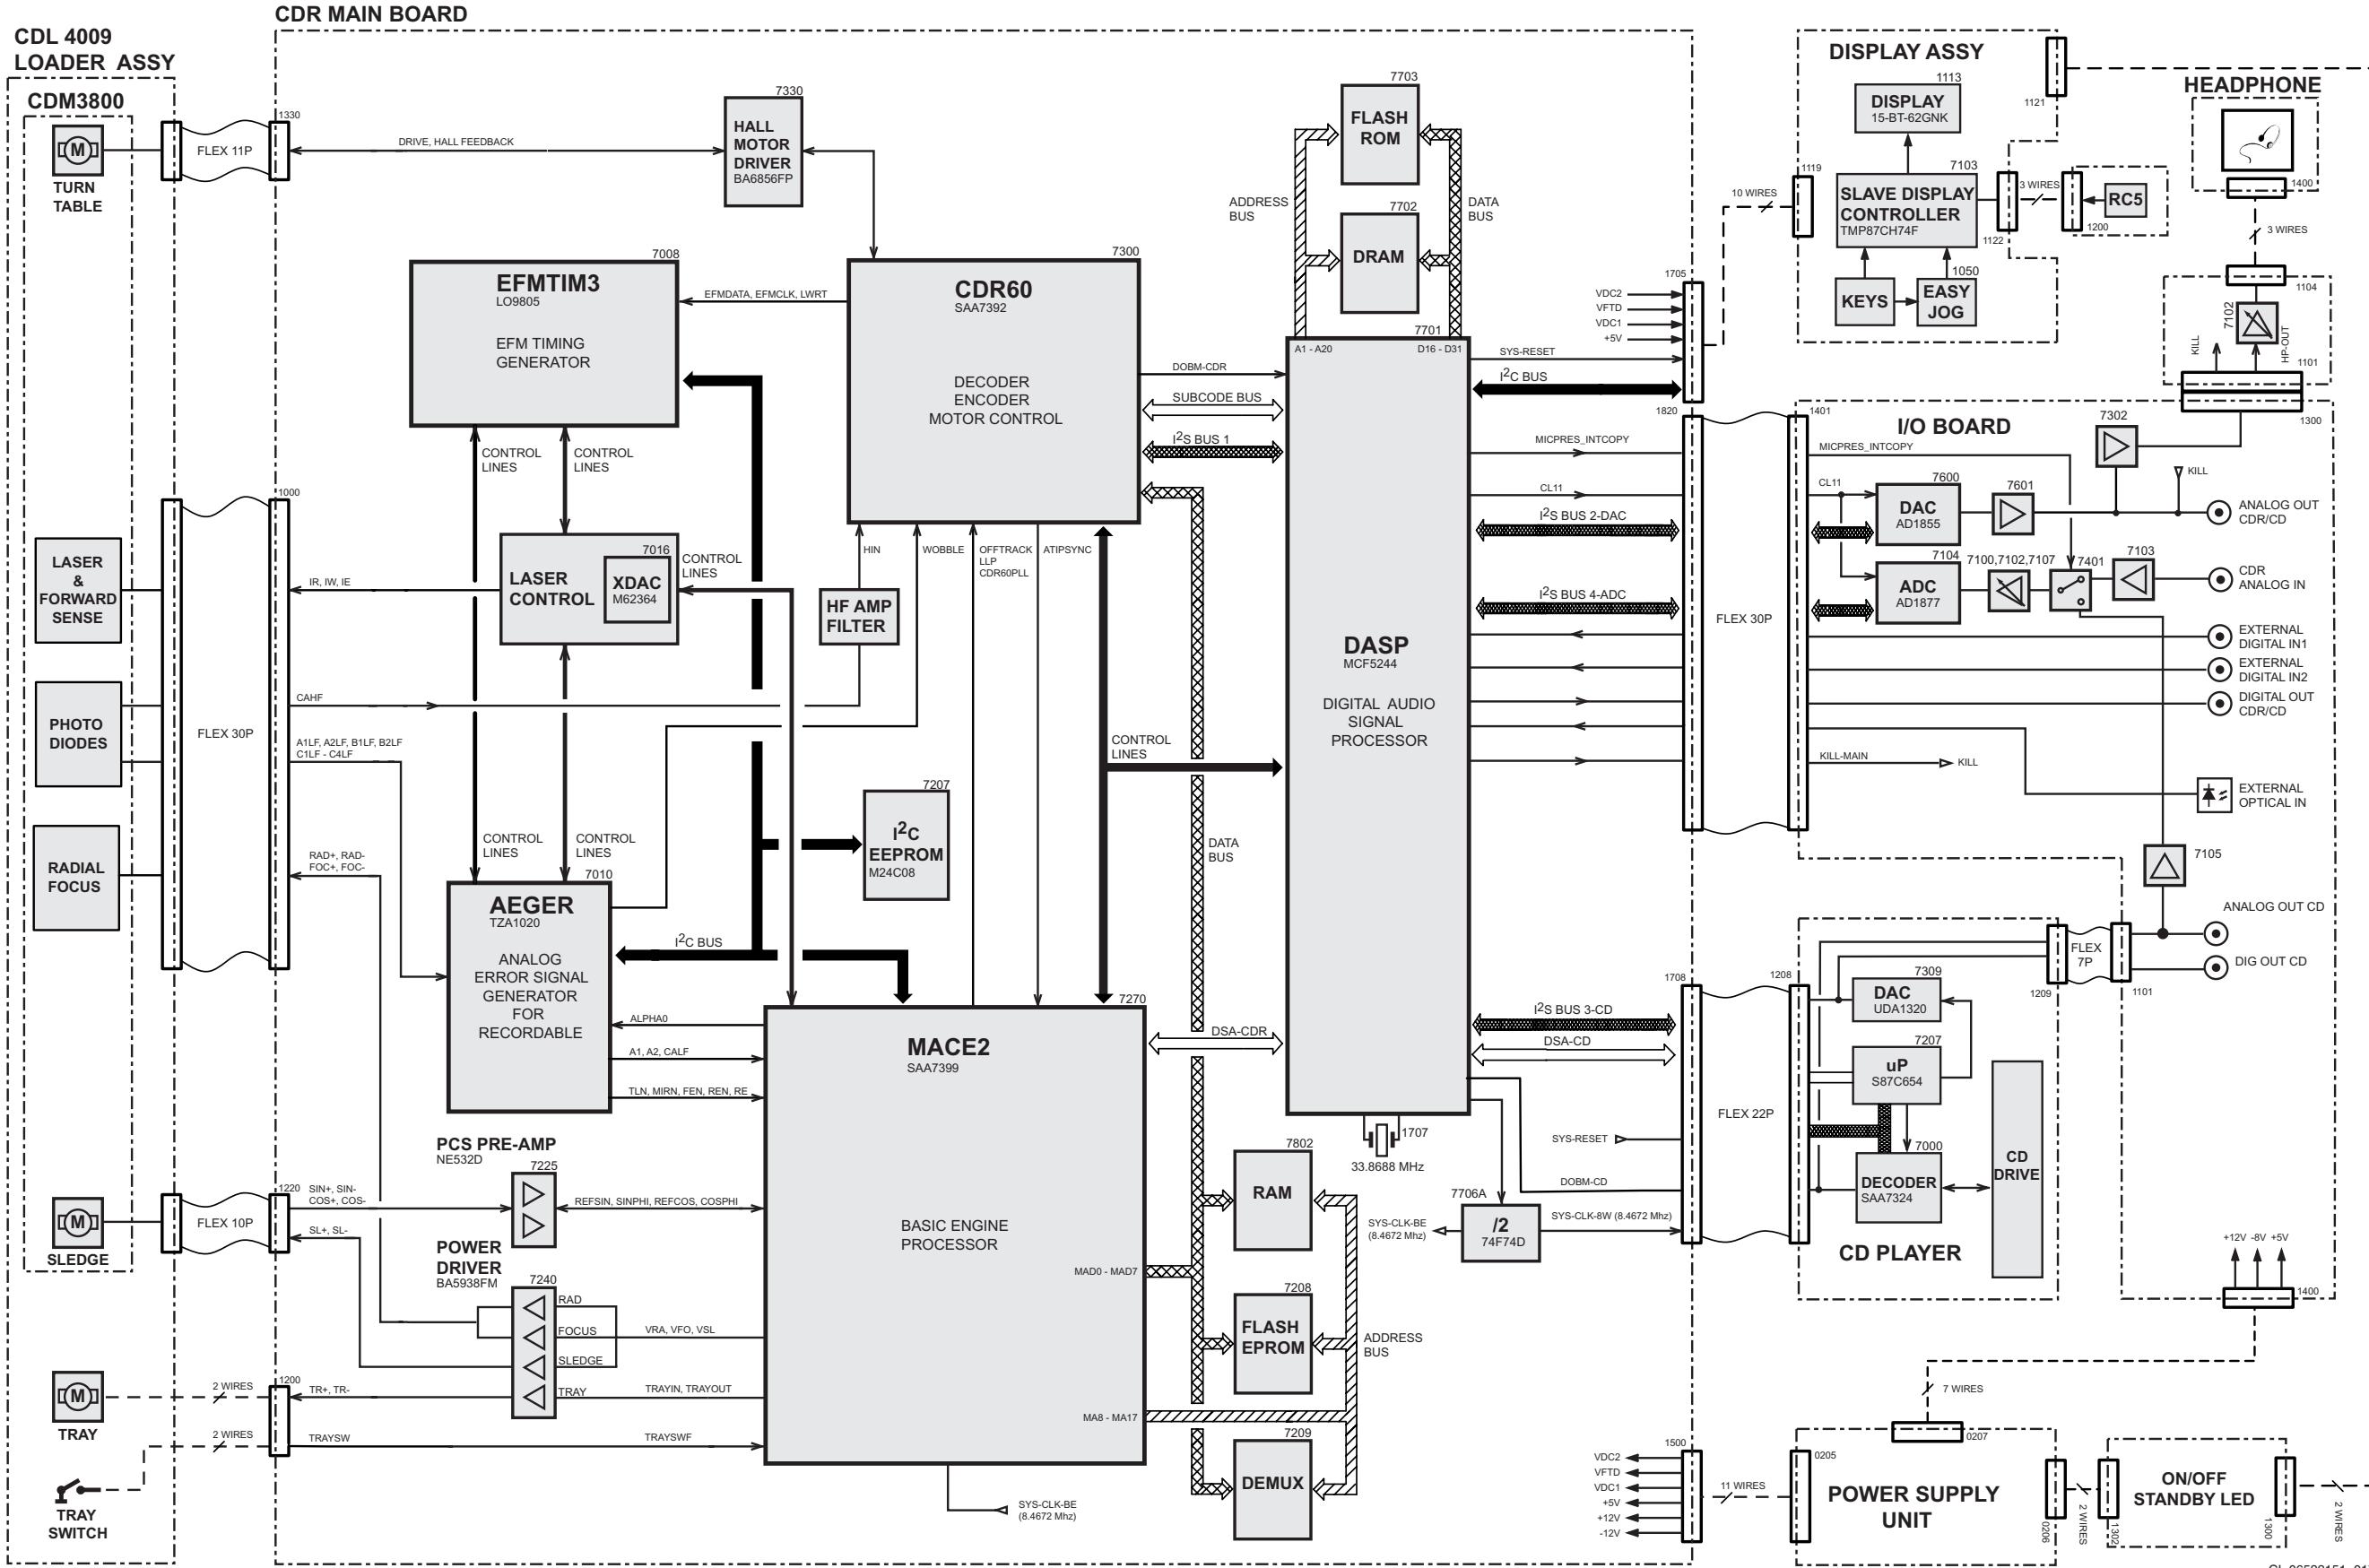


## Display 779

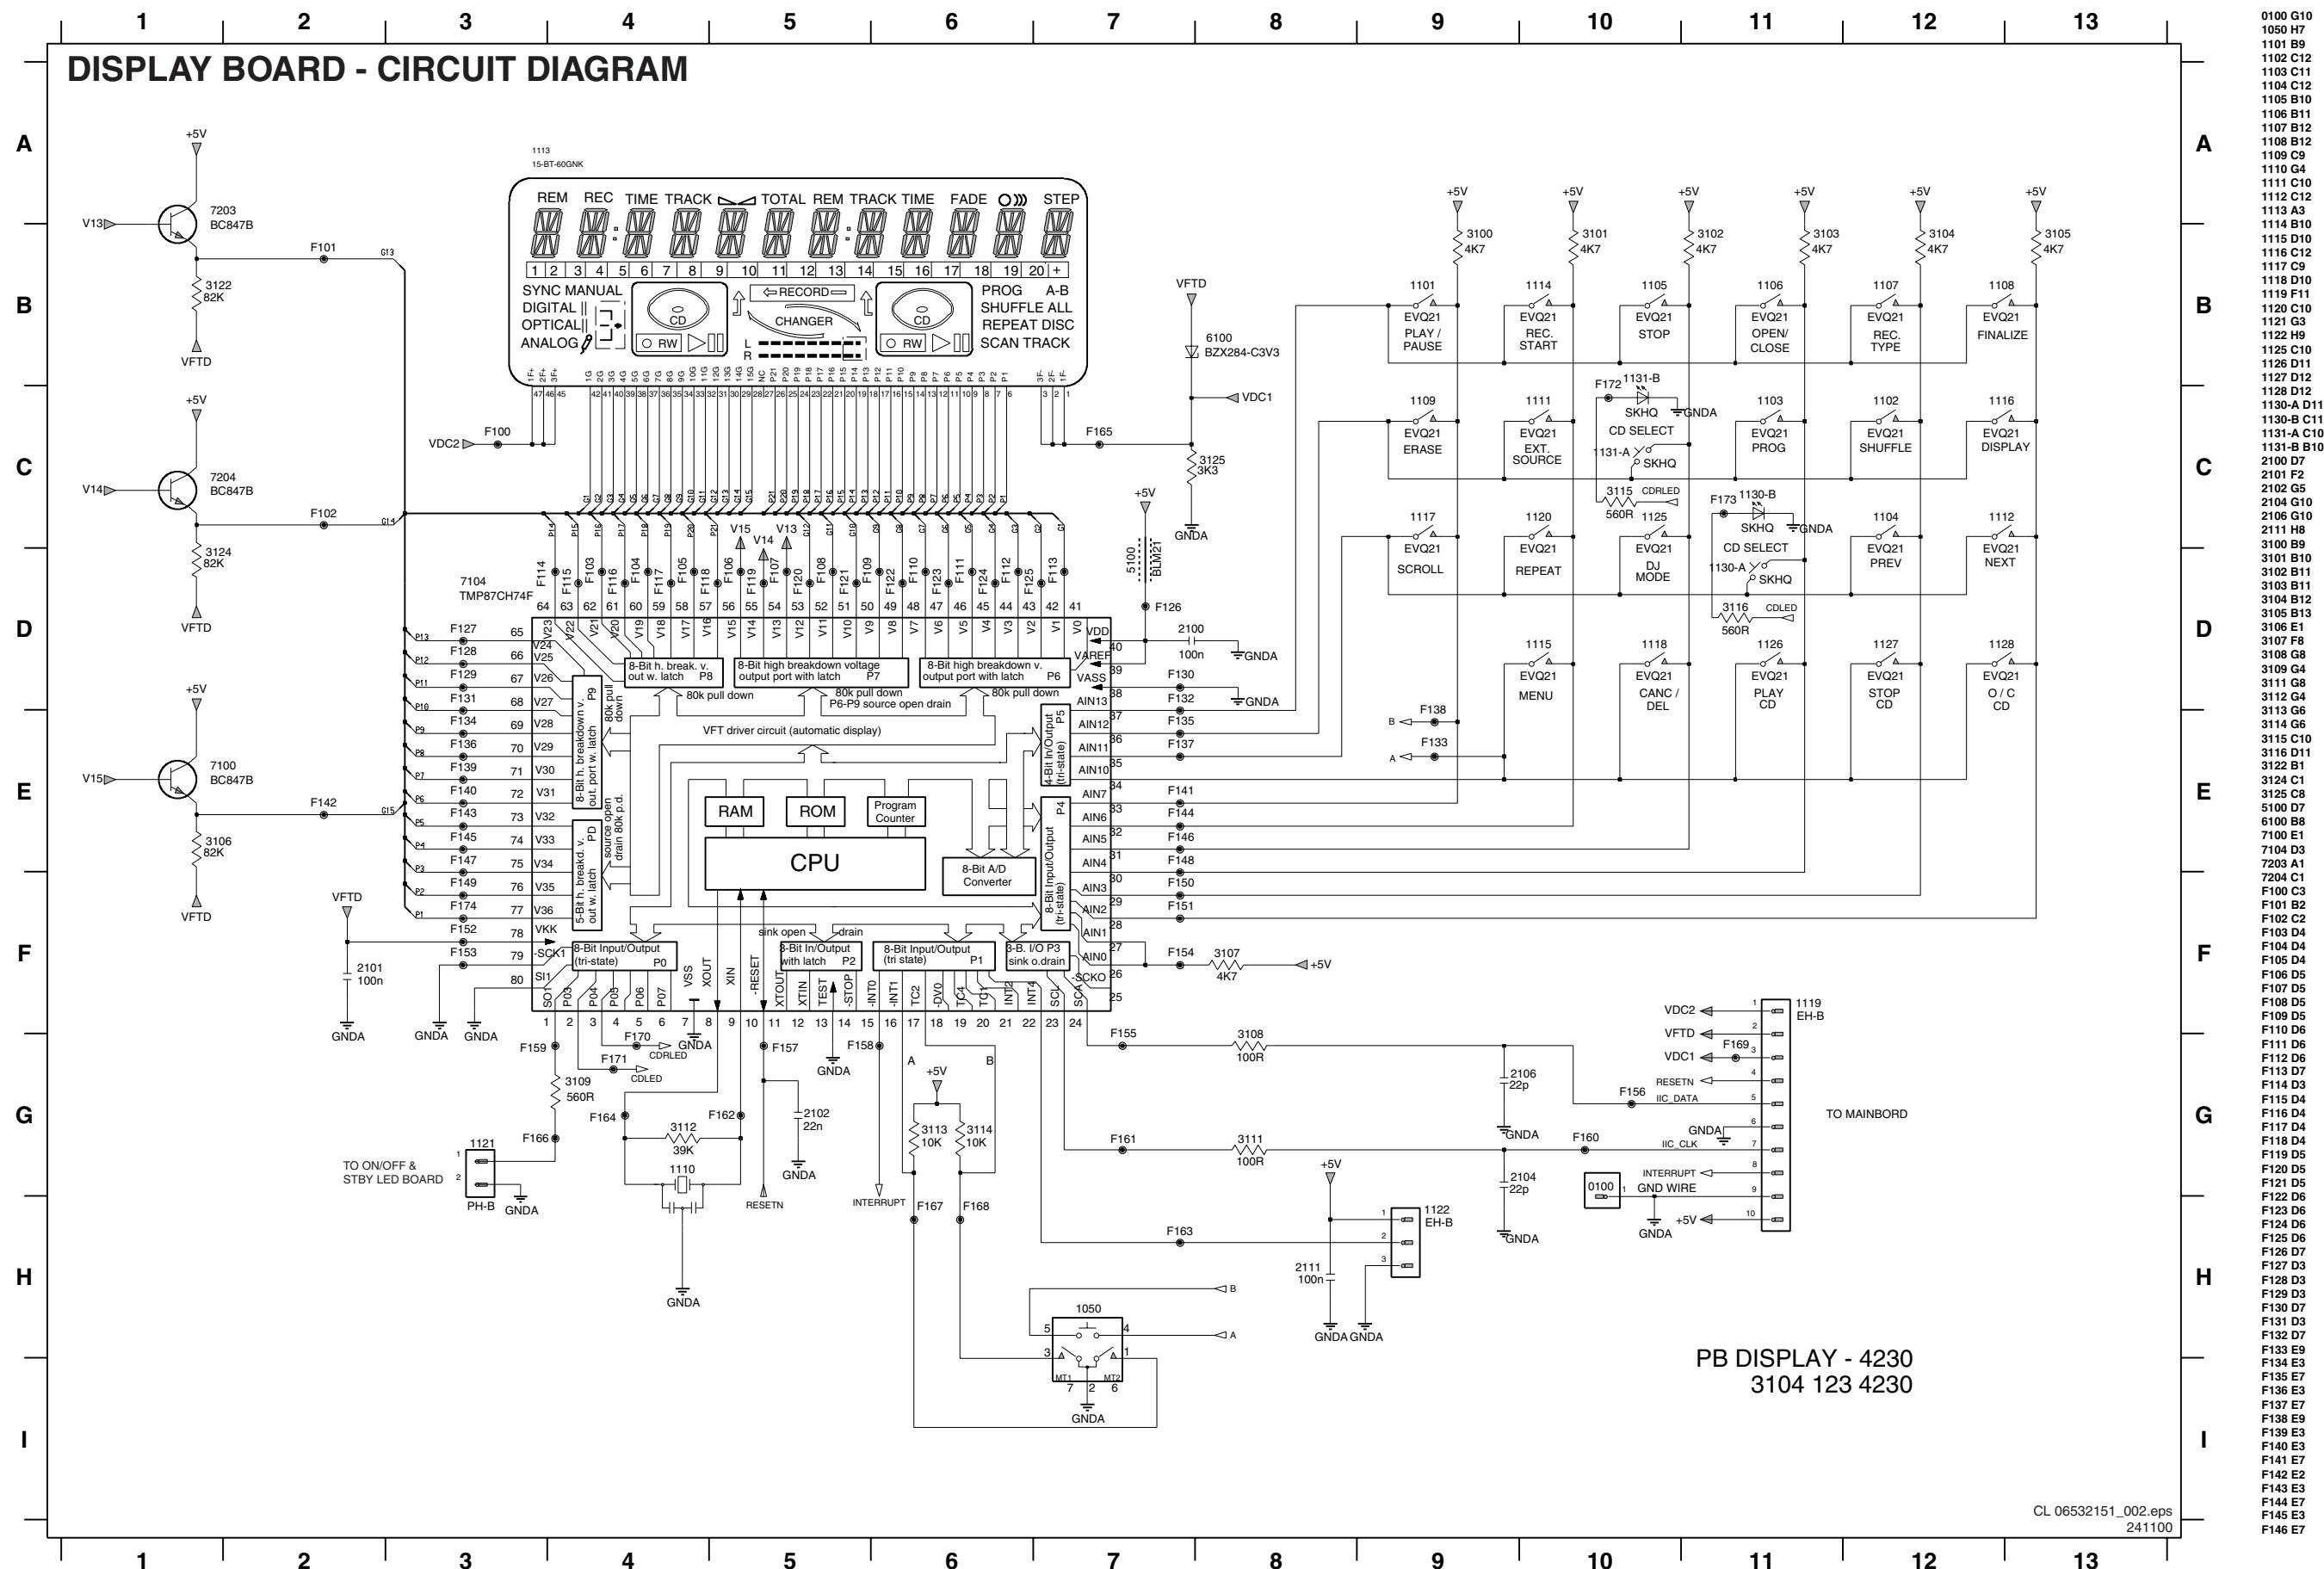


**Display 779****DISPLAY BOARD - BOTTOM VIEW**

2100 B36 2106 B7 2501 B103 100 A8 3104 A103 108 B7 3 113 A5 3122 A6 3501 B113999 B8 4003 A104007 A9 4011 A9 4015 A8 4023 A8 4027 A7 4031 A7 4035 A7 4040 B6 4044 A6 4055 A4 4059 B7 4068 D5 4077 B6 A3 4083 A3 4087 A2 4091 A1 4100 B7 4108 B5 4114 B6 7104 A6 7501 B10  
2104 B39 2400 B9 2504 B103 102 A103 105 A8 3105 A5 3125 A6 3502 B114001 A114005 A8 4008 A9 4014 A8 4018 A8 4022 A8 4026 A7 4030 A7 4034 A7 4039 A6 4043 A7 4049 A6 4053 A4 4059 B7 4069 D5 4076 B9 4082 A3 4089 A1 4095 B6 4109 B20 4112 B6 7100 A6 7504 A9

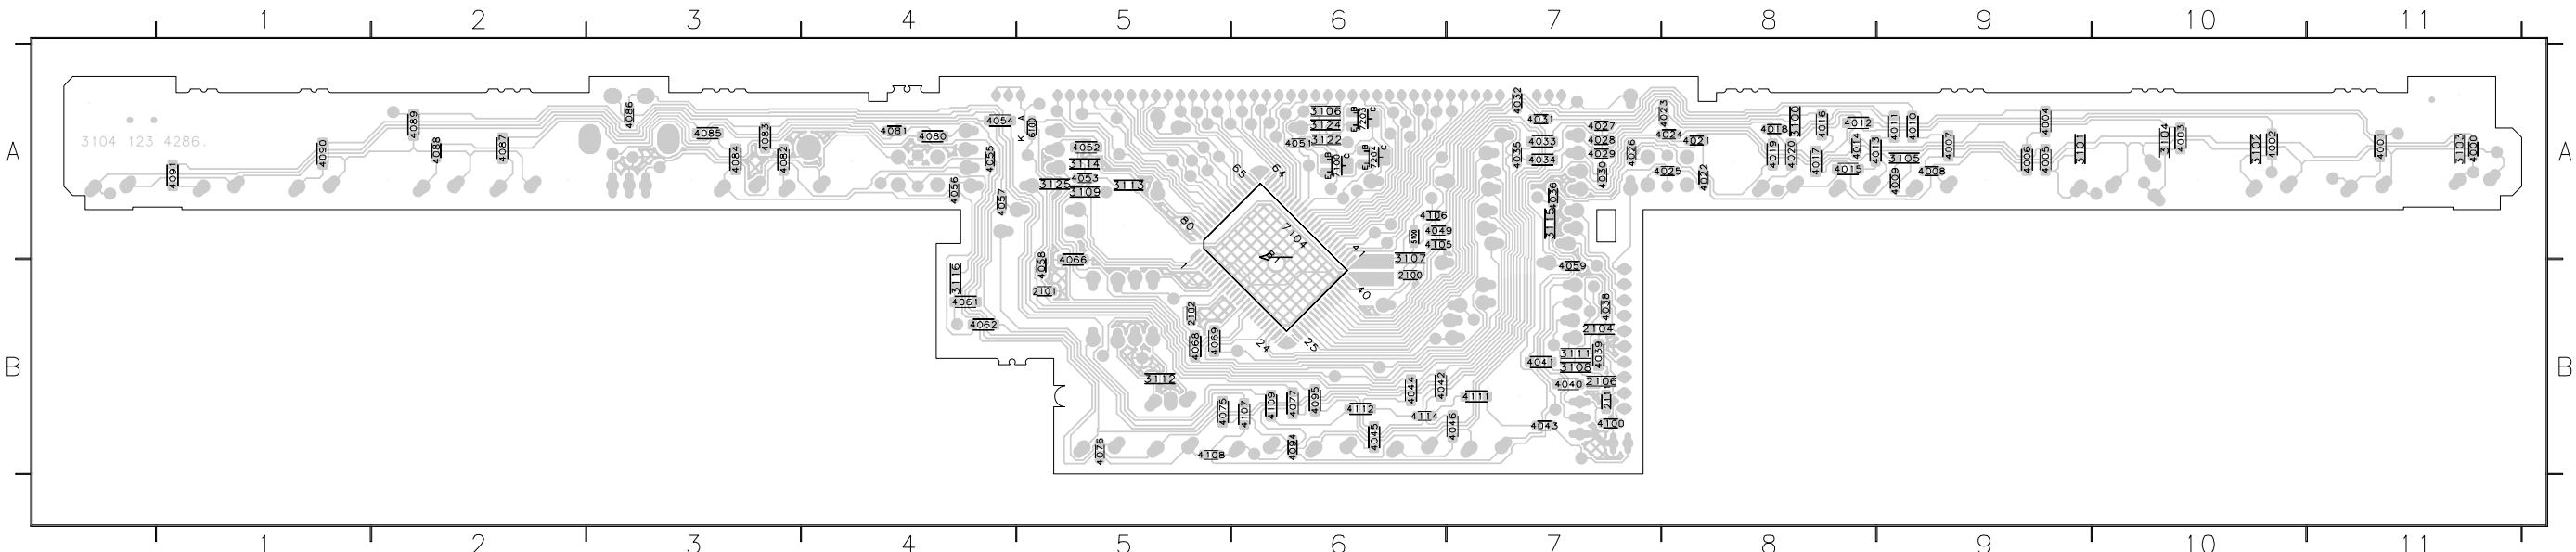
**DISPLAY BOARD - TOP VIEW**

0100 A8 1101 A1 1104 A8 1107 A2 B7 1110 A4 1113 A6 1116 B6 1119 B5 1122 B5 1127 A11131 A4 1301 B9 1401 A3 1502 A1 6200 B9 9002 A5 9005 A5 9008 A5 9011 B5 9014 A5 9017 A6 9020 A7 9023 A8 9027 A7  
1050 A9 1103 B6 1106 A1 1109 A4 1112 A9 1115 A2 1118 A10 1121 B5 1126 A11130 A8 1300 B11400 B3 1501 B1 1550 A2 6300 B109003 A5 9006 A5 9009 A5 9012 B7 9013 B5 9016 B7 9019 B6 9021 A8 9024 A8 9025 A7 9030 B2

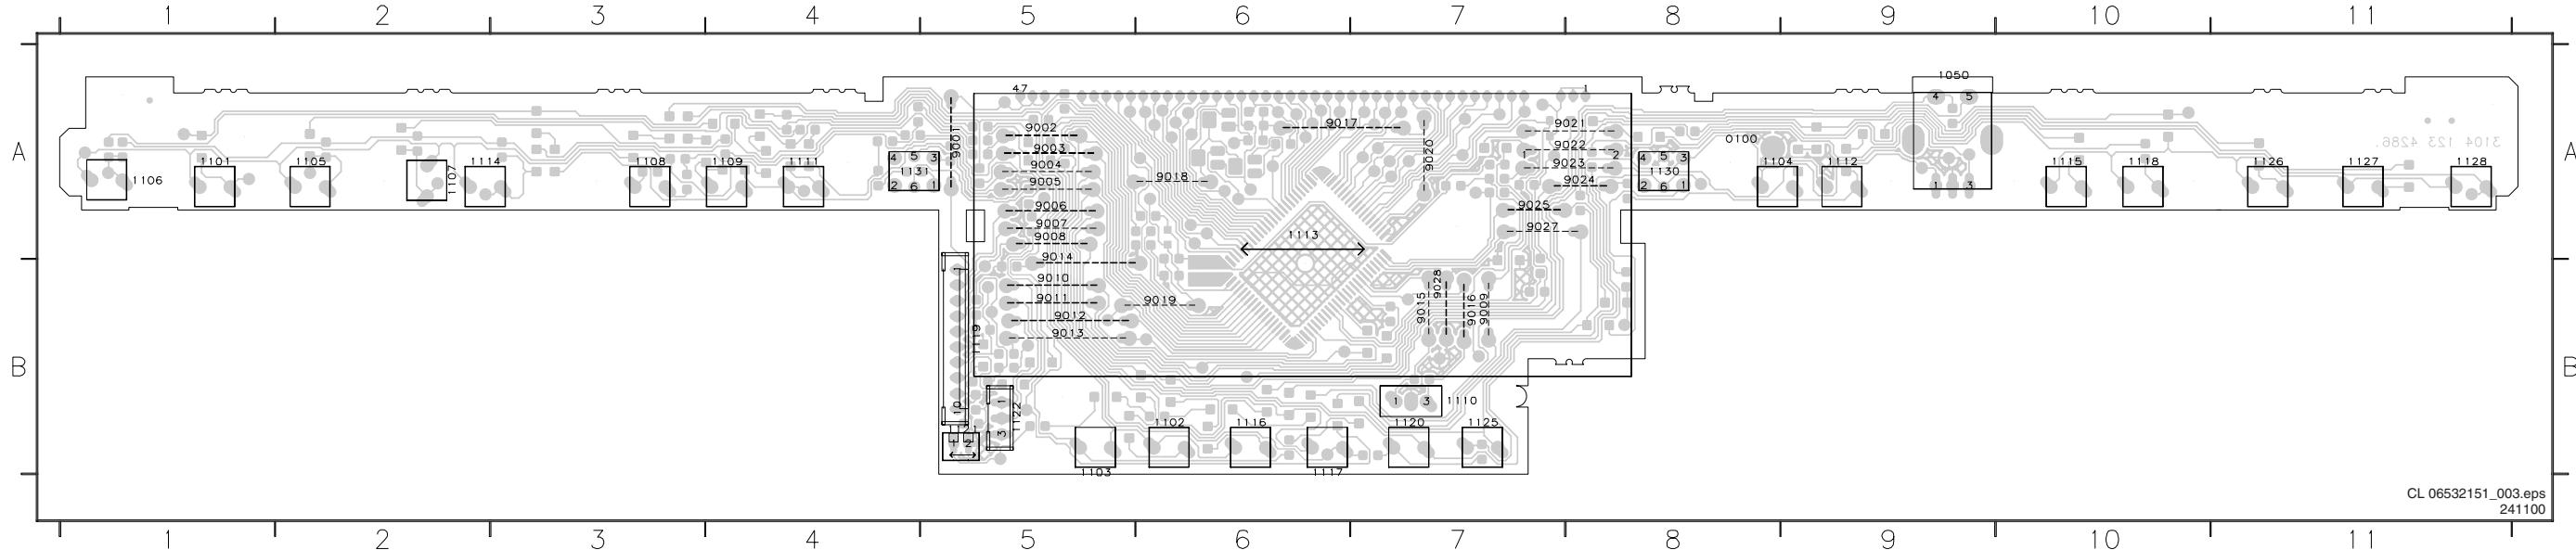


IR on/off


## IR BOARD CDR779 - CIRCUIT DIAGRAM

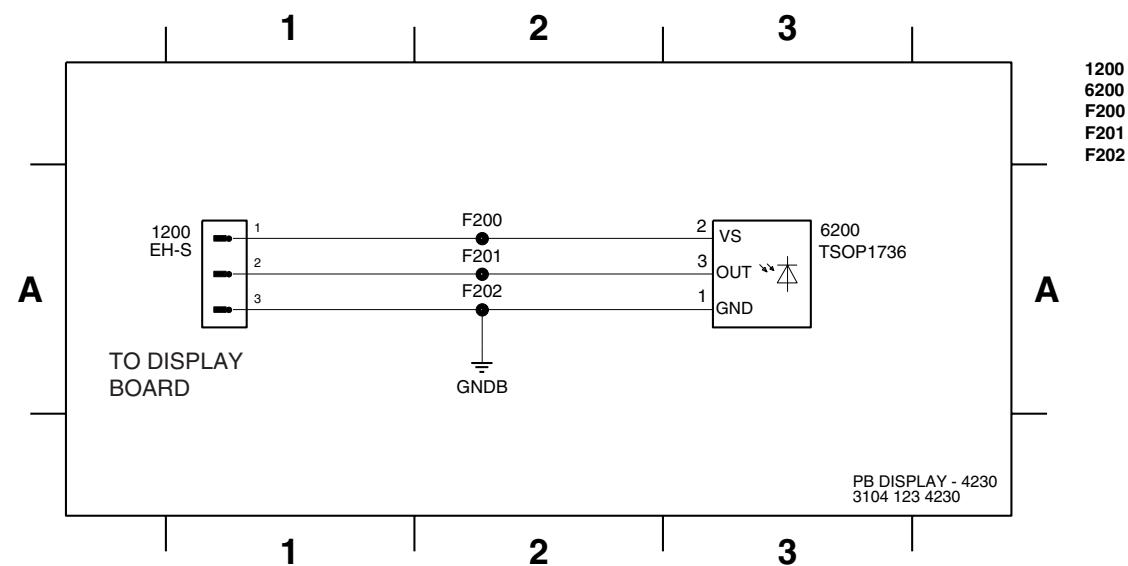


## IR BOARD - FRONT VIEW

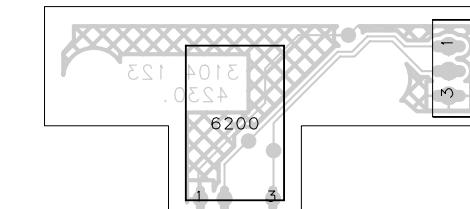


## IR BOARD - BACK VIEW

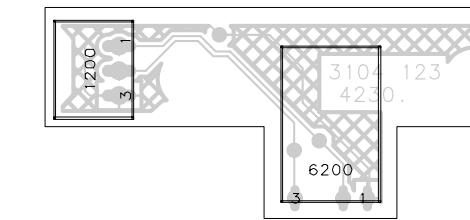


## ON/OFF &amp; STBY LED BOARD CDR779 - CIRCUIT DIAGRAM






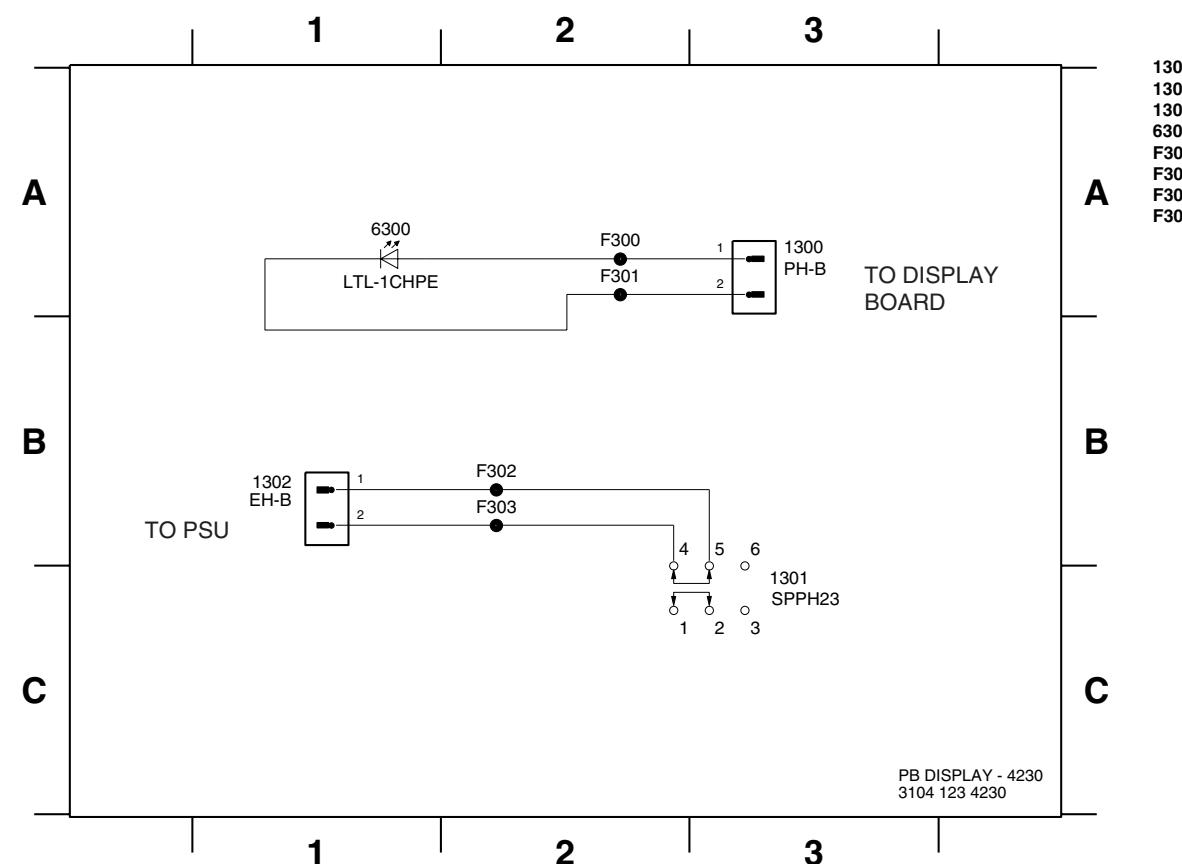


## ON/OFF &amp; STBY LED BOARD - FRONT VIEW

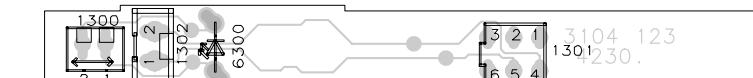


## ON/OFF &amp; STBY LED BOARD - BACK VIEW

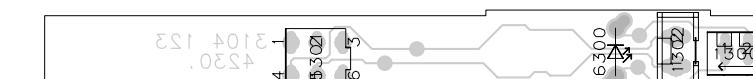


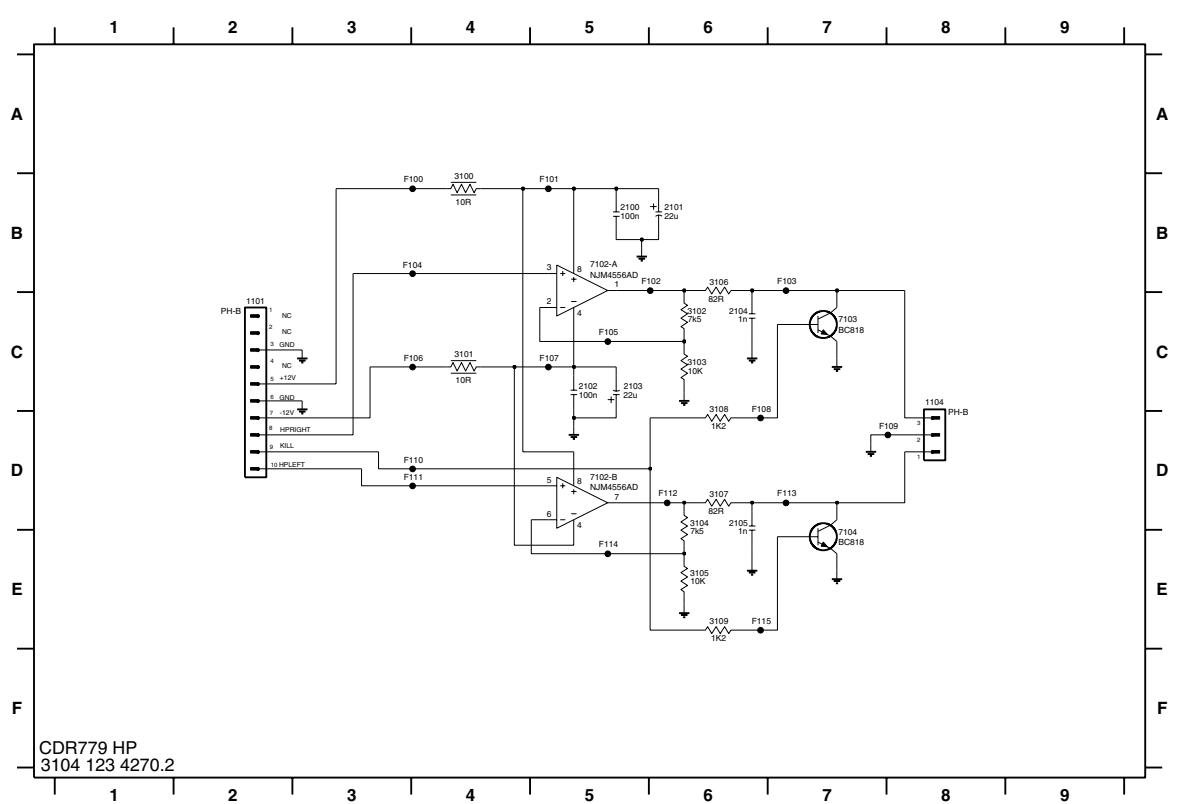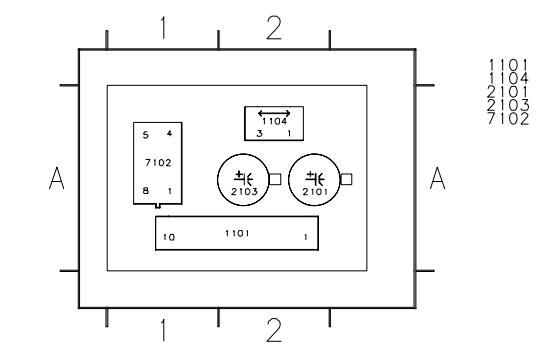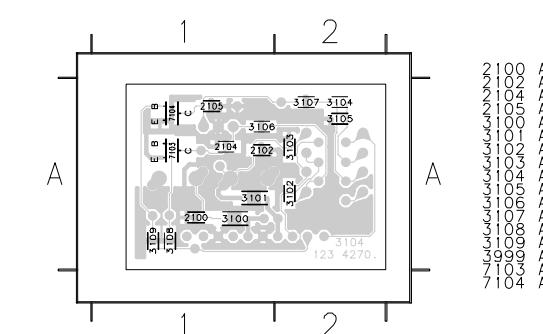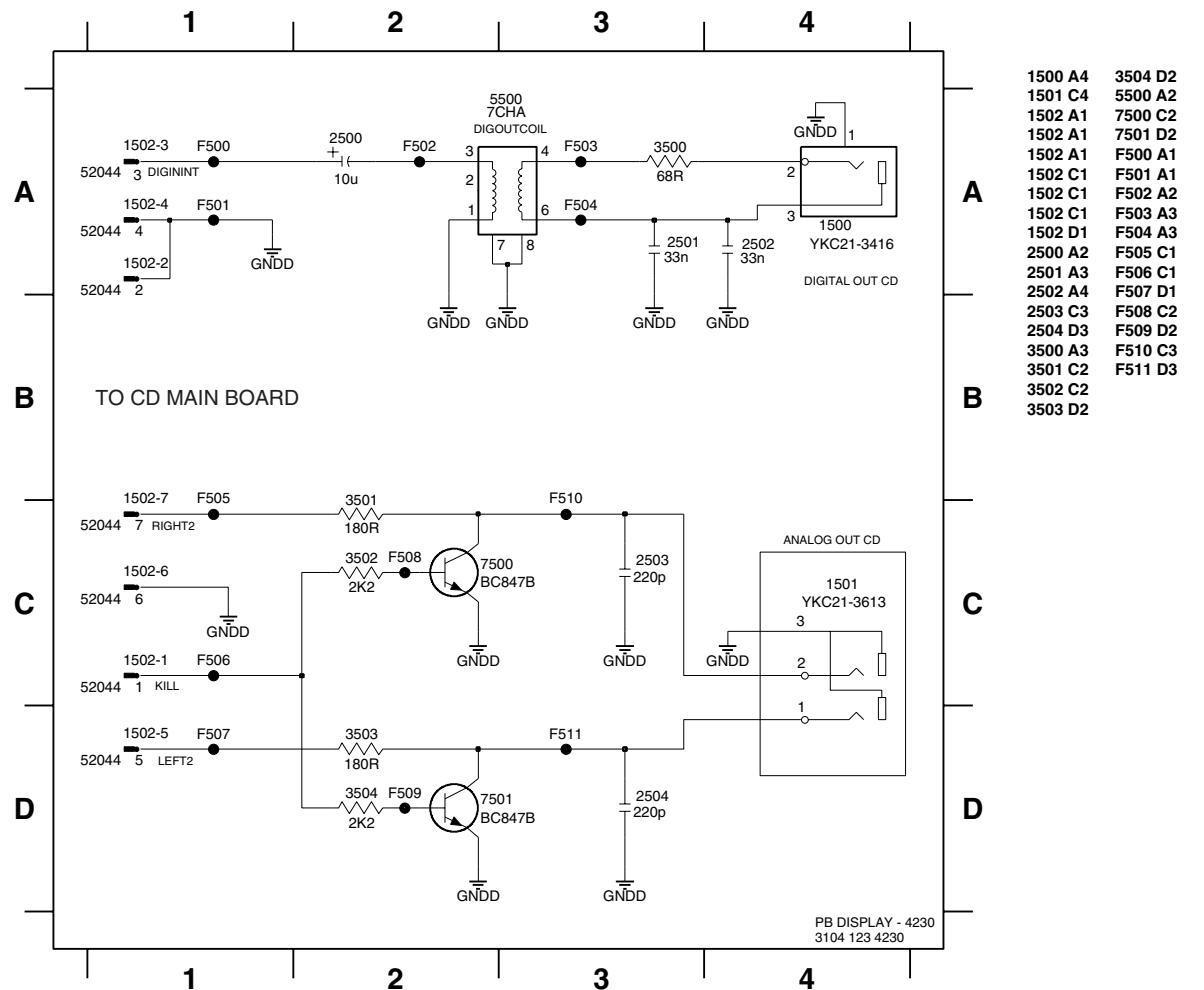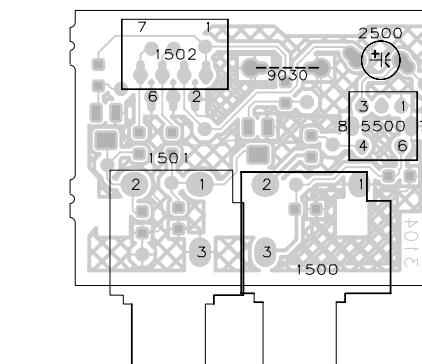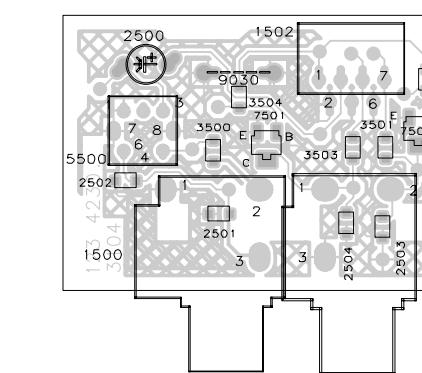**HPCD out****HEADPHONE BOARD - CIRCUIT DIAGRAM****HEADPHONE BOARD - TOP VIEW****HEADPHONE BOARD - BOTTOM VIEW****CD OUT BOARD - CIRCUIT DIAGRAM****CD OUT BOARD - TOP VIEW****CD OUT BOARD - BOTTOM VIEW**


## I/O board: Ext DAC

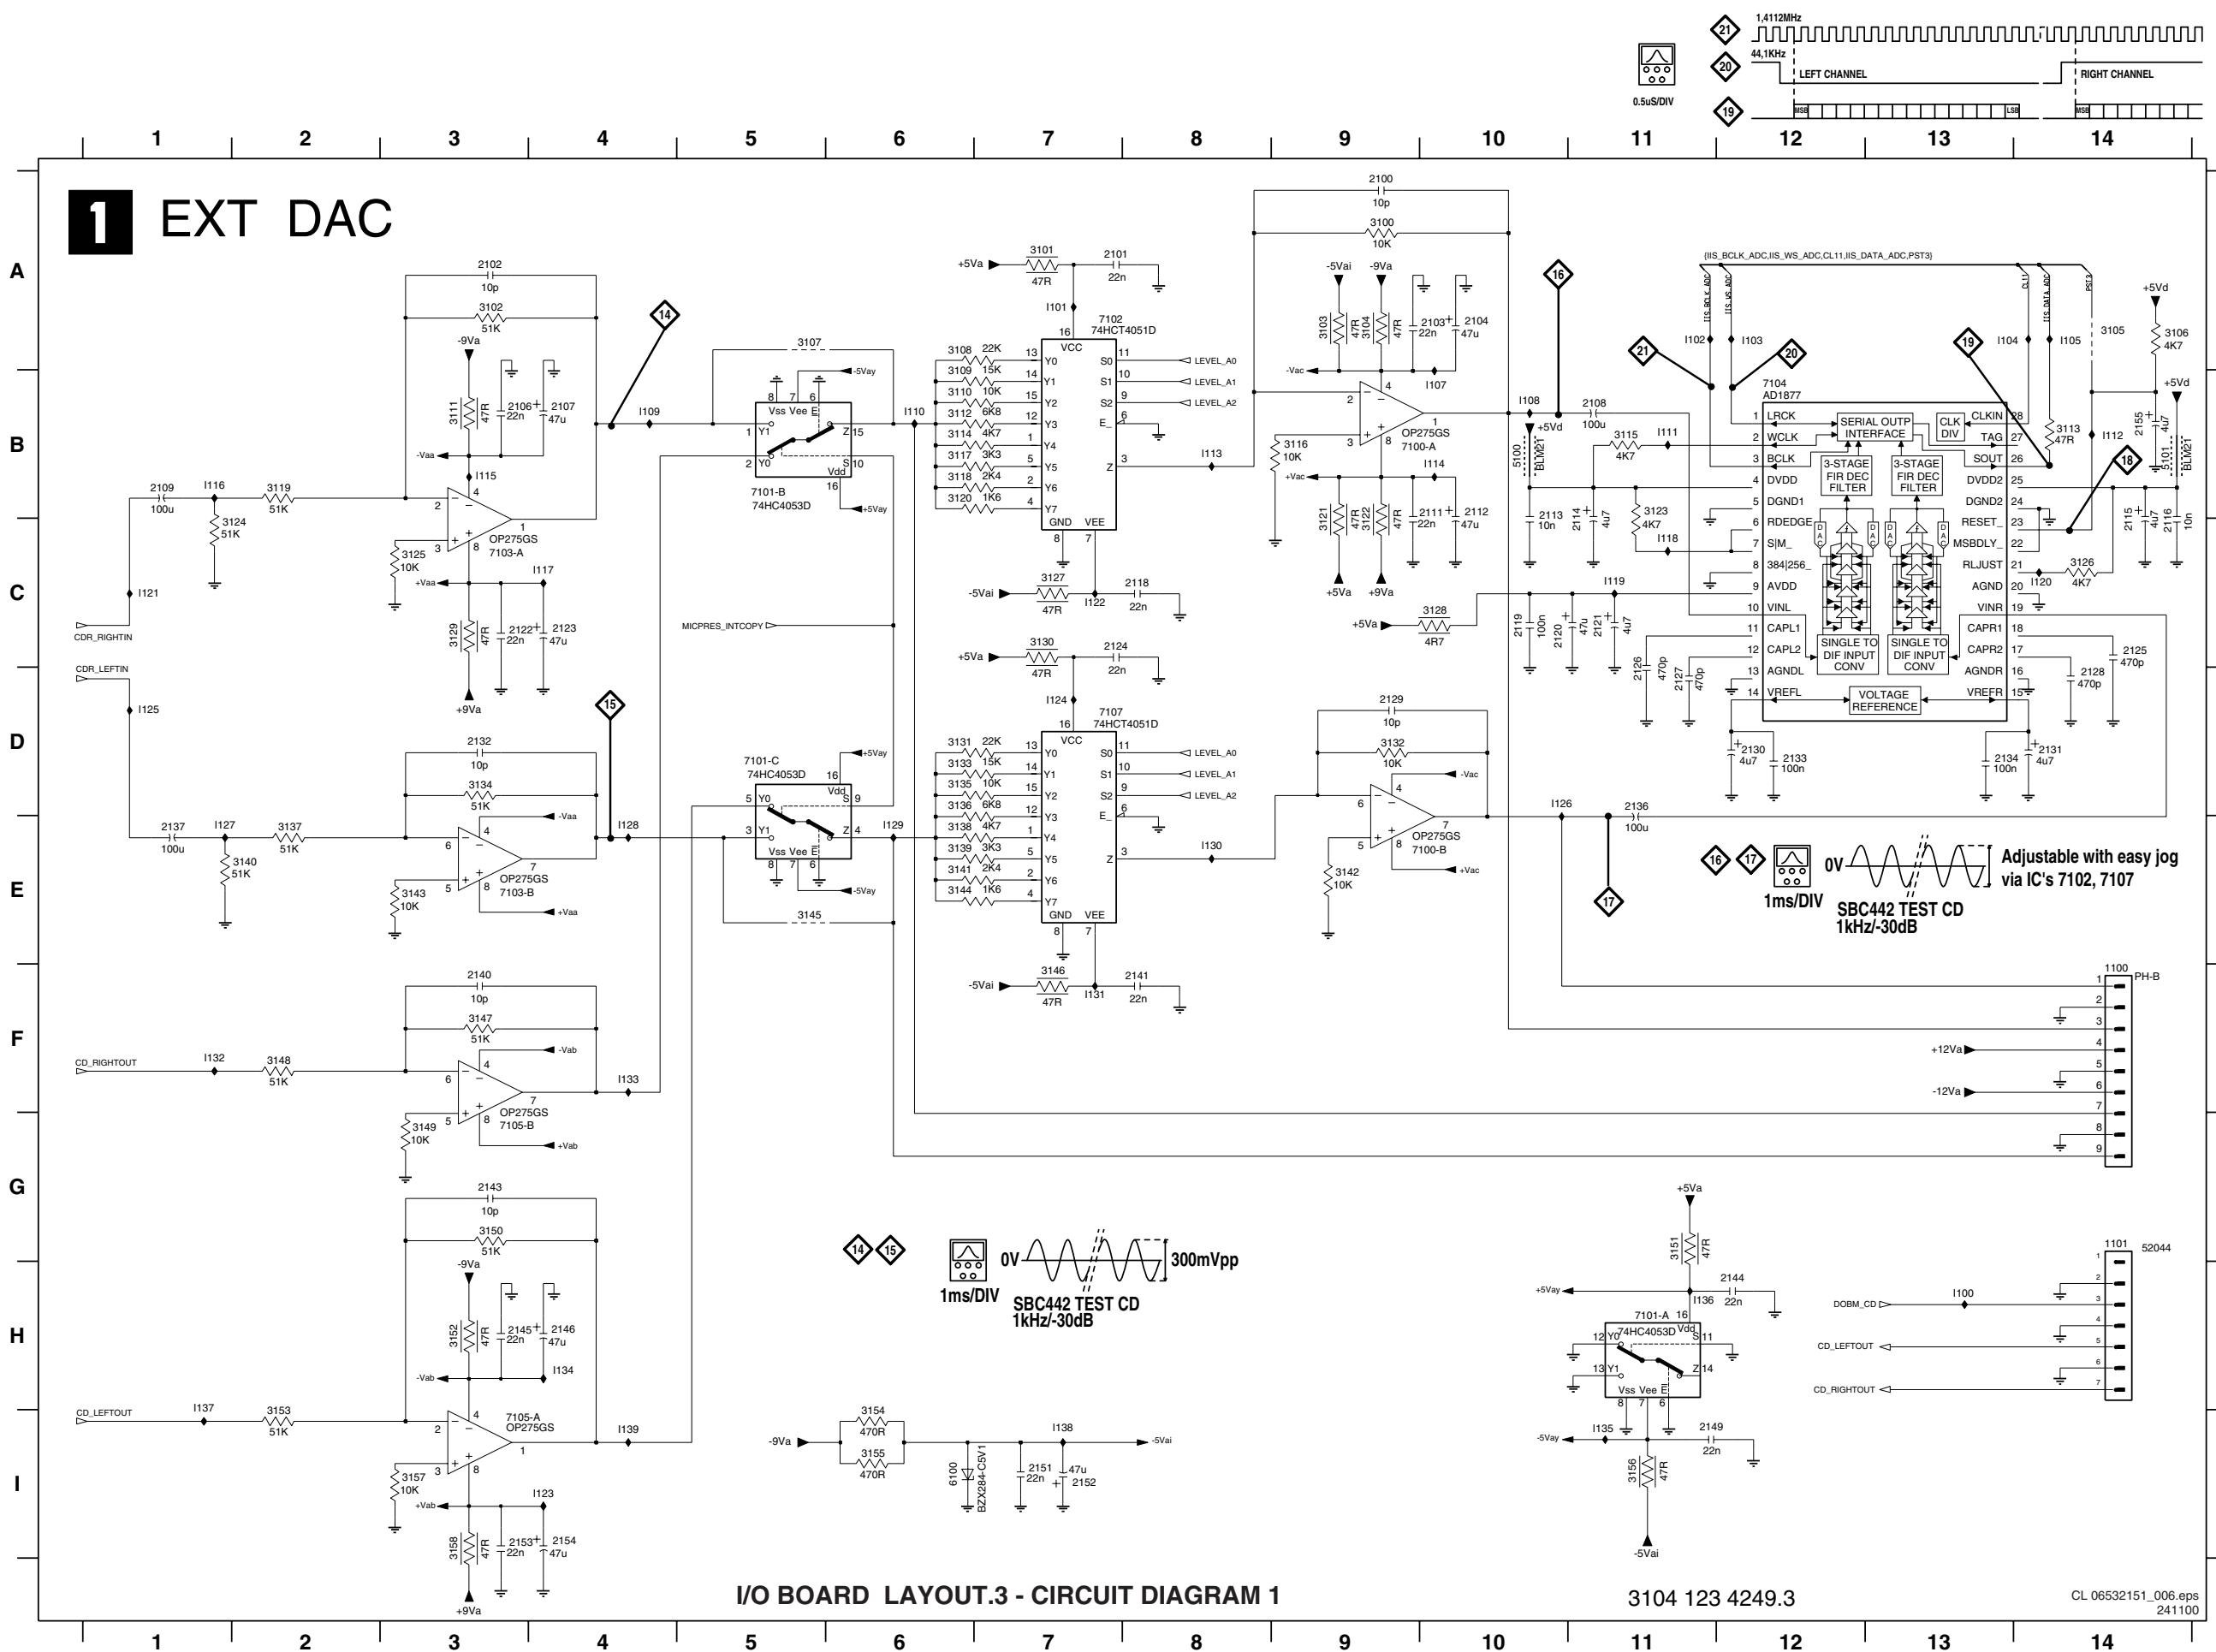


## I/O board: Cinch

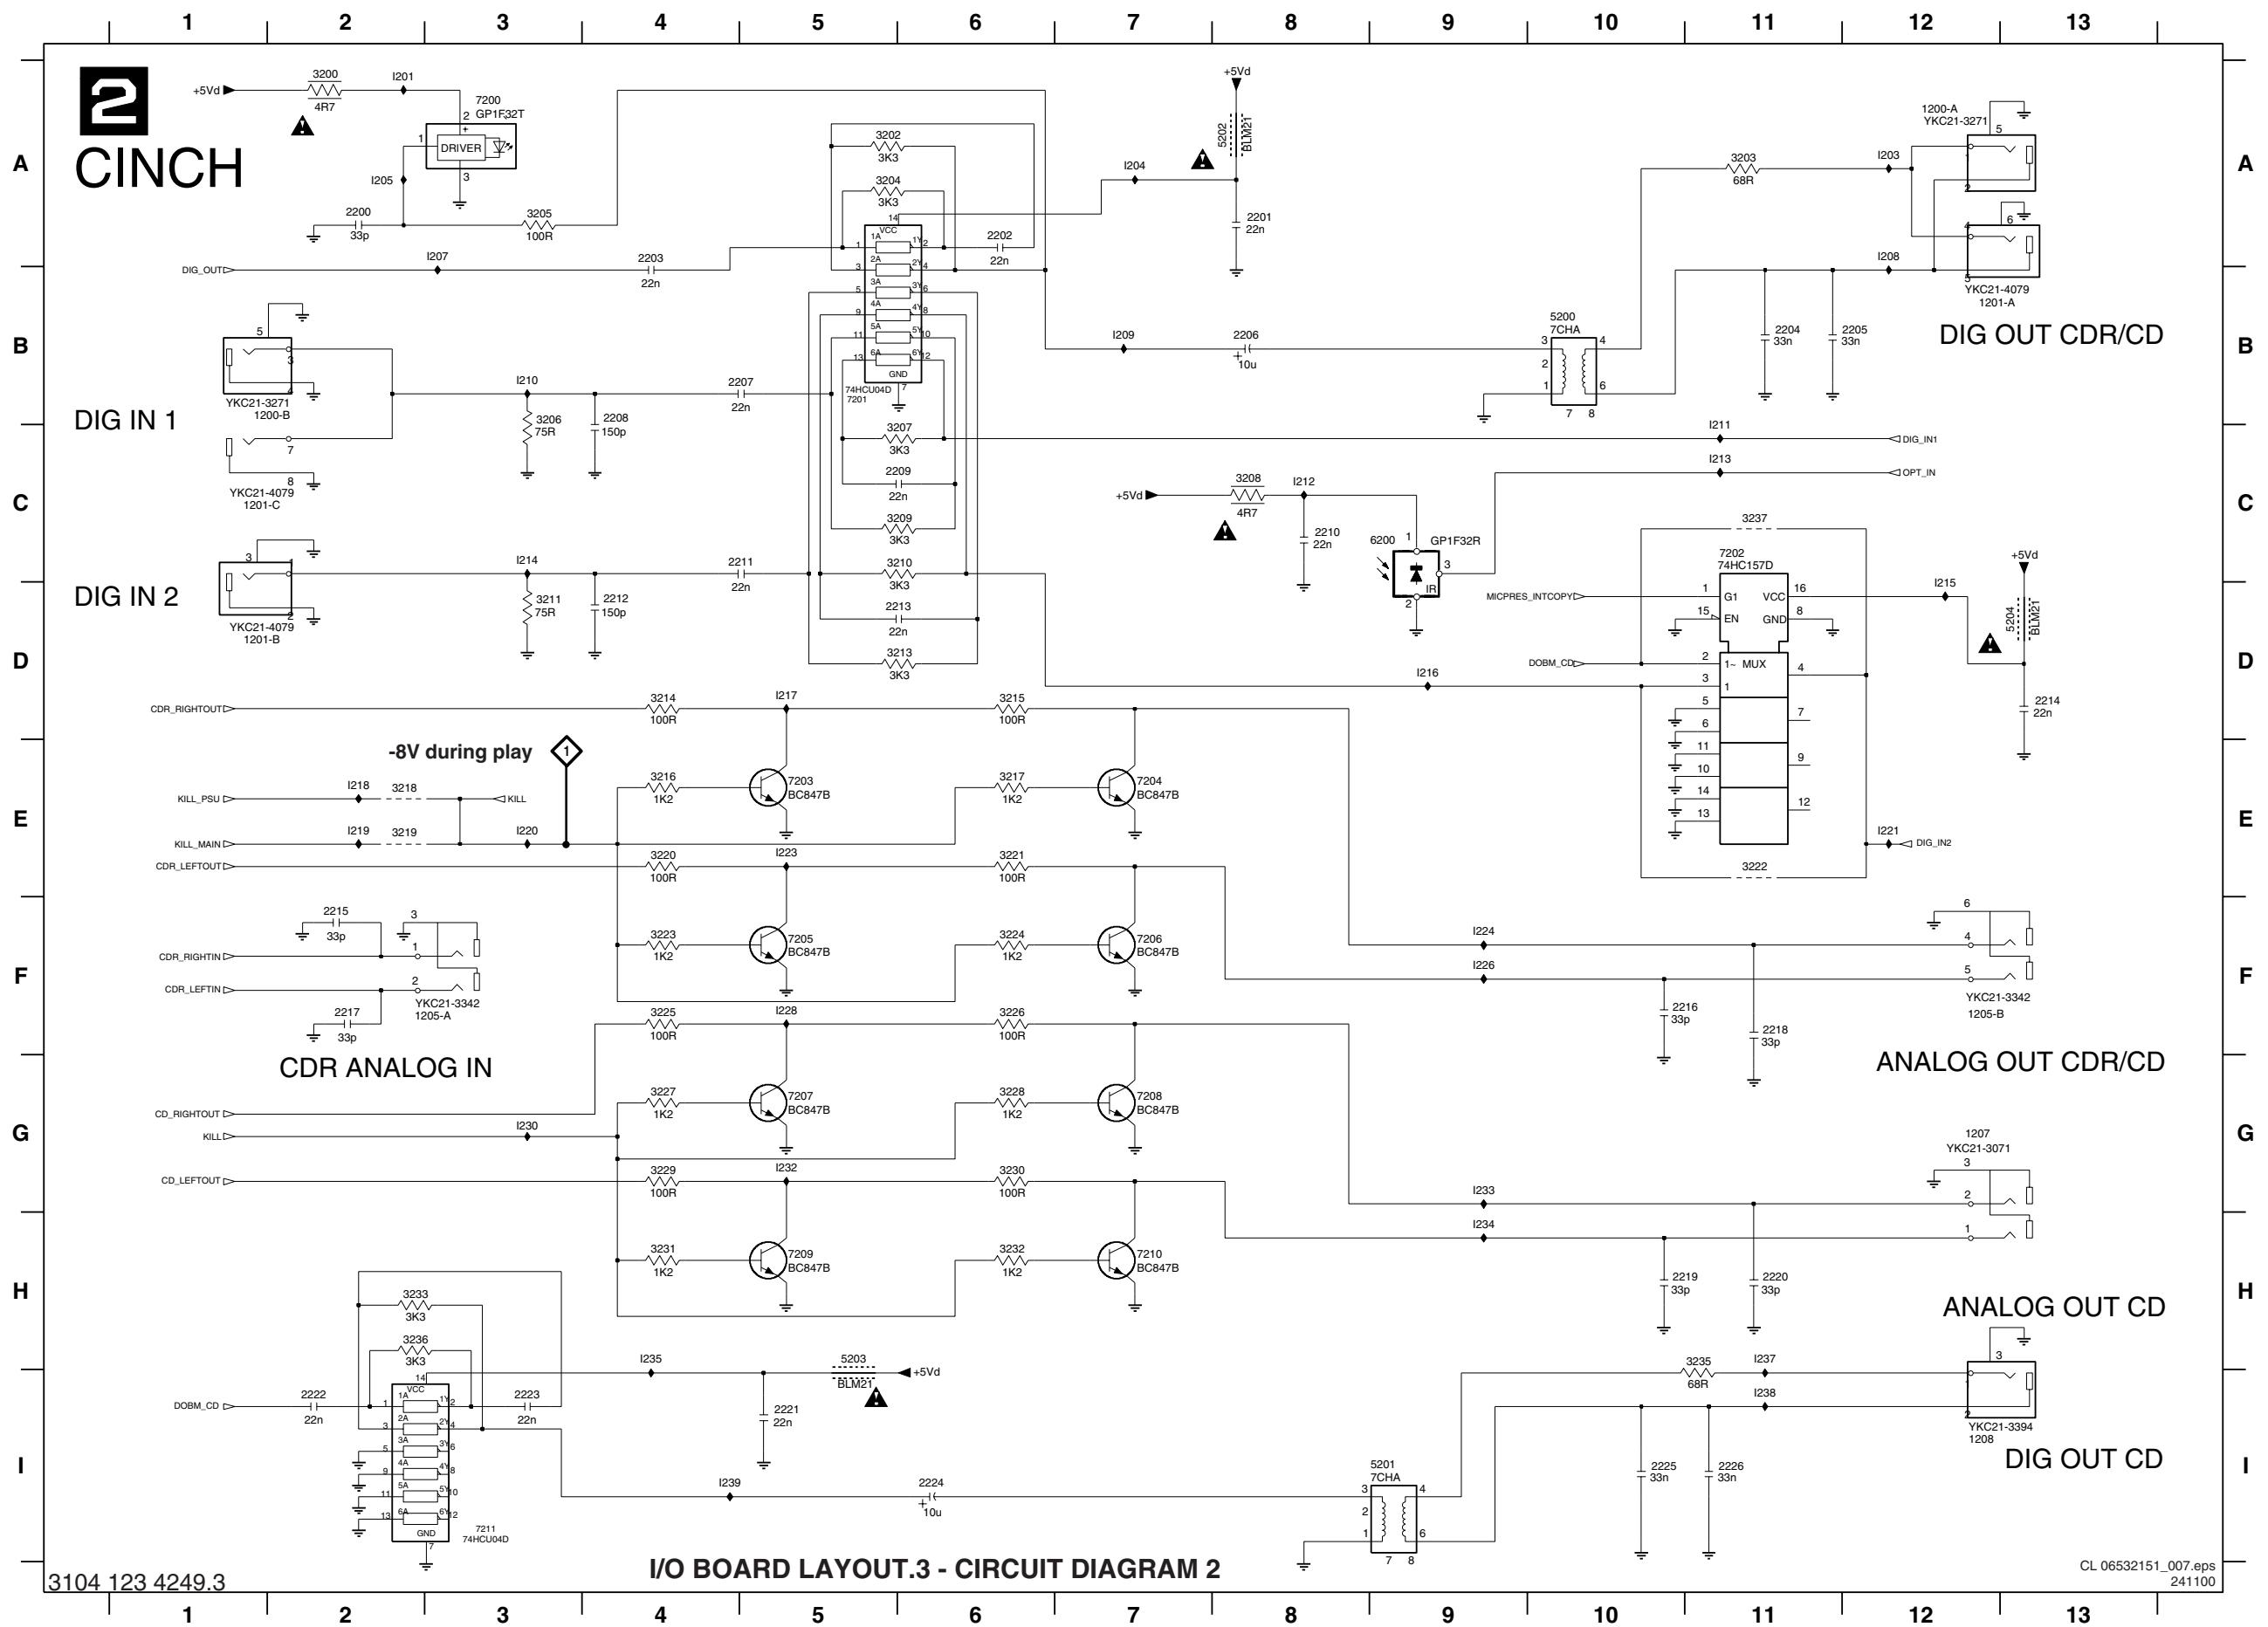

## I/O board: Mic ADC

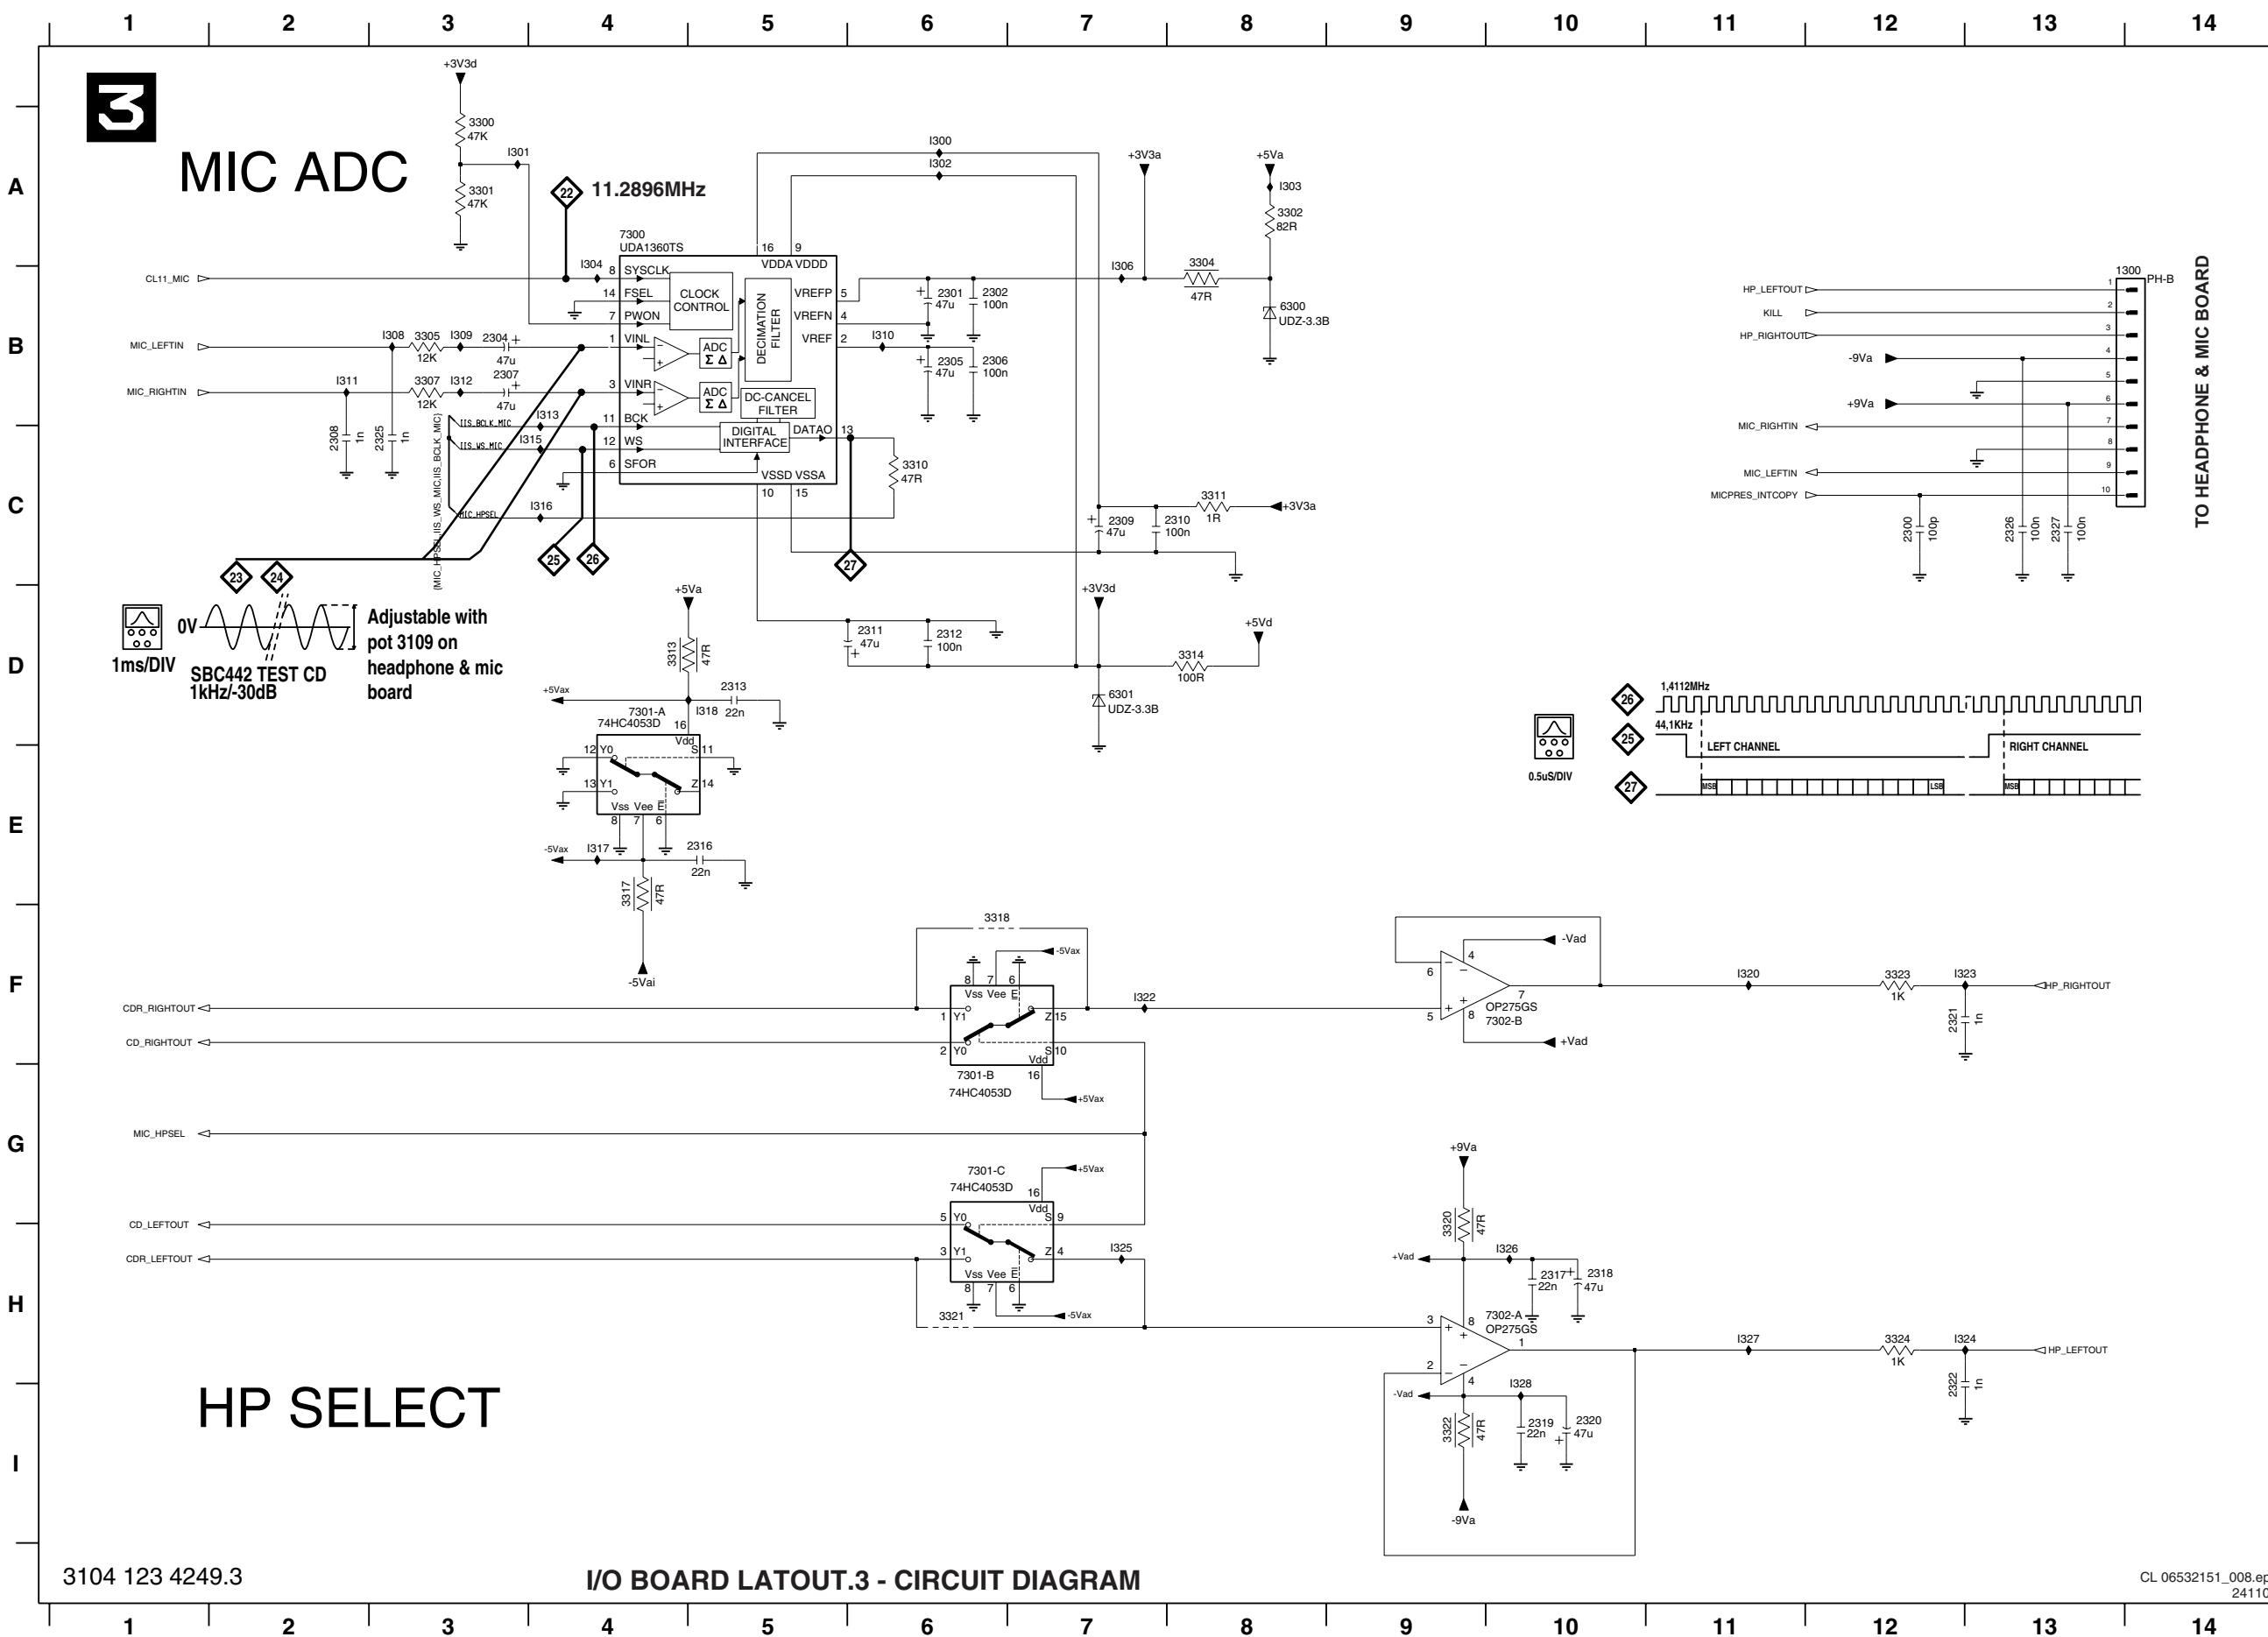


## I/O board: Power supply

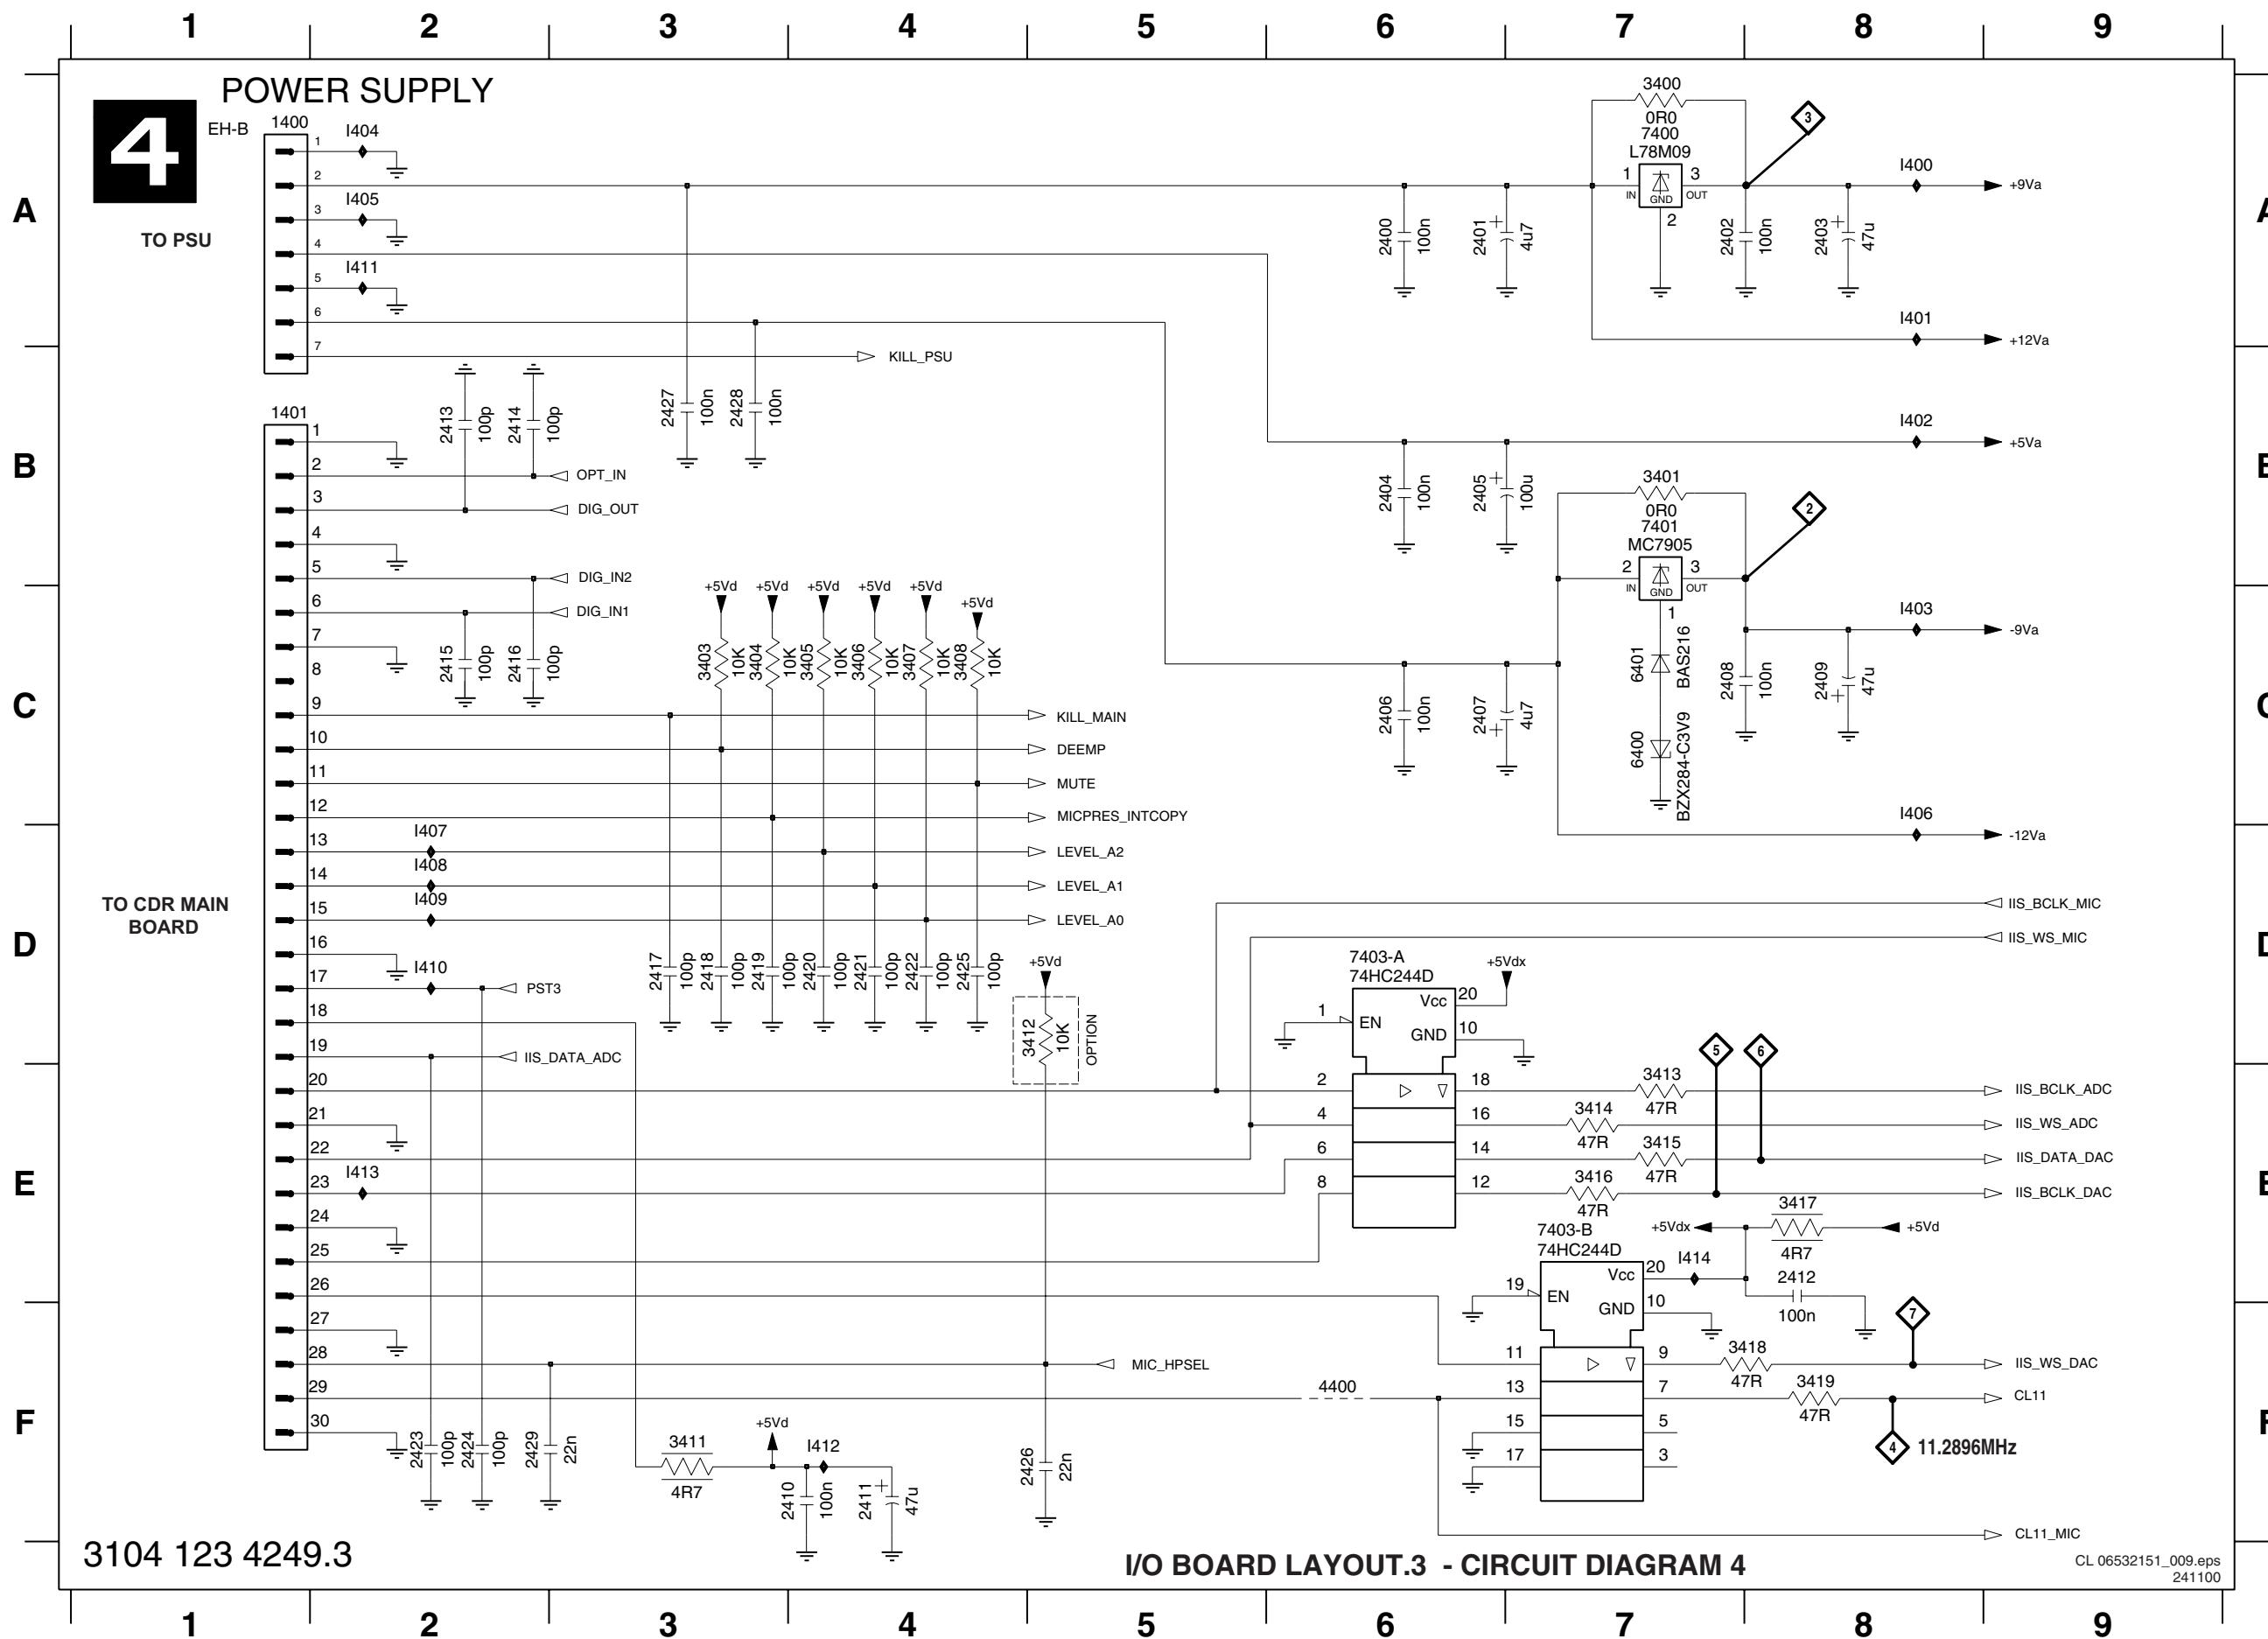


1400 A1  
1401 B1  
2400 A6  
2401 A6  
2402 A7  
2403 A8  
2404 B6  
2405 B6  
2406 C6  
2407 C6  
2408 C7  
2409 C8  
2410 F4  
2411 F4  
2412 E8  
2413 B2  
2414 B2  
2415 C2  
2416 C2  
2417 D3  
2418 D3  
2419 D3  
2420 D4  
2421 D4  
2422 D4  
2423 F2  
2424 F2  
2425 D4  
2426 F5  
2427 B3  
2428 B3  
2429 F2  
3400 A7  
3401 B7  
3403 C3  
3404 C3  
3405 C4  
3406 C4  
3407 C4  
3408 C4  
3411 F3  
3412 D5  
3413 E7  
3414 E7  
3415 E7  
3416 E7  
3417 E8  
3418 F8  
3419 F8  
4400 F6  
6400 C7  
6401 C7  
7400 A7  
7401 B7  
7403-A D6  
7403-B E7  
1400 A8  
1401 A8  
1402 B8  
1403 C8  
1404 A2  
1405 A2  
1406 C8  
1407 D2  
1408 D2  
1409 D2  
1410 D2  
1411 A2  
1412 F4  
1413 E2  
1414 E7


## I/O board: DAC filter

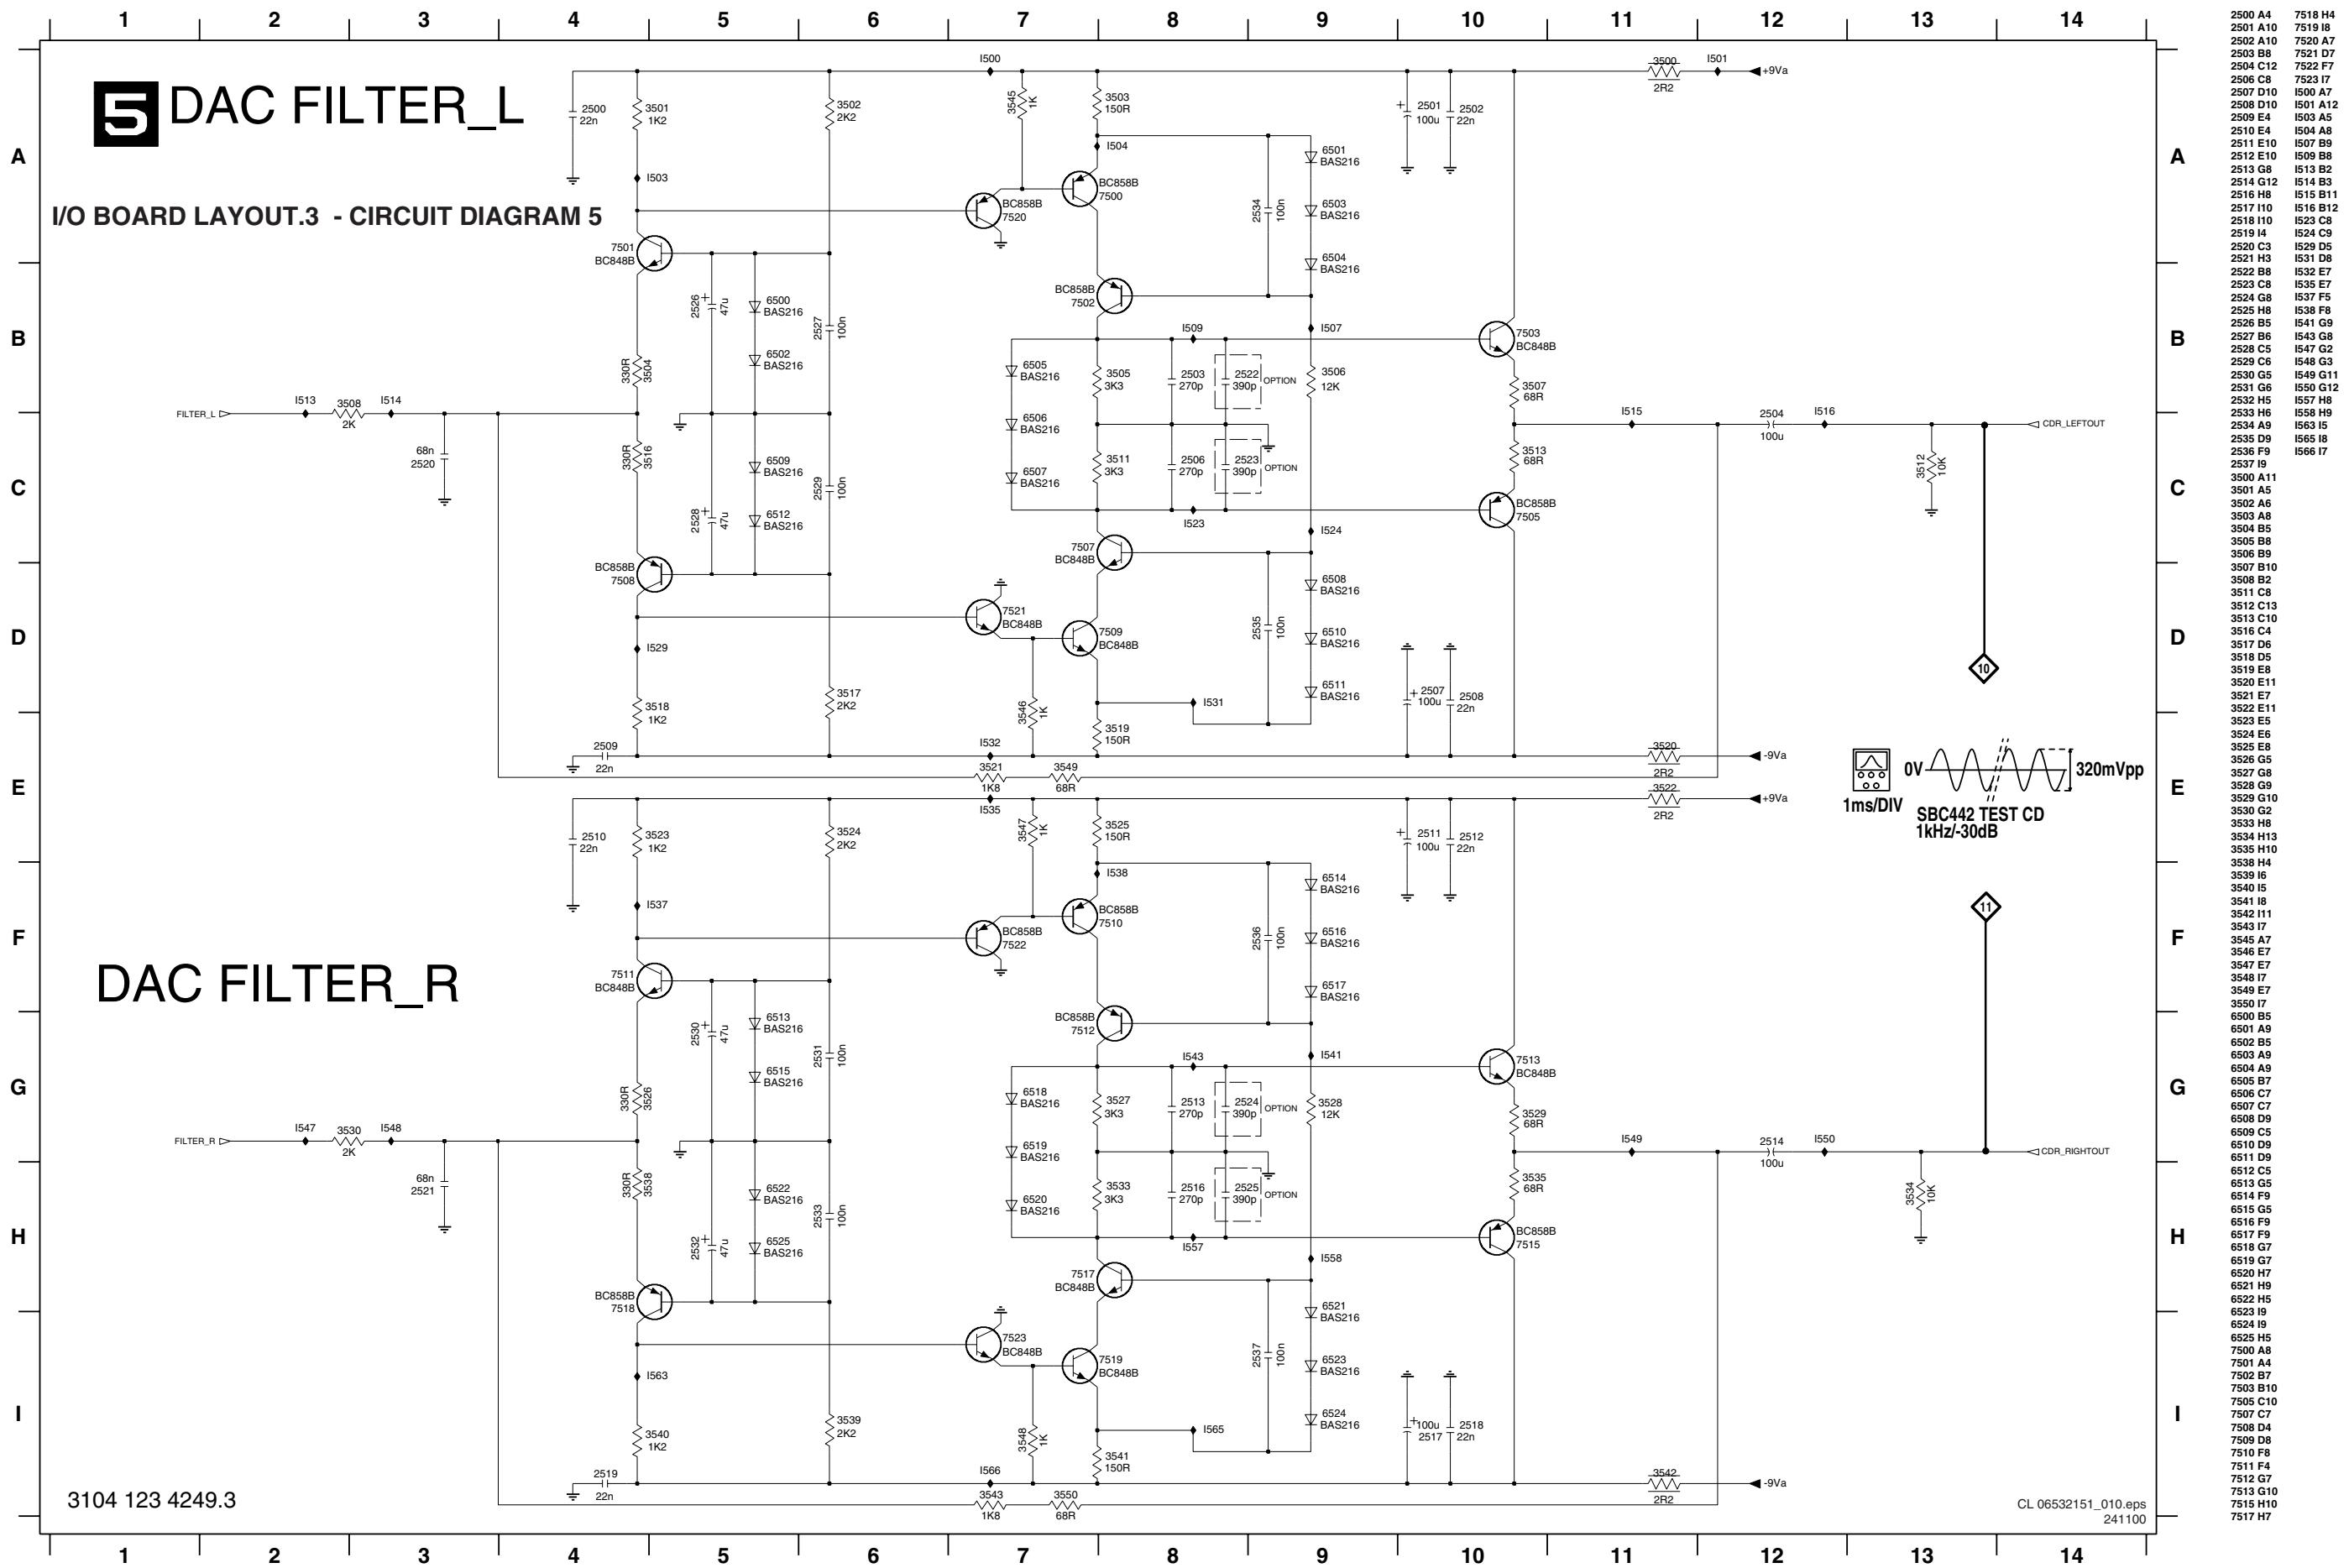


## I/O board: DAC

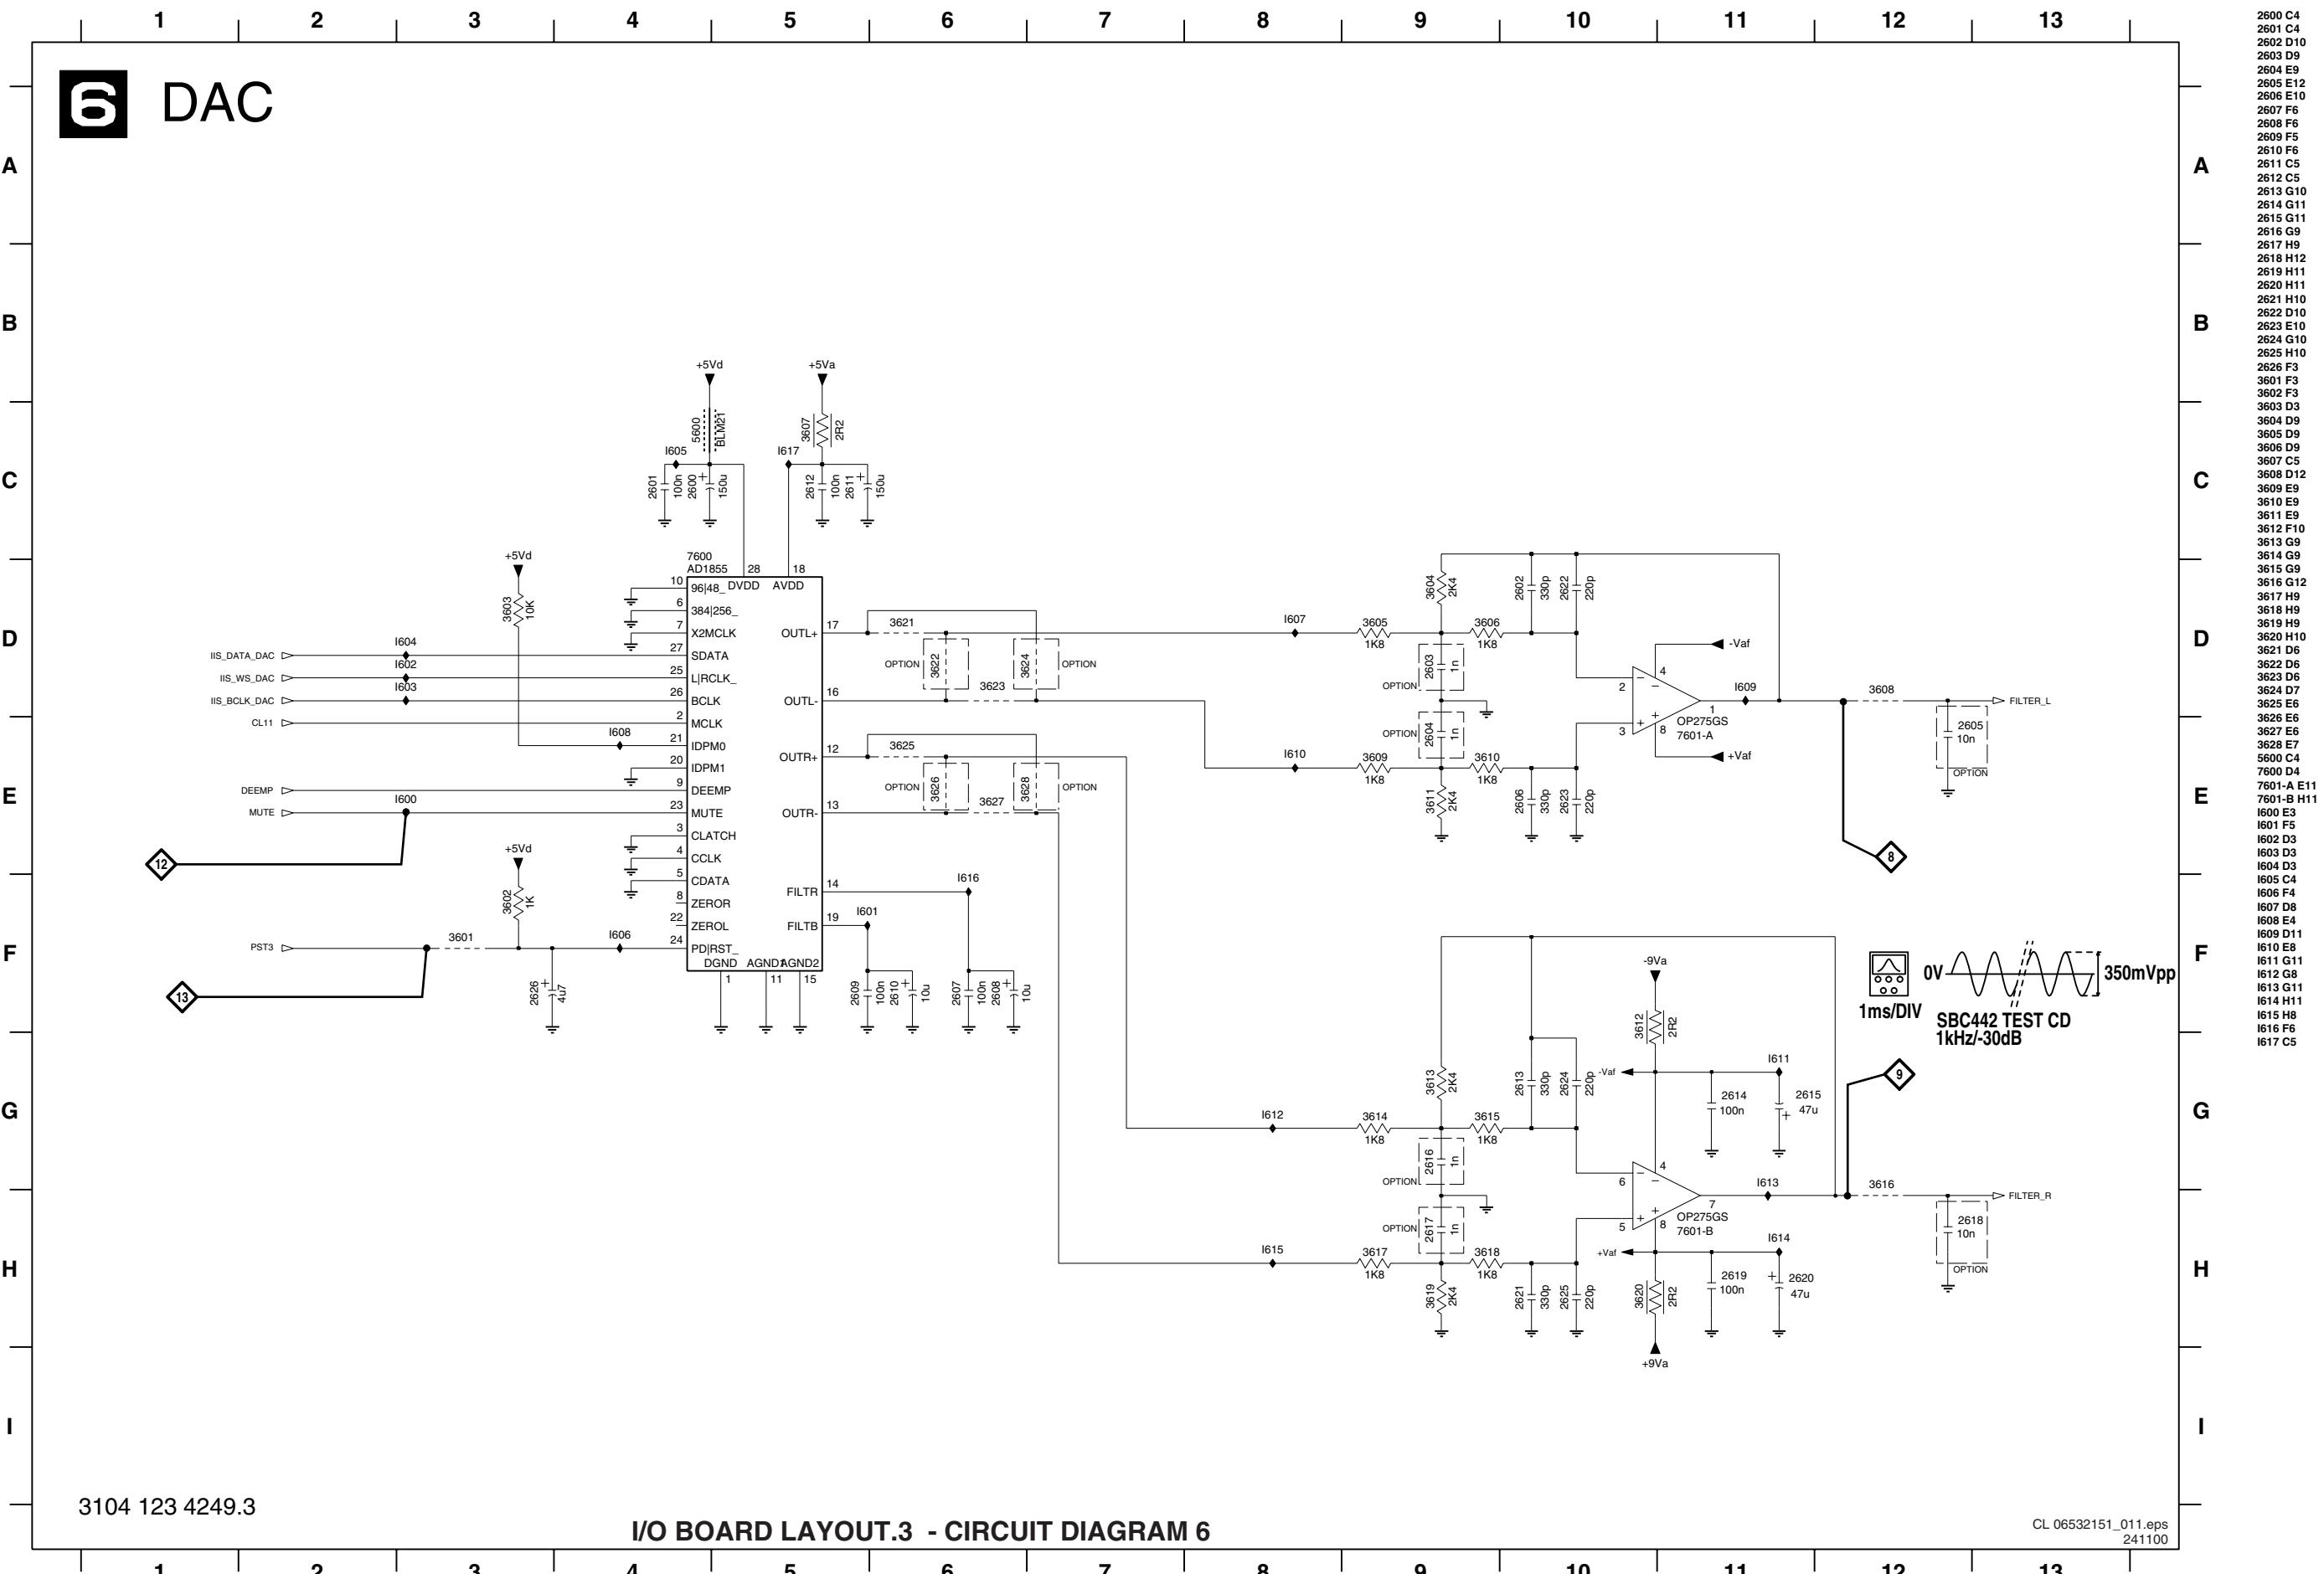


## Layout I/O board

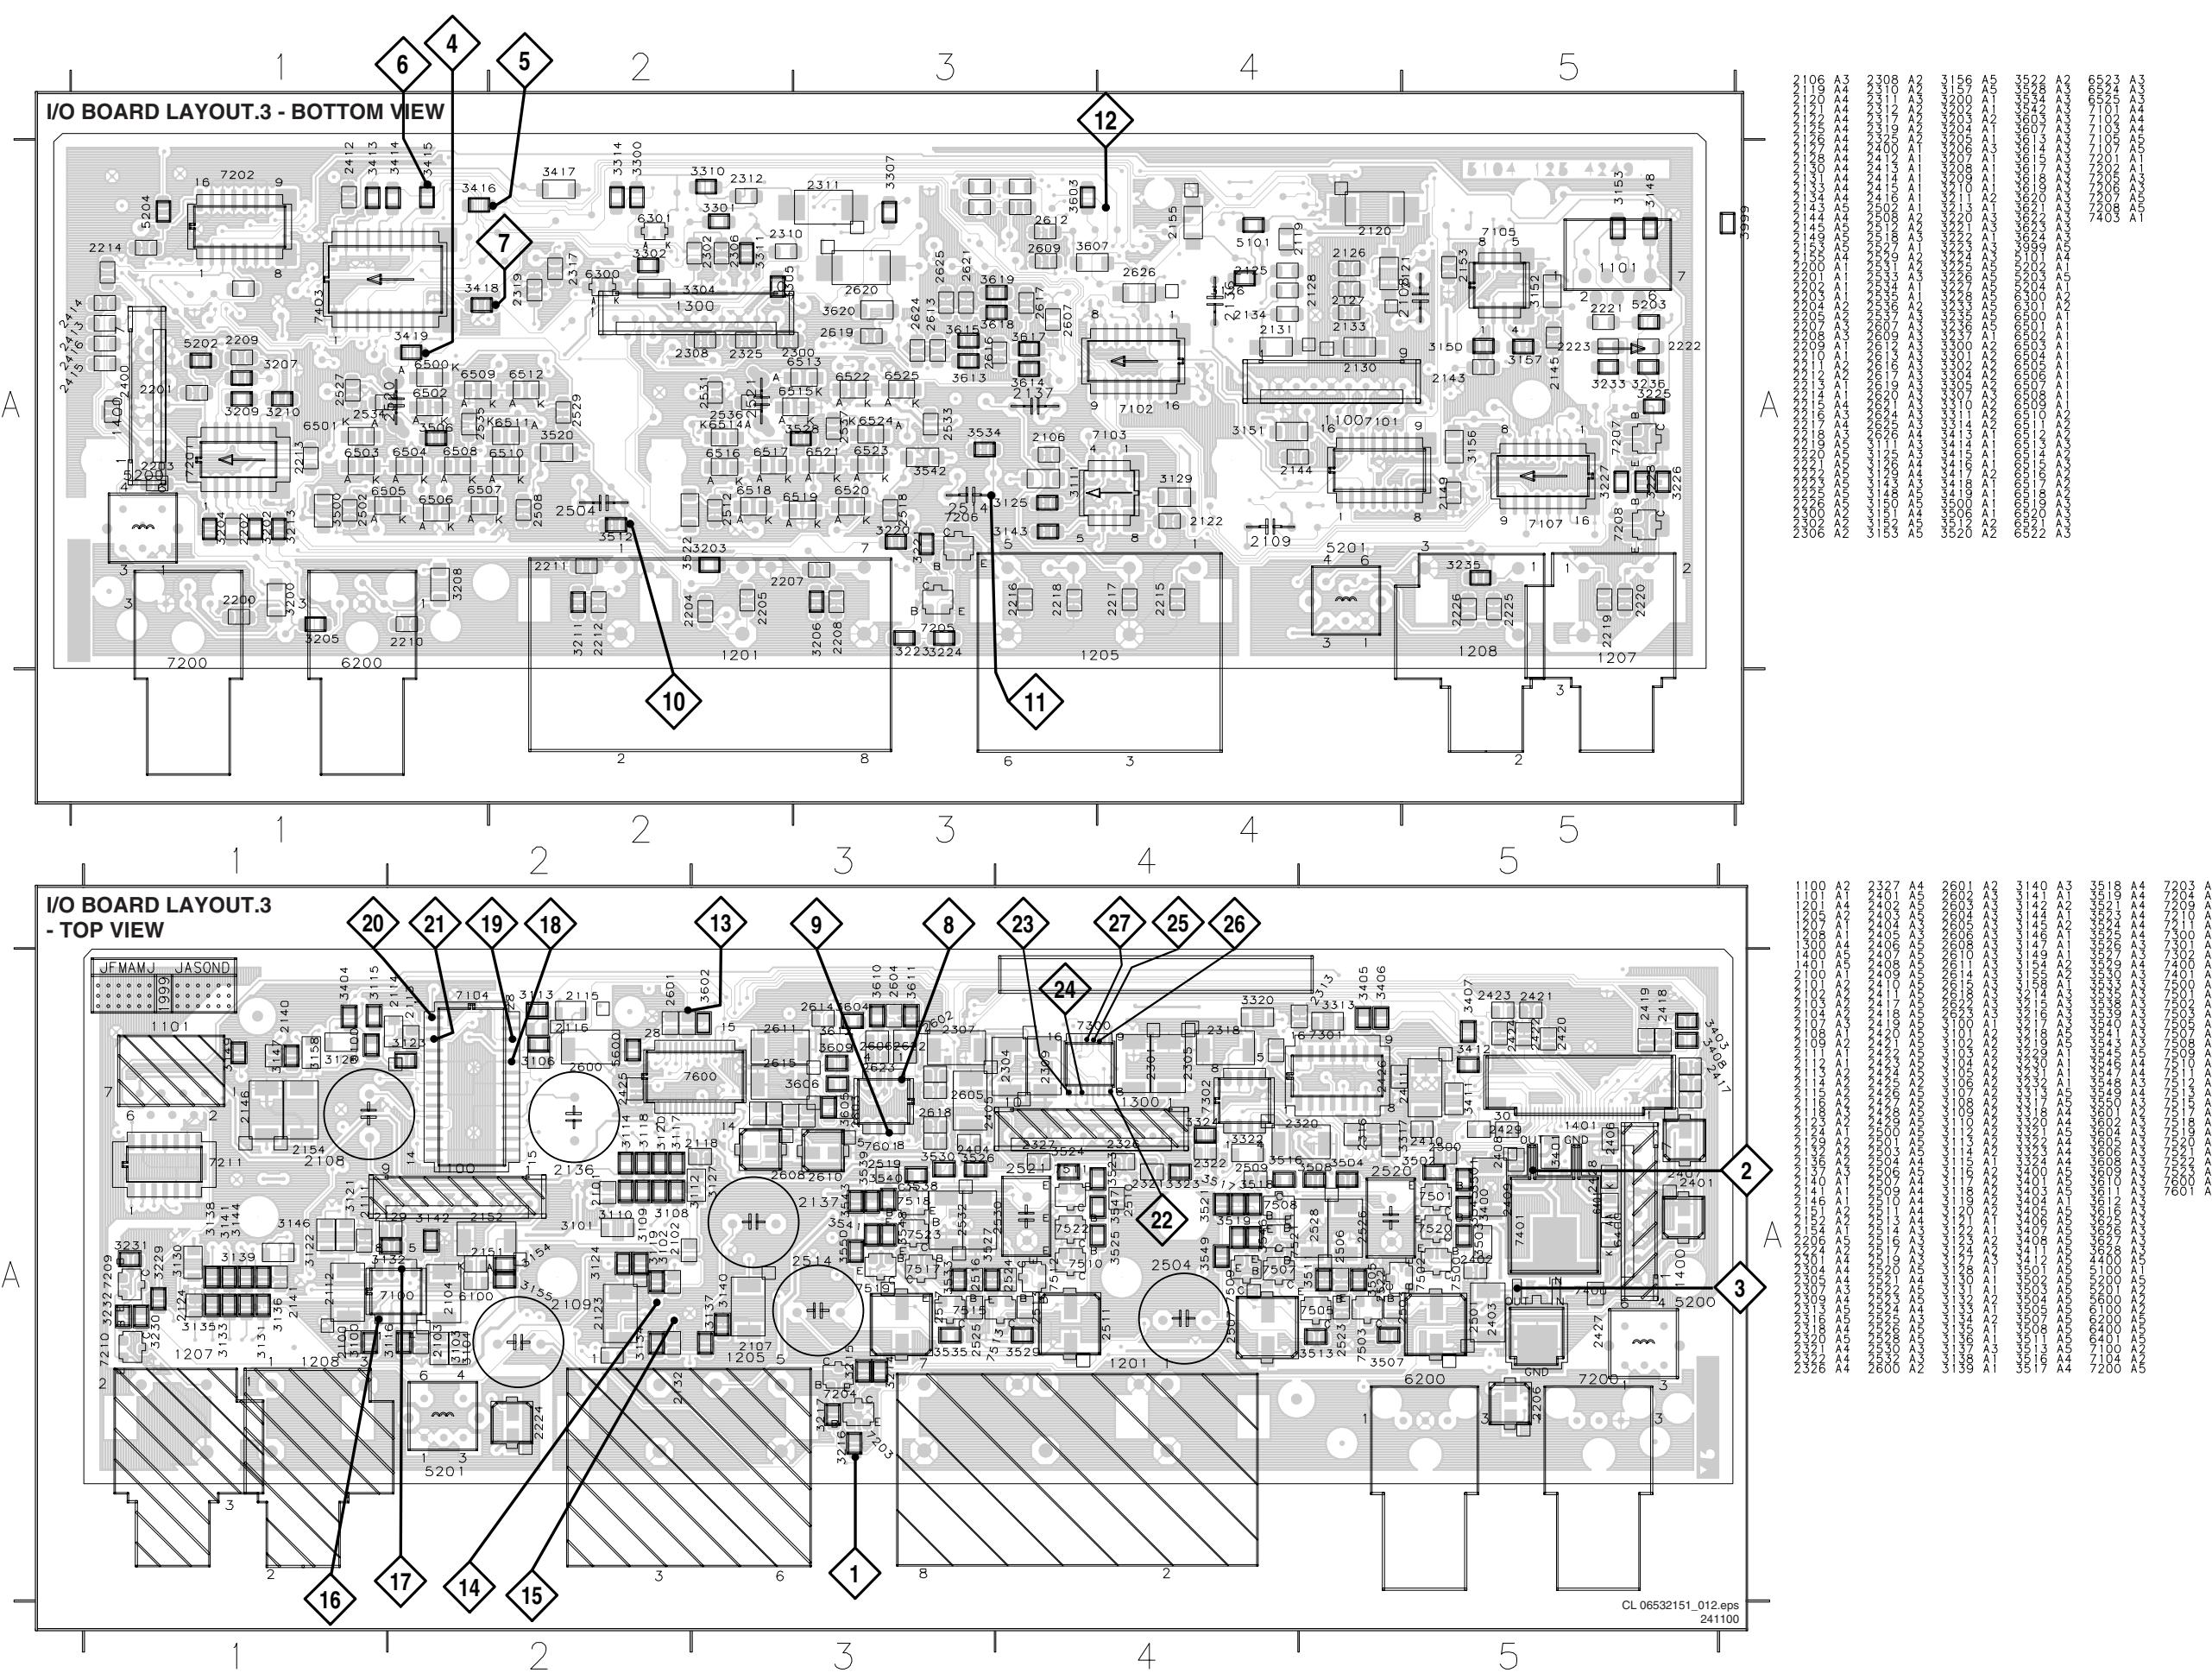


PSU CDR3-ECU

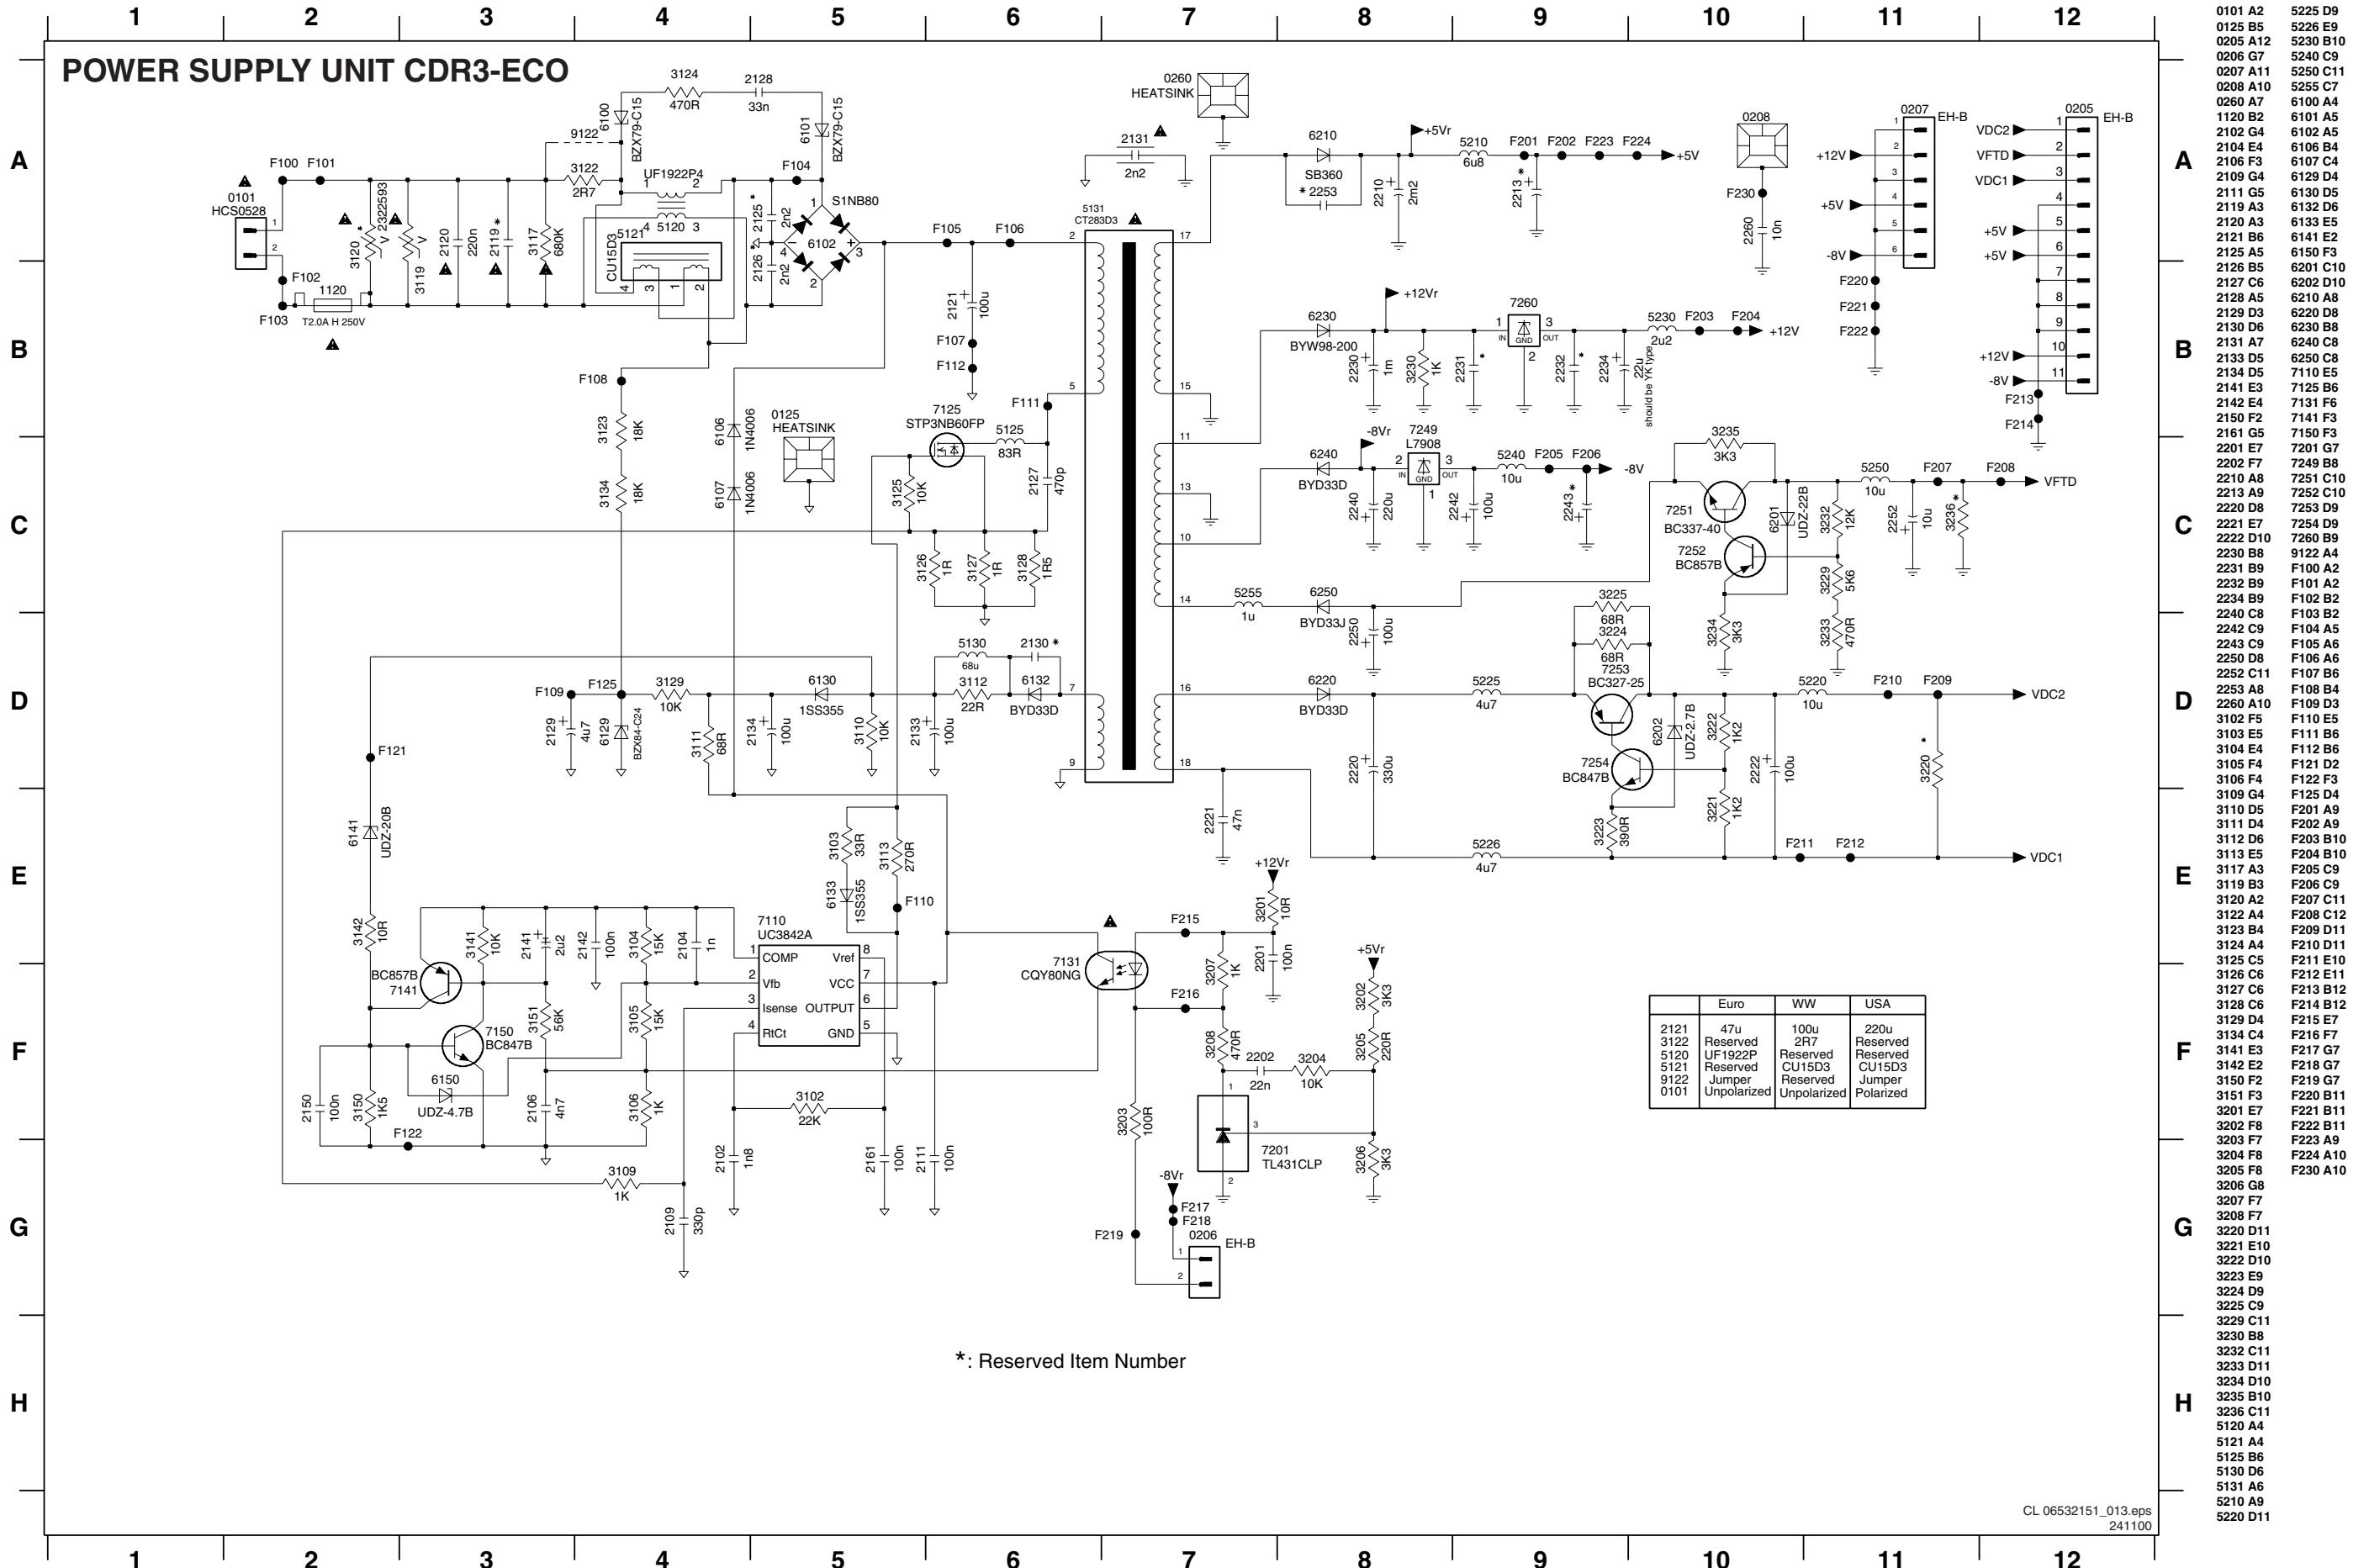

## Layout PSU CDR3-ECO

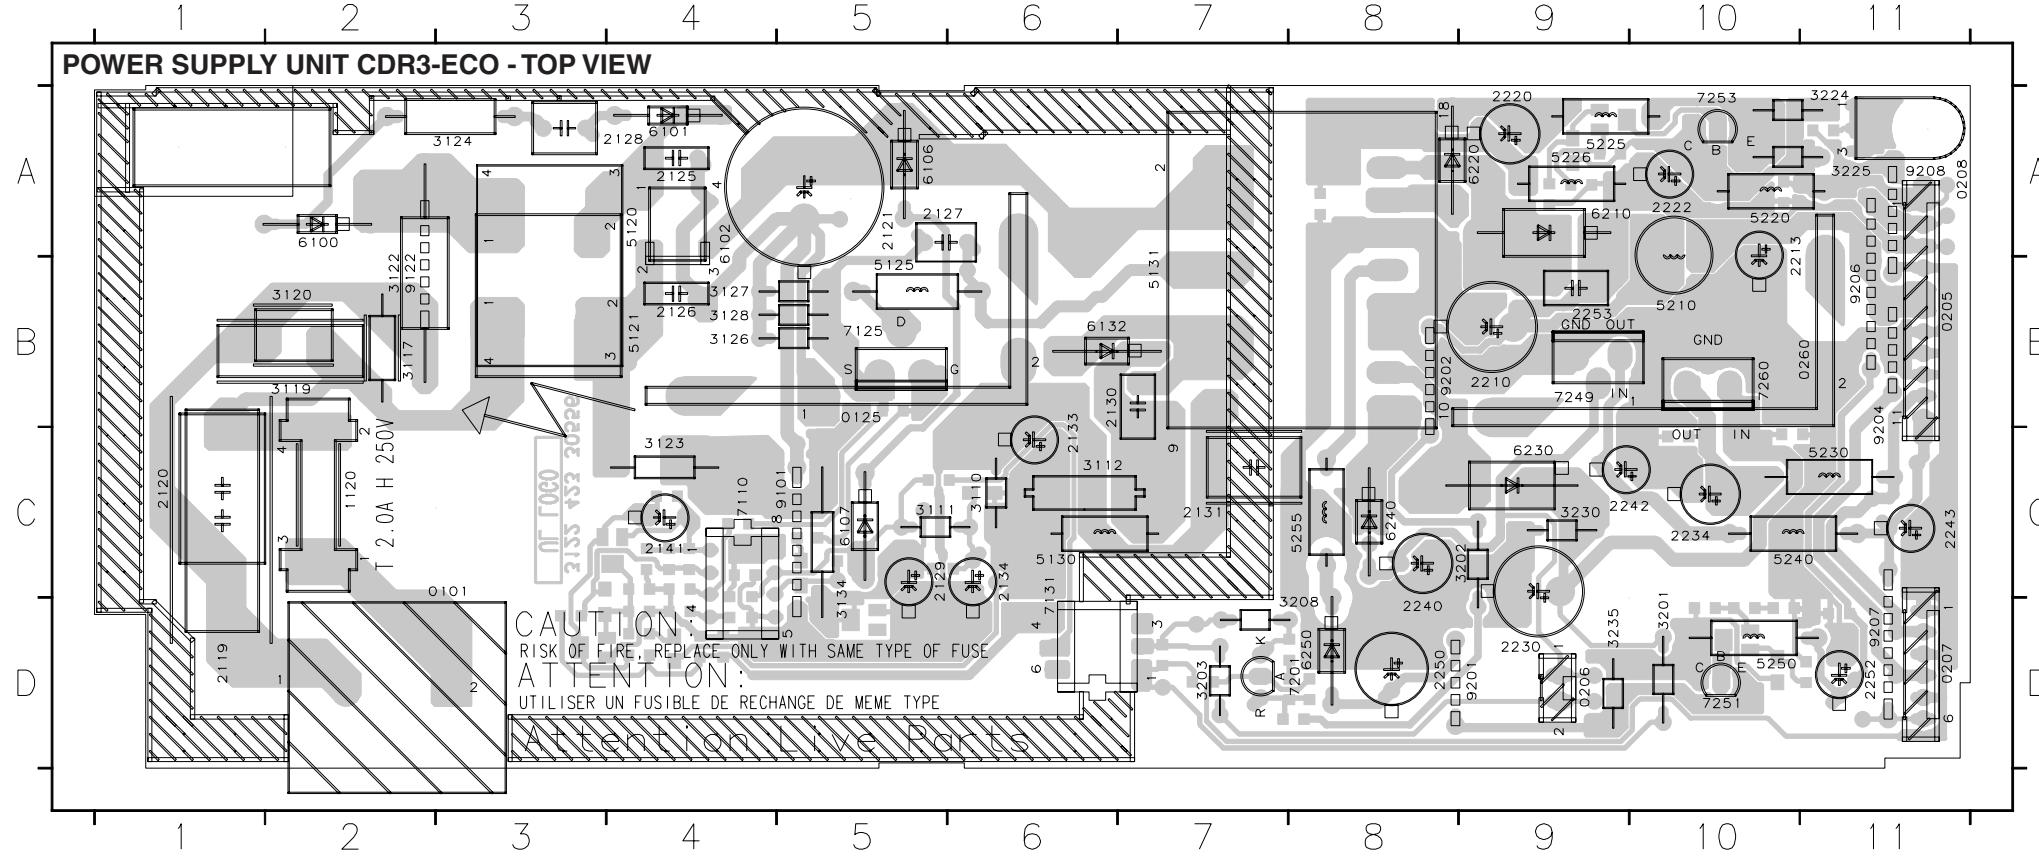


2102	A4	2111	A4	2201	A7	2232	B10	3104	B4	3113	B5	3142	A4	3205	A8	3221	D9	3232	A10	4101	B5	6141	A4	7141	B4
2104	B4	2142	B4	2202	A8	2260	D11	3105	A3	3125	C5	3150	B4	3206	A8	3222	D9	3233	A10	6129	A5	6150	A3	7150	A3
2106	A4	2150	A4	2221	D8	3102	A4	3106	A4	3129	B5	3151	A4	3207	A7	3223	D9	3234	A11	6130	B6	6201	A10	7252	A10
2109	B4	2161	B4	2231	B10	3103	B5	3109	B4	3141	B4	3204	A8	3220	D10	3229	A10	3236	A11	6133	B5	6202	D9	7254	D9

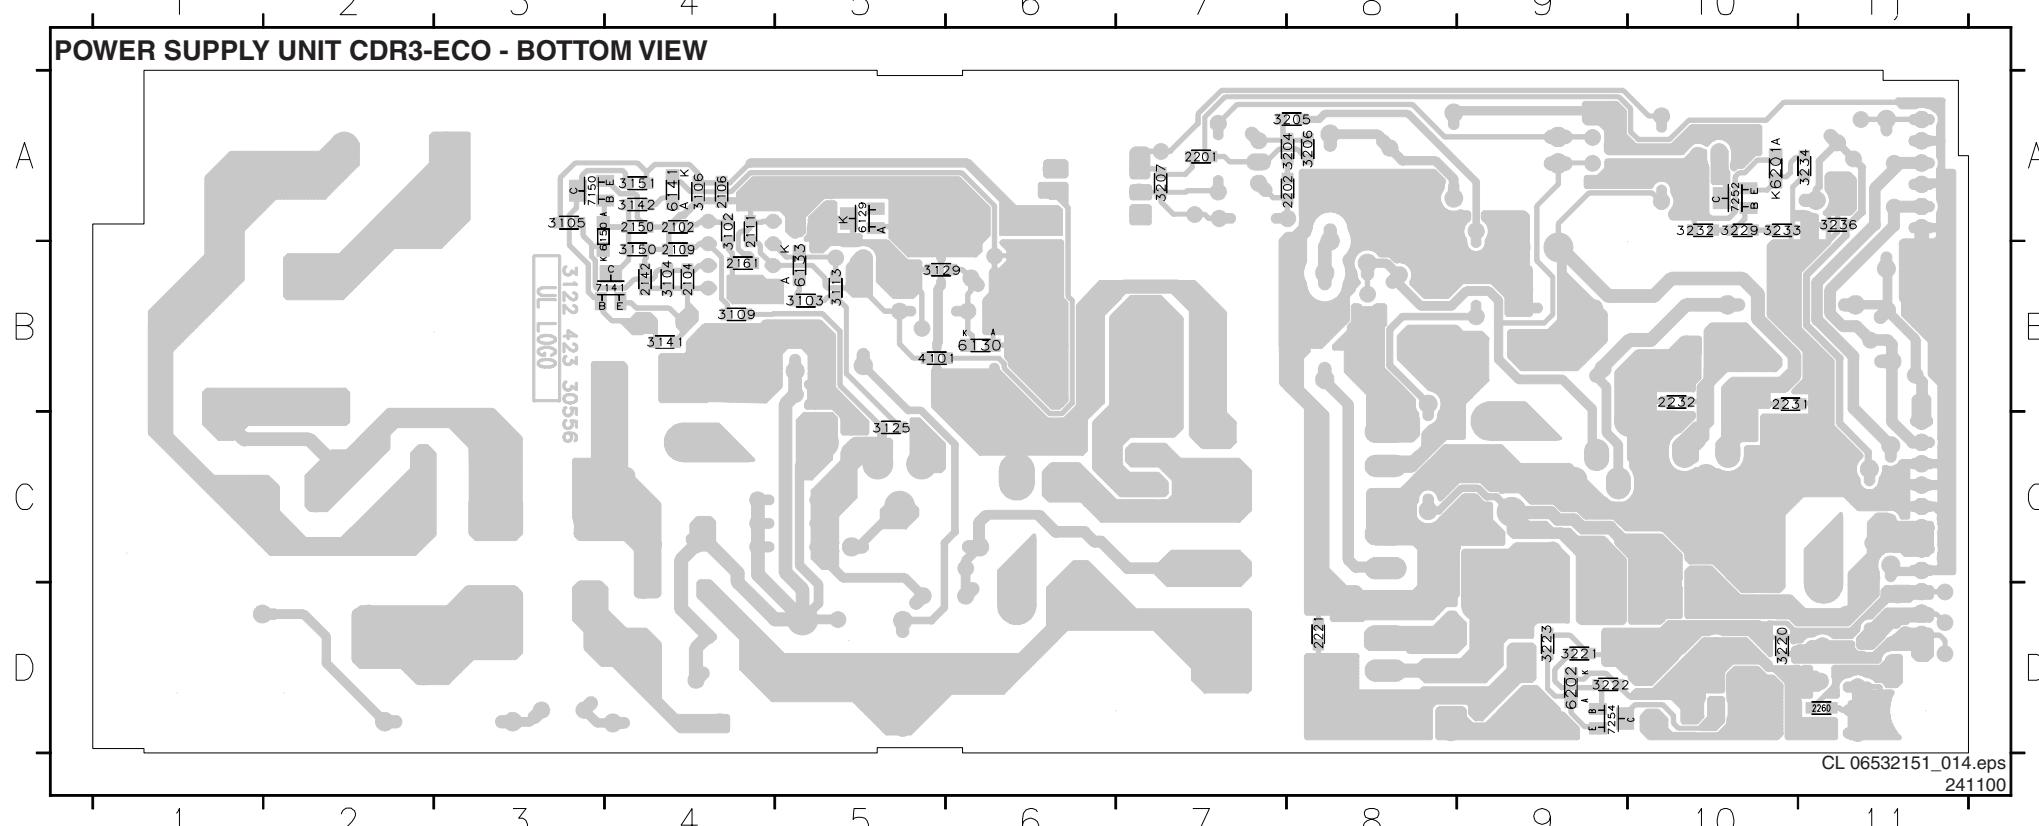


## CD main board: Decoder &amp; servo processor part

1000-1 C1	1000-7 H1	1020 G10	2130 B6	2139 B11	2148 C1	2159 D1	2169 F8	2183 F3	2232 H13	3164 B15	3178 C8	3187 D2	3196 E6	3205 E7	3219-C G13	3269 H14	3282 G11	7006 D3	7130 H15	F151 C13	F164 D7	F174 E7	F190 H14	F309 C9	F321 G12
1000-10 G1	1000-9 H1	1021 G10	2131 B12	2140 C4	2149 C6	2160 D6	2170 F8	2184 G9	2233 H13	3168 B12	3179 C1	3188 D5	3197 E8	3206 E9	3219-D G13	3270 H15	3283 G12	7007 E7	7131 H14	F154 C1	F165 D13	F175 E7	F191 H11	F310 C9	F322 G12
1000-11 G1	1000-9 H1	1022 G11	2132 B11	2141 C6	2150 C9	2161 D6	2171 F9	2185 G9	2236 F6	3169 B5	3180 C5	3189 D7	3198 E2	3208 F1	3220 G11	3272 B11	3284 D13	7008 E2	7132 H13	F155 C2	F166 E7	F177 F1	F192 H14	F311 D13	F324 G10
1000-12 D1	1003 F7	1023 G11	2133 B11	2142 C9	2151 D3	2162 E4	2172 F9	2186 G10	2238 F14	3171 B13	3181 C9	3190 E3	3191 F6	3201 H10	3221 B12	3274 B12	3285 H13	7009 D5	7133 A2	F156 C8	F167 E14	F178 F1	F193 H14	F312 D9	
1000-2 E1	1004 G9	1028 B2	2133 B11	2142 C9	2152 D3	2163 E1	2173 F9	2189 G9	2285 G10	3172 B11	3182 D2	3191 D4	3200 E8	3212 F9	3229 H9	3275 B12	3286 H13	7010 E6	7139 A12	F157 C3	F168 E14	F179 F1	F190 G11	F313 D7	
1000-3 B1	1009 C15	1029 B3	2134 B1	2143 C4	2154 D9	2164 E4	2174 F1	2191 H9	2286 G11	3173 B4	3183 D2	3192 D4	3201 E2	3213 F3	3265 H15	3276 B11	3287 H13	7011 E2	7143 A13	F159 C9	F170 E1	F181 F13	F182 G13	F304 B11	F314 D9
1000-4 E1	1010 C15	1050-1 G1	2135 B1	2145 C9	2155 D9	2166 E3	2175 F2	2200 H4	3160 A9	3174 B4	3184 D8	3193 D7	3202 E2	3214 F14	3266 H14	3279 B2	6003 H14	7023 B5	7146 A2	F160 D1	F171 E1	F182 G13	F305 B11	F315 D13	
1000-5 A1	1011 C15	1050-2 G1	2137 B8	2146 C6	2156 D2	2167 E14	2178 G10	2201 H4	3161 B12	3176 C14	3185 D14	3194 D8	3203 E5	3219-A G13	3267 H13	3280 F13	7000 C9	7024 F6	7147 B1	F162 D7	F172 E14	F183 G12	F306 B12	F318 G12	
1000-6 H1	1012 C15	2128 B12	2138 B8	2147 C1	2157 D8	2168 F8	2182 F3	2230 H14	3162 B11	3177 C2	3186 D14	3195 E8	3204 E8	3219-B G13	3268 H14	3281 F6	7005-B B14	7025 B7	7149 B13	F163 D14	F173 E1	F184 G11	F308 B11	F319 G9	

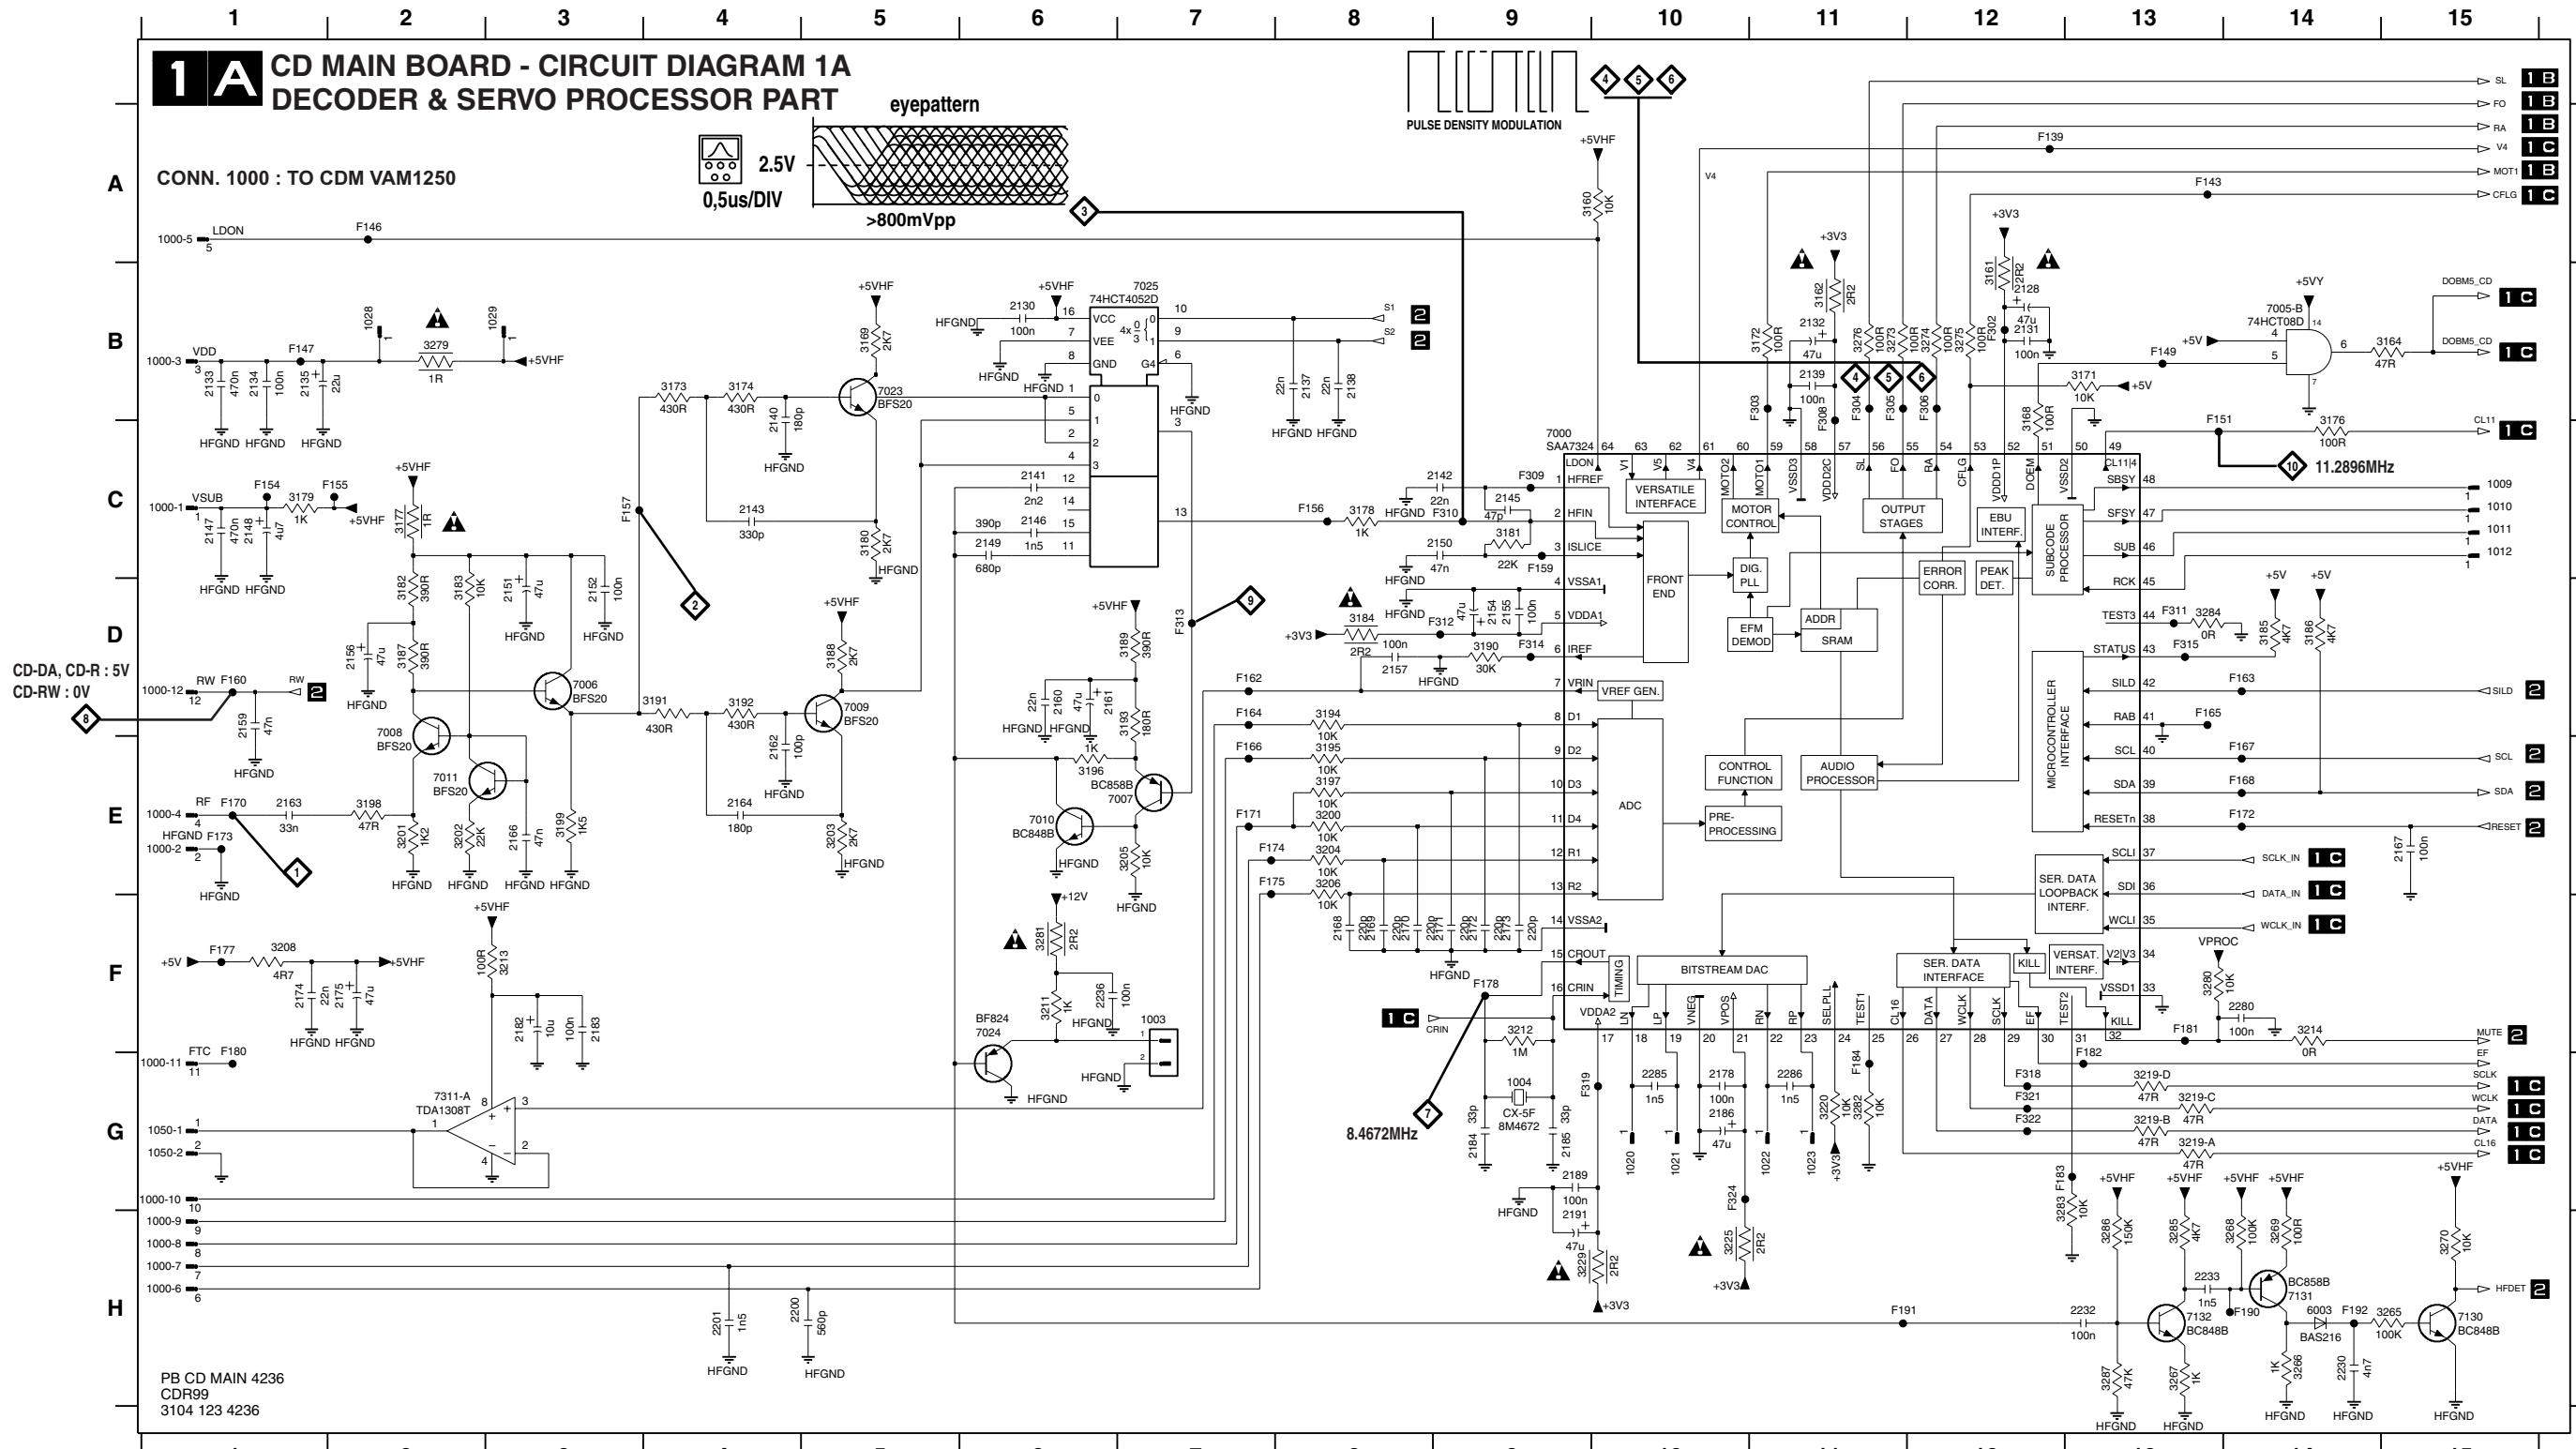
1A CD MAIN BOARD - CIRCUIT DIAGRAM 1A  
DECODER & SERVO PROCESSOR PART

## CD main board: Servo drivers part

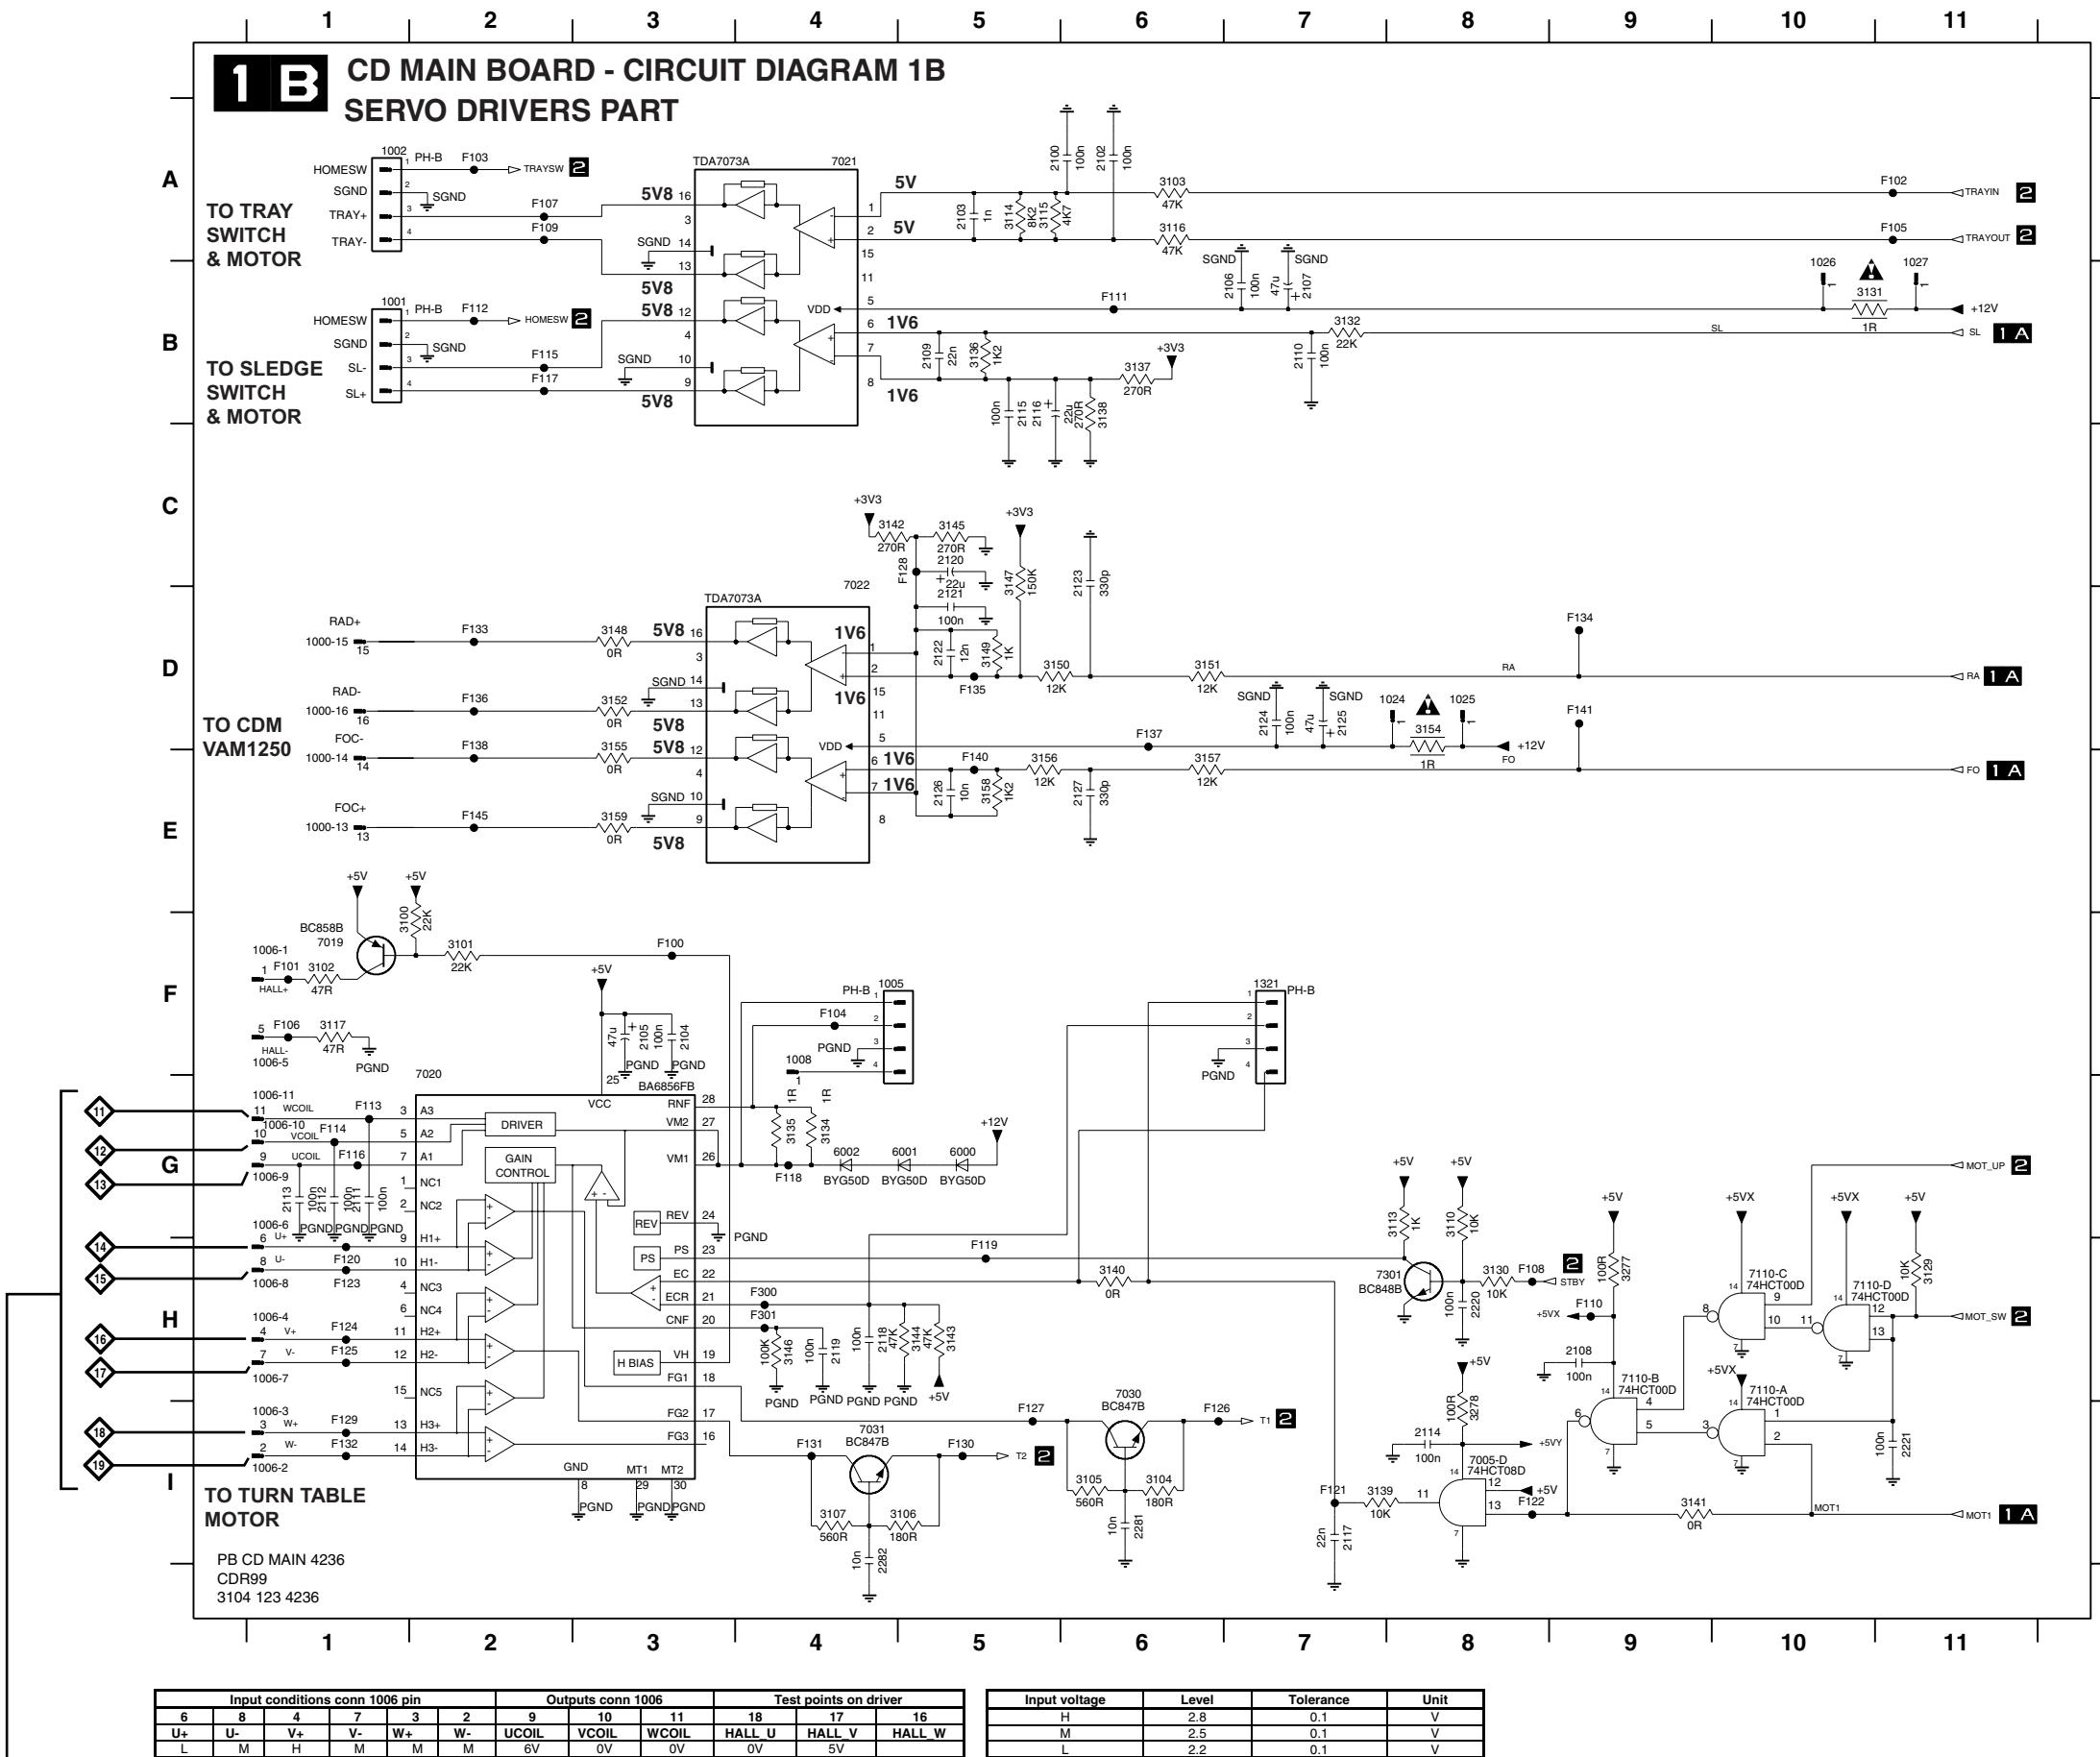


1000-13 E1	F100 F3
1000-14 E1	F101 F1
1000-15 D1	F102 A11
1000-16 D1	F103 A2
1001 B1	F104 F4
1002 A1	F105 A11
1005 F5	F106 F1
1006-1 F1	F107 A2
1006-10 G1	F108 H8
1006-11 G1	F109 A2
1006-2 II	F110 H9
1006-3 II	F111 B6
1006-4 H1	F112 B2
1006-5 F1	F113 G1
1006-6 G1	F114 G1
1006-7 H1	F115 B2
1006-8 H1	F116 G1
1006-9 G1	F117 B2
1008 F4	F118 H5
1024 D8	F120 H5
1025 D8	F121 H7
1026 D8	F122 H8
1027 B10	F123 H1
1321 F7	F124 H1
2100 A5	F125 H1
2102 A6	F126 H6
2103 A5	F127 I5
2104 F3	F128 C5
2105 F3	F129 I1
2106 B7	F130 I5
2108 H9	F131 I4
2109 B5	F132 I1
2110 B7	F133 D2
2111 G1	F134 D9
2112 G1	F135 D5
2113 G1	F136 D2
2114 I8	F137 D6
2115 B5	F138 D2
2116 B5	F140 E5
2117 I7	F141 D9
2118 H4	F145 E2
2119 H4	F300 H4
2120 C5	F301 H4
2121 D5	
2122 D5	
2123 C6	
2124 D7	
2125 D7	
2126 E5	
2127 E6	
2220 H8	
2221 I11	
2226 I6	
2228 I4	
3100 F1	
3102 F1	
3103 A6	
3104 I6	
3105 I6	
3106 I5	
3107 I4	
3110 G8	
3113 G8	
3114 A5	
3115 A5	
3116 A6	
3117 F1	
3129 H11	
3130 H8	
3131 B10	
3132 B7	
3134 G4	
3135 G4	
3136 B5	
3137 B6	
3138 B6	
3139 I7	
3140 H6	
3141 I9	
3142 C4	
3143 H5	
3144 H5	
3145 C5	
3146 H4	
3147 C5	
3148 D3	
3149 D3	
3150 D5	
3151 D6	
3152 D3	
3153 D8	
3154 E5	
3155 E5	
3156 E5	
3157 E5	
3158 E5	
3159 E5	
3160 F1	
3161 F1	
3162 F1	
3163 F1	
3164 F1	
3165 F1	
3166 F1	
3167 F1	
3168 F1	
3169 F1	
3170 F1	
3171 F1	
3172 F1	
3173 F1	
3174 F1	
3175 F1	
3176 F1	
3177 F1	
3178 F1	
3179 F1	
3180 F1	
3181 F1	
3182 F1	
3183 F1	
3184 F1	
3185 F1	
3186 F1	
3187 F1	
3188 F1	
3189 F1	
3190 F1	
3191 F1	
3192 F1	
3193 F1	
3194 F1	
3195 F1	
3196 F1	
3197 F1	
3198 F1	
3199 F1	
3200 F1	
3201 F1	
3202 F1	
3203 F1	
3204 F1	
3205 F1	
3206 F1	
3207 F1	
3208 F1	
3209 F1	
3210 F1	
3211 F1	
3212 F1	
3213 F1	
3214 F1	
3215 F1	
3216 F1	
3217 F1	
3218 F1	
3219 F1	
3220 F1	
3221 F1	
3222 F1	
3223 F1	
3224 F1	
3225 F1	
3226 F1	
3227 F1	
3228 F1	
3229 F1	
3230 F1	
3231 F1	
3232 F1	
3233 F1	
3234 F1	
3235 F1	
3236 F1	
3237 F1	
3238 F1	
3239 F1	
3240 F1	
3241 F1	
3242 F1	
3243 F1	
3244 F1	
3245 F1	
3246 F1	
3247 F1	
3248 F1	
3249 F1	
3250 F1	
3251 F1	
3252 F1	
3253 F1	
3254 F1	
3255 F1	
3256 F1	
3257 F1	
3258 F1	
3259 F1	
3260 F1	
3261 F1	
3262 F1	
3263 F1	
3264 F1	
3265 F1	
3266 F1	
3267 F1	
3268 F1	
3269 F1	
3270 F1	
3271 F1	
3272 F1	
3273 F1	
3274 F1	
3275 F1	
3276 F1	
3277 F1	
3278 F1	
3279 F1	
3280 F1	
3281 F1	
3282 F1	
3283 F1	
3284 F1	
3285 F1	
3286 F1	
3287 F1	
3288 F1	
3289 F1	
3290 F1	
3291 F1	
3292 F1	
3293 F1	
3294 F1	
3295 F1	
3296 F1	
3297 F1	
3298 F1	
3299 F1	
3300 F1	
3301 F1	
3302 F1	
3303 F1	
3304 F1	
3305 F1	
3306 F1	
3307 F1	
3308 F1	
3309 F1	
3310 F1	
3311 F1	
3312 F1	
3313 F1	
3314 F1	
3315 F1	
3316 F1	
3317 F1	
3318 F1	
3319 F1	
3320 F1	
3321 F1	
3322 F1	
3323 F1	
3324 F1	
3325 F1	
3326 F1	
3327 F1	
3328 F1	
3329 F1	
3330 F1	
3331 F1	
3332 F1	
3333 F1	
3334 F1	
3335 F1	
3336 F1	
3337 F1	
3338 F1	
3339 F1	
3340 F1	
3341 F1	
3342 F1	
3343 F1	
3344 F1	
3345 F1	
3346 F1	
3347 F1	
3348 F1	
3349 F1	
3350 F1	
3351 F1	
3352 F1	
3353 F1	
3354 F1	
3355 F1	
3356 F1	
3357 F1	
3358 F1	
3359 F1	
3360 F1	
3361 F1	
3362 F1	
3363 F1	
3364 F1	
3365 F1	
3366 F1	
3367 F1	
3368 F1	
3369 F1	
3370 F1	
3371 F1	
3372 F1	
3373 F1	
3374 F1	
3375 F1	
3376 F1	
3377 F1	
3378 F1	
3379 F1	
3380 F1	
3381 F1	
3382 F1	
3383 F1	
3384 F1	
3385 F1	
3386 F1	
3387 F1	
3388 F1	
3389 F1	
3390 F1	
3391 F1	
3392 F1	
3393 F1	
3394 F1	
3395 F1	
3396 F1	
3397 F1	
3398 F1	
3399 F1	
3400 F1	
3401 F1	
3402 F1	
3403 F1	
3404 F1	
3405 F1	
3406 F1	
3407 F1	
3408 F1	
3409 F1	
3410 F1	
3411 F1	
3412 F1	
3413 F1	
3414 F1	
3415 F1	
3416 F1	
3417 F1	
3418 F1	
3419 F1	
3420 F1	
3421 F1	
3422 F1	
3423 F1	
3424 F1	
3425 F1</td	


## **CD main board: Audio part**

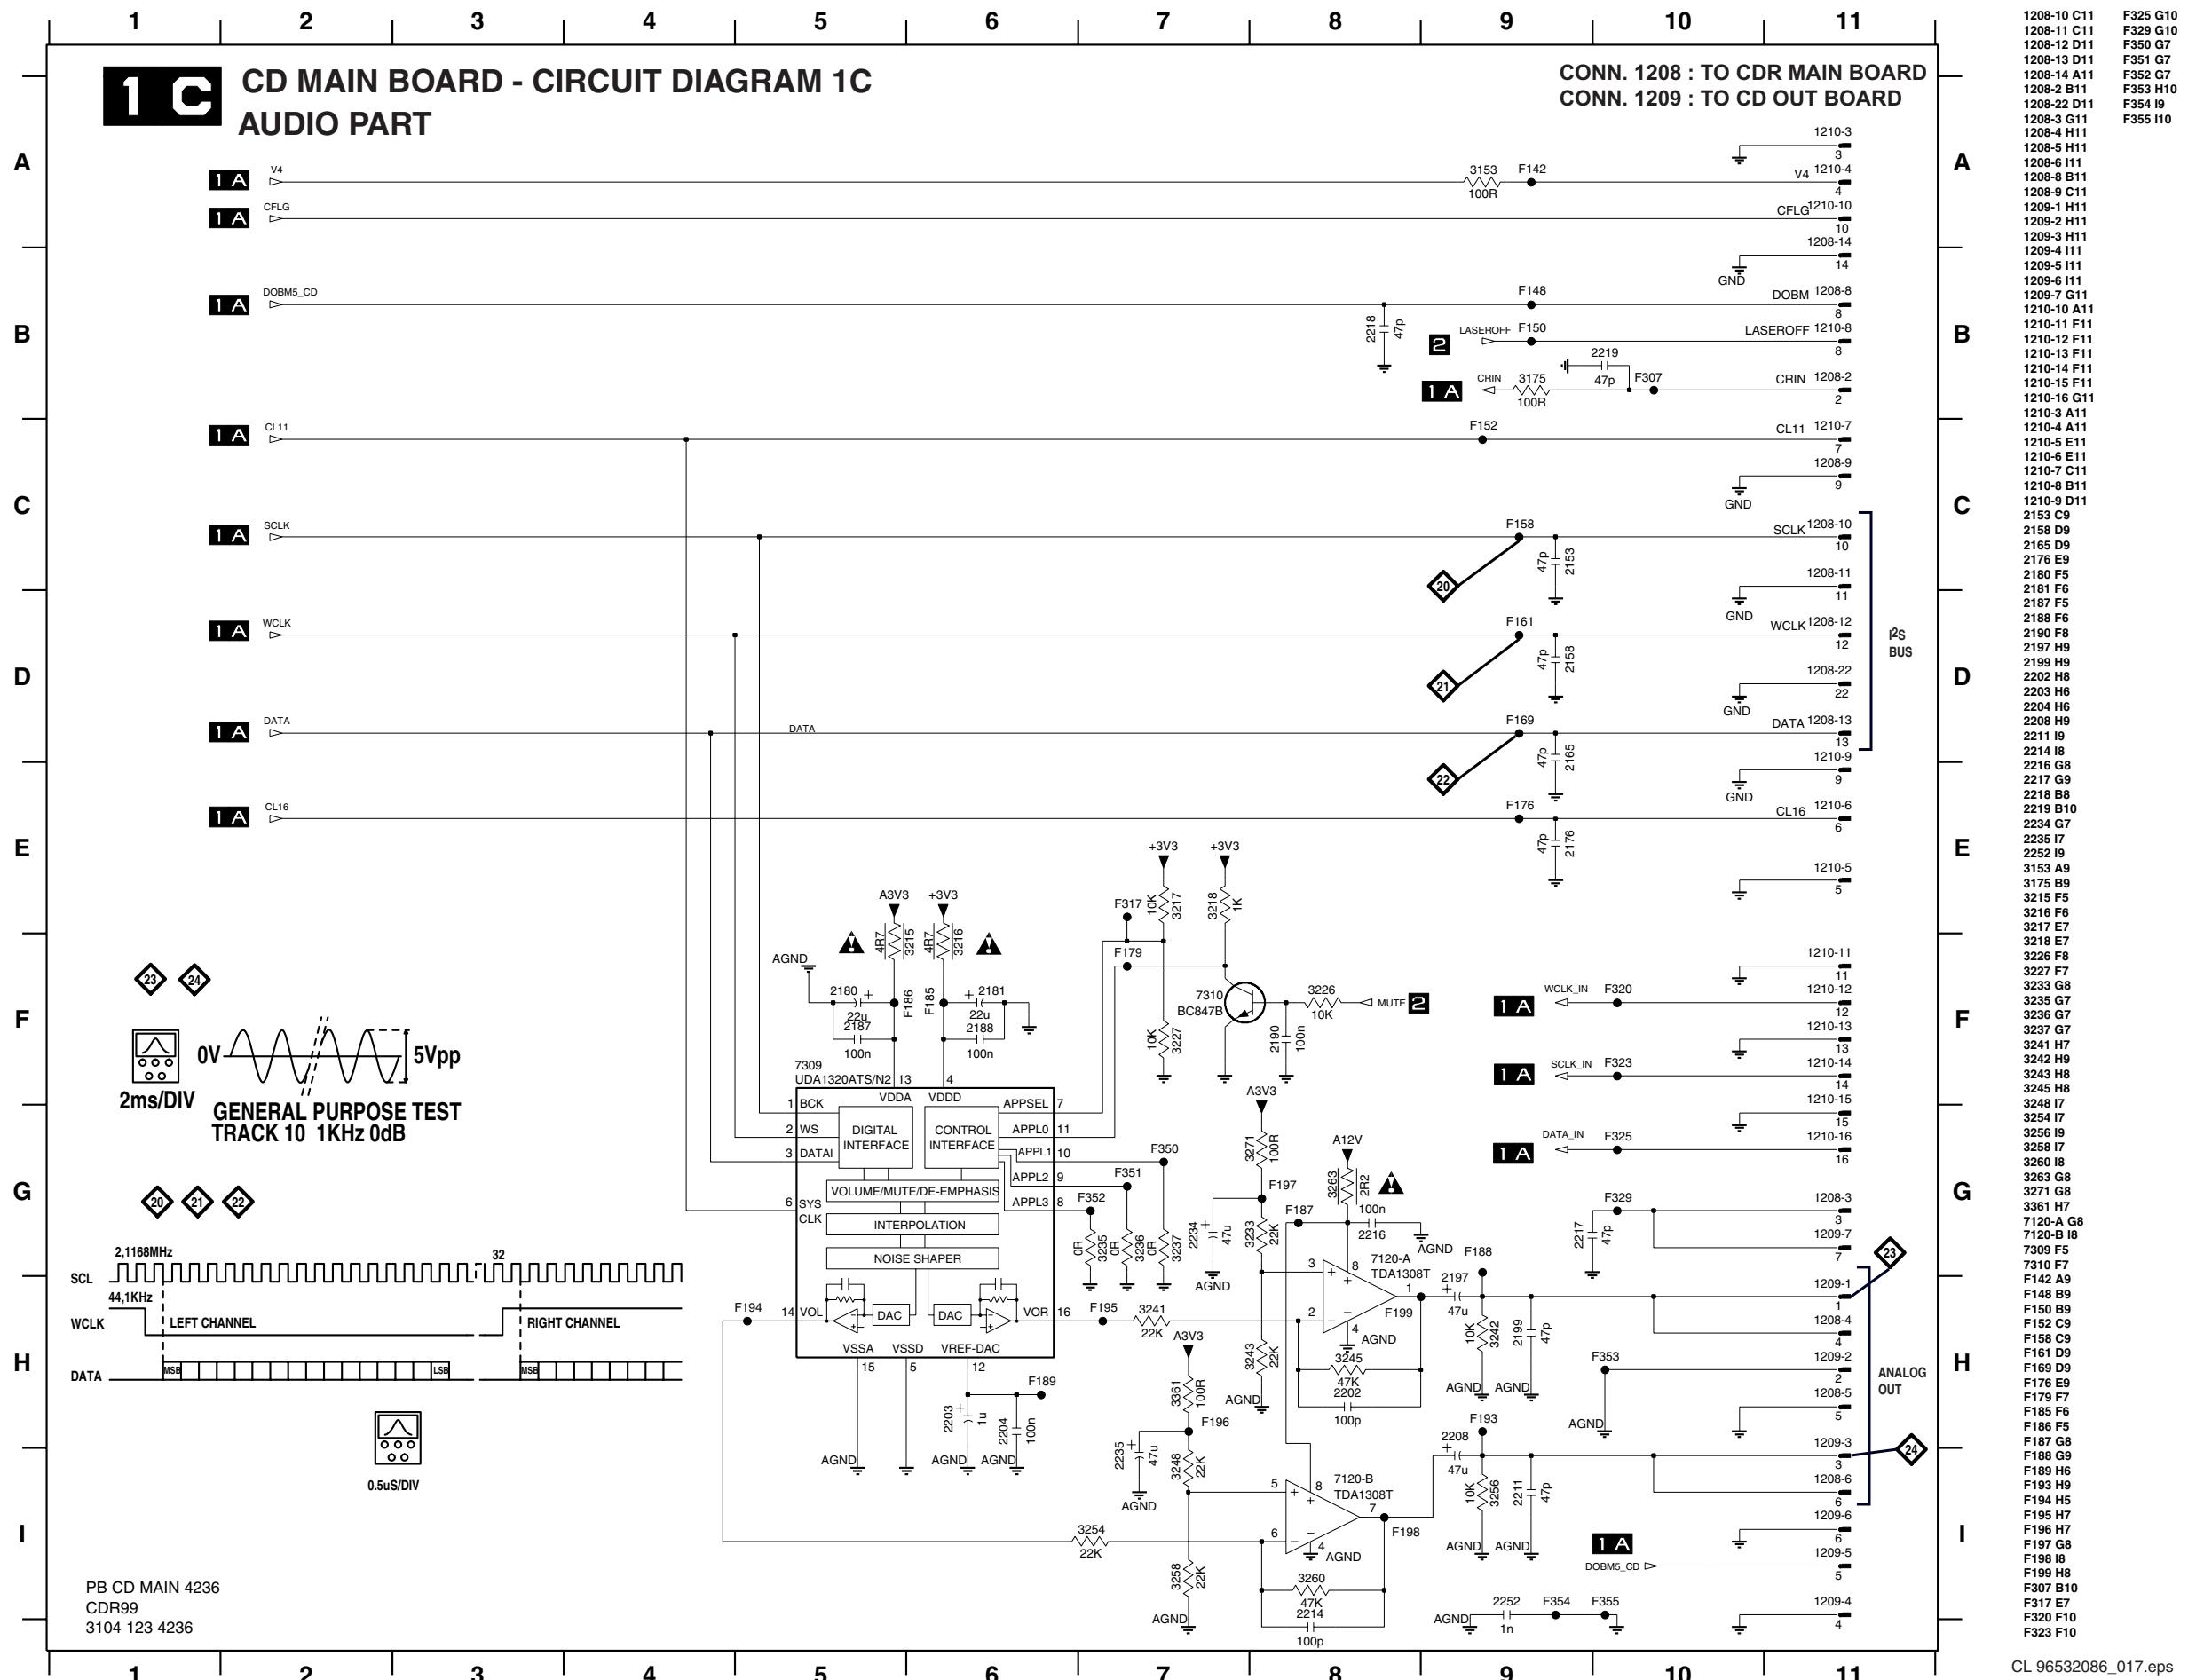


## **CD main board: Microprocessor part**

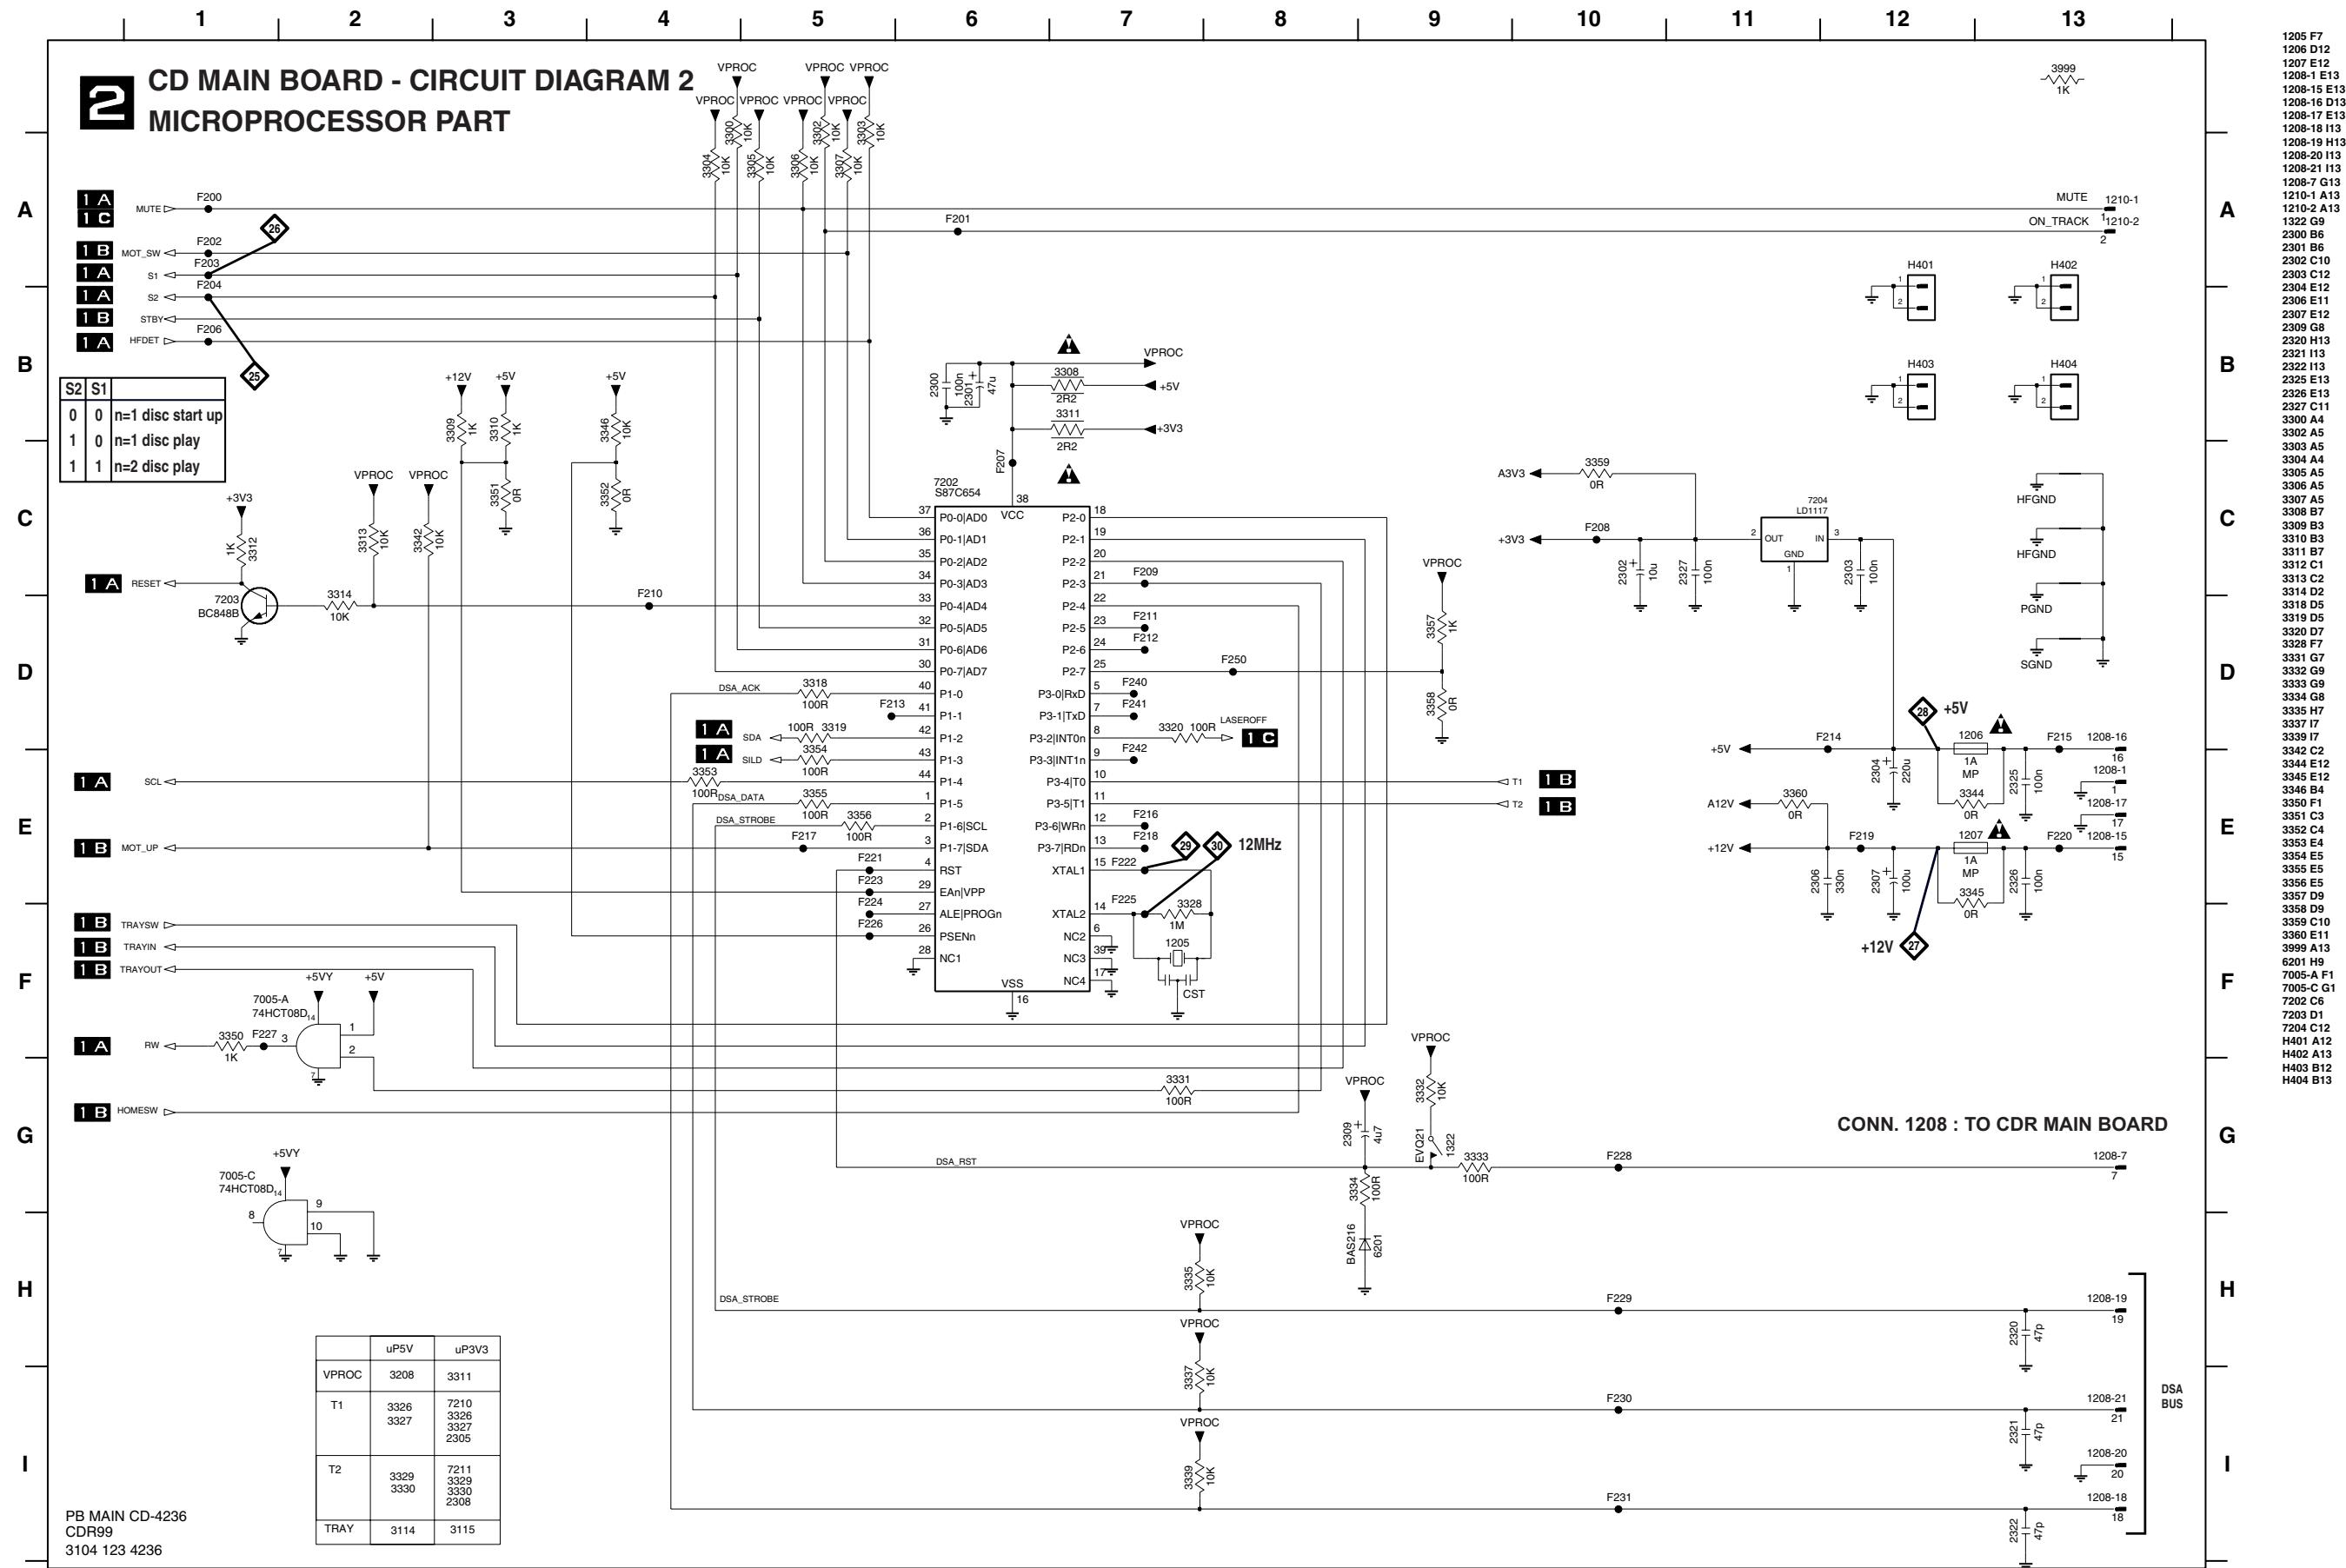

## Layout CD Main board (top view)

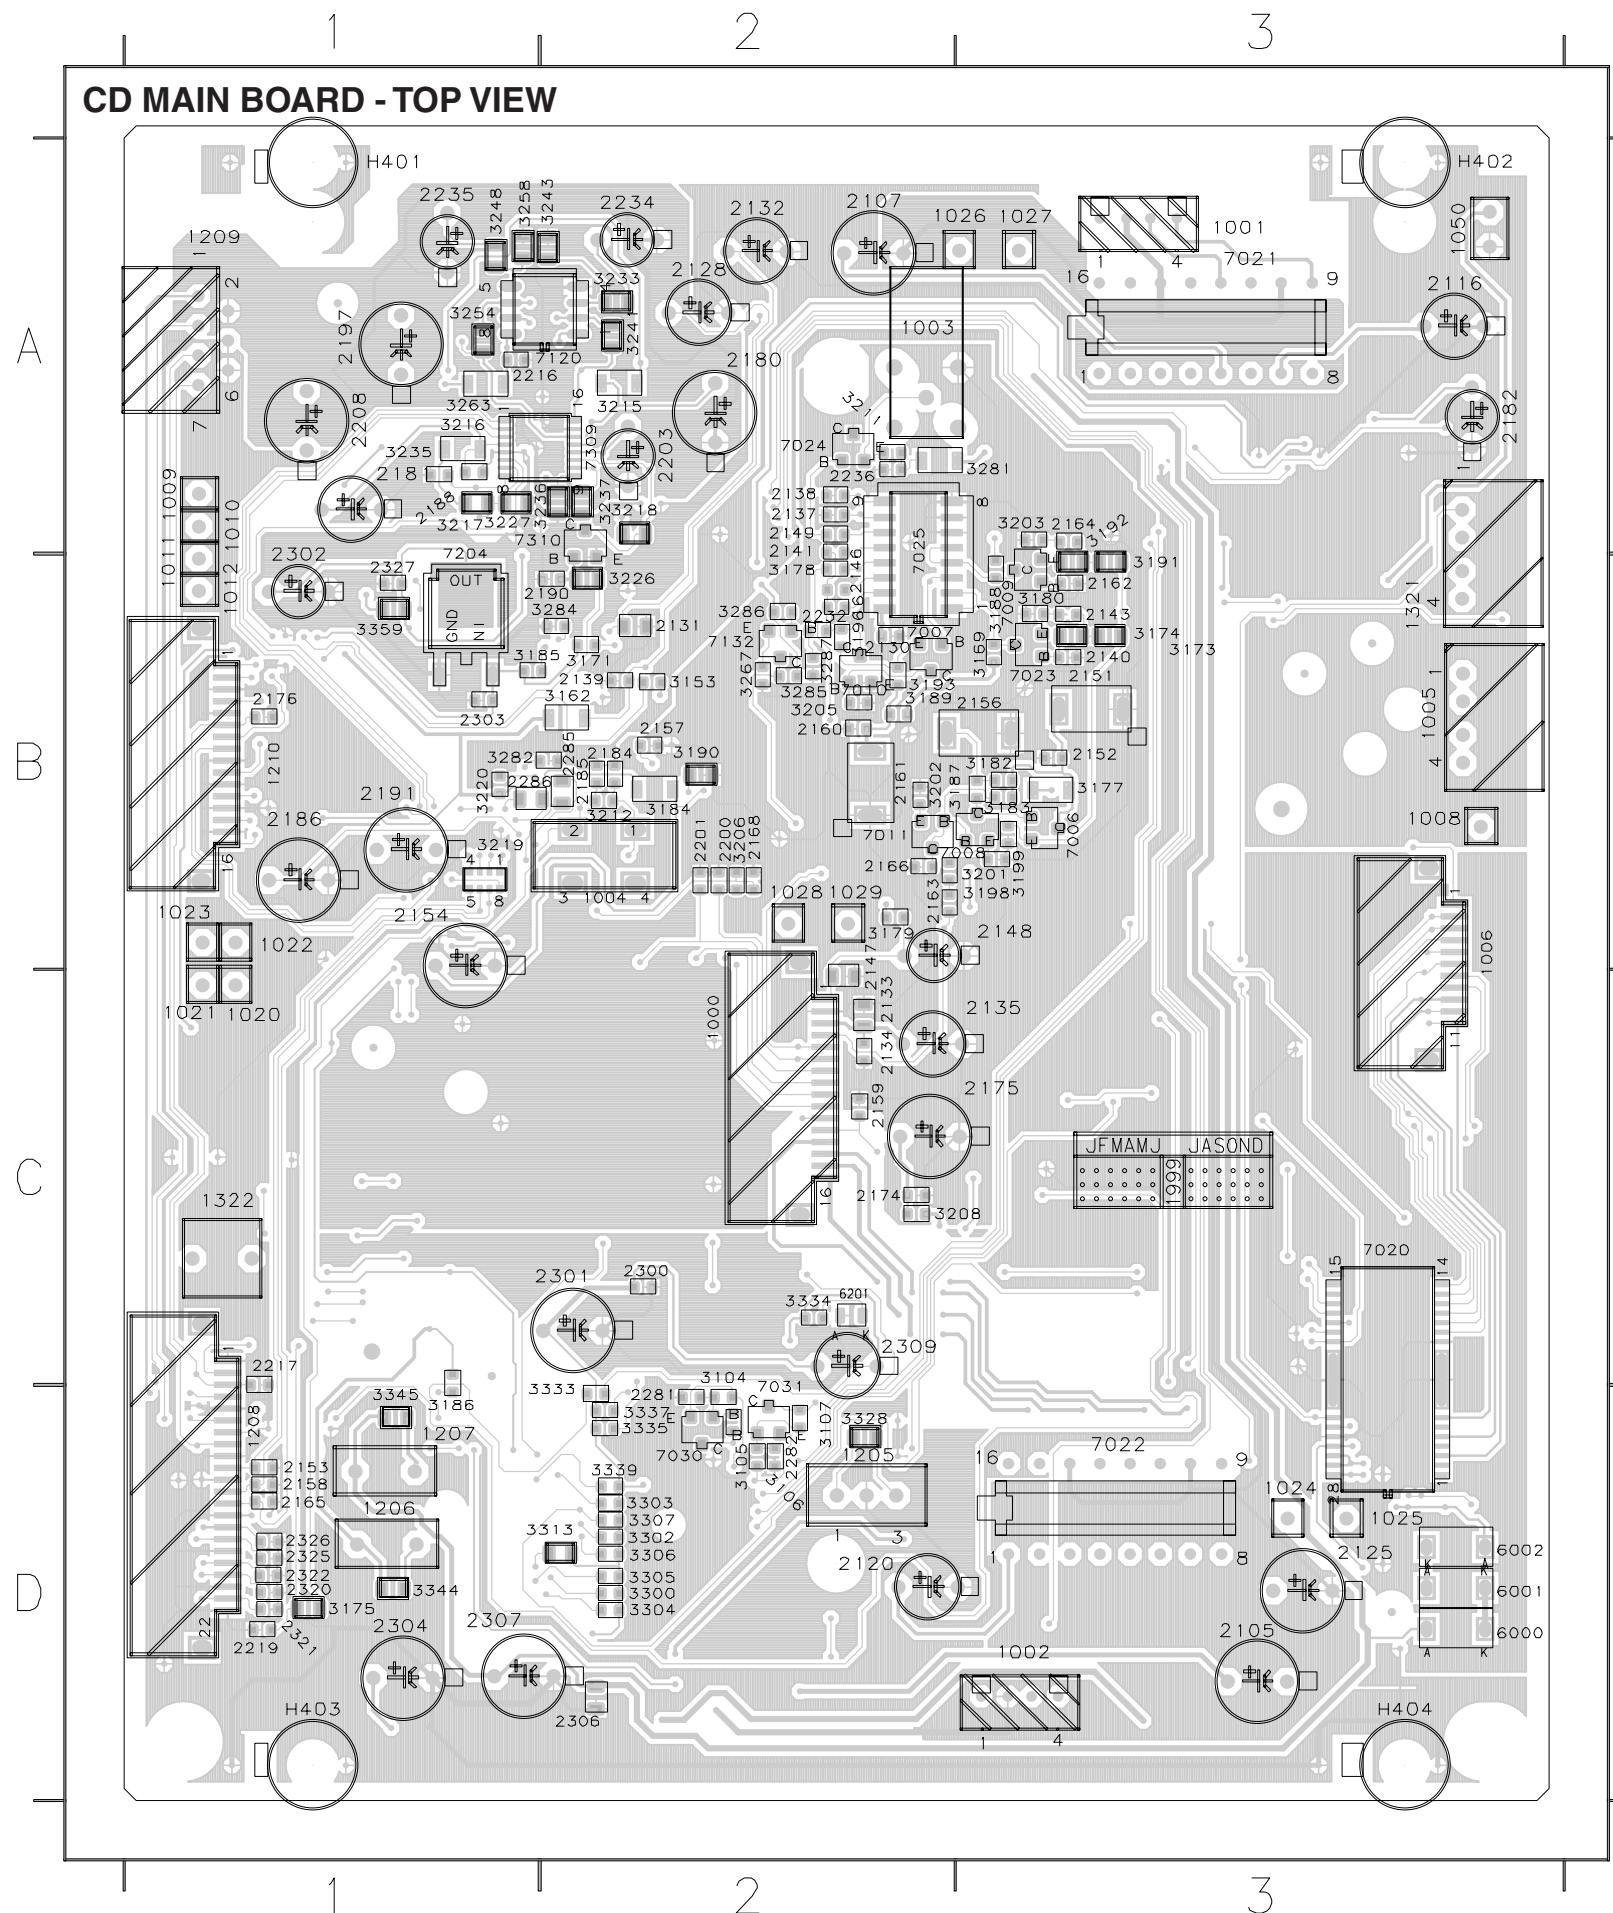

## **Layout CD Main board (bottom view)**

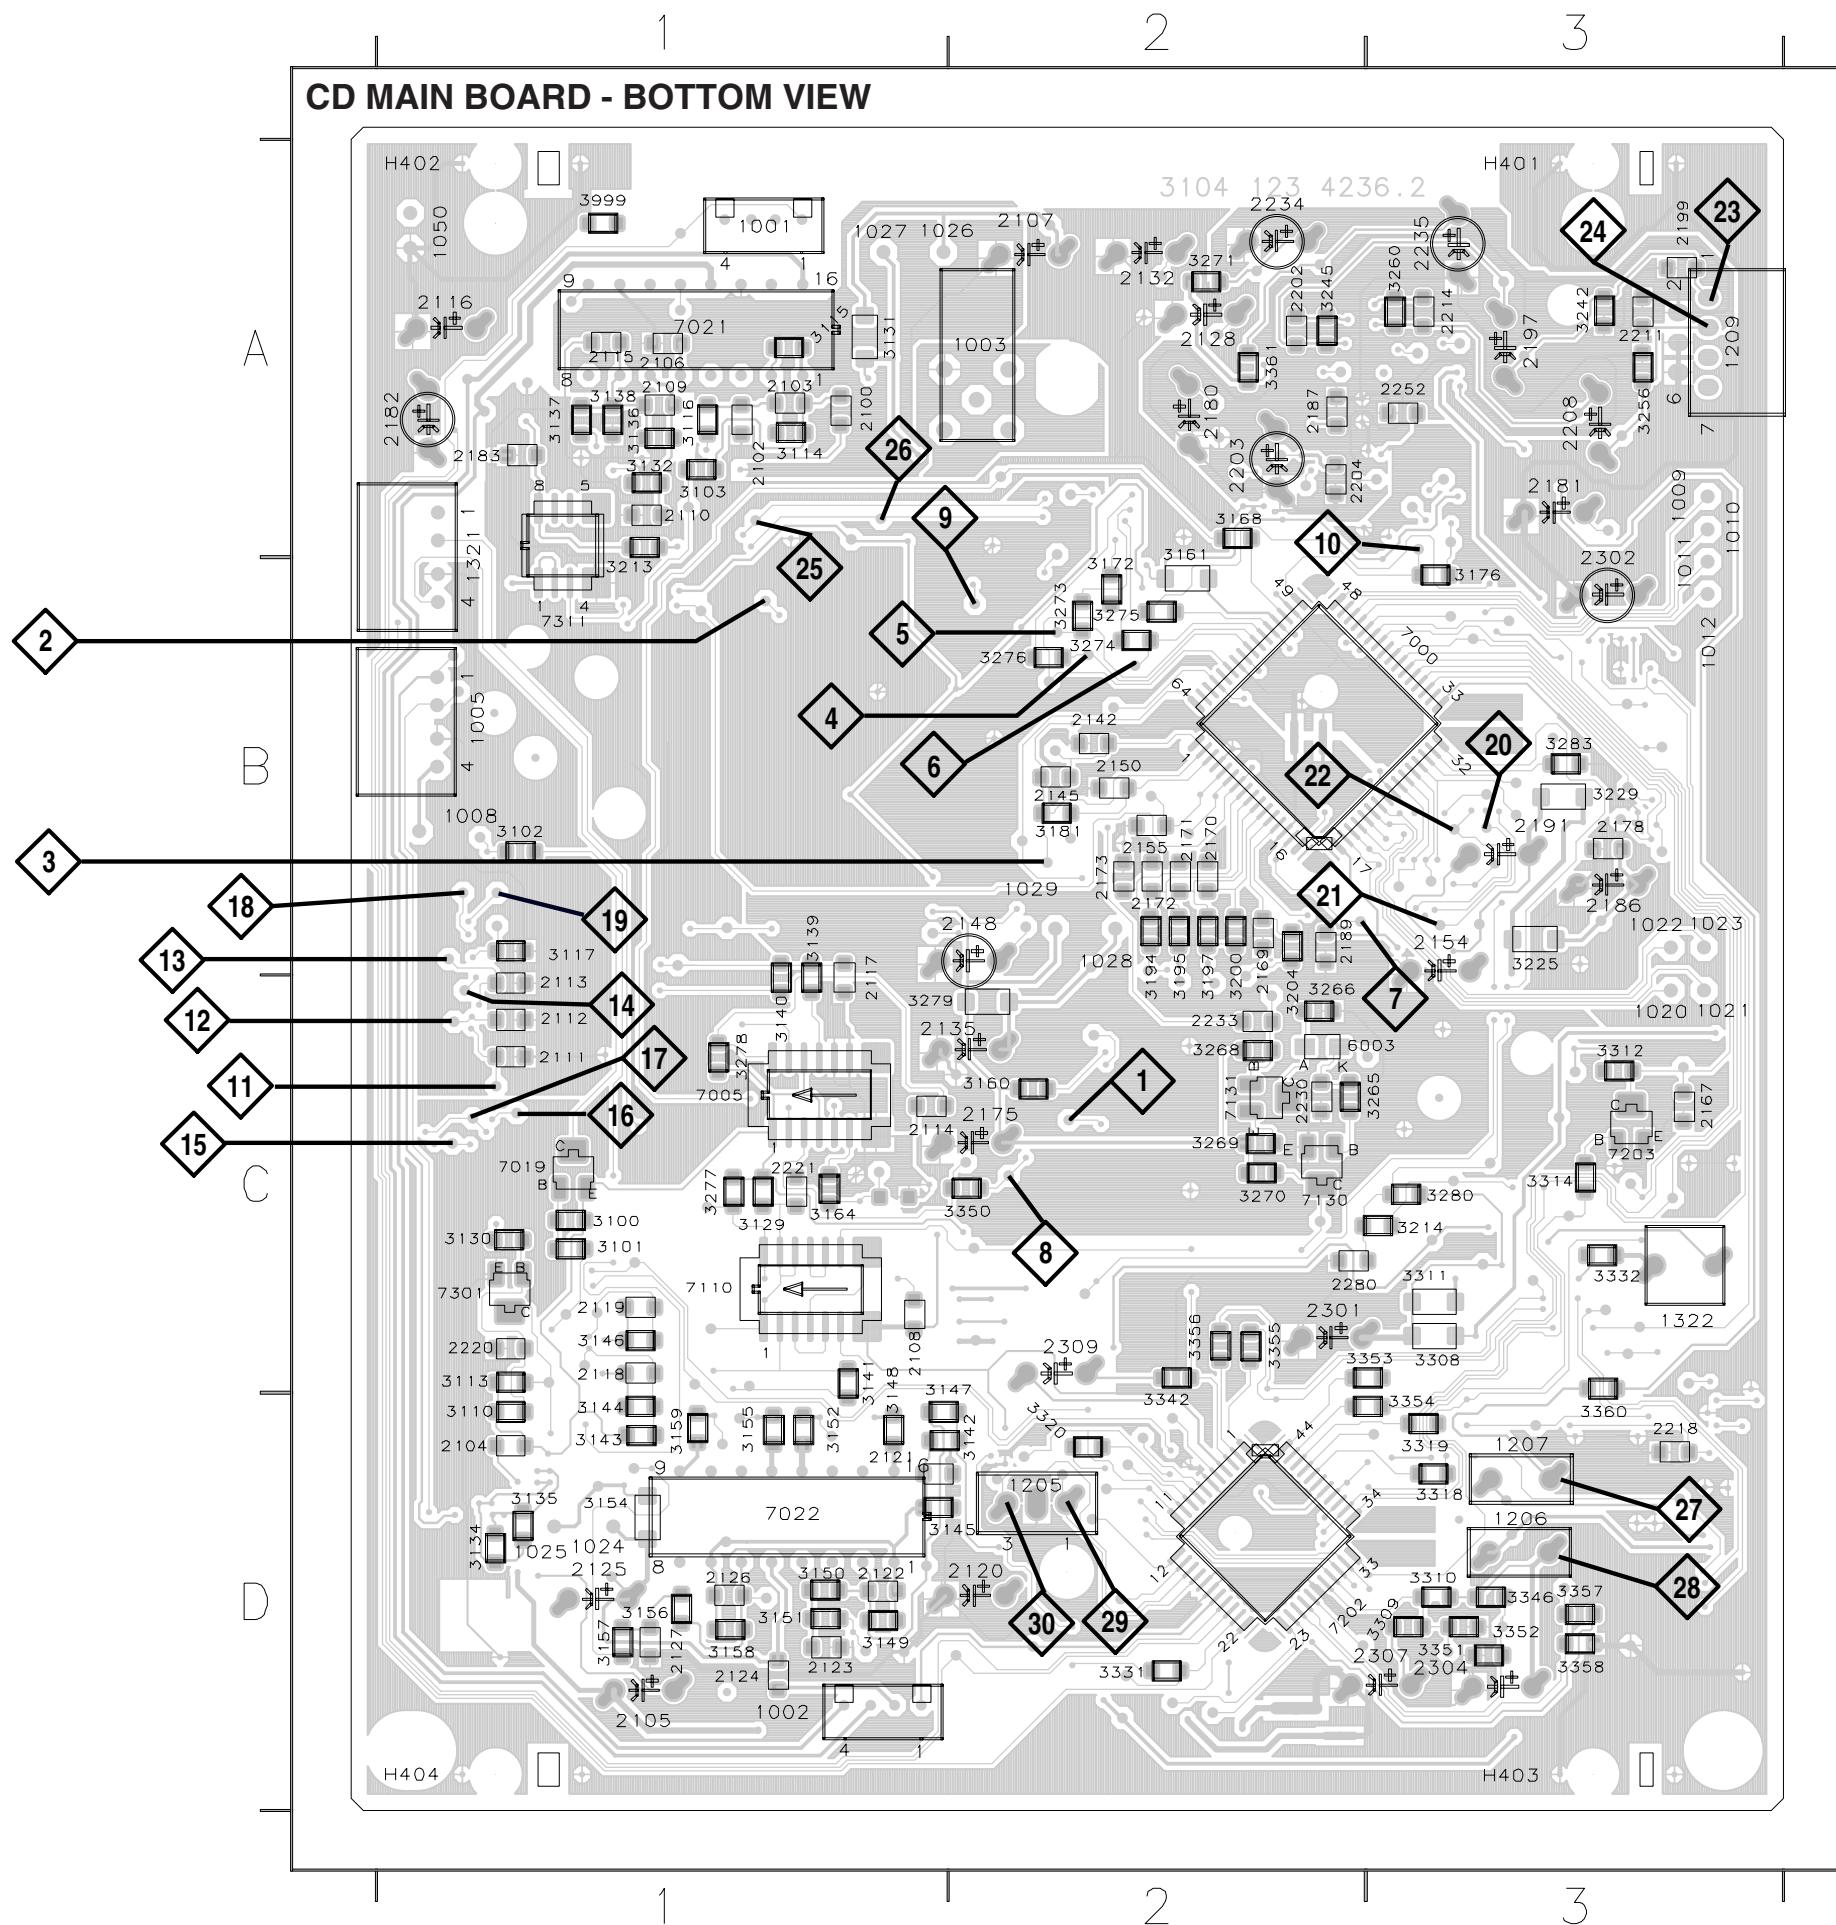

## ***Personal notes:***

## ***Personal notes:***


## 6. Diagnostic Software

### 6.1 Dealer mode

The purpose of the dealer mode is to prevent people taking out the CD inside the player at exhibitions, showrooms etc.. This mode disables the open/close function of the player. The dealer mode can be switched on and off pressing keys [OPEN/CLOSE] and [STOP] of the CDR player simultaneously while switching on the unit. The dealer mode is stored in the flash memory and can only be changed by executing the above actions.

### 6.2 Dealer diagnostics

#### DEALER DIAGNOSTICS (status of player)

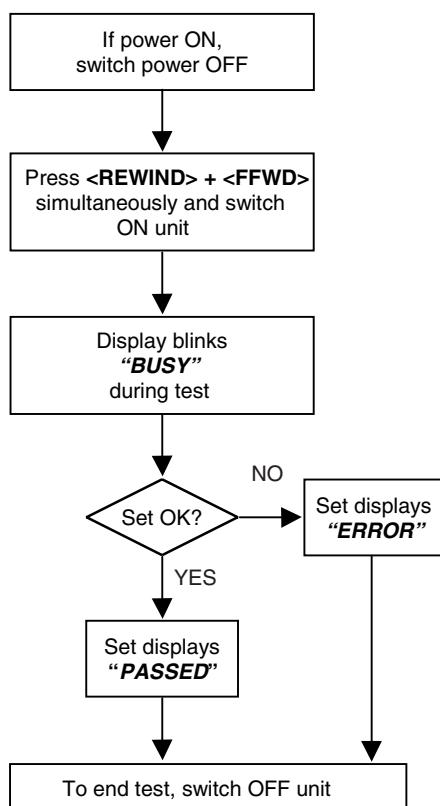

CL96532086-024.eps  
090999

**Figure 6-1**

#### 6.2.1 Description

The intention of the dealer diagnostics is to give an indication of the CDR player status. An inexperienced, even non-technical dealer will/can perform the test. Tests are executed automatically without need for external tools or disassembly of the unit. This test checks the CDR main board using the same tests as the electrical service diagnostics program. Only the result of the test, "PASSED" or "ERROR", will be shown on the display. Pressing keys [F FWD] and [REWIND] simultaneously while switching on the unit, starts the test. Switching off the unit ends the test.

#### 6.2.2 Requirements to perform the test

- Working keyboard to start up the test.
- Working local display to check the output messages.

### 6.3 Electrical service diagnostics

#### ELECTRICAL SERVICE DIAGNOSTICS (software versions, test for defective components)

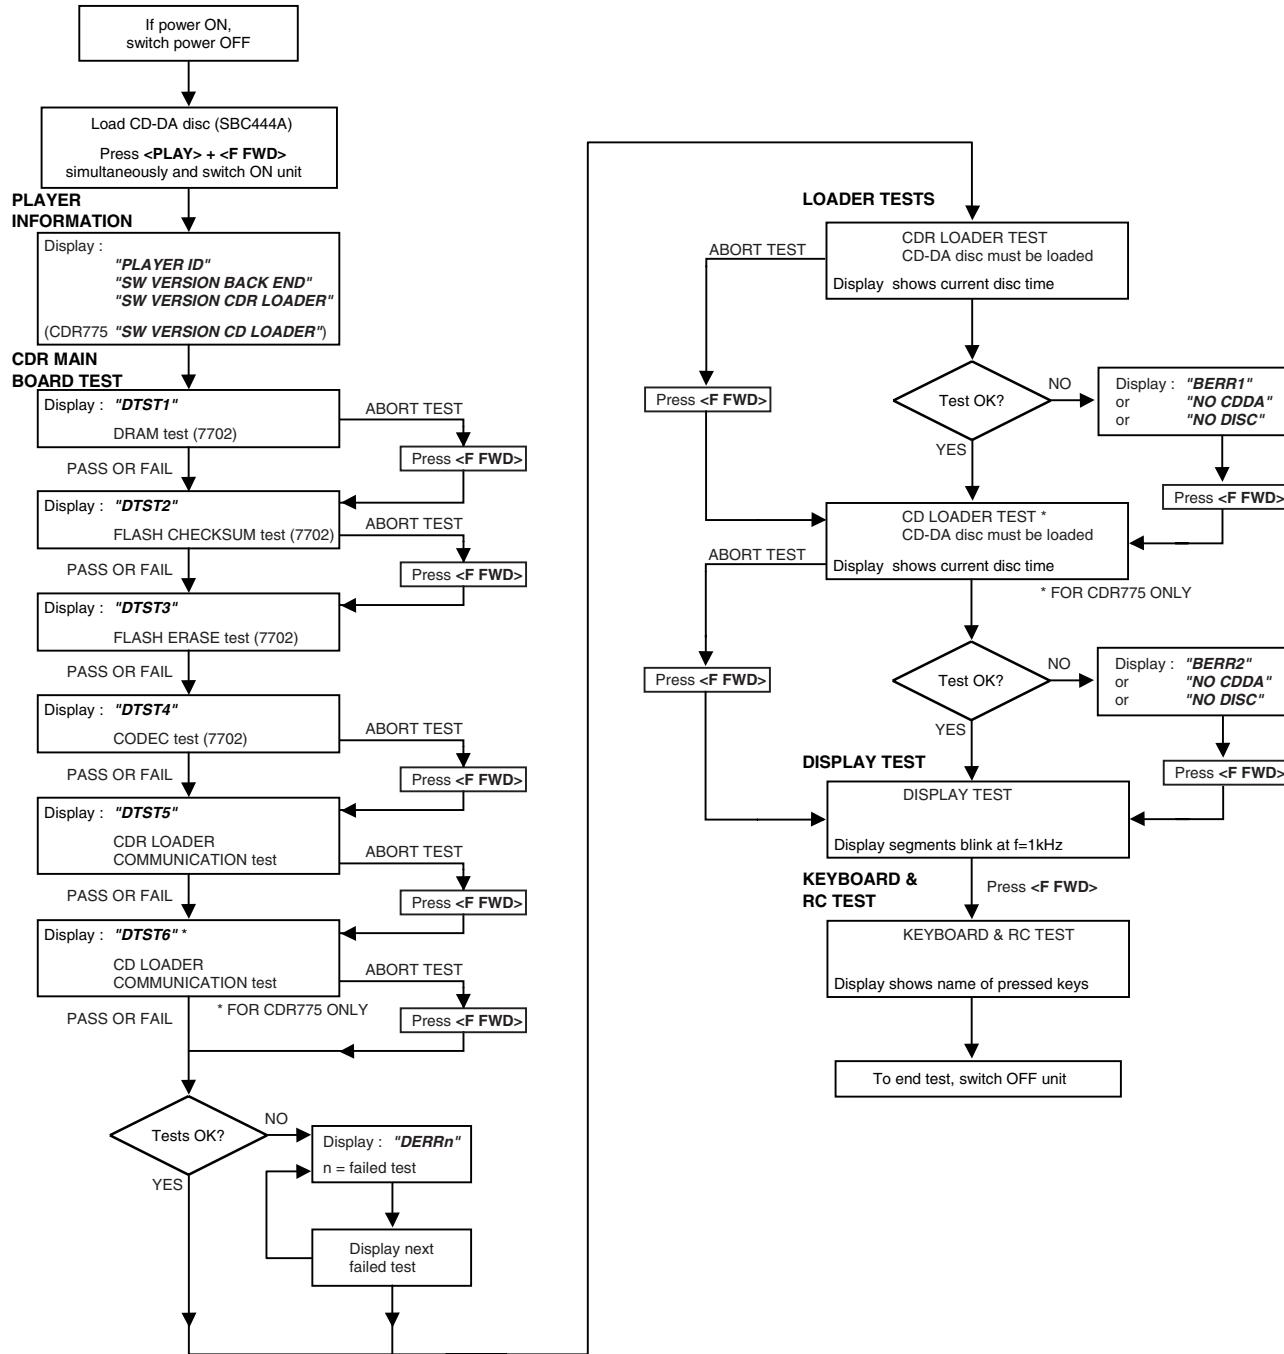


Figure 6-2

### 6.3.1 Description

The intention of the electrical service diagnostics is to show the software versions present in the player and to direct the dealer towards defective internal units. The units are : the CDR main board, the CDR loader, the CD loader in case of a CDR779 and the keyboard/display board. A sequence of tests is executed automatically. Some of the tests can be aborted or skipped without the result being taken into account. External tools or disassembly of the unit is not necessary to get the diagnostic information. Pressing keys [PLAY/PAUSE] and [F FWD] simultaneously while switching on the unit, starts the test. Switching off the unit ends the test.

### 6.3.2 Requirements to perform the test

- Working keyboard to start up the test.
- Working local display to check the output messages.
- A CD-DA disc with a minimum of 3 tracks in all trays to perform the disc test.

### 6.3.3 Description of the tests

#### *Player information*

In this part of the test the following important information can be checked without removing the cover :

- Recorder ID.
- SW-version back end of player.
- SW-version CDR loader.
- SW-version CD loader (only for CDR779).

#### *CDR main board test*

[F FWD] key. The message "DERRn" will be displayed with n indicating the faulty test number.

If one of the tests is aborted with the [F FWD] key, no error message will be displayed for this test. The flash data erase test ("DTST3") can not be aborted !

The CDR main board test consists out of :

#### *DRAM test*

Display : "DTST1". The DRAM used for buffer management is tested by writing, reading and verifying test patterns.

#### *Flash checksum test*

Display : "DTST2". This test checks the checksum of the player's SW stored in the flash.

#### *Flash data erase*

Display : "DTST3". During this test, all temporary information (CDtxt) in the flash is erased.

#### *CODEC (ADC/DAC) test*

Display : "DTST4". This test checks the CODEC IC by writing, reading and verifying test patterns. The test is not applicable for CDR779.

#### *CDR communication test*

Display : "DTST5". The communication between the host processor (DASP) and the CDR loader via the DSA-R-bus is tested.

#### *CD communication test*

Display : "DTST6"). The communication between the host processor (DASP) and the CD loader is tested. The test is only applicable for CDR779.

#### *Loader tests*

These tests determine if the CDR loader and the CD loader in case of a CDR779 work correctly. A CD-DA disc with a minimum of 3 tracks needs to be inserted in both loaders. A disc test is executed to check focus control, disc motor control, radial control and jump grooves control. The disc test

is performed by audio play-back of 5 seconds at the beginning, middle and end of the disc.

#### *CDR loader test*

During the test, the current disc time is shown. In case of an error the message "BERR1" will be displayed and the [F FWD] key must be pressed to continue with the following test. Pressing the [F FWD] key also aborts this test.

#### *CD loader test*

For CDR779 only. During the test, the current disc time is shown. In case of an error the message "BERR2" will be displayed and the [F FWD] key must be pressed to continue with the following test. Pressing the [F FWD] key also aborts this test.

#### *Display test*


All segments will blink at a frequency of 1 Hz. Pressing the [F FWD] key will start the next test because the user has to check for himself if all segments work properly.

#### *Keyboard and remote control tests*

The test will give the user the ability to test every key without executing the function assigned to it. Therefore, the user needs to press every key on the keyboard and the remote control. The display will show the name of the key being pressed. Pressing more than one key at once will give an unpredictable result except for the service combinations : [PLAY/PAUSE] + [STOP], [PLAY/PAUSE] + [F FWD], [F FWD] + [REWIND], [ERASE] + [RECORD], [PLAY/PAUSE] + [RECORD], [OPEN/CLOSE] + [PROGRAM].

## 6.4 Mechanical service diagnostics

### MECHANICAL SERVICE DIAGNOSTICS (test for defective components)

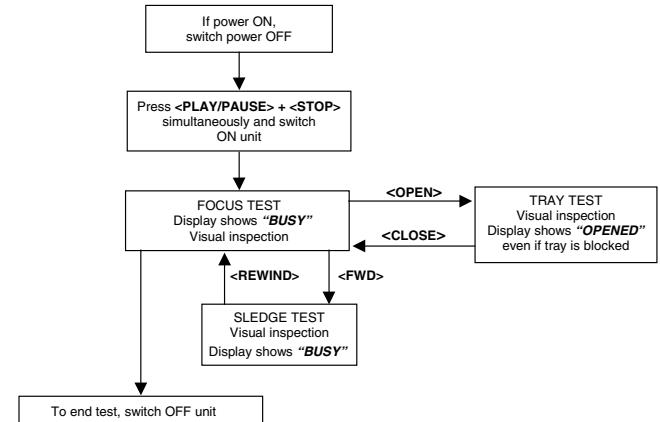

CL96532086\_026.eps  
080999

Figure 6-3

### 6.4.1 Description

No external tools are required to perform this test. The cover needs to be removed because the user has to check the movements of the tray, focus and sledge visually. Pressing keys [PLAY/PAUSE] and [STOP] simultaneously while switching on the unit, starts the test. Switching off the unit ends the test. In case of a CDR779, one can check the CD loader mechanics in the same way by pressing the above key combination on the CD player keys.

### 6.4.2 Requirements to perform the test

- Working keyboard to cycle through the tests and to start up the test.
- Working local display to check the output messages.

#### 6.4.3 Description of the tests

##### **Focus control test**

The focussing lens is continuously moving up and down. The display reads "BUSY".

##### **Sledge control test**

After pressing [F FWD] the sledge continuously moves up and down. Pressing [REWIND] stops the sledge at the position it is in and the focus control test resumes. The display reads "BUSY".

##### **Tray control test**

This test starts from within the focus control test routine. Pressing [OPEN/CLOSE] moves the tray in or out. In the tray open position one can initiate focus and sledge tests by pressing [F FWD]. One has to stop these tests pressing [REWIND] before it is possible to close the tray again. Depending on the action the display reads "OPEN", "OPENED", "CLOSE" or "BUSY".

### 6.5 DC-erase service mode

#### DC ERASE SERVICE MODE (erasure of complete CD-RW)

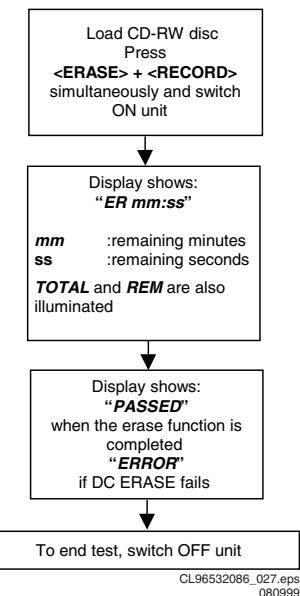


Figure 6-4

#### 6.5.1 Description

This test is initiated by pressing [ERASE] and [RECORD] simultaneously while switching on the unit. The player will erase a complete CD-RW disc (including PMA and ATIP lead out area) at speed N=2. The display shows the countdown of the remaining time required for the operation to complete. The format is "ER mm:ss", where "mm" are the remaining minutes and "ss" the remaining seconds. After completion the message "PASSED" is shown, and the player has to be switched off and on again to start up in normal operating mode. Switching off the unit before completion of the test, leaves the disc in an unpredictable state. In such case only a complete DC-erase procedure can recover the CD-RW disc.

#### 6.5.2 Requirements to perform the test

- Functional CDR player.
- A CD-RW audio disc must be present in the tray.

### 6.6 Burn in mode

#### 6.6.1 Description:

The Burn In mode is an endless cycle of:

- DC-Erase to erase the CDRW disc with maximum laser power.
- Recording a CDRW disc
- Finalising at double speed

The Burn In mode is used to test intermittent faults of the loader.

#### 6.6.2 Requirements to perform the test:

- Working Local Keyboard: needed to start up the test.
- Working Local Display: all output messages must be displayed on the local display.
- Analog source connected to the CDR99 player
- CDRW disc in tray

##### **Burn in sequence**

- Initialisation

The 'Burn In' mode is initiated by pressing the [PLAY/PAUSE] and [RECORD] key on the local keyboard at the same time, and then switching the POWER switch on.

- Continuous loop

The following picture shows the burn in sequence.

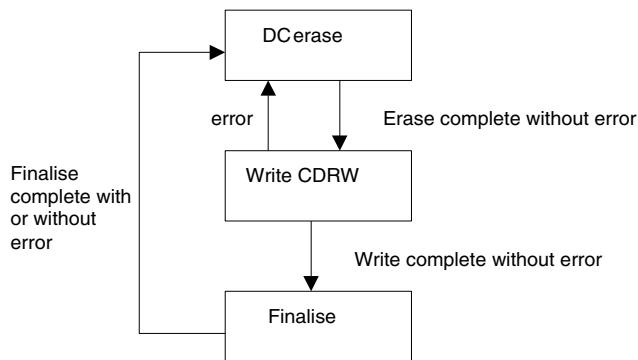


Figure 6-5 Burn in sequence

Continuously do DC erase, record complete CDRW and then finalise until the player is powered off.

When an error is detected during writing, the DC erase procedure is called again., the disc will be DC erased and the cycle starts again.

During the test the display shows the number of hours for which the test is running and the number of errors detected during the test. The display looks as follows : "HH BI RE FE"

HH : number of hours on digits 1 and 2

"BI" : burn in mode, digits 3 and 4

RE : number of errors detected during DC erase and write CDRW modes on digits 7 and 8

FE : number of errors detected during finalise modes on digits 10 and 11

If started up with a disc other than a CDRW disc the display shows if no disc is inserted display

- End of test

To exit the Burn In mode, power off the player.

## 7. Faultfinding trees

### 7.1 CDR-Module

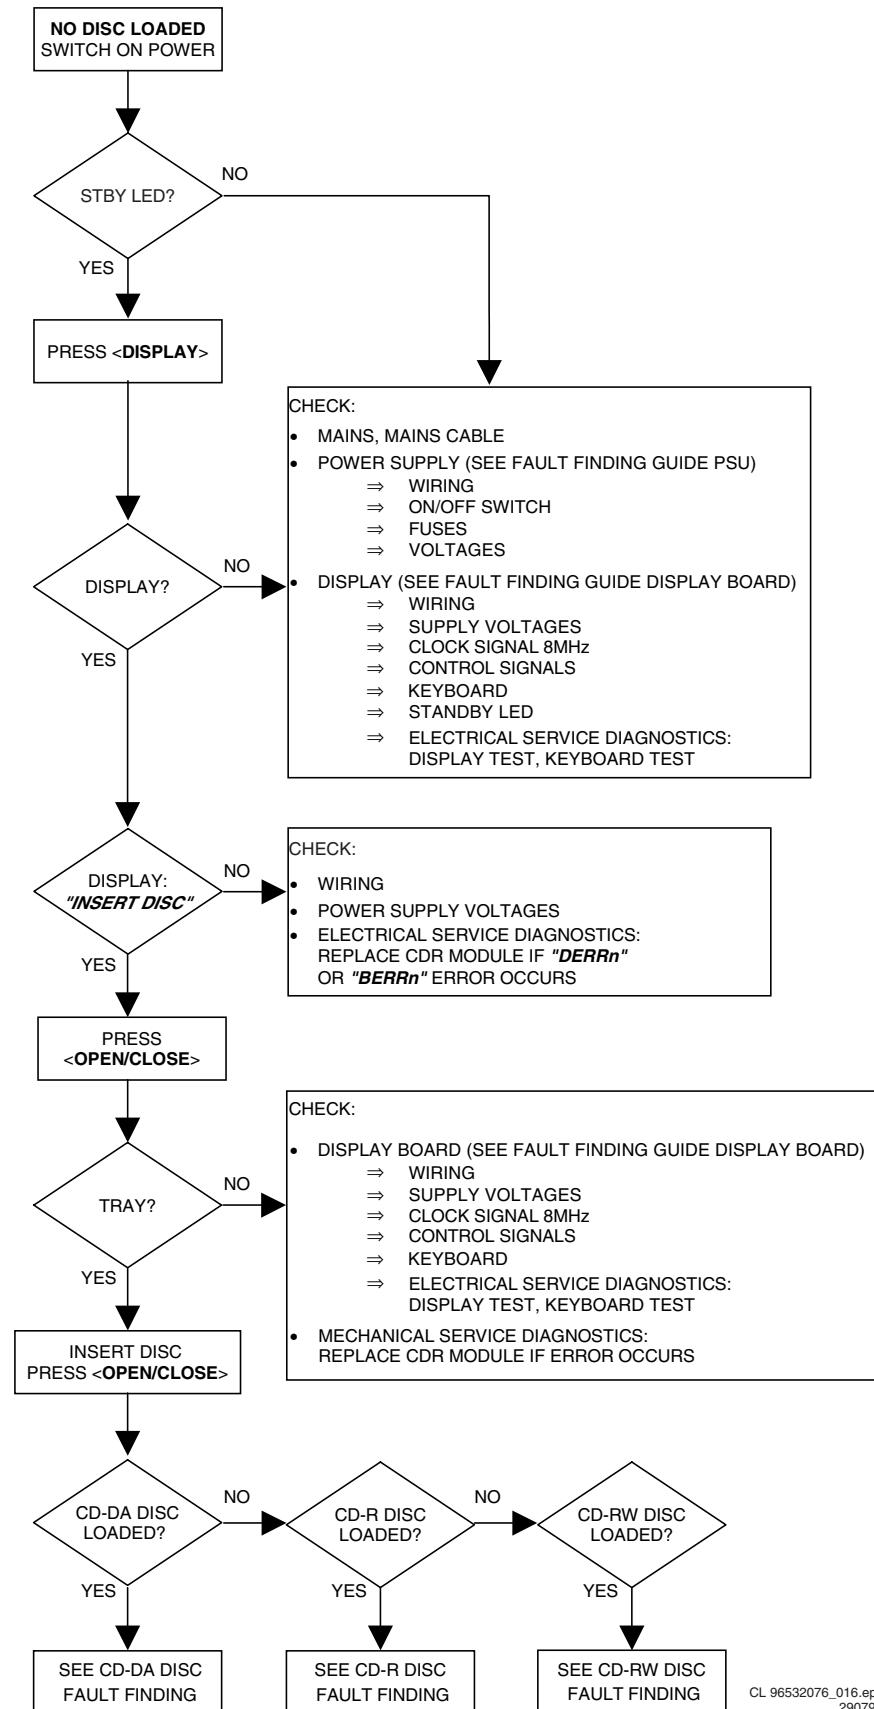


Figure 7-1

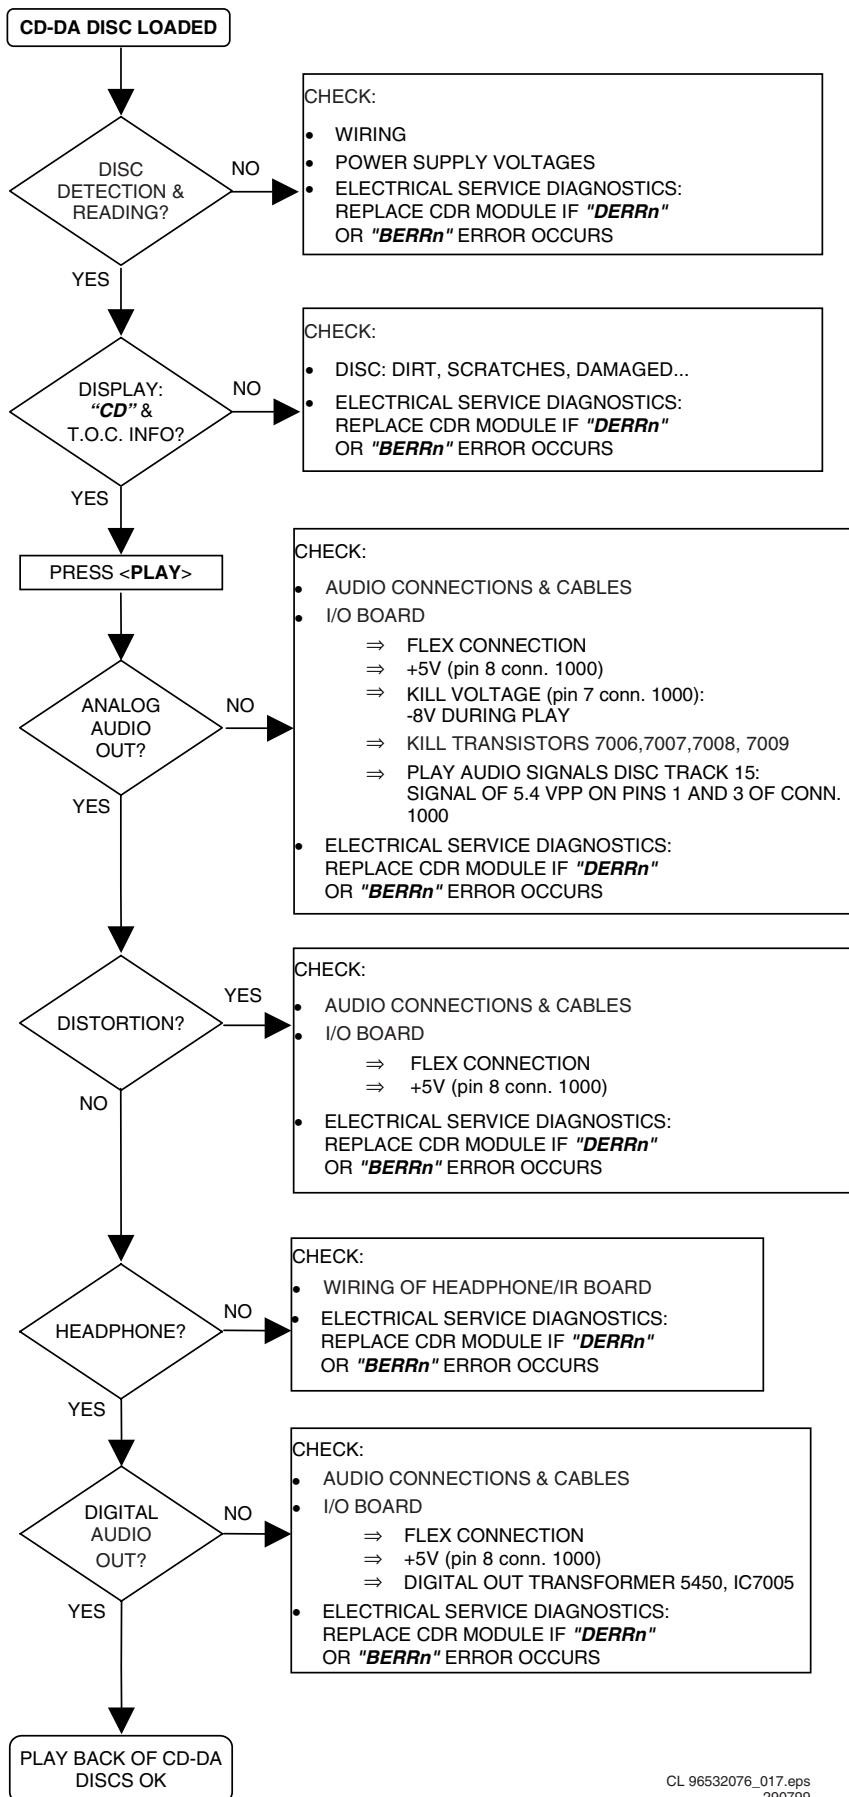


Figure 7-2

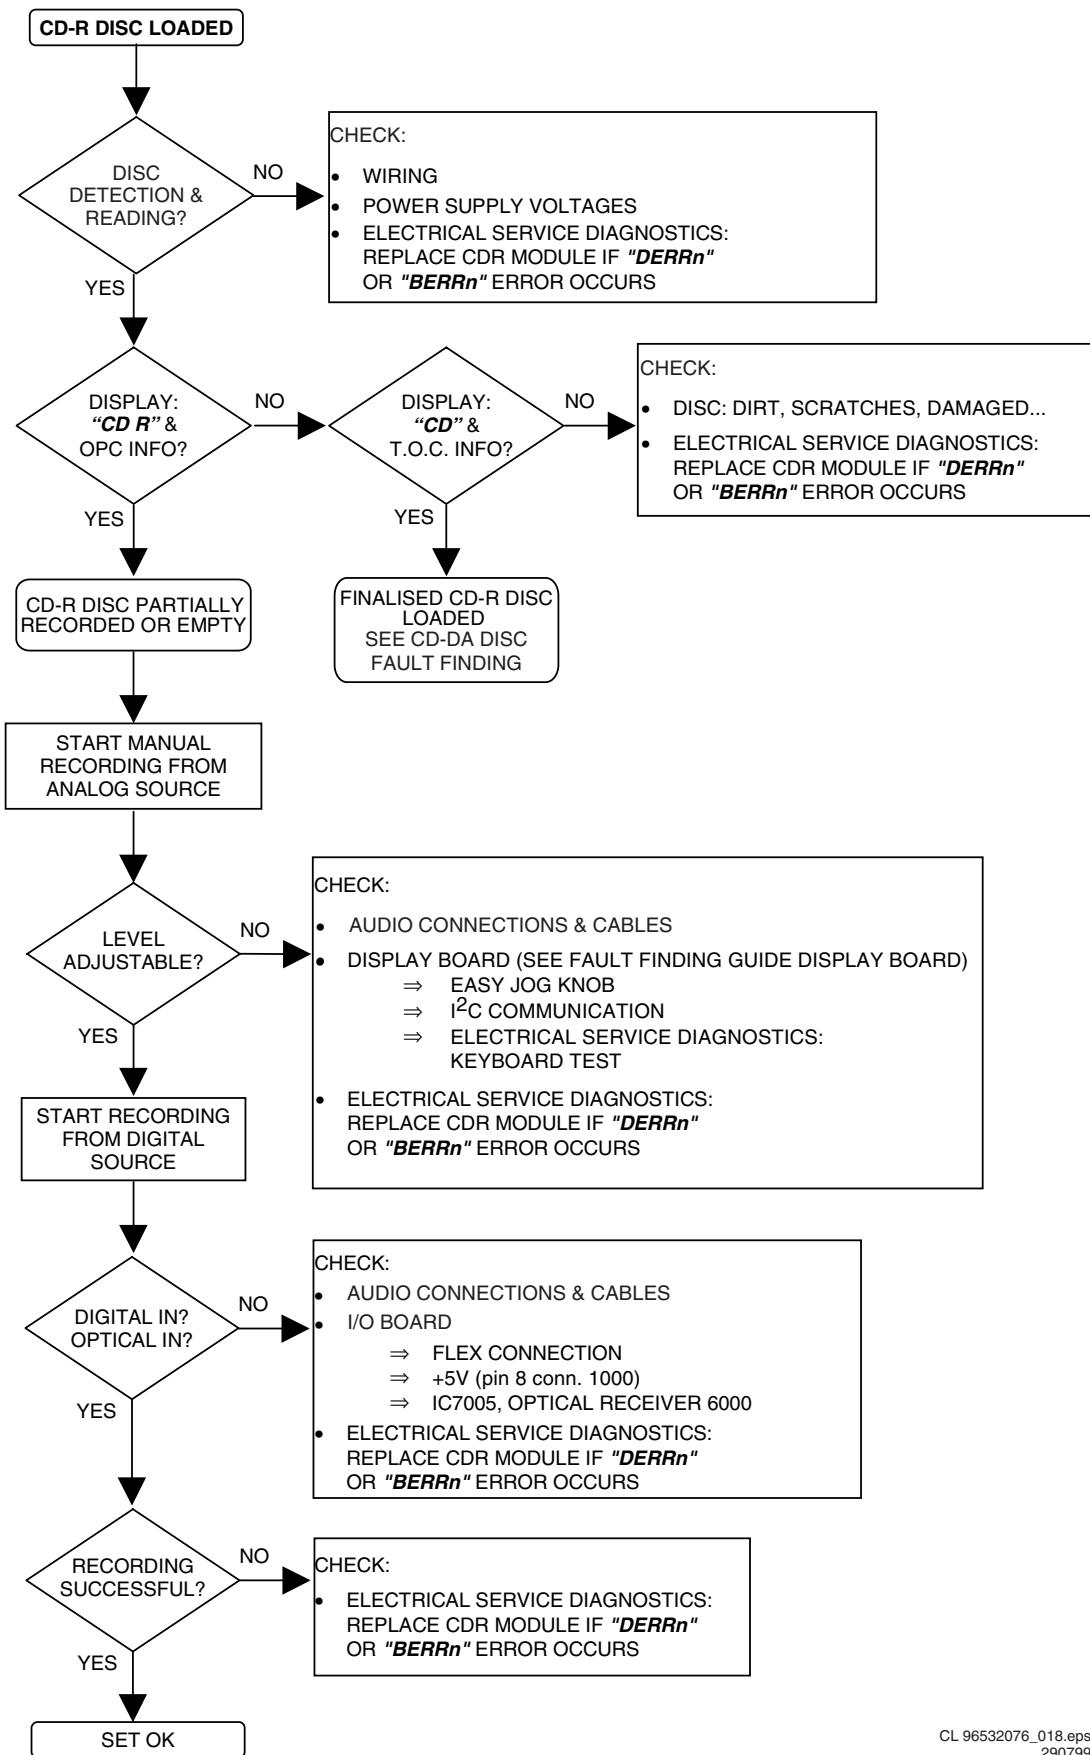


Figure 7-3

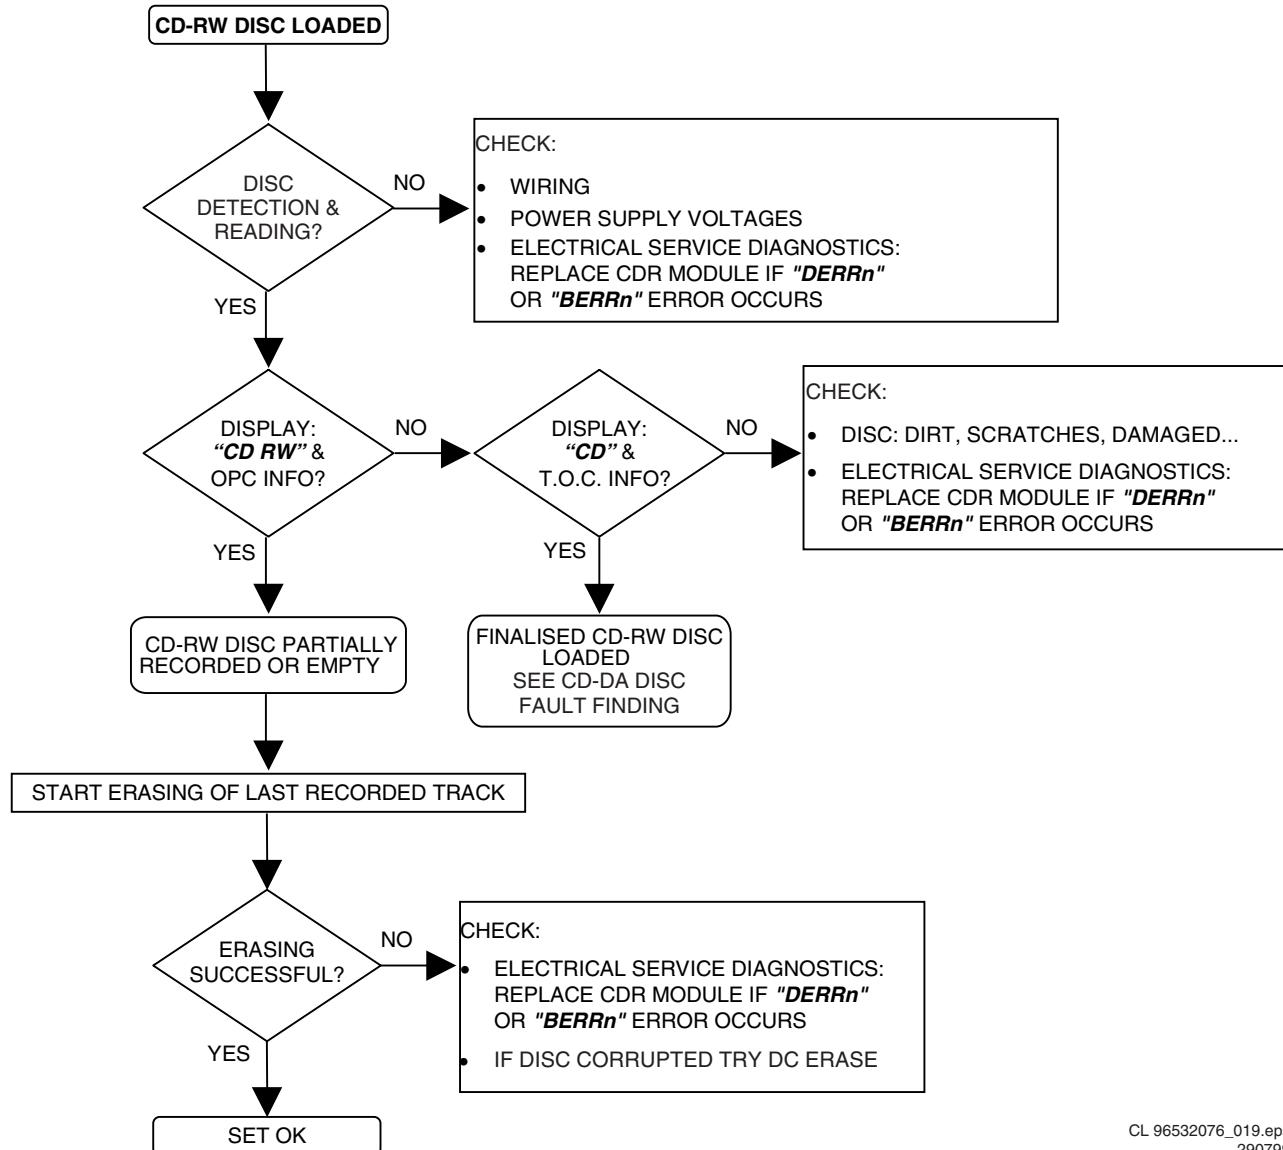
CL 96532076\_019.eps  
290799

Figure 7-4

## 7.2 CD Module

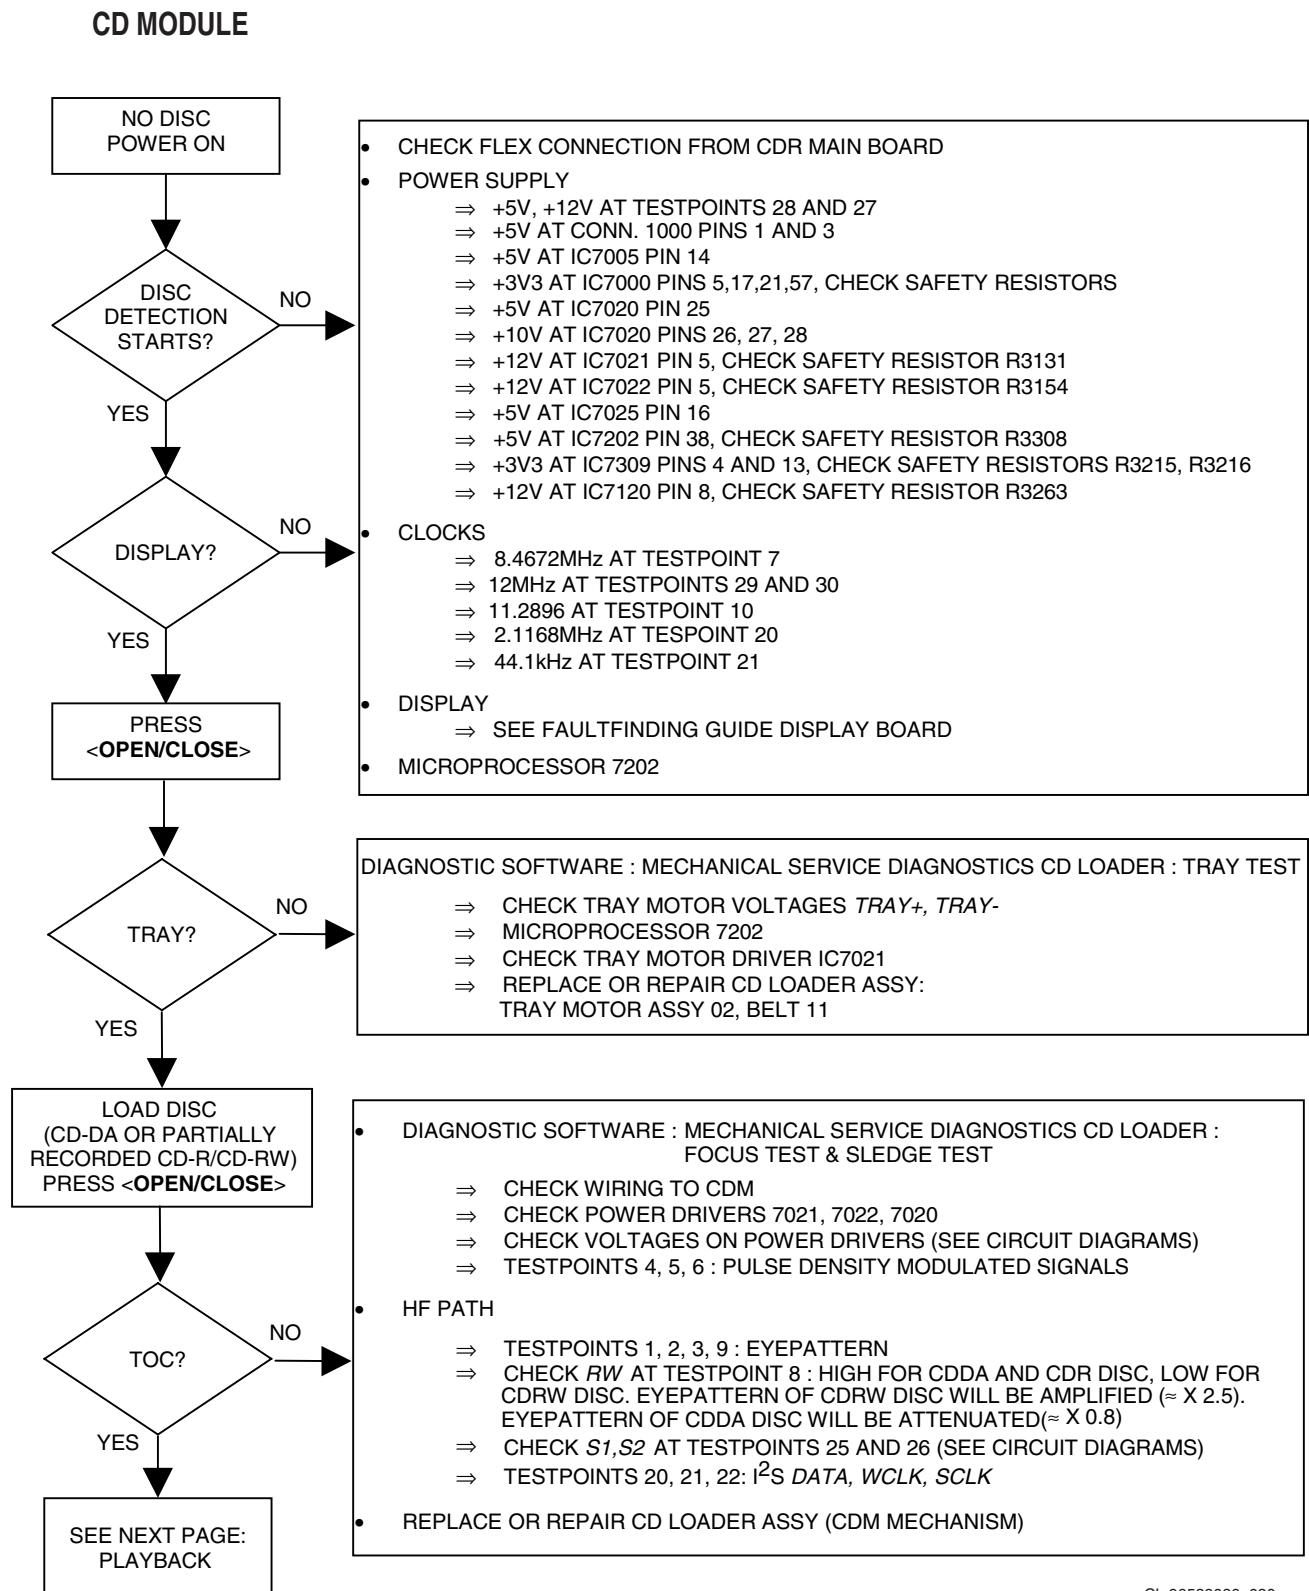
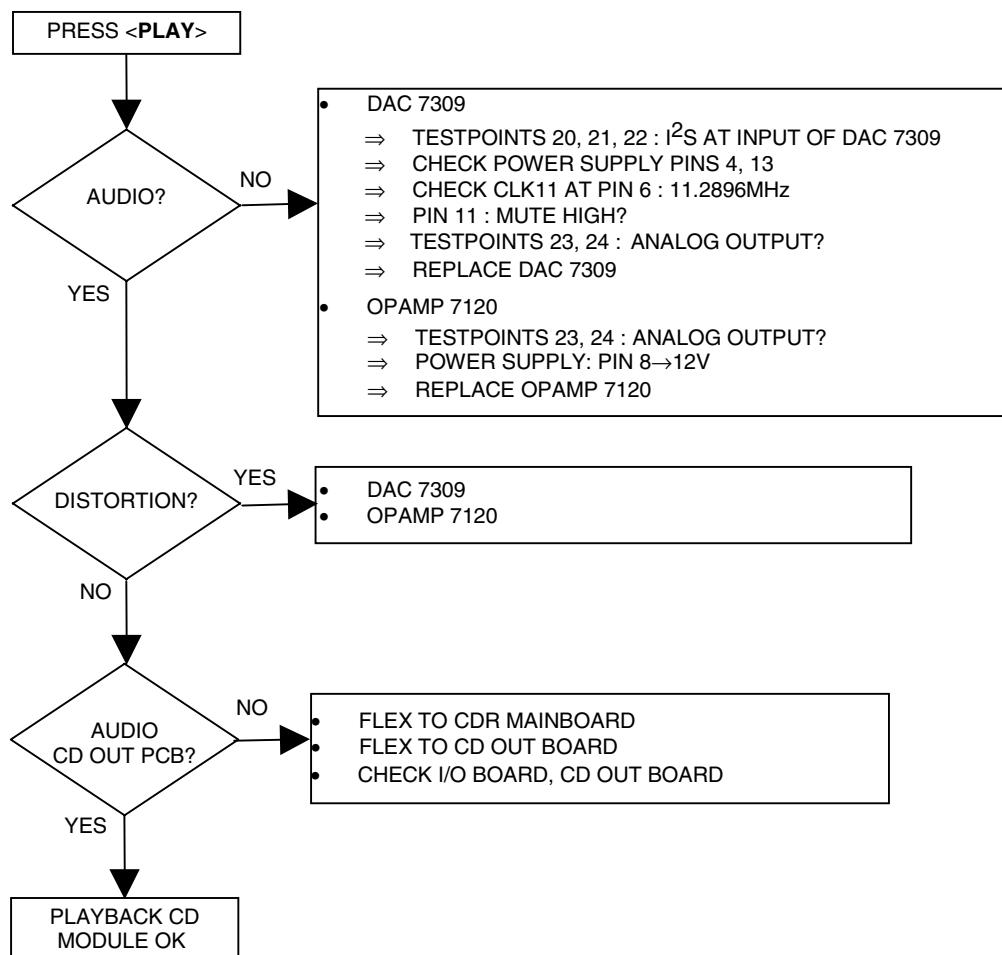


Figure 7-5

**CD MODULE PLAYBACK**CL 96532086\_031.eps  
080999**Figure 7-6**

## 8. Faultfinding Guide

### 8.1 Display Board

#### 8.1.1 Description of display board

##### General description

The display board has three major parts : the FTD (Fluorescent Tube Display), the display controller TMP87C874F and the keyboard. The display controller is controlled by the DASP master processor on the CDR main board. The communication protocol used is I2C. So all the information between DASP and display controller goes via the SDA or I2C DATA and SCL or I2C CLK lines. Communication is always initiated by the DASP on the CDR main board. Unlike the previous generations of CDR players, the interrupt generated by the display controller at key-press or reception of remote control is not used. Instead, the DASP polls the display controller for these events.

##### Display controller TMP87C874F


TMP87C874F (IC7104) is a high speed and high performance 8-bit single chip microprocessor, containing 8-bit A/D conversion inputs and a VFT (Vacuum Fluorescent Tube) driver. In this application, its functions are :

- slave microprocessor.
- FTD driver.
- generates the square wave for the filament voltage required for an AC FTD.
- generates the grid and segment scanning for the FTD.
- generates the scanning grid for the key matrix.
- input for remote control.

All the communication runs via the serial bus interface I2C. The display controller uses an 8MHz resonator as clock driver.

#### BLOCK DIAGRAM

TMP87C874F

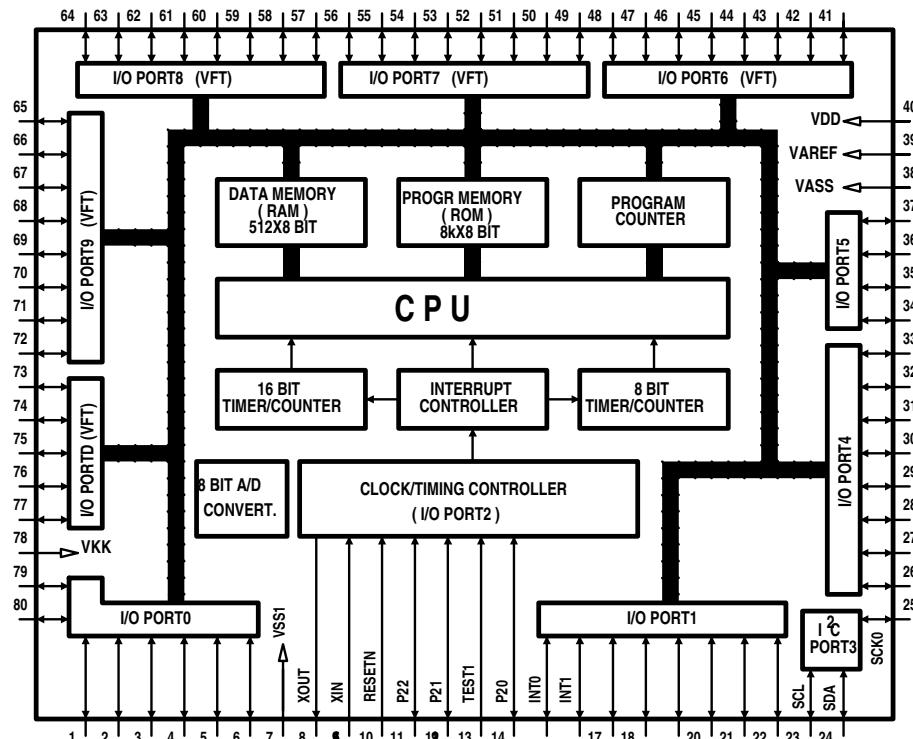

#### PIN DESCRIPTIONS

INT0	external interrupt input 0
INT1	external interrupt input 1
RESETN	reset signal input, active low
SCL	I2C-bus serial clock input/output
SDA	I2C-bus serial data input/output
TEST	test pin, tied to low
VAREF	analog reference voltage input
VASS	analog reference ground
VDD	+5V
VKK	VFT driver power supply
VSS	ground
XIN, XOUT	resonator connecting pins for high-frequency clock

### 8.1.2 Test instructions

#### Supply voltages

The display board receives several voltages via connector 1119 (and connector 1121 for CDR570/930).

- VFTD : -38V  $\pm 5\%$  measured at pin 2 of conn. 1119.
- VDC1-VDC2 : 3V8  $\pm 10\%$  measured between pin 1 and 3 of conn. 1119.
- +5V : +5V  $\pm 5\%$  measured at pin 10 of conn. 1119 (pin 4 of conn. 1121 for CDR770).

Voltages VFTD, VDC1 and VDC2 are produced in the power supply unit and sent to the display board via the CDR main board. The +5V voltage is produced on the CDR main board as D5V.

#### Clock signal

As clock driver for the display controller, a resonator of 8 MHz (1110) is used. The signal can be measured at pins 8 and 9 of the display controller : 8 MHz  $\pm 5\%$ .

#### Control signals

##### RESET

The reset signal comes via pin 4 of conn. 1119 from the DASP master processor on the CDR main board (SYS\_RESET). The reset is low active. It should be kept low during power up for at least 3 machine cycles with supply voltage in operating range and a stable clock signal (1 machine cycle = 12 x 1/Fc (8 MHz) sec.). During normal operation, the reset should be high (3V3). The high signal is 3V3 because the DASP operates on 3V3.

#### I<sup>2</sup>C DATA/I<sup>2</sup>C CLK

These lines connect to the DASP master processor via respectively pin 5 and pin 7 of conn. 1119 (pin 5 of conn. 1119 and pin 1 of conn. 1121 for CDR570/930). When there is no communication, they should have the high level (+5V). The oscillogram below gives an indication of how these signals should look like.

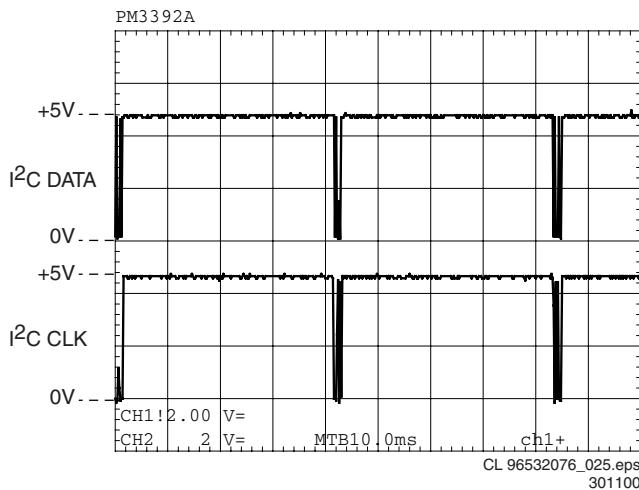


Figure 8-2 'I<sup>2</sup>C signals'

#### FTD drive lines

##### Filament voltage

Should measure 3.8V  $\pm 10\%$  (=VDC1-VDC2) between pins 1-2-3 and pins 45-46-47 (pins 1-2 and pins 48-49 for CDR770) of the FTD (1113).

##### Grid lines

Level and timing of all grid lines, G1-->G15, can be checked either at the FTD itself or at the display controller. Grid lines G13, G14 and G15 each have an extra current amplifier in

line : T7203 for G13, T7204 for G14 and T7100 for G15. A typical grid line signal shows in the oscilloscope below.

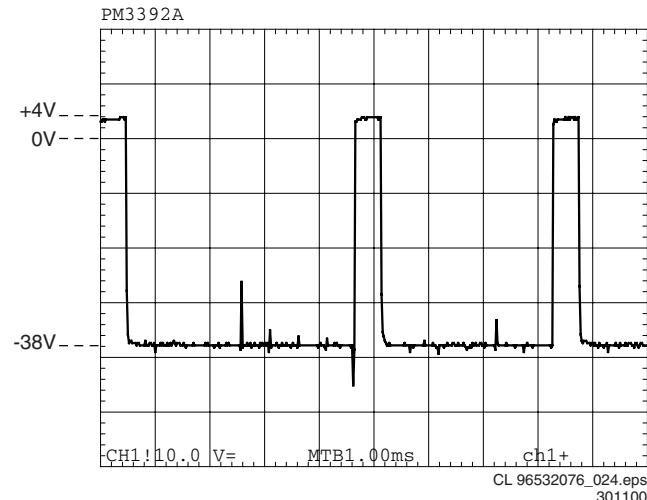


Figure 8-3 'Gridline'

#### Segment lines

Level and timing of all segment lines, P1-->P21 (P1-->P20 for CDR770), can be checked either at the FTD itself or at the display controller. The data on these segment lines however, depends on the characters displayed. The oscilloscope below shows a segment line with data. A segment line without data maintains a -38V level.


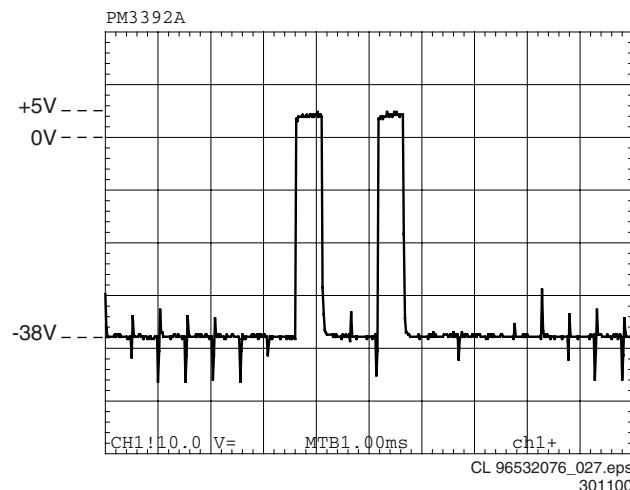


Figure 8-4 'Segment line'

#### Key matrix lines

The lines connected to pins 34, 35, 36 and 37 of the display controller act as matrix scanners. Without a key pressed, they maintain a low level. As soon as a key is pressed, the scanning line connected to that key puts out a scanning signal, which should look like the oscilloscope below. This scanning signal goes via the pressed key to I/O port 4 of the display controller (pins 28 to 33). The display controller can now determine which key has been pressed. Without a key pressed, pins 28 to 33 of the display controller maintain a high level (+5V).

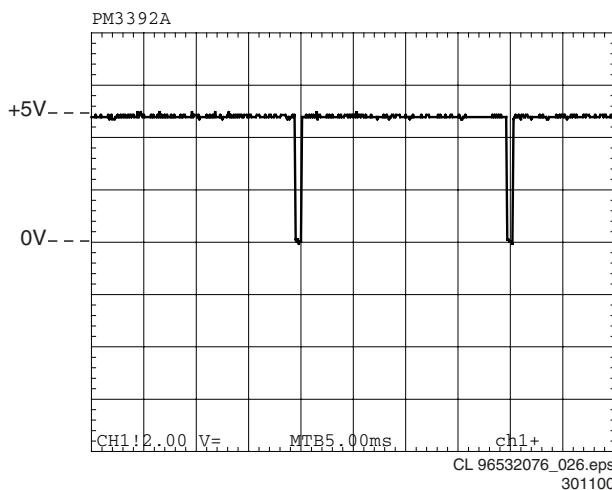


**Figure 8-5 'Key matrix scan line'**

#### Easy jog knob


##### Rotary operation

The easy jog knob (1050) incorporates a whole heap of user control possibilities in just one knob. Without the knob being operated, pin 1 and 3 of the knob (and thus pin 16 and 17 of the display controller), maintain the +5V level. Turning the knob clockwise briefly connects pin 1 to GND followed by pin 3.

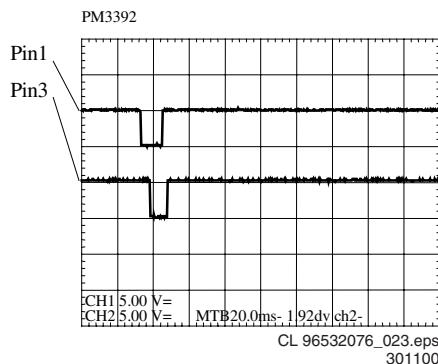

**Figure 8-6 'Turn clockwise'**

Turning the knob anti-clockwise briefly connects pin 3 to GND followed by pin 1.

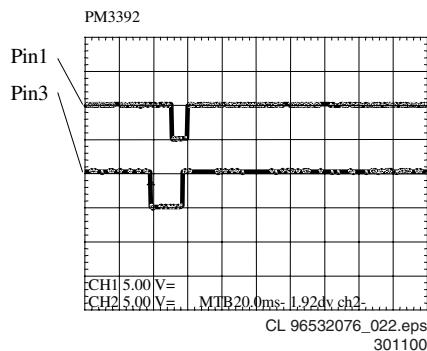

**Figure 8-7 'Turn anti-clockwise'**

The pulses created this way arrive at pin 16 and 17 of the display controller. The first pulse to arrive tells the controller


the direction of the rotation. Counting the pulses reveals the amount of rotation. Combining and decoding this information, the display controller will execute the appropriate task.

##### Push button operation

This button connects to the key matrix lines and thus the operation is identical to the ordinary keys. Without being pressed, pin 4 of the easy jog maintains the low level, pin 5 the high level. When pressed the scanning signal goes through the closed contact of pins 4 and 5, and can be checked at both pins.

##### IR receiver - remote control

In the CDR570/930 the IR receiver TSOP1736 (6101) is mounted on the display board. In the CDR770 that same IR receiver (6200) is mounted on a small board together with the headphone socket. In the CDR779 the IR receiver (6200) is mounted on its own small board. In all versions the IR receiver connects to the display controller. The signal coming from the receiver can be checked at pin 22 of the display controller. This signal is normally high (+5V). When the remote control is being operated, pulses mixed in with the +5V can be measured. The oscillogram gives an indication of how the signal looks like with the RC being operated.

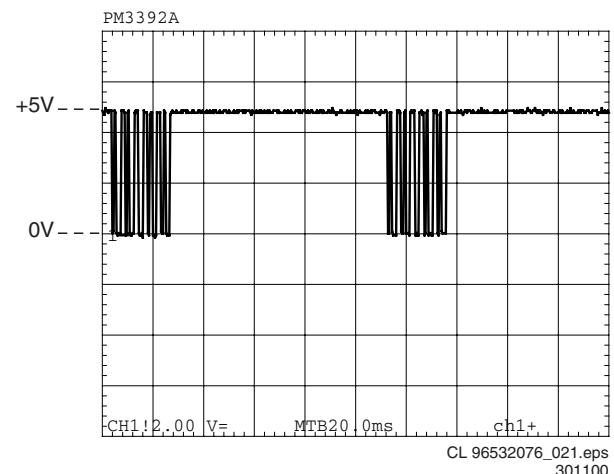

**Figure 8-8 'IR receiver signal'**

## 8.1.3 Display board troubleshooting guide

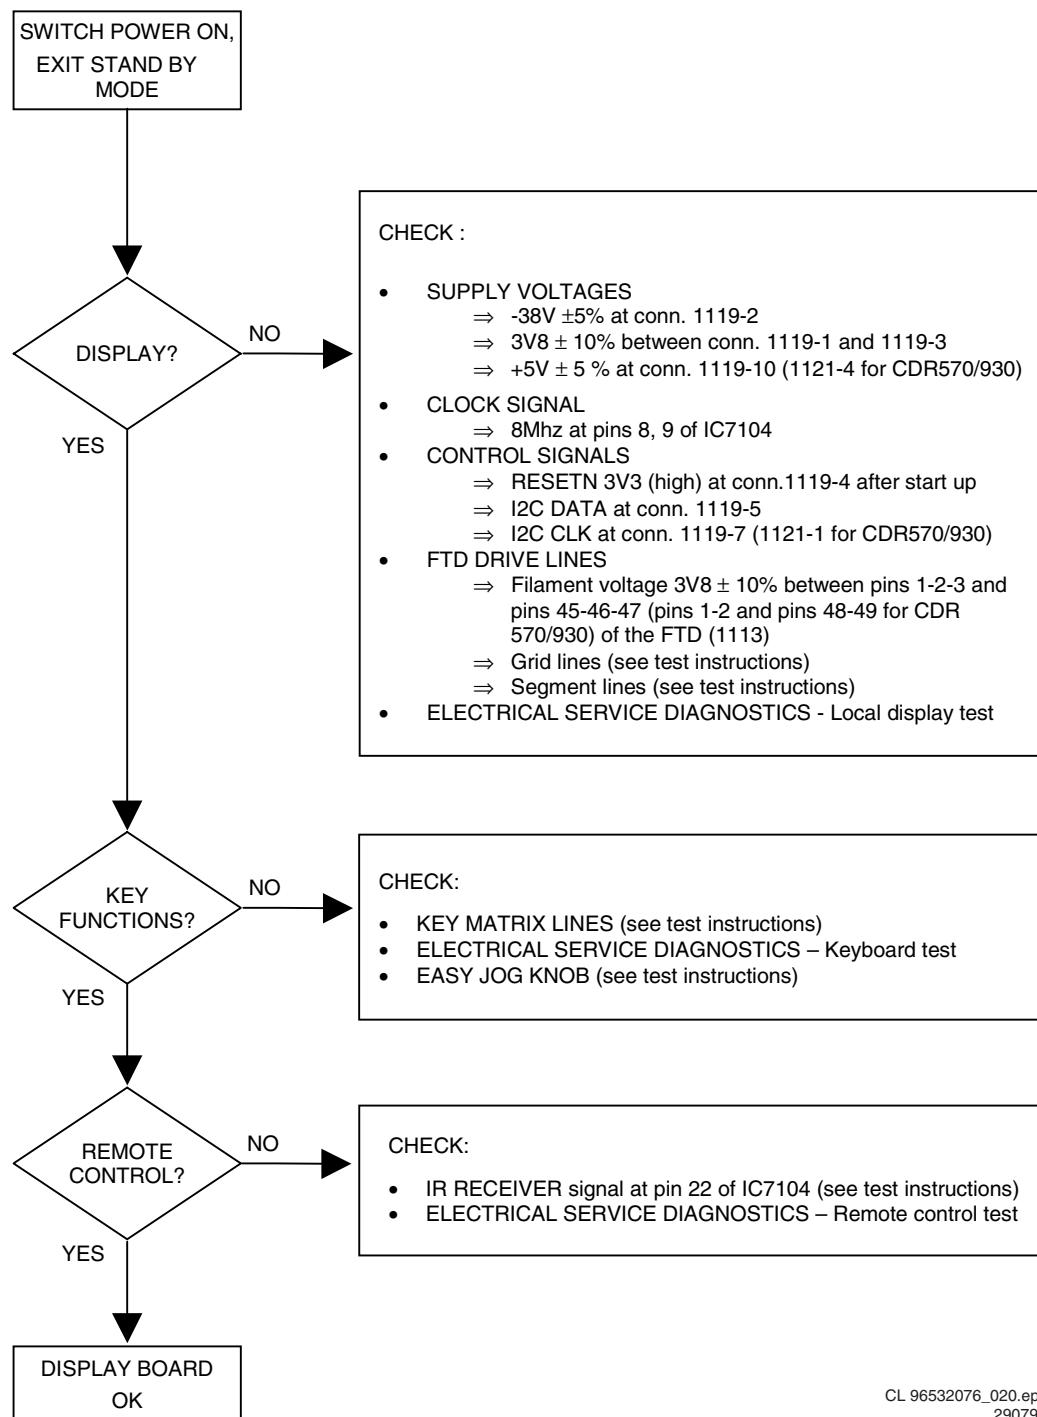
CL 96532076\_020.eps  
290799

Figure 8-9 'Display board troubleshooting'

## 8.2 Circuit description of the current mode power supply

### 8.2.1 Blockdiagram

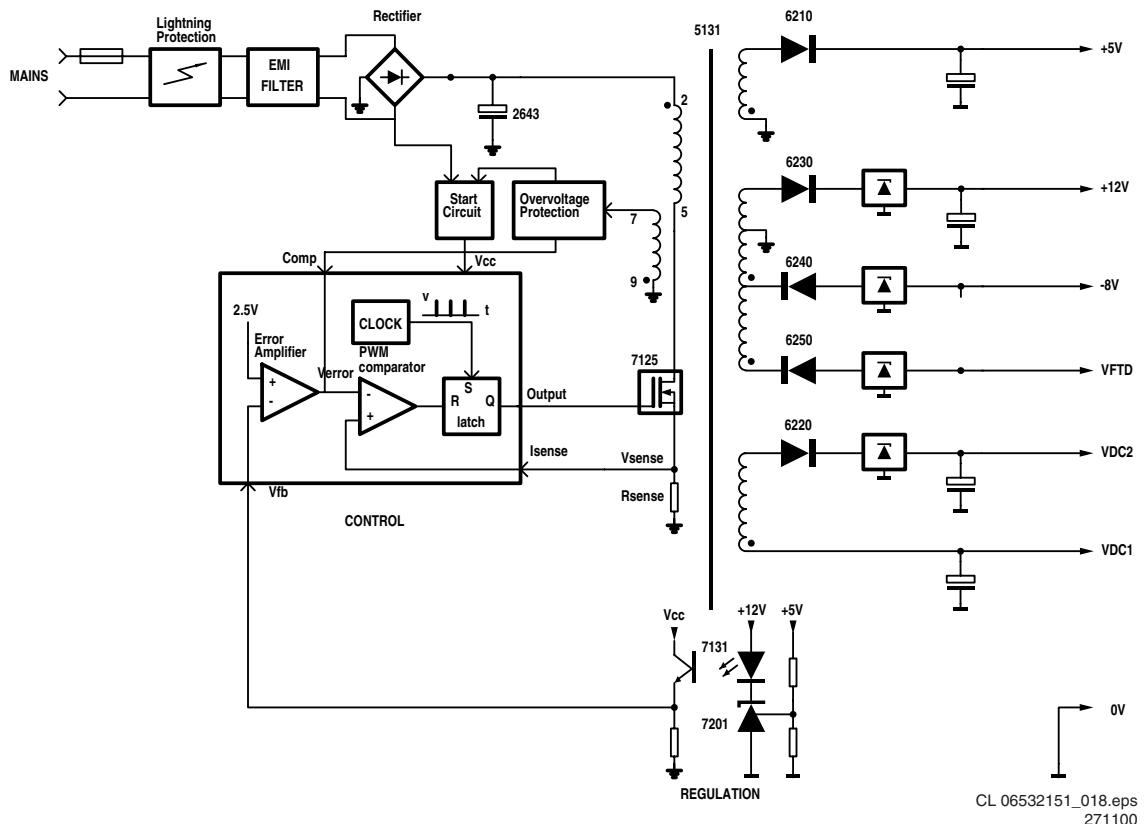


Figure 8-10

### 8.2.2 Function description

MOSFET 7125 is used as a power switch controlled by the controller IC 7110. When the switch is closed, energy is transferred from mains to the transformer. This energy is supplied to the load when the switch is opened. Through control of the switched-on time, the energy transferred in each cycle is regulated so that the output voltages are independent of load or input voltage variations. The controlling device UC3842 is an integrated pulse width modulator. A clock signal initiates power pulses at a fixed frequency. The termination of each output pulse occurs when a feedback signal of the inductor current reaches a threshold set by the error signal. In this way the error signal actually controls the peak inductor current on cycle-by cycle basis.

### 8.2.3 Description of UC3842

The input voltage  $V_{cc}$ (pin 7) is monitored by a comparator with hysteresis, enabling the circuit at 16V and disabling the circuit below 10V. The error amplifier compares a voltage  $V_{fb}$ (pin 2) related to the output voltage of the power supply, with an internal 2.5V reference. The current sense comparator compares the output of the error amplifier with the switch current  $I_{sense}$ (pin 3) of the power supply. The output of the current sense comparator resets a latch, which is set every cycle by the oscillator. The output stage is a totem pole, capable of driving a MOSFET directly

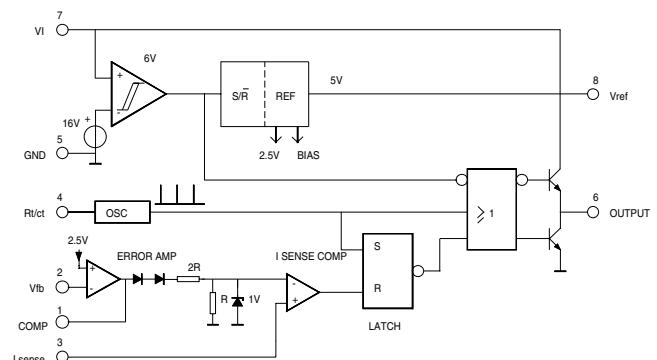


Figure B : Blockdiagram UC3842

CL 06532151\_019.eps  
271100

Figure 8-11

### 8.2.4 Start up sequence

t1: Charging the capacitor at  $V_{cc}$   
C2129 will be charged via R3123 and R3134, C2133 and C2111 via R3129. The output is switched off during t1.  
t2: Charging of output capacitors  
When the input voltage of the IC exceeds 14,5V, the circuit is enabled and starts to produce output pulses. The current consumption of the circuit increases to about 17mA, depending on the external loads of the IC. At first, the

capacitor at the Vcc pin will discharge because the primary auxiliary voltage, coming from winding 7-9 is below the Vcc voltage. At some moment during t2, the primary auxiliary voltages reaches the same level as Vcc.

This primary auxiliary voltage now determines the Vcc voltage

t3: regulation

The output voltage of the power supply is in regulation

t4: overload

When the output is shortened, the supply voltage of the circuit will decrease and after some time drop below the lower threshold voltage. At that moment, the output will be disabled and the process of charging the Vcc capacitor starts again. If the output is still shorted at the next t2 phase, the complete start-and stop sequence will repeat. The power supply comes in a hiccup mode.

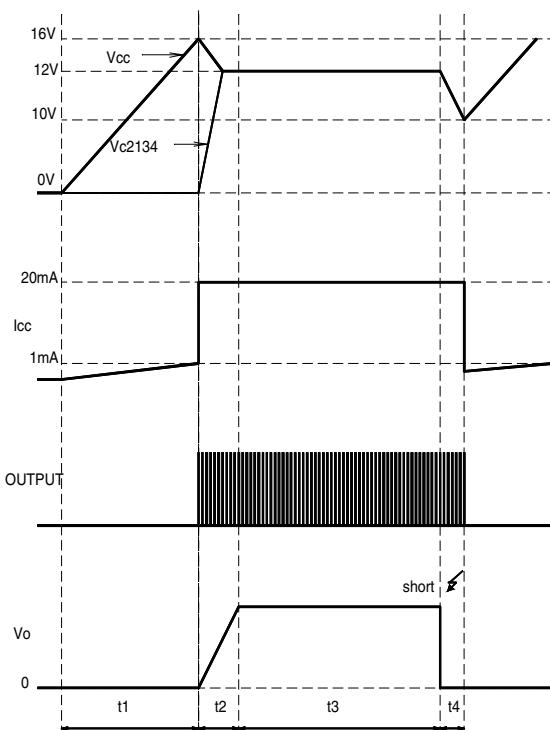


Figure C : Start-up sequence

CL 06532151\_020.eps  
271100

Figure 8-12

becomes reversed. This results in a current flow through the transformer's secondary winding via the diodes, electrolytic capacitors and the load. This current is also ramp shaped but decreasing.

TimeDEAD phase : when the stored energy has been supplied to the load, the voltage from the secondary windings falls below the output voltage(held constant by the electrolytic capacitors) plus the threshold voltage of the diodes. The current in the secondary winding stops flowing. At this point, the drain voltage of the MOSFET is not yet zero because C2609 between drain and source contains a certain charge. This charge will start a sine-shaped ringing together with the transformer's self-induction.

The oscillator will start a next cyclus which consists of the described three phases. The time of the different phases depends on the mains voltage and the load.

TimeDEAD is maximum at an input of 400VDC and minimum load, it will be zero at an input of 100VDC and overload.

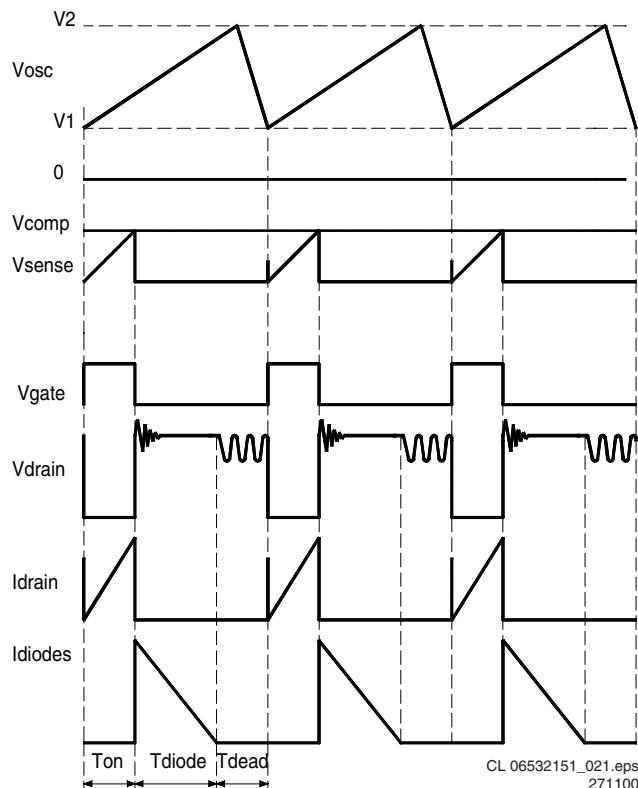


Figure 8-13

## 8.2.5 Regulation

Figure 4 shows the most relevant signals during the regulation phase of the power supply.


The oscillator voltage ramps up and down between V1 and V2. The voltage at the current sense terminal is compared every cycle with the output of the error amplifier Vcomp. The output is switched off when the current sense level exceeds the level at the output of the error amplifier.

TimeON phase : A drain current will flow from the positive supply at pin 1 through the transformer's primary winding, the MOSFET and Rsense to ground. As the positive voltage at pin 1 of the transformer is constant, the current will increase linearly and create a ramp dependent on the mains voltage and the inductance of the primary winding. A certain amount of energy is stored in the transformer in the form of a magnetic field. The polarity of the voltages at the secondary windings is such that the diodes are non-conducting.


TimeDIODE phase : When the MOSFET is switched off, energy is no longer supplied to the transformer. The inductance of the transformer now tries to maintain the current which has been flowing through it at a constant level. The polarity of the voltage from the transformer therefore

### 8.2.6 Oscilloscopes


#### Oscilloscopes

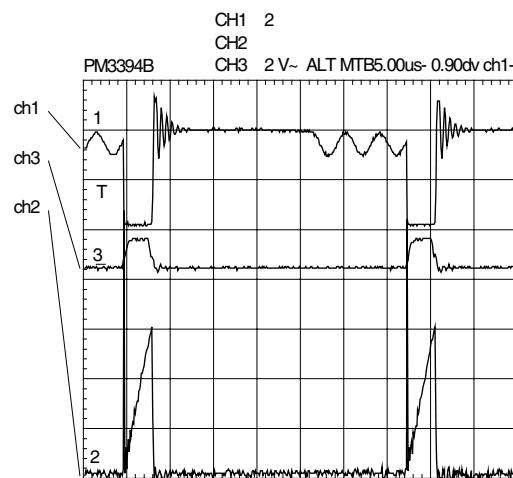

ch1 : Drain voltage  
ch2 : Drain current  
ch3 : Gate voltage

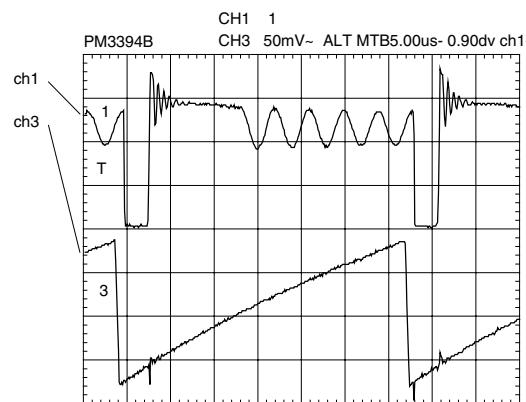

ch1 : Drain voltage  
ch2 : Oscillator voltage

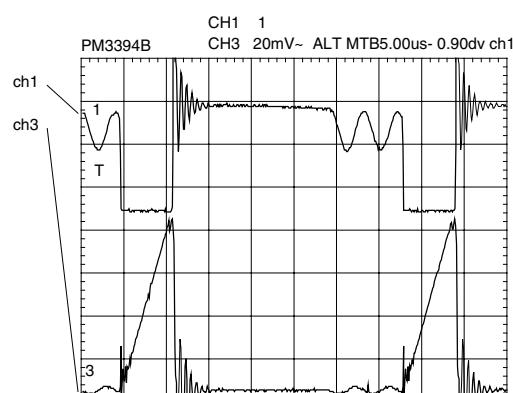

ch1 : Drain voltage  
ch3 : Sense voltage

CL 06532151\_022.eps  
301100

### 8.2.7 Circuit description

#### **Input circuit**

The input circuit consists of a lightning protection circuit and an EMI filter.

The lightning protection comprises R3120, gasarrestor 1125 and R3124.

The EMI filter is formed by C2120, L5120, C2125 and R3124. It prevents inflow of noise into/from the mains.

#### **Primary rectifier/smoothing circuit**

The AC input is rectified by rectifier bridge 6102 and smoothed into C2121. The voltage over C2121 is approximately 300V. It can vary from 100V to 390V.

#### **Start circuit and Vcc supply**

This circuit is formed by R3123, R3134, C2129, D6129, R3129, R3111, C2133 and C2111.

When the power plug is connected to the mains voltage, the stabilised voltage over D6129(24V) will charge C2133 via R3129. When the voltage reaches 14,5V across C2111, the control circuit of IC7110 is turned on and the regulation starts. During regulation, Vcc of IC7110 will be supplied by the rectified voltage from winding 7-9 via L5132, D6132 and C2133.

#### **Control circuit**

The control circuit exists of IC7110, C2102, C2104, C2107, C2109, C2110, R3102, R3103, R3104, R3107, R3108, R3109 and R3110. C2102 and R3110 define the frequency of the oscillator.


#### **Power switch circuit**

This circuit comprises MOSFET 7125, Rsense 3126, 3127 and 3128, R3125, C2127, L5125, R3112 and R3113. R3125 is a pull-down resistor to remove static charges from the gate of the MOSFET.

#### **Regulation circuit**

The regulation circuit comprises opto-coupler 7200 which isolates the error signal from the control IC on the primary side and a reference component 7201. The TL431(7201) can be represented by two components:

- a very stable and accurate reference diode
- a high gain amplifier

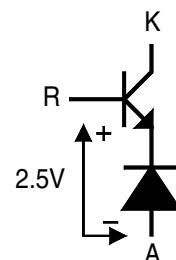

CL 06532151\_023.eps  
271100

**Figure 8-15**

TL431 will conduct from cathode to anode when the reference is higher than the internal reference voltage of about 2.5V. If the reference voltage is lower, the cathode current is almost zero.

The cathode current flows through the LED of the opto-coupler. The collector current of the opto-coupler flows through R3106, producing an error voltage, connected to voltage feedback pin 14 of IC7110.

#### **Overvoltage protection circuit**

This circuit consist of D6114, C2114, R3115and R3116.

**Figure 8-14**

When the regulation circuit is interrupted due to an error in the control loop, the regulated output voltage will increase (overvoltage). This overvoltage is sensed on the primary winding 7-9. When an overvoltage longer than 2.0 $\mu$ s is detected, the output is disabled until Vcc is removed and then re-applied. The power supply will come in a hiccup mode as long as the error in the control loop is present.

#### Secondary rectifier/smoothing circuit

There are 5 rectifier/smoothing circuits on the secondary side. Each voltage depends on the number of windings of the transformer.

The -8V supply is regulated by voltage regulator 7249.

#### On/off circuit

In off mode pin 1 and pin 2 of connector 0206 are connected. The high voltage (-8V, +12V) over opto coupler 7200 forces this one to conduct. IC 7110 is switched off

#### 8.2.8 Troubleshooting PSU CDR3-ECO

##### Faultfinding diagram

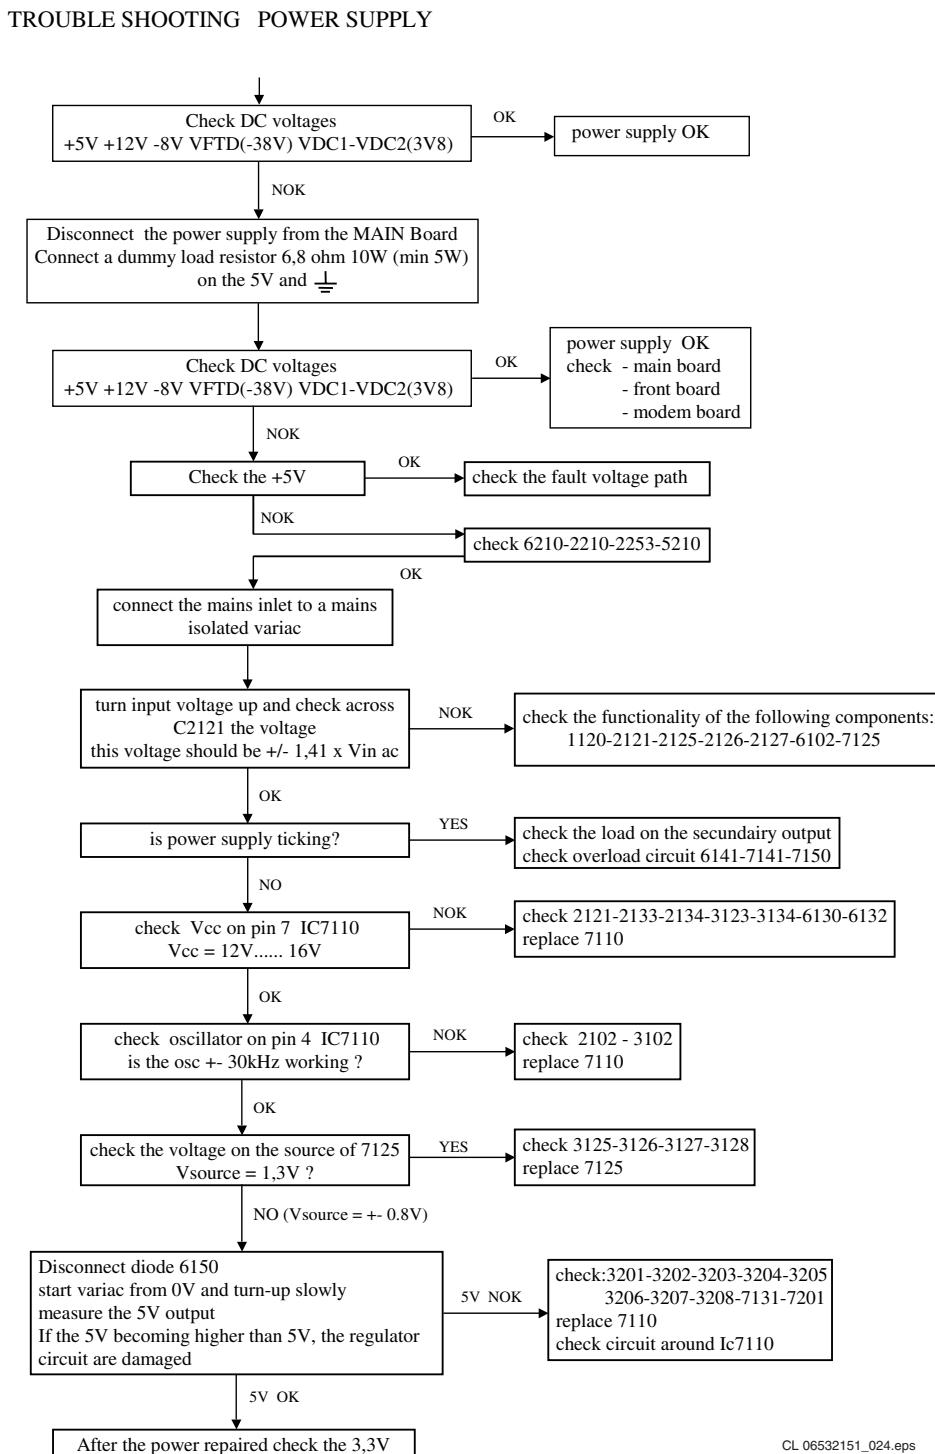


Figure 8-16

## 8.3 CD Main Board

The CD main board is built around the compact disc mechanism VAM1250 and a loader 1250. The CDM delivers diode signals and an unequalised high frequency signal. These signals are necessary inputs for the decoder CD10. Based on these signals the decoder will control the disc. The decoder is able to control the sledge, focus motor, radial motor and turn table. When everything is "locked", the decoder delivers a digital output according to IEC958 standard, subcode to the microprocessor and I2S for reproducing analog audio signals by means of a D/A converter.

The microprocessor controls the CD10 and is slave of the master processor on the CDR main board in the CDR779. Both processors communicate via a DSA connection (data, strobe and acknowledge).

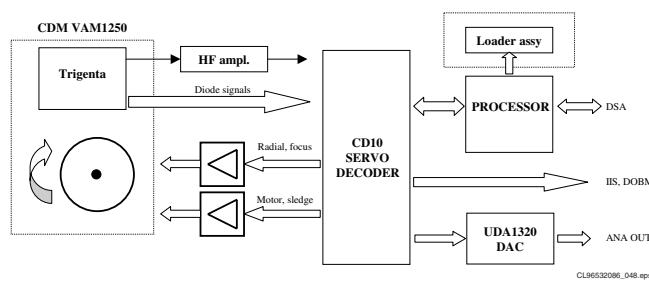


Figure 8-17

### 8.3.1 Supply Voltages

#### Description

The CD main board receives +5V and +12V from the CDR main board via respectively pin 16 and pin 15 of connector 1208. The +5V is split up into +5VHF and +5V. The +5VHF is used mainly for the diode currents and the HF-amplifier. The +5V is used for the digital part of the board. On the board a +3V3 is made from the +5V for the decoder CD10 and an A3V3 for the DAC UDA1320. The +12V is split up into A12V for the audio output stage and +12V for the power drivers of the CDM.

#### Measurements

Connect following supplies to next pins :

- +5V + 5% to pin 16 of connector 1208.
- +12V + 5% to pin 15 of connector 1208.
- Ground reference to pin 17 of connector 1208.

Keep microprocessor 7202 in reset by forcing pin 7 of connector 1208 to +5V. Check the following voltages :

Point	Voltage
Position 1000 pins 1,3	+5V ± 5%
Position 7000 pins 5,17,21,57	+3.3V ± 5%
Position 7005 pin 14	+5V ± 5%
Position 7020 pins 25	+5V ± 5%
Position 7020 pins 26,27,28	+10 ± 10%
Position 7021 pin 5	+12V ± 10
Position 7022 pin 5	+12V ± 10
Position 7025 pin 16	+5V ± 5%
Position 7202 pin 38	+5V ± 5% ( other appl. 3V3 possible)
Position 7309 pins 4,13	+3V3 ± 5%
Position 7120 pin 8	+12V ± 10

CL96532086\_049.eps  
080999

Figure 8-18

### 8.3.2 Clock Signals

#### Description

The microprocessor has its own Xtal or resonator of 12MHz. The CD10 needs a clock of 8.4672MHz + 100ppm. This speed also relates to the disc speed. To avoid locking problems between the two drives in the CDR779, both drives run on the same clock. Therefore the CD main board gets the clock for the decoder from the CDR main board via pin 2 of connector 1208.

The DAC needs a system clock to drive its internal digital filters and to clock the I2S signals from the decoder. In our case this is 11.2896MHz (CL11) generated by the CD10.

#### Measurements

- Connect the power supply as described above in "1.1.1. Supply Voltages".
- Connect on pin 2 of position 1208 a clock signal of 8.4672 MHz ( 100ppm minimum rise time of 50ns and at TTL level (0V and +5V).
- Keep microprocessor 7202 in reset by forcing pin 7 at position 1208 to +5V.
- Release the reset. Now, the processor will reset the CD10 for at least 75µs.
- The output clock CL11 should be available now at pin 42 of the CD10.

Check the following frequencies :

Point	Frequency
Position 7000 pin 16	8.4672 MHz ± 100ppm
Position 7202 pins 14,15	12MHz ± 5%
Position 7309 pin 6	11.2896 MHz ± 100ppm
Position 7309 pin 1	2.1168 MHz ± 100ppm
Position 7309 pin2	44.1kHz ± 100ppm

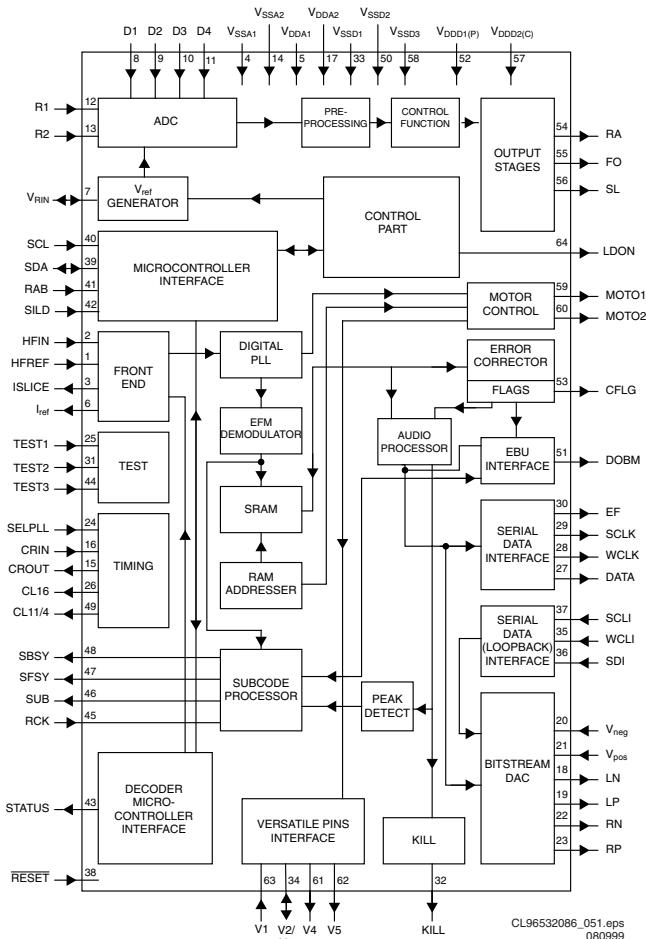
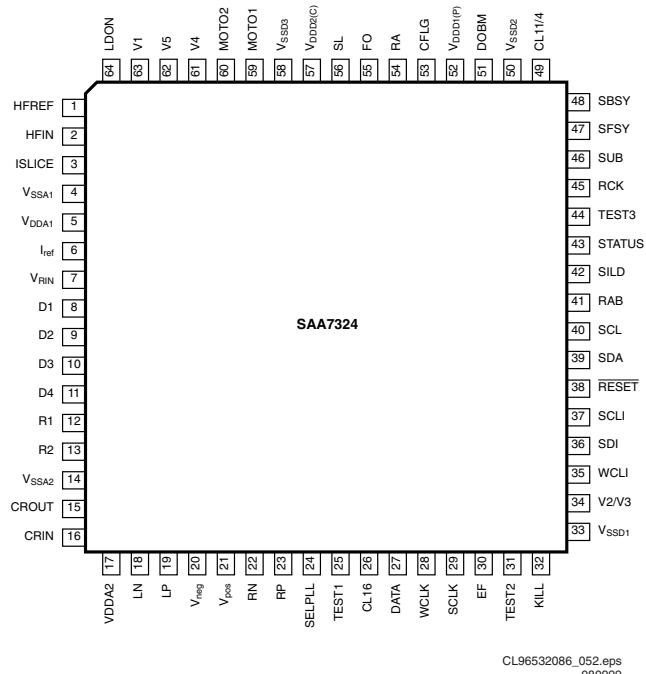
CL96532086\_050.eps  
080999

Figure 8-19

### 8.3.3 CD10 Decoder/Servo SAA7324 (7000)

#### Description

The CD10 is a single chip combining the functions of a CD decoder, digital servo and bitstream DAC. The decoder/servo part is based on the CD7. The decoding part supports a full audio specification and can operate at single speed (n=1) and double speed (n=2).

**Block Diagram****Figure 8-20****Pin Configuration****Figure 8-21****8.3.4 TDA7073A Power Drivers (7021, 7022)****Description**

The TDA7073A is a dual power driver circuit for servo systems with a single supply. In this configuration it is used to drive the sledge, tray, focus and radial.

**Measurements**

Keep microprocessor 7202 in reset by forcing pin 7 of connector 1208 to +5V. Connect the power supply as described above in "1.1.1. Supply Voltages". Check the following voltages :

Pin	Location	Value
5	7021	12V ± 10%
5	7022	12V ± 10%
1	7022	1.65V ± 10%
2	7022	1.65V ± 10%
6	7022	1.65V ± 10%
7	7022	1.65V ± 10%
1	7021	5.0 ± 10%
2	7021	5.0 ± 10%
6	7021	1.65V ± 10%
7	7021	1.65V ± 10%

CL96532086\_053.eps  
080999**Figure 8-22**

Pin	Location	Value DC
9	7022	FOC
12	7022	FOC
13	7022	RAD
16	7022	RAD
9	7021	SLE
12	7021	SLE
13	7021	TRAY-
16	7021	TRAY+

CL96532086\_054.eps  
080999**Figure 8-23****8.3.5 BA6856FP Turn Table Motor Driver (7020)****Description**

This component is a 3 phase, full wave pseudo linear driving system with inbuilt Hall Bias circuit and 3 phase parallel output.

**Measurements**

Keep processor 7202 in reset by forcing pin 7 of connector 1208 to +5V. The outputs 9, 10, 11 of connector 1006 are 0V. Pin 21 of the motor driver 7020 is 2.5V ( 10% ). Pin 22 of the motor driver 7020 is 2.5V ( 10% ). Pin 23 of the motor driver 7020 is 0V. Pin 19 of the motor driver 7020 is 5V ( 10% ). Put the processor out of reset to continue the measurement. Check MOT1 at pin 59 of CD10. The duty cycle of the output should be 50%. Check wave form at pin 11 of 7005-D : amplitude 5V + 5% duty cycle 50%.

The motor driver 7020 can be measured dynamically by connecting a hall motor to the application panel. Apply a pulse of 1V 10Hz and 15% duty cycle to pin 22 (Ec) as input value with reference to pin 21 (Ecr=2.5V). Measure the output signals on the driver. This will give as response a square wave on pin 17 and pin 18. When a positive voltage

is applied, the square wave on pin 17 will go ahead of the square wave on pin 18.

All signals will have a value as shown in the truth table.  
Check the following output signals :

### Motor controller truth table

Input conditions conn 1006 pin						Outputs conn 1006			Test points on driver		
6	8	4	7	3	2	9	10	11	18	17	16
U+	U-	V+	V-	W+	W-	UCOIL	VCOIL	WCOIL	HALL_U	HALL_V	HALL_W
L	M	H	M	M	M	6V	0V	0V	0V	5V	
H	M	L	M	M	M	0V	6V	6V	5V	0V	
M	M	L	M	H	M	0V	6V	0V	0V	5V	
M	M	H	M	L	M	6V	0V	6V		5V	0V
H	M	M	M	L	M	0V	0V	6V	5V		0V
L	M	M	M	H	M	6V	6V	0V	0V		5V

CL96532086\_055.eps  
080999

Figure 8-24

### Hall-elements input signal voltage levels

Input voltage	Level	Tolerance	Unit
H	2.8	0.1	V
M	2.5	0.1	V
L	2.2	0.1	V

CL96532086\_056.eps  
080999

Figure 8-25

### 8.3.6 Tray Control

#### Description

The tray control consists of a TDA7073A power driver (7021) controlled by the processor 7202 via pin 19 TRAYIN and pin 20 TRAYOUT. If pin 20 is low and pin 19 high, the TRAY+ signal at pin 16 of 7021 is forced to +8V and the TRAY- signal at pin 13 of 7021 to GND : the tray will open. If pin 20 is high and pin 19 low, TRAY+ becomes GND and TRAY- becomes +8V : the tray will close. If pin 19 and 20 of the processor have the same value, TRAY+ and TRAY- will have the same value as well : the tray stops moving.

#### Measurements

Keep processor 7202 in reset by forcing pin 7 of connector 1208 to +5V. Connect a load of  $15\Omega$ , 7W between pin 3 and 4 of connector 1002. Check the voltage over the load with TRAY+ (pin 3) as positive reference. Check also the levels of pins 19 and 20 of the processor.

U TRAY+,TRAY- = <100mV

Pin 20 = +5V

Pin 19 = +5V

Force pin 20 of the processor to ground, and check the voltages.

U TRAY+,TRAY- = -6.5V( 10%

Pin 20 = +0V

Pin 19 = +5V

Force pin 19 of the processor to ground as well and check the levels again.

U TRAY+,TRAY- = <100mV

Pin 20 = +0V

Pin 19 = +0V

Release pin 20 of the processor and check the levels.

U TRAY+,TRAY- = 6.5V( 10%

Pin 20 = +5V

Pin 19 = +0V

Release pin 19 of the processor and check the levels again:

U TRAY+,TRAY- = <100mV

Pin 20 = +5V


Pin 19 = +5V

### 8.3.7 HF Path

## *Description*

The pre-amplified HF-signal is presented to both n=1 and n=2 amplifier circuits. The mux/demux switches via software and micro processor controlled S1 and S2 lines between either one of the amplified n=1 or n=2 signals. The signal will

then follow another amplification and filtering circuit. The filtering again is controlled by the S1 and S2 lines, dependant on whether the disc starts up (speed n=1, S1 and S2 Low), disc plays at speed n=1 (S1 Low, S2 High) or disc plays at speed n=2 (S1 and S2 High).

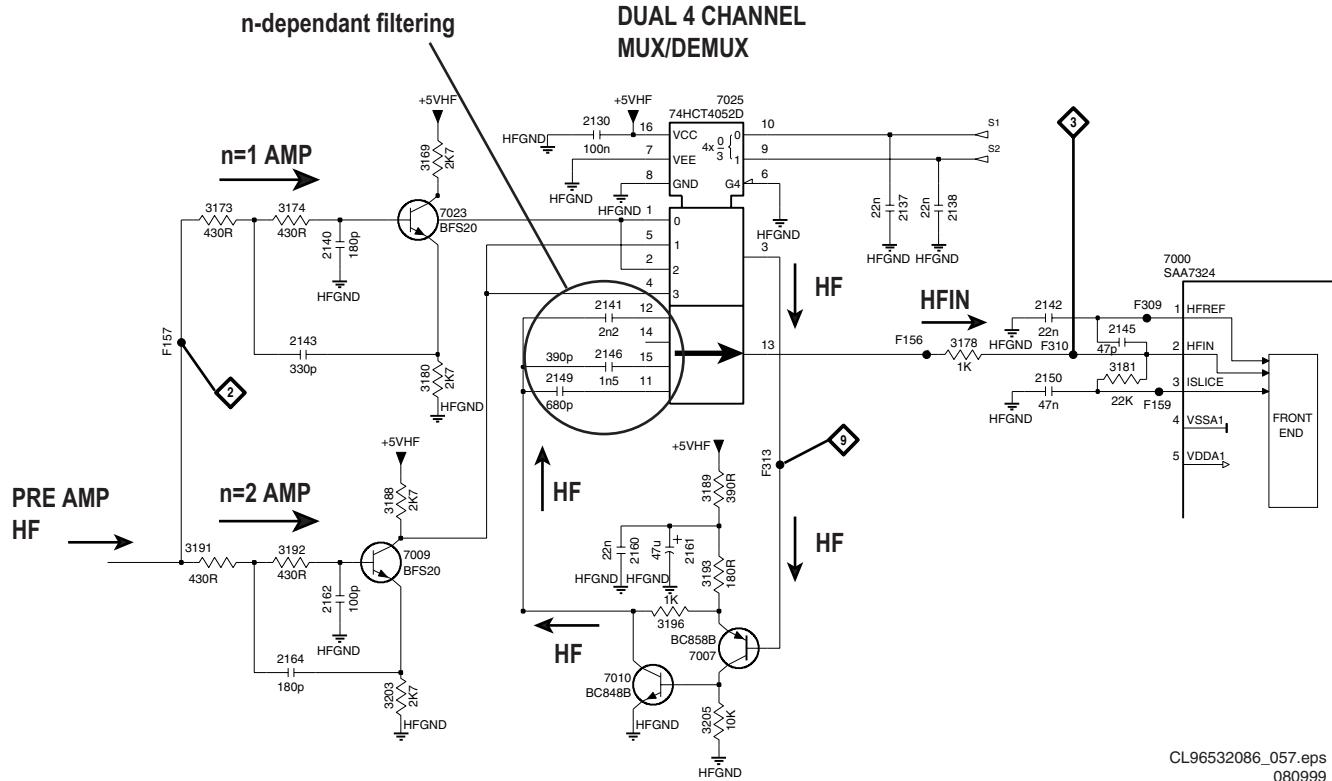

**Figure 8-26**

## *DC Settings*

Set the power and reset connections as described above in "1.1.1. Supply Voltages". Check the following voltages :

Force	Pin	Location	Measure
	Emitter	7006	$2.4 \pm 10\%$
S1 and S2 "HIGH"	Collector	7010	$1.9 \pm 10\%$
S1 and S2 "LOW"	Collector	7010	$1.9 \pm 10\%$
S1 and S2 "HIGH"	13	7025	$1.6 \pm 10\%$
S1 and S2 "LOW"	13	7025	$1.6 \pm 10\%$
S1 and S2 "HIGH"	3	7025	$3.2 \pm 10\%$
S1 and S2 "LOW"	3	7025	$3.2 \pm 10\%$

**Figure 8-27**

**Transfer Characteristics**

Set the power and reset connections as described above in "1.1.1. Supply Voltages". Connect a function generator via a serial resistor of 1k5 to pin 4 of connector 1000. Use the

function generator as a sine wave generator with output level of 1Vtt. Check this AC value with an AC mV-meter connected to the input (pin 2) of the CD10 (7000) :

Frequencies	S1 and S2 "low"		S1 and S2 "high"	
	Input V <sub>AC</sub>	Pin 2 at 7000	Input V <sub>AC</sub>	Pin 2 at 7000
300 Hz	200mV	< 100mV ± 20%	200mV	< 100mV ± 20%
10 kHz	200mV	295mV ± 20%	200mV	330mV ± 20%
100 kHz	200mV	310 mV ± 20%	200mV	330 mV ± 20%
300 kHz	200mV	385 mV ± 20%	200mV	335 mV ± 20%
800 kHz	200mV	655 mV ± 20%	200mV	485 mV ± 20%
1.5 MHz	200mV	1.1V ± 20%	200mV	760 mV ± 20%
3MHz	200mV	1.1V ± 20%	200mV	1.1V ± 20%

CL96532086\_059.eps  
080999

Figure 8-28

**HFDET Setting**

Set the power and reset connections as described above in "1.1.1. Supply Voltages". Connect a function generator via a serial resistor of 1k5 to pin 4 of connector 1000. Use the

function generator as a sine wave generator with output level of 500 kHz, 1Vtt. Check this AC value with an AC mV-meter :

Location	Voltage DC		Voltage AC
	No HF	HF	
F190	4.8V± 20%	4.8V± 20%	175mV± 20%
F192	< 100mV	1.1V± 20%	-
F206	4.9V± 20%	150mV± 20%	-

CL96532086\_060.eps  
080999

Figure 8-29

### 8.3.8 Audio Part - DAC

**Description**

The DAC used, is the UDA1320 bit stream, continuous calibration. I2S signals from various formats can be entered at pins 1,2 and 3. If these signals are in phase with the delivered system clock at pin 6, the DAC will reproduce analog output signals at pins 14 and 16. 0dB level is 0.85Vrms. These analog signals are at 1.65Vdc level. The DAC has features which can be checked on the input pins. Mute will switch off the analog signals. De-emphasis is not used, since this is done in the decoder. Attenuation of -12dB is not used because this is also done in the decoder.

**I2S**

I2S is a kind of digital audio format, consisting out of 3 lines : CLOCK, WORDSELECT and DATA.

**WORD-SELECT**

Word select (WS) indicates whether the data-sample is from the left or the right audio-channel. It has the same frequency as the sample rate of the digital audio signal. This can be 32, 44.1 or 48kHz. Normal polarity is low for a left sample and high for a right sample. So within the low state of the WS-line the data bits for the left channel are transferred, and within the high state the data bits of the right channel are transferred.

**CLOCK**

The CLOCK signal (CLK) indicates when DataTips must be set, and when DataTips must be read. The frequency depends on the speed of the I2S-bus, but is always a factor of the frequency of the WS-signal. It can be 48x, 64x, 96, 128x... In our case it is 48x the sample rate frequency = 2.1168MHz. The signal is in phase with the WS-signal.

Transition of the WS always happens on a falling edge of the CLK.

**DATA**

DATA contains all data-bits. Data bits are set by the transmitting device, and read by the receiving device. The position of the DATA-bits within the WS-signal is very important. There are several formats for this. In our case we always use Philips I2S format, no Japanese or Sony format. The number of data-bits per channel depends on the used devices.

Timing of the I2S-bus, in case of Philips I2S is shown in the next figure :

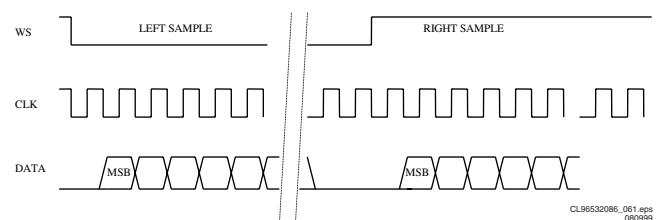
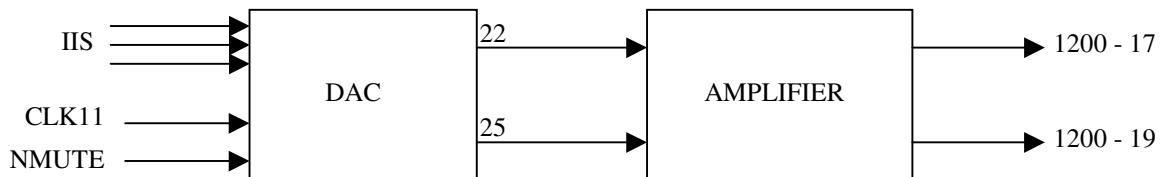


Figure 8-30

CL96532086\_061.eps  
080999

***Measurements***

CL96532086\_062.eps  
080999

**Figure 8-31**

Keep processor 7202 in reset by forcing pin 7 of connector 1208 to +5V. This puts the processor outputs in tristate.

Check the reset at pin 4 of processor 7202 to make sure that the processor is in reset.

Now, force port 0-4 pin 33 at 7202 to 0V to set the decoder outputs (SCLK, WCLK, DATA, and CL11).

Check the MUTE pin 11 at 7309 : this pin should be low.

Connect via an I2S generator I2S-signals to the DAC :

Pin 1 at 7309: SLCK.

Pin 2 at 7309: WCLK.

Pin 3 at 7309: DATA.

Connect also the SYSCLK pin 6 at position 7309 to a clock signal of 11.2896 MHz ( 100ppm).

Generate an I2S signal equivalent with a sine wave of 1kHz at 0dB for both left and right channels.

Check if 0.8 VRMS at pins 14 and 16 at location 7209 with a DC of 1.65VDC.

Check if 1.7 VRMS ( 2 dB at connector pins 1and 3 at location 1209.

Force MUTE Pin 11 at 7309 high.

Measure again at pins 1 and 3 at location 1209 : both signals should be at -90 dB.

## 9. List of Abbreviations

SIGNAL NAME	SIGNAL FLOW	FUNCTION AND DESCRIPTION
+12V	main supply voltage from PSU	+12V supply voltage from PSU
+12VA	supply voltage	+12V supply voltage for Audio part
+5V	main supply voltage from PSU	+5V supply voltage from PSU
+5VA	supply voltage	+5V supply voltage for Audio part
+9SRVPWR	IC7558 -> IC7240	PoWeR supply for SeRVo driver IC
12VPWR	supply voltage	+12V supply voltage for servo part
-8V	main supply voltage from PSU	-8V supply voltage from PSU
-8VA	supply voltage	-8V supply voltage for Audio part
A(1:20)	IC7701 -> R3818, R3819, R3820, R3821, R3897 -> IC7703	Address lines 1 to 20 between DASP and flash ROM
A(10:20)	IC7701 -> R3819, R3820, R3821 -> IC7702	Address lines 10 to 20 between DASP and DRAM
A1	IC7010 -> IC7270	amplitude of the "land" reflection relative to the average EFM, voltage output, OPC input
A1LF, A2LF	CONN1000 -> IC7010	satellite photo diodes A1, A2 current output
A2	IC7010 -> IC7270	amplitude of the "pit" reflection relative to the average EFM, voltage output, OPC input
A-8V	supply voltage	-8V supply voltage for servo part
AEGER		Analog Error signal Generator for Recordable
AINTON	IC7008 -> IC7010	Alpha INTegrator ON (to AEGER)
ALE	IC7270 -> R3213 -> IC7209, IC7300 IC7270 -> R3230	Address Latch Enable; external address latch strobe line, freeze address when low
ALPHA0	IC7270 -> IC7010	analog voltage mode output from OPC D/A converter
ALS	IC7008 -> IC7010	Alpha Loop Switch (to AEGER)
ASTROBE	IC7008 -> IC7010	Alpha STROBE (to AEGER)
ATIP		Absolute Time In Pre-groove (sync signal)
ATIPSYNC	IC7300 -> IC7270	ATIP SYNC signal
ATT	IC7270 -> R3717, R3722 IC7270 -> IC7701	ATTenuation request from MACE2 to audio DAC, active low; means that the output can be attenuated in case of search activities
B1LF, B2LF	CONN1000 -> IC7010	satellite photo diodes B1, B2 current output
BCLK	IC7701 -> R3898A -> IC7300	I2S1 BitCLocK from DASP to CDR60 (playback and record)
BE_RESET	IC7701 -> R3261 -> IC7270 IC7701 -> R3716	Basic Engine RESET, active high
BIASC	IC7008 -> R3056	BIAS Current switch CDRW output
BKPT	CONN1819, R3907 -> IC7701	JTAG mode select / debug mode BreAkPoinT
C1LF, .. , C4LF	CONN1000 -> IC7010	Central photo diodes C1, C2, C3, C4 current output
CAGAIN	R3016, R3115 -> IC7010	set-point laser power on disc, current input
CAHF	CONN1000 -> C2374	Central Aperture (central photo diodes) High Frequency current output (C1+C2+C3+C4)
CALF	IC7010 -> IC7270	Central Aperture (central photo diodes) Low-pass Filtered signal (DC coupled EFM signal), voltage output, OPC input
CAS0	IC7701 -> IC7702	Column Address Strobe DRAM for upper byte
CAS1	IC7701 -> IC7702	Column Address Strobe DRAM for lower byte
CDR	IC7008 -> IC7355	CDR strategy detected output (active high)
CDR60CFLG	IC7300 -> R3382B -> CONN1812	serial output of error corrector status information of the CDR60-decoder, to be measured at test connector
CDR60CL1	IC7300 -> R3382C -> CONN1812	output of Clock signal for testing system clock of IC CDR60 at test connector
CDR60CS	IC7270 -> R3235B -> R3702, IC7300	CDR60 Chip Select, active high
CDR60INT	IC7300 -> IC7270	CDR60 INTerrupt line, active low
CDR60LWRT	IC7300 -> R3048	CDR60 Laser WRiTTe control output
CDR60MEAS1	IC7300 -> R3382A -> CONN1812	serial output of information about jitter, PLL frequency and asymmetry of bit recovery block in CDR60, to be measured at test connector

CDR60PLL	IC7270 -> R3305 -> IC7300	CDR60 clock multiplier enable, active high
CDRW	IC7355D -> IC7355CIC7355D -> CONN1000	inverted CDR-strategy-detected signal
CLK_OUT	IC7701 -> R3771 -> CONN1819	system CLocK OUT
CLK_SYS	IC7701 -> R3727, R3731	oscillator output
COS-	CONN1220 -> IC7225B	Hall feedback signal from sledge motor
COS+	CONN1220 -> IC7225B	Hall feedback signal from sledge motor
CSFLASH	IC7701 -> IC7703	Chip Select for FLASH or boot device
CSRAM	IC7270 -> R3235A -> R3703, IC7802	Chip Select SRAM, active low
D(16:31)	IC7701 <-> R3822, R3823, R3824, R3825 <-> IC7703, IC7702	Databus bit 16 to 31 between DASP, flash ROM and DRAM
D3V3	supply voltage	+3,3V supply voltage for Digital part
D5V	supply voltage	+5V supply voltage for Digital part
D5VS	supply voltage	+5V supply voltage for Servo part
DALPHA	IC7010 -> R3037	ALPHA error signal for laser power control
DASP		Digital Audio Signal Processor
DATAI	IC7701 -> R3898C -> IC7300	I2S1 DATA In from DASP to CDR60 (recording)
DATAO	IC7300 -> R3314 -> IC7701	I2S1 DATA Out from CDR60 to DASP (playback)
DEEMP	IC7270 -> R3719, R3724IC7270 -> IC7701	DE-EMphasis control for audio DAC from MACE2, active high; means that de-emphasis is needed in digital filter
DELTAP	IC7016 -> R3126	DELTA Power current source drive signal from XDAC
DIG_OUT_C	IC7701 -> R3706 -> C2707, CONN1400	Common DIGital OUTput (consumer)
DISPLAY_INT	F934 -> R3812, IC7701	DISPLAY INTerrupt
DMON	IC7270 -> R3324	power save at stop, active low
DOBM_CD	CONN1708, C2731 -> R3757 -> R3903 -> IC7701	Digital Output (EBU output) from CD player in CDR779 to DASP
DOBM_CDR	IC7300 -> R3382D -> C2379, IC7701	Digital Output (EBU output) from CDR60 to DASP
DRAM_RW	IC7701 -> IC7702	Read/Write strobe for DRAM
DSA_ACK_CD	IC7701 <-> R3830 <-> R3831 <-> CONN1708IC7701 <-> R3830 <-> C2735	Data/Strobe/Acknowledge serial communication between DASP and CD-player in CDR779
DSA_ACK_CD_R	IC7701 -> R3729 -> IC7270, CONN1830IC7701 -> R3729 -> R3769	Data/Strobe/Acknowledge serial communication between MACE2 and DASP for CDR; acknowledge input for MACE2 is strobe output for DASP
DSA_DATA_CD	IC7701 <-> R3828 <-> R3829 <-> CONN1708IC7701 <-> R3828 <-> C2733	Data/Strobe/Acknowledge serial communication between DASP and CD-player in CDR779
DSA_DATA_CD_R	IC7270<->R3246 <-> R3813 <-> IC7701, CONN1830IC7270<->R3246 <-> R3767	Data/Strobe/Acknowledge serial communication between MACE2 and DASP for CDR
DSA_STR_CD	IC7701 <-> R3835 <-> R3832 <-> CONN1708IC7701 <-> R3835 <-> C2734	Data/Strobe/Acknowledge serial communication between DASP and CD-player in CDR779
DSA_STR_CD_R	IC7270 -> R3245 -> IC7701, CONN1830IC7270 -> R3245 -> R3768	Data/Strobe/Acknowledge serial communication between MACE2 and DASP for CDR (strobe output for MACE2 is acknowledge input for DASP)
DSCLK	CONN1819, R3908 -> IC7701	reset in / Debug Serial CLocK in
DSI	CONN1819, R3909 -> IC7701	JTAG reset in / Debug Serial clock In
EFM		Eight to Fourteen Modulation = modulation method used for CD storage, also the actual raw CD signal as written or read on or from the CD disc
EFMCLK	IC7300 -> IC7008	EFM CLocK output
EFMDATA	IC7300 -> IC7008	EFM DATA output
EFMTIM3		EFM TIMing generator
EPON	IC7008 -> R3010IC7008 -> C2010	Erase Power ON
EPONO	IC7008 -> R3107	Erase Power ON Open drain output
EPONRC	R3004 -> CONN1000	Erase Power ON (after RC circuit)
ERASEC	IC7008 -> R3087	ERASE Current switch CDRW output
ERON	IC7008 -> IC 7010	ERror ON (to AEGER)
EXT_DIG_IN1	CONN1400 -> IC7701	EXTernal DIGital INput 1

EXT_DIG_IN2	CONN1702, C2767, C2721 -> R3701 -> IC7701	EXTernal DIGital INput 2 (CDR779 only)
EXT_OPT_IN	CONN1400, C2722 -> R3708 -> IC7701	EXTernal OPTical INput
F_READY	IC7703 -> R3817 -> IC7701CONN1701 -> IC7701	Flash READY detection, this line is forced low as long as the flash is busy with erase or program algorithm
F_RW	IC7701 -> IC7708B	Read/Write strobe for Flash ROM
FEN	IC7010 -> IC7270	Focus Error Normalized current output
FOC-	IC7240 -> CONN1000	FOCUS actuator drive signal negative connection
FOC+	IC7240 -> CONN1000	FOCUS actuator drive signal positive connection
FS30V	D6500 -> CONN1000	Forward Sense diode 30V power supply
FSA	CONN1000 -> T7119, T7120	Forward Sense photo diode current output
FSCLR	IC7008 -> IC7126	Forward Sense signals CLeaR switch
FSOF	IC7008 -> R3052	Forward Sense photo diode sampling OFF
FSON	IC7008 -> R3051	Forward Sense photo diode sampling ON
FSR	R3040 -> IC7270	Forward Sense signal while Reading for read control loop
FSRS	IC7008 -> IC7126D	Forward Sense photo diode Read Sampling
FSW	R3050 -> IC7270	Forward Sense signal while Writing for write control loop
FSWS	IC7008 -> IC7126C	Forward Sense photo diode Write Sampling
FWEN	IC7270 -> IC7208, R3806	Flash EPROM Write ENable
HALL_U, HALL_V, HALL_W	IC7330 -> IC7300, CONN1812	HALL feedback signals from turn table motor via hall motor driver
HFS0	IC7270 -> R3249 -> IC7360	select HF circuit
I2C		Inter IC
I2C_CLK	IC7701, R3711 -> R3715 -> C2709 -> F934IC7701, R3711 -> IC7801	I2C CLock line used for display slave processor and digital potmeter
I2C_DATA	IC7701, R3712 ->> R3713 ->> C2708, R3714 ->> F934IC7701, R3712 ->> IC7801	I2C DATA line used for display slave processor and digital potmeter
I2CL	R3248B -> IC7207, R3247C	I2C CLock line
I2CSCL	IC7207 -> IC7008IC7207 -> IC7010IC7207 -> R3248B	I2C Serial CLock line
I2CSDA	IC7207 ->> IC7008IC7207 ->> IC7010IC7207 ->> R3248A	I2C Serial DAta line
I2DA	R3248A ->> IC7270, R3247D	I2C DAta line
I2S_BCLK_AI	IC7701 -> R3814 -> IC7406	I2S4 Bit CLock for CODEC (ADC for CDR779) Analog Input (record from analog source)
I2S_BCLK_AO	IC7701 -> R3894A -> IC7406	I2S2 Bit CLock for CODEC (DAC for CDR779) Analog Output
I2S_BCLK_CD	CONN1708, C2739 -> R3834 -> IC7701	I2S3 Bit CLock from CD player (record n=2) (CDR779 only)
I2S_BCLK_MIC	CONN1708, C2739 -> R3834 -> IC7701	I2S3 Bit CLock from MICrophone (CDR779 only)
I2S_DATA_AI	IC7406 -> IC7701	I2S4 DATA from CODEC (ADC for CDR779) Analog Input (record from analog source)
I2S_DATA_AO	IC7701 -> R3894C -> IC7406	I2S2 DATA for CODEC (DAC for CDR779) Analog Output
I2S_DATA_CD	CONN1708, C2738 -> R3836 -> IC7701	I2S3 DATA from CD player (record n=2) (CDR779 only)
I2S_DATA_MIC	CONN1708, C2738 -> R3836 -> IC7701	I2S3 DATA from MICrophone (CDR779 only)
I2S_WS_AI	IC7701 -> R3743 -> IC7406	I2S4 Word CLock for CODEC (ADC for CDR779) Analog Input (record from analog source)
I2S_WS_AO	IC7701 -> R3894B -> IC7406	I2S2 Word CLock for CODEC (DAC for CDR779) Analog Output
I2S_WS_CD	CONN1708, C2740 -> R3833 -> IC7701	I2S3 Word CLock from CD player (record n=2) (CDR779 only)
I2S_WS_MIC	CONN1708, C2740 -> R3833 -> IC7701	I2S3 Word CLock from MICrophone (CDR779 only)
I2S1_MS	IC7270 -> R3910, IC7701	I2S1 Master-Slave interrupt from MACE2
IE	T7121 -> CONN1000	laser Erase drive current signal
INT_COPY_ANA	IC7701 -> R3721 -> IC7401IC7701 -> R3721 -> R3410	select INTernal COPY ANAlog (in case of copy protected disc or track on CD drive) (CDR779 only)
IR	T7135 -> CONN1000T7135 -> R3056T7135 -> IC7008	laser Read drive current signal
IW	T7122 -> CONN1000T7122 -> D6003	laser Write drive current signal

KEY_PRESSED	IC7706B -> R3816 -> IC7701	KEY PRESSED interrupt
KILL	T7560, T7561, R3560 -> CONN1400, R3424, R3428	KILL signal from power supply part to audio outputs
KILL_OUT	IC7701 -> R3532	disables the KILL activity from the PSU; 1 = no kill, 0 = kill active
L12V	supply voltage	+12V supply voltage for servo/Laser part
L3_CLK	IC7701 -> R3725 -> IC7406	L3 interface CLock line / control CODEC (not for CDR779)
L3_DATA	IC7701 <-> R3728 <-> IC7406	L3 interface DATA line with CODEC (not for CDR779)
L3_MODE	IC7701 -> R3735 -> IC7406	L3 interface MODE line selects data or address transfer mode for CODEC (not for CDR779)
L5V	supply voltage	+5V supply voltage for servo/Laser part
L-5V	supply voltage	-5V supply voltage for servo/Laser part
LASCK	IC7270 <-> R3248D	Clock line DAC LASer control
LASDACCK	R3248D <-> IC7016	Clock line DAC LASer control
LASDACDI	R3248C <-> IC7016	Data line DAC LASer control
LASDACLD	R3212 <-> IC7016	LoAld line DAC LASer control
LASDD	IC7270 <-> R3248C	Data line DAC LASer control
LASLD	IC7270 <-> R3238 <-> R3212IC7270 <-> R3232	LoAld line DAC LASer control
LEFT	CONN1708, C2743 -> IC7401C, IC7407C	audio output LEFT channel from CD-player in CDR779
LLP	IC7270 -> IC7300	Laser Low Power (active high), switches the laser from write to read power whenever the device tends to go offtrack
LWRT	R3048 -> IC7008	Laser WRiTe control input
MA(16:17)	IC7270 <-> IC7208	bank switch higher address lines
MA(8:15)	IC7270 <-> IC7802 <-> IC7208	address bus high byte
MACE2		Mini All Cd Engine (minus decoder + OPC + PCS + extra RAM)
MAD(0:7)	IC7270 <-> IC7209 <-> IC7802 <-> IC7208 <-> IC7300	bi-directional data bus / address bus low byte
MIRN	IC7010 -> IC7270	MIRror Normalized (disc reflection) current output
MOTO1	IC7300 -> IC7355A	turn table MOTOr control output
MRDN	IC7270 -> R3276 -> R3242A, IC7802, IC7300	Master ReaD, read strobe for external peripherals, active low
MUTE	IC7270 -> R3718, R3723IC7270 -> IC7701	MUTE control from MACE2 to DASP, active low
MWRN	IC7270 -> R3280 -> R3242B, IC7802, IC7300	Master WRite, write strobe for external peripherals, active low
NMUTE	IC7701 -> R3726, IC7406	MUTE output, low active
OFFTRACK	IC7270 -> IC7300	OFFTRACK detection flag
OPC		Optimum Power Calibration
P12VKILL	supply voltage	+12V supply voltage for KILL-circuit
PCS		Position Control Sledge
PCSCOS	IC7225B, C2229 -> IC7270, CONN1812	Position Control Sledge COS feedback signal
PCSSIN	IC7225A, C2227 -> IC7270, CONN1812	Position Control Sledge SIN feedback signal
PDAR		Photo Diode Amplifier Recordable
PERASE	R3036, R3031, R3030, R3029, R3028, R3027, R3020 -> IC7002C, R3043, T7113	laser Power switch for ERASE
POWER_UP	IC7270 -> R3243C,R3556, R3538	standby pin, high level activates essential powers necessary for full function; overrules HI_POWER setting
PPN	IC7010 -> IC7050C	Push-Pull signal, Normalized, balanced, voltage output
PRCOARSE	IC7016 -> R3057	drive signal from Power Read COARSE DAC for read current source
PRFINE	IC7016 -> R3058	drive signal from Power Read FINE DAC for read current source
PROF_EBU	IC7701 -> CONN1820	PROFessional digital output (CDR779 only)
PSENn	IC7270 -> R3260 -> IC7208IC7270 -> R3231	Program Store ENable; external ROM output enable line, active low
PW	R3081 -> IC7008	Write Power signal to OPC input of MACE2

PWB	IC7001C -> IC7016	drive signal to XDAC<->s for write and erase current sources and VCAGAIN
PWD	IC7016 -> IC7002BIC7016 -> IC7002C	drive signal from XDAC for write and erase current sources
PWMAX	IC7016 -> R3073	PW MAXimum signal from DAC used for determining set point for laser power during writing
PWMIN	IC7016 -> R3072	PW MINimum signal from DAC used for determining set point for laser power during writing
PWRITE	R3035, R3026, R3025, R3024, R3023, R3022, R3021 -> IC7002B, R3044, T7124	laser Power switch for WRITE
RAD-	IC7240 -> CONN1000	Radial actuator drive signal negative connection
RAD+	IC7240 -> CONN1000	Radial actuator drive signal positive connection
RAS0	IC7701 -> IC7702	Row Address Strobe DRAM
RCK	IC7300 -> R3319 -> IC7701	EIAJ subcode clock from CDR60 to DASP (CD text interface)
RDGAIN1	IC7008 -> R3054	forward sense ReaD GAIN switch 1
RDGAIN2	IC7008 -> C2027	forward sense ReaD GAIN switch 2
RDGAIN3	IC7008 -> C2060	forward sense ReaD GAIN switch 3
RE	IC7010 -> IC7215A	Radial Error signal for fast track counting, voltage output
RECORDING	IC7008 -> IC7010IC7008 -> CONN1000IC7008 -> IC7355C	RECORDING output (active high)
REN	IC7010 -> IC7270	Radial Error Normalized current output
RIGHT	CONN1708, C2742 -> IC7401A, IC7407A	audio output RIGHT channel from CD-player in CDR779
RXD_TOOL	CONN1818 -> IC7701	Receive of UART for test TOOL
S1V65	Referenve Voltage	1.65V delivered by IC7215B for Servo part
S2V9	Reference Voltage	2.9V delivered by IC7010 for Servo part
SEL_HP_OUT	IC7701 -> R3720 -> IC7407	SElect HeadPhone OUTput in DJ-mode (for CDR779 only)
SFSY	IC7701 -> R3756 -> IC7300	EIAJ subcode synchronisation from DASP to CDR60 (CD text interface)
SIN-	CONN1220 -> IC7225A	Hall feedback signal from sledge motor
SIN+	CONN1220 -> IC7225A	Hall feedback signal from sledge motor
SL-	IC7240 -> R3265 -> CONN1220	SLedge motor drive signal negative connection
SL+	IC7240 -> CONN1220	SLedge motor drive signal positive connection
SRSTN	IC7270 -> R3243B, IC7300	Slave ReSeT out (CDR60 reset), active low
STANDBY	IC7270 -> R3807 -> R3887 -> IC7701	STANDBY pin, high level activates essential powers necessary for full function; overrules HI_POWER setting
SUB	IC7701 -> R3710 -> IC7300	EIAJ subcode data from DASP to CDR60 (CD text interface)
SYS_CLK_11W	IC7701 -> R3732 -> IC7406	11.2896 MHz SYStem CLocK for AD/DA datapath
SYS_CLK_16W	IC7701 -> R3894D-> IC7706A	16.9344 MHz SYStem CLocK for producing SYS_CLK_BE
SYS_CLK_8W	IC7706A -> R3815 -> CONN1708	SYstem CLocK CD player (8.4672 MHz) (CDR779 only)
SYS_CLK_BE	IC7706A -> R3826 -> IC7270	SYstem CLocK Basic Engine (8.4672 MHz)
SYS_RESET	IC7701 -> R3758 -> CONNF934IC7701 -> R3770 -> T7707 -> CONN1708	SYSystem RESET to display assy (and CD player for CDR779)
TCK	CONN1819 -> R3906, IC7701	JTAG ClocK signal
TDSO	IC7701 -> CONN1819	JTAG Serial Data Out / debug data out
TERMB	IC7270 <-> CONN1818	UART connection with MACE
TLN	IC7010 -> IC7270	Track Loss Normalized current output
TR-	IC7240 -> CONN1200	TRay motor drive signal negative connection
TR+	IC7240 -> CONN1200	TRay motor drive signal positive connection
TRACE99_RXD	CONN1818 -> R3838, IC7701	TRACE99 test tool receive data
TRACE99_TXD	IC7701 -> CONN1818	TRACE99 test tool transmit data
TRAYIN	IC7270 -> IC7240	move TRAY IN line, active low
TRAYOUT	IC7270 -> IC7240	move TRAY OUT line, active low

TRAYSW	CONN1200 -> R3747CONN1200 -> R3748	TRAY SWitch signal from loader assy
TRAYSWF	R3748, C2214 -> IC7270	Filtered TRAY SWitch signal, low is completely out or in

TXD_TOOL	IC7701 -> CONN1818	Transmit of UART for test TOOL
U+, U-, V+, V-, W+, W-	CONN1330 -> IC7330	hall feedback signals from turn table motor to hall motor driver
UCOIL, VCOIL, WCOIL	IC7330 -> CONN1330	drive signals for turn table motor
VCAGAIN	IC7016 -> IC7005A	set-point laser power on disc, voltage output
VDC1	CONN1500 -> CONNF934	supply voltage for display assy
VDC2	CONN1500 -> CONNF934	supply voltage for display assy
VFO	IC7270 -> R3295 -> R3244	FOcus actuator drive output
VFTD	CONN1500 -> CONNF934	Voltage Fluorescent Tube Display (display assy)
VRA	IC7270 -> R3297 -> R3254	RAdial actuator drive output
VSL	IC7270 -> R3299 -> IC7240	SLedge actuator drive output
WCLK	IC7701 -> R3898B -> IC7300	I2S1 WordClocK from DASP to CDR60 (playback and record)
WOBBLE	IC7050C -> IC7300	analog WOBBLE signal of pre-groove detected by PPN-signal
WPON	IC7008 -> R3009IC7008 -> C2009	Write Power ON
WPONO	IC7008 -> R3106	Write Power ON Open drain output
WPONRC	R3003 -> CONN1000	Write Power ON (after RC circuit)
XDAC		multiplying DAC

# 10. Spare parts list

<b>CDR779</b>		2130	2022 029 00359	TAnF SM TAJ 10V 4U7 PM10 R	2602	4822 122 33575	220pF 5% 63V CASE	
<b>Mechanical Parts</b>								
0001	3104 127 12900	FRONT COMPLETE ASSY CDR779	2131	2022 029 00359	TAnF SM TAJ 10V 4U7 PM10 R	2603	5322 126 10511	1nF 5% 50V
0003	3104 127 08710	KEY UNIT MIDDLE ASSY CDR779	2132	5322 122 32448	10pF 5% 63V CASE	2604	5322 126 10511	1nF 5% 50V
0009	4822 410 11962	POWER BUTTON BLACK	2133	4822 126 14585	100nF 10% 50V	2605	5322 126 10511	1nF 5% 50V
0014	4822 459 10887		2134	4822 126 14585	100nF 10% 50V	2606	4822 122 33575	220pF 5% 63V CASE
0015	4822 454 13339		2135	4822 124 22339	100UE 16V	2607	4822 126 14585	100nF 10% 50V
0051	3104 124 05700	EASY JOG KNOB CDR779	2136	4822 124 22339	100UE 16V	2608	4822 124 23002	10μF 16V
0052	4822 492 51374	spring	2137	4822 124 22339	100UE 16V	2609	4822 126 14585	100nF 10% 50V
0053	3104 124 05620	TRANSPARENT FRAME BUTTON	2138	5322 122 32448	10pF 5% 63V CASE	2610	4822 124 23002	10μF 16V
0054	3104 124 05620	TRANSPARENT FRAME BUTTON	2139	5322 122 32654	63V 22nF PM10 R	2611	5322 124 11919	47μF 20% 6.3V
0076	3104 144 05730	SUSPENSION	2140	5322 122 32654	10pF 5% 63V CASE	2612	4822 126 14585	100nF 10% 50V
0077	3104 144 05730	SUSPENSION	2141	5322 122 32654	63V 22nF PM10 R	2613	4822 122 33575	220pF 5% 63V CASE
0078	3104 144 05730	SUSPENSION	2142	5322 122 32654	63V 22nF PM10 R	2614	4822 126 14585	100nF 10% 50V
0079	3104 144 05730	SUSPENSION	2143	5322 122 32654	63V 22nF PM10 R	2615	5322 124 11919	47μF 20% 6.3V
0165	4822 442 01506	COVER	2144	5322 122 32654	63V 22nF PM10 R	2616	5322 126 10511	1nF 5% 50V
0251	4822 462 11174	LEG SILVER	2145	5322 122 32654	63V 22nF PM10 R	2617	5322 126 10511	1nF 5% 50V
0252	4822 462 11174	LEG SILVER	2146	5322 124 11919	47μF 20% 6.3V	2618	5322 126 10511	1nF 5% 50V
0253	4822 462 11174	LEG SILVER	2147	5322 122 32654	63V 22nF PM10 R	2619	4822 126 14585	100nF 10% 50V
0254	4822 462 11174	LEG SILVER	2148	5322 122 32654	63V 22nF PM10 R	2620	5322 124 11919	47μF 20% 6.3V
0301	4622 004 50290	Mains cord	2149	5322 122 32654	63V 22nF PM10 R	2621	4822 122 33575	220pF 5% 63V CASE
0309	3104 125 23980	USER MANUAL CDR779	2150	5322 122 32654	63V 22nF PM10 R	2622	4822 126 13693	56pF 1% 63V
0312	4822 321 22611	CINCH GOLD L:1500	2151	5322 122 32654	63V 22nF PM10 R	2623	4822 126 13693	56pF 1% 63V
0313	4822 321 22611	CINCH GOLD L:1500	2152	5322 124 11919	47μF 20% 6.3V	2624	4822 126 13693	56pF 1% 63V
0317	3104 128 92730	GOLD PLATED CINCH CABLE 1M 75R	2153	5322 122 32654	63V 22nF PM10 R	2625	4822 126 13693	56pF 1% 63V
0318	3139 228 82010	RC282921/01	2154	5322 122 32654	63V 22nF PM10 R	2626	2022 029 00359	TAnF SM TAJ 10V 4U7 PM10 R
1003	3122 427 22000	PSU-CDR3-ECONOMY EURO 20PS202	2155	2022 029 00359	TAnF SM TAJ 10V 4U7 PM10 R			
1004	3104 128 06610	PB ASSY 4249 I/O CDR779						
8005	3104 157 11230	CWAS FLEX 1MM 22 320 32S						
8007	3104 157 11320	CWAS FLEX 1.25MM 7 300 32S						
8010	3104 157 11480	CWAS FLEX 0,5MM 30 130						
<b>I/O board 4249</b>								
<b>Miscellaneous</b>								
1101	4822 265 30987	BMT 7SR>CBL0,3-1,25	2156	5322 122 32654	63V 22nF PM10 R	3100	4822 117 10833	10k 1% 0.1W
1201	4822 267 41064	YKC21	2157	5322 122 32654	63V 22nF PM10 R	3101	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
1205	4822 265 11287	4P	2158	5322 122 32654	63V 22nF PM10 R	3102	4822 117 13623	51k 1% 0.1W RC12H 0805
1207	4822 265 10482	YKC21	2159	5322 122 32654	63V 22nF PM10 R	3104	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
1208	4822 267 31626	YKC21	2160	5322 122 32654	63V 22nF PM10 R	3105	4822 051 20008	0Ω jumper .(0805)
1401	4822 267 10666	30 P. FEM.	2161	5322 122 32654	63V 22nF PM10 R	3106	4822 051 20472	4k7 5% 0.1W
<b>-II-</b>			2162	5322 122 32654	63V 22nF PM10 R	3108	4822 117 10354	22k 1% 0.1W
2100	5322 122 32448	10pF 5% 63V CASE	2163	5322 122 32654	63V 22nF PM10 R	3109	4822 116 83933	15k 1% 0.1W
2101	5322 122 32654	63V 22nF PM10 R	2164	5322 122 31647	1nF 10% 63V	3110	4822 117 10833	10k 1% 0.1W
2102	5322 122 32448	10pF 5% 63V CASE	2165	5322 126 14585	100nF 10% 50V	3111	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
2103	5322 122 32654	63V 22nF PM10 R	2166	5322 124 11919	47μF 20% 6.3V	3112	4822 117 11507	6k8 1% 0.1W
2104	5322 124 11919	47μF 20% 6.3V	2167	5322 122 32654	63V 22nF PM10 R	3113	4822 117 12519	47Ω 1% 0.1W
2106	5322 122 32654	63V 22nF PM10 R	2168	5322 124 11919	47μF 20% 6.3V	3114	4822 117 11145	4k7 1% 0.1W
2107	5322 124 11919	47μF 20% 6.3V	2169	5322 122 32654	63V 22nF PM10 R	3115	4822 117 11145	4k7 1% 0.1W
2108	4822 124 22339	100UE 16V	2170	5322 124 11919	47μF 20% 6.3V	3116	4822 117 10833	10k 1% 0.1W
2109	4822 124 22339	100UE 16V	2171	5322 122 31647	1nF 10% 63V	3117	4822 051 20332	3k3 5% 0.1W
2111	5322 122 32654	63V 22nF PM10 R	2172	5322 122 32654	63V 22nF PM10 R	3118	4822 117 11142	2k4 1% 0.1W
2112	5322 124 11919	47μF 20% 6.3V	2173	5322 122 32531	100pF 5% 50V	3119	4822 117 13623	51k 1% 0.1W RC12H 0805
2113	4822 122 33177	10nF 20% 50V	2174	5322 122 32531	100pF 5% 50V	3120	4822 117 12991	1k6 1% 0.1W 0805 RC12H
2114	2022 029 00359	TAnF SM TAJ 10V 4U7 PM10 R	2175	5322 122 32531	100pF 5% 50V	3122	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
2115	2022 029 00359	TAnF SM TAJ 10V 4U7 PM10 R	2176	3198 030 74780	EL SM 35V 4U7 PM20 COL R	3123	4822 117 11145	4k7 1% 0.1W
2116	4822 122 33177	10nF 20% 50V	2177	5322 126 14585	100nF 10% 50V	3124	4822 117 13623	51k 1% 0.1W RC12H 0805
2118	5322 122 32654	63V 22nF PM10 R	2178	5322 124 11919	47μF 20% 6.3V	3125	4822 117 10833	10k 1% 0.1W
2119	4822 126 14585	100nF 10% 50V	2179	5322 126 14585	100nF 10% 50V	3126	4822 117 11145	4k7 1% 0.1W
2120	5322 124 11919	47μF 20% 6.3V	2180	5322 126 14585	100nF 10% 50V	3127	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
2121	2022 029 00359	TAnF SM TAJ 10V 4U7 PM10 R	2181	5322 122 32531	100pF 5% 50V	3128	4822 117 11152	4Ω7 5%
2122	5322 122 32654	63V 22nF PM10 R	2182	5322 122 32531	100pF 5% 50V	3129	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
2123	5322 124 11919	47μF 20% 6.3V	2183	5322 122 32531	100pF 5% 50V	3130	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
2124	5322 122 32654	63V 22nF PM10 R	2184	5322 122 32531	100pF 5% 50V	3131	4822 117 10354	22k 1% 0.1W
2125	5322 122 32268	63V 470P PM5	2185	5322 122 32531	100pF 5% 50V	3132	4822 117 10833	10k 1% 0.1W
2126	5322 122 32268	63V 470P PM5	2186	5322 122 32531	100pF 5% 50V	3133	4822 116 83933	15k 1% 0.1W
2127	5322 122 32268	63V 470P PM5	2187	5322 122 32531	100pF 5% 50V	3134	4822 117 13623	51k 1% 0.1W RC12H 0805
2128	5322 122 32268	63V 470P PM5	2188	5322 122 32531	100pF 5% 50V	3135	4822 117 10833	10k 1% 0.1W
2129	5322 122 32448	10pF 5% 63V CASE	2189	5322 122 32531	100pF 5% 50V	3136	4822 117 11507	6k8 1% 0.1W
			2190	5322 122 32531	100pF 5% 50V	3137	4822 117 13623	51k 1% 0.1W RC12H 0805
			2191	5322 122 32531	100pF 5% 50V	3138	4822 117 11145	4k7 1% 0.1W
			2192	5322 122 32531	100pF 5% 50V	3139	4822 051 20332	3k3 5% 0.1W
			2193	5322 122 32531	100pF 5% 50V	3140	4822 117 13623	51k 1% 0.1W RC12H 0805
			2194	5322 122 32531	100pF 5% 50V	3141	4822 117 11142	2k4 1% 0.1W
			2195	5322 122 32531	100pF 5% 50V	3142	4822 117 10833	10k 1% 0.1W
			2196	5322 122 32531	100pF 5% 50V	3143	4822 117 10833	10k 1% 0.1W
			2197	5322 122 32531	100pF 5% 50V	3144	4822 117 12991	1k6 1% 0.1W 0805 RC12H
			2198	5322 122 32531	100pF 5% 50V	3145	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
			2199	5322 122 32531	100pF 5% 50V	3146	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
			2200	5322 122 32531	100pF 5% 50V	3147	4822 117 13623	51k 1% 0.1W RC12H 0805
			2201	5322 122 32531	100pF 5% 50V	3148	4822 117 13623	51k 1% 0.1W RC12H 0805
			2202	5322 122 32531	100pF 5% 50V	3149	4822 117 10833	10k 1% 0.1W
			2203	5322 122 32531	100pF 5% 50V	3150	4822 117 13623	51k 1% 0.1W RC12H 0805
			2204	4822 122 14585	100nF 10% 50V	3151	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
			2205	4822 124 22339	100UE 16V	3152	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R
			2206	5322 124 11919	47μF 20% 6.3V	3153	4822 117 13623	51k 1% 0.1W RC12H 0805

3154	4822 051 20471	470Ω 5% 0.1W	4xxx	4822 051 20008	0Ω 5% 0.25W (0805)	2401	5322 122 31647	1nF 10% 63V
3155	4822 051 20471	470Ω 5% 0.1W				3100	4822 051 20472	4k7 5% 0.1W
3156	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R				3101	4822 051 20472	4k7 5% 0.1W
3157	4822 117 10833	10k 1% 0.1W				3102	4822 051 20472	4k7 5% 0.1W
3158	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R	5100	4822 157 71206	BLM21A601SPT	3103	4822 051 20472	4k7 5% 0.1W
			5101	4822 157 71206	BLM21A601SPT	3104	4822 051 20472	4k7 5% 0.1W
3202	4822 051 20332	3k3 5% 0.1W	5200	4822 157 70601	100µH (920927085A)	3105	4822 051 20472	4k7 5% 0.1W
3203	4822 117 12521	68Ω 1% 0.1W	5201	4822 157 70601	100µH (920927085A)	3106	4822 117 11149	82k 1% 0.1W
3204	4822 051 20332	3k3 5% 0.1W	5202	4822 157 71206	BLM21A601SPT	3107	4822 051 20472	4k7 5% 0.1W
3206	4822 117 11927	75Ω 1% 0.1W	5203	4822 157 71206	BLM21A601SPT	3108	4822 117 11373	100Ω 1% RC12H 0805
3207	4822 051 20332	3k3 5% 0.1W	5600	4822 157 71206	BLM21A601SPT	3109	4822 117 11503	220Ω 1% 0.1W
3208	4822 117 11152	4Ω7 5%				3111	4822 117 11373	100Ω 1% RC12H 0805
3209	4822 051 20332	3k3 5% 0.1W				3112	4822 051 20393	39k 5% 0.1W
3214	4822 117 11373	100Ω 1% RC12H 0805	6100	9322 127 99685	UDZS5.1B	3113	4822 117 10833	10k 1% 0.1W
3215	4822 117 11373	100Ω 1% RC12H 0805	6200	4822 218 11487	GP1F32R	3114	4822 117 10833	10k 1% 0.1W
3216	4822 051 20122	1k2 5% 0.1W				3115	4822 051 20561	560Ω 5% 0.1W
3217	4822 051 20122	1k2 5% 0.1W				3116	4822 051 20561	560Ω 5% 0.1W
3219	4822 051 20008	0Ω jumper . (0805)	7100	9322 067 00668	IC SM OP275GS (ANAO) R	3122	4822 117 11149	82k 1% 0.1W
3220	4822 117 11373	100Ω 1% RC12H 0805	7101	4822 209 60792	74HC4053D	3124	4822 117 11149	82k 1% 0.1W
3221	4822 117 11373	100Ω 1% RC12H 0805	7102	9337 153 00118	IC SM 74HCT4051D (PHSE) R	3125	4822 051 20332	3k3 5% 0.1W
3223	4822 051 20122	1k2 5% 0.1W	7103	9322 067 00668	IC SM OP275GS (ANAO) R	3999	4822 117 12842	SM RST 0805
3224	4822 051 20122	1k2 5% 0.1W	7104	4822 209 90531	AD1877	4xxx	4822 051 10008	0Ω 5% 0.25W (1206)
3225	4822 117 11373	100Ω 1% RC12H 0805	7105	9322 067 00668	IC SM OP275GS (ANAO) R	4xxx	4822 051 20008	0Ω 5% 0.25W (0805)
3226	4822 117 11373	100Ω 1% RC12H 0805	7107	9337 153 00118	IC SM 74HCT4051D (PHSE) R			
3227	4822 051 20122	1k2 5% 0.1W	7201	5322 209 11517	PC74HCU04T			
3228	4822 051 20122	1k2 5% 0.1W	7203	4822 130 42615	BC817-40	5100	4822 157 71206	BLM21A601SPT
3229	4822 117 11373	100Ω 1% RC12H 0805	7204	4822 130 42615	BC817-40	5500	4822 157 70601	100µH (920927085A)
3230	4822 117 11373	100Ω 1% RC12H 0805	7205	4822 130 42615	BC817-40			
3231	4822 051 20122	1k2 5% 0.1W	7206	4822 130 42615	BC817-40			
3232	4822 051 20122	1k2 5% 0.1W	7207	4822 130 42615	BC817-40			
3233	4822 051 20332	3k3 5% 0.1W	7208	4822 130 42615	BC817-40	6100	9340 548 47115	PDZ3.3B
3235	4822 117 12521	68Ω 1% 0.1W	7209	4822 130 42615	BC817-40	6200	4822 212 30842	TSOP1736SB1
3236	4822 051 20332	3k3 5% 0.1W	7210	4822 130 42615	BC817-40	6300	4822 130 82978	LTL-16KPE-P
3237	4822 051 20008	0Ω jumper . (0805)	7211	5322 209 11517	PC74HCU04T			
3313	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R	7301	4822 209 60792	74HC4053D			
3322	2322 750 64709	RST SM FUSE 1206 47Ω PM5 R	7302	9322 067 00668	IC SM OP275GS (ANAO) R			
3323	4822 051 20008	0Ω jumper . (0805)	7403	4822 209 15375	74HC244D	7100	5322 130 60159	BC846B
3324	4822 051 20008	0Ω jumper . (0805)	7600	4822 209 17016	AD1855JRS	7104	3104 123 94761	ROM TMP87CH74
3400	4822 051 10008	0Ω 5% 0.25W	7601	9322 067 00668	IC SM OP275GS (ANAO) R	7203	5322 130 60159	BC846B
3401	4822 051 10008	0Ω 5% 0.25W				7204	5322 130 60159	BC846B
3403	4822 117 10833	10k 1% 0.1W				7500	5322 130 60159	BC846B
3405	4822 117 10833	10k 1% 0.1W				7501	5322 130 60159	BC846B
3406	4822 117 10833	10k 1% 0.1W						
3407	4822 117 10833	10k 1% 0.1W						
3408	4822 117 10833	10k 1% 0.1W	0003	4822 256 10506	FTD HOLDER			
3411	4822 117 11152	4Ω7 5%	1050	2422 129 16314	ROT.ENCODER + SWITCH			
3412	4822 117 10833	10k 1% 0.1W	1101	4822 276 13114	EVQ21switch push button			
3413	4822 051 20479	47Ω 5% 0.1W	1102	4822 276 13114	EVQ21			
3414	4822 051 20479	47Ω 5% 0.1W	1103	4822 276 13114	EVQ21			
3415	4822 051 20479	47Ω 5% 0.1W	1104	4822 276 13114	EVQ21			
3416	4822 051 20479	47Ω 5% 0.1W	1105	4822 276 13114	EVQ21			
3417	4822 117 11152	4Ω7 5%	1106	4822 276 13114	EVQ21			
3418	4822 051 20479	47Ω 5% 0.1W	1107	4822 276 13114	EVQ21			
3419	4822 051 20479	47Ω 5% 0.1W	1108	4822 276 13114	EVQ21			
3508	4822 051 20008	0Ω jumper . (0805)	1109	4822 276 13114	EVQ21			
3512	4822 117 10833	10k 1% 0.1W	1110	2422 540 98423	RES CER 8MHz CSTS'MHz 03			
3521	4822 051 20008	0Ω jumper . (0805)	1111	4822 276 13114	EVQ21			
3530	4822 051 20008	0Ω jumper . (0805)	1112	4822 276 13114	EVQ21			
3534	4822 117 10833	10k 1% 0.1W	1113	2722 171 07174	VFD 15-BT-60GNK 106*40 (FTB0)B			
3543	4822 051 20008	0Ω jumper . (0805)	1114	4822 276 13114	EVQ21			
3549	4822 051 20008	0Ω jumper . (0805)	1115	4822 276 13114	EVQ21			
3550	4822 051 20008	0Ω jumper . (0805)	1116	4822 276 13114	EVQ21			
3601	4822 051 20008	0Ω jumper . (0805)	1117	4822 276 13114	EVQ21			
3602	4822 117 10837	100k 1% 0.1W	1118	4822 276 13114	EVQ21			
3603	4822 117 10833	10k 1% 0.1W	1119	4822 276 13114	EVQ21			
3604	4822 117 11142	2k4 1% 0.1W	1120	4822 276 13114	EVQ21			
3605	4822 117 11449	2k2 5% 0.1W 0805	1121	4822 276 13114	EVQ21			
3606	4822 117 11449	2k2 5% 0.1W 0805	1122	4822 276 13114	EVQ21			
3607	4822 117 11748	2Ω2 1206 5% FUSE	1123	4822 276 13114	EVQ21			
3608	4822 051 20471	470Ω 5% 0.1W	1124	4822 276 13114	EVQ21			
3609	4822 117 11449	2k2 5% 0.1W 0805	1125	4822 276 13114	EVQ21			
3610	4822 117 11449	2k2 5% 0.1W 0805	1126	4822 276 13114	EVQ21			
3611	4822 117 11442	2k4 1% 0.1W	1127	4822 276 13114	EVQ21			
3612	4822 117 11748	2Ω2 1206 5% FUSE	1128	4822 276 13114	EVQ21			
3613	4822 117 11142	2k4 1% 0.1W	1129	4822 276 13441	SKHQ			
3614	4822 117 11449	2k2 5% 0.1W 0805	1131	4822 276 13441	SKHQ			
3615	4822 117 11449	2k2 5% 0.1W 0805	1301	4822 276 14007	SWI PUSH 2P 0.1A 12V			
3616	4822 051 20471	470Ω 5% 0.1W	1401	4822 267 31453	HLJ1540			
3617	4822 117 11449	2k2 5% 0.1W 0805	2100	4822 126 14585	100nF 10% 50V			
3618	4822 117 11449	2k2 5% 0.1W 0805	2101	4822 126 13838	100nF 50V 20%			
3619	4822 117 11142	2k4 1% 0.1W	2102	5322 122 32654	63V 22nF PM10 R			
3620	4822 117 11748	2Ω2 1206 5% FUSE	2104	5322 122 32658	22pF 5% 50V			
3622	4822 051 20008	0Ω jumper . (0805)	2106	5322 122 32658	22pF 5% 50V			
3624	4822 051 20008	0Ω jumper . (0805)	2111	4822 126 14585	100nF 10% 50V			
3626	4822 051 20008	0Ω jumper . (0805)	2400	5322 122 31647	1nF 10% 63V			
3619	4822 051 20471	470Ω 5% 0.1W				8001	3104 148 01310	LED ASSY 4P
3618	4822 117 11449	2k2 5% 0.1W 0805						
3616	4822 117 11449	2k2 5% 0.1W 0805						
3617	4822 117 11449	2k2 5% 0.1W 0805						
3618	4822 117 11449	2k2 5% 0.1W 0805						
3619	4822 117 11142	2k4 1% 0.1W						
3620	4822 117 11748	2Ω2 1206 5% FUSE						
3622	4822 051 20008	0Ω jumper . (0805)						
3624	4822 051 20008	0Ω jumper . (0805)						
3626	4822 051 20008	0Ω jumper . (0805)						
3628	4822 051 20008	0Ω jumper . (0805)						
4xxx	4822 051 10008	0Ω 5% 0.25W (1206)						

<b>Headphone board</b>			
2100 4822 126 14585 100nF 10% 50V	3119 2322 595 90023 VDR DC 1M A/423V S MAX 800V B	3123 4822 050 21803 18k 1% 0.6W	<b>CD MAINBOARD</b>
2101 4822 124 81151 22μF 50V	3124 4822 117 12181 470Ω 20% 0.5W	3125 4822 117 10833 10k 1% 0.1W	<b>Miscellaneous</b>
2102 4822 126 14585 100nF 10% 50V	3126 4822 116 80176 1Ω 5% 0.5W	3127 4822 116 80176 1Ω 5% 0.5W	1000 2422 025 11704 CON BM H 16P F 1.00 FFC 0.3 R
2103 4822 124 81151 22μF 50V	3128 4822 116 80676 1Ω 5% 0.5W	3129 4822 117 10833 10k 1% 0.1W	1004 2422 543 00896 RES XTL SM 8M4672 30P CX-5F R
2104 5322 126 10511 1nF 5% 50V	3130 4822 050 21803 18k 1% 0.6W	3131 4822 117 10833 10k 1% 0.1W	1006 4822 267 51454 CONN. 11P FEMALE
2105 5322 126 10511 1nF 5% 50V	3132 4822 051 20109 10Ω 5% 0.1W	3133 4822 117 11139 1k5 1% 0.1W	1205 5322 242 73686 CST12.00MTW-TF01
	3134 4822 117 11139 1k5 1% 0.1W	3135 4822 117 11148 56k 1% 0.1W	1206 4822 252 51173 19398E1(1,000A)
	3136 4822 117 11148 56k 1% 0.1W	3137 4822 116 52176 10Ω 5% 0.5W	1207 4822 252 51173 19398E1(1,000A)
3100 5322 117 11726 10Ω 5%	3138 4822 050 13302 3k3 1% 0.4W	3139 4822 116 52175 10Ω 5% 0.5W	1208 4822 267 60409 CONN 22P FEMALE
3101 5322 117 11726 10Ω 5%	3140 4822 117 10833 10k 1% 0.1W	3141 4822 117 10833 10k 1% 0.1W	1209 4822 265 30987 BMT 7SR>CBL0.3-1.25
3102 4822 051 20008 0Ω jumper . (0805)	3142 4822 051 20109 10Ω 5% 0.1W	3143 4822 117 11139 1k5 1% 0.1W	1210 2422 025 11704 CON BM H 16P F 1.00 FFC 0.3 R
3104 4822 051 20008 0Ω jumper . (0805)	3144 4822 117 11139 1k5 1% 0.1W	3145 4822 117 11148 56k 1% 0.1W	
3106 4822 117 11503 220Ω 1% 0.1W	3146 4822 051 20332 3k3 5% 0.1W	3147 4822 116 52176 10Ω 5% 0.5W	
3107 4822 117 11503 220Ω 1% 0.1W	3148 4822 051 10102 1k 2% 0.25W	3149 4822 116 52175 10Ω 5% 0.5W	
3108 4822 051 20122 1k2 5% 0.1W	3150 4822 117 11139 1k5 1% 0.1W	3151 4822 117 11148 56k 1% 0.1W	
3109 4822 051 20122 1k2 5% 0.1W	3152 4822 051 20332 3k3 5% 0.1W	3153 4822 116 52176 10Ω 5% 0.5W	
	3154 4822 051 20332 3k3 5% 0.1W	3155 4822 116 52176 10Ω 5% 0.5W	
	3156 4822 051 20332 3k3 5% 0.1W	3157 4822 116 52176 10Ω 5% 0.5W	
7102 4822 209 82362 NJM4556D	3158 4822 117 10833 10k 1% 0.1W	3159 4822 116 52175 10Ω 5% 0.5W	
7103 4822 130 42615 BC817-40	3160 4822 051 20332 3k3 5% 0.1W	3161 4822 117 11139 1k5 1% 0.1W	
7104 4822 130 42615 BC817-40	3162 4822 051 20332 3k3 5% 0.1W	3163 4822 117 11139 1k5 1% 0.1W	
<b>PSU CDR3 ECO</b>	3164 4822 051 20332 3k3 5% 0.1W	3165 4822 051 20332 3k3 5% 0.1W	
<b>Miscellaneous</b>	3166 4822 051 20332 3k3 5% 0.1W	3167 4822 051 20332 3k3 5% 0.1W	
0025 4822 492 63524 FIX. TRANSISTOR	3168 4822 051 20332 3k3 5% 0.1W	3169 4822 051 20332 3k3 5% 0.1W	
0060 4822 492 63524 FIX. TRANSISTOR	3170 4822 051 20332 3k3 5% 0.1W	3171 4822 051 20332 3k3 5% 0.1W	
0101▲ 4822 265 31015 HSC0528	3172 4822 051 20332 3k3 5% 0.1W	3173 4822 051 20332 3k3 5% 0.1W	
1120▲ 4822 070 32002 218002.(2A)	3174 4822 051 20332 3k3 5% 0.1W	3175 4822 051 20332 3k3 5% 0.1W	
1121 4822 265 11253 FUSE HOLDER 2P	3176 4822 051 20332 3k3 5% 0.1W	3177 4822 051 20332 3k3 5% 0.1W	
	3178 4822 051 20332 3k3 5% 0.1W	3179 4822 051 20332 3k3 5% 0.1W	
	3180 4822 051 20332 3k3 5% 0.1W	3181 4822 051 20332 3k3 5% 0.1W	
<b>PSU CDR3 ECO</b>	3182 4822 051 20332 3k3 5% 0.1W	3183 4822 051 20332 3k3 5% 0.1W	
<b>Miscellaneous</b>	3184 4822 051 20332 3k3 5% 0.1W	3185 4822 051 20332 3k3 5% 0.1W	
0025 4822 492 63524 FIX. TRANSISTOR	3186 4822 051 20332 3k3 5% 0.1W	3187 4822 051 20332 3k3 5% 0.1W	
0060 4822 492 63524 FIX. TRANSISTOR	3188 4822 051 20332 3k3 5% 0.1W	3189 4822 051 20332 3k3 5% 0.1W	
0101▲ 4822 265 31015 HSC0528	3190 4822 051 20332 3k3 5% 0.1W	3191 4822 051 20332 3k3 5% 0.1W	
1120▲ 4822 070 32002 218002.(2A)	3192 4822 051 20332 3k3 5% 0.1W	3193 4822 051 20332 3k3 5% 0.1W	
1121 4822 265 11253 FUSE HOLDER 2P	3194 4822 051 20332 3k3 5% 0.1W	3195 4822 051 20332 3k3 5% 0.1W	
	3196 4822 051 20332 3k3 5% 0.1W	3197 4822 051 20332 3k3 5% 0.1W	
	3198 4822 051 20332 3k3 5% 0.1W	3199 4822 051 20332 3k3 5% 0.1W	
<b>PSU CDR3 ECO</b>	3200 4822 051 20332 3k3 5% 0.1W	3201 4822 051 20332 3k3 5% 0.1W	
<b>Miscellaneous</b>	3202 4822 051 20332 3k3 5% 0.1W	3203 4822 051 20332 3k3 5% 0.1W	
0025 4822 492 63524 FIX. TRANSISTOR	3204 4822 051 20332 3k3 5% 0.1W	3205 4822 051 20332 3k3 5% 0.1W	
0060 4822 492 63524 FIX. TRANSISTOR	3206 4822 051 20332 3k3 5% 0.1W	3207 4822 051 10102 1k 2% 0.25W	
0101▲ 4822 265 31015 HSC0528	3208 4822 051 10102 1k 2% 0.25W	3209 4822 051 10102 1k 2% 0.25W	
1120▲ 4822 070 32002 218002.(2A)	3210 4822 051 10102 1k 2% 0.25W	3211 4822 051 10102 1k 2% 0.25W	
1121 4822 265 11253 FUSE HOLDER 2P	3212 4822 051 10102 1k 2% 0.25W	3213 4822 051 10102 1k 2% 0.25W	
	3214 4822 051 10102 1k 2% 0.25W	3215 4822 051 10102 1k 2% 0.25W	
	3216 4822 051 10102 1k 2% 0.25W	3217 4822 051 10102 1k 2% 0.25W	
<b>PSU CDR3 ECO</b>	3218 4822 051 10102 1k 2% 0.25W	3219 4822 051 10102 1k 2% 0.25W	
<b>Miscellaneous</b>	3220 4822 051 10102 1k 2% 0.25W	3221 4822 051 10102 1k 2% 0.25W	
0025 4822 492 63524 FIX. TRANSISTOR	3222 4822 051 10102 1k 2% 0.25W	3223 4822 051 10102 1k 2% 0.25W	
0060 4822 492 63524 FIX. TRANSISTOR	3224 4822 051 10102 1k 2% 0.25W	3225 4822 051 10102 1k 2% 0.25W	
0101▲ 4822 265 31015 HSC0528	3226 4822 051 10102 1k 2% 0.25W	3227 4822 051 10102 1k 2% 0.25W	
1120▲ 4822 070 32002 218002.(2A)	3228 4822 051 10102 1k 2% 0.25W	3229 4822 051 10102 1k 2% 0.25W	
1121 4822 265 11253 FUSE HOLDER 2P	3230 4822 051 10102 1k 2% 0.25W	3231 4822 051 10102 1k 2% 0.25W	
	3232 4822 051 10102 1k 2% 0.25W	3233 4822 051 10102 1k 2% 0.25W	
	3234 4822 051 10102 1k 2% 0.25W	3235 4822 051 10102 1k 2% 0.25W	
<b>PSU CDR3 ECO</b>	3236 4822 051 10102 1k 2% 0.25W	3237 4822 051 10102 1k 2% 0.25W	
<b>Miscellaneous</b>	3238 4822 051 10102 1k 2% 0.25W	3239 4822 051 10102 1k 2% 0.25W	
0025 4822 492 63524 FIX. TRANSISTOR	3240 4822 051 10102 1k 2% 0.25W	3241 4822 051 10102 1k 2% 0.25W	
0060 4822 492 63524 FIX. TRANSISTOR	3242 4822 051 10102 1k 2% 0.25W	3243 4822 051 10102 1k 2% 0.25W	
0101▲ 4822 265 31015 HSC0528	3244 4822 051 10102 1k 2% 0.25W	3245 4822 051 10102 1k 2% 0.25W	
1120▲ 4822 070 32002 218002.(2A)	3246 4822 051 10102 1k 2% 0.25W	3247 4822 051 10102 1k 2% 0.25W	
1121 4822 265 11253 FUSE HOLDER 2P	3248 4822 051 10102 1k 2% 0.25W	3249 4822 051 10102 1k 2% 0.25W	
	3250 4822 051 10102 1k 2% 0.25W	3251 4822 051 10102 1k 2% 0.25W	
	3252 4822 051 10102 1k 2% 0.25W	3253 4822 051 10102 1k 2% 0.25W	
<b>PSU CDR3 ECO</b>	3254 4822 051 10102 1k 2% 0.25W	3255 4822 051 10102 1k 2% 0.25W	
<b>Miscellaneous</b>	3256 4822 051 10102 1k 2% 0.25W	3257 4822 051 10102 1k 2% 0.25W	
0025 4822 492 63524 FIX. TRANSISTOR	3258 4822 051 10102 1k 2% 0.25W	3259 4822 051 10102 1k 2% 0.25W	
0060 4822 492 63524 FIX. TRANSISTOR	3260 4822 051 10102 1k 2% 0.25W	3261 4822 051 10102 1k 2% 0.25W	
0101▲ 4822 265 31015 HSC0528	3262 4822 051 10102 1k 2% 0.25W	3263 4822 051 10102 1k 2% 0.25W	
1120▲ 4822 070 32002 218002.(2A)	3264 4822 051 10102 1k 2% 0.25W	3265 4822 051 10102 1k 2% 0.25W	
1121 4822 265 11253 FUSE HOLDER 2P	3266 4822 051 10102 1k 2% 0.25W	3267 4822 051 10102 1k 2% 0.25W	
	3268 4822 051 10102 1k 2% 0.25W	3269 4822 051 10102 1k 2% 0.25W	
	3270 4822 051 10102 1k 2% 0.25W	3271 4822 051 10102 1k 2% 0.25W	
<b>PSU CDR3 ECO</b>	3272 4822 051 10102 1k 2% 0.25W	3273 4822 051 10102 1k 2% 0.25W	
<b>Miscellaneous</b>	3274 4822 051 10102 1k 2% 0.25W	3275 4822 051 10102 1k 2% 0.25W	
0025 4822 492 63524 FIX. TRANSISTOR	3276 4822 051 10102 1k 2% 0.25W	3277 4822 051 10102 1k 2% 0.25W	
0060 4822 492 63524 FIX. TRANSISTOR	3278 4822 051 10102 1k 2% 0.25W	3279 4822 051 10102 1k 2% 0.25W	
0101▲ 4822 265 31015 HSC0528	3280 4822 051 10102 1k 2% 0.25W	3281 4822 051 10102 1k 2% 0.25W	
1120▲ 4822 070 32002 218002.(2A)	3282 4822 051 10102 1k 2% 0.25W	3283 4822 051 10102 1k 2% 0.25W	
1121 4822 265 11253 FUSE HOLDER 2P	3284 4822 051 10102 1k 2% 0.25W	3285 4822 051 10102 1k 2% 0.25W	
	3286 4822 051 10102 1k 2% 0.25W	3287 4822 051 10102 1k 2% 0.25W	
	3288 4822 051 10102 1k 2% 0.25W	3289 4822 051 10102 1k 2% 0.25W	
<b>PSU CDR3 ECO</b>	3290 4822 051 10102 1k 2% 0.25W	3291 4822 051 10102 1k 2% 0.25W	
<b>Miscellaneous</b>	3292 4822 051 10102 1k 2% 0.25W	3293 4822 051 10102 1k 2% 0.25W	
0025 4822 492 63524 FIX. TRANSISTOR	3294 4822 051 10102 1k 2% 0.25W	3295 4822 051 10102 1k 2% 0.25W	
0060 4822 492 63524 FIX. TRANSISTOR	3296 4822 051 10102 1k 2% 0.25W	3297 4822 051 10102 1k 2% 0.25W	
0101▲ 4822 265 31015 HSC0528	3298 4822 051 10102 1k 2% 0.25W	3299 4822 051 10102 1k 2% 0.25W	
1120▲ 4822 070 32002 218002.(2A)	3300 4822 051 10102 1k 2% 0.25W	3301 4822 051 10102 1k 2% 0.25W	
1121 4822 265 11253 FUSE HOLDER 2P	3302 4822 051 10102 1k 2% 0.25W	3303 4822 051 10102 1k 2% 0.25W	
	3304 4822 051 10102 1k 2% 0.25W	3305 4822 051 10102 1k 2% 0.25W	
	3306 4822 051 10102 1k 2% 0.25W	3307 4822 051 10102 1k 2% 0.25W	
<b>PSU CDR3 ECO</b>	3308 4822 051 10102 1k 2% 0.25W	3309 4822 051 10102 1k 2% 0.25W	
<b>Miscellaneous</b>	3310 4822 051 10102 1k 2% 0.25W	3311 4822 051 10102 1k 2% 0.25W	
0025 4822 492 63524 FIX. TRANSISTOR	3312 4822 051 10102 1k 2% 0.25W	3313 4822 051 10102 1k 2% 0.25W	
0060 4822 492 63524 FIX. TRANSISTOR	3314 4822 051 10102 1k 2% 0.25W	3315 4822 051 10102 1k 2% 0.25W	
0101▲ 4822 265 31015 HSC0528	3316 4822 051 10102 1k 2% 0.25W	3317 4822 051 10102 1k 2% 0.25W	
1120▲ 4822 070 32002 218002.(2A)	3318 4822 051 10102 1k 2% 0.25W	3319 4822 051 10102 1k 2% 0.25W	
1121 4822 265 11253 FUSE HOLDER 2P</td			

2178	4822 126 14585	100nF 10% 50V	3168	4822 117 11373	100Ω 1% RC12H 0805	3313	4822 117 10833	10k 1% 0.1W
2180	4822 124 41796	22μF 20% 16V	3169	4822 051 30272	2k7 5% 0.062W	3314	4822 117 10833	10k 1% 0.1W
2181	4822 124 41796	22μF 20% 16V	3171	4822 051 30103	10k 5% 0.062W	3318	4822 117 11373	100Ω 1% RC12H 0805
2184	4822 126 14225	56pF 5% 50V 0603	3172	4822 117 11373	100Ω 1% RC12H 0805	3319	4822 117 11373	100Ω 1% RC12H 0805
2185	4822 126 14225	56pF 5% 50V 0603	3173	4822 117 11452	430Ω 1% 0.1W	3320	4822 117 11373	100Ω 1% RC12H 0805
2186	4822 124 81286	47μF 20% 16V	3174	4822 117 11452	430Ω 1% 0.1W	3328	4822 051 20105	1M 5% 0.1W
2187	4822 126 14585	100nF 10% 50V	3176	4822 117 11373	100Ω 1% RC12H 0805	3331	4822 117 11373	100Ω 1% RC12H 0805
2188	4822 126 14305	100nF 10% 16V 0603	3177	4822 117 11151	1Ω 5%	3333	4822 051 30101	100Ω 5% 0.062W
2189	4822 126 14585	100nF 10% 50V	3178	4822 051 30102	1k 5% 0.062W	3335	4822 051 30103	10k 5% 0.062W
2191	4822 124 81286	47μF 20% 16V	3179	4822 051 30102	1k 5% 0.062W	3337	4822 051 30103	10k 5% 0.062W
2197	4822 124 81286	47μF 20% 16V	3180	4822 051 30272	2k7 5% 0.062W	3339	4822 051 30103	10k 5% 0.062W
2199	4822 126 13692	47pF 1% 63V	3181	4822 051 20223	22k 5% 0.1W	3342	4822 117 10833	10k 1% 0.1W
2200	4822 126 14249	560pF 10% 50V CASE0603	3182	4822 051 30391	390Ω 5% 0.062W	3350	4822 051 10102	1k 2% 0.25W
2201	4822 126 14247	0603 50V 1N5 COL R	3183	4822 051 30103	10k 5% 0.062W	3352	4822 051 20008	0Ω jumper . (0805)
2202	5322 122 32658	22pF 5% 50V	3184	4822 117 11748	2Ω 1206 5% FUSE	3353	4822 117 11373	100Ω 1% RC12H 0805
2203	4822 124 22726	4.7μF 35V	3185	4822 051 30472	4k7 5% 0.062W	3354	4822 117 11373	100Ω 1% RC12H 0805
2204	4822 126 14585	100nF 10% 50V	3186	4822 051 30472	4k7 5% 0.062W	3355	4822 117 11373	100Ω 1% RC12H 0805
2208	4822 124 81286	47μF 20% 16V	3187	4822 051 30391	390Ω 5% 0.062W	3356	4822 117 11373	100Ω 1% RC12H 0805
2211	4822 126 13692	47pF 1% 63V	3188	4822 051 30272	2k7 5% 0.062W	3357	4822 051 20008	0Ω jumper . (0805)
2214	5322 122 32658	22pF 5% 50V	3189	4822 051 30391	390Ω 5% 0.062W	3359	4822 051 20008	0Ω jumper . (0805)
2216	4822 126 14305	100nF 10% 16V 0603	3190	4822 117 11456	30Ω 1% 0.1W	3360	4822 051 20008	0Ω jumper . (0805)
2217	4822 122 33777	47pF 5% 63V	3191	4822 117 11452	430Ω 1% 0.1W	3361	4822 117 11373	100Ω 1% RC12H 0805
2220	4822 126 14585	100nF 10% 50V	3192	4822 117 11452	430Ω 1% 0.1W	3999	4822 117 12842	SM RST 0805 PROCESS CHIP
2230	5322 126 10223	4.7nF 10% 63V	3193	4822 051 30181	180Ω 5% 0.062W			
2232	4822 126 14305	100nF 10% 16V 0603	3194	4822 051 20008	0Ω jumper . (0805)			
2233	5322 122 31865	63V 1N5 PM10 R	3195	4822 051 20008	0Ω jumper . (0805)			
2234	4822 124 12362	47μF 4V 20%	3196	4822 051 30102	1k 5% 0.062W			
2235	4822 124 12362	47μF 4V 20%	3197	4822 117 10833	10k 1% 0.1W			
2252	5322 122 31647	1nF 10% 63V	3198	4822 051 30479	47Ω 5% 0.062W			
2280	4822 126 14585	100nF 10% 50V	3199	4822 051 30152	1k5 5% 0.062W			
2285	5322 122 31865	63V 1N5 PM10 R	3200	4822 117 10833	10k 1% 0.1W			
2286	5322 122 31865	63V 1N5 PM10 R	3201	4822 117 11817	1k2 1% 1/16W			
2300	4822 126 14305	100nF 10% 16V 0603	3202	4822 051 30223	22k 5% 0.062W			
2301	4822 124 81286	47μF 20% 16V	3203	4822 051 30272	2k7 5% 0.062W			
2302	4822 124 11947	10μF 20% 16V	3204	4822 051 20008	0Ω jumper . (0805)			
2303	4822 126 14305	100nF 10% 16V 0603	3205	4822 051 30103	10k 5% 0.062W	7000	9352 641 80557	SAA7324H/M2B
2304	4822 124 40196	220μF 20% 16V	3206	4822 051 30008	0Ω jumper	7005	9337 143 50653	74HCT08
2306	2222 780 15656	16V 330nF PM10 R	3208	4822 117 13608	4.7Ω 5% 0603 0.0016W	7006	5322 130 42718	BFS20
2307	4822 124 40207	100μF 20% 25V	3212	4822 051 30105	1M 5% 0.062W	7007	4822 130 60373	BC856B
2320	4822 122 33777	47pF 5% 63V	3214	4822 051 20008	0Ω jumper . (0805)	7008	5322 130 42718	BFS20
2321	4822 122 33777	47pF 5% 63V	3215	4822 117 11748	2Ω 1206 5% FUSE	7009	5322 130 42718	BFS20
2322	4822 122 33777	47pF 5% 63V	3216	4822 117 11748	2Ω 1206 5% FUSE	7010	5322 130 60159	BC846B
2325	4822 126 14305	100nF 10% 16V 0603	3217	4822 117 10833	10k 1% 0.1W	7011	5322 130 42718	BFS20
2326	4822 126 14305	100nF 10% 16V 0603	3218	4822 051 10102	1k 2% 0.25W	7019	4822 130 60373	BC856B
2327	4822 126 14305	100nF 10% 16V 0603	3219	4822 117 13573	NETW 4 X 47Ω 5% MNR14	7020	4822 209 16877	BA6856FP
3100	4822 051 20223	22k 5% 0.1W	3220	4822 051 30103	10k 5% 0.062W	7021	4822 209 32852	TDA7073A/N2
3101	4822 051 20223	22k 5% 0.1W	3225	4822 117 11748	2Ω 1206 5% FUSE	7022	4822 209 32852	TDA7073A/N2
3102	4822 051 20479	47Ω 5% 0.1W	3226	4822 117 10833	10k 1% 0.1W	7023	5322 130 42718	BFS20
3103	4822 117 10834	47k 1% 0.1W	3229	4822 117 11748	2Ω 1206 5% FUSE	7025	9337 153 10118	IC SM 74HCT4052D (PHSE) R
3104	4822 051 30008	0Ω jumper	3233	4822 117 10354	22k 1% 0.1W	7120	4822 209 30095	LM833D
3105	4822 051 30008	0Ω jumper	3235	4822 051 30008	0Ω jumper	7130	5322 130 60159	BC846B
3106	4822 051 30008	0Ω jumper	3236	4822 051 20008	0Ω jumper . (0805)	7131	4822 130 60373	BC856B
3107	4822 051 30008	0Ω jumper	3237	4822 051 20008	0Ω jumper . (0805)	7132	5322 130 60159	BC846B
3113	4822 051 10102	1k 2% 0.25W	3241	4822 117 10354	22k 1% 0.1W	7203	5322 130 60159	BC846B
3114	4822 051 20822	8k2 5% 0.1W	3242	4822 117 10833	10k 1% 0.1W	7204	4822 209 17398	LD1117DT33
3115	4822 051 20472	4k7 5% 0.1W	3243	4822 117 10834	47k 1% 0.1W	7301	5322 130 60159	BC846B
3116	4822 117 10834	47k 1% 0.1W	3245	4822 117 10834	47k 1% 0.1W	7309	4822 209 17237	UDA1320ATS
3117	4822 051 20479	47Ω 5% 0.1W	3256	4822 117 10833	10k 1% 0.1W	7310	5322 130 60159	BC846B
3130	4822 117 10833	10k 1% 0.1W	3260	4822 117 10834	47k 1% 0.1W			
3131	4822 117 11151	1Ω 5%	3263	4822 117 11748	2Ω 1206 5% FUSE			
3132	4822 051 20223	22k 5% 0.1W	3265	4822 117 10837	100k 1% 0.1W			
3134	4822 051 20108	1Ω 5% 0.1W	3266	4822 051 10102	1k 2% 0.25W			
3135	4822 051 20108	1Ω 5% 0.1W	3267	4822 051 30102	1k 5% 0.062W			
3136	4822 051 20122	1k2 5% 0.1W	3268	4822 117 10837	100k 1% 0.1W			
3137	4822 117 11504	270Ω 1% 0.1W	3269	4822 117 11373	100Ω 1% RC12H 0805			
3138	4822 117 11504	270Ω 1% 0.1W	3270	4822 117 10833	10k 1% 0.1W			
3139	4822 117 10833	10k 1% 0.1W	3271	4822 117 11373	100Ω 1% RC12H 0805			
3140	4822 051 20008	0Ω jumper . (0805)	3273	4822 117 11373	100Ω 1% RC12H 0805			
3141	4822 051 20008	0Ω jumper . (0805)	3274	4822 117 11373	100Ω 1% RC12H 0805			
3142	4822 117 11504	270Ω 1% 0.1W	3275	4822 117 11373	100Ω 1% RC12H 0805			
3143	4822 117 10834	47k 1% 0.1W	3276	4822 117 11373	100Ω 1% RC12H 0805			
3144	4822 117 10834	47k 1% 0.1W	3277	4822 117 11373	100Ω 1% RC12H 0805			
3145	4822 117 11504	270Ω 1% 0.1W	3278	4822 051 20008	0Ω jumper . (0805)			
3146	4822 117 10837	100k 1% 0.1W	3279	4822 117 11151	1Ω 5%			
3148	4822 051 20008	0Ω jumper . (0805)	3280	4822 117 10833	10k 1% 0.1W			
3149	4822 051 10102	1k 2% 0.25W	3282	4822 051 30103	10k 5% 0.062W			
3150	4822 117 11383	12k 1% 0.1W	3283	4822 117 10833	10k 1% 0.1W			
3151	4822 117 11383	12k 1% 0.1W	3284	4822 051 30008	0Ω jumper			
3152	4822 051 20008	0Ω jumper . (0805)	3285	4822 051 30472	4k7 5% 0.062W			
3153	4822 051 30101	100Ω 5% 0.062W	3286	4822 051 30154	150k 5% 0.062W			
3154	4822 117 11151	1Ω 5%	3287	4822 117 12925	47k 1% 0.063W 0603			
3155	4822 051 20008	0Ω jumper . (0805)	3300	4822 051 30103	10k 5% 0.062W			
3156	4822 117 11383	12k 1% 0.1W	3302	4822 051 30103	10k 5% 0.062W			
3157	4822 117 11383	12k 1% 0.1W	3303	4822 051 30103	10k 5% 0.062W			
3158	4822 051 20122	1k2 5% 0.1W	3304	4822 051 30103	10k 5% 0.062W			
3159	4822 051 20008	0Ω jumper . (0805)	3305	4822 051 30103	10k 5% 0.062W			
3160	4822 117 10833	10k 1% 0.1W	3306	4822 051 30103	10k 5% 0.062W			
3161	4822 117 11748	2Ω 1206 5% FUSE	3307	4822 051 30103	10k 5% 0.062W			
3								