


Service Manual

**CIRCUIT DESCRIPTIONS
REPAIR & ADJUSTMENTS**

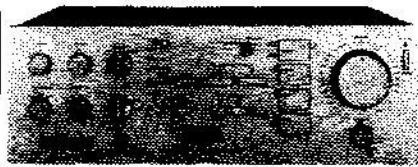

**ORDER NO.
ARP-344-0**

STEREO AMPLIFIER

A-90

- This service manual is applicable to the KU type.

CONTENTS

| | |
|--|----|
| 1. SPECIFICATIONS | 2 |
| 2. FRONT PANEL FACILITIES | 3 |
| 3. BLOCK DIAGRAM | 5 |
| 4. CIRCUIT DESCRIPTIONS | 7 |
| 5. PARTS LOCATION | 10 |
| 6. EXPLODED VIEWS AND PARTS LIST | 13 |
| 7. P.C. BOARDS CONNECTION DIAGRAM | 19 |
| 8. SCHEMATIC DIAGRAM | 27 |
| 9. ELECTRICAL PARTS LIST | 33 |
| 10. ADJUSTMENTS | 40 |
| 11. SAFETY INFORMATION | 41 |
| 12. PACKING | 42 |

RECEIVED SEP - 7 1983

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS (USA) INC. 1925 E. Dominguez St., Long Beach, California 90810 U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Keetberglaan 1, 2740 Beveren, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia

1. SPECIFICATIONS

Amplifier Section

Continuous Average Power Output is 200 watts* per channel, min., at 8 ohms from 20 Hertz to 20,000 Hertz with no more than 0.002 % total harmonic distortion.**

Continuous Power Output at 1kHz (both channel driven)

T. H. D. 0.002%, 8 ohms 220watts per channel

Total Harmonic Distortion (20 Hertz to 20,000 Hertz, 8 ohms)

continuous rated power output

..... ** No more than 0.002%

100 watts per channel power output

..... ** No more than 0.002%

Intermodulation Distortion (50 Hertz: 7,000 Hertz = 4 : 1, 8 ohms)

continuous rated power output

..... No more than 0.002%

Damping Factor (20 Hertz to 20,000 Hertz, 8 ohms)

..... 100

Input (Sensitivity/Impedance)

PHONO MM 2.5mV/50 kilohms

PHONO MC 150 μ V/100 ohms, 33 ohms

TUNER, CD/AUX1, AUX2, TAPE PLAY 1, 2

..... 150 mV/50 kilohms

Phono Overload Level (T.H.D. 0.008%, 1,000Hz)

PHONO MM 300mV

PHONO MC 18mV

Output Level/Impedance

TAPE REC 1, 2 150mV/2.2 kilohms

Frequency Response

PHONO MM (RIAA Equalization)

..... 20Hz to 100,000Hz \pm 0.2dB

TUNER, CD/AUX1, AUX2, TAPE PLAY 1, 2

..... 5Hz to 100,000Hz \pm 0.3dB

Tone Control

BASS \pm 6dB (100Hz) at 200Hz Position

..... Turnover frequency: 100Hz/200Hz/400Hz

TREBLE \pm 6dB (10kHz) at 4kHz Position

..... Turnover frequency: 2kHz/4kHz/8kHz

Filter

LOW (SUBSONIC) 15Hz (-6dB/oct.)

Hum and Noise (IHF, short circuited A network)

PHONO MM 89dB

PHONO MC 74dB

TUNER, CD/AUX1, AUX2, TAPE PLAY 1, 2 .. 113dB

Muting -20dB

Miscellaneous

Power Requirements 120V, 50/60Hz

Power Consumption 350 W (UL)

Dimensions 420(W) x 150(H) x 420(D) mm

16-9/16(W) x 5-7/8(H) x 16-9/16(D) in

Weight (without package) 19.6kg (43 lb 3 oz)

Furnished Parts

Operating Instructions 1


*Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier.

**Measured by Shibusoku 725 Automatic Distortion Analyzer.

NOTE:

Specifications and design subject to possible modification without notice.

2. FRONT PANEL FACILITIES

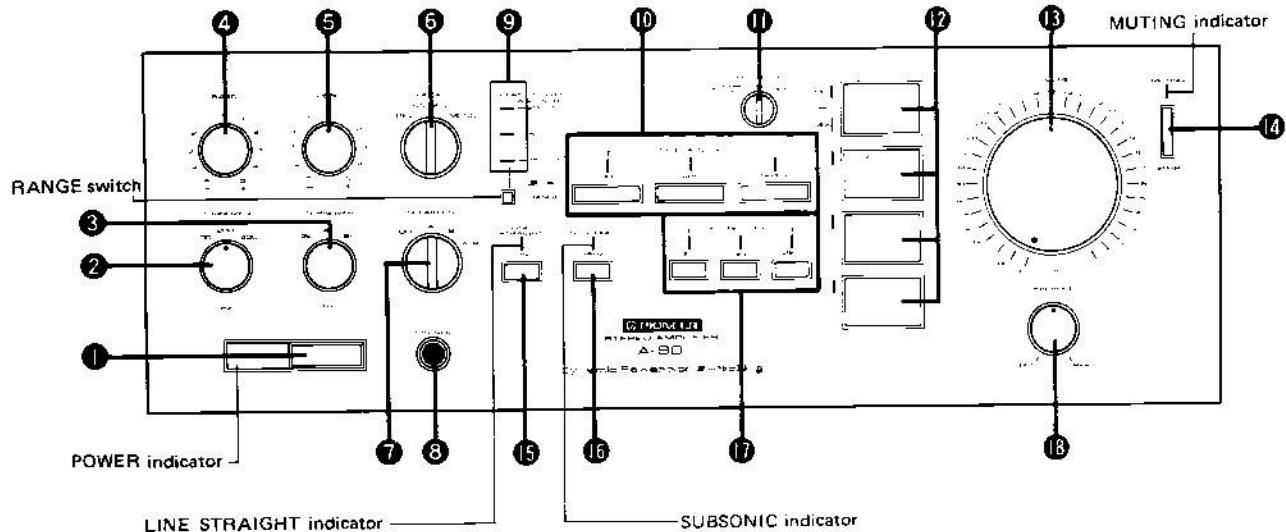

① POWER SWITCH

Power is supplied to the stereo amplifier when the switch is depressed, and the power indicator changes from red to green. The power is turned off when the switch is released to the OFF position.

② BASS TURNOVER CONTROL

This is used to select the frequency at which the BASS control starts to have an effect on the tone quality when it is used for adjustment.

- 400 Allows the frequency band below 400Hz to be adjusted.
- 200 Allows the frequency band below 200Hz to be adjusted.
- 100 Allows the frequency band below 100Hz to be adjusted.

③ TREBLE TURNOVER CONTROL

This is used to select the frequency at which the TREBLE control starts to have an effect on the tone quality when it is used for adjustment.

- 2k Allows the frequency band above 2kHz to be adjusted.
- 4k Allows the frequency band above 4kHz to be adjusted.
- 8k Allows the frequency band above 8kHz to be adjusted.

④ BASS CONTROL

This is used to adjust the BASS (low frequency range) sound. When the control is turned clockwise, the level of sound below the frequency selected by the BASS TURNOVER control is emphasised. Conversely, when the control is turned counter-clockwise (\cap) from the "0" position, the level of sound below the frequency selected by the BASS TURNOVER control is attenuated.

NOTE:

The control does not operate if the LINE STRAIGHT switch is ON.

⑤ TREBLE CONTROL

This is used to adjust the TREBLE (high frequency range) sound. When the control is turned clockwise, the level of sound above the frequency selected by the TREBLE TURNOVER control is emphasised. Conversely, when the control is turned counter-clockwise (\cap) from the "0" position, the level of sound above the frequency selected by the TREBLE TURNOVER control is attenuated.

NOTE:

The control does not operate if the LINE STRAIGHT switch is ON.

⑥ MODE SELECTOR

This is used to select the mode.

- REV Set here to shunt the left channel and right channel stereo input signals and listen in stereo.
- STEREO Set here for ordinary stereo listening.
- MONO Set here to mix the left and right channel stereo input signals and hear them in mono through both the left and right speakers.

NOTE:

The MODE selector does not function when the LINE STRAIGHT switch is in ON position.

⑦ SPEAKER SWITCHES

- OFF There is no output signal from either A or B output terminals.
- A Sound is heard from the speakers connected to SPEAKERS A terminals.
- B Sound is heard from the speakers connected to SPEAKERS B terminals.
- A + B ... Sound is heard from the speakers connected to both SPEAKERS A and B terminals.

⑧ PHONES JACKS

Connect the plug on your headphones to this jack. To listen to a program through the headphones, turn the SPEAKER switches to OFF.

9 PEAK POWER WATTS/8Ω INDICATOR

This indicates the output level at 6 stages, when speakers with a nominal impedance of 8 ohm are connected to the SPEAKERS terminals. (When the SPEAKER switches are OFF, it does not light up)

The RANGE SWITCH functions as follows

- : When released, it indicates the high level output (200, 50, 15) in watts.
- : When depressed, it indicates the low level output (5, 1, 0.3) in watts.

10 TAPE MONITOR SWITCHES

Used to play back a tape or monitor a recording.

- TAPE 1 Depress to play back a tape or monitor a recording on the tape deck connected to TAPE 1 PLAY terminals.
- TAPE 2 Depress to play back a tape or monitor a recording on the tape deck connected to TAPE 1 PLAY terminals.
- OFF Depress if not playing back a tape or monitoring a recording.

NOTE:

Simultaneous playback or monitoring on TAPE 1 and TAPE 2 is not possible.

Always be careful to depress the TAPE MONITOR switch properly.

If the switch is not depressed, both of the indicators for TAPE 1 and TAPE 2 light up and no sound is heard.

11 PHONO SELECTOR

To play a record on the turntable, adjust either MC or MM depending on the cartridge being used.

When using an MC (Moving Coil) Cartridge, position at MC (100Ω or 33Ω).

12 FUNCTION SWITCH

This is used to select the program source. At the left of each switch is a FUNCTION indicator, which lights up when the corresponding function has been selected.

PHONO Depress for playing records on a turntable connected to the PHONO terminals.

TUNER Depress for listening to a broadcast on a tuner connected to the TUNER terminals.

CD/AUX1 Depress for listening to the sound from a stereo component connected to the CD/AUX1 jacks.

AUX2 Depress for listening to the sound from a stereo component connected to the AUX2 jacks.

13 VOLUME CONTROL

This is used to adjust the volume of sound heard through the speakers or headphones. The scale shows the attenuation of the dB display. No sound is heard when the control is set at “∞”. Turn slowly in a clockwise direction (↻).

14 MUTING – 20dB SWITCH

The volume is attenuated by 20dB when this switch is depressed to the ON position (MUTING indicator lights up). The switch can be used effectively when the stylus descends onto the record during record play, when the sound is to be turned down temporarily and when you want to adjust the sound precisely as you listen to a program source under low sound level conditions.

15 LINE STRAIGHT SWITCH

When the switch is depressed to OFF position (the LINE STRAIGHT indicator goes out), the signal from the input jacks passes through the Balance mode and the tone control circuits and the tone quality can be adjusted using the TREBLE and BASS controls.

When the switch is depressed once again to ON position (LINE STRAIGHT indicator lights up), the signal from the input jacks is sent directly to the Power Amplifier, without passing through the balance mode and tone control circuits and a flat frequency is obtained.

16 SUBSONIC FILTER SWITCH

When the switch is depressed to the ON position, the subsonic filter with the 15Hz cut off frequency operates. The subsonic filter attenuates frequencies lower than 15Hz with a 6dB/oct slope, and can be used, therefore, to suppress the ultra-low range noise, which is generated by record warp and other factors. This noise cannot actually be heard by the ear, but it can cause intermodulation distortion and even damage to the speaker systems. When playing badly warped records, this switch can be used to good effect.

17 TAPE COPY SWITCHES

Use these switches when copying a tape, using 2 tape decks.


- 1 ► 2 Depress when copying a tape (recording) from tape deck 1 to 2.
- 2 ► 1 Depress when copying a tape (recording) from tape deck 2 to 1.
- OFF Depress when not copying.
Leave in the OFF position normally.

18 BALANCE CONTROL


Used to adjust the balance of sound from the left and right channels. To increase the volume from the right channel, turn in a clockwise direction from the centre (↻). To increase the volume from the left channel, turn in an counter-clockwise direction from the center (↺). The control does not function if the LINE STRAIGHT switch is ON.

3. BLOCK DIAGRAM

A

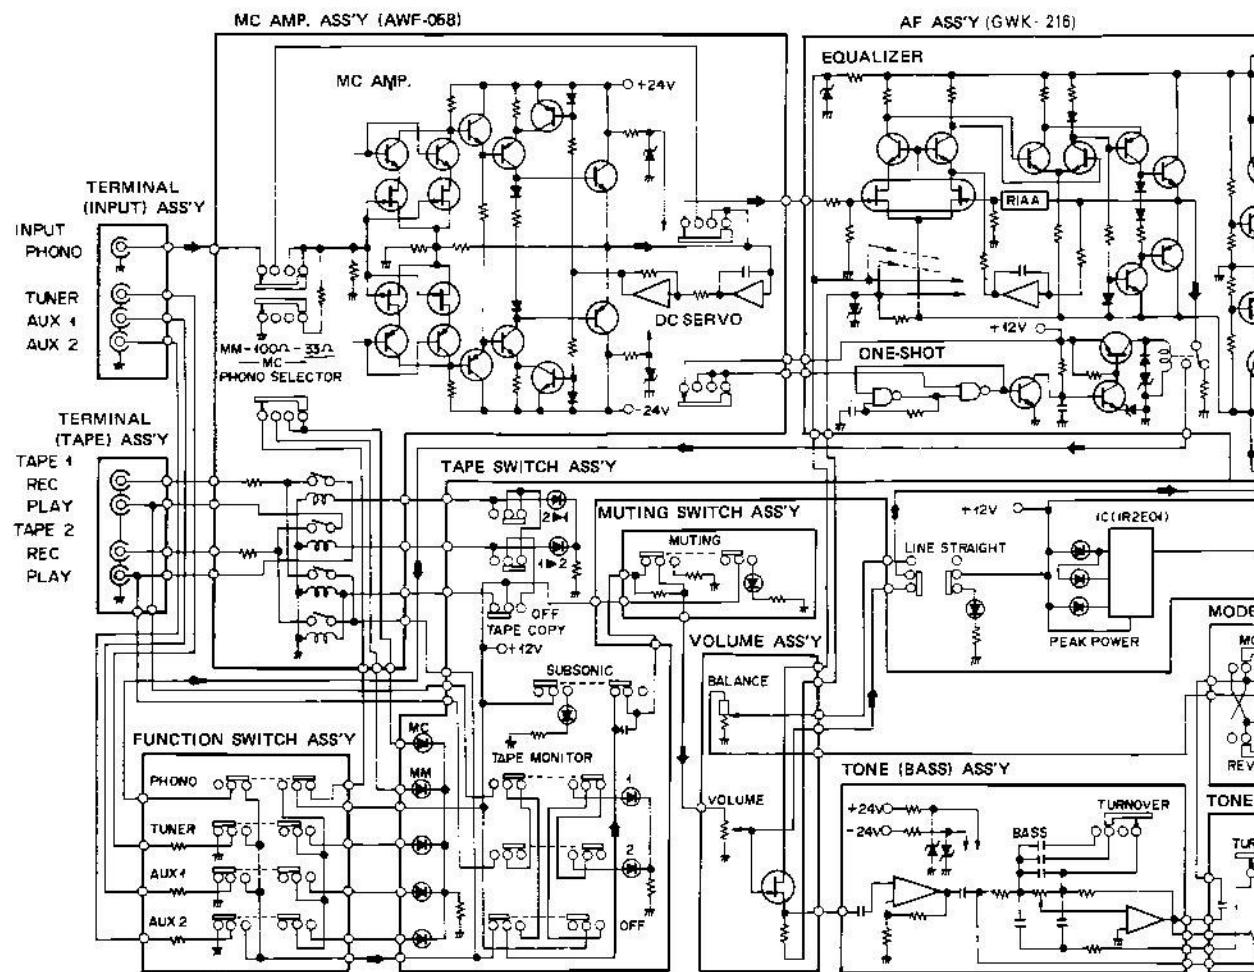


B

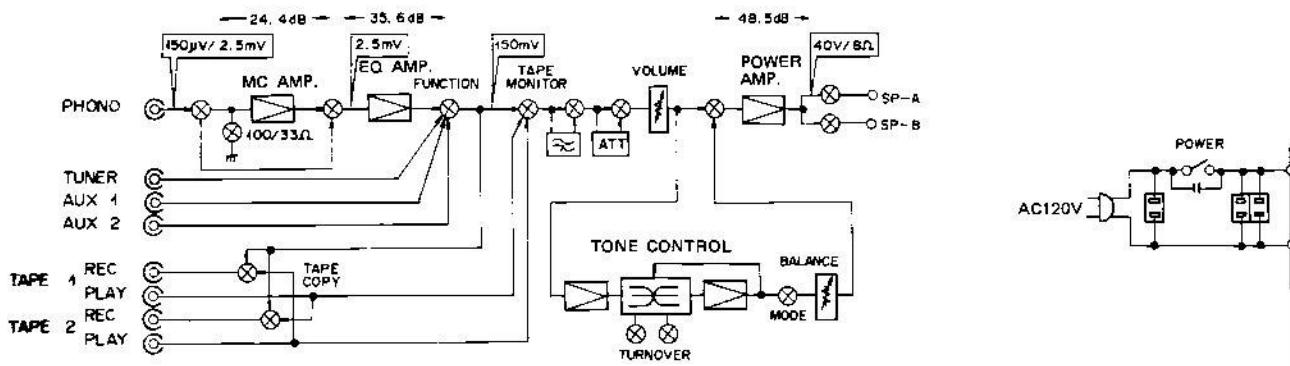

C

D

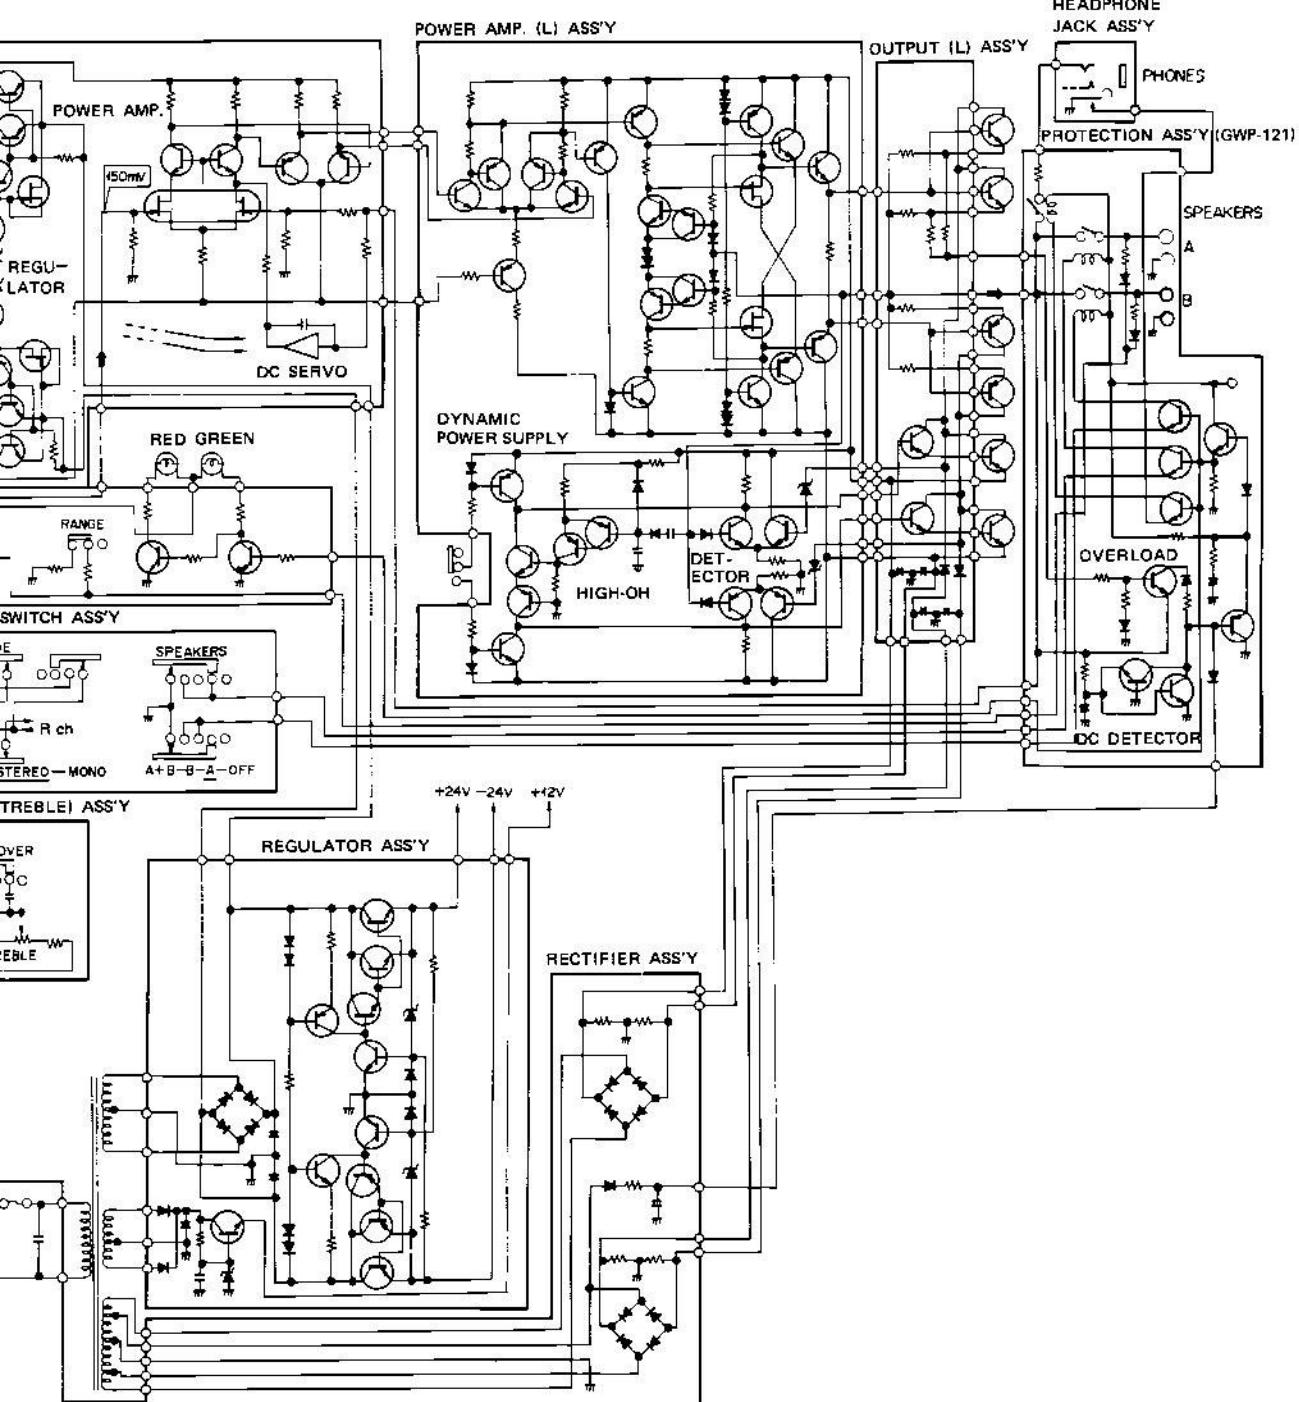

4. CIRCUIT DESCRIPTIONS

4.1 OUTLINE OF MAIN CIRCUITS

MC Head Amplifier

This is an input-parallel positive/negative DC amplifier with DC servo controlling the stage 3 bias circuit to prevent deterioration in the signal-to-noise ratio when the signal level is very low. The amplifier gain is 24.4dB and the S-to-N ratio is 74dB (150 μ V input).

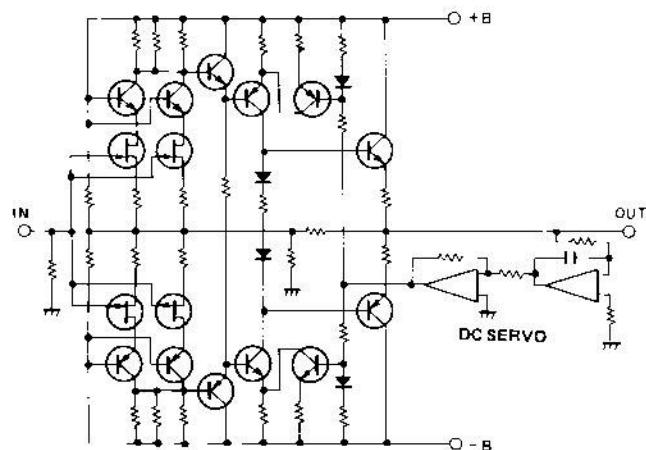


Fig. 4-1 MC head amplifier

Equalizer Amplifier

The use of an input stage FET and DC servo control has eliminated the need for input/output coupling capacitors. Amplifier gain is 35.6dB (1kHz).

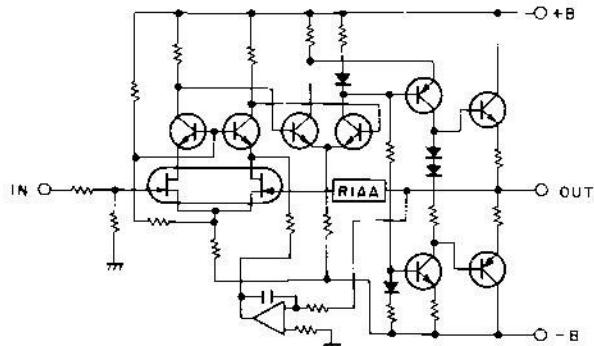


Fig. 4-2 Equalizer amplifier

Phono System Muting Circuit

Transient noise generated when the power is switched on and off, and the noise generated when the PHONO SELECTOR is switched are muted by a relay type muting circuit in the equalizer amplifier output (see Fig. 4-3).

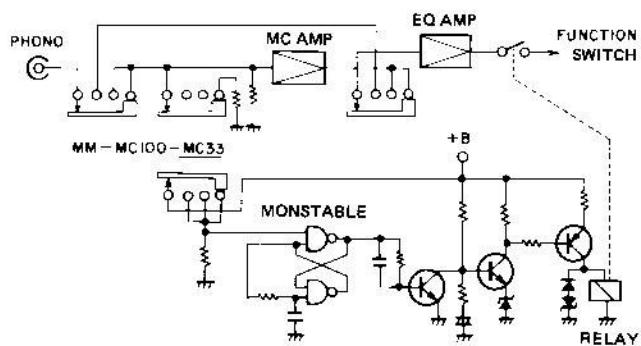


Fig. 4-3 Phono system muting circuit

Tone Control

NFB type tone control circuit with separate 3-step switchable turnover frequencies for low and high frequency regions.

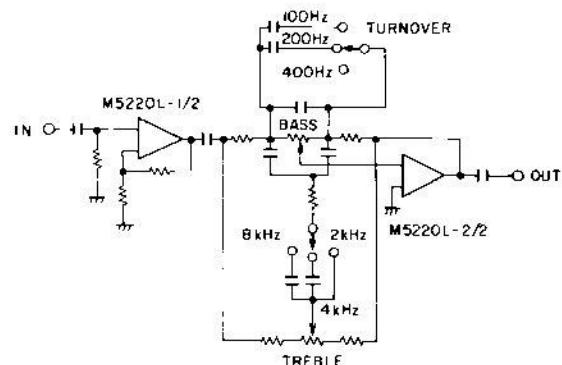


Fig. 4-4 Tone control

Line Straight Circuit

The LINE STRAIGHT switch in the A-90 simplifies the signal path by bypassing the tone control circuit, the mode switching circuit, and the balance control circuit. (See Fig. 4-5).

Power Amplifier

The A-90 features high efficiency with a dynamic power supply system, high-speed bias servo control non-switching mechanism, and a first stage FET differential input and DC servo control DC amplifier system.

The FET buffer circuit between the voltage amplifier and power amplifier stages further reduces distortion and lessens the effects due to the load. (see Fig. 4-6).

The advantages of inserting the FET buffer between stages are enumerated below.

- (1) The power amplifier stage is set to constant voltage, thereby suppressing non-linearity in the hfe factor of the power transistor.
- (2) High loop gain stability unaffected by changes in the load.
- (3) Big reduction in the open-loop output impedance.
- (4) Power transistor driven at very low impedance, thereby reducing the effects of the storage carrier, and enabling high-speed operation.
- (5) With the very high load impedance at the predriver stage, distortion is minimal at high gain in this stage.

Protector Circuit

Standard protector circuit with bridge type overload detector, DC voltage detector, delayed relay action when the power is switched on, and rapid relay action when the power is switched off. Furthermore, a muting relay is also used in speaker switching. (see Fig. 4-7).

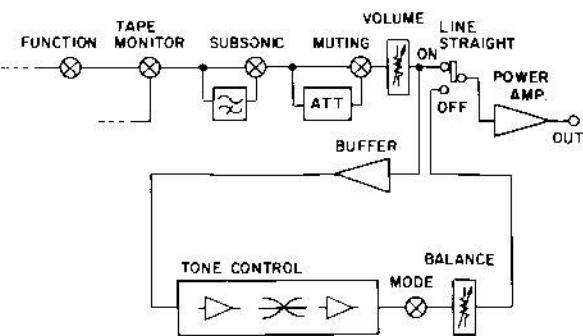


Fig. 4-5 LINE STRAIGHT circuit

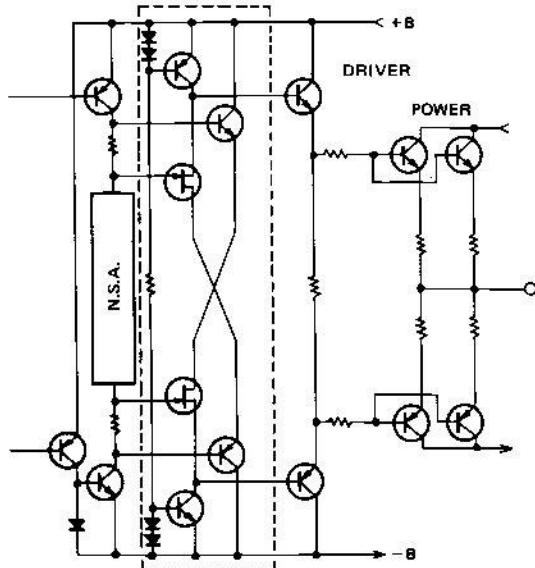


Fig. 4-6 FET Buffer

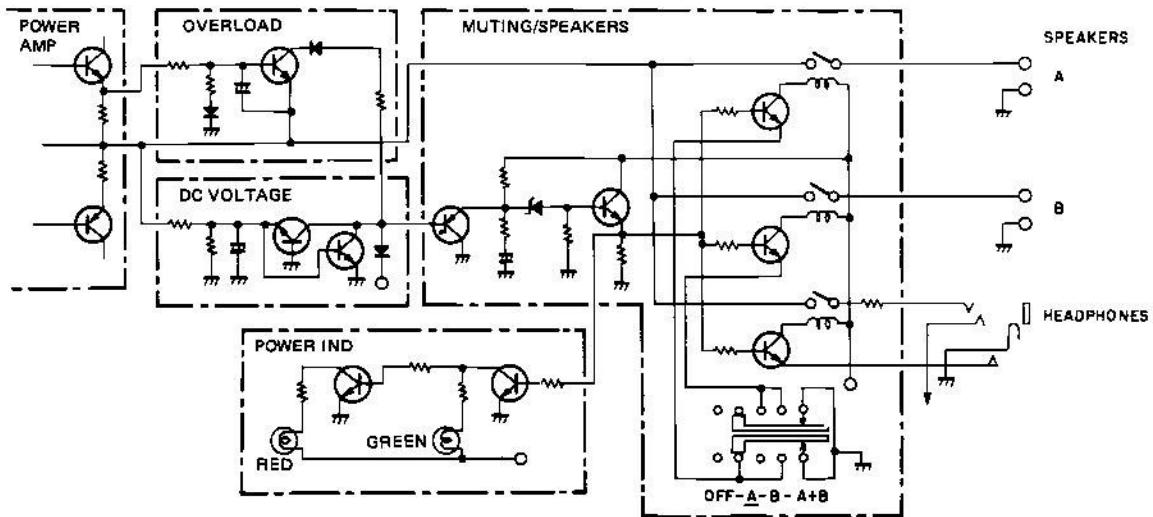


Fig. 4-7 Protector circuit

4.2 DYNAMIC POWER SUPPLY CIRCUIT

The dynamic power supply system featured in the final stage of the A-90 power amplifier varies the voltage applied to the power transistor in accordance to the signal level. The result is reduced heat loss and higher efficiency.

Operating Principles

The basic circuitry is outlined in Fig. 4-8. There are two power lines, V_H and V_L . The signal output v_a is compared with final stage power voltage v_a by differentiator, v_a being obtained by controlling V_H . With the v_a input applied to the differentiator being offset by E_s (several volts), the v_a waveform is traced, v_a being several volts larger than v_o . If, however, v_o is less than $V_L - E_s$, v_a is fixed at the V_L level (see Fig. 4-9). The purpose of the high-region ON circuit is to avoid irregularities from occurring where v_a can no longer follow v_o at high signal frequencies, and to prevent high-speed continuous operation in the control transistor. That is, when high frequency signals appear at the output, the control transistors (Q_3 and Q_4) are turned fully on, and v_a is fixed at the V_H level.

A-90 Dynamic Power Supply Circuit

The overall circuit structure is outlined in Fig. 4-10. V_L is fixed so as to obtain the rated output (200W) for a 4Ω load, and the high region ON circuit is designed to operate at frequencies above 3kHz. The SPEAKER IMPEDANCE switch set to the $4\Omega \sim 6\Omega$ position fixes the power supply to the final stage transistor at the V_L level.

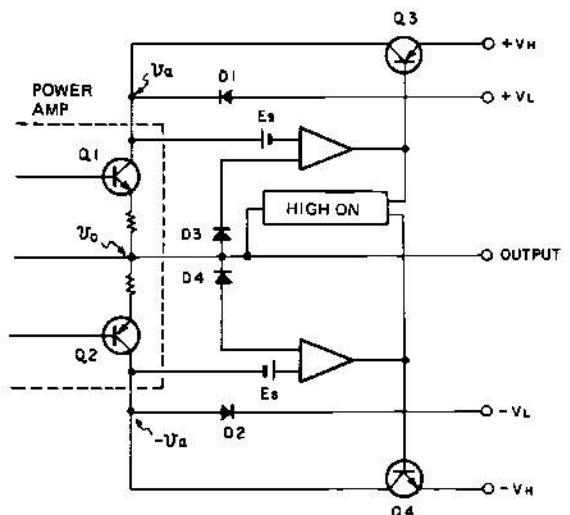


Fig. 4-8 Basic circuitry

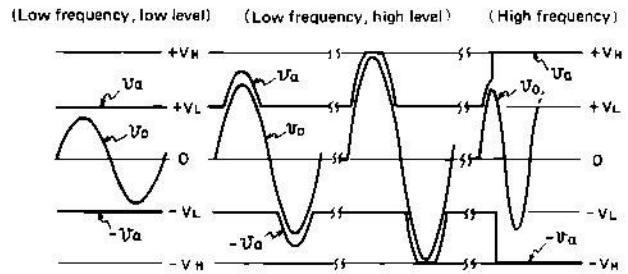


Fig. 4-9 Operating waveforms

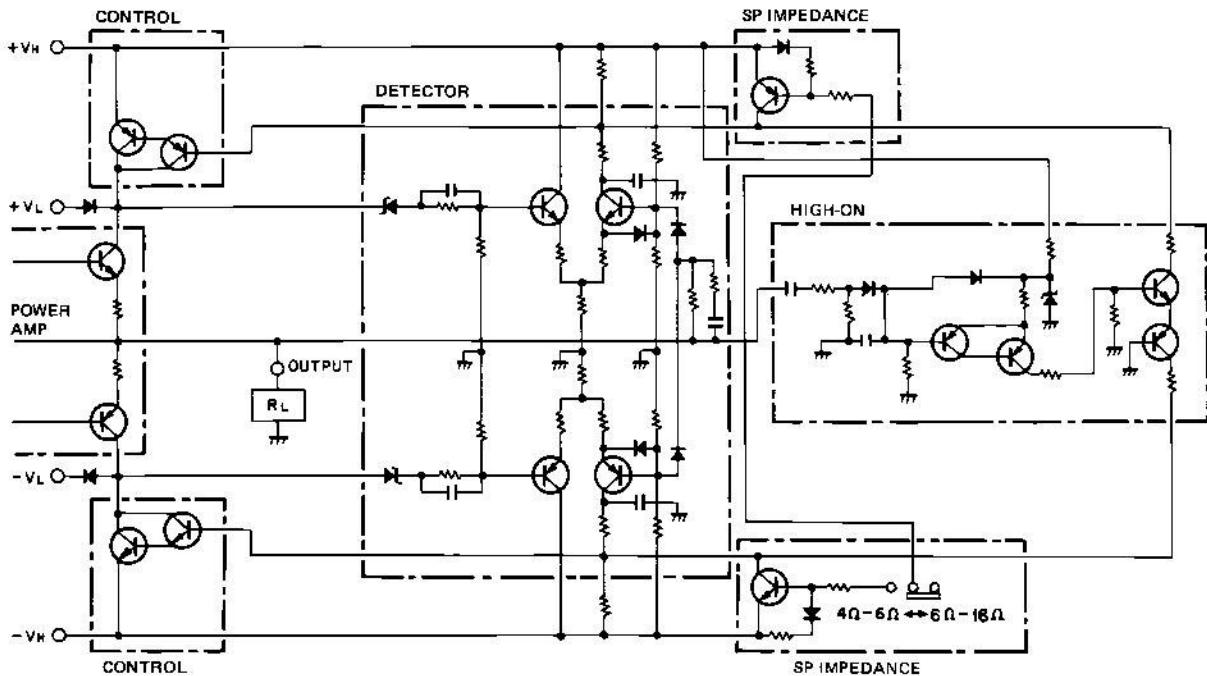



Fig. 10 Dynamic power supply circuit

5. PARTS LOCATION


NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks $\star\star$ and \star .
 $\star\star$ GENERALLY MOVES FASTER THAN \star .
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.


Front Panel

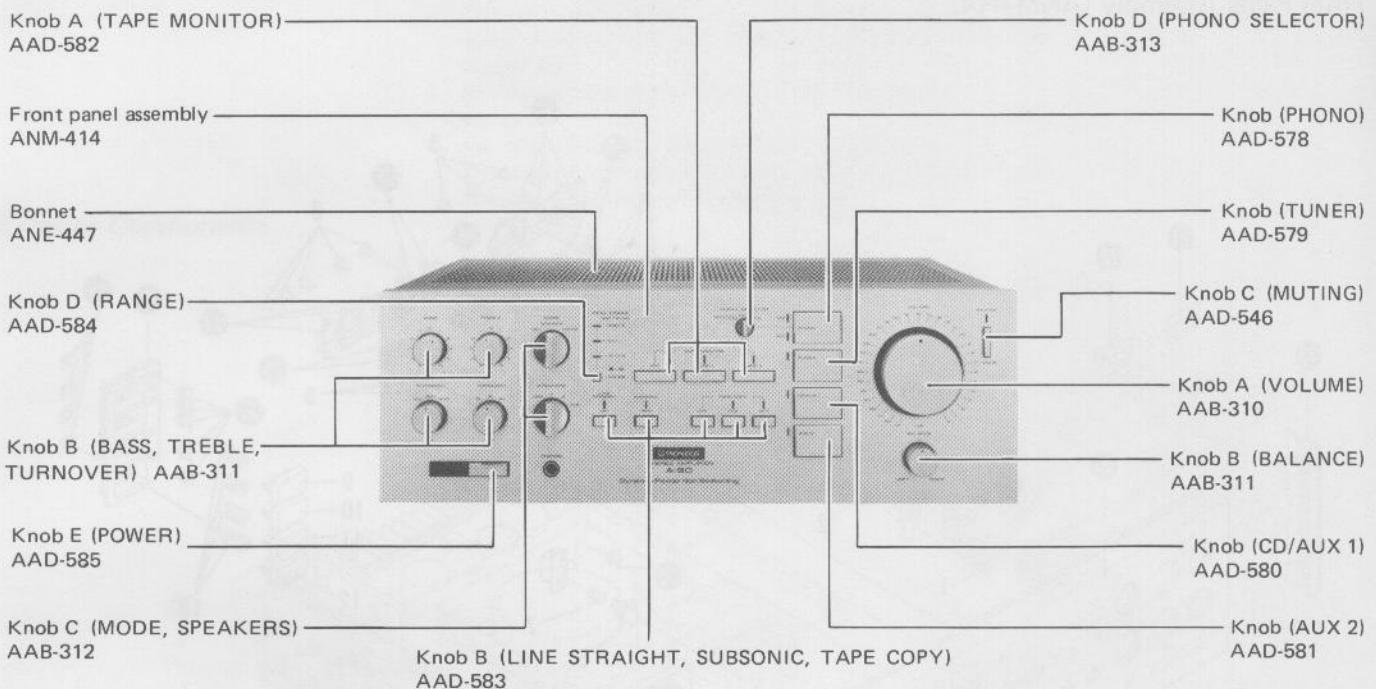


Front View

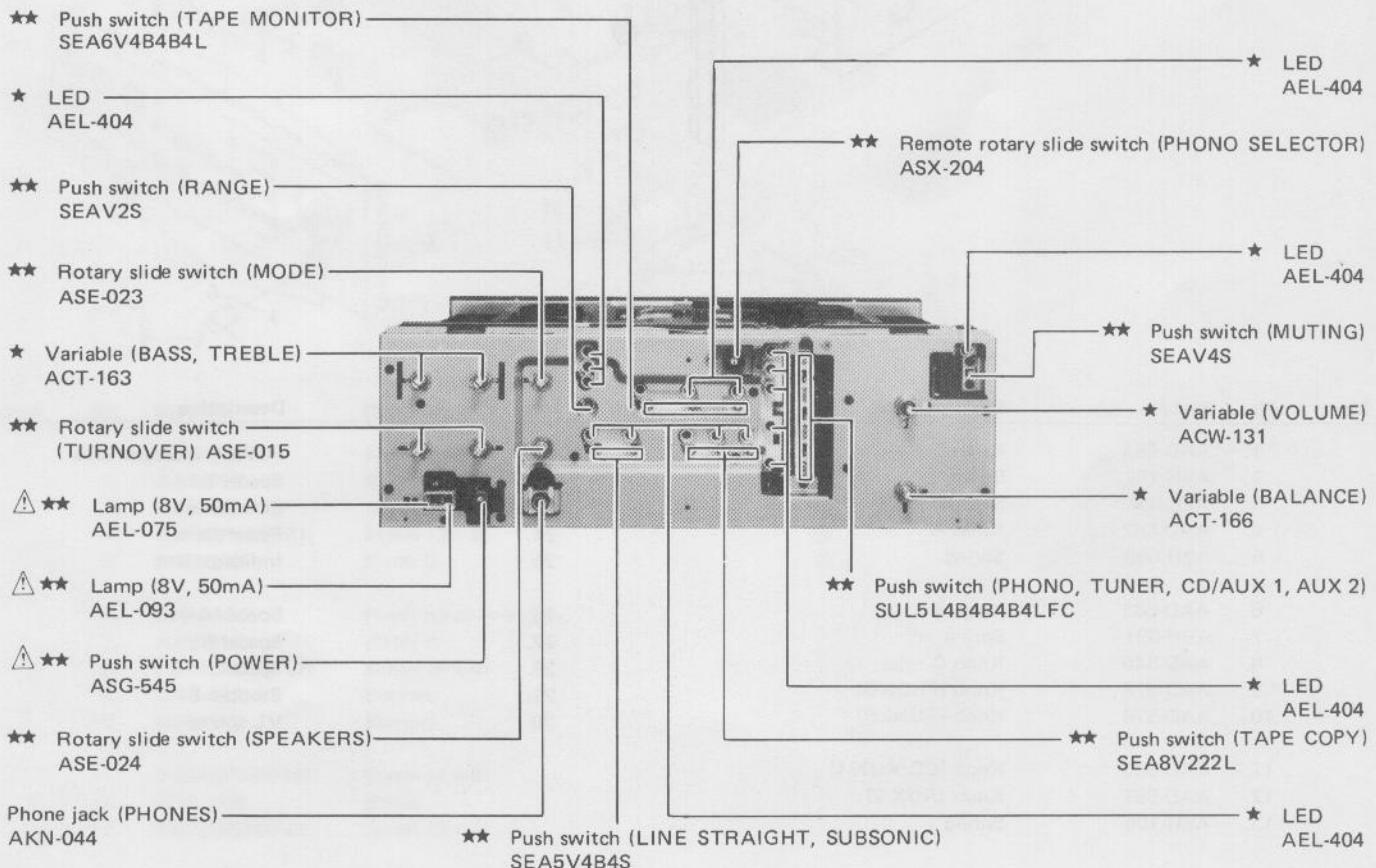


Top View

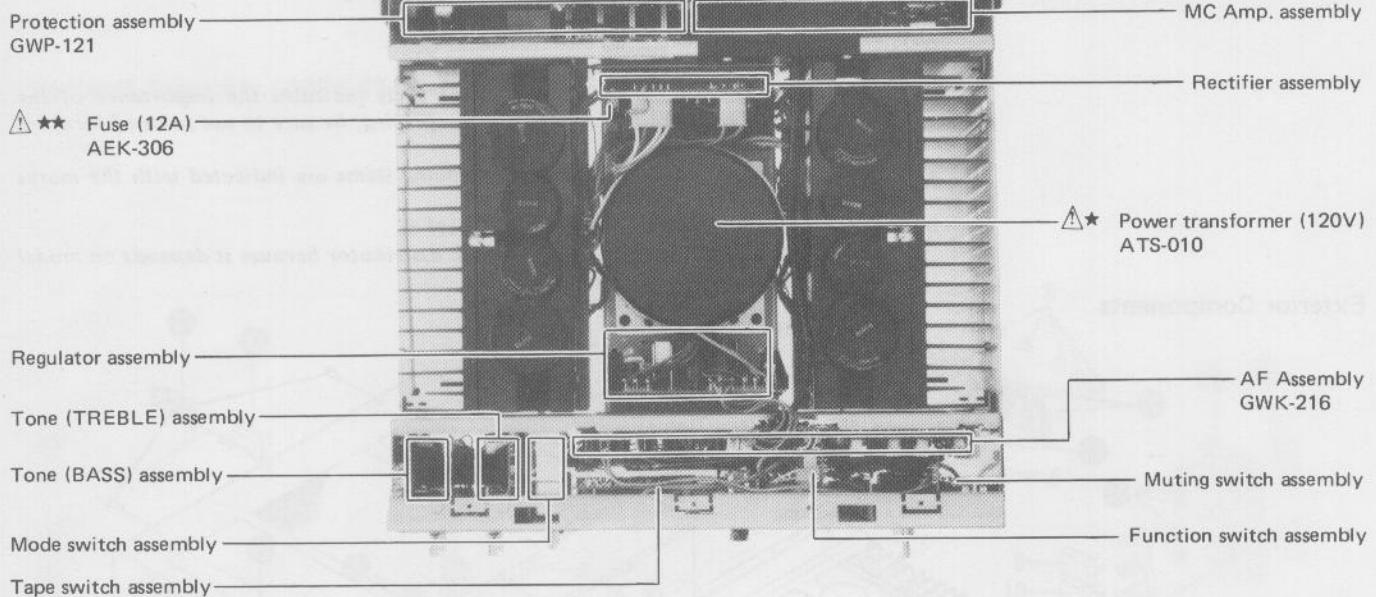

Bottom View

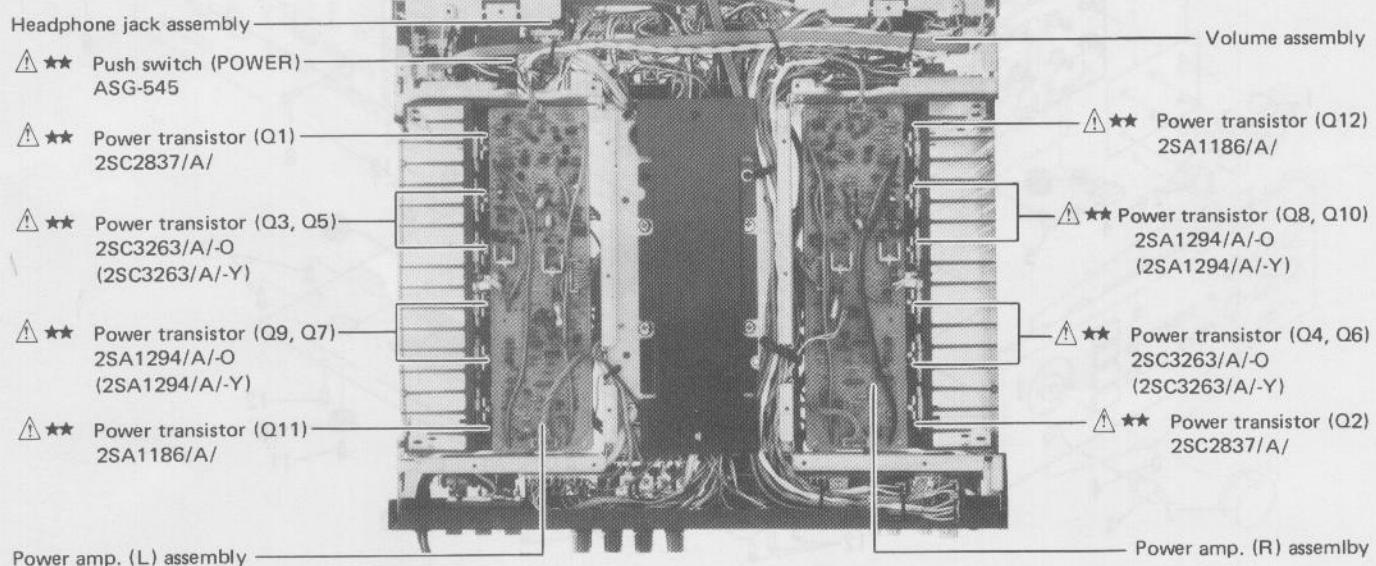

Rear Panel

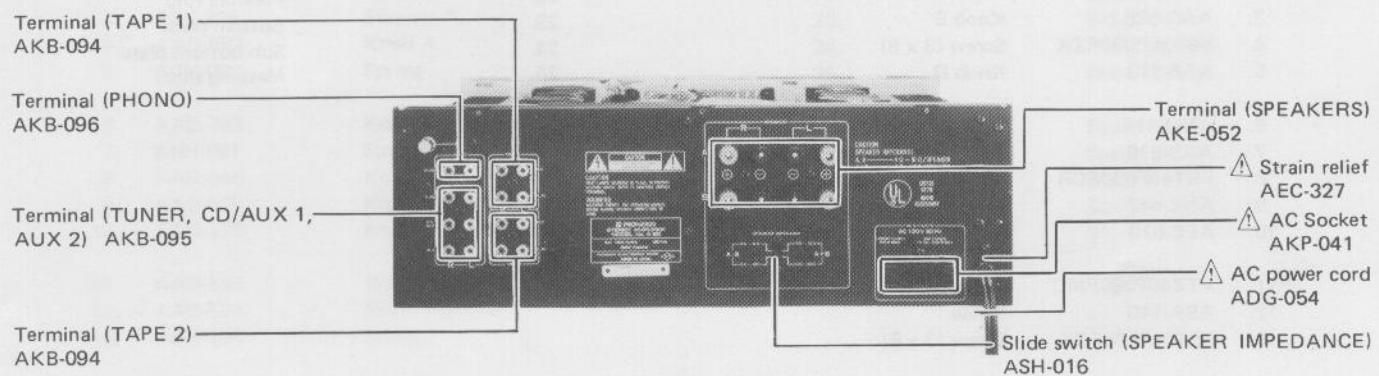


6. EXPLODED VIEWS AND PARTS LIST

NOTES:


- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks $\star\star$ and \star .
- $\star\star$ GENERALLY MOVES FASTER THAN \star .
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Exterior Components

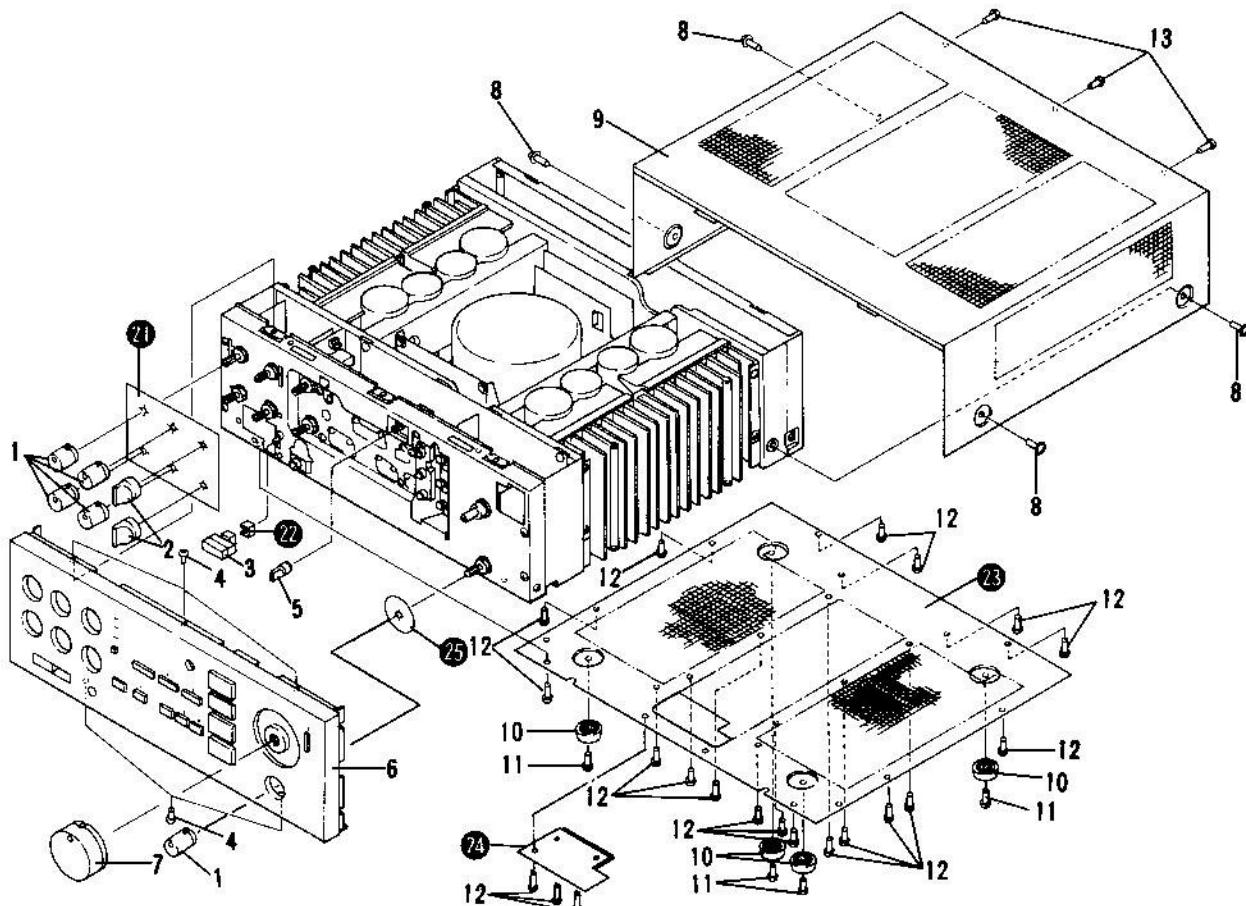


| Mark | No. | Part No. | Description | Mark | No. | Part No. | Description |
|------|--------------|----------------------|-------------|------|-----|----------|------------------|
| 1. | AAB-311 | Knob B | | 21. | | | Masking sheet A |
| 2. | AAB-312 | Knob C | | 22. | | | Flexible ring |
| 3. | AAD-585 | Knob E | | 23. | | | Bottom plate |
| 4. | BBT30P080FZK | Screw (3 x 8) | | 24. | | | Sub bottom plate |
| 5. | AAB-313 | Knob D | | 25. | | | Masking sheet |
| 6. | ANM-414 | Front panel assembly | | | | | |
| 7. | AAB-310 | Knob A | | | | | |
| 8. | FBT40P080FCR | Screw (4 x 8) | | | | | |
| 9. | ANE-447 | Bonnet | | | | | |
| 10. | AEC-613 | Bumper | | | | | |
| 11. | VTZ40P080FMC | Screw (4 x 8) | | | | | |
| 12. | ABA-140 | Screw | | | | | |
| 13. | BBT30P080FZK | Screw (3 x 8) | | | | | |

Front Panel Assembly (ANM-414)

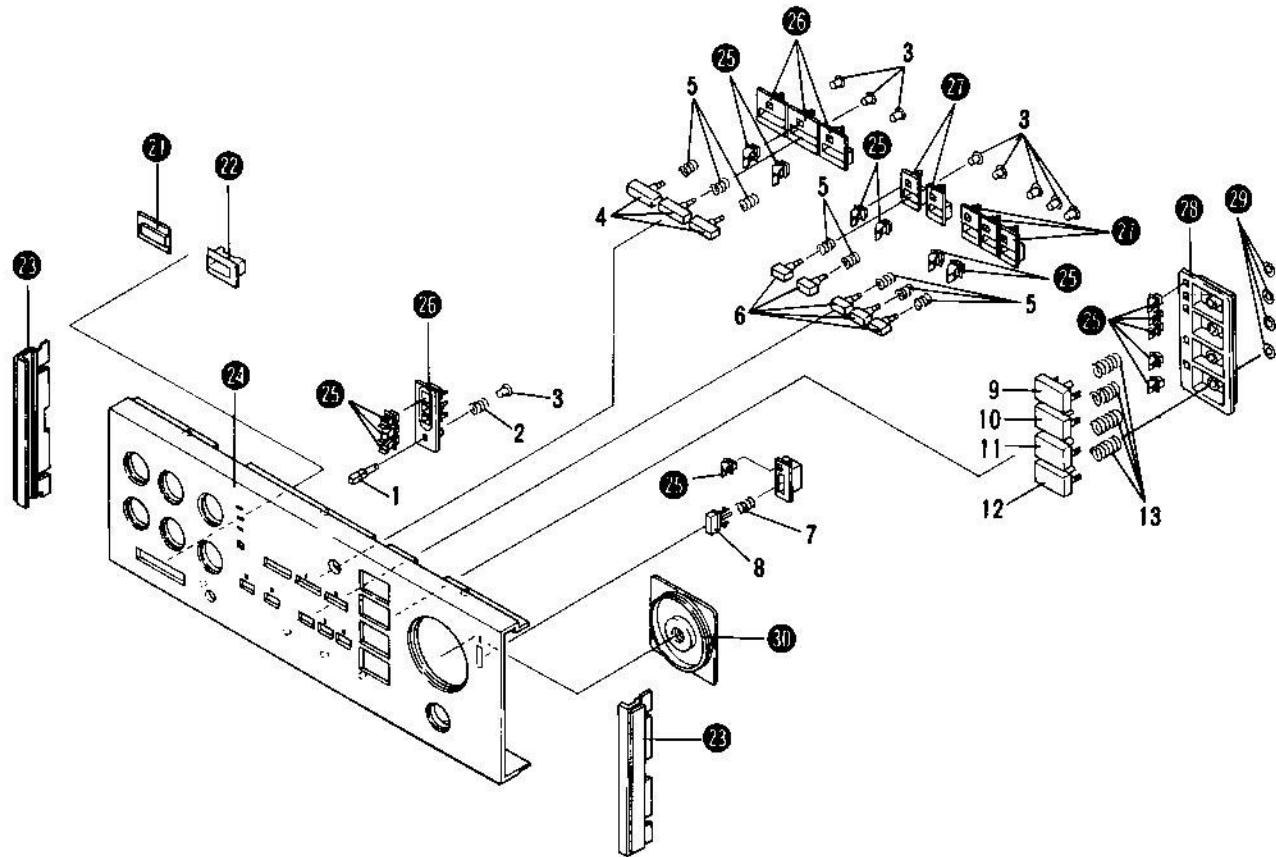


| Mark | No. | Part No. | Description | Mark | No. | Part No. | Description |
|------|---------|-----------------|-------------|------|-----|----------|----------------------|
| 1. | AAD-584 | Knob D | | 21. | | | POWER indicator lens |
| 2. | ABH-102 | Spring | | 22. | | | Spacer E |
| 3. | AEC-936 | Stopper A | | 23. | | | Side panel |
| 4. | AAD-582 | Knob A | | 24. | | | Front panel |
| 5. | ABH-099 | Spring | | 25. | | | Indicator lens |
| 6. | AAD-583 | Knob B | | 26. | | | Spacer A |
| 7. | ABH-091 | Spring | | 27. | | | Spacer B |
| 8. | AAD-546 | Knob C | | 28. | | | Spacer |
| 9. | AAD-578 | Knob (PHONO) | | 29. | | | Stopper B |
| 10. | AAD-579 | Knob (TUNER) | | 30. | | | VL spacer |
| 11. | AAD-580 | Knob (CD/AUX 1) | | | | | |
| 12. | AAD-581 | Knob (AUX 2) | | | | | |
| 13. | ABH-100 | Spring | | | | | |


A

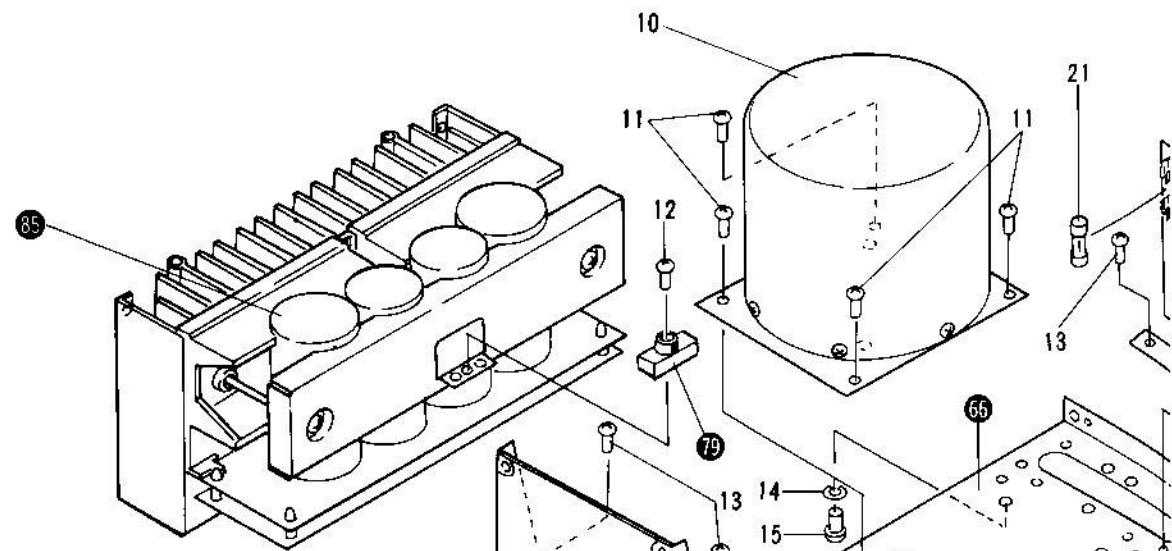


B

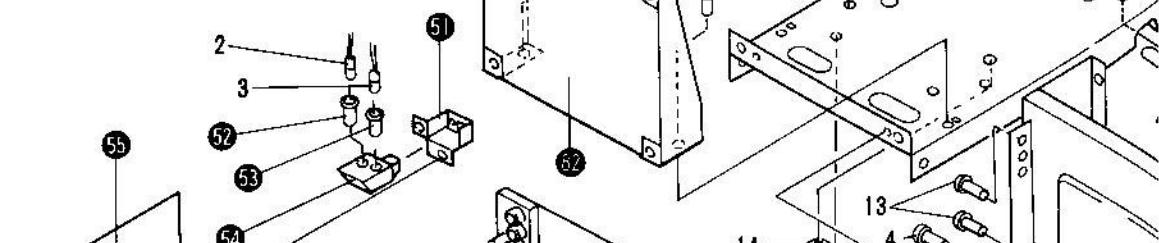

C

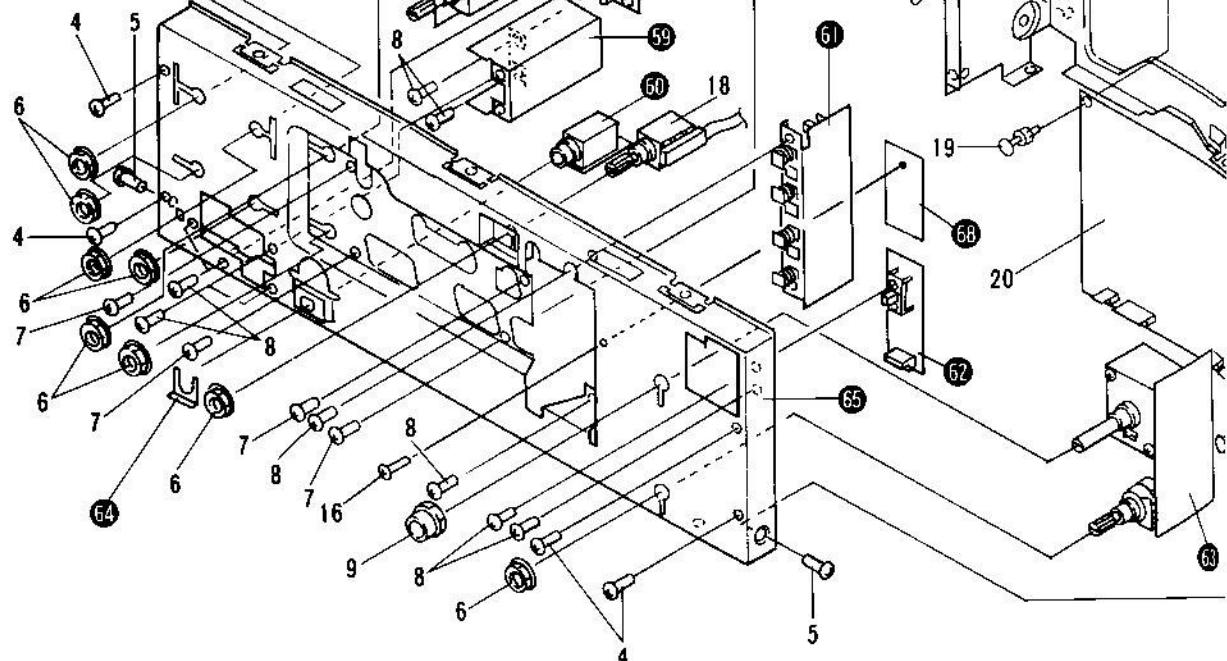


D

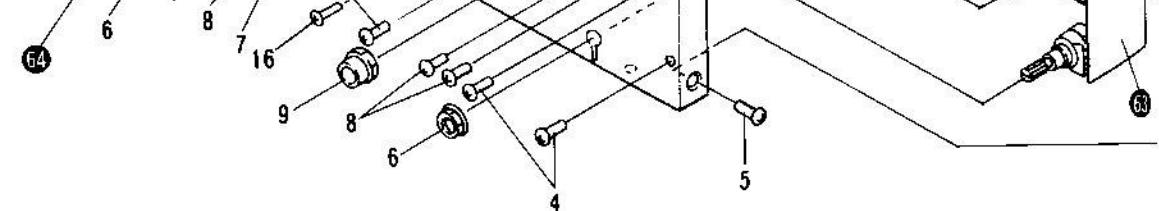

1

2

3

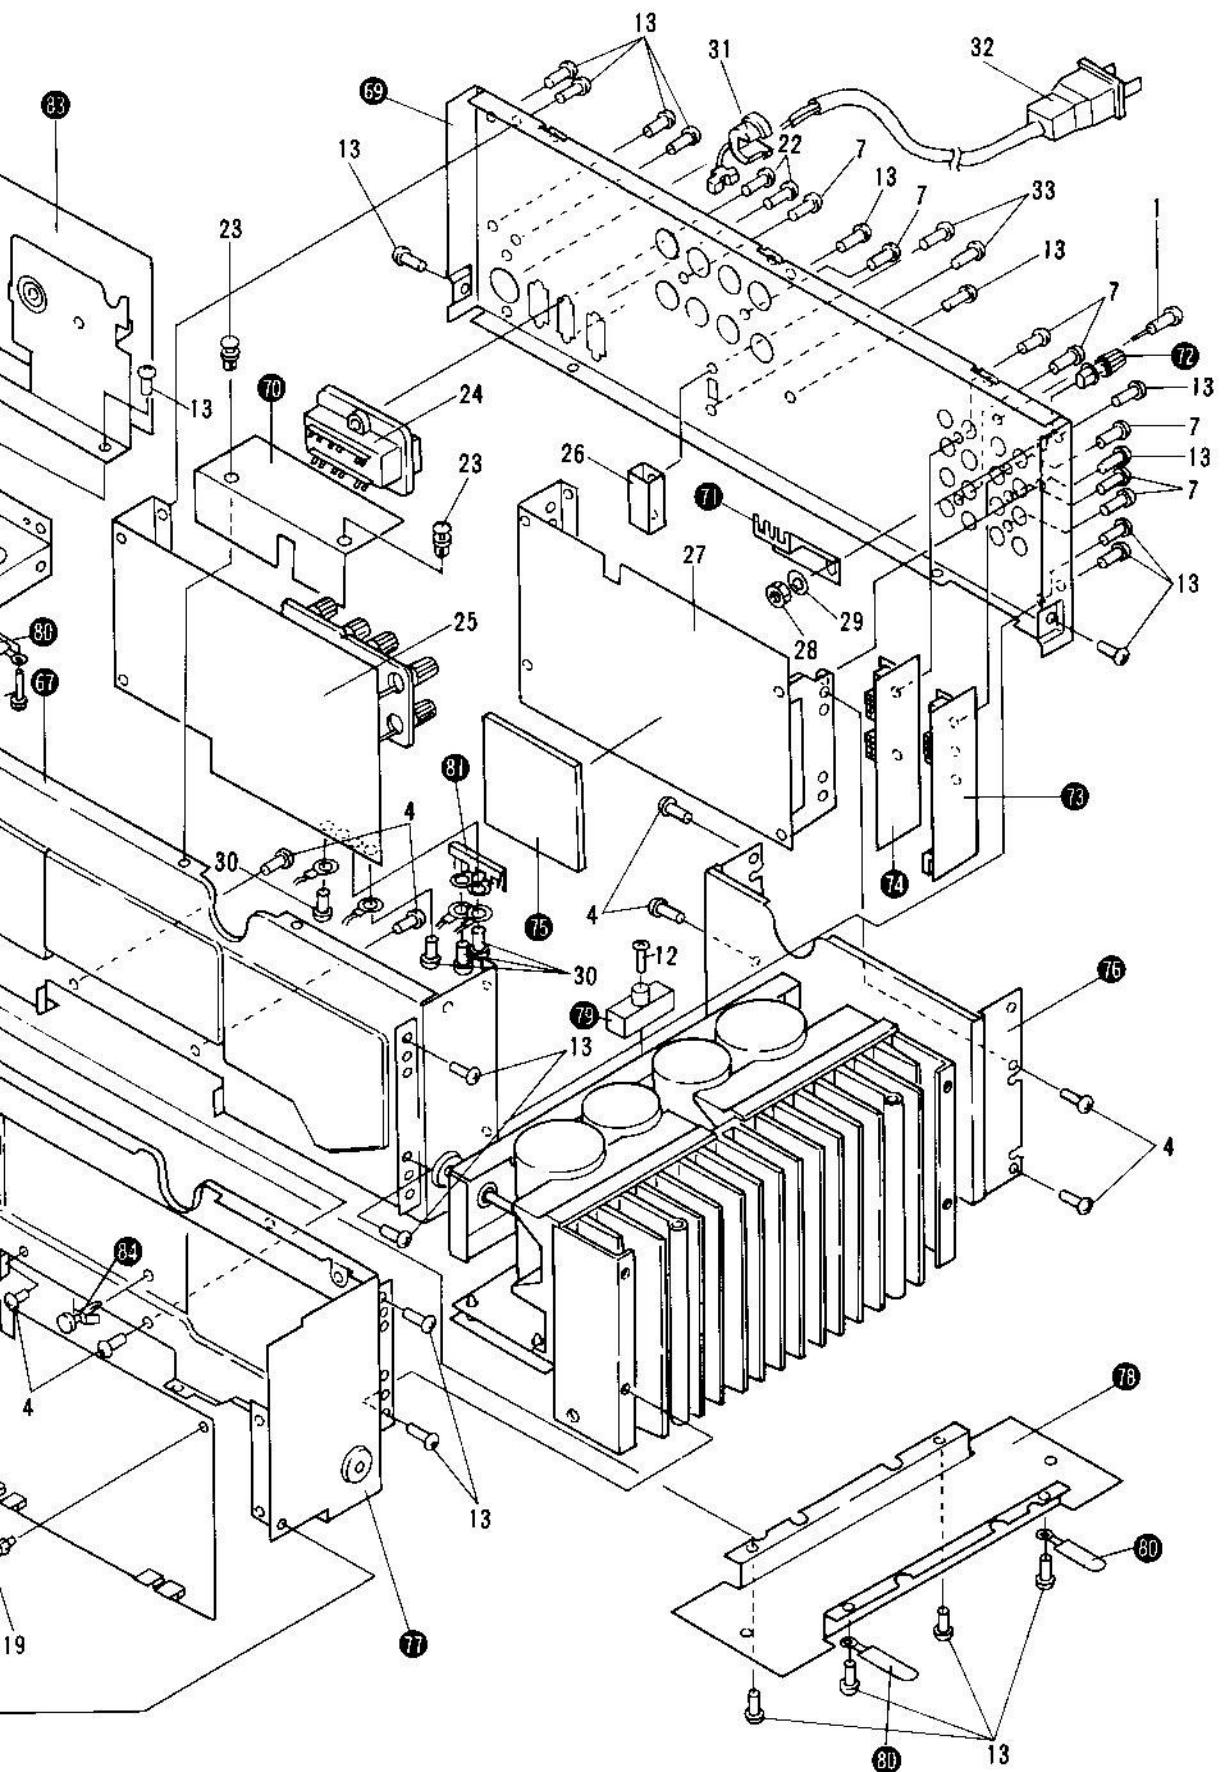

A

B

C

D

4


5

6

16

| Mark | No. | Part No. | Description | Mark | No. | Part No. | Description |
|------|-----|--------------|--------------------------|------|-----|----------|---------------------------|
| ⚠ ★ | 1. | ABA-176 | Screw | | 51. | | Rubber holder |
| ⚠ ★ | 2. | AEL-075 | Lamp (white lead) | | 52. | | Lamp cap (green) |
| ⚠ ★ | 3. | AEL-093 | Lamp (black lead) | | 53. | | Lamp cap (red) |
| | 4. | VBT30P080FZK | Screw (3 x 8) | | 54. | | Lamp holder A |
| | 5. | CBZ30P080FZK | Screw (3 x 8) | | 55. | | Tone (BASS) assembly |
| | 6. | ABN-048 | Nut | | 56. | | Tone (TREBLE) assembly |
| | 7. | BBT30P100FZK | (Screw 3 x 10) | | 57. | | Tape switch assembly |
| | 8. | BMZ30P060FZK | (Screw 3 x 6) | | 58. | | Mode switch assembly |
| | 9. | ABN-028 | Nut | | 59. | | Power switch holder |
| ⚠ ★ | 10. | ATS-010 | Power transformer (120V) | | 60. | | Headphone jack assembly |
| | 11. | VTZ40P080FZK | Screw (4 x 8) | | 61. | | Function switch assembly |
| | 12. | VBZ30P100FZK | Screw (3 x 10) | | 62. | | Muting switch assembly |
| | 13. | BBT30P080FZK | Screw (3 x 8) | | 63. | | Volume assembly |
| | 14. | WS50FMC | Washer | | 64. | | Mounting plate |
| | 15. | BMZ50P100FMC | Screw (5 x 10) | | 65. | | Panel stay |
| ⚠ ★ | 16. | VBT30P080FZK | Screw (3 x 8) | | 66. | | Transformer frame |
| ★★ | 17. | ASG-545 | Push switch (POWER) | | 67. | | Rear frame |
| ★★ | 18. | ASX-204 | Remote rotary switch | | 68. | | Servo regulator assembly |
| | 19. | AEC-384 | Rivet | | 69. | | Rear panel |
| | 20. | GWK-216 | AF assembly | | 70. | | Shielding plate |
| ⚠ ★ | 21. | AEK-306 | Fuse (12A) | | 71. | | Grounding terminal |
| | 22. | MTZ30P100FKZ | Screw (3 x 10) | | 72. | | Terminal (GND) |
| | 23. | AEC-471 | Rivet | | 73. | | Terminal (INPUT) assembly |
| ⚠ | 24. | AKP-041 | AC socket | | 74. | | Terminal (TAPE) assembly |
| | 25. | GWP-121 | Protection assembly | | 75. | | Cushion |
| | 26. | ASH-016 | Slide switch | | 76. | | Shielding case |
| | 27. | AWF-058 | MC amp. assembly | | 77. | | Front frame |
| | 28. | B71-010 | Nut | | 78. | | Wire guide |
| | 29. | WG70FUC | Washer | | 79. | | Terminal |
| | 30. | PMZ30P060SAD | Screw (3 x 6) | | 80. | | Binder |
| ⚠ | 31. | AEC-327 | Strain relief | | 81. | | Grounding plate |
| ⚠ | 32. | ADG-054 | AC power cord | | 82. | | Regulator assembly |
| | 33. | VMT30P060FZK | Screw (3 x 6) | | 83. | | Rectifier assembly |
| | | | | | 84. | | Spacer |
| | | | | | 85. | | Heat sink assembly |

Heat Sink Assembly

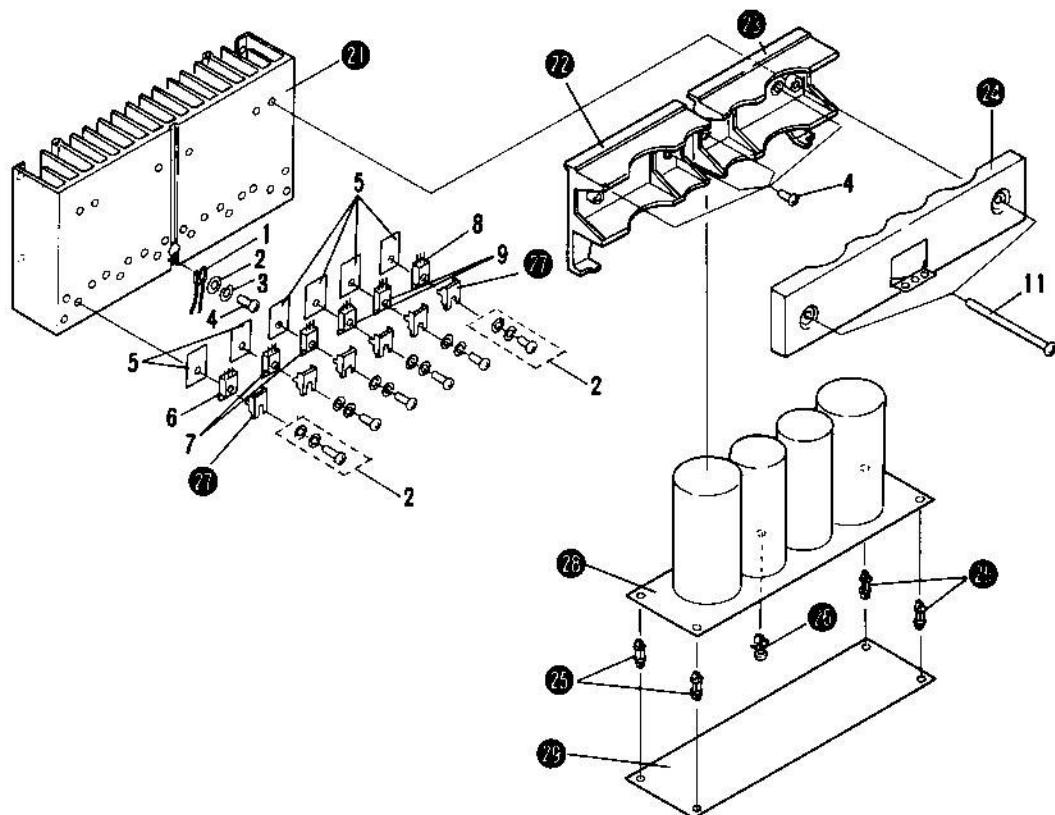


| Mark | No. | Part No. | Description | |
|--------------------------------|-----|----------------------------------|-----------------------------------|--|
| ★ | 1. | STV2H | Varistor (Part of 29) | |
| | 2. | ABA-276 | Screw | |
| | 3. | | | |
| | 4. | VBZ30P100FZK | Screw (3 x 10) | |
| | 5. | AEC-818 | Insulator | |
| △ ★ | 6. | 2SC2837/A/ | Power transistor | |
| △ ★ | 7. | 2SC3263/A/-O* (2SC3263/A/-Y*) | Power transistor | |
| △ ★ | 8. | 2SA1294/A/-O* (2SA1294/A/-Y*) | Power transistor | |
| △ ★ | 9. | 2SA1186/A/ | Power transistor | |
| *hfe must have the same value. | | | | |
| | 11. | PMZ40P800FZB | Screw (4 x 80) | |
| | 21. | | Heat sink | |
| | 22. | | Capacitor holder B | |
| | 23. | | Capacitor holder A | |
| | 24. | | Capacitor holder C | |
| | 25. | | PCB holder | |
| | 26. | | Spacer | |
| | 27. | | Transistor holder | |
| | 28. | | Output (L) assembly (L ch) | |
| | 29. | | Output (R) assembly (R ch) | |
| | | | Power amp. (L) assembly (L ch) | |
| | | | Power amp. (R) assembly (R ch) | |


7. P.C.BOARDS CONNECTION DIARAM

TERMINAL
(TAPE) ASS'Y

A

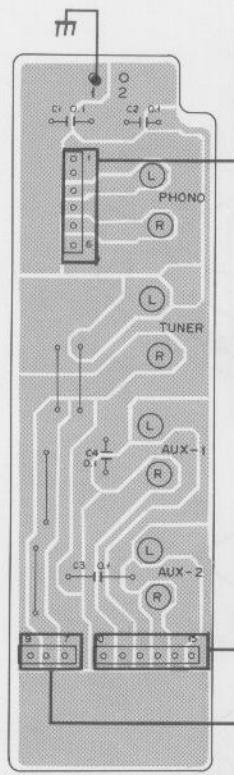



B

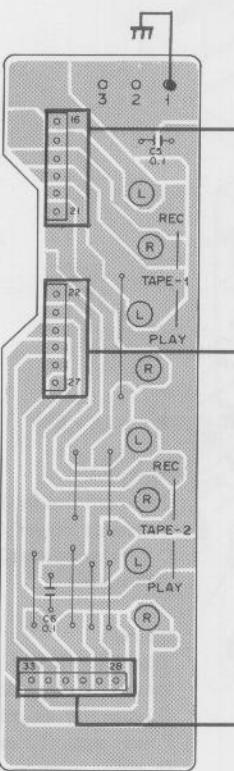


C

TERMINAL
(INPUT) ASS'Y






FUNCTION SWITCH ASS'Y

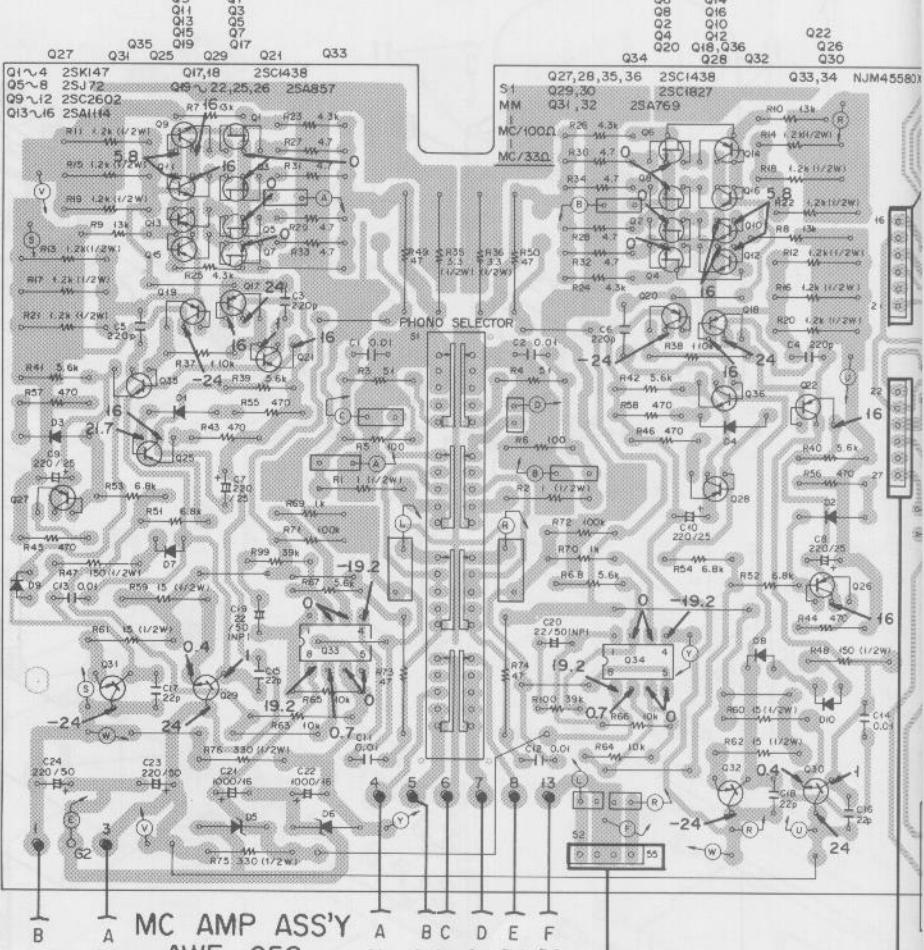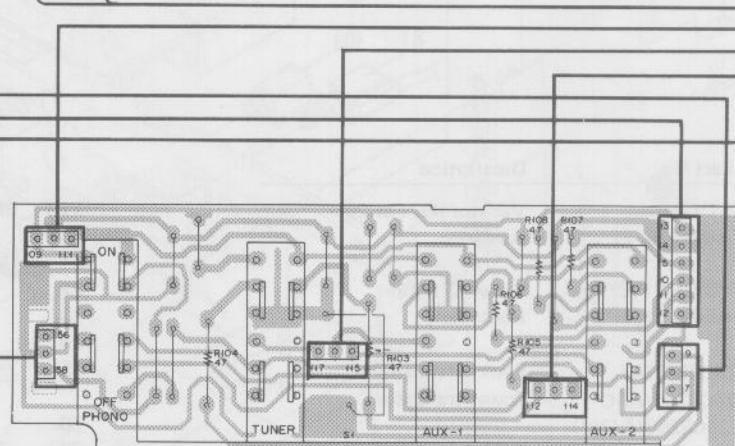

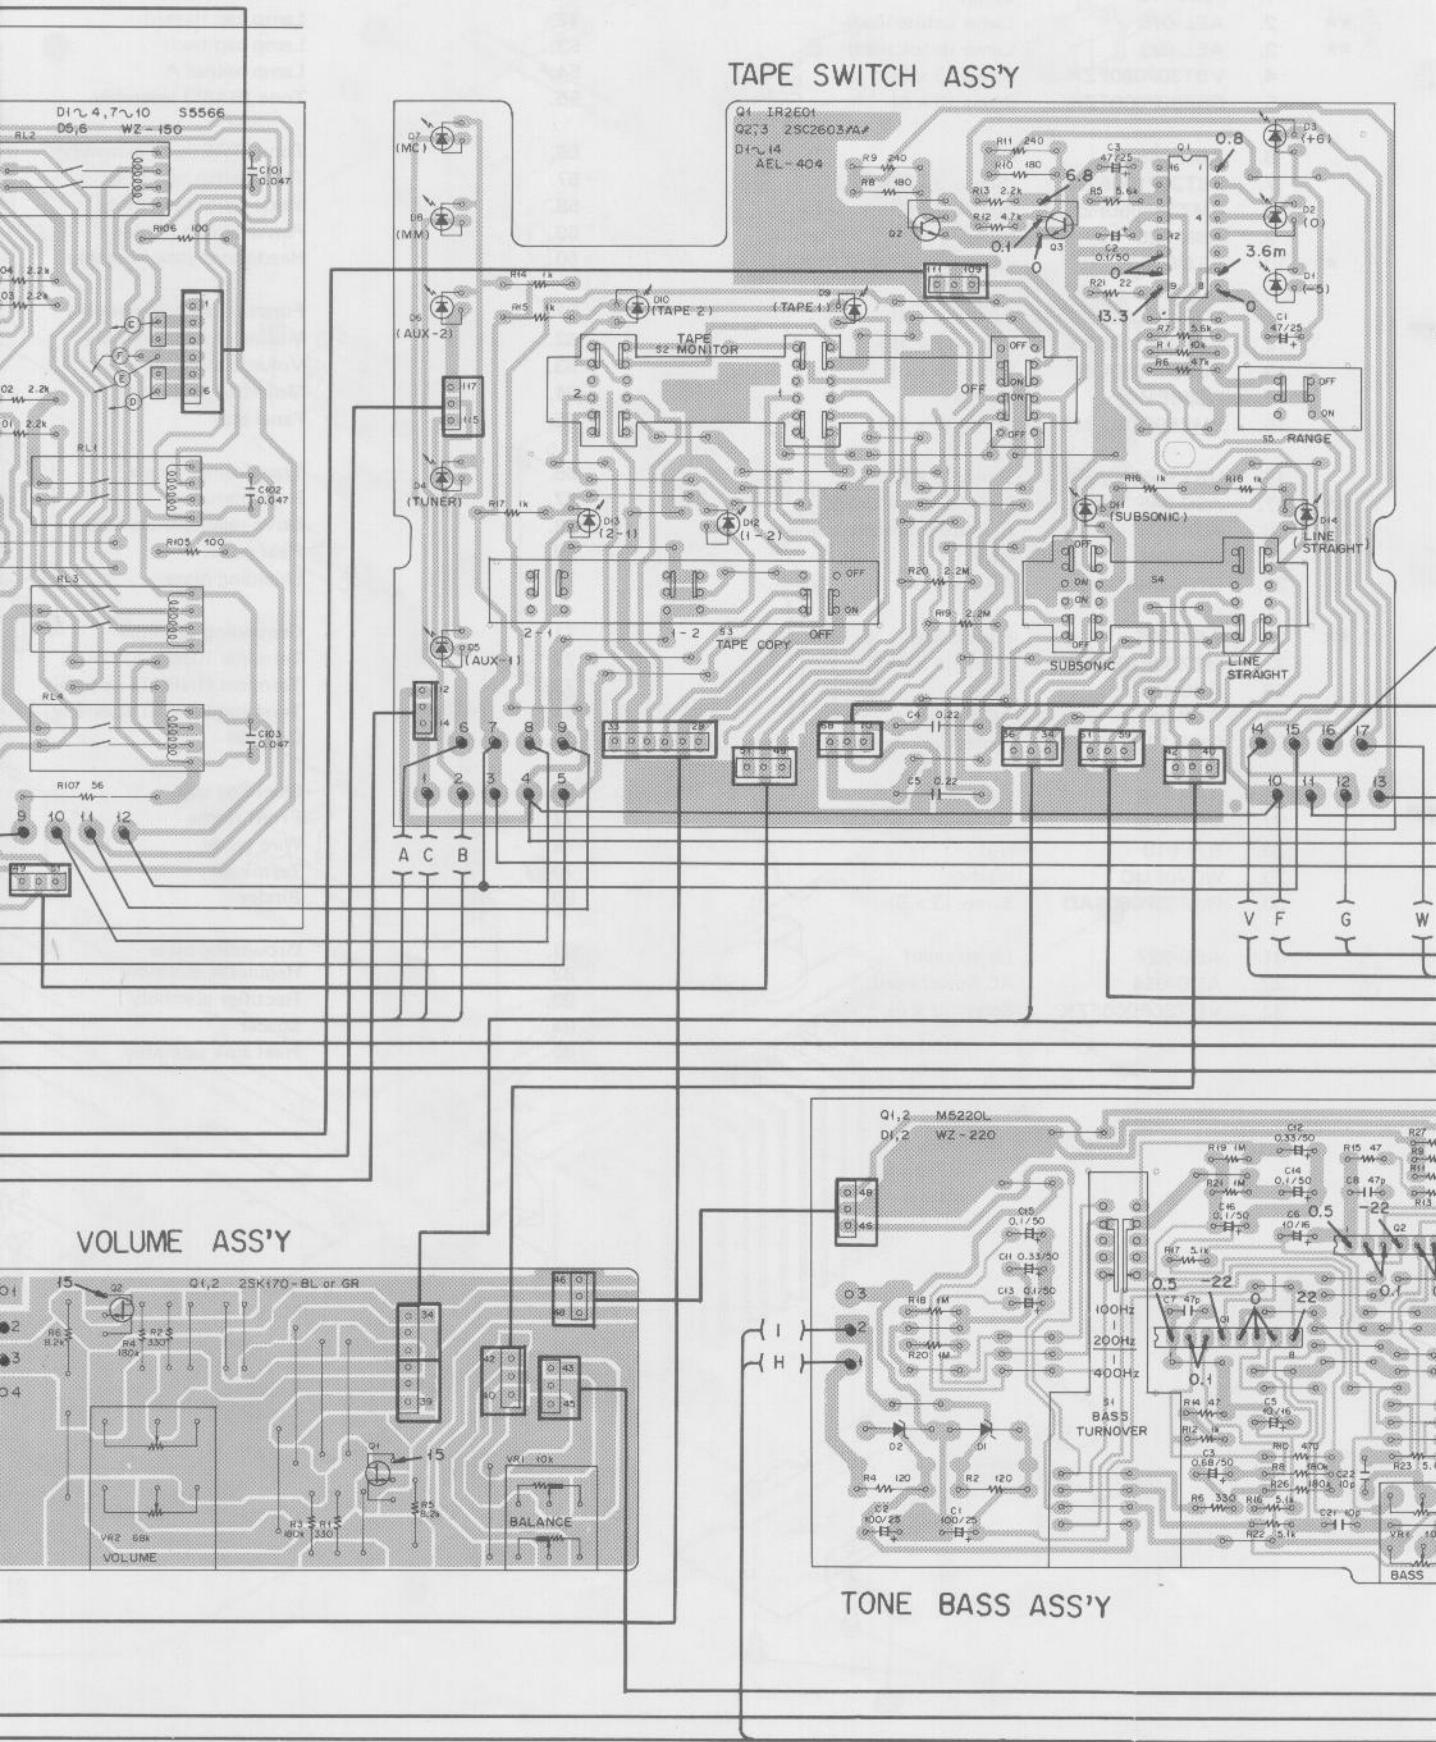


AF ASS'Y GWK-216

MUTING SWITCH ASS'Y

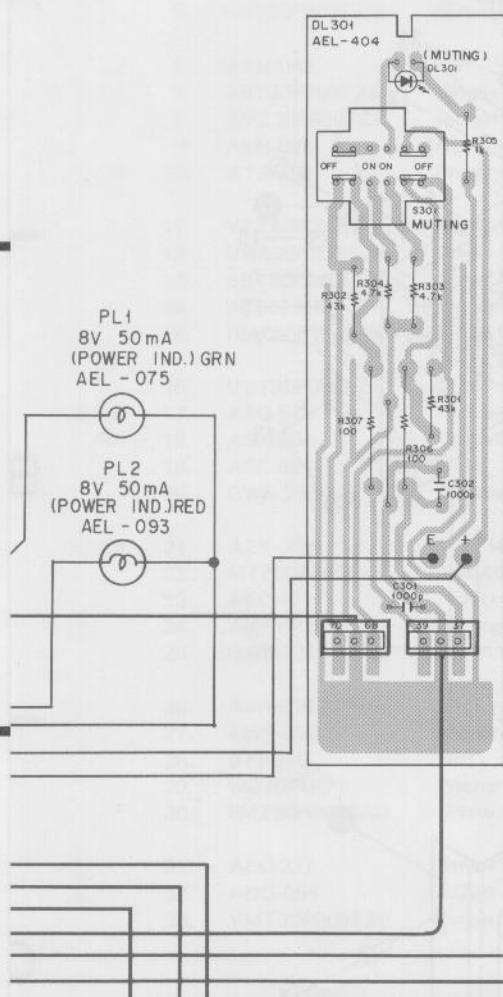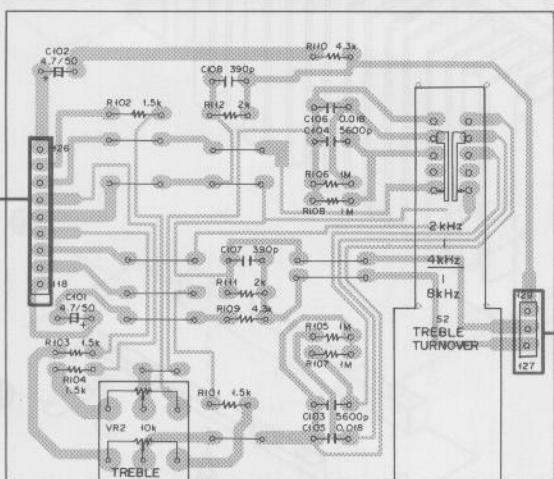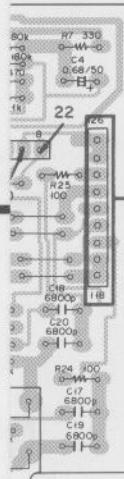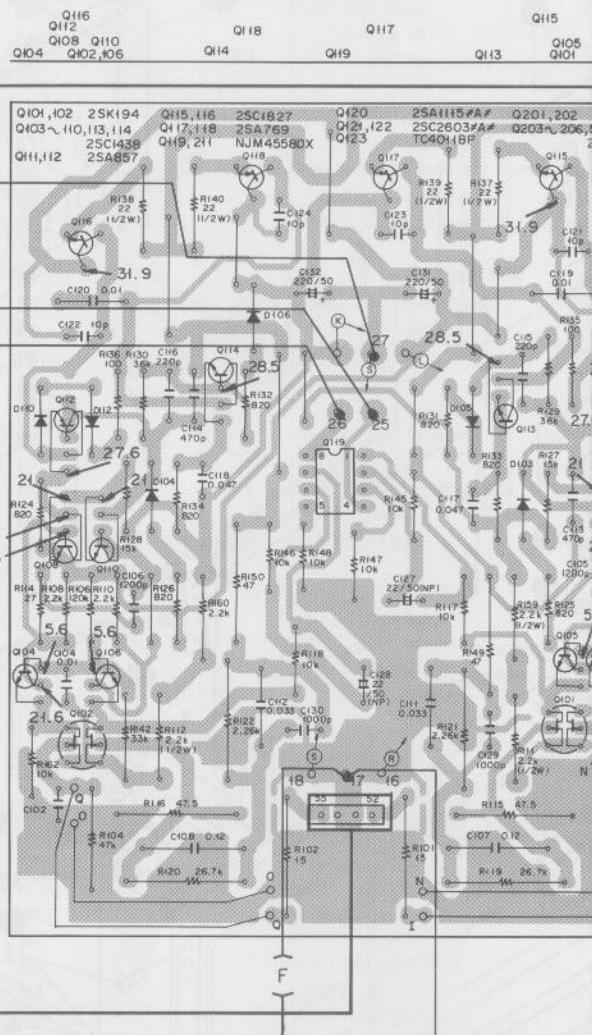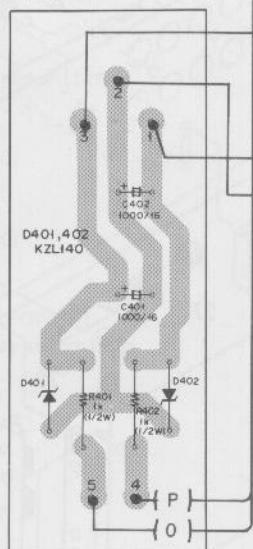SERVO
REGULATOR
ASS'Y

TONE TREBLE ASS'Y

MODE SWITCH ASS'Y

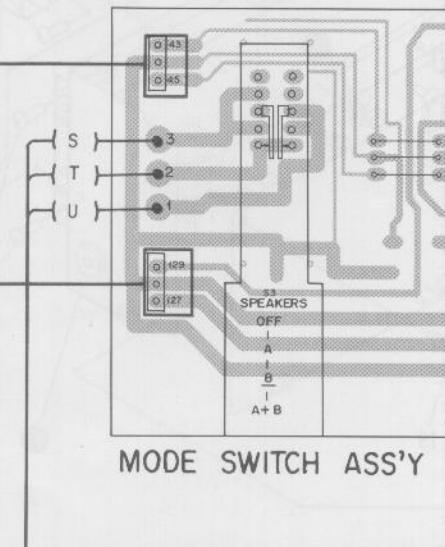


Q11
Q109
Q107
Q103

Q123

Q122 Q120
Q121Q509
Q503
Q502 Q504 Q508
Q506 Q208, 206 Q202 Q204, 210
Q209, 203 Q201 Q205, 207

Q211

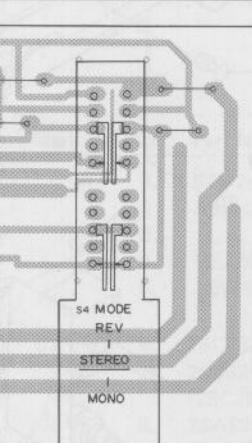SK129A Q207~210, 506, 508
5,507 2SA970
C2240 Q501, 503 2SA769
Q502, 504 2SC1827
Q509, 510 2SK373D103~106, H3,
D105, 506 IS1555
D109~112 EP01Z
DH4 MZ-130
DH5 MZ-056
D201, 202 KZL140
S5566

M N E D

C

A

B

A

B

C

D

E

F

D

G

H

POWER (L) ASS'Y

A

A

C

B

C

D

E

F

D

G

H

OUTPUT (L) ASS'Y

Q38

Q37

Q30,Q29

Q35,Q36

Q27

88.8

90 (74)

Q28

90, Q25

Q19

Q20

Q9,QH

Q10,QH2

Q13

Q14

Q15

Q16

Q18

Q17

Q6

Q7

Q4

Q2, Q6


Q1

Q3


Q5

T

S

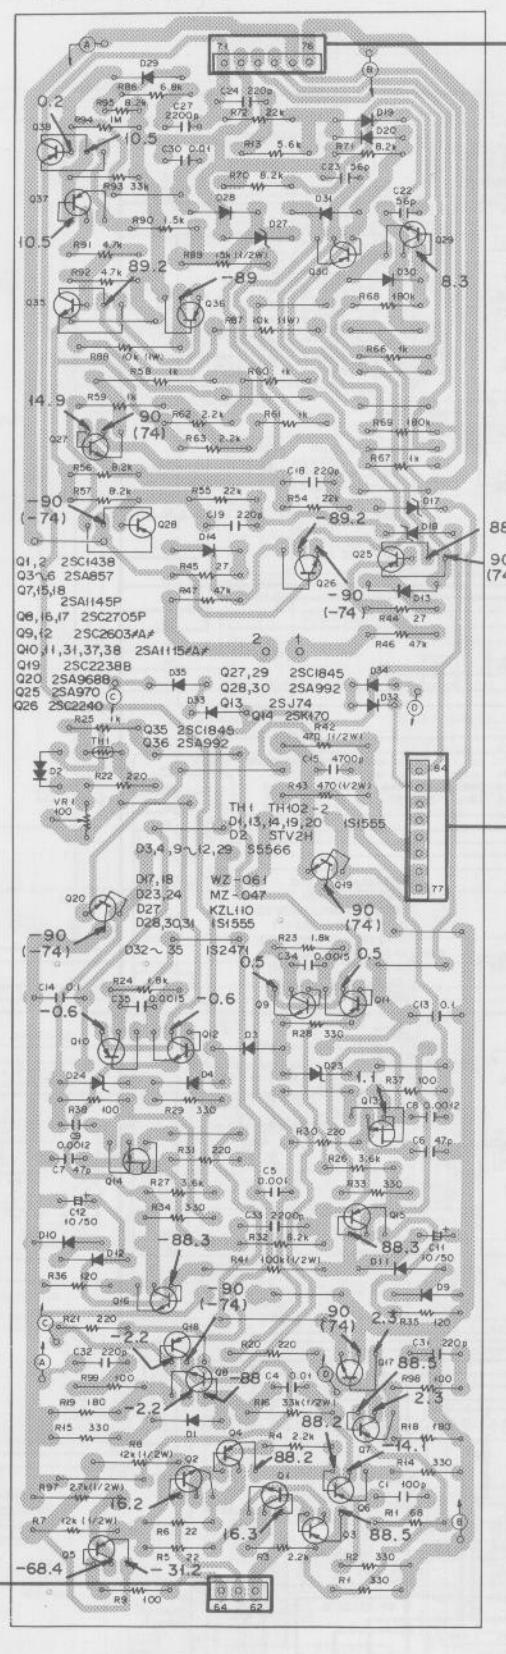

OUTPUT (L) ASS'Y

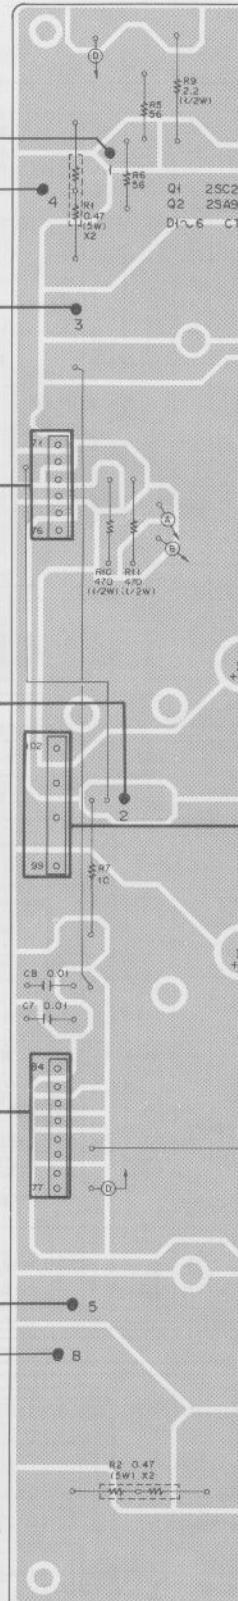


1

2


3

Q1, 2 2SC2837 #A
 Q3 ~ 6 2SC3263 #A
 Q7 ~ 10 2SA1294 #A
 Q11, 12 2SA1186 #A



OUTPUT (R) ASS'Y

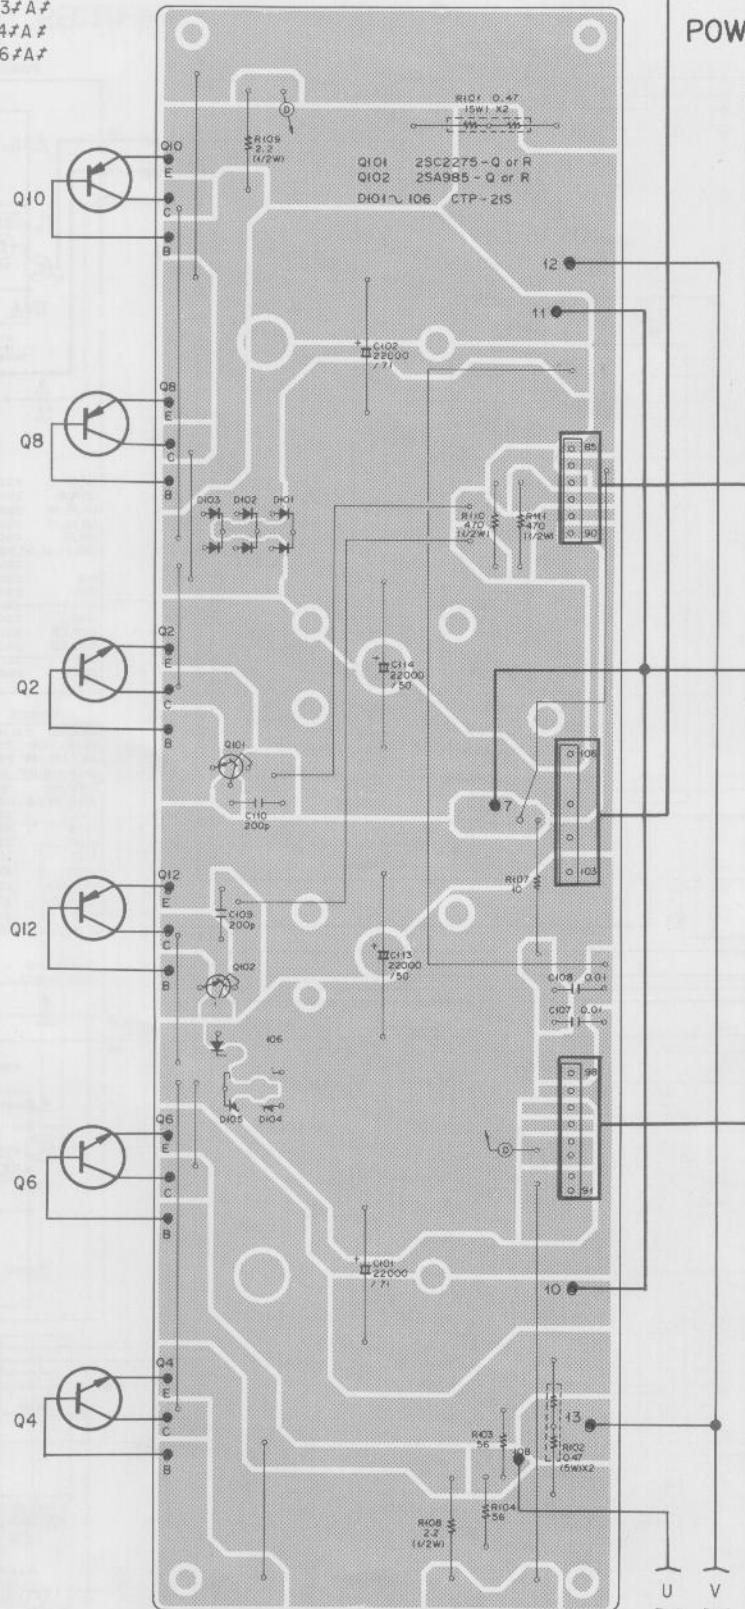


POWER (R) ASS'Y

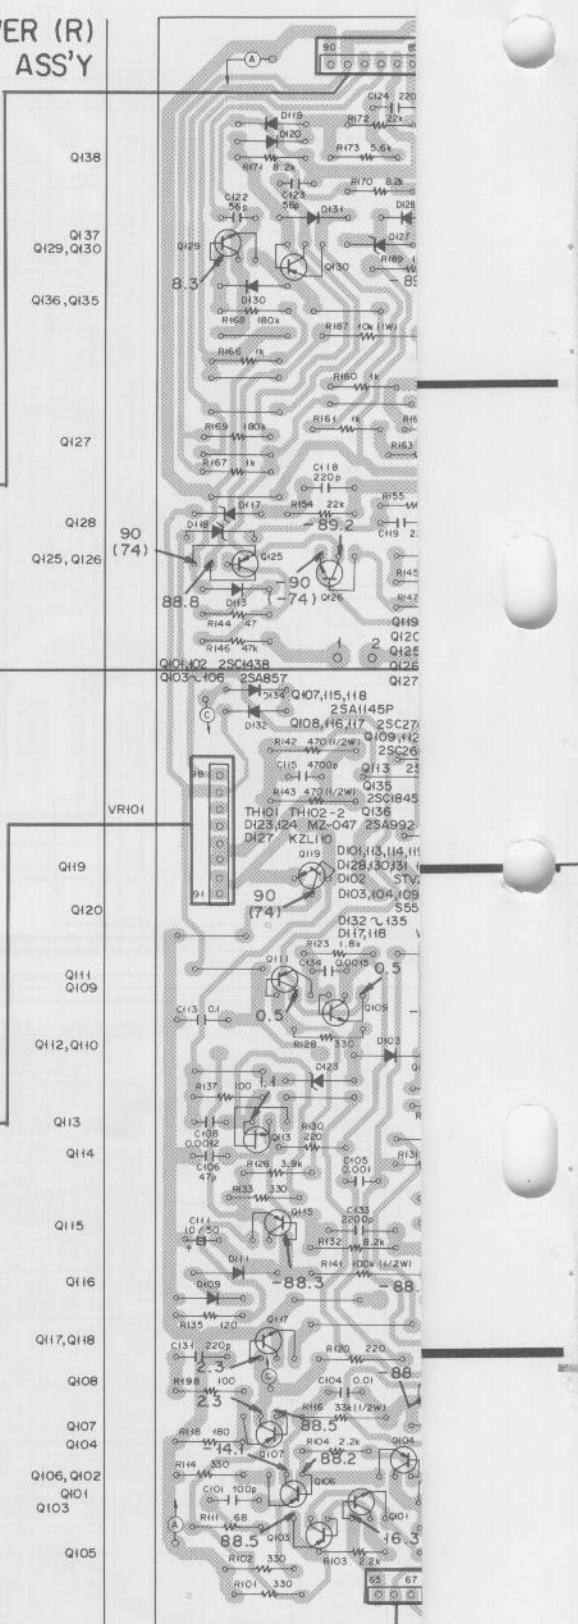

| PROTECTION ASS'Y GWP - 121

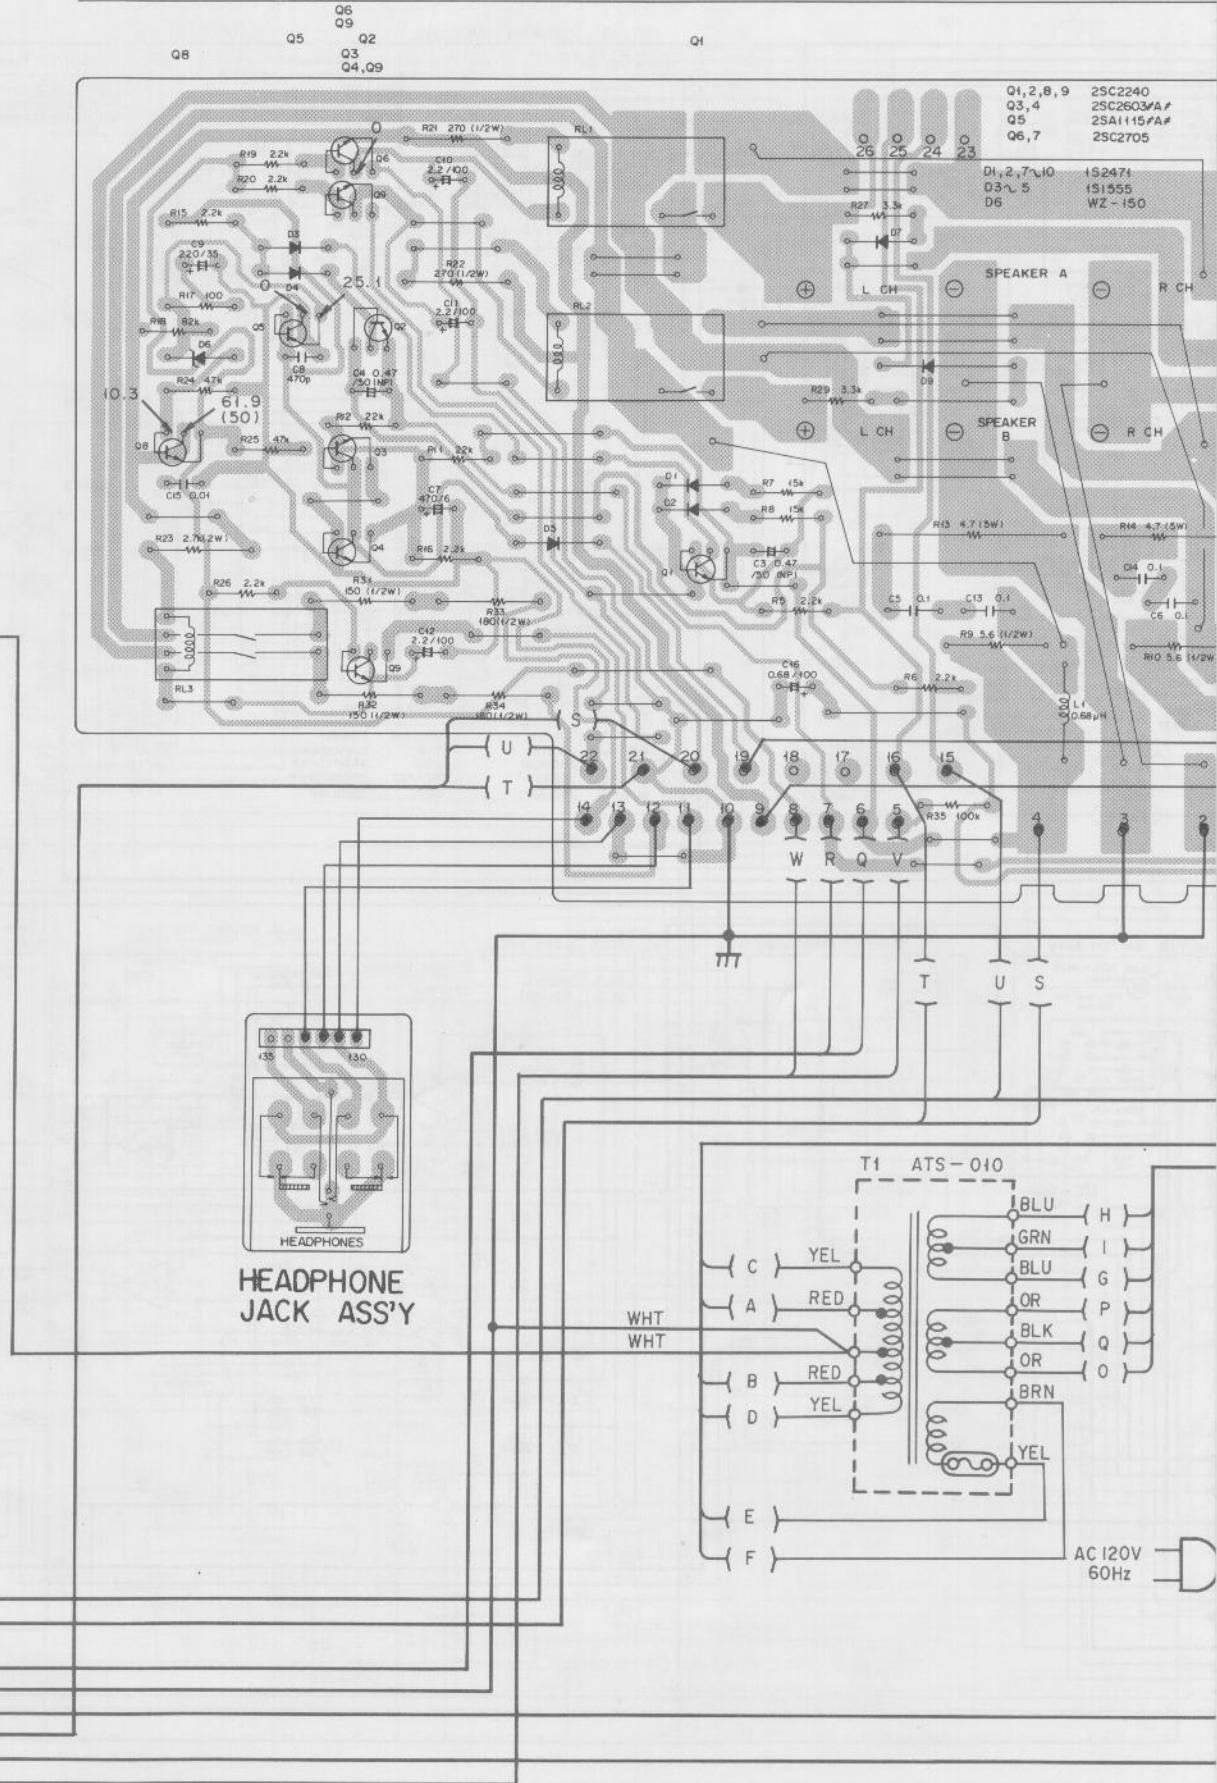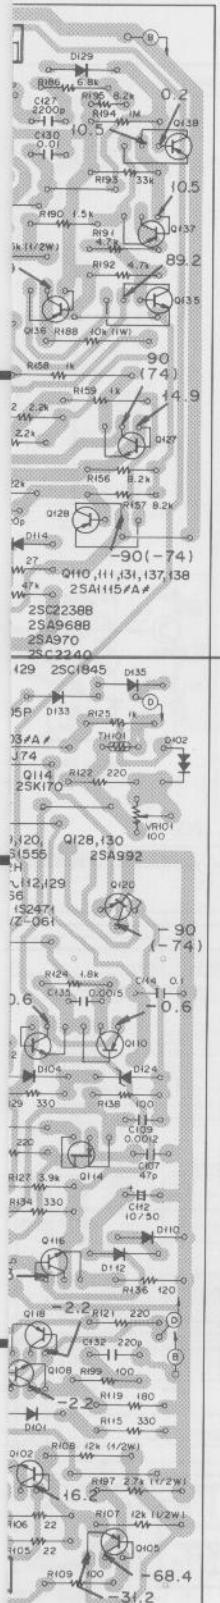

RECTIFIER ASS'Y

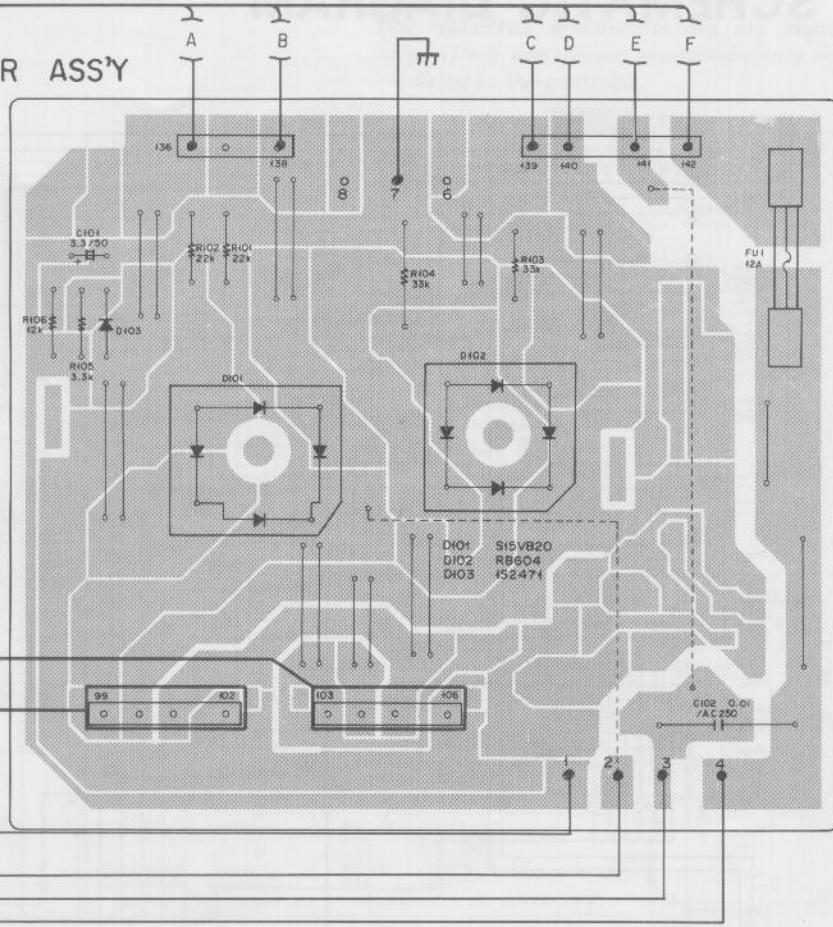


A

B

C

D

REGULATOR ASS'Y

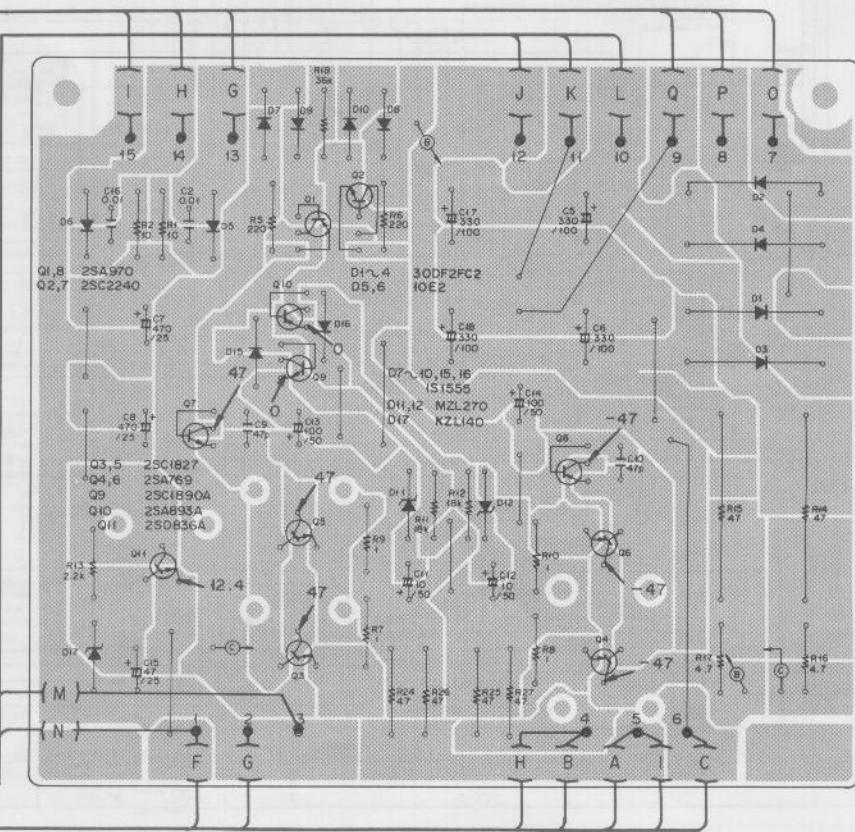


C1
0.1/630
ACG - 017

SI:POWER
ASG-534


UNSWITCHED
100W MAX. SWITCHED
TOTAL 200W MAX.

8. SCHEMATIC DIAGRAM

A

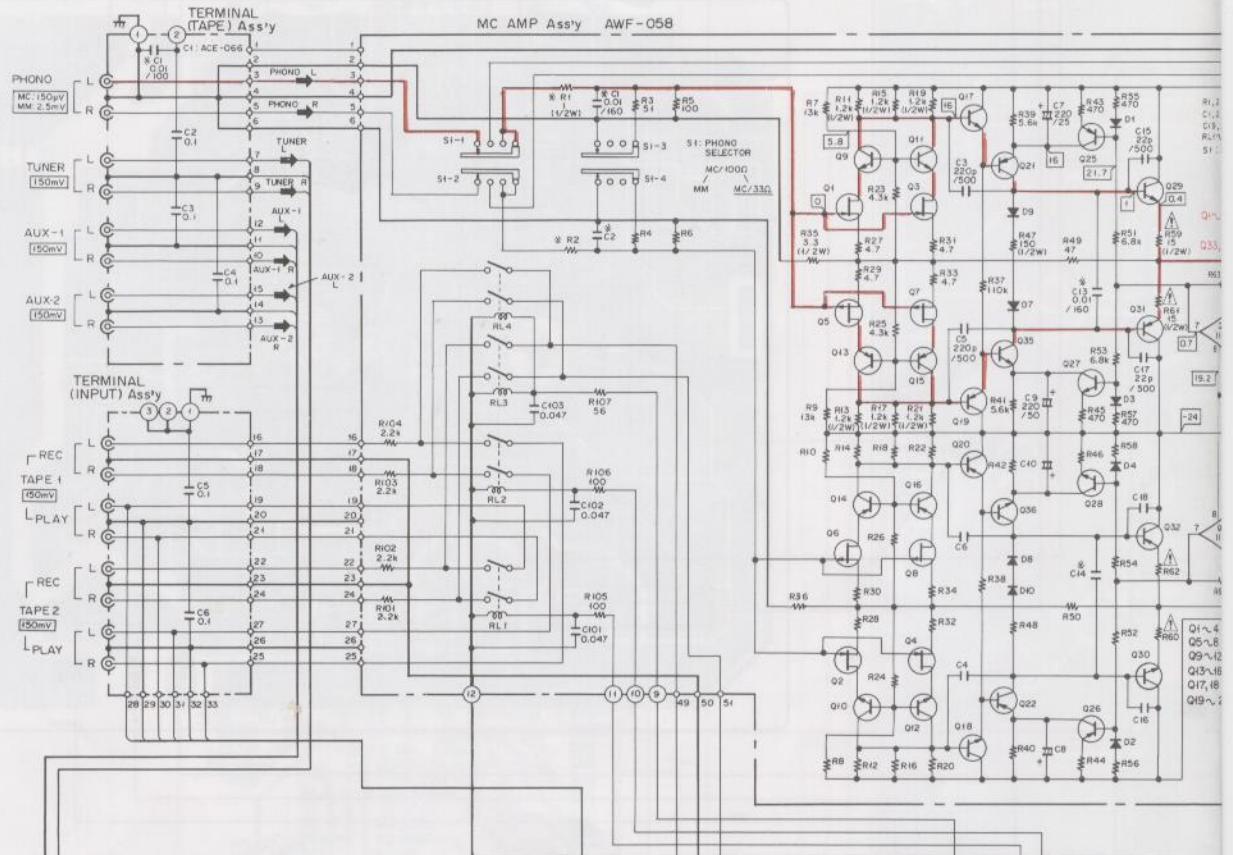

B

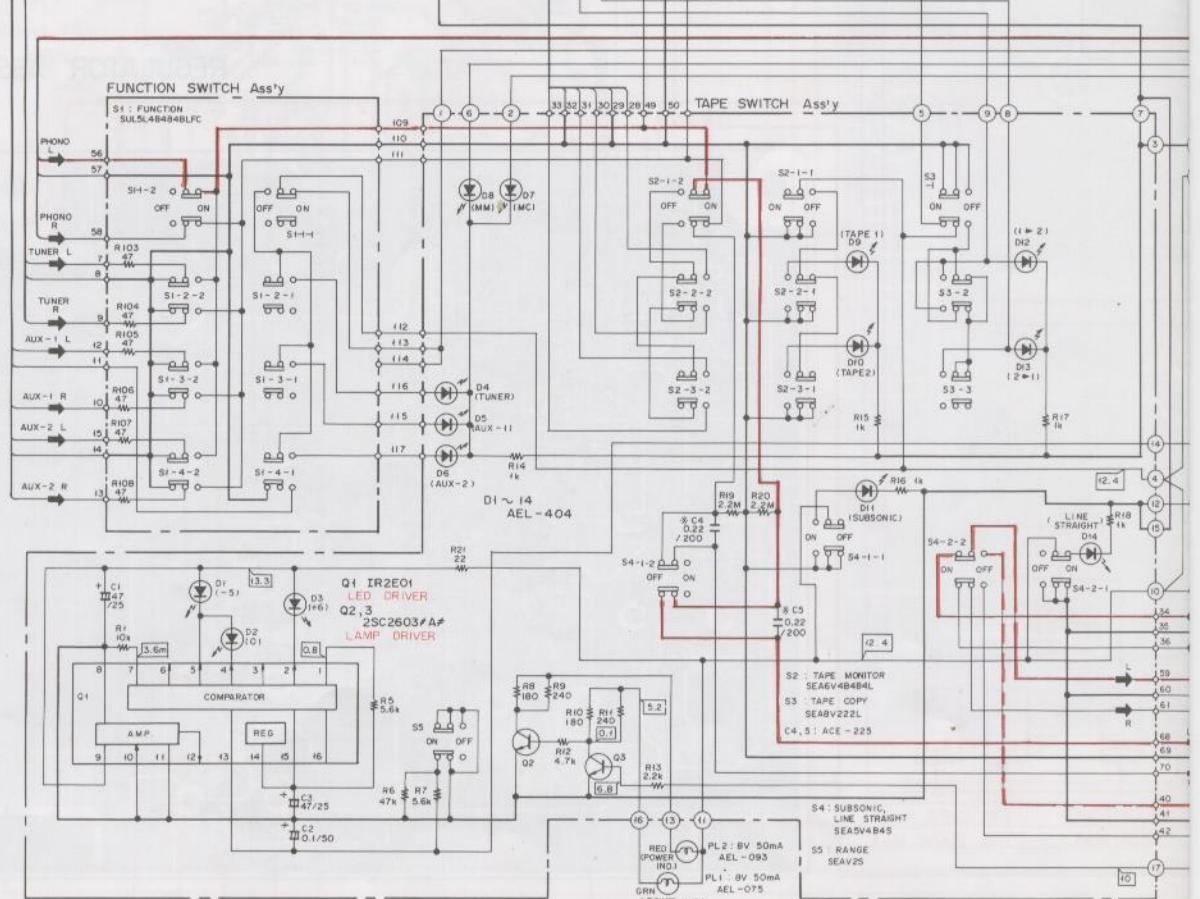

27


1


2


3

NOTE:


The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

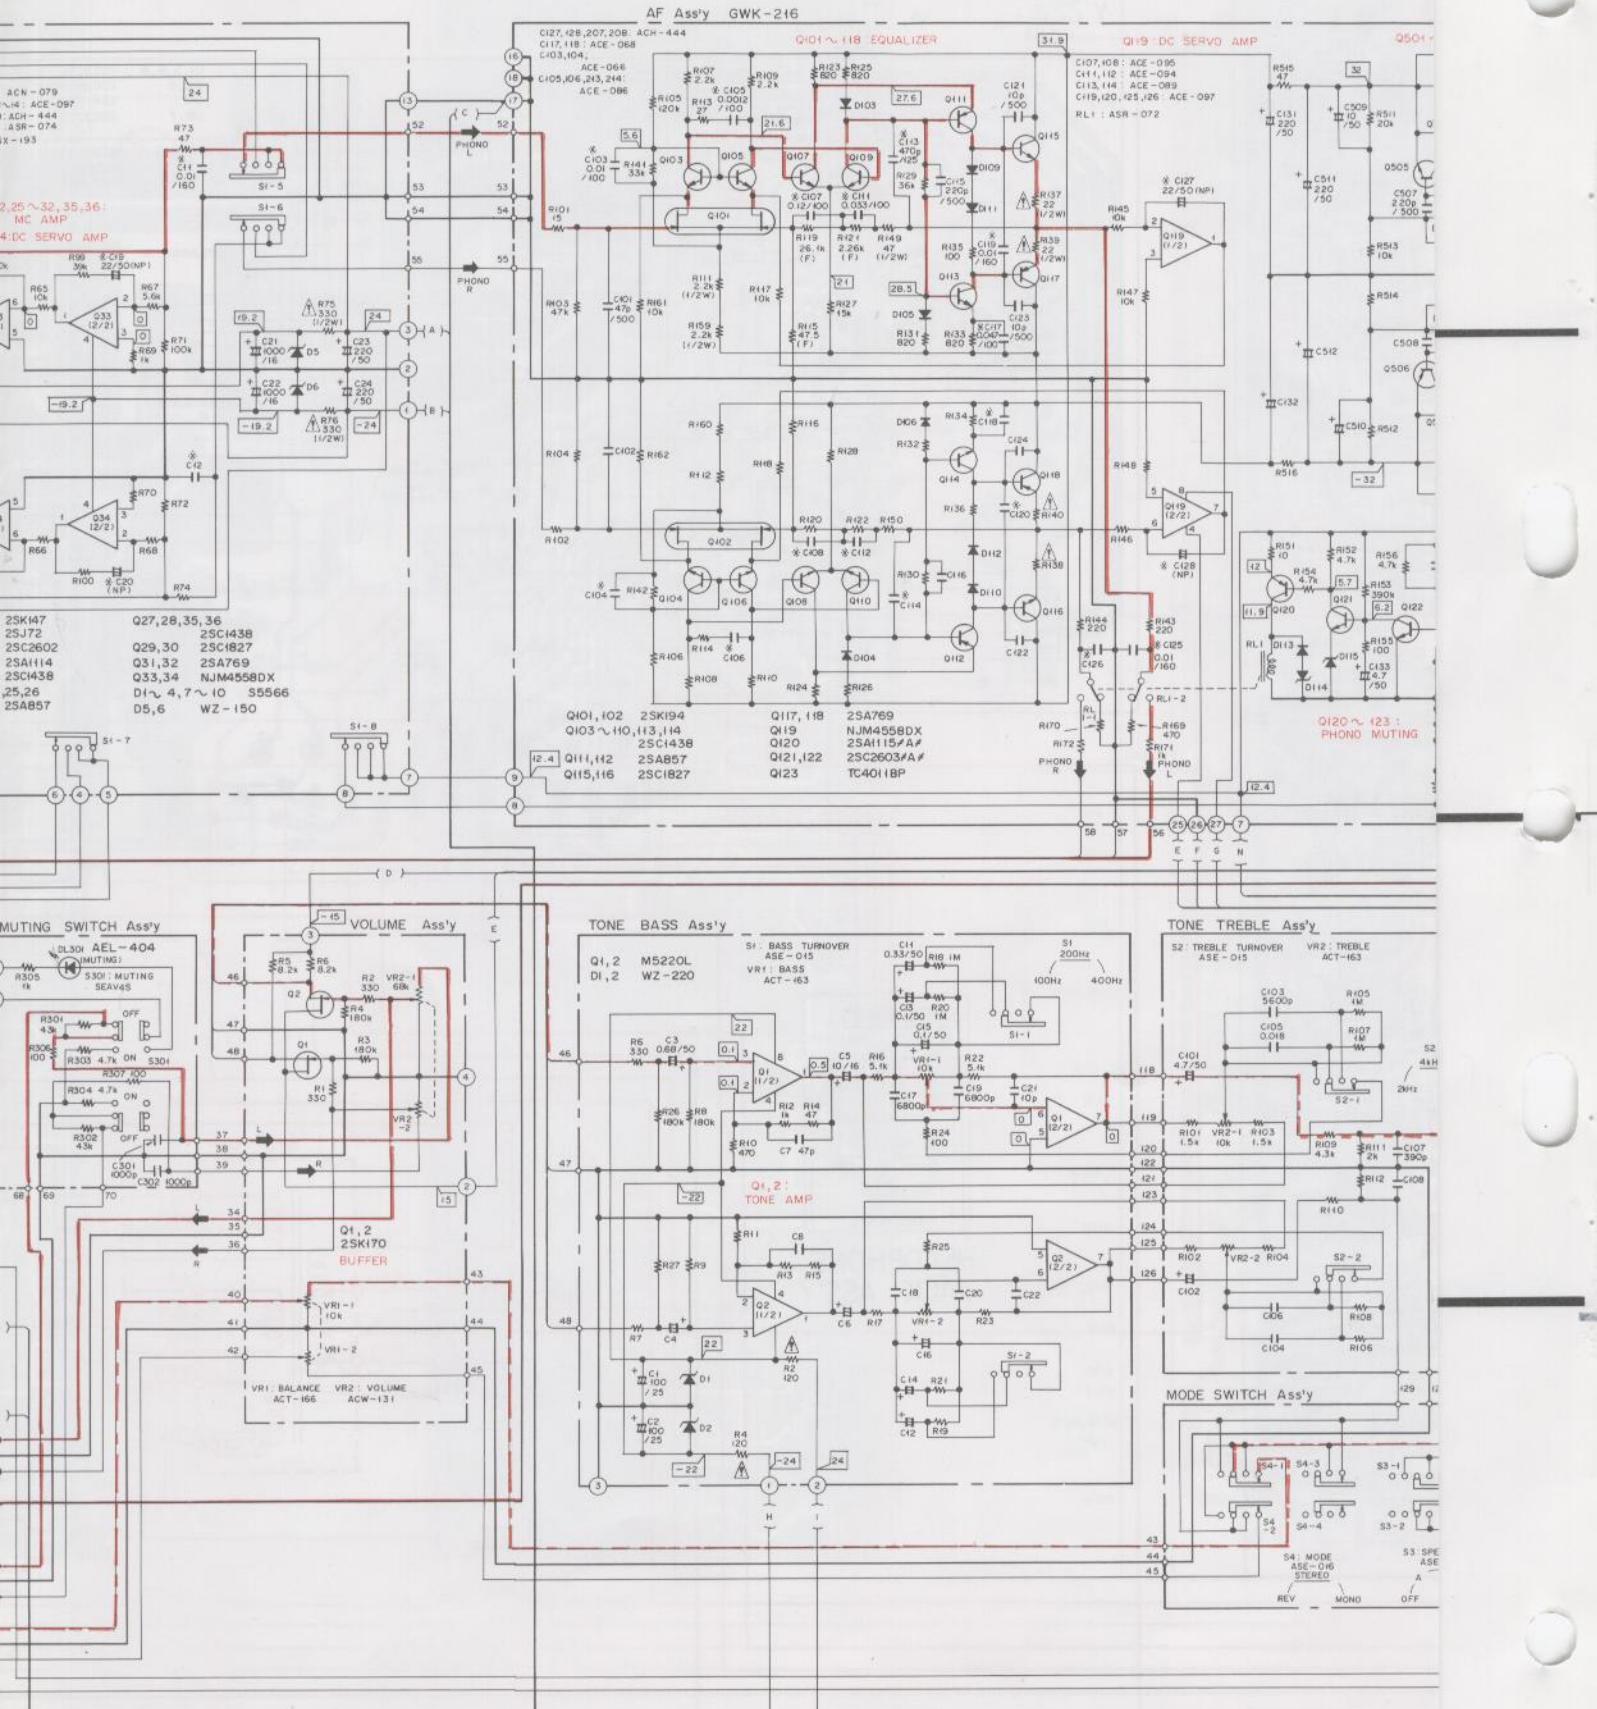

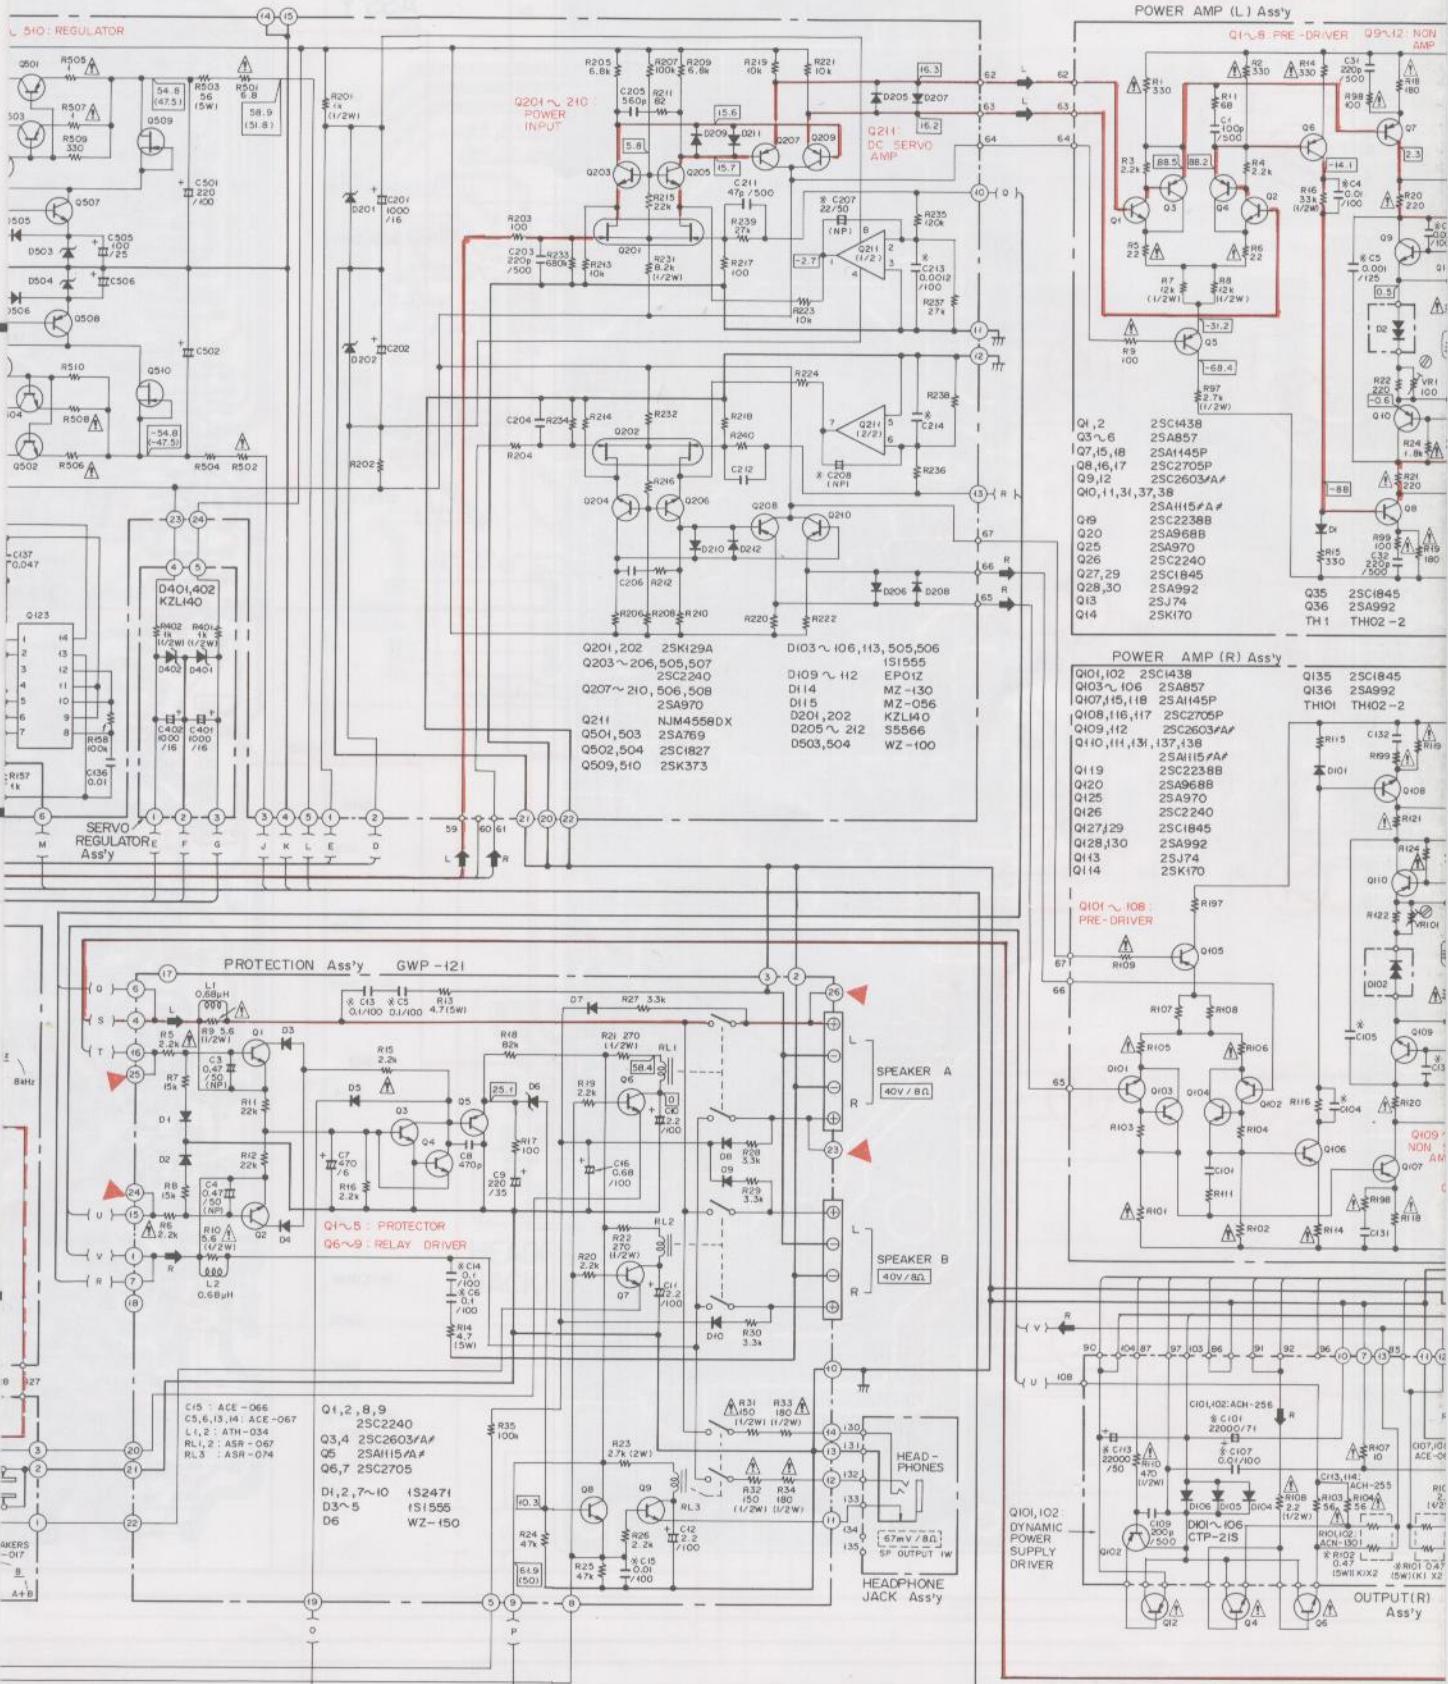


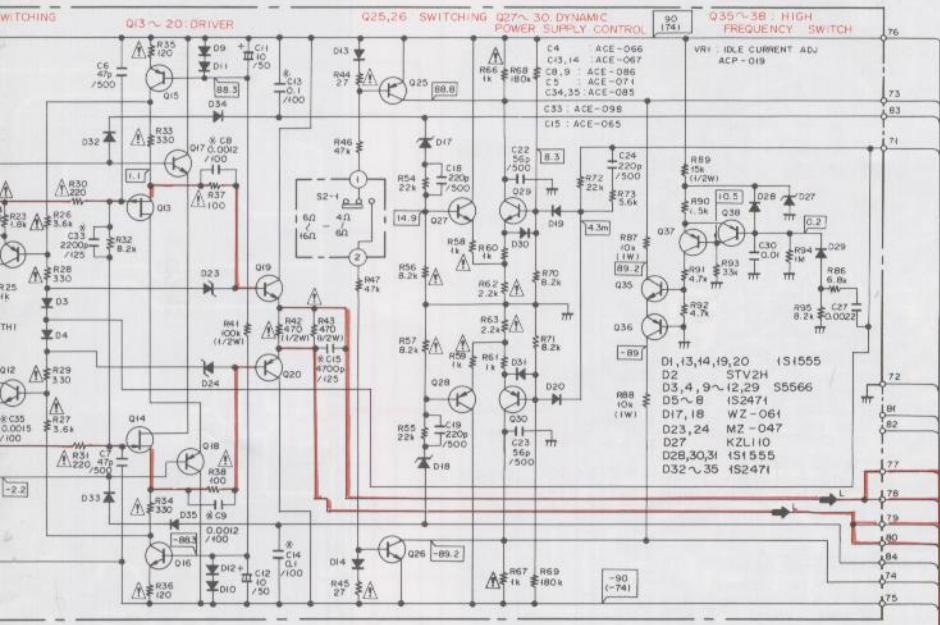

A

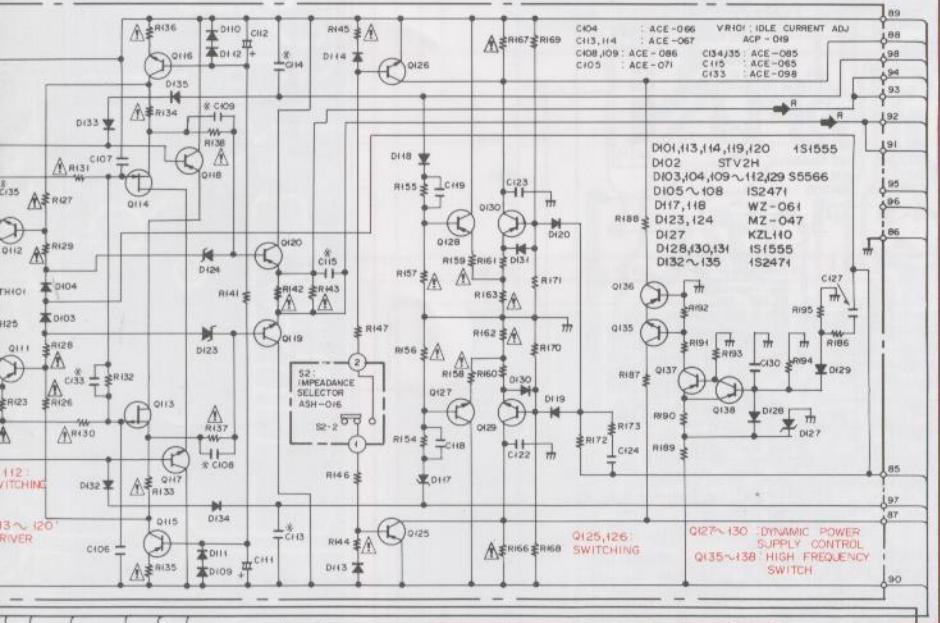

B

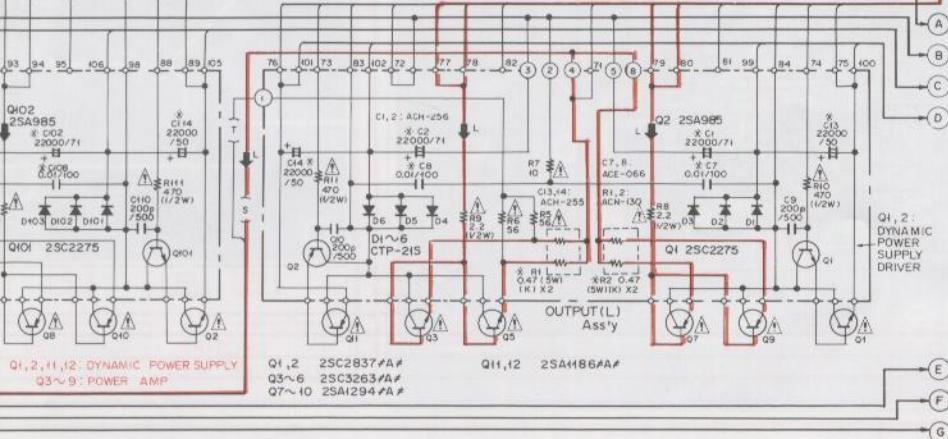

C

1. RESISTORS.
Indicated in ohms, (W), $\frac{1}{2}$ W, $\pm 5\%$ tolerance unless otherwise noted (K); (M), (L), (F), (H), (G), (I), -10%; (M), +20% tolerance

2. CAPACITORS:
Indicated in capacity (μ F/voltage (V) unless otherwise noted p, pF. Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE, CURRENT:
[] V: Signal voltage at 200W+ 200W, Br/Output (11kHz)
[] DC voltage (V) at no input signal
Value in () is DC voltage at rated power.

4. OTHERS:

→ : Signal route.
◎: Adjusting point.

The ▲ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing be sure to use parts of identical designation.
* marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

SWITCHES.

OUTSIDE OF PC BOARD
S1: POWER

ON - OFF
4~60~6~160

S2: IMPEDANCE SELECTOR

ON - OFF

MC AMP Ass'y

ON - OFF

S1: PHONO SELECTOR

ON - OFF

FUNCTION SWITCH Ass'y

ON - OFF

I-2: FUNCTION TUNER

ON - OFF

I-3: FUNCTION AUX1

ON - OFF

I-4: FUNCTION AUX2

ON - OFF

TAPE SWITCH Ass'y

ON - OFF

S2-1: TAPE MONITOR OFF

ON - OFF

2-2: TAPE MONITOR 1

ON - OFF

2-3: TAPE MONITOR 2

ON - OFF

S3-1: TAPE COPY OFF

ON - OFF

3-2: TAPE COPY 1P 2

ON - OFF

3-3: TAPE COPY 2P 2

ON - OFF

S4-1: SUBSONIC

ON - OFF

4-2: LINE STRAIGHT

ON - OFF

95: RANGE

ON - OFF

TONE BASS Ass'y

ON - OFF

S1: BASS TURNOVER

100Hz - 200Hz - 400Hz

TONE TREBLE Ass'y

2kHz - 4kHz - 8kHz

S2: TREBLE TURNOVER

OFF - A-B - A+B

MODE SWITCH Ass'y

REV - STEREO - MONO

S3: SPEAKERS


ON - OFF

S4: MODE

MUTING SWITCH Ass'y

ON - OFF

S301: MUT-ING (-20dB)

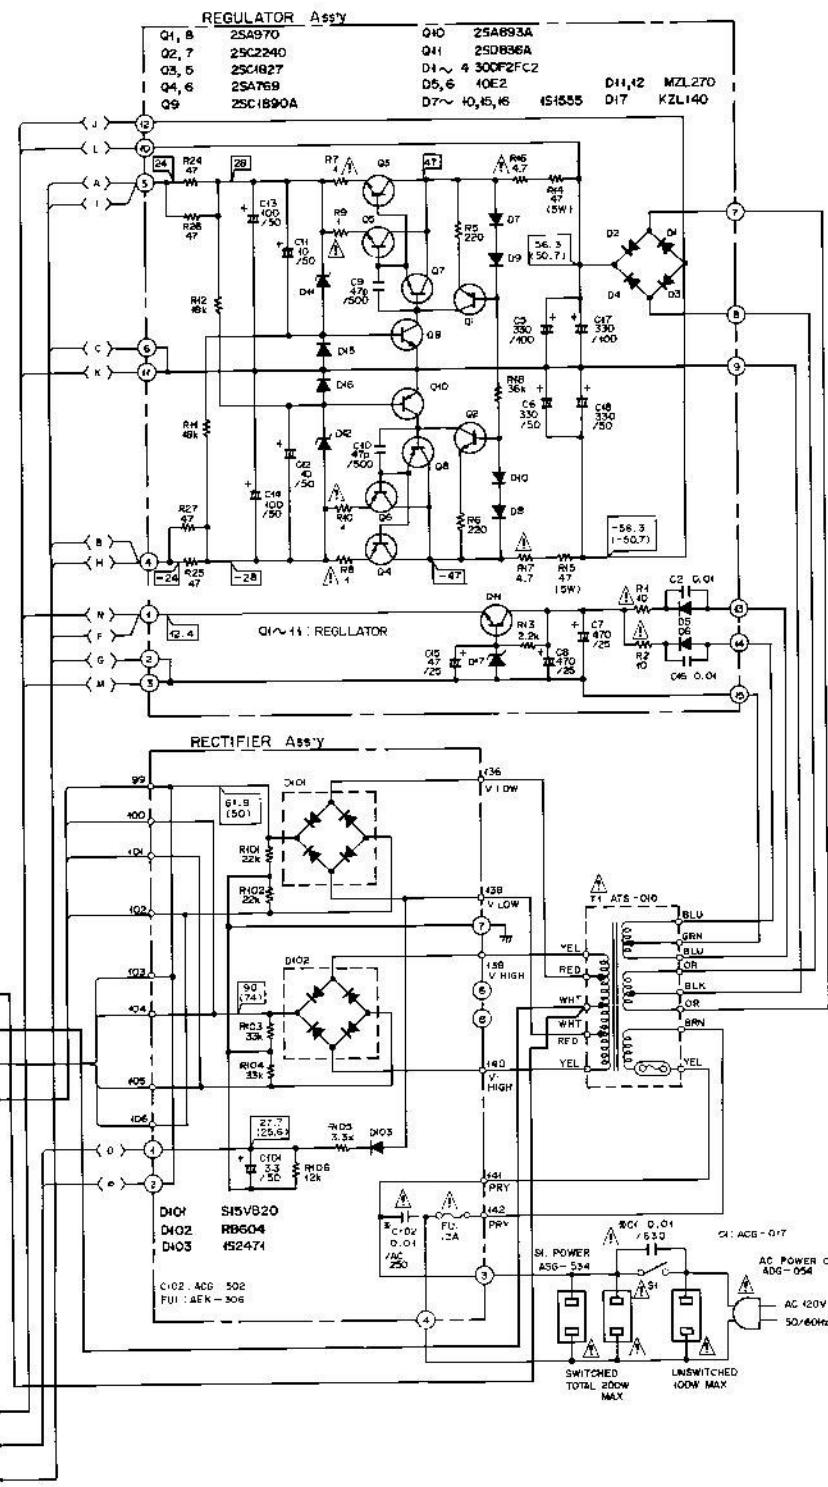

The underlined indicates the switch position.


A

B


C

D


External Appearances of Transistors and IC's

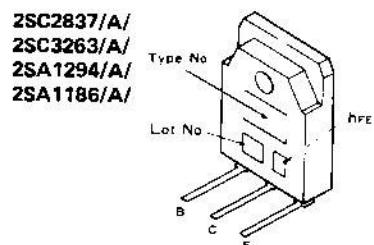


**2SK170
2SJ74**

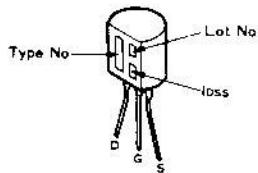


**2SK147
2SJ72**

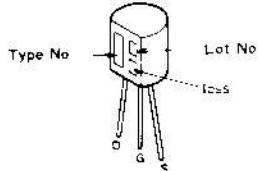


**2SA857
2SC1438**

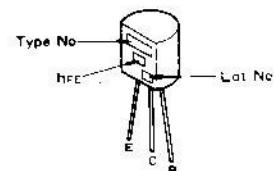


**2SA1114
2SC2602**

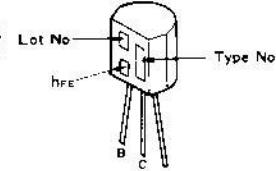


NJM4558DX




1R2E01

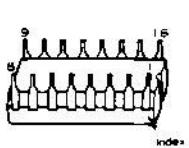


**2SA1115/A/
2SC2603/A/**

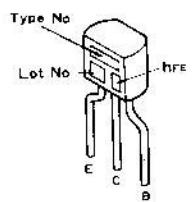


TC4011BP

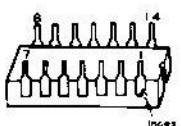


2SK129A

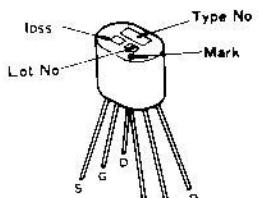


2SK194

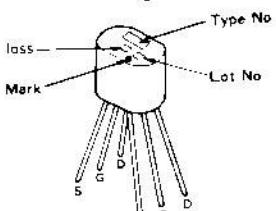


**2SC2240
2SA970
2SC2705**

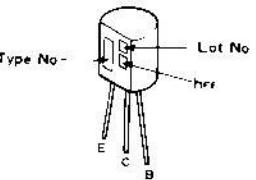


**2SA968B
2SC2238B
2SD836A**

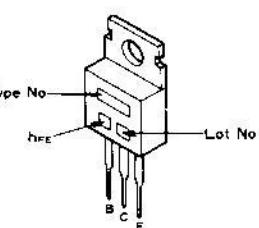


**2SA992
2SC1845**

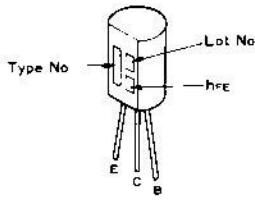


**2SC2275
2SA985**

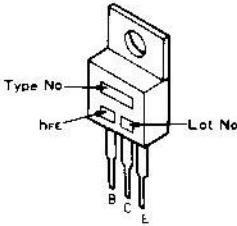


**2SC1890A
2SA893A**

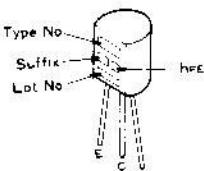


**2SA769
2SC1827**

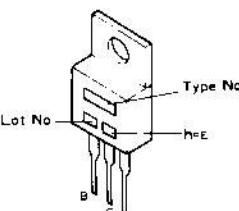

2SK373

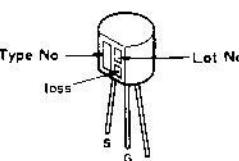

**2SA1145P
2SC2705P**

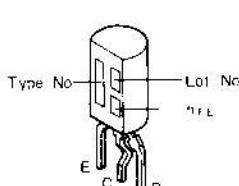

9. ELECTRICAL PARTS LIST

NOTES:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

| | | | | | |
|------|----------------------|-------|-------|-------|---------|
| 560Ω | 56 × 10 ¹ | 561 | | RD%PS | 5 6 1 J |
| 47kΩ | 47 × 10 ³ | 473 | | RD%PS | 4 7 3 J |
| 0.5Ω | 0R5 | | | RN2H | 0 5 K |
| 1Ω | 010 | | | RS1P | 0 1 0 K |

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

| | | | | | |
|--------|-----------|------|-------|-------|-----------|
| 5.62kΩ | 562 × 100 | 5621 | | RN%SR | 5 6 2 1 F |
|--------|-----------|------|-------|-------|-----------|

- The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - For your Parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.
- ★★ GENERALLY MOVES FASTER THAN ★.**
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Miscellaneous Parts List

P.C. BOARD ASSEMBLIES

| Mark | Part No. | Symbol & Description |
|------------|----------|---------------------------|
| | AWF-058 | MC amp. assembly |
| | GWK-216 | AF assembly |
| | GWP-121 | Protection assembly |
| | AWH-121 | Power amp. assembly |
| non supply | | Power amp (L) assembly |
| non supply | | Power amp (R) assembly |
| | AWR-244 | Power supply assembly |
| non supply | | Rectifier assembly |
| non supply | | Regulator assembly |
| | AWR-243 | Output assembly |
| non supply | | Output (L) assembly |
| non supply | | Output (R) assembly |
| | AWS-160 | Switch assembly |
| non supply | | Tape switch assembly |
| non supply | | Function switch assembly |
| | AWG-088 | Tone control assembly |
| non supply | | Tone (BASS) assembly |
| non supply | | Tone (TREBLE) assembly |
| non supply | | Mode switch assembly |
| non supply | | Headphone jack assembly |
| non supply | | Muting switch assembly |
| non supply | | Servo regulator assembly |
| non supply | | Terminal (TAPE) assembly |
| non supply | | Terminal (INPUT) assembly |
| non supply | | Volume assembly |

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|---------------|-----------------------------|
| ★★ | 2SC2837/A/ | Q1, Q2 |
| ★★ | 2SC3263/A/-O* | Q3 – Q6 (2SC3263/A/-Y*) |
| ★★ | 2SA1294/A/-O* | Q7 – Q10 (2SA1294/A/-Y*) |
| ★★ | 2SA1186/A/ | Q11, Q12 |

*hfe must have the same value.

SWITCHES

| Mark | Part No. | Symbol & Description |
|------|----------|-----------------------------|
| ★★ | ASG-545 | S1 Push switch (POWER) |
| ★★ | ASH-016 | S2 Slide switch (IMPEDANCE) |
| ★★ | ASX-204 | Remote slide switch |

OTHERS

| Mark | Part No. | Symbol & Description |
|------|----------|-----------------------------|
| ★★ | AEK-306 | FU1 Fuse (15A) |
| ★★ | AEL-075 | PL1 Lamp (8V, 50mA) |
| ★★ | AEL-093 | PL2 Lamp (8V, 50mA) |
| ★ | ATS-010 | T1 Power transformer (120V) |
| | ACG-017 | C1 Ceramic (0.01/630V) |
| | AKP-041 | AC socket |
| | ADG-054 | AC power cord |
| | AEC-327 | Strain relief |

Regulator Assembly

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|--------------------|----------------------|
| ★★ | 2SA970 | Q1, Q8 |
| ★★ | 2SA769 | Q4, Q6 |
| ★★ | 2SC2240 | Q2, Q7 |
| ★★ | 2SC1827 | Q3, Q5 |
| ★★ | 2SC1890A | Q9 |
| ★★ | 2SA893A | Q10 |
| ★★ | 2SD836A | Q11 |
| ★ | KZL140 | D17 |
| △ ★ | 10E2 | D5, D6 |
| △ ★ | 30DF2FC-2 | D1 – D4 |
| ★ | MZL 270 | D11, D12 |
| ★ | 1S1555 (US1035) | D7 – D10, D15, D16 |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|---------------|----------------------|
| | CEYA 100M 50 | C7, C8 |
| | CEXA 101M 50 | C9, C10 |
| | CEXA 331M 100 | C1, C2, C3, C4 |
| | CMA 470J 500 | C5, C6 |
| | CKDYB 103K 50 | C11, C12 |
| | CEA 470M 25L | C15 |
| | CEA 471M 25L | C13, C14 |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|---------------|----------------------|
| △ | RD1/4PMFL100J | R1, R2 |
| | RT5B 470K | R14, R15 |
| △ | RDH1/4P470J | R24 – R27 |
| △ | RFA1/4PS4R7J | R16, R17 |
| △ | RD1/4PMF010J | R7 – R10 |
| | RD1/4PM □□□ J | Other resistors |

OTHERS

| Mark | Part No. | Symbol & Description |
|------|--------------|----------------------|
| | VBZ30P080FZK | Screw (3 x 8) |

Power amp. (L) Assembly

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|------------|---------------------------------------|
| ★ | 1S1555 | D1, D13, D14, D19, D20, D28, D30, D31 |
| ★ | S5566 | D3, D4, D9 – D12, D29 |
| ★ | 1S2471 | D32 – D35 |
| ★ | MZ-047 | D23, D24 |
| ★ | WZ-061 | D17, D18 |
| ★ | STV2H | D2 |
| ★ | KZL110 | D27 |
| ★★ | 2SK170 | Q14 |
| ★★ | 2SJ74 | Q13 |
| ★★ | 2SC1845 | Q27, Q29, Q35 |
| ★★ | 2SA992 | Q28, Q30, Q36 |
| ★★ | 2SA1145P | Q7, Q15, Q18 |
| ★★ | 2SC2705P | Q8, Q16, Q18 |
| ★★ | 2SA1115/A/ | Q10, Q11, Q13, Q38 |
| ★★ | 2SC2603/A/ | Q9, Q12 |
| ★★ | 2SC2240-BL | Q26 |
| ★★ | 2SA970 | Q25 |
| ★★ | 2SC1438 | Q1, Q2 |
| ★★ | 2SA857 | Q3 – Q6 |
| ★★ | 2SA968B | Q20 |
| ★★ | 2SC2238B | Q19 |
| ★★ | TH102-2 | TH1 |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|--------------|------------------------------|
| | CEYA 100M 25 | C11, C12 |
| | ACE-066 | C4 Mylar (0.01/100V) |
| | ACE-067 | C13, C14 Mylar (0.1/100V) |
| | ACE-086 | C8, C9 Mylar (0.0012/100V) |
| | ACE-071 | C5 Polystrene (1000p/125V) |
| | CMA 470J 500 | C6, C7 |
| | CMA 221J 500 | C18, C19, C24, C31, C32 |
| | CMA 101J 500 | C1 |
| | ACE-085 | C34, C35 Mylar (0.0015/100V) |
| | ACE-098 | C33 Polystrene (2200p/125V) |

| Mark | Part No. | Symbol & Description | |
|------|----------------|----------------------|----------------------------|
| | ACE-065 | C15 | Polystrene (4700p/125V) |
| | CQMA 222K 50 | C27 | |
| | CQMA 103K 50 | C30 | |
| | CCDSL 560K 500 | C22, C23 | |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description | |
|------|----------------|---|------------------|
| ⚠ | ACP-019 | VR1 | Semi-fixed (100) |
| ⚠ | RF1/4PS □□□J | R9, R18 – R21, R30, R31, R33 – R38, R44, R45, R98, R99 | |
| ⚠ | RF1/2PS □□□J | R42, R43 | |
| | RS IP 103J | R87, R88 | |
| ⚠ | RD1/4PMFL □□□J | R1, R2, R5, R6, R14, R66, R67 | |
| ⚠ | RD1/4PMF □□□J | R23–R29, R32, R56–R59 | |
| | RD1/2PS □□□J | R62, R63 | |
| | RD1/4PM □□□J | R7, R8, R16, R41, R89, R97 | |
| | | Other resistors | |

OTHERS

| Mark | Part No. | Symbol & Description | |
|------|--------------|----------------------|---------------|
| | VBZ30P080FMC | | Screw (3 x 8) |

Output (R) Assembly

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description | |
|------|----------|----------------------|--|
| ★★ | 2SC2275 | Q101 | |
| ★★ | 2SA985 | Q102 | |
| ★ | CTP-21S | D101 – D106 | |

CAPACITORS

| Mark | Part No. | Symbol & Description | |
|------|--------------|----------------------|-----------------------------|
| | ACH-256 | C101, C102 | Electrolytic (22000/71V) |
| | ACH-255 | C113, C114 | Electrolytic (22000/50V) |
| | ACE-066 | C107, C108 | Mylar (0.01/100V) |
| | CMA 201J 500 | C109, C110 | |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description | |
|------|--------------|----------------------|-----------------------------|
| | ACN-130 | R101, R102 | Wire wound (0.47/5W x 2) |
| ⚠ | RF1/4PS □□□J | R105 – R107 | |
| ⚠ | RF1/2PS □□□J | R108 – R111 | |

OTHERS

| Mark | Part No. | Symbol & Description | |
|------|--------------|----------------------|---------------|
| | PMZ30PD6DBKi | | Screw (3 x 6) |

Tone (BASS) Assembly

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description | |
|------|----------|----------------------|--|
| ★★ | M5220L | Q1, Q2 | |
| ★ | WZ-220 | D1, D2 | |

SWITCHES

| Mark | Part No. | Symbol & Description | |
|------|----------|----------------------|--|
| ★★ | ASE-015 | S1 | Rotary slide switch (BASS TURNOVER) |

CAPACITORS

| Mark | Part No. | Symbol & Description | |
|------|---------------|----------------------|--|
| | CEA 101M 25L | C1, C2 | |
| | CEANL R68M 50 | C3, C4 | |
| | CEANL 100M 16 | C5, C6 | |
| | CEANL 0R1M 50 | C13 – C16 | |
| | CEANL R33M 50 | C11, C12 | |
| | CQMA 682J 50 | C17, C20 | |
| | CCDSL 100D 50 | C21, C22 | |
| | CCDSL 470J 50 | C7, C8 | |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description | |
|------|----------------|----------------------|---------------------|
| ★ | ACT-163 | VR1 | Volume (100k, BASS) |
| ⚠ | RD1/4PMFL □□□J | R2, R4 | |
| | RD1/8PM □□□J | Other resistors | |

Muting Switch Assembly

| Mark | Part No. | Symbol & Description | |
|------|--------------|----------------------|----------------------|
| ★ | AEL-404 | D301 | (LED Red) |
| ★★ | SEAV4S | S301 | Push switch (MUTING) |
| | CQSA 102J 50 | C301, C302 | |
| | RD1/4PM □□□J | R301 – R307 | |

Mode Switch Assembly

| Mark | Part No. | Symbol & Description | |
|------|----------|----------------------|-----------------------------------|
| ★★ | ASE-024 | S3 | Rotary slide switch (SPEAKERS) |
| ★★ | ASE-023 | S4 | Rotary slide switch (MODE) |

Headphone Jack Assembly

| Mark | Part No. | Symbol & Description | |
|------|----------|----------------------|---------------------|
| | AKN-044 | | Phone jack (PHONES) |

Function Switch Assembly

| Mark | Part No. | Symbol & Description |
|------|--------------------------------|---------------------------------------|
| ★★ | SUL5L4B4B484LFC RD1/8PM470J | Push switch (FUNCTION) R103 – R108 |

Terminal (INPUT) Assembly

| Mark | Part No. | Symbol & Description |
|------|--------------------------|---------------------------------|
| | ACE-066 CQMLA 104K 50 | C1 Mylar (0.01/100V) C2 – C4 |
| | AKB-096 | Terminal (PHONO) |
| | AKB-095 | Terminal (TUNER, AUX) |

Tone (TREBLE) Assembly

SWITCHES

| Mark | Part No. | Symbol & Description |
|------|----------|---|
| ★★ | ASE-015 | S2 Rotary slide switch (TREBLE TURNOVER) |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|---------------|----------------------|
| | CEANL 4R7M 50 | C101, C102 |
| | CQMA 562J 50 | C103, C104 |
| | CQMA 183J 50 | C105, C106 |
| | CKDYB 391K 50 | C107, C108 |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|-------------------------|---|
| ★ | ACT-163 RD1/8PM OOOJ | VR2 Volume (10k, TREBLE) R101 – R112 |

Volume Assembly

| Mark | Part No. | Symbol & Description |
|------|-------------------------|-------------------------------------|
| ★★ | 2SK170 | Q1, Q2 |
| ★ | ACT-166 | VR1 Volume (10k, BALANCE) |
| ★ | ACW-131 RD1/4PM □□□J | VR2 Volume (68k, VOLUME) R1 – R6 |

Terminal (TAPE) Assembly

| Mark | Part No. | Symbol & Description |
|------|--------------------------|---------------------------|
| | CQMLA 104K 50 AKB-094 | C5, C6 Terminal (TAPE) |

Protection Assembly (GWP-121)

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|----------|----------------------|
| ★★ | 2SC2240 | Q1, Q2, Q8, Q9 |
| ★★ | 2SC2705 | Q6, Q7 |

| Mark | Part No. | Symbol & Description |
|------|--------------------|----------------------|
| ★★ | 2SC2603/A/ | Q3, Q4 |
| ★★ | 2SA1115/A/ | Q5 |
| ★ | 1S2471 | D1, D2, D7 – D10 |
| ★ | 1S1555 (1S2076) | D3 – D5 |
| ★ | WZ-150 | D6 |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|---------------|--------------------------------------|
| | ACE-066 | C15 Mylar (0.01/100V) |
| | ACE-067 | C5, C6, C13, C14 Mylar (0.1/100V) |
| | CEANP R47M 50 | C3, C4 |
| | CEA 2R2M 100L | C10 – C12 |
| | CEA 471M 6L | C7 |
| | CEA 221M 35L | C9 |
| | CEA R68M 100L | C16 |
| | CKDYB 471K 50 | C8 |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|--------------|----------------------|
| ⚠ | RD1/2PSF5R6J | R9, R10 |
| | RS2P272J | R23 |
| ⚠ | RT5B4R7K | R13, R14 |
| ⚠ | RD1/2PSF151F | R31 – R34 |
| ⚠ | RD1/4PMF222J | R5, R6, R15 |
| | RD1/2PS271J | R21, R22 |
| | RD1/4PM □□□J | Other resistors |

OTHERS

| Mark | Part No. | Symbol & Description |
|------|--------------|----------------------|
| ★★ | ASR-067 | RL1, RL2 Relay |
| ★★ | ASR-074 | RL3 Relay |
| | ATH-034 | L1, L2 AF choke coil |
| | AKE-052 | Terminal (SPEAKERS) |
| | VBZ30P080FZK | Screw (3 x 8) |
| | PMZ30P060SAD | Screw (3 x 6) |

Rectifier Assembly

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|----------|----------------------|
| ⚠ ★ | S15VB20 | D101 |
| ⚠ ★ | RB604 | D102 |
| ★ | IS2471 | D103 |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|--------------|--------------------------------|
| ⚠ | CEA 3R3M 50L | C101 |
| ⚠ | ACG-502 | C102 Ceramic (0.01/AC 125V) |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|--------------|----------------------|
| | RD1/4PM □□□J | R101 – R106 |

OTHERS

| Mark | Part No. | Symbol & Description |
|------|--------------|----------------------|
| | VBZ30P200FZK | Screw (3 x 20) |

Output (L) Assembly

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|----------|----------------------|
| ★★ | 2SC2275 | Q1 |
| ★★ | 2SA985 | Q2 |
| ★ | CTP-21S | D1 – D6 |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|--------------|--------------------------------------|
| | ACH-256 | C1, C2 Electrolytic (22000/71V) |
| | ACH-255 | C13, C14 Electrolytic (22000/50V) |
| | ACE-066 | C7, C8 Mylar (0.01/100V) |
| | CMA 201J 500 | C9, C10 |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|--------------|------------------------------------|
| | ACN-130 | R1, R2 Wire wound (0.47/5W x 2) |
| ⚠ | RF1/4PS □□□J | R5 – R7 |
| ⚠ | RF1/2PS □□□J | R8 – R11 |

OTHERS

| Mark | Part No. | Symbol & Description |
|------|--------------|----------------------|
| | PMZ30P060BKJ | Screw (3 x 6) |

MC amp. Assembly (AWF-058)

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|-----------|----------------------|
| ★★ | 2SK147-V1 | Q1 – Q4 |
| ★★ | 2SJ72-V2 | Q5 – Q8 |
| ★★ | 2SA857 | Q19 – Q22, Q25, Q26 |
| ★★ | 2SA769 | Q31, Q32 |
| ★★ | 2SA1114 | Q13 – Q16 |

| Mark | Part No. | Symbol & Description |
|------|-----------|------------------------------|
| ★★ | 2SC1438 | Q17, Q18, Q27, Q28, Q35, Q36 |
| ★★ | 2SC1827 | Q29, Q30 |
| ★★ | 2SC2602 | Q9 – Q12 |
| ★★ | NJM4558DX | Q33, Q34 |
| ★ | S5566 | D1 – D4, D7 – D10 |
| ★ | WZ-150 | D5, D6 |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|---------------|--|
| | ACE-097 | C1, C2, C11 – C14 Polystyrene (0.01/160V) |
| | ACH-444 | C19, C20 Electrolytic (2.2/50V, NP) |
| | CEXA 102M 16 | C21, C22 |
| | CEYA 221M 25 | C7 – C10 |
| | CEXA 221M 50 | C23, C24 |
| | CKDYF 473Z 50 | C101, C103 |
| | CMA 220J 500 | C15 – C18 |
| | CMA 221J 500 | C3 – C6 |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|---------------|-------------------------------|
| | ACN-079 | R1, R2 Carbon (1/1/2W) |
| | RDH1/4P □□□J | R49, R50, R73, R74 |
| ⚠ | RD1/2PSF □□□J | R59 – R62, R75, R76 |
| | RD1/2PS □□□J | R11 – R22, R35, R36, R47, R48 |
| | RD1/4PM □□□J | Other resistors |

OTHERS

| Mark | Part No. | Symbol & Description |
|------|--------------|--|
| ★★ | ASR-074 | RL1 – RL4 Relay |
| ★★ | ASX-193 | S1 Remote slide switch (PHONO SELECTOR) |
| | VBZ30P080FZK | Screw (3 x 8) |

Tape Switch Assembly

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|------------|----------------------|
| ★★ | IR2E01 | Q1 |
| ★★ | 2SC2603/A/ | Q2, Q3 |
| ★ | AEL-404 | D1 – D4 (LED Red) |

SWITCHES

| Mark | Part No. | Symbol & Descriptions |
|------|-------------|----------------------------------|
| ※※ | SEA6V4B4B4L | S2 Push switch (TAPE MONITOR) |
| ★★ | SEA8V222L | S3 Push switch (TAPE COPY) |

| Mark | Part No. | Symbol & Description |
|------|-----------|--|
| ★★ | SEA5V4B4S | S4 Push switch (LINE STRAIGHT, SUBSONIC) |
| ★★ | SEAV2S | S5 Push switch (RANGE) |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|--------------|--|
| | CEA 470M 25L | C1, C3 |
| | CEA 0R1M 50L | C2 |
| | ACE-225 | C4, C5 Metallized mylar (0.22/200V) |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|---------------|----------------------|
| | RD1/4PM □□□ J | R8 – R11, R14 – R20 |
| | RD1/8PM □□□ J | Other resistors |

OTHERS

| Mark | Part No. | Symbol & Description |
|------|--------------|----------------------|
| | VMZ30P060FMC | Screw (3 x 6) |

Power amp. (R) Assembly

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|------------|---|
| ★ | 1S1555 | D101, D113, D114, D119, D120, D128, D130, D131 |
| ★ | S6566 | D103, D104, D109 – D112, D129 |
| ★ | 1S2471 | D132 – D135 |
| ★ | MZ-047 | D123, D124 |
| ★ | WZ-061 | D117, D118 |
| ★ | STV2H | D102 |
| ★ | KZL110 | D127 |
| ★★ | 2SK170-BL | Q114 |
| ★★ | 2SJ74-BL | Q113 |
| ★★ | 2SC1845 | Q127, Q129, Q135 |
| ★★ | 2SA992 | Q128, Q130, Q136 |
| ★★ | 2SA1145P | Q107, Q115, Q118 |
| ★★ | 2SC2705P | Q108, Q116, Q117 |
| ★★ | 2SA1115/A/ | Q110, Q111, Q137, Q138 |
| ★★ | 2SC2603/A/ | Q109, Q112 |
| ★★ | 2SC2240 | Q126 |
| ★★ | 2SA970 | Q125 |

| Mark | Part No. | Symbol & Description |
|------|----------|----------------------|
| ★★ | 2SC1438 | Q101, Q102 |
| ★★ | 2SA857 | Q103 – Q106 |
| ★★ | 2SA968B | Q120 |
| ★★ | 2SC2238B | Q119 |
| ★★ | TH102-2 | TH101 |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|----------------|--------------------------------|
| | CEYA 100M 25 | C111, C112 |
| | ACE-066 | C104 Mylar (0.01/100V) |
| | ACE-067 | C113, C114 Mylar (0.1/100V) |
| | ACE-086 | C108, C109 Mylar (0.0012/100V) |
| | ACE-071 | C105 Polystyrene (1000p/125V) |
| | CMA 470J 500 | C106, C107 |
| | CMA 221J 500 | C118, C119, C124, C131, C132 |
| | CMA 101J 500 | C101 |
| | ACE-085 | C134, C135 Mylar (0.0015/100V) |
| | ACE-098 | C133 Polystyrene (2200p/125V) |
| | ACE-065 | C115 Polystyrene (4700p/125V) |
| | CQMA 222K 50 | C127 |
| | CQMA 103K 50 | C130 |
| | CCDSL 560K 500 | C122, C123 |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|-----------------|--|
| | ACP-019 | VR101 Semi-fixed (100) |
| ⚠ | RF1/4PS □□□ J | R109, R118 – R121, R130, R131, R133 – R138, R144, R145, R198, R199 |
| ⚠ | RF1/2PS □□□ J | R142, R143 |
| ⚠ | RS1P103J | R187, R188 |
| ⚠ | RD1/4PMFL □□□ J | R101, R102, R105, R106, R114, R166, R167 |
| ⚠ | RD1/4PMF □□□ J | R123 – R129, R132, R156 – R159, R162, R163 |
| ⚠ | RD1/2PS □□□ J | R107, R108, R126, R141, R189, R197 |
| | RD1/4PM □□□ J | Other resistors |

OTHERS

| Mark | Part No. | Symbol & Description |
|------|--------------|----------------------|
| | VHZ30P060FMC | Screw (3 x 8) |

AF Assembly (GWK-216)

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|------------|----------------------------------|
| ★★ | TC4011BP | Q123 |
| ★★ | NJM4558DX | Q119, Q211 |
| ★★ | 2SC2240 | Q203 – Q206, Q505, Q507 |
| ★★ | 2SC1438 | Q103 – Q110, Q113, Q114, |
| ★★ | 2SC2603/A/ | Q121, Q122 |
| ★★ | 2SC1827 | Q115, Q116, Q502, Q504 |
| ★★ | 2SA970 | Q207 – Q210, Q506, Q508 |
| ★★ | 2SA1115/A/ | Q120 |
| ★★ | 2SA857 | Q111, Q112 |
| ★★ | 2SK129A | Q201, Q202 |
| ★★ | 2SK194 | Q101, Q102 |
| ★★ | 2SA769 | Q117, Q118, Q501, Q503 |
| ★★ | 2SK373-Y | Q509, Q510 |
| ★ | 1S1555 | D103 – D106, D113, D505, D506 |
| ★ | S5566 | D205 – D212 |
| ★ | MZ-056 | D115 |
| ★ | MZ-130 | D114 |
| ★ | EP01Z | D109 – D112 |
| ★ | WZ-100 | D503, D504 |
| ★ | KZL140 | D201, D202 |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|---------------|---|
| | ACH-444 | C127, C128, C207, C208 Electrolytic (22/50V, NP) |
| | CEYA 100M 50 | C509, C510 |
| | CEYA 101M 25 | C505, C506 |
| | CEAYA 102M 16 | C201, C202 |
| | CEXA 221M 50 | C131, C132, C511, C512 |
| | CEXA 221M 100 | C501, C502 |
| | ACE-068 | C117, C118 Mylar (0.047/100V) |
| | ACE-066 | C103, C104 Mylar (0.01/100V) |
| | ACE-086 | C105, C106, C213, C214 Mylar (0.0012/100V) |
| | ACE-095 | C107, C108 Polypropylene (0.12/100V) |
| | ACE-094 | C111, C112 Polypropylene (0.033/100V) |

| Mark | Part No. | Symbol & Description |
|------|---------------|---|
| | ACE-097 | C119, C120, C125, C126 Polystyrene (0.01/160V) |
| | ACE-071 | C129, C130 Polystyrene (0.001/125V) |
| | ACE-089 | C113, C114 Polystyrene (470p/125V) |
| | CMA 221J 500 | C115, C116, C203, C204, C507, C508 |
| | CMA 470J 500 | C101, C102, C211, C212 |
| | CMA 100D 500 | C121 – C124 |
| | CEANL 4R7M 50 | C133 |
| | COSH 561J 50 | C205, C206 |
| | CKDYF 103Z 50 | C136 |
| | CKDYF 473Z 50 | C137 |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|----------------|--|
| | RDH1/4P □□□□ F | R115, R116, R119 – R122 |
| | RDH1/4P □□□ J | R101, R102, R143, R144, R149, R150, R203, R204, R217, R218, R171, R172, R515, R516 |
| ⚠ | RT5B 560K | R503, R504 |
| ⚠ | RF1/4PM6R8J | R501, R502 |
| ⚠ | RD1/2PSF 220J | R137 – R140 |
| ⚠ | RD1/2PS □□□ J | R111, R112, R159, R160, R201, R202, R231, R232 |
| ⚠ | RD1/4PMF 010J | R505, R508 |
| | RD1/4PM □□□ J | Other resistors |

OTHERS

| Mark | Part No. | Symbol & Description |
|------|----------|----------------------|
| ★★ | ASR-072 | RL1 Relay |

Servo Regulator Assembly

SEMICONDUCTORS

| Mark | Part No. | Symbol & Description |
|------|----------|----------------------|
| ★ | KZL140 | D401, D402 |

CAPACITORS

| Mark | Part No. | Symbol & Description |
|------|--------------|----------------------|
| | CEYA 102M 16 | C401, C402 |

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

| Mark | Part No. | Symbol & Description |
|------|-------------|----------------------|
| | RD1/2PS102J | R401, R402 |


10. ADJUSTMENTS

Idle Current Adjustment

1. Turn the VOLUME control down to minimum volume, and switch the LINE STRAIGHT switch on.
2. Rotate VR1 and VR101 counter clockwise.
3. Switch the power on with no input and no load applied to the unit.
4. Adjust VR1 to obtain a reading of 25mV ~ 30mV between TP25 (+) and TP26 (-). (L ch)
5. Adjust VR101 to obtain a reading of 25mV ~ 30mV between TP24 (+) and TP23 (-). (R ch)
6. Readjust after aging for at least 30 minutes.

Reference:

Center DC output voltage tolerance: $0V \pm 50mV$.

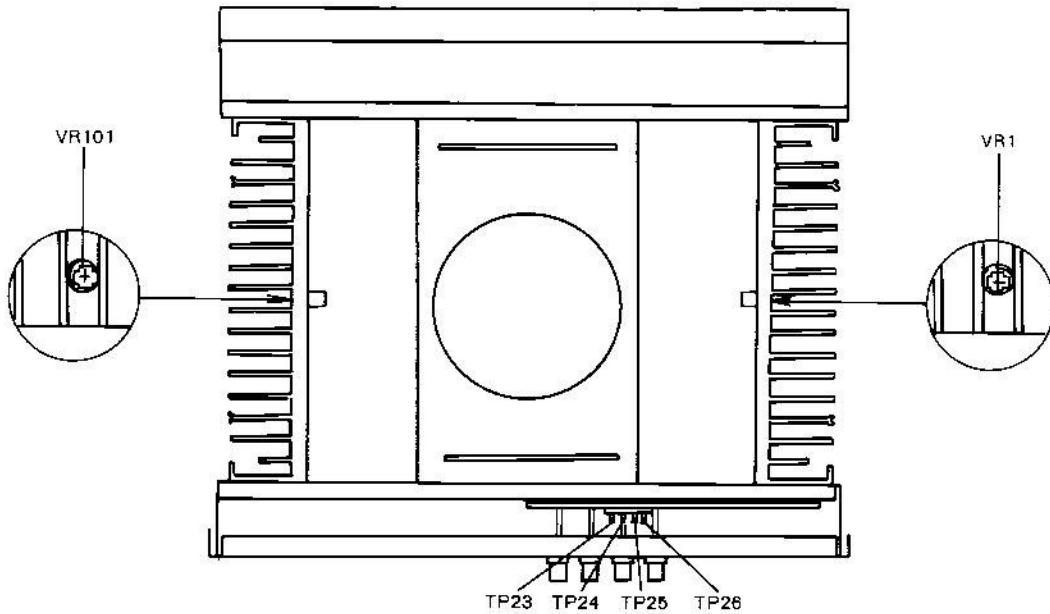


11. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

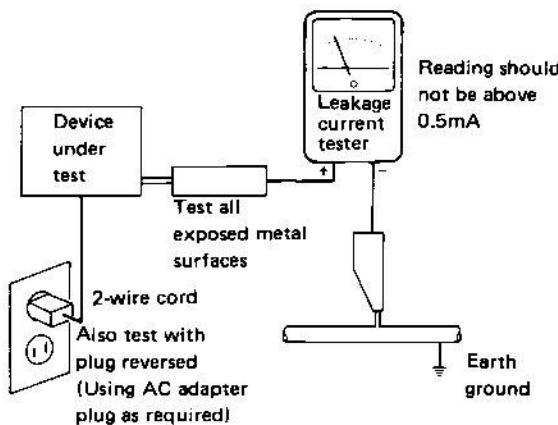

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

12. PACKING

PACKING

1

| Mark | No. | Part No. | Description |
|------|-----|----------|-------------------------------------|
| 1. | 1. | AHA-328 | Side pad L |
| | 2. | ARB-561 | Operating instructions (English) |
| 2. | 3. | AHA-329 | Side pad R |
| | 4. | AHC-067 | Wrapping case |
| | 5. | AHE-205 | Packing case |

4

5

€

1

1

