


Service Manual

**CIRCUIT DESCRIPTIONS
REPAIR & ADJUSTMENTS**

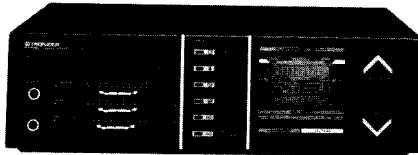

**ORDER NO.
ARP-649-0**

STEREO AMPLIFIER

A-X700

MODEL A-X700 COMES IN FIVE VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Voltage	Remarks
KU	AC120V only	U.S.A. model
HE	AC220V, 240V (switchable)	European continent model
HB	AC220V, 240V (switchable)	United Kingdom model
S	AC110V, 120V, 220V, 240V (switchable)	General export model
S/G	AC110V, 120V, 220V, 240V (switchable)	U.S. Military model

- This service manual is applicable to the KU, HE, HB and S, S/G types.
For servicing of the HE, HB, S, S/G types, please refer to Pages 30~44.

CONTENTS

1. SPECIFICATIONS	2	9. SCHEMATIC DIAGRAM	21
2. FRONT PANEL FACILITIES	3	10. ELECTRICAL PARTS LIST	25
3. PARTS LOCATION	5	11. SAFETY INFORMATION	29
4. PACKING	6	12. FOR HE TYPE	30
5. EXPLODED VIEW AND PARTS LIST	7	13. FOR S, S/G TYPES	37
6. BLOCK DIAGRAM	11	14. FOR HB TYPE	38
7. CIRCUIT DESCRIPTIONS	13		
8. P.C. BOARDS CONNECTION DIAGRAM	17		

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
 TEL: (800) 421-1404, (800) 237-0424
PIONEER ELECTRONIC (EUROPE) N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775 28 08
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia
 TEL: (03) 580-9911

1. SPECIFICATIONS

Amplifier Section

Continuous average power output is 45 watts* per channel, min., at 8 ohms from 20 Hertz to 20,000 Hertz with no more than 0.07% total harmonic distortion.

DIN, Continuous Power Output at 1 kHz (both channels driven)

T.H.D. 1%, 8Ω 50 W per channel

Input (Sensitivity/Impedance)

PHONO 2.5 mV/50 kΩ

TUNER, CD, TAPE PLAY, VIDEO/AUX

ADAPTOR 150 mV/50 kΩ

Phono Overload Level (T.H.D. 0.1%, 1 kHz)

..... 75 mV

Output (Level/Impedance)

TAPE REC 150 mV/2.2 kΩ

Frequency Response

PHONO (RIAA Equalization)

..... 20 Hz to 20 kHz \pm 0.3 dB

TUNER, CD, VIDEO/AUX, TAPE PLAY,

ADAPTOR 20 Hz to 70 kHz \pm 2 dB

Tone Control

BASS \pm 10 dB (100 Hz)

TREBLE \pm 10 dB (10 kHz)

Muting -20 dB

Loudness Control (Volume control set at -40 dB position)

100 Hz +7 dB

10 kHz +4 dB

Hum and Noise (IHF, short circuited, A network)

PHONO 80 dB

CD, VIDEO/AUX, ADAPTOR, TUNER,

TAPE PLAY 97 dB

Hum and Noise (DIN, continuous power 150 mW)

PHONO 73 dB/66 dB

CD, VIDEO/AUX, ADAPTOR, TUNER,

TAPE PLAY 85 dB/62 dB

Miscellaneous

Power Requirements

HE model a.c. 220 V \sim , 50/60 Hz

HB model a.c. 240 V \sim , 50/60 Hz

S, S/G models' \sim AC 110 V/120 V/220 V/240 V
(switchable), 50/60 Hz

KU model AC 120 V, 60 Hz

Power Consumption

HE model 310 W

HB model 310 W

S, S/G models 140 W

KU model 140 W

Dimensions 320 (W) x 98 (H) x 221 (D) mm

12-5/8 (W) x 3-7/8 (H) x 8-3/4 (D) in

Weight (without package) 5.2 kg (11 lb 7 oz)

Furnished Parts


Operating Instructions 1

NOTE:

- Specifications and design subject to possible modification without notice due to improvements.
- *Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Claims for Amplifier.

2. FRONT PANEL FACILITIES

FRONT PANEL

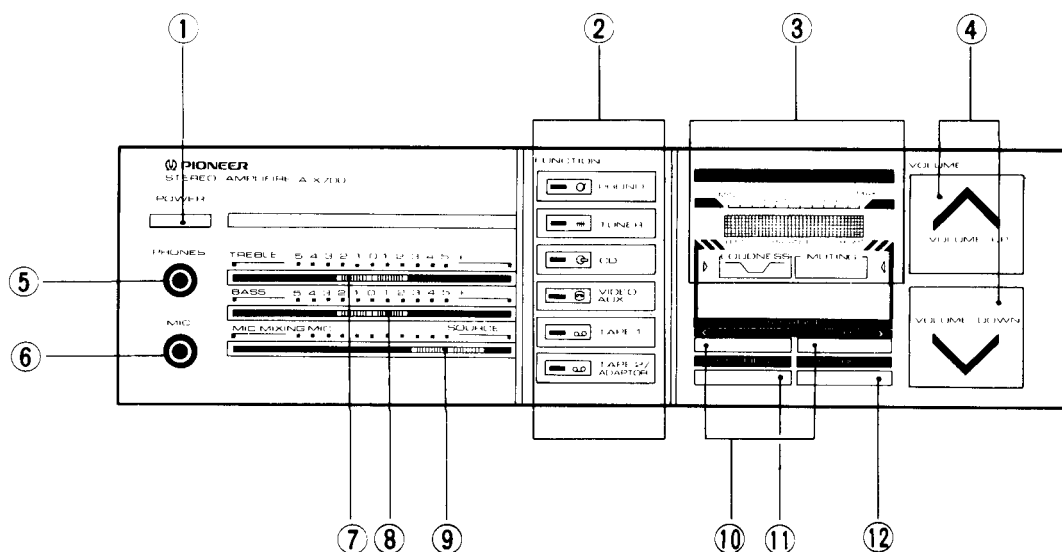

① POWER switch

Press to turn power to the unit ON and OFF.

Depressed position (ON):

Power is supplied to the unit.

Released position (OFF):

Power to the unit is disconnected.

② FUNCTION switches/indicators

[PHONO] — Press when listening to record playback on a turntable.

[TUNER] — Press when listening to AM or FM broadcasts with a tuner.

[CD] — Press when listening to a compact disc playback with a CD player.

[VIDEO/AUX] — Press when listening to programs from a component connected to the VIDEO/AUX terminals.

[TAPE 1] — Press when listening to tape playback with a tape deck.

[TAPE 2/ADAPTOR] — Press when using a component (sound processor, graphic equalizer) connected to the TAPE 2/ADAPTOR terminals. Also can be used during tape playback when a tape deck is connected to these terminals.

NOTE:

When a component is not connected to the TAPE 2/ADAPTOR terminals, or when the component connected is not being used, be sure to set the (TAPE 2/ADAPTOR) switch to the OFF position (the indicator will go out). If set to the ON position, no sound will be heard.

③ FLUORESCENT DISPLAY

[VOLUME/BALANCE] — Normally (VOLUME) indicates the sound volume. The larger the numbers, the larger the sound volume. When the BALANCE switch is pressed, the display's function switches to indicating the right/left balance of sound (after a few seconds, the display will automatically switch back to its volume function).

[LOUDNESS] — Lights when the LOUDNESS switch is set to the ON position.

[MUTING] — Lights when the MUTING switch is set to the ON position.

④ VOLUME switches

These are used for controlling the sound volume.

[VOLUME UP] — Increases the sound volume.

[VOLUME DOWN] — Decreases the sound volume.

⑤ PHONES jack

When using headphones, insert their plug into this jack. The sound from the speakers will automatically be disconnected.

⑥ MIC jack

When using a microphone, insert its plug into this jack.

⑦ TREBLE tone control

Use for adjusting the high-frequency tone. The central "0" position is the flat (normal) position. When moved to the right, high-frequency tones are emphasized; when moved to the left, high-frequency tones are deemphasized.

⑧ BASS tone control

Use to adjust the low-frequency tone. The central "0" position is the flat (normal) position. When moved to the right, low-frequency tones are emphasized; when moved to the left, low-frequency tones are deemphasized.

⑨ MIC MIXING control

Use to adjust the sound balance between the microphone connected to the MIC jack, and components (tuner, tape deck, turntable, CD player, etc.) connected to the rear panel.

When the control is moved to the MIC side, the sound from the microphone will be at a maximum, while the sound from the other components will not be heard.

When moved to the SOURCE side, the sound from components will be at a maximum, and the microphone sound will not be heard.

NOTE:

When performing playback of source components only, leave the control set to the SOURCE side.

⑩ BALANCE switches

Normally, set so that the control display's BALANCE function indicates at the center position. (When L and R are pressed simultaneously, the balance will be adjusted to the center position.) If the sound heard from the speakers appears to be too loud on one side, adjust as follows: If the right side is too loud, press L. If the left side is too loud, press R.

⑪ LOUDNESS switch

Press when listening at a low volume level. When pressed ON, the control display's LOUDNESS indicator will light. Very low- and very high-frequency sounds will be augmented, thus giving a more powerful sound quality even at low listening levels.

⑫ MUTING switch

Use to temporarily cut sound volume. When pressed ON, the control display's MUTING indicator will light, and sound volume will be cut by 20 dB. When set to OFF, the sound will return to its previous volume.

When the power to the unit is turned OFF, a built-in microcomputer automatically memorizes the positions of the following switches, and will maintain that memory for approximately 1 week when the unit is not used. As a result, when the power is turned ON, the previously set switch positions will be set again automatically.

- FUNCTION switches
- VOLUME switch
- LOUDNESS switch
- MUTING switch
- BALANCE switches

If the unit is not used for more than one week, the memorized positions will be cancelled, and the following positions will be set:


- VOLUME switch – Minimum
- LOUDNESS switch, MUTING switch – OFF
- BALANCE switches – Center

3. PARTS LOCATION


NOTES:

- Parts without part number cannot be supplied.
- The **⚠** mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
★★ GENERALLY MOVES FASTER THAN ★.
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.


Front Panel View

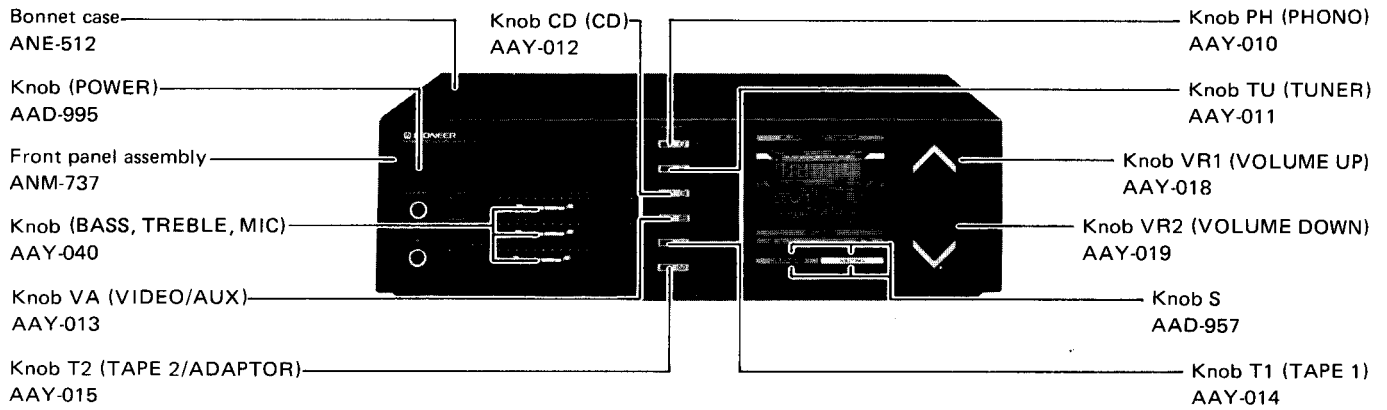


Front View with Panel Removed

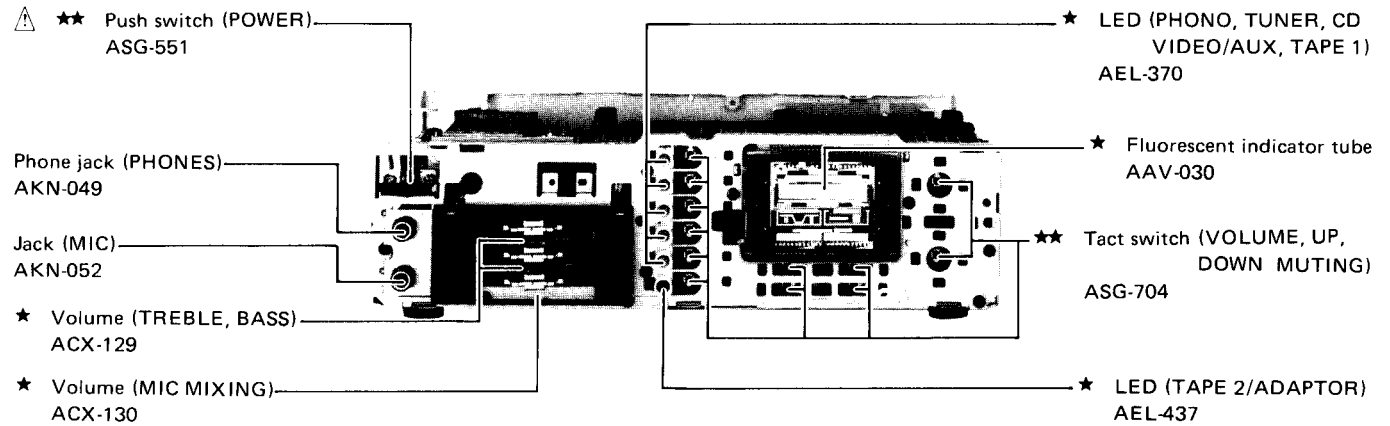


Rear Panel View

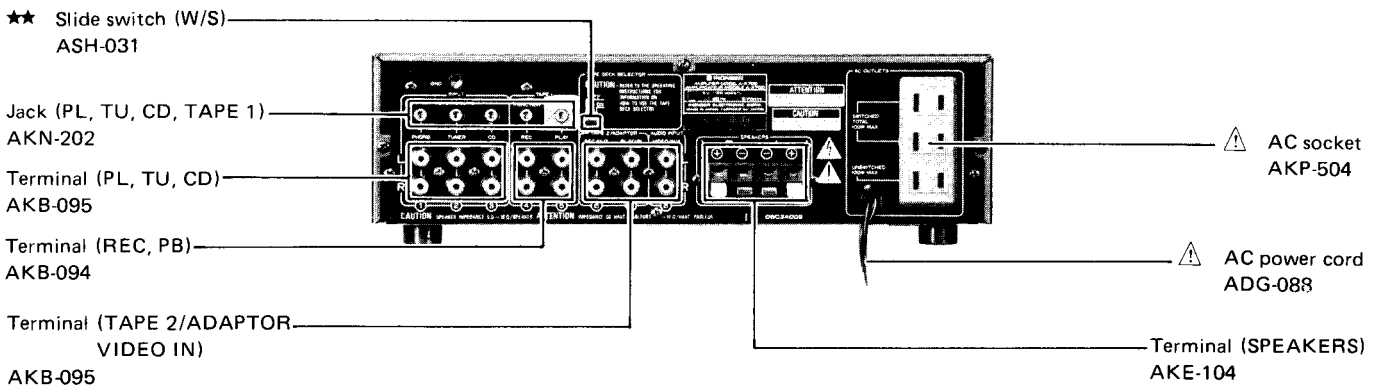

Top View

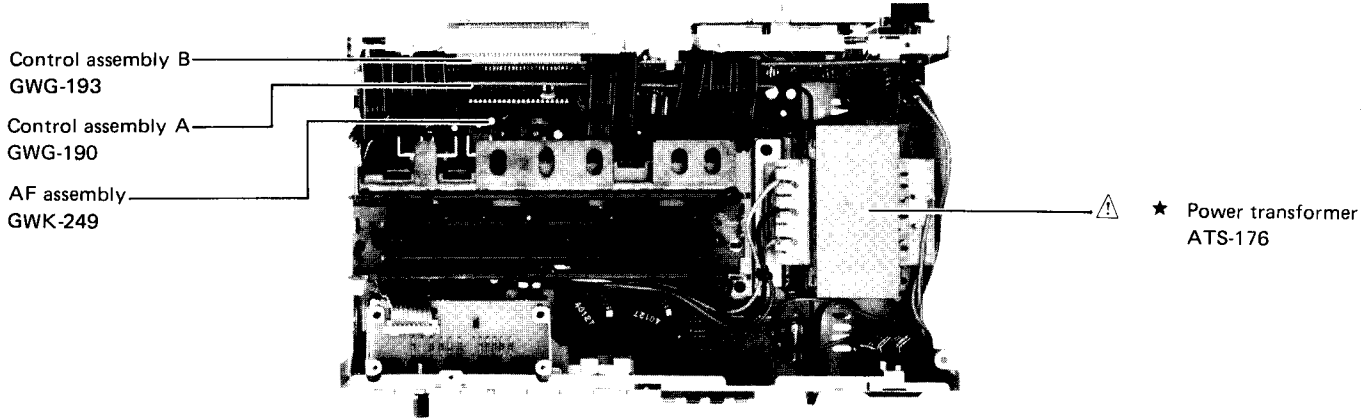

4. PACKING

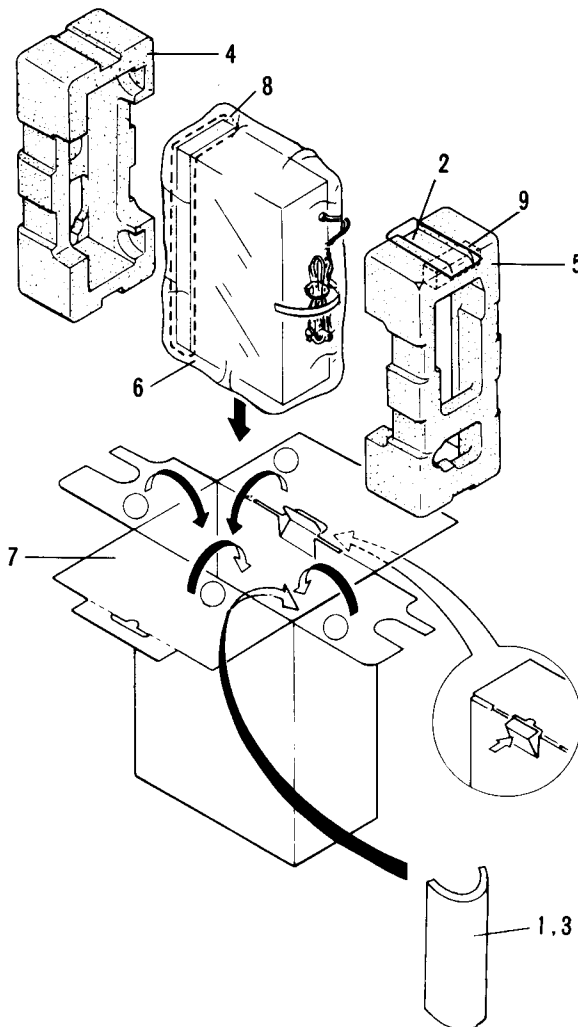

Mark	No.	Part No.	Description
	1	ARB-647	Operating instructions
	2	AHG-117	Vinyl pouch
	3	ARH-070	Sub instruction manual
	4	AHA-324	Front pad
	5	AHA-325	Rear pad
	6	AHG-125	Sheet
	7	AHE-478	Packing case assembly
	8	AHG-128	Sheet
	9	AHB-131	Pad

ence of the
of identical
the marks
s on model
PH (PHONO)
010
TU (TUNER)
011
OLUME UP)
UME DOWN)
T1 (TAPE 1)
014
TUNER, CD
UX, TAPE 1)
ndicator tube
UME, UP,
N MUTING)
ADAPTOR)
AC socket
AKP-504
C power cord
OG-088
SPEAKERS)


5. EXPLODED VIEWS AND PARTS LIST

A

B

C

D

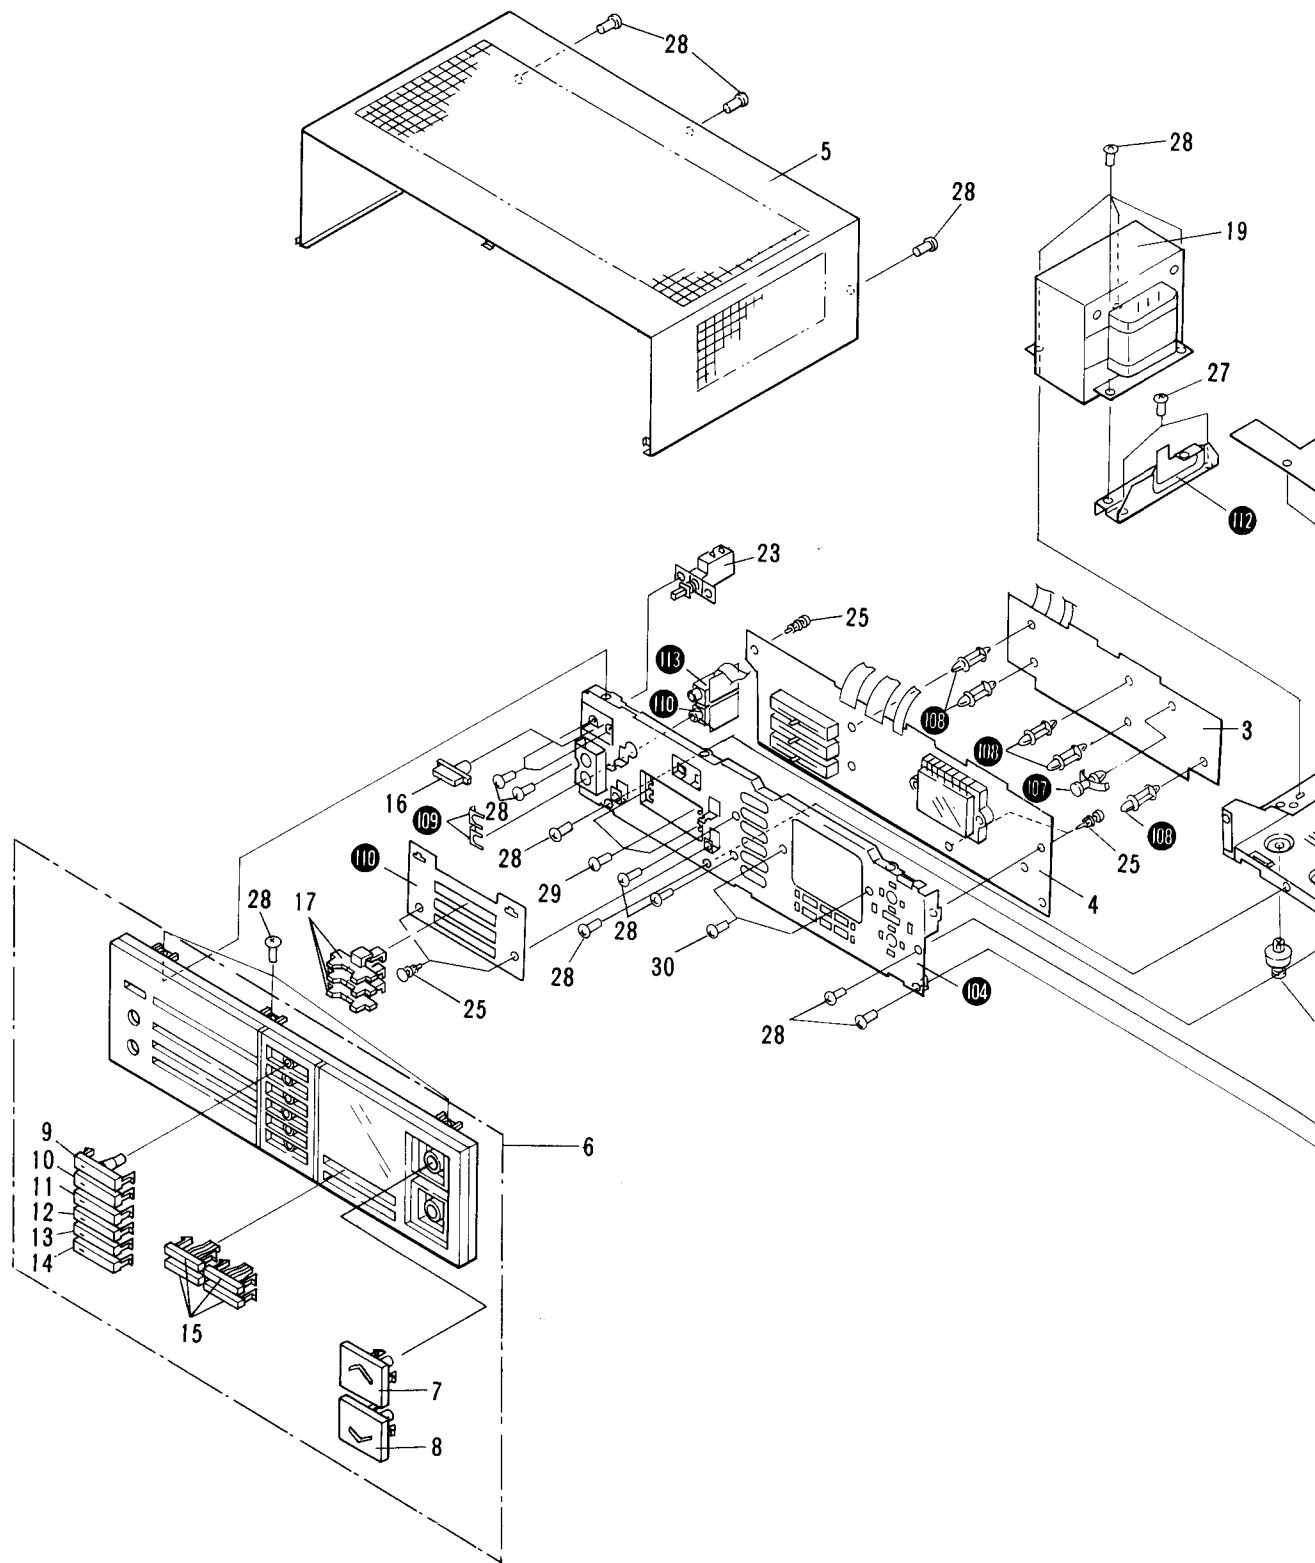


- *Parts without part number cannot be supplied.*
- *The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
★★ *GENERALLY MOVES FASTER THAN* **★**.
*This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.**

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1	GWK-249	AF assembly		100		Jack assembly (MIC)
	2	GWY-156	Driver assembly		101		Mini Jack assembly
	3	GWG-190	Control assembly A		102		Terminal (GND)
	4	GWG-193	Control assembly B		103		Chassis
	5	ANE-512	Bonnet case		104		Panel stay
	6	ANM-737	Front panel assembly		105		Bottom plate
	7	AAY-018	Push knob VR1(VOLUME UP)		106		Rear panel
	8	AAY-019	Push knob VR2(VOLUME DOWN)		107		Print spacer
	9	AAY-010	Push knob PH (PHONO)		108		PCB holder
	10	AAY-011	Push knob TU (TUNER)		109		Mount plate
	11	AAY-012	Push knob CD (CD)		110		Blind sheet
	12	AAY-013	Push knob VA (VIDEO/AUX)		111		PCB holder A
	13	AAY-014	Push knob T1 (TAPE 1)		112		PCB holder B
	14	AAY-015	Push knob T2 (TAPE 2)		113		Headphone assembly
	15	AAD-957	Push knob S				
	16	AAD-995	Power knob (POWER)				
	17	AAY-040	Slide knob				
\triangle	18	ADG-088	AC Power cord				
\triangle	★	19	ATS-176	Power transformer (120V)			
	20				
\triangle	21	AKP-504	AC socket				
\triangle	★★	22	AEK-125	Fuse (FU1)			
\triangle	★★	23	ASG-551	Push switch (S1)			
	24	AEP-016	Leg assembly				
	25	AEC-471	Rivet				
	26	AEC-510	Rivet				
	27	BBZ30P080FMC	Screw (3x8)				
	28	VBZ30P080FZK	Screw (3x8)				
	29	PMZ20P030FZK	Screw (2x3)				
	30	VMZ30P060FMC	Screw (3x6)				

Mark	No.
	1
	2
★★	3
★★	4
	5
	50
	51
	52

Heat Sink


nce of the
of identical
the marks
s on model

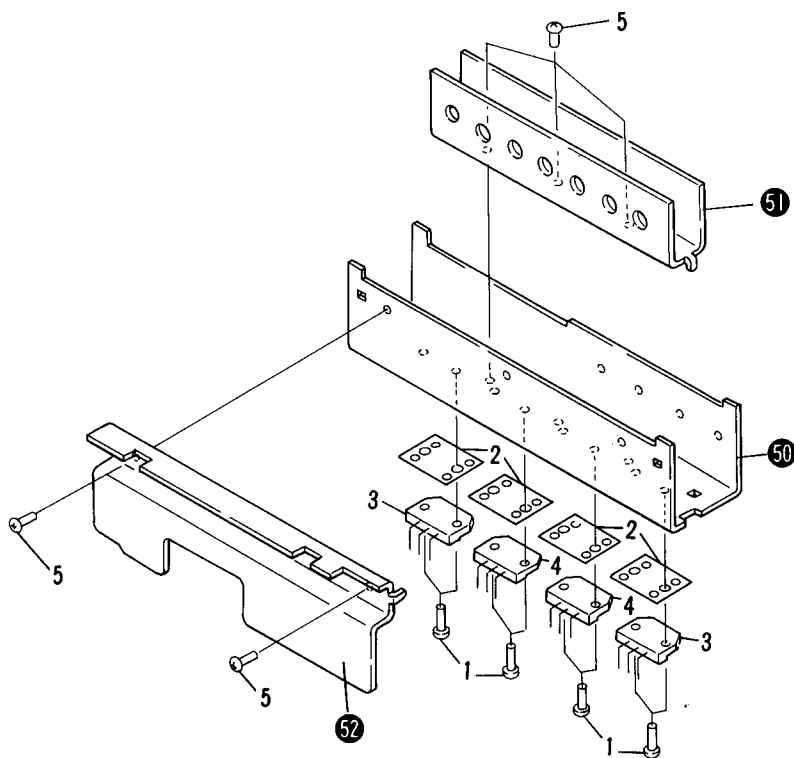





Mark	No.	Part No.	Description
	1	ABA-258	Screw
	2	AEC-942	Mica sheet
★★	3	2SA1216(A)-G/P/Y*	Q2, Q4, Power transistor
★★	4	2SC2922(A)-G/P/Y*	Q1, Q3, Power transistor
	5	BBZ30P080FZK	Screw
	50		Heat sink
	51		Sub heat sink B
	52		Sub heat sink A

*hfe of Q1—Q4 should have the same value.

6. BLOCK DIAGRAM

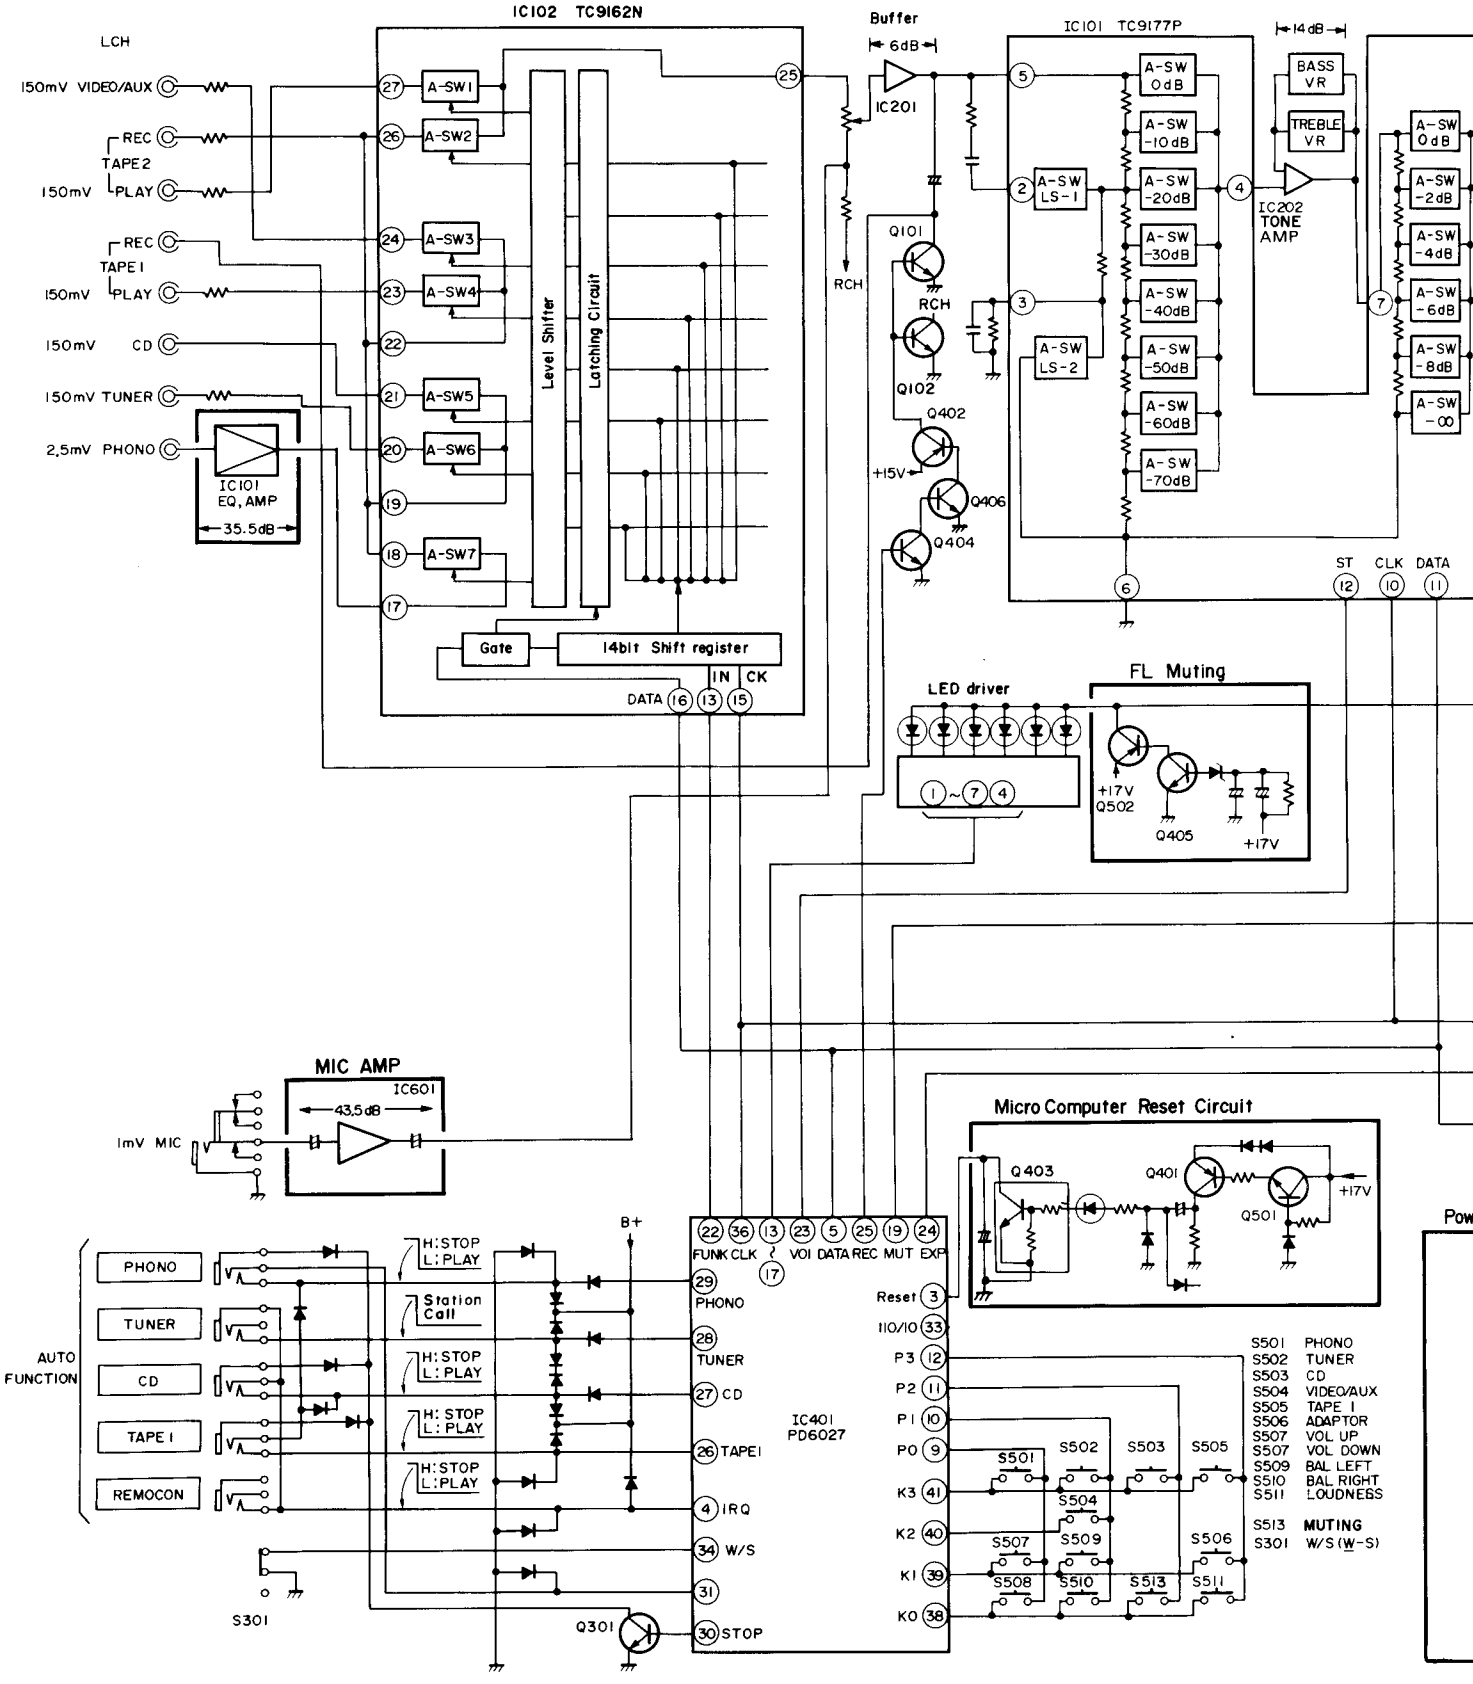

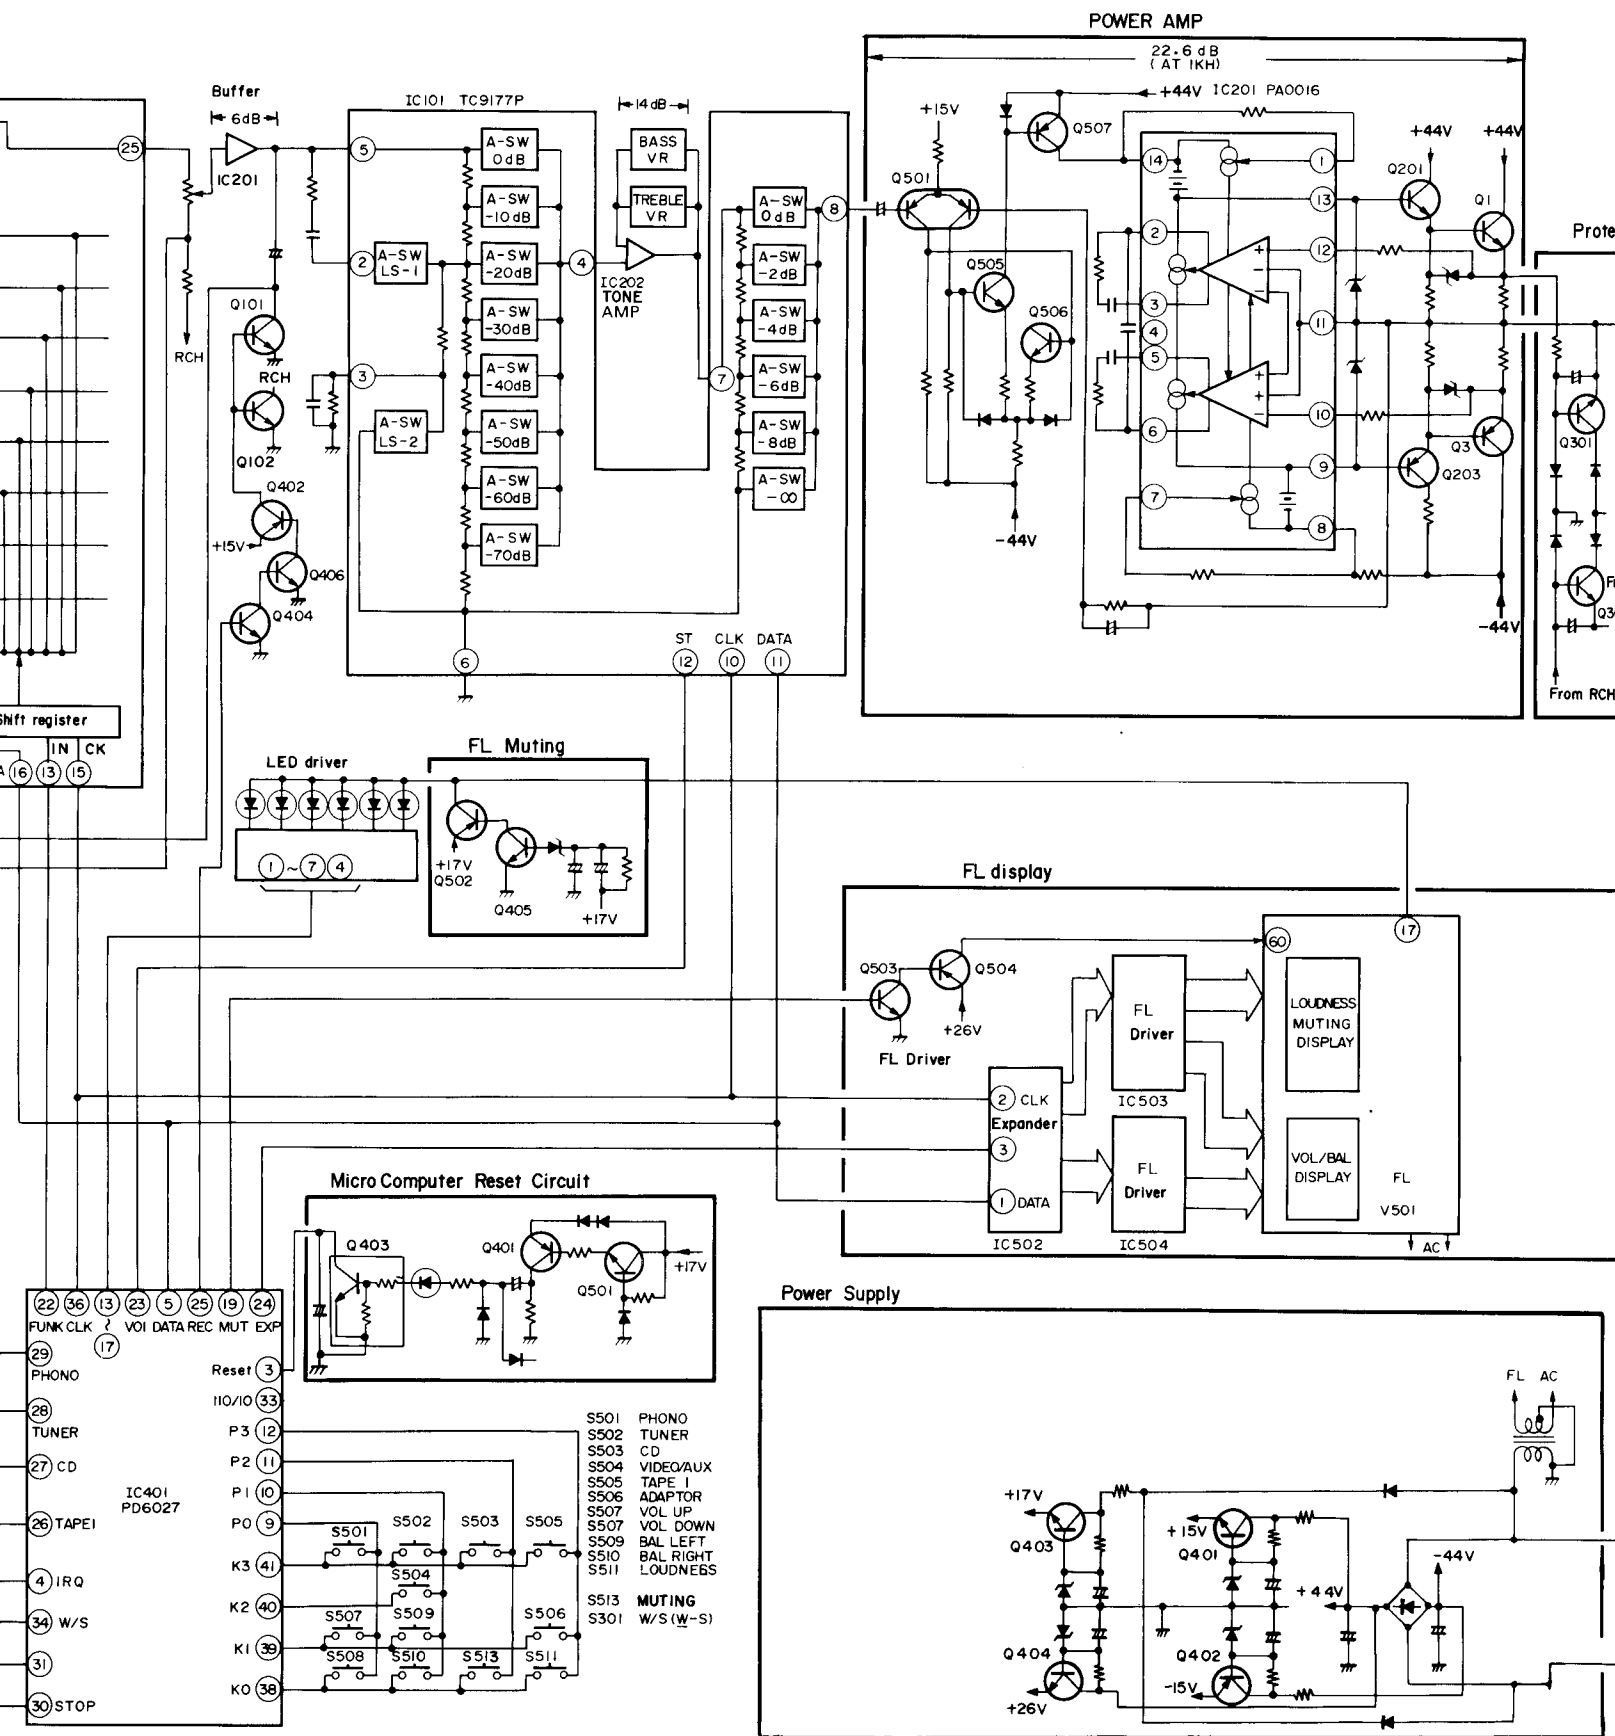

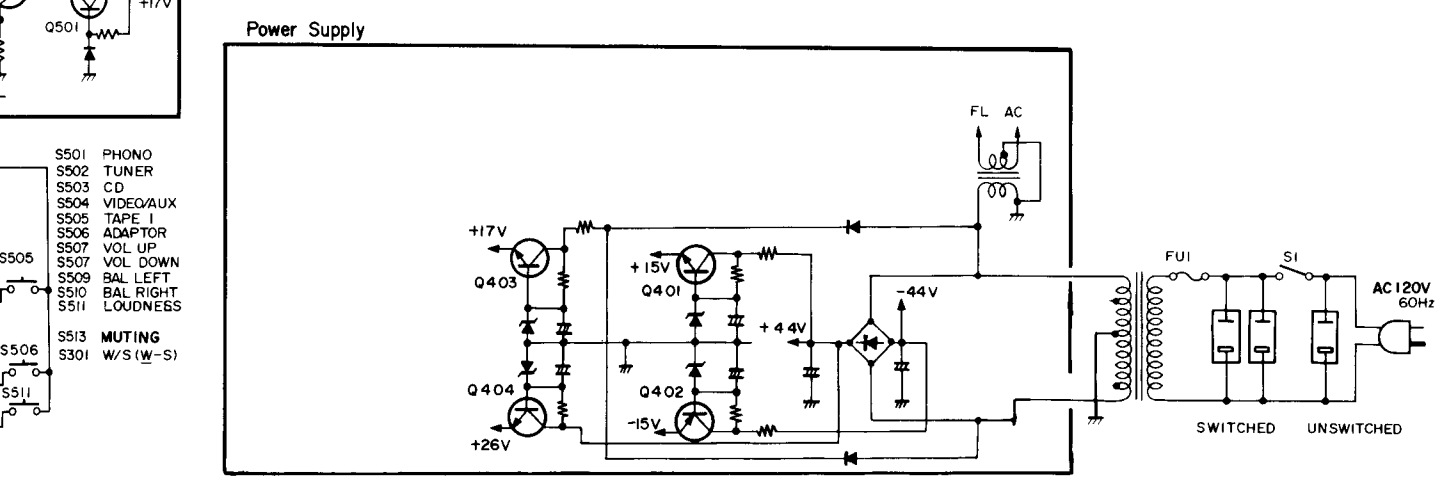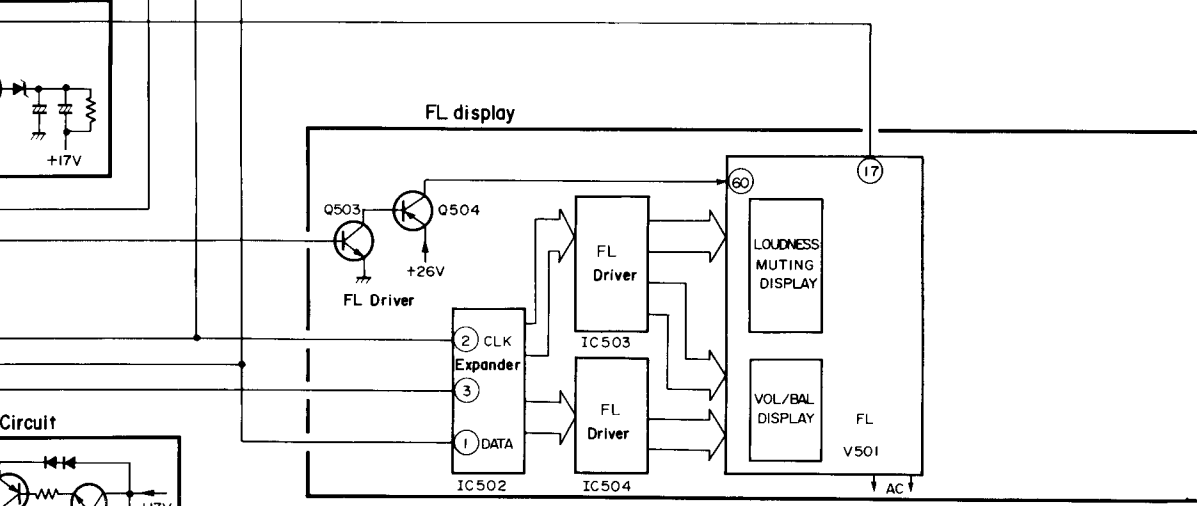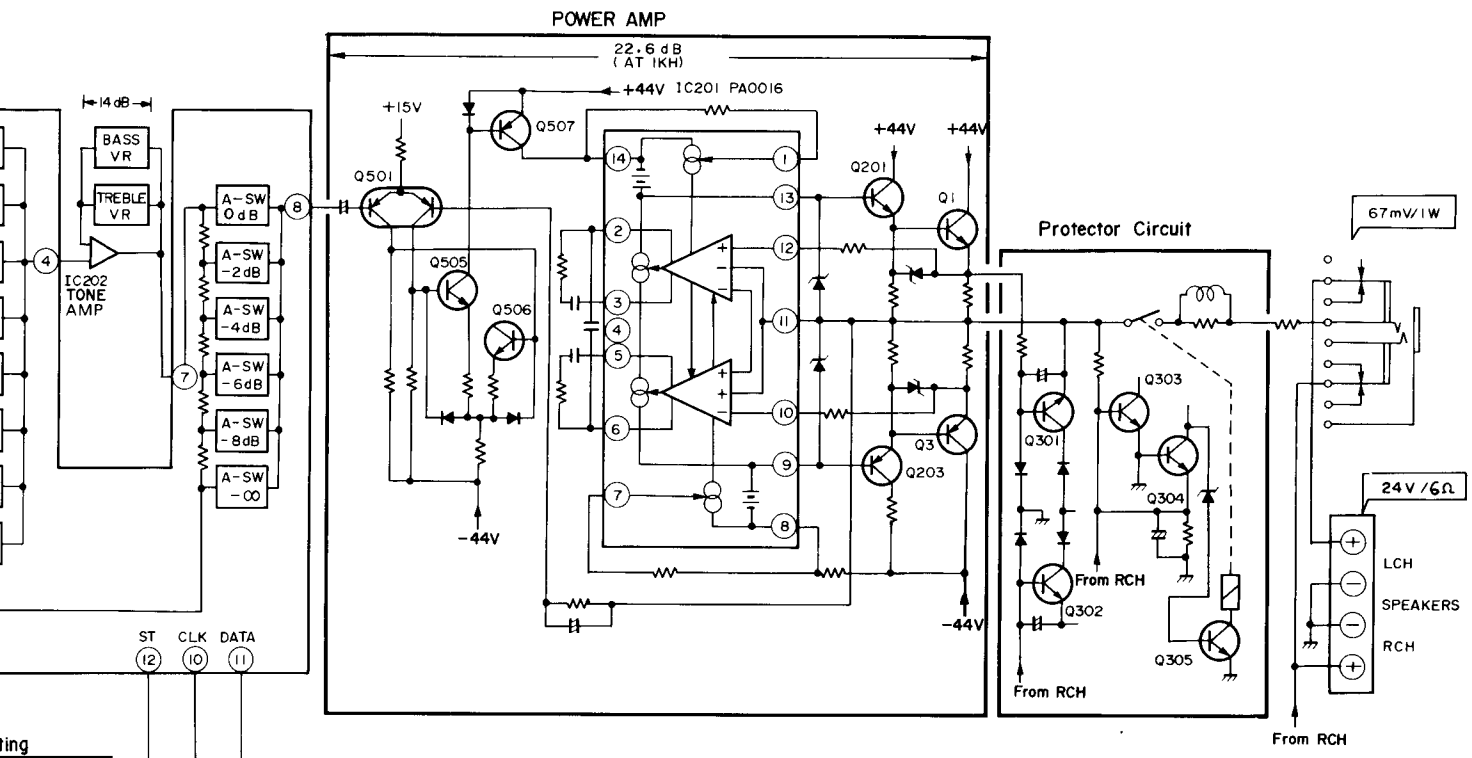

- S501 PHONO
- S502 TUNER
- S503 CD
- S504 VIDEO/AUX
- S505 TAPE 1
- S506 ADAPTOR
- S507 VOL UP
- S507 VOL DOWN
- S509 BAL LEFT
- S510 BAL RIGHT
- S511 LOUDNESS
- S513 MUTING
- S301 W/S (W-S)

7. CIRCUIT DESCRIPTIONS

Function Switching

If one of the switches S501 thru S506 in Fig. 7.6 is pressed, the PD6027 microcomputer (IC401) detects which switch has been pressed, and by controlling the TC9162N electronic switch (IC102), switches the unit to the selected function.

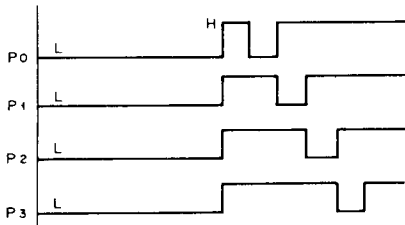


Fig. 7-1

Key scanning is started only when one of the keys in the matrix is pressed. P0 thru P3 are all at L level before any key is pressed, but are switched to H level once a key is pressed. At the same time, a microcomputer reads which key has been pressed at K0 thru K3, and then decides whether the pressed key is a function key or a volume key. If a function key, the current function position is compared with the pressed function. If this comparison shows that the two are different functions, function data corresponding to the pressed key is passed to the TC9162N. The configuration of this data is outlined in Fig. 7.2.

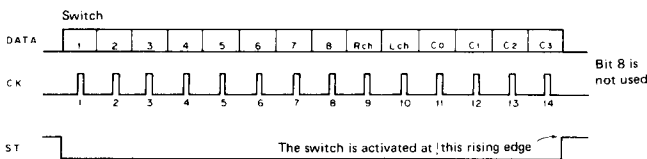


Fig. 7-2

The data consists of 14 bits with bits 1 thru 7 corresponding to PHONO, TUNER, CD, etc., and the bit for the switch to be switched on is switched to H level. Bits 9 and 10 are the left and right channel selector bits, while bits 11 thru 14 are TC9162N code bits.

Volume Control

Volume control operations involve the use of a microcomputer (IC401) combined with the TC9177P electronic volume control (IC101) as indicated in Fig. 7.7.

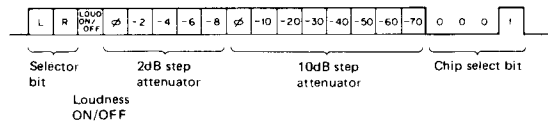


Fig. 7-3

20-Bit serial data corresponding to the pressed key and the current volume level is passed from the microcomputer for both left and right channels in that order. TC9177P (IC101) stores the 20 bits of data in a 20-bit shift register, and then activates each switch by strobe signal to achieve the selected degree of attenuation.

If bit 3 of the data is switched to H level, LS-1 is switched on and LS-2 is switched off resulting in the loudness being switched on to achieve a loudness effect if the volume level is less than -20dB.

Muting

TC9177P (IC101) attenuation is changed by 20dB by data similar to the VR control data.

Volume UP & DOWN Switches

Pressing the UP (S507) or DOWN (S508) switch continuously results in continuous volume changes. The DOWN switch, however, is set to change the volume at a faster rate.

The volume level can be controlled in 2dB steps from 0dB to 76dB, and down to -infinity in 40 steps.

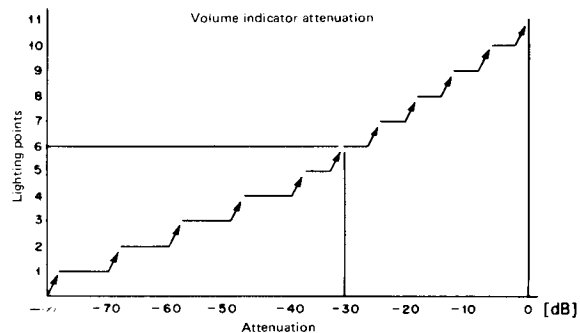



Fig. 7-4

L and R Balance Switches

Pressing the L (S509) or R (S510) balance switch once results in the display being switched to a balance display. Pressing either switch continuously results in continuous switching operation, and pressing both together results in the balance being set to center.



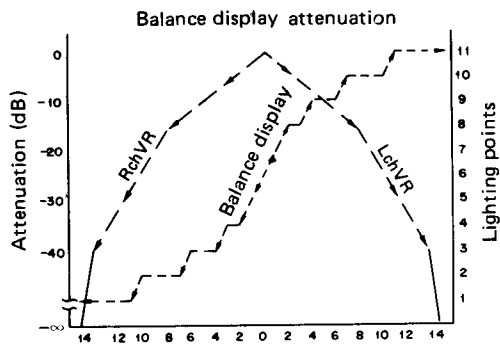


Fig. 7-5

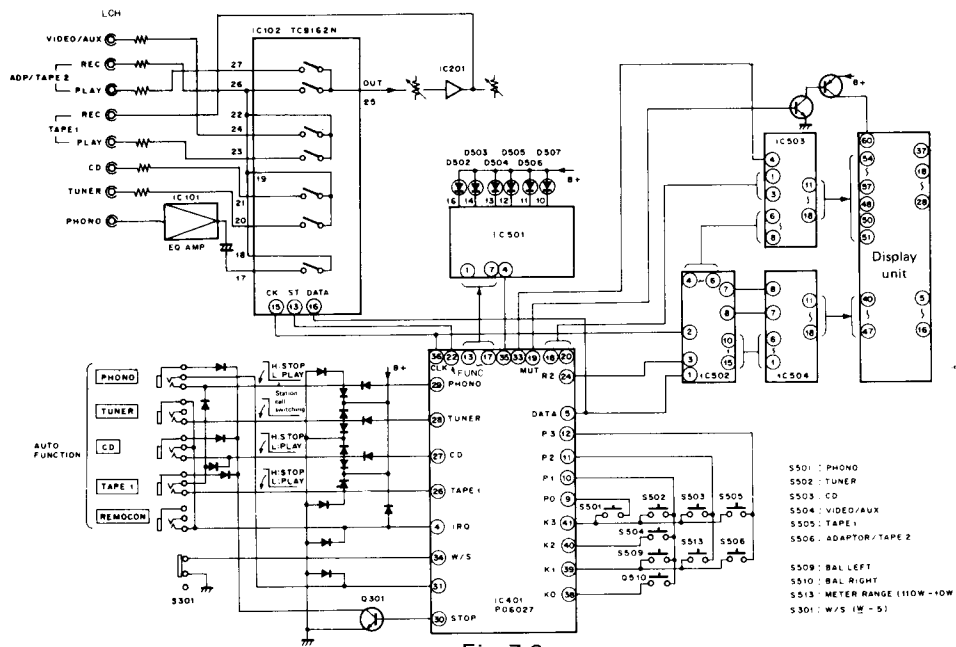


Fig. 7-6

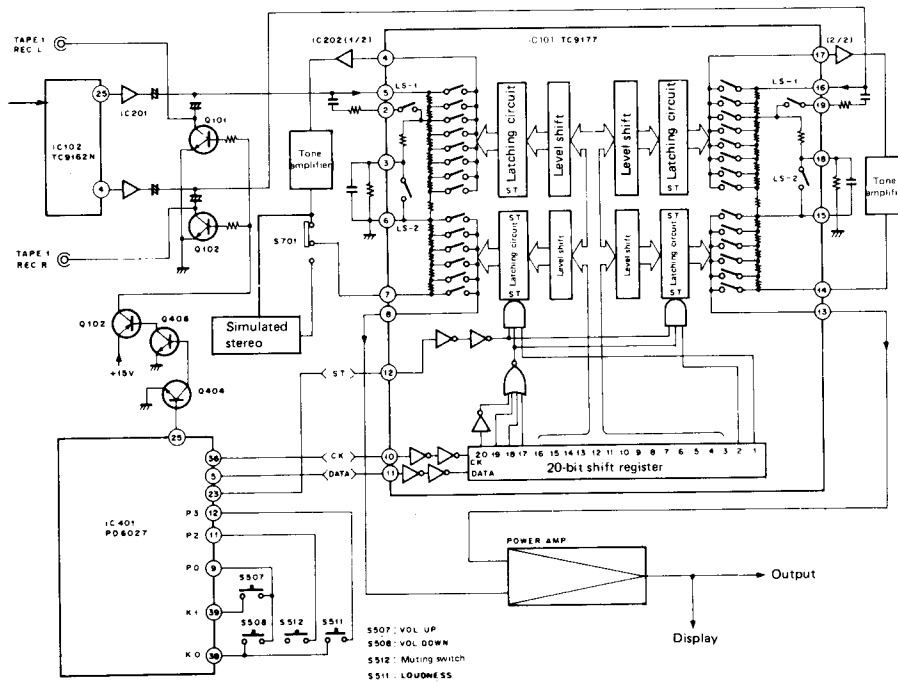


Fig. 7-7

Automatic

If audio "play" function is selected, PHONO (or TAPE) will be selected automatically.

When the "AUTO" function is selected, the component will automatically select CD, or TAPE, or PHONO, depending on the level of the signal which is being received. This function is controlled by a switching

Stop Signal

When a stop signal is received, the H level signal will be sent to the computer. This output signal will be used to

Double Deck

S301 is a double deck control. It is used to control the deck. When the deck is on, the resulting signal will be remaining a signal. Q406 then the Q102 are used to

When S301 is switched, the deck is switched or not. The function of the deck is switched. When the deck is being turned, the deck is being turned. When the deck is being turned, the deck is being turned. When the deck is being turned, the deck is being turned.

Remote Control

The remote control mechanism is used for a remote control. When the "DOWN" button is pressed, the stop signal will be sent to the remote control. This signal will be sent directly from

Automatic Function Switching

If audio components featuring "one-touch auto-play" functions are connected to the relevant PHONO (PL), TUNER (TX), CD, or TAPE1(CT) "AUTO FUNCTION" terminal on the rear panel of the A-X700, the function is switched automatically to the operated component.

When the PLAY or STATION CALL switch of the component connected to the PHONO, TUNER, CD, or TAPE1 terminal is switched on, the generated L level signal is passed to the microcomputer which in turn passes corresponding data to the function switch (TC9162N) to effect the actual switching operation.

Stop Signal

When a function is switched by automatic function switching or amplifier function switching, an H level signal is generated at pin 30 of the microcomputer. Q301 is thus turned on, and auto stop output signals are passed to PL, CD, and CT.

Double Deck and Single Deck Switching

S301 is switched according to whether the tape deck connected to TAPE1 is a double or single deck. When a double deck is used, S301 is switched on resulting in pin 25 of the microcomputer remaining at H level. Q404 is thus turned on, and Q406 then Q102 are turned off. When Q101 and Q102 are both turned off, REC1 is switched on.

When S301 is off, pin 25 of the microcomputer is switched to H or L level depending on whether or not function has been switched to TAPE1. If the function has been switched to TAPE1, pin 25 is switched to L level, resulting in Q101 and Q102 being turned on and REC1 being switched off. When the function is switched to other positions, the reverse occurs.

Remote Control Terminal

The photosensitive section of the remote control mechanism is located in the tuner. Upon reception of a remote control signal in the tuner, a VR UP, DOWN, muting, VIDEO/AUX, or tunable start/stop signal is decoded by the microcomputer. Remote control signals for CD or TAPE1 are passed direct from the tuner.

Microcomputer Reset Circuit

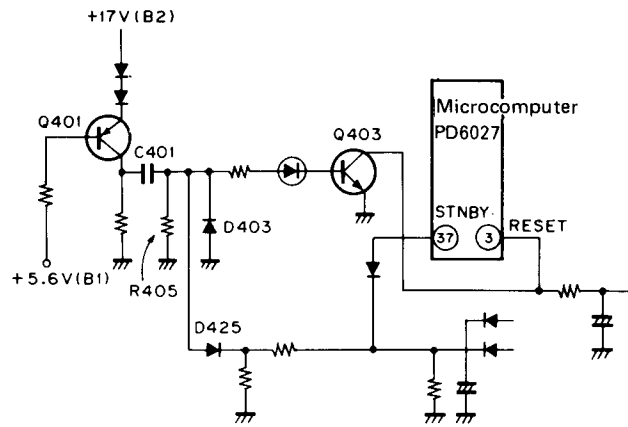


Fig. 7-8

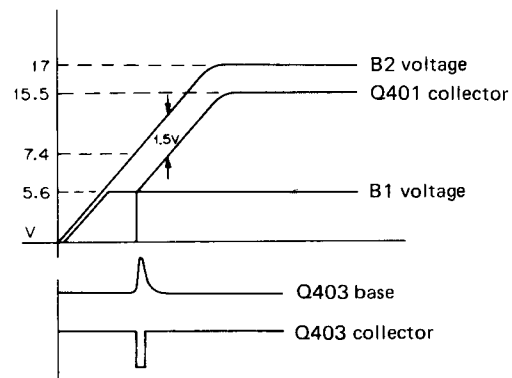


Fig. 7-8-1

The microcomputer reset circuit is outlined in Fig. 7.7.

When the power is switched on, and the Q401 base voltage (B_1) is increased to 5.6V with the emitter voltage (B_2) in excess of 7.4V, Q401 is turned on and the collector voltage is gradually increased to 15.5V. The Q401 output is differentiated by C401/R405 and then inverted by Q403 to obtain the reset signal.

D425 has been inserted in the circuit to prevent Q403 cut-off at the same time the power is switched off in order to prevent the memory from being switched off by reset circuit misoperation if the power switch is switched on and off in quick succession. The reset signal resets the microcomputer once clock oscillation (3.84 MHz) has been commenced when the STANDBY pin (No.37) voltage is increased after the power is switched on.

PD6027 F

Pin No.	Pin Name
1	EX
2	X
3	RESET
4	IRQ
5	SO
6	SI
7	SC/TO
8	Tc
9	P_ϕ
10	P_1
11	P_2
12	P_3
13	O_ϕ
14	O_1
15	O_2
16	O_3
17	O_4
18	O_5
19	O_6
20	O_7
21	VSS
22	R_ϕ
23	R_1
24	R_2
25*	R_3
26	R_4
27	R_5
28	R_6
29	R_7
30*	R_8
31	R_9
32	R_ϕ
33	R_{11}
34	R_{12}
35	R_{13}
36	R_{14}
37	STBY
38	K_ϕ
39	K_1
40	K_2
41	K_3
42	VDD

PD6027 Functions


Pin No.	Pin Name	Function	Active	
1	EX	3.84 MHz resonator is connected between these pins.	/	
2	X			
3	RESET	Positive power supply (VDD) connection	L	
4	IRQ	Remote control signal input	L	
5	SO	Serial data output to PD0012, TC9177P, and TC9162N.		
6	SI	NC		
7	SC/T0			
8	Tc			
9	P ϕ	Output of key matrix drive signals	L	
10	P ₁		L	
11	P ₂		L	
12	P ₃		L	
13	O ϕ	Indicator outputs	TAPE 1	H
14	O ₁		CD	H
15	O ₂		TUNER	H
16	O ₃		PHONO	H
17	O ₄		TAPE 2	H
18	O ₅		LOUDNESS	H
19	O ₆		MUTING	H
20	O ₇		BARANCE	H
21	V _{SS}	GND		
22	R ϕ	Strobe outputs	TC9162N	L
23	R ₁		TC9177P	L
24	R ₂		PD0012	L
25*	R ₃	REC OUT switch (output switched on)		H
26	R ₄	Auto function input	TAPE 1	L
27	R ₅		CD	L
28	R ₆		TUNER	L
29	R ₇		PHONO	L
30*	R ₈	Output of auto stop signals		H
31	R ₉	Output of turntable remote control signal		L
32	R ϕ	Indicator outputs	VOLUME	H
33	R ₁₁		110W meter range	H
34	R ₁₂	Double cassette deck selector input		L
35	R ₁₃	Indicator output VIDEO/AUX		H
36	R ₁₄	Serial data clock		
37	STBY	Back-up mode starter input		L
38	K ϕ	Key inputs		L
39	K ₁			L
40	K ₂			L
41	K ₃			L
42	VDD	5 V		/

***Pin No. 25.**

The R12 pin is at H level. Pin 25 is switched to L level when TAPE1 function is selected, but is switched to H level in other function positions, and R12 remains at H level.

***Pin No. 30**


Switched to H level for 100msec immediately following function switching.

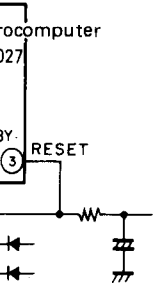

is outlined in

and the Q401 .6V with the .4V, Q401 is s gradually in is differentiat- d by Q403 to

uit to prevent wver is switch- ry from being eration if the in quick suc- microcomputer as been com- (No.37) voltage d on.

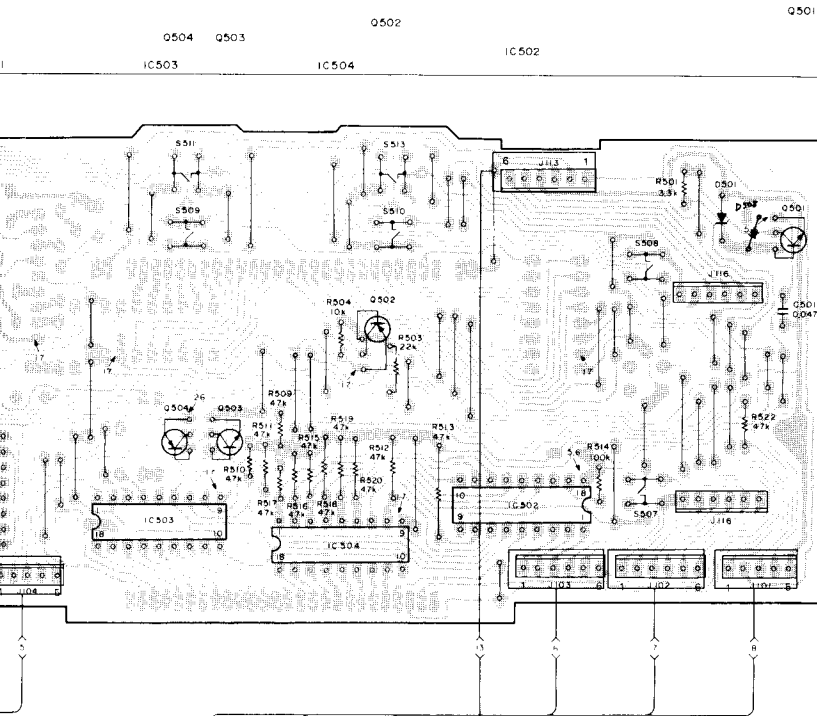



- Q501 : 2SD438
- Q502 : 2SA1115
- Q503 : RN1203
- Q504 : RN2203

- IC201, 202, 601 : NJM4558DXC
- IC501 : TD62504P
- IC502 : PD0012
- IC503, 504 : M54562P

- D501 : KZL061
- D502 : AEL-404
- D503 ~ 507, 702 : AEL-370
- D701 : RD15EB
- D508 : 1SS131
- VR201 : ACX-130
- VR202, 203 : ACX-129
- VR801, 802 : VRT86VS222

- S501 ~ 511, 513 : AS6-704

AF ASSEMBLY
GWK-249

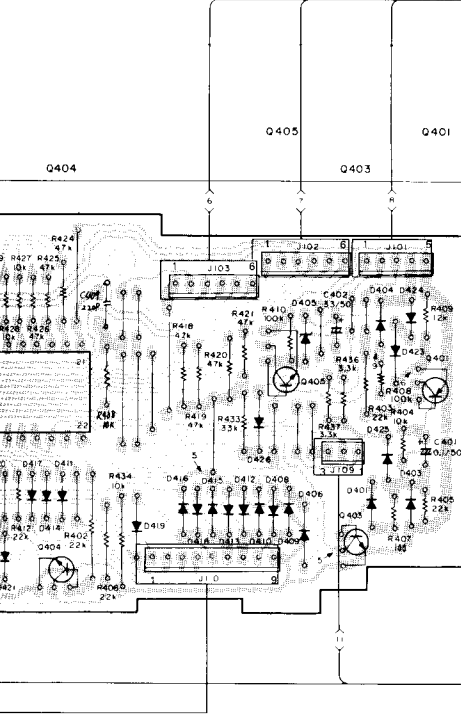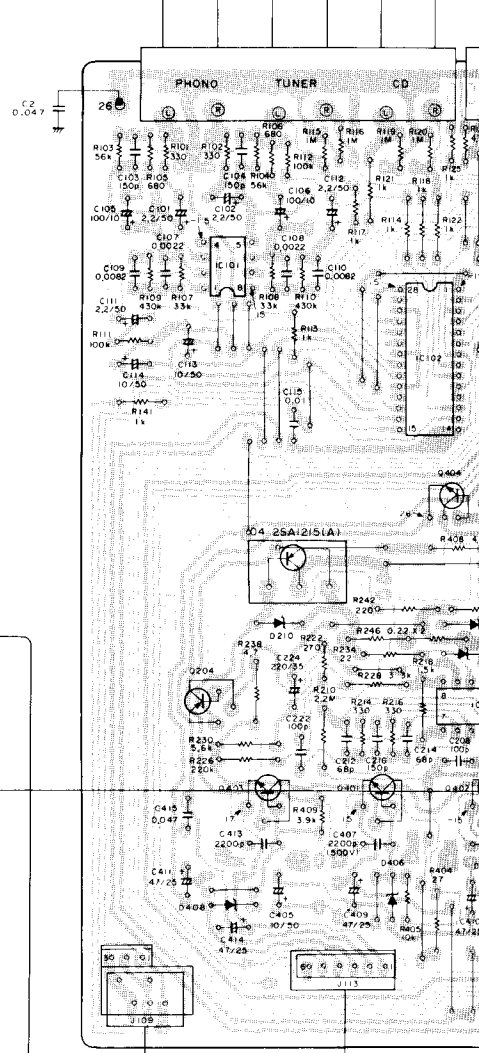

- Q101, 102 : 2SC2878
- Q401 : 2SA9335
- Q402 : RN2203
- Q403, 405 : 2SC1740S
- Q404, 406 : RN1203



- IC101 : TC9177P
- IC401 : PD6027

- D401 : AEL-437
- D403, 404, 406 ~ 426 : US1035
- D405 : KZL083

- Q501, 502 : 2SA979
- Q503 ~ 506 : 2SC1845
- Q507, 508 : 2SA1145


- D501 ~ 506 : US1035

DRIVER ASSEMBLY
GWY-156

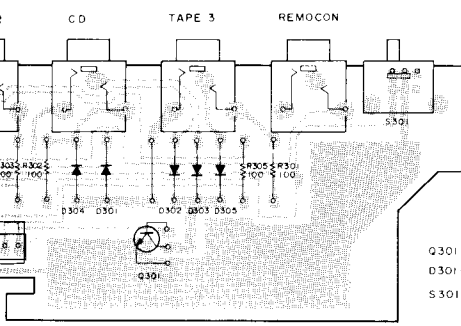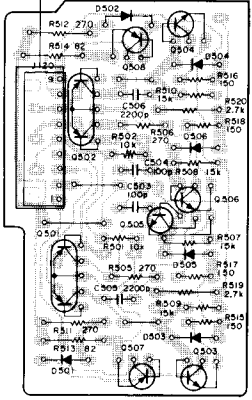


- Q301 : 2SC1740S
- D301 ~ 305 : US1035
- S301 : ASH-031

HEADPHONE ASSEMBLY

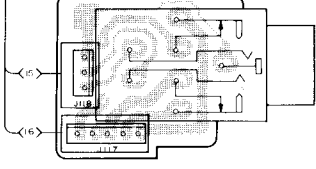


AF ASSEMBLY

GWK-249

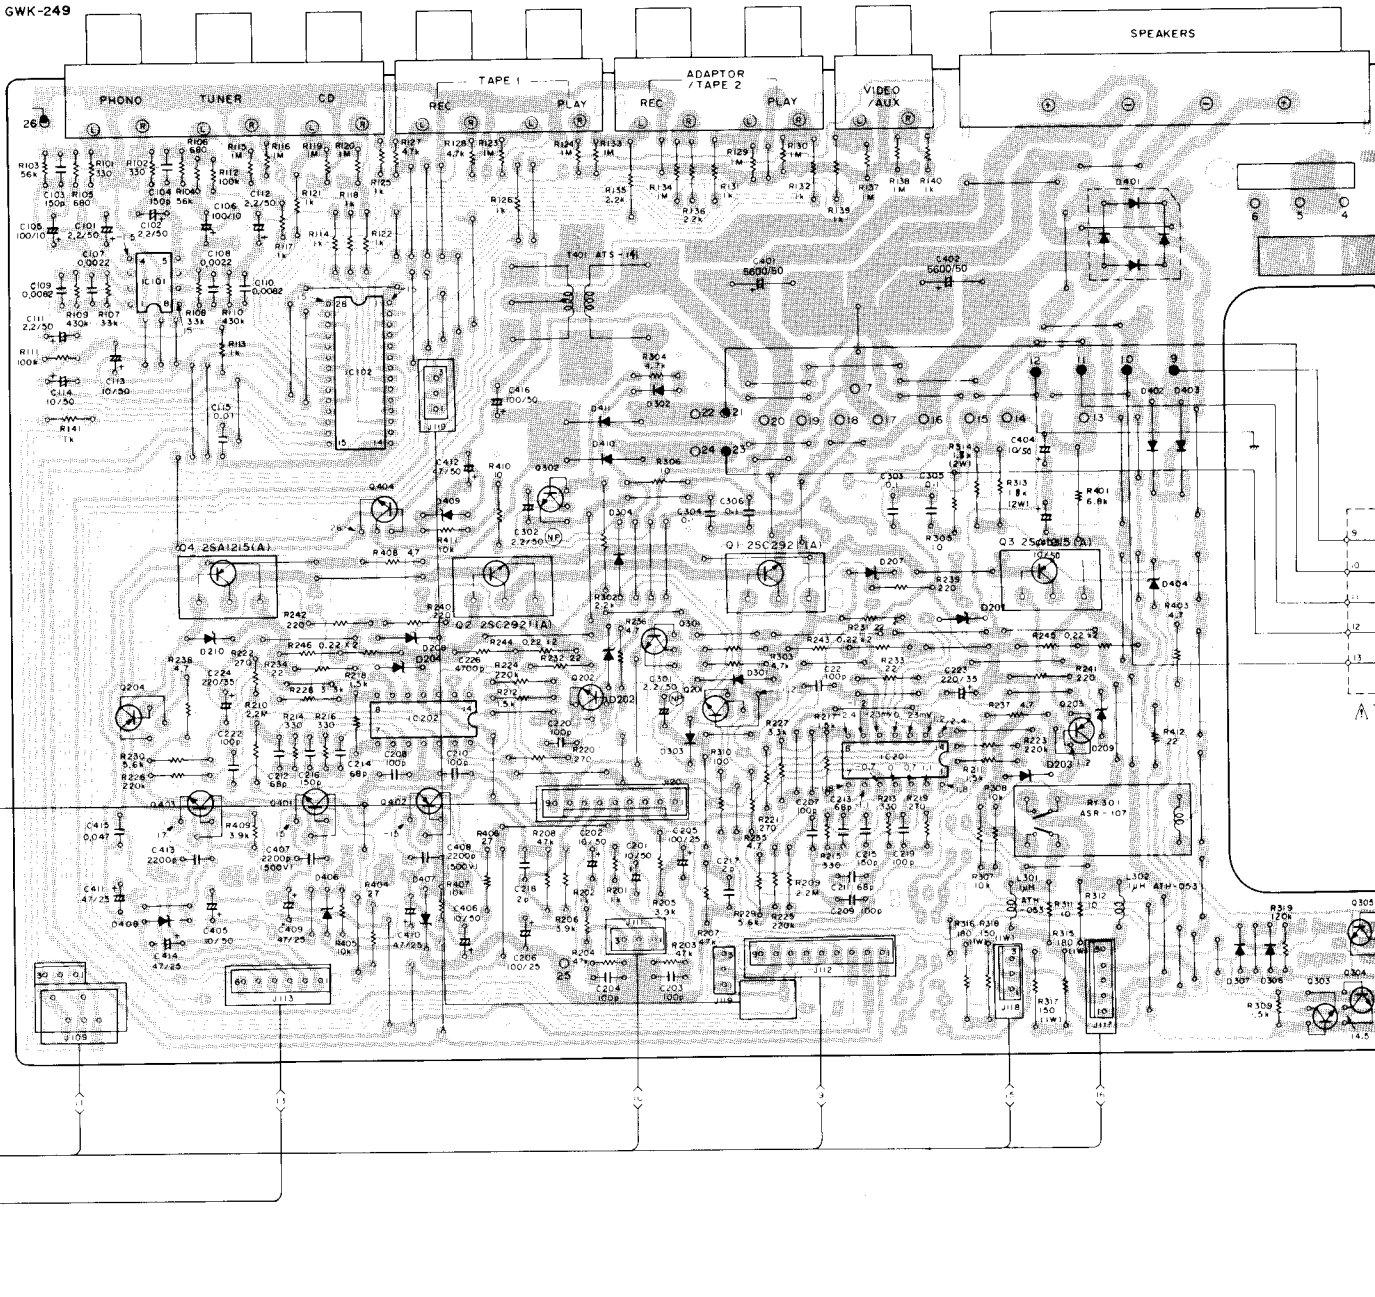


ASSEMBLY

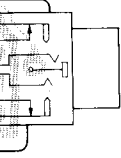


External Appearance of Transistors and ICs


2SA985A
2SC2275A

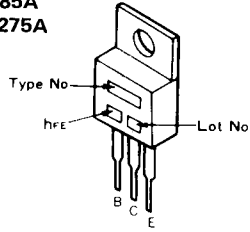


TC9177P

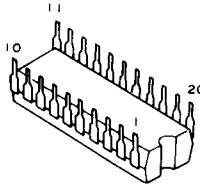

NJM4558DXC
NJM2043DD

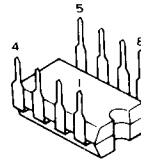


RN1203
RN2203

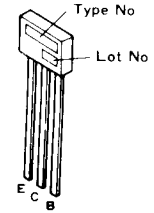


A


2SC2922(A)G/P/Y
2SA1216(A)G/P/Y

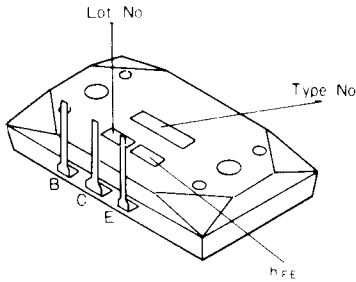

2SA968-O/Y
2SB750A
2SC2238-O/Y
2SD836A

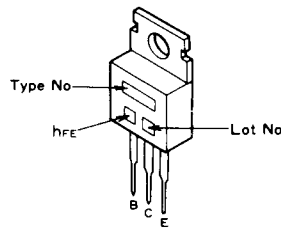


2SC2705
2SA1145
2SC2878

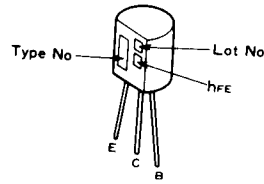

B

2SC1740S
2SA933S




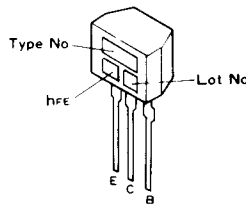


2SC1845

2SD438


2SA979

2SA1115
2SC2603

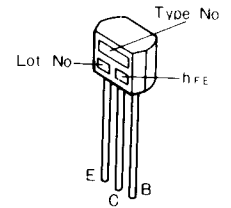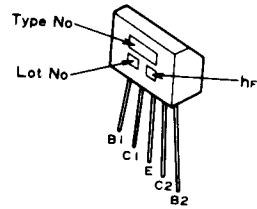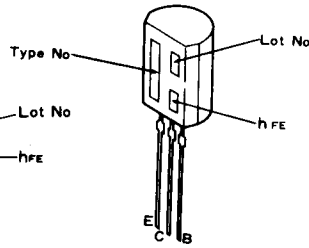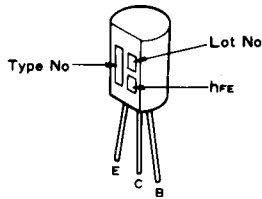


C


TD62504P

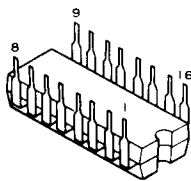


PD0012

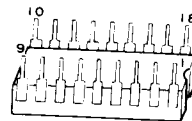


M54562P

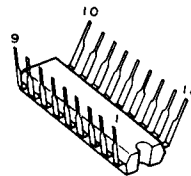


TC9162N




PA0016

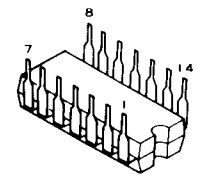

PD6027

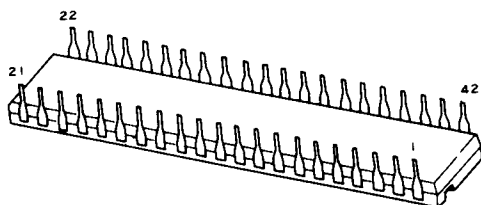


2SD438(A)-F

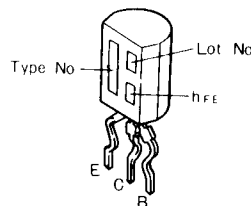


D

9. SCHEMATIC DIAGRAM

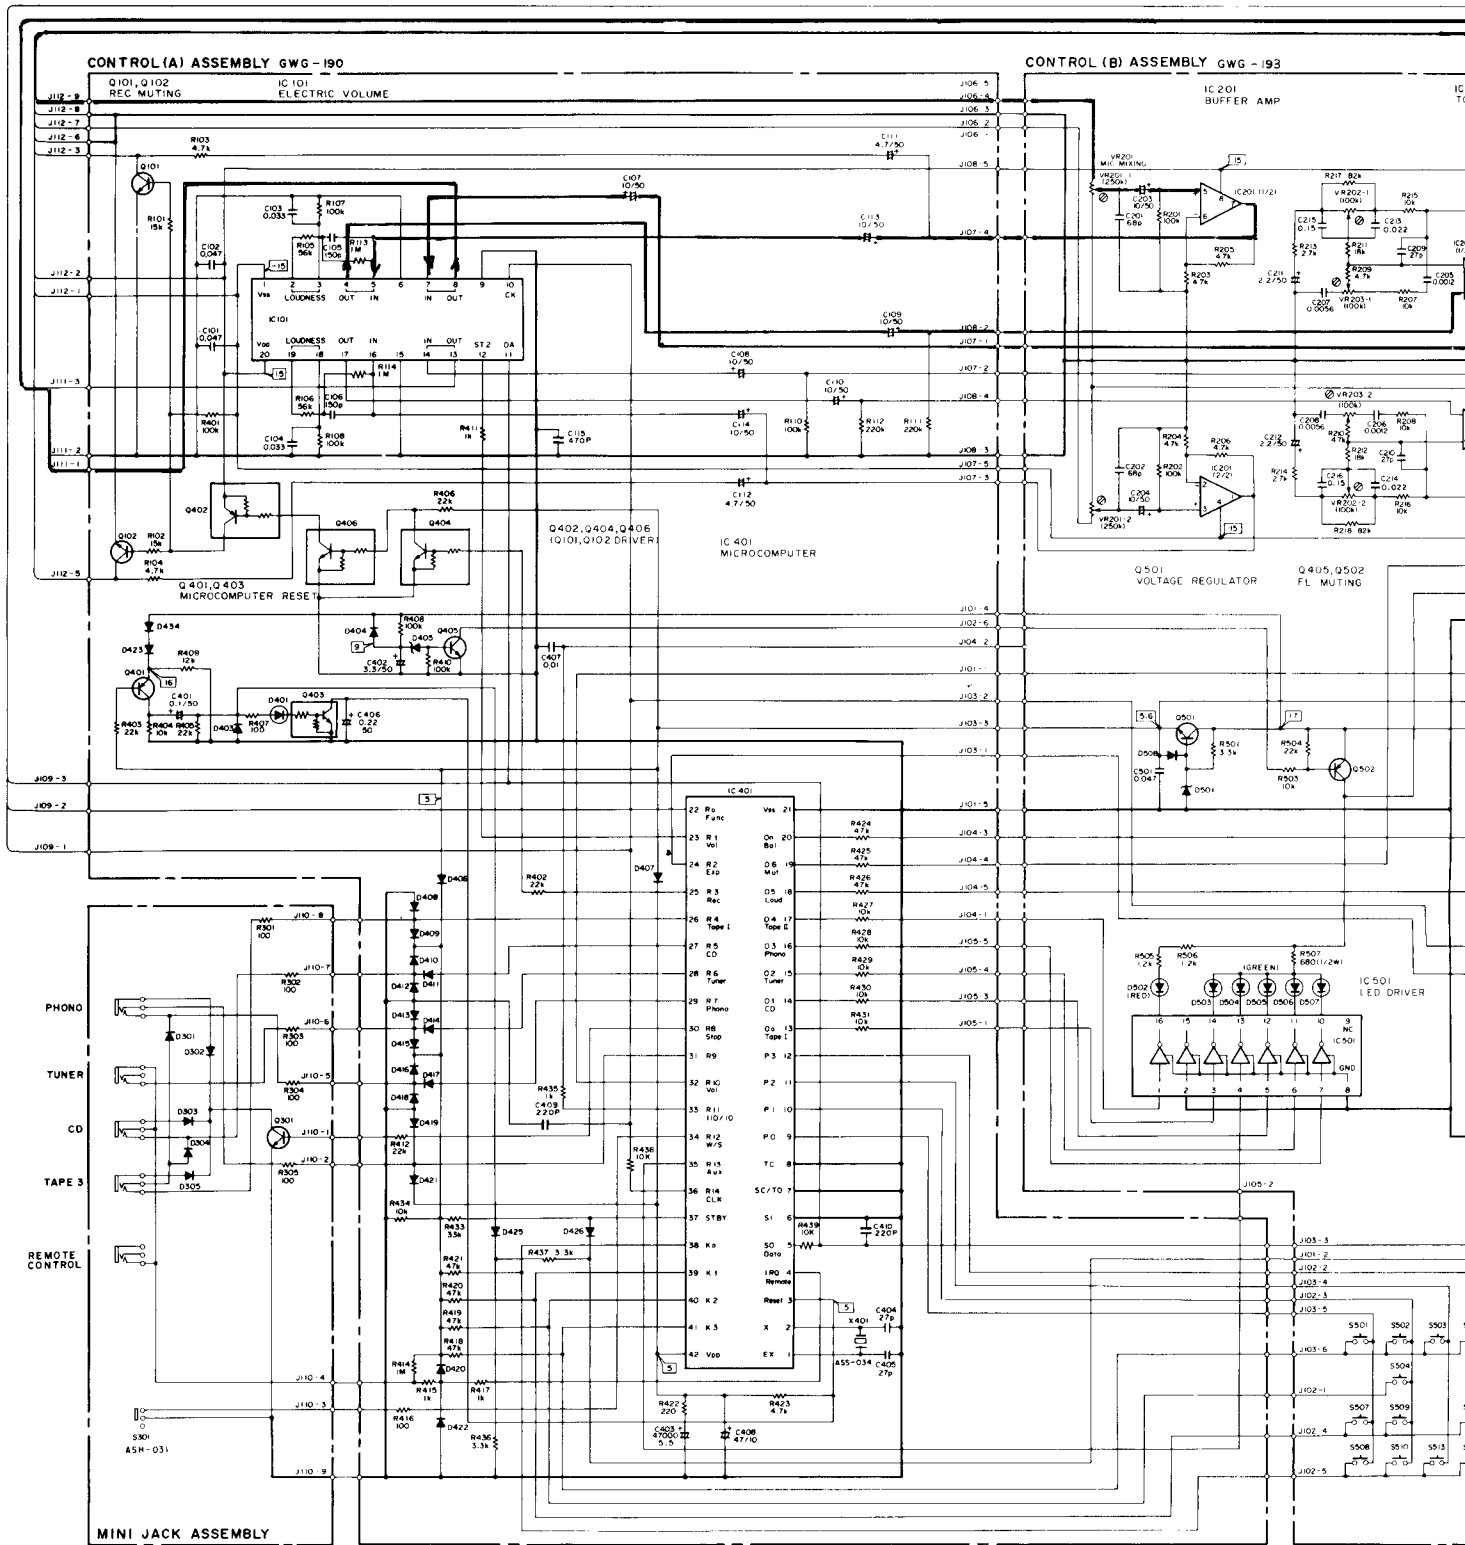



CONTROL (B) ASSEMBLY GWG - 193

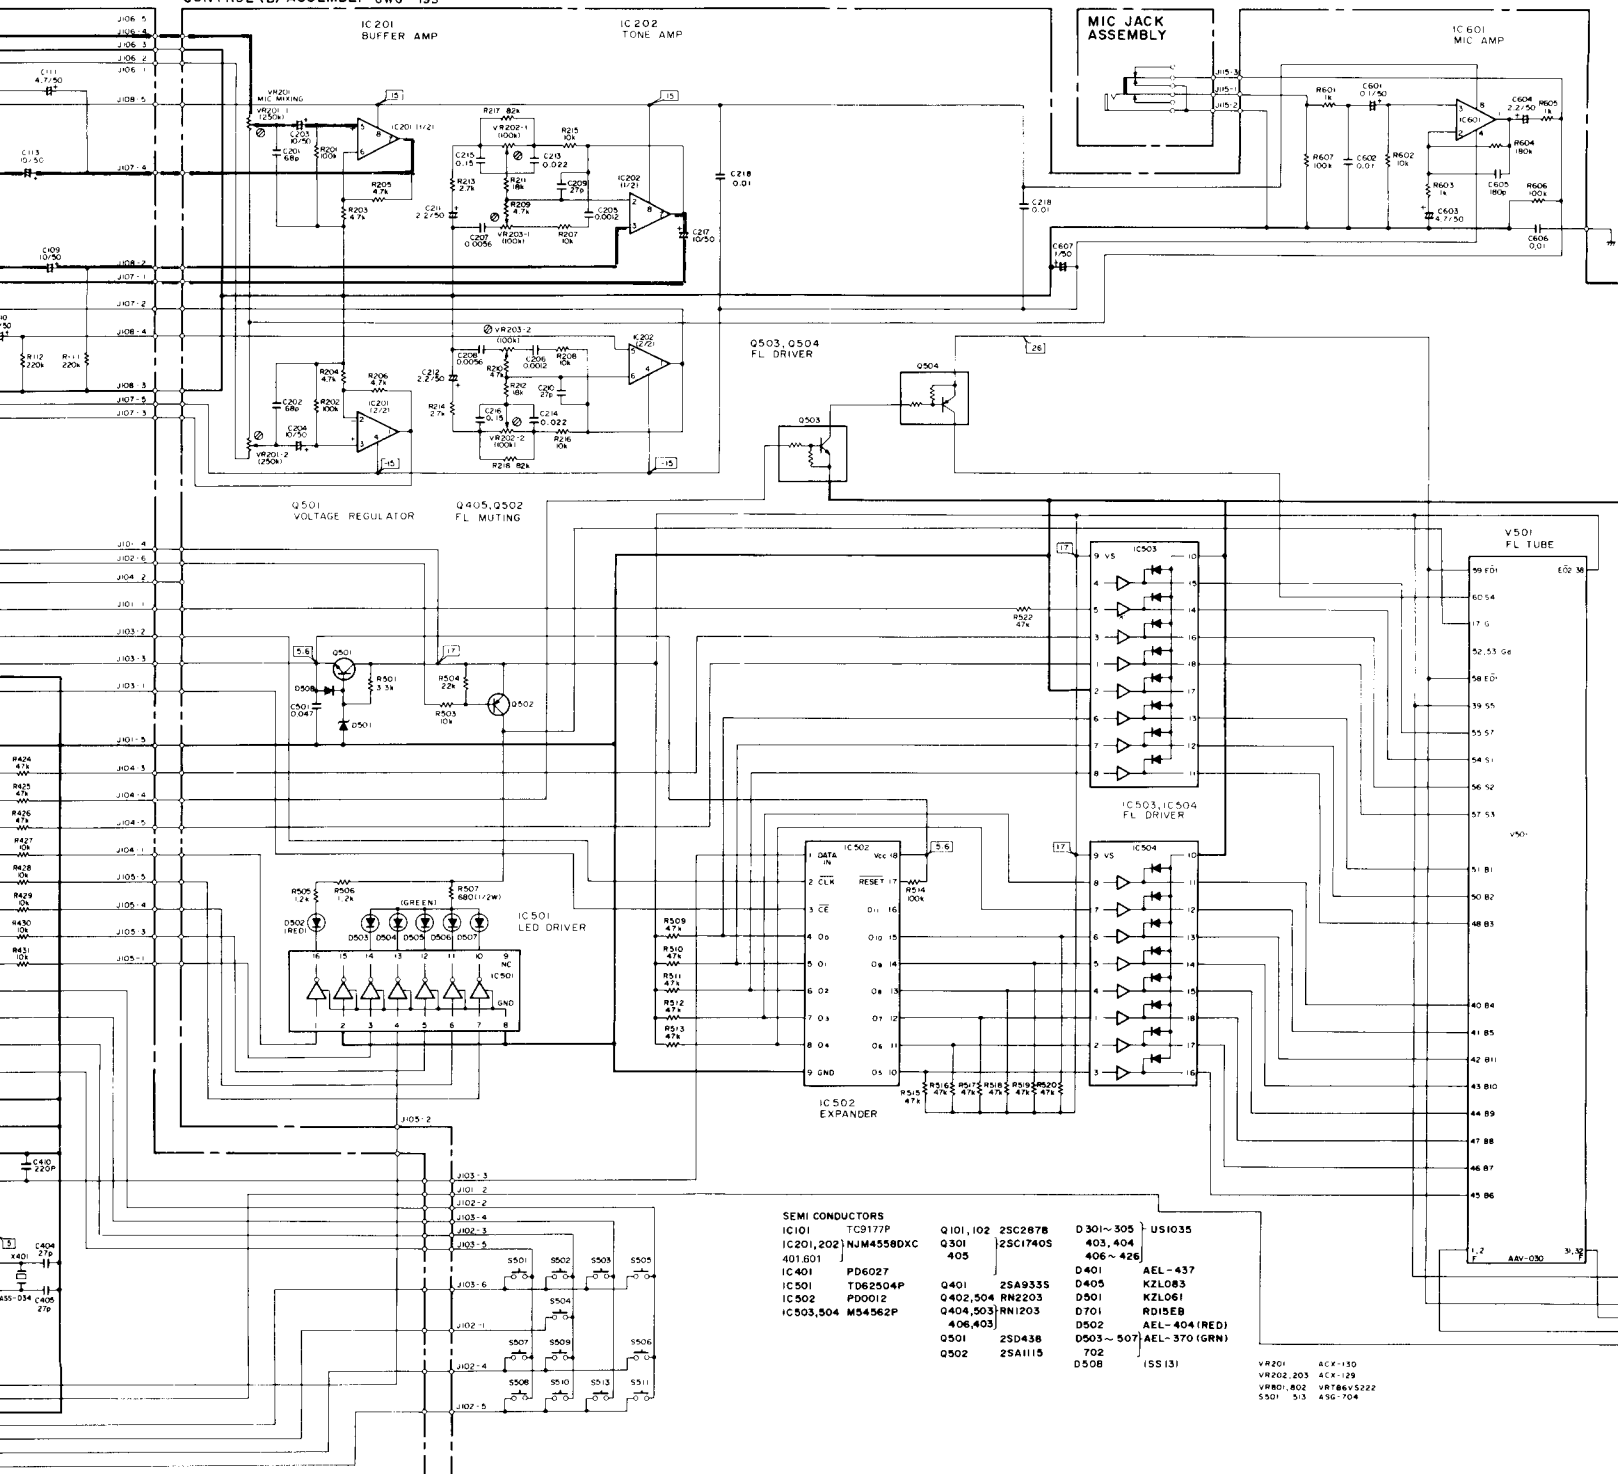


SEMI CONDUCTORS

- | | | | | | |
|------------|------------|-----------|----------|-----------|---------------|
| IC101 | TC9177P | Q101, 102 | 2SC2678 | D 301~305 | US1035 |
| IC201, 202 | NJM4558DXC | Q301 | 2SC1740S | 403, 404 | |
| 401, 601 | | 405 | | 406~426 | |
| IC401 | PD6027 | Q401 | 2SA9335 | D401 | AEL-437 |
| IC501 | TD62504P | Q402, 504 | RN2203 | D405 | KZL083 |
| IC502 | PD0012 | Q404, 503 | RN1203 | D501 | KZL061 |
| IC503, 504 | M54562P | 406, 403 | | D701 | RD15EB |
| | | Q501 | 2SD438 | D502 | AEL-404 (RED) |
| | | Q502 | 2SA1115 | D503~507 | AEL-370 (GRN) |
| | | | | 702 | |
| | | | | D508 | ISS131 |


- VR201 ACK-130
 VR202, 203 ACK-129
 VR801, 802 VR786V5222
 5501 513 456-704

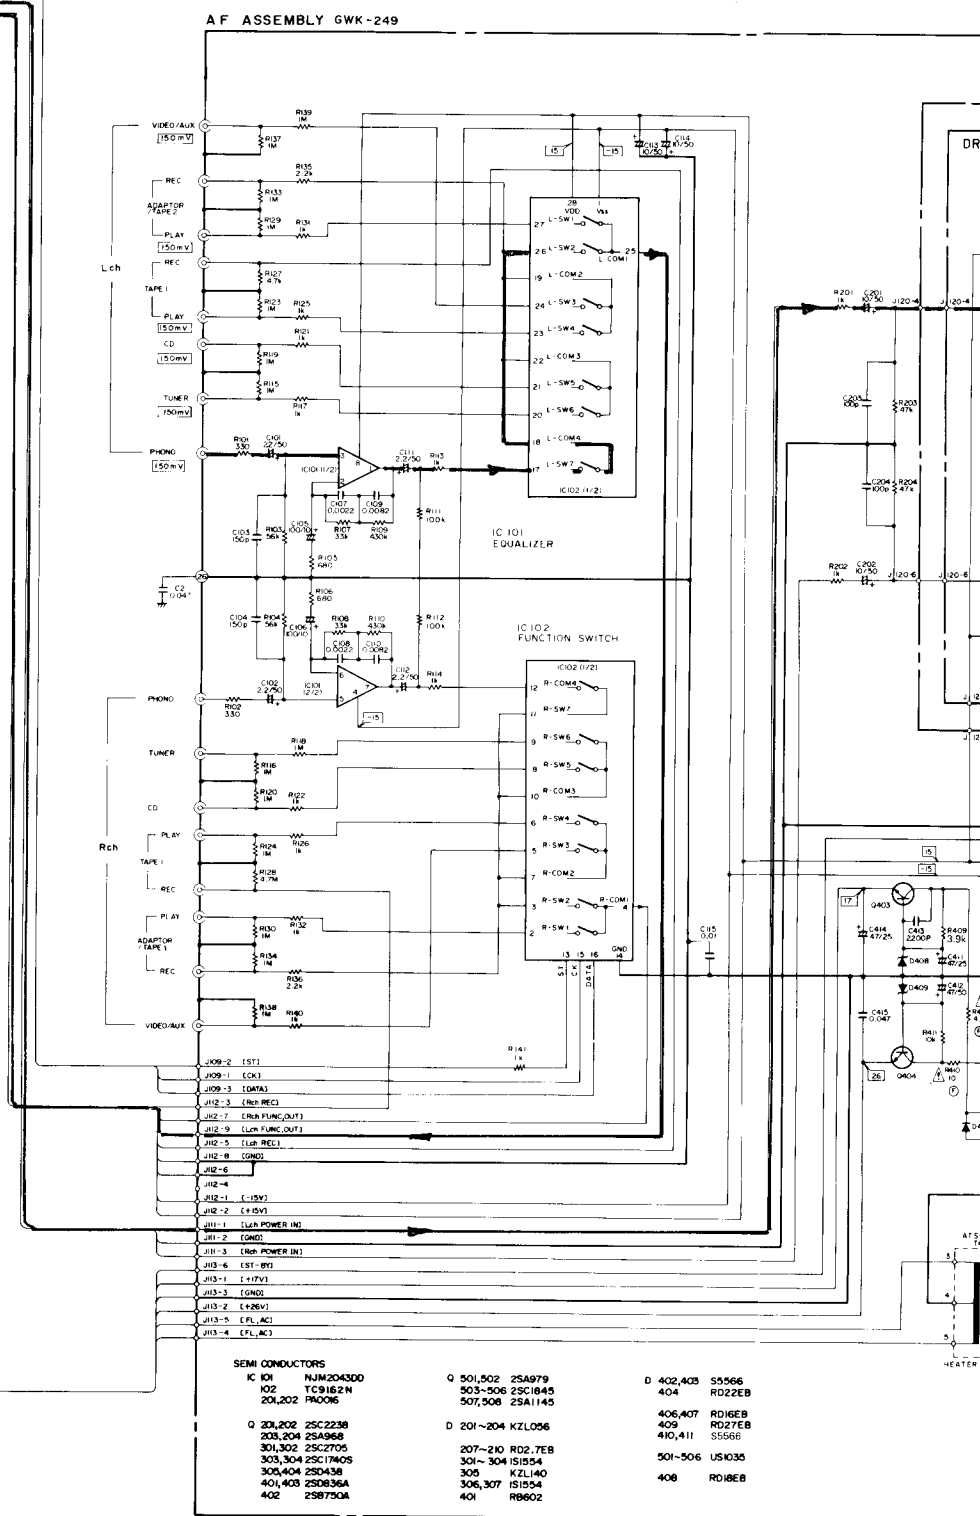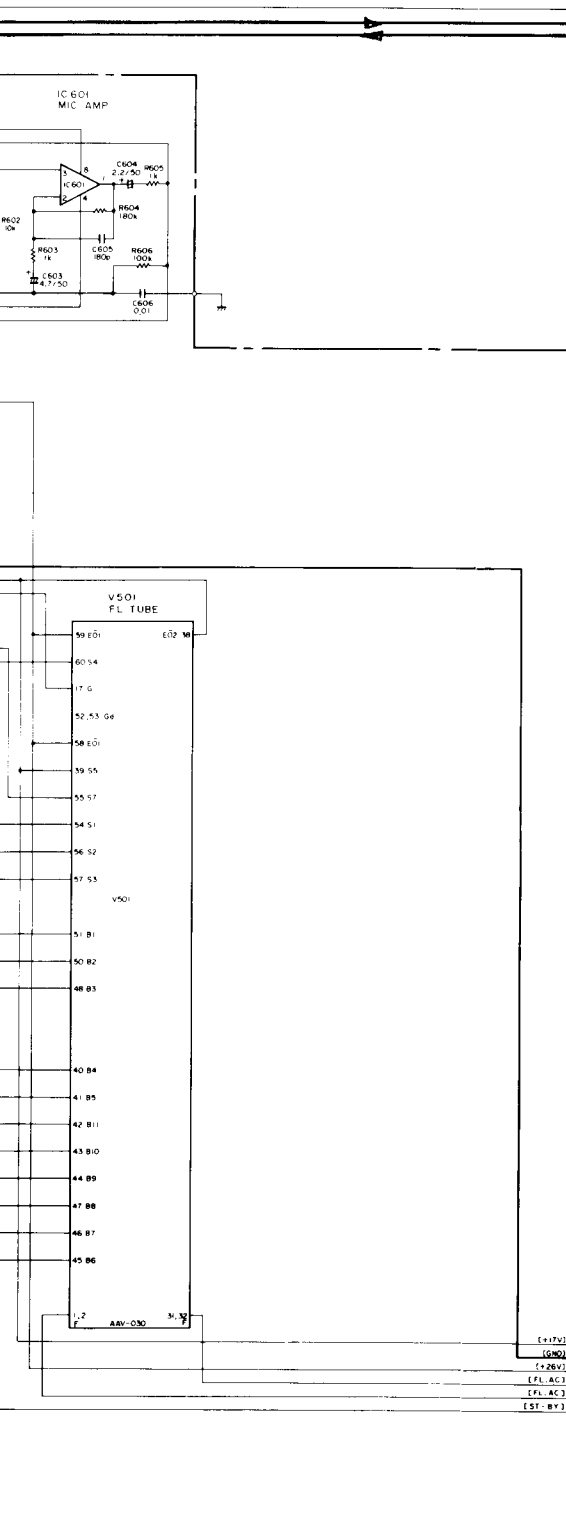

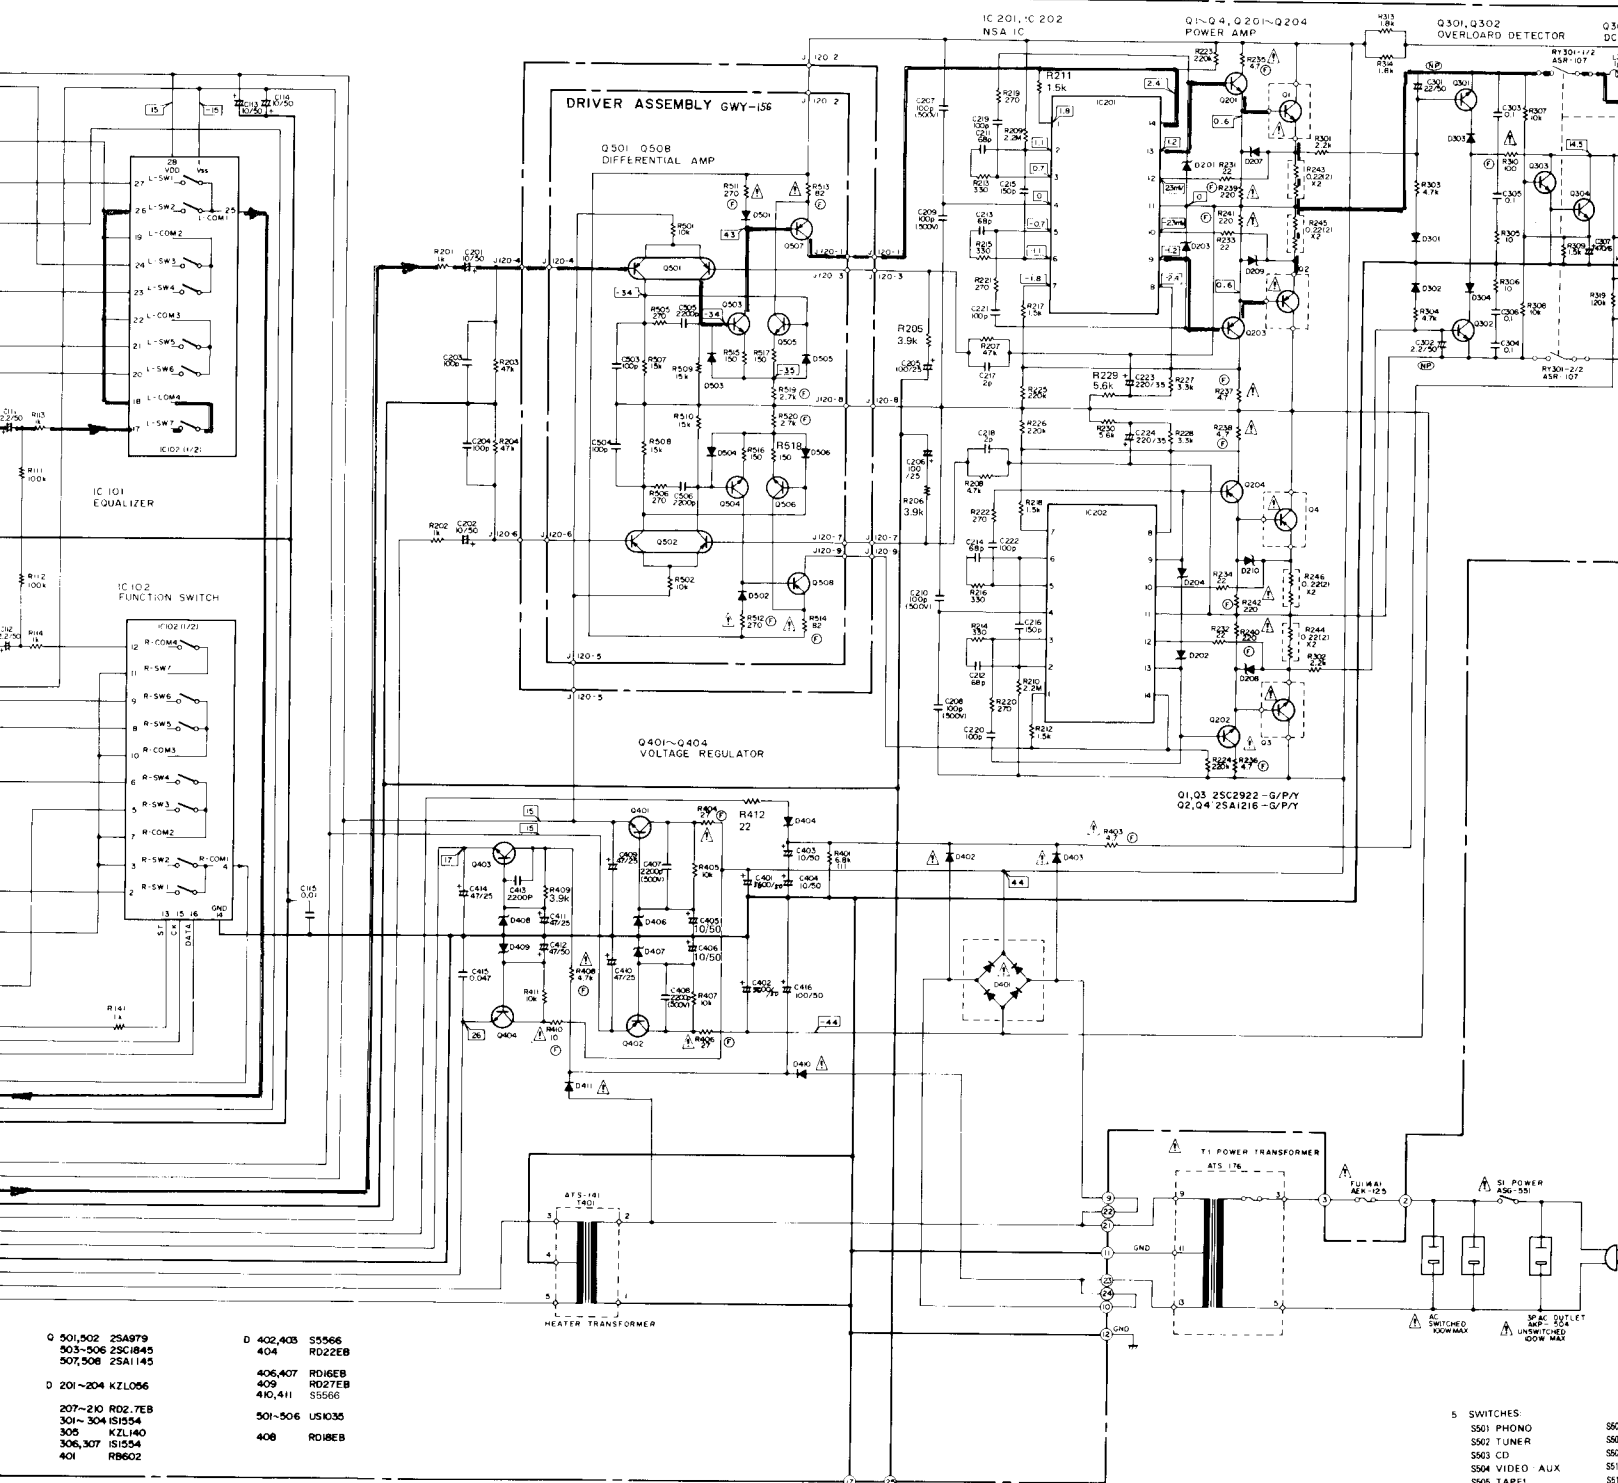

- Q 501,502 2SA979
- 503-506 2SC1845
- 507,508 2SA1145
- D 201~204 KZL056
- 207~210 R02.7EB
- 301~304 IS1554
- 305 KZL140
- 306,307 IS1554
- 401 RB602
- D 402,403 S5566
- 404 RD22EB
- 406,407 RD16EB
- 409 RD27EB
- 410,411 S5566
- 501-506 US1035
- 408 RO16EB

- 5 SWITCHES
- S501 PHONO
- S502 TUNER
- S503 CD
- S504 VIDEO AUX
- S505 TAPE1
- S506 ADAPTOR

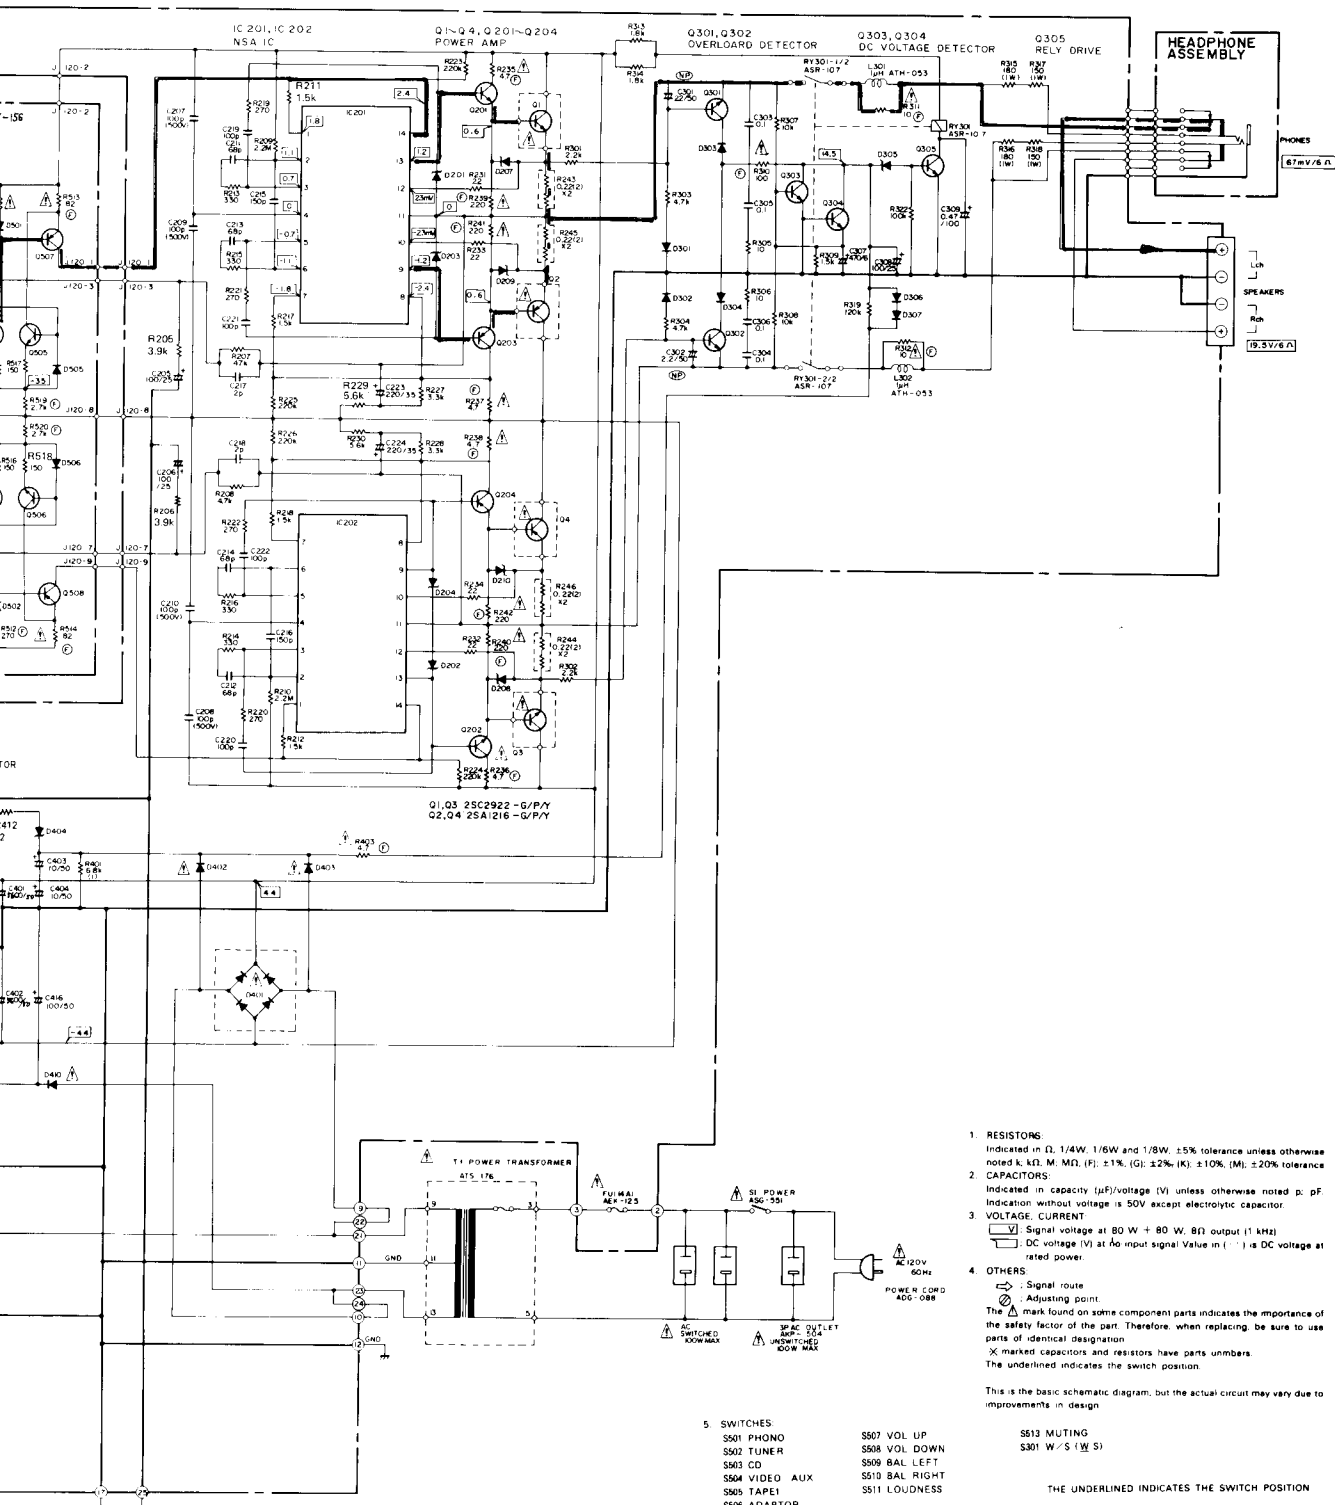

A

B

C

D

1. RESISTORS:
Indicated in \square , 1/4W, 1/8W and 1/8W, $\pm 5\%$ tolerance unless otherwise noted k, M, M Ω , F, $\pm 1\%$, (G), $\pm 2\%$, (K), $\pm 10\%$, (M), $\pm 20\%$ tolerance
 2. CAPACITORS:
Indicated in capacity (μ F)/voltage (V) unless otherwise noted p, pF. Indication without voltage is 50V except electrolytic capacitor.
 3. VOLTAGE, CURRENT:
 \square Signal voltage at 80 W + 80 W, 8 Ω output (1 kHz)
 \square DC voltage (V) at I_0 input signal value in () is DC voltage at rated power.
 4. OTHERS:
 \rightarrow : Signal route
 \circ : Adjusting point.
The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 \times marked capacitors and resistors have parts numbers.
The underlined indicates the switch position.
- This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

5. SWITCHES:
S501 PHONO
S502 TUNER
S503 CD
S504 VIDEO AUX
S505 TAPE1
S506 ADAPTOR
S507 VOL UP
S508 VOL DOWN
S509 BAL LEFT
S510 BAL RIGHT
S511 LOUDNESS
S513 MUTING
S301 W/S (W S)

THE UNDERLINED INDICATES THE SWITCH POSITION

10. ELECTRICAL PARTS LIST

NOTES:


- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω	56 × 10 ¹	561	RD¼PS	561J
47kΩ	47 × 10 ³	473	RD¼PS	473J
0.5Ω	0R5		RN2H	0R5K
1Ω	010		RS1P	010K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ	562 × 10 ¹	5621	RN¼SR	5621F
--------	-----------------------	------	-------	-------

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.



★★ GENERALLY MOVES FASTER THAN ★.

This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

P.C.B. ASSEMBLIES







Mark	Symbol & Description	Part No.
	AF Assembly	GWK-249
	Driver Assembly	GWY-156
	Control Assembly A	GWG-190
	Control Assembly B	GWG-193
	Microphone Jack Assembly	
	Mini-jack Assembly	
	Headphones Assembly	

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
 ★★	Q1, Q3	2SC2922(A)-G/P/Y*
 ★★	Q2, Q4	2SA1216(A)-G/P/Y*

*hfe of Q1-Q4 should have the same value.

OTHERS

Mark	Symbol & Description	Part No.
	C2 Ceramic Capacitor	CKDYF473Z 50
 ★	Power Transformer	ATS-176
	AC socket	AKP-504
 ★★	Push Switch	ASG-551
 ★★	FU1 Fuse (4A)	AEK-125
	AC power cord	ADG-088
	Mica Sheet	AEC-942


AF Assembly (GWK-249)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC101	NJM2043DD
★★	IC201, IC202	PA0016
★★	IC102	TC9162N
★★	Q203, Q204	2SA968-O/Y* (2SA985(A))
★★	Q402	2SB750A
★★	Q303, Q304	2SC1740S (2SC2603)
★★	Q201, Q202	2SC2238-O/Y* (2SC2275A)
★★	Q301, Q302	2SC2705
★★	Q305	2SD438(A)-F
★★	Q404	2SD438
★★	Q401, Q403	2SD836A
★	D201 - D204	KZL056
★	D305	KZL140
★	D401	RB602
★	D406, D407	RD16EB (HZ16EB)
★	D408	RD18EB (HZ18EB)
★	D207 - D210	RD2.7EB (HZ2.7EB)
★	D404	RD22EB (HZ22EB)
★	D409	RD27EB (HZ27EB)
★	D402, D403, D410, D411	S5566 (11E2)
★	D301-D304, D306, D307	1S1554

*hfe of Q201-Q204 should have the same value.

COILS & TRANSFORMERS

Mark	Symbol
 ★	T401

RELAY

Mark	Symbol
	RY301

CAPACITORS

Mark	Symbol
	C401, C203, C207 - C103, C211 -

	C301, C309, C223, C403, C113,
--	-------------------------------

	C105, C308, C416, C111, C409 -
--	--------------------------------






	C412, C307, C101, C205, C407,
--	-------------------------------



	C415, C217, C303, C107, C109,
--	-------------------------------

	C115
--	------

RESISTORS

Note: When ordered into code

Mark	Symbol
	R243
	R404,
	R408
	R311,
	R310

	R239
	R235
	R317,

COILS & TRANSFORMER

Mark	Symbol & Description	Part No.
	L301, L302 (1 μ H)	ATH-053
Δ ★	T401 (Heater transformer)	ATS-141

RELAY

Mark	Symbol & Description	Part No.
	RY301	ASR-107 (ASR-109)

CAPACITORS

Mark	Symbol & Description	Part No.
	C401, C402 (5600/50V)	ACH-244
	C203, C204, C219 – C222	CCDSL 101J 50
	C207 – C210	CCDSL 101K 500
	C103, C104, C215, C216	CCDSL 151J 50
	C211 – C214	CCDSL 680J 50
	C301, C302	CEANP 2R2M 50
	C309	CEAR 47M 100L
	C223, C224	CEAS 221M 35
	C403, C404, C201, C202	CEA 100M 50L
	C113, C114, C405, C406	
	C105, C106	CEA 101M 10L
	C308	CEA 101M 25L
	C416	CEA 101M 50L
	C111, C112	CEA 2R2M 50L
	C409 – C411, C414	CEA 470M 25L
	C412	CEA 470M 50L
	C307	CEA 471M 6L
	C101, C102	CEXA 2R2M 50
	C205, C206	CEXA 101M 25
	C407, C408, C413	CKDYB 222K 50
	C415	CKDYF 473Z 50
	C217, C218	CMA020D 500
	C303 – C306	CQMA 104K 50
	C107, C108	CQMA 222J 50
	C109, C110	CQMA822J 50
	C115	CKDYF 103Z 50

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
Δ	R243 – R246 (0.22 Ω 2W)	ACN-131
Δ	R404, R406	RD1/4PMFL 100J
Δ	R408	RD1/4PMFL 4R7J
Δ	R311, R312, R410	RFA1/4PS100J
Δ	R310	RFA1/4PS101J
Δ	R239 – R242	RFA1/4PS221J
Δ	R235 – R238, R403	RFA1/4PS4R7J
	R317, R318	RS1PMF151J

Mark	Symbol & Description	Part No.
	R315, R316	RS1PMF181J
	R313, R314	RS1PMF182J
	R401	RS1PMF682J
	R205 – R212, R317, R218,	RD1/4PM $\square\square\square$ J
	R227 – R234, R305, R306	
	Resistors other than above.	RD1/8PM $\square\square\square$ J

OTHERS

Mark	Symbol & Description	Part No.
	Terminal 4P (REC. PB)	AKB-094
	Terminal 6P	AKB-095
	Terminal 4P (SPEAKERS)	AKE-104
	Transistor Socket	AKH-017
	Screw	PBZ30P060FMC

Headphone Assembly

Mark	Symbol & Description	Part No.
	Headphone Jack	AKN-049

Driver Assembly (GWY-156)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	Q507, Q508	2SA1145
★★	Q501, Q502	2SA979
★★	Q503 – Q506	2SC1845
★	D501 – D506	US1035

CAPACITORS

Mark	Symbol & Description	Part No.
	C503, C504	CMA 101J 500
	C505, C506	CQMA 222J 50

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
	R519, R520	RD1/4PMFL 272J
	R511, R512	RFA1/4PS 271J
	R513, R514	RFA1/4PS 820J
	Resistors other than above.	RD1/8PM $\square\square\square$ J

OTHERS

Mark	Symbol & Description	Part No.
	9P Socket	AKP-046

Control Asse

SEMICONDU

Mark	Symbol
★★	IC401
★★	IC101
★★	Q404,
★★	Q402
★★	Q401
★★	Q405
★★	Q101,
★	D401
★	D405
★	D403,

CAPACITORS

Mark	Symbol
	C403
	C404,
	C105,
	C406
	C401
	C107-
	C402
	C111,
	C408
	C101,
	C103,
	C404,
	C115

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol
	All resis

OTHERS

Mark	Symbol
	X401 (

Control Asse

SEMICONDU

Mark	Symbol
★★	IC503,
★★	IC201,
★★	IC502
★★	IC501
★★	Q503

Control Assembly (GWG-190)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC401	PD6027
★★	IC101	TC9177P
★★	Q404, Q406, Q403	RN1203
★★	Q402	RN2203
★★	Q401	2SA933S
★★	Q405	2SC1740S
★★	Q101, Q102	2SC2878
★	D401	AEL-437
★	D405	KZL083
★	D403, D404, D406 – D426	US1035 (1S1555)

CAPACITORS

Mark	Symbol & Description	Part No.
	C403	ACH-902
	C404, C405	CCDCH 270J 50
	C105, C106	CCDSL 151J 50
	C406	CEAR 22M 50L
	C401	CEAR 22M 50L
	C107 – C110, C113, C114	CEA 100M 50L
	C402	CEA 3R3M 50L
	C111, C112	CEA 4R7M 50L
	C408	CEA 470M 10L
	C101, C102	CKDYF 473Z 50
	C103, C104	CQMA 333K 50
	C404, C419	CCDSL 221J 50
	C115	CKDYB 471K 50

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
	All resistors	RD1/8PM □□□J

OTHERS

Mark	Symbol & Description	Part No.
	X401 (Resonator)	ASS-034

Control Assembly B (GWG-193)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC503, IC504	M54562P
★★	IC201, IC202, IC601	NJM4558DXC
★★	IC502	PD0012
★★	IC501	TD62504P
★★	Q503	RN1203

Mark	Symbol & Description	Part No.
★★	Q504	RN2203
★★	Q502	2SA1115
★★	Q501	2SD438
★	D503 – D507	AEL-370
★	D502	AEL-404
	D508	1SS131
★	D501	KZL061

SWITCHES

Mark	Symbol & Description	Part No.
★★	S501 – S511, S513 (Tact switch)	ASG-704

CAPACITORS

Mark	Symbol & Description	Part No.
	C209, C210	CCDSL 270J 50
	C201, C202	CCDSL 680J 50
	C601	CEJANL 0R1M 50
	C604	CEJANL 2R2M 50
	C603	CEJANL 4R7M 50
	C607	CEA010M 50L
	C203, C204	CEA 100M 50L
	C218, C605	CKDYF103Z50
	C501	CKDYX473M25
	C205, C206	CQMA122K50
	C215, C216	CQMA154K50
	C213, C214	CQMA223K50
	C602	CQMA393K50
	C207, C208	CQMA562K50
	C211, C212	CEA2R2M50L
	C217	CEA100M50L

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
★	VR202, VR203 (BASS, TREBLE)	ACX-129
★	VR201 (MIC-MIXING)	ACX-130
	R507	RD1/2PM681J
	R502	RFA1/4PS4R7J
	Resistors other than above.	RD1/8PM □□□J

OTHERS

Mark	Symbol & Description	Part No.
★	V501 (Fluorescent tube)	AAV-030

Microphone Jack Assembly

Mark	Symbol & Description	Part No.
	Microphone Jack	AKN-052

Mini-jack A

SEMI-COND

Mark	Sym
★★	Q30
★	D30

SWITCH

Mark	Sym
★★	S30

RESISTORS

Mark	Sym
	R30

OTHERS

Mark	Sym
	Min

Mark	Symbol & Description	Part No.
★★	Q504	RN2203
★★	Q502	2SA1115
★★	Q501	2SD438
★	D503 – D507	AEL-370
★	D502	AEL-404
	D508	1SS131
★	D501	KZL061

SWITCHES

Mark	Symbol & Description	Part No.
★★	S501 – S511, S513 (Tact switch)	ASG-704

CAPACITORS

Mark	Symbol & Description	Part No.
	C209, C210	CCDSL 270J 50
	C201, C202	CCDSL 680J 50
	C601	CEJANL 0R1M 50
	C604	CEJANL 2R2M 50
	C603	CEJANL 4R7M 50
	C607	CEA010M 50L
	C203, C204	CEA 100M 50L
	C218, C605	CKDYF103Z50
	C501	CKDYX473M25
	C205, C206	CQMA122K50
	C215, C216	CQMA154K50
	C213, C214	CQMA223K50
	C602	CQMA393K50
	C207, C208	CQMA562K50
	C211, C212	CEA2R2M50L
	C217	CEA100M50L

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
★	VR202, VR203 (BASS, TREBLE)	ACX-129
★	VR201 (MIC-MIXING)	ACX-130
	R507	RD1/2PM681J
	R502	RFA1/4PS4R7J
	Resistors other than above.	RD1/8PM □□□J

OTHERS

Mark	Symbol & Description	Part No.
★	V501 (Fluorescent tube)	AAV-030

Mini-jack Assembly

SEMI-CONDUCTORS

Mark	Symbol & Description	Part No.
★★	Q301	2SC1740S
★	D301 – D305	US1035

SWITCH

Mark	Symbol & Description	Part No.
★★	S301 Slide switch (W-S)	ASH-031

RESISTORS

Mark	Symbol & Description	Part No.
	R301 – R305	RD1/8 PM101J

OTHERS

Mark	Symbol & Description	Part No.
	Mini-jack	AKN-202

Microphone Jack Assembly

Mark	Symbol & Description	Part No.
	Microphone Jack	AKN-052


1. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

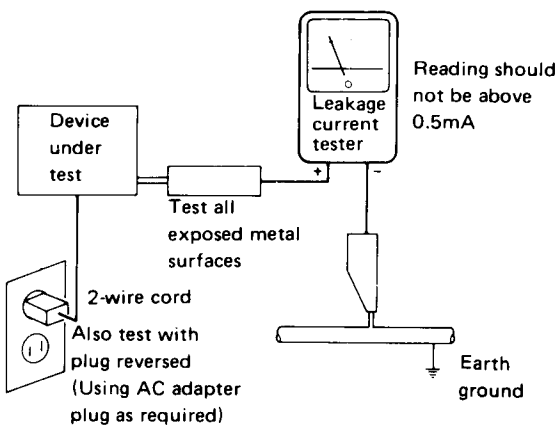

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a \triangle on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

12. FOI

The HE type
Contrast of M

Mark		
\triangle *	T1	
\triangle **	S1	
\triangle **	FU1	
\triangle **	FU2	
\triangle		

AF assembly

The AF assem

Mark	
*	D20
*	D40
*	D41
	C22
	C30
	C40
	C41
	R24
	R24
	R24
	R31
	R31
	R32
	R40
	R40
	R41
	R41
\triangle *	T40

Driver assem

The driver ass
tions.

Mark	
\triangle	R5
	R5
	R5
	R5

12. FOR HE TYPE

The HE type is the same as the KU type with the exception of the following section.

Contrast of Miscellaneous Parts

Mark	Symbol & Description	Part No.		Remarks
		KU type	HE type	
⚠ ★	AF assembly	GWK-249	GWK-251	
	Driver assembly	GWY-156	GWY-194	
⚠ ★	T1 Power transformer (120V)	ATS-176	
	(220 V)	ATS-178	
⚠ ★★	S1 AC Socket	AKP-504	AKP-502	
	Push switch (POWER)	ASG-551 (ASG-549)	ASG-552 (.....)	
⚠ ★★	FU1 (4A)	AEK-125	
	(T2.5A)	AEK-018	
⚠ ★★	FU2 (T1.25A)	AEK-403	
	Power cord	ADG-088	ADG-068	
⚠ ★★	Operating instructions (English)	ARB-647	
	(English/French/German/Italian)	ARE-122	
⚠ ★★	Sub instructions	ARH-070	ARH-071	
	Packing case	AHE-478	AHE-479	

A

—

B

AF assembly (GWK-251)

The AF assembly (GWK-251) is same as the GWK-249 with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		GWK-249	GWK-251	
★	D201 – D204	KZL056	
★	D404	RD22EB	RD18EB	
★	D413 – D415	1SS131	
	C225, C226	CQMA472K50	
	C302	CEANP2R2M50	ACH-383	
	C403, C404	CEA100M50L	ACH-390	
	C412	CEA470M50L	ACH-385	
	R247	RD1/4PM102J	
	R248	RD1/8PM102J	
	R249, R250	RD1/8PM220J	
	R313, R314	RS1PMF182J	RS2LMF122J	
	R319	RD1/8PM124J	RD1/8PM104J	
	R323, R324	RD1/8PM101J	
	R408	RD1/4PMFL4R7J	RFA1/4PS4R7J	
	R404, R406	RD1/4PMFL270J	RD1/4PMFL100J	
	R410	RFA1/4PS100J	RD1/4PM471J	
	R412	RD1/8PM220J	
⚠ ★	T401 Heater transformer	ATS-141	ATS-180	

—

C

—

Driver assembly (GWY-194)

The driver assembly (GWY-194) is the same as the GWY-156 with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		GWY-156	GWY-194	
⚠	R507 – R510	RD1/8PM153J	RD1/8PM223J	
	R519, R520	RD1/4PMFL272J	RS2LMF682J	
	R511, R512	RFA1/4PS271J	RD1/4PM391J	
	R513, R514	RFA1/4PS820J	RD1/4PM820J	

D


Q501, 502 : 25A97
 Q503 ~ 506 : 25C184
 Q507, 508 : 25A114
 Q501 ~ 506 : US1035

P.C. Board Pattern

IC101 IC102
 Q204 Q403 Q401 Q202 Q302 Q301
 Q402 Q202 Q201


AF ASSEMBLY

GWK-251

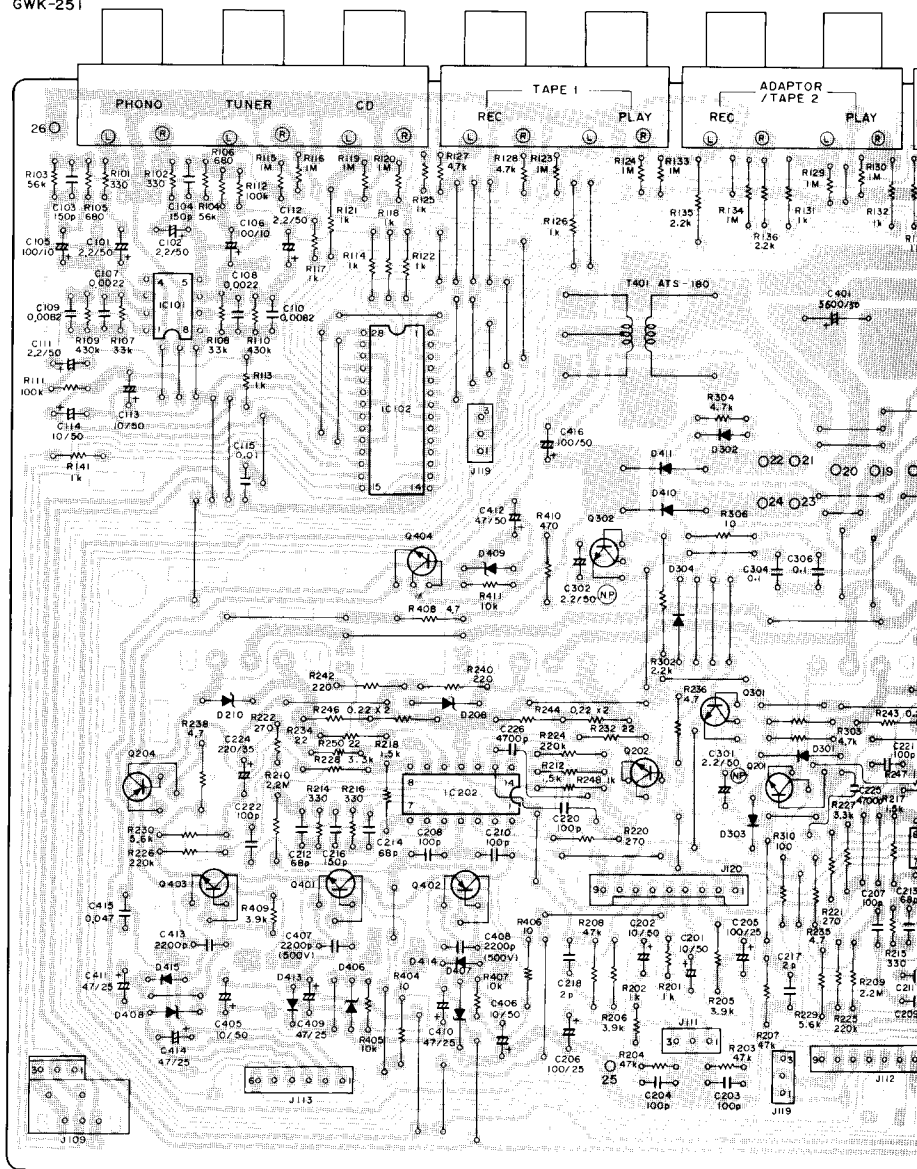

DRIVER ASSEMBLY


GWY-194

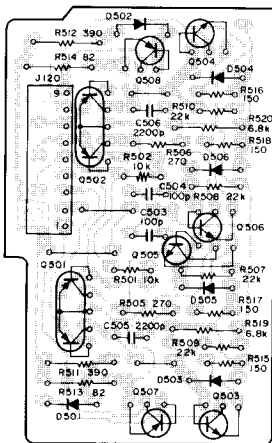


Q501, 502 : 2SA979
 Q503 ~ 506 : 2SC1845
 Q507, 508 : 2SA1145


D501 ~ 506 : US1035

CONTROL (B) ASSEMBLY GWG-193

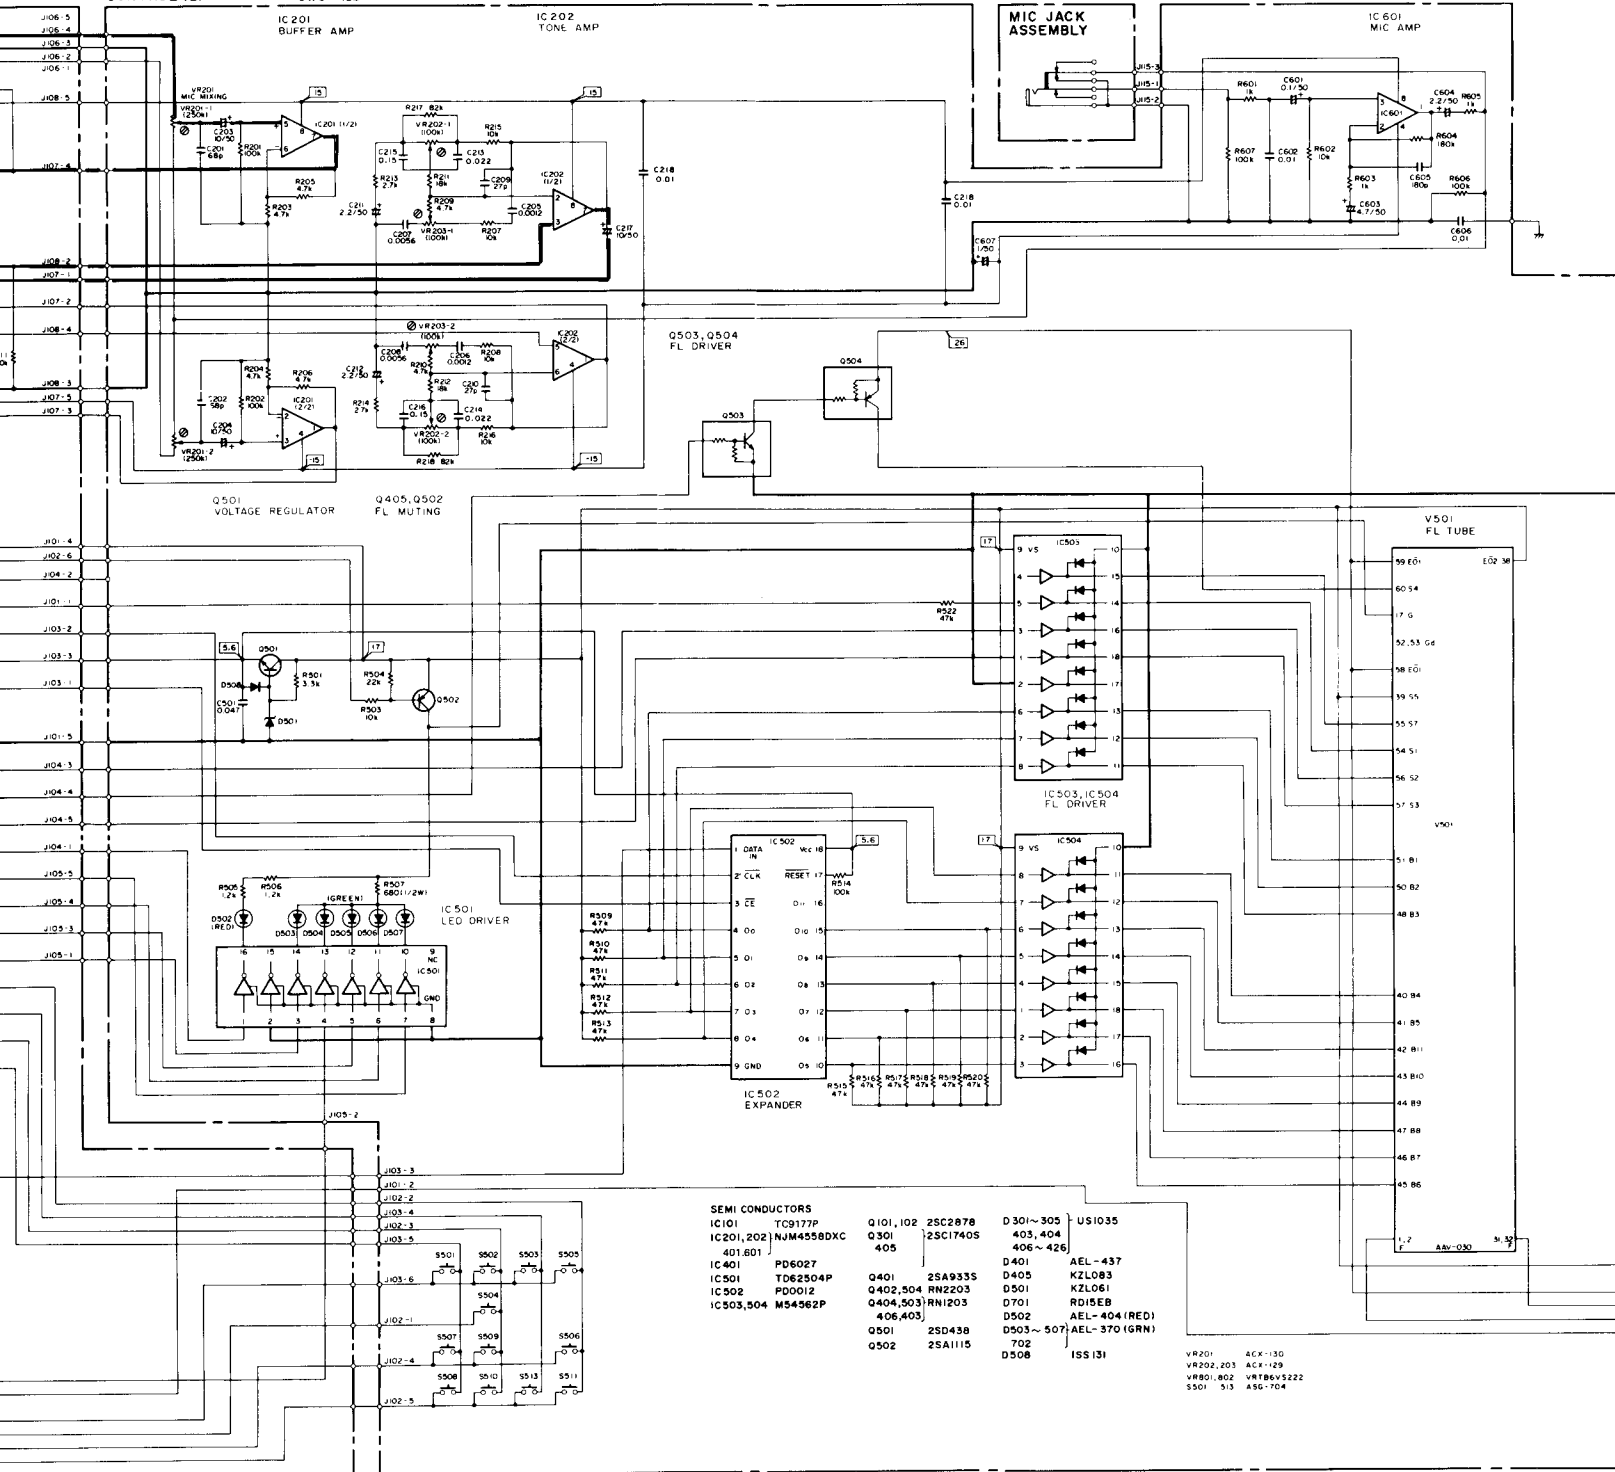


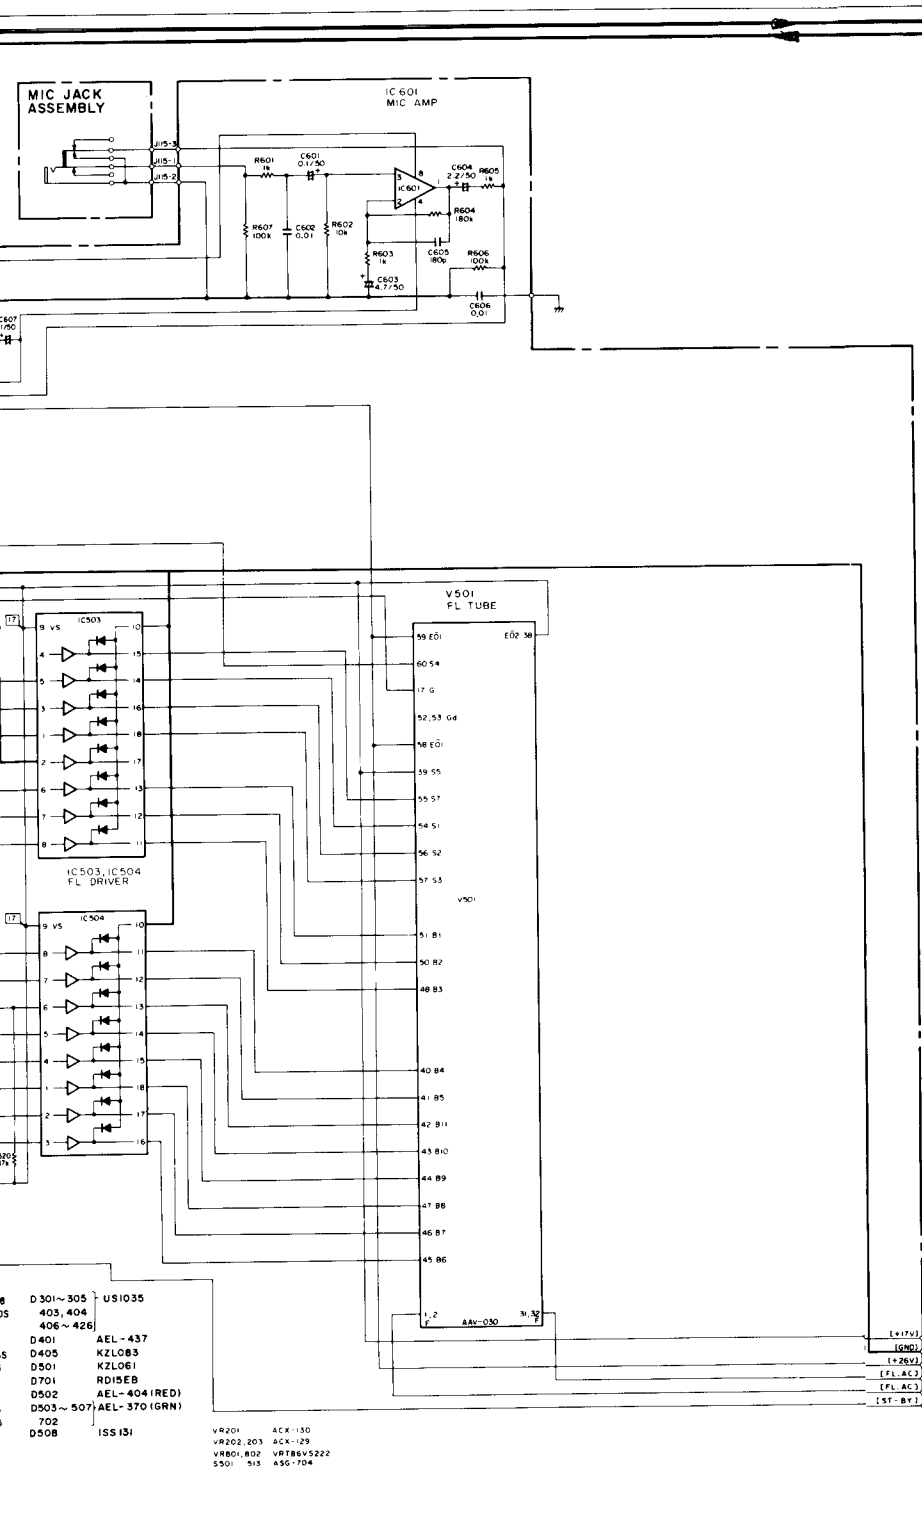

AF ASSEMBLY GWK-251

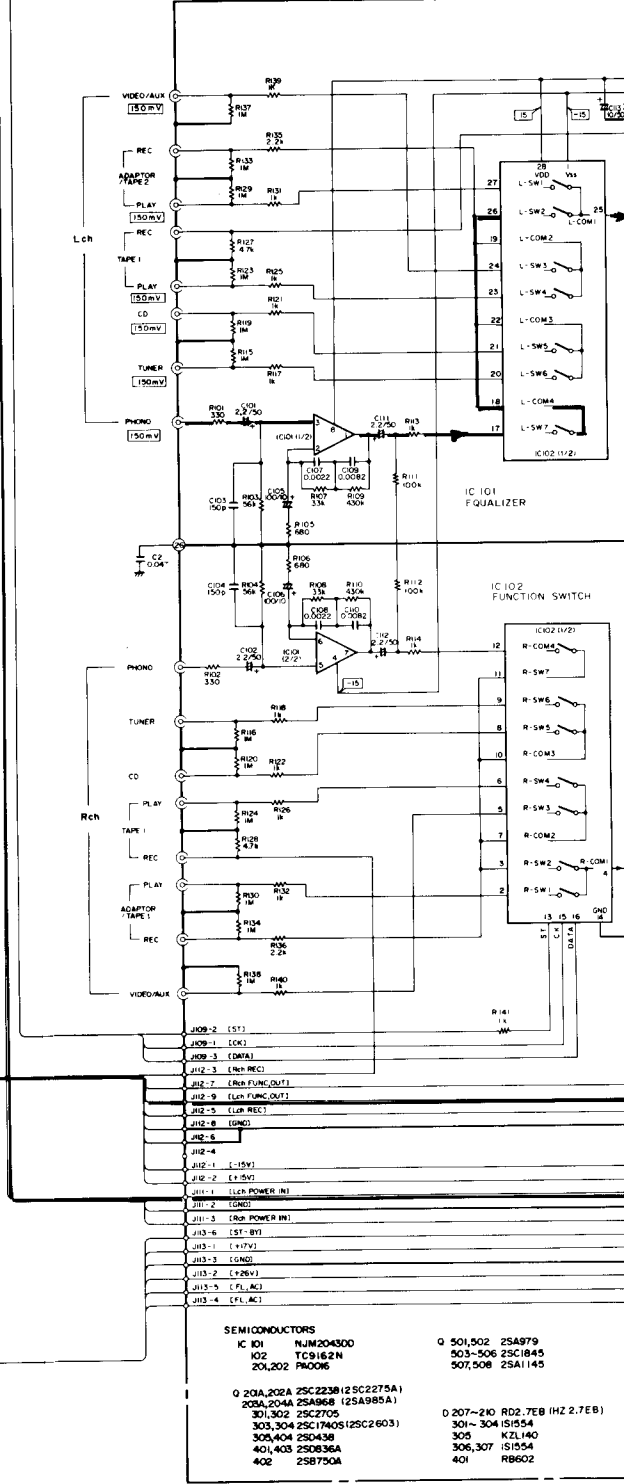


251

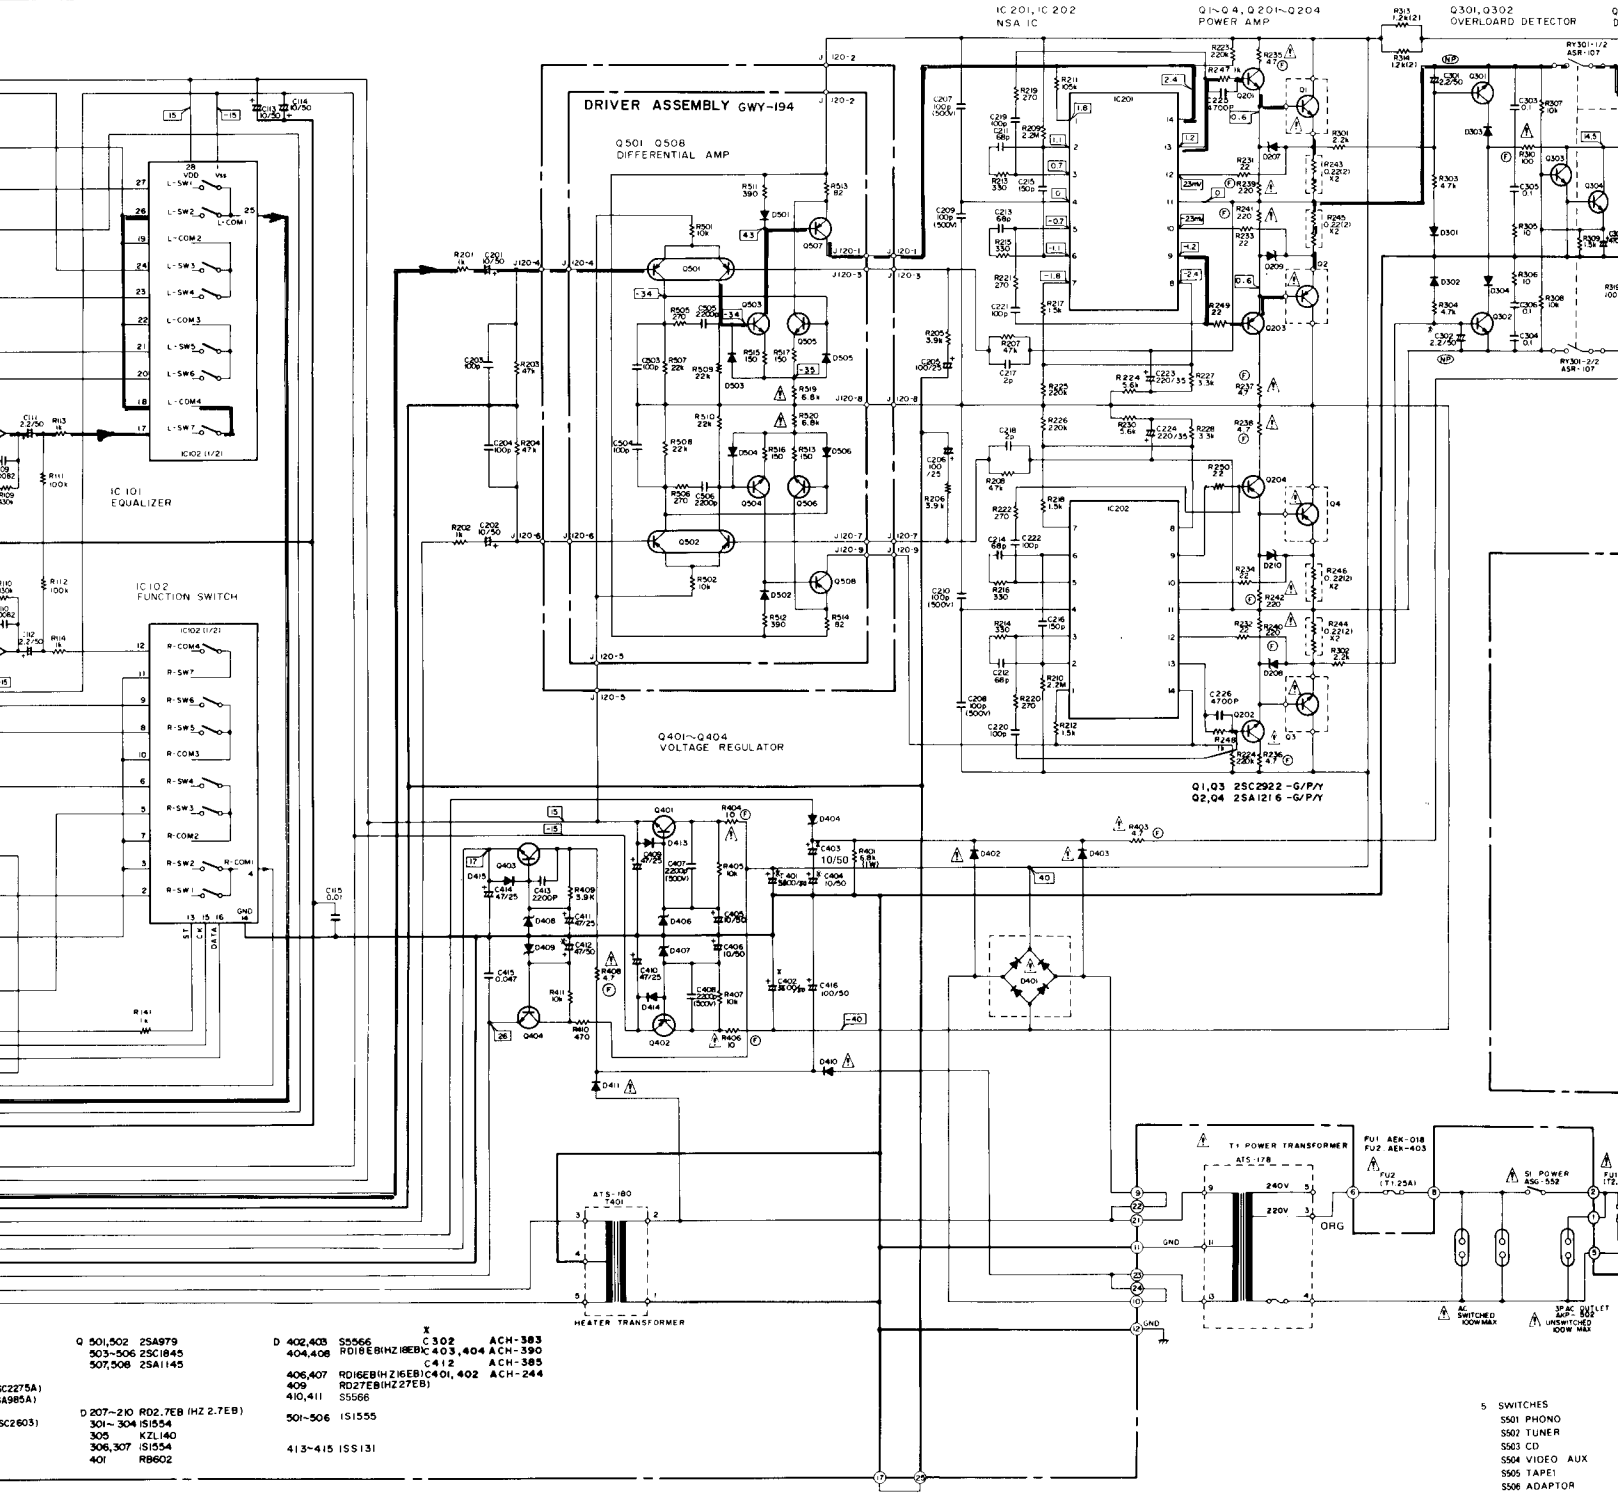

- Q 501,502 2SA979
- 503-506 2SC1845
- 507,508 2SA1145
- SC2275A)
- 1A985A1)
- D 207-210 RD2,7EB (HZ 2.7EB)
- 301-304 IS1554
- 305 KZ140
- 306,307 IS1554
- 401 RB602
- D 402,403 S5566
- 404,408 RD1EB (HZ18EB)C403,404 ACH-390
- 406,407 RD1EB (HZ18EB)C401,402 ACH-244
- 409 RD27EB (HZ27EB)
- 410,411 S5566
- 501-506 IS1555
- 413-415 ISS131
- X C 302 ACH-383
- C 412 ACH-385

- 5 SWITCHES
- S501 PHONO
- S502 TUNER
- S503 CD
- S504 VIDEO AUX
- S505 TAPE1
- S506 ADAPTOR

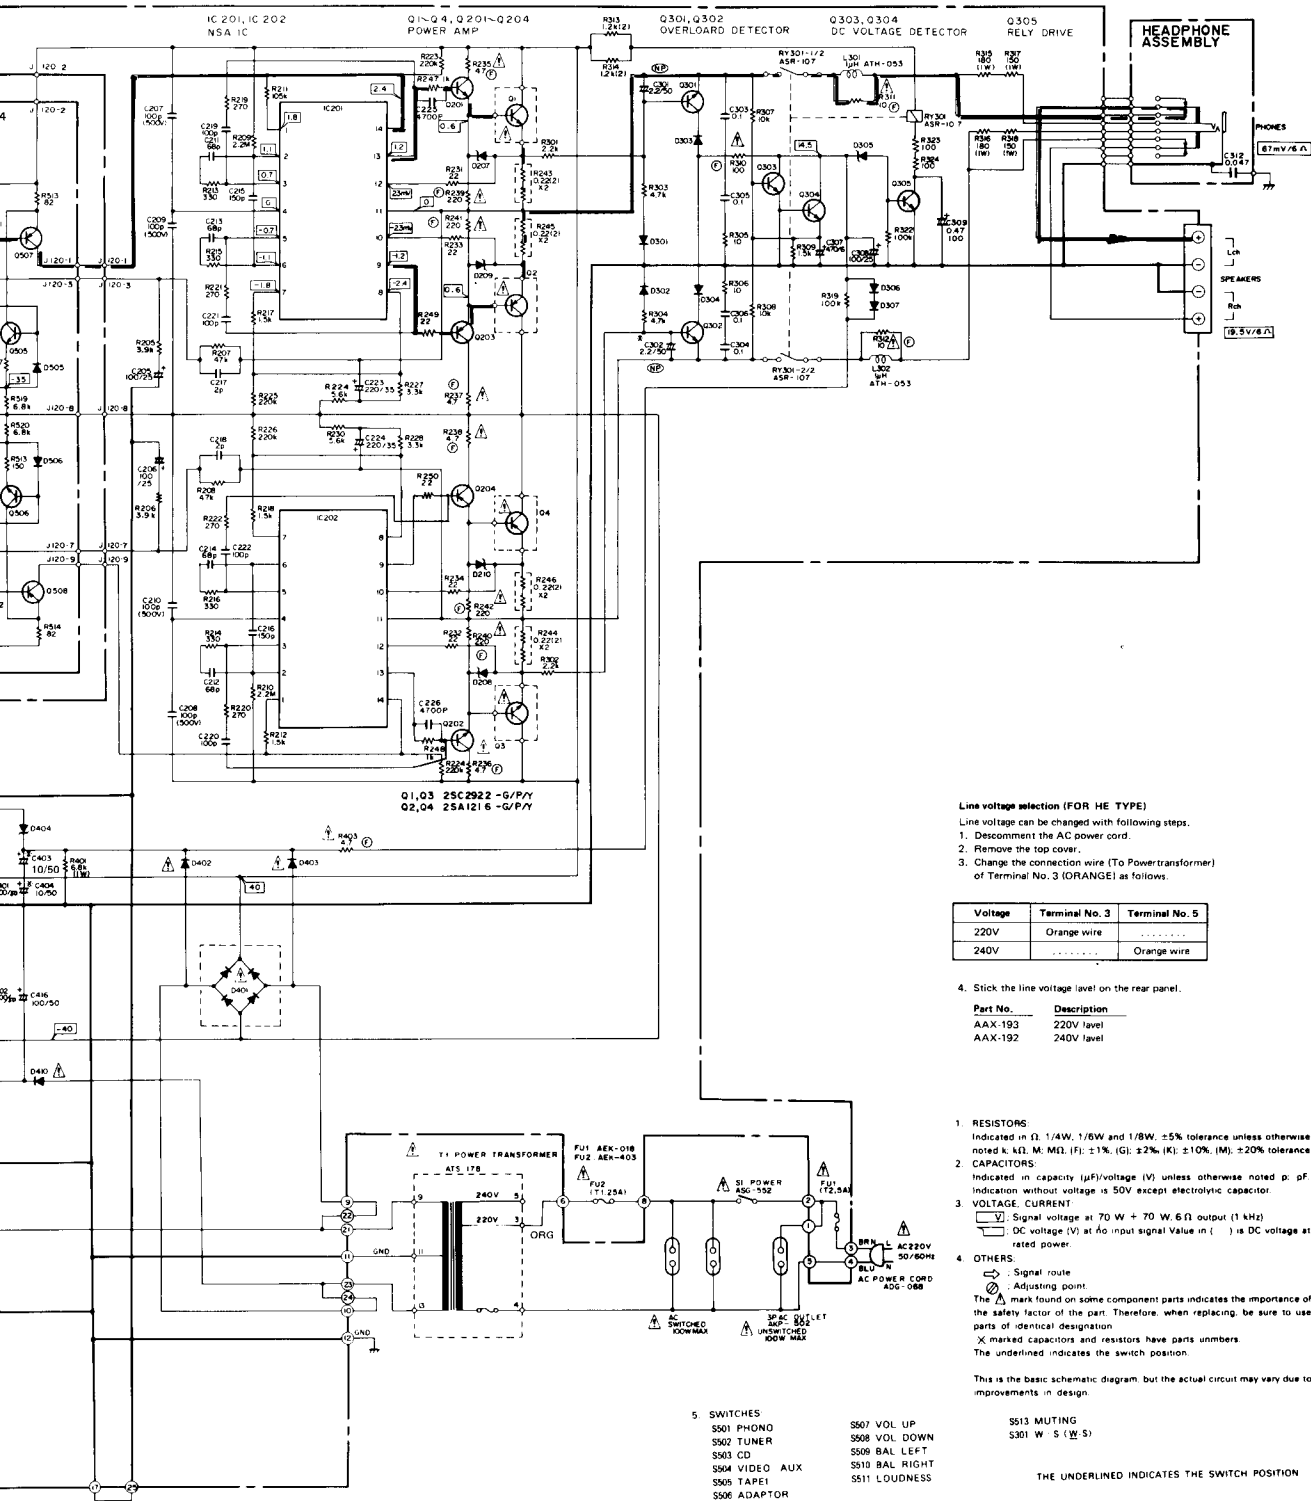

Line voltage selection (FOR HE TYPE)

- Line voltage can be changed with following steps.
1. Disconnect the AC power cord.
 2. Remove the top cover.
 3. Change the connection wire (To Power transformer) of Terminal No. 3 (ORANGE) as follows.

Voltage	Terminal No. 3	Terminal No. 5
220V	Orange wire
240V	Orange wire

4. Stick the line voltage label on the rear panel.

Part No.	Description
AAX-193	220V label
AAX-192	240V label

1. RESISTORS
Indicated in Ω, 1/4W, 1/8W and 1/8W ±5% tolerance unless otherwise noted k, KΩ, M, MΩ, (F) ±1%, (G) ±2%, (K) ±10%, (M) ±20% tolerance
2. CAPACITORS:
Indicated in capacity (μF)/voltage (V) unless otherwise noted p, pF
Indication without voltage is 50V except electrolytic capacitor.
3. VOLTAGE, CURRENT
⊡: Signal voltage at 70 W + 70 W, 6 Ω output (1 kHz)
⊡: DC voltage (V) at A_o input signal value in () is DC voltage at rated power.
4. OTHERS:
⊡: Signal route
⊡: Adjusting point
The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation
X marked capacitors and resistors have parts numbers.
The underlined indicates the switch position.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

5. SWITCHES
S501 PHONO
S502 TUNER
S503 CD
S504 VIDEO AUX
S505 TAPE1
S506 ADAPTOR
S507 VOL UP
S508 VOL DOWN
S509 BAL LEFT
S510 BAL RIGHT
S511 LOUDNESS

THE UNDERLINED INDICATES THE SWITCH POSITION

A

B

C

D


13. FOR S AND S/G TYPES

The S & S/G types are the same as the KU type with the exception of the following section.


Contrast of Miscellaneous Parts

Mark	Symbol & Description	Part No.			Remarks
		KU type	S type	S/G type	
⚠ ★	T1 Power transformer (120V) (110V, 120V, 220V, 240V)	ATS-176	
⚠ ★★	FU1 (4A) (2A)	AEK-125	
⚠ ★★	FU2 (2A)	AEK-122	AEK-122	
⚠ ★★	S2 Line voltage selector	AKX-504	AKX-504	
⚠	AC power cord	ADG-088	ADG-060	ADG-060	
⚠	Screw	VTZ30P100FZK	VTZ30P100FZK	
⚠	Sub instructions	ARH-070	ARH-074	ARH-074	

Schematic Diagram

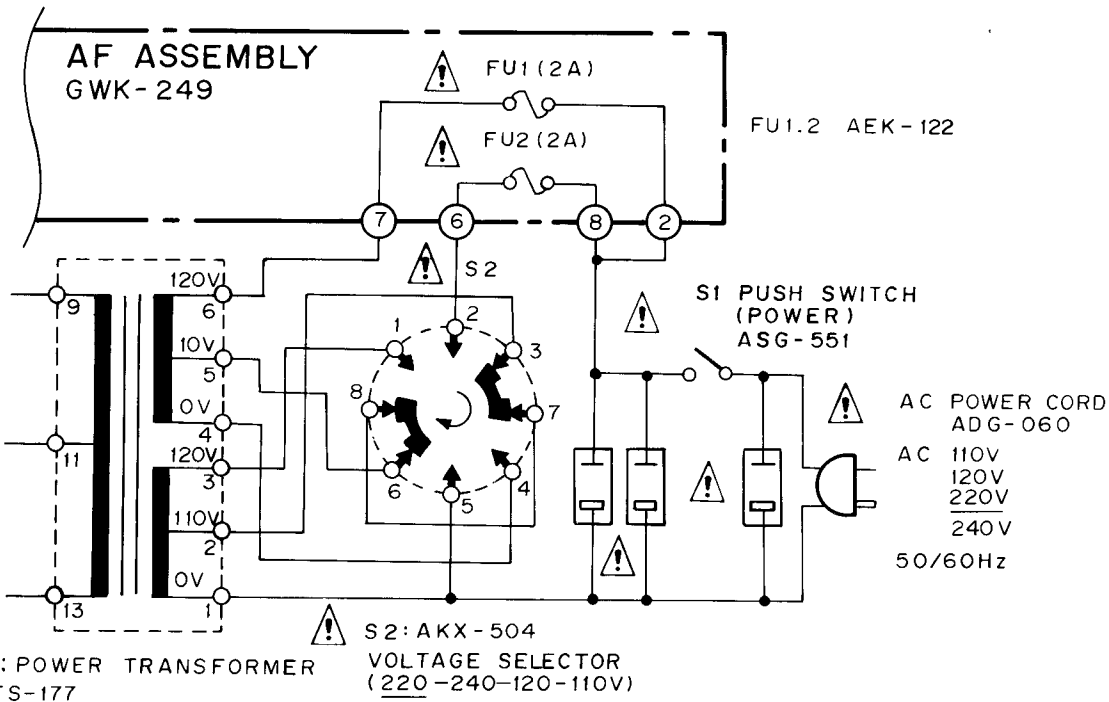

Q201

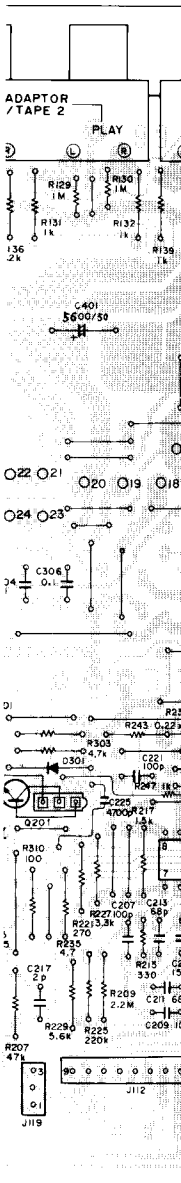

14. FOR HB TYPE

The HB type is the same as the KU type with the exception of the following sections.

Contrast of Miscellaneous Parts

Mark	Symbol & Description	Part No.		Remarks
		KU type	HB type	
	AF assembly	GWK-249	GWK-252	
	Driver assembly	GWY-156	GWY-194	
⚠ **	Q2, Q4	2SA1216-G/P/Y	2SA1216-G	
⚠ **	Q1, Q3	2SC2922-G/P/Y	2SC2922-G	
⚠ *	T1 Power transformer (120V)	ATS-176	
	(240V)	ATS-178	
⚠	AC socket	AKP-504	AKP-505	
⚠ **	S1 Push switch (POWER)	ASG-551 (ASG-549)	ASG-552	
⚠ **	FU1 (4A)	AEK-125	
	(T2.5A)	AEK-018	
⚠ **	FU2 (T1.25A)	AEK-403	
⚠	Power cord	ADG-088	ADG-063	

AF assembly

The AF assembly (GWK-252) is the same as the GWK-249 with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		GWK-249	GWK-252	
**	Q201, Q202	2SC2238	2SC2235	
**	Q203, Q204	2SA968	2SA965 (A)	
*	D201 - D204	KZL056	
*	D404	RD22EB	RD18EB	
*	D413 - D415	1SS131	
	C225, C226	CQMA472K50	
	C302	CEANP2R2M50	ACH-383	
	C403, C404	CEA100M50L	ACH-390	
	C412	CEA470M50L	ACH-385	
	R247	RD1/4PM102J	
	R248	RD1/8PM102J	
	R249, R250	RD1/8PM220J	
	R313, R314	RS1PMF182J	RS2LMF122J	
	R319	RD1/8PM124J	RD1/8PM104J	
	R323, R324	RD1/8PM101J	
	R404, R406	RD1/4PMFL270J	RD1/4PMFL100J	
	R408	RD1/4PMFL4R7J	RFA1/4PS4R7J	
	R410	RFA1/4PS100J	RD1/4PM471J	
	R412	RD1/8PM220J	
⚠ *	T401 Heater transformer	ATS-141	ATS-180	

Driver assembly (GWY-194)

The driver assembly (GWY-194) is the same as the GWY-156 with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		GWY-156	GWY-194	
⚠	R507 - R510	RD1/8PM 153J	RD1/8PM 223J	
	R519, R520	RD1/4PMFL272J	RS2LMF682J	
	R511, R512	RFA1/4PS271J	RD1/4PM391J	
	R513, R514	RFA1/4PS820J	RD1/4PM820J	

Q501, 502 : 2SA979

Q503 ~ 506 : 2SC1845

Q507, 508 : 2SA1145


D501 ~ 506 : US1035

P.C. Board Pattern


IC102
 Q204 IC101 Q403 Q401 IC202 Q302 Q301
 Q402 Q202 Q201

AF ASSEMBLY

GWK-252

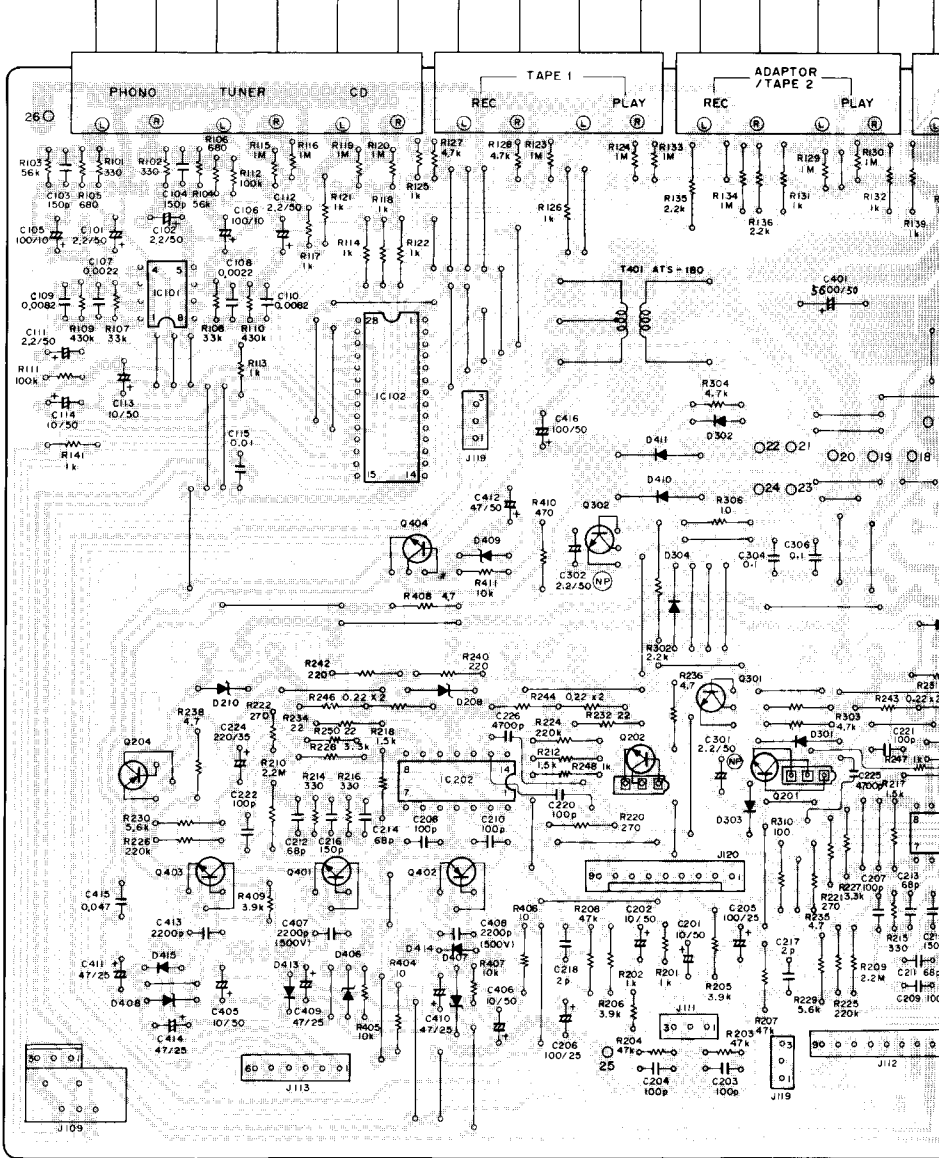


DRIVER ASSEMBLY GWY-194

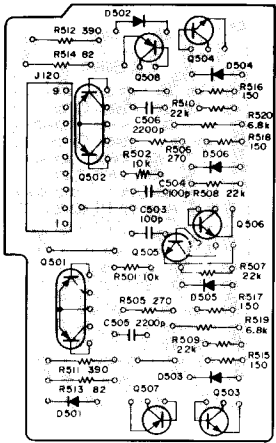

- Q501, 502 : 2SA979
- Q503 ~ 506 : 2SC1845
- Q507, 508 : 2SA1145
- D501 ~ 506 : US1035

Q302 Q301 Q202 Q201 IC201 Q203 Q305 Q303 Q304

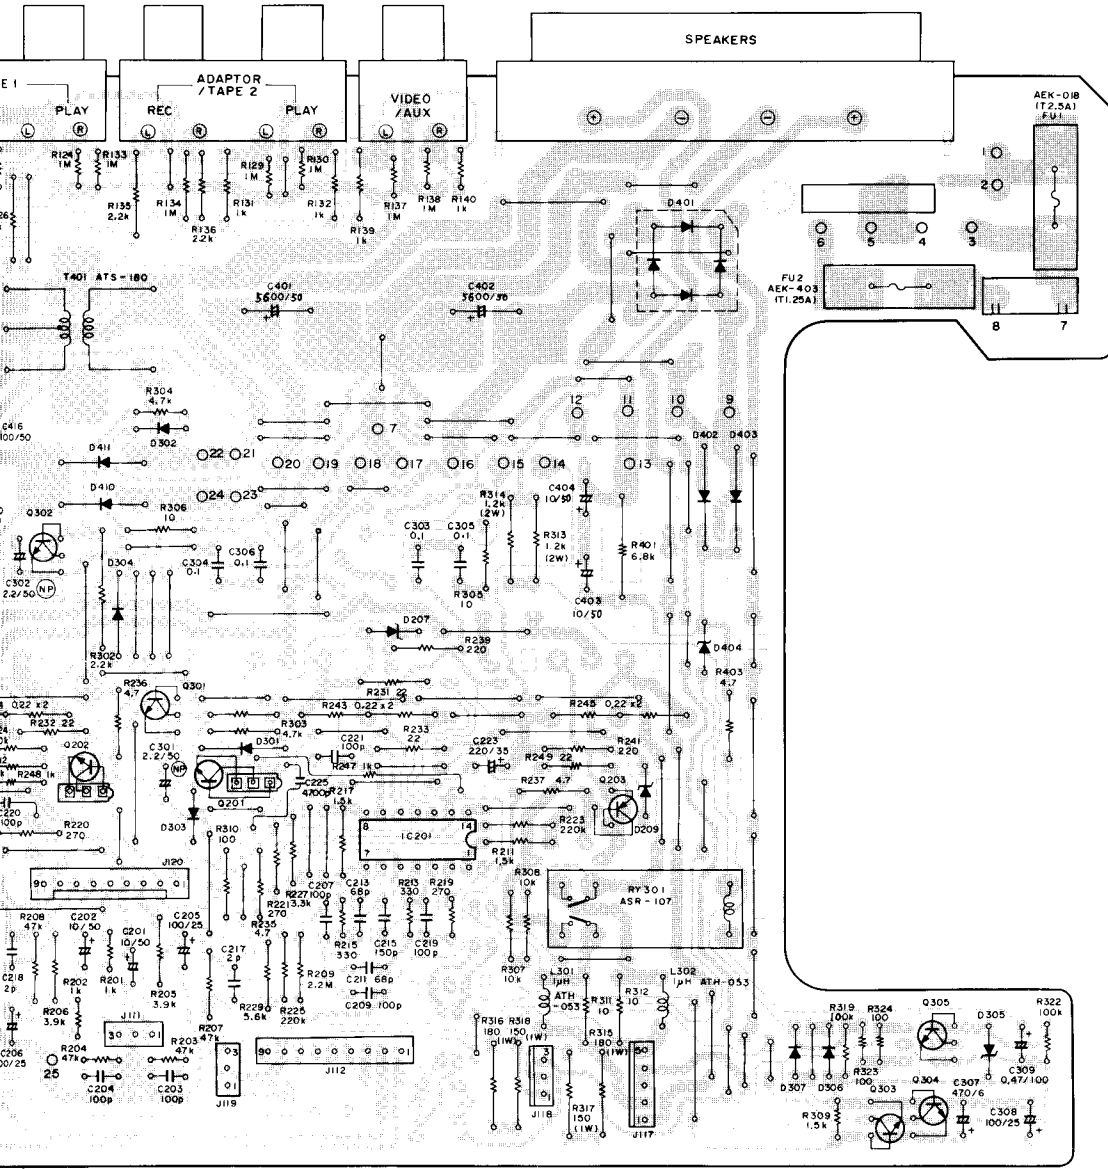

- Q201A, 202A : 25C2235
- Q203A, 204A : 25A965
- Q301, 302 : 25C2705
- Q303, 304 : 25C1740S (25C2603)
- Q305 : 25D438 (A)
- Q401, 403 : 25D836 A
- Q402 : 25B750 A
- Q404 : 25D438
- IC101 : NJM2043DD
- IC102 : TC9162N
- IC201, 202 : PA0016
- D207~210, : RD2,7EB
- D301~304, 306, 307 : IS1554
- D305 : KZL140
- D401 : RB602
- D402, 403 : S5566
- D404 : RD18EB
- D406, 407 : RD16EB
- D409 : RD27EB
- D410, 411 : S5566
- D413~415 : IS5131

A

B

C

D


Schematic Diagram

A


B

C

D

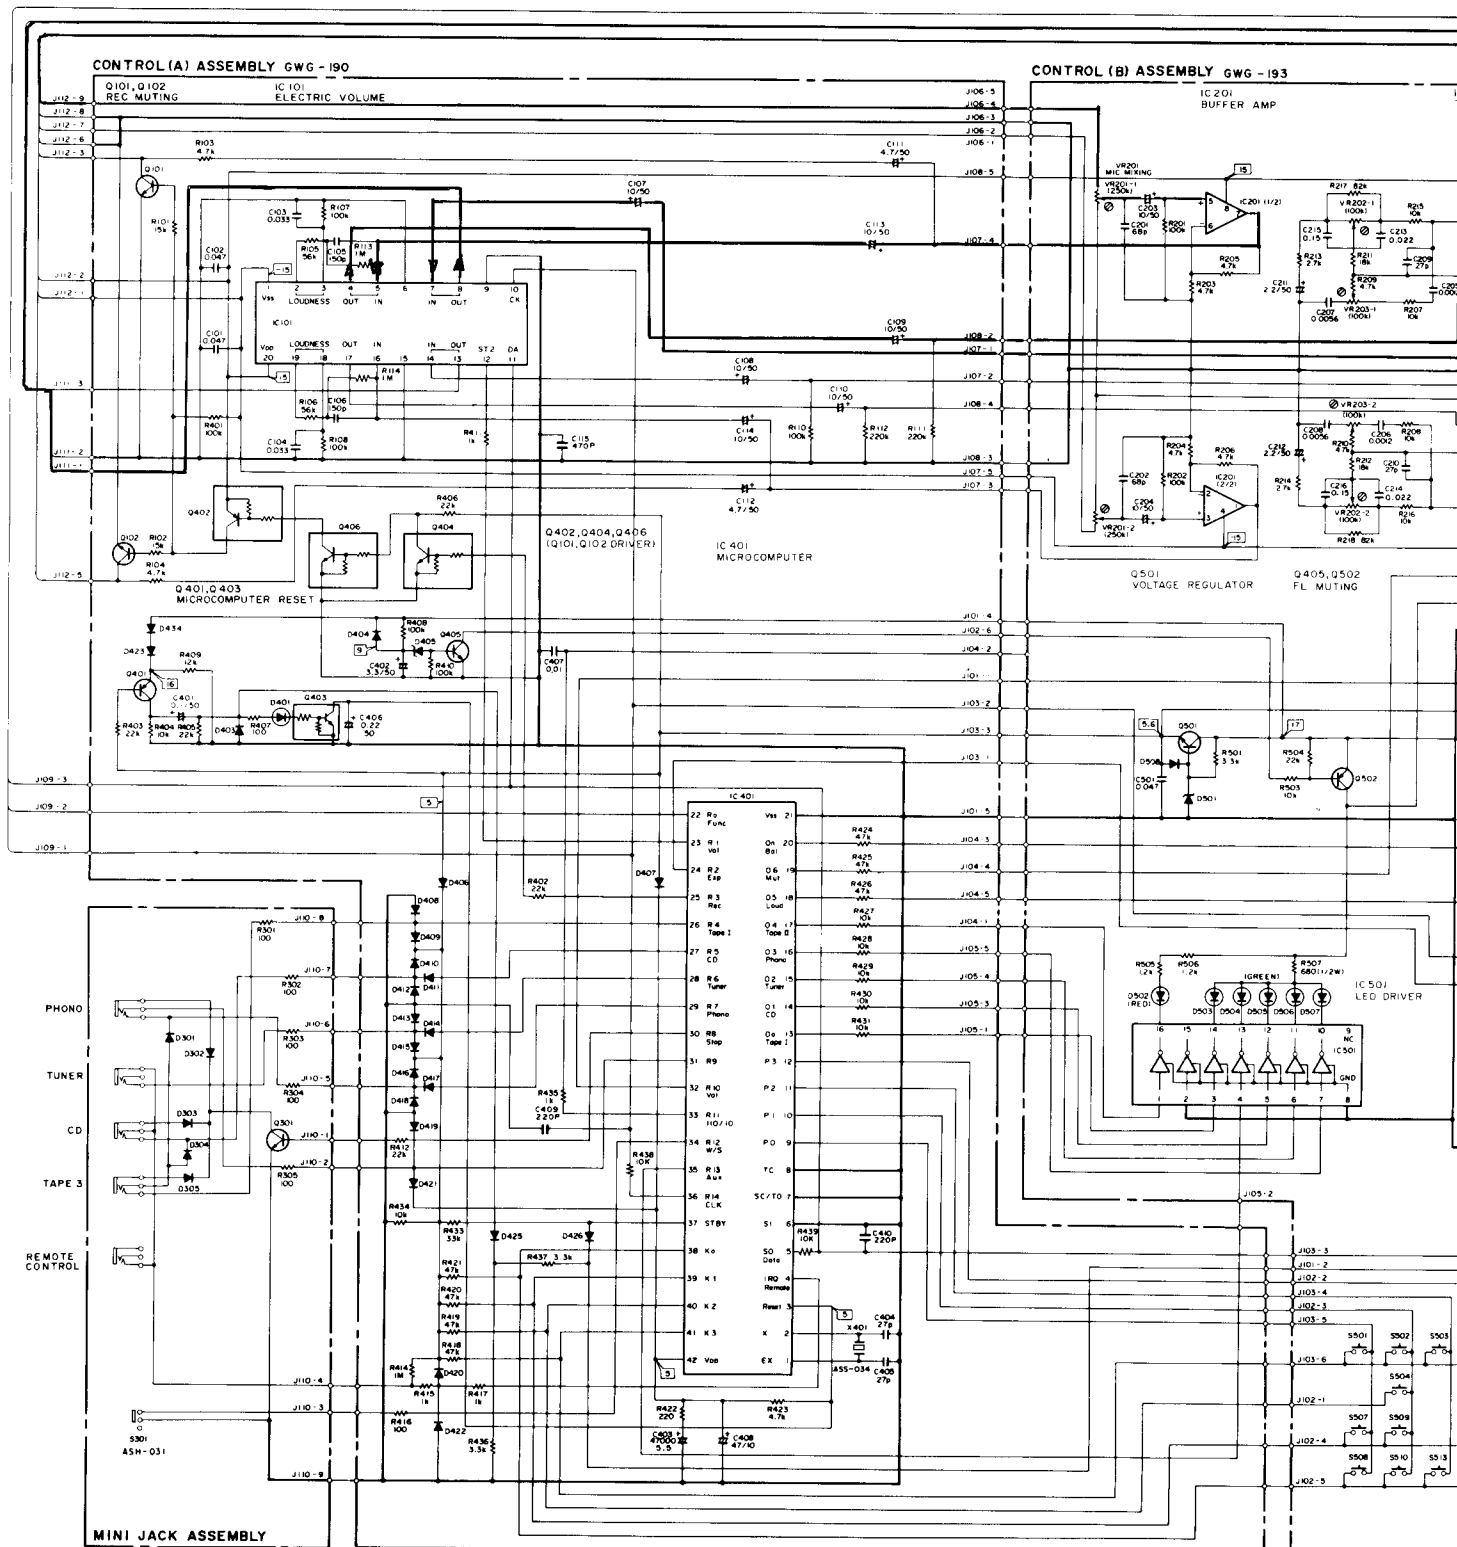


CONTROL (B) ASSEMBLY GWG - 193

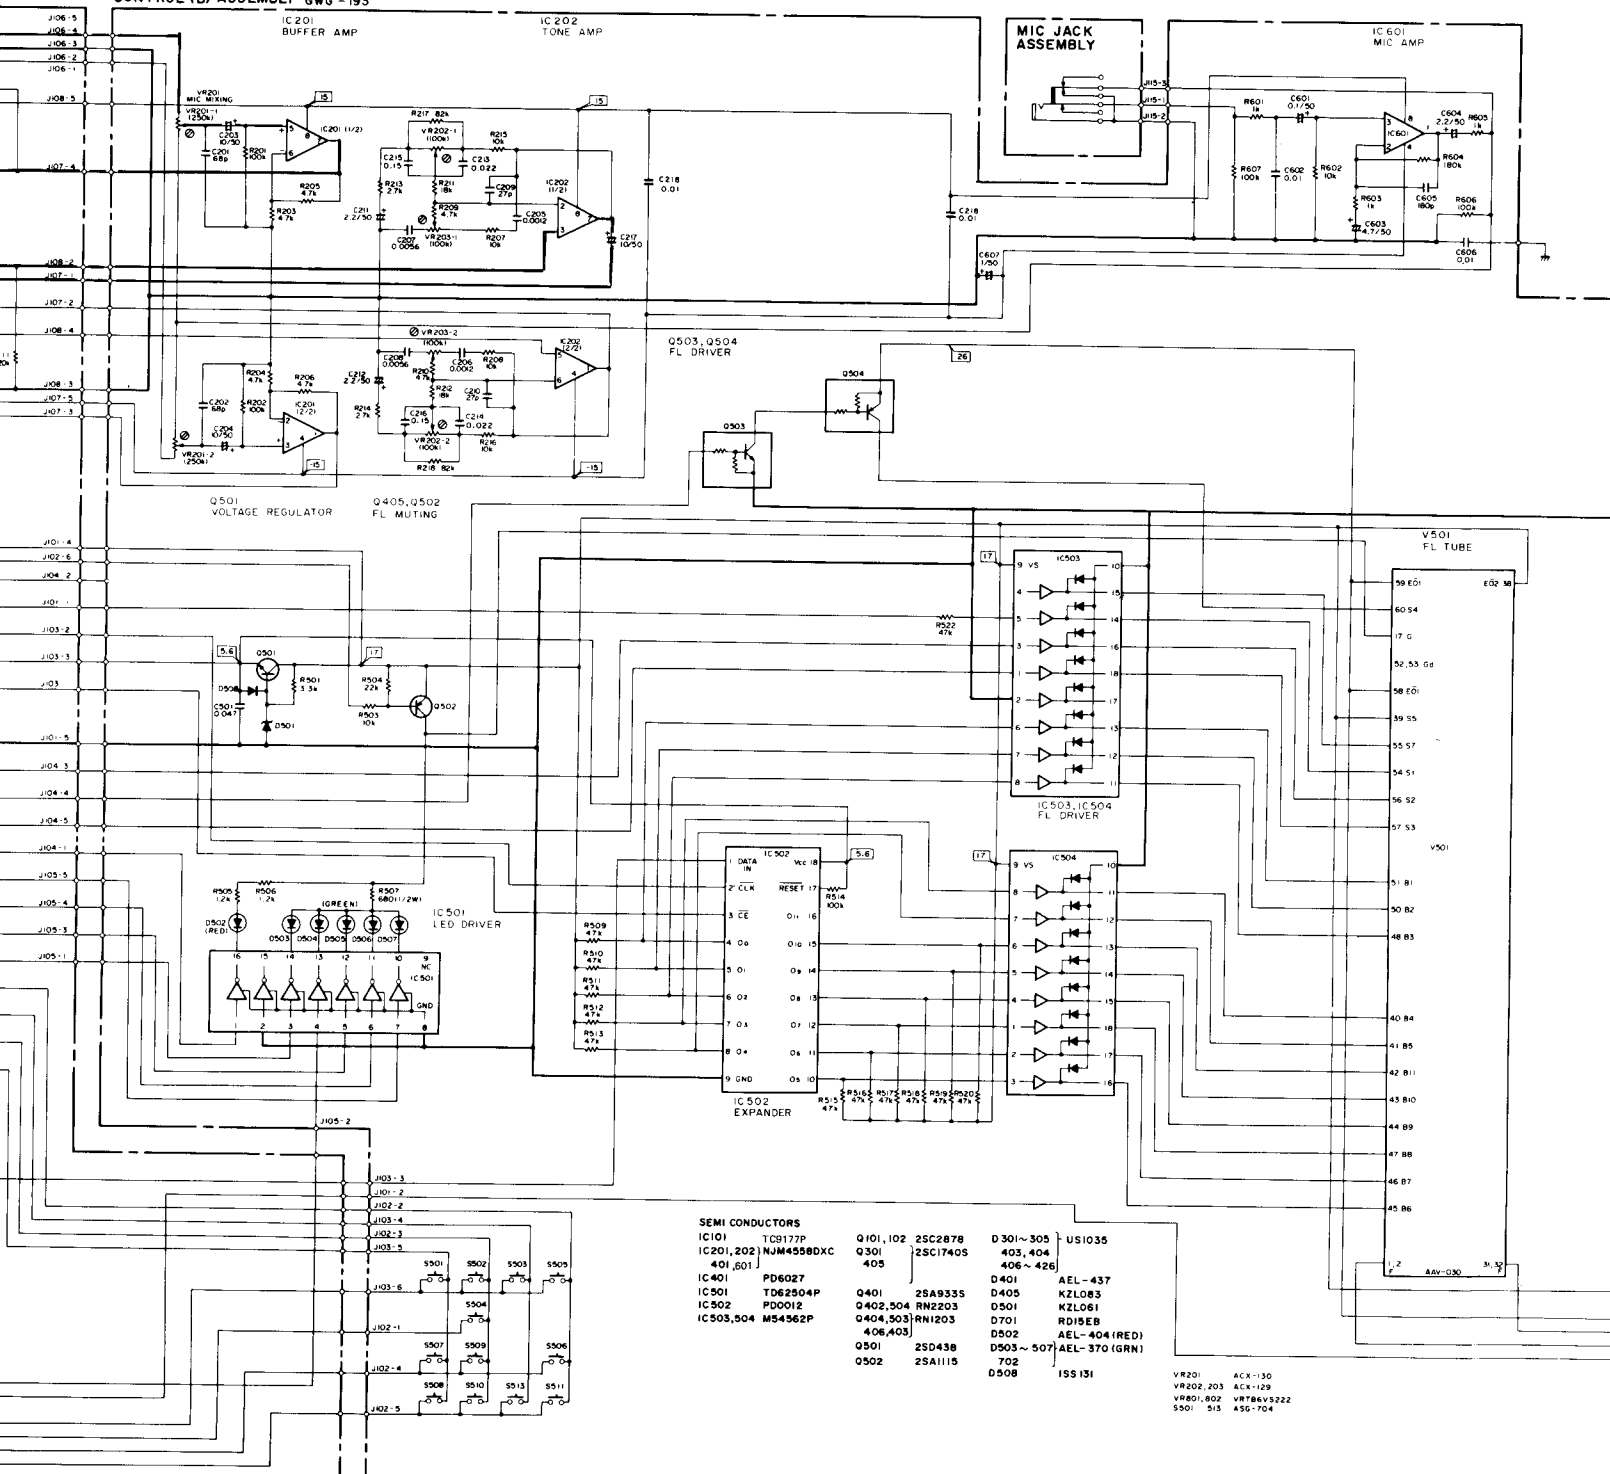

SEMI CONDUCTORS

- | | | | | | |
|------------|-----------|-----------|----------|----------|---------------|
| IC101 | TC8177P | Q101, 102 | 2SC2878 | D301~305 | US1035 |
| IC201, 202 | NJM4558DC | Q301 | 2SC1740S | 403, 404 | |
| 401, 501 | | 405 | | 406~426 | |
| IC401 | PD6027 | D401 | AEL-437 | | |
| IC501 | TD62504P | D405 | KZL083 | | |
| IC502 | P00012 | Q402, 504 | RN2203 | D501 | KZL061 |
| IC503, 504 | M54362P | Q404, 503 | RN1203 | D701 | RD19EB |
| | | 406, 403 | | D502 | AEL-404 (RED) |
| | | Q501 | 2SD438 | D503~507 | AEL-370 (GRN) |
| | | Q502 | 2SA1115 | 702 | |
| | | | | D508 | 1SS151 |

- VR201 ACK-130
 VR202, 203 ACK-129
 VR801, 802 VRT86VS222
 5501 515 45G-704

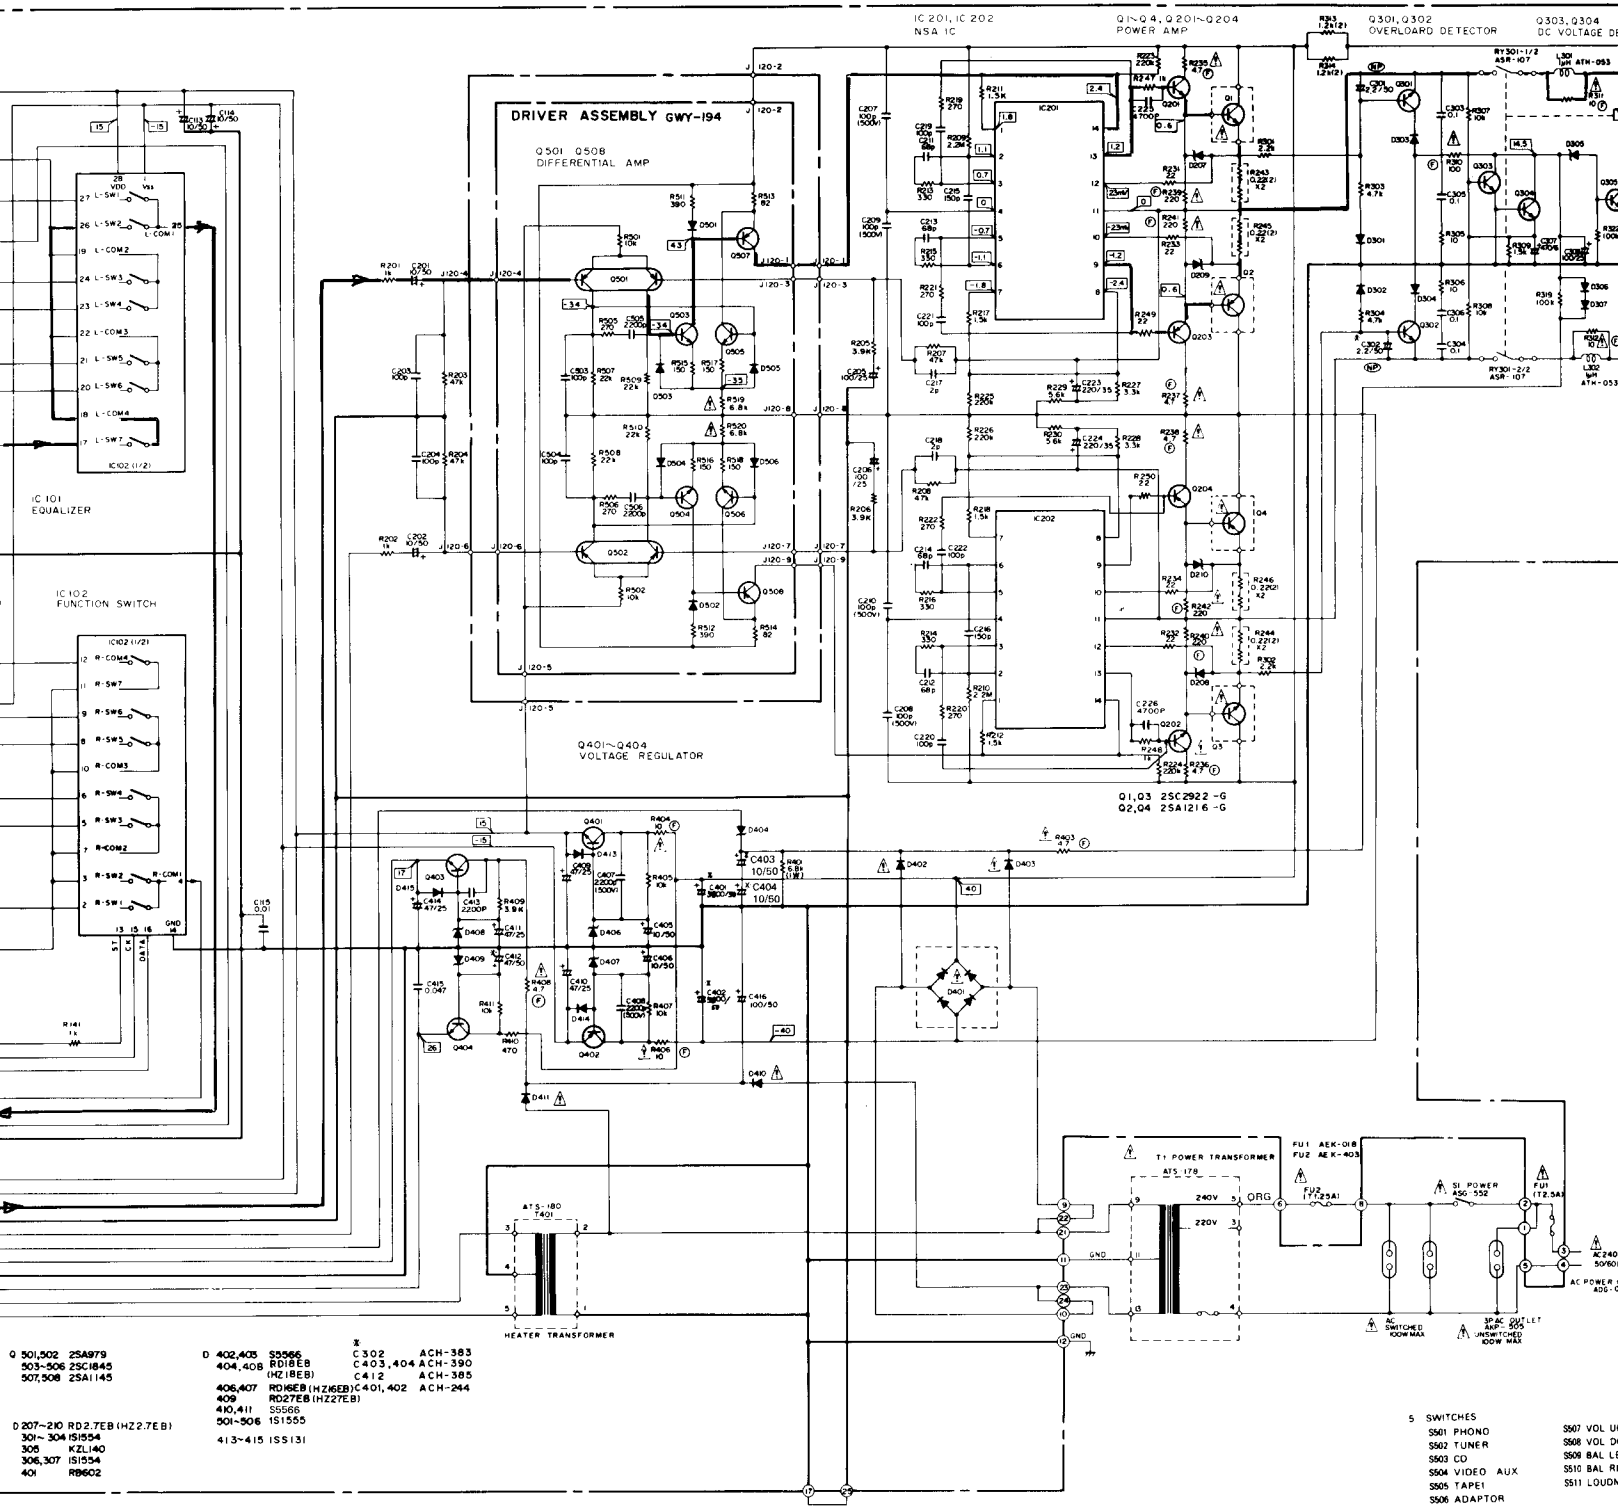


A

B

C

D

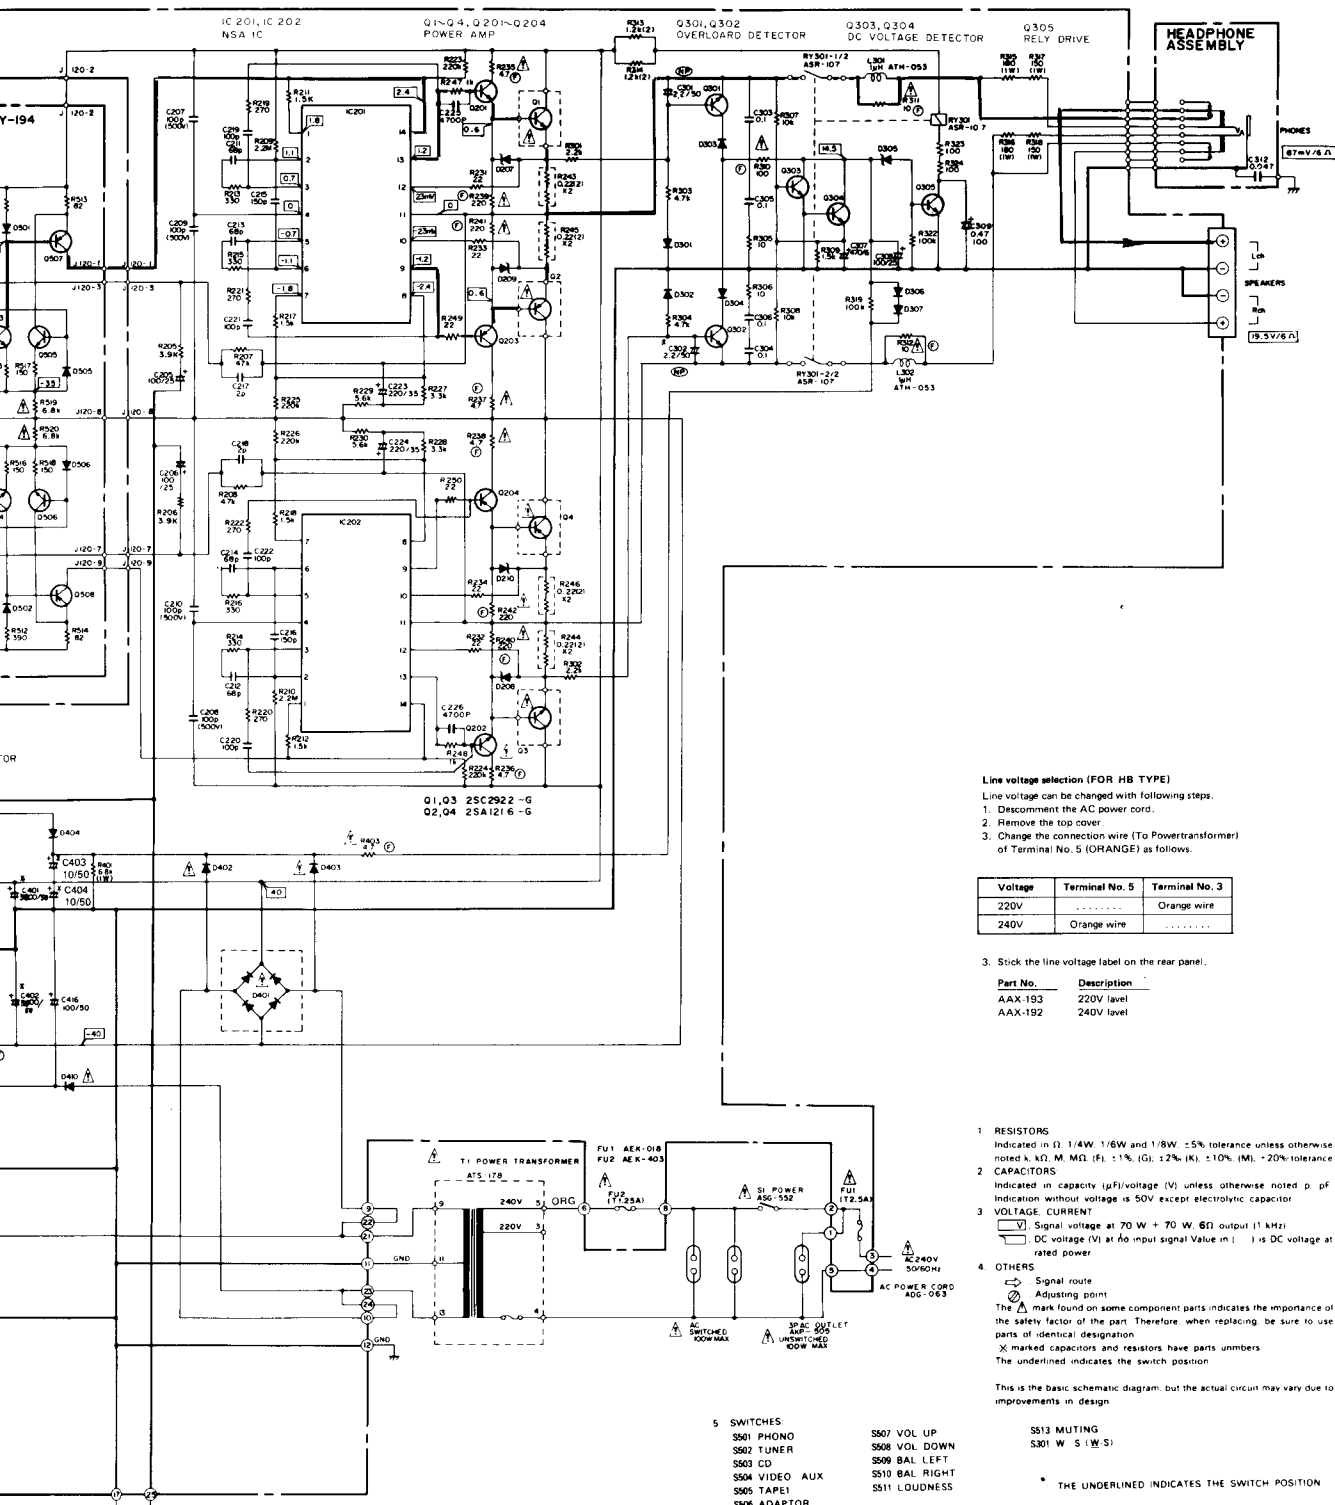

Line voltage selection (FOR HB TYPE)
 Line voltage can be changed with following steps.
 1. Disconnect the AC power cord.
 2. Remove the top cover.
 3. Change the connection wire (To Powertransformer) of Terminal No. 5 (ORANGE) as follows.

Voltage	Terminal No. 5	Terminal No. 3
220V	Orange wire
240V	Orange wire

3. Stick the line voltage label on the rear panel.

Part No.	Description
AAX-193	220V label
AAX-192	240V label

- 1. RESISTORS
 Indicated in Ω, 1/4W, 1/8W and 1/10W ±5% tolerance unless otherwise noted. k, M, MΩ, MΩ (F), (G), (K), (M), (P) ±20% tolerance
- 2. CAPACITORS
 Indicated in capacity (pF)/voltage (V) unless otherwise noted. p, pf. Indication without voltage is 50V except electrolytic capacitor
- 3. VOLTAGE, CURRENT
 [Symbol] Signal voltage at 70 W + 70 W, 6Ω output (1 kHz)
 [Symbol] DC voltage (V) at A_o input signal Value in () is DC voltage at rated power
- 4. OTHERS
 [Symbol] Signal route
 [Symbol] Adjusting point
 The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 X marked capacitors and resistors have parts numbers
 The underlined indicates the switch position

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

5. SWITCHES:
 S501 PHONO
 S502 TUNER
 S503 CD
 S504 VIDEO AUX
 S505 TAPE1
 S506 ADAPTOR
 S507 VOL UP
 S508 VOL DOWN
 S509 BAL LEFT
 S510 BAL RIGHT
 S511 LOUDNESS
 S513 MUTING
 S301 W S (W S)

* THE UNDERLINED INDICATES THE SWITCH POSITION

ADDITIONAL



Service Manual

ORDER NO.
ARP-808-0

STEREO AMPLIFIER

A-X700 HE/SK

● For Servicing this model, please refer to the A-X700/KU service manual (ARP-649-0) with the exception of this service manual.

● This service manual is applicable to the HE/SK type.

NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
★★ GENERALLY MOVES FASTER THAN ★.
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

The HE/SK type is the same as the KU type with the exception of the following section.

Contrast of Miscellaneous Parts

Mark	Symbol & Description	Part No.		Remarks
		KU type	HE/SK type	
	AF assembly	GWK-249	GWK-251	
	Driver assembly	GWY-156	GWY-194	
	Power assembly	AWR-267	
Δ ★	T1 Power transformer (120V) (220 V ~ 240 V)	ATS-176	
		ATS-178	
Δ	AC Socket	AKP-504	AKP-502	
Δ ★★	S1 Push switch (POWER)	ASG-551	ASG-552	
		(ASG-549)	
Δ ★★	FU1 Fuse (4A)	AEK-125	
		AEK-018	
Δ ★★	FU2 Fuse (T2.5A)	AEK-403	
Δ	Power cord	ADG-088	ADG-068	
Δ ★	Fan motor	AXM-014	
	Operating instructions (English)	ARB-647	
	Operating instructions (English/French/German/Italian)	ARE-122	
	Sub instructions	ARH-070	ARH-071	
	Packing case	AHE-478	AHE-479	

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
 TEL: (800) 421-1404, (800) 237-0424
PIONEER ELECTRONIC (EUROPE) N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775-2808
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia
 TEL: (03) 580-9911

AF assembly (GWK-251)

The AF assembly (GWK-251) is same as the GWK-249 with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		GWK-249	GWK-251	
★	D201 – D204	KZL056	
★	D404	RD22EB	RD18EB	
★	D413 – D415	1SS131	
	C225, C226	CQMA472K50	
	C302	CEANP2R2M50	ACH-383	
	C403, C404	CEA100M50L	ACH-390	
	C412	CEA470M50L	ACH-385	
	R247	RD1/4PM102J	
	R248	RD1/8PM102J	
	R249, R250	RD1/8PM220J	
	R313, R314	RS1PMF182J	RS2LMF122J	
	R319	RD1/8PM124J	RD1/8PM104J	
	R323, R324	RD1/8PM101J	
	R408	RD1/4PMFL4R7J	RFA1/4PS4R7J	
	R404, R406	RD1/4PMFL270J	RD1/4PMFL100J	
	R410	RFA1/4PS100J	RD1/4PM471J	
	R412	RD1/8PM220J	
⚠ ★	T401 Heater transformer	ATS-141	ATS-180	

Driver assembly (GWY-194)

The driver assembly (GWY-194) is the same as the GWY-156 with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		GWY-156	GWY-194	
⚠	R507 – R510	RD1/8PM153J	RD1/8PM223J	
	R519, R520	RD1/4PMFL272J	RS2LMF682J	
	R511, R512	RFA1/4PS271J	RD1/4PM391J	
	R513, R514	RFA1/4PS820J	RD1/4PM820J	

Power Assembly (AWR-267)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	Q902	2SD438 (A)
★★	Q901	2SD880
★	D901	KZL056
★	D902–D905	1SS131

CAPACITORS

Mark	Symbol & Description	Part No.
	C902, C903	CEA010M50L
	C901	CEA470M50L


RESISTORS


Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.



Mark	Symbol & Description	Part No.
	R902–R905	RD1/4PM □□□ J
	R901	RFA1/4PS4R7J

Schematic Diagram

A F ASSEMBLY GWK-251

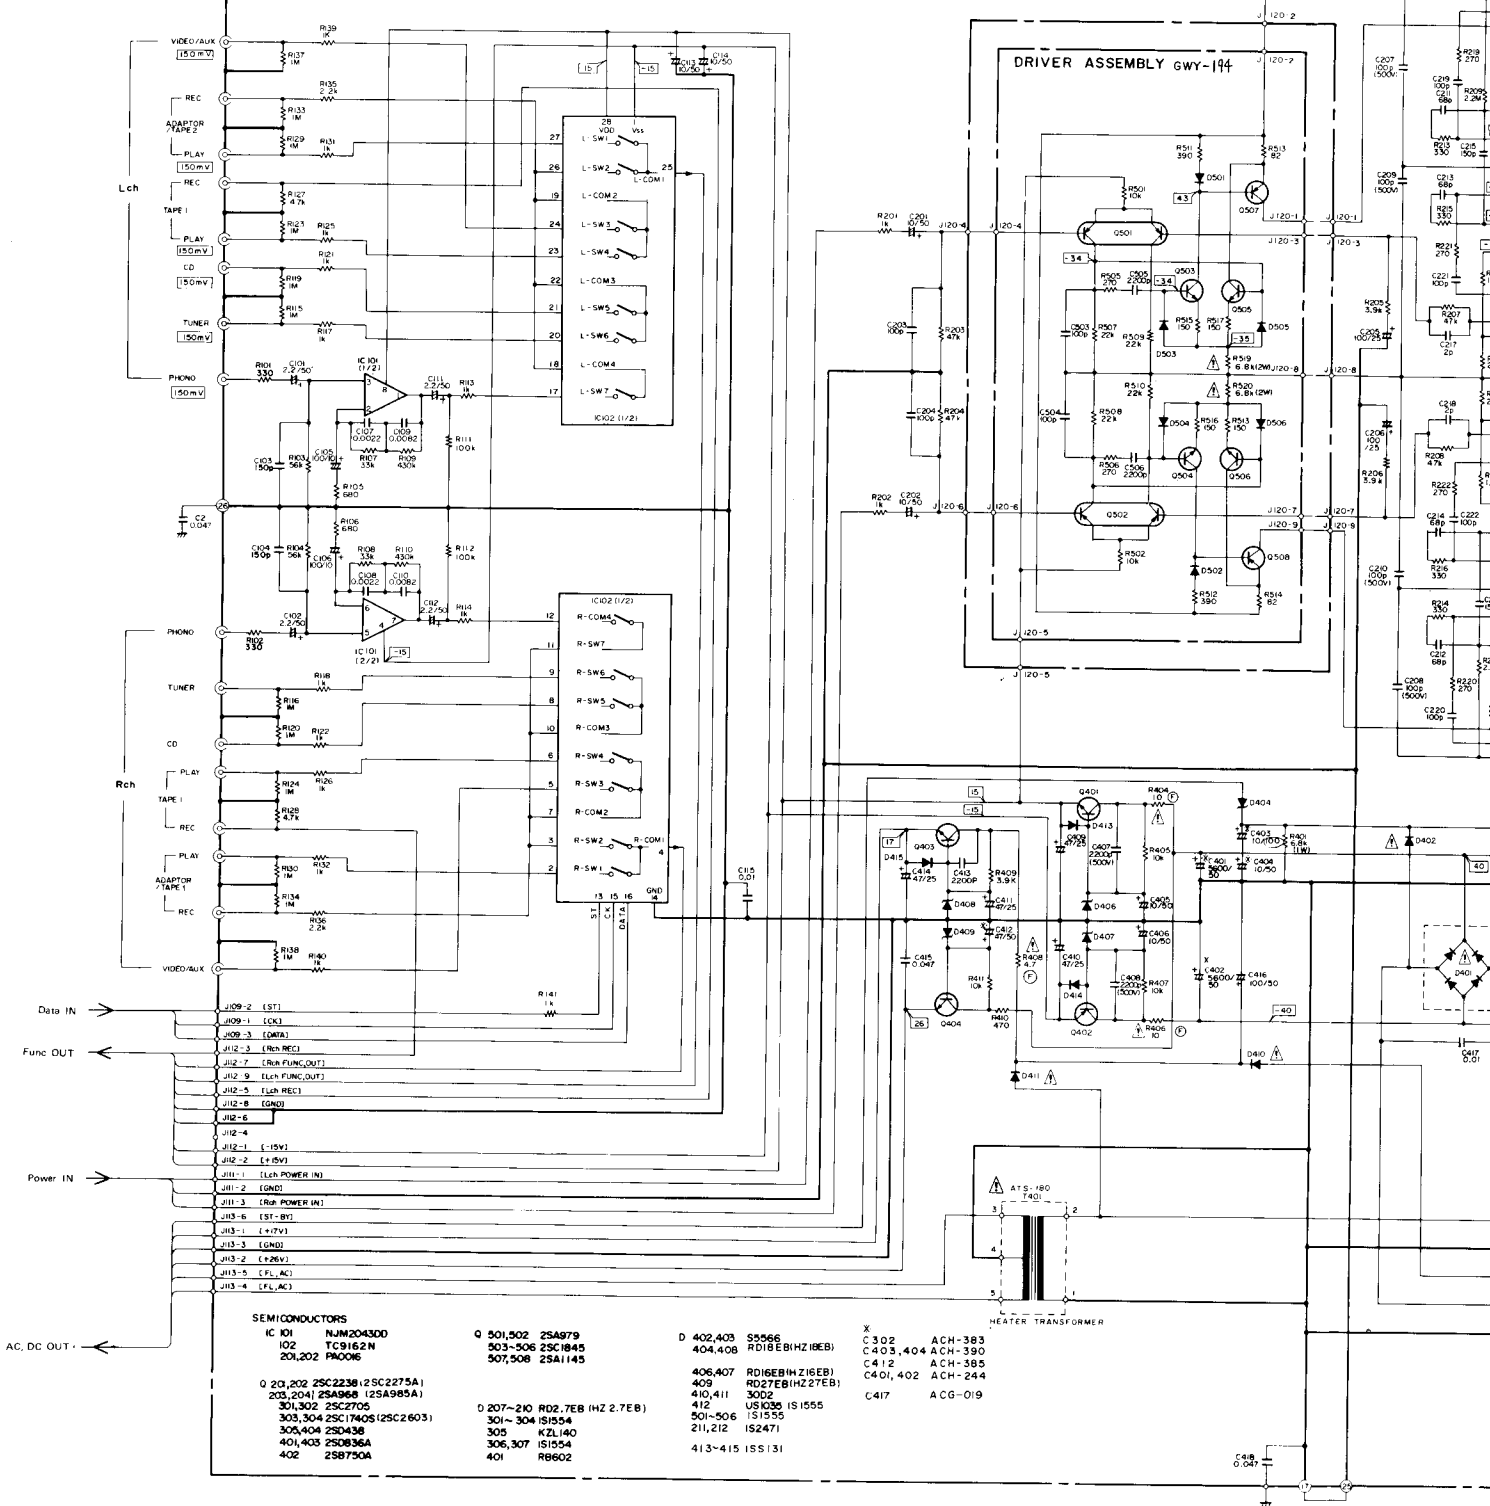

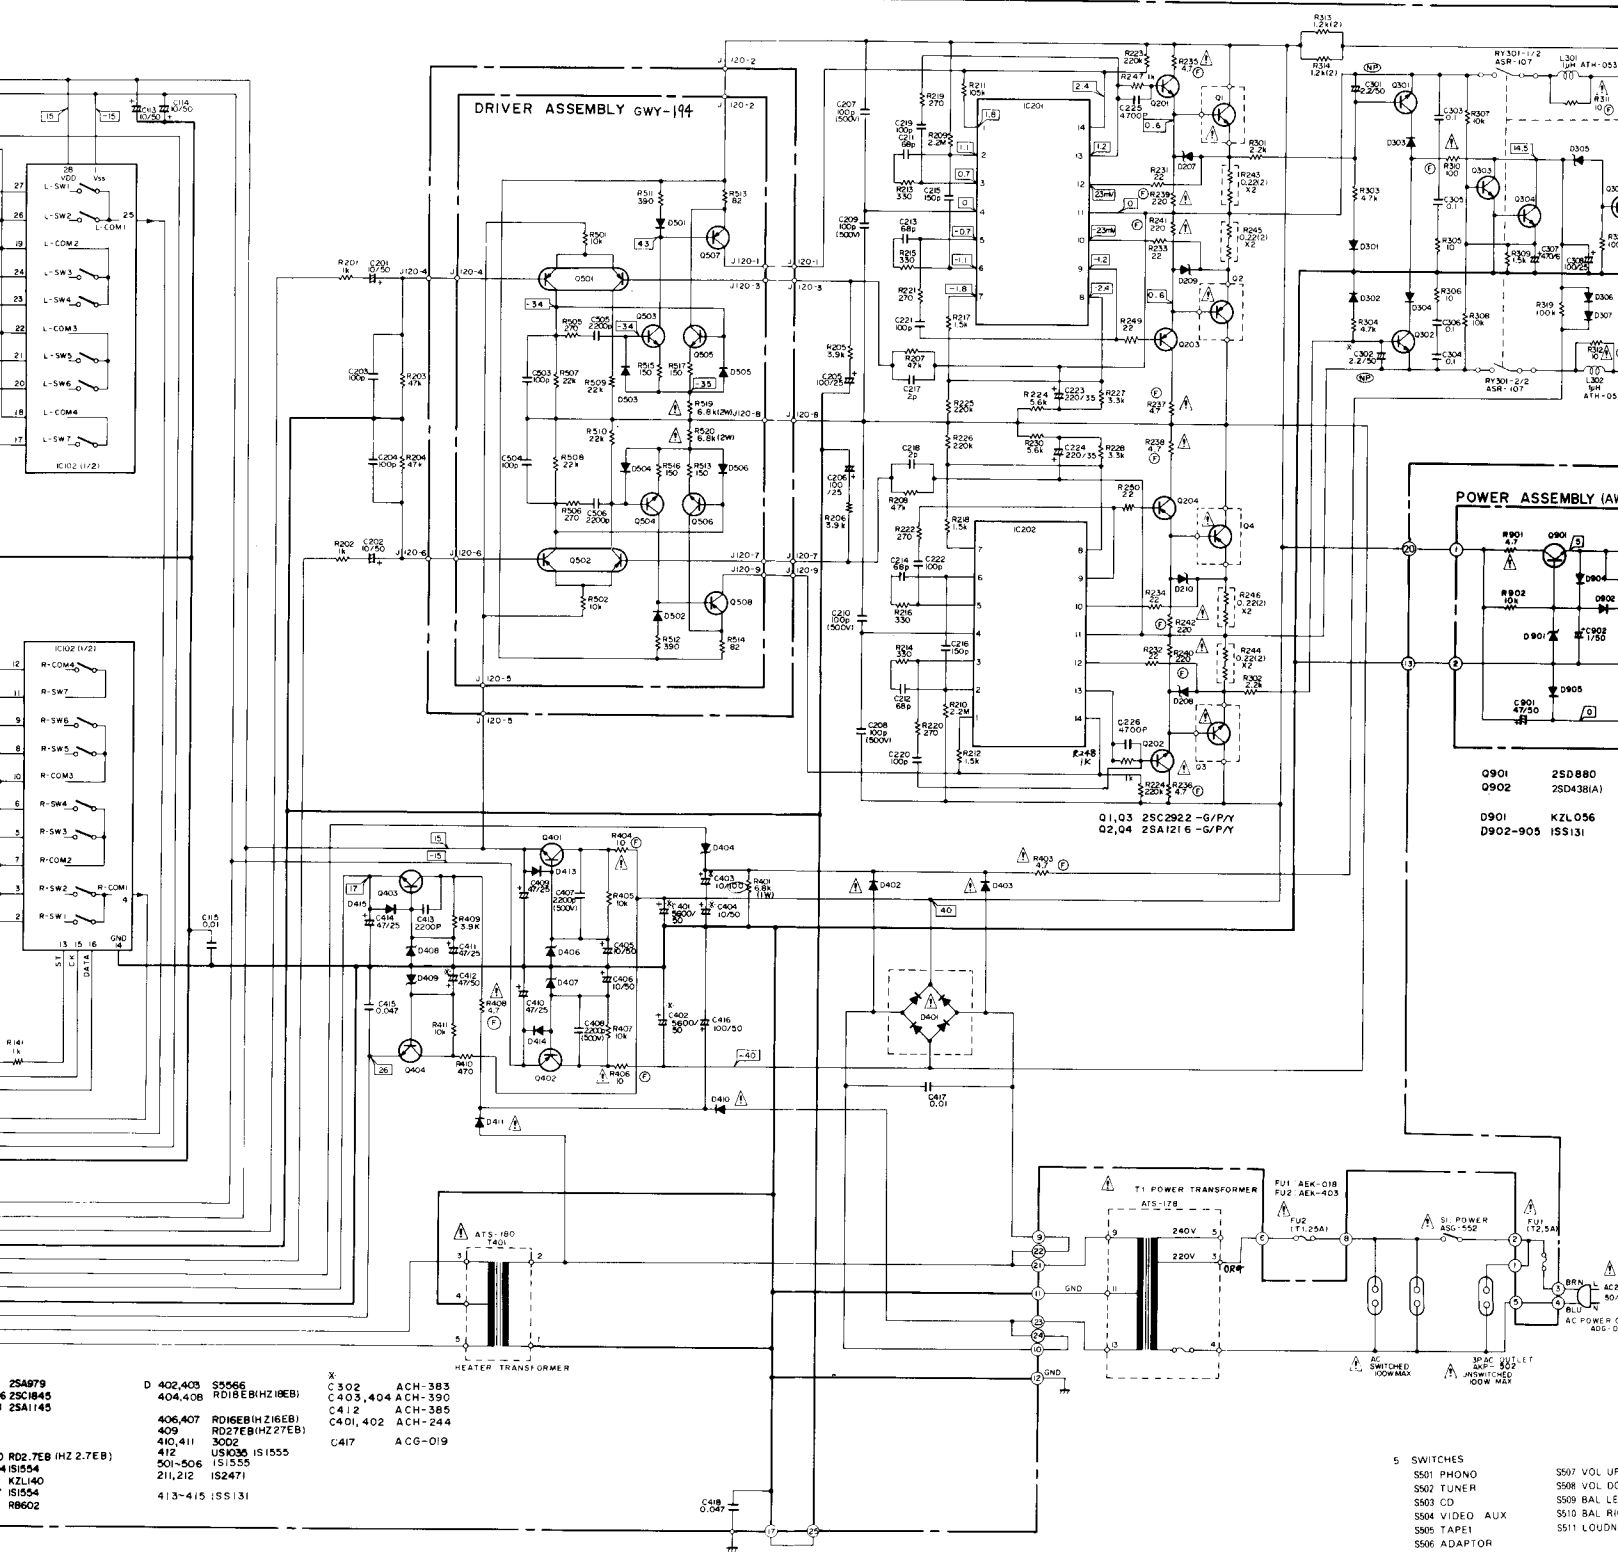

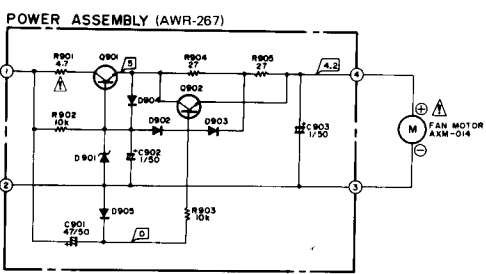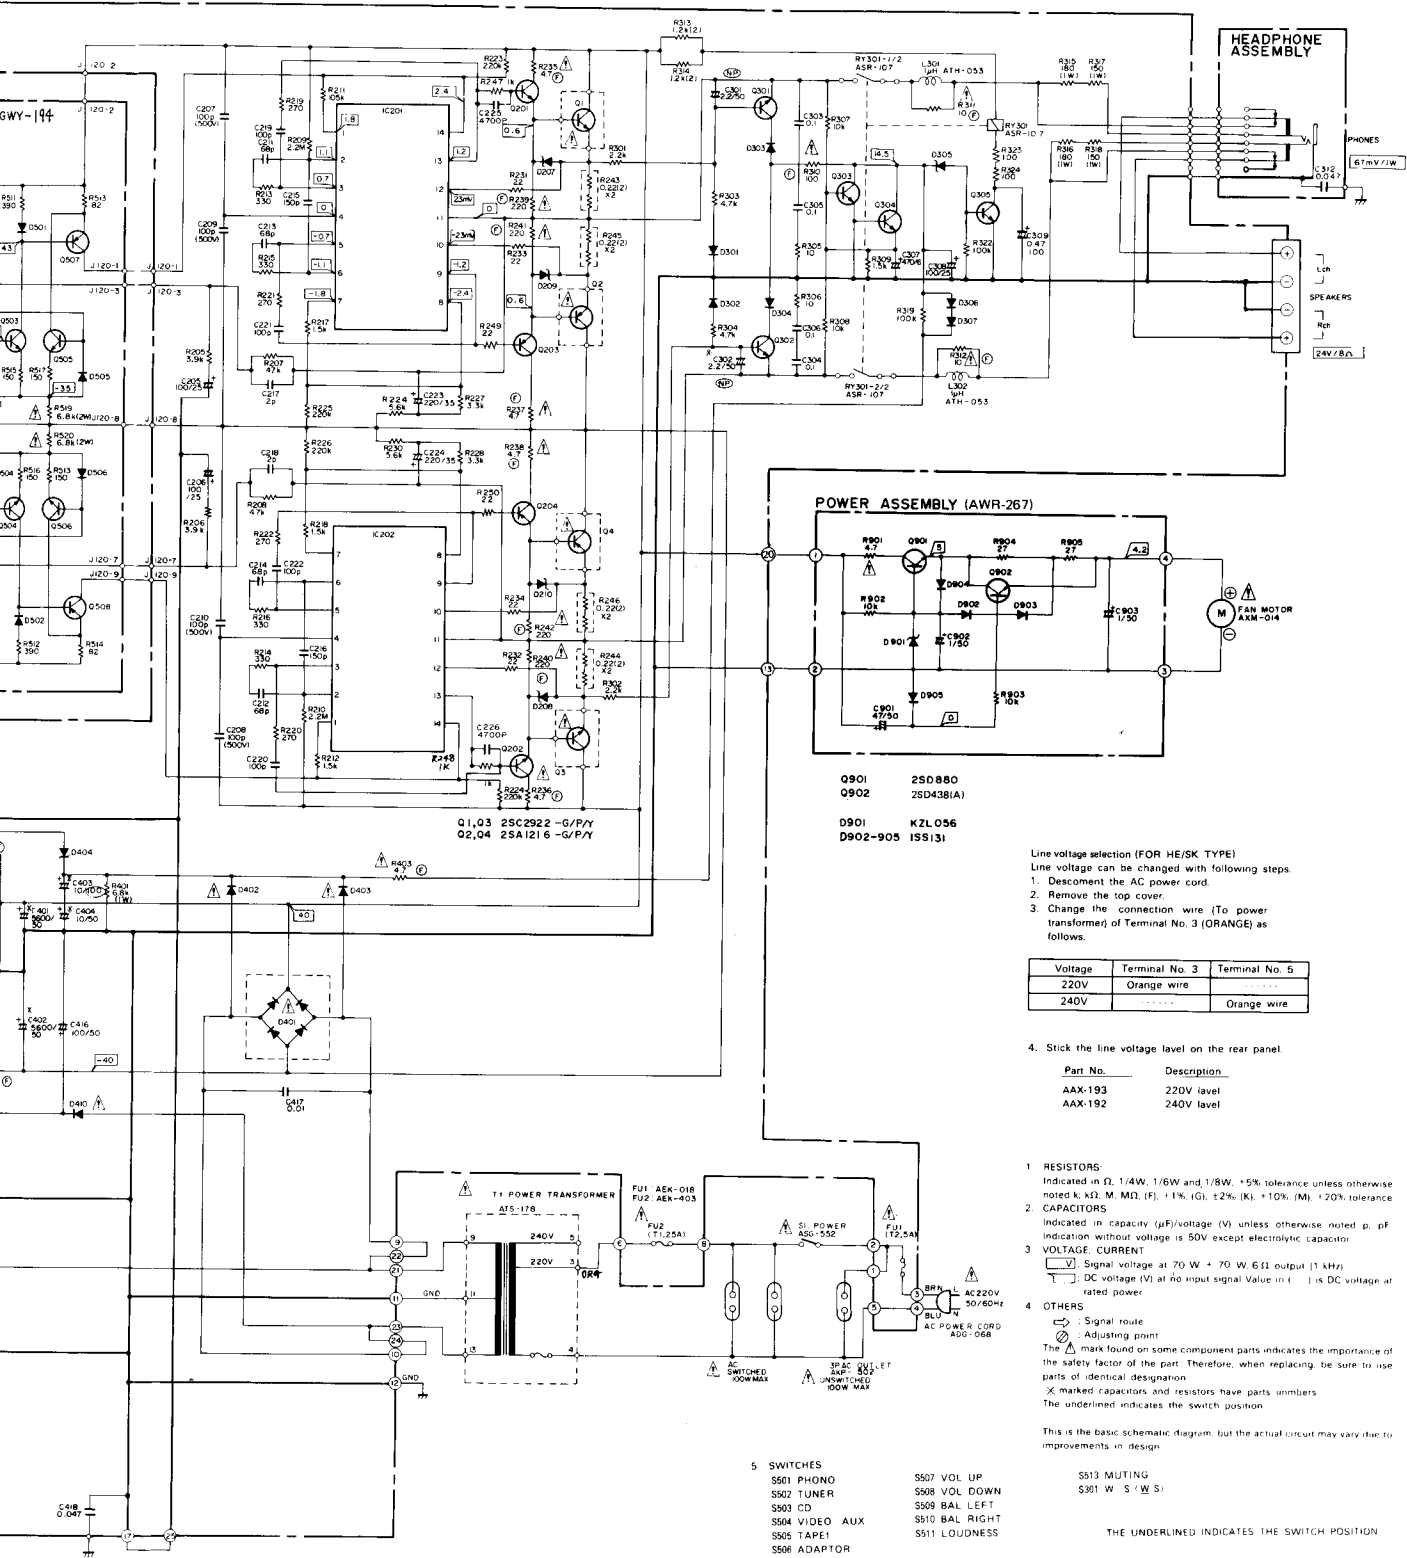

- Q1, Q3 2SC2922 -G/P/Y
- Q2, Q4 2SA1216 -G/P/Y
- Q901 2SD880
- Q902 2SD438(A)
- D901 KZL056
- D902-905 ISS131

Line voltage selection (FOR HE/SK TYPE)
Line voltage can be changed with following steps.

1. Disconnect the AC power cord.
2. Remove the top cover.
3. Change the connection wire (To power transformer) of Terminal No. 3 (ORANGE) as follows.

Voltage	Terminal No. 3	Terminal No. 5
220V	Orange wire
240V	Orange wire

4. Stick the line voltage level on the rear panel.
- | Part No. | Description |
|----------|-------------|
| AAx-193 | 220V level |
| AAx-192 | 240V level |

1. RESISTORS:
Indicated in Ω, 1/4W, 1/6W and 1/8W, +5% tolerance unless otherwise noted; k, M, MΩ, (F), 1%, (G), 12%, (K), 10%, (M), 20% tolerance
2. CAPACITORS:
Indicated in capacity (μF)/voltage (V) unless otherwise noted; p, pF
Indication without voltage is 50V except electrolytic capacitor.
3. VOLTAGE, CURRENT:
[V] Signal voltage at 70 W + 70 W, 6 Ω output (1 kHz)
[V] DC voltage [V] at no input signal Value in () is DC voltage at rated power
4. OTHERS:
[~] Signal route
[⊕] Adjusting point
The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
X marked capacitors and resistors have parts dimmers.
The underlined indicates the switch position.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

5. SWITCHES:
S501 PHONO
S502 TUNER
S503 CD
S504 VIDEO AUX
S505 TAPE1
S506 ADAPTOR
S507 VOL UP
S508 VOL DOWN
S509 BAL LEFT
S510 BAL RIGHT
S511 LOUDNESS
S513 MUTING
S501 W S (W S)

THE UNDERLINED INDICATES THE SWITCH POSITION

A


B

C

D

P.C. Board Pattern

AF Assembly GWK-251

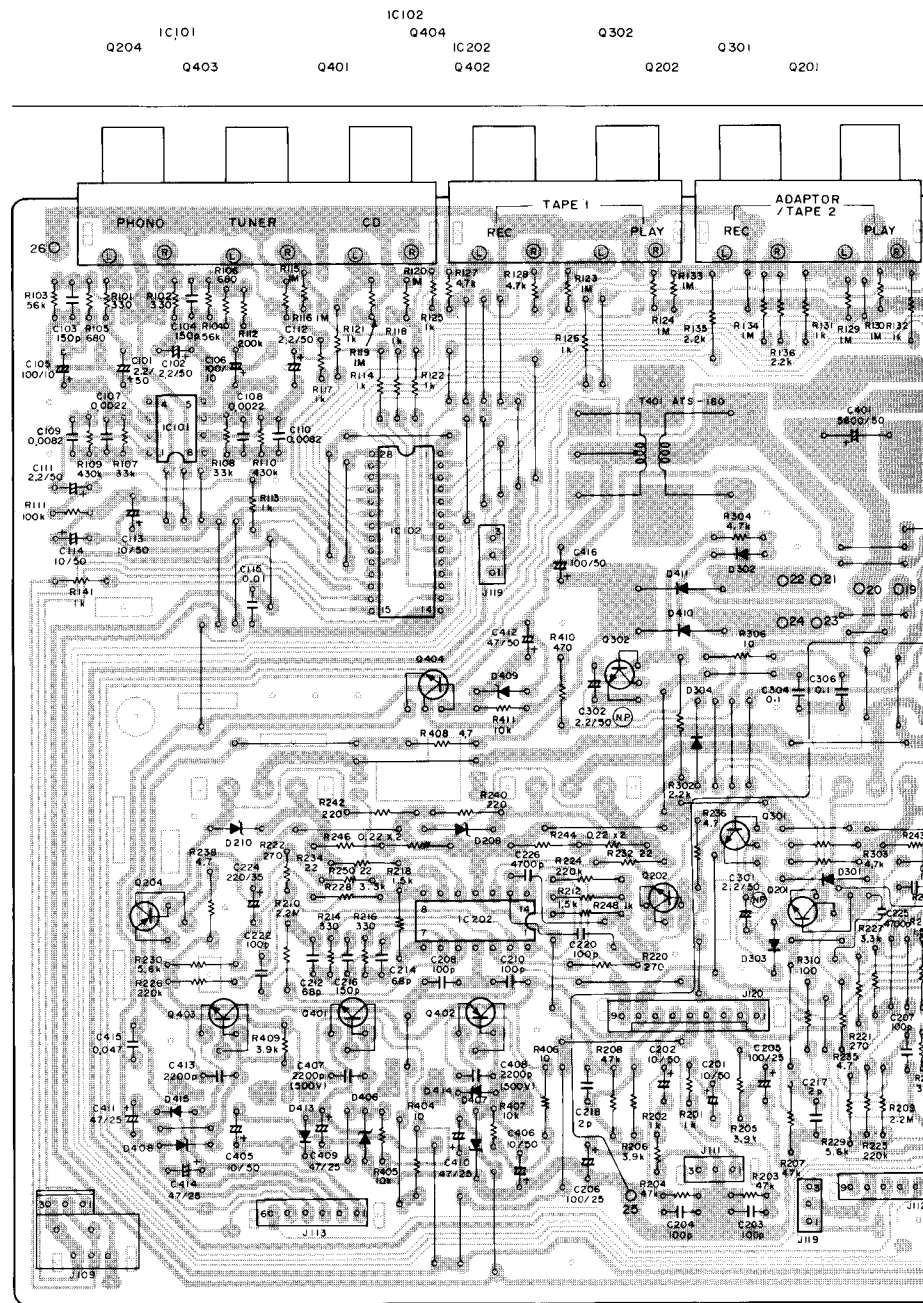


A

B

C

Driver Assembly GWY-194

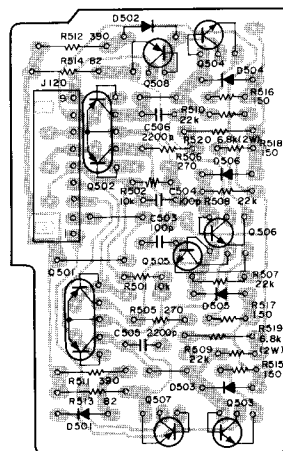


- Q501, 502 : 2SA979
- Q503 ~ 506 : 2SC1845
- Q507, 508 : 2SA1145
- D501 ~ 506 : US1035

D


Pos
AV

Q302 Q301 Q202 Q201 IC201 Q203 Q305 Q303 Q304

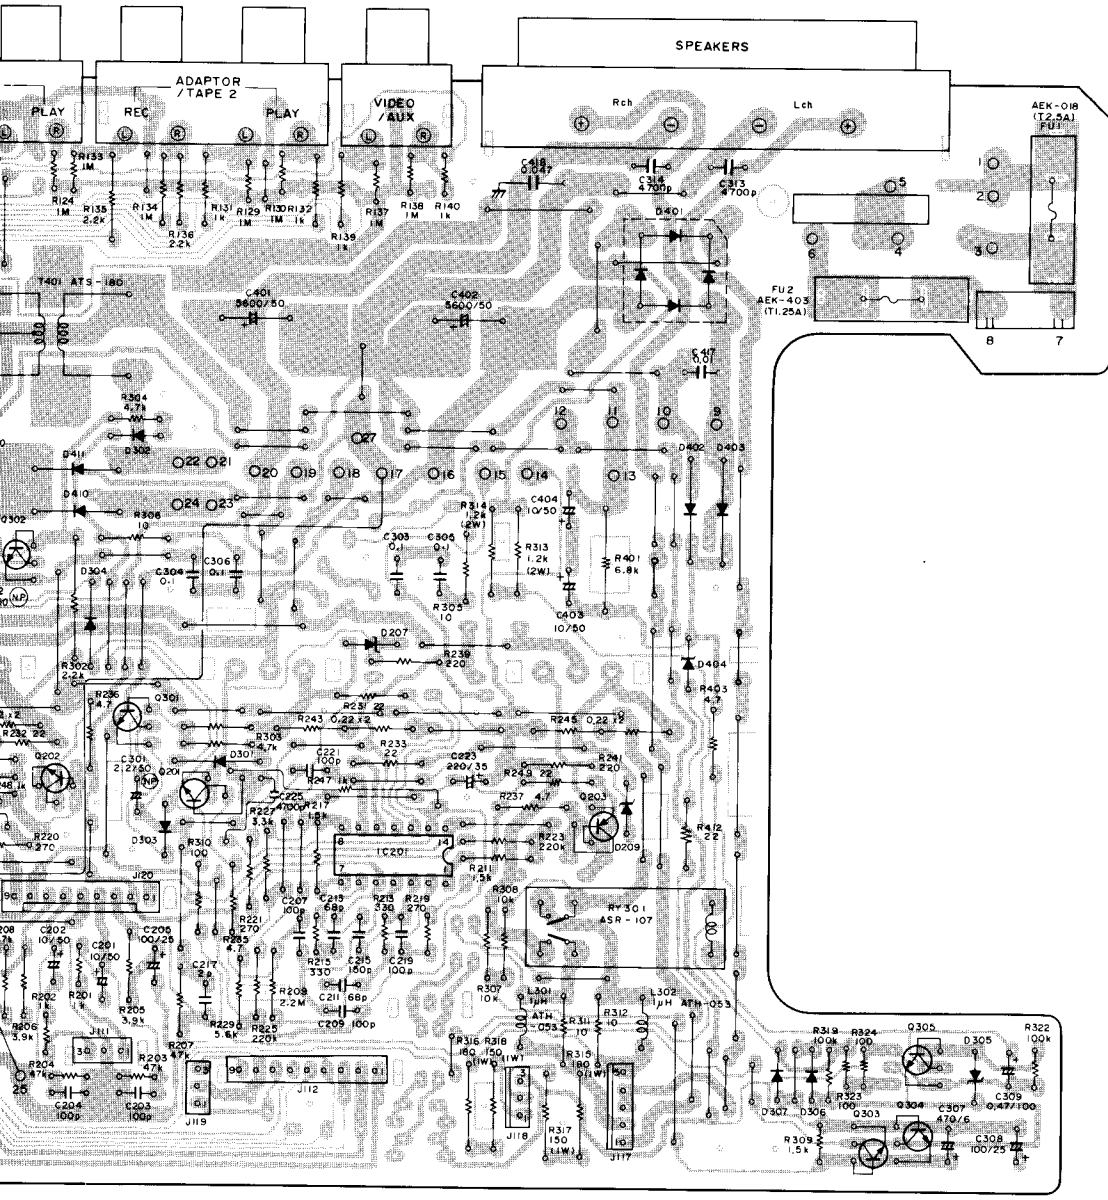

Q201A, 202A	2SC2238 (2SC2275A)
Q203A, 204A	2SA968 (2SA985A)
Q301, 302	2SC2705
Q303, 304	2SC1740S (2SC2603)
Q305	2SD438(A)
Q401, 403	2SD836 A
Q402	2SB 750 A
Q404	2SD438
IC 101	NJM2043DD
IC 102	TC9162N
IC201, 202	PA0016
D207 ~ 210,	RD2,7EB
D301 ~ 304, 306, 307	IS1554
D305	KZL140
D401	RB602
D402, 403	S5566
D404	RD18 EB
D406, 407	RD16 EB
D409	RD27EB
D412	US 1035
D410, 411	S5566
D413 ~ 415	ISS131
C302	ACH383
C401, 402	ACH244
C403, 404	ACH390
C412	ACH385
C417	ACG019

**Power Assembly
AWR-267**

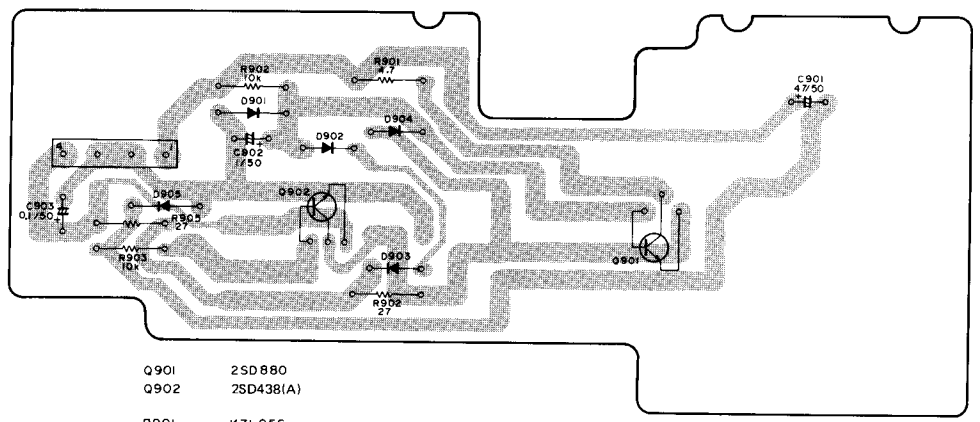

Q901	2SD880
Q902	2SD438(A)
D901	KZL056
D902-905	ISS131