


# Service Manual

**CIRCUIT DESCRIPTIONS  
REPAIR & ADJUSTMENTS**

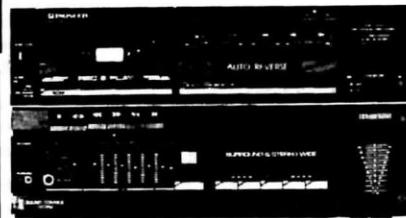

ORDER NO.  
ARP1120-0

STEREO CASSETTE TAPE DECK AMPLIFIER

## DC-X33Z(BK) DC-X33Z

MODEL DC-X33Z(BK) COMES IN FIVE VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Applicable model		Power requirement	Destination
	DC-X33Z(BK)	DC-X33Z		
HE	○	○	AC 220V (240V)* (Switchable)	European continent
HB	○	○	AC 240V (220V)* (Switchable)	United Kingdom
S	○	—	AC 110V/120V/240V (Switchable)	General market
YP	○	—	AC 240V only	Australia
HEZ	○	—	AC 220V (240V)* (Switchable)	West Germany

\* Change the primary wiring of the power transformer.

- This service manual is applicable to the HB, HE and S types.
- As to the HE and S types, please refer to page 55, 56.
- As to the other types, please refer to the additional service manual.
- As to the circuit and mechanism descriptions, please refer to the DC-X55Z(BK) service manual (ARP-1054).

## CONTENTS

1. SPECIFICATIONS .....	2	8. EXPLODED VIEWS .....	22
2. FRONT PANEL FACILITIES .....	2	9. PACKING .....	29
3. DISASSEMBLY .....	4	10. ADJUSTMENTS .....	30
4. PARTS LOCATION .....	7	RÉGLAGE .....	35
5. ELECTRICAL PARTS LIST .....	9	AJUSTE .....	40
6. P.C.BOARDS CONNECTION DIAGRAM .....	13	11. FOR HE AND S TYPES .....	45
7. SCHEMATIC DIAGRAM .....	17		

# 1. SPECIFICATIONS

## AMPLIFIER SECTION

Continuous Average Power Output is 25 Watts\* per channel, min., at 8 ohms from 40 Hertz to 20,000 Hertz, with no more than 0.3% total harmonic distortion.

\*Measured pursuant to the Federal Trade Commission's Trade Regulation rules on Power Output Claims for Amplifiers.

## Continuous Power Output

40 to 20,000Hz .....	25 W + 25 W (T.H.D. 0.3% 8 ohms)
1 kHz (DIN) .....	32 W + 32 W (T.H.D. 1% 8 ohms)
1 kHz (DIN music power) .....	45 W + 45 W (T.H.D. 1% 8 ohms)
PMPO .....	90 W + 90 W
Hum and Noise (IHF, short-circuited, A network)	
PHONO .....	72 dB
Hum and Noise (DIN continuous Power/50 mV)	
PHONO .....	68 dB/60 dB
Total Harmonic Distortion (40 Hz to 20,000 Hz, 8 ohms)	
12.5 Watts per channel power output .....	No more than 0.2%

## Tape Deck Section

Systems .....	4 track, 2-channel stereo
Heads .....	"Hard Permalloy" recording/playback head x 1 "Ferrite" erasing head x 1
Motor .....	DC servo motor x 1
Wow and Flutter .....	No more than 0.09% (WRMS)
Fast Winding Time .....	Approximately 100 seconds (C-60 tape)

## Frequency Response

-20 dB recording:	
Normal tape .....	35 Hz to 14,000 Hz
CrO <sub>2</sub> .....	35 Hz to 15,000 Hz
Metal tape .....	35 Hz to 16,000 Hz

## Signal-to-Noise Ratio

Dolby NR OFF .....	55 dB
Noise Reduction Effect	

Dolby B type NR ON .....	More than 10 dB (at 5 kHz)
--------------------------	----------------------------

## Furnished Parts

Operating Instructions .....	1
Turntable legs parts .....	2


## Miscellaneous

Power requirements	
U.S., Canadian models .....	AC 120 V, 60 Hz
European model .....	AC 220 V, 50/60 Hz
U.K. model .....	AC 240 V, 50/60 Hz
Other destination models .....	AC 110/120/220/240 V (switchable) 50/60 Hz

## Power Consumption

U.S., Canadian models .....	150 W (CSA 180 VA)
European model .....	230 W
U.K. and Australian models .....	230 W
Other destination models .....	150 W
Dimensions .....	360(W) x 190(H) x 283 (D) mm 14-3/16(W) x 7-7/16(H) x 11-1/8(D) in
Weight (without package) .....	6.4 kg (14 lb 2 oz)

# 2. FRONT PANEL FACILITIES

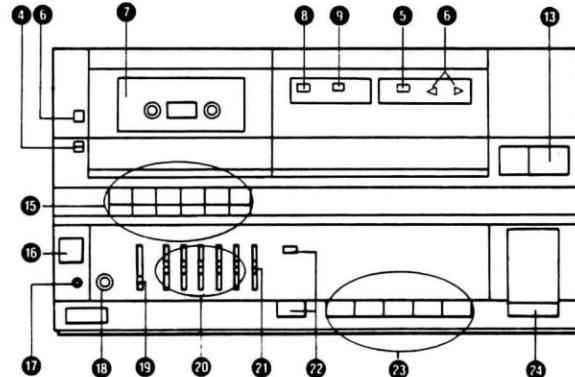

### ① REVERSE MODE switch

Sets the reverse mode for the record/play deck.

Switch positions	Play	Record
	Continuous play	Double-side recording
	Reverse play	Single-side recording

Continuous playback is automatically stopped after 8 round trips. Note that it will be counted as one reversal if the tape direction is changed using the direction switch. (One round trip will be counted if the switch is pressed twice.)

### ② Recording indicator (REC)

Lights during recording. Flashes during tape copying. (DC-X55Z and DC-555Z only)

### ③ Direction switch/indicator (DIRECTION)

Depress to set the recording and playback direction of the record/play deck. Direction change can be performed during recording, playback or pause.  
 Lights when forward mode is selected. Flashes if tape travel is stopped during reverse recording.  
 Lights when reverse mode is selected.

### ④ Cassette compartment (Recording and playback)

### ⑤ TAPE COUNTER (Record/play deck.)

3-digit display measures tape travel on record/play deck.

### ⑥ TAPE COUNTER RESET button

### ● COPY SPEED switch

Press to set the copy mode.

- NORMAL ... Permits you to listen to playback normally during dubbing (normal speed copying)
- HIGH ... High speed dubbing (double-speed, half-time copying)

### ● Playback-only switches

- ↔ (PLAY) ... Forward or reverse mode playback.
- ◀ (FAST) .... Rewind in forward mode; fast forward in reverse mode.
- ▶ (FAST) .... Fast forward in forward mode, rewind in reverse mode.
- /▲ (STOP/EJECT) ... Stops tape travel. Ejects cassette if pressed when tape is stopped.

### ● Synchronized copy switch (SYNCHRO COPY)

Press to start copying from Deck I to Deck II. Set the copying speed (NORMAL or HIGH) using the COPY SPEED switch.

- Press this switch only after you have set the COPY SPEED switch as desired. If this switch is pressed first, the speed cannot afterwards be changed, even if the COPY SPEED switch position is later changed.

### ● Dolby NR switch

Press to activate noise reduction system. Use to play back tapes recorded using Dolby B NR noise reduction.

- Tapes recorded using Dolby B NR noise reduction should always be played back with the noise reduction system on. Sound quality will be adversely affected if they are played back with the system off, or if tapes recorded using a different noise reduction system are played back with the Dolby B NR system on.
- It is recommended that tapes recorded using Dolby B NR be so marked on the label. This will help to prevent incorrect setting of the noise reduction switch during playback.

~~~~~  
Noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.  
~~~~~

### ⑩ Recording mute switch (REC MUTE)

Use to create blank intervals on a tape during recording. Works only while held depressed.

### ● Record/Playback switches

- (REC) ..... Record
- ↔ (PLAY) ... Playback in forward or reverse mode.
- ◀ (FAST) .... Rewind in forward mode, fast forward in reverse mode.
- ▶ (FAST) .... Fast forward in forward mode, rewind in reverse mode.
- /▲ (STOP/EJECT) ... Stops tape travel. Ejects cassette if pressed when tape is stopped.
- (PAUSE) .... Temporarily stops tape travel. Cancels pause mode when pressed again.

### [AMPLIFIER/GRAFIC EQUALIZER]

#### ⑪ Power switch (POWER)

#### ⑫ Headphone jack (PHONES)




For miniature stereo phone plug.

#### ⑬ Microphone jack (MIC)

For standard phone plug.

### ⑭ Mic Mixing Controls (MIC MIXING)

Adjusts balance between mic volume and volume of other input sources.

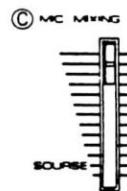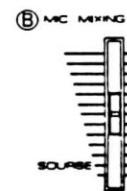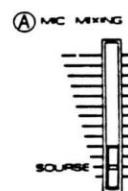

Source input emphasized

To listen to the sound from a microphone mixed with that of a radio broadcast or tape playback:

Mic input emphasized

#### NOTE:

- Set the control to the SOURCE position as shown in Fig. A when not using a microphone.
- Source volume is cut by about 1/100 when control is set to the MIC position.

### ⑯ Graphic equalizer controls (GRAPHIC EQUALIZER)

Fine adjustments in sound quality are possible using the 5 controls on the graphic equalizer.

### ⑰ BALANCE control

### ⑱ SURROUND/STEREO WIDE switch/indicator

By using this function, the sounds from stereo sources will be given new breadth, reproducing the effect of concert hall presence.

#### NOTE:

*Stereo Wide sound has no effect on monaural sources (AM broadcasts, etc.).*

### ⑲ Function switches (FUNCTION)

Press the button corresponding to the desired program source.

TUNER ..... Press to listen to radio.

VIDEO ..... Press to listen to component (Hi-Fi VCR, laser disc player, etc.) connected to the auxiliary input jacks.

CD ..... Press to listen to CD player.

PHONO ..... Press to listen to turntable.

TAPE ..... Press to listen to tape playback.

### ⑳ Volume Control (VOLUME)

### 3. DISASSEMBLY

#### 3-1 REMOVAL OF FRONT PANEL

1. Remove 5 screws ①.
2. Remove the bonnet case.
3. Remove the connectors of 5P, 6P and 8P.
4. Remove the LED assembly.
5. Remove 2 screws ②.
6. Press the 3 claws on the bottom and remove the front panel assembly.

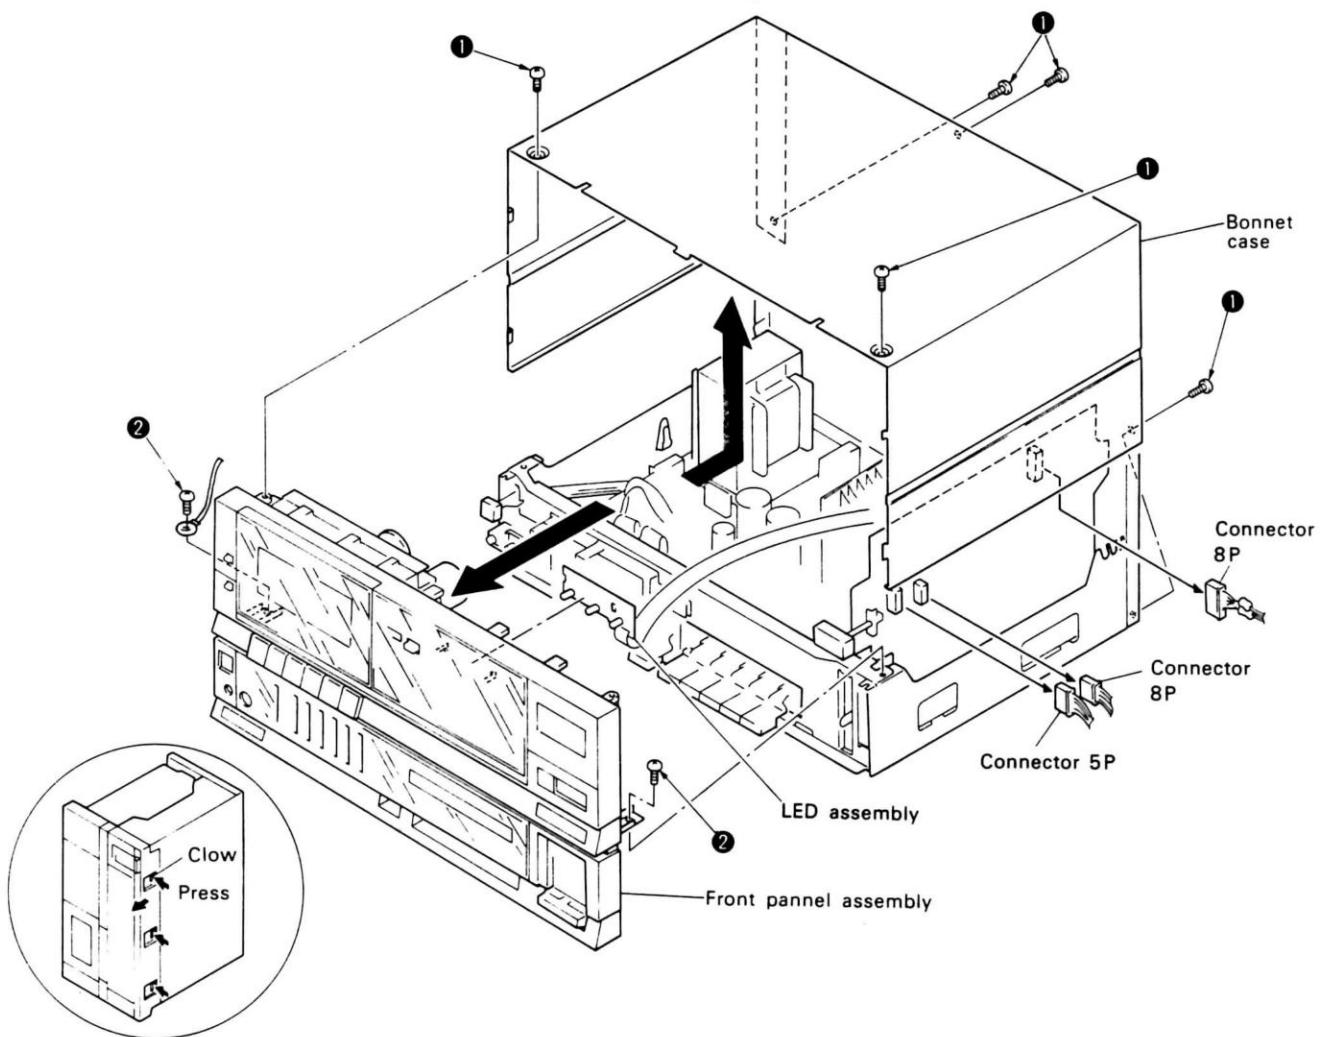


Fig. 3-1 Removal of front panel

### 3-2 REMOVAL OF TAPE TRANSPORT UNIT

1. Open the cassette door.
2. Detach the counter belt from the tape counter and apply it to the tape transport unit.
3. Remove 4 screws ①
4. Detach the tape transport unit from the front panel assembly.

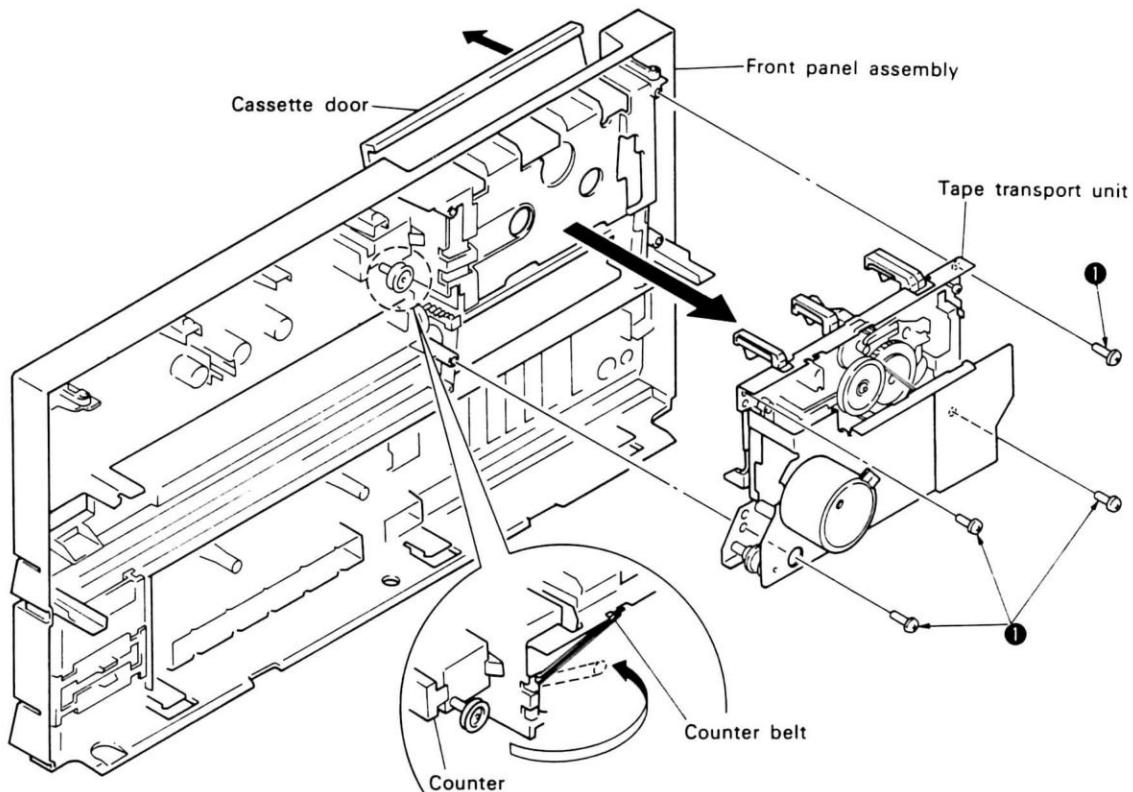


Fig. 3-2 Removal of tape transport unit

### 3-3 REMOVAL OF AF ASSEMBLY, TAPE ASSEMBLY, AND POWER TRANSFORMER

1. Remove 5 screws ①
2. Remove a screw ② and remove one section of the PCB holder.

3. Remove the AF assembly in the direction of arrow.
4. The tape assembly can be removed by removing the connectors of 5P and 12P from the AF assembly.
5. The power transformer can be removed by removing 4 screws ③

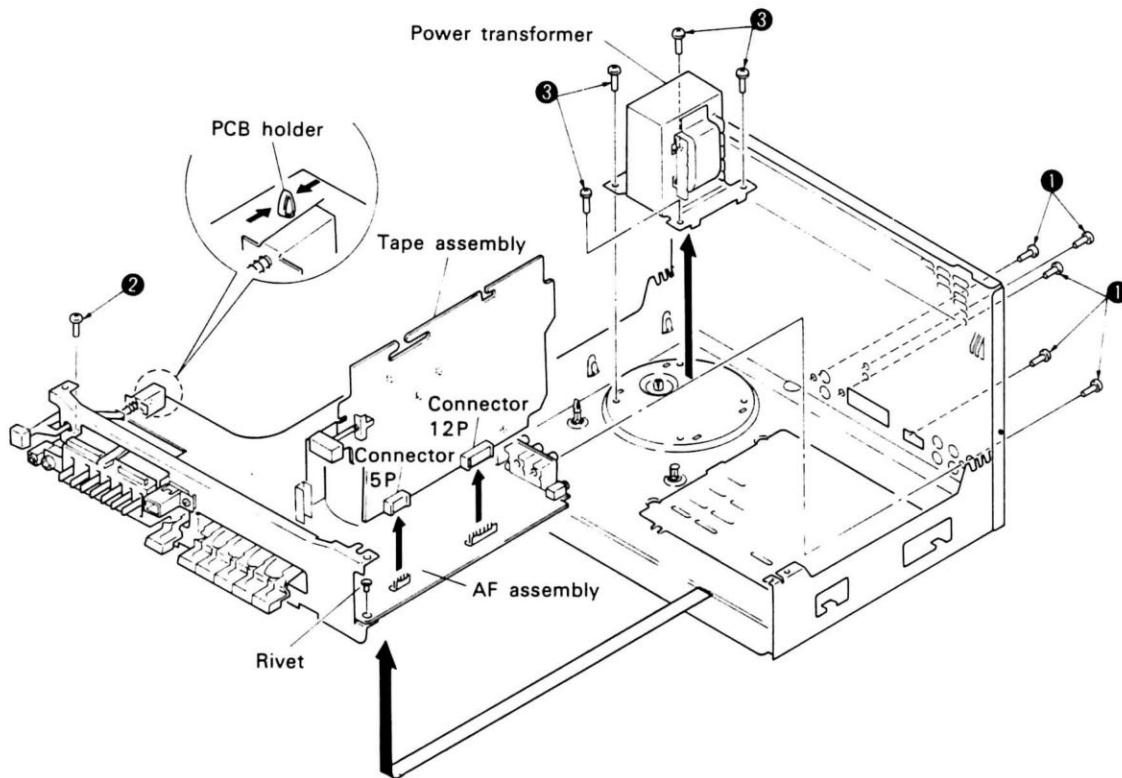


Fig. 3-3 Removal of assembly tape assembly and power transformer

### 3-4 REPLACEMENT AND APPLYING OF BELT

1. Remove a screw ① and 2 screws ②, and remove the motor bracket.
2. How to apply the belt is as shown in Fig. 3-4.

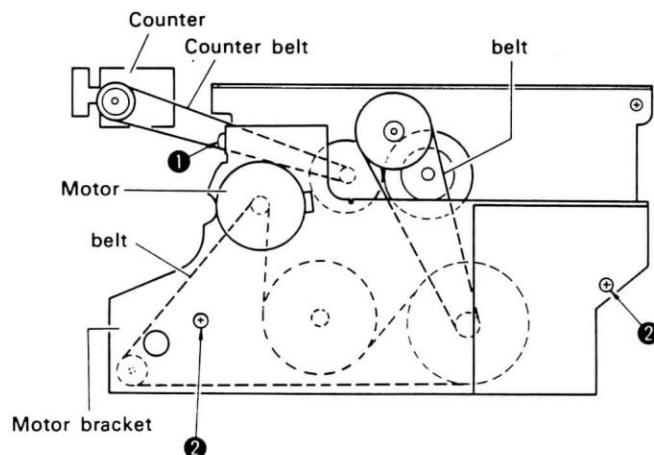


Fig. 3-4 Replacement and applying of belt

## 4. PARTS LOCATION

### NOTES:

- The **A** mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
- ★★ GENERALLY MOVES FASTER THAN ★**  
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "○" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

### Front Panel View

Knob B (FAST)  
AAE1002 (Black type)  
AAE1019 (Silver type)

Knob A (PLAY)  
AAE1001 (Black type)  
AAE1018 (Silver type)

Knob F (REC)  
AAE1006 (Black type)  
AAE1023 (Silver type)

Knob (DIRECTION)  
AAE1009

Knob (REVERSE MODE,  
REC/PLAY)  
AAE1008

Knob (POWER)  
AAD1003 (Black type)  
AAD1029 (Silver type)

Slide variable resistor (VR301)  
(MIC MIXING, GRAPHIC  
EQUALIZER, BALANCE)  
ACU1001

Knob C (FAST)  
AAE1003 (Black type)  
AAE1020 (Silver type)

Knob D (STOP/EJECT)  
AAE1004 (Black type)  
AAE1021 (Silver type)

Knob E (PAUSE)  
AAE1027 (Black type)  
AAE1028 (Silver type)

Counter  
AAW1001

Knob (DOLBY NR OFF-ON)  
AAD1005 (Black type)  
AAD1031 (Silver type)



VOLUME base  
AAK1001 (Black type)  
AAK1065 (Silver type)

Knob (VOLUME)  
AAE1010 (Black type)  
AAE1025 (Silver type)

Knob (STEREO WIDE, TUNER,  
VIDEO, CD, PHNO, TAPE)  
AAD1004 (Black type)  
AAD1030 (Silver type)

**Rear Panel View**

Bonnet case  
ANE1002 (Black type)  
ANE1031 (Silver type)

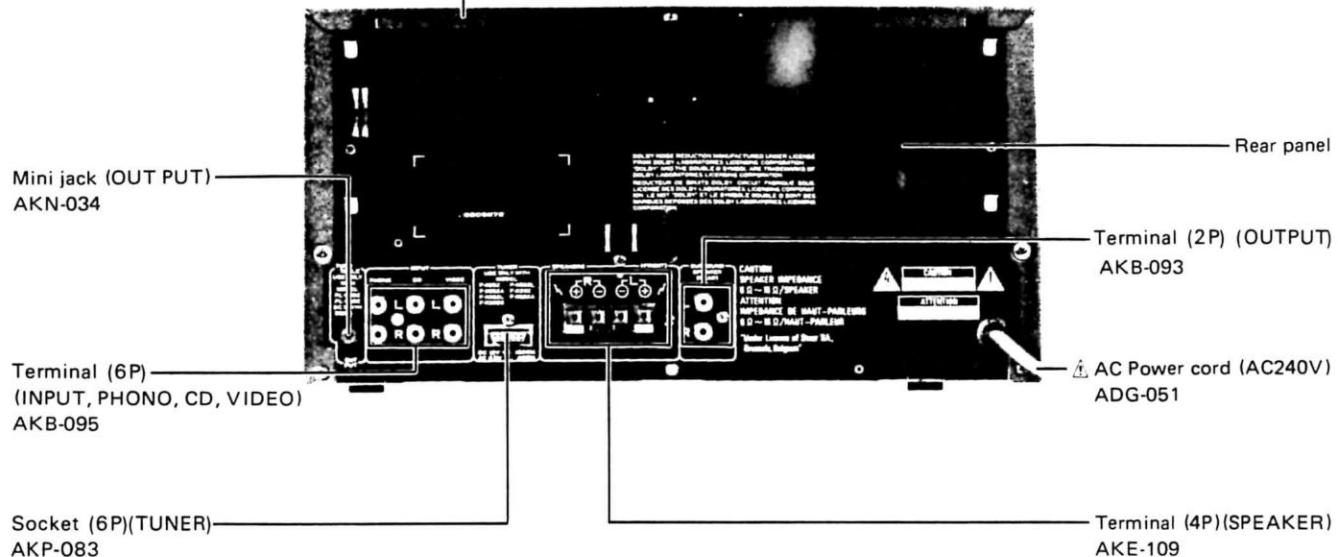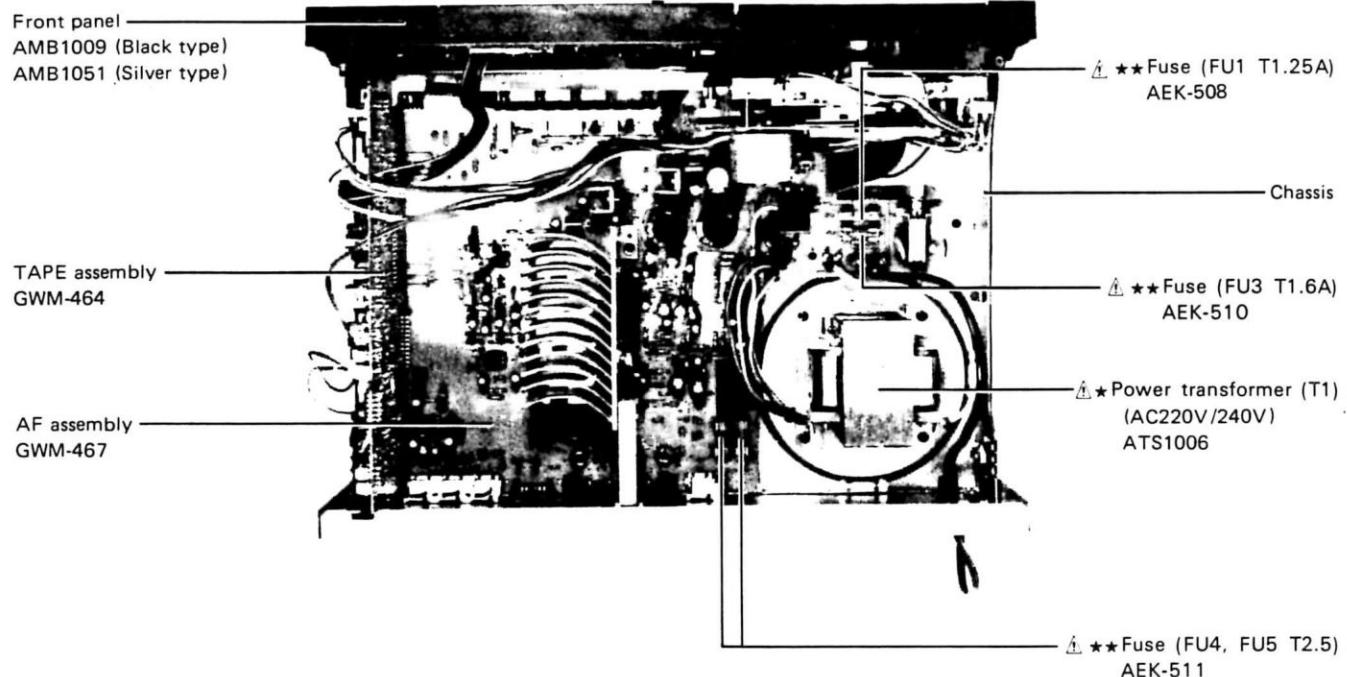**Top View with Bonnet Case Removed**

# 5. ELECTRICAL PARTS LIST

## NOTES:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

*Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).*

560Ω	56 × 10 <sup>1</sup>	561 . . . . . RD4PS 56J J
47kΩ	47 × 10 <sup>3</sup>	473 . . . . . RD4PS 47K J
0.5Ω	0R5 . . . . .	RN2H 0R5 K
1Ω	010 . . . . .	RS1P 010 K

*Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).*

5.62kΩ	562 × 10 <sup>1</sup>	5621 . . . . . RN4SR 5621 F
--------	-----------------------	-----------------------------

- The **I** mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
- ★★ GENERALLY MOVES FASTER THAN ★**  
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "◎" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

## Miscellaneous Parts

### P.C BOARD ASSEMBLIES

Mark	Symbol & Description	Part No.
	TAPE assembly	GWM-464
	AF assembly	GWM-467
	EQ assembly	Non supply
	MIC assembly	Non supply
	VR assembly	Non supply
	LED assembly	Non supply
	LED assembly	Non supply

## OTHERS

Mark	Symbol & Description	Part No.
▲ ★	T1 Power transformer (AC 220V/240V)	ATS1006
▲ ★★	FU1 Fuse (T1.25A)	AEK-508
▲ ★★	FU3 Fuse (T1.6A)	AEK-510
▲ ★★	FU4, FU5 Fuse (T2.5A)	AEK-511
▲	AC Power cord (AC 240V)	ADG-051
▲	Strain relief	AEC-882

## TAPE Assembly (GWM-464) SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC501 PRE AMP	BA3416L
★★	IC701 TR-ARRAY	LB1214
★★	IC703 OP-AMP IC	M5218LF
★★	IC801 DECK CONTROL	PDE013
★★	IC601 DOLBY-B IC	TA7719P
★★	IC503 E-SW IC	μPC1290C
★★	Q505, Q506, Q706, Q707, Q803, Q807	2SA1115 (2SA933S)

Mark	Symbol & Description	Part No.
★★	Q802	2SA1515
★★	Q511, Q512, Q518, Q601 Q602, Q703, Q704, Q705 Q708, Q709	2SC2603 (2SC1740S)
★★	Q701, Q702	2SD438
★★	Q710, Q711	2SC2878
★	D813	RD3.6ESB
★	D701—D706, D803, D807, D810, D812 D805	1SS131 RD5.1ESB

## COIL, TRANSFORMER AND FILTERS

Mark	Symbol & Description	Part No.
F601, F602	DOLBY Filter	ATF-210
L701	Inductor	ATH-094
L704, L705	Inductor	ATH-117
L702, L703	Inductor	ATH-119
L706, L707	Trap coil	ATM-037
T701	Bias oscillator transformer	ATX-043

## SWITCHES

Mark	Symbol & Description	Part No.
★★	S701 Push switch (NOISE REDUCTION ON/OFF)	SUJL2S

## CAPACITORS

Mark	Symbol & Description	Part No.
C701	(1500pF/630V)	ACE-133
C513, C514, C747, C748		CCCSL101J50 (CCDSL101J50)

<u>Mark</u>	<u>Symbol &amp; Description</u>	<u>Part No.</u>
C751		CCCSL221J50 (CCDSL221J50)
C803		CCCSL680J50 (CCDSL680J50)
C705, C753		CCCSL101K500 (CCDSL101K500)
C752, C706		CCDSL220K500
C619, C620		CEASR33M50
C749		CEASR47M50
C617, C618		CEASOR1M50
C507, C508, C601, C602, C730, C731, C750, C804,		CEAS010M50
C613, C614, C625, C801		CEAS100M25
C535		CEAS331M10
C536, C623, C624, C711, C712, C732, C733		CEAS2R2M50
C517, C518		CEAS220M16
C509, C510, C622		CEAS221M10
C715, C723		CEAS330M16
C524, C525, C603, C604, C710		CEAS4R7M50
C521, C537, C538, C621, C703, C704, C728, C729, C802		CEAS470M16
C526, C527, C713, C714		CKCYB681K50 (CKDYB681K50)
C605, C606		CKCYB821K50 (CKDYB821K50)
C707, C709		CQMA103J50
C702 C703, C739, C740, C743, C744		CQMA123K50 CQMA153J50
C609, C610 C519, C520, C711, C722		CQMA182J50 CQMA273J50
C724, C725 C515, C516, C607, C608 C611, C612 C615, C616, C718, C719, C720, C721		CQMA332J50 CQMA333J50 CQMA472J50 CQMA473J50
C726, C727		CQMA683J50

## RESISTORS

*NOTE. When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.*

<u>Mark</u>	<u>Symbol &amp; Description</u>	<u>Part No.</u>
VR703, VR704	Semi-fixed	VRTB6VS223
VR701, VR702	Semi-fixed	VRTM6H104
VR503, VR504	Semi-fixed	VRTM6H202
R703, R825, R718		RD1/2PM□□□J
R521, R621, R733, R787		RD1/4PM□□□J
Other resistors		RD1/8PM□□□J

## OTHER

<u>Mark</u>	<u>Symbol &amp; Description</u>	<u>Part No.</u>
	Socket 12P (TUNER)	AKM-106

## AF Assembly (GWM-467)

### SEMICONDUCTORS

<u>Mark</u>	<u>Symbol &amp; Description</u>	<u>Part No.</u>
★★	IC101, IC102 OP-AMP IC	M5218P
▲ ★★	IC401 AUDIO IC	STK4141-2S
▲ ★★	IC402, IC403 REGULATOR IC	μPC78M12H
★★	Q401	2SB1015
★★	Q101—Q108, Q402, Q403	2SC1740S (2SC2603)
★★	Q404	2SD438
★	D401	KZL150
★	D402	RD13EB
▲ ★	D407—D412	S5566 (11E2)
★	D417	RD5.1EB
★	D414	RD16EB
★	D102, D103, D415	1SS131
★	D403	1S2471
▲ ★	D413	4D4B44 (RBV402)
★	D416	RD15ESB

## SWITCHES AND RELAY

<u>Mark</u>	<u>Symbol &amp; Description</u>	<u>Part No.</u>
▲ ★★	S103 Push switch (POWER)	ASG-551
★★	S102 Push switch (STEREO WIDE)	ASG1002
★★	S101 Push switch (PHONO, CD, VIDEO, TUNER, TAPE)	SUJ8L22224L
▲	RY401 Relay (PROTECTION)	ASR-111

## COILS

<u>Mark</u>	<u>Symbol &amp; Description</u>	<u>Part No.</u>
L401, L402	AF Choke coil	ATH-053

## CAPACITORS

<u>Mark</u>	<u>Symbol &amp; Description</u>	<u>Part No.</u>
▲	C433 (0.01 μF/AC400V)	ACG1002
▲	C430, C435 (0.01 μF/150V)	ACG-190
▲	C431, C432	ACH-249
C101, C103, C110, C112, C403—C406		CCCSL101J50 (CCDSL101J50)
C141, C142		CCCSL121J50
C424		CEASR47M100
C117, C118, C128,  C121, C122, C130		CEAS010M50
C119, C120, C411, C413, C416, C426, C428		CEAS100M50
C135, C136		CEASR15M50
C412, C434		CEAS101M50
C102, C107, C111, C115, C125, C126, C131, C132, C137, C138, C401, C402		CEAS2R2M50
C310, C317		CEAS220M16

<b>Mark</b>	<b>Symbol &amp; Description</b>	<b>Part No.</b>
▲	C407—C410, C423, C425	CEAS221M25
	C427	CEAS332M25
	C106, C108, C109, C116, C129, C415, C417, C420, C421	CEAS470M25
	C414, C429	CEAS470M50
	C422	CEAS471M6
	C127, C440	CKCYF473Z50 (CKDYF473Z50)
	C139, C140	CKCYB681K50
	C123, C124	CKCYB332K50
	C104, C113	CQMA242J50
	C418, C419, C441, C442	CQMA473K50
	C105, C114	CQMA822J50
	C133, C134	CQSA391J50

## RESISTORS

*NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.*

<b>Mark</b>	<b>Symbol &amp; Description</b>	<b>Part No.</b>
▲	R441, R442	RD1/2PMFL100J
	R432, R437, R438, R424,	RD1/2PM□□□J
	R425,	
▲	R419—R422	RD1/4PMF100J
▲	R415	RD1/4PMFL101J
▲	R413	RD1/4PMFL222J
	R403—R411, R414,	RD1/4PM□□□J
	R416—R418, R426—R430	
	R434	
▲	R412, R435	RFA1/4PL101J
▲	R433	RFA1/4PL121J
▲	R423	RS1LMF681J
▲	R443	RS2LMF271J
▲	R431, R436	RS2LMF4R7J
▲	R444	RS2LMF221J
	Other resistors	RD1/8PM□□□J

## OTHERS

<b>Mark</b>	<b>Symbol &amp; Description</b>	<b>Part No.</b>
	Terminal (OUTPUT) (2P)	AKB-093
	Terminal (INPUT, PHONO, CD, AKB-095 VIDEO) (6P)	AKB-095
	Terminal (SPEAKER)	AKE-109
	Mini jack (OUTPUT)	AKN-034
	6P Socket (TUNER)	AKP-083
	Rivet	AEC-940

## EQ Assembly SEMICONDUCTOR

<b>Mark</b>	<b>Symbol &amp; Description</b>	<b>Part No.</b>
★★	IC301, IC302 AUDIO IC	BA3812L

## CAPACITORS

<b>Mark</b>	<b>Symbol &amp; Description</b>	<b>Part No.</b>
	C313, C326	CEASR15M50
	C315, C328	CEASR68M50
	C308, C323	CEAS101M10
	C301, C302	CEAS4R7M50
	C309	CEAS470M25
	C305, C318	CKCYB182K50 (CKDYB182K50)
	C307, C322	CKCYB331K50 (CKDYB331K50)
	C303, C320	CKCYB391K50 (CKDYB391K50)

C312, C325 CKCYB392K50  
(CKDYB392K50)

C304, C321 CKCYB682K50  
(CKDYB682K50)

C306, C319 CKCYX153M25  
(CKDYX153M25)

C314, C327 CKCYX183M25  
(CKDYX183M25)

C316, C329 CKCX393M25  
(CKCX393M25)

C311, C324 CKCYX683M25  
(CKDYX683M25)

## RESISTORS

*NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.*

<b>Mark</b>	<b>Symbol &amp; Description</b>	<b>Part No.</b>
★★	VR301 Slide variable resistor	ACU1001

Other resistors RD1/8PM□□□J

## MIC Assembly

### SEMICONDUCTORS

<b>Mark</b>	<b>Symbol &amp; Description</b>	<b>Part No.</b>
★★	Q202	2SA933S (JA101)
★★	Q201	2SC1740S (2SC2603)

## CAPACITORS

<b>Mark</b>	<b>Symbol &amp; Description</b>	<b>Part No.</b>
	C202	CEASR47M50
	C206	CEAS101M25
	C204	CEAS100M50
	C205	CEAS470M25
	C201	CKCYB102K50 (CKDYB102K50)
	C203	CKCYB392K50
	C207, C208	CKCYF473Z50 (CKDYF473Z50)

**RESISTORS**

*NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.*

Mark	Symbol & Description	Part No.
	All resistors	RD1/8PM□□□J

**OTHERS**

Mark	Symbol & Description	Part No.
	MIC jack (MIC)	AKN-052
	Mini jack (PHONES)	AKN1001

**VR Assembly**

Mark	Symbol & Description	Part No.
★★	VR401 (VOLUME)	ACU1002

**LED Assembly  
SEMICONDUCTOR**

Mark	Symbol & Description	Part No.
★	D101 LED	AEL-443

**LED Assembly  
SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
★★	Q902	2SC2603
★	D911 LED	AEL-382
★	D909, D910 LED	AEL-424
★	D908	1SS131

**RESISTORS**


*NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.*

Mark	Symbol & Description	Part No.
	All resistors	RD1/8PM□□□J

## 6. P.C.BOARDS CONNECTION DIAGRAM


A

CASSETTE MECHANISM ASSEMBLY

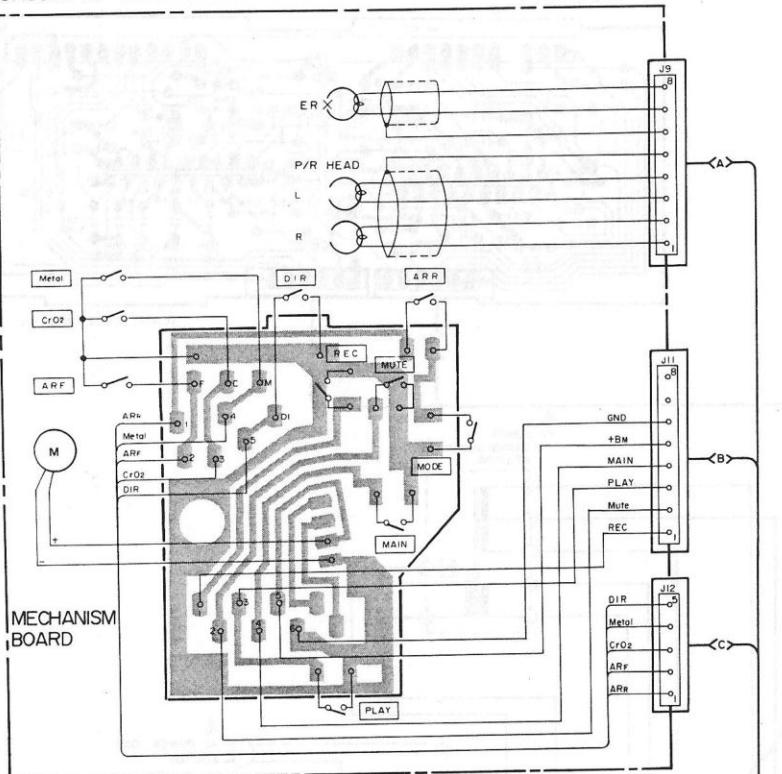

B

TAPE ASSEMBLY (GWM-464)

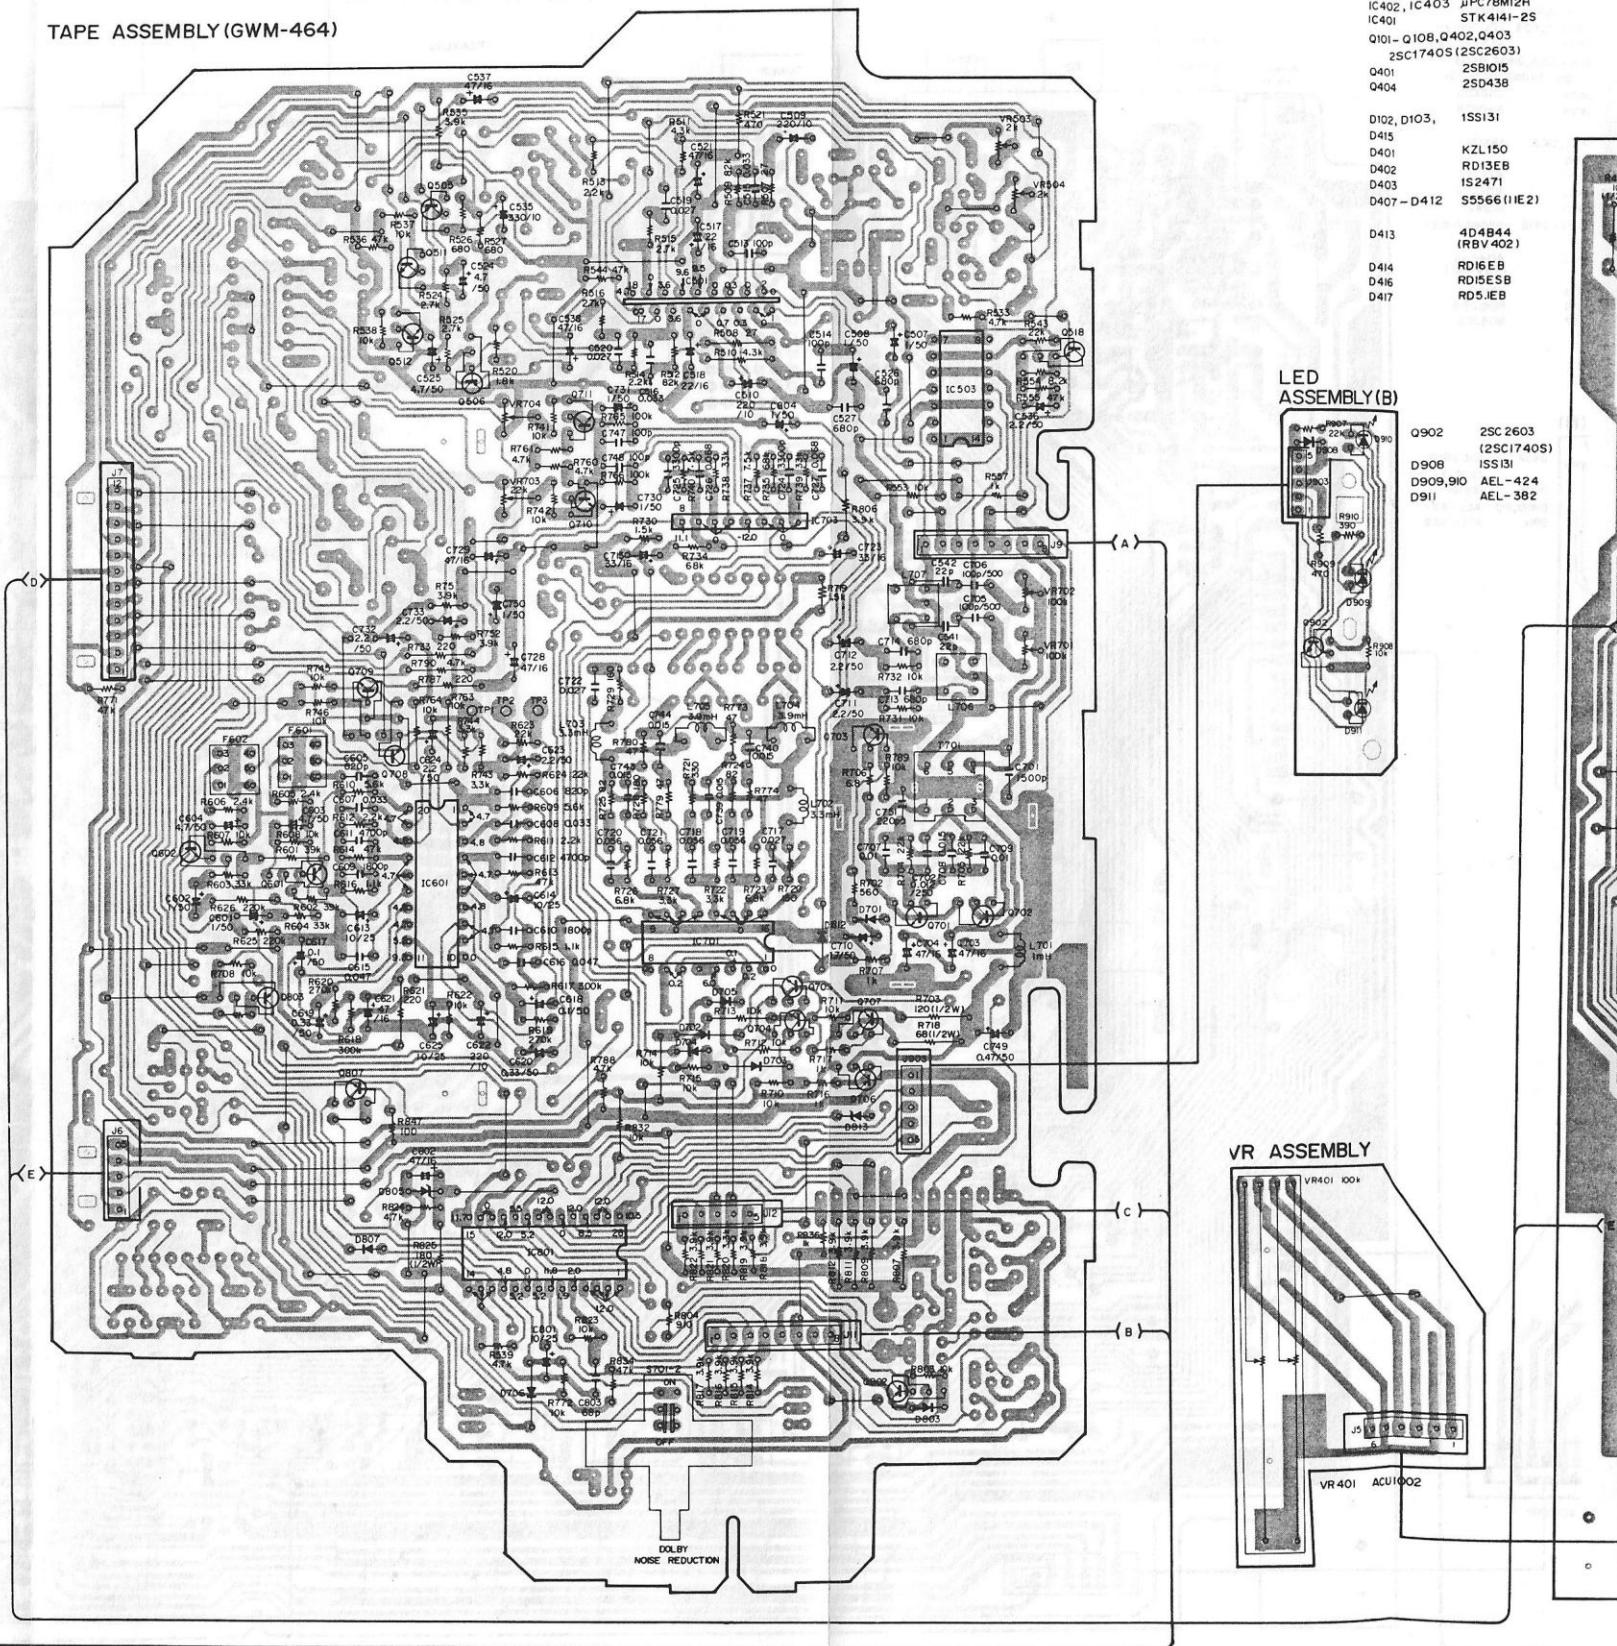

C

IC501 BA3416L Q511, Q512, Q518,  
Q601, Q602, Q703-705,  
Q708, Q709 2SC 2603(2SC1740S)  
IC601 TA7719P Q505, Q506, Q706, Q707,  
Q803, Q807 2SA1115 (2SA933S)  
IC701 LB1214 Q802 2SA1115  
IC703 M5218LF Q701, Q702 2SD438  
IC801 PDE013 Q710, Q711 2SC2878  
D805 D806, D803, D807, D812  
D813 ISS131

D

7

8

9

10

11

12

MARDANG CONNECTION DIAGRAM

IC101

IC102

Q105

Q106

Q107

Q108

Q109

Q104

IC401

IC402

IC403

Q402

Q403


Q404

Q101


Q102

## AF ASSEMBLY (GWM-467)

C101, C102 M5218P  
 C402, IC403  $\mu$ PC78M12H  
 C401 STK4141-2S  
 J101-Q108, Q402, Q403 2SC1740S (2SC2603)  
 2SB1015  
 2SD438  
 J102, D103, ISS131  
 J145 KZL150  
 J401 RD13EB  
 J402 IS247I  
 J403 S5566 (II-E2)  
 J407-D412 404B44 (RBV402)  
 J413 RD16EB  
 J416 RD15ESB  
 J417 RD5IEB

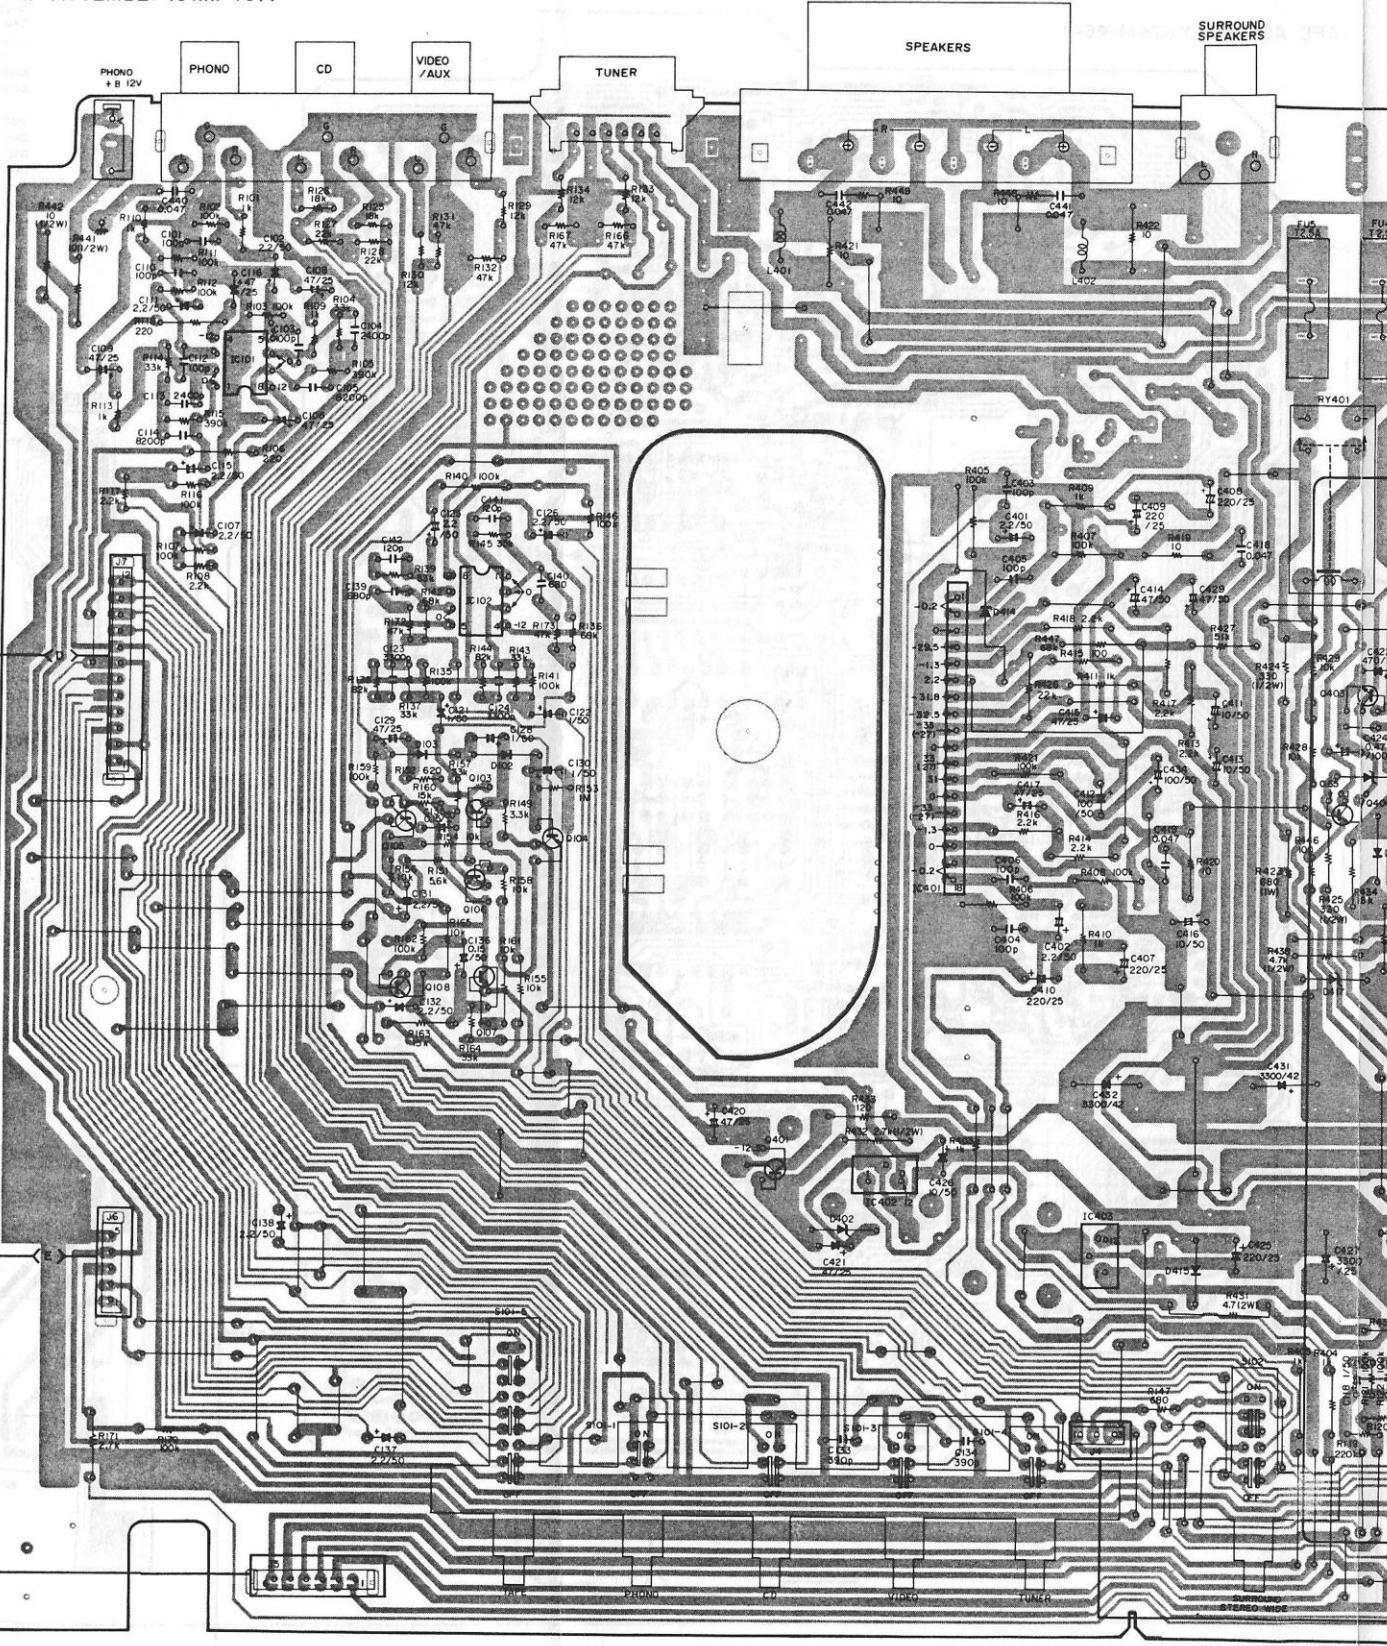



## EQ ASSEMBLY

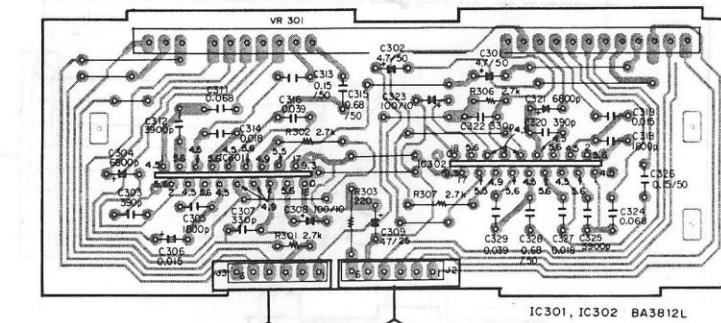

IC301, IC302 BA3812L

T1: POWER TRANSFORMER AT51006

AC POWER CORD  
 ADG-051  
 AC 240V  
 50/60Hz

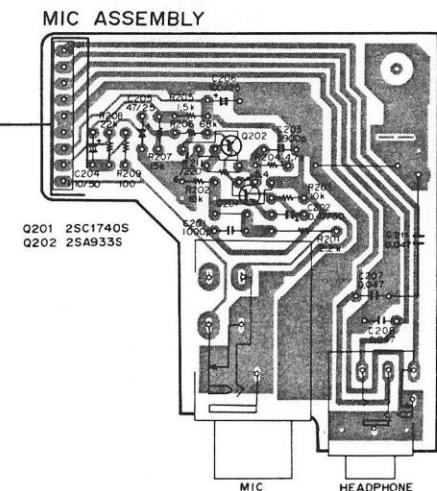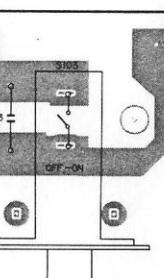

## MIC ASSEMBLY

Q201 2SC1740S  
 Q202 2SA933S

D101 AEL-443

## LED ASSEMBLY (A)

D101 AEL-443

A

B

C

D

7

8

9

10

11

12

## 7. SCHEMATIC DIAGRAM

1

2



3

4

5

6

CASSETTE MECHANISM ASSEMBLY

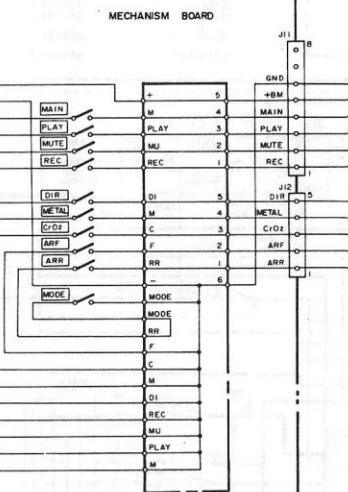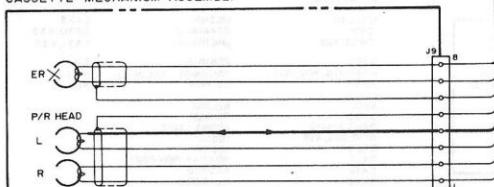

IC501 BA816L  
IC703 LS124  
IC801 MS218L  
IC801 PDE013  
IC601 TA7719P  
IC503 μC1290C

Q505,506,706,707,803,807  
Q802 2SA115 (2SA933S)  
Q511,512,518,601,602,  
705,706,708,709  
Q701,702  
D805  
D701-706,803,807,812  
DB13 ACE-153  
C701 ATF-210

L701 ATH-094  
L702,705 ATH-117  
L702,703 ATH-119  
L706,707 ATC-057




T701 ATX - 043  
S701 SUJL2S

LED ASSEMBLY (B)

J901

## NOTE:

The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

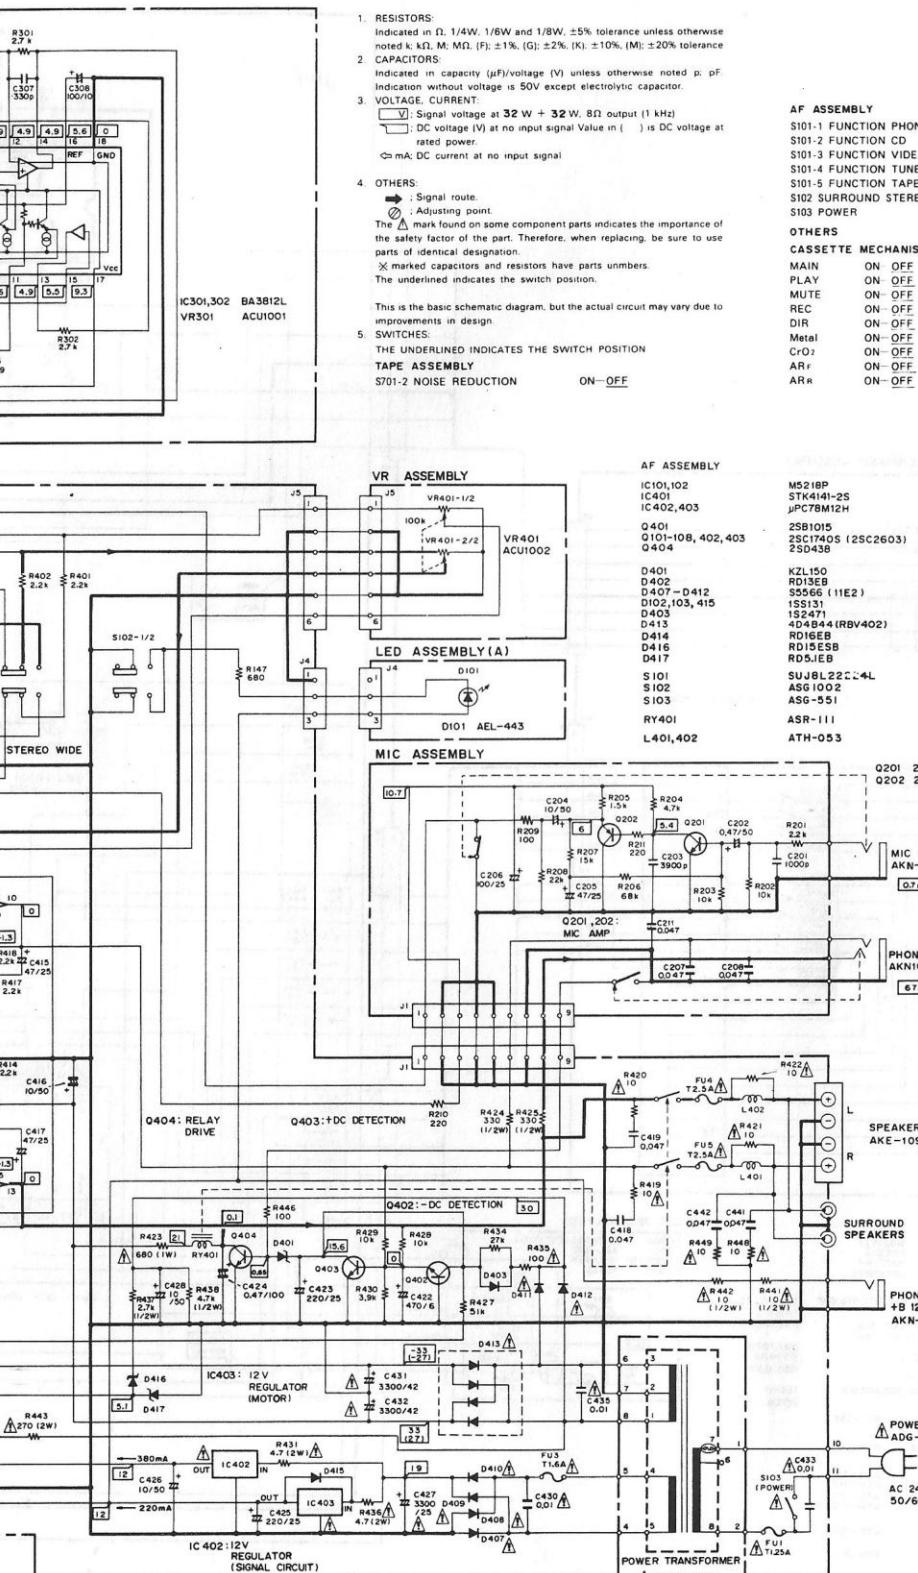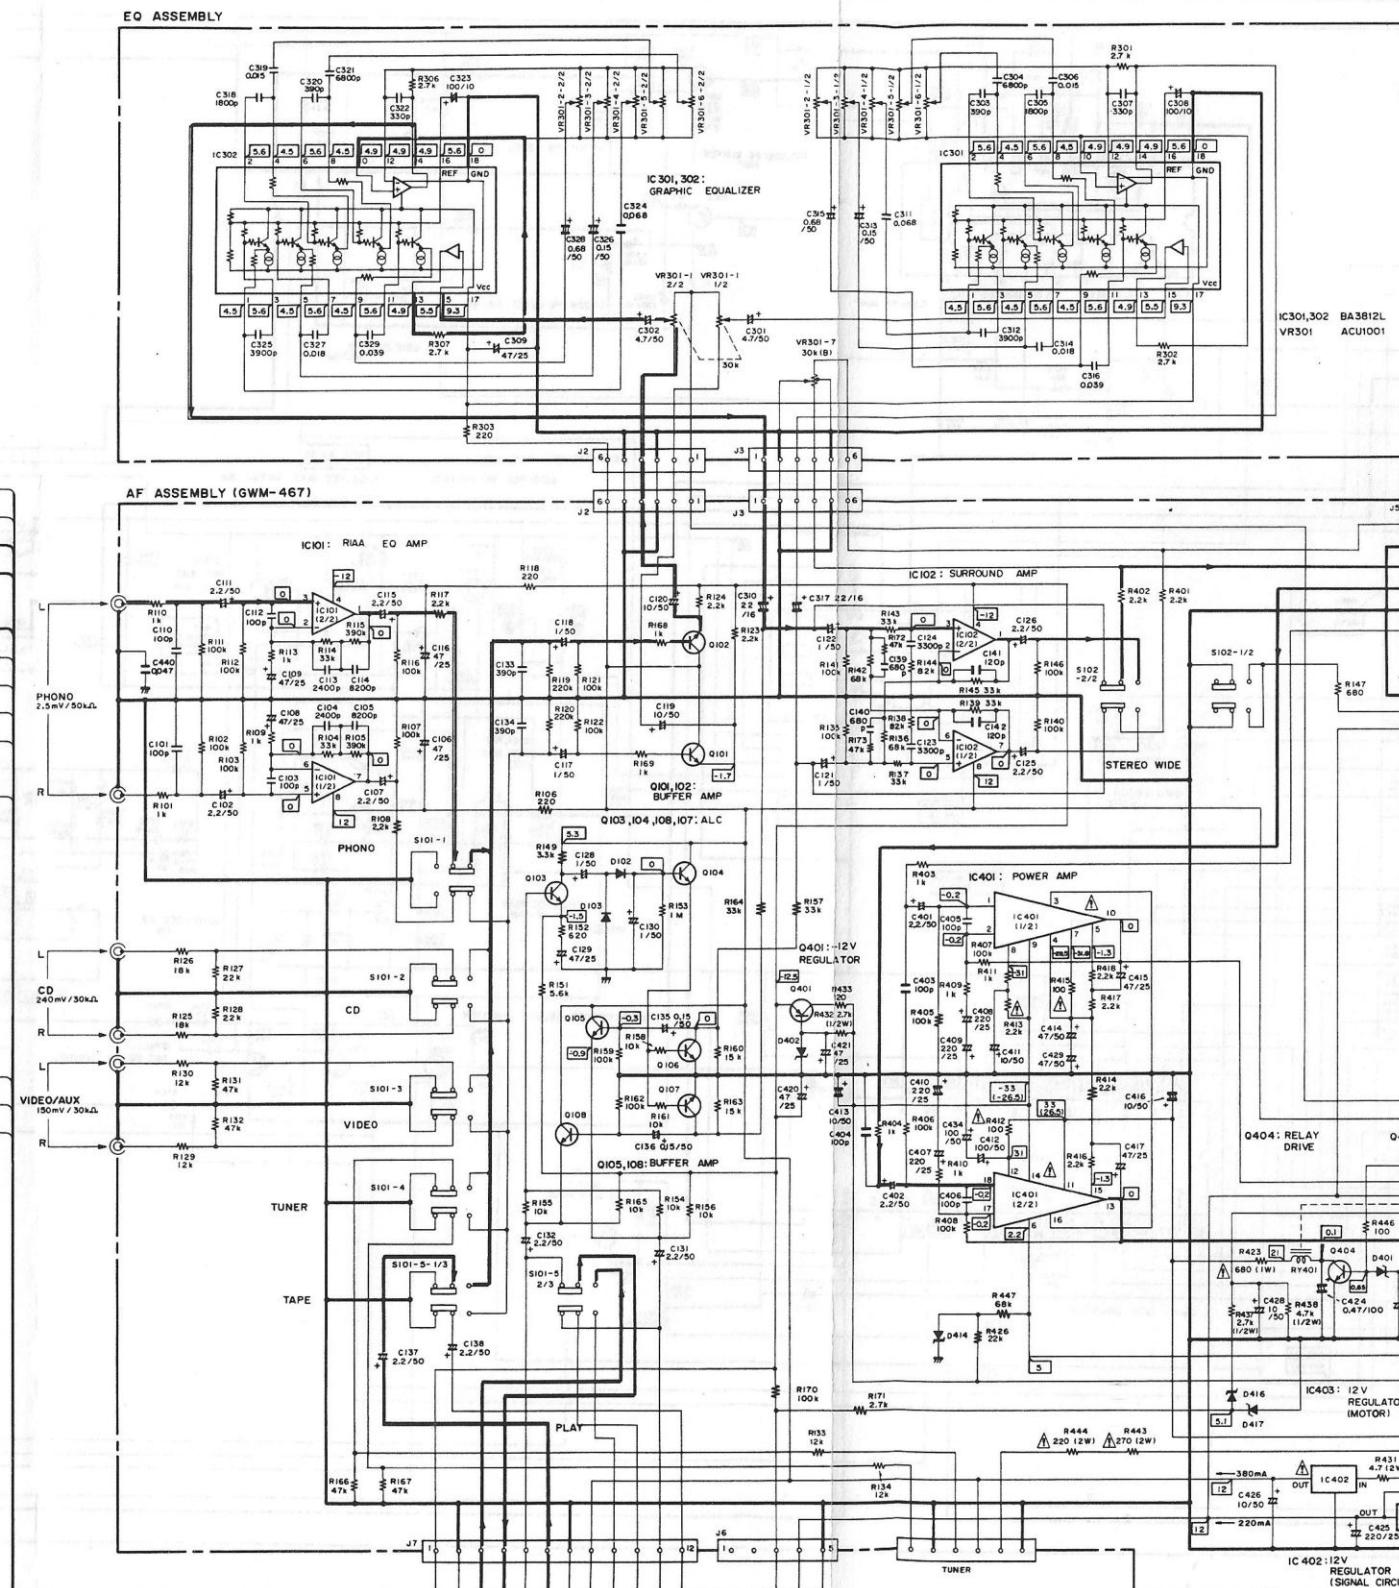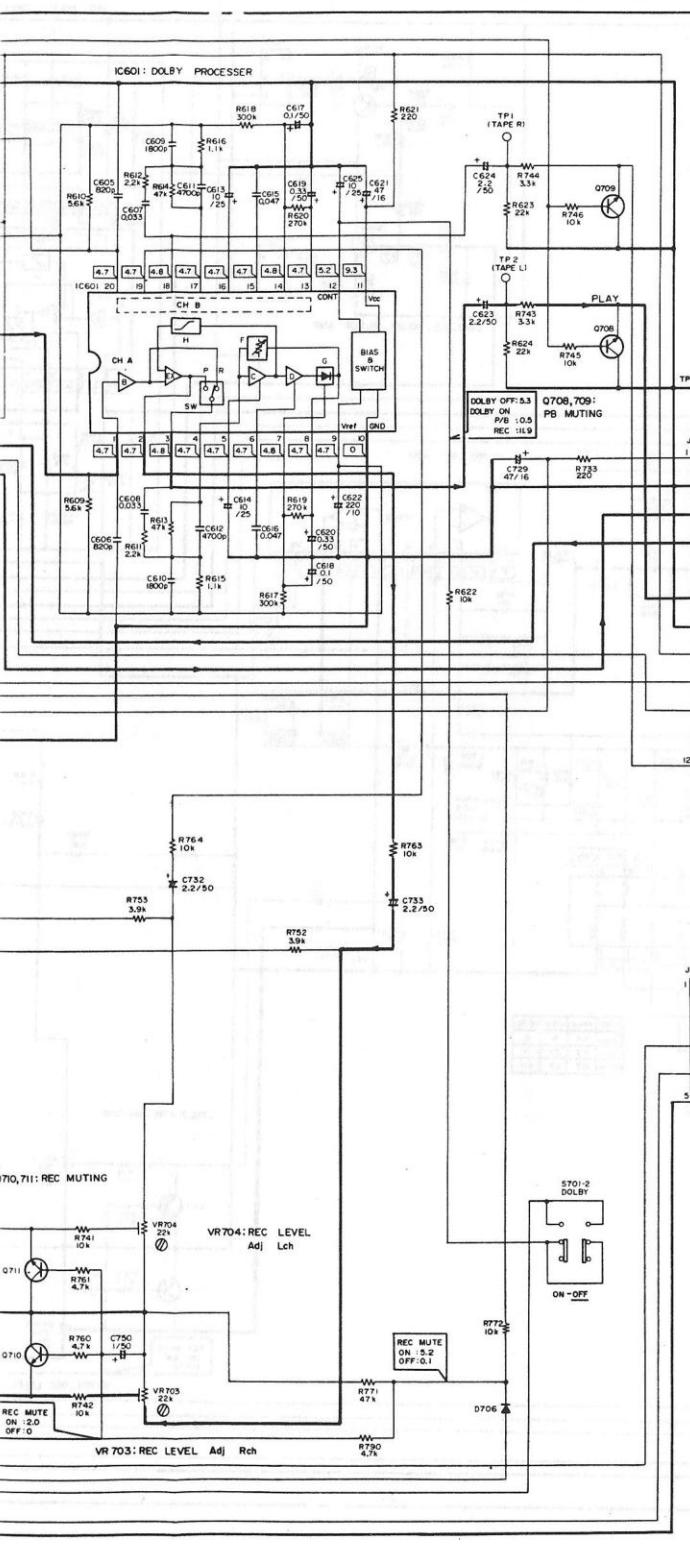

AF ASSEMBLY	
S101-2	FUNCTION PHONO ON-OFF
S101-3	FUNCTION CD ON-OFF
S101-4	FUNCTION VIDEO ON-OFF
S101-5	FUNCTION TUNER ON-OFF
S101-6	FUNCTION TAPE ON-OFF
S102	SURROUND STEREO WIDE ON-OFF
S103	POWER ON-OFF
OTHERS	
CASSETTE MECHANISM ASSEMBLY	
MAIN	ON OFF
PLAY	ON OFF
MUTE	ON OFF
REC	ON OFF
DIR	ON OFF
Metal	ON OFF
CrO <sub>2</sub>	ON OFF
AR <sub>r</sub>	ON OFF
AR <sub>a</sub>	ON OFF

IC101,102	M521B	C433	ACG102
IC401	STK414-2S	C430,435	ACG190
IC402,403	μPC78M12H	C431,432	ACH-249
Q401	2S21015		
Q402	2S217405 (2SC2603)		
Q403	2S2438		
D401	KZL150		
D402	55566 (1IE2)		
D403	1SS131		
D404	1S2471		
D414	1S2474 (RBV402)		
D416	R016EB		
D417	RD15ESB		
S101	RDS15EB		
S102	SUJBL22-L4L		
S103	ASG1002		
RY401	ASG-551		
L401,402	ASR-111		
	ATH-053		

IC101,102	M521B	C433	ACG102
IC401	STK414-2S	C430,435	ACG190
IC402,403	μPC78M12H	C431,432	ACH-249
Q401	2S21015		
Q402	2S217405 (2SC2603)		
Q403	2S2438		
D401	KZL150		
D402	55566 (1IE2)		
D403	1SS131		
D404	1S2471		
D414	1S2474 (RBV402)		
D416	R016EB		
D417	RD15ESB		
S101	RDS15EB		
S102	SUJBL22-L4L		
S103	ASG1002		
RY401	ASG-551		
L401,402	ASR-111		
	ATH-053		

IC101,102	M521B	C433	ACG102
IC401	STK414-2S	C430,435	ACG190
IC402,403	μPC78M12H	C431,432	ACH-249
Q401	2S21015		
Q402	2S217405 (2SC2603)		
Q403	2S2438		
D401	KZL150		
D402	55566 (1IE2)		
D403	1SS131		
D404	1S2471		
D414	1S2474 (RBV402)		
D416	R016EB		
D417	RD15ESB		
S101	RDS15EB		
S102	SUJBL22-L4L		
S103	ASG1002		
RY401	ASG-551		
L401,402	ASR-111		
	ATH-053		

IC101,102	M521B	C433	ACG102
IC401	STK414-2S	C430,435	ACG190
IC402,403	μPC78M12H	C431,432	ACH-249
Q401	2S21015		
Q402	2S217405 (2SC2603)		
Q403	2S2438		
D401	KZL150		
D402	55566 (1IE2)		
D403	1SS131		
D404	1S2471		
D414	1S2474 (RBV402)		
D416	R016EB		
D417	RD15ESB		
S101	RDS15EB		
S102	SUJBL22-L4L		
S103	ASG1002		
RY401	ASG-551		
L401,402	ASR-111		
	ATH-053		

IC101,102	M521B	C433	ACG102
IC401	STK414-2S	C430,435	ACG190
IC402,403	μPC78M12H	C431,432	ACH-249
Q401	2S21015		
Q402	2S217405 (2SC2603)		
Q403	2S2438		
D401	KZL150		
D402	55566 (1IE2)		
D403	1SS131		
D404	1S2471		
D414	1S2474 (RBV402)		
D416	R016EB		
D417	RD15ESB		
S101	RDS15EB		
S102	SUJBL22-L4L		
S103	ASG1002		
RY401	ASG-551		
L401,402	ASR-111		
	ATH-053		

IC101,102	M521B	C433	ACG102
IC401	STK414-2S	C430,435	ACG190
IC402,403	μPC78M12H	C431,432	ACH-249
Q401	2S21015		
Q402	2S217405 (2SC2603)		
Q403	2S2438		
D401	KZL150		
D402	55566 (1IE2)		
D403	1SS131		
D404	1S2471		
D414	1S2474 (RBV402)		
D416	R016EB		
D417	RD15ESB		
S101	RDS15EB		
S102	SUJBL22-L4L		
S103	ASG1002		
RY401	ASG-551		
L401,402	ASR-111		
	ATH-053		


IC101,102	M521B	C433	ACG102
IC401	STK414-2S	C430,435	ACG190
IC402,403	μPC78M12H	C431,432	ACH-249
Q401	2S21015		
Q402	2S217405 (2SC2603)		
Q403	2S		

## 8. EXPLODED VIEWS







### 8.1 Exterior

#### NOTES:


- Parts without part number cannot be supplied.
- The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks and .
- ★★ GENERALLY MOVES FASTER THAN ★**  
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "◎" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

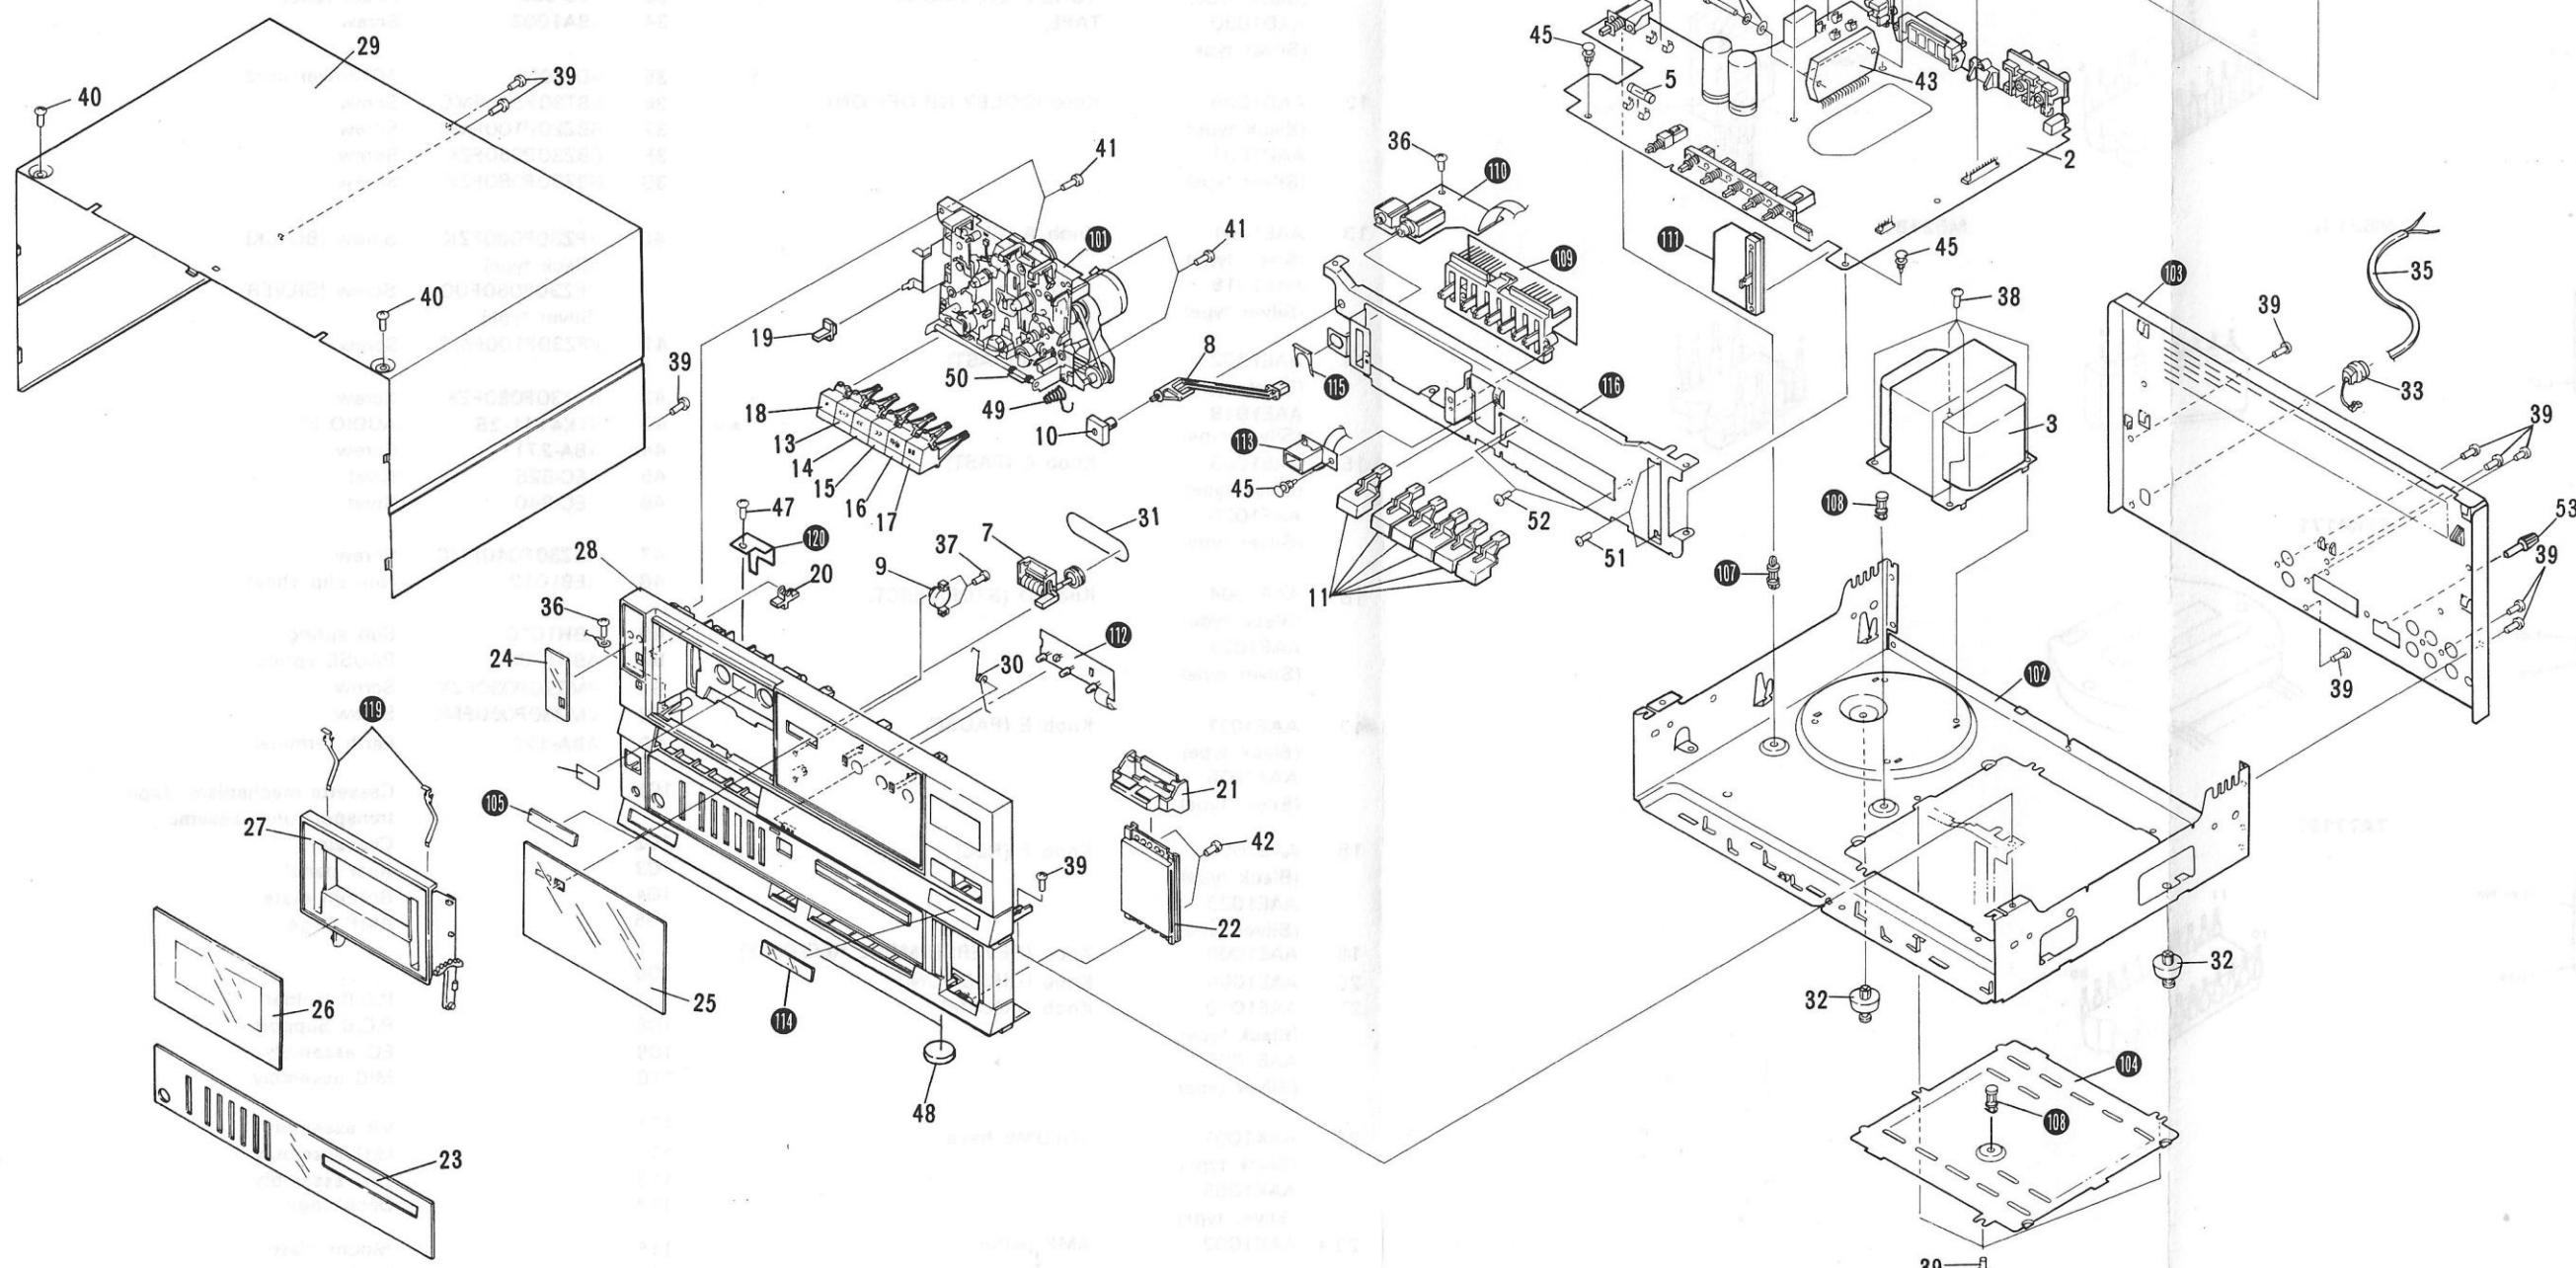


## External Appearance of Transistors and ICs

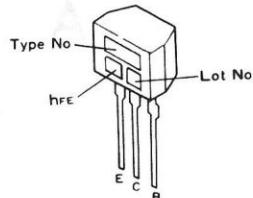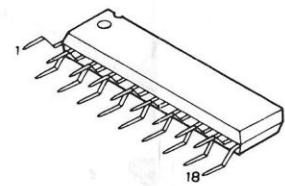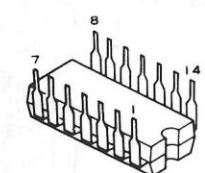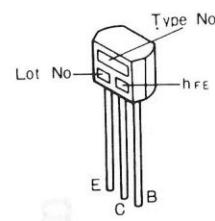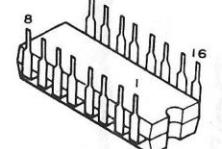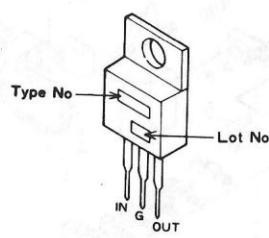2SA933S  
2SC1740SBA3812L  
BA3416L $\mu$ PC1290C2SA1115  
2SC2603LB1214  
PDE013 $\mu$ PC78M12H



2SB1015

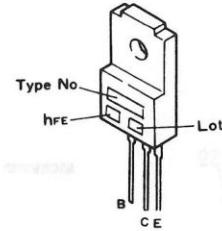


M5218LF

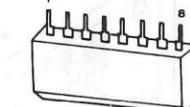


M5218P

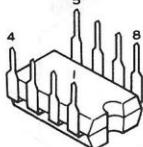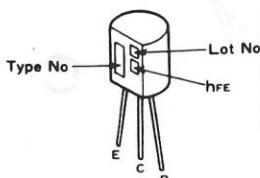2SA1515  
2SC2878


STK4171

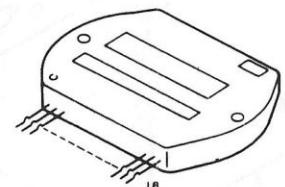

2SD438

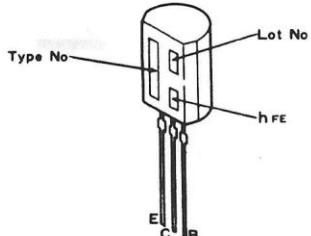


TA7719F

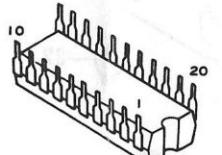

## Parts List

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1	GWM-464	TAPE assembly		25	AAK 1014	Deck panel (B)
	2	GWM-467	AF assembly		26	AAK1015	Door panel
▲ *	3	ATS1006	Power transformer (T1) (AC 220V/240V)		27	AAN1001	Door
▲	4	AEK-508	Fuse (FU1 T1.25A)		28	AMB 1009 (Black type)	Front panel
▲	5	AEK-510	Fuse (FU3 T1.6A)		6	AEK-511	
▲	6	AEK-511	Fuse (FU4, FU5 T2.5A)		7	AAW1001	
▲	7	AAW1001	Counter		8	AMR1003	
▲	8	AMR1003	Power joint		9	AMR1006	Damper assembly
	10	AAD1003 (Black type)	Knob (POWER)		29	ANE1002 (Black type)	Bonnet case
		AAD1029 (Silver type)			30	ANE1031 (Silver type)	
	11	AAD1004 (Black type)	Knob (STEREO WIDE, TUNER, CD, PHONO, TAPE)	★	31	AEB-308	Counter belt
		AAD1030 (Silver type)		32	AEC-847	Leg assembly	
	12	AAD1005 (Black type)	Knob (DOLBY NR OFF-ON)	▲	33	AEC-882	Strain relief
		AAD1031 (Silver type)		34	ABA1003	Screw	
	13	AAE1001 (Black type)	Knob A (PLAY)		35	ADG-051	AC Power cord
		AAE1018 (Silver type)		36	BBT30P080FMC	Screw	
	14	AAE1002 (Black type)	Knob B (FAST)		37	BBZ20P100FMC	Screw
		AAE1019 (Silver type)		38	BBZ30P060FZK	Screw	
	15	AAE1003 (Black type)	Knob C (FAST)	★★	39	BBZ30P080FZK	Screw
		AAE1020 (Silver type)					
	16	AAE1004 (Black type)	Knob D (STOP/EJECT)		40	VPZ30P080FZK (Black type)	Screw (BLACK)
		AAE1021 (Silver type)			41	VPZ30P080FUC (Silver type)	Screw (SILVER)
	17	AAE1027 (Black type)	Knob E (PAUSE)		42	VPZ30P100FMC	Screw
		AAE1028 (Silver type)		43	BPZ30P080FZK	Screw	
	18	AAE1006 (Black type)	Knob F (REC)		44	STK4141-2S	AUDIO IC
		AAE1023 (Silver type)		45	ABA-271	Screw	
	19	AAE1008	Knob (REVERSE MODE, REC/PLAY)		46	AEC-525	Rivet
	20	AAE1009	Knob (DIRECTION)		47	AEC-940	Rivet
	21	AAE1010 (Black type)	Knob (VOLUME)		48	AEB1012	Non slip sheet
		AAE1025 (Silver type)		49	ABH1010	Sub spring	
	22	AAK1001 (Black type)	VOLUME base		50	ABH1008	PAUSE spring
		AAK1065 (Silver type)		51	PMZ20P030FZK	Screw	
	23	AAK1002	AMP panel		52	VMZ30P060FMC	Screw
	24	AAK 1013 (Black type)	Deck panel (A)		53	ABA-176	Earth terminal
		AAK 1073 (Silver type)		101			Cassette mechanism (Tape transport unit) assembly
				102			Chassis
				103			Rear panel
				104			Bottom plate
				105			AMP bage
				.....			
				106			P.C.B Holder
				107			P.C.B Support
				108			EQ assembly
				109			MIC assembly
				110			
				111			VR assembly
				112			LED assembly
				113			LED assembly
				114			Deck bage
				115			Mount plate
				116			Unit stay
				117			Heat sink holder
				118			Heat sink
				119			Plate
				120			Mount plate

8.2 Tape Transport Unit

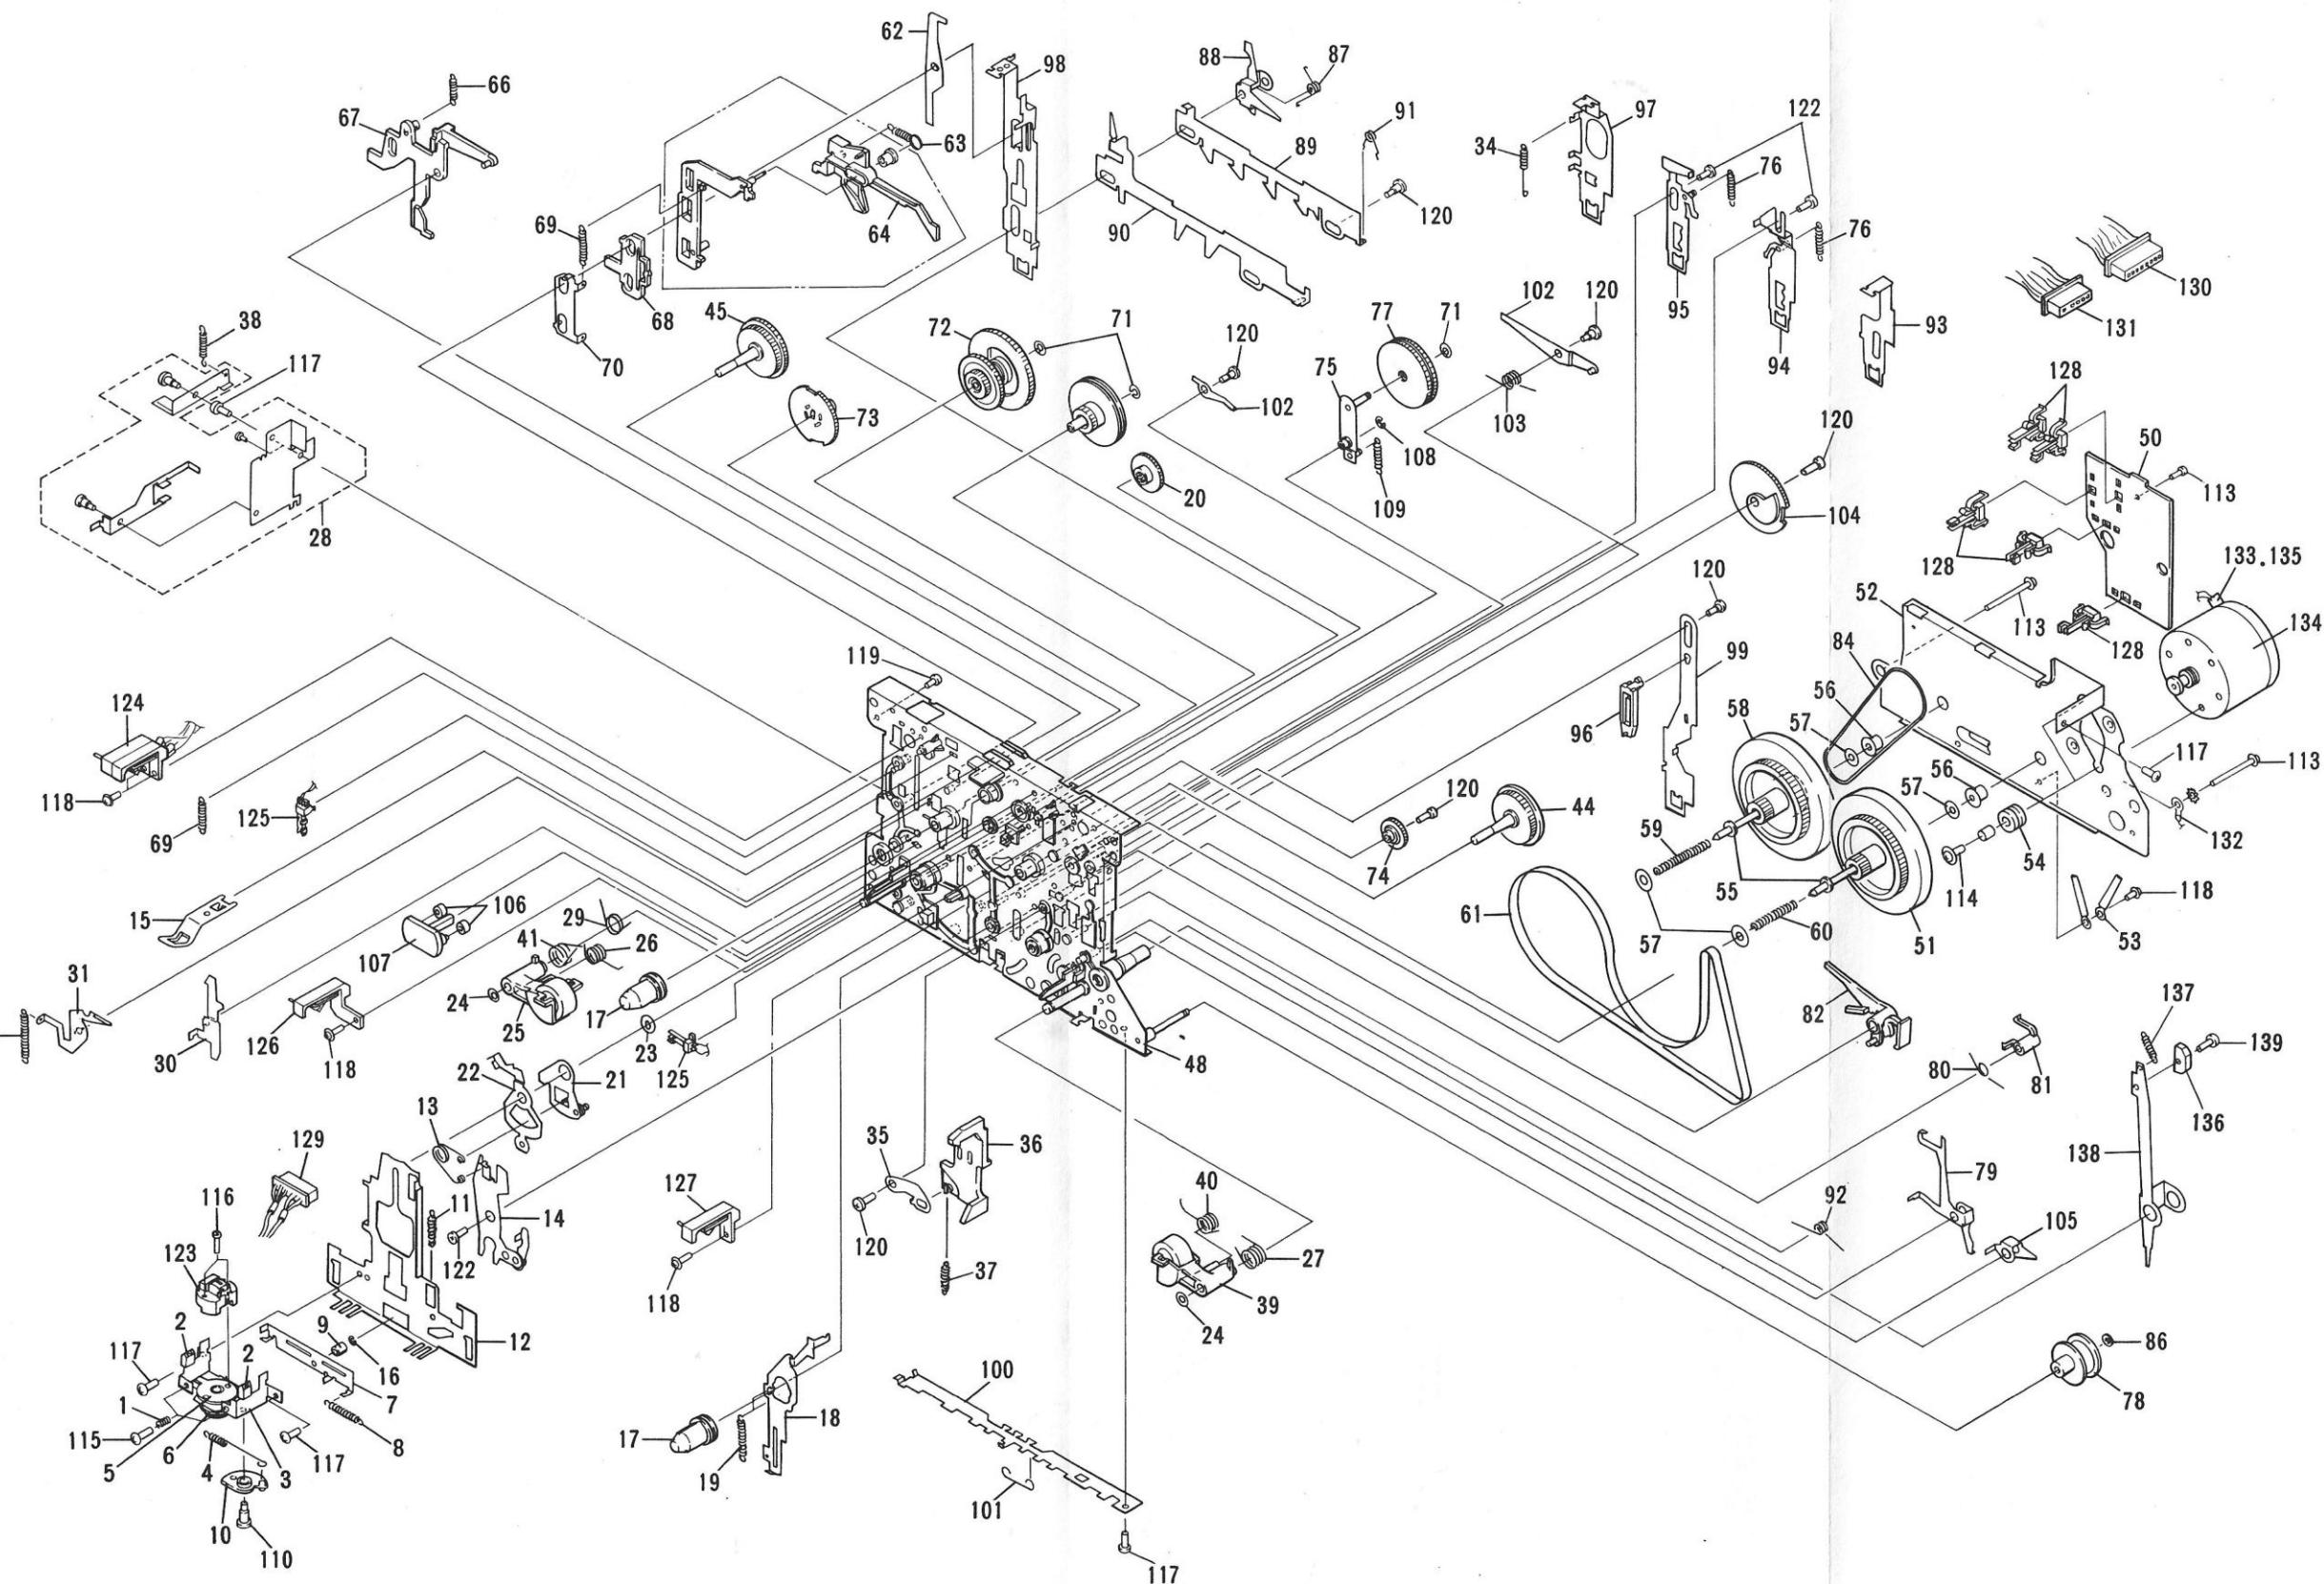


## Parts List of Tape Transport Unit

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
1	AZN1055	Pressure spring		51	AZN1113	Flywheel assembly (R)	
2	AZN1056	Tape guide		52	AZN1114	F/W base plate	
3	AZN1057	Metal assembly		53	AZN1115	Wire holder assembly	
4	AZN1059	Head GR spring		54	AZN1116	Gom washer	
5	AZN1060	Head holder assembly		55	AZN1118	P washer	
6	AZN1062	Head gear (A)		56	AZN1119	Metal	
7	AZN1063	Slide plate assembly		57	AZN1120	P washer 2.6x8x0.13	
8	AZN1064	Slide plate spring		58	AZN1121	Flywheel assembly (L)	
9	AZN1065	Collar		59	AZN1122	Pressure spring (black)	
10	AZN1066	Head gear (B)		60	AZN1123	Pressure spring (white)	
11	AZN1067	Return spring		61	AZN1124	Flat belt	
12	AZN1068	Head base		62	AZN1125	Rerelease lever	
13	AZN1069	Reverse spring		63	AZN1126	Spring	
14	AZN1070	Pinch lever assembly		64	AZN1127	Detector lever assembly	
15	AZN1071	Harf set arm		65	AZN1128	Spring	
16	AZN1072	P washer		66	AZN1129	Spring	
17	AZN1073	Real claw		67	AZN1130	DIR lever	
18	AZN1074	Sub-plate assembly		68	AZN1131	Mode lever	
19	AZN1075	Head-return spring		69	AZN1132	Coiled spring	
20	AZN1076	Idler gear		70	AZN1133	Mode plate	
21	AZN1077	Idler assembly		71	AZN1134	P washer 1.6x4x0.25	
22	AZN1078	Reverse assembly A		72	AZN1135	Tension pulley assembly	
23	AZN1079	P washer 1.3x3x0.25		73	AZN1136	Reverse gear	
24	AZN1080	P washer		74	AZN1137	FWD gear	
25	AZN1081	Pinch arm assembly		75	AZN1138	FF idler assembly	
26	AZN1082	Twist spring		76	AZN1139	FF REW gear spring	
27	AZN1083	Pinch roller-return spring		77	AZN1140	FF idler assembly	
28	AZN1084	Mounting plate assembly		78	AZN1141	Idler assembly	
29	AZN1085	Rec prevent spring		79	AZN1142	Anti-detect plate	
30	AZN1086	Rec prevent plate		80	AZN1143	Twist spring	
31	AZN1087	MO joint plate		81	AZN1144	Clutch stopper	
32	AZN1088	Coiled spring		82	AZN1145	Anti-detect lever	
33	AZN1089	Reverse sub-plate		83	AZN1146	Drive pulley	
34	AZN1090	Reverse spring		84	AZN1147	Square belt	
35	AZN1091	Latch slide plate		85		.....	
36	AZN1092	Latch lever		86	AZN1151	Washer	
37	AZN1093	Latch-return spring		87	AZN1152	SW drive spring	
38	AZN1094	DIR lever spring		88	AZN1153	SW push plate	
39	AZN1095	Pinch arm assembly (R)		89	AZN1155	REC/PB side stopper plate	
40	AZN1096	Twist spring		90	AZN1156	Stopper plate	
41	AZN1097	Pinch roller-return spring		91	AZN1157	Stopper plate spring	
42	AZN1098	Button holder		92	AZN1158	Stop pause spring	
43	AZN1099	Collar		93	AZN1160	Stop plate	
44	AZN1100	Reel base assembly (R)		94	AZN1161	FF plate assembly	
45	AZN1101	Reel base assembly (F)		95	AZN1162	REW plate assembly	
46	AZN1103	Button shelf		96	AZN1163	PAUSE arm	
47	AZN1112	Reinforced plate		97	AZN1164	PLAY plate	
48	AZN1105	Mechanism assembly		98	AZN1165	REC plate	
49	AZN1106	Button holder (L)		99	AZN1166	PAUSE plate	
50	AZN1111	P.C. board (II)		100	AZN1168	Button holder plate	

<u>Mark</u>	<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Mark</u>	<u>No.</u>	<u>Part No.</u>	<u>Description</u>
101	AZN1169		Lead clammer	121	AZB1046		Bind screw
102	AZN1170		Assist arm assembly	122	AZB1047		Bushing
103	AZN1171		Trigger return spring	123	AZP1006		Head assembly (REC/PB and ERASE)
104	AZN1172		Assist gear	124	AZS1012		Leaf switch (ARF SW)
105	AZN1173		Pause arm	125	AZS1013		Leaf switch
106	AZN1174		Collar (B)	126	AZS1014		Leaf switch (Metal SW)
107	AZN1175		Reverse cam assembly	127	AZS1015		Leaf switch (ARR SW)
108	AZN1177		E-ring	128	AZS1016		Leaf switch (P.C. board)
109	AZN1179		FF idler plate spring	129	AZK1029		8P connector
110	AZB1032		Step screw	130	AZK1030		8P connector
111	AZB1033		Step screw	131	AZK1031		5P connector
112	AZB1034		Washer	132	AZD1003		Ground wire
113	AZB1036		Flange screw	133	AZD1005		Jumper
114	AZB1037		Motor mounting screw	134	AZX1006		Motor assembly
115	AZB1038		Pan-screw	135	AZD1006		Jumper
116	AZB1039		Screw	136	AZN1148		Magnet
117	AZB1040		Screw	137	AZN1149		Magnet spring
118	AZB1041		Flange screw	138	AZN1150		Magnet arm
119	AZB1042		FT screw	139	AZB1043		Screw
120	AZB1045		Bushing				

## 9. PACKING

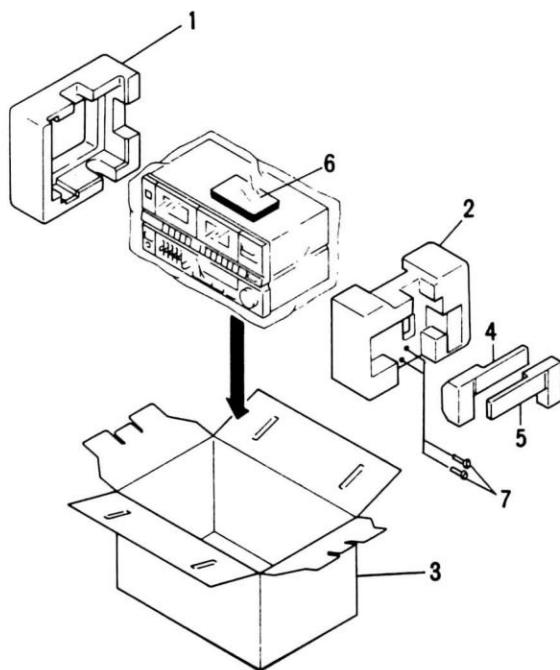

### Parts List


Mark	No.	Part No.	Description
1	AHA1001	Side pad (L)	
2	AHA1002	Side pad (R)	
3	AHD1007 (Black type) AHD1054 (Silver type)	Packing case	
4	AMR1060 (Black type) AMR1062 (Silver type)	Player stand (L)	
5	AMR1061 (Black type) AMR1063	Player stand (R)	
6	ARB1001	Operating instruction (English)	
7	ABA1003	Screw	

### LINE VOLTAGE SELECTION (FOR HE AND HB TYPES)

Line voltage can be changed as follows:

1. Disconnect the AC power cord.
2. Remove the bonnet case.
3. Change the connection of the power transformer primary taps.
4. Stick the line voltage label on the rear panel.

Description	Part No.
220V label	AAX-193
240V label	AAX-192

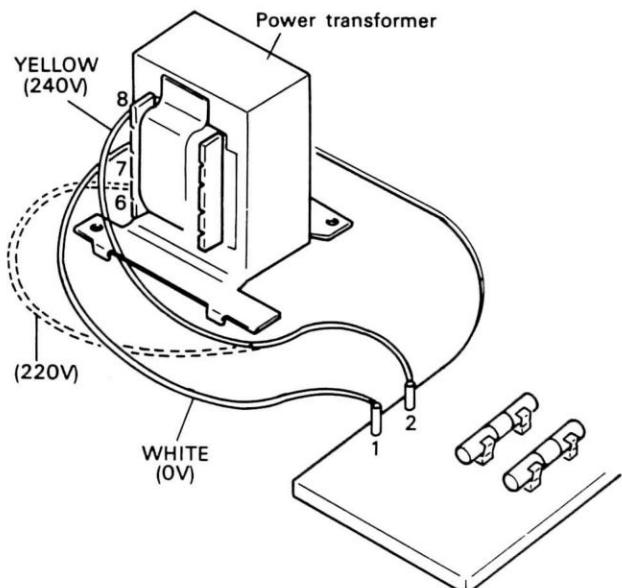

# 10. ADJUSTMENTS

## 10-1. TAPE SPEED ADJUSTMENT

1. Connect the frequency counter to TP1 and TP3(GND).
2. Mount the test tape STD-301 onto deck.
3. Put the deck into play mode and adjust the tape speed so that the playback signal frequency becomes  $3010\text{Hz}\pm5\text{Hz}$  by inserting a screwdriver into the motor adjustment slot.

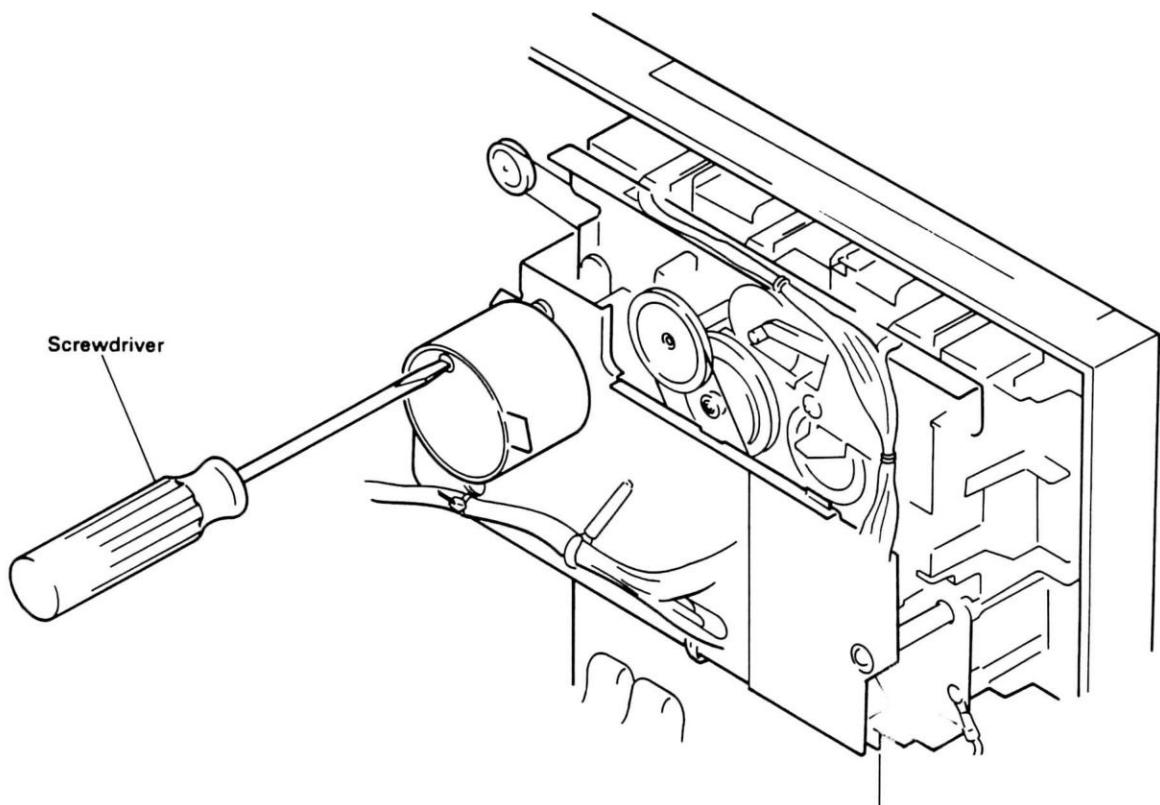


Fig. 10-1 Tape speed adjustment

## 10-2. ELECTRICAL ADJUSTMENTS

- Before commencing any electrical adjustments, make sure the following checked/completed.
1. All mechanical adjustments must have been completed.
  2. The heads must be clean and demagnetized.
  3.  $0 \text{ dBv} = 1\text{V}$  during level measurements.
  4. Use the specified tapes for each adjustment.  
Although test tapes have both A and B sides, only use side A where the label is attached.  
STD-331B: Playback adjustment  
STD-608A: NORMAL blank tape  
STD-620: CrO<sub>2</sub> blank tape  
STD-610: METAL blank tape
  5. Prepare the following measuring equipment.  
AC millivoltmeter, audio generator, attenuator, oscilloscope.
  6. Adjust both left and right channels unless otherwise specified.
  7. And unless indicated otherwise, leave the DOLBY NR switch in the OFF position.

8. Let the set warm up for at least a few minutes before commencing adjustments. And before commencing the record/playback frequency response adjustent, let the set "age" for three to five minutes.
9. Always adjust the set in the given adjustments order. If the order is changed, proper adjustment will not be possible, and this may result in loss of performance.

### Adjustment Procedure

1. Head azimuth adjustment
2. Playback level adjustment
3. Recording/Playback frequency response
4. Recording level adjustment

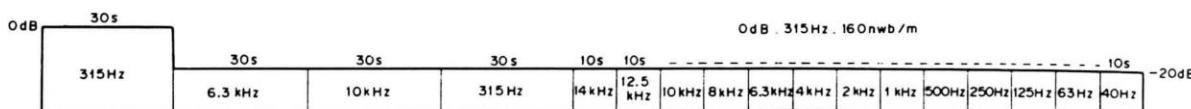


Fig. 10-2 Test tape STD-331B

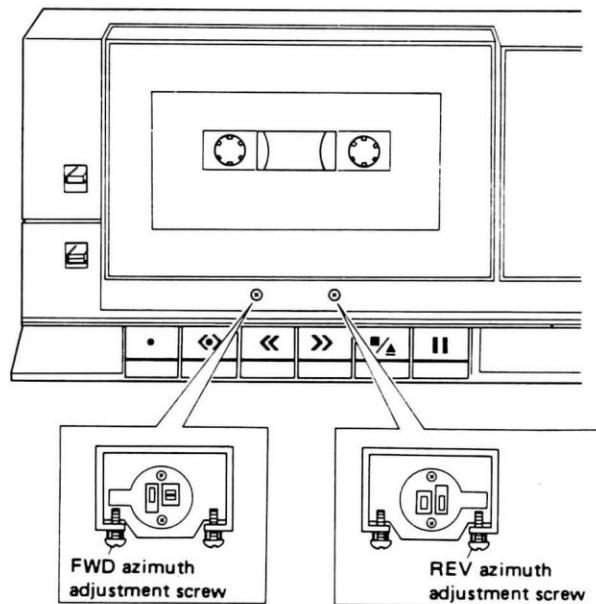


Fig. 10-3 Head azimuth adjustment

<b>1. Head azimuth adjustment</b> * (Note) Do not select FWD and REV with the screwdriver being kept inserted.							
Procedure	Tape selector	Mode	Input signal/test tape	Adjusting point	Measuring point	Adjustment value	Remark
1	NORM	PLAY(FWD)	Play back 10kHz/-10dB on test tape STD-331B	Head azimuth adjusting screw (Fig. 10-3)	TP1 (R) TP2 (L)	Maximum playback signal level	After completion, lock the screw
2		PLAY(REV)					
<b>2. Playback level adjustment</b> * Perform this adjustment precisely since this adjustment is Dolby level setting during playback.							
Procedure	Tape selector	Mode	Input signal/test tape	Adjusting point	Measuring point	Adjustment value	Remark
1	NORM	PLAY	Play back 315Hz/0dB on test tape STD-331B	VR504 (R) VR503 (L)	TP1 (R) TP2 (L)	-13.5dBv±0.5dB	(TP3: GND)
<b>3. Adjustment of recording and playback frequency characteristics</b> * This adjustment is performed in order to adjust the recording bias. Therefore, caution should be exercised not to worsen the distortion ratio due to under bias.							
Procedure	Tape selector	Mode	Input signal/test tape	Adjusting point	Measuring point	Adjustment value	Remark
1	NORM	REC	Mount the test tape STD-608A and put into REC mode.		Both sides of C701 (Fig. 10-4)	Confirm that the oscillation frequency is 105kHz±1kHz.	When it is not within the standard, put it into the standard by adjusting T701.
2	NORM	REC	Apply the signal of 315Hz to the CD terminal and turn the CD switch on.	Input signal level	TP1 (R) TP2 (L)	-33.5dBv±0.5dB	
3	NORM	PEC/PLAY	Record and play back 315Hz and 10kHz on test tape STD-608A.	VR702 (R) VR701 (L)	TP1 (R) TP2 (L)	Repeat recording and playback, and compensate so that the playback level of 10kHz against 315Hz becomes 0±0.5dB.	
* Select the test tape, tape selector, and Dolby NR switch and satisfy the frequency characteristic zone as shown in Figs. 10-6.							
<b>4. Recording level adjustment</b> * Set the graphic equalizer and balance volume to the center and the mike mixing volume to the source side.							
Procedure	Tape selector	Mode	Input signal/test tape	Adjusting point	Measuring point	Adjustment value	Remark
1	NORM	REC	Apply the signal of 315Hz to the CD terminal and turn the CD switch on.	Input signal level	TP1 (R) TP2 (L)	-13.5dBv (±0.5dB)	
2	NORM	REC/PLAY	Record and play back 315Hz to the test tape STD-608A.	VR704 (R) VR703 (L)	TP1 (R) TP2 (L)	Repeat recording and playback, and compensate so that the playback level of 315Hz becomes -13.5dBv (±0.5dB)	
3	CrO <sub>2</sub>	REC/PLAY	Record and play back 315Hz to the test tape STD-620.		TP1 (R) TP2 (L)	Confirm that the playback level of 315Hz becomes -13.5dBv (±1dB)	
4	METAL	REC/PLAY	Record and play back 315Hz to the test tape STD-610.		TP1 (R) TP2 (L)		

Note: \* This deck is provided with an auto-tape-selector mechanism.

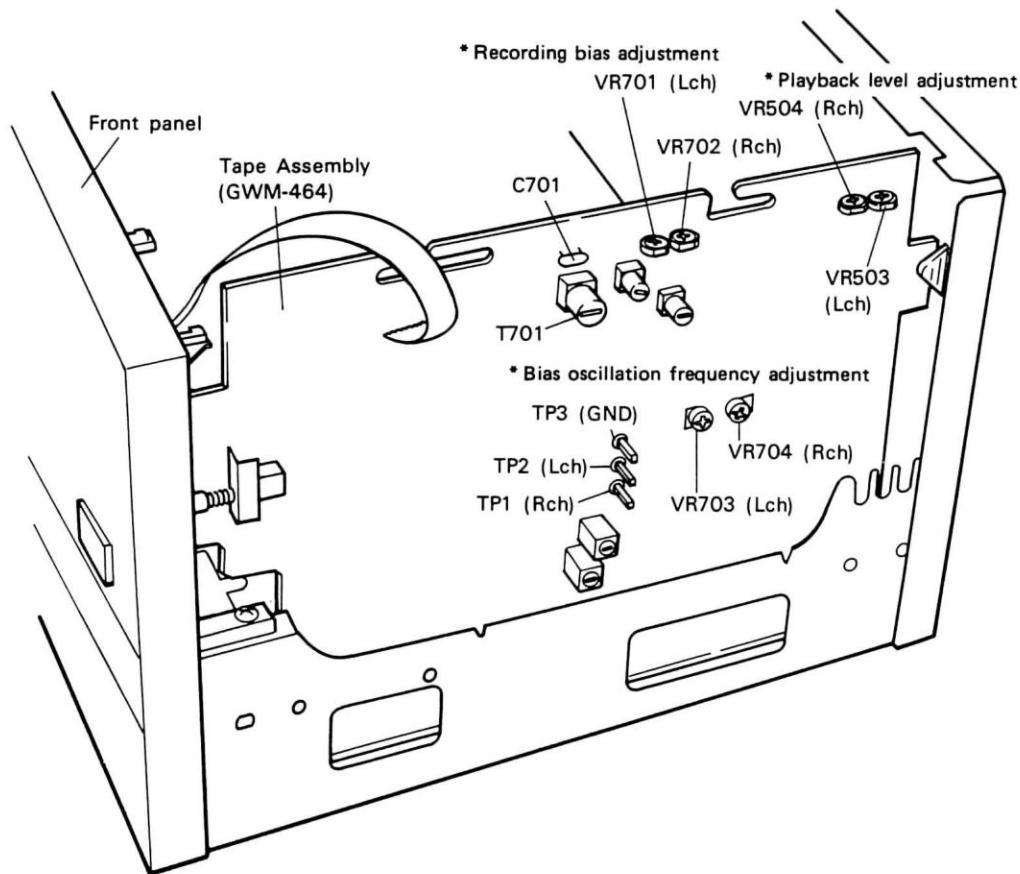


Fig. 10-4 Arrangement diagram of adjusting parts

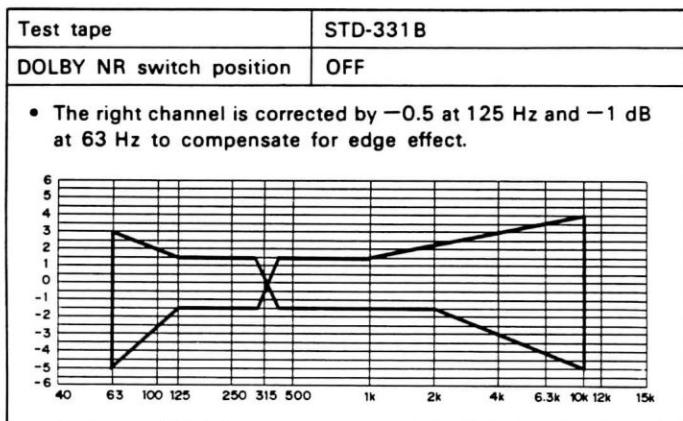


Fig. 10-5 Playback frequency response tolerance zone

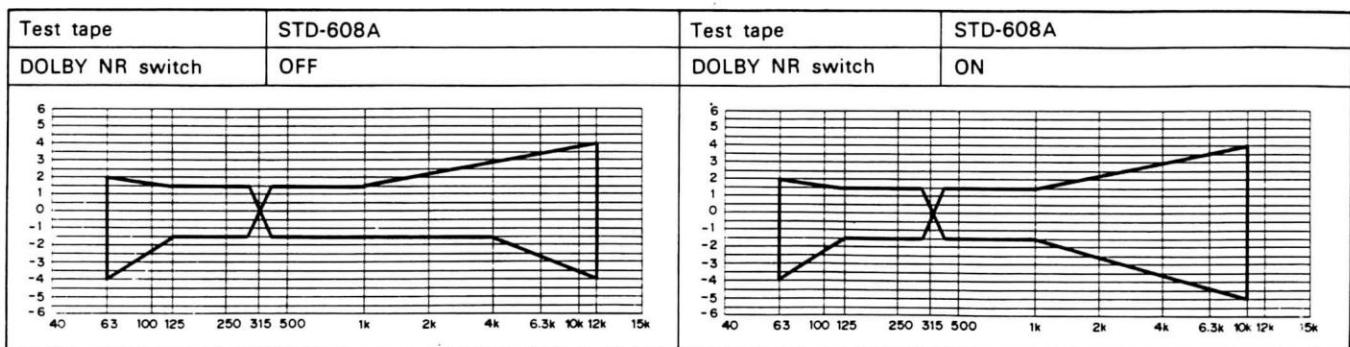


Fig. 10-6 Recording and playback frequency response tolerance zone (NORM)

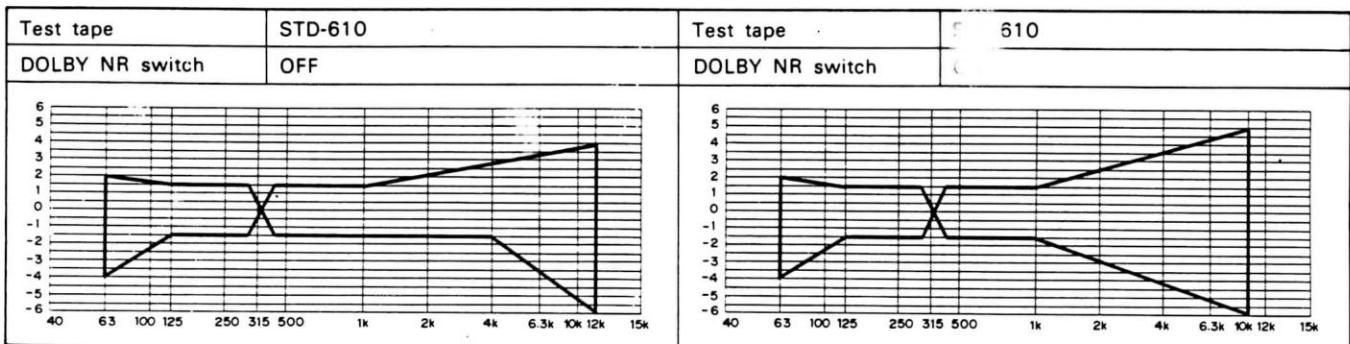
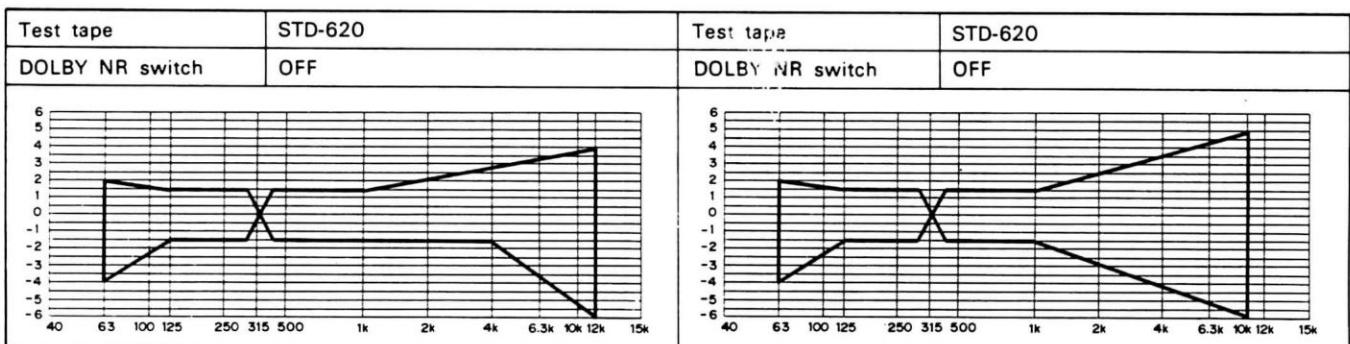


Fig. 10-7 Recording and playback frequency response tolerance zone (METAL)



Fig. 10-8 Recording and playback frequency response tolerance zone (CrO<sub>2</sub>)

# 11. FOR HE AND S TYPES

DC-X33Z(BK) HE and S types are the same as the DC-X33Z(BK) HB type except for following sections.

## Contrast of Miscellaneous Parts

Mark	Symbol & Descriptions	Part No.				
		DC-X33Z(BK) HB type	DC-X33Z HB type	DC-X33Z(BK) HE type	DC-X33Z HE type	DC-X33Z(BK) S type
▲ *	T1 Power transformer (220V/240V) (110V/120V/220V/240V)	ATS1006	ATS1006	ATS1006	ATS1006	..... ATS1022
▲	R Resistor (2.2MΩ, 1.2W)	.....	.....	.....	.....	.....
▲ **	FU1 Fuse (T1.25A)	AEK-508	AEK-508	AEK-031	AEK-031	.....
▲ **	FU1, FU2 Fuse (1A)	.....	.....	.....	.....	AEK-119
▲ **	FU3 Fuse (T1.6A) (1.6A)	AEK-510	AEK-510	AEK-405	AEK-405	..... AEK-121
▲ **	FU4, FU5 Fuse (T2.5A) (3.15A)	AEK-511	AEK-511	AEK-017	AEK-017	..... AEK-124
▲ **	S1 Line voltage selector Knob (POWER) Knob (STEREO WIDE, TUNER, CD, PHONO, TAPE) Knob (DOLBY NR OFF-ON) Bonnet case Knob A (PLAY) Knob B (FAST) Knob C (FAST) Knob E (PAUSE) Volume base Knob F (REC) Knob (VOLUME) Deck panel (A) Front panel	..... AAD1003 AAD1004 AAD1005 ANE1002 AAE1001 AAE1002 AAE1003 AAE1027 AAK1001 AAE1006 AAE1010 AAK1013 AMB1009	..... AAD1029 AAD1030 AAD1031 ANE1031 AAE1018 AAE1019 AAE1020 AAE1028 AAE1065 AAE1023 AAE1025 AAK1073 AMB1051	..... AAD1003 AAD1004 AAD1005 ANE1002 AAE1001 AAE1002 AAE1003 AAE1027 AAK1001 AAE1006 AAE1010 AAK1013 AMB1009	..... AAD1029 AAD1030 AAD1031 ANE1031 AAE1018 AAE1019 AAE1020 AAE1028 AAK1065 AAE1023 AAE1025 AAK1073 AMB1051	AKX-507 AAD1003 AAD1004 AAD1005 ANE1002 AAE1001 AAE1002 AAE1003 AAE1027 AAK1001 AAE1023 AAE1025 AAK1013 AMB1009
▲	Operating instructions (English) (English/German/French/Italian) (Spanish)	ARB1001	ARB1001	.....	.....	ARB1001 .....
	Strain relief	.....	.....	ARE1010	ARE1010	ARC1004
	AEC-882	AEC-882	AEC-882	AEC-882	AEC-882	AEC-829
▲	AC Power cord Packing case	ADG-051 AHD1007	ADG-051 AHD1054	ADG-041 AHD1007	ADG-041 AHD1054	ADG-046 AHD1007
	Player stand (L) Player stand (R) Knob D (STOP/EJECT)	AMR1060 AMR1061 AAE1004	AMR1004 AMR1005 AAE1021	AMR1060 AMR1061 AAE1004	AMR1062 AMR1063 AAE1021	AMR1060 AMR1061 AAE1004

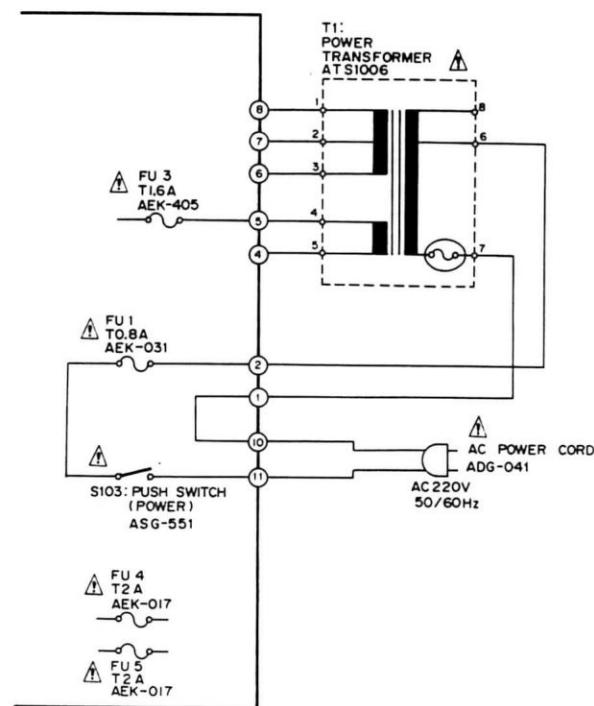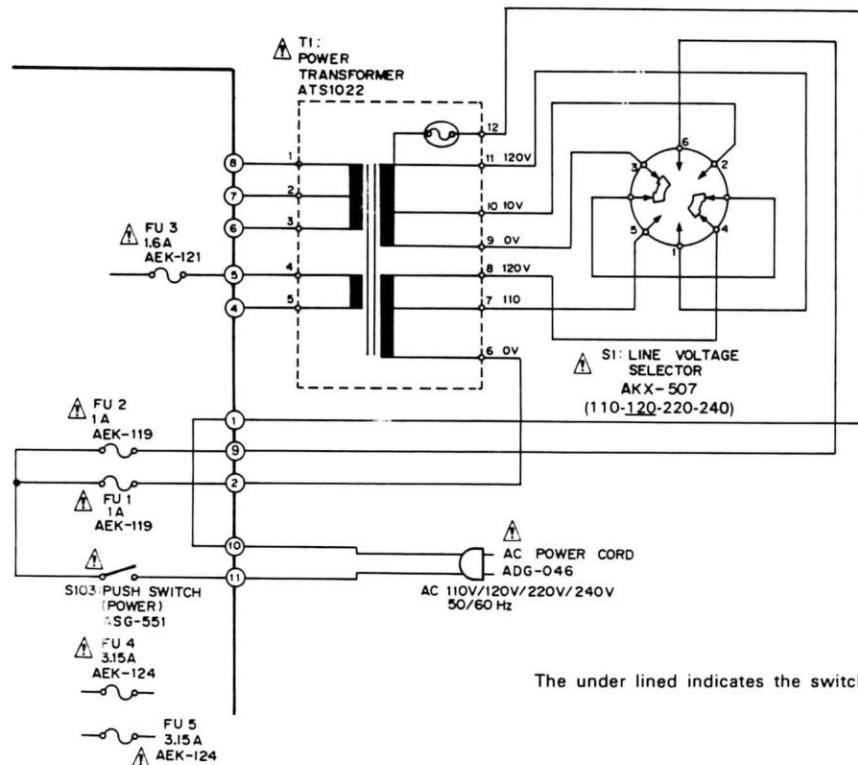**Circuit Diagram****For HE type****For S type**

The underlined indicates the switch position.