


# Service Manual

**PIONEER**  
The future of sound and vision.

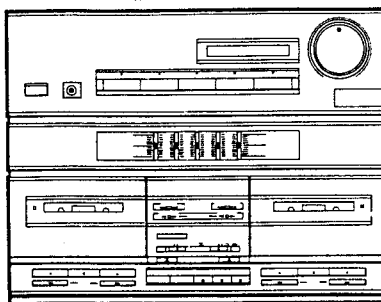

**ORDER NO.  
ARP1689**

STEREO DOUBLE CASSETTE TAPE DECK AMPLIFIER

# DC-Z72

MODEL DC-Z72 HAS FIVE VERSIONS:

Type	Power requirement	Export destination
HB	AC220V,240V (switchcable)*	United Kingdom
HE	AC220V,240V (switchcable)*	European continent
HEZ	AC220V,240V (switchcable)*	West Germany
SD	AC110V,120V-127V,220V,240V (switchcable)	Kingdom of Saudi Arabia and general market
YP	AC240V only	Australia

\*Change the jumper wires of assembly boards.

- This manual is applicable to the DC-Z72/HB and HE types.
- For HE type, refer to pages 71-72.
- For the other types, refer to additional service manuals.
- Ce manuel pour le service comprend les explications en français de réglage.
- Este manual de servicio trata del método ajuste escrito en español.

## CONTENTS

1. SPECIFICATIONS .....	2	6. ADJUSTMENTS .....	54
2. P.C. BOARDS LOCATION .....	3	RÉGLAGE .....	58
3. EXPLODED VIEWS, PACKING AND PARTS LIST .....	6	AJUSTE .....	63
4. SCHEMATIC DIAGRAM AND P.C. BOARDS CONNECTION DIAGRAM .....	18	7. IC INFORMATION .....	68
5. ELECTRICAL PARTS LIST .....	49	8. FOR HE TYPE .....	71
		9. CONNECTIONS .....	73
		10. PANEL FACILITIES .....	75

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

**PIONEER ELECTRONICS SERVICE INC.** P.O. Box 1760, Long Beach, California 90801 U.S.A.

**PIONEER ELECTRONICS OF CANADA, INC.** 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada

**PIONEER ELECTRONIC [EUROPE] N.V.** Keetberglaan 1, 2740 Beveren, Belgium

**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

© **PIONEER ELECTRONIC CORPORATION 1989**

YV JAN.1989 Printed in Japan.

# 1. SPECIFICATIONS

Cassette tape deck amplifier: DC-Z72

## AMPLIFIER SECTION

Continuous Average Power Output is 27 Watts\* per channel, min., at 8 ohms from 40 Hertz to 20,000 Hertz, with no more than 0.3% total harmonic distortion.

*\*Measured pursuant to the Federal Trade Commission's Trade Regulation rules on Power Output Claims for Amplifiers.*

Music power ..... 50 W + 50 W (1 kHz, T.H.D. 1 %, 8 ohms)  
 DIN music power..... 50 W + 50 W (1 kHz, T.H.D. 1%, 8 ohms)  
 Peak music power..... 290 W  
 Continuous power output (DIN)..... 33 W + 33 W  
 (1 kHz, T.H.D. 1 %, 8 ohms)  
 Graphic equalizer frequency band..... 100 Hz, 330 Hz,  
 1 kHz, 3.3 kHz, 10 kHz,  $\pm 7$  dB  
 Hum and Noise (DIN, continuous Power/50 mW)  
 PHONO ..... 68 dB/60 dB  
 Total Harmonic Distortion  
 (40 Hz to 20,000 Hz, 15 W, 8 ohms)\*\* ..... No more than 0.2%

## Tape Deck Section

Systems..... 4 track, 2-channel stereo  
 Heads ..... Recording/playback head x 1  
 Playback head x 1  
 Erasing head x 1  
 Motor..... DC servo 2 speed motor x 2  
 Wow and Flutter..... No more than 0.09% (WRMS)  
 Fast Winding Time ..... Approximately 95 seconds  
 (C-60 tape)

## Frequency Response ( $-20$ dB recording):

Normal tape ..... 35 Hz to 14,000 Hz  $\pm 6$  dB  
 CrO<sub>2</sub> tape ..... 35 Hz to 15,000 Hz  $\pm 6$  dB  
 Signal-to-noise ratio  
 Dolby NR OFF..... 56 dB  
 Noise Reduction Effect  
 Dolby B type NR ON ..... More than 10 dB (at 5 kHz)

## Furnished Parts

Operating Instructions ..... 1  
 Remote control unit ..... 1  
 Dry cell batteries ..... 2

## Miscellaneous

Power requirements  
 U.K. model ..... a.c. 240 Volts  $\sim$ , 50/60 Hz  
 Other destination models  
 ..... AC 110/120 - 127/220/240 V (switchable) 50/60 Hz  
 Power Consumption ..... 185 W  
 Dimensions ..... 360 (W) x 271 (H) x 334 (D) mm  
 14-3/16 (W) x 13-1/8 (H) x 10-11/16 (D) in  
 Weight (without package) ..... 7.9 kg (17 lb 7 oz)

## Accessories

EP Adaptor..... 1

*\* Specifications and design subject to possible modification without notice due to improvement.*

*\*\* Measured By Audio Spectrum Analyser.*


2. P.C.BOARDS LOCATION

A

B

C

D

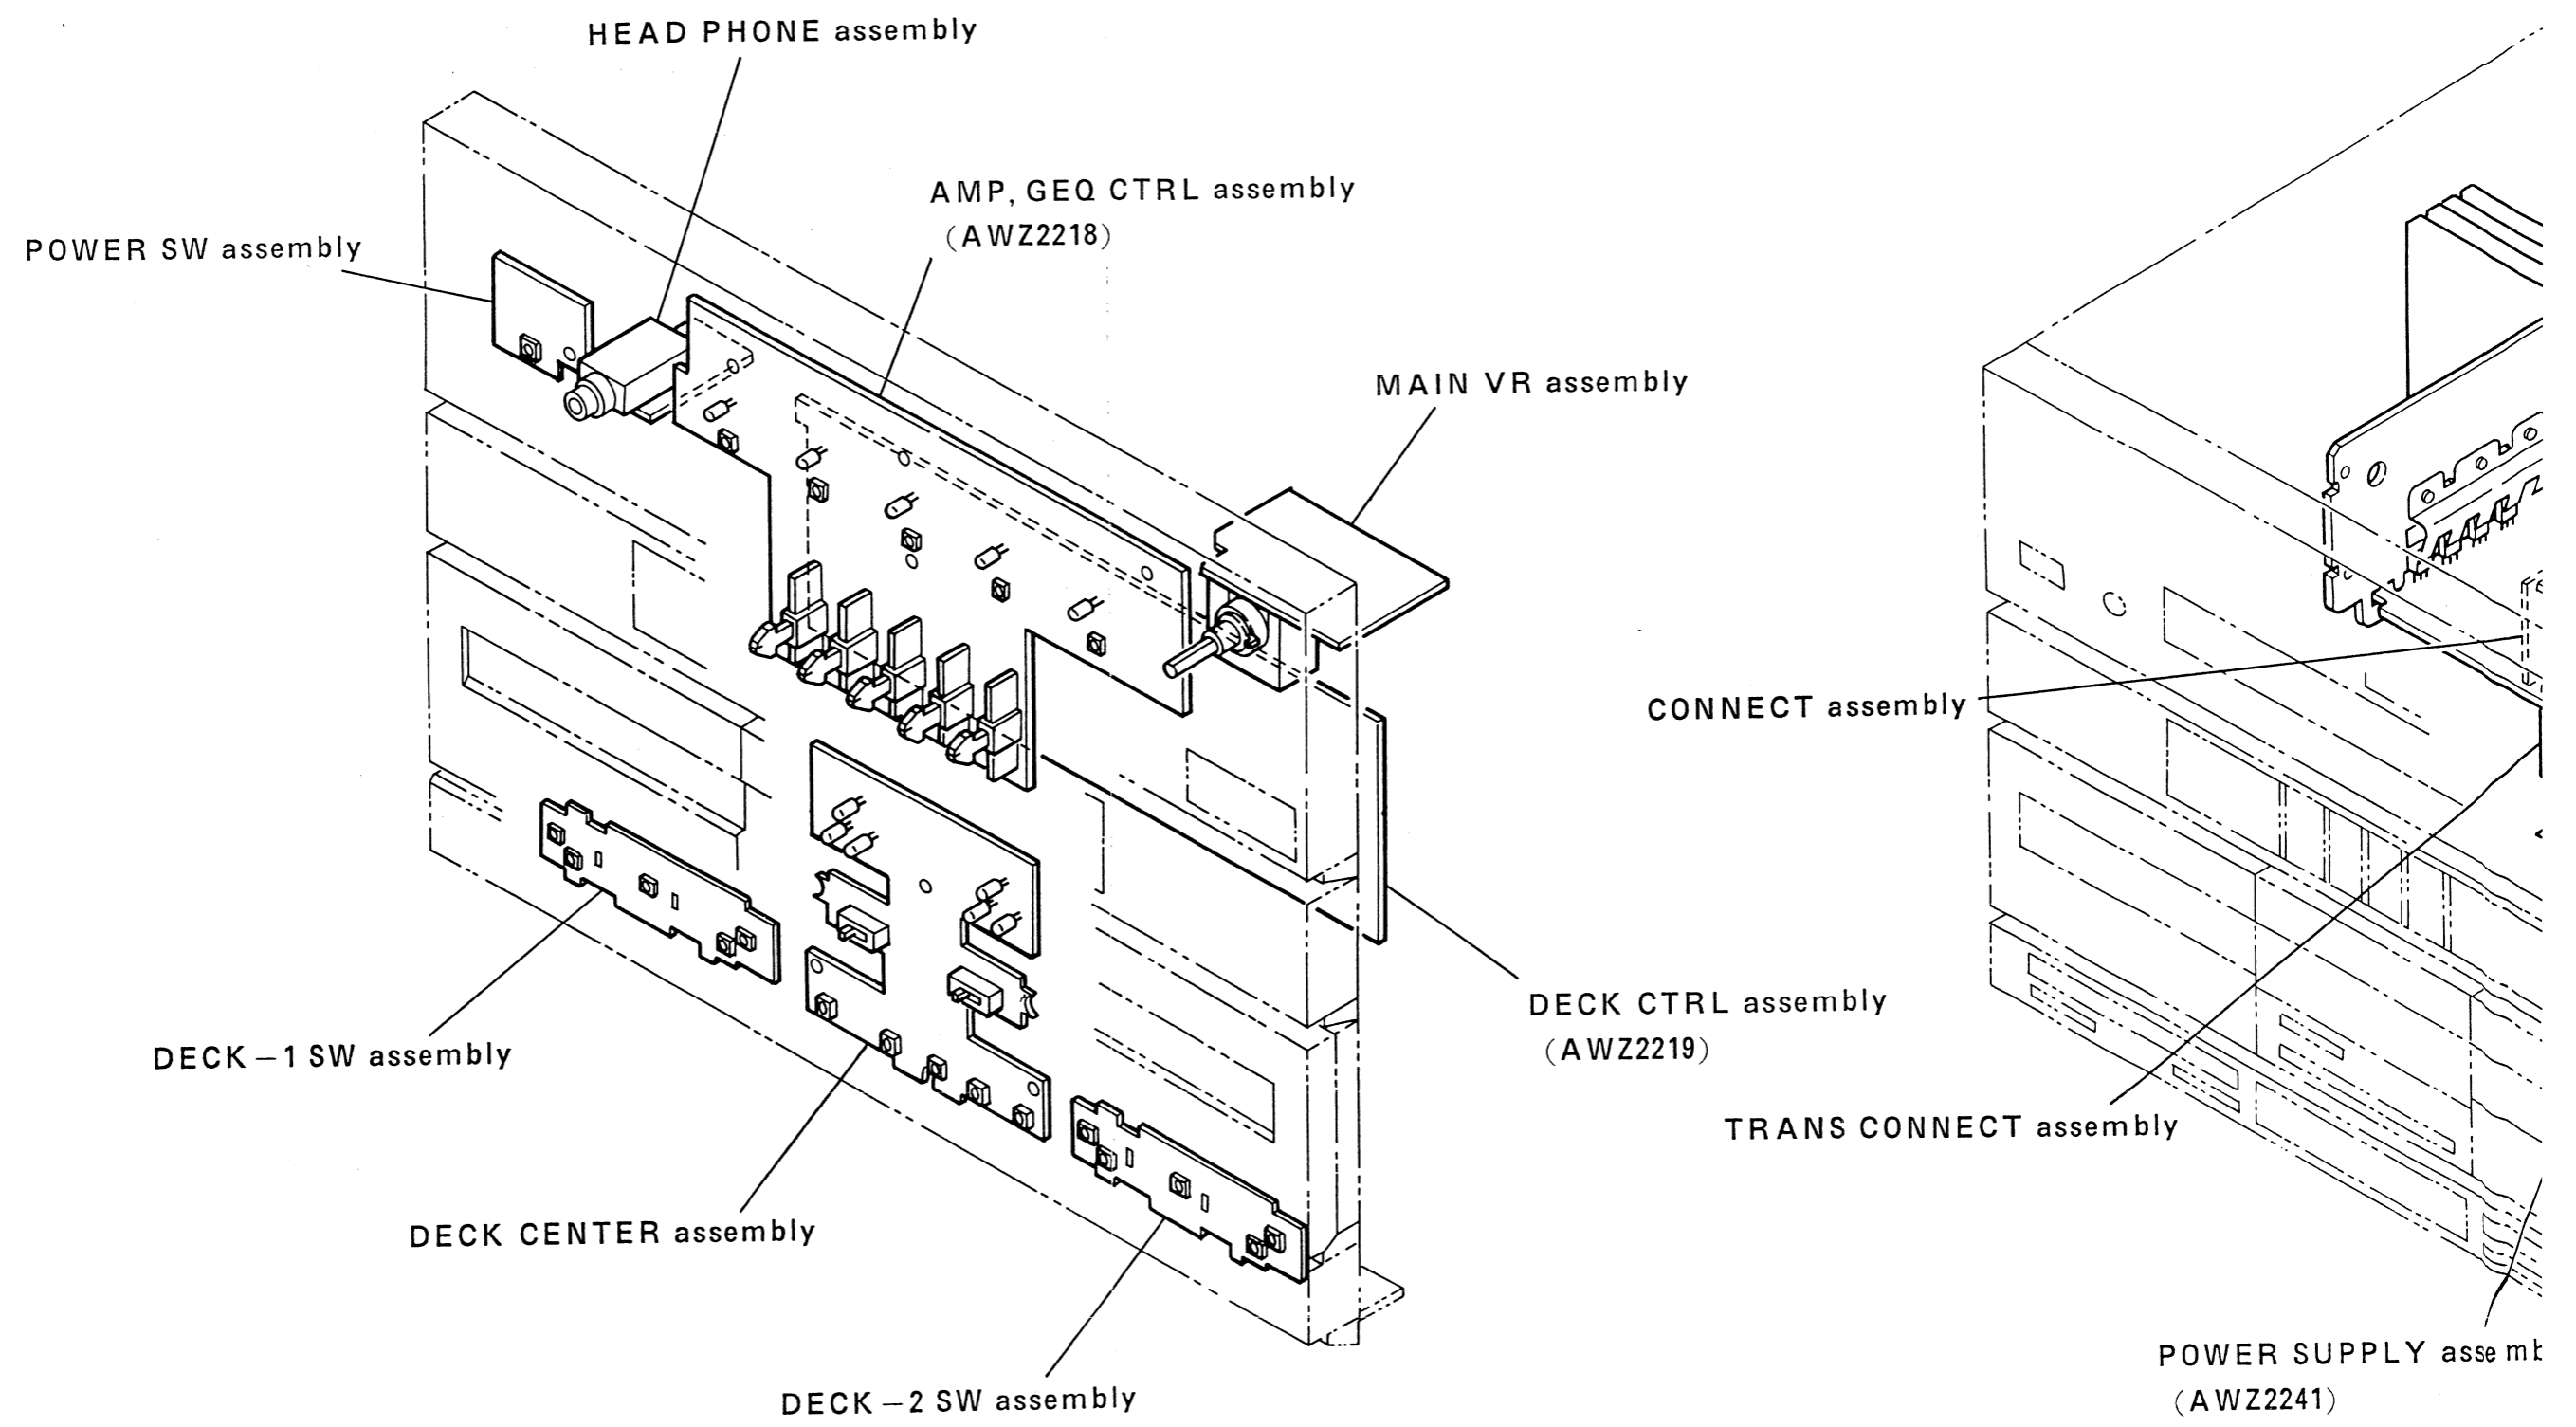

4

5

6

7

8

9

A

B

C

D

SEQ CTRL assembly  
(2218)

MAIN VR assembly

DECK CTRL assembly  
(AWZ2219)

CONNECT assembly

TRANS CONNECT assembly

POWER SUPPLY assembly  
(AWZ2241)

AF assembly  
(AWZ2217)

FUNCTION assembly

assembly

4

5


6

7

8

9

5

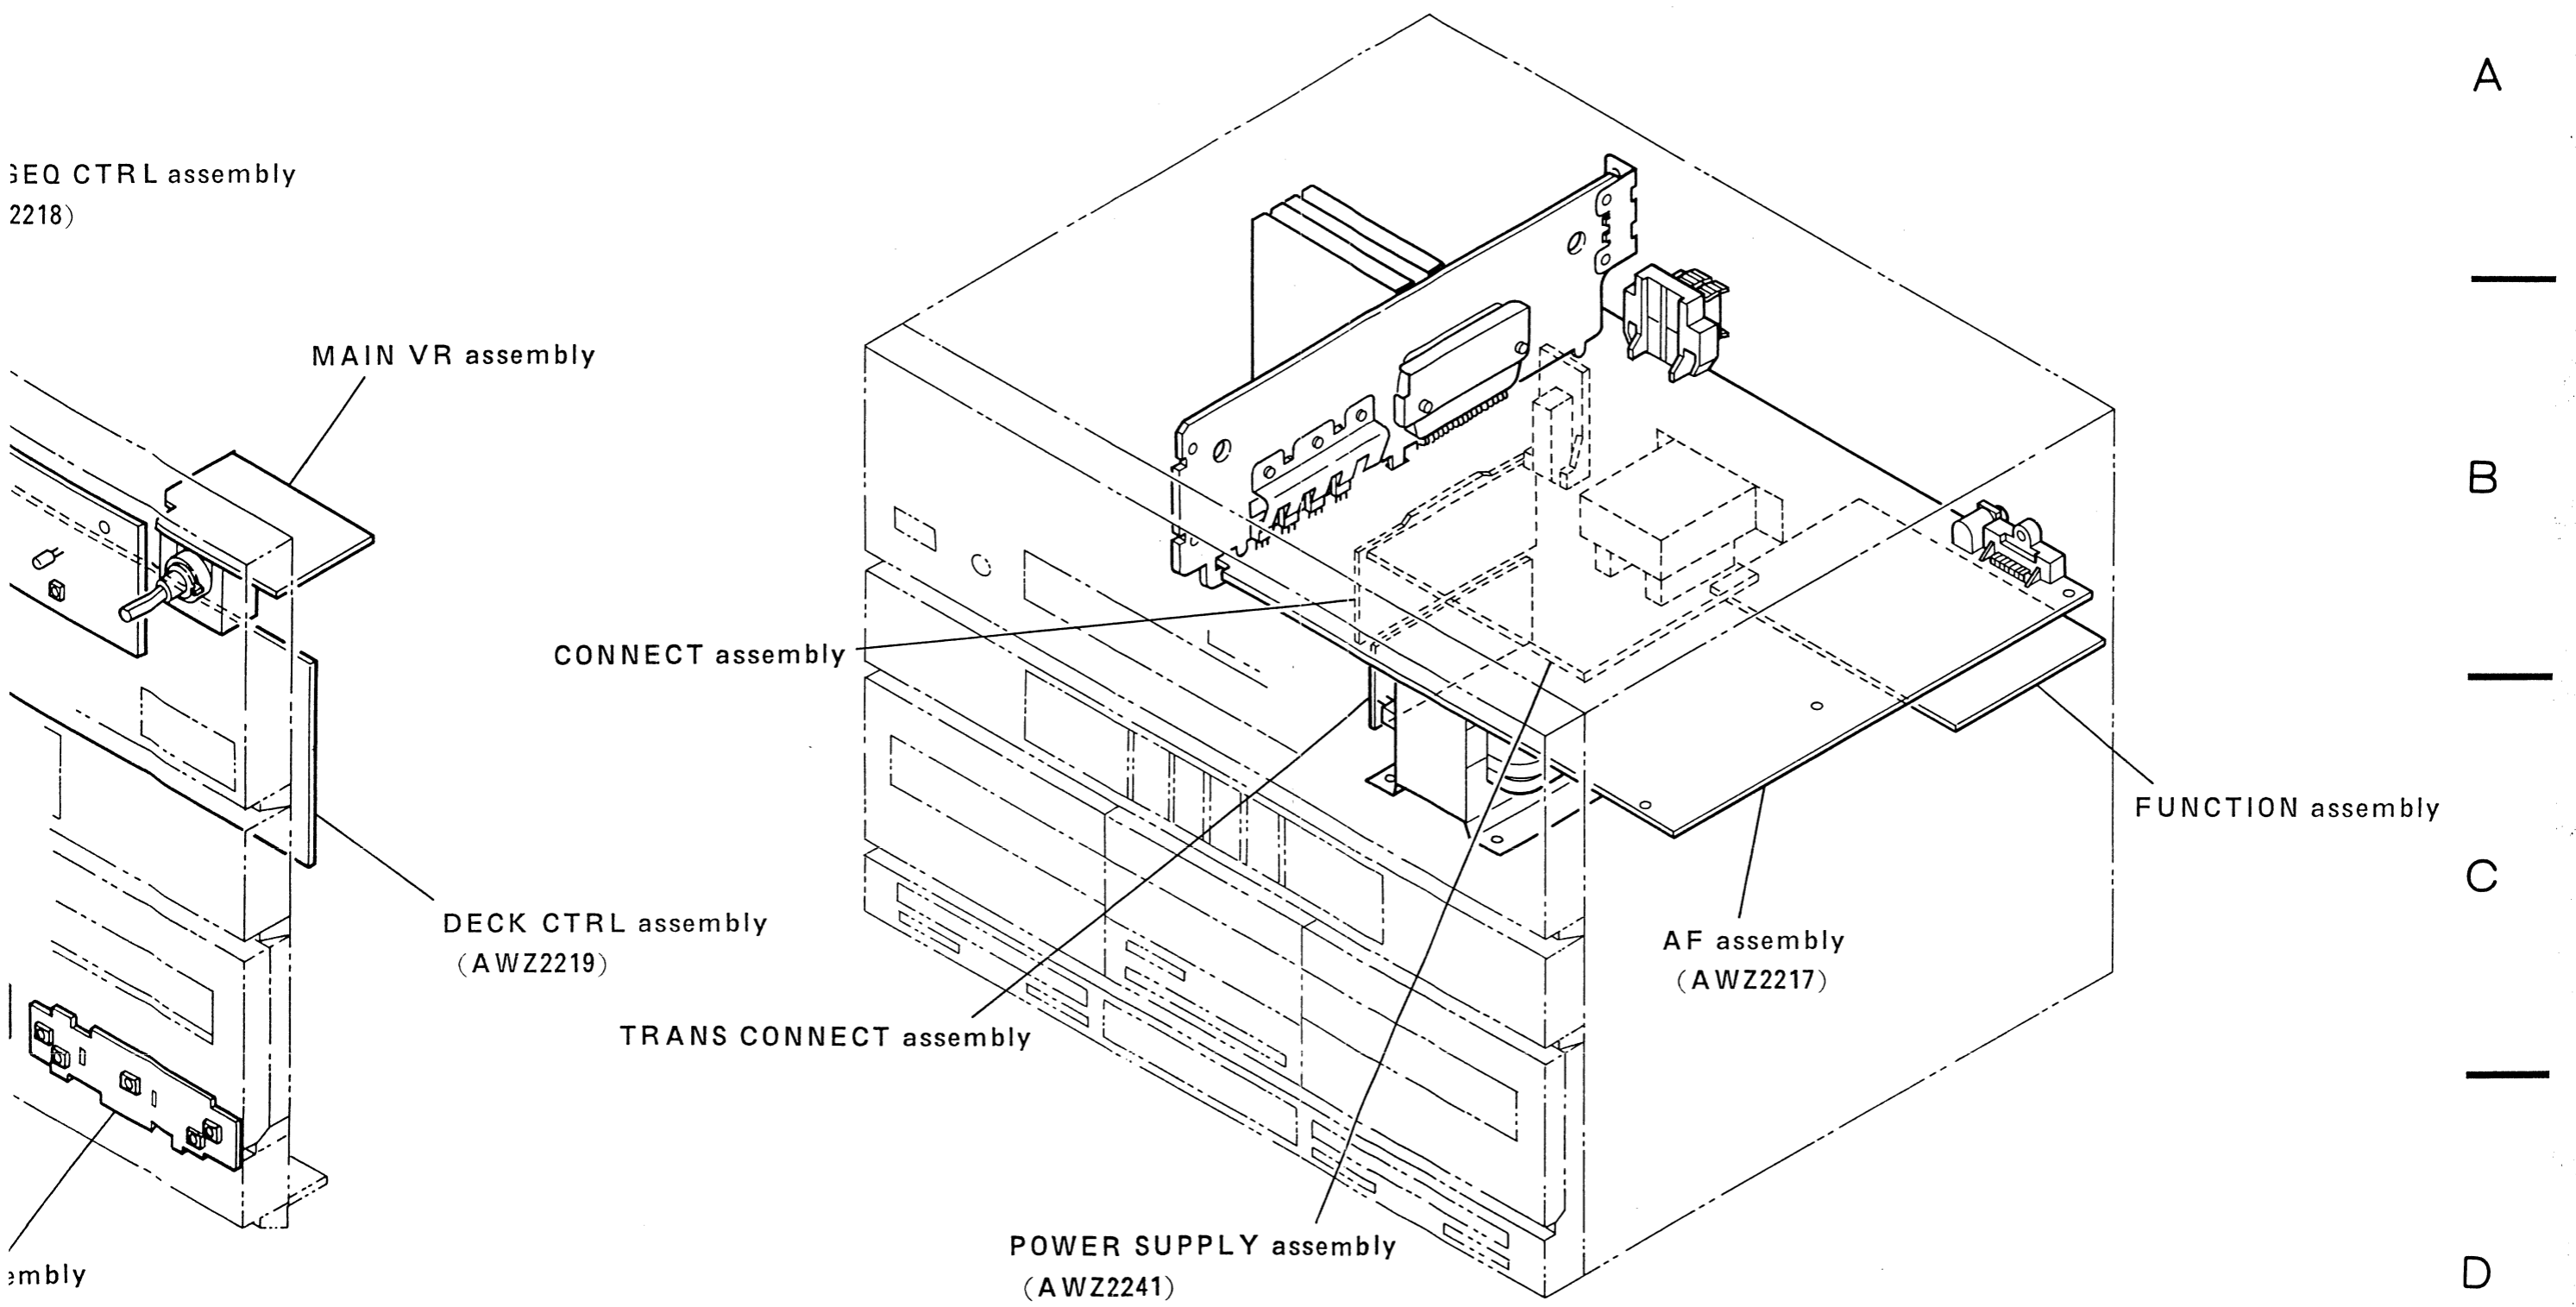



3.2 MAIN BODY SECTION


3. EXPLODED VIEWS, PAKING AND PARTS LIST

3.1 PARTS LIST OF MAIN BODY SECTION, FRONT PANEL SECTION AND PACKING


NOTES:

- Parts without part number cannot be supplied.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.


Mark No.	Part No.	Description	Mark No.	Part No.	Description
$\Delta$	1	ATS1179		51	FUNCTION ASSY
$\Delta$	2	AEK-507		52	POWER SW ASSY
$\Delta$	3	AEK-509		53	DECK-1 SW ASSY
$\Delta$	4	AEK-509		54	DECK-2 SW ASSY
$\Delta$	5	AEK-509		55	
	6	ADG-063		56	AC POWER CORD
$\Delta$	7	AEC-847		57	LEG ASS'Y
	8	ABH1050		58	SPRING
	9	ABH1051	AWZ2217	59	SPRING
	10	AMR1656		60	EJECT LEVER-1
	11	AMR1657		61	EJECT LEVER-2
	12	AXA1005	AWZ2241	62	DAMPER ASSEMBLY
	13	ABA-283		63	SCREW (STEEL)
	14	ABA1084		64	SCREW
	15	BBZ26P080FMC		65	SCREW
	16	BBZ30P060FMC		66	SCREW
	17	BBZ30P080FCU		67	SCREW
	18	BBZ30P080FZK		68	SCREW
	19	BPZ26P080FMC		69	SCREW
	20	NK90FUC		70	NUT
	21	VBZ30P160FMC		71	SCREW
	22	VPZ30P080FZK		72	SCREW
	23	VTZ30P100FZK		73	SCREW
	24	AMB1437		74	FRONT PANEL ASSEMBLY
	25	AAK1629		75	INDICATOR LENS
	26	AAK1660		76	DECORATIVE PLATE
	27	AAK1661		77	DECORATIVE PLATE
	28	AAK1662		78	DECORATIVE PLATE(DOOR)
	29	AAK1664		79	DECORATIVE PLATE(DOOR)
	30	AAB1089		80	KNOB(VOLUME)
	31	AAD1515		81	BUTTON(ASES)
	32	AAD1516		82	BUTTON(FUNCTION)
	33	AAD1520		83	BUTTON(POWER)
	34	AAD1525		84	BUTTON(PLAY)
	35	AAD1528		85	BUTTON(EJECT)
	36	AAD1529		86	BUTTON(REC)
	37	AAE1103			SLIDE KNOB
	38	AAN1120			CASSETTE DOOR
	39	AAN1121			CASSETTE DOOR
	40	ARB1154			OPERATING INSTRUCTION
	41	AXD1088			REMOTE CONTROL UNIT
	42	ARM1003			CAUTION CARD
	43	AHA1232			PAD(L)
	44	AHA1233			PAD(R)
	45	AHD1582			PAKING CASE
	46	ANE1180			BONNET
	47				
	48				DECK CENTER ASSY
	49	AWZ2218			AMP GEQ CTRL ASSY
	50	AWZ2219			DECK CTRL ASSY

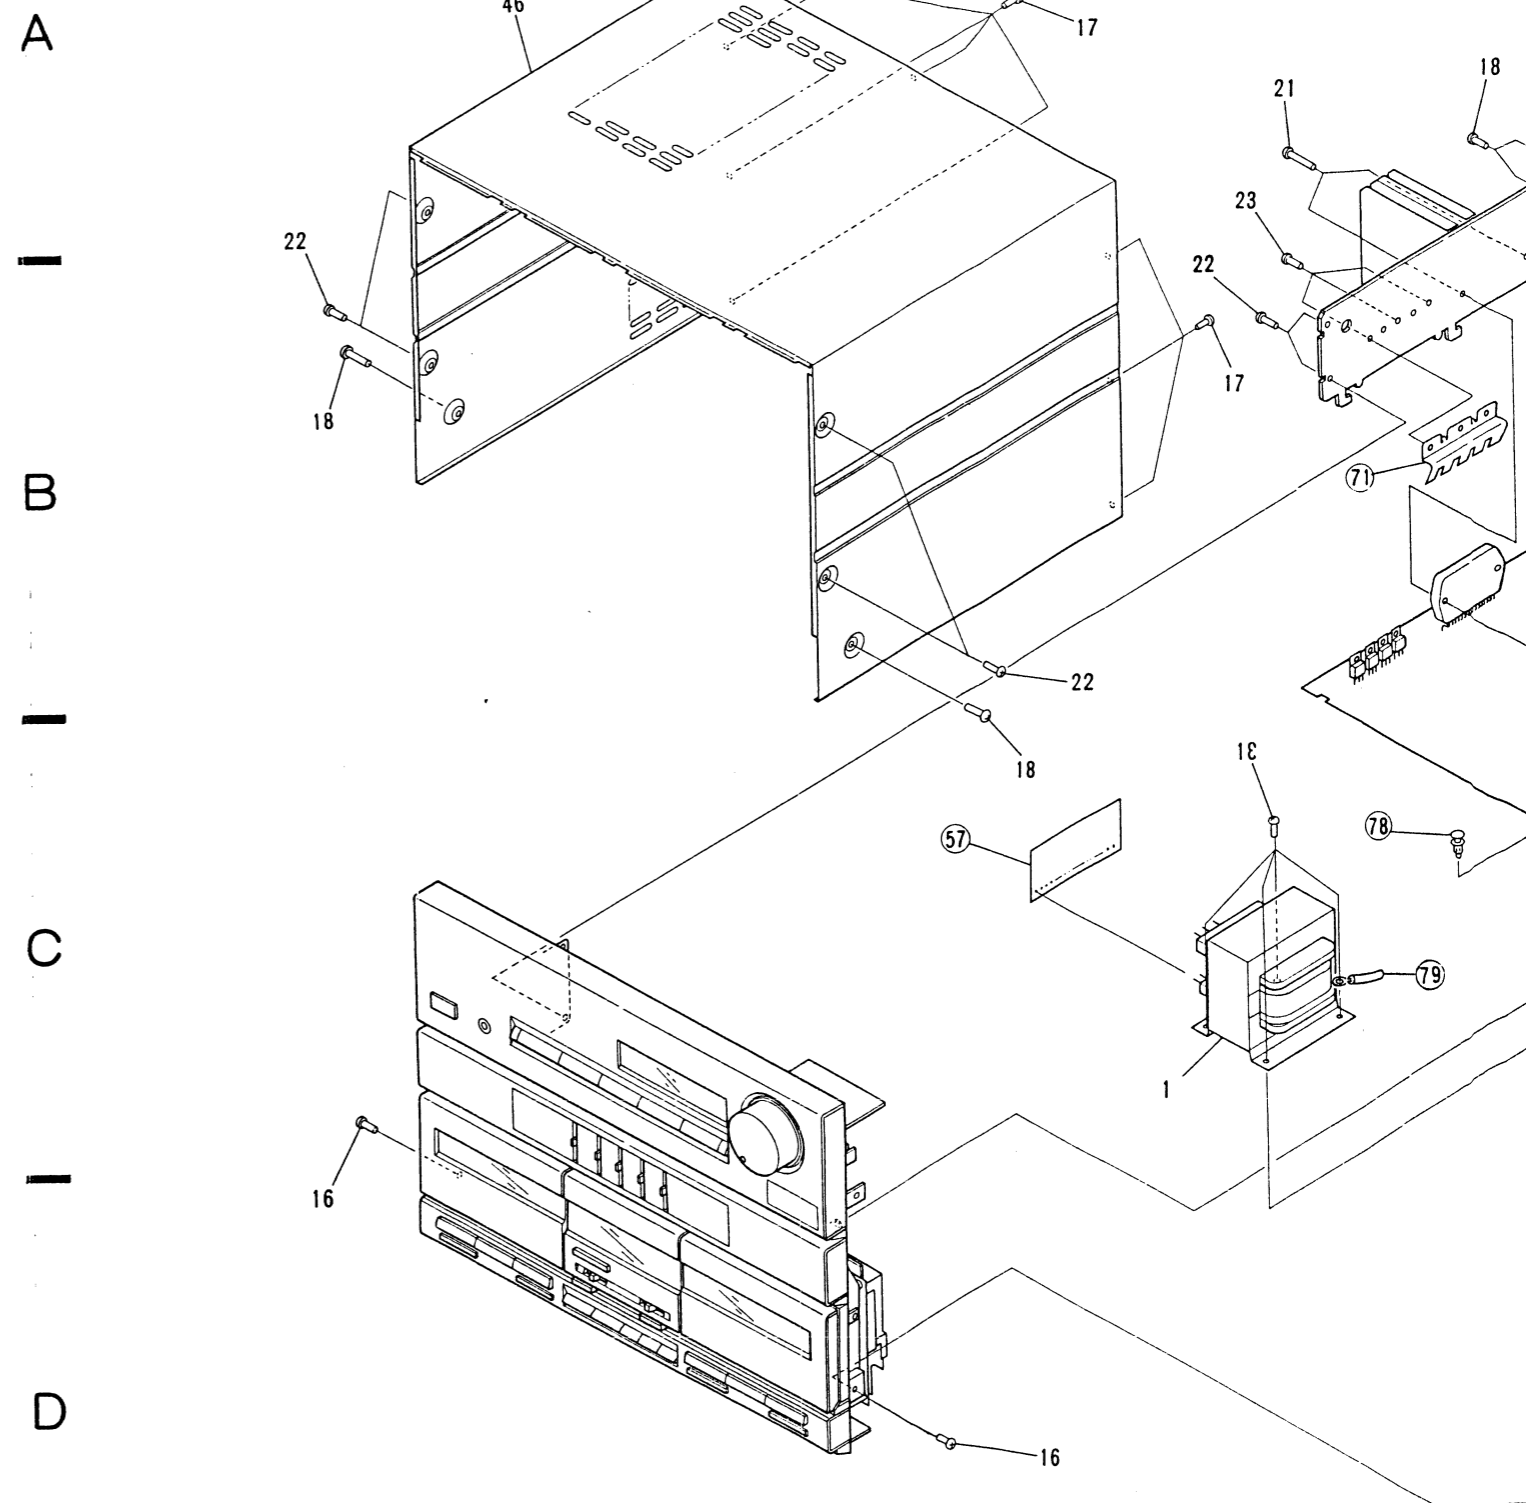


3.2 MAIN BODY SECTION

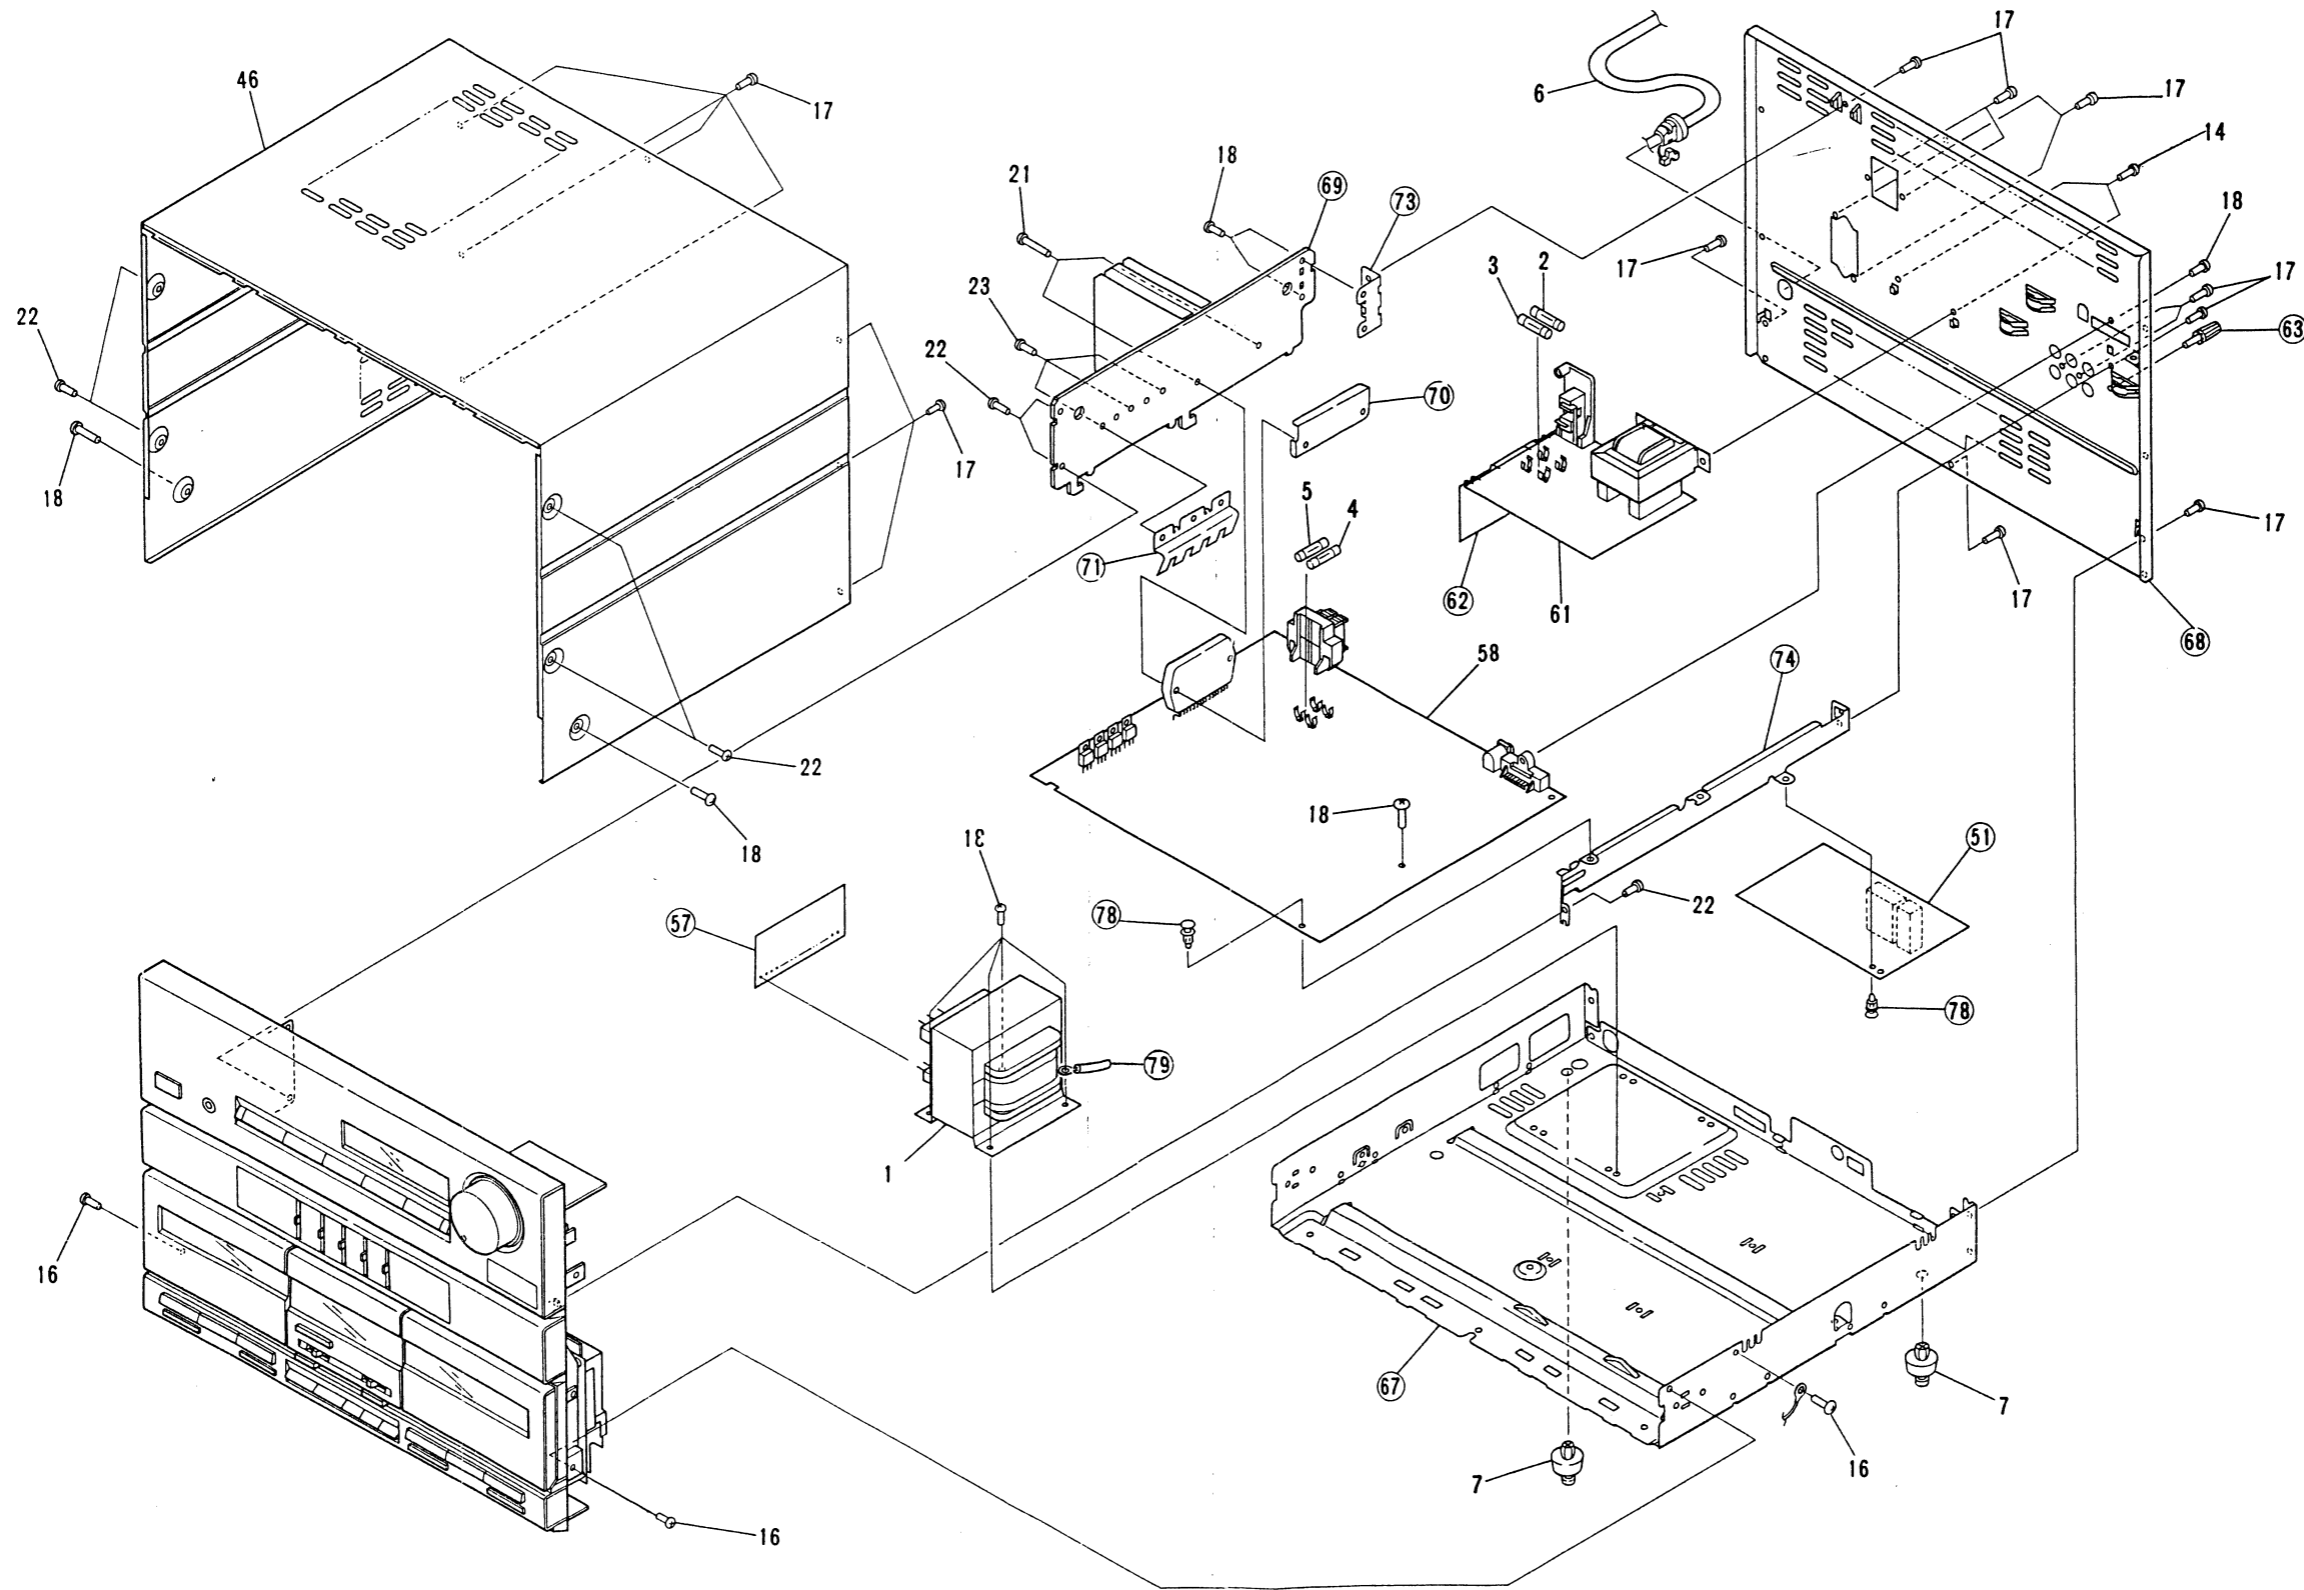


3.3 FRONT PANEL SECTION

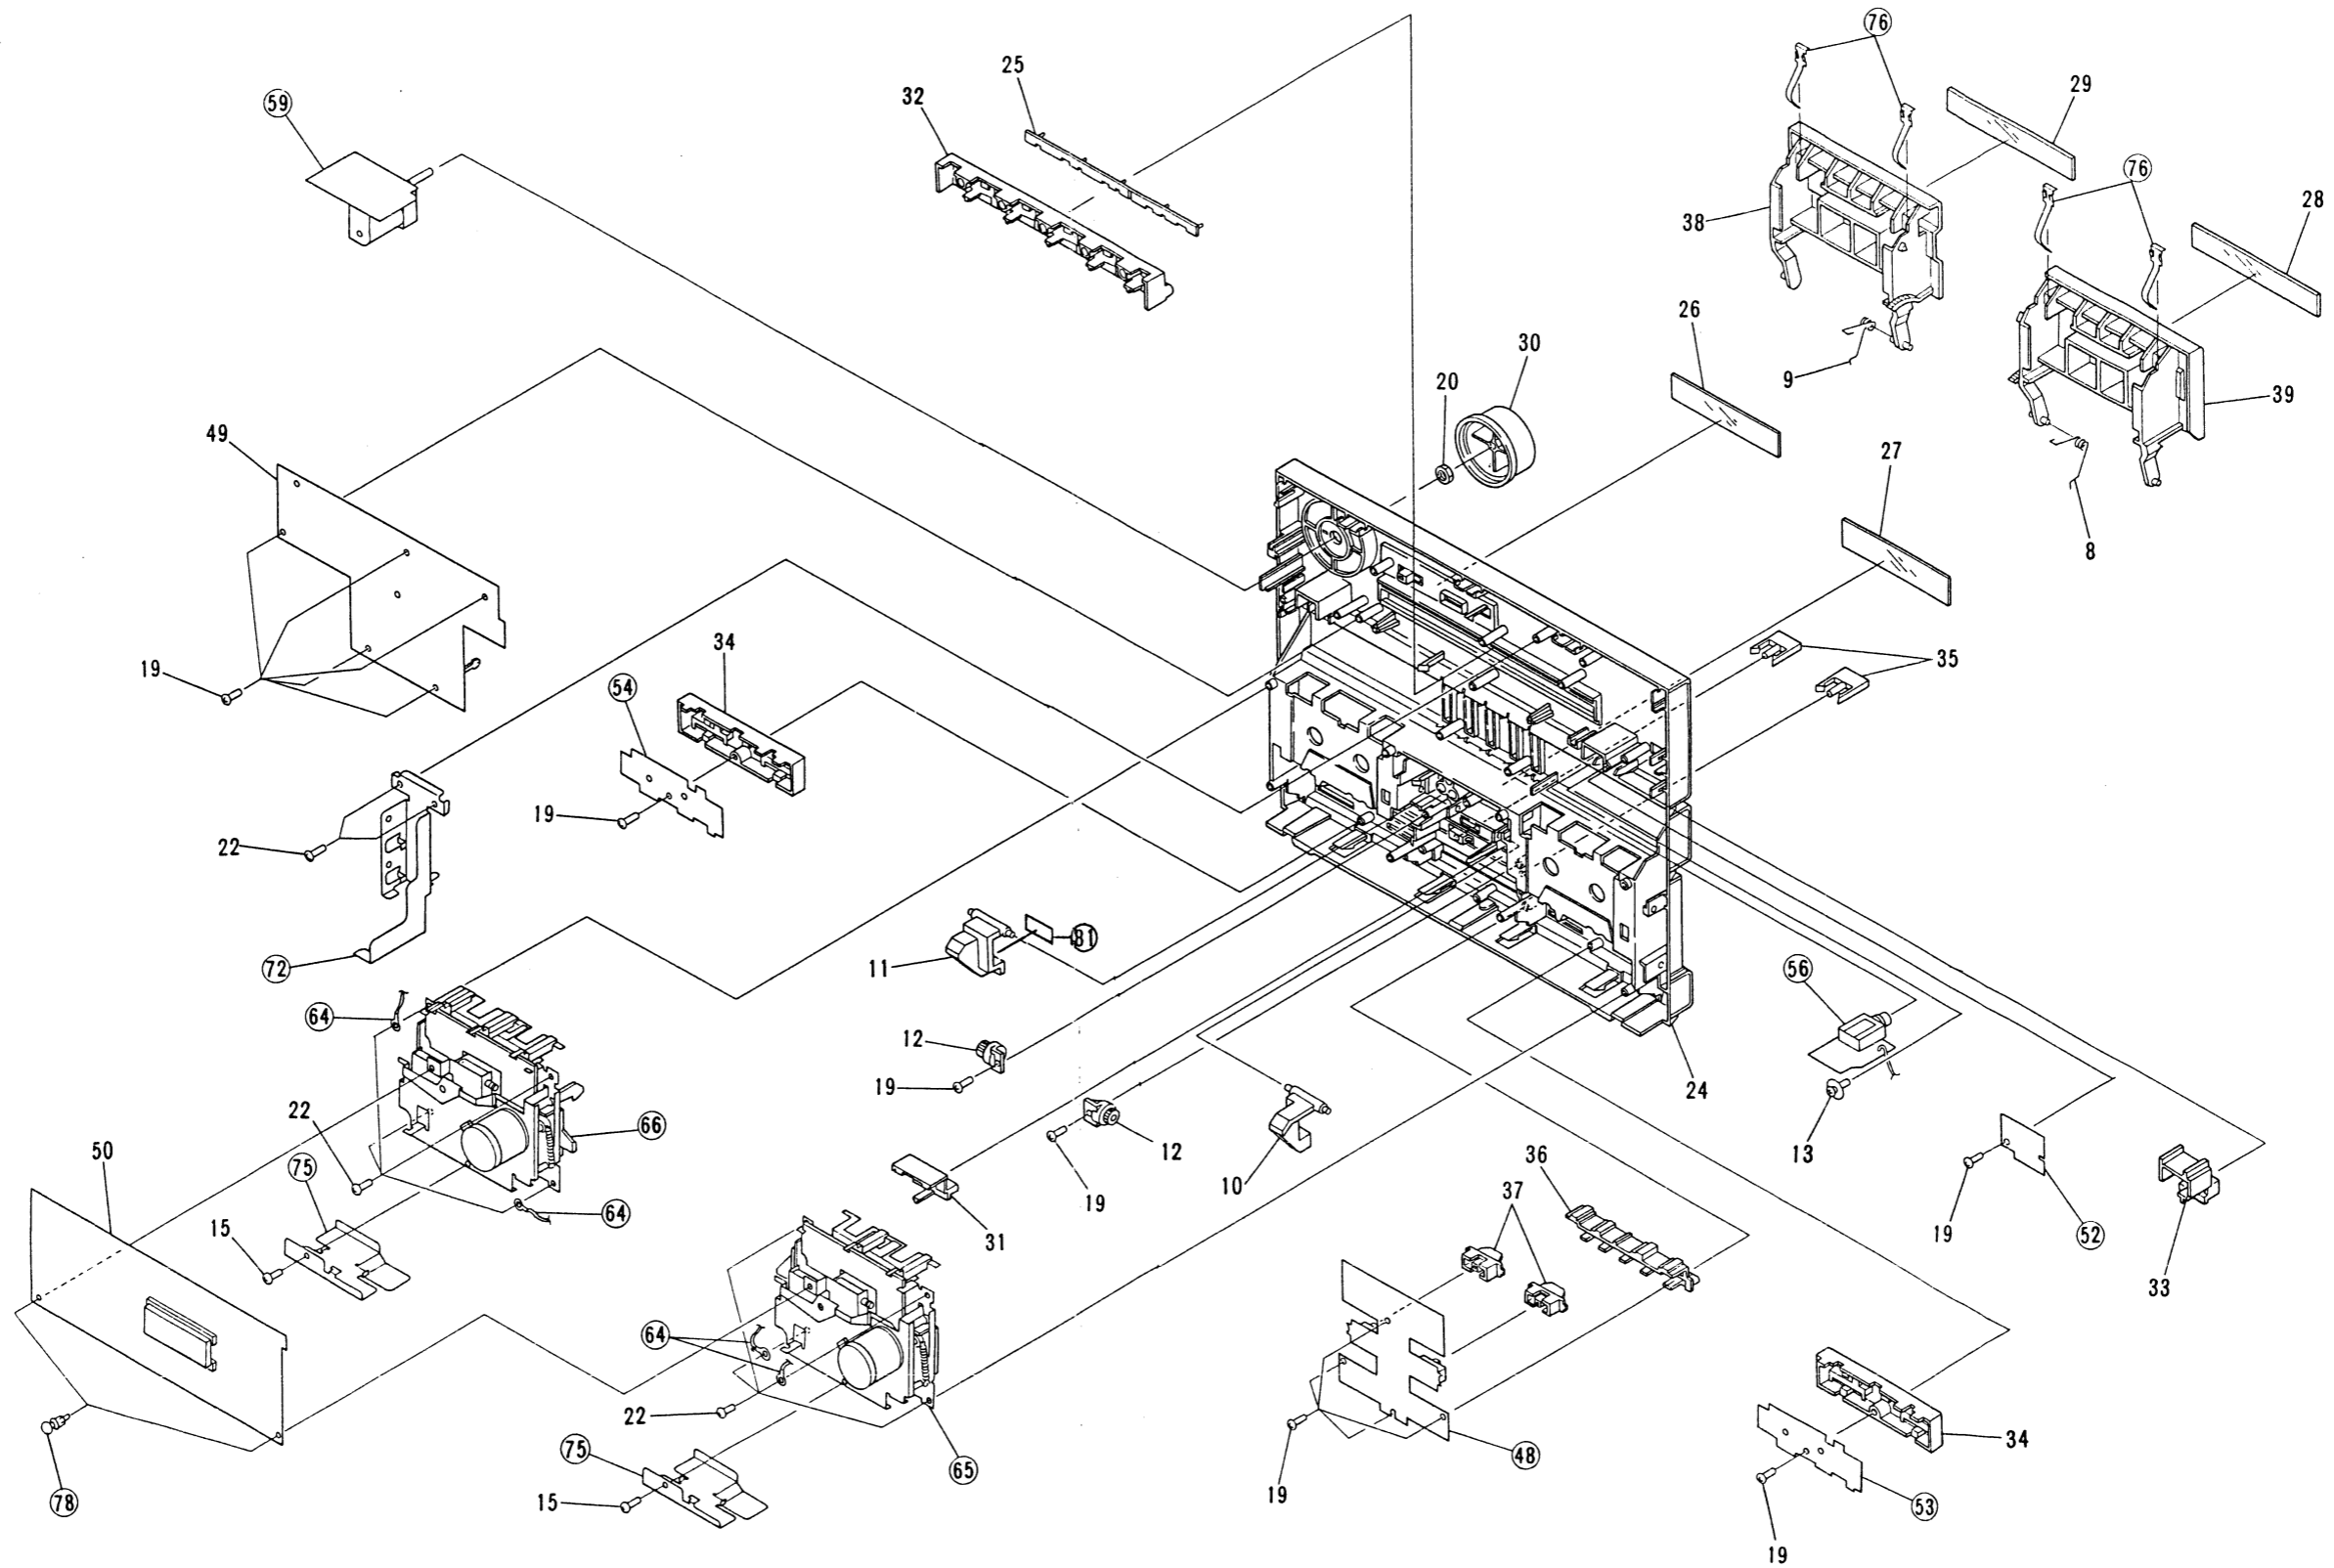

3.4 PACKING

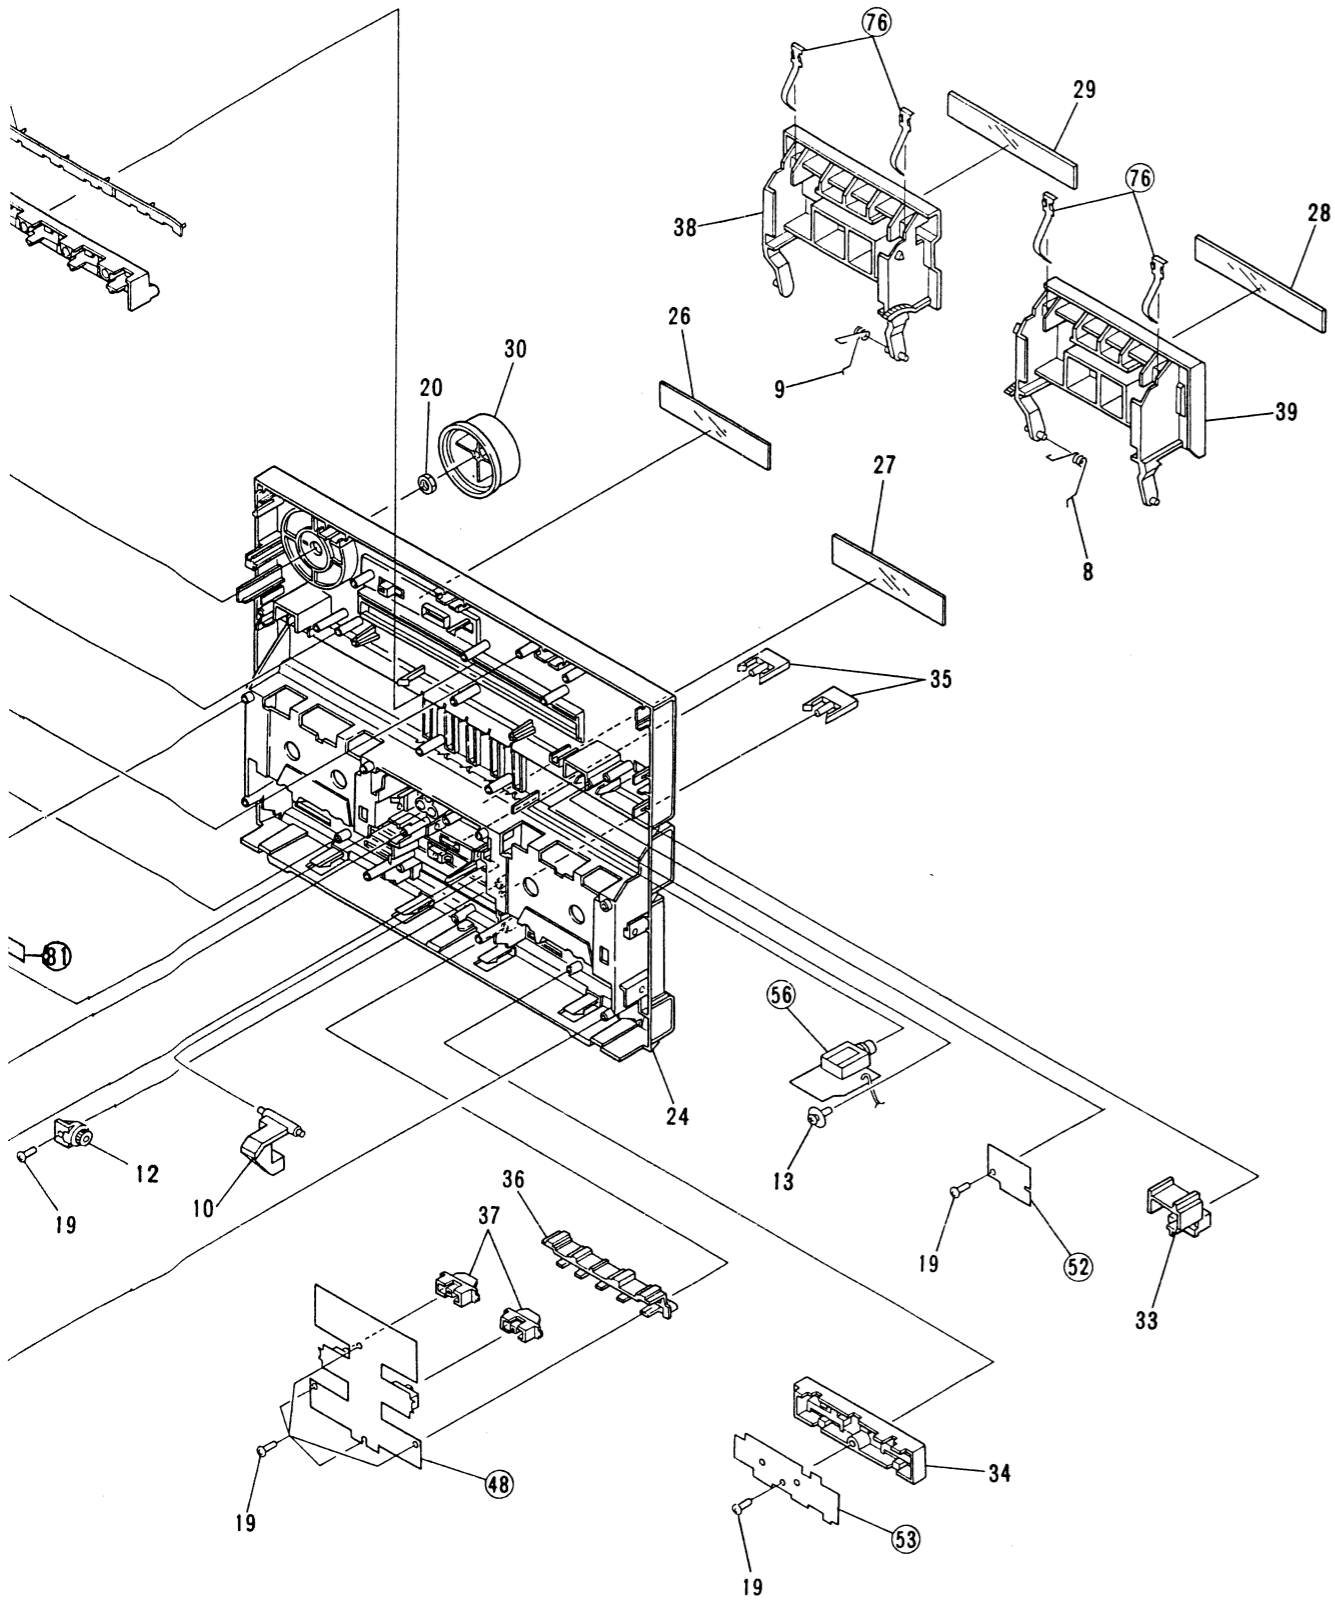

A  
—  
B  
—  
C  
—  
D

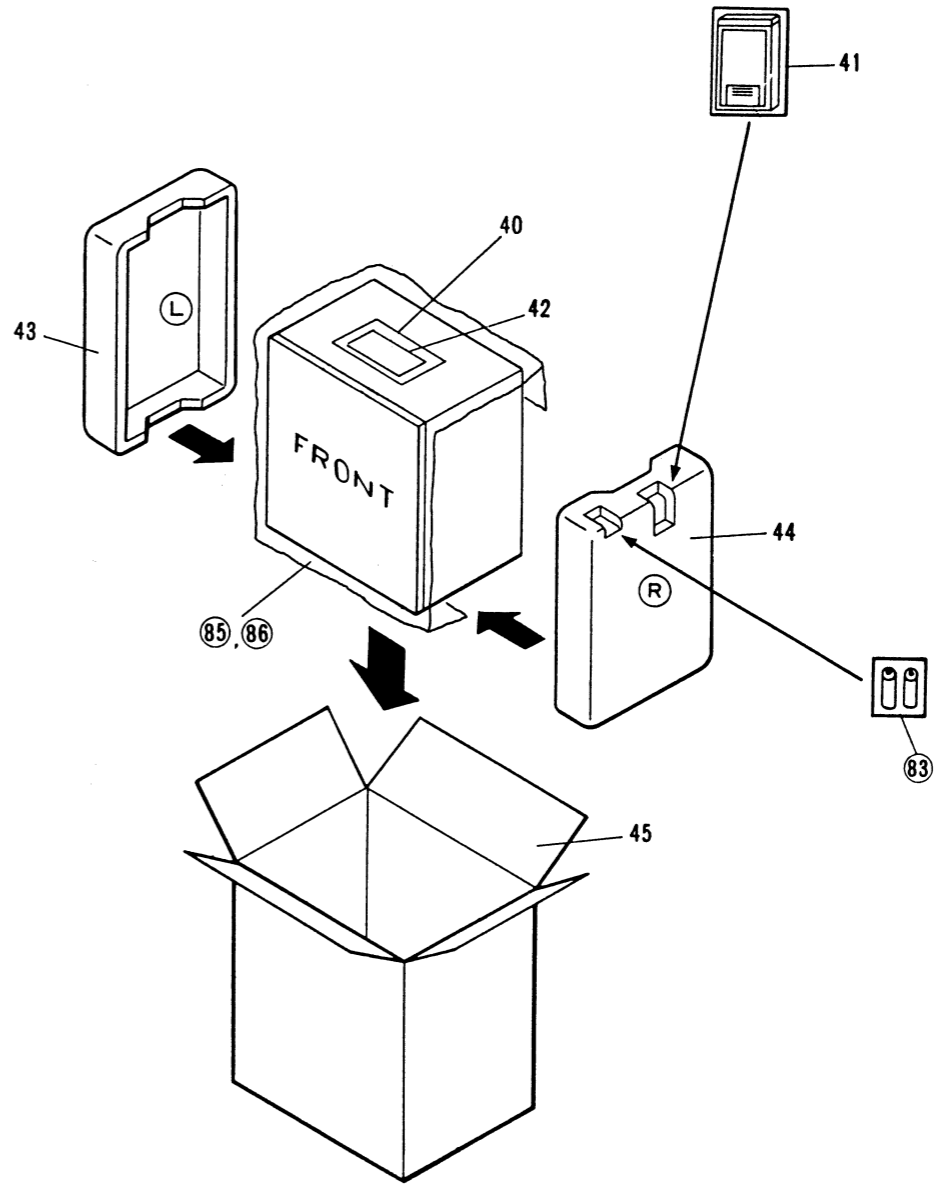

Parts list of Remote control Unit (AXD1088)

Mark	No.	Parts No.	Description
		AZN1856	Battery cover

3.5 MECHA UNIT 1

Mark	No.	Parts No.	Description	Mark	No.	Parts No.	Description
	1	AZE1018	Half IC		53	AZN1326	Head lever calking assembly
	2	AZX1019	Motor		54	AZN1327	FW assembly
	3	AZS1054	Leaf SW(MODE)		55		Head P.C.Board
	4	AZS1034	Leaf SW ( HALF, CrO2)		56		Plate(FLYWHEEL)
	5	AZN1286	Drive arm assembly		57	AZN1328	Azimuth plate
	6	AZN1287	FW assembly A		58		SW arm
	7	AZN1288	Cam gear		59	AZN1356	Eject arm L
	8	AZN1289	Reel		60	AZN1357	Eject arm R
	9	AZN1290	FR arm		61	AZN1330	Head arm
	10	AZN1797	P arm L assembly		62	AZN1331	P Azimuth spring
	11	AZN1798	P arm R assembly		63	AZN1332	Cassette stopper
	12	AZN1293	Gear		64	AZN1333	Play trigger calking assembly
	13	AZN1294	H Gear		65	AZN1334	Head frame
	14	AZN1793	CUE arm		66	AZN1335	Cassette guide L
	15	AZB1079	Screw		67	AZN1336	Cassette guide R
	16	AZB1080	Screw		68	AZN1337	Cassette guide
	17	AZN1296	Collar C		69	AZN1338	Cam gear
	18	AZN1297	Motor pully		70	AZN1469	Head holder
	19	AZN1298	Belt		71	AZN1340	Head gear
	20	AZN1299	Spring		72	AZN1341	Eject arm
	21	AZN1300	FR lever spring		73	AZN1342	Select lever
	22	AZN1301	FWF spring		74	AZN1343	Brake
	23	AZN1302	FWR spring		75	AZN1344	Eject lever L
	24	AZN1303	Spring		76	AZN1345	Ratch lever R
	25	AZB1088	Collar		77	AZN1346	Metal
	26	AZN1467	Cable holder		78	AZN1347	Metal
	27	AZN1306	Spring		79	AZN1348	Cushion
	28	AZN1307	Spring		80	AZN1349	Trigger arm
	29	AZN1308	Spring		81	AZN1350	Plunger
	30	AZN1309	Spring		82	AZS1035	Bobbin
	31	AZN1310	Spring		83	AZN1351	Solenoid plate calking assembly
	32	AZN1311	Spring		84	AZP1022	P Head
	33	AZN1312	Spring		85	AZB1099	Screw
	34	AZN1313	Spring		86	AZN1352	Spring
	35	AZN1314	Spring		87	AZN1304	Spacer
	36	AZN1315	Spring		88	AZN1470	Tube
	37	AZB1081	Screw		89	AZB1100	Screw
	38	AZN1316	Nylon band		90	AZS1036	Bobbin
	39	AZN1835	P.C.Board		91	AZB1101	Screw
	40		Jumper wire		92	AZB1102	Spring washer
	41		Head lead		93	AZN1471	Head spring
	42		Lead wire		94	AZN1833	Capstan holder
	43		Lead wire		95	AZN1834	Capstan holder
	44	AZN1468	Tube		200	AZB1084	Nut
	45		Mecha P.C.Board calking assembly		201	AZB1085	E ring
	46	AZN1319	R Reel assembly		202	AZB1086	D Screw
	47	AZN1320	F Reel assembly		203	AZB1121	P Washer
	48	AZN1321	Reverse arm calking assembly		204	AZB1087	N Washer
	49		FR lever calking assembly		205	AZB1089	U Screw
	50	AZN1795	PLAY lever calking assembly		206	AZB1090	P Washer
	51	AZN1324	Gear arm R calking assembly		207	AZB1091	Oil cut
	52	AZN1325	Gear arm L calking assembly		208	AZB1092	Oil cut
					209	AZB1093	P Washer
					210	AZB1094	P Washer


Mark	No.	Parts No.	Description
	211	AZB1095	D Screw
	212		.....
	213	AZB1097	P Washer
	214	AZB1098	M Washer
	215	AZB1105	P Screw
	216	AZB1106	D Screw
	217	AZB1107	P Washer
	218	AZB1164	P screw
	300	AZX1020	Motor assembly
	301	AZP1023	Head frame assembly
	302	AZB1104	Screw

A

B

C

D

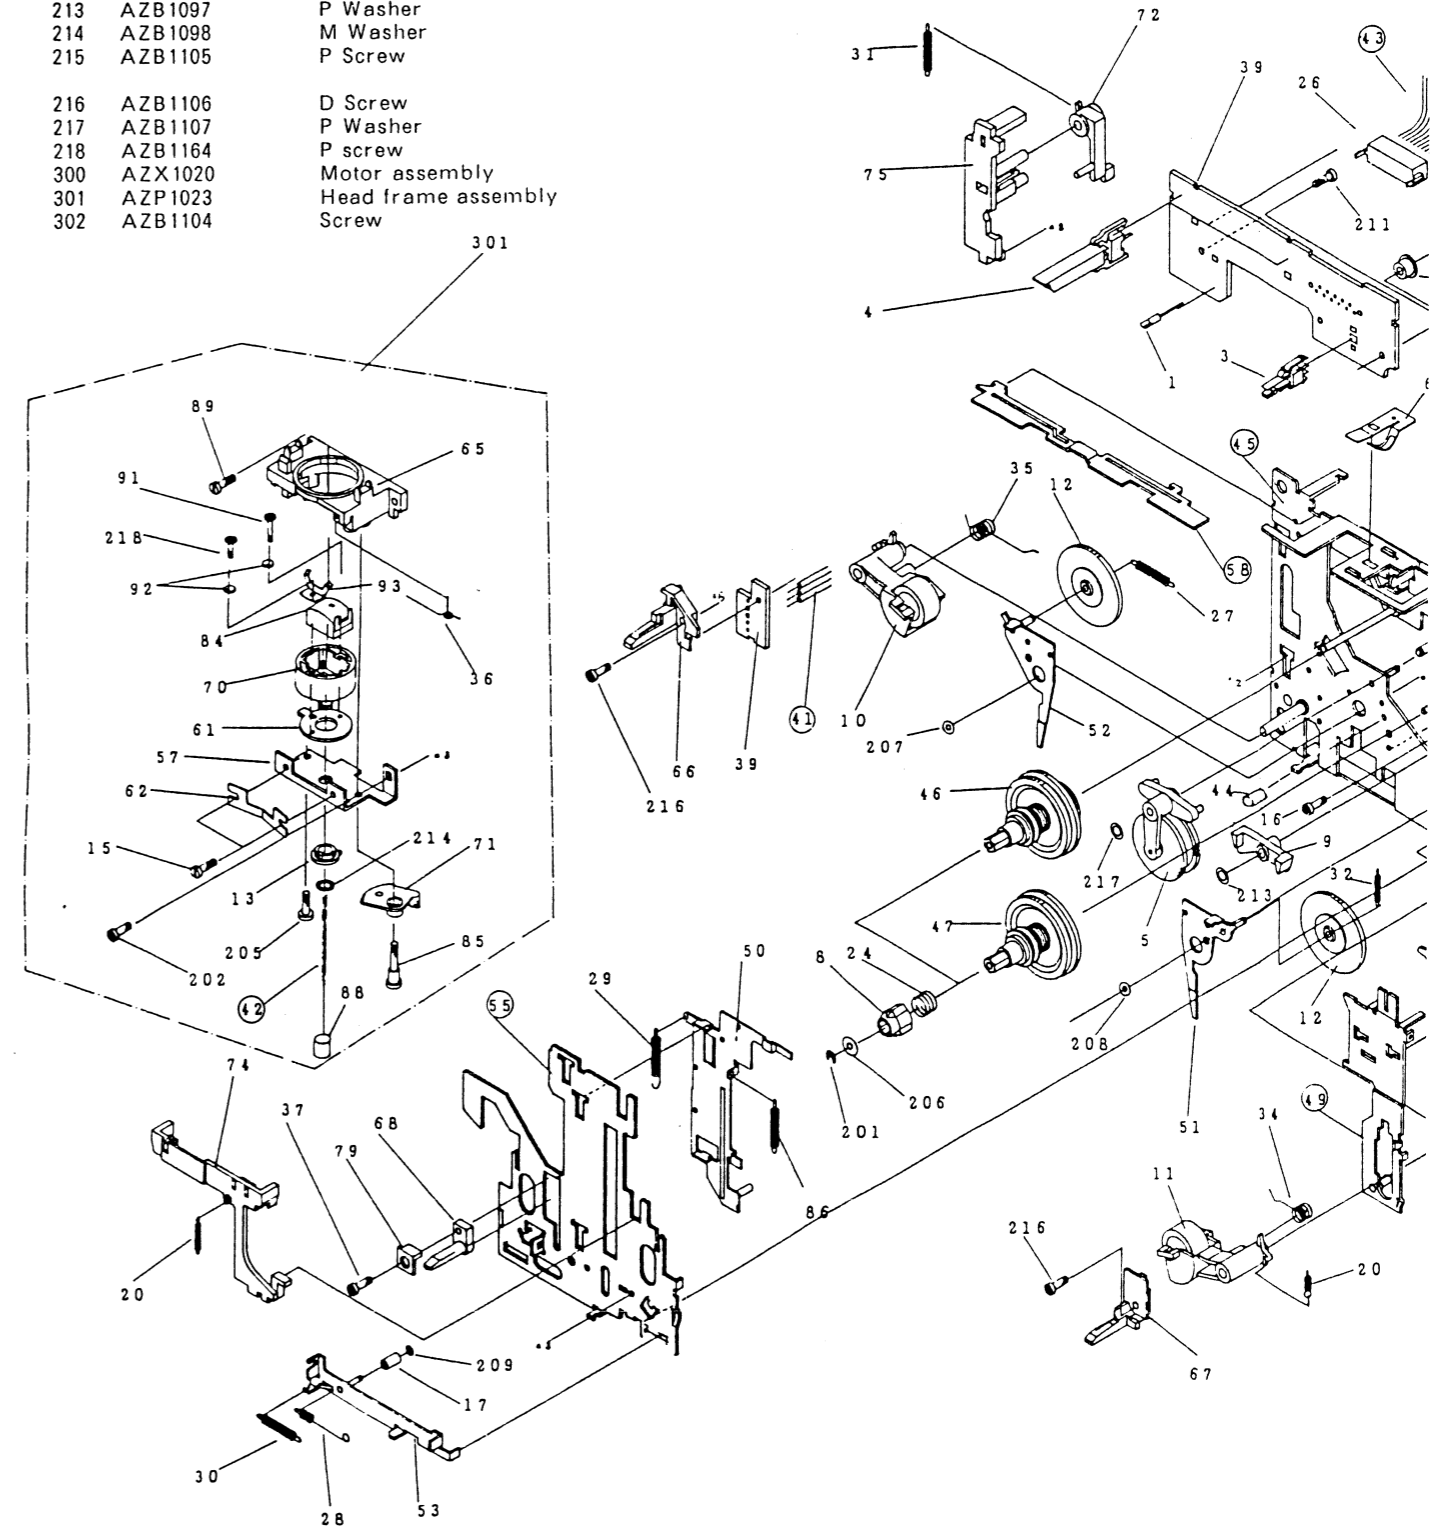

1

2


3

4

5

6

Mark	No.	Parts No.	Description
	211	AZB1095	D Screw
	212		.....
	213	AZB1097	P Washer
	214	AZB1098	M Washer
	215	AZB1105	P Screw
	216	AZB1106	D Screw
	217	AZB1107	P Washer
	218	AZB1164	P screw
	300	AZX1020	Motor assembly
	301	AZP1023	Head frame assembly
	302	AZB1104	Screw

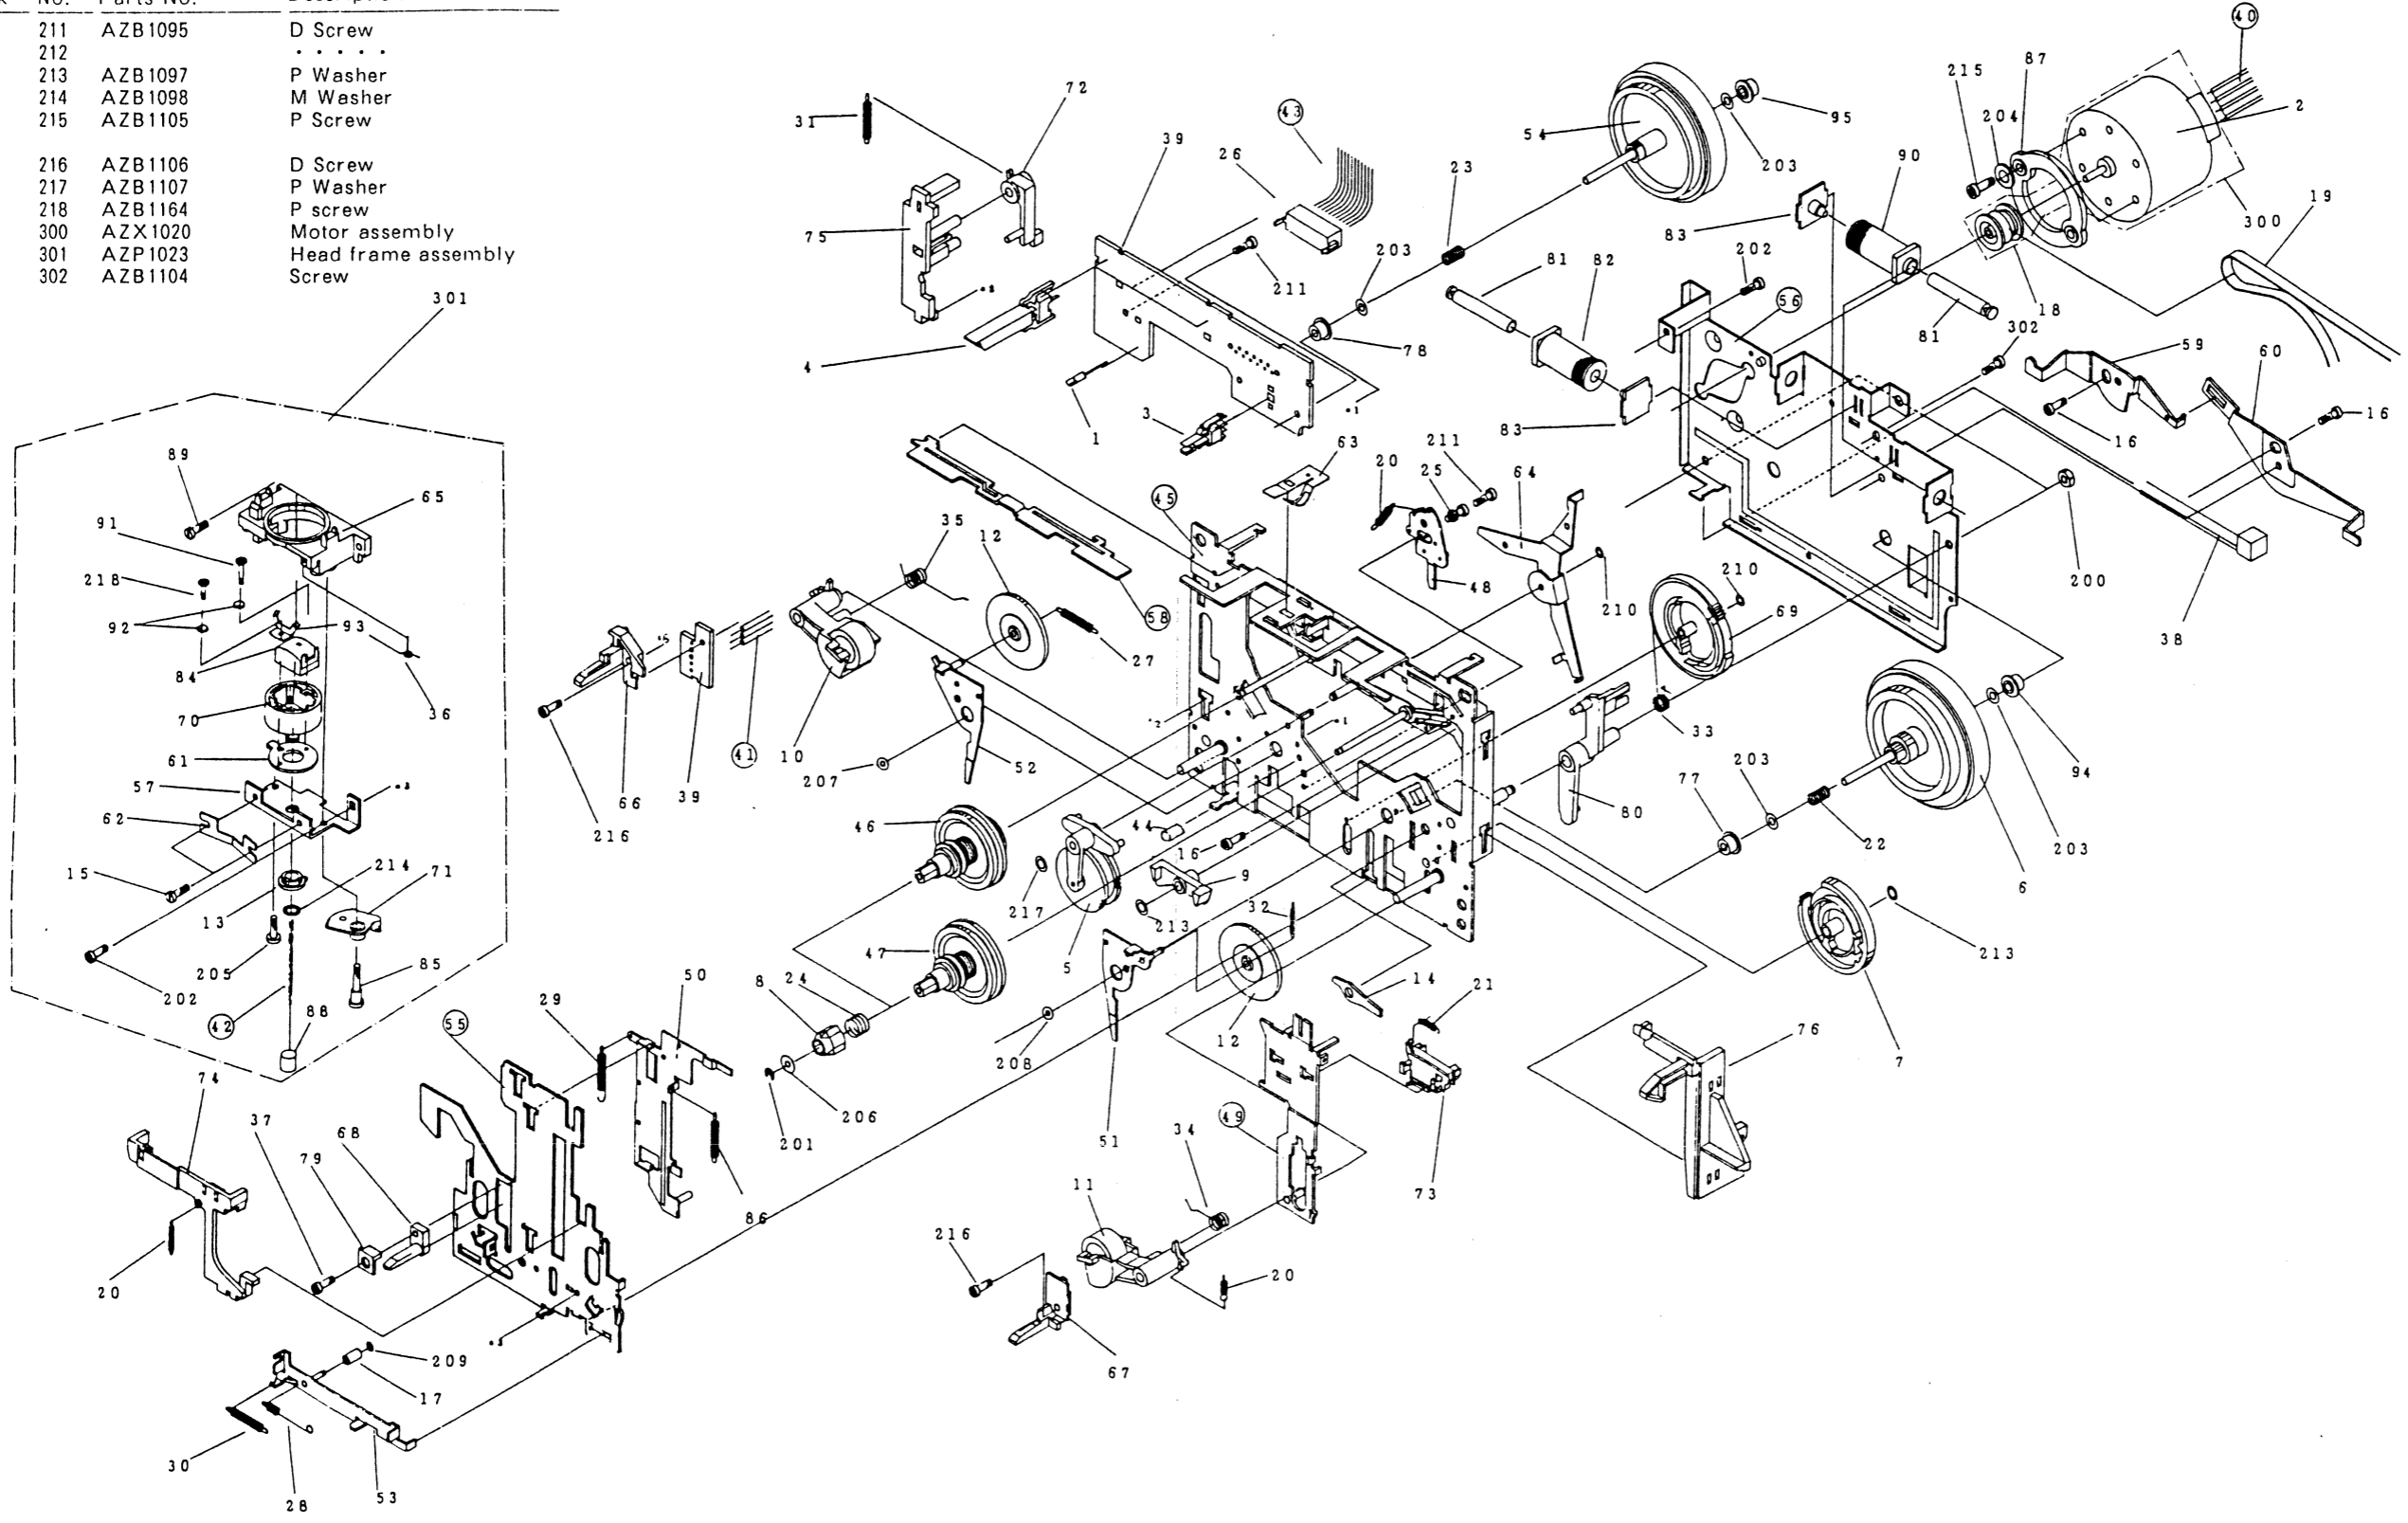

A

B

C

D

A

B

C

D

1

2

3

4

5

6


### 3.6 MECHA UNIT 2

Mark	No.	Parts No.	Description
	1	AZE1018	Hall IC
	2	AZX1019	Motor
	3	AZS1054	Leaf SW(MODE)
	4	AZS1034	Leaf SW ( ARF,HALF,CrO2)
	5	AZN1286	Drive arm assembly
	6	AZN1287	FW assembly A
	7	AZN1288	Cam gear
	8	AZN1289	Reel
	9	AZN1290	FR arm
	10	AZN1797	P arm L assembly
	11	AZN1798	P arm R assembly
	12	AZN1293	Gear
	13	AZN1294	H Gear
	14	AZN1793	CUE arm
	15	AZB1079	Screw
	16	AZB1080	Screw
	17	AZB1296	Collar C
	18	AZN1297	Motor pully
	19	AZN1298	Belt
	20	AZN1299	Spring
	21	AZN1300	FR lever spring
	22	AZN1301	FWF spring
	23	AZN1302	FWR spring
	24	AZN1303	Spring
	25	AZB1088	Collar
	26	AZN1305	Cable holder
	27	AZN1306	Spring
	28	AZN1307	Spring
	29	AZN1308	Spring
	30	AZN1309	Spring
	31	AZN1310	Spring
	32	AZN1311	Spring
	33	AZN1312	Spring
	34	AZN1313	Spring
	35	AZN1314	Spring
	36	AZN1315	Spring
	37	AZB1081	Screw
	38	AZN1316	Nylon band
	39	AZN1836	P.C.Board
	40		Jumper wire
	41		Head lead
	42		Lead wire
	43		Lead wire
	44	AZN1468	Tube
	45		Mecha P.C.Board calking assembly
	46	AZN1319	R Reel assembly
	47	AZN1320	F Reel assembly
	48	AZN1321	Reverse arm calking assembly
	49		FR lever calking assembly
	50	AZN1795	PLAY lever calking assembly
	51	AZN1324	Gear arm R calking assembly
	52	AZN1325	Gear arm L calking assembly

Mark	No.	Parts No.	Description
	53	AZN1326	Head lever calking assembly
	54	AZN1327	FW assembly
	55		Head P.C.Board
	56		Plate(FLYWHEEL)
	57	AZN1328	Azimuth plate
	58		SW arm
	59		.....
	60		.....
	61	AZN1330	Head arm
	62	AZN1331	Azimuth spring
	63	AZN1332	Cassette stopper
	64	AZN1333	Play trigger calking assembly
	65	AZN1334	Head frame
	66	AZN1335	Cassette guide L
	67	AZN1336	Cassette guide R
	68	AZN1337	Cassette guide
	69	AZN1338	Cam gear
	70	AZN1469	Head holder
	71	AZN1340	Head gear
	72	AZN1341	Eject arm
	73	AZN1342	Select lever
	74	AZN1343	Brake .....
	75		.....
	76	AZN1353	Ratch lever R
	77	AZN1346	Metal
	78	AZN1347	Metal
	79	AZN1348	Cushion
	80	AZN1349	Trigger arm
	81	AZN1350	Plunger
	82	AZS1035	Bobbin
	83	AZN1351	Solenoid plate calking assembly
	84	AZP1014	R/P/E Head
	85	AZB1099	Screw
	86	AZN1352	Spring
	87	AZN1304	Spacer
	88	AZN1470	Tube
	89	AZB1100	Screw
	90	AZS1036	Bobbin
	91	AZB1101	Screw
	92	AZB1102	Spring washer .....
	93		.....
	94	AZN1833	Capstan holder
	95	AZN1834	Capstan holder
	200	AZB1084	Nut
	201	AZB1085	E ring
	202	AZB1086	D Screw
	203	AZB1121	P Washer
	204	AZB1087	N Washer
	205	AZB1089	U Screw
	206	AZB1090	P Washer
	207	AZB1091	Oil cut
	208	AZB1092	Oil cut
	209	AZB1093	P Washer
	210	AZB1094	P Washer

Mark	No.	Parts No.	Description
	211	AZB1095	D Screw
	212		.....
	213	AZB1097	P Washer
	214	AZB1098	M Washer
	215	AZB1105	P Screw
	216	AZB1106	D Screw
	217	AZB1107	P Washer .....
	218		.....
	300	AZX1020	Motor assembly
	301	AZP1016	Head frame assembly
	302	AZB1104	Screw

A  
B  
C  
D

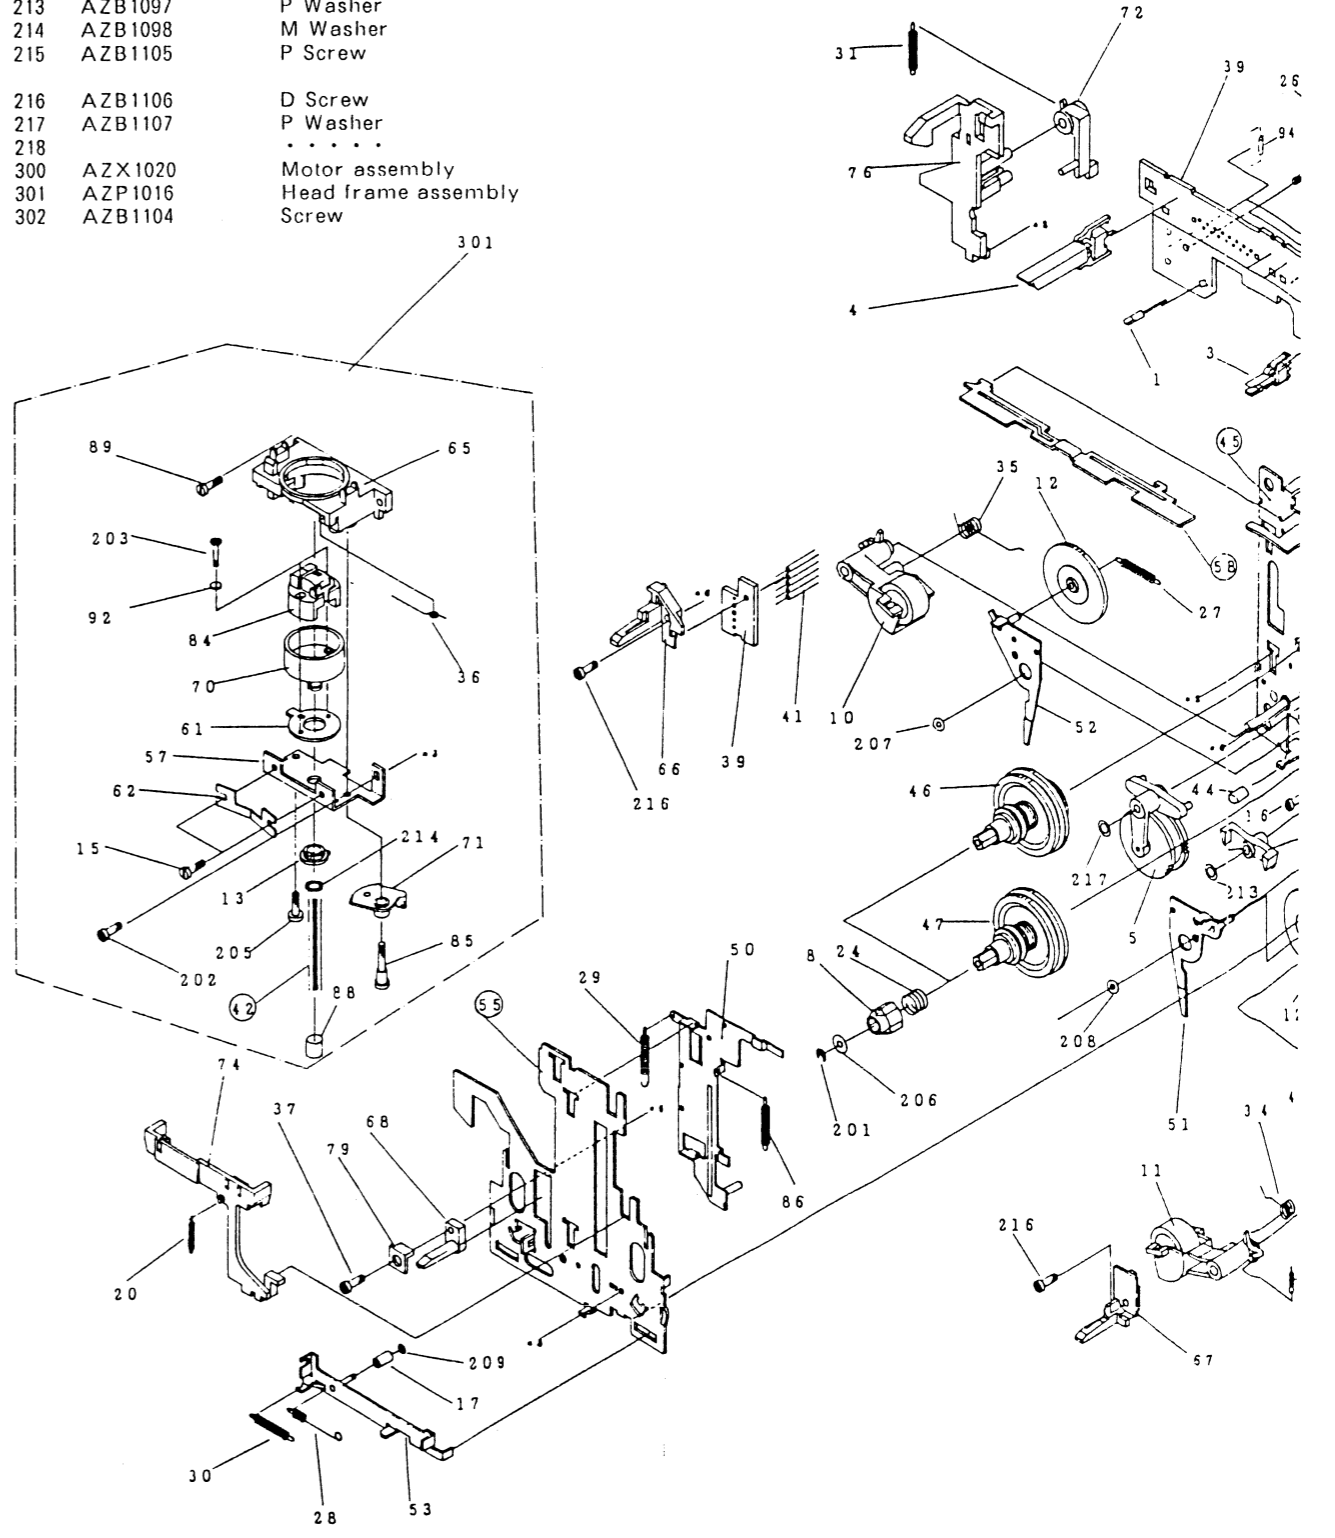





# 4. SCHEMATIC DIAGRAM AND P.C. BOARD CONNECTION DIAGRAM


## 4.1 OVER ALL SCHEMATIC DIAGRAM

A


B

C

D

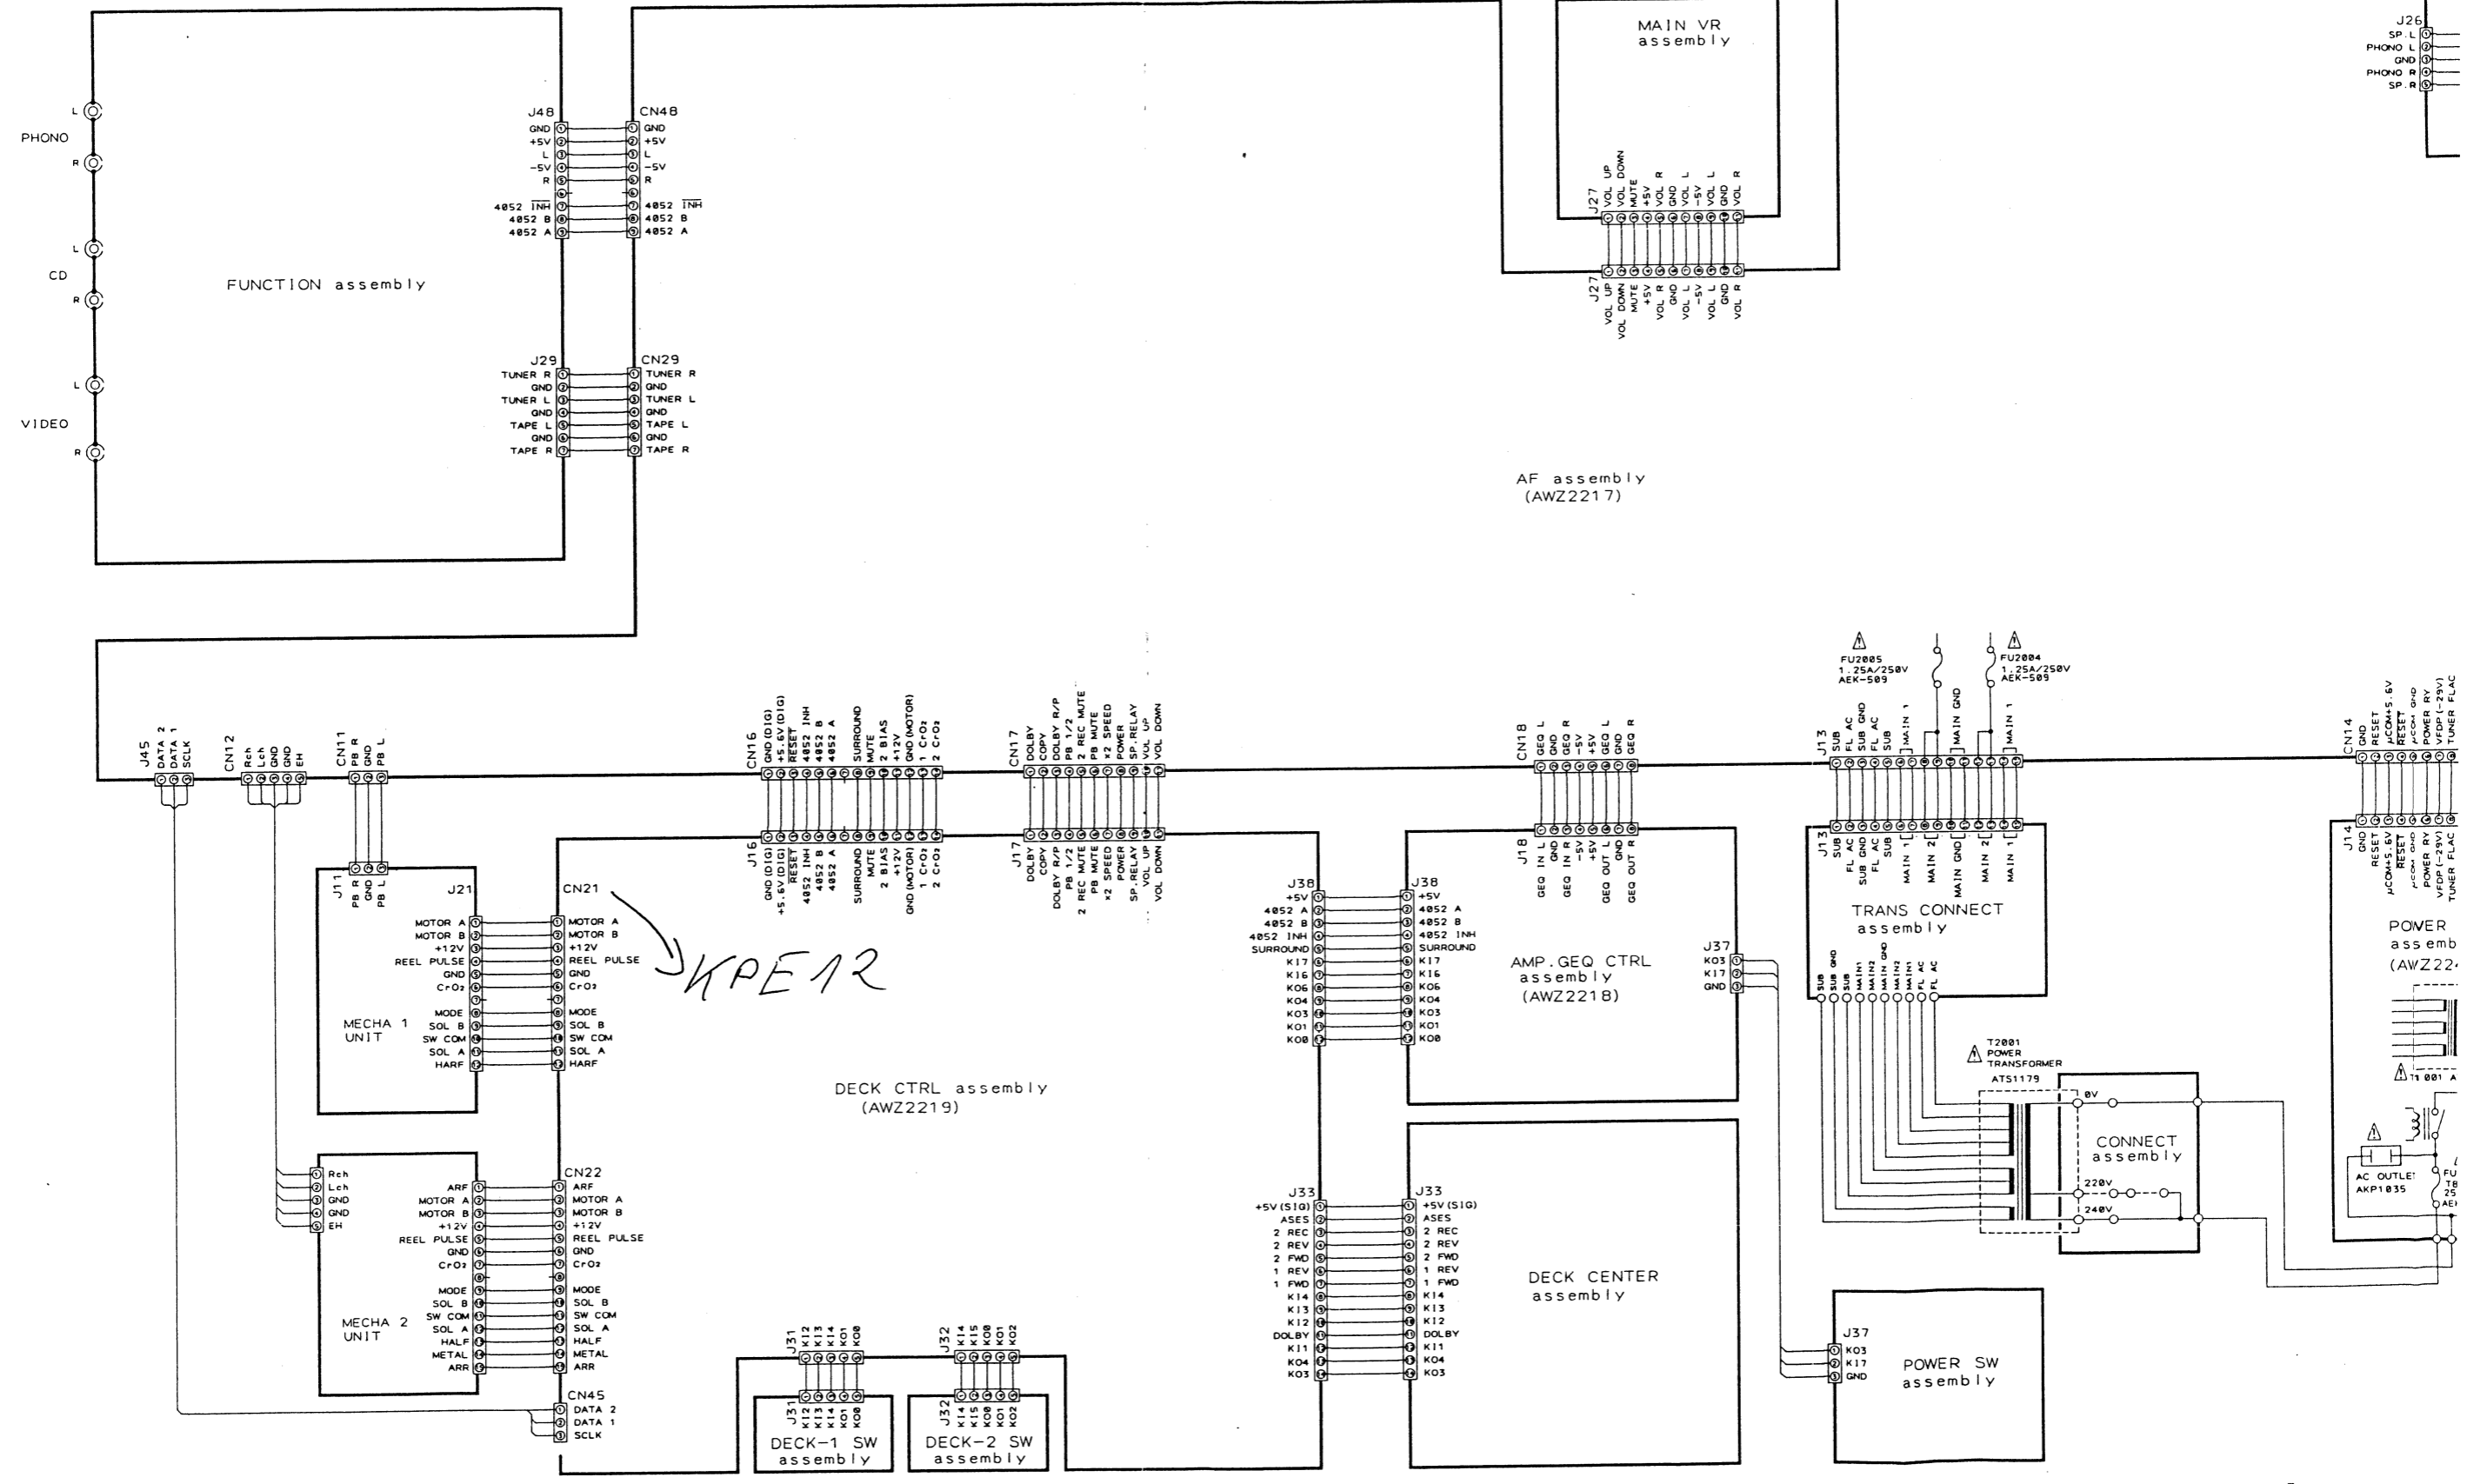

# ION DIAGRAM

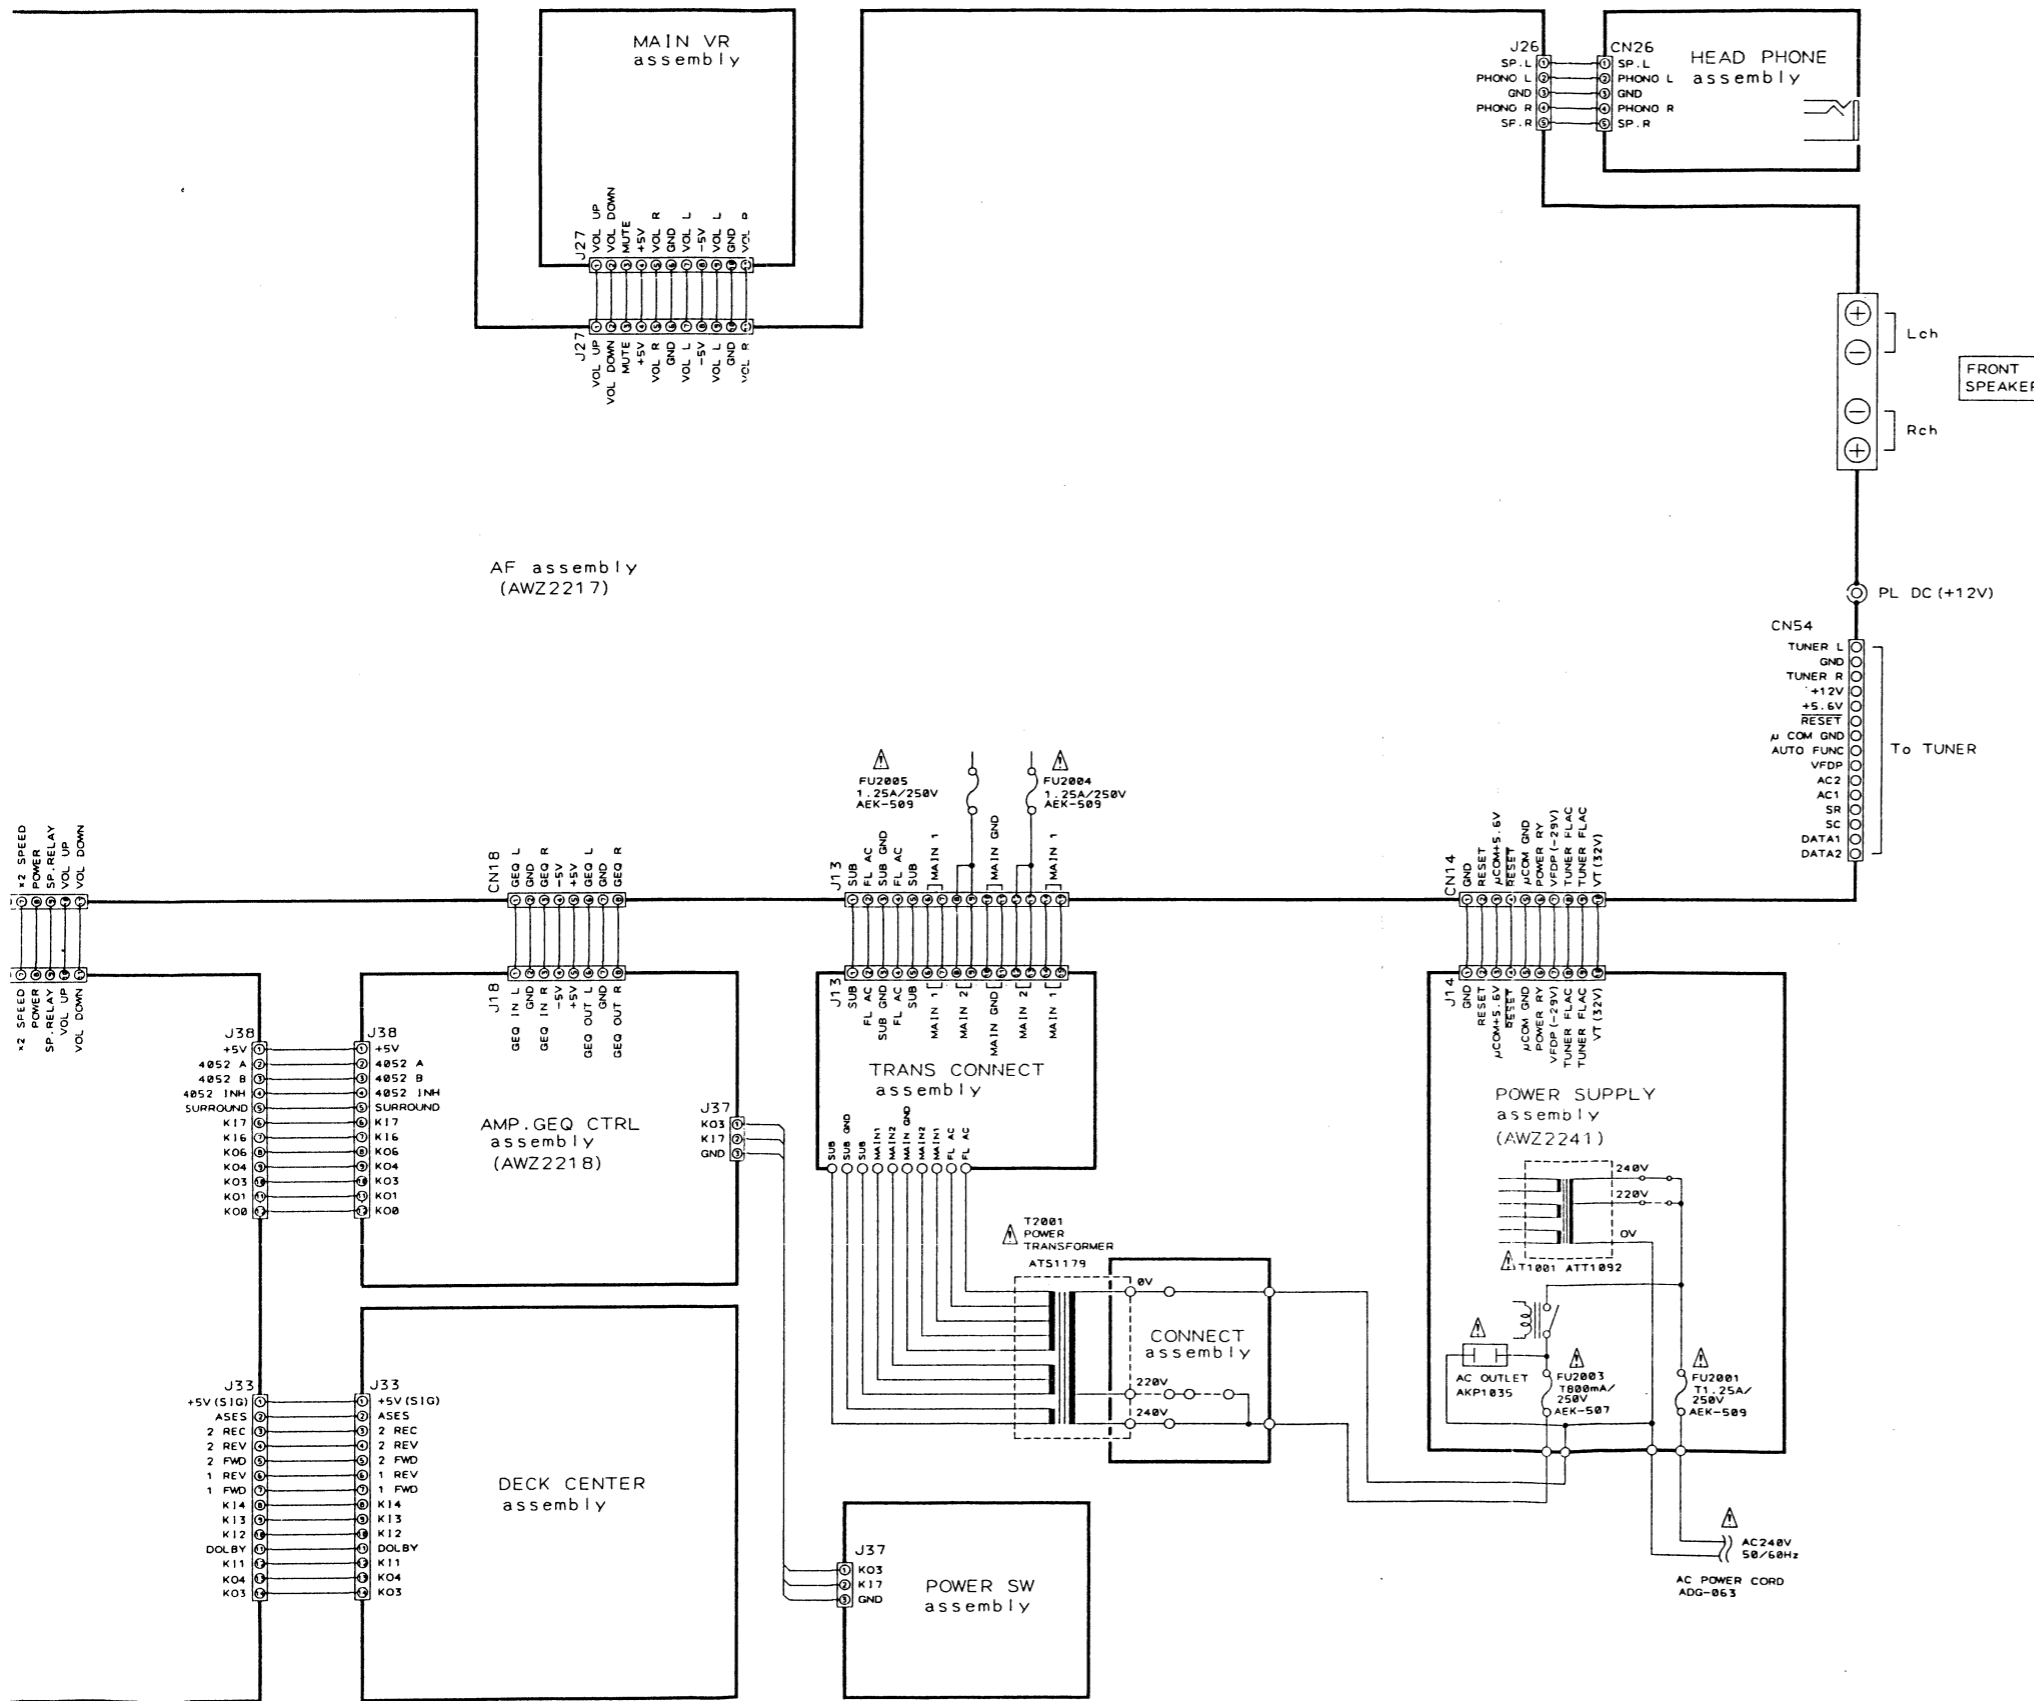

- RESISTORS:**  
Indicated in  $\Omega$ ,  $\frac{1}{4}W$ ,  $\frac{1}{2}W$ ,  $\frac{3}{4}W$ ,  $\pm 5\%$  tolerance unless otherwise noted k: k $\Omega$ , M: M $\Omega$ , (F):  $\pm 1\%$ , (G):  $\pm 2\%$ , (K):  $\pm 10\%$  (M);  $\pm 20\%$  tolerance
- CAPACITORS:**  
Indicated in capacity ( $\mu F$ )/voltage (V) unless otherwise noted p: pF  
Indication without voltage is 50V except electrolytic capacitor.
- VOLTAGE, CURRENT:**  
  - : Signal voltage at (33W + 33W 8 $\Omega$ ) output (1kHz)
  - : DC voltage (V) at no input signal
  - Value in ( ) is DC voltage at rated power.
  - ↔ mA: DC current at no input signal
- OTHERS:**  
  - ➔: Signal route.
  - ⊗: Adjusting point.

The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.  
\* marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

- SWITCHES:**
- AMP, GEQ CTRL assembly (AWZ2218)  
S701-S705 TACT SW
  - DECK-1 SW assembly  
S811-S815 TACT SW
  - DECK-2 SW assembly  
S821-S825 TACT SW
  - DECK CENTER assembly  
S847 DOLBY OFF-ON  
S848 REVERSE MODE
  - S841-S846 TACT SW
  - POWER SW assembly  
S707 POWER

The underline indicates the switch position

A

B

C

D

15

11

10

9

8

A

B

C

D

15

11


10

9


8

7


AMP GEO CTRL assembly (AW3318)

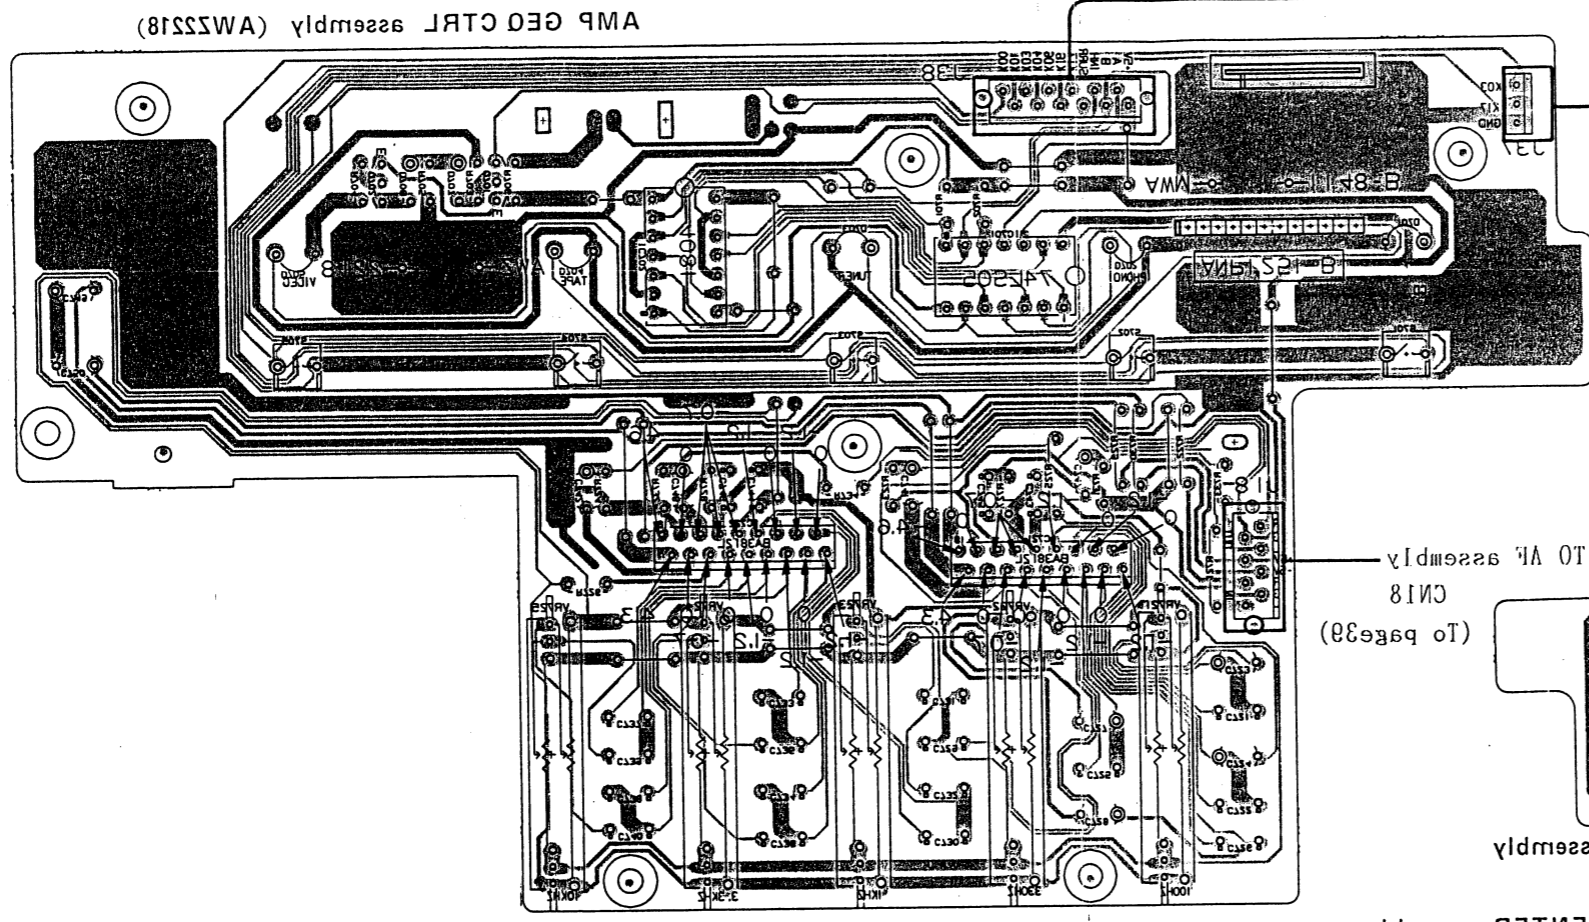


TO VR assembly  
CN18  
(To base)

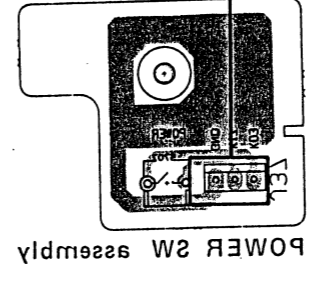


DECK CENTER assembly

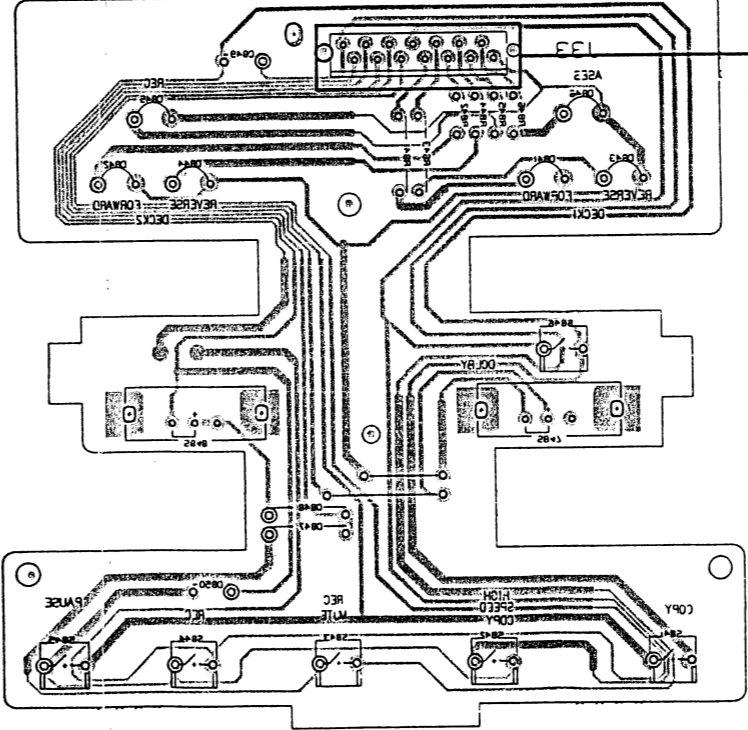

assembly (AW3318)

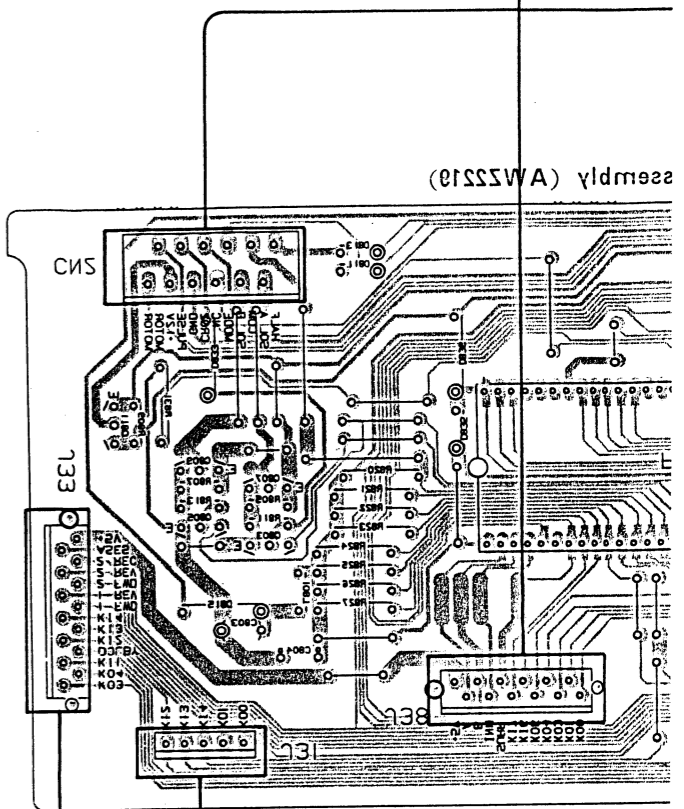





0811 0802 0803 0804 0805 0811

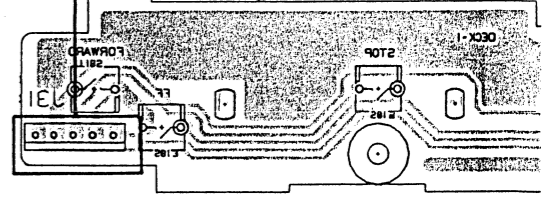

assembly

1 2 3 4 5 6


NOTE:  
This picture shows the foil side of the printed circuit.

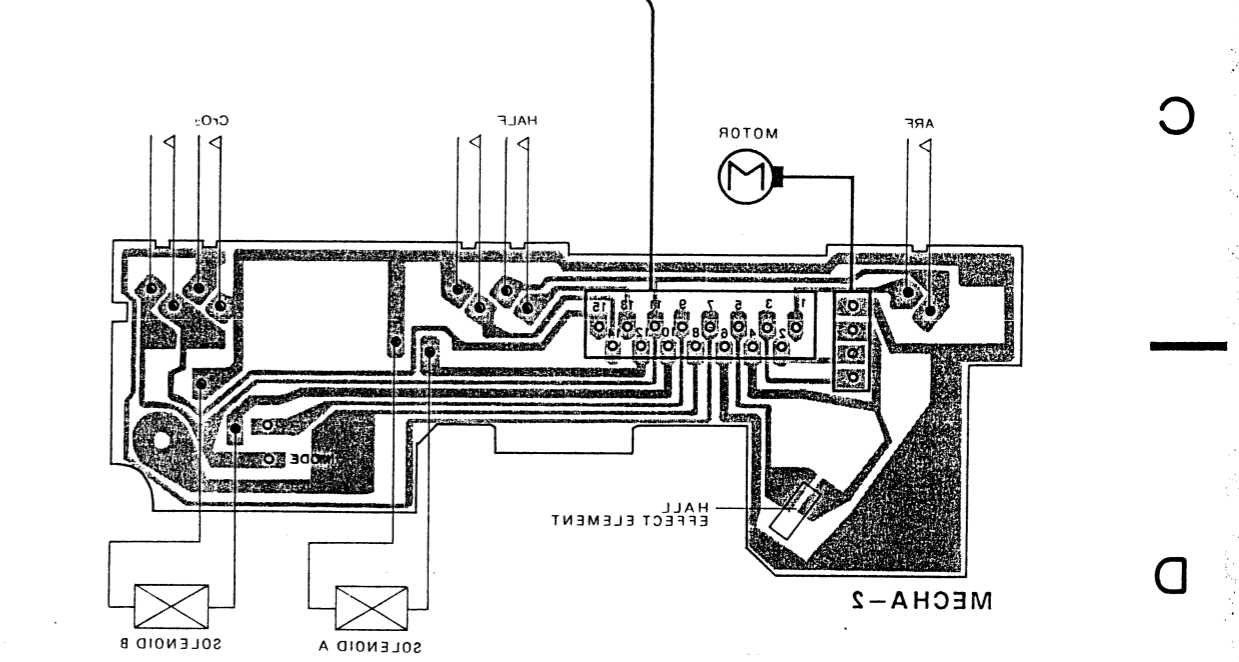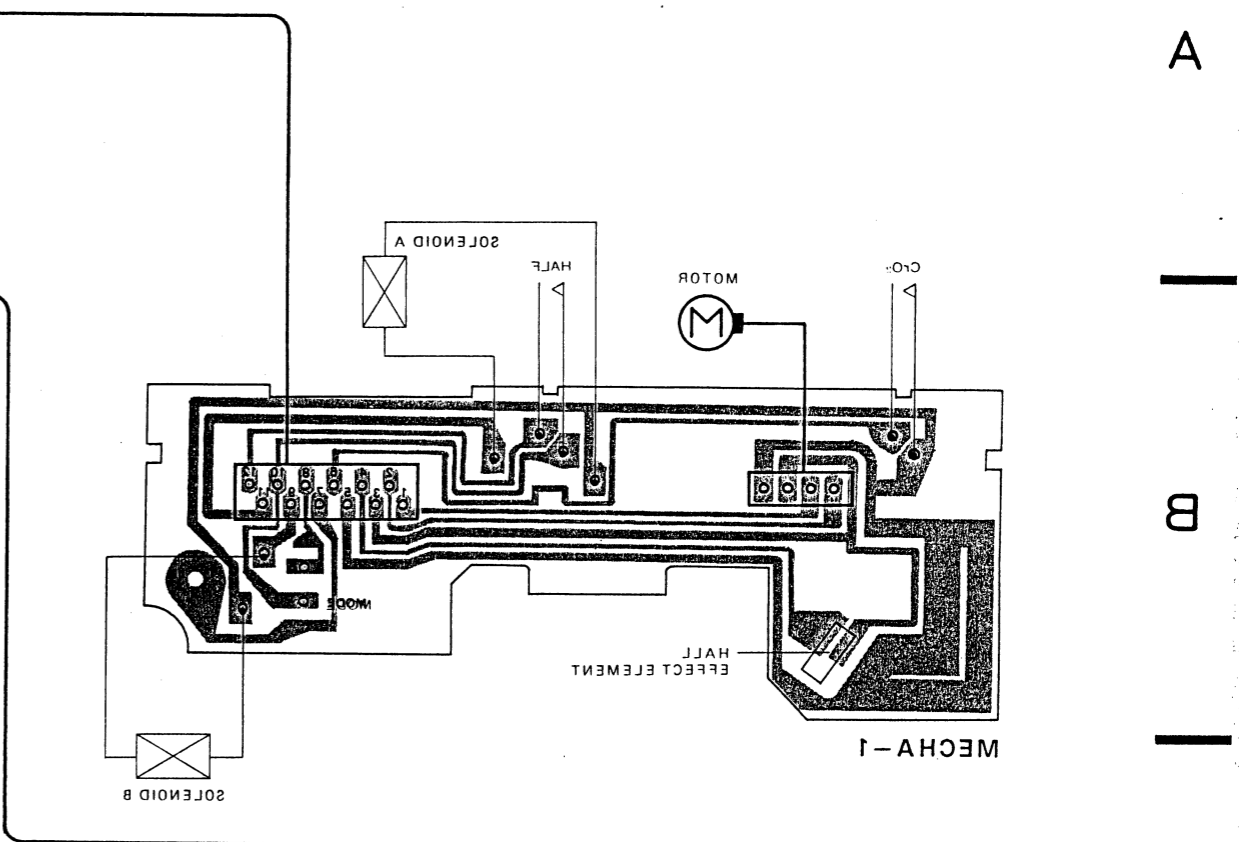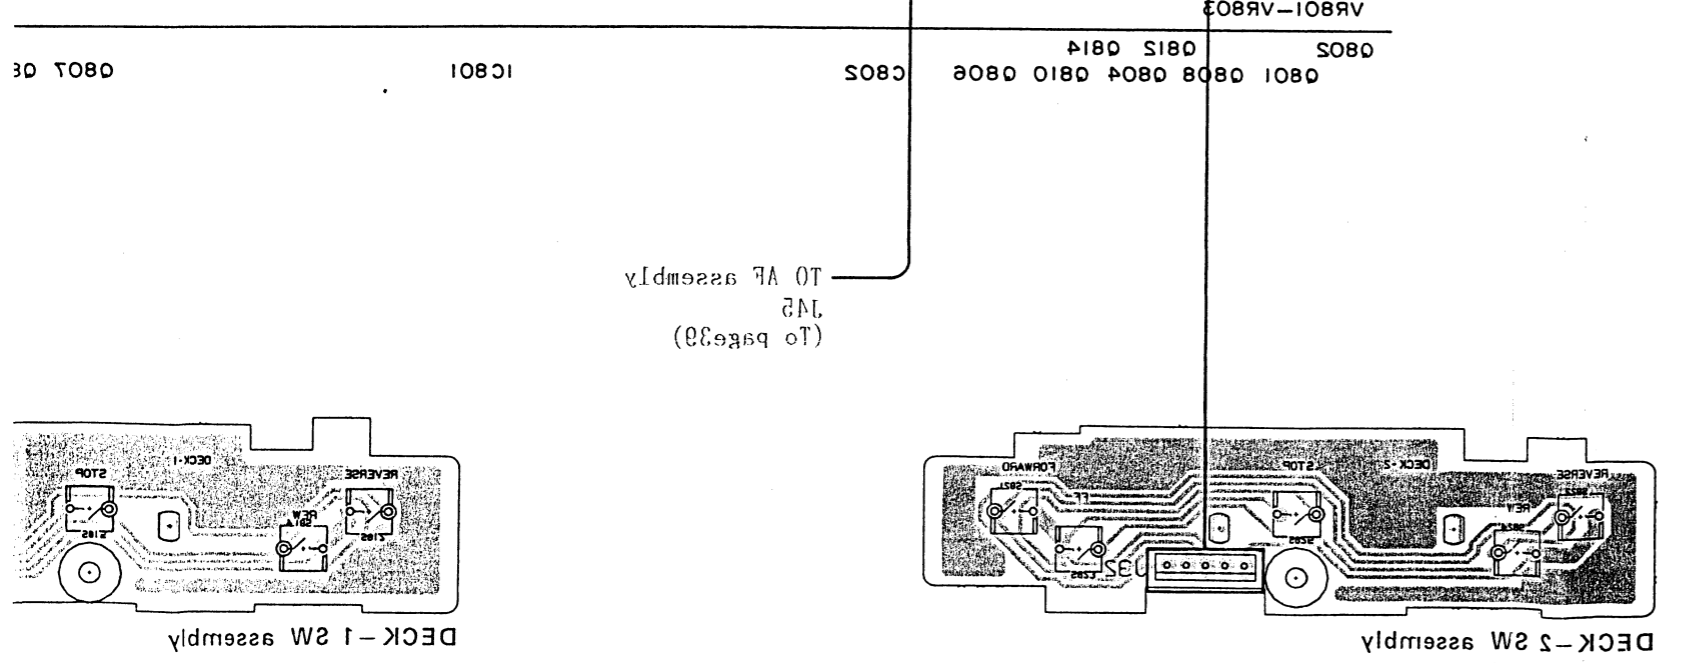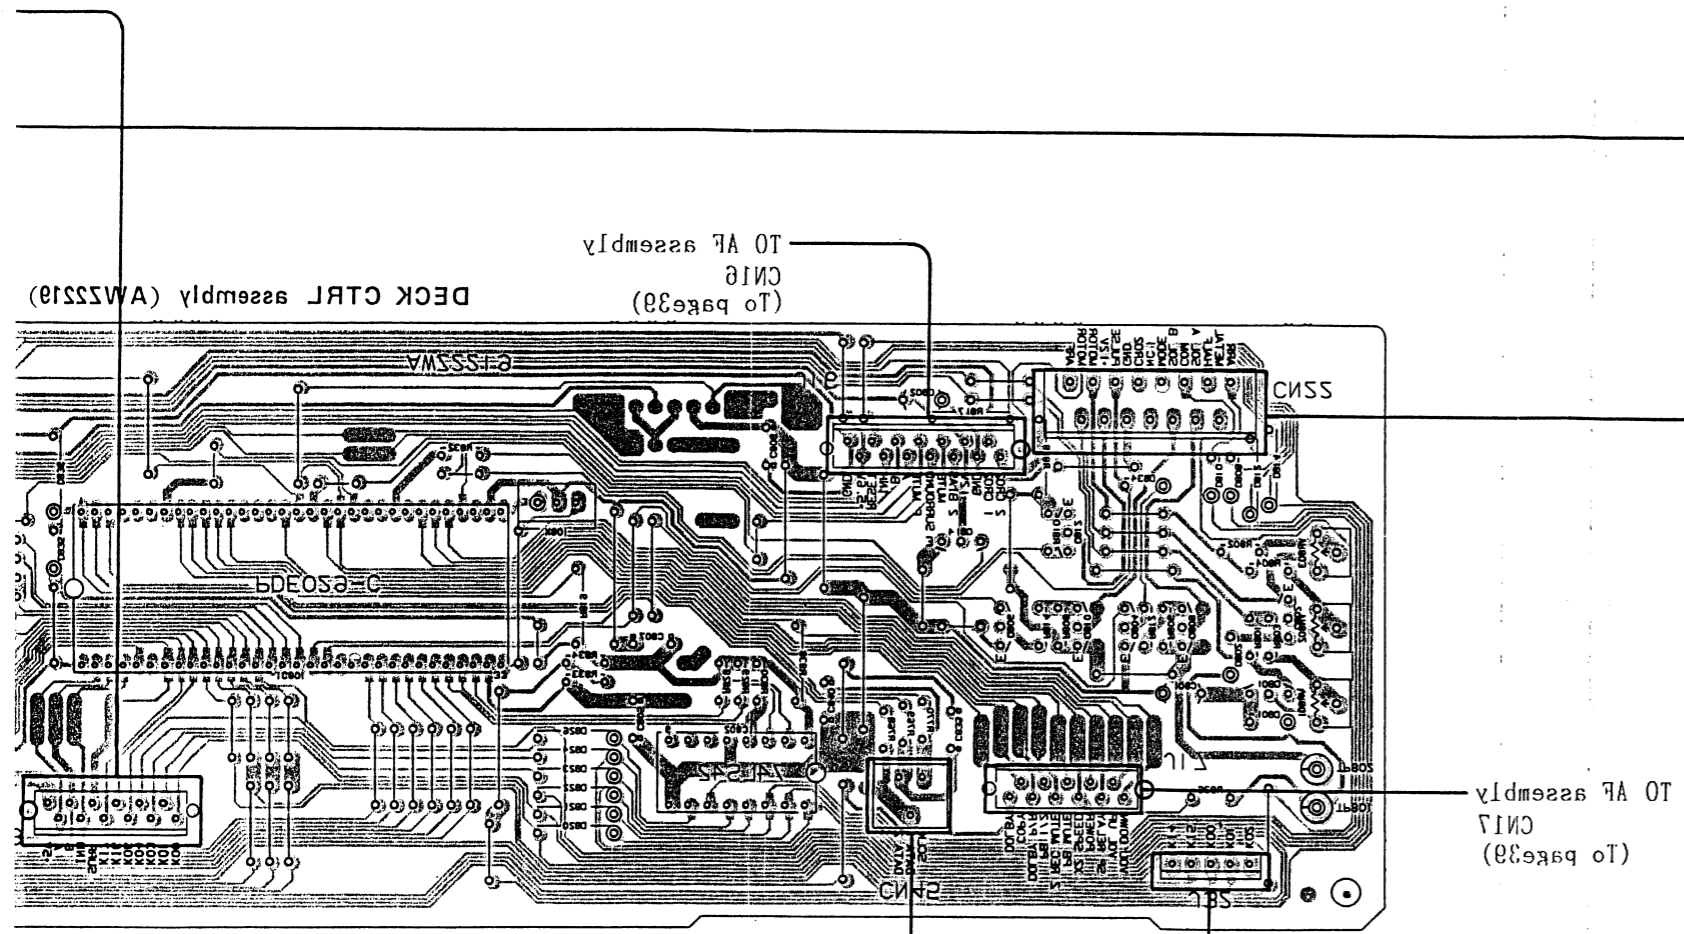


A  
B  
C  
D

4.2 AMP, GEO CTRL (AWZ2218), DECK - 1SW, DECK - 2SW, DECK CTRL (AWZ2219), DECK CENTER assembly, MECHA - 1 and MECHA - 2 UNIT


A

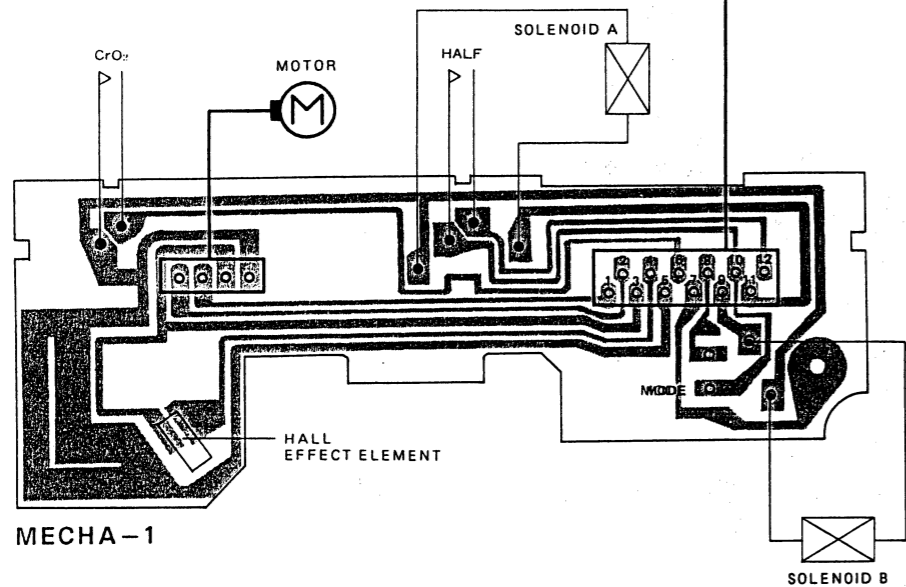



B

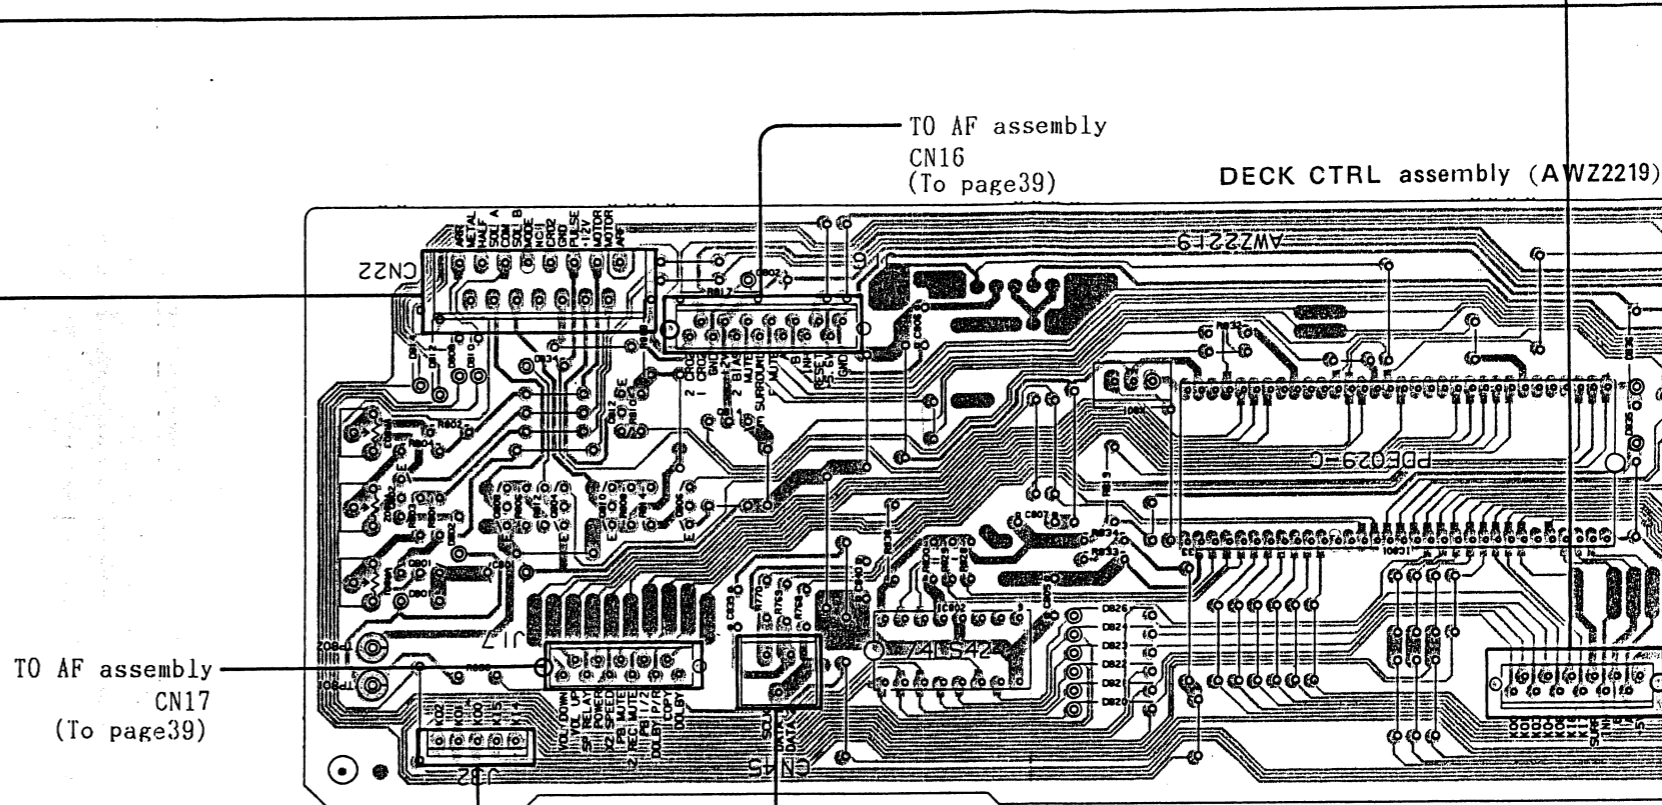

C

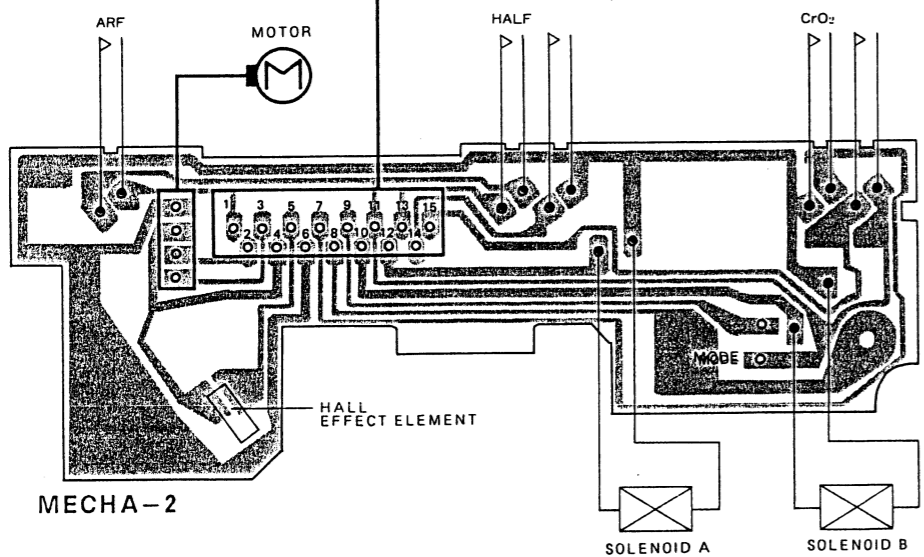

D

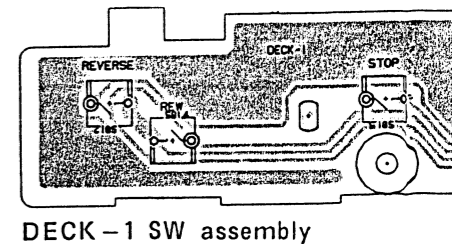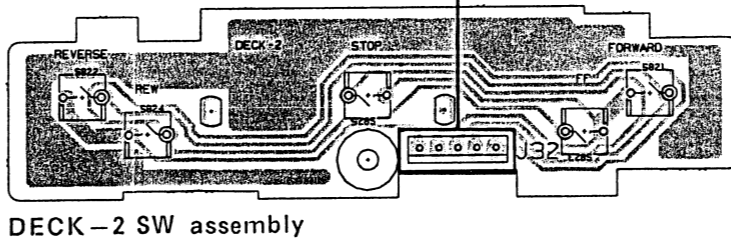

TO AF assembly J45 (To page 39)



7

8


9

10

11

12

AMP GEO CTRL assembly (AWZ2218)

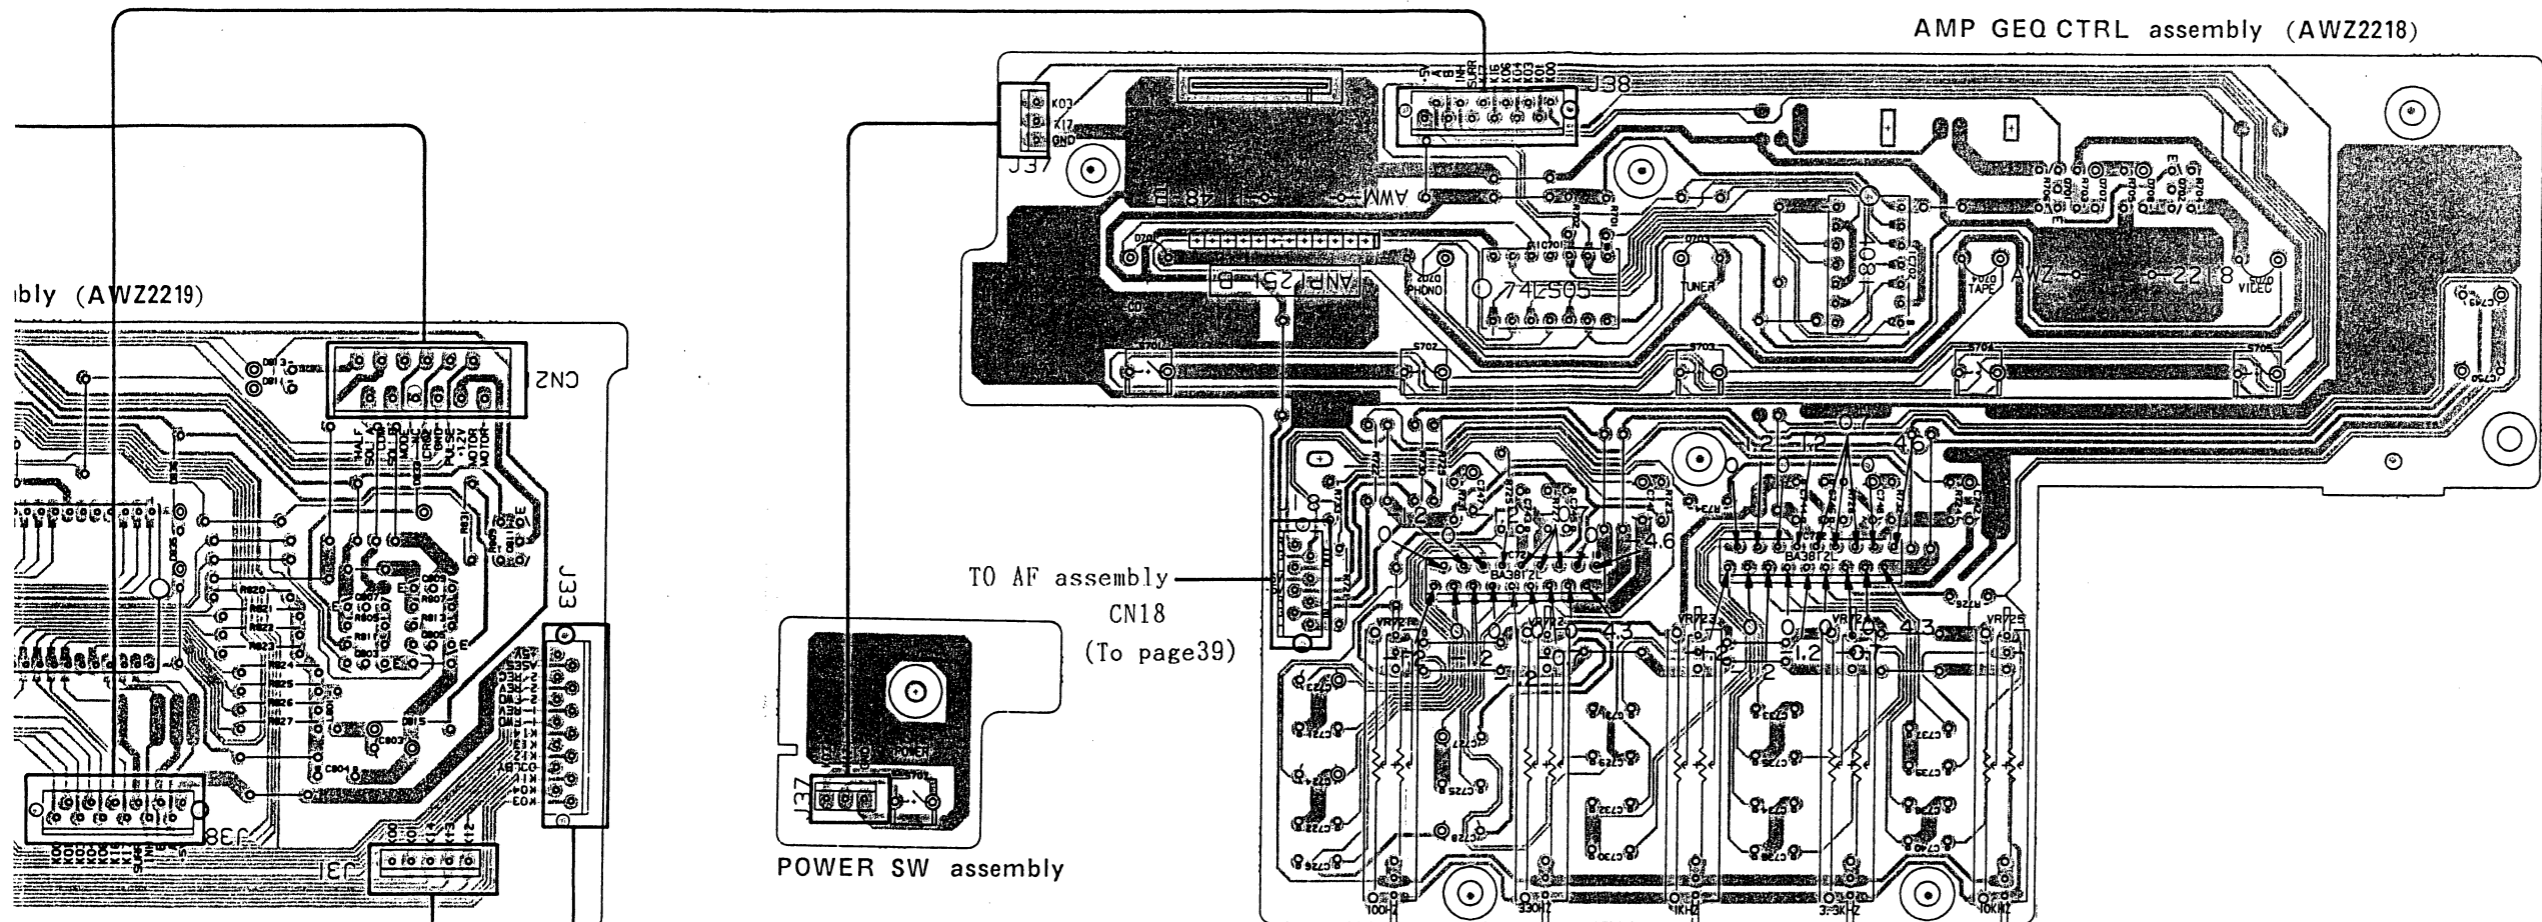


Assembly (AWZ2219)

TO AF assembly  
CN18  
(To page 39)

POWER SW assembly

DECK CENTER assembly

Q811  
Q807 Q803 Q809 Q805

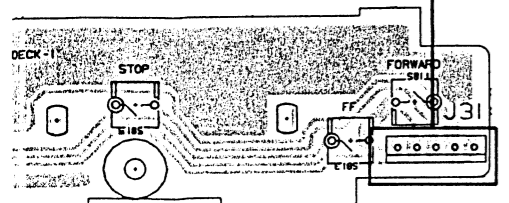

Assembly

A

B

C

D

NOTE

1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
		Transistor
		Radiator type transistor
		Diode
		Resistor
		Capacitor (Polarity)
		Capacitor (Non-polarity)

Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with ⊖ (double circles) shows negative terminal.
4. The diode terminal marked with ⊖ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

7

8

9

10

11

12

1

2

3

4

5


6

A

B

C

D

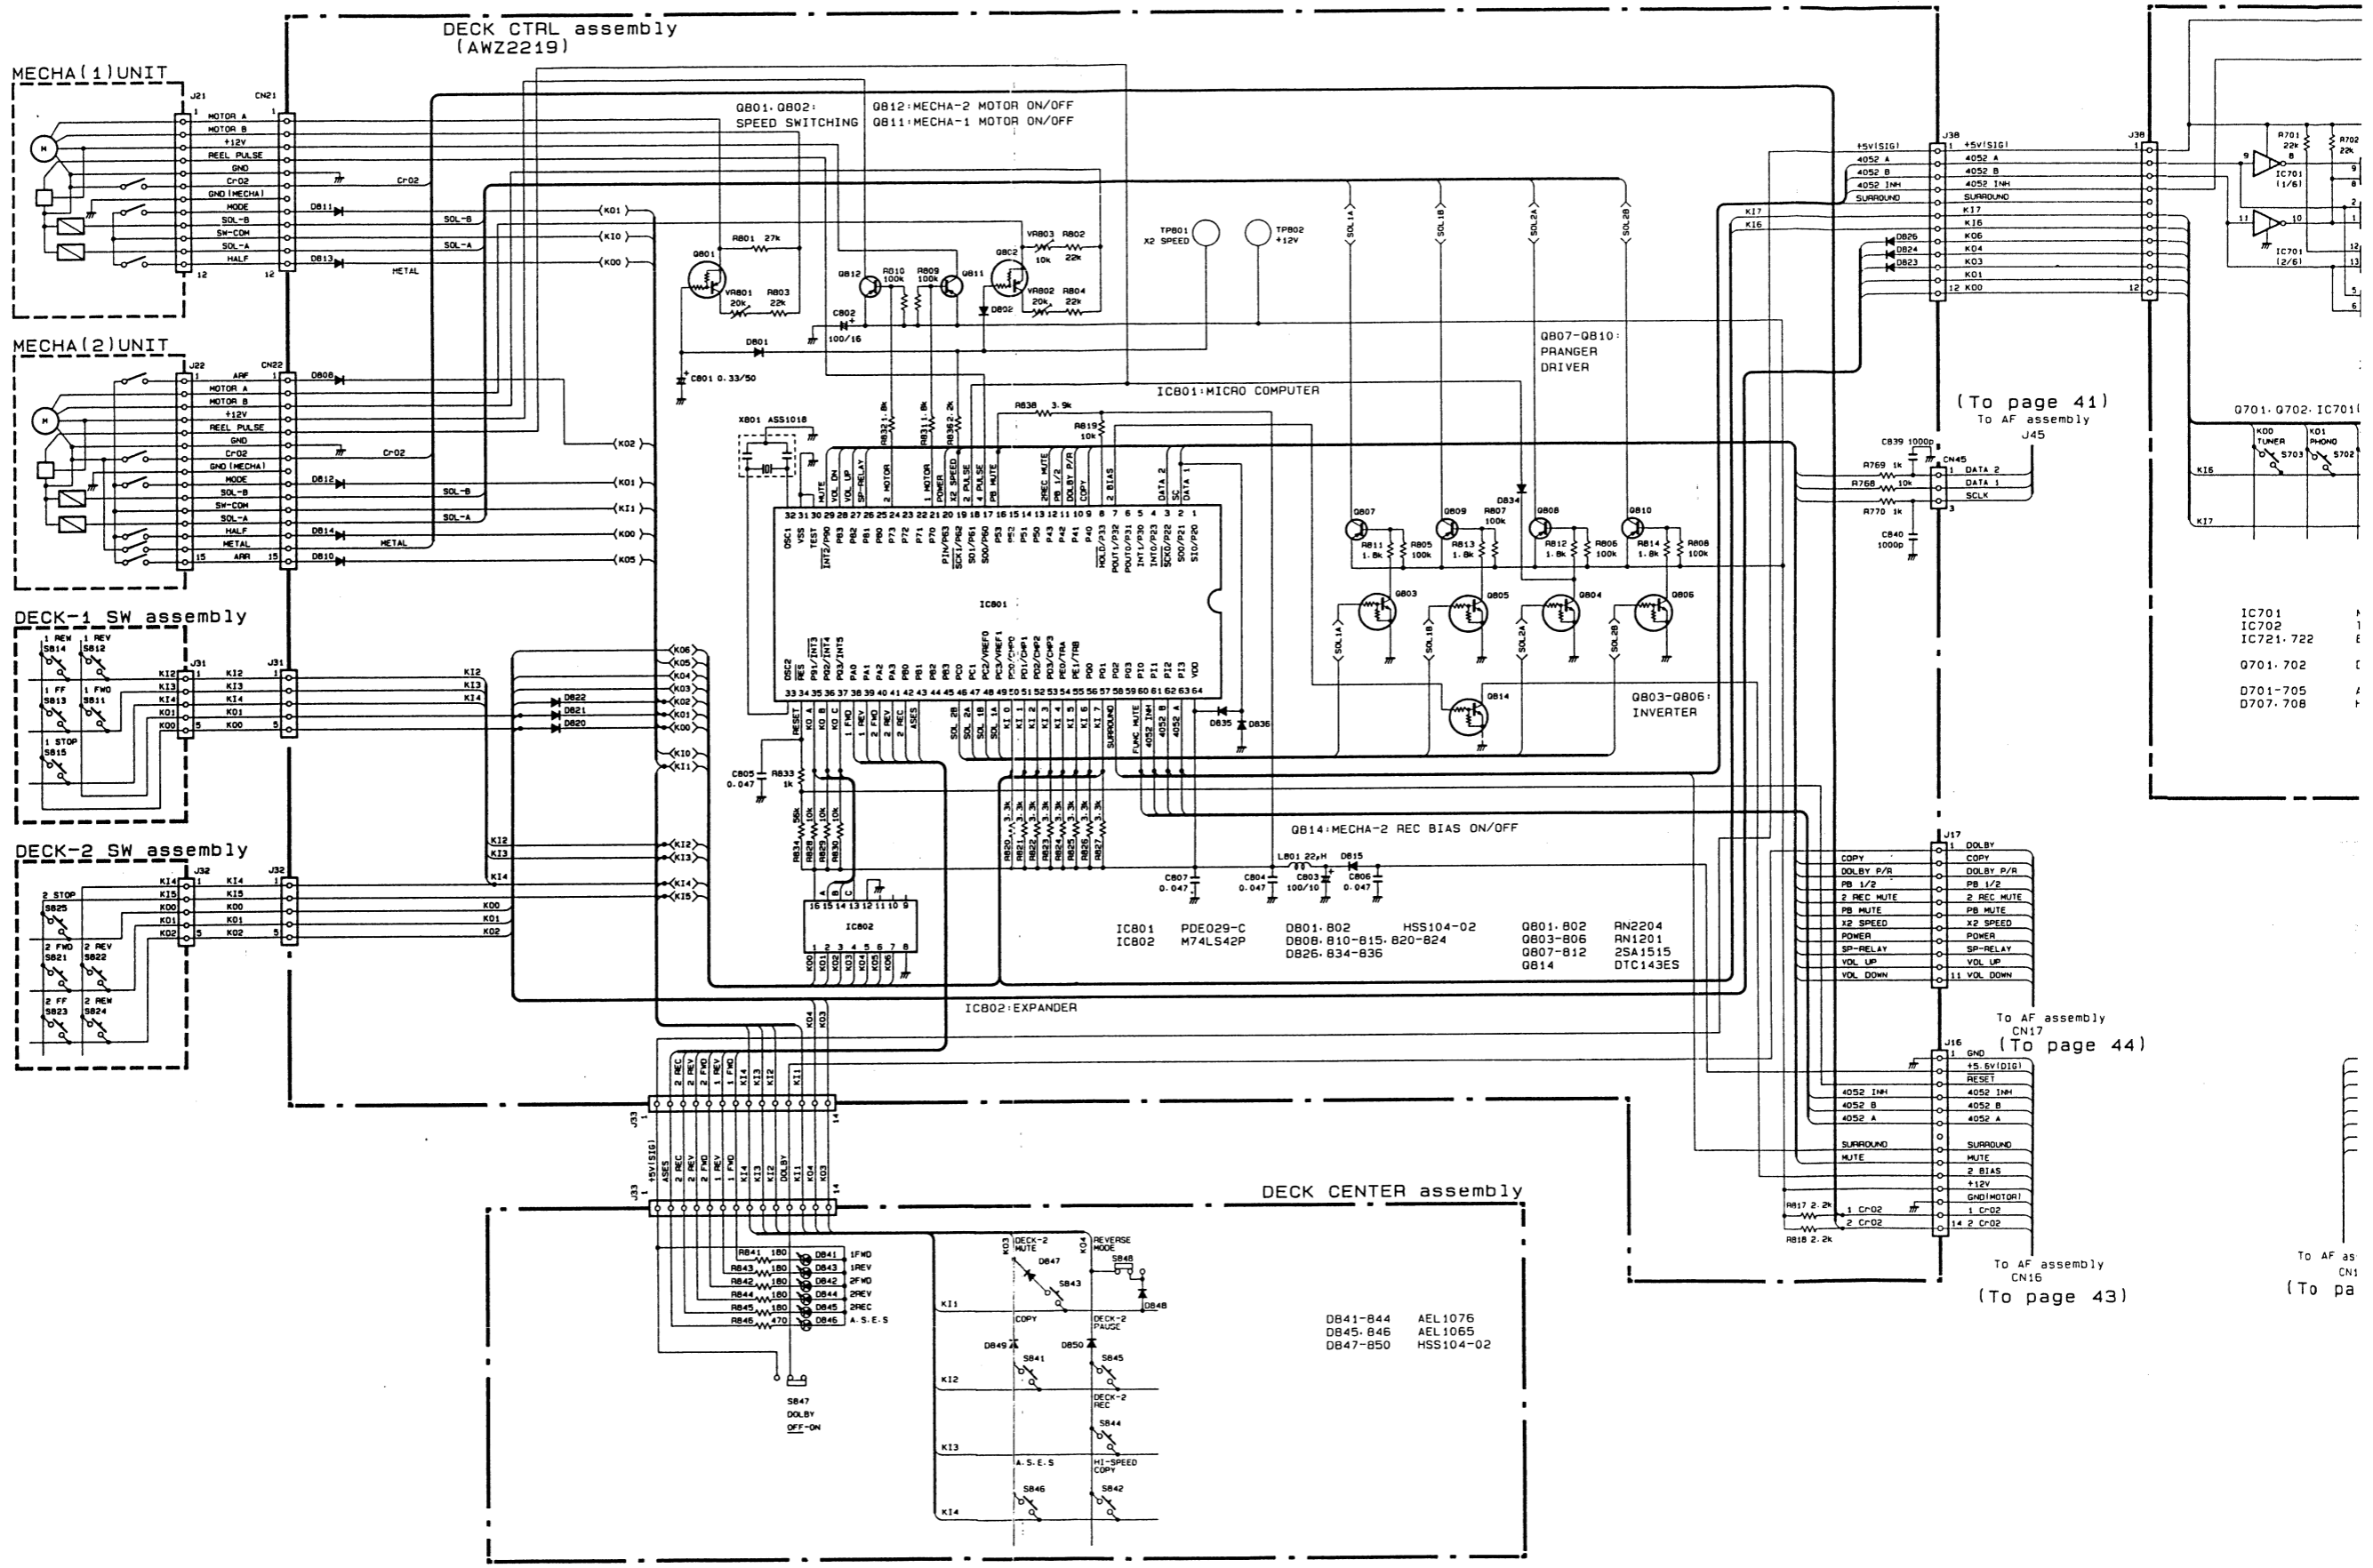

4

5



6

7

8

9

AMP. GEQ CTRL assembly (AWZ2218)

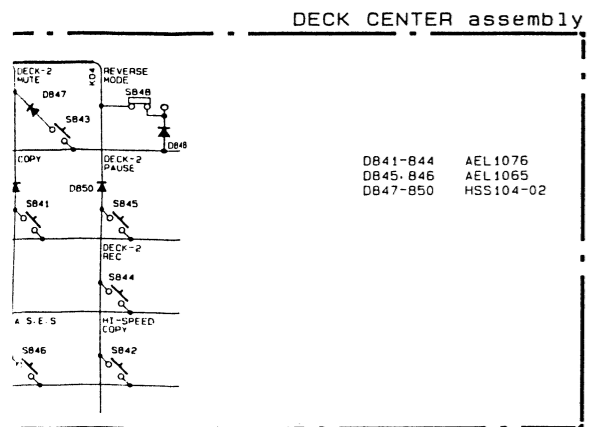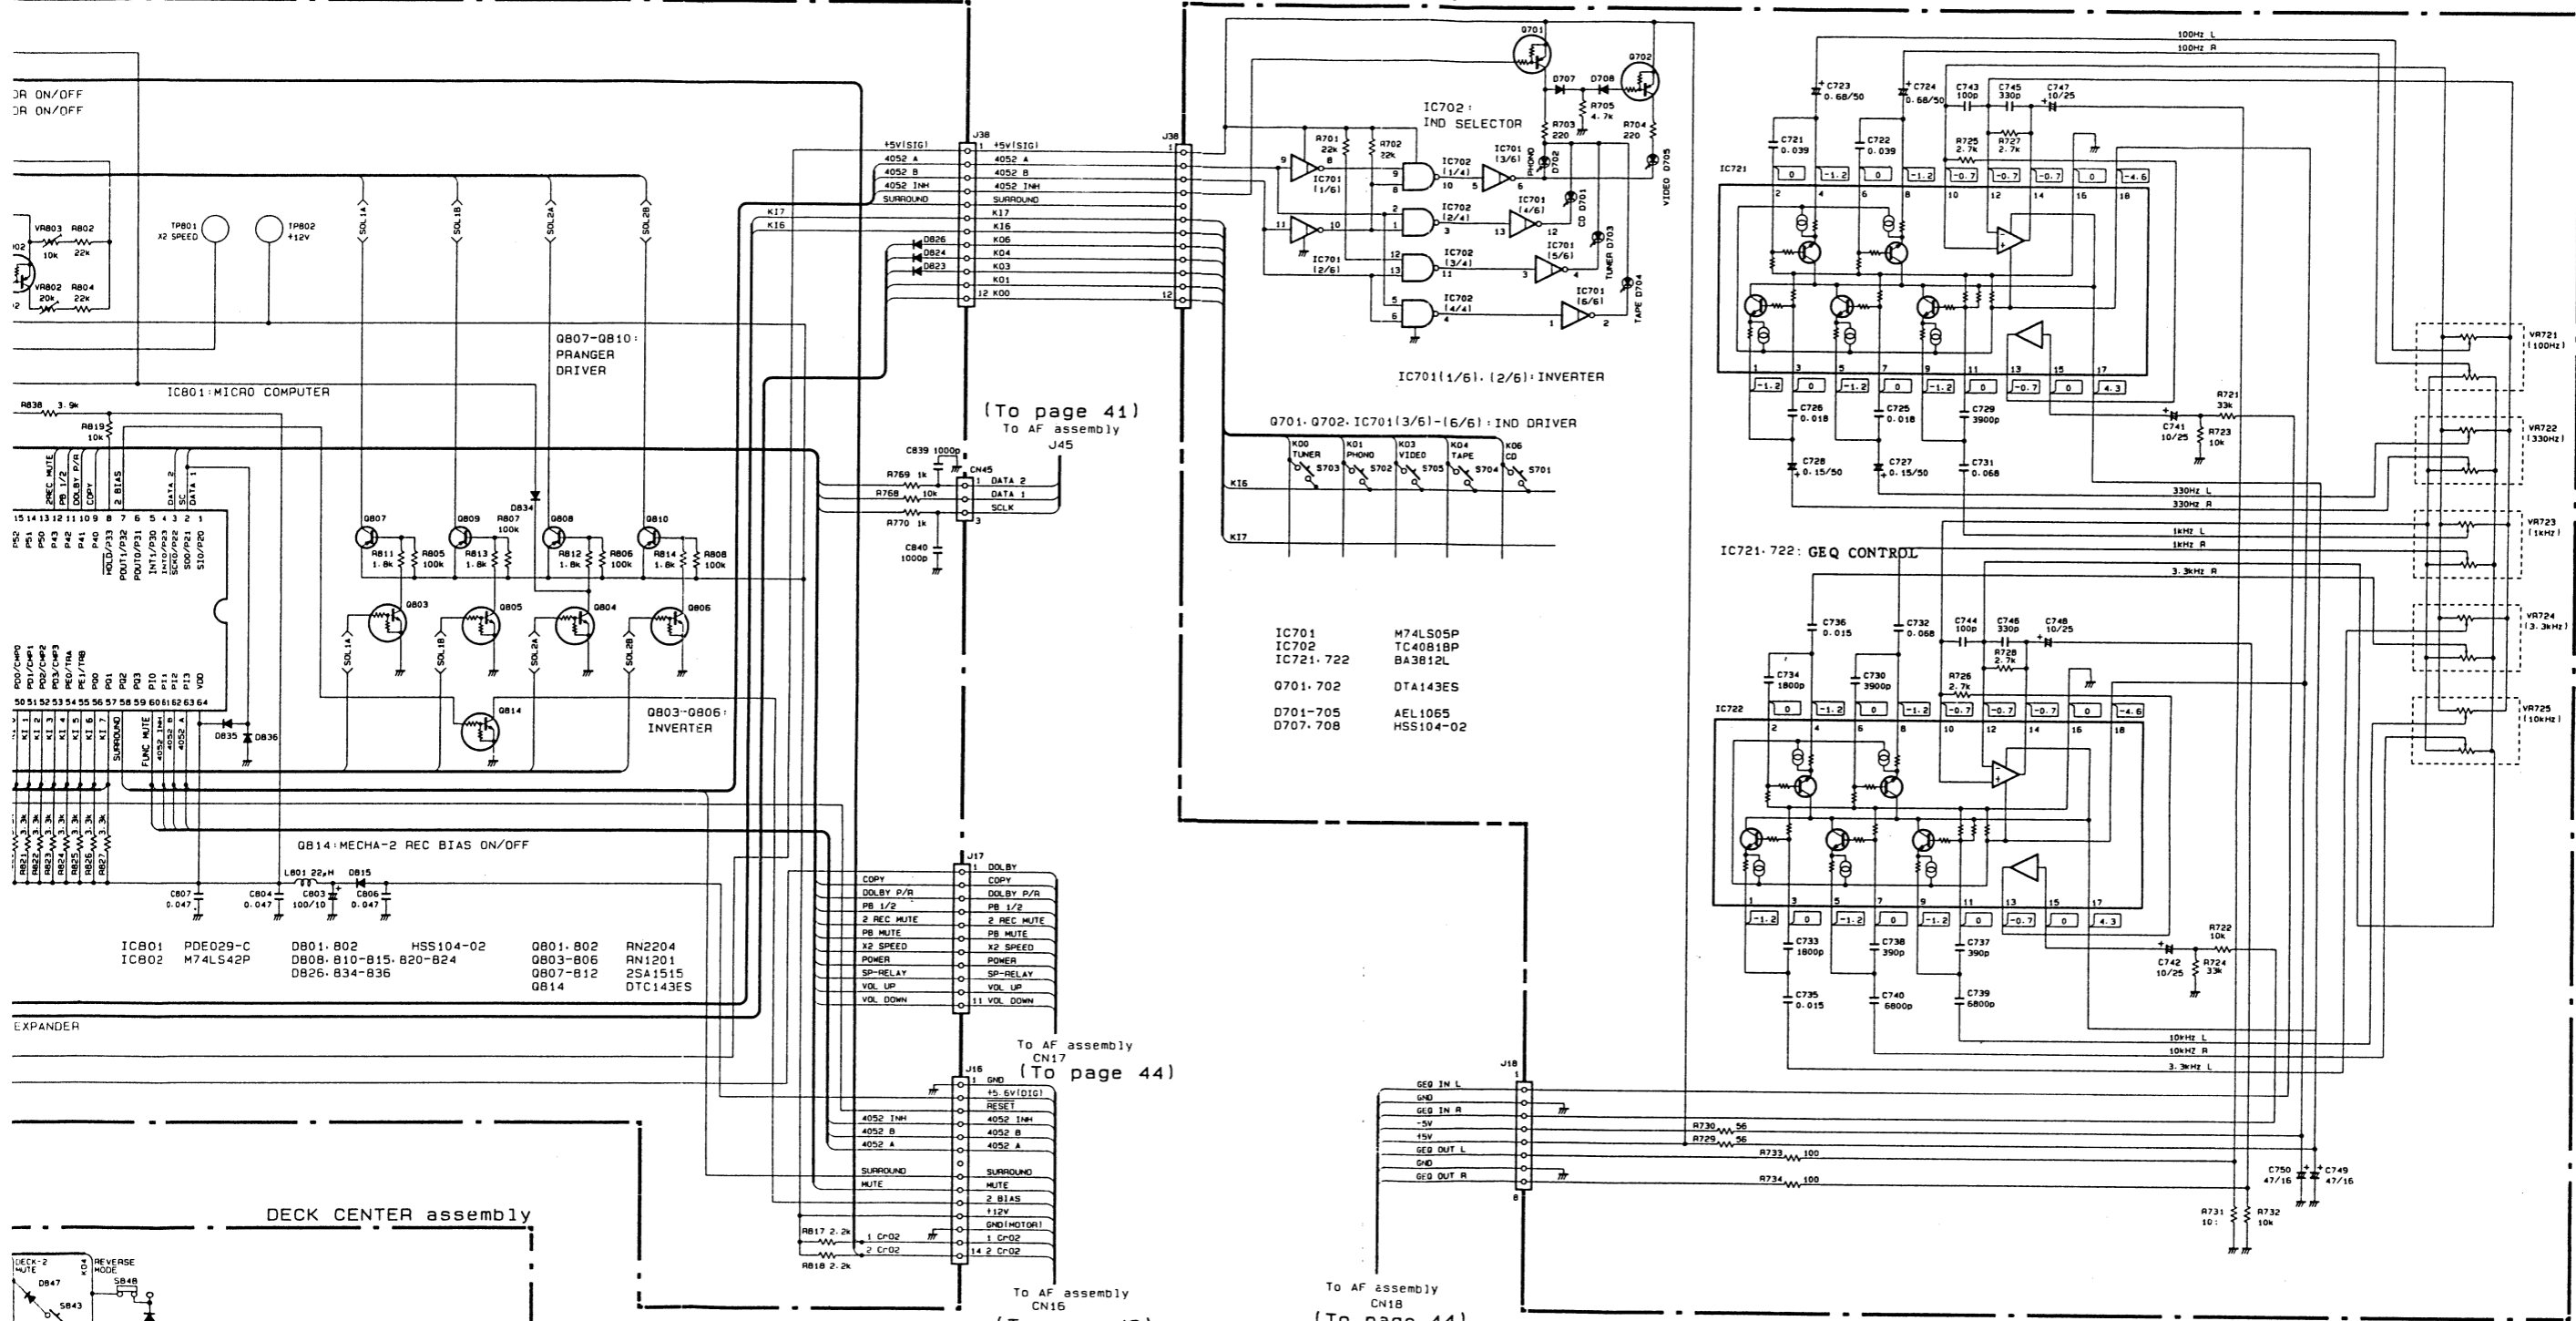

A  
B  
C  
D

4

5

6

7

8

9




4.3 FUNCTION assembly

A

B

C


D

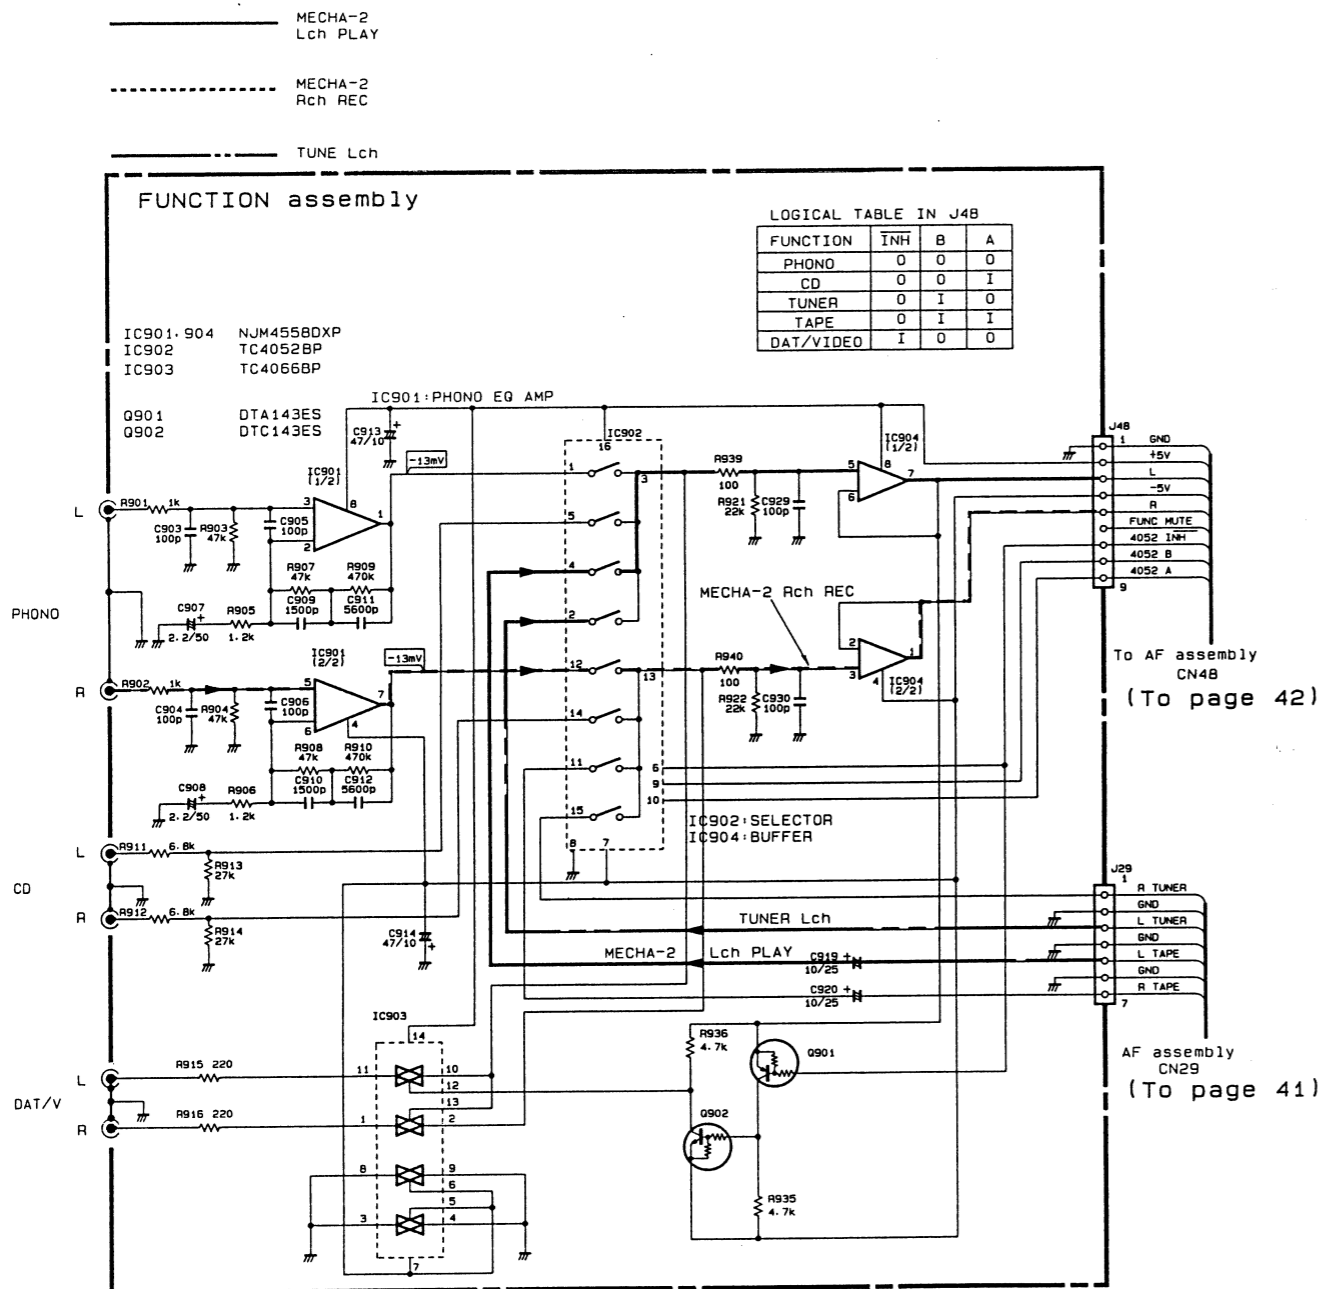

TO AF assembly CN29 (To page39)

TO AF assembly CN48 (To page39)

TO AF assembly CN48 (To page39)

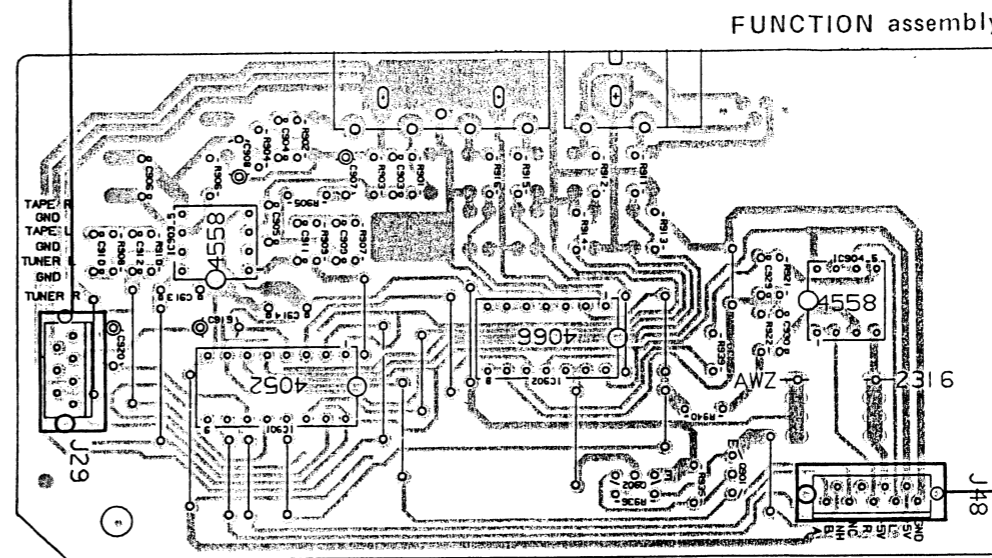

NOTE

- This P.C.B. connection diagram is viewed from the parts mounted side.
- The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
		Transistor
		Radiator type transistor
		Diode
		Resistor
		Capacitor (Polarity)
		Capacitor (Non-polarity)

Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

- The capacitor terminal marked with ⊕(double circles) shows negative terminal.
- The diode terminal marked with ⊕(double circles) shows cathode side.
- The transistor terminal to which E is affixed shows the emitter.

4

5

6

7

8

9



NOTE:  
This picture shows the foil side of the printed circuit.

TO AF assembly  
CN29  
(To page39)

TO AF assembly  
CN48  
(To page39) (03339 OT)

TO AF assembly  
CN8  
(To page39) (03339 OT)

TO AF assembly  
CN29  
(To page39)

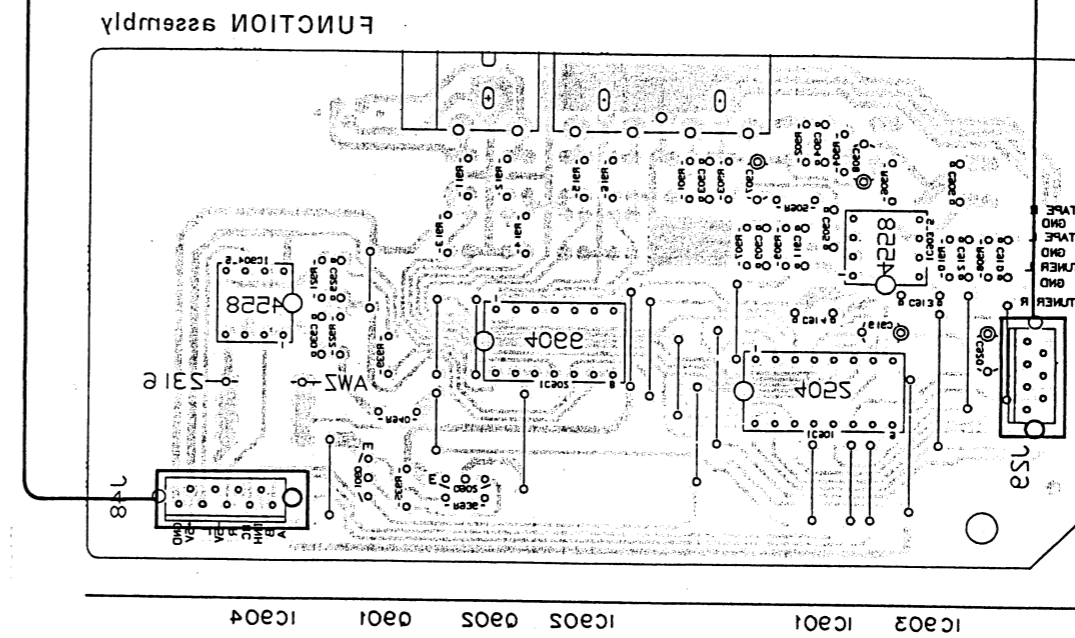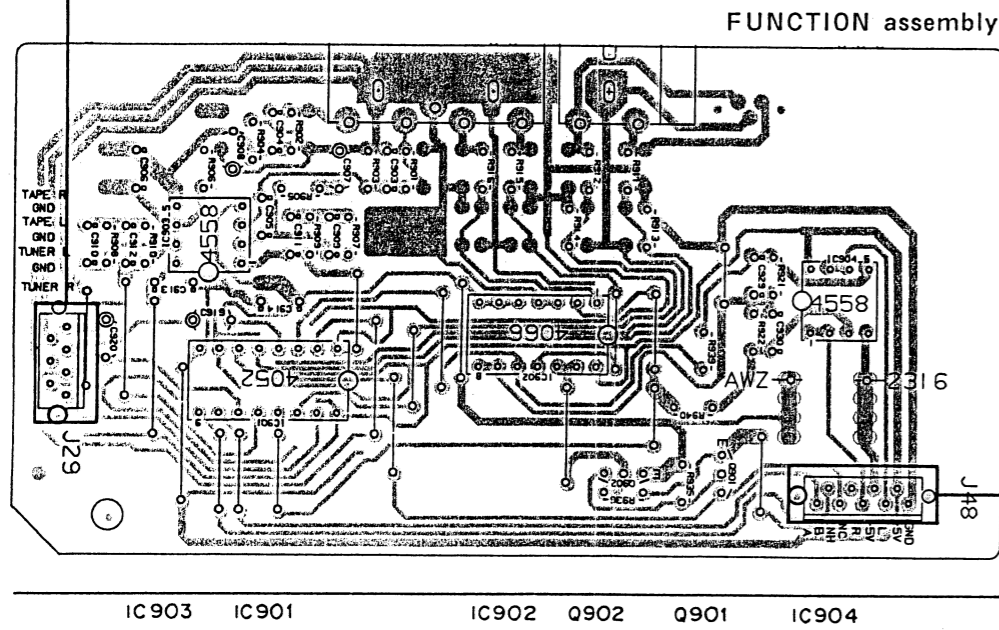

NOTE

1. This P.C.B connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
Q504 E		Transistor
Q215		Resistor type transistor
D203		Diode
R237		Resistor
C513		Capacitor (Polarity)
C518		Capacitor (Non-polarity)

Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with ⊕ (double circles) shows negative terminal.
4. The diode terminal marked with ⊕ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

A

B

C

D

4

5



6

7

8

9

1 IC205  
 2 IC204  
 3 IC206  
 0280 - 0285 0284  
 0253  
 1C255 1C252  
 0481-0484 1C201  
 0251-0254 1C251  
 0481-0482 1C411  
 0422-0428  
 0281-0282  
 0411 0415 1C415  
 1C421 0421-0424  
 1C225  
 VR411  
 VR412  
 VR413  
 VR414  
 VR415  
 VR416  
 VR417  
 VR418  
 VR419  
 VR420  
 VR421  
 VR422  
 VR423  
 VR424  
 VR425  
 VR426  
 VR427  
 VR428  
 VR429  
 VR430  
 VR431  
 VR432  
 VR433  
 VR434  
 VR435  
 VR436  
 VR437  
 VR438  
 VR439  
 VR440  
 VR441  
 VR442  
 VR443  
 VR444  
 VR445  
 VR446  
 VR447  
 VR448  
 VR449  
 VR450  
 VR451  
 VR452  
 VR453  
 VR454  
 VR455  
 VR456  
 VR457  
 VR458  
 VR459  
 VR460  
 VR461  
 VR462  
 VR463  
 VR464  
 VR465  
 VR466  
 VR467  
 VR468  
 VR469  
 VR470  
 VR471  
 VR472  
 VR473  
 VR474  
 VR475  
 VR476  
 VR477  
 VR478  
 VR479  
 VR480  
 VR481  
 VR482  
 VR483  
 VR484  
 VR485  
 VR486  
 VR487  
 VR488  
 VR489  
 VR490  
 VR491  
 VR492  
 VR493  
 VR494  
 VR495  
 VR496  
 VR497  
 VR498  
 VR499  
 VR500

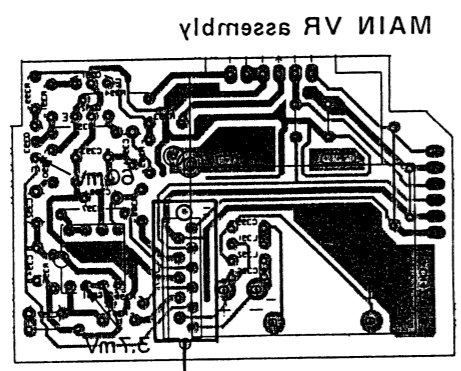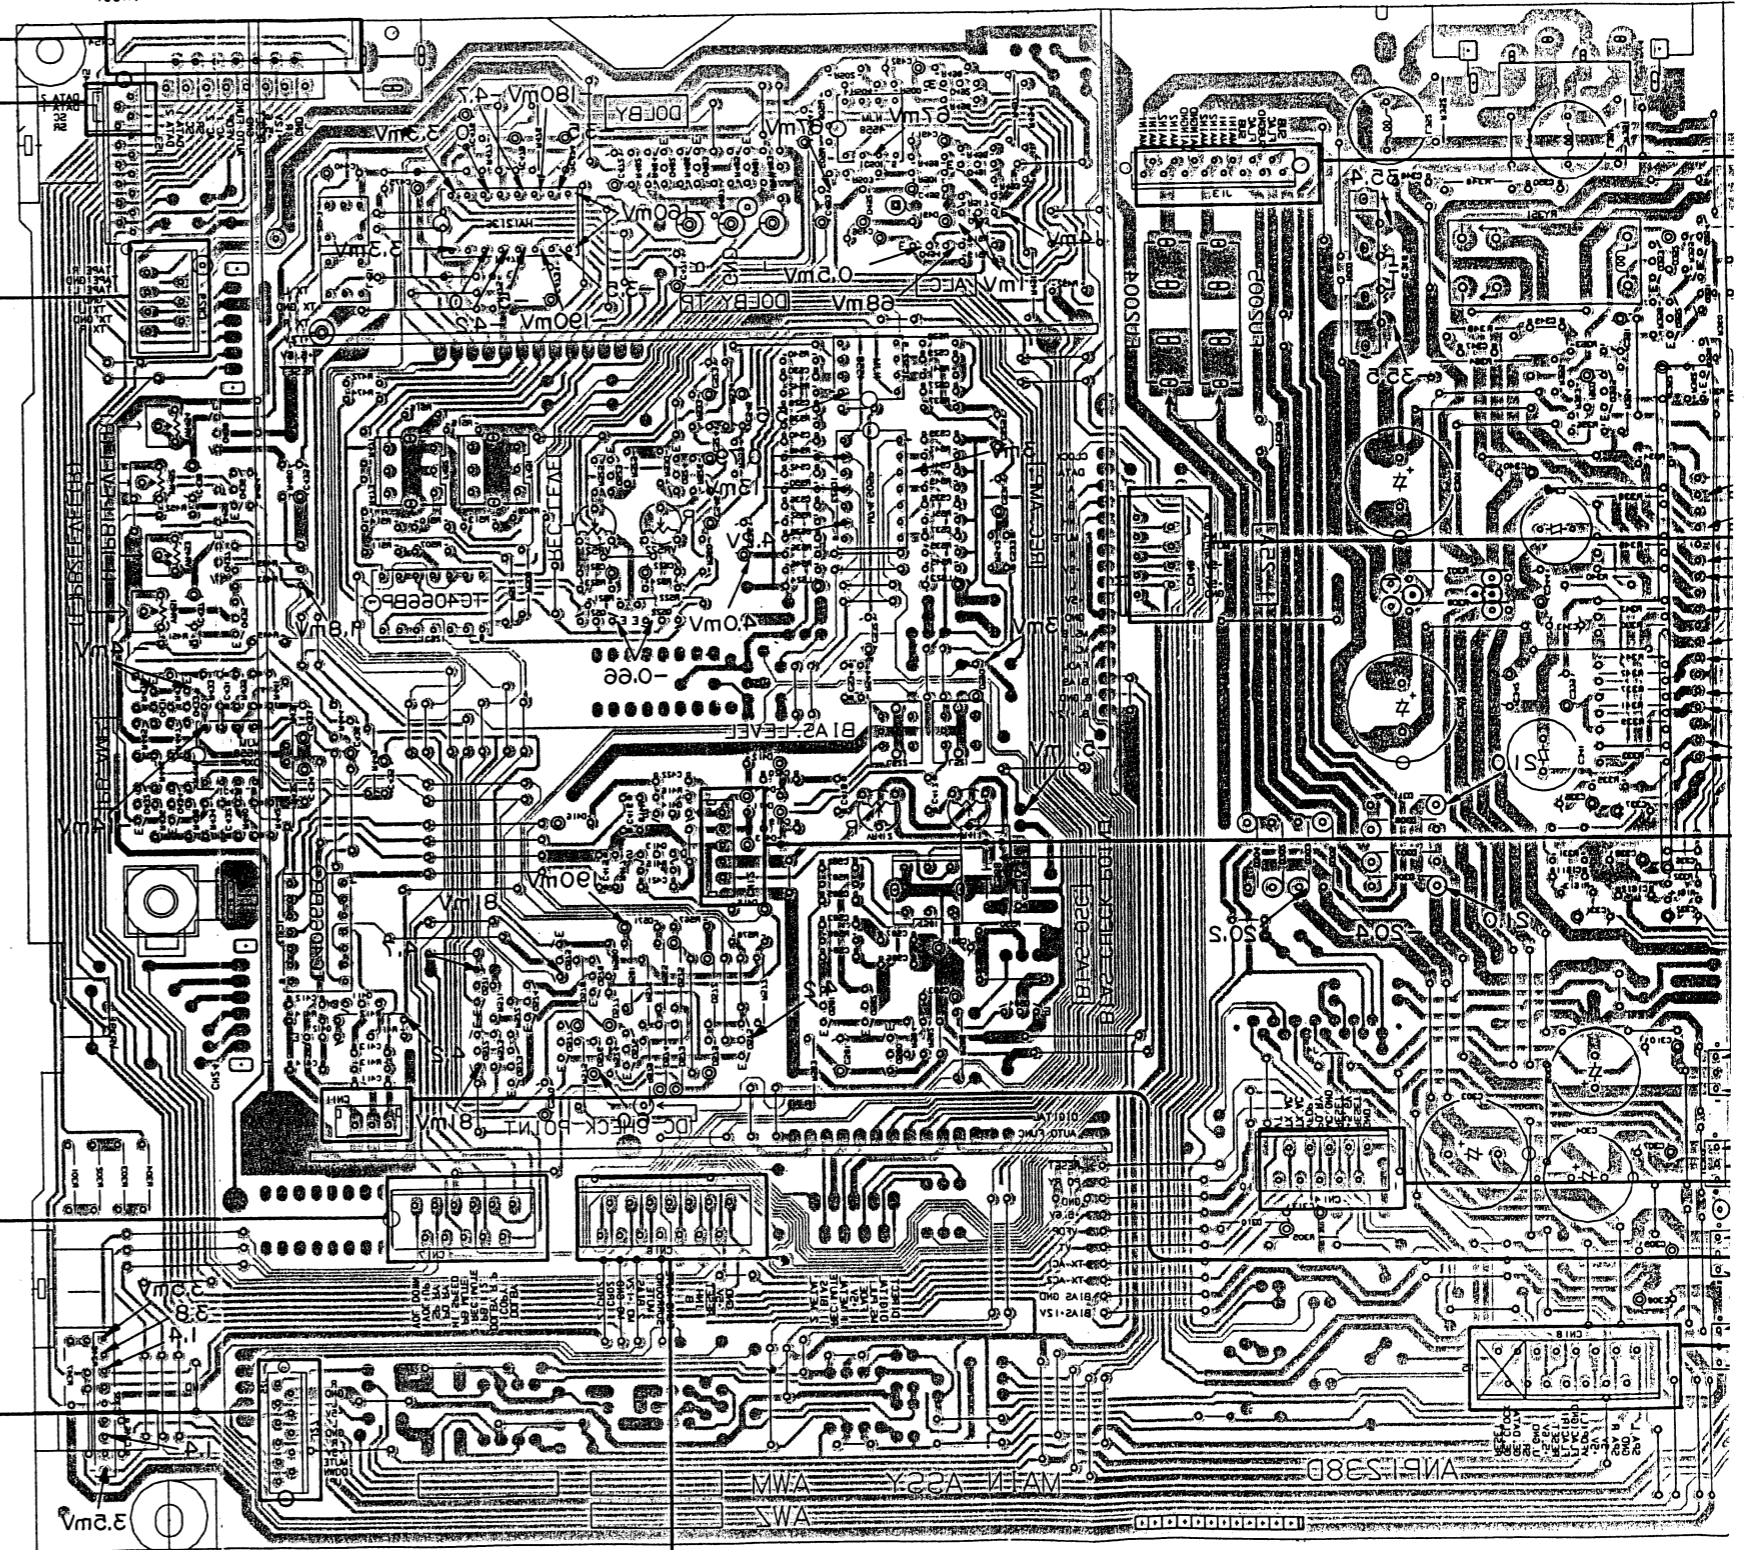

TO TRFR  
 TO DECK CTRL assembly  
 C425  
 (To page 28)  
 TO FUNCTION assembly  
 128  
 (To page 33)  
 TO DECK CTRL assembly  
 117  
 (To page 28)  
 TO DECK CTRL assembly  
 116  
 (To page 28)

1 4 1

4 2 6 7 8 9

A

B

C

D

14 (WASS17)





4.4 AF (AWZ2217), MAIN VR,  
HEAD PHONE assembly

035-0356  
IC303 IC304  
IC301 IC302

IC306

0491-0494 IC501  
IC522 IC523  
Q527  
Q580-Q582 Q584

0481-0483 IC471  
Q521-Q524 IC521  
Q414 Q415  
Q571-Q579


0435-0438  
IC431 IC431-Q434  
IC412  
Q411 Q412

VR411 VR412 VR522 VR521 VR451-VR454

A


TO TRANS CONNECT assembly  
(To page47) J13

B

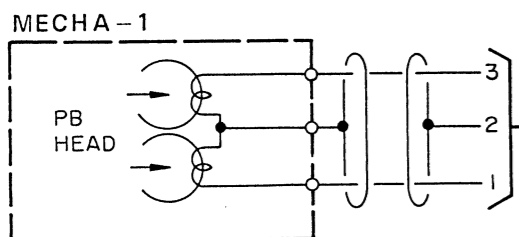


TO FUNCTION assembly  
(To page33) J48

C

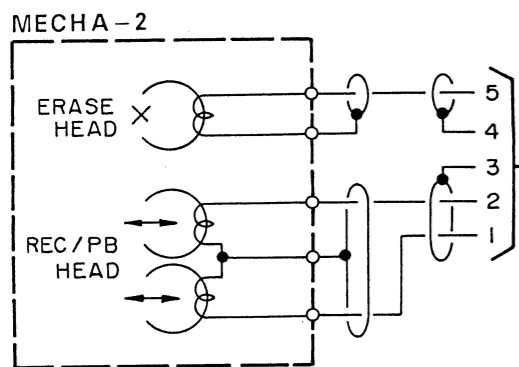


TO POWER SUPPLY assembly  
(To page46) J14

D

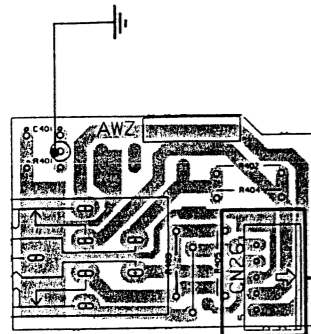

HEAD PHONE assembly

TO AMP.GEQ CTRL assembly  
(To page28) J18

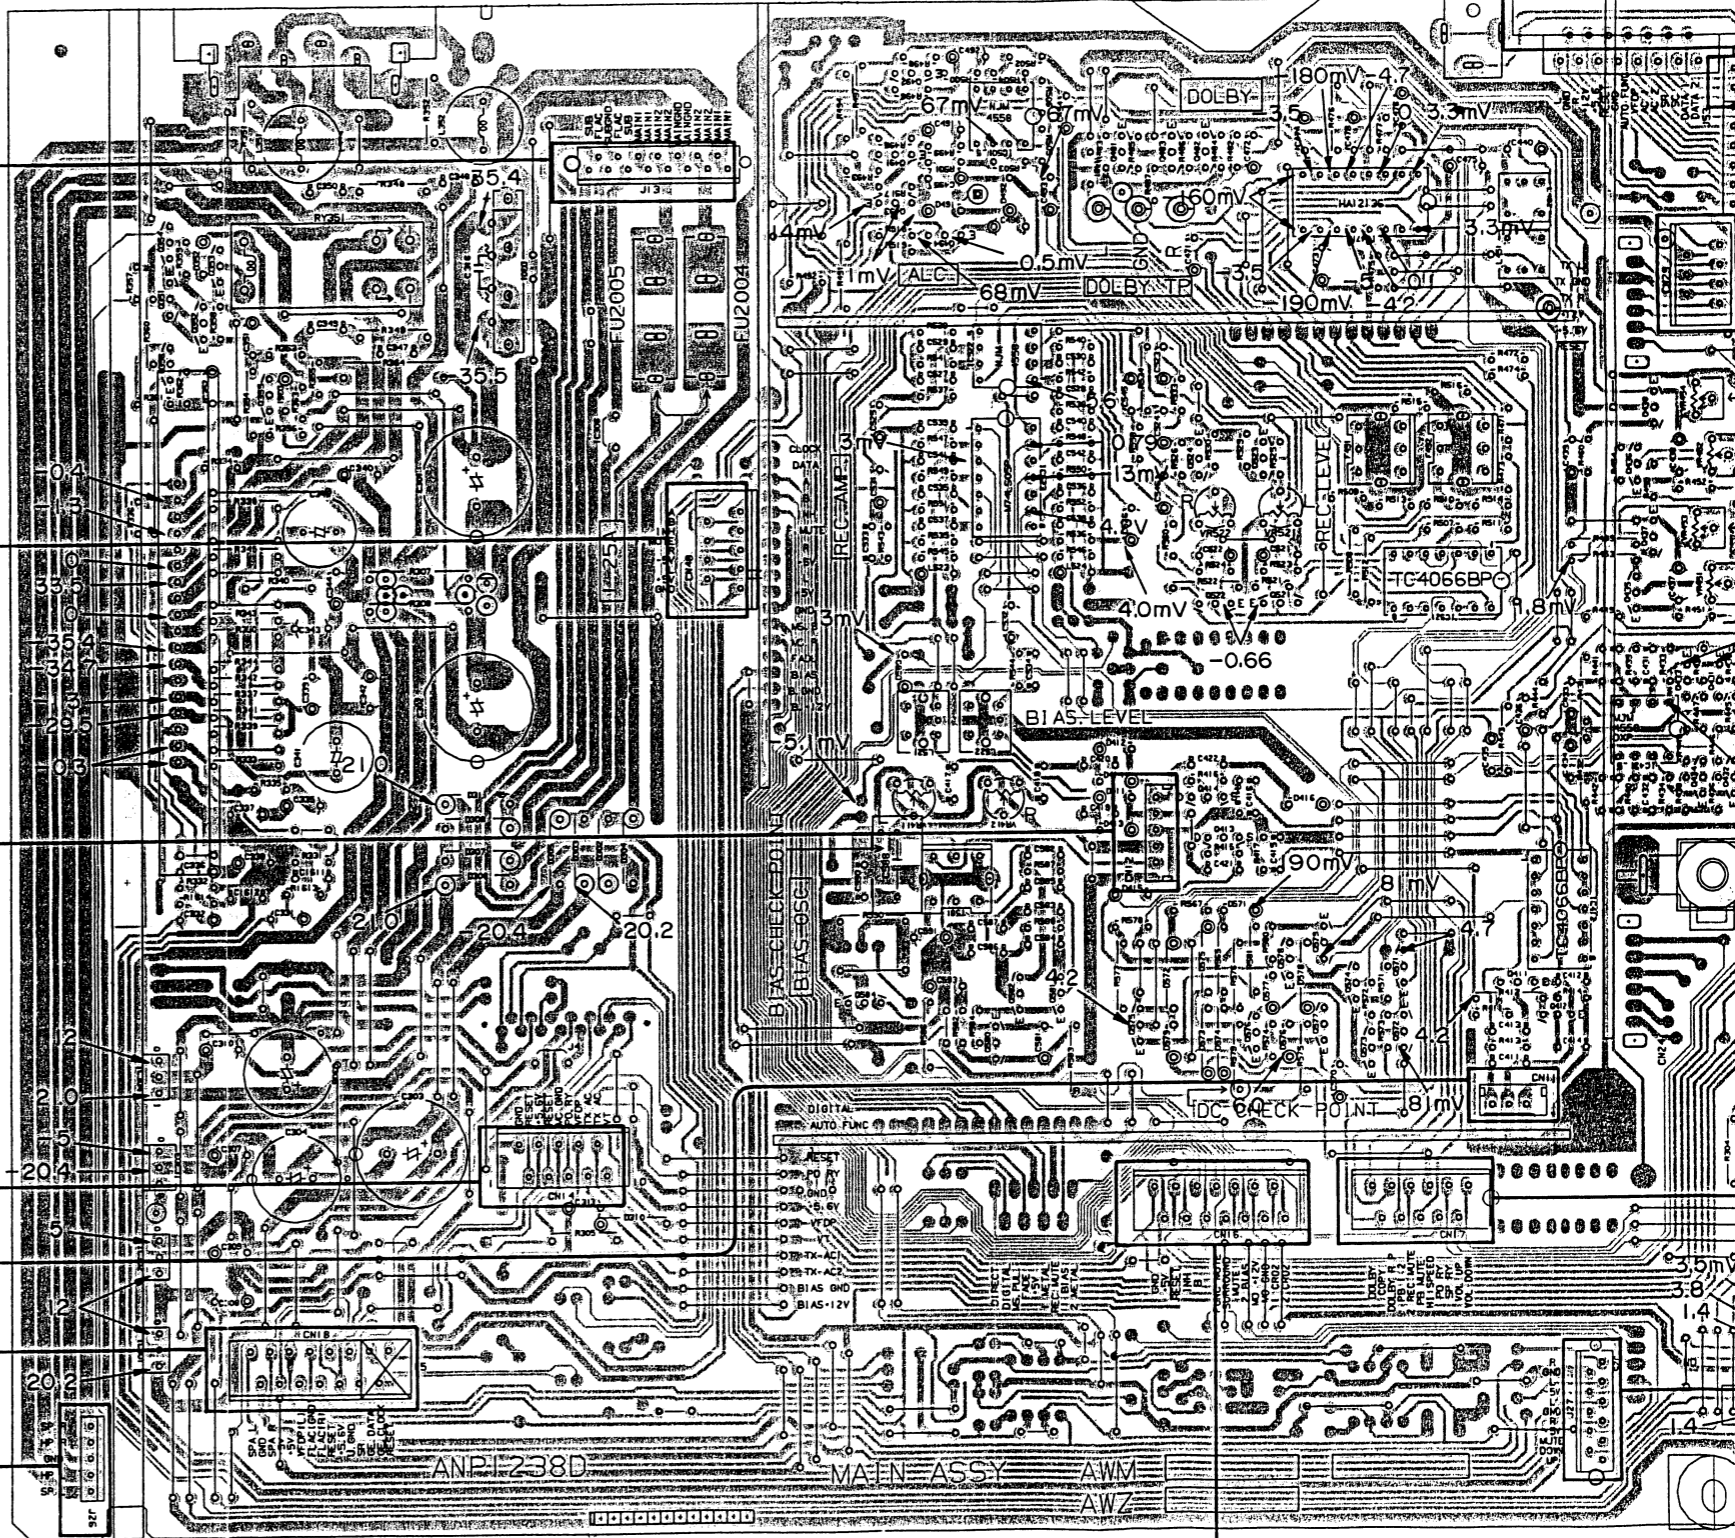

AF assembly (AWZ2217)

TO DECK CTRL assembly  
J16 (To page26)



4

5

6

7

8

9

-0356

IC306

0491-0494 IC501

0481-0483 IC471

0435-0438

504

502

IC522 IC523

0521-0524 IC521

IC431 IC431-0434

0527

0414 0415

IC412

0580-0582 0584

0571-0579

0411 0412


IC352

VR411 VR412

VR522 VR521

VR451-VR454

VR391

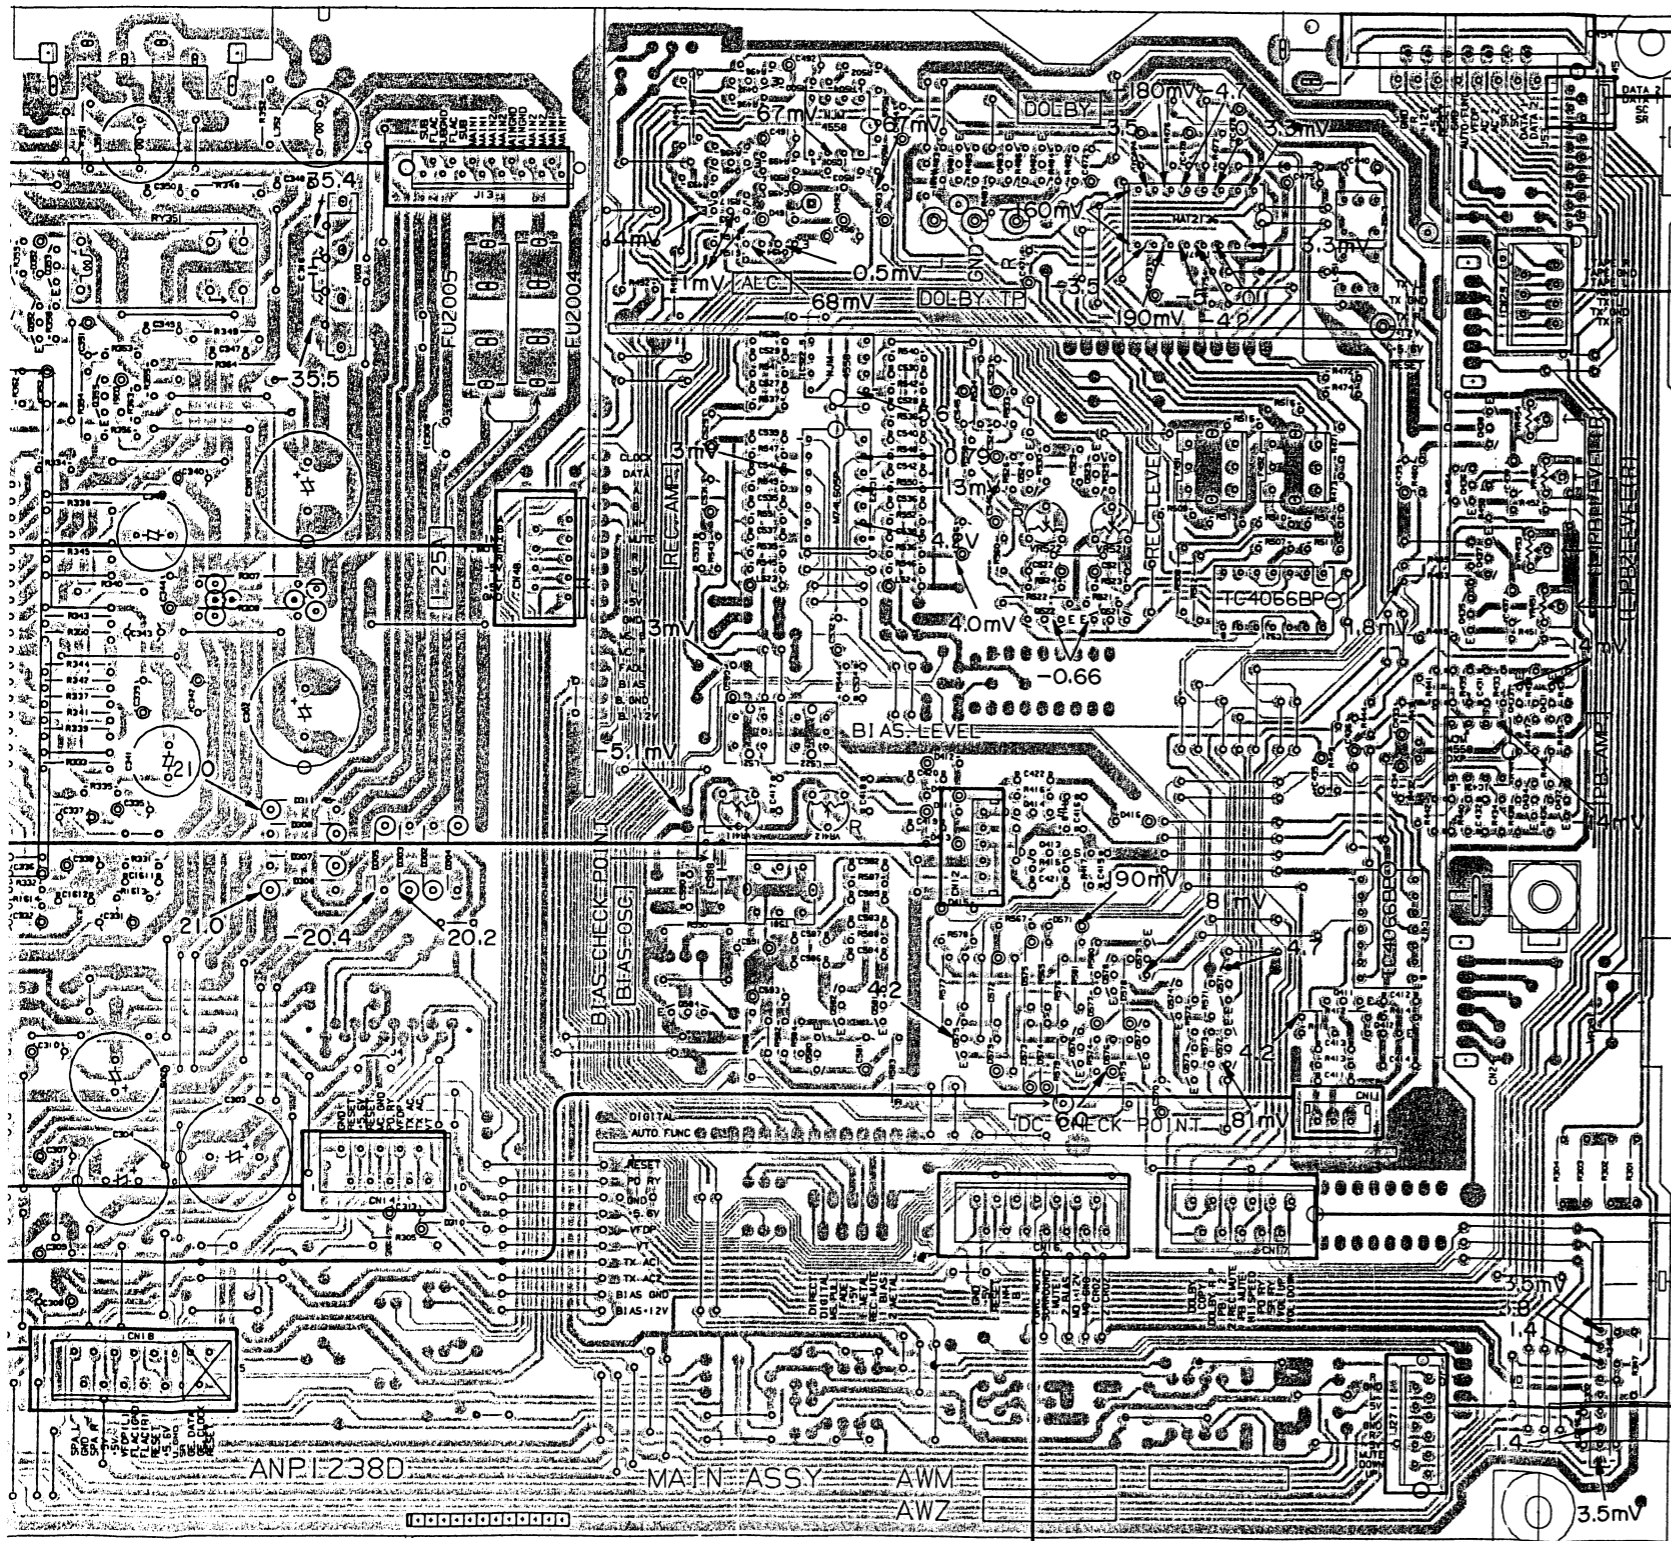

NOTE

1. This P.C.B connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.


P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
		Transistor
		Resistor type transistor
		Diode
		Resistor
		Capacitor (Polarity)
		Capacitor (Non-polarity)

Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with @ (double circles) shows negative terminal.
4. The diode terminal marked with @ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

MAIN VR assembly

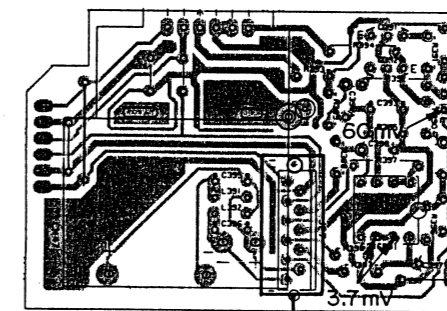

(AWZ2217)

4

5

6

7

8

9


1 | 2 | 3 | 4 | 5 | 6

A

B


C

D

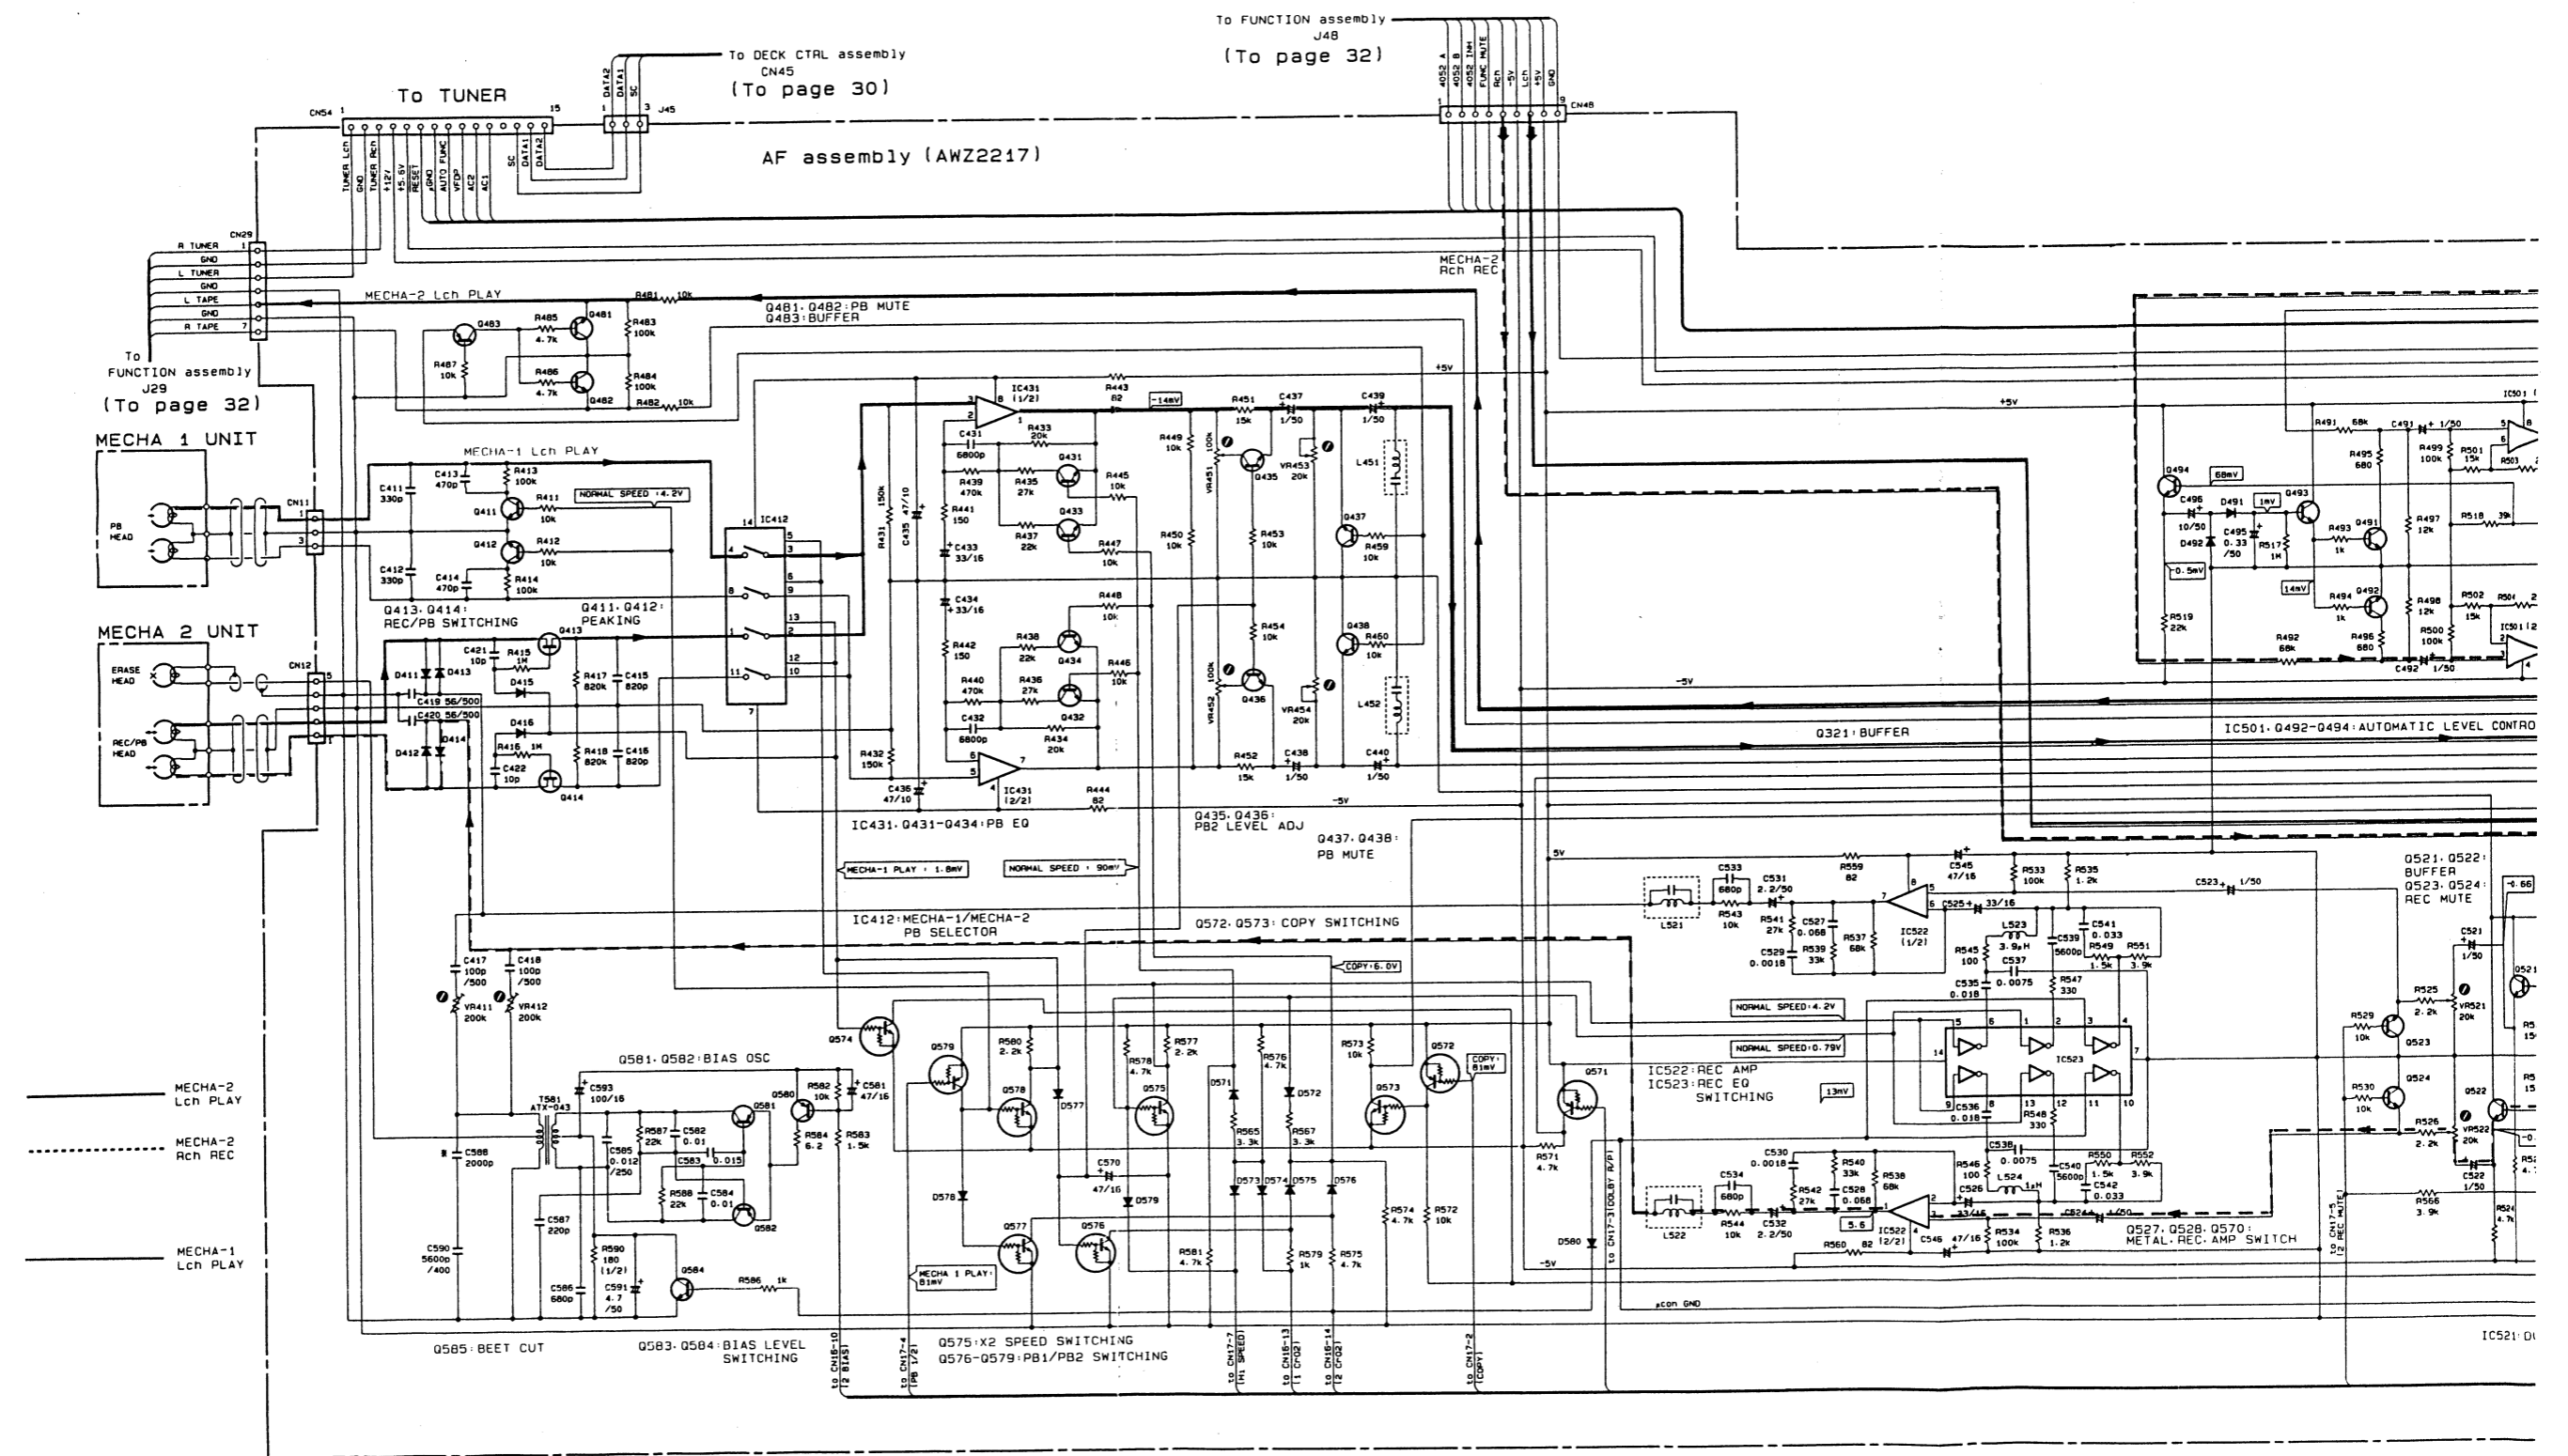

1 | 2 | 3 | 4 | 5 | 6

7 | 8 | 9 | 10 | 11 | 12

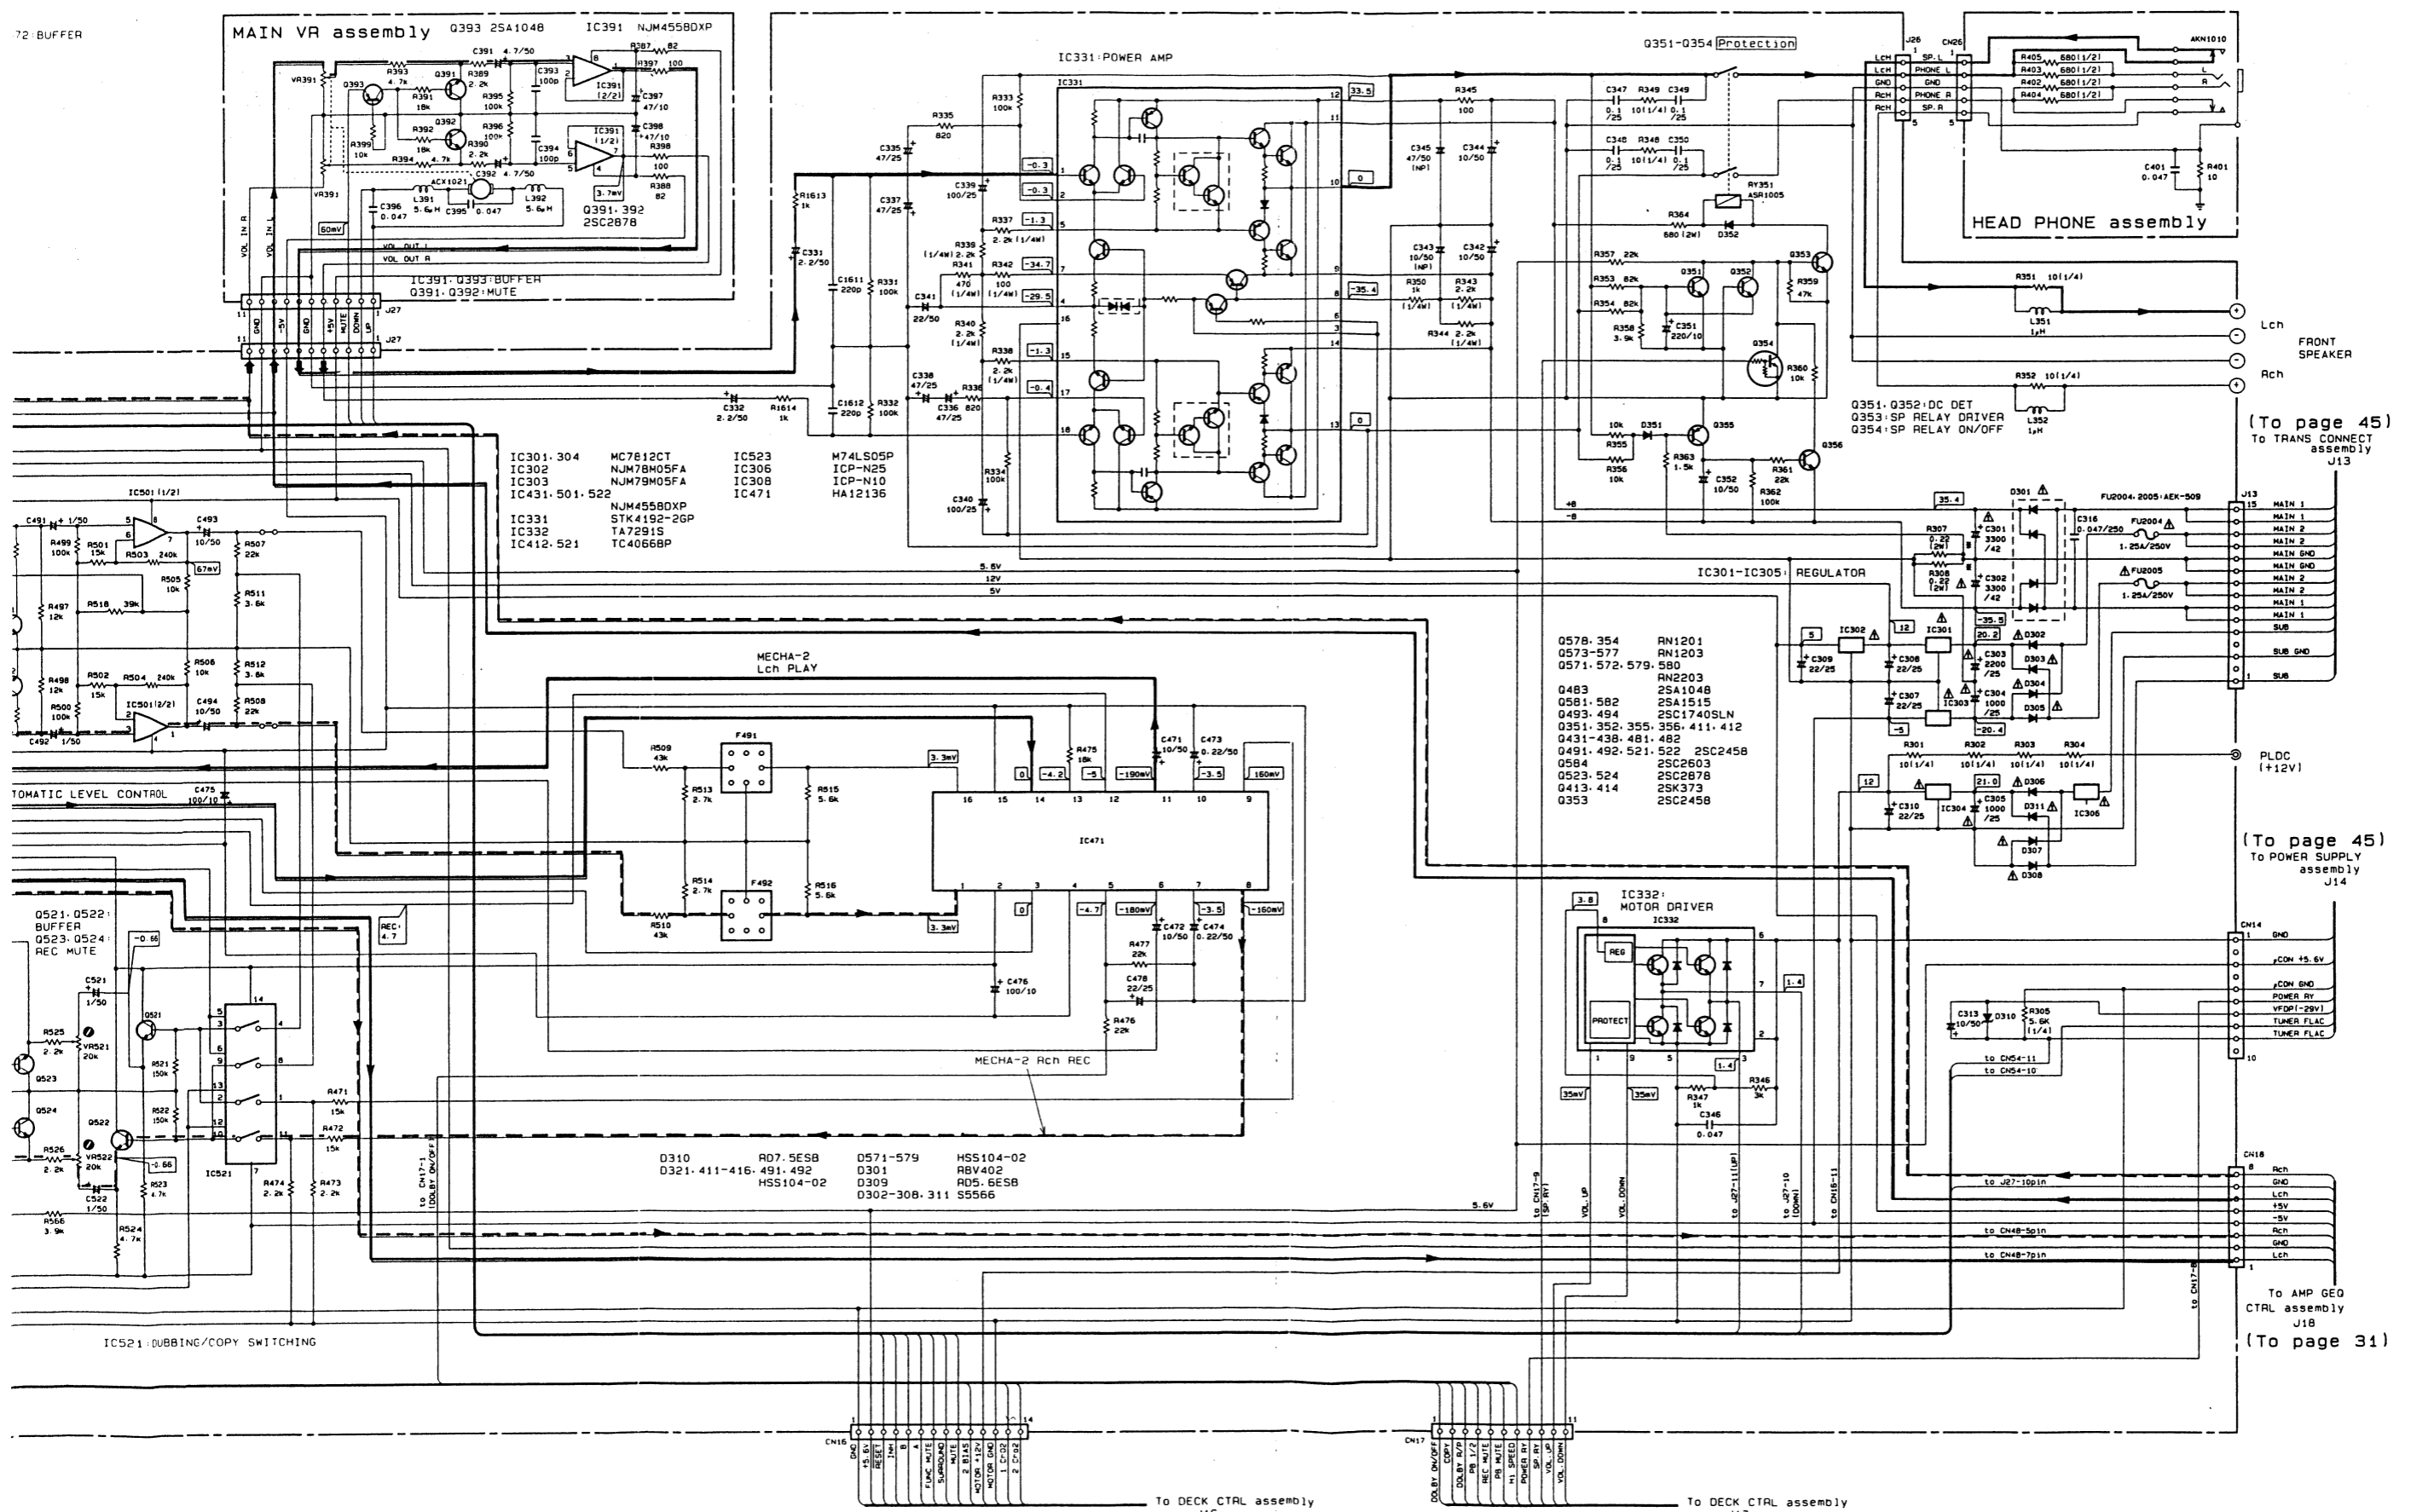

72 BUFFER

A

B

C

D

(To page 45)  
To TRANS CONNECT  
assembly  
J13

(To page 45)  
To POWER SUPPLY  
assembly  
J14

To AMP GED  
CTRL assembly  
J18  
(To page 31)

To DECK CTRL assembly  
J16  
(To page 30)

To DECK CTRL assembly  
J17  
(To page 30)


7 | 8 | 9 | 10 | 11 | 12



4.5 POWER SUPPLY (AWZ2241), CONNECT and TRANS CONNECT assembly

NOTE  
 1. This P.C.B connection dia  
 2. The parts which have be  
 with the corresponding w  
 P.C.B. pattern diagram indica  
 Q504  
 Q215  
 Q203  
 R237  
 C513  
 C518  
 Others  
 P.C.B. pattern diagram indica  
 IC  
 S  
 RY  
 L  
 F  
 VR  
 3. The capacitor terminal ma  
 4. The diode terminal mark  
 5. The transistor terminal tc

A

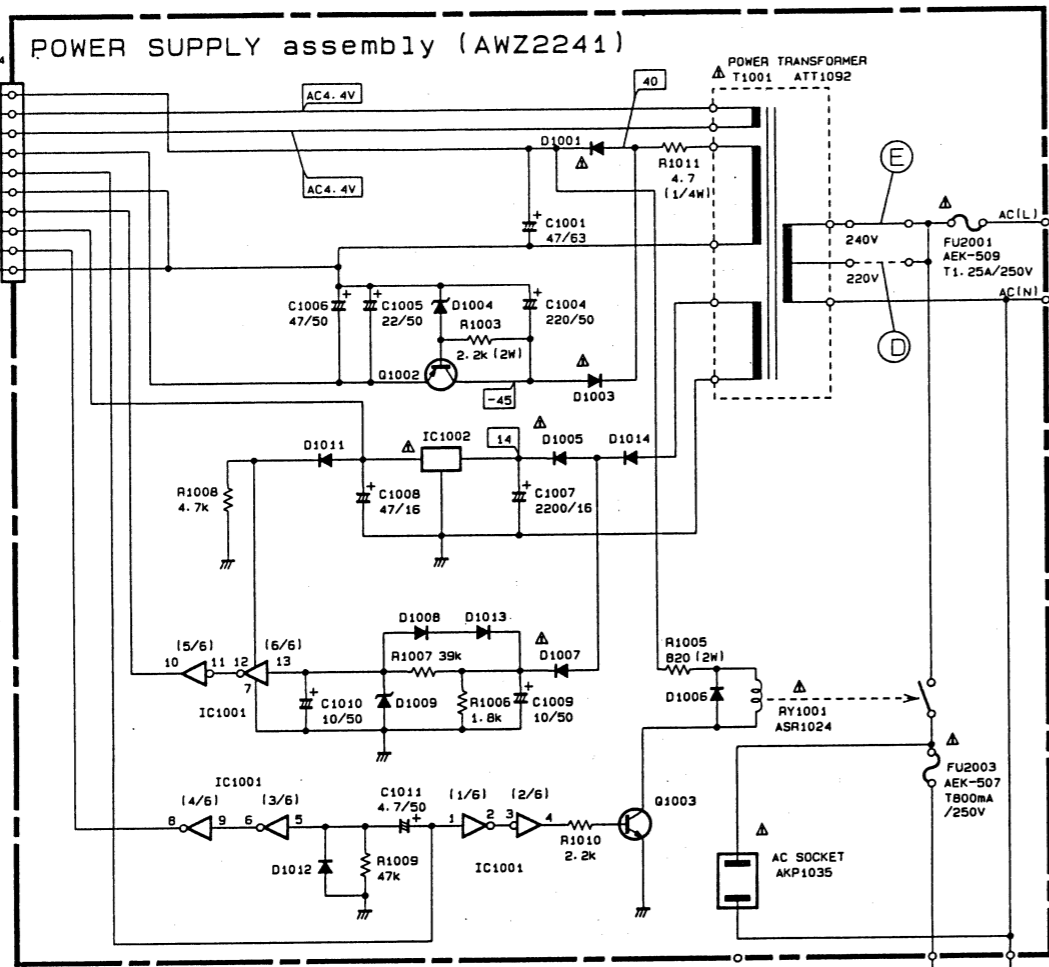


To AF assembly  
 CN14  
 (To page 44)

B

C

IC1001	TC4069UBP	D1001, 1003, 1005, 1007	D1001, 1003, 1005, 1007
IC1002	NJM78M56FA	D1014	S5566
		D1004	RD33ESB2
Q1003	2SC2240	D1006, 1008, 1011-1013	HSS104-02
Q1002	2SB560	D1009	RD5.1ESB


POWER SUPPLY assembly (AWZ2241)

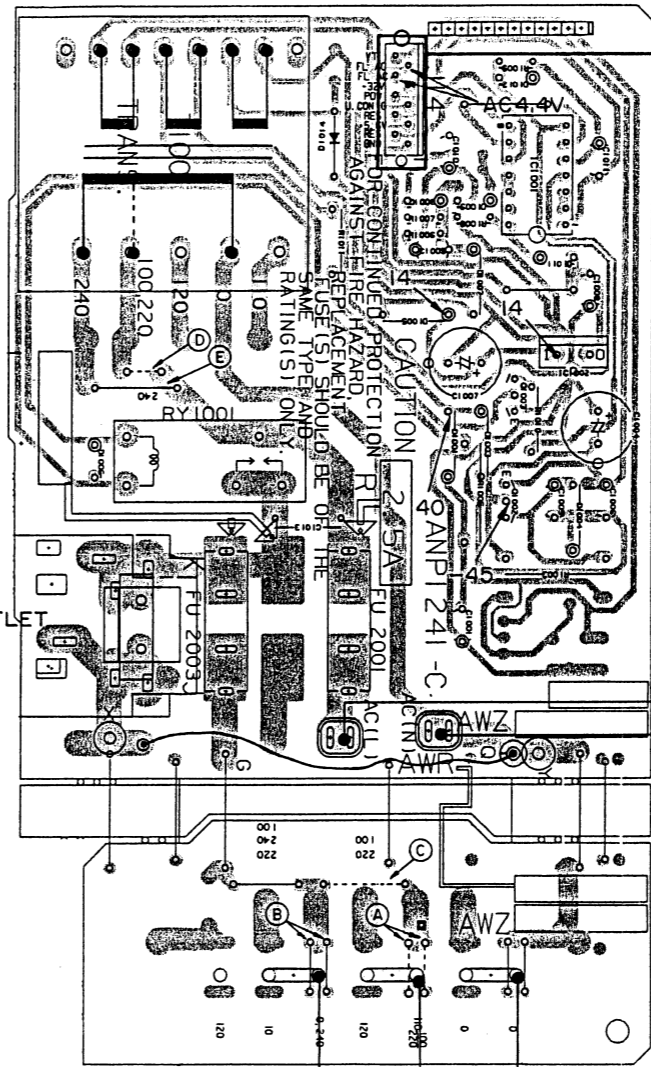

TO AF assembly  
 CN14  
 (To page 39)

AC POWER CORD  
 AC240V  
 50/60Hz

CONNECT assembly

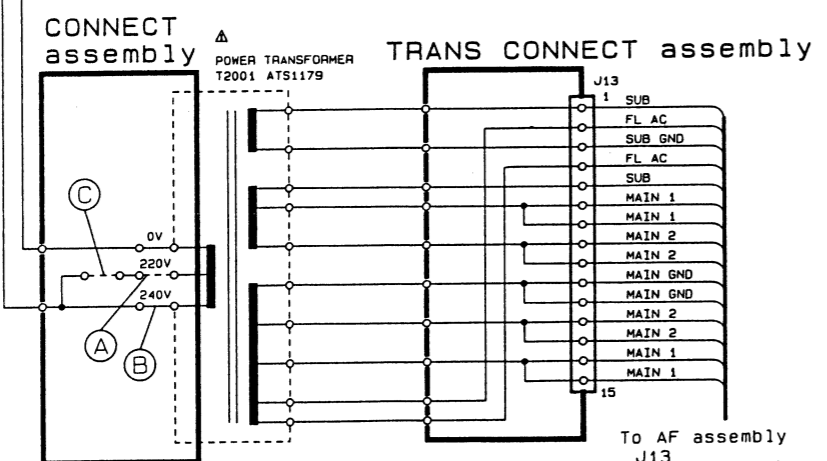

To AF assembly  
 J13  
 (To page 44)

Line Voltage Selection (FOR HB AND HE TYPES)

- Line voltage can be changed with the following steps.  
 1. Disconnect the AC power cord.  
 2. Remove the top cover.  
 3. Change the position of the jumper wires (A-E) as follows.

Jumper wire	220V	240V
(A)	○	×
(B)	×	○
(C)	○	×
(D)	○	×
(E)	×	○


○: Be needed  
 ×: Be needless

4. Stick the line voltage label on the rear panel.

Part No.	Description
AA X-193	220V label
AA X-192	240V label

TO AF assembly  
 J13  
 (To page 39)

T2001  
 POWER TRANSFORMER

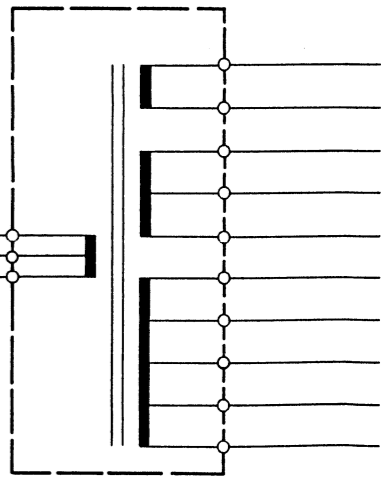

D

NOTE

1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
		Transistor
		Radiator type transistor
		Diode
		Resistor
		Capacitor (Polarity)
		Capacitor (Non-polarity)




Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with ⊕ (double circles) shows negative terminal.
4. The diode terminal marked with ⊕ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

NOTE:

This picture shows the foil side of the printed circuit.

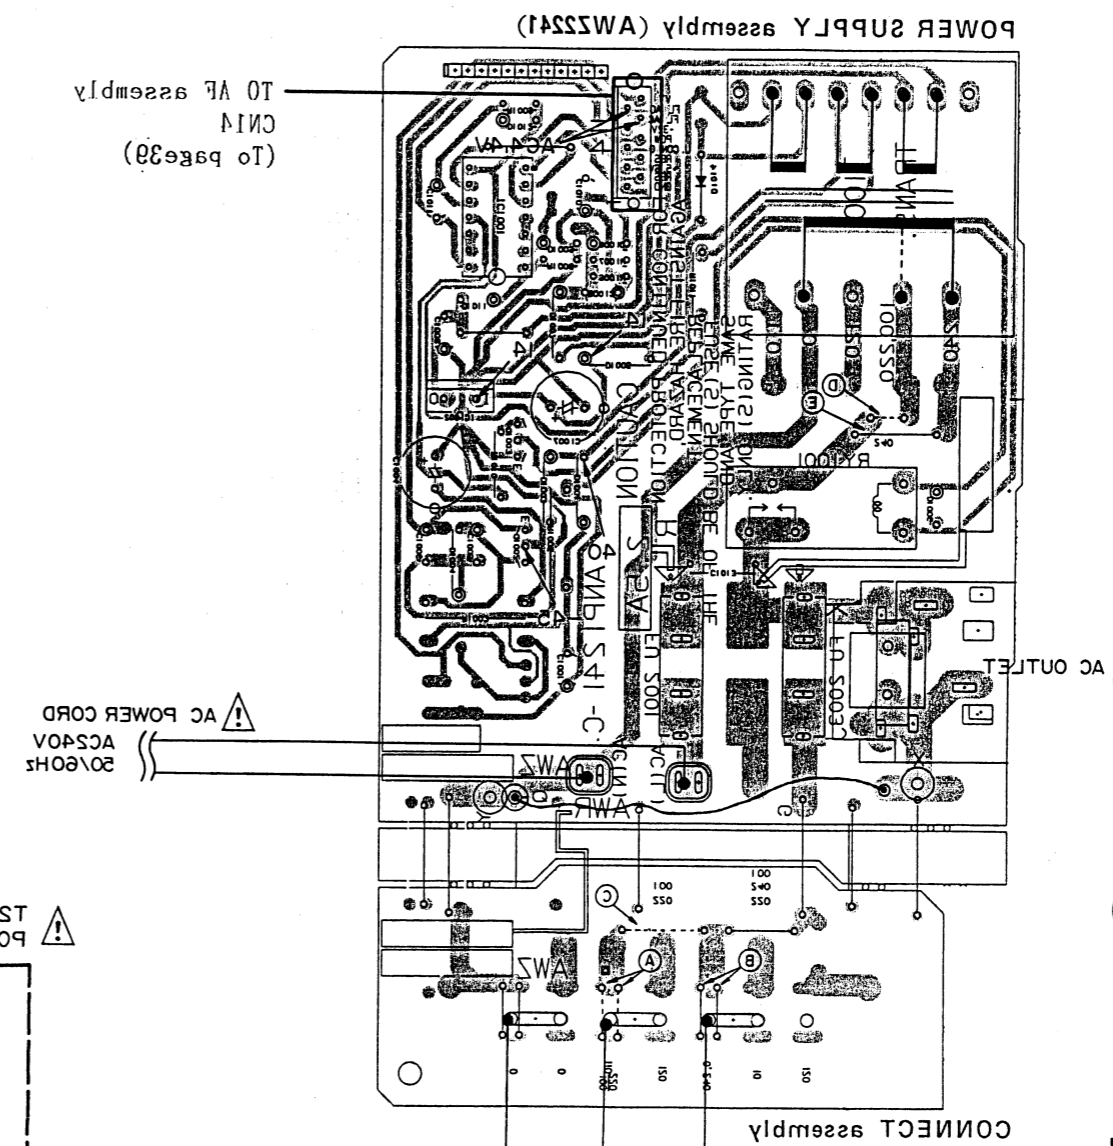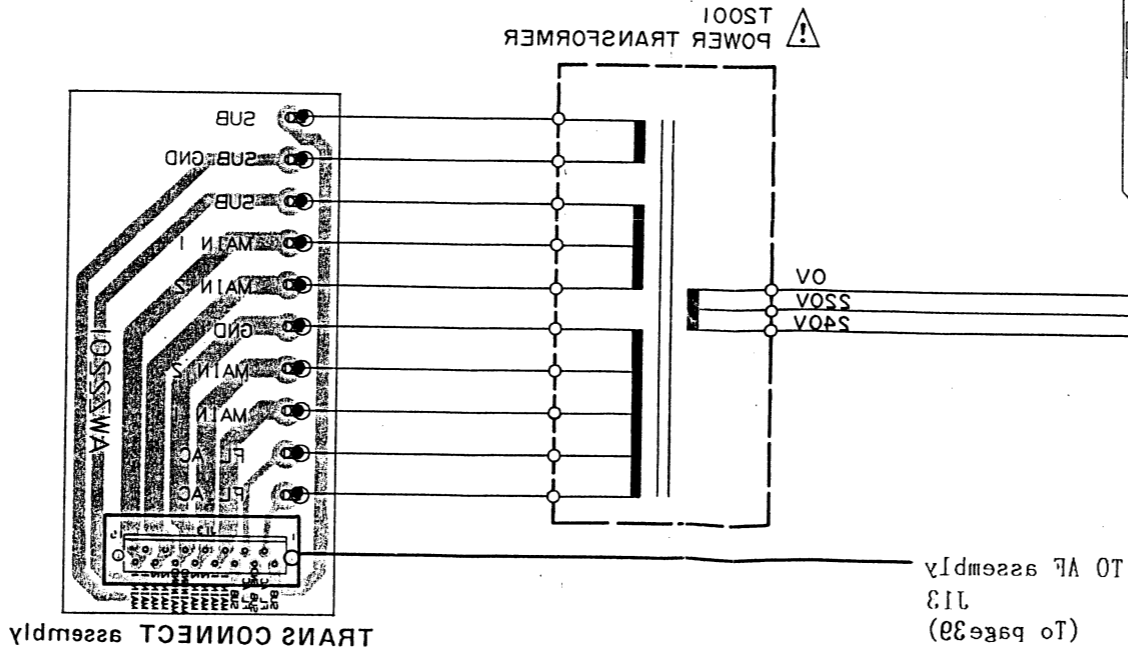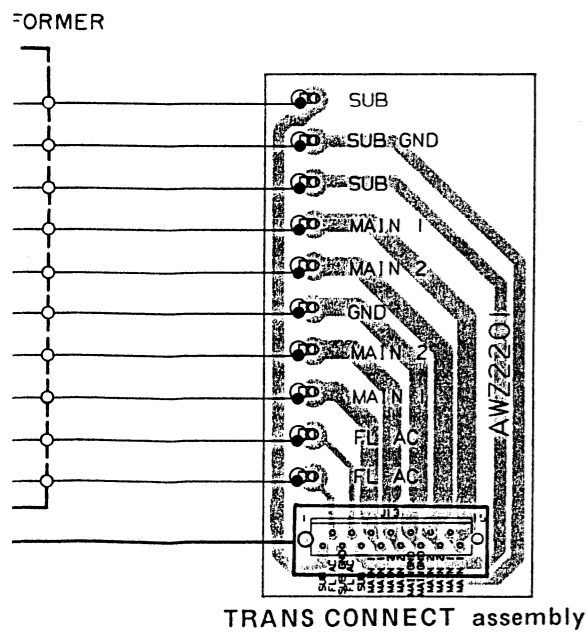

A

B

C

D

## 5. ELECTRICAL PARTSLIST

**NOTES:**

- Parts without part number cannot be supplied.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω	56 × 10 <sup>1</sup>	561.....	RD1/4PS	⊙	⊙	⊙	J
47kΩ	47 × 10 <sup>3</sup>	473.....	RD1/4PS	⊙	⊙	⊙	J
0.5Ω	0R5.....		RN2H	⊙	⊙	⊙	K
1Ω	010.....		RSIP	⊙	⊙	⊙	K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ	562 × 10 <sup>1</sup>	5621.....	RN1/4SR	⊙	⊙	⊙	F
--------	-----------------------	-----------	---------	---	---	---	---

**Miscellaneous Parts**

**P.C.BOARD ASSEMBLIES**

Mark	Symbol & Description	Part No.
	Function assembly	
	AF assembly	AWZ2217
	MAIN VR assembly	
	HEAD PHONO assembly	
	TRANS CONNECT assembly	
	AMP, GEO, CTRL assembly	AWZ2218
	DECK - 1 SW assembly	
	DECK - 2 SW assembly	
	DECK CTRL assembly	AWZ2219
	POWER SW assembly	
	DECK CENTER assembly	
	POWER SUPPLY assembly	AWZ2241
	CONNECT assembly	

**OTHERS**

Mark	Symbol & Description	Part No.
⚠	T2001 Power Transformer (AC220V/240V)	ATS1179
⚠	FU2003 Fuse (T800mA/250V)	AEK - 507
⚠	FU2001, FU2004, FU2005 Fuse (T1.25A/250V)	AEK - 509
⚠	AC Power cord	ADG - 063
	Hall IC	AZE1018
	Leaf SW	AZS1054
	Leaf SW	AZS1034
	P.C.BOARD	AZN1835
	Bobbin	AZS1035
	Bobbin	AZS1036
	Motor assembly	AZX1020
	Head frame assembly	AZP1023
	Head frame assembly	AZP1016

**FUNCTION assembly**

**SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
	IC903, IC904	NJM4558DXP
	IC901	TC4052BP
	IC902	TC4066BP
	Q901	DTA143ES
	Q902	DTC143ES

**CAPACITORS**

Mark	Symbol & Description	Part No.
	C903 - C906, C929, C930	CCCSL101J50
	C907, C908	CEAS2R2M50
	C909, C910	CKCYB152K50
	C911, C912	CKCYB562K50
	C913, C914	CEAS470M10
	C919, C920	CEAS100M25

**RESISTORS**

Mark	Symbol & Description	Part No.
	All resistors	RD1/8PM⊙⊙⊙J

**OTHERS**

Mark	Symbol & Description	Part No.
	Terminal 4P (VIDEO, PHONO)	AKB1085
	Terminal 2P (CD)	AKB1086

**AF assembly (AWZ2217)**

**SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
	IC471	HA12136
	IC306	ICP - N38
	IC301, IC304	MC7812CT
	IC523	M74LS05P
	IC431, IC501, IC522	NJM4558DXP

Mark	Symbol & Description	Part No.
	IC302	NJM78M05FA
	IC303	NJM79M05FA
	IC331	STK4142-2GP
	IC332	TA7291S
	IC412,IC521	TC4066BP
	Q578	RN1201
	Q354,Q573-Q577	RN1203
	Q571,Q572,Q579	RN2203
	Q355,Q483,Q580	2SA1048
	Q581,Q582	2SA1515
	Q493,Q494	2SC1740SLN
	Q351-Q353,Q356,Q411,Q412, Q431-Q438,Q481,Q482,Q491, Q492,Q521,Q522	2SC2458
	Q584	2SC2603
	Q523,Q524	2SC2878
	Q413,Q414	2SK373
	D351,D352,D411-D416,D491, D492,D571-D580	HSS-104-02
	D301	RBV402
	D310 Zener Diode	RD7.5ESB
	D302-D308,D311	S5566

**RELAY**

Mark	Symbol & Description	Part No.
	RY351	ASR1005

**COILS & TRANSFORMERS**

Mark	Symbol & Description	Part No.
	F491,F492 Dolby filter	ATF1064
	L351,L352 AF choke coil	ATH-133
	L521,L522 Trap coil	ATM-037
	L451,L452 Trap coil	ATM1001
	T581 Bias oscillator transformer	ATX-043
	L523,L524 Inductor	LTA392J

**CAPACITORS**

Mark	Symbol & Description	Part No.
	C588 (2000P/630)	ACE1020
	C301,C302 (2200/42)	ACH1109
	C417,C418	CCCSL101K500
	C1611,C1612	CCCSL221J50
	C419,C420	CCCSL560K500
	C421,C422	CCMSL100D50
	C343	CEANP100M50
	C341	CEANP220M50
	C345	CEANP470M50
	C473,C474	CEASR22M50

Mark	Symbol & Description	Part No.
	C495	CEASR33M50
	C437-C440,C491,C492, C521-C524	CEAS010M50
	C313,C342,C344,C352,C471, C472,C493,C494,C496,C570 C475,C476	CEAS100M50
	C593	CEAS101M10
	C339,C340	CEAS101M16
	C304,C305	CEAS101M25
	C331,C332,C531,C532	CEAS102M25
	C307-C310,C478	CEAS2R2M50
	C351	CEAS220M25
	C303	CESA221M10
	C433,C434,C525,C526	CEAS222M25
	C591	CEAS330M16
	C435,C436	CEAS4R7M50
	C545,C546,C581	CEAS470M10
	C335,C337,C338	CEAS470M16
	C336	CEAS470M25
	C541,C542	CEHAQ470M25
	C527,C528	CFTXA333J50
	C347-C350	CFTXA683J50
	C316	CKCYX104M25
	C346	CKDYB392K500
	C587	CKDYF473Z50
	C411,C412	CKMYB221K50
		CKMYB331K50
	C413,C414	CKMYB471K50
	C533,C534,C586	CKMYB681K50
	C415,C416	CKMYB821K50
	C582,C584	CQMA103K50
	C585	CQMA123K250
	C583	CQMA153K50
	C529,C530	CQMA182J50
	C535,C536	CQMA183J50
	C539,C540	CQMA562J50
	C590	CQMA562K400
	C431,C432	CQMA682J50
	C537,C538	CQMA752J50

**RESISTORS**

Mark	Symbol & Description	Part No.
	R307,R308	RS2LMFR22J
	R364	RS2LMF681J
	VR451,VR452 (100k)	VRTM6H104
	VR453,VR454 (20k)	VRTM6H203
	VR521,VR522 (20k)	VRTM6V203

Mark	Symbol & Description	Part No.
	VR411,VR412 (200k) R590 R341,R342,R345,R350-R352 R301-R305,R337-R340,R343, R344,R348,R349	VRTM6V204 RD1/2PM180J RD1/4PMFL□□□J RD1/4PM□□□J
	Other resistors	RD1/8PM□□□J

**OTHERS**

Mark	Symbol & Description	Part No.
	4P Speaker terminal DC jack	AKE1012 AKN-203

**MAIN VR assembly  
SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
	IC391	NJM4558DXP
	Q393 Q391,Q392	2SA1048 2SC2878

**COILS**

Mark	Symbol & Description	Part No.
	L391,L392 Axial Inductor (5.6 $\mu$ H)	LAU5R6K

**CAPACITORS**

Mark	Symbol & Description	Part No.
	C393,C394 C391,C392 C397,C398 C395,C396	CCMSL101J50 CEAS4R7M50 CEAS470M10 CKCYF473Z50

**RESISTORS**

Mark	Symbol & Description	Part No.
	VR391 (100k $\times$ 2) Other resistors	ACX1021 RD1/8PM□□□J

**HEAD PHONE assembly  
CAPACITORS**

Mark	Symbol & Description	Part No.
	C401	CKCYF473Z50

**RESISTORS**

Mark	Symbol & Description	Part No.
	R402-R405 R401	RD1/2PMF681J RD1/8PM100J

**OTHERS**

Mark	Symbol & Description	Part No.
	Head phone Jack	AKN1010

**TRANS CONNECT assembly**

No parts are supplied with the TRANS CONNECT assembly.

**AMP,GEQ CTRL assembly (AWZ2218)  
SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
	IC701 IC702 IC721,IC722	M74LS05P TC4081BP BA3812L
	Q701,Q702	DTA143ES
	D701-D705 LED D707,D708	AEL1065 HSS104-02

**SWITCHES**

Mark	Symbol & Description	Part No.
	S701-S705	ASG1029

**CAPACITORS**

Mark	Symbol & Description	Part No.
	C743,C744 C727,C728 C723,C724 C741,C742,C747,C748 C749,C750	CCMSL101J50 CEASR15M50 CEASR68M50 CEAS100M25 CEAS470M16
	C733,C734 C729,C730 C739,C740 C735,C736 C725,C726	CKDYB182K50 CKDYB392K50 CKDYB682K50 CKDYX153M25 CKDYX183M25
	C721,C722 C731,C732 C745,C746 C737,C738	CKDYX393M25 CKDYX683M25 CKMYB331K50 CKMYB391K50

**RESISTORS**

Mark	Symbol & Description	Part No.
	VR721-VR725 (30k-B5 $\times$ 2) Other resistors	ACU1031 RD1/8PM□□□J

**DECK – 1 SW assembly  
SWITCHES**

Mark	Symbol & Description	Part No.
	S811–S815 Tact switch (1FWD, 1REV, 1FF, 1REW, 1STOP)	ASG1029

**DECK – 2 SW assembly  
SWITCHES**

Mark	Symbol & Description	Part No.
	S821–S825 Tact switch (2FWD, 2REV, 2FF, 2REW, 2STOP)	ASG1029

**DECK CTRL assembly (AWZ2219)  
SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
	IC802	M74LS42P
	IC801	PDE029–C
	Q814	DTC143ES
	Q803–806	RN1201
	Q801,802	RN2204
	Q807–812	2SA1515
	D801,D802,D808,D810–D815, D820–D824,D826,D834–D836	HSS104–02

**COILS**

Mark	Symbol & Description	Part No.
	X801 Ceramic resonator	ASS1018
	L801 Axial Inductor (22 $\mu$ H)	LAU220K

**CAPACITORS**

Mark	Symbol & Description	Part No.
	C801	CEASR33M50
	C803	CEAS101M10
	C802	CEAS101M16
	C839,C840	CKCYB102K50
	C804–C807	CKCYF473Z50

**RESISTORS**

Mark	Symbol & Description	Part No.
	VR803 (10k)	VRTM6H103
	VR801,VR802 (20k)	VRTM6H203
	Other resistors	RD1/8PM□□□J

**POWER SW assembly  
SWITCH**

Mark	Symbol & Description	Part No.
	S707	ASG1029

**DECK CENTER assembly  
SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
	D845,D846LED	AEL1065
	D841–D844LED	AEK1076
	D847–D850	HSS104–02

**SWITCHES**

Mark	Symbol & Description	Part No.
	S841–S846 Tact switch	ASG1029
	S847,S848 Slide swithe	ASH1014

**RESISTORS**

Mark	Symbol & Description	Part No.
	All resistors	RD1/8PM□□□J

**POWER SUPPLY assembly (AWZ2241)  
SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
	IC1002	NJM78M56FA
	IC1001	TC4069UBP
	Q1002	2SB560
	Q1003	2SC2240
	D1006,D1008,D1011–D1013	HSS104–02
	D1004 Zener Diode	RD33ESB2
	D1009 Zener Diode	RD5.1ESB
	D1001,D1003,D1005,D1007, D1014	S5566

**TRANSFORMER**

Mark	Symbol & Description	Part No.
△	T1001 Power transformer	ATT1092

**RELAY**

Mark	Symbol & Description	Part No.
△	RY1001 Relay	ASR1024

**CAPACITORS**

Mark	Symbol & Description	Part No.
	C1009,C1010	CEAS100M50
	C1005	CEHAQ220M50
	C1004	CEAS221M50
	C1007	CEAS222M16
	C1011	CEAS4R7M50
	C1008	CEAS470M16
	C1006	CEAS470M50
	C1001	CEAS470M63

**RESISTORS**

Mark	Symbol & Description	Part No.
	R1011	RD1/4PMFL4R7J
	R1003	RS2LMF222J
	R1005	RS2LMF821J
	Other resistors	RD1/8PM□□□J

**OTHERS**

Mark	Symbol & Description	Part No.
⚠	1P AC SOCKET (OUTLET)	AKP1035

**CONNECT assembly**

No parts are supplied with the connection assembly.

### 6. ADJUSTMENTS

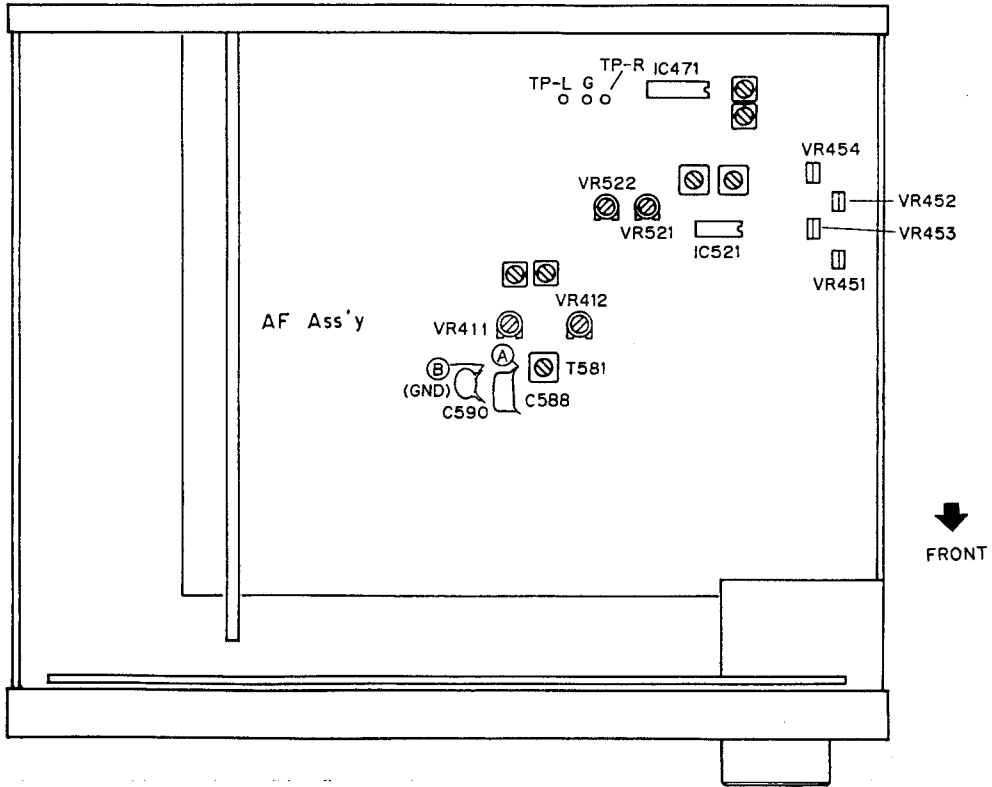


Fig 6.1. Adjustment location

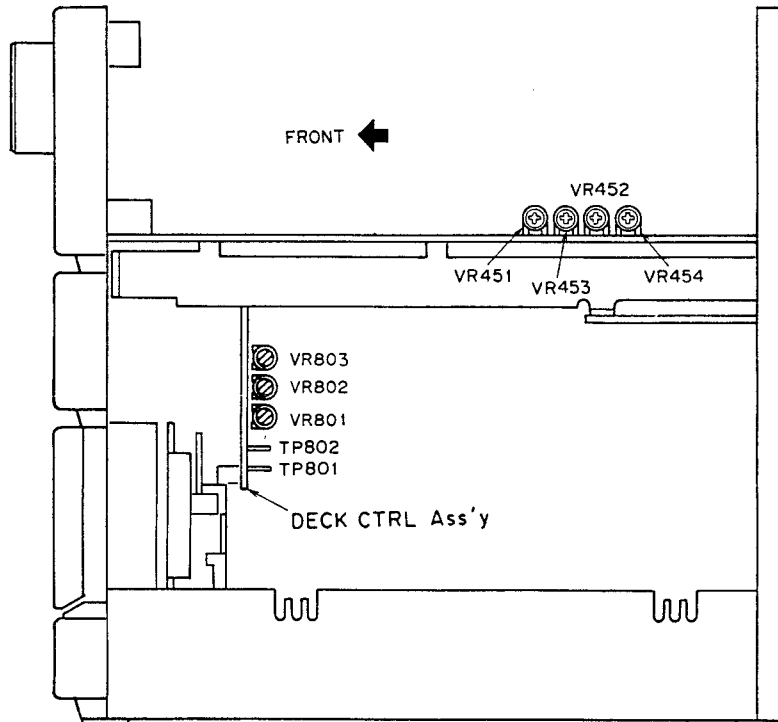


Fig 6.2. Adjustment location



- Adjustment and measurement are usually made in the AF Ass'y, unless specified otherwise.
- Set the graphic equalizer to FLAT. Depending on the country of destination, the unit may be equipped with a MIC mixing volume control.  
If a MIC mixing volume control is built in, please set to the MIN position.
- The function should always be set to "TAPE" unless otherwise specified.

### Adjustment of Mechanical System

- Test tape: STD-301 (3 kHz, 30 min.)
- Setting of double speed mode: Short-circuit TP801 and TP802 of the Control Ass'y. To release the mode, break the short circuit.

1. Adjustment of tape speed							
No.	Mode	Input signal & Test tape	Adjustment location		Measuring location	Adjustment value	Remarks
1	PLAY	Playback the STD-301 tape to 3 kHz.	Deck I	DECK CTRL Ass'y VR801	TP-L (Lch)	Press the PLAY SW and adjust the frequency to 3010 Hz $\pm$ 10 Hz. Make sure that the wow and flutter is within 0.2 %.	
2	PLAY (Double speed mode)			---		Press the PLAY SW in double speed mode and confirm that the frequency is 6000 Hz $\pm$ 1000 Hz. Note down the figure.	Release the double speed mode after adjustment.
3	PLAY (Double speed mode)		Deck II	DECK CTRL Ass'y VR803	TP-R (Rch)	Press the PLAY SW in double speed mode and adjust the frequency to be within $\pm$ 30 Hz of the figure recorded at step No. 2.	Release the double speed mode after adjustment.
4	PLAY			DECK CTRL Ass'y VR802		Press the PLAY SW and adjust the frequency to 3010 Hz $\pm$ 10 Hz. Make sure that the wow and flutter is within 0.2 %.	

### Adjustment of Electric System

#### ■ Check and conduct the following before adjusting the electric system.

1. Adjustment of tape speed has been completed.
2. Clean and demagnetize the head using a head eraser.
3. When measured, the level should be 0 dBV = 1 Vrms.
4. Use side A of the specified tape for adjustment.  
STD-331B: For adjustment of playback system.  
STD-630: NORMAL blank tape  
STD-620: CrO<sub>2</sub> blank tape  
STD-610: METAL blank tape
5. Prepare the following measuring devices:  
AC millivoltmeter, Low-frequency oscillator, Attenuator, Oscilloscope
6. Adjust both L and R channels, unless specified otherwise.
7. Set the DOLBY NR switches to OFF, unless specified otherwise.
8. Warm up the unit for several minutes before adjustment. Especially before adjusting the frequency characteristics of recording and playback, warm up for 3 to 5 minutes in REC/PLAY mode.
9. Make sure to follow the proper order of the adjustment procedure. Any change in the order may cause an imperfect result.

#### List of Adjustment

##### Deck I

1. Head azimuth adjustment
2. Playback level adjustment

##### Deck II

1. Head azimuth adjustment
2. Playback level adjustment
3. Adjustment frequency characteristics of recording/playback
4. Recording level adjustment

#### Checking of Decks II

1. Make sure the ALC is operating properly.

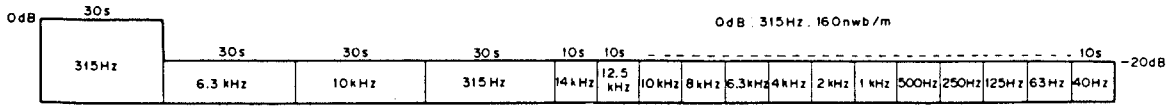


Fig. 6.3 Test tape STD-331B

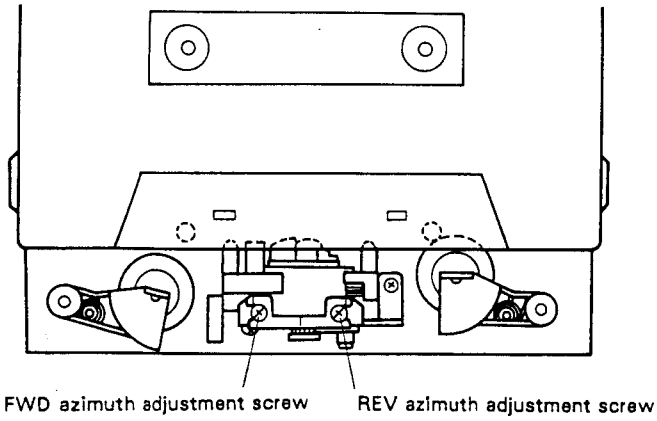


Fig. 6.4 Head azimuth adjustment

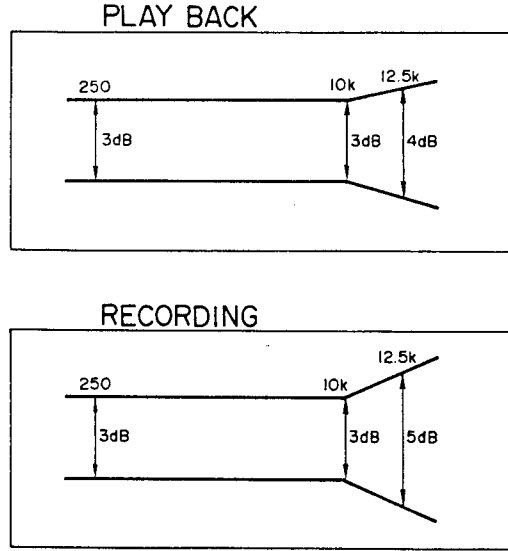


Fig. 6.5 Frequency characteristics

**• Head Adjustment of Deck I**

- Deck I is provided with an automatic tape selector mechanism.
- Note: Do not switch over FWD and REV while the driver is inserted.

**1. Head Azimuth Adjustment**

Pro-cedure	Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1	NORM	PLAY	Playback the test tape STD-331B (10 kHz, -20 dB).	Head azimuth adjustment screw (Fig. 6-4)	TP-L (Lch) TP-R (Rch)	Maximum playback signal level	Lock the screw with screw lock after completing adjustment.

**2. Playback Level Adjustment**

- Be sure to make a careful adjustment, as the adjustment determines the DOLBY NR level for playback.

Pro-cedure	Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1	NORM	PLAY	Playback the test tape STD-331B (315 Hz, 0 dB).	VR453 (Lch) VR454 (Rch)	TP-L (Lch) TP-R (Rch)	-6.7 dBV	

• **Head Adjustment of Deck II**

- Deck II is provided with an automatic tape selector mechanism.
- Note: Do not switch over FWD and REV while the driver is inserted.

**1. Head Azimuth Adjustment**

Pro-cedure	Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1	NORM	PLAY	Playback the test tape STD-331B (10 kHz, -20 dB).	Head azimuth adjustment screw (Fig. 6-4)	TP-L (Lch) TP-R (Rch)	Maximum playback signal level	Lock the screw with screw lock after completing adjustment.

**2. Playback Level Adjustment**

- Be sure to make a careful adjustment, as the adjustment determines the DOLBY NR level for playback.

Pro-cedure	Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1	NORM	PLAY	Playback the test tape STD-331B (315 Hz, 0 dB).	VR451 (Lch) VR452 (Rch)	TP-L (Lch) TP-R (Rch)	-6.7 dBV	

**3. Adjustment of frequency characteristics of recording/playback**

- As this procedure is for adjustment of the recording bias, be careful not to increase the distortion rate by under-adjusting the bias.

Pro-cedure	Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1	NORM	REC	Load the test tape STD-630 and set to record mode.	—	Area between Ⓐ and Ⓑ (A F Ass'y) shown in Fig. 6-1.	Confirm that the oscillation frequency is 105 kHz $\pm$ 1 kHz.	If the adjustment value cannot be set within the specification, adjust the T581.
2	NORM	REC	Apply a signal of 315 Hz to the CD input terminal and set the function to "CD".	Input signal level	TP-L (Lch) TP-R (Rch)	-27.7 dBV	
3	NORM	REC/ PLAY	Record and playback the test tape STD-630 (315 Hz and 10 kHz).	VR411 (Lch) VR412 (Rch)	TP-L (Lch) TP-R (Rch)	Repeat the correction so that the playback level of 10 kHz remains 0 $\pm$ 0.5 dB in relation to 315 Hz.	

**4. Recording Level Adjustment**

Pro-cedure	Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1	NORM	REC	Apply a signal of 315 Hz to the CD input terminal and set the function to "CD".	Input signal level	TP-L (Lch) TP-R (Rch)	-7.7 dBV	
2	NORM	REC/ PLAY	Record and playback the test tape STD-630 (315 Hz).	VR521 (Lch) VR522 (Rch)	TP-L (Lch) TP-R (Rch)	Repeat the recording and correction so that the playback level of 315 Hz is -6.7 dBV.	

• **Checking Procedure for Deck II**

**1. Action of ALC**

Pro-cedure	Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Checking value	Remarks
1	NORM	REC	Apply a signal of 315 Hz to the CD input terminal and set the function to "CD".	Input signal level	TP-L (Lch) TP-R (Rch)	-7.7 dBV	
2				+10 dB against the input level of step 1.		-2.7 dBV $\pm$ 2.5 dB	

## 6. RÉGLAGES

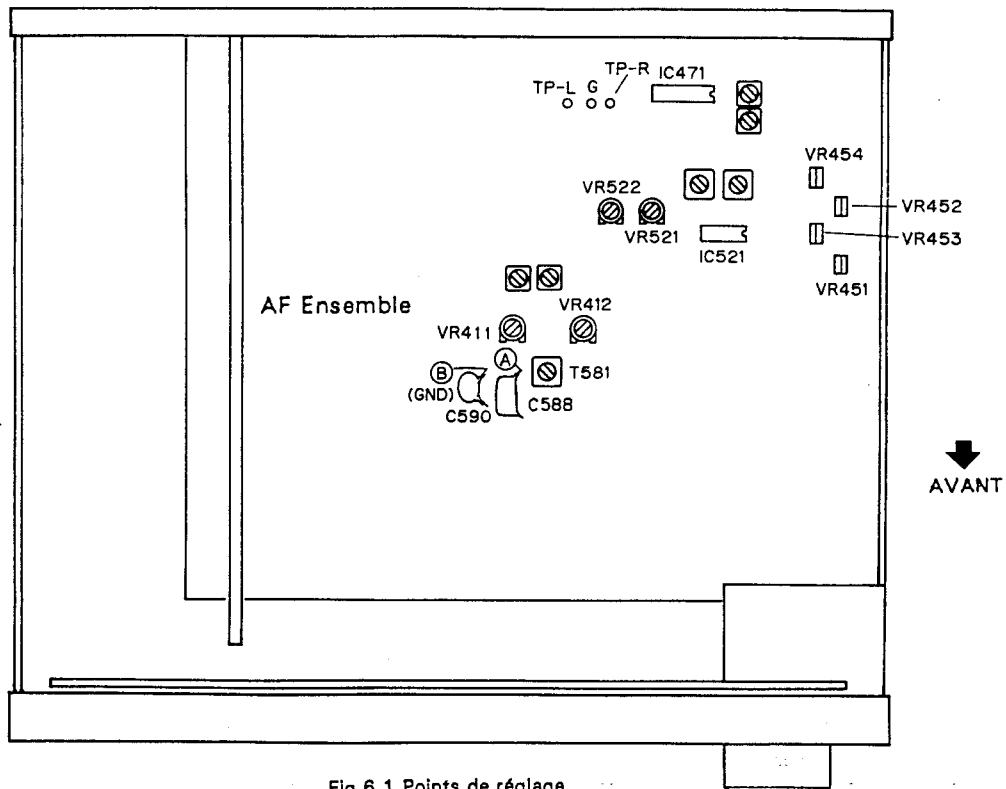


Fig 6.1 Points de réglage

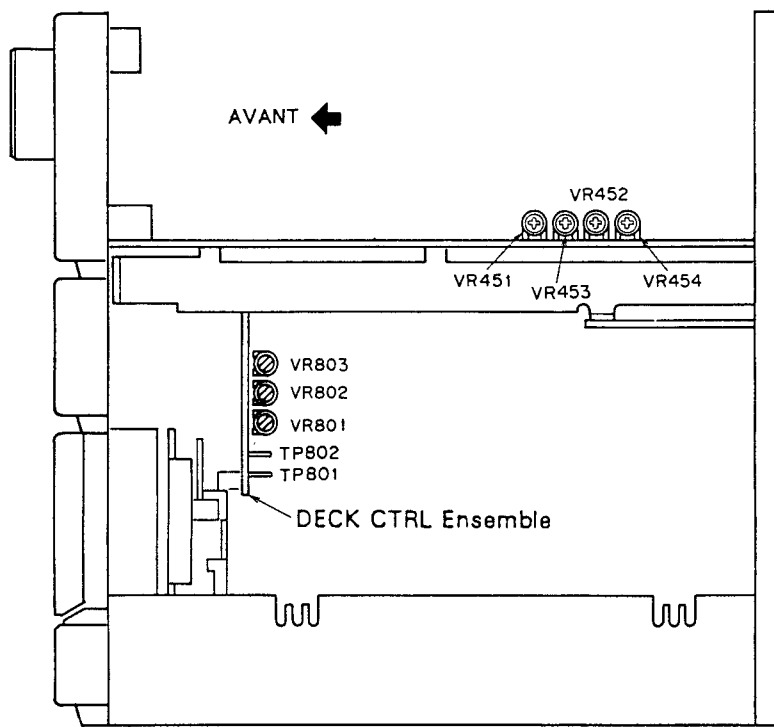


Fig 6.2 Points de réglage

- Les réglages et les mesures sont généralement faits dans l'ensemble AF, à moins de spécification contraire.
- Régler l'égaliseur graphique sur FLAT, selon le pays de destination, l'unité peut être équipée d'une commande de volume de mixage de micro.  
Si une commande de volume de mixage de micro est incorporée, prière de la régler à la position minimum.
- La fonction doit toujours être réglée sur "TAPE" à moins de spécification contraire.

### Réglages mécaniques

- Bande d'étalonnage: STD-301 (3 kHz, 30 mn.)
- Réglage du mode de vitesse double: Court-circuiter TP801 et TP802 de l'ensemble de commande. Pour libérer le mode, ouvrir le court-circuit.

1. Réglage de la vitesse de bande							
No.	Mode	Signal appliqué / bande d'étalonnage	Emplacement du réglage		Emplacement du point de mesure	Valeur relevée	Observations
1	PLAY	Reproduire la bande STD-301 par 3 kHz.	Platine I	ENSEMBLE COMM. PLATINE VR801	TP-L (can. G)	Appuyer sur le contacteur PLAY et régler la fréquence sur 3.010 Hz $\pm$ 10 Hz. Vérifier que le pleurage et scintillement est dans la limite de 0,2%.	
2	PLAY (Mode de vitesse double)			—		Appuyer sur le contacteur PLAY dans le mode de vitesse double et vérifier que la fréquence est 6.000 Hz $\pm$ 1.000 Hz. Noter le chiffre.	Libérer le mode de vitesse double après le réglage.
3	PLAY (Mode de vitesse double)		Platine II	ENSEMBLE COMM. PLATINE VR803	TP-R (can. D)	Appuyer sur le contacteur PLAY dans le mode de vitesse double et régler la fréquence pour qu'elle soit dans la limite de $\pm$ 30 Hz du chiffre noté dans l'étape No. 2.	Libérer le mode de vitesse double après le réglage.
4	PLAY			ENSEMBLE COMM. PLATINE VR802		Appuyer sur le contacteur PLAY et régler la fréquence sur 3.010 Hz $\pm$ 10 Hz. Vérifier que le pleurage et scintillement est dans la limite de 0,2%.	

### Réglages électriques

#### ■ Vérifier les points suivants et effectuer les opérations suivantes avant procéder aux réglages électriques.

1. Le réglage de la vitesse de bande a été complété.
2. Nettoyer et démagnétiser la tête avec un démagnétiseur de tête.
3. Lors de la mesure, le niveau doit être de 0 dBV = 1 Vepp.
4. Utiliser la face A de la bande spécifiée pour le réglage. STD-331B: Pour le réglage du système de lecture.  
STD-630: Bande vierge NORMAL  
STD-620: Bande vierge CrO<sub>2</sub>  
STD-610: Bande vierge METAL
5. Préparer les instruments de mesure suivants:  
Millivoltmètre CA, oscillateur à basse fréquence, éatténateur et oscilloscope.
6. Régler les deux canaux L (gauche) et R (droit), sauf spécification contraire.
7. Régler les commutateurs DOLBY NR sur la position OFF, sauf spécification contraire.
8. Laisser chauffer l'appareil pendant plusieurs minutes avant le réglage. En particulier avant d'effectuer le réglage de la réponse en fréquence d'enregistrement et de lecture, laisser chauffer l'appareil pendant 3 à 5 minutes dans le mode d'enregistrement/lecture (REC/PLAY).
9. Toujours suivre l'ordre spécifié de la méthode réglage. Tout changement de l'ordre peut provoquer des résultats imparfaits.

#### Liste des réglages

##### Platine I

1. Azimut de la tête
2. Niveau de lecture

##### Platine II

1. Azimut de la tête
2. Niveau de lecture
3. Réponse en fréquence d'enregistrement/lecture
4. Niveau d'enregistrement

#### Vérification de la Platines II

1. Vérifier que le ALC fonctionne correctement.

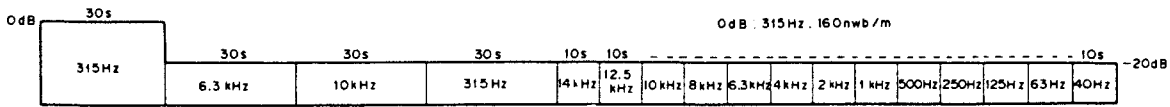


Fig. 6.3 Bande d'étalonnage STD-331B


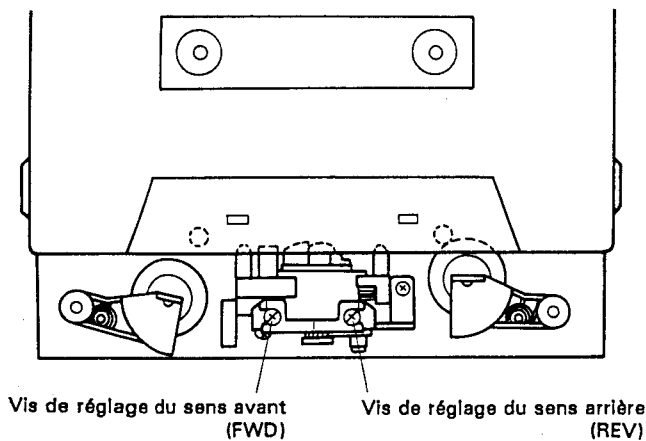


Fig. 6.4 Réglage d'azimut de la tête

LECTURE

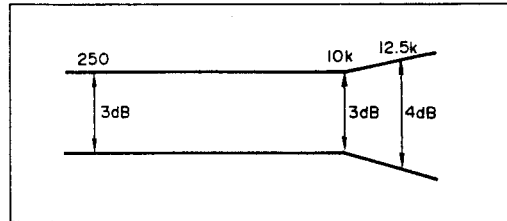

ENREGISTREMENT

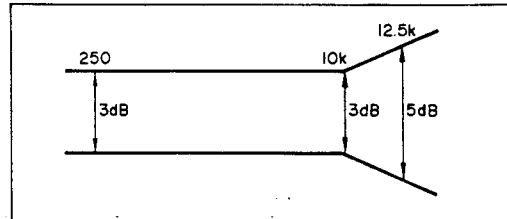


Fig. 6.5 Réponse en fréquence

• Réglage de la Platine I

- La Platine I est équipée d'un mécanisme de sélection automatique de bande.
- Remarque: Ne pas commuter entre le sens avant (FWD) et le sens arrière (REV) pendant que le tournevis est inséré.

1. Réglage d'azimut de la tête

Opération	Sélecteur de bande	Mode	Signal appliqué / bande d'étalonnage	Emplacement du réglage	Emplacement du point de mesure	Valeur relevée	Observations
1	NORM	PLAY	Reproduire la bande d'étalonnage STD-331B (10 kHz, -20 dB).	Vis de réglage d'azimut de tête (Fig. 6-4)	TP-L (can. G) TP-R (can. D)	Niveau maximum du signal de lecture	Une fois le réglage terminé, bloquer la vis avec un frein de vis.

2. Réglage du niveau de lecture

- Toujours effectuer un réglage minutieux, car la valeur réglée sera le niveau Dolby pour la lecture.

Opération	Sélecteur de bande	Mode	Signal appliqué / bande d'étalonnage	Emplacement du réglage	Emplacement du point de mesure	Valeur relevée	Observations
1	NORM	PLAY	Reproduire la bande d'étalonnage STD-331B (315 kHz, 0 dB)	VR453 (can. G) VR454 (can. D)	TP-L (can. G) TP-R (can. D)	-6,7 dBV	

## • Réglage de la Platine II

- La Platine II est équipée d'un mécanisme de sélection automatique de bande.
- Remarque: Ne pas commuter entre le sens avant (FWD) et le sens arrière (REV) pendant que le tournevis est inséré.

### 1. Réglage d'azimut de la tête

Opération	Sélecteur de bande	Mode	Signal appliqué / bande d'étalonnage	Emplacement du réglage	Emplacement du point de mesure	Valeur relevée	Observations
1	NORM	PLAY	Reproduire la bande d'étalonnage STD-331B (10 kHz, -20 dB).	Vis de réglage d'azimut de tête (Fig. 6-4)	TP-L (can. G) TP-R (can. D)	Niveau maximum du signal de lecture	Une fois le réglage terminé, bloquer la vis avec un frein de vis.

### 2. Réglage du niveau de lecture

- Toujours effectuer un réglage minutieux, car la valeur réglée sera le niveau Dolby pour la lecture.

Opération	Sélecteur de bande	Mode	Signal appliqué / bande d'étalonnage	Emplacement du réglage	Emplacement du point de mesure	Valeur relevée	Observations
1	NORM	PLAY	Reproduire la bande d'étalonnage STD-331B (315 kHz, 0 dB)	VR451 (can. G) VR452 (can. D)	TP-L (can. G) TP-R (can. D)	-6,7 dBV	

### 3. Réglage de la réponse fréquence d'enregistrement/lecture

- Cette opération réglant la polarisation d'enregistrement, faire attention de ne pas augmenter la distorsion par un réglage insuffisant de la polarisation.

Procédure	Sélecteur de bande	Mode	Signal appliqué / bande d'étalonnage	Emplacement du réglage	Emplacement du point de mesure	Valeur relevée	Observations
1	NORM	REC	Charger la bande d'étalonnage STD-630 et régler dans le mode d'enregistrement.	—	Partie entre ① et ② (ensemble d'enregistrement (A.F)) indiquée sur la Fig. 6-1.	Vérifier que la fréquence d'oscillation est de 105 kHz $\pm$ 1 kHz.	Si la valeur de mesurée ne peut pas être réglée dans les limites spécifiées, régler T581.
2	NORM	REC	Appliquer un signal de 315 Hz à la borne d'entrée CD et régler la fonction sur "CD".	Niveau du signal d'entrée	TP-L (can. G) TP-R (can. D)	-27,7 dBV	
3	NORM	REC / PLAY	Enregistrer et reproduire la bande d'étalonnage STD-630 (315 Hz et 10 kHz).	VR411 (can. G) VR412 (can. D)	TP-L (can. G) TP-R (can. D)	Répéter la correction de sorte que le niveau de lecture de 10 kHz soit de 0 $\pm$ 0,5 dB en relation avec 315 Hz.	

### 4. Réglage du niveau d'enregistrement

Procédure	Sélecteur de bande	Mode	Signal d'entrée / bande d'essai	Emplacement du réglage	Emplacement du point de mesure	Valeur relevée	Remarques
1	NORM	REC	Appliquer un signal de 315 Hz à la borne d'entrée CD et régler la fonction sur "CD".	Niveau du signal d'entrée	TP-L (can. G) TP-R (can. D)	-7,7 dBV	
2	NORM	REC / PLAY	Enregistrer et reproduire la bande d'essai STD-630 (315 Hz).	VR521 (can. G) VR522 (can. D)	TP-L (can. G) TP-R (can. D)	Répéter l'enregistrement et la correction de sorte que le niveau de lecture de 315 Hz soit de -6,7 dBV.	



• Vérification de la Platine II

1. Action du ALC

Opération	Sélecteur de bande	Mode	Signal appliqué / bande d'étalonnage	Emplacement du réglage	Emplacement du point de mesure	Valeur relevée	Observations
1				Niveau du signal d'entrée		-7,7 dBV	
2	NORM	REC	Appliquer un signal de 315 Hz à la borne d'entrée CD et régler la fonction sur "CD".	+ 10 dB par rapport au niveau d'entrée de l'étape 1.	TP-L (can. G) TP-R (can. D)	-2,7 dBV $\pm$ 2,5 dB	



## 6. AJUSTE

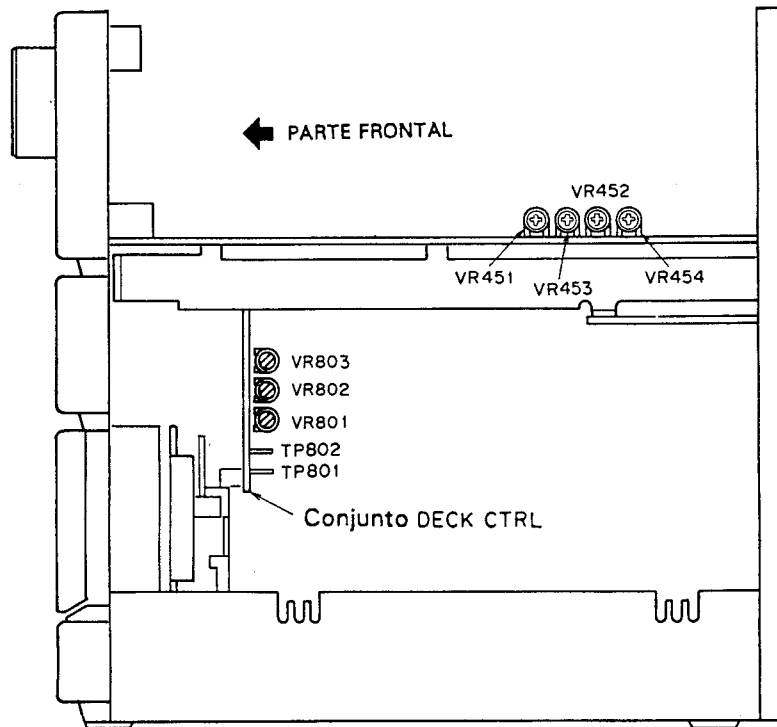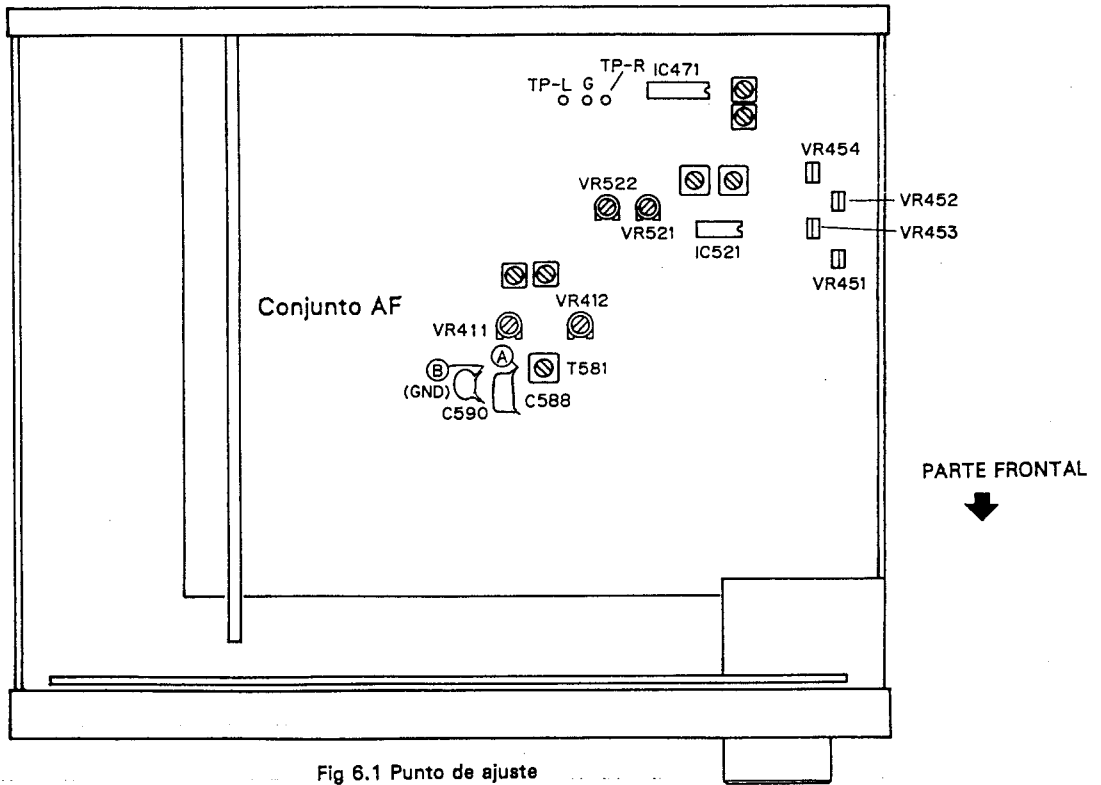

- El ajuste y la medición se realizarán normalmente en el conjunto AF, a menos que se especifique otra cosa.
- Desactive (FLAT) el ecualizador gráfico. Dependiendo del país de destino, el aparato puede estar provisto de un control de volumen de mezcla microfónica (MIC).  
Se está provisto de un control de volumen de mezcla microfónica (MIC), ajústelo a la posición MIN.
- La función deberá estar ajustada siempre a "TAPE", a menos que se especifique otra cosa.

**Ajuste del sistema mecánico**

- Cinta de prueba: STD-301 (3 kHz, 30 min)
- Ajuste del modo de velocidad doble: Cortocircuite TP801 y TP802 del conjunto de control. Para desactivar el modo, abra el cortocircuito.

1. Ajuste de la velocidad de la cinta							
Nº	Modo	Señal de entrada/cinta de prueba	Punto de ajuste		Punto de medición	Valor de ajuste	Observaciones
1	PLAY	Reproducción de la cinta STDy301 a 3 kHz	Sección I	VR801 del conjunto DECK CTRL	TP-L (canal izquierdo)	Presione PLAY SW y ajuste la frecuencia a 3010 Hz $\pm$ 10 Hz. Cerciórese de que la fluctuación y el efecto de trémolo estén dentro de los límites del 0,2%.	
2	PLAY (Modo de velocidad doble)			—		Presione PLAY SW en el modo de velocidad doble y compruebe si la frecuencia es 6000 Hz $\pm$ 1000 Hz. Anote el valor.	Después del ajuste, desactive el modo de velocidad doble.
3	PLAY (Modo de velocidad doble)		Sección II	VR803 del conjunto DECK CTRL	TP-R (canal derecho)	Presione PLAY SW en el modo de velocidad doble y ajuste la frecuencia de forma que quede a $\pm$ 30 Hz del valor anotado en el paso N°2.	Después del ajuste, desactive el modo de velocidad doble.
4	PLAY			VR802 del conjunto DECK CTRL		Presione PLAY SW y ajuste la frecuencia a 3010 Hz $\pm$ 10 Hz. Cerciórese de que la fluctuación y el efecto de trémolo estén dentro de los límites del 0,2%.	

**Ajuste del sistema eléctrico**

■ Antes de ajustar el sistema eléctrico, compruebe y realice lo siguiente.

1. El ajuste de la velocidad de la cinta ha finalizado.
2. Limpie y desmagnetice la cabeza empleando un desmagnetizador de cabezas.
3. Cuando se mida, el nivel de nivel debe ser de 0 dBV = 1V rms.
4. Emplee el lado A de la cinta especificada para realizar el ajuste.  
STD-331B: Para ajuste del sistema de reproducción.  
STD-630: Cinta en blanco NORMAL  
STD-620: Cinta en blanco de CrO2  
SRD-610: Cinta en blanco de METAL
5. Prepare los dispositivos de medición siguientes:  
Milivoltímetro de AC, oscilador de baja frecuencia, atenuador, y osciloscopio
6. Ajuste ambos canales, izquierdo y derecho, a menos que se especifique otra cosa.
7. Ponga los interruptores DOLBY NR en OFF, a menos que se especifique otra cosa.

8. Antes del ajuste, deje que la unidad se caliente durante varios minutos.  
Especialmente antes de ajustar las características de frecuencia de grabación y reproducción, deje que se caliente durante 3 a 5 minutos en el modo REC/PLAY.
9. Cerciórese de seguir el orden apropiado del procedimiento de ajuste. Cualquier cambio en el orden podría causar un resultado imperfecto.

**Lista de ajuste**

**Sección I**

1. Azimut de la cabeza
2. Nivel de reproducción

**Sección II**

1. Azimut de la cabeza
2. Nivel de reproducción
3. Características de frecuencia de grabación/reproducción
4. Nivel de grabación

**Comprobación de la secciones I y II**

1. Cerciórese de que ALC esté funcionando adecuadamente.

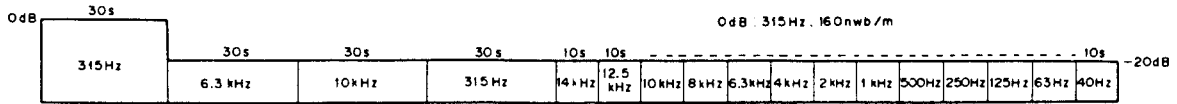


Fig. 6.3 Cinta de prueba STD-331B


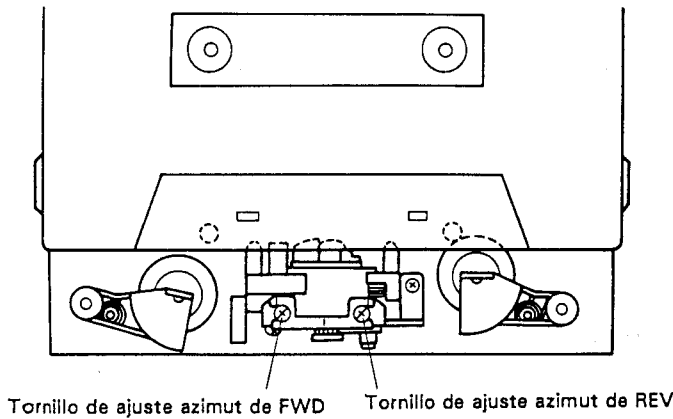


Fig. 6.4 Ajuste del azimut de la cabeza

REPRODUCCIÓN

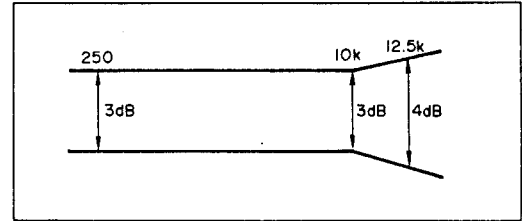

CRABACIÓN

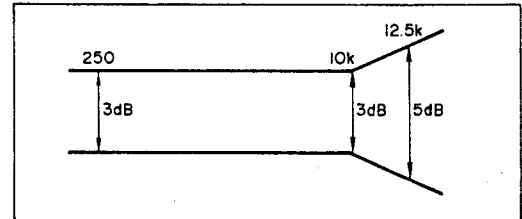


Fig. 6.5 Características de frecuencia

• Ajuste de la sección I

- La sección I dispone de un mecanismo selector automático de cinta.
- Nota: No cambie a FWD ni a REV mientras el destornillador esté insertado.

1. Ajuste azimutal de la cabeza

Procedimiento	Selector de cinta	Modo	Señal de entrada / cinta de prueba	Punto de ajuste	Punto de medición	Valor de ajuste	Observaciones
1	NORM	PLAY	Ponga la cinta de prueba STD-331B en reproducción (10 kHz, -20 dB).	Tornillo de ajuste azimutal de la cabeza (Fig. 6-4)	TP-L (canal izquierdo) TP-R (canal derecho)	Nivel máximo de la señal de reproducción	Bloquee el tornillo con bloqueador de tornillos después de haber terminado el ajuste.

2. Ajuste del nivel de reproducción

- Tenga mucho cuidado durante el ajuste, ya que el valor ajustado será el nivel Dolby fijado para reproducción.

Procedimiento	Selector de cinta	Modo	Señal de entrada / cinta de prueba	Punto de ajuste	Punto de medición	Valor de ajuste	Observaciones
1	NORM	PLAY	Ponga la cinta de prueba STD-331B en reproducción (315 Hz, 0 dB).	VR453 (canal izquierdo) VR454 (canal derecho)	TP-L (canal izquierdo) TP-R (canal derecho)	-6,7 dBV	

## • Ajuste de la sección II

- La sección II dispone de un mecanismo selector automático de cinta.
- Nota: No cambie a FWD ni a REV mientras el destornillador esté insertado.

### 1. Ajuste azimutal de la cabeza

Procedimiento	Selector de cinta	Modo	Señal de entrada / cinta de prueba	Punto de ajuste	Punto de medición	Valor de ajuste	Observaciones
1	NORM	PLAY	Ponga la cinta de prueba STD-331B en reproducción (10 kHz, -20 dB).	Tornillo de ajuste azimutal de la cabeza (Fig. 6-4)	TP-L (canal izquierdo) TP-R (canal derecho)	Nivel máximo de la señal de reproducción	Bloquee el tornillo con bloqueador de tornillos después de haber terminado el ajuste.

### 2. Ajuste del nivel de reproducción

- Tenga mucho cuidado durante el ajuste, ya que el valor ajustado será el nivel Dolby fijado para reproducción.

Procedimiento	Selector de cinta	Modo	Señal de entrada / cinta de prueba	Punto de ajuste	Punto de medición	Valor de ajuste	Observaciones
1	NORM	PLAY	Ponga la cinta de prueba STD-331B en reproducción (315 Hz, 0 dB).	VR451 (canal izquierdo) VR452 (canal derecho)	TP-L (canal izquierdo) TP-R (canal derecho)	-6,7 dBV	

### 3. Ajuste de las características de frecuencia de grabación/reproducción

- Como este procedimiento es para el ajuste de la polarización de grabación, tenga cuidado de no aumentar el valor de distorsión mediante el subajuste de la polarización.

Procedimiento	Selector de cinta	Modo	Señal de entrada / cinta de prueba	Punto de ajuste	Punto de medición	Valor de ajuste	Observaciones
1	NORM	REC	Cargue la cinta de prueba STD-630 y establezca el modo de grabación.	—	Área entre ① y ② (conjunto de A.F.) mostrada en la Fig. 6-1.	Confirme que la frecuencia de oscilación sea de 105 kHz $\pm$ 1 kHz.	Si el valor de ajuste no puede establecerse dentro de la especificación, ajuste T1401 del conjunto de REC.
2	NORM	REC	Aplique una señal de 315 Hz al terminal de entrada CD y ajuste la función a "CD".	Nivel de la señal de entrada	TP-L (canal izquierdo) TP-R (canal derecho)	-27,7 dBV	
3	NORM	REC / PLAY	Grabe y reproduzca la cinta de prueba STD-630 (315 Hz y 10 kHz).	VR411 (canal izquierdo) VR412 (canal derecho)	TP-L (canal izquierdo) TP-R (canal derecho)	Repita la corrección de forma que el nivel de reproducción de 10 kHz sea de 0 $\pm$ 0,5 dB en relación con 315 Hz.	

### 4. Ajuste del nivel de grabación

Procedimiento	Selector de cinta	Modo	Señal de entrada / cinta de prueba	Punto de ajuste	Punto de medición	Valor de ajuste	Observaciones
1	NORM	REC	Aplique una señal de 315 Hz al terminal de entrada CD y ajuste la función a "CD".	Nivel de la señal de entrada	TP-L (canal izquierdo) TP-R (canal derecho)	-7,7 dBV	
2	NORM	REC / PLAY	Grabe y reproduzca la cinta de prueba de forma que el nivel de reproducción de 315 Hz sea de -6,7 dBV.	VR521 (canal izquierdo) VR522 (canal derecho)	TP-L (canal izquierdo) TP-R (canal derecho)	Grabe y reproduzca la cinta de prueba de forma que el nivel de reproducción de 315 Hz sea de -6,7 dBV.	

• Procedimiento de comprobación para la secciones II

1. Acción del ALC

Procedimiento	Selector de cinta	Modo	Señal de entrada / cinta de prueba	Punto de ajuste	Punto de medición	Valor de ajuste	Observaciones
1	NORM	REC	Aplique una señal de 315 Hz al terminal de entrada CD y ajuste la función a "CD".	Nivel de la señal de entrada	TP-L (canal izquierdo) TP-R (canal derecho)	-7,7 dBV	
2				+10 dB contra el nivel de entrada del paso 1.		-2,7 dBV ±2,5 dB	

## 7. IC INFORMATION

### ● Terminal Function of PDE029-C (DECK & AMP control microcomputer)

Note: I: CMOS input, N: Nch open drain output,  
 O: CMOS output, UN: Nch open drain output with pull-up MOS transistor

No.	Terminal name	I/O	Function	Active																						
1	S1 (DATA1)	N	Used for sending/receiving of DATA with microcomputer of TUNER.	H/L																						
2	S0 (DATA2)	O		H/L																						
3	$\overline{SC}$	O		H/L																						
4	SREQ	O	Not used.	—																						
5	FADER (LED)	O	Not used.	—																						
6	1 BIAS	O	Not used.	—																						
7	2 BIAS	O	Oscillates BIAS only during REC mechanism 2.	H																						
8		I	Not used.	—																						
9	$\overline{COPY}$	UN	According to the various statuses in the table below, the control of the IC471 (for DOLBY NR) and for the switching inputs of the REC AMP are depicted as follows.  DOLBY NR IC: IC471, HA12136 REC AMP Input Selector: IC521, TC4066BP	H/L																						
10	Dolby P/R	UN		<table border="1"> <thead> <tr> <th>FUNCTION</th> <th>REC MODE</th> <th>COPY (Pin 9)</th> <th>DOLBY P/R (Pin 10)</th> </tr> </thead> <tbody> <tr> <td rowspan="2">TAPE</td> <td>REC not operated.</td> <td>L</td> <td>L</td> </tr> <tr> <td>REC is operating.</td> <td>H</td> <td>L</td> </tr> <tr> <td rowspan="2">Except TAPE</td> <td>REC not operated.</td> <td>L</td> <td>L</td> </tr> <tr> <td>REC is operating.</td> <td>L</td> <td>H</td> </tr> <tr> <td colspan="2">COPY is operating (spin normal speed and double speed).</td> <td>L</td> <td>L</td> </tr> </tbody> </table>	FUNCTION	REC MODE	COPY (Pin 9)	DOLBY P/R (Pin 10)	TAPE	REC not operated.	L	L	REC is operating.	H	L	Except TAPE	REC not operated.	L	L	REC is operating.	L	H	COPY is operating (spin normal speed and double speed).		L	L
FUNCTION	REC MODE	COPY (Pin 9)	DOLBY P/R (Pin 10)																							
TAPE	REC not operated.	L	L																							
	REC is operating.	H	L																							
Except TAPE	REC not operated.	L	L																							
	REC is operating.	L	H																							
COPY is operating (spin normal speed and double speed).		L	L																							
11	$\overline{PB1/2}$	UN	Control switching of playback mechanism (L: mechanism 1).	H/L																						
12	2.REC MUTE	UN	Sets to L only while mechanism 2 is in REC mode.	H																						
13	MS. PULSE	N	Not used.	—																						
14	1.REC MUTE	UN	Not used.	—																						
15	FADER	UN	Not used	—																						
16	PB. MUTE	UN	Turns OFF only during DECK playback mode.	H																						
17	1PULSE	N	Detects hall device pulse of mechanism 1.	H/L																						
18	2PULSE	N	Detects hall device pulse of mechanism 2.	H/L																						
19	$\overline{HI/NORM}$	N	Controls TAPE SPEED (H: double speed).	H/L																						
20	POW. RY	O	Becomes "H" when POWER is turned ON.	H																						
21	$\overline{1\_MOTOR}$	N	Controls the motor of mechanism 1. (L: MOTOR rotates).	L																						
22	$\overline{P.ASES}$	N	Not used.	—																						

No.	Terminal name	I/O	Function	Active	
23	1. ●	N	Not used.	—	
24	2. MOTOR	N	Controls the motor of mechanism 2. (L : MOTOR rotates).	L	
25	DIGI ON/OFF	O	Not used.	—	
26	SP.RY	O	Controls SP RELAY(RY351) Operates MUTE for 5seconds after POWER is turned ON. Turns SP RELAY OFF immediately after POWER is turned OFF.	L	
27	V-UP	O	Controls TA7291S and UP/DOWN of the MOTOR VOLUME.	V-UP (Pin 27)	H
28	V-DOWN	O		V-DOWN (Pin 28)	H
29	L-MUTE	O	Operates MUTE for 0.5seconds when FUNCTION is switched and DIRECT is ON/OFF. When POWER is ON, the SP RELAY is turned ON, and it takes 0.3seconds until the output signal of VOLUME(VR391) functions for muting.	H	
30	TEST	—	Not used (GND).	—	
31	Vss	—	GND.	—	
32	OSC1	—	Connects 4.19MHz ceramic resonator.	—	
33	OSC2	—		—	
34	RES	—	RESET terminal.	L	
35	A	O	Transfer DATA of 3bit to the 74LS42P and uses as KEYSKAN OUT K00-K06.	L/H	
36	B	O		L/H	
37	C	O		L/H	
38	1. ► (LED)	N	Controls the FWD PLAY LED of mechanism 1.	L	
39	1. ◀ (LED)	N	Controls the REV PLAY LED of mechanism 1.	L	
40	2. ► (LED)	N	Controls the FWD PLAY LED of mechanism 2.	L	
41	2. ◀ (LED)	N	Controls the REV PLAY LED of mechanism 2.	L	
42	2. ● (LED)	N	Control the REC LED of mechanism 2.	L	
43	ASES(LED)	N	Controls the ASES LED.	L	
44	R.REC(LED)	N	Not used.	—	
45	R.ASES (LED)	N	Not used.	—	
46	SOL2B	O	Controls the solenoid for FF/REW of mechanism 2.	H	
47	SOL2A	O	Controls the solenoid for PLAY of mechanism 2.	H	
48	SOL1B	O	Controls the solenoid for FF/REW of mechanism 1.	H	
49	SOL1A	O	Controls the solenoid for PLAY of mechanism 1.	H	

No.	Terminal name	I/O	Function	Active
50   55	K10   K15	I	KEY matrix input.	H/L
56	K16	N		
57	K17			
58	SURROUND	UN	Controls SURROUND ON/OFF (for SD type only).	H
59	DIRECT	UN	Controls DIRECT ON/OFF.	—
60	F-MUTE	UN	Operates MUTE for 0.5seconds when FUNCTION is switched. When POWER is ON after SP RELAY(RY351) is activated (ON), MUTE is operated for 0.3seconds.	H
61	INH	UN	Switches FUNCTION.	H/L
62	B	UN		H/L
63	A	UN		H/L
64	VDD	—	+5V	—



## 8. FOR HE TYPE

### 8.1 CONTRAST OF MISCELLANEOUS PARTS

**NOTES:**

- Parts without part number cannot be supplied.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

The DC-Z72/HE type is the same as the DC-Z72/HB type with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		DC-Z72/HB type	DC-Z72/HE type	
	POWER SUPPLY assembly	AWZ2241	AWZ2239	
	CONNECT assembly	Non supply	Non supply	
$\Delta$	FU2001, FU2004, FU2005 Fuse(T1 . 25A/250V)	AEK-509	.....	
$\Delta$	FU2001, FU2004, FU2005 Fuse(T1 . 25A/250V)	.....	AEK-018	
$\Delta$	FU2003 Fuse(T800mA/250V)	AEK-507	AEK-031	
$\Delta$	AC Power cord	ADG-063	ADG-1021	
	Operating instruction(English)	ARB1154	.....	
	Operating instruction(English, German, French, Italian, Dutch, Swedish, Spanish, Portuguese)	.....	ARE1111	
	Operating instruction(German)	.....	ARC1129	

### 8.2 POWER SUPPLY assembly(AWZ2239;HE TYPE)



The POWER SUPPLY assembly(AWZ2239;HE TYPE) is the same as the POWER SUPPLY assembly(AWZ2241;HB TYPE) With the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		AWZ2241;HB type	AWZ2239;HE type	
$\Delta$	AC socket(OUTLET)	AKP1035	AKP1034	

### 8.3 CONNECT assembly(HE TYPE)

The difference in parts between the CONNECT assemblies HB type and HE type is only the jumper wire.

8.4 SCHEMATIC AND P.C.BOARDS DIAGRAM

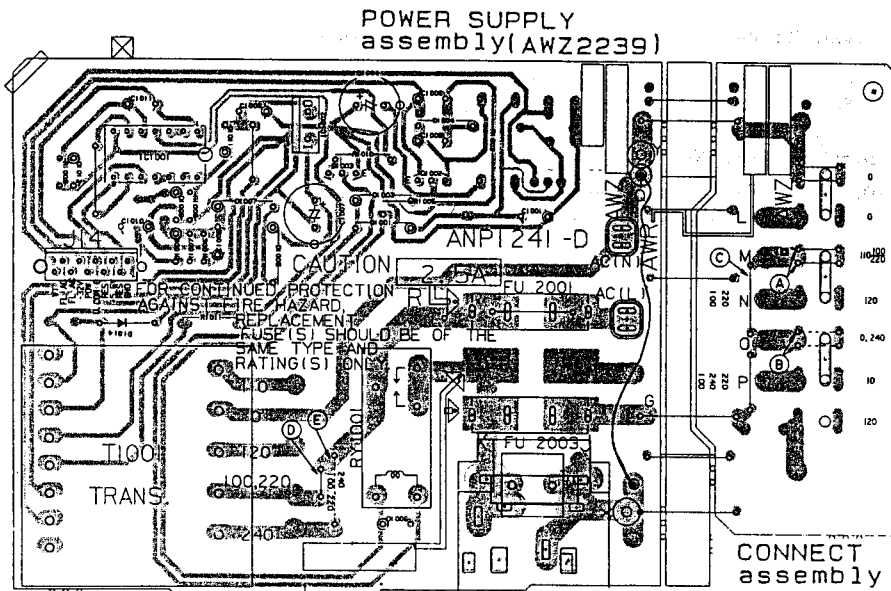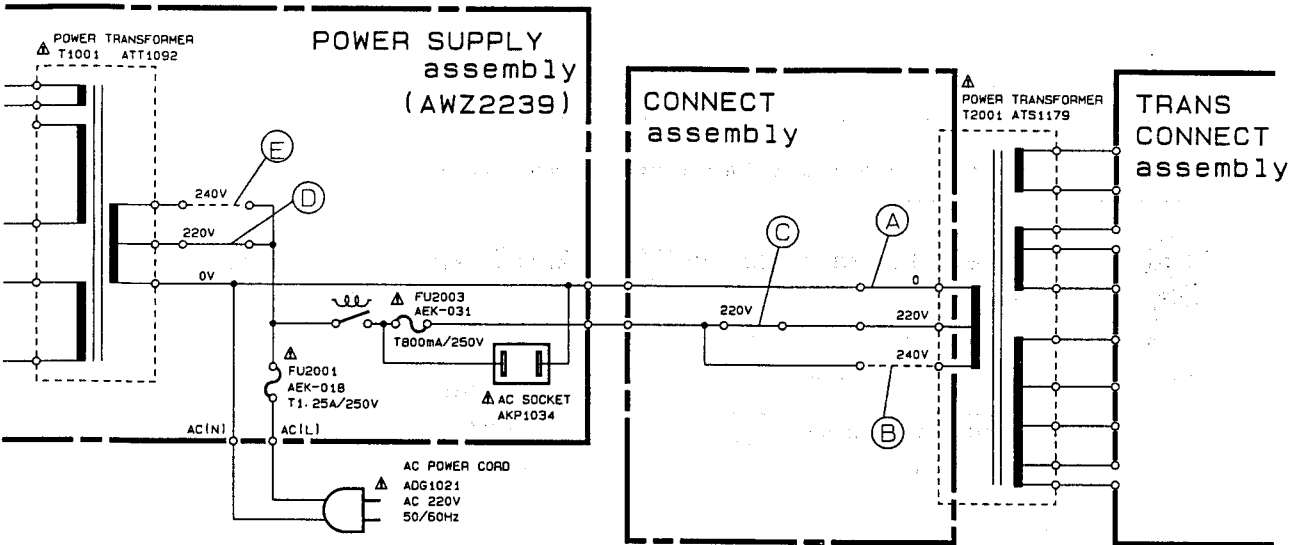

Line Voltage Selection (FOR HB AND HE TYPES)

Line voltage can be changed with the following steps.

1. Disconnect the AC power cord.
2. Remove the top cover.
3. Change the position of the jumper wires (A)-(E) as follows.


4. Stick the line voltage label on the rear panel.

Jumper wire	220V	240V
(A)	○	×
(B)	×	○
(C)	○	×
(D)	○	×
(E)	×	○

○: Be needed  
 ×: Be needless

Part No.	Description
AAX-193	220V label
AAX-192	240V label

# 9. CONNECTIONS

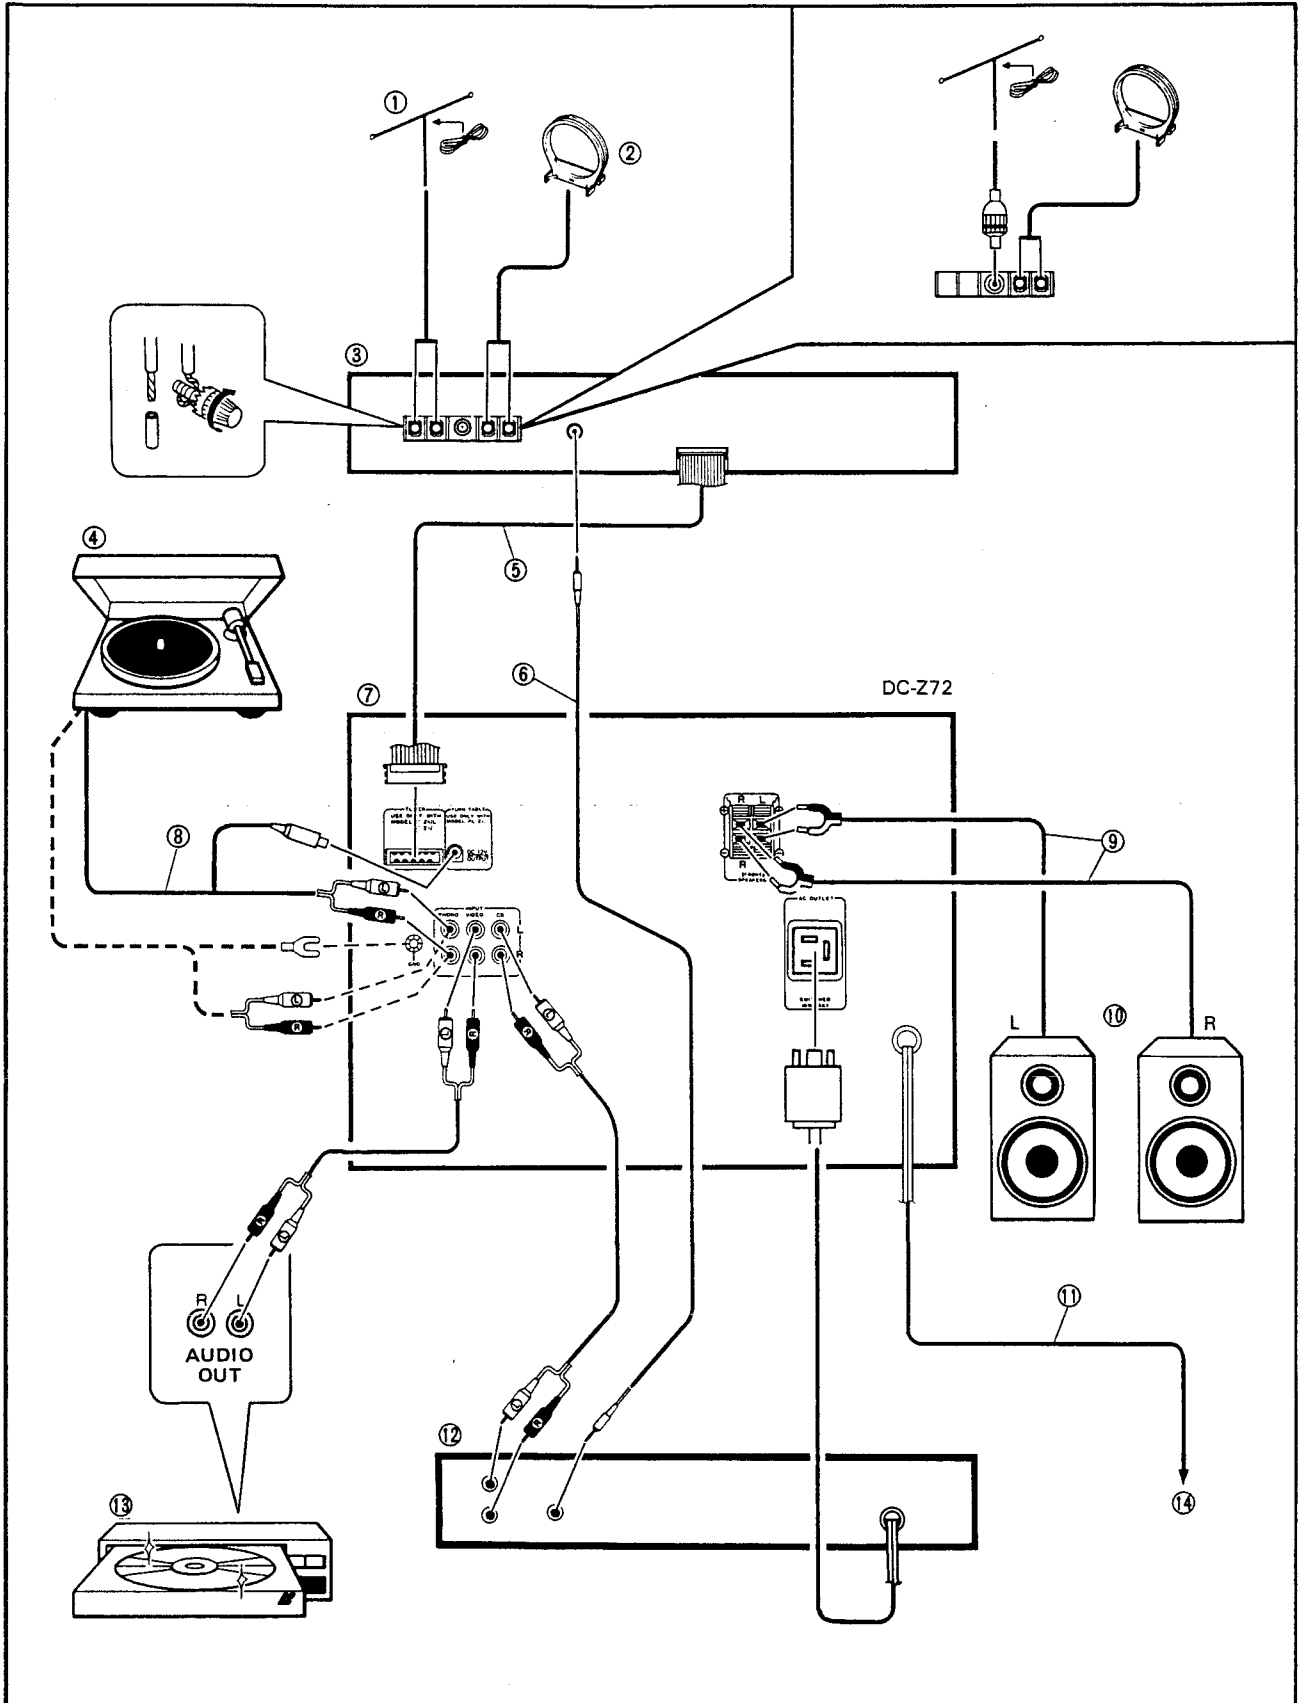

Refer to page 73 for the connections diagram.

- ① Accessory FM antenna
- ② Accessory AM loop antenna
- ③ FM/AM tuner (F-Z92 or F-Z92L)
- ④ Turntable (Separately sold PL-Z82 or PL-Z92)
- ⑤ Tuner input/output cord
- ⑥ CD player control cord
- ⑦ Cassette tape deck amplifier
- ⑧ Turntable output cord
- ⑨ Speakers cord
- ⑩ Speaker system
- ⑪ Power cord
- ⑫ CD player (Separately sold PD-Z72T or PD-Z82M)
- ⑬ LD player or video cassette recorder (VCR)
- ⑭ AC wall socket

Plug the power cord into the AC wall socket outlet only after all the connections have been completed.

If the FM antenna of the FM/AM tuner terminal is a PAL connector only, then refer to connection diagram B.

**Proceed as follows with the set-up and connections:**

1. Place the cassette tape deck amplifier on top of the CD player.
2. Connect the CD player OUTPUT jacks to the cassette tape deck amplifier CD INPUT jacks with audio cords.
3. Place the tuner on top of the cassette tape deck amplifier.
4. Connect the tuner input/output cord ⑤ to cassette tape deck amplifier.

**TUNER CONNECTION**

Insert the connector until it locks, thus ensuring that it is connected. When disconnecting the connector, pull it in the opposite direction while pressing the left and right claws.

If using this unit together with the optional PD-Z72T or PD-Z82M, connect the control cord ⑥.


5. Connect the FM antenna ① and the AM loop antenna ② to the tuner antenna terminals.
6. Place the turntable on top of the tuner.
7. Connect the turntable cords ⑧ to the cassette tape deck amplifier jacks.  
If using this unit together with the optional PL-Z82 or PL-Z92, connect the turntable's audio cords and power supply cord respectively to the cassette tape deck amplifier's PHONO jacks and DC 12V OUTPUT jack.  
If using a different turntable, connect the audio cord and earth cord.
8. Use the "VIDEO" jacks for connection to the audio jacks of an LD player or VCR.

**NOTE:**

- Insert the plugs securely into the jacks. Improper connection can lead to sound distortion or malfunctioning.
- The white plug is for the left channel connection and the red plug for the right channel connection.

9. Connect the speaker cords ⑨ to the SPEAKERS terminals.  
Connect the "+" terminals on the cassette tape deck amplifier to the "+" terminals on the speakers, the "-" terminals on the cassette tape deck amplifier to the "-" terminals on the speakers.

**Connecting the speaker cords.**

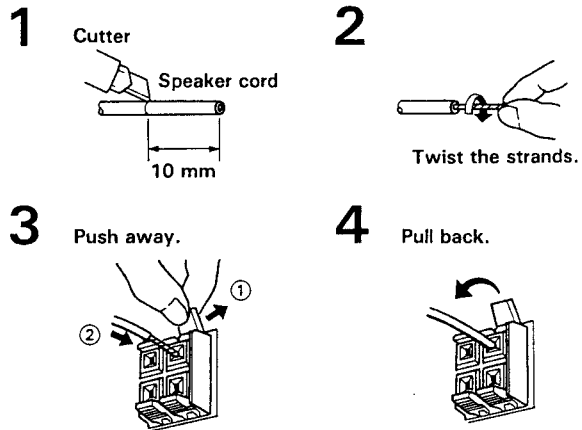

**NOTE:**

Do not allow the conductors of the cords to project beyond the terminals and to come into contact with other conductors. A breakdown or failure may occur when conductors touch one another.




**Speaker impedance**

Connect speaker systems with a nominal impedance ranging from 6 to 16 Ω.



10. Finally, connect the power cord ⑪ to the AC wall socket ⑭.

# 10. PANEL FACILITIES

DC-Z72

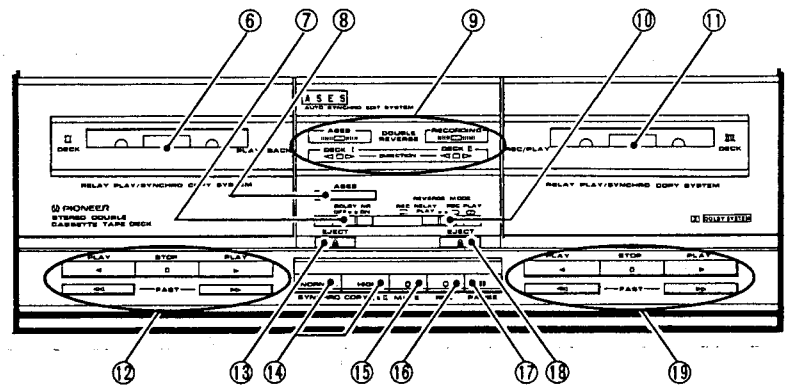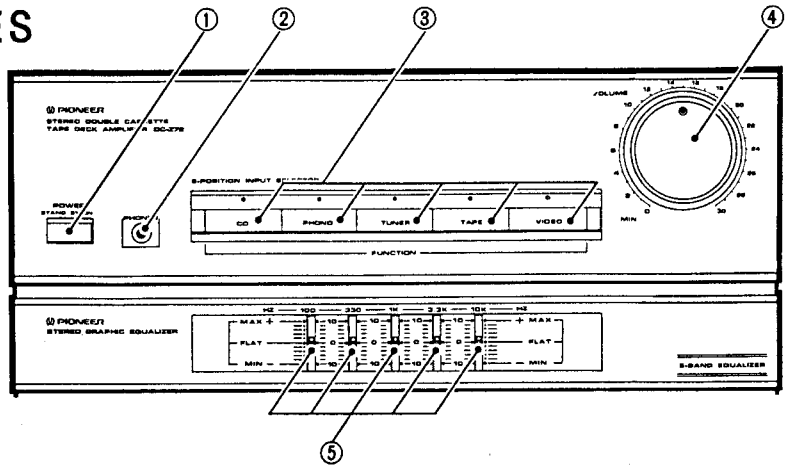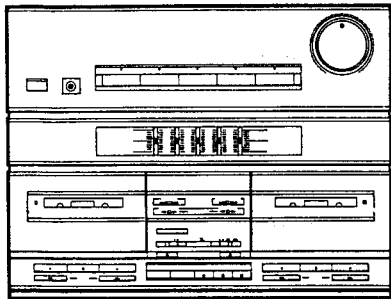

DC-Z72

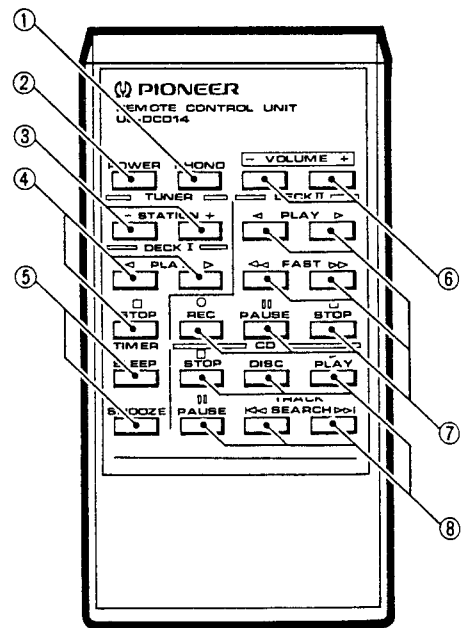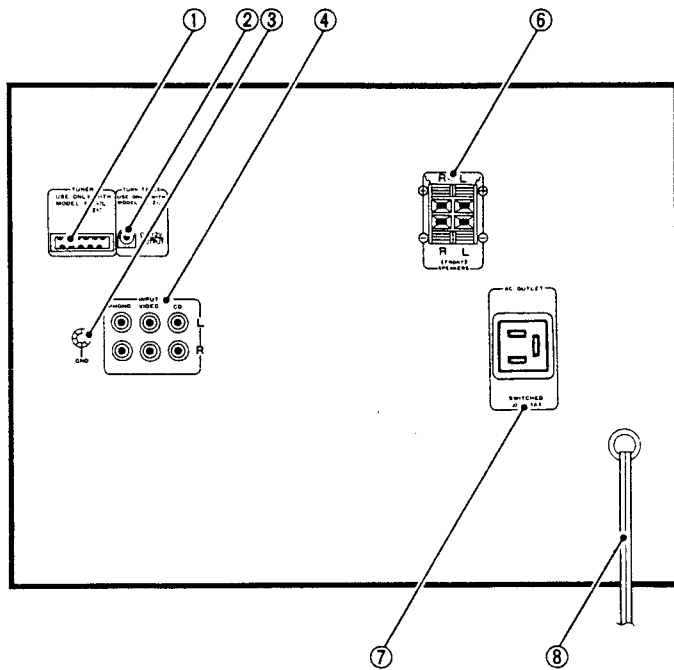

**REAR PANEL FACILITIES**

**Cassette tape deck amplifier: DC-Z72**

① **TUNER jacks**

Connect the F-Z92 (or F-Z92L) FM/AM tuner.

② **TURNTABLE OUTPUT jack**

This jack supplies power to the PL-Z82 or PL-Z92.

③ **Ground terminal (GND)**

Connect this to the ground terminal on the turntable (except for PL-Z92 and PL-Z82).

④ **INPUT jacks**

**PHONO:** Connect the audio output cord on the turntable to these jacks.

**VIDEO:** Connect to audio output jacks of LD player or VCR, etc.

**CD:** Connect to audio output jacks of CD player.

⑥ **SPEAKERS terminals**

**L:** Connect the left speaker system as seen from the listening position.

**R:** Connect the right speaker system as seen from the listening position.

**NOTE:**

Connect a speaker system having a nominal impedance ranging from 6 Ω to 16 Ω.

⑦ **AC OUTLET (SWITCHED 100 W MAX)**

Power supplied through these outlets is turned on and off by the cassette tape deck amplifier's POWER switch. Total electrical power consumption of connected equipment should not exceed 100 W.

**NOTE:**

Do not connect appliances with high power consumption such as heaters, irons, or television sets to the AC OUTLET in order to avoid overheating or fire risk.

This can cause the cassette tape deck amplifier to malfunction.

⑧ **Power cord**

Connect this to the AC wall socket.

**FRONT PANEL FACILITIES**

**Cassette tape deck amplifier: DC-Z72**

- Tapes can be played back on deck I; tapes can be played back and recorded on deck II.
- Sound can be recorded as adjusted by the graphic equalizer.

■ **Amplifier/Graphic equalizer section**

① **POWER STANDBY/ON switch**

When this switch is set to the on position, power is supplied to the cassette tape deck amplifier's main circuit. The POWER unit's switch is geared to selecting the transformer's secondary so that even in STANDBY position, the unit's circuitry will work as long as the power cord is connected to a power outlet. Disconnect the power cord from the power outlet when you do not plan to use the unit for a long period of time.

The unit is in STANDBY when the tuner section display indicates only the time.

② **Headphone jack (PHONES)**

For stereo headphone plug.

③ **FUNCTION switches/indicators**

[CD]

Press to listen to a CD player connected to the CD jacks.

[PHONO]

Press to play records on a turntable connected to the PHONO jacks.

[TUNER]

Press to listen to a radio broadcast.

[TAPE]

Press to listen to a cassette tape.

[VIDEO]

Press to listen to a stereo component connected to the VIDEO jacks.

④ **VOLUME control**

⑤ **Graphic equalizer controls**

Fine adjustments in sound quality are possible using the 5 controls on the graphic equalizer. These let you simultaneously adjust the tonal quality the left and right channels.

■ **Cassette Tape Deck Section**

⑥ **Deck I cassette door**


⑦ **DOLBY\* NR switch**

Set this switch to the ON position to activate the DOLBY NR system.

- Tapes recorded using Dolby noise reduction should always be played back with the noise reduction system on. Sound quality will be adversely affected if they are played back with the system off, or if tapes recorded using a different noise reduction system are played back with the Dolby NR system on.

- It is recommended that tapes recorded using Dolby B NR be so marked on the label. This will help to prevent incorrect setting of the noise reduction switch during playback.

---

\*  
Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

---

⑧ **ASES switch**

Use to automatically record a CD on cassette tape.

⑨ **Operation indicators**

**ASES:** Lights when the ASES (Auto Synchro Editing System) is operating.




**RECORDING:** Lights when recording. Flashes when copying a tape.

Slow flashing = Normal copy

Rapid flashing = High speed copy

**Direction (◀ ▶):** Show direction of tape travel.

⑩ REVERSE MODE switch

Switch position	During playback	During recording
REC RELAY  PLAY	Plays both tape sides. When one deck finishes playback, the other side begins playback of both tape sides (6 times maximum). If there is a tape in only one deck, then that deck continuously plays both sides of the tape (6 times maximum).	Records on one side (Deck II only).
REC PLAY  	Plays both sides continuously (6 times maximum).	Records on both sides (Deck II only).

⑪ Deck II cassette door

⑫ Deck I Operation switches

- ▶ PLAY (FWD)..... For playing back a tape in the forward mode.
- ◀ PLAY (REV)..... For playing back a tape in the reverse mode.
- STOP..... For stopping the tape.
- ▶▶ FAST ..... Fast forward in forward mode, rewind in reverse mode.
- ◀◀ FAST ..... Rewind in forward mode, fast forward in reverse mode.


⑬ Deck I EJECT switch

⑭ SYNCHRO COPY switches

Use for tape copying.

**NORMAL:** Copying from the Deck I tape to the Deck II tape at normal recording/playback speed.


**HIGH:** Copying at about twice normal tape speed. (Copies can be made in about half the NORMAL time.)

⑮ MUTE (  ) switch (Deck II)

Use to create an unrecorded blank space between songs. The unrecorded space will be created for as long as this switch is kept depressed during recording.

⑯ REC (  ) switch (Deck II)

Set to recording standby mode. Recording will then begin when you press the PLAY switch ( ◀ or ▶ ).

⑰ PAUSE (  ) switch (Deck II)

Temporarily stops tape travel. Cancels pause mode when pressed again.

⑱ Deck II EJECT switch

⑲ Deck II Operation switches

- ▶ PLAY (FWD)..... For playing back a tape in the forward mode.
- ◀ PLAY (REV)..... For playing back a tape in the reverse mode.
- STOP..... For stopping the tape.
- ▶▶ FAST ..... Fast forward in forward mode, rewind in reverse mode.
- ◀◀ FAST ..... Rewind in forward mode, fast forward in reverse mode.

Remote control unit

① PHONO key

Sets function to PHONO.

② POWER key

③ TUNER STATION keys

• Before operation, memorize broadcast stations in the STATION CALL switches.

- + ..... Stations change in order in the upward direction.
- ..... Stations change in order in the downward direction.


④ Deck I operation keys

- ▶ ..... Forward play
- ◀ ..... Reverse play
- ..... Stop

⑤ Timer operation keys

**SLEEP:** Sets the sleep timer. Each time you press this key, the setting changes as shown here. The current setting is shown on the tuner display.

Power turns off when your set time has elapsed.

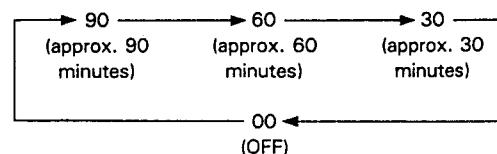

If you press the SLEEP key during SLEEP operation, the display will show the time remaining till power turns off.

**SNOOZE:** Turns off power if pressed after timer playback begins. Timer playback begins again approx. 5 minutes later.

⑥ VOLUME UP (+)/DOWN (-) keys

⑦ Deck II operation keys

- ▶ ..... Forward play
- ◀ ..... Reverse play
- ▶▶ ..... Fast forward
- ◀◀ ..... Fast reverse
- ..... Stop
- || ..... Pause
- ..... REC (recording standby). Next, press the play key to begin recording.

⑧ CD operation keys

Make the connections so that the CD player can be operated by the remote control unit.

- ▶ ..... Play
- DISC ..... DISC selection
- ..... Stop
- || ..... Pause
- ◀▶, ▶▶, ◀◀ ..... Track search

NOTE:

Note that the DISC selector key on the accessory remote control unit may not function, depending on the CD player used.



The amplifier section function automatically switches to the music source being operated when you press the CD playback (▶), cassette tape deck playback (◀, ▶), or tuner station controls.

To operate with the remote control unit, use the keys with the same function indicating symbols (for example ▶) as those shown on the components.

**NOTE:**

*It is not possible to operate the CD player with the remote control unless the remote control cord is connected*

**Range of remote control**

When the remote control unit is pointed at the remote sensor window on the tuner and any of its keys is pressed, the tuner and other components can be operated by remote control.

Distance: Within a range of approx. 7 meters from the remote sensor window on the tuner.

Angle: Within approx. 30 degrees from the center of the remote sensor window on the tuner.

Remote control will not be possible if there is an obstacle between the remote control unit itself and the remote sensor window on the tuner.