


Service Manual

Pioneer

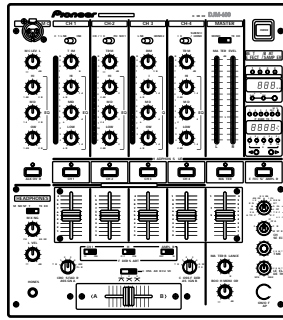

ORDER NO.
RRV2234

DJ MIXER

DJM-600

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	The voltage can be converted by the following method.
	DJM-600		
KUC	O	AC120V	—
RL	O	AC110- 120V/220-240V	With the voltage selector
WY	O	AC220 -240V	—

CONTENTS

1. SAFETY INFORMATION	2	7. GENERAL INFORMATION	65
2. EXPLODED VIEWS AND PARTS LIST	3	7.1 DIAGNOSIS	65
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	8	7.1.1 TEST MODE	65
4. PCB CONNECTION DIAGRAM	42	7.1.2 DISASSEMBLY	66
5. PCB PARTS LIST	58	7.2 PARTS	69
6. ADJUSTMENT	64	7.2.1 IC	69
		8. PANEL FACILITIES AND SPECIFICATIONS	70

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Allexandra Road, #04-01, Singapore 159936
 © PIONEER CORPORATION 1999

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.



WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65



NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

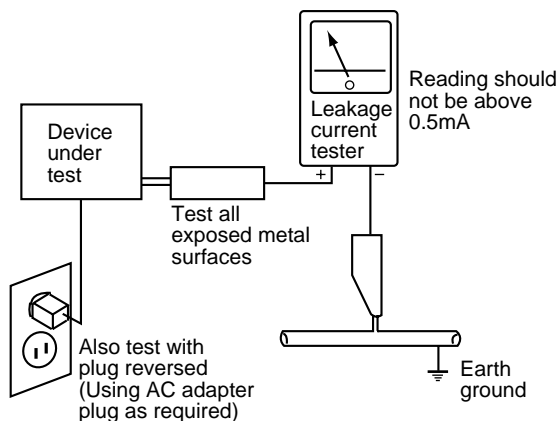

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.


The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to \blacktriangledown mark on the product are used for disassembly.

2.1 PACKING

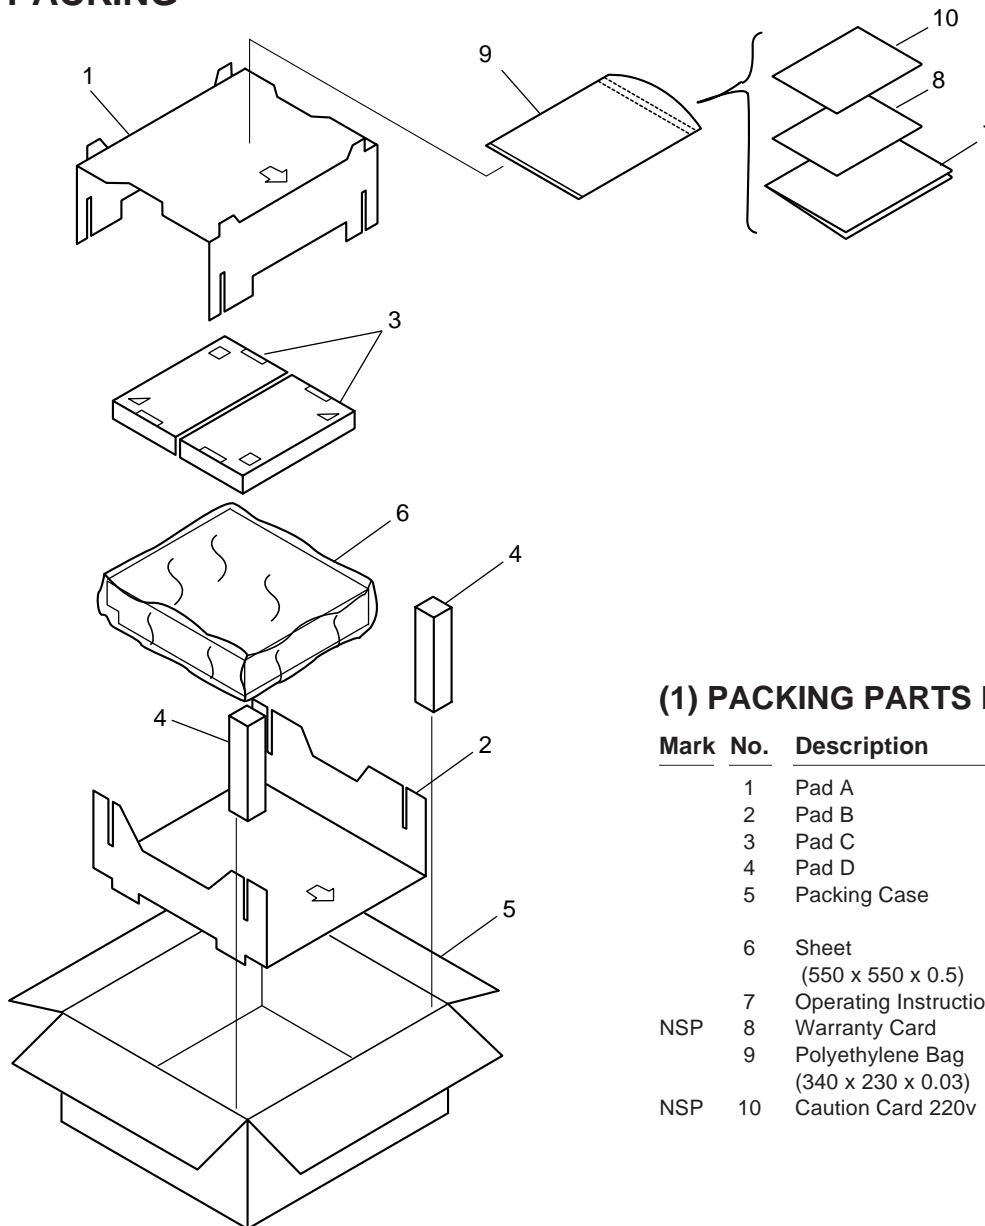

(1) PACKING PARTS LIST


Mark	No.	Description	Part No.
	1	Pad A	DHA1456
	2	Pad B	DHA1457
	3	Pad C	DHA1458
	4	Pad D	DHA1469
	5	Packing Case	See Contrast table (2)
	6	Sheet (550 x 550 x 0.5)	RHX1006
	7	Operating Instructions	See Contrast table (2)
NSP	8	Warranty Card	See Contrast table (2)
	9	Polyethylene Bag (340 x 230 x 0.03)	Z21-038
NSP	10	Caution Card 220v	See Contrast table (2)

(2) CONTRAST TABLE

DJM-600/KUC, RL and WY types are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			KUC type	RL type	WY type	
	5	Packing Case	DHG1964	DHG1965	DHG1959	
	7	Operating Instructions (English/ French)	DRB1251	Not used	Not used	
	7	Operating Instructions (English/ Spanish/Chinese)	Not used	DRB1253	Not used	
	7	Operating Instructions (English/ French/ German/Italian/Dutch/Spanish)	Not used	Not used	DRB1252	
NSP	8	Warranty Card	DRY1177	Not used	Not used	
NSP	10	Caution Card 220V	Not used	ARR7003	Not used	

2.2 EXTERIOR SECTION

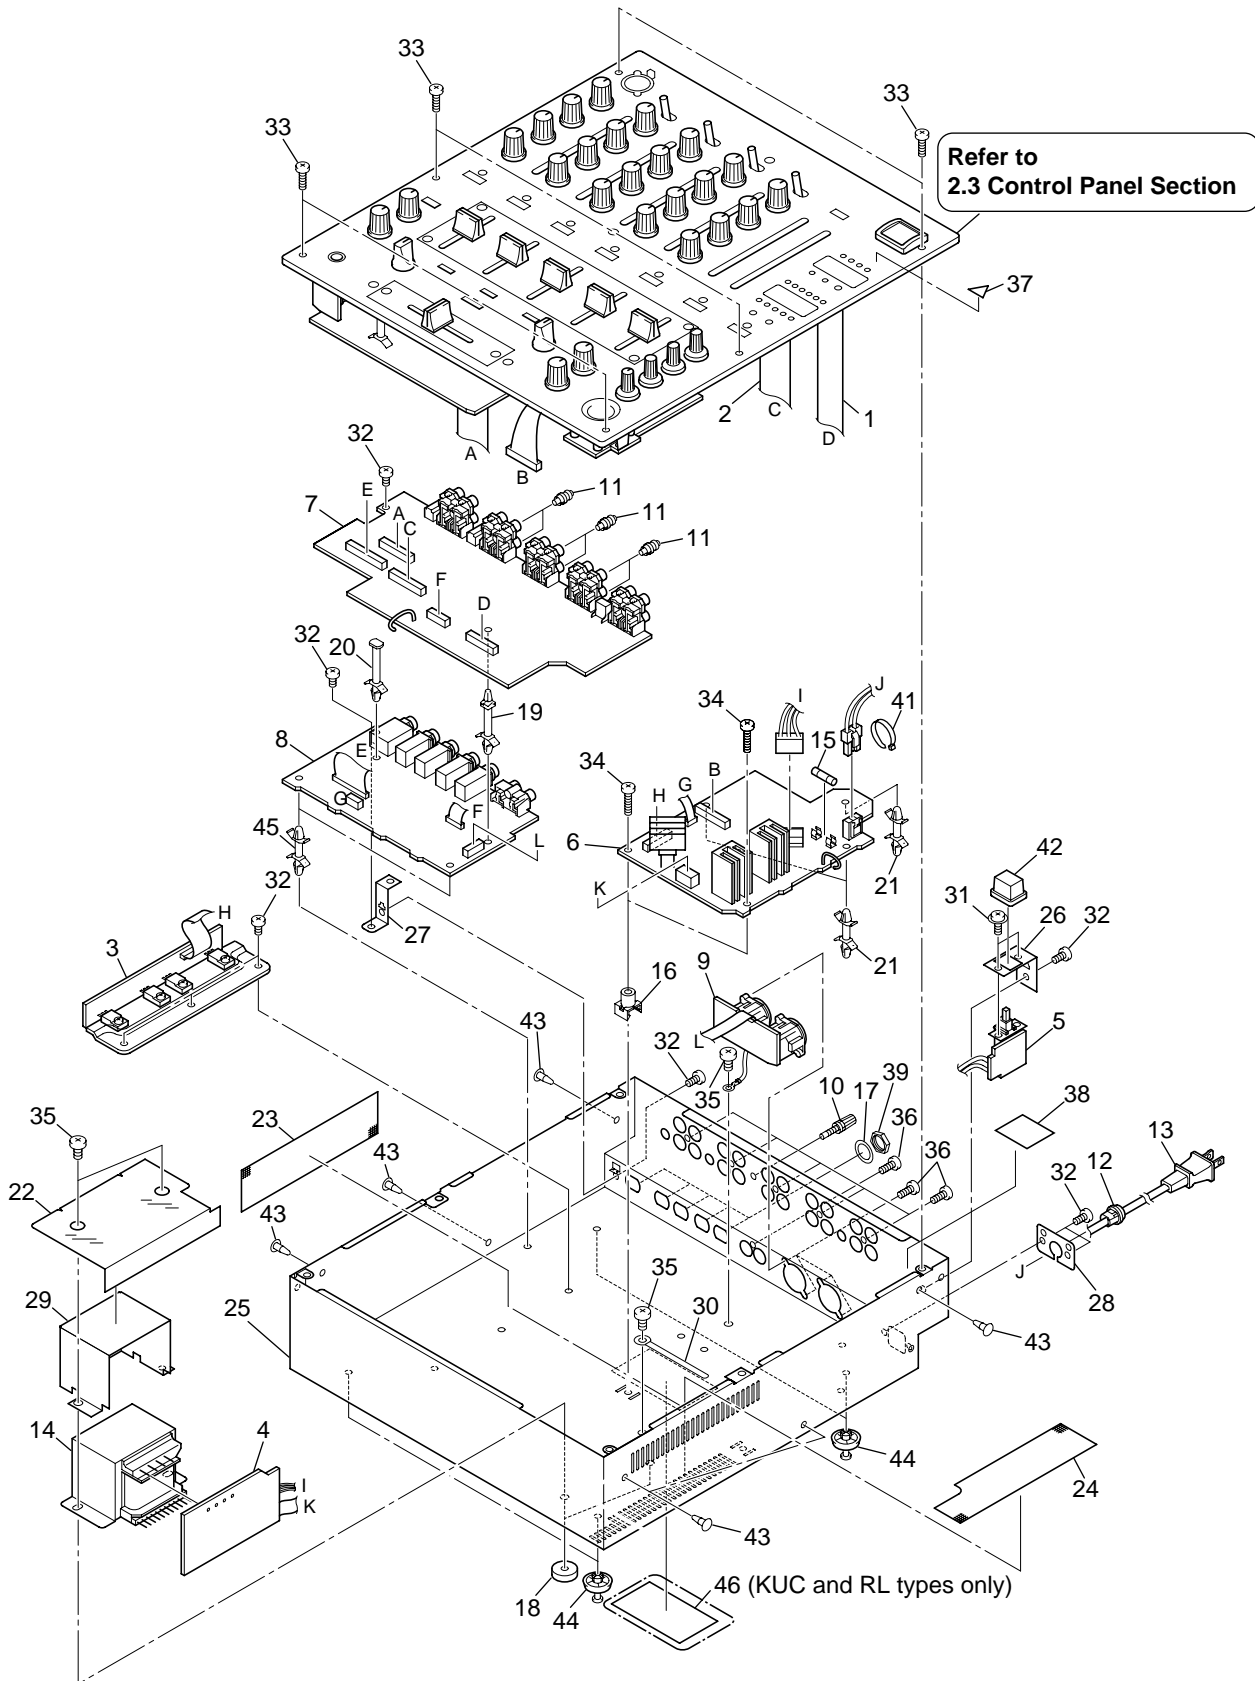

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	19P F.F.C/60V	DDD1155		31	Screw	AMZ30P040FMC
	2	23P F.F.C/60V	DDD1154		32	Screw	BBZ30P060FZK
NSP	3	REG. ASSY	DWR1334		33	Screw	BBZ30P100FZK
NSP	4	TRANS ASSY	DWR1335		34	Screw	BBZ30P180FMC
NSP	5	POWER SW ASSY	DWR1333		35	Screw	BBZ40P060FMC
	6	POWER ASSY	See Contrast table (2)		36	Screw	BPZ30P080FZK
	7	TERMINAL ASSY	DWZ1089	NSP	37	Caution Label	See Contrast table (2)
	8	PHONE ASSY	DWZ1090		38	SW Sheet	See Contrast table (2)
NSP	9	BAL.OUT ASSY	DWZ1091		39	Nut	NKX2FUC
	10	Terminal Screw	AKE-031		40	•••••	
	11	Short Pin Plug	AKM7008		41	Binder	ZCA-SKB90BK
△	12	Strain Relief	See Contrast table (2)		42	Power Knob	DAC1847
△	13	Power Cord With Plug	See Contrast table (2)	NSP	43	Binder	AEC-036
△	14	Power Transformer	See Contrast table (2)		44	Foot Assy	REC-434
△	15	Fuse (1A: FU2)	See Contrast table (2)	NSP	45	PC Support	VEC1508
NSP	16	PCB Mould	AMR1525		46	Label	See Contrast table (2)
	17	Washer	DBE1010				
	18	Screw Guard	DEB1447				
NSP	19	PCB Spacer	DEC1389				
NSP	20	Card Spacer	DEC1649				
	21	PC Support	DEC1773				
	22	Sheet	DEC2375				
	23	Net	DED1129				
	24	Net	DED1152				
NSP	25	Chassis	See Contrast table (2)				
	26	SW Plate	DNF1653				
	27	Earth Plate	DNF1520				
	28	Power Cord Stay	DNF1640				
	29	Trans Shield	DNH2279				
	30	Cord Clamper	RNH1005				

(2) CONTRAST TABLE

DJM-600/KUC, RL and WY types are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			KUC type	RL type	WY type	
	6	POWER ASSY	DWR1337	DWR1336	DWR1332	
△	12	Strain Relief	CM-22C	CM-22B	CM-22B	
△	13	Power Cord With Plug	ADG7024	VDG1061	VDG1061	
△	14	Power Transformer (AC120V)	DTT1158	Not used	Not used	
△	14	Power Transformer (AC110-120V/ 220-240V)	Not used	DTT1157	Not used	
△	14	Power Transformer (AC220-240V)	Not used	Not used	DTT1156	
△	15	Fuse (FU2: 1A)	REK1075	Not used	Not used	
△	15	Fuse (FU2: T500mA)	Not used	AEK1051	AEK1051	
	25	Chassis	DNA1258	DNA1259	DNA1256	
NSP	37	Caution Label	DRW1975	Not used	Not used	
	38	SW Sheet	Not used	DEC2384	Not used	
	46	Label	DRW1977	DRW1977	Not used	

2.3 CONTROL PANEL SECTION

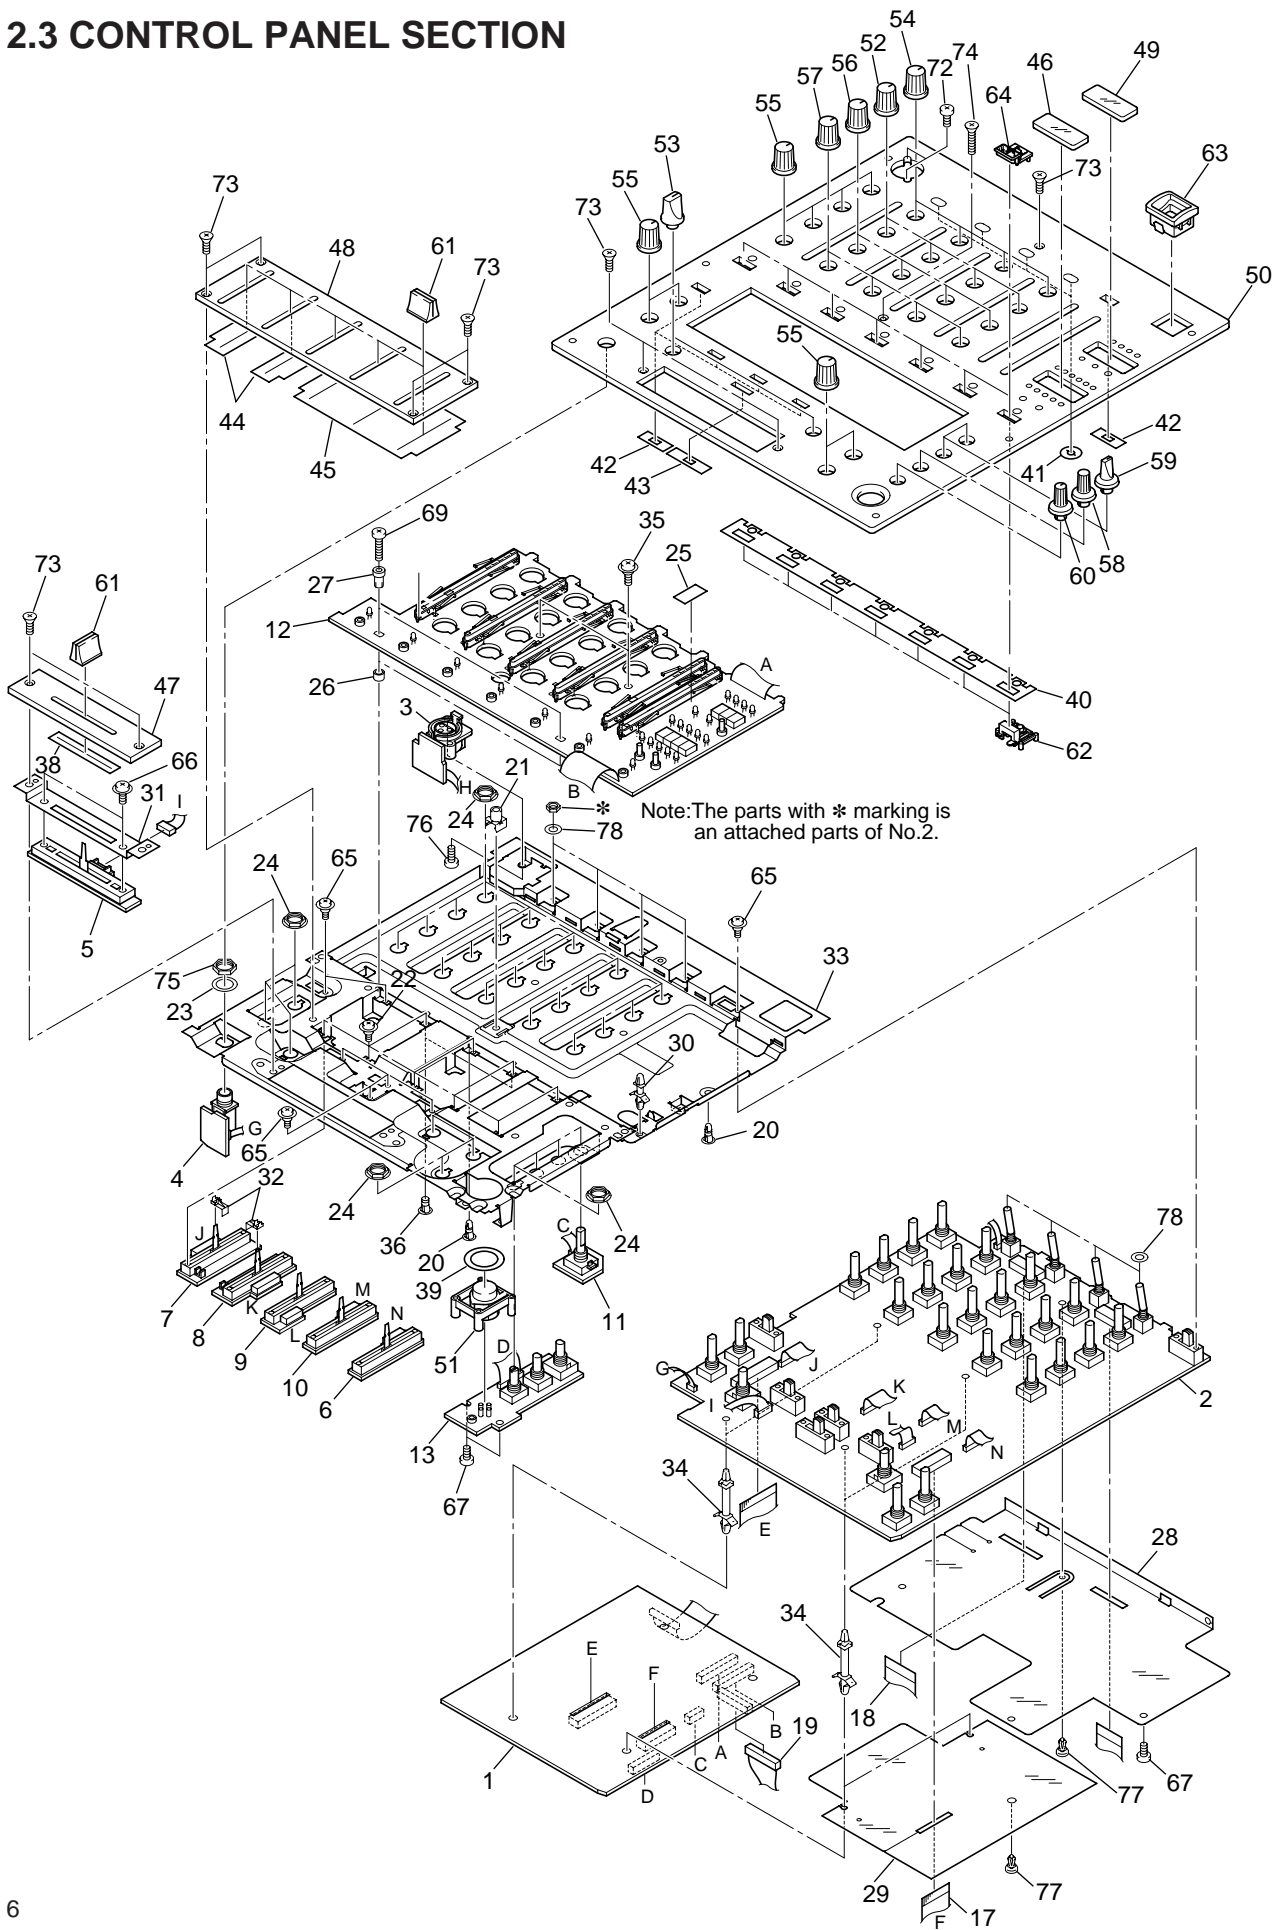

(1) CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	DSP ASSY	DWX1999	41	Lever SW Packing	DED1120	
	2	VR ASSY	DWG1517	42	Slide SW Packing B	DED1125	
	3	MIC JACK ASSY	DWZ1087	43	SW Packing A	DED1145	
	4	HP JACK ASSY	DWZ1088	44	Fader Packing A	DED1146	
	5	C.F ASSY	DWG1519	45	Fader Packing C	DED1147	
	6	FADER VR (MAIN) ASSY	DWG1520	46	Display Panel B	DAH1796	
	7	FADER VR (CH1) ASSY	DWG1521	47	Slider Panel	See Contrast table (2)	
	8	FADER VR (CH2) ASSY	DWG1522	48	Sub Panel	See Contrast table (2)	
	9	FADER VR (CH3) ASSY	DWG1523	49	Display Panel A	DAH1947	
	10	FADER VR (CH4) ASSY	DWG1524	50	Control Panel	See Contrast table (2)	
NSP	11	DIGITAL SW ASSY	DWG1525	51	Loop Knob	DNK2943	
	12	7SEG. ASSY	See Contrast table (2)	52	Rotary VR Knob G	DAA1133	
NSP	13	EFFECT ASSY	DWG1518	53	Rotary SW Knob	DAA1134	
	14	•••••		54	Rotary VR Knob DG	DAA1135	
	15	•••••		55	Rotary VR Knob B	DAA1136	
	16	•••••		56	Rotary VR Knob GY	DAA1139	
	17	21P F.F.C/60V	DDD1156	57	Rotary VR Knob GG	DAA1140	
	18	28P F.F.C/60V	DDD1157	58	Parameter Knob A	DAA1146	
	19	Connector Assy	DKP3508	59	Rotary Select Knob	DAA1147	
	20	PCB Holder	AEC1534	60	Parameter Knob B	DAA1148	
NSP	21	PCB Mould	AMR1525	61	Fader Knob	DAC1846	
	22	Screw	DBA1141	62	Tact Knob 2	DAC1950	
	23	Washer	DBE1010	63	Power Knob Guide	DNK3768	
	24	Nut M9	DBN1004	64	Tact Knob Guide 2	DNK3775	
	25	Spacer	DEB1450	65	Screw	AMZ26P040FMC	
	26	Collar	DEC1953	66	Screw	AMZ30P040FMC	
	27	Bush	DEC1957	67	Screw	BBZ30P060FZK	
	28	PCB Sheet A	DEC2367	68	•••••		
	29	PCB Sheet B	DEC2368	69	Screw	BBZ30P140FMC	
	30	Spacer	DEC2369	70	•••••		
	31	Slider Plate	DNF1518	71	•••••		
	32	Arm	DNK3750	72	Screw	BPZ30P080FZK	
NSP	33	Panel Stay Assy	DXB1731	73	Screw	CBZ30P080FZK	
NSP	34	PCB Support	REC1248	74	Screw	CBZ30P180FZK	
	35	Screw	VBA1039	75	Nut	NKX2FUC	
NSP	36	PC Support	VEC1749	76	Screw	PPZ30P050FMC	
	37	•••••		77	Rivet	RBM-003	
	38	Fader Packing B	DED1100	78	Washer	WB50FMC	
	39	Effect SW Packing	DED1110				
	40	Tact SW Packing	DED1119				

(2) CONTRAST TABLE

DJM-600/KUC, RL and WY types are constructed the same except for the following:


Mark	No.	Symbol and Description	Part No.			Remarks
			KUC type	RL type	WY type	
	12	7 SEG ASSY	DWZ1093	DWZ1093	DWZ1092	
	47	Slider Panel	DAH1945	DAH1945	DAH1955	
	48	Sub Panel	DAH1946	DAH1946	DAH1956	
	50	Control Panel	DNB1075	DNB1075	DNB1076	

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

SIGNAL ROUTE

- (L1) : LINE1 SIGNAL (CD2) : CD2 SIGNAL
- (L2) : LINE2 SIGNAL (PH1) : PHONE1 SIGNAL
- (L3) : LINE3 SIGNAL (PH2) : PHONE2 SIGNAL
- (CD1) : CD1 SIGNAL (PH3) : PHONE3 SIGNAL
- (MIC) : MIC SIGNAL : AUDIO SIGNAL
- (SE) : SEND SIGNAL (SUM) : SUB MIC SIGNAL
- (RE) : RETURN SIGNAL

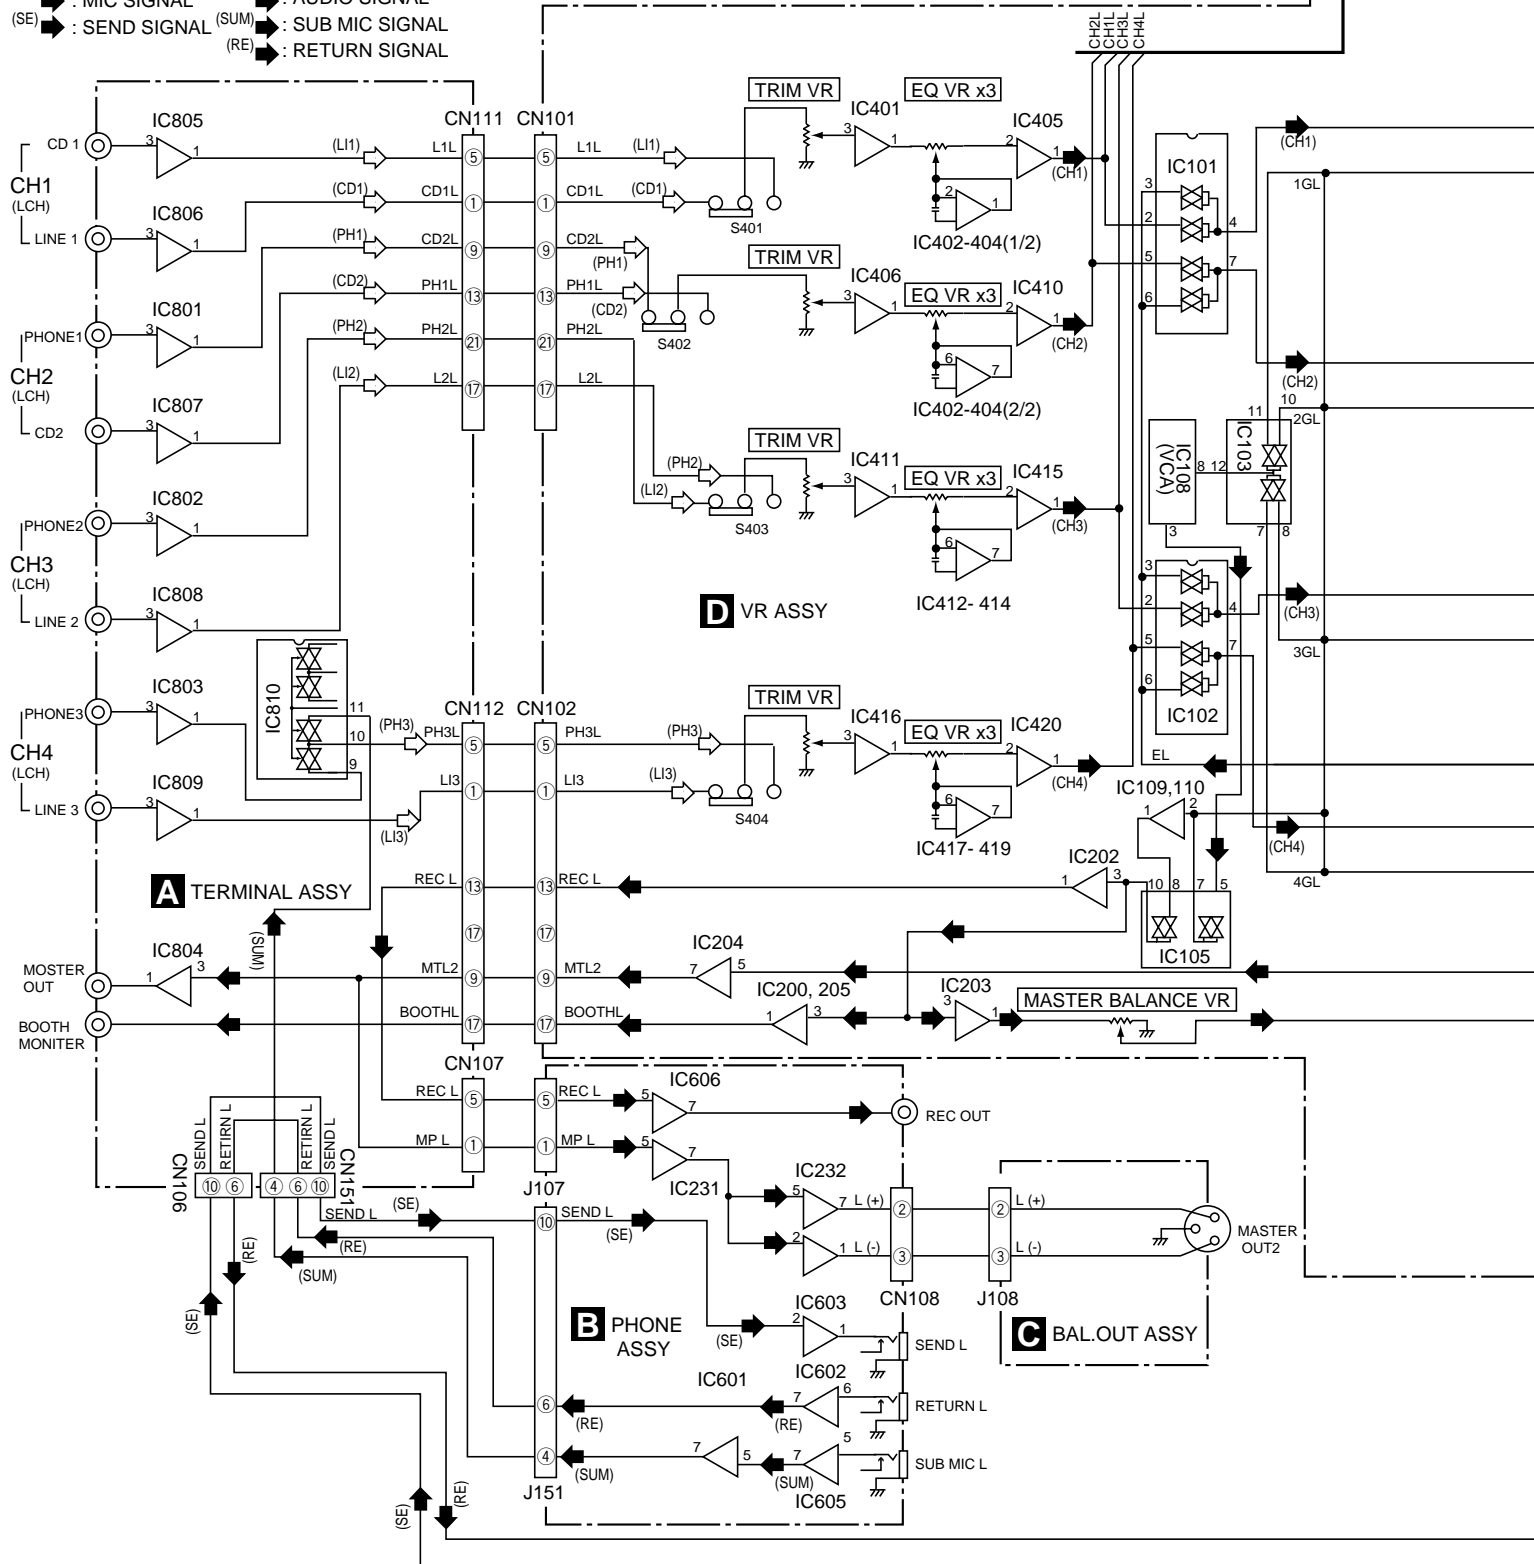


A TERMINAL ASSY

D VR ASSY

B PHONE ASSY

C BAL. OUT ASSY

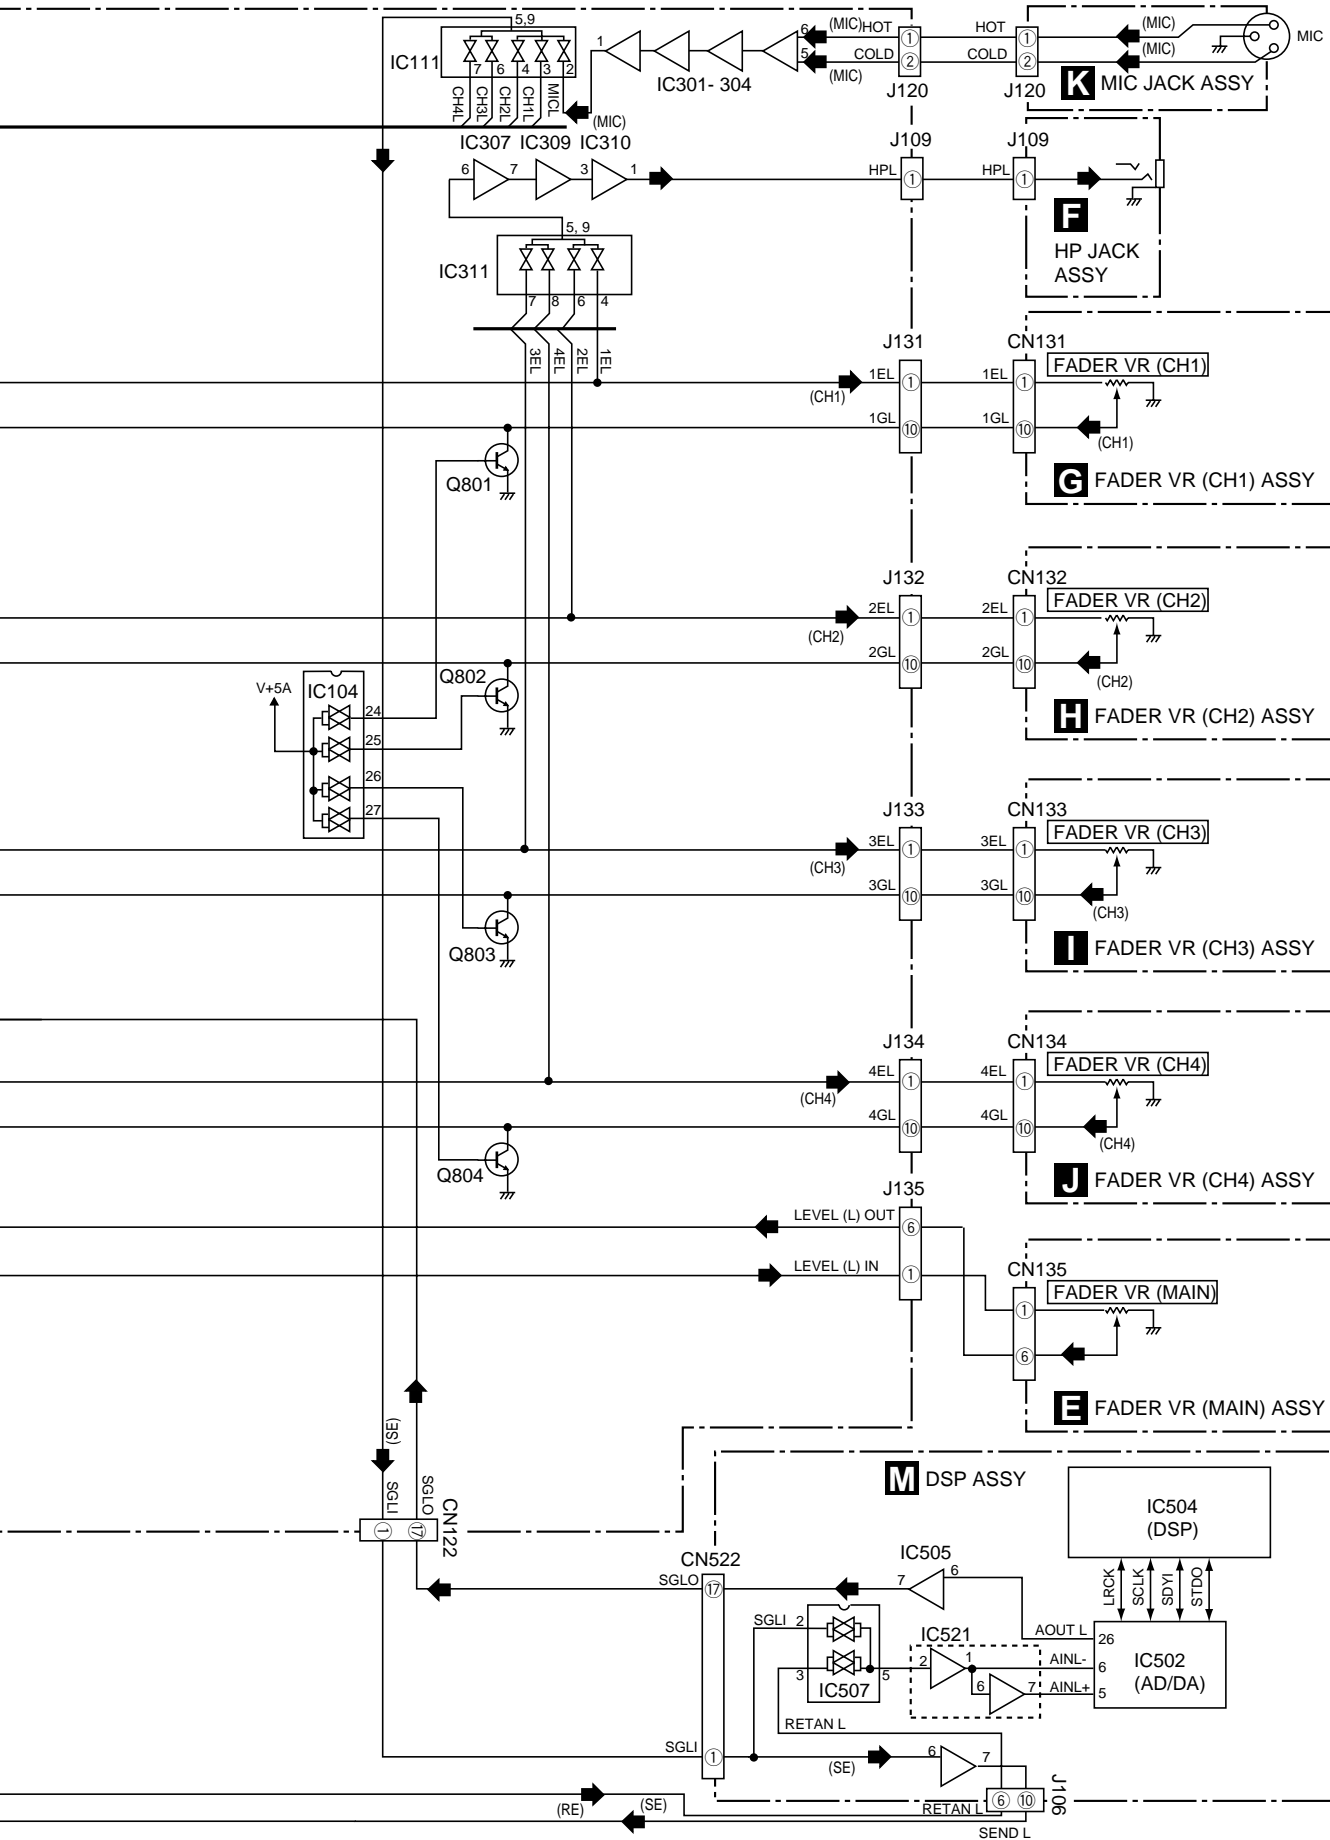


A

B


C

D

3.2 OVERALL CONNECTION DIAGRAM

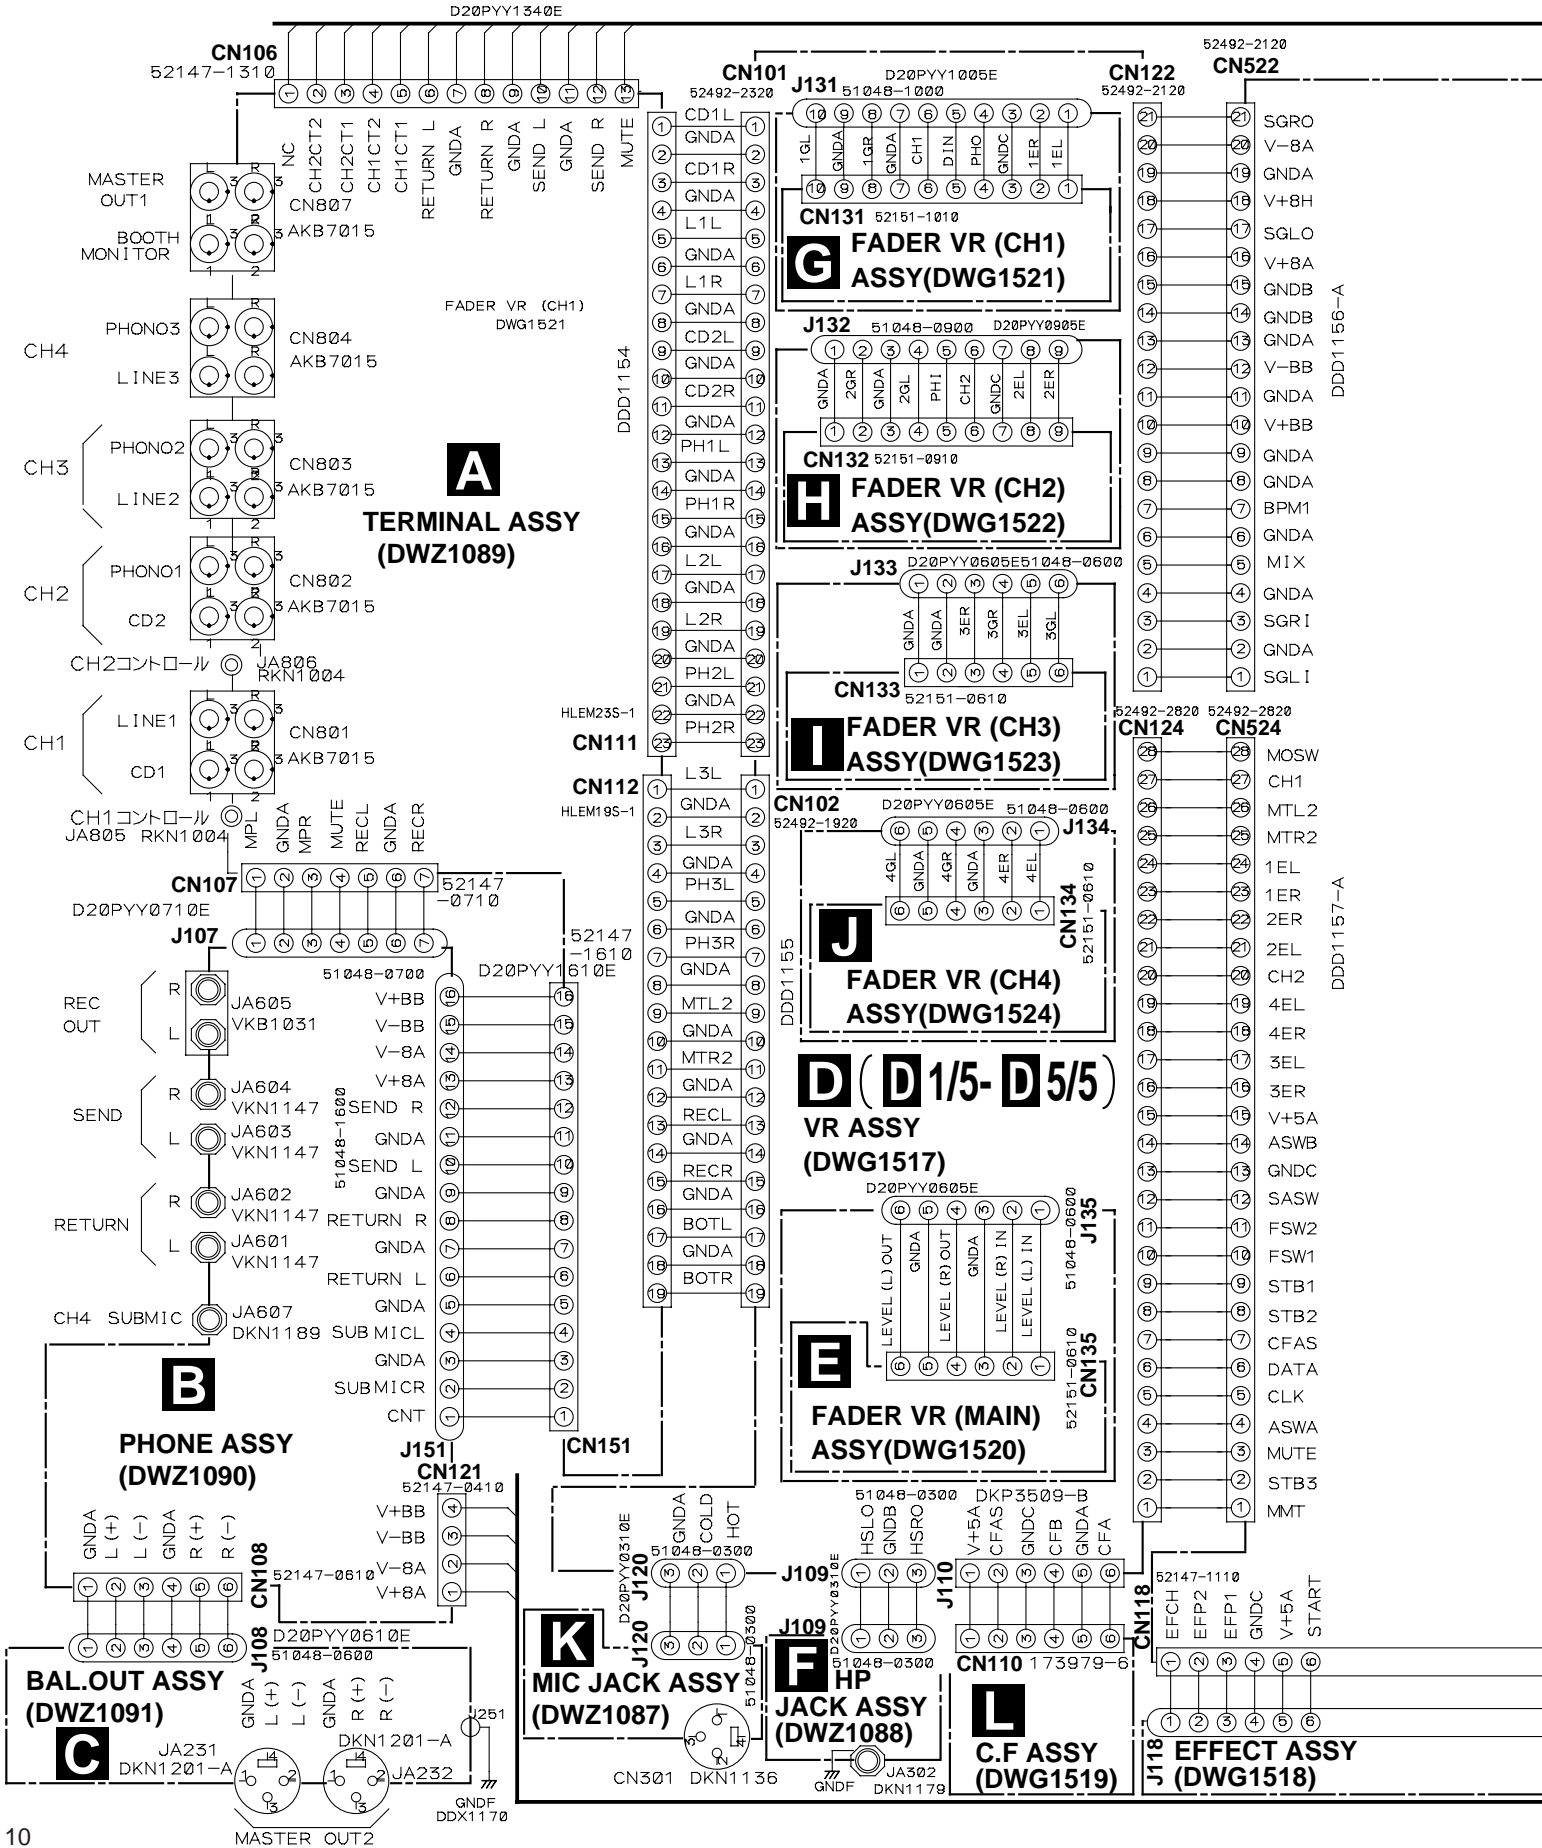


Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

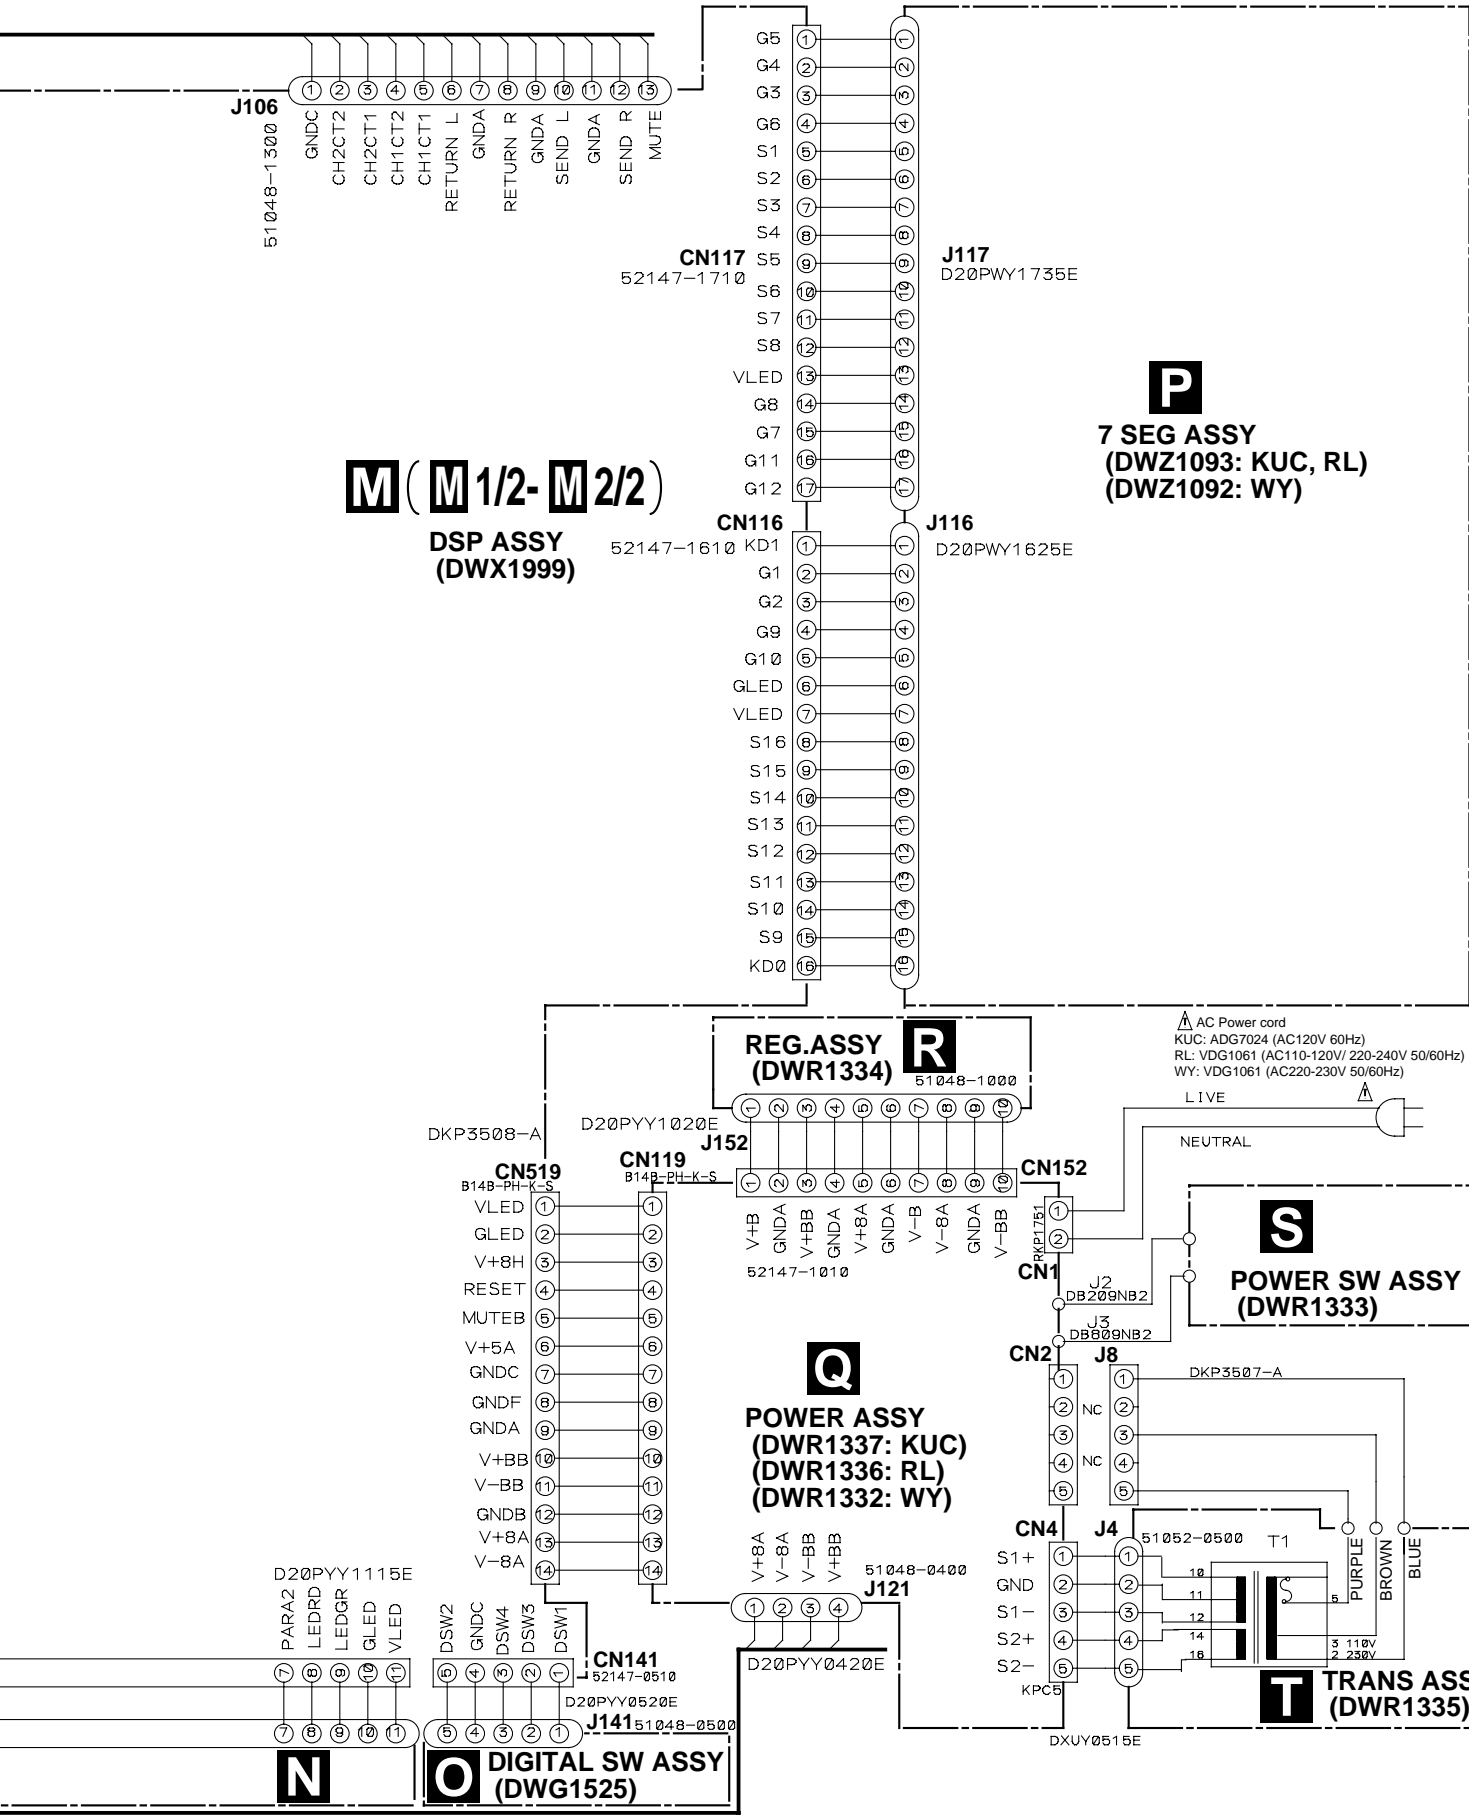

A
B
C
D

3.3 TERMINAL ASSY

A TERMINAL ASSY (DWZ1089)

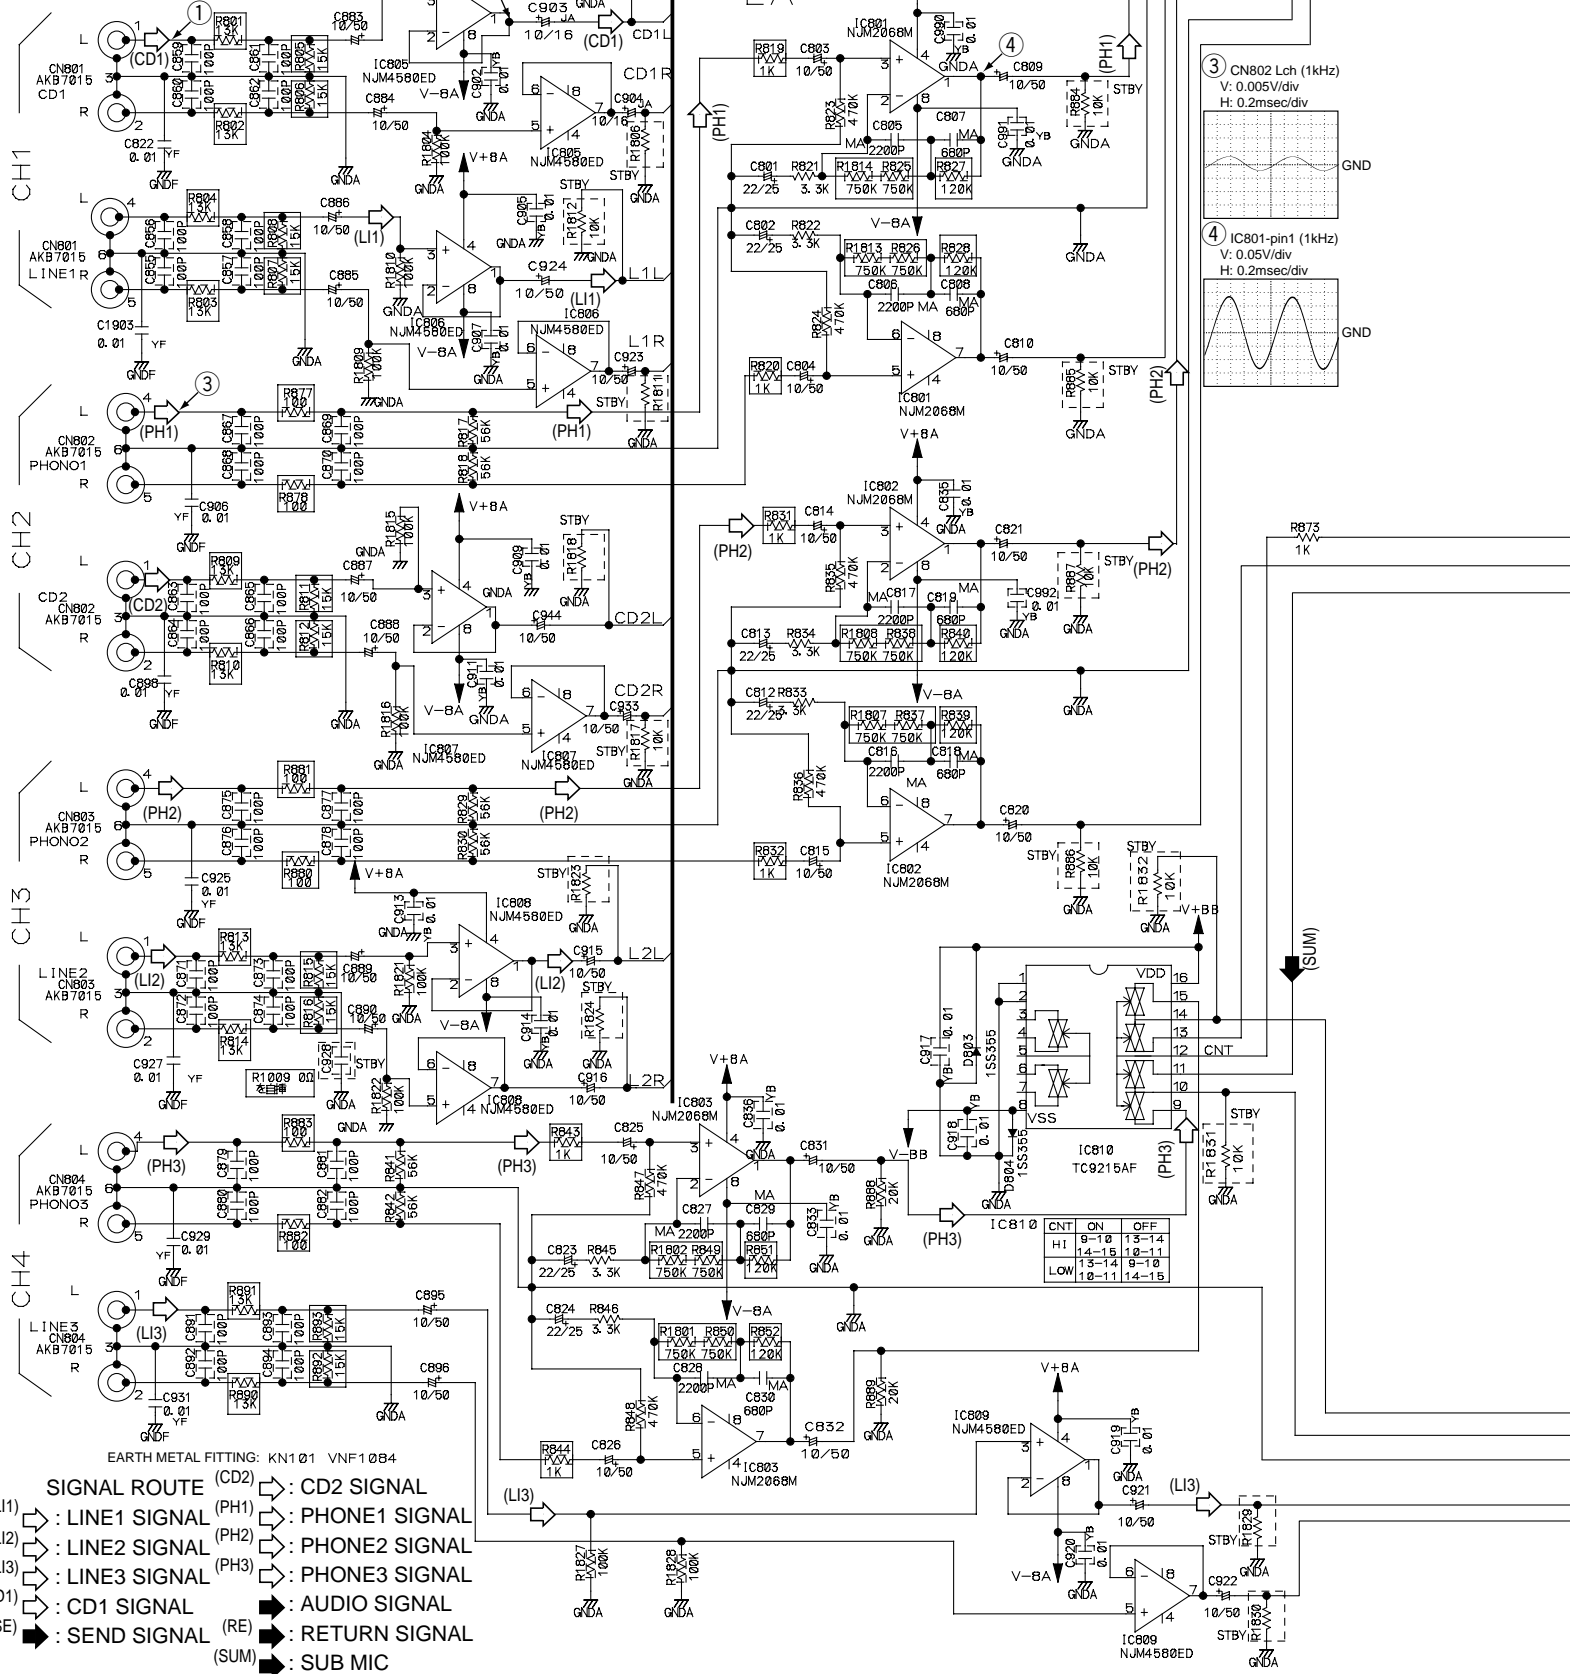


- D**
- (L1) : LINE1 SIGNAL
 - (L2) : LINE2 SIGNAL
 - (L3) : LINE3 SIGNAL
 - (CD1) : CD1 SIGNAL
 - (SE) : SEND SIGNAL
 - (PH1) : PHONE1 SIGNAL
 - (PH2) : PHONE2 SIGNAL
 - (PH3) : PHONE3 SIGNAL
 - (RE) : RETURN SIGNAL
 - (SUM) : SUB MIC

A

B

C

D

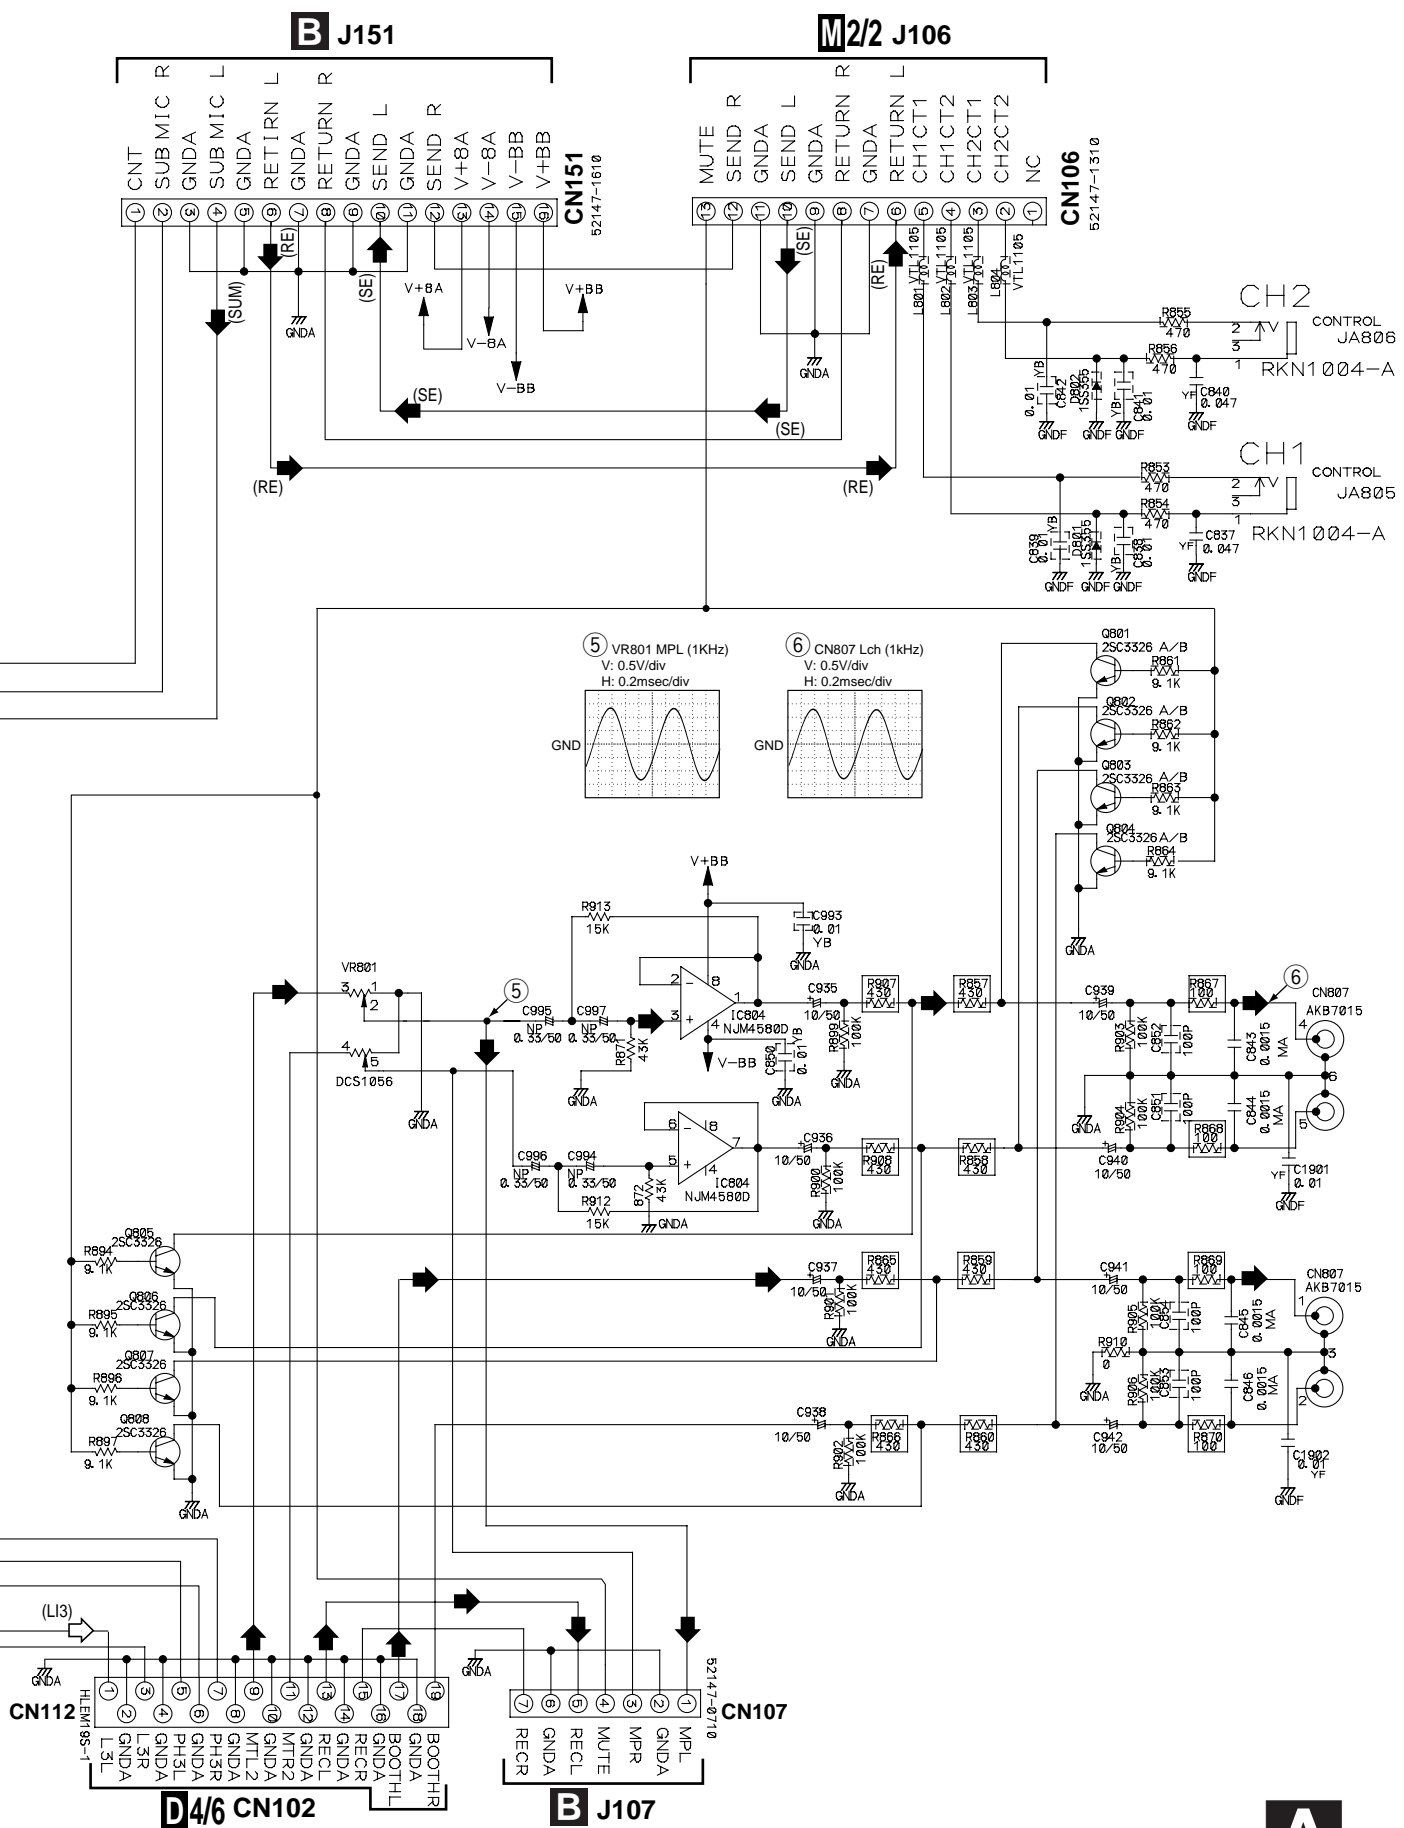


3.4 PHONE and BAL. OUT ASSYS


A

B

C

D

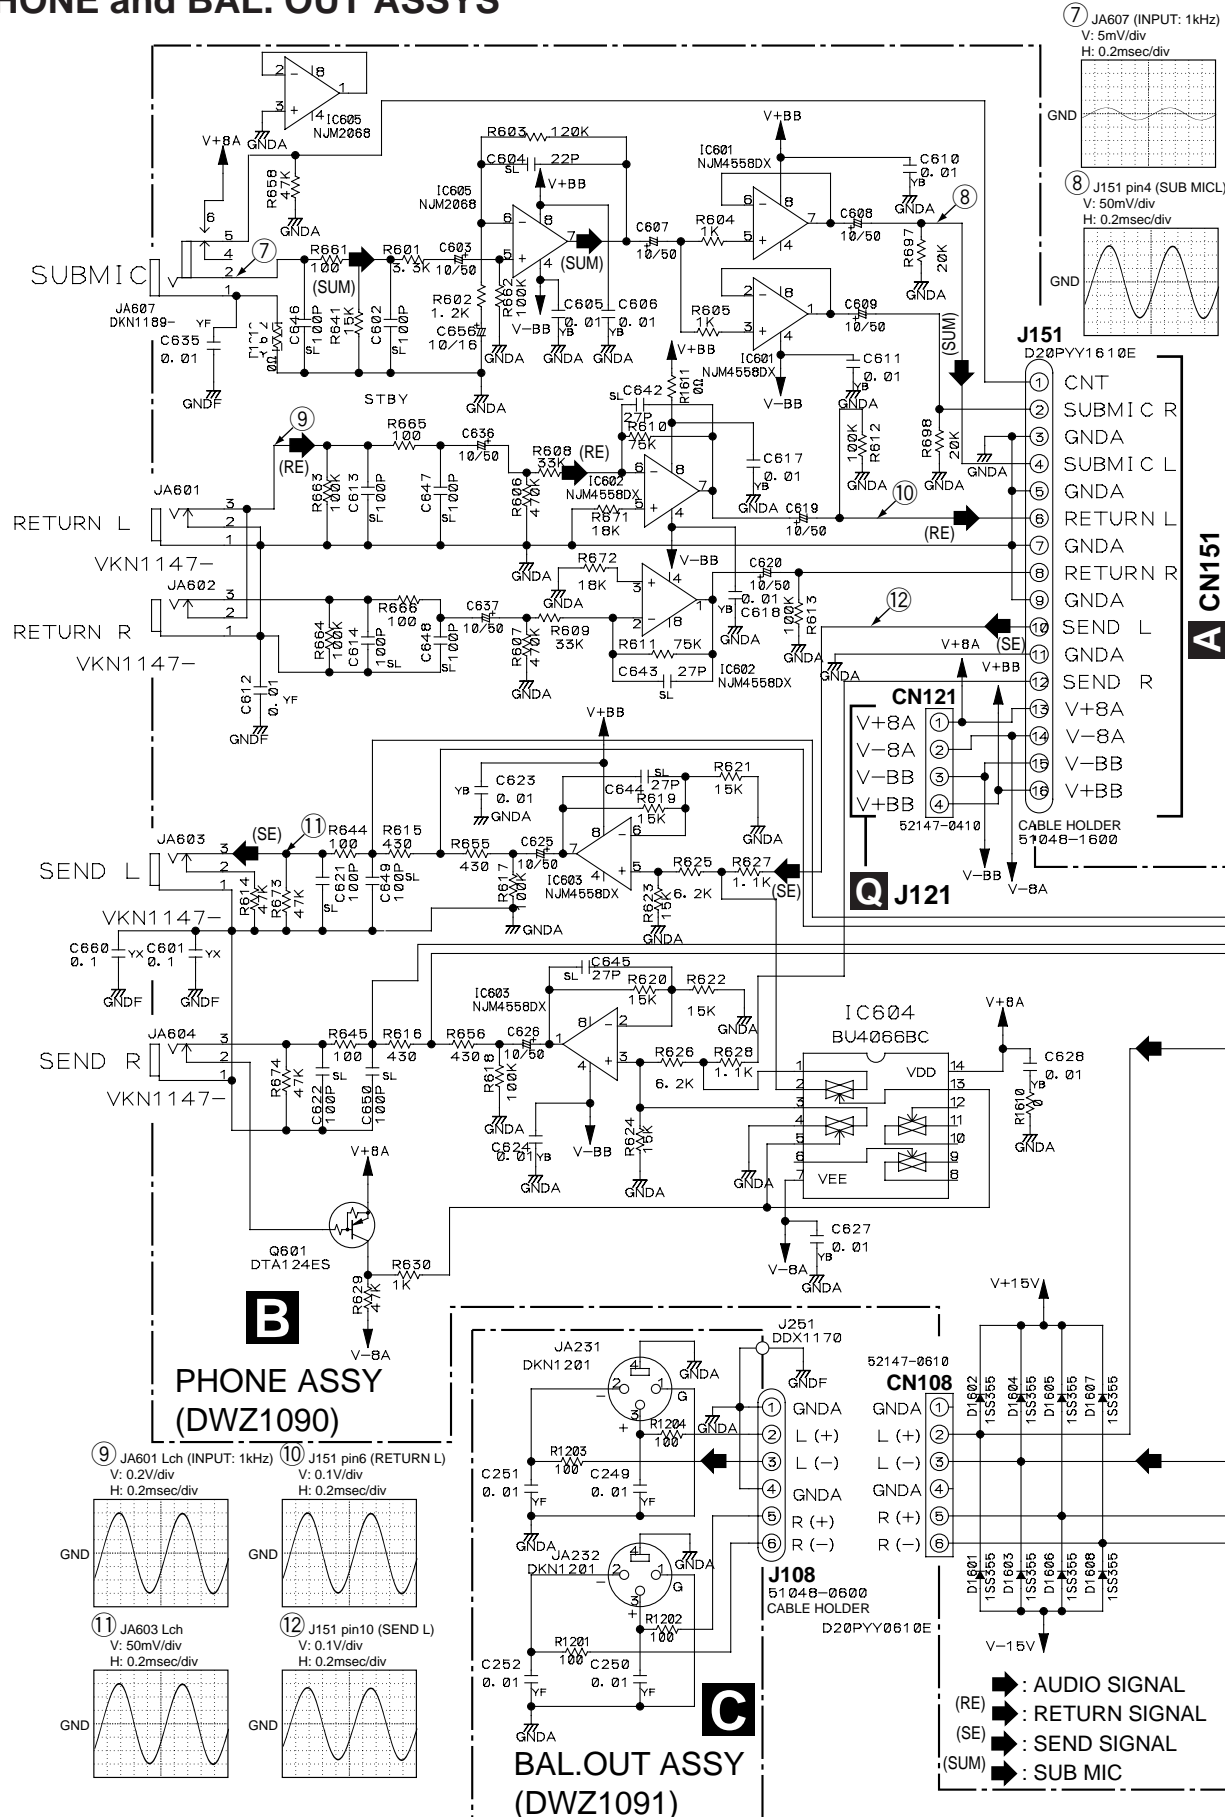

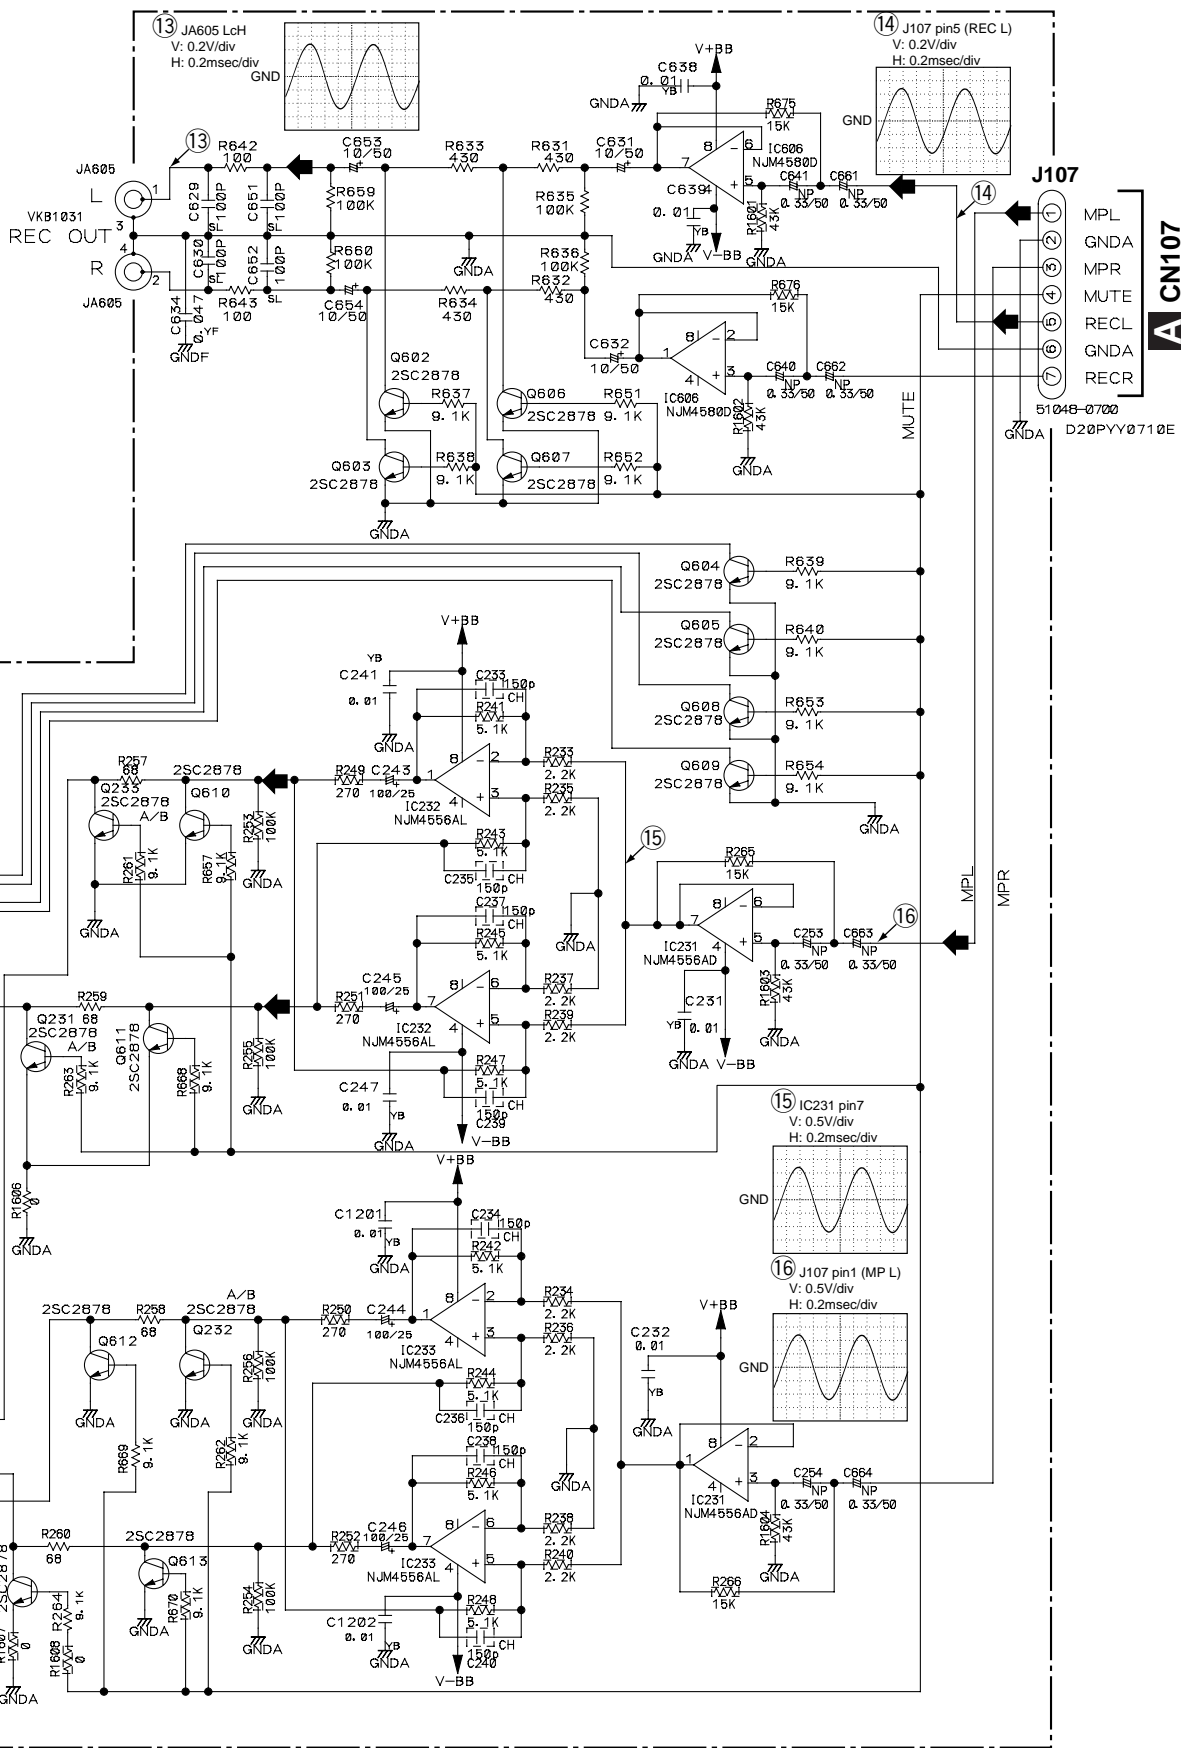

A

B


C


D

A CN107

B

3.5 VR ASSY (1/6)

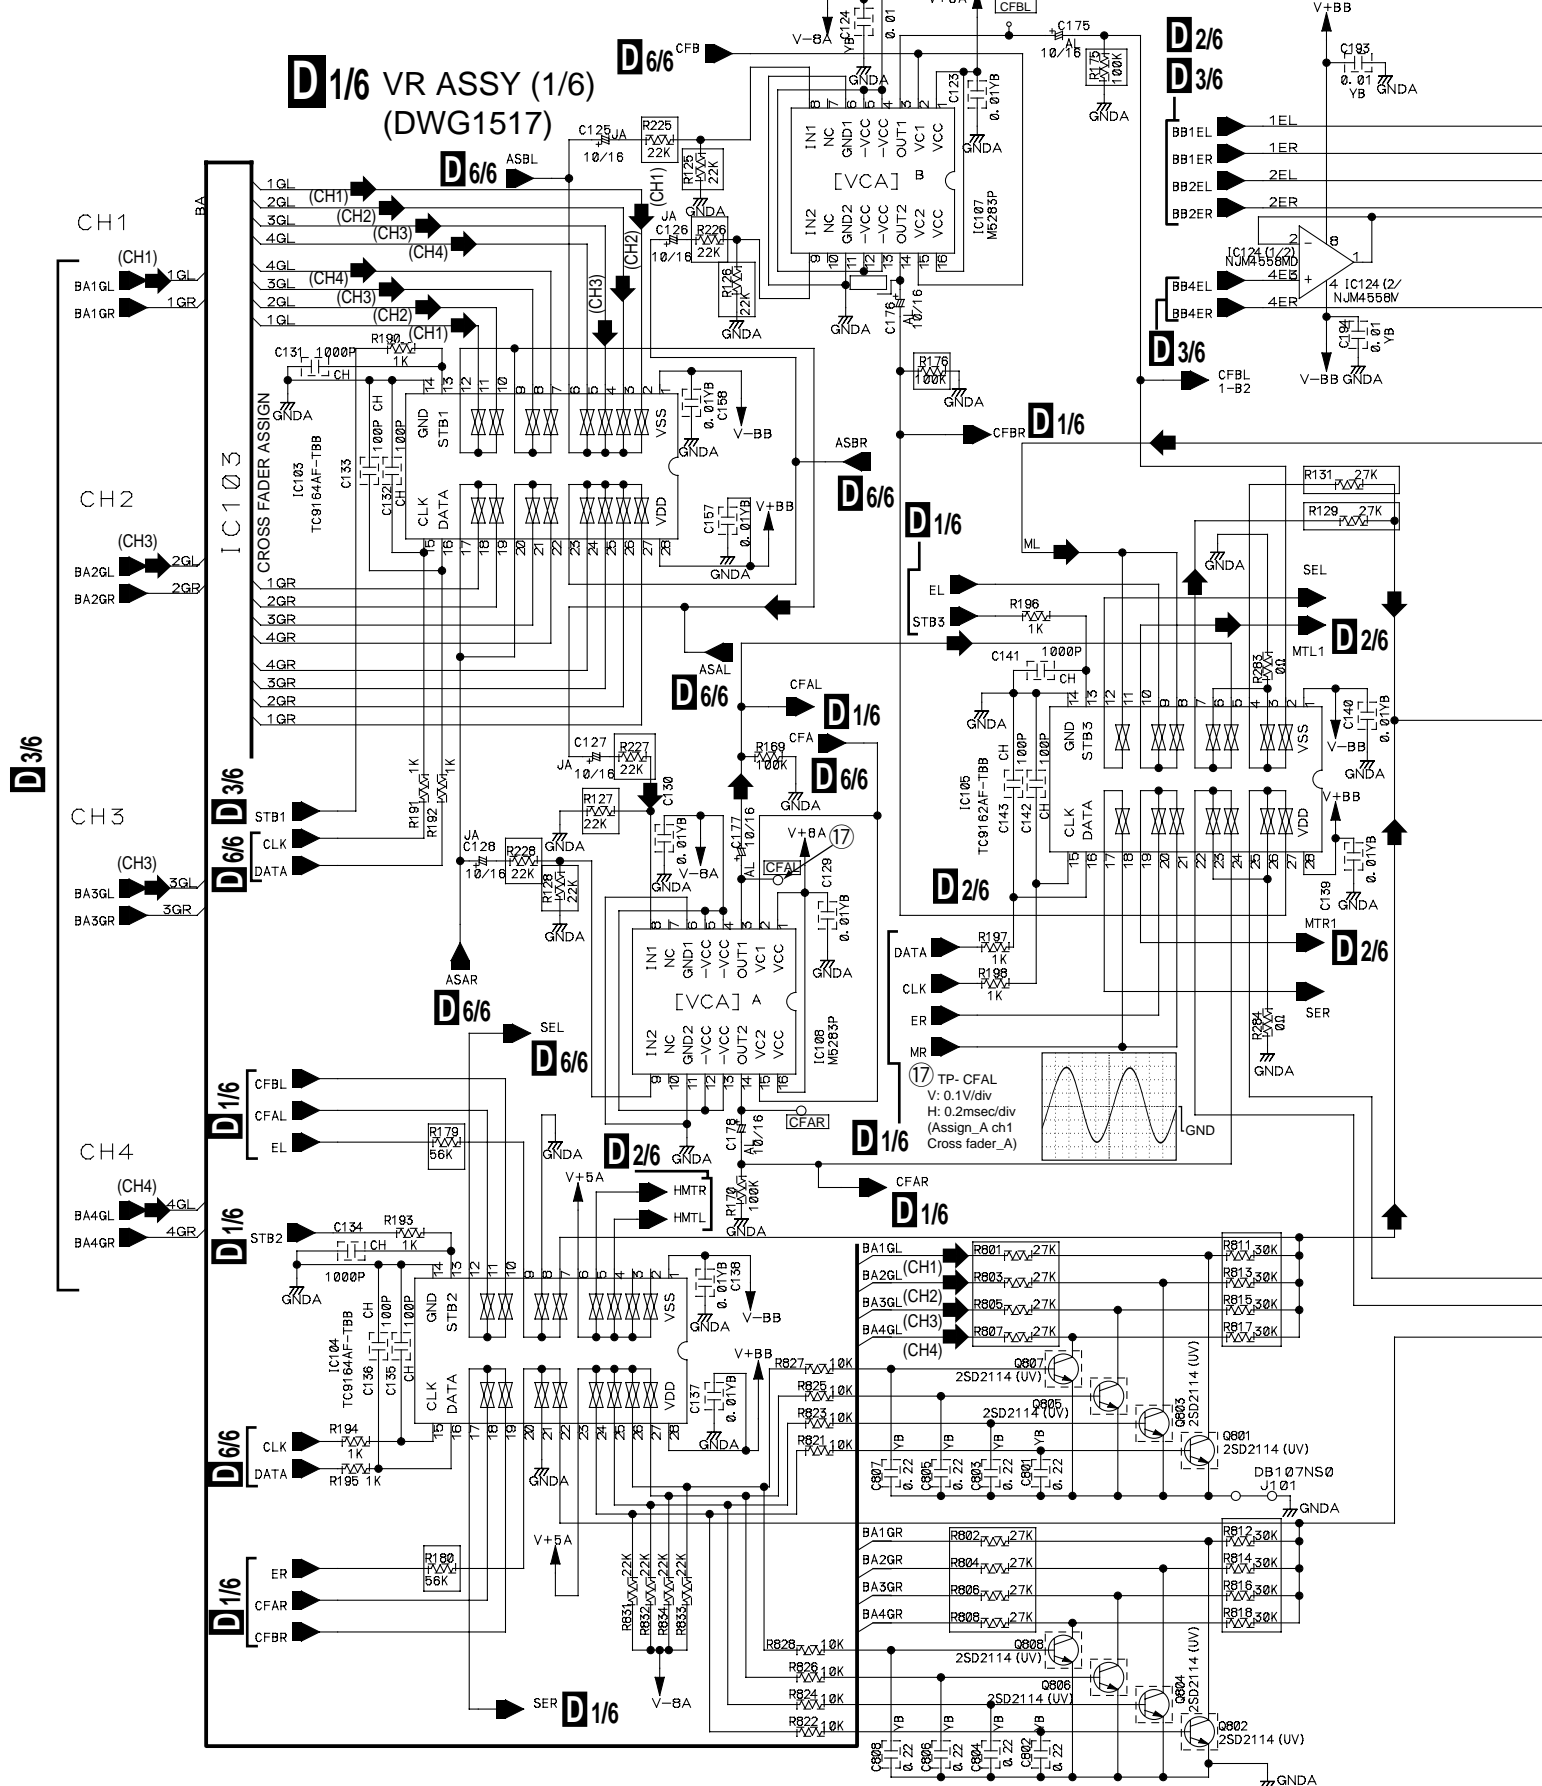

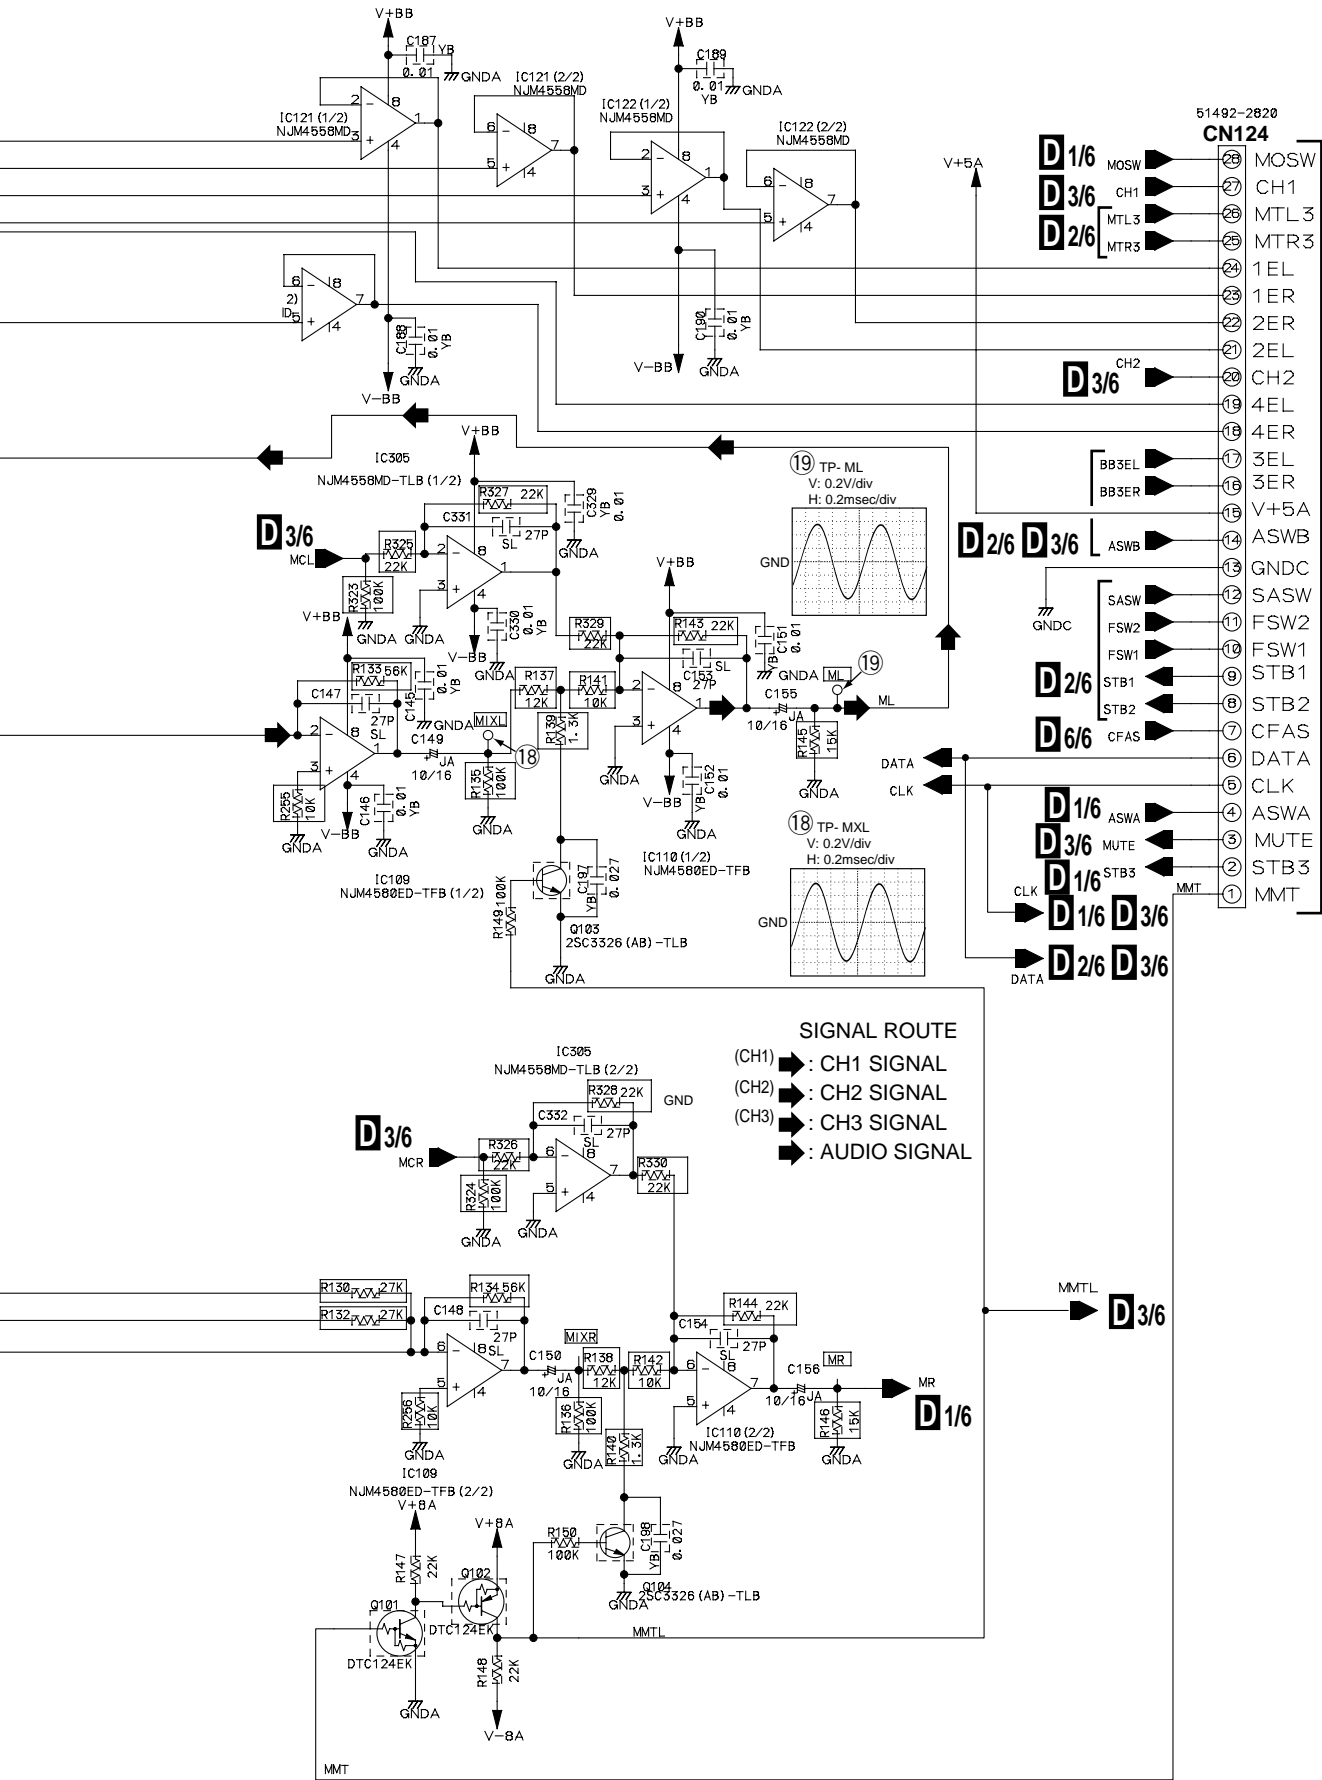


M2/2 CN524

51492-2820

CN124


- D 1/6 MOSW
- D 3/6 CH1
- D 2/6 MTL3
- MTR3
- 1EL
- 1ER
- 2ER
- 2EL
- CH2
- 4EL
- 4ER
- 3EL
- 3ER
- V+5A
- ASWB
- GNDC
- SASW
- FSW2
- FSW1
- STB1
- STB2
- CFAS
- DATA
- CLK
- ASWA
- MUTE
- STB3
- MMT

3.6 VR (2/6), FADER VR (MAIN) and HP JACK ASSYS

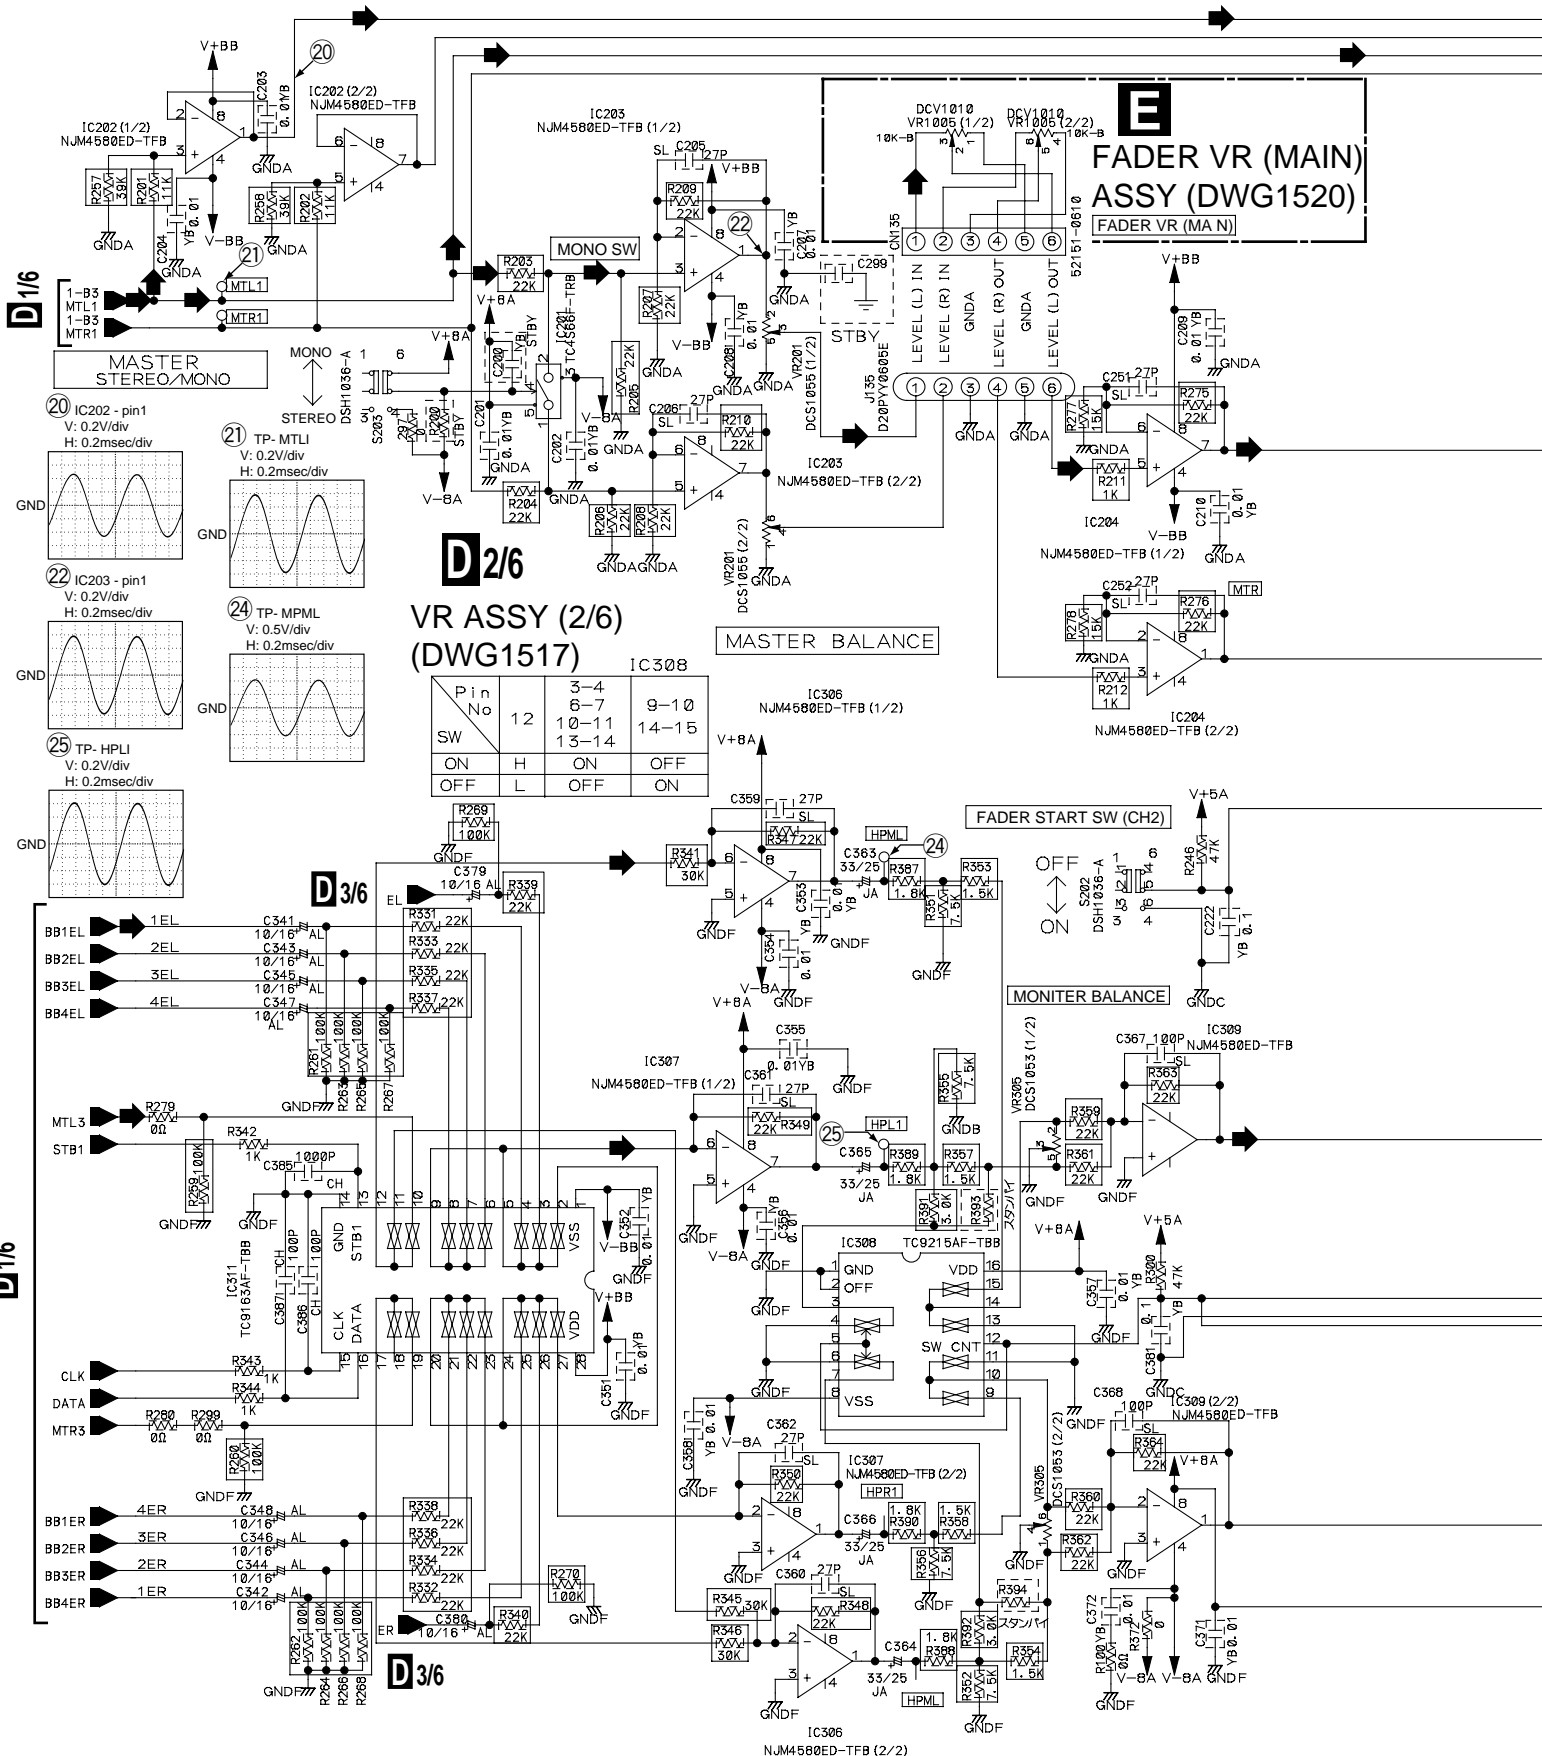


A

D 1/6

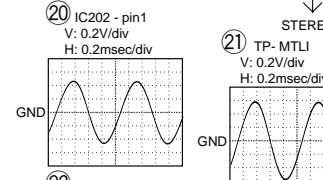

B

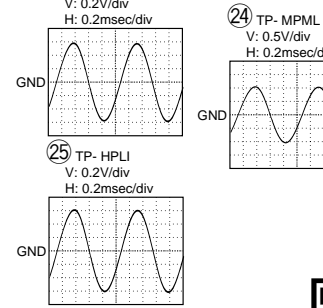


C

D 1/6


D





D 3/6

18 D 2/6 E

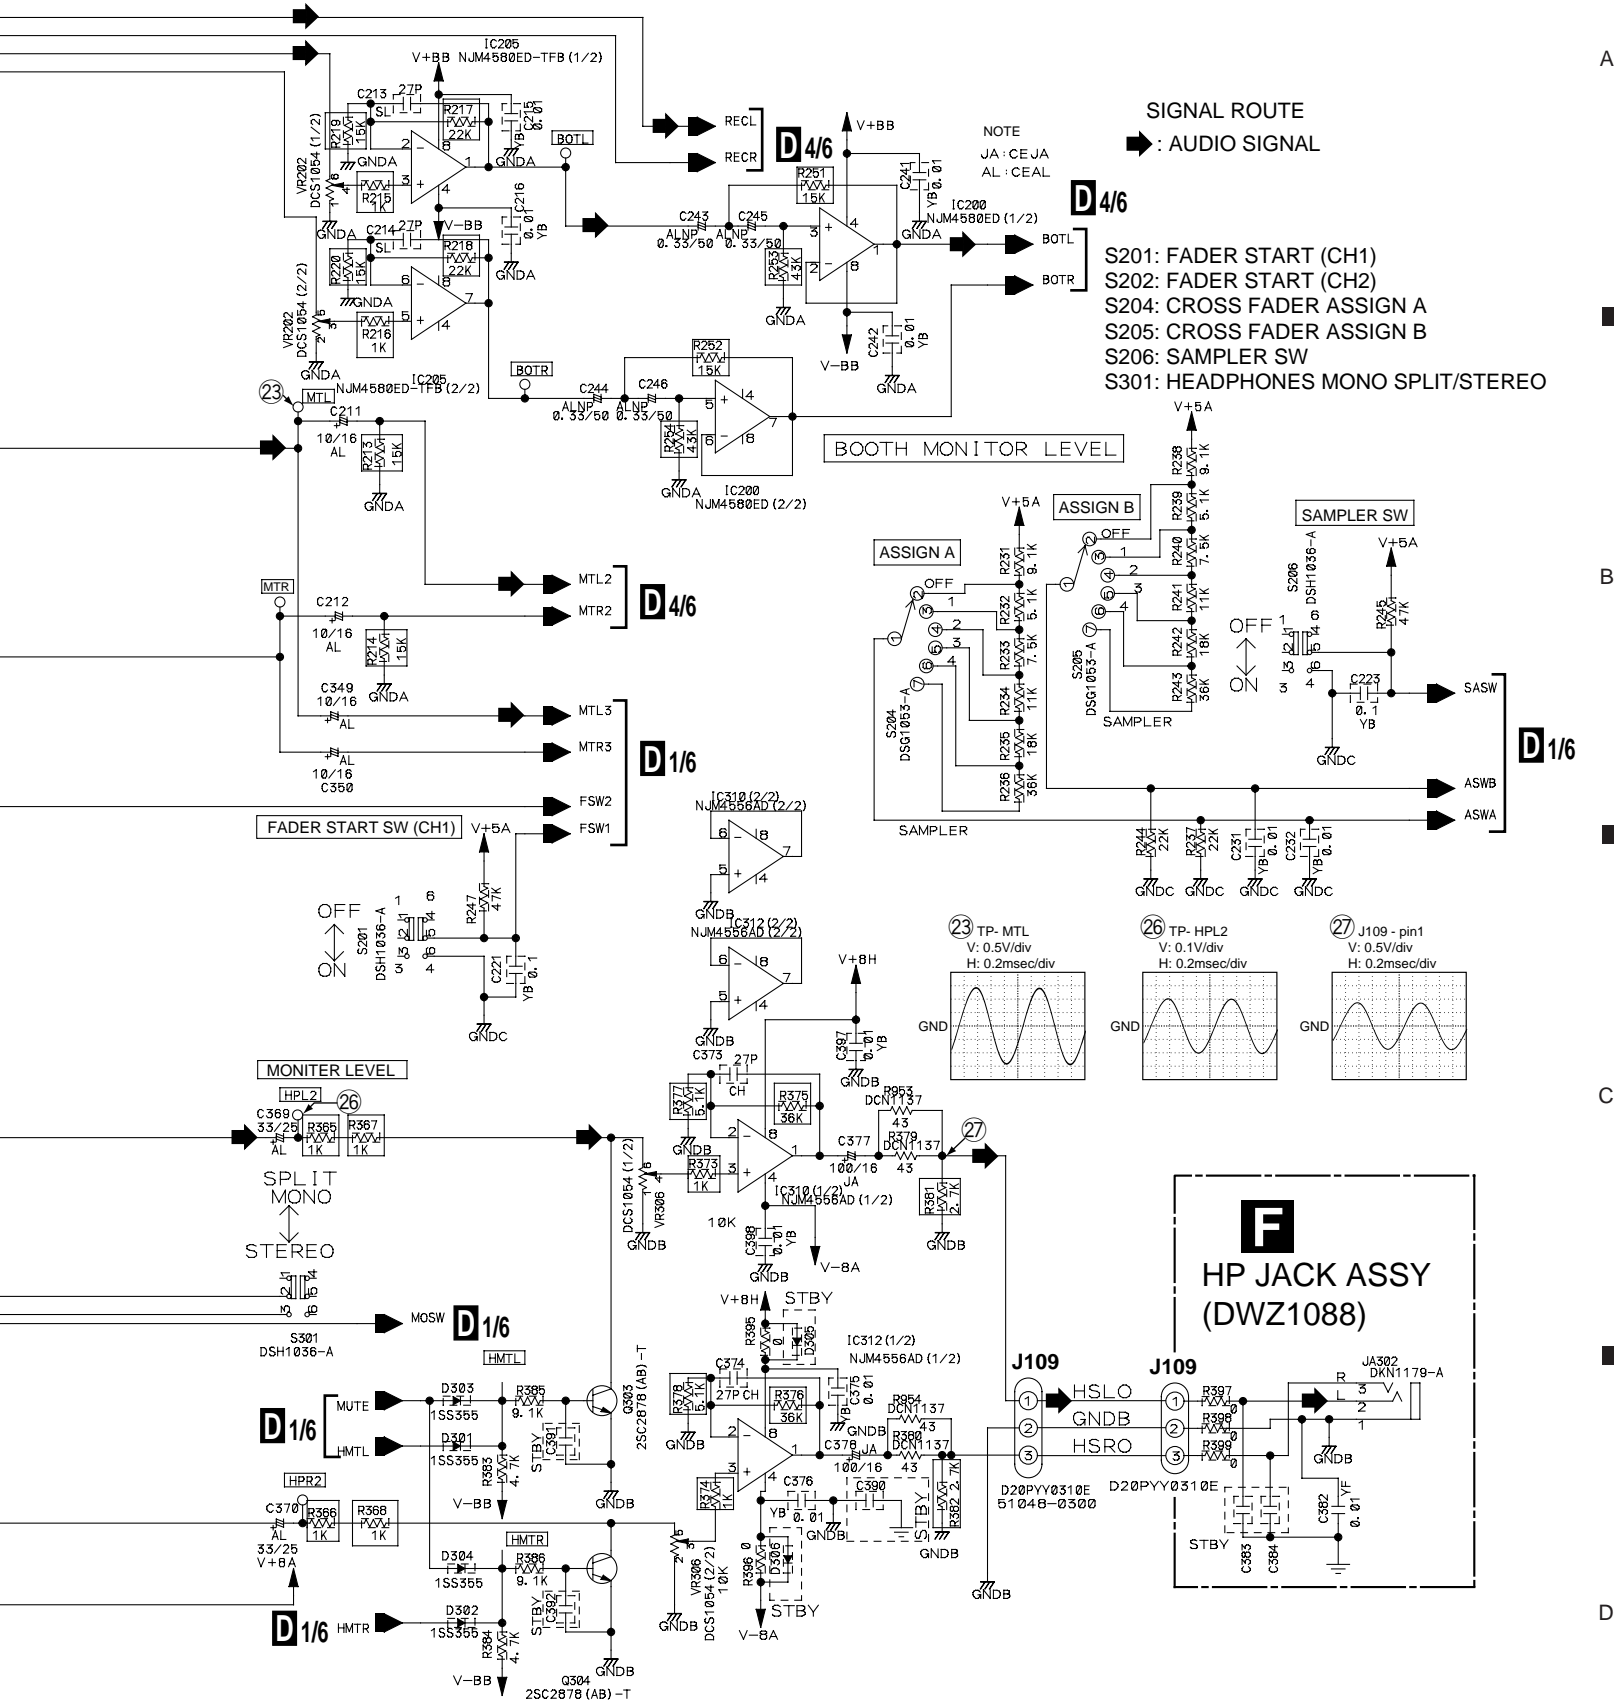

3.7 VR (3/6), FADER VR (CH1), FADER VR (CH2), FADER VR (CH3) and FADER VR (CH4) ASSYS

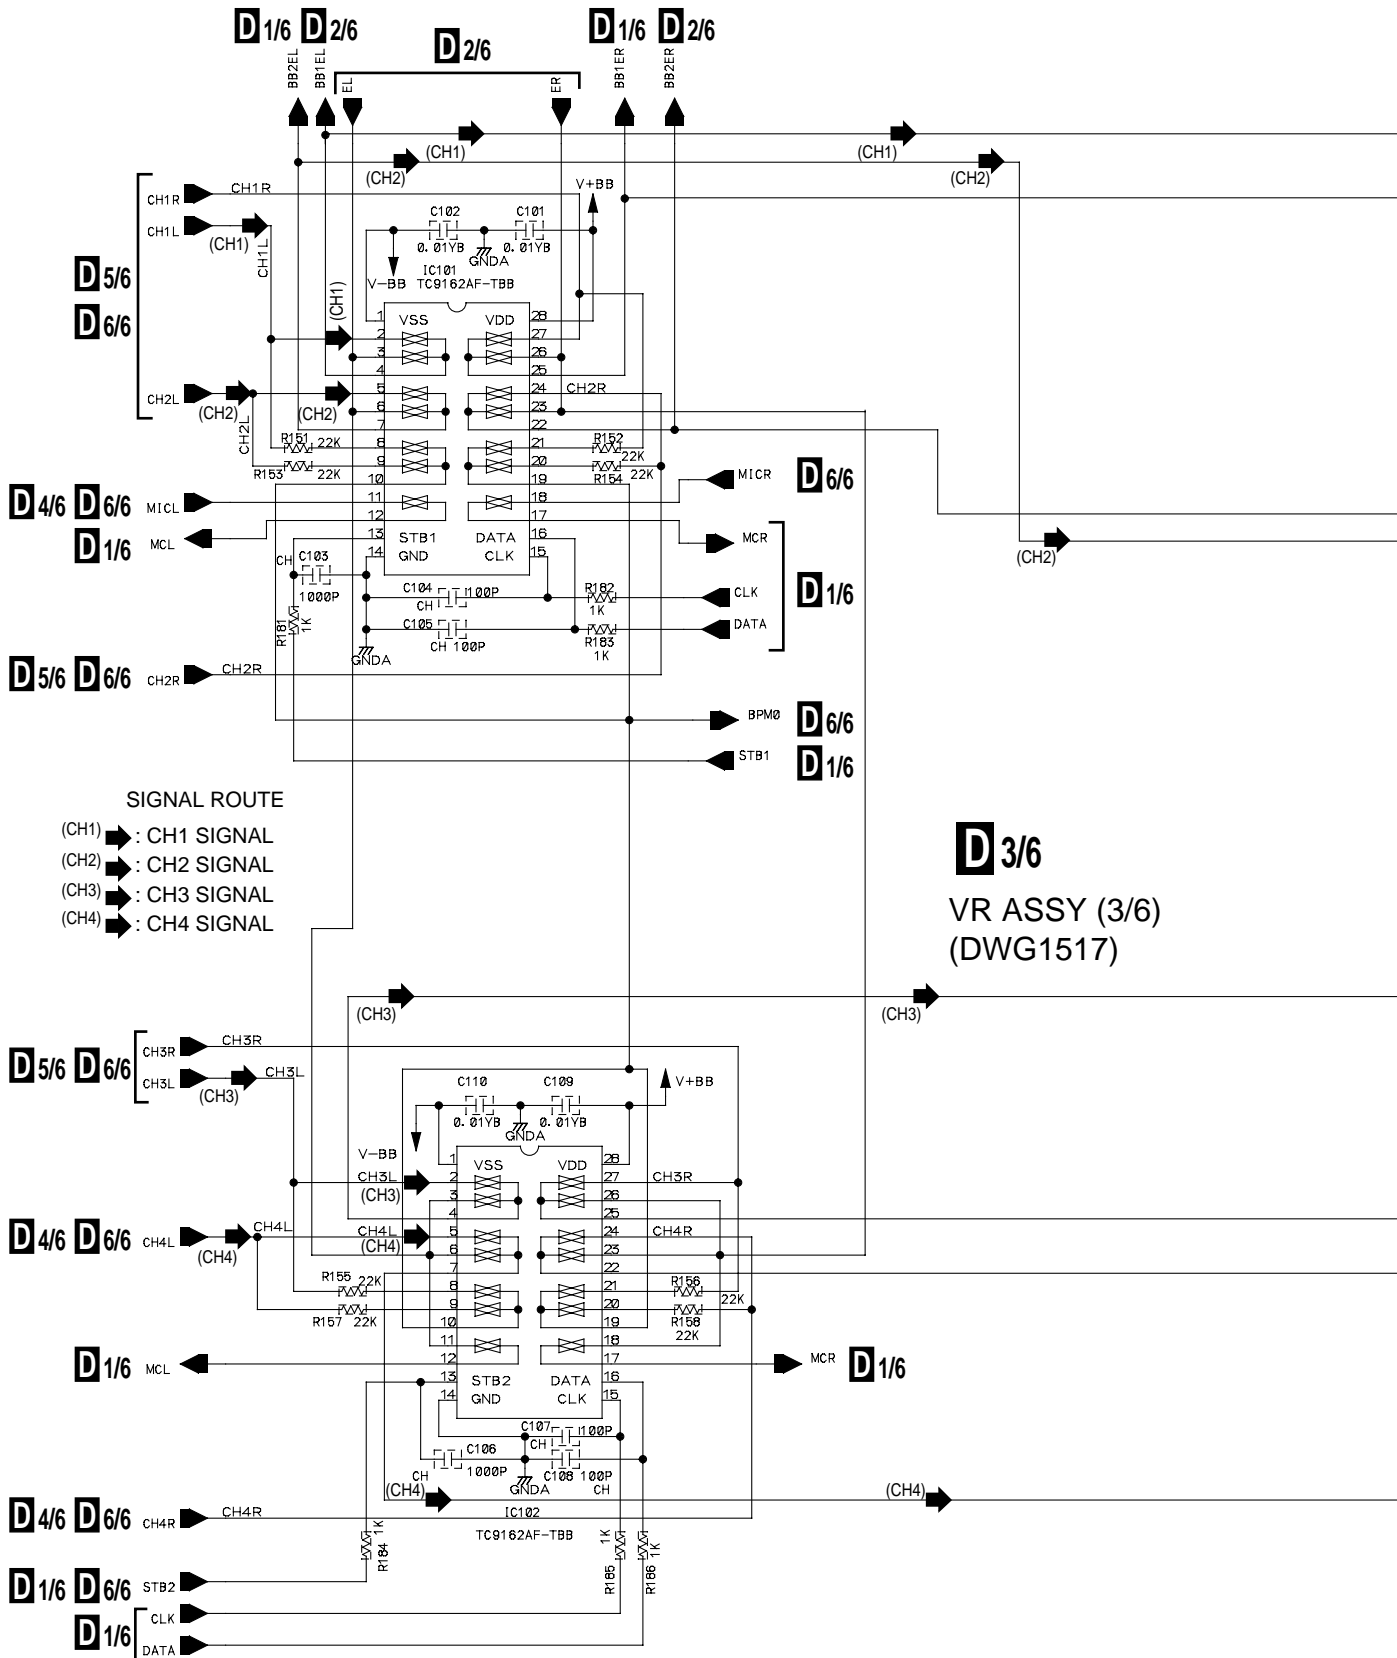

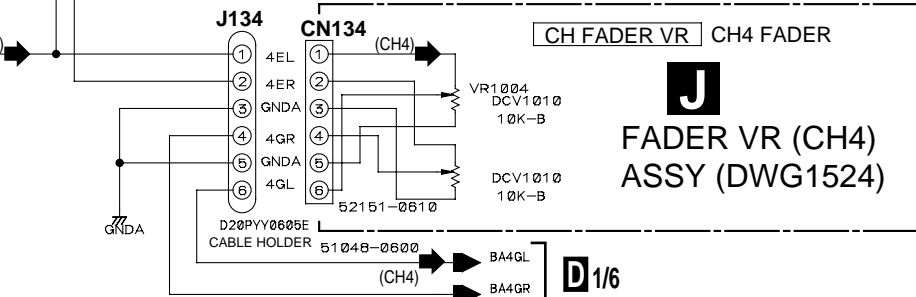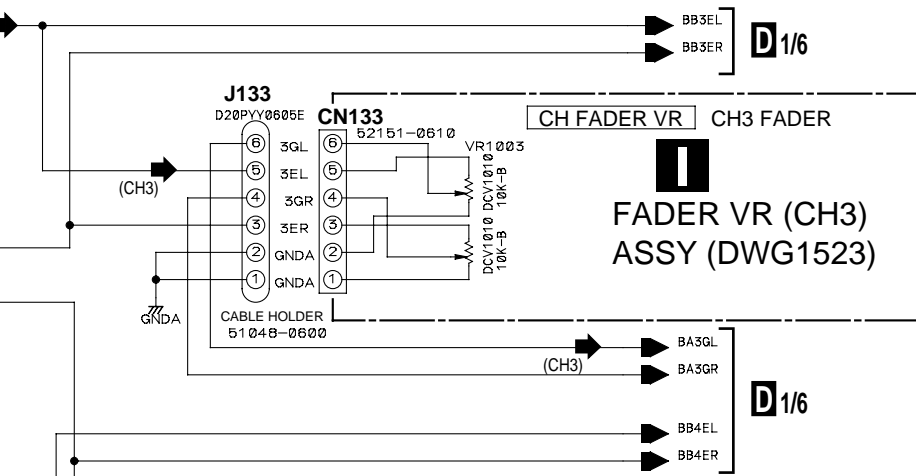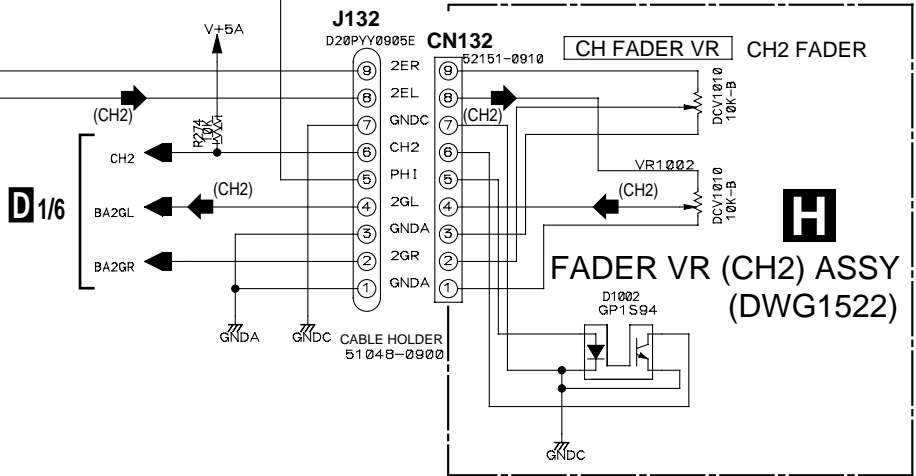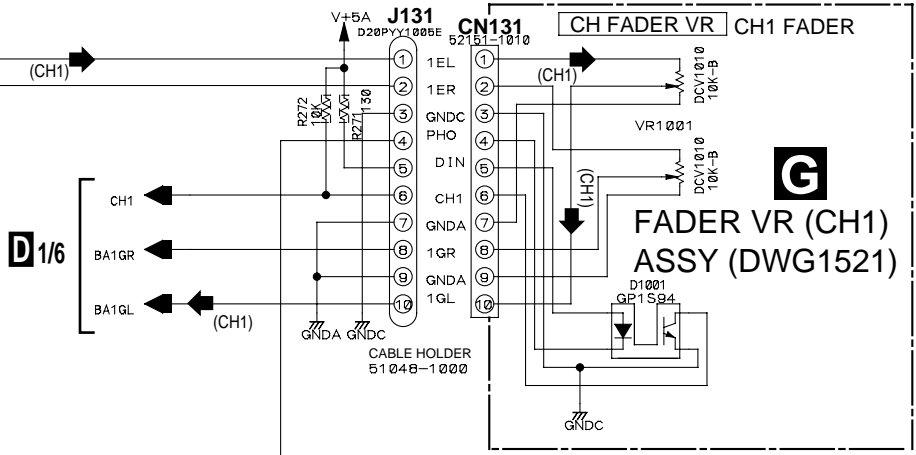

D3/6 **G** **H** **I** **J**

3.8 VR (4/6) and MIC JACK ASSYS




A

D 4/6
VR ASSY (4/6)
(DWG1517)


B

C

D

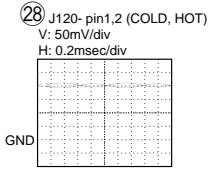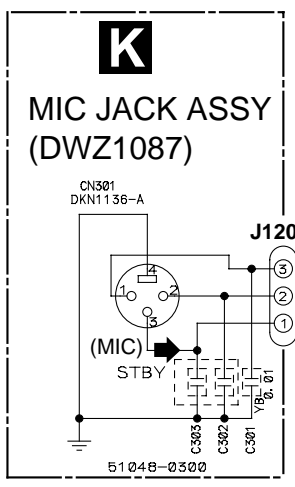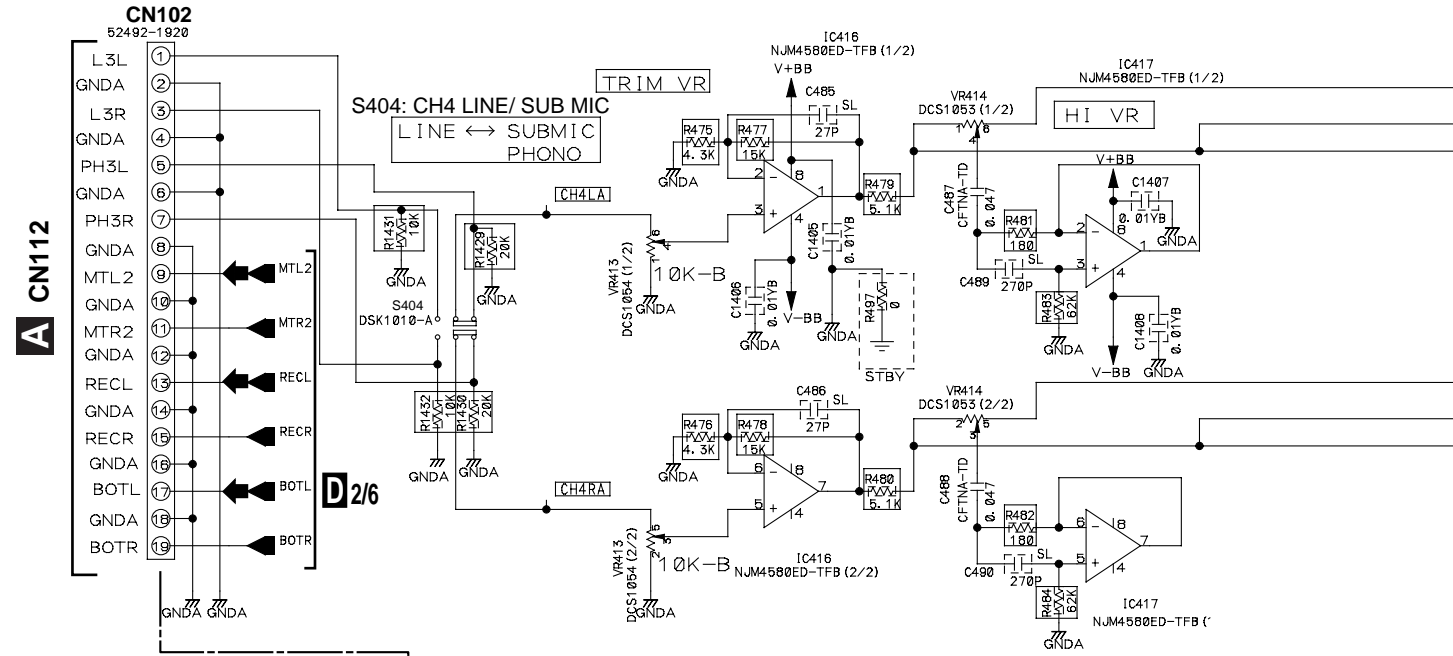

SIGNAL ROUTE
 ■ : AUDIO SIGNAL
 ■ (MIC) : MIC SIGNAL



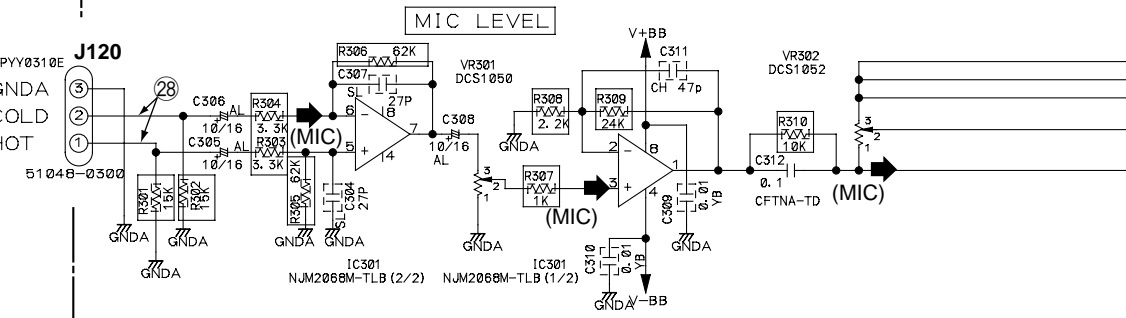


A

B

C

D

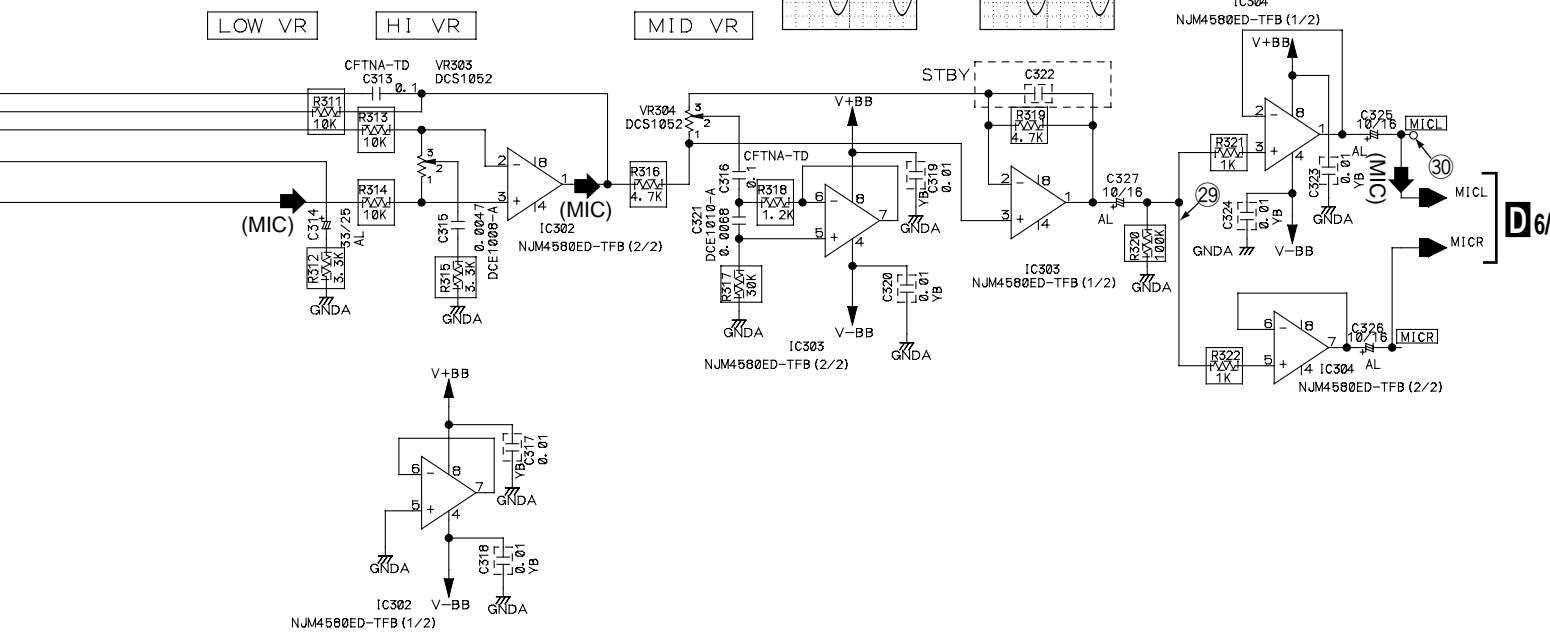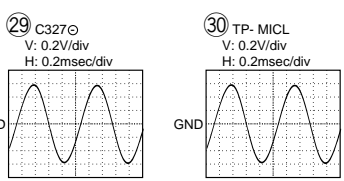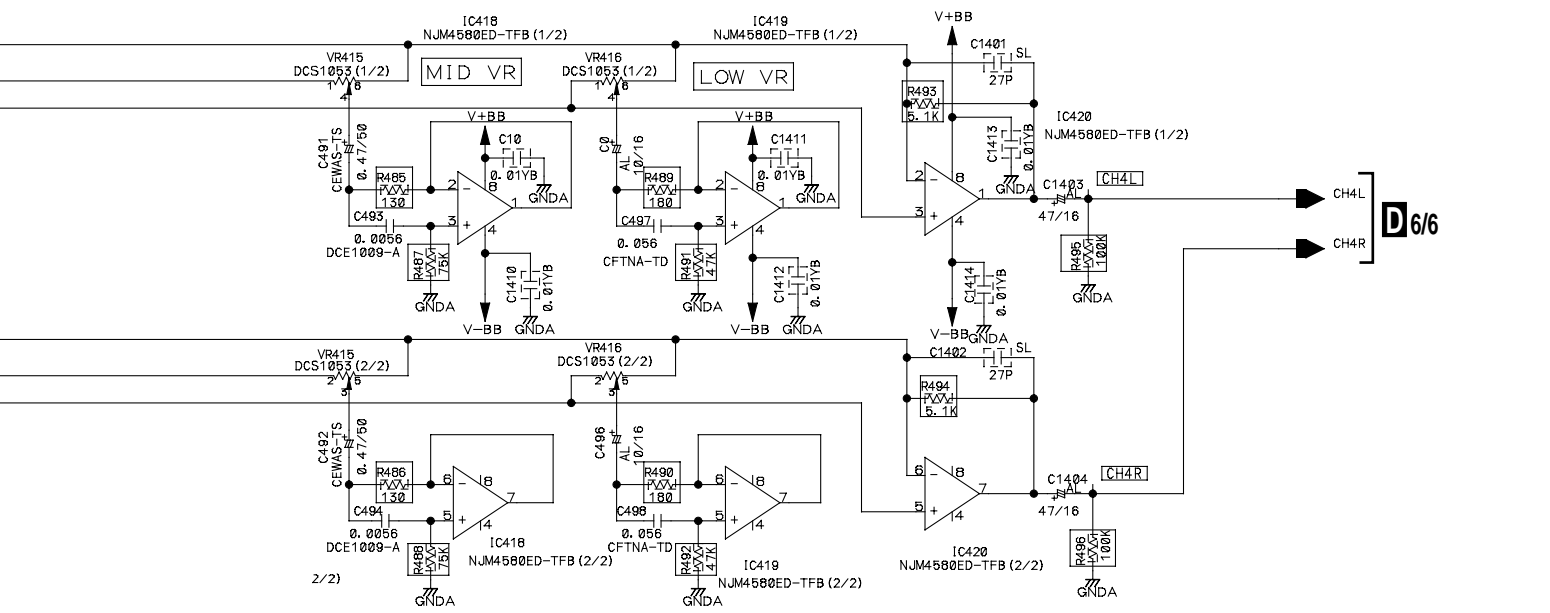

3.9 VR ASSY (5/6)


A

B


C

D



D5/6
VR ASSY (5/6)
(DWG1517)

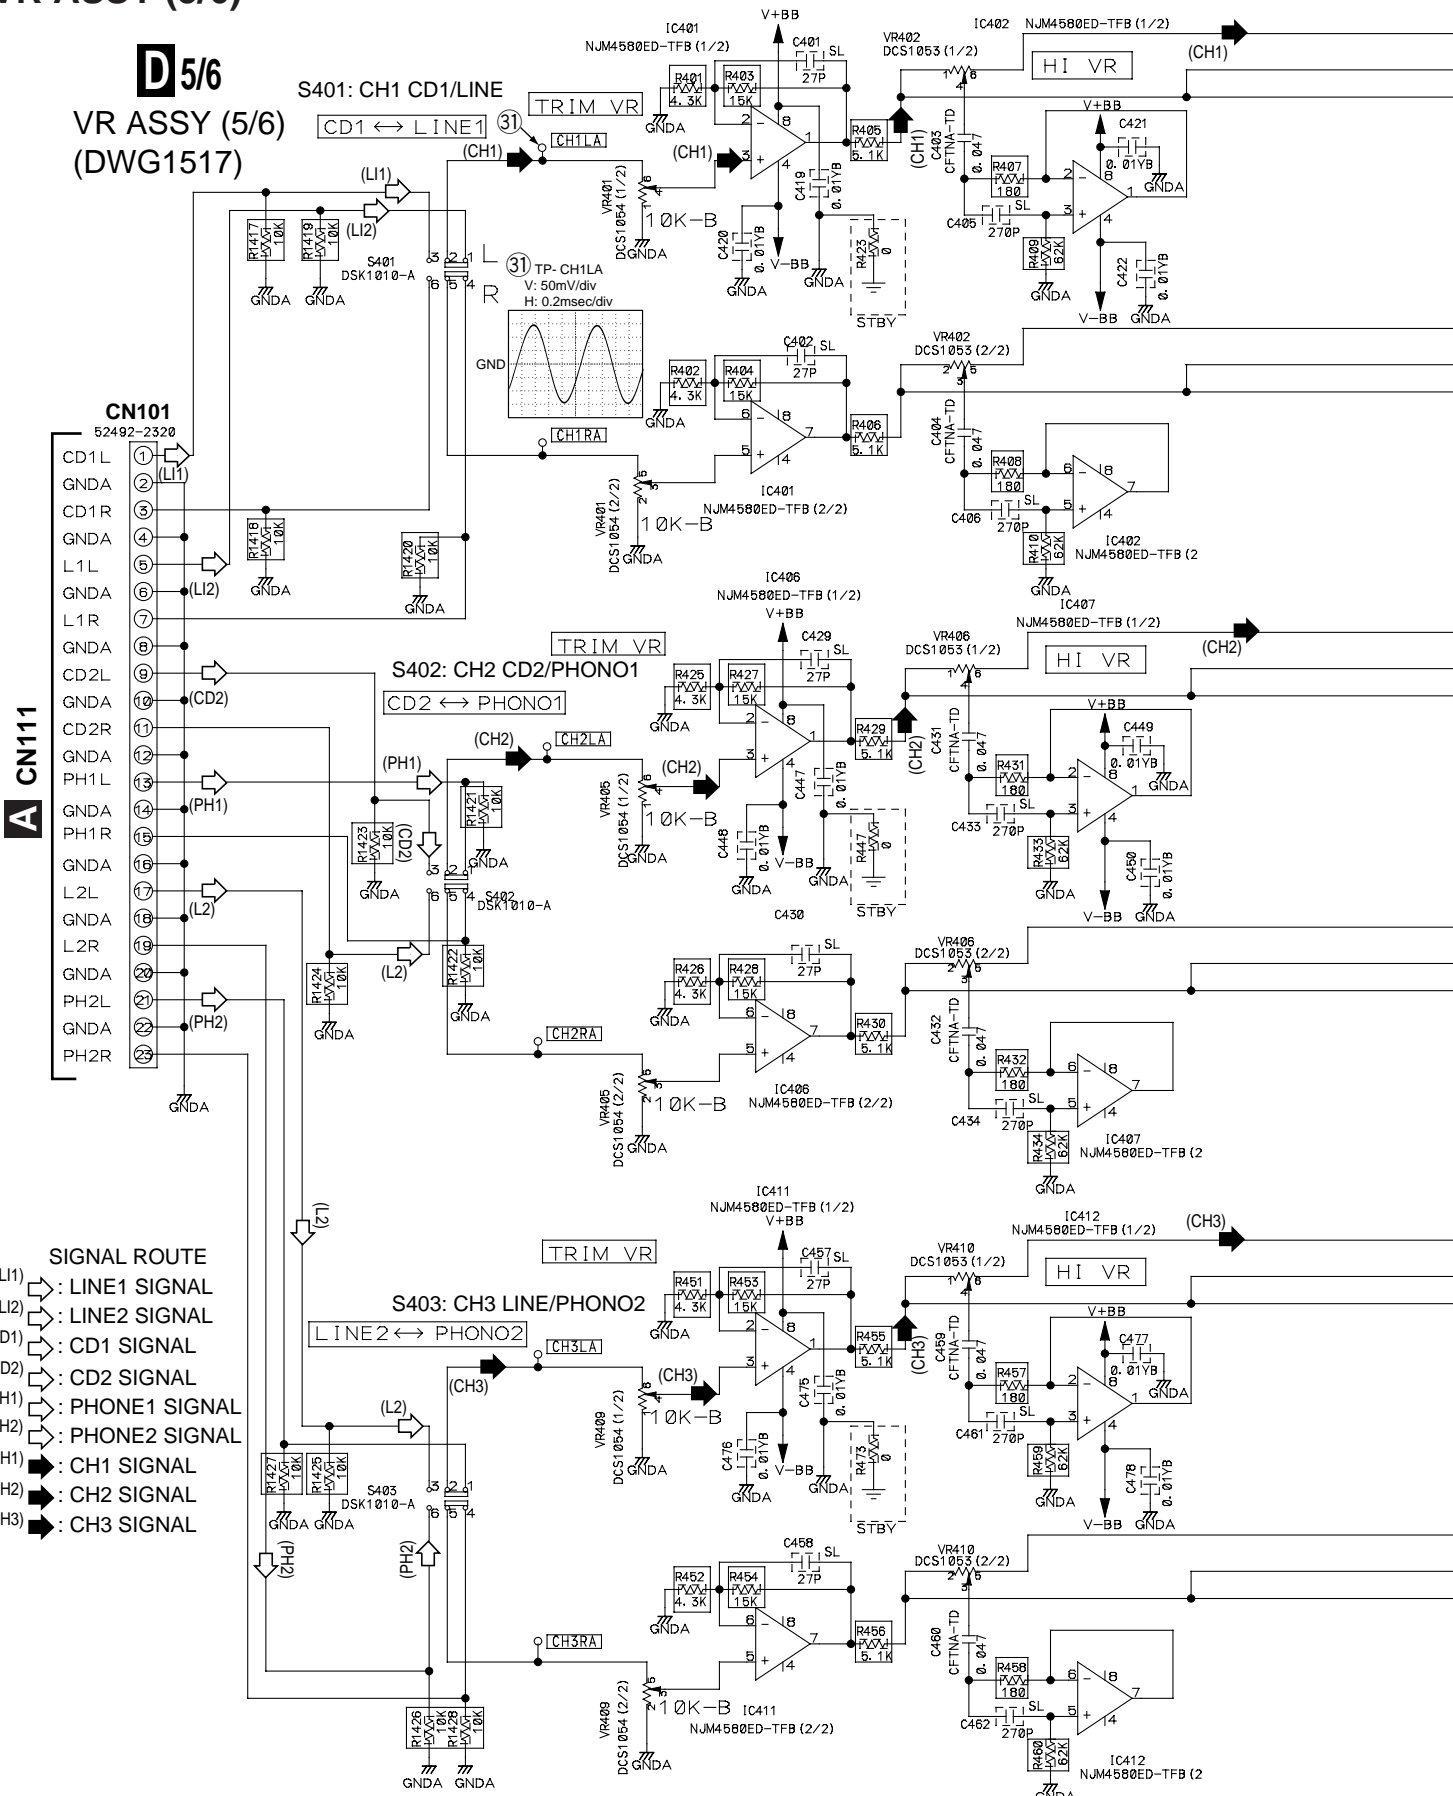


- SIGNAL ROUTE**
- (L1) : LINE1 SIGNAL
 - (L2) : LINE2 SIGNAL
 - (CD1) : CD1 SIGNAL
 - (CD2) : CD2 SIGNAL
 - (PH1) : PHONE1 SIGNAL
 - (PH2) : PHONE2 SIGNAL
 - (CH1) : CH1 SIGNAL
 - (CH2) : CH2 SIGNAL
 - (CH3) : CH3 SIGNAL

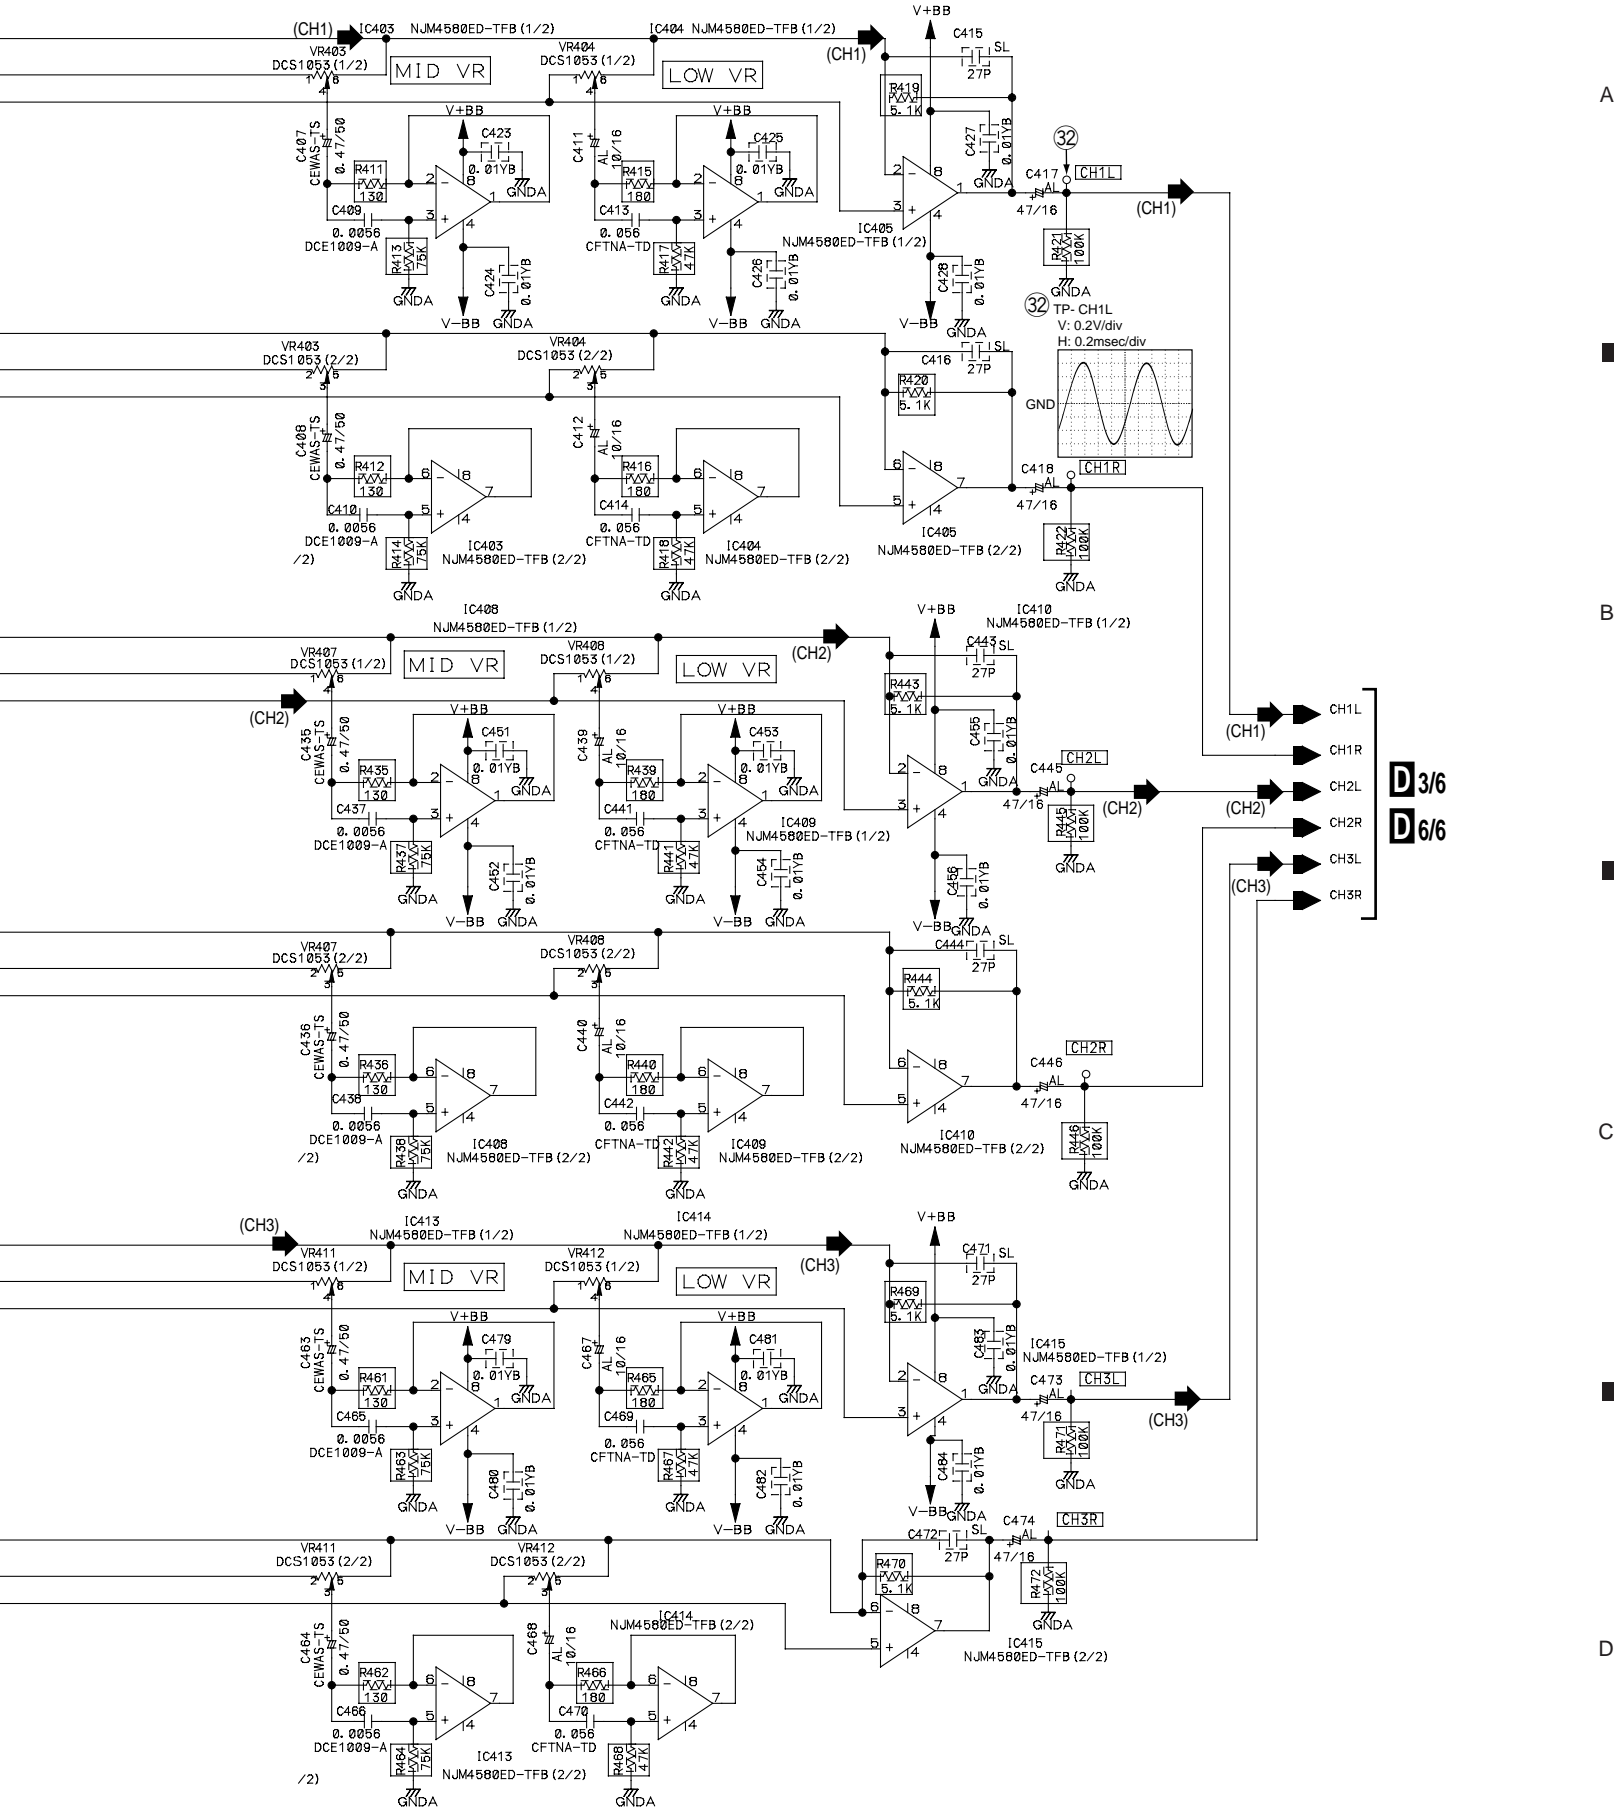


3.10 VR (6/6) and C.F ASSYS


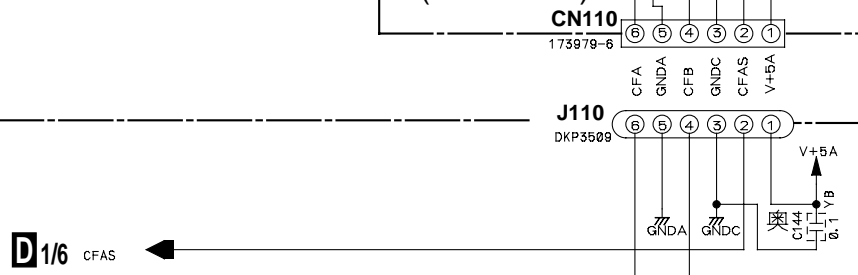
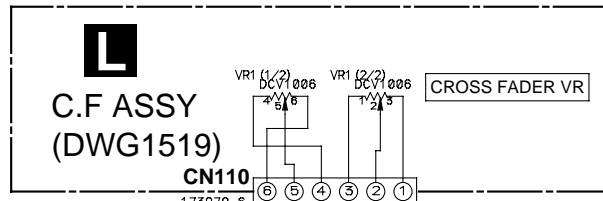


- SIGNAL ROUTE
- (MIC) ➔ MIC SIGNAL
 - (CH1) ➔ CH1 SIGNAL
 - (CH2) ➔ CH2 SIGNAL
 - (CH3) ➔ CH3 SIGNAL
 - (CH4) ➔ CH4 SIGNAL

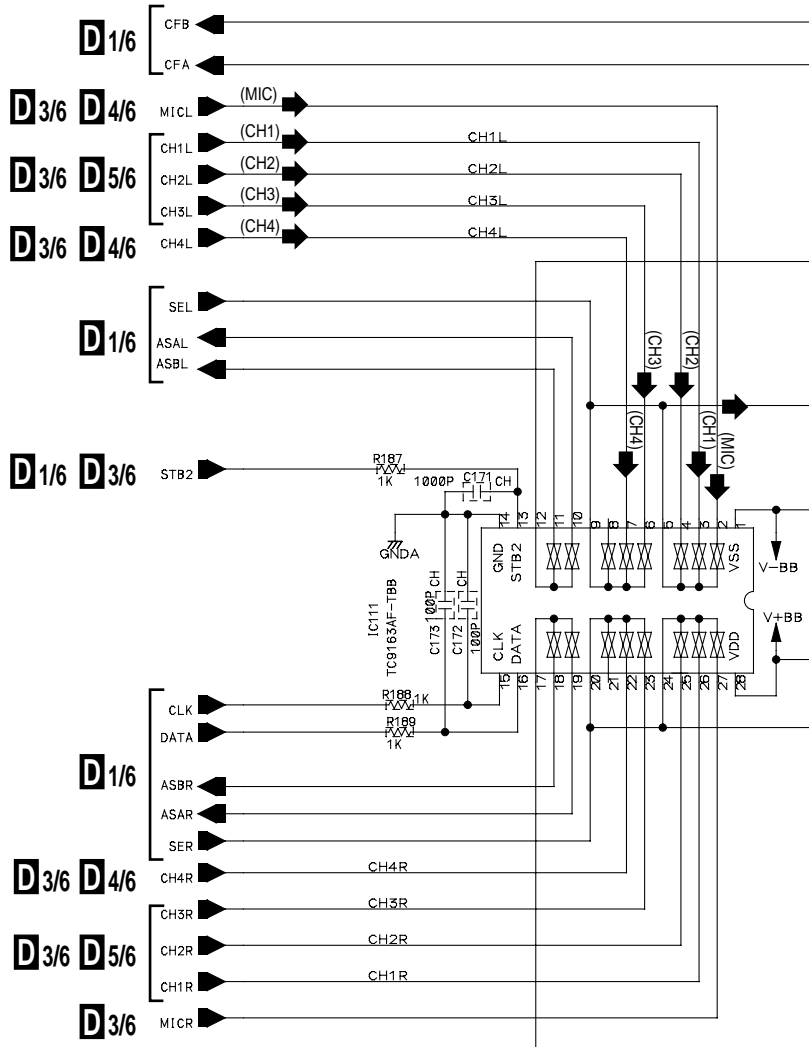

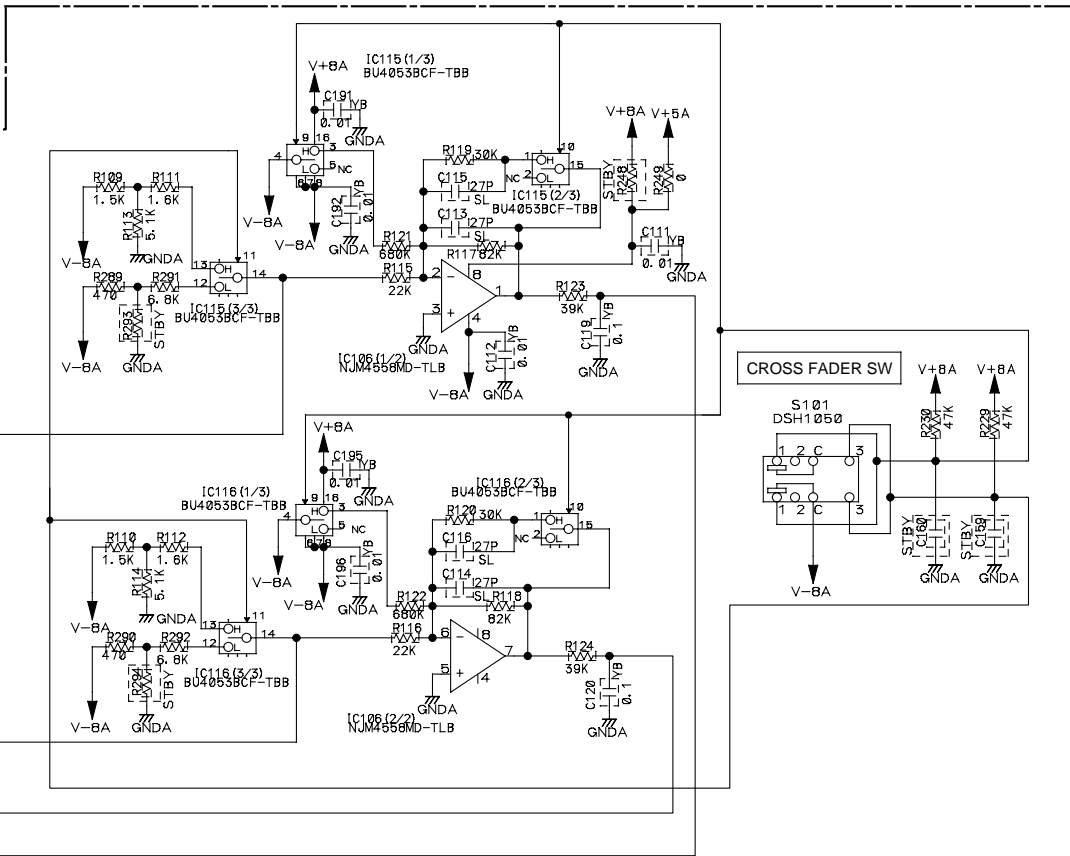

D 6/6
VR ASSY (6/6)
(DWG1517)

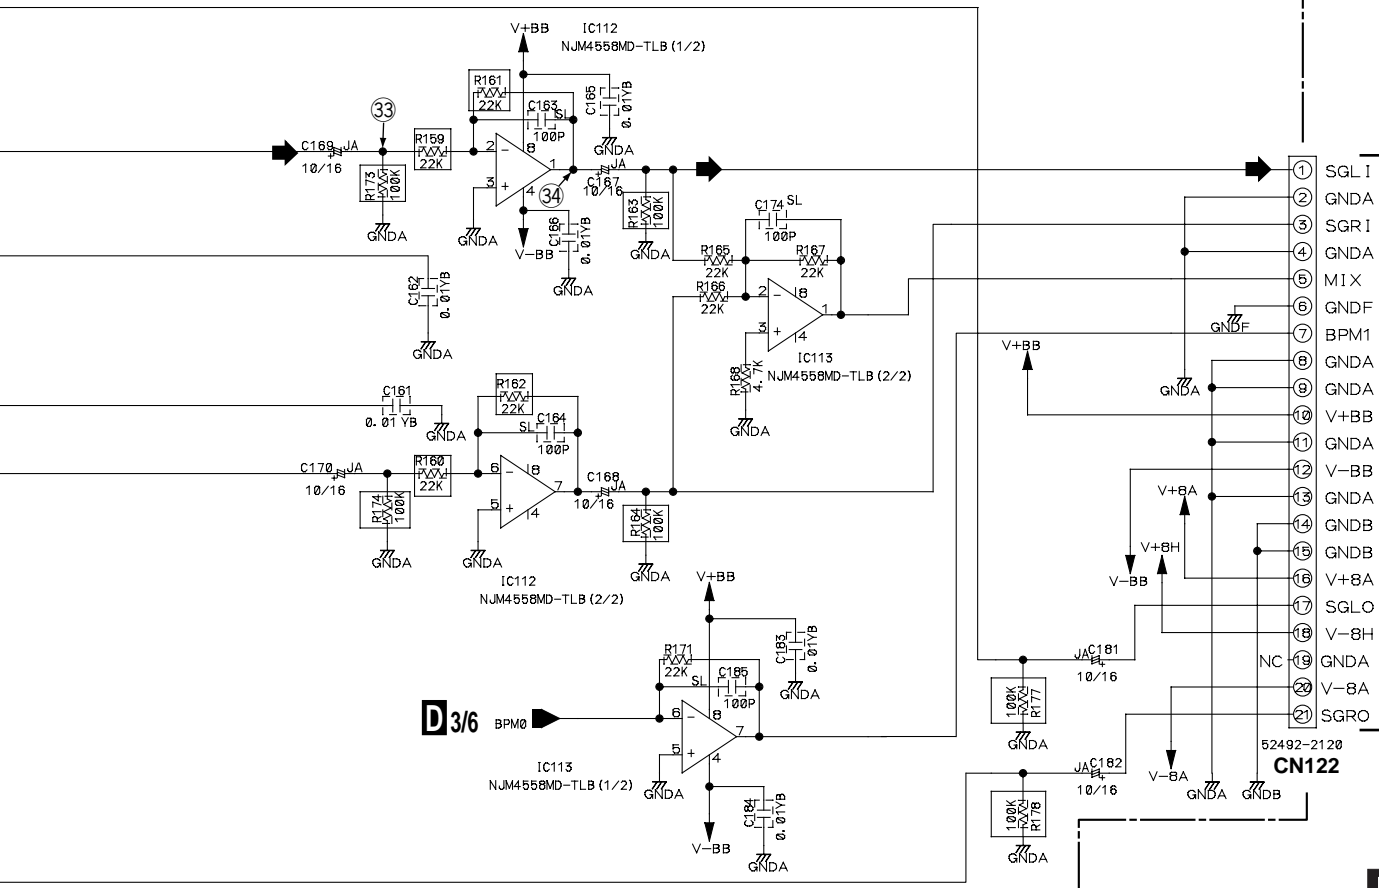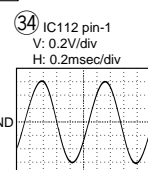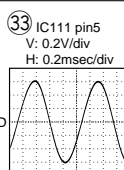


D 3/6 BPM0




- M 1/2 CN522**
- 1 SGL I
 - 2 GNDA
 - 3 SGR I
 - 4 GNDA
 - 5 MIX
 - 6 GNDF
 - 7 BPM1
 - 8 GNDA
 - 9 GNDA
 - 10 V+BB
 - 11 GNDA
 - 12 V-BB
 - 13 GNDA
 - 14 GNDB
 - 15 GNDB
 - 16 V+8A
 - 17 SGL O
 - 18 V-8H
 - 19 GNDA
 - 20 V-8A
 - 21 SGRO

3.11 DSP ASSY (1/2)


A

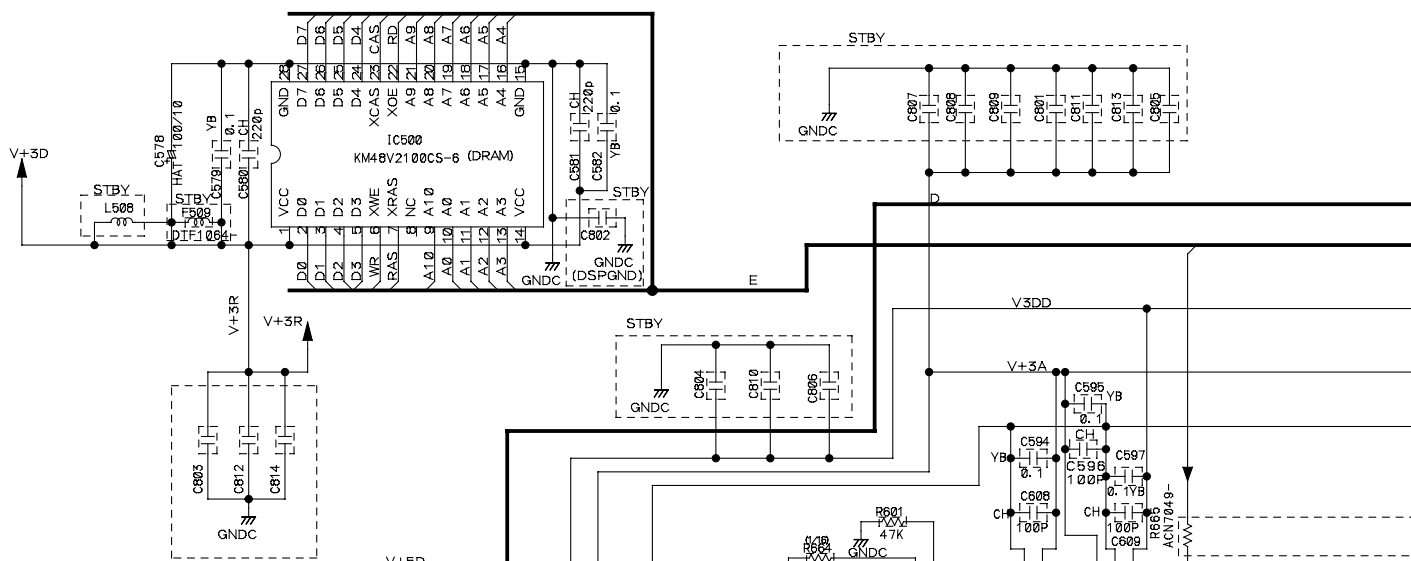


B

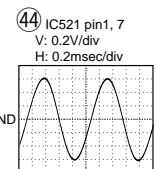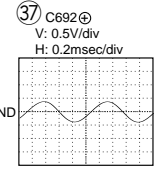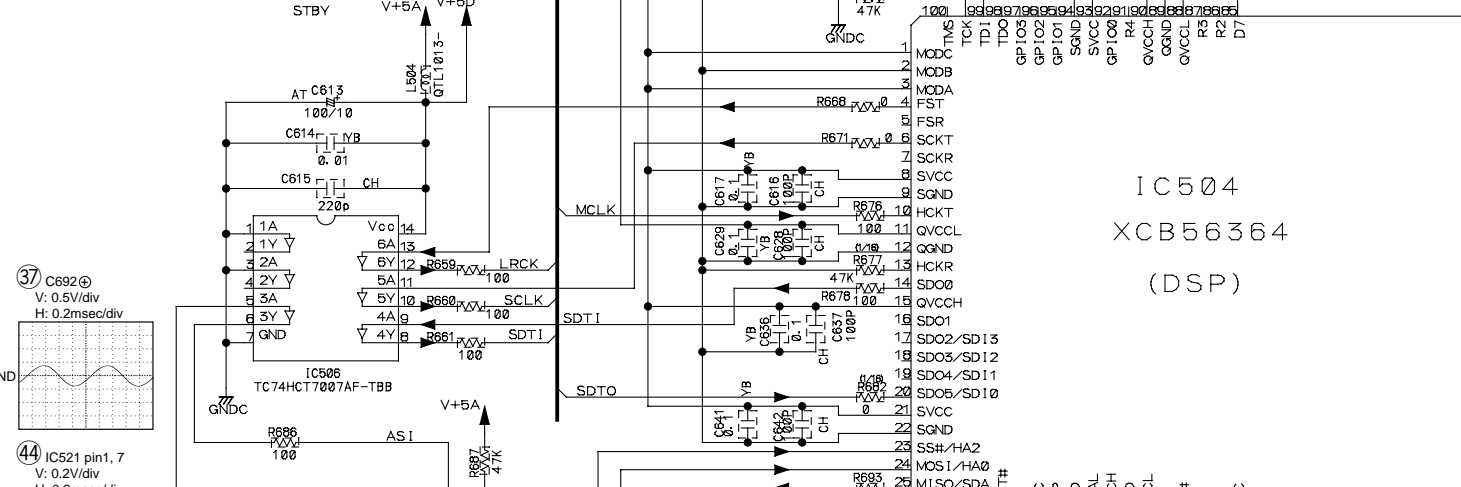


C

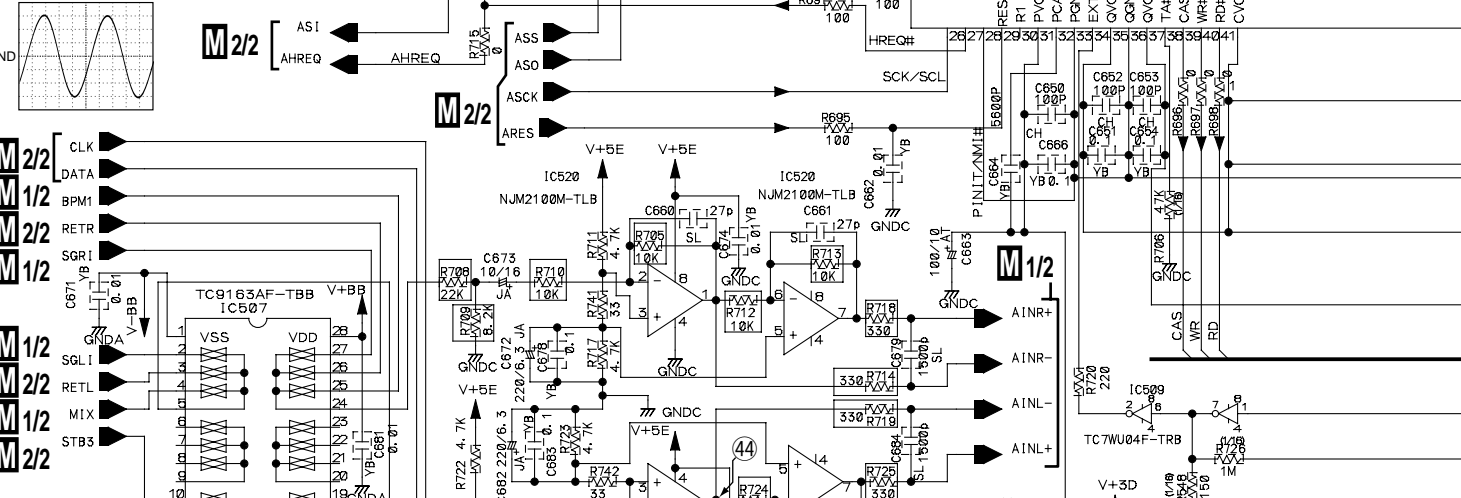

D


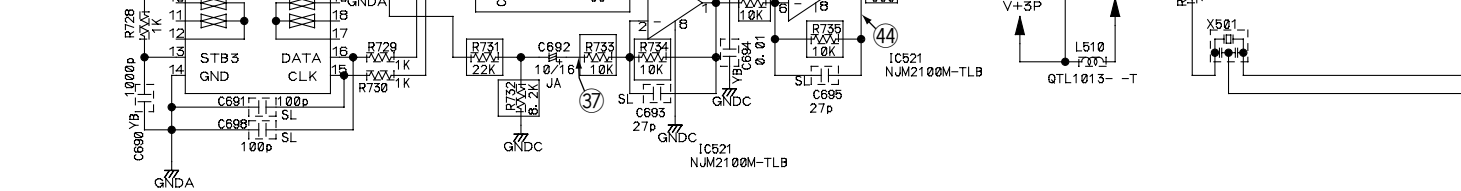


3.12 DSP ASSY (2/2)

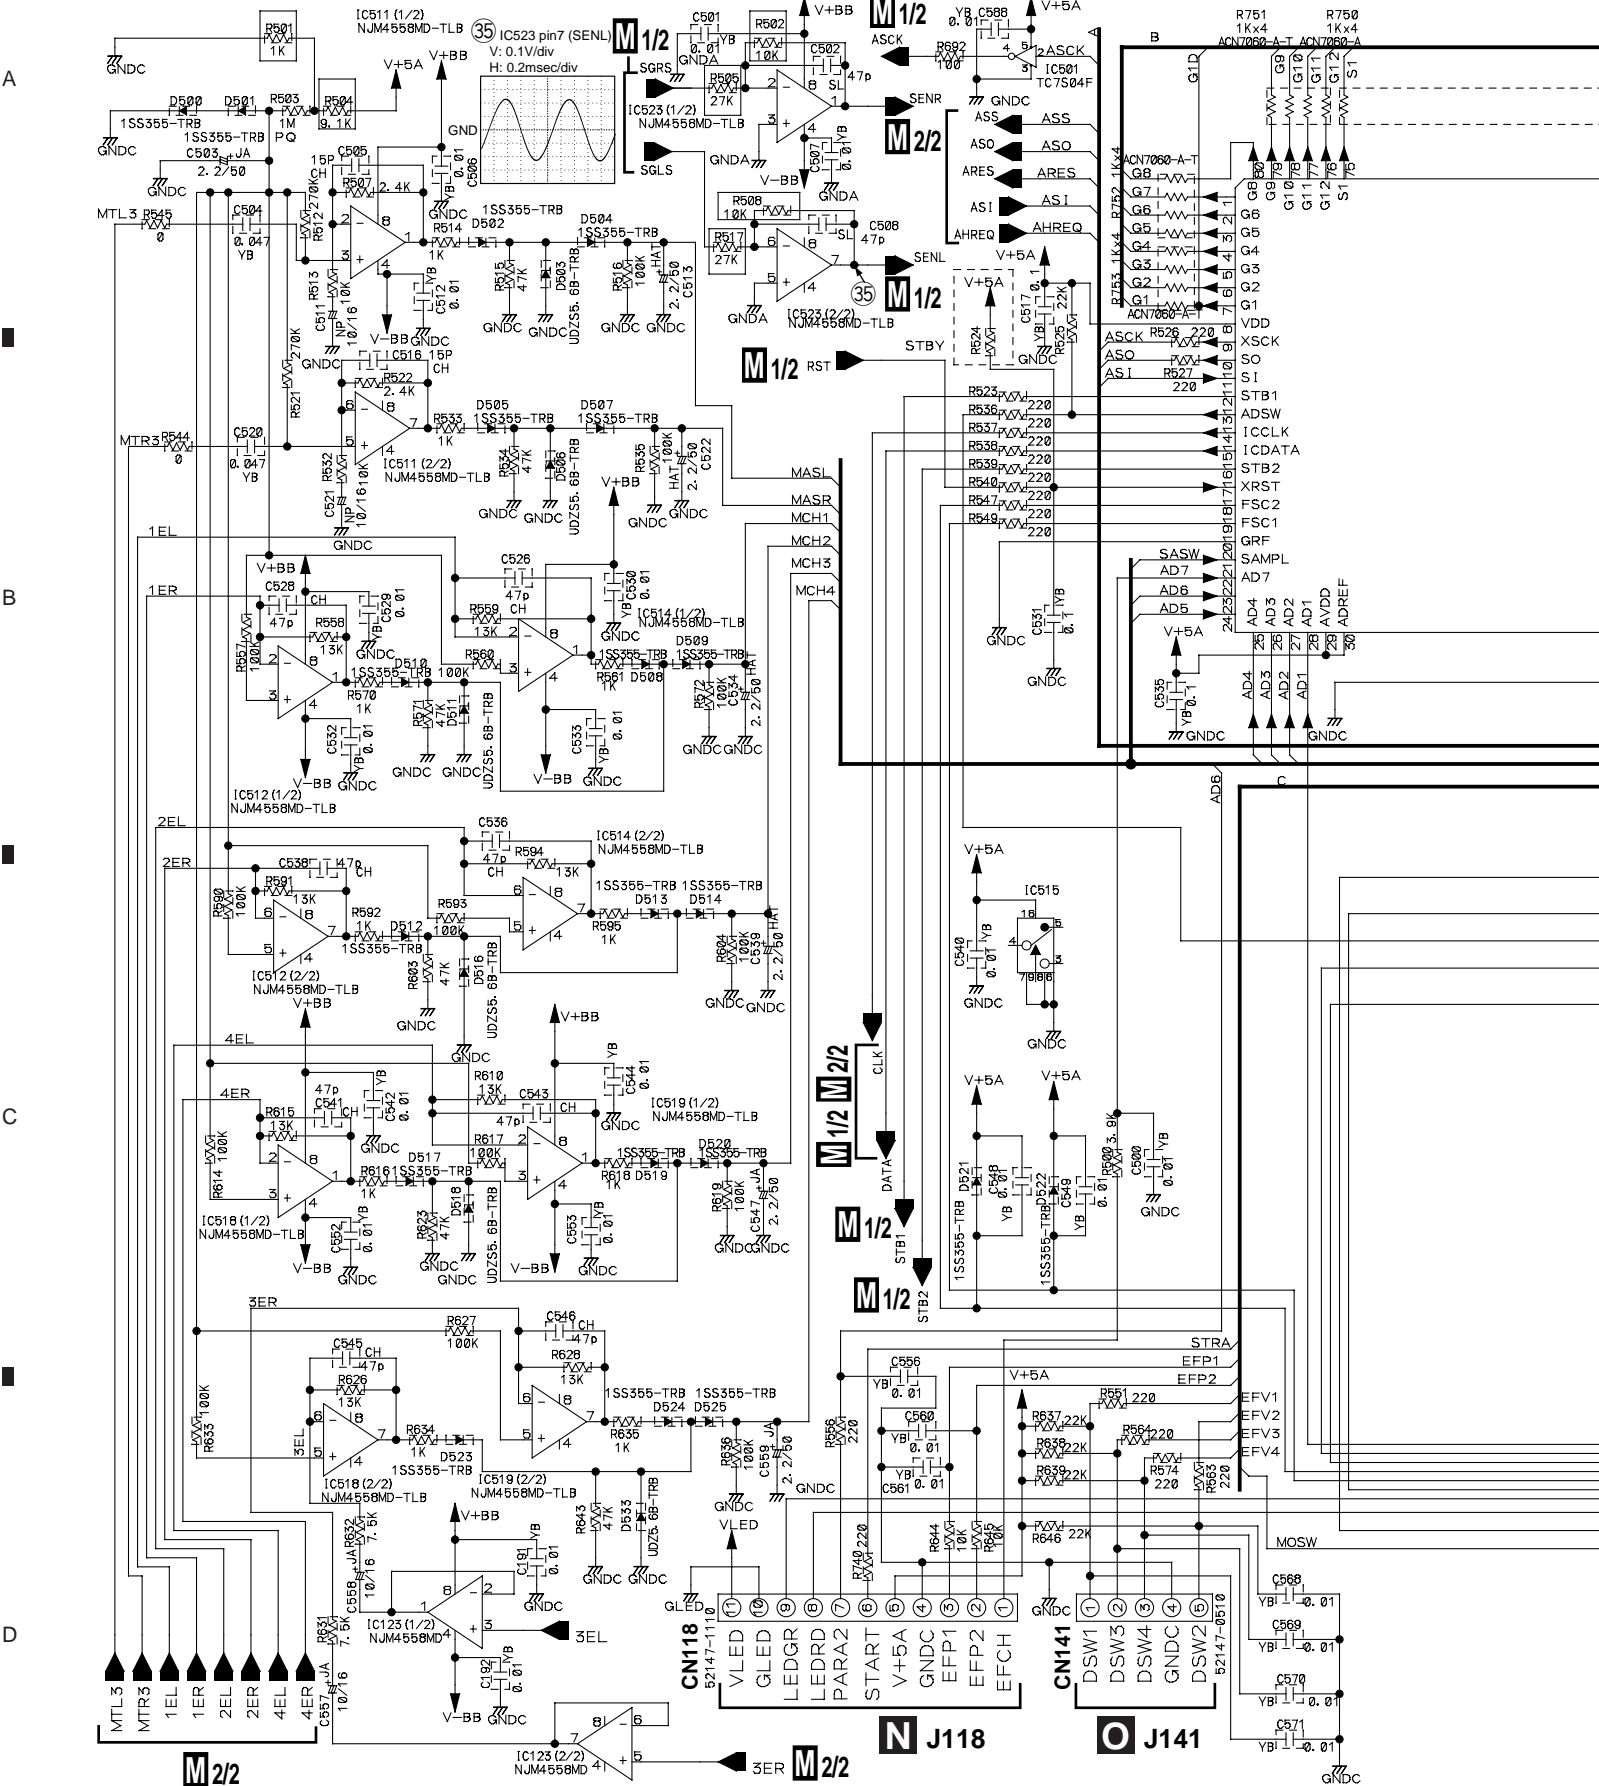

M 2/2

M 2/2 DSP ASSY (2/2) (DWX1999)

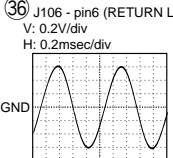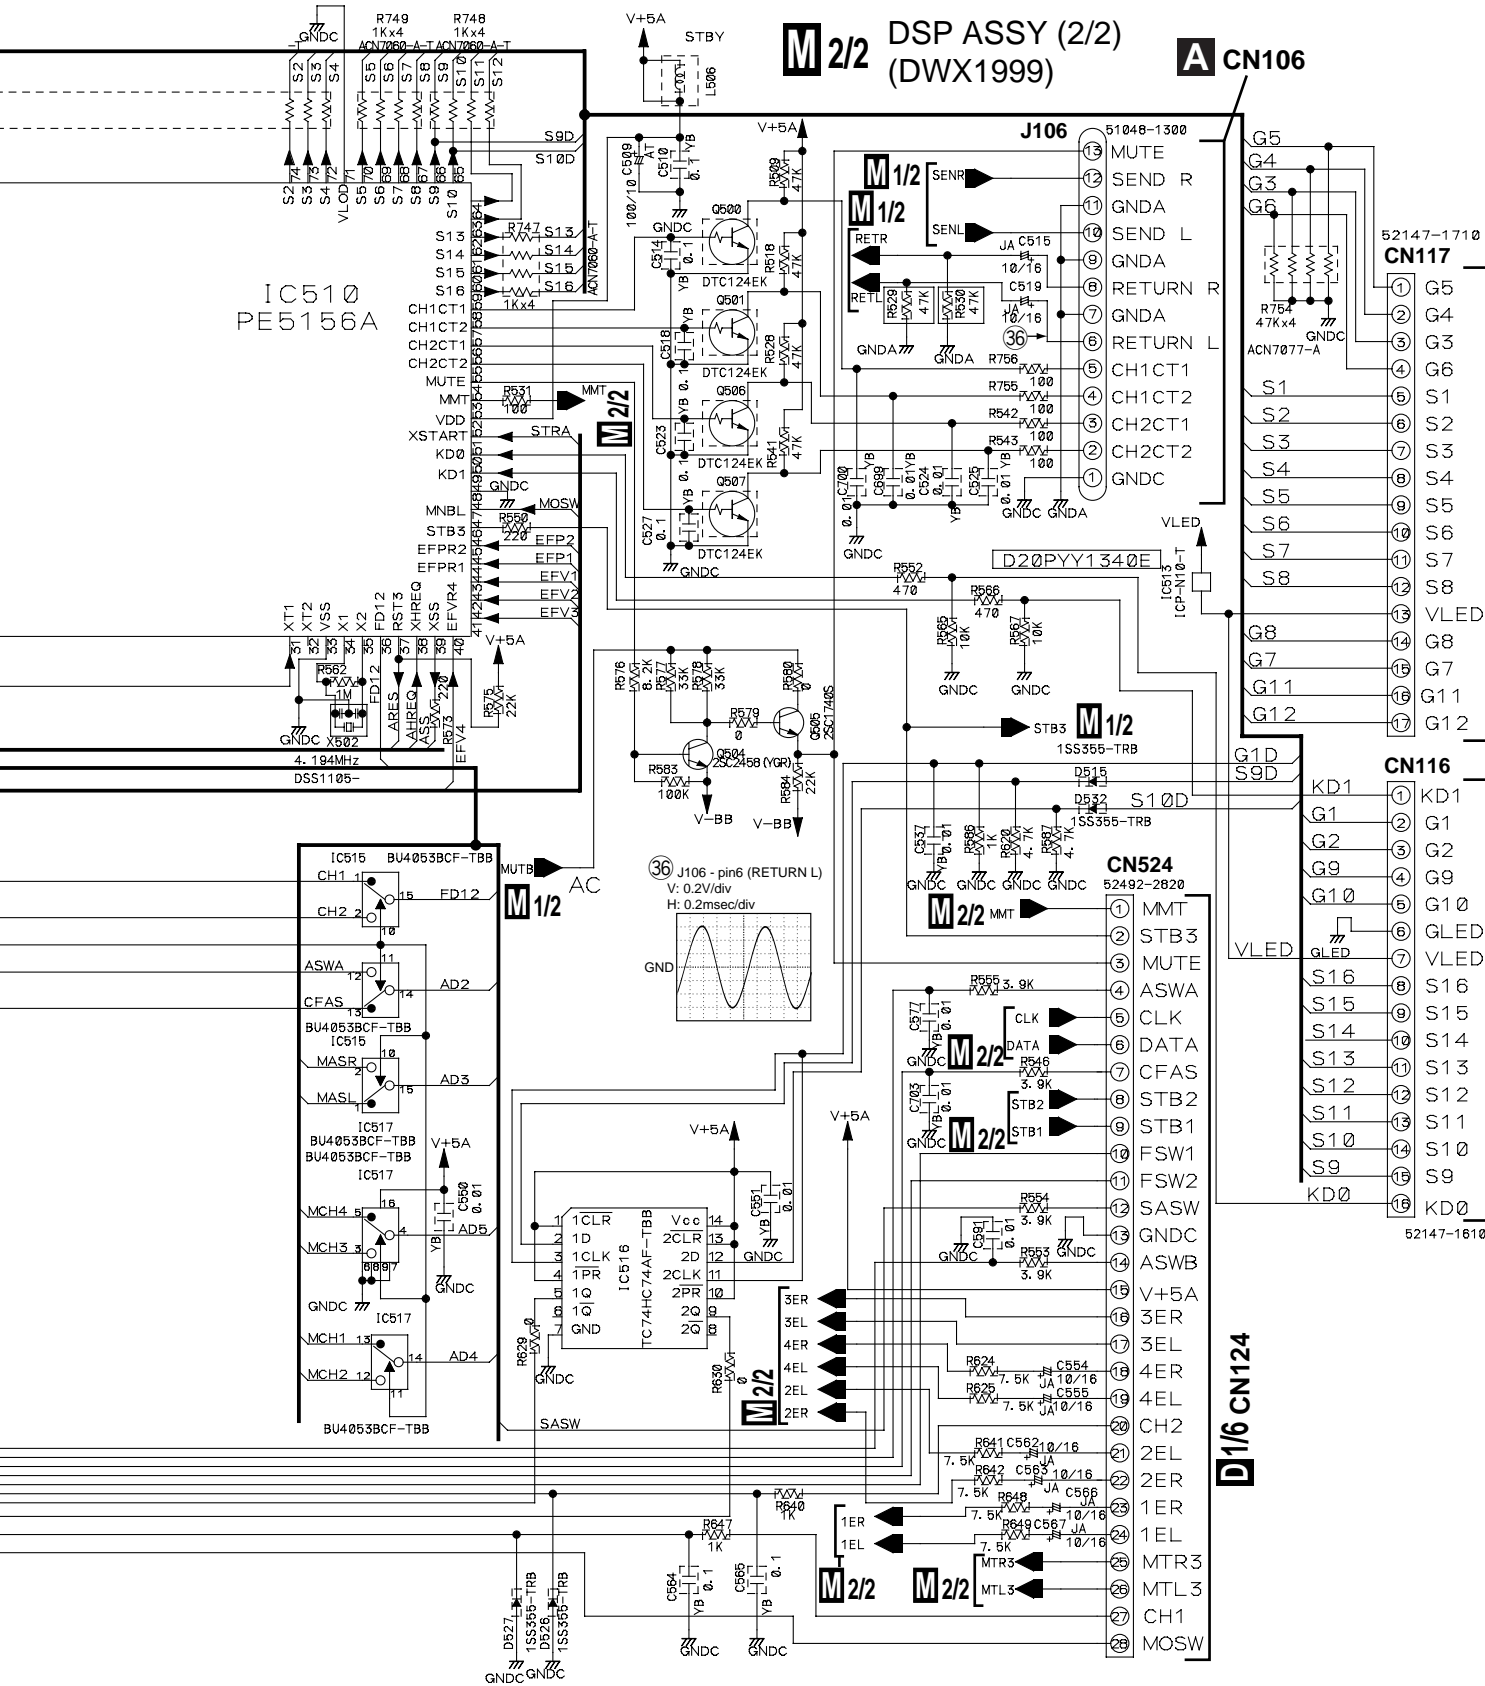

Connector	Pin	Signal
CN117	1	G5
	2	G4
	3	G3
	4	G6
	5	S1
	6	S2
	7	S3
	8	S4
	9	S5
	10	S6
	11	S7
	12	S8
	13	VLED
	14	G8
	15	G7
	16	G11
	17	G12
CN116	1	KD1
	2	G1
	3	G2
	4	G9
	5	G10
	6	GLED
	7	VLED
	8	S16
	9	S15
	10	S14
	11	S13
	12	S12
	13	S11
	14	S10
	15	S9
	16	KD0
	CN124	1
2		STB3
3		MUTE
4		ASWA
5		CLK
6		DATA
7		CFAS
8		STB2
9		STB1
10		FSW1
11		FSW2
12		SASW
13		GND
14		ASWB
15		V+5A
16		3ER
17		3EL
18		4ER
19		4EL
20		CH2
21		2EL
22		2ER
23		1ER
24		1EL
25		MTR3
26		MTL3
27		CH1
28		MOSW

■ Voltages

M 1/2 DSP ASSY

IC500	
PIN NO.	VOLTAGE
1	3.44V
2	1.60V
3	1.60V
4	1.60V
5	1.60V
6	3.37V
7	3.33V
8	0V
9	1.76V
10	3.26V
11	3.17V
12	1.73V
13	1.73V
14	3.44V
15	21.5mV
16	1.73V
17	1.70V
18	1.75V
19	1.75V
20	1.69V
21	1.75V
22	3.37V
23	3.38V
24	1.65V
25	1.60V
26	1.60V
27	1.60V
28	21.5mV

IC502	
PIN NO.	VOLTAGE
1	5.02V
2	24.0mV
3	2.48V
4	2.52V
5	2.48V
6	2.52V
7	5.01V
8	1.49mV
9	1.49mV
10	5.01V
11	2.49V
12	2.49V
13	3.00V
14	1.52V
15	2.44V
16	5.08V
17	15.0mV
18	15.0mV
19	15.0mV
20	15.0mV
21	5.08V
22	14.7mV
23	5.0V
24	5.0V
25	4.89V
26	2.51V
27	2.51V
28	2.50V

IC503	
PIN NO.	VOLTAGE
1	25.3V
2	24.6V
3	13.1mV
4	13.1mV
5	4.97V
6	2.56V
7	2.56V
8	4.97V

IC504			
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
1	3.44V	51	1.73V
2	23.9mV	52	1.73V
3	3.44V	53	1.73V
4	1.73V	54	1.73V
5	24.2mV	55	3.44V
6	1.77V	56	24.0mV
7	24.2mV	57	1.76V
8	3.44V	58	1.76V
9	24.0mV	59	1.76V
10	2.45V	60	1.76V
11	3.43V	61	3.44V
12	24.5mV	62	1.76V
13	24.9mV	63	3.44V
14	24.9mV	64	24.7mV
15	3.44V	65	24.8mV
16	697mV	66	3.44V
17	-	67	1.73V
18	550mV	68	1.73V
19	1.55V	69	-
20	3.44V	70	-
21	23.8mV	71	3.44V
22	4.89V	72	24.0mV
23	17.2mV	73	-
24	520mV	74	3.44V
25	-	75	1.67V
26	18.9mV	76	1.65V
27	52.3mV	77	1.65V
28	23.8mV	78	1.65V
29	4.95V	79	3.44V
30	3.44V	80	24.6mV
31	23.5mV	81	1.65V
32	1.33V	82	1.65V
33	23.5mV	83	1.65V
34	3.44V	84	1.65V
35	24.9mV	85	0V
36	24.9mV	86	0V
37	3.43V	87	3.44V
38	25.8mV	88	2.44mV
39	3.37V	89	3.44V
40	3.37V	90	0V
41	3.37V	91	3.44V
42	3.44V	92	3.44V
43	197mV	93	24.3mV
44	3.44V	94	3.44V
45	3.33V	95	1.09V
46	3.26V	96	1.09V
47	3.17V	97	1.06V
48	3.44mV	98	1.68V
49	26.0mV	99	1.67V
50	1.73V	100	3.42V

IC505	
PIN NO.	VOLTAGE
1	10.1mV
2	12.0mV
3	12.0mV
4	-15.1V
5	12.4mV
6	12.4mV
7	11.6mV
8	14.8V

IC506	
PIN NO.	VOLTAGE
1	13.0mV
2	13.2mV
3	13.0V
4	13.2V
5	2.26V
6	13.5mV
7	0V
8	3.0V
9	2.1V
10	2.48V
11	1.83V
12	2.49V
13	1.74V
14	4.97V

IC507	
PIN NO.	VOLTAGE
1	-15.1V
2	14.9mV
3	7.7mV
4	14.9mV
5	14.9mV
6	-
7	-
8	-
9	-
10	-
11	-
12	-
13	15.9mV
14	7.6mV
15	4.96V
16	17.2mV
17	-
18	-
19	-
20	-
21	-
22	-
23	-
24	-
25	14.9mV
26	14.7mV
27	14.9mV
28	14.8V

IC509	
PIN NO.	VOLTAGE
1	1.68V
2	1.75V
3	23.0mV
4	23.0mV
5	3.44V
6	1.82V
7	1.82V
8	3.44V

IC520	
PIN NO.	VOLTAGE
1	2.53V
2	2.52V
3	2.52V
4	14.9mV
5	2.50V
6	2.50V
7	2.48V
8	5.01V

IC521	
PIN NO.	VOLTAGE
1	2.52V
2	2.52V
3	2.52V
4	15.0mV
5	2.50V
6	2.50V
7	2.49V
8	5.01V

IC526	
PIN NO.	VOLTAGE
1	1.26V
2	18.4mV
3	4.3V

IC527	
PIN NO.	VOLTAGE
1	5.10V
2	11.1mV
3	13.38V

M 2/2 DSP ASSY

IC123	
PIN NO.	VOLTAGE
1	11.9mV
2	11.9mV
3	12.1mV
4	-15.1V
5	12.0mV
6	12.5mV
7	12.5mV
8	14.8V

IC510			
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
1	333mV	41	4.95V
2	328mV	42	13.5mV
3	617mV	43	4.95V
4	328mV	44	4.96V
5	328mV	45	4.96V
6	333mV	46	15.9mV
7	317mV	47	4.93V
8	4.96V	48	14.0mV
9	4.96V	49	14.2mV
10	17.3mV	50	14.2mV
11	17.2mV	51	4.96V
12	17.2mV	52	4.96V
13	43.7mV	53	12mV
14	4.96V	54	4.83V
15	17.2mV	55	13.3mV
16	17.1mV	56	13.3mV
17	0V	57	13.3mV
18	4.96V	58	13.3mV
19	4.96V	59	10.7mV
20	13.3mV	60	387mV
21	4.96V	61	1.15V
22	4.51V	62	1.52V
23	2.53V	63	1.90V
24	25.7mV	64	1.16V
25	27.5mV	65	1.89V
26	24.4mV	66	1.89V
27	3.60V	67	52.9mV
28	14.0mV	68	-
29	4.97V	69	-
30	4.97V	70	402mV
31	14.0mV	71	14.0mV
32	4.97V	72	-
33	14.0mV	73	-
34	2.34V	74	-
35	2.34V	75	-
36	4.94V	76	334mV
37	3.72V	77	335mV
38	62.6mV	78	333mV
39	4.90V	79	333mV
40	4.96V	80	333mV

IC511	
PIN NO.	VOLTAGE
1	392mV
2	392mV
3	376mV
4	-15.1V
5	377mV
6	390mV
7	390mV
8	14.8V

IC512	
PIN NO.	VOLTAGE
1	387mV
2	387mV
3	376mV
4	-15.1V
5	376mV
6	387mV
7	387mV
8	14.8V

IC514	
PIN NO.	VOLTAGE
1	388mV
2	388mV
3	378mV
4	-15.1V
5	379mV
6	398mV
7	390mV
8	14.8V

IC515	
PIN NO.	VOLTAGE
1	1.0V
2	1.29V
3	600mV
4	349mV
5	-
6	17.0mV
7	17.0mV
8	17.0mV
9	430mV
10	435mv
11	435mV
12	3.47V
13	4.95V
14	3.60V
15	1.26V
16	4.96V

IC516	
PIN NO.	VOLTAGE
1	4.97V
2	1.64V
3	316mV
4	4.97V
5	4.95V
6	12.5mV
7	12.5mV
8	12.5mV
9	4.95V
10	4.97V
11	316mV
12	1.68V
13	4.97V
14	4.97V

IC517	
PIN NO.	VOLTAGE
1	23.7mV
2	25.4mV
3	28.6mV
4	26.4mV
5	26.2mV
6	17.1mV
7	17.1mV
8	17.1mV
9	438mV
10	438mV
11	438mV
12	28.2mV
13	30.2mV
14	29.5mV
15	25.3mV
16	4.96V

IC518	
PIN NO.	VOLTAGE
1	388mV
2	388mV
3	377mV
4	-15.1V
5	375mV
6	384mV
7	384mV
8	14.8V

IC519	
PIN NO.	VOLTAGE
1	385mV
2	385mV
3	375mV
4	-15.1V
5	376mV
6	385mV
7	385mV
8	14.8V

IC523	
PIN NO.	VOLTAGE
1	7.8mV
2	8.0mV
3	7.6mV
4	-15.1V
5	7.8mV
6	8.0mV
7	7.6mV
8	14.8V

D1/6 VR ASSY

IC103	
PIN NO.	VOLTAGE
1	-15.1V
2	12.1mV
3	12.1mV
4	12.1mV
5	12.1mV
6	-23.1mV
7	12.1mV
8	12.1mV
9	-11.0mV
10	12.1mV
11	12.1mV
12	-11.0mV
13	17.1mV
14	11.7mV
15	4.96V
16	17.0mV
17	2.0mV
18	12.1mV
19	12.1mV
20	7.0mV
21	12.1mV
22	12.1mV
23	-23.7mV
24	12.1mV
25	12.1mV
26	12.1mV
27	12.1mV
28	14.8V

IC104	
PIN NO.	VOLTAGE
1	-15.1V
2	-63mV
3	11.7mV
4	-14.8V
5	-14.8V
6	4.96V
7	13.1mV
8	11.7mV
9	11.7mV
10	11.7mV
11	12.7mV
12	12.1mV
13	17.0mV
14	12.1mV
15	4.96V
16	17.0mV
17	12.1mV
18	12.7mV
19	11.7mV
20	11.7mV
21	11.7mV
22	13.0mV
23	4.96V
24	7.98V
25	7.98V
26	7.98V
27	7.98V
28	14.8V

IC105	
PIN NO.	VOLTAGE
1	-15.1V
2	12.1mV
3	10.8mV
4	10.8mV
5	12.8mV
6	10.8mV
7	10.8mV
8	11.7mV
9	11.7mV
10	11.7mV
11	11.7mV
12	12.2mV
13	15.7mV
14	11.0mV
15	4.96V
16	17.0mV
17	11.7mV
18	11.7mV
19	11.7mV
20	11.7mV
21	11.7mV
22	10.8mV
23	10.8mV
24	11.8mV
25	10.9mV
26	10.9mV
27	11.8mV
28	14.8V

IC107	
PIN NO.	VOLTAGE
1	7.91V
2	4.29V
3	290mV
4	-7.95V
5	-7.95V
6	12.1mV
7	0V
8	11.3mV
9	11.3mV
10	0V
11	12.3mV
12	-7.95V
13	-7.95V
14	-20mV
15	4.29V
16	7.91V

IC108	
PIN NO.	VOLTAGE
1	7.91V
2	4.29V
3	290mV
4	-7.95V
5	-7.95V
6	12.1mV
7	0V
8	11.7mV
9	11.7mV
10	0V
11	12.8mV
12	-7.95V
13	-7.95V
14	-20mV
15	4.29V
16	7.91V

IC109	
PIN NO.	VOLTAGE
1	20.0mV
2	13.0mV
3	13.0mV
4	-15.1mV
5	13.0mV
6	13.0mV
7	19.5mV
8	14.8V

IC110	
PIN NO.	VOLTAGE
1	9.6mV
2	11.5mV
3	11.5mV
4	-15.1V
5	11.5mV
6	11.5mV
7	10.1mV
8	14.8V

IC121	
PIN NO.	VOLTAGE
1	12.5mV
2	12.5mV
3	12.1mV
4	-15.1V
5	12.2mV
6	12.2mV
7	12.2mV
8	14.8V

IC122	
PIN NO.	VOLTAGE
1	12.2mV
2	12.2mV
3	12.2mV
4	-15.1V
5	12.2mV
6	12.2mV
7	12.2mV
8	14.8V

IC124	
PIN NO.	VOLTAGE
1	12.3mV
2	12.3mV
3	12.3mV
4	-15.1V
5	12.3mV
6	12.3mV
7	12.3mV
8	14.8V

D2/6 VR ASSY

IC311	
PIN NO.	VOLTAGE
1	-15.1V
2	0.2mV
3	0.2mV
4	0.2mV
5	0.2mV
6	0.2mV
7	0.2mV
8	0.2V
9	0.2V
10	0.2mV
11	0.2mV
12	17.1mV
13	0.2mV
14	4.96V
15	17.1mV
16	0.2mV
17	0.2mV
18	0.2mV
19	0.2mV
20	0.2mV
21	0.2mV
22	0.2mV
23	0.2mV
24	0.2mV
25	0.2mV
26	0.2mV
27	0.2mV
28	14.8V

IC308	
PIN NO.	VOLTAGE
1	0.2mV
2	0.2mV
3	0.2mV
4	0.2mV
5	4.93V
6	0.2mV
7	0.2mV
8	-7.49V
9	0.2mV
10	0.2mV
11	0.2mV
12	4.93V
13	0.2mV
14	0.2mV
15	0.2mV
16	7.91V

IC200	
PIN NO.	VOLTAGE
1	15.3mV
2	15.3mV
3	15.3mV
4	-15.1V
5	11.9mV
6	11.9mV
7	13.6mV
8	14.8V

IC202	
PIN NO.	VOLTAGE
1	12.3mV
2	12.3mV
3	12.4mV
4	-15.1V
5	12.5mV
6	12.5mV
7	12.5mV
8	14.8V

IC203	
PIN NO.	VOLTAGE
1	11.8mV
2	12.3mV
3	12.3mV
4	-15.1V
5	12.4mV
6	12.4mV
7	11.7mV
8	14.8V

IC204	
PIN NO.	VOLTAGE
1	13.0mV
2	11.0mV
3	11.0mV
4	-15.1V
5	11.9mV
6	11.9mV
7	13.6mV
8	14.8V

IC205	
PIN NO.	VOLTAGE
1	9.4mV
2	11.0mV
3	11.0mV
4	-15.1V
5	11.0mV
6	11.0mV
7	9.8mV
8	14.8V

IC306	
PIN NO.	VOLTAGE
1	-2.9mV
2	0.2mV
3	0.2mV
4	-7.94V
5	0.2mV
6	0.2mV
7	-2.8mV
8	7.91V

IC307, IC309	
PIN NO.	VOLTAGE
1	-2.7mV
2	0.2mV
3	0.2mV
4	-7.94V
5	0.2mV
6	0.2mV
7	-2.7V
8	7.91V

IC312	
PIN NO.	VOLTAGE
1	-2.2mV
2	1.1mV
3	1.1mV
4	-7.94V
5	0.6mV
6	1.2mV
7	1.2mV
8	7.91V

IC310	
PIN NO.	VOLTAGE
1	3.8mV
2	1.4mV
3	1.2mV
4	-7.94V
5	0.7mV
6	1.1mV
7	1.1mV
8	7.91V

D3/6 VR ASSY

IC101	
PIN NO.	VOLTAGE
1	-15.1V
2	11.4mV
3	12.2mV
4	12.2mV
5	12.2mV
6	11.4mV
7	12.2mV
8	12.2mV
9	12.2mV
10	9.8mV
11	11.2mV
12	12.1mV
13	17.1mV
14	11.8V
15	4.96V
16	17.1mV
17	11.7mV
18	11.7mV
19	9.8mV
20	12.2mV
21	12.2mV
22	12.2mV
23	11.4mV
24	12.2mV
25	12.2mV
26	11.4mV
27	12.2mV
28	14.8V

IC102	
PIN NO.	VOLTAGE
1	-15.1V
2	12.1mV
3	11.4mV
4	12.1mV
5	12.1mV
6	11.5mV
7	12.1mV
8	12.1mV
9	12.1mV
10	9.8mV
11	11.2mV
12	11.8mV
13	17.1mV
14	11.9mV
15	4.96V
16	17.2mV
17	11.8mV
18	11.8mV
19	9.8mV
20	12.2mV
21	12.2mV
22	12.2mV
23	12.2mV
24	12.2mV
25	12.2mV
26	12.2mV
27	12.2mV
28	14.8V

D4/6 VR ASSY

IC301	
PIN NO.	VOLTAGE
1	36.7mV
2	14.1mV
3	13.9mV
4	-15.1V
5	24.1mV
6	24.5mV
7	12.3mV
8	14.8V

IC302	
PIN NO.	VOLTAGE
1	34.6mV
2	30.6mV
3	38.1mV
4	-15.1V
5	11.7mV
6	12.1mV
7	12.1mV
8	14.8V

IC303	
PIN NO.	VOLTAGE
1	34.8mV
2	34.8mV
3	34.8mV
4	-15.1V
5	15.4mV
6	15.6mV
7	15.6mV
8	14.8V

IC304	
PIN NO.	VOLTAGE
1	35.7mV
2	35.7mV
3	35.7mV
4	-15.9V
5	35.7mV
6	35.7mV
7	35.7mV
8	14.8V

IC416	
PIN NO.	VOLTAGE
1	12.8mV
2	12.8mV
3	12.8mV
4	-15.1V
5	12.8mV
6	12.8mV
7	12.8mV
8	14.8V

IC417	
PIN NO.	VOLTAGE
1	19.3mV
2	19.3mV
3	19.3mV
4	-15.1V
5	19.3mV
6	19.3mV
7	19.3mV
8	14.8V

IC418	
PIN NO.	VOLTAGE
1	21.0mV
2	21.0mV
3	21.0mV
4	-15.1V
5	21.0mV
6	21.0mV
7	21.0mV
8	14.8V

IC419	
PIN NO.	VOLTAGE
1	17.5mV
2	17.5mV
3	17.5mV
4	-15.1V
5	17.5mV
6	17.5mV
7	17.5mV
8	14.8V

IC420	
PIN NO.	VOLTAGE
1	13.2mV
2	13.2mV
3	13.2mV
4	-15.1V
5	13.2mV
6	13.2mV
7	13.2mV
8	14.8V

D6/6 VR ASSY

IC111	
PIN NO.	VOLTAGE
1	-15.1V
2	11.2mV
3	12.2mV
4	12.2mV
5	12.2mV
6	12.2mV
7	12.2mV
8	0V
9	12.2mV
10	4.2mV
11	0V
12	11.2mV
13	17.1mV
14	11.8mV
15	4.96V
16	17.1mV
17	11.7mV
18	11.7mV
19	9.8mV
20	12.2mV
21	12.2mV
22	12.2mV
23	11.4mV
24	12.2mV
25	12.2mV
26	11.4mV
27	12.2mV
28	14.8V

IC115	
PIN NO.	VOLTAGE
1	11.1mV
2	272mV
3	11.1mV
4	-7.94V
5	-7.9V
6	-7.95V
7	-7.95V
8	-7.95V
9	-7.95V
10	-7.95V
11	7.87V
12	-7.95V
13	-184mV
14	-57.8mV
15	272mV
16	7.91V

IC116	
PIN NO.	VOLTAGE
1	-2.69V
2	4.31V
3	-2.54V
4	-7.95V
5	-7.95V
6	-7.95V
7	-7.95V
8	-7.95V
9	-7.95V
10	-7.95V
11	7.89V
12	-7.95V
13	-4.64V
14	-4.64V
15	4.31V
16	7.91V

D5/6 VR ASSY

IC401, 406, 411	
PIN NO.	VOLTAGE
1	12.8mV
2	12.8mV
3	12.8mV
4	-15.1V
5	12.8mV
6	12.8mV
7	12.8mV
8	14.8V

IC402, 407, 412	
PIN NO.	VOLTAGE
1	19.3mV
2	19.3mV
3	19.3mV
4	-15.1V
5	19.3mV
6	19.3mV
7	19.3mV
8	14.8V

IC403, 408, 413	
PIN NO.	VOLTAGE
1	21.0mV
2	21.0mV
3	21.0mV
4	-15.1V
5	21.0mV
6	21.0mV
7	21.0mV
8	14.8V

IC404, 409, 414	
PIN NO.	VOLTAGE
1	17.5mV
2	17.5mV
3	17.5mV
4	-15.1V
5	17.5mV
6	17.5mV
7	17.5mV
8	14.8V

IC405, 410, 415	
PIN NO.	VOLTAGE
1	13.2mV
2	13.2mV
3	13.2mV
4	-15.1V
5	13.2mV
6	13.2mV
7	13.2mV
8	14.8V

IC106	
PIN NO.	VOLTAGE
1	4.30V
2	-2.75V
3	11.4mV
4	-7.94V
5	11.2mV
6	11.0mV
7	232mV
8	4.96V

IC112, 113	
PIN NO.	VOLTAGE
1	9.4mV
2	9.7mV
3	9.4mV
4	-15.1V
5	9.4mV
6	9.7mV
7	9.4mV
8	14.8V

DJM-600

A TERMINAL ASSY

IC801, 802, 803	
PIN NO.	VOLTAGE
1	-28.6mV
2	128mV
3	128mV
4	-7.96V
5	127mV
6	127mV
7	-267mV
8	7.92V

IC824	
PIN NO.	VOLTAGE
1	14.2mV
2	14.2mV
3	14.2mV
4	-15.2V
5	14.2mV
6	14.2mV
7	14.2mV
8	14.8V

IC810	
PIN NO.	VOLTAGE
1	11.7mV
2	11.7mV
3	11.7mV
4	11.7mV
5	11.7mV
6	11.7mV
7	11.7mV
8	-15.2V
9	11.7mV
10	11.7mV
11	11.7mV
12	11.7mV
13	11.7mV
14	11.7mV
15	11.7mV
16	14.8V

IC805, 806 - 809	
PIN NO.	VOLTAGE
1	25.8mV
2	25.8mV
3	25.8mV
4	7.96V
5	26.5mV
6	25.9mV
7	25.9mV
8	7.92V

R REG ASSY

IC550	
PIN NO.	VOLTAGE
1	14.9V
2	0V
3	20.3V

IC551	
PIN NO.	VOLTAGE
1	-15.2V
2	-20.3V
3	0V

IC552	
PIN NO.	VOLTAGE
1	7.96V
2	0V
3	20.2V

IC553	
PIN NO.	VOLTAGE
1	-8.0V
2	-20.3V
3	0V

Q POWER ASSY

IC554	
PIN NO.	VOLTAGE
1	6.90V
2	4.99V
3	0V
4	4.99V

IC561	
PIN NO.	VOLTAGE
1	7.94V
2	0V
3	18.9V

B PHONE ASSY

IC231	
PIN NO.	VOLTAGE
1	10.5mV
2	10.5mV
3	10.5mV
4	-15.8V
5	10.9mV
6	11.3mV
7	11.3mV
8	14.8V

IC601	
PIN NO.	VOLTAGE
1	1.29V
2	1.29V
3	1.29V
4	-15.8V
5	1.29V
6	1.29V
7	1.29V
8	14.8V

IC602	
PIN NO.	VOLTAGE
1	7.5mV
2	9.2mV
3	8.1mV
4	-15.8V
5	8.0mV
6	8.2mV
7	6.6mV
8	14.8V

IC603	
PIN NO.	VOLTAGE
1	8.2mV
2	8.2mV
3	7.7mV
4	-15.8V
5	8.0mV
6	8.2mV
7	8.7mV
8	14.8V



IC604	
PIN NO.	VOLTAGE
1	7.7mV
2	7.7mV
3	7.7mV
4	7.7mV
5	7.90V
6	7.93V
7	-7.96V
8	7.93V
9	7.93V
10	7.93V
11	7.93V
12	7.93V
13	7.90V
14	7.93V

IC232	
PIN NO.	VOLTAGE
1	6.5mV
2	9.5mV
3	9.5mV
4	-15.8V
5	10.6mV
6	10.6mV
7	13.6mV
8	14.8V

IC605	
PIN NO.	VOLTAGE
1	11.9mV
2	11.9mV
3	11.9mV
4	-15.8V
5	30.2mV
6	30.2mV
7	8.12mV
8	14.8V

IC606	
PIN NO.	VOLTAGE
1	5.2mV
2	5.2mV
3	5.2mV
4	5.8V
5	5.3mV
6	5.5mV
7	5.5mV
8	14.8V

3.13 EFFECT and DIGITAL SW ASSY

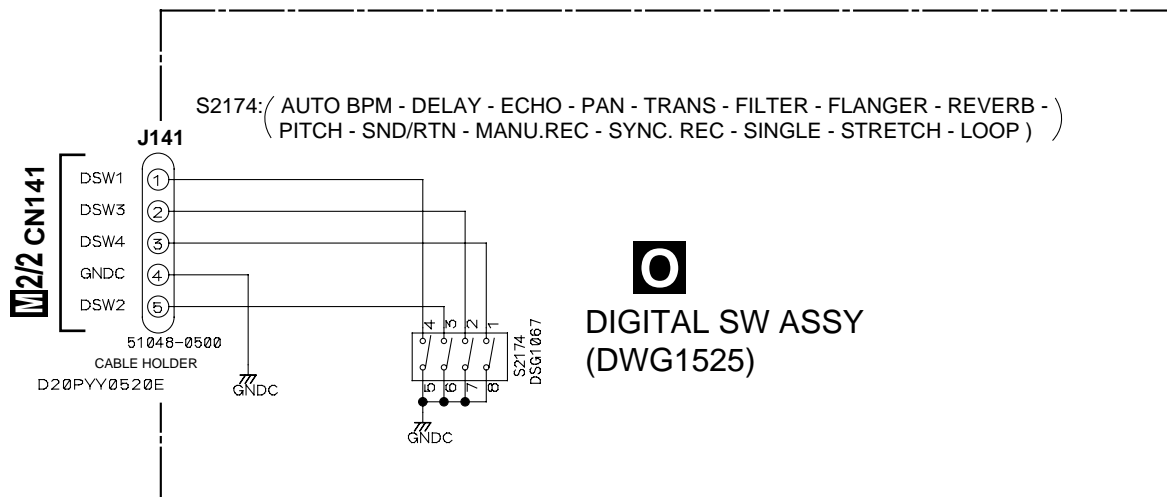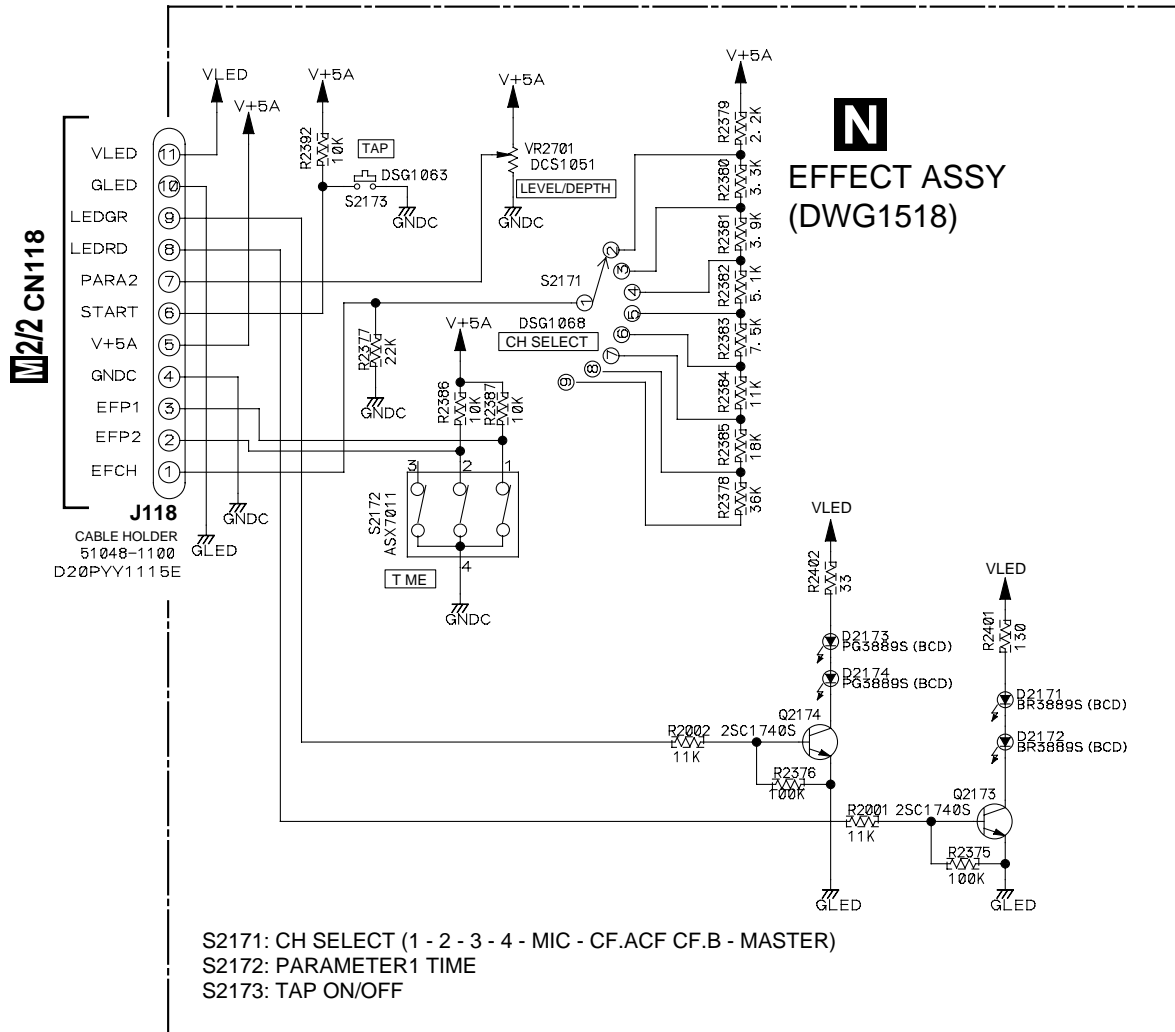


3.14 7SEG. ASSY

A

B

C

D

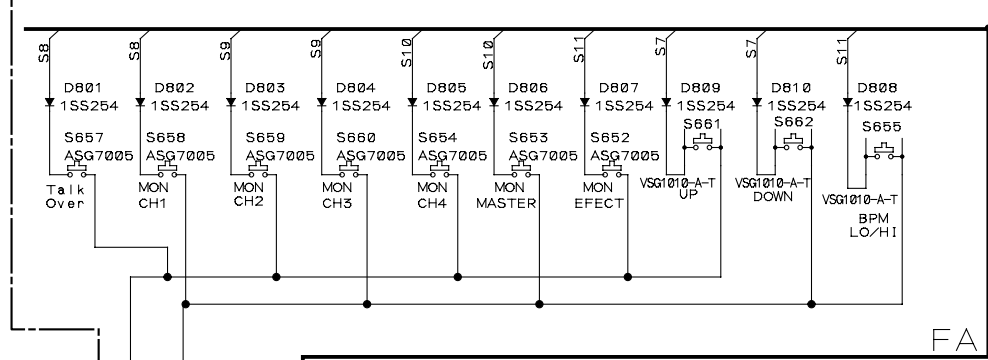

FA


- S652: EFFECTS/SAMPLER
- S653: MASTER
- S654: CH4
- S655: BPM LO/HI
- S657: TALK OVER
- S658: CH1
- S659: CH2
- S660: CH3
- S661: UP
- S662: DOWN



7SEG. ASSY
(DWZ1093: KUC, RL)
(DWZ1092: WY)


M2/2 CN116

M2/2 CN117

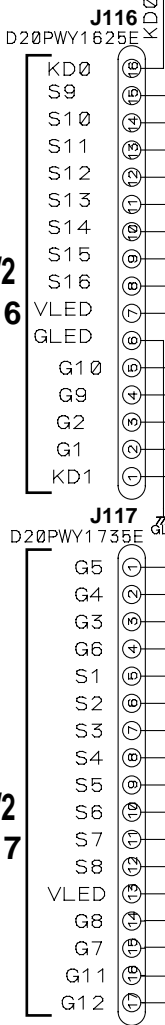

VLED


VLED

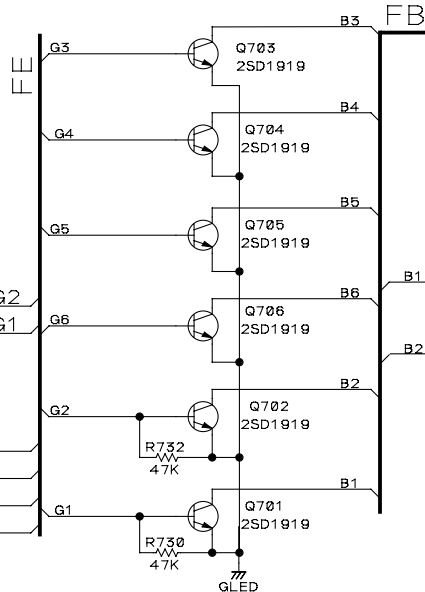


FB




STBY

- DEL1037: KUC, RL (GREEN)
D707~D715
D722~D730
D737~D745
D752~D760
D767~D775
D782~D790
- DEL1038: WY (GREEN)
D701~D706
D716~D721
D731~D736
D746~D751
D761~D766
D776~D781
- DEL1039 (RED)

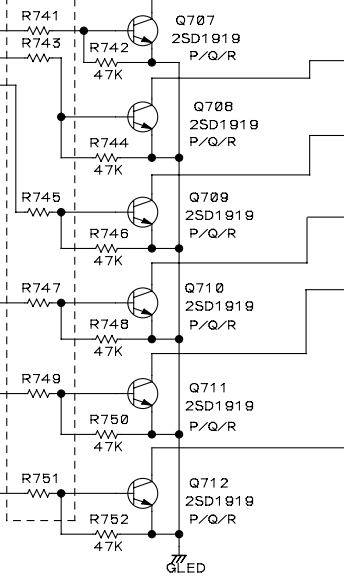

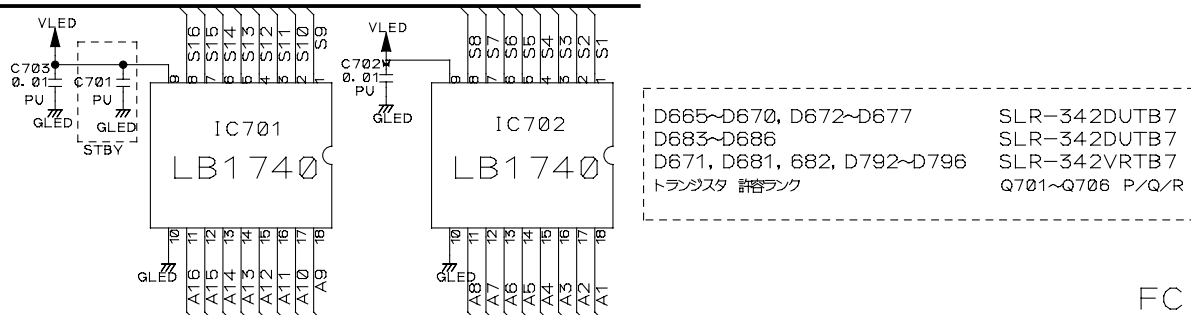


- D665~D670, D672~D677
- D683~D686
- D671, D681, 682, D792~D796
- トランジスタ 音階バンク
- SLR-34DUTB7
- SLR-34DUTB7
- SLR-34VRTB7
- Q701~Q706 P/Q/R

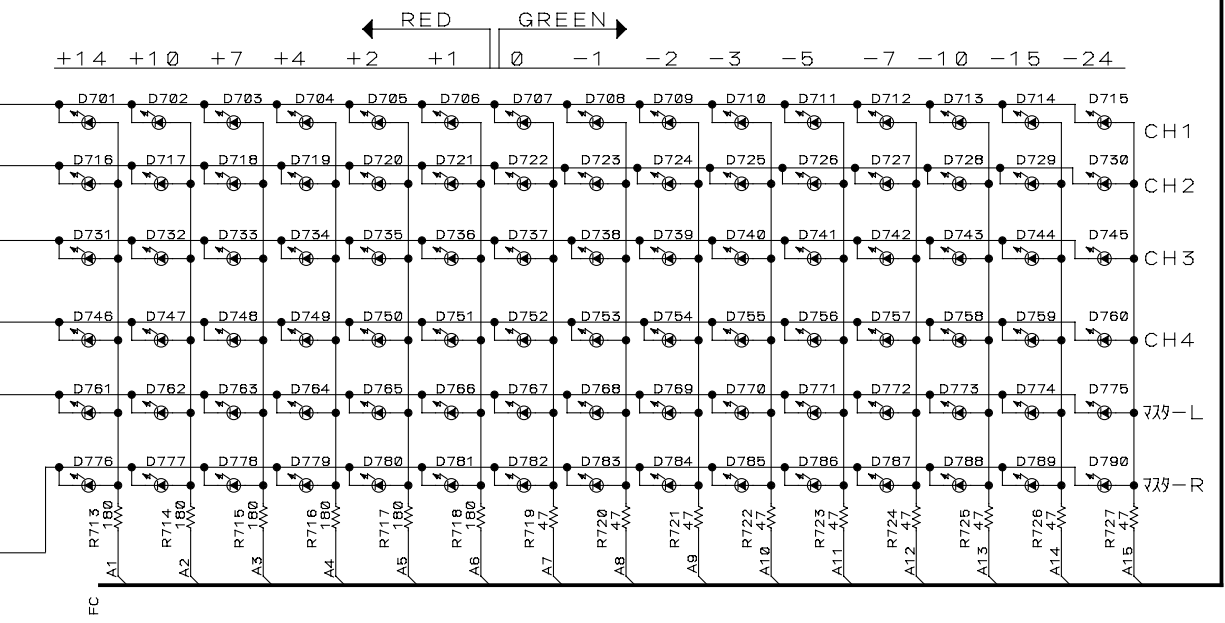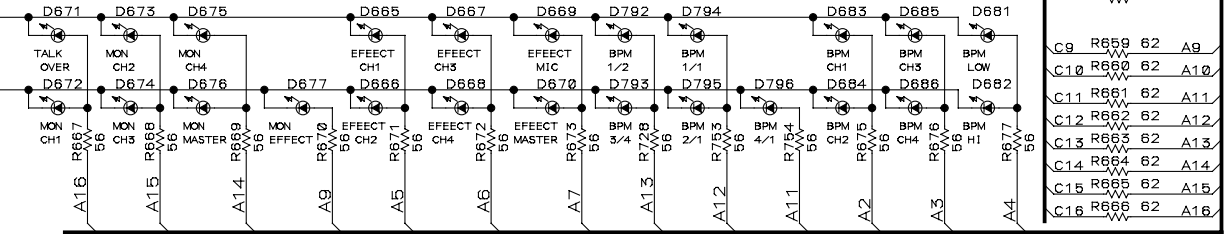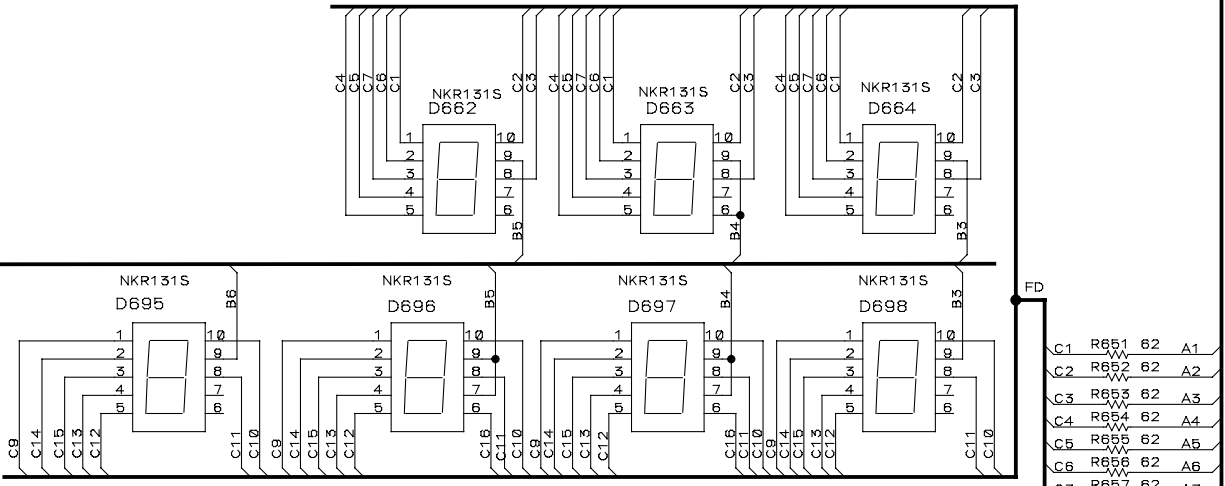


3.15 REG., POWER, TRANS and POWER SW ASSYS

A

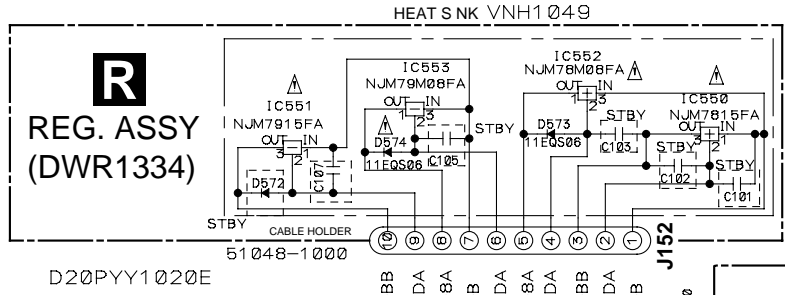

B

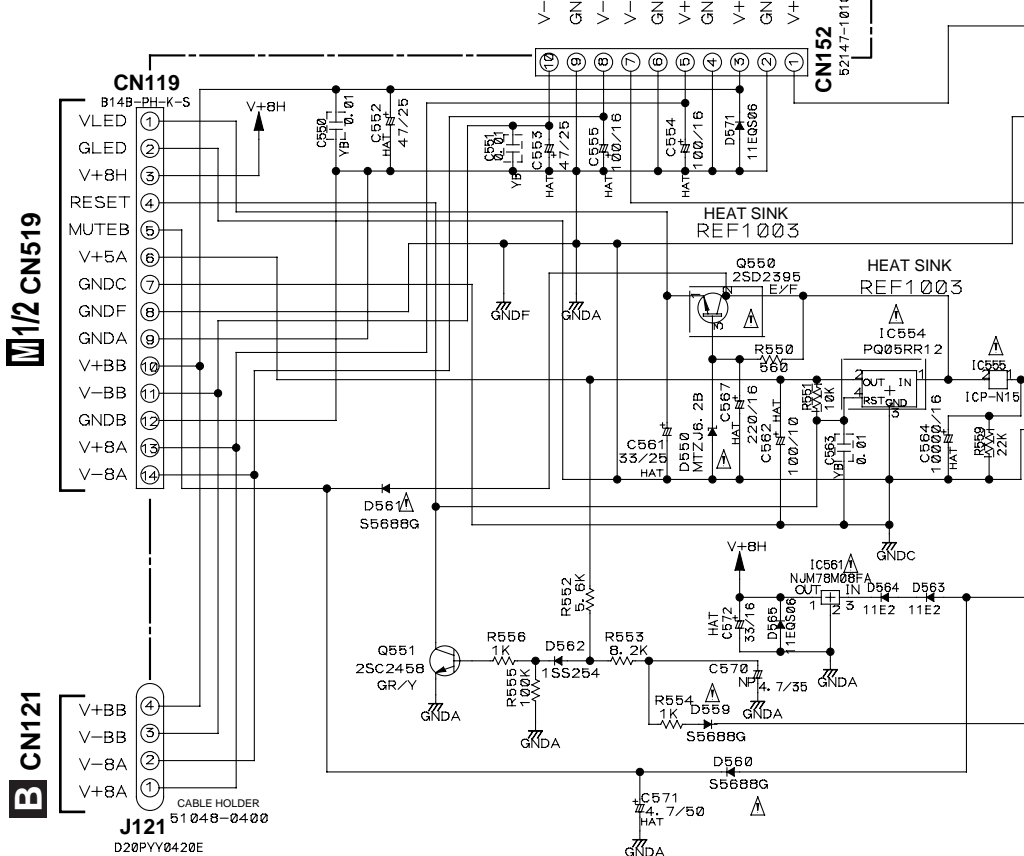

C


Q

POWER ASSY
(J, KUC: DWR1337)
(RL: DWR1336)
(WY: DWR1332)

D

CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE ONLY WITH SAME TIME NO. ICP-N50, MFD BY
ROHM CO., LTD. FOR IC558

CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE ONLY WITH SAME TIME NO. ICP-N15, MFD BY
ROHM CO., LTD. FOR IC555, IC556 AND IC557.

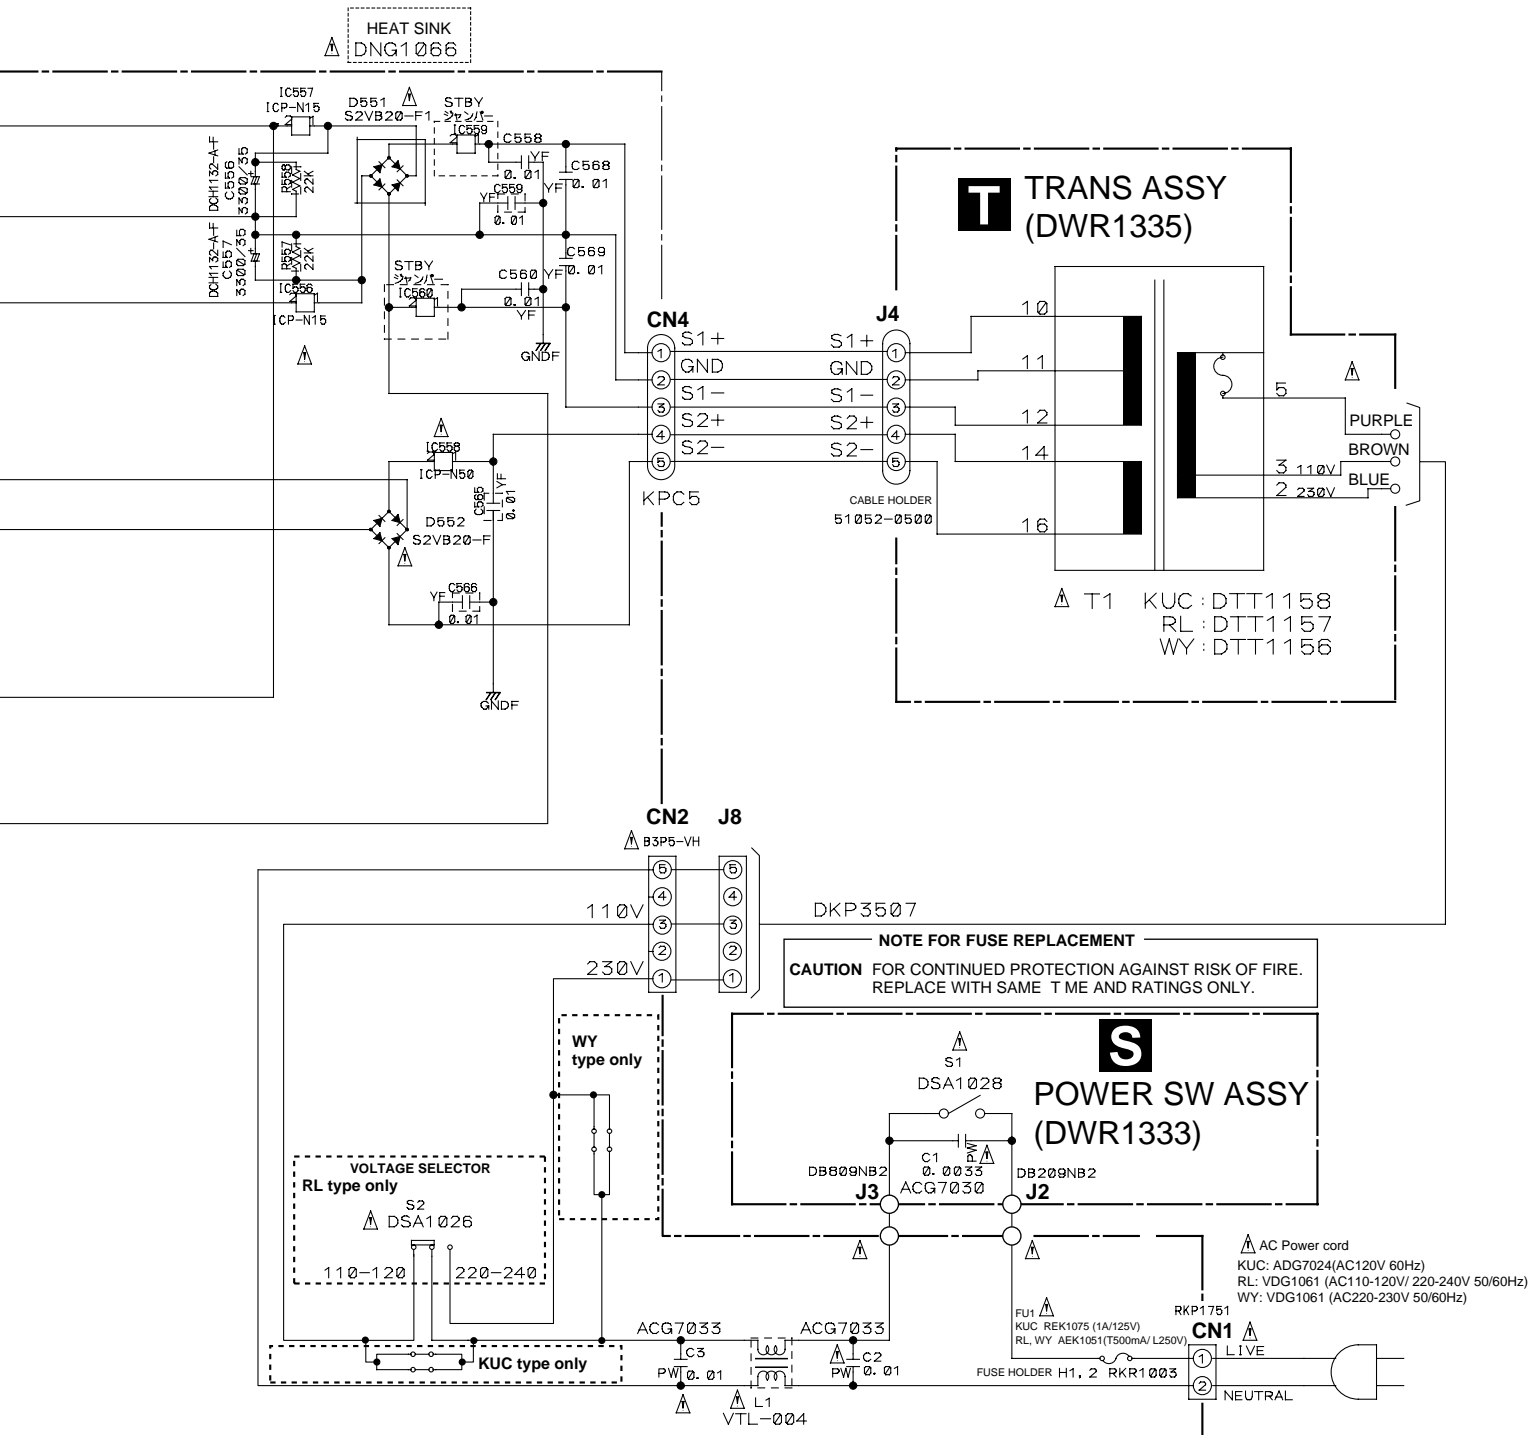

4. PCB CONNECTION DIAGRAM


4.1 TERMINAL ASSY

NOTE FOR PCB DIAGRAMS

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
		Capacitor
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor or var
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
- For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

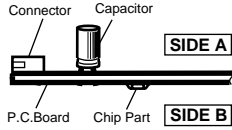

POWER BOARD ASSY

- (WY) ○ DWX2000 W615
- (RL) ○ DWX2024 W616
- (J, KUC) ○ DWX2025 W617

M
J106


B
J151

D
CN101

SIDE A

B
J107

D
CN102

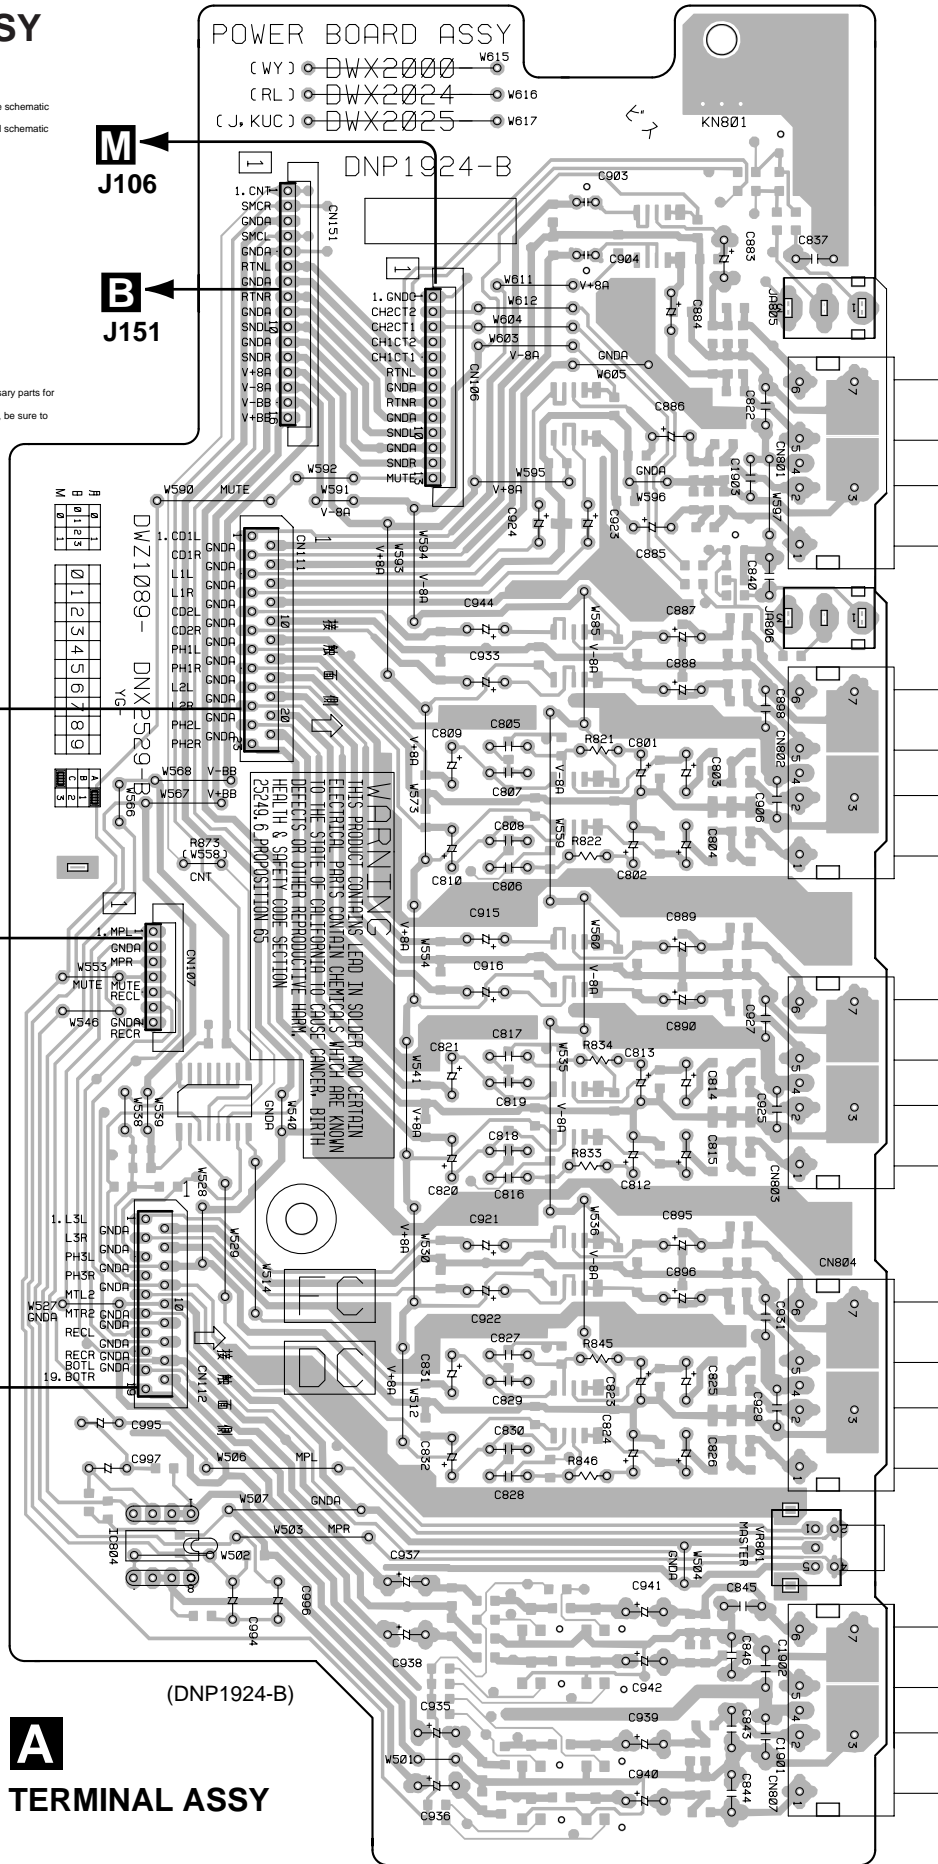


WARNING
THIS PRODUCT CONTAINS LEAD IN SOLDER AND CERTAIN ELECTRICAL PARTS CONTAIN MERCURY WHICH ARE KNOWN TO BE HARMFUL TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.
SEE THE HEALTH & SAFETY CODE SECTION 25249.6 PROPOSITION 65

A
TERMINAL ASSY



SIDE B

IC805
IC806
IC807
IC801
IC808
IC810
IC802
IC809
IC803
Q803 Q807
Q804 Q808
Q801 Q805
Q802 Q806

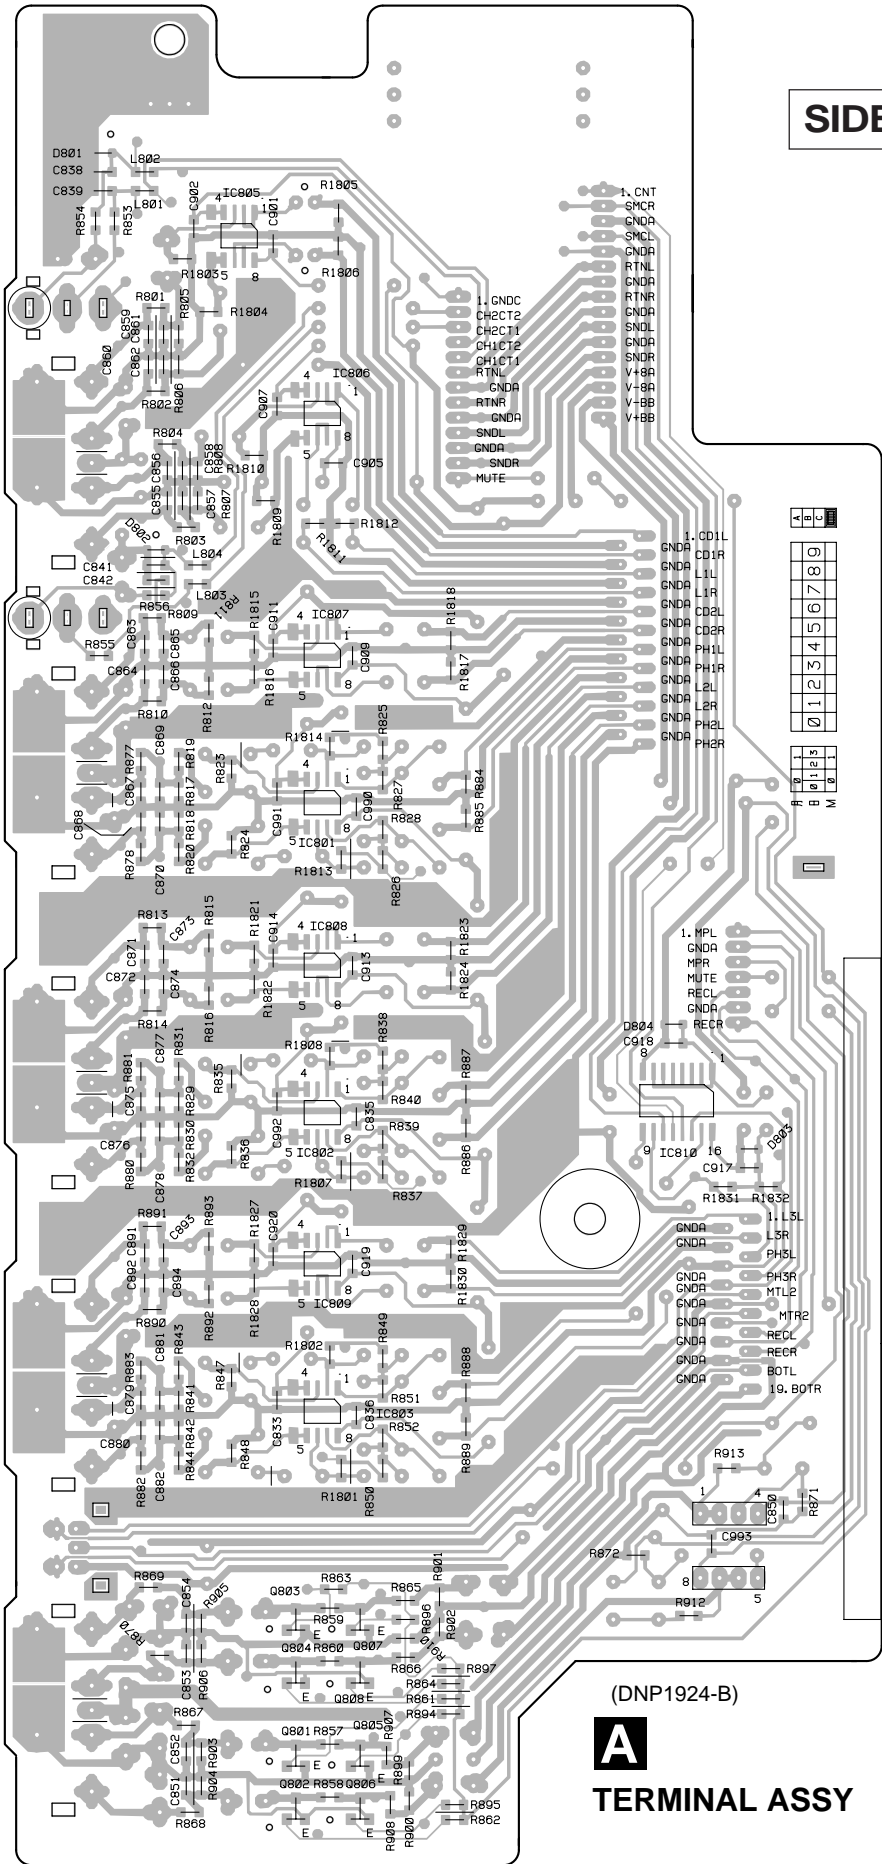

(DNP1924-B)
A
TERMINAL ASSY

A

4.2 PHONE and BAL.OUT ASSYS

A

B

C

D

IC601 IC605

A IC602
CN151

Q IC604
J121

IC231

Q608 Q604

IC603

IC232

Q609 Q605

IC233

Q602

Q606

Q610


Q613

Q231 Q234

IC606

Q603


Q607

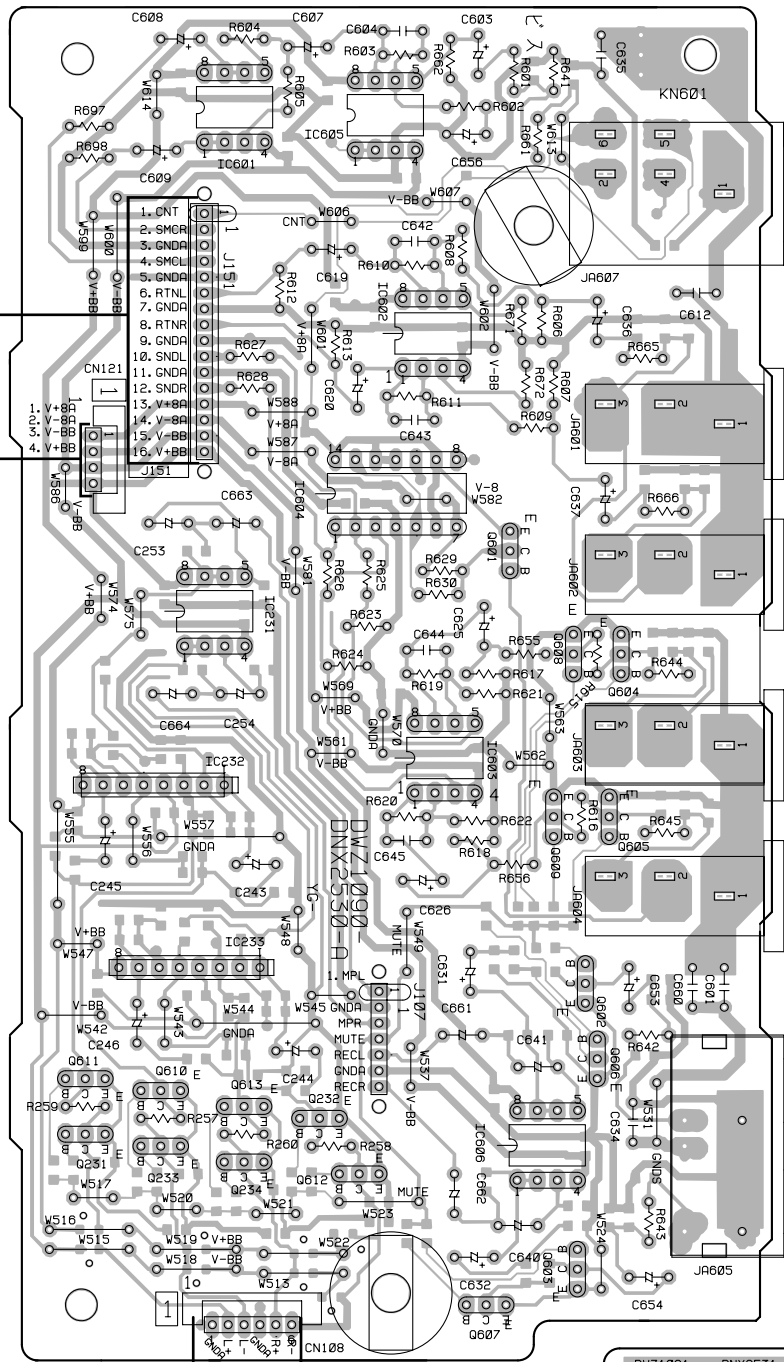


SIDE A

B
PHONE ASSY

C
BAL.OUT ASSY

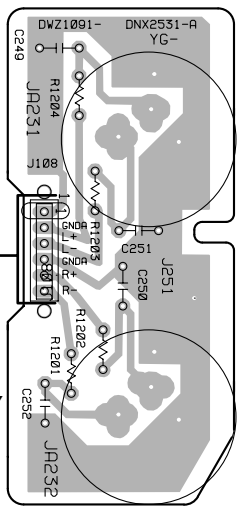

SIDE B

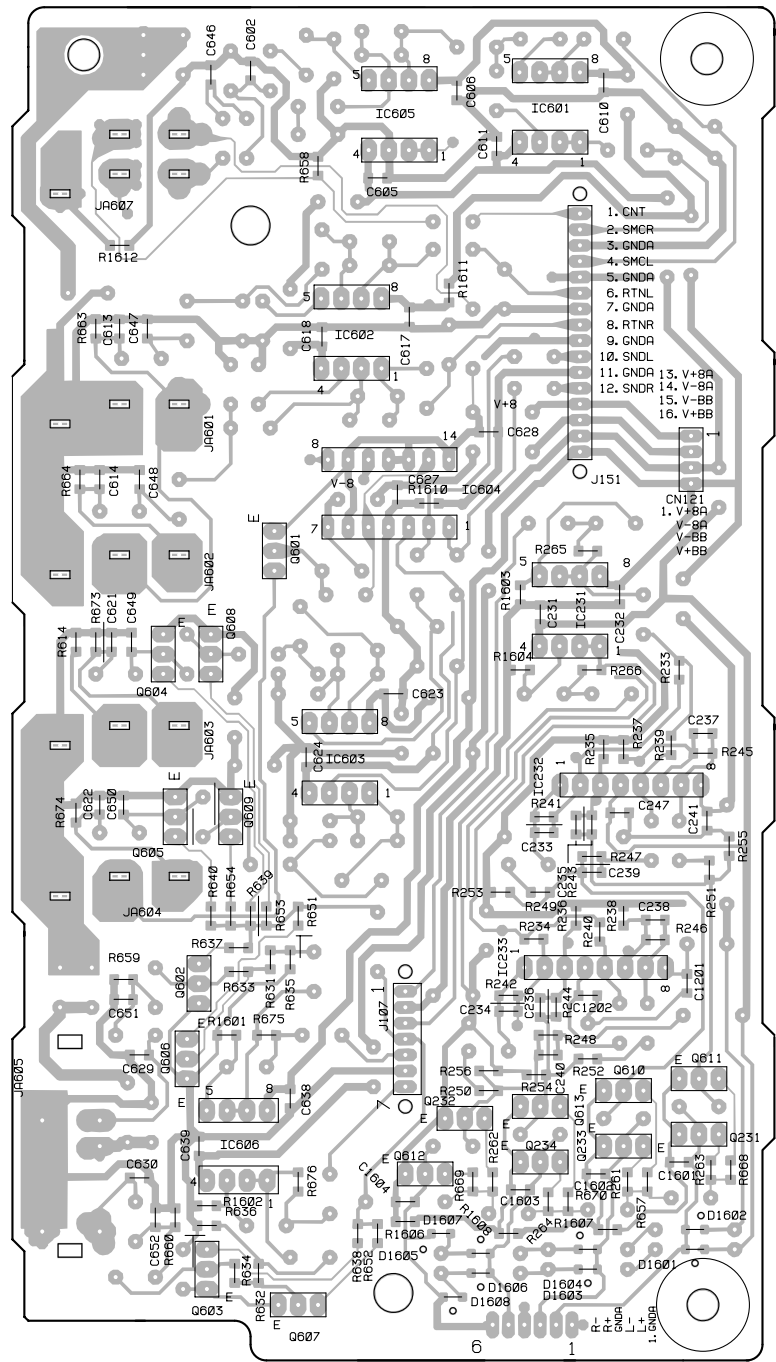

B
PHONE ASSY

4.3 VR, HP JACK and MIC JACK ASSYS

VR ASSY

SIDE A

A

B

C

D

F

HP JACK ASSY

Q303

Q304

IC108


Q801

Q808


IC107

D

D
F

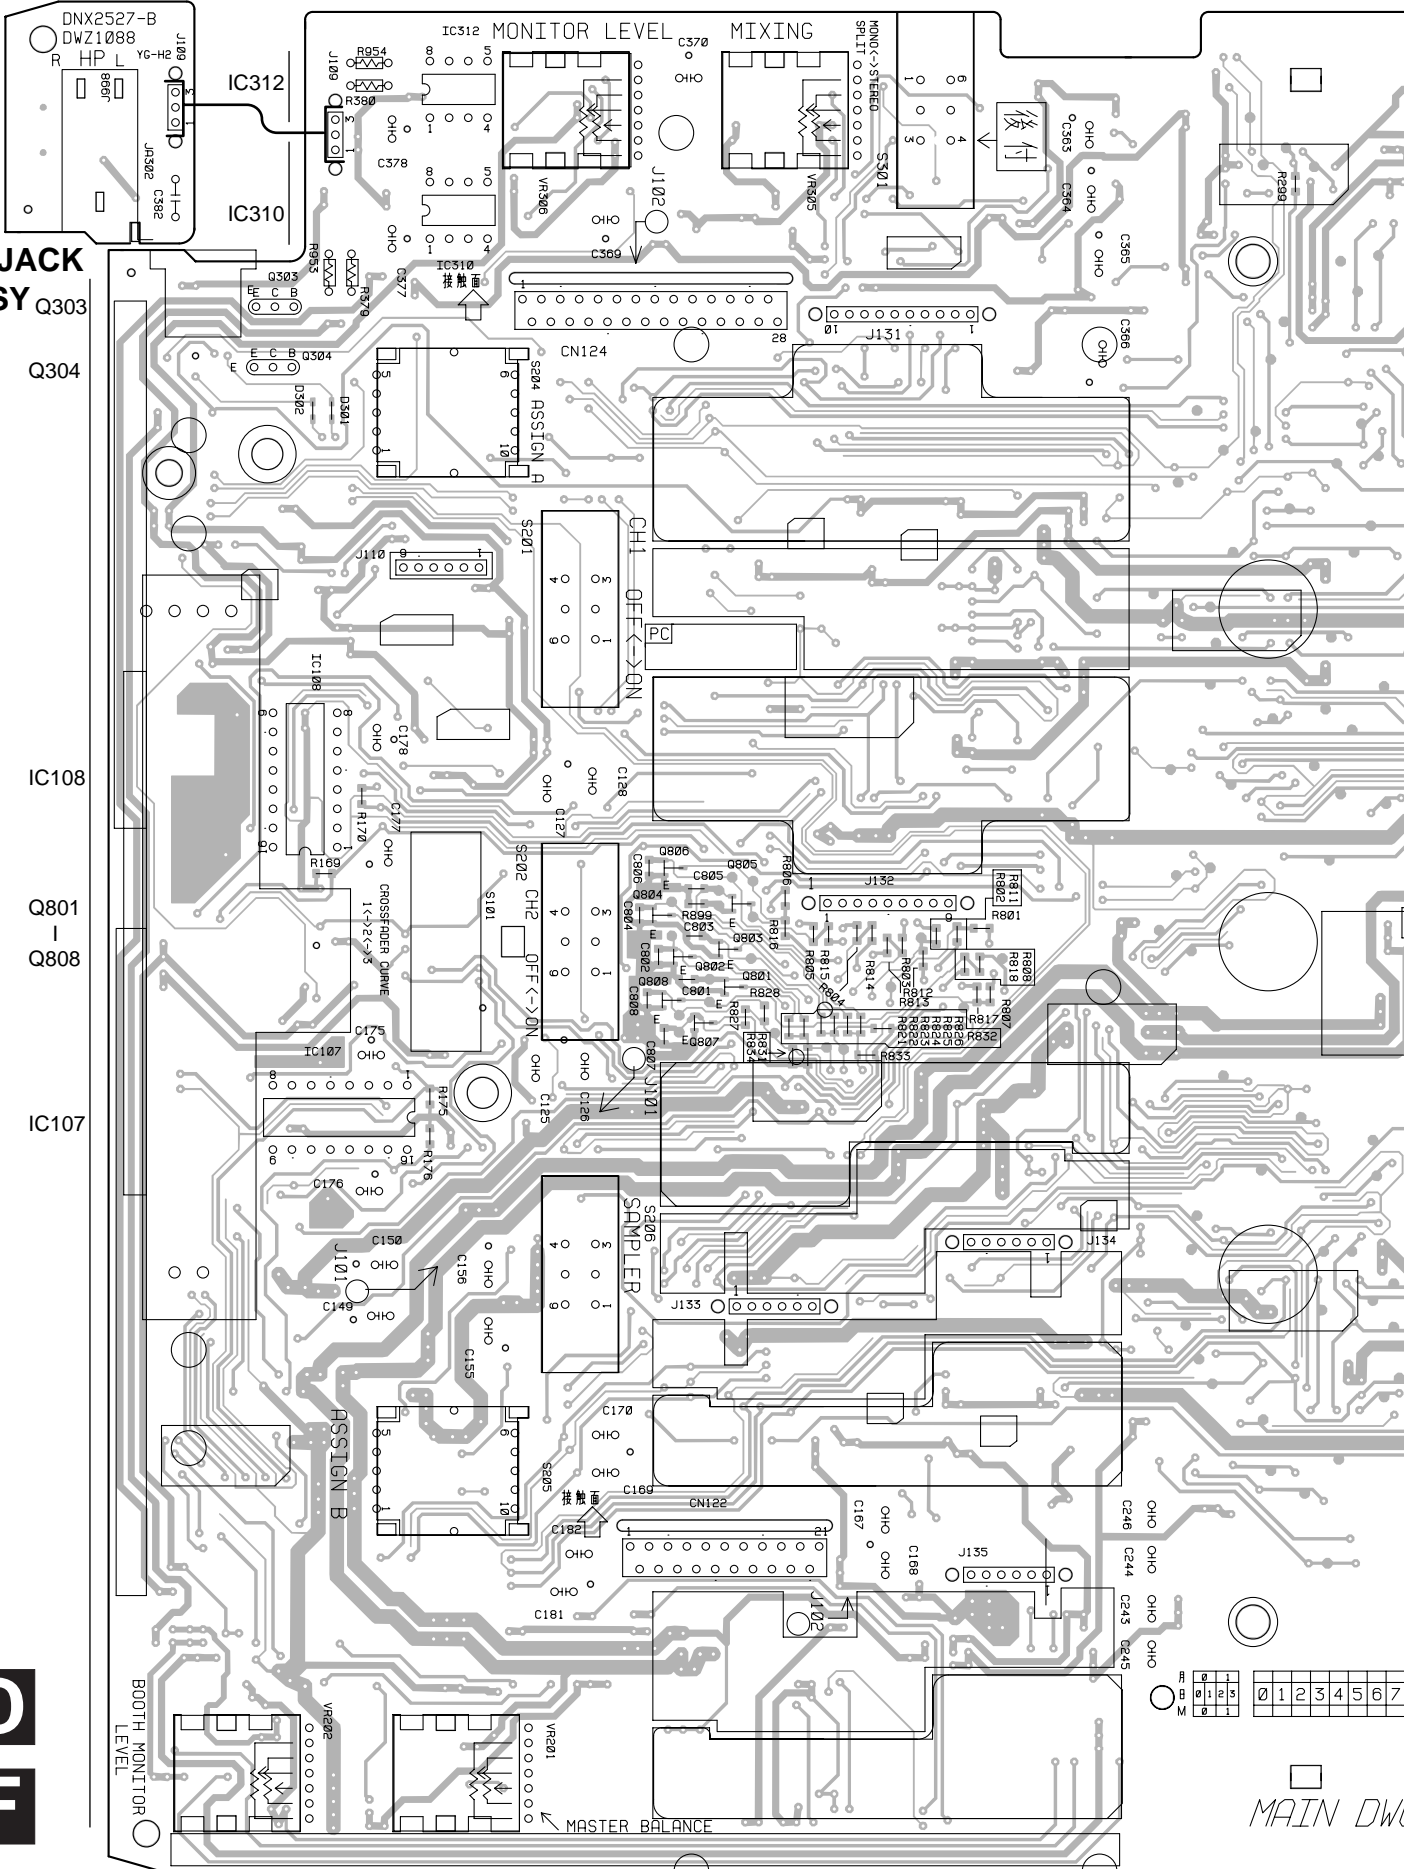

SIDE A

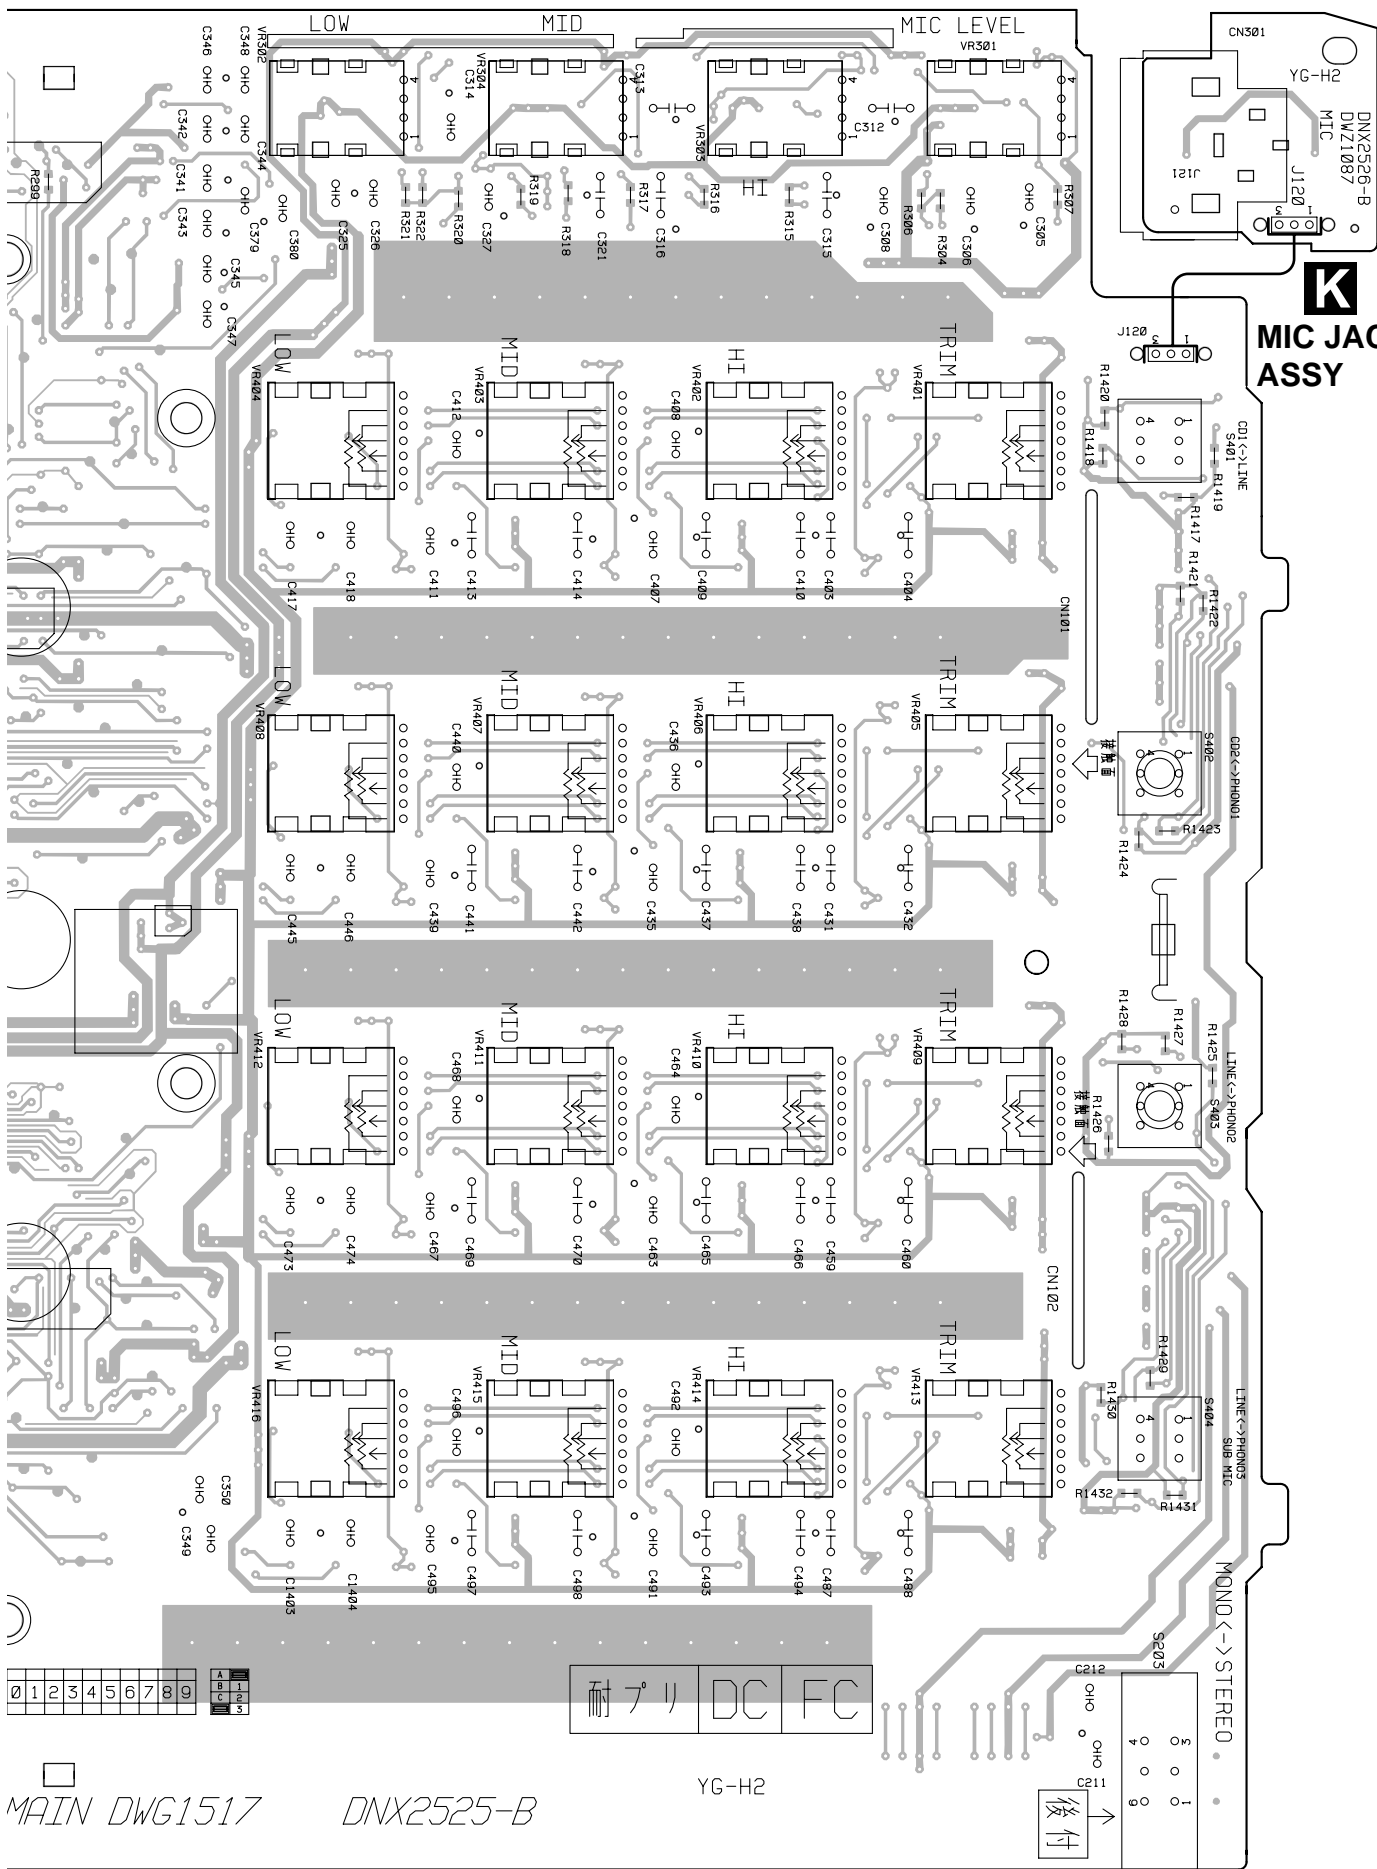

K
MIC JACK ASSY

D
K


0	1	2	3	4	5	6	7	8	9
A	B	C	D	E	F	G	H	J	K


MAIN DWG1517

DNX2525-B

耐プリ DC FC

YG-H2

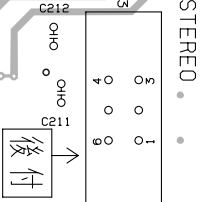

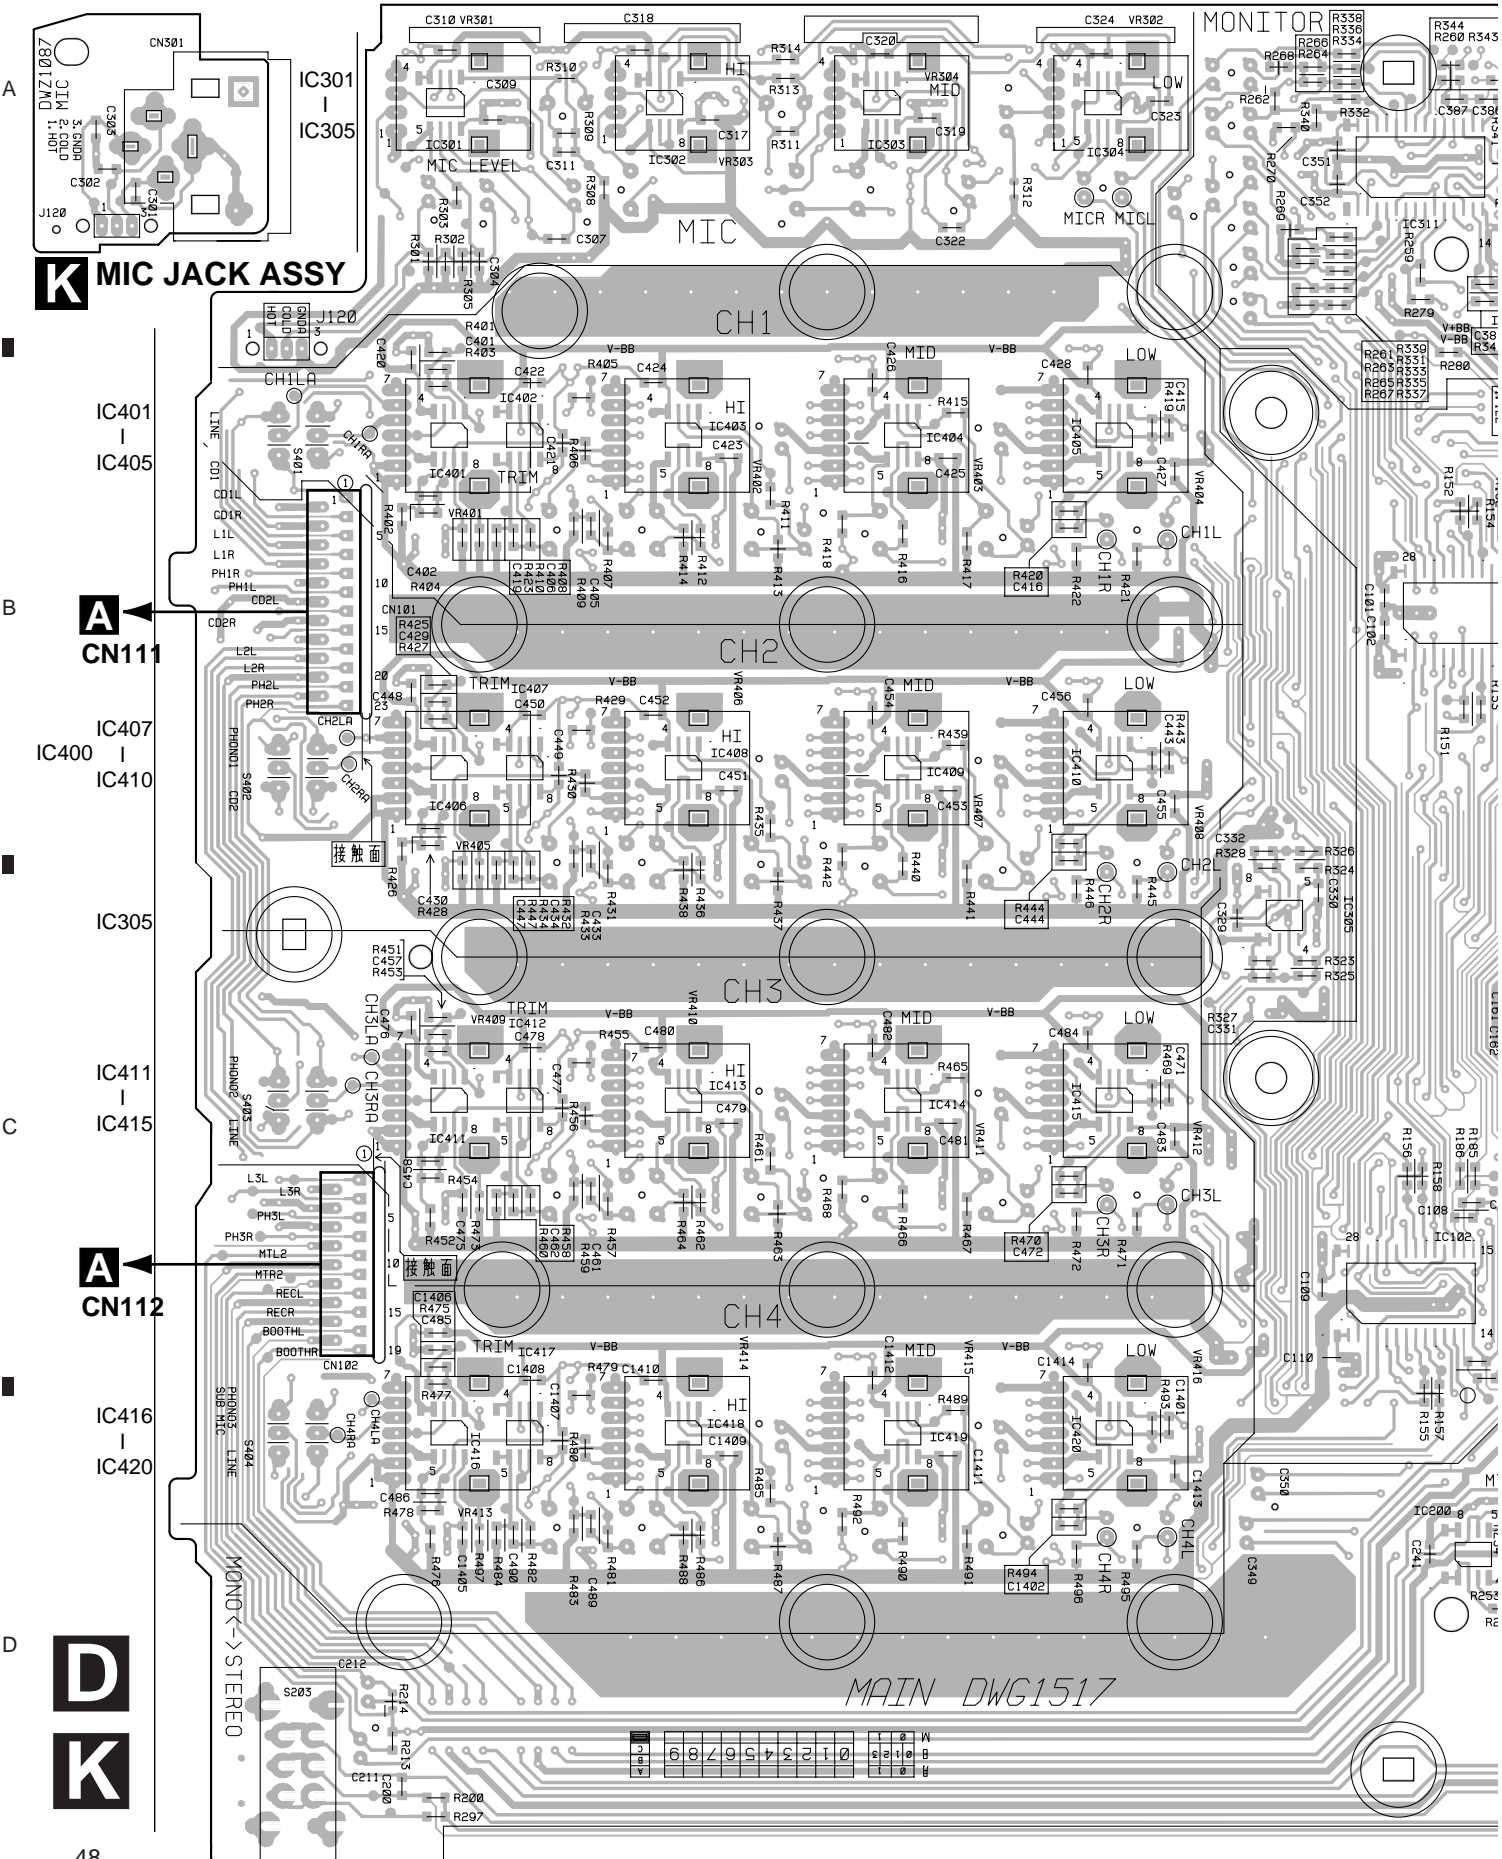

A

B

C

D

K MIC JACK ASSY

A CN111

A CN112

D
K



1	2	3	4	5	6	7	8	9	10
1	2	3	4	5	6	7	8	9	10
1	2	3	4	5	6	7	8	9	10
1	2	3	4	5	6	7	8	9	10
1	2	3	4	5	6	7	8	9	10
1	2	3	4	5	6	7	8	9	10
1	2	3	4	5	6	7	8	9	10
1	2	3	4	5	6	7	8	9	10
1	2	3	4	5	6	7	8	9	10
1	2	3	4	5	6	7	8	9	10

MAIN DWG1517

SIDE B

M CN524

F HP JACK ASSY

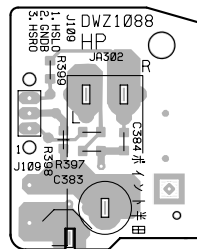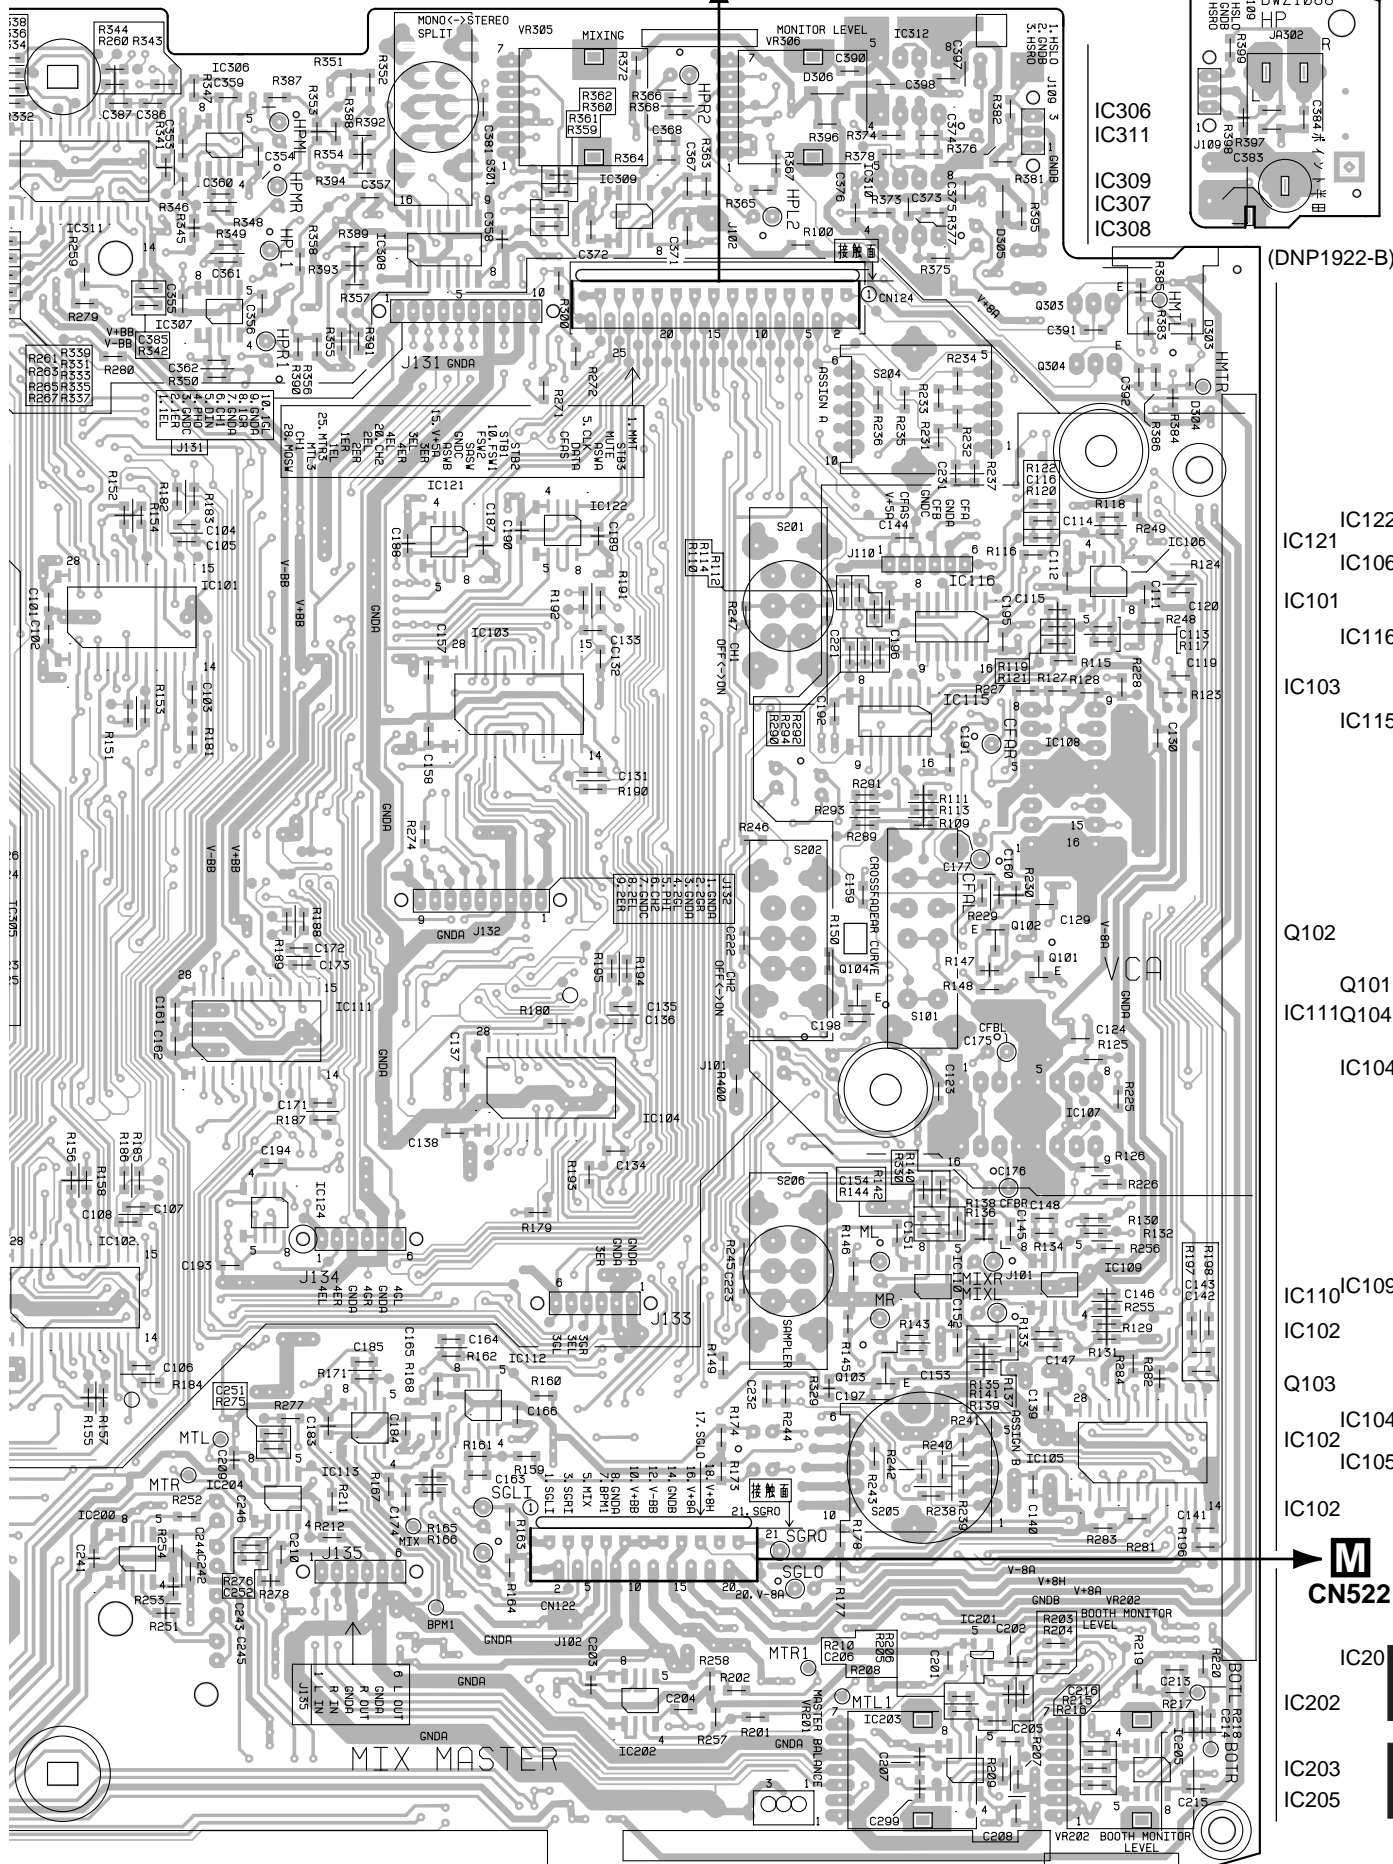

(DNP1922-B)

- IC122
- IC106
- IC101
- IC116
- IC103
- IC115

- Q102
- Q101
- IC111Q104
- IC104

- IC110
- IC109
- IC102
- Q103
- IC104
- IC105
- IC102

- IC20
- IC202
- IC203
- IC205


D

F


4.4 FADER VR(CH1), FADER VR(CH2), FADER VR(CH3), FADER VR (CH4)

FADER VR (MAIN) and C.F ASSYS


E
FADER VR (MAIN)
ASSY

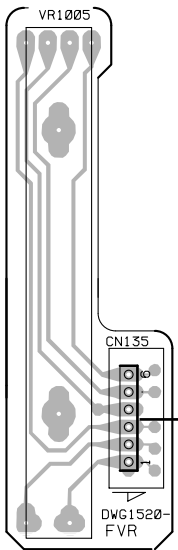

G
FADER VR (CH1)
ASSY

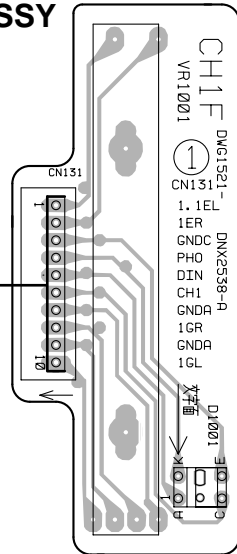


H
FADER VR (CH2)
ASSY

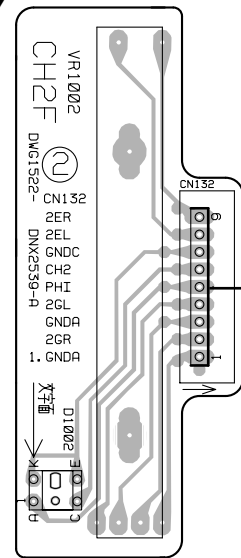


SIDE A


I
FADER VR (CH3)
ASSY

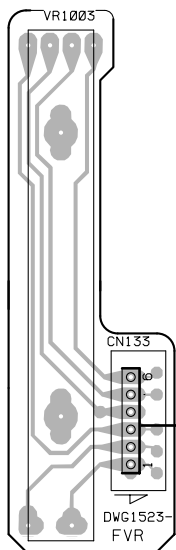

J
FADER VR (CH4)
ASSY

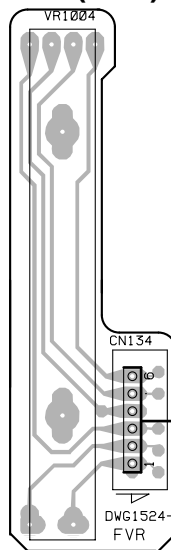

L
C.F ASSY

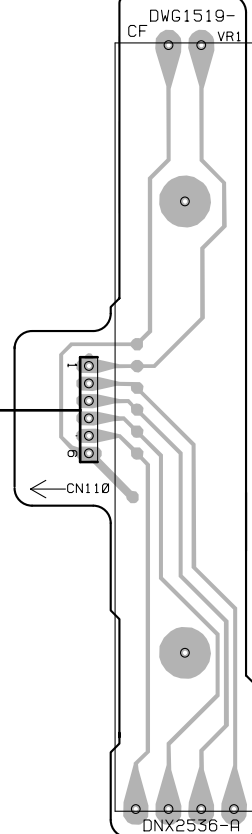


4.5 EFFECT, DIGITAL SW ASSY


SIDE A

SIDE B


N
EFFECT ASSY

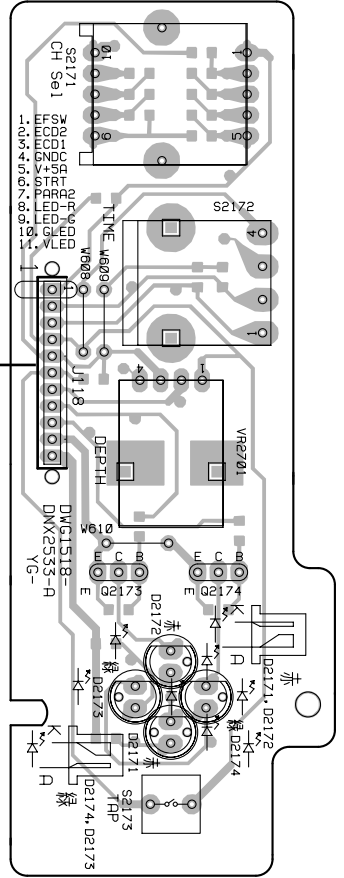

N
EFFECT ASSY

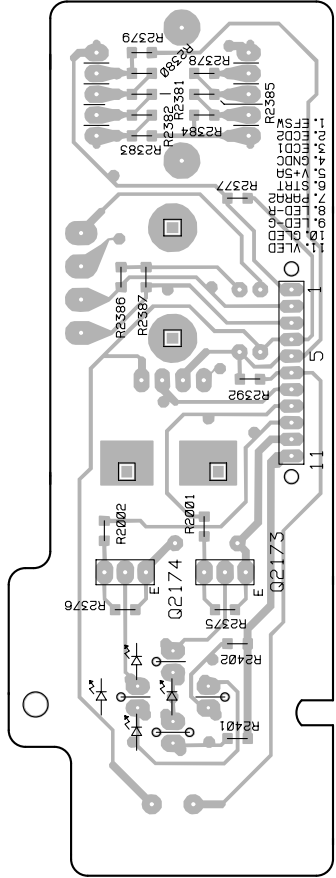

O
DIGITAL SW ASSY

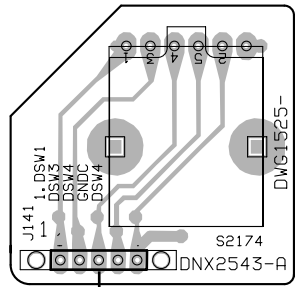


4.6 DSP ASSY

M DSP ASSY

SIDE A

J141 N J118

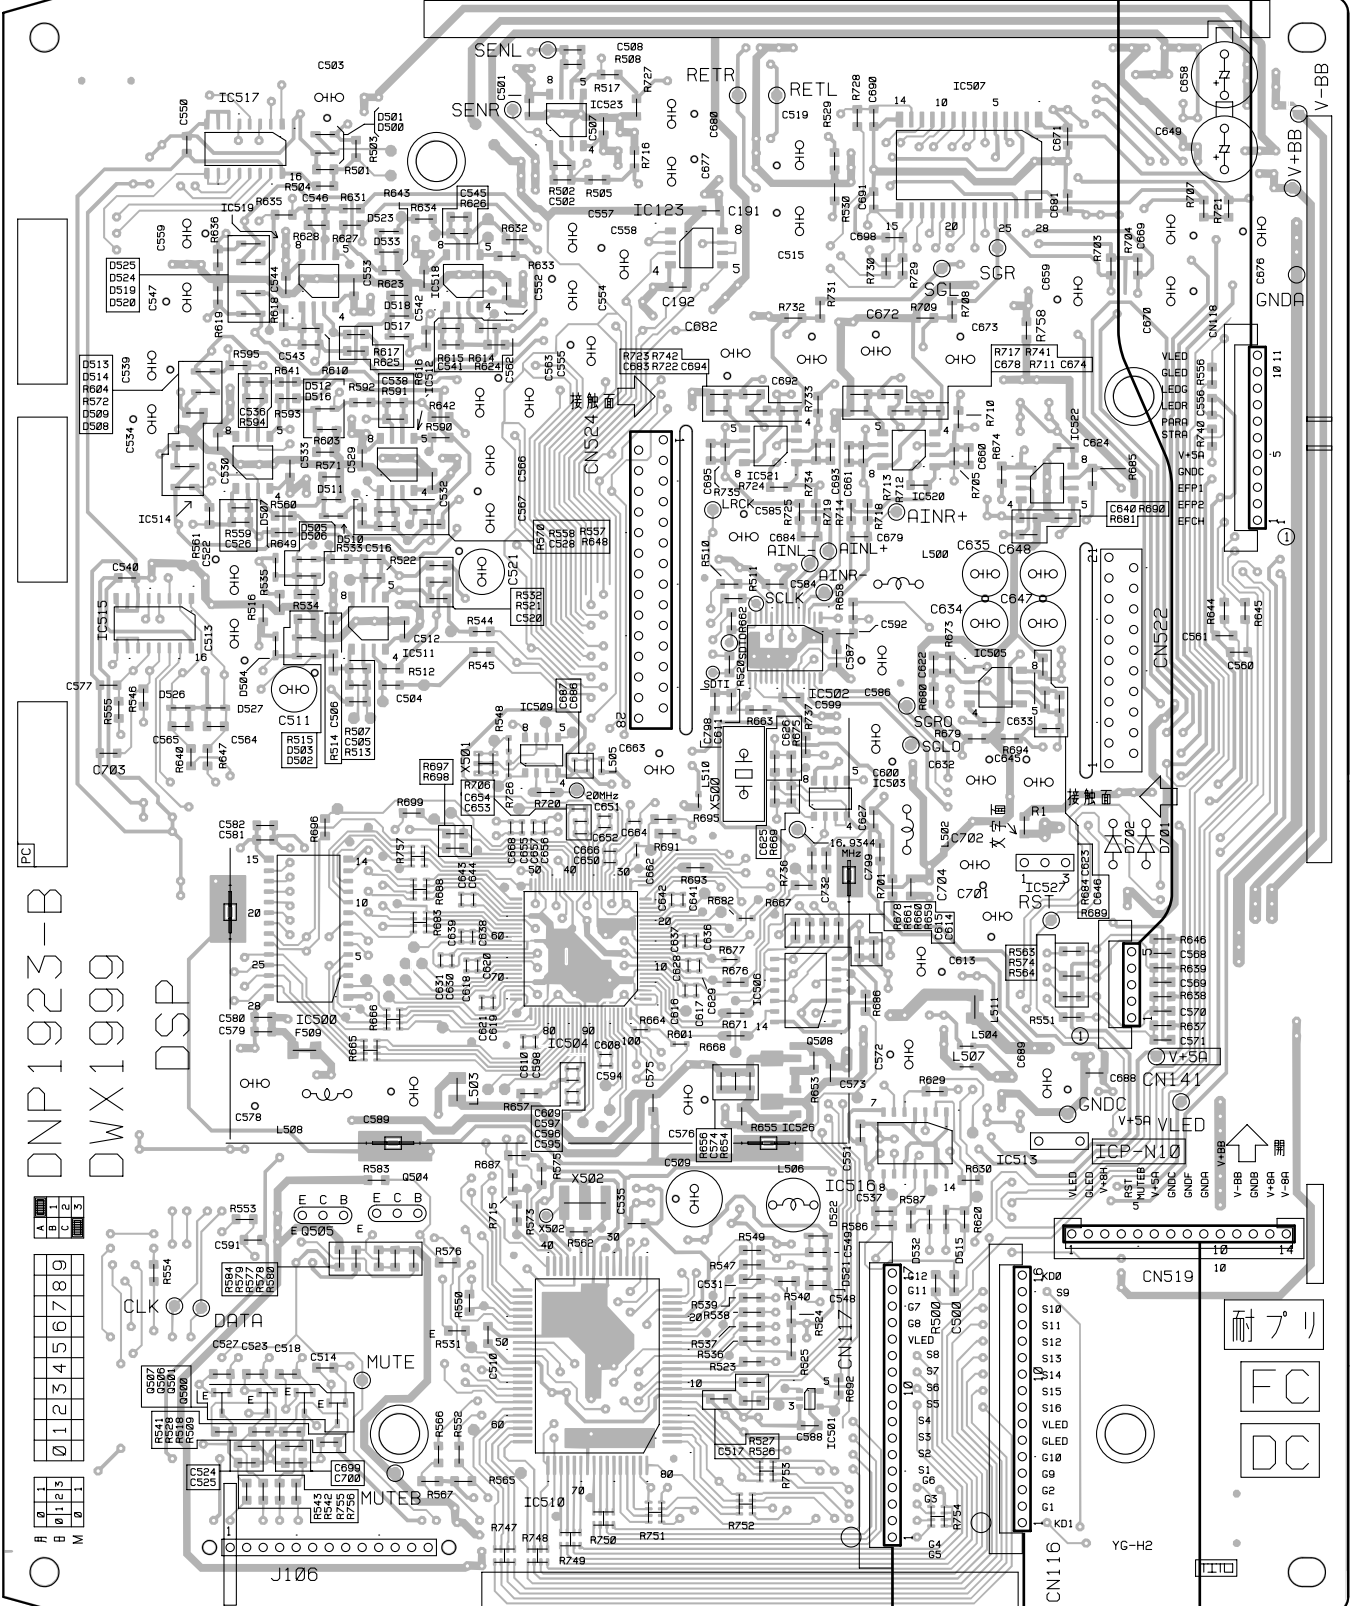

DNP1923-B
DWX1999
DSP

- IC517 IC519 IC518 IC523 IC521 IC507 IC505 IC522 (DNP1923-B)
- IC515 IC500 IC512 IC509 IC123 IC502 IC506 IC527
- Q505 Q504 IC504 IC510 IC501 IC516 IC513
- Q507 Q506 Q501 Q500



P J117

P J116


Q CN119

M DSP ASSY

D CN122

D CN124

SIDE B

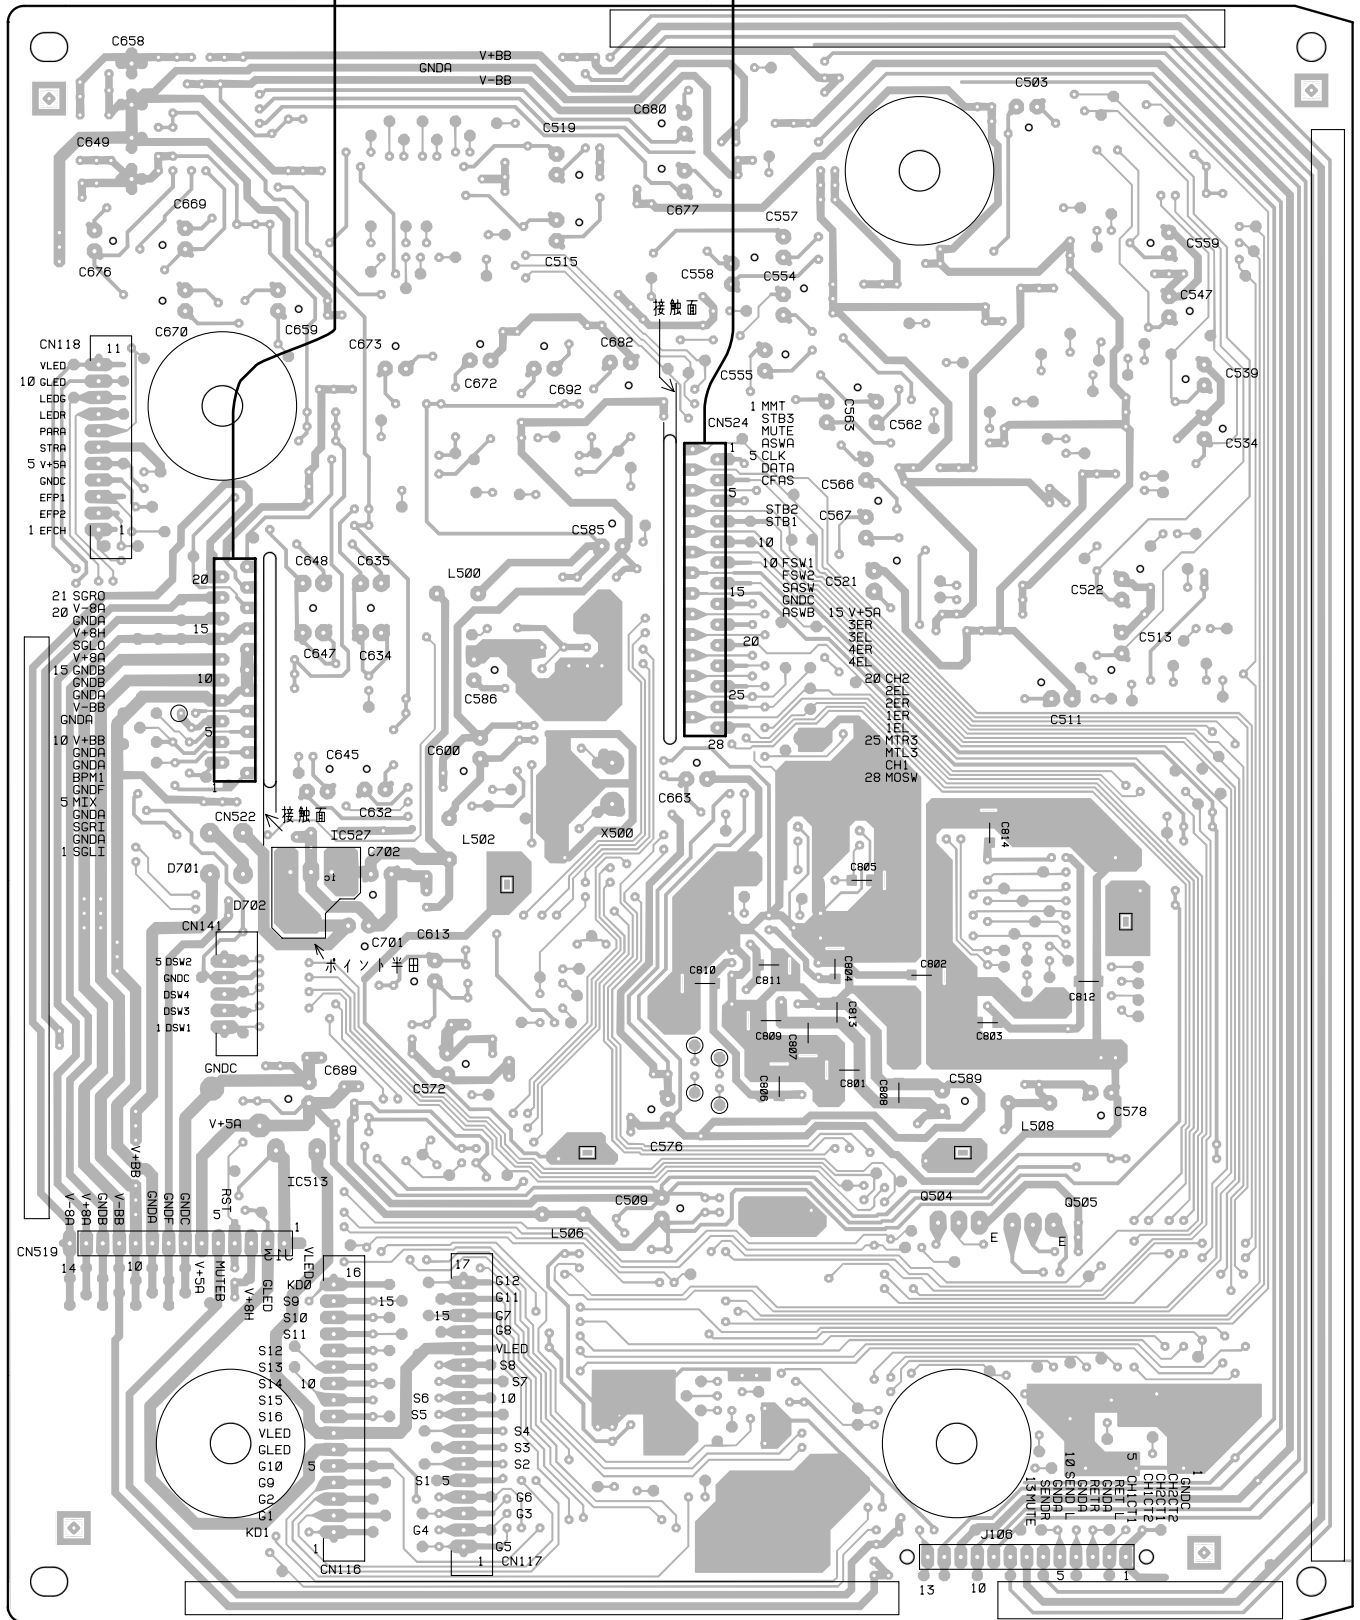

(DNP1923-B)




4.7 7SEG ASSY

SIDE A

P


7 SEG ASSY

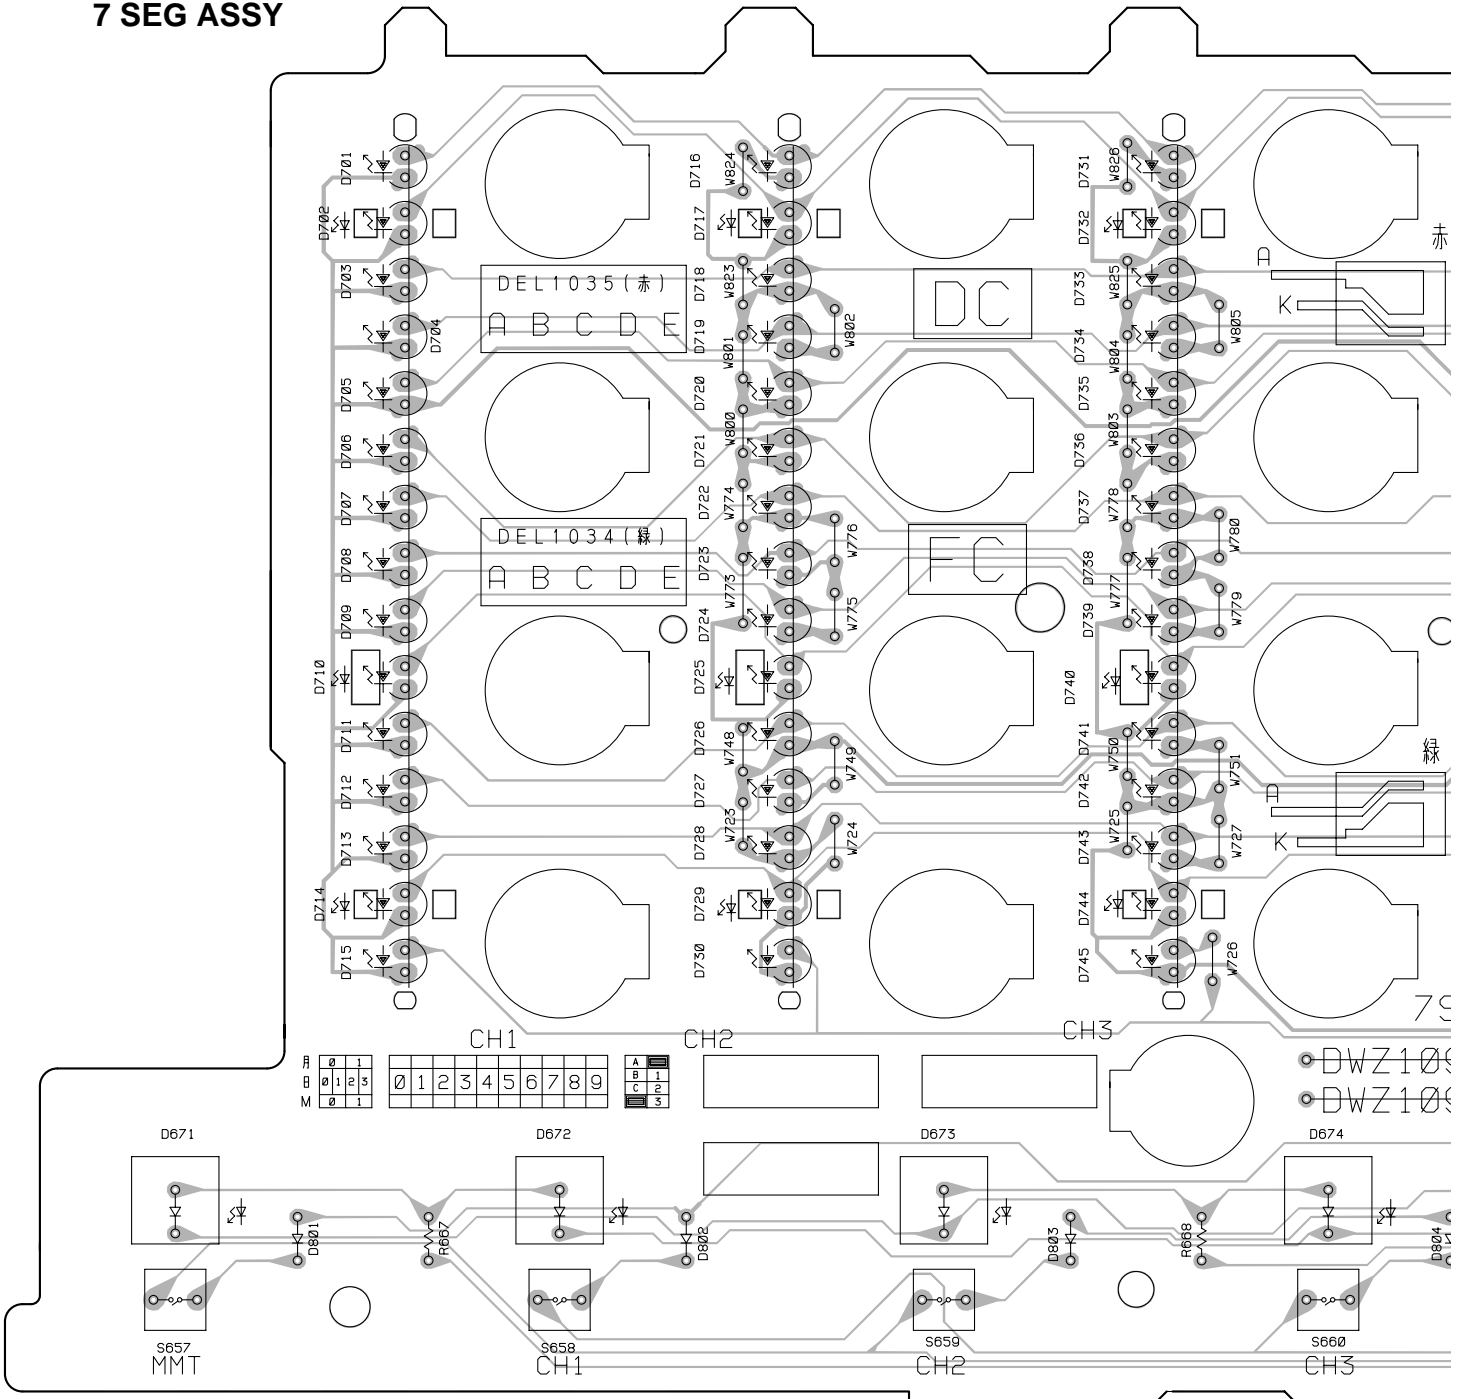

P

SIDE A

MCN117

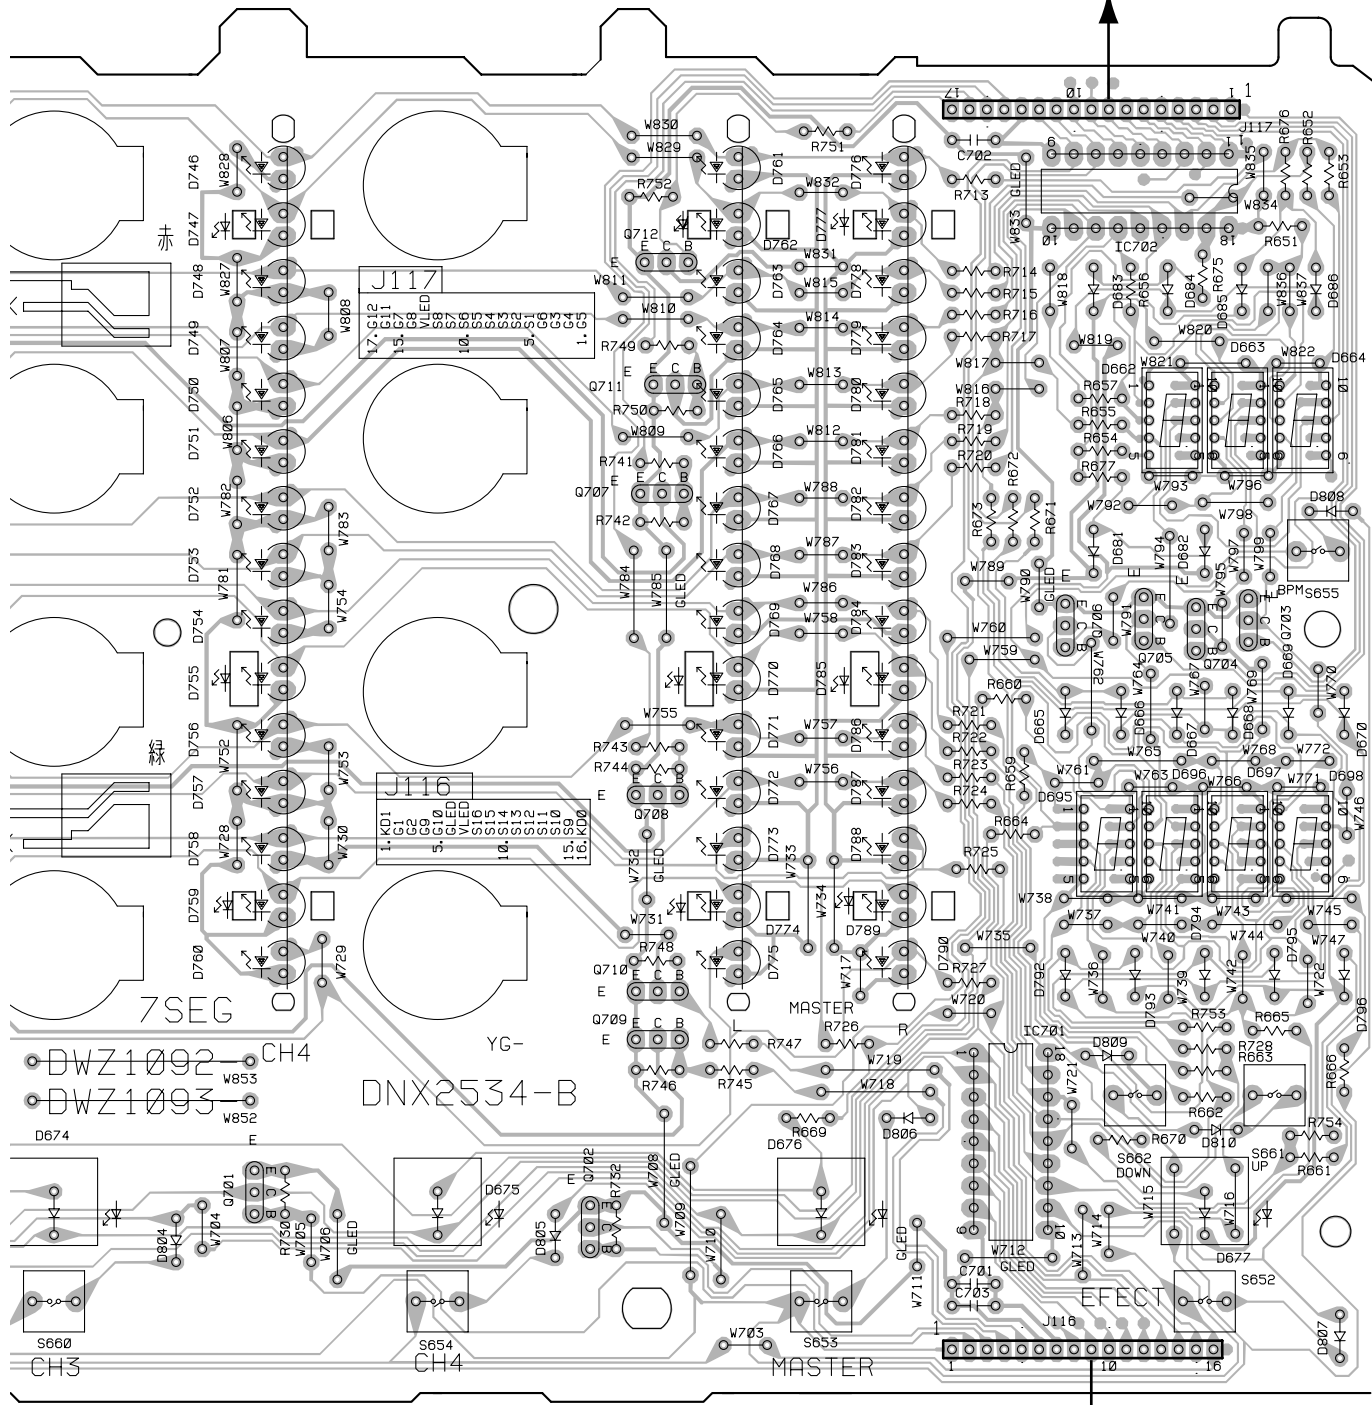

MCN116


(DNP1925-B)



DJM-600

4.8 POWER, TRANS, POWER SW and REG. ASSYS


A

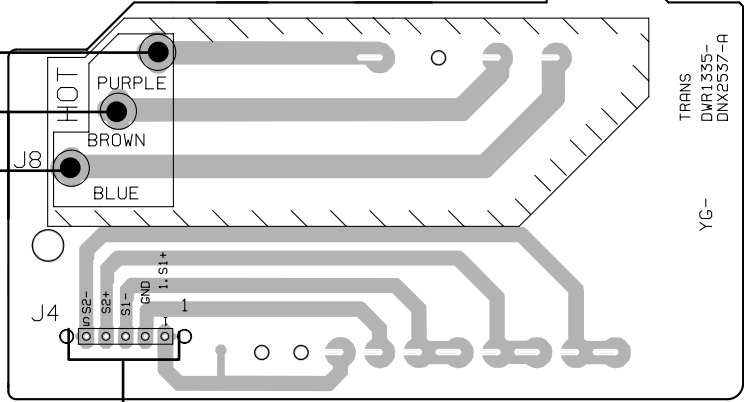

T
TRANS ASSY
SIDE A

B


IC558
Q550
IC556
IC559
IC560
IC554
IC555
IC557
IC561

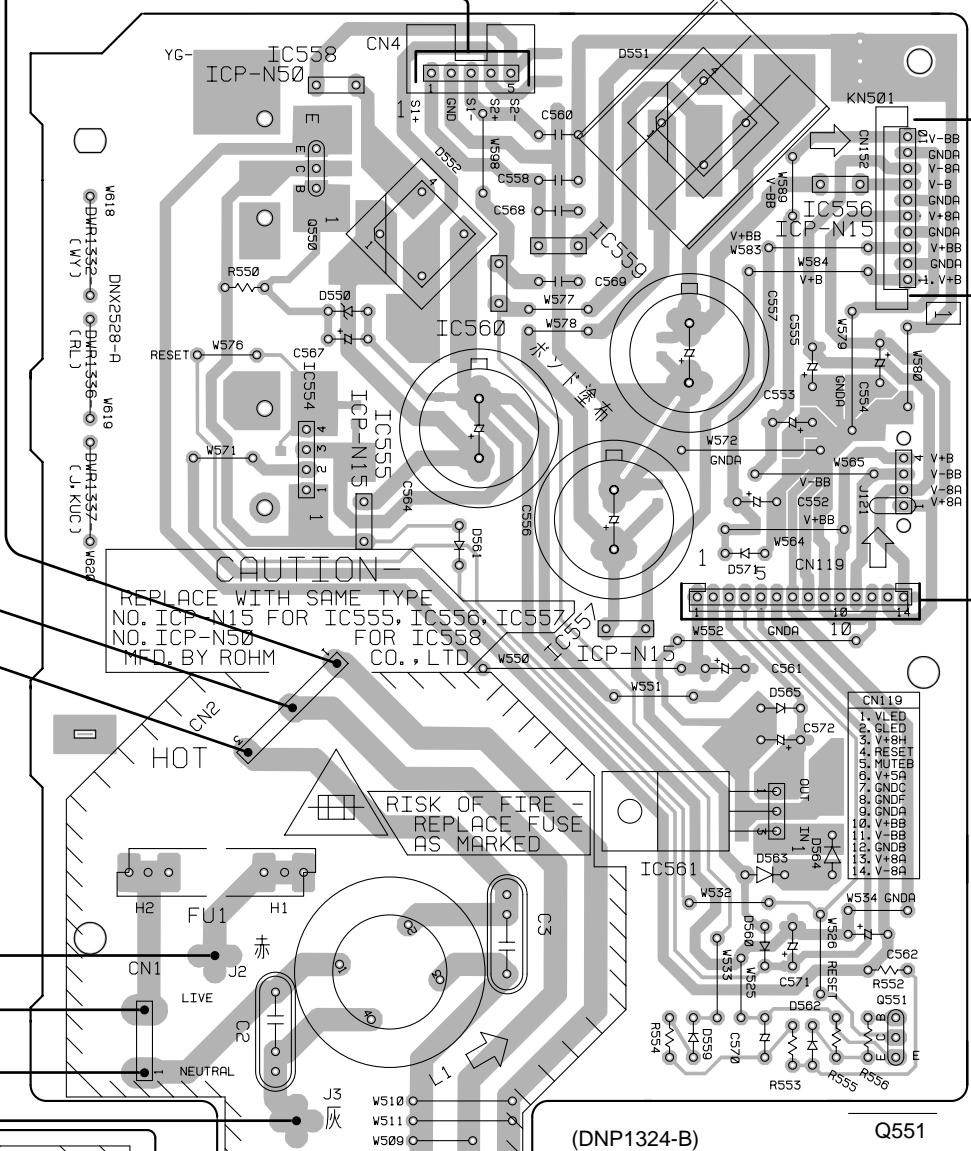

R
REG. ASSY

C

D

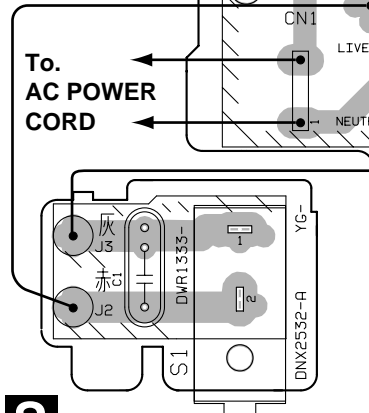

S POWER SW ASSY


(DNP1324-B) Q551
Q POWER ASSY

M CN519

SIDE B



POWER ASSY

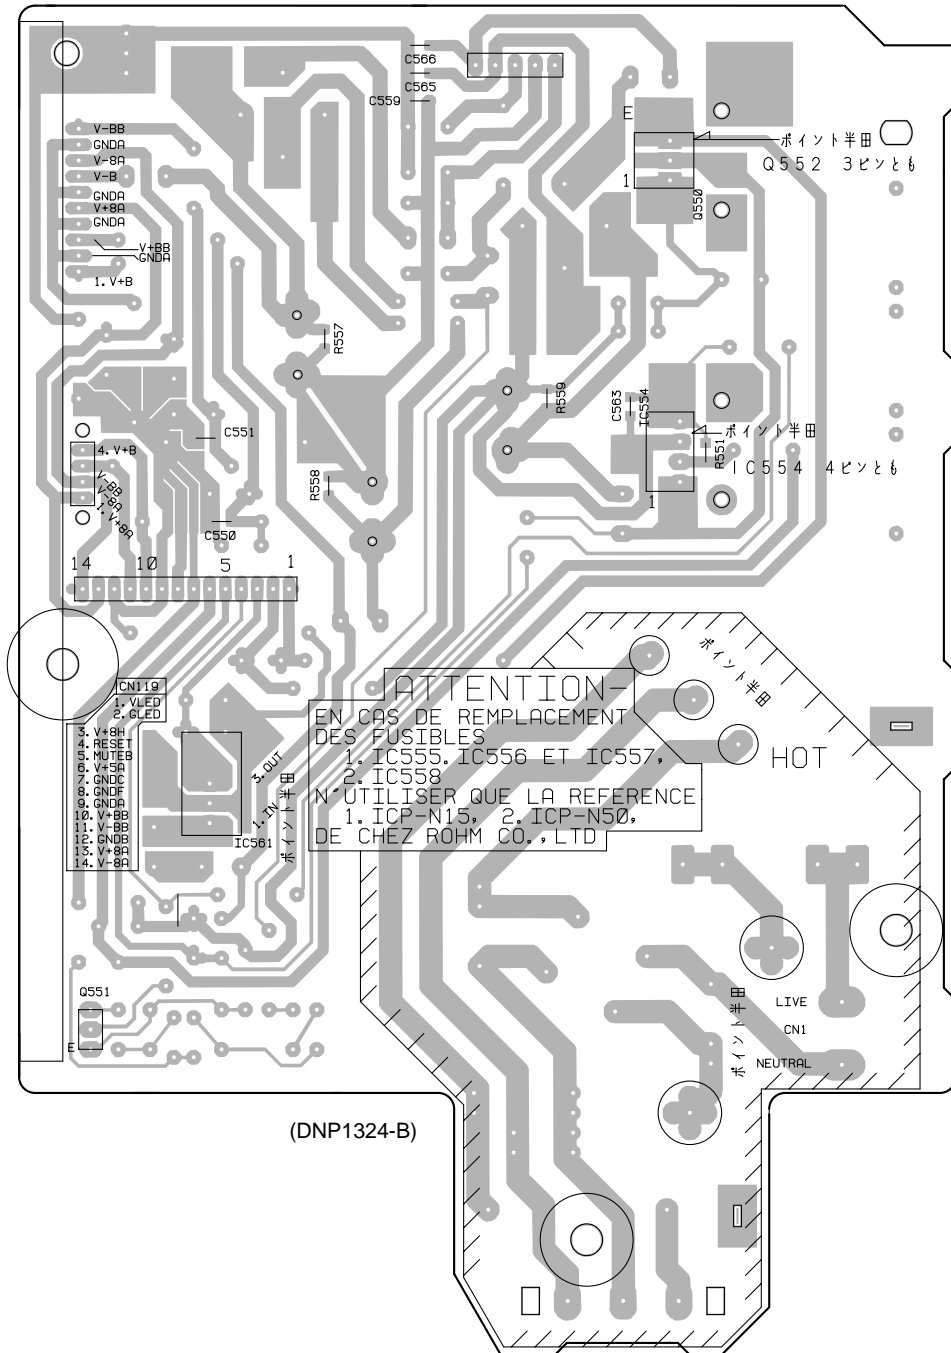

5. PCB PARTS LIST

NOTES : ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω \rightarrow $56 \times 10^1 \rightarrow 561$ RD1/4PU $\begin{matrix} 5 & 6 & 1 \\ \hline \end{matrix}$ J

47k Ω \rightarrow $47 \times 10^3 \rightarrow 473$ RD1/4PU $\begin{matrix} 4 & 7 & 3 \\ \hline \end{matrix}$ J

0.5 Ω \rightarrow R50 RN2H $\begin{matrix} R & 5 & 0 \\ \hline \end{matrix}$ K

1 Ω \rightarrow 1R0 RSIP $\begin{matrix} 1 & R & 0 \\ \hline \end{matrix}$ K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow $562 \times 10^1 \rightarrow 5621$ RN1/4PC $\begin{matrix} 5 & 6 & 2 & 1 \\ \hline \end{matrix}$ F

5.1 LIST OF WHOLE PCB ASSEMBLIES

Mark	Symbol and Description	Part No.			Remarks
		DJM600 /KUC	DJM-600 /RL	DJM-600 /WY	
	DSP ASSY	DWX1999	DWX1999	DWX1999	
NSP	VR ASSY	DWM2109	DWM2109	DWM2109	
	└MIC JACK ASSY	DWZ1087	DWZ1087	DWZ1087	
	└HP JACK ASSY	DWZ1088	DWZ1088	DWZ1088	
	└VR ASSY	DWG1517	DWG1517	DWG1517	
NSP	SUB ASSY	DWX2069	DWX2069	DWX2001	
	└C.F ASSY	DWG1519	DWG1519	DWG1519	
	└FADER VR (CH1) ASSY	DWG1521	DWG1521	DWG1521	
	└FADER VR (CH2) ASSY	DWG1522	DWG1522	DWG1522	
	└FADER VR (CH3) ASSY	DWG1523	DWG1523	DWG1523	
	└FADER VR (CH4) ASSY	DWG1524	DWG1524	DWG1524	
	└FADER VR (MAIN) ASSY	DWG1520	DWG1520	DWG1520	
NSP	└DIGITAL SW ASSY	DWG1525	DWG1525	DWG1525	
NSP	└REG. ASSY	DWR1334	DWR1334	DWR1334	
NSP	└TRANS ASSY	DWR1335	DWR1335	DWR1335	
	└7 SEG ASSY	DWZ1093	DWZ1093	DWZ1092	
NSP	POWER ASSY	DWX2025	DWX2024	DWX2000	
NSP	└EFFECT ASSY	DWG1518	DWG1518	DWG1518	
NSP	└POWER SW ASSY	DWR1333	DWR1333	DWR1333	
	└POWER ASSY	DWR1337	DWR1336	DWR1332	
	└TERMINAL ASSY	DWZ1089	DWZ1089	DWZ1089	
	└PHONE ASSY	DWZ1090	DWZ1090	DWZ1090	
NSP	└BAL.OUT ASSY	DWZ1091	DWZ1091	DWZ1091	

■ CONTRAST OF PCB ASSEMBLIES

P 7 SEG ASSY

DWZ1093 and DWZ1092 are constructed the same except for the following:

Mark	Symbol and Description	Part No.		Remarks
		DWZ1093	DWZ1092	
	D707- D715, D722- D730, D737- D745 D752- D760, D767- D775, D782- D790	DEL1037	DEL1038	

Q POWER ASSY

DWR1337, DWR1336 and DWR1332 are constructed the same except for the following:

Mark	Symbol and Description	Part No.			Remarks
		DWR1337	DWR1336	DWR1332	
Δ	S2 (Voltage Selector)	Not used	DSA1026	Not used	

Mark No.	Description	Part No.	Mark No.	Description	Part No.
5.2 PARTS LIST FOR DJM-600/KUC					
D VR ASSY					
SEMICONDUCTORS					
IC115, IC116 IC107, IC108 IC301 IC310, IC312 IC106, IC112, IC113, IC121, IC122	BU4053BCF M5283P NJM2068M NJM4556AD NJM4558MD		C467, C468, C495, C496 C314, C369, C370 C1403, C1404, C417, C418 C445, C446, C473, C474 C243–C246		CEAL100M16 CEAL330M25 CEAL470M16 CEAL470M16 CEALNPR33M50
IC124, IC305 IC109, IC110, IC200, IC202–IC205 IC302–IC304, IC306, IC307, IC309 IC401–IC420 IC201	NJM4558MD NJM4580ED NJM4580ED NJM4580ED TC4S66F		C125–C128, C149, C150 C155, C156, C181, C182 C377, C378 C363–C366		CEJA100M16 CEJA100M16 CEJA101M16 CEJA330M25
IC101, IC102, IC105 IC111, IC311 IC103, IC104 IC308 Q303, Q304	TC9162AF TC9163AF TC9164AF TC9215AF 2SC2878		C407, C408, C435, C436 C463, C464, C491, C492 C312, C313, C316 C403, C404, C431, C432 C459, C460, C487, C488		CEWASR47M50 CEWASR47M50 CFTNA104J50-TD CFTNA473J50-TD CFTNA473J50-TD
Q103, Q104 Q801–Q808 Q102 Q101 D301–D304	2SC3326 2SD2114K DTA124EK DTC124EK 1SS355		C413, C414, C441, C442 C469, C470, C497, C498 C101, C102, C109–C112 C123, C124, C129, C130 C137–C140, C1405–C1414		CFTNA563J50-TD CFTNA563J50-TD CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50
SWITCHES					
S204, S205 S201–S203, S206, S301 S101 S401–S404	DSG1053 DSH1036 DSH1050 DSK1010		C145, C146, C151, C152 C157, C158, C161, C162 C165, C166, C183, C184 C187–C196, C201–C204 C207–C210, C215, C216		CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50
CAPACITORS					
C104, C105, C107, C108 C132, C133, C135, C136 C142, C143, C172, C173 C386, C387 C103, C106, C131, C134, C141	CCSQCH101J50 CCSQCH101J50 CCSQCH101J50 CCSQCH101J50 CCSQCH102J50		C231, C232, C241, C242 C309, C310, C317–C320 C323, C324, C329, C330 C351–C358, C371, C372 C375, C376, C397, C398		CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50
C171, C385 C373, C374 C311 C163, C164, C174, C185 C367, C368	CCSQCH102J50 CCSQCH270J50 CCSQCH470J50 CCSQSL101J50 CCSQSL101J50		C419–C428, C447–C456 C475–C484 C119, C120, C144, C221–C223 C381 C801–C808		CKSQYB103K50 CKSQYB103K50 CKSQYB104K25 CKSQYB104K25 CKSQYB224K16
C113–C116, C1401, C1402 C147, C148, C153, C154 C205, C206, C213, C214 C251, C252, C304, C307 C331, C332, C359–C362	CCSQSL270J50 CCSQSL270J50 CCSQSL270J50 CCSQSL270J50 CCSQSL270J50		C197, C198 C315 (4700P/50V) C409, C410, C437, C438 (5600P/50V) C465, C466, C493, C494 (5600P/50V) C321 (6800P/50V)		CKSQYB273K50 DCE1008 DCE1009 DCE1009 DCE1010
C401, C402, C415, C416 C429, C430, C443, C444 C457, C458, C471, C472 C485, C486 C405, C406, C433, C434	CCSQSL270J50 CCSQSL270J50 CCSQSL270J50 CCSQSL270J50 CCSQSL271J50		RESISTORS		
C461, C462, C489, C490 C175–C178, C211, C212 C305, C306, C308, C341–C350, C379, C380 C411, C412, C439, C440	CCSQSL271J50 CEAL100M16 CEAL100M16 CEAL100M16		R379, R380, R953, R954 (43Ω) R211, R212, R215, R216, R307 R321, R322, R365–R368 R373, R374 R141, R1417–R1419, R142		DCN1137 RN1/10SE1001D RN1/10SE1001D RN1/10SE1001D RN1/10SE1002D RN1/10SE1002D RN1/10SE1002D RN1/10SE1003D RN1/10SE1003D
			R1420–R1428, R1431, R1432 R255, R256, R310, R311 R313, R314 R135, R136, R163, R164 R169, R170, R173–R178		RN1/10SE1002D RN1/10SE1002D RN1/10SE1002D RN1/10SE1003D RN1/10SE1003D
			R259–R270, R320, R323, R324 R421, R422, R445, R446 R471, R472, R495, R496 R201, R202 R318		RN1/10SE1003D RN1/10SE1003D RN1/10SE1003D RN1/10SE1102D RN1/10SE1201D

DJM-600

Mark No.	Description	Part No.
R137, R138 R411, R412, R435, R436 R461, R462, R485, R486 R139, R140 R353, R354, R357, R358		RN1/10SE1202D RN1/10SE1300D RN1/10SE1300D RN1/10SE1301D RN1/10SE1501D
R145, R146, R213, R214 R219, R220, R251, R252 R277, R278, R301, R302 R403, R404, R427, R428 R453, R454, R477, R478		RN1/10SE1502D RN1/10SE1502D RN1/10SE1502D RN1/10SE1502D RN1/10SE1502D
R407, R408, R415, R416 R431, R432, R439, R440 R457, R458, R465, R466 R481, R482, R489, R490 R387-R390		RN1/10SE1800D RN1/10SE1800D RN1/10SE1800D RN1/10SE1800D RN1/10SE1801D
R1429, R1430 R308 R125-R128, R143, R144 R159-R162, R203-R210 R217, R218, R225-R228		RN1/10SE2002D RN1/10SE2201D RN1/10SE2202D RN1/10SE2202D RN1/10SE2202D
R275, R276, R325-R340 R347-R350, R359-R364 R309 R381, R382 R129-R132, R801-R808		RN1/10SE2202D RN1/10SE2202D RN1/10SE2402D RN1/10SE2701D RN1/10SE2702D
R391, R392 R317, R341, R345, R346 R811-R818 R303, R304, R312, R315 R375, R376		RN1/10SE3001D RN1/10SE3002D RN1/10SE3002D RN1/10SE3301D RN1/10SE3602D
R257, R258 R401, R402, R425, R426 R451, R452, R475, R476 R253, R254 R316, R319		RN1/10SE3902D RN1/10SE4301D RN1/10SE4301D RN1/10SE4302D RN1/10SE4701D
R417, R418, R441, R442 R467, R468, R491, R492 R377, R378, R405, R406 R419, R420, R429, R430 R443, R444, R455, R456		RN1/10SE4702D RN1/10SE4702D RN1/10SE5101D RN1/10SE5101D RN1/10SE5101D
R469, R470, R479, R480 R493, R494 R133, R134, R179, R180 R305, R306, R409, R410 R433, R434, R459, R460		RN1/10SE5101D RN1/10SE5101D RN1/10SE5602D RN1/10SE6202D RN1/10SE6202D
R483, R484 R351, R352, R355, R356 R413, R414, R437, R438 R463, R464, R487, R488 VR301 (10kΩ-B)		RN1/10SE6202D RN1/10SE7501D RN1/10SE7502D RN1/10SE7502D DCS1050
VR302-VR304 (10kΩ-B) VR305, VR402-VR404, VR406-VR408 (10kΩ-B) VR410-VR412, VR414-VR416 (10kΩ-B) VR202, VR306, VR401, VR413 (10kΩ-B)		DCS1052 DCS1053 DCS1053 DCS1054
VR201 (10kΩ) Other Resistors		DCS1055 RS1/10S□□□ J

Mark No.	Description	Part No.
OTHERS		
	3P CABLE HOLDER	51048-0300
	6P CABLE HOLDER	51048-0600
	9P CABLE HOLDER	51048-0900
	10P CABLE HOLDER	51048-1000
CN102	CONNECTOR 19P	52492-1920
CN122	CONNECTOR 21P	52492-2120
CN101	CONNECTOR 23P	52492-2320
CN124	CONNECTOR 28P	52492-2820
J133-J135	6P JUMPER WIRE	D20PYY0605E
J132	9P JUMPER WIRE	D20PYY0905E
J131	10P JUMPER WIRE	D20PYY1005E
J110	CONNECTOR ASSY	DKP3509

N EFFECT ASSY

SEMICONDUCTORS

Q2173, Q2174	2SC1740S
D2171, D2172	BR3889S
D2173, D2174	PG3889S

SWITCHES

S2172	ASX7011
S2173	DSG1063
S2171	DSG1068

RESISTORS

VR2701 (10kΩ-B)	DCS1051
All Resistors	RS1/10S&&& J

OTHERS

J118	11P CABLE HOLDER	51048-1100
	11P JUMPER WIRE	D20PYY1115E

L C.F ASSY

RESISTORS

VR1 (10kW-B)	DCV1006
--------------	---------

OTHERS

CN110	6P CONNECTOR	173979-6
-------	--------------	----------

E FADER VR (MAIN) ASSY

RESISTORS

VR1005 (10kΩ-B)	DCV1010
-----------------	---------

OTHERS

CN135	6PJUMPER CONNECTOR	52151-0610
-------	--------------------	------------

G FADER VR (CH1) ASSY

SEMICONDUCTORS

D1001	GP1S94
-------	--------

RESISTORS

VR1001 (10kΩ-B)	DCV1010
-----------------	---------

Mark No.	Description	Part No.
H	FADER VR (CH2) ASSY	
	SEMICONDUCTORS	
	D1002	GP1S94
	RESISTORS	
	VR1002 (10kΩ-B)	DCV1010
	OTHERS	
	CN132 3PJUMPER CONNECTOR	52151-0910
I	FADER VR (CH3) ASSY	
	RESISTORS	
	VR1003 (10kΩ-B)	DCV1010
	OTHERS	
	CN133 6PJUMPER CONNECTOR	52151-0610
J	FADER VR (CH4) ASSY	
	RESISTORS	
	VR1004 (10kΩ-B)	DCV1010
	OTHERS	
	CN134 6PJUMPER CONNECTOR	52151-0610
O	DIGITAL SW ASSY	
	SWITCHES AND RELAYS	
	S2174 DSG1067	
	OTHERS	
	J141 5P CABLE HOLDER	51048-0500
	5P JUMPER WIRE	D20PYY0520E
S	POWER SW ASSY	
	SWITCHES AND RELAYS	
	△ S1 DSA1028	
	CAPACITORS	
	△ C1 (10000P/AC250V)	ACG7033
R	REG. ASSY	
	SEMICONDUCTORS	
	△ IC550	NJM7815FA
	△ IC552	NJM78M08FA
	△ IC551	NJM7915FA
	△ IC553	NJM79M08FA
	D573, D574	11EQS06
	OTHERS	
	J152 10P CABLE HOLDER	51048-1000
	10P JUMPER WIRE	D20PYY1020E
	HEAT SINK VR	VNH1049
T	TRANS ASSY	
	OTHERS	
	△ J8 5P CABLE HOLDER	51052-0500
	J4 CONNECTOR ASSEMBLY	DKP3507
	PARALLEL CORD	DXUY0515E

Mark No.	Description	Part No.
Q	POWER ASSY	
	SEMICONDUCTORS	
	△ IC555-IC557 (0.6A)	ICP-N15
	△ IC558 (2A)	ICP-N50
	△ IC561	NJM78M08FA
	△ IC554	PQ05RR12
	Q551	2SC2458
	△ Q550	2SD2395
	△ D563, D564	11E2
	△ D565, D571	11EQS06
	D562	1SS254
	△ D550	MTZJ6.2B
	△ D552	S2VB20
	△ D551	S2VB20-F1
	△ D559-D561	S5688G
	COILS AND FILTERS	
	△ L1	VTL-004
	CAPACITORS	
	△ C2, C3 (10000P/AC250V)	ACG7033
	C570	CEANP4R7M35
	C572	CEAT330M16
	C562	CEHAT101M10
	C554, C555	CEHAT101M16
	C564	CEHAT103M16
	C567	CEHAT221M16
	C561	CEHAT330M25
	C552, C553	CEHAT470M25
	C571	CEHAT4R7M50
	C558, C560, C568, C569	CKCYF103Z50
	C550, C551, C563	CKSQYB103K50
	C559, C565, C566	CKSQYF103Z50
	C556, C557 (3300μF/35V)	DCH1132
	RESISTORS	
	R551	RS1/10S103J
	R557-R559	RS1/10S223J
	Other Resistors	RD1/4PU□□□ J
	OTHERS	
	4P CABLE HOLDER	51048-0400
	△ CN152 10PJUMPER CONNECTOR	52147-1010
	CN2 3P CONNECTOR	B3P5-VH
	J121 JUMPER WIRE	D20PYY0420E
	HEAT SINK	DNG1066
	CN4 5P CONNECTOR	KPC5
	HEAT SINK	REF1003
	△ CN1 AC CODE SOCKET	RKP1751
	H1, H2 FUSE HOLDER	RKR1003
	PCB BINDER	VEF1040
	KN501 PCB BINDER	VNF1084

DJM-600

Mark No.	Description	Part No.
M DSP ASSY		
SEMICONDUCTORS		
	IC502	AK4520A
	IC515, IC517	BU4053BCF
△	IC513 (0.4A)	ICP-N10
	IC500	KM48V2100CS-6
△	IC526	M5237ML
	IC520, IC521	NJM2100M
	IC123, IC505, IC511, IC512, IC514	NJM4558MD
	IC518, IC519, IC523	NJM4558MD
△	IC527	NJM78M05FA
	IC510	PE5156B
	IC516	TC74HC74AF
	IC506	TC74HCT7007AF
	IC501	TC7S04F
	IC503, IC509	TC7WU04F
	IC507	TC9163AF
	IC504	XCB56364
	Q508	2SB1132
	Q505	2SC1740S
	Q504	2SC2458
	Q500, Q501, Q506, Q507	DTC124EK
	D701, D702	11E2
	D500-D502, D504, D505	1SS355
	D507-D510, D512-D515, D517	1SS355
	D519-D527, D532	1SS355
	D503, D506, D511, D516, D518	UDZS5.6B
	D533	UDZS5.6B
COILS AND FILTERS		
	L507	ATL7002
	L503	DTL1024
	L500, L502	LFA101J
	L504, L505, L510	QTL1013
CAPACITORS		
	C622, C646	CCSQCH100D50
	C690	CCSQCH102J50
	C505, C516, C625, C626	CCSQCH150J50
	C580, C581, C615	CCSQCH221J50
	C526, C528, C536, C538, C541	CCSQCH470J50
	C543, C545, C546	CCSQCH470J50
	C691, C698	CCSQSL101J50
	C679, C684	CCSQSL152J50
	C660, C661, C693, C695	CCSQSL270J50
	C502, C508	CCSQSL470J50
	C596, C598, C608, C609, C616	CCSRCH101J50
	C619, C620, C628, C630	CCSRCH101J50
	C637, C638, C642, C644, C650	CCSRCH101J50
	C652, C653, C656, C668	CCSRCH101J50
	C687	CCSRCH221J50
	C511, C521	CEANP100M16
	C701	CEAT100M50
	C509, C576, C585, C613, C663	CEAT101M10
	C689	CEAT101M10
	C702	CEAT221M6R3

Mark No.	Description	Part No.
	C600, C659, C669, C670	CEAT470M16
	C676, C677, C680	CEAT470M16
	C578, C589	CEHAT101M10
	C513, C522, C534, C539	CEHAT2R2M50
	C515, C519, C554, C555	CEJA100M16
	C557, C558, C562, C563	CEJA100M16
	C566, C567, C586, C632, C645	CEJA100M16
	C673, C692	CEJA100M16
	C672, C682	CEJA221M6R3
	C503, C547, C559	CEJA2R2M50
	C572	CEJA4R7M50
	C574	CKSQYB102K50
	C191, C192, C500, C501	CKSQYB103K50
	C506, C507, C512, C524, C525	CKSQYB103K50
	C529, C530, C532, C533, C537	CKSQYB103K50
	C540, C542, C544, C548-C553	CKSQYB103K50
	C556, C560, C561, C568-C571	CKSQYB103K50
	C577, C588, C591, C614, C623	CKSQYB103K50
	C633, C671, C674, C681, C694	CKSQYB103K50
	C699, C700, C703, C704, C732	CKSQYB103K50
	C798, C799	CKSQYB103K50
	C510, C514, C517, C518, C523	CKSQYB104K25
	C527, C531, C535, C564, C565	CKSQYB104K25
	C573, C575, C579, C582, C584	CKSQYB104K25
	C587, C592, C599, C627, C678	CKSQYB104K25
	C683, C688	CKSQYB104K25
	C504, C520	CKSQYB473K50
	C662	CKSRYB103K50
	C594, C595, C597, C610	CKSRYB104K16
	C617, C618, C621, C629, C631	CKSRYB104K16
	C636, C639, C641, C643, C651	CKSRYB104K16
	C654, C655, C657, C666, C686	CKSRYB104K16
	C664	CKSRYB562K50
RESISTORS		
	R665, R666, R683, R688, R757 (82Ω)	ACN7049
	R747-R753 (1kΩ)	ACN7060
	R754 (47kΩ)	ACN7077
	R501	RN1/10SE1001D
	R502, R508, R705, R710	RN1/10SE1002D
	R712, R713, R724, R733-R735	RN1/10SE1002D
	R680, R689	RN1/10SE1202D
	R707, R708, R716, R721, R727	RN1/10SE2202D
	R731	RN1/10SE2202D
	R505, R517	RN1/10SE2702D
	R714, R718, R719, R725	RN1/10SE3300D
	R529, R530, R679, R694	RN1/10SE4702D
	R673, R684	RN1/10SE6802D
	R709, R732	RN1/10SE8201D
	R504	RN1/10SE9101D
	R655	RS1/10S4301F
	R654	RS1/10S7501F
	R682	RS1/16S0R0J
	R726	RS1/16S105J
	R548	RS1/16S151J
	R601, R664, R677, R706	RS1/16S473J
	Other Resistors	RS1/10S□□□ J

Mark No.	Description	Part No.
OTHERS		
	13P CABLE HOLDER	51048-1300
CN141	5P JUMPER CONNECTOR	52147-0510
CN118	11PJUMPER CONNECTOR	52147-1110
CN116	16PJUMPER CONNECTOR	52147-1610
CN117	17PJUMPER CONNECTOR	52147-1710
CN522	CONNECTOR 21P	52492-2120
CN524	CONNECTOR 28P	52492-2820
J106	13P WIRE	D20PYY1340E
X502	4.19MHz	DSS1105
X501	20MHz	DSS1110
X500	16.9344MHz	PSS1008

K MIC JACK ASSY

CAPACITORS

C301	CKSQYB103K50
------	--------------

OTHERS

	3P CABLE HOLDER	51048-0300
J120	JUMPER WIRE	D20PYY0310E
CN301	CONNECTOR	DKN1136

F HP JACK ASSY

CAPACITORS

C382	CKCYF103Z50
------	-------------

OTHERS

	3P CABLE HOLDER	51048-0300
J109	JUMPER WIRE	D20PYY0310E
JA302	PHONE JACK	DKN1179

A TERMINAL ASSY

SEMICONDUCTORS

IC801-IC803	NJM2068M
IC804	NJM4580D
IC805-IC809	NJM4580ED
IC810	TC9215AF
Q801-Q808	2SC3326
D801-D804	1SS355

COILS AND FILTERS

△	L801-L804	VTL1105
---	-----------	---------

CAPACITORS

C851-C882, C891-C894	CCSQSL101J50
C994-C997	CEANPR33M50
C803, C804, C809, C810	CEAT100M50
C814, C815, C820, C821	CEAT100M50
C825, C826, C831, C832	CEAT100M50
C883-C890, C895, C896	CEAT100M50
C915, C916, C921-C924, C933	CEAT100M50
C935-C942, C944	CEAT100M50
C801, C802, C812, C813	CEAT220M25
C823, C824	CEAT220M25
C903, C904	CEJA100M16
C1901-C1903, C822, C898, C906	CKCYF103Z50
C925, C927, C929, C931	CKCYF103Z50
C837, C840	CKCYF473Z50
C833, C835, C836, C838, C839	CKSQYB103K50

Mark No.	Description	Part No.
	C841, C842, C850, C901, C902	CKSQYB103K50
	C905, C907, C909, C911	CKSQYB103K50
	C913, C914, C917-C920	CKSQYB103K50
	C990-C993	CKSQYB103K50
	C843-C846	CQMA152J50
	C805, C806, C816, C817	CQMA222J50
	C827, C828	CQMA222J50
	C807, C808, C818, C819	CQMA681J50
	C829, C830	CQMA681J50

RESISTORS

R873	RD1/4PU102J
R821, R822, R833, R834	RD1/4PU332J
R845, R846	RD1/4PU332J
R867-R870, R877, R878	RN1/10SE1000D
R880-R883	RN1/10SE1000D
R819, R820, R831, R832	RN1/10SE1001D
R843, R844	RN1/10SE1001D
R827, R828, R839, R840	RN1/10SE1203D
R851, R852	RN1/10SE1203D
R801-R804, R809, R810	RN1/10SE1302D
R813, R814, R890, R891	RN1/10SE1302D
R805-R808, R811, R812	RN1/10SE1502D
R815, R816, R892, R893	RN1/10SE1502D
R912, R913	RN1/10SE1502D
R857-R860, R865, R866	RN1/10SE4300D
R907, R908	RN1/10SE4300D
R871, R872	RN1/10SE4302D
R1801, R1802, R1807, R1808	RN1/10SK7503D
R1813, R1814, R825, R826	RN1/10SK7503D
R837, R838, R849, R850	RN1/10SK7503D
VR801 (10kΩ)	DSCS1056
Other Resistors	RS1/10S□□□ J

OTHERS

CN107	7P JUMPER CONNECTOR	52147-0710
CN106	13P JUMPER CONNECTOR	52147-1310
CN15116P	JUMPER CONNECTOR	52147-1610
CN801-CN804, CN807	4P PIN JACK	AKB7015
CN112	19P CONNECTOR	HLEM19S-1
CN111	23P CONNECTOR	HLEM23S-1
JA805, JA806	REMO. JACK	RKN1004
	PCB BINDER	VEF1040
KN801	EARTH METAL FITTING	VNF1084

DJM-600

Mark No.	Description	Part No.
B PHONE ASSY		
SEMICONDUCTORS		
IC604		BU4066BC
IC605		NJM2068D
IC231		NJM4556AD
IC232, IC233		NJM4556AL
IC601-IC603		NJM4558DX
IC606		NJM4580D
Q231-Q234, Q602-Q613		2SC2878
Q601		DTA124ES
D1601-D1608		1SS355
CAPACITORS		
C604		CCCSL220J50
C642-C645		CCCSL270J50
C233-C240		CCSQCH151J50
C602, C613, C614, C621, C622		CCSQSL101J50
C629, C630, C646-C652		CCSQSL101J50
C253, C254		CEALNPR33M50
C640, C641, C661-C664		CEANPR33M50
C603, C607-C609, C619, C620		CEAT100M50
C625, C626, C631, C632		CEAT100M50
C636, C637, C653, C654, C656		CEAT100M50
C243-C246		CEAT101M25
C601, C660		CGCYX104K25
C612, C635		CKCYF103Z50
C634		CKCYF473Z50
C1201, C1202, C231, C232, C241		CKSQYB103K50
C247, C605, C606, C610, C611		CKSQYB103K50
C617, C618, C623, C624		CKSQYB103K50
C627, C628, C638, C639		CKSQYB103K50
RESISTORS		
R253-R256		RN1/10SE1003D
R265, R266, R675, R676		RN1/10SE1502D
R233-R240		RN1/10SE2201D
R249-R252		RN1/10SE2700D
R631-R634		RN1/10SE4300D
R1601-R1604		RN1/10SE4302D
R241-R248		RN1/10SE5101D
R1606-R1608, R1610-R1612		RS1/10SOR0J
R635, R636, R659, R660		RS1/10S104J
R663, R664		RS1/10S104J
R614, R658, R673, R674		RS1/10S473J
R261-R264, R637-R640		RS1/10S912J
R651-R654, R657, R668-R670		RS1/10S912J
Other Resistors		RD1/4PU&&& J
OTHERS		
	7P CABLE HOLDER	51048-0700
	16P CABLE HOLDER	51048-1600
CN121	4P JUMPER CONNECTOR	52147-0410
CN108	6P JUMPER CONNECTOR	52147-0610
J107	7P JUMPERWIRE	D20PYY0710E
J151	16P JUMPERWIRE	D20PYY1610E
JA607	MIC JACK	DKN1189
JA605	2P PINJACK	VKB1031
JA601-JA604	MIC JACK	VKN1147
KN601	EARTH METAL FITTING	VNF1084

Mark No.	Description	Part No.
C BAL. OUT ASSY		
CAPACITORS		
	C249-C252	CKCYF103Z50
RESISTORS		
	All Resistors	RD1/4PU□□□ J
OTHERS		
	6P CABLE HOLDER	51048-0600
J108	6P JUMPER WIRE	D20PYY0610E
JA231, JA232	3P CONNECTOR	DKN1201
P 7 SEG ASSY		
SEMICONDUCTORS		
IC701, IC702		LB1740
Q701-Q712		2SD1919
D801-D810		1SS254
D707-D715, D722-D730		DEL1037
D737-D745, D752-D760		DEL1037
D767-D775, D782-D790		DEL1037
D701-D706, D716-D721		DEL1039
D731-D736, D746-D751		DEL1039
D761-D766, D776-D781		DEL1039
D662-D664, D695-D698		NKR131S
D665-D670, D672-D677		SLR-342DUTB7
D683-D686		SLR-342DUTB7
D671, D681, D682, D792-D796		SLR-342VRTB7
SWITCHES		
	S652-S654, S657-S660	ASG7005
	S655, S661, S662	VSG1010
CAPACITORS		
	C702, C703	CKPUYF103Z25
RESISTORS		
	All Resistors	RD1/4PU□□□ J
OTHERS		
J116	16P JUMPER WIRE	D20PWY1625E
J117	17P JUMPER WIRE	D20PWY1735E
	LEVEL METER HOLDER	DNK3757

6. ADJUSTMENT

There is no information to be shown in this chapter.

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 TEST MODE

1. Turn on the power in the following condition. (Fig.1)

FADER START CH1 SW : ON ①

CH2 SW : ON ②

SAMPLER SW : ON ③

EFFECT SW : ON ④

- The lower 7 seg display becomes [F], and can confirm that was entered the test mode.

2. How to use the test mode

- Upper and lower 7 seg displays become [000] and [0000] when pushes up the EFFECT ON/OFF SW. Then the displays will change when pushes the EFFECT ON/OFF SW.

- 7 seg Displays 0 to 9

- MONITOR LED
Talk over → CH1 → CH2 → CH3 → CH4 → MASTER → EFFECT 1 ...

* Four LEDs on the upper 7 seg at the time of CH1 to CH4 light, too.

- LEVEL METER
By one turns on order from the lower part.

- EFFECT CH
Turns on order from the left.

- Rhythm LED
Turns on order from the left.

- EFFECT ON/OFF LED
Orange → Green → Red → ...

- Lower 7 seg decimal point
Lights out → Left → Right → ...

- BPM range LED
Lights out → Left → Right → ...


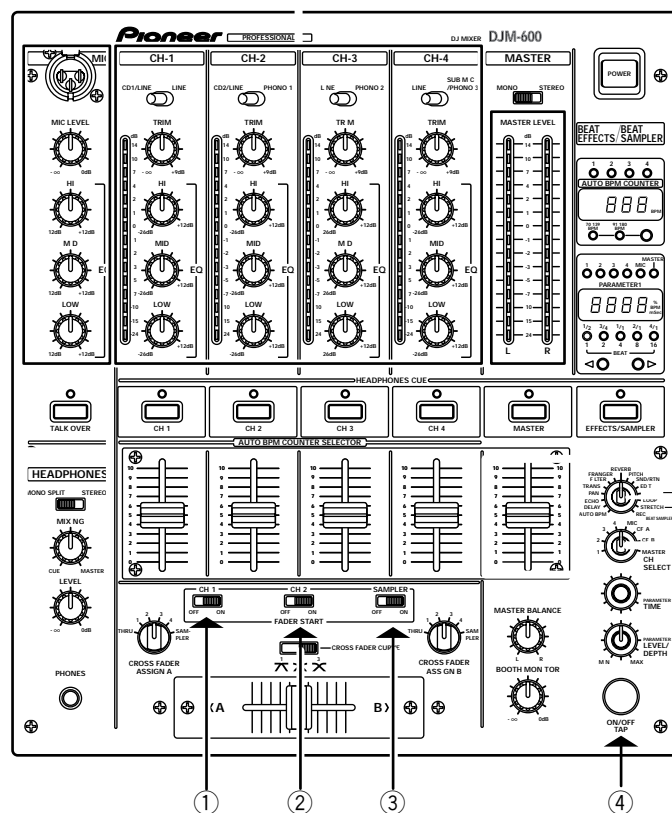




Fig.1


7.1.2 DISASSEMBLY

CF and FADER VR Assys


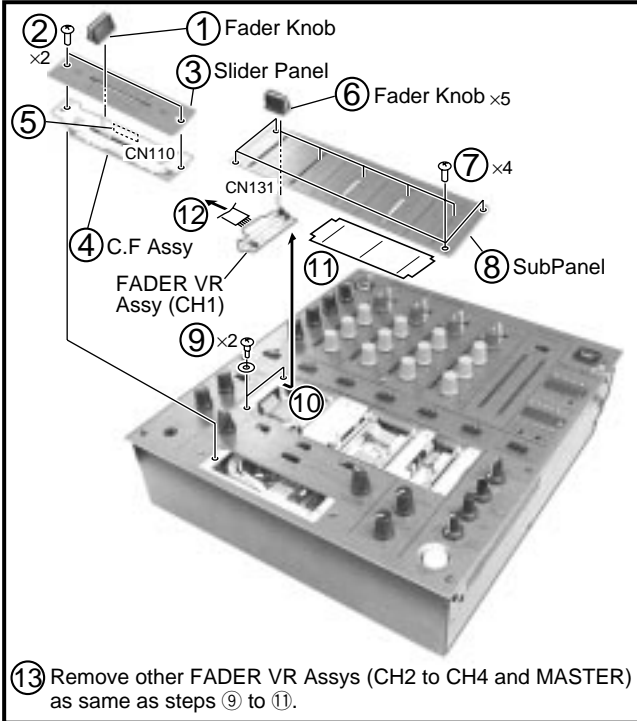


Control Panel Section and EFFECT VR Assy

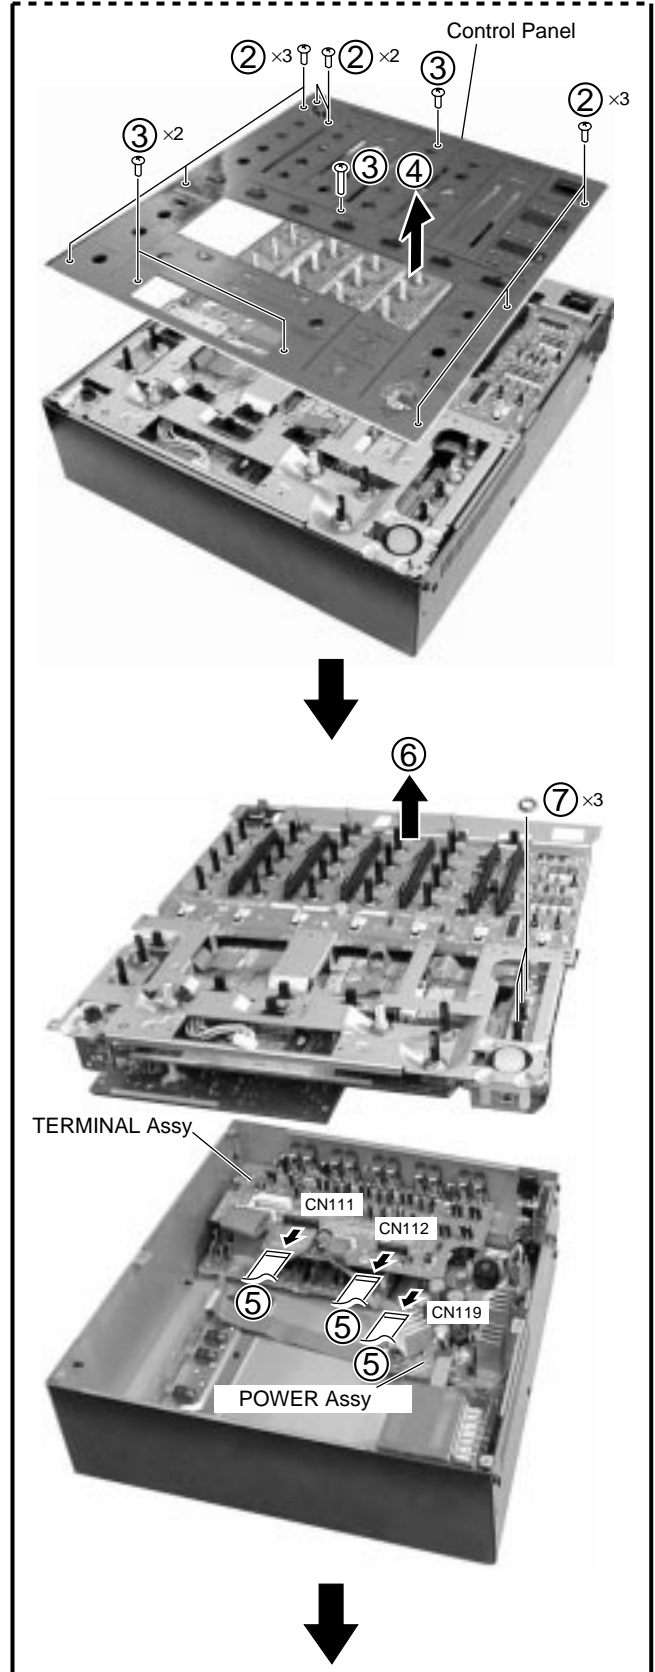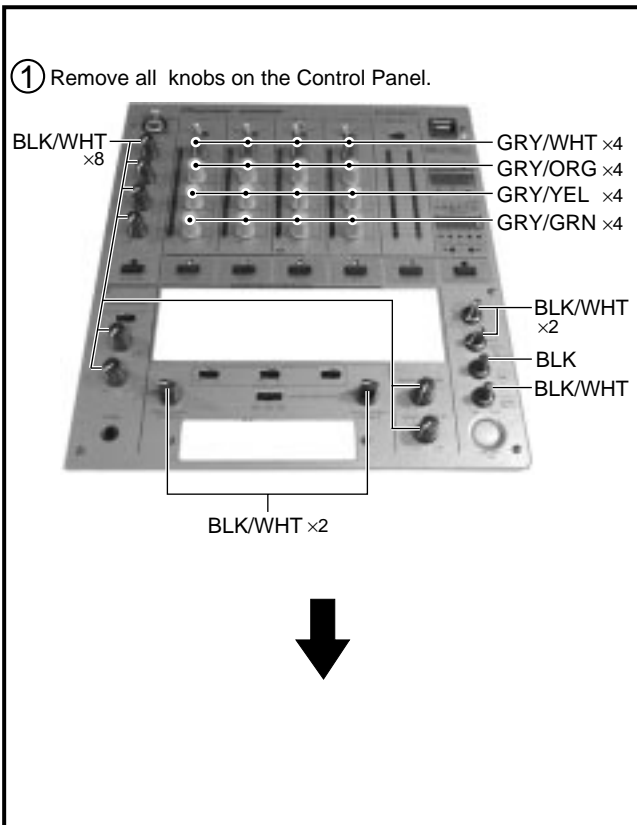


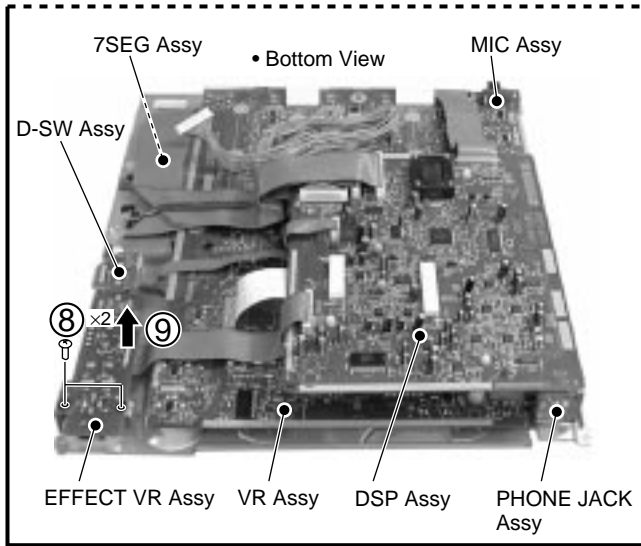

■ TERMINAL and HORN Assys

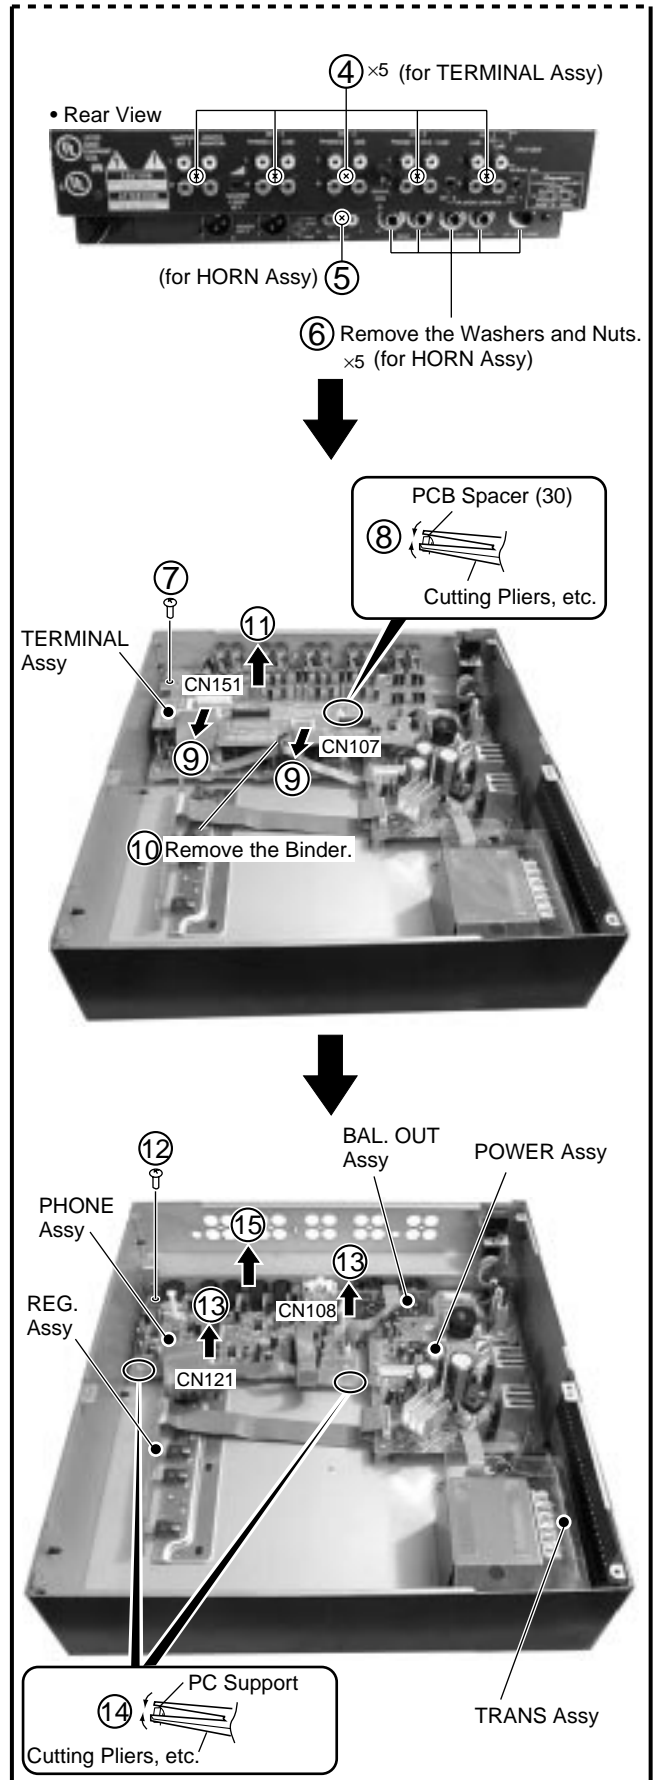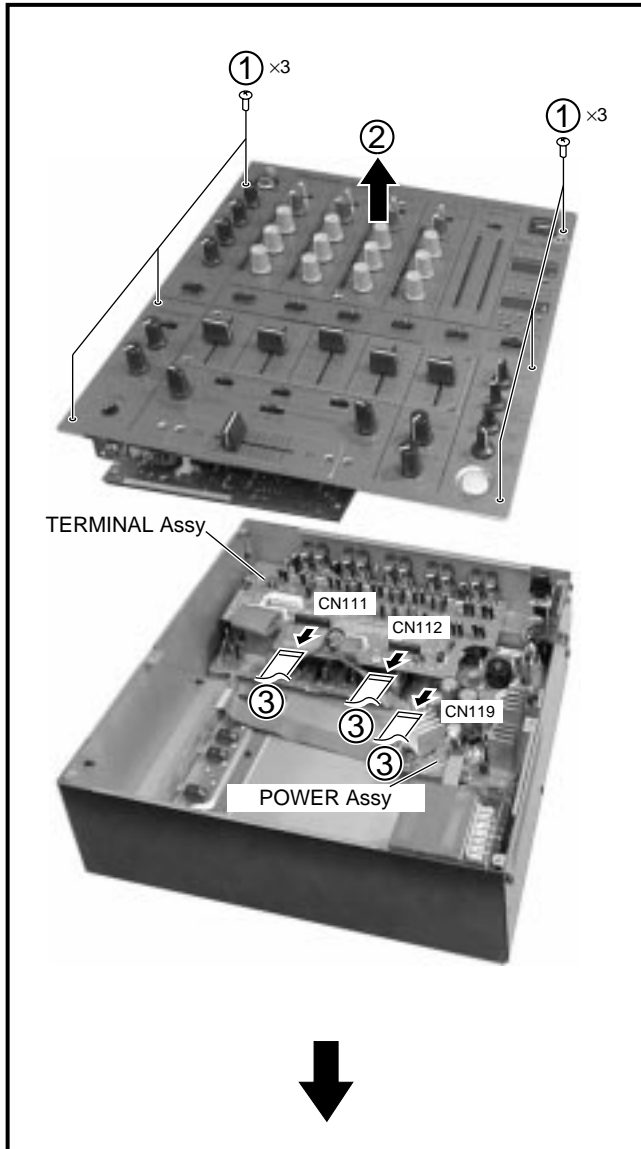

■ Styling of Diagnosis

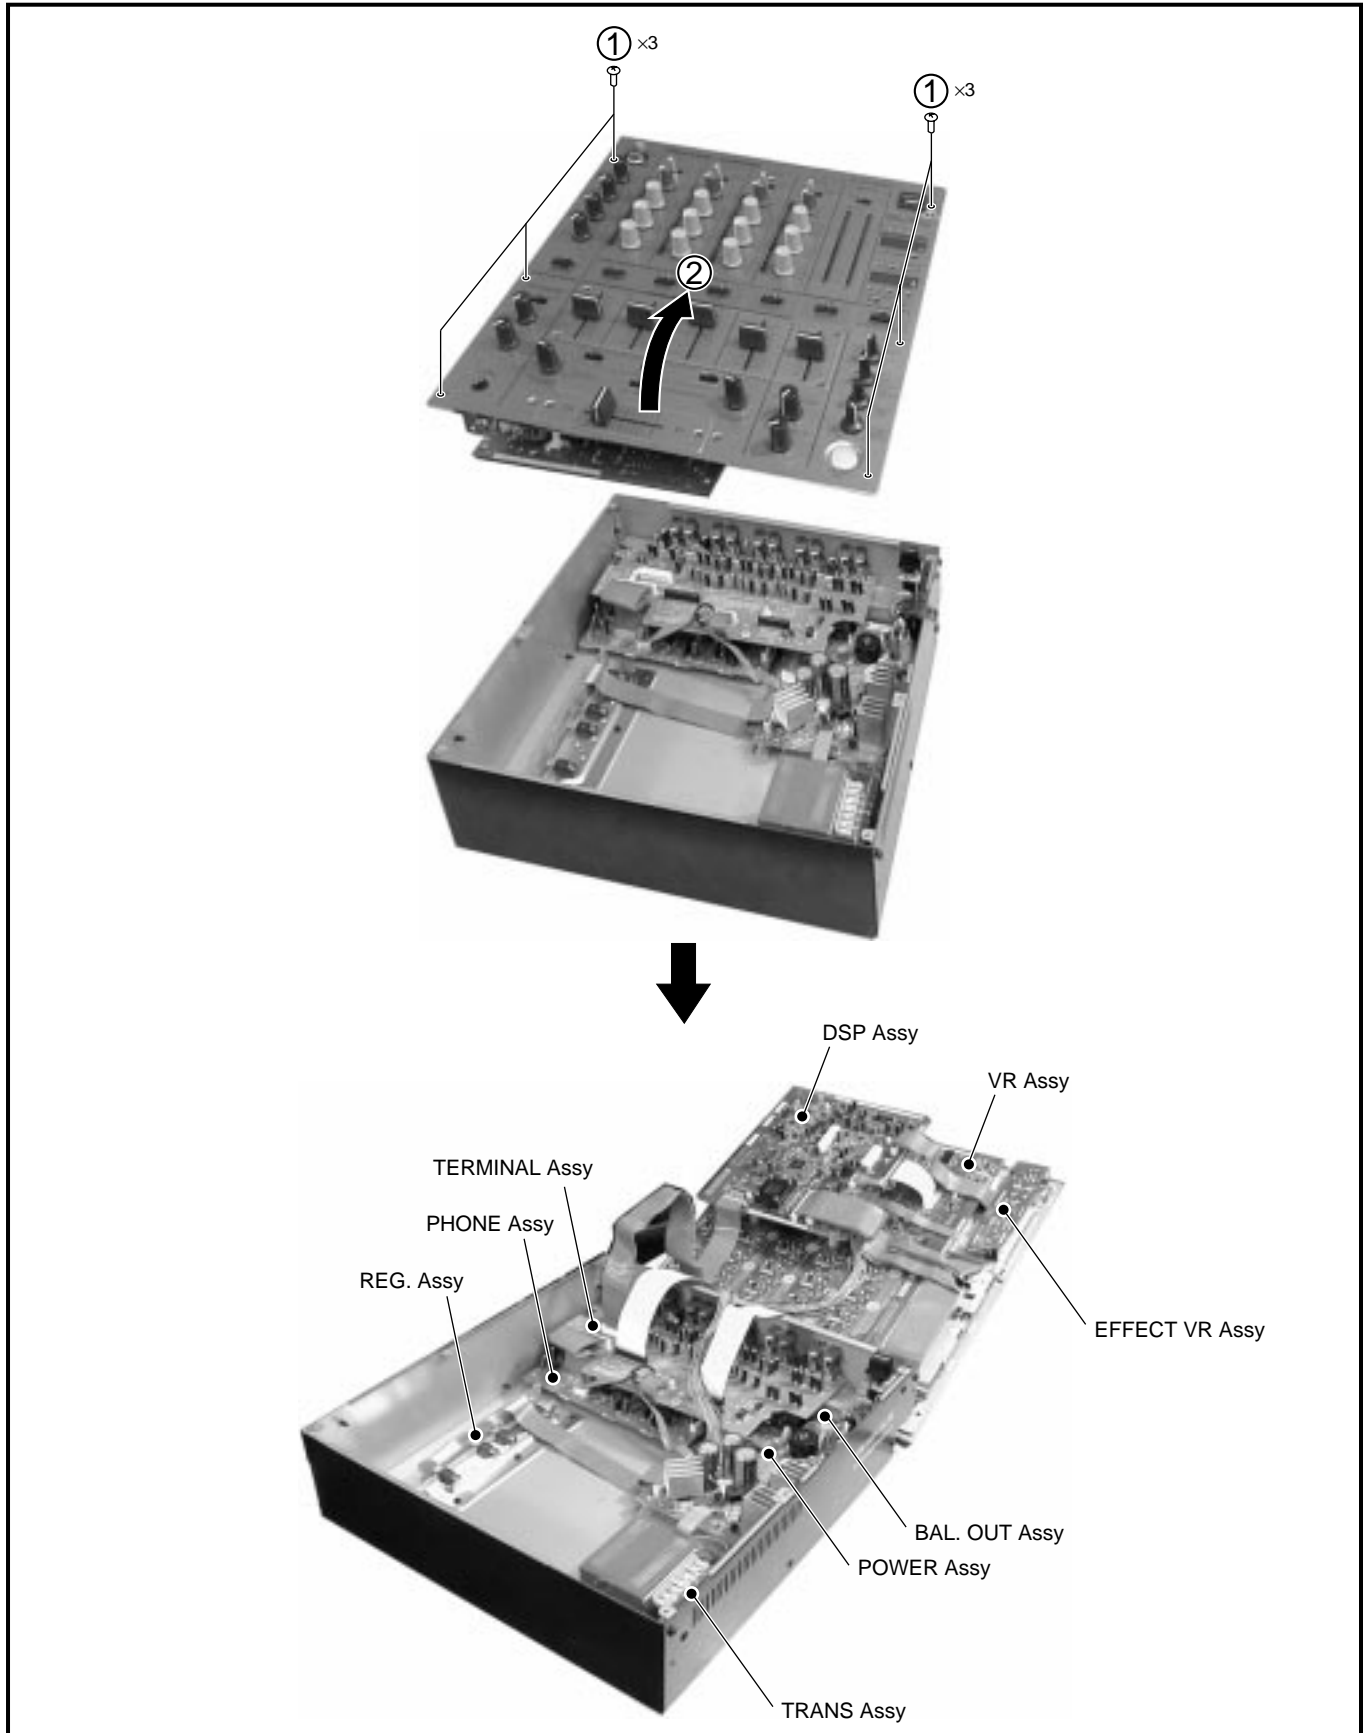

7.2 PARTS


7.2.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ TC9215AF(VR ASSY : IC308)

• Analog SW

● Block Diagram

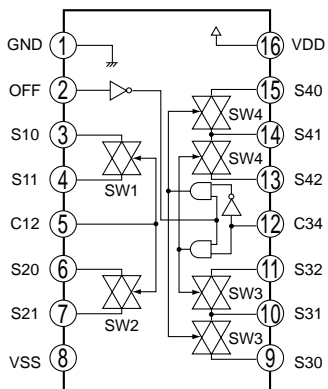


● Pin Function

No.	Pin Name	Function
1	GND	GND
2	OFF	Input terminal (SW3, SW4 off)
3	S10	Input /Output terminal (SW1)
4	S11	
5	C12	Control terminal (SW1, SW2)
6	S20	Input /Output terminal (SW2)
7	S21	
8	VSS	-8V
9	S30	Input /Output terminal (SW3)
10	S31	
11	S32	
12	C34	Control terminal (SW3, SW4)
13	S42	Input /Output terminal (SW4)
14	S41	
15	S40	
16	VDD	+8V

■ XCB56364 (DSP ASSY : IC504)

• 24-Bit Audio Digital Signal Processor


● Block Diagram

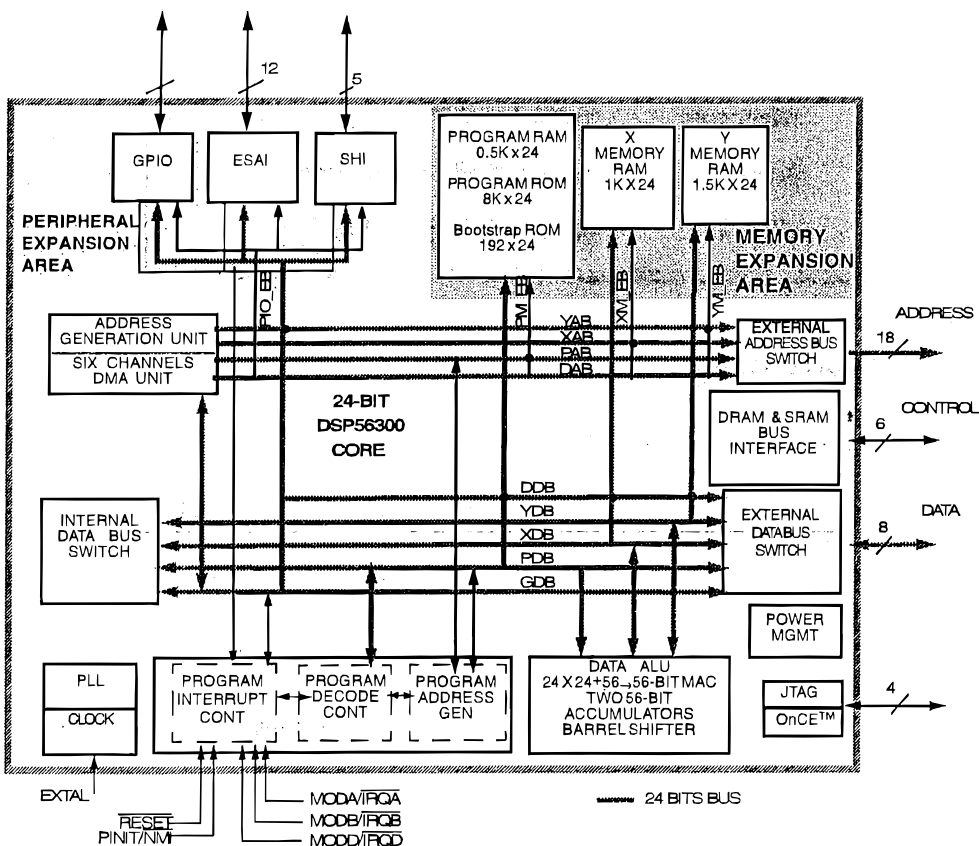

8. PANEL FACILITIES AND SPECIFICATIONS

8.1 PANEL FACILITIES

CONTROL PANEL

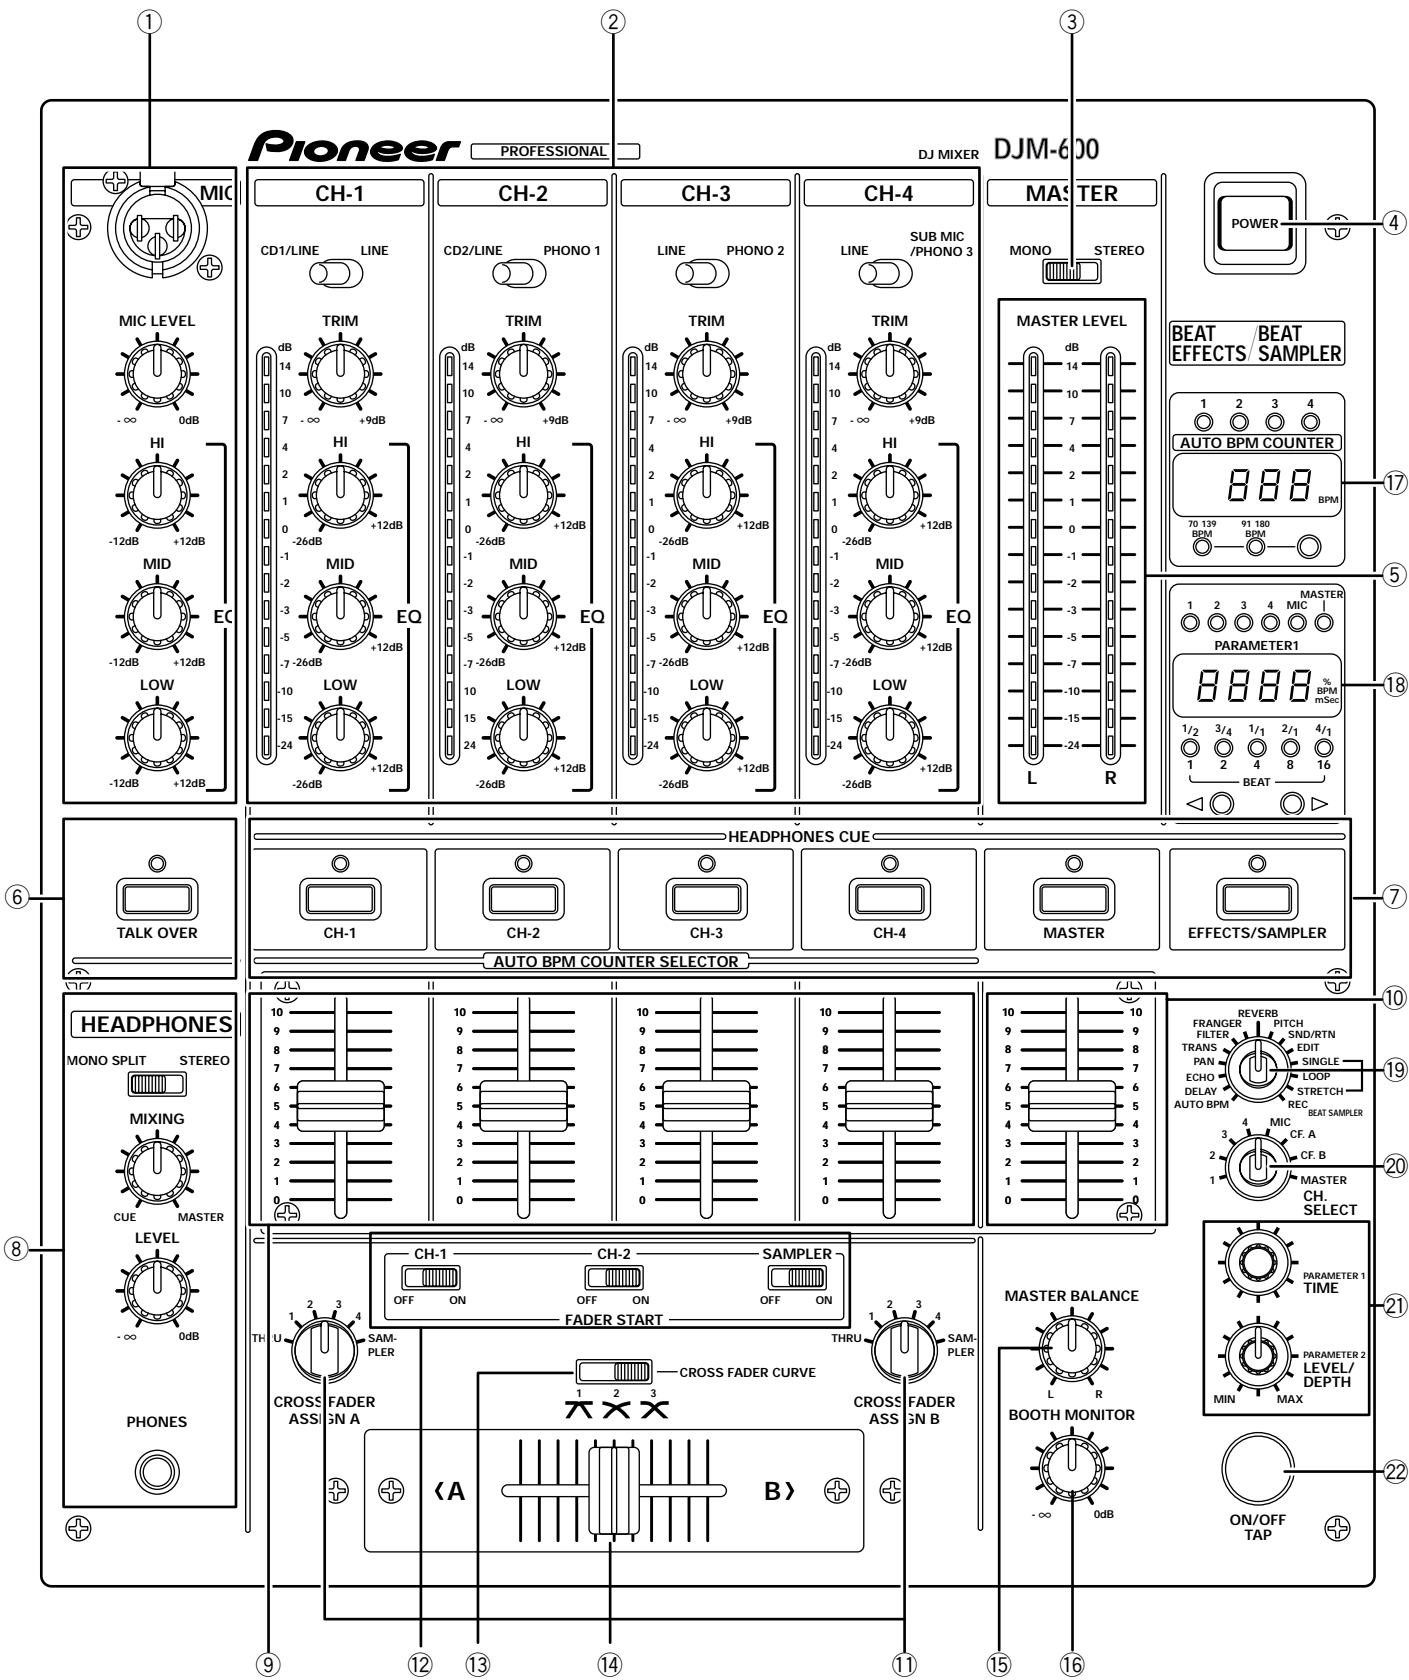

① Main Microphone Input Terminal and Microphone Control Knob

Main Microphone Input Terminal:

For connecting a microphone that has a cannon-type terminal.

MIC LEVEL (microphone level):

Adjusts the volume of the main microphone.
(Attenuation: $-\infty$ to 0dB)

HI:

Adjusts high-tone microphone sound.
At the center position, sound is flat.
Turn to the right to increase sound (to +12dB at 10kHz).
Turn to the left to decrease sound (to -12dB at 10kHz).

MID:

Adjusts mid-tone microphone sound.
At the center position, sound is flat.
Turn to the right to increase sound (to +12dB at 1kHz).
Turn to the left to decrease sound (to -12dB at 1kHz).

LOW:

Adjusts low-tone microphone sound.
At the center position, sound is flat.
Turn to the right to increase sound (to +12dB at 100Hz).
Turn to the left to decrease sound (to -12dB at 100Hz).

② Input Selector Switches, Control Knobs, and Peak Level Meters for CH-1 to CH-4

Input Selector Switches:

These switches select what input source to use from among the units connected to each channel.

CH-1: Switches between CD1/LINE and LINE

CH-2: Switches between CD2/LINE and PHONO 1

CH-3: Switches between LINE and PHONO 2

CH-4: Switches between LINE and SUB MIC/PHONO 3

TRIM:

Adjusts the input signal level.
Turn to the right to increase level (to +9dB).
Turn to the left to decrease level (to $-\infty$).

HI:

Adjusts high-tone input sounds.
At the center position, sound will be flat.
Turn to the right to increase sound (to +12dB at 13kHz).
Turn to the left to decrease sound (to -26dB at 13kHz).

MID:

Adjusts mid-tone input sound.
At the center position, sound will be flat.
Turn to the right to increase sound (to +12dB at 1kHz).
Turn to the left to decrease sound (to -26dB at 1kHz).

LOW:

Adjusts low-tone input sound.
At the center position, sound is flat.
Turn to the right to increase sound (to +12dB at 70Hz).
Turn to the left to decrease sound (to -12dB at 70Hz).

Peak Level Meter:

Displays peak level, held for 2 seconds.
Displays level before it is subjected to the channel fader.
Display range: -24dB to +14dB.

③ MONO/STEREO (Master Output Monaural/Stereo Selection Switch)

Used to select either MONO or STEREO for master output.

④ POWER (Power Supply Switch)

⑤ MASTER LEVEL (Master Level Meter)

Displays the output level following master volume adjustment, held for 2 seconds.
Display range: -24dB to +14dB.

⑥ TALK OVER

While this switch is held down, sound levels other than the main microphone's will be lowered to around 14dB.

⑦ HEADPHONES CUE and AUTO BPM COUNTER SELECTOR

HEADPHONES CUE:

Used to select the source (CH-1 to CH-4, MASTER, or EFFECTS/SAMPLER) to be monitored with headphones. Press it again to cancel the selection.
Pressing multiple buttons makes it possible to derive mixed sound from the selected sources.

AUTO BPM COUNTER SELECTOR:

When AUTO BPM has been selected with the effect/sampler selector switch (19), the BPM of the selected channel (CH-1 to CH-4) will be displayed on the BPM display (17).
BPM will not be displayed correctly if 2 or more channels have been selected.

⑧ Headphone Terminal and Headphone Output Control Panel

MONO SPLIT/STEREO

(mono split/stereo selector switch):

Used to select whether to split monitor sound on the left and right of the headphones or to keep sound in stereo form.

MONO SPLIT will change headphone output to monaural.

The left channel will be for the sound from the channel selected with HEADPHONES CUE, and the right channel will be the sound output from the master. (This applies only when the master was selected using HEADPHONES CUE.)

MIXING (mixing adjustment knob):

Adjusts headphone monitor sound.

Turn all the way to the right for master output sound. (This applies only when the master was selected using HEADPHONES CUE.)

Turn all the way to the left for the sound from the channel (other than the master) selected with HEADPHONES CUE.

At the center position, the levels for master output and the sound selected with HEADPHONES CUE will be even.

LEVEL (level adjustment knob):

Adjusts headphone monitor sound.

When CH-1 to CH-4 has been selected, the level is not affected by master volume (⑩) or master balance (⑮). PHONES (headphone terminal)

⑨ Channel Fader Volume

Adjusts the volume for CH-1 to CH-4.

⑩ Master Fader Volume

Adjusts the master output sound level. Signals from the channels selected with the ASSIGN switch (⑪) will be output using channel fader volume (⑨) and cross fader volume (⑭), while signals from other channels will be output using channel fader volume.

⑪ CROSS FADER ASSIGN A, CROSS FADER ASSIGN B

Selects signals assigned to A and B when the cross fader is used with 2 sources (A and B).

THRU: Select when not using the cross fader.

1 to 4: Select what channels (CH-1 to CH-4) to assign to A and B.

Channels not assigned to A or B are output without passing through the cross fader.

SAMPLER: Select when using the cross fader to output sound sampled using this unit's effect function, when SINGLE (not STRETCH or LOOP) has been selected with the effect/sampler selector switch (⑲).

⑫ FADER START (Fader Start ON/OFF Switch)

CH-1 and CH-2:

When the unit has been connected with a control cable to a CDJ-100S, CDJ-700S or similar CD player, this is the ON/OFF switch for the function to automatically start playing of the CD player using the channel fader or cross fader .

SAMPLER:

This is the ON/OFF switch for the function to start the unit's built-in sampler using the cross fader.

⑬ CROSS FADER CURVE (Cross Fader Curve Selection Switch)

Used to select one of 3 cross fader startup curves.

⑭ Cross Fader Volume

Used to adjust the sound mix volume of the sources set to A or B using the ASSIGN switch (⑪).

⑮ MASTER BALANCE Knob

Used to adjust the left-right balance of the master output.

⑯ BOOTH MONITOR Level Knob

Used to adjust the level of the BOOTH MONITOR output terminal on the rear panel.

Level is not affected by the master volume (⑩) and master balance (⑮).

⑰ BPM Display (see page 14)

When AUTO BPM has been selected using the effect/sampler selector switch (⑲), displays BPM for the channel (CH-1 to CH-4) selected using AUTO BPM COUNTER SELECTOR (⑦).

1 to 4:

Displays the channel that is measuring BPM.

AUTO BPM COUNTER:

Displays BPM values.

Flashes while measuring or if unable to measure BPM.

BPM Measurement Range Display/

BPM Measurement Range Selector Switches:

- Used for making selections from the following: 70 to 139, 91 to 180, 70 to 180, and manual mode.

When both LEDs are lit, the 70 to 180 setting applies.

When neither LED is lit, manual mode applies.

Set the BPM band to match the music for which BPM will be measured.

- For details on manual mode, see “Measuring BPM”

When the effect/sampler channel selector switch has been used to select something other than AUTO BPM, the BPM of the source selected with the effect/sampler channel selector switch (20) will be displayed.

18 Effect Parameter and BPM Display

1 to 4, MIC, and MASTER:

Displays the source selected with the effect/sampler channel selector switch (20).

When CF. A or CF.B has been selected with the effect/sampler channel selector switch, the channels (1 to 4) selected with the ASSIGN switches (11) will light.

PARAMETER (Parameter/BPM Counter):

The display will differ with the setting of the effect/sampler selector switch (19).

- When AUTO BPM has been selected, the BPM for the source selected with the effect/sampler channel selector switch will be displayed.
Display will flash while BPM is being measured or cannot be measured.
- Nothing will be displayed if SEND/RETURN has been selected.
- If something other than AUTO BPM and SEND/RETURN has been selected, the effect value set with effect parameter 1 (21) will be displayed.

BEAT (Effect Synchronous Display/Beat Display):

The display will differ with the setting of the effect/sampler selector switch (19).

- Nothing will be displayed if AUTO BPM, REVERB, or SEND/RETURN has been selected.
- If PITCH has been selected, the direction of octave modification will be displayed.
- If DELAY, ECHO, PAN, TRANS, FILTER, or FLANGER has been selected, the effector's parameter for source BPM will be displayed in terms of a beat (1/2, 3/4, 1/1, 2/1, or 4/1).
- If SAMPLER has been selected, the number of beats set for recording or playback for the source BPM will be displayed (1, 2, 4, 8, or 16).

Effect Beat Selector Switch:

The value for effect/sampler parameter 1 (21) will change in keeping with the BPM for source selected with the effect/sampler channel selector switch (20).

The set value will change with the effect/sampler selector switch (19) setting.

- Will not function when AUTO BPM, REVERB, or SEND/RETURN has been selected.
- When PITCH has been selected, pressing ► will change the pitch setting +33% or +50%, while pressing ◀ will change it -33% or -50%.
- If DELAY, ECHO, PAN, TRANS, FILTER or FLANGER has been selected, the effector's parameter will be set to a beat for source BPM (1/2, 3/4, 1/1, 2/1, or 4/1).
- If SAMPLER has been selected, the number of beats for recording or playback for the source BPM will be displayed (1, 2, 4, 8, or 16).

19 Effect/Sampler Selector Switch

Used to select different effects.

20 CH. SELECT (Effect/Sampler Channel Selector Switch)

Used to select the source to be effected.

21 PARAMETER 1, 2 (Effect/Sampler Parameter 1 and 2 Knobs)

Used to adjust the values of the parameters of the built-in effector and the sampler.

22 ON/OFF, TAP (Effect/Sampler ON/OFF Switch and Tap Switch)

Effect will differ with the setting of the effect/sampler selector switch (19).

- Functions as the effect's ON/OFF switch if DELAY, ECHO, PAN, TRANS, FILTER, FLANGER, REVERB, PITCH, or SEND/RETURN has been selected.
(OFF: Orange light. ON: Blinking orange light.)
- When AUTO BPM has been selected, it will function as a tap switch, enabling it to be used as a beat counter through manual input. (Selection indicated by orange light.)
When using the tap switch to measure BPM, both LEDs for indicating the BPM measurement range will turn off and manual mode will go into effect.
- Functions as the ON/OFF switch for sampler recording when SAMPLER REC has been selected.
(REC OFF: Red light. REC ON: Blinking red light.)
- Functions as the ON/OFF switch for sampler playback when SAMPLER PLAY has been selected.
(PLAY OFF: Green light. PLAY ON: Blinking green light.)

8.2 SPECIFICATIONS

Audio Section

Input terminal (input level/impedance)	
CD/LINE1	-14dBV (200mV)/22kΩ
PHONO	-54dBV (2mV)/47kΩ
MAIN MIC	
MAIN MIC	-54dBV (2mV)/3kΩ
SUB MIC	-60dBV (1mV)/3kΩ
RETURN	-14dBV (200mV)/22kΩ
Output terminal (output level/impedance)	
MASTER OUT1 (RCA)	0dBV (1V)/1kΩ
MASTER OUT2 (XLR)	4dBm (1.23V)/600Ω
REC OUT (RCA)	-10dBV (1V)/1kΩ
BOOTH MONITOR	0dBV (1V)/1kΩ
SEND	-14dBV (1V)/1kΩ
PHONES	-4dBV (0.63V)/22Ω
Frequency characteristics	
CD/LINE/PHONO/MIC	20Hz to 20kHz
SN ratio	
CD/LINE	87dB (with effects off)
PHONO	77dB
MIC	69dB
Total harmonic distortion rate	
CD/LINE/PHONO	Below 0.02%
Cross talk	Over 70dB
Channel equalizer	
HI	+12dB, -26dB (13kHz)
MID	+12dB, -26dB (1kHz)
LOW	+12dB, -26dB (70Hz)
Microphone equalizer	
HI	+12dB, -12dB (10kHz)
MID	+12dB, -12dB (1kHz)
LOW	+12dB, -12dB (100Hz)
Effector	
DELAY and ECHO	1 to 3500mSec
PAN, TRANS, FILTER and FLANGER	10 to 16000mSec
REVERB	1 to 100%
PITCH	0 to ±100%

Electrical Section, etc.

Power supply voltage	AC 120V, 60Hz
Power consumption	36W
Operating temperature	+5°C to +35°C
Operating humidity	5% to 85%
External dimensions	320 (W) x 372 (D) x 107 (H) mm
	12-19/32 (W) x 14-5/8 (D) x 4-7/32 (H) in
Weight	6.6kg
	14lbs 9oz

Accessories

● Short-circuit pin plug	6
● Operating instructions	1
● Warranty	1

For improvement purposes, specifications and design may be subject to modification without notice.