


Service Manual

 **PIONEER**
The future of sound and vision.

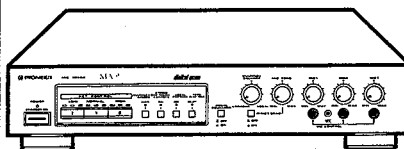

ORDER NO.
ARP2073

MIC MIXER

MA-9

● This manual is applicable to the SD type.

CONTENTS

1. EXPLODED VIEW, PACKING AND PARTS LIST.....	2
2. IC DESCRIPTIONS.....	5
3. SCHEMATIC DIAGRAM.....	7
4. P.C. BOARDS CONNECTION DIAGRAM.....	11
5. BLOCK DIAGRAM.....	19
6. P.C.B's PARTS LIST.....	21
7. PANEL FACILITIES.....	24
8. SPECIFICATIONS.....	26

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada

PIONEER ELECTRONIC [EUROPE] N.V. Keetberglaan 1, 2740 Beveren, Belgium

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

© PIONEER ELECTRONIC CORPORATION 1990


SI JUNE 1990 Printed in Japan

1. EXPLODED VIEW, PACKING AND PARTS LIST

NOTES :

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "©" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
Δ	1	CM-22B	Strain relief		101		MAIN unit
Δ	2	PDG1013	AC power cord		102		MCAB unit
Δ	3	REK-076	FU101, FU102 400mA Fuse		103		MCJB unit
	4	RBH1144	Spring		104		SWLB unit
Δ	5	RTT1140	Power transformer		105		CNB1 unit
	6	VXA1289	Insulator assembly		106		
Δ	7	PSB1002	Voltage selector		107		Chassis
	8	PAC1372	Power button		108		P.C.B holder
	9	RAC1523	Key control button		109		Power joint
Δ	10	AKP-507	AC socket		110		Rear panel
	11	AAB1063	Rotary knob		111		
	12	PYY1050	Bonnet		112		Connection cord assembly
	13	RXA1354	Push knob assembly		113		Front panel
	14				114		Name plate
	15	RRB1071	Operating instructions		115		P.C.B base
	16	RRG1002	Operation guide		116		Angle
	17	RHA1052	Pad (F)				
	18	RHC-154	Packing sheet				
	19	RHG1207	Packing case				
	20						
	21	RDE-010	Connection cord				
	22	RXX1306	Front panel assembly-S				
	23	RAH1711	Display panel				
	24	BBZ30P060FMC	Screw				
	25	BBZ40P080FZK	Screw				
	26	IBZ30P100FMC	Screw				
	27	BBZ26P080FMC	Screw				
	28	BBZ30P080FZK	Screw				
	29	RHA1053	Pad (R)				
	30	RNK1377	REC lens				

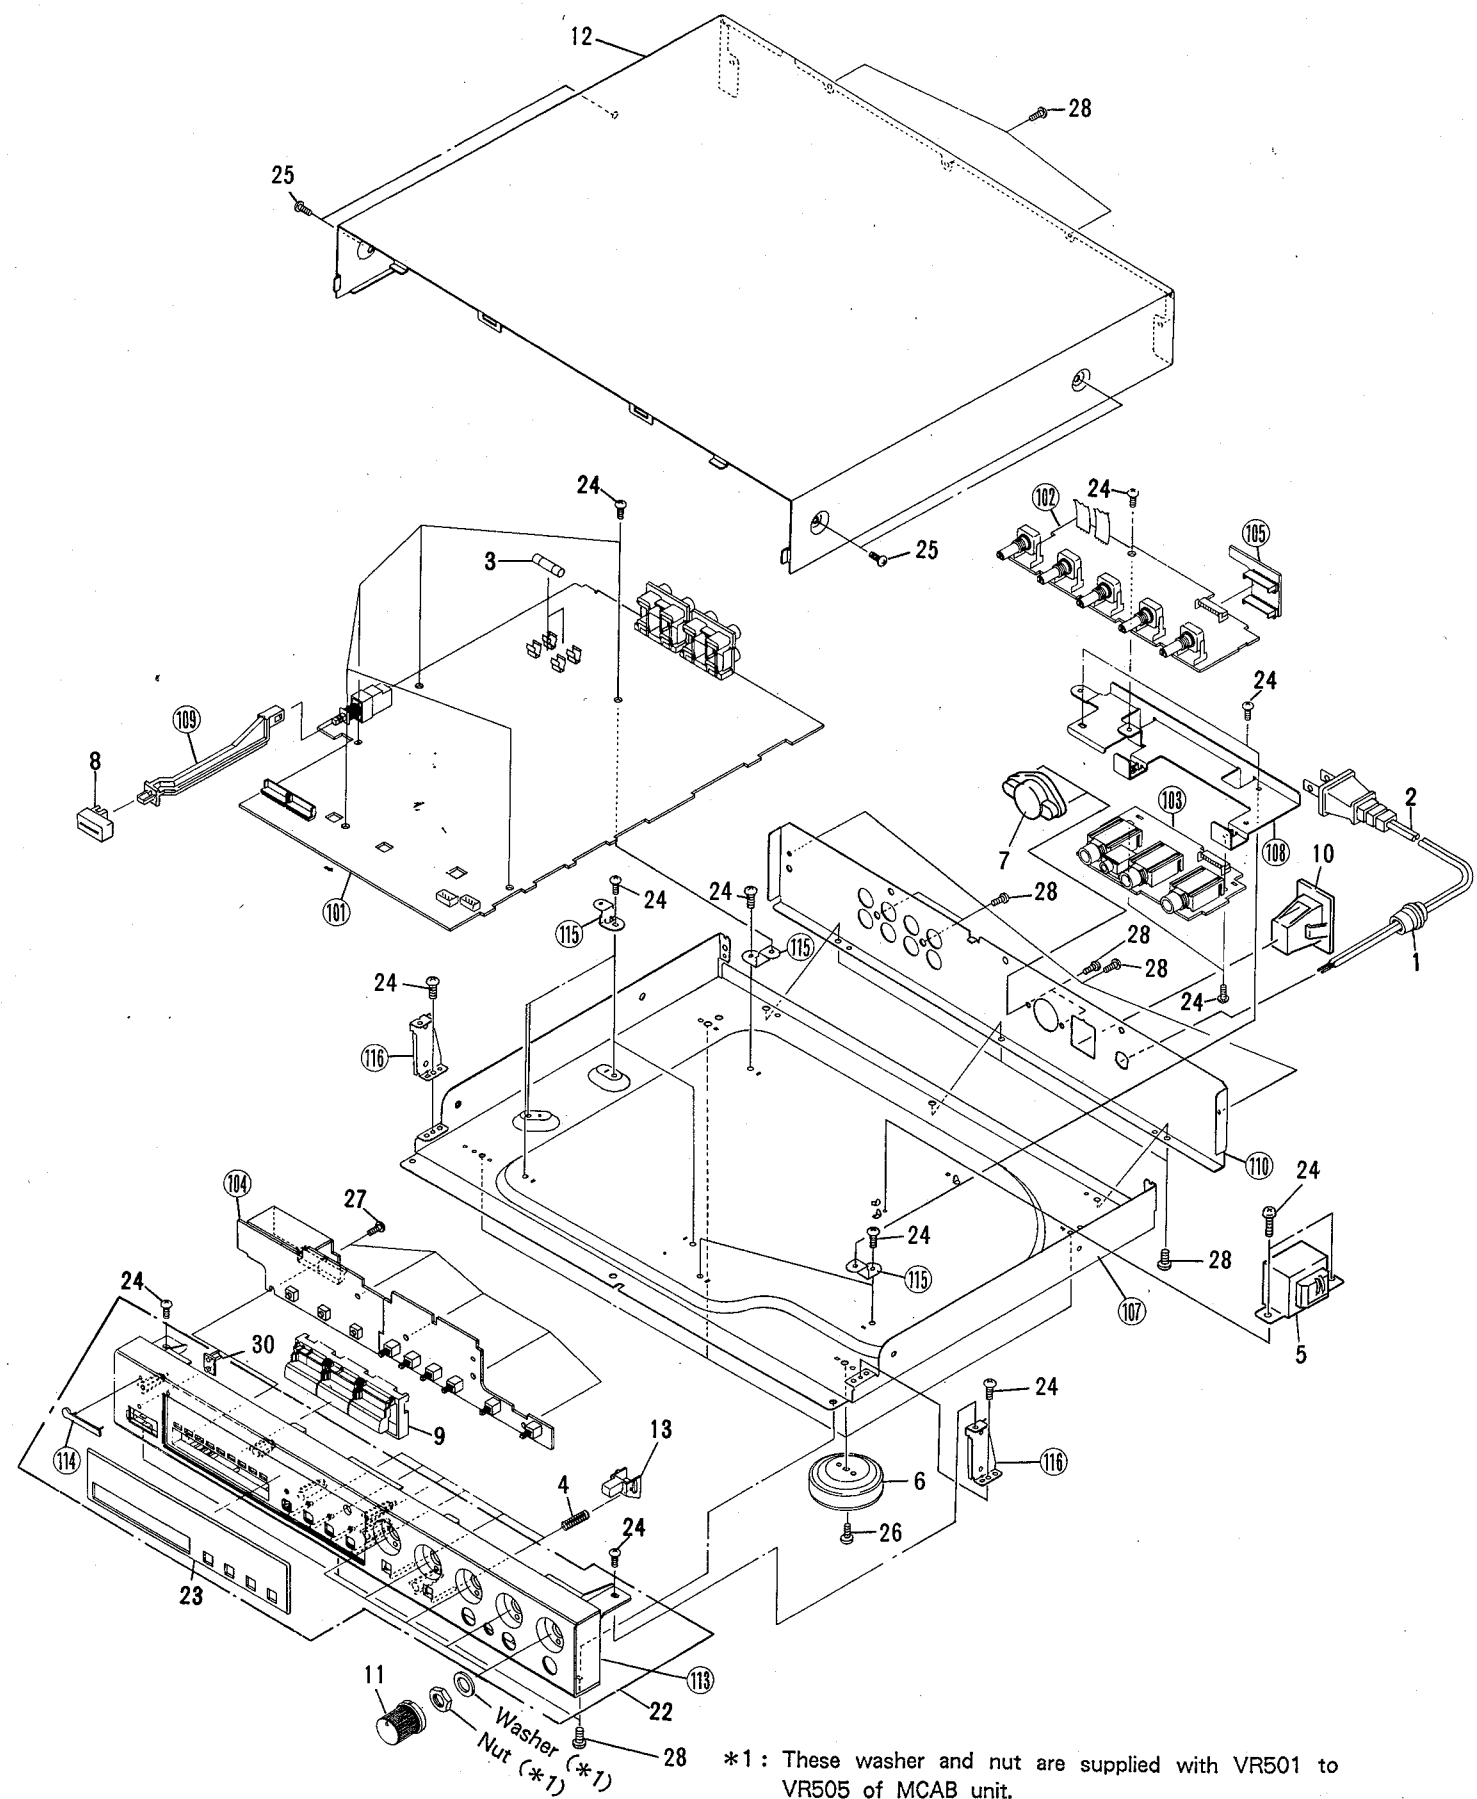

2.

In this

IC101 (

Pin	
Logic	

IC109 (

Pin	
Logic	

IC109 (

Pin	
Logic	

Correlati


MPX/s	
MP	
MP	
Stere	
Stere	

IC109 (3

Pin	1
Logic	

IC112 (1

Pin	9,
Logic	

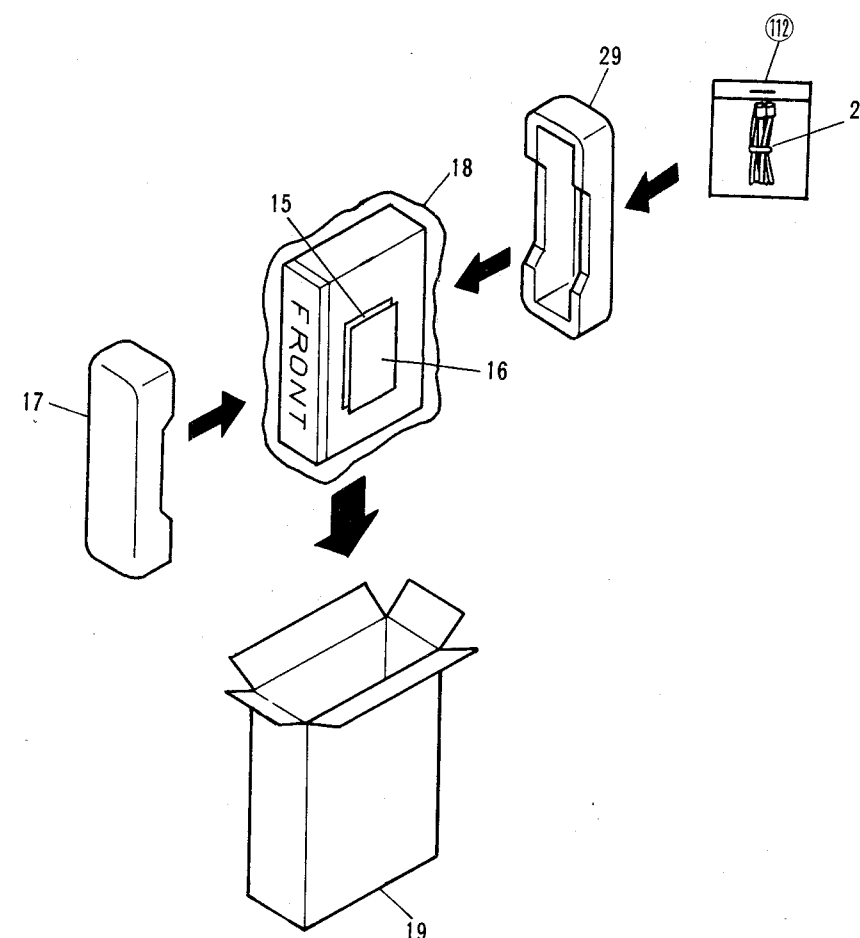

2. IC DESCRIPTIONS

In this section, ICs truth tables are described.

IC101 (NJU4052BD)

Pin	10	9	Mode
Logic	0	0	LINE
	1	0	TAPE

IC109 (1/3), IC110 (1/3) (NJU4053BD)

Pin	11	Switch settings
Logic	L	Pin 12 side
	H	Pin 13 side (through voice cut circuit)

IC109 (2/3), IC110 (2/3) (NJU4053BD)

Pin	9	Switch settings
Logic	L	Pin 5 side
	H	Pin 3 side (through MPX balance circuit)

Correlation between front switch and IC109/IC110

Front switch		IC109 (1/3), (2/3) IC110 (1/3), (2/3)	
MPX/stereo	Stereo one-touch karaoke	Pin 9	Pin 11
MPX	OFF	H	L
MPX	ON	H	L
Stereo	OFF	L	H
Stereo	ON	H	H

IC109 (3/3), IC110 (3/3) (NJU4053BD)

Pin	10	Switch settings	Mode
Logic	L	Pin 2 side	Key controller ON (# or b)
	H	Pin 1 side	Key controller OFF (h)

IC112 (1/2), (2/2) (NJU4053BD)

Pin	9, 10	Switch settings	Mode
Logic	L	Pins 2, 5 side	Power OFF (through)
	H	Pins 1, 3 side	Power ON (various operations)

IC114 (NJU4053BD)

Pin	10, 11	Switch settings	Mode
Logic	L	Pins 2, 12 side	TAPE REC ON
	H	Pins 1, 13 side	TAPE REC OFF

IC504 (1/3) (NJU4053BD)

Pin	10	Switch settings	Mode
Logic	L	Pin 2 side	MIC3 echo OFF
	H	Pin 1 side	MIC3 echo ON

IC504 (2/3)

Pin	9	Switch settings	Mode
Logic	L	Pin 5 side	Voice enhancer switch OFF
	H	Pin 3 side	Voice enhancer switch ON

IC504 (3/3)


Pin	11	Switch settings	Mode
Logic	L	Pin 12 side	Vocal partner switch OFF
	H	Pin 13 side	Vocal partner switch ON




IC601 (SN74LS145N): BCD-TO-DECIMAL DECODER/DRIVER

Truth table

Decimal	Input				Output									
	Pin12	Pin13	Pin14	Pin15	Pin1	Pin2	Pin3	Pin4	Pin5	Pin6	Pin7	Pin8	Pin10	Pin11
	D _D	D _C	D _B	D _A	$\overline{Y}_0$	$\overline{Y}_1$	$\overline{Y}_2$	$\overline{Y}_3$	$\overline{Y}_4$	$\overline{Y}_5$	$\overline{Y}_6$	$\overline{Y}_7$	$\overline{Y}_8$	$\overline{Y}_9$
0	L	L	L	L	L	H	H	H	H	H	H	H	H	H
1	L	L	L	H	H	L	H	H	H	H	H	H	H	H
2	L	L	H	L	H	H	L	H	H	H	H	H	H	H
3	L	L	H	H	H	H	H	L	H	H	H	H	H	H
4	L	H	L	L	H	H	H	H	L	H	H	H	H	H
5	L	H	L	H	H	H	H	H	H	L	H	H	H	H
6	L	H	H	L	H	H	H	H	H	H	L	H	H	H
7	L	H	H	H	H	H	H	H	H	H	H	L	H	H
8	H	L	L	L	H	H	H	H	H	H	H	H	L	H
9	H	L	L	H	H	H	H	H	H	H	H	H	H	L
10	H	L	H	L	H	H	H	H	H	H	H	H	H	H
11	H	L	H	H	H	H	H	H	H	H	H	H	H	H
12	H	H	L	L	H	H	H	H	H	H	H	H	H	H
13	H	H	L	H	H	H	H	H	H	H	H	H	H	H
14	H	H	H	L	H	H	H	H	H	H	H	H	H	H
15	H	H	H	H	H	H	H	H	H	H	H	H	H	H

Logic diagram

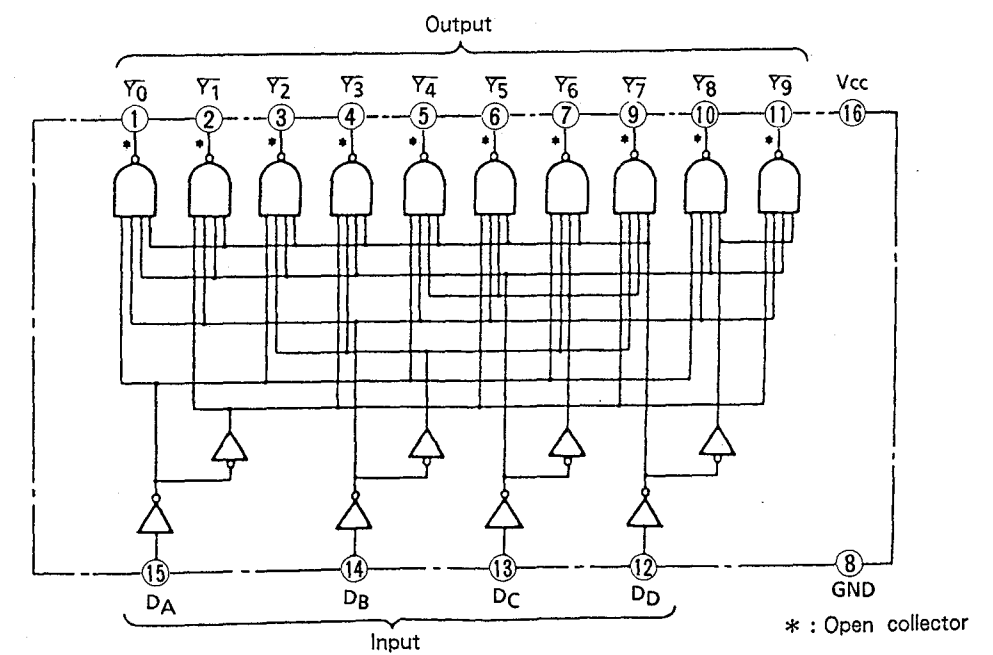


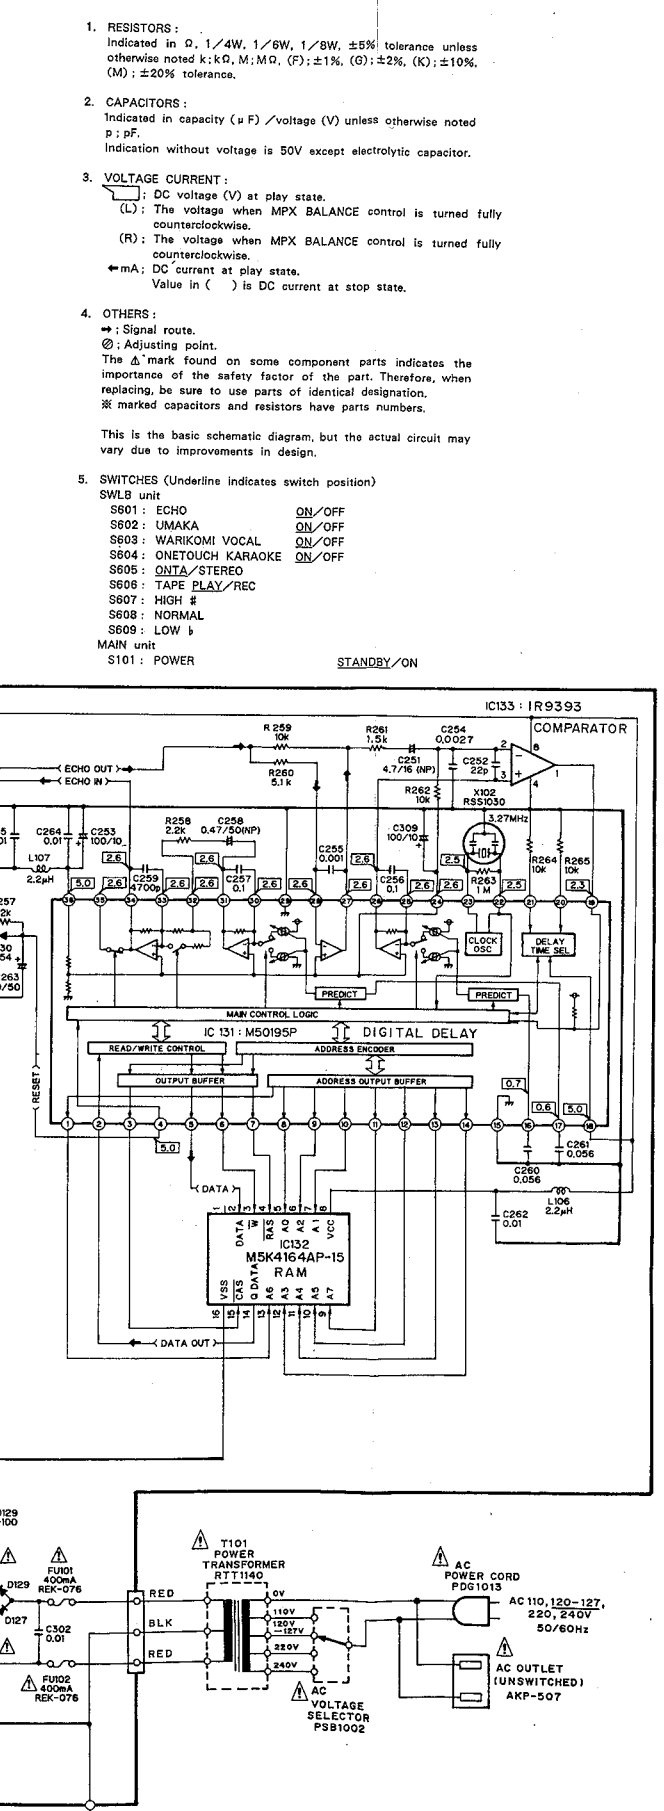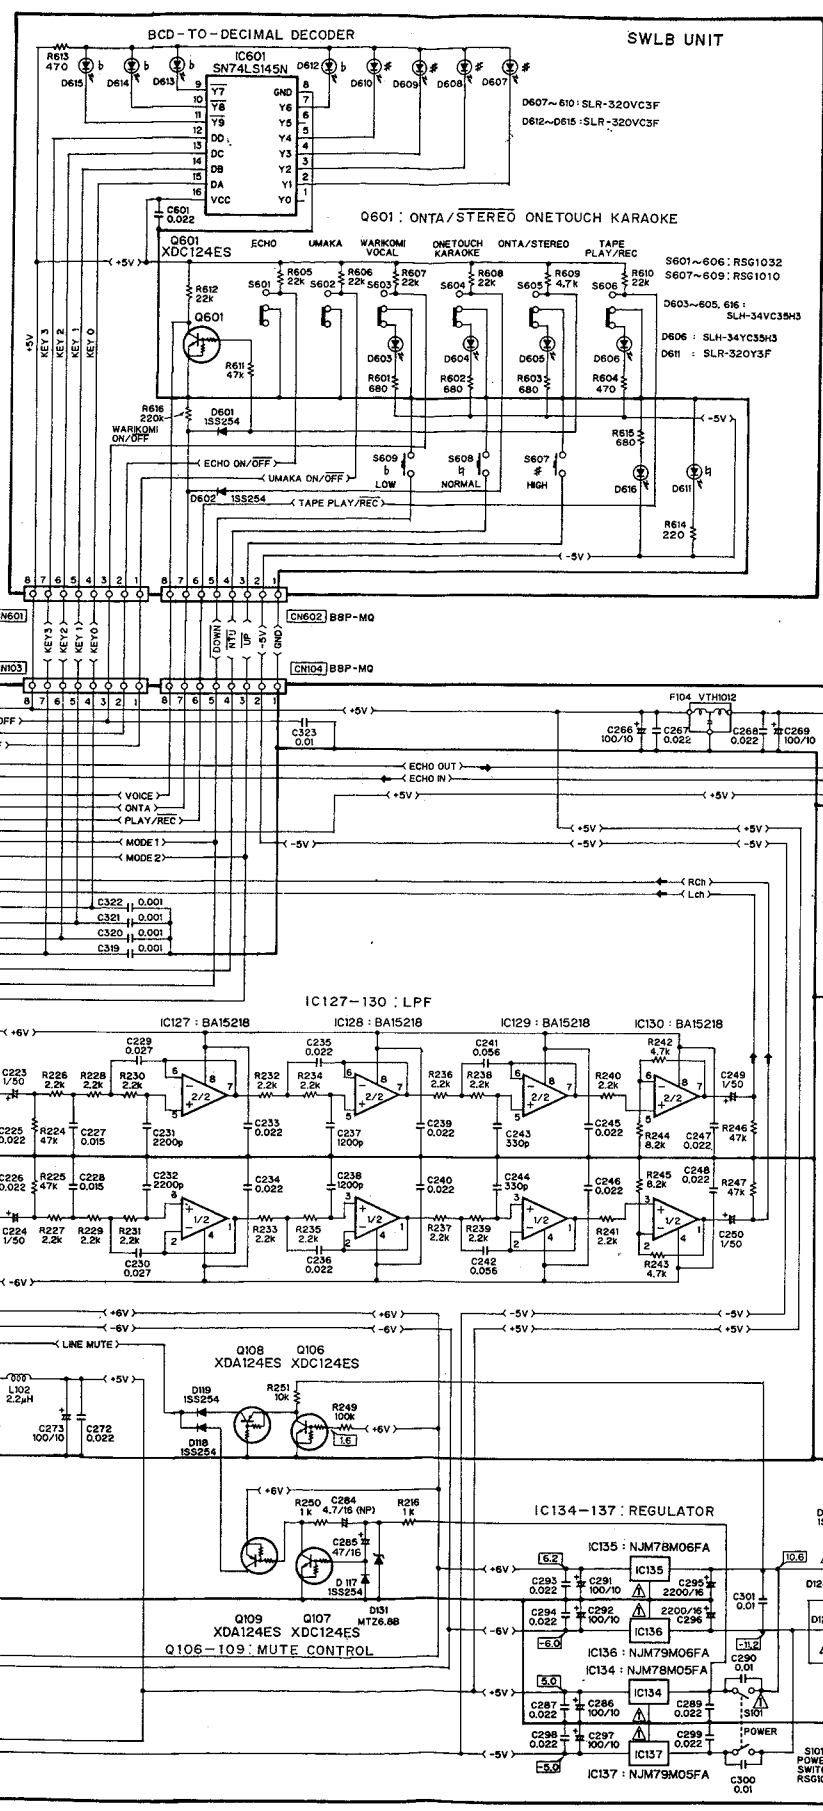
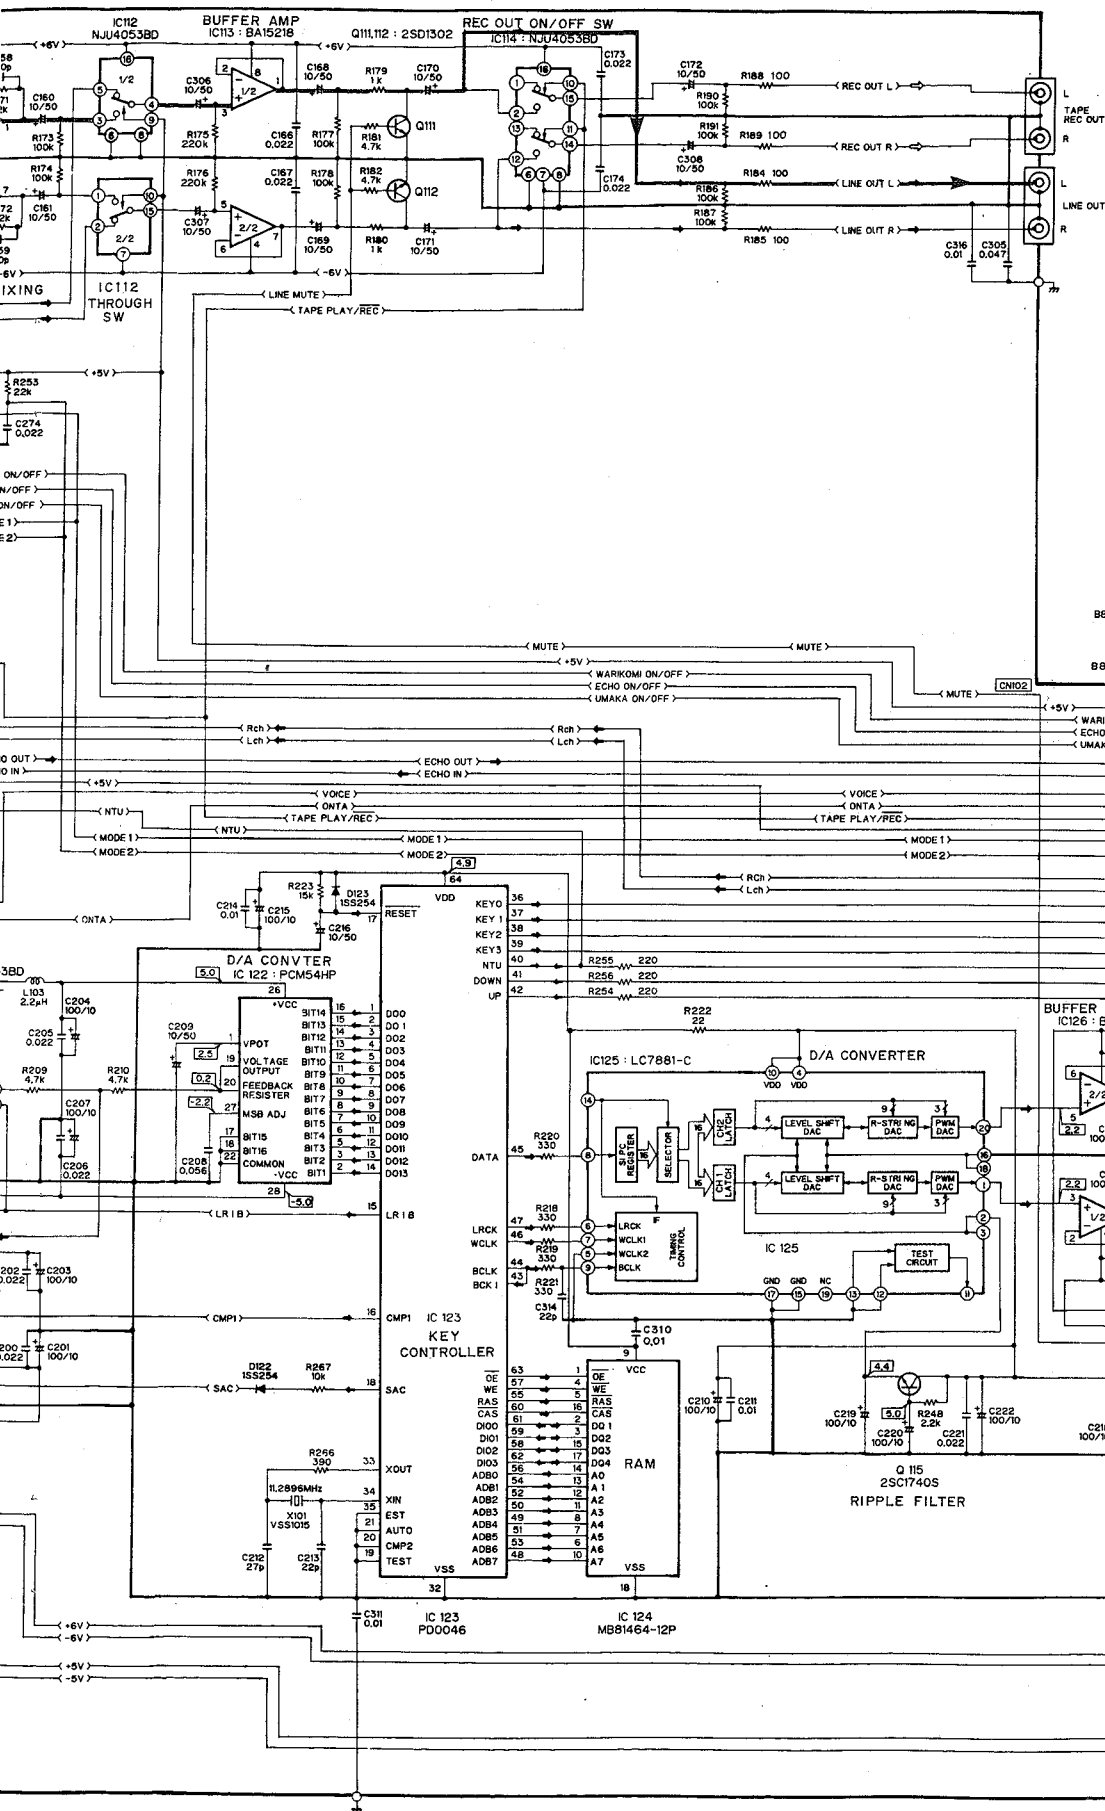


- RESISTORS:
Indicated in Ω , $1/4W$, $1/6W$, $1/8W$, $\pm 5\%$ tolerance unless otherwise noted k; M; G; (F); $\pm 1\%$; (G); $\pm 2\%$; (K); $\pm 10\%$; (M); $\pm 20\%$ tolerance.
- CAPACITORS:
Indicated in capacity (μF) / voltage (V) unless otherwise noted p; pF.
Indication without voltage is 50V except electrolytic capacitor.
- VOLTAGE CURRENT:
(V): DC voltage (V) at play state.
(L): The voltage when MPX BALANCE control is turned fully counterclockwise.
(R): The voltage when MPX BALANCE control is turned fully counterclockwise.
mA: DC current at play state.
Value in () is DC current at stop state.
- OTHERS:
→: Signal route.
⊙: Adjusting point.
The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
* marked capacitors and resistors have parts numbers.

- This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.
5. SWITCHES (Underline indicates switch position)
- SWLB unit
- | | |
|------------------------|--------|
| S601: ECHO | ON/OFF |
| S602: UMAKA | ON/OFF |
| S603: WAKOMI VOCAL | ON/OFF |
| S604: ONETOUCH KARAOKE | ON/OFF |
| S605: ONT/STEREO | ON/OFF |
| S606: TAPE PLAY/REC | ON/OFF |
| S607: HIGH # | |
| S608: NORMAL | |
| S609: LOW # | |
- MAIN unit
- S101: POWER
- STANDBY/ON



4. P.C. BOARDS CONNECTION DIAGRAM

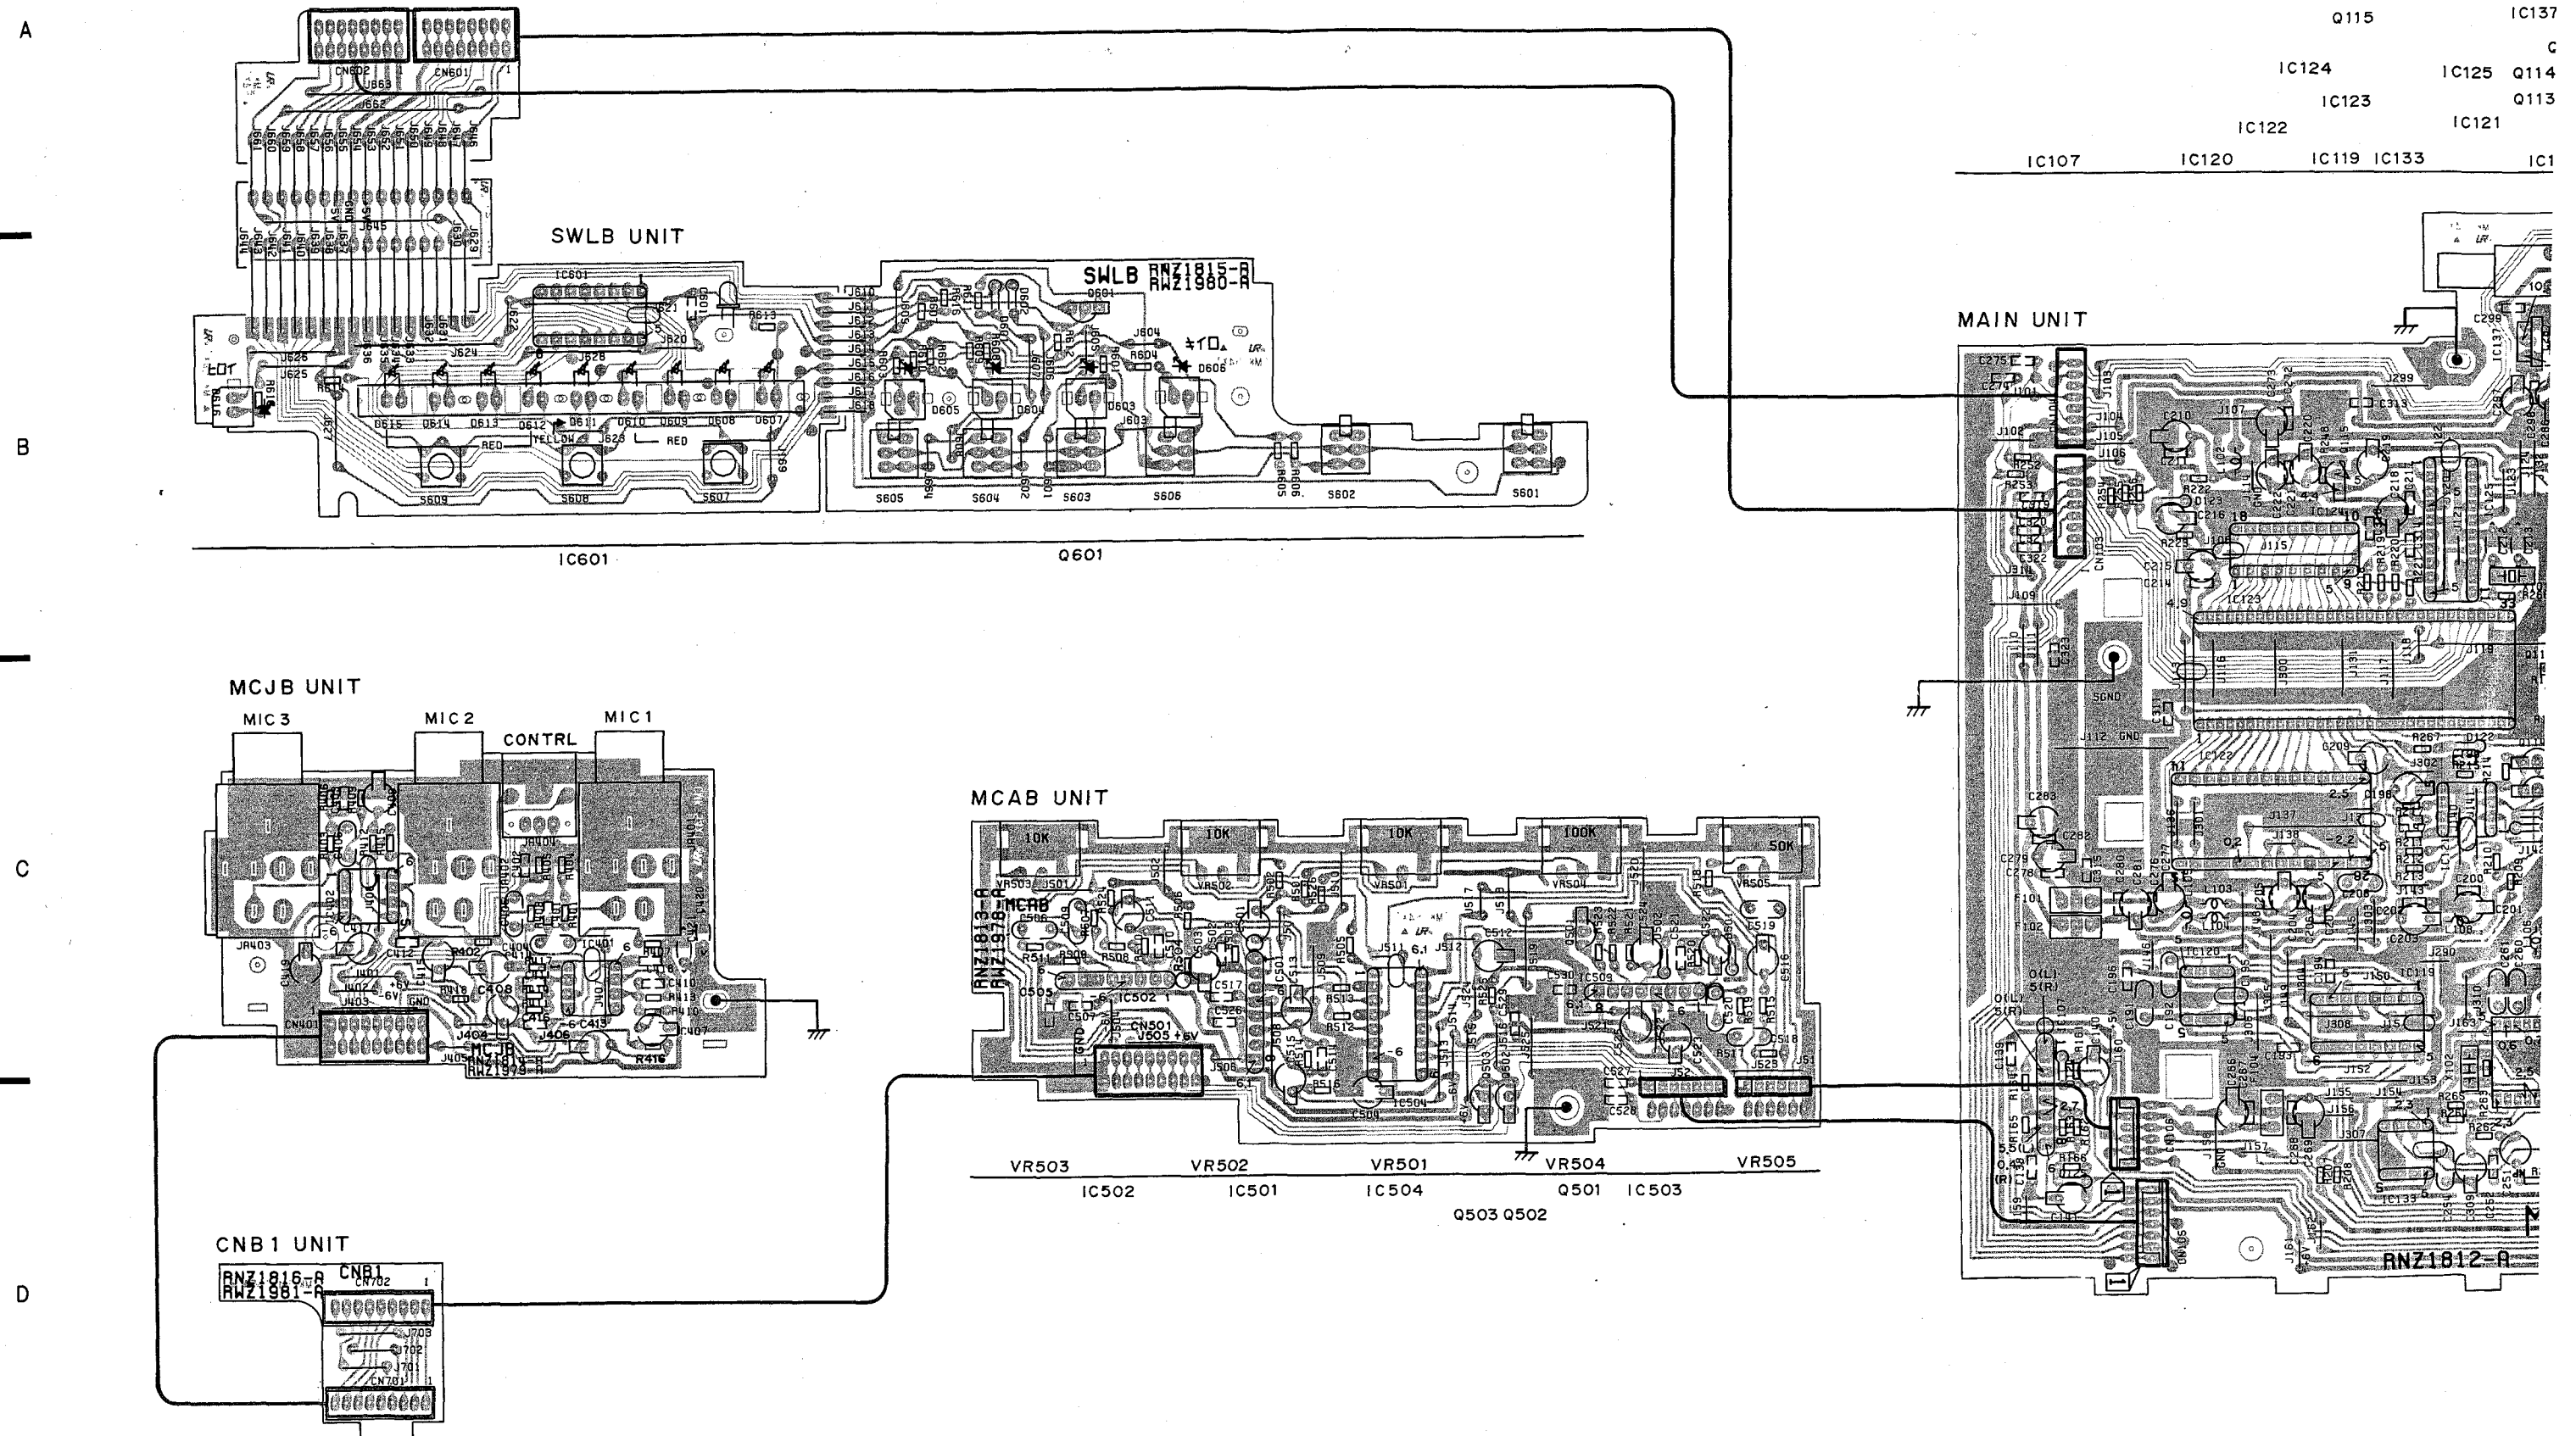

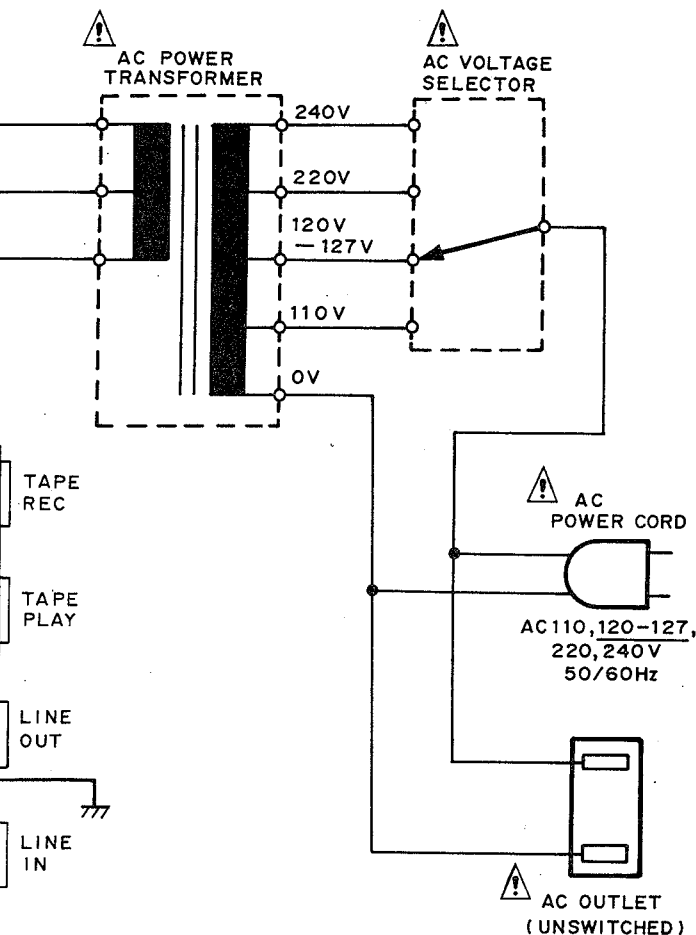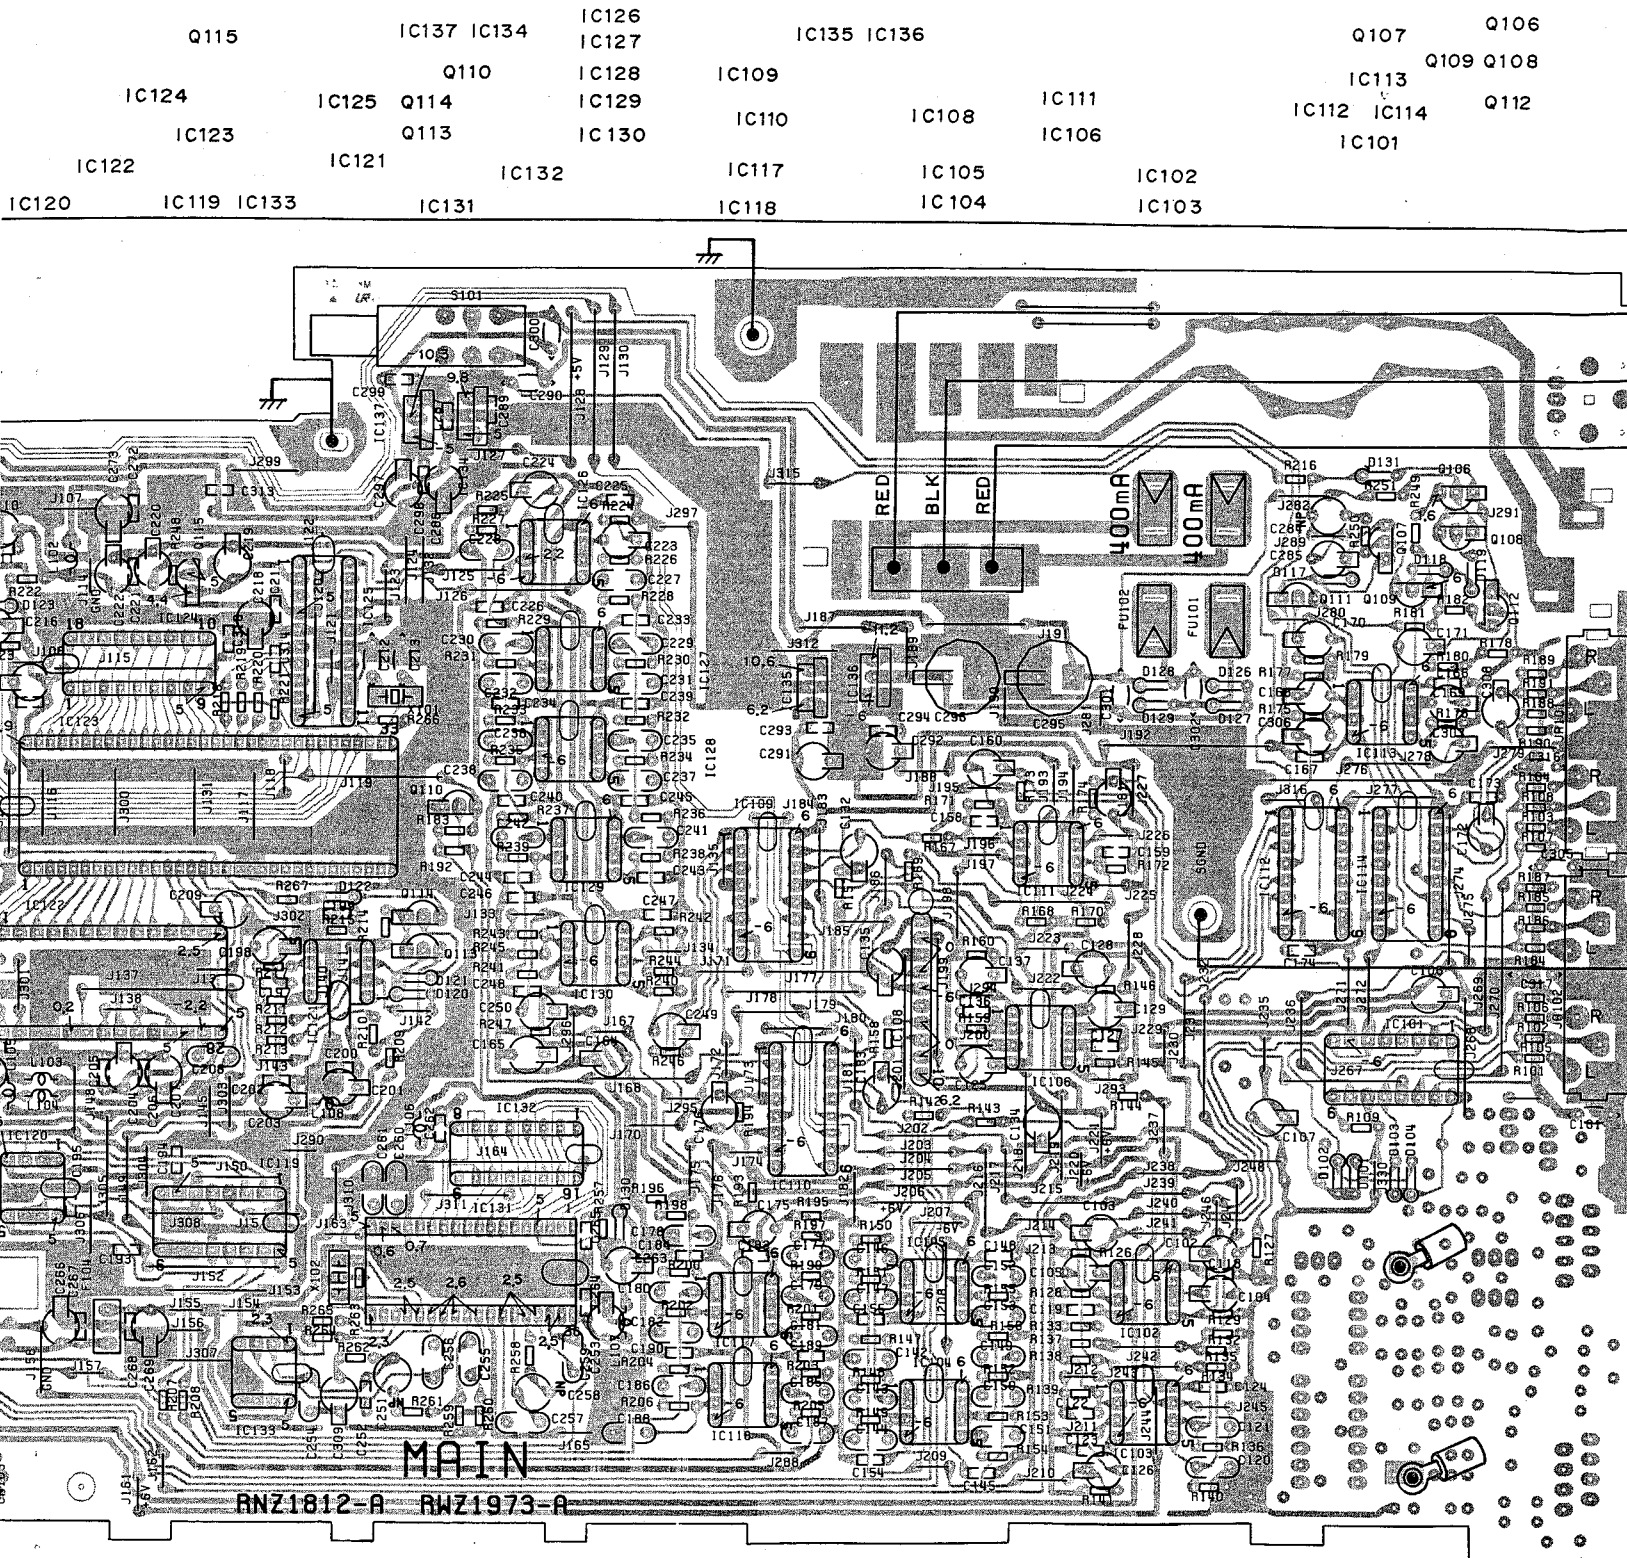


P.C.B. pattern diagram indication	Corresponding part symbol	Part name
		Transistor
		FET
		Diode
		Zener diode
		LED
		Varactor
		Tact switch
		Inductor
		Coil
		Transformer
		Filter
		Ceramic capacitor
		Mylar capacitor
		Styro capacitor
		Electrolytic capacitor (Non polarized)
		Electrolytic capacitor (Noiseless)
		Electrolytic capacitor (Polarized)
		Electrolytic capacitor (Polarized)
		Power capacitor
		Semi-fixed resistor
		Resistor array
		Resistor
		Resonator
		Thermistor

1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above Table.
3. The capacitor terminal marked with shows negative terminal.
4. The diode marked with shows cathode side.
5. The transistor terminal marked with shows emitter.

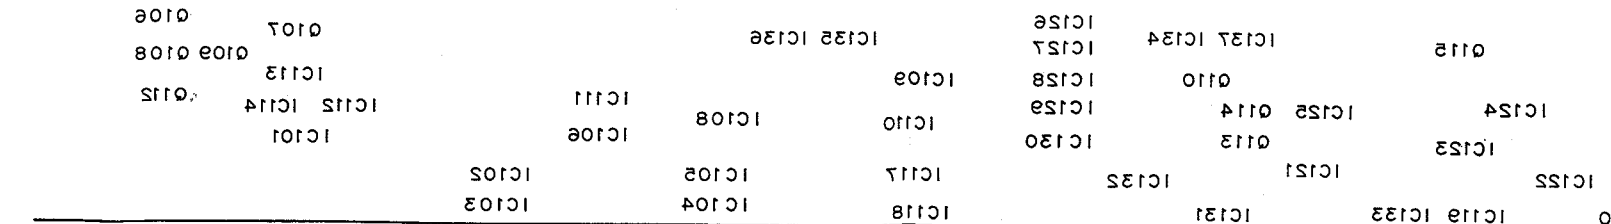


NIAM

This P.C.B. connection diagram is viewed from the foil side.

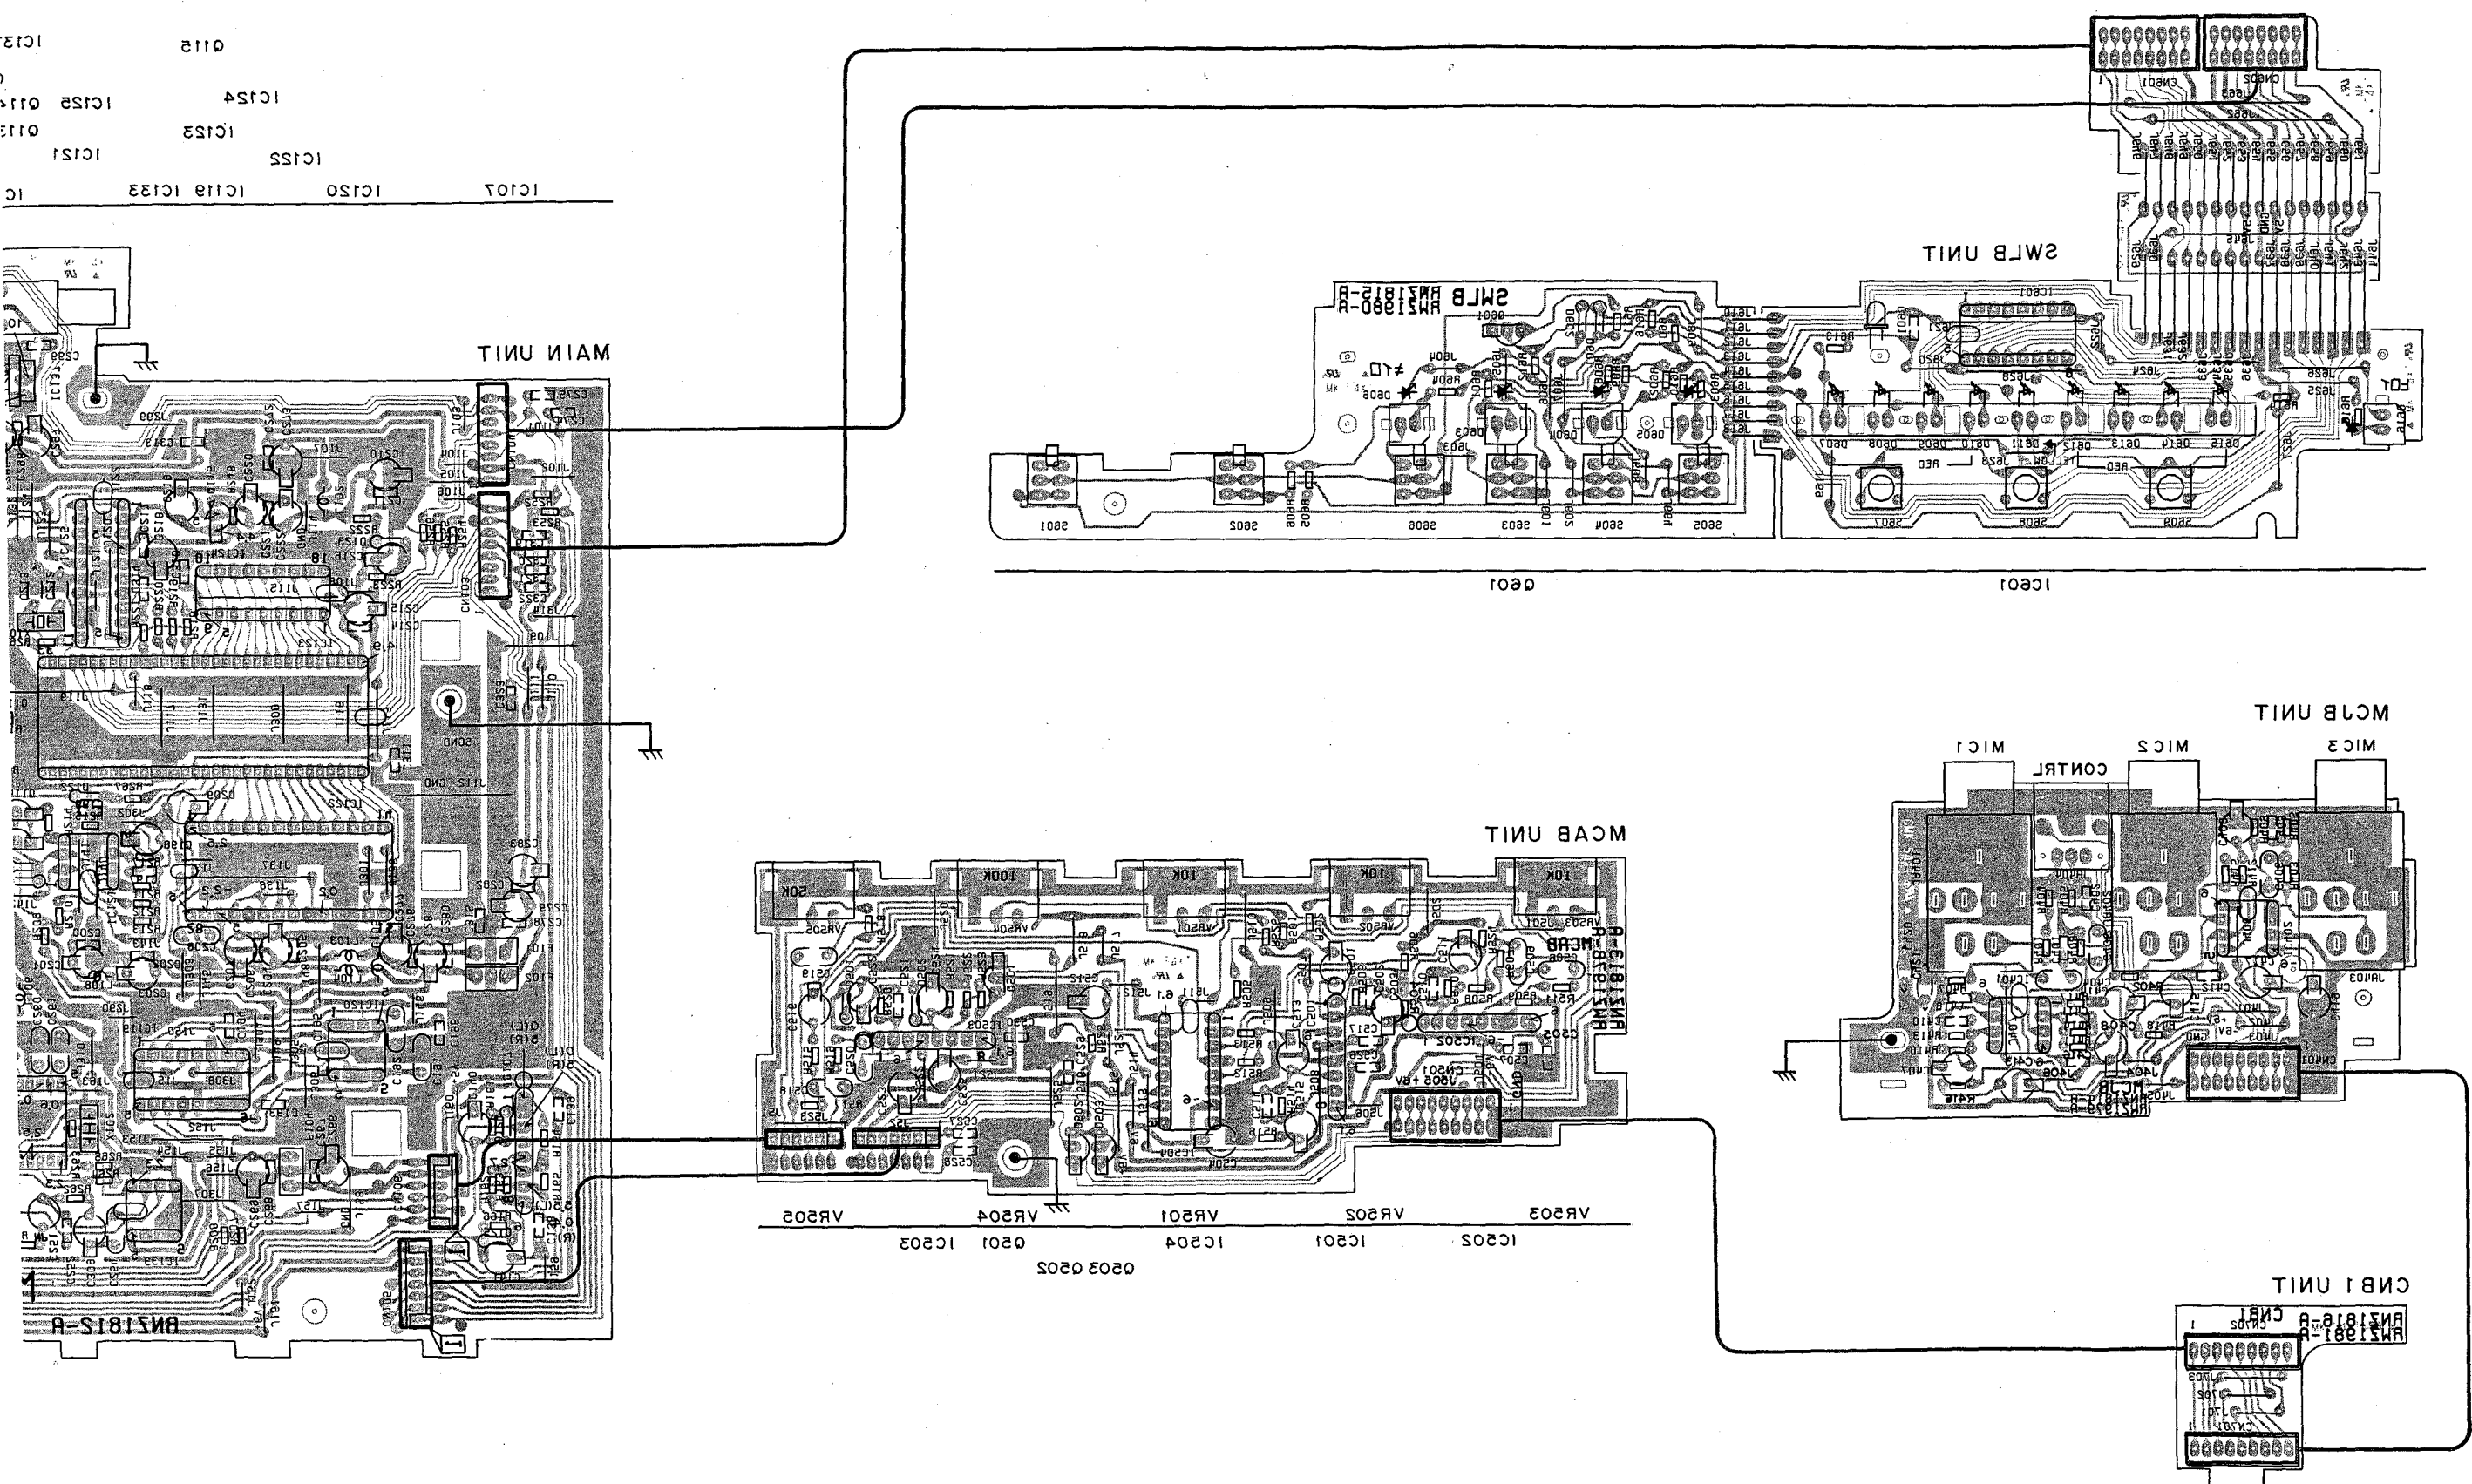

5. BLOCK DIAGRAM

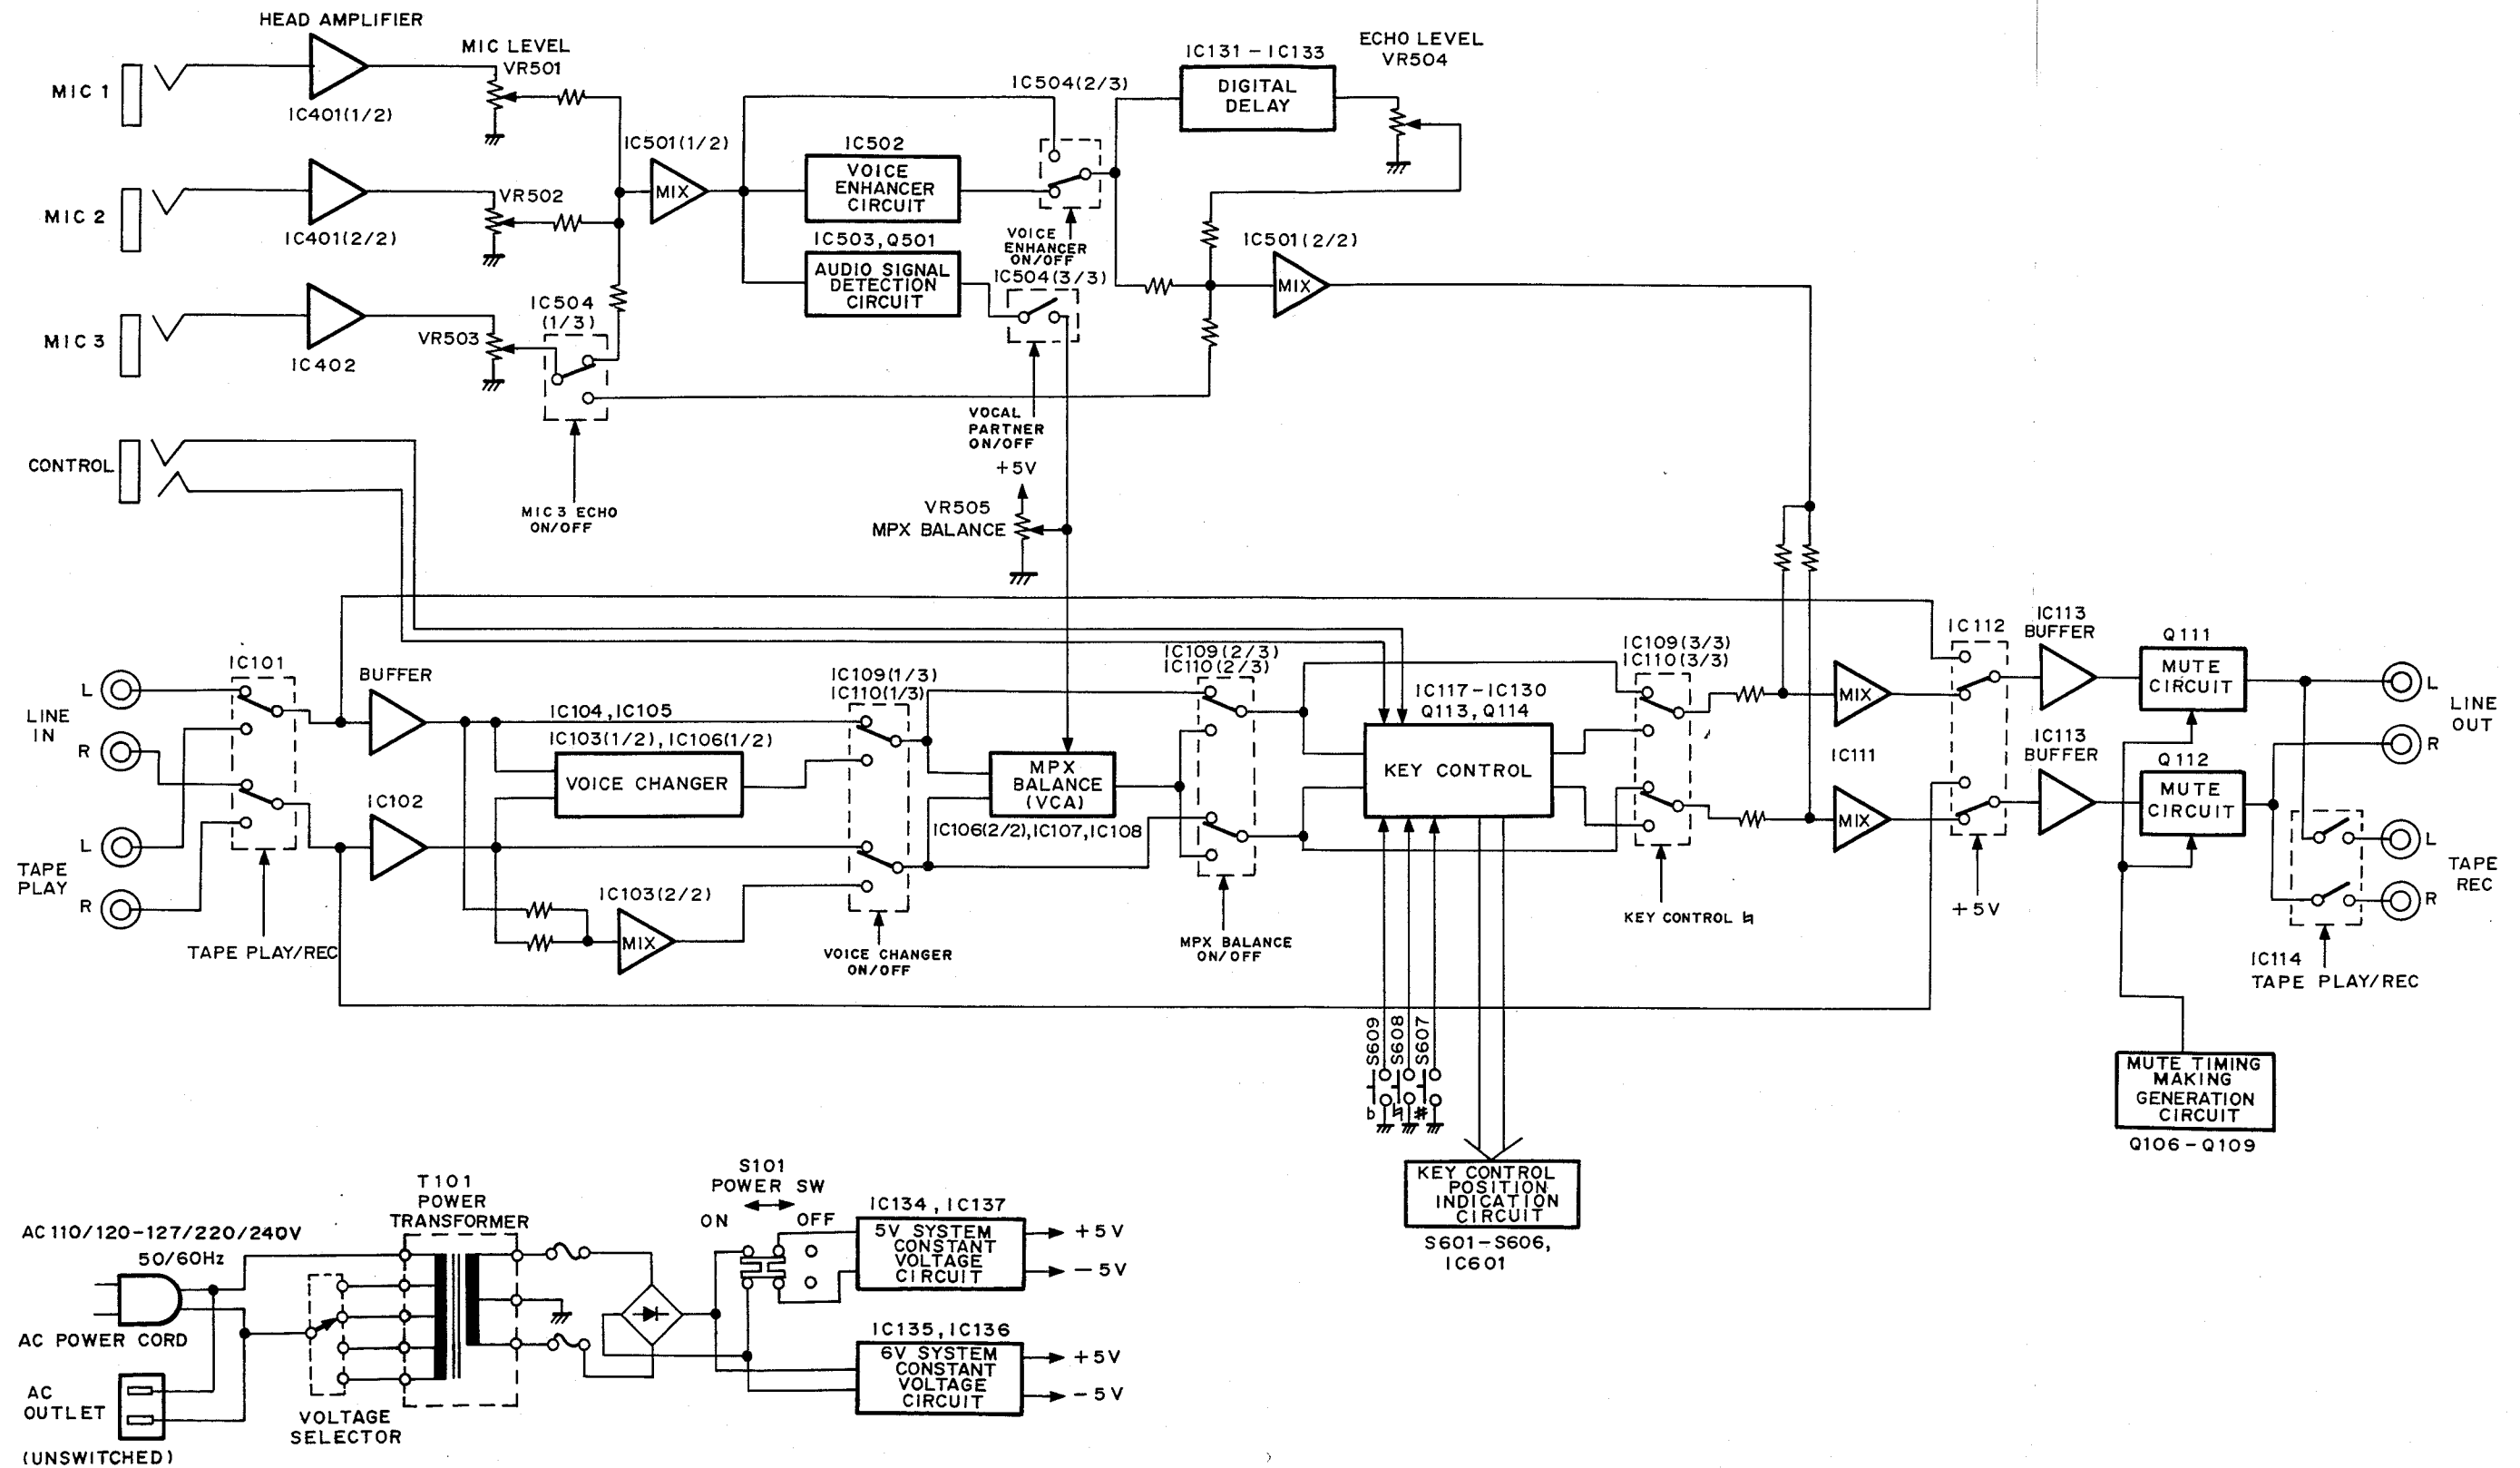

6. P.C.B's PARTS LIST

NOTES:

- Parts without part number cannot be supplied.
- Parts marked by “⊙” are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The Δ mark found on some component parts indicates the impotance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%)
560 Ω → 56 × 10¹ → 561 RD1/4PS

5	6	1
---	---	---

 J
47k Ω → 47 × 10³ → 473 RD1/4PS

4	7	3
---	---	---

 J
0.5 Ω → 0R5 RN2H

0	R	5
---	---	---

 K
1 Ω → 010 RS1P

0	1	0
---	---	---

 K
Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).
5.62k Ω→562 × 10¹→5621 RN1/4SR

5	6	2	1
---	---	---	---

 F

Mark	No.	Symbol & Description	Part No.
MAIN UNIT			
SEMICONDUCTORS			
	IC101	NJU4052BD	
	IC102-106	BA15218	
	IC107	BA15218N	
	IC108	M5207L05	
	IC109, 110	NJU4053BD	
	IC111	BA15218	
	IC112	NJU4053BD	
	IC113	BA15218	
	IC114	NJU4053BD	
	IC117, 118	BA15218	
	IC119	NJU4053BD	
	IC120	BA15218	
	IC121	NJM360D	
	IC122	PCM54HP	
	IC123	PD0046	
	IC124	MB81464-12P	
	IC125 D/A CONVERTER	LC7881-C	
	IC126-130	BA15218	
	IC131	M50195P	
	IC132	MSK4164AP-15	
	IC133	IR9393	
Δ	IC134 REGULATOR IC	NJM78M05FA	
Δ	IC135 REGULATOR IC	NJM78M06FA	
Δ	IC136 REGULATOR IC	NJM79M06FA	
Δ	IC137 REGULATOR IC	NJM79M05FA	
	Q106, 107 TRANSISTOR	XDC124ES	
	Q108, 109 TRANSISTOR	XDA124ES	
	Q110 TRANSISTOR	XDC124ES	
	Q111, 112 TRANSISTOR	ZSD1302	
	Q113, 114 TRANSISTOR	ZSC2058S	
	Q115 TRANSISTOR	ZSC1740S	
	D101-104 DIODE	1SS254	
	D117-125 DIODE	1SS254	
Δ	D126-129 DIODE	1SR139-100	
	D130 DIODE	1SS254	
	D131	MTZ6. 8B	

Mark	No.	Symbol & Description	Part No.
SWITCH			
Δ	S101		RSG1028
COILS/FILTERS			
	L102-108		LAU2R2M
	F101, 102 FILTER		VTH1012
	F104 FILTER		VTH1012
CAPACITORS			
	C101 CERAMIC CAPACITOR	CKCYF473Z50	
	C102-105 ELECTR. CAPACITOR	CEAS100M50	
	C106, 107 ELECTR. CAPACITOR	CEAS101M10	
	C118, 119	CKPUYF223Z25	
	C120, 121 MYLOR FILM CAPACITOR	CQMA222J50	
	C122	CKPUYB331K50	
	C123, 124	CKPUYF223Z25	
	C125 ELECTR. CAPACITOR	CEAS101M10	
	C126 ELECTR. CAPACITOR	CEAS100M50	
	C127	CKPUYB331K50	
	C128 ELECTR. CAPACITOR	CEAS100M50	
	C129 ELECTR. CAPACITOR	CEAS101M10	
	C132, 133 ELECTR. CAPACITOR	CEAS100M50	
	C134, 135 ELECTR. CAPACITOR	CEAS101M10	
	C136 AXIAL CAPACITOR	CKPUYB101K50	
	C137 ELECTR. CAPACITOR	CEAS100M50	
	C138, 139	CKPUYF223Z25	
	C140, 141 ELECTR. CAPACITOR	CEAS100M50	
	C142 MYLOR FILM CAPACITOR	CQMA393J50	
	C143 MYLOR FILM CAPACITOR	CQMA104J50	
	C144 MYLOR FILM CAPACITOR	CQMA272J50	
	C145	CKPUYF223Z25	
	C146 MYLOR FILM CAPACITOR	CQMA124J50	
	C147 MYLOR FILM CAPACITOR	CQMA102J50	
	C148	CKPUYF223Z25	
	C149-153 MYLOR FILM CAPACITOR	CQMA472J50	
	C154, 155	CKPUYF223Z25	
	C158, 159 AXIAL CAPACITOR	CKPUYB101K50	
	C160, 161 ELECTR. CAPACITOR	CEAS100M50	
	C164, 165 ELECTR. CAPACITOR	CEAS101M10	

Mark	No.	Symbol & Description	Part No.
	C166, 167	CKPUYF223Z25	
	C168-172 ELECTR. CAPACITOR	CEAS100M50	
	C173, 174	CKPUYF223Z25	
	C175, 176 ELECTR. CAPACITOR	CEAS100M50	
	C177, 178 MYLOR FILM CAPACITOR	CQMA103J50	
	C179, 180 MYLOR FILM CAPACITOR	CQMA223J50	
	C181, 182 MYLOR FILM CAPACITOR	CQMA152J50	
	C183, 184	CKPUYF223Z25	
	C185, 186 MYLOR FILM CAPACITOR	CQMA333J50	
	C187, 188 MYLOR FILM CAPACITOR	CQMA561J50	
	C189, 190	CKPUYF223Z25	
	C191, 192 MYLOR FILM CAPACITOR	CQMA102J50	
	C193-197	CKPUYF223Z25	
	C198 ELECTR. CAPACITOR	CEAS101M10	
	C199	CCPUSL220J50	
	C200	CKPUYF223Z25	
	C201 ELECTR. CAPACITOR	CEAS101M10	
	C202	CKPUYF223Z25	
	C203, 204 ELECTR. CAPACITOR	CEAS101M10	
	C205, 206	CKPUYF223Z25	
	C207 ELECTR. CAPACITOR	CEAS101M10	
	C208 MYLOR FILM CAPACITOR	CQMA563J50	
	C209 ELECTR. CAPACITOR	CEAS100M50	
	C210 ELECTR. CAPACITOR	CEAS101M10	
	C211	CKPUYY103N16	
	C212 CERAMIC CAPACITOR	CCCCH270J50	
	C213 CERAMIC CAPACITOR	CCCCH220J50	
	C214	CKPUYY103N16	
	C215 ELECTR. CAPACITOR	CEAS101M10	
	C216 ELECTR. CAPACITOR	CEAS100M50	
	C217	CKPUYY103N16	
	C218-220 ELECTR. CAPACITOR	CEAS101M10	
	C221	CKPUYF223Z25	
	C222 ELECTR. CAPACITOR	CEAS101M10	
	C223, 224 ELECTR. CAPACITOR	CEAS010M50	
	C225, 226	CKPUYF223Z25	
	C227, 228 MYLOR FILM CAPACITOR	CQMA153J50	
	C229, 230 MYLOR FILM CAPACITOR	CQMA273J50	
	C231, 232 MYLOR FILM CAPACITOR	CQMA222J50	
	C233, 234	CKPUYF223Z25	
	C235, 236 MYLOR FILM CAPACITOR	CQMA223J50	
	C237, 238 MYLOR FILM CAPACITOR	CQMA122J50	
	C239, 240	CKPUYF223Z25	
	C241, 242 MYLOR FILM CAPACITOR	CQMA563J50	
	C243, 244	CKPUYB331K50	
	C245-248	CKPUYF223Z25	
	C249, 250 ELECTR. CAPACITOR	CEAS010M50	
	C251	CEANP4R7M16	
	C252	CCPUSL220J50	
	C253 ELECTR. CAPACITOR	CEAS101M10	
	C254 MYLOR FILM CAPACITOR	CQMA272J50	
	C255 MYLOR FILM CAPACITOR	CQMA102J50	
	C256, 257 MYLOR FILM CAPACITOR	CQMA104J50	
	C258 ELECTR. CAPACITOR	CEANPR47M50	
	C259 MYLOR FILM CAPACITOR	CQMA472J50	

Mark	No.	Symbol & Description	Part No.
	C260, 261 MYLOR FILM CAPACITOR	CQMA563J50	
	C262	CKPUYY103N16	
	C263 ELECTR. CAPACITOR	CEAS100M50	
	C264, 265	CKPUYY103N16	
	C266 ELECTR. CAPACITOR	CEAS101M10	
	C267, 268	CKPUYF223Z25	
	C269 ELECTR. CAPACITOR	CEAS101M10	
	C272	CKPUYF223Z25	
	C273 ELECTR. CAPACITOR	CEAS101M10	
	C274-276	CKPUYF223Z25	
	C277 ELECTR. CAPACITOR	CEAS101M10	
	C278	CKPUYF223Z25	
	C279 ELECTR. CAPACITOR	CEAS101M10	
	C280	CKPUYF223Z25	
	C281 ELECTR. CAPACITOR	CEAS101M10	
	C282	CKPUYF223Z25	
	C283 ELECTR. CAPACITOR	CEAS101M10	
	C284	CEANP4R7M16	
	C285 ELECTR. CAPACITOR	CEAS470M16	
	C286 ELECTR. CAPACITOR	CEAS101M10	
	C287	CKPUYF223Z25	
	C289	CKPUYF223Z25	
	C290 CERAMIC CAPACITOR	CKCYF103Z50	
	C291, 292 ELECTR. CAPACITOR	CEAS101M10	
	C293, 294	CKPUYF223Z25	
	C295, 296 ELECTR. CAPACITOR	CEAS222M16	
	C297 ELECTR. CAPACITOR	CEAS101M10	
	C298, 299	CKPUYF223Z25	
	C300-302 CERAMIC CAPACITOR	CKCYF103Z50	
	C305 CERAMIC CAPACITOR	CKCYF473Z50	
	C306-308 ELECTR. CAPACITOR	CEAS100M50	
	C309 ELECTR. CAPACITOR	CEAS101M10	
	C310, 311	CKPUYY103N16	
	C313	CKPUYY103N16	
	C314	CCPUSL220J50	
	C315	CKPUYY103N16	
	C316, 317 CERAMIC CAPACITOR	CKCYF103Z50	
	C319-322	CKPUYB102K50	
	C323	CKPUYY103N16	
RESISTORS			
	R101-109 CARBONFILM RESISTOR	RD1/6PM□□□J	
	R126-129 CARBONFILM RESISTOR	RD1/6PM□□□J	
	R132-267 CARBONFILM RESISTOR	RD1/6PM□□□J	
OTHERS			
	CN103, 104	B8P-MQ	
	JA101, 102 JACK	RKB1001	
	X101	VSS1015	
	X102	RSS1030	

Mark	No.	Symbol & Description	Part No.
------	-----	----------------------	----------

MCAB UNIT**SEMICONDUCTORS**

IC501-503	BA15218N
IC504	NJU4053BD
Q501-503 TRANSISTOR	XDC124ES
D501, 502 DIODE	ISS254

CAPACITORS

C501 ELECTR. CAPACITOR	CEAS010M50
C502 AXIAL CAPACITOR	CKPUYB101K50
C503 ELECTR. CAPACITOR	CEAS010M50
C504 ELECTR. CAPACITOR	CEAS101M10
C505	CKPUYF223Z25

C506 MYLOR FILM CAPACITOR	CQMA182J50
C507	CKPUYF223Z25
C509 MYLOR FILM CAPACITOR	CQMA103J50
C510	CKPUYB331K50
C511 ELECTR. CAPACITOR	CEAS010M50

C512 ELECTR. CAPACITOR	CEAS101M10
C513 ELECTR. CAPACITOR	CEAS100M50
C514 AXIAL CAPACITOR	CKPUYB101K50
C515, 516 ELECTR. CAPACITOR	CEAS010M50
C517	CKPUYF223Z25

C518 MYLOR FILM CAPACITOR	CQMA472J50
C519 MYLOR FILM CAPACITOR	CQMA104J50
C520 MYLOR FILM CAPACITOR	CQMA103J50
C521	CKPUYB331K50
C522 ELECTR. CAPACITOR	CEAS100M50

C523 ELECTR. CAPACITOR	CEAS101M10
C524 ELECTR. CAPACITOR	CEAS010M50
C525 ELECTR. CAPACITOR	CEAS101M10
C526	CKPUYF223Z25
C527-530	CKPUY103N16

RESISTORS

R501-526 CARBONFILM RESISTOR	RD1/6PM□□□J
VR501-503 (10kB)	RCV1054
VR504 (50kB)	RCV1056
VR505 (100kC)	RCV1055

OTHERS

CN501	09MQ-ST
-------	---------

MCJB UNIT**SEMICONDUCTORS**

IC401, 402	BA15218
------------	---------

CAPACITORS

C401-403	CKPUYX222M16
C404-406 MYLOR FILM CAPACITOR	CQMA563J50
C407-409 ELECTR. CAPACITOR	CEJA010M50
C410-412	CKPUYB102K50
C413-415 ELECTR. CAPACITOR	CEJA010M50

C416	CKPUYF223Z25
C417	CEJA470M6R3
C418	CKPUYF223Z25
C419	CEJA470M6R3
C420 CERAMIC CAPACITOR	CKCYF473Z50

Mark	No.	Symbol & Description	Part No.
------	-----	----------------------	----------

C421 CERAMIC CAPACITOR	CKCYF103Z50
------------------------	-------------

RESISTORS

R401-418 CARBONFILM RESISTOR	RD1/6PM□□□J
------------------------------	-------------

OTHERS

CN401	09MQ-ST
JA401-403 MIC JACK	VKN1074
JA404 MINI JACK	VKN1076

SWLB UNIT**SEMICONDUCTORS**

IC601	SN74LS145N
Q601 TRANSISTOR	XDC124ES
D601, 602 DIODE	ISS254
D603-605	SLH-34VC35H3
D606	SLH-34VC35H3

D607-610	SLR-320VC3F
D611	SLR-320YC3F
D612-615	SLR-320VC3F
D616	SLH-34VC35H3

SWITCHES

S601-606 SWITCH	RSG1032
S607-609	RSG1010

CAPACITORS

C601	CKPUYF223Z25
------	--------------

RESISTORS

R601-616 CARBONFILM RESISTOR	RD1/6PM□□□J
------------------------------	-------------


OTHERS

CN601, 602	08MQ-ST
------------	---------

CNB1 UNIT**OTHERS**

CN701, 702	B9P-MQ
------------	--------

7. PANEL FACILITIES

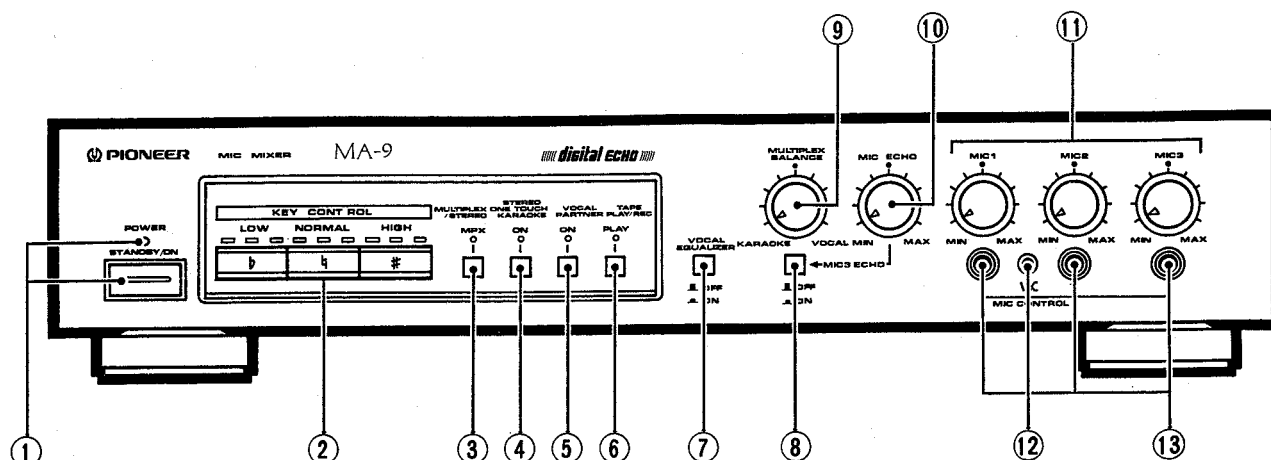

① POWER switch / indicator

Pressing the switch supplies the power and lights the indicator. Pressing it once again turns off the power and puts out the indicator.

NOTE:

The unit's POWER switch is geared to selecting the transformer's secondary and even at the STANDBY position, the unit's circuitry will work as long as the power cord is connected to power outlet.

② KEY CONTROL button / indicator

: Pressing this button once moves the pitch of the music source a half-step higher when it is too low to accompany your vocals. (max. 4 steps)

b : Pressing this button returns the pitch to the original level.

b : Pressing this button once moves the pitch of the music source a half-step lower when it is too high to accompany your vocals. (max. 4 steps)

③ MULTIPLEX / STEREO button / indicator

To select a multiplex source, press this button to change the mode to multiplex. To select a stereo source, press the button to change the mode to stereo. The indicator lights in the multiplex mode.

④ STEREO ONE TOUCH KARAOKE button / indicator

When an ordinary vocal-recorded stereo source is used, pressing this button converts the source into a multiplex source (the indicator lights), and the MULTIPLEX BALANCE and VOCAL PARTNER functions are available. (The STEREO ONE TOUCH KARAOKE function can be utilized only when the MULTIPLEX / STEREO indicator is not lit.)

This function is not usable for a monaural source.

⑤ Vocal Partner button / indicator

When a multiplex source is played back in the multiplex mode, pressing this button activates the VOCAL PARTNER function. The original vocal is automatically suppressed when you are singing, but it automatically returns to help you if you come to a standstill in the middle of the text.

You can enjoy singing a duet with the original vocals. When an ordinary stereo source is used, pressing the STEREO ONE-TOUCH KARAOKE button and then this button converts the source into a multiplex source for added KARAOKE enjoyment.

⑥ TAPE PLAY / REC button / indicator

Pressing this button plays back a cassette tape on the cassette deck connected to the MA-9. (The indicator lights.) The indicator must remain unlit or you cannot perform tape-recording on a cassette deck.

⑦ Vocal Equalizer button

Pressing this button creates a clear and rich vocal sound over a wide range.

⑧ MIC 3 ECHO button

Pressing this button turns the echo effect ON/OFF only for MIC 3. When using the microphone for a master of ceremonies, you can turn off the echo effect.

⑨ MULTIPLEX BALANCE knob

When a multiplex source is used in the multiplex mode to play KARAOKE, turning this knob controls the volume of the original vocal. Turning it counterclockwise to the end plays back only the music source, and turning it clockwise decreases the volume of the original vocals gradually.

⑩ MIC ECHO knob

Turning this knob clockwise adds echo effects to all the vocals on all microphones.

⑪ MIC VOLUME CONTROL knobs

Turning these knobs adjusts the volume of the microphones connected to the MIC jacks.

⑫ MIC CONTROL jack

When the microphone cum the KEY CONTROL switch (DM-V161) is used, connect its control plugs with this jack. You can change the pitch of the music source using the switch on the microphones at hand.

⑬ MIC jacks

Insert the microphone plugs into these jacks

NOTE:

If plugs are not inserted fully, the microphones do not function.

8. SPECIFICATIONS

INPUT terminals (sensitivity / impedance)

MIC 1m V / 40 k Ω
 LINE, TAPE 150m V / 50 k Ω

OUTPUT terminals (output level / output impedance)

LINE, TAPE 150m V / 1 k Ω

SN ratio (EIAJ)

MIC 72 dB
 LINE, TAPE 85 dB

Microphone maximum allowable input

(1 kHz, distortion factor 1%) 150m V

Echo reverberation time 0 — 1.5 sec

Power supply

AC 110 V/120~127 V/220V/240V (switchable), 50/60 Hz

Power Consumption 7W

Spare outlet Power-switch-non-coupling type (Max. 100 W)

Dimensions (W x H x D) 420 x 85 x 336 mm

Weight 3.2 kg

Accessories

Operating instructions x 1
 "HOW TO ENJOY KARAOKE" x 1
 Connecting cord x 2

NOTE:

Specifications and design subject to possible modification without notice, due to impossibility.