


Service Manual

Pioneer

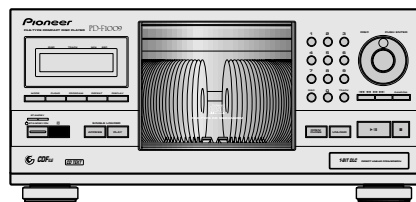

ORDER NO.
RRV2262

FILE-TYPE COMPACT DISC PLAYER

PD-F1009

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

| Type | Model | Power Requirement | Remarks |
|-------|----------|-------------------|---------|
| | PD-F1009 | | |
| KU/CA | ○ | AC120V | |
| MY | ○ | AC220-230V | |

CONTENTS

| | | |
|--|----|--|
| 1. SAFETY INFORMATION | 2 | |
| 2. EXPLODED VIEWS AND PARTS LIST | 4 | |
| 3. BLOCK DIAGRM AND SCHEMATIC DIAGRAM ... | 14 | |
| 4. PCB CONNECTION DIAGRAM | 22 | |
| 5. PCB PARTS LIST | 38 | |
| 6. ADJUSTMENT | 44 | |
| 7. GENERAL INFORMATION | 48 | |
| 7.1 DIAGNOSIS | 48 | |
| 7.1.1 DISASSEMBL | 48 | |
| 7.1.2 ERROR CHECK DISPLAY | 51 | |
| 7.1.3 EXPLANATION OF DISC DEECTION .. | 54 | |
| 7.1.4 OPERATION FLOWCHART | 54 | |
| 7.2 PARTS | 55 | |
| 7.2.1 IC | 55 | |
| 7.2.2 DISPLAY | 58 | |
| 8. PANEL FACILITIES AND SPECIFICATIONS | 59 | |

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.



WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65



NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

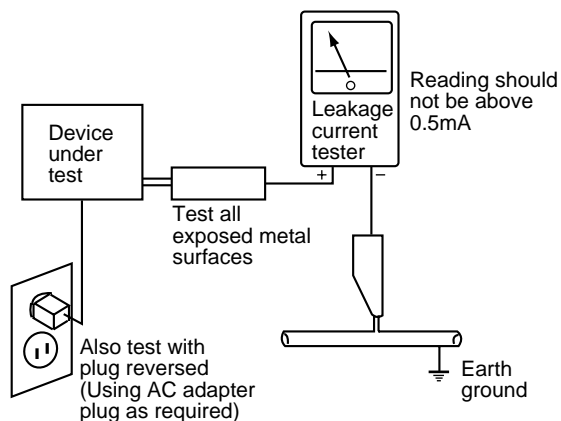

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.


IMPORTANT

THIS PIONEER APPARATUS CONTAINS LASER OF CLASS 1. SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON.

LASER DIODE CHARACTERISTICS
 MAXIMUM OUTPUT POWER: 7 mW
 WAVELENGTH: 780 – 785 nm

LABEL CHECK

PD-F1009/MY : Only

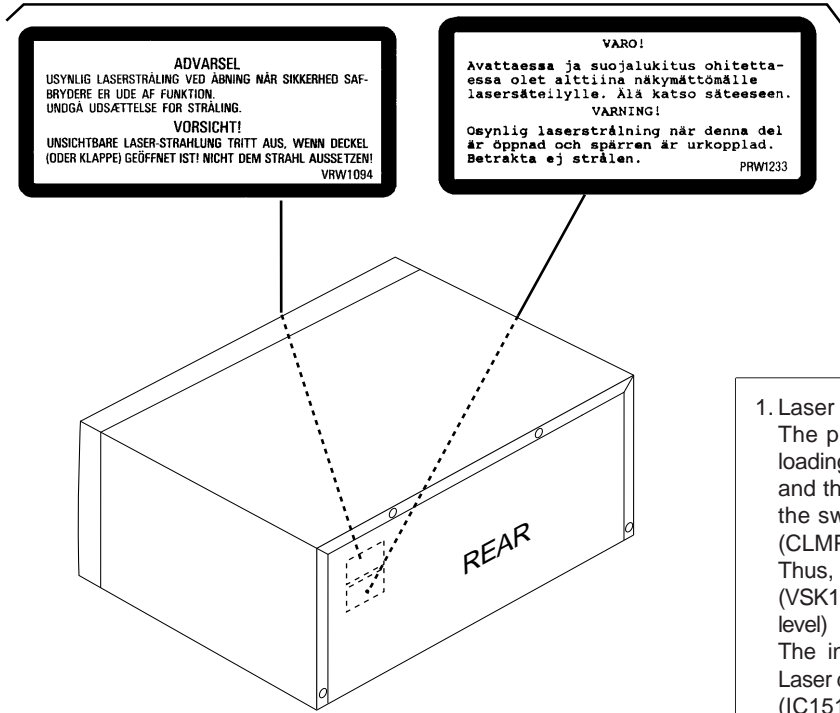

ADVARSEL
 USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHED SAF-BRYDERE ER UDE AF FUNKTION.
 UNDGÅ UDSÆTTELSE FOR STRÅLING.
VORSICHT!
 UNSICHTBARE LASER-STRÅHLUNG TRITTS AUS, WENN DECKEL (ODER KLAPPE) GEÖFFNET IST! NICHT DEM STRAHL AUSSETZEN!
 VRW1094

VARO!
 Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.
VARNING!
 Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.
 PRW1233

Additional Laser Caution


- 1. Laser Interlock Mechanism**
 The position of the switch (VSK1011) for detecting loading state is detected by the system microprocessor, and the design prevents laser diode oscillation when the switch (VSK1011) is not on CLMP terminal side (CLMP signal is OFF or high level).
 Thus, the interlock will no longer function if the switch (VSK1011) is deliberately set to CLMP terminal side. (low level)
 The interlock also does not function in the test mode *.
 Laser diode oscillation will continue, if pin 1 of CXA2570N (IC151) on the MAIN BOARD ASSY is connected to GND, or pin 14 of IC301 (LDON) is connected to low level (ON), or else the terminals of Q151 are shorted to each other (fault condition).
- 2. When the cover is opened, close viewing of the objective lens with the naked eye will cause exposure to a Class 1 laser beam.**

* Refer to page 45 .

2. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to ∇ mark on the product are used for disassembly.

2.1 PACKING

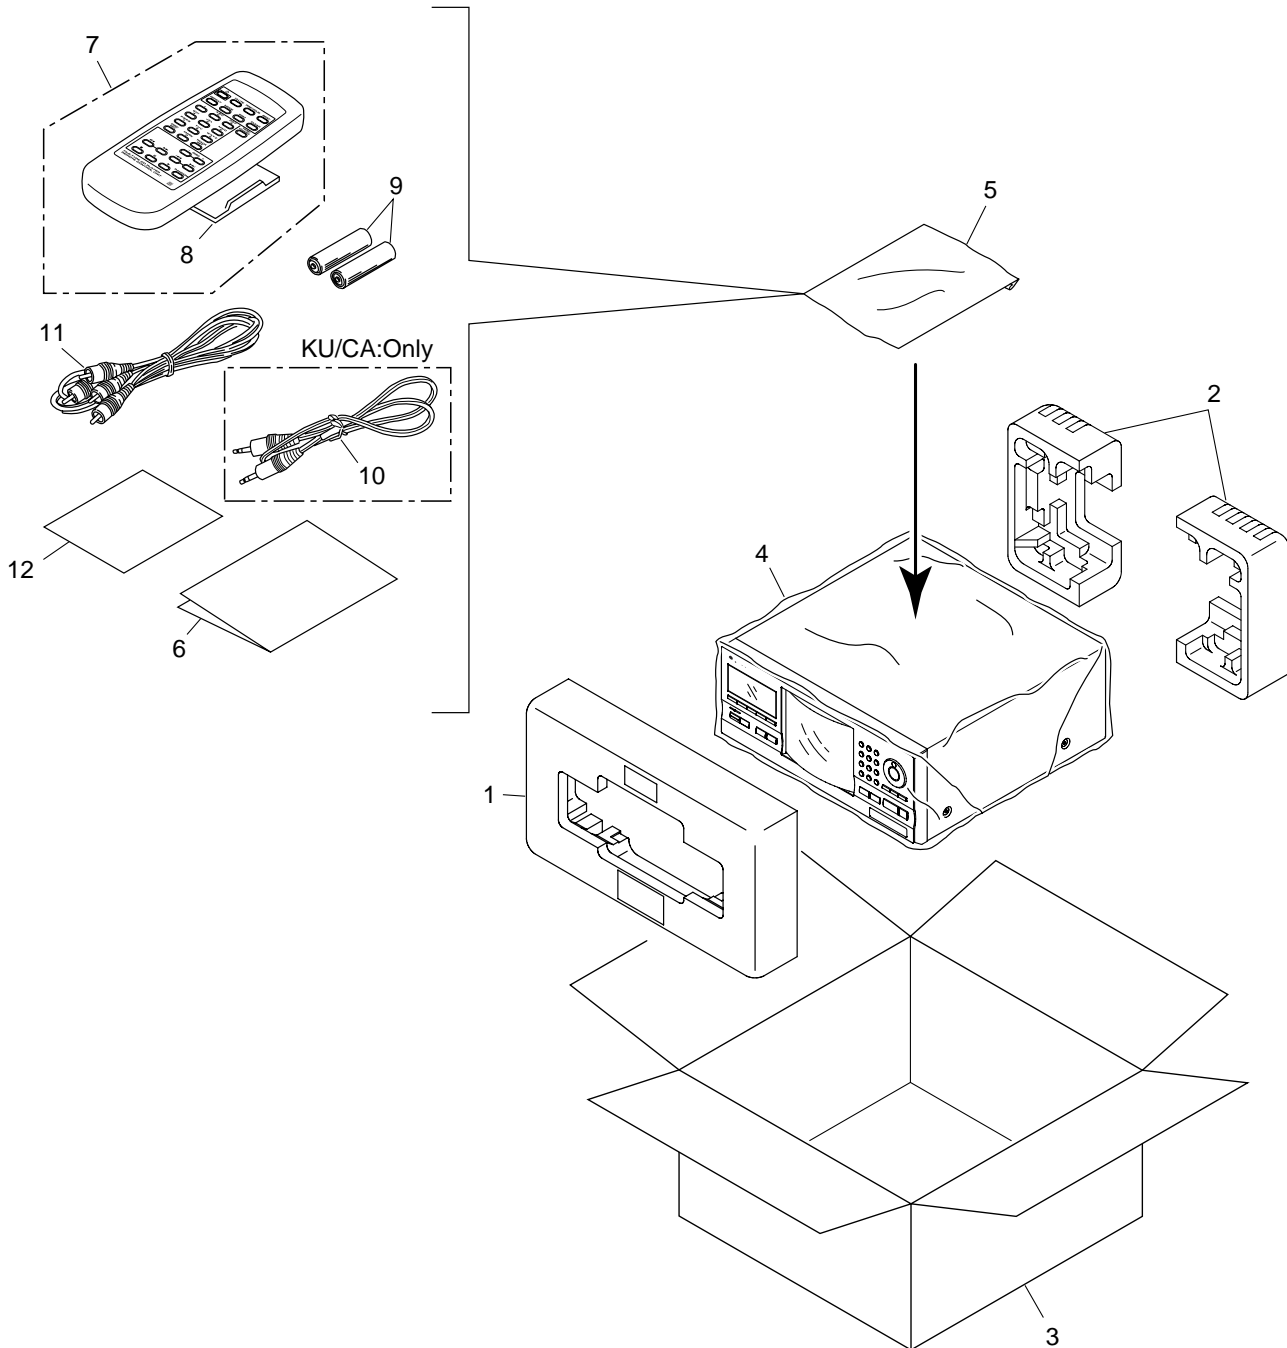

(1) PACKING PARTS LIST


| Mark | No. | Description | Part No. |
|------|-----|--|------------------------|
| | 1 | Styrol Protector F | PHA1325 |
| | 2 | Styrol Protector R | PHA1326 |
| | 3 | Packing Case | See Contrast table (2) |
| | 4 | Packing Sheet | RHC1023 |
| | 5 | Polyethylene Bag (0.03 × 230 × 340) | Z21-038 |
| | 6 | Operating Instructions | See Contrast table (2) |
| | 7 | Remote Control Unit | PWW1168 |
| | 8 | Battery Cover | AZA7204 |
| NSP | 9 | Dry Cell Batteries (R6P, AA) | VEM-013 |
| | 10 | Control Cable (L=1 m) | See Contrast table (2) |
| | 11 | Audio Cable (L=1 m) | PDE1248 |
| NSP | 12 | Warranty Card | See Contrast table (2) |



(2) CONTRAST TABLE

PD-F1009/KU/CA and PD-F1009/MY are constructed the same except for the following:


| Mark | No. | Symbol and Description | Part No. | | Remarks |
|------|-----|--|--------------------|-----------------|---------|
| | | | PD-F1009 /KU/CA | PD-F1009 /MY | |
| | 3 | Packing Case | PHG2397 | PHG2398 | |
| | 6 | Operating Instructions (English) | PRB1300 | Not used | |
| | 6 | Operating Instructions (English/French/German/Italian /Dutch/Swedish/Spanish/Portuguese) | Not used | PRE1288 | |
| | 10 | Control Cable (L=1 m) | PDE1247 | Not used | |
| NSP | 12 | Warranty Card | ARY7045 | ARY7022 | |

2.2 EXTERIOR (1/2)

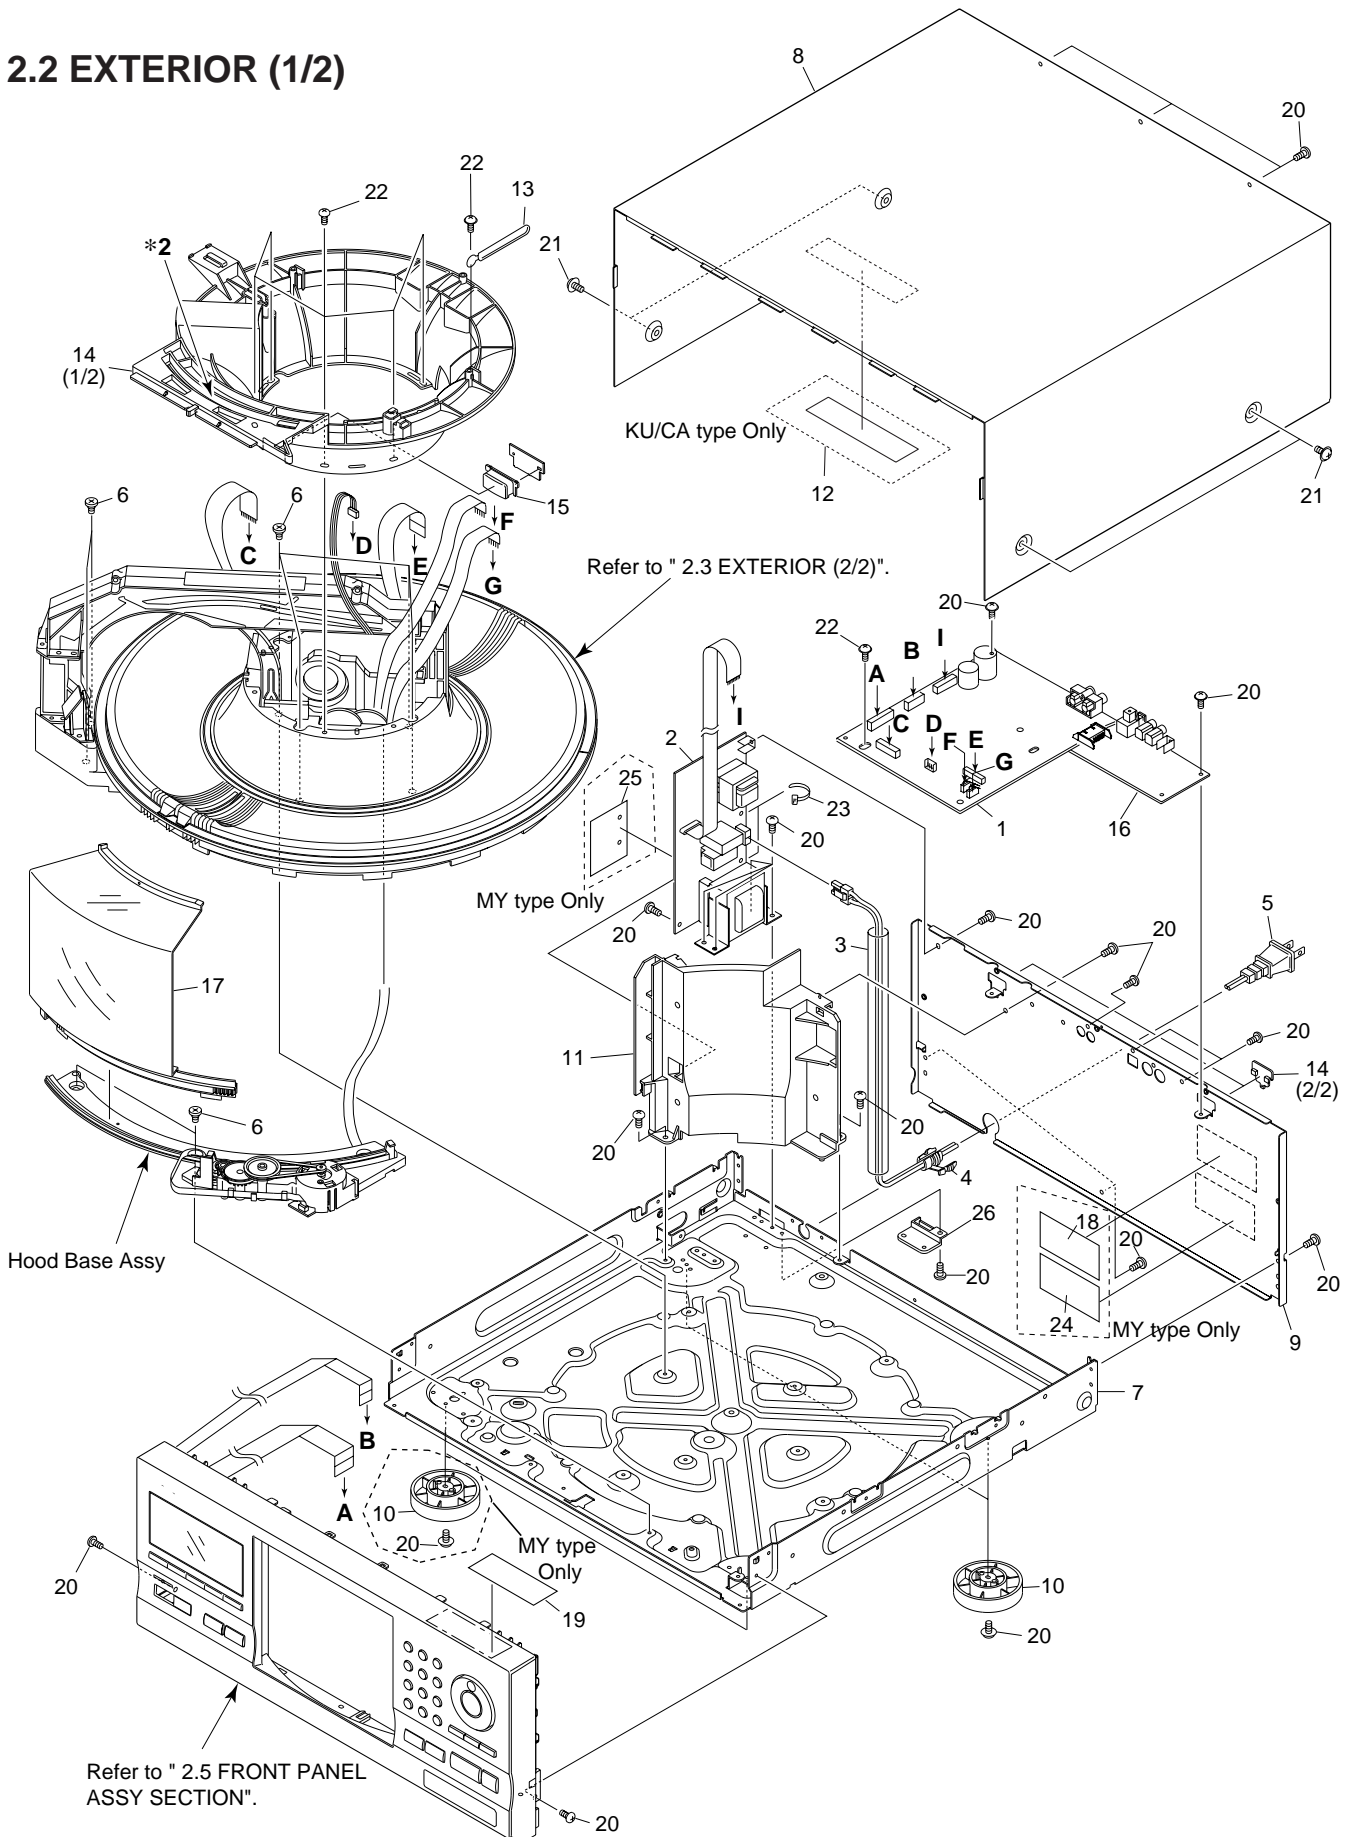

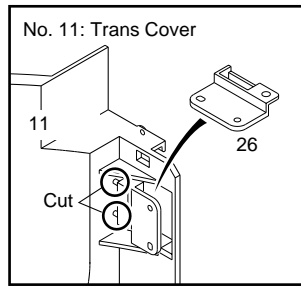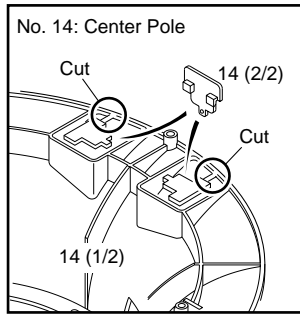

■ Hood Base Assy Section

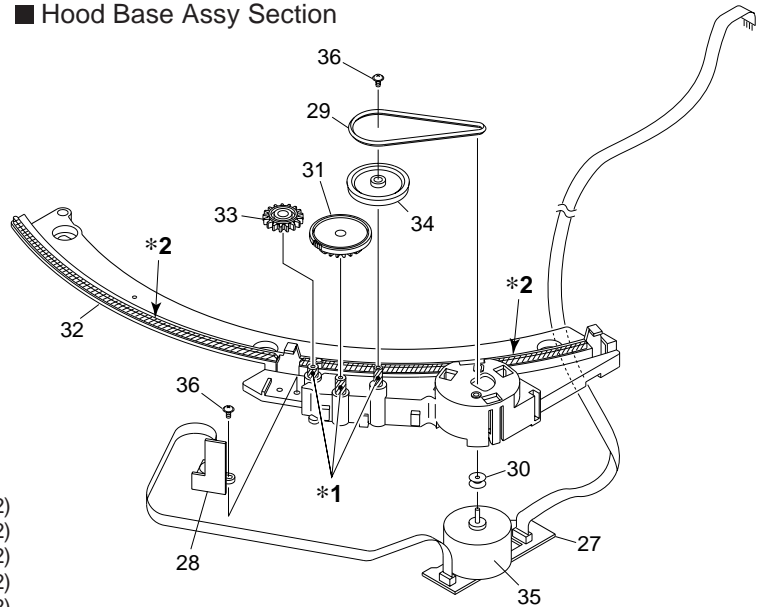

(1) EXTERIOR (1/2) PARTS LIST

| Mark | No. | Description | Part No. |
|------|-----|--------------------|------------------------|
| | 1 | MAIN BOARD ASSY | See Contrast table (2) |
| | 2 | POWER BOARD ASSY | See Contrast table (2) |
| NSP | 3 | Vinyl Tube | See Contrast table (2) |
| | 4 | Strain Relief | See Contrast table (2) |
| △ | 5 | AC Power Cord | See Contrast table (2) |
| | 6 | Screw C | PBA1106 |
| NSP | 7 | Under Base | PNA2421 |
| | 8 | Bonnet Case | PYY1255 |
| | 9 | Rear Base | See Contrast table (2) |
| | 10 | Insulator | See Contrast table (2) |
| | 11 | Trans Cover | VNK4542 |
| | 12 | 65 Label | See Contrast table (2) |
| | 13 | Cord Clamper | RNH-184 |
| | 14 | Center Pole | PNW2792 |
| | 15 | CR Spacer | PNW2961 |
| | 16 | SR BOARD ASSY | See Contrast table (2) |
| | 17 | Hood | PNW2793 |
| | 18 | Caution Label (HE) | See Contrast table (2) |
| | 19 | Caution Label | See Contrast table (2) |
| | 20 | Screw | BBZ30P080FZK |
| | 21 | Screw | FBT40P080FZK |
| | 22 | Screw | IPZ30P080FMC |
| | 23 | Binder | ZCA-SKB90BK |
| | 24 | Caution Label | See Contrast table (2) |
| | 25 | Screw Cover | See Contrast table (2) |

| Mark | No. | Description | Part No. |
|------|-----|-------------|----------|
| | 26 | Trans Cover | PNW2802 |

■ Hood Base Assy Section


| | | | |
|-----|----|------------------------------|--------------|
| NSP | 27 | DOOR MOTOR BOARD ASSY | PWZ4061 |
| NSP | 28 | DOOR SW BOARD ASSY | PWZ4062 |
| | 29 | Belt | PEB1300 |
| | 30 | Motor Pulley | PNW1634 |
| | 31 | Gear AW | PNW2906 |
| | 32 | Hood Base | PNW2791 |
| | 33 | Gear M1 | PNW2800 |
| | 34 | Gear Pulley | VNL1662 |
| | 35 | Slider Motor | VXM1033 |
| | 36 | Screw | IPZ20P080FMC |
| | *1 | Froil 397 (for service) | GYA1001 |
| | *2 | Ha Narl PN955R (for service) | GEM1016 |



(2) CONTRAST TABLE

PD-F1009/KU/CA and PD-F1009/MY are constructed the same except for the following:

| Mark | No. | Symbol and Description | Part No. | | Remarks |
|---------------|-----|------------------------|-----------------|--------------|---------|
| | | | PD-F1009 /KU/CA | PD-F1009 /MY | |
| NSP △ △ | 1 | MAIN BOARD ASSY | PWZ4036 | PWZ4037 | |
| | 2 | POWER BOARD ASSY | PWZ4048 | PWZ4049 | |
| | 3 | Vinyl Tube | Not used | ZUA-AH6-14R3 | |
| | 4 | Strain Relief | CM-22C | CM-22B | |
| | 5 | AC Power Cord | ADG7024 | VDG1061 | |
| | 9 | Rear Base | PNA2529 | PNA2530 | |
| | 10 | Insulator | AMR7198 | PNW2766 | |
| | 12 | 65 Label | ARW7050 | Not used | |
| | 16 | SR BOARD ASSY | PWZ4042 | PWZ4043 | |
| | 18 | Caution Label (HE) | Not used | PRW1233 | |
| | 19 | Caution Label | VRW1817 | PRW1562 | |
| | 24 | Caution Label | Not used | VRW1094 | |
| | 25 | Screw Cover | Not used | PNM1340 | |

2.3 EXTERIOR (2/2)


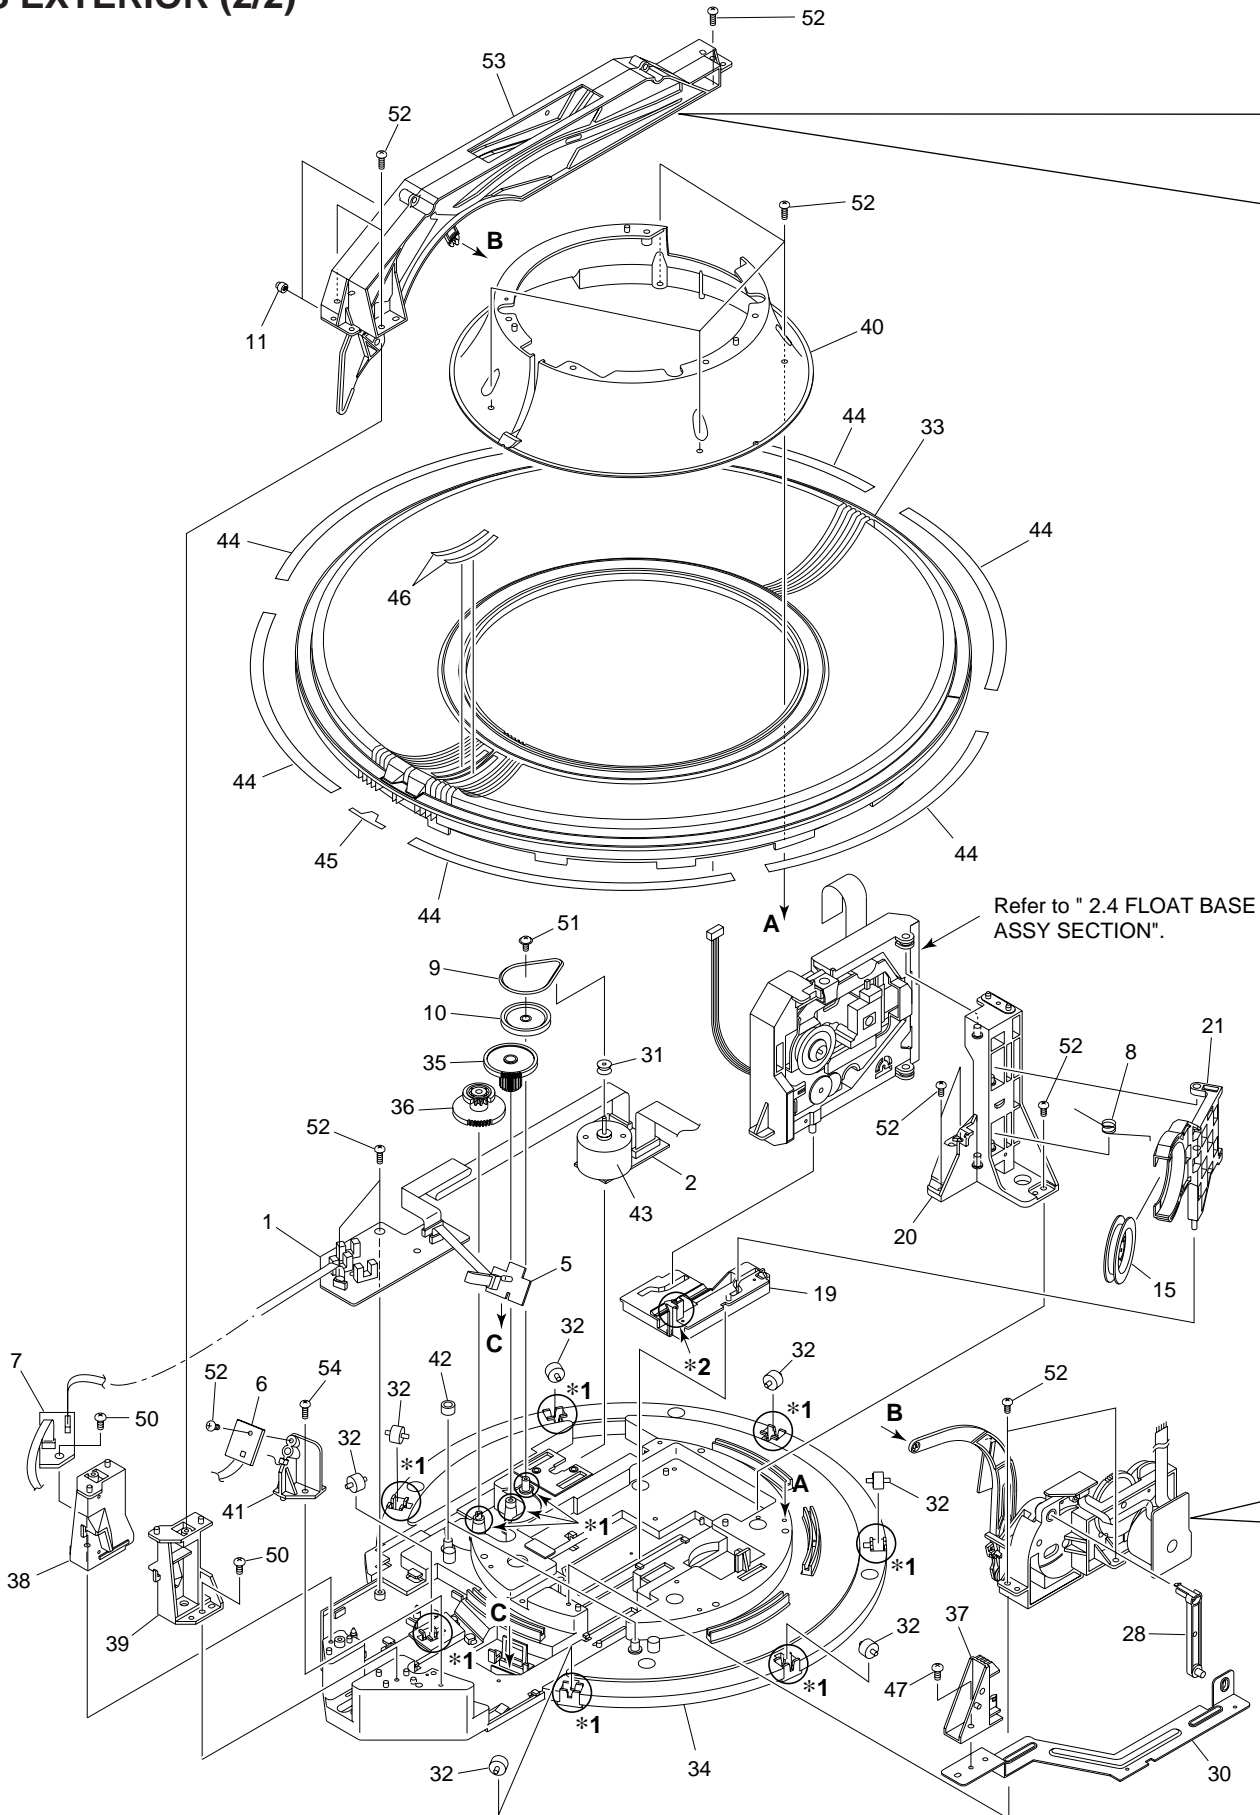


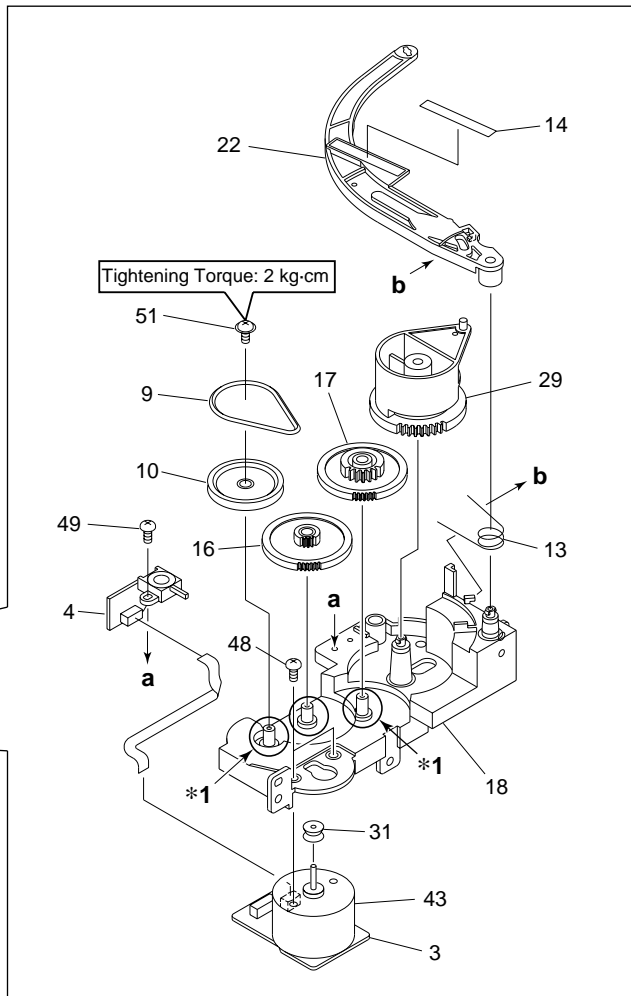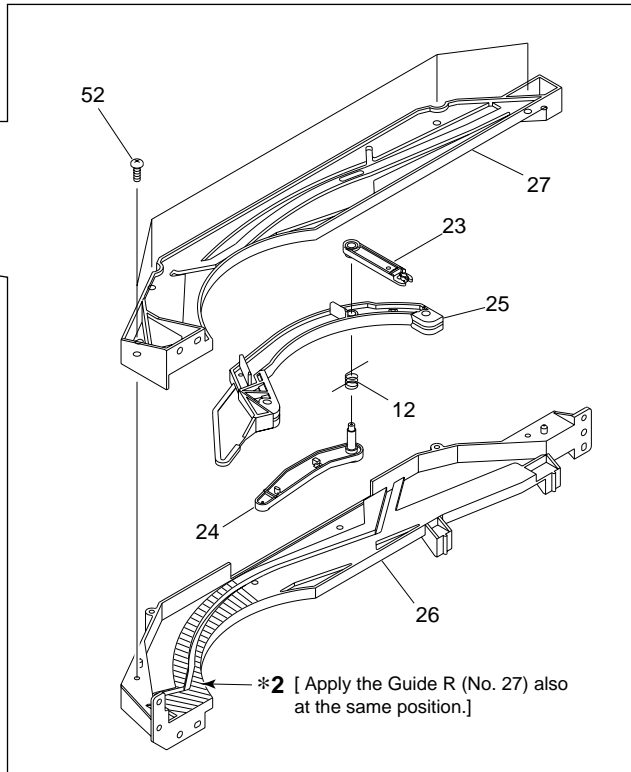

EXTERIOR (2/2) PARTS LIST

| Mark | No. | Description | Part No. |
|------|-----|------------------------------|--------------|
| NSP | 1 | SENSOR BOARD ASSY | PWZ3781 |
| NSP | 2 | SELECT BOARD ASSY | PWZ3785 |
| NSP | 3 | LOADING BOARD ASSY | PWZ3788 |
| NSP | 4 | LOADING SW BOARD ASSY | PWZ3790 |
| NSP | 5 | RADIATE BOARD ASSY | PWZ3791 |
| NSP | 6 | RECEIVE BOARD ASSY | PWZ3792 |
| NSP | 7 | VOLUME BOARD ASSY | PWZ4063 |
| | 8 | Clamp Spring | ABH7107 |
| | 9 | Loading Belt | AEB7029 |
| | 10 | Gear Pulley B | ANW7062 |
| | 11 | Roller B | ANW7075 |
| NSP | 12 | Arm Spring | PBH1225 |
| | 13 | L Arm Spring | PBH1226 |
| | 14 | Sheet | PED1028 |
| | 15 | Clamper | PNW2743 |
| | 16 | Gear 1 | PNW2819 |
| | 17 | Gear 2 | PNW2820 |
| | 18 | Gear Holder | PNW2822 |
| | 19 | Slider Cam | PNW2823 |
| | 20 | Clamp Pole | PNW2826 |
| | 21 | Clamp Holder | PNW2827 |
| | 22 | Drive Arm | PNW2829 |
| NSP | 23 | Link | PNW2830 |
| NSP | 24 | L Slider | PNW2831 |
| NSP | 25 | L Arm | PNW2832 |
| NSP | 26 | Guide L | PNW2833 |
| NSP | 27 | Guide R | PNW2834 |
| | 28 | Link L | PNW2844 |
| | 29 | Drive Cam | PNW2873 |
| | 30 | Lock Plate | PNA2438 |
| | 31 | Motor Pulley | PNW1634 |
| | 32 | Roller | PNW2647 |
| | 33 | Disc Rack | PNW2790 |
| | 34 | Rack Base | PNW2835 |
| | 35 | ST Gear 0.6 | PNW2836 |
| | 36 | ST Gear 1.0 | PNW2837 |
| | 37 | Disc Divider | PNW2838 |
| | 38 | Guide Support L | PNW2839 |
| | 39 | Guide Support R | PNW2840 |
| | 40 | Disc Guard | PNW2841 |
| | 41 | Sensor Stay | PNW2842 |
| | 42 | Guide Roller | PNW2843 |
| | 43 | Slider Motor | VXM1033 |
| | 44 | Rack Label | PAM1770 |
| | 45 | S Label | PAM1771 |
| | 46 | +1 Label | PRW1507 |
| | 47 | Screw | BBZ30P080FZK |
| | 48 | Screw | BMZ26P040FZK |
| | 49 | Screw | BPZ26P060FMC |
| | 50 | Screw | BPZ30P100FCU |
| | 51 | Screw | IPZ20P080FMC |
| | 52 | Screw | PPZ30P080FMC |
| | 53 | Arm Assy | PXA1615 |
| | 54 | Screw | IPZ30P080FMC |
| | *1 | Froil 397 (for service) | GYA1001 |
| | *2 | Ha Narl PN955R (for service) | GEM1016 |

2.4 FLOAT BASE ASSY SECTION

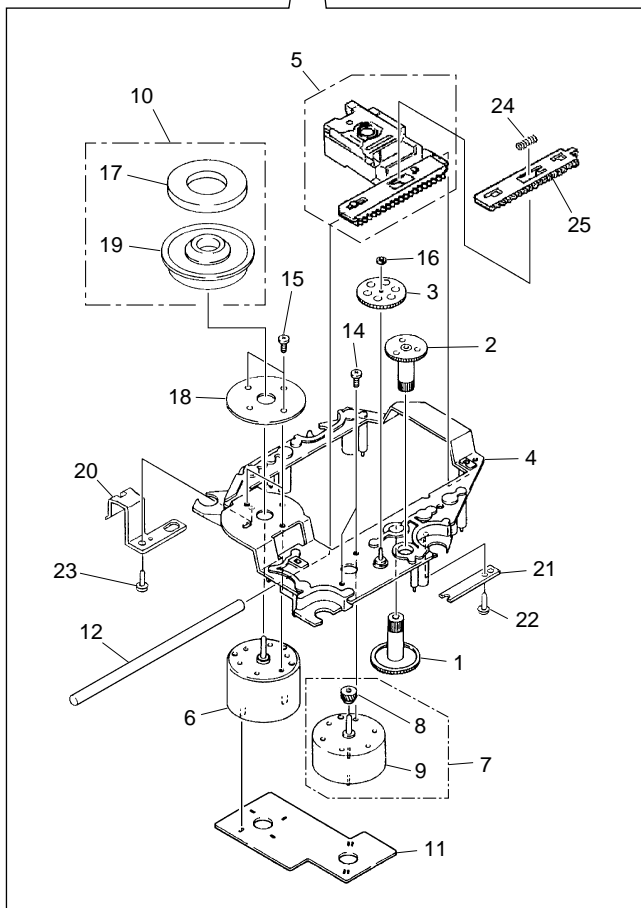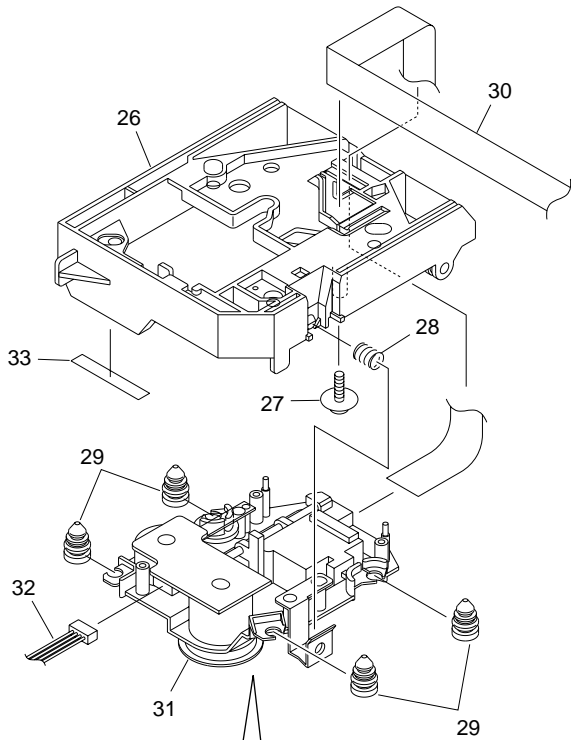


● How to Install the Disc Table

- 1 Use nipper or other tool to cut the three sections marked (A) in figure 1. Then remove the spacer
- 2 While supporting the spindle motor shaft with the stopper, put spacer on top of the yoke M, and stick the disc table on top (takes about 9kg pressure). Detach the spacer.

FLOAT BASE ASSY SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|-------------|------------|---------------------------|-----------------|
| | 1 | Gear 1 | PNW2052 |
| | 2 | Gear 2 | PNW2053 |
| | 3 | Gear 3 | PNW2054 |
| | 4 | Carriage Base | PNW2699 |
| | 5 | Pickup Assy - S | PEA1335 |
| | 6 | D.C. Motor Assy (SPINDLE) | PEA1235 |
| | 7 | Carriage DC Motor Assy | PEA1246 |
| | 8 | Pinion Gear | PNW2055 |
| | 9 | Carriage DC Motor/0.3W | PXM1027 |
| | 10 | Disc Table Assy | PEA1314 |
| | 11 | Mechanism Board Assy | PWX1192 |
| | 12 | Guide Bar | PLA1094 |
| | 13 | | |
| | 14 | Screw | JFZ17P025FZK |
| | 15 | Screw | JFZ20P040FMC |
| | 16 | Washer | WT12D032D025 |
| | 17 | Clamp Magnet | PMF1014 |
| | 18 | Yoke M | PNB1312 |
| NSP | 19 | Disc Table | PNW2410 |
| NSP | 20 | Float Angle | ANB7020 |
| | 21 | Gear Stopper | PNB1303 |
| | 22 | Screw | BPZ20P060FMC |
| | 23 | Screw | BPZ26P100FMC |
| | 24 | PU Rack Spring | ABH7077 |
| | 25 | Rack Holder | PNW2056 |
| | 26 | Float Base | PNW2828 |
| | 27 | Screw | ABA7009 |
| | 28 | Float Spring | ABH7049 |
| | 29 | Float Rubber | AEB7028 |
| | 30 | 16P F.F.C/30V | PDD1185 |
| NSP | 31 | Servo Mechanism Assy GM | PXA1591 |
| | 32 | Connector Assy (4P) | RDE1043 |
| | 33 | Sheet | PED1028 |

2.5 FRONT PANEL ASSY SECTION

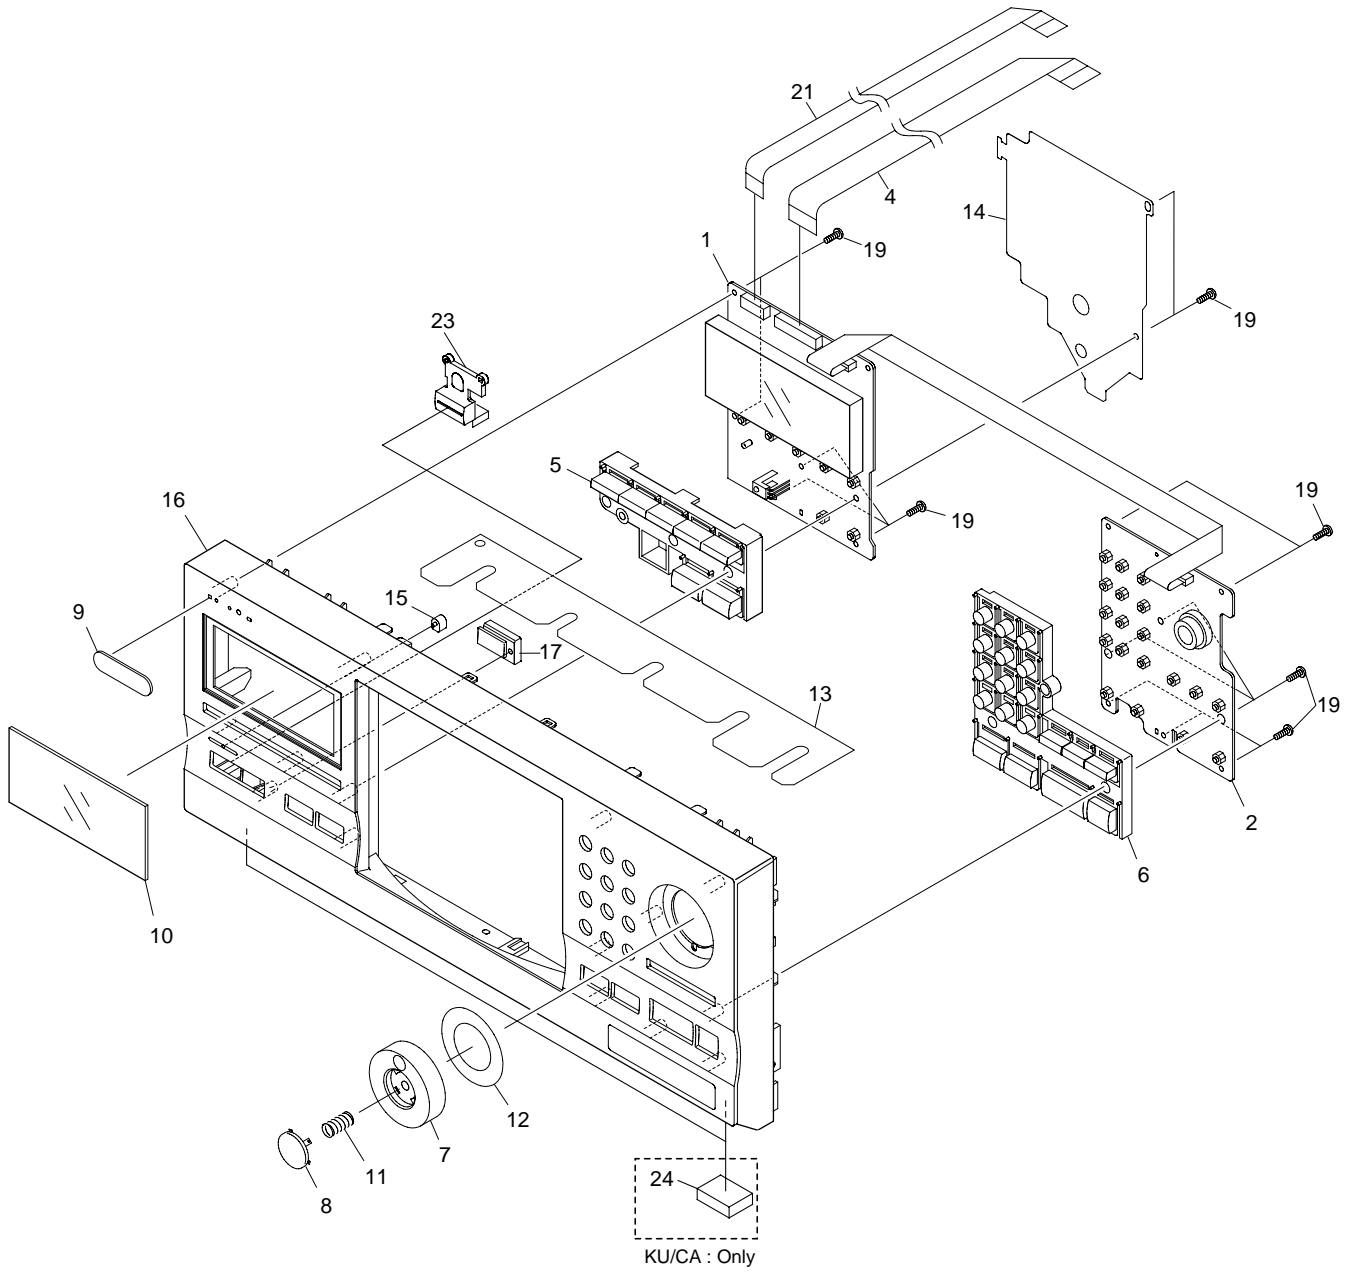

(1) FRONT PANEL ASSY SECTION PARTS LIST

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|------|-----|--------------------|------------------------|------|-----|-----------------|------------------------|
| | 1 | DISPLAY BOARD ASSY | See Contrast table (2) | | 13 | FC Cover | PNM1323 |
| | 2 | CONTROL BOARD ASSY | PWZ4057 | | 14 | PCB Cover | PNM1324 |
| | 3 | •••• | | | 15 | LED Lens | PNW2019 |
| | 4 | 26P F.F.C / 60V | ADD7118 | | 16 | Operation Panel | See Contrast table (2) |
| | 5 | MODE Button | PAC1994 | | 17 | Sensor Lens | PNW2804 |
| | 6 | PLAY Button | PAC1995 | | 18 | •••• | |
| | 7 | Jog Dial | PAC1882 | | 19 | Screw | PPZ30P100FMC |
| | 8 | ENTER Button | PAC1883 | | 20 | •••• | |
| | 9 | Name Plate | PAM1776 | | 21 | 16P F.F.C / 60V | PDD1203 |
| | 10 | Display Window | See Contrast table (2) | | 22 | •••• | |
| | 11 | Enter Spring | PBH1228 | | 23 | Power Button | VNK4527 |
| | 12 | Jog Sheet | PEC1042 | | 24 | Rubber Sheet | See Contrast table (2) |

(2) CONTRAST TABLE

PD-F1009/KU/CA and PD-F1009/MY are constructed the same except for the following:

| Mark | No. | Symbol and Description | Part No. | | Remarks |
|------|-----|------------------------|-----------------|--------------|---------|
| | | | PD-F1009 /KU/CA | PD-F1009 /MY | |
| | 1 | DISPLAY BOARD ASSY | PWZ4053 | PWZ4054 | |
| | 10 | Display Window | PAM1816 | PAM1817 | |
| | 16 | Operation Panel | PNW2958 | PNW2959 | |
| | 24 | Rubber Sheet | AEB1111 | Not used | |

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM


3.1 BLOCK DIAGRAM


A

B

C

D

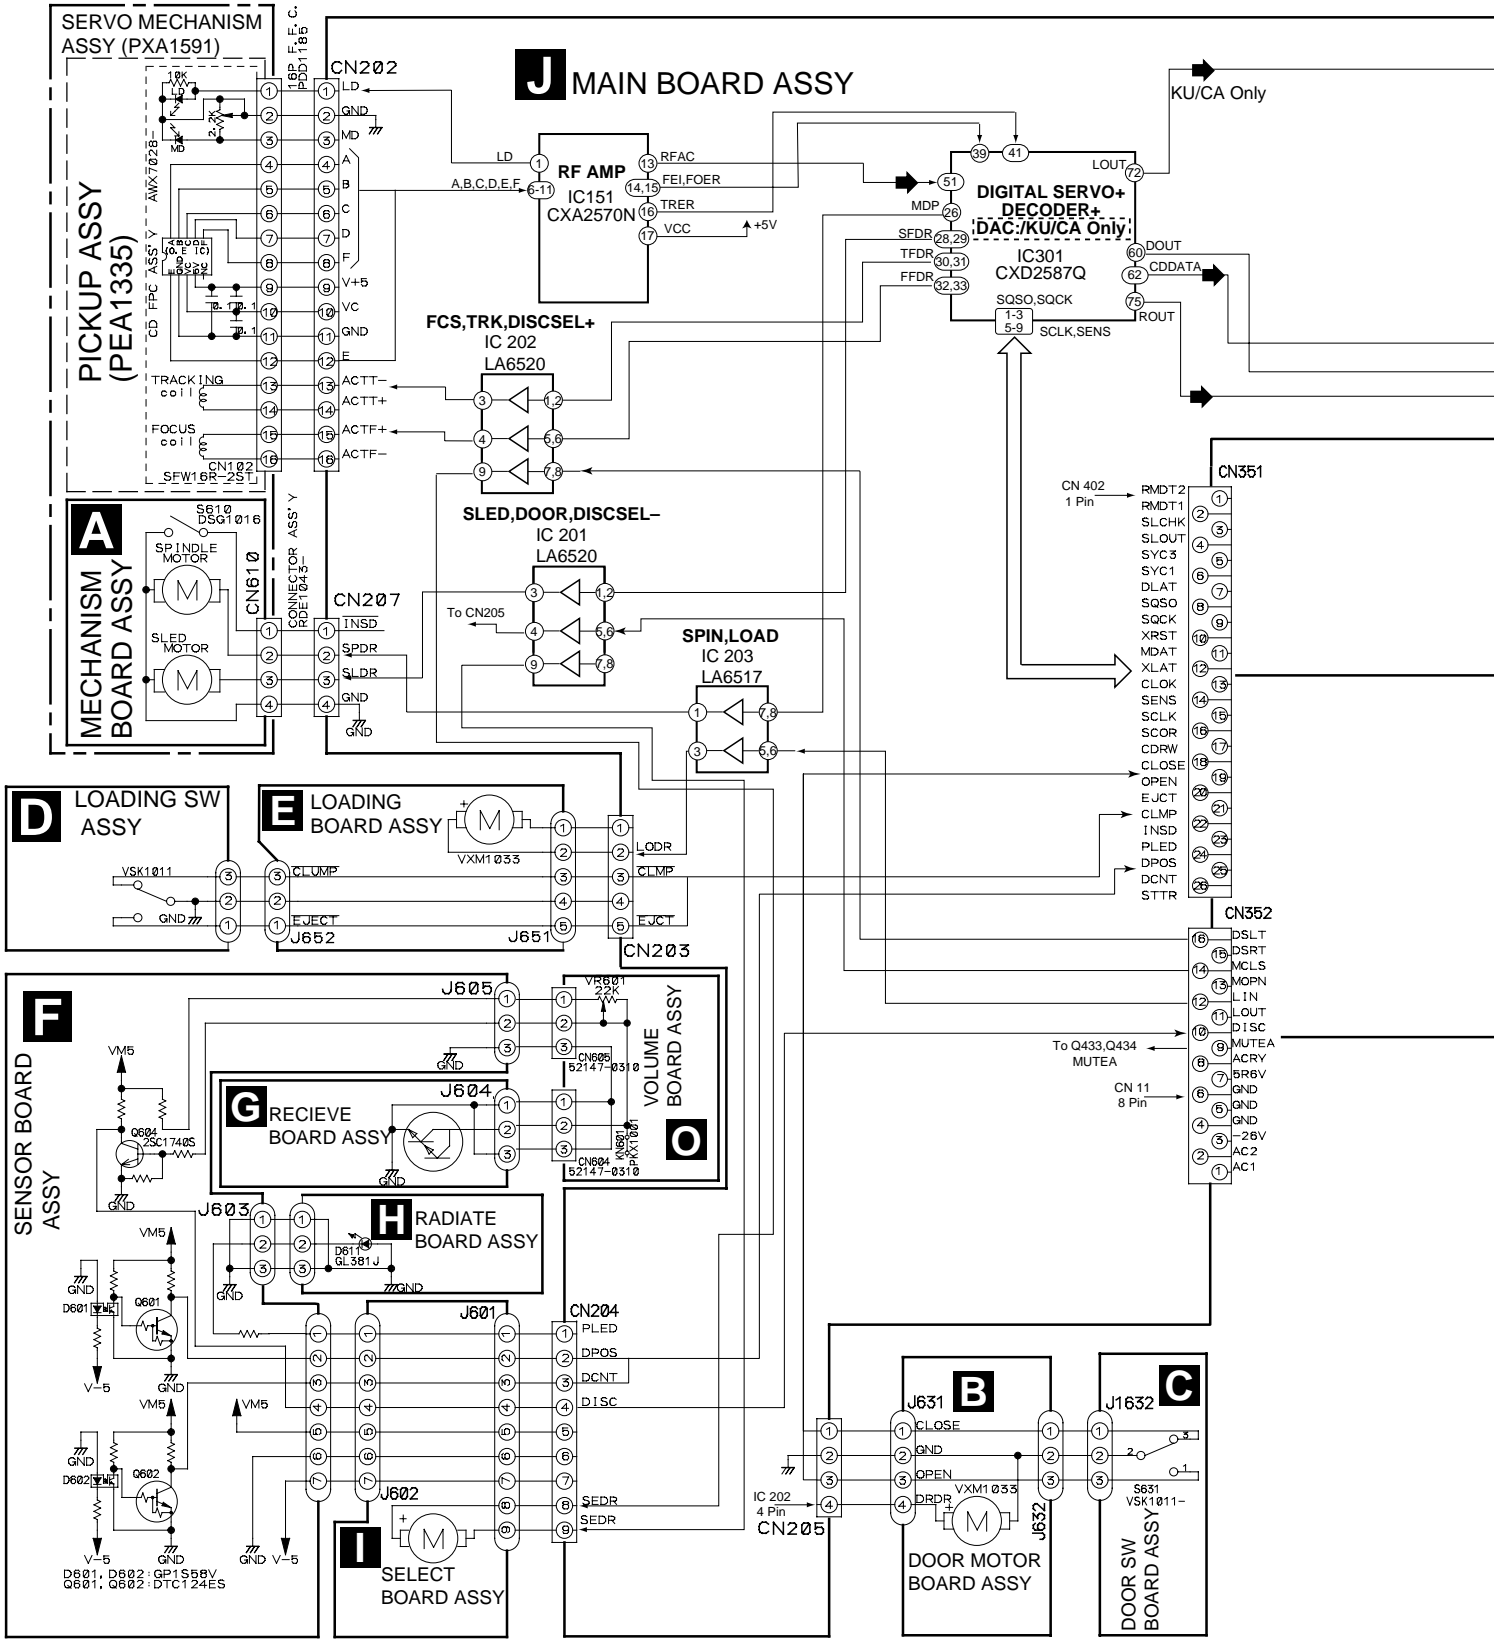

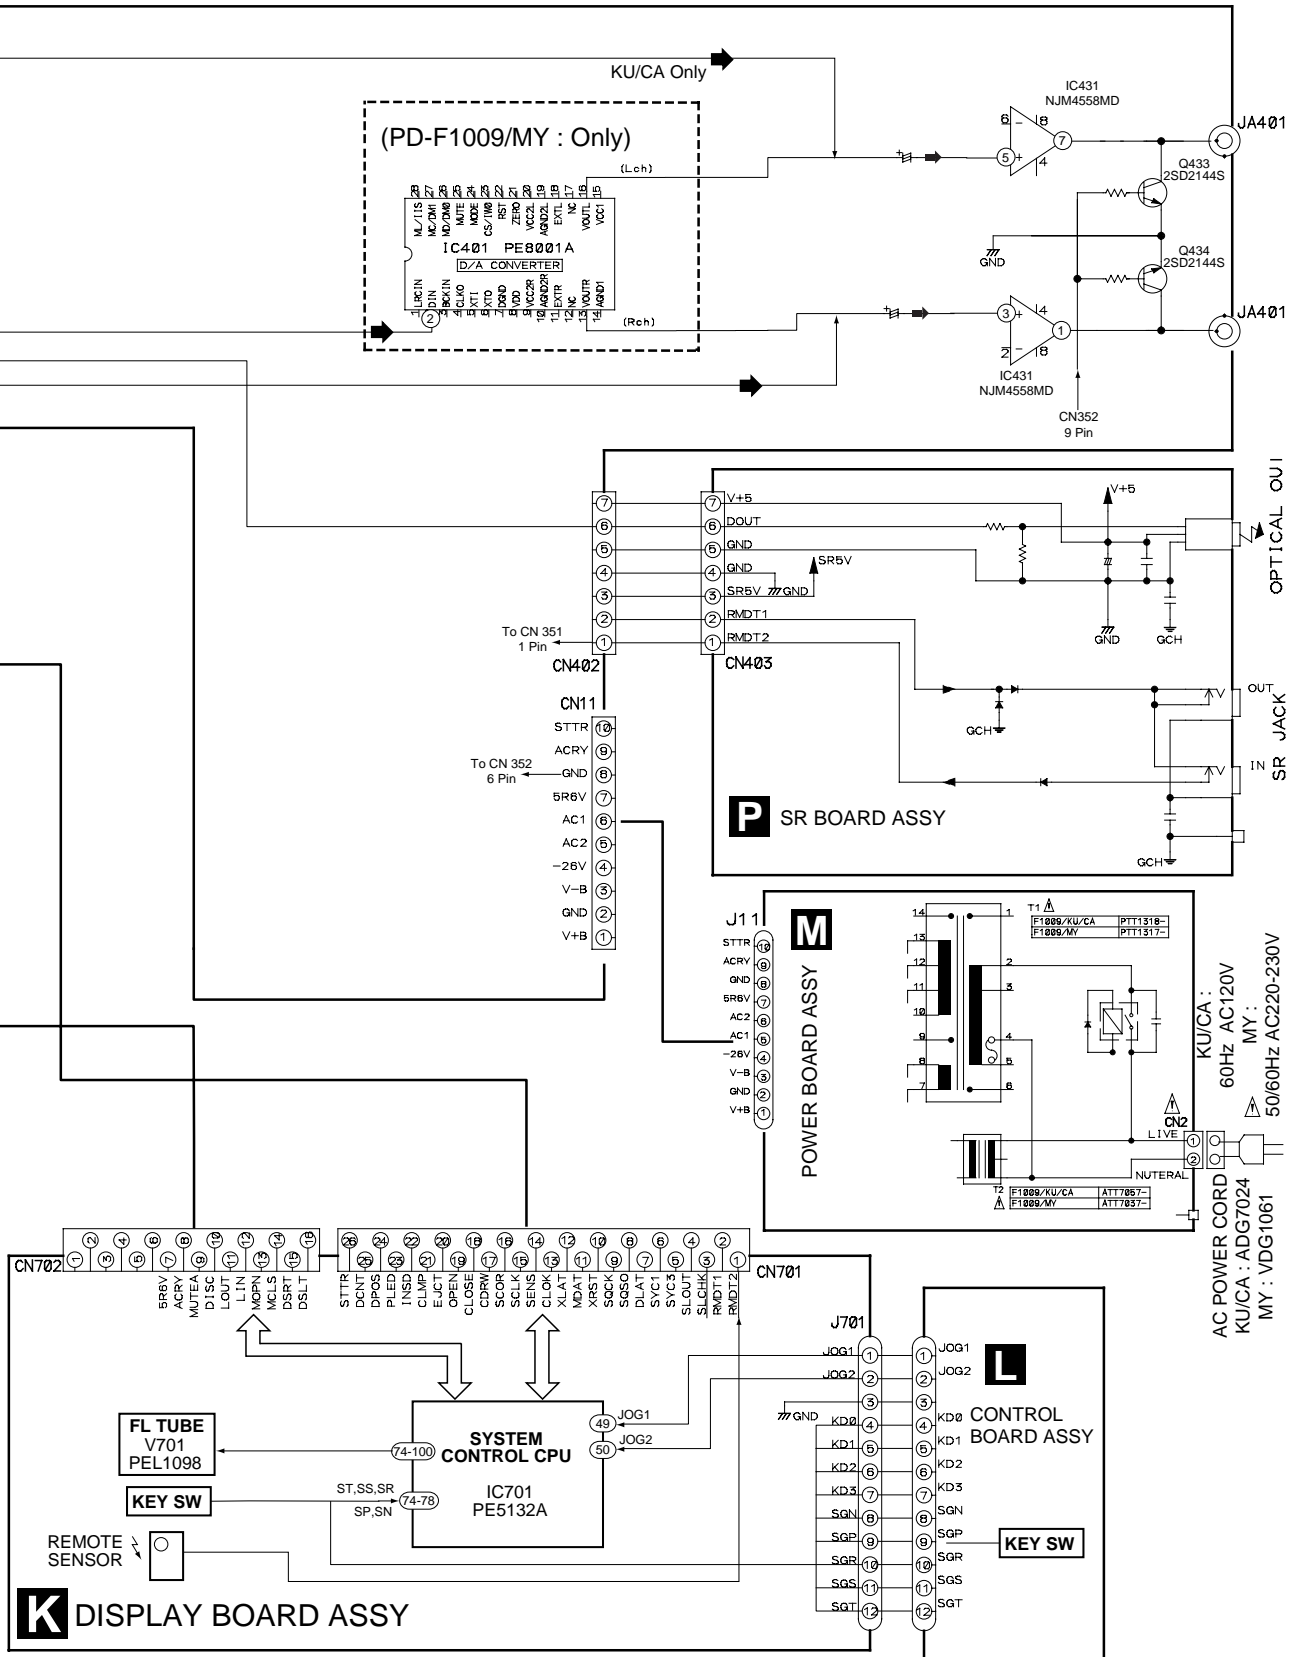

A
B
C
D


3.2 OVERALL WIRING DIAGRAM

A

B

C

D

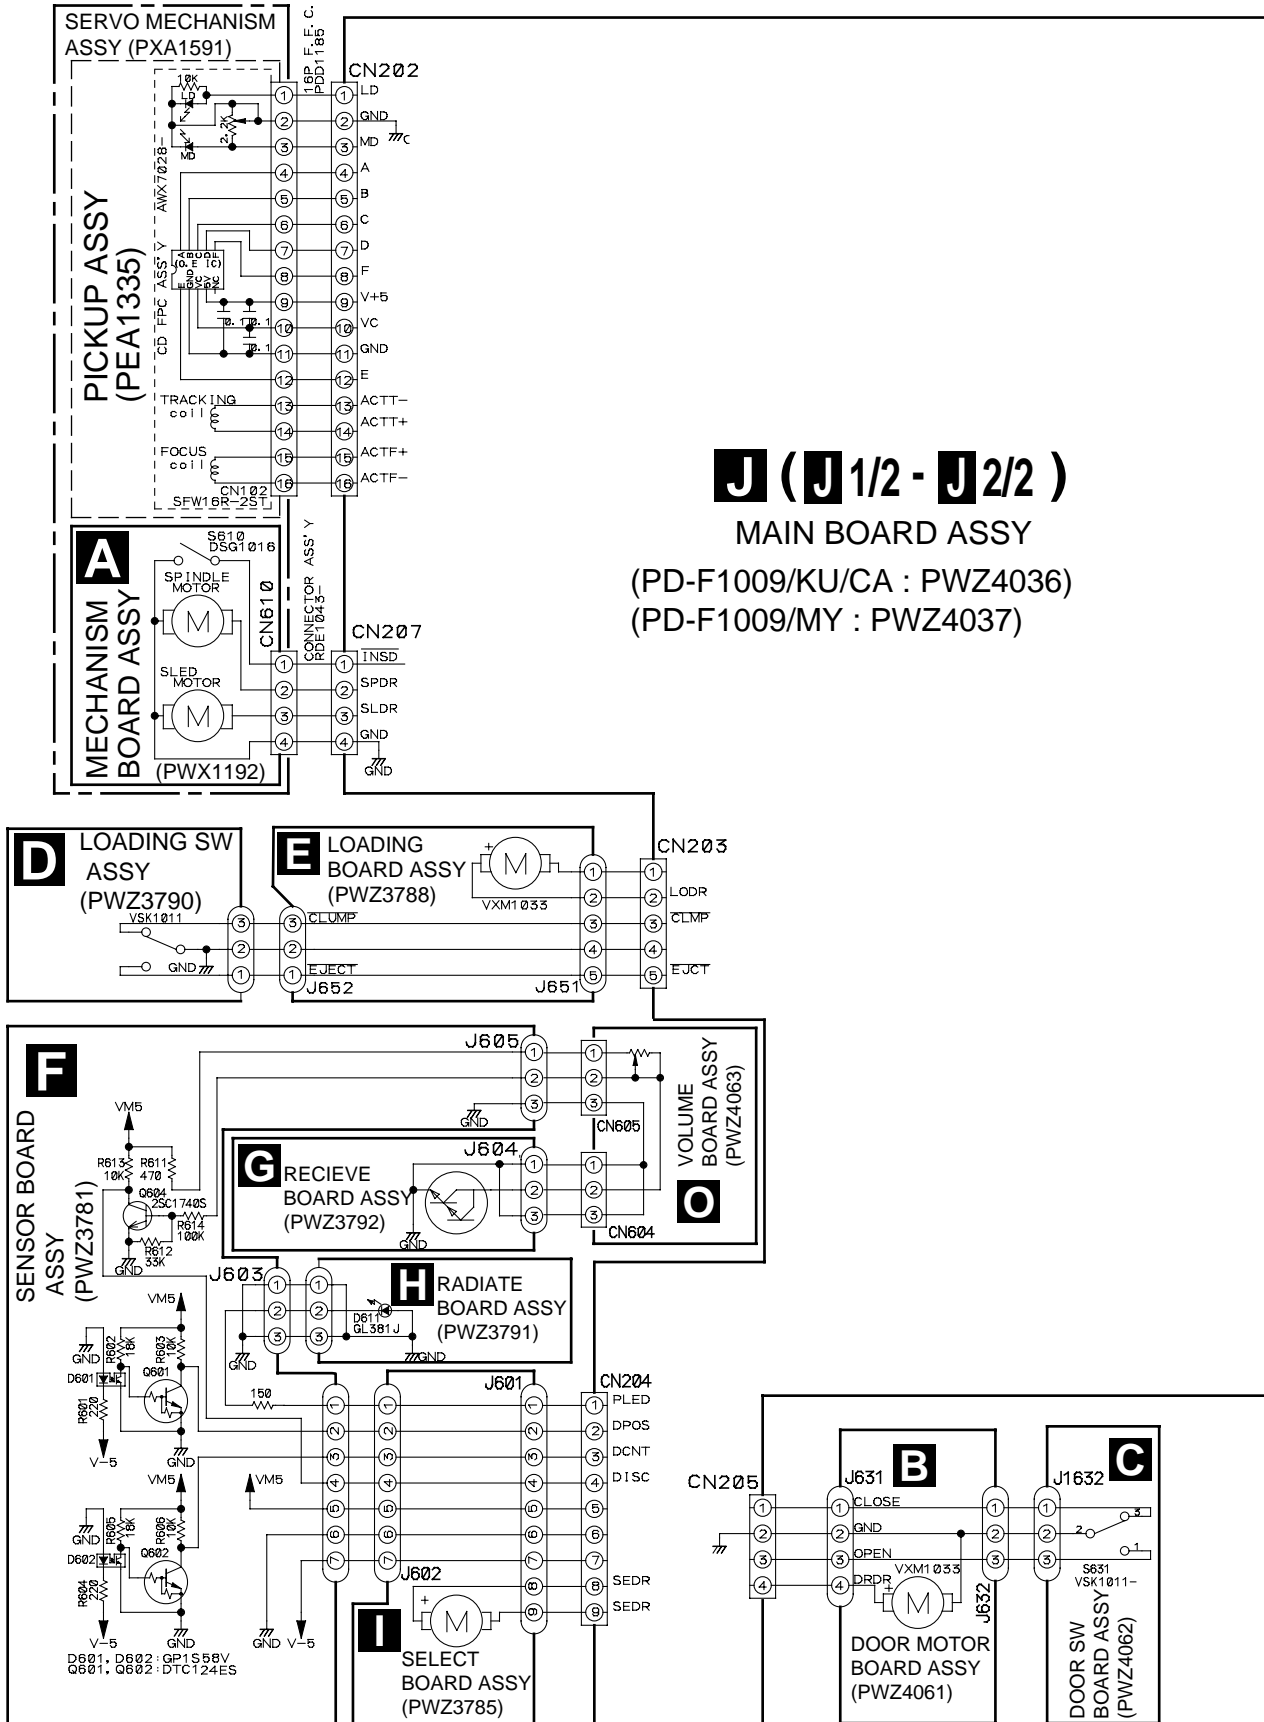

J (J 1/2 - J 2/2)

MAIN BOARD ASSY








(PD-F1009/KU/CA : PWZ4036)

(PD-F1009/MY : PWZ4037)

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".


J (J 1/2 - J 2/2) MAIN BOARD ASSY

(PD-F1009/MY : Only)

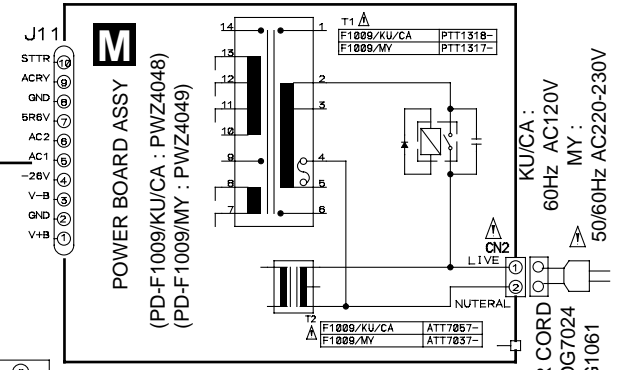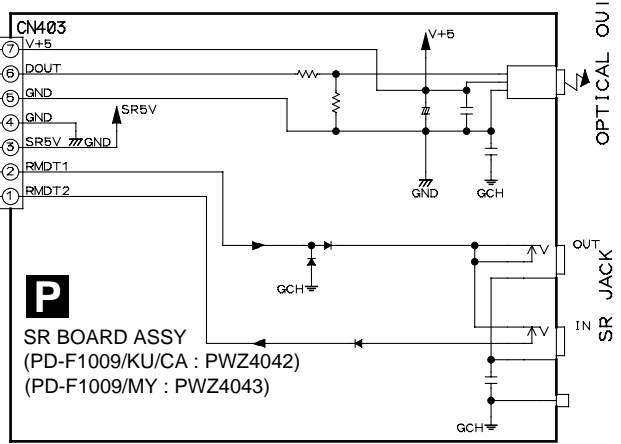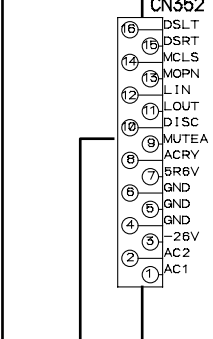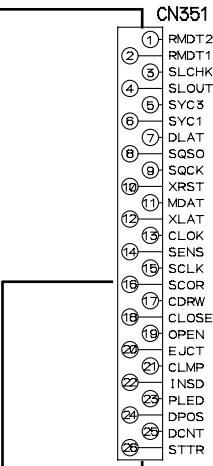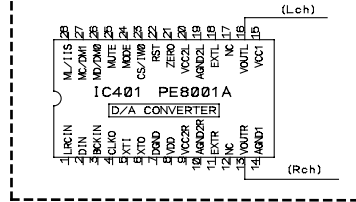


16P F.F.C
PDD1203

26P F.F.C
ADD7118



K DISPLAY BOARD ASSY (PD-F1009/KU/CA : PWZ4053) (PD-F1039/MY : PWZ4054)


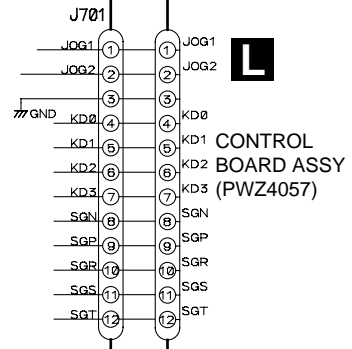


AC POWER CORD
KU/CA : ADG7024
MY : VDG1061
60Hz AC120V
50/60Hz AC220-230V



3.3 MECHANISM BOARD, DOOR MOTOR BOARD, DOOR SW BOARD and PICKUP ASSYS

SERVO MECHANISM ASSY (PXA1591)


SIGNAL ROUTE
 (F) : FOCUS SERVO LOOP
 (T) : TRACKING SERVO LOOP
 (S) : SLED SERVO LOOP
 (D) : SPINDLE DRIVE

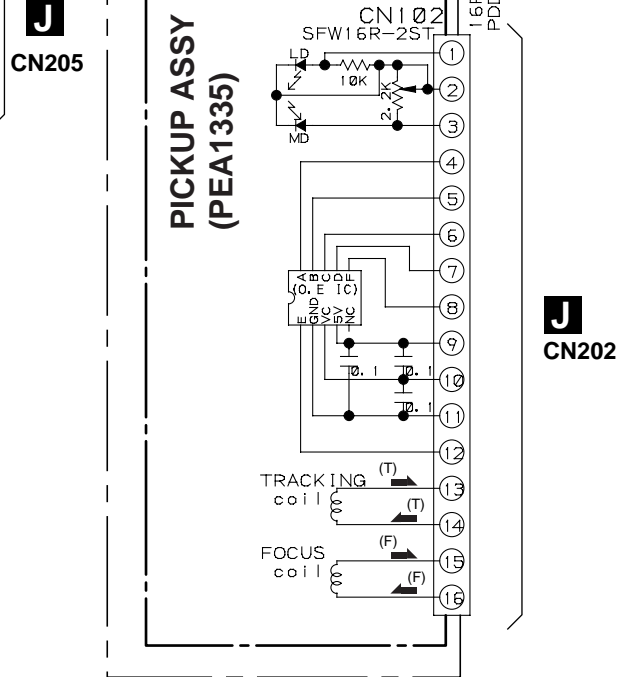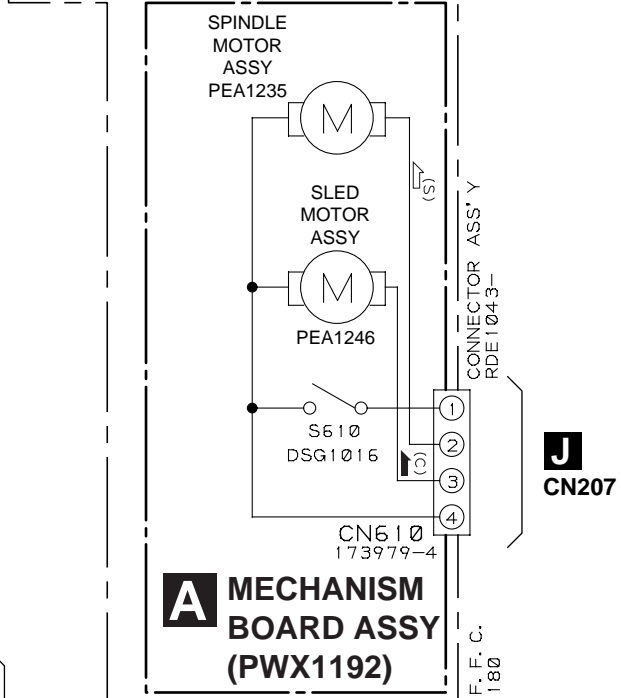

A MECHANISM BOARD ASSY (PWX1192)

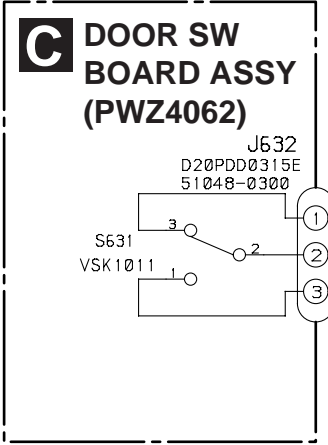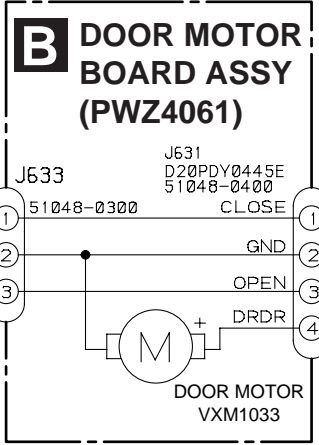

3.4 LOADING SW, LOADING BOARD, SENSOR BOARD, RECIEVE BOARD, RADIATE BOARD and SELECT BOARD ASSYS

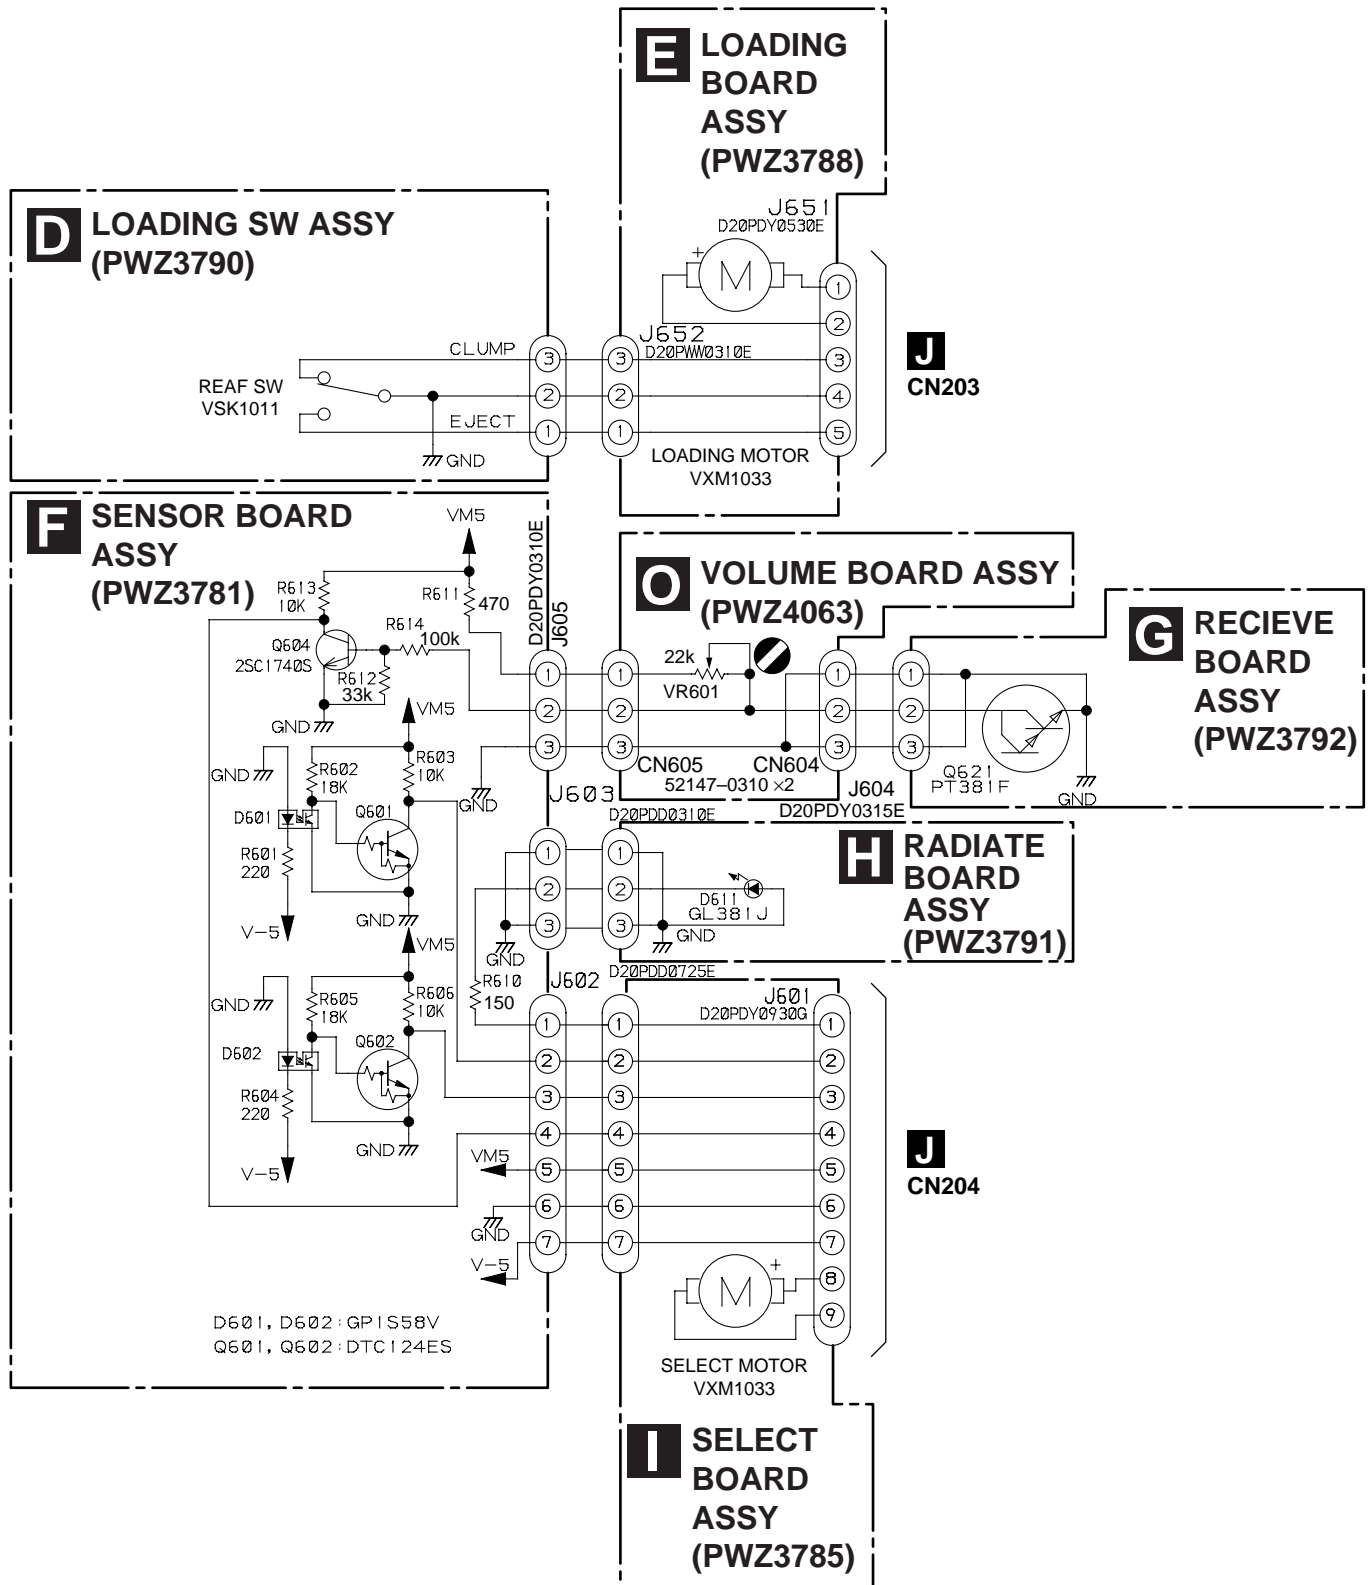


3.5 MAIN BOARD ASSY

A

B

C

D

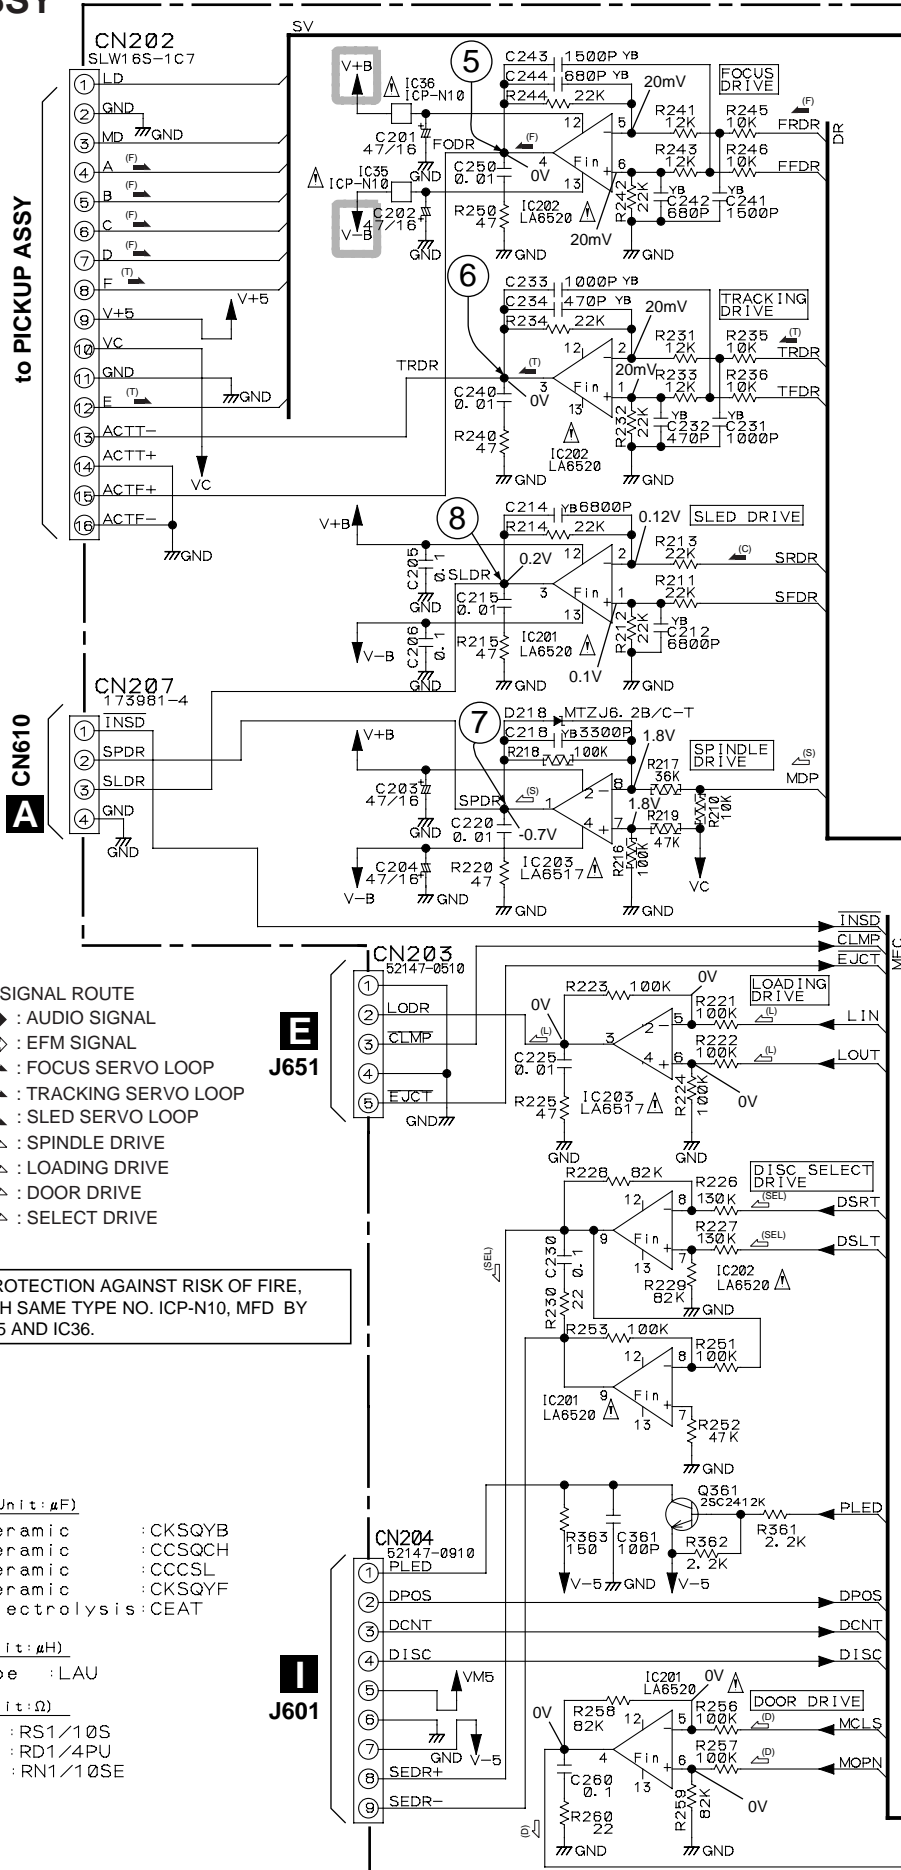

- SIGNAL ROUTE**
- ➔ : AUDIO SIGNAL
 - ↔ : EFM SIGNAL
 - ⌞ : FOCUS SERVO LOOP
 - ⌞ : TRACKING SERVO LOOP
 - ⌞ : SLED SERVO LOOP
 - ⌞ : SPINDLE DRIVE
 - ⌞ : LOADING DRIVE
 - ⌞ : DOOR DRIVE
 - ⌞ : SELECT DRIVE


CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE NO. ICP-N10, MFD BY ROHM CO., FOR IC35 AND IC36.

Notes


- Capacitors (Unit:μF)**
- | | | |
|----------|--------------|---------|
| YB | Ceramic | :CKSQYB |
| CH | Ceramic | :CCSQCH |
| SL | Ceramic | :CCCSL |
| Unmarked | Ceramic | :CKSQYF |
| Unmarked | Electrolysis | :CEAT |
- Inductors (Unit:μH)**
- Axital Type :LAU
- Resistors (Unit:Ω)**
- | | |
|----------|-----------|
| Unmarked | :RS1/10S |
| # | :RD1/4PU |
| ⌞ | :RN1/10SE |

J 1/2 MAIN BOARD ASSY
(KU/CA : PWZ4036)
(MY : PWZ4037)

: The power supply is shown with the marked box.

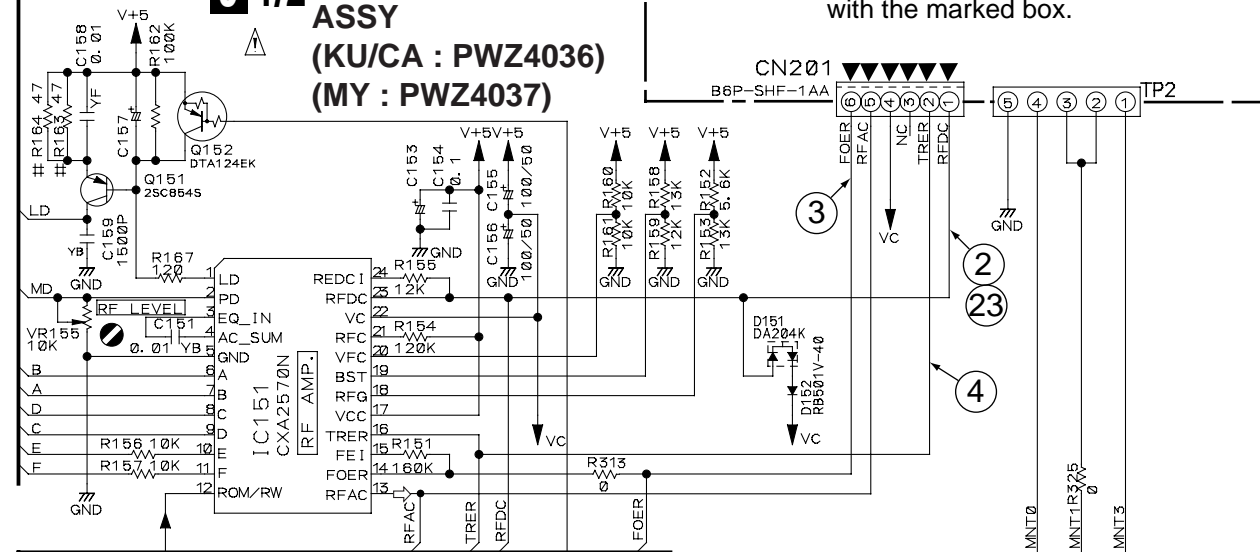


| DEC | /KU/CA | /MY |
|------|--------|------------------|
| C153 | 100/50 | 220/25 (PCH1128) |
| C155 | 100/50 | 100/50 (PCH1128) |
| C156 | 100/50 | 100/50 (PCH1128) |
| C157 | 100/10 | 100/50 (PCH1128) |
| C304 | 100/50 | 100/50 (PCH1128) |
| C315 | 100/50 | 220/25 (PCH1128) |
| C319 | 100/10 | 220/25 (PCH1128) |

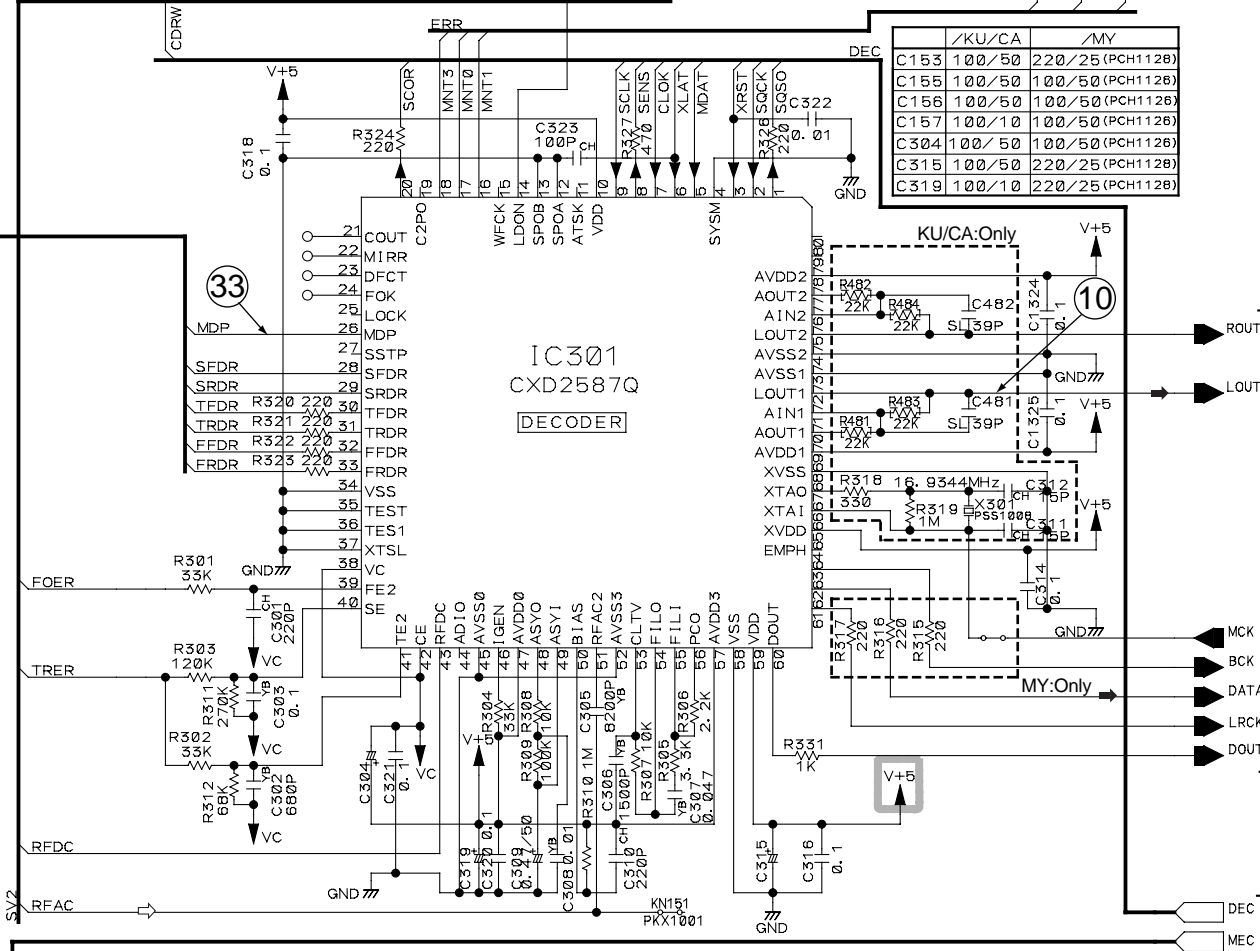

IC301(CXD2587Q) :PLAY MODE

| | | | | | | | | | | | | | | | | | |
|------------|---------|-----|------|-------|-----------|-----|-----|---------|-------|----------|-------|-----------|-----------|-----------|-----------|-------|-------|
| PIN No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16-17 | |
| Voltage(V) | 1.1-2.0 | 4.8 | 4.8 | 0 | 0.38-0.56 | 4.8 | 4.5 | 1.2-1.6 | 4.8 | 5.0 | — | 0 | 0 | 5 | — | 0 | |
| PIN No. | 18 | 19 | 20 | 21-22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34-37 | 38-42 |
| Voltage(V) | 4.5 | — | 0.03 | — | 0 | 5.0 | — | 2.5 | — | 0.02-0.2 | 0 | 0.03-0.09 | 0.02-0.04 | 0.05-0.08 | 0.06-0.08 | 0 | 2.5 |
| PIN No. | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53-55 | 56 | 57 | 58 | 59 | 60-63 | |
| Voltage(V) | 3.4 | — | 0 | 1.4 | 5 | 2.6 | 2.5 | 0.84 | 2.5 | 0 | 3.2 | 2.6 | 5.0 | 0 | 5.0 | 2.5 | |
| PIN No. | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71-72 | 73-74 | 75-76 | 77 | 78 | 79 | 80 | | | |
| Voltage(V) | — | 5.0 | 2.5 | 2.6 | 0 | 5.0 | 2.1 | 2.2 | 0 | 2.1 | 2.2 | 5.0 | — | — | | | |

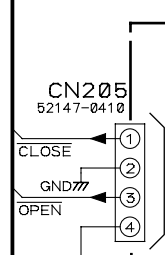


B J631

J2/2



J2/2

3.6 MAIN BOARD AND SR BOARD ASSYS

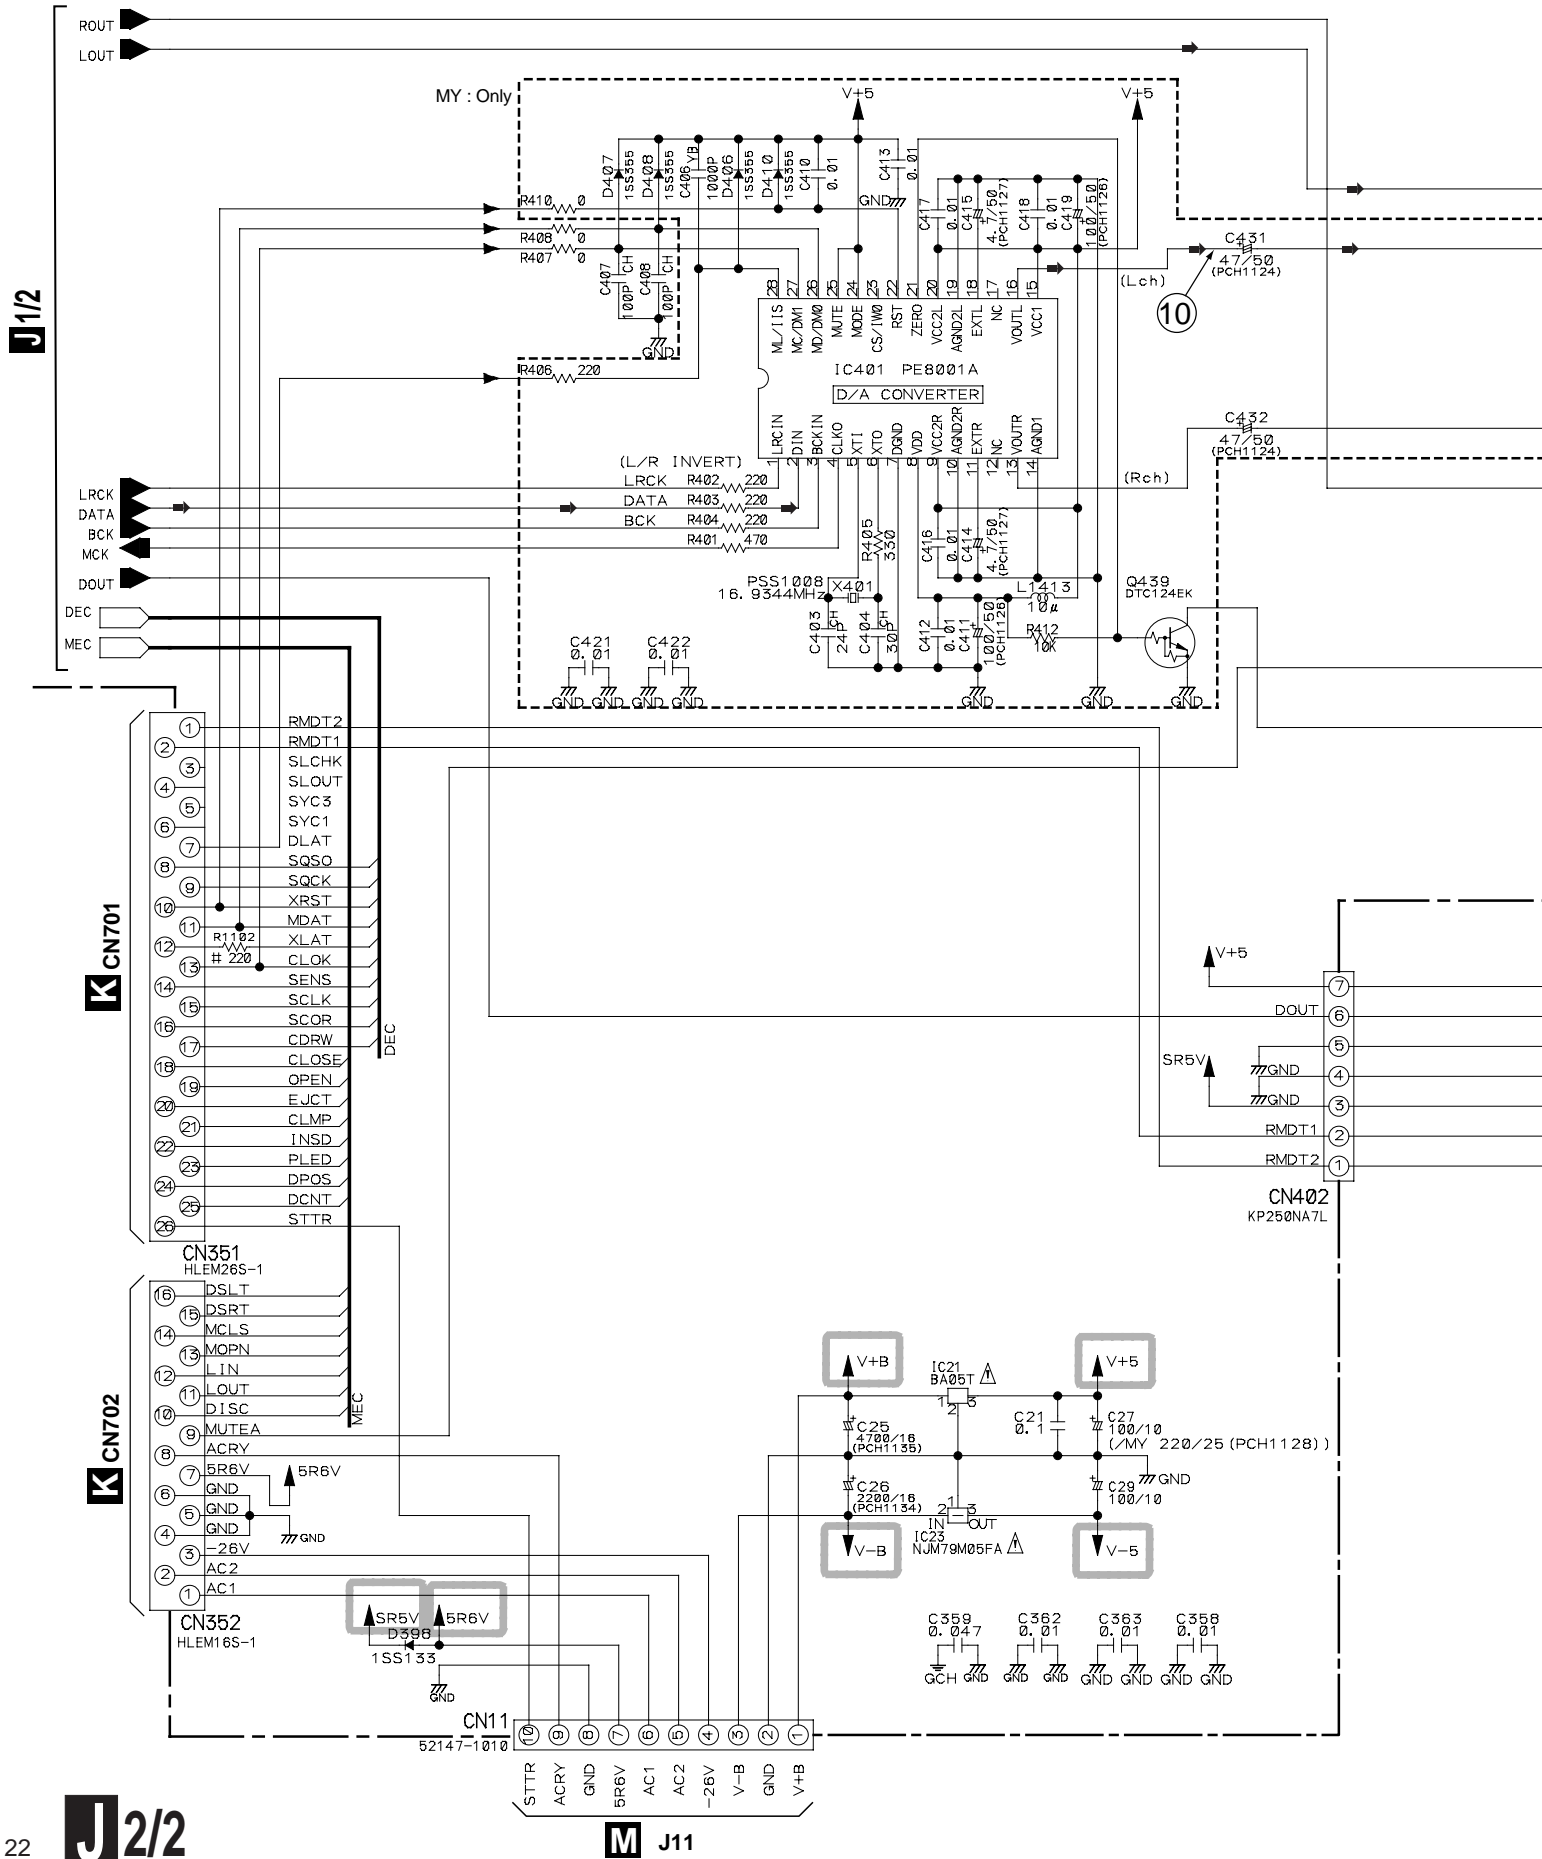

| | /KU/CA | /MY | /KU/CA | /MY |
|-----------|--------|------|-----------|-----------------------|
| R437, 438 | 5.6K | 1.8K | C435, 436 | NONE 1500P |
| R439, 440 | 10K | NONE | C437, 438 | 120P NONE |
| R441, 442 | 10K | 10K | C439, 440 | NONE 1500P |
| R443, 444 | 10K | NONE | C441, 442 | 22/25 47/50 (PCH1124) |
| R445, 446 | 10K | 10K | | |

J2/2 MAIN BOARD ASSY
(KU/CA : PWZ4036)
(MY : PWZ4037)

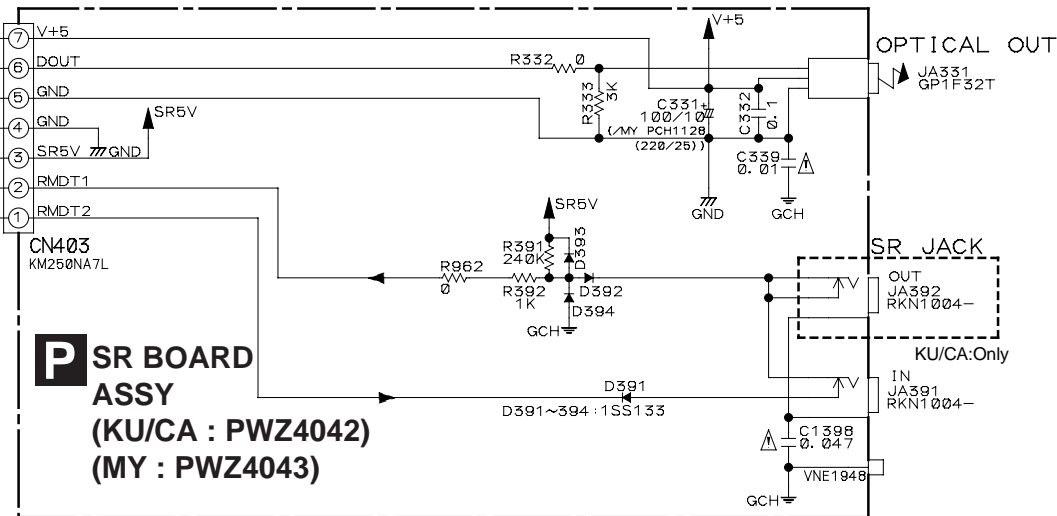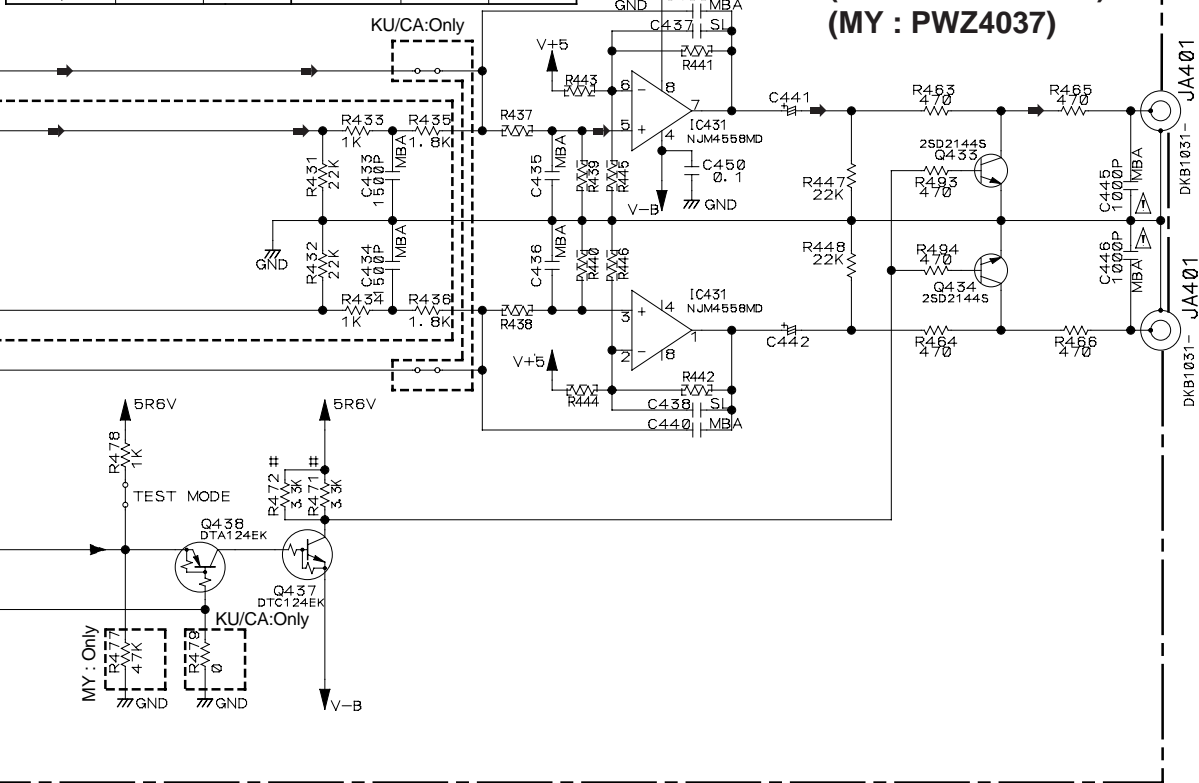

: The power supply is shown with the marked box.

SIGNAL ROUTE
➔ : AUDIO SIGNAL

Notes

- | | | | |
|-----------------------------|--------------|----------------------------|-------------------|
| <u>Capacitors (Unit:μF)</u> | | <u>Inductors (Unit:μH)</u> | |
| YB | Ceramic | :CKSQYB | Axital Type :LAU |
| CH | Ceramic | :CCSQCH | |
| SL | Ceramic | :CCCSL | |
| Unmarked | Ceramic | :CKSQYF | Unmarked :RS1/10S |
| MBA | Film | :CQ MBA | # :RD1/4PU |
| Unmarked | Electrolysis | :CEAT | ⊘ :RN1/10SE |


Waveforms

J Main Board Assy


Note: The encircled numbers denote measuring point in the schematic diagram.

*1 50T-JUMP: After switching to the pause mode, press the manual search key.


*2 FOCUS-IN: Press the play key without loading a disc.

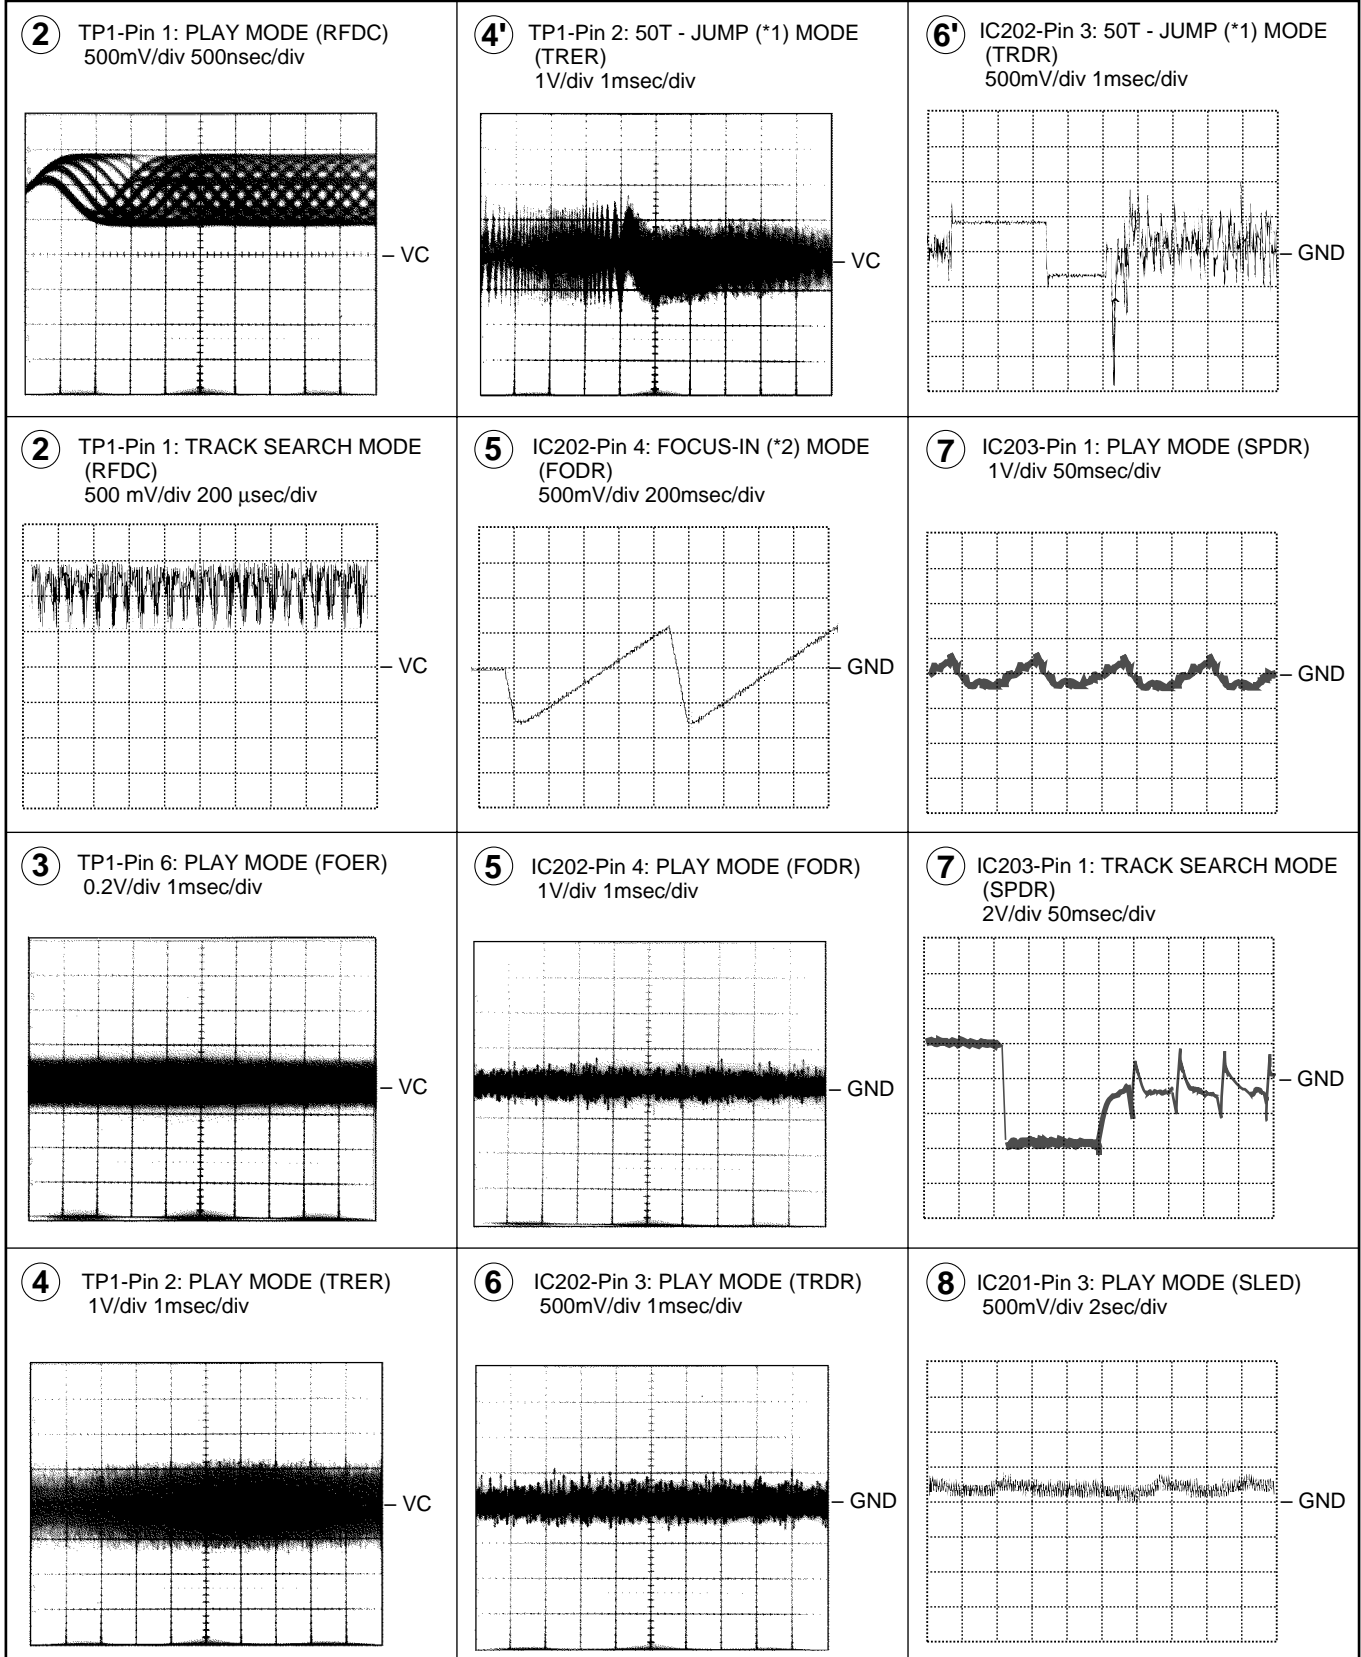


8 IC201-Pin 3: TRACK SEARCH MODE (SLED)
2V/div 200msec/div

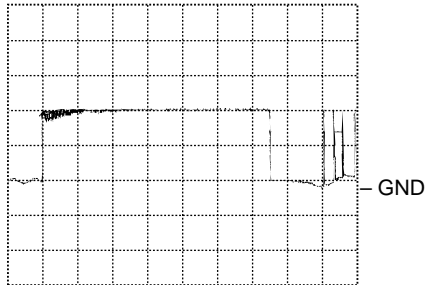


33 IC301-Pin 26 : PLAY MODE (MDP)
2V/div 2 μsec/div

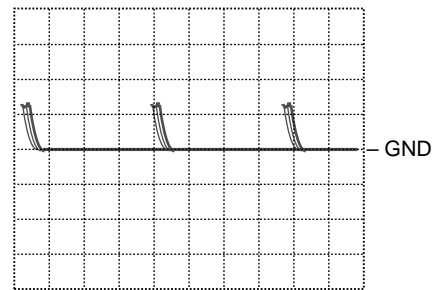

10 IC301-Pin 72 : PLAY MODE (1kHz)
(LOUT 1: KU/CA)
IC401-Pin 16 : (/MY Only)
1V/div 200μsec/div

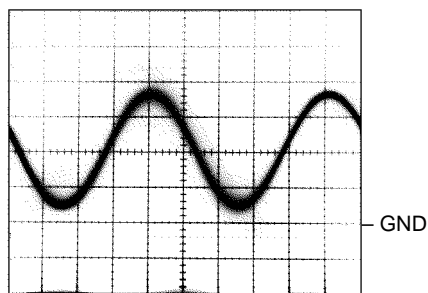

23 TRACK SEARCH MODE
Upper : TP1-Pin 1 (RFDC) 0.5V/div
Lower : IC301-Pin 21 (C.OUT)
2V/div 50 μsec/div

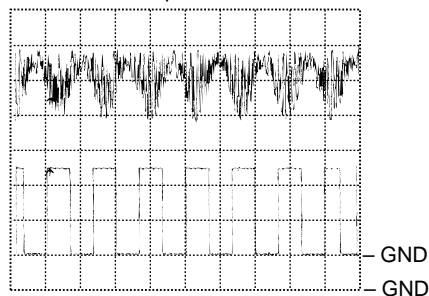


3.7 DISPLAY BOARD, CONTROL BOARD and POWER BOARD ASSYS



A

B

C

D

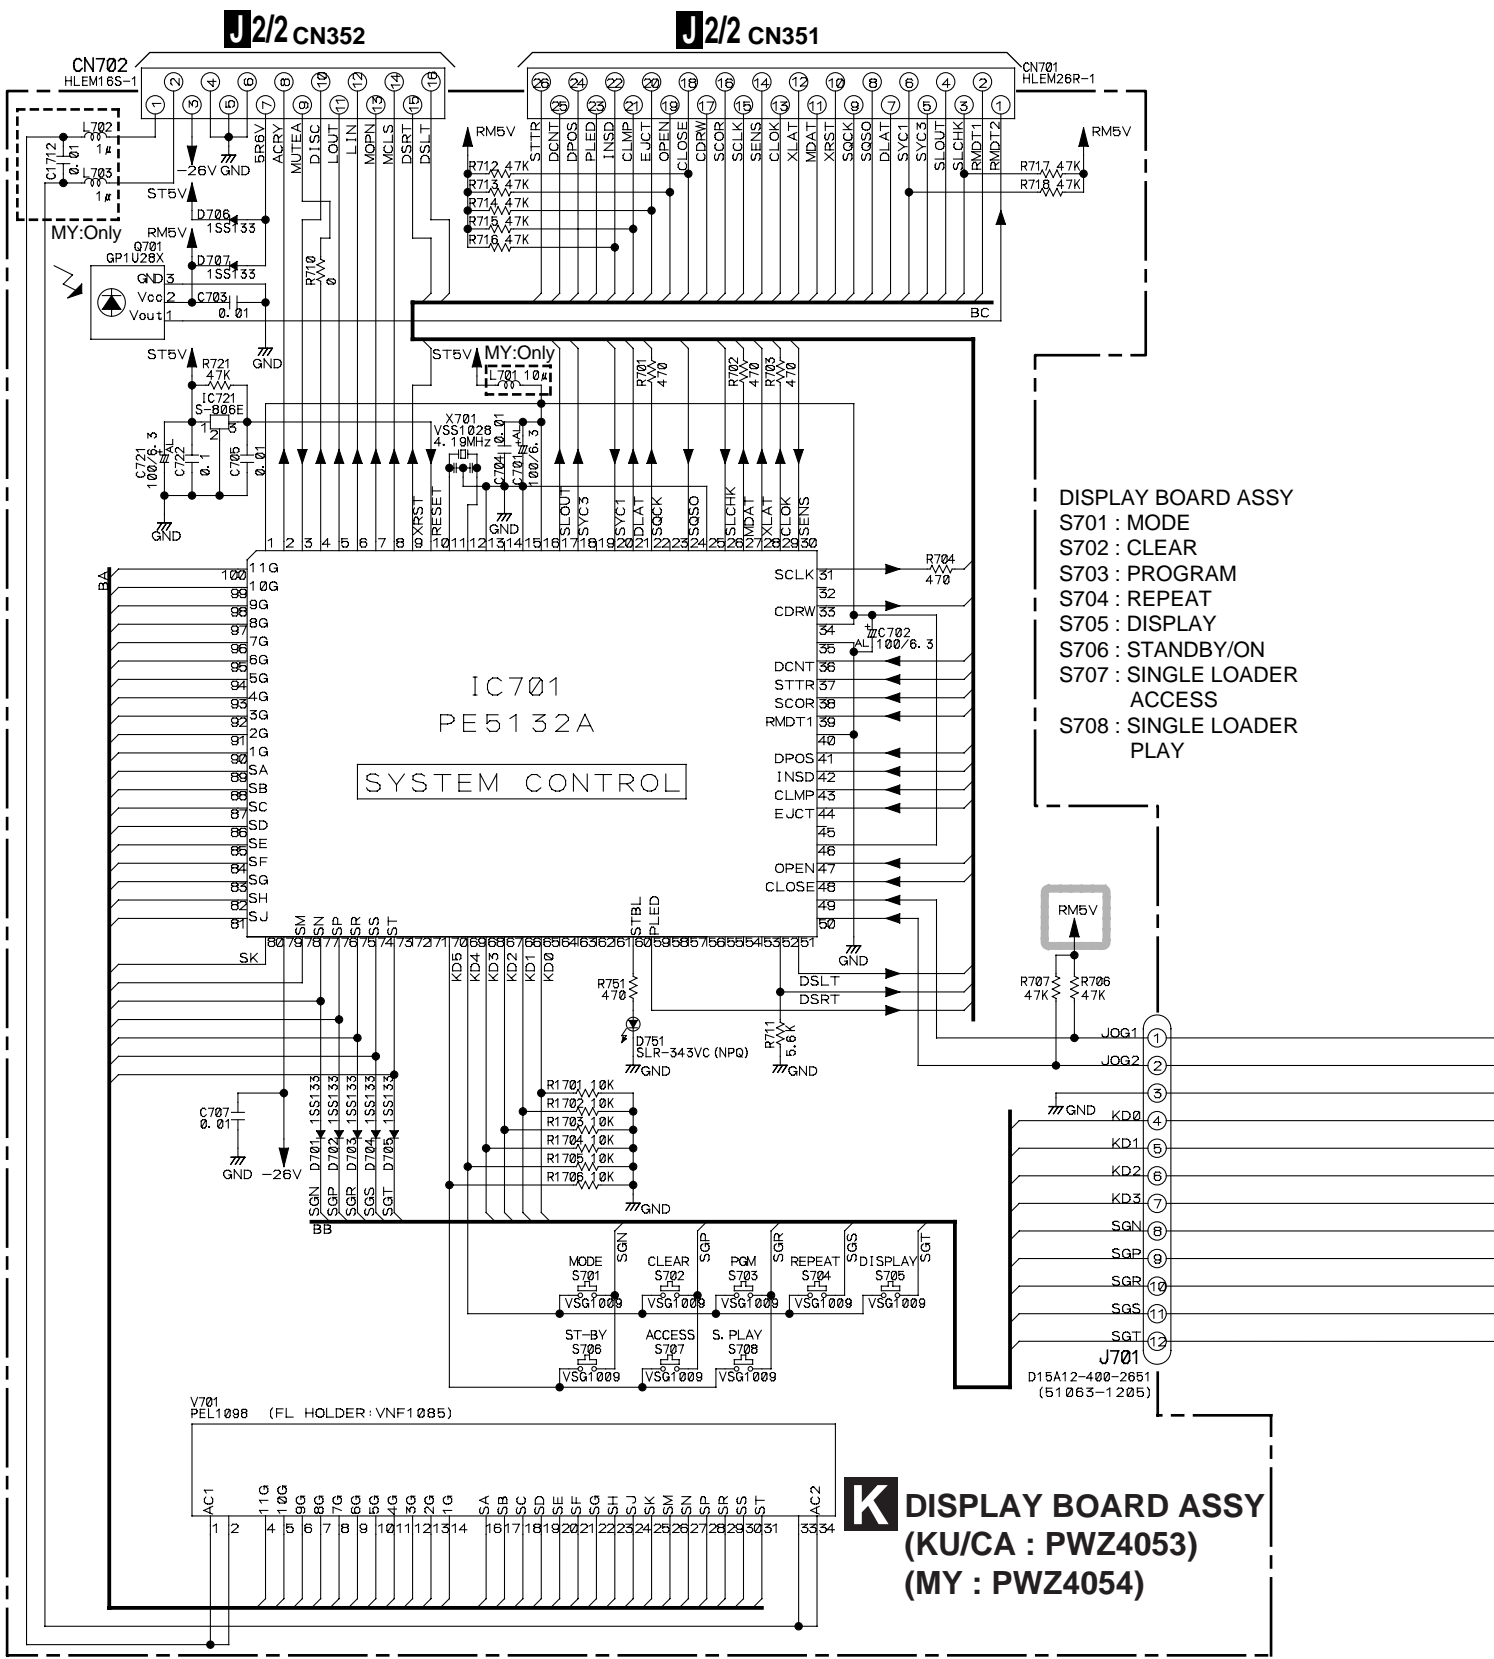

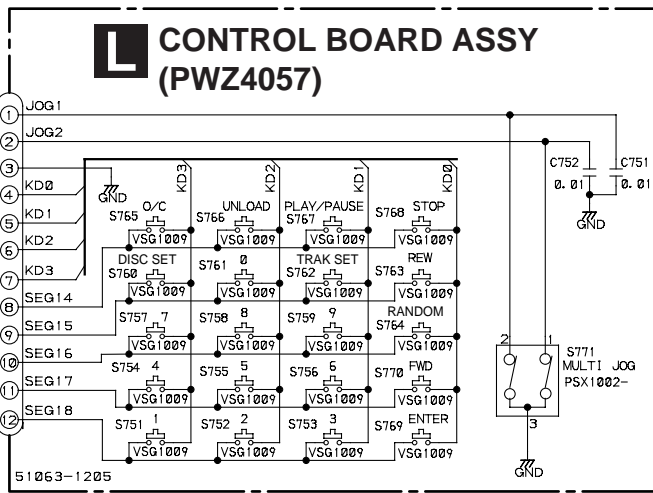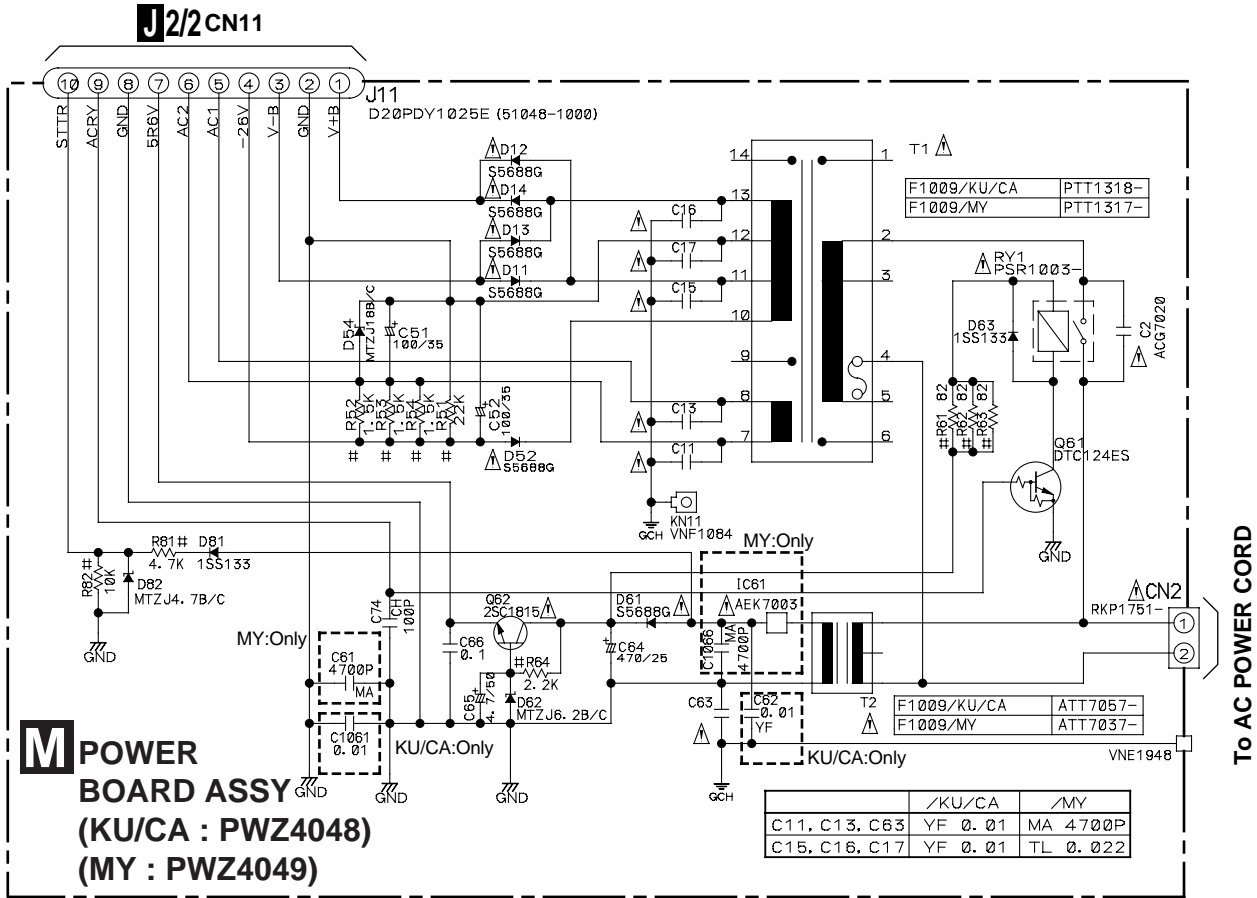

- CONTROL BOARD ASSY**
 S751-S759, S761 : 10 KEY (0-9)
 S760 : DISC SET
 S762 : TRACK SET
 S763 : Track/Manual search (revers direction)
 S764 : RANDOM
 S765 : OPEN/CLOSE
 S766 : UNLOAD
 S767 : Play/Pause
 S768 : Stop
 S769 : ENTER
 S770 : Track/Manual search (forward direction)
 S771 : Jog dial

Notes

- Capacitors (Unit:μF)**
- | | | |
|----------|--------------|---------|
| YB | Ceramic | :CKSQYB |
| CH | Ceramic | :CCSQCH |
| SL | Ceramic | :CCCSL |
| YF | Ceramic | :CKCYF |
| Unmarked | Ceramic | :CKSQYF |
| MA | Mylar | :CQMA |
| TL | Film | :CFTLA |
| AL | Electrolysis | :CEAL |
| Unmarked | Electrolysis | :CEAT |

- Inductors (Unit:μH)**
 Axial Type :LAU

- Resistors (Unit:Ω)**
- | | |
|----------|-----------|
| Unmarked | :RS1/10S |
| # | :RD1/4PU |
| RV | :RN1/10SE |

: The power supply is shown with the marked box.

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491.315 FOR IC61,MFD. BY LITTELFUSE INC.

4. PCB CONNECTION DIAGRAM

4.1 MECHANISM BOARD, DOOR MOTOR and DOOR SW BOARD ASSYS

SIDE A


NOTE FOR PCB DIAGRAMS:

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.


| Symbol in PCB Diagrams | Symbol in Schematic Diagrams | Part Name |
|------------------------|------------------------------|--------------------------|
| | | Transistor |
| | | Transistor with resistor |
| | | Field effect transistor |
| | | Resistor array |
| | | 3-terminal regulator |

3. The parts mounted on this PCB include all necessary parts for several destination.
 For further information for respective destinations, be sure to check with the schematic diagram.


4. Viewpoint of PCB diagrams

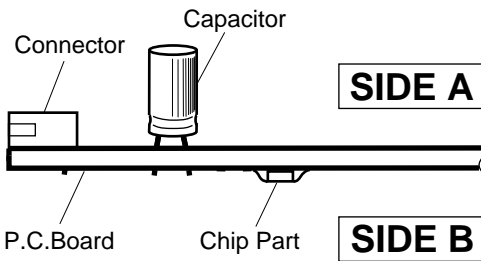


A MECHANISM BOARD ASSY

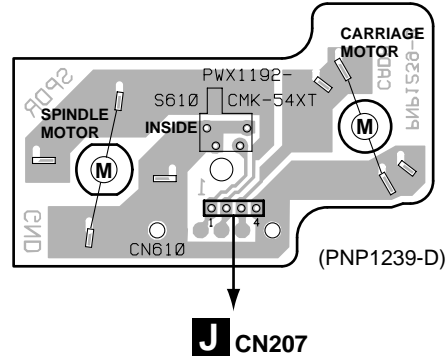

B DOOR MOTOR BOARD ASSY

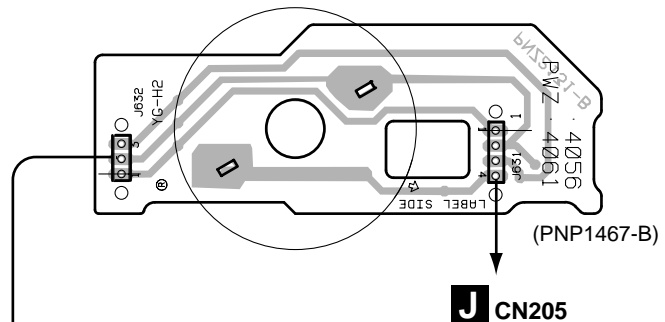


C DOOR SW BOARD ASSY

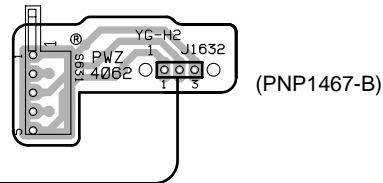


4.2 LOADING SW, LOADING BOARD, SENSOR BOARD, RECIEVE BOARD, RADIATE BOARD, SELECT BOARD and VOLUME BOARD ASSYS

E LOADING BOARD ASSY

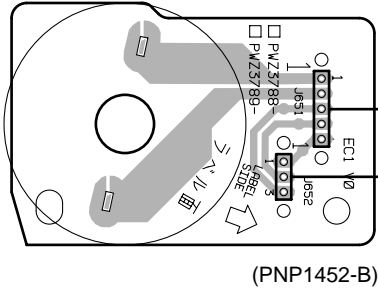


SIDE A


D LOADING SW ASSY

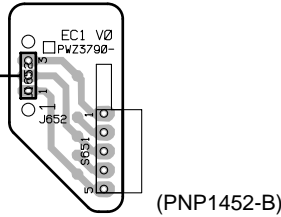


H RADIATE BOARD ASSY

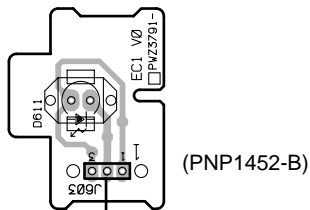


O VOLUME BOARD ASSY

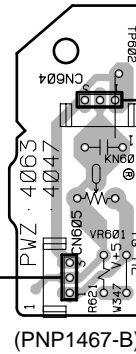


F SENSOR BOARD ASSY

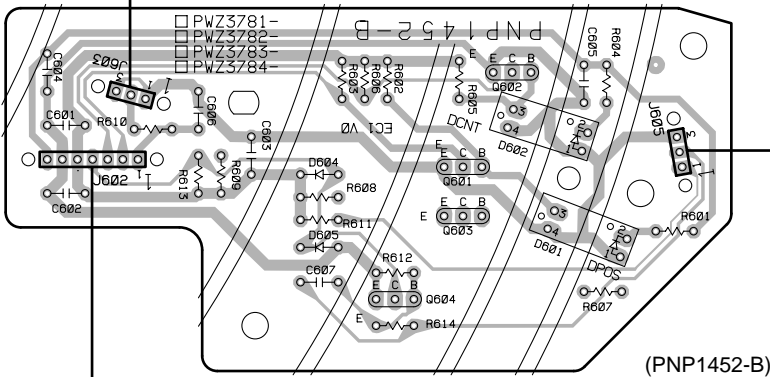

G RECIEVE BOARD ASSY

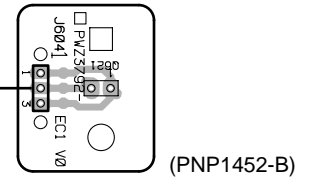


I SELECT BOARD ASSY

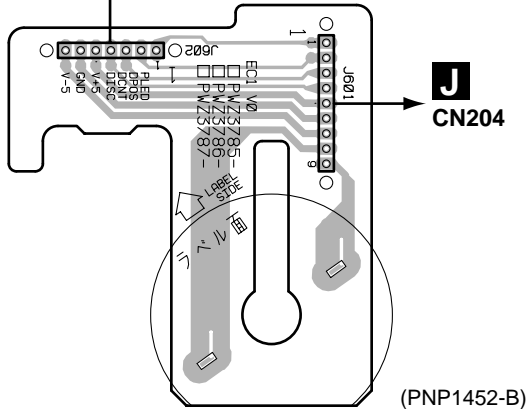

4.3 MAIN BOARD and SR BOARD ASSYS

J MAIN BOARD ASSY

SIDE A

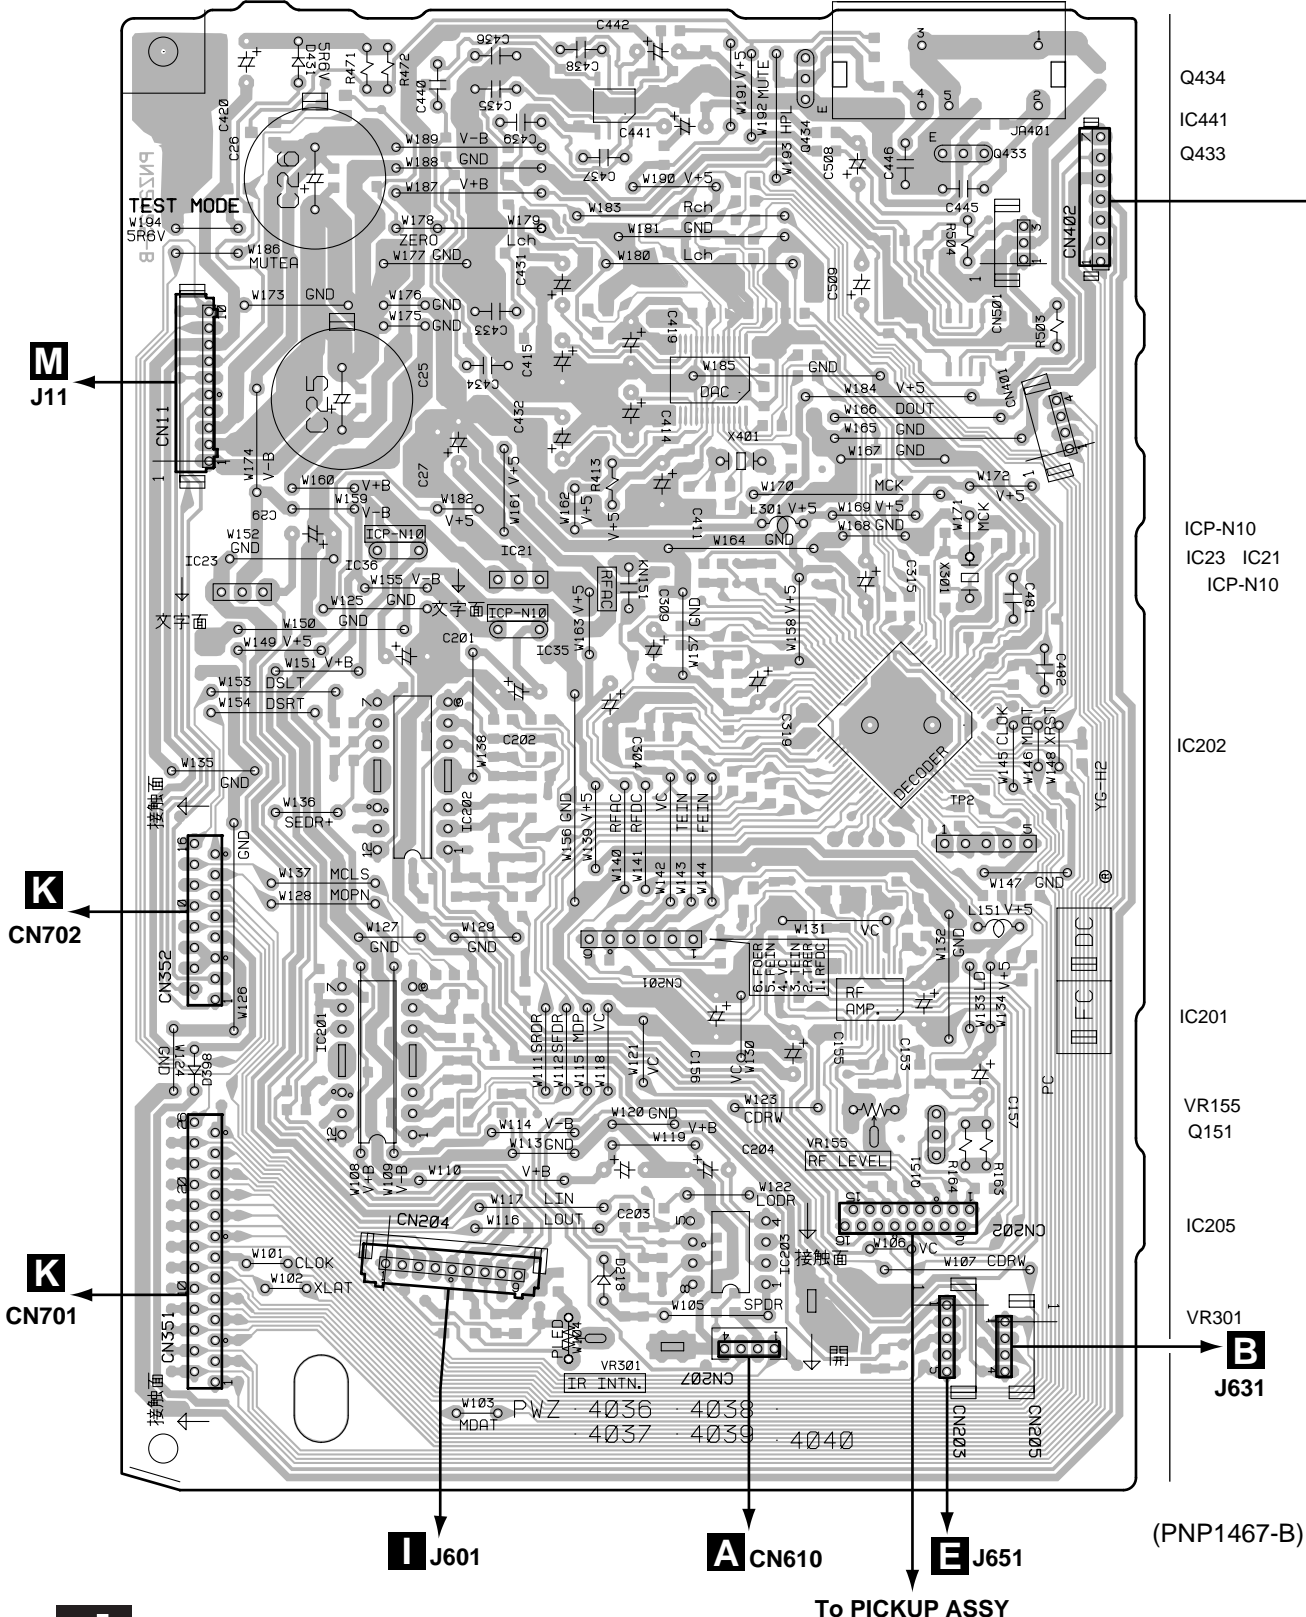

Q434
IC441
Q433

ICP-N10
IC23 IC21
ICP-N10

IC202

IC201

VR155
Q151

IC205

VR301


J631

(PNP1467-B)

To PICKUP ASSY

SIDE A


P SR BOARD ASSY

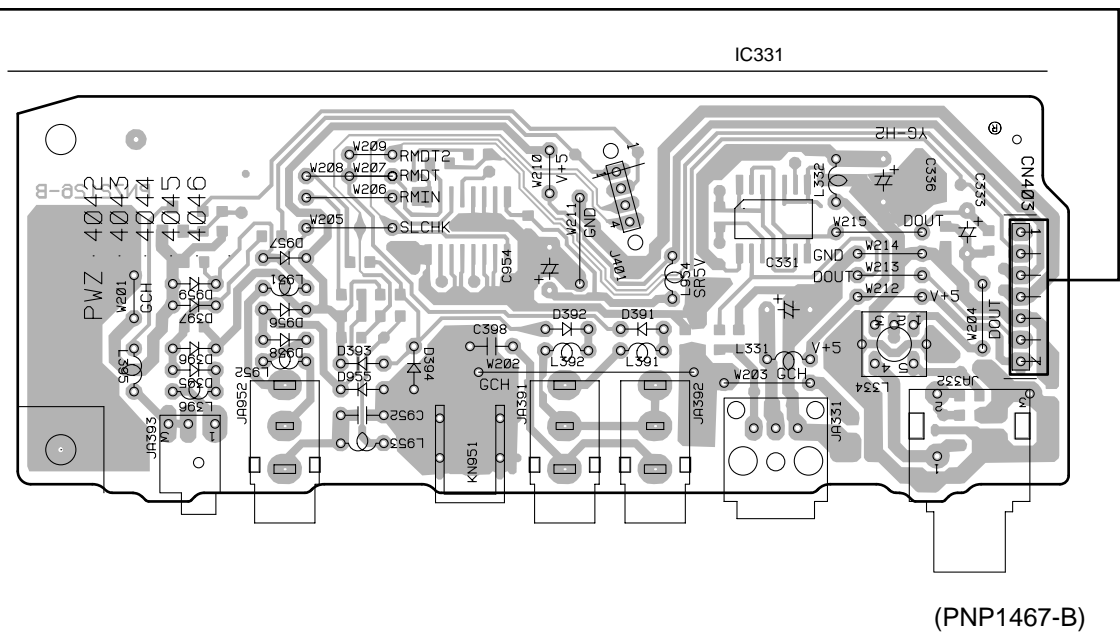

B)

J MAIN BOARD ASSY

SIDE B

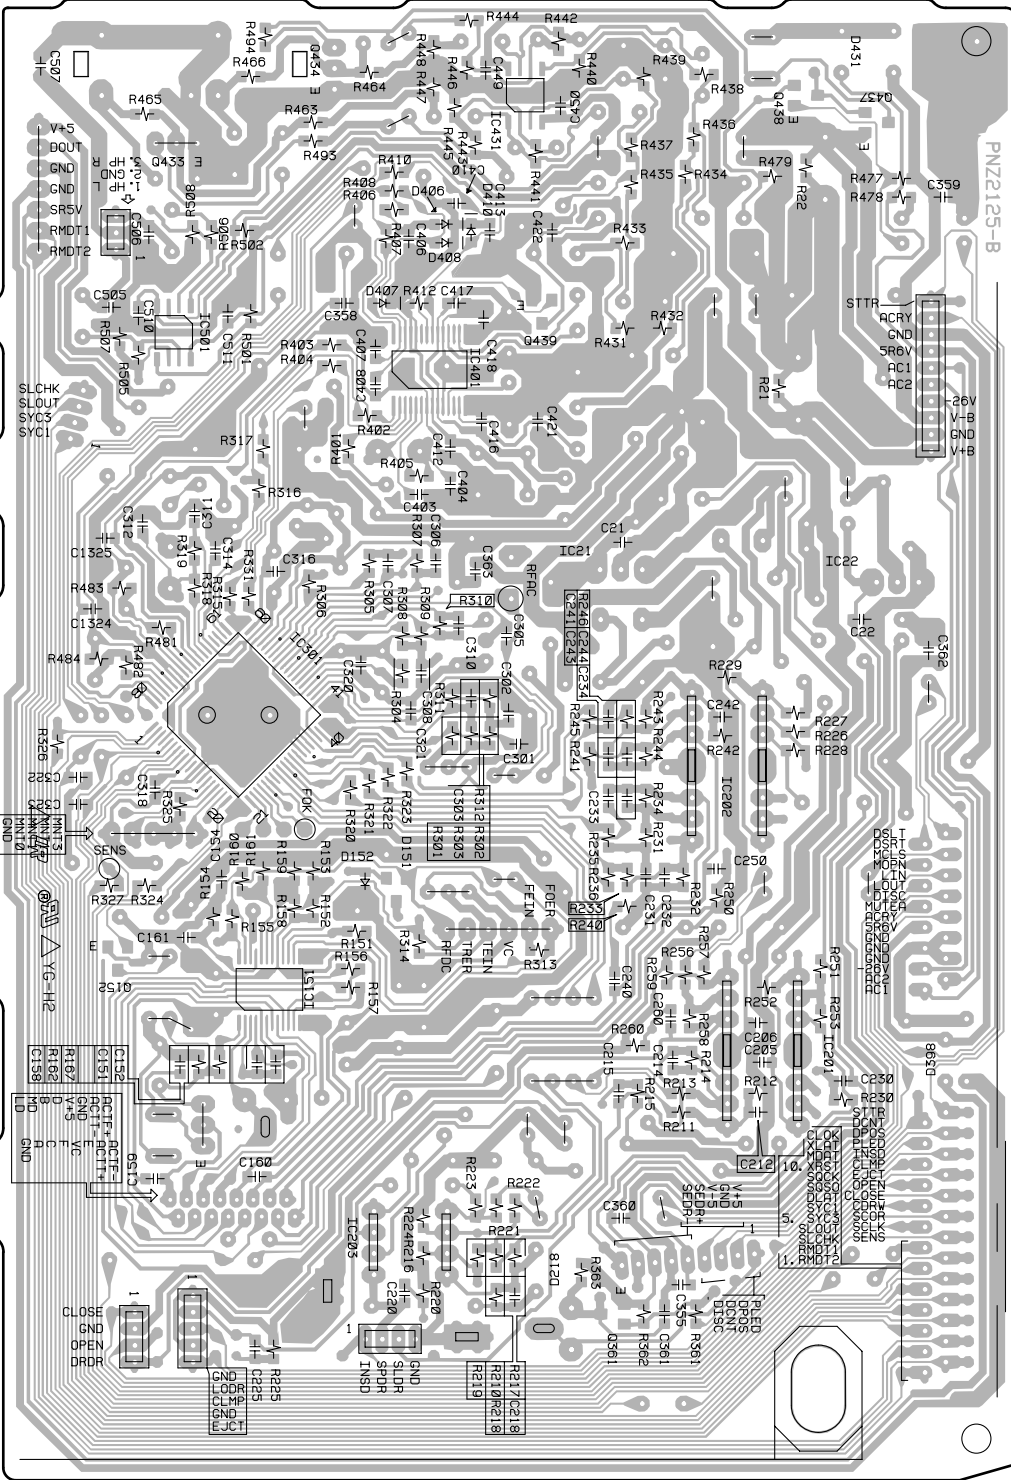


- Q434
- Q438 IC431
- Q437
- Q433
- Q439
- IC501
- IC401
- IC21
- IC22
- IC301
- IC202
- Q152
- IC151
- IC201
- Q159
- IC203
- Q381

(PNP1467-B)



SIDE B

P SR BOARD ASSY

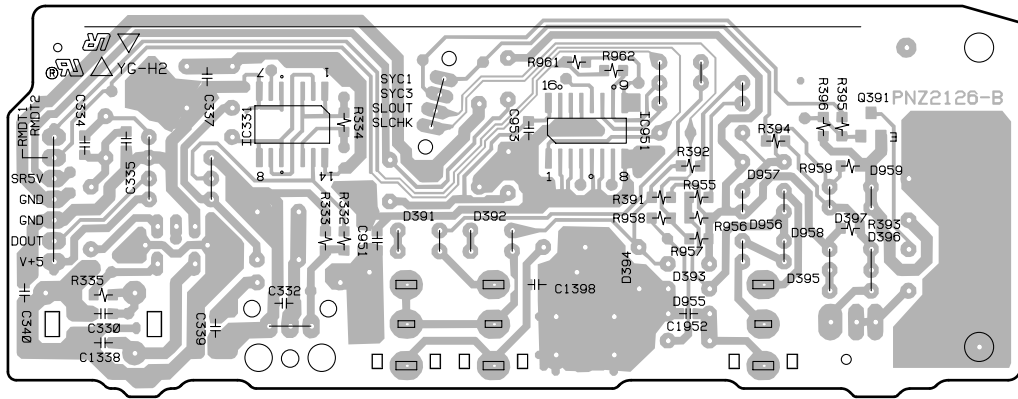


(PNP1467-B)

4.4 DISPLAY BOARD and CONTROL BOARD ASSYS


SIDE A

K DISPLAY BOARD ASSY

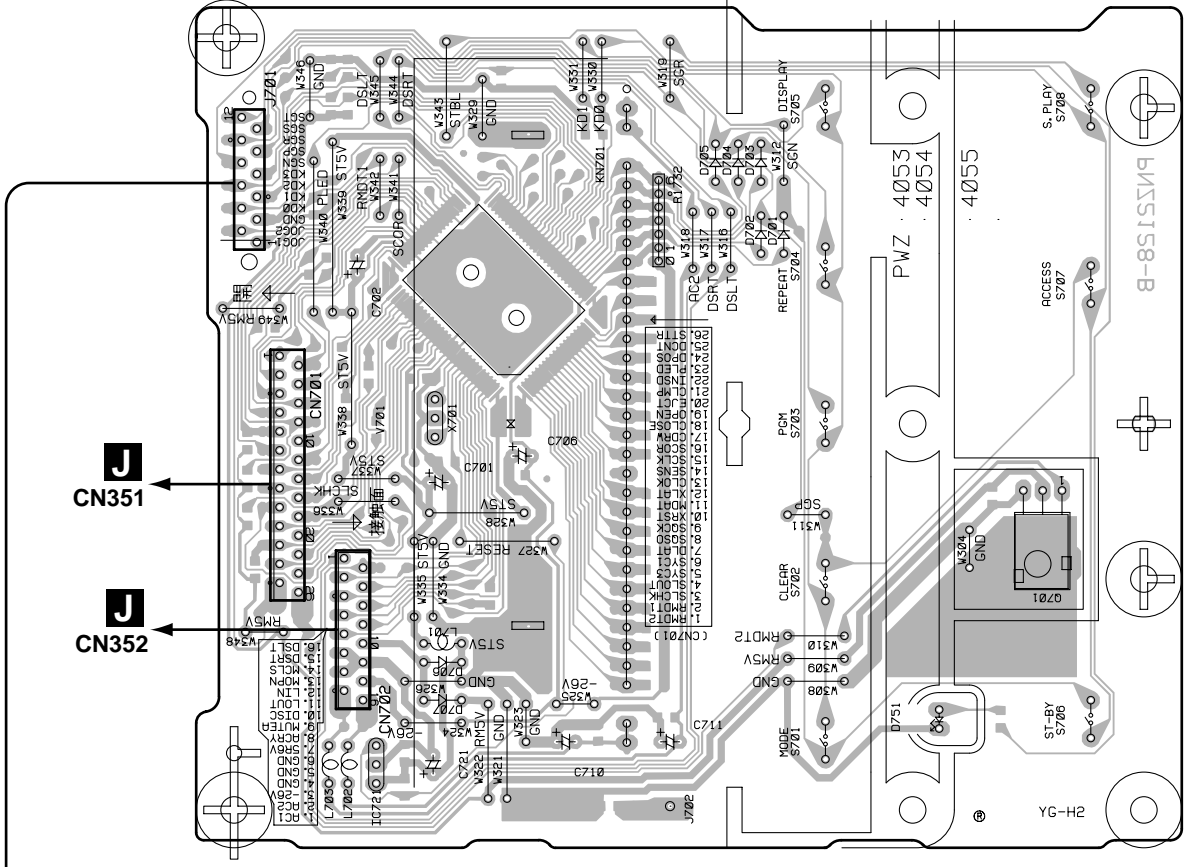

(PNP1467-B)

L CONTROL BOARD ASSY

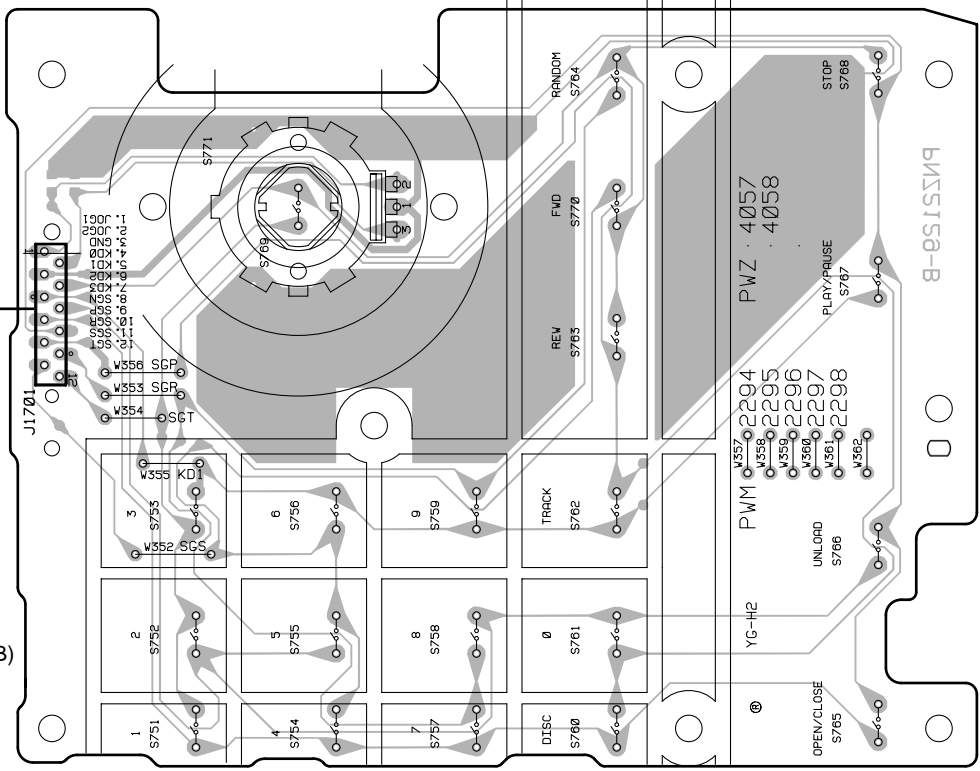

(PNP1467-B)

A



B

C

D




SIDE B

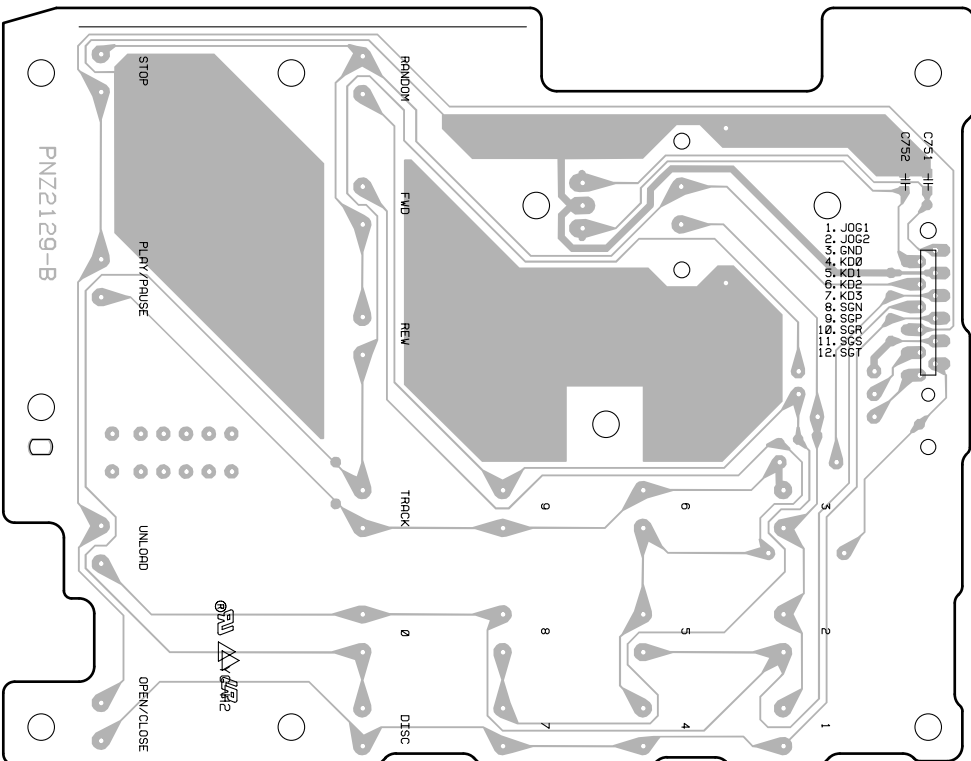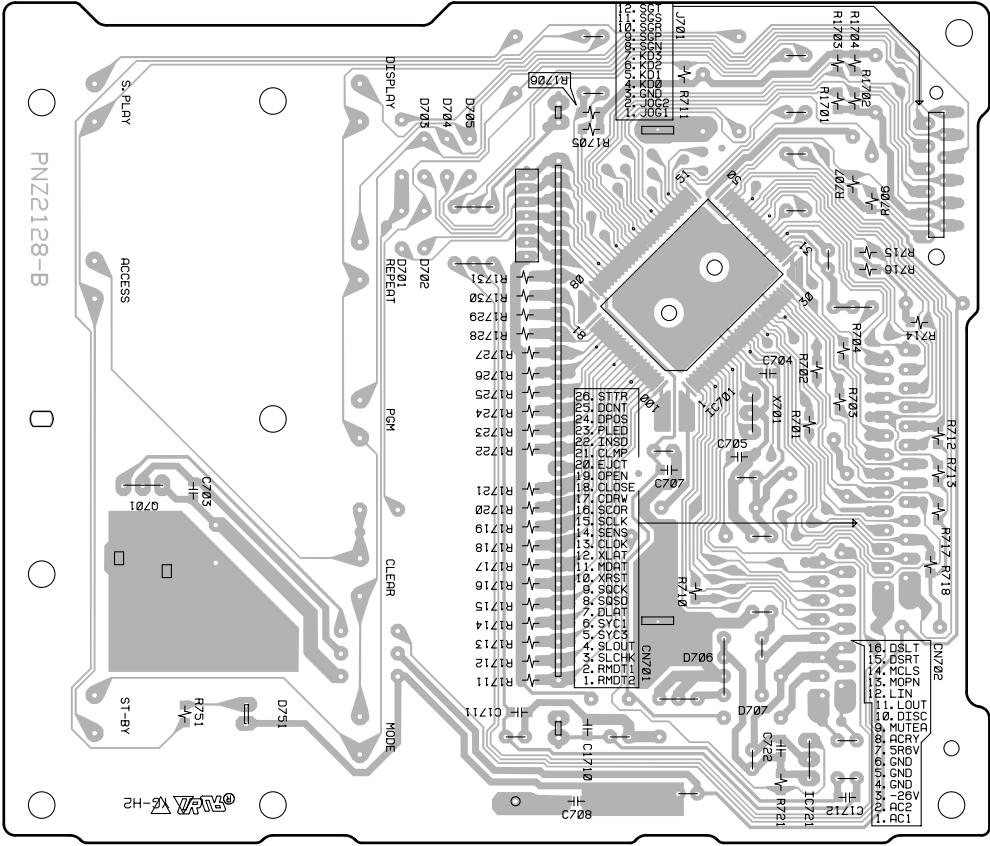

4.5 POWER BOARD ASSY


SIDE A

M POWER BOARD ASSY

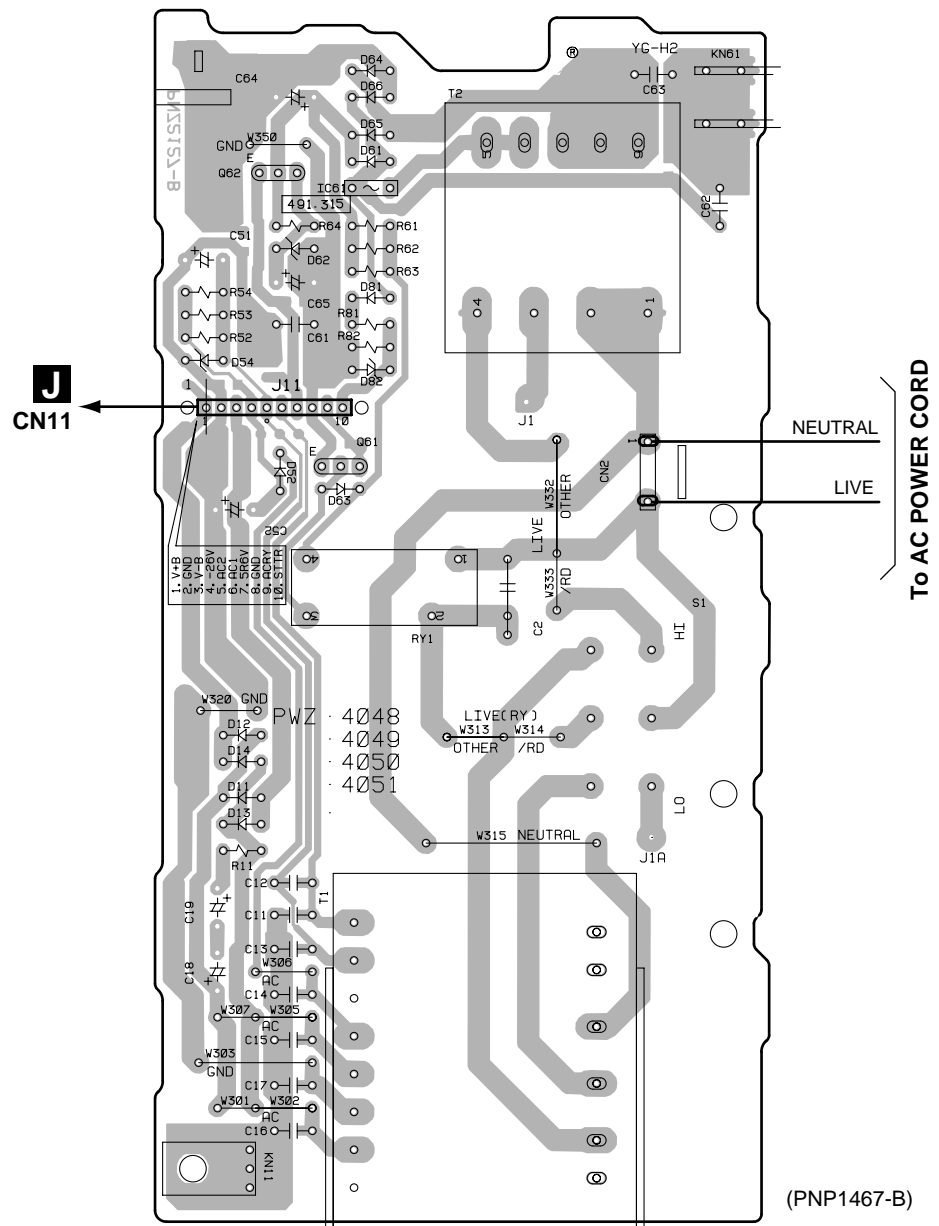

(PNP1467-B)

SIDE B

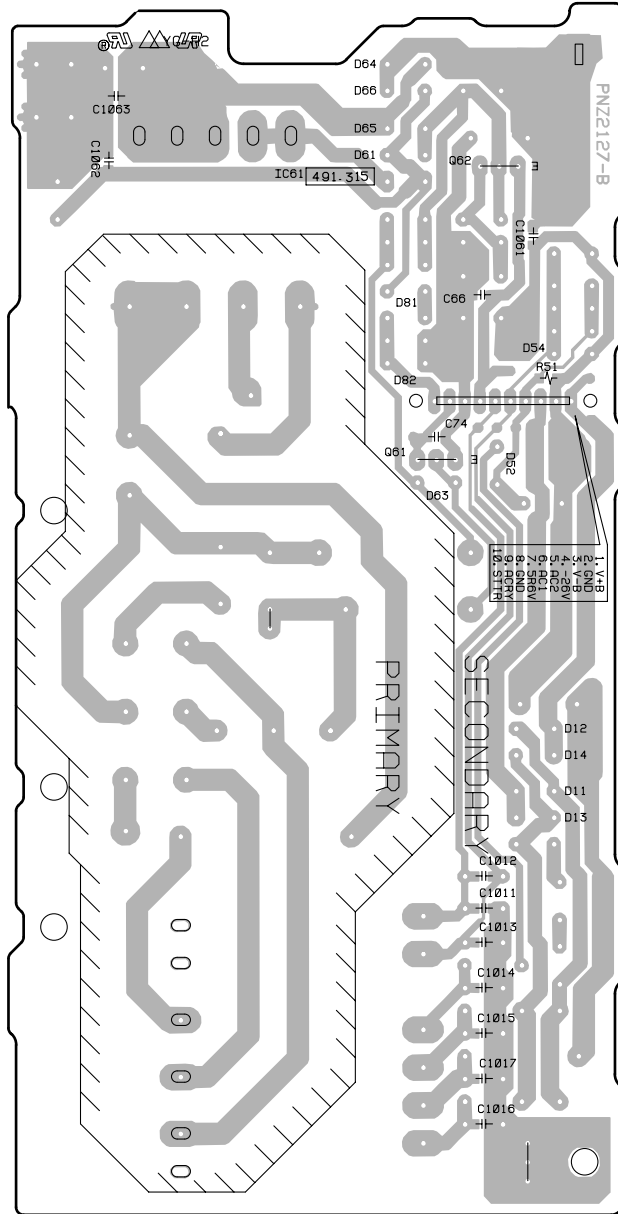

(PNP1467-B)

5. PCB PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 → 56 x 10¹ → 561 RD1/4PU $\boxed{5}\boxed{6}\boxed{1}\boxed{J}$

47k → 47 x 10³ → 473 RD1/4PU $\boxed{4}\boxed{7}\boxed{3}\boxed{J}$

0.5 → R50 RN2H $\boxed{R}\boxed{5}\boxed{0}\boxed{K}$

1 → 1R0 RS1P $\boxed{1}\boxed{R}\boxed{0}\boxed{K}$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k → 562 x 10¹ → 5621 RN1/4PC $\boxed{5}\boxed{6}\boxed{2}\boxed{1}\boxed{F}$

■ LIST OF WHOLE PCB ASSEMBLIES

| Mark | Symbol and Description | Part No. | | Remarks | |
|--------------|-------------------------|-------------------------|---------|---------|---------|
| | | KU/CA type | MY type | | |
| Δ NSP | MOTHER BOARD ASSY | PWM2294 | PWM2295 | | |
| | └ MAIN BOARD ASSY | PWZ4036 | PWZ4037 | | |
| | └ SR BOARD ASSY | PWZ4042 | PWZ4043 | | |
| | └ POWER BOARD ASSY | PWZ4048 | PWZ4049 | | |
| | └ DISPLAY BOARD ASSY | PWZ4053 | PWZ4054 | | |
| | └ CONTROL BOARD ASSY | PWZ4057 | PWZ4057 | | |
| | NSP | └ DOOR MOTOR BOARD ASSY | PWZ4061 | | PWZ4061 |
| | NSP | └ DOOR SW BOARD ASSY | PWZ4062 | | PWZ4062 |
| | NSP | └ VOLUME BOARD ASSY | PWZ4063 | | PWZ4063 |
| | NSP | MECHANISM BOARD ASSY | PWX1572 | | PWX1572 |
| NSP | └ SENSOR BOARD ASSY | PWZ3781 | PWZ3781 | | |
| NSP | └ SELECT BOARD ASSY | PWZ3785 | PWZ3785 | | |
| NSP | └ LOADING BOARD ASSY | PWZ3788 | PWZ3788 | | |
| NSP | └ LOADING SW BOARD ASSY | PWZ3790 | PWZ3790 | | |
| NSP | └ RADIATE BOARD ASSY | PWZ3791 | PWZ3791 | | |
| NSP | └ RECIEVE BOARD ASSY | PWZ3792 | PWZ3792 | | |
| NSP | SERVO MECHANISM ASSY GM | PXA1591 | PXA1591 | | |
| | └ MECHANISM BOARD ASSY | PWX1192 | PWX1192 | | |

■ CONTRAST OF PCB ASSEMBLIES

M POWER BOARD ASSY

PWZ4048 and PWZ4049 are constructed the same except for the following:

| Mark | Symbol and Description | Part No. | | Remarks |
|----------|------------------------|-------------|-------------|---------|
| | | PWZ4048 | PWZ4049 | |
| Δ | C11,C13,C63 | CKCYF103Z50 | CQMA472J50 | |
| | C15,C16,C17 | CKCYF103Z50 | CFTLA223J50 | |
| | C61,C1066 | Not used | CQMA472J50 | |
| | C62,C1061 | CKCYF103Z50 | Not used | |
| | IC61 | Not used | AEK7003 | |
| Δ | T2 | ATT7057 | ATT7037 | |
| | T1 | PTT1318 | PTT1317 | |

P SR BOARD ASSY

PWZ4042 and PWZ4043 are constructed the same except for the following:

| Mark | Symbol and Description | Part No. | | Remarks |
|------|------------------------|------------|----------|---------------------------|
| | | PWZ4042 | PWZ4043 | |
| | C331 | CEAT101M10 | PCH1128 | PCH1128 : 220 μ F/25V |
| | JA392 | RKN1004 | Not used | |

K DISPLAY BOARD ASSY

PWZ4053 and PWZ4054 are constructed the same except for the following:

| Mark | Symbol and Description | Part No. | | Remarks |
|------|------------------------|----------|--------------|---------|
| | | PWZ4053 | PWZ4054 | |
| | C1712 | Not used | CKSQYF103Z50 | |
| | L701 | Not used | LAU100J | |
| | L702, L703 | Not used | LAU1R0J | |

J MAIN BOARD ASSY

PWZ4036 and PWZ4037 are constructed the same except for the following:

| Mark | Symbol and Description | Part No. | | Remarks |
|------|----------------------------|---------------|---------------|---------------------------|
| | | PWZ4036 | PWZ4037 | |
| | IC401 | Not used | PE8001A | |
| | Q439 | Not used | DTC124EK | |
| | D406,D407,D408,D410 | Not used | 1SS355 | |
| | L1413 | Not used | LAU100J | |
| | C27,C319 | CEAT101M10 | PCH1128 | PCH1128 : 220 μ F/25V |
| | C153 | CEAT101M50 | PCH1128 | PCH1128 : 220 μ F/25V |
| | C155,C156 | CEAT101M50 | PCH1126 | PCH1126 : 100 μ F/50V |
| | C157 | CEAT101M10 | PCH1126 | PCH1126 : 100 μ F/50V |
| | C304 | CEAT101M50 | PCH1126 | PCH1126 : 100 μ F/50V |
| | C311,C312 | CCSQCH150J50 | Not used | |
| | C315 | CEAT101M50 | PCH1128 | PCH1128 : 220 μ F/25V |
| | C403 | Not used | CCSQCH240J50 | |
| | C404 | Not used | CCSQCH300J50 | |
| | C406 | Not used | CKSQYB102K50 | |
| | C410,C412,C413,C416 | Not used | CKSQYF103Z50 | |
| | C417,C418,C421,C422 | Not used | CKSQYF103Z50 | |
| | C411,C419 | Not used | PCH1126 | PCH1126 : 100 μ F/50V |
| | C414,C415 | Not used | PCH1127 | PCH1127 : 4.7 μ F/50V |
| | C431,C432 | Not used | PCH1124 | PCH1124 : 47 μ F/50V |
| | C433- C436,C439,C440 | Not used | CQMBA152J50 | |
| | C437,C438 | CCCSL121J50 | Not used | |
| | C441,C442 | CEAT220M25 | PCH1124 | PCH1124 : 47 μ F/50V |
| | C481,C482 | CCCSL390J50 | Not used | |
| | R315- R317,R402- R404,R406 | Not used | RS1/10S221J | |
| | R318 | RS1/10S331J | Not used | |
| | R319 | RS1/10S105J | Not used | |
| | R401 | Not used | RS1/10S471J | |
| | R405 | Not used | RS1/10S331J | |
| | R410 | Not used | RS1/10S0R0J | |
| | R412 | Not used | RS1/10S103J | |
| | R431,R432 | Not used | RS1/10S223J | |
| | R433,R434 | Not used | RS1/10S102J | |
| | R435,R436 | Not used | RS1/10S182J | |
| | R437,R438 | RN1/10SE5601D | RN1/10SE1801D | |
| | R439,R440,R443,R444 | RN1/10SE1002D | Not used | |
| | R477 | Not used | RS1/10S473J | |
| | R479 | RS1/10S0R0J | Not used | |
| | R481- R484 | RN1/10SE2202D | Not used | |
| | X301 (16.9344MHz) | PSS1008 | Not used | |
| | X401 (16.9344MHz) | Not used | PSS1008 | |

■ PARTS LIST FOR PD-F1009/KU/CA

| Mark | No. | Description | Part No. |
|------|-----|-------------|----------|
|------|-----|-------------|----------|

A MECHANISM BOARD ASSY

SWITCHES AND RELAYS

| | |
|------|---------|
| S610 | DSG1016 |
|------|---------|

OTHERS

| | |
|-------|----------|
| CN610 | 173979-4 |
|-------|----------|

F SENSOR BOARD ASSY

SEMICONDUCTORS

| | | |
|------|-------------------|----------|
| Q601 | TRANSISTOR | DTC124ES |
| Q602 | TRANSISTOR | DTC124ES |
| Q604 | TRANSISTOR | 2SC1740S |
| D601 | PHOTO INTERRUPTOR | GP1S58V |
| D602 | PHOTO INTERRUPTOR | GP1S58V |

RESISTORS

| | |
|-----------------|-------------|
| Other Resistors | RD1/4PU□□□J |
|-----------------|-------------|

OTHERS

| | | |
|------|-----------------|-------------|
| | 3PCABLE HOLDER | 51048-0300 |
| | 7P CABLE HOLDER | 51048-0700 |
| J602 | JUMPER WIRE | D20PDD0725E |
| J603 | 3P JUMPER WIRE | D20PDD0310E |
| J605 | 3P JUMPER WIRE | D20PDY0310E |

I SELECT BOARD ASSY

OTHERS

| | | |
|------|-----------------|-------------|
| | 7P CABLE HOLDER | 51048-0700 |
| | 9P CABLE HOLDER | 51048-0900 |
| J601 | JUMPERWIRE | D20PDY0930G |

E LOADING BOARD ASSY

OTHERS

| | | |
|------|-----------------|-------------|
| | 3P CABLE HOLDER | 51048-0300 |
| | 5P CABLE HOLDER | 51048-0500 |
| J651 | JUMPER WIRE | D20PDY0530E |
| J652 | 3P JUMPER WIRE | D20PDD0310E |

D LOADING SW BOARD ASSY

OTHERS

| | | |
|--|-----------------|------------|
| | 3P CABLE HOLDER | 51048-0300 |
| | REAF SWITCH | VSK1011 |

H RADIATE BOARD ASSY

SEMICONDUCTORS

| | | |
|------|-------|--------|
| D611 | DIODE | GL381J |
|------|-------|--------|

| Mark | No. | Description | Part No. |
|------|-----|-------------|----------|
|------|-----|-------------|----------|

OTHERS

| | | |
|--|-----------------|------------|
| | 3P CABLE HOLDER | 51048-0300 |
| | L.E.D.HOLDER | RNK1795 |

G RECIEVE BOARD ASSY

SEMICONDUCTORS

| | | |
|------|------------------|----------|
| Q621 | PHOTO TRANSISTOR | PT381FBC |
|------|------------------|----------|

OTHERS

| | | |
|------|-----------------|-------------|
| | 3P CABLE HOLDER | 51048-0300 |
| J604 | JUMPER WIRE | D20PDY0315E |

J MAIN BOARD ASSY

SEMICONDUCTORS

| | | | |
|---|-------|-----------------|----------|
| | IC151 | RF AMP IC | CXA2570N |
| ⚠ | IC201 | POWER OP-AMP IC | LA6520 |
| ⚠ | IC202 | POWER OP-AMP IC | LA6520 |
| ⚠ | IC203 | POWER OP-AMP IC | LA6517 |
| ⚠ | IC21 | REGULATOR IC | BA05T |

| | | | |
|---|-------|--------------|------------|
| ⚠ | IC23 | REGULATOR IC | NJM79M05FA |
| | IC301 | SERVO IC | CXD2587Q |
| ⚠ | IC35 | IC PROTECTOR | ICP-N10 |
| ⚠ | IC36 | IC PROTECTOR | ICP-N10 |
| | IC431 | IC | NJM4558MD |

| | | | |
|--|------|---------------------|----------|
| | Q151 | TRANSISTOR | 2SA854S |
| | Q152 | CHIP DIGITAL TRANS. | DTA124EK |
| | Q361 | CHIP TRANSISTOR | 2SC2412K |
| | Q433 | TRANSISTOR | 2SD2144S |
| | Q434 | TRANSISTOR | 2SD2144S |

| | | | |
|--|------|---------------------|-----------|
| | Q437 | DIGITAL TRANSISTOR | DTC124EK |
| | Q438 | CHIP DIGITAL TRANS. | DTA124EK |
| | D151 | CHIP DIODE | DA204K |
| | D152 | CHIP DIODE | RB501V-40 |
| | D218 | ZENNER DIODE | MTZJ6.2B |

| | | | |
|--|------|-------|--------|
| | D398 | DIODE | 1SS133 |
|--|------|-------|--------|

CAPACITORS

| | | | |
|--|-------|-------------------|--------------|
| | C1324 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1325 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C151 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C153 | ELECT. CAPACITOR | CEAT101M50 |
| | C154 | CERAMIC CAPACITOR | CKSQYF104Z25 |

| | | | |
|--|------|-------------------|--------------|
| | C155 | ELECT. CAPACITOR | CEAT101M50 |
| | C156 | ELECT. CAPACITOR | CEAT101M50 |
| | C157 | ELECT. CAPACITOR | CEAT101M10 |
| | C158 | CHIP CAPACITOR | CKSQYF103Z50 |
| | C159 | CERAMIC CAPACITOR | CKSQYB152K50 |

| | | | |
|--|------|-------------------|--------------|
| | C201 | ELECT. CAPACITOR | CEAT470M16 |
| | C202 | ELECT. CAPACITOR | CEAT470M16 |
| | C203 | ELECT. CAPACITOR | CEAT470M16 |
| | C204 | ELECT. CAPACITOR | CEAT470M16 |
| | C205 | CERAMIC CAPACITOR | CKSQYF104Z25 |

| | | | |
|--|------|-------------------|--------------|
| | C206 | CERAMIC CAPACITOR | CKSQYF104Z25 |
|--|------|-------------------|--------------|

PD-F1009

| Mark | No. | Description | Part No. |
|------|------|-------------|----------|
| | D393 | DIODE | 1SS133 |
| | D394 | DIODE | 1SS133 |

CAPACITORS

| | | |
|-------|-------------------|--------------|
| C1398 | CERAMIC CAPACITOR | CKSQYF473Z50 |
| C331 | ELECT. CAPACITOR | CEAT101M10 |
| C332 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| C339 | CHIP CAPACITOR | CKSQYF103Z50 |

RESISTORS

| | |
|-----------------|-------------|
| Other Resistors | RS1/10S□□□J |
|-----------------|-------------|

OTHERS

| | | |
|-------|------------------|-----------|
| CN403 | 7-P PLUG | KM250NA7L |
| JA331 | OPTICAL LINK OUT | GP1F32T |
| JA391 | JACK | RKN1004 |
| JA392 | JACK | RKN1004 |
| | SCREW PLATE | VNE1948 |

M POWER BOARD ASSY

SEMICONDUCTORS

| | | | |
|---|-----|--------------|----------|
| | Q61 | TRANSISTOR | DTC124ES |
| ⚠ | Q62 | TRANSISTOR | 2SC1815 |
| ⚠ | D11 | DIODE | S5688G |
| ⚠ | D12 | DIODE | S5688G |
| ⚠ | D13 | DIODE | S5688G |
| ⚠ | D14 | DIODE | S5688G |
| ⚠ | D52 | DIODE | S5688G |
| | D54 | ZENNER DIODE | MTZJ18B |
| ⚠ | D61 | DIODE | S5688G |
| | D62 | ZENNER DIODE | MTZJ6.2B |
| | D63 | DIODE | 1SS133 |
| | D81 | DIODE | 1SS133 |
| | D82 | ZENER DIODE | MTZJ4.7B |

SWITCHES AND RELAYS

| | | | |
|---|-----|-------|---------|
| ⚠ | RY1 | RELAY | PSR1003 |
|---|-----|-------|---------|

CAPACITORS

| | | | |
|---|-------|---------------------|--------------|
| | C1061 | CHIP CAPACITOR | CKSQYF103Z50 |
| | C11 | CERAMIC CAPACITOR | CKCYF103Z50 |
| | C13 | CERAMIC CAPACITOR | CKCYF103Z50 |
| | C15 | CERAMIC CAPACITOR | CKCYF103Z50 |
| | C16 | CERAMIC CAPACITOR | CKCYF103Z50 |
| ⚠ | C17 | CERAMIC CAPACITOR | CKCYF103Z50 |
| | C2 | CKA (10000P/AC250V) | ACG7020 |
| | C51 | ELECT. CAPACITOR | CEAT101M35 |
| | C52 | ELECT. CAPACITOR | CEAT101M35 |
| | C62 | CERAMIC CAPACITOR | CKCYF103Z50 |
| | C63 | CERAMIC CAPACITOR | CKCYF103Z50 |
| | C64 | ELECT. CAPACITOR | CEAT471M25 |
| | C65 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C66 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C74 | CHIP CAPACITOR | CCSQCH101J50 |

RESISTORS

| | | |
|-----------------|---------------|-------------|
| R51 | CHIP RESISTOR | RS1/10S223J |
| Other Resistors | RD1/4PU□□□J | |

| Mark | No. | Description | Part No. |
|---------------|-----|---------------------|-------------|
| OTHERS | | | |
| | | 10P CABLE HOLDER | 51048-1000 |
| ⚠ | T2 | STANDBY TRANSFORMER | ATT7057 |
| | J11 | 2mm 10P WIRE | D20PDY1025E |
| ⚠ | T1 | POWER TRANSFORMER | PTT1318 |
| ⚠ | CN2 | AC CODE SOCKET | RKP1751 |
| | | PCB BINDER | VEF1040 |
| | | SCREW PLATE | VNE1948 |
| KN11 | | EARTH METAL FITTING | VNF1084 |

K DISPLAY BOARD ASSY

SEMICONDUCTORS

| | | |
|-------|------------------|----------------|
| IC701 | MICROCOMPUTER IC | PE5132B |
| IC721 | RESET IC | S-806E |
| D701 | DIODE | 1SS133 |
| D702 | DIODE | 1SS133 |
| D703 | DIODE | 1SS133 |
| D704 | DIODE | 1SS133 |
| D705 | DIODE | 1SS133 |
| D706 | DIODE | 1SS133 |
| D707 | DIODE | 1SS133 |
| D751 | LED(RED) | SLR-343VC(NPQ) |

SWITCHES AND RELAYS

| | | |
|------|--------|---------|
| S701 | SWITCH | VSG1009 |
| S702 | SWITCH | VSG1009 |
| S703 | SWITCH | VSG1009 |
| S704 | SWITCH | VSG1009 |
| S705 | SWITCH | VSG1009 |
| S706 | SWITCH | VSG1009 |
| S707 | SWITCH | VSG1009 |
| S708 | SWITCH | VSG1009 |

CAPACITORS

| | | |
|------|-------------------|--------------|
| C701 | ELECTR. CAPACITOR | CEAL101M6R3 |
| C702 | ELECTR. CAPACITOR | CEAL101M6R3 |
| C703 | CHIP CAPACITOR | CKSQYF103Z50 |
| C704 | CHIP CAPACITOR | CKSQYF103Z50 |
| C705 | CHIP CAPACITOR | CKSQYF103Z50 |
| C707 | CHIP CAPACITOR | CKSQYF103Z50 |
| C721 | ELECTR. CAPACITOR | CEAL101M6R3 |
| C722 | CERAMIC CAPACITOR | CKSQYF104Z25 |

RESISTORS

| | |
|-----------------|-------------|
| Other Resistors | RS1/10S□□□J |
|-----------------|-------------|

OTHERS

| | | |
|-------|-----------------------------|-----------------|
| J701 | CABLE HOLDER(12P) | 51063-1205 |
| | JUMPER WIRE | D15A12-400-2651 |
| | REMOTE RECEIVER UNIT | GP1U28X |
| CN701 | CONNECTOR | HLEM26R-1 |
| CN702 | CONNECTOR | HLEM16S-1 |
| V701 | FL INDICATOR TUBE | PEL1098 |
| | FL HOLDER(FE) | VNF1085 |
| X701 | CERAMIC RESONATOR (4.19MHz) | VSS1028 |

| Mark | No. | Description | Part No. |
|------|-----|-------------|----------|
|------|-----|-------------|----------|

L CONTROL BOARD ASSY

SWITCHES AND RELAYS

| | | |
|------|----------------|---------|
| S751 | SWITCH | VSG1009 |
| S752 | SWITCH | VSG1009 |
| S753 | SWITCH | VSG1009 |
| S754 | SWITCH | VSG1009 |
| S755 | SWITCH | VSG1009 |
| S756 | SWITCH | VSG1009 |
| S757 | SWITCH | VSG1009 |
| S758 | SWITCH | VSG1009 |
| S759 | SWITCH | VSG1009 |
| S760 | SWITCH | VSG1009 |
| S761 | SWITCH | VSG1009 |
| S762 | SWITCH | VSG1009 |
| S763 | SWITCH | VSG1009 |
| S764 | SWITCH | VSG1009 |
| S765 | SWITCH | VSG1009 |
| S766 | SWITCH | VSG1009 |
| S767 | SWITCH | VSG1009 |
| S768 | SWITCH | VSG1009 |
| S769 | SWITCH | VSG1009 |
| S770 | SWITCH | VSG1009 |
| S771 | ROTARY ENCODER | PSX1002 |

CAPACITORS

| | | |
|------|----------------|--------------|
| C751 | CHIP CAPACITOR | CKSQYF103Z50 |
| C752 | CHIP CAPACITOR | CKSQYF103Z50 |

OTHERS

| | | |
|--|-------------------|------------|
| | CABLE HOLDER(12P) | 51063-1205 |
|--|-------------------|------------|

B DOOR MOTOR BOARD ASSY

OTHERS

| | | |
|------|-----------------|-------------|
| | 3P CABLE HOLDER | 51048-0300 |
| | 4P CABLE HOLDER | 51048-0400 |
| J631 | JUMPERWIRE | D20PDY0445E |

C DOOR SW BOARD ASSY

OTHERS

| | | |
|------|-----------------|-------------|
| | 3P CABLE HOLDER | 51048-0300 |
| | REAF SWITCH | VSK1011 |
| J632 | 3P JUMPER WIRE | D20PDD0315E |

O VOLUME BOARD ASSY

RESISTORS

| | | |
|-------|--------|---------|
| VR601 | (22kΩ) | VCP1158 |
|-------|--------|---------|










OTHERS

| | | |
|-------|-----------------|------------|
| CN604 | 3P JUMPER | 52147-0310 |
| CN605 | 3P JUMPER | 52147-0310 |
| KN601 | JUMPER TERMINAL | PKX1001 |


6. ADJUSTMENT

6.1 PREPARATIONS

6.1.1 Jigs and Measuring Instruments
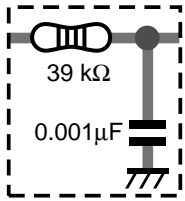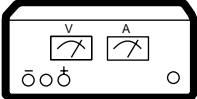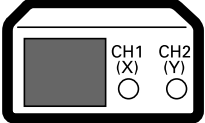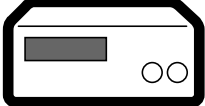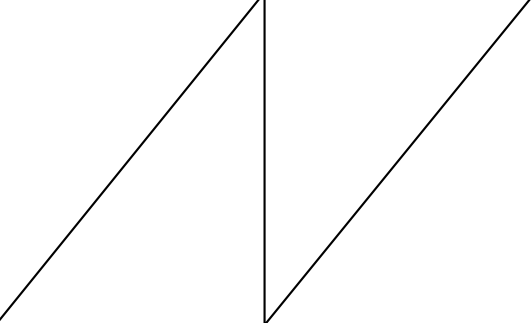
| | | | | |
|--|---|---|---|---|
|  <p>CD TEST DISC (YEDS-7)</p> |  <p>⊖ screwdriver (small)</p> |  <p>⊕ screwdriver (medium)</p> |  <p>⊖ Precise screwdriver</p> |  <p>Low pass filter (39 kΩ + 0.001 μF)</p> |
|  <p>DC power supply</p> |  <p>Dual-trace oscilloscope (10 : 1 probe)</p> |  <p>Digital multi meter</p> |  | |


6.1.2 Necessary Adjustment Points
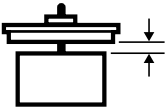
| When | Adjustment points |
|--------------------------------------|---|
| Exchange PICKUP | ① ② ③ → Page 45 - 47 |
| Exchange MAIN BOARD ASSY | ③ → Page 47 |
| Exchange SERVO MECH ASSY | ③ → Page 47 |
| Exchange SPINDLE MOTOR |  ADJ → Page 10 |
| Remove or Exchange EXTERIOR (2/2) | ④ → Page 47 |


6.2 ADJUSTMENT

6.2.1 How to Start/Cancel Test Mode


TEST MODE : ON

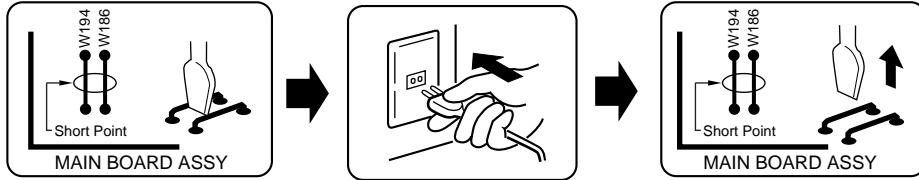



TEST MODE : PLAY

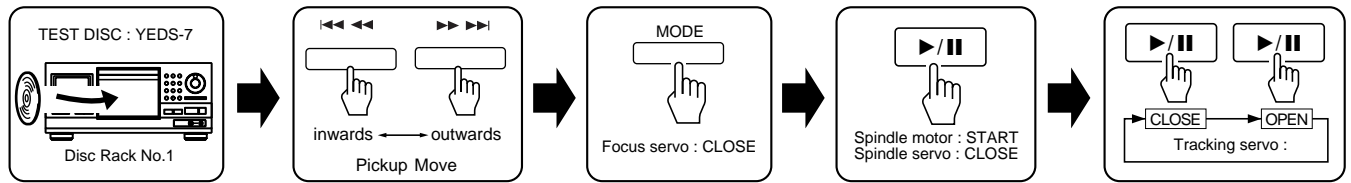

TEST MODE : STOP → CANCEL

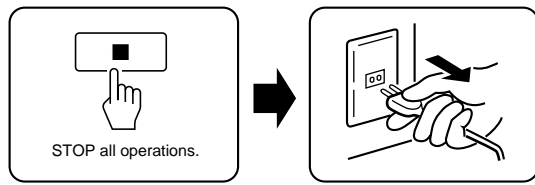


6.2.2 Adjustment Location

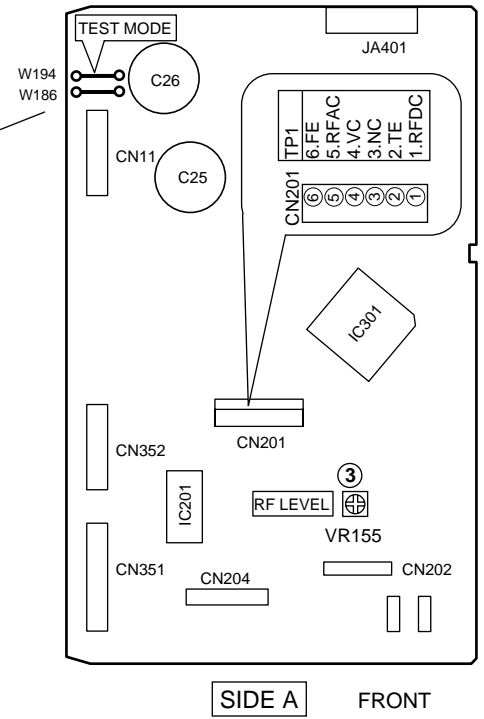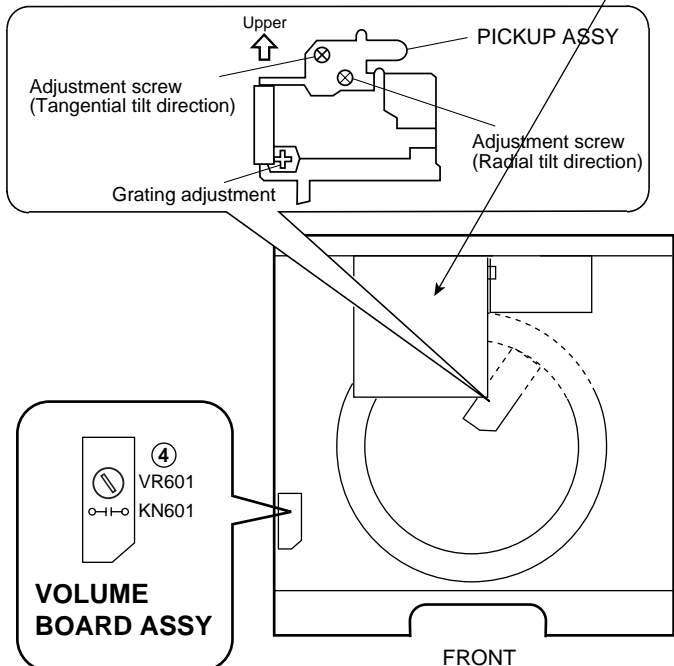


- Adjustment Items
- [Electrical Part]
- ③ RF Level Adjustment
 - ④ Disc Detection Adjustment

6.2.3 Electrical Adjustment


① Grating Adjustment

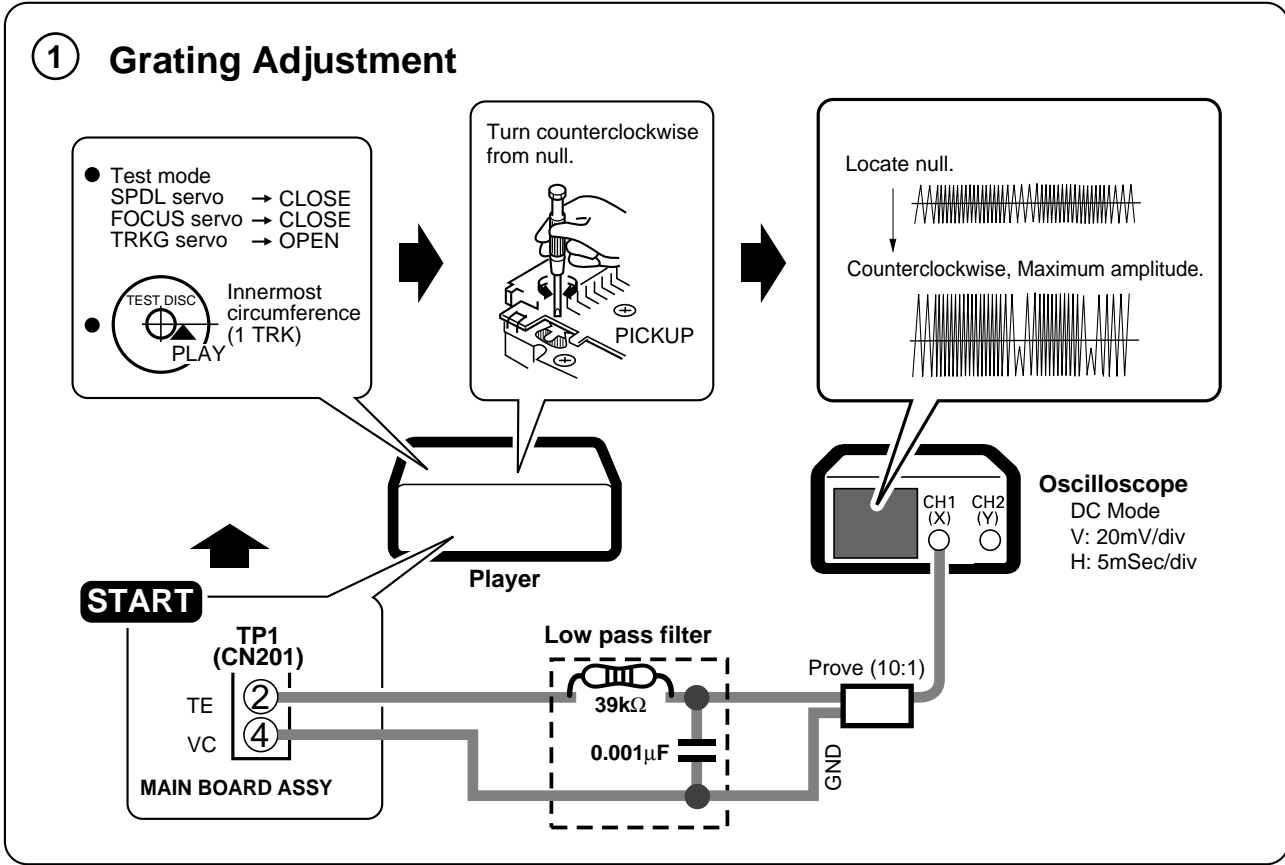

② Pickup ①Radial/ ②Tangential Direction Tilt Adjustment

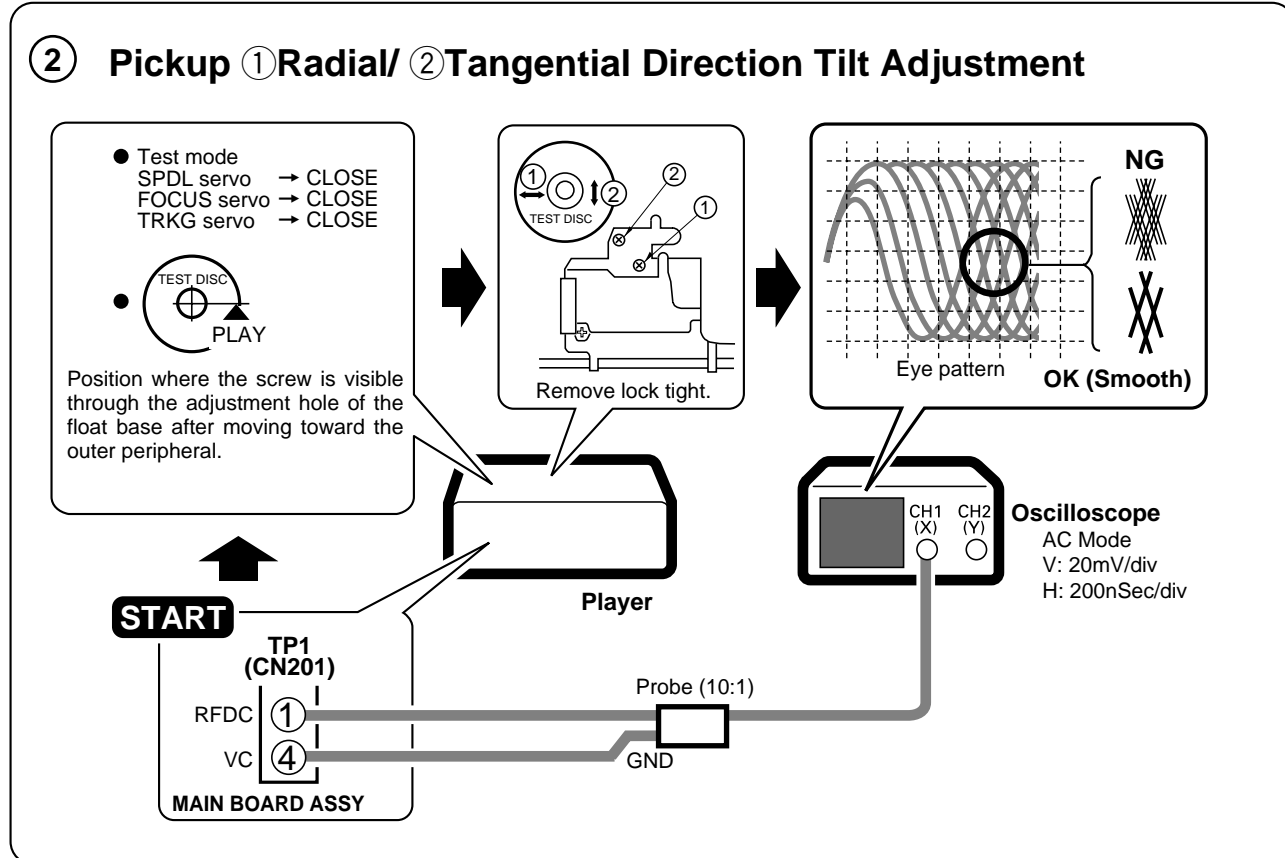


③ RF Level Adjustment

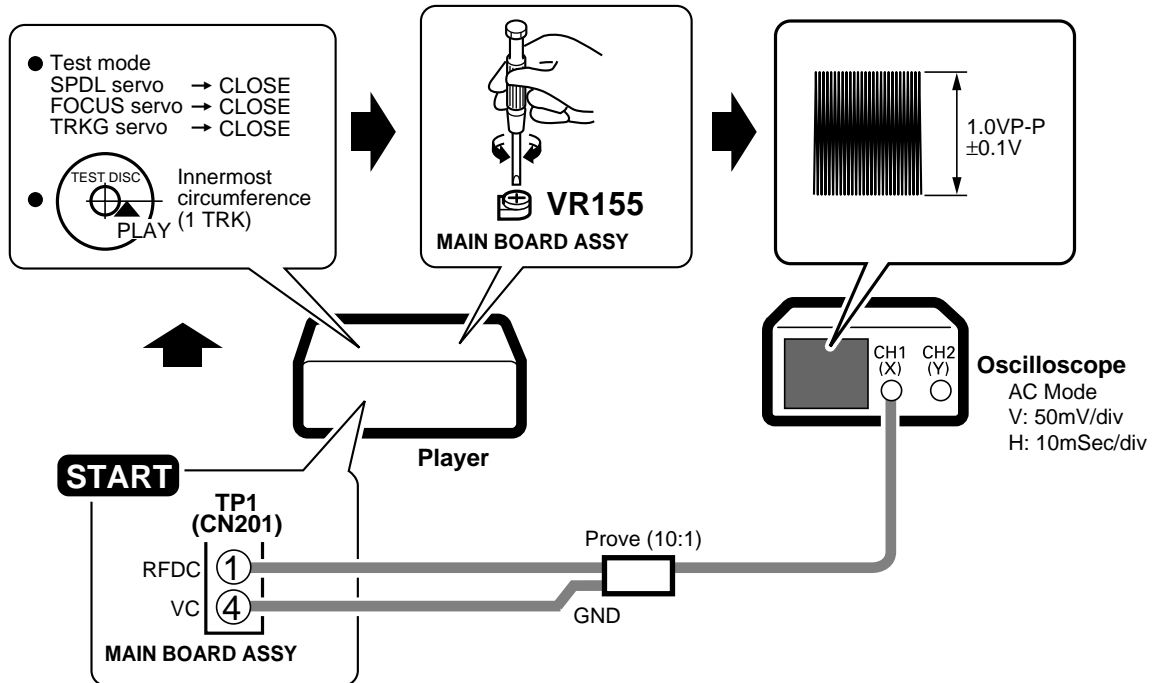

④ Disc Detection Adjustment

● Connection Diagram for Adjustment

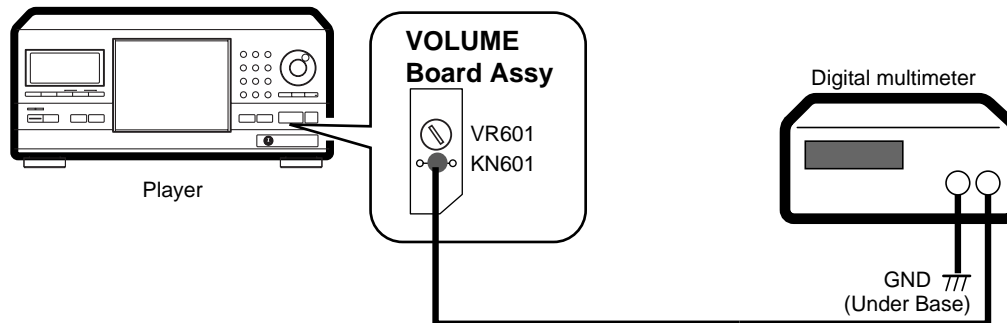

● Adjustment Procedure

1. Connect all equipment as shown in the diagram.
2. Turn on the power (Normal mode) and put the test disc in the No. 1 disc slot.
3. Rotate the Jog Dial to select "DISC 1".
4. Press the "ENTER" button . (Disc 1 is clamped.)
5. Adjust VR601 on the VOLUME Board Assy so that the voltage becomes $860 \pm 5\text{mV}$.
 (Adjust so that the free play value is $860\text{mV} \pm 5\text{mV}$ at the low point)
6. Check the free play value at the high point.
 If it is higher than 1500mV , re-adjust low value $840\text{mV} \pm 5\text{mV}$.
 If it is lower than 1000mV , re-adjust low value $880\text{mV} \pm 5\text{mV}$.
7. Take off at the Digital Multi Meter.

7. GENERAL INFORMATION

7.1 DIAGNOSIS




7.1.1 DISASSEMBLY

■ Removal of the Servo Mechanism Assy GM



- ① Remove the Bonnet. (Left and right side : 2 screws, rear side : 3 screws)
- ② Remove the wires from the MAIN BOARD Assy. (8 places)
- ③ Remove the screws ① (6 screws), and remove the MAIN BOARD Assy.

Note) When the screws (3 screws) are removed in this condition, the mechanical unit can be removed as one entity. Refer to "2. EXPLODED VIEWS AND PARTS LIST".


- ④ Open the Hood, remove the screws ② (5 screws), disconnect the hooks of Front Panel Assy and Hood (3 places), and remove the Center Pole.
- ⑤ Remove the screws ③ (3 screws), remove the link section ④, and remove the Arm Assy.

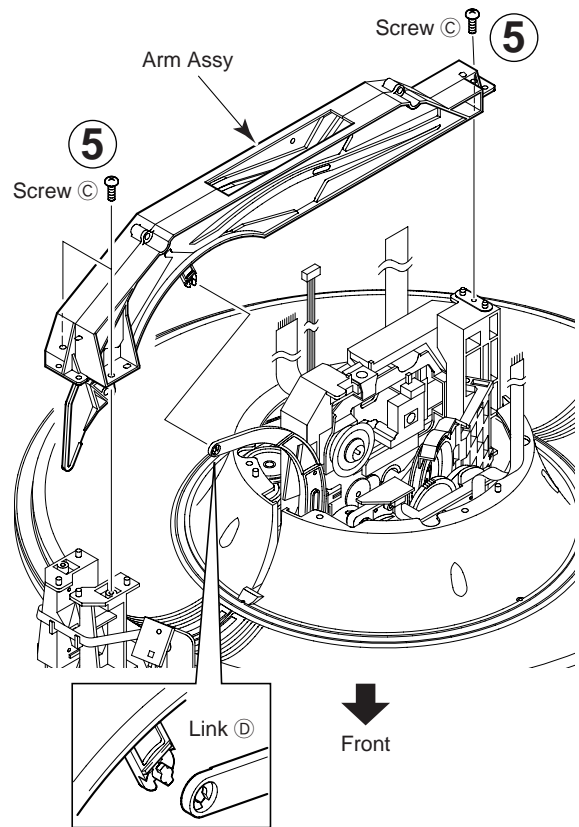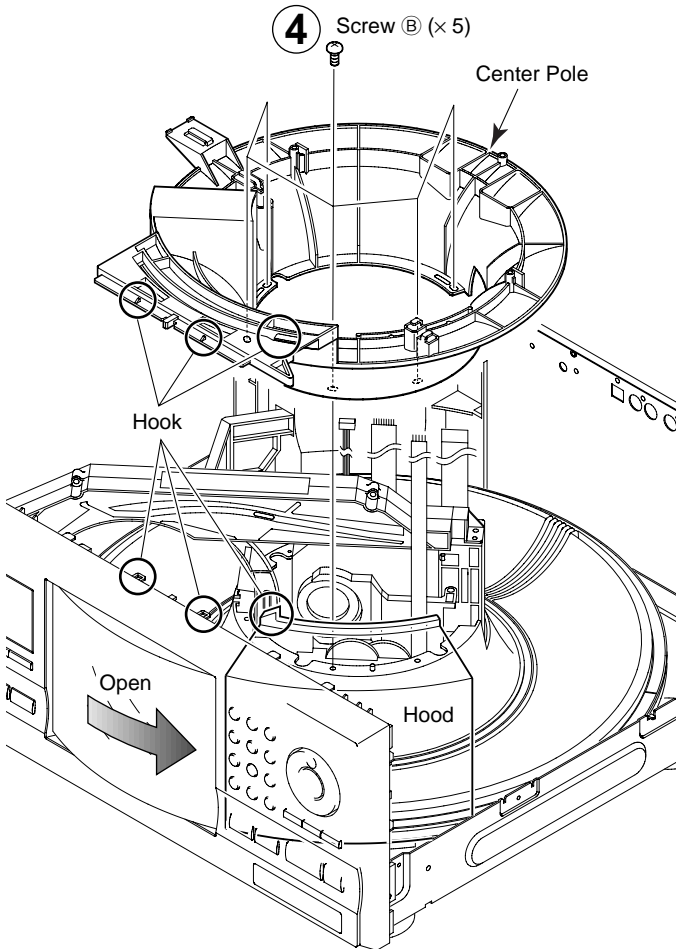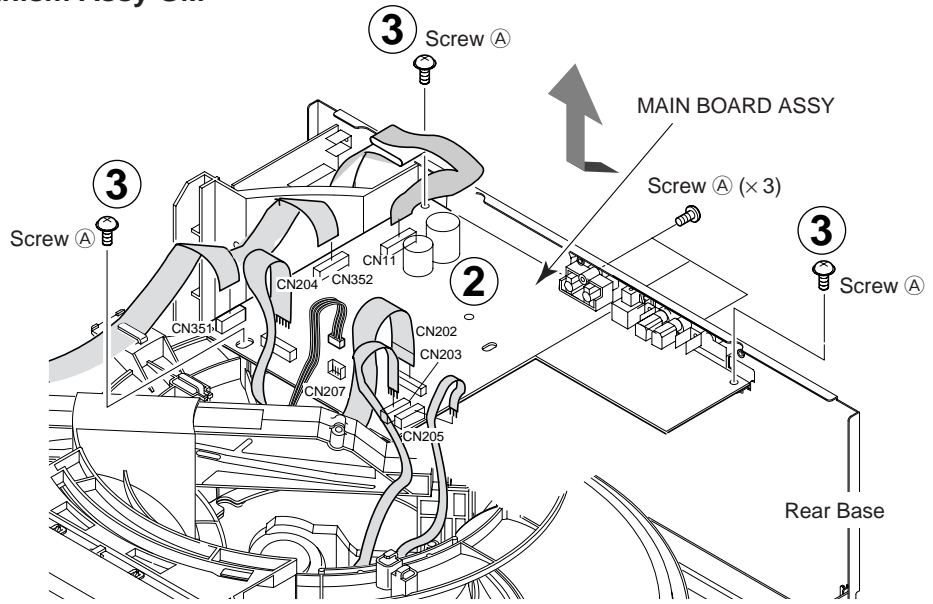

- ⑥ Remove the screws ⑤ (4 screws), and then remove the Disc Guard.
- ⑦ Remove the Float Base Assy and Clamp Holder.

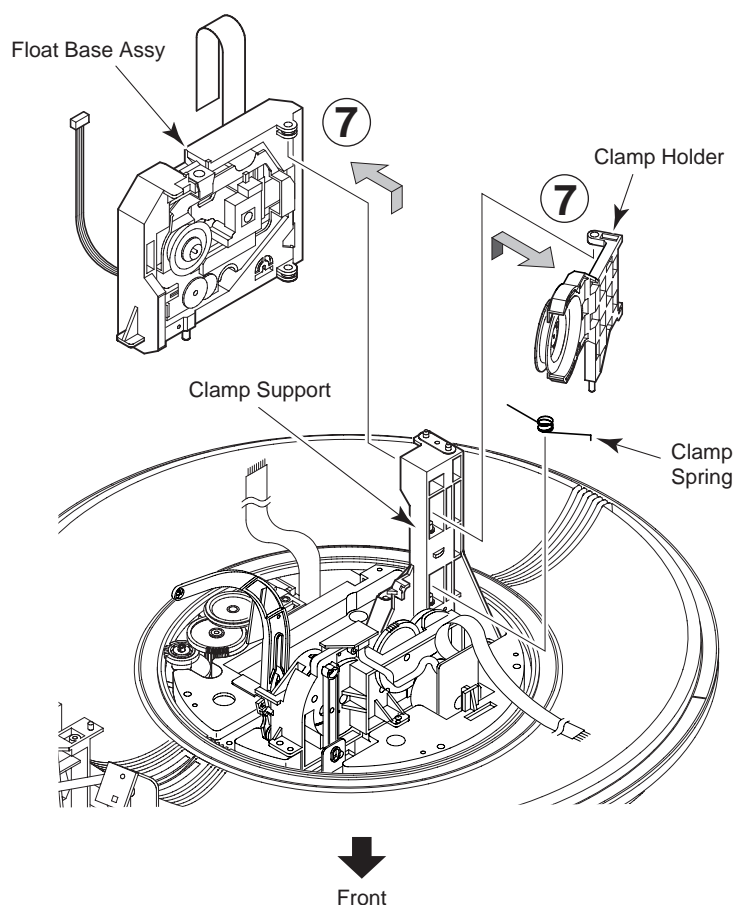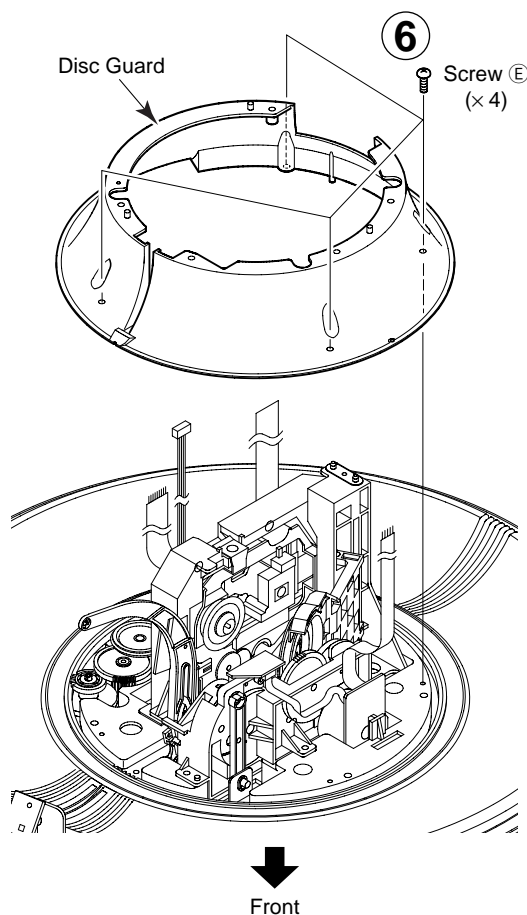


- ⑧ Remove the Flexible Flat Cable and the Connector Assy (4P) from the Float Base.
- ⑨ Remove the screw G.
- ⑩ Remove the float spring.
(To install this part, line up the float angle side of the Servo Mechanism ASSY GM first, and press down on the float base side.)
- ⑪ Remove the float rubber from the Servo Mechanism ASSY GM. At this time the Float Rubber should remain on the Float Base side. (To install it on the Float Base when it has been removed, push it into place with a thin cylindrical object.)

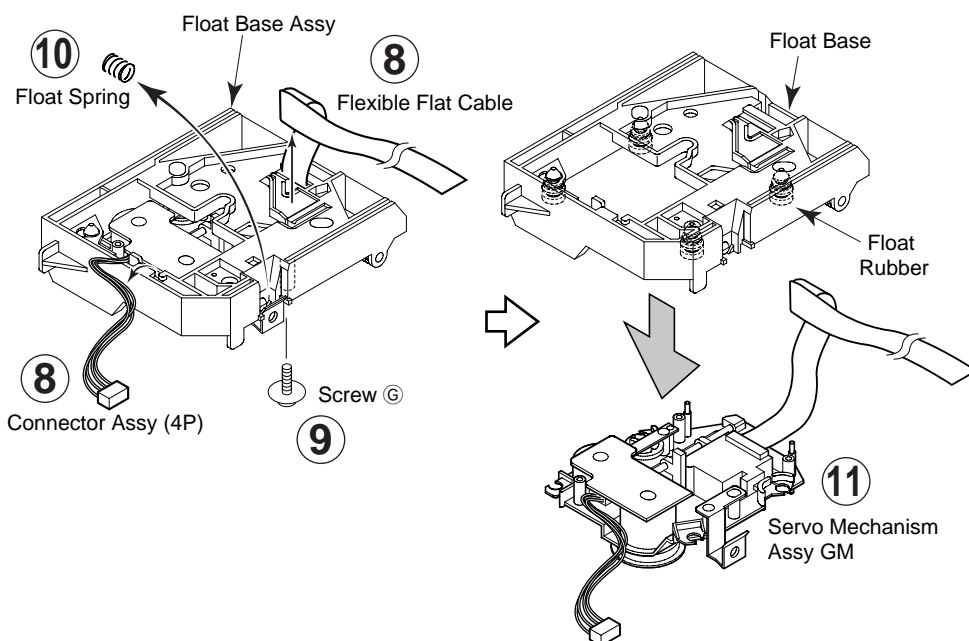


■ Removal of the Gear Holder Assy and the Disc Rack

- ① Perform the steps ① to ⑥ of " ■ Removal of the Servo Mechanism Assy GM ".
- ② Remove the screws ① (2 screws), and then remove the Gear Holder Assy.
- ③ Remove the Disc Rack.

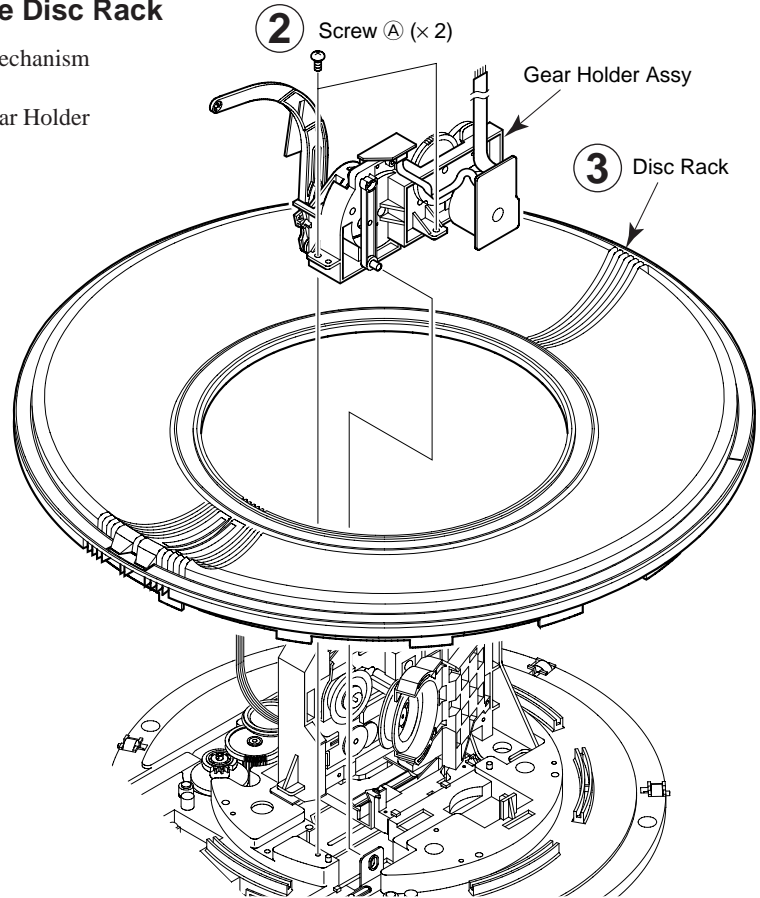

■ Removal of the Hood and Hood Base Assy

- ① Perform the steps ① to ⑥ of " ■ Removal of the Servo Mechanism Assy GM ". and the steps ② and ③ of " ■ Removal of the Gear Holder Assy and the Disc Rack ".
- ② Remove the screws ② (2 screws), and then remove the Front Panel Assy.
- ③ Slide the Hood to the left side and remove it.
- ④ Remove the screws ③ (2 screws) and remove the Hood Base Assy.

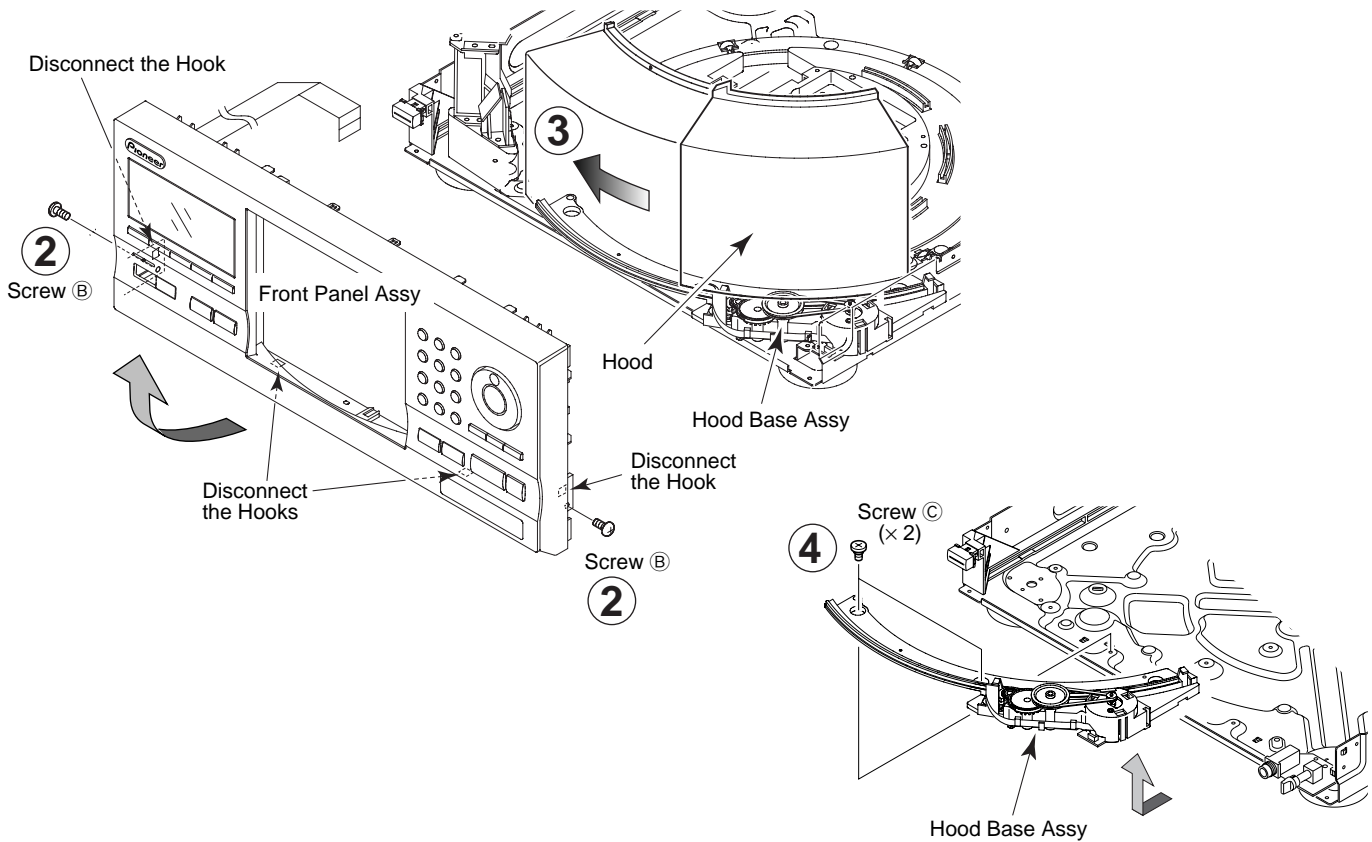

7.1.2 ERROR CHECK DISPLAY


Error check mode (display of the error history for the last 16 times) is entered when the "TIME/CHARA" button is pressed in test mode. By looking at this display, it can be seen in which status the microcomputer has stopped.

(1) Explanation of the display

Disc No. = Error code

Track No. = Error history

Min : sec = Error occurrence mode

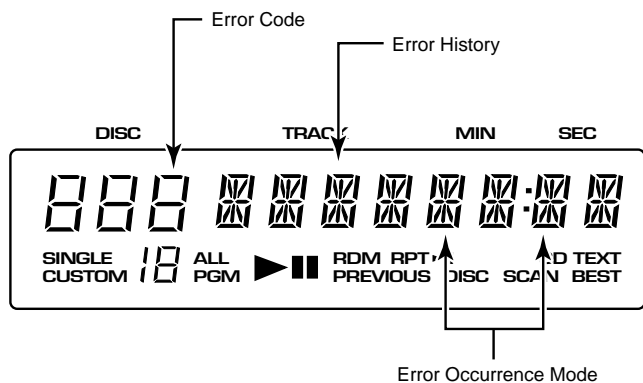

Press the "TIME/CHARA" button again to check past error codes. This switches the display. The contents of each display are as follows.

① Track No.: Error History

Display is possible from 1 to 16. The smaller numbers have occurred more recently. Accordingly, the error No. 1 is the error which has occurred most recently.

② Min : sec: Error Occurrence Mode

The internal mode at the time of occurrence of the displayed error is displayed. With Min : sec, the meaning is provided by the first digit.

Minutes digits

| Display | Contents |
|---------|---|
| 0 | During spindle stop operation |
| 1 | During disc return |
| 2 | During disc selection (during clamping operation at the time of 26) |
| 3 | During setup |
| 4 | During CDR setup operation |
| 5 | During TOC reading |
| 6 | During search operation on the disc |
| 7 | During play operation |
| 8 | During pause operation |
| 9 | During manual search |

Seconds digits

| Display | Contents |
|---------|--|
| 0 | During hood closing operation and closed condition |
| 1 | During hood opening operation and open condition |

③ Disc No.: Error Code Details

Note: A used display is displayed only when return to normal operation after error occurrence is not possible even when failsafe operation is performed.

<<< Rack Section >>>

| User Display | Display | Contents |
|--------------|---------|---|
| None | A0 | <ul style="list-style-type: none"> Disc playing was tried after loading, but the disc could not be detected because there was no disc, the disc was upside down, the disc was dirty, disc loading had not been completed, etc. Focus was lost during disc playing because of disc scratches, dirt, etc. |
| None | A1 | <ul style="list-style-type: none"> At the time of track selection during play, or when trying to play, the servo mechanism could not move to the position of the intended track within a fixed time. |
| U1 | A3 | <ul style="list-style-type: none"> Disc loading was tried, but loading was not possible within a fixed time. (The disc was not brought from the rack.) |
| | A4 | <ul style="list-style-type: none"> It was tried to return the disc to the rack, but the disc could not be returned within a fixed time. |
| U2 | A2 | <ul style="list-style-type: none"> At the time of disc selection during play, or at the start of play from stopped condition, the selection mechanism could not move to the position of the intended disc within a fixed time. |
| | A5 | <ul style="list-style-type: none"> After initialization of the selection mechanism, after selection mechanism NG, etc., forced rack section position detection is performed for the selection mechanism, but detection was not possible within a fixed time. |
| None | A6 | <ul style="list-style-type: none"> Playing was tried after disc loading, but normal disc rotation was not possible because the disc was upside down, the disc was dirty, disc loading had not been completed, etc. During play normal rotation was not possible because of disc scratches, dirt, etc. |

<<< Rack section >>>

| User Display | Display | Contents |
|--------------|-----------|--|
| None | <i>A7</i> | <ul style="list-style-type: none"> When the position of the selection mechanism just before switching to disc selection operation os DCNT terminal = "L". (Normally, DCNT terminal = "H" exists when the selection mechanism is stopped, so that it can be assumed that the position of the mechanism has deviated for some reason. There is the possibility that a position deviation of the mechanism can cause a defect of the mechanism.) |
| None | <i>AB</i> | <ul style="list-style-type: none"> At the time of movement of the selection mechanism, a deviation has occurred between the present position of the disc and the disc position according to position detection. (It can be assumed that the waveform at the DCNT terminal and/or at the DPOS terminal has been miscounted. When a miscount occurs, a discrepancy occurs between the displayed disc No. and the counted disc position.) |
| None | <i>AG</i> | <ul style="list-style-type: none"> When the position of the mechanism became DCNT terminal = "L" during disc loading. (Normally, DCNT terminal = "H" exists when the selection mechanism is stopped, so that it can be assumed that the position of the mechanism has deviated for some reason. There is the possibility that a position deviation of the mechanism can cause a defect of the mechanism.) |
| None | <i>AA</i> | <ul style="list-style-type: none"> At the time of shifting to a different disc after play completion, the pickup does not return to the innermost circumference. |













<<< Hood Section >>>


| User Display | Display | Contents |
|--------------|-----------|---|
| <i>U3</i> | <i>P0</i> | The hood did not open within a fixed time. The hood switch was broken. |
| | <i>P1</i> | The hood did not close within a fixed time. The hood switch was broken. |
| None | <i>P2</i> | It was tried to force the closed hood open. The hood switch was broken. |

7.1.3 EXPLANATION OF DISC DETECTION

1. Detection of the rack position

There are two types of slits on the rear of the rack, and their combination is used to find which disc has been selected during rack rotation. The input ports (DCNT, DPOS) are as follows.



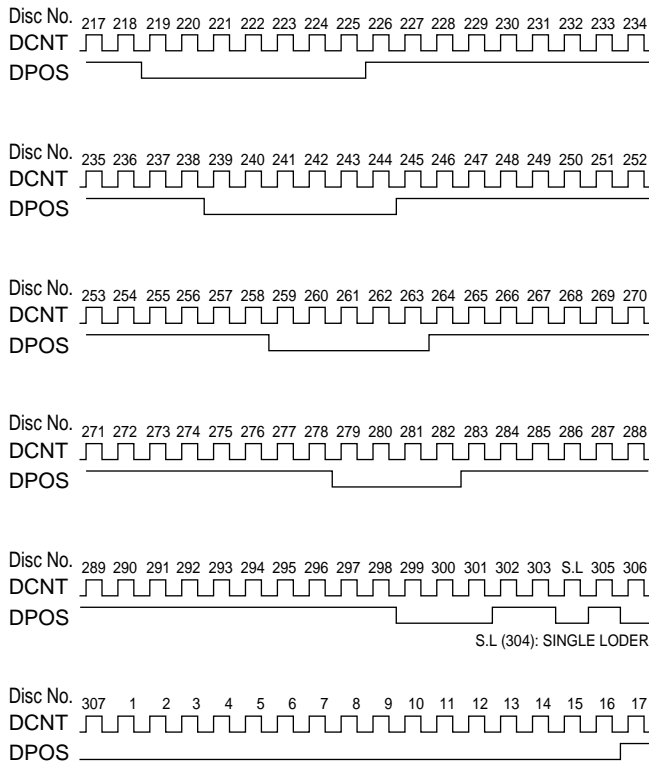

Relation between input port DCNT, DPOS and position of the mechanism

2. Position relation between position of the rack mechanism and photocell for disc detection
The relation between these two positions is as follows.

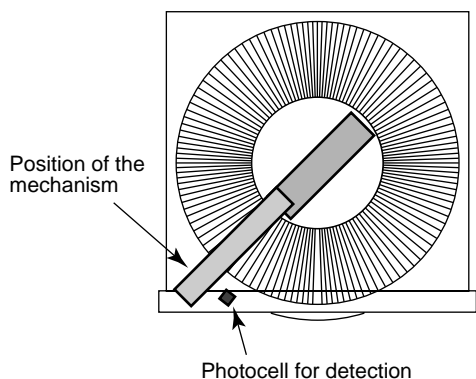


Fig.: The rack seen from above

The position of the mechanism and the photocell for detection are offset by a distance corresponding to 9 discs. Accordingly, the photocell for detection sees the disc number 9 discs before the position of the mechanism.

Example: Disc No. at the rack position : Disc No. 100
Disc No. seen by the photocell for detection : Disc No. 91

Note: The rack has 307 slits, but the slits 301 to 303 and 304 to 307 are the space for the side of the single loader and are not used. Disc detection also is not performed for them.

3. Disc Detection Method


3-1 In Regard to the Disc Detection Method

- Disc detection is performed after stabilization of the rotation speed after rack rotation start and completion of acceleration. (After start of rotation, detection starts after feed of 20 discs.)
- The input ports DCNT and DISC of the microcomputer are used for disc detection.

Port Explanation : DCNT : As described above.

DISC : Input of the disc detection result by the photocell for disc detection.
Input value "H" : No disc,
"L" : Disc present

3-2 In Regard to the Disc Detection Timing

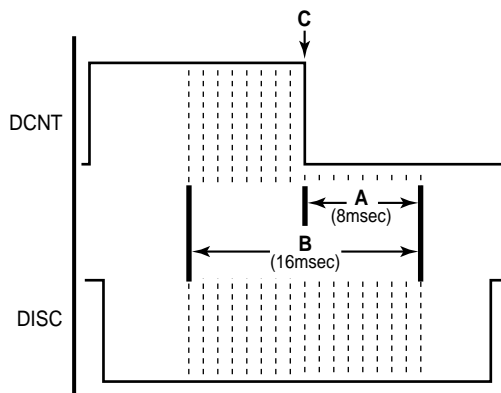

- ① The microcomputer looks every 1 msec at the status (H or L) of the two inputs DCNT and DISC.
- ② 8 msec (A in the figure) after the drop of DCNT (C in the figure), the last 17 DISC inputs (B in the figure) are checked. A disc is assumed to be resent when even one of them is "L".
- ③ No disc is assumed when DISC was "H" all 17 times (B in the figure) in ②.

Note: In regard to the drop (\bar{L}) of DCNT


For looking at the drop or rise of DCNT, it is necessary to check DCNT every 1 msec for "H" or "L".

"H" → "L" means a drop (\bar{L}).

"L" → "H" means a rise (\bar{L}).


For the timing, either one of the following A and B can be assumed. Accordingly, the point where a drop is found differs by max. 1 msec for A and B.

Thus, using the above figure, it can be said that the time from finding that a drop has occurred until starting to check for disc presence (A in the above figure) becomes 8 to 9 msec.

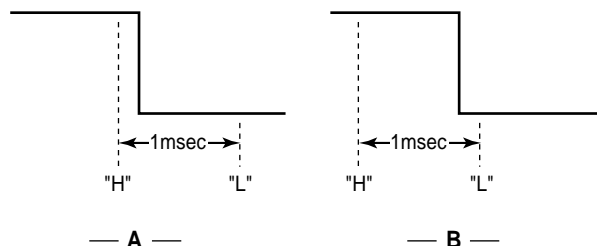


7.1.4 OPERATION FLOWCHART


• From power-on till the end of initialization

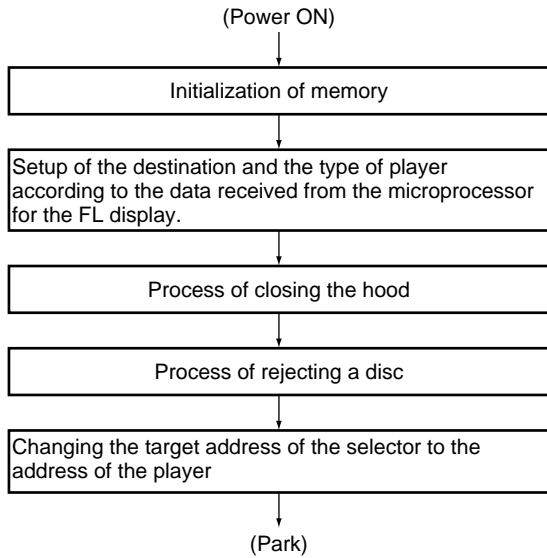

• Until start of playback of the specified disc

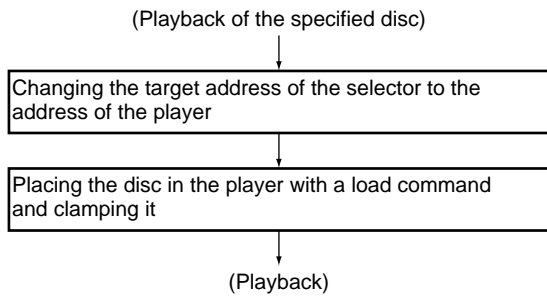

• Closing the hood

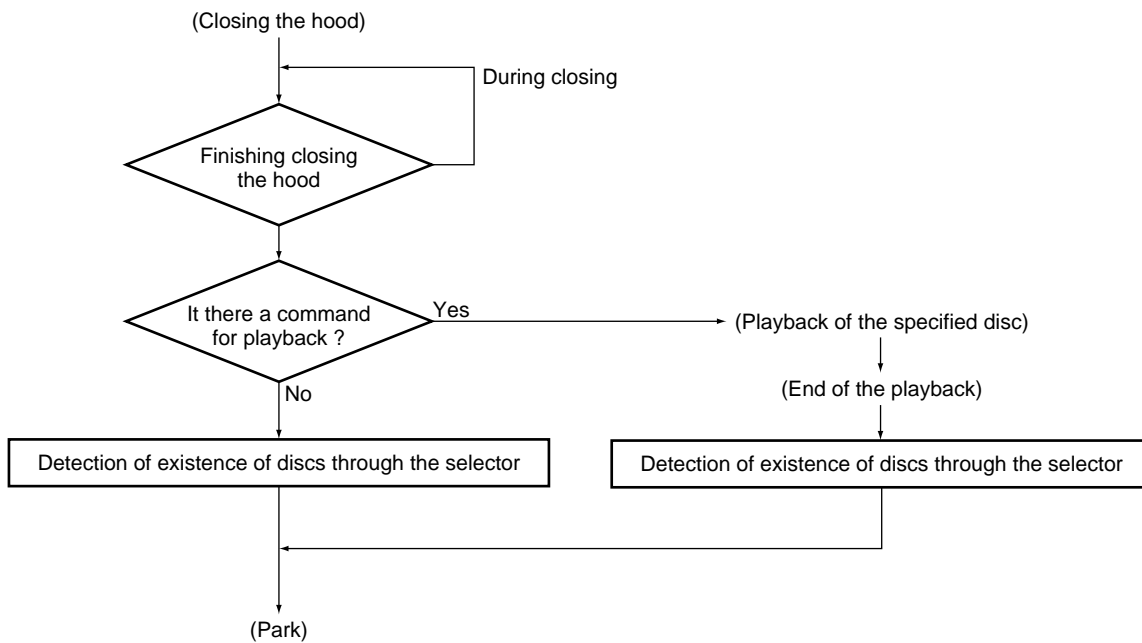

7.2 PARTS

7.2.1 IC

■ PE5132A (IC701: DISPLAY BOARD ASSY)

● System Control Micro-computer

● Pin Function


| No. | Symbol | Name | I/O | Description |
|-----|-------------|----------|-----|--|
| 1 | VDD | VDD | - | +5V |
| 2 | P37 | ACRY | O | AC relay |
| 3 | P36/BUZ | DISC | I | Disc detection pulse input |
| 4 | P35/PCL | MUTEA | O | Audio muting output |
| 5 | P34/T12 | LOUT | O | Output for loading motor IN (LIN : H, LOU : L) OUT (LIN : L, LOU : H) Stop (LIN : L, LOU : L) |
| 6 | P33/T11 | LIN | O | |
| 7 | P32/T02 | MOPN | O | Output for hood motor Open (MOPN: H, MCLS: L) Door motor output Open CLOSE (Mopn : L, Mcls : H) Door motor output Close Stop (Mopn : L, Mcls : L) |
| 8 | P31/T01 | MCLS | | |
| 9 | P30/T01 | XRST | O | Reset output for each LSI |
| 10 | RESET | RESET | I | CPU reset (L: Reset) |
| 11 | X2 | X2 | - | Connected to System clock oscillator (4.19 MHz) |
| 12 | X1 | X1 | - | |
| 13 | IC | IC | - | GND |
| 14 | XT2 | Not used | - | Not Connect (open) |
| 15 | P04/XT1 | Not used | - | Only for input: Input of GND |
| 16 | VDD | VDD | - | +5V |
| 17 | P27/SCK0 | SLOUT | O | Slave output |
| 18 | P26/SO0/SB | SYC3 | O | Synchronization output |
| 19 | P25/SI0/SB0 | Not used | O | Open |
| 20 | P24/PUSV | SYC1 | I | Synchronization input |
| 21 | P23/STB | DLAT | O | DAC control data, latch pulse output |
| 22 | P22/SCKI | SQCK | I | Q data serial clock output (Text) |
| 23 | P21/SO1 | Not used | - | Open |
| 24 | P20/SI1 | SQSO | I | Q data serial input (combined use for FCOK/GFS/SENS) |
| 25 | AVSS | AVSS | - | GND |
| 26 | P17/AN17 | SLCHK | I | Input for slave judgment (L: Slave) |
| 27 | P16/AN16 | MDAT | O | LSI control data serial output |
| 28 | P15/AN15 | XLAT | O | LSI control data, latch pulse output |
| 29 | P14/AN14 | CLOK | O | LSI control data clock output |
| 30 | P13/AN13 | SENS | I | SENS Input |
| 31 | P12/AN12 | SCLK | O | SENS Input clock |
| 32 | P11/AN11 | Not used | - | Not used |
| 33 | P10/AN10 | CDRW | O | CD/RW Gain change |
| 34 | AVDD | AVDD | - | +5V |

● The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

| No. | Symbol | Name | I/O | Description |
|-----|---------------|----------|-----|---|
| 35 | AVREF | AVREF | - | GND |
| 36 | P03/INTP3 | DCNT | I | Disc count pulse input |
| 37 | P02/INTP2 | STTR | I | Keyboard communication data |
| 38 | P01/INTP1 | SCORI | I | SubcodesynchronizationSO+S1 input |
| 39 | P00/INTP0/TI0 | RMDT | I | Remote control data input |
| 40 | VSS | VSS | - | GND |
| 41 | P74 | DPOS | I | Pulse input for disc position detection |
| 42 | P73 | INSD | I | Slider INSIDE switch input(L:INSIDE) |
| 43 | P72 | CLMP | I | Loading mechanism clampin switch input (L: Clamping completed) |
| 44 | P71 | EJCT | I | Loading out ctwich input (L: Ejection completed) |
| 45 | P70 | Not used | O | Open |
| 46 | VDD | VDD | - | +5V |
| 47 | P127/FIP52 | OPENI | I | Hoodopenswitchinput(L:Opening completed) |
| 48 | P126/FIP51 | CLOSE | I | Hood close switch input (L:Closeing completed) |
| 49 | P125/FIP50 | JOG1 | I | JOG input 1 |
| 50 | P124/FIP49 | JOG2 | I | JOG input 2 |
| 51 | P123/FIP48 | DSLTL | O | Selector output Count-up (DSRT:L,DSLTL:H) Count-down (DSRT:H,DSLTL:L) |
| 52 | P122/FIP47 | DSRTL | O | |
| 53 | P111/FIP38 | Not used | O | Open |
| 58 | P114/FIP41 | | | |
| 59 | P113/FIP40 | PLED | O | Senser output for disc detection |
| 60 | P112/FIP39 | STBL | O | STANDBY-LED |
| 61 | P111/FIP38 | Not used | O | Open |
| 64 | P64/FIP35 | | | |
| 65 | P105/FIP34 | KD0 | I | Key data input |
| 66 | | KD1 | I | |
| 67 | | KD2 | I | |
| 68 | | KD3 | I | |
| 69 | | KD4 | I | |
| 70 | P100/FIP29 | KD5 | I | |
| 71 | P97/FIP28 | Not used | O | Not used |
| 72 | P96/FIP27 | Not used | O | Not used |
| 73 | P95/FIP260 | ST | O | Segment output for FL drive |
| 78 | P90/FIP21 | SM | O | |
| 79 | VLOAD | VLOAD | - | -26V |
| 80 | P87/FIP20 | SK | O | Segment output for FL drive |
| 89 | | /FIP11 | SA | |
| 90 | FIP10 | G1 | O | DIGIT output for FL drive |
| 100 | FIP0 | G11 | | |

■ CXD2587Q (IC301: MAIN BOARD ASSY)

● Decoder

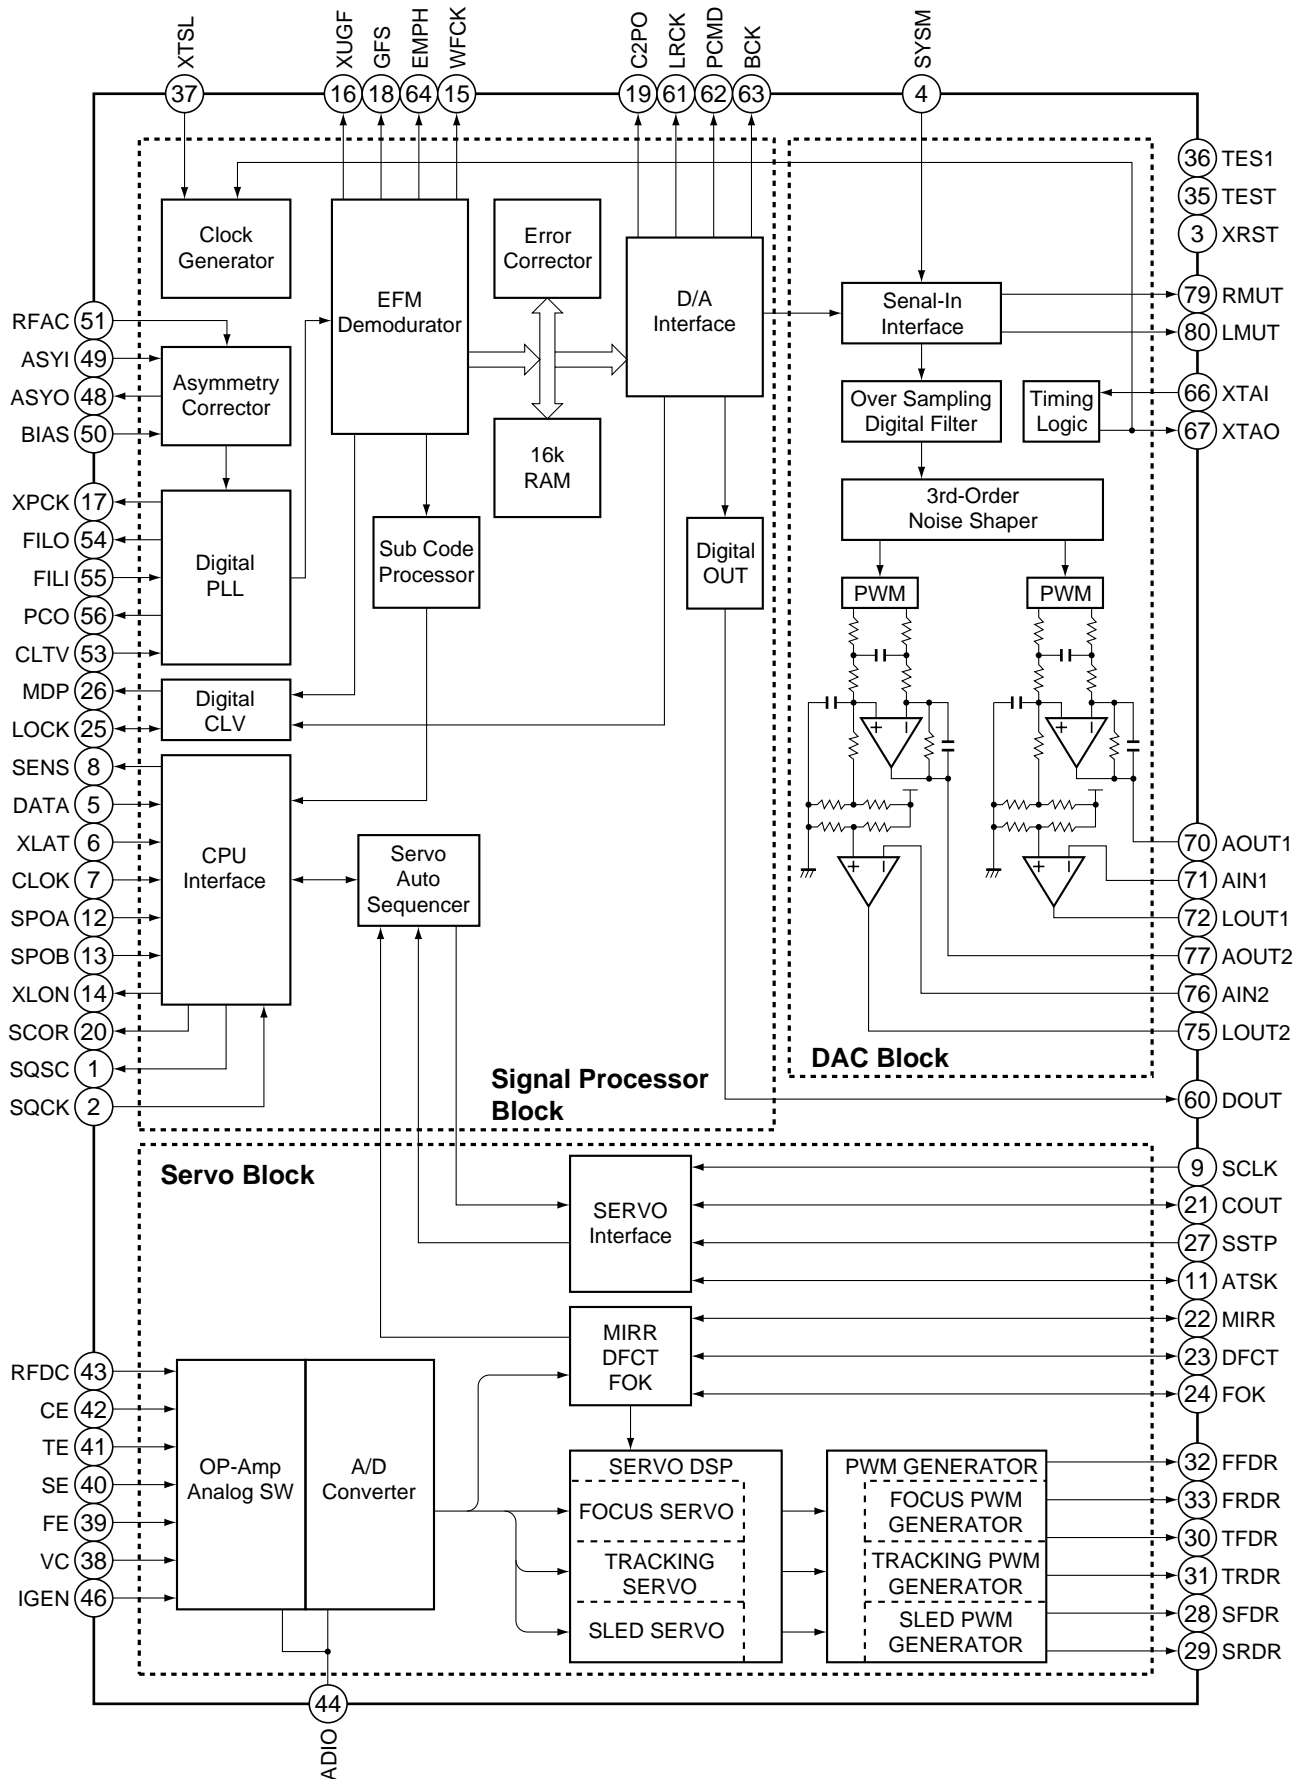

●Pin Function

| iNo. | Pin Name | I/O | Function | No. | Pin Name | I/O | Function |
|------|----------|-----|---|-----|----------|-----|--|
| 1 | SQSO | O | SubQ 80-bit, PCM peak and level data output CD TEXT data output | 41 | TE | I | Tracking error input |
| 2 | SQCK | I | Clock input for SQSO readout | 42 | CE | I | Center servo analog input |
| 3 | XRST | I | System reset Reset when "L" | 43 | RFDC | I | RF signal input |
| 4 | SYSM | I | Mute input Mute when "H" | 44 | ADIO | O | OP amplifier output |
| 5 | DATA | I | Serial data input from CPU | 45 | AVss0 | - | Analog GND |
| 6 | XLAT | I | Latch input from CPU Serial data is latched at the falling edge. | 46 | IGEN | I | Constant current input for OP amplifier |
| 7 | CLOK | I | Serial data transfer clock input from CPU | 47 | AVdd0 | - | Analog power supply |
| 8 | SENS | O | SENS output to CPU | 48 | ASYO | O | EFM full-swing output ("L"=VSS, "H"=VDD) |
| 9 | SCLK | I | Clock input for SENS serial-data readout | 49 | ASYI | I | Asymmetry compare voltage input |
| 10 | Vdd | - | Digital power supply | 50 | BIAS | I | Constant current input of the asymmetry circuit |
| 11 | ATSK | I/O | Input and output for anti-shock | 51 | RFAC | I | EFM signal input |
| 12 | SPOA | I | Microcomputer extended interface (input A) | 52 | AVss3 | - | Analog GND |
| 13 | SPOB | I | Microcomputer extended interface (input B) | 53 | CLTV | I | VCO control voltage input for master |
| 14 | XLON | O | Microcomputer extended interface (output) | 54 | FIL0 | O | Filter output for master PLL (Slave=digital PLL) |
| 15 | WFCK | O | WFCK output | 55 | FIL1 | I | Filter input for master PLL |
| 16 | XUGF | O | XUGF output MNT1 and RFCK output by switching the command. | 56 | PCO | O | Charge pump output for master PLL |
| 17 | XPCK | O | XPLCK output MNT0 output by switching the command. | 57 | AVdd3 | - | Analog power supply |
| 18 | GFS | O | GFS output MNT3 and XRAOF output by switching the command. | 58 | Vss | - | Digital GND |
| 19 | C2PO | O | C2PO output GTOP output by switching the command. | 59 | Vdd | - | Digital power supply |
| 20 | SCOR | O | Outputs "H" when either subcode sync. S0 or S1 is detected. | 60 | DOUT | O | DIGITAL OUT output |
| 21 | COUT | I/O | Input and output of track-number count signal | 61 | LRCK | O | D/A interface LR clock output f=Fs |
| 22 | MIRR | I/O | Mirror signal input and output | 62 | PCMD | O | D/A interface Serial data output (two's complement, MSB first) |
| 23 | DFCT | I/O | Defect signal input and output | 63 | BCK | O | D/A interface Bit clock output |
| 24 | FOK | I/O | Focus OK signal input and output | 64 | EMPH | O | Outputs "H" when the playback disc has emphasis, and "L" when there is no emphasis. |
| 25 | LOCK | I/O | GFS is sampled at 460Hz; when GFS is "H", this pin outputs "H". If GFS is "L" eight consecutive samples, this pin outputs "L". Input when LKIN="H". | 65 | XVdd | - | Power supply for master clock |
| 26 | MDP | O | Servo control output of spindle motor | 66 | XTAI | I | Crystal oscillation circuit input Input the external master clock via this pin. |
| 27 | SSTP | I | Detection signal input of disc innermost | 67 | XTAO | O | Crystal oscillation circuit output |
| 28 | SFDR | O | Sled drive output | 68 | XVss | - | GND for master clock |
| 29 | SRDR | O | | 69 | AVdd1 | - | Analog power supply |
| 30 | TFDR | O | Tracking drive output | 70 | AOUT1 | O | L ch analog output |
| 31 | TRDR | O | | 71 | AIN1 | I | L ch OP amp. input |
| 32 | FFDR | O | Focus drive output | 72 | LOUT1 | O | L ch LINE output |
| 33 | FRDR | O | | 73 | AVss1 | - | Analog GND |
| 34 | Vss | - | Digital GND | 74 | AVss2 | - | Analog GND |
| 35 | TEST | I | TEST pin : normally GND | 75 | LOUT2 | O | R ch LINE output |
| 36 | TEST | I | | 76 | AIN2 | I | R ch OP amp. input |
| 37 | XTSL | I | Crystal selector input "L":16.9344MHz, "H":33.8688MHz | 77 | AOUT2 | O | R ch analog output |
| 38 | VC | I | Center voltage input | 78 | AVdd2 | - | Analog power supply |
| 39 | FE | I | Focus error signal input | 79 | RMUT | O | R ch zero detection flag |
| 40 | SE | I | Sled error signal input | 80 | LMUT | O | L ch zero detection flag |

Notes)


- PCMD is an MSB first, two's complement output.
- GTOP is used to monitor the frame sync protection status. (High:sync protection window released)
- XUGF is the negative pulse for the frame sync derived from the EFM signal. It is the signal before sync protection.
- XPCK is the inverse of the EFM PLL clock. The PLL is designed so that the falling edge of XPLCK and the EFM signal transition point coincide.
- GFS goes high when the frame sync and the insertion protection timing match.
- RFCK is derived with the crystal accuracy. This signal has a cycle of 136μs.
- C2PO represents the data error status.
- XROF is generated when the 16K RAM exceeds the ±4F jitter margin.

7.2.2 DISPLAY


■ PEL1098 (V701: DISPLAY BOARD ASSY)

● Vacuum Fluorescent Display

● Pin Assignment

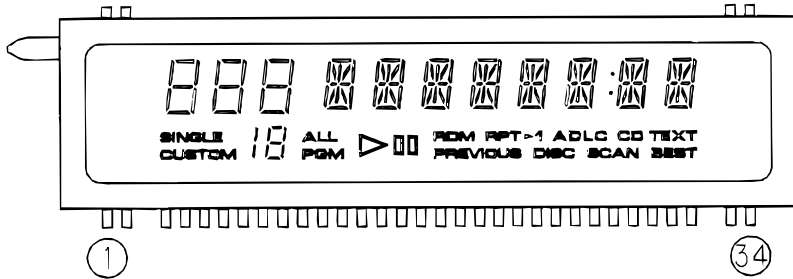

● Grid Assignment

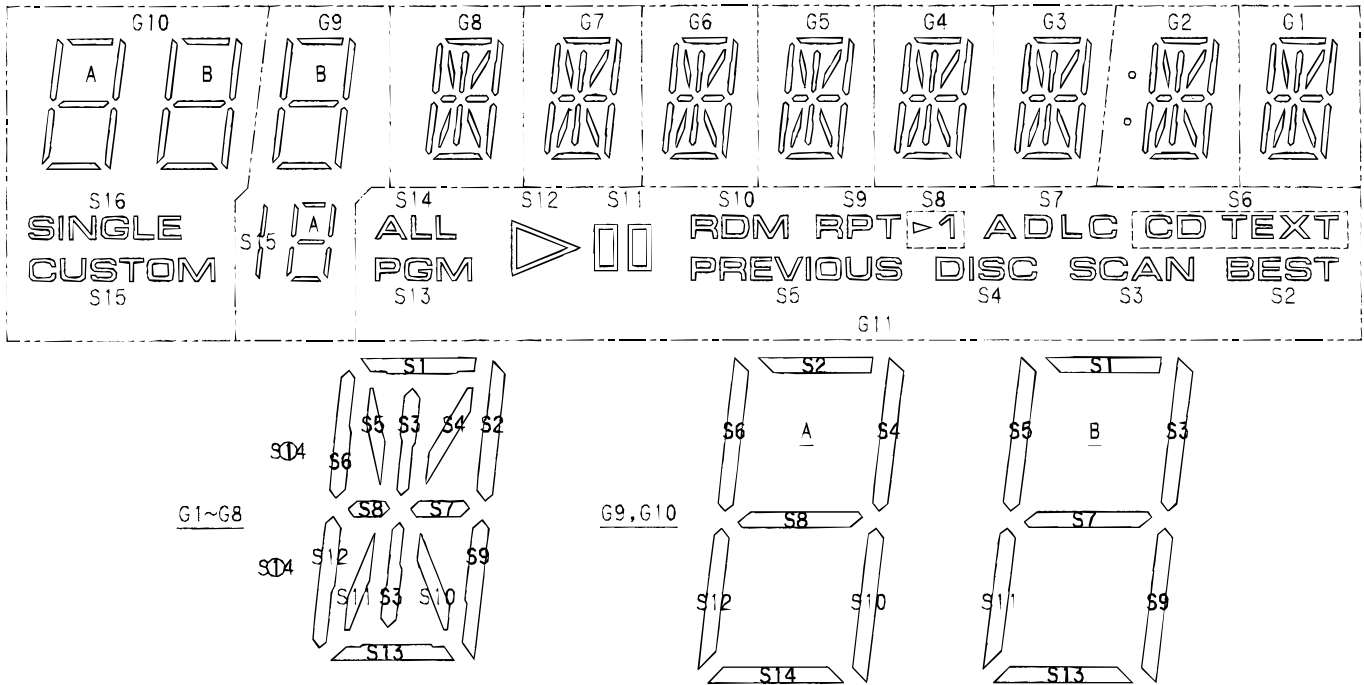

● Pin Connection

PIN ASSIGNMENT


| | | | | | | | | | | | | | | | | | |
|------------|-----|-----|-----|-----|-----|----|----|----|----|----|----|----|----|----|----|-----|-----|
| Pin No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 |
| Assignment | F1 | F1 | NP | G11 | G10 | G9 | G8 | G7 | G6 | G5 | G4 | G3 | G2 | G1 | NL | S16 | S15 |
| Pin No. | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 |
| Assignment | S14 | S13 | S12 | S11 | S10 | S9 | S8 | S7 | S6 | S5 | S4 | S3 | S2 | S1 | NP | F2 | F2 |

F1,F2:Filament G1~G11:Grid S1~S16:Anode NP:No Pin NL:No Lead


8. PANEL FACILITIES AND SPECIFICATIONS

■ PANEL FACILITIES

FRONT PANEL

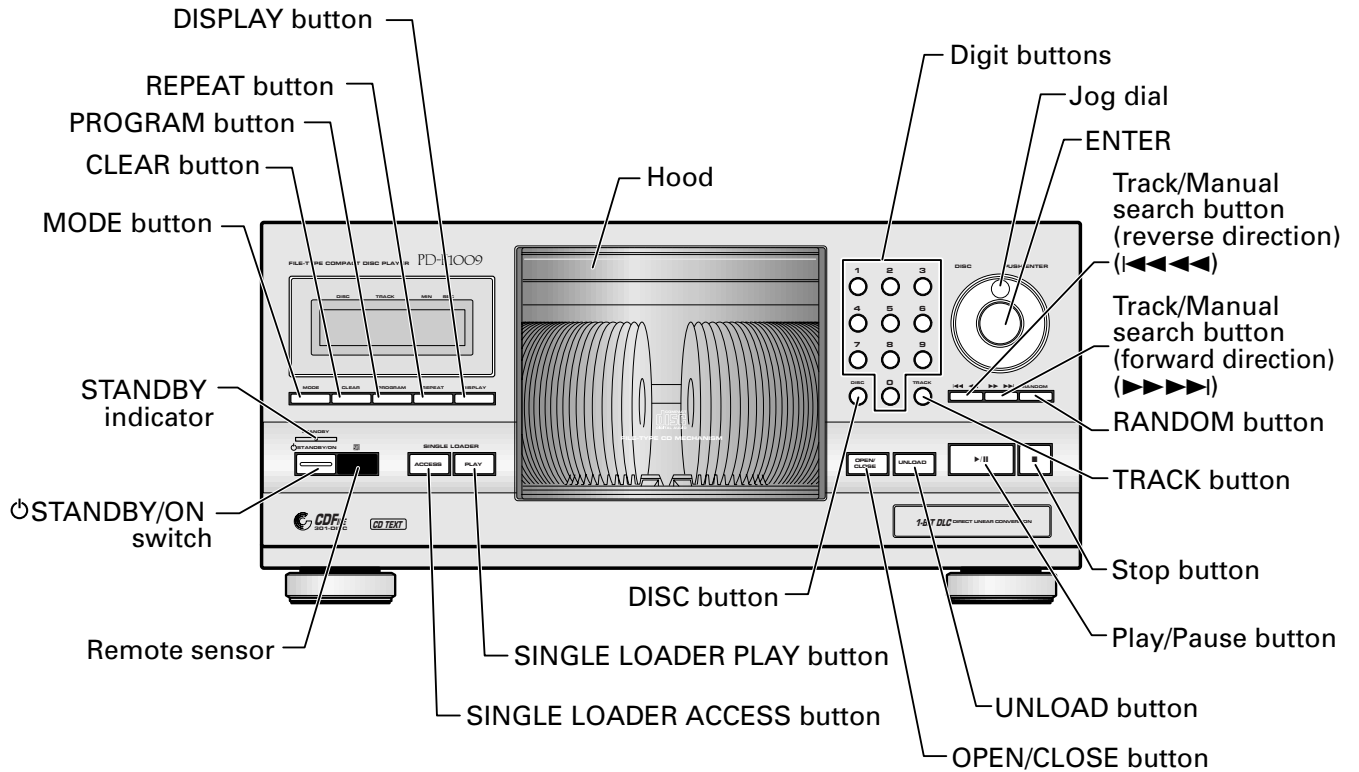

DISPLAY

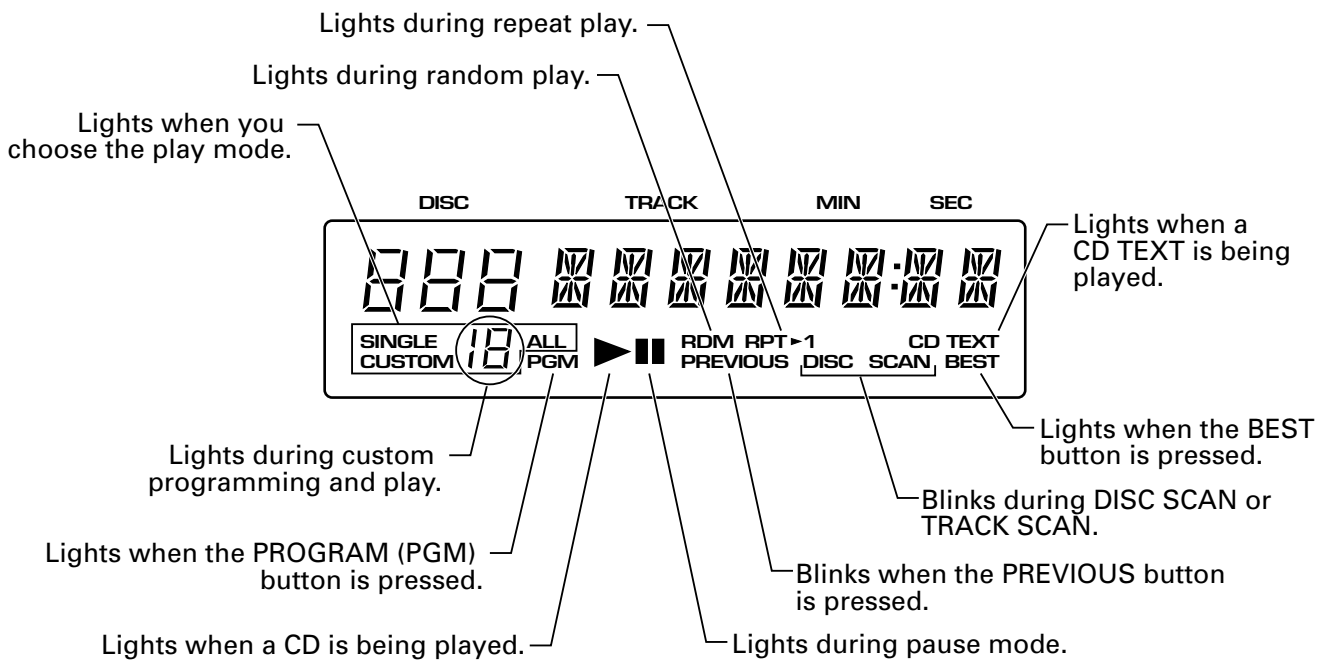

■ SPECIFICATIONS

1. General

| | |
|---|---|
| Type | Compact disc digital audio system |
| Power requirements (KU/CA Model) | AC 120V, 60 Hz |
| Power requirements (MY Model) | AC 220V-230V, 50/60 Hz |
| Power consumption | 12 W |
| Power consumption in standby mode | 1 W |
| Operating temperature | +5°C – +35°C (+41°F – +95°F) |
| Weight (without package) | 7.5 kg (16 lb 9 oz.) |
| External dimensions | 420(W) X 433(D) X 193(H) mm (16-9/16(W) X 17-1/16(D) X 7-5/8(H) in.) |

2. Audio section

| | |
|---|------------------------|
| Frequency response | 2 Hz - 20 kHz |
| S/N ratio (KU/CA Model) | 98 dB or more (EIAJ) |
| S/N ratio (MY Model) | 105 dB or more (EIAJ) |
| Dynamic range (KU/CA Model) | 96 dB or more (EIAJ) |
| Dynamic range (MY Model) | 98 dB or more (EIAJ) |
| Harmonic distortion (KU/CA Model) | 0.003 % or less (EIAJ) |
| Harmonic distortion (MY Model) | 0.002 % or less (EIAJ) |
| Level difference between channels | 1.0 dB or less (EIAJ) |
| Output voltage | 2 Vrms (EIAJ) |

Channels2-channel (stereo)

3. Input/Output terminal

Audio line output
Control input jack
Control output jack (KU/CA Model)
Optical digital output jack


4. Accessories

| | |
|--|---|
| • Remote control unit | 1 |
| • Size AA/R6P dry cell batteries | 2 |
| • Audio cable | 1 |
| • Control cable (KU/CA Model) | 1 |
| • Warranty card | 1 |
| • Operating instructions | 1 |


Note!!

Specifications and design subject to possible modification without notice, due to improvements.


Accessories

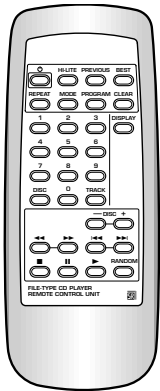


Remote control unit x 1
(PWW1168)

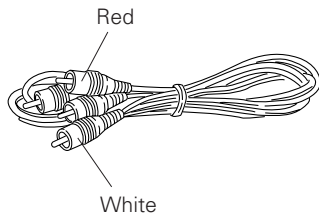

Audio cable x 1
(PDE1248) (L=1 m)

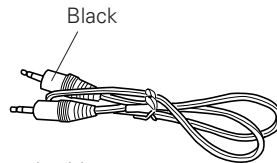

Control cable x 1
(PDE1247) (L=1 m)

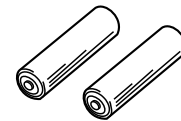

Size AA/R6P dry cell
batteries x 2

Other included items

- Warranty card
- Operating Instructions

Pioneer

Service Manual

ORDER NO.
RRV2489

FILE-TYPE COMPACT DISC PLAYER

PD-F1009-G

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

| Type | Model | Power Requirement | Remarks |
|------|------------|-------------------|---------|
| | PD-F1009-G | | |
| LB | ○ | AC 110V | |

● This service manual should be used together with the following manual(s):

| Model No. | Order No. | Remarks |
|----------------|-----------|---------|
| PD-F1009/KU/CA | RRV2262 | |

1. CONTRAST OF MISCELLANEOUS PARTS

- NOTES :
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to ∇ mark on the product are used for disassembly.
 - Reference Nos. indicate the pages and Nos. in the service manual for the base model.

■ CONTRAST TABLE

PD-F1009-G/LB and PD-F1009/KU/CA are constructed the same except for the following:

| Ref. No. | Mark | Symbol and Description | Part No. | | Remarks |
|----------|------|---------------------------------|-----------------|----------------|-----------------------|
| | | | PD-F1009 /KU/CA | PD-F1009-G /LB | |
| P5- 3 | NSP | PACKING Packing Case | PHG2397 | PHG2448 | * : Local procurement |
| P5- 6 | | Operating Instructions(English) | PRB1300 | Not used | |
| P5- 6 | | Operating Instructions | Not used | ———— * | |
| P5-12 | NSP | Warranty Card | ARY7045 | Not used | |
| | | EXTERIOR | | | |
| P7- 8 | | Bonnet Case | PYY1255 | PYY1272 | |
| P7- 9 | | Rear Base | PNA2529 | PNA2574 | |
| P7-10 | | Insulator | AMR7198 | PNW2766 | |
| P7-12 | | 65 Label | ARW7050 | Not used | |
| P7-19 | | Caution Label | VRW1817 | PRW1594 | |
| P7-21 | | Screw | FBT40P080FZK | FBT40P080FNI | |
| | | FRONT PANEL ASSY | | | |
| P13- 5 | | MODE Button | PAC1994 | PAC2043 | |
| P13- 6 | | PLAY Button | PAC1995 | PAC2044 | |
| P13- 7 | | Jog Dial | PAC1882 | PAC1968 | |
| P13- 8 | | ENTER Button | PAC1883 | PAC1969 | |
| P13- 9 | | Name Plate | PAM1776 | PAM1779 | |
| P13-10 | | Display Window | PAM1822 | PAM1823 | |
| P13-16 | | Operation Panel | PNW2958 | PNW3014 | |
| P13-23 | | Power Button | VNK4527 | PAC2045 | |
| P13-24 | | Rubber Sheet | AEB1111 | Not used | |