

Service Manual

CIRCUIT DESCRIPTIONS REPAIR & ADJUSTMENTS



THE PHOTO SHOWS SG-750

GRAPHIC EQUALIZER

SG-750 SG-705

MODEL SG-750 COMES IN FIVE VERSIONS DISTINGUISHED AS FOLLOWS:

| Type | Voltage | Remarks |
|------|---------------------------------------|--------------------------|
| KU | AC120V only | U.S.A model |
| HEM | AC220V, 240V (Switchable) | European continent model |
| S | AC110V, 120V, 220V, 240V (Switchable) | General export model |
| S/G | AC110V, 120V, 220V, 240V (Switchable) | U.S. Military model |
| YP | AC240V only | Australia model |

- This service manual is applicable to the SG-750/HEM, KU, S, S/G, YP and SG-705/S.
- As to the SG-750/KU, S, S/G, YP, please refer to pages 30, 31.
- As to the SG-705/S, please refer to page 32.
- SG-705 is the same as the SG-750 except for the design (color) only.
- Ce manuel d'instruction se réfère au mode de réglage, en français.
- Este manual de servicio trata del metodo ajuste escrito en español.

CONTENTS

| | | | |
|---------------------------------|----|---|----|
| 1. SAFETY INFORMATION | 2 | 9. P.C. BOARDS CONNECTION DIAGRAM | 18 |
| 2. SPECIFICATIONS | 3 | 10. SCHEMATIC DIAGRAM | 21 |
| 3. FRONT PANEL FACILITIES | 4 | 11. ELECTRICAL PARTS LIST | 25 |
| 4. PARTS LOCATION | 5 | 12. ADJUSTMENTS | 27 |
| 5. EXPLODED VIEW | 7 | RÉGLAGE | 28 |
| 6. PACKING | 9 | AJUSTE | 29 |
| 7. BLOCK DIAGRAM | 10 | 13. FOR KU, S, S/G AND YP TYPES | 30 |
| 8. CIRCUIT DESCRIPTION | 12 | 14. FOR SG-705/S TYPE | 32 |

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
 PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
 TEL: (800) 421-1404, (800) 237-0424

PIONEER ELECTRONIC (EUROPE) N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775-2808
 PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia
 TEL: (03) 580-9911


1. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

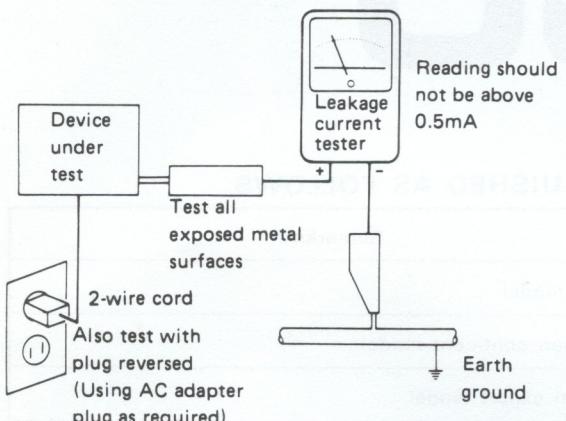

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

QUESTIONNAIRE

MODEL _____

One Model per questionnaire

Dear Servicer,

Thank you for your cooperation in the post-sale service of Pioneer products.

This questionnaire is used as a tool to improve the serviceability of our products and service manuals. Please evaluate this model and service manual by answering the following questions. Your ideas may be realized in our future products. Your answers will be appreciated. Thank you.

PIONEER ELECTRONIC CORP.

T. Nakagawa, Manager, Service Section, International Division

| 1. SERVICING EVALUATION | | Circle applicable number: | | Good | Fair | Poor |
|-----------------------------|--|---------------------------|--|------|------|---------|
| a. Disassembly/Re-assembly: | | | | 1 | 2 | 3 *4 *5 |
| b. Circuit Checks: | | | | 1 | 2 | 3 *4 *5 |
| c. Replacement of Parts: | | | | 1 | 2 | 3 *4 *5 |
| d. Adjustment (s): | | | | 1 | 2 | 3 *4 *5 |

* If (4) or (5) was circled, please be specific.

e. Your advice, opinion or ideas related to servicing this product.

2. SERVICE MANUAL EVALUATION

a. Circuit & Mechanism Description

b. Circuit Diagram

3. OTHER

Please describe other areas of servicing which you may find difficult.

Completed by :

Date :

Company Name :

Address :

City/State/Zip :

Please send this form filled to the distributor in your country.

2. SPECIFICATIONS

Graphic Equalizer Section

Equalizer Range

| | |
|---|-------------|
| Individual channel controls | ± 10 dB |
| Center frequencies | |
| 32 Hz, 64 Hz, 125 Hz, 250 Hz, 500 Hz, 1 kHz, 2 kHz, 4 kHz, 8 kHz, 16 kHz | |

Total Harmonic Distortion

| | |
|---|--------|
| (All controls at flat position, 2 V output) 1 kHz | 0.003% |
| 20 Hz to 20 kHz | 0.003% |

Gain (all controls at flat position)

0 dB

Maximum Output Voltage

| | |
|--|-----|
| 1 kHz, 0.01% THD, 50 k Ω RL | 6 V |
|--|-----|

Frequency Response

5 Hz to 100 kHz ± 0 dB

Signal-to-Noise Ratio

(IHF A network, short-circuited, 2V output) 116 dB

Input terminal (Sensitivity/Impedance)

| | |
|-----------------|----------------------|
| INPUT | 150 mV/50 k Ω |
| TAPE PLAY | 150 mV/50 k Ω |

Output terminal (Level/Impedance)

| | |
|-----------------|---------------------|
| OUTPUT | 150 mV/1 k Ω |
| TAPE REC. | 150 mV |

Spectrum Analyzer Section

Center frequencies

32 Hz, 64 Hz, 125 Hz, 250 Hz, 500 Hz, 1 kHz, 2 kHz, 4 kHz,
8 kHz, 16 kHz

Resolution

3 dB step, 8 point

Power Supply Section/Miscellaneous

Power Requirements

| | |
|---------------------|---|
| KU model | AC 120 Volts, 60 Hz |
| S, S/G models | \sim AC 110 V/120 V/220 V/240 V switchable, 50/60 Hz |

| | |
|-----------------|---------------------------------|
| YP model | 240 Volts \sim , 50/60 Hz |
| HEM model | a.c. 220 Volts \sim , 50/60Hz |

Power Consumption

| | |
|------------------|----------|
| Dimensions | 16 Watts |
|------------------|----------|

| | |
|--------------|-------------------------------|
| Weight | 420 (W) x 98 (H) x 266 (D) mm |
|--------------|-------------------------------|

| | |
|--|--|
| 16-9/16 (W) x 3-7/8 (H) x 10-1/2 (D) in. | |
|--|--|

| | |
|--------------|---------------------|
| Weight | 4.4 kg (9 lb 11 oz) |
|--------------|---------------------|

Furnished Parts


| | |
|---------------------------------------|---|
| Connection cords with pin plugs | 2 |
|---------------------------------------|---|

| | |
|------------------------------|---|
| Operating Instructions | 1 |
|------------------------------|---|

NOTE:

Specifications and design subject to possible modification without notice due to improvements.

3. FRONT PANEL FACILITIES

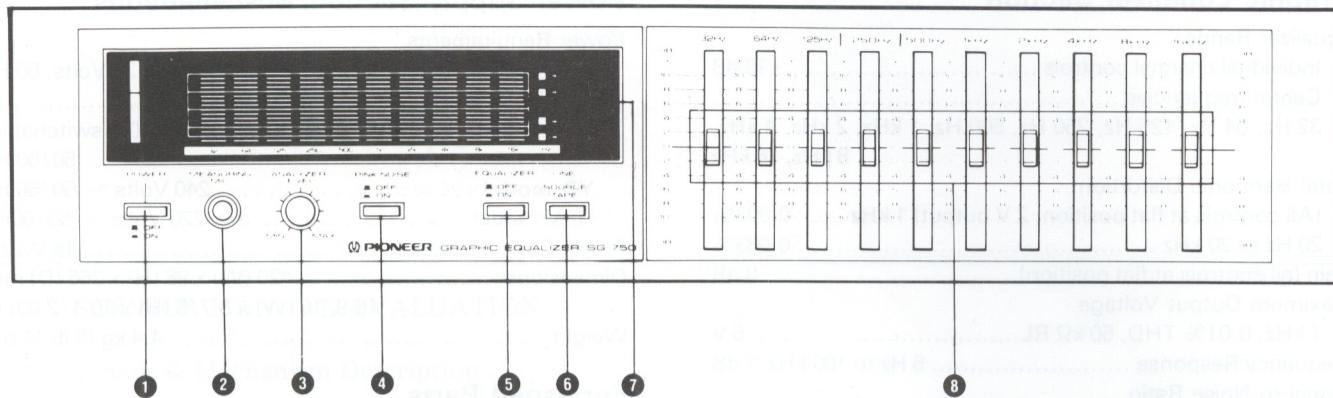

① POWER SWITCH

When this switch is set to the ON position, power is supplied to the unit's main circuits.

Disconnect the power cord from the power outlet when you do not plan to use the unit for a long period of time.

② MEASURING MIC JACK

Connect the room acoustics monitor microphone CM-75M to this jack. Plug the miniplug of the connecting cord into the back of the CM-75M, and the 6 mm standard plug into the MIC JACK of the unit. For microphone installation, refer to the operating instructions for the CM-75M.

③ ANALYZER LEVEL CONTROL

This control adjusts the sensitivity of the analyzer. Adjust as follows so that the amplitude of the analyzer indicator is satisfactory.

When measuring room acoustics

Adjust such that the average amplitude level is near 0 dB on the indicator.

When compensating for room acoustics, adjust the octave control such that the amplitude of the analyzer indicator is flat overall.

When compensating for the program source (broadcasts, records)

Adjust such that the overall amplitude is near 0 dB.

④ PINK NOISE SWITCH

Use this switch for measuring the room acoustics. When the CM-75M is connected and installed, and this switch is set to ON, a pink noise used for measurements is generated and emitted by the speakers. This noise is picked up by the microphone and displayed on the analyzer indicator.

The pink noise has flat characteristics over the entire frequency range, and the indicator therefore shows how this changes with the room conditions.

⑤ EQUALIZER SWITCH

This switch is pressed to compensate for the frequency response of the signals entering the EQUALIZER INPUT and TAPE PLAY terminals. The compensated signals are then output as the output signals from the EQUALIZER OUTPUT terminals, and the compensated signals are output from both the EQUALIZER OUTPUT terminals and TAPE REC terminals.

⑥ LINE (SOURCE/TAPE) SWITCH

Press this switch (TAPE position) when using a stereo component connected to the rear panel TAPE terminals. At all other times, ensure that the switch is at the released position (SOURCE position).

⑦ ANALYZER INDICATOR

Shows the variation of signal level over each frequency band by means of an F.L. tube.

This can be used to check frequencies during ordinary playback of the program source, or when measuring or compensating for room acoustics.

⑧ OCTAVE CONTROLS

Move these controls above or below the center (zero) position to boost or attenuate the corresponding frequency band. The ten frequency bands are centered at 32 Hz, 64 Hz, 125 Hz, 250 Hz, 500 Hz, 1 kHz, 2 kHz, 4 kHz, 8 kHz and 16 kHz.


The indicator of each control serves as a guideline for the changes in the frequency response.

4. PARTS LOCATION


NOTES:


- The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - For your Parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.
- ★★ GENERALLY MOVES FASTER THAN ★**
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Front Panel View

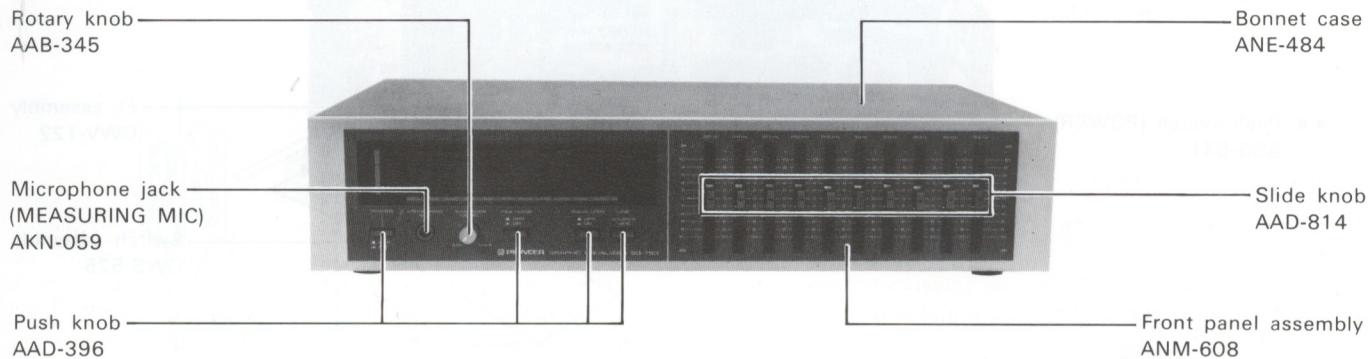

Front View with Panel Removed

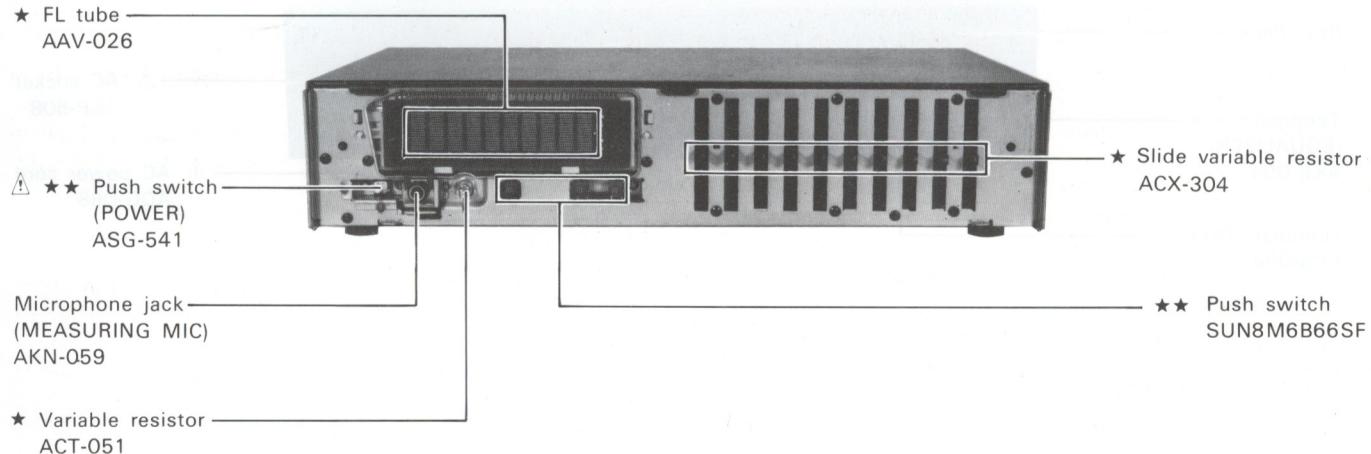


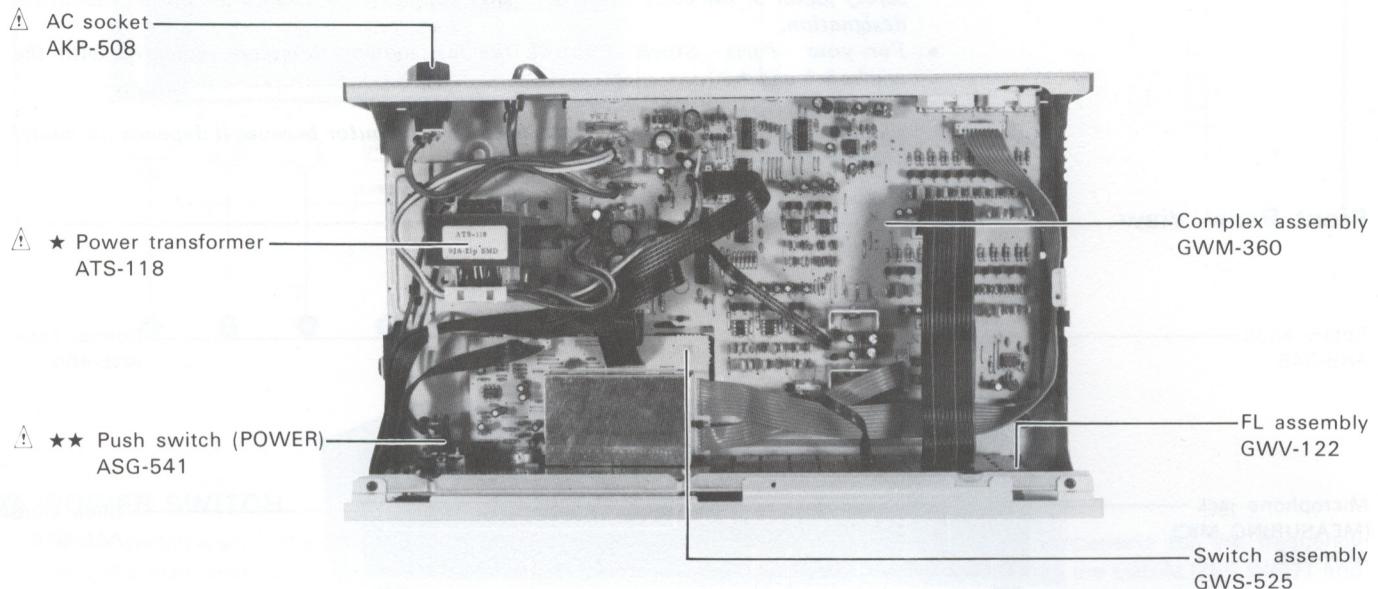Top View**Rear Panel View**

5. EXPLODED VIEW


8.1 OUTLINE OF SC-120

The SC-120 is a graphic equalizer mounted in a decorative case. After a new battery is inserted, distribution of power to each band from 50 Hz to 12,000 Hz is controlled by the frequency selector switch. Output level control can be adjusted to suit individual requirements. Connection of source terminals can be made by connecting the input jack to the output jack of the equipment to be connected.

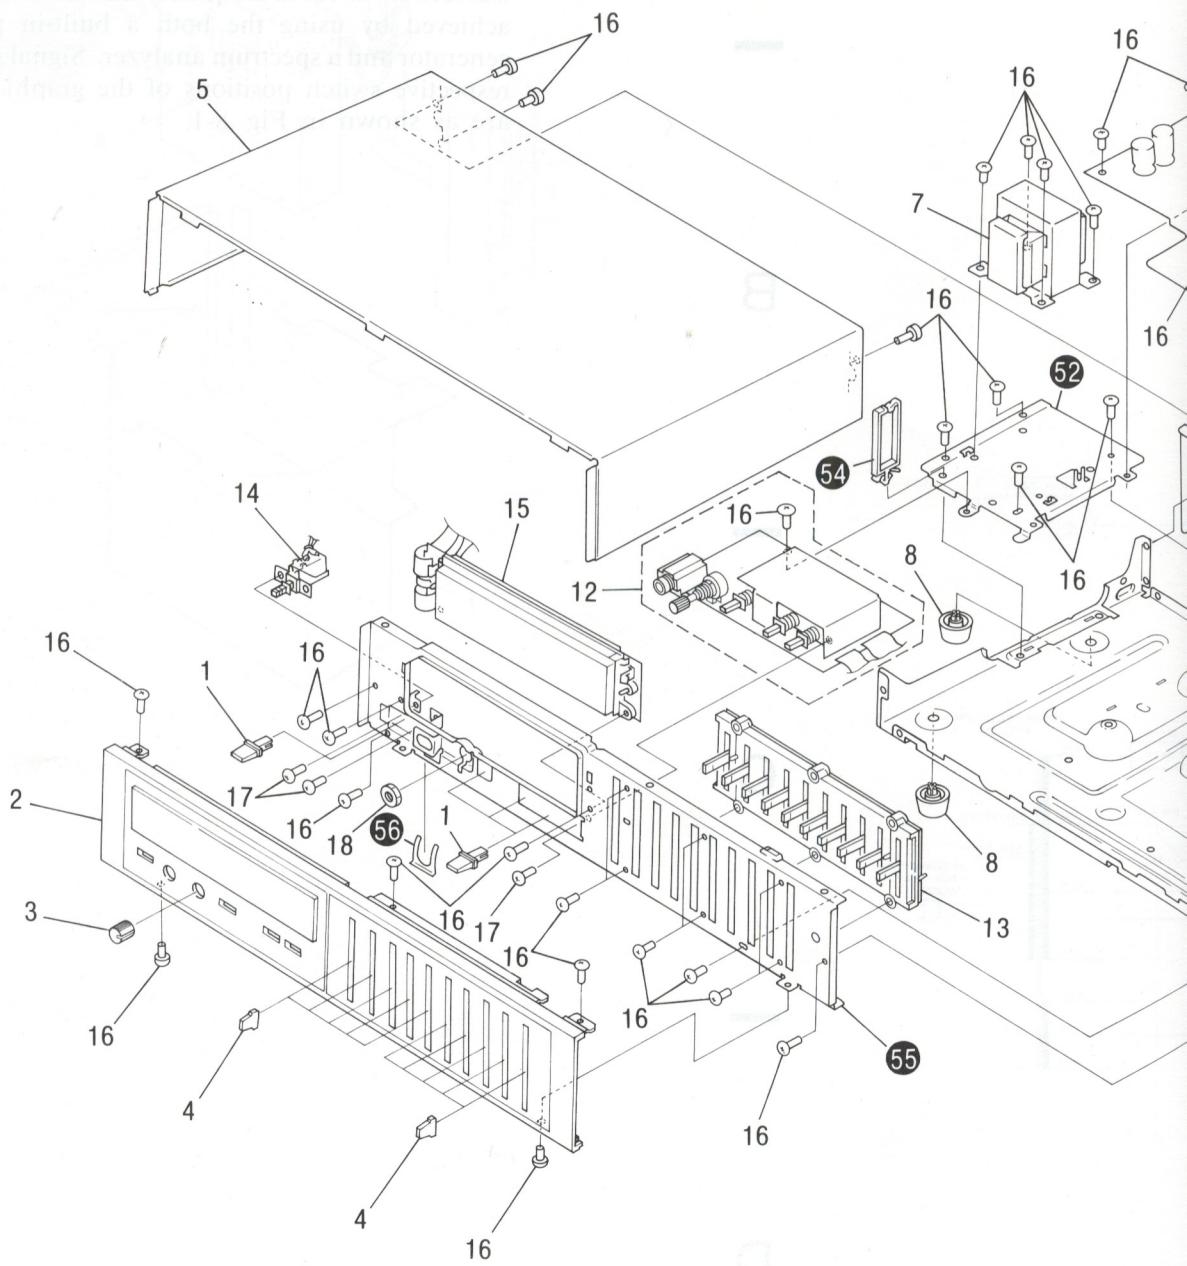

NOTES:


- *Parts without part number cannot be supplied.*
- *The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *For your Parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.*
- **★★ GENERALLY MOVES FASTER THAN ★**
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

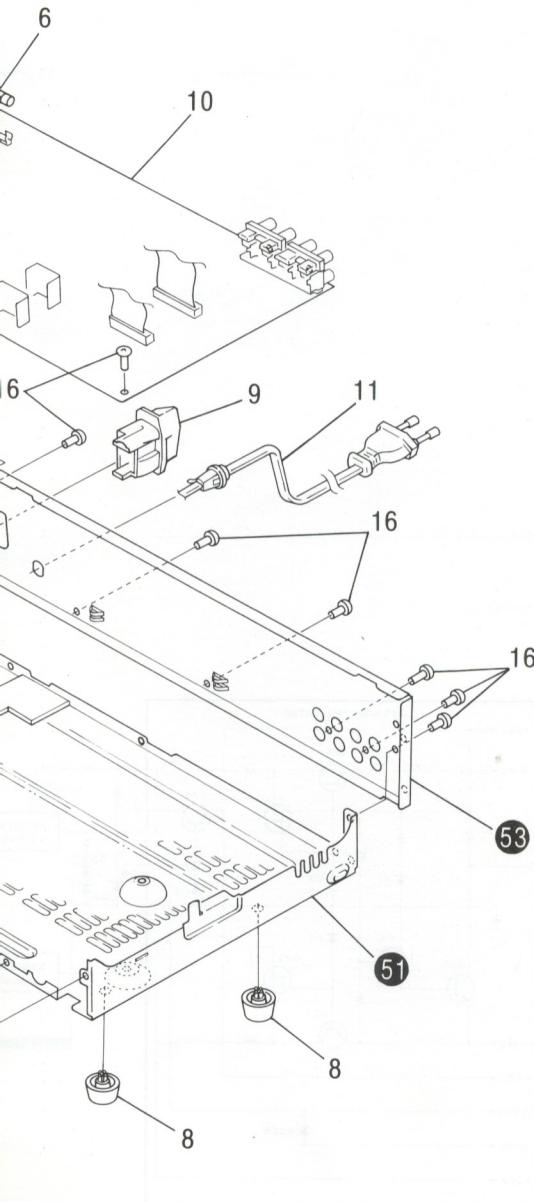

| <u>Mark</u> | <u>No.</u> | <u>Part No.</u> | <u>Description</u> |
|--|------------|-----------------|------------------------------|
| | 1. | AAD-396 | Push knob |
| | 2. | ANM-608 | Front panel assembly |
| | 3. | AAB-345 | Rotary knob |
| | 4. | AAD-814 | Slide knob assembly |
| | 5. | ANE-484 | Bonnet case |
|  ★★ | 6. | AEK-403 | Fuse (T2.5A) |
|  ★ | 7. | ATS-118 | Power transformer (220/240V) |
| | 8. | AEP-016 | Leg assembly |
|  | 9. | AKP-508 | AC socket |
| | 10. | GWM-360 | Complex assembly |
|  | 11. | ADG-068 | AC power cord |
| | 12. | GWS-525 | Switch assembly |
|  | 13. | ACX-304 | Slide variable resistor |
| ★★ | 14. | ASG-541 | Push switch (POWER) |
| | 15. | GWV-122 | FL assembly |
| | 16. | BBZ30P080FZK | Screw (3 x 8) |
| | 17. | VMZ30P060FMC | Screw (3 x 6) |
| | 18. | NK90FUC | Nut |
| | 51. | | Chassis |
| | 52. | | Transformer frame |
| | 53. | | Rear panel |
| | 54. | | Cable holder |
| | 55. | | Panel stay |
| | 56. | | Mounting plate |


6. PACKING

| Mark | No | Part No | Description |
|------|----|---------|--|
| | 1 | AHE-347 | Packing case |
| | 2 | AHA-340 | Front rear pad |
| | 3 | ADE-073 | Pin plug relay cord |
| | 4 | ARE-103 | Operating instructions (English, German, French and Italian) |

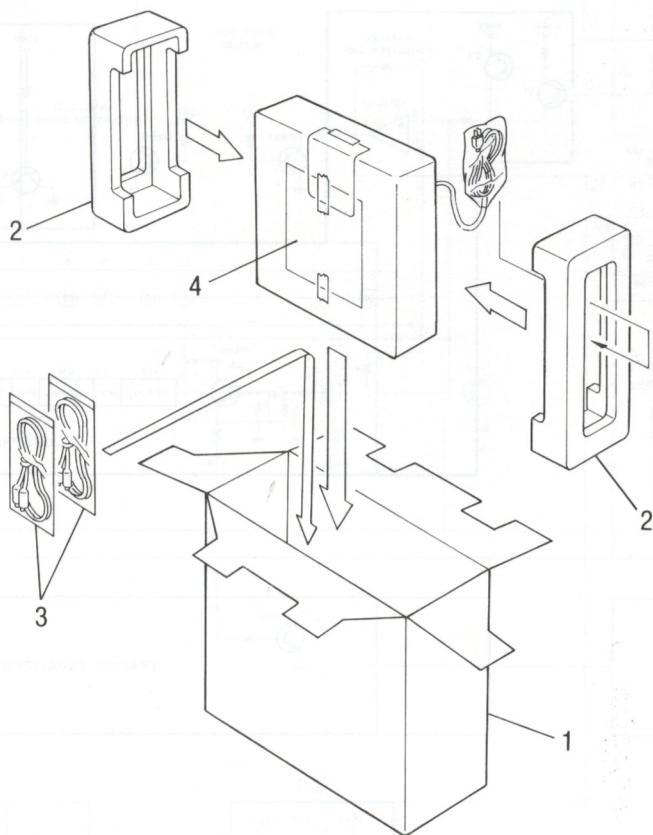


7. BLOCK DIAGRAM


A

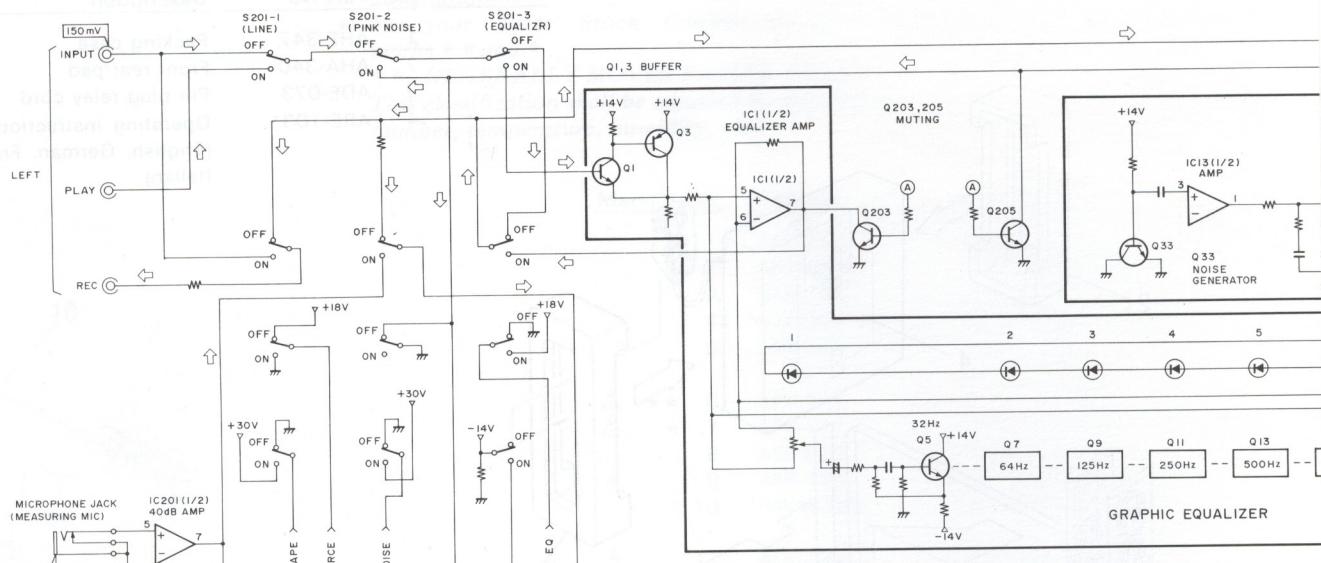




B

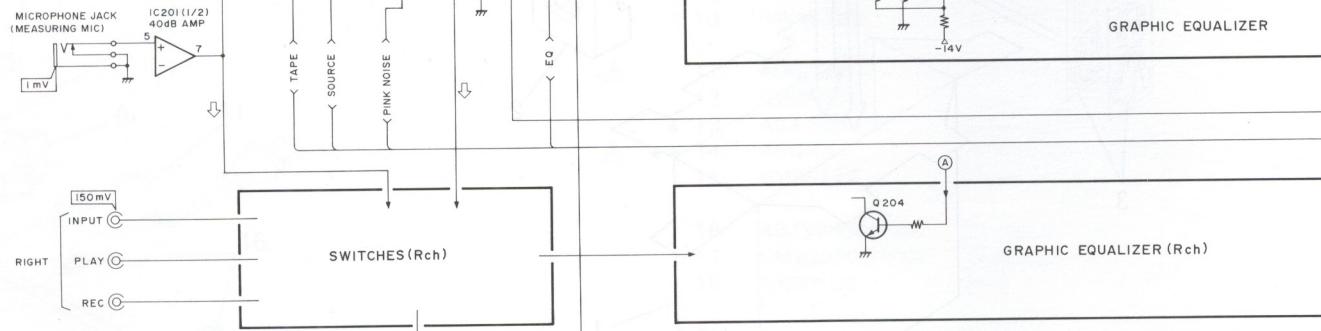

C

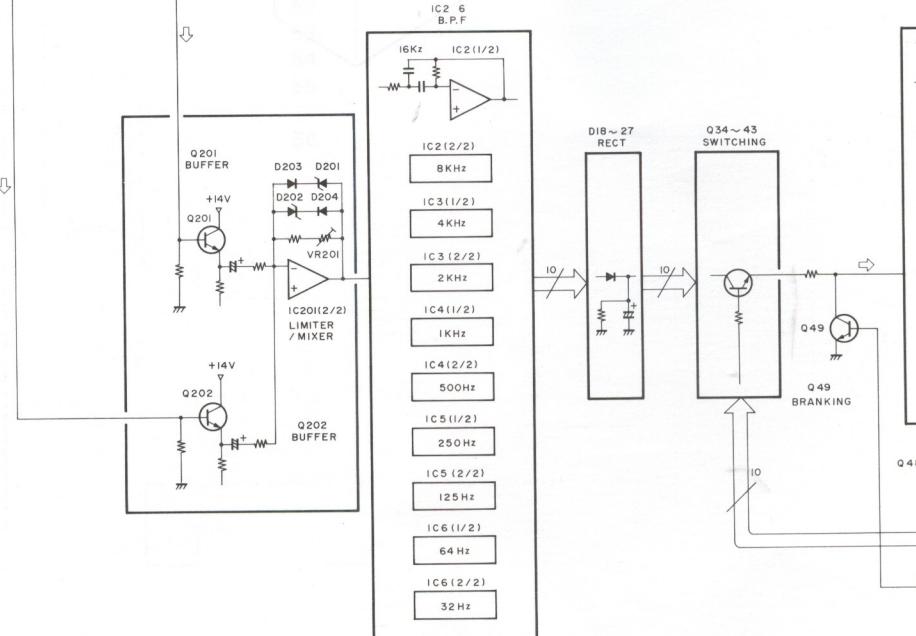

D

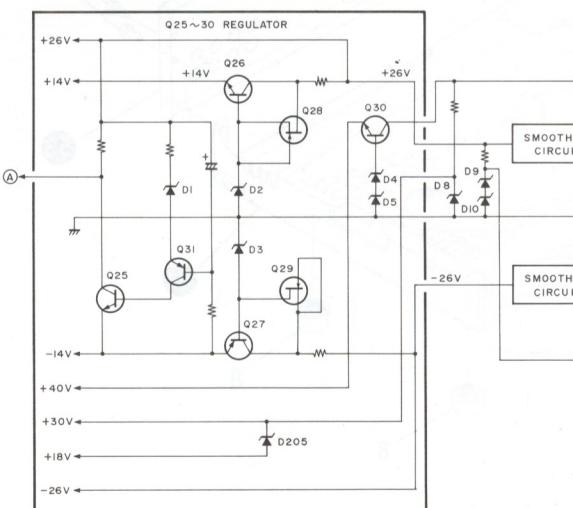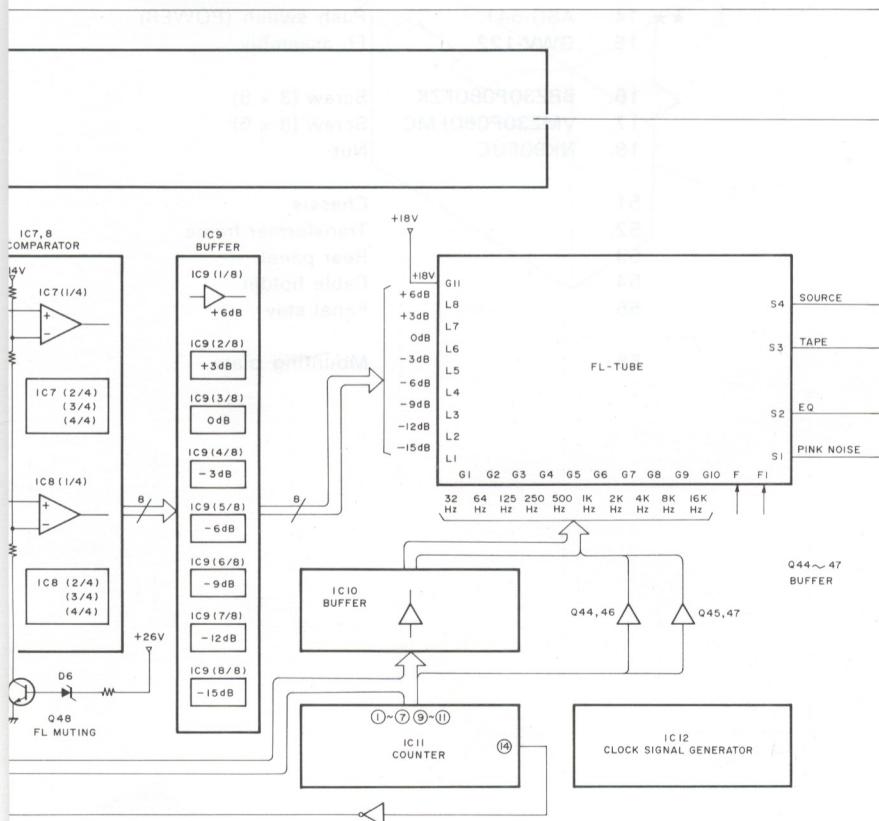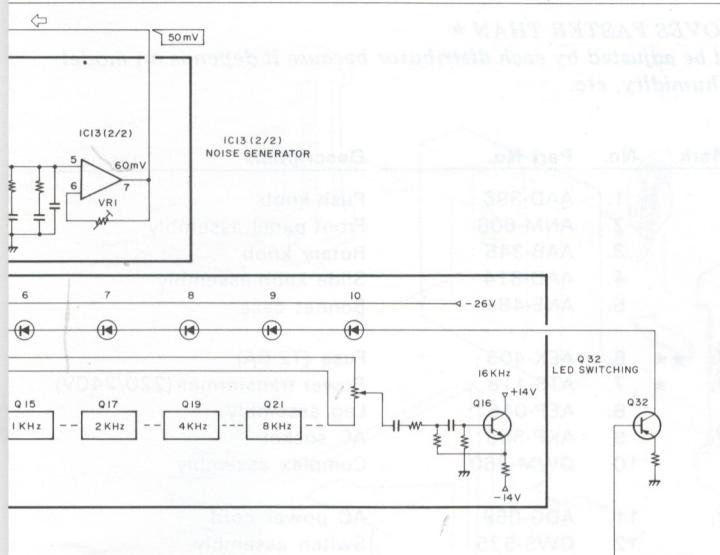

8. CIRCUIT DESCRIPTION


8.1 OUTLINES OF SG-750

The SG-750 is a graphic equalizer, mounting a spectrum analyzer which is used to observe frequency distribution of signals. Point frequencies of this equalizer are 10 frequencies such as, 32 Hz, 64 Hz, 125 Hz, 250 Hz, 500 Hz, 1kHz, 2kHz, 4kHz, 8kHz and 16kHz. Output level variable range of the equalizer is $\pm 10\text{dB}$ with L and R interlocked. Correction of room frequency characteristics can be achieved by using the both a built-in pink noise generator and a spectrum analyzer. Signal route of the respective switch positions of the graphic equalizer are as shown in Fig. 8-1.


A



B

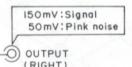

C

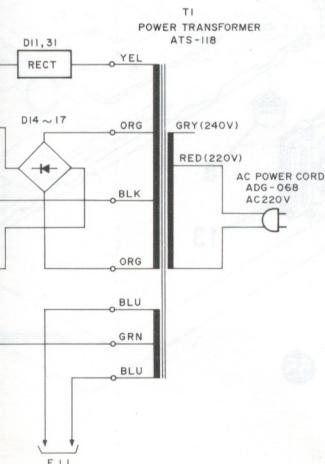

D

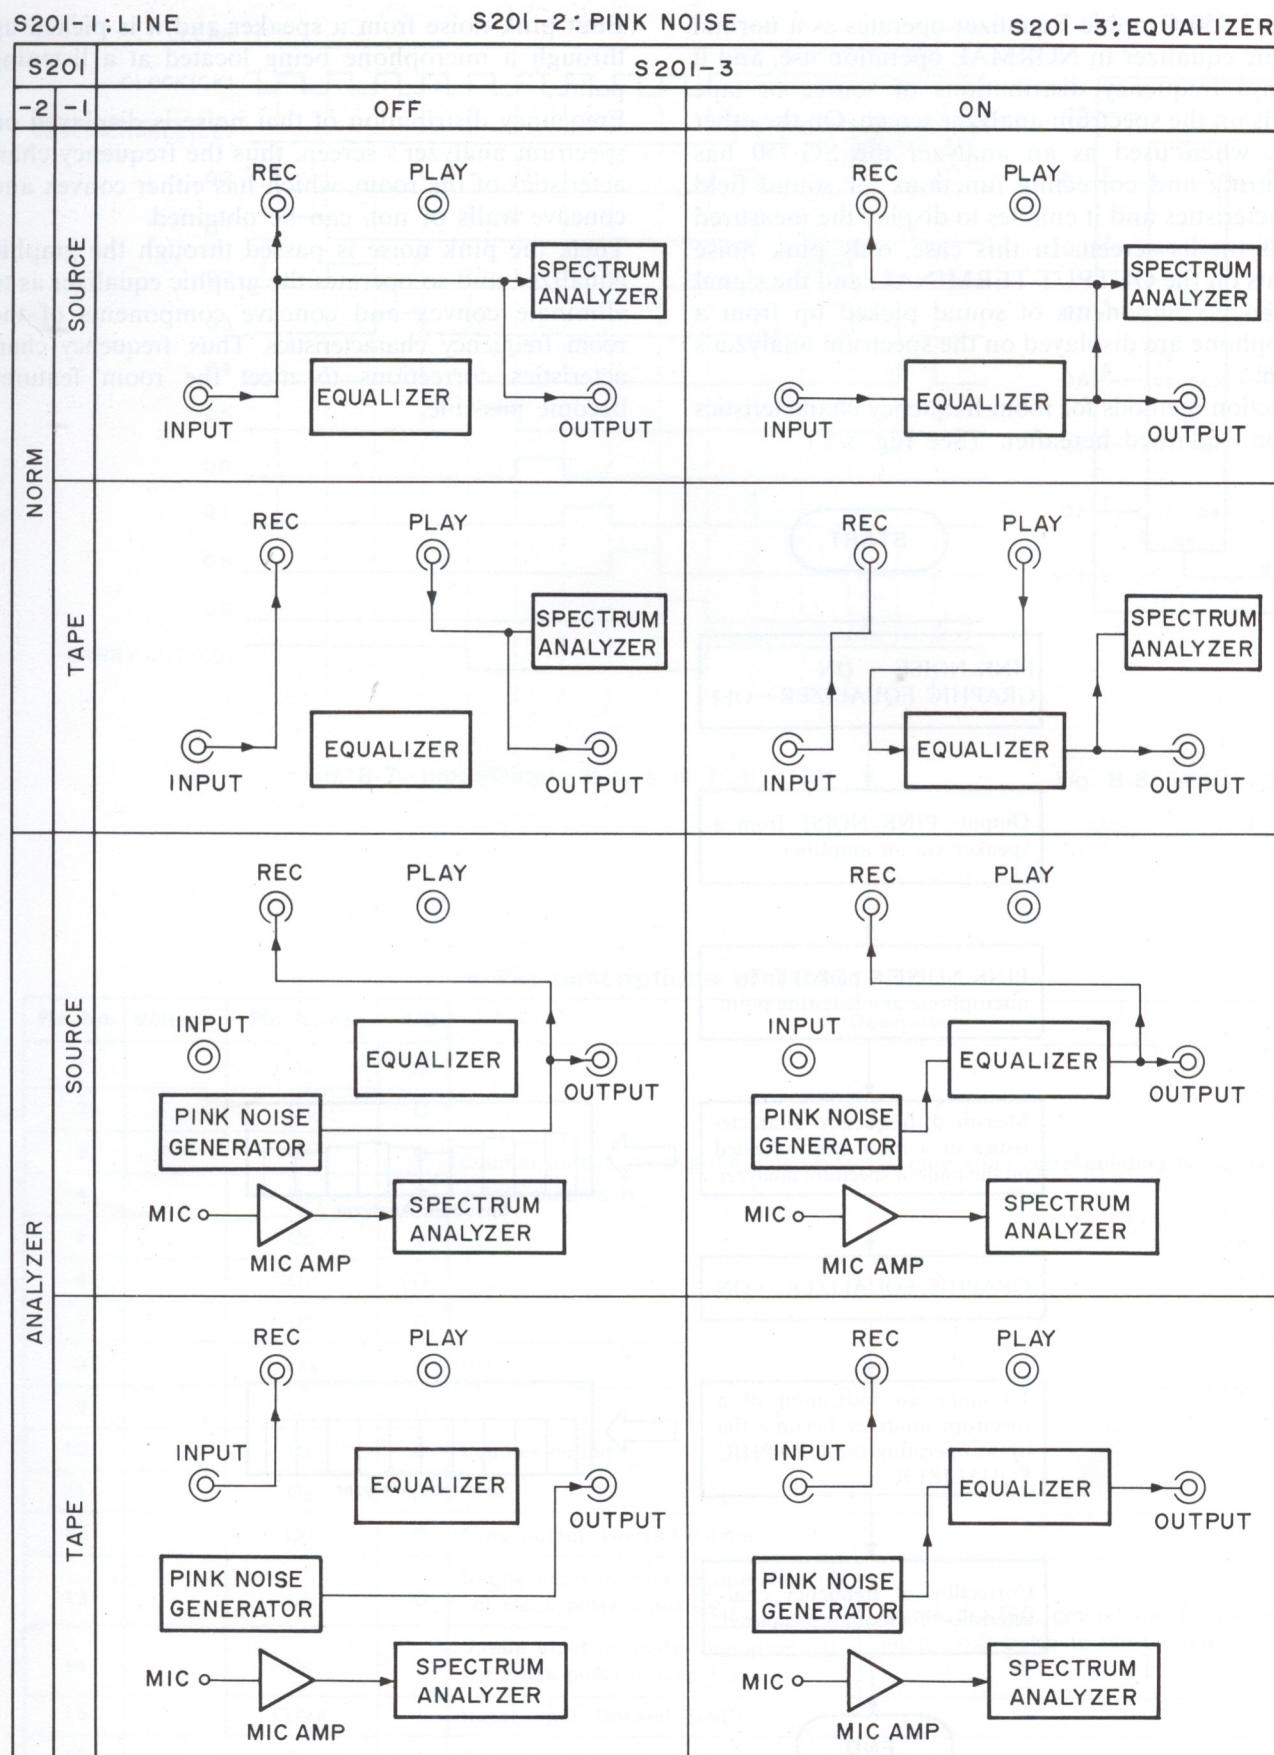


Fig. 8-1. Block Diagram Description

The SG-750 Graphic Equalizer operates as a normal graphic equalizer in NORMAL operation use, and it displays frequency distributions of source or tape signals on the spectrum analyzer screen. On the other hand, when used as an analyzer the SG-750 has measuring and correcting functions for sound field characteristics and it enables to display the measured results on its screen. In this case, only pink noise outputs on the OUTPUT TERMINAL, and the signal frequency components of sound picked up from a microphone are displayed on the spectrum analyzer's screen.

Correction methods for room frequency characteristics will be explained hereafter. (See Fig. 8-2.)

Emit pink noise from a speaker and it is picked up through a microphone being located at a listening point.

Frequency distribution of that noise is displayed on spectrum analyzer's screen, thus the frequency characteristics of the room, which has either convex and concave walls or not, can be obtained.

Then, the pink noise is passed through the graphic equalizer, and so operates the graphic equalizer as to eliminate convex and concave components of the room frequency characteristics. Thus, frequency characteristics corrections to meet the room features become possible.

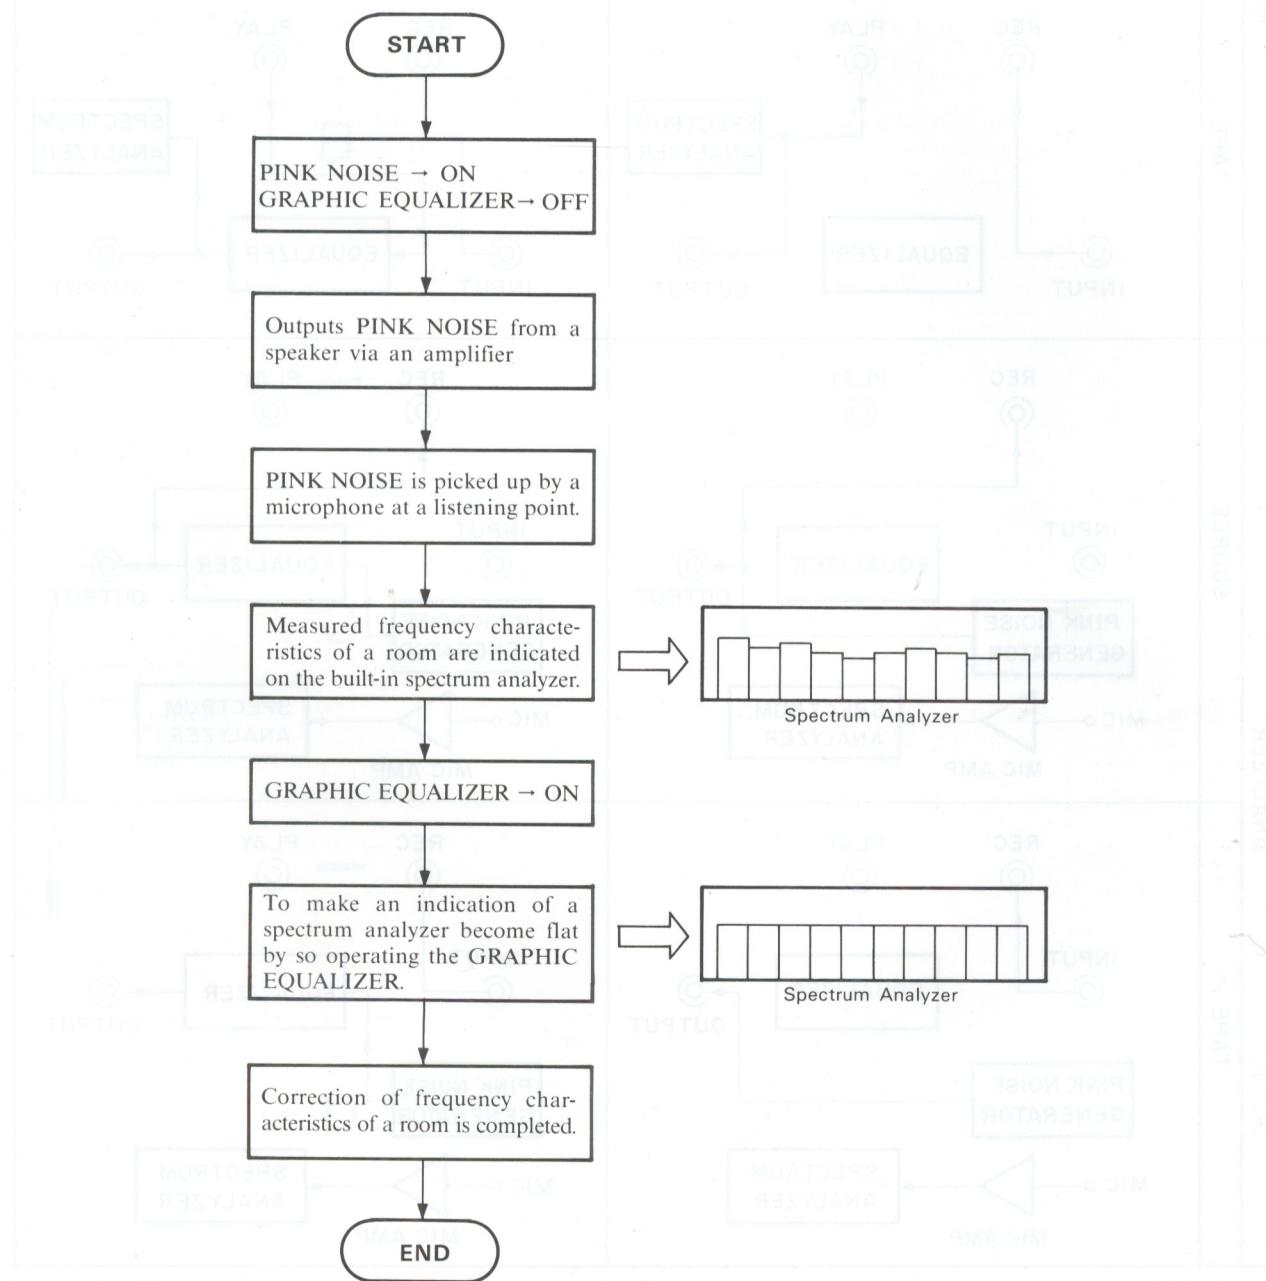


Fig. 8-2. Correction of Room Frequency Characteristics

8.2 CIRCUIT DESCRIPTION

Graphic Equalizer

Circuits of the SG-750 Graphic Equalizer are as shown in Fig. 8-3. An LC series resonance circuit adopting semi-conductor inductance is used as an equalizer element. An operational amplifier gain at the point frequency is varied by turning the volume control knob, thus cutting off or boosting of the signals can be carried out.

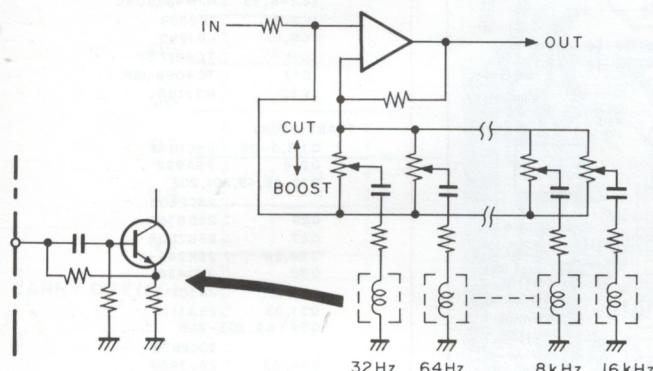


Fig. 8-3. Graphic Equalizer

Pink Noise Generator

For pink noise generation, white noise is picked up from the base of a transistor whose base and emitter are being inversely biased, and obtained frequency characteristics of the white noise are tilted with -6dB/oct by a filter.

Spectrum Analyzer

Circuits of the spectrum analyzer are as shown in Fig. 8-4. Signals are sent to a bandpass filter using an operational amplifier, and the same point frequency components as that of the equalizing amplifier can be obtained.

An output of point frequency components are rectified by a diode and a signal envelope is detected. The signal envelope voltage is sent to a voltage comparison circuit passing through a transistor switch, and turns a comparator and an FL tube on in accordance with the level intensity.

The level indications are 8 points with 3dB steps, so that setting of each comparison voltage of the eight comparators ranging from 10V to 0.89V is in geometrical progression (approximately 1.4 times).

For circuit simplification, the voltage comparison circuit is to be a single system, and a dynamic light up system, that is, the frequency points are switched by every 0.2mS in order, is adopted.

The Q0 to Q9 terminals of the IC11 (TC4017BP), are synchronized to the clock, and each of the terminals is designed at one step higher level than the preceding terminal. The signal output level taken out from 10 pin terminals changes the indicated frequency on an FL tube and turns the transistor switches (Q34 to Q43) ON/OFF simultaneously, and sends only one frequency component to the voltage comparison circuit.

Clock is generated by a CR oscillator using the CMOS inverter, and its oscillation frequency is about 5kHz .

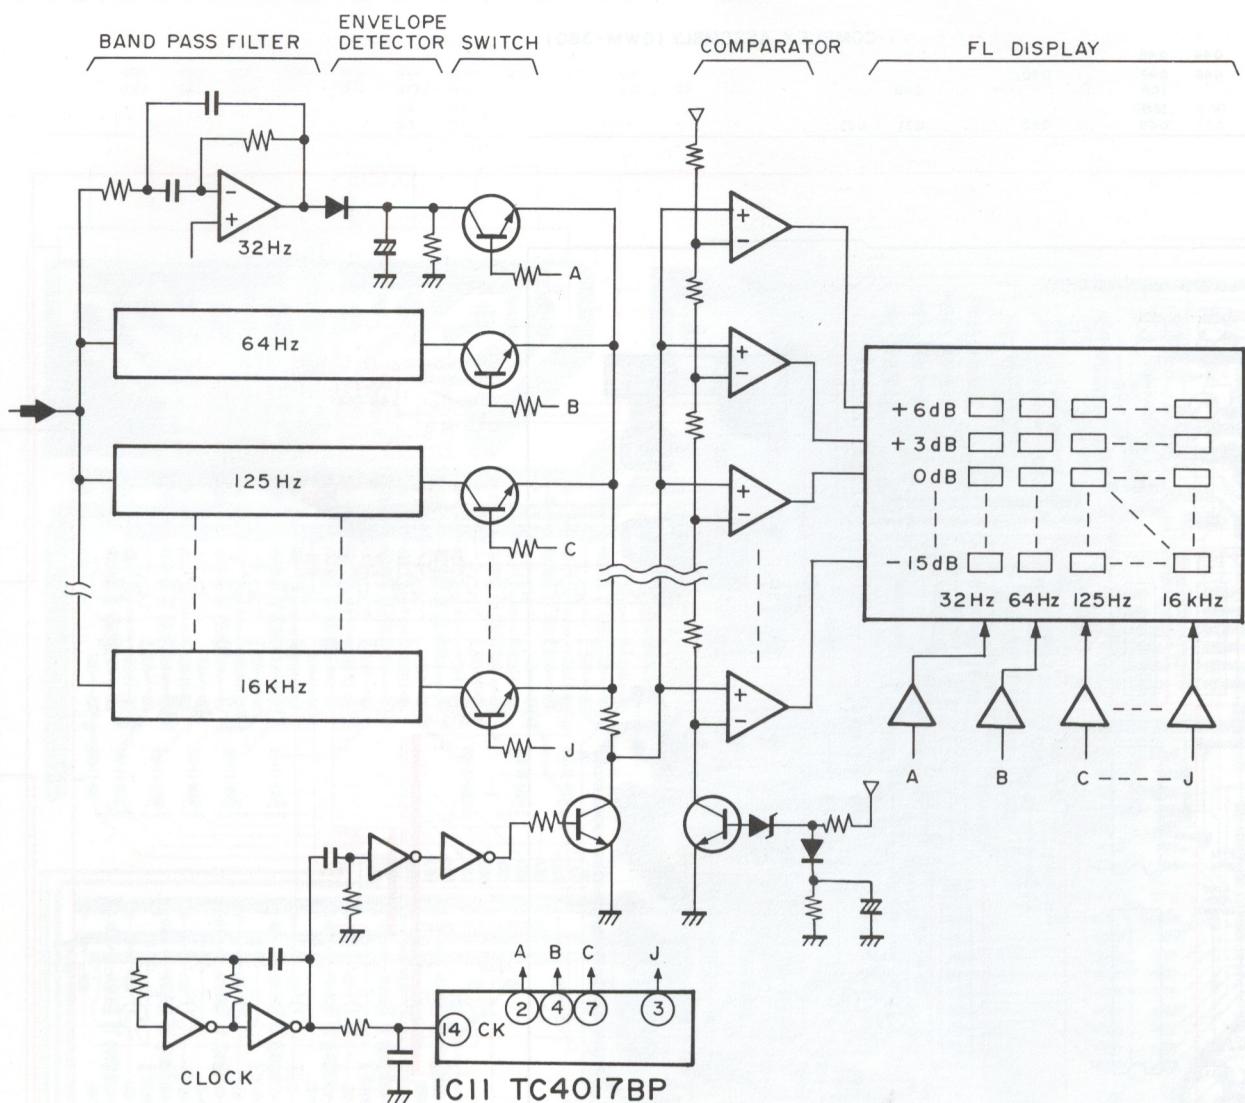


Fig. 8-4. Spectrum Analyzer

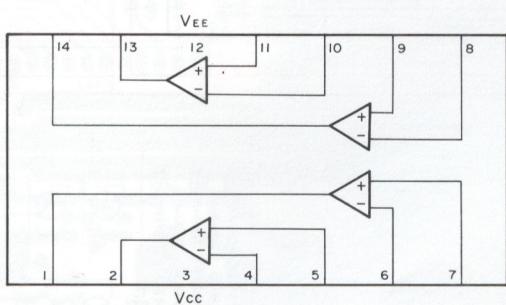


Fig. 8-5. IR2339

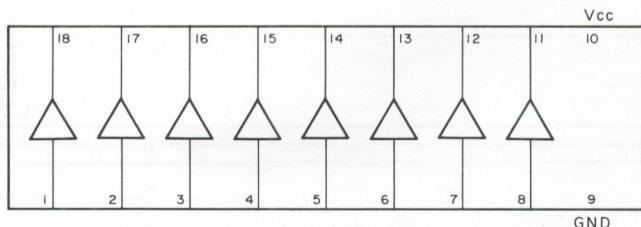


Fig. 8-6. LB1290

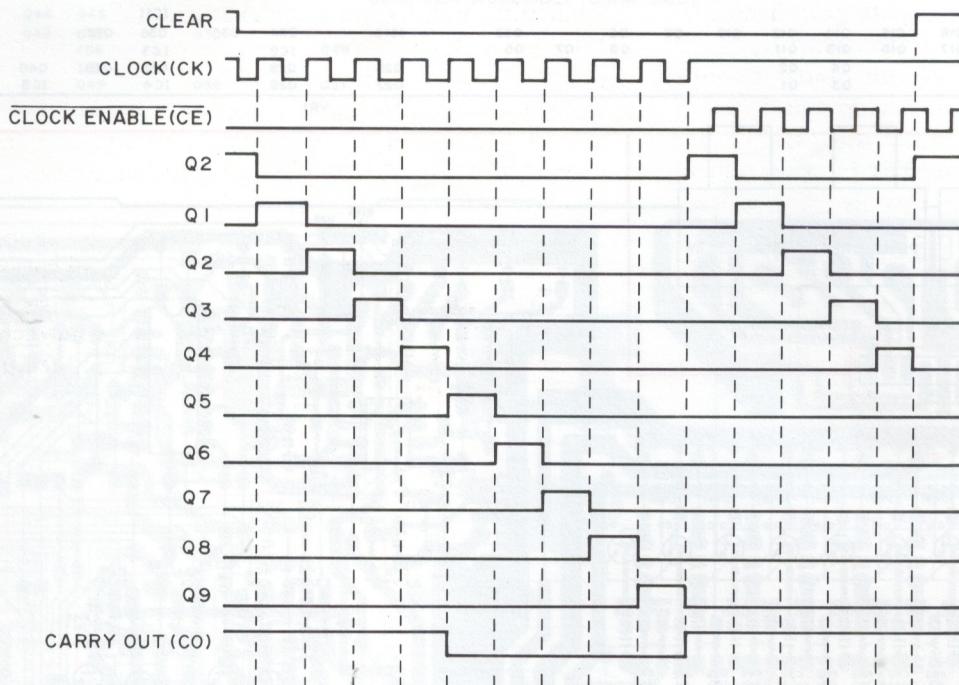


Fig. 8-7. Input/Output Pulses of TC4017BP

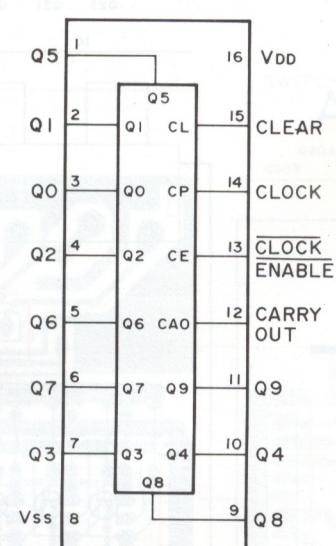



Fig. 8-8. TC4017BP

● Pin descriptions of TC4017BP

| Pin No. | Voltage | Pin Name | I/O | Description |
|---------|---------|-----------------|-----|---|
| 1 | | Q ₅ | O | |
| 2 | | Q ₁ | O | |
| 3 | | Q ₀ | O | Counter output. Among the pins Q ₀ to Q ₉ , only a pin corresponding to number of clock pulses outputs H. |
| 4 | | Q ₂ | O | |
| 5 | | Q ₆ | O | |
| 6 | | Q ₇ | O | |
| 7 | | Q ₃ | O | |
| 8 | | V _{ss} | O | GND |
| 9 | | Q ₈ | O | |
| 10 | | Q ₄ | O | Counter output |
| 11 | | Q ₉ | O | |
| 12 | | CO | O | Carry output. Unused (Open) |
| 13 | | CE | O | Strobe input in counter operation (L), or clock pulse input (\overline{L}) |
| 14 | | CK | I | Strobe input in counter operation (H), or clock pulse input (\overline{f}) |
| 15 | | CLEAR | I | Reset input. Unused (GND) |
| 16 | | V _{DD} | I | Power source voltage |


In the SG-750, ground the CE pin and input clock pulse to the CK pin.

9. P.C.BORDS CONNECTION DIAGRAM

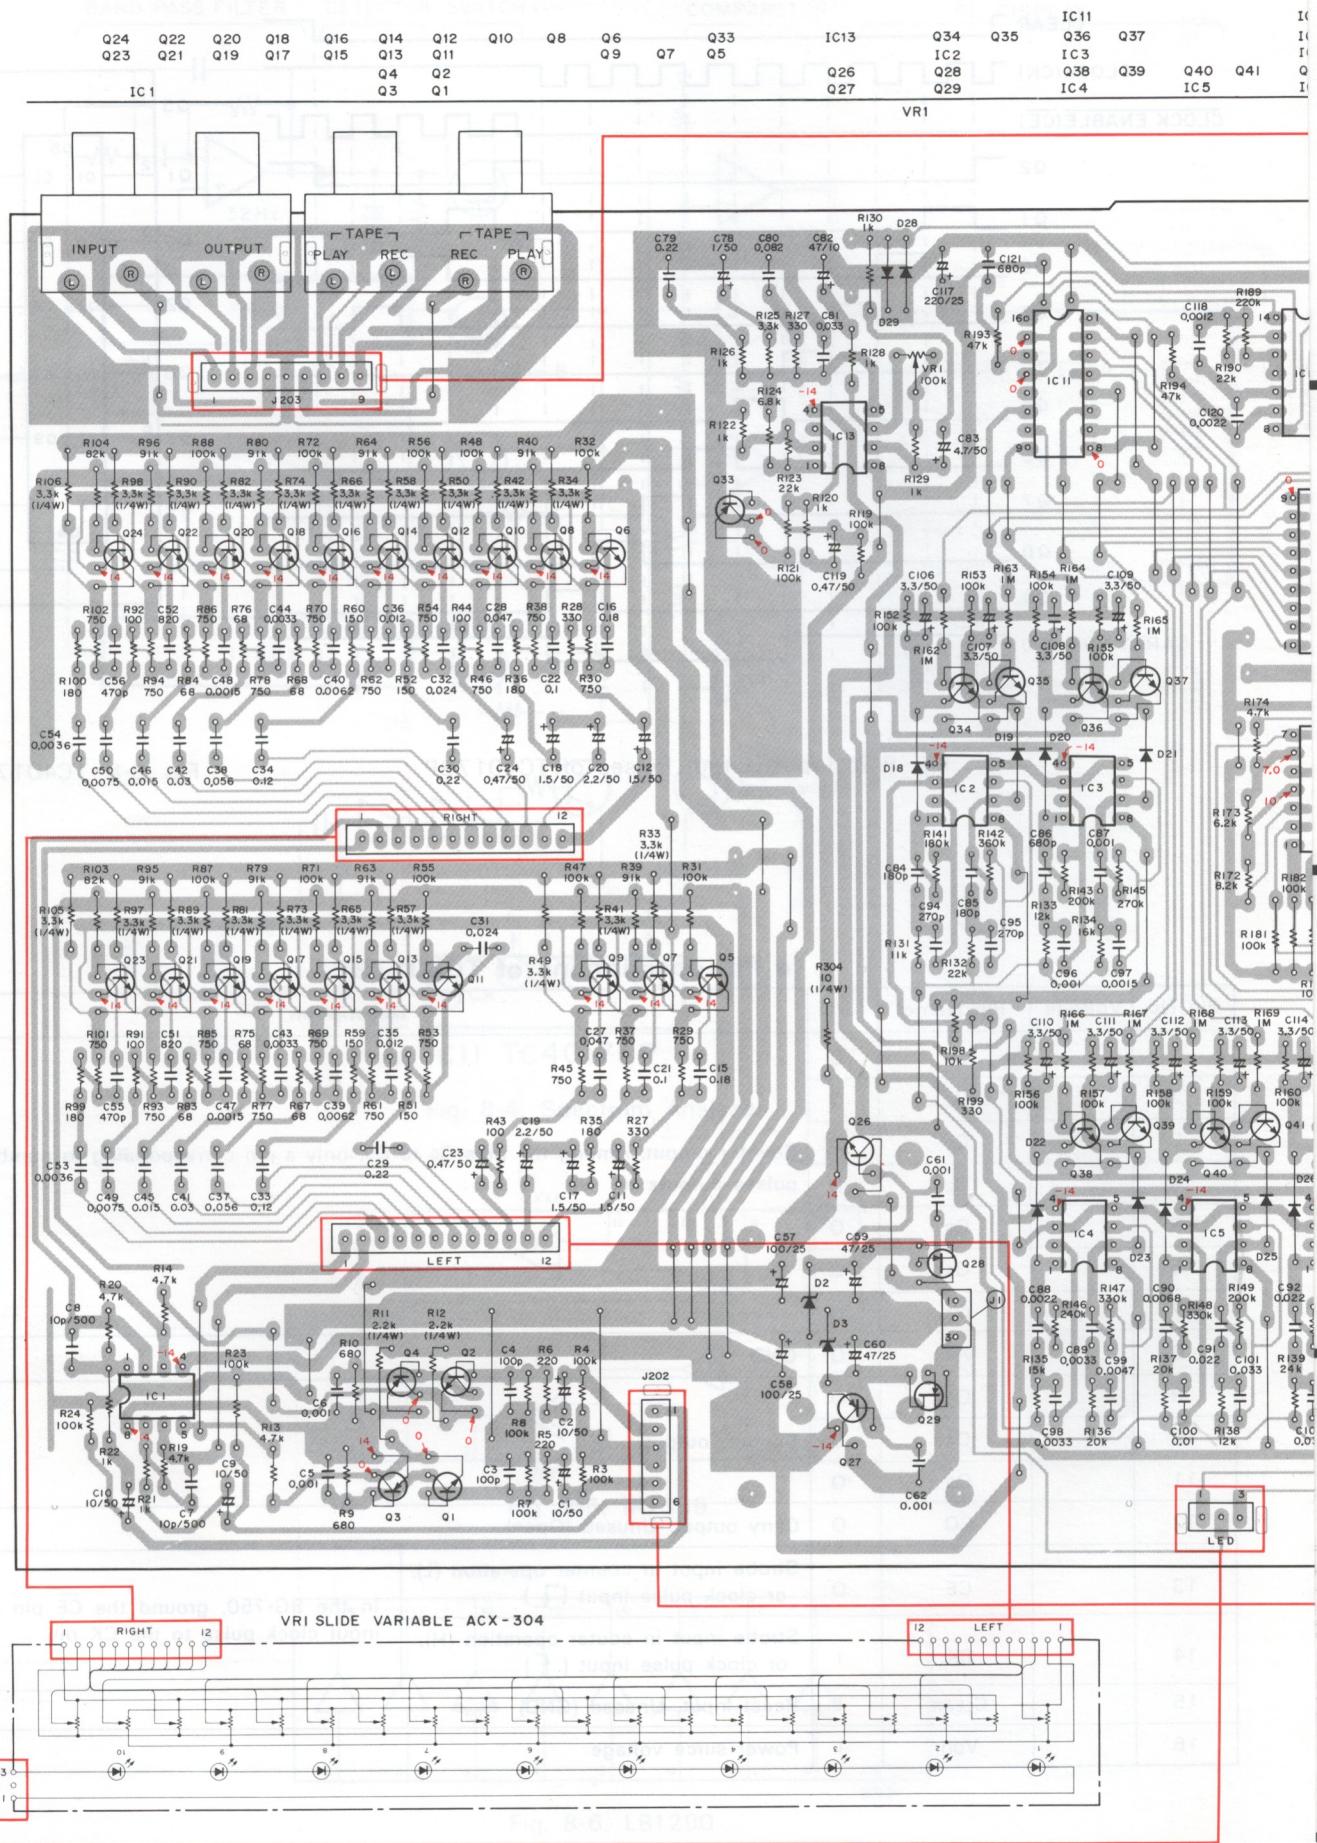


COMPLEX ASSEMBLY (GWM-360)



| | | |
|-----|-----|---------|
| C12 | Q44 | Q45 |
| C10 | Q46 | Q47 |
| C7 | | IC8 |
| 42 | Q43 | Q30 |
| C6 | | Q48 |
| | | |
| | | Q32 |
| | | Q31 Q25 |

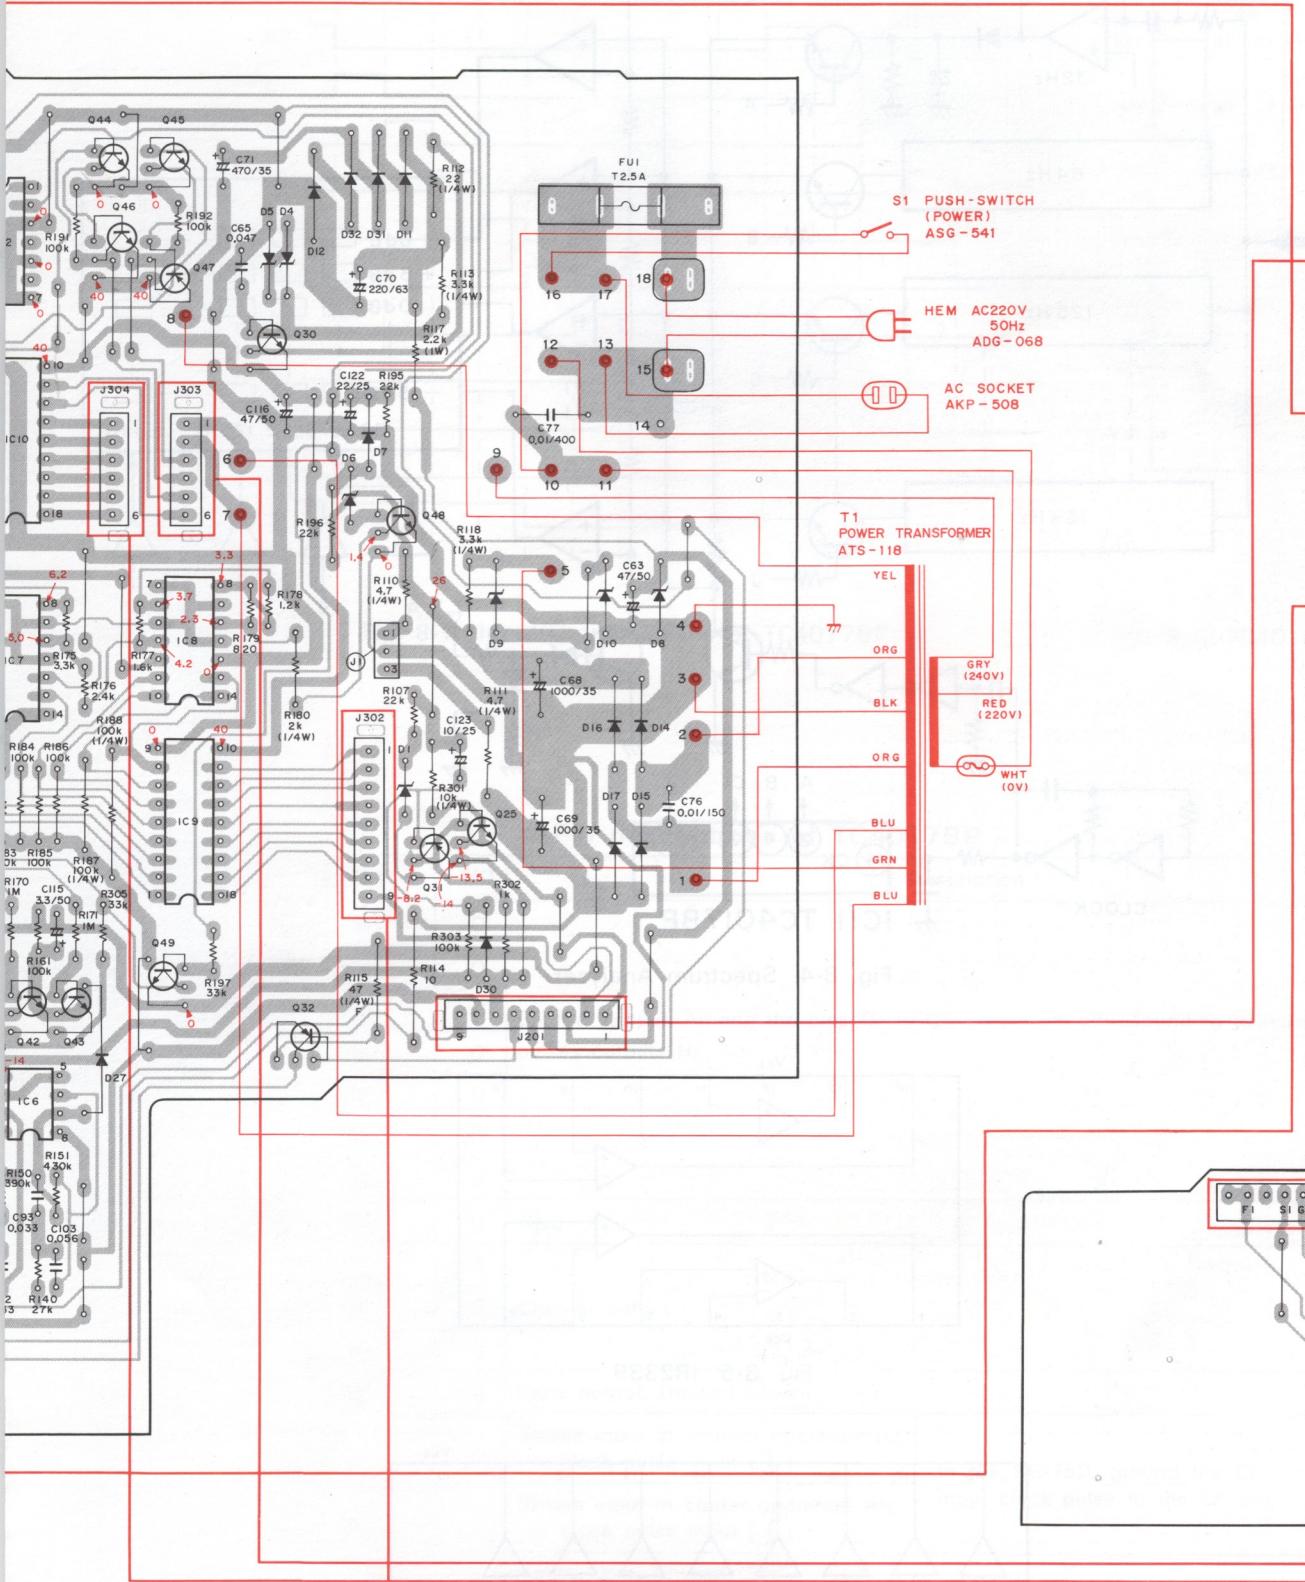


SWITCH AS

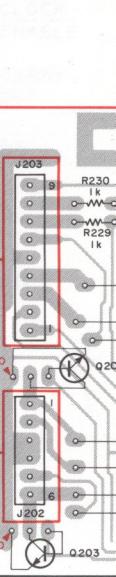 Q204
 Q203


BLY (GWS-525)

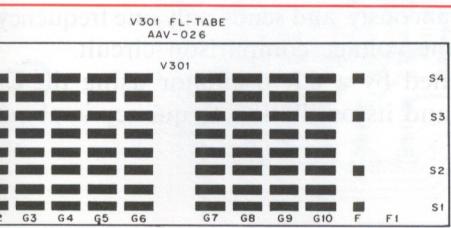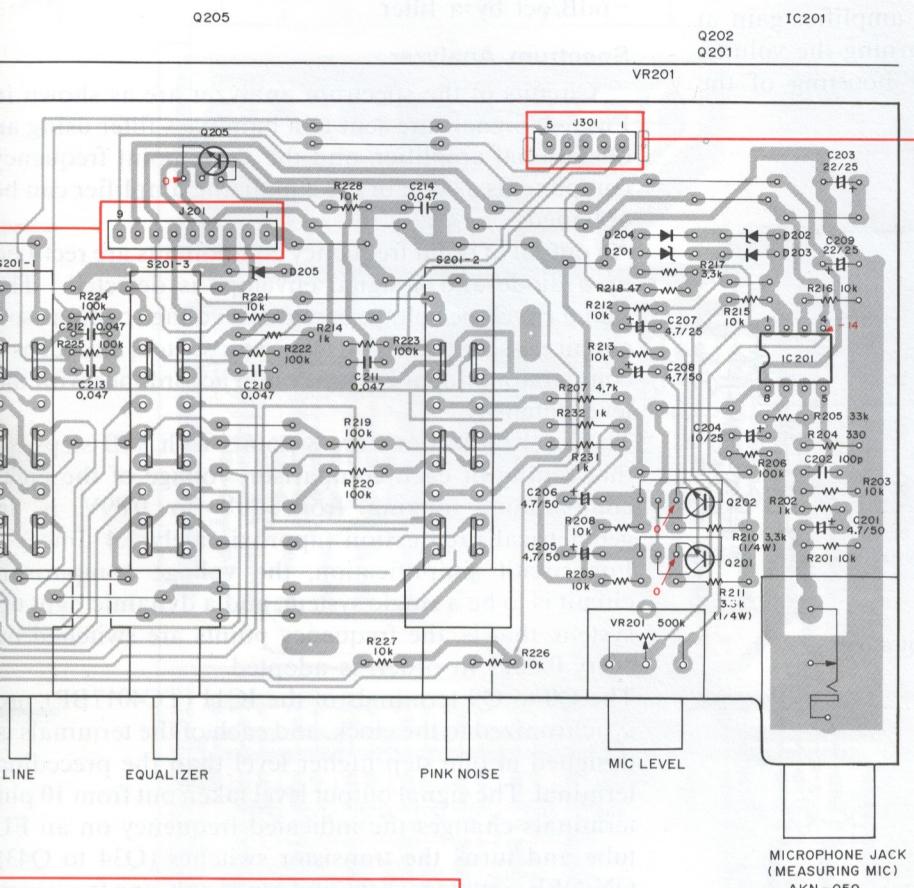

FL ASSEMBLY (GWV-122)

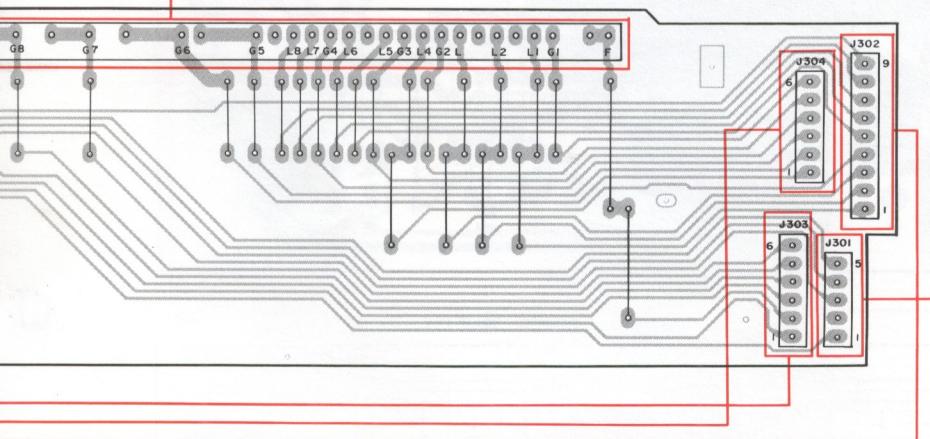

ICs

| | |
|-----------|--------------|
| IC1 | : M5220P |
| IC2~6, 13 | : NJM4558DXC |
| IC7, 8 | : IR2339 |
| IC9, 10 | : LB1290 |
| IC11 | : TC4017 BP |
| IC12 | : TC4069 UBP |
| IC201 | : M5218P |

TRANSISTORS

| | |
|-----------------------|------------|
| Q1, 3, 5~24 | : 2SC1845 |
| Q2, 4 | : 2SA992 |
| Q25, 48, 49, 201, 202 | : 2SC2603 |
| Q26 | : 2SD836A |
| Q27 | : 2SK750A |
| Q28, 29 | : 2SK246-Y |
| Q30 | : 2SD438 |
| Q32 | : JA101 |
| Q31, 33 | : 2SA1115 |
| Q34~43, 203~205 | : 2SC2878 |
| Q44, 45 | : 2SC3400 |
| Q46, 47 | : 2SA1346 |

DIODES

| | |
|------------------------|-----------|
| D1, 4 | : RD20EB |
| D2, 3 | : KZL150 |
| D5 | : RD22EB |
| D8 | : RD30EB |
| D9, 10 | : RD4,3EB |
| D11, 12, 14~17, 31, 32 | : 10E2FD |
| D18~30, 7, 203, 204 | : 1S1555 |
| D201, 202 | : RD9.1EB |
| D205 | : KZL120 |
| D6 | : KZL083 |

A

B



C

D


10. SCHEMATIC DIAGRAM

A

COMPLEX ASSEMBLY (GWM-360)

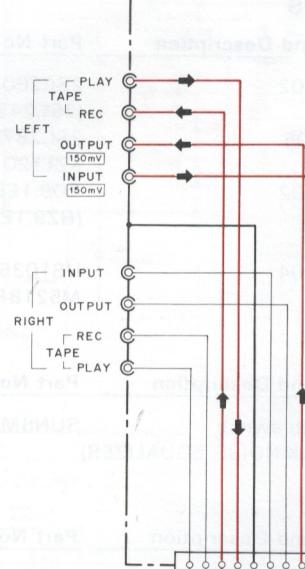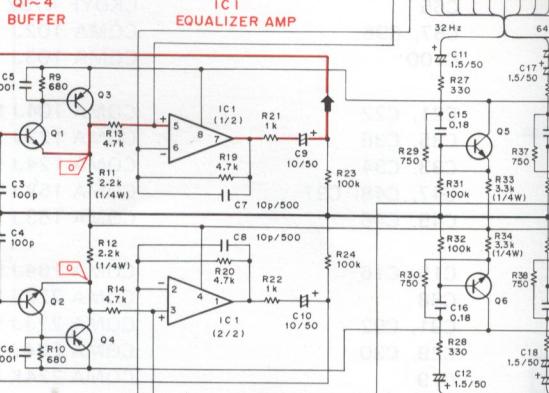Q1~4
BUFFERIC1
EQUALIZER AMP


B

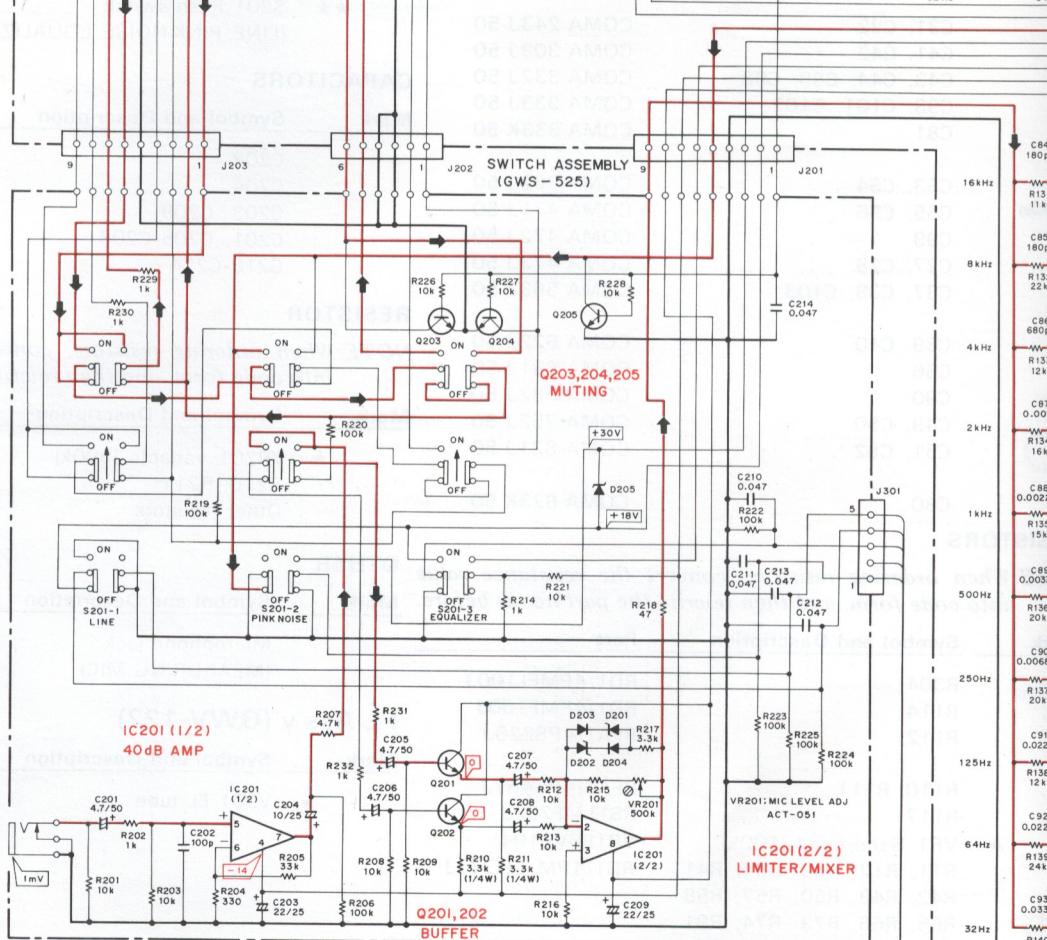

C


| ITEM | NO. | VACANT |
|------|-------------------------|---|
| R | 3~199, 201~232, 301~305 | 1, 2, 15~18, 25, 26, 108, 109, 116 |
| C | 1~123, 201~214 | 13, 14, 25, 26, 64, 66, 67, 72~75, 104, 105 |
| Q | 1~49, 201~205 | |
| IC | 1~13, 201 | |
| D | 1~32, 201~205 | 13 |

D

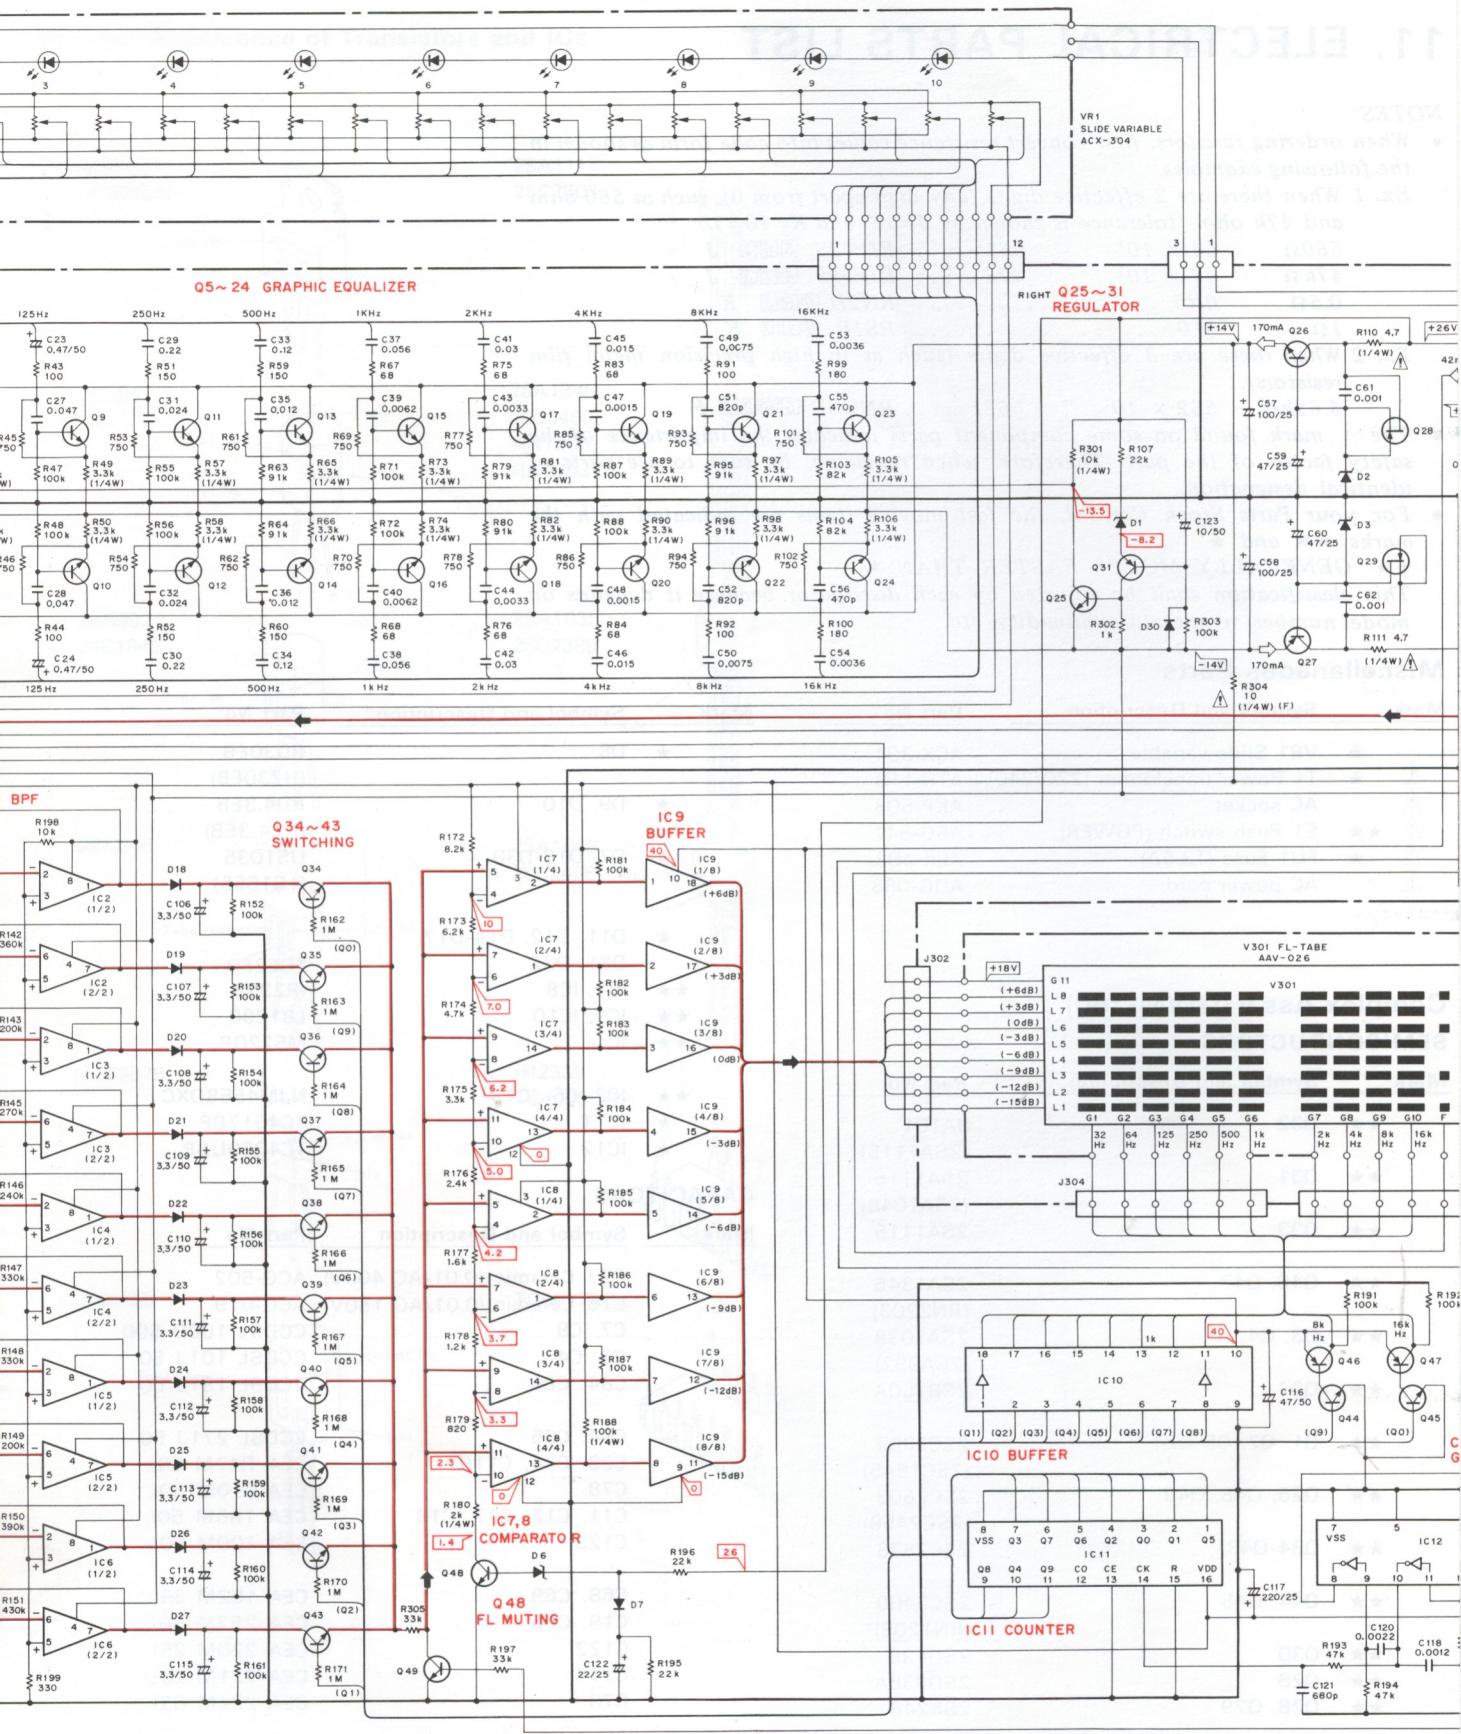


NOTE:

The indicated semiconductors are representative ones and only. Other alternative semiconductors may be used and are listed in the parts list.

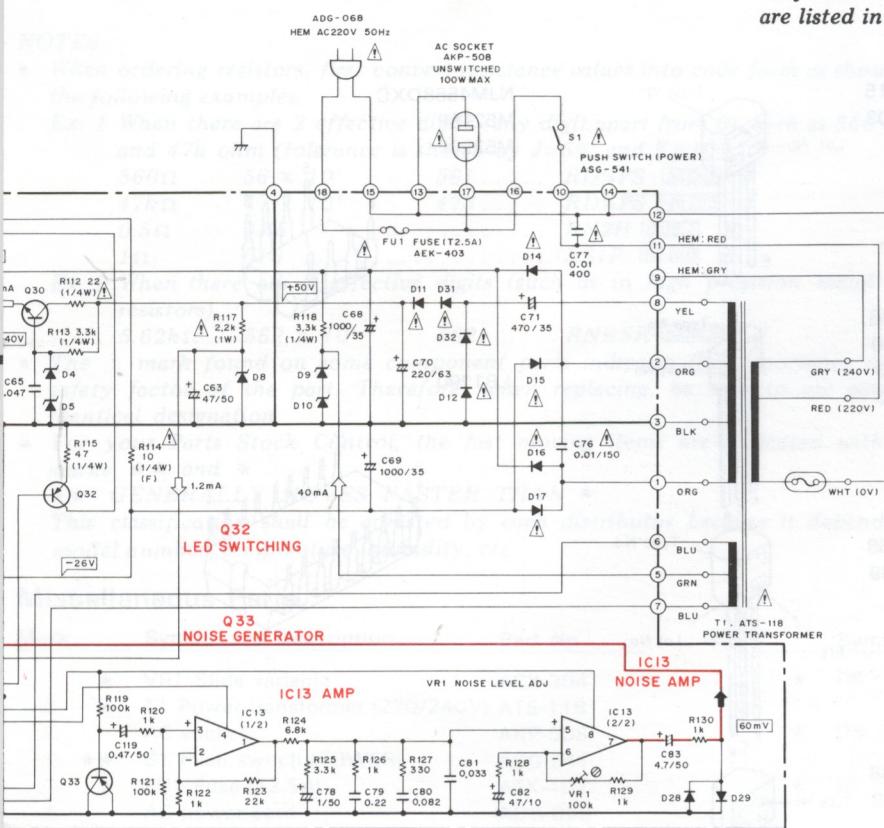

FL ASSEMBLY (GWV-122)

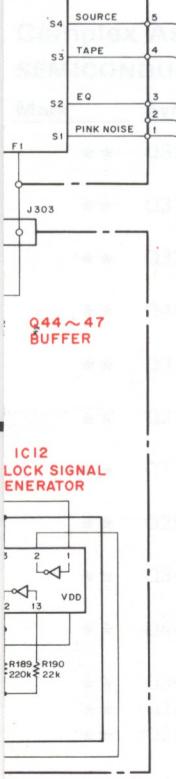

ICs

| | |
|-----------|--------------|
| IC1 | : M5220P |
| IC2-6, 13 | : NJM4558DXC |
| IC7, 8 | : IR2339 |
| IC9, 10 | : LB1290 |
| IC11 | : TC4017 BP |
| IC12 | : TC4069 UBP |
| IC201 | : M5218P |

TRANSISTORS

| | |
|-----------------------|------------|
| Q1, 3, 5~24 | : 2SC1845 |
| Q2, 4 | : 2SA992 |
| Q25, 48, 49, 201, 202 | : 2SC2603 |
| Q26 | : 2SD836A |
| Q27 | : 2SB750A |
| Q28, 29 | : 2SK246-Y |
| Q30 | : 2SD438 |
| Q32 | : JA101 |
| Q31, 33 | : 2SA1115 |
| Q34~43, 203~205 | : 2SC2878 |
| Q44, 45 | : 2SC3400 |
| Q46, 47 | : 2SA1346 |

DIODES

| | |
|------------------------|-----------|
| D1, 4 | : RD20EB |
| D2, 3 | : KZL150 |
| D5 | : RD22EB |
| D8 | : RD30EB |
| D9, 10 | : RD4.3EB |
| D11, 12, 14~17, 31, 32 | : 10E2FD |
| D18~30, 7, 203, 204 | : 1S1555 |
| D201, 202 | : RD9.1EB |
| D205 | : KZL120 |
| D6 | : KZL083 |

1. RESISTORS:
INDICATED IN Ω , 1/4W & 1/8W, $\pm 5\%$ TOLERANCE UNLESS
OTHERWISE NOTED: K: $\pm 1\%$, M: $\pm 2\%$, F: $\pm 10\%$,
(M): $\pm 20\%$ TOLERANCE.

2. CAPACITORS:
INDICATED IN CAPACITY (μF)/VOLTAGE (V) UNLESS
OTHERWISE NOTED: P: μF ,
INDICATION WITHOUT VOLTAGE IS 50V EXCEPT ELE-
CTROLYTIC CAPACITOR.

3. VOLTAGE, CURRENT:
DC VOLTAGE (V) AT NO INPUT SIGNAL
VALUE IN () IS DC VOLTAGE AT RATED POWER.

\triangle mA: DC CURRENT AT NO INPUT SIGNAL

4. OTHERS:

\rightarrow : SIGNAL ROUTE
 \odot : ADJUSTING POINT
THE \triangle MARK FOUND ON SOME COMPONENT PARTS INDICATES THE IMPORTANCE OF THE SAFETY FACTOR OF THE PART. THEREFORE, WHEN REPLACING, BE SURE TO USE PARTS OF IDENTICAL DESIGNATION.
• MARKED CAPACITORS AND RESISTORS HAVE PARTS NUMBERS.
THE UNDERLINED INDICATES THE SWITCH POSITION.
THIS IS THE BASIC SCHEMATIC DIAGRAM, BUT THE ACTUAL CIRCUIT MAY VARY DUE TO IMPROVEMENTS IN DESIGN.

SWITCHES:

OUTSIDE OF P.C. BOARDS
SI: POWER ON-OFF
SWITCH ASSEMBLY
S201-1: LINE ON-OFF
S201-2: PINK NOISE ON-OFF
S203-3: EQUALIZER ON-OFF










A

B


C

D


External Appearance of Transistors and ICs

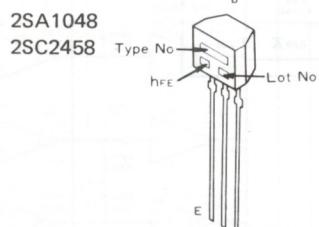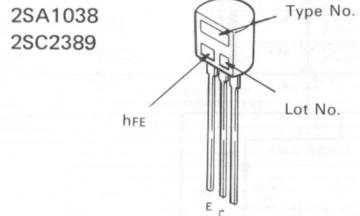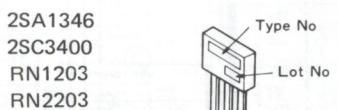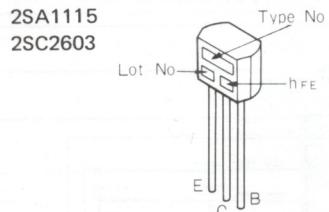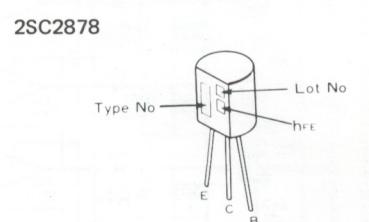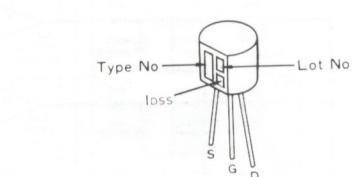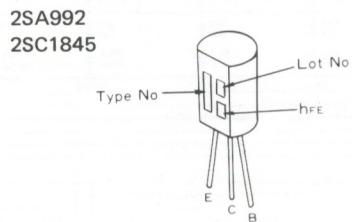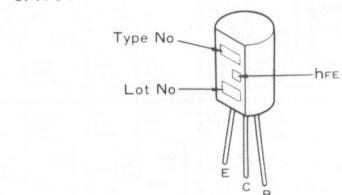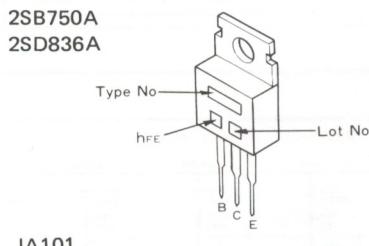


IR2339
TC4069UBP

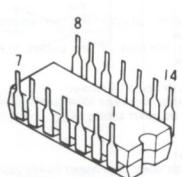


TC4017BP

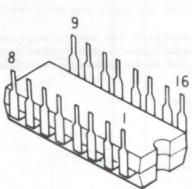

NJM4558DXC
M5218P
M5220P

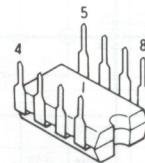

LB1290

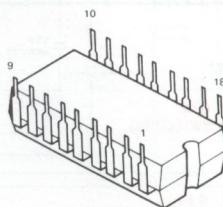

11. ELECTRICAL PARTS LIST

NOTES:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

| | | |
|------|------------------|---------------------------|
| 560Ω | 56×10^1 | 561 RD%PS 561 J |
| 47kΩ | 47×10^3 | 473 RD%PS 473 J |
| 0.5Ω | 0R5 | RN2H 0R5 K |
| 1Ω | 010 | RS1P 010 K |

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

| | | |
|--------|-------------------|-------------------------|
| 5.62kΩ | 562×10^1 | 5621 . . . RN%SR 5621 F |
|--------|-------------------|-------------------------|

- The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks ★★ and ★
- ★★ GENERALLY MOVES FASTER THAN ★
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Miscellaneous Parts

| Mark | Symbol and Description | Part No | Mark | Symbol and Description | Part No |
|------|-----------------------------------|---------|------|------------------------|-----------|
| | ★ VR1 Slide variable | ACX-304 | ★ | D8 | RD30EB |
| | ★ T1 Power transformer (220/240V) | ATS-118 | | | (HZ30EB) |
| | AC socket | AKP-508 | ★ | D9, D10 | RD4.3EB |
| | ★★ S1 Push switch (POWER) | ASG-541 | ★ | D7, D18-D30 | (HZ4.3EB) |
| | ★ FU1 Fuse (T2.5A) | AEK-403 | | | US1035 |
| | AC power cord | ADG-068 | | | (1S1555) |

Complex Ass'y (GWM-360)

SEMICONDUCTORS

| Mark | Symbol and Description | Part No |
|------|------------------------|----------------------|
| ★★ | Q32 | JA101 (2SA1115) |
| ★★ | Q31 | 2SA1115 (2SA1048) |
| ★★ | Q33 | 2SA1115 |
| ★★ | Q46, Q47 | 2SA1346 (RN2203) |
| ★★ | Q3, Q4 | 2SA1038 (2SA992) |
| ★★ | Q27 | 2SB750A |
| ★★ | Q1, Q2, Q5-Q24 | 2SC2389 (2SC1845) |
| ★★ | Q25, Q48, Q49 | 2SC2603 (2SC2458) |
| ★★ | Q34-Q43 | 2SC2878 |
| ★★ | Q44, Q45 | 2SC3400 (RN1203) |
| ★★ | Q30 | 2SD438 |
| ★★ | Q26 | 2SD836A |
| ★★ | Q28, Q29 | 2SK246 |

CAPACITORS

| Mark | Symbol and Description | Part No |
|------|----------------------------|----------------|
| | C77 Ceramic (0.01/AC 400V) | ACG-502 |
| | C76 Ceramic (0.01/AC 150V) | ACG-019 |
| | C7, C8 | CCDSL 100D 500 |
| | C3, C4 | CCDSL 101J 50 |
| | C84, C85 | CCDSL 181J 50 |
| | C94, C95 | CCDSL 271J 50 |
| | C23, C24, C119 | CEA R47M 50L |
| | C78 | CEA 010M 50L |
| | C11, C12, C17, C18 | CEA 1R5M 50L |
| | C123 | CEA 100M 50L |
| | C68, C69 | CEA 102M 35L |
| | C19, C20 | CEA 2R2M 50L |
| | C122 | CEA 220M 25L |
| | C117 | CEA 221M 25L |
| | C70 | CEA 221M 63L |
| ★ | D6 | CEA 3R3M 50L |
| ★ | D2, D3 | CEA 4R7M 50L |
| ★ | D1, D4 | CEA 470M 10L |
| ★ | D5 | CEA 470M 50L |
| | RD22EB (HZ22EB) | CEA 471M 35L |


JO. SCHEMATIC DIAGRAM

| Mark | Symbol and Description | Part No | |
|--|---------------------------------|---------|--|
| C1, C2, C9, C10 | CEXA 100M 50 | | |
| C57, C58 | CEXA 101M 25 | | |
| C59, C60 | CEXA 470M 25 | | |
| C5, C6, C61, C62 | CKDYB 102K 50 | | |
| C118 | CKDYB 122K 50 | | |
| C120 | CKDYB 222K 50 | | |
| C121 | CKDYB 681K 50 | | |
| C65 | CKDYF 473Z 50 | | |
| C87, C96 | CQMA 102J 50 | | |
| C100 | CQMA 103J 50 | | |
| C21, C22 | CQMA 104J 50 | | |
| C35, C36 | CQMA 123J 50 | | |
| C33, C34 | CQMA 124J 50 | | |
| C47, C48, C97 | CQMA 152J 50 | | |
| C45, C46 | CQMA 153J 50 | | |
| C15, C16 | CQMA 184J 50 | | |
| C88 | CQMA 222J 50 | | |
| C91, C92 | CQMA 223J 50 | | |
| C29, C30 | CQMA 224J 50 | | |
| C79 | CQMA 224K 50 | | |
| C31, C32 | CQMA 243J 50 | | |
| C41, C42 | CQMA 303J 50 | | |
| C43, C44, C89, C98 | CQMA 332J 50 | | |
| C93, C101, C102 | CQMA 333J 50 | | |
| C81 | CQMA 333K 50 | | |
| C53, C54 | CQMA 362J 50 | | |
| C55, C56 | CQMA 471J 50 | | |
| C99 | CQMA 472J 50 | | |
| C27, C28 | CQMA 473J 50 | | |
| C37, C38, C103 | CQMA 563J 50 | | |
| C39, C40 | CQMA 622J 50 | | |
| C86 | CQMA 681J 50 | | |
| C90 | CQMA 682J 50 | | |
| C49, C50 | CQMA 752J 50 | | |
| C51, C52 | CQMA 821J 50 | | |
| C80 | CQMA 823K 50 | | |
| RESISTORS | | | |
| NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before. | | | |
| Mark | Symbol and Description | Part No | |
| R304 | RD1/4PMFL100J | | |
| R114 | RD1/4PMF100J | | |
| R112 | RFA1/4PS220J | | |
| R110, R111 | RFA1/4PS4R7J | | |
| R117 | RS1LMF222J | | |
| ★ VR1 | Semi-fixed (100k) | | |
| R11, R12, R33, R34, R41 | VRTB6VS104 | | |
| R42, R49, R50, R57, R58 | RD1/4PM □ □ □ J | | |
| R65, R66, R73, R74, R81 | | | |
| R82, R89, R90, R97, R98 | | | |
| R105, R106, R113, R115 | | | |
| R118, R180, R187, R188 | | | |
| R301 | | | |
| Other resistors | RD1/8PM □ □ □ J | | |
| Mark | Symbol and Description | Part No | |
| OTHER | | | |
| | Microphone jack (MEASURING MIC) | AKN-059 | |
| Mark | Symbol and Description | Part | |
| ★ V301 | FL tube | AAV-026 | |

12. ADJUSTMENTS

- **Noise level adjustment**

1. Turn the PINK NOISE SWITCH ON and turn the EQUALIZER SWITCH OFF.
2. Adjust VR1 so that the noise output of $60 \text{ mVrms} \pm 20\text{mV}$ will generate on the EQUALIZER OUTPUT TERMINAL.

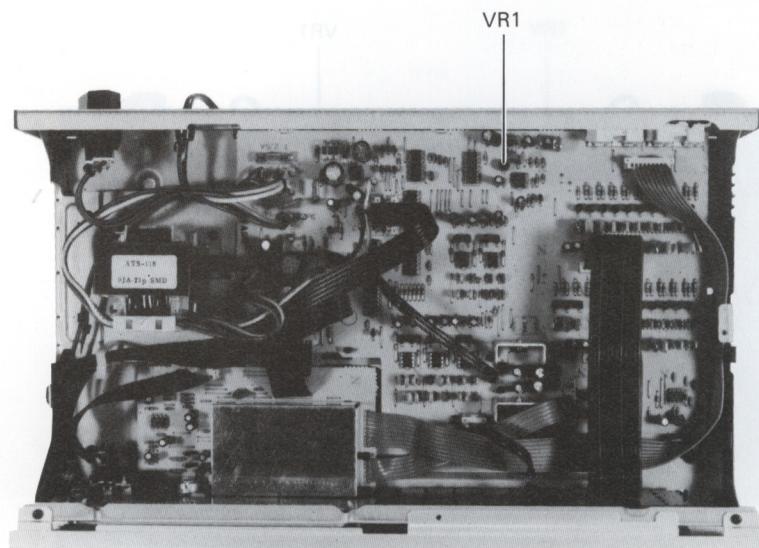


12. RÉGLAGE

ENTRETIEN ET DÉPANNAGE

Réglage du niveau de bruit



1. Mettez le commutateur de niveau de bruit rose sur ON et le commutateur du compensateur sur OFF.
2. Réglez VR1 de sorte que la puissance à la borne de sortie du compensateur soit de $60 \text{ mVrms} \pm 20\text{mV}$.

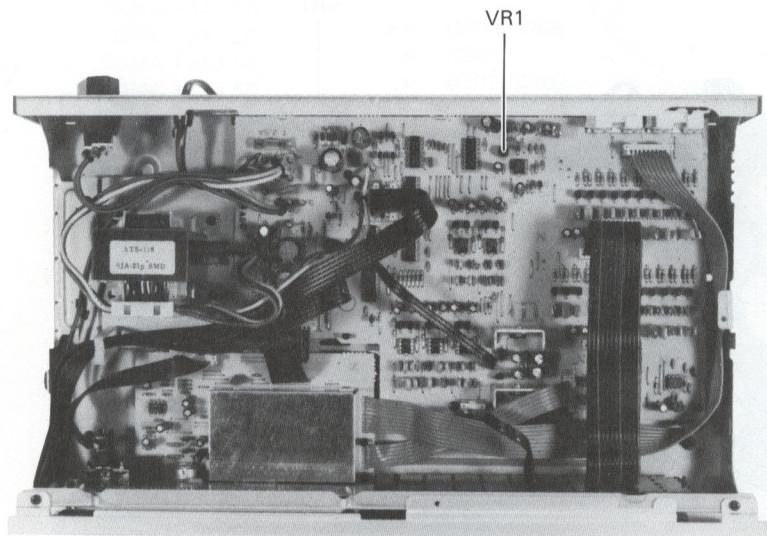

12. AJUSTE

Ajuste del nivel de ruido

- Conecte (posición ON) el interruptor de ruido rosado (PINK NOISE) y desconecte (posición OFF) el interruptor del ecualizador (EQUALIZER).
- Ajuste VR1 de forma que la salida de ruido del terminal de salida del ecualizador (EQUALIZER) sea de 60mV (rms) \pm 20mV.

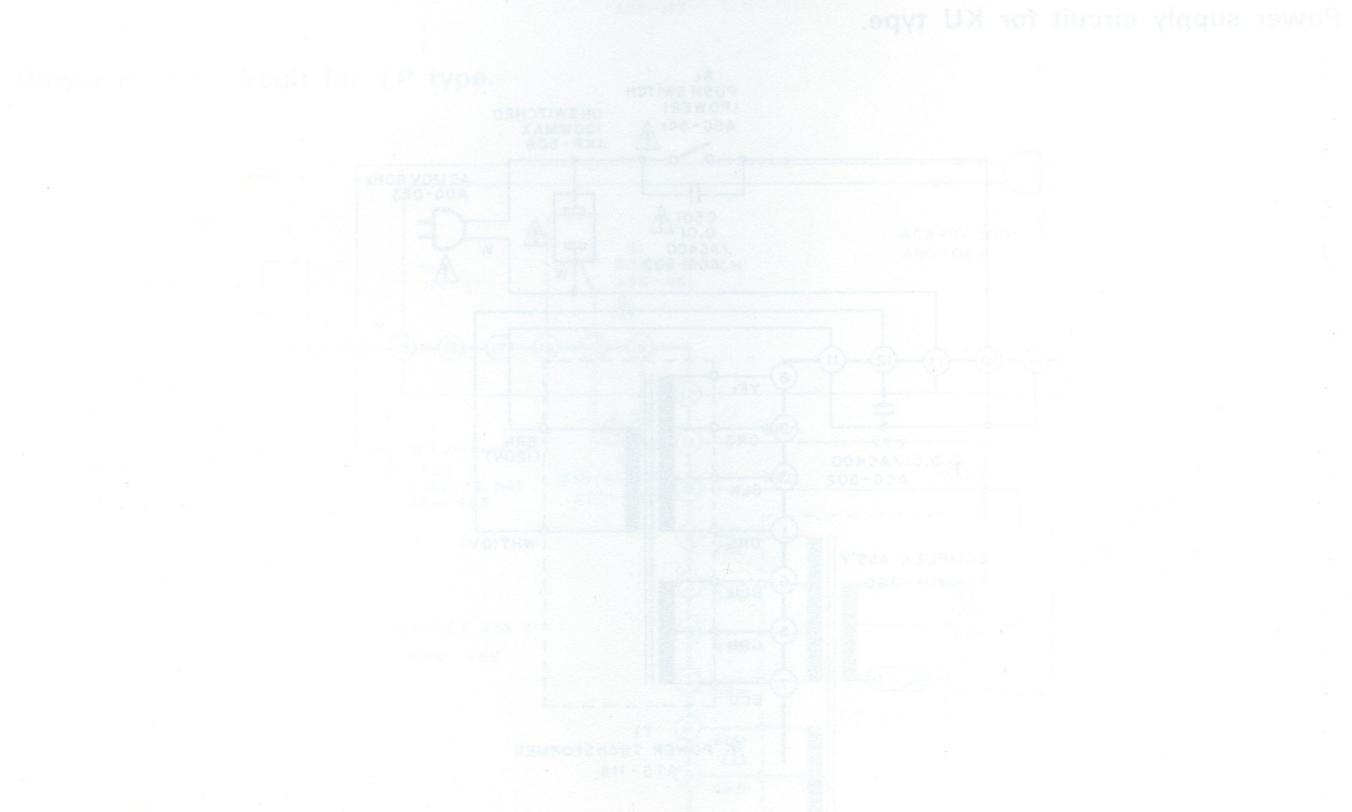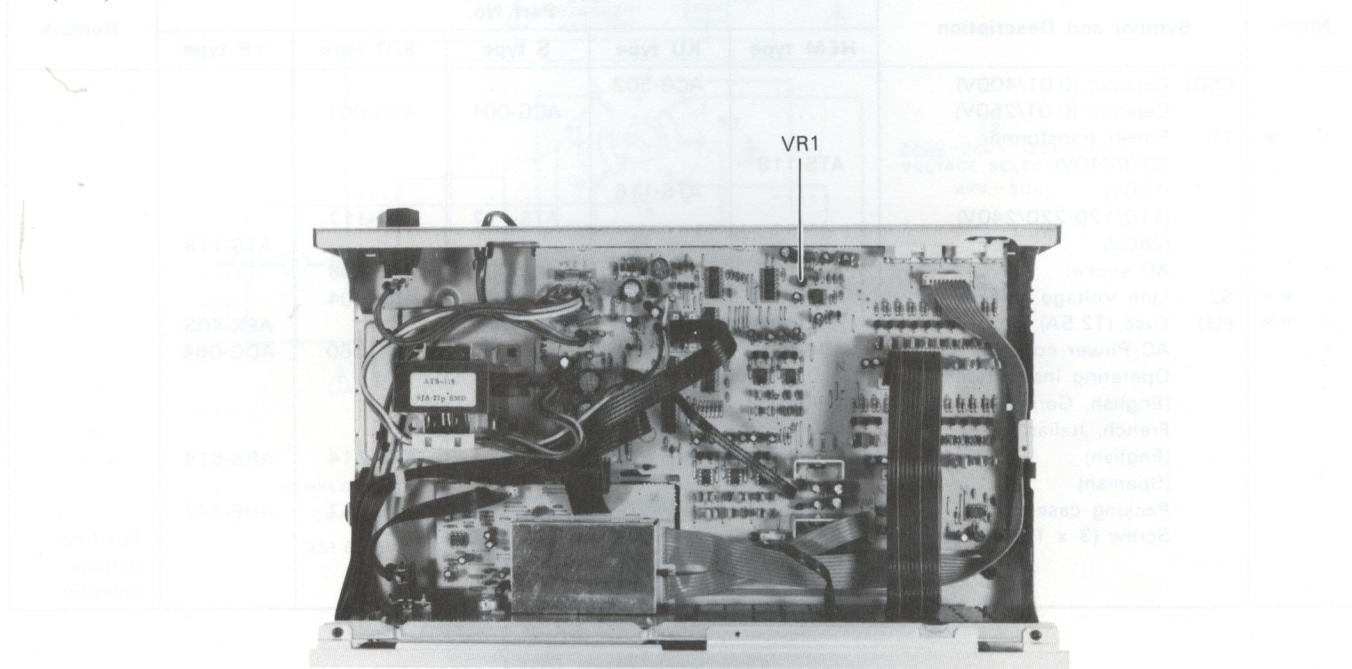


13. FOR KU, S, S/G AND YP TYPES

The KU, S, S/G and YP types are the same as the HEM type with the exception of the following sections.


Contrast of Miscellaneous Parts

| Mark | Symbol and Description | Part No. | | | | | Remark |
|------|---|----------|---------------|---------------|----------|---------|---------------------------|
| | | HEM type | KU type | S type | S/G type | YP type | |
| ⚠ | C501 Ceramic (0.01/400V) Ceramic (0.01/250V) | | ACG-502 | | | | |
| ⚠ ★ | T1 Power transformer (220/240V) (120V) (110/120/220/240V) (240V) | ATS-118 | | ACG-001 | ACG-001 | | |
| ⚠ ★★ | S2 AC socket | AKP-508 | AKP-506 | AKP-506 | AKP-506 | | |
| ⚠ ★★ | FU1 Line Voltage selector | AEK-403 | | AKX-504 | AKX-504 | | |
| ⚠ | Fuse (T2.5A) | ADG-068 | ADG-073 | ADG-060 | ADG-060 | AEK-403 | |
| ⚠ | AC Power cord | ARE-103 | | | | ADG-064 | |
| ⚠ | Operating instructions (English, German, French, Italian) (English) (Spanish) | | ARB-614 | ARB-614 | ARB-614 | ARB-614 | |
| ⚠ | Packing case | AHE-347 | | ARC-072 | | | |
| ⚠ | Screw (3 x 10) | | AHE-375 | AHE-347 | AHE-347 | AHE-347 | |
| | | | VTZ30P100 FZK | VTZ30P100 FZK | | | For line voltage selector |


Power supply circuit for KU type.

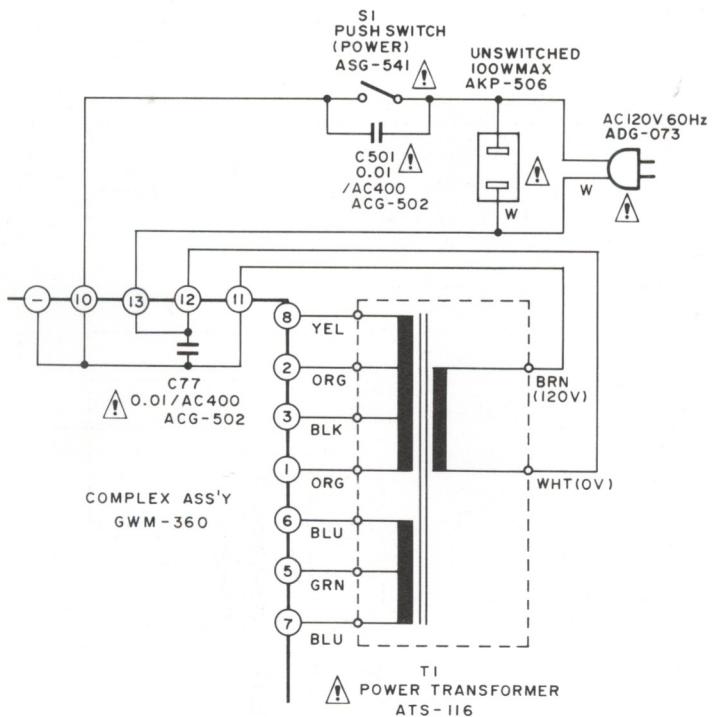

Power supply circuit for S and S/G types.

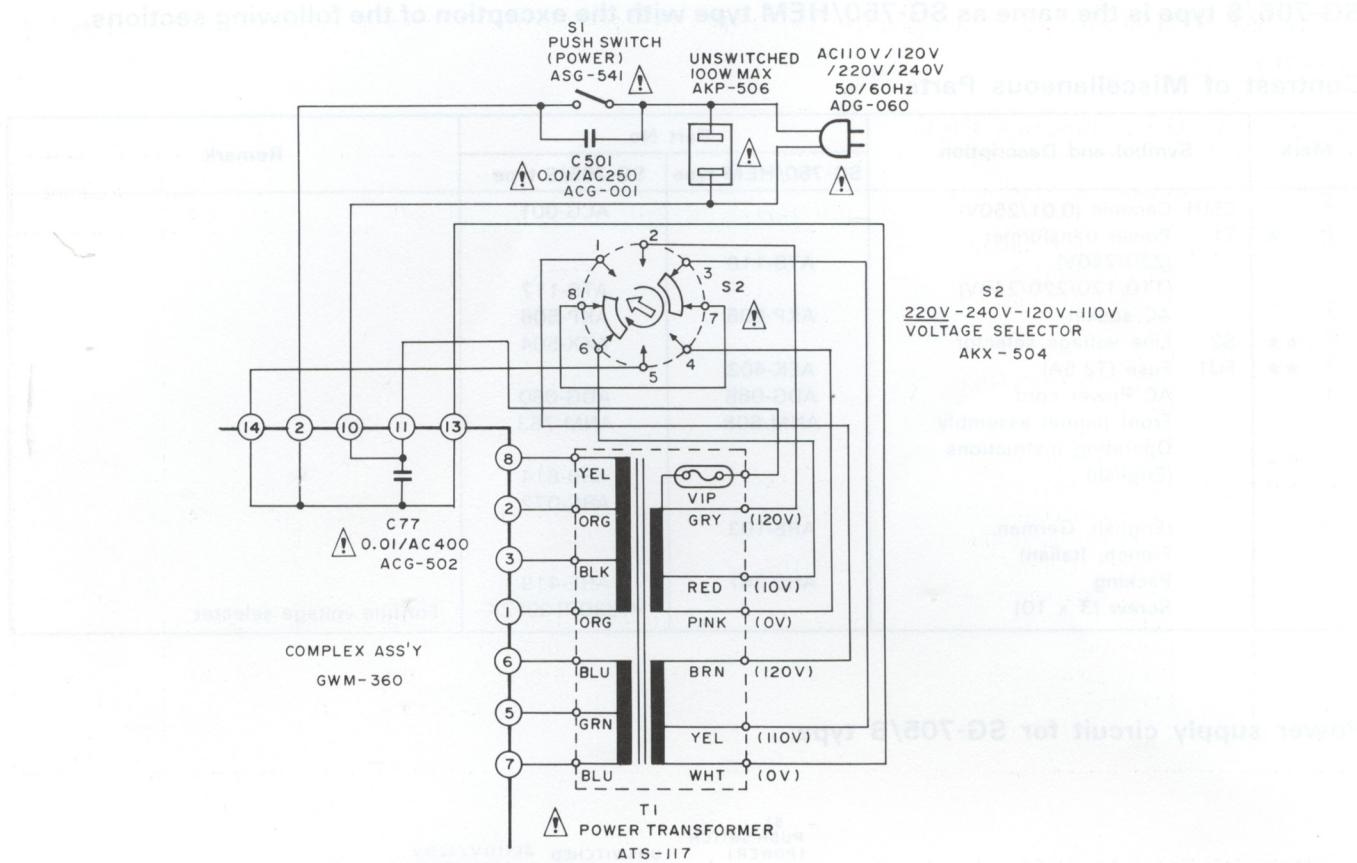

Power supply circuit for YP type.

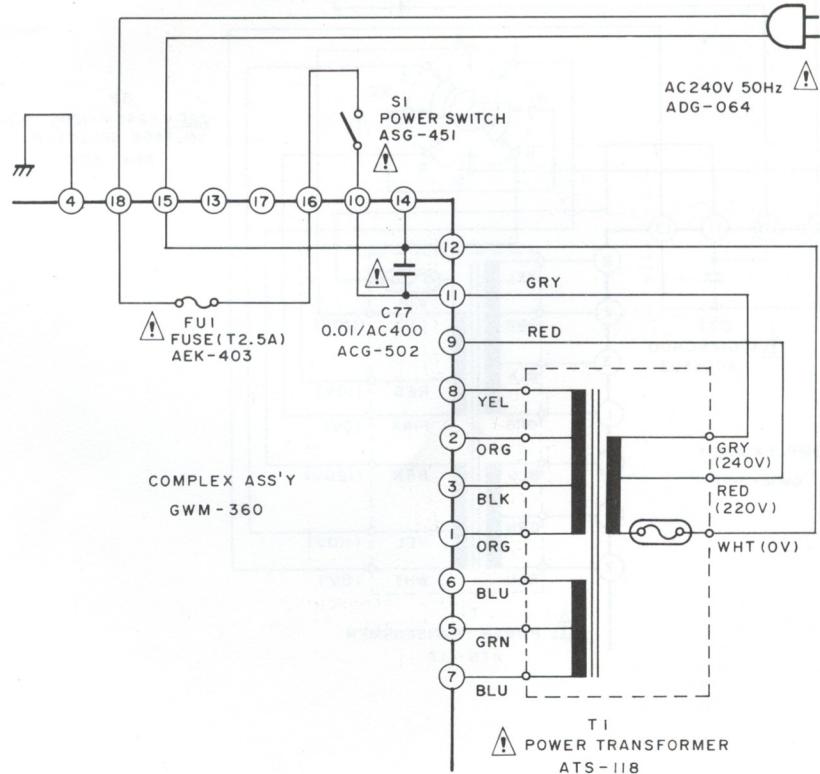

14. FOR SG-705/S TYPE

SG-705/S type is the same as SG-750/HEM type with the exception of the following sections.

Contrast of Miscellaneous Parts

| Mark | Symbol and Description | Part No. | | Remark |
|------|--|-----------------|---------------|---------------------------|
| | | SG-750/HEM type | SG-705/S type | |
| ⚠ | C501 Ceramic (0.01/250V) | | ACG-001 | |
| ⚠ ★ | T1 Power transformer (220/240V) (110/120/220/240V) | ATS-118 | | |
| ⚠ | AC socket | | ATS-117 | |
| ⚠ ★★ | S2 Line voltage selector | AKP-508 | AKP-506 | |
| ⚠ ★★ | FU1 Fuse (T2.5A) | | AKX-504 | |
| | AC Power cord | AEK-403 | | |
| | Front panel assembly | ADG-068 | ADG-060 | |
| | Operating instructions (English) | ANM-608 | ANM-763 | |
| | (English, German, French, Italian) Packing | | ARB-614 | |
| | Screw (3 x 10) | | ARC-072 | |
| | | ARE-103 | | |
| | | AHE-347 | AHE-419 | |
| | | | VTZ30P100FZK | For line voltage selector |

Power supply circuit for SG-705/S type.

