


 **PIONEER**

Service Manual

**CIRCUIT DESCRIPTIONS
REPAIR & ADJUSTMENTS**



**ORDER NO.
ARP 1296**

STEREO RECEIVER **SX-1600**

MODEL SX-1600 COMES IN SIX VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Power requirement	Destination
KUC	AC 120V only	U. S. A. and Canada
SD	AC 110V, 120V-127V, 220V, 240V (switchable)	General market
HE	AC 220V, 240V (switchable)	European continent
HB	AC 220V, 240V (switchable)	United Kingdom
HEZ	AC 220V, 240V (switchable)	West Germany
YP	AC 240V only	Australia

- This service manual is applicable to the KUC type.
- As to the other types, please refer to the additional service manual.
- As to the circuit and mechanism descriptions, please refer to the SX-1500 (BK) service manual (ARP1010).

CONTENTS

1. SPECIFICATIONS.....	2	6. EXPLODED VIEWS AND PARTS LIST.....	13
2. PANEL FACILITIES.....	3	7. ADJUSTMENTS.....	16
3. ELECTRICAL PARTS LIST.....	5	8. IC INFORMATION.....	18
4. SCHEMATIC DIAGRAM.....	8	9. PACKING.....	20
5. P.C. BOARDS CONNECTION DIAGRAM.....	11	10. SAFETY INFORMATION.....	21

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A. TEL: (213) 420-5700
PIONEER ELECTRONIC (EUROPE) N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775-28-08
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 17B-184 Boundary Road, Braeside, Victoria 3195, Australia
TEL: (03) 580-9911

1. SPECIFICATIONS

Amplifier Section

Continuous Average Power Output is 50 watts* per channel, min., at 8 ohms from 20 Hertz to 20,000 Hertz with no more than 0.3% total harmonic distortion.

Continuous Power Output (both channel driven)	
1 kHz, T.H.D. 0.3%, 8Ω	55 W + 55 W
20 Hz - 20 kHz, T.H.D. 0.3%, 8Ω	50 W + 50 W
Total Harmonic Distortion	
1 kHz, 25.0 W, 8 Ω	0.05%
Input (Sensitivity/Impedance)	
PHONO	2.5 mV/47 kΩ
CD, TAPE PLAY, AUX, VCR	150 mV/22 kΩ
Phono Overload Level (T.H.D. 0.01%, 1,000 Hz)	
PHONO	130 mV
Output Level	
TAPE REC	150 mV
Frequency Response	
PHONO (RIAA Equalization)	30 Hz to 20,000 Hz ±0.5 dB
CD, AUX, VCR	10 Hz to 70,000 Hz $\pm_{-3.0}^{+0.5}$ dB
Hum and Noise (IHF, short circuited, A network/EIA RS-490)	
PHONO	72 dB/75 dB
CD, TAPE PLAY, AUX, VCR	94 dB/80 dB
Graphic Equalizer frequency band	
	100 Hz, 330 Hz, 1 kHz, 3.3 kHz, 10 kHz, ±8 dB

FM Tuner Section

Frequency range	87.5 MHz to 108 MHz
Usable Sensitivity	11.2 dBf, IHF (1.0 μV/75 Ω)
50 dB Quieting Sensitivity	MONO: 15.3 dBf (1.6 μV/75 Ω)
	STEREO: 38.3 dBf (22.5 μV/75 Ω)
Signal-to-Noise Ratio	
MONO	78 dB (at 85 dBf)
STEREO	75 dB (at 85 dBf)
Distortion	
STEREO	0.5% (1 kHz)
Alternate Channel Selectivity	55 dB (400 kHz)
Stereo Separation	35 dB (1 kHz)
Frequency Response	30 Hz to 15 kHz (\pm_{-1}^{+2} dB)
Antenna Input	300 Ω balanced, 75 Ω unbalanced

AM Tuner Section

Frequency range	530 kHz to 1,600 kHz
Sensitivity	
IHF, Loop antenna	300 μV/m
Selectivity	20 dB
Signal-to-Noise Ratio	50 dB
Antenna	AM Loop Antenna

Miscellaneous

Power Requirements	
U.S., Canadian model	AC 120 Volts, 60 Hz
Australian model	AC 240 Volts ~, 50 Hz
Power Consumption	
U.S., Canadian models	180 Watts
Australian model	350 Watts
Dimensions	
	420 (W) × 98 (H) × 220 (D) mm
	16-9/16 (W) × 3-7/8 (H) × 8-11/16 (D) in
Weight (without package)	4.7 kg (10 lb 6 oz)

Furnished Parts

FM T-type Antenna	1
AM Loop Antenna	1
Operating Instructions	1


**Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier.*

NOTE:

Specifications and design subject to possible modification without notice due to improvements.

2. PANEL FACILITIES

The illustration shows model SX-1600.

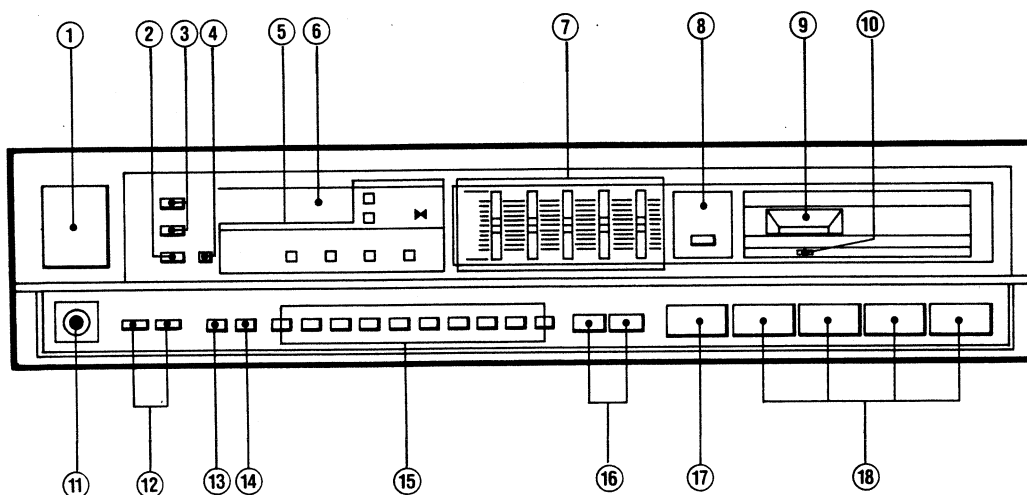

① POWER button

When this button is pressed, power is supplied to the unit. To turn power off, press the button again to the released position.

② TUNING MANUAL/AUTO button

Works during FM reception. Use to select either the AUTO mode or MANUAL mode for FM reception. Indicators on the display panel show whether the mode selected is MANUAL or AUTO.

③ BAND SELECTOR buttons

These buttons are used to select either AM or FM reception.
AM: Push this button for AM reception.
FM: Push this button for FM reception.

④ FM MONO button

Normally, the MONO indicator remains off. However, it may not be possible to tune in a desired FM station because it is too far away or because its signals are too weak. In cases like these, press the button to set the reception to the monaural mode (MONO indicator lights) and tune in the station. The program of an FM stereo broadcast will be heard in mono. The setting of the FM MONO button (ON or OFF) is memorized along with the station's frequency in the STATION CALL buttons.

When using the preset tuning feature, reception will be in the mode selected when the station was memorized. This button will not function for AM reception.

⑤ Indicators

[MEMORY] (M)

This lights when the MEMORY button is pressed. Stations can be preset into the STATION CALL buttons while this indicator is on.

[SELECT (11 - 20)] (■)

This lights when the SELECT button is pressed and mode 2 (11 - 20) is established.

[TUNED] (▶)

This lights to indicate that a station has been optimally tuned in.

[TUNING AUTO] (▶▶)

Lights when the auto tuning mode is selected during FM reception.

[FM MONO] (□)

Lights when the FM MONO button is pressed to select monaural FM reception.

[FM STEREO] (◻)

This lights during FM stereo reception.

[SIMULATED STEREO] (◻◻) (SX-1600 only)

This lights when the simulated stereo button is pressed and the simulated stereo mode is established.

⑥ Frequency display

This display normally shows the frequency of the station selected. When a STATION CALL button is pressed, the channel number for that station (the number of the STATION CALL button) is displayed for a few seconds. The display will show **--CH** during other than preset tuning.

⑦ GRAPHIC EQUALIZER controls

The equalizer is divided into five frequency ranges (100 Hz, 330 Hz, 1 kHz, 3.3 kHz, 10 kHz) to tailor music to the individual taste of the listener.

⑧ SIMULATED STEREO button (SX-1600 only)

This turns monaural signals into simulated stereo sound. Use this when you wish to experience the sense of stereo presence with AM broadcasts, VCR or other monaural signal sources.

NOTE:

This function can also be used with stereo sources, but it will result in a different sound from the normal stereo sound.

⑨ VOLUME control**⑩ BALANCE control****⑪ PHONES jack**

This is a standard "plug-type jack" for headphones.

⑫ SPEAKERS buttons (■ OFF, ■ ON)

These are used to select the speaker through which you wish to listen.

A: When the speakers connected to A terminals are in use.

B: When the speakers connected to B terminals are in use.

- Turn both A and B speakers to OFF position when only the HEADPHONES are in use.

NOTE:

No sound will be heard through the speakers when both A and B buttons are depressed if only one set of speakers has been connected to either A or B SPEAKERS terminals.

⑬ MEMORY button

This is used to memorize stations. When the button is pressed, the MEMORY indicator will light. To memorize the frequency of any station, press the STATION CALL button while the MEMORY indicator is lit.

⑭ SELECT button

This button is used to set the STATION CALL buttons to Mode 1 (1-10) or Mode 2 (11-20). Mode 2 (11-20) is obtained when the button is pressed and select indicator is lit.

NOTE:

Changing the position of this button has no effect on receiver performance itself.

⑮ STATION CALL buttons

These are used to recall preset broadcasting stations and to preset the station.

⑯ TUNING buttons (-, +)

The function of these buttons differs according to whether AUTO tuning or MANUAL tuning is selected during FM reception. The MANUAL tuning mode is automatically selected for AM reception.

[AUTO tuning mode]

When the "+" button is pressed, the frequencies are scanned in ascending order; when the "-" button is pressed, they are scanned in descending order. Scanning stops as soon as a station has automatically been tuned in.

[MANUAL tuning mode]

When the "+" button is pressed, the frequency increases and when the "-" button is pressed, it decreases. Every time either button is pressed, the frequency changes one step at a time and when the button is kept pressed, the frequency changes continuously.

⑰ TAPE MONITOR button (■ OFF, ■ ON)**[TAPE MONITOR]**

Press when playing the tape deck connected to the TAPE jacks.

⑱ INPUT SELECTOR buttons**[AUX/VCR]**

Press when listening to a stereo component connected to the AUX/VCR jacks.

[CD]

Press when listening to a stereo component connected to the CD jacks.

[PHONO]

Press when playing records on a turntable connected to the PHONO jacks.

[TUNER]

Press when listening to a radio broadcast.

3. ELECTRICAL PARTS LIST

NOTES:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.
 Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).
 560Ω 56 × 10¹ 561.....RD1/4PS [5] [6] [1] J
 47kΩ 47 × 10³ 473.....RD1/4PS [4] [7] [3] J
 0.5Ω 0R5.....RN2H [0] [5] [K]
 1Ω 010.....RS1P [0] [1] [0] K
- Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).
 5.62kΩ 562 × 10¹ 5621.....RN1/4SR [5] [6] [2] [1] F
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your parts Stock Control, the fast moving items are indicated with the marks $\star\star$ and \star .
 $\star\star$ GENERALLY MOVES FASTER THAN \star
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Miscellaneous Parts

P.C. BOARD ASSEMBLY

Mark	Symbol & Description	Part No.
	Complex assembly	AWZ1353
	Control assembly	GWY-379
	HEADPHONE assembly	Non supply
	SP TERMINAL assembly	Non supply
	S.S assembly	Non supply

OTHERS

Mark	Symbol & Description	Part No.
Δ	C901 Capacitor (0.01μF/AC125V)	ACG1003 (ACG-502)
Δ	\star T901 Power transformer (120V)	ATS1068
Δ	AC power cord	ADG-088
Δ	$\star\star$ Push switch	ASG-551
Δ	AC socket (OUTLET) (1P)	AKP-507
Δ	$\star\star$ FU601 Fuse (3.15A/125V)	AEK-124
	Antenna set	AEA1002

Complex Assembly (AWZ1353)

Mark	Symbol & Description	Part No.
$\star\star$	IC101	LA1265S
$\star\star$	IC301	NJM4558DXC
$\star\star$	IC701	PD2017
Δ	$\star\star$ IC501	STK4191-2GS
	$\star\star$ IC201	TA7343AP
$\star\star$	IC702	TC9172P
$\star\star$	IC601	μPC78M12H
$\star\star$	Q704, Q706 - Q708	DTA124ES (RN2203)
$\star\star$	Q709, Q714	DTA143ES (RN2201)
$\star\star$	Q701, Q705, Q710, Q713	DTC124ES (RN1203)

Mark	Symbol & Description	Part No.
$\star\star$	Q702	DTC143ES (RN1201)
$\star\star$	Q603	2SC1845
$\star\star$	Q201 - Q203, Q601, Q602, Q703,	2SC2458
$\star\star$	Q711, Q712, Q715, Q716	(2SC2603)
$\star\star$	Q3, Q4	2SC2668
$\star\star$	Q2	2SC2786
$\star\star$	Q5	2SK161 (2SK168)
$\star\star$	Q1	2SK241
\star	D1, D2	ITT310
\star	D609, D612	RD12EB (HZ12EB)
\star	D608	RD20EB (HZ20EB)
\star	D604, D607	RD5.6EB (HZ5.6EB)
\star	D101, D102	SVC321C2/D2
\star	D103, D104, D605, D606, D610,	1SS131
\star	D611, D702 - D709	
\star	D201, D202	11E2 (S5566)
Δ	\star D601, D602	11E2 (S5566)
Δ	\star D603	4D4B44

SWITCHES AND RELAY

Mark	Symbol & Description	Part No.
$\star\star$	S301 Push switch (TAPE MONITOR)	ASG-424
$\star\star$	S701 - S712 Tact switch (STATION 1-10 UP, DOWN)	ASG-712
$\star\star$	S302 Push switch AUX/V CR CD PHONO, TUNER	SUJ5L2B2B2L
$\star\star$	RY501 Relay	ASR-111

COILS, TRANSFORMERS AND FILTERS

Mark	Symbol & Description	Part No.
	L101 AM OSC coil	ATB-114
	L2 FM coil	ATC1003
	L102 FM DET coil	ATE-079
	L501, 502 AF choke coil	ATH1002
	L1 Axial inductor	LAU2R2M
	L103 Inductor	LTA472J (ATH-108)
	T101 AM ANT transformer	ATB-099
	T1 FM RF transformer	ATC-194
	T2 FM matching transformer	ATE-063
	F2, F3 FM ceramic filter	ATF-126
	F1 FM bandpass filter	ATF-155
	F101 AM ceramic filter	ATF-208

CAPACITORS

Mark	Symbol & Description	Part No.
Δ	C611 (0.01μF/AC125V)	ACG1002 (ACG-502)
	C606, C607 (4700μF/50V)	ACH-252
	C715 (47mF/5.5V)	ACH1011
	TC101, 106 Ceramic trimmer (20PF)	ACM-026
	C102	CCCCH150J50
	C16	CCCSL010C50
	C505, C506	CCCSL101J50
	C17	CCCSL150J50
	C112, C303, C304	CCCSL221J50
	C1	CCDCH040C50
	C13	CCDCH080D50
	C11	CCDCH150J50
	C12, C703, C704	CCDCH330J50
	C3	CCDRH180J50
	C5	CCDSL020C50
	C7	CCDSL101J50
	C14	CCDTH150J50
	C201	CEANP010M50
	C114, C204, C207, C210 - C212,	CEAS010M50
	C705	
	C708	CEAS1R5M50
	C511, C512, C609, C612	CEAS100M50
	C10, C202, C604	CEAS101M16
	C513	CEAS101M50
	C605	CEAS2R2M100

	C118, C301, C302, C313, C314,	CEAS2R2M50
	C317, C318	
	C206	CEAS221M16
	C701	CEAS222M6
	C120, C203, C711	CEAS3R3M50
	C111, C123, C710	CEAS330M16
	C121	CEAS4R7M50
	C119, C305, C306, C610, C706	CEAS470M10
	C601	CEAS470M25
	C509, C510	CEAS470M50

Mark	Symbol & Description	Part No.
	C608	CEAS471M35
	C603	CEAS471M6
	C501, C502	CEHAQ010M50
	C507, C508	CEHAQ101M25
	C602	CEHAQ470M25
	C117, C702, C707	CKCYB102K50
	C503, C504	CKCYB122K50
	C107, C133, C115, C213, C125, C307,	CKCYF103Z50
	C308, C709, C712 - C714	
	C104, C105, C116, C124	CKCYF223Z50
	C122	CKCYF473Z50
	C15	CKDYB102K50
	C315, C316	CKDYB391K50
	C2, C4, C8, C9, C18	CKDYF103Z50
	C108, C109	CKDYF223Z50
	C110	CKDYF473Z50
	C208, C209	CQMA223K50
	C309, C310	CQMA242J50
	C514, C515	CQMA473K50
	C311, C312	CQMA822J50
	C205	CQSA102J50
	C103	CQSA431J50

RESISTORS

NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
\star	VR101 Semi-fixed (47kΩ)	VRTB6VS473
\star	VR201 Semi-fixed (10kΩ)	VRTB6VS103
Δ	R601	RS2LMF122J
Δ	R602	RS2LMF152J
Δ	R607	RS1LMF272J
Δ	R603	RS1PMF□□□J
Δ	R608	RS1PMF102J
Δ	R611 (1/2W, 2.2MΩ)	ACN-209
Δ	R507 - R512	RD1/2PMF□□□J
Δ	R515 - R519, R522	RD1/4PMF□□□J
	R7	RD1/4PM151J
	Other resistors	RD1/8PM□□□J

OTHERS

Mark	Symbol & Description	Part No.
	Terminal (4P, ANTENNA)	AKA-017
	Pin jack (4P)	AKB-115
	Pin jack (6P)	AKB-117
\star	X701 Crystal resonator	ASS-025

Cont
SEMI

Mark

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

\star

COILS, TRANSFORMERS AND FILTERS

Mark	Symbol & Description	Part No.
L101	AM OSC coil	ATB-114
L2	FM coil	ATC1003
L102	FM DET coil	ATE-079
L501, 502	AF choke coil	ATH1002
L1	Axial inductor	LAU2R2M
L103	Inductor	LTA472J (ATH-108)
T101	AM ANT transformer	ATB-099
T1	FM RF transformer	ATC-194
T2	FM matching transformer	ATE-063
F2, F3	FM ceramic filter	ATF-126
F1	FM bandpass filter	ATF-155
F101	AM ceramic filter	ATF-208

CAPACITORS

Mark	Symbol & Description	Part No.
△	C611 (0.01μF/AC125V)	ACG1002 (ACG-502)
	C606, C607 (4700μF/50V)	ACH-252
	C715 (47mF/5.5V)	ACH1011
	TC101, 106 Ceramic trimmer (20PF)	ACM-026
C102		CCCH150J50
C16		CCCSL010C50
C505, C506		CCCSL101J50
C17		CCCSL150J50
C112, C303, C304		CCCSL221J50
C1		CCDCH040C50
C13		CCDCH080D50
C11		CCDCH150J50
C12, C703, C704		CCDCH330J50
C3		CCDRH180J50
C5		CCDSL020C50
C7		CCDSL101J50
C14		CCDTH150J50
C201		CEANP010M50
C114, C204, C207, C210 - C212, C705		CEAS010M50
C708		CEAS1R5M50
C511, C512, C609, C612		CEAS100M50
C10, C202, C604		CEAS101M16
C513		CEAS101M50
C605		CEAS2R2M100
C118, C301, C302, C313, C314, C317, C318		CEAS2R2M50
C206		CEAS221M16
C701		CEAS222M6
C120, C203, C711		CEAS3R3M50
C111, C123, C710		CEAS330M16
C121		CEAS4R7M50
C119, C305, C306, C610, C706		CEAS470M10
C601		CEAS470M25
C509, C510		CEAS470M50

Mark	Symbol & Description	Part No.
	C608	CEAS471M35
	C603	CEAS471M6
	C501, C502	CEHAQ010M50
	C507, C508	CEHAQ101M25
	C602	CEHAQ470M25
	C117, C702, C707	CKCYB102K50
	C503, C504	CKCYB122K50
	C107, C133, C115, C213, C125, C307, C308, C709, C712 - C714	CKCYF103Z50
	C104, C105, C116, C124	CKCYF223Z50
	C122	CKCYF473Z50
	C15	CKDYB102K50
	C315, C316	CKDYB391K50
	C2, C4, C8, C9, C18	CKDYF103Z50
	C108, C109	CKDYF223Z50
	C110	CKDYF473Z50
	C208, C209	CQMA223K50
	C309, C310	CQMA242J50
	C514, C515	CQMA473K50
	C311, C312	CQMA822J50
	C205	CQSA102J50
	C103	CQSA431J50

RESISTORS

NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
★	VR101 Semi-fixed (47kΩ)	VRTB6VS473
★	VR201 Semi-fixed (10kΩ)	VRTB6VS103
△	R601	RS2LMF122J
	R602	RS2LMF152J
△	R607	RS1LMF272J
△	R603	RS1PMF□□□J
△	R608	RS1PMF102J
△	R611 (1/2W, 2.2MΩ)	ACN-209
△	R507 - R512	RD1/2PMF□□□J
△	R515 - R519, R522	RD1/4PMF□□□J
	R7	RD1/4PM151J
	Other resistors	RD1/8PM□□□J

OTHERS

Mark	Symbol & Description	Part No.
	Terminal (4P, ANTENNA)	AKA-017
	Pin jack (4P)	AKB-115
	Pin jack (6P)	AKB-117
★	X701 Crystal resonator	ASS-025

Control Assembly (GWY-379)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC403	M5218PF
★★	IC401, IC402	BA3812L
★★	Q401	DTA124ES (RN2203)
★★	Q402	DTC124ES (RN1203)
★	D402 LED assembly	AEL-460
★	D404 - D406 LED assembly	AEL-461
★	D403 LED assembly	AEL-463
★	D407, D409	1SS131
★	D401	11E2

SWITCHES

Mark	Symbol & Description	Part No.
★★	S401 - S407 Tact switch AUTO/MONO, FM, AM, AUTO/ MANUAL MEMORY, SELECT, SIMULATED STEREO	ASG-711

CAPACITORS

Mark	Symbol & Description	Part No.
	C431, C432	CEASR68M50
	C405, C406	CEAS101M10
	C403, C404	CEAS470M25
	C427, C428	CEJAR22M50
	C401, C402, C409 - C412, C433, C434	CEJA4R7M35
	C435, C436	CKCYF103Z50
	C415, C416	CKDYB122K50
	C407, C408	CKDYB331K50
	C413, C414	CKDYB391K50
	C425, C426	CQMA123K50
	C421, C422	CQMA223K50
	C417, C418	CQMA392K50
	C429, C430	CQMA393K50
	C423, C424	CQMA682K50
	C419, C420	CQMA683K50

RESISTORS

NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
★	VR401 Variable resistor (Slide type, 250k) (BALANCE)	ACX-153
	VR402 Variable resistor (slide type, 100k) (VOLUME CONTROL)	ACX-154
	VR403 - VR407 Variable resistor (slide type, 30k) (GRAPHIC EQUALIZER)	ACX-152
	R419	RD1/2PM561J
	Other resistors	RD1/8PM□□□J

OTHERS

Mark	Symbol & Description	Part No.
★	V401 Fluorescent tube	AAV-039

Headphone Board Assembly

SWITCH

Mark	Symbol & Description	Part No.
★★	S901 Push switch (SPEAKERS)	SUJ6LYXS

RESISTORS

Mark	Symbol & Description	Part No.
△	R901, R902	RS1PMF331J

OTHERS

Mark	Symbol & Description	Part No.
	Jack (HEADPHONE)	AKN1002

SP Terminal Assembly

OTHER

Mark	Symbol & Description	Part No.
	Terminal (8P, SPEAKER)	AKE-111

S.S Assembly

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC802	M5201P
★★	IC801	M5218PF

CAPACITORS

Mark	Symbol & Description	Part No.
	C801	CEAS2R2M50
	C804	CEAS4R7M50
	C803	CKCYB331K50
	C805, C806	CKCYF103Z50
	C802	CQMA332K50

RESISTORS

NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
	All resistors	RD1/8PM□□□J


4. SCHEMATIC DIAGRAM

A


B

C

D

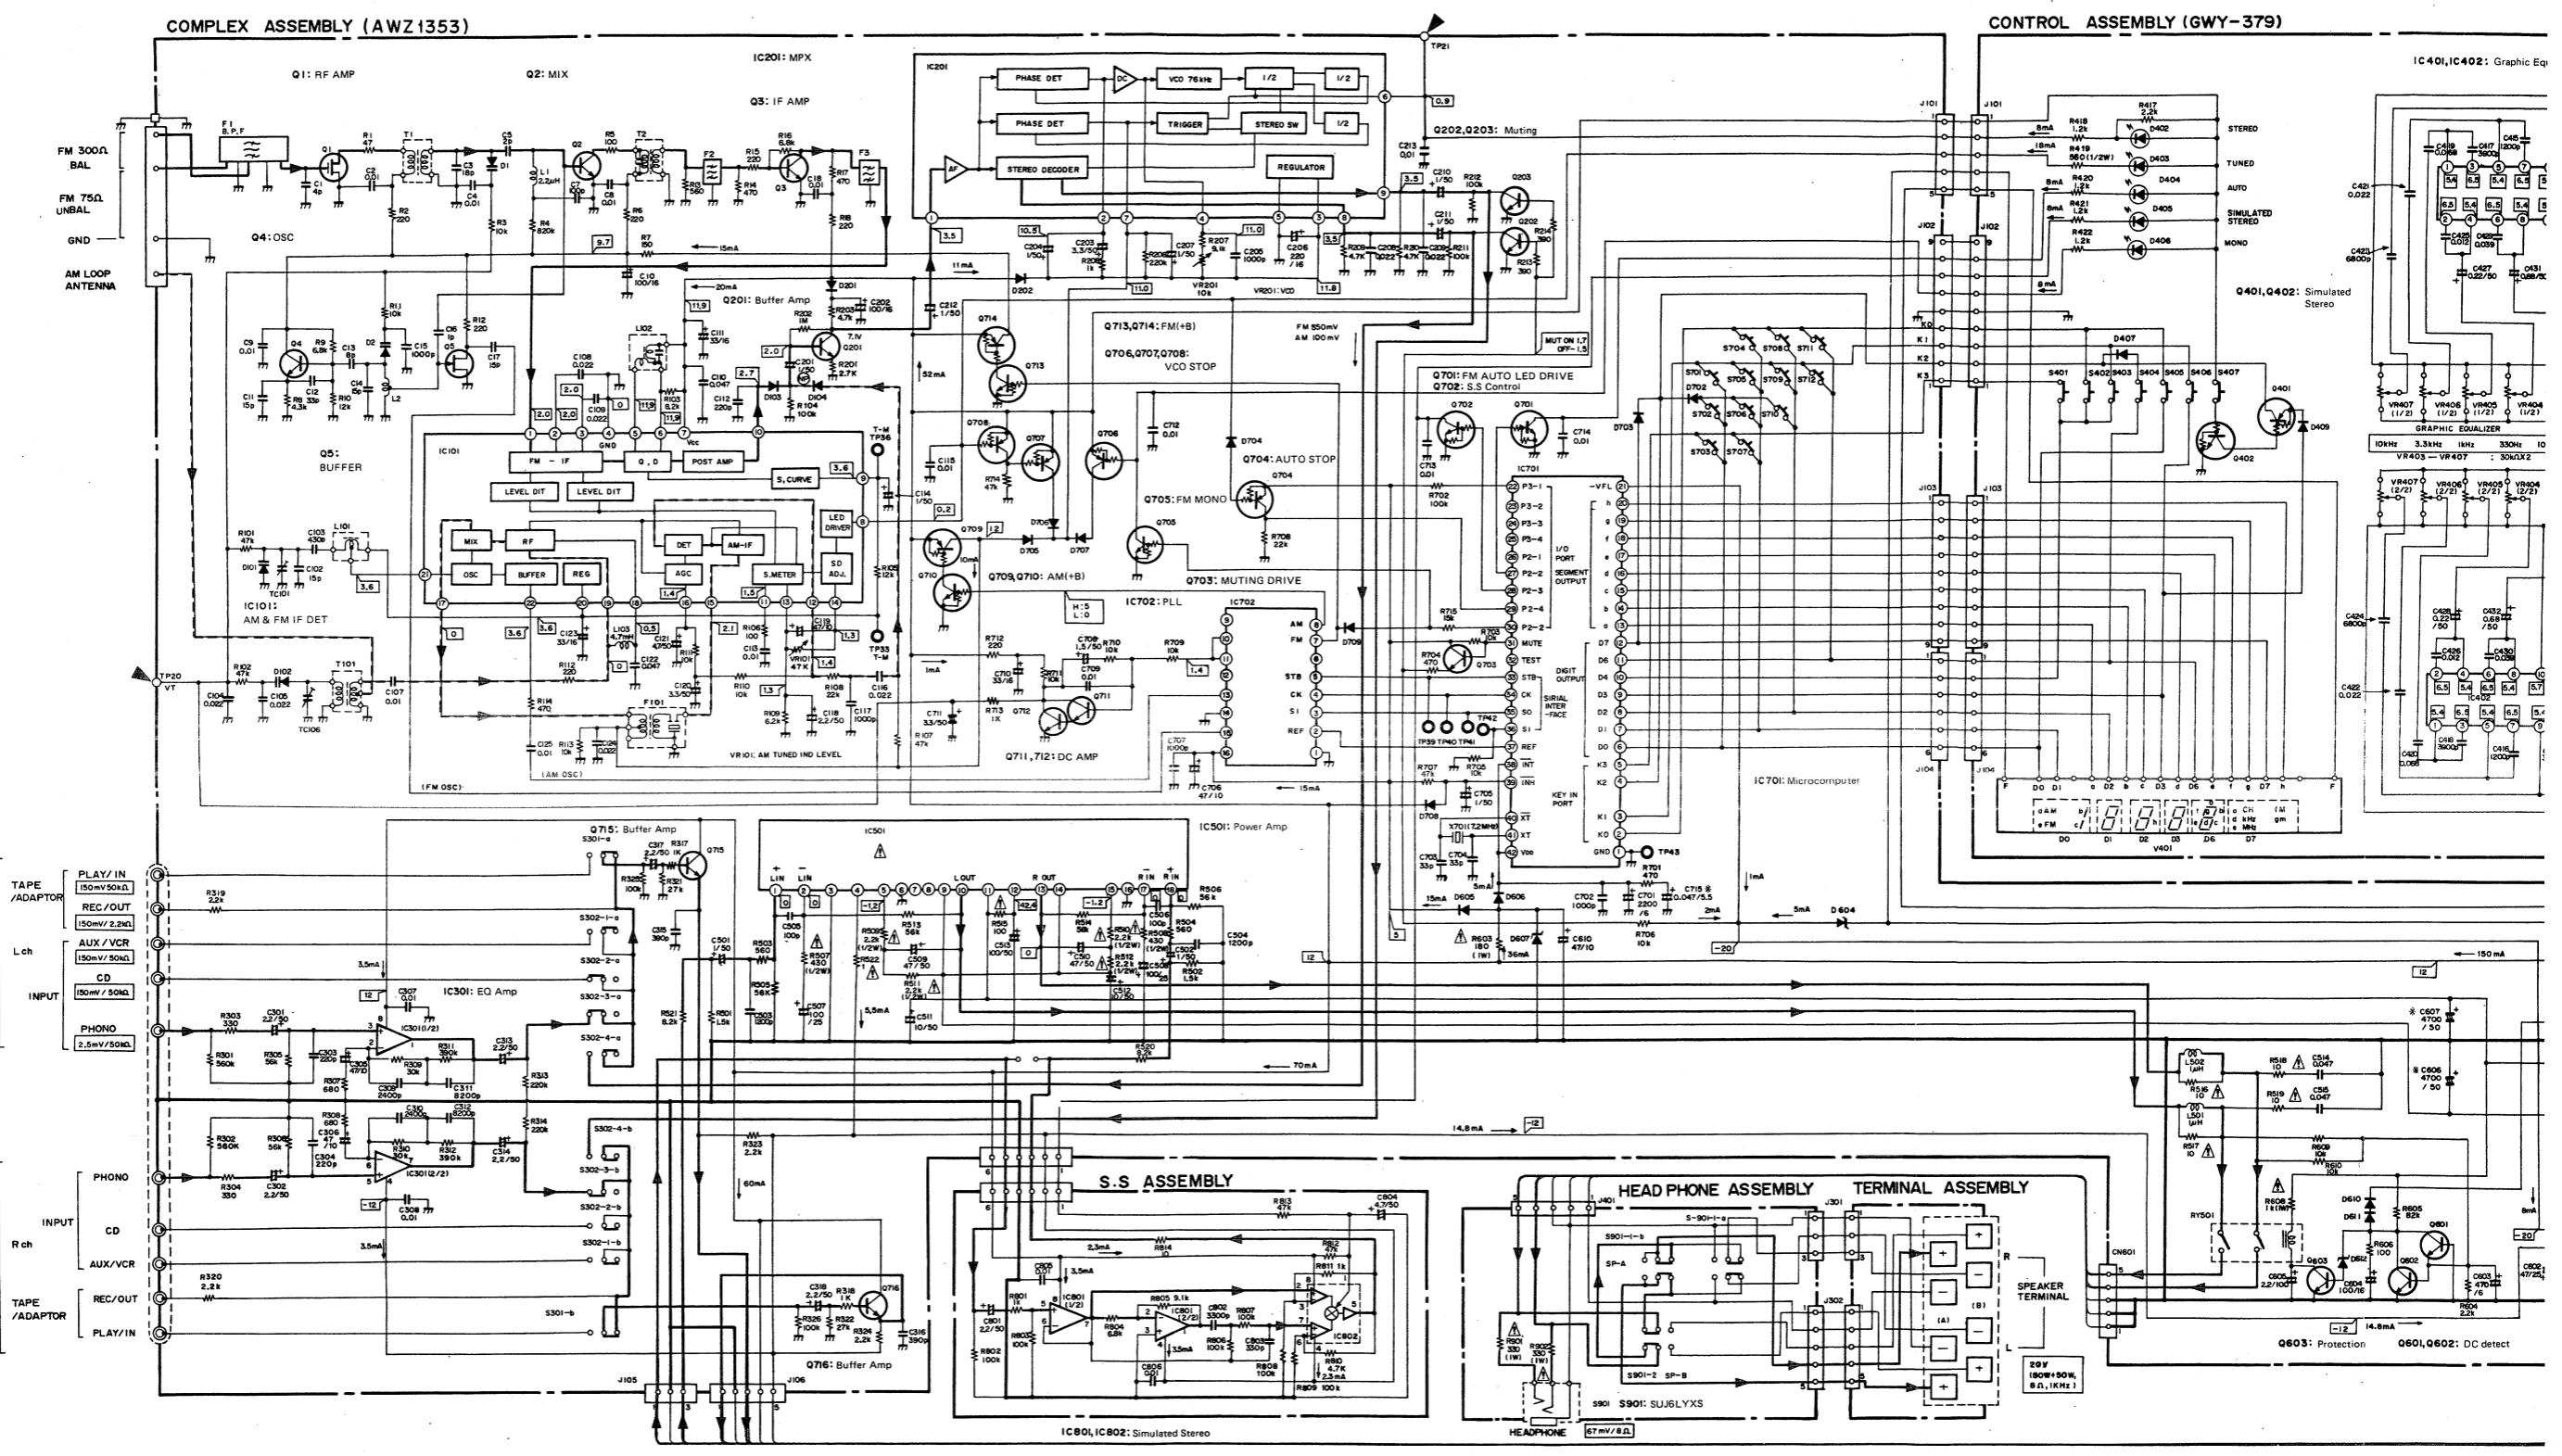

CONTROL ASSEMBLY (GWY-379)

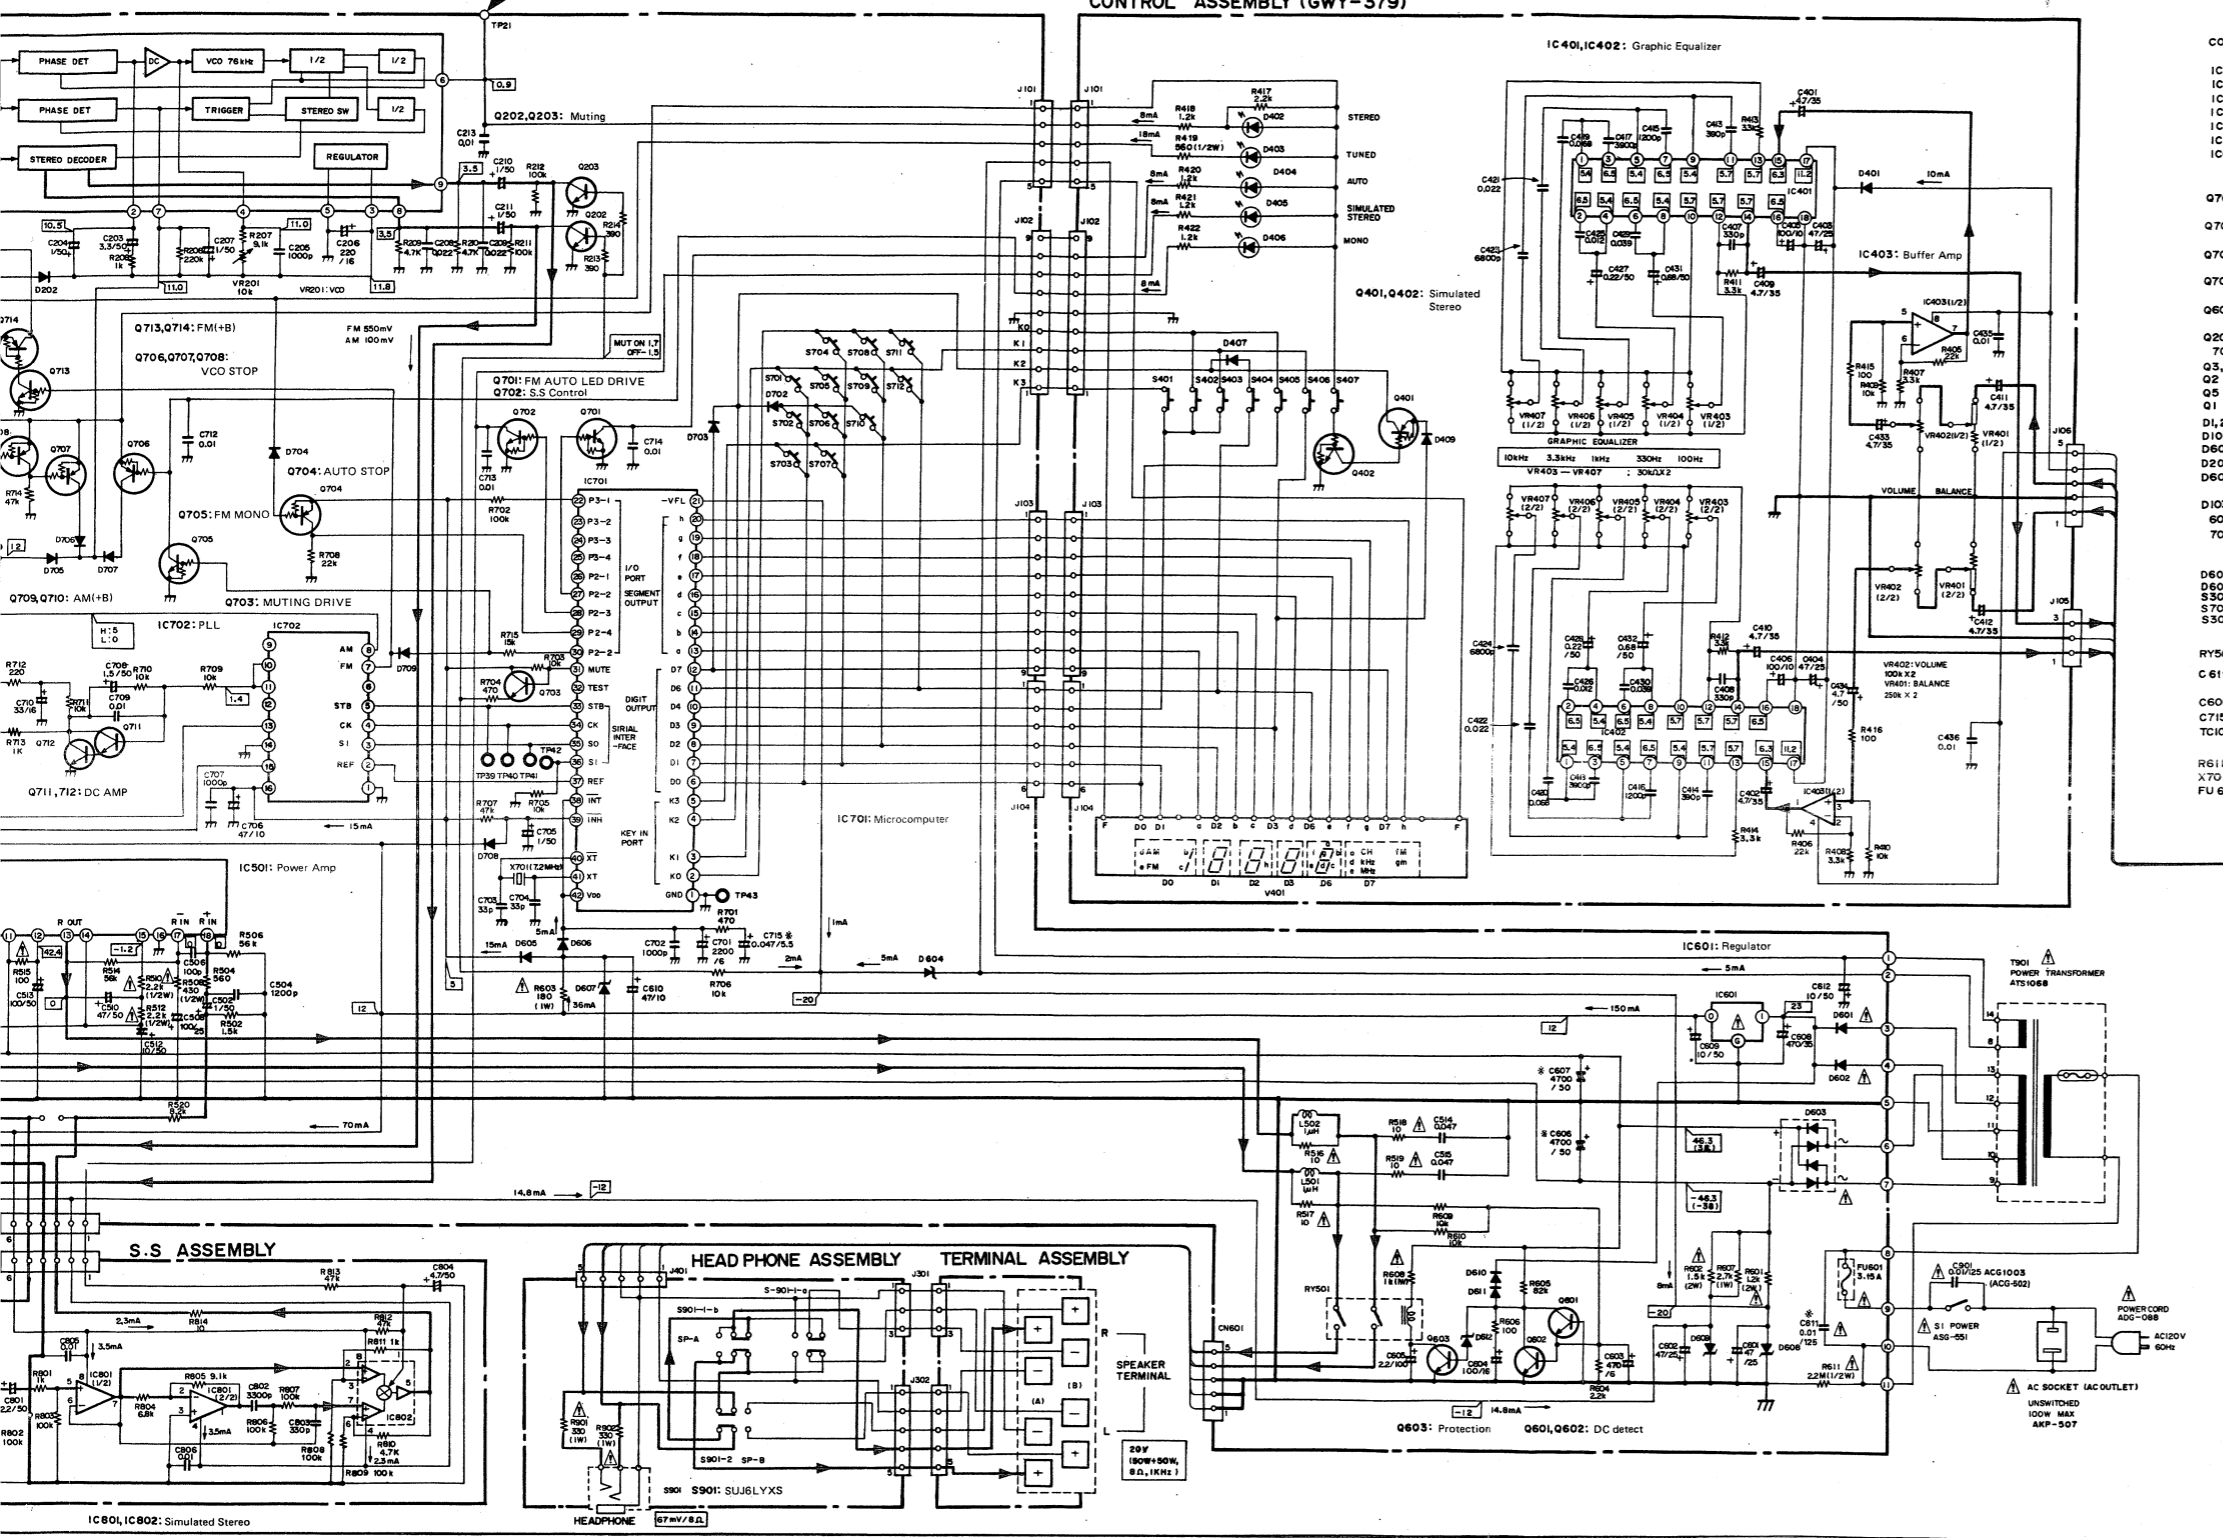

COMPLEX ASSEMBLY

IC101	LA12655
IC301	NJ4558DXC
IC701	PD2017
IC501	STK4191-26S
IC201	TA7343AP
IC702	TC9172P
IC601	µPC78M12H
Q704, 706-708	DTA124ES
Q709, 714	DTA143ES
Q701, 705, 710, 713	DTA124ES
Q702	DTA143ES
Q603	25C1845
Q201-203, 601, 602, 705, 711, 712, 715, 716	25C2458
Q3, 4	25C2658
Q5	25C2786
Q1	25K161(25K168)
D1, 2	IT1310
D101, 102	SVX21C2/DB
D508	RD20EB(H220EB)
D201, 202, 601, 602, D604, 607	RD5.6EB
D103, 104, 605, 606, 610, 611, 702-709	(H2.5.6EB) ISS131
D603	4D4B44
D608, 612	RD12E1HZ(2EB)
S301	ASG-424
S701-712	ASG-712
S302	SUJL2B2B2B2L
RY501	ASR-111
C611	AC61002
C606, 607	(AC6-502)
C715	ACH1011
TC101, 106	ACM-026
R611	ACN-209
X701	ASS-025
FU601	AEK-124

CONTROL ASSEMBLY

IC401, 402	BA3812L
IC403	M5218PF
Q401	DTA124ES
Q402	DTA143ES
D402	AEL-460
D404-406	AEL-461
D403	AEL-463
D407, 409	ISS131
D401	11E2(S5566)
VR403-407	VR403-152
VR401	ACX-153
VR402	ACX-154
S401-407	ASG-711
V401	AAV-039
S, S ASSEMBLY	
IC801	M5218PF
IC802	M5201P
HEADPHONE ASSEMBLY	
S901	SUJ6LYXS
COMPLEX ASSEMBLY	
VR101	VRTB6V5473
VR201	VRTB6V5103
T1	ATC-194
T2	ATE-063
T101	ATB-099
L1	LAU2R2M
L2	ATC1003
L101	ATB-114
L102	ATE-079
L103	LTA472J
L501, 502	ATM1002
F1	ATF-155
F2, 3	ATF-126
F101	ATF-208

- RESISTORS: Indicated in Ω, 1/4W, 1/8W and 1/10W, ±5% tolerance unless otherwise noted; k: 1k, M: 1M, (F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% tolerance
 - CAPACITORS: Indicated in capacity (µF)/voltage (V) unless otherwise noted; p: pF. Indication without voltage is 50V except electrolytic capacitor.
 - VOLTAGE, CURRENT: : Signal voltage at 50W + 50W, 8Ω output (1 kHz); : DC voltage (V) at no input signal; Value in () is DC voltage at rated power. : DC current at no input signal
 - OTHERS: : Signal route. : Adjusting point. The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation. * marked capacitors and resistors have para numbers. The underlined indicates the switch position.
- This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

5. SWITCHES:

THE UNDERLINED INDICATES THE SWITCH POSITION

S1	POWER ON-OFF	S701	STATION 1
S301	TAPE MONITOR	S702	STATION 2
S305-1	AUX / VCR	S703	STATION 3
S302-2	CD	S704	STATION 4
S302-3	PHONO	S705	STATION 5
S302-4	TUNER	S706	STATION 6
S401	AUTO/MONO	S707	STATION 7
S402	FM	S708	STATION 8
S403	AM	S709	STATION 9
S404	AUTO/MANUAL	S710	STATION 10
S405	MEMORY	S711	UP
S406	SELECT	S712	DOWN
S407	SIMULATED STEREO		

S901: SPEAKERS
 S901-1 SP-A ON-OFF
 S901-2 SP-B ON-OFF

A





B

C

D

5. P.C. BOARDS CONNECTION DIAGRAM

Q1 Q4 Q5 Q2 IC301 IC601 Q601 Q602 Q603
 Q712 Q711 Q713 Q714 Q710 IC101 Q708 Q707 Q715 IC501 IC601 Q601 Q602 Q603
 IC702 Q709 Q203 Q202 IC201 Q201 IC301 Q706 Q716 Q705 Q704 Q703 Q701 Q702 IC701
 TC101 VR101 VR201 TC106

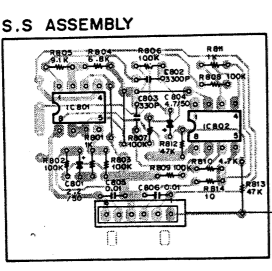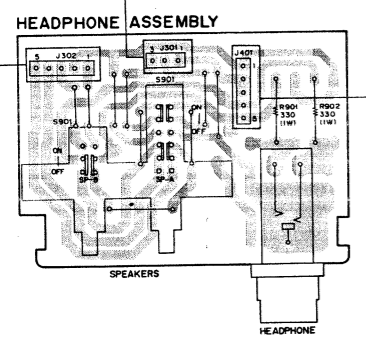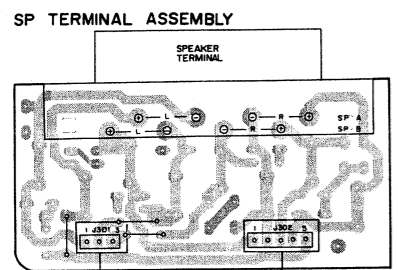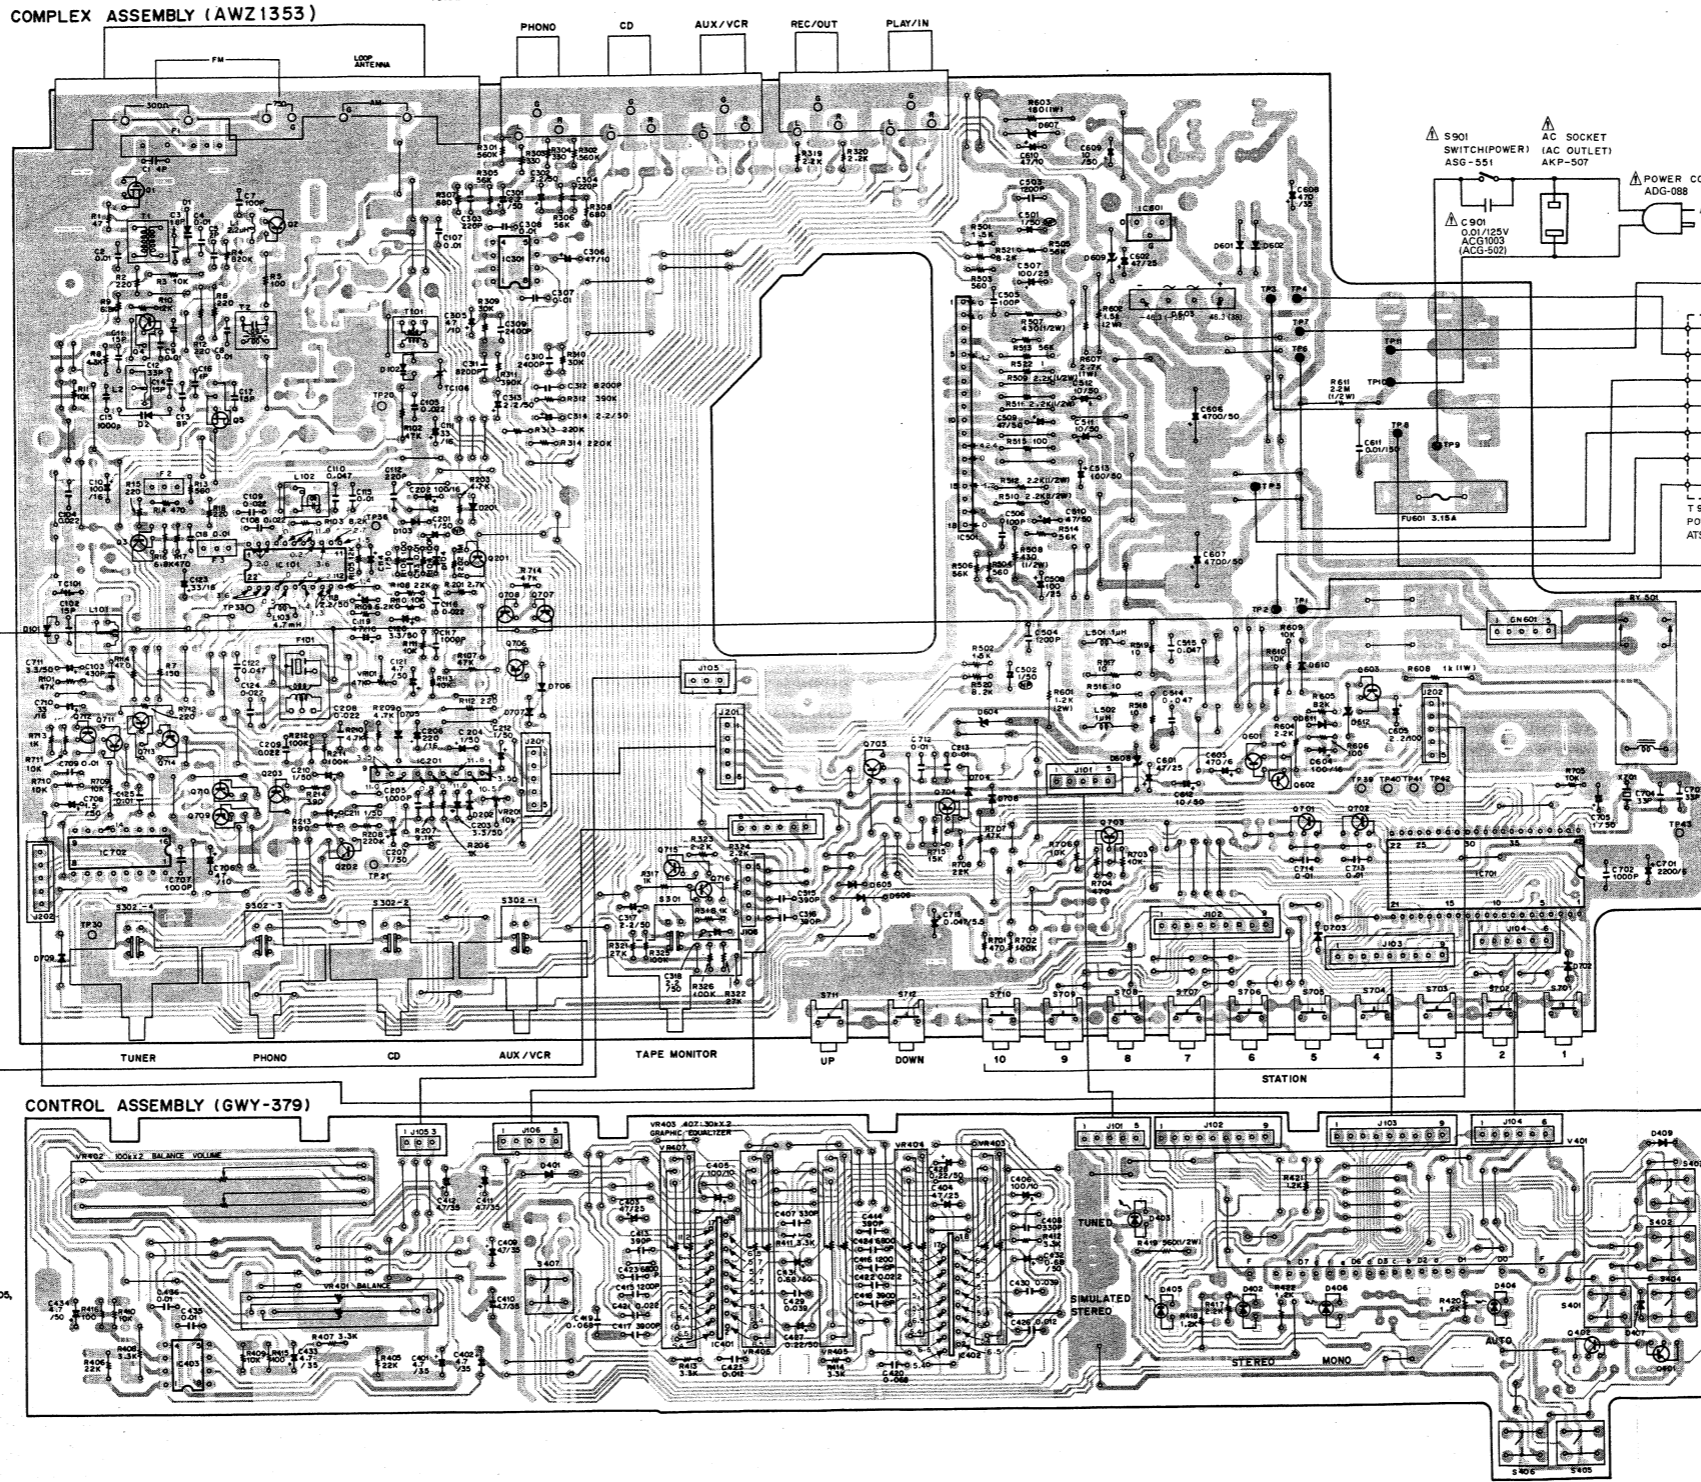

- | | |
|-------------|---------------------|
| IC702 | : TC9172P |
| IC101 | : LA1265S |
| IC201 | : TAY343AP |
| IC301 | : NJM4558DXC |
| IC501 | : STK4191-20S |
| IC601 | : μPC79M12H |
| IC701 | : PD207 |
| Q1 | : 2SK241 |
| Q2, Q4 | : 2SC2786 |
| Q5 | : 2SK161(2SK168) |
| Q201-Q203, | : 2SC2458 |
| Q601, Q602, | (2SC2803) |
| Q703, Q711, | |
| Q712, Q715, | |
| Q716 | : 2SC1845 |
| Q603 | : 2SC1845 |
| Q701, Q705, | : DTC124ES |
| Q710, Q713, | : 1N41203 |
| Q702 | : DTC143ES (RN1201) |
| Q704, Q706, | : DTA124ES |
| Q707, Q708, | : 1N42203 |
| Q709, Q714, | : DTA143ES (RN2201) |
| D1, D2 | : 1T1310 |
| D101, D102 | : SVC321C2/D2 |
| D103, D104, | |
| D703, D709, | |
| D605, D606, | : 1SS151 |
| D610, D611, | |
| D702, | |
| D201, D202, | : 1E2(S5566) |
| D601, D602, | |
| D603 | : 4D4B44 |
| D604, D607 | : RD3.6E (HZ3.6E) |
| D608 | : RD20E (HZ20E) |
| D609, D612 | : RD12E (HZ12E) |


IC 801 : MS218PF
 IC 802 : MS201P

Q401, Q704, Q706-Q709, Q714
 Q402, Q701, Q702, Q705, Q710, Q713

A
B
C
D

A
B
C
D

6. EXPLODED VIEWS AND PARTS LIST

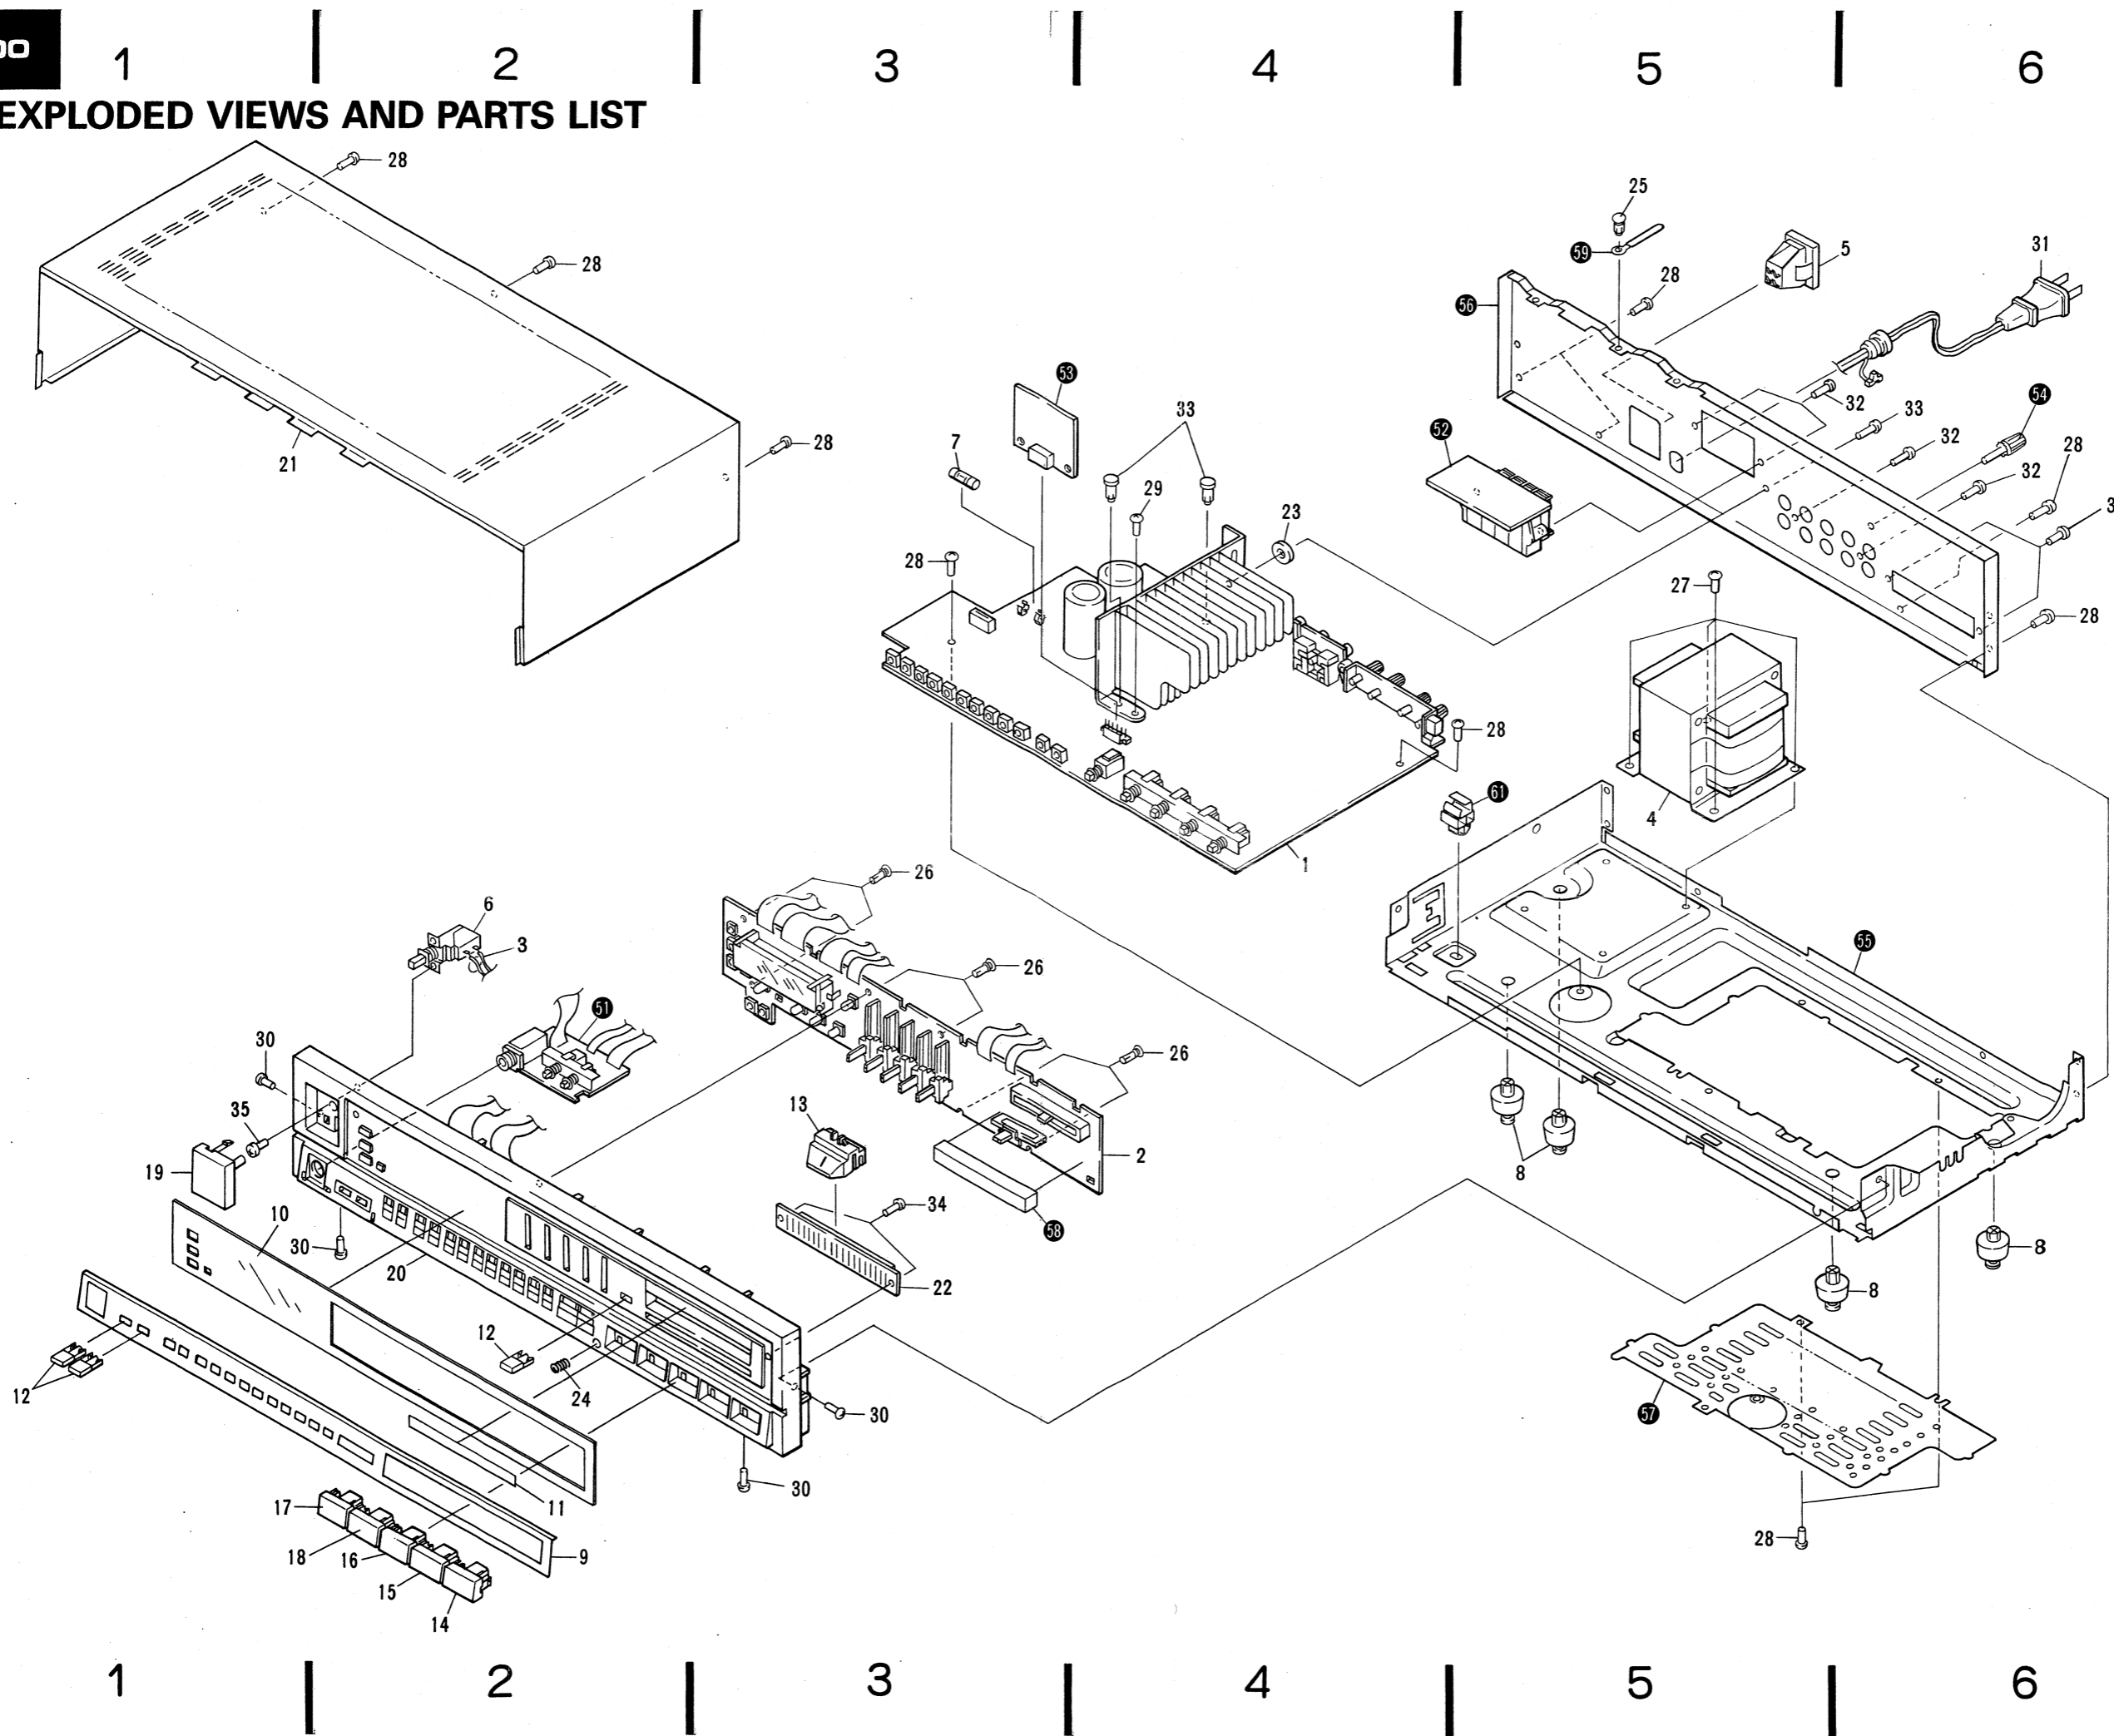

A
B
C
D

A
B
C
D

1 2 3 4 5 6

NOTES:

- Parts without part number cannot be supplied.
- The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your parts Stock Control, the fast moving items are indicated with the marks $\star\star$ and \star .
 $\star\star$ **GENERALLY MOVES FASTER THAN \star**
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by " \odot " are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

● Parts List

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	AWZ1353	Complex assembly		25.	AEC-471	Nylon rivet
	2.	GWY-379	Control assembly		26.	AEC-558	Nylon rivet
\triangle	3.	ACG1003 (ACG-502)	C901 Capacitor (0.01 μ F/AC125V)		27.	ABA-298	Screw
\triangle	\star 4.	ATS1068	T901 Power transformer (120V)		28.	ABA1009	Screw
					29.	ABA1007	Screw
\triangle	5.	AKP-507	AC socket (OUTLET) (1P)		30.	ABA1011	Screw
\triangle	$\star\star$ 6.	ASG-551	S1 Push switch (POWER)	\triangle	31.	ADG-088	AC power cord
\triangle	$\star\star$ 7.	AEK-124	FU601 Fuse (3.15A/125V)		32.	BBZ30P080FZK	Screw
	8.	AEC-784	Leg assembly		33.	PBZ25P100FMC	Screw
	9.	AAH1023	Aluminum sash		34.	VPZ23P060FMC	Screw
					35.	VMZ30P060FCU	Screw
	10.	AAK1212	Sheet panel		51.		Headphone assembly
	11.	AAK1214	Volume sheet		52.		SP terminal assembly
	12.	AAZ-306	Push knob A (SPEAKERS A, B, SS)		53.		S.S assembly
	13.	AAZ-385	Slide knob (VOLUME CONTROL)		54.		Terminal (GND)
	14.	AAD1130	Function knob (TUNER)		55.		Chassis
	15.	AAD1131	Function knob (PHONO)		56.		Rear panel
	16.	AAD1132	Function knob (CD)		57.		Bottom plate
	17.	AAD1133	Function knob (TAPE/MONITOR)		58.		Cushion
	18.	AAD1134	Function knob (AUX/VCR)		59.		Binder
	19.	AAZ-404	Knob (POWER)		60.		Binder
	20.	AMB1159	Front panel		61.		P.C. Board holder
	21.	ANE-623	Bonnet case				
	22.	ANZ-323	Blinder				
	23.	ABF1003	Washer				
	24.	ABH1003	Coil spring				

7. ADJUSTMENTS

FM TUNER SECTION

- Connect the FM signal generator (FM SG) to the FM ANTENNA 300Ω terminal through a 300Ω dummy antenna.
 - Set the SX-1600 to the FM band.
- (*1) Tune the FM SG to the SX-1600.
- (*2) Connect the FM multiplex stereo signal generator to the FM SG external modulator terminal. Set the modulation to Main 1 kHz/L+R/±68.25kHz deviation. Pilot 19kHz/±6.75kHz deviation.

Step	FM SG (1kHz, ±75kHz deviation)		SX-1600 Frequency display	Adjustment point	Adjustment procedure
	Frequency	Level			
1	98.0MHz	30 to 40 dB	98.0MHz	T1, T2	Adjustment until DC voltage between IC101 (13) pin and ground is maximum.
2	98.0MHz	60dB	98.0MHz	L102	Adjust DC voltage between terminal TP (T-M) and TP (T-M) to 0±50mV.
3	98.0MHz (*1)	60dB	98.0MHz	VR201	Adjust signal between terminal TP (no.21) (VCO) and ground to 38kHz (within ±500Hz).
	not modulation				

Note: Adjust the VCO by inserting a resistance of 4.7kΩ between TP21 (VCO) and GND. (VCO will not appear at the TP pin if a resistance of 4.7kΩ is not inserted.)

AM TUNER SECTION

MW Tuner Section

- Connect the furnished AM loop antenna between terminals AM ANTENNA and GND.
 - Connect the AM signal generator (AM SG) to the AM ANTENNA terminal through a 10kΩ resistor.
 - Set the SX-1600 to the AM (MW) band.
- (*3) There are 2 kinds of models in the SX-1600 system. The one is the channel step frequency of 10kHz and the other is 9kHz. Accordingly, in case of model 10kHz step, the adjustment should be performed by using the frequency of Item "10kHz step" and in case of model 9kHz step, the adjustment should be performed by using the frequency of Item "9kHz step".
- (*4) Tune the AM SG to the SX-1600.

Step	AM SG (400Hz, 30% modulation)			SX-1600 Frequency display (*3)		Adjustment point	Adjustment procedure
	Frequency (*3)		Level	10kHz step	9kHz step		
	10kHz step	9kHz step					
1	No signal			530kHz	531kHz	L101	1.2V $\begin{matrix} -0.2 \\ +0.3 \end{matrix}$ V DC between terminal TP (no.20) (VT) and ground.
2	No signal			1600kHz	1602kHz	TC101	10±0.5V DC between terminal TP (no.20) (VT) and ground.
3	Repeat steps 1 and 2 until both specifications are correct.						
4	600kHz (*4)	603kHz (*4)	76dB	600kHz	603kHz	T101	Adjust until DC voltage between IC101 13 pin (AMS) and ground is maximum.
5	1400kHz(*4)	1395kHz(*4)	76dB	1400kHz	1395kHz	TC106	
6	Repeat steps 4 and 5 until maximum sensitivity is attained						
7	1000kHz	999kHz	76dB	1000kHz	999kHz	VR101	Adjust a VR101 to light up a tuning indicator.


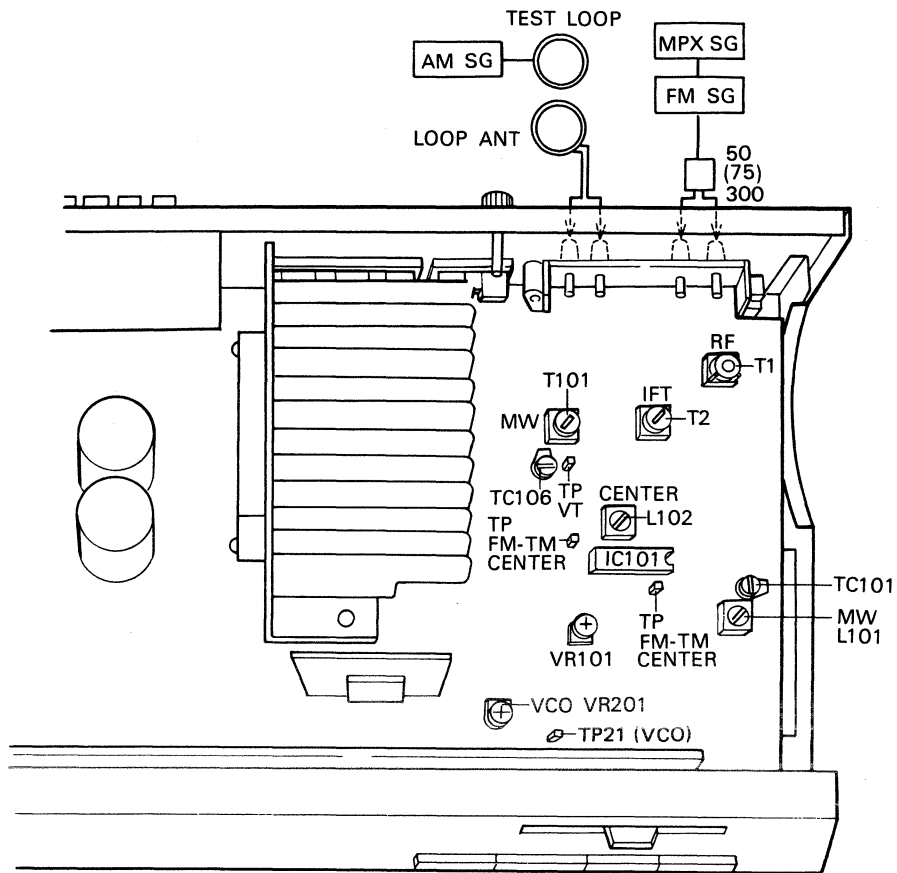


Fig. 8-1 Adjustment points

9. PACKING

Parts List

Mark	No.	Part No.	Description
	1.	AEA1002	Antenna set
	2.	ARB1051	Operating instructions (English)
	3.
	4.	AHA-394	Side pad
	5.	AHD1187	Packing case

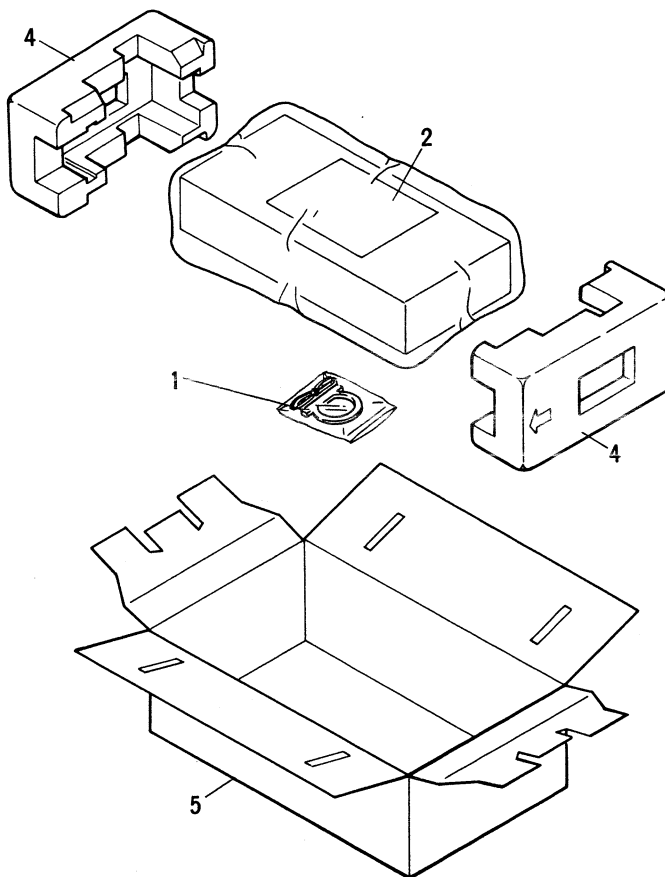


10. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

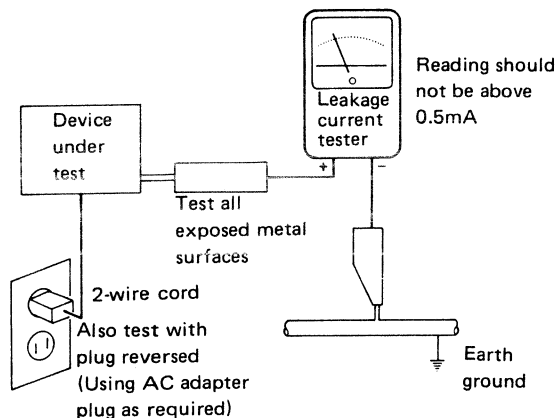

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

 **PIONEER**

Service Manual

**CIRCUIT DESCRIPTIONS
REPAIR & ADJUSTMENTS**

**ORDER NO.
ARP1010 - 0**

STEREO RECEIVER

SX-1500(BK)

MODEL SX-1500(BK) COMES IN SEVEN VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Power requirement	Destination
KU	AC120V only	U.S.A.
KC	AC120V only	Canada
S	AC110V, 120V, 220V, 240V (switchable)	General market
HEZ	AC220V, 240V (switchable)	West Germany
HE	AC220V, 240V (switchable)	European continent
HB	AC240V, 220V (switchable)	United Kingdom
YP	AC240V	Australia

- This service manual is applicable to the KU type.
- As to the KC type please refer to the additional service manual (ARP1011).
- As to the SX-1500(BK) HE and HB types please refer to the additional service manual (ARP1103).
- As to the S and HEZ types please refer to the additional service manual (ARP1104).
- As to the SX-1500(BK) YP type please refer to the additional service manual (ARP1105).

CONTENTS

1. SAFETY INFORMATION	2	7. P.C. BOARD CONNECTION DIAGRAM	13
2. SPECIFICATIONS	2	8. SCHEMATIC DIAGRAM	17
3. FRONT PANEL FACILITIES	3	9. ADJUSTMENTS	21
4. PARTS LOCATION	5	10. BLOCK DIAGRAM	23
5. ELECTRICAL PARTS LIST	7	11. CIRCUIT DESCRIPTIONS	25
6. EXPLODED VIEW	10	12. PACKING	26

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE AND ENGINEERING, INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
TEL: (213) 420-5700

PIONEER ELECTRONIC (EUROPE) N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775-28-08
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia
TEL: (03) 580-9911

SG© FEB. 1986


1. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

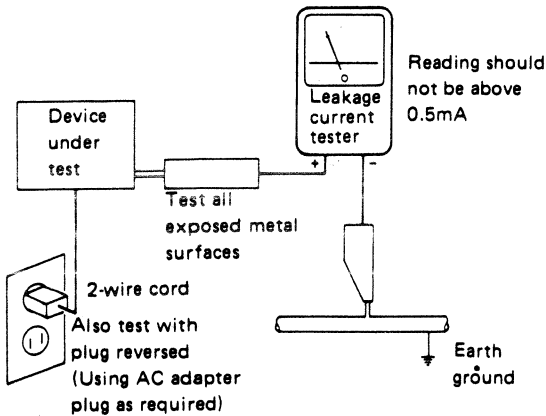

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. SPECIFICATIONS

Amplifier Section

Continuous Average Power Output is 45 watts* per channel, min., at 8 ohms from 40 Hertz to 20,000 Hertz with no more than 0.3% total harmonic distortion.

Continuous Power Output (both channel driven)	
1 kHz, T.H.D. 0.3%, 8 Ω	48 W + 48 W
40 Hz - 20 kHz, T.H.D. 0.3%, 8 Ω	45 W + 45 W
Total Harmonic Distortion	
1 kHz, 22.5 W, 8 Ω	0.05%
Input (Sensitivity/Impedance)	
PHONO	2.5 mV/47 k Ω
CD, TAPE PLAY, AUX, VCR	150 mV/22 k Ω
Phono Overload Level (T.H.D. 0.01%, 1,000 Hz)	
PHONO	130 mV
Output Level	
TAPE REC	150 mV
Frequency Response	
PHONO (RIAA Equalization)	30 Hz to 20,000 Hz \pm 0.5 dB

CD, AUX, VCR	10 Hz to 70,000 Hz \pm 0.5 dB
Hum and Noise (IHF, short circuited, A network)	
PHONO	72 dB
CD, TAPE PLAY, AUX, VCR	94 dB
Graphic Equalizer frequency band	
100 Hz, 330 Hz, 1 kHz, 3.3 kHz, 10 kHz, \pm 8 dB	

FM Tuner Section

Frequency range	87.5 MHz to 108 MHz
Usable Sensitivity	11.2 dBf (1.0 μ V/75 Ω)
50 dB Quieting Sensitivity	
MONO	15.3 dBf (1.6 μ V/75 Ω)
STEREO	38.3 dBf (22.5 μ V/75 Ω)
Signal-to-Noise Ratio	
MONO	78 dB (at 85 dBf)
STEREO	75 dB (at 85 dBf)
Distortion	
STEREO	0.5% (1 kHz)
Alternate Channel Selectivity	55 dB (400 kHz)
Stereo Separation	35 dB (1 kHz)
Frequency Response	30 Hz to 15 kHz, (\pm 1/2) dB
Antenna Input	300 Ω balanced, 75 Ω unbalanced

AM Tuner Section

Frequency range
 When 10 kHz step 530 kHz to 1,600 kHz
 When 9 kHz step 531 kHz to 1,602 kHz

Sensitivity
 IHF, Loop antenna 300 μ V/m

Selectivity 20 dB

Signal-to-Noise Ratio 50 dB

Antenna AM Loop Antenna

Miscellaneous

Power Requirements
 U.S., Canadian model AC 120 Volts, 60 Hz

Power Consumption 175 Watts

Dimensions 420 (W) x 98 (H) x 220 (D) mm
 16-9/16 (W) x 3-7/8 (H) x 8-11/16 (D) in

Weight (without package) 4.3 kg (9 lb 8 oz)

Furnished Parts


FM T-type Antenna 1
 AM Loop Antenna 1
 Operating Instructions 1

** Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier.*

NOTE:

Specifications and design subject to possible modification without notice due to improvements.

3. FRONT PANEL FACILITIES

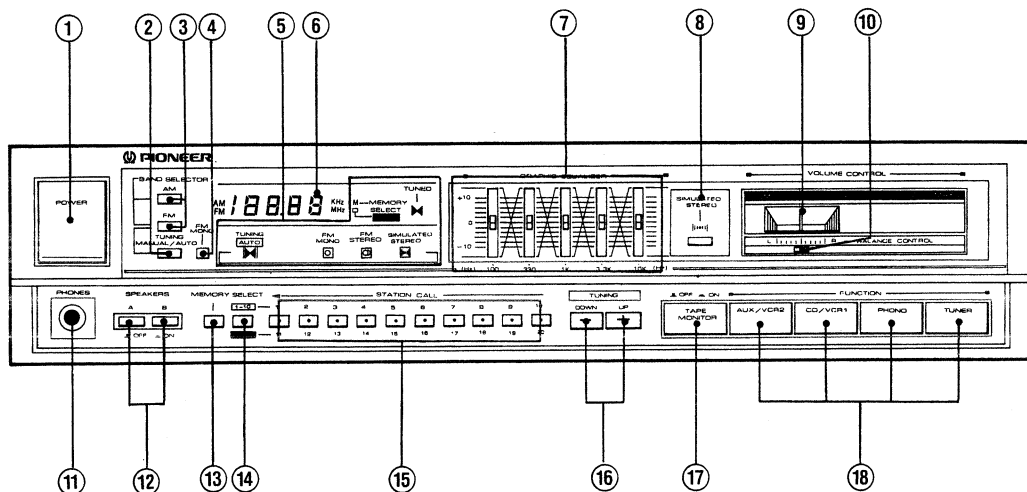

The illustration shows model SX-1500.

① POWER button

When this button is pressed, power is supplied to the unit. To turn power off, press the button again to the released position.

② TUNING MANUAL/AUTO button

Works during FM reception. Use to select either the AUTO mode or MANUAL mode for FM reception. Indicators on the display panel show whether the mode selected is MANUAL or AUTO.

③ BAND SELECTOR buttons

[Model SX-1500]

These buttons are used to select either AM or FM reception.
AM: Push this button for AM reception.
FM: Push this button for FM reception.

[Model SX-1500L]

These buttons are used to select MW, LW or FM reception.
MW/LW: Every time the MW/LW button is pressed, MW or LW reception is selected alternately. The band selected, MW or LW, is indicated alternately on the frequency display for easy confirmation.

FM: Push this button for FM reception.

④ FM MONO button

Normally, the MONO indicator remains off. However, it may not be possible to tune in a desired FM station because it is too far away or because its signals are too weak. In cases like these, press the button to set the reception to the monaural mode (MONO indicator lights) and tune in the station. The program of an FM stereo broadcast will be heard in mono. The setting of the FM MONO button (ON or OFF) is memorized along with the station's frequency in the STATION CALL buttons.

When using the preset tuning feature, reception will be in the mode-selected when the station was memorized. This button will not function for AM (MW or LW) reception.

⑤ Indicators

[MEMORY] (M)

This lights when the MEMORY button is pressed. Stations can be preset into the STATION CALL buttons while this indicator is on.

[SELECT (11 - 20)] (■)

This lights when the SELECT button is pressed and mode 2 (11 - 20) is established.

[TUNED] (▶)

This lights to indicate that a station has been optimally tuned in.

[TUNING AUTO] ()


Lights when the auto tuning mode is selected during FM reception.

[FM MONO] ()

Lights when the FM MONO button is pressed to select monaural FM reception.

[FM STEREO] ()

This lights during FM stereo reception.

[SIMULATED STEREO] ()

This lights when the simulated stereo button is pressed and the simulated stereo mode is established.

⑥ Frequency display

This display normally shows the frequency of the station selected. When a STATION CALL button is pressed, the channel number for that station (the number of the STATION CALL button) is displayed for a few seconds. The display will show **--CH** during other than preset tuning.

⑦ GRAPHIC EQUALIZER controls

The equalizer is divided into five frequency ranges (100 Hz, 330 Hz, 1 kHz, 3.3 kHz, 10 kHz) to tailor music to the individual taste of the listener.

⑧ SIMULATED STEREO button

This turns monaural signals into simulated stereo sound. Use this when you wish to experience the sense of stereo presence with AM broadcasts, VCR or other monaural signal sources.

NOTE:

This function can also be used with stereo sources, but it will result in a different sound from the normal stereo sound.

⑨ VOLUME control**⑩ BALANCE control****⑪ PHONES jack**

This is a standard "plug-type jack" for headphones.

⑫ SPEAKERS buttons ( OFF,  ON)

These are used to select the speaker through which you wish to listen.

A: When the speakers connected to A terminals are in use.

B: When the speakers connected to B terminals are in use.

- Turn both A and B speakers to OFF position when only the HEADPHONES are in use.

NOTE:

No sound will be heard through the speakers when both A and B buttons are depressed if only one set of speakers has been connected to either A or B SPEAKERS terminals.

⑬ MEMORY button

This is used to memorize stations. When the button is pressed, the MEMORY indicator will light. To memorize the frequency of any station, press the STATION CALL button while the MEMORY indicator is lit.

⑭ SELECT button

This button is used to set the STATION CALL buttons to Mode 1 (1–10) or MODE 2 (11–20). Mode 2 (11–20) is obtained when the button is pressed and select indicator is lit.

NOTE:

Changing the position of this button has no effect on receiver performance itself.

⑮ STATION CALL buttons

These are used to recall preset broadcasting stations and to preset the station.

⑯ TUNING buttons (–, +)

The function of these buttons differs according to whether AUTO tuning or MANUAL tuning is selected during FM reception. The MANUAL tuning mode is automatically selected for AM reception.

[AUTO tuning mode]

When the "+" button is pressed, the frequencies are scanned in ascending order; when the "–" button is pressed, they are scanned in descending order. Scanning stops as soon as a station has automatically been tuned in.

[MANUAL tuning mode]

When the "+" button is pressed, the frequency increases and when the "–" button is pressed, it decreases. Every time either button is pressed, the frequency changes one step at a time and when the button is kept pressed, the frequency changes continuously.

⑰ TAPE MONITOR button ( OFF,  ON)**[TAPE MONITOR]**

Press when playing the tape deck connected to the TAPE jacks.

⑱ FUNCTION buttons**[AUX/VCR 2]**

Press when listening to a stereo component connected to the AUX/VCR 2 jacks.

[CD/VCR 1]

Press when listening to a stereo component connected to the CD/VCR 1 jacks.

[PHONO]

Press when playing records on a turntable connected to the PHONO jacks.

[TUNER]


Press when listening to a radio broadcast.

4. PARTS LOCATION

NOTES:

- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
★★ GENERALLY MOVES FASTER THAN ★
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.


Front Panel View

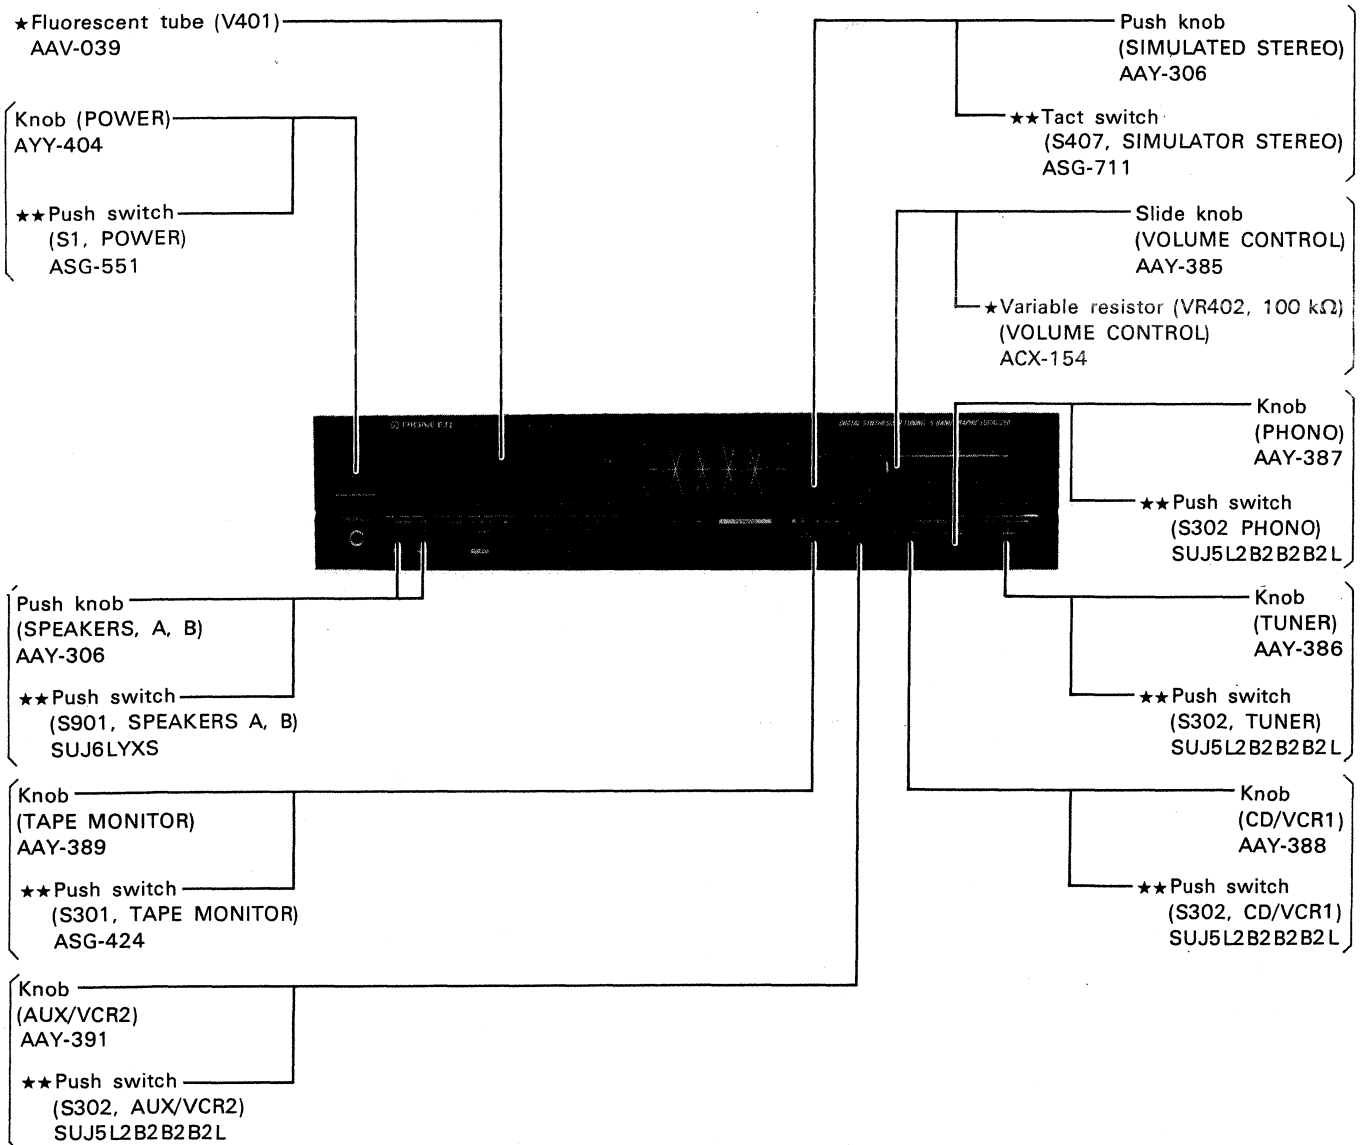


Note: The parts described above the drawn out lines show those which are attached to the front side of the front panel. The parts described below show those attached to the rear side of the front panel.

X-1500(BK)

Top View with Bonnet Case Removed

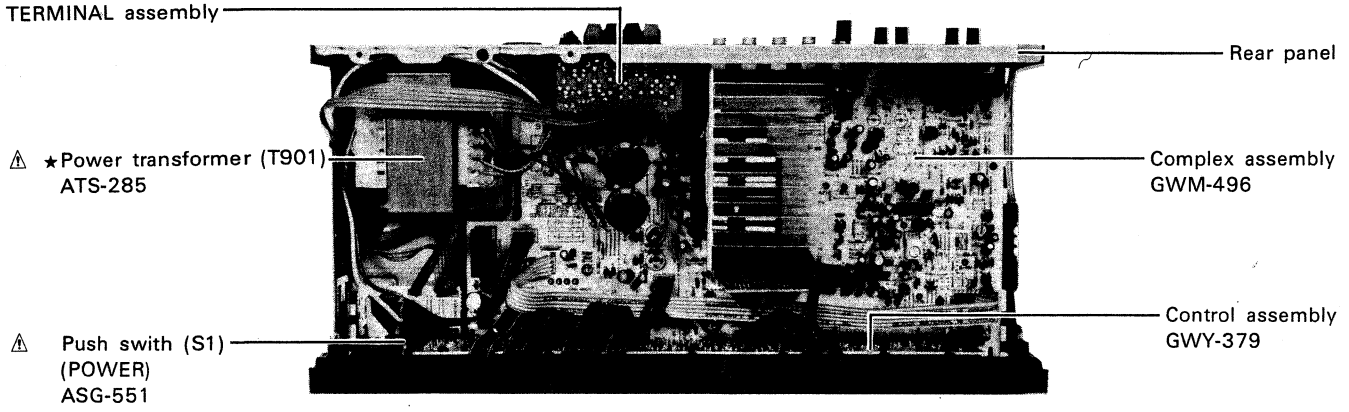

Rear Panel View

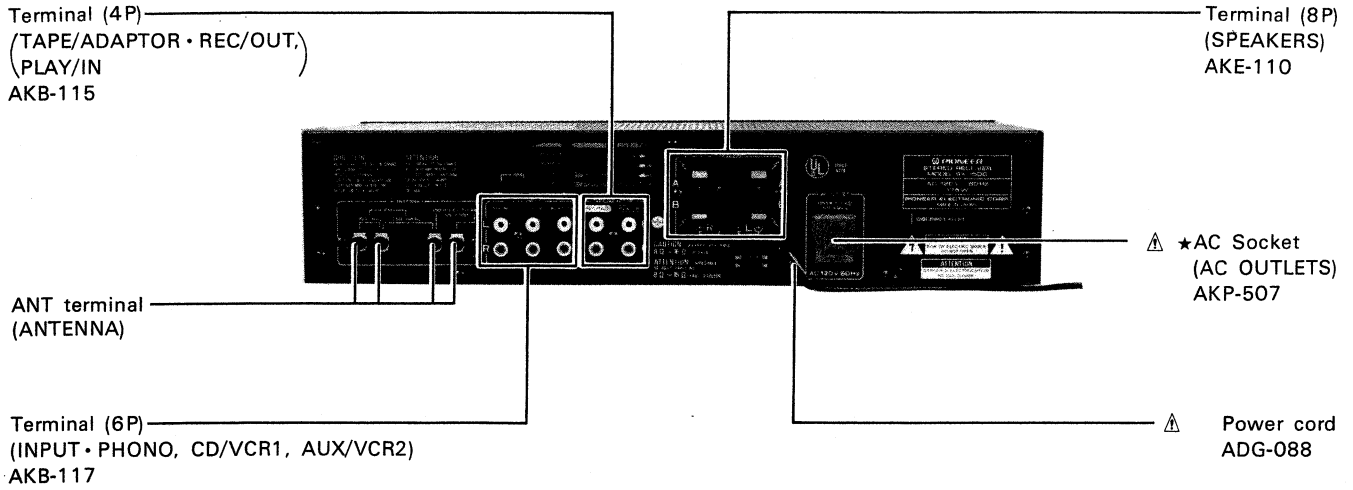

5. ELECTRICAL PARTS LIST

NOTES:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.
Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).
 560Ω 56 × 10¹ 561 RD¼PS 561 J
 47kΩ 47 × 10³ 473 RD¼PS 473 J
 0.5Ω 0R5 RN2H 0R5 K
 1Ω 010 RS1P 010 K
Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).
 5.62kΩ 562 × 10¹ 5621 RN¼SR 5621 F
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
★★ GENERALLY MOVES FASTER THAN ★
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Miscellaneous Parts

P.C. BOARD ASSEMBLIES

Mark	Symbol & Description	Part No.
	Complex assembly	GWM-496
	Control assembly	GWY-379
	HEAD PHONE assembly	Non supply
	SP TERMINAL assembly	Non supply
	S.S assembly	Non supply

OTHERS

Mark	Symbol & Description	Part No.
Δ	C901 Capacitor (0.01/125V)	ACG-001
Δ ★	T901 Power transformer (120V)	ATS-285
Δ	AC Socket (AC OUTLET)	AKP-507
Δ ★★	S1 Push switch (POWER)	ASG-551
Δ ★★	FU601 Fuse (2.5A)	AEK-123
Δ	Power cord	ADG-088

Complex Assembly (GWM-496)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC101 AM/FM IC	LA1265S
★★	IC301 OP-AMP IC	NJM4558DXC
★★	IC701 U-COM IC	PD2017
Δ ★★	IC501 AUDIO-IC	STK4171-2S
★★	IC201 FM MAX IC	TA7343AP
★★	IC702 PLL IC	TC9172P
★★	IC601 REGURATOR IC	μ PC78M12H
★★	Q704, Q706—Q708	DTA124ES (RN2203)
★★	Q709, Q714	DTA143ES (RN2201)
★★	Q701, Q705, Q710, Q713	DTC124ES (RN1203)
★★	Q702	DTC143ES (RN1201)
★★	Q603	2SC1845

Mark	Symbol & Description	Part No.
★★	Q201—Q203, Q601, Q602, Q703, Q711, Q712, Q715, Q716	2SC2458ES (2SC2603)
★★	Q3, Q4	2SC2668
★★	Q2	2SC2786
★★	Q5 N-FET	2SK161 (2SK168)
★★	Q1 MOS-FET	2SK241
Δ ★	D603	RBV402
★	D609, D612	RD12EB (HZ12EB) RD20EB (HZ20EB)
★	D608	RD20EB (HZ20EB)
★	D604, D607	RD5.6EB (HZ5.6EB)
★	D103, D104, D605, D606, D610, D611, D702—D709	1SS131
Δ ★	D201, D202, D601, D602	11E2 (S5566)
★	D1, D2	1TT301
★	D101, D102	SVC321C2

SWITCHES AND RELAY

Mark	Symbol & Description	Part No.
★★	S301 Push switch (TAPE MONITOR)	ASG-424
★★	S701—S712 Tact switch (STATION CALL 1-10 11-20)	ASG-712
★★	S302 Push switch (AUX/VCR2, CD/VCR1, PHONO, TUNER)	SUJ5L2B2B2BL
★	RY501 Relay	ASR-111

COILS, TRANSFORMERS AND FILTERS

Mark	Symbol & Description	Part No.
	T101 AM ANT transformer	ATB-099
	L101 AM OSC coil	ATB-114
	T1 FM RF transformer	ATC-194
	L2 FM OSC coil	ATC-269
	T2 FM coupling transformer	ATE-063
	L102 FM Detection coil	ATE-079
	F2, F3 FM Ceramic filter	ATF-126
	F1 FM Band pass filter	ATF-155
	F101 AM Ceramic filter	ATF-208
	L103 Inductor	ATH-108
	L501, L502 AF Choke coil	ATH-133
	L1 Inductor	LAU2R2M

CAPACITORS

Mark	Symbol & Description	Part No.
△	C611 Ceramic capacitor	ACG-502
	C606, C607 Electrolytic	ACH-252
	C715	ACH-902
	TC101, TC106 Ceramic trimmer	ACM-026
	C102	CCCCH150J50
	C703, C704	CCCCH330J50
	C16	CCCSL010C50
	C505, C506	CCCSL101J50
	C17	CCCSL150J50
	C112, C303, C304	CCCSL221J50
	C1	CCDCH040C50
	C13	CCDCH080D50
	C11	CCDCH150J50
	C12	CCDCH330J50
	C3	CCDRH180J50
	C5	CCDSL020C50
	C7	CCDSL101J50
	C14	CCDTH150J50
	C201, C501, C502	CCDTH150J50
	C114, C204, C207, C210—C212, C705	CEAS010M50
	C708	CEAS1R5M50
	C511, C512, C609, C612	CEAS100M50
	C10, C202, C604	CEAS101M16
	C507, C508	CEAS101M25
	C513	CEAS101M50
	C605	CEAS2R2M100
	C118, C301, C302, C313, C314, C317, C318	CEAS2R2M50
	C206	CEAS221M16
	C701	CEAS222M6
	C120, C203, C711	CEAS3R3M50
	C111, C123, C710	CEAS330M16
	C121	CEAS4R7M50
	C119, C305, C306, C610, C706	CEAS470M10
	C601, C602	CEAS470M25

Mark	Symbol & Description	Part No.
	C509, C510	CEAS470M50
	C608	CEAS471M35
	C603	CEAS471M6
	C117, C702, C707	CKCYB102K50
	C503, C504	CKCYB122K50
	C107, C113, C115, C125, C213, C307, C308, C709, C712, C713, C714	CKCYF103Z50
	C104, C105, C116, C124	CKCYF223Z50
	C122	CKCYF473Z50
	C315, C316	CKDYB391K50
	C2, C4, C8, C9, C15, C18	CKDYF103Z50
	C108, C109	CKDYF223Z50
	C110	CKDYF473Z50
	C208, C209	CQMA183K50
	C309, C310	CQMA242J50
	C514, C515	CQMA473K50
	C311, C312	CQMA822J50
	C205	CQSA102J50
	C103	CQSA431J50

RESISTORS

NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
△	R611 Carbon composition	ACN-209
△	R509—R512, R507, R508	RD1/2PM□□□J
△	R515—R519, R522	RD1/4PM□□□J
	R7	RD1/4PM151J
△	R603	RS1PMF181J
△	R607	PS1PMF272J
△	R608	RS1PMF821J
△	R601, R602	RS2LM122J
★	VR101 Semi-fixed	VRTB6VS473
★	VR201 Semi-fixed	VRTB6VS472
	Other resistors	RD1/8PM□□□J

OTHERS

Mark	Symbol & Description	Part No.
	ANT terminal	AKA-017
	Terminal (4P) (TAPE/ADAPTOR • REC/OUT, PLAY/IN)	AKB-115
	Terminal (6P) (INPUT • PHONO, CD/VCR1, AUX/VCR2)	AKB-117
★	X701 Crystal resonator Rivet	ASS-025 AEP-230

**Control Assembly (GWY-379)
SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
**	IC401, IC402 AUDIO IC	BA3812L
**	IC403 OP-AMP IC	M5218PF
**	Q401	DTA124ES (RN2203)
**	Q402	DTC124ES (RN1203)
*	D402 LED assembly	AEL-460
*	D404—D406 LED assembly	AEL-461
*	D403 LED assembly	AEL-463
*	D407, D409	1SS131
*	D401	11E2

SWITCHES

Mark	Symbol & Description	Part No.
**	S401—S407 Tact swich (FM/MONO, FM, AM, AUTO/MANUAL, MEMORY, SELECT, SIMULATED STEREO)	ASG-711

CAPACITORS

Mark	Symbol & Description	Part No.
	C431, C432	CEASR68M50
	C405, C406	CEAS101M10
	C409—C412	CEJA4R7M35
	C427, C428	CEJAR22M50
	C401, C402, C433, C434	CEJA4R7M35
	C403, C404	CEAS470M25
	C415, C416	CKCYB122K50
	C407, C408	CKCYB331K50
	C413, C414	CKCYB391K50
	C435, C436	CKCYF103Z50
	C425, C426	CQMA123K50
	C421, C422	CQMA223K50
	C417, C418	CQMA392K50
	C429, C430	CQMA393K50
	C423, C424	CQMA682K50
	C419, C420	CQMA683K50

RESISTORS

NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
*	VR403—VR407 Variable resistor (Slide type, 30K), (GRAPHIC EQUALIZER)	ACX-152
*	VR401 Variable resistor (BALANCE CONTROL, 250K)	ACX-153
*	VR402 Variable resistor (VOLUME CONTROL, 100K)	ACX-154
	R419	RD1/2PM561J
	Other resistors	RD1/8PM□□□J

OTHERS

Mark	Symbol & Description	Part No.
*	V401 Fluorescent tube	AAV-039

**HEADPHONE Assembly
SWITCH**

Mark	Symbol & Description	Part No.
**	S901 Push switch (SPEAKERS A, B)	SUJ6LYXS

RESISTORS

Mark	Symbol & Description	Part No.
△	R901, R902	RS1PMF331J

OTHERS

Mark	Symbol & Description	Part No.
	Jack (PHONES)	AKN-045

**SP TERMINAL Assembly
OTHER**

Mark	Symbol & Description	Part No.
	Terminal (SPEAKERS)	AKE-110

**S.S Assembly
SEMICONDUCTORS**

Mark	Symbol & Description	Part No.
**	IC802 OP-AMP IC	M5201P
**	IC801 OP-AMP IC	M5218PF

CAPACITORS

Mark	Symbol & Description	Part No.
	C801	CEAS2R2M50
	C804	CEAS4R7M50
	C803	CKCYB331K50
	C805, C806	CKCYF103Z50
	C802	CQMA332K50

RESISTORS

NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
	All resistors	RD1/8PM□□□J


6. EXPLODED VIEW

NOTES:

- Parts without part number cannot be supplied.
- The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks ** and *.
- ** **GENERALLY MOVES FASTER THAN ***
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Parts List

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1	GWM-496	Complex assembly		24	ABH1003	Coil spring
	2	GWY-379	Control assembly		25	AEC-471	Nylon rivet
△	3	ACG-001	Capacitor (C901, 0.01/125V)		26	AEC-558	Nylon rivet
△ *	4	ATS-285	T901 Power transformer (120V)	△	27	ADG-088	Power cord
△	5	AKP-507	AC socket (AC OUTLET)		28	BBZ30P080FZK	Screw
△ **	6	ASG-551	S1 Push switch (POWER)		29	PBZ25P100FMC	Screw
△ **	7	AEK-123	FU601 Fuse (2.5A)		30	VBZ30P100FMC	Screw
	8	AEC-784	Leg assembly		31	VMZ30P060FMC	Screw
	9	AEB1005	Cushion		32	VPZ23P060FMC	Screw
	10	AAH-123	Volume panel		33	AEP-230	Nylon rivet
	11	AAH-125	Aluminum sash		51		HEAD PHONE assembly
	12	AAY-306	Push knob A (SPEAKER A, B, SIMULATED STEREO)		52		TERMINAL assembly
	13	AAY-385	Slide knob (VOLUME CONTROL)		53		S.S assembly
	14	AAY-386	Function knob (TUNER)		54		Terminal (GND)
	15	AAY-387	Function knob (PHONO)		55		Chassis
	16	AAY-388	Function knob (CD/VCR1)		56		Bottom plate
	17	AAY-389	Function knob (TAPE MONITOR)		57		Sheet panel
	18	AAY-391	Function knob (AUX/VCR2)		58		Binder
	19	AAY-404	Knob (POWER)		59		Rear panel
	20	ANE-623	Bonnet case		60		P.C. Board holder
	21	ANY-189	Front panel				
	22	ANZ-323	Blinder				
	23	ABE-061	Washer				

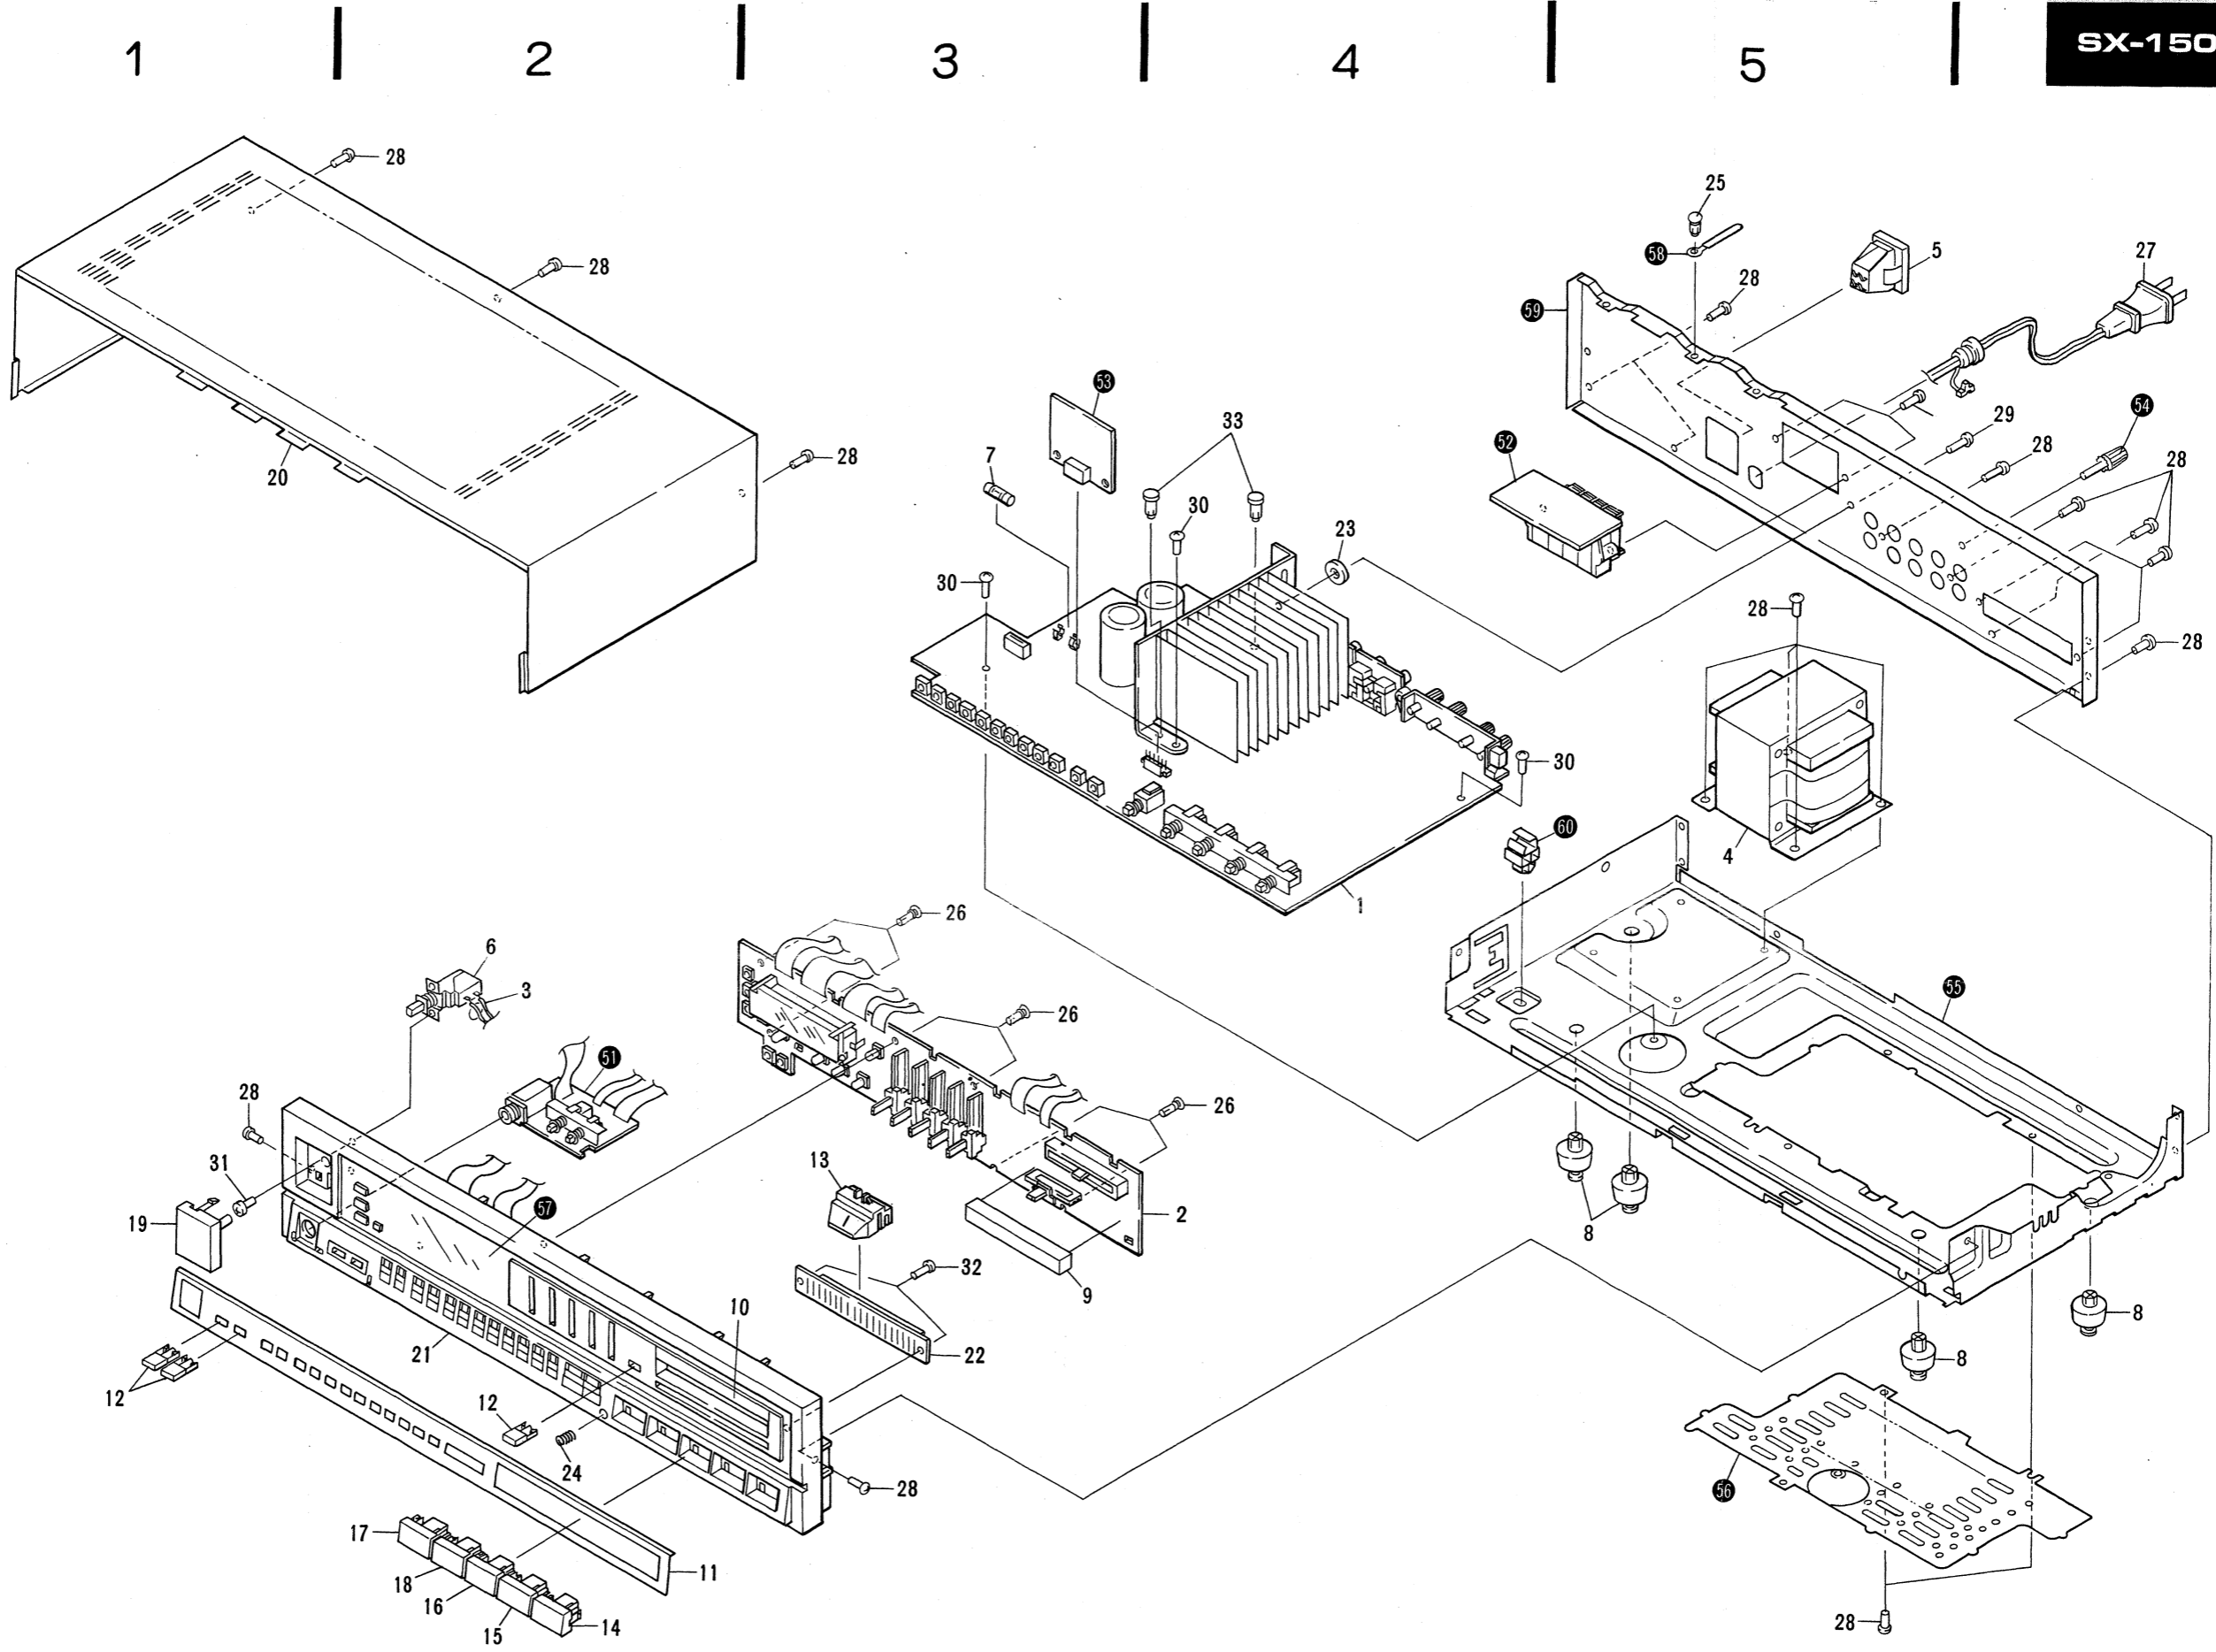

Description

- Coil spring
- Nylon rivet
- Nylon rivet
- Power cord
- Screw

- Screw
- Screw
- Screw
- Screw
- Nylon rivet




- HEAD PHONE assembly
- TERMINAL assembly
- S.S assembly
- Terminal (GND)
- Chassis

- Bottom plate
- Sheet panel
- Binder
- Rear panel
- P.C. Board holder

7. P.C.BOARDS CONNECTION DIAGRAM



A
B
C
D

Q1	Q4	Q5	Q2	IC301	IC501
Q712	Q711	Q713	Q714	Q708	Q707
IC702	Q709	Q709	Q203	Q202	IC201
TC101	VR101	VR201	TC106	Q715	Q716
				Q705	Q704

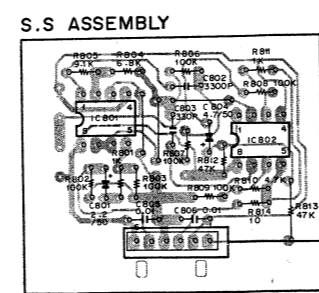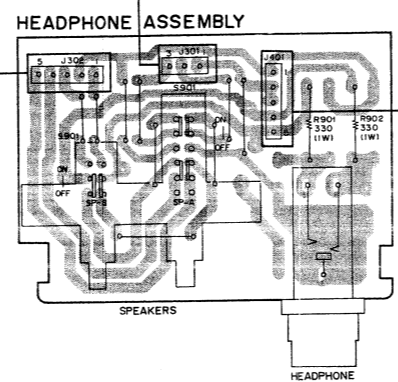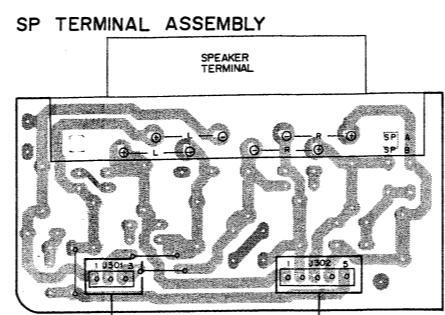


IC 801 : M5218PF
IC 802 : M5201P

- Q401, Q704, Q706 - Q709, Q714
- Q402, Q701, Q702, Q705, Q710, Q713

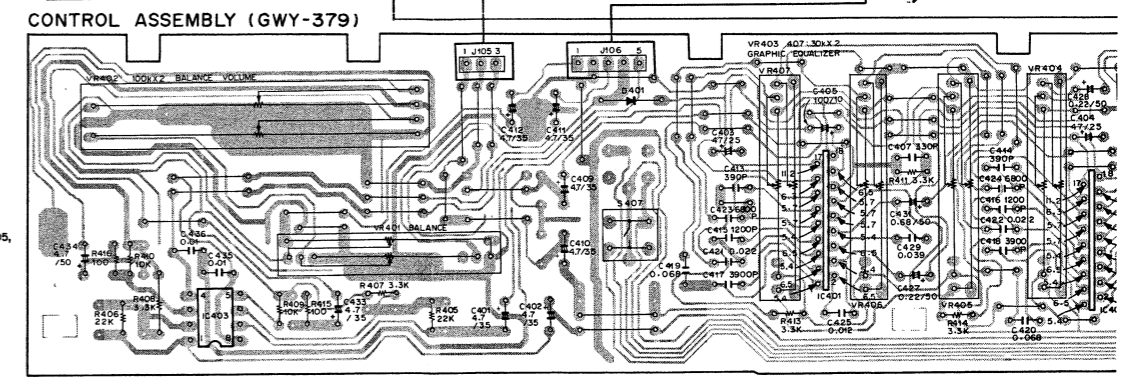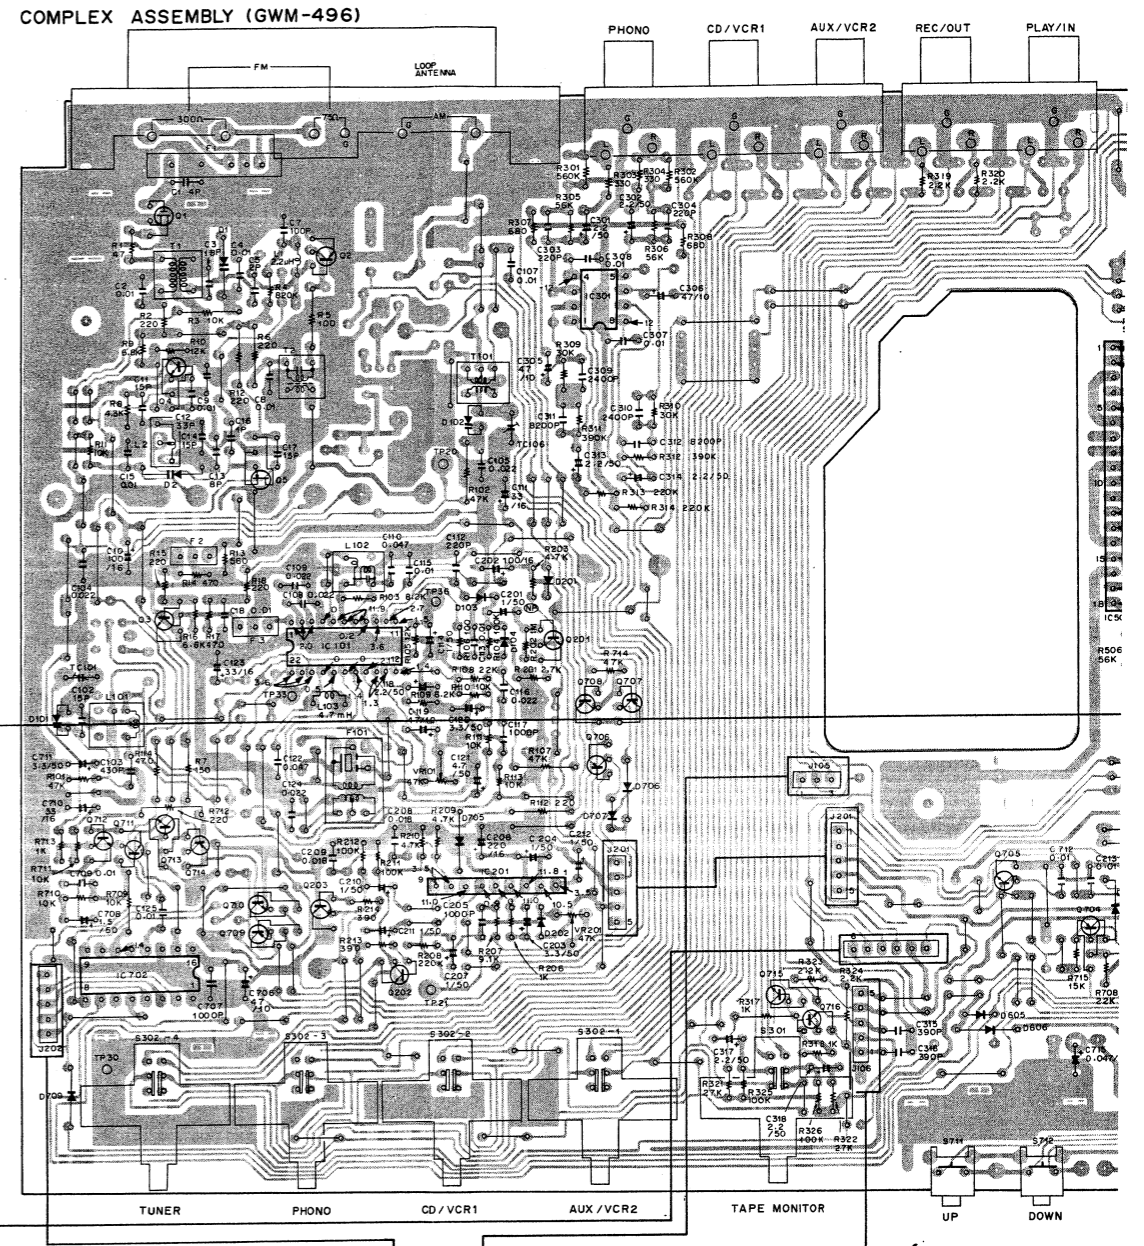

IC501 IC601 Q601 Q602 Q603
 Q715 Q716 Q705 Q704 Q703 Q701 Q702 IC701

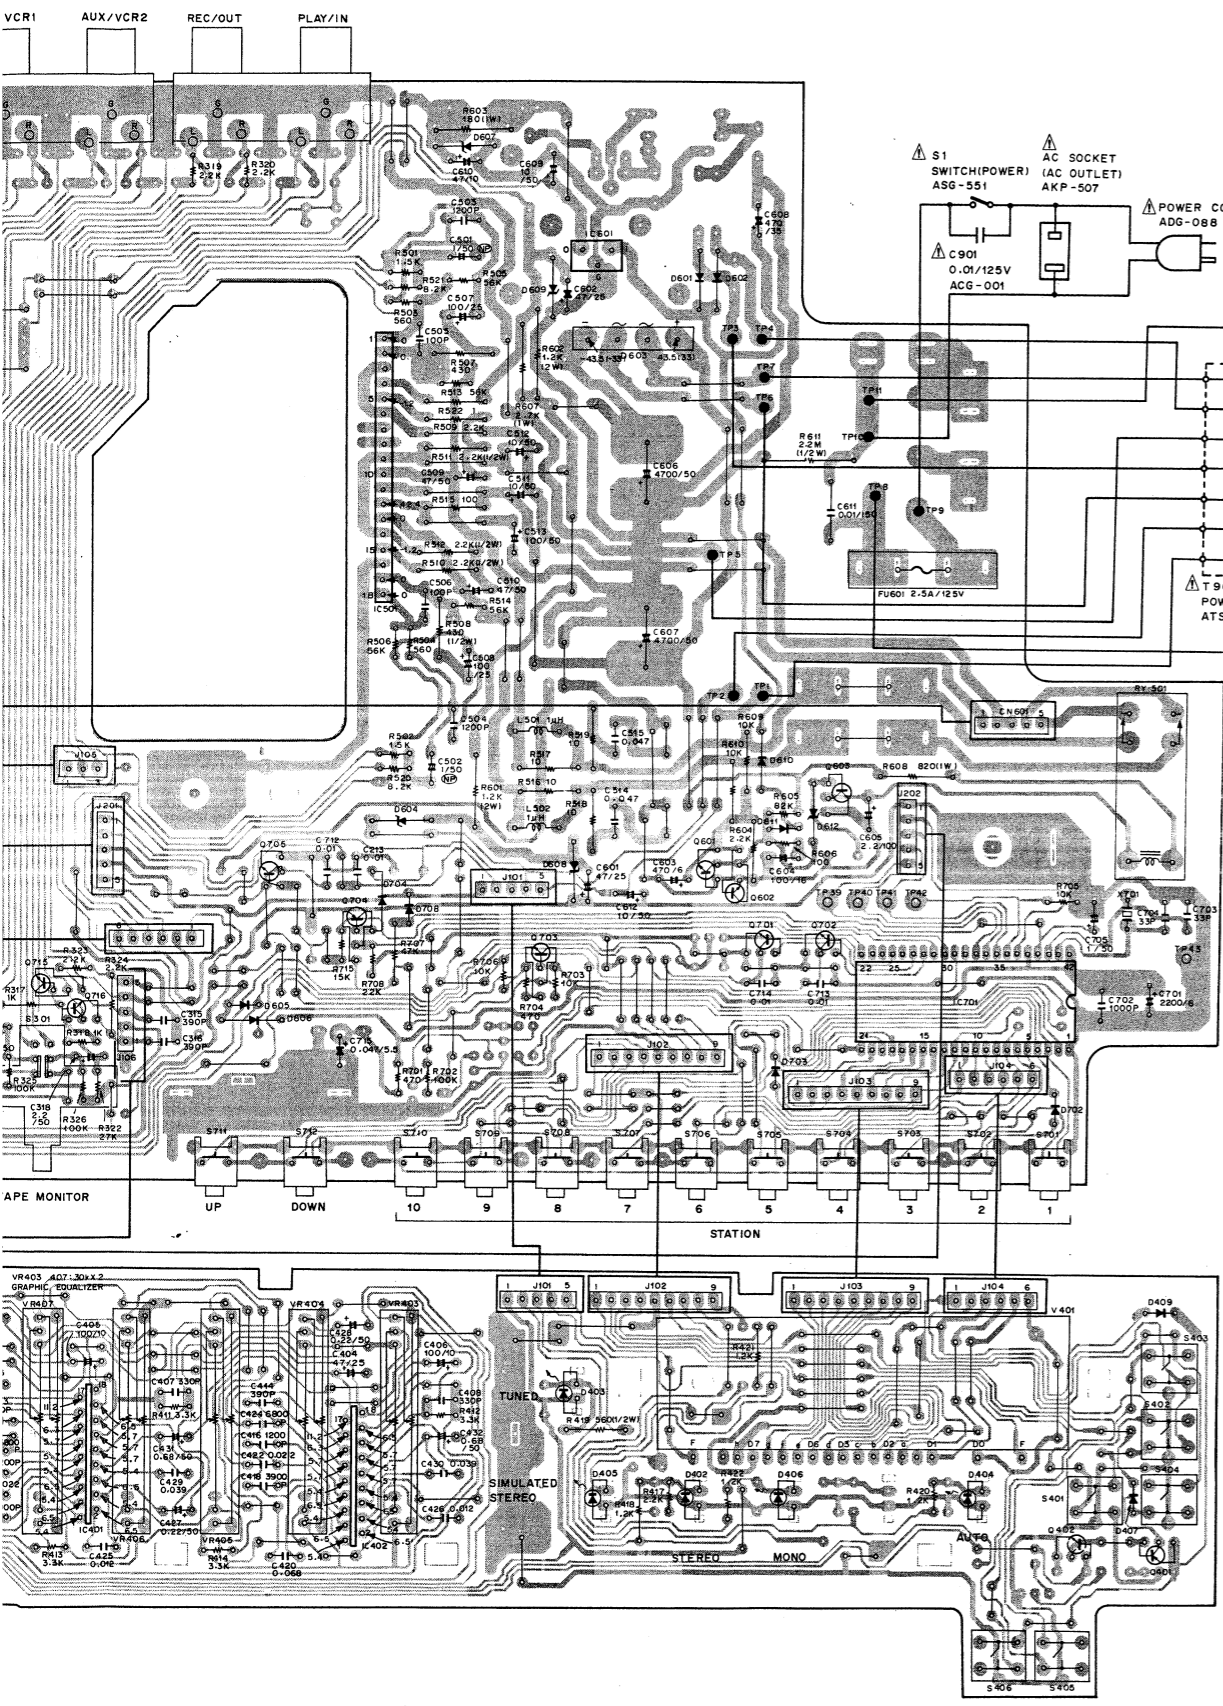

- IC702 : TC9172P
- IC101 : LA12655
- IC201 : TA7343AP
- IC301 : NJM4558DXC
- IC501 : STK4171-2S
- IC601 : μ PC78M12H
- IC701 : FD2017
- Q1 : 2SK241
- Q2 : 2SC2786
- Q3, Q4 : 2SC2668
- Q5 : 2SK1611(2SK168)
- Q201-Q203, Q601, Q602, Q703, Q711, Q712, Q715, Q716 : 2SC248B (2SC2603)
- Q603 : 2SC1845
- Q701, Q705, Q710, Q713, Q702 : DTC124ES (RN1203)
- Q704, Q706, Q707, Q708, Q709, Q714 : DTA124ES (RN2203)
- D1, D2 : ITT310
- D101, D102 : SVC321C2/D2
- D103, D104 : ISS131
- D703-D709, D605, D606, D610, D611, D702 : 1IE2(S5566)
- D201, D202, D601, D602 : RBV402
- D603 : RD5.6EB(HZ5.6EB)
- D604, D607 : RD20EB(HZ20EB)
- D608 : RD12EB(HZ12EB)
- D609, D612 : BA3812L


- IC401, IC402 : BA3812L
- IC403 : MS218PF
- Q401 : DTA124ES(RN2203)
- Q402 : DTC124ES(RN1203)
- D407 : ISS131
- D409 : AEL-460
- D402 : AEL-463
- D403 : AEL-461
- D404-D406 : AEL-461
- D401 : 1IE2(S5566)

External Appearance of Transistors and ICs

<p>2SC1845</p> <p>Type No Lot No hFE E C B</p>	<p>2SK168</p> <p>Type No Lot No Loss G S D</p>	<p>M5218PF NJM4558DXC</p> <p>4 5 8</p>
<p>2SC2458</p> <p>Type No hFE Lot No E C B</p>	<p>BA3812L</p> <p>1 18</p>	<p>RN1201 RN1203 RN2201 RN2203</p> <p>Type No Lot No E C B</p>
<p>2SC2603</p> <p>Type No Lot No hFE E C B</p>	<p>DTA124ES DTA143ES DTC124ES</p> <p>Type No Lot No E B C</p>	<p>STK4171-2S</p> <p>16</p>
<p>2SC2668</p> <p>Type No hFE Lot No E C B</p>	<p>DTC143</p> <p>Type No Lot No GND OUT IN</p>	<p>TA7343AP</p> <p>9 1</p>
<p>2SC2786</p> <p>Type No hFE Lot No E B C</p>	<p>LA1265</p> <p>8</p>	<p>TC9172P</p> <p>9 8 16</p>
<p>2SK161 2SK241</p> <p>Type No Loss Lot No S G D</p>	<p>M5201P</p> <p>4 5 8</p>	<p>μPC78M12H</p> <p>Type No Lot No IN G OUT</p>

8. SCHEMATIC DIAGRAM

COMPLEX ASSEMBLY (GWM-496)

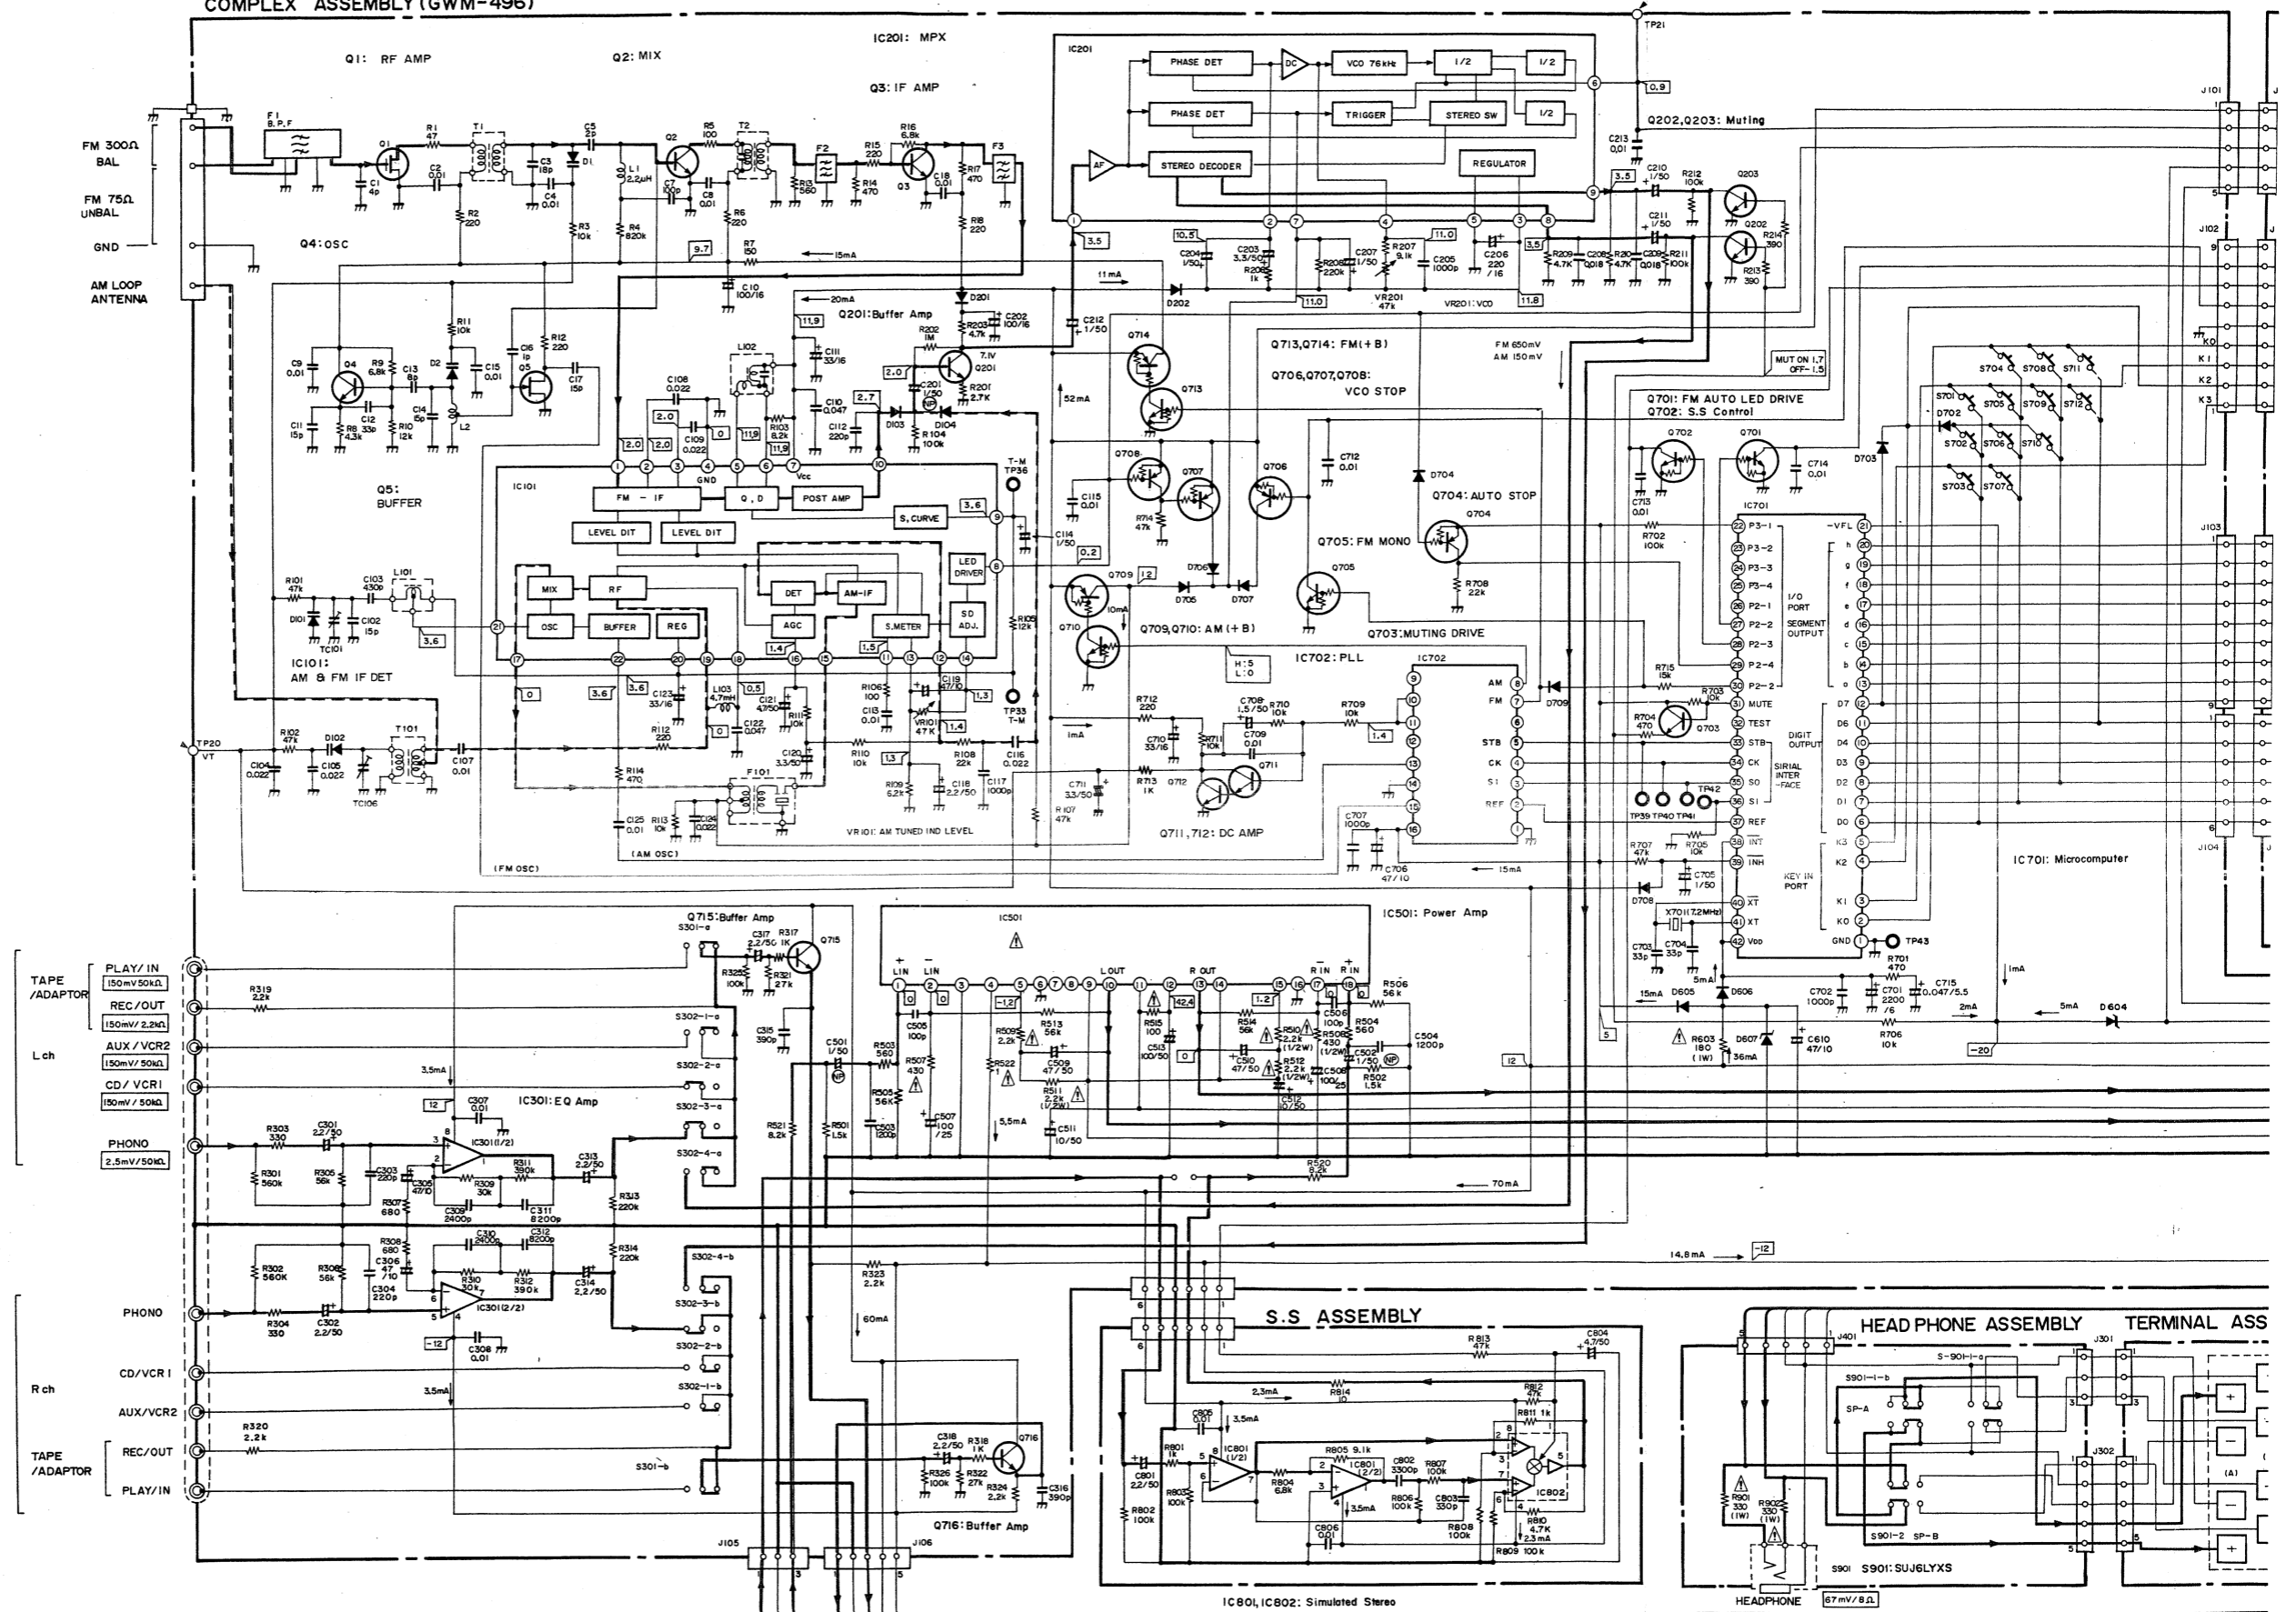

A

B

C

D

1

2


3

4

5

6

CONTROL ASSEMBLY (GWY-379)

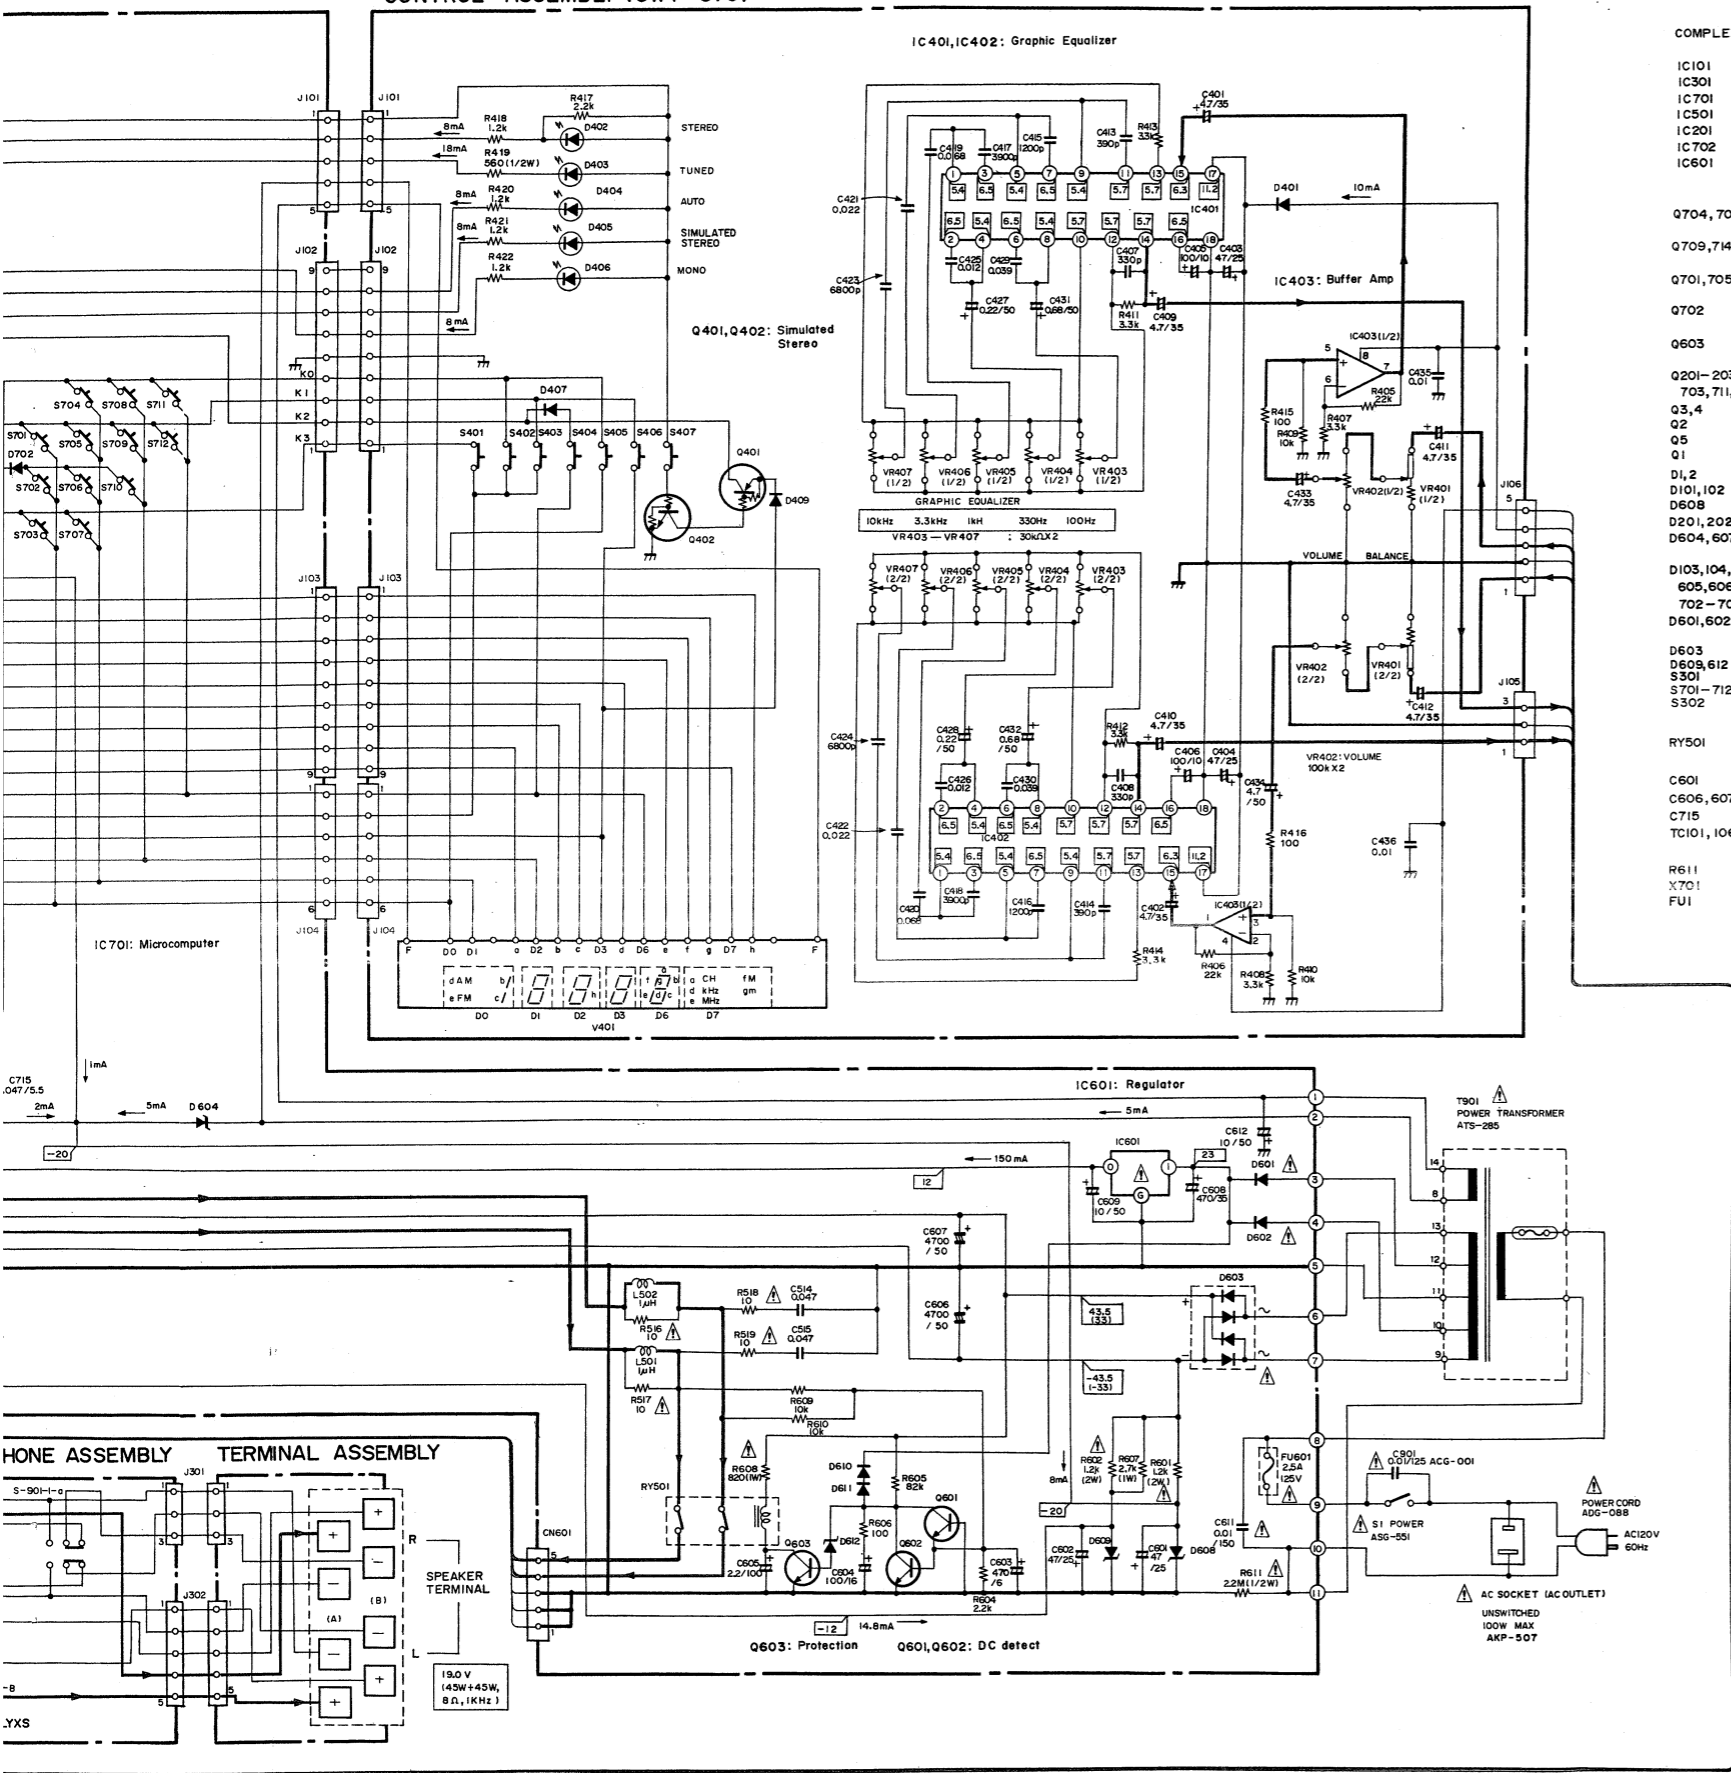

COMPLEX ASSEMBLY

- IC101 LA1265S
- IC301 NJM4558DXC
- IC701 FD2017
- IC501 STK4171-2S
- IC201 TA7343AP
- IC702 TC9172P
- IC601 μ PC78M12H
- Q704, 706-708 DTA124ES (RN2203)
- Q709, 714 DTA143ES (RN2201)
- Q701, 705, 710, 713 DTC124ES (RN1203)
- Q702 DTC143 (RN1201)
- Q603 2SC1845
- Q201-203, 601, 602, 703, 711, 712, 715, 716 2SC2458 (2SC2603)
- Q3, 4 2SC2668
- Q2 2SC2786
- Q5 2SK161(2SK168)
- Q1 2SK241
- D1, 2 ITT 301
- D101, 102 SVC321C2/D2
- D608 RD20EB(HZ20EB)
- D201, 202 11E2 (S5566)
- D604, 607 RD5.6EB (HZ5.6EB)
- D103, 104, 605, 606, 610, 611, 702-709 11E2 (S5566)
- D609, 612 RBV402
- S301 RD12E8(HZ12EB)
- S701-712 ASG-424
- S502 ASG-712
- SUJ5L2B2B2L
- RY501 ASR-111
- C601 ACG-502
- C606, 607 ACH-252
- C715 ACH-902
- TC101, 106 ACM-026
- R611 ACN-209
- X701 ASS-025
- FU1 AEK-123

CONTROL ASSEMBLY

- IC401, 402 BA3812L
- IC403 M5218PF
- Q401 DTA124ES (RN2203)
- Q402 DTC124ES (RN1203)
- D402 AEL-460
- D404-406 AEL-461
- D403 AEL-463
- D407, 409 1SS131
- D401 11E2(S5566)
- VR403-407 ACX-152
- VR401 ACX-153
- VR402 ACX-154
- S401-407 ASG-711
- V401 AAV-039
- S, S ASSEMBLY
- IC801 M5218PF
- IC802 M5201P

NOTE:
The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

- RESISTORS:
Indicated in Ω , 1/4W, 1/8W and 1/8W, $\pm 5\%$ tolerance unless otherwise noted k: k Ω , M: M Ω , (F): $\pm 1\%$, (G): $\pm 2\%$, (K): $\pm 10\%$, (M): $\pm 20\%$ tolerance
- CAPACITORS:
Indicated in capacity (μ F)/voltage (V) unless otherwise noted p: pF. Indication without voltage is 50V except electrolytic capacitor.
- VOLTAGE, CURRENT:
 - V: Signal voltage at 45W +45 W, 8 Ω output (1 kHz)
 - DC: DC voltage (V) at no input signal Value in () is DC voltage at rated power.
 - mA: DC current at no input signal
- OTHERS:
 - Signal route.
 - Adjusting point.

The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 * marked capacitors and resistors have parts numbers.
 The underlined indicates the switch position.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.
- SWITCHES:
THE UNDERLINED INDICATES THE SWITCH POSITION

S1	POWER ON-OFF	S701	STATION 1
S301	TAPE MONITOR	S702	STATION 2
S302-1	AUX / VCR 2	S703	STATION 3
S302-2	CD / VCR 1	S704	STATION 4
S302-3	PHONO	S705	STATION 5
S302-4	TUNER	S706	STATION 6
S401	AUTO/MONO	S707	STATION 7
S402	FM	S708	STATION 8
S403	AM	S709	STATION 9
S404	AUTO/MANUAL	S710	STATION 10
S405	MEMORY	S711	UP
S406	SELECT	S712	DOWN
S407	SIMULATED STEREO		

S901: SPEAKERS
 S901-a SP-A ON-OFF
 S901-b SP-B ON-OFF

A
—
B
—
C
—
D

9. ADJUSTMENTS

FM TUNER SECTION

- Connect the FM signal generator (FM SG) to the FM ANTENNA 300Ω terminal through a 300Ω dummy antenna.
- Set the SX-1500(BK) to the FM band.
- (*1) Tune the FM SG to the SX-1500(BK)
- (*2) Connect the FM multiplex stereo signal generator to the FM SG external modulator terminal. Set the modulation to Main 1 kHz/L+R/±68.25 kHz deviation, Pilot 19 kHz/±6.75 kHz deviation.

Step	FM SG (1kHz, ±75kHz deviation)		SX-1500(BK) Frequency display	Adjustment point	Adjustment procedure
	Frequency	Level			
1	98.0MHz	30 to 40dB	98.0MHz	T1, T2	Adjustment until DC voltage between IC101 (13) pin and ground is maximum.
2	98.0MHz	60dB	98.0MHz	L102	Adjust DC voltage between terminal TP(T-M) and TP(T-M) to 0±50mV.
3	98.0MHz(*1)	60dB	98.0MHz	VR201	Adjust signal between terminal TP(no.21) (VCO) and ground to 38kHz (within ±500Hz).
	not modulation				

Note: Adjust the VCO by inserting a resistance of 4.7 kΩ between TP21 (VCO) and GND. (VCO will not appear at the TP pin if a resistance of 4.7 kΩ is not inserted.)

AM TUNER SECTION

MW Tuner Section

- Connect the furnished AM loop antenna between terminals AM ANTENNA and GND.
- Connect the AM signal generator (AM SG) to the AM ANTENNA terminal through a 10 kΩ resistor.
- Set the SX-1500(BK) to the AM (MW) band.
- (*3) There are 2 kinds of models in the SX-1500[BK] system. The one is the channel step frequency of 10 kHz and the other is 9 kHz. Accordingly, in case of model 10 kHz step, the adjustment should be performed by using the frequency of Item "10 kHz step" and in case of model 9 kHz step, the adjustment should be performed by using the frequency of Item "9 kHz step".
- (*4) Tune the AM SG to the SX-1500(BK).

Step	AM SG (400Hz, 30% modulation)			SX-1500(BK) Frequency display (*3)		Adjustment point	Adjustment procedure
	Frequency (*3)		Level	10kHz step	9kHz step		
	10kHz step	9kHz step					
1	No signal			530kHz	531kHz	L101	1.2V ^{-0.2} _{+0.3} DC between terminal TP(no.20) (VT) and ground.
2	No signal			1600kHz	1602kHz	TC101	10±0.5V DC between terminal TP(no.20) (VT) and ground.
3	Repeat steps 1 and 2 until both specifications are correct.						
4	600kHz(*4)	603kHz(*4)	76dB	600kHz	603kHz	T101	Adjust until DC voltage between IC101 (13) pin (AMS) and ground is maximum.
5	1400kHz(*4)	1395kHz(*4)	76dB	1400kHz	1395kHz	TC106	
6	Repeat steps 4 and 5 until maximum sensitivity is attained						
7	1000kHz	999kHz	76dB	1000kHz	999kHz	VR101	Adjust a VR101 to light up a tuning indicator.

10. BLOCK


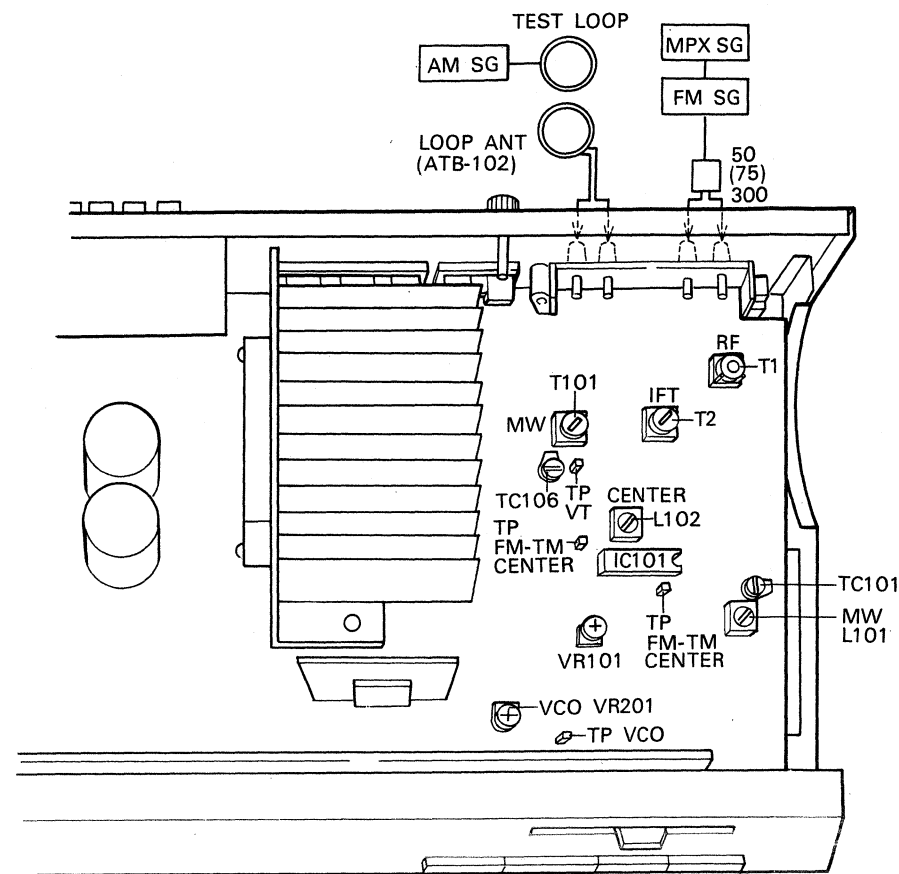


Fig. 9-1 Adjustment point



10. BLOCK DIAGRAM

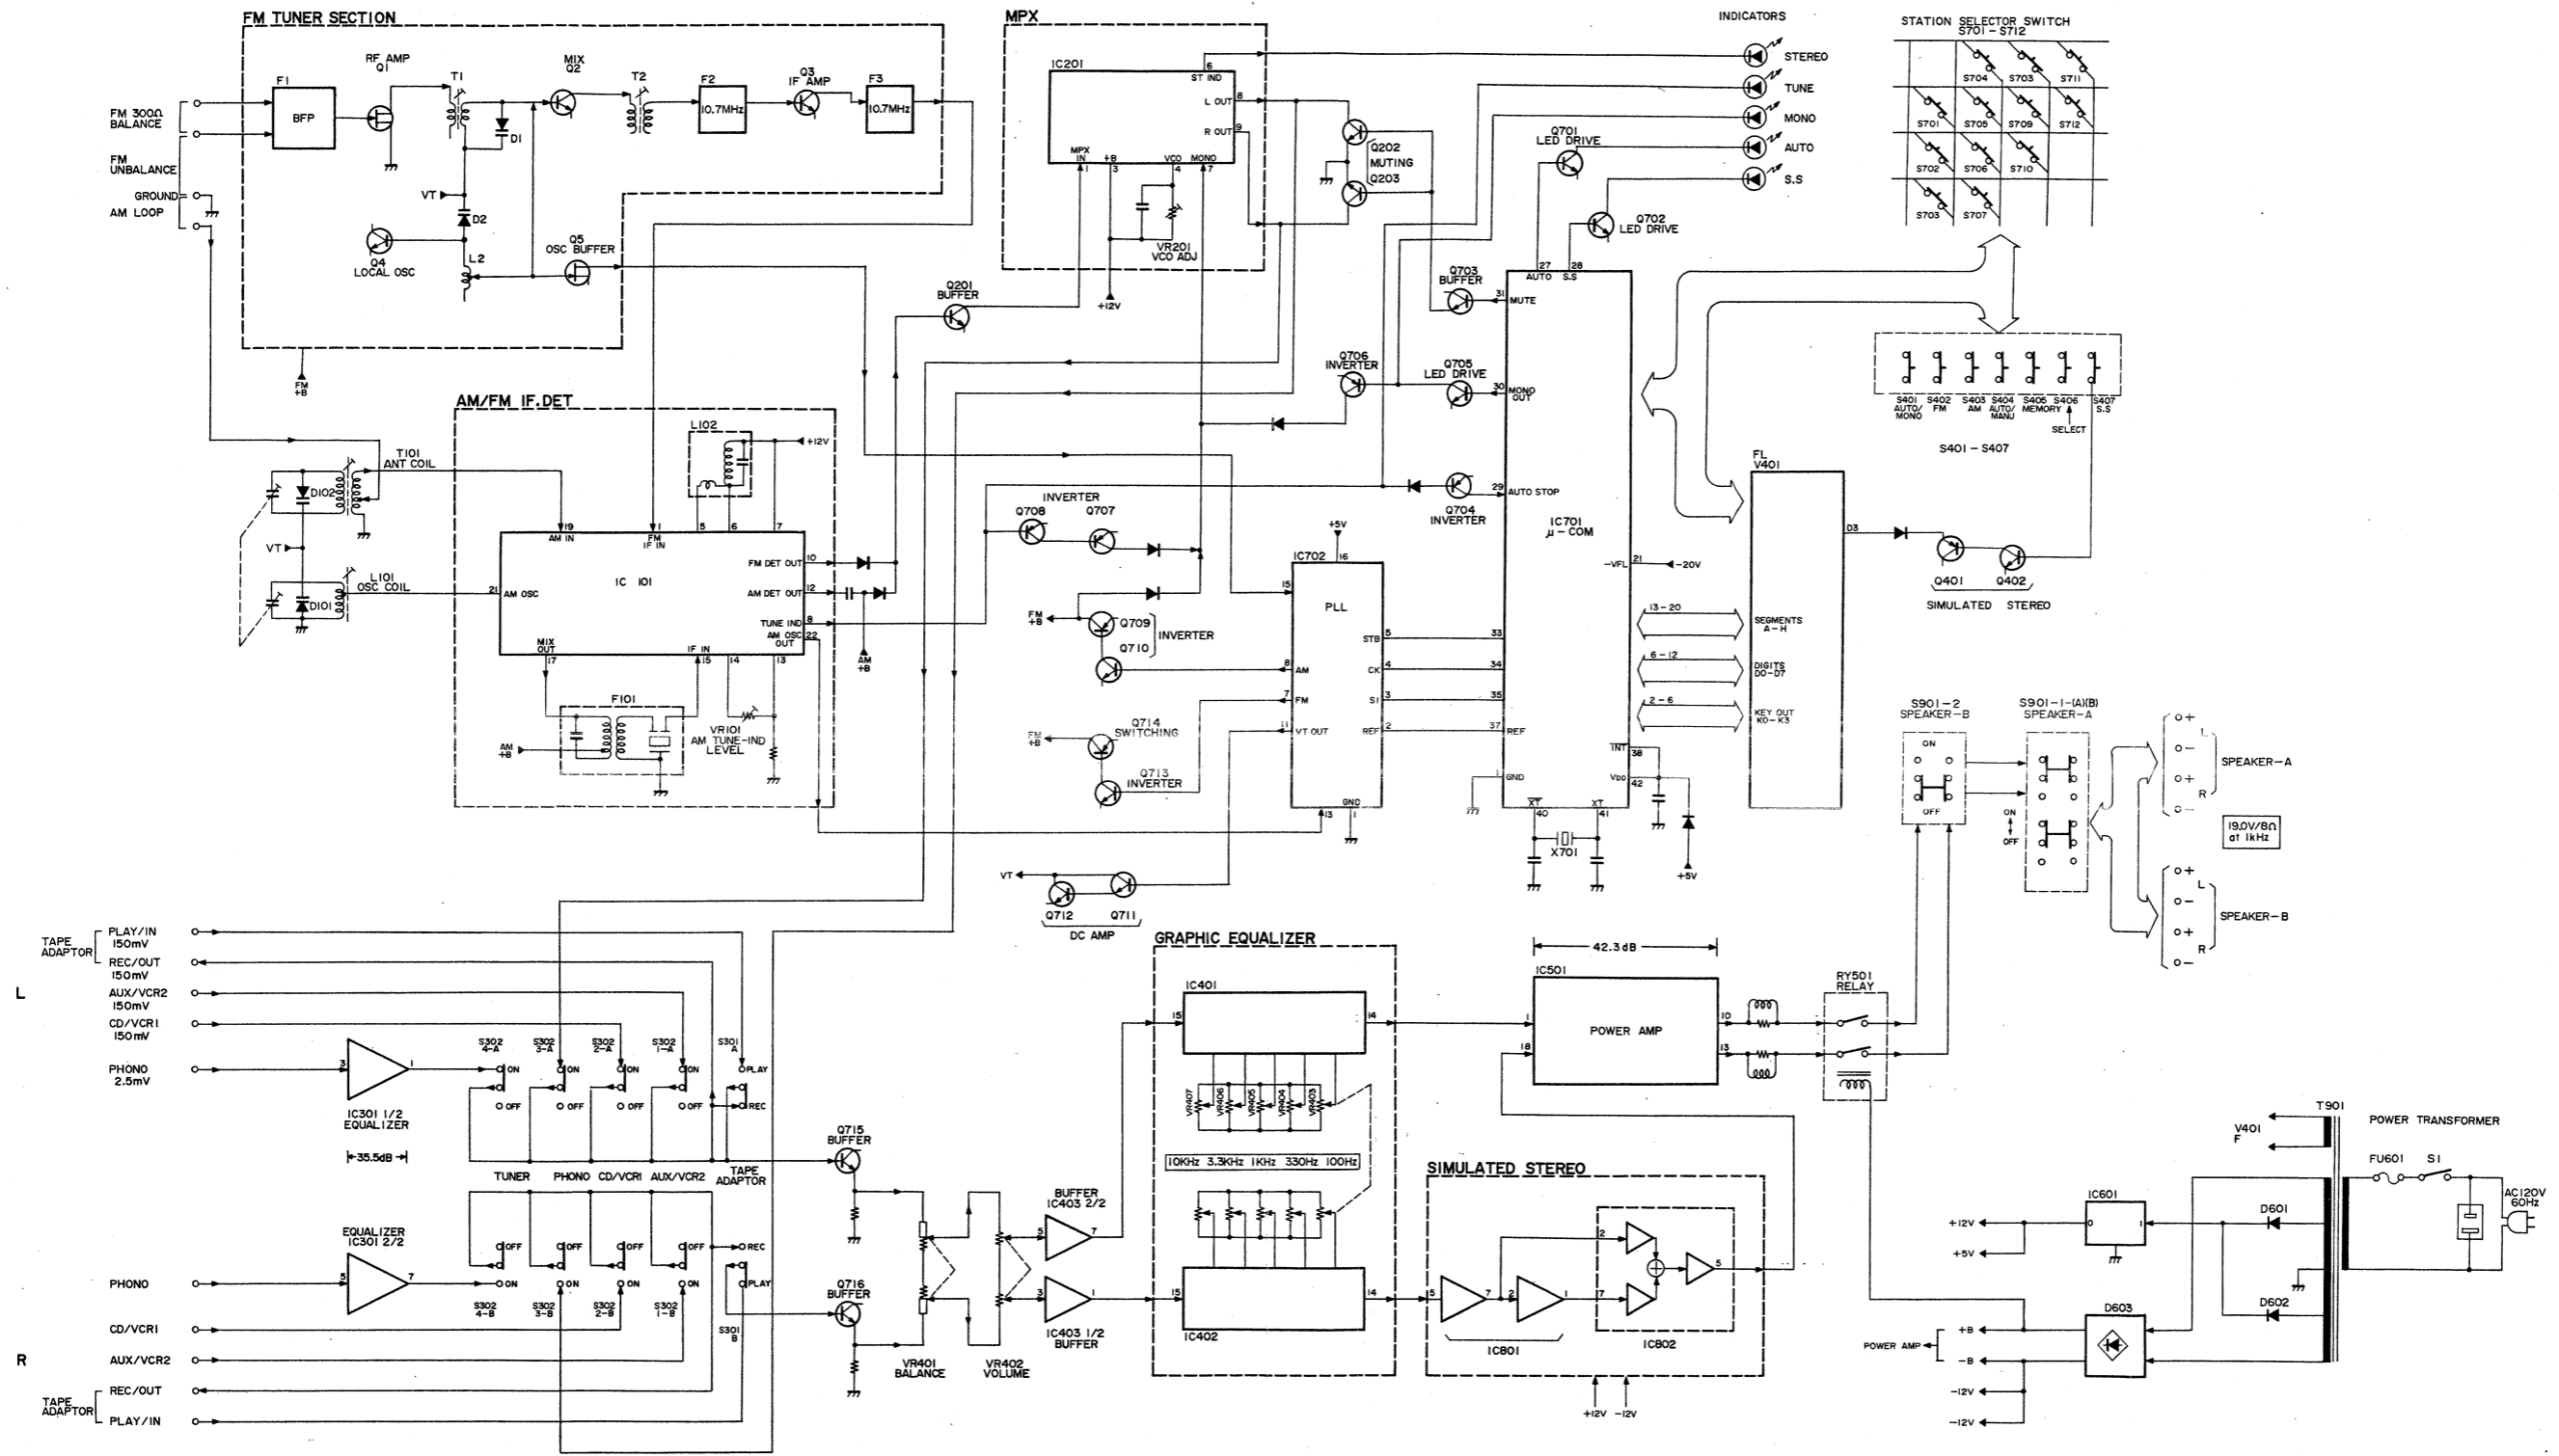

11. CIRCUIT DESCRIPTIONS

11.1 CIRCUIT DESCRIPTIONS

■ Block diagram

The block diagram is as shown on pages 23 and 24.

■ Phono equalizer section

In the phono equalizer section, the low noise operational amplifier 4558DXC is used and the RIAA equalization is performed.

It uses one dual OP AMP, NJM 4558DXC for Rch and Lch. It can obtain the RIAA characteristics by inserting the RIAA elements, R309, R311, C309 and C311 into the NF side.

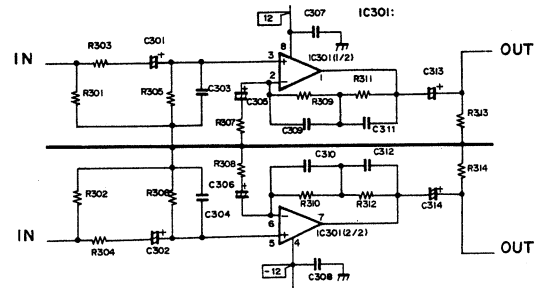


Fig. 11-1 PHONO EQ circuit

■ Tuner section

The tuner section is of the synthesizer system which enables to preset at random 20 FM/AM stations.

The circuit is structured by the front end which is comprised of a duplex connection equivalent variable capacitor and a band-pass filter, and an IC (FM/AM IC LA1265S) which integrates the FM IF amplifier and detector, and AM oscillator, mixer, IF amplifier and detector into one chip. The FM MPX demodulation is carried out by the TA7343AP.

Switching of the AM and FM within the IC can be carried out by whether the AM+B is added or not. Since the FM OUT (pin 10) and AM OUT (pin 16) are separated respectively, connection to the MPX section can be made by the diode switch of D103 and D104 after being compensated by the AM frequency characteristics.

MPX demodulation

The MPX demodulated output can be obtained from pin 8 (Lch) and pin 9 (Rch).

Monitoring of the 38 kHz signal can be carried out by connecting a resistance of approximately 4.7 kΩ to pin 6 of TA7343AP against GND. This output of pin 6 can be used for a monitor pin when adjusting the VCO.

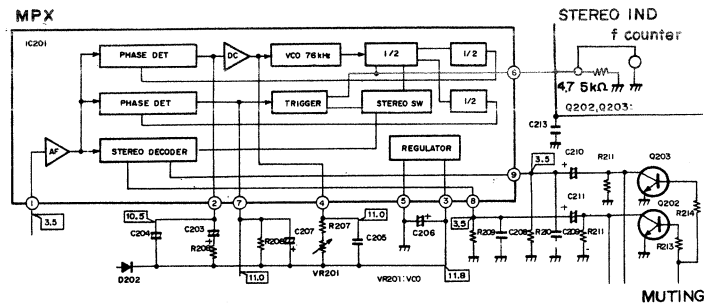


Fig. 11-3 MPX demodulation circuit

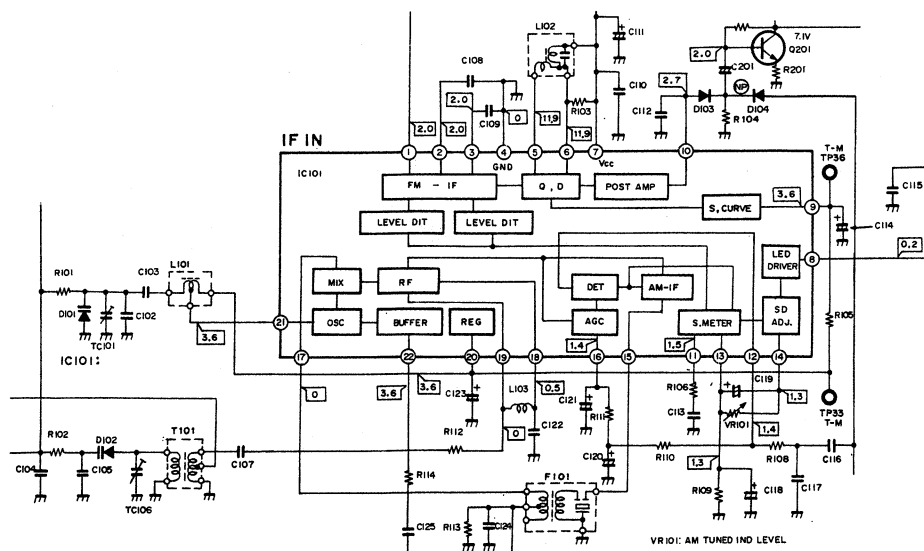


Fig. 11-2 TUNER circuit

■ 5-band graphic equalizer section

The circuit is structured by 2 graphic EQ dedicated IC BA3812L (each for L and R) and 5 sliding volumes. It enables to control the individual frequencies with ± 8 dB. The circuit is comprised of a graphic EQ dedicated IC BA3812L, sliding volumes and an externally attached element.

The BA3812L is comprised of the semiconductor inductor equivalent to 5 elements and an OP AMP for adding use.

The center frequency of the graphic EQ is determined by setting the center value and resonance frequency of the semiconductor inductor by the externally attached capacitors (ex. C417 and C419). In this model, they are set at 100 Hz, 330 Hz, 1 kHz, 3.3 kHz and 10 kHz.

■ Power amplifier section

In the power amplifier section, 2-circuit 1 package hybrid IC STK-4171HS is used and an 8Ω corresponding convection heat radiator is employed. The output of 45W+45W is obtained.

■ Control section

The control section of this model is mainly used for controlling the tuner section. The custom microcomputer PD2017 manufactured by Pioneer Co., Ltd. is used as the control IC.

Its major functions are PLL controlling, lighting of the FL dynamic, switching of FM and AM, station memory, etc.

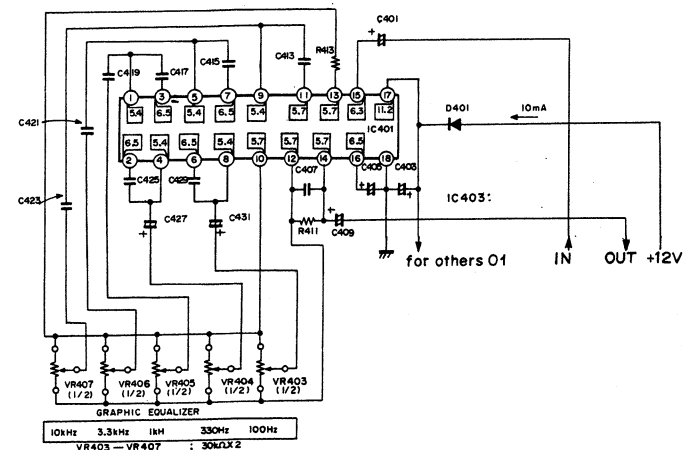


Fig. 11-4 5-band graphic equalizer circuit

■ Simulated stereo

It converts monaural sound source into simulated stereo sounds.

In this model, the OP AMP is employed from the conventional discrete structure. As a result, during simulated stereo on, bad effects due to ripple from the power supply and S/N ratio are improved.

■ Others

- 1 Since the super capacitor (47000 μF) is used as the memory back up of the station, the memory is not cancelled for several weeks*note after the power supply is turned off. However, in the event the memory has been cancelled due to the power supply being off for a long duration of time, perform the renewal of the memory again. [*Note: for approximately over a month]
- 2 The location of the antenna of this model can be set freely since a large loop antenna is used for AM receiving.

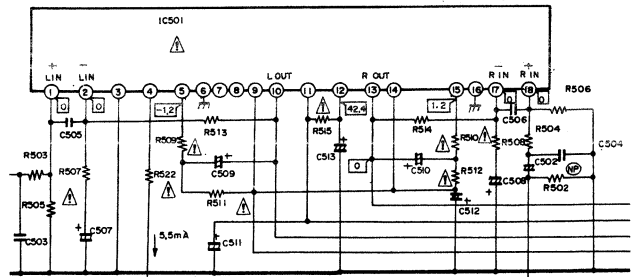


Fig. 11-5 Power AMP circuit

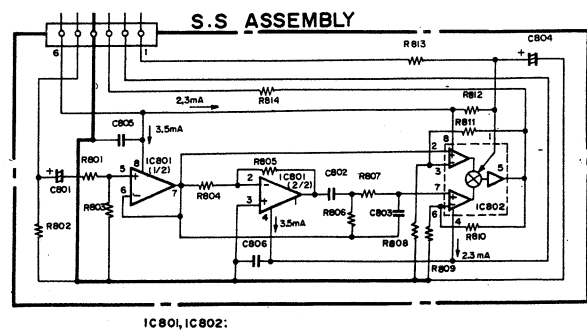


Fig. 11-6 Simulated stereo circuit

11.2 IC data
■ TA7343AP

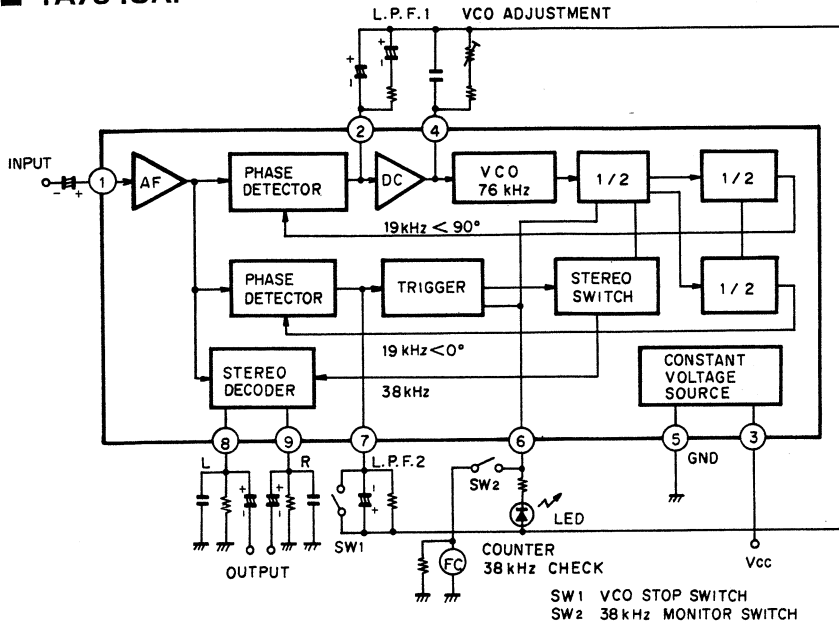


Fig. 11-7 Block diagram of TA7343AP

■ LA1265S

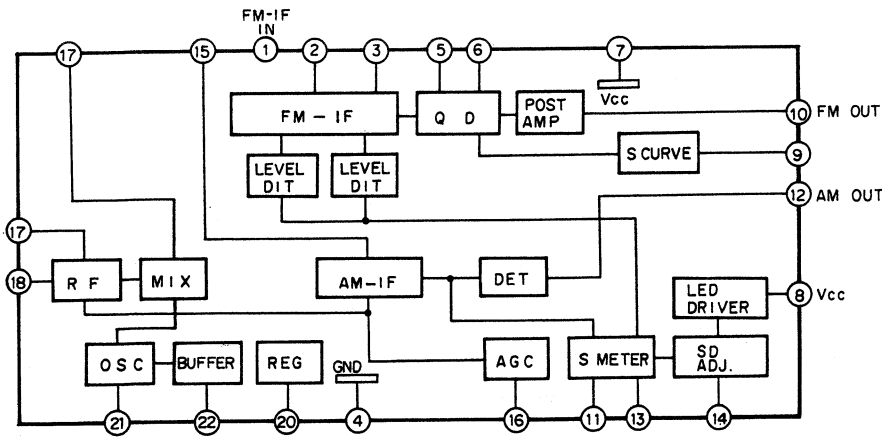


Fig. 11-8 Block diagram of LA1265S

■ STK4171IIS

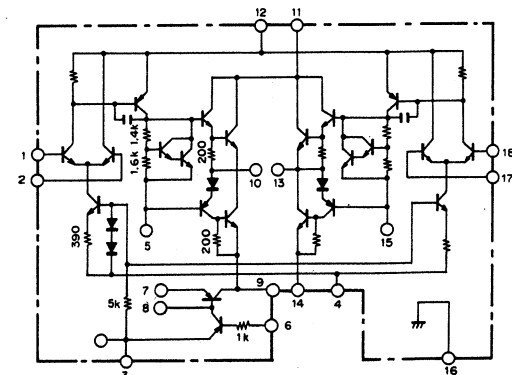


Fig. 11-10 Block diagram of STK4171IIS

■ PD2017

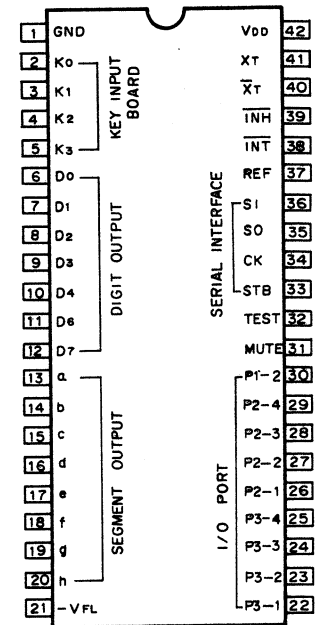


Fig. 11-9 Pin alignment of PD2017

12. PACKING

Parts List

Mark	No.	Part No.	Description
	1	ADH-005	FM Antenna
	2	ARB-719	Operating instruction (English)
	3	ATB-102	Loop antenna assembly
	4	AHA-394	Side pad
	5	AHE-690	Packing case

