


Service Manual

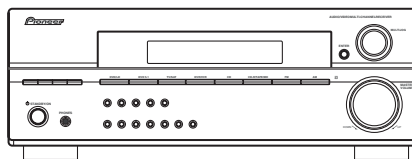

VSX-415-K

ORDER NO.
RRV3136

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-415-K VSX-415-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-415-K	MYXJ	AC 220-230V	
VSX-415-S	MYXJ	AC 220-230V	



For details, refer to "Important Check Points for Good Servicing".

1234

SAFETY INFORMATION

A



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

B

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

C

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

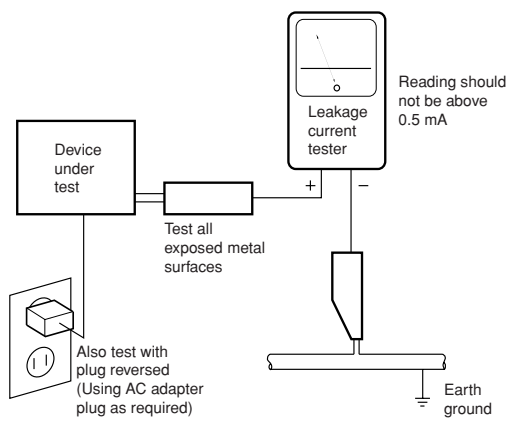

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification (addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws




To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

	SAFETY INFORMATION	2
	1. SPECIFICATIONS	5
A	2. EXPLODED VIEWS AND PARTS LIST	7
	2.1 PACKING	7
	2.2 EXTERIOR.....	8
	2.3 FRONT PANEL	10
	3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	12
	3.1 BLOCK DIAGRAM	12
	3.2 OVERALL WIRING CONNECTION DIAGRAM.....	14
	3.3 MAIN ASSY (1/3)	16
	3.4 MAIN ASSY (2/3)	18
	3.5 MAIN ASSY (3/3)	20
	3.6 DSP ASSY (1/2).....	22
	3.7 DSP ASSY (2/2).....	24
B	3.8 AMP & PRIMARY (1/2), TRANS2 and TRANS3 ASSYS	26
	3.9 AMP & PRIMARY (2/2), REGULATOR, AMP INPUT and TRANS1 ASSYS	28
	3.10 VIDEO and 5.1CH ASSYS.....	30
	3.11 FRONT DISPLAY, R. ENCODER, POWER SW & KEY and F. KEY ASSYS	32
	3.12 H.P. ASSY	34
	4. PCB CONNECTION DIAGRAM	35
	4.1 TRANS2, TRANS3 and TRANS1 ASSYS	36
	4.2 REGULATOR ASSY.....	37
	4.3 MAIN ASSY	38
	4.4 DSP ASSY	42
	4.5 AMP & PRIMARY and AMP INPUT ASSYS	44
	4.6 F. DISPLAY, R. ENCODER, POWER SW & KEY, H. P. and F. KEY ASSYS	46
C	4.7 VIDEO and 5.1CH ASSYS.....	50
	5. ELECTRICAL PARTS LIST	52
	6. ADJUSTMENT	56
	7. GENERAL INFORMATION	57
	7.1 DIAGNOSIS	57
	7.1.1 DISASSEMBLY	57
	7.2 PARTS.....	59
	7.2.1 IC	59
	7.3 EXPLANATION	65
	7.3.1 POWER ON AND OFF INITIAL TIMING CHART	65
	7.3.2 IC DATA TRANSMISSION TIMING CHART	67
	7.3.3 DETECTION CIRCUIT	68
D	7.3.4 AMPLIFIER SYSTEM PROTECTION OPERATION SPECIFICATION.....	69
	7.3.5 AMPLIFIER FAILURE DIAGNOSIS FLOW CHART	71
	8. PANEL FACILITIES	72

	5		6		7		8	
1. SPECIFICATIONS								
Amplifier section								
Continuous power output (stereo)								
Front:								
VSX-415. 80 W (DIN 1kHz, THD 1.0%, 8 Ω)								
Continuous power output (surround)								
VSX-415 model:								
Front. 100 W per channel (1kHz, 10%, 8 Ω)								
Center 100 W (1kHz, 10%, 8 Ω)								
Surround 100 W per channel								
(1kHz, 10%, 8 Ω)								
Audio section								
Input (Sensitivity/Impedance)								
CD, DVR/VCR, CD-R/TAPE/MD,								
DVD/LD, TV/SAT 200 mV/47 kΩ								
Frequency response								
CD, DVR/VCR, CD-R/TAPE/MD, DVD/LD,								
TV/SAT 5 Hz to 100,000 Hz ± 0.5 dB								
Output (Level/Impedance)								
DVR/VCR REC, CD-R/TAPE/								
MD REC. 200 mV/2.2 kΩ								
Tone control								
Bass. ± 6 dB (100 Hz)								
Treble. ± 6 dB (10 kHz)								
Loudness. +10 dB/+5 dB (100 Hz/10 kHz)								
(at volume level –50 dB)								
Signal-to-Noise Ratio DIN								
(Continuous rated power output / 50mW)								
CD, DVR/VCR, CD-R/TAPE/MD,								
DVD/LD, TV/SAT. 88/64 dB								
Video Section								
Input (Sensitivity/Impedance)								
DVR/VCR, DVD/LD, TV/SAT. 1 Vp-p/75 Ω								
Output (Level/Impedance)								
DVR/VCR, MONITOR OUT. 1 Vp-p/75 Ω								
Frequency response								
DVR/VCR, DVD/LD,								
TV/SAT $\Rightarrow$ MONITOR. 5 Hz to 7 MHz ± 0.5 dB								
Signal-to-Noise Ratio. 55 dB								
Crosstalk. 50dB								
VSX-415-K								
	5		6		7		8	

2.2 EXTERIOR

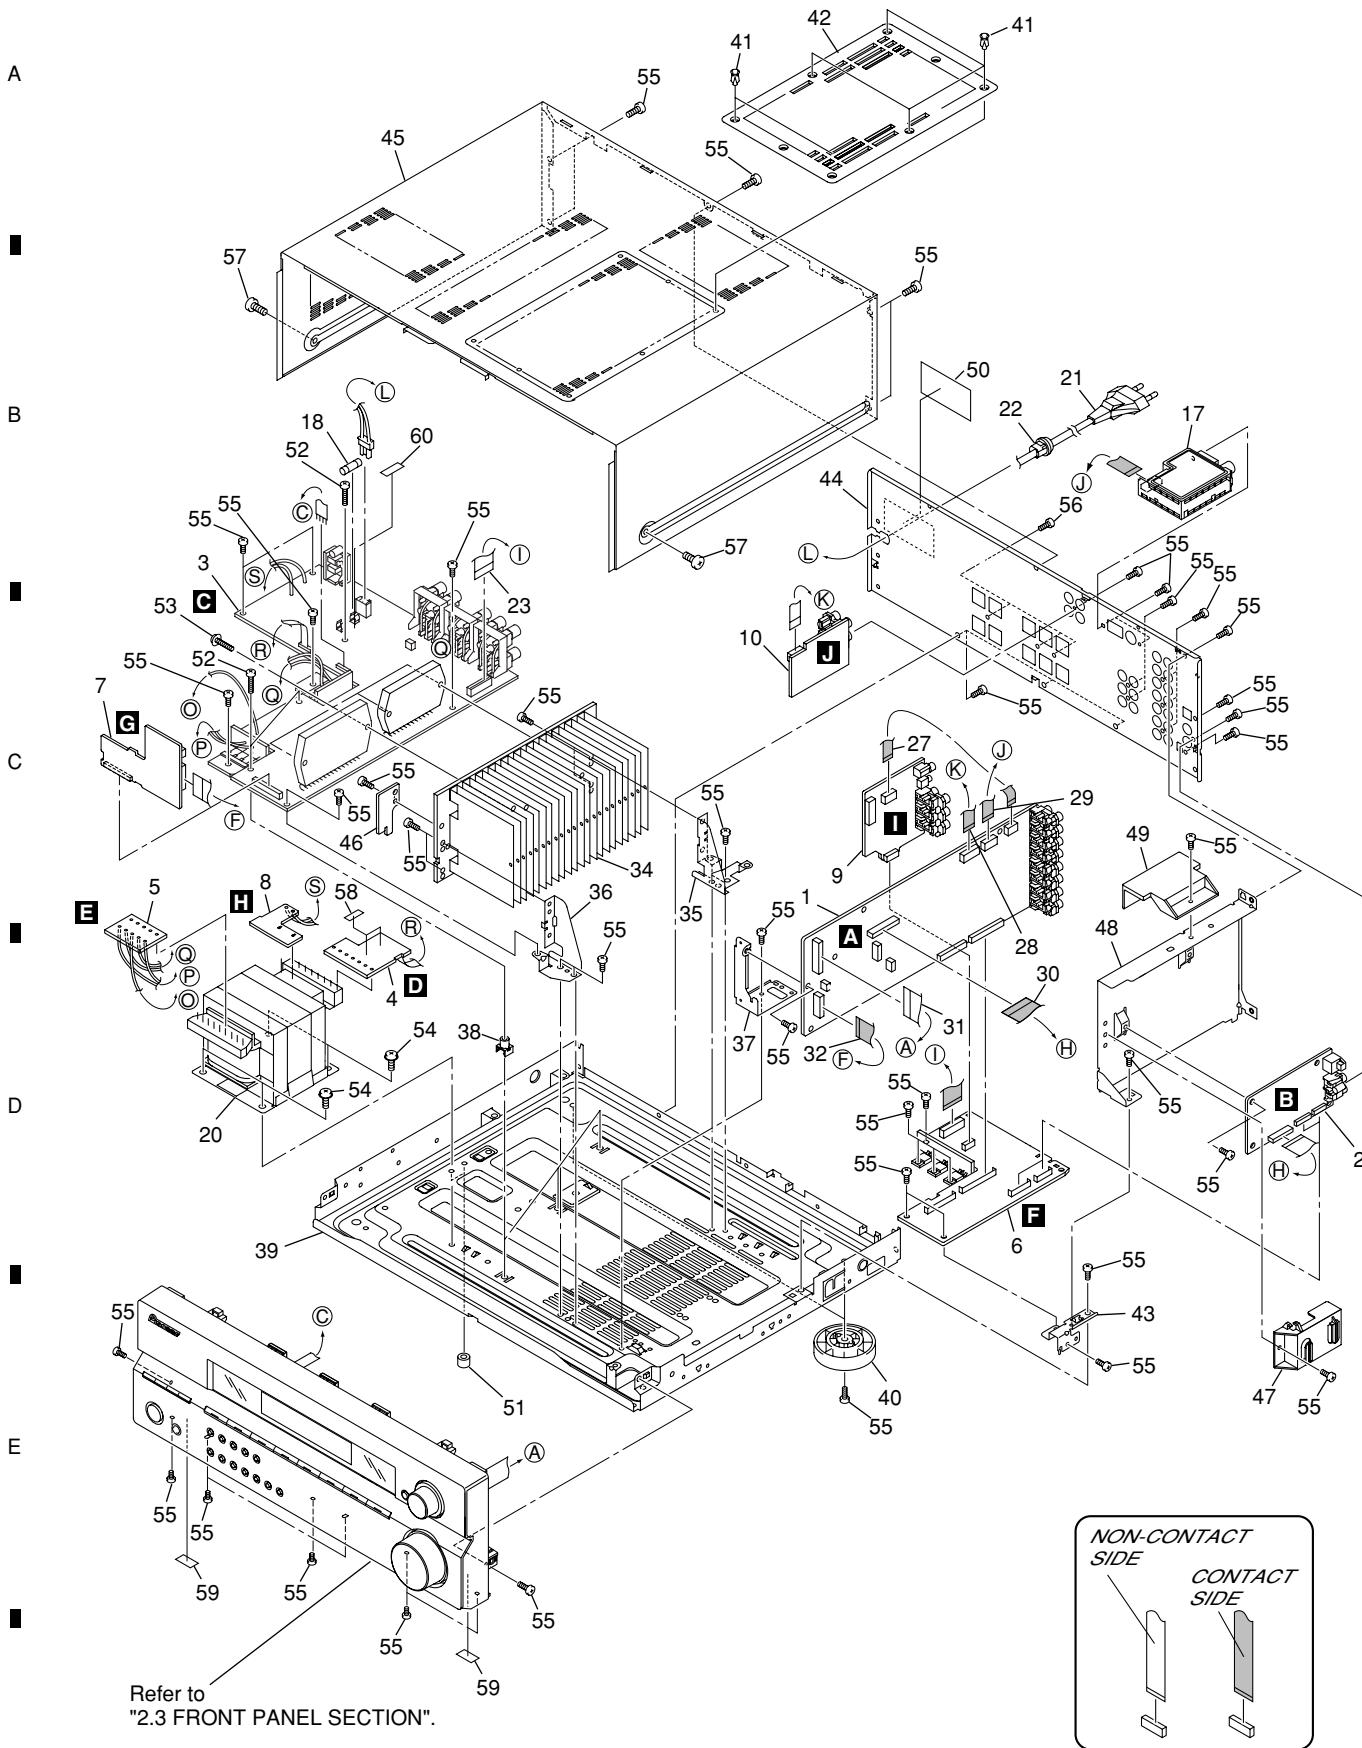

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	MAIN Assy	XWK3117	32	J35 19P F.F.C/30V	XDD3101	
2	DSP Assy	AWX8418	33			A
3	AMP & PRIMARY Assy	XWZ3783	NSP 34	Heatsink 0.8	ANH7110	
4	TRANS2 Assy	XWZ3810	35	Heat Sink Angle R	ANG7252	
5	TRANS3 Assy	XWZ3813				
			36	Heat Sink Angle F	ANG7251	
6	REGULATOR Assy	XWZ3825	37	PCB Angle R5	XNG3073	
7	AMP INPUT Assy	XWZ3802	38	PCB Mold	AMR2533	
8	TRANS1 Assy	XWZ3806	NSP 39	Under Base R6	XNA3012	
9	VIDEO Assy	XWZ3903	40	Insulator	See Contrast table (2)	
10	5.1CH Assy	XWZ3914				
			41	Push Rivet	See Contrast table (2)	
11			42	Top Cover	See Contrast table (2)	B
12			43	REG Support R6	XNG3093	
13			44	Rear Panel	XNC3329	
14			45	Bonnet	See Contrast table(2)	
15						
			NSP 46	HOLDER Assy	XWZ3820	
16			47	FFC Holder R6	XMR3072	
17	FM/AM TUNER UNIT	AXX7170	48	Shield A R6	XNG3068	
⚠ 18	FU1 Fuse (T2.5A)	REK1026	49	FFC Cover R6	XMR3060	
19			NSP 50	N Label	See Contrast table(2)	
⚠ 20	T1 Power Transformer	XTS3072				
			NSP 51	Spacer	AEB7092	C
⚠ 21	AC Power Cord	VDG1077	52	Screw	BBZ30P200FTC	
22	Cord Stopper	CM-22B	53	Screw 3x23	XBA3012	
23	J36 23P F.F.C/30V	XDD3102	54	Screw	FBT40P080FNI	
24			55	Screw	BBZ30P080FTC	
25						
			56	Screw	BBT30P100FCC	
26			57	Screw	See Contrast table(2)	
27	J33 13P F.F.C/30V	XDD3150	NSP 58	ICP Label	XAX3319	
28	J48 8P F.F.C/30V	XDD3151	59	Rubber Sheet	AEB1111	
29	J34 11P F.F.C/30V	XDD3149	NSP 60	Fuse Card	AAX7277	D
30	J43 19P F.F.C/30V	XDD3126				
31	J31 17P F.F.C/30V	XDD3118				

(2) CONTRAST TABLE

VSX-415-K/MYXJ and VSX-415-S/MYXJ are constructed the same except for the following :

Mark	No.	Description	VSX-415-K/MYXJ	VSX-415-S/MYXJ
	40	Insulatort	AMR7198	PNW2766
	41	Push Rivet	AEC7025	Not used
	41	Push Rivet S	Not used	XEC3026
	42	Top Cover R4UL	XME3004	Not used
	42	Top Cover R5S	Not used	XME3006
	45	Bonnet K U V1	XZN3150	Not used
	45	Bonnet S U V1	Not used	XZN3151
NSP	50	N Label 415K/MY	XAL3218	Not used
	57	Screw	FBT40P080FTB	FBT40P080FNI

4



(1) FRONT PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	FRONT DISPLAY ASSY	XWZ3908	21	D Panel 415 B	XAK3480	
2	R. ENCODER Assy	XWZ3920	22			A
3	POWER SW & KEY Assy	XWZ3917	23	Pioneer Badge	See Contrast table(2)	
4	FRONT KEY Assy	XWZ3912	NSP 24	C Ring DIM 8.1	XBH3016	
5	H.P. Assy	XWZ3923	25	FRT Panel	See Contrast table(2)	
6			26	Earth Plate HP V2	XNG3131	
7			27			
8			28			
9			29			
10	JOG Knob	See Contrast table(2)	30			
11	VOL Knob	See Contrast table(2)	31	Screw	BBZ30P080FTC	B
12	Standby BTN	See Contrast table(2)	32	Screw	BPZ30P100FTC	
13			NSP 33	Gold Foil Label	See Contrast table(2)	
14	FUNC BTN L	See Contrast table(2)				
15	FUNC BTN R	See Contrast table(2)				
16						
17	TUNER BTN	See Contrast table(2)				
18	Sub BTN	See Contrast table(2)				
19	JOG BUTTON	See Contrast table(2)				
20						C

(2) CONTRAST TABLE

VSX-415-K/MYXJ and VSX-415-S/MYXJ are constructed the same except for the following :

Mark	No.	Description	VSX-415-K/MYXJ	VSX-415-S/MYXJ
	10	JOG Knob V1K	XAB3038	Not used
	10	JOG Knob V1S	Not used	XAB3042
	11	VOL Knob V1K	XAB3039	Not used
	11	VOL Knob V1S	Not used	XAB3043
	12	Standby BTN 515K	XAD3202	Not used
	12	Standby BTN 515S	Not used	XAD3203
	14	FUNC BTN 515K L	XAD3206	Not used
	14	FUNC BTN 515S L	Not used	XAD3210
	15	FUNC BTN 515K R	XAD3207	Not used
	15	FUNC BTN 515S R	Not used	XAD3211
	17	Tuner BTN V2K	XAD3192	Not used
	17	Tuner BTN V2S	Not used	XAD3193
	18	Sub BTN V2K	XAD3198	Not used
	18	Sub BTN V2S	Not used	XAD3199
	19	Jog Button V2K	XAD3204	Not used
	19	Jog Button V2S	Not used	XAD3205
	23	Pioneer Badge	XAM3006	VAM1129
	25	FRT Panel 415K	XMB3187	Not used
	25	FRT Panel 415S	Not used	XMB3188
NSP	33	Gold Foil Label	Not used	XAX3487

12

1


2


3

4


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM


3.1 BLOCK DIAGRAM

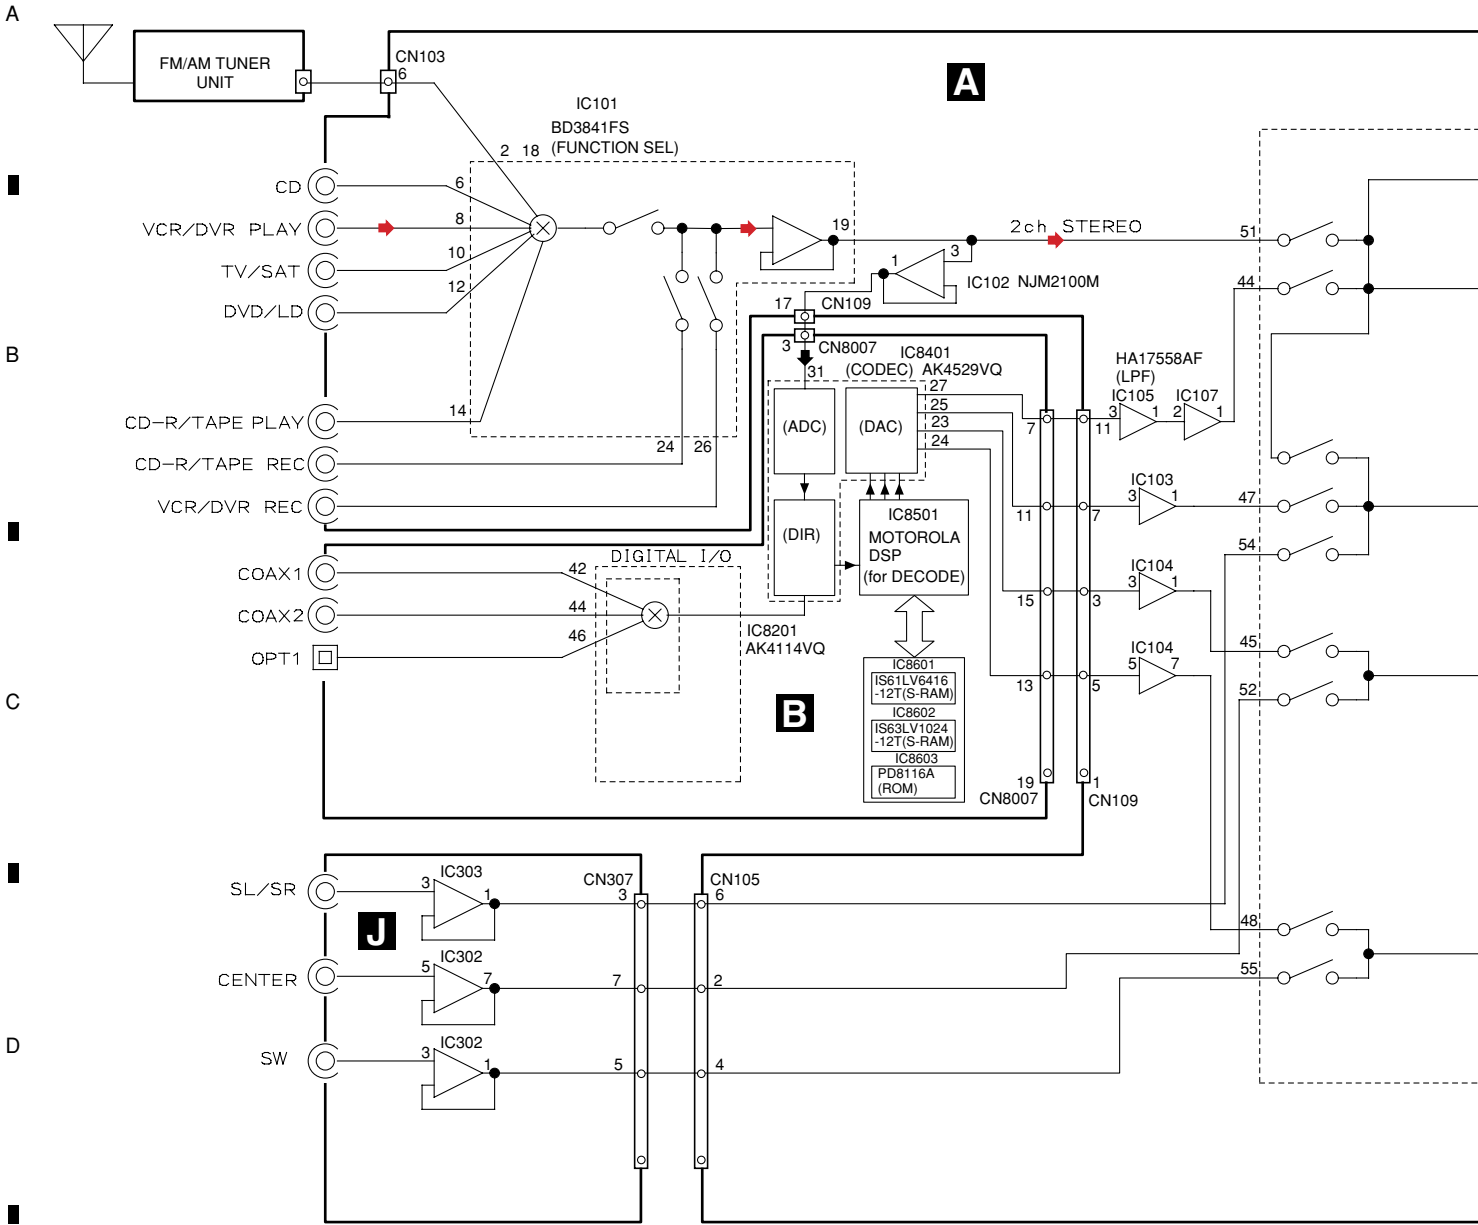

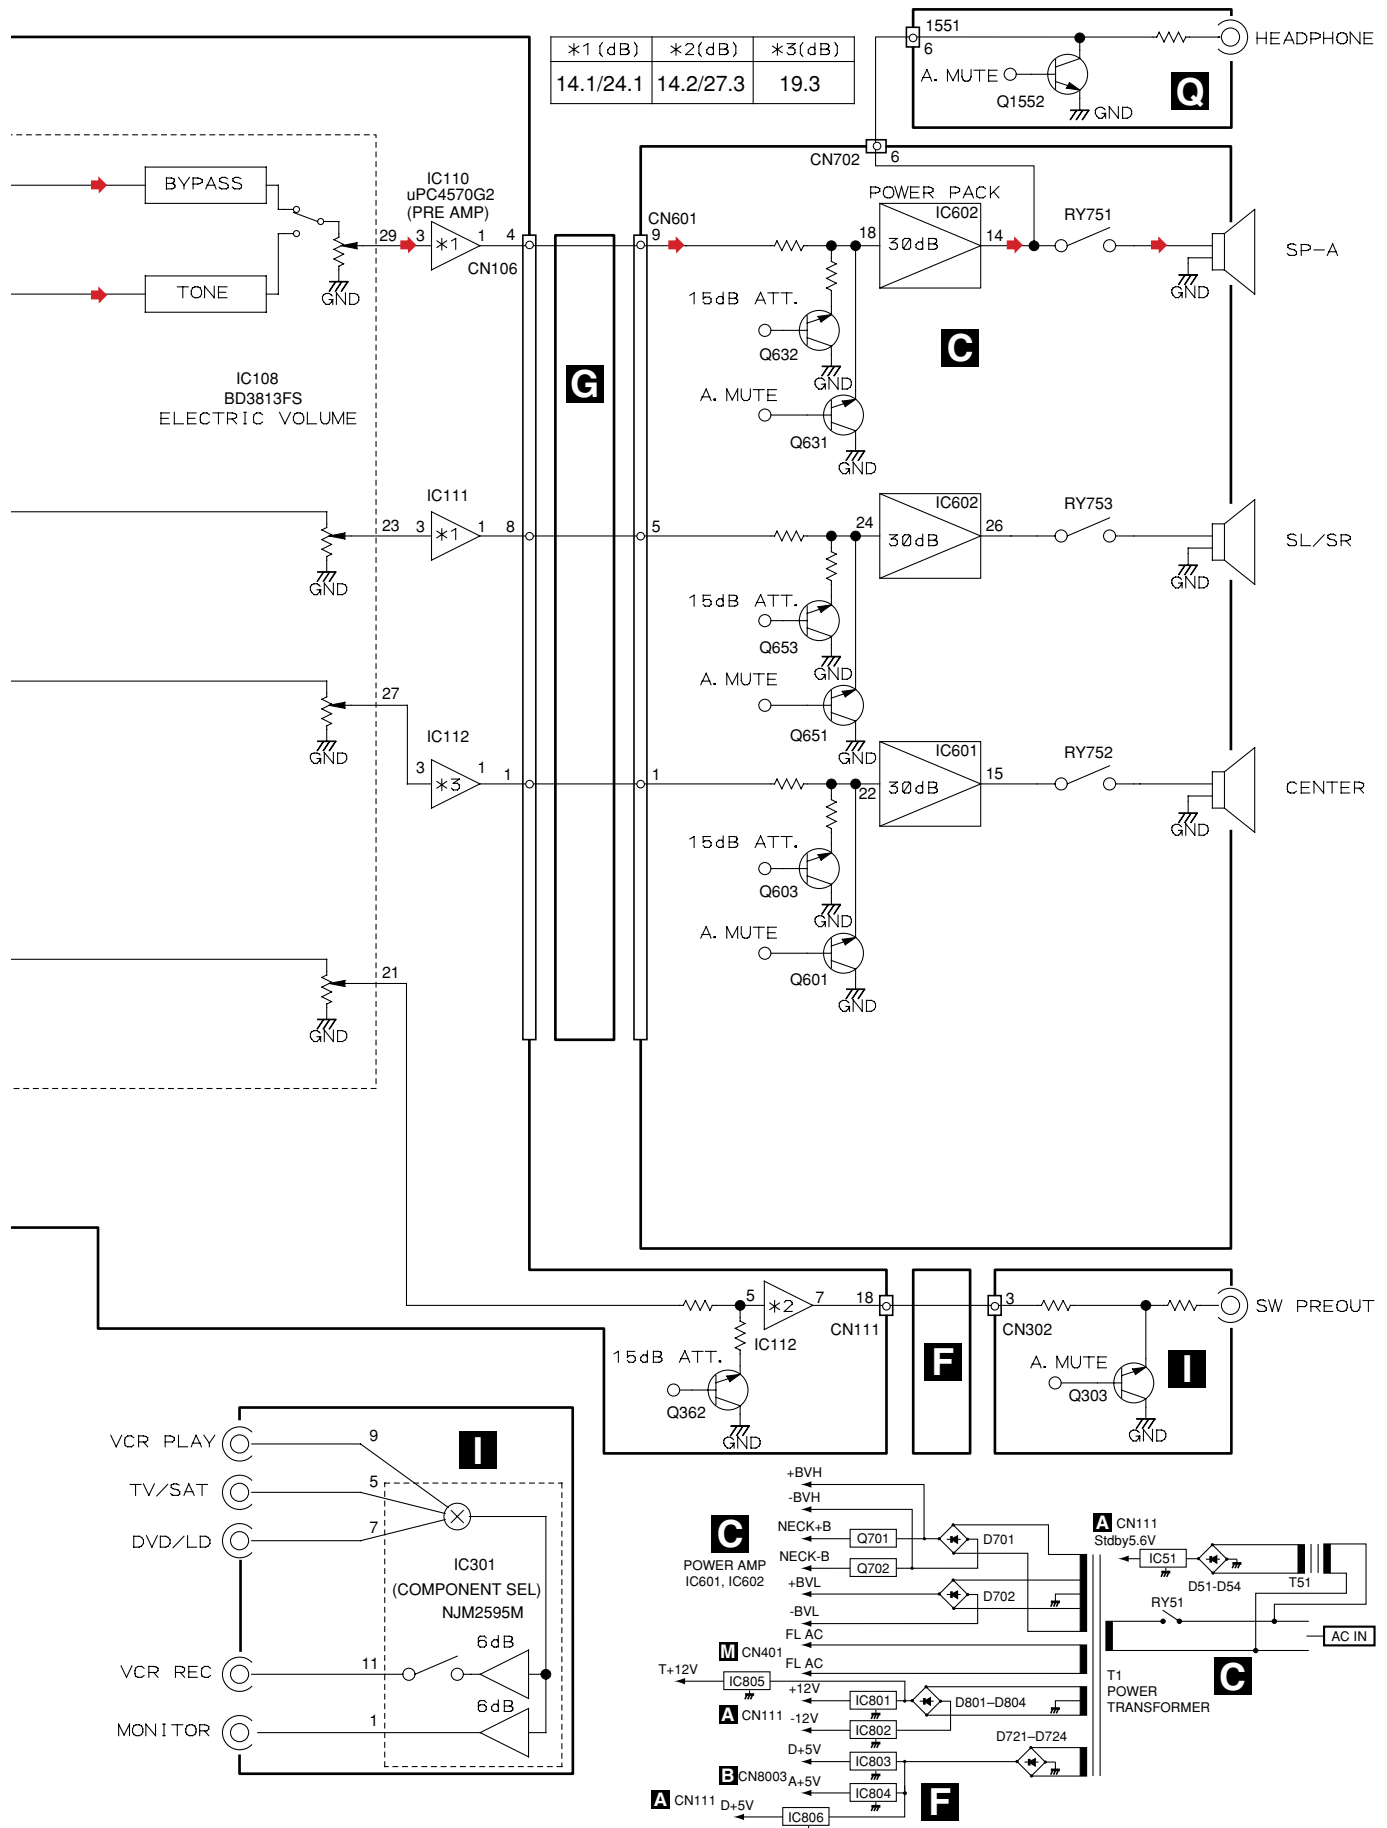

3.2 OVERALL WIRING CONNECTION DIAGRAM

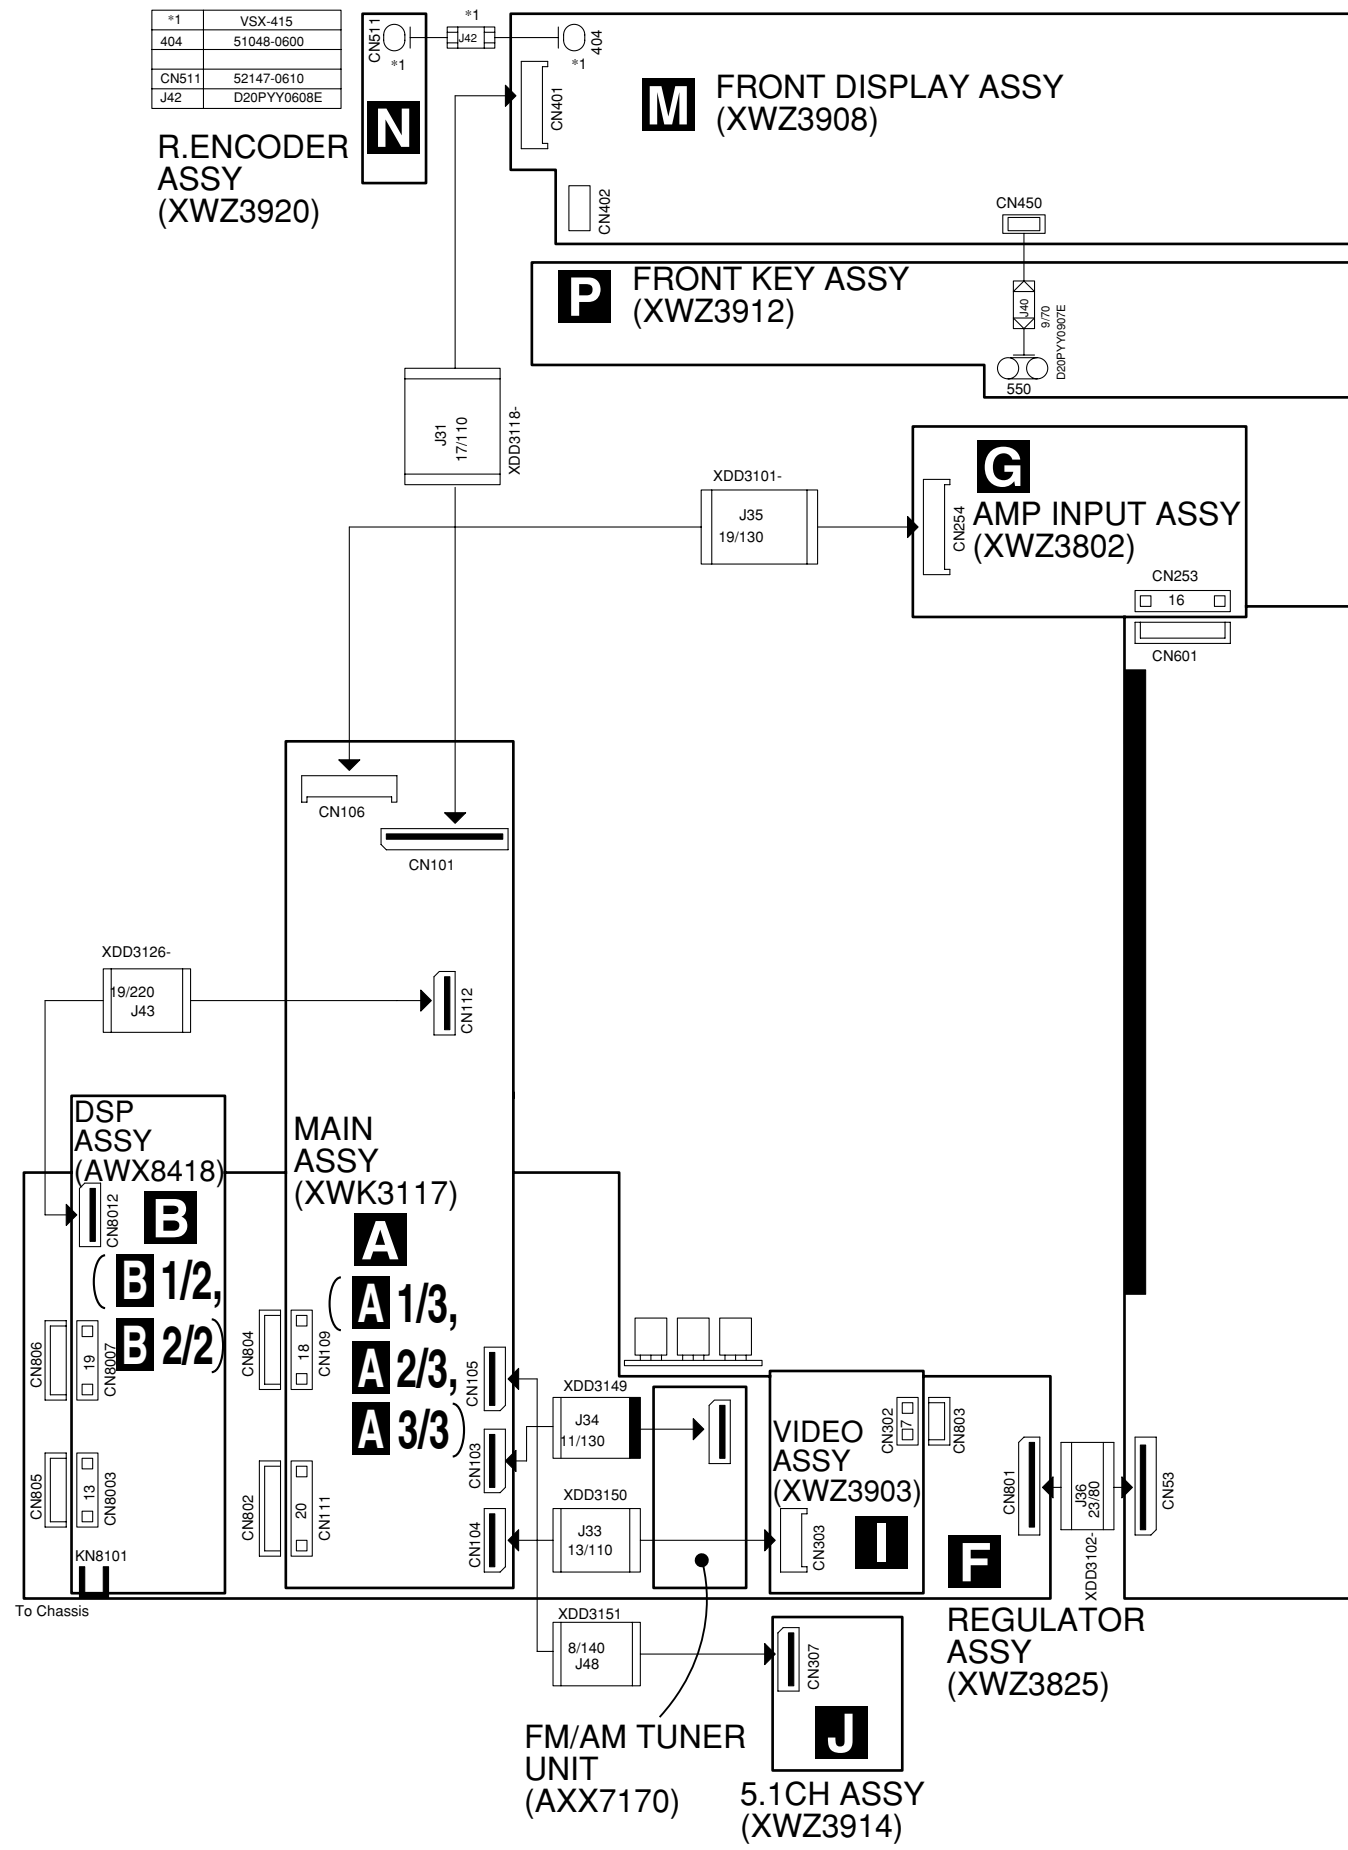

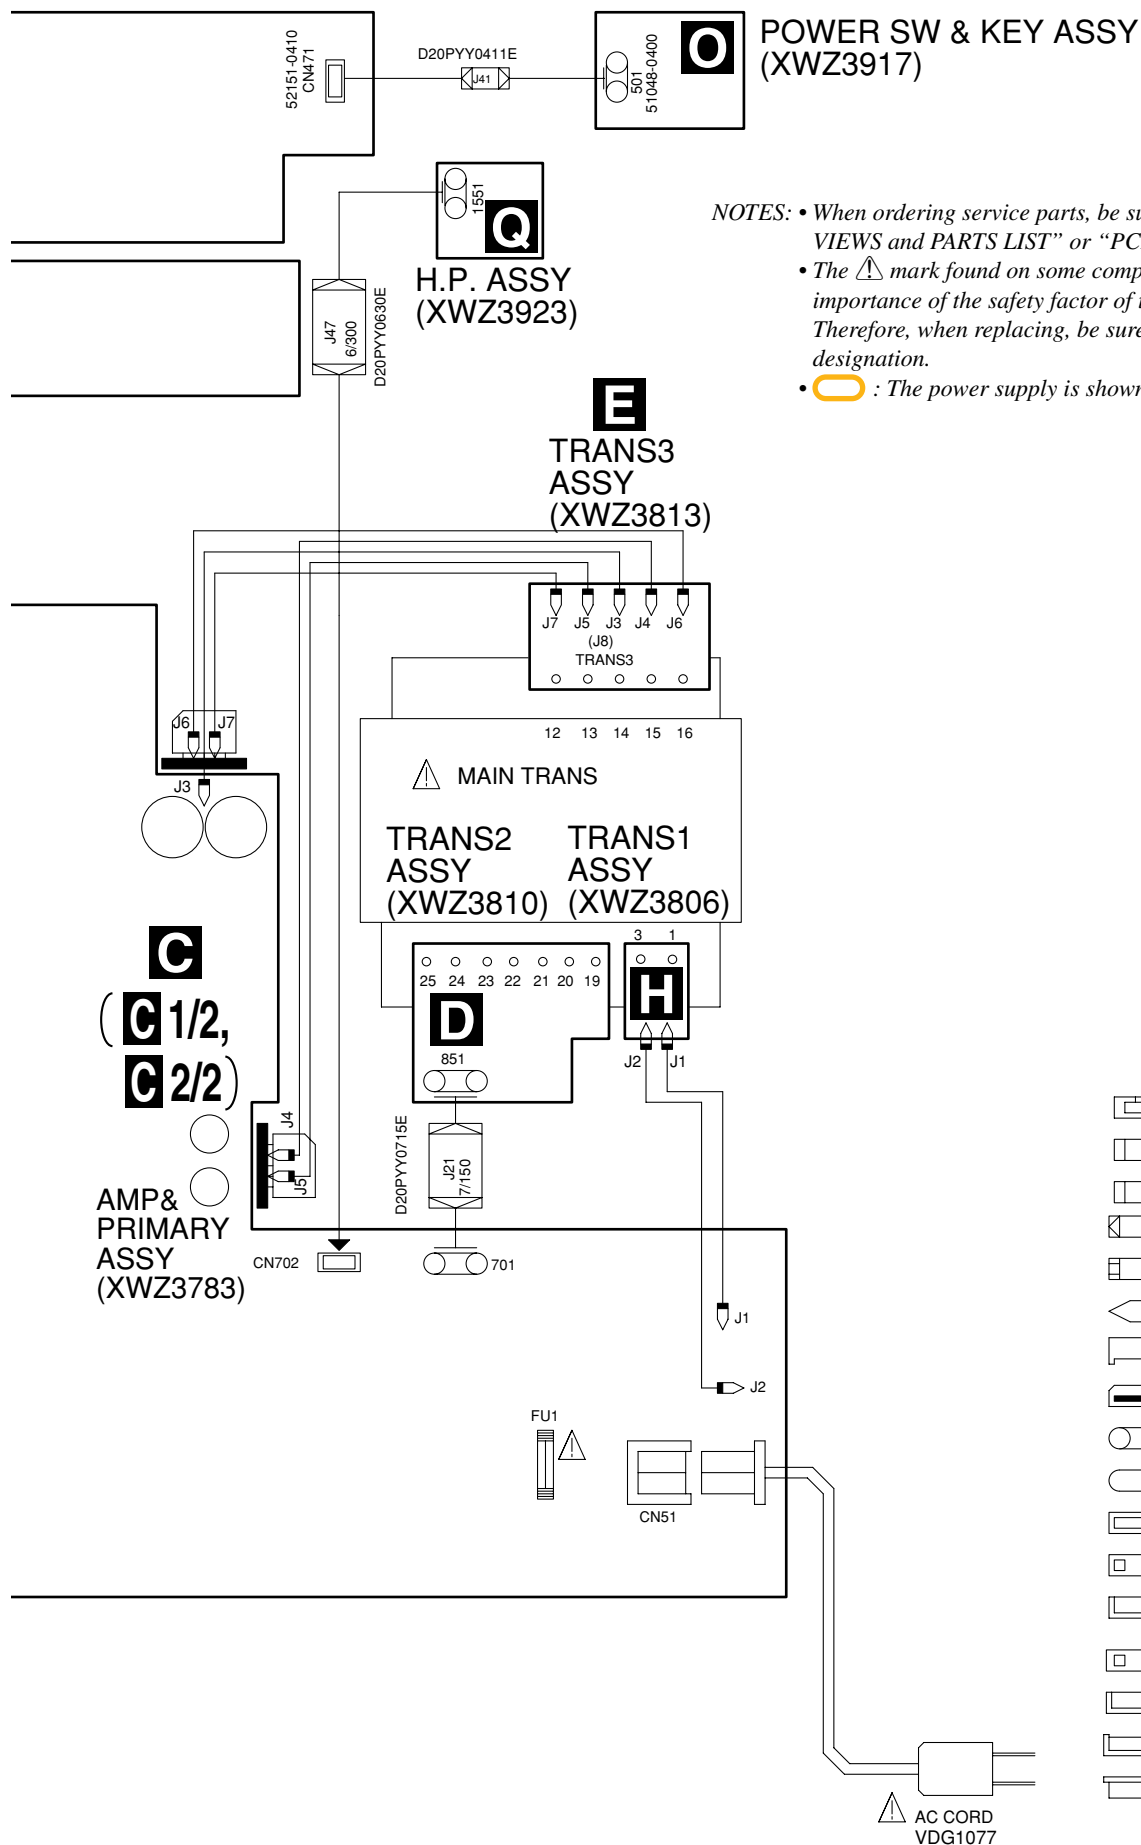

A

B

C

D

E

F

1 ■ 2 ■ 3 ■ 4 ■


MAIN ASSY(XWK3117)



A $\frac{1}{3}$


VSX-415-K

F CN804

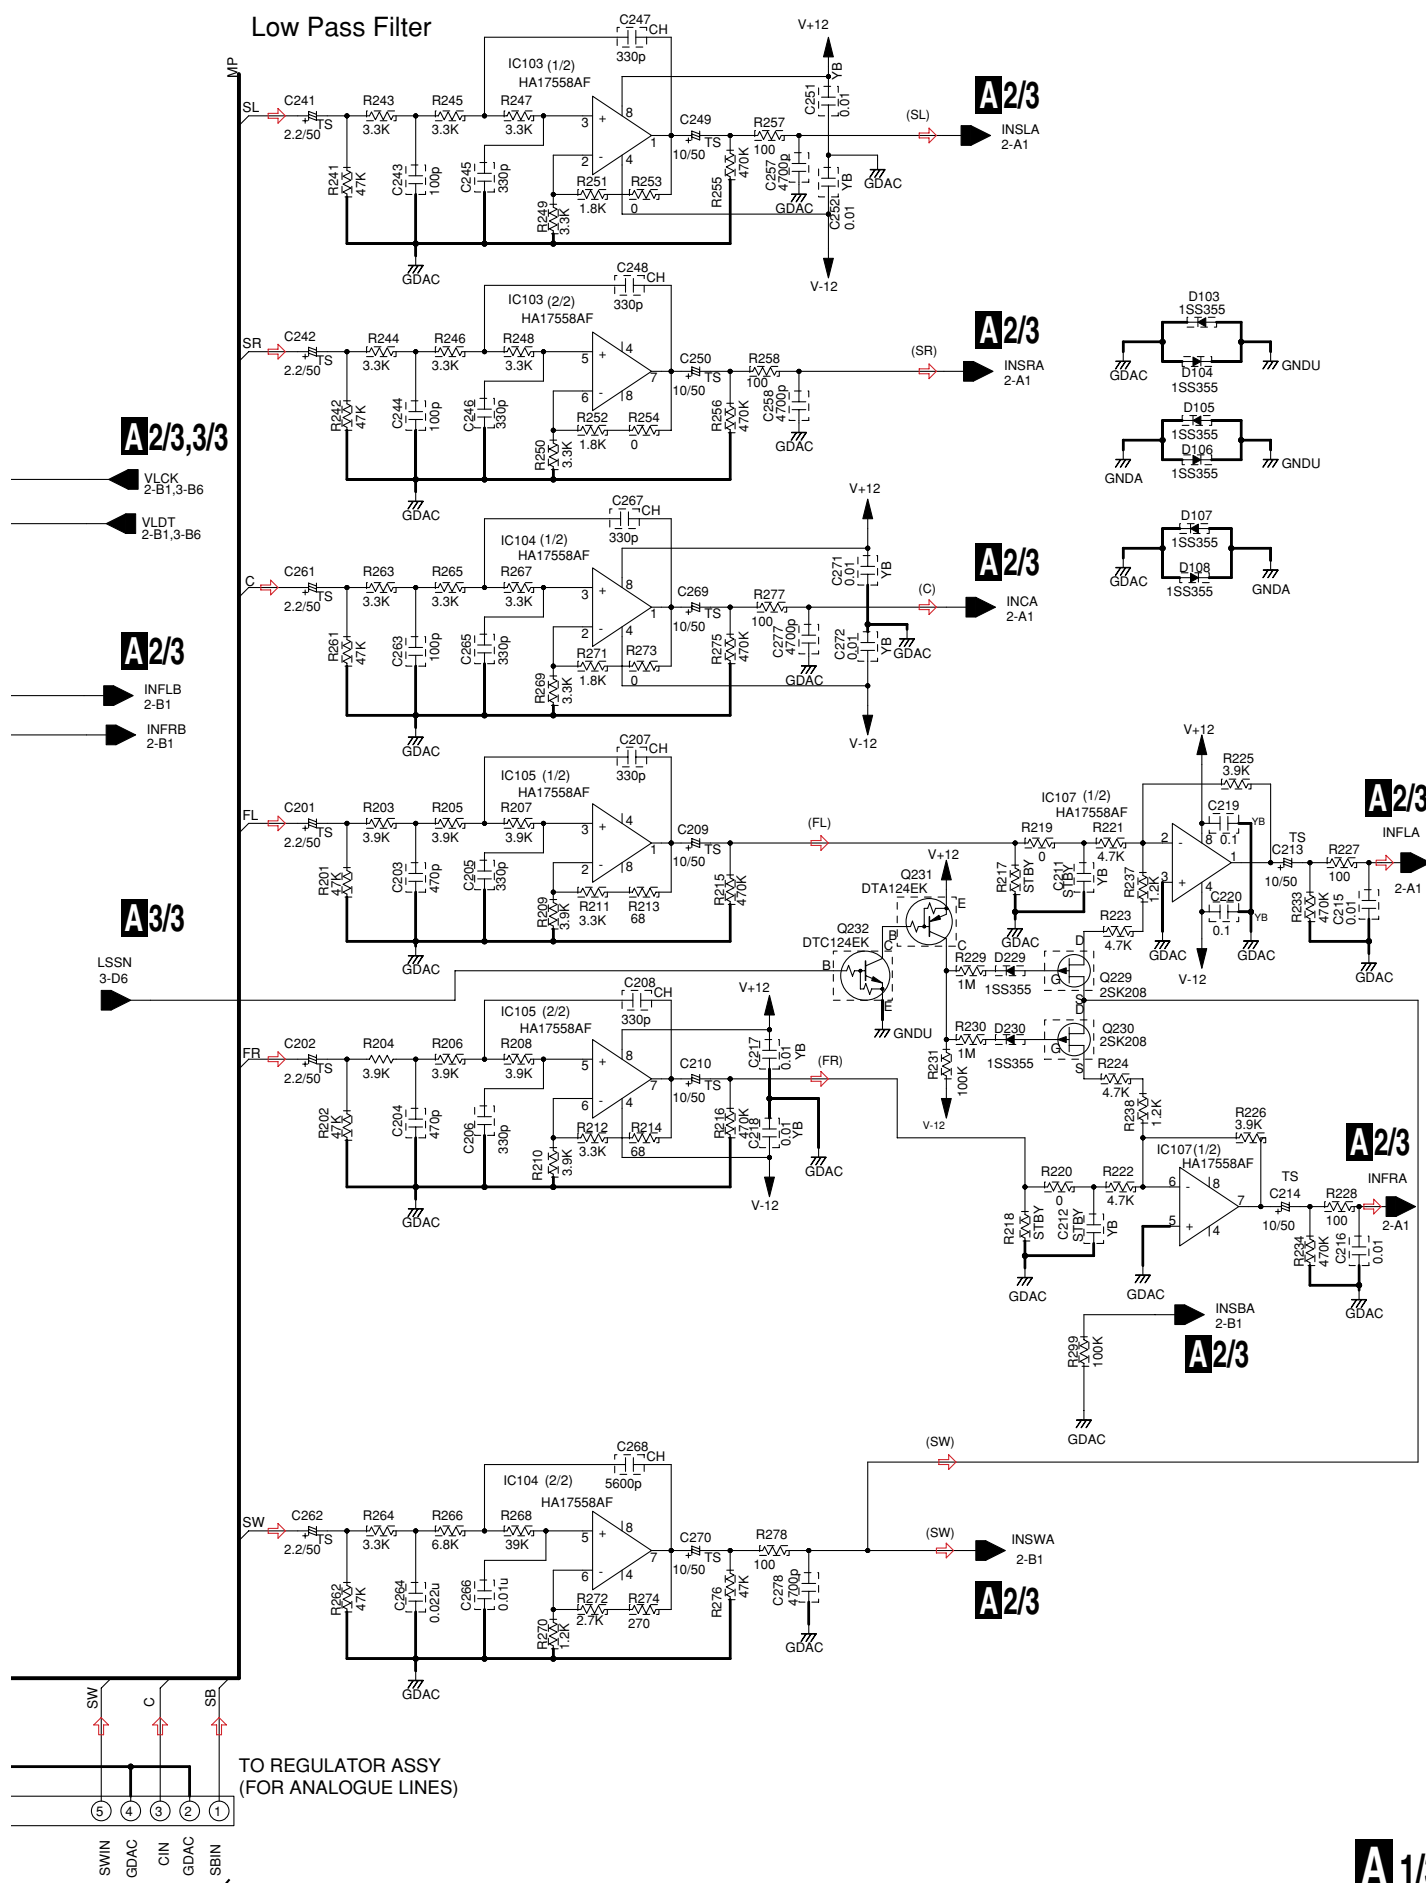

3.4 MAIN ASSY (2/3)

A 2/3 MAIN ASSY(XWK3117)

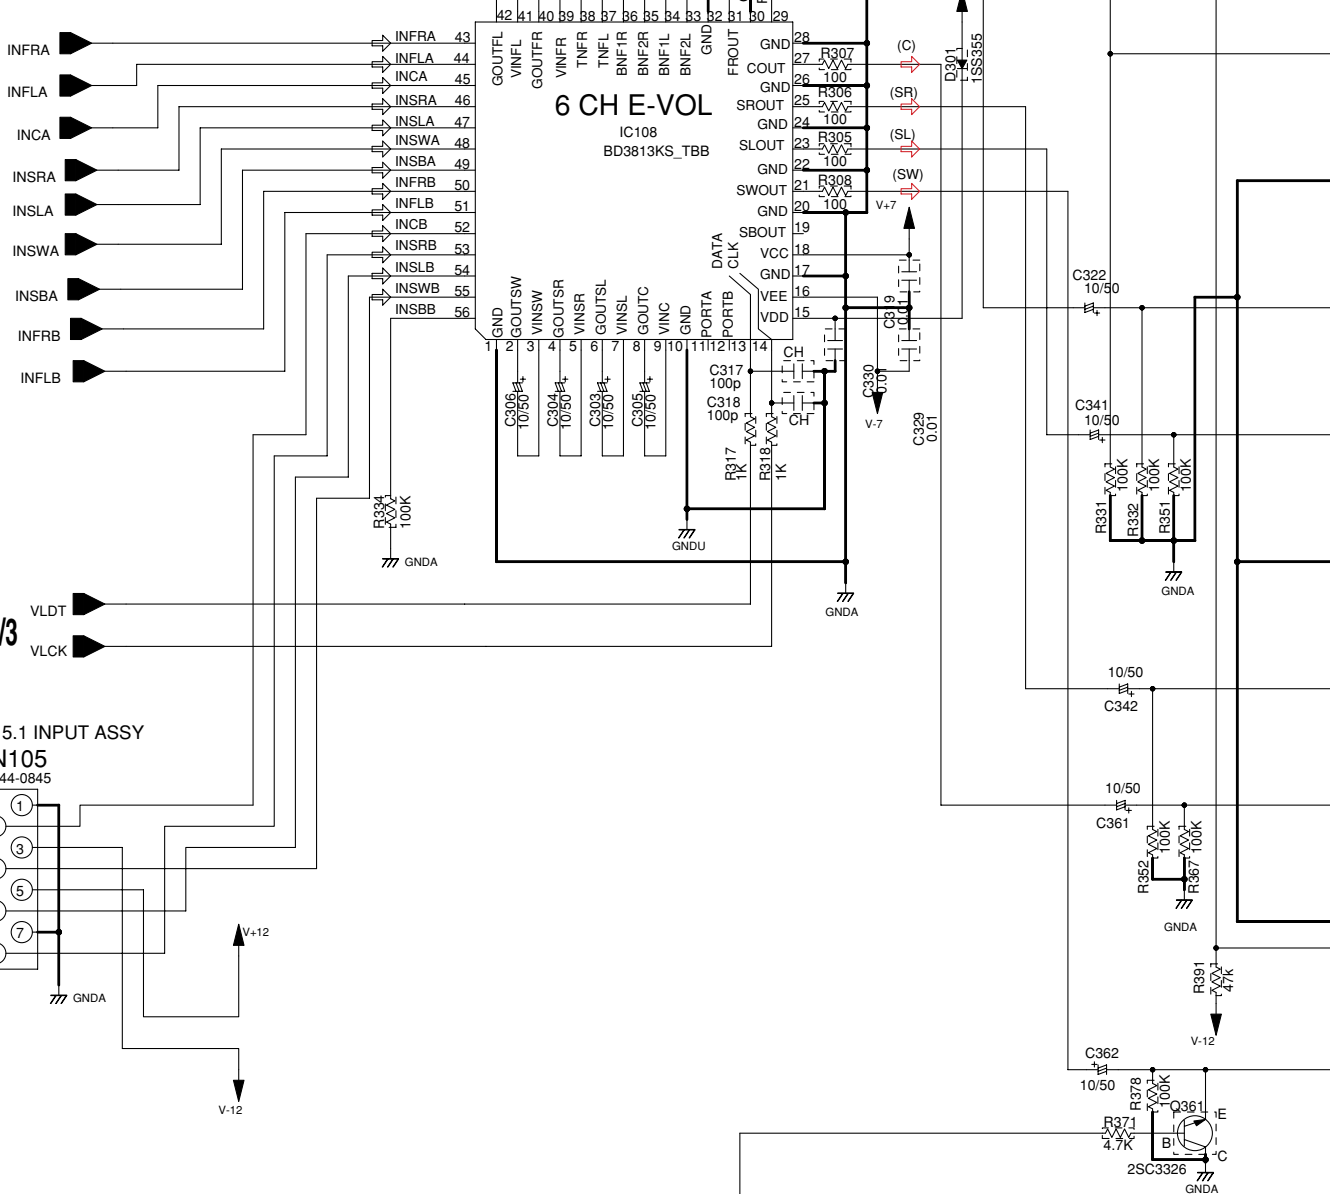

NOTE

1.RESISTORS

Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J) ± 5% unless otherwise noted.


2.CAPACITORS

Unit: p-pF or μF unless otherwise noted.
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.
JA:CEJA

⇒ : AUDIO SIGNAL FLOW




3.5 MAIN ASSY (3/3)

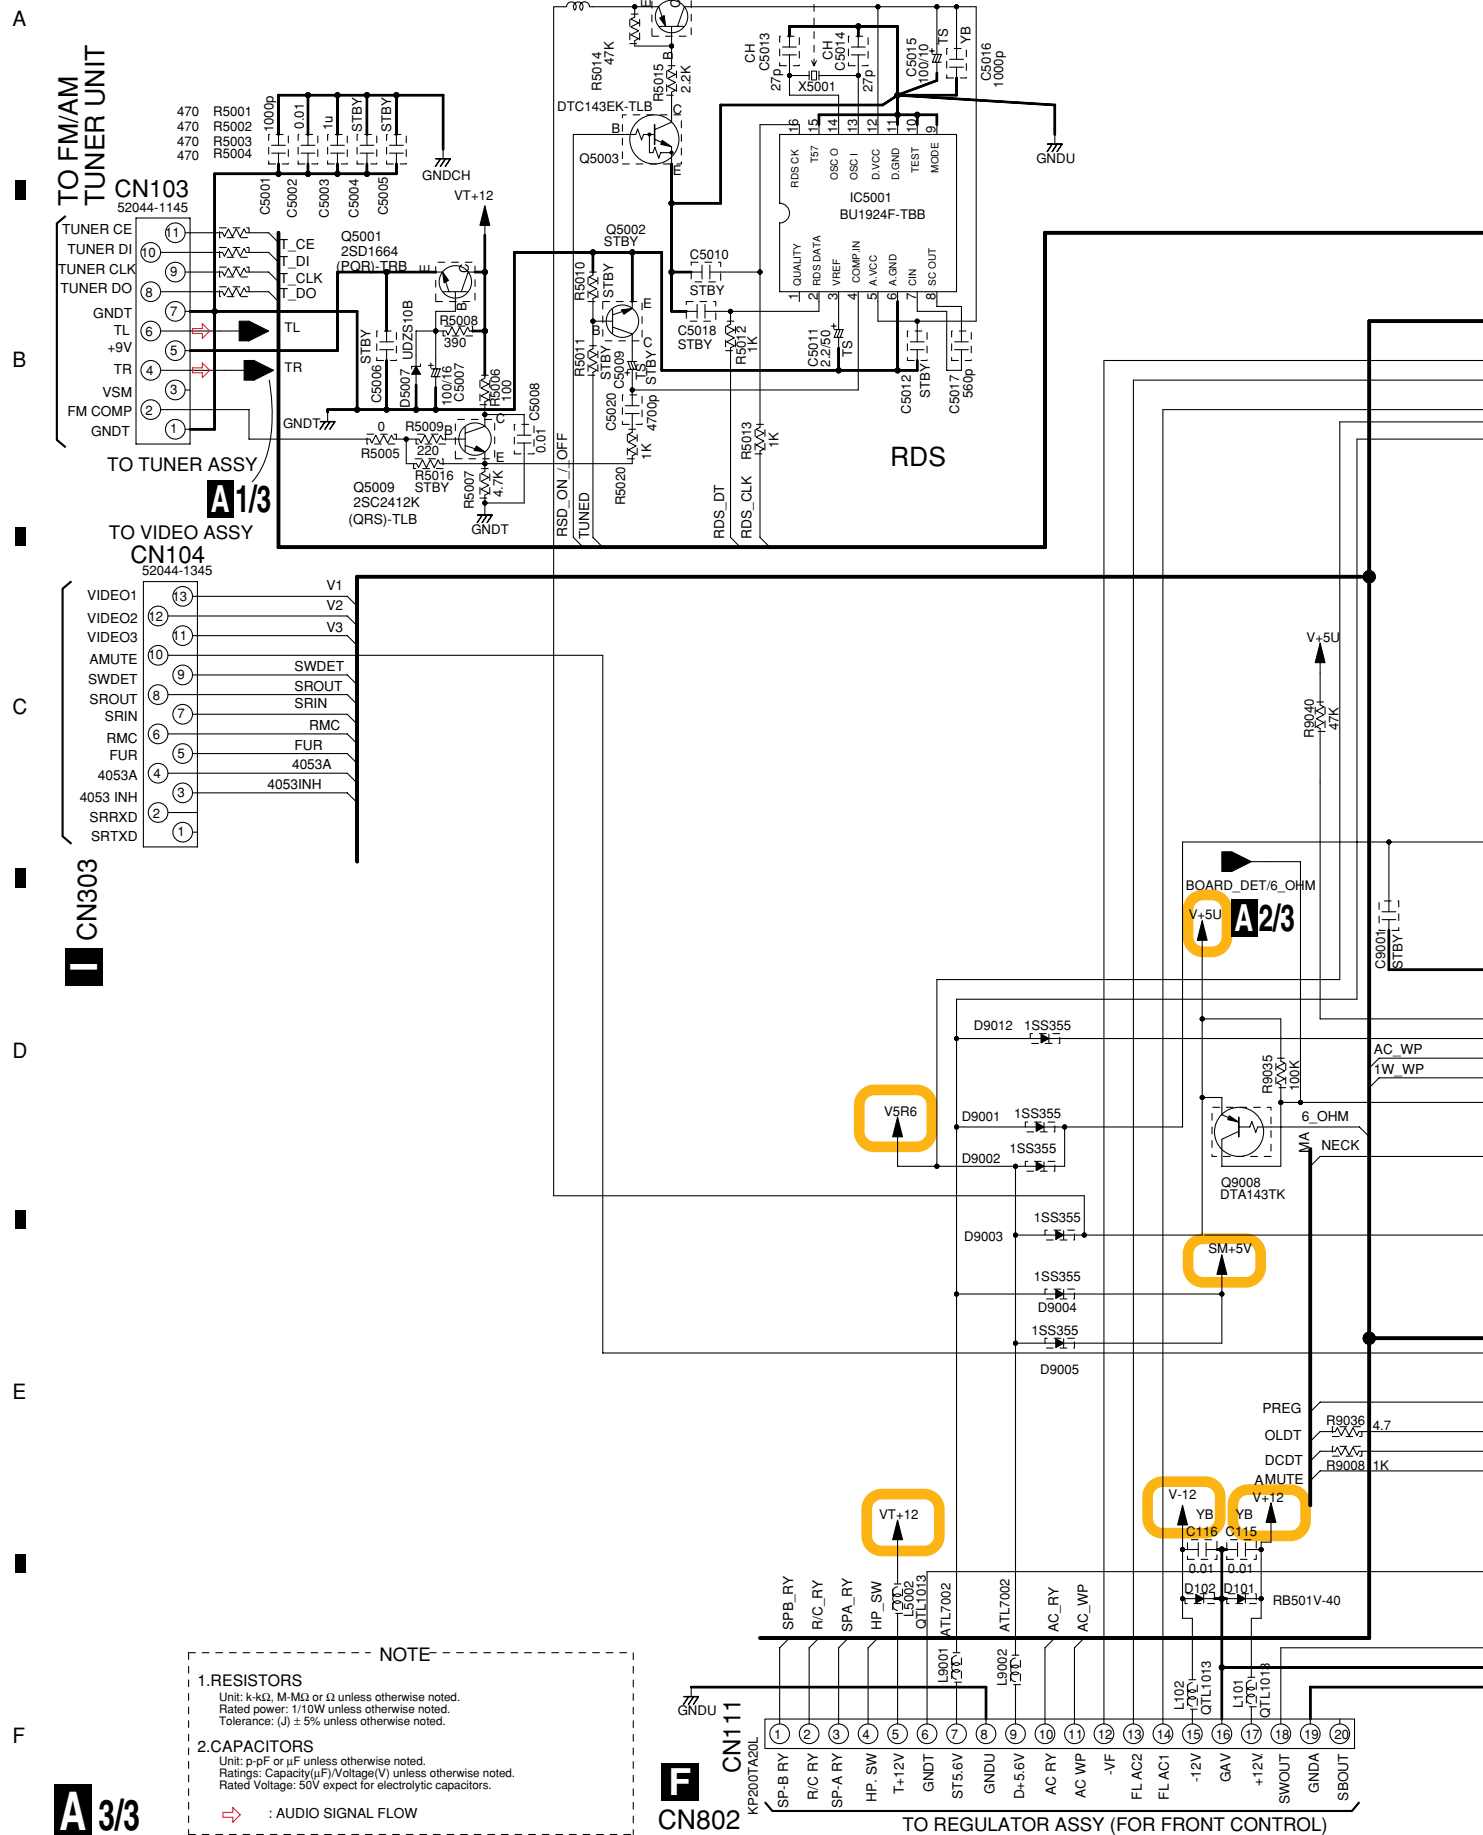

K CN401

A 3/3 MAIN ASSY(XWK3117)

TO FRONT ASSY

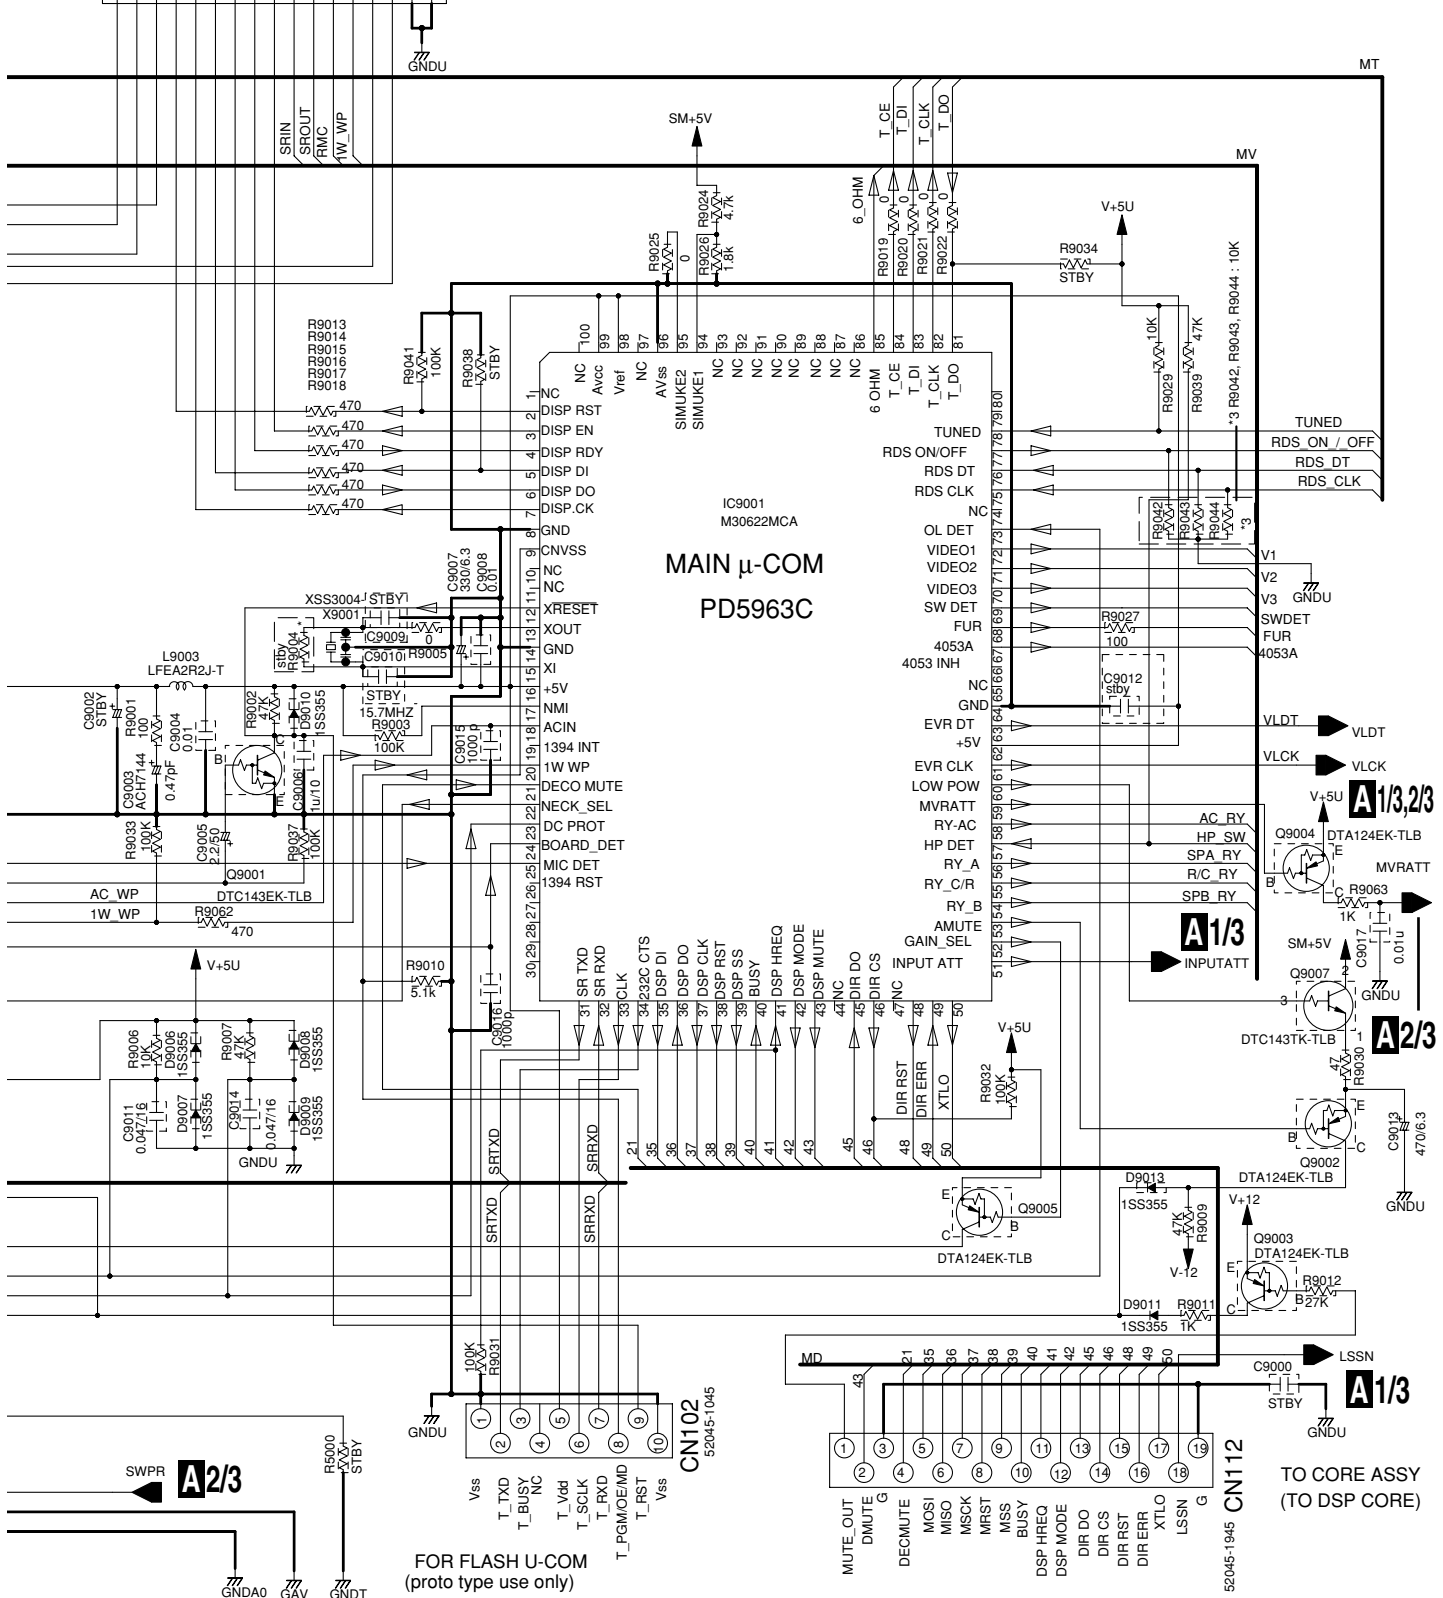



B 2/2 CN8012

A 3/3

VSX-415-K

△



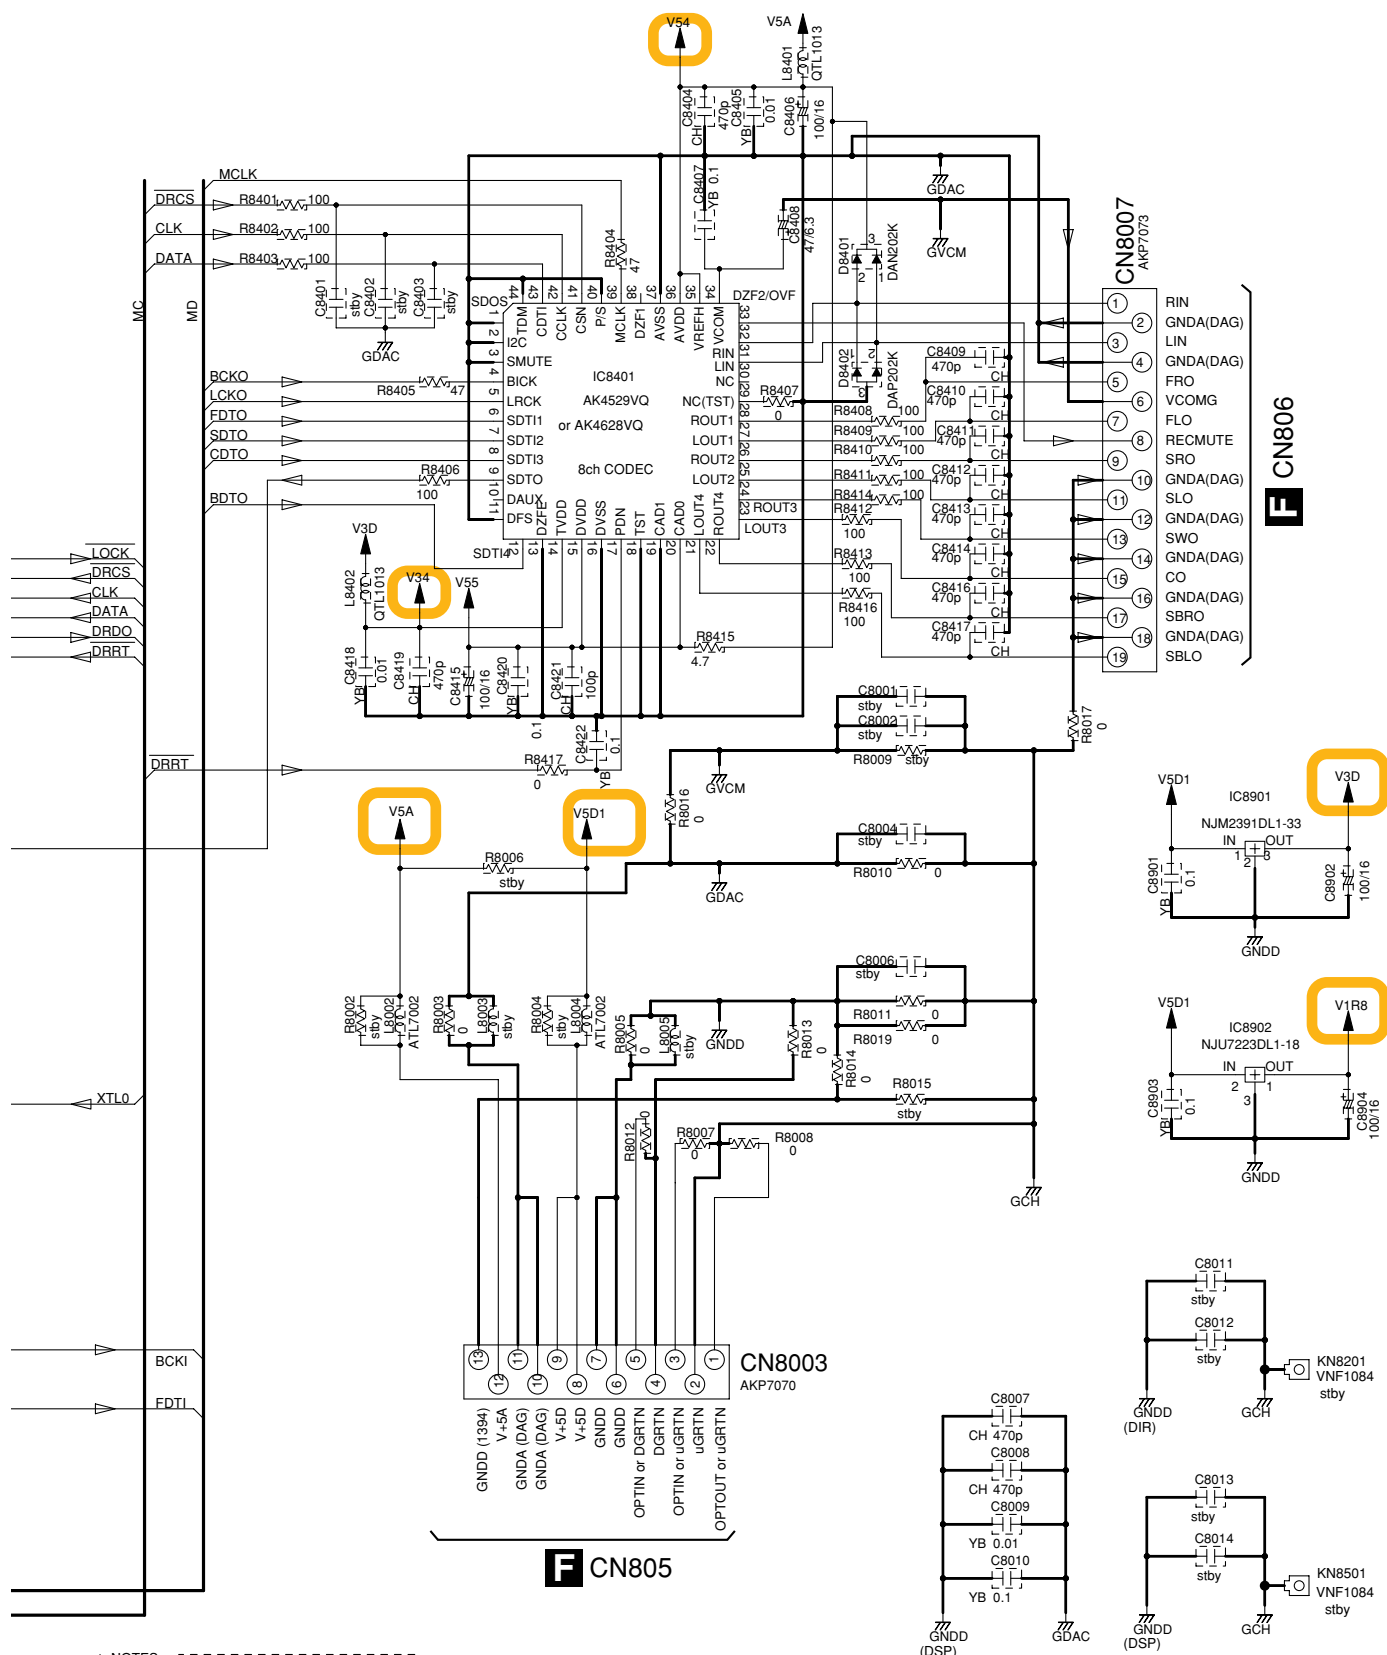

NOTES:

NO INDICATED PARTS IS...

56

CCSRCH****50-T

CKSRYB***50-T

CKSBYB333K16-T
CKSBYB104K16-T


 $\frac{1}{2}$

CEV***M**-T

RS1/16S***J-T

UNLESS OTHERWISE NOTED

3.7 DSP ASSY (2/2)

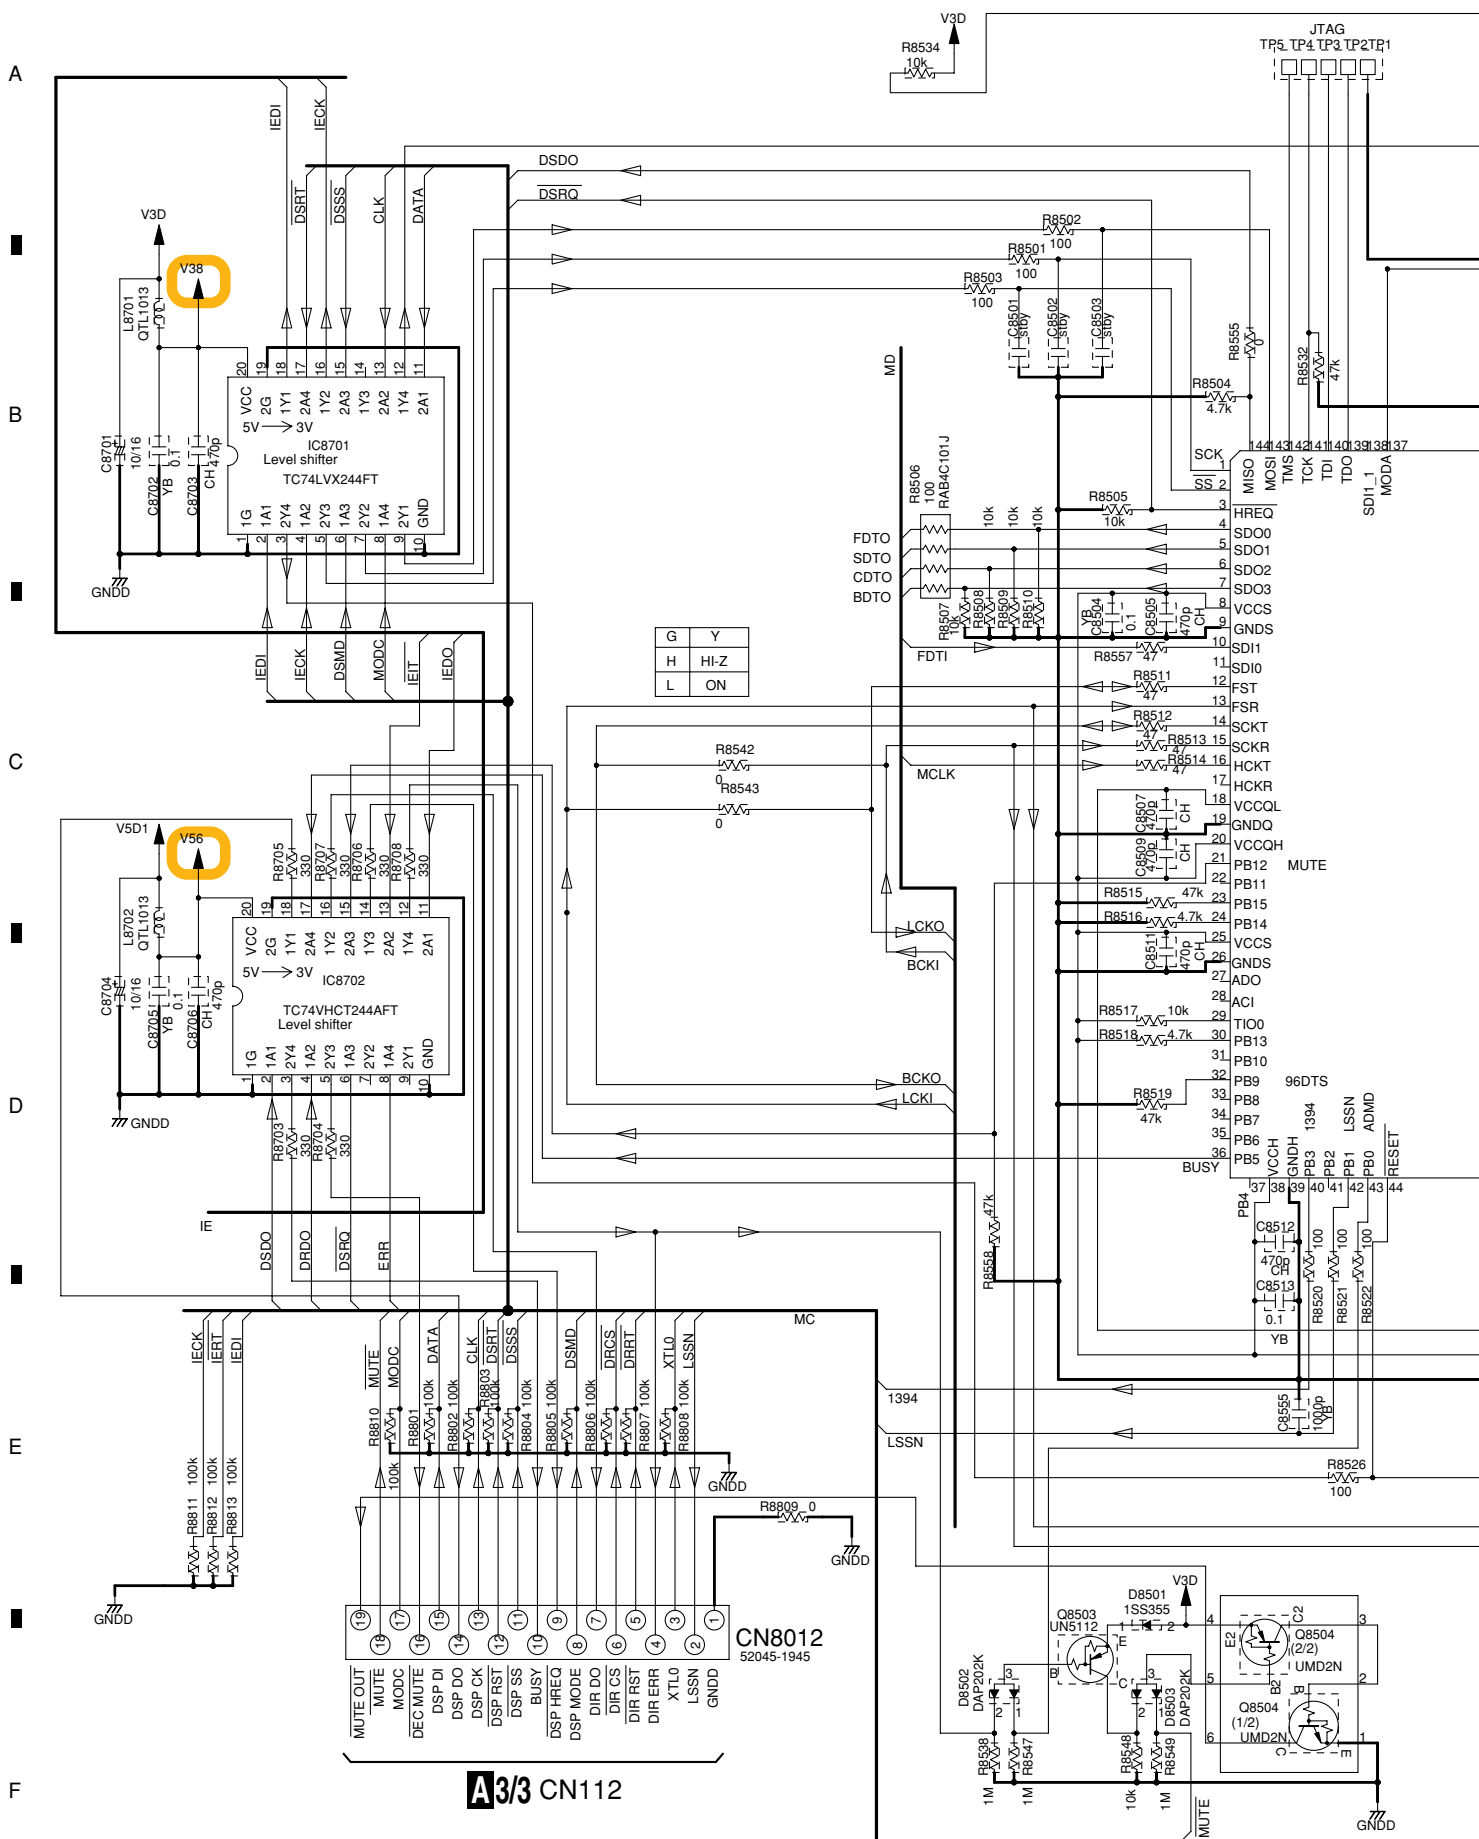


B 2/2

B 2/2 DSP ASSY (AWX8418)

BOOT MODE	A	B	C	D
DECORDER	0	1	0	0
P2ROM	1	0	0	0
UCOM	1	0	1	0

IC8501
DSPD56367PV150 (AX6)

DSP

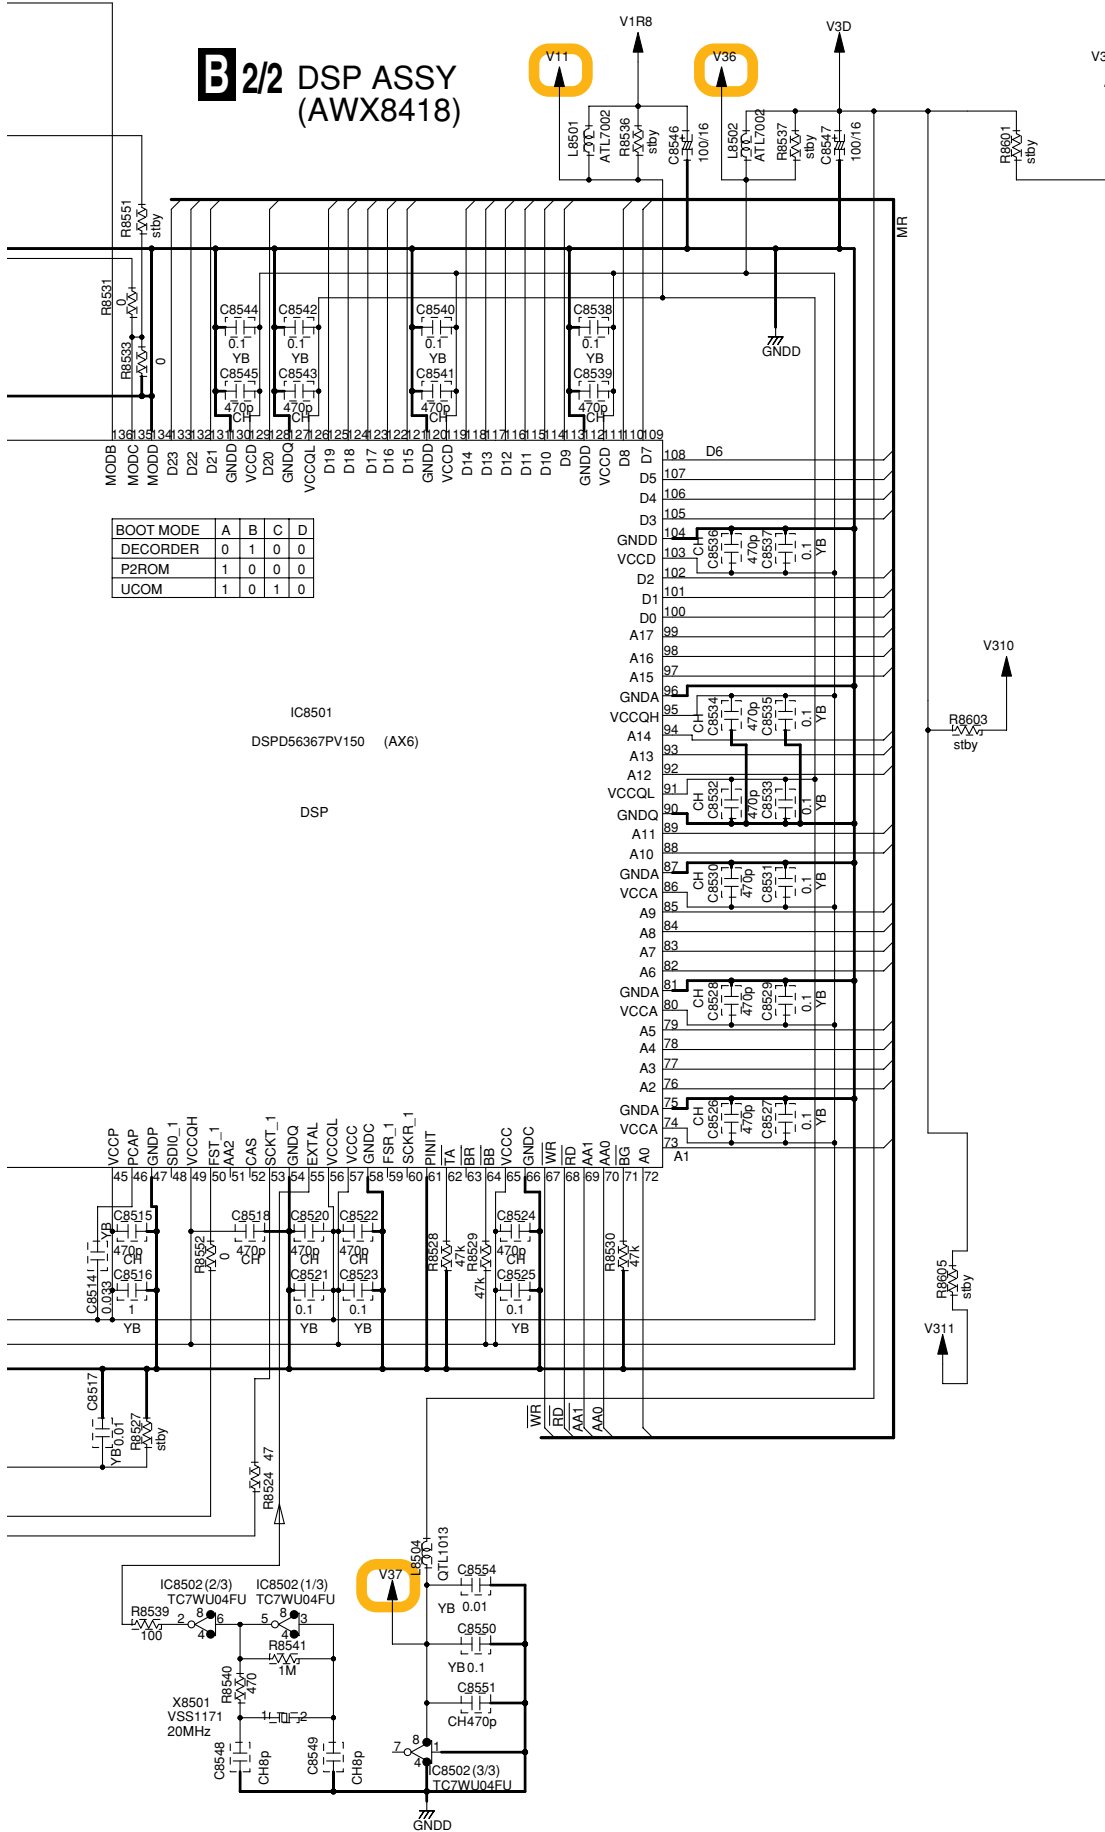

3.8 AMP & PRIMARY (1/2), TRANS2 and TRANS3 ASSYS

C 1/2 AMP&PRIMARY ASSY (XWZ3783)

A


B

C

D

E

F

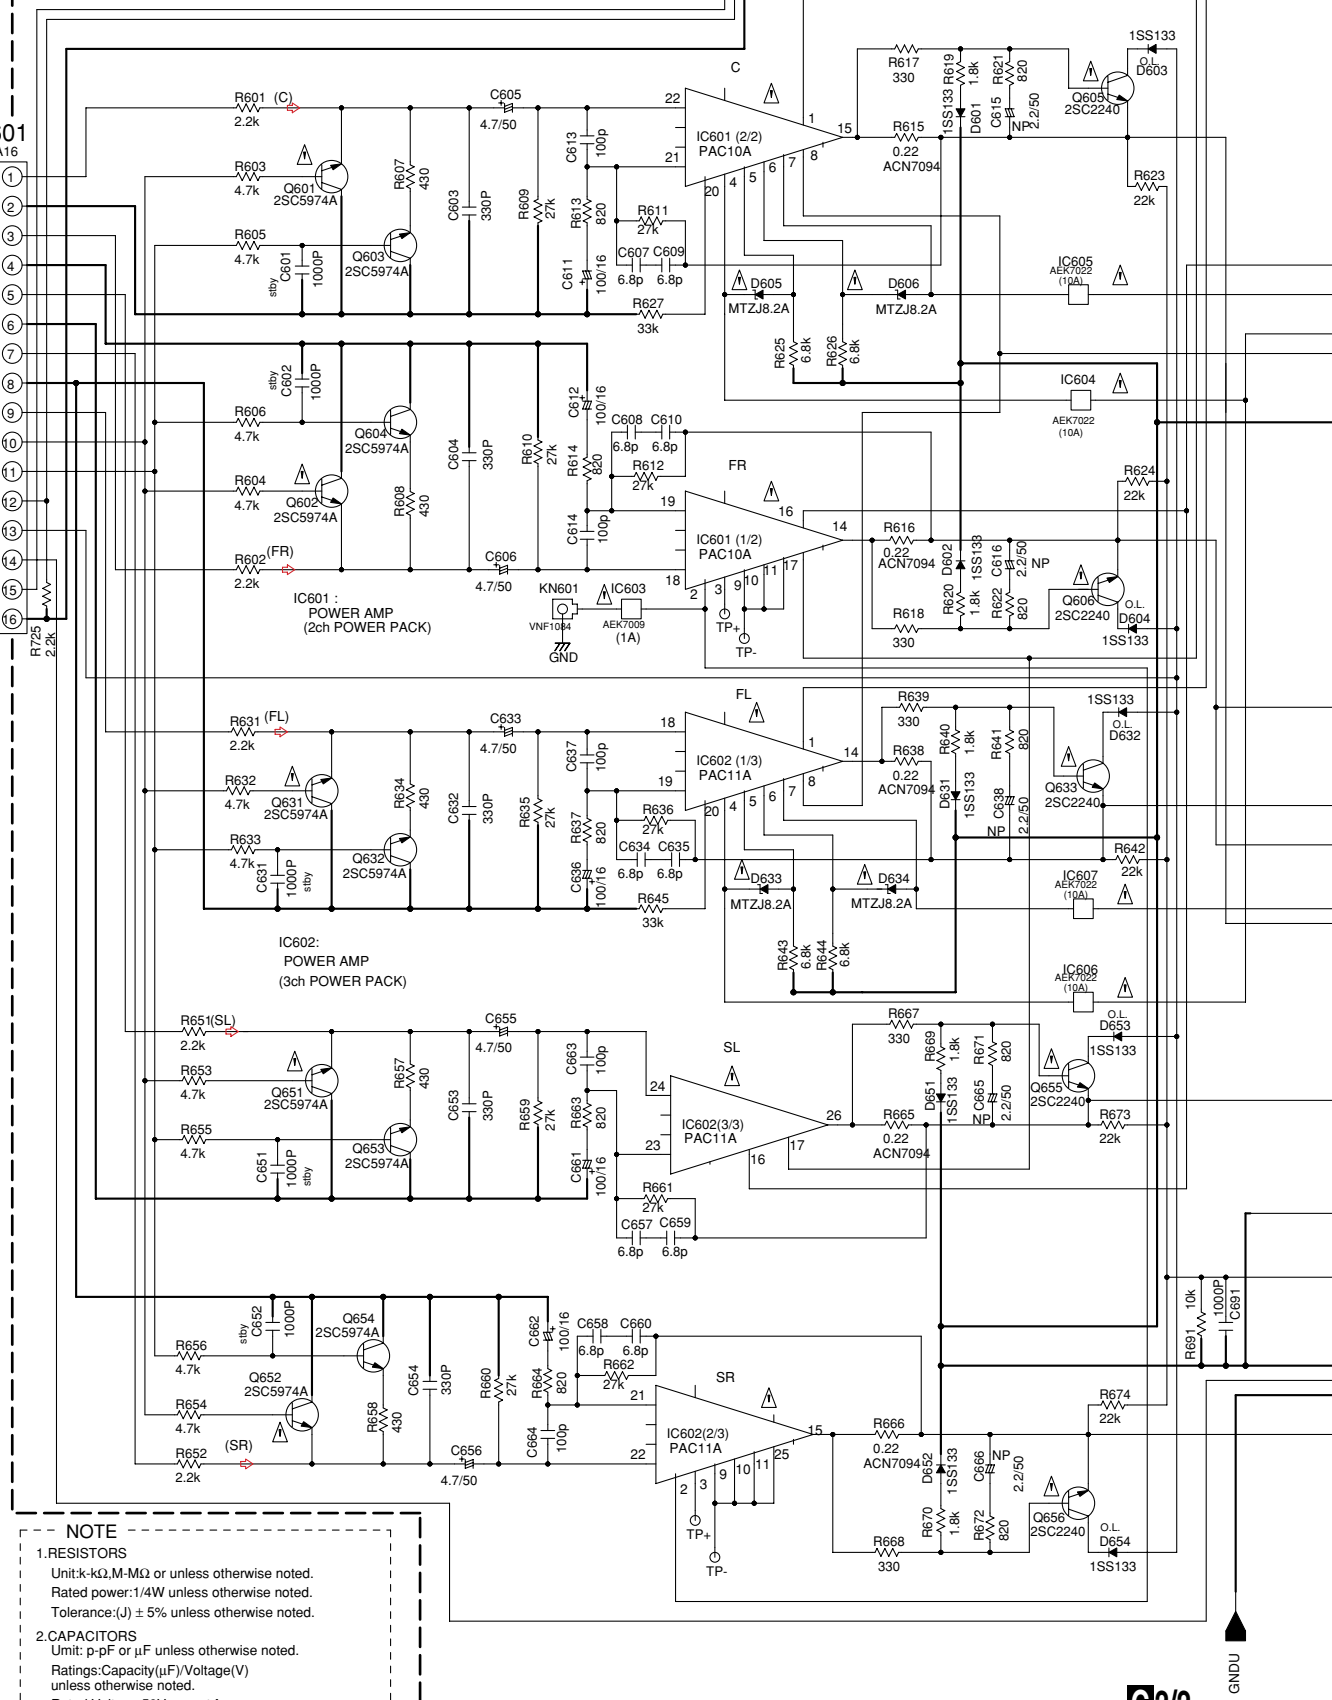


NOTE

- 1.RESISTORS
Unit:k- Ω ,M-M Ω or unless otherwise noted.
Rated power:1/4W unless otherwise noted.
Tolerance:(J) $\pm$ 5% unless otherwise noted.
- 2.CAPACITORS
Unit: p-pF or μ F unless otherwise noted.
Ratings:Capacity(μ F)/Voltage(V)
unless otherwise noted.
Rated Voltage:50V except for
electrolytic capacitors.
- 3.DIODES
Indicated in 1SS133-T





4



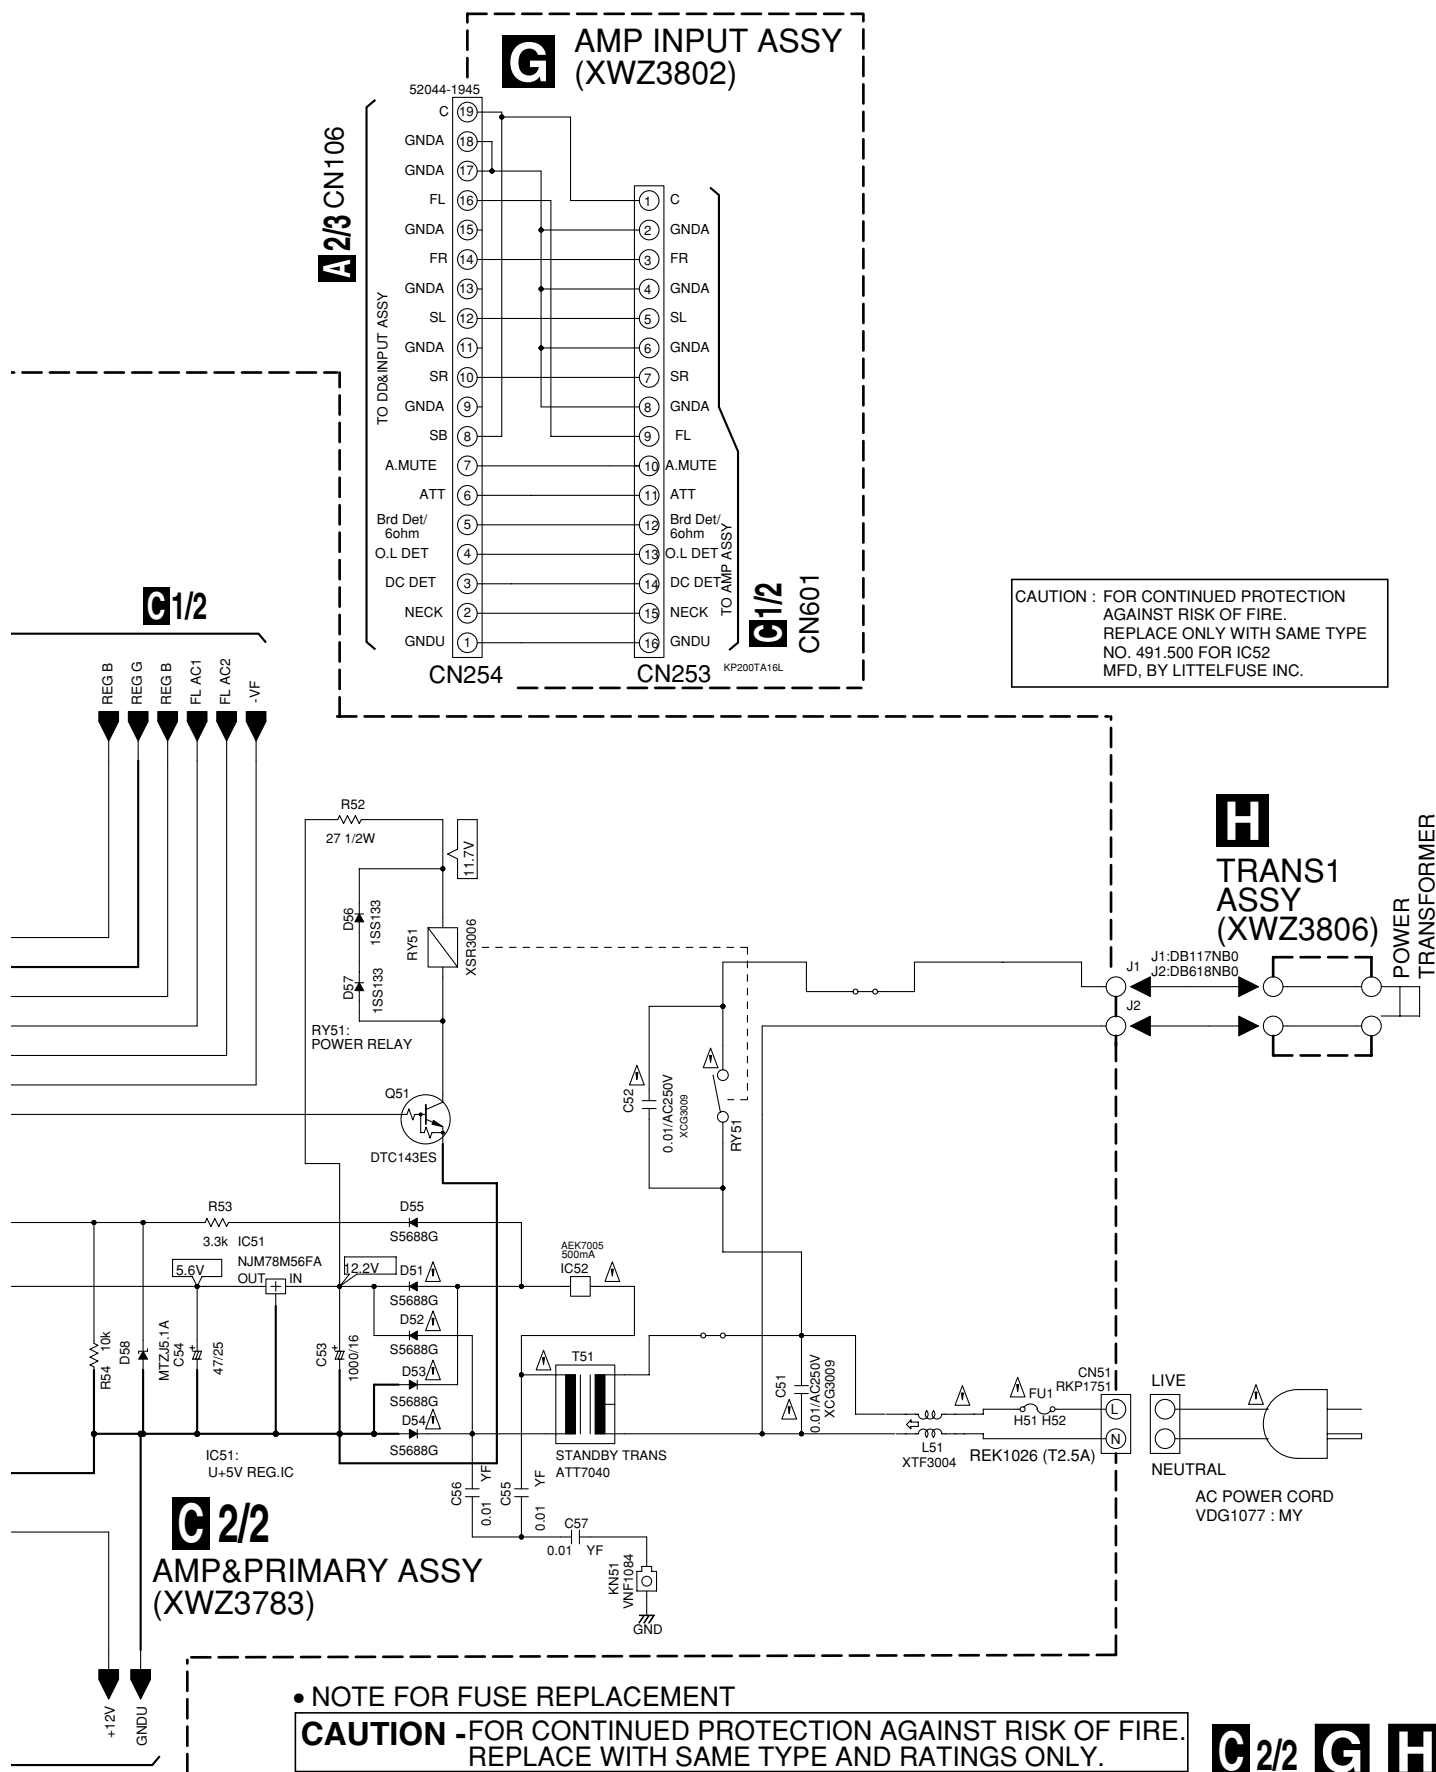

3.10 VIDEO and 5.1CH ASSYS

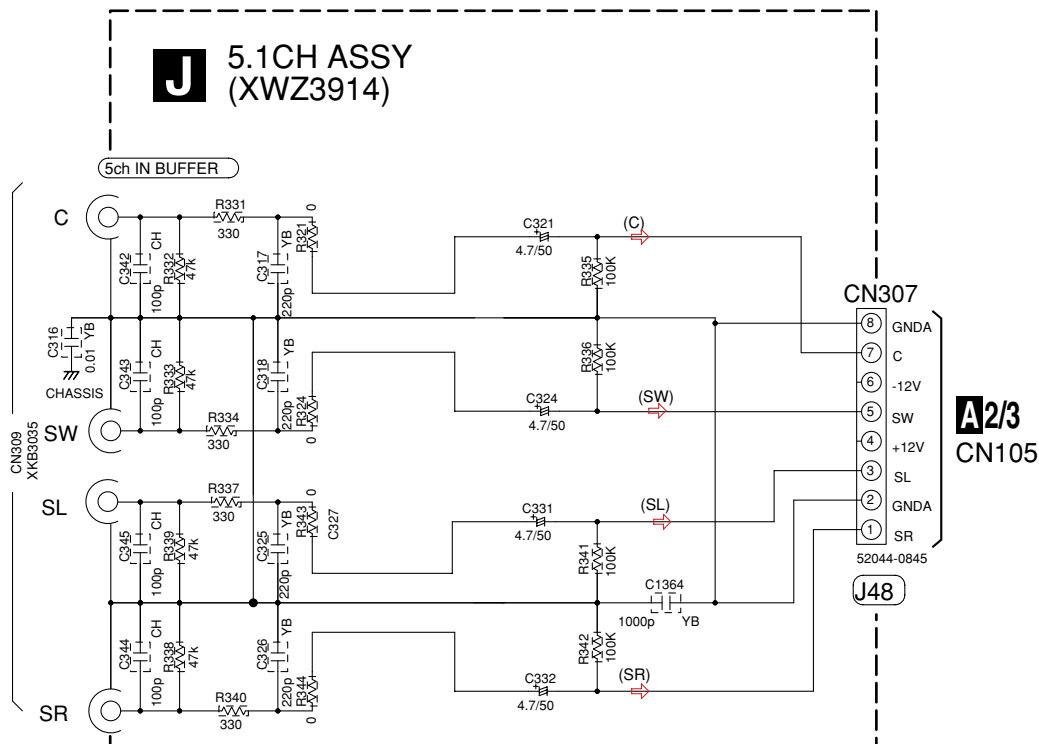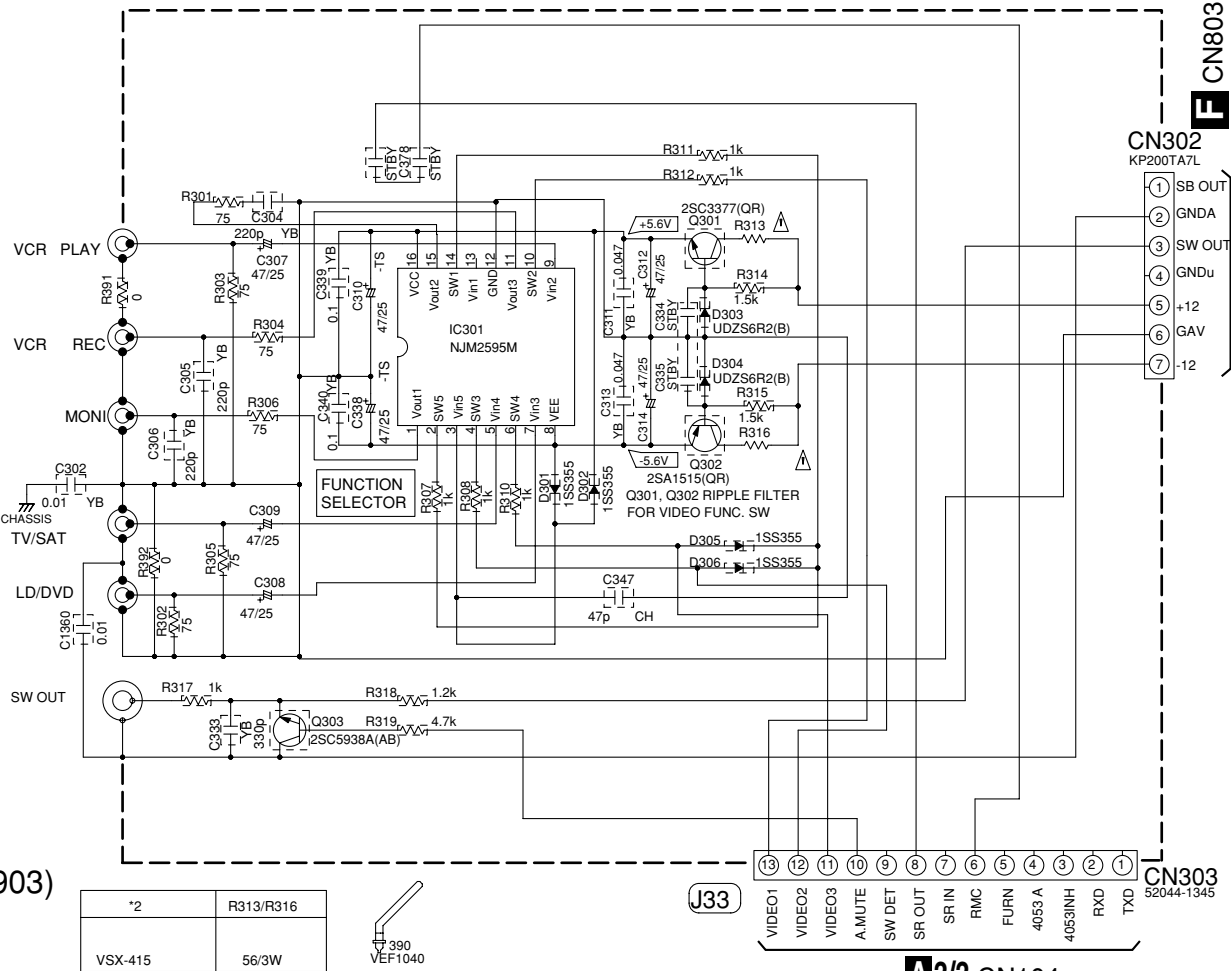

- 1.RESISTORS**
Unit: k-Ω, M-MΩ or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J) ± 5% unless otherwise noted.
- 2.CAPACITORS**
Unit: p-pF or μF unless otherwise noted.
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

■

7

■

8

■

VSX-415-K

3.11 FRONT DISPLAY, R. ENCODER, POWER SW & KEY and F. KEY ASSYS

A

R.ENCODER ASSY (XWZ3920)

R.ENCODER ASSY
S511 : ENTER
S512 : MULTI JOG DIAL
S513 : MASTER VOLUME

B

C

A3/3
CN101



D

E

F

M

FRONT DISPLAY ASSY (XWZ3908)

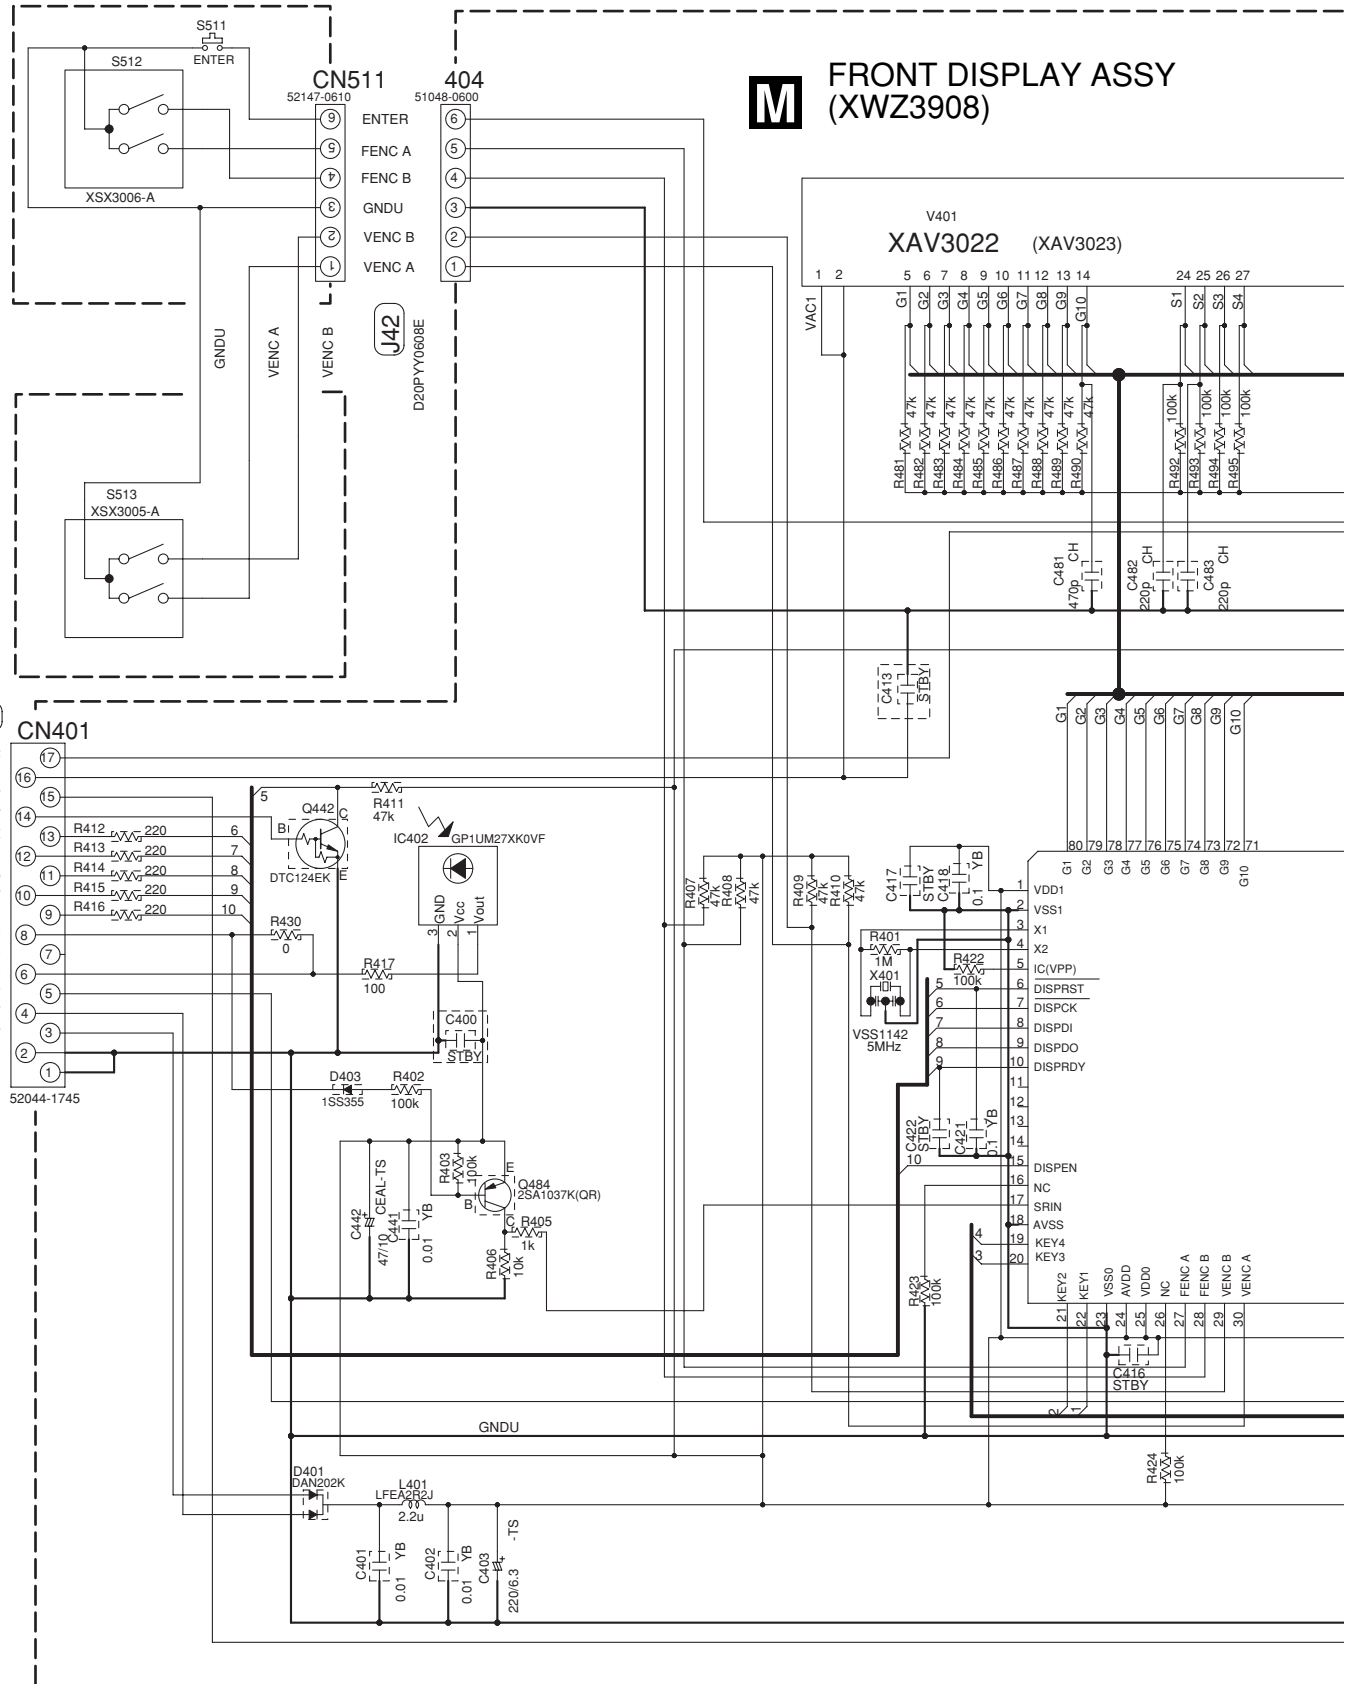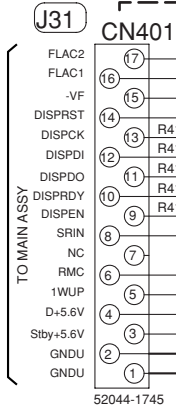

M N



4

34



5678


4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

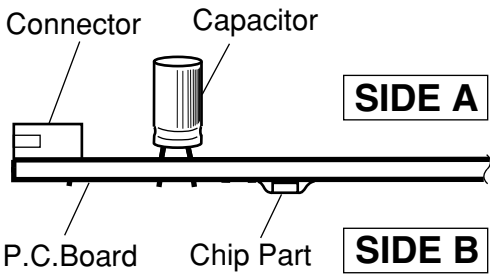


4.1 TRANS2,TRANS3 and TRANS1 ASSYS

SIDE A


SIDE A

TRANS3 ASSY

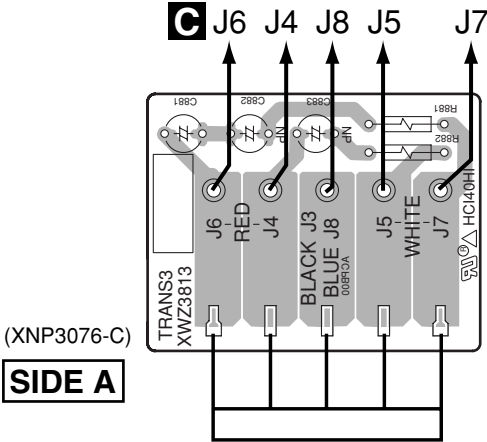

POWER TRANSFORMER

TRANS2 ASSY

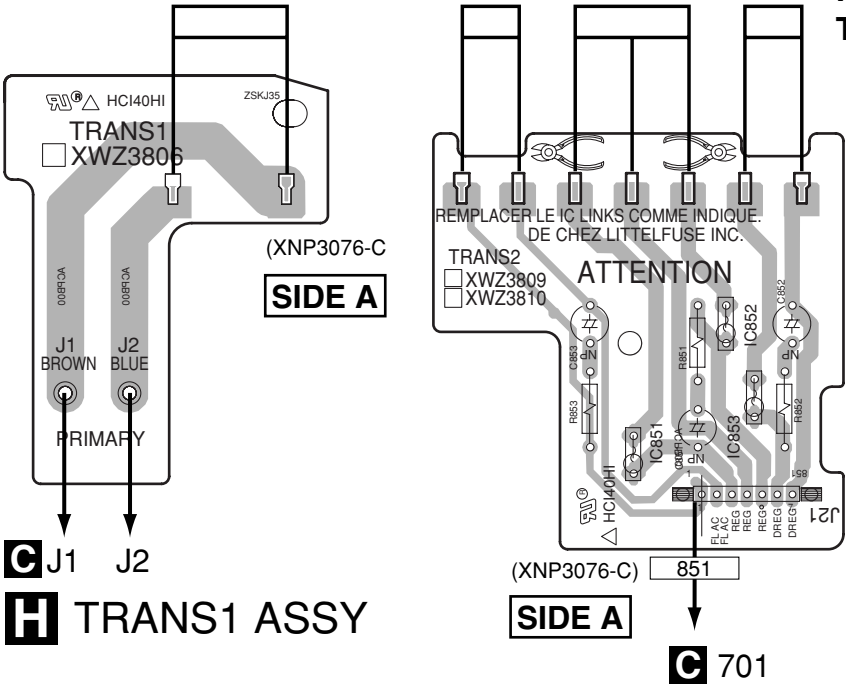

DEH

DEH

4.3 MAIN ASSY

SIDE A

1 2 3 4

A

B

C

D


E


F

A

38

1 2 3 4

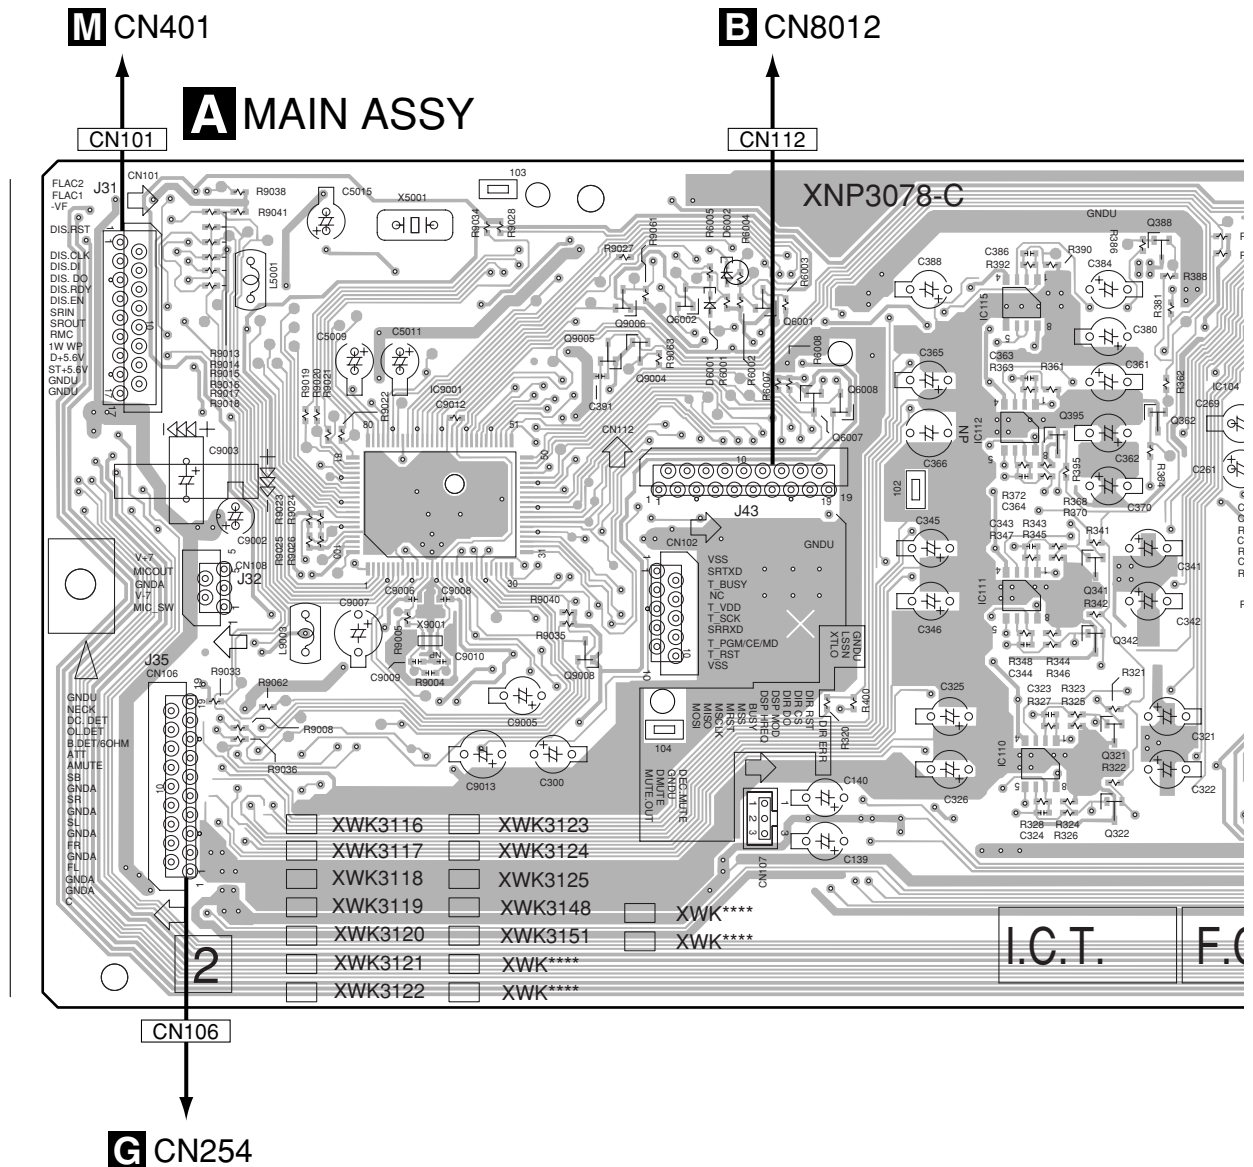

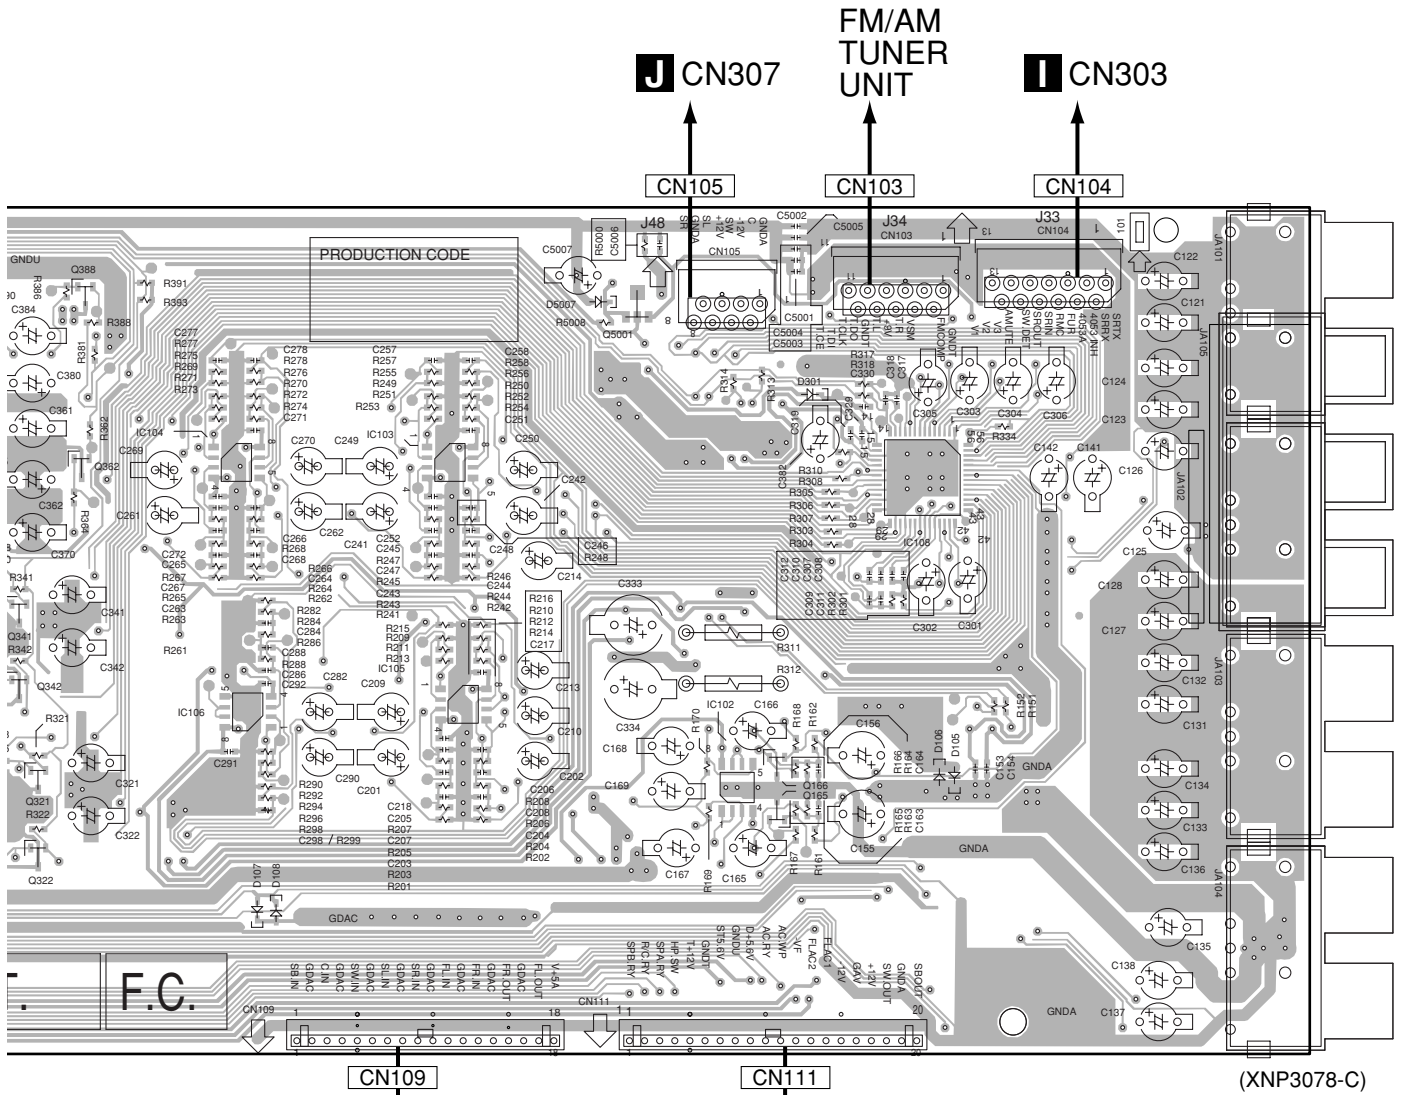

SIDE B

A

B


C


D

E

F

A MAIN ASSY

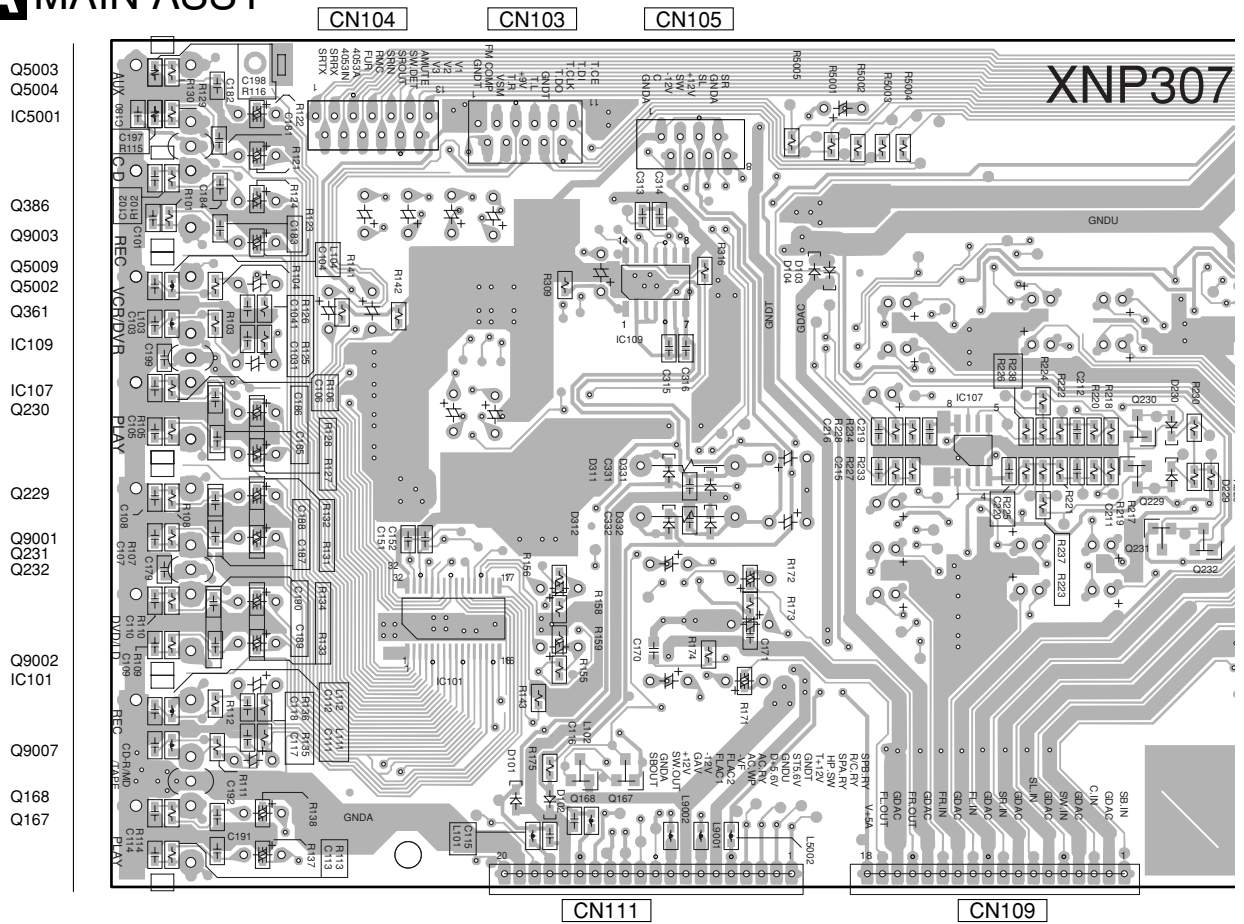

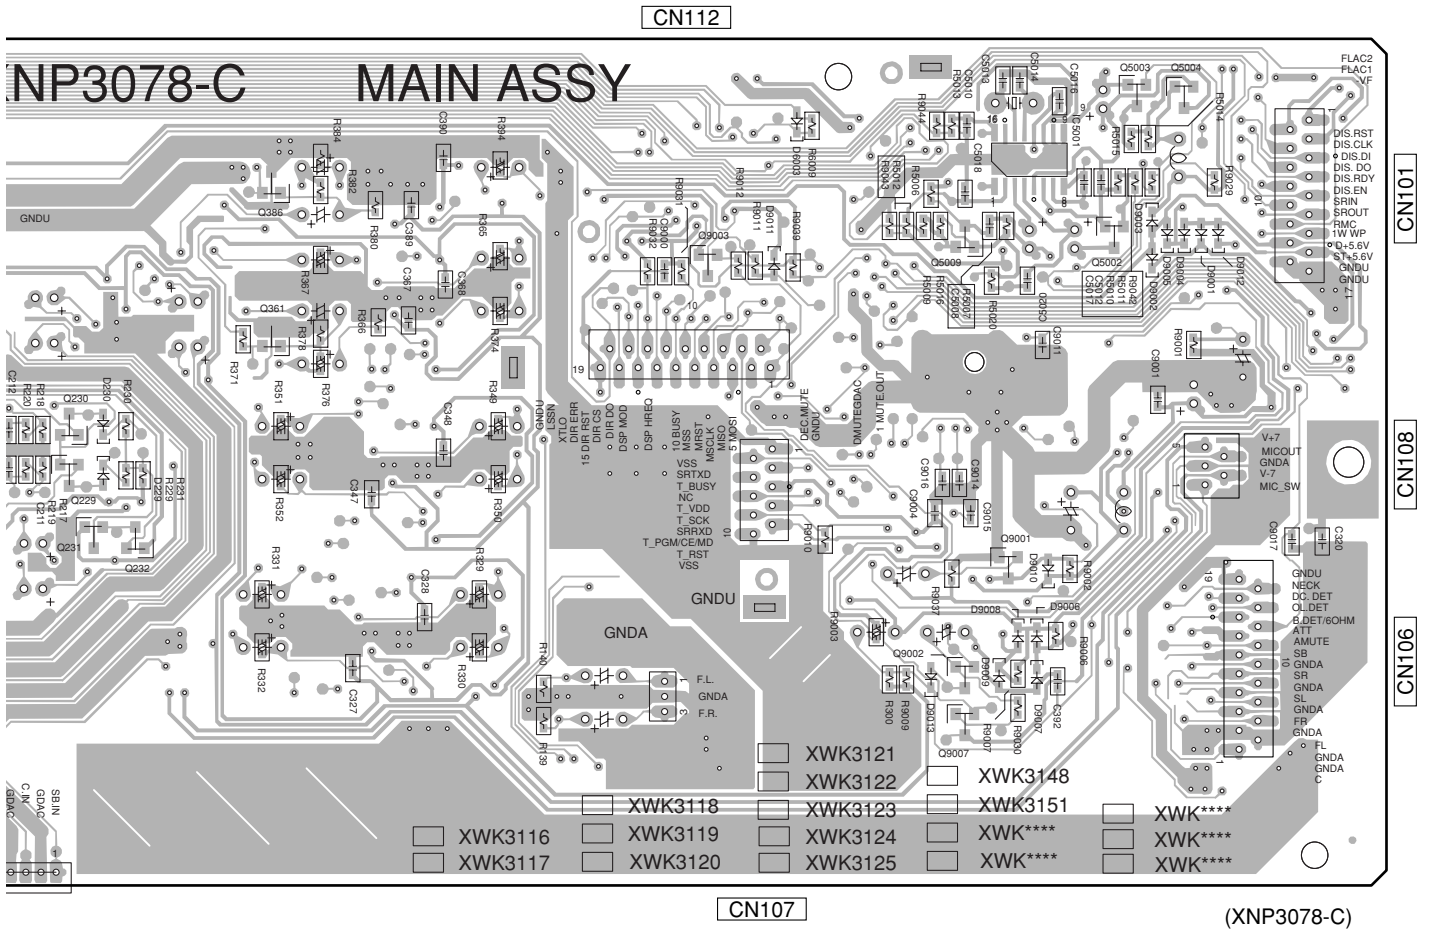


4.4 DSP ASSY

SIDE A

DSP ASSY

SIDE A

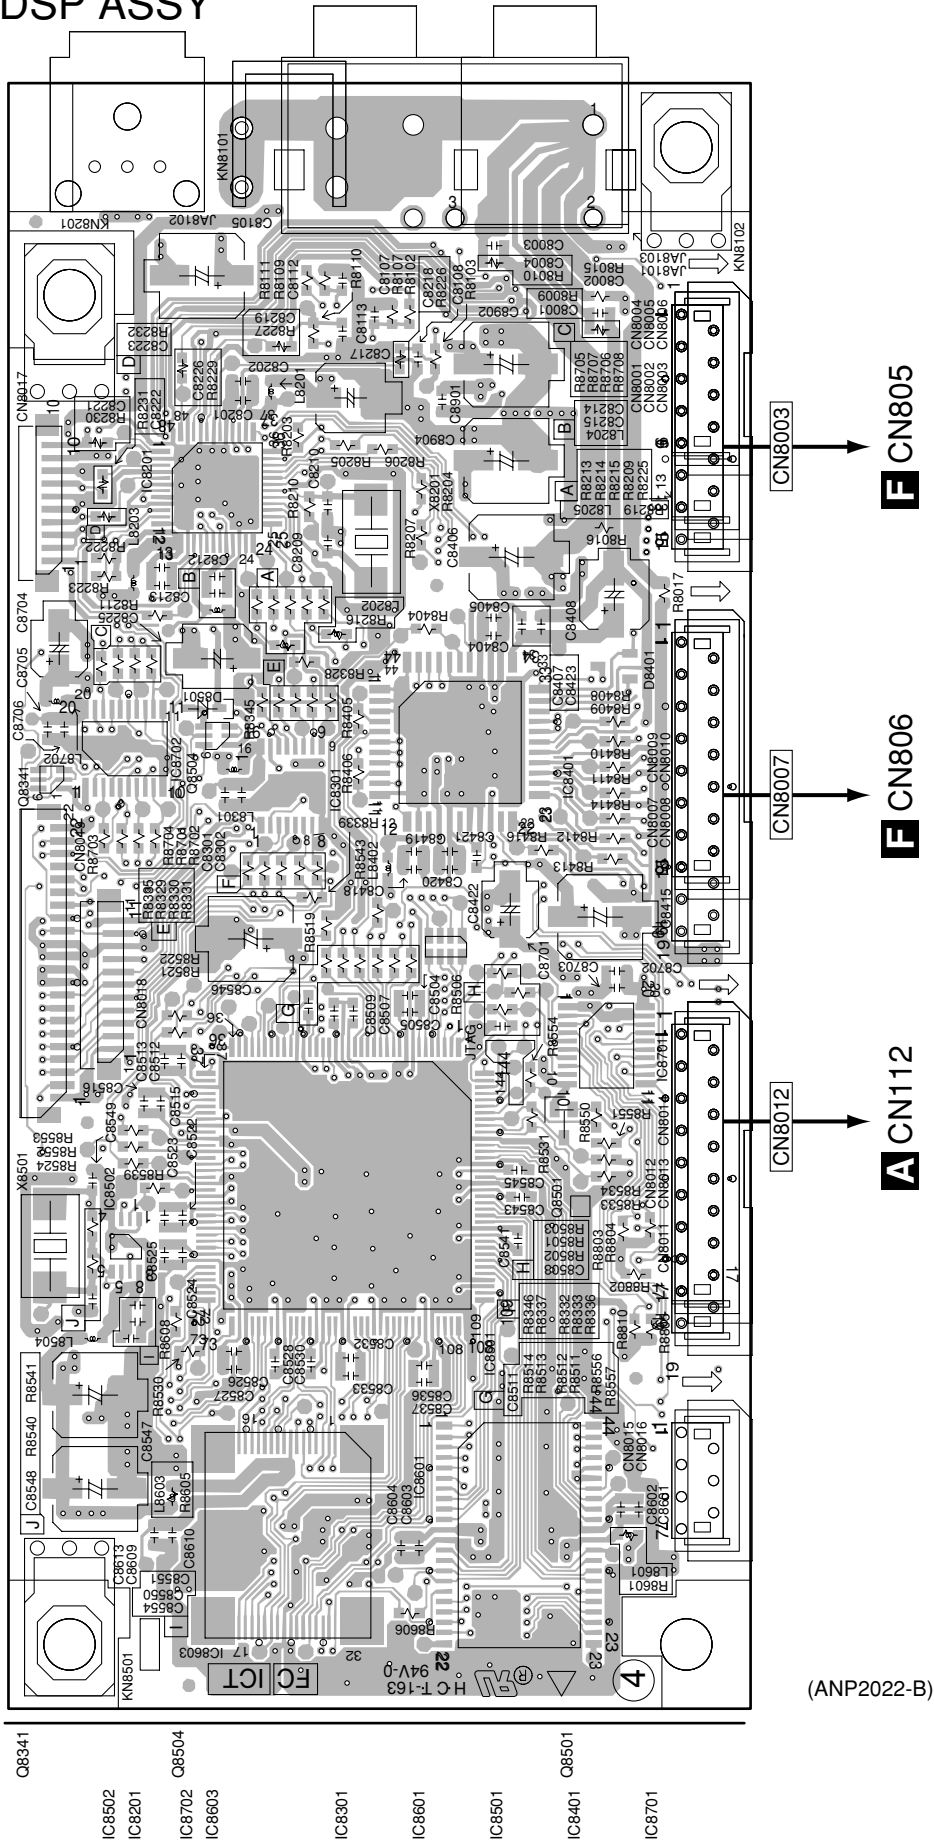

4.5 AMP & PRIMARY and AMP INPUT ASSYS

SIDE A

G AMP INPUT ASSY

C AMP&PRIMARY ASSY

A CN106

E J3

E J6

E J7

IC702 Q704
Q702
Q722
Q703
Q721

IC701

Q701
Q655
Q602
Q604
Q633
Q681
Q697
Q682
Q606
Q605
Q601
Q698
Q696
Q654
Q631
Q652
Q651
Q603
Q632

IC607

IC605

Q653

IC603

IC601

IC602

VSX-415-K



4

F



(XNP3089-A)

VSX-415-K

SIDE B

A





B

C

D

E

F

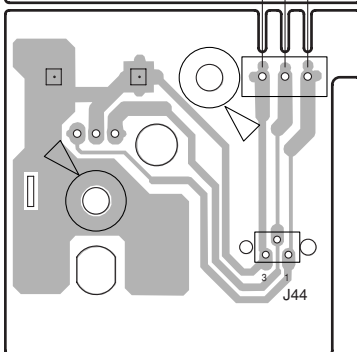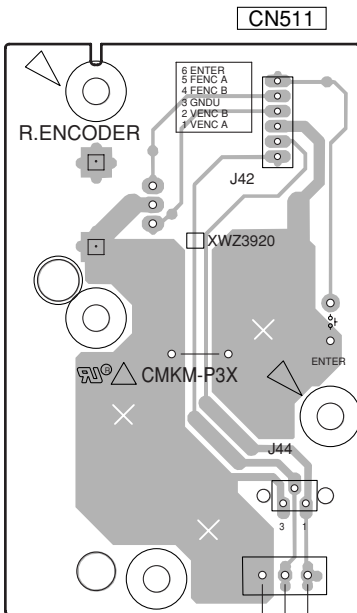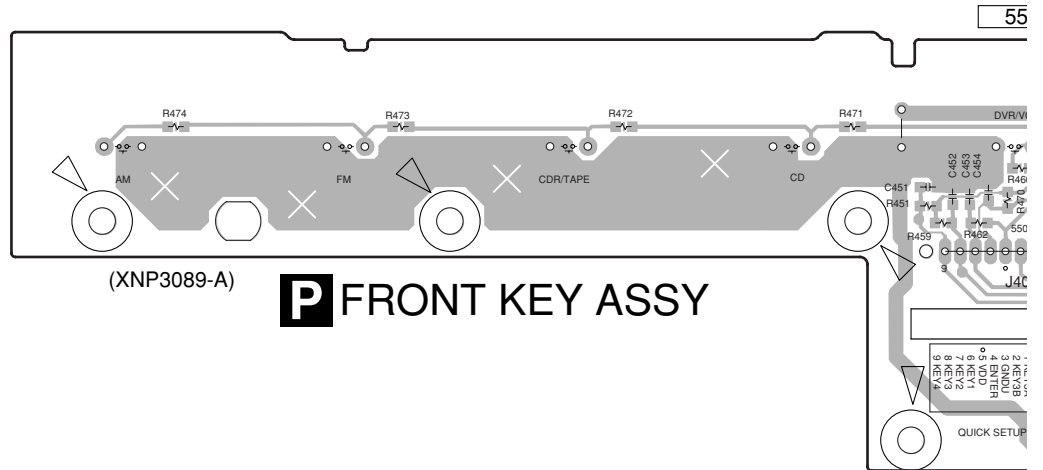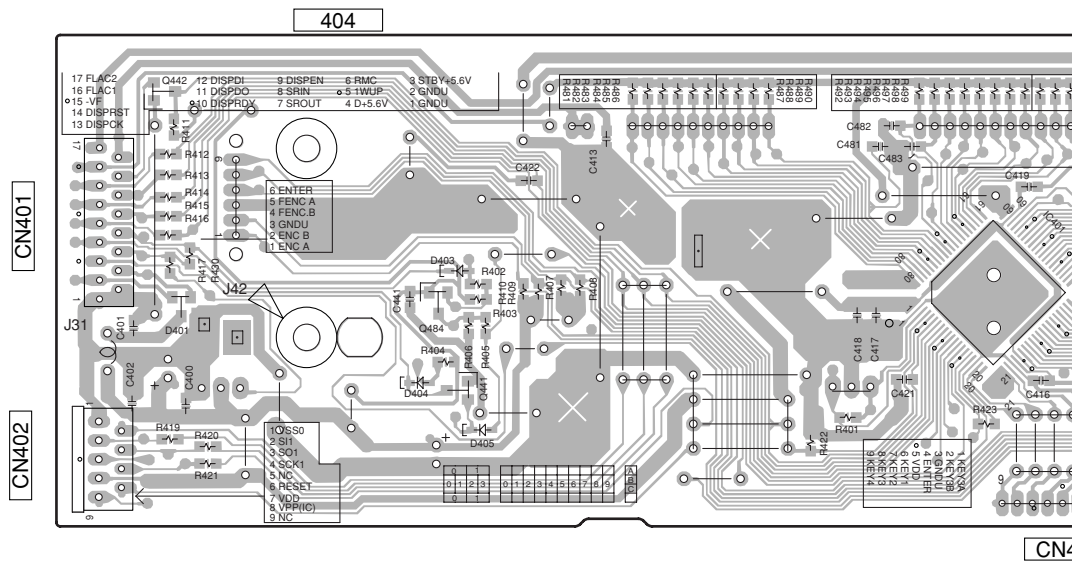

(XNP3089-A)

N R.ENCODER ASSY**M N P**

1 2 3 4


4.7 VIDEO and 5.1CH ASSYS

SIDE A


SIDE A

J 5.1CH ASSY

A CN104

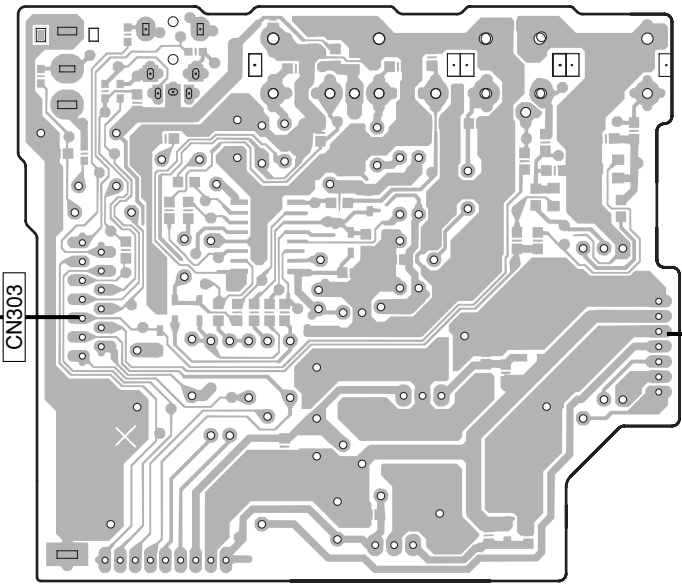

(XNP3089-A)

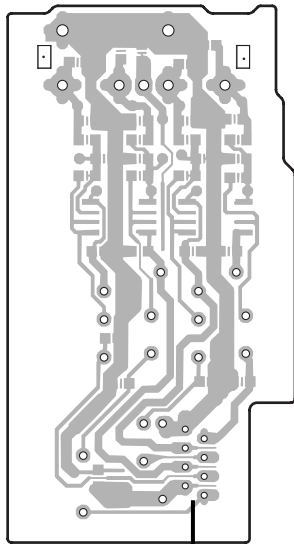

(XNP3089-A)

CN307

A CN105

I VIDEO ASSY

F CN803

CN302

Q302

Q301


I J

I J

SIDE B

SIDE B

J 5.1CH ASSY

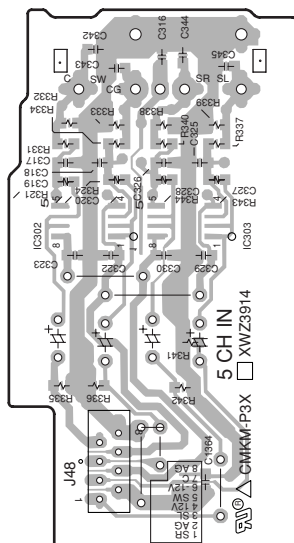


IC302
IC303

CN307

(XNP3089-A)

I VIDEO ASSY

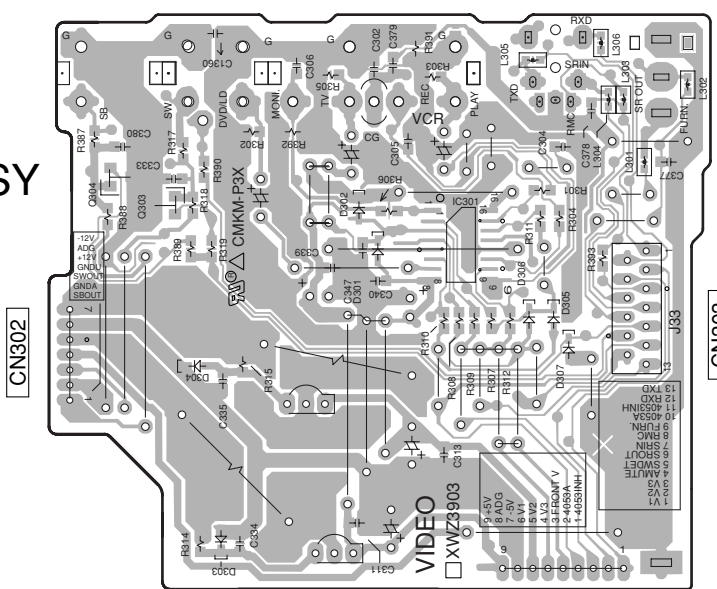

Q304
Q301

CN302

CN303

(XNP3089-A)

I J

I J

4

$$5.62k\,\Omega \rightarrow 562 \times 10^1 \rightarrow 562l \dots\dots\dots RNI/4PC\boxed{5}\boxed{6}\boxed{2}\boxed{l}F$$

5	6	7	8	
Mark No.	Description	Part No.	Mark No.	Description
C333, C334 C9013 C165, C166, C370 C170	CEAT471M10 CEAT471M6R3 CEAT4R7M50 CKSQYB104K16	L8401,L8402,L8504,L8701,L8702 CHIP SOLID INDUCTOR	QTL1013	
C320, C392, C5001, C5016 C9015, C9016 C115, C116, C153, C154, C171 C179, C180, C199, C215-C218 C251, C252, C266, C271, C272	CKSRYB102K50 CKSRYB102K50 CKSRYB103K50 CKSRYB103K50 CKSRYB103K50	CAPACITORS C8209,C8210 C8421 C8107,C8112 C8007,C8008,C8109,C8201,C8212 C8214,C8404,C8409-C8414	CCSRCH100D50 CCSRCH101J50 CCSRCH470J50 CCSRCH471J50 CCSRCH471J50	A
C319, C327-C330, C347, C348 C367, C368, C5002, C5008, C9004 C9008, C9017 C219, C220, C309-C312 C5003, C9006	CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB104K16 CKSRYB105K10	C8416,C8417,C8419,C8505,C8507 C8509,C8511,C8512,C8515,C8518 C8520,C8522,C8524,C8526,C8528 C8530,C8532,C8534,C8536,C8539 C8541,C8543,C8545,C8551,C8703	CCSRCH471J50 CCSRCH471J50 CCSRCH471J50 CCSRCH471J50 CCSRCH471J50	
C264 C257, C258, C277, C278 C307, C308, C364, C5020 C9011, C9014 C268	CKSRYB223K25 CKSRYB472K50 CKSRYB472K50 CKSRYB473K16 CKSRYB562K50	C8706 C8548,C8549 C8701,C8704 C8105,C8406,C8415,C8546,C8547 C8902,C8904	CCSRCH471J50 CCSRCH8R0D50 CEVW100M16 CEVW101M16 CEVW101M16	B
C391	CKSRYF104Z16	C8217,C8225,C8408 C8204,C8555 C8009,C8104,C8114,C8405,C8418 C8517,C8554 C8010,C8115,C8202,C8207,C8213	CEVW470M6R3 CKSRYB102K50 CKSRYB103K50 CKSRYB103K50 CKSRYB104K16	
RESISTORS ⚠ R171, R172 ⚠ R173, R174 ⚠ R311, R312 Other Resistors	RS1/16S470J RS1/16S472J RS1LMF101J RS1/16S####J	C8215,C8407,C8420,C8422,C8504 C8513,C8521,C8523,C8525,C8527 C8529,C8531,C8533,C8535 C8537,C8538,C8540,C8542,C8544 C8550,C8702,C8705,C8901,C8903	CKSRYB104K16 CKSRYB104K16 CKSRYB104K16 CKSRYB104K16 CKSRYB104K16	C
OTHERS X5001 (4.332MHz) X9001 (15.7MHz) CN105 8P Connector CN103 11P Connector CN104 13P Connector	ASS7004 XSS3004 52044-0845 52044-1145 52044-1345	C8110,C8516 C8514 C8203	CKSRYB105K6R3 CKSRYB333K16 CKSRYB473K50	
CN101 17P Connector CN106, CN112 19P Connector CN109 18P Socket CN111 20P Socket JA103, JA104	52045-1745 52045-1945 KP200TA18L KP200TA20L XKB3017	RESISTORS R8506 R8201 Other Resistors	RAB4C101J RS1/16S1802F RS1/16S####J	D
JA105 PCB Binder	XKB3037	OTHERS CN8012 19P CONNECTOR JA8101 2P PIN JACK JA8102 OPT. LINK IN CN8017 10P CONNECTOR CN8003 13P SOCKET	52045-1945 AKB7131 GP1FA513RZB VKN1414 XKP3077	
B DSP ASSY SEMICONDUCTORS IC8201 IC8401 IC8501 IC8901 IC8902	AK4114VQ AK4628VQE DSPD56367PV150 NJM2391DL1-33 NJU7223DL1-18	CN8007 19P SOCKET X8501 CRYSTAL RESONATOR (20MHz) X8201 CRYSTAL RESONATOR (24.576MHz)	XKP3080 VSS1171 XSS3003	E
IC8101 IC8701 IC8702 IC8502 Q8504	TC74HCU04AF TC74LVX244FT TC74VHCT244AFT TC7WU04FU UMD2N	C AMP & PRIMARY ASSY SEMICONDUCTORS ⚠ IC52 ⚠ IC603 ⚠ IC604-IC607 ⚠ IC701, IC702 IC51	AEK7005 AEK7009 AEK7022 ICP-N10 NJM78M56FA	
Q8503 D8501 D8401 D8402,D8502,D8503	UN5112 1SS355 DAN202K DAP202K	⚠ IC601 ⚠ IC602 Q703, Q721 Q702 Q691, Q692	PAC010A PAC011A 2SA1145 2SA2005 2SC1740S	F
COILS AND FILTERS L8002,L8004,L8501,L8502 CHIP SOLID INDUCTOR L8101-L8104,L8201,L8203,L8204	ATL7002 QTL1013			

Mark No. Description**Part No.**

Q704, Q722
Q605, Q606, Q633, Q655, Q656
Q701
Q601-Q604, Q631, Q632
Q651-Q654

2SC1845
2SC2240
2SC5511
2SC5974A
2SC5974A

Q51
D56, D57, D601-D604
D631, D632, D651-D654
D751, D752, D755, D756
⚠ D701, D702

DTC143ES
1SS133
1SS133
1SS133
D5SBA20

D711
D58, D712
D605, D606, D633, D634
⚠ D51-D55, D721-D724

MTZJ22D
MTZJ5.1B
MTZJ8.2A
S5688

COILS AND FILTERS

L751-L753, L761, L762 Coil
L51 Line Filter

ATH1004
XTF3004

SWITCHES AND RELAYS

RY51
RY751-RY753

XSR3006
XSR3007

CAPACITORS

C707, C708 (0.01/AC250V)
C607-C610, C634, C635
C657-C660
C615, C616, C638, C665, C666
C775, C776

ACG1005
CCPUCH6R8K50
CCPUCH6R8K50
CEANP2R2M50
CEANP470M50

C712
C611, C612, C636, C661, C662
C711
C53
C692

CEAT101M10
CEAT101M16
CEAT101M35
CEAT102M16
CEAT221M10

C54
C605, C606, C633, C655, C656
C705, C706
C613, C614, C637, C663, C664
C691, C769, C770

CEAT470M25
CEAT4R7M50
CEHAT100M2A
CKPUYB101K50
CKPUYB102K50

C603, C604, C632, C653, C654
C55-C57
C751-C756, C761-C764
C757-C759, C765, C766
C51, C52(10000pF/AC250V)

CKPUYB331K50
CKPUYF103Z25
CQ MBA224J50
CQ MBA472J50
XCG3009

C703, C704 (3300uF/42V)
C701, C702 (4700uF/63V)

XCH3012
XCH3016

RESISTORS

⚠ R615, R616, R638, R665, R666
(0.22 /5W)
⚠ R52
⚠ R751, R752, R755, R761, R762
⚠ R753, R754, R756, R763, R764
⚠ R711

ACN7094
RD1/2PM270J
RD1/4PUF101J
RS1LMF4R7J
RS2LMF332J

Other Resistors

RD1/4PU###J

OTHERS

CN53 23P Connector
CN702 6P Jumper Connector
H51, H52 Fuse Clip
⚠ T51 Standby Transformer
CN601 16P Plug

52045-2345
52147-0610
AKR7001
ATT7040
KM200TA16

Mark No. Description**Part No.**

CN51 AC Cord Socket
KN51, KN601 Earth Metal Fitting
CN751 6P Speaker Terminal
CN754 4P Speaker Terminal
701 7P Cable Holder

RKP1751
VNF1084
XKE3018
XKE3019
XKP3047

**D TRANS2 ASSY
SEMICONDUCTORS**

⚠ IC851-IC853

AEK7012

OTHERS

851

XKP3047

E TRANS3 ASSY

TRANS3 ASSY has no service part.

**F REGULATOR ASSY
SEMICONDUCTORS**

IC803, IC804
IC801, IC805
IC806
IC802
Q801, Q803

NJM78M05FA
NJM78M12FA
NJM78M56FA
NJM79M12FA
DTA124ES

Q802, Q804
D809-D811

⚠ D801-D804, D821, D822

DTC114ES
MTZJ6.2B
S5688G

CAPACITORS

C811, C815
C813
C801, C802
C809
C808

CEAT101M10
CEAT101M16
CEAT222M25
CEAT472M16
CEHAT101M10

C805, C806
C803, C804, C807, C810, C812
C814

CEHAT101M16
CKPUYF103Z25
CKPUYF103Z25

RESISTORS

R801

RS3LMF331J

OTHERS

CN801 23P Connector
CN805 13P Plug
CN806 19P Plug
CN804 18P Plug
CN802 20P Plug

52045-2345
AKP7059
AKP7062
KM200TA18
KM200TA20

CN803 7P Plug

KM200TA7

**G AMP INPUT ASSY
OTHERS**

CN254 19P Connector
CN253 16P Socket

52044-1945
KP200TA16L

H TRANS1 ASSY

TRANS1 ASSY has no service part.

5	6	7	8		
Mark No.	Description	Part No.	Mark No.	Description	Part No.
I	VIDEO ASSY		C415		CKSRYB102K50
	SEMICONDUCTORS		C401, C402, C410, C411, C419		CKSRYB103K50
	IC301	NJM2595M	C441		CKSRYB103K50
	Q302	2SA1515	C418, C421		CKSRYB104K16
	Q301	2SC3377	C420		XCH3011
	Q303	2SC5938A			
	D301, D302, D305, D306	1SS355	RESISTORS		
			All Resistors		RS1/16S###J
	D303, D304	UDZS6R2(B)	OTHERS		
			404 6P CABLE HOLDER		51048-0600
J	CAPACITORS		CN401 17P CONNECTOR		52044-1745
	C347	CCSRCH470J50	CN471 4PJUMPER CONNECTOR		52151-0410
	C307—C310, C312, C314, C338	CEAT470M25	CN450 9PJUMPER CONNECTOR		52151-0910
	C1360,C302	CKSRYB103K50	CN402 FFC CONNECTOR 9P		52492-0920
	C339, C340	CKSRYB104K25			
	C304—C306	CKSRYB221K50			
			V401 FL TUBE		XAV3022
	C333	CKSRYB331K50	X401 CERAMIC RESONATOR		VSS1142
	C311, C313	CKSRYB473K25	(5MHZ)		
K	RESISTORS		N	R.ENCODER ASSY	
	⚠ R313, R316	RS3LMF560J	SWITCHES AND RELAYS		
	Other Resistors	RS1/16S###J	S511		VSG1024
			S513		XSX3005
	OTHERS		S512		XSX3006
	CN303 13P CONNECTOR	52044-1345	OTHERS		
	CN302 7P SOCKET	KP200TA7L	CN511 7P CABLE HODER		52147-0610
	390 PCB BINDER	VEF1040			
	JA308 6P PIN JACK	XKB3049			
L	5.1CH ASSY		O	POWER SW & KEY ASSY	
	CAPACITORS		SWITCHES AND RELAYS		
	C342—C345	CCSRCH101J50	S501—S505		VSG1024
	C321, C324, C331, C332	CEAT4R7M50			
	C1364	CKSRYB102K50	RESISTORS		
	C316	CKSRYB103K50	All Resistors		RS1/16S###J
	C317, C318, C325, C326	CKSRYB221K50	OTHERS		
			501 4P CABLE HOLDER		51048-0400
	RESISTORS				
	All Resistors	RS1/16S###J			
M	FRONT DISPLAY ASSY		P	FRONT KEY ASSY	
	SEMICONDUCTORS		SWITCHES AND RELAYS		
	IC402	GP1UM27XK0VF	S451—S470		VSG1024
	IC401	PE5420A			
	Q484	2SA1037K	CAPACITORS		
	Q442	DTC124EK	C451—C454		CKSRYB102K50
	D403	1SS355	RESISTORS		
			All Resistors		RS1/16S###J
	D401	DAN202K	OTHERS		
			550 9P CABLE HOLDER		51048-0900
N	COILS AND FILTERS		Q	H.P. ASSY	
	L401	LFEA2R2J	SEMICONDUCTORS		
			Q1551,Q1552		2SC5938A
	CAPACITORS		CAPACITORS		
	C482, C483	CCSRCH221J50	C1554,C1557		CCSRCH471J50
	C481	CCSRCH471J50	C1553,C1556		CKSRYB103K50
	C442	CEAL470M10	C1555,C1558		CKSRYB104K16
	C403	CEAT221M6R3	C1551,C1552		CKSRYB223K50
	C412	CEAT470M50			

Mark No.	Description	Part No.
RESISTORS		
⚠ R1553,R1554		RS1LMF151J
⚠ R1551,R1552		RS2LMF331J
A Other Resistors		RS1/16S###J
OTHERS		
1551 6P CABLE HOLDER		51048-0600
JA1551 HEADPHONE JACK		RKB1014
KN1551 WRAPPING TERMINAL		VNF1084

FM/AM TUNER UNIT

FM/AM TUNER UNIT has no service part.

B

C

D

E

F

6. ADJUSTMENT

There is no information to be shown in this chapter.


7.1.1 DISASSEMBLY

■ Diagnosis



4 Pull up

Rear Panel

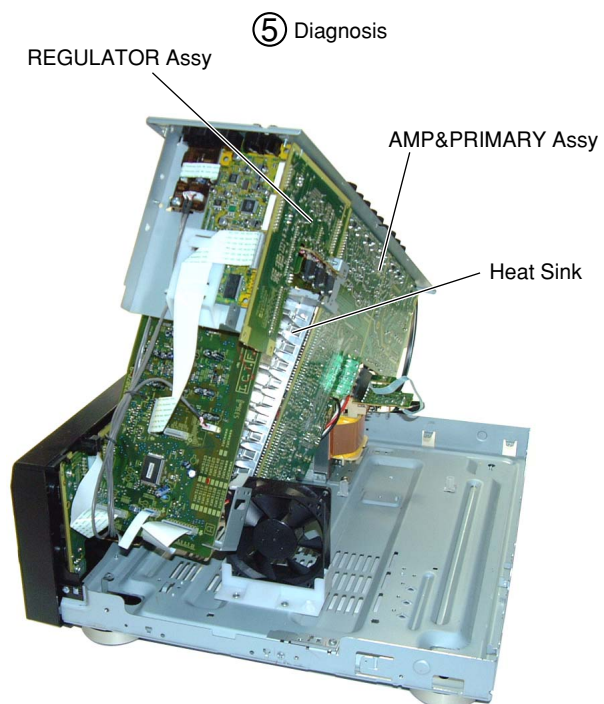

57

A


B

C

D

E

F

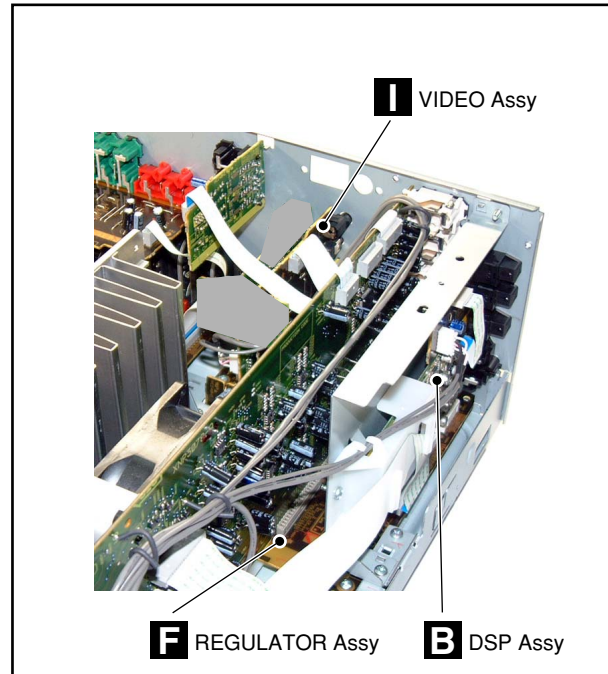

C AMP&PRIMARY Assy

D TRANS 2 Assy

J 5.1CH Assy

FM/AM TUNER UNIT

A MAIN Assy

G AMP INPUT Assy

H TRANS 1 Assy

E TRANS 3 Assy

N R. ENCODER Assy

M FRONT DISPLAY Assy

P FRONT KEY Assy

Q H.P. Assy

O POWER SW & KEY Assy

7.2 PARTS

7.2.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


• List of IC

PD5963C, PE5420A

■ PD5963C (MAIN ASSY : IC9001)

• System Control MCU

■ Pin Arrangement (Top View)

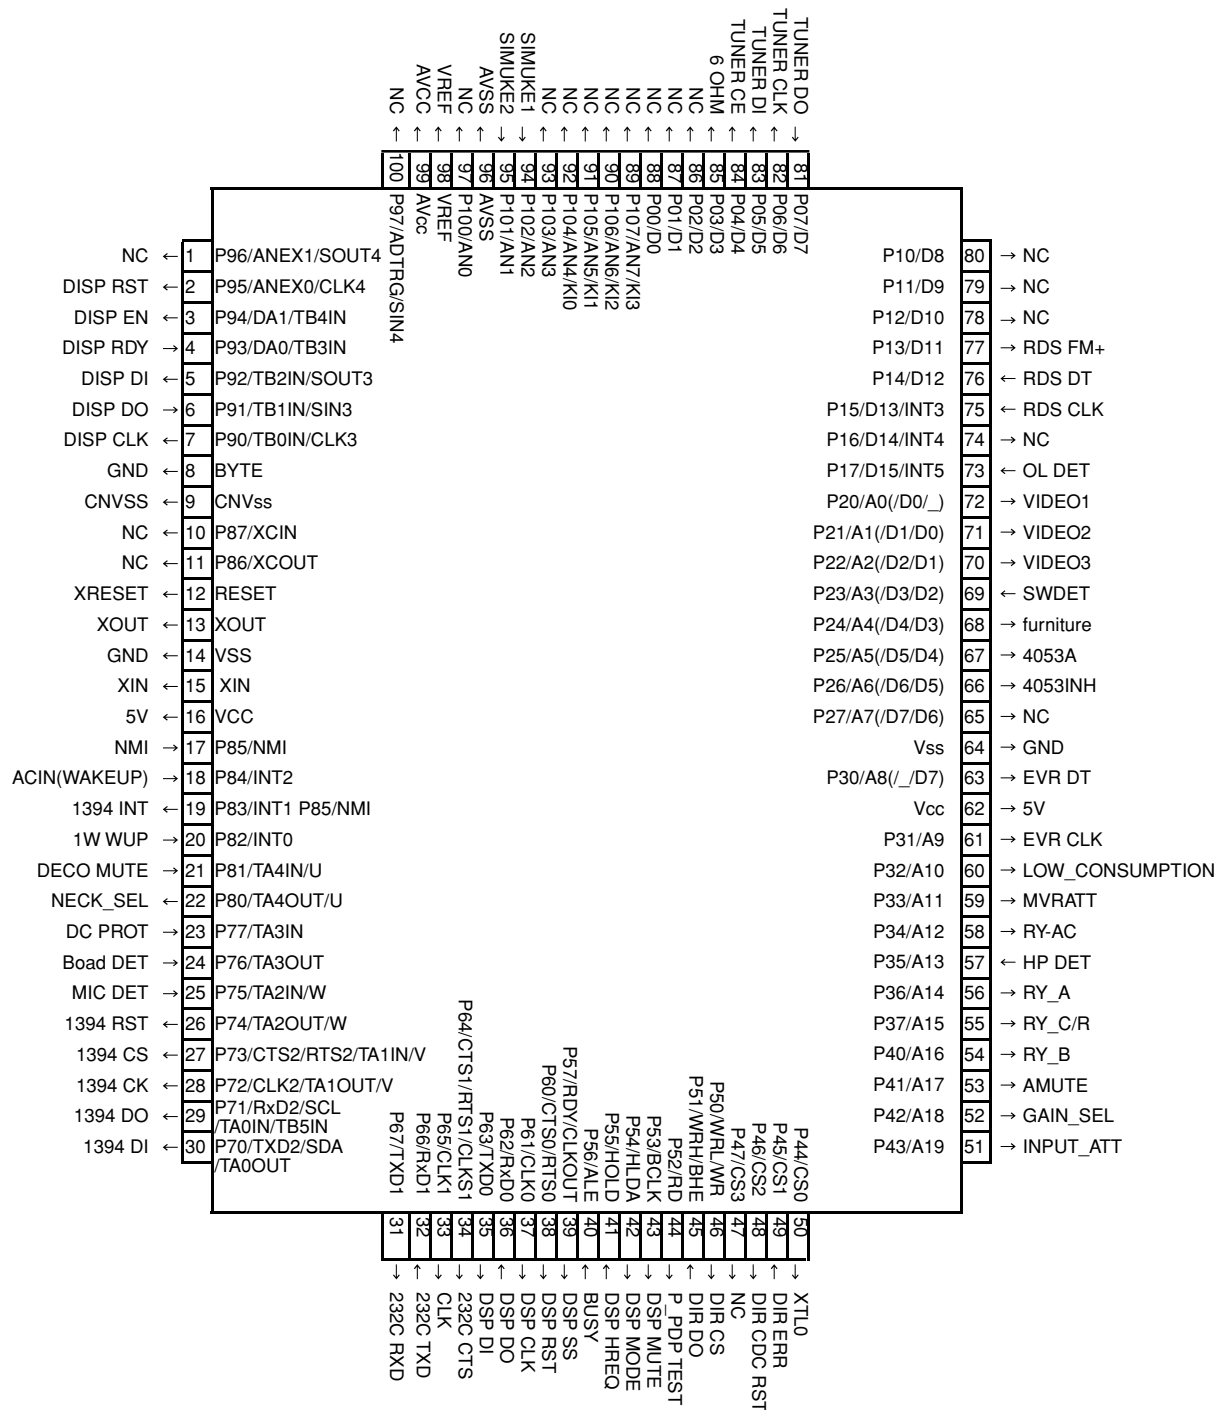

• Pin Function

A

B

C

D

E

F


No.	Port	Pin Name	I/O	Pin Function
1	P96/ANEX1/SOUT4	NC	I/O	
2	P95/ANEX0/CLK4	DISP RST	I/O	Reset signal to display u-com
3	P94/DA1/TB4IN	DISP EN	I/O	Enable signal to display u-com
4	P93/DA0/TB3IN	DISP RDY	I/O	Ready signal from display u-com
5	P92/TB2IN/SOUT3	DISP DI	I/O	Data out to display u-com
6	P91/TB1IN/SIN3	DISP DO	I/O	Data input from display u-com
7	P90/TB0IN/CLK3	DISP CLK	I/O	Clock signal to display u-com
8	BYTE	GND		
9	CNVss	CNVSS		
10	P87/XCIN	NC	I/O	
11	P86/XCOUT	NC	I/O	
12	RESET	XRESET	RST	
13	XOUT	XOUT	OSC	
14	VSS	GND	GND	
15	XIN	XIN	OSC	
16	VCC	5V	5V	
17	P85/NMI	NMI	I	No use
18	P84/INT2	ACIN(WAKEUP)	I/O	AC pulse input
19	P83/INT1 P85/NMI	1394 INT	I/O	No use (Standby for 1394)
20	P82/INT0	1W WUP	I/O	Wake up signal from display u-com
21	P81/TA4IN/U	DECO MUTE	I/O	1st DSP Boot success detect port
22	P80/TA4OUT/U	NECK_SEL	I/O	5.1ch, surround mode and A+B Stereo : H / Stereo : L
23	P77/TA3IN	DC PROT	I/O	AMP DC detect
24	P76/TA3OUT	Boad DET	I/O	AMP INPUT ASSY falling off detect, H : detected
25	P75/TA2IN/W	MIC DET	I/O	MIC detect (No Use)
26	P74/TA2OUT/W	1394 RST	I/O	No use (Standby for 1394)
27	P73/CTS2/RTS2/TA1IN/V	1394 CS	I/O	No use (Standby for 1394)
28	P72/CLK2/TA1OUT/V	1394 CK	I/O	No use (Standby for 1394)
29	P71/RxD2/SCL/TA0IN/TB5IN	1394 DO	I/O	No use (Standby for 1394)
30	P70/TXD2/SDA/TA0OUT	1394 DI	I/O	No use (Standby for 1394)
31	P67/TXD1	232C RXD	I/O	No use, fixed to "L" (For rewriting 232C (Data output))
32	P66/RxD1	232C TXD	I/O	No use, fixed to "L" (For rewriting 232C (Data input))
33	P65/CLK1	CLK	I/O	No use (It is necessary when writing for JIG)
34	P64/CTS1/RTS1/CLKS1	232C CTS	I/O	No use, fixed to "L" (For rewriting 232C (Admit communication))
35	P63/TXD0	DSP DI	I/O	Data output signal for communication with DSP and DIR
36	P62/RxD0	DSP DO	I/O	Data input signal for communication with DSP
37	P61/CLK0	DSP CLK	I/O	Clock signal for communication with DSP and DIR
38	P60/CTS0/RTS0	DSP RST	I/O	Reset signal for DSP
39	P57/RDY/CLKOUT	DSP SS	I/O	Slave select signal to DSP
40	P56/ALE	BUSY	I/O	Use it in MCACC
41	P55/HOLD	DSP HREQ	I/O	DSP error detect signal
42	P54/HLDA	DSP MODE	I/O	Mode select of DSP (H : ROMmode, L : RAM(PPP) mode)
43	P53/BCLK	DSP MUTE	I/O	DSP ASSY mute
44	P52/RD	P_PDPTEST	I/O	Fixed to "L" during normal operation. (for SR+ testmode only)
45	P51/WRH/BHE	DIR DO	I/O	Data input signal for communication with DIR/DAC
46	P50/WRL/WR	DIR CS	I/O	Chip select signal for communication with DIR/DAC
47	P47/CS3	NC	I/O	
48	P46/CS2	DIR CDC RST	I/O	Reset signal for DIR CODEC
49	P45/CS1	DIR ERR	I/O	lock/unlock signal
50	P44/CS0	XTL0	I/O	DIR X'tal change

• Pin Function

No.	Port	Pin Name	I/O	Pin Function
51	P43/A19	INPUT_ATT	I/O	Analog input ATT(H : ATT ON)
52	P42/A18	GAIN_SEL	I/O	Gain select (5.1ch and Stereo of analog input : H)
53	P41/A17	AMUTE	I/O	System mute (L : Mute ON)
54	P40/A16	RY_B	I/O	Speaker B relay ON/OFF
55	P37/A15	RY_C/R	I/O	Rear/Center Speaker relay ON/OFF
56	P36/A14	RY_A	I/O	Speaker A relay ON/OFF
57	P35/A13	HP DET	I/O	HP detect, H : detected
58	P34/A12	RY-AC	I/O	AC relay ON/OFF
59	P33/A11	MVRATT	I/O	ATT control of master volume (less than -15dB : L)
60	P32/A10	LOW_CONSUMPTION	I/O	If stop mode, port L, else H
61	P31/A9	EVR CLK	I/O	Clock signal for Function and E-volume
62	Vcc	5V	5V	
63	P30/A8(/_D7)	EVR DT	I/O	Data signal for Function and E-volume
64	Vss	GND	GND	
65	P27/A7(/D7/D6)	NC	I/O	
66	P26/A6(/D6/D5)	4053INH	I/O	Component terminal control
67	P25/A5(/D5/D4)	4053A	I/O	Component terminal control
68	P24/A4(/D4/D3)	furniture	I/O	Furniture control signal
69	P23/A3(/D3/D2)	SWDET	I/O	SWSP detect
70	P22/A2(/D2/D1)	VIDEO3	I/O	VIDEO input select
71	P21/A1(/D1/D0)	VIDEO2	I/O	VIDEO input select
72	P20/A0(/D0/_)	VIDEO1	I/O	NJM2296 control (VIDEO input select)
73	P17/D15/INT5	OL DET	I/O	Detect overload of AMP
74	P16/D14/INT4	NC	I/O	
75	P15/D13/INT3	RDS CLK	I/O	Fixed to "L".
76	P14/D12	DT	I/O	Fixed to "L".
77	P13/D11	FM+	I/O	Fixed to "L".
78	P12/D10	NC	I/O	
79	P11/D9	NC	I/O	
80	P10/D8	NC	I/O	
81	P07/D7	TUNER DO	I/O	Data input signal for tuner control
82	P06/D6	TUNER CLK	I/O	Clock signal for tuner control
83	P05/D5	TUNER DI	I/O	Data output signal for tuner control
84	P04/D4	TUNER CE	I/O	Chip select signal for tuner control
85	P03/D3	6 OHM	I/O	if stop mode, port L, else L/H depends on selection.
86	P02/D2	NC	I/O	
87	P01/D1	NC	I/O	
88	P00/D0	NC	I/O	
89	P107/AN7/KI3	NC	I/O	
90	P106/AN6/KI2	NC	I/O	
91	P105/AN5/KI1	NC	I/O	
92	P104/AN4/KI0	NC	I/O	
93	P103/AN3	NC	I/O	
94	P102/AN2	SIMUKE1	I/O	Input 1 to switch region
95	P101/AN1	SIMUKE2	I/O	Input 2 to switch region
96	AVSS	AVSS	GND	Connect to VSS
97	P100/AN0	NC	I/O	
98	VREF	VREF	5V	Connect to VCC
99	AVcc	AVCC	5V	Connect to VCC
100	P97/ADTRG/SIN4	NC	I/O	

- **System Control MCU**

■ Pin Arrangement (Top View)

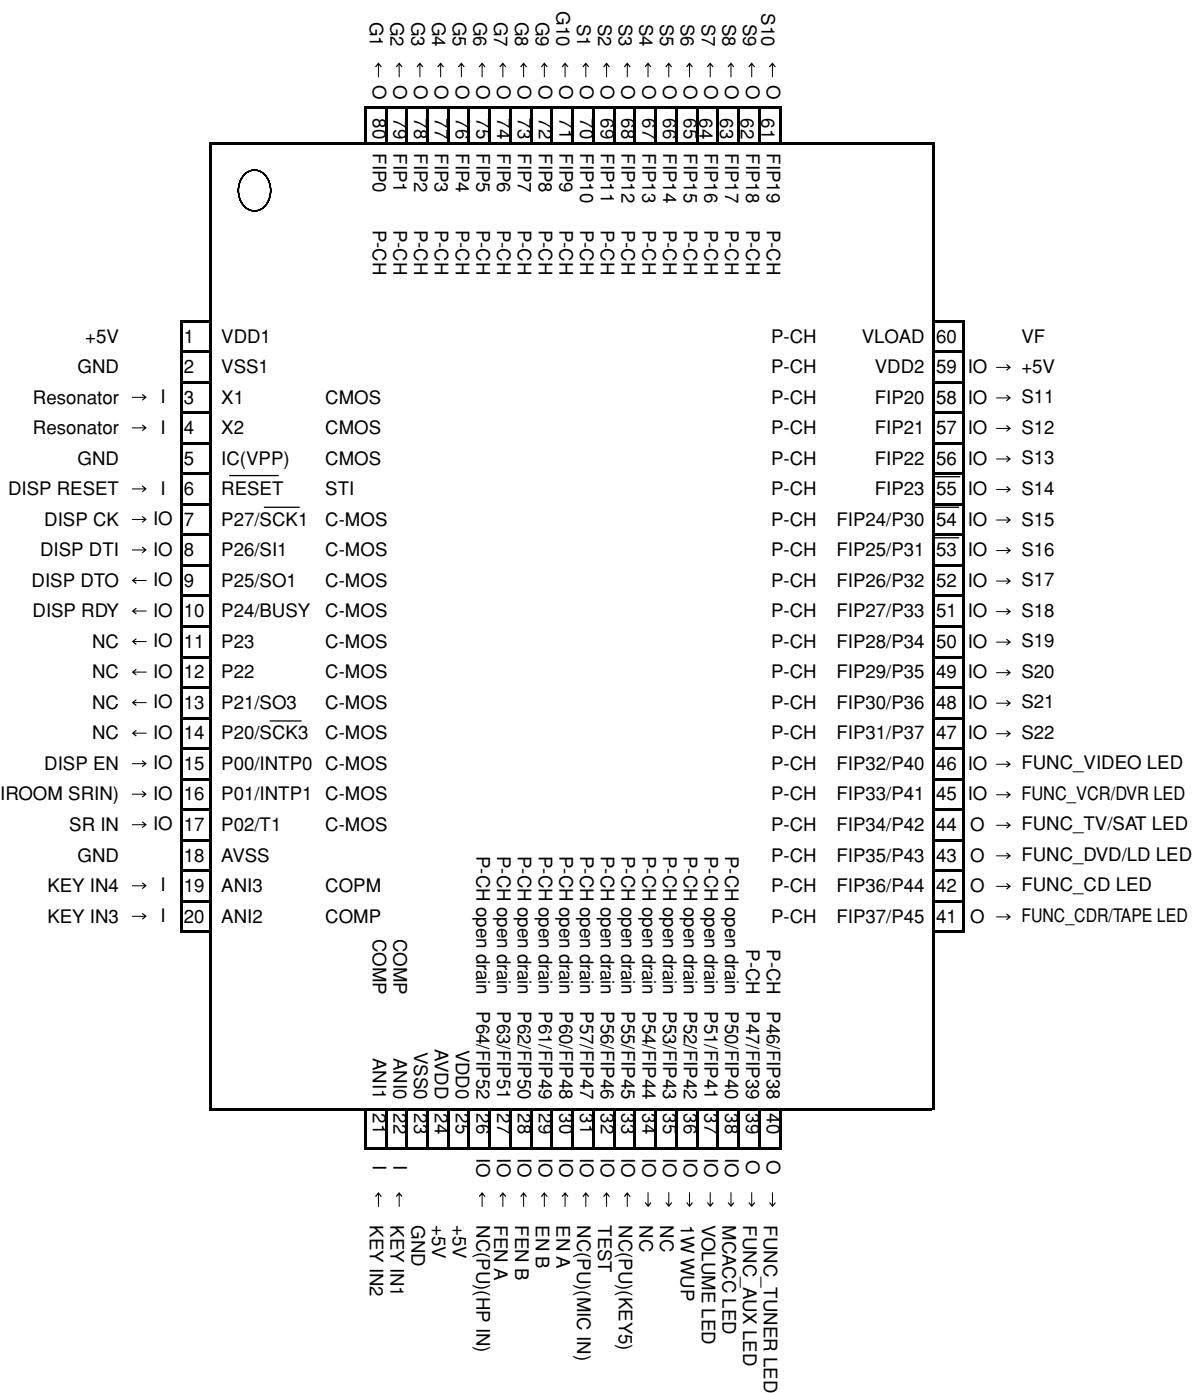

• Pin Function

No.	Port	Pin Name	I/O	Pin Function
1	VDD1	+5V	-	positive power supply
2	VSS1	GND	-	ground potential
3	X1	Resonator	I	crystal connection for system clock oscillation
4	X2	Resonator	I	crystal connection for system clock oscillation
5	IC(VPP)	GND	-	
6	RESET	DISP RESET	I	receive reset signal from main u-com
7	P27/SCK1	DISP CK	I/O	clock signal from main u-com
8	P26/SI1	DISP DTI	I/O	datain from main u-com
9	P25/SO1	DISP DTO	I/O	data out to main u-com
10	P24/BUSY	DISP RDY	I/O	ready signal from main u-com
11	P23	NC	I/O	
12	P22	NC	I/O	
13	P21/SO3	NC	I/O	
14	P20/SCK3	NC	I/O	
15	P00/INTP0	DISP EN	I/O	enable signal from main u-com
16	P01/INTP1	NC	I/O	
17	P02/T1	SR IN	I/O	remote control signal input from main room
18	AVSS	GND	-	ground potential for A/D converter
19	ANI3	KEY IN4	I	
20	ANI2	KEY IN3	I	
21	ANI1	KEY IN2	I	
22	ANI0	KEY IN1	I	
23	VSS0	GND	-	ground potential for ports
24	AVDD	'+5V	-	analog power voltage input to A/D converter
25	VDD0	'+5V	-	positive power supply to ports
26	P64/FIP52	NC	I/O	
27	P63/FIP51	FEN A	I/O	MULTI JOG(Right)
28	P62/FIP50	FEN B	I/O	MULTI JOG(Left)
29	P61/FIP49	EN B	I/O	VOLUME JOG1(-)
30	P60/FIP48	EN A	I/O	VOLUME JOG1(+)
31	P57/FIP47	NC	I/O	
32	P56/FIP46	TEST	I/O	test mode input for checker
33	P55/FIP45	NC	I/O	
34	P54/FIP44	NC	I/O	
35	P53/FIP43	NC	I/O	
36	P52/FIP42	1W WUP	I/O	output wakeup signal to main u-com
37	P51/FIP41	VOL LED	I/O	LED Output
38	P50/FIP40	MCACC LED	I/O	LED Output
39	P47/FIP39	FUNC/AUX	O	LED Output
40	P46/FIP38	FUNC_TUNER	O	LED Output

A

• Pin Function

B

C


D

E


F

No.	Port	Pin Name	I/O	Pin Function
41	FIP37/P45	FUNC_CDR	O	LED Output
42	FIP36/P44	FUNC_CD	O	LED Output
42	FIP35/P43	FUNC_DVD	O	LED Output
44	FIP34/P42	FUNC_TV	O	LED Output
45	FIP33/P41	FUNC_VCR	O	LED Output
46	FIP32/P40	FUNC_VIDEO	O	LED Output
47	FIP31/P37	S22	I/O	Display
48	FIP30/P36	S21	I/O	Display
49	FIP29/P35	S20	I/O	Display
50	FIP28/P34	S19	I/O	Display
51	FIP27/P33	S18	I/O	Display
52	FIP26/P32	S17	I/O	Display
53	FIP25/P31	S16	I/O	Display
54	FIP24/P30	S15	I/O	Display
55	FIP23	S14	O	Display
56	FIP22	S13	O	Display
57	FIP21	S12	O	Display
58	FIP20	S11	O	Display
59	VDD2	'+5V	-	positive power supply to FIP controller.
60	VLOAD	VF	-	pull down resistor connection of FIP controller
61	FIP19	S10	O	Display
62	FIP18	S9	O	Display
63	FIP17	S8	O	Display
64	FIP16	S7	O	Display
65	FIP15	S6	O	Display
66	FIP14	S5	O	Display
67	FIP13	S4	O	Display
68	FIP12	S3	O	Display
69	FIP11	S2	O	Display
70	FIP10	S1	O	Display
71	FIP9	G10	O	Display
72	FIP8	G9	O	Display
73	FIP7	G8	O	Display
74	FIP6	G7	O	Display
75	FIP5	G6	O	Display
76	FIP4	G5	O	Display
77	FIP3	G4	O	Display
78	FIP2	G3	O	Display
79	FIP1	G2	O	Display
80	FIP0	G1	O	Display

■ POWER ON INITIAL TIMING CHART

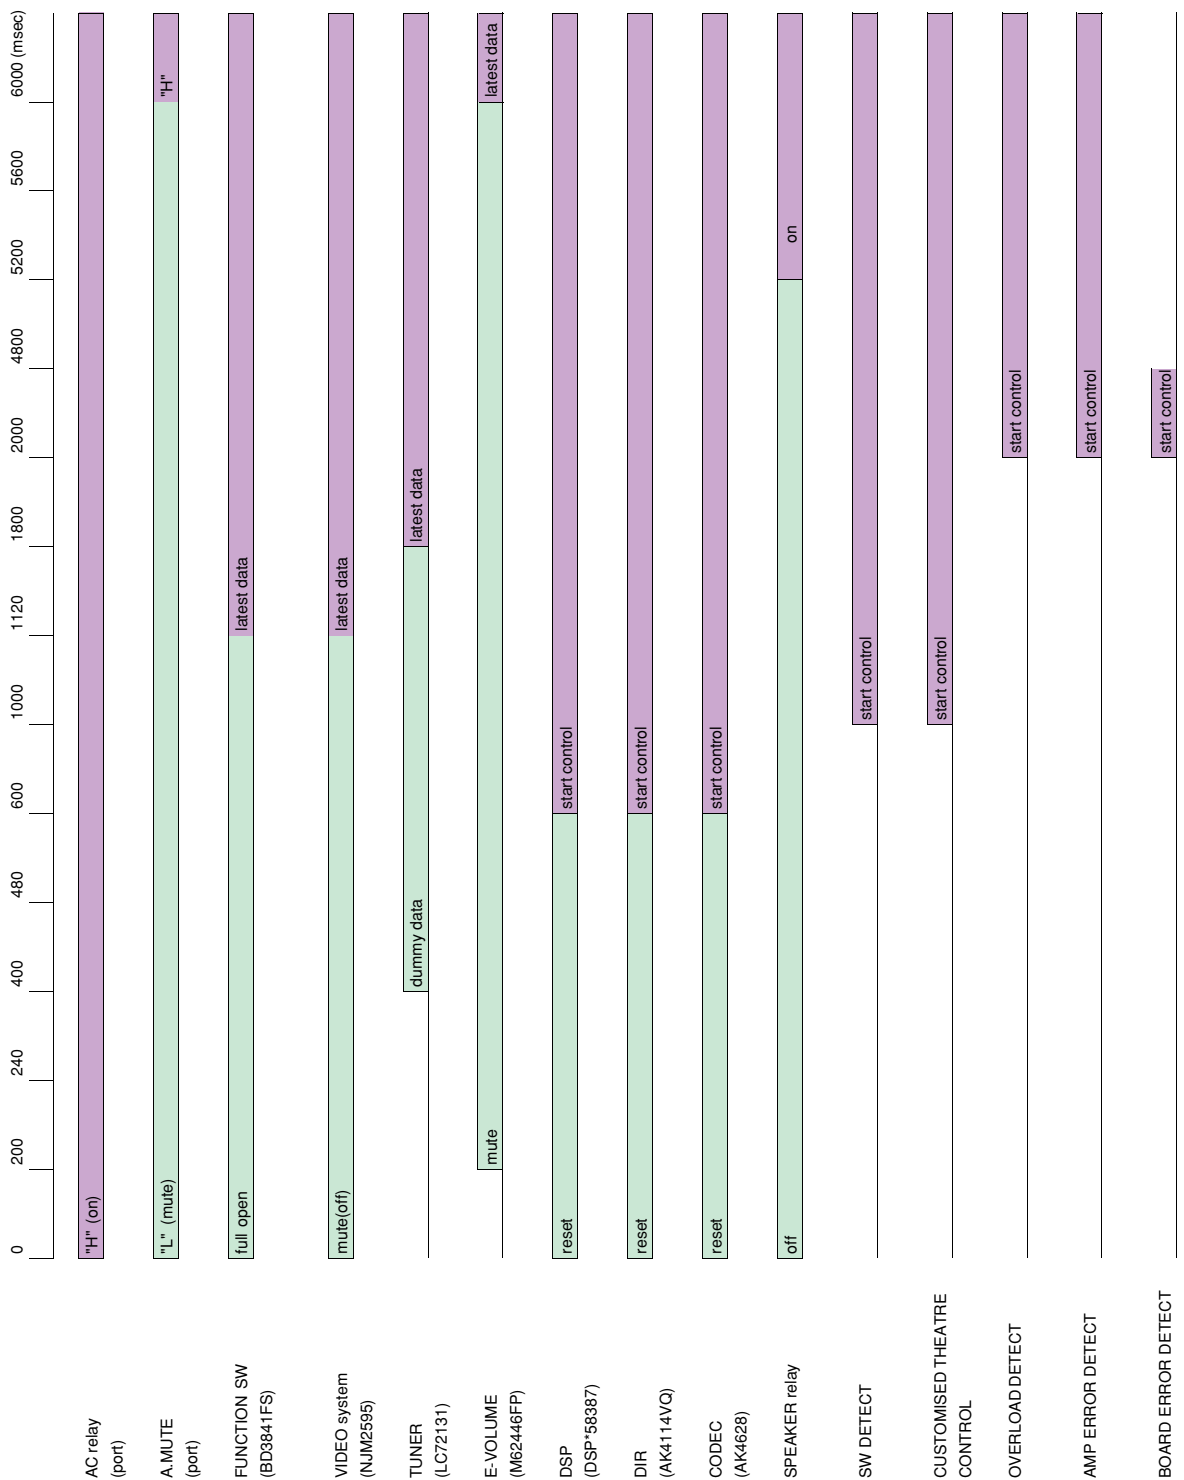

A ■ POWER OFF INITIAL TIMING CHART

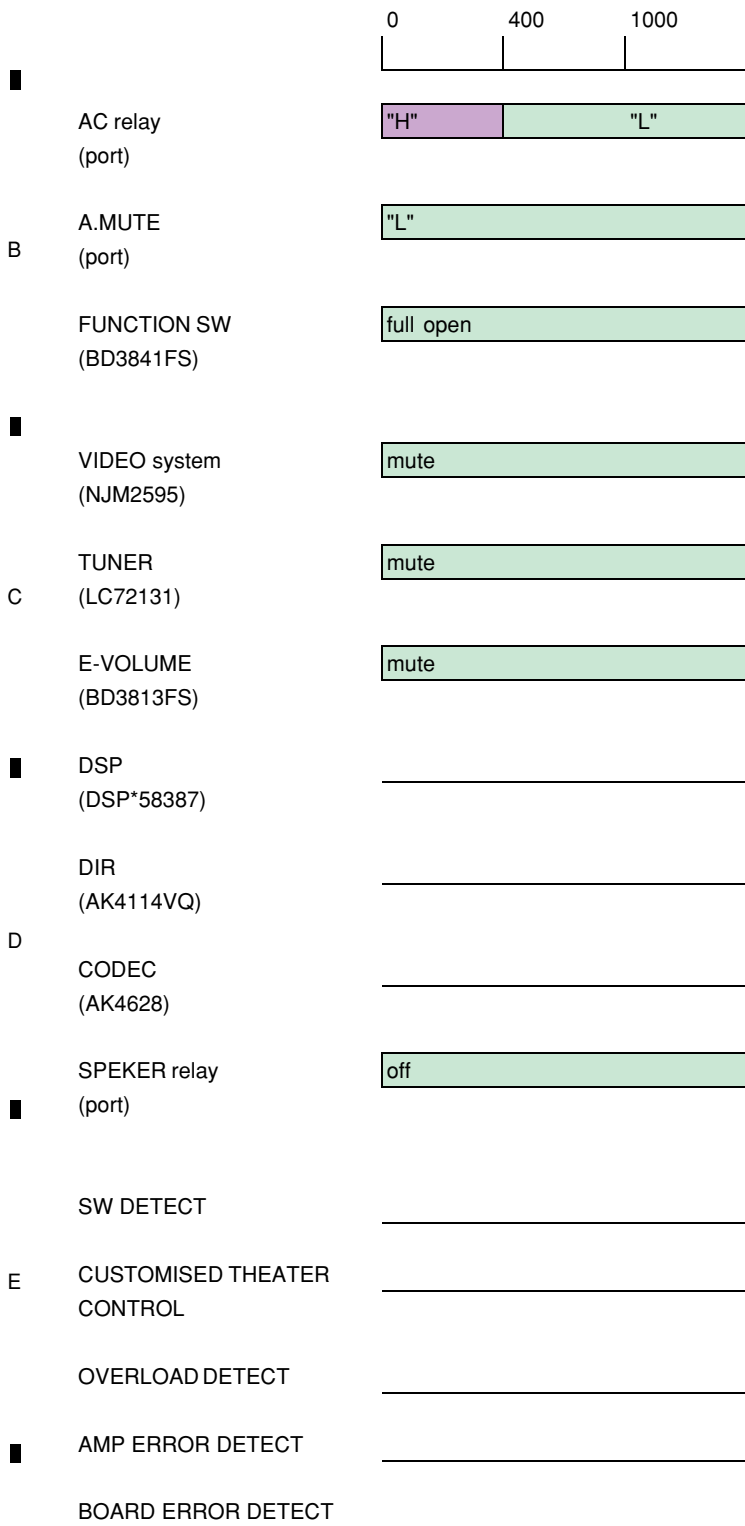


F

7.3.2 IC DATA TRANSMISSION TIMING CHART

IC data transmission timing chart


1. When function change

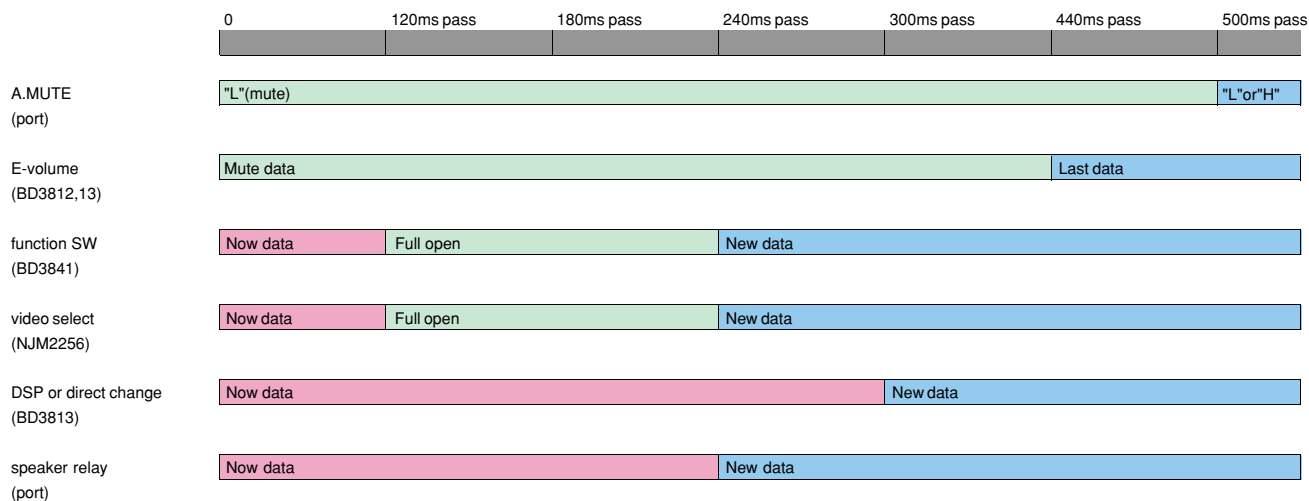

condition of mute cancel (system mute & E-volume mute)

- 1) when tuner mute during Tuner function
- 2) when communicate to DSP
- 3) when initial processing
- 4) when detect trouble of AMP DC
- 5) when detect overload of AMP
- 6) when Power off
- 7) when muting by key input

2. When except function change

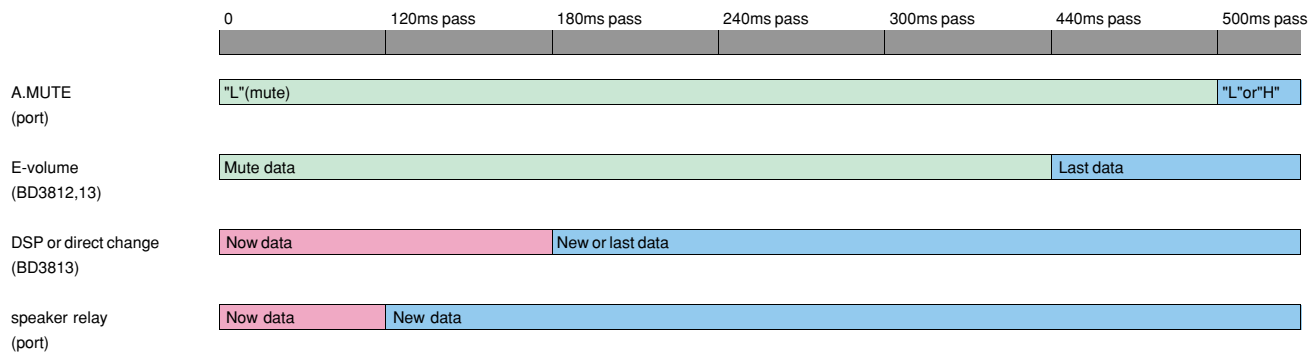


condition of mute cancel (system mute & E-volume mute)


- 1) when tuner mute during Tuner function
- 2) when communicate to DSP
- 3) when initial processing
- 4) when detect trouble of AMP DC
- 5) when detect overload of AMP
- 6) when Power off
- 7) when muting by key input

7.3.3 DETECTION CIRCUIT


1.DC Detection Circuit Diagram:

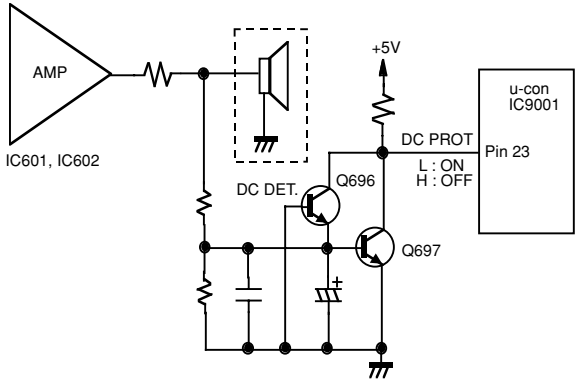

2. Overload Detection Circuit Diagram:

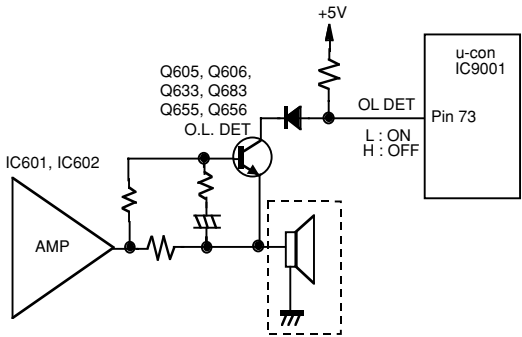


3. PCB Board Protection Circuit Diagram

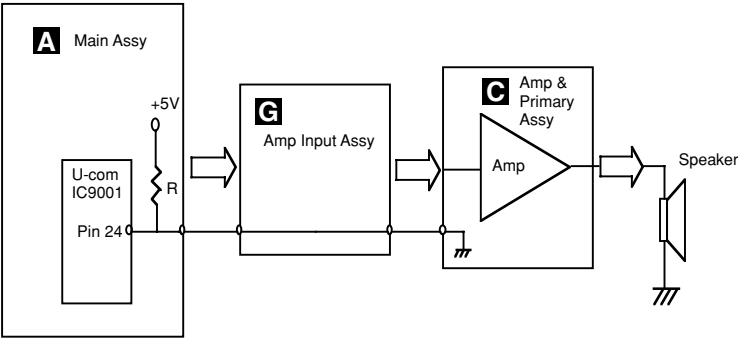

1. DC-abnormality detection

DC detection is only enabled 2 seconds after power-on.
 If there is a fault in the power amplifier or a high-level signal lower than 5 Hz is input, the DC_DET port becomes “L”.
 If the “L” is detected, the microprocessor will perform as following flow chart.

In the case of simultaneous detection with the overload protection circuit, DC-abnormality detection is performed preferentially to overload detection.

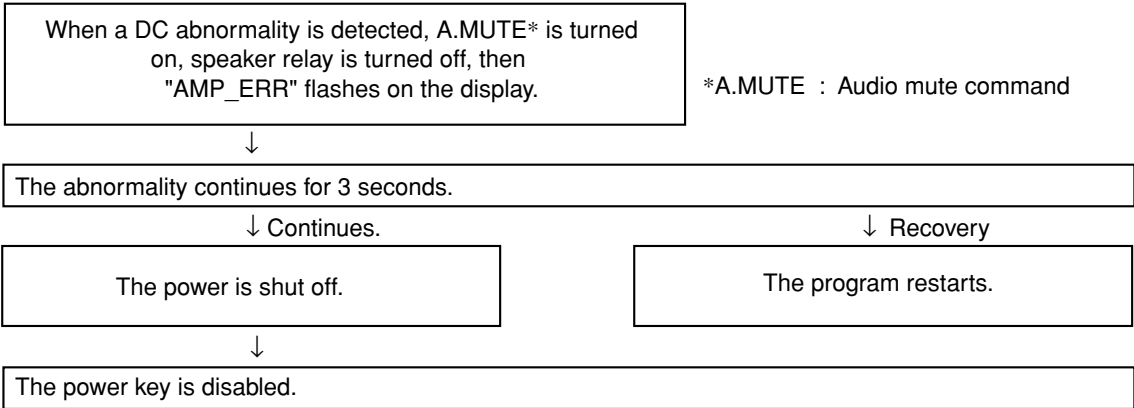

- But be switched on with the following methods.


① TESTMODE ON (A55F+A55F)

② When power off, push FRONT ENTER key + ADVANCED SURROUND key continuously 2sec.

 (②: When a DC abnormality is detected and the power is shut off.)

2. Overload detection

If the speaker terminals are short-circuited or low-load driving is detected, the OL_DET port becomes “L”.
 If the “L” is detected, the microprocessor will perform as following flow chart.

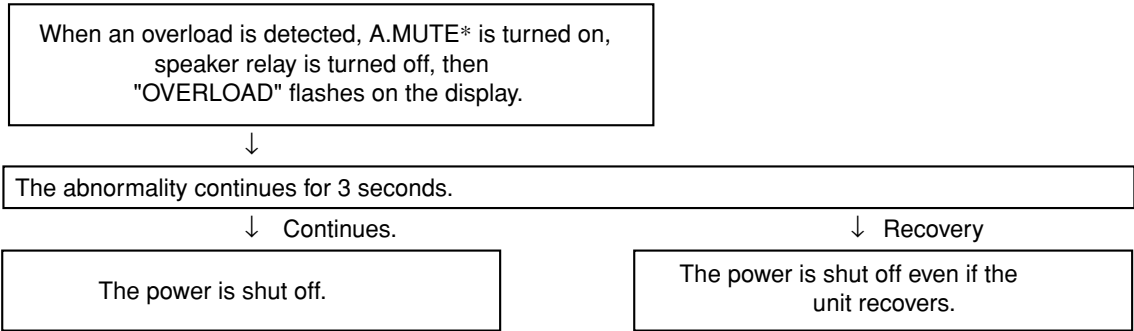

3. Board detection

If the board connection from MAIN ASSY to AM & PRIMARY ASSY is interrupted, the BOARD_DET port becomes "H".

If the "H" is detected, the microprocessor will perform as following flow chart.

In the case of simultaneous detection with the overload protection circuit, Board detection is performed preferentially to DC-abnormality detection and Overload detection.

When an board error is detected, A.MUTE* is turned on,
speaker relay is turned off, then
"BOARD ERR" flashes on the display.



The abnormality continues for 3 seconds.

↓ Continues.

The power is shut off.

↓ Recovery

The power is shut off even if the
unit recovers.

■ Amplifier failure diagnosis flow chart

When DC detection is activated ("AMP_ERR" flashes on the display), failure (damage) of the power amplifier section is considered.

Caution:

When release the lock state of power key before repair, please be careful because there is the possibility that more damages will occur when turns on the power once again!


- According to a symptom, perform the following confirmation beforehand.

- 1) Is the operation of fan motor in normal condition?
- 2) Are there any Fuses and IC protectors open?
- 3) After turn on the power, confirm that the supply voltage of the point that can be measured is appropriate.
- 4) Whether the voltage of pin3 of IC601 or IC602 is equal to (VL-0.7V). If not (eg, equal to VH), then change the corresponding power pack IC601 or IC602.
- 5) Furthermore, check the output DC voltage of each channel of power pack IC601 and IC602 to limit the failure channel and identify the defect power pack.

- After identify the failure channel, check that each part is not damaged (resistor, diode... etc. value / open / short)

8. PANEL FACILITIES

Front panel

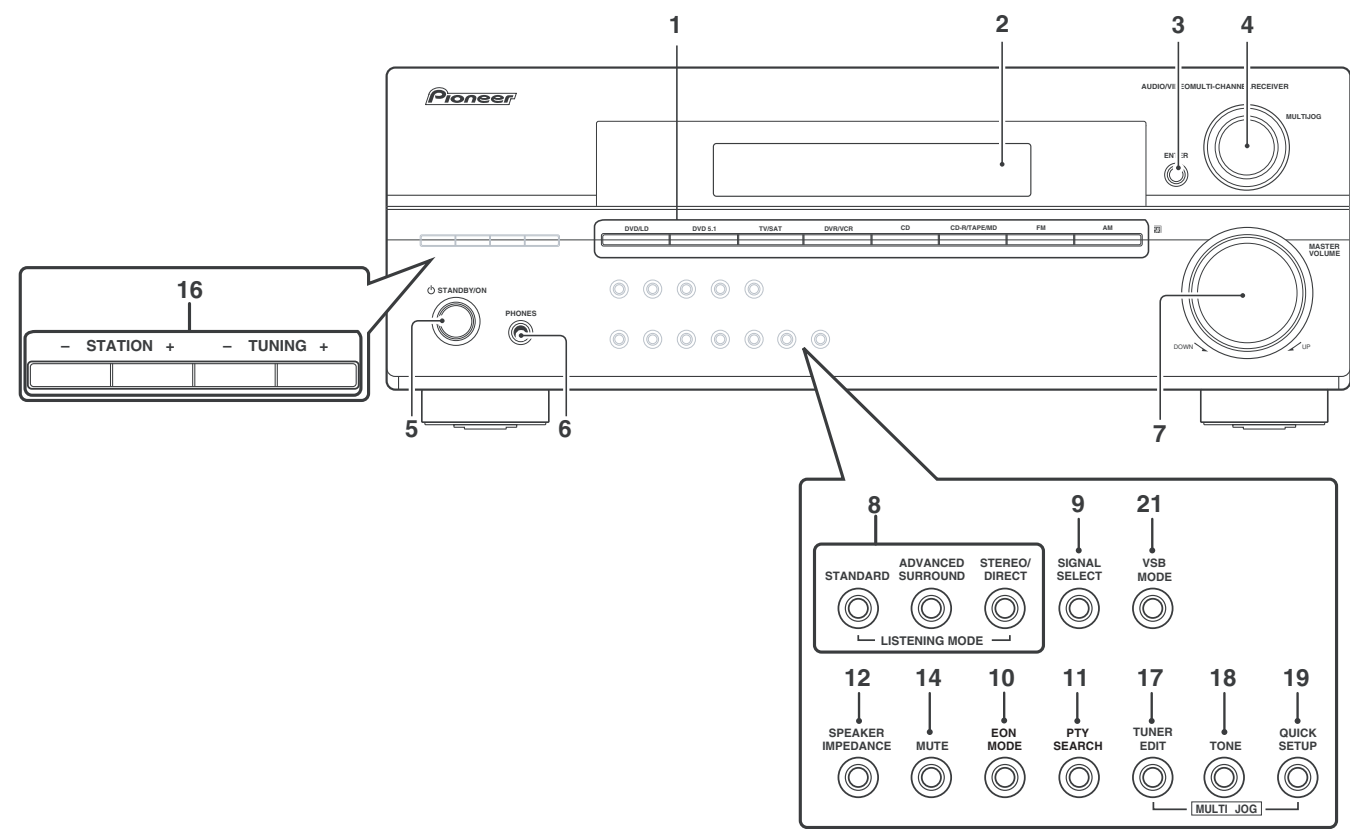

- 1 Input select buttons**
Press to select an input source.
- 2 Character display**
See Display.
- 3 ENTER**
- 4 MULTI JOG dial**
The **MULTI JOG** dial performs a number of tasks. Use it to select options after pressing the designated **MULTI JOG** buttons.
- 5 STANDBY/ON**
Switches the receiver between on and standby.

- 6 PHONES jack**
Use to connect headphones. When the headphones are connected, there is no sound output from the speakers.
- 7 MASTER VOLUME**
- 8 LISTENING MODE buttons**
STANDARD
Press for Standard decoding and to switch between the various Pro Logic II and Neo:6 options.

ADVANCED SURROUND

Use to switch between the various surround modes.

STEREO/DIRECT (AUTO SURR)

Switches between direct and stereo playback. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

18 TONE

Press this button to access the bass and treble controls, which you can then adjust with the **MULTI JOG** dial.

19 QUICK SETUP

See Using the Quick Setup.

20**9 SIGNAL SELECT**

Use to select an input signal.

10 EON MODE

Use to search for programs that are broadcasting traffic or news information.

11 PTY SEARCH

Use this button to search for RDS program types.

12 SPEAKER IMPEDANCE

Use to change the impedance setting

13**21 VSB MODE**

Selects the Virtual Surround Back (VSB) mode.

14 MUTE

Mutes the sound (or restores the sound if it has been muted).


15**16 TUNING / STATION buttons**

Selects the frequency and station presets when using the tuner.

17 TUNER EDIT


Press to memorize and name a station for recall.

Rear panel

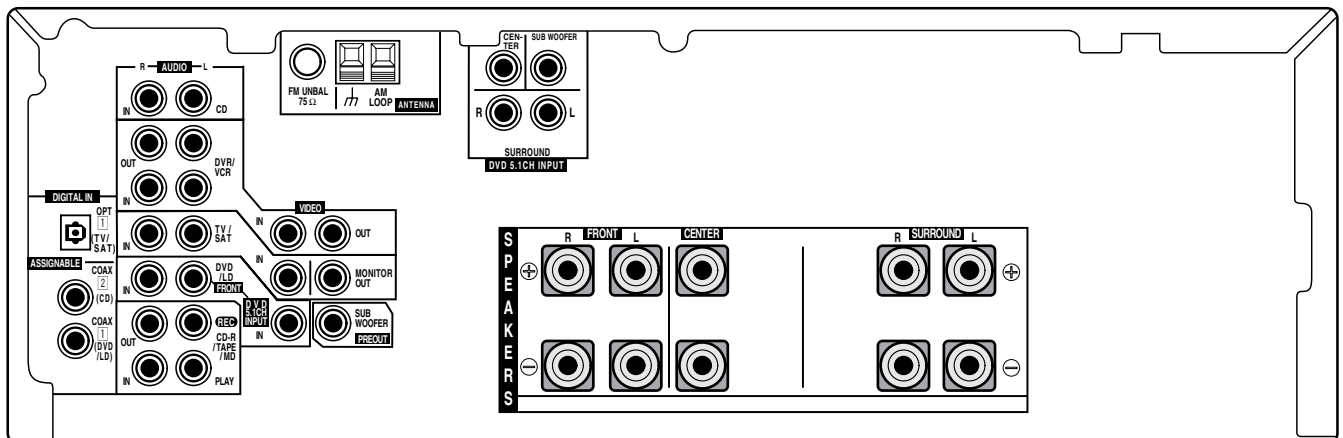

Display

VSX-415 model:

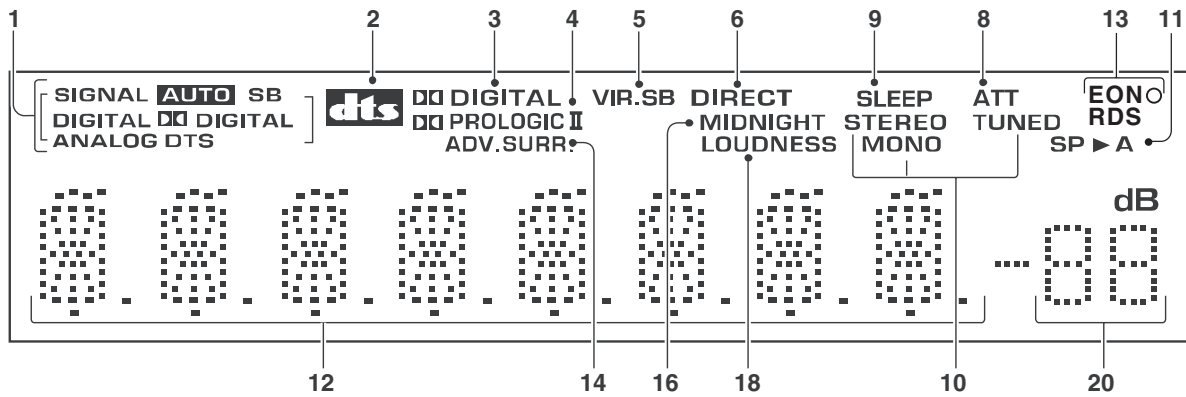

1 SIGNAL SELECT indicators

Lights to indicate the type of input signal assigned for the current component:

AUTO

Lights when **AUTO** signal select is on.

SB

Depending on the source, this lights when a signal with surround back channel encoding is detected.

DIGITAL

Lights when a digital audio signal is detected.

DIGITAL

Lights when a Dolby Digital encoded signal is detected.

ANALOG

Lights when an analog signal is detected.

DTS

Lights when a source with DTS encoded audio signals is detected.

2 DTS

When the **STANDARD** mode of the receiver is on, this lights to indicate decoding of a DTS multichannel signal.

3 DIGITAL

When the **STANDARD** mode of the receiver is on, this lights to indicate decoding of a Dolby Digital multichannel signal.

4 PRO LOGIC II

When the **(STANDARD)** Pro Logic II mode of the receiver is on, **PRO LOGIC II** lights to indicate Pro Logic II decoding.

5 VIR.SB

Lights during Virtual surround back processing.

6 DIRECT

Lights when source direct playback is in use. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

7

8 ATT

Lights when **INPUT ATT** is used to attenuate (reduce) the level of the analog input signal.

9 SLEEP

Lights when the receiver is in sleep mode.

10 Tuner indicators

MONO

Lights when the mono mode is set using the **MPX** button.

STEREO

Lights when a stereo FM broadcast is being received in auto stereo mode.

TUNED

Lights when a broadcast is being received.

11 Speaker indicator

Shows if the speaker system is on or not. **SP▶A** means the speakers are switched on. **SP▶** means the headphones are connected.

12 Character display

EON

EON lights when the EON mode is set, and flashes during reception of an EON broadcast. The **○** indicator lights when the current station carries the EON service.

RDS

Lights when an RDS broadcast is received.

14 ADV.SURR. (Advanced Surround)

Lights when one of the Advanced Surround modes has been selected.

15

16 MIDNIGHT

Lights during Midnight listening.

17

18 LOUDNESS

Lights during Loudness listening.


19

20 Master volume level

Shows the overall volume level. **---dB** indicates the minimum level, and **- 0 dB** indicates the maximum level.

Depending on your level settings for each channel, the maximum volume can range between **-10 dB** and **-0 dB**.

Remote control

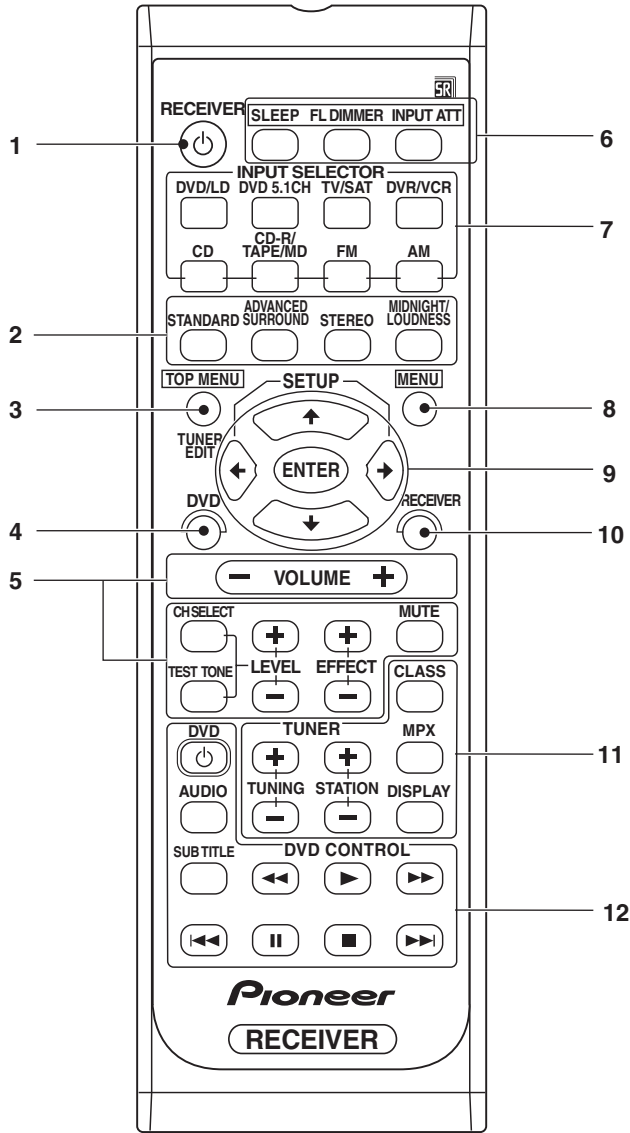

1 RECEIVER
Switches the receiver between standby and on.

2 Listening mode buttons
STANDARD
Press for Standard decoding and to switch between the various Pro Logic II and Neo:6 options.
ADVANCED SURROUND
Use to switch between the various surround modes.

STEREO
Switches between direct and stereo playback. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

MIDNIGHT/LOUDNESS
Switches to Midnight or Loudness listening.

3 TOP MENU
Displays the disc 'top' menu of a DVD.

TUNER EDIT
Press to memorize and name a station for recall.

4 DVD
Press to use the DVD controls on the remote.

5 RECEIVER CONTROL buttons
VOLUME +/-
Use to set the listening volume.
MUTE
Mutes/unmutes the sound.

A

B

C

D

E

F

CH SELECT

Selects a speaker when setting up the surround sound of the receiver.

TEST TONE

Sounds the test tone when setting up the surround sound of the receiver.

LEVEL +/-

Adjusts the channel levels.

EFFECT +/-

Adds or subtracts the amount of effect with the advanced surround modes.

6 SLEEP

Use to set the sleep timer.

FL DIMMER

Dims or brightens the display.

INPUT ATT

Attenuates (lowers) the level of an analog input signal to prevent distortion.

7 INPUT SELECTOR buttons

Press to select an input source.

8 MENU

Displays the disc menu of DVD-Video discs. It also displays TV menus.

9 ↑↓←→/ENTER

Use the arrow buttons when setting up your surround sound system.
Also used for DVD menus.

10 RECEIVER

Use to switch to the receiver controls on the remote control. Also used when setting up the surround sound for the receiver.

11 TUNER controls

The **TUNING +/-** buttons can be used to find radio frequencies and the **STATION +/-** buttons can be used to select preset radio stations.

CLASS

Switches between the three banks (classes) of station presets.

MPX

Use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to mono will improve the sound quality.

DISPLAY

Switch the display between station preset name and frequency.

12 DVD CONTROL buttons

You can use these buttons to control a Pioneer DVD player connected to your system.

Button	What it does
DVD 	Turns DVD power on/off.
AUDIO	Changes the audio language or channel.
SUBTITLE	Displays/changes the subtitles on multilingual DVD-Video discs.
	Starts/resumes normal playback.
	Pauses/unpauses a disc.
	Stops playback.
	Press to start fast reverse scanning.
	Press to start fast forward scanning.
	Skips to the start of the current track or chapter, then previous tracks/chapters.
	Skips to the next track or chapter.