


Service Manual

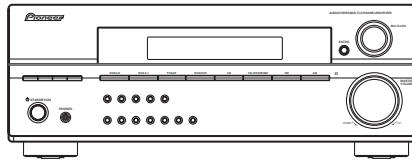

VSX-415-K

ORDER NO.
RRV3136

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-415-K

VSX-415-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-415-K	MYXJ	AC 220-230V	
VSX-415-S	MYXJ	AC 220-230V	



For details, refer to "Important Check Points for Good Servicing".

SAFETY INFORMATION



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65



NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

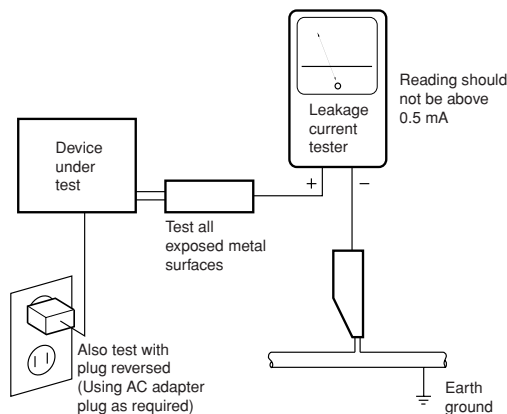

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol. Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification (addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris. Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs. In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages. If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries. Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification. Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance. Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

- SAFETY INFORMATION 2
- 1. SPECIFICATIONS 5
- A 2. EXPLODED VIEWS AND PARTS LIST 7
 - 2.1 PACKING 7
 - 2.2 EXTERIOR..... 8
 - 2.3 FRONT PANEL 10
- 3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM 12
 - 3.1 BLOCK DIAGRAM 12
 - 3.2 OVERALL WIRING CONNECTION DIAGRAM..... 14
 - 3.3 MAIN ASSY (1/3) 16
 - 3.4 MAIN ASSY (2/3) 18
 - 3.5 MAIN ASSY (3/3) 20
 - 3.6 DSP ASSY (1/2) 22
 - 3.7 DSP ASSY (2/2)..... 24
 - B 3.8 AMP & PRIMARY (1/2), TRANS2 and TRANS3 ASSYS 26
 - 3.9 AMP & PRIMARY (2/2), REGULATOR, AMP INPUT and TRANS1 ASSYS 28
 - 3.10 VIDEO and 5.1CH ASSYS 30
 - 3.11 FRONT DISPLAY, R. ENCODER, POWER SW & KEY and F. KEY ASSYS 32
 - 3.12 H.P. ASSY 34
- 4. PCB CONNECTION DIAGRAM 35
 - 4.1 TRANS2, TRANS3 and TRANS1 ASSYS 36
 - 4.2 REGULATOR ASSY 37
 - 4.3 MAIN ASSY 38
 - 4.4 DSP ASSY 42
 - 4.5 AMP & PRIMARY and AMP INPUT ASSYS 44
 - 4.6 F. DISPLAY, R. ENCODER, POWER SW & KEY, H. P. and F. KEY ASSYS 46
 - C 4.7 VIDEO and 5.1CH ASSYS 50
- 5. ELECTRICAL PARTS LIST 52
- 6. ADJUSTMENT 56
- 7. GENERAL INFORMATION 57
 - 7.1 DIAGNOSIS 57
 - 7.1.1 DISASSEMBLY 57
 - 7.2 PARTS 59
 - 7.2.1 IC 59
 - 7.3 EXPLANATION 65
 - 7.3.1 POWER ON AND OFF INITIAL TIMING CHART 65
 - 7.3.2 IC DATA TRANSMISSION TIMING CHART 67
 - 7.3.3 DETECTION CIRCUIT 68
 - D 7.3.4 AMPLIFIER SYSTEM PROTECTION OPERATION SPECIFICATION 69
 - 7.3.5 AMPLIFIER FAILURE DIAGNOSIS FLOW CHART 71
- 8. PANEL FACILITIES 72

E

F

1. SPECIFICATIONS

Amplifier section

- **Continuous power output (stereo)**

Front:

VSX-415. 80 W (DIN 1kHz, THD 1.0%, 8 Ω)

- **Continuous power output (surround)**

VSX-415 model:

Front. 100 W per channel (1kHz, 10%, 8 Ω)

Center 100 W (1kHz, 10%, 8 Ω)

Surround 100 W per channel
(1kHz, 10%, 8 Ω)

Audio section

- **Input (Sensitivity/Impedance)**

CD, DVR/VCR, CD-R/TAPE/MD,

DVD/LD, TV/SAT 200 mV/47 kΩ

- **Frequency response**

CD, DVR/VCR, CD-R/TAPE/MD, DVD/LD,

TV/SAT 5 Hz to 100,000 Hz ± 0.5 dB

- **Output (Level/Impedance)**

DVR/VCR REC, CD-R/TAPE/

MD REC. 200 mV/2.2 kΩ

- **Tone control**

Bass. ± 6 dB (100 Hz)

Treble. ± 6 dB (10 kHz)

Loudness. +10 dB/+5 dB (100 Hz/10 kHz)
(at volume level -50 dB)

- **Signal-to-Noise Ratio DIN**

- **(Continuous rated power output / 50mW)**

CD, DVR/VCR, CD-R/TAPE/MD,

DVD/LD, TV/SAT. 88/64 dB

Video Section

- **Input (Sensitivity/Impedance)**

DVR/VCR, DVD/LD, TV/SAT. 1 Vp-p/75 Ω

- **Output (Level/Impedance)**

DVR/VCR, MONITOR OUT. 1 Vp-p/75 Ω

- **Frequency response**

DVR/VCR, DVD/LD,

TV/SAT \Rightarrow MONITOR. 5 Hz to 7 MHz ± 0.5 dB

Signal-to-Noise Ratio. 55 dB

Crosstalk. 50dB

• **FM Tuner Section**

Frequency Range 87.5 MHz to 108 MHz
 Usable Sensitivity Mono: 13.2 dBf, IHF
 (1.3 μV/ 75 Ω)
 50 dB Quieting Sensitivity. Mono: 20.2 dB
 Stereo: 38.6 dBf
 Signal-to-Noise Ratio. . . Mono: 73 dB (at 85 dBf)
 Stereo: 70 dB (at 85 dBf)
 Distortion Stereo: 0.5 % (1 kHz)
 Alternate Channel Selectivity. 60 dB
 (400 kHz)
 Stereo Separation 40 dB (1 kHz)
 Frequency Response. 30 Hz to 15 kHz
 (±1 dB)
 Antenna Input (DIN) 75 Ω unbalanced

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "Surround EX", and the double-D symbol are trademarks of Dolby Laboratories.

"DTS", "DTS-ES Extended Surround" and "Neo:6" are trademarks of Digital Theater Systems, Inc.

AM Tuner Section

Frequency Range 531 kHz to 1,602 kHz
 Sensitivity (IHF, Loop antenna) 350 μV/m
 Signal-to-Noise Ratio. 50 dB
 Antenna Loop antenna

Miscellaneous

Power requirements AC 220–230V, 50/60Hz
 Power consumption:
 VSX-415 220 W
 In standby. 0.5 W
 Dimensions:
 VSX-415 420 (W) x 158 (H) x 394.5 (D) mm
 Weight (without package)
 VSX-415 8.7 kg


 **Note**

Specifications and the design are subject to possible modifications without notice, due to improvements.

Furnished Parts

AM loop antenna 1
 FM wire antenna 1
 Dry cell batteries (AA size IEC R6) 2
 Remote control 1
 Warranty Card 1
 Operating instructions


 **Accessories**

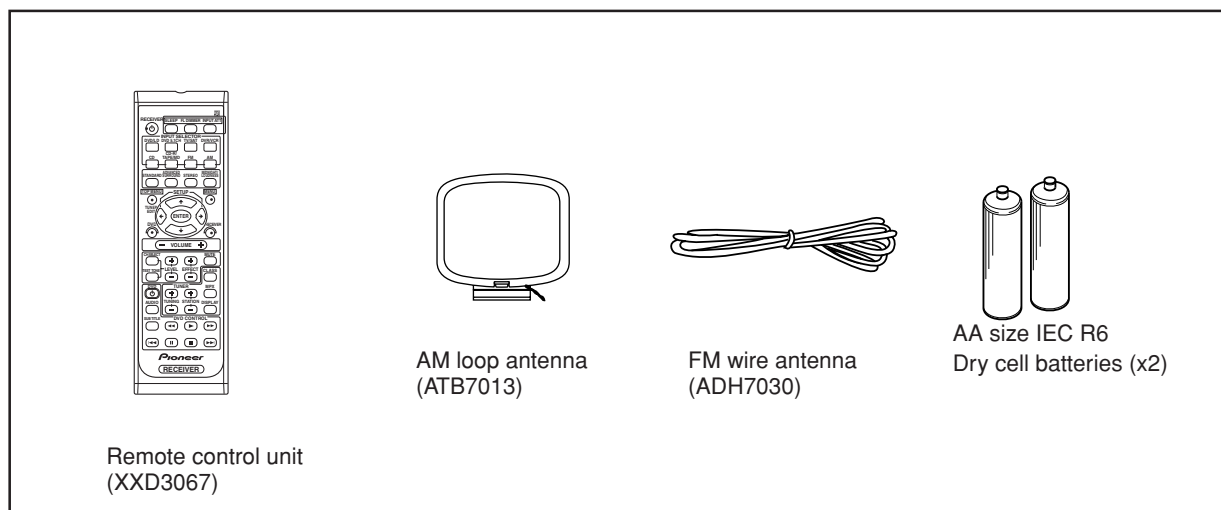

2. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

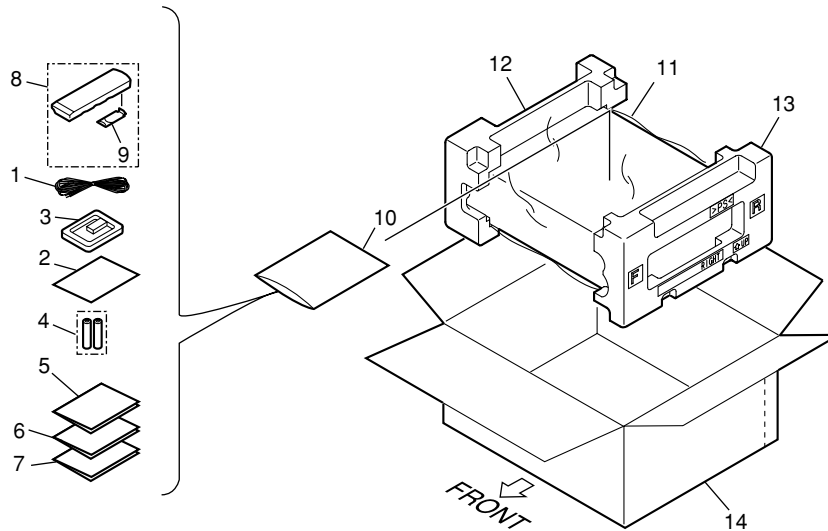

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	FM wire antenna	ADH7030	7	Operating instructions (French, German)	XRC3184
NSP 2	Warranty Card	ARY7065	8	Remote Control Unit	XXD3067
3	AM loop antenna	ATB7013	9	Battery Cover	XZN3139
NSP 4	Dry cell batteries (AA/R6)	VEM1031	NSP 10	Literature Bag	AHG1180
5	Operating instructions (English, Italian)	XRE3094	11	Packing Sheet	AHG7069
6	Operating instructions (Dutch, Spanish)	XRC3183	12	Left Pad V2	XHA3149
			13	Right Pad V2	XHA3150
			14	Packing Case	See Contrast table(2)


(2) CONTRAST TABLE

VSX-415-K/MYXJ and VSX-415-S/MYXJ are constructed the same except for the following :


Mark	No.	Description	VSX-415-K/MYXJ	VSX-415-S/MYXJ
	14	Packing Case	XHD3484	XHD3485

2.2 EXTERIOR

A
B
C
D
E
F

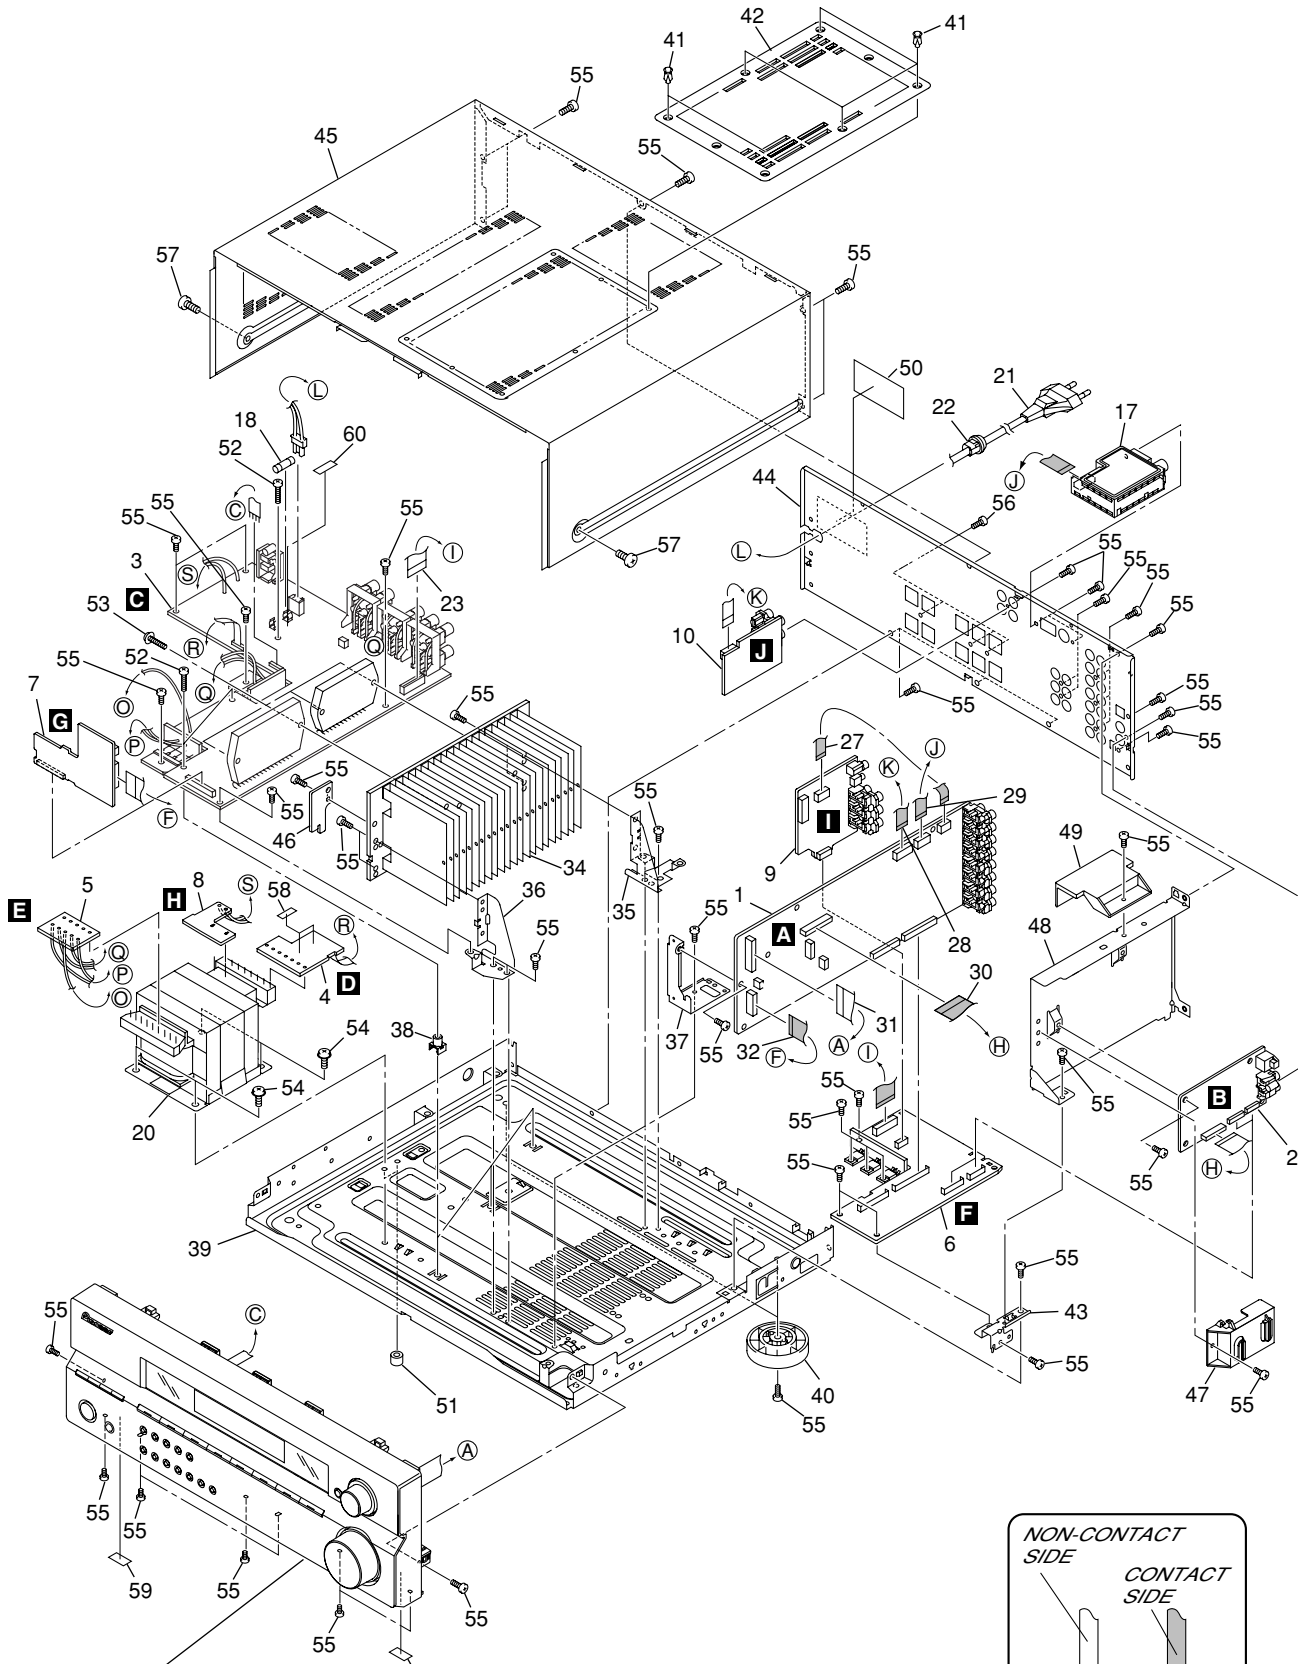

Refer to "2.3 FRONT PANEL SECTION".

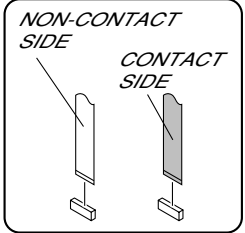

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	MAIN Assy	XWK3117	32	J35 19P F.F.C/30V	XDD3101
2	DSP Assy	AWX8418	33	
3	AMP & PRIMARY Assy	XWZ3783	NSP 34	Heatsink 0.8	ANH7110
4	TRANS2 Assy	XWZ3810	35	Heat Sink Angle R	ANG7252
5	TRANS3 Assy	XWZ3813	36	Heat Sink Angle F	ANG7251
6	REGULATOR Assy	XWZ3825	37	PCB Angle R5	XNG3073
7	AMP INPUT Assy	XWZ3802	38	PCB Mold	AMR2533
8	TRANS1 Assy	XWZ3806	NSP 39	Under Base R6	XNA3012
9	VIDEO Assy	XWZ3903	40	Insulator	See Contrast table (2)
10	5.1CH Assy	XWZ3914	41	Push Rivet	See Contrast table (2)
11		42	Top Cover	See Contrast table (2)
12		43	REG Support R6	XNG3093
13		44	Rear Panel	XNC3329
14		45	Bonnet	See Contrast table(2)
15		NSP 46	HOLDER Assy	XWZ3820
16		47	FFC Holder R6	XMR3072
17	FM/AM TUNER UNIT	AXX7170	48	Shield A R6	XNG3068
⚠ 18	FU1 Fuse (T2.5A)	REK1026	49	FFC Cover R6	XMR3060
19		NSP 50	N Label	See Contrast table(2)
⚠ 20	T1 Power Transformer	XTS3072	NSP 51	Spacer	AEB7092
⚠ 21	AC Power Cord	VDG1077	52	Screw	BBZ30P200FTC
22	Cord Stopper	CM-22B	53	Screw 3x23	XBA3012
23	J36 23P F.F.C/30V	XDD3102	54	Screw	FBT40P080FNI
24		55	Screw	BBZ30P080FTC
25		56	Screw	BBT30P100FCC
26		57	Screw	See Contrast table(2)
27	J33 13P F.F.C/30V	XDD3150	NSP 58	ICP Label	XAX3319
28	J48 8P F.F.C/30V	XDD3151	59	Rubber Sheet	AEB1111
29	J34 11P F.F.C/30V	XDD3149	NSP 60	Fuse Card	AAX7277
30	J43 19P F.F.C/30V	XDD3126			
31	J31 17P F.F.C/30V	XDD3118			

(2) CONTRAST TABLE

VSX-415-K/MYXJ and VSX-415-S/MYXJ are constructed the same except for the following :

Mark	No.	Description	VSX-415-K/MYXJ	VSX-415-S/MYXJ
	40	Insulatort	AMR7198	PNW2766
	41	Push Rivet	AEC7025	Not used
	41	Push Rivet S	Not used	XEC3026
	42	Top Cover R4UL	XME3004	Not used
	42	Top Cover R5S	Not used	XME3006
	45	Bonnet K U V1	XZN3150	Not used
	45	Bonnet S U V1	Not used	XZN3151
NSP	50	N Label 415K/MY	XAL3218	Not used
	57	Screw	FBT40P080FTB	FBT40P080FNI

2.3 FRONT PANEL

1

2

3

4

A




B

C

D

E

F

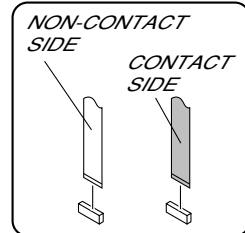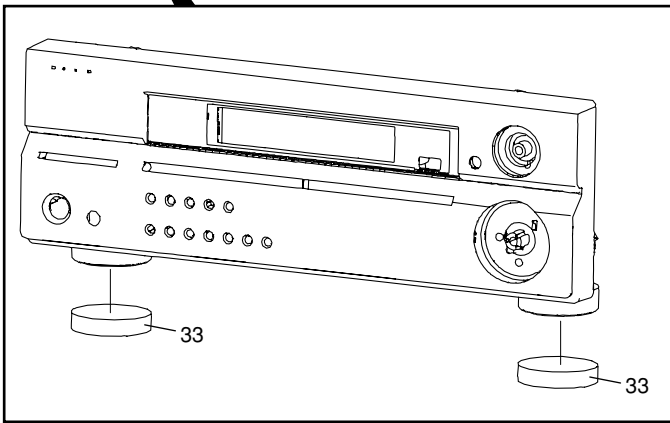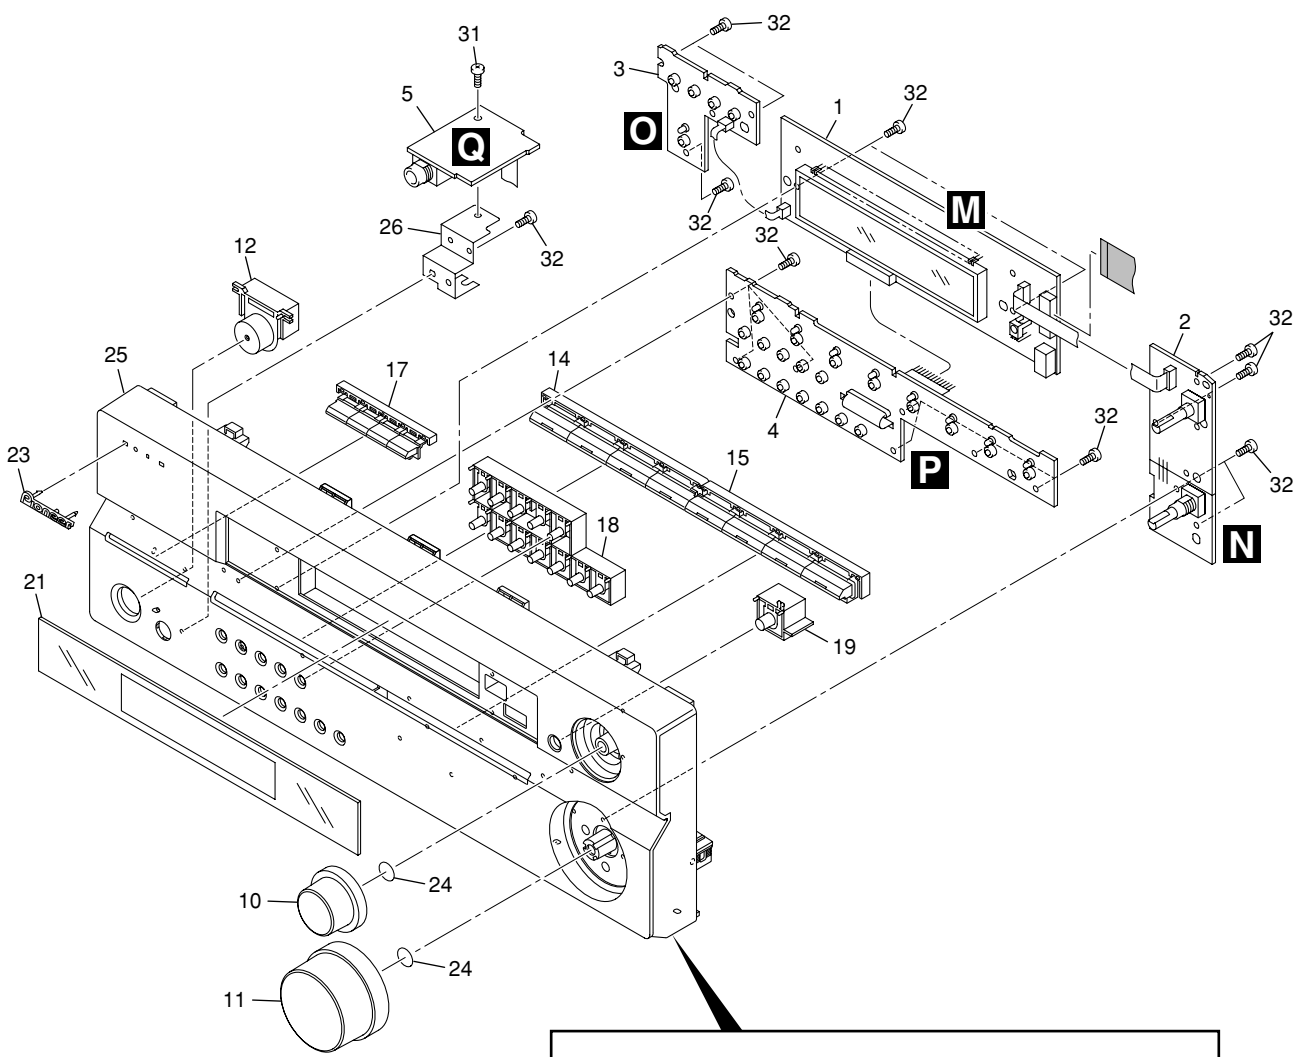

1

2

3

4

5 6 7 8

(1) FRONT PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	FRONT DISPLAY ASSY	XWZ3908	21	D Panel 415 B	XAK3480
2	R. ENCODER Assy	XWZ3920	22	
3	POWER SW & KEY Assy	XWZ3917	23	Pioneer Badge	See Contrast table(2)
4	FRONT KEY Assy	XWZ3912	NSP 24	C Ring DIM 8.1	XBH3016
5	H.P. Assy	XWZ3923	25	FRT Panel	See Contrast table(2)
6		26	Earth Plate HP V2	XNG3131
7		27	
8		28	
9		29	
10	JOG Knob	See Contrast table(2)	30	
11	VOL Knob	See Contrast table(2)	31	Screw	BBZ30P080FTC
12	Standby BTN	See Contrast table(2)	32	Screw	BPZ30P100FTC
13		NSP 33	Gold Foil Label	See Contrast table(2)
14	FUNC BTN L	See Contrast table(2)			
15	FUNC BTN R	See Contrast table(2)			
16				
17	TUNER BTN	See Contrast table(2)			
18	Sub BTN	See Contrast table(2)			
19	JOG BUTTON	See Contrast table(2)			
20				


(2) CONTRAST TABLE


VSX-415-K/MYXJ and VSX-415-S/MYXJ are constructed the same except for the following :

Mark	No.	Description	VSX-415-K/MYXJ	VSX-415-S/MYXJ
	10	JOG Knob V1K	XAB3038	Not used
	10	JOG Knob V1S	Not used	XAB3042
	11	VOL Knob V1K	XAB3039	Not used
	11	VOL Knob V1S	Not used	XAB3043
	12	Standby BTN 515K	XAD3202	Not used
	12	Standby BTN 515S	Not used	XAD3203
	14	FUNC BTN 515K L	XAD3206	Not used
	14	FUNC BTN 515S L	Not used	XAD3210
	15	FUNC BTN 515K R	XAD3207	Not used
	15	FUNC BTN 515S R	Not used	XAD3211
	17	Tuner BTN V2K	XAD3192	Not used
	17	Tuner BTN V2S	Not used	XAD3193
	18	Sub BTN V2K	XAD3198	Not used
	18	Sub BTN V2S	Not used	XAD3199
	19	Jog Button V2K	XAD3204	Not used
	19	Jog Button V2S	Not used	XAD3205
	23	Pioneer Badge	XAM3006	VAM1129
	25	FRT Panel 415K	XMB3187	Not used
	25	FRT Panel 415S	Not used	XMB3188
NSP	33	Gold Foil Label	Not used	XAX3487

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

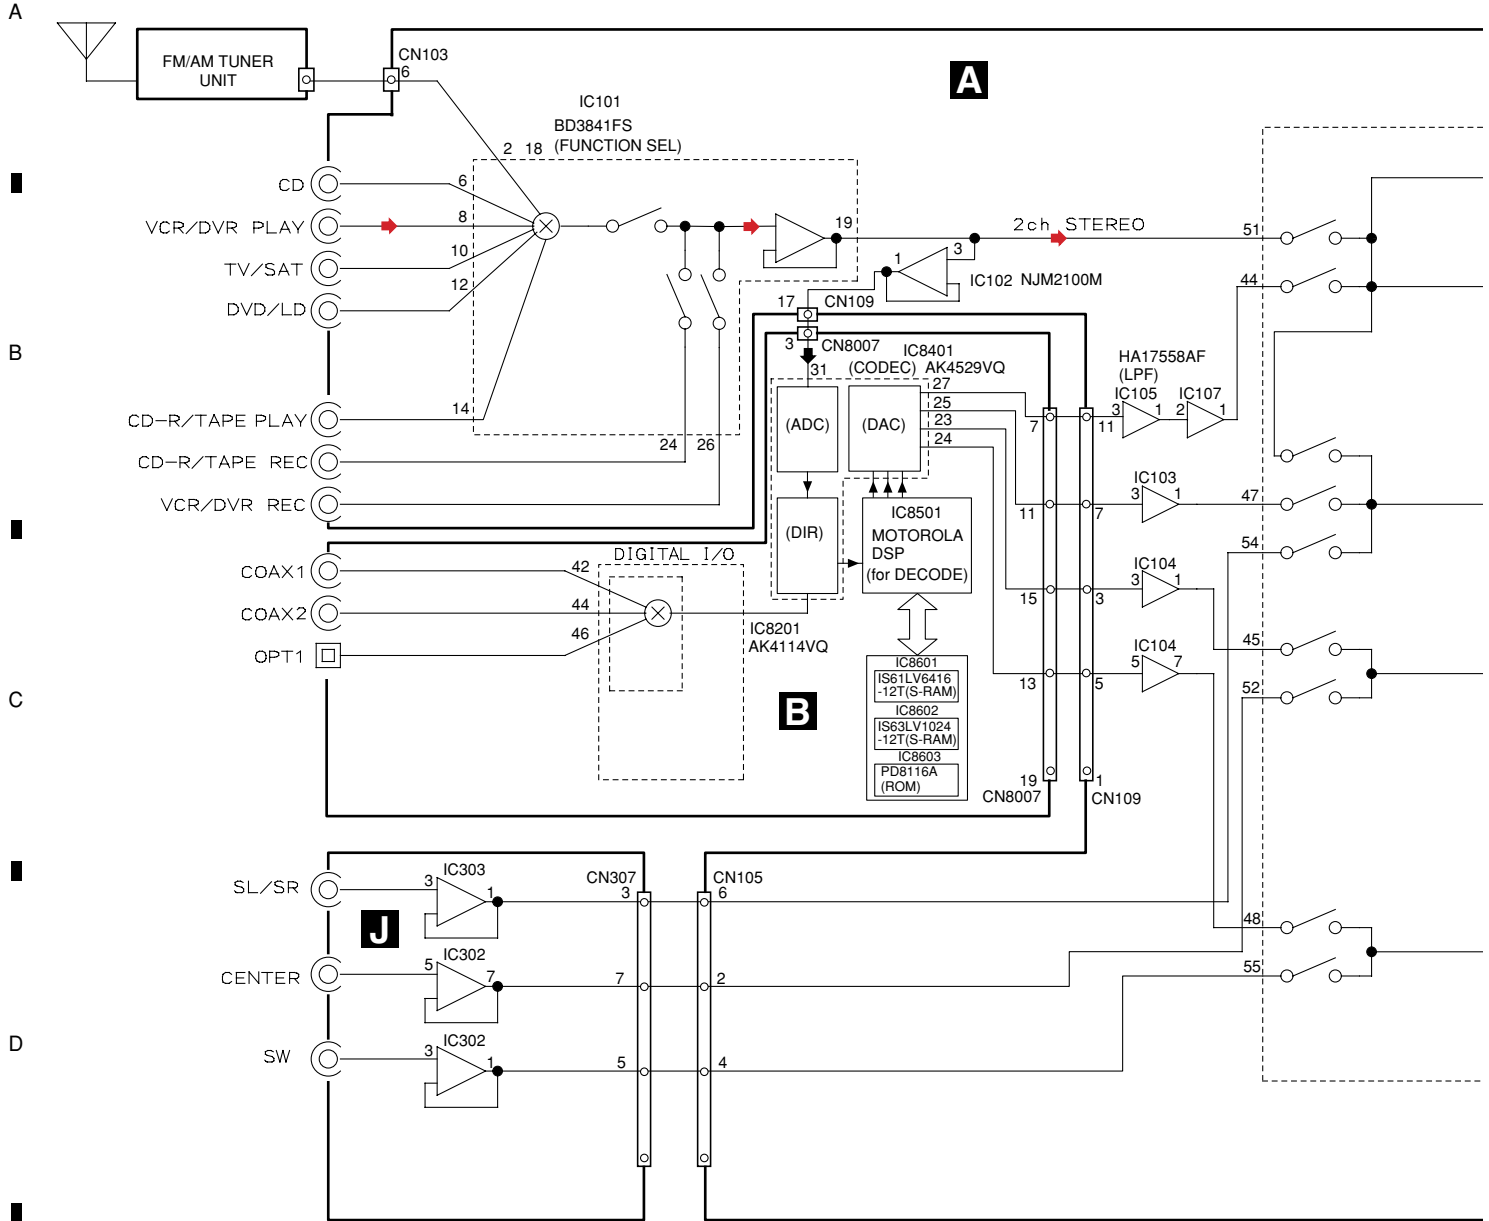

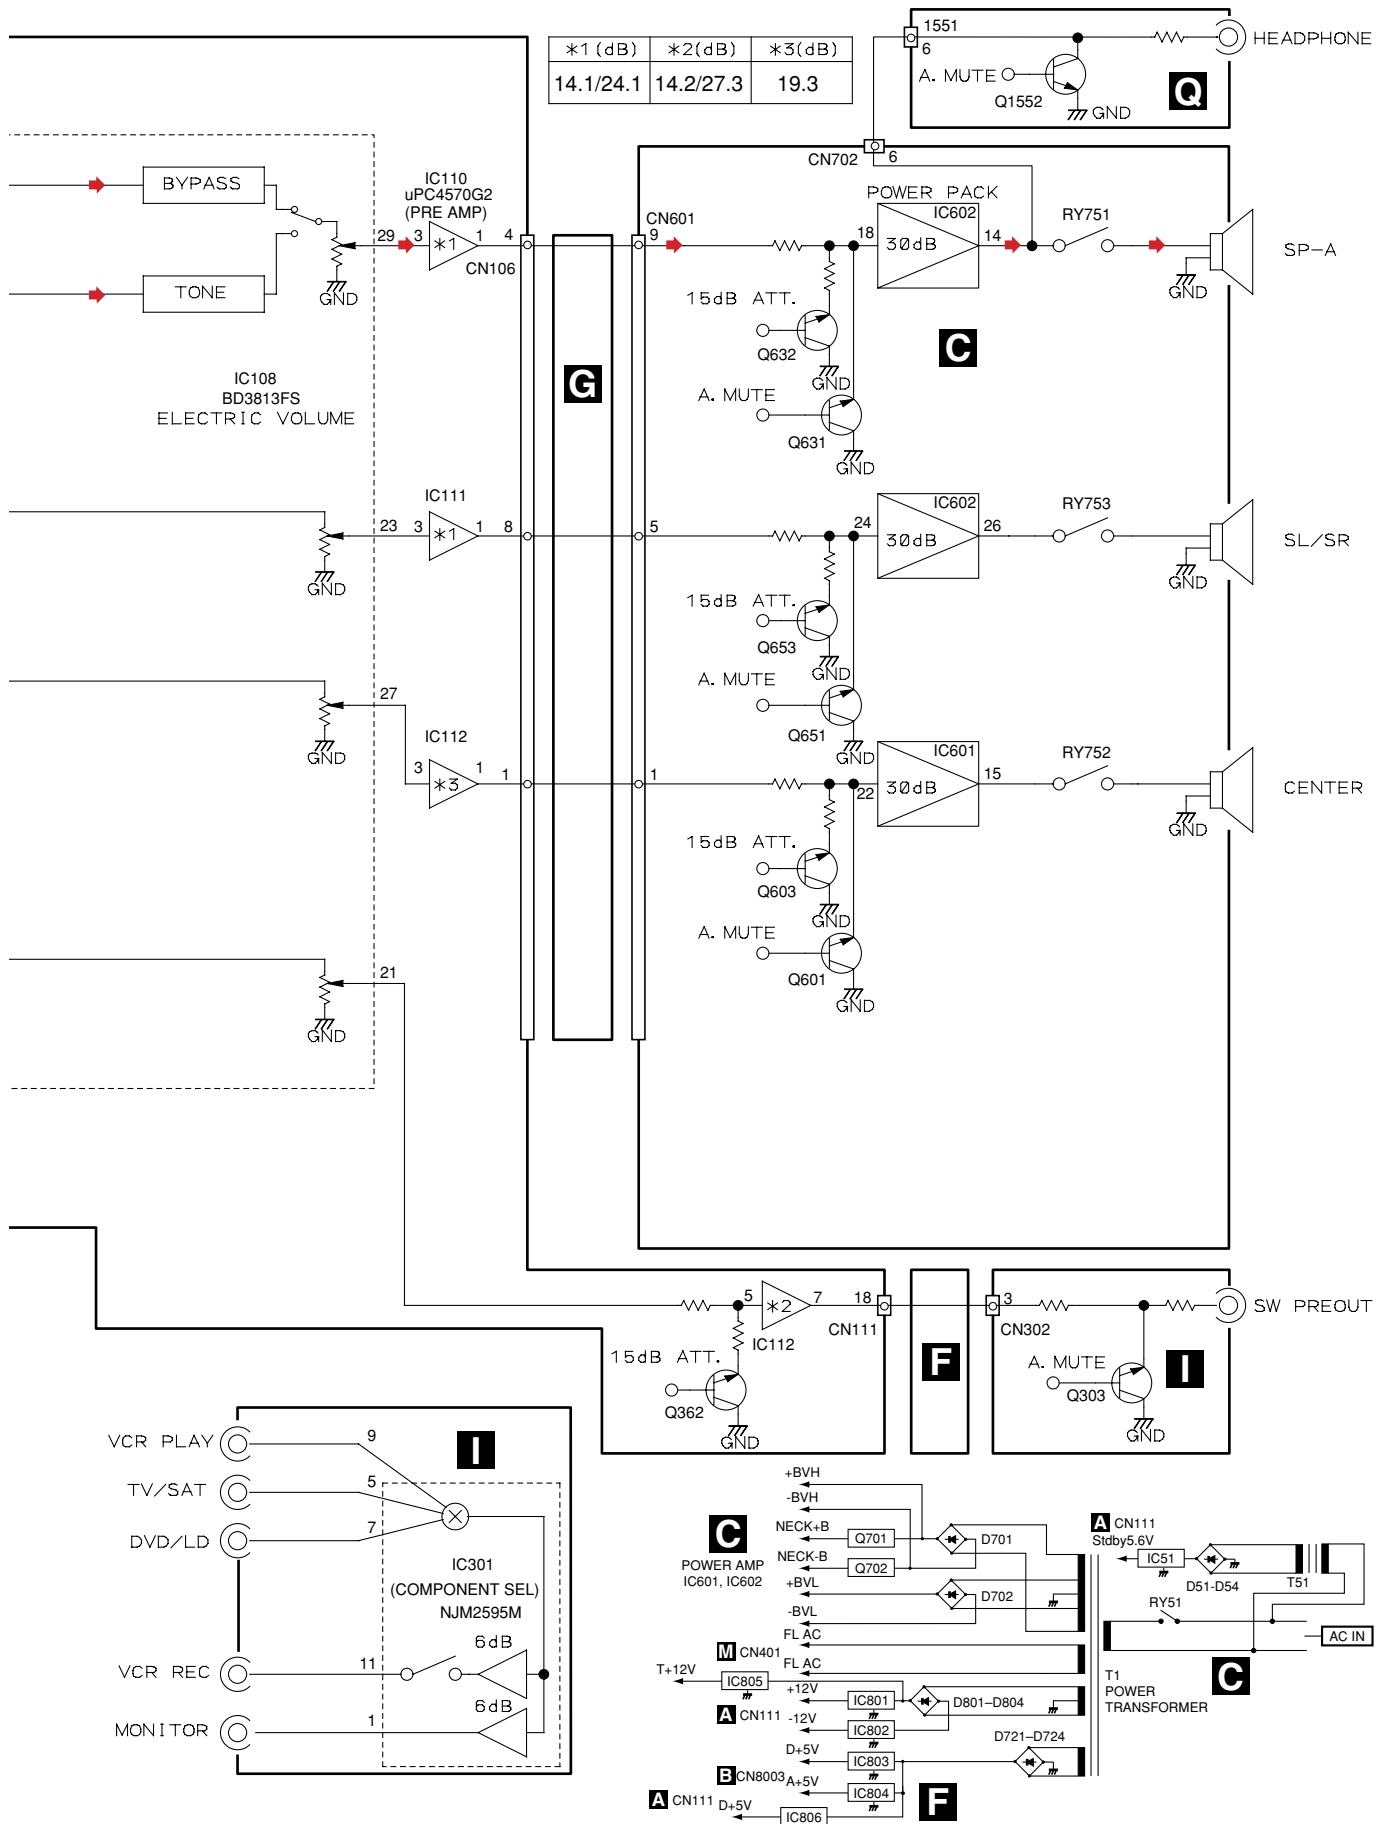

A

B

C


D


E

F

3.2 OVERALL WIRING CONNECTION DIAGRAM

A
B
C
D
E
F

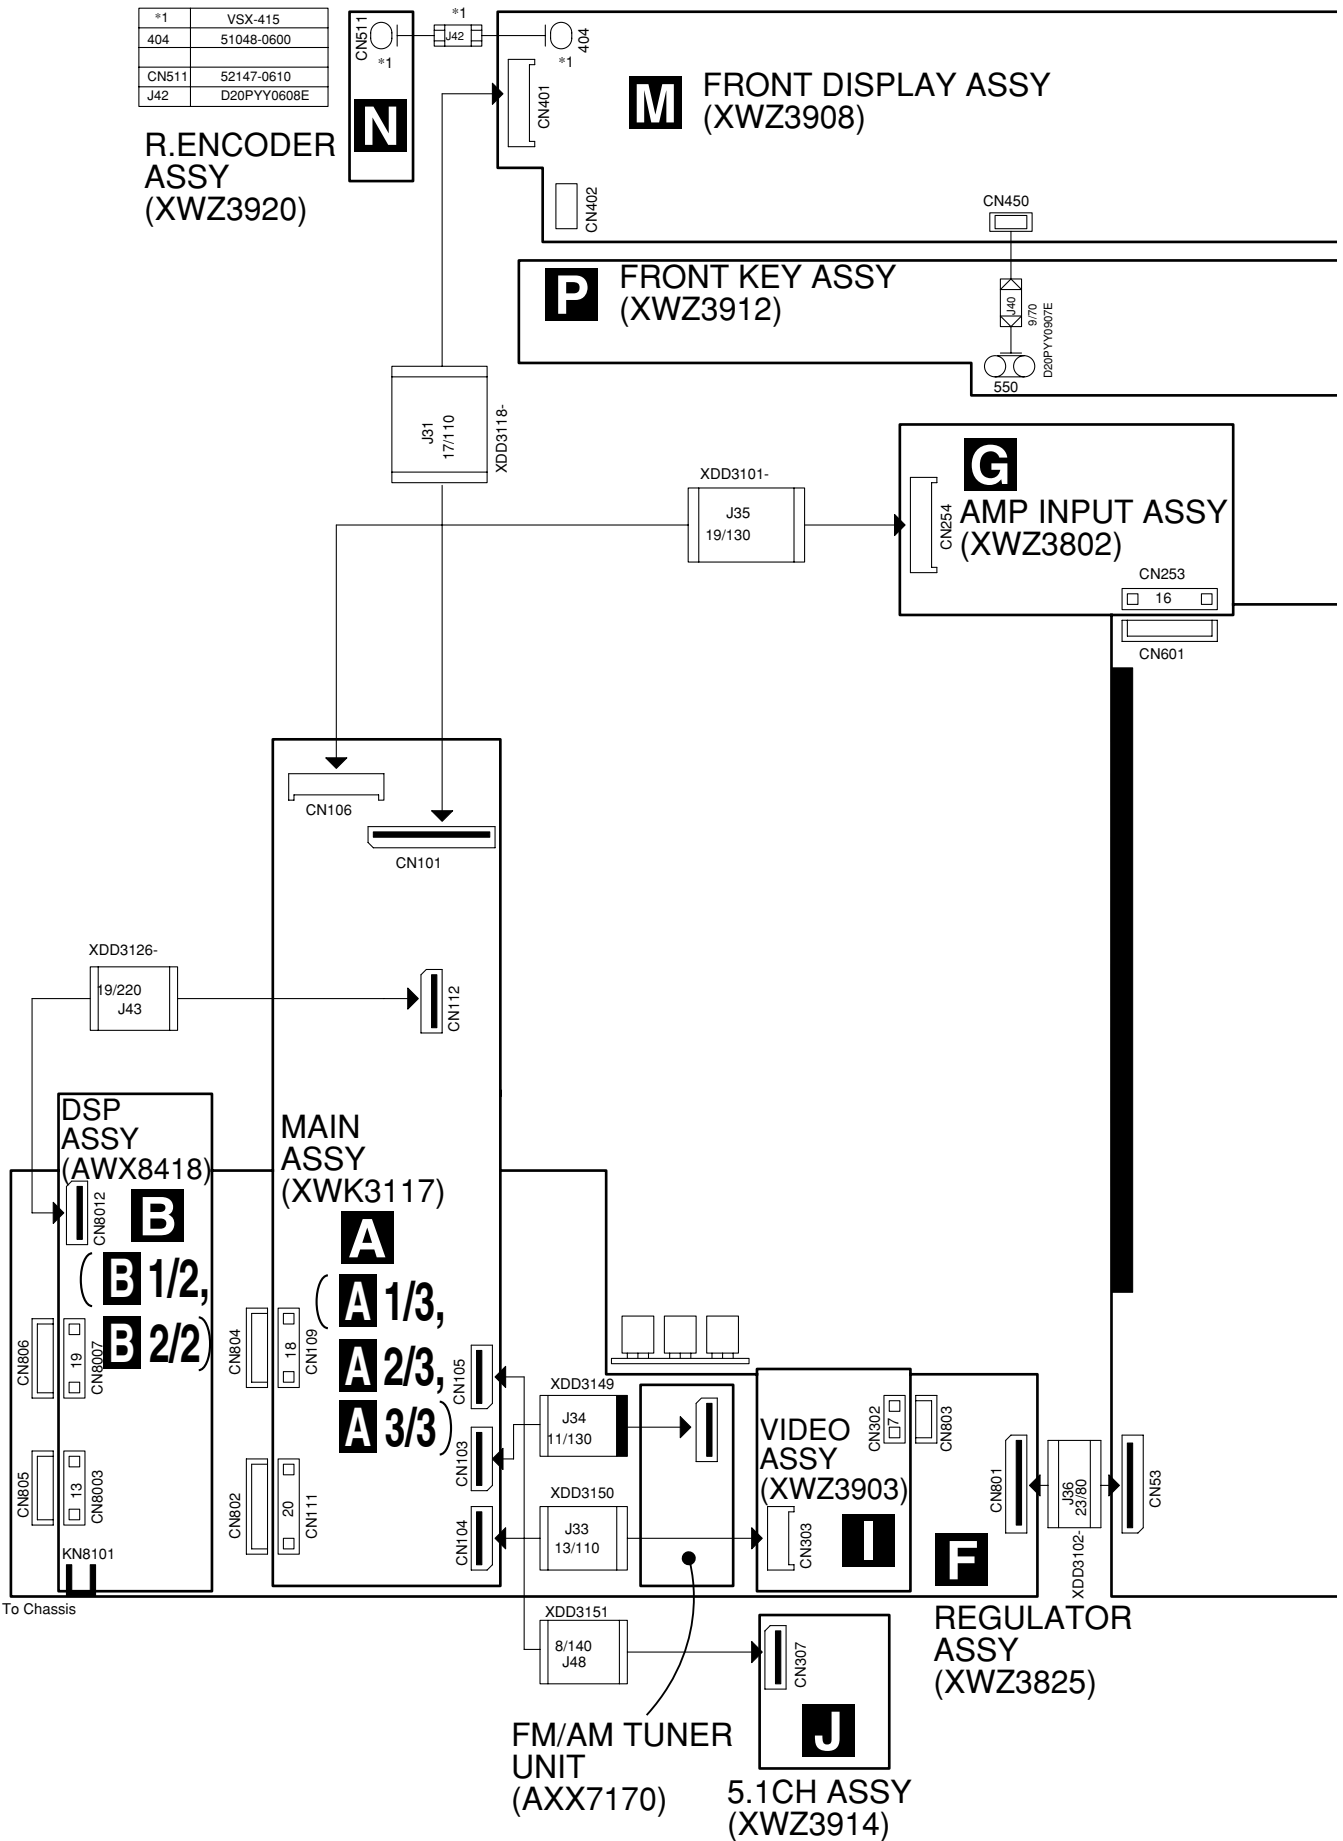

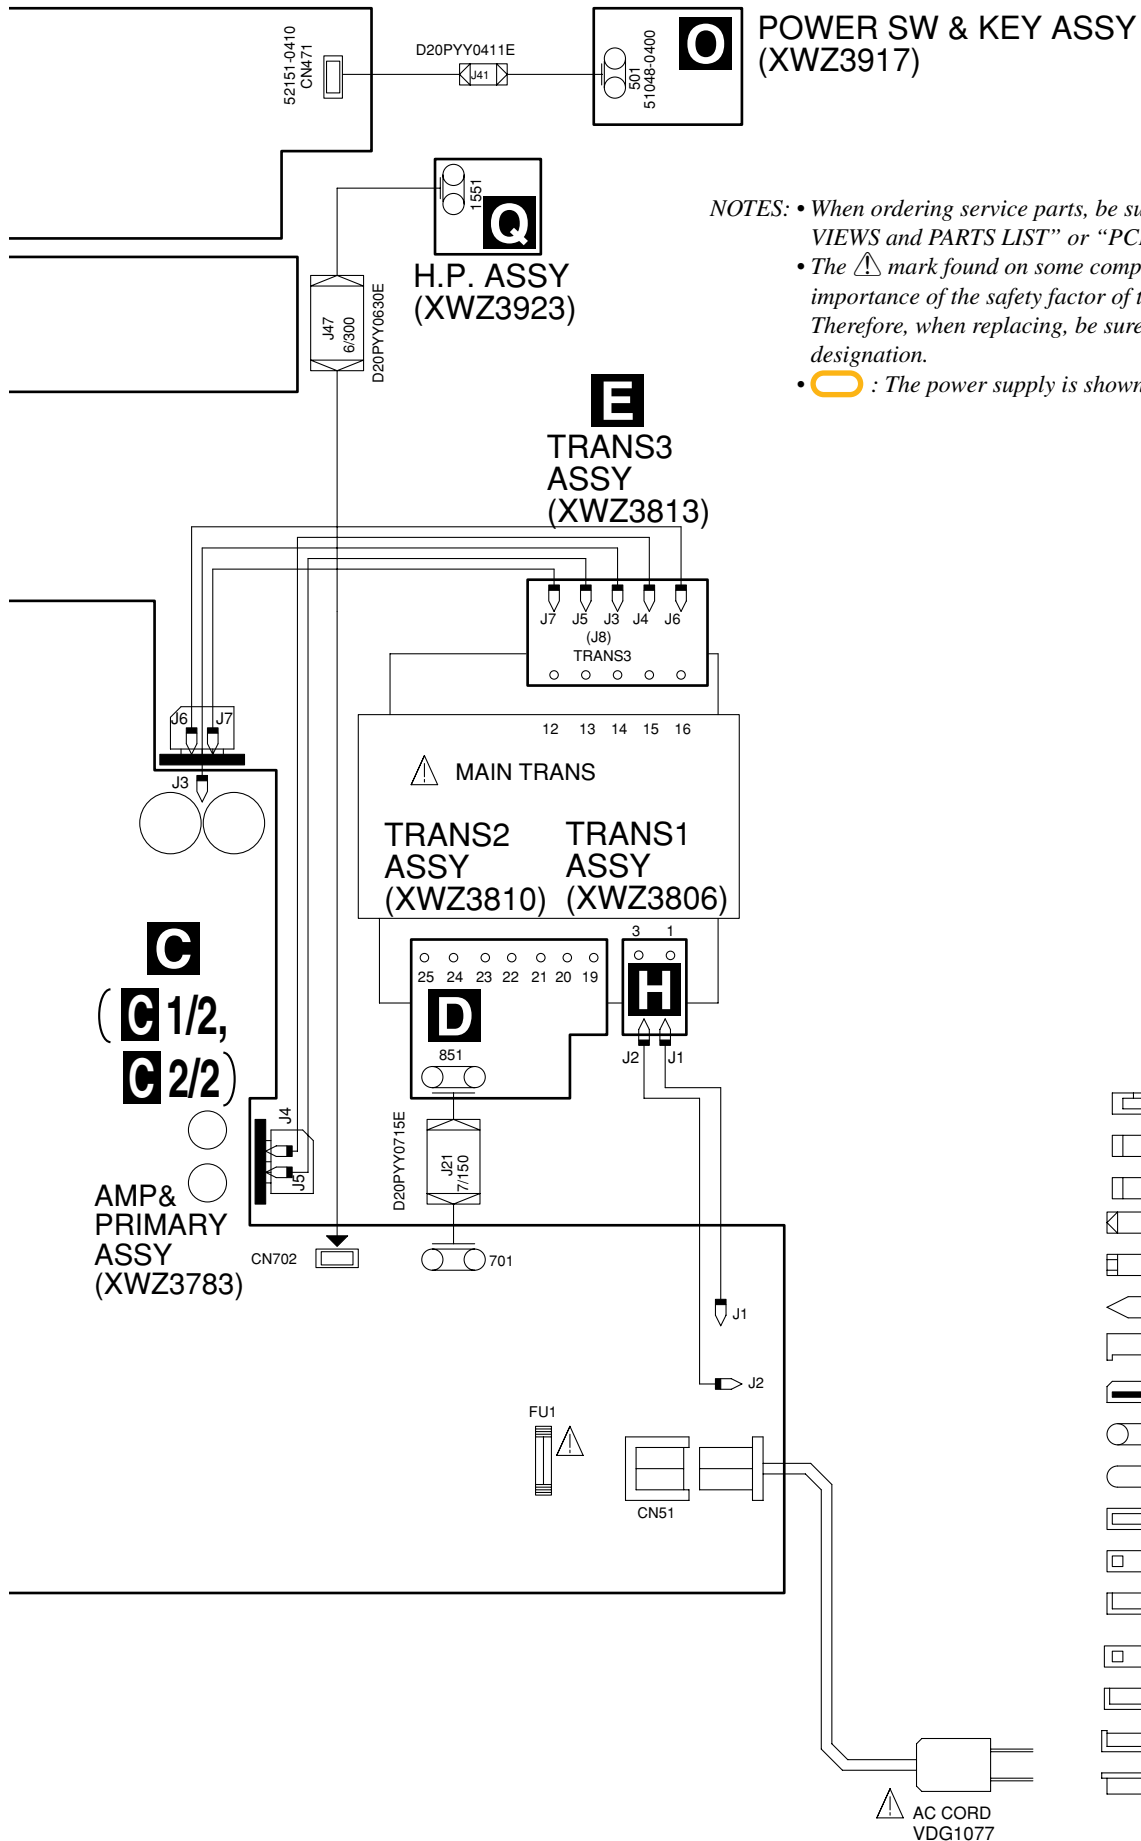

POWER SW & KEY ASSY (XWZ3917)

H.P. ASSY (XWZ3923)


TRANS3 ASSY (XWZ3813)


















TRANS2 ASSY (XWZ3810) TRANS1 ASSY (XWZ3806)

AMP & PRIMARY ASSY (XWZ3783)

AC CORD VDG1077


VSX-415-K

- NOTES:**
- When ordering service parts, be sure to refer to “EXPLODED VIEWS and PARTS LIST” or “PCB PARTS LIST”.
 - The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 -  : The power supply is shown with the marked box.


-  B*B-PH-K-S PH CONNECTOR
-  1.25mm FFC
-  1.25mm REVERSE FFC
-  2.0mm FLAT CABLE
-  1.5mm FLAT CABLE
-  BOARD IN
-  1.25mm FFC CONNECTOR(L)
-  1.25mm FFC CONNECTOR
-  2.0mm CABLE HOLDER
-  1.5mm CABLE HOLDER
-  2.0mm WIRE TRAP
-  KP200TA**L 2.0mm BOARD to BOARD
-  KM200TA** 2.0mm BOARD to BOARD
-  AKP7070, AKP7073 1.25mm BOARD to BOARD
-  AKP7059, AKP7062 1.25mm BOARD to BOARD
-  AC CODE SOCKET
-  AC CODE CONNECTOR

3.3 MAIN ASSY (1/3)

A 1/3 MAIN ASSY(XWK3117)

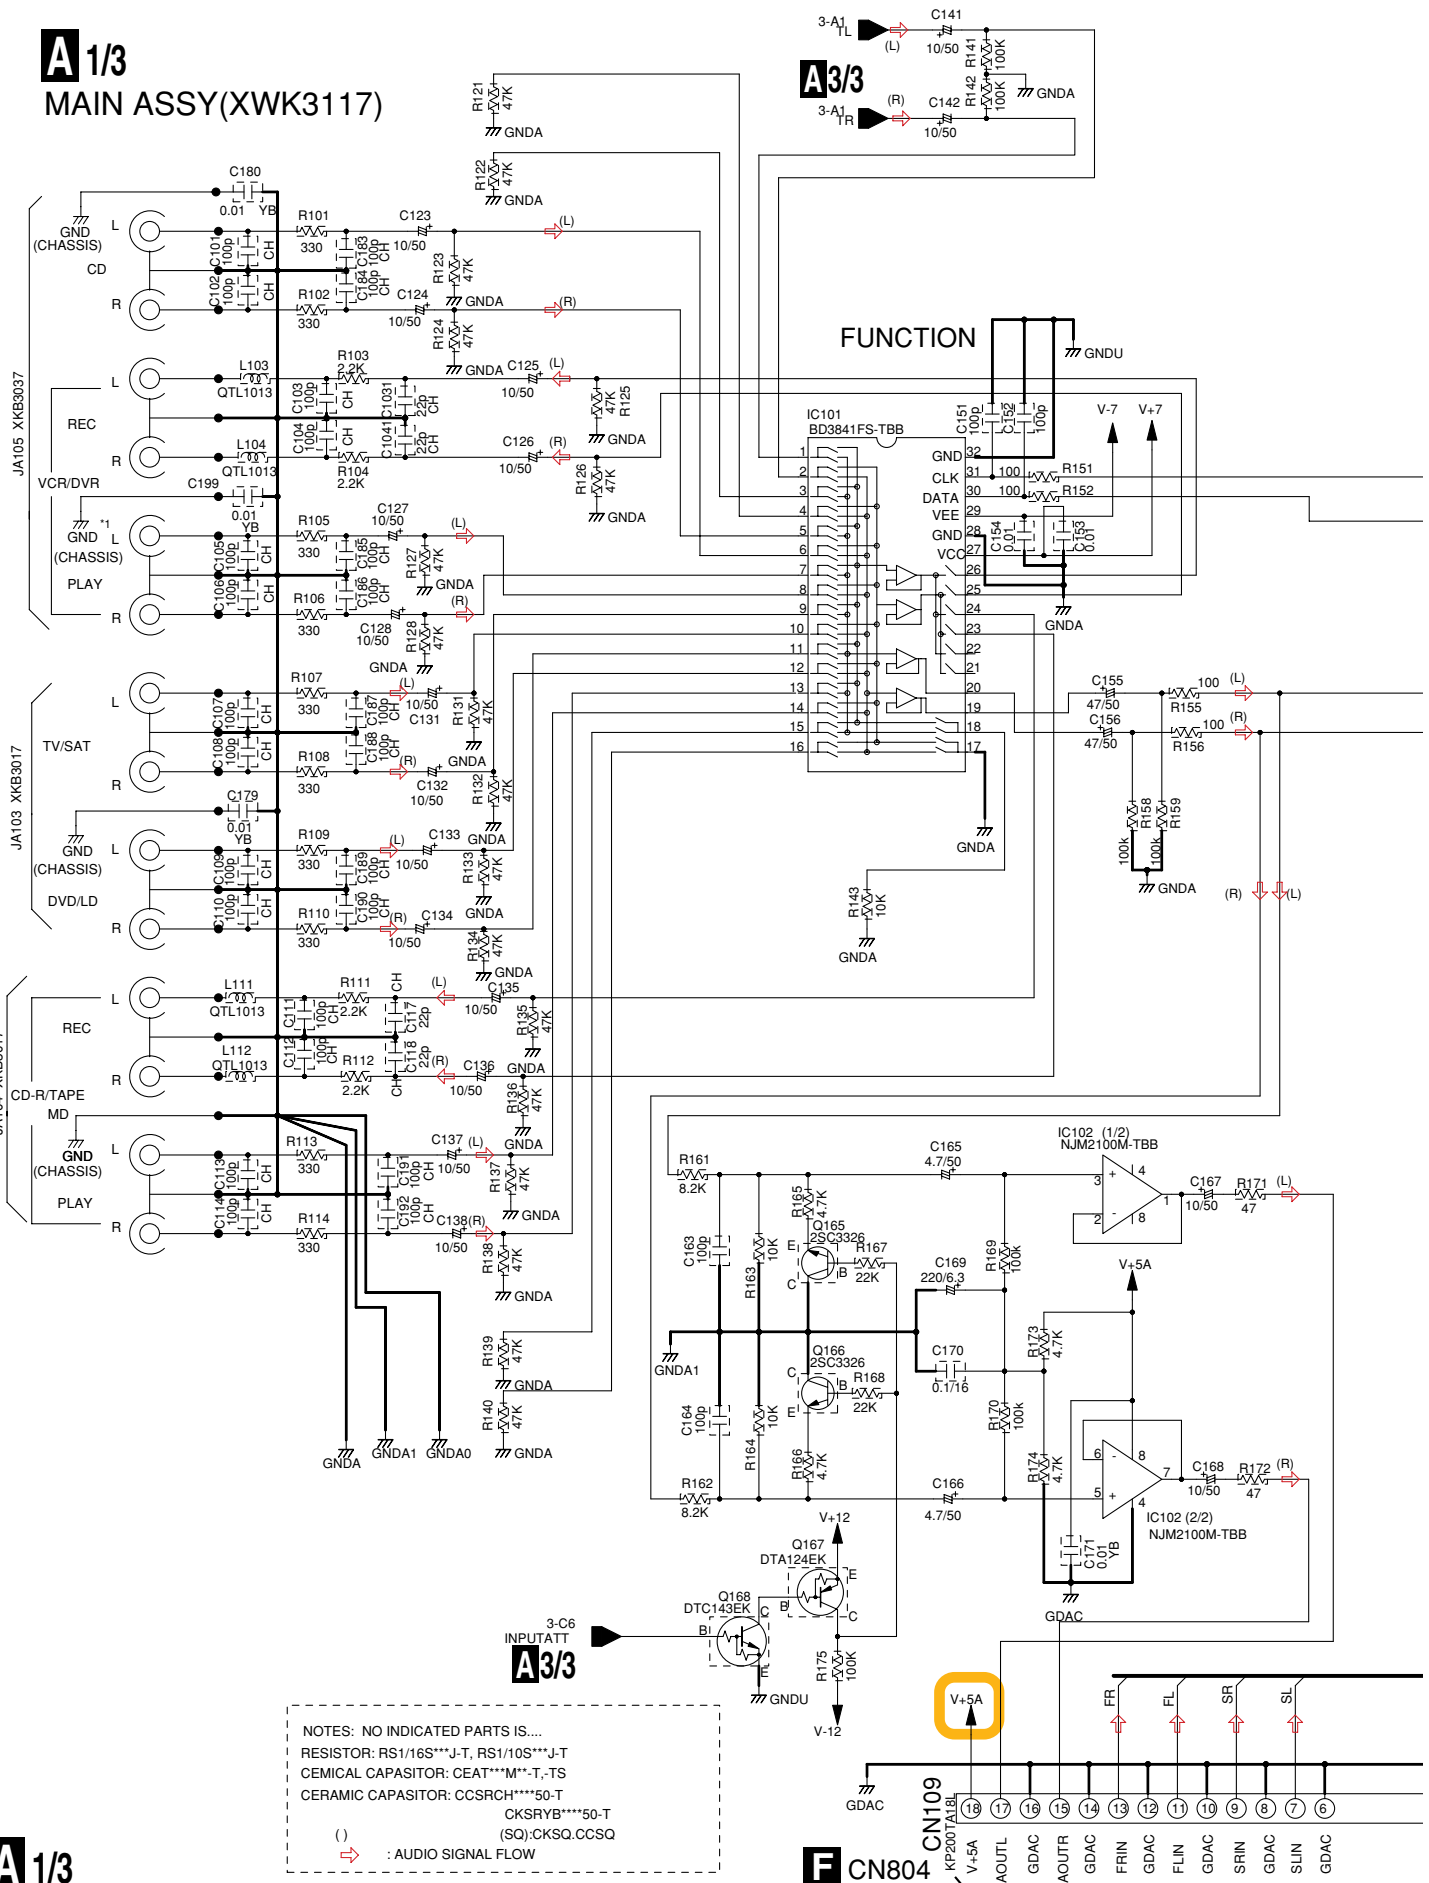

Low Pass Filter

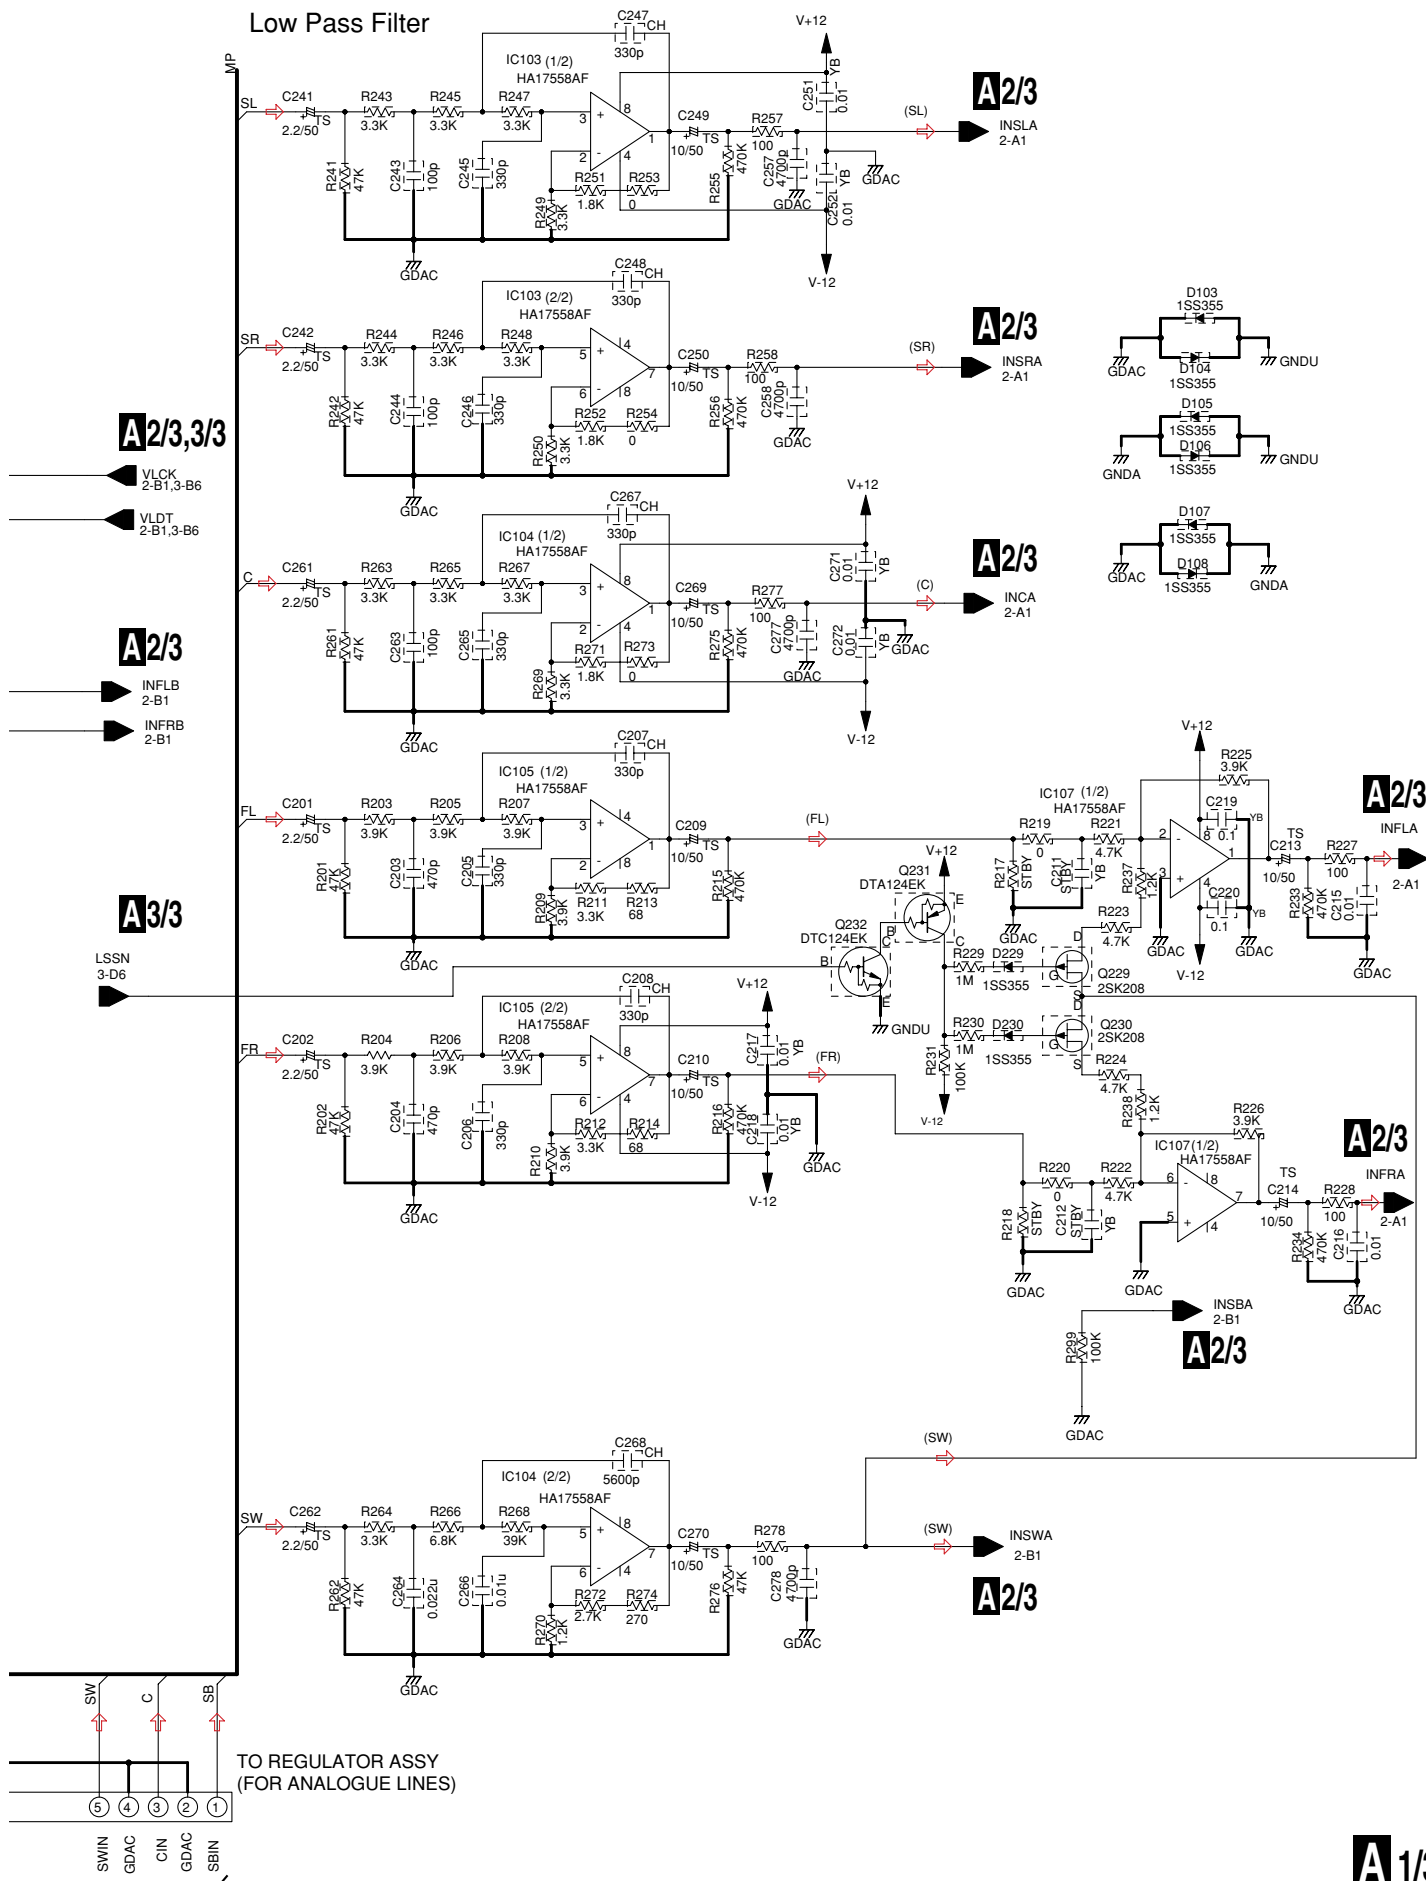

A2/3,3/3

A2/3

A3/3

A2/3

A2/3

A2/3

A2/3

A2/3

A2/3


A2/3

A1/3

3.4 MAIN ASSY (2/3)

1 2 3 4


A 2/3 MAIN ASSY(XWK3117)

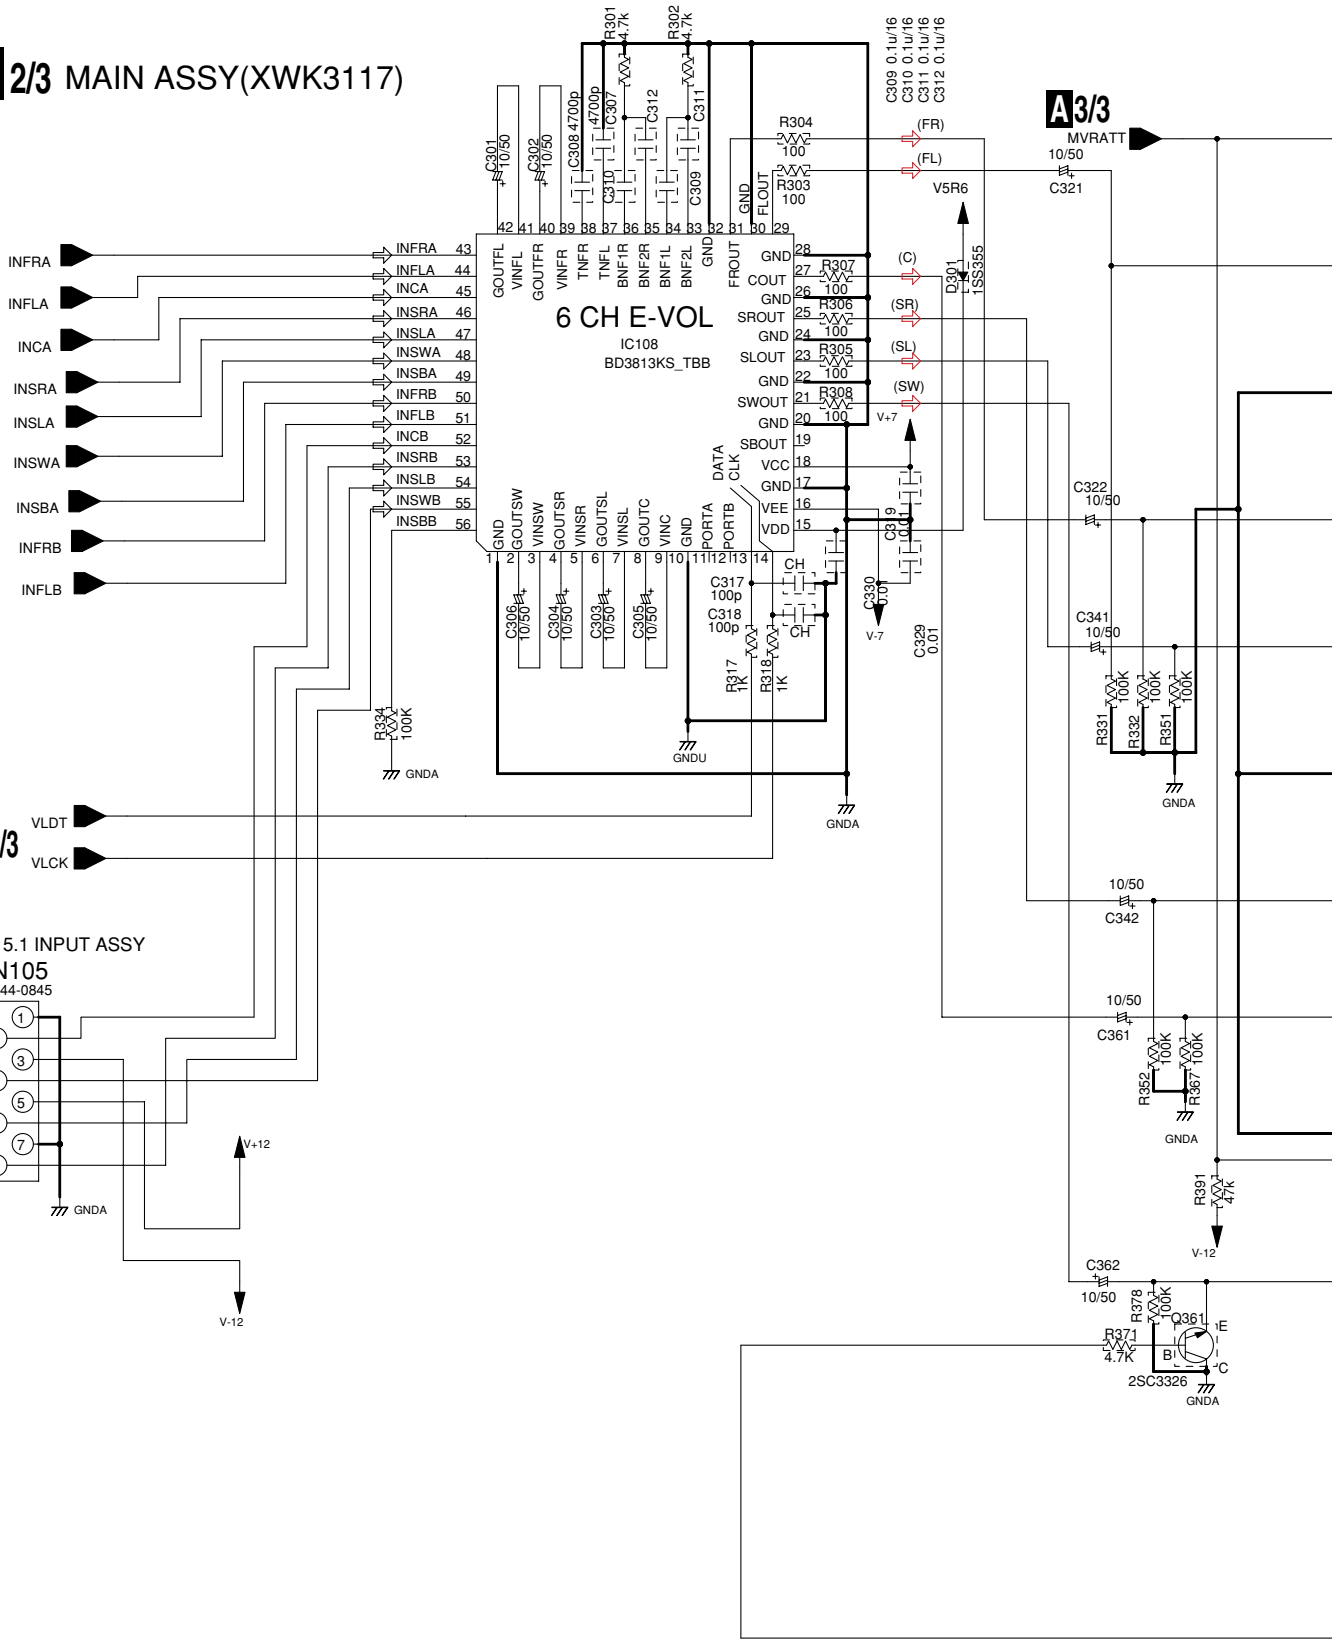

A1/3

A1/3,3/3

TO 5.1 INPUT ASSY
CN105
52044-0845

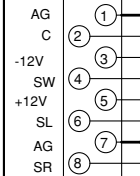

J CN307

NOTE

1.RESISTORS

Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J) ± 5% unless otherwise noted.

2.CAPACITORS

Unit: p-pF or μF unless otherwise noted.
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.
JA:CEJA

⇒ : AUDIO SIGNAL FLOW

A3/3


MVRATT
10/50
C321

A 2/3

1 2 3 4

A3/3

PRE-AMP

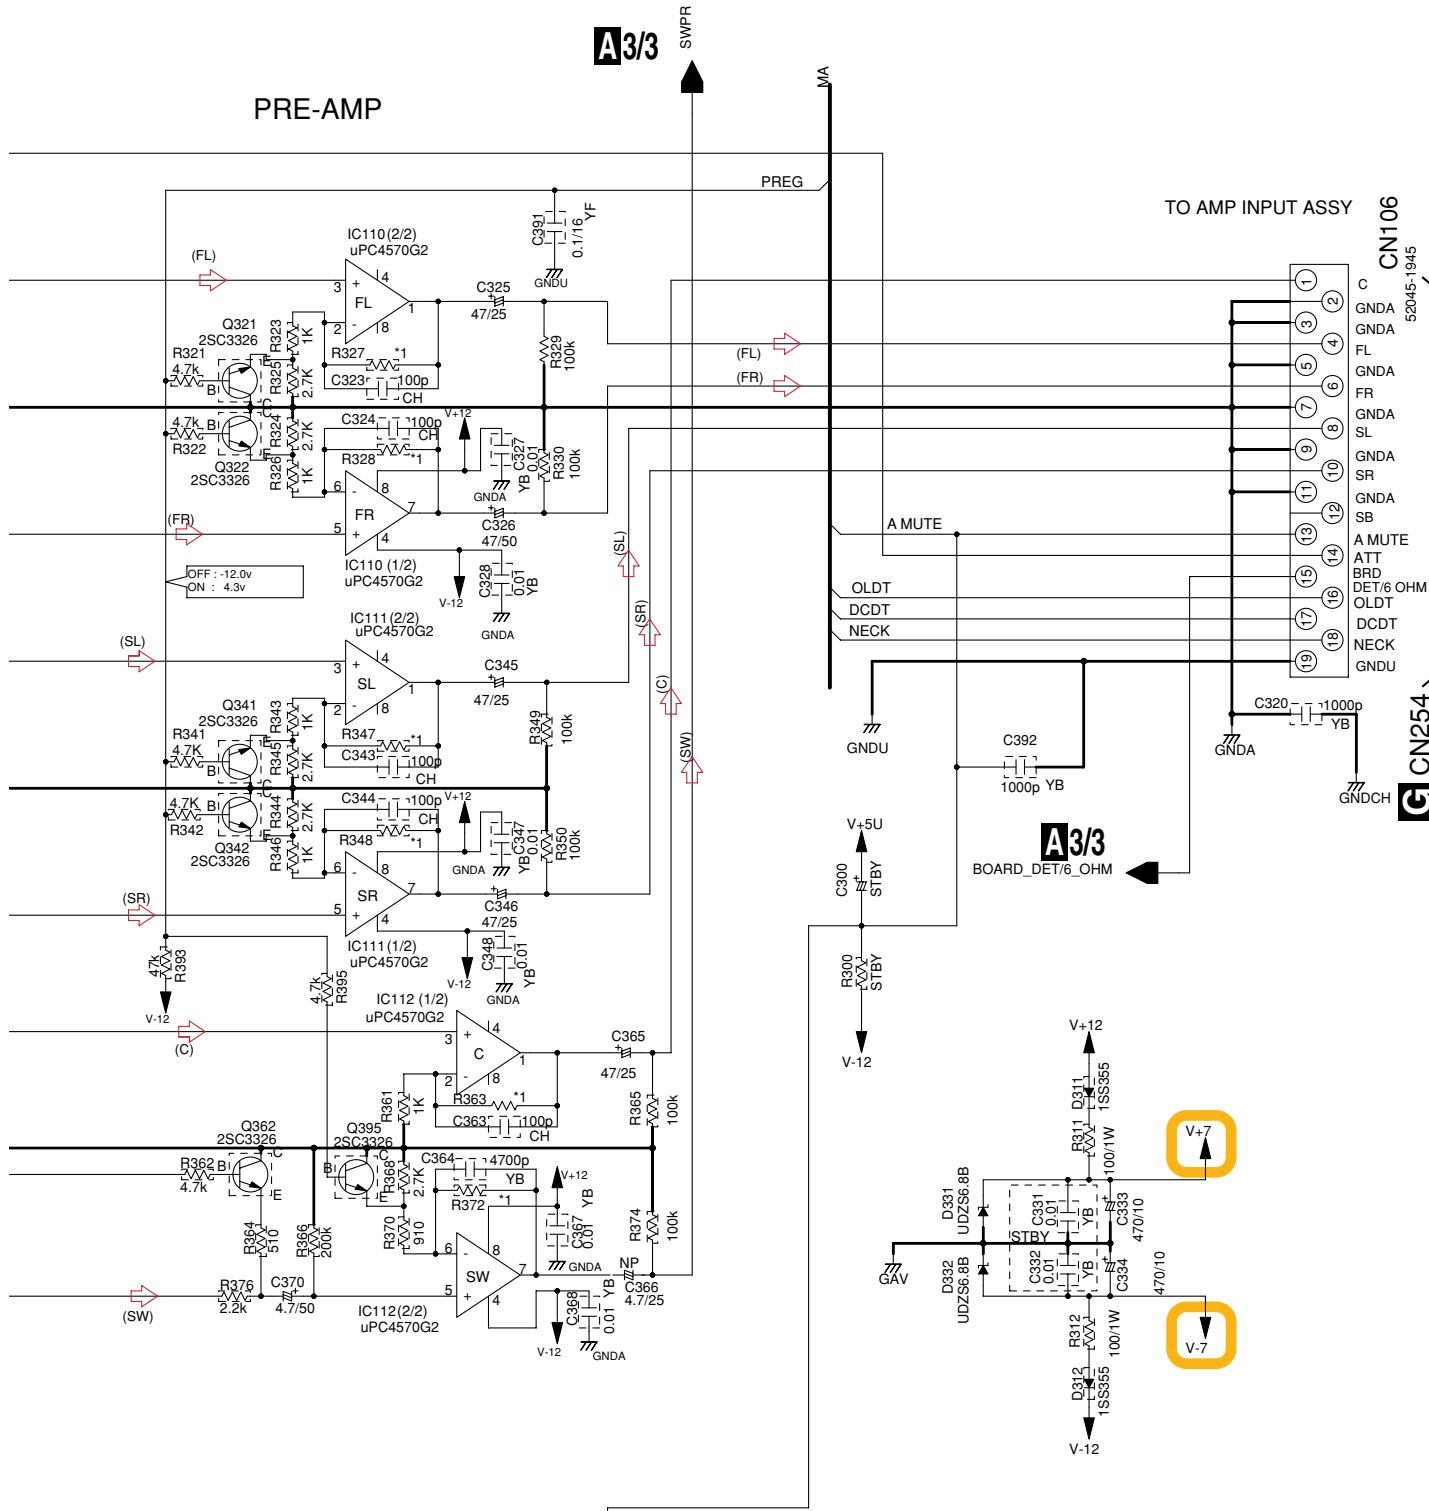

	FRONT, REAR		Center		SW	
*1	R327 R347 (Ohm)	R328 R348 GAIN(dB)	R363 (Ohm)	GAIN(dB)	R372 (Ohm)	GAIN(dB)
	15K	14.1/24.1	8.2K	19.3	15K	14.2/24.9

A 2/3

3.5 MAIN ASSY (3/3)

A
B
C
D
E
F

TO FM/AM
TUNER UNIT


TUNER CE (11)
TUNER DI (10)
TUNER CLK (9)
TUNER DO (8)
GNDT (7)
TL (6)
+9V (5)
TR (4)
YSM (3)
FM COMP (2)
GNDT (1)

TO TUNER ASSY
A1/3

TO VIDEO ASSY
CN104
52044-1345

VIDEO1 (13) V1
VIDEO2 (12) V2
VIDEO3 (11) V3
AMUTE (10) SWDET
SWDET (9) SROUT
SROUT (8) SRIN
SRIN (7) RMC
RMC (6) FUR
FUR (5) 4053A
4053A (4) 4053INH
4053INH (3) SRRXD
SRRXD (2) SRTXD
SRTXD (1)

CN303

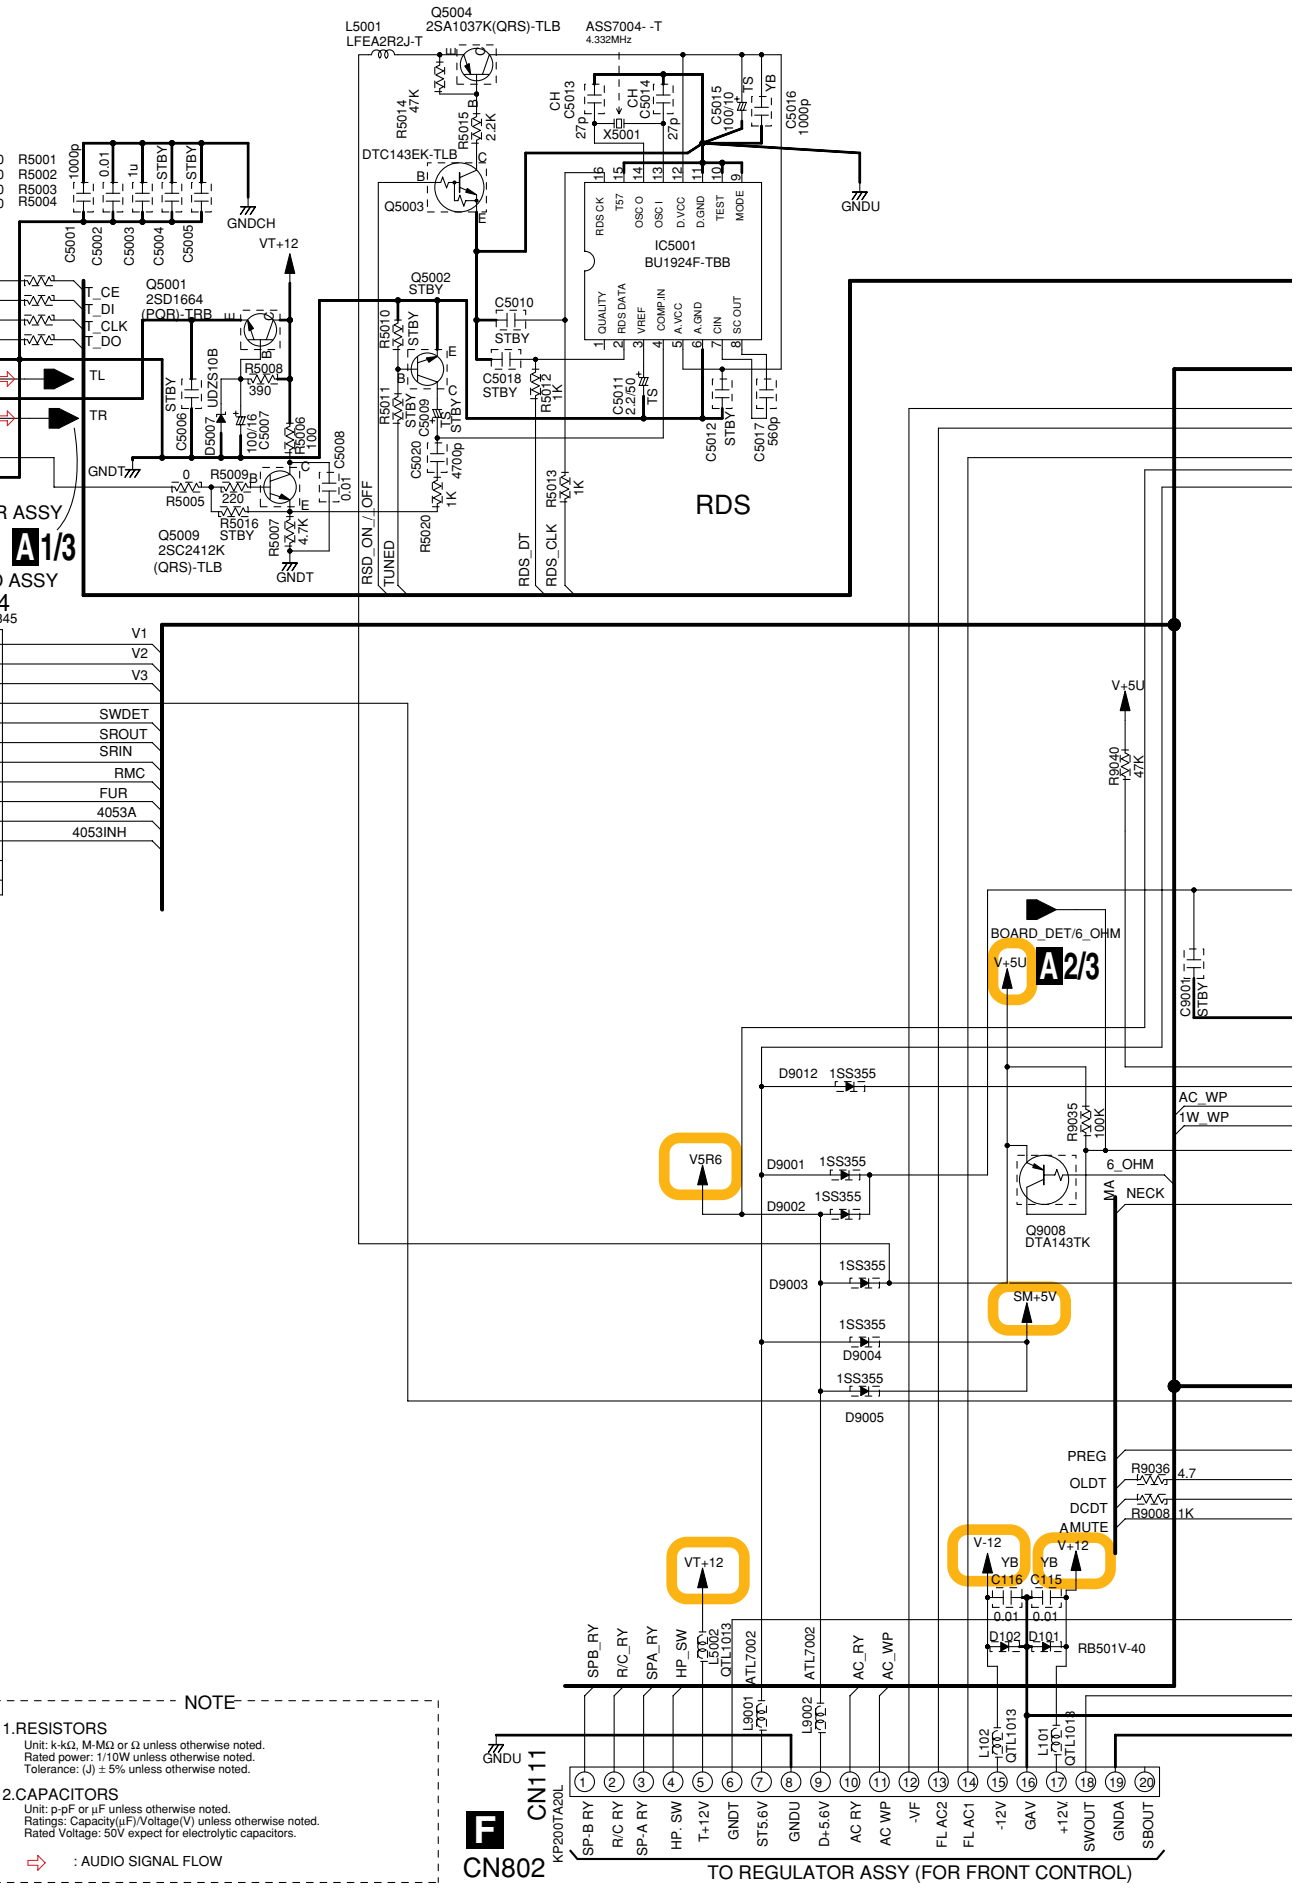

NOTE

1.RESISTORS
Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J) ± 5% unless otherwise noted.

2.CAPACITORS
Unit: p-pF or μF unless otherwise noted.
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.

➡ : AUDIO SIGNAL FLOW

A 3/3

CN802
KP200TA20L


TO REGULATOR ASSY (FOR FRONT CONTROL)

SPB_RY (1)
R/C_RY (2)
SPA_RY (3)
HP_SW (4)
T+12V (5)
GNDT (6)
ST5.6V (7)
GNDU (8)
D+5.6V (9)
AC_RY (10)
AC_WP (11)
-VF (12)
FL AC1 (13)
FL AC2 (14)
-12V (15)
GAV (16)
+12V (17)
SWOUT (18)
GND A (19)
SBOUT (20)

VSX-415-K

K CN401

A 3/3 MAIN ASSY(XWK3117)

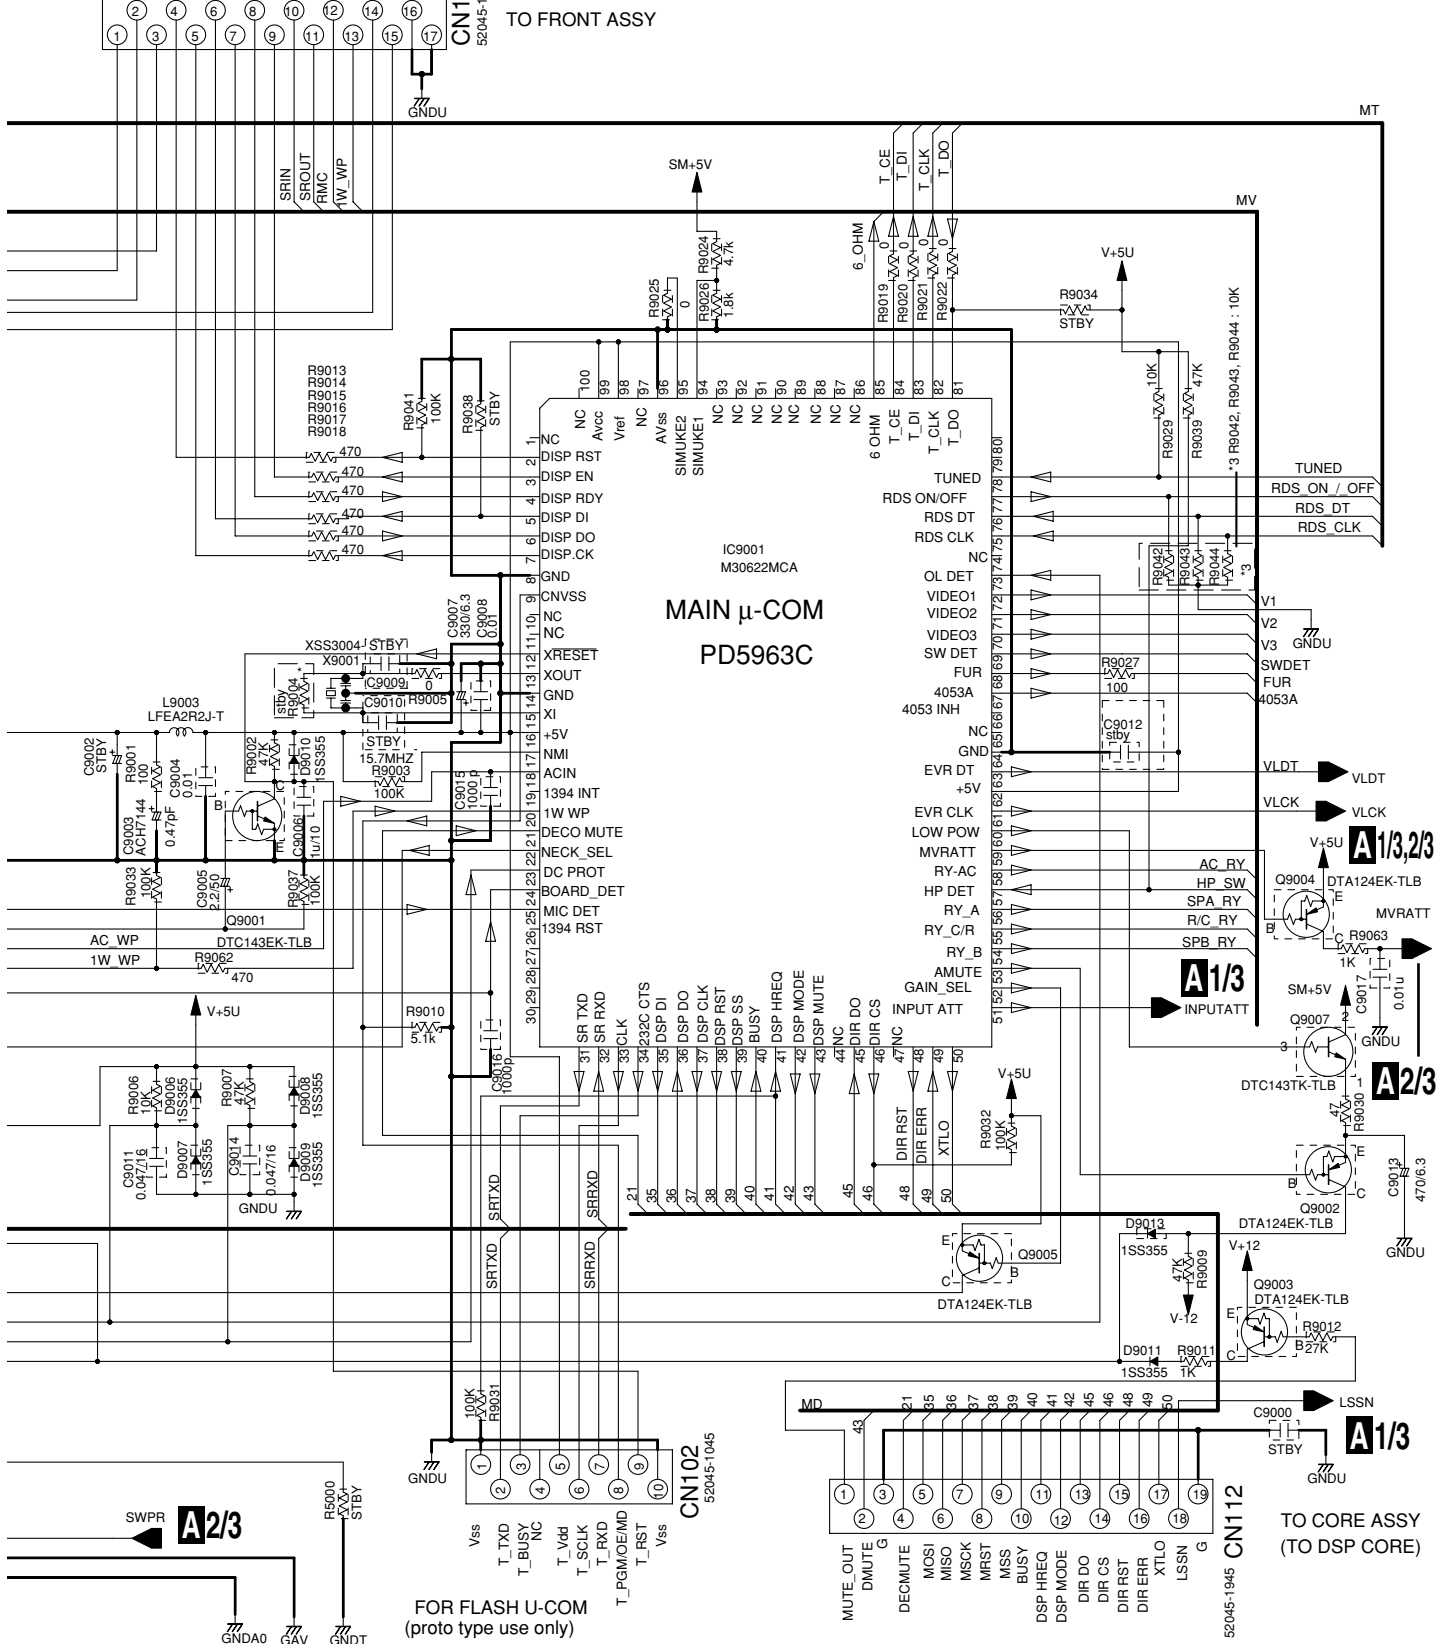


B2/2 CN8012

A 3/3

3.6 DSP ASSY (1/2)


A
B
C
D
E
F

T CN1901

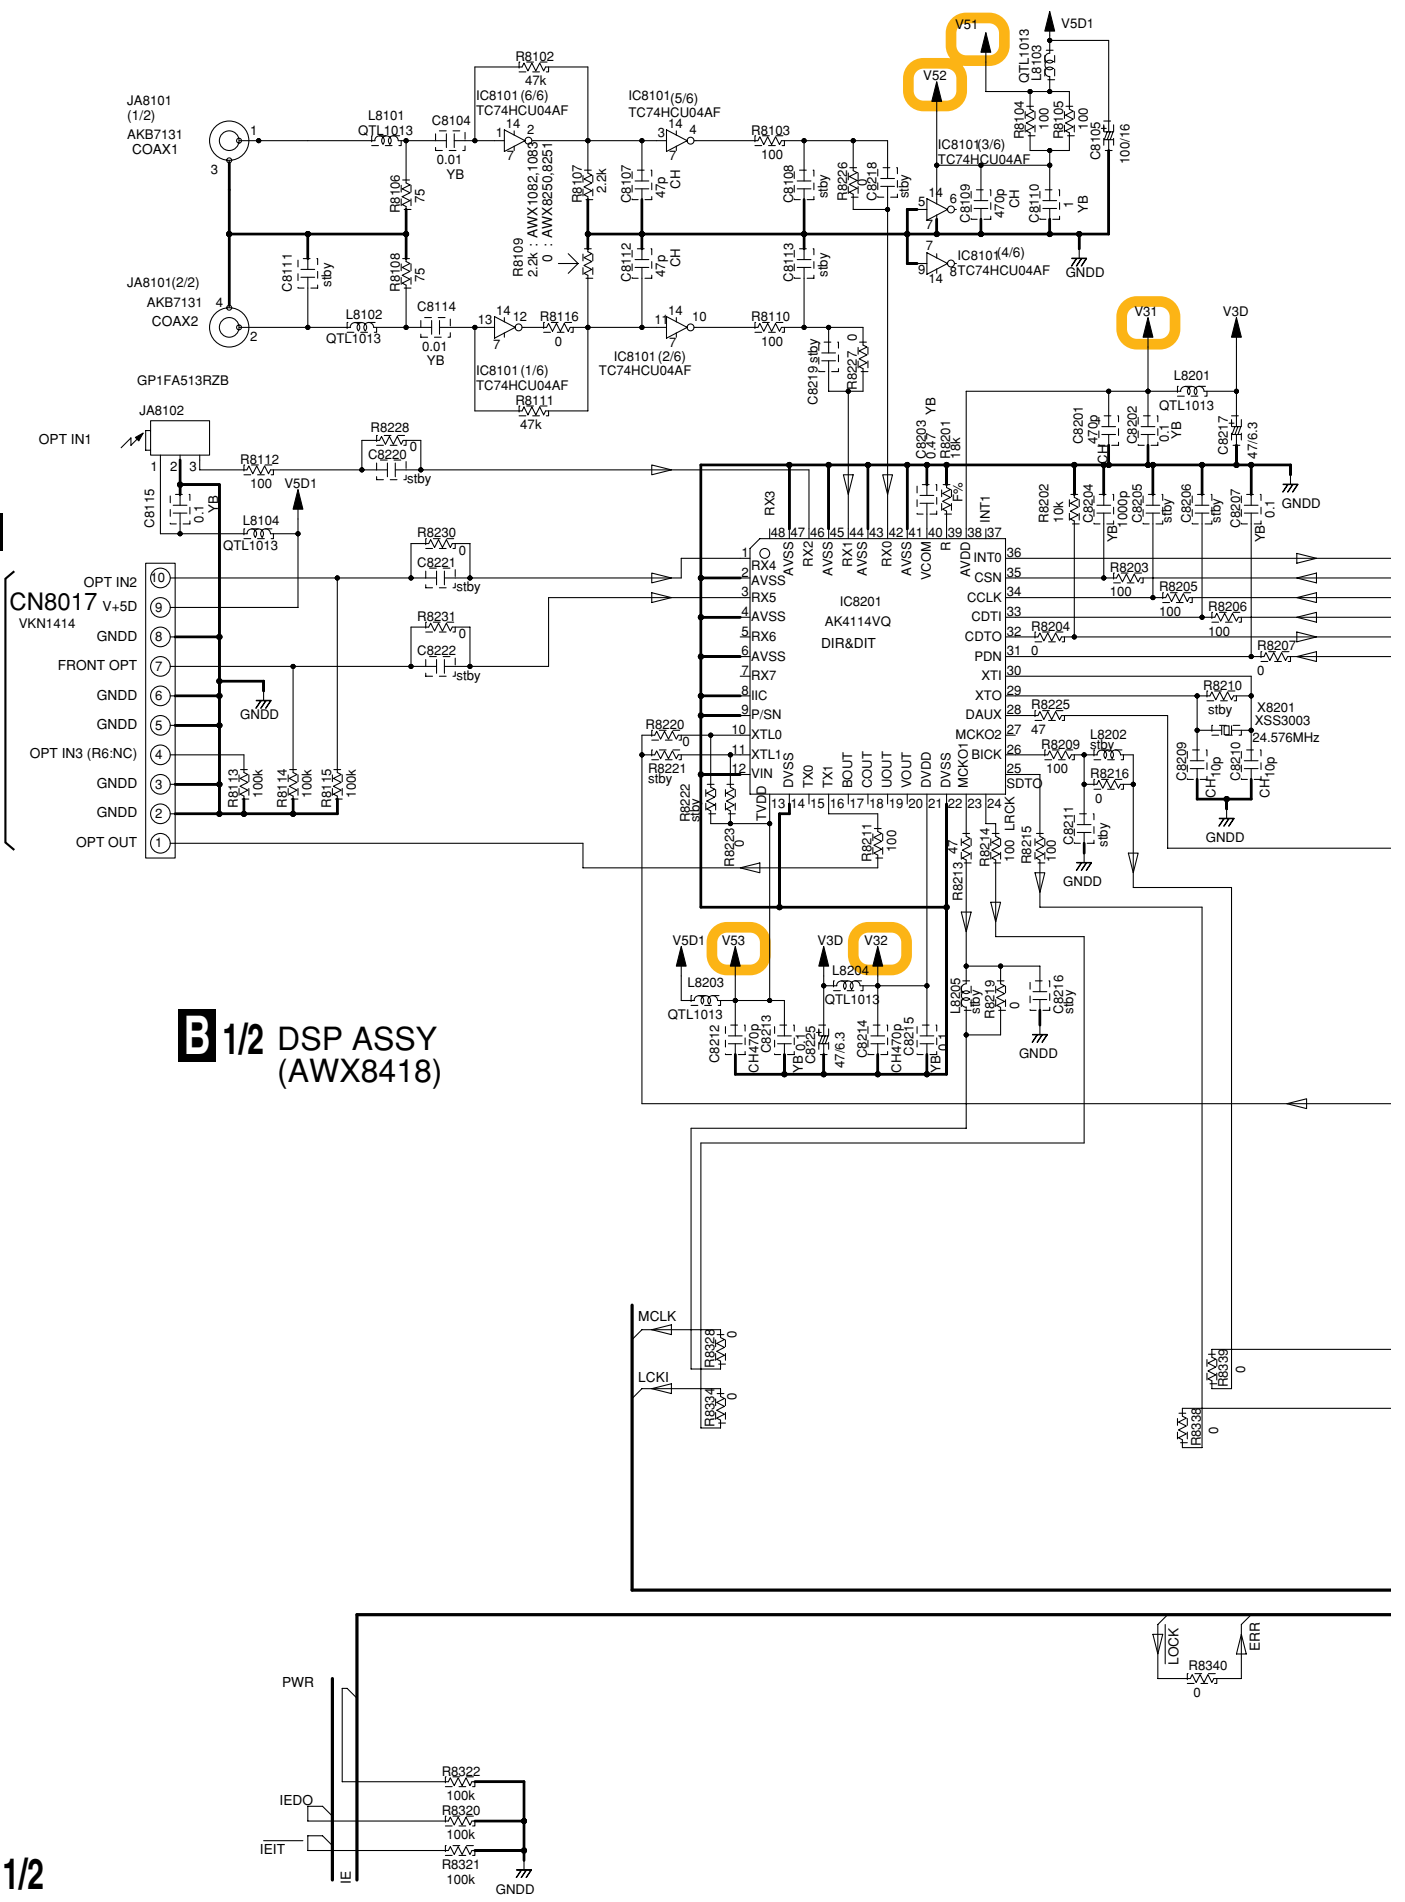

B 1/2 DSP ASSY (AWX8418)

B 1/2

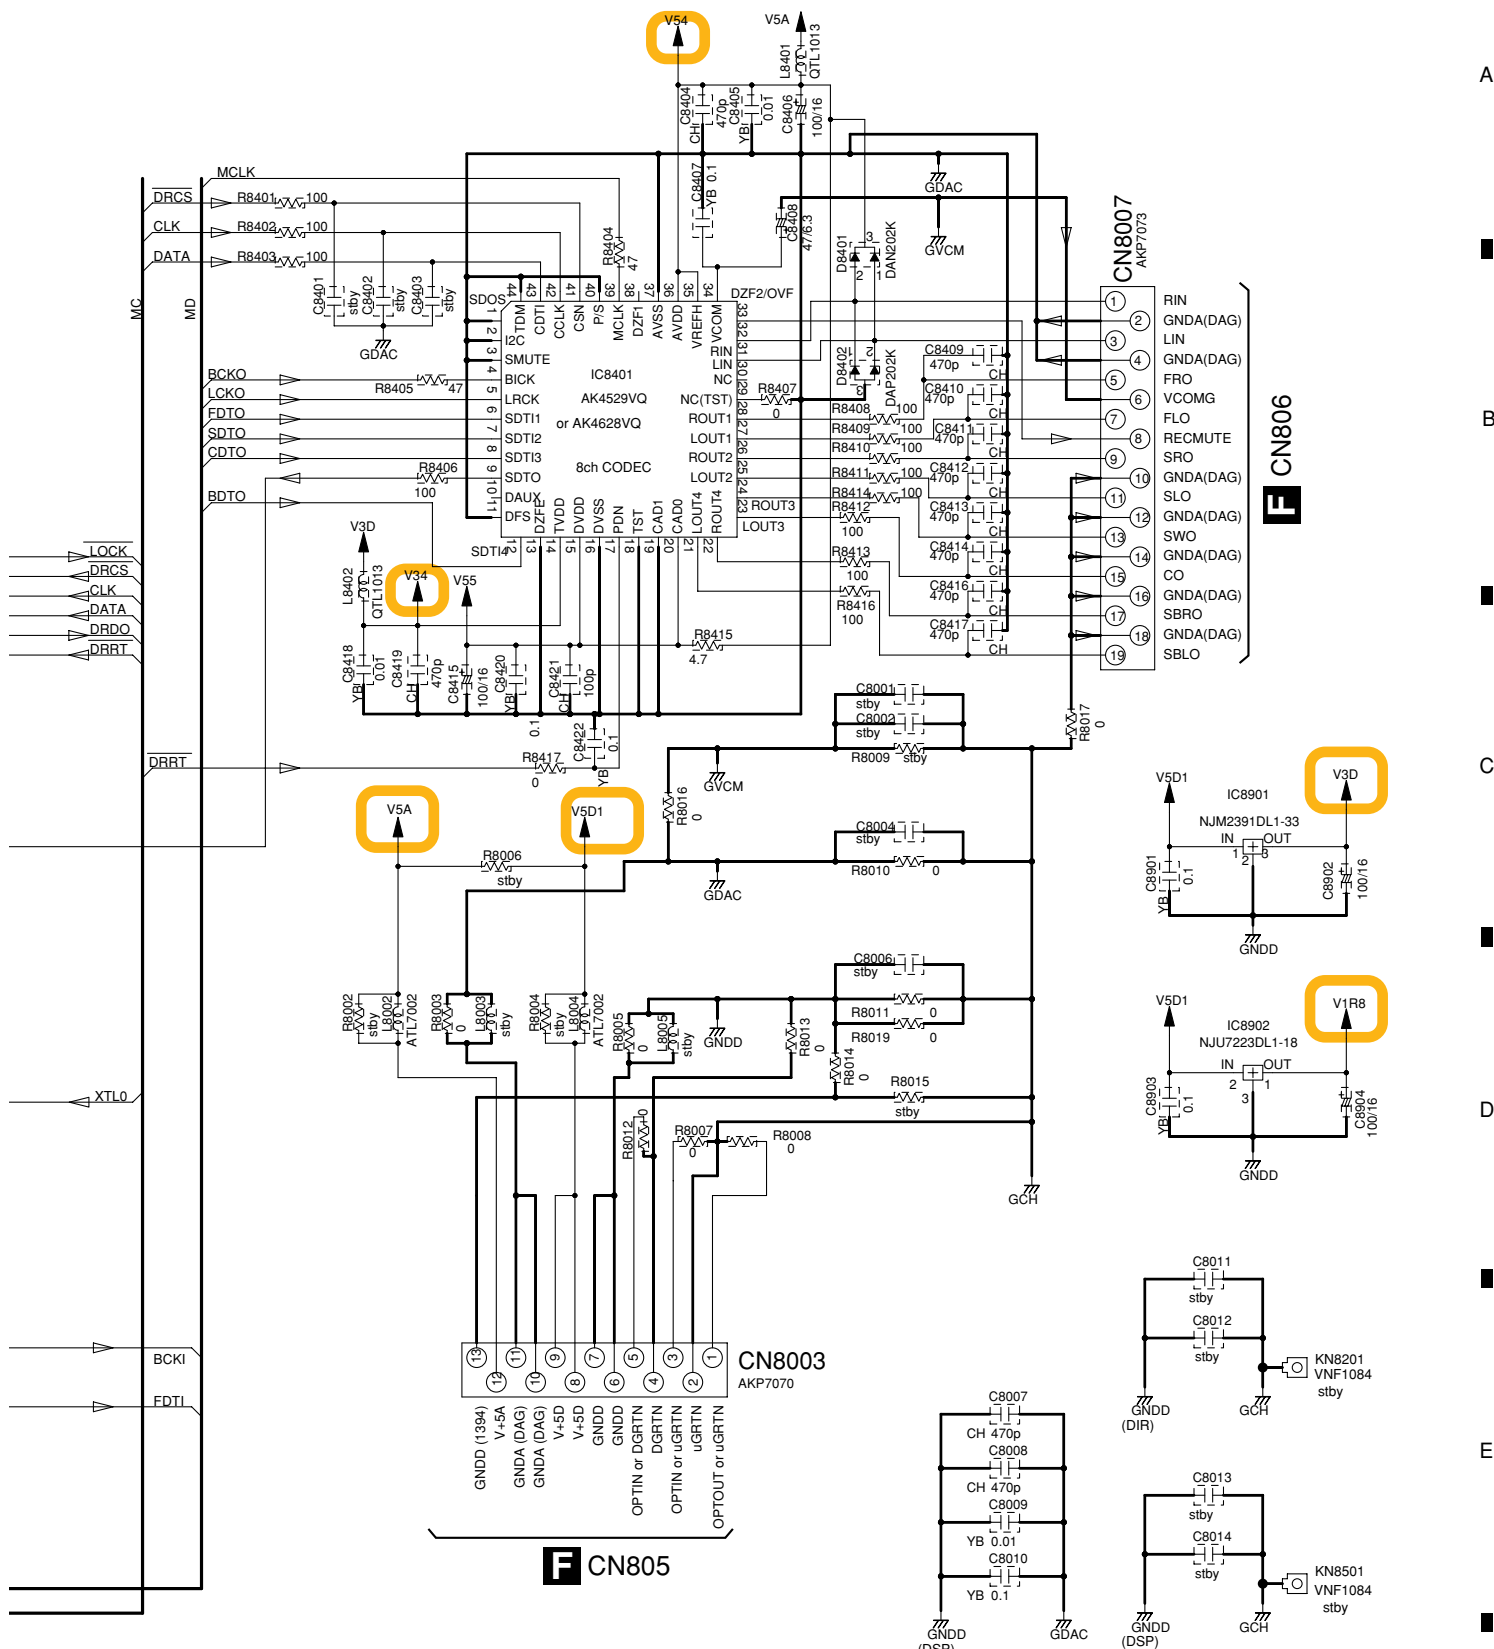

NOTES:

NO INDICATED PARTS IS...

CCSRCH****50-T
 CKSRYB333K16-T
 CKSRYB104K16-T
 CKSRYB105K6R3-T
 CEV***M*-T
 RS1/16S***J-T

UNLESS OTHERWISE NOTED

3.7 DSP ASSY (2/2)

1

2

3

4

A


B

C

D

E

F

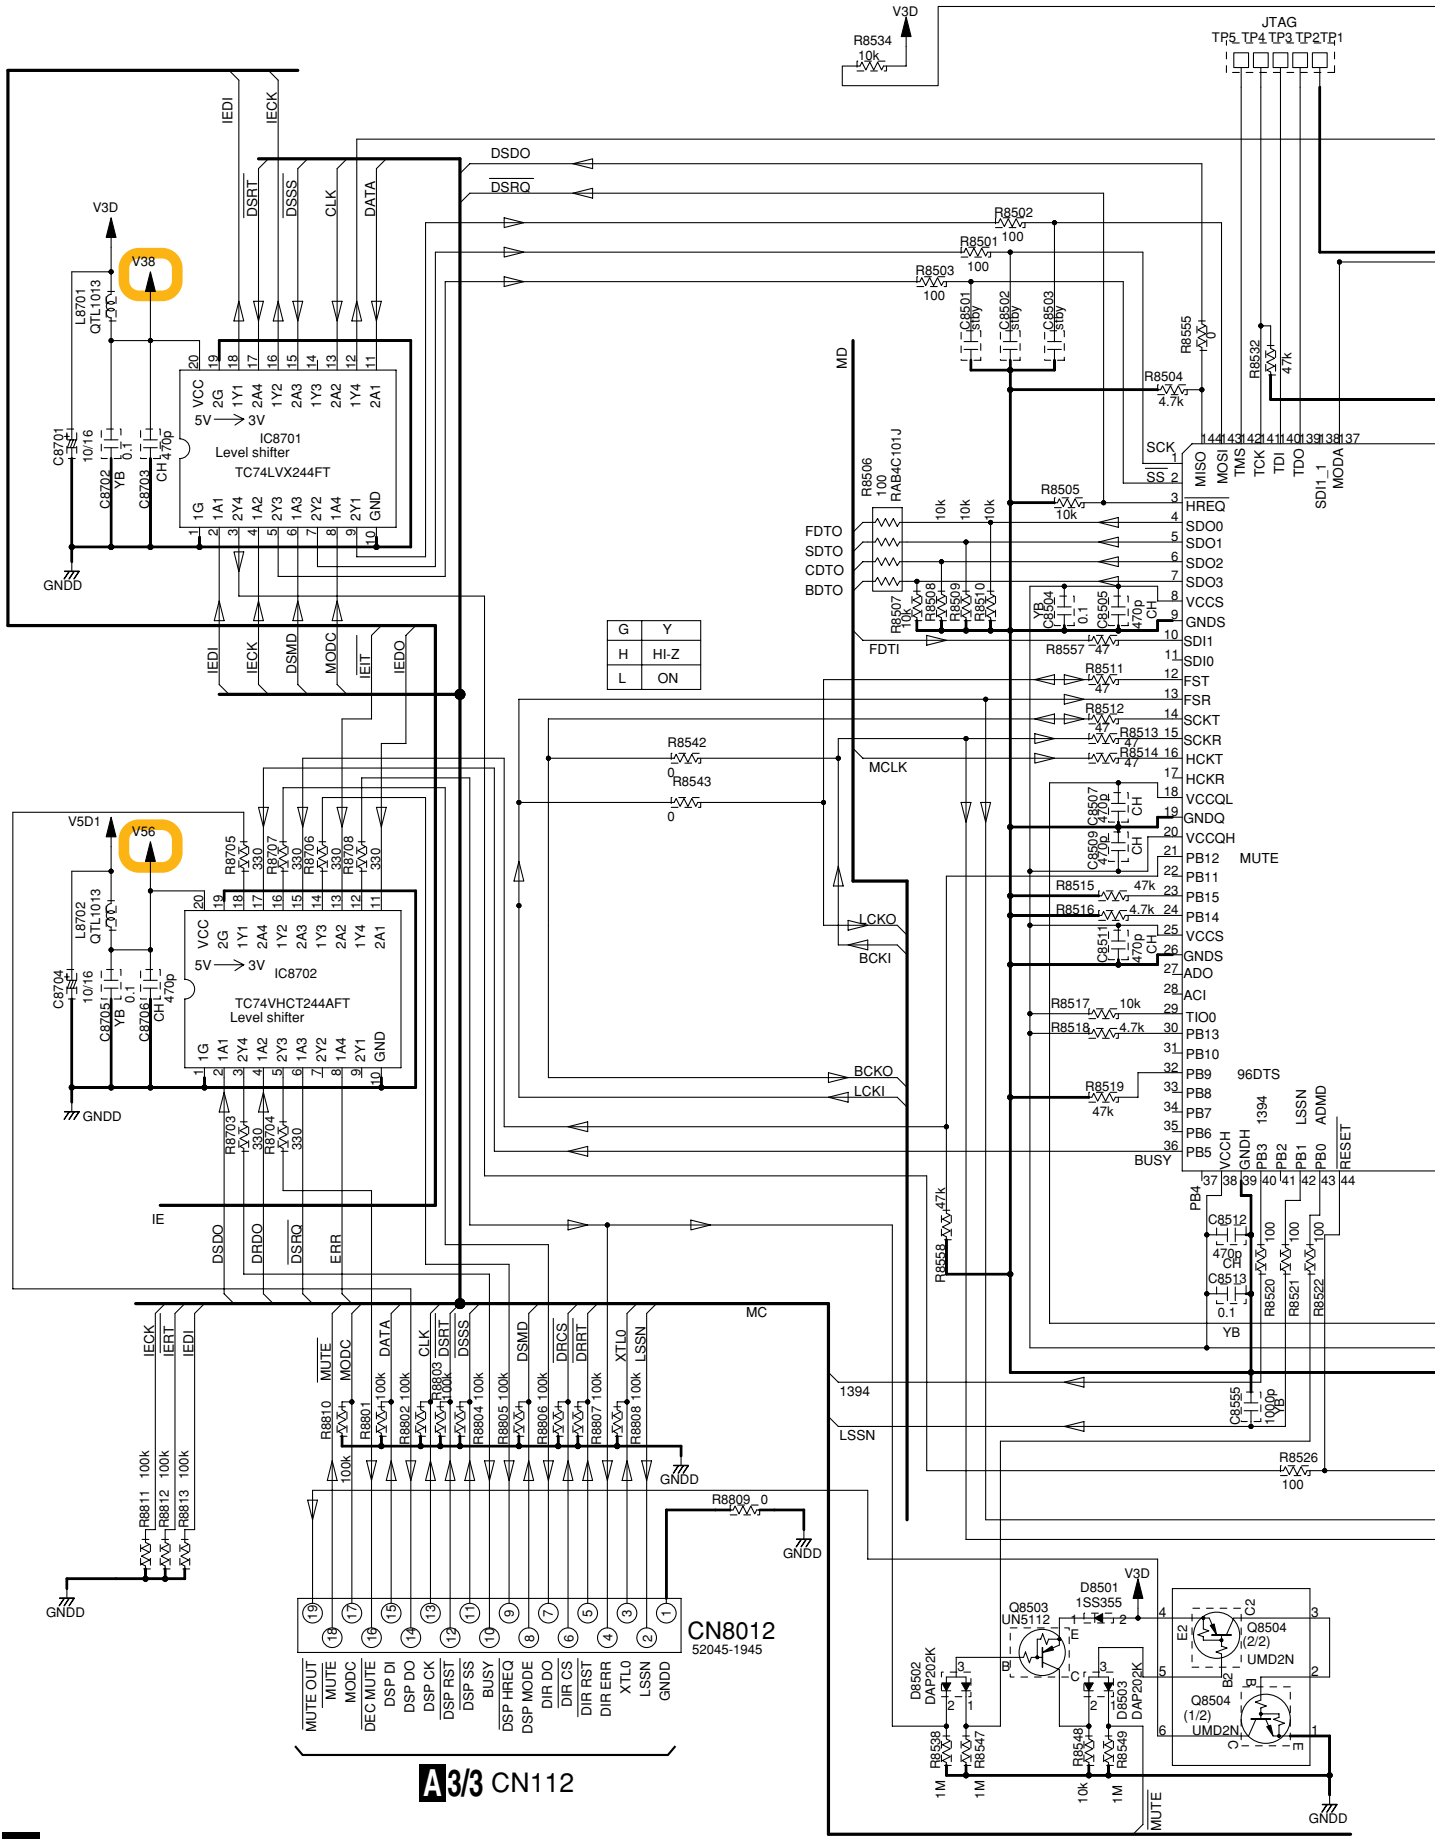

A3/3 CN112

B 2/2

VSX-415-K


1

2

3

4

B 2/2 DSP ASSY (AWX8418)

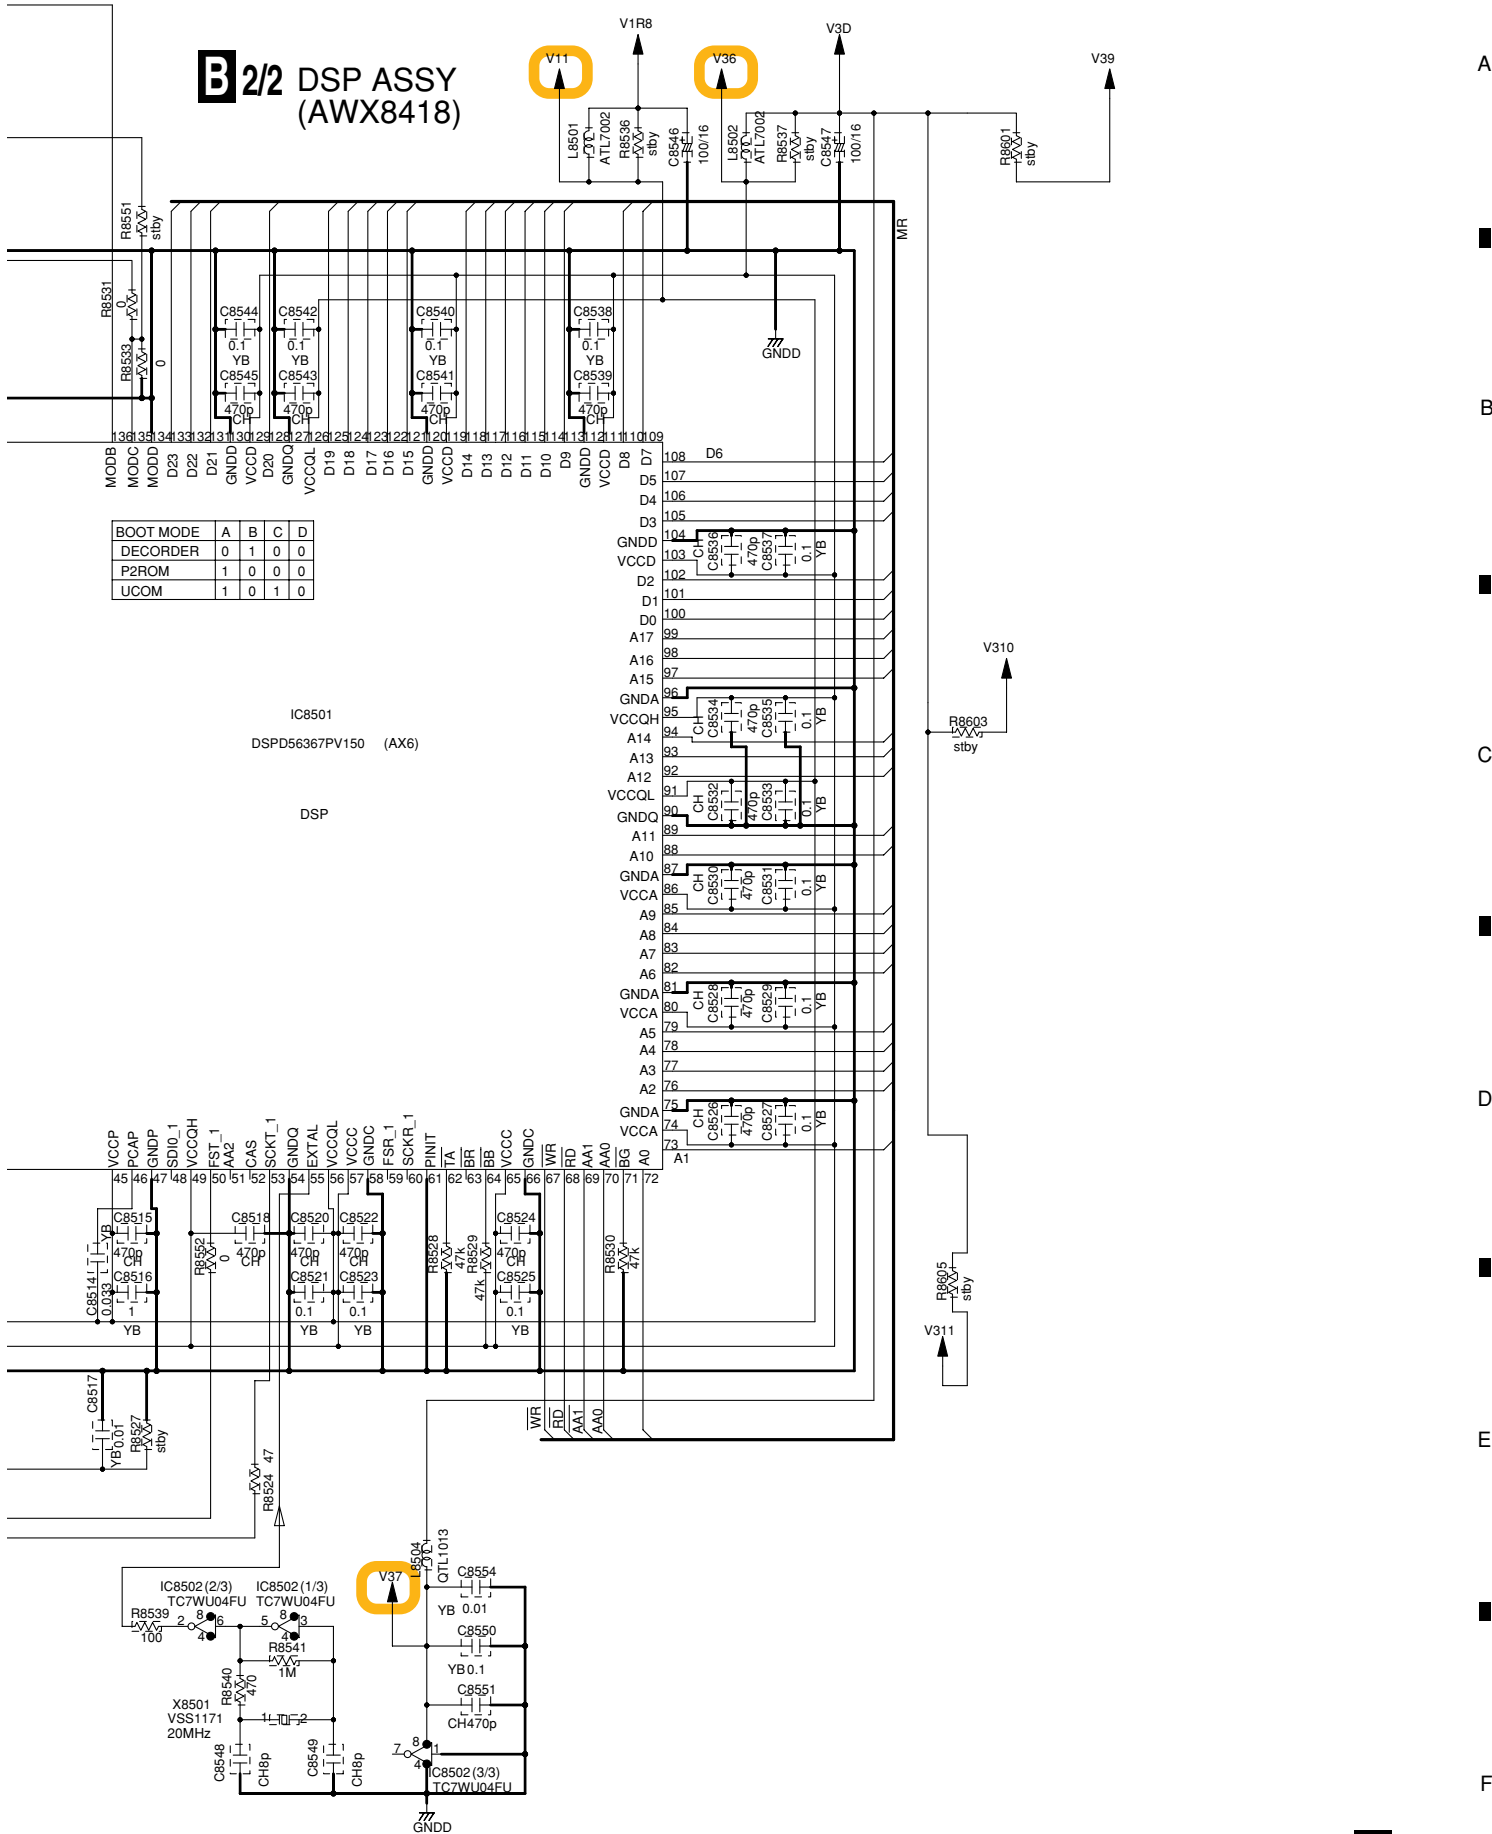


A
B
C
D
E
F

3.8 AMP & PRIMARY (1/2), TRANS2 and TRANS3 ASSYS

C 1/2 AMP&PRIMARY ASSY (XWZ3783)


A
B
C
D
E
F

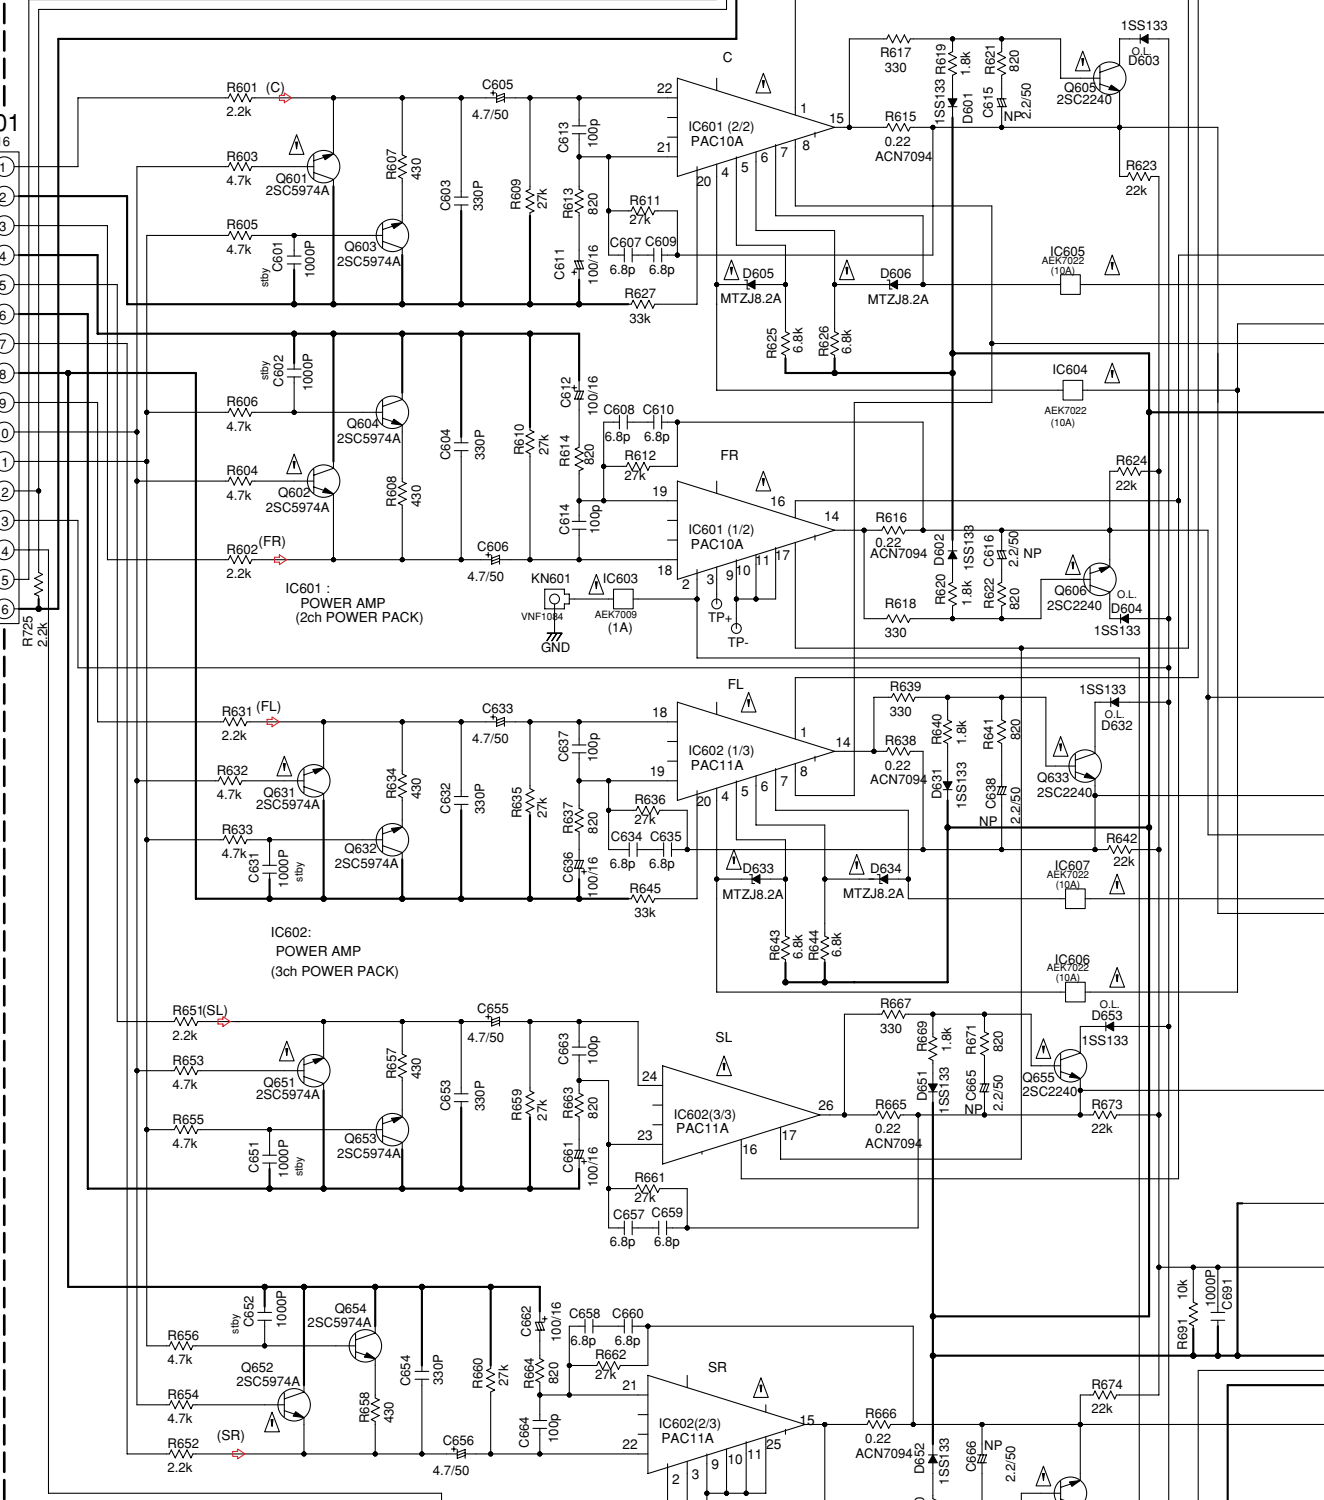

NOTE

- RESISTORS**
Unit:k- Ω ,M- Ω or unless otherwise noted.
Rated power:1/4W unless otherwise noted.
Tolerance:(J) \pm 5% unless otherwise noted.
- CAPACITORS**
Unit: p-pF or μ F unless otherwise noted.
Ratings:Capacity(μ F)/Voltage(V) unless otherwise noted.
Rated Voltage:50V except for electrolytic capacitors.
- DIODES**
Indicated in 1SS133-T



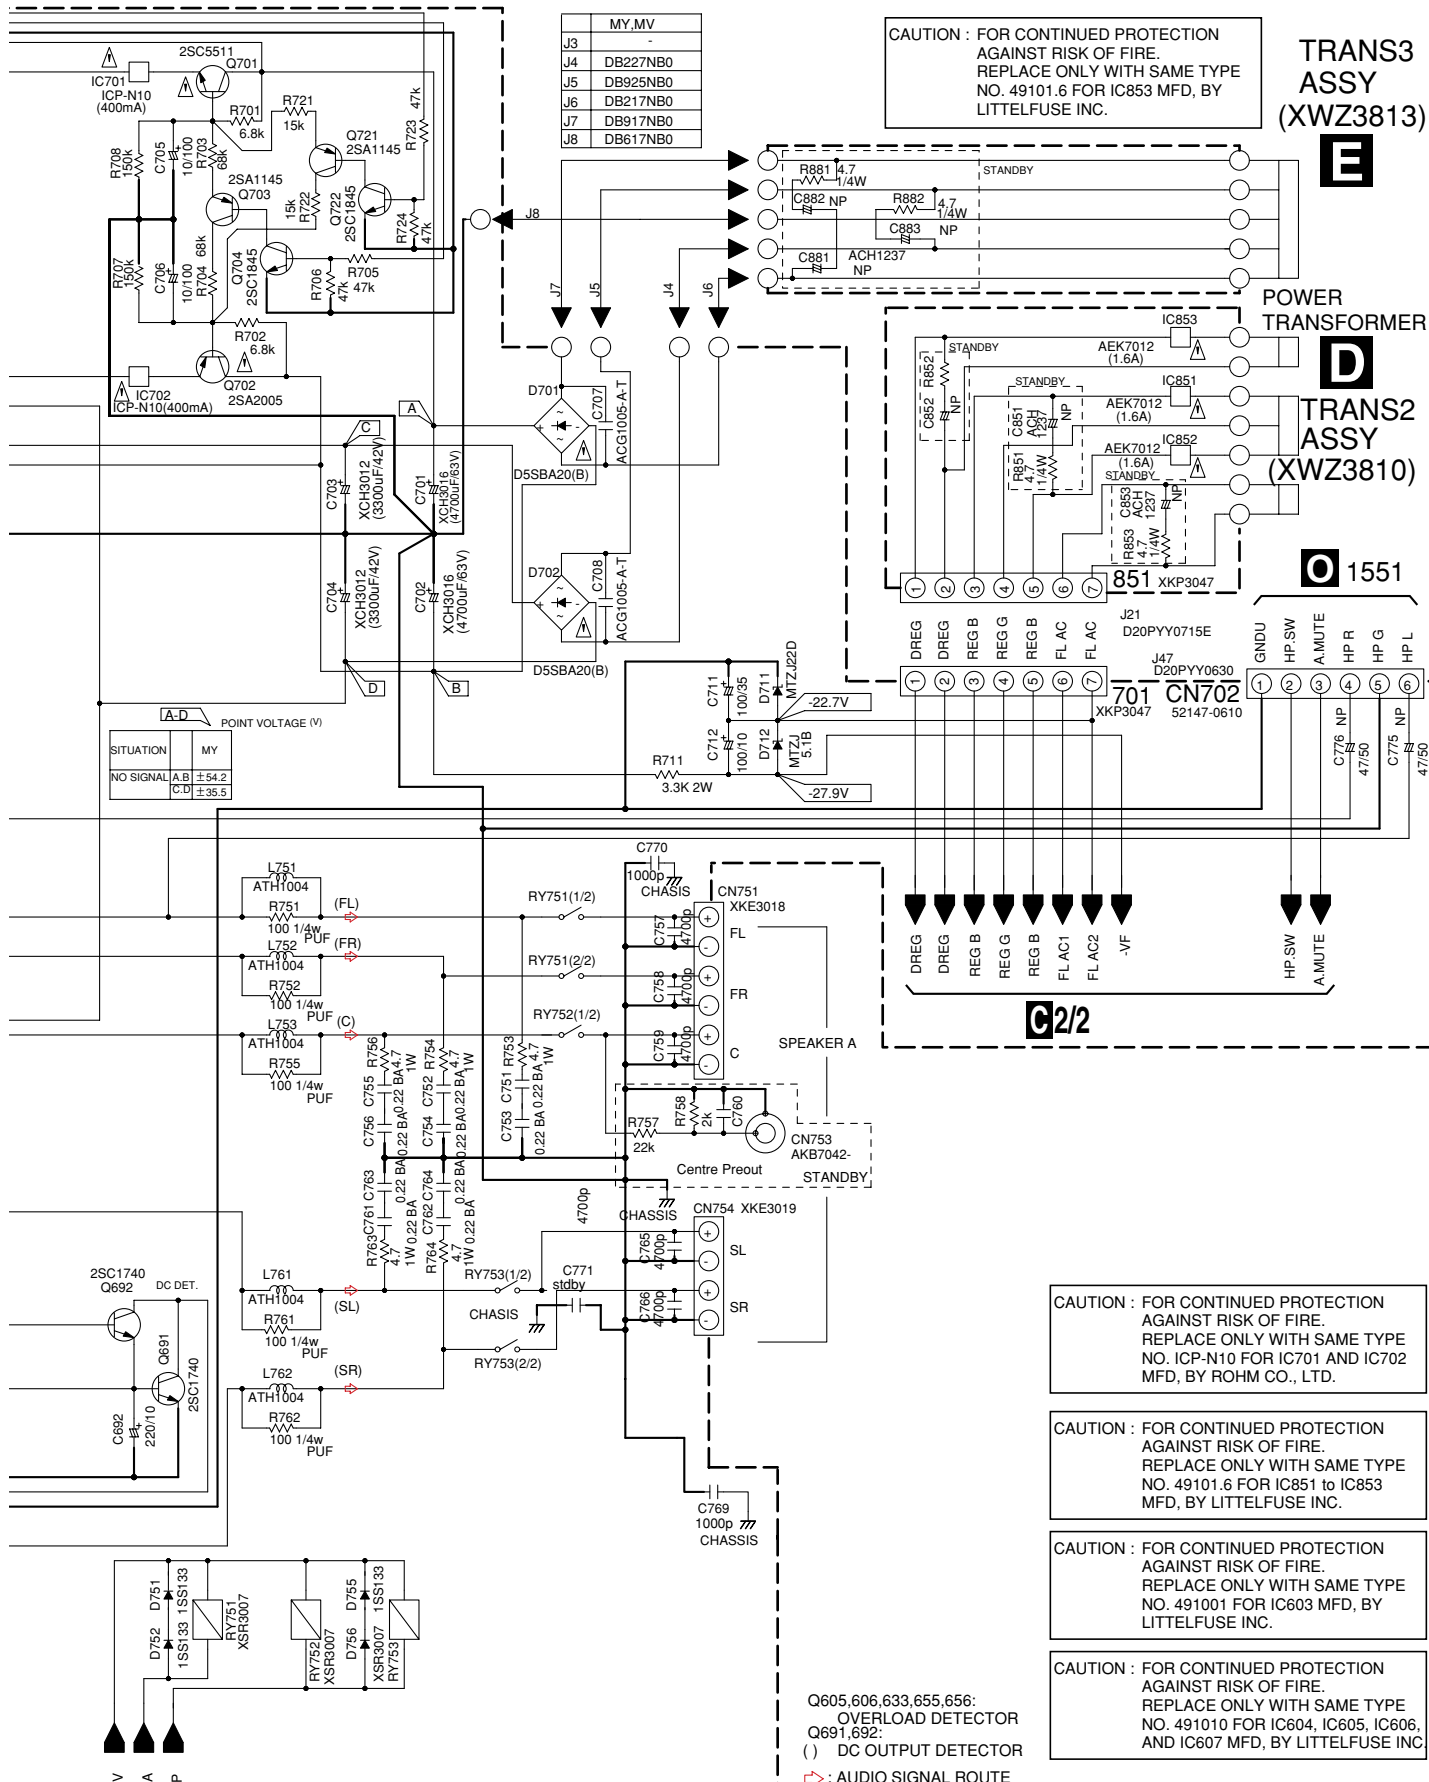

MY, MV	
J3	-
J4	DB227NB0
J5	DB925NB0
J6	DB217NB0
J7	DB917NB0
J8	DB617NB0

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 49101.6 FOR IC853 MFD, BY LITTELFUSE INC.

TRANS3 ASSY (XWZ3813)



POWER TRANSFORMER



TRANS2 ASSY (XWZ3810)



A-D POINT VOLTAGE (V)	
SITUATION	MY
NO SIGNAL	±54.2
A.B	±39.5
C.D	±39.5

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. ICP-N10 FOR IC701 AND IC702 MFD, BY ROHM CO., LTD.

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 49101.6 FOR IC851 to IC853 MFD, BY LITTELFUSE INC.

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491001 FOR IC603 MFD, BY LITTELFUSE INC.

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491010 FOR IC604, IC605, IC606, AND IC607 MFD, BY LITTELFUSE INC.

Q605,606,633,655,656: OVERLOAD DETECTOR Q691,692: () DC OUTPUT DETECTOR

◇ : AUDIO SIGNAL ROUTE

NOTE FOR FUSE REPLACEMENT

CAUTION -FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE WITH SAME TYPE AND RATINGS ONLY.





3.9 AMP & PRIMARY (2/2), REGULATOR, AMP INPUT and TRANS1 ASSYS

NOTE


1.RESISTORS
Unit:k- Ω ,M-M Ω or unless otherwise noted.
Rated power:1/4W unless otherwise noted.
Tolerance:(J) $\pm 5\%$ unless otherwise noted.

2.CAPACITORS
Unit: p-pF or μ F unless otherwise noted.
Ratings:Capacity(μ F)/Voltage(V) unless otherwise noted.
Rated Voltage:50V except for electrolytic capacitors.

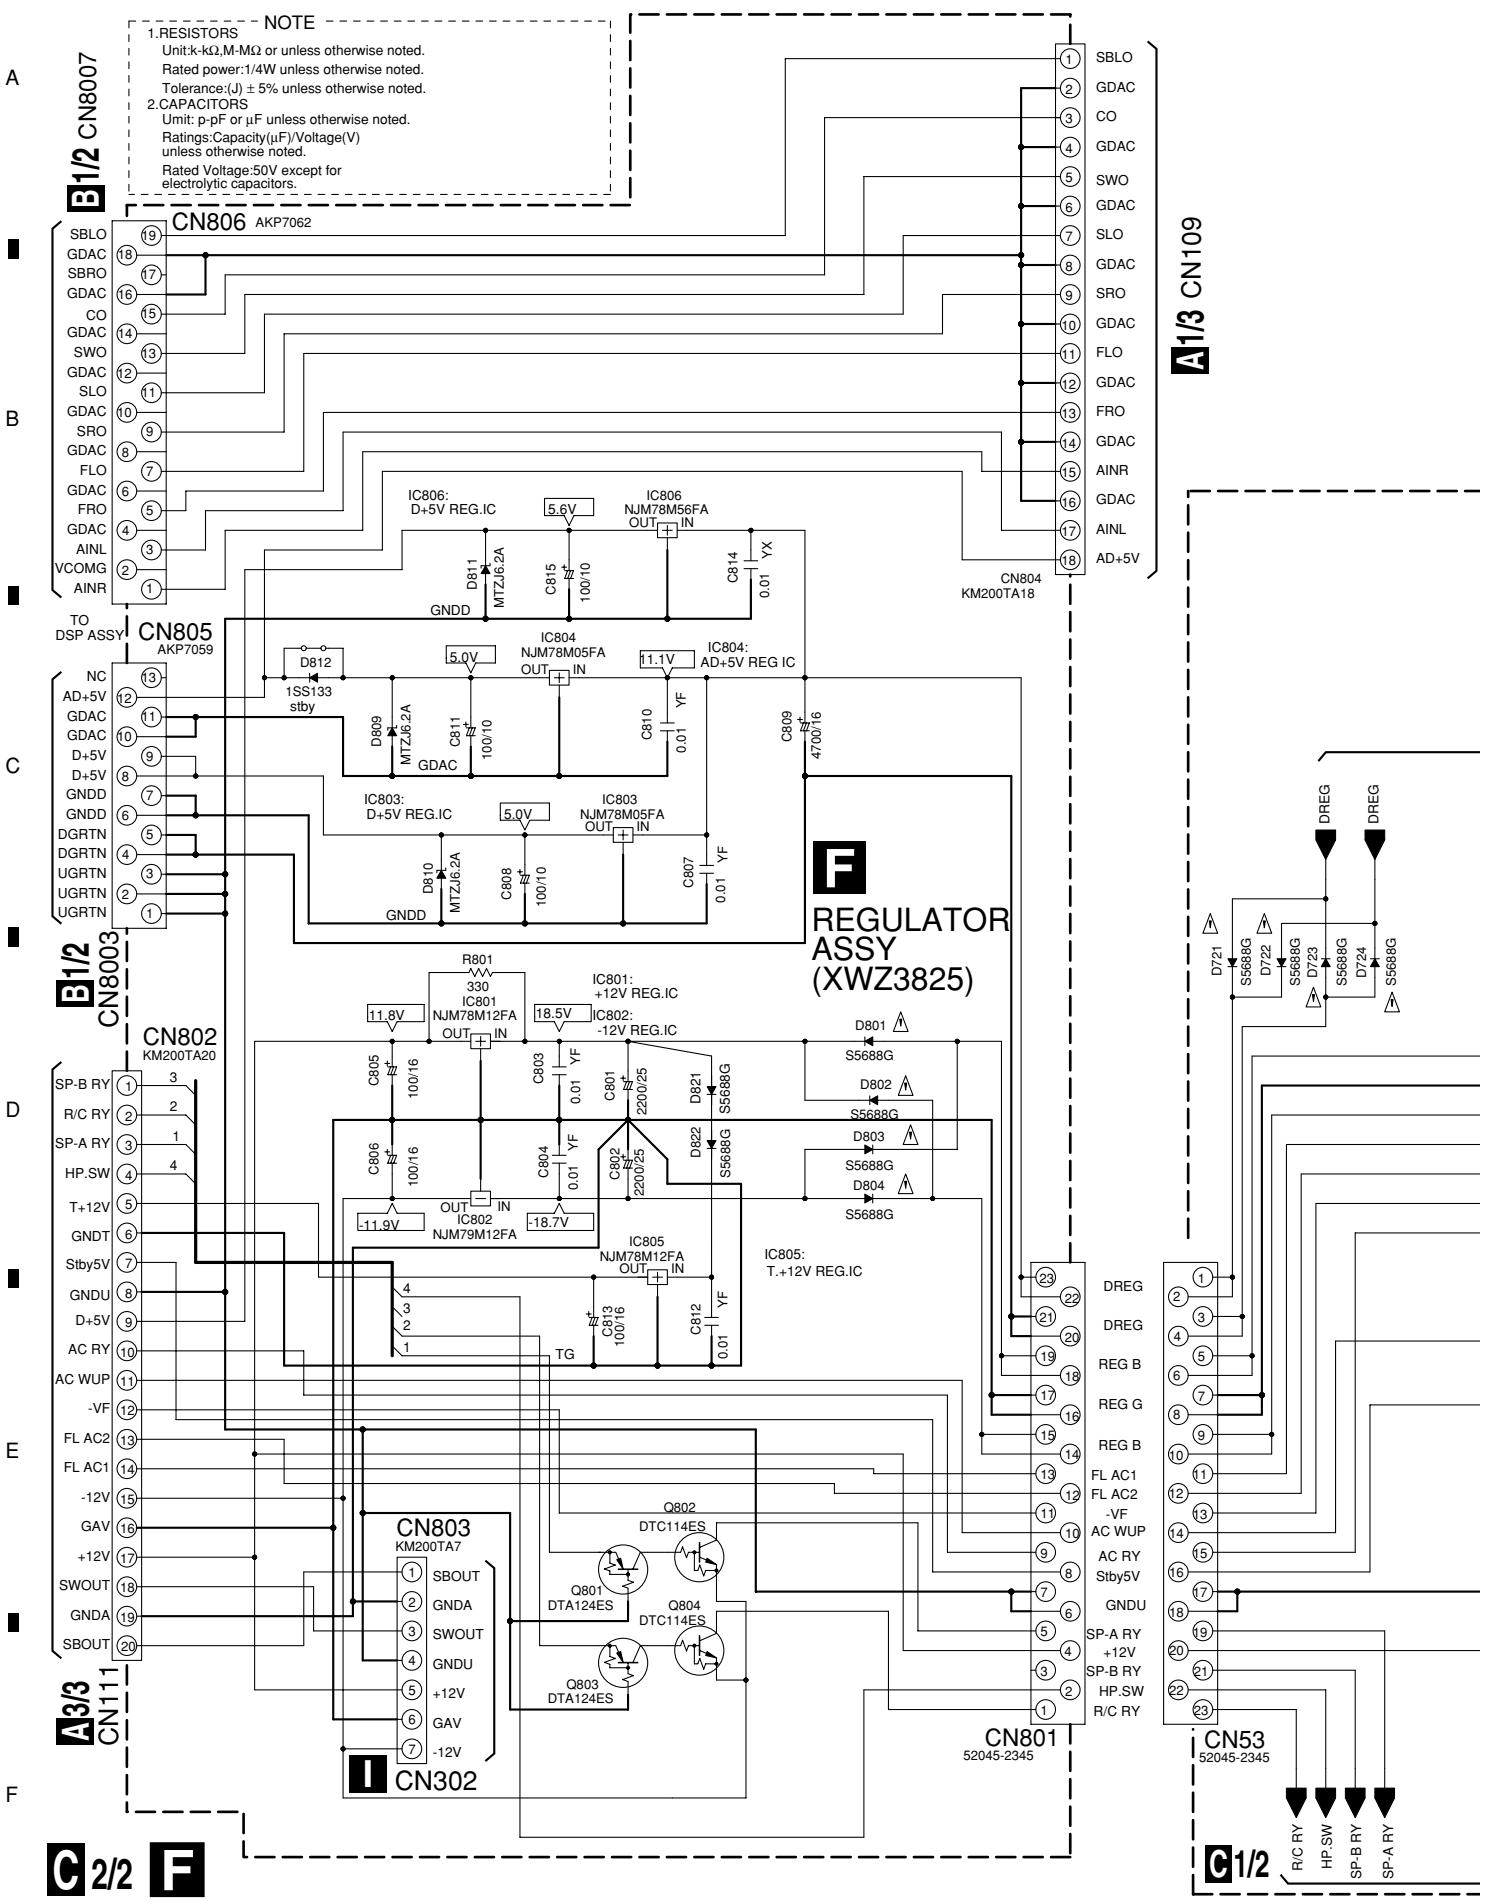

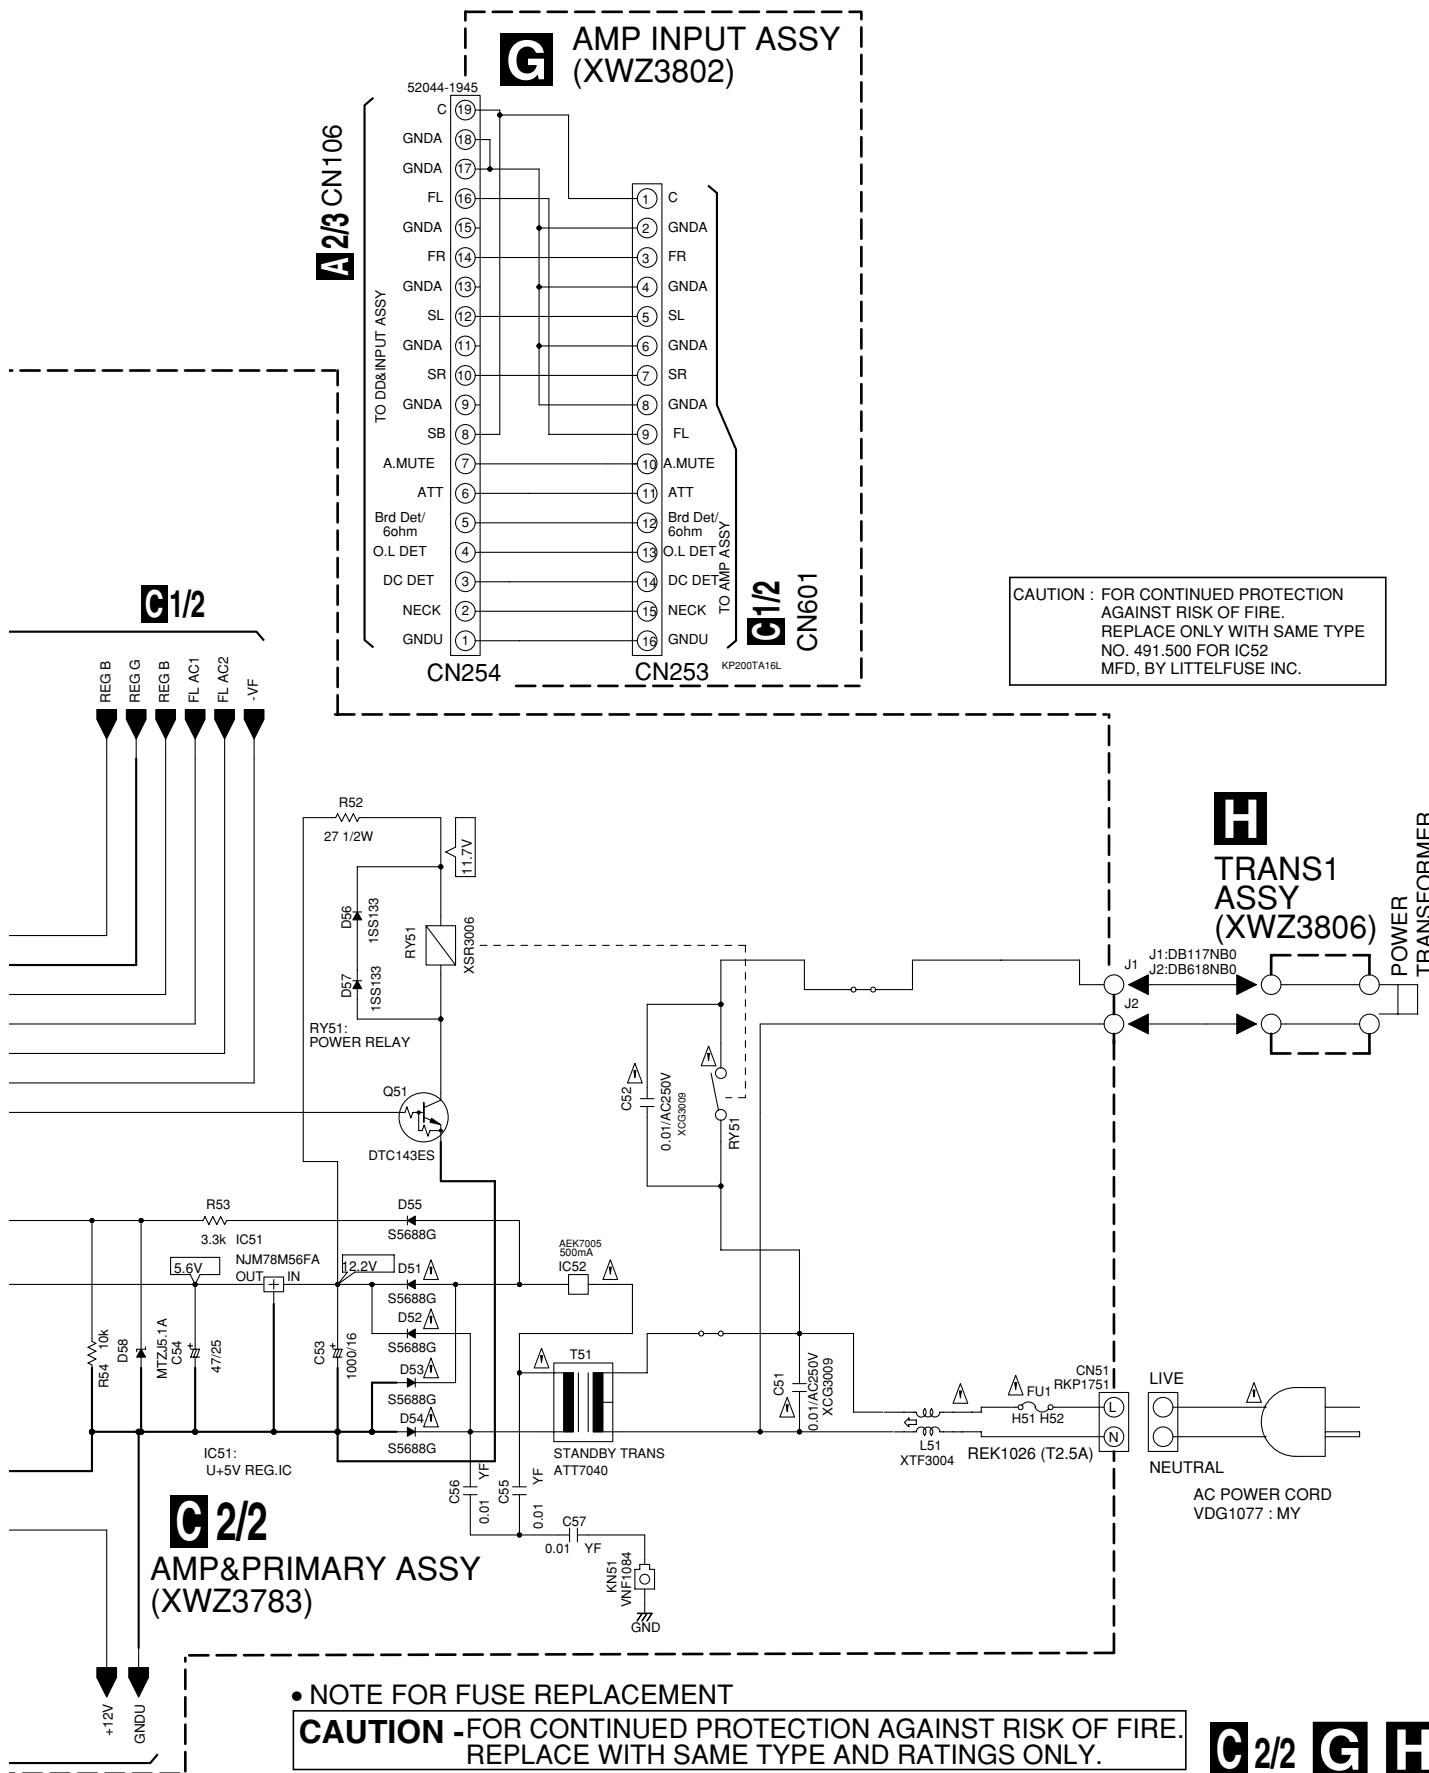

3.10 VIDEO and 5.1CH ASSYS

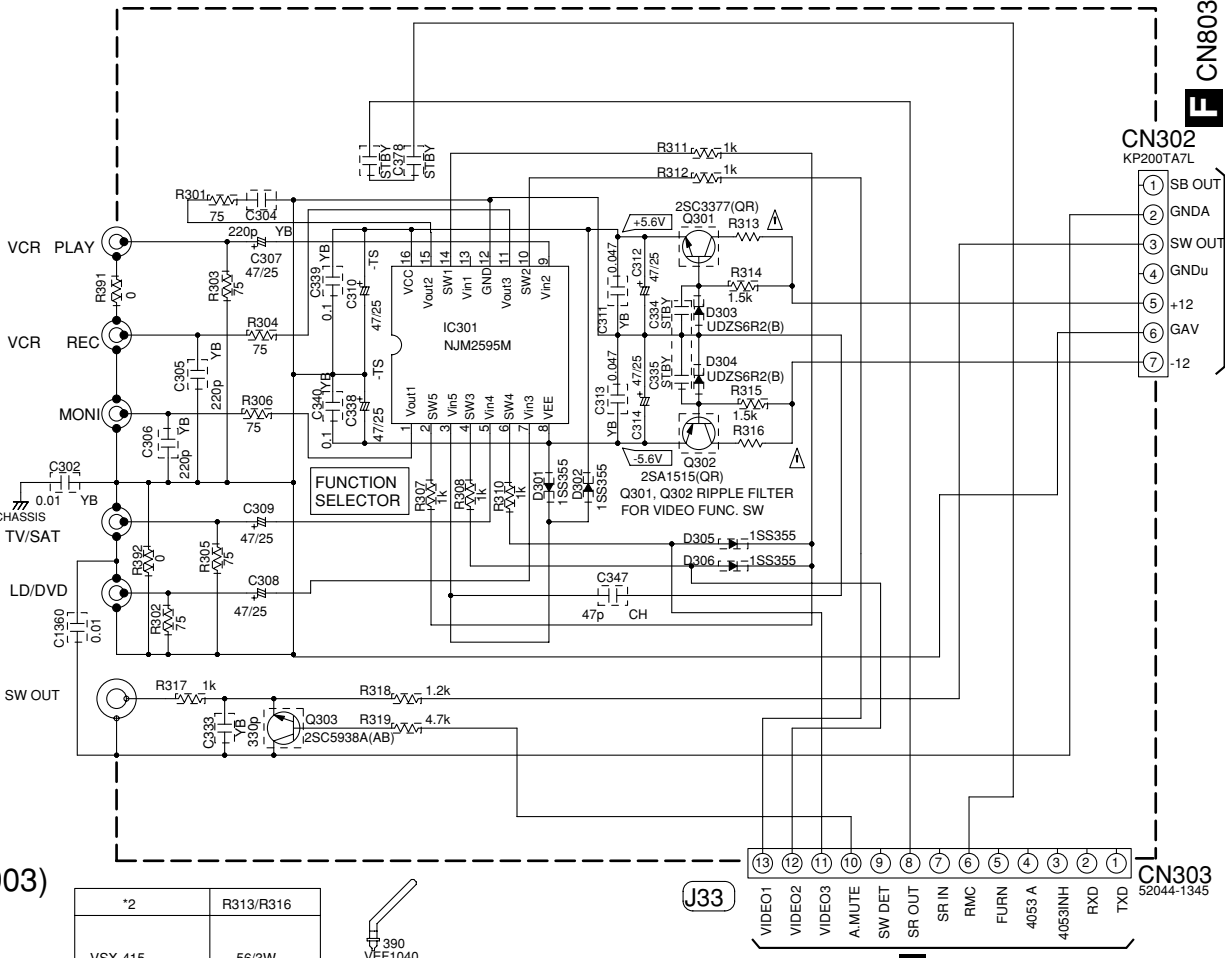

I
VIDEO ASSY (XWZ3903)


*2	R313/R316
VSX-415	56/3W



J33

A3/3 CN104

J 5.1CH ASSY (XWZ3914)

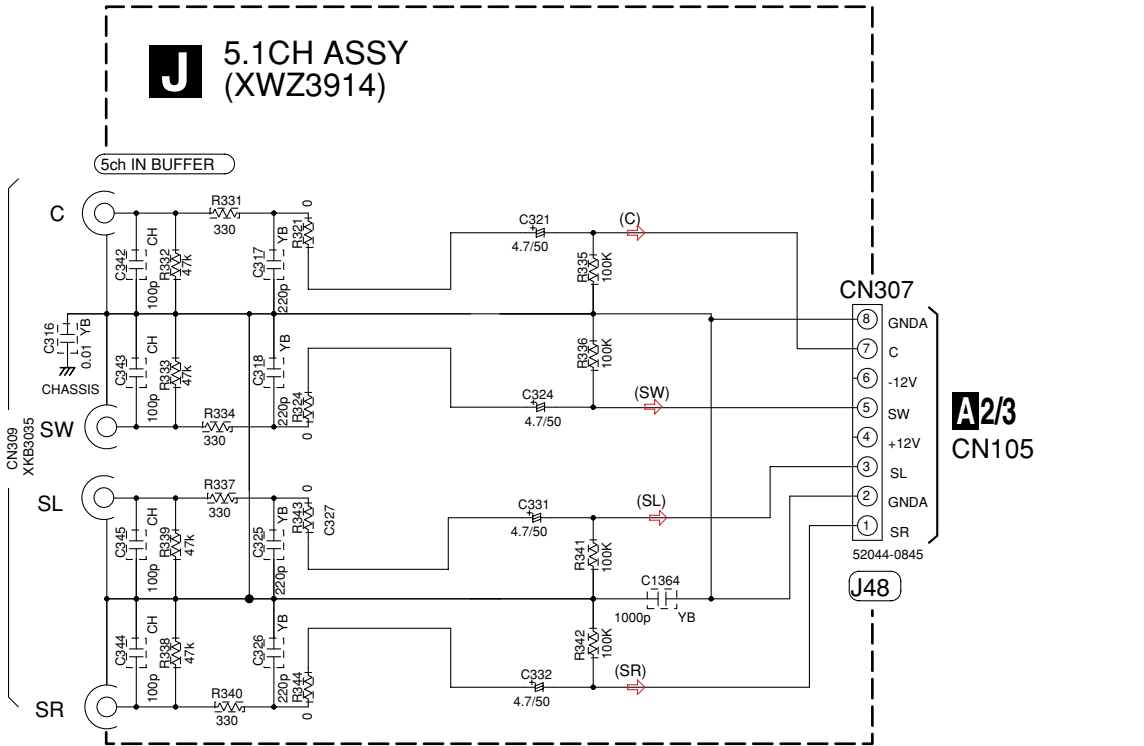


A2/3 CN105

NOTE

1. RESISTORS
Unit: k-Ω, M-Ω or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J) ± 5% unless otherwise noted.

2. CAPACITORS
Unit: p-pF or μF unless otherwise noted.
Ratings: Capacity (μF) / Voltage (V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.

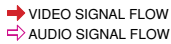

VSX-415-K

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

VSX-415-K

■

7

■

8

31

■


3.11 FRONT DISPLAY, R. ENCODER, POWER SW & KEY and F. KEY ASSYS

1 2 3 4

R. ENCODER ASSY (XWZ3920)

R. ENCODER ASSY
 S511 : ENTER
 S512 : MULTI JOG DIAL
 S513 : MASTER VOLUME


FRONT DISPLAY ASSY (XWZ3908)

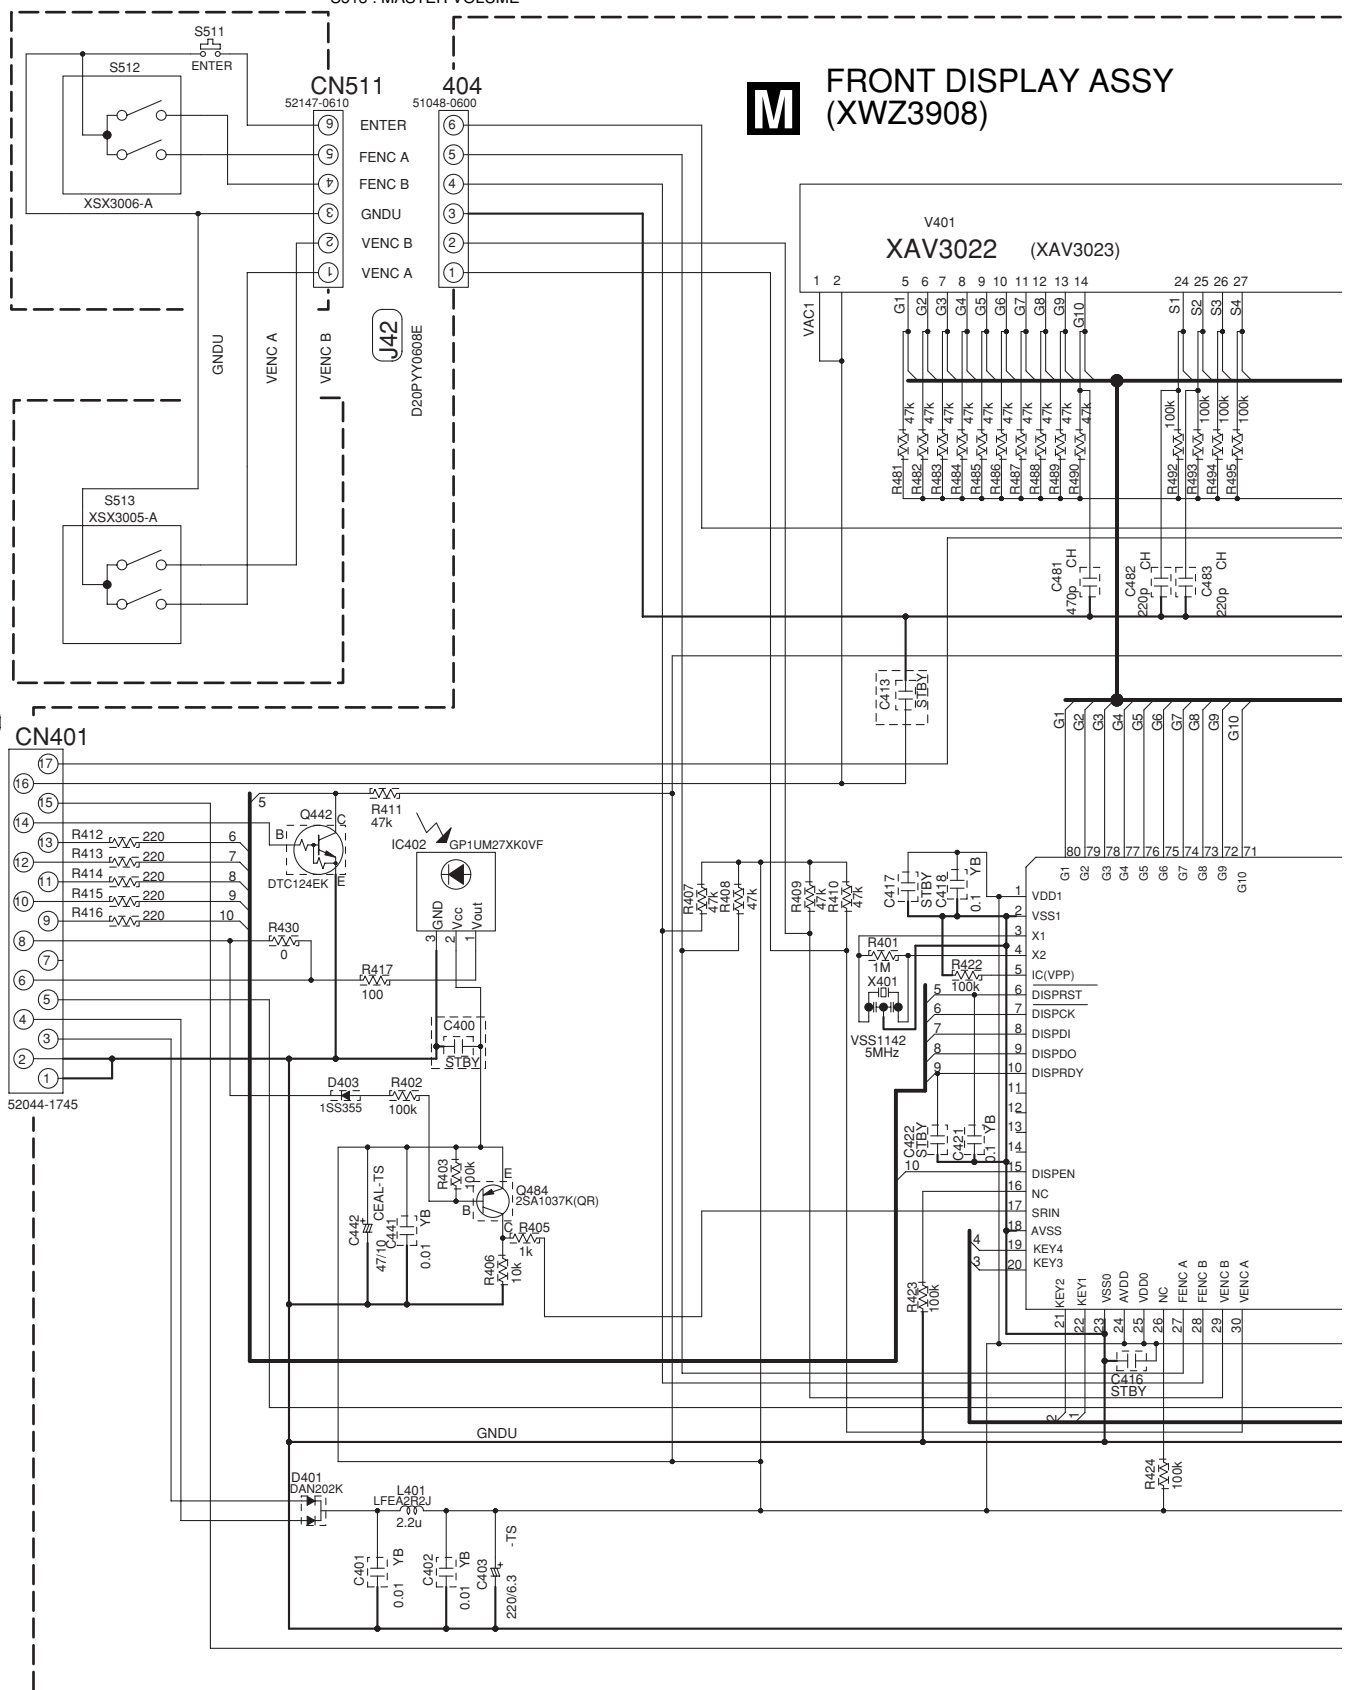

A3/3 CN101

J31


- FLAC2 (16)
- FLAC1 (15)
- VF (14)
- DISPRST (13)
- DISPCK (12)
- DISPDI (11)
- DISPDO (10)
- DISPRDY (9)
- DISPEN (8)
- SRIN (7)
- NC (6)
- RMC (5)
- 1WUP (4)
- D+5.6V (3)
- Stby+5.6V (2)
- GNDU (1)



M N

1 2 3 4

A
B
C
D
E
F

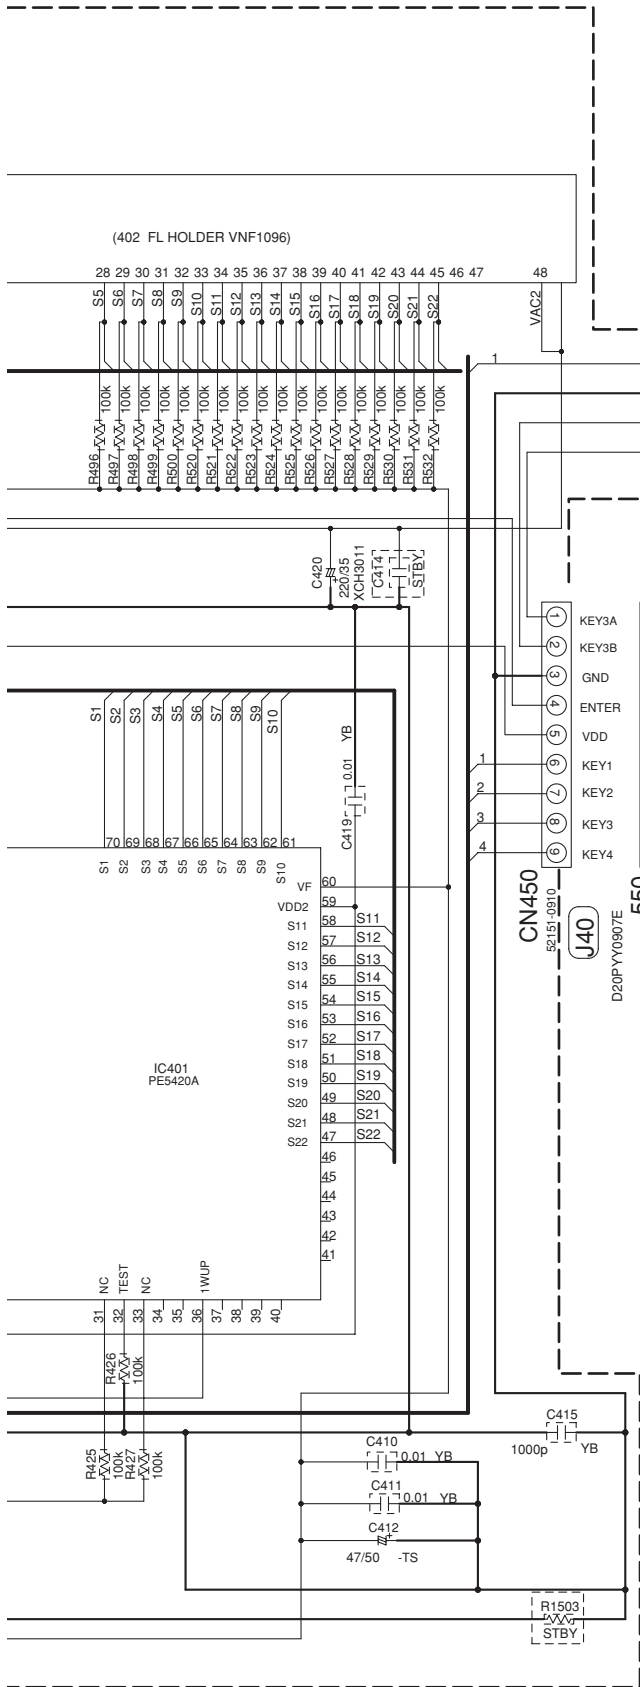


- NOTE

1.RESISTORS
Unit: k-Ω, M-Ω or Ω unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: (J)±5% unless otherwise noted.


2.CAPACITORS
Unit: p-pF or μF unless otherwise noted.
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.

3.TACT SWITCHES
Indicated in VSG1024

POWER SW & KEY ASSY (XWZ3917)

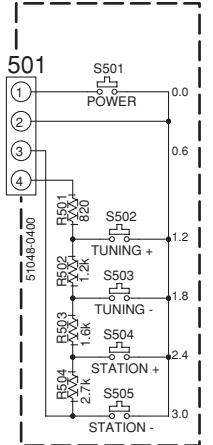

POWER SW ASSY
S501 : POWER STANDBY/ON
S502 : TUNING +
S503 : TUNING -
S504 : STATION +
S505 : STATION -

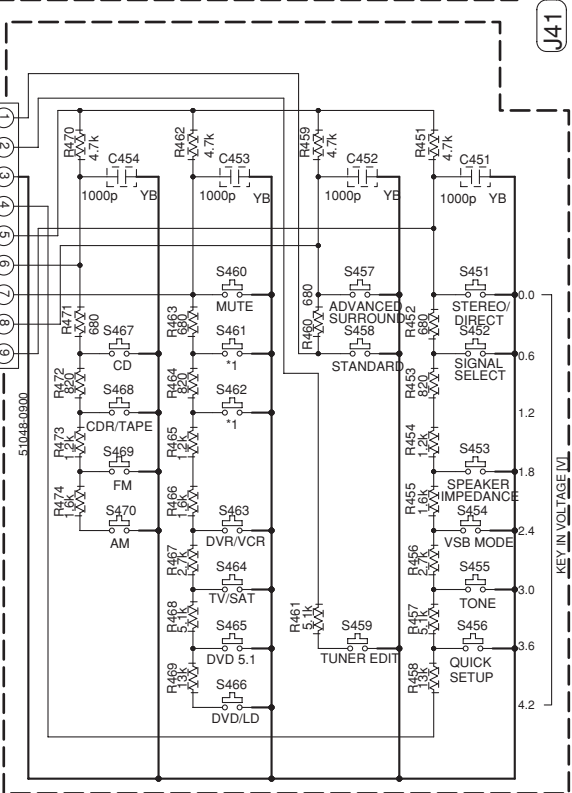


FRONT KEY ASSY (XWZ3912)

FRONT KEY ASSY
S451 : STEREO/DIRECT
S452 : SIGNAL SELECT
S453 : SPEAKER IMPEDANCE
S454 : VSB MODE
S455 : TONE
S456 : QUICK SETUP
S457 : ADVANCED SURROUND
S458 : STANDARD
S459 : TUNER EDIT
S460 : MUTE
S461 : EON MODE
S462 : PTY SEARCH
S463 : DVD/VCR
S464 : TV/SAT
S465 : DVD5.1
S466 : DVD/LD
S467 : CD
S468 : CDR/TAPE
S469 : FM
S470 : AM



3.12 H.P. ASSY

A
B
C
D
E
F

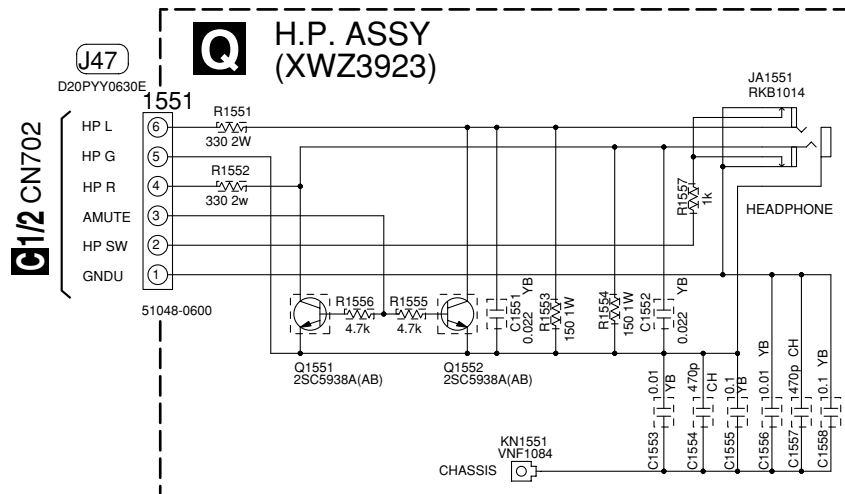

NOTE

1. RESISTORS
Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J) ± 5% unless otherwise noted.


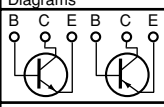

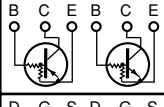

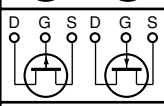

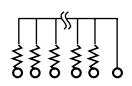


2. CAPACITORS
Unit: p-pF or μF unless otherwise noted.
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.




4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

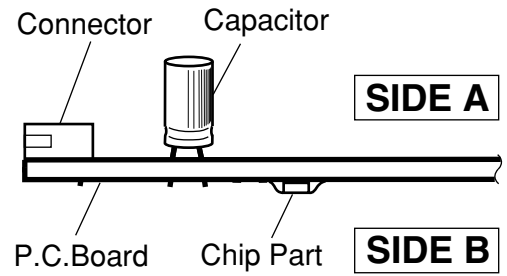


4.1 TRANS2, TRANS3 and TRANS1 ASSYS

SIDE A

SIDE A


E TRANS3 ASSY

C J6 J4 J8 J5 J7

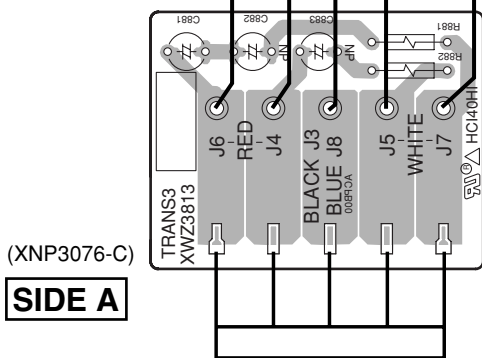

(XNP3076-C)
SIDE A

POWER TRANSFORMER

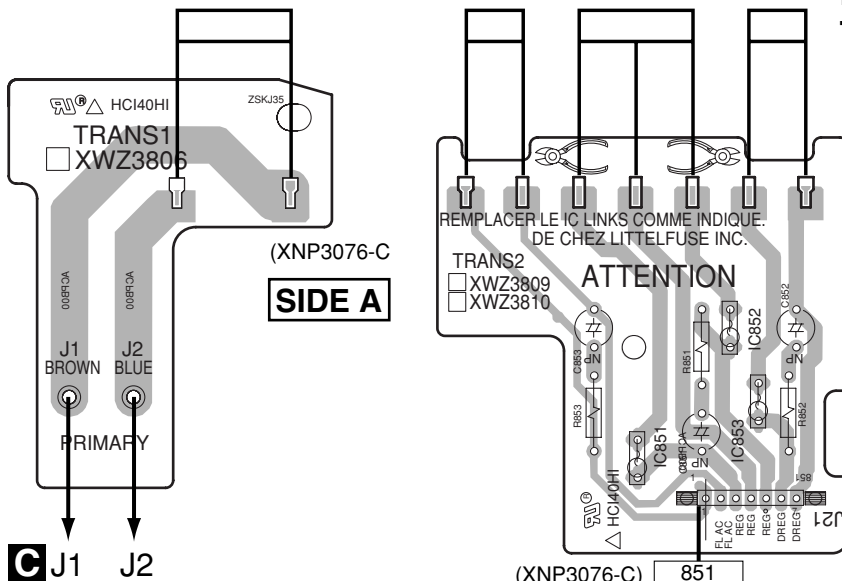

D TRANS2 ASSY

C J1 J2
H TRANS1 ASSY

(XNP3076-C) 851
SIDE A
C 701

D E H

D E H


5 6 7 8

4.2 REGULATOR ASSY

SIDE A

SIDE A

F REGULATOR ASSY

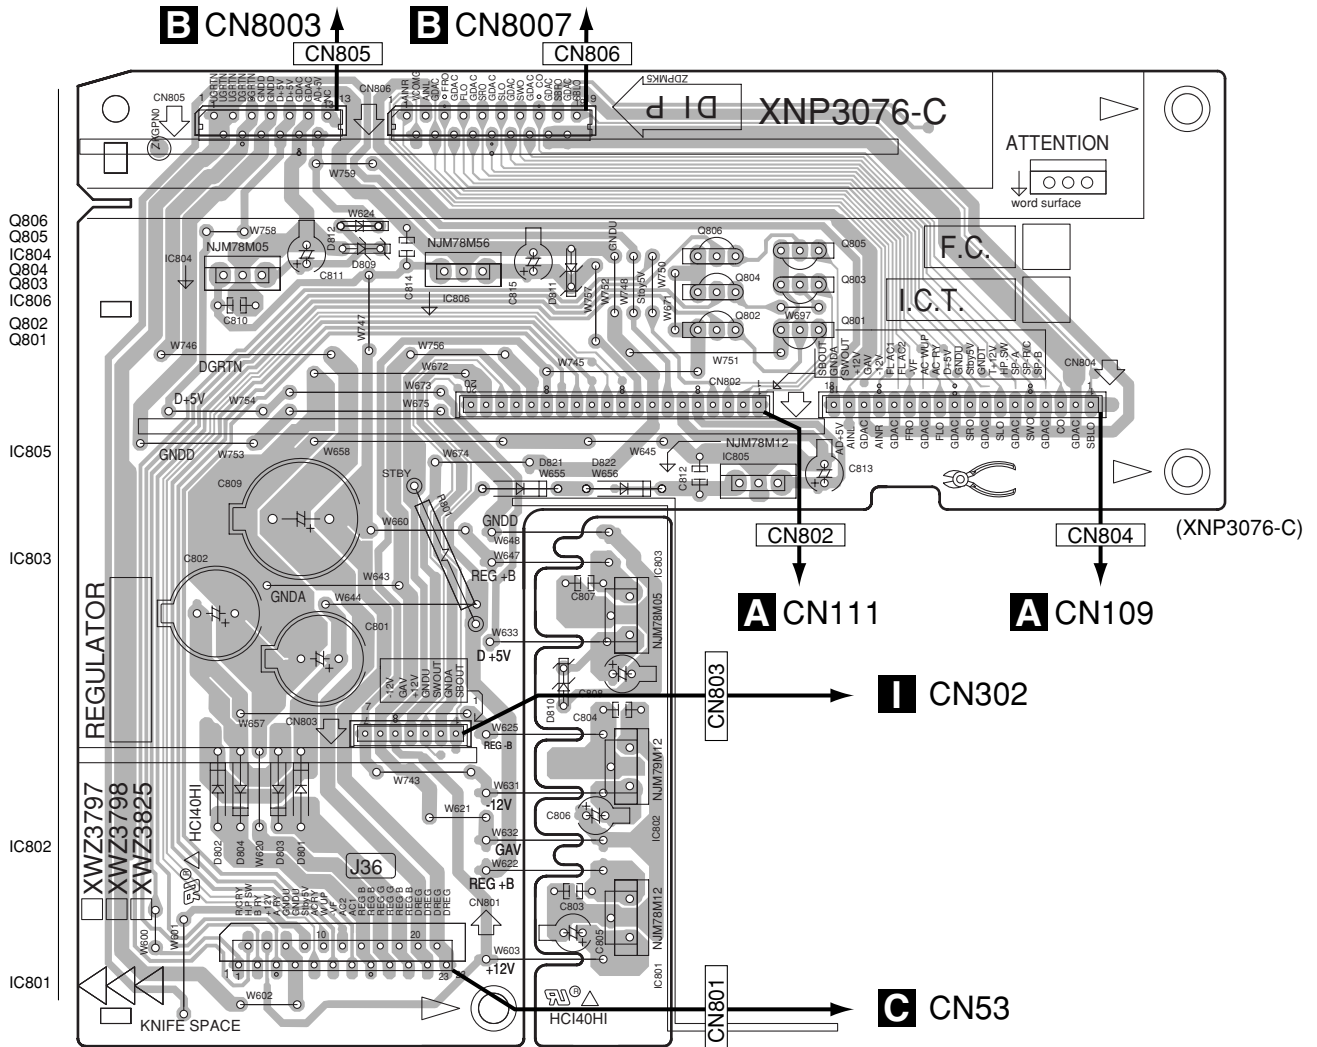

F


F

4.3 MAIN ASSY

SIDE A

A
B
C
D
E
F

1 2 3 4

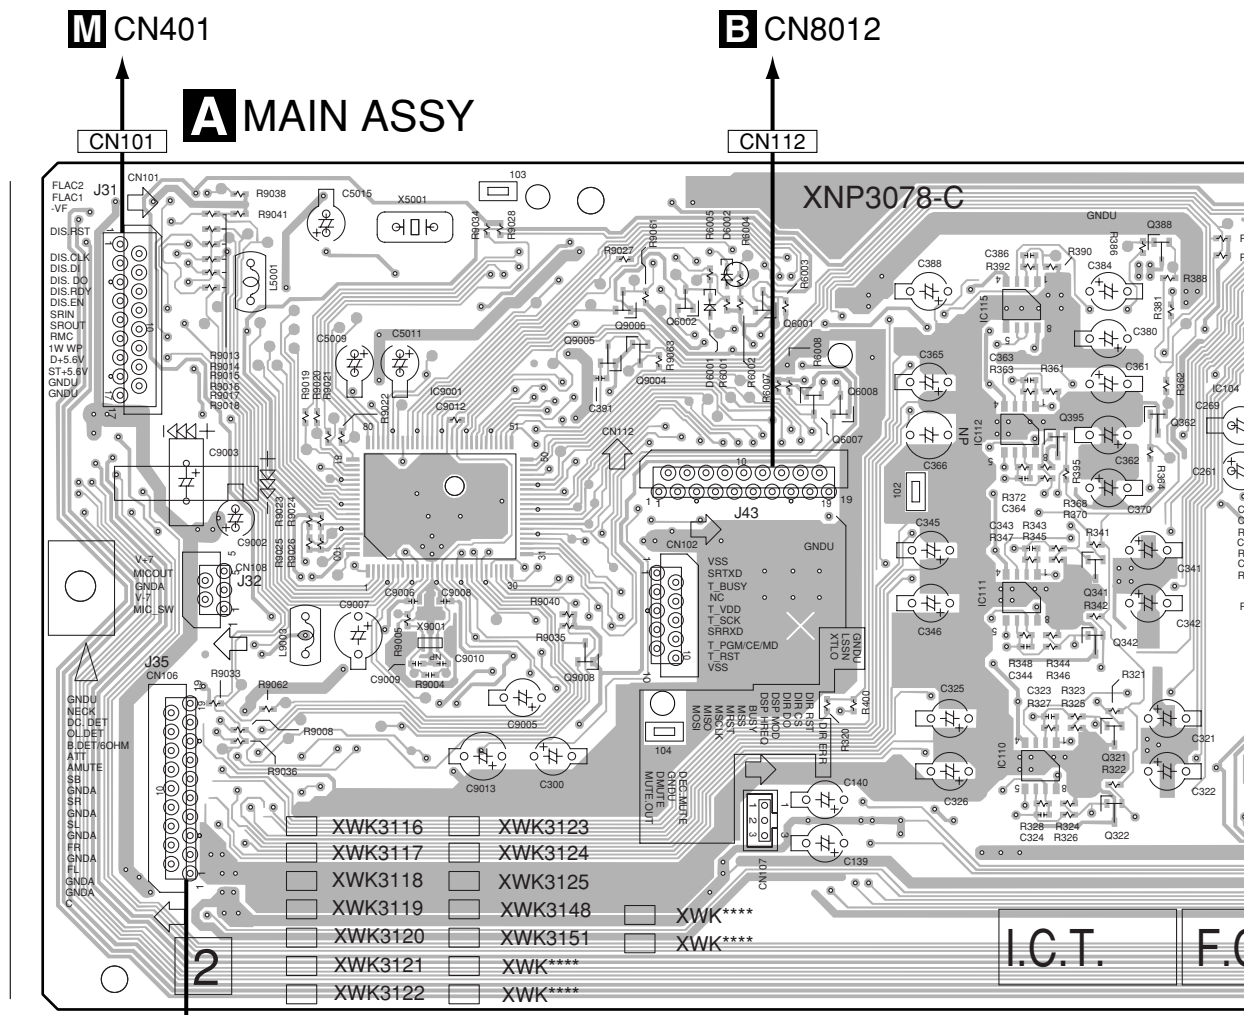

A

1 2 3 4

SIDE A

A


B

C

D

E

F

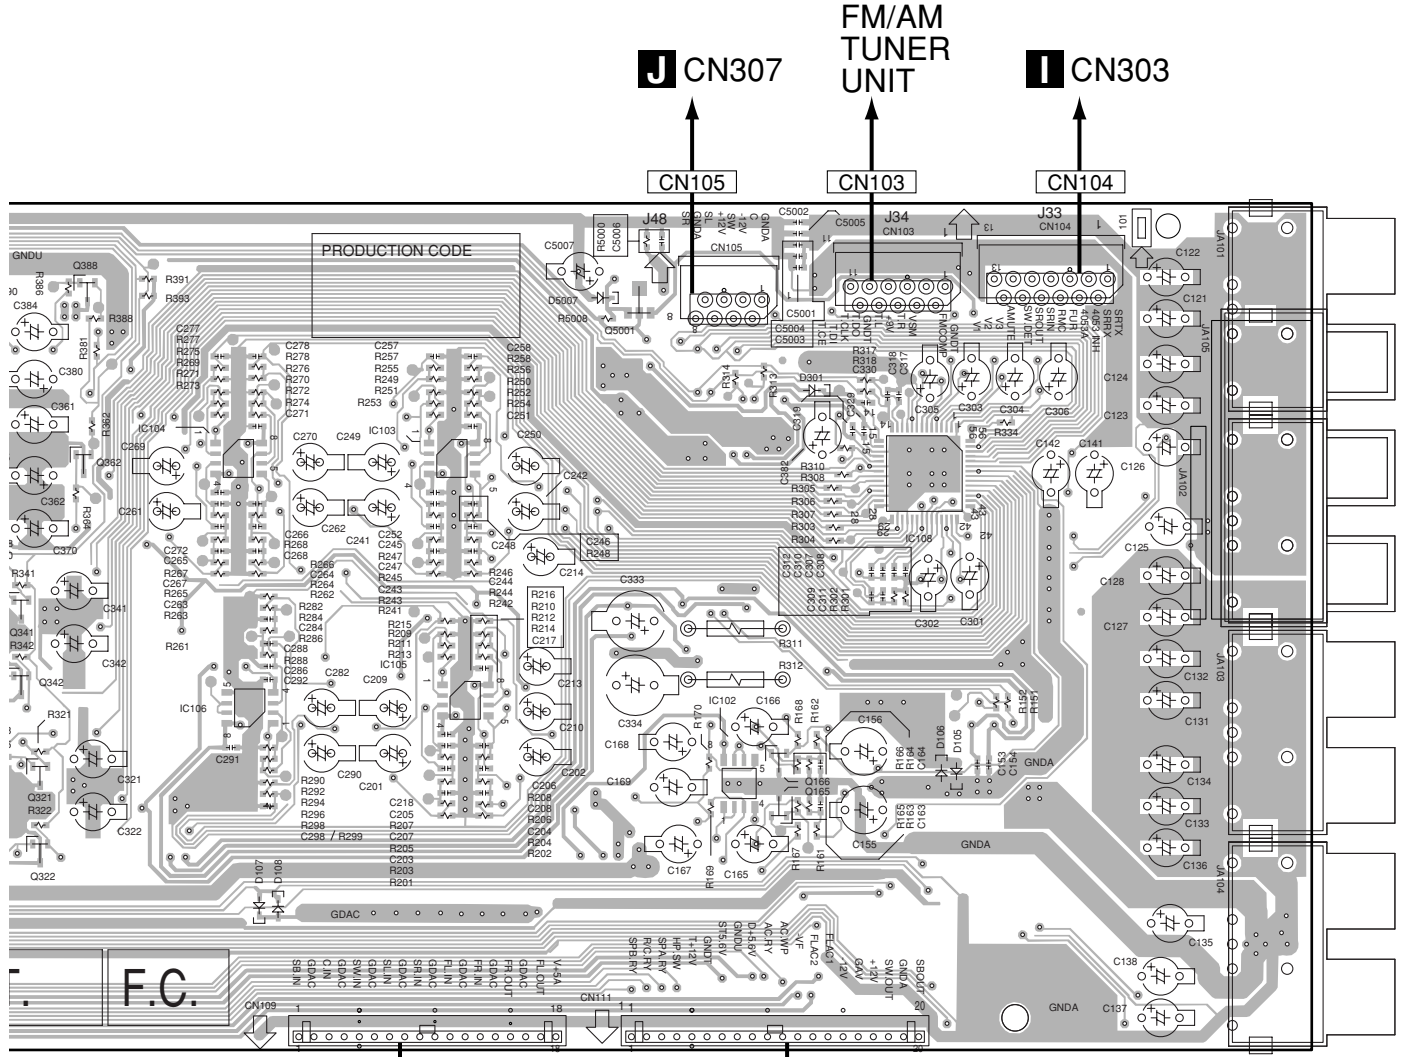

J CN307

FM/AM TUNER UNIT

I CN303

CN105

CN103

CN104

CN109

CN111

(XNP3078-C)

F CN804

F CN802

SIDE B

A

B


C

D


E

F

MAIN ASSY

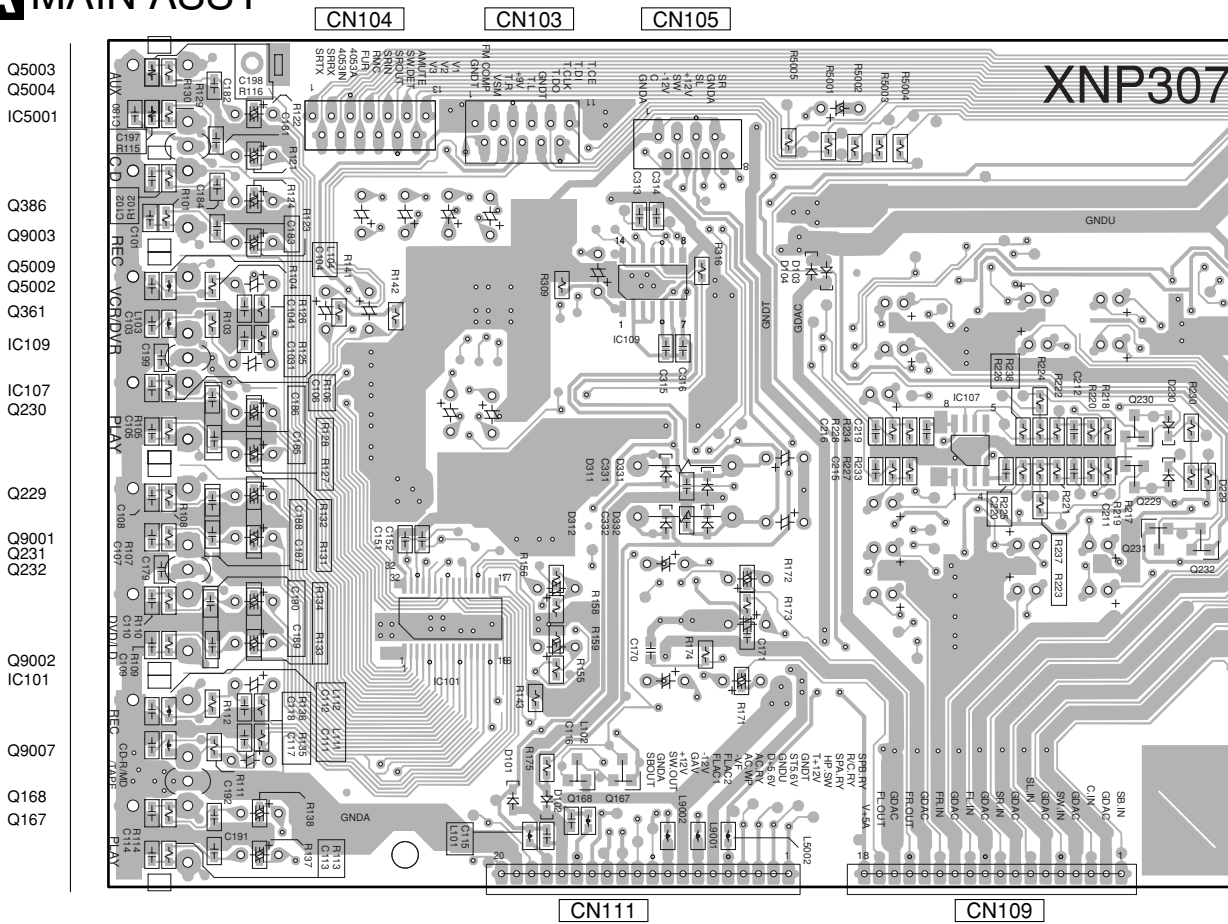

A
B
C
D
E
F

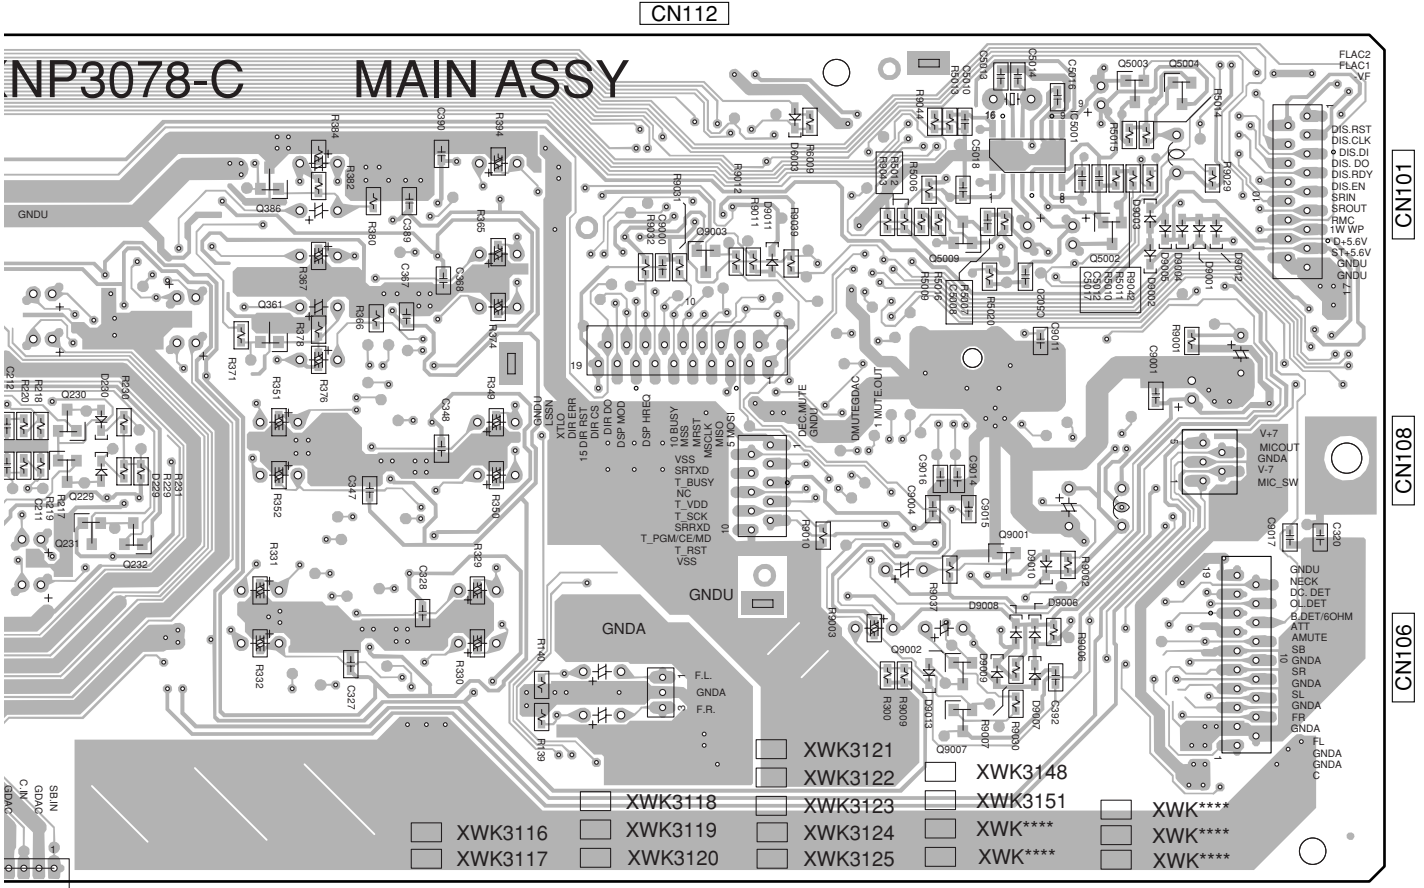

NP3078-C MAIN ASSY

- | | | | | | | | | | |
|--------------------------|---------|--------------------------|---------|--------------------------|---------|--------------------------|---------|--------------------------|---------|
| <input type="checkbox"/> | XWK3116 | <input type="checkbox"/> | XWK3119 | <input type="checkbox"/> | XWK3123 | <input type="checkbox"/> | XWK3151 | <input type="checkbox"/> | XWK**** |
| <input type="checkbox"/> | XWK3117 | <input type="checkbox"/> | XWK3120 | <input type="checkbox"/> | XWK3124 | <input type="checkbox"/> | XWK**** | <input type="checkbox"/> | XWK**** |
| <input type="checkbox"/> | | <input type="checkbox"/> | | <input type="checkbox"/> | XWK3125 | <input type="checkbox"/> | XWK**** | <input type="checkbox"/> | XWK**** |
| <input type="checkbox"/> | | <input type="checkbox"/> | | <input type="checkbox"/> | | <input type="checkbox"/> | XWK3148 | <input type="checkbox"/> | |
| <input type="checkbox"/> | | <input type="checkbox"/> | | <input type="checkbox"/> | | <input type="checkbox"/> | XWK3151 | <input type="checkbox"/> | |

CN112

CN109

CN108

CN106

CN107

(XNP3078-C)

5

6

7

8

5

6

7


8

4.4 DSP ASSY

SIDE A

DSP ASSY

SIDE A

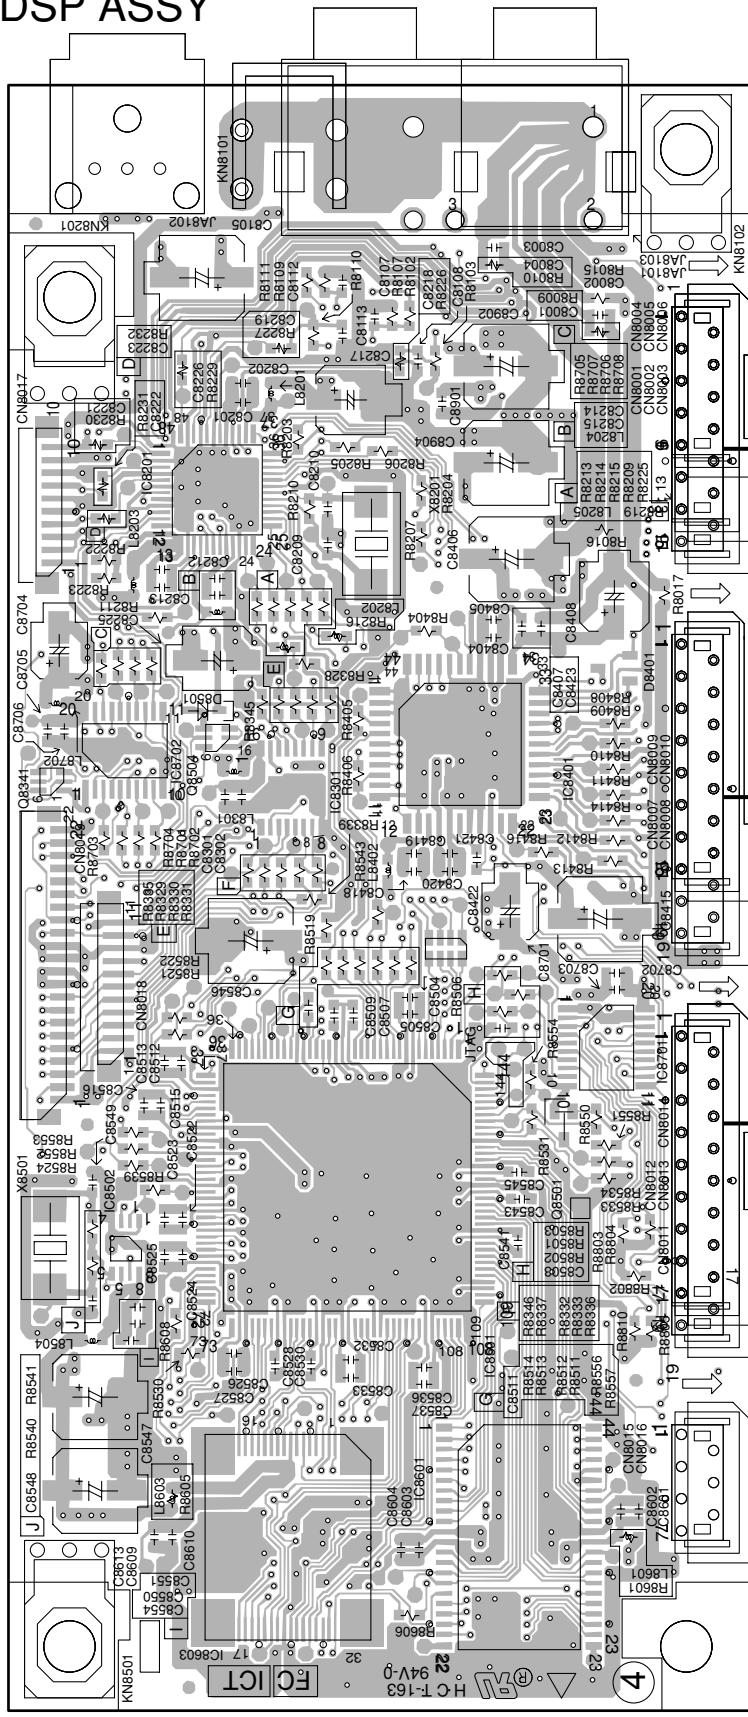

CN8003
F CN805
 CN8007
F CN806
 CN8012
A CN112

(ANP2022-B)

A
 B
 C
 D
 E
 F


B

B

SIDE B

SIDE B

B DSP ASSY

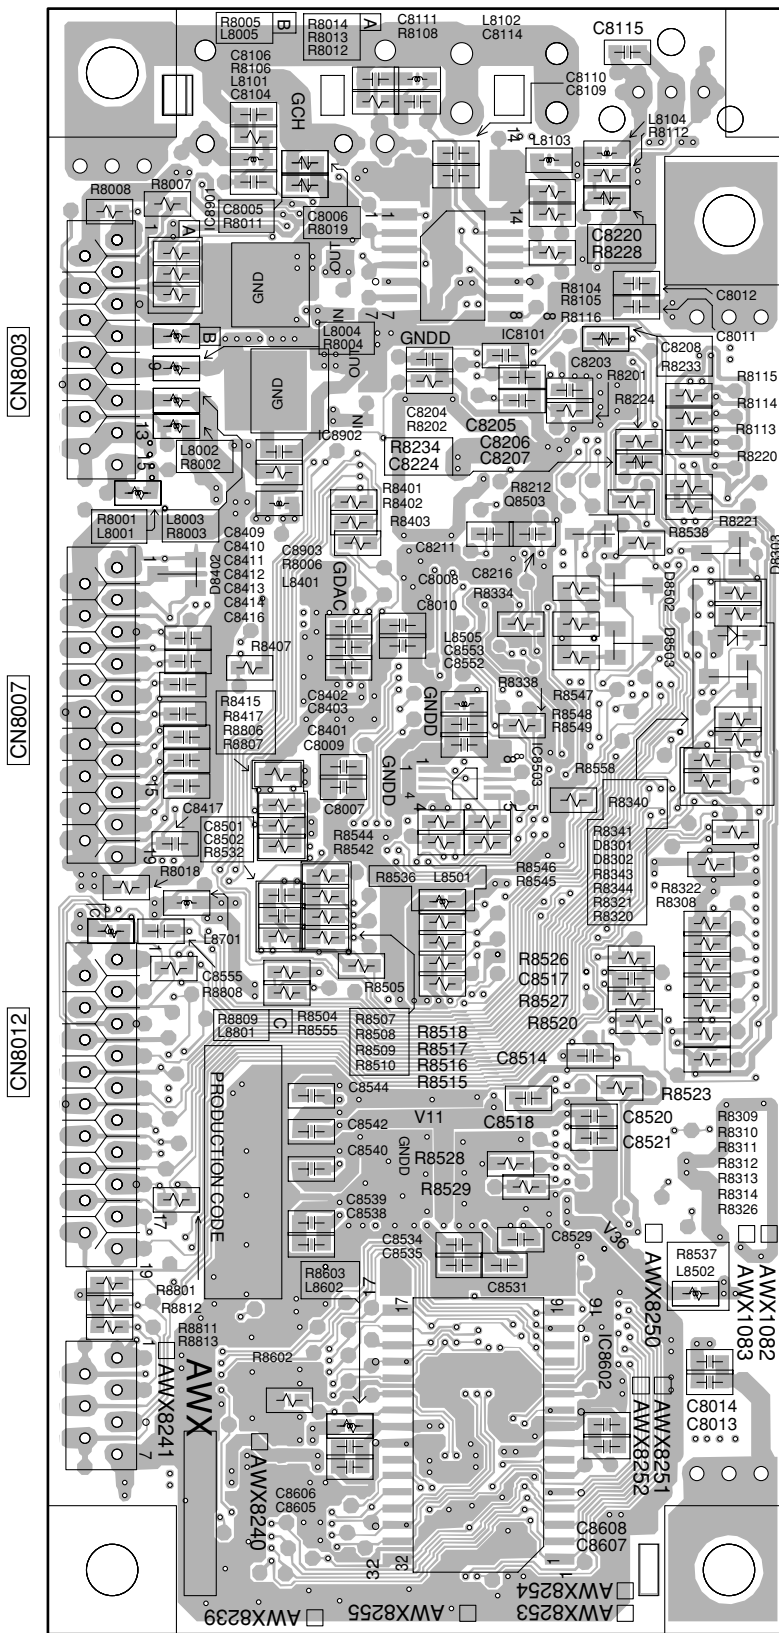

CN8003

CN8007

CN8012

CN8017

IC8901

IC8902

IC8503
Q8503

IC8602

B


B

VSX-415-K

(ANP2022-B)

4.5 AMP & PRIMARY and AMP INPUT ASSYS

SIDE A

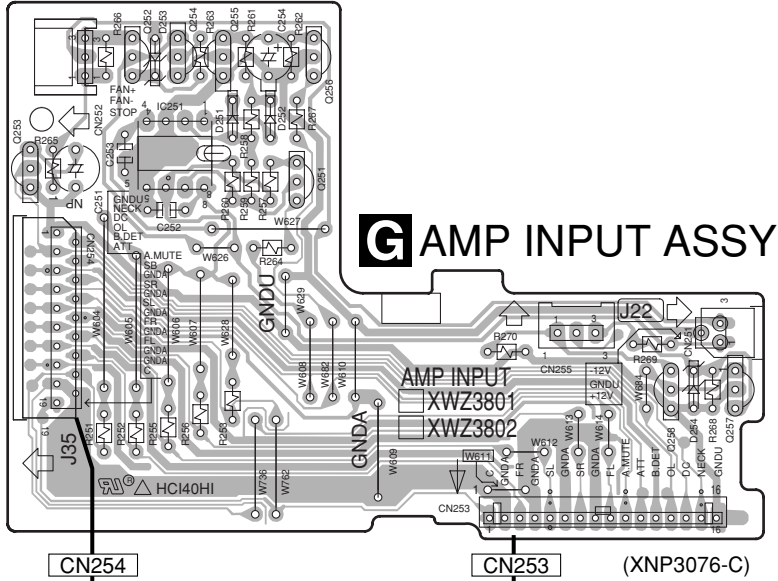

G AMP INPUT ASSY

CN254 CN253 (XNP3076-C)


A CN106

- IC702 Q704
- Q702
- Q722
- Q703
- Q721
- IC701
- Q701
- Q655
- Q602
- Q604
- Q633
- Q636
- Q681
- Q697
- Q682
- Q606
- Q605
- Q601
- Q693
- Q696
- IC607 Q656
- IC605 Q654
- Q631
- Q652
- Q651
- IC604 Q603
- IC606 Q632
- IC603 Q653
- IC601
- IC602


C AMP&PRIMARY ASSY

E J3

E J6
E J7

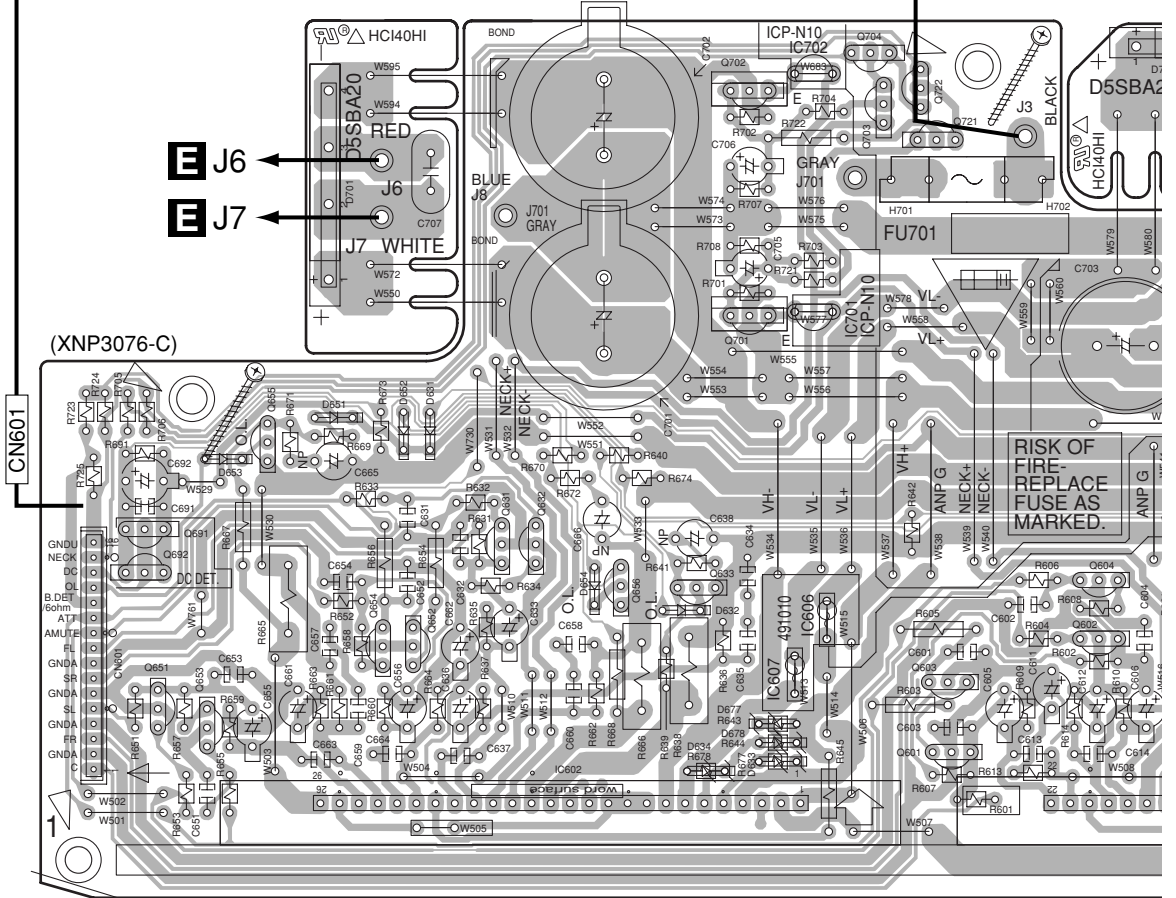

C G

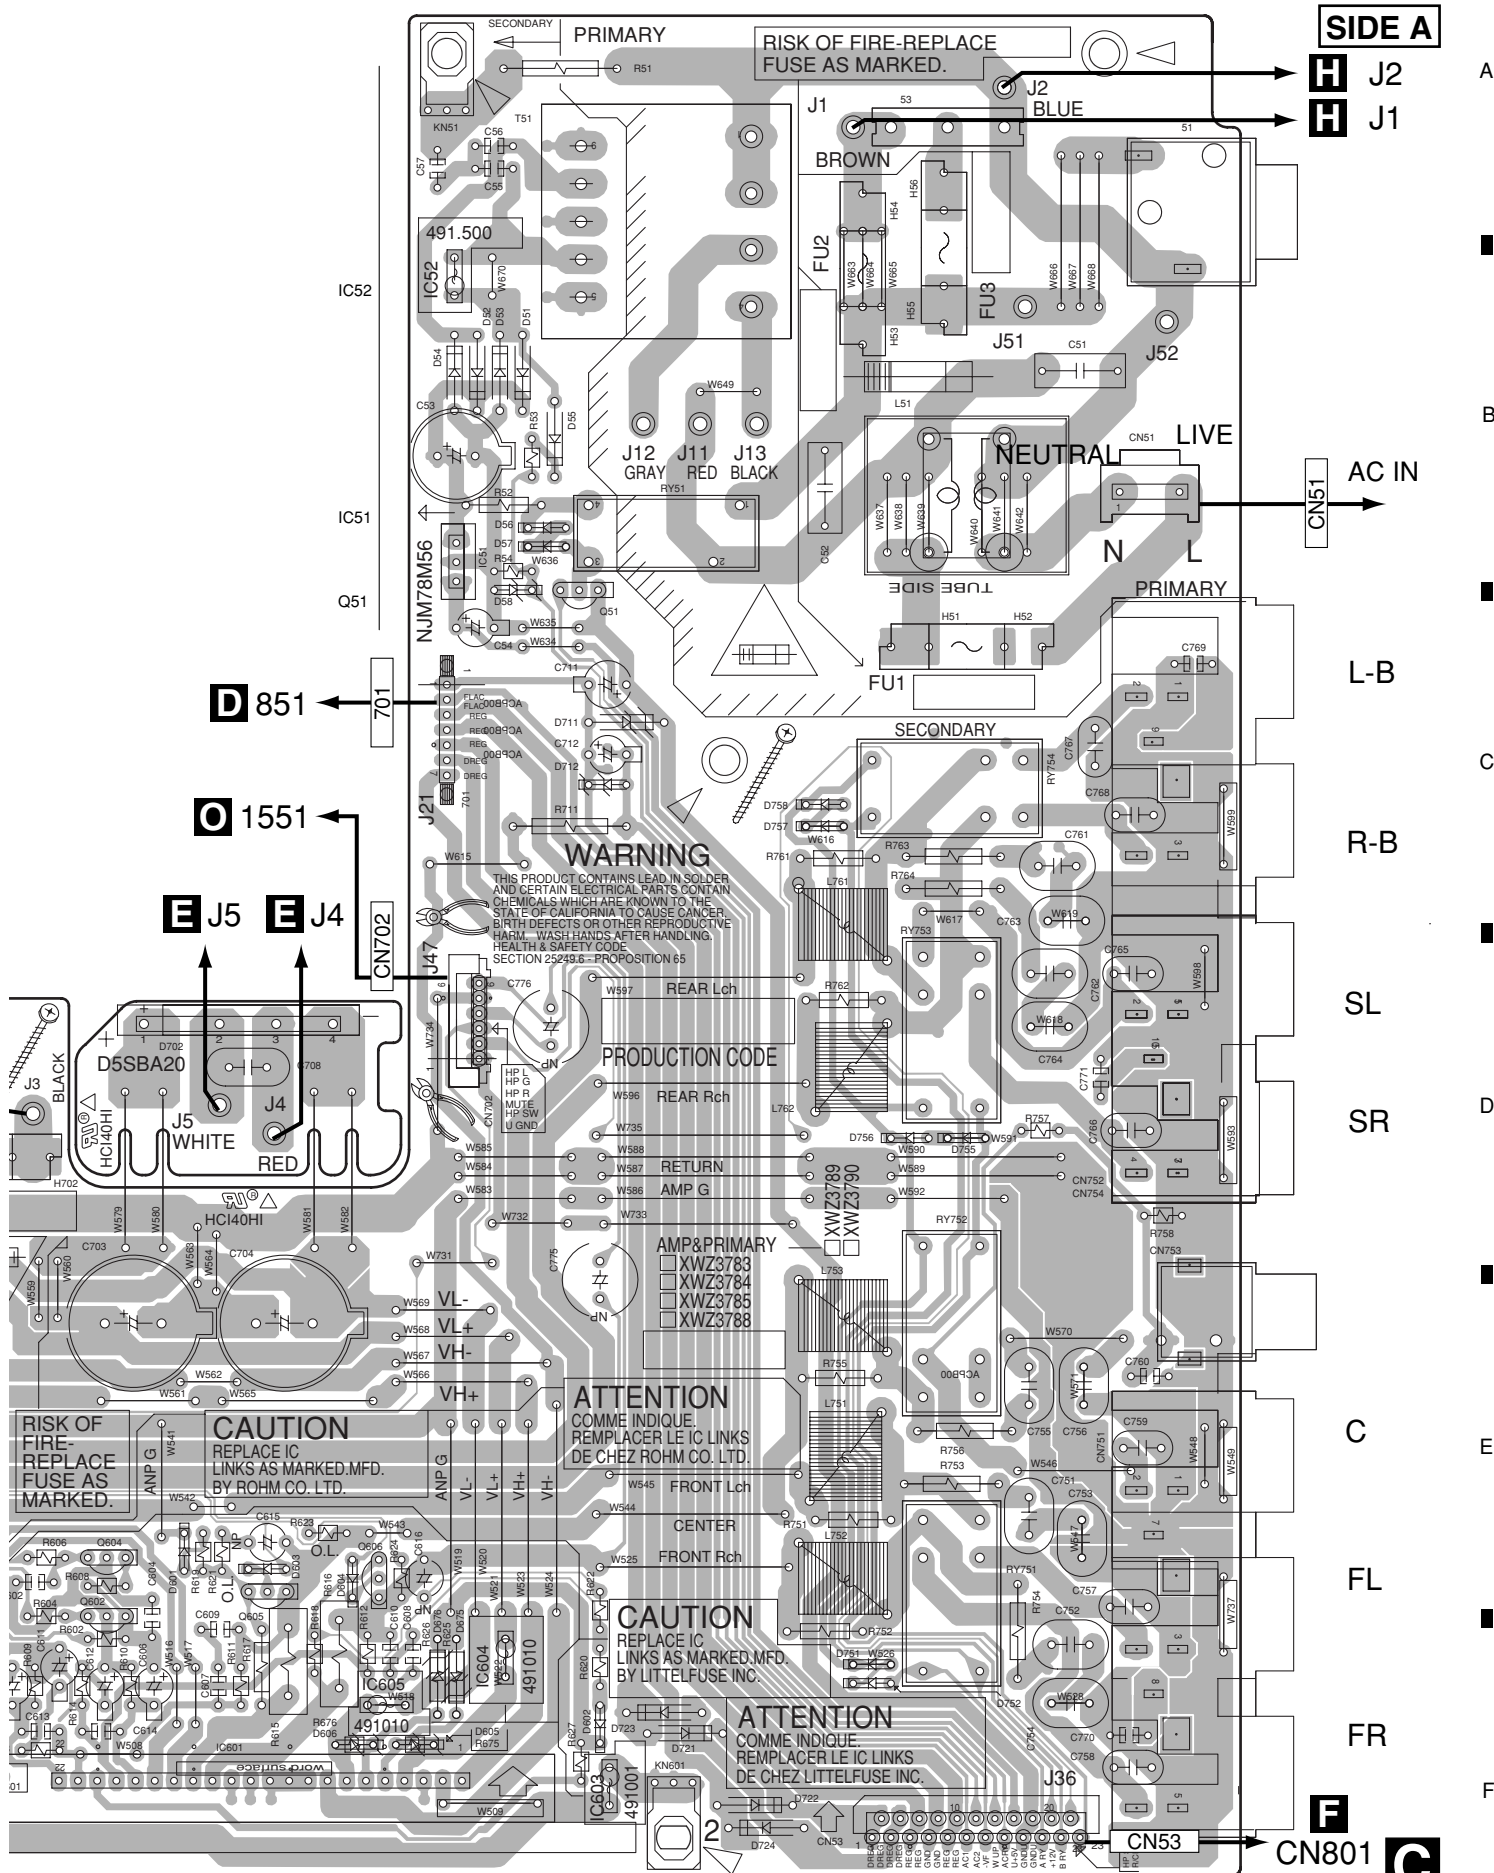

SIDE A
F J2
F J1

AC IN
 CN51

L-B

R-B

SL

SR

C

FL



FR

F CN801
C


4.6 F. DISPLAY, R. ENCODER, POWER SW & KEY, H. P. and F. KEY ASSYS

SIDE A

M FRONT DISPLAY ASSY

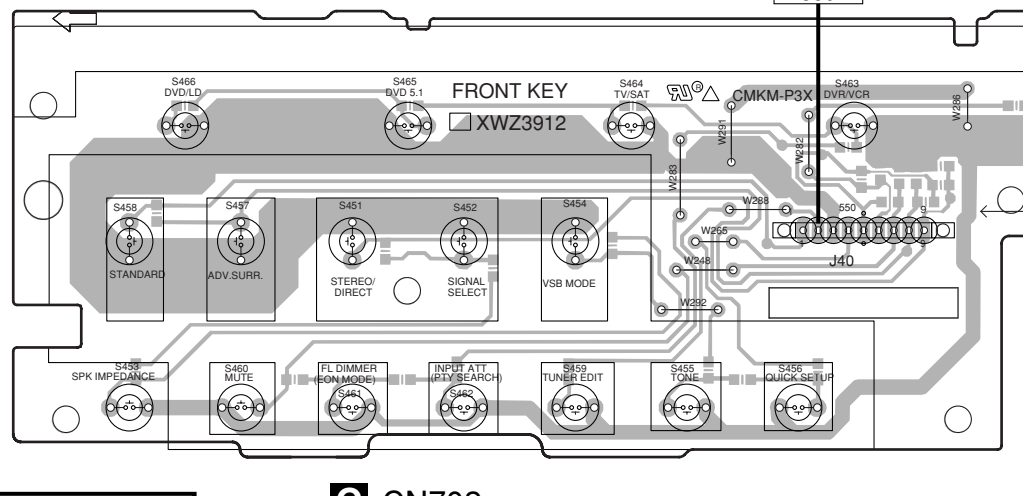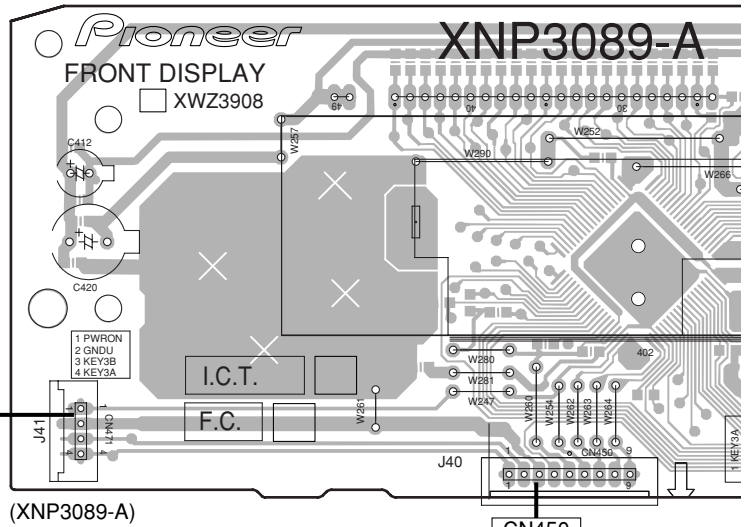


O POWER SW & KEY ASSY

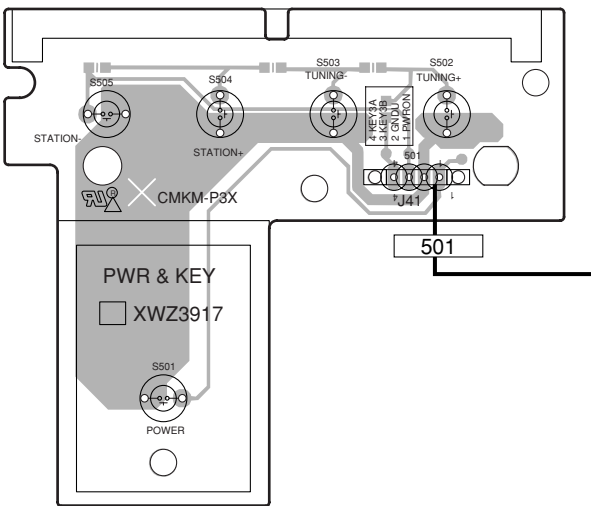



C CN702

Q H.P ASSY

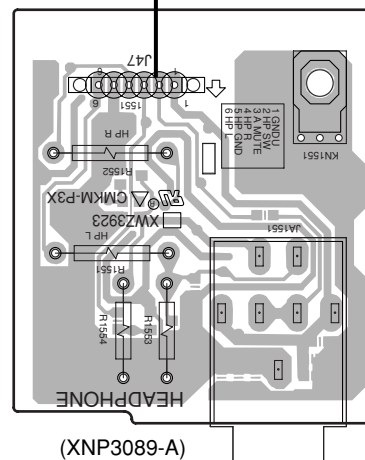


M O P Q

SIDE A

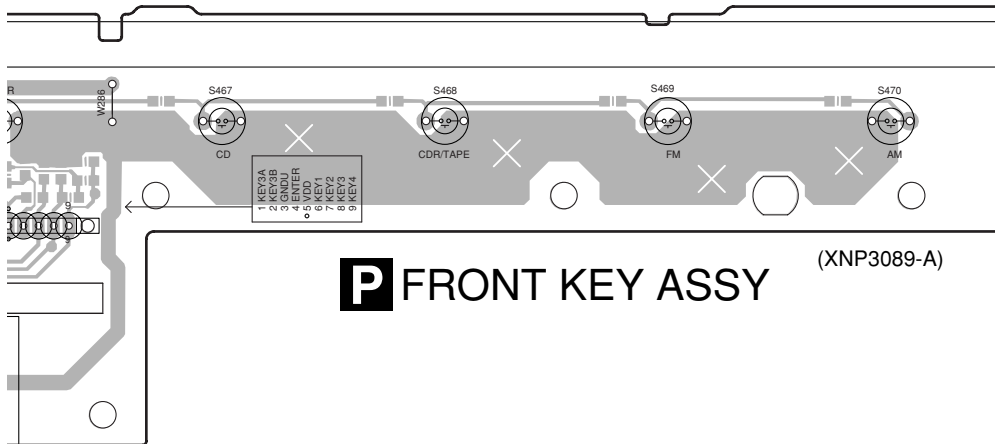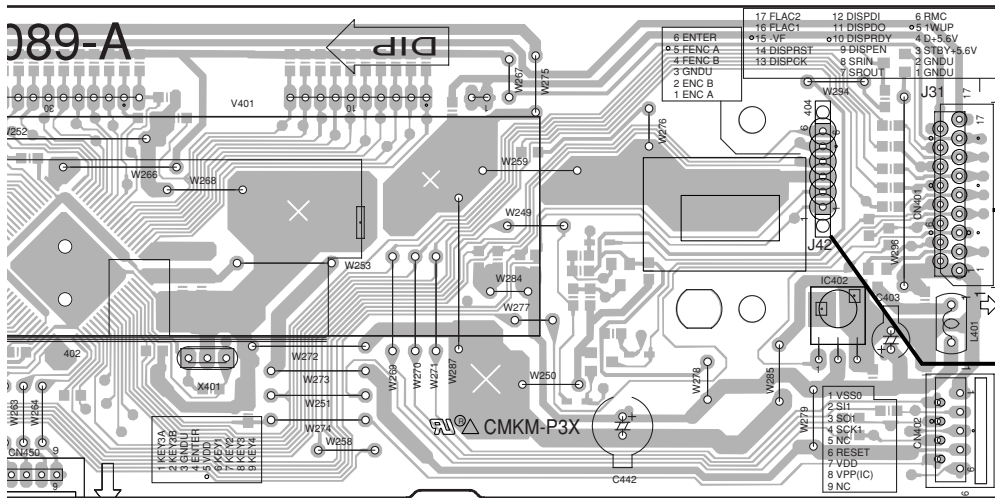

P FRONT KEY ASSY (XNP3089-A)

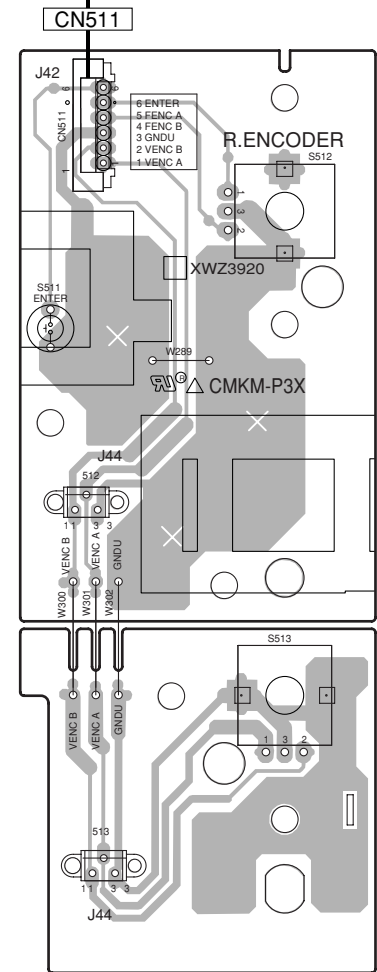


N R.ENCODER ASSY (XNP3089-A)




SIDE B

A

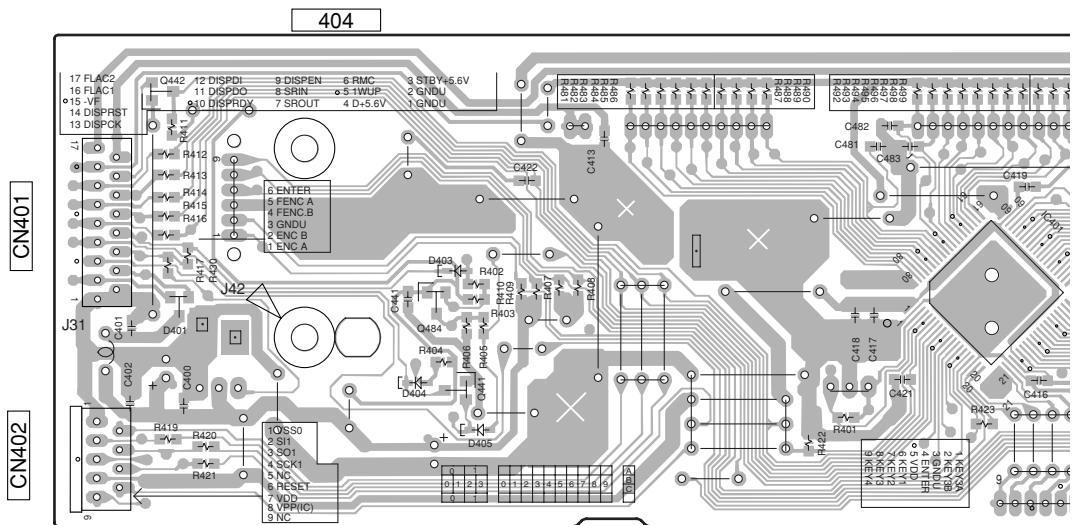


B

C

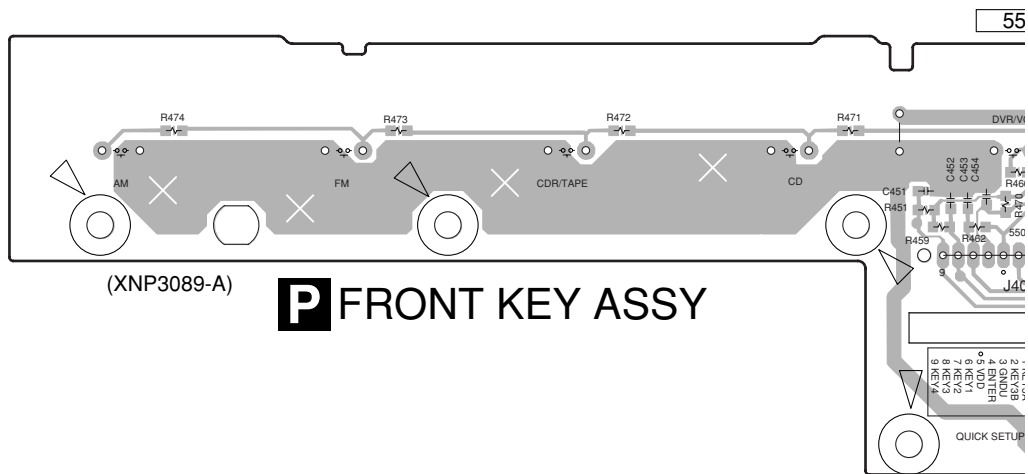


D

E

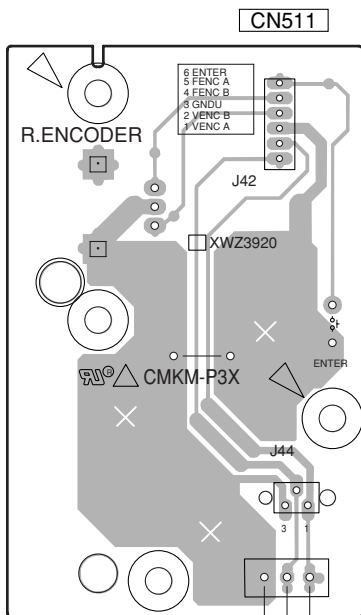

F

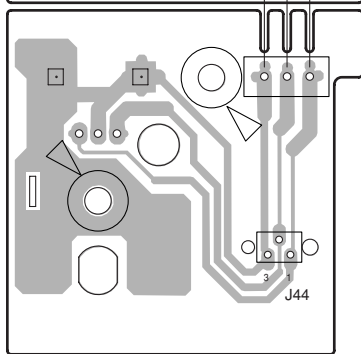

P FRONT KEY ASSY

N R.ENCODER ASSY

M N P


1 2 3 4

4.7 VIDEO and 5.1CH ASSYS

SIDE A


SIDE A

J 5.1CH ASSY

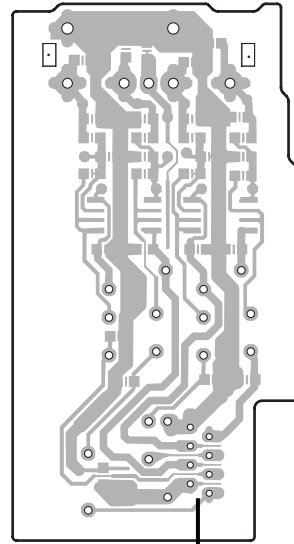

A CN105

I VIDEO ASSY

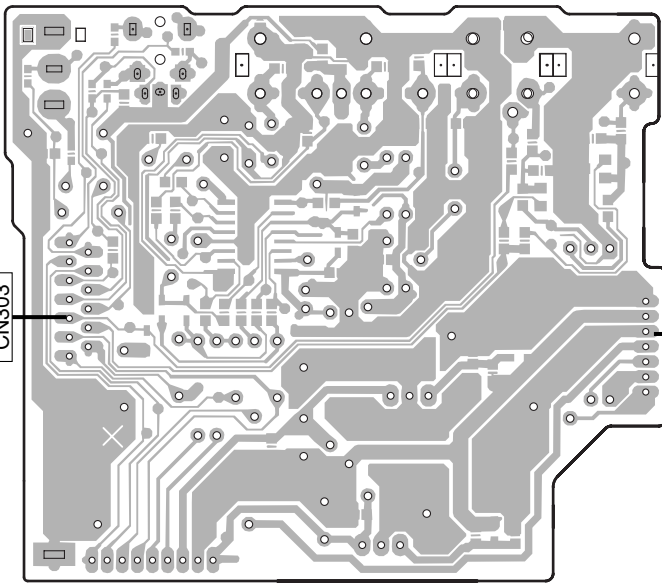

A

I

F


I J

I J

SIDE B

SIDE B

J 5.1CH ASSY

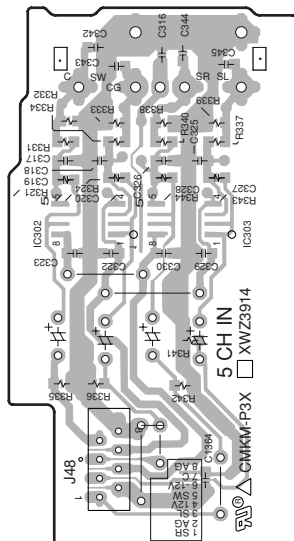


IC302
IC303

CN307

(XNP3089-A)

I VIDEO ASSY

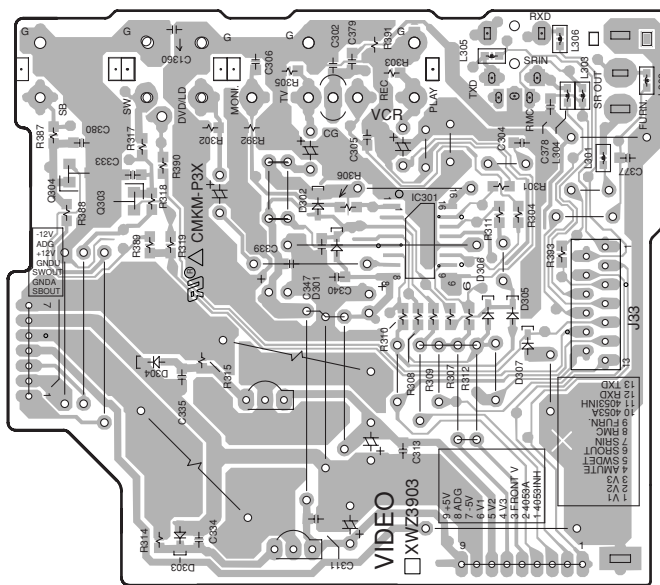

Q304
Q303
IC301

CN302

CN303

(XNP3089-A)

I J

I J

5. ELECTRICAL PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow 56 x 10¹ \rightarrow 561 RD1/4PU567J
 47k Ω \rightarrow 47 x 10³ \rightarrow 473 RD1/4PU473J
 0.5 Ω \rightarrow R50 RN2H R50K
 1 Ω \rightarrow 1R0 RS1P 1R0K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562 x 10¹ \rightarrow 5621 RN1/4PC5627F

LIST OF ASSEMBLIES

Mark No.	Description	Part No.
1..MAIN ASSY		XWK3177
1..DSP ASSY		AWX8418
NSP 1..AMP & PS ASSY		XWK3133
2..AMP & PRIMARY ASSY		XWZ3783
2..TRANS2 ASSY		XWZ3810
2..TRANS3 ASSY		XWZ3813
2..REGULATOR ASSY		XWZ3825
2..AMP INPUT ASSY		XWZ3802
2..TRANS1 ASSY		XWZ3806
NSP 1..COMPLEX ASSY		XWK3166
2..VIDEO ASSY		XWZ3903
2..5.1CH ASSY		XWZ3914
2..FRONT DISPLAY ASSY		XWZ3908
2..R.ENCODER ASSY		XWZ3920
2..POWER SW & KEY ASSY		XWZ3917
2..FRONT KEY ASSY		XWZ3912
2..H.P. ASSY		XWZ3923
1..FM/AM TUNER UNIT		AXX7170

Mark No.	Description	Part No.
Q165, Q166, Q321, Q322		2SC3326
Q341, Q342, Q361, Q362, Q395		2SC3326
Q5001		2SD1664
Q229, Q230		2SK208
Q167, Q231, Q9002-Q9005		DTA124EK
Q9008		DTA143TK
Q232		DTC124EK
Q168, Q5003, Q9001		DTC143EK
Q9007		DTC143TK
D103-D108, D229, D230, D301		1SS355
D311, D312, D9001-D9013		1SS355
D101, D102		RB501V-40
D5007		UDZS10B
D331, D332		UDZS6.8B

COILS AND FILTERS

L9001, L9002 Chip Solid Inductor	ATL7002
L5001, L9003	LFEA2R2J
L101-L104, L111, L112, L5002	QTL1013
Chip Solid Inductor	

CAPACITORS

C9003 (0.22F/5.6V)	ACH7144
C101-C114, C151, C152	CCSRCH101J50
C163, C164, C183-C192	CCSRCH101J50
C243, C244, C263, C317, C318	CCSRCH101J50
C323, C324, C343, C344, C363	CCSRCH101J50
C1031, C1041, C117, C118	CCSRCH220J50
C5013, C5014	CCSRCH270J50
C205-C208, C245-C248, C265	CCSRCH331J50
C267	CCSRCH331J50
C203, C204	CCSRCH471J50
C5017	CCSRCH561J50
C366	CEANP4R7M50
C123-C128, C131-C138	CEAT100M50
C141, C142, C167, C168	CEAT100M50
C209, C210, C213, C214	CEAT100M50
C249, C250, C269, C270	CEAT100M50
C301-C306, C321, C322	CEAT100M50
C341, C342, C361, C362	CEAT100M50
C5015	CEAT101M10
C5007	CEAT101M16
C169	CEAT221M6R3
C201, C202, C241, C242	CEAT2R2M50
C261, C262, C5011, C9005	CEAT2R2M50
C9007	CEAT331M6R3
C325, C326, C345, C346, C365	CEAT470M25
C155, C156	CEAT470M50

AMP & PS ASSY

OTHERS

J21 JUMPER WIRE D20PYY0715E

COMPLEX ASSY

OTHERS

J41 JUMPER WIRE 4P D20PYY0411E
 J42 6P JUMPER WIRE D20PYY0608E
 J47 JUMPER WIRE 6P D20PYY0630E
 J40 JUMPER WIRE 7P D20PYY0907E

MAIN ASSY SEMICONDUCTORS

IC108 BD3813KS
 IC101 BD3841FS
 IC5001 BU1924F
 IC103-IC105, IC107 HA17558AF
 IC102 NJM2100M

IC9001 PD5963C
 IC110-IC112 UPC4570G2
 Q5004 2SA1037K
 Q5009 2SC2412K

5
Mark No. Description

C333, C334
 C9013
 C165, C166, C370
 C170

C320, C392, C5001, C5016
 C9015, C9016
 C115, C116, C153, C154, C171
 C179, C180, C199, C215-C218
 C251, C252, C266, C271, C272

C319, C327-C330, C347, C348
 C367, C368, C5002, C5008, C9004
 C9008, C9017
 C219, C220, C309-C312
 C5003, C9006

C264
 C257, C258, C277, C278
 C307, C308, C364, C5020
 C9011, C9014
 C268

C391

RESISTORS

⚠ R171, R172
 ⚠ R173, R174
 ⚠ R311, R312
 Other Resistors

OTHERS

X5001 (4.332MHz)
 X9001 (15.7MHz)
 CN105 8P Connector
 CN103 11P Connector
 CN104 13P Connector

CN101 17P Connector
 CN106, CN112 19P Connector
 CN109 18P Socket
 CN111 20P Socket
 JA103, JA104

JA105 PCB Binder

B DSP ASSY SEMICONDUCTORS

IC8201
 IC8401
 IC8501
 IC8901
 IC8902

IC8101
 IC8701
 IC8702
 IC8502
 Q8504

Q8503
 D8501
 D8401
 D8402, D8502, D8503

COILS AND FILTERS

L8002, L8004, L8501, L8502
 CHIP SOLID INDUCTOR
 L8101-L8104, L8201, L8203, L8204

ATL7002
 QTL1013

6
Part No.

CEAT471M10
 CEAT471M6R3
 CEAT4R7M50
 CKSQYB104K16

CKSRYB102K50
 CKSRYB102K50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50

CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB104K16
 CKSRYB105K10

CKSRYB223K25
 CKSRYB472K50
 CKSRYB472K50
 CKSRYB473K16
 CKSRYB562K50

CKSRYF104Z16

RS1/16S470J
 RS1/16S472J
 RS1LMF101J
 RS1/16S####J

ASS7004
 XSS3004
 52044-0845
 52044-1145
 52044-1345

52045-1745
 52045-1945
 KP200TA18L
 KP200TA20L
 XKB3017

XKB3037

AK4114VQ
 AK4628VQE
 DSPD56367PV150
 NJM2391DL1-33
 NJU7223DL1-18

TC74HCU04AF
 TC74LVX244FT
 TC74VHCT244AFT
 TC7WU04FU
 UMD2N

UN5112
 1SS355
 DAN202K
 DAP202K

7
Mark No. Description

L8401, L8402, L8504, L8701, L8702
 CHIP SOLID INDUCTOR

CAPACITORS

C8209, C8210
 C8421
 C8107, C8112
 C8007, C8008, C8109, C8201, C8212
 C8214, C8404, C8409-C8414

C8416, C8417, C8419, C8505, C8507
 C8509, C8511, C8512, C8515, C8518
 C8520, C8522, C8524, C8526, C8528
 C8530, C8532, C8534, C8536, C8539
 C8541, C8543, C8545, C8551, C8703

C8706
 C8548, C8549
 C8701, C8704
 C8105, C8406, C8415, C8546, C8547
 C8902, C8904

C8217, C8225, C8408
 C8204, C8555
 C8009, C8104, C8114, C8405, C8418
 C8517, C8554
 C8010, C8115, C8202, C8207, C8213

C8215, C8407, C8420, C8422, C8504
 C8513, C8521, C8523, C8525, C8527
 C8529, C8531, C8533, C8535
 C8537, C8538, C8540, C8542, C8544
 C8550, C8702, C8705, C8901, C8903

C8110, C8516
 C8514
 C8203

RESISTORS

R8506
 R8201
 Other Resistors

OTHERS

CN8012 19P CONNECTOR
 JA8101 2P PIN JACK
 JA8102 OPT. LINK IN
 CN8017 10P CONNECTOR
 CN8003 13P SOCKET

CN8007 19P SOCKET
 X8501 CRYSTAL RESONATOR
 (20MHz)
 X8201 CRYSTAL RESONATOR
 (24.576MHz)

C AMP & PRIMARY ASSY SEMICONDUCTORS

⚠ IC52
 ⚠ IC603
 ⚠ IC604-IC607
 ⚠ IC701, IC702
 IC51

⚠ IC601
 ⚠ IC602
 Q703, Q721
 Q702
 Q691, Q692

AEK7005
 AEK7009
 AEK7022
 ICP-N10
 NJM78M56FA

PAC010A
 PAC011A
 2SA1145
 2SA2005
 2SC1740S

8
Part No.

QTL1013

CCSRCH100D50
 CCSRCH101J50
 CCSRCH470J50
 CCSRCH471J50
 CCSRCH471J50

CCSRCH471J50
 CCSRCH471J50
 CCSRCH471J50
 CCSRCH471J50
 CCSRCH471J50

CCSRCH471J50
 CCSRCH8R0D50
 CEVW100M16
 CEVW101M16
 CEVW101M16

CEVW470M6R3
 CKSRYB102K50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB104K16

CKSRYB104K16
 CKSRYB104K16
 CKSRYB104K16
 CKSRYB104K16
 CKSRYB104K16

CKSRYB105K6R3
 CKSRYB333K16
 CKSRYB473K50

RAB4C101J
 RS1/16S1802F
 RS1/16S####J

52045-1945
 AKB7131
 GP1FA513RZB
 VKN1414
 XKP3077

XKP3080
 VSS1171

XSS3003

Mark No. Description**Part No.**

Q704, Q722
Q605, Q606, Q633, Q655, Q656
Q701
Q601-Q604, Q631, Q632
Q651-Q654

2SC1845
2SC2240
2SC5511
2SC5974A
2SC5974A

Q51
D56, D57, D601-D604
D631, D632, D651-D654
D751, D752, D755, D756
△D701, D702

DTC143ES
1SS133
1SS133
1SS133
D5SBA20

D711
D58, D712
D605, D606, D633, D634
△D51-D55, D721-D724

MTZJ22D
MTZJ5.1B
MTZJ8.2A
S5688

COILS AND FILTERS

L751-L753, L761, L762 Coil
L51 Line Filter

ATH1004
XTF3004

SWITCHES AND RELAYS

RY51
RY751-RY753

XSR3006
XSR3007

CAPACITORS

C707, C708 (0.01/AC250V)
C607-C610, C634, C635
C657-C660
C615, C616, C638, C665, C666
C775, C776

ACG1005
CCPUCH6R8K50
CCPUCH6R8K50
CEANP2R2M50
CEANP470M50

C712
C611, C612, C636, C661, C662
C711
C53
C692

CEAT101M10
CEAT101M16
CEAT101M35
CEAT102M16
CEAT221M10

C54
C605, C606, C633, C655, C656
C705, C706
C613, C614, C637, C663, C664
C691, C769, C770

CEAT470M25
CEAT4R7M50
CEHAT100M2A
CKPUYB101K50
CKPUYB102K50

C603, C604, C632, C653, C654
C55-C57
C751-C756, C761-C764
C757-C759, C765, C766
C51, C52(10000pF/AC250V)

CKPUYB331K50
CKPUYF103Z25
CQ MBA224J50
CQ MBA472J50
XCG3009

C703, C704 (3300uF/42V)
C701, C702 (4700uF/63V)

XCH3012
XCH3016

RESISTORS

△R615, R616, R638, R665, R666
(0.22 /5W)
△R52
△R751, R752, R755, R761, R762
△R753, R754, R756, R763, R764
△R711

ACN7094
RD1/2PM270J
RD1/4PUF101J
RS1LMF4R7J
RS2LMF332J

Other Resistors

RD1/4PU###J

OTHERS

CN53 23P Connector
CN702 6P Jumper Connector
H51, H52 Fuse Clip
△T51 Standby Transformer
CN601 16P Plug

52045-2345
52147-0610
AKR7001
ATT7040
KM200TA16

Mark No. Description**Part No.**

CN51 AC Cord Socket
KN51, KN601 Earth Metal Fitting
CN751 6P Speaker Terminal
CN754 4P Speaker Terminal
701 7P Cable Holder

RKP1751
VNF1084
XKE3018
XKE3019
XKP3047

**D TRANS2 ASSY
SEMICONDUCTORS**

△IC851-IC853

AEK7012

OTHERS

851

XKP3047

E TRANS3 ASSY

TRANS3 ASSY has no service part.

**F REGULATOR ASSY
SEMICONDUCTORS**

IC803, IC804
IC801, IC805
IC806
IC802
Q801, Q803

NJM78M05FA
NJM78M12FA
NJM78M56FA
NJM79M12FA
DTA124ES

Q802, Q804
D809-D811

DTC114ES
MTZJ6.2B
S5688G

CAPACITORS

C811, C815
C813
C801, C802
C809
C808

CEAT101M10
CEAT101M16
CEAT222M25
CEAT472M16
CEHAT101M10

C805, C806
C803, C804, C807, C810, C812
C814

CEHAT101M16
CKPUYF103Z25
CKPUYF103Z25

RESISTORS

R801

RS3LMF331J

OTHERS

CN801 23P Connector
CN805 13P Plug
CN806 19P Plug
CN804 18P Plug
CN802 20P Plug

52045-2345
AKP7059
AKP7062
KM200TA18
KM200TA20

CN803 7P Plug

KM200TA7

**G AMP INPUT ASSY
OTHERS**

CN254 19P Connector
CN253 16P Socket

52044-1945
KP200TA16L

H TRANS1 ASSY

TRANS1 ASSY has no service part.

5
Mark No. Description Part No.

**I VIDEO ASSY
 SEMICONDUCTORS**

IC301 NJM2595M
 Q302 2SA1515
 Q301 2SC3377
 Q303 2SC5938A
 D301, D302, D305, D306 1SS355

D303, D304 UDZS6R2(B)

CAPACITORS

C347 CCSRCH470J50
 C307-C310, C312, C314, C338 CEAT470M25
 C1360,C302 CKSRYB103K50
 C339, C340 CKSRYB104K25
 C304-C306 CKSRYB221K50

C333 CKSRYB331K50
 C311, C313 CKSRYB473K25

RESISTORS

△ R313, R316 RS3LMF560J
 Other Resistors RS1/16S###J

OTHERS

CN303 13P CONNECTOR 52044-1345
 CN302 7P SOCKET KP200TA7L
 390 PCB BINDER VEF1040
 JA308 6P PIN JACK XKB3049

**J 5.1CH ASSY
 CAPACITORS**

C342-C345 CCSRCH101J50
 C321, C324, C331, C332 CEAT4R7M50
 C1364 CKSRYB102K50
 C316 CKSRYB103K50
 C317, C318, C325, C326 CKSRYB221K50

RESISTORS

All Resistors RS1/16S###J

OTHERS

CN307 8P CONNECTOR 52044-0845
 CN309 PIN JACK (4P) XKB3035

**M FRONT DISPLAY ASSY
 SEMICONDUCTORS**

IC402 GP1UM27XK0VF
 IC401 PE5420A
 Q484 2SA1037K
 Q442 DTC124EK
 D403 1SS355

D401 DAN202K

COILS AND FILTERS

L401 LFEA2R2J

CAPACITORS

C482, C483 CCSRCH221J50
 C481 CCSRCH471J50
 C442 CEAL470M10
 C403 CEAT221M6R3
 C412 CEAT470M50

7
Mark No. Description Part No.

C415 CKSRYB102K50
 C401, C402, C410, C411, C419 CKSRYB103K50
 C441 CKSRYB103K50
 C418, C421 CKSRYB104K16
 C420 XCH3011

RESISTORS

All Resistors RS1/16S###J

OTHERS

404 6P CABLE HOLDER 51048-0600
 CN401 17P CONNECTOR 52044-1745
 CN471 4PJUMPER CONNECTOR 52151-0410
 CN450 9PJUMPER CONNECTOR 52151-0910
 CN402 FFC CONNECTOR 9P 52492-0920

V401 FL TUBE XAV3022
 X401 CERAMIC RESONATOR VSS1142
 (5MHZ)

**N R.ENCODER ASSY
 SWITCHES AND RELAYS**

S511 VSG1024
 S513 XSX3005
 S512 XSX3006

OTHERS

CN511 7P CABLE HODER 52147-0610

**O POWER SW & KEY ASSY
 SWITCHES AND RELAYS**

S501-S505 VSG1024

RESISTORS

All Resistors RS1/16S###J

OTHERS

501 4P CABLE HOLDER 51048-0400

**P FRONT KEY ASSY
 SWITCHES AND RELAYS**

S451-S470 VSG1024

CAPACITORS

C451-C454 CKSRYB102K50

RESISTORS

All Resistors RS1/16S###J

OTHERS

550 9P CABLE HOLDER 51048-0900

**Q H.P. ASSY
 SEMICONDUCTORS**

Q1551,Q1552 2SC5938A

CAPACITORS

C1554,C1557 CCSRCH471J50
 C1553,C1556 CKSRYB103K50
 C1555,C1558 CKSRYB104K16
 C1551,C1552 CKSRYB223K50



7. GENERAL INFORMATION

7.1 DIAGNOSIS



7.1.1 DISASSEMBLY

Note: Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

■ Diagnosis

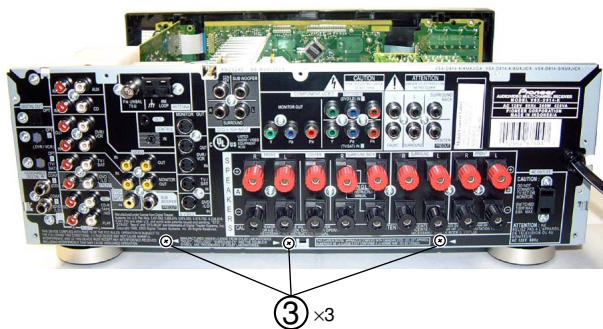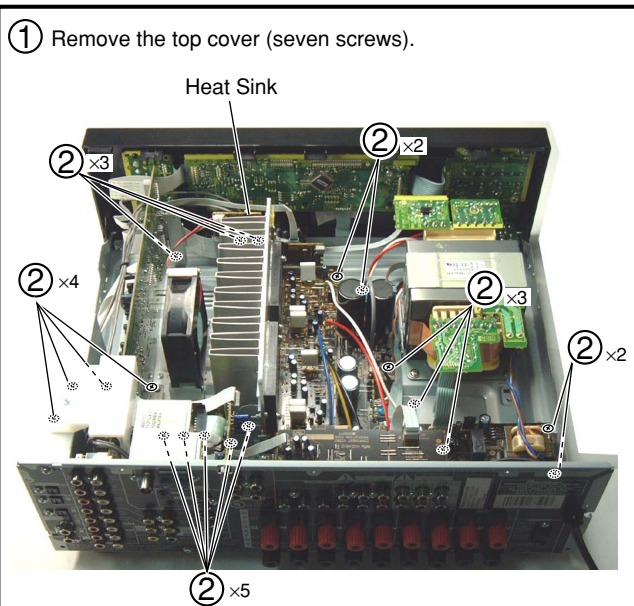

Note : This photograph may show a different model.
However, the method for disassembly is the same.

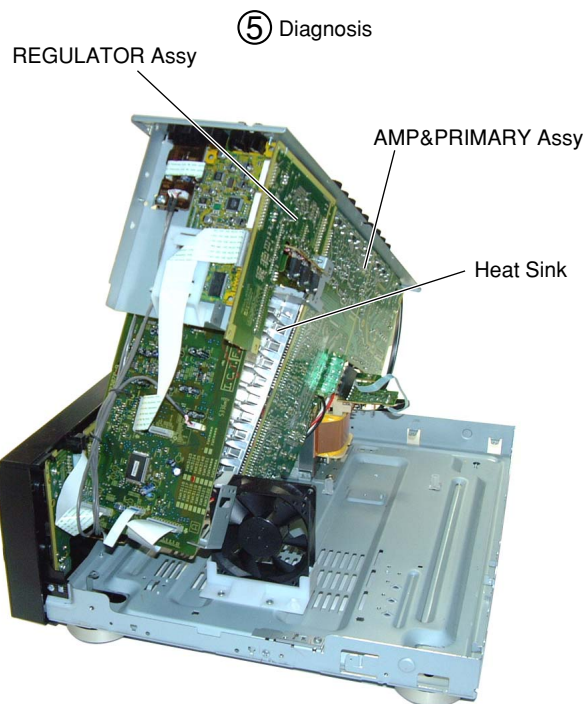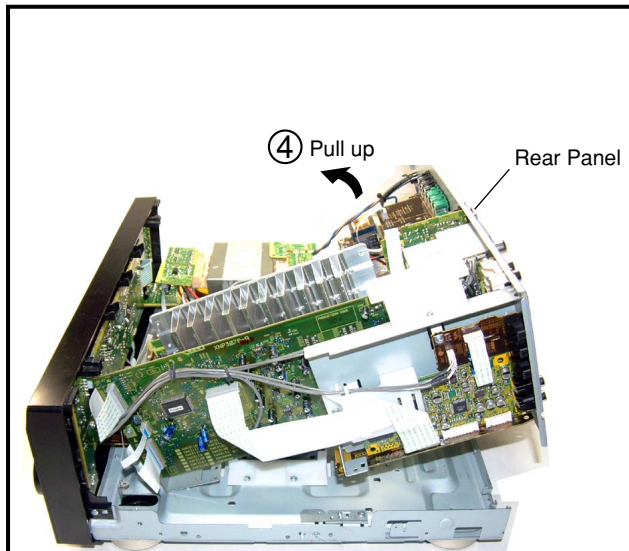

Note : This photograph may show a different model.
However, the method for disassembly is the same.

Note : The unit does not operate when the screws of Speaker Terminal are taken off from Rear Panel.

Heat-sink caution in the disassembling : Because Heat-sink becomes hot, please pay attention.

A


B

C

D

E

F

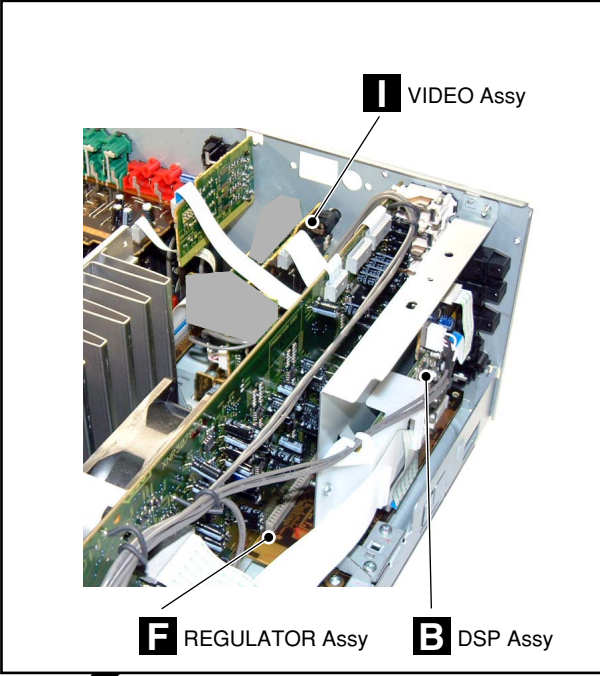

C AMP&PRIMARY Assy

D TRANS 2 Assy

J 5.1CH Assy

FM/AM TUNER UNIT

A MAIN Assy

G AMP INPUT Assy

H TRANS 1 Assy

E TRANS 3 Assy

N R. ENCODER Assy

M FRONT DISPLAY Assy

P FRONT KEY Assy

Q H.P. Assy

O POWER SW & KEY Assy

7.2 PARTS

7.2.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


• List of IC

PD5963C, PE5420A

■ PD5963C (MAIN ASSY : IC9001)

• System Control MCU

■ Pin Arrangement (Top View)

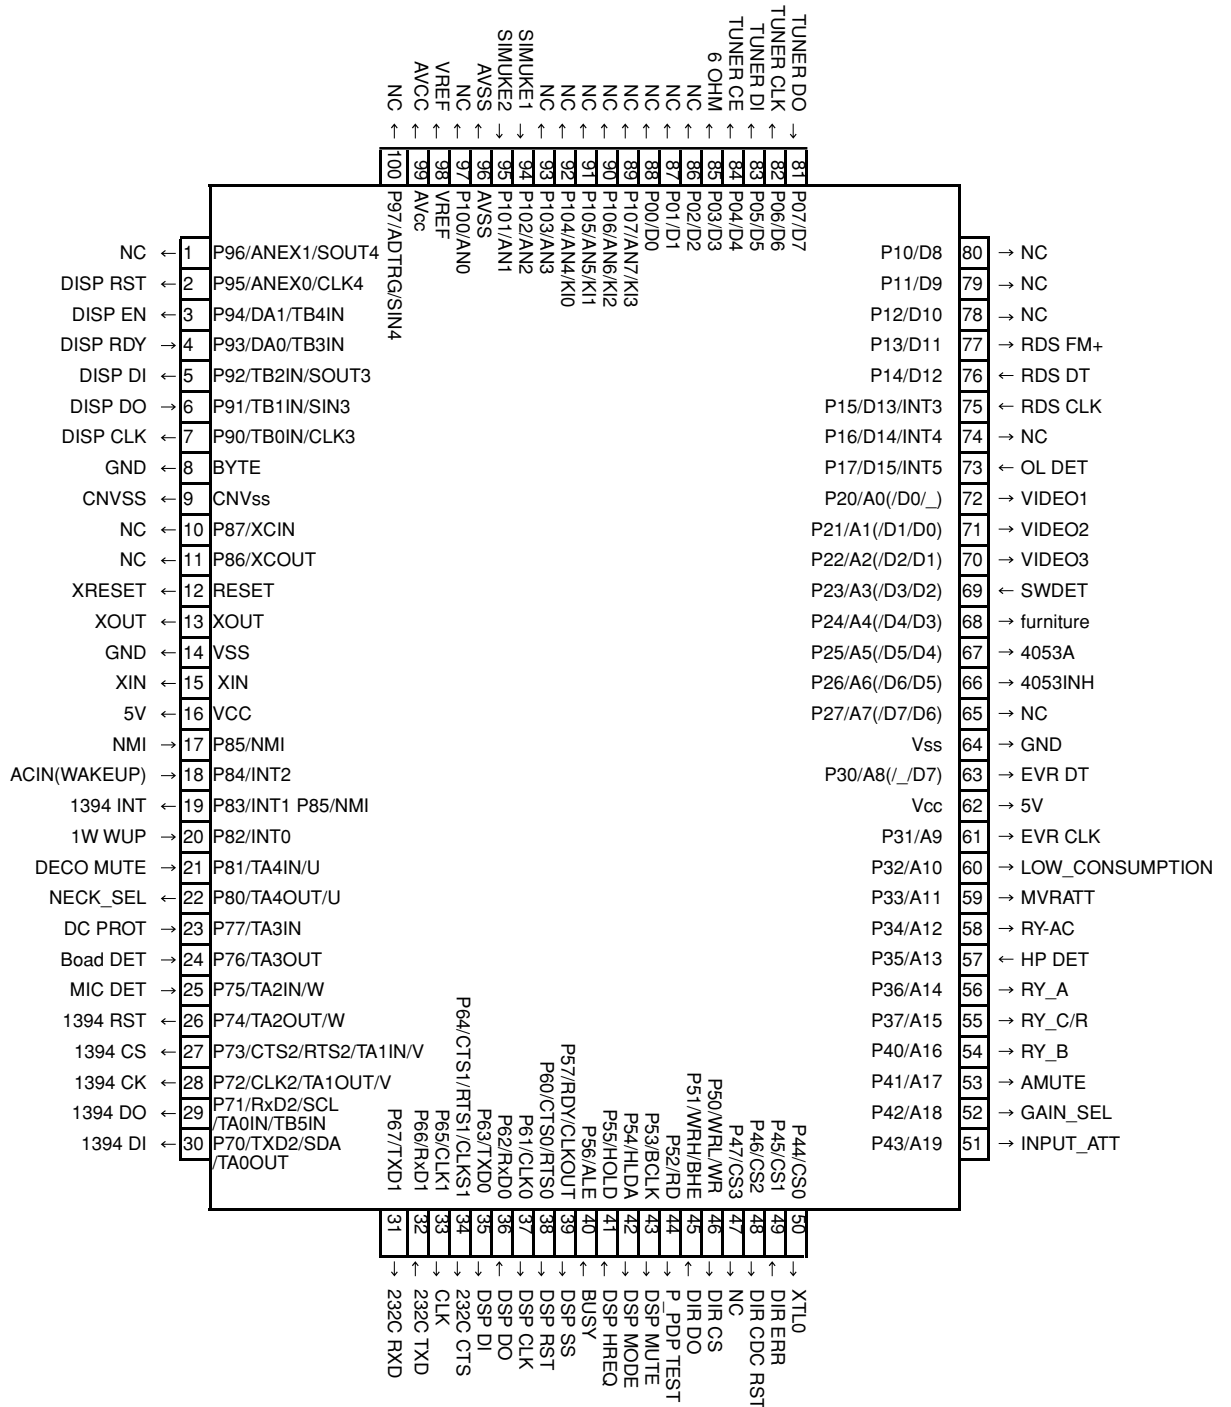

• Pin Function

No.	Port	Pin Name	I/O	Pin Function
1	P96/ANEX1/SOUT4	NC	I/O	
2	P95/ANEX0/CLK4	DISP RST	I/O	Reset signal to display u-com
3	P94/DA1/TB4IN	DISP EN	I/O	Enable signal to display u-com
4	P93/DA0/TB3IN	DISP RDY	I/O	Ready signal from display u-com
5	P92/TB2IN/SOUT3	DISP DI	I/O	Data out to display u-com
6	P91/TB1IN/SIN3	DISP DO	I/O	Data input from display u-com
7	P90/TB0IN/CLK3	DISP CLK	I/O	Clock signal to display u-com
8	BYTE	GND		
9	CNVss	CNVSS		
10	P87/XCIN	NC	I/O	
11	P86/XCOUT	NC	I/O	
12	RESET	XRESET	RST	
13	XOUT	XOUT	OSC	
14	VSS	GND	GND	
15	XIN	XIN	OSC	
16	VCC	5V	5V	
17	P85/NMI	NMI	I	No use
18	P84/INT2	ACIN(WAKEUP)	I/O	AC pulse input
19	P83/INT1 P85/NMI	1394 INT	I/O	No use (Standby for 1394)
20	P82/INT0	1W WUP	I/O	Wake up signal from display u-com
21	P81/TA4IN/U	DECO MUTE	I/O	1st DSP Boot success detect port
22	P80/TA4OUT/U	NECK_SEL	I/O	5.1ch, surround mode and A+B Stereo : H / Stereo : L
23	P77/TA3IN	DC PROT	I/O	AMP DC detect
24	P76/TA3OUT	Boad DET	I/O	AMP INPUT ASSY falling off detect, H : detected
25	P75/TA2IN/W	MIC DET	I/O	MIC detect (No Use)
26	P74/TA2OUT/W	1394 RST	I/O	No use (Standby for 1394)
27	P73/CTS2/RTS2/TA1IN/V	1394 CS	I/O	No use (Standby for 1394)
28	P72/CLK2/TA1OUT/V	1394 CK	I/O	No use (Standby for 1394)
29	P71/RxD2/SCL/TA0IN/TB5IN	1394 DO	I/O	No use (Standby for 1394)
30	P70/TXD2/SDA/TA0OUT	1394 DI	I/O	No use (Standby for 1394)
31	P67/TXD1	232C RXD	I/O	No use, fixed to "L" (For rewriting 232C (Data output))
32	P66/RxD1	232C TXD	I/O	No use, fixed to "L" (For rewriting 232C (Data input))
33	P65/CLK1	CLK	I/O	No use (It is necessary when writing for JIG)
34	P64/CTS1/RTS1/CLKS1	232C CTS	I/O	No use, fixed to "L" (For rewriting 232C (Admit communication))
35	P63/TXD0	DSP DI	I/O	Data output signal for communication with DSP and DIR
36	P62/RxD0	DSP DO	I/O	Data input signal for communication with DSP
37	P61/CLK0	DSP CLK	I/O	Clock signal for communication with DSP and DIR
38	P60/CTS0/RTS0	DSP RST	I/O	Reset signal for DSP
39	P57/RDY/CLKOUT	DSP SS	I/O	Slave select signal to DSP
40	P56/ALE	BUSY	I/O	Use it in MCACC
41	P55/HOLD	DSP HREQ	I/O	DSP error detect signal
42	P54/HLDA	DSP MODE	I/O	Mode select of DSP (H : ROMmode, L : RAM(PPP) mode)
43	P53/BCLK	DSP MUTE	I/O	DSP ASSY mute
44	P52/RD	P_PDPTTEST	I/O	Fixed to "L" during normal operation. (for SR+ testmode only)
45	P51/WRH/BHE	DIR DO	I/O	Data input signal for communication with DIR/DAC
46	P50/WRL/WR	DIR CS	I/O	Chip select signal for communication with DIR/DAC
47	P47/CS3	NC	I/O	
48	P46/CS2	DIR CDC RST	I/O	Reset signal for DIR CODEC
49	P45/CS1	DIR ERR	I/O	lock/unlock signal
50	P44/CS0	XTL0	I/O	DIR X'tal change


• Pin Function

No.	Port	Pin Name	I/O	Pin Function
51	P43/A19	INPUT_ATT	I/O	Analog input ATT(H : ATT ON)
52	P42/A18	GAIN_SEL	I/O	Gain select (5.1ch and Stereo of analog input : H)
53	P41/A17	AMUTE	I/O	System mute (L : Mute ON)
54	P40/A16	RY_B	I/O	Speaker B relay ON/OFF
55	P37/A15	RY_C/R	I/O	Rear/Center Speaker relay ON/OFF
56	P36/A14	RY_A	I/O	Speaker A relay ON/OFF
57	P35/A13	HP DET	I/O	HP detect, H : detected
58	P34/A12	RY-AC	I/O	AC relay ON/OFF
59	P33/A11	MVRATT	I/O	ATT control of master volume (less than -15dB : L)
60	P32/A10	LOW_CONSUMPTION	I/O	If stop mode, port L, else H
61	P31/A9	EVR CLK	I/O	Clock signal for Function and E-volume
62	Vcc	5V	5V	
63	P30/A8(/_D7)	EVR DT	I/O	Data signal for Function and E-volume
64	Vss	GND	GND	
65	P27/A7(/D7/D6)	NC	I/O	
66	P26/A6(/D6/D5)	4053INH	I/O	Component terminal control
67	P25/A5(/D5/D4)	4053A	I/O	Component terminal control
68	P24/A4(/D4/D3)	furniture	I/O	Furniture control signal
69	P23/A3(/D3/D2)	SWDET	I/O	SWSP detect
70	P22/A2(/D2/D1)	VIDEO3	I/O	VIDEO input select
71	P21/A1(/D1/D0)	VIDEO2	I/O	VIDEO input select
72	P20/A0(/D0/_)	VIDEO1	I/O	NJM2296 control (VIDEO input select)
73	P17/D15/INT5	OL DET	I/O	Detect overload of AMP
74	P16/D14/INT4	NC	I/O	
75	P15/D13/INT3	RDS CLK	I/O	Fixed to "L".
76	P14/D12	DT	I/O	Fixed to "L".
77	P13/D11	FM+	I/O	Fixed to "L".
78	P12/D10	NC	I/O	
79	P11/D9	NC	I/O	
80	P10/D8	NC	I/O	
81	P07/D7	TUNER DO	I/O	Data input signal for tuner control
82	P06/D6	TUNER CLK	I/O	Clock signal for tuner control
83	P05/D5	TUNER DI	I/O	Data output signal for tuner control
84	P04/D4	TUNER CE	I/O	Chip select signal for tuner control
85	P03/D3	6 OHM	I/O	if stop mode, port L, else L/H depends on selection.
86	P02/D2	NC	I/O	
87	P01/D1	NC	I/O	
88	P00/D0	NC	I/O	
89	P107/AN7/KI3	NC	I/O	
90	P106/AN6/KI2	NC	I/O	
91	P105/AN5/KI1	NC	I/O	
92	P104/AN4/KI0	NC	I/O	
93	P103/AN3	NC	I/O	
94	P102/AN2	SIMUKE1	I/O	Input 1 to switch region
95	P101/AN1	SIMUKE2	I/O	Input 2 to switch region
96	AVSS	AVSS	GND	Connect to VSS
97	P100/AN0	NC	I/O	
98	VREF	VREF	5V	Connect to VCC
99	AVcc	AVCC	5V	Connect to VCC
100	P97/ADTRG/SIN4	NC	I/O	

PE5420A (FRONT DISPLAY ASSY : IC401)

• System Control MCU

Pin Arrangement (Top View)

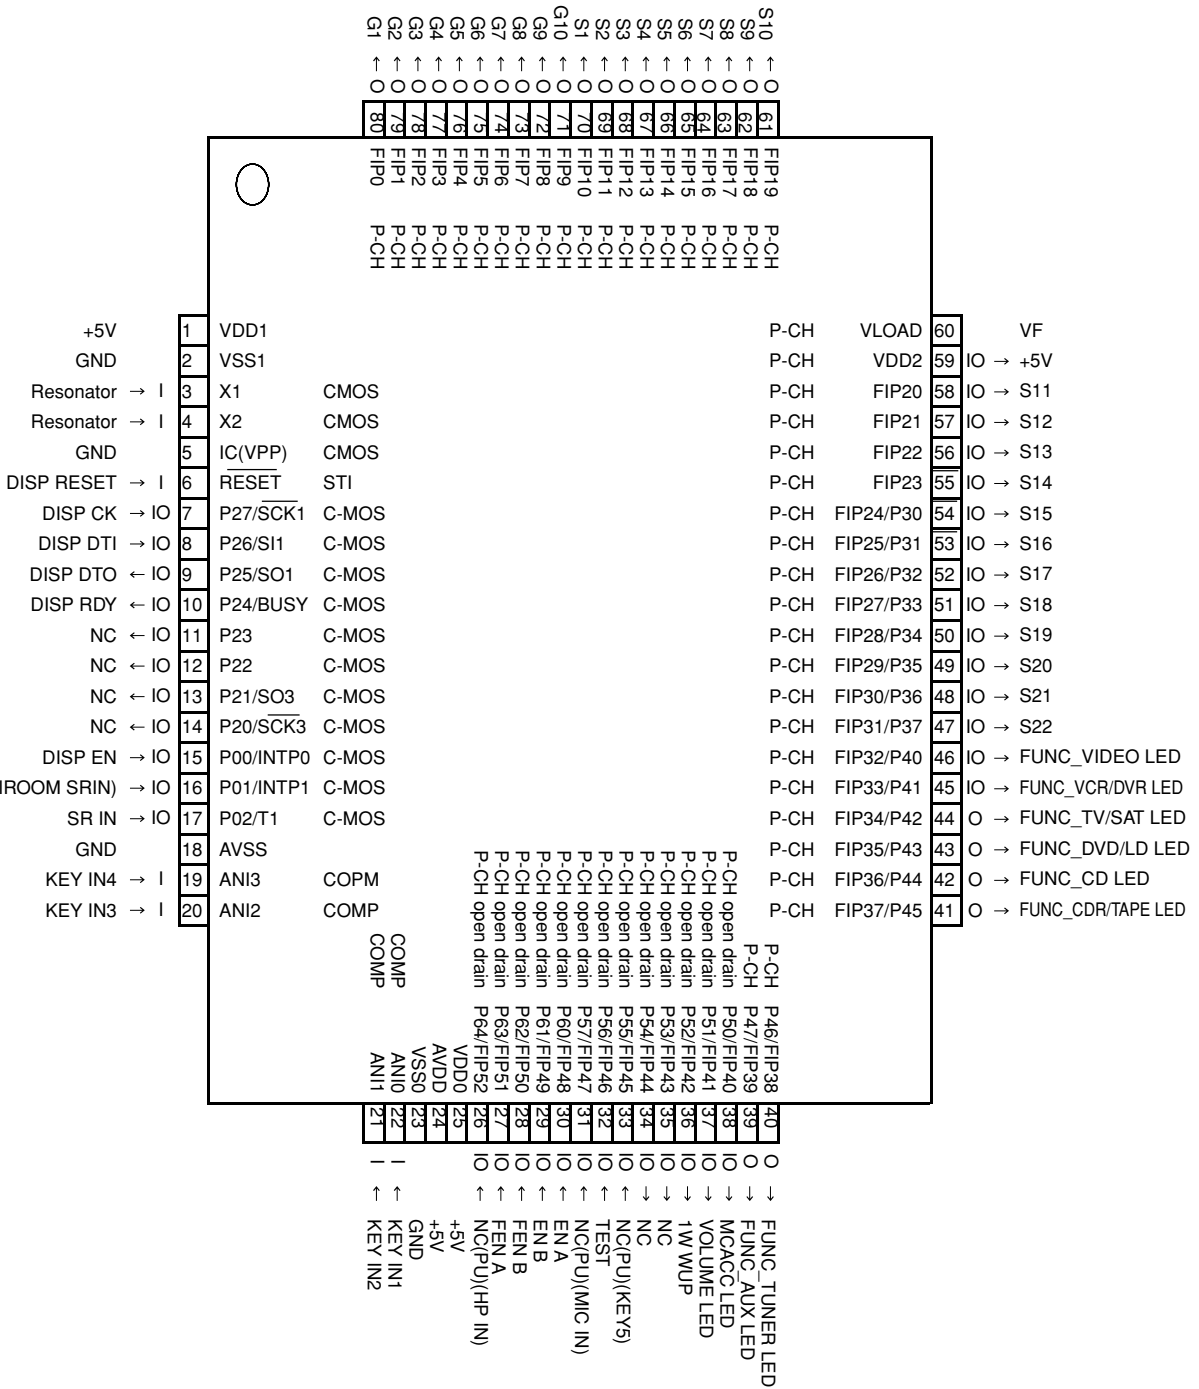

• Pin Function

No.	Port	Pin Name	I/O	Pin Function
1	VDD1	+5V	-	positive power supply
2	VSS1	GND	-	ground potential
3	X1	Resonator	I	crystal connection for system clock oscillation
4	X2	Resonator	I	crystal connection for system clock oscillation
5	IC(VPP)	GND	-	
6	RESET	DISP RESET	I	receive reset signal from main u-com
7	P27/SCK1	DISP CK	I/O	clock signal from main u-com
8	P26/SI1	DISP DTI	I/O	data in from main u-com
9	P25/SO1	DISP DTO	I/O	data out to main u-com
10	P24/BUSY	DISP RDY	I/O	ready signal from main u-com
11	P23	NC	I/O	
12	P22	NC	I/O	
13	P21/SO3	NC	I/O	
14	P20/SCK3	NC	I/O	
15	P00/INTP0	DISP EN	I/O	enable signal from main u-com
16	P01/INTP1	NC	I/O	
17	P02/T1	SR IN	I/O	remote control signal input from main room
18	AVSS	GND	-	ground potential for A/D converter
19	ANI3	KEY IN4	I	
20	ANI2	KEY IN3	I	
21	ANI1	KEY IN2	I	
22	ANI0	KEY IN1	I	
23	VSS0	GND	-	ground potential for ports
24	AVDD	+5V	-	analog power voltage input to A/D converter
25	VDD0	+5V	-	positive power supply to ports
26	P64/FIP52	NC	I/O	
27	P63/FIP51	FEN A	I/O	MULTI JOG(Right)
28	P62/FIP50	FEN B	I/O	MULTI JOG(Left)
29	P61/FIP49	EN B	I/O	VOLUME JOG1(-)
30	P60/FIP48	EN A	I/O	VOLUME JOG1(+)
31	P57/FIP47	NC	I/O	
32	P56/FIP46	TEST	I/O	test mode input for checker
33	P55/FIP45	NC	I/O	
34	P54/FIP44	NC	I/O	
35	P53/FIP43	NC	I/O	
36	P52/FIP42	1W WUP	I/O	output wakeup signal to main u-com
37	P51/FIP41	VOL LED	I/O	LED Output
38	P50/FIP40	MCACC LED	I/O	LED Output
39	P47/FIP39	FUNC/AUX	O	LED Output
40	P46/FIP38	FUNC_TUNER	O	LED Output

A

• Pin Function


No.	Port	Pin Name	I/O	Pin Function
41	FIP37/P45	FUNC_CDR	O	LED Output
42	FIP36/P44	FUNC_CD	O	LED Output
42	FIP35/P43	FUNC_DVD	O	LED Output
44	FIP34/P42	FUNC_TV	O	LED Output
45	FIP33/P41	FUNC_VCR	O	LED Output
46	FIP32/P40	FUNC_VIDEO	O	LED Output
47	FIP31/P37	S22	I/O	Display
48	FIP30/P36	S21	I/O	Display
49	FIP29/P35	S20	I/O	Display
50	FIP28/P34	S19	I/O	Display
51	FIP27/P33	S18	I/O	Display
52	FIP26/P32	S17	I/O	Display
53	FIP25/P31	S16	I/O	Display
54	FIP24/P30	S15	I/O	Display
55	FIP23	S14	O	Display
56	FIP22	S13	O	Display
57	FIP21	S12	O	Display
58	FIP20	S11	O	Display
59	VDD2	'+5V	-	positive power supply to FIP controller.
60	VLOAD	VF	-	pull down resistor connection of FIP controller
61	FIP19	S10	O	Display
62	FIP18	S9	O	Display
63	FIP17	S8	O	Display
64	FIP16	S7	O	Display
65	FIP15	S6	O	Display
66	FIP14	S5	O	Display
67	FIP13	S4	O	Display
68	FIP12	S3	O	Display
69	FIP11	S2	O	Display
70	FIP10	S1	O	Display
71	FIP9	G10	O	Display
72	FIP8	G9	O	Display
73	FIP7	G8	O	Display
74	FIP6	G7	O	Display
75	FIP5	G6	O	Display
76	FIP4	G5	O	Display
77	FIP3	G4	O	Display
78	FIP2	G3	O	Display
79	FIP1	G2	O	Display
80	FIP0	G1	O	Display

F


7.3 EXPLANATION

7.3.1 POWER ON AND OFF INITIAL TIMING CHART

■ POWER ON INITIAL TIMING CHART

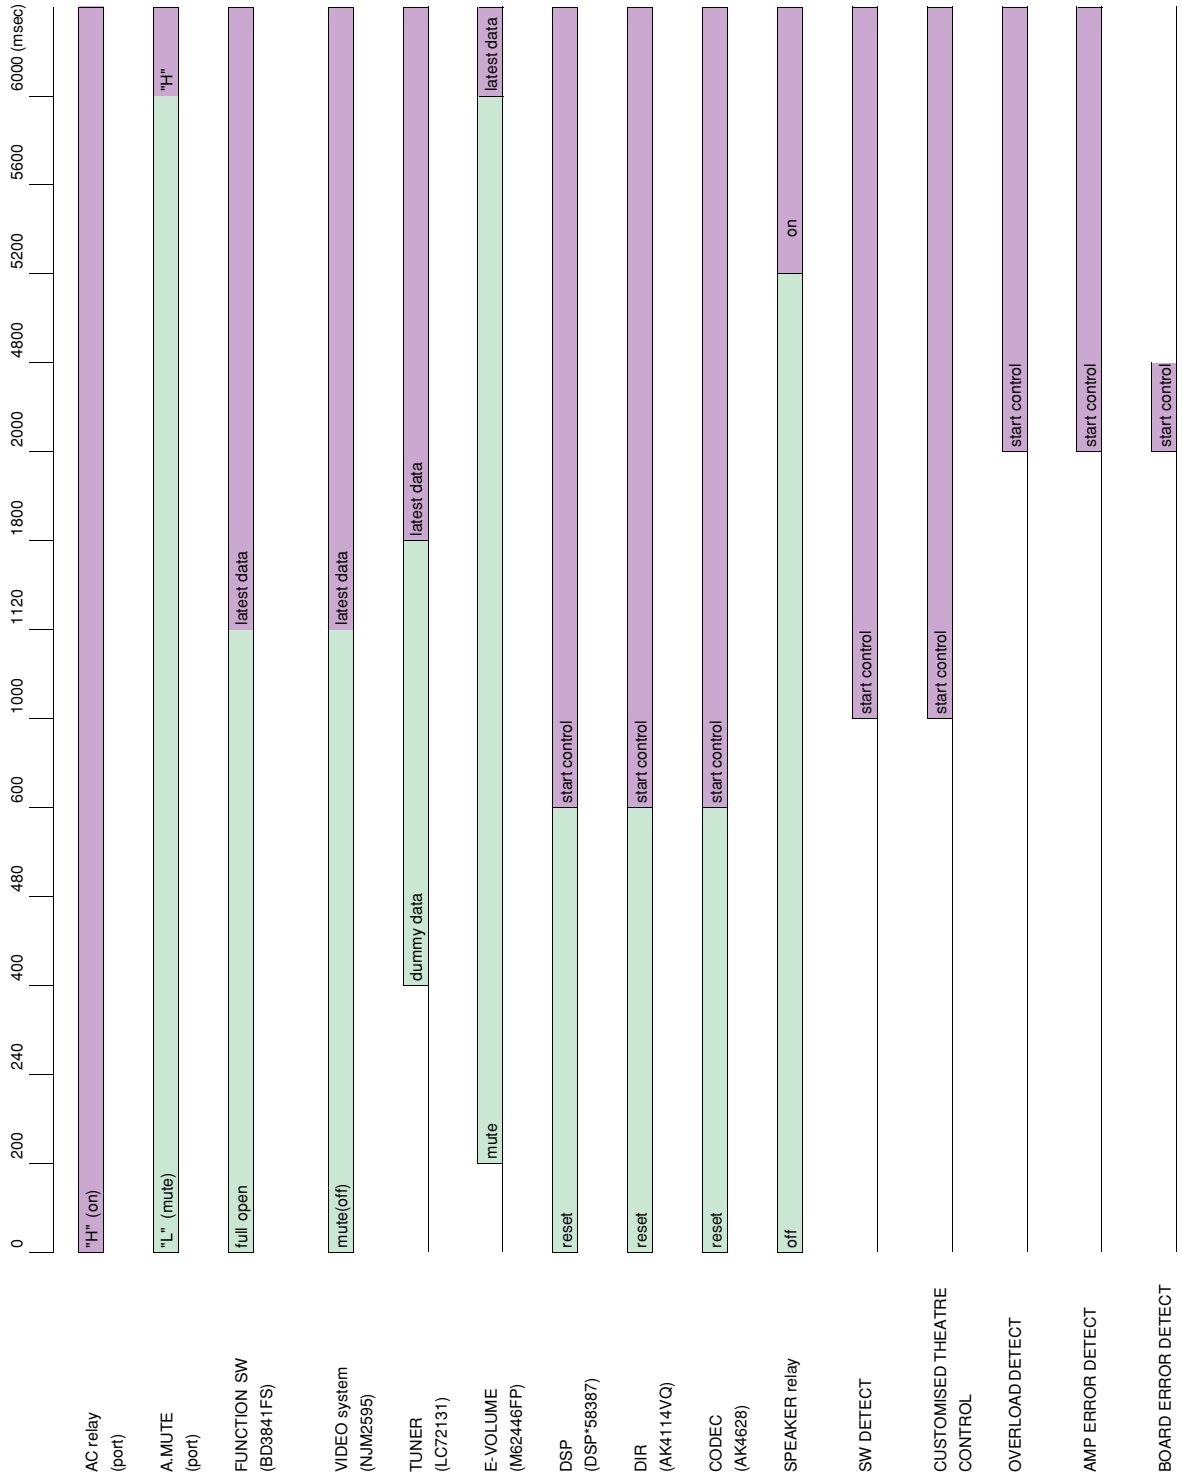

A ■ POWER OFF INITIAL TIMING CHART

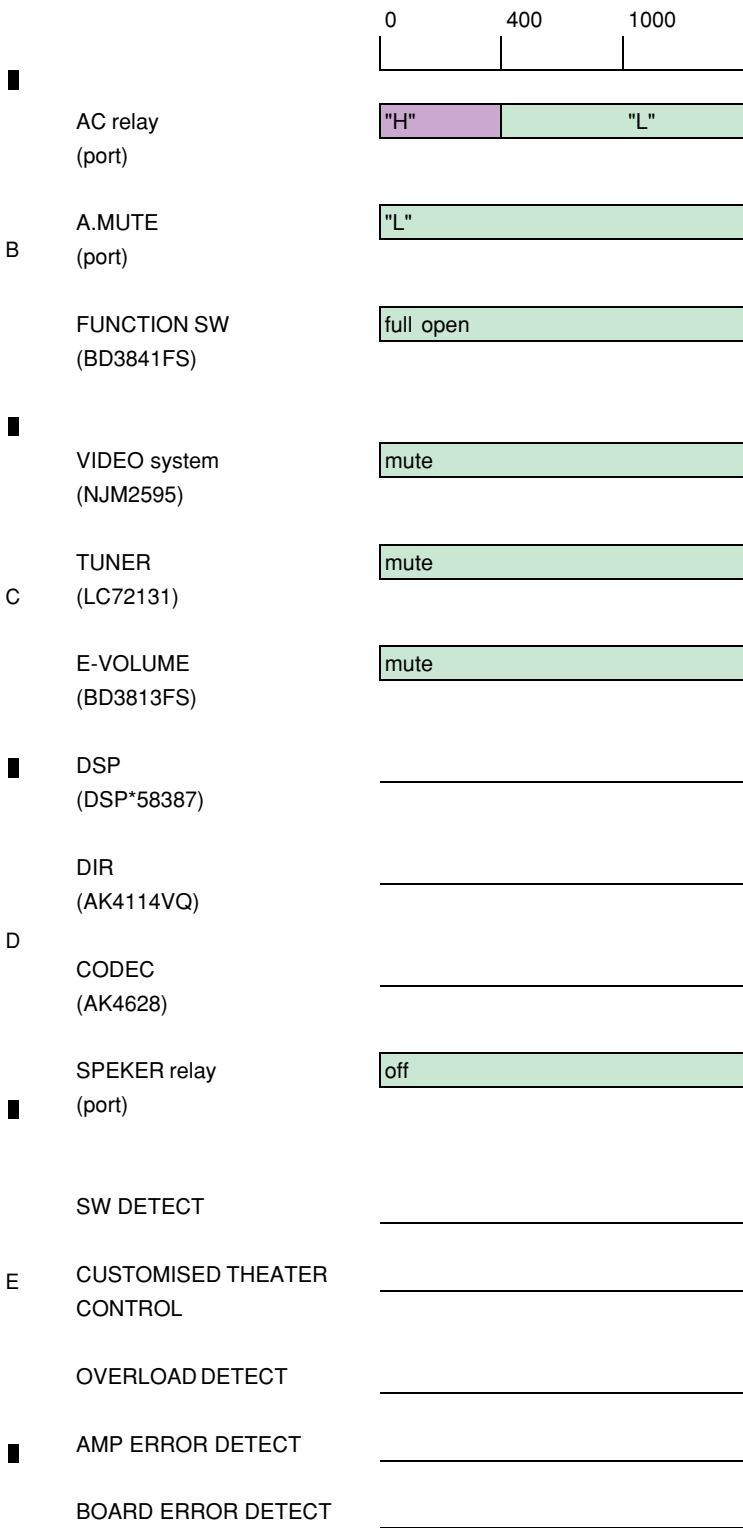


F

7.3.2 IC DATA TRANSMISSION TIMING CHART

IC data transmission timing chart


1. When function change

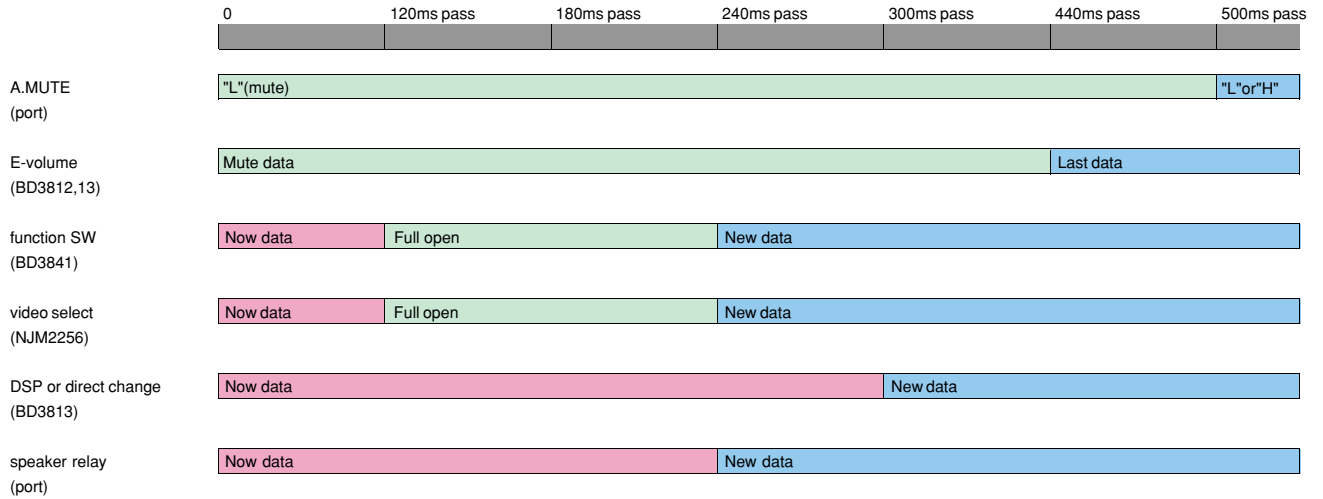

condition of mute cancel (system mute & E-volume mute)

- 1) when tuner mute during Tuner function
- 2) when communicate to DSP
- 3) when initial processing
- 4) when detect trouble of AMP DC
- 5) when detect overload of AMP
- 6) when Power off
- 7) when muting by key input

2. When except function change

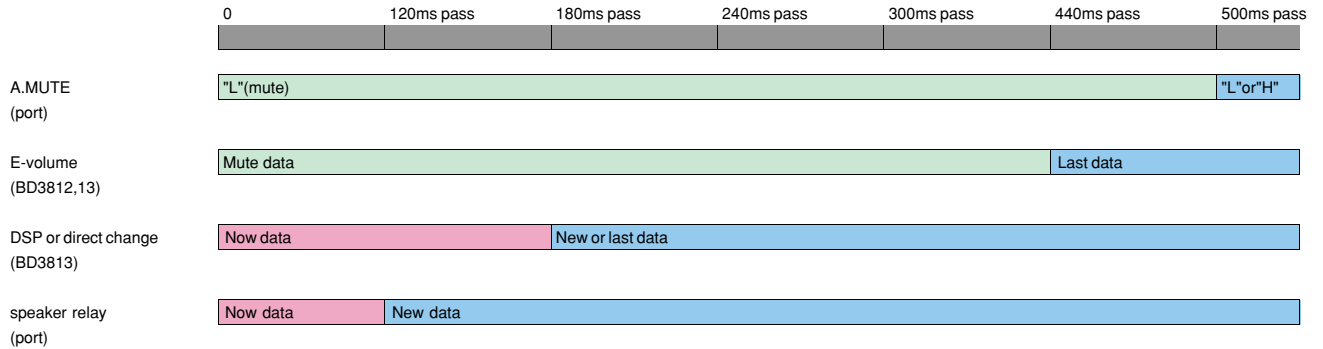


condition of mute cancel (system mute & E-volume mute)


- 1) when tuner mute during Tuner function
- 2) when communicate to DSP
- 3) when initial processing
- 4) when detect trouble of AMP DC
- 5) when detect overload of AMP
- 6) when Power off
- 7) when muting by key input

7.3.3 DETECTION CIRCUIT


1. DC Detection Circuit Diagram:

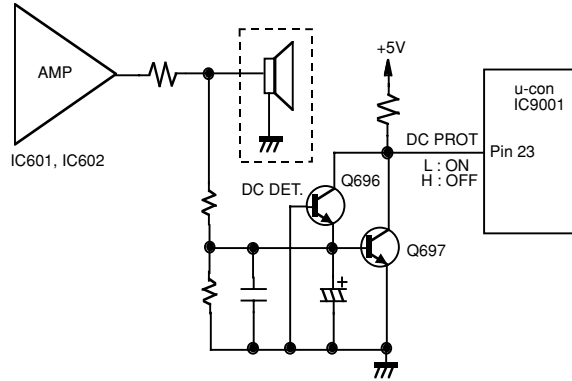

2. Overload Detection Circuit Diagram:

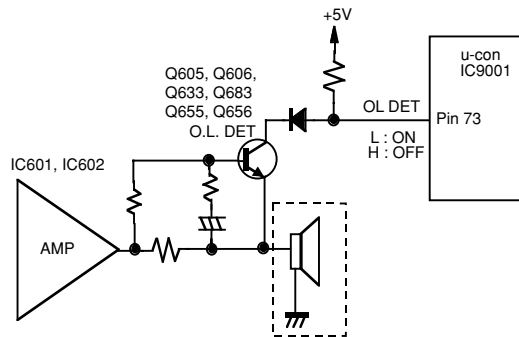


3. PCB Board Protection Circuit Diagram

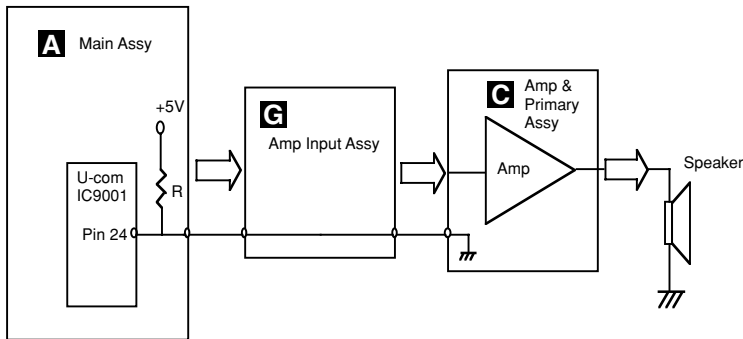

1. DC-abnormality detection

DC detection is only enabled 2 seconds after power-on.
 If there is a fault in the power amplifier or a high-level signal lower than 5 Hz is input, the DC_DET port becomes "L".
 If the "L" is detected, the microprocessor will perform as following flow chart.

In the case of simultaneous detection with the overload protection circuit, DC-abnormality detection is performed preferentially to overload detection.

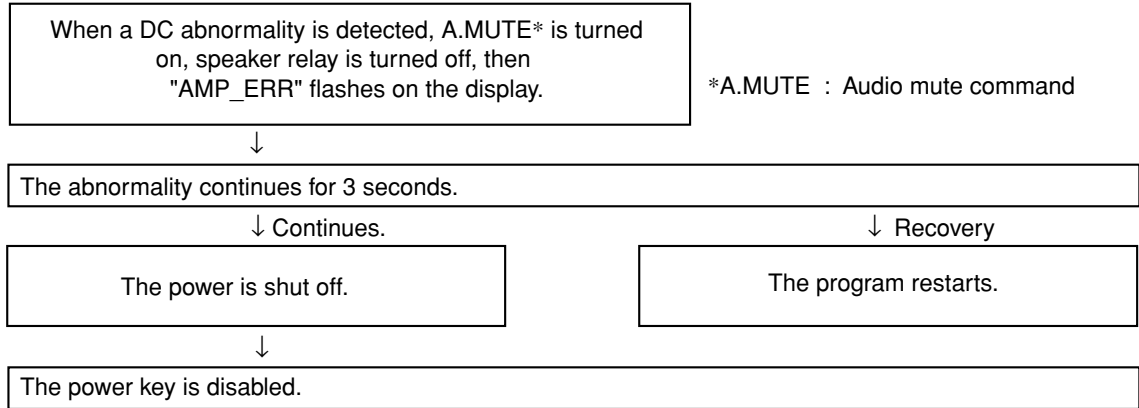


*A.MUTE : Audio mute command

But be switched on with the following methods.

- ① TESTMODE ON (A55F+A55F)
- ② When power off, push FRONT ENTER key + ADVANCED SURROUND key continuously 2sec.
 (②: When a DC abnormality is detected and the power is shut off.)

2. Overload detection


If the speaker terminals are short-circuited or low-load driving is detected, the OL_DET port becomes "L".
 If the "L" is detected, the microprocessor will perform as following flow chart.

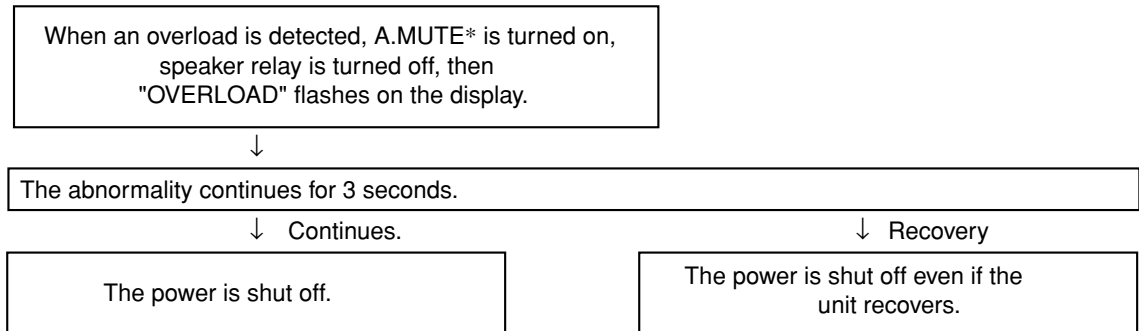

3. Board detection

If the board connection from MAIN ASSY to AM & PRIMARY ASSY is interrupted, the BOARD_DET port becomes "H".
If the "H" is detected, the microprocessor will perform as following flow chart.

In the case of simultaneous detection with the overload protection circuit, Board detection is performed preferentially to DC-abnormality detection and Overload detection.

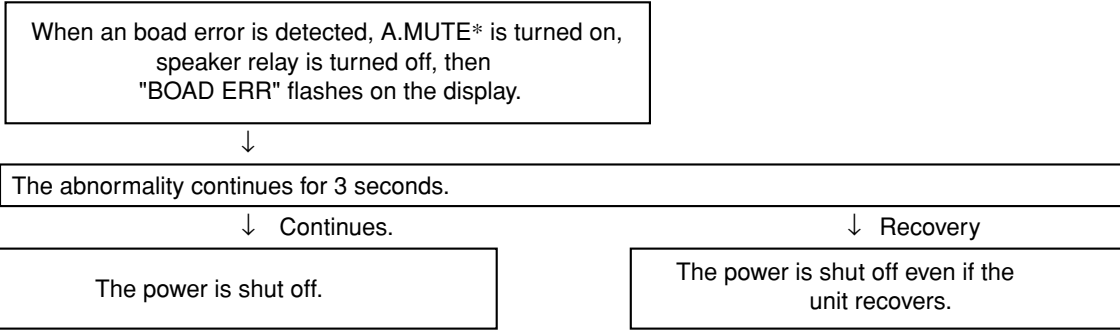

7.3.5 AMPLIFIER FAILURE DIAGNOSIS FLOW CHART

■ Amplifier failure diagnosis flow chart

When DC detection is activated ("AMP_ERR" flashes on the display), failure (damage) of the power amplifier section is considered.

Caution:

When release the lock state of power key before repair, please be careful because there is the possibility that more damages will occur when turns on the power once again!


• According to a symptom, perform the following confirmation beforehand.

- 1) Is the operation of fan motor in normal condition?
- 2) Are there any Fuses and IC protectors open?
- 3) After turn on the power, confirm that the supply voltage of the point that can be measured is appropriate.
- 4) Whether the voltage of pin3 of IC601 or IC602 is equal to (VL-0.7V). If not (eg, equal to VH), then change the corresponding power pack IC601 or IC602.
- 5) Furthermore, check the output DC voltage of each channel of power pack IC601 and IC602 to limit the failure channel and identify the defect power pack.

• After identify the failure channel, check that each part is not damaged (resistor, diode... etc. value / open / short)

8. PANEL FACILITIES

Front panel

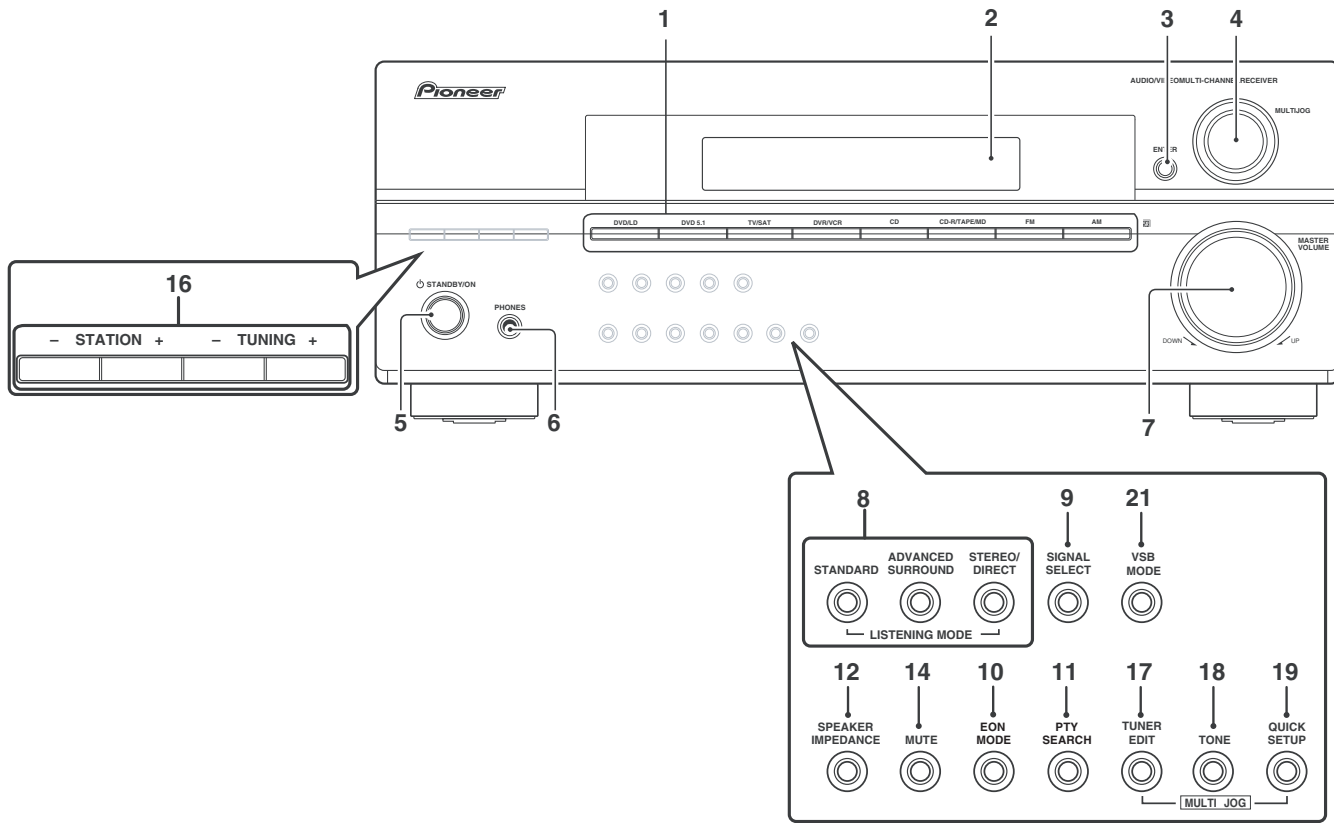

1 Input select buttons

Press to select an input source.

2 Character display

See Display.

3 ENTER

4 MULTI JOG dial

The **MULTI JOG** dial performs a number of tasks. Use it to select options after pressing the designated **MULTI JOG** buttons.

5 STANDBY/ON

Switches the receiver between on and standby.

6 PHONES jack

Use to connect headphones. When the headphones are connected, there is no sound output from the speakers.

7 MASTER VOLUME

8 LISTENING MODE buttons

STANDARD

Press for Standard decoding and to switch between the various Pro Logic II and Neo:6 options.

ADVANCED SURROUND

Use to switch between the various surround modes.

STEREO/DIRECT (AUTO SURR)

Switches between direct and stereo playback. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

18 TONE

Press this button to access the bass and treble controls, which you can then adjust with the **MULTI JOG** dial.

19 QUICK SETUP

See Using the Quick Setup.

20

9 SIGNAL SELECT

Use to select an input signal.

10 EON MODE

Use to search for programs that are broadcasting traffic or news information.

11 PTY SEARCH

Use this button to search for RDS program types.

12 SPEAKER IMPEDANCE

Use to change the impedance setting

13

14 MUTE

Mutes the sound (or restores the sound if it has been muted).

15

16 TUNING / STATION buttons

Selects the frequency and station presets when using the tuner.


17 TUNER EDIT

Press to memorize and name a station for recall.

21 VSB MODE


Selects the Virtual Surround Back (VSB) mode.

Rear panel

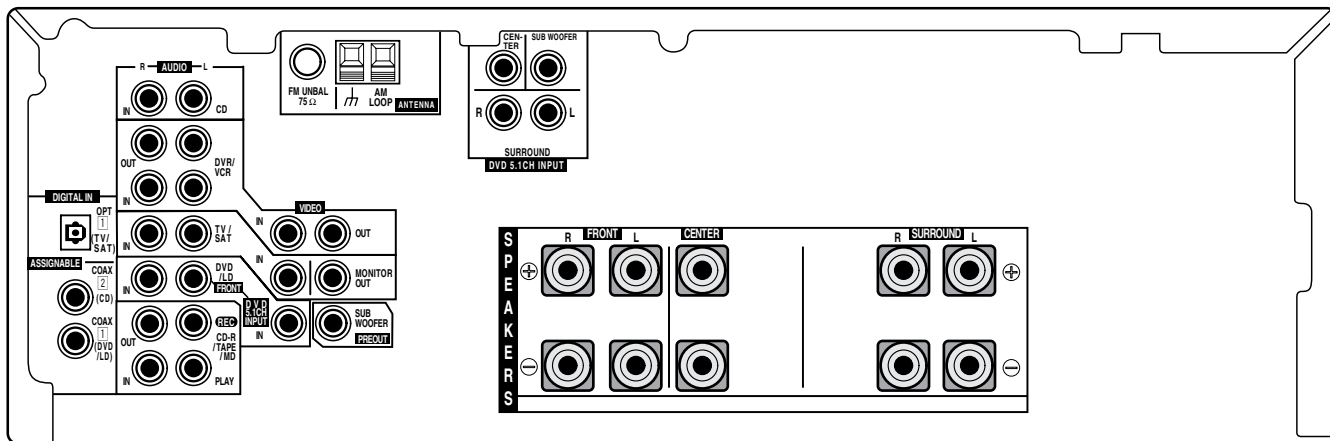

Display

VSX-415 model:

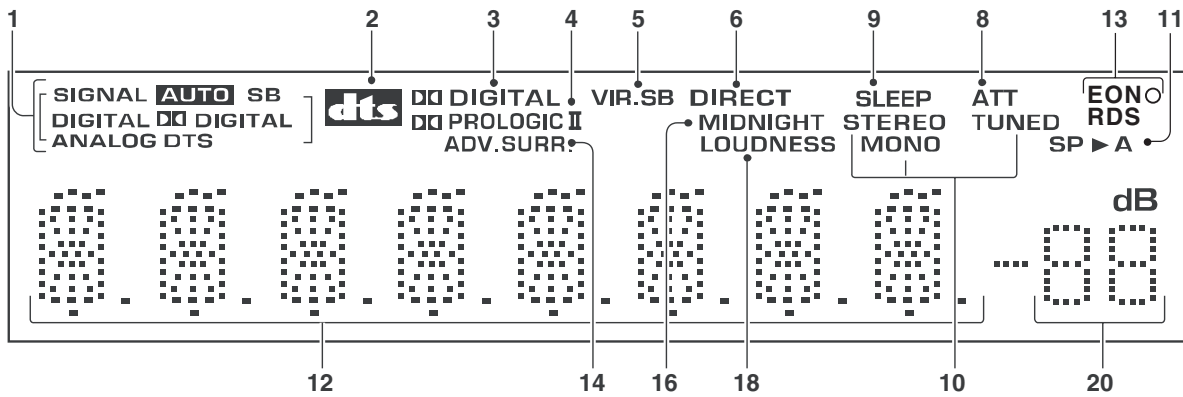

1 SIGNAL SELECT indicators

Lights to indicate the type of input signal assigned for the current component:

AUTO

Lights when **AUTO** signal select is on.

SB

Depending on the source, this lights when a signal with surround back channel encoding is detected.

DIGITAL

Lights when a digital audio signal is detected.

DIGITAL

Lights when a Dolby Digital encoded signal is detected.

ANALOG

Lights when an analog signal is detected.

DTS

Lights when a source with DTS encoded audio signals is detected.

2

When the **STANDARD** mode of the receiver is on, this lights to indicate decoding of a DTS multichannel signal.

3

When the **STANDARD** mode of the receiver is on, this lights to indicate decoding of a Dolby Digital multichannel signal.

4

When the (**STANDARD**) Pro Logic II mode of the receiver is on,  lights to indicate Pro Logic II decoding.

5 VIR.SB

Lights during Virtual surround back processing.

6 DIRECT

Lights when source direct playback is in use. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

7

8 ATT

Lights when **INPUT ATT** is used to attenuate (reduce) the level of the analog input signal.

9 SLEEP

Lights when the receiver is in sleep mode.

10 Tuner indicators

MONO

Lights when the mono mode is set using the **MPX** button.

STEREO

Lights when a stereo FM broadcast is being received in auto stereo mode.

TUNED

Lights when a broadcast is being received.

11 Speaker indicator

Shows if the speaker system is on or not. **SP▶A** means the speakers are switched on. **SP▶** means the headphones are connected.

12 Character display

13 EON

EON lights when the EON mode is set, and flashes during reception of an EON broadcast. The **○** indicator lights when the current station carries the EON service.

RDS

Lights when an RDS broadcast is received.

14 ADV.SURR. (Advanced Surround)

Lights when one of the Advanced Surround modes has been selected.

15

16 MIDNIGHT

Lights during Midnight listening.

17

18 LOUDNESS

Lights during Loudness listening.


19

20 Master volume level

Shows the overall volume level. **---dB** indicates the minimum level, and **- 0 dB** indicates the maximum level.

Depending on your level settings for each channel, the maximum volume can range between **-10 dB** and **-0 dB**.

Remote control

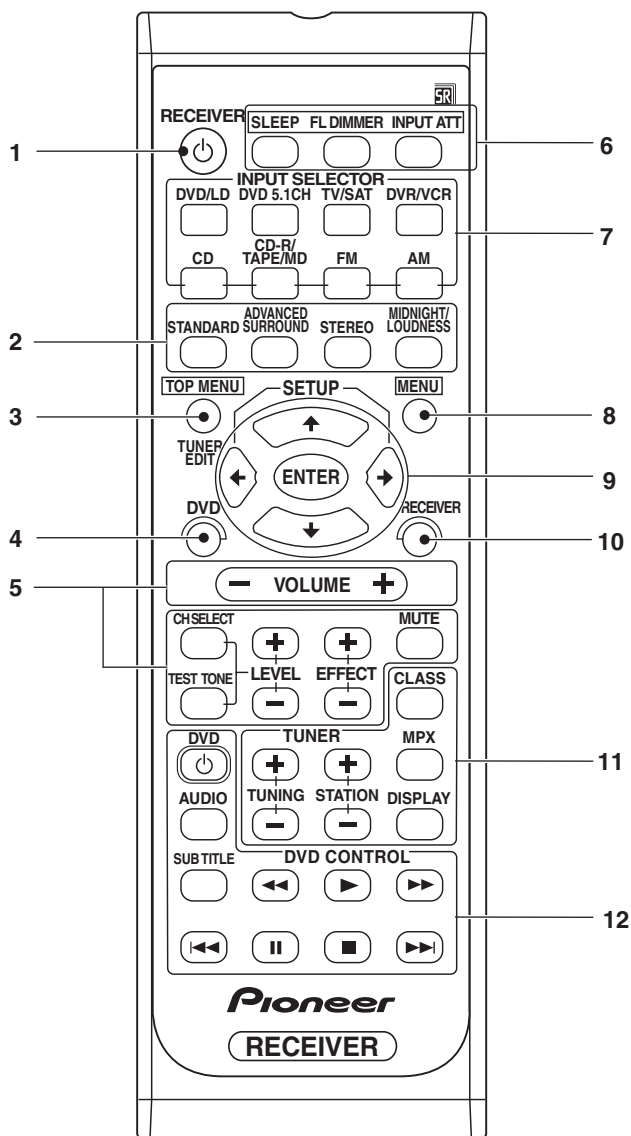

1 RECEIVER

Switches the receiver between standby and on.

2 Listening mode buttons

STANDARD

Press for Standard decoding and to switch between the various Pro Logic II and Neo:6 options.

ADVANCED SURROUND

Use to switch between the various surround modes.

STEREO

Switches between direct and stereo playback. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

MIDNIGHT/LOUDNESS

Switches to Midnight or Loudness listening.

3 TOP MENU

Displays the disc 'top' menu of a DVD.

TUNER EDIT

Press to memorize and name a station for recall.

4 DVD

Press to use the DVD controls on the remote.

5 RECEIVER CONTROL buttons

VOLUME +/-

Use to set the listening volume.

MUTE

Mutes/unmutes the sound.

A

CH SELECT

Selects a speaker when setting up the surround sound of the receiver.

TEST TONE

Sounds the test tone when setting up the surround sound of the receiver.

LEVEL +/-

Adjusts the channel levels.

EFFECT +/-

Adds or subtracts the amount of effect with the advanced surround modes.

6 SLEEP

Use to set the sleep timer.

FL DIMMER

Dims or brightens the display.

INPUT ATT

Attenuates (lowers) the level of an analog input signal to prevent distortion.

7 INPUT SELECTOR buttons

Press to select an input source.

8 MENU

Displays the disc menu of DVD-Video discs. It also displays TV menus.

9 ↑↓←→/ENTER

Use the arrow buttons when setting up your surround sound system.
Also used for DVD menus.

10 RECEIVER

Use to switch to the receiver controls on the remote control. Also used when setting up the surround sound for the receiver.

11 TUNER controls

The **TUNING +/-** buttons can be used to find radio frequencies and the **STATION +/-** buttons can be used to select preset radio stations.

CLASS

Switches between the three banks (classes) of station presets.

MPX









Use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to mono will improve the sound quality.

DISPLAY

Switch the display between station preset name and frequency.

12 DVD CONTROL buttons

You can use these buttons to control a Pioneer DVD player connected to your system.

Button	What it does
DVD 	Turns DVD power on/off.
AUDIO	Changes the audio language or channel.
SUBTITLE	Displays/changes the subtitles on multilingual DVD-Video discs.
	Starts/resumes normal playback.
	Pauses/unpauses a disc.
	Stops playback.
	Press to start fast reverse scanning.
	Press to start fast forward scanning.
	Skips to the start of the current track or chapter, then previous tracks/chapters.
	Skips to the next track or chapter.

E

F