


# Service Manual

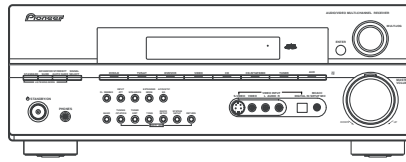

VSX-815-K

ORDER NO.  
**RRV3093**

**AUDIO/VIDEO MULTI-CHANNEL RECEIVER**

# VSX-815-K

## VSX-815-S

## VSX-915-K

**THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).**

Model	Type	Power Requirement	Remarks
VSX-815-K	KUXJ/CA	AC 120V	
VSX-815-S	KUXJ/CA	AC 120V	
VSX-915-K	KUXJ/CA	AC 120V	



For details, refer to "Important Check Points for Good Servicing".

# SAFETY INFORMATION



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

## WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65



## NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

## REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


## (FOR USA MODEL ONLY)

### 1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

#### LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

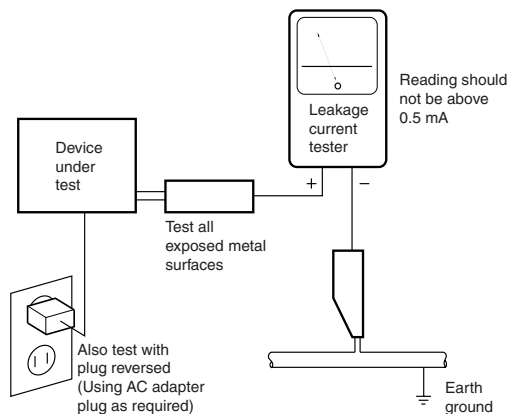

AC Leakage Test

**ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.**

### 2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a  $\Delta$  on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

## [Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol. Please be sure to confirm and follow these procedures.

### 1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification (addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris. Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs. In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages. If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries. Please pay attention to your surroundings and repair safely.

### 2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification. Adjustments should be performed in accordance with the procedures/instructions described in this manual.

### 3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance. Make sure the proper amount is applied.

### 4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

### 5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

# CONTENTS

	SAFETY INFORMATION .....	2
	1. SPECIFICATIONS .....	5
A	2. EXPLODED VIEWS AND PARTS LIST .....	7
	2.1 PACKING .....	7
	2.2 EXTERIOR SECTION.....	8
	2.3 FRONT PANEL SECTION .....	10
	3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM .....	12
	3.1 BLOCK DIAGRAM .....	12
	3.2 OVERALL WIRING CONNECTION DIAGRAM.....	14
	3.3 MAIN ASSY (1/3).....	16
	3.4 MAIN ASSY (2/3).....	18
	3.5 MAIN ASSY (3/3).....	20
	3.6 DSP ASSY (1/2).....	22
	3.7 DSP ASSY (2/2).....	24
B	3.8 AMP & PRIMARY (1/2), TRANS2 and TRANS3 ASSYS .....	26
	3.9 AMP&PRIMARY(2/2), REGULATOR, AMP INPUT and TRANS1 ASSYS.....	28
	3.10 VIDEO, 5.1CH, B TO B and S. VIDEO ASSYS .....	30
	3.11 FRONT DISPLAY, R. ENCODER, P. SW&FUNC KEY and F. KEY ASSYS .....	32
	3.12 TRANS4, H.P., PRE-OUT, D. IN, COMPONENT and F.OPT & MIC ASSYS.....	34
	3.13 VIDEO CONVERTER ASSY .....	36
	4. PCB CONNECTION DIAGRAM .....	38
	4.1 REGULATOR ASSY.....	38
	4.2 TRANS2, TRANS3, TRANS1 and TRANS4 ASSYS .....	39
	4.3 MAIN ASSY .....	40
	4.4 DSP ASSY .....	44
	4.5 AMP & PRIMARY and AMP INPUT ASSYS .....	46
C	4.6 F. DISPLAY, R. ENCODER, P. SW & KEY, H. P. and F. KEY ASSYS .....	48
	4.7 B TO B, DIGITAL IN, VIDEO, 5.1CH and VIDEO CONVERTER ASSYS.....	52
	4.8 S.VIDEO, F. INPUT, COMPONENT and PRE-OUT ASSYS .....	54
	5. ELECTRICAL PARTS LIST .....	56
	6. ADJUSTMENT .....	62
	7. GENERAL INFORMATION .....	63
	7.1 DIAGNOSIS .....	63
	7.1.1 DISASSEMBLY.....	63
	7.2 PARTS.....	65
	7.2.1 IC .....	65
	7.3 EXPLANATION .....	71
	7.3.1 POWER ON AND OFF INITIAL TIMING CHART .....	71
D	7.3.2 IC DATA TRANSMISSION TIMING CHART.....	73
	7.3.3 DETECTION CIRCUIT .....	76
	7.3.4 AMPLIFIER SYSTEM PROTECTION OPERATION SPECIFICATION.....	77
	7.3.5 AMPLIFIER FAILURE DIAGNOSIS FLOW CHART .....	79
	7.4 CLEANING.....	79
	8. PANEL FACILITIES .....	80

E

F

# 1. SPECIFICATIONS

## Specifications

### Amplifier section

- **Continuous power output (stereo)**

Front:

VSX-815 . . . 100 W (20–20,000 Hz, THD 0.7%, 8 Ω)

VSX-915 . . . 120 W (20–20,000 Hz, THD 0.7%, 8 Ω)<sup>1</sup>

- **Continuous power output (surround)**

VSX-815 model:

Front . . . . . 100 W per channel (1kHz, 1.0%, 8 Ω)

Center. . . . . 100 W (1kHz, 1.0%, 8 Ω)

Surround . . . . . 100 W per channel  
(1kHz, 1.0%, 8 Ω)

Surround Back. . . . . 100 W per channel  
(1kHz, 1.0%, 8 Ω)

VSX-915 model:

Front . . . . . 110 W per channel (1kHz, 1.0%, 8 Ω)

Center. . . . . 110 W (1kHz, 1.0%, 8 Ω)

Surround . . . . . 110 W per channel  
(1kHz, 1.0%, 8 Ω)

Surround Back. . . . . 110 W per channel  
(1kHz, 1.0%, 8 Ω)

### Audio section

- **Input (Sensitivity/Impedance)**

CD, DVR/VCR, CD-R/TAPE/MD,

DVD/LD, TV/SAT. . . . . 200 mV/47 kΩ

- **Frequency response**

CD, DVR/VCR, CD-R/TAPE/MD, DVD/LD,

TV/SAT . . . . . 5 Hz to 100,000 Hz  $\pm 0.5$  dB

- **Output (Level/Impedance)**

DVR/VCR REC, CD-R/TAPE/

MD REC . . . . . 200 mV/2.2 kΩ

- **Tone control**

Bass . . . . .  $\pm 6$  dB (100 Hz)

Treble . . . . .  $\pm 6$  dB (10 kHz)

Loudness . . . . . +10 dB/+5 dB (100 Hz/10 kHz)  
(at volume level –50 dB)

- **Signal-to-Noise Ratio (IHF, short circuited, A network)**

CD, DVR/VCR, CD-R/TAPE/MD,

DVD/LD, TV/SAT . . . . . 96 dB

- **Signal-to Noise Ratio [EIA, at 1 W (1 kHz)]**

CD, DVR/VCR, CD-R/TAPE/MD,

DVD/LD, TV/SAT . . . . . 79 dB

### Video Section

- **Input (Sensitivity/Impedance)**

DVR/VCR, DVD/LD, TV/SAT. . . . . 1 Vp-p/75 Ω

- **Output (Level/Impedance)**

DVR/VCR, MONITOR OUT. . . . . 1 Vp-p/75 Ω

- **Frequency response**

DVR/VCR, DVD/LD,

TV/SAT  $\Rightarrow$  MONITOR. . . . . 5 Hz to 7 MHz  $\pm 0.5$  dB

Signal-to-Noise Ratio . . . . . 55 dB

Crosstalk . . . . . 50dB

### Component video section

- **Input (Sensitivity)**

DVD/LD, TV/SAT . . . . . 1 Vp-p/75 Ω

- **Output (Level/Impedance)**

MONITOR OUT . . . . . 1 Vp-p/75 Ω

- **Frequency response**

DVD/LD,

TV/SAT  $\Rightarrow$  MONITOR. . . . . 5 Hz to 40 MHz  $\pm 0.5$  dB

Signal-to-Noise Ratio . . . . . 60 dB

### Note

<sup>1</sup> Continuous average power output of 110 watts\* per channel, min., at 8ohms, from 20 Hz to 20,000 Hz with no more than 0.7%\*\* total harmonic distortion (front).

\* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers.

\*\* Measured by Audio Spectrum Analyzer.

• **FM Tuner Section**

Frequency Range . . . . .87.5 MHz to 108 MHz  
 Usable Sensitivity . . . . .Mono:13.2 dBf, IHF  
 (1.3  $\mu$ V/ 75  $\Omega$ )  
 50 dB Quieting Sensitivity . . . . .Mono: 20.2 dB  
 Stereo: 38.6 dBf  
 Signal-to-Noise Ratio . . . Mono: 73 dB (at 85 dBf)  
 Stereo: 70 dB (at 85 dBf)  
 Distortion. . . . .Stereo: 0.5 % (1 kHz)  
 Alternate Channel Selectivity. . . . .60 dB  
 (400 kHz)  
 Stereo Separation. . . . .40 dB (1 kHz)  
 Frequency Response . . . . .30 Hz to 15 kHz  
 ( $\pm$ 1 dB)  
 Antenna Input (DIN). . . . .75  $\Omega$  unbalanced

**AM Tuner Section**

Frequency Range . . . . .530 kHz to 1,700 kHz  
 Sensitivity (IHF, Loop antenna) . . . . .350  $\mu$ V/m  
 Signal-to-Noise Ratio . . . . .50 dB  
 Antenna. . . . .Loop antenna

**Miscellaneous**

Power requirements. . . . .AC 120V / 60Hz  
 Power consumption. . . . .360W / 480 VA  
 In standby . . . . .0.5 W  
 Dimensions. . . . .16<sup>9</sup>/<sub>16</sub> (W) x 6<sup>1</sup>/<sub>4</sub> (H) x 15<sup>7</sup>/<sub>8</sub> (D) in.  
 420 (W) x 158 (H) x 402.5 (D) mm  
 Weight (without package) . . . . .22.4 lb (10.2 kg)

**Furnished Parts**

Microphone (for Auto MCACC setup). . . . . 1  
 Dry cell batteries (AA size IEC R6). . . . . 2  
 Remote control . . . . . 1  
 AM loop antenna . . . . . 1  
 FM wire antenna. . . . . 1  
 Warranty card. . . . . 1  
 Operating instructions. . . . . 1

 **Note**

Specifications and the design are subject to possible modifications without notice, due to improvements.

**Cleaning the unit**


- Use a polishing cloth or dry cloth to wipe off dust and dirt.
- When the surface is dirty, wipe with a soft cloth dipped in some neutral cleanser diluted five or six times with water, and wrung out well, and then wipe again with a dry cloth. Do not use furniture wax or cleansers.
- Never use thinners, benzene, insecticide sprays or other chemicals on or near this unit, since these will corrode the surface.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "Surround EX", and the double-D symbol are trademarks of Dolby Laboratories.

"DTS", "DTS-ES Extended Surround" and "Neo:6" are trademarks of Digital Theater Systems, Inc.

Microsoft, Windows Media®, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.


**Accessories**

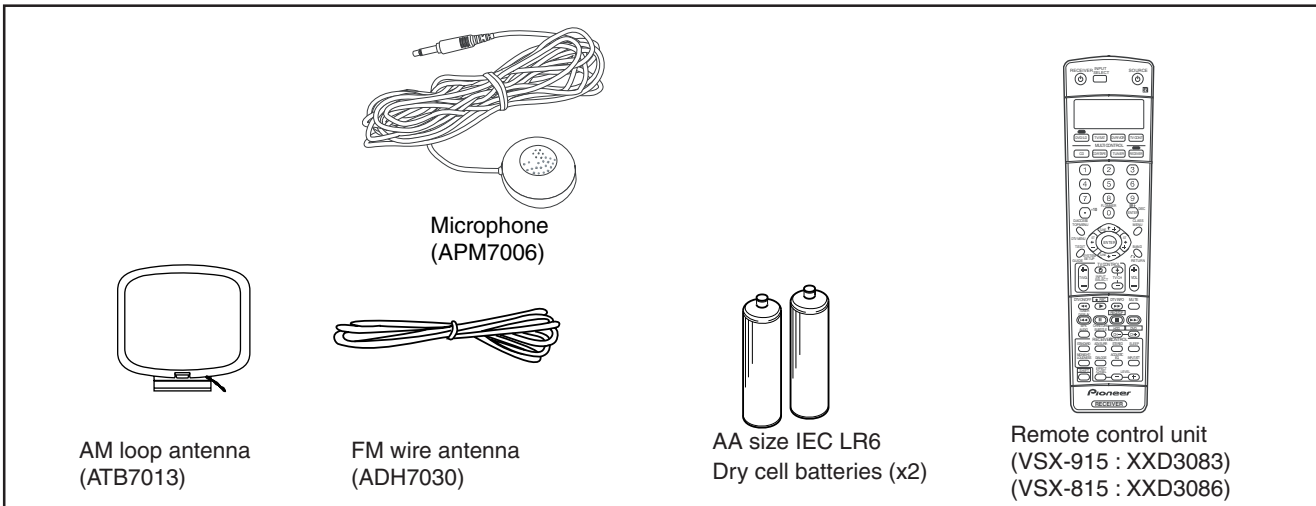

## 2. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
  - The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
  - Screws adjacent to  $\nabla$  mark on product are used for disassembly.
  - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

### 2.1 PACKING

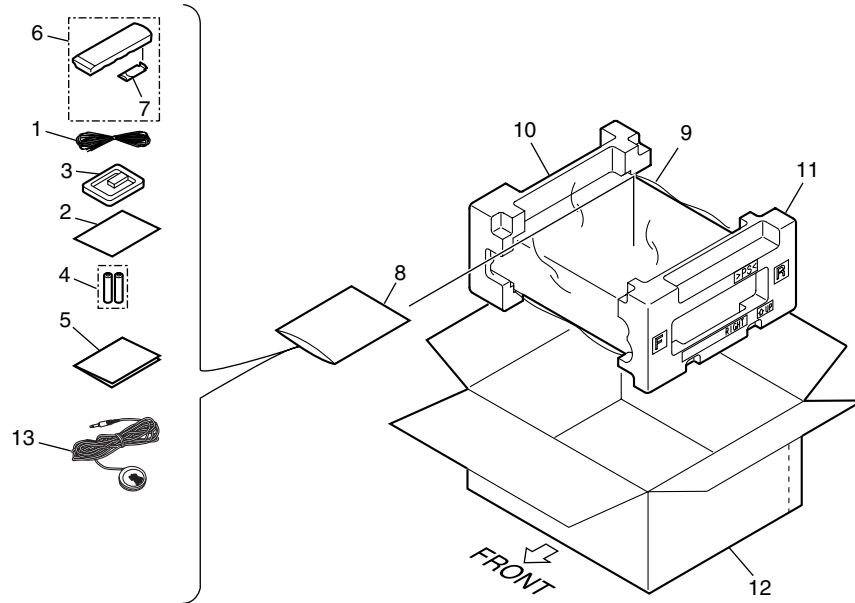

#### PACKING PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	FM wire antenna	ADH7030	11	Right Pad V2	XHA3150
NSP 2	Warranty Card	ARY7045	12	Packing Case	See Contrast table(2)
3	AM loop antenna	ATB7013	13	Microphone Assy	APM7006
NSP 4	Alkaline Dry cell batteries (AA/LR6)	VEM1031			
5	Operating instructions (English)	XRB3047			
6	Remote Control Unit	See Contrast table(2)			
7	Battery Cover	XZN3140			
NSP 8	Literature Bag	AHG1180			
9	Packing Sheet	AHG7069			
10	Left Pad V2	XHA3149			

#### (2) CONTRAST TABLE

VSX-815-K/KUXJ/CA, VSX-815-S/KUXJ/CA and VSX-915-K/KUXJ/CA are constructed the same except for the following:

Mark	NO	Description	VSX-815-K /KUXJ/CA	VSX-815-S /KUXJ/CA	VSX-915-K /KUXJ/CA
	6	Remote Control Unit	XXD3086	XXD3086	XXD3083
	12	Packing Case	XHD3472	XHD3473	XHD3471



# 2.2 EXTERIOR SECTION

A



B

C

D

E

F

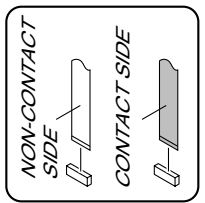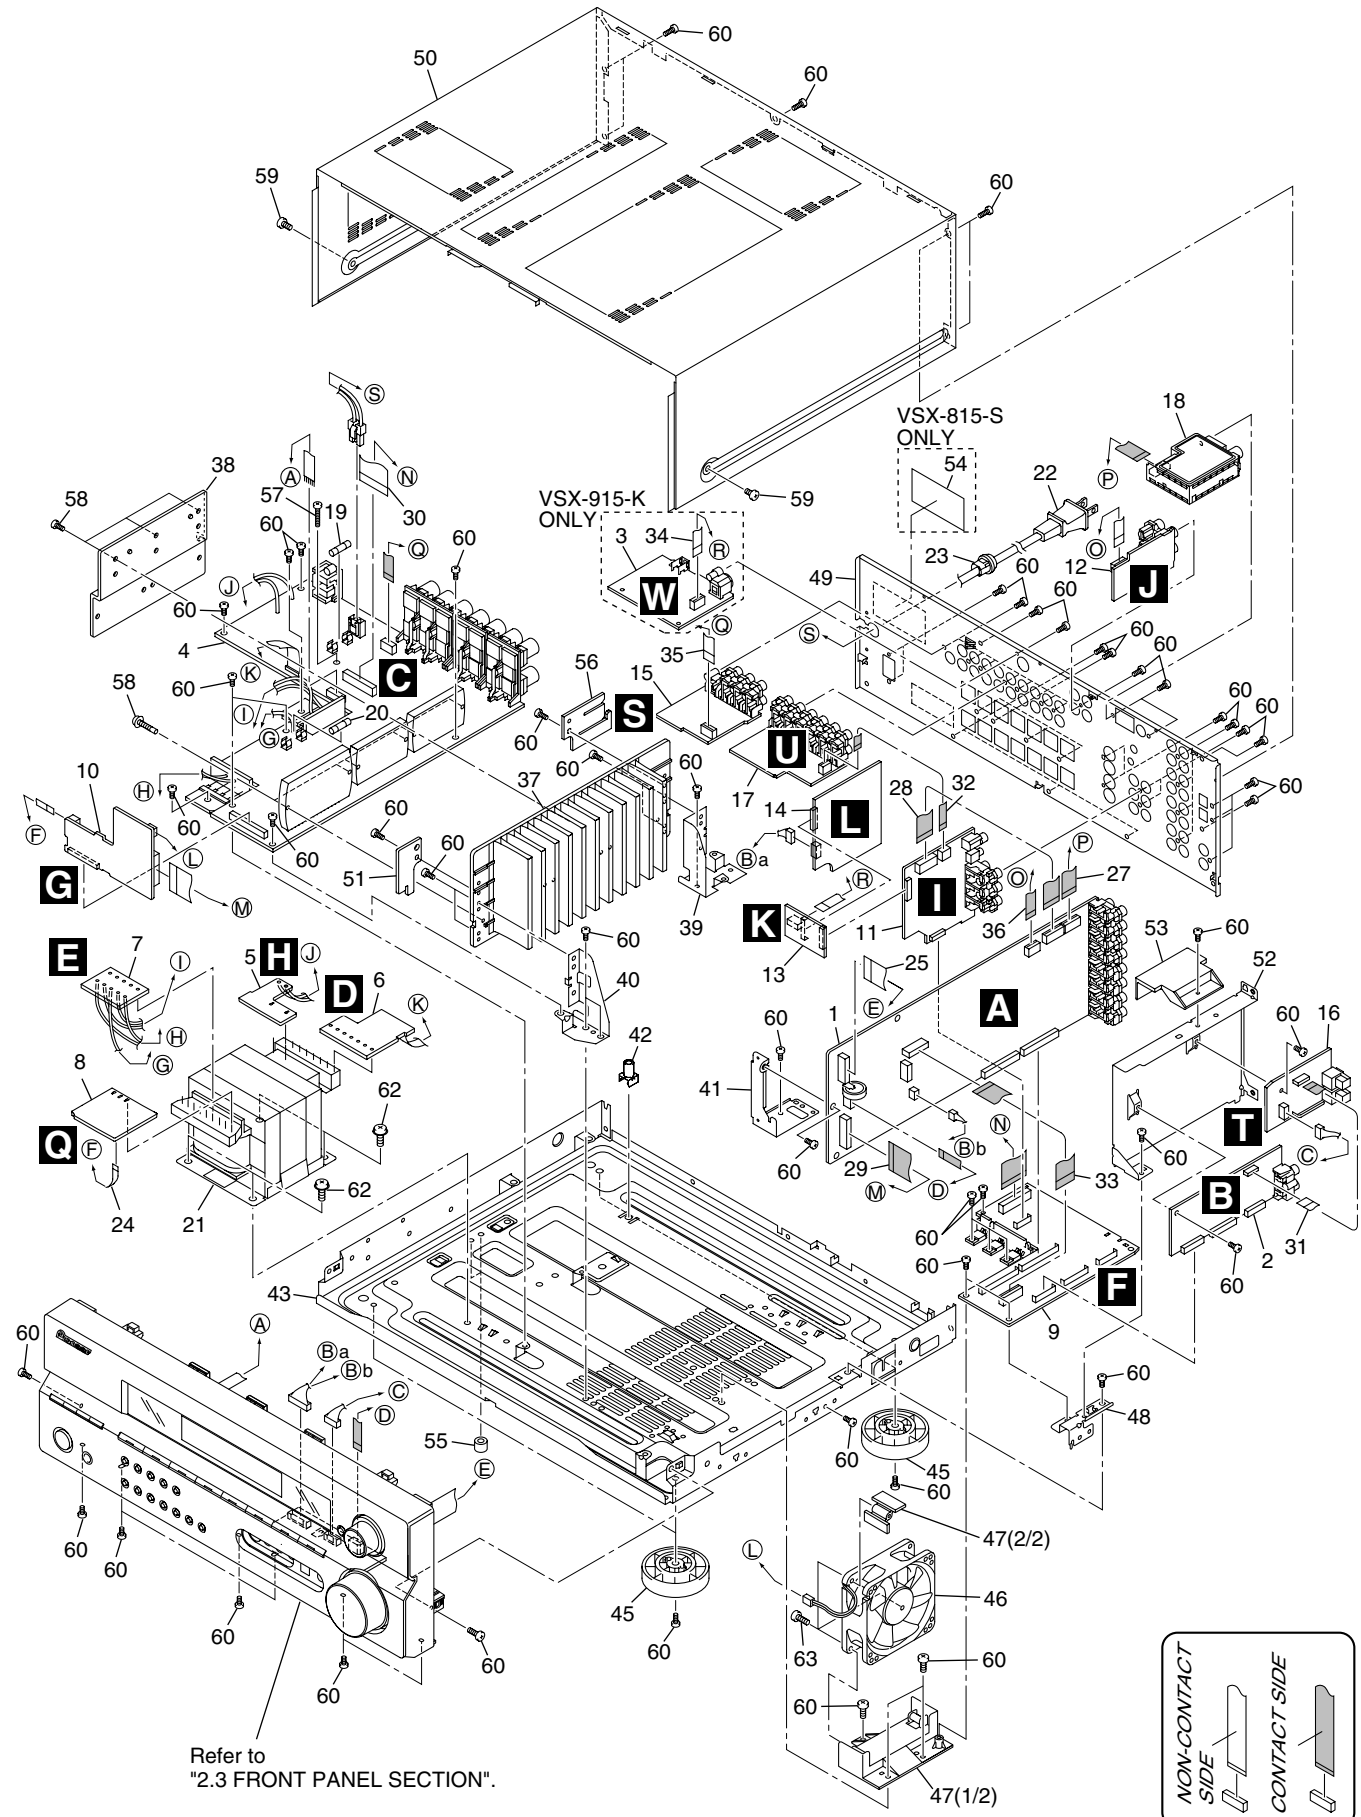



**EXTERIOR SECTION parts List**

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	See Contrast table(2)	33	J43 15P F.F.C/60V	XDD3162
2	DSP Assy	AWX8572	34	J45 7P F.F.C/30V	See Contrast table(2)
3	VIDEO CONVERTER Assy	See Contrast table(2)	35	J46 8P F.F.C/60V	XDD3168
4	AMP & PRIMARY Assy	See Contrast table(2)			
5	TRANS1 Assy	XWZ3958	36	J48 8P F.F.C/60V	XDD3165
			NSP 37	Heatsink V2A39 CORR	XNH3033
6	TRANS2 Assy	XWZ3959	NSP 38	Sub Heatsink	XNH3039
7	TRANS3 Assy	XWZ3961	39	H/S Angle Rear V2	XNG3133
8	TRANS4 Assy	XWZ3936	40	H/S Angle Front V2	XNG3132
9	REGULATOR Assy	XWZ3953			
10	AMP INPUT Assy	XWZ3956	41	PCB Angle R5	XNG3073
			42	PCB Mold	AMR2533
11	VIDEO Assy	XWZ3907	NSP 43	Under Base V2	XNA3023
12	5.1CH INPUT Assy	XWZ3915	44	•••••	
13	B TO B Assy	See Contrast table(2)	45	Insulator	PNW2766
14	S. VIDEO Assy	See Contrast table(2)			
15	PRE-OUT Assy	XWZ3938	⚠ 46	DC Fan Motor	XXM3007
			47	Fan Holder R6	XMR3066
16	DIGITAL INPUT Assy	XWZ3999	48	REG Support R6	XNG3093
17	COMPONENT Assy	XWZ3935	49	Rear Panel	See Contrast table(2)
18	FM/AM TUNER UNIT	AXX7172	50	Bonnet	See Contrast table(2)
⚠ 19	FU1 Fuse (10A)	REK1087			
⚠ 20	FU701 Fuse (10A)	REK1087	51	HOLDER ASSY	XWZ3964
			52	Shield V2	XNG3134
⚠ 21	Transformer 915KU	XTS3089	53	FFC Cover V2	XMR3091
⚠ 22	AC Power Cord	ADG7024	NSP 54	N Label	See Contrast table(2)
23	Cord Stopper	CM-22C			
24	J22 3P F.F.C/30V	XDD3107	NSP 55	Spacer	AEB7092
25	J31 17P F.F.C/30V	XDD3118	56	BINDER ASSY	XWZ3963
			57	Screw	BBZ30P200FTC
26	•••••		58	Screw 3x23	XBA3012
27	J33 13P F.F.C/30V	XDD3164	59	Screw	See Contrast table(2)
28	J34 11P F.F.C/30V	XDD3163	60	Screw	BBZ30P080FTC
29	J35 21P F.F.C/30V	XDD3160			
30	J36 23P F.F.C/60V	XDD3167	61	•••••	
			62	Screw	FBT40P080FNI
31	J37 10P F.F.C/30V	XDD3178	63	Screw	BPZ30P120FTC
32	J38 5P F.F.C/60V	XDD3166			

**(2) CONTRAST TABLE**

VSX-815-K/KUXJ/CA, VSX-815-S/KUXJ/CA and VSX-915-K/KUXJ/CA are constructed the same EXCEPT for the following:

Mark	NO	Description	VSX-815-K /KUXJ/CA	VSX-815-S /KUXJ/CA	VSX-915-K /KUXJ/CA
	1	MAIN Assy	XWK3159	XWK3159	XWK3162
	3	VIDEO CONVERTER Assy	Not used	Not used	XWK3185
	4	AMP & PRIMARY Assy	XWZ3945	XWZ3945	XWZ3948
	13	B TO B Assy	XWZ3940	XWZ3940	XWZ3996
	14	S. VIDEO Assy	XWZ3932	XWZ3932	XWZ3995
	34	J45 7P F.F.C/30V	Not used	Not used	XDD3170
	49	Rear Panel	XNC3325	XNC3325	XNC3324
	50	Bonnet K V1	XZN3148	Not used	XZN3148
	50	Bonnet S V1	Not used	XZN3149	Not used
NSP	54	N Label 815S/KU	Not used	XAL3213	Not used
	59	Screw	FBT40P080FTB	FBT40P080FNI	FBT40P080FTB

# 2.3 FRONT PANEL SECTION

1

2

3

4

A




B

C

D

E

F

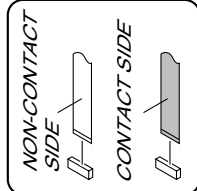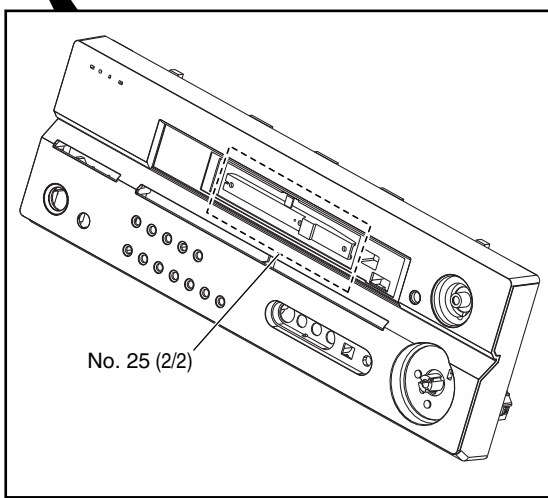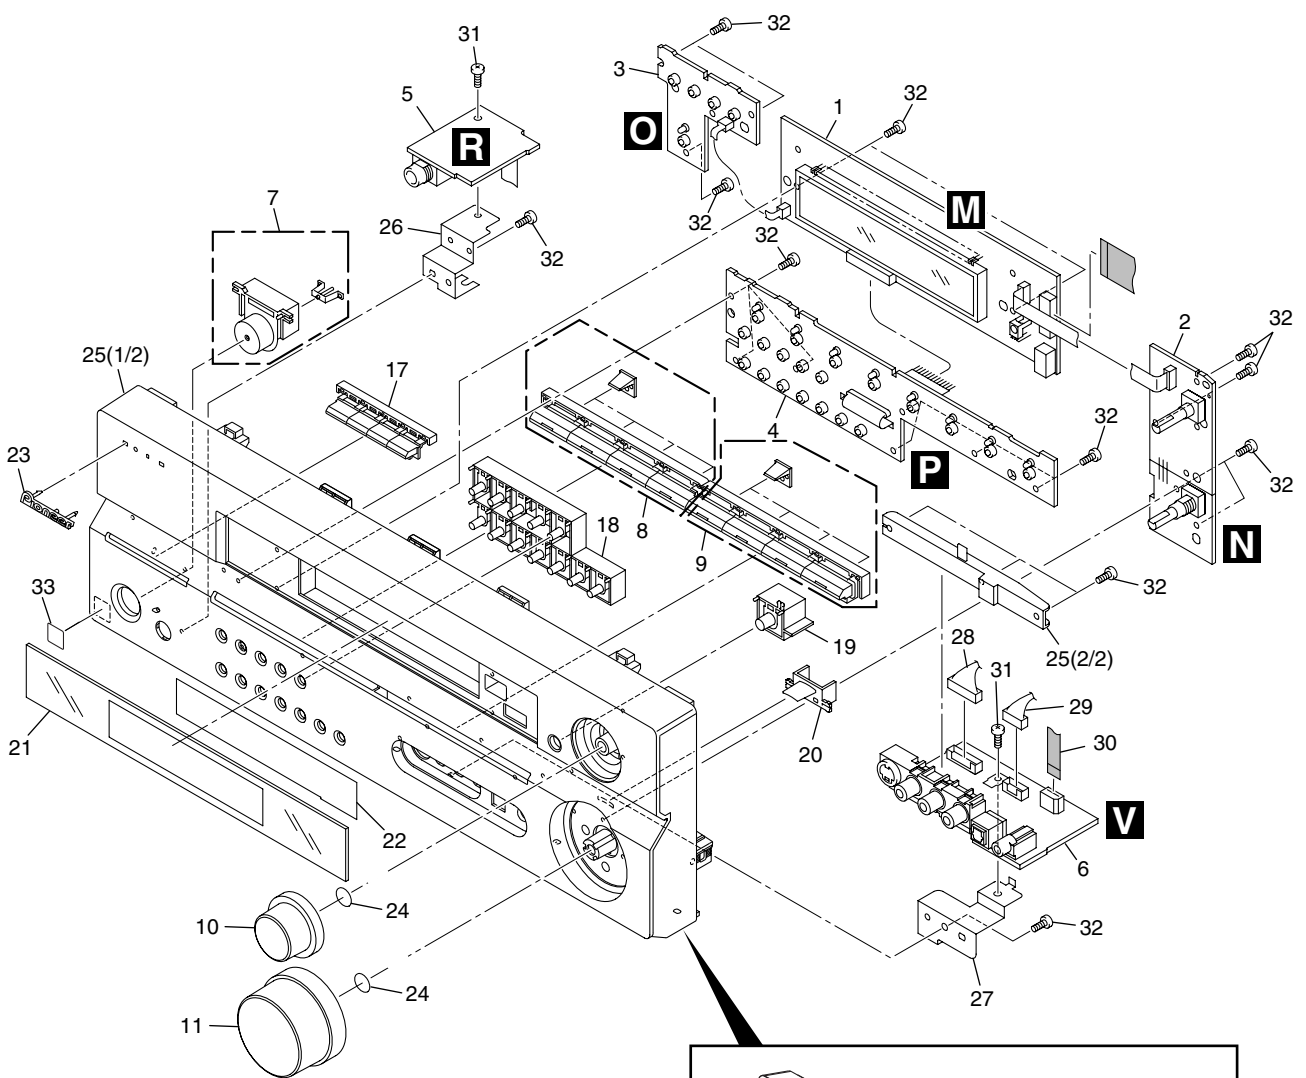

1

2

3

4

5 6 7 8

**FRONT PANEL SECTION parts List**

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	FRONT DISPLAY ASSY	XWZ3911	20	B Lens R6	XAK3352
2	R. ENCODER Assy	XWZ3922	21	D Panel MCACC S	XAK3481
3	POWER SW Assy	XWZ3919	22	FL Barrier V2	XAK3486
4	FRONT KEY Assy	XWZ3965	23	Pioneer Badge B	See Contrast table(2)
5	H.P. Assy	XWZ3924	NSP 24	C Ring DIM 8.1	XBH3016
6	FRONT INPUT Assy	XWZ3926	25	FRT Panel	See Contrast table(2)
7	Standby BTN Assy	See Contrast table(2)	26	Earth Plate HP V2	XNG3131
8	FUNC BTN L Assy	See Contrast table(2)	27	Earth Plate FI V2	XNG3130
9	FUNC BTN R Assy	See Contrast table(2)	28	J29 8P Shield Cable	XDX3025
10	JOG Knob	See Contrast table(2)	29	J30 5P Shield Cable	XDX3023
11	VOL Knob	See Contrast table(2)	30	J32 5P F.F.C/30V	XDD3161
12	•••••		31	Screw	BBZ30P080FTC
13	•••••		32	Screw	BPZ30P100FTC
14	•••••		NSP 33	Energy Star label	AAX8022
15	•••••				
16	•••••				
17	TUNER BTN	See Contrast table(2)			
18	Sub BTN	See Contrast table(2)			
19	JOG BUTTON	See Contrast table(2)			


**(2) CONTRAST TABLE**


VSX-815-K/KUXJ/CA, VSX-815-S/KUXJ/CA and VSX-915-K/KUXJ/CA are constructed the same except for the following:

Mark	NO	Description	VSX-815-K /KUXJ/CA	VSX-815-S /KUXJ/CA	VSX-915-K /KUXJ/CA
	7	Standby BTN 915K Assy	XAD3216	Not used	XAD3216
	7	Standby BTN 915P Assy	Not used	XAD3217	Not used
	8	FUNC BTN 915K L Assy	XAD3212	Not used	XAD3212
	8	FUNC BTN 915S L Assy	Not used	XAD3214	Not used
	9	FUNC BTN 915K R Assy	XAD3213	Not used	XAD3213
	9	FUNC BTN 915S R Assy	Not used	XAD3215	Not used
	10	JOG Knob V1K	XAB3038	Not used	XAB3038
	10	JOG Knob V1P	Not used	XAB3040	Not used
	11	VOL Knob V1K	XAB3039	Not used	XAB3039
	11	VOL Knob V1P	Not used	XAB3041	Not used
	17	TUNER BTN V2K	XAD3192	Not used	XAD3192
	17	TUNER BTN V2S	Not used	XAD3193	Not used
	18	Sub BTN V2K	XAD3198	Not used	XAD3198
	18	Sub BTN V2P	Not used	XAD3218	Not used
	19	JOG BUTTON V2K	XAD3204	Not used	XAD3204
	19	JOG BUTTON V2S	Not used	XAD3205	Not used
	23	Pioneer Badge B	XAM3006	VAM1129	XAM3006
	25	FRT Panel 815K/KU	XMB3174	Not used	Not used
	25	FRT Panel 815S/KU	Not used	XMB3175	Not used
	25	FRT Panel 915K/KU	Not used	Not used	XMB3173

# 3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

## 3.1 BLOCK DIAGRAM

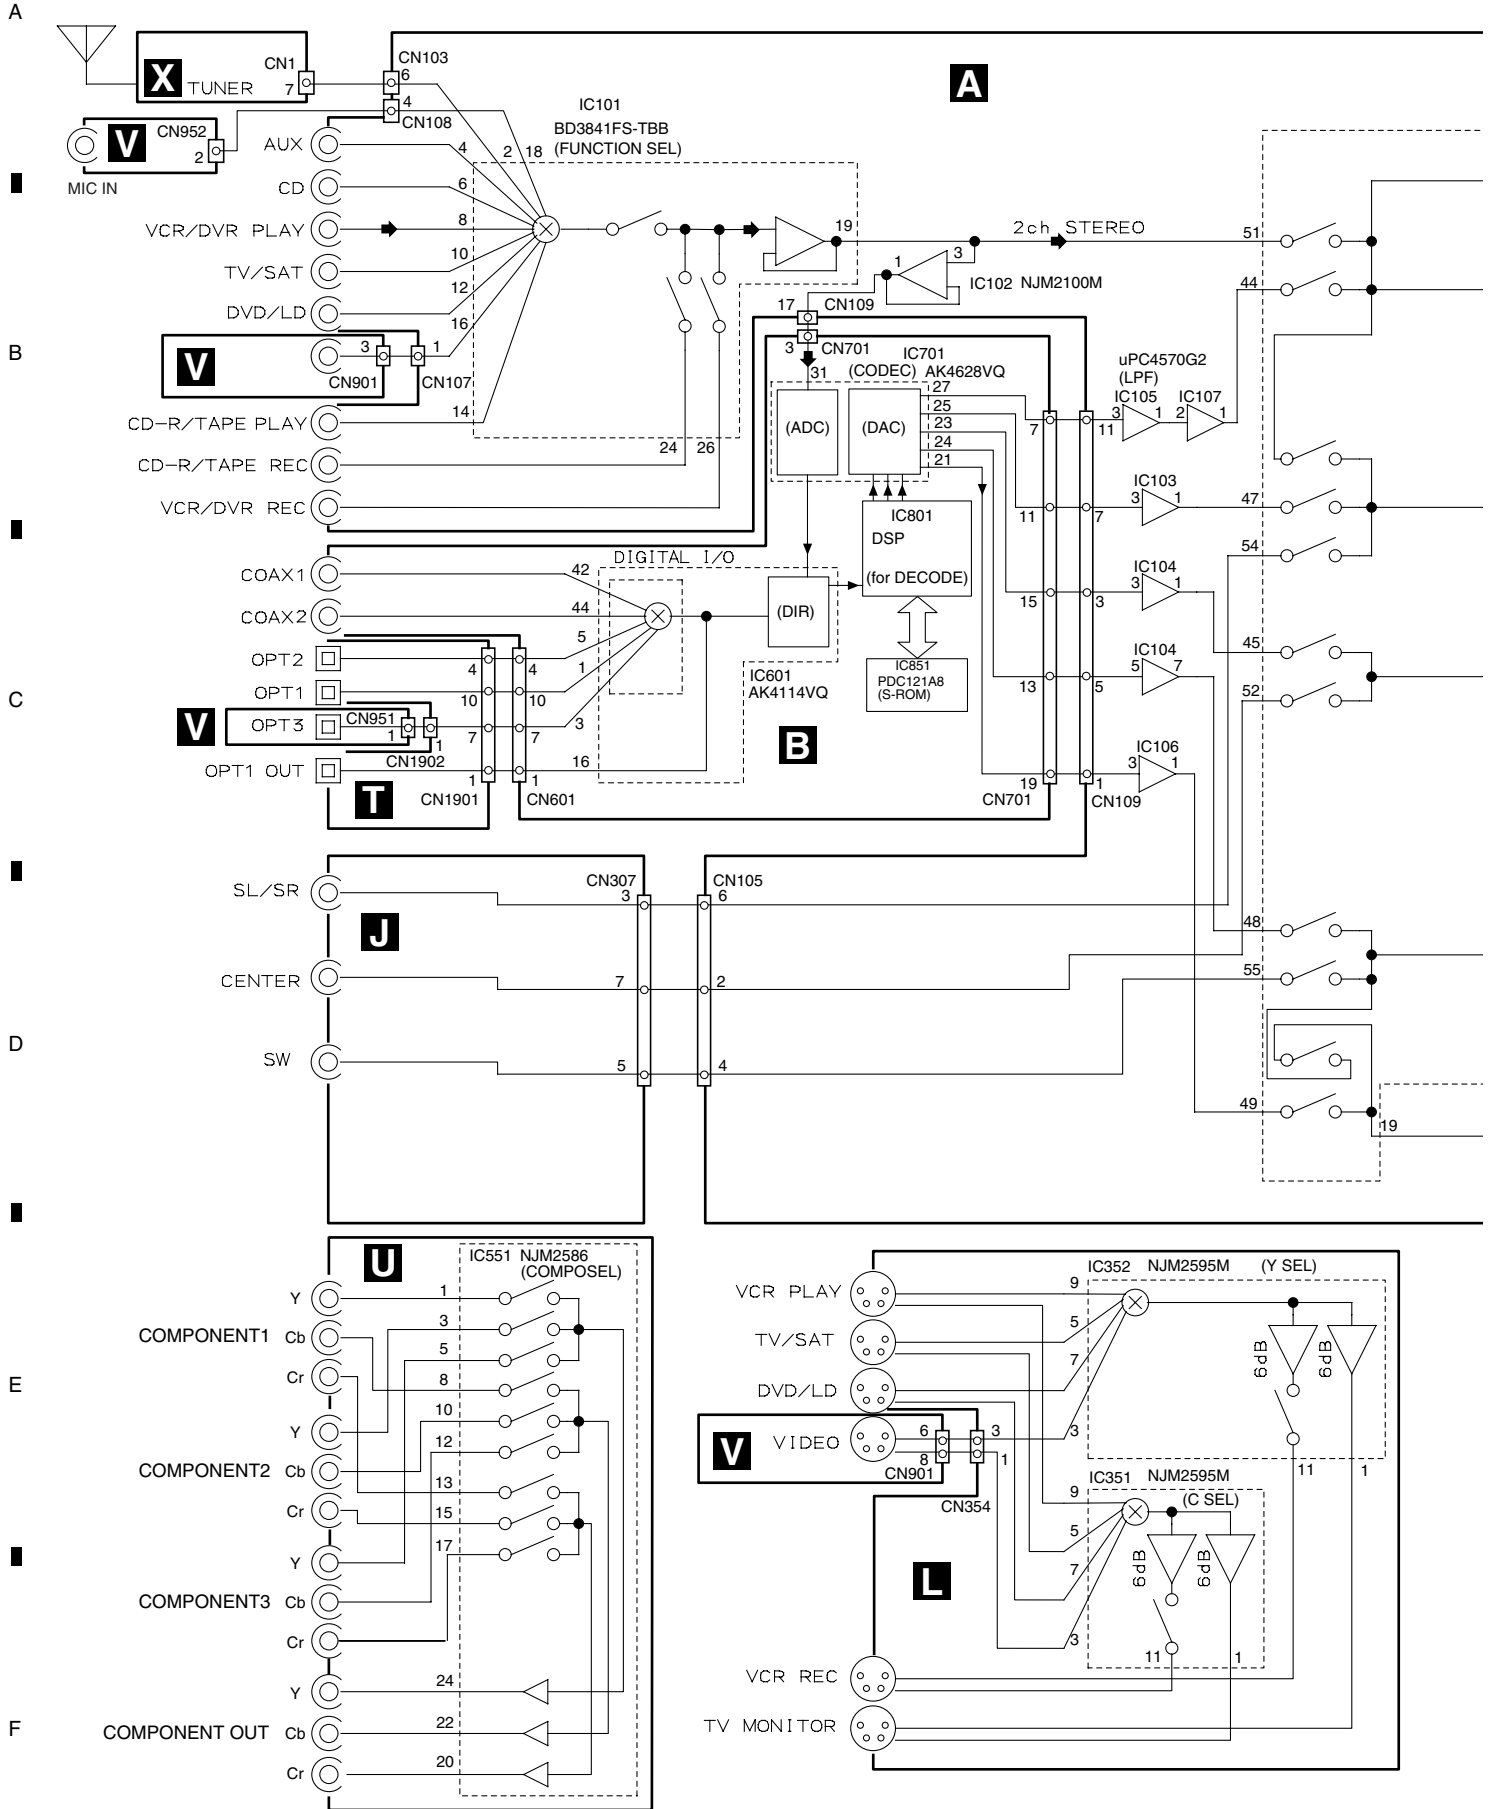

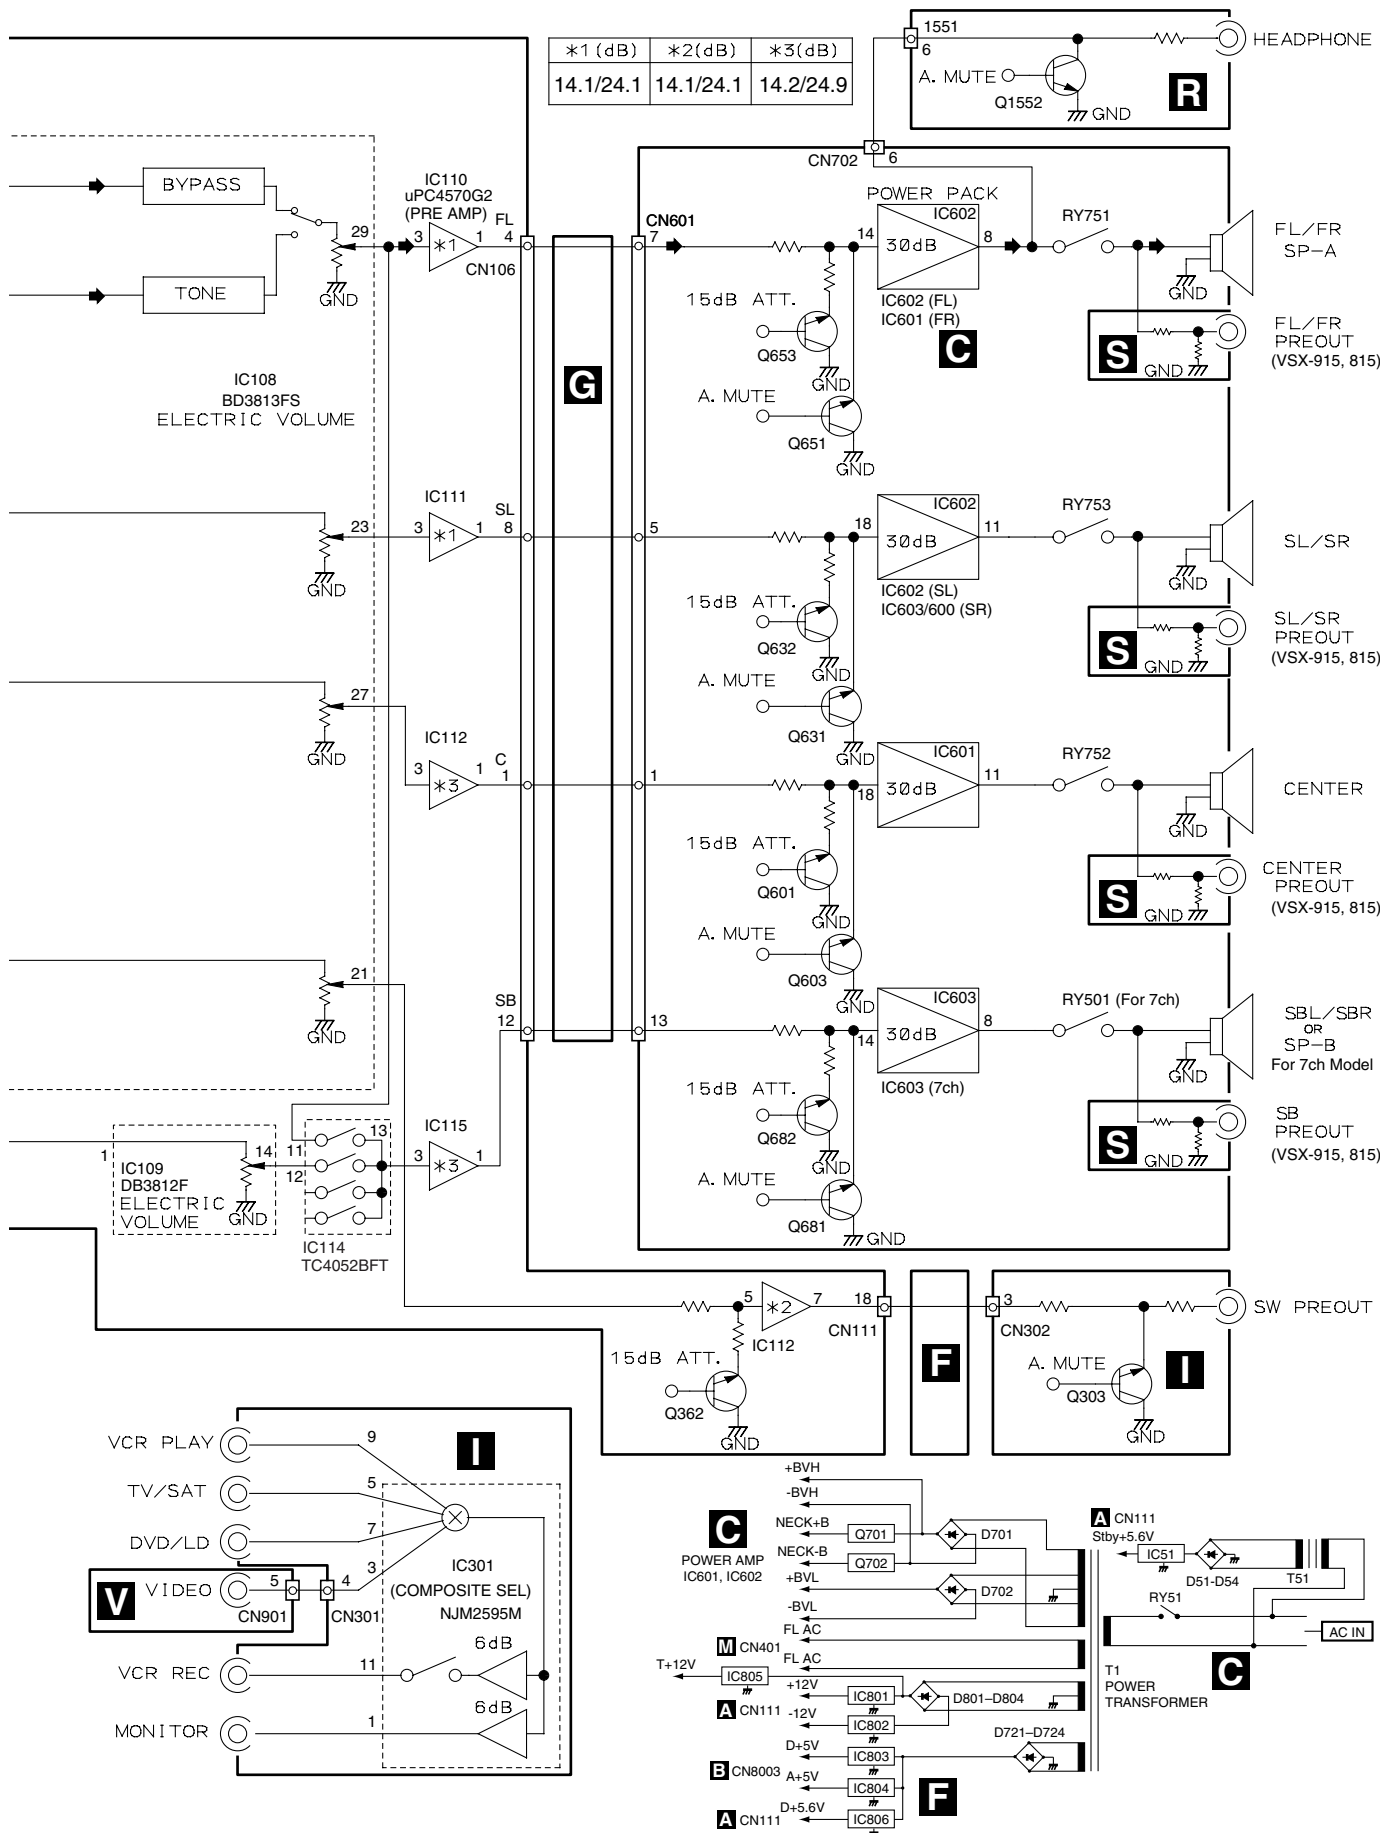

# 3.2 OVERALL WIRING CONNECTION DIAGRAM

A  
B  
C  
D  
E  
F

1 2 3 4

*8	Others
404	51063-0705
511	51063-0705
CN511	None
J42	D15A07-075-2651

**V** FRONT OPT & MIC ASSY (XWZ3926)

**N** R. ENCODER ASSY (XWZ3922)

**M** FRONT DISPLAY ASSY (XWZ3911)

**P** FRONT KEY ASSY (XWZ3965)

**G** AMP INPUT ASSY (XWZ3956)

**L** S. VIDEO ASSY (VSX-915 : XWZ3995) (VSX-815 : XWZ3932)

**K** B TO B ASSY (VSX-915 : XWZ3996) (VSX-815 : XWZ3940)

**F** REGULATOR ASSY (XWZ3953)

**A** MAIN ASSY (VSX-915 : XWK3162) (VSX-815 : XWK3159)

**B** DSP ASSY (AWX8572)

**B 1/2, B 2/2**

**A 1/3, A 2/3, A 3/3**

**X** TUNER MODULE


**J** 5.1CH INPUT ASSY (XWZ3915)

**I** VIDEO ASSY (XWZ3907)


**T** DIGITAL IN ASSY (XWZ3999)

**U** FM/AM TUNER UNIT\* (AXX7172)

\* No schematic diagram

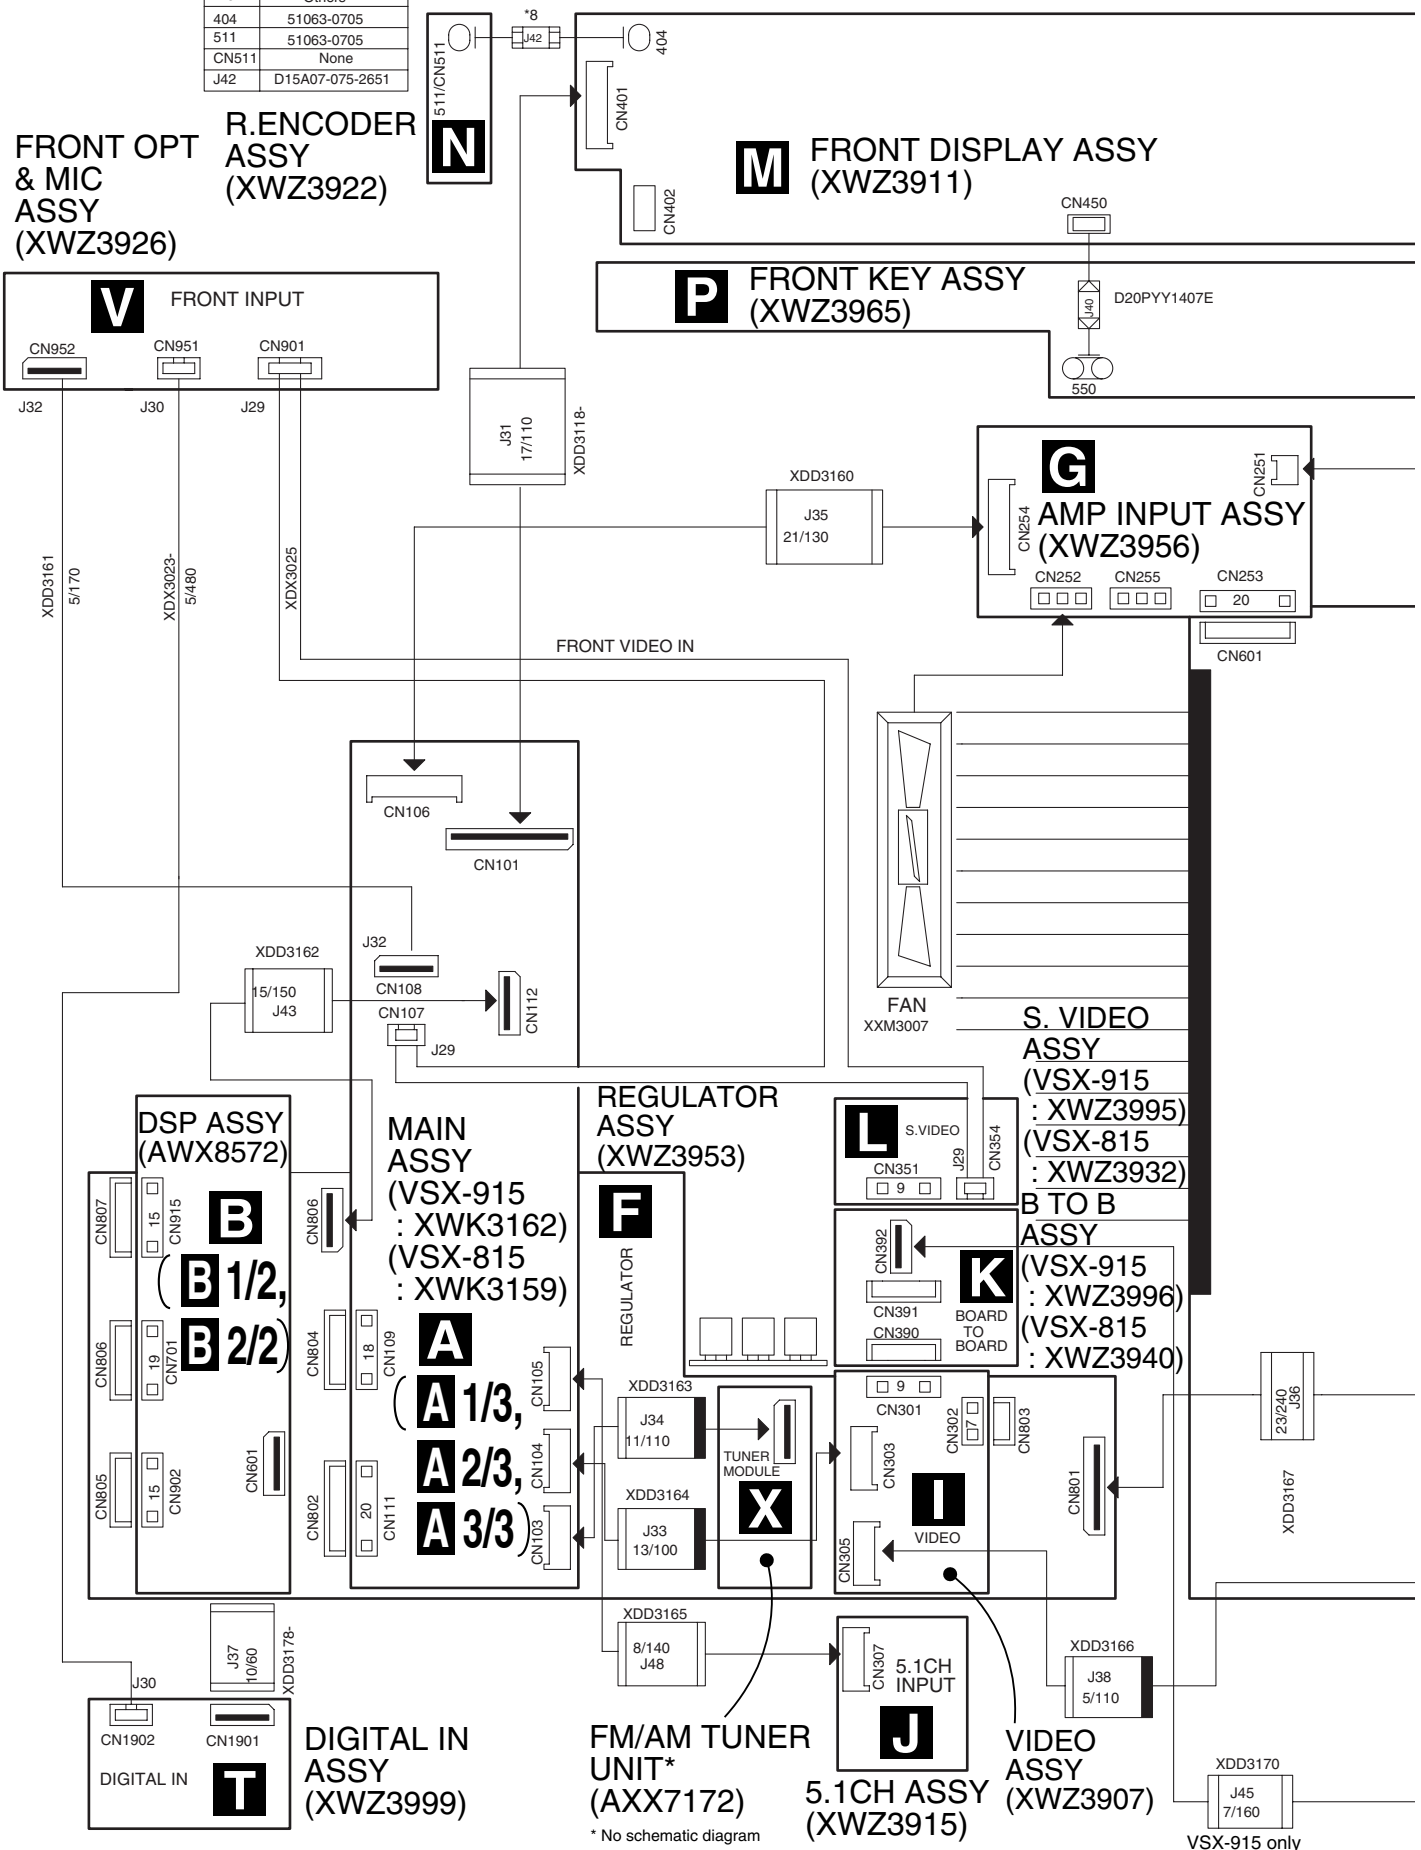



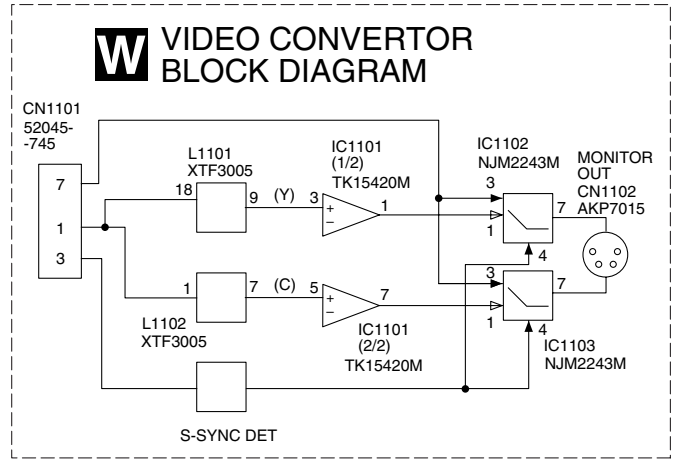
1 2 3 4

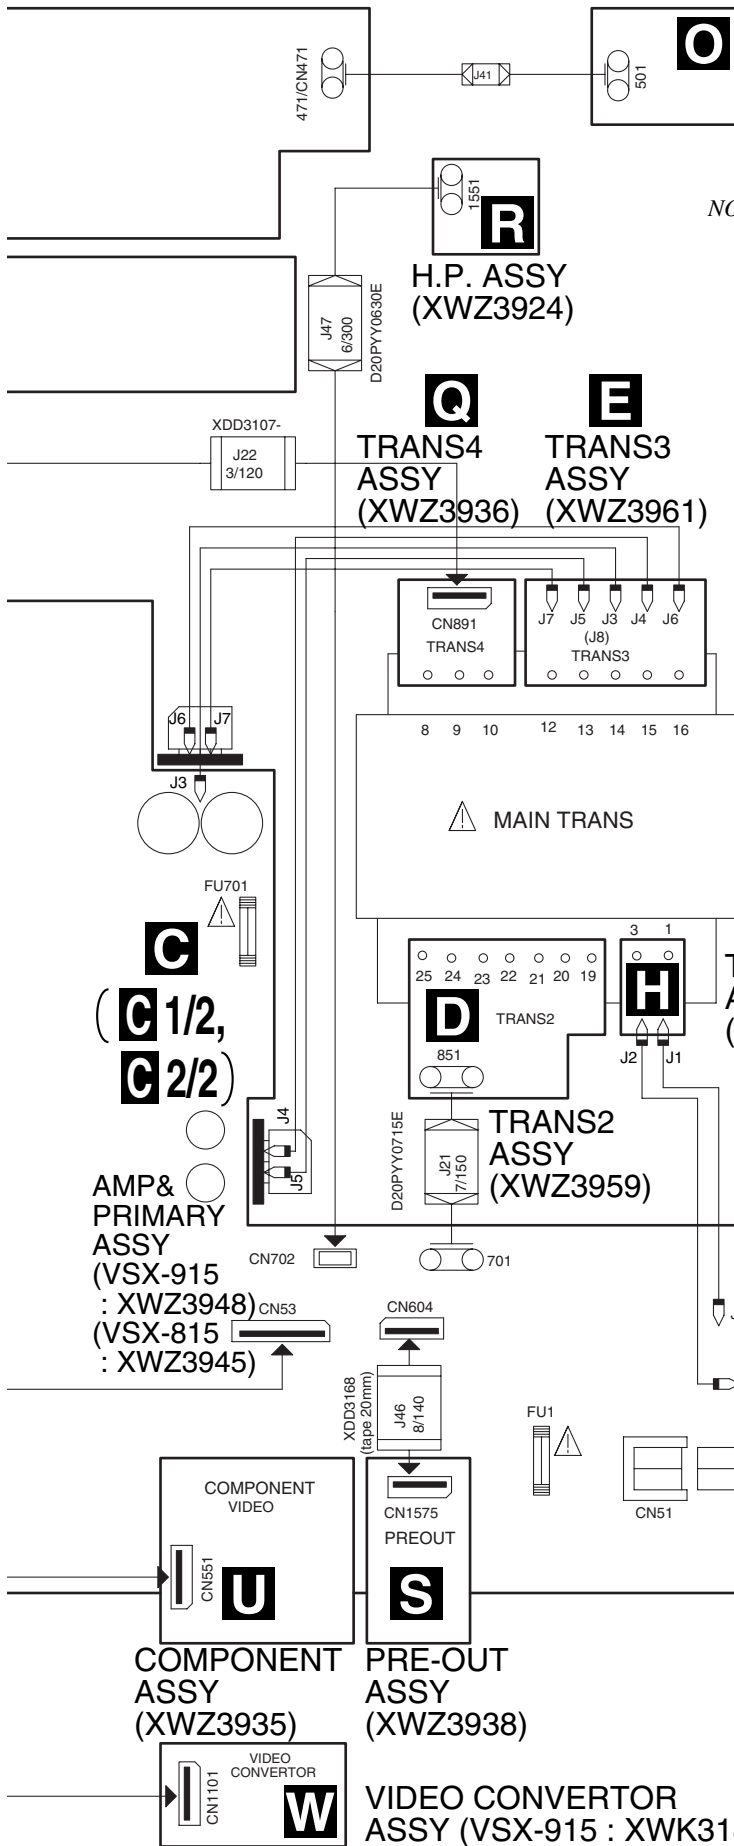











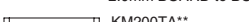
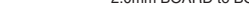

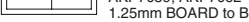



**P. SW & FUNC. KEY ASSY (XWZ3919)**

**NOTES:**

- When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
-  : The power supply is shown with the marked box.

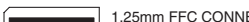

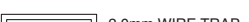-  B\*B-PH-K-S PH CONNECTOR
-  1.25mm FFC
-  1.25mm REVERSE FFC
-  2.0mm FLAT CABLE
-  1.5mm FLAT CABLE
-  BOARD IN
-  1.25mm FFC CONNECTOR(L)
-  1.25mm FFC CONNECTOR
-  2.0mm CABLE HOLDER
-  1.5mm CABLE HOLDER
-  2.0mm WIRE TRAP
-  KP200TA\*\*L 2.0mm BOARD to BOARD
-  KM200TA\*\* 2.0mm BOARD to BOARD
-  AKP7070, AKP7073 1.25mm BOARD to BOARD
-  AKP7059, AKP7062 1.25mm BOARD to BOARD
-  AC CODE SOCKET
-  AC CODE CONNECTOR



# 3.3 MAIN ASSY (1/3)

1 2 3 4

A


B

C

D

E

F

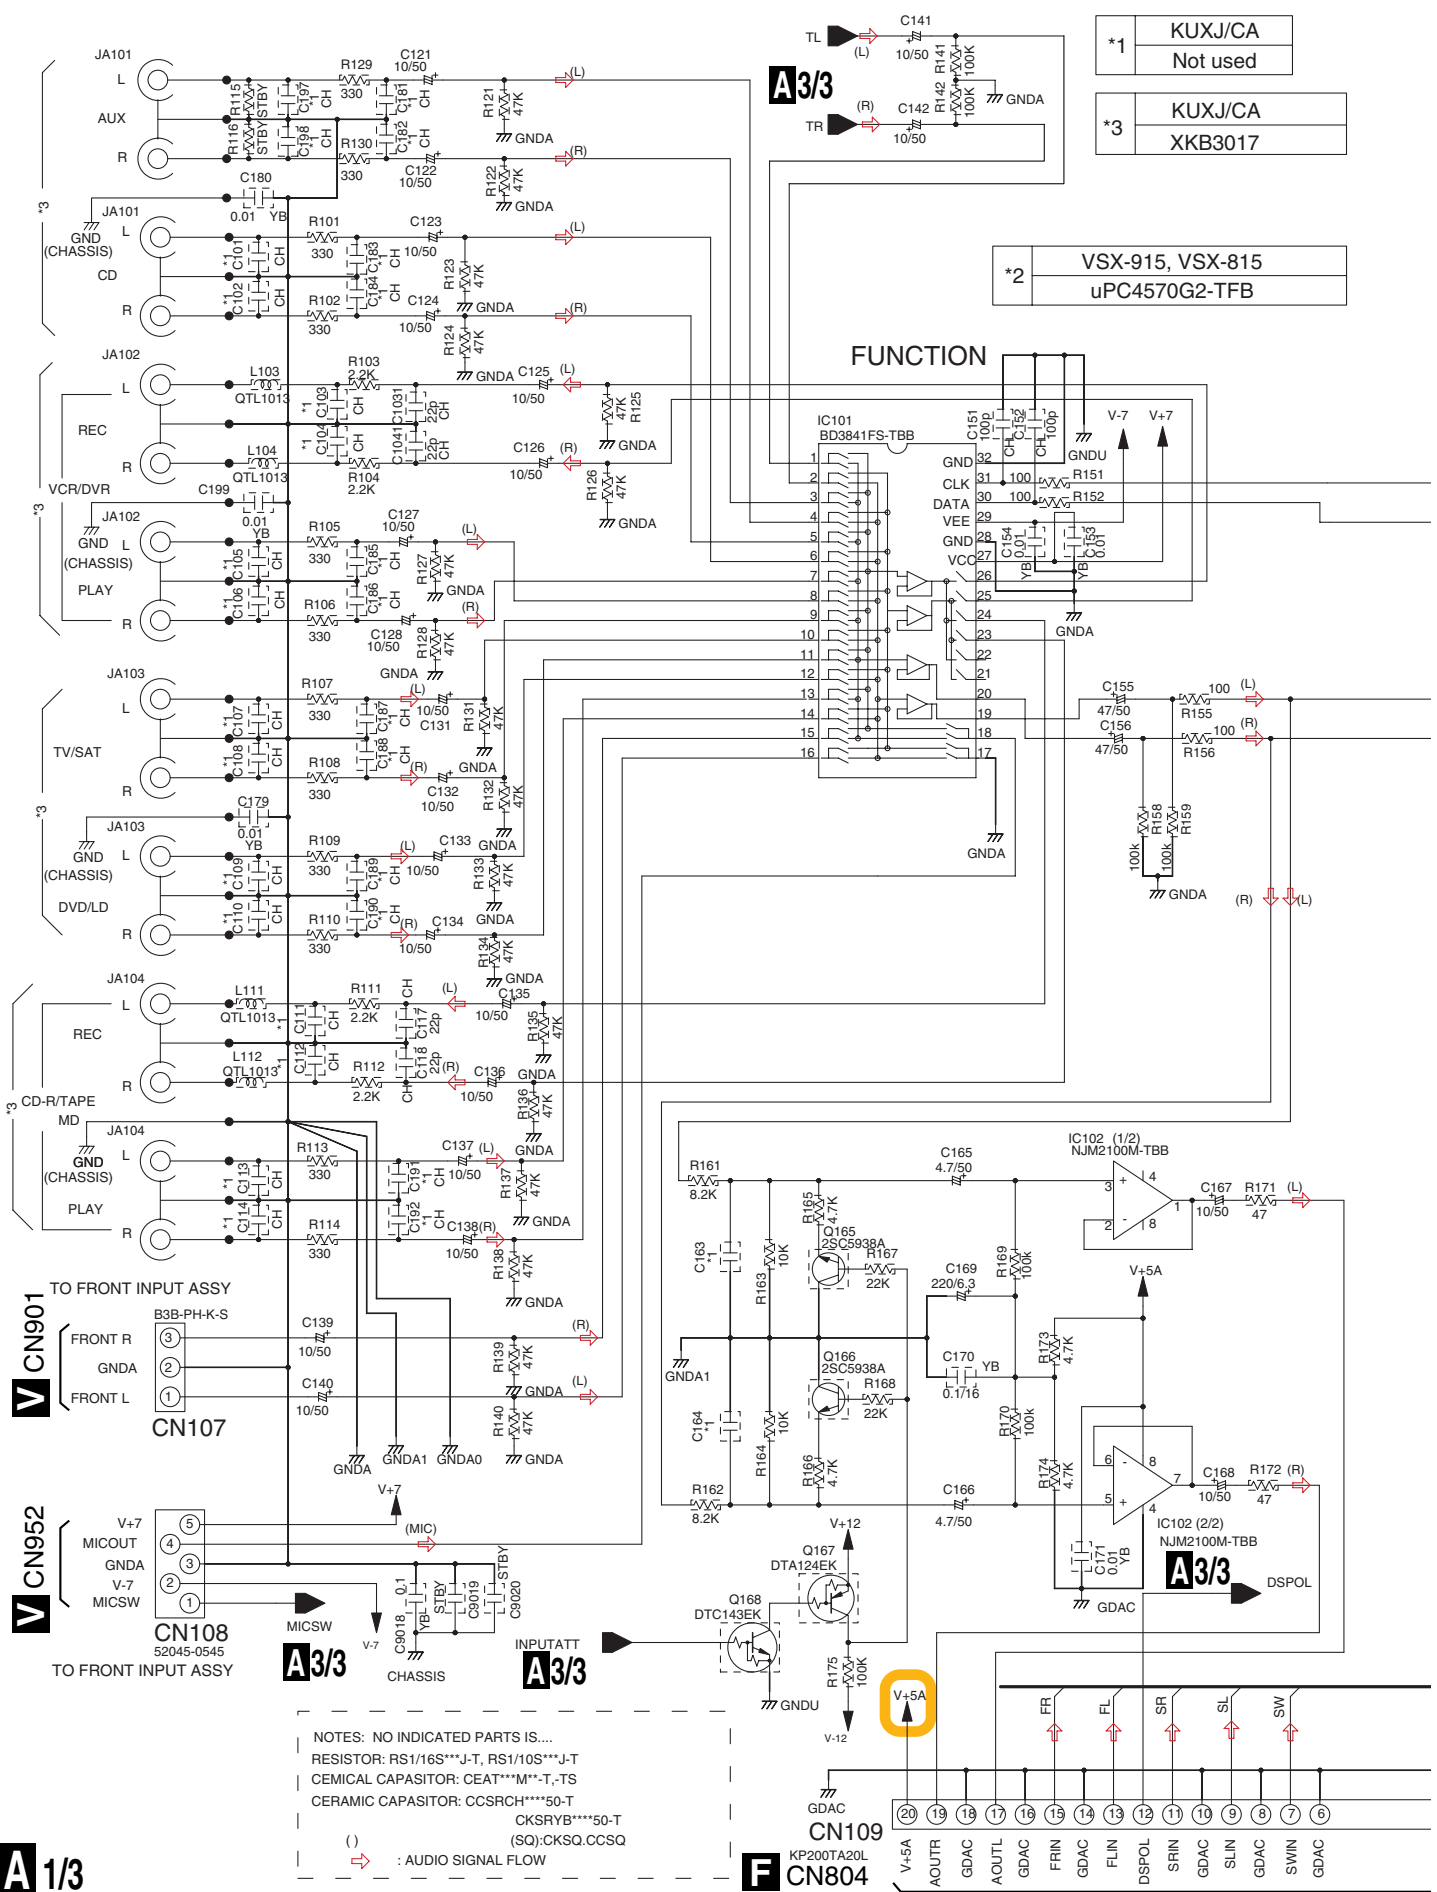

*1	KUXJ/CA
	Not used
*3	KUXJ/CA
	XKB3017

*2	VSX-915, VSX-815
	uPC4570G2-TFB

NOTES: NO INDICATED PARTS IS...  
 RESISTOR: RS1/16S\*\*\*J-T, RS1/10S\*\*\*J-T  
 CERAMIC CAPASITOR: CEAT\*\*\*M\*\*T-,TS  
 CERAMIC CAPASITOR: CCSRCH\*\*\*50-T  
 CKSRYB\*\*\*50-T (SQ):CKSQ.CCSQ  
 ( ) : AUDIO SIGNAL FLOW


**A** 1/3

**F** KP200TA20L  
**CN804**





VSX-815-K

1 2 3 4

**A 1/3 MAIN ASSY**  
 (VSX-915 : XWK3162)  
 (VSX-815 : XWK3159)

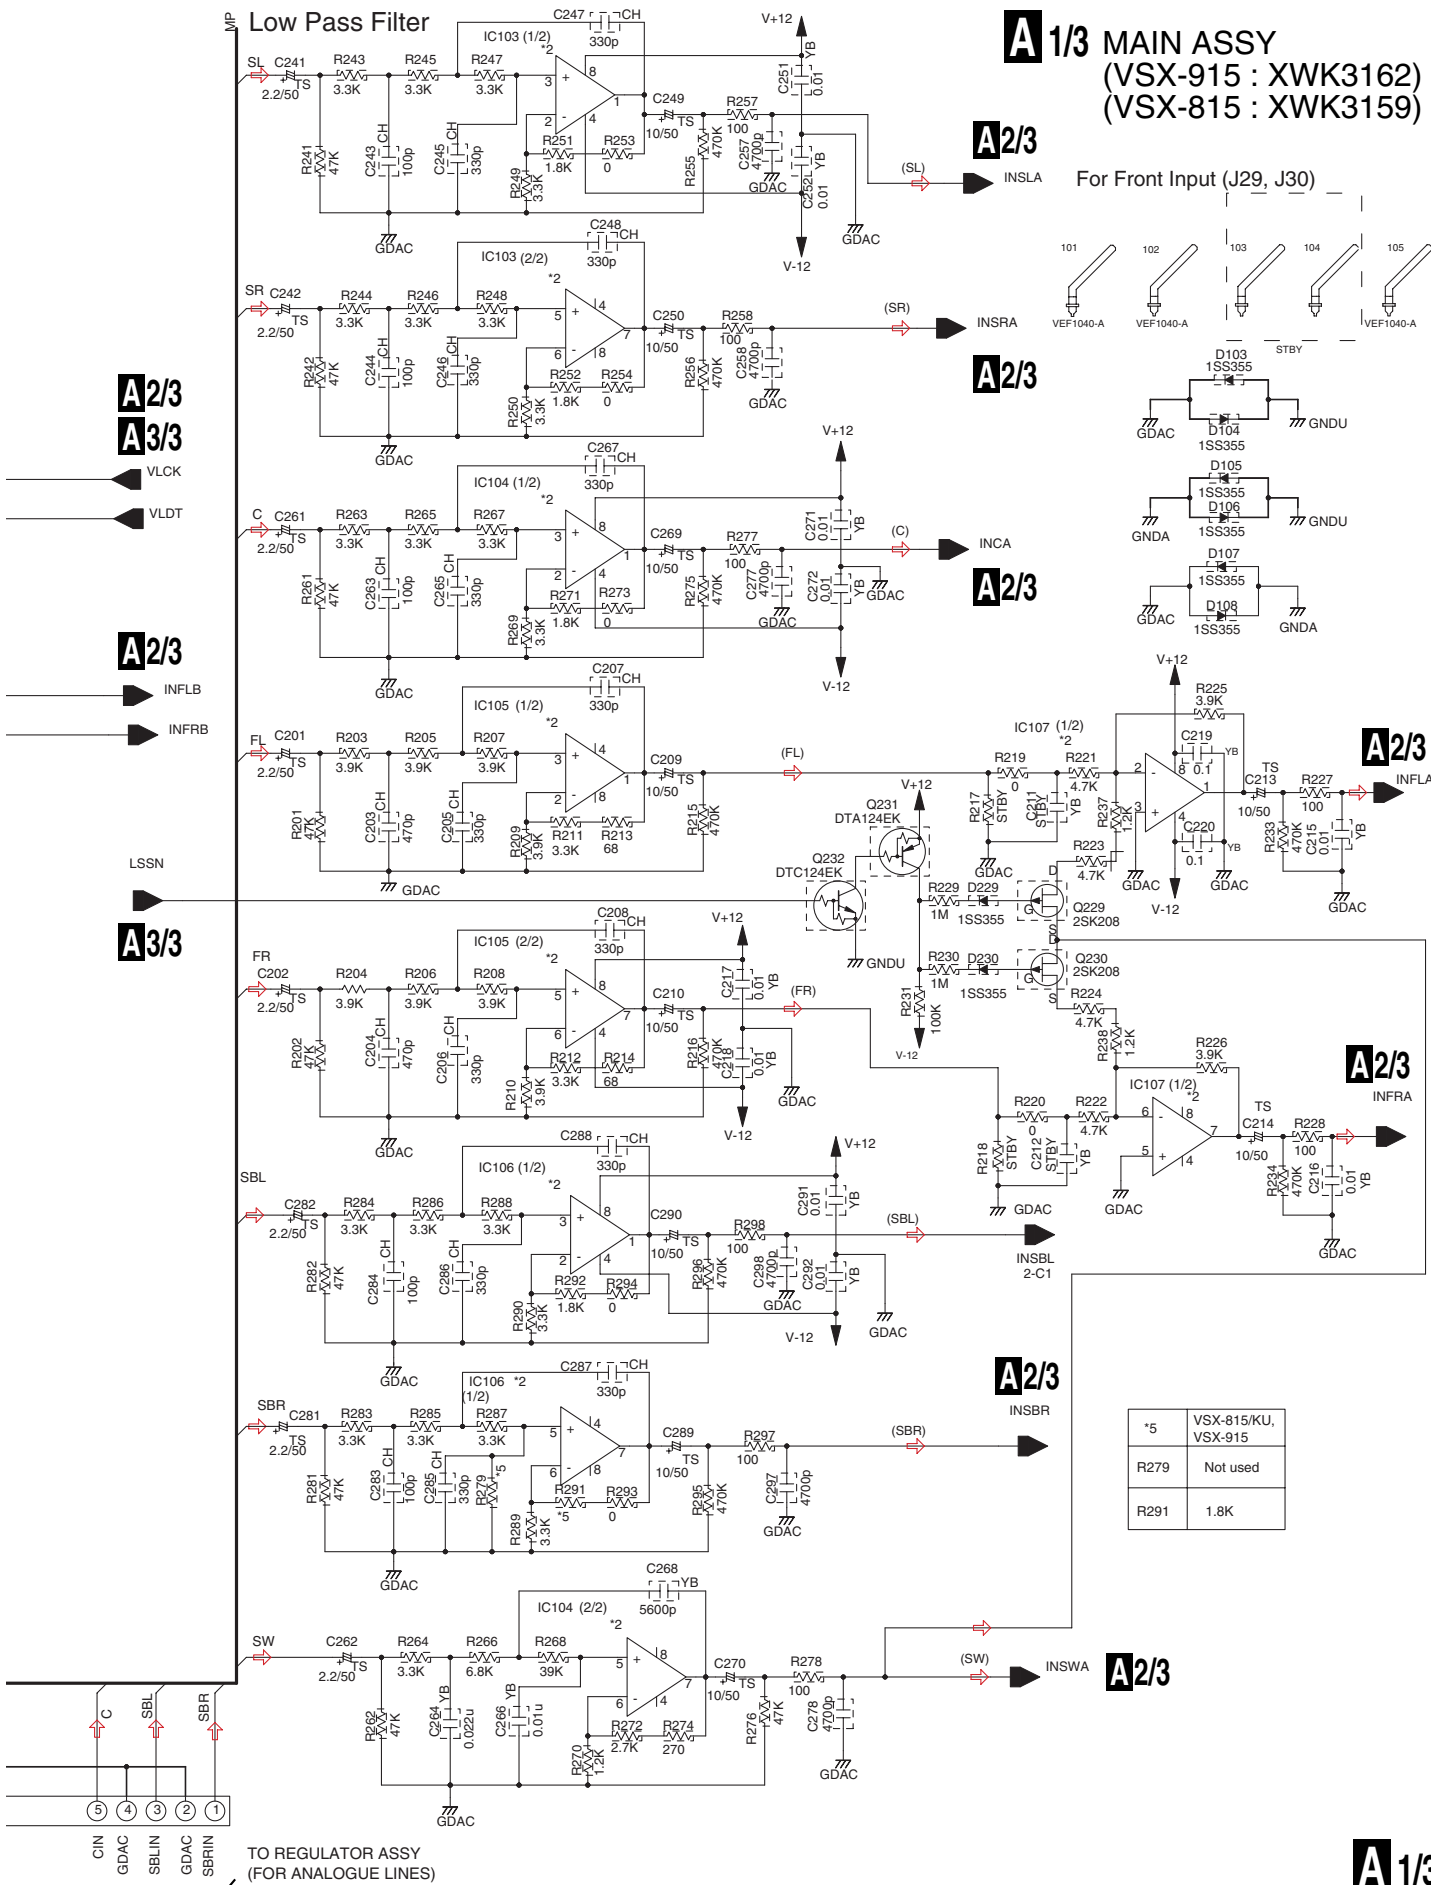

For Front Input (J29, J30)

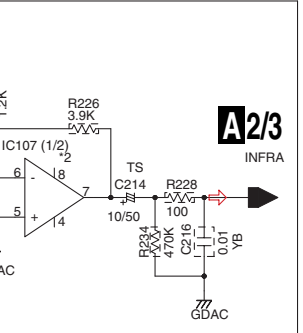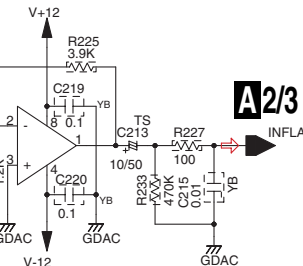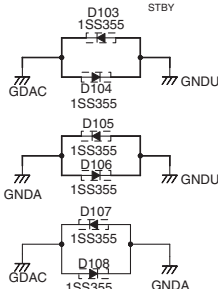


*5	VSX-815/KU, VSX-915
R279	Not used
R291	1.8K

TO REGULATOR ASSY  
 (FOR ANALOGUE LINES)

# 3.4 MAIN ASSY (2/3)

## A 2/3 MAIN ASSY (VSX-915 : XWK3162) (VSX-815 : XWK3159)

- A INFRA
- A INFLA
- A INCA
- A INSLA
- A INSWA
- B A1/3 INSRB
- B A1/3 INSLB
- B A1/3 INSWB
- B A1/3 INSRB
- B A1/3 INSLB
- B A1/3 INSWB
- C VLDT
- C VLCK
- D TO 5.1 INPUT ASSY
- D CN105
- D AG
- D -12V
- D SW
- D +12V
- D SL
- D AG
- D SR
- E A1/3 INSB
- E A1/3 INSR

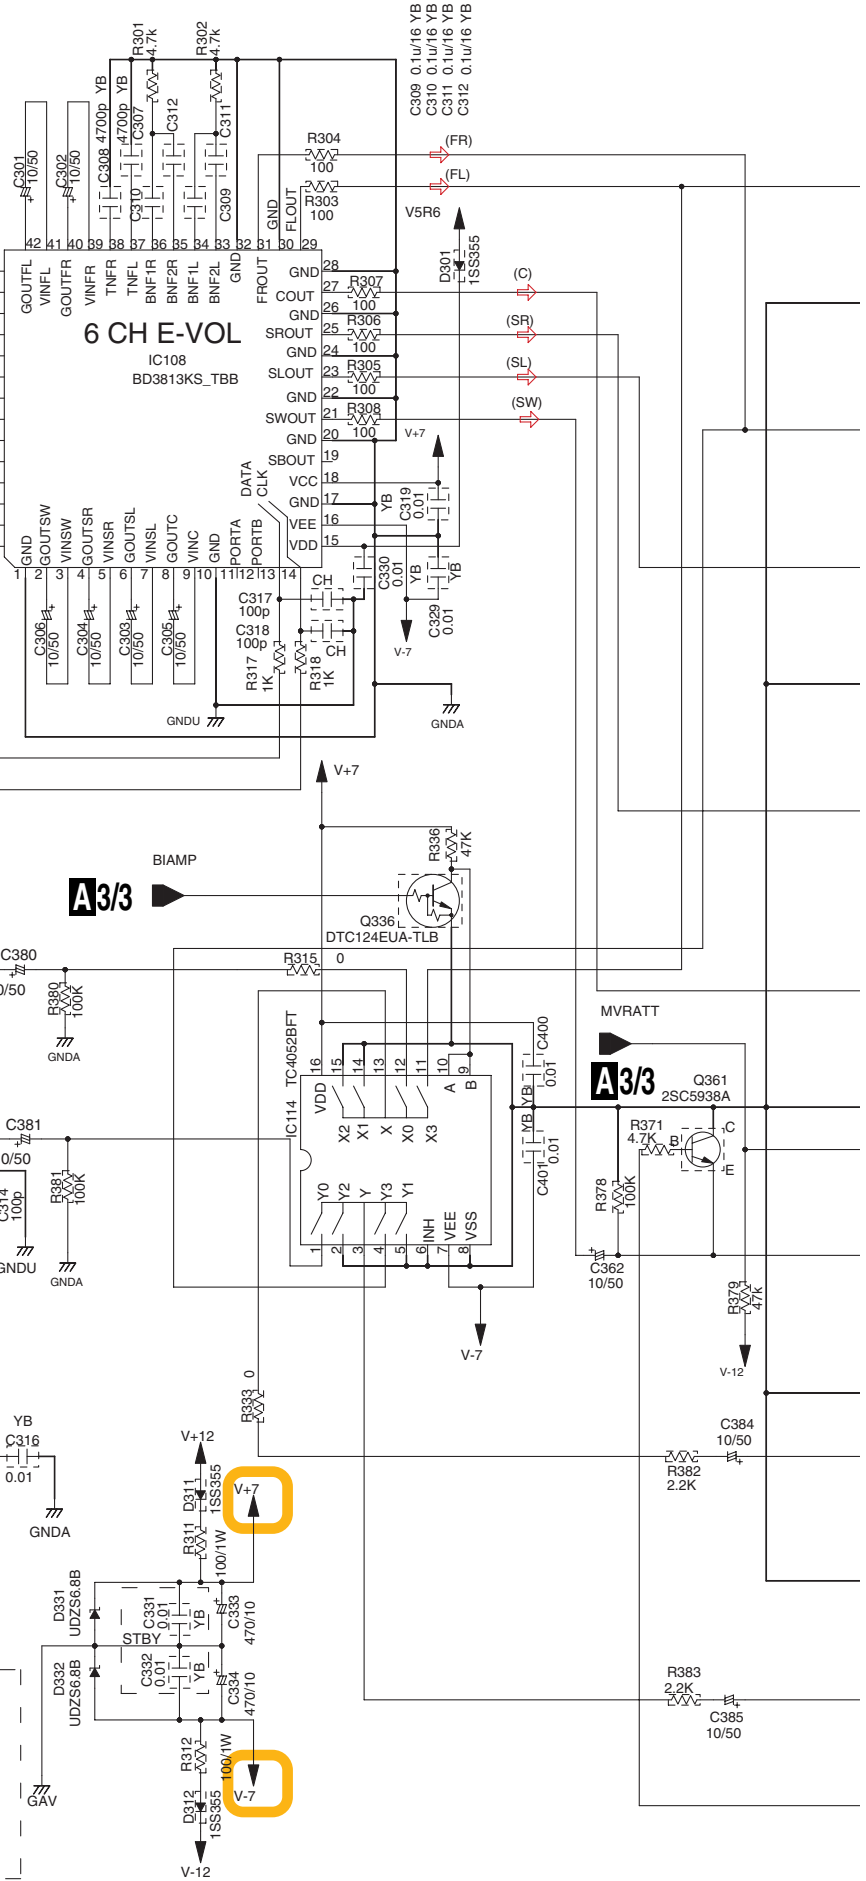


**NOTE**

- RESISTORS**  
Unit: k- $\Omega$ , M- $\Omega$  or  $\Omega$  unless otherwise noted.  
Rated power: 1/16W unless otherwise noted.  
Tolerance: (J)  $\pm 5\%$  unless otherwise noted.
- CAPACITORS**  
Unit: p-pF or  $\mu$ F unless otherwise noted.  
Ratings: Capacity( $\mu$ F)/Voltage(V) unless otherwise noted.  
Rated Voltage: 50V expect for electrolytic capacitors.  
JA:CEJA

⇒ : AUDIO SIGNAL FLOW


A3/3 SWPR

PRE-AMP

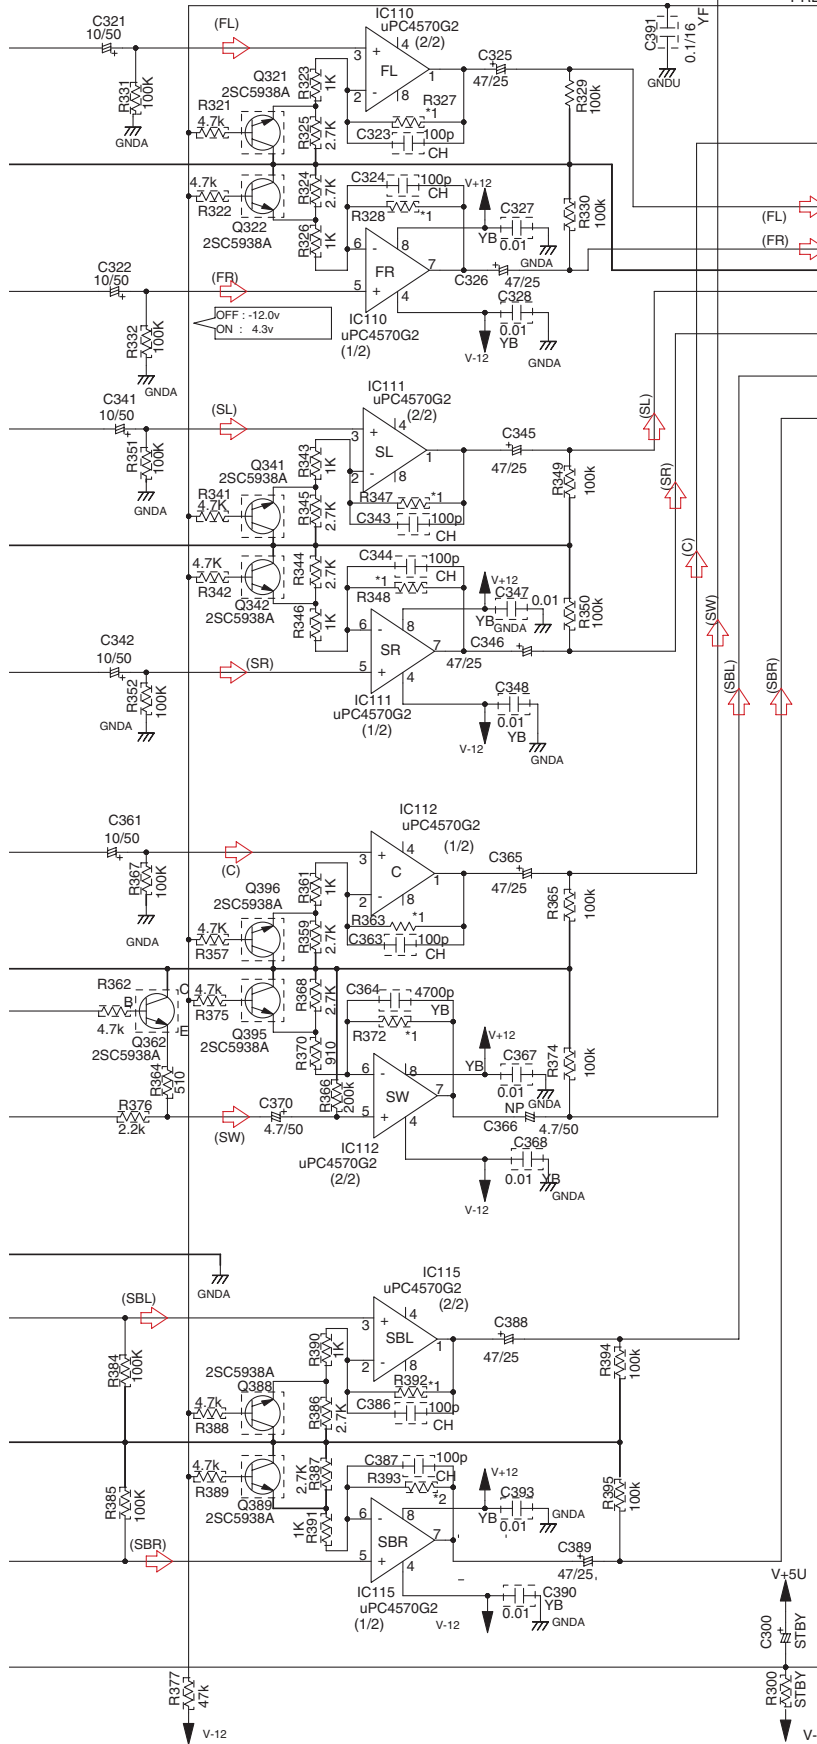

TO AMP INPUT ASSY

CN106  
52045-2145

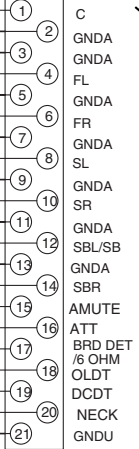

CN254

A3/3

A3/3  
BOARD\_DET/6\_OHM

	FRONT, REAR		Center,SB		SW	
*1	R327 R328 R347 R348 (Ohm)	GAIN(dB)	R363 R392 (Ohm)	GAIN(dB) 915	R372 (Ohm)	GAIN(dB) 14.2/24.9
KUXJ /CA	15k	14.1/24.1	15k	14.1/24.1	15k	14.2/24.9

	R393	
	915	Others
KUXJ /CA	15k	0


VSX-815-K

A 2/3


# 3.5 MAIN ASSY (3/3)

1 2 3 4


A

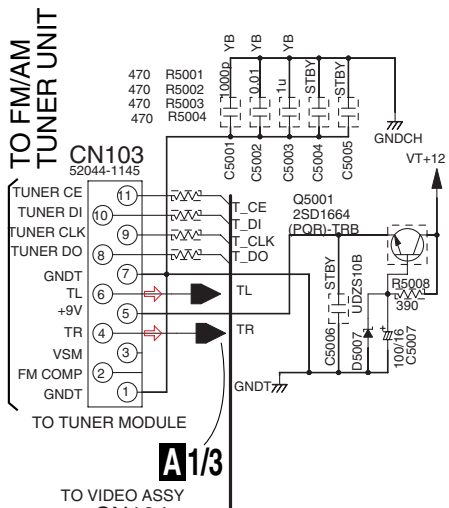

B

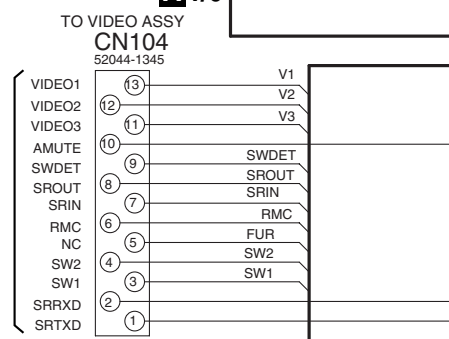

C

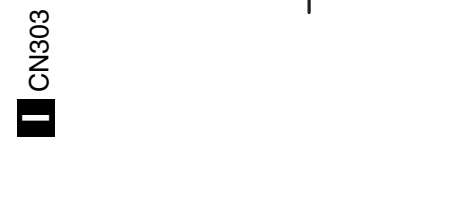

D

*1	ASSY	R9023	R9024	R9025	R9026
VSX-815/KU	XWK3159	4.7k	-	-	0
VSX-915/KU	XWK3162	4.7k	-	4.7k	0

E

- \*3 R9042, R9043, R9044 : 10k
- \*4 : ALL MODEL : PCH1132  
STBY : ACH7144
- \*5 R9068 : 0


F

**NOTE**

1.RESISTORS  
Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.  
Rated power: 1/16W unless otherwise noted.  
Tolerance: (J) ± 5% unless otherwise noted.

2.CAPACITORS  
Unit: p-pF or μF unless otherwise noted.  
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.  
Rated Voltage: 50V expect for electrolytic capacitors.

⇒ : AUDIO SIGNAL FLOW

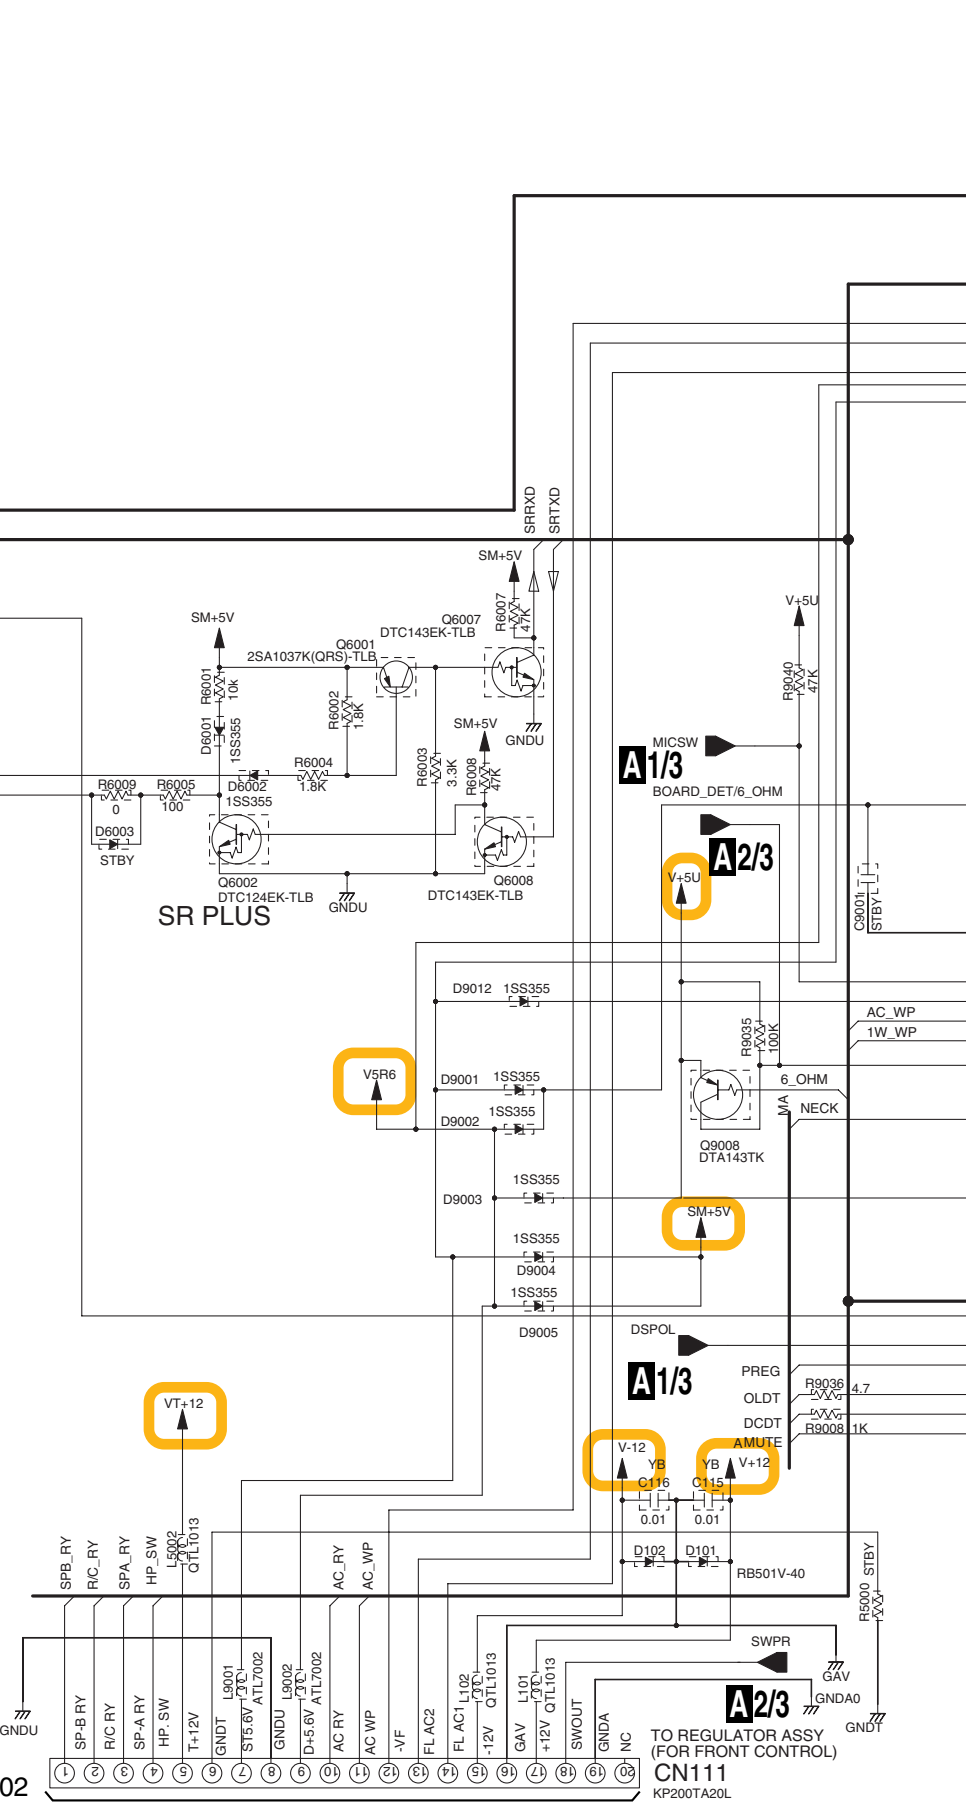

**A 3/3**


**F**  
CN802

**A2/3**  
TO REGULATOR ASSY (FOR FRONT CONTROL)  
CN111  
KP200TA20L

1 2 3 4

**M** CN401

**A** 3/3 MAIN ASSY  
(VSX-915 : XWK3162)  
(VSX-815 : XWK3159)

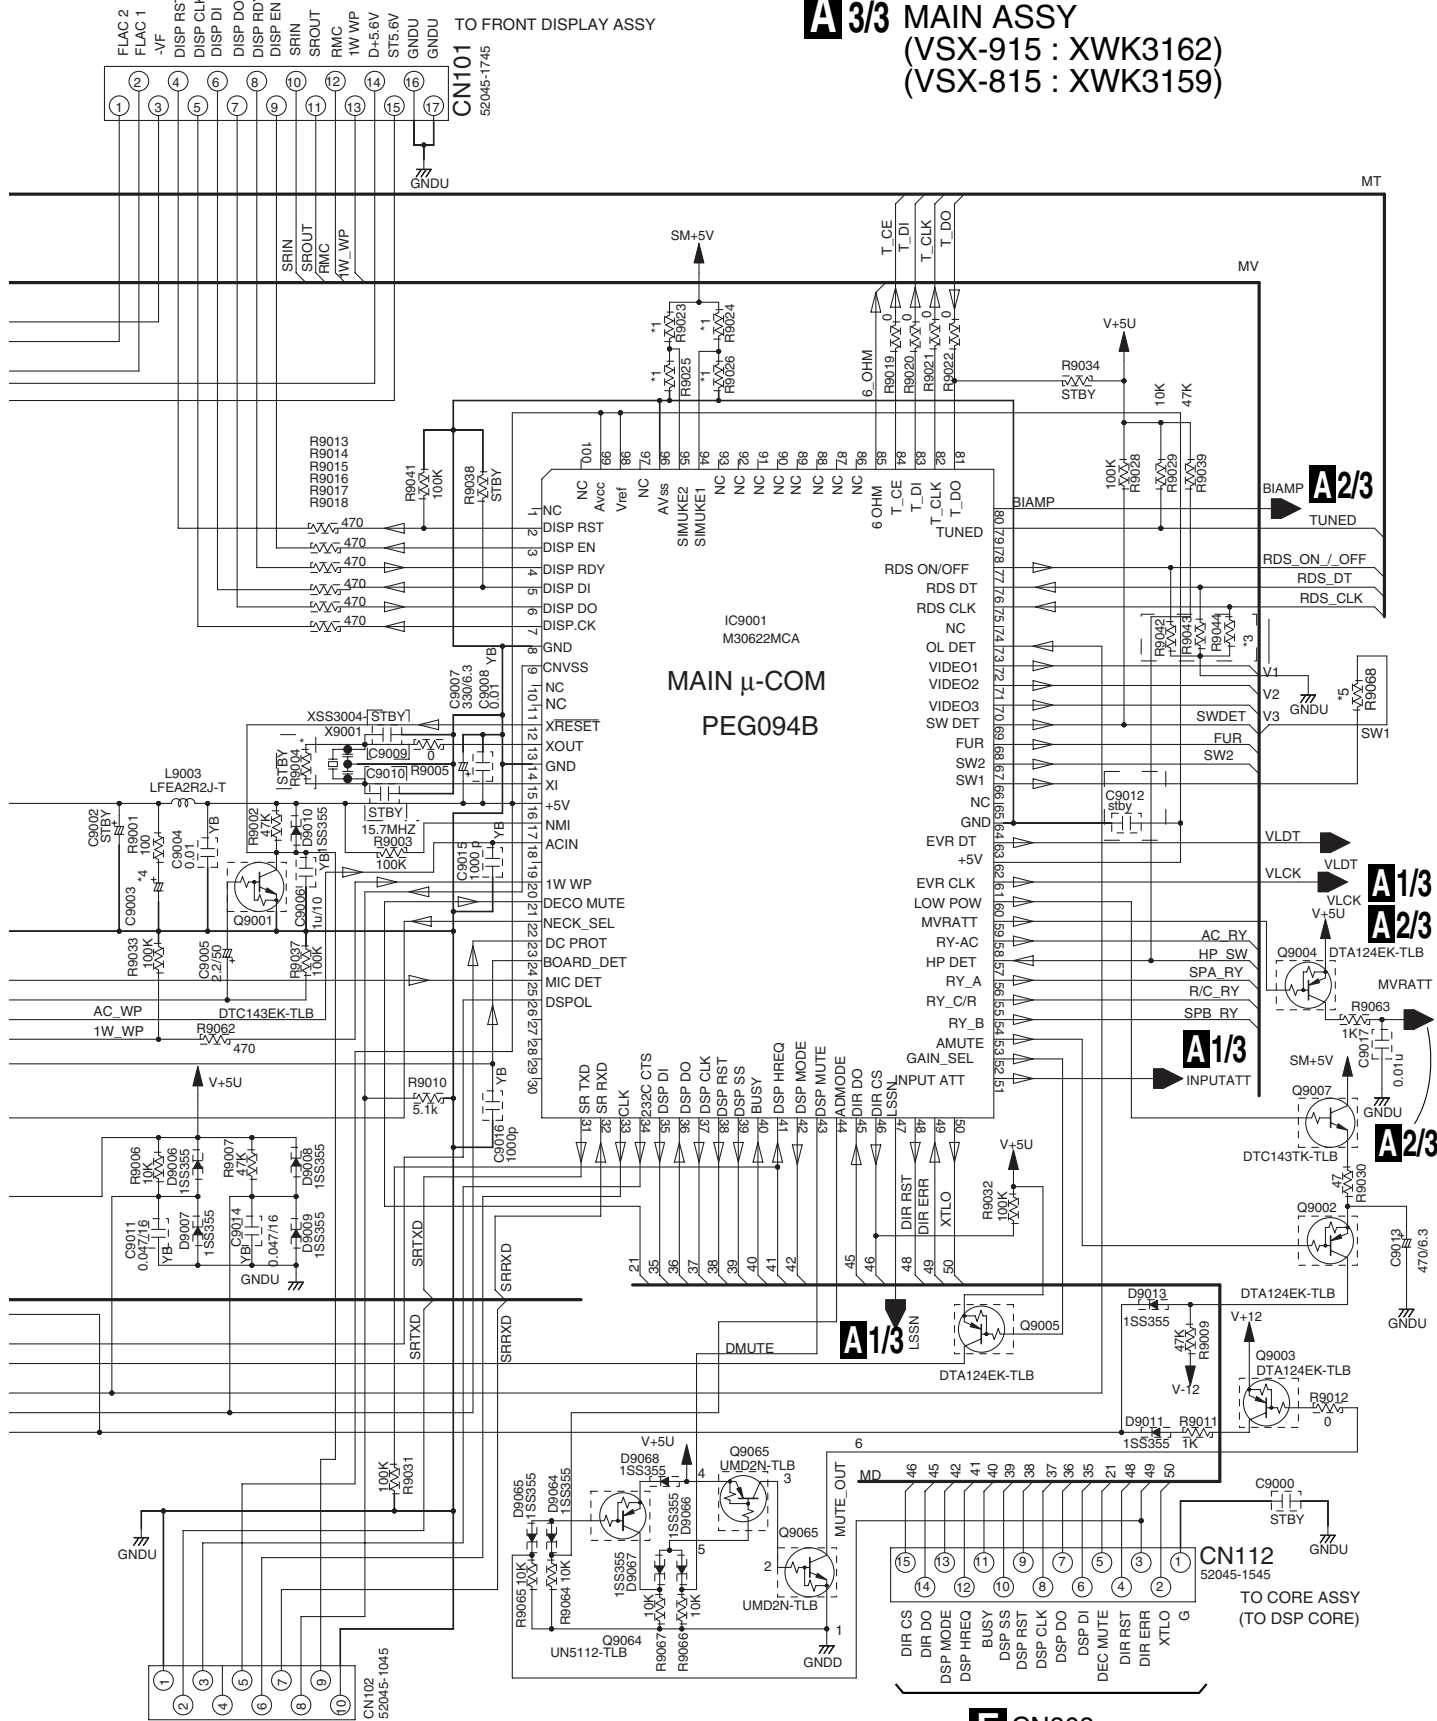

FOR FLASH U-COM  
(for Prototype & TP only)

V<sub>SS</sub> SR\_TXD 2  
T\_BUSY 3  
T\_VDD 4  
T\_SCLK 5  
T\_FOM 6  
SR\_FXD 7  
OE/MD 8  
T\_RST 9  
V<sub>SS</sub> 10

CN102  
52045-1045

**F** CN808

TO CORE ASSY  
(TO DSP CORE)

DIR CS 15  
DIR DO 14  
DSP MODE 13  
DSP HREQ 12  
BUSY 11  
DSP SS 10  
DSP RST 9  
DSP CLK 8  
DSP DO 7  
DSP DI 6  
DEC MUTE 5  
DIR RST 4  
DIR ERR 3  
XTLO 2  
G 1

CN112  
52045-1545

# 3.6 DSP ASSY (1/2)

1

2

3

4

A


B

C

D

E

F

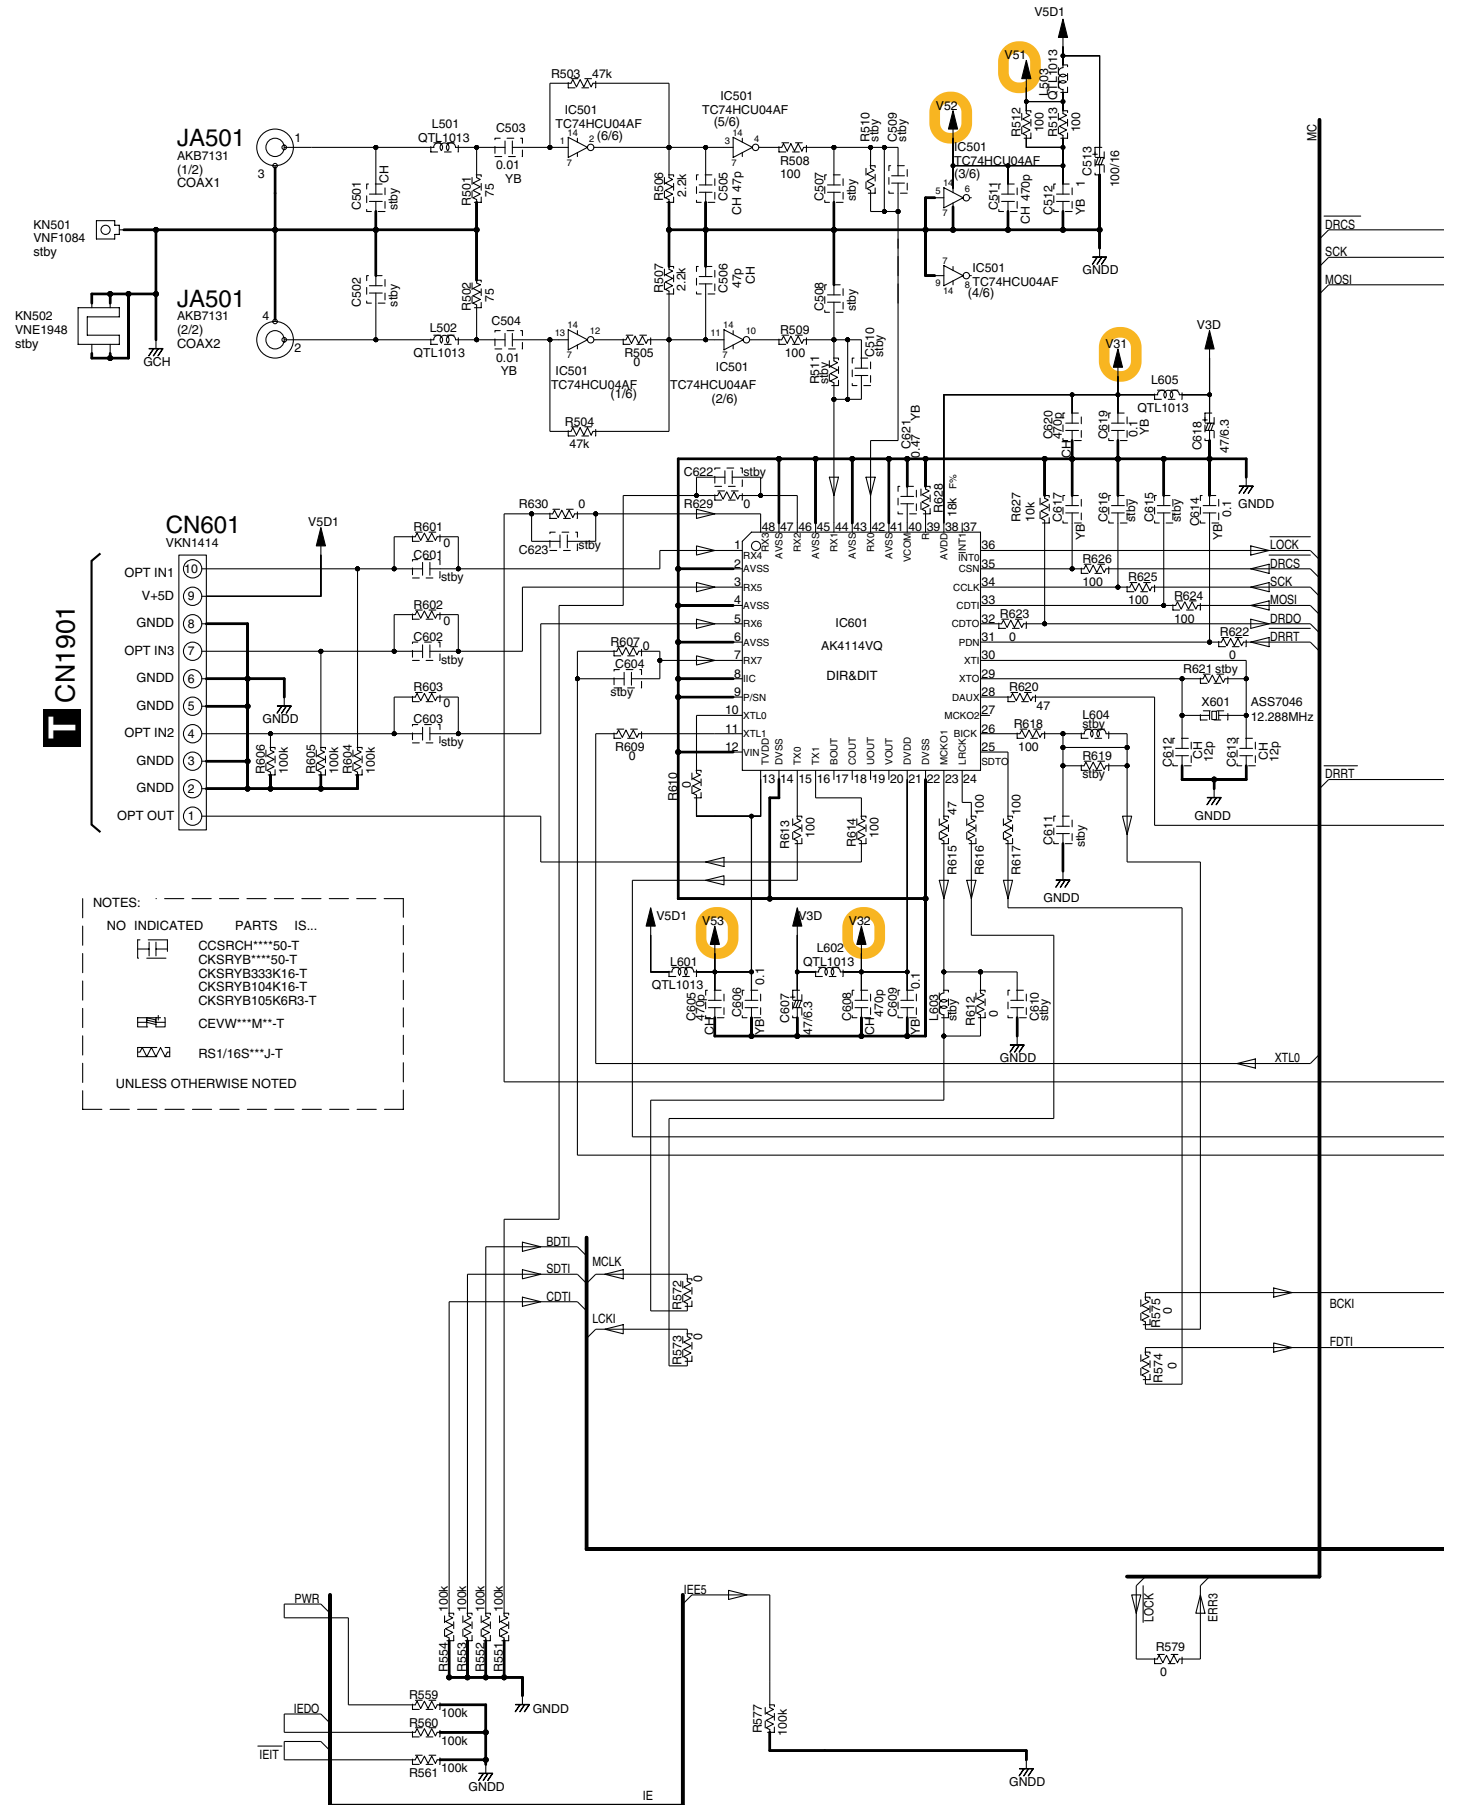

NOTES:  
 NO INDICATED PARTS IS...  
 CCSRCH\*\*\*\*50-T  
 CKSRFB\*\*\*\*50-T  
 CKSRFB333K16-T  
 CKSRFB104K16-T  
 CKSRFB105K6R3-T  
 CEVW\*\*\*\*M\*\*-T  
 RS1/16S\*\*\*J-T  
 UNLESS OTHERWISE NOTED

**B** 1/2


1

2

3

4



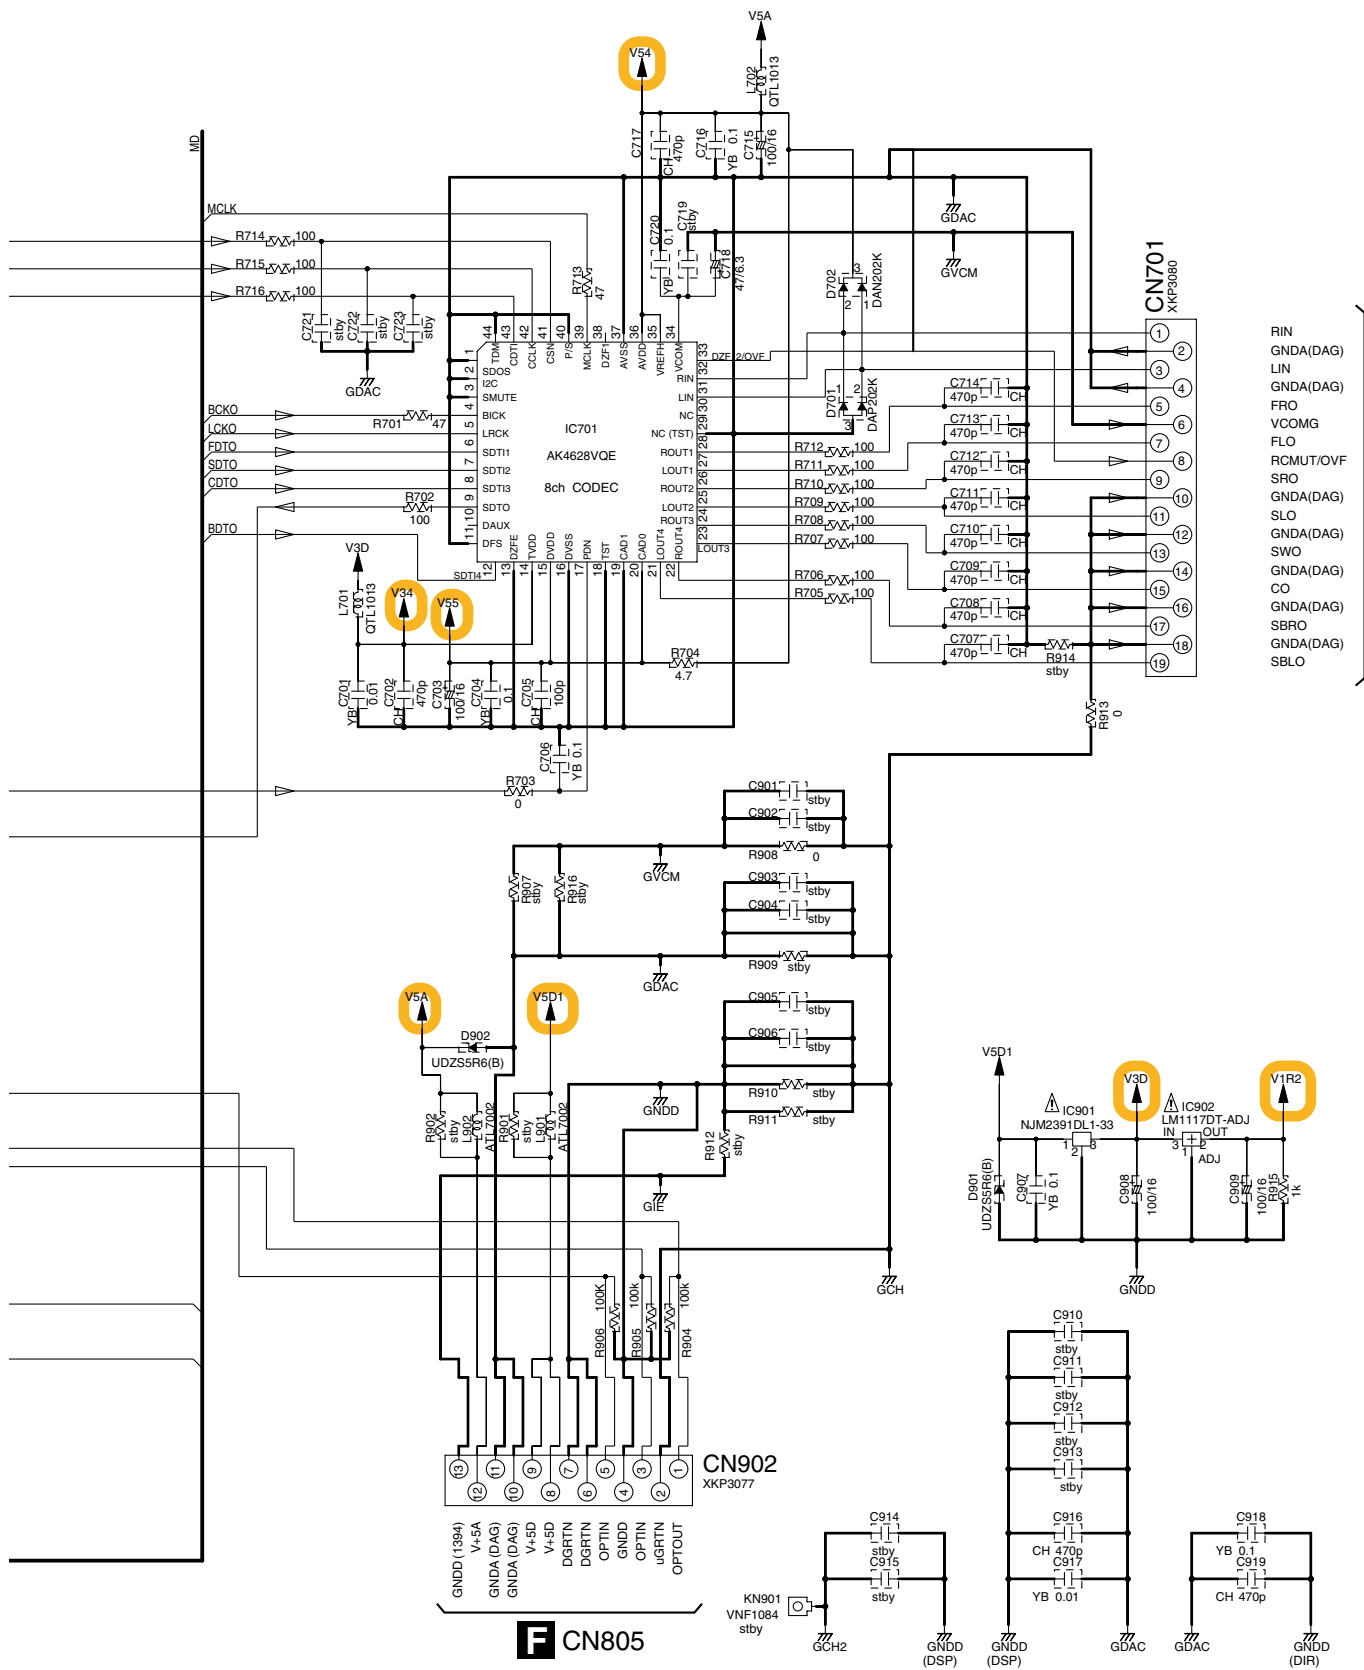

**F** CN806

- RIN
- GNDA(DAG)
- LIN
- GNDA(DAG)
- FRO
- VCOMG
- FLO
- RCGMUT/OVF
- SRO
- GNDA(DAG)
- SLO
- GNDA(DAG)
- CO
- GNDA(DAG)
- SBRO
- GNDA(DAG)
- SBLO

**B** 1/2 DSP ASSY (AWX8572)

**F** CN805

- GNDD(1394)
- V+5A
- GNDA(DAG)
- GNDA(DAG)
- V+5D
- DGRTN
- DGRTN
- OPTIN
- GNDD
- OPTIN
- uGRTN
- OPTOUT


**F** CN902

- C914
- stby
- C915
- stby
- C916
- CH 470p
- C917
- YB 0.01
- C918
- YB 0.1
- C919
- CH 470p

A  
B  
C  
D  
E  
F


### 3.7 DSP ASSY (2/2)

A  
B  
C  
D  
E  
F

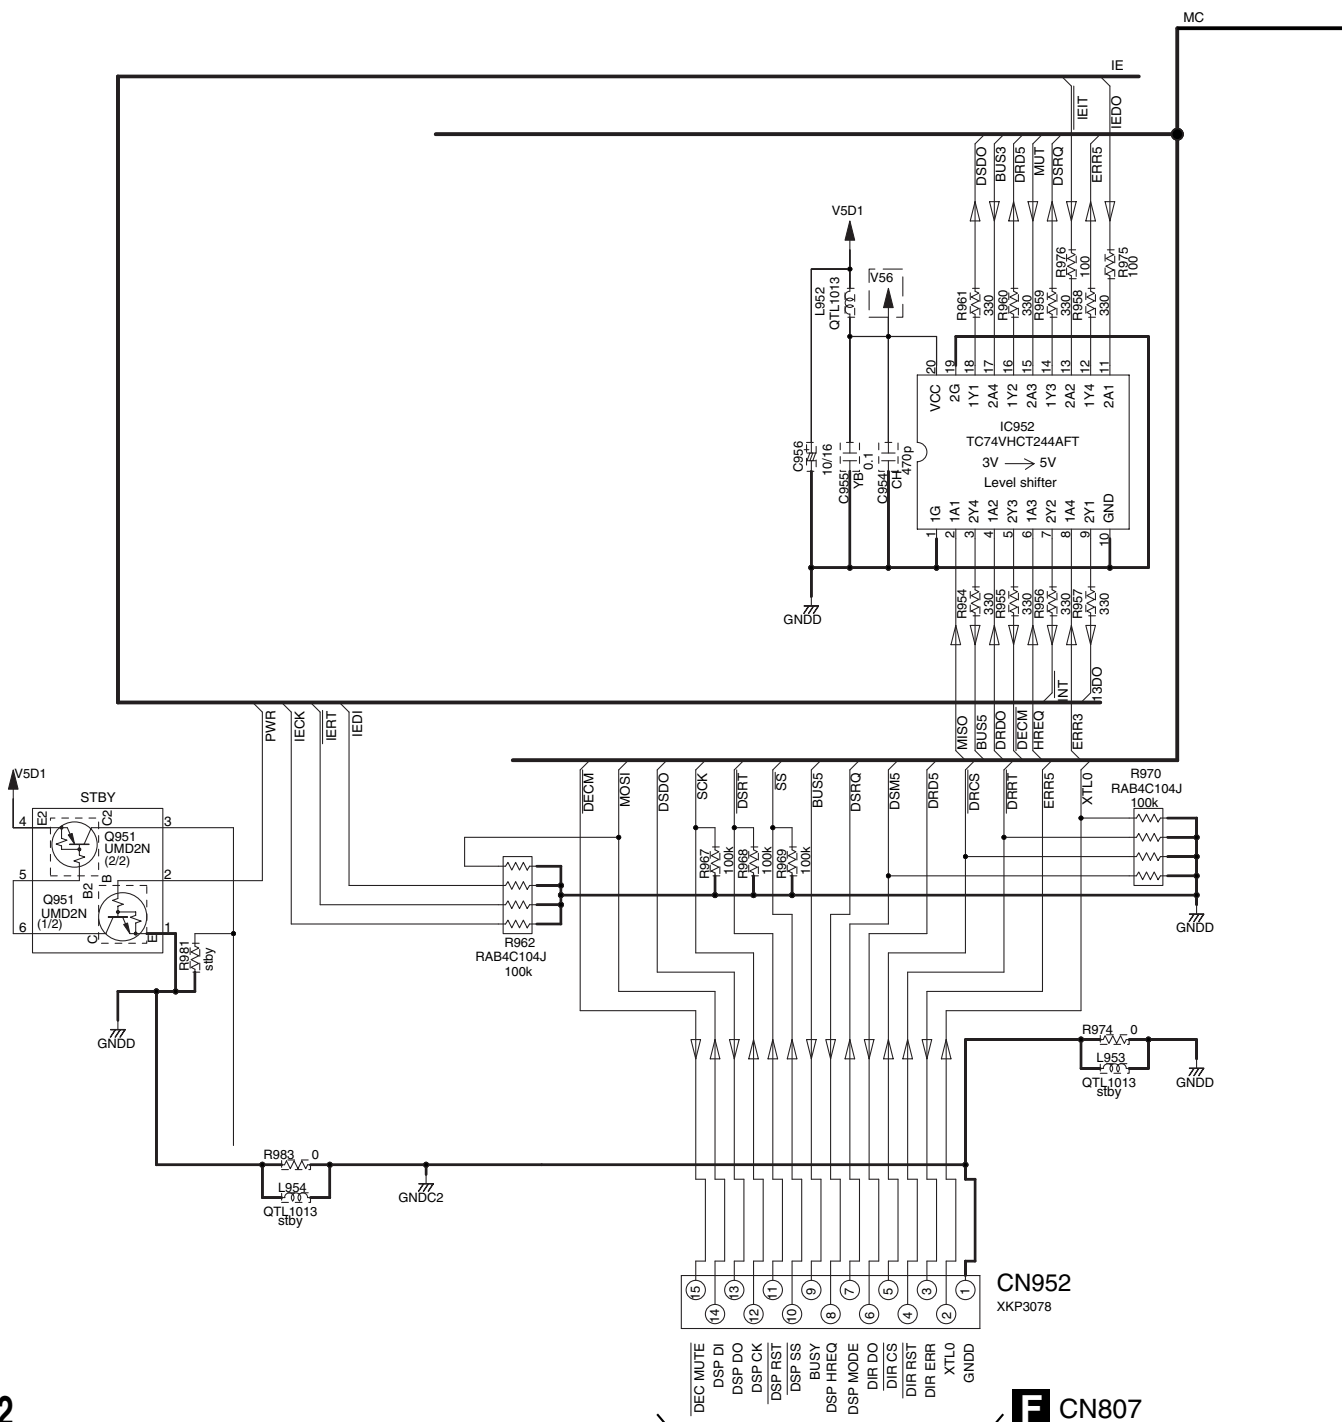

**B** 2/2

**F** CN807

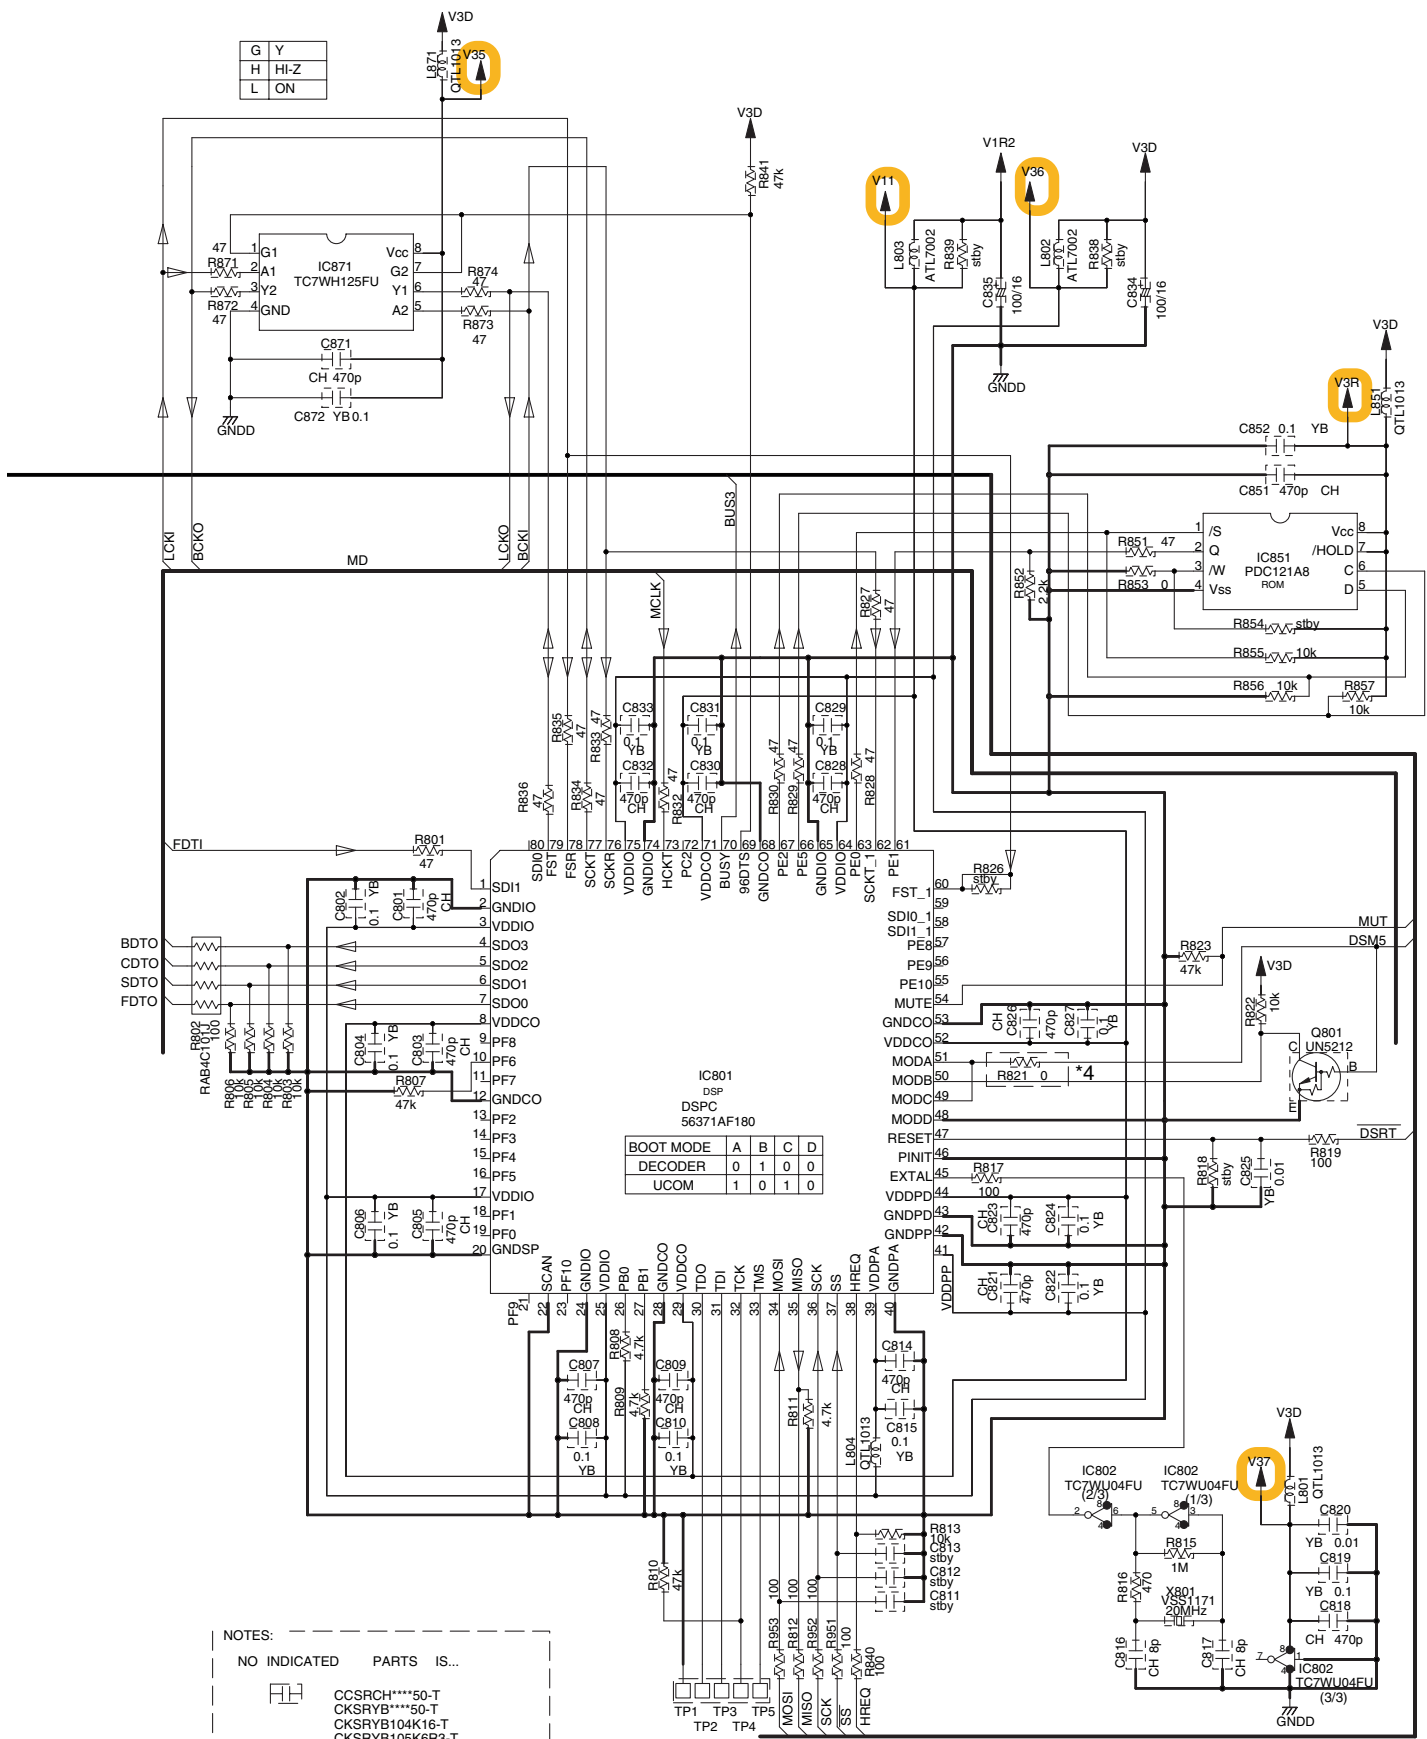

G	Y
H	HI-Z
L	ON

BOOT MODE	A	B	C	D
DECODER	0	1	0	0
UCOM	1	0	1	0

NOTES:  
 NO INDICATED PARTS IS...  
 CCSRCH\*\*\*50-T  
 CKSRYB\*\*\*50-T  
 CKSRYB104K16-T  
 CKSRYB105K6R3-T  
 CEVW\*\*\*M\*\*-T  
 RS1/16S\*\*\*J-T  
 UNLESS OTHERWISE NOTED


**B 2/2** DSP ASSY  
(AWX8572)


**B 2/2**

# 3.8 AMP & PRIMARY (1/2), TRANS2 and TRANS3 ASSYS

## 1/2 AMP&PRIMARY ASSY (VSX-915 : XWZ3948) (VSX-815 : XWZ3945)

- A
- B
- C
- D
- E
- F

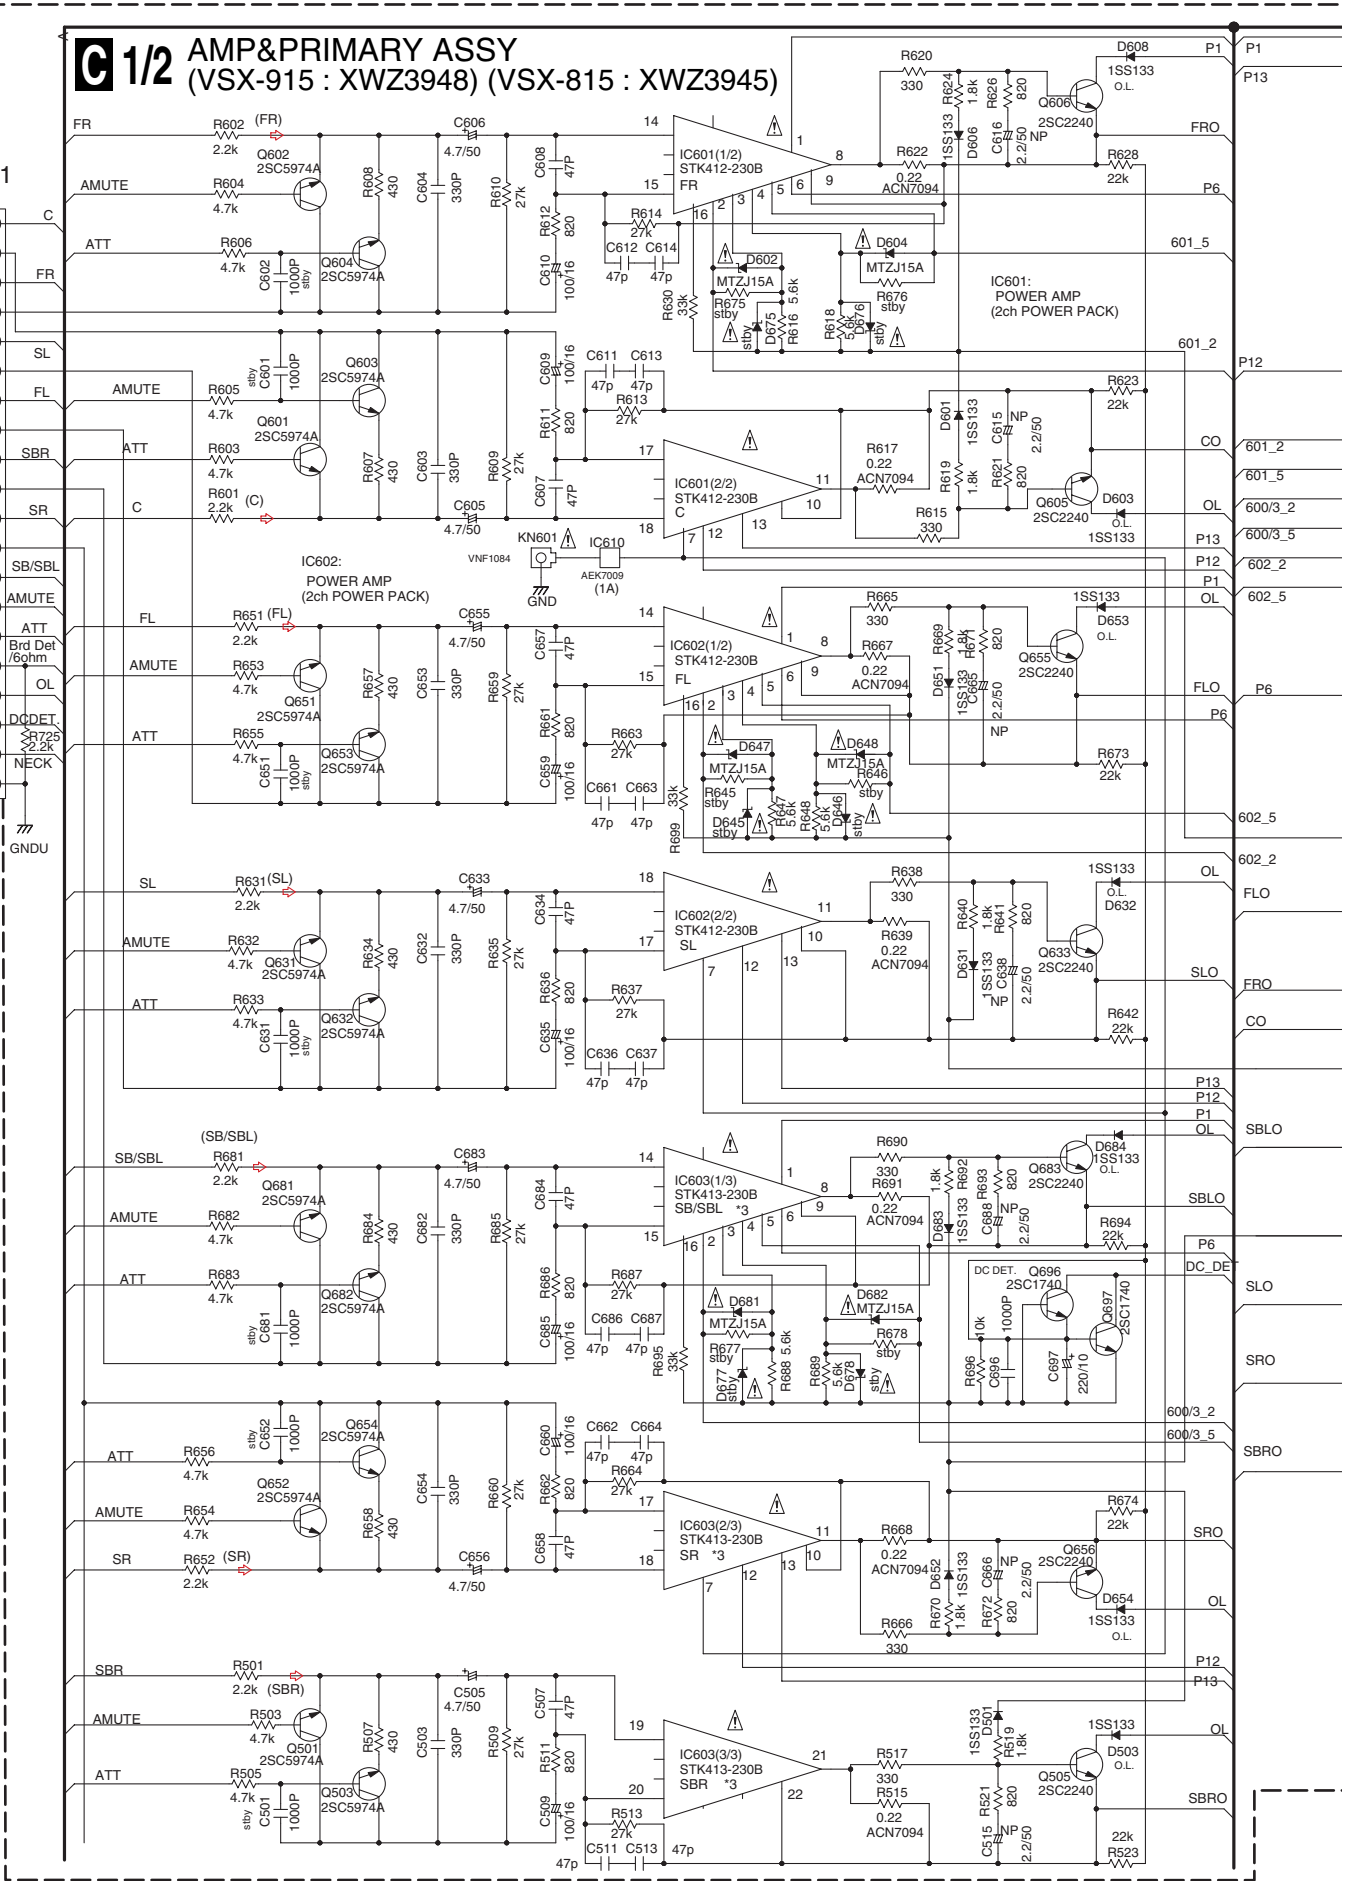

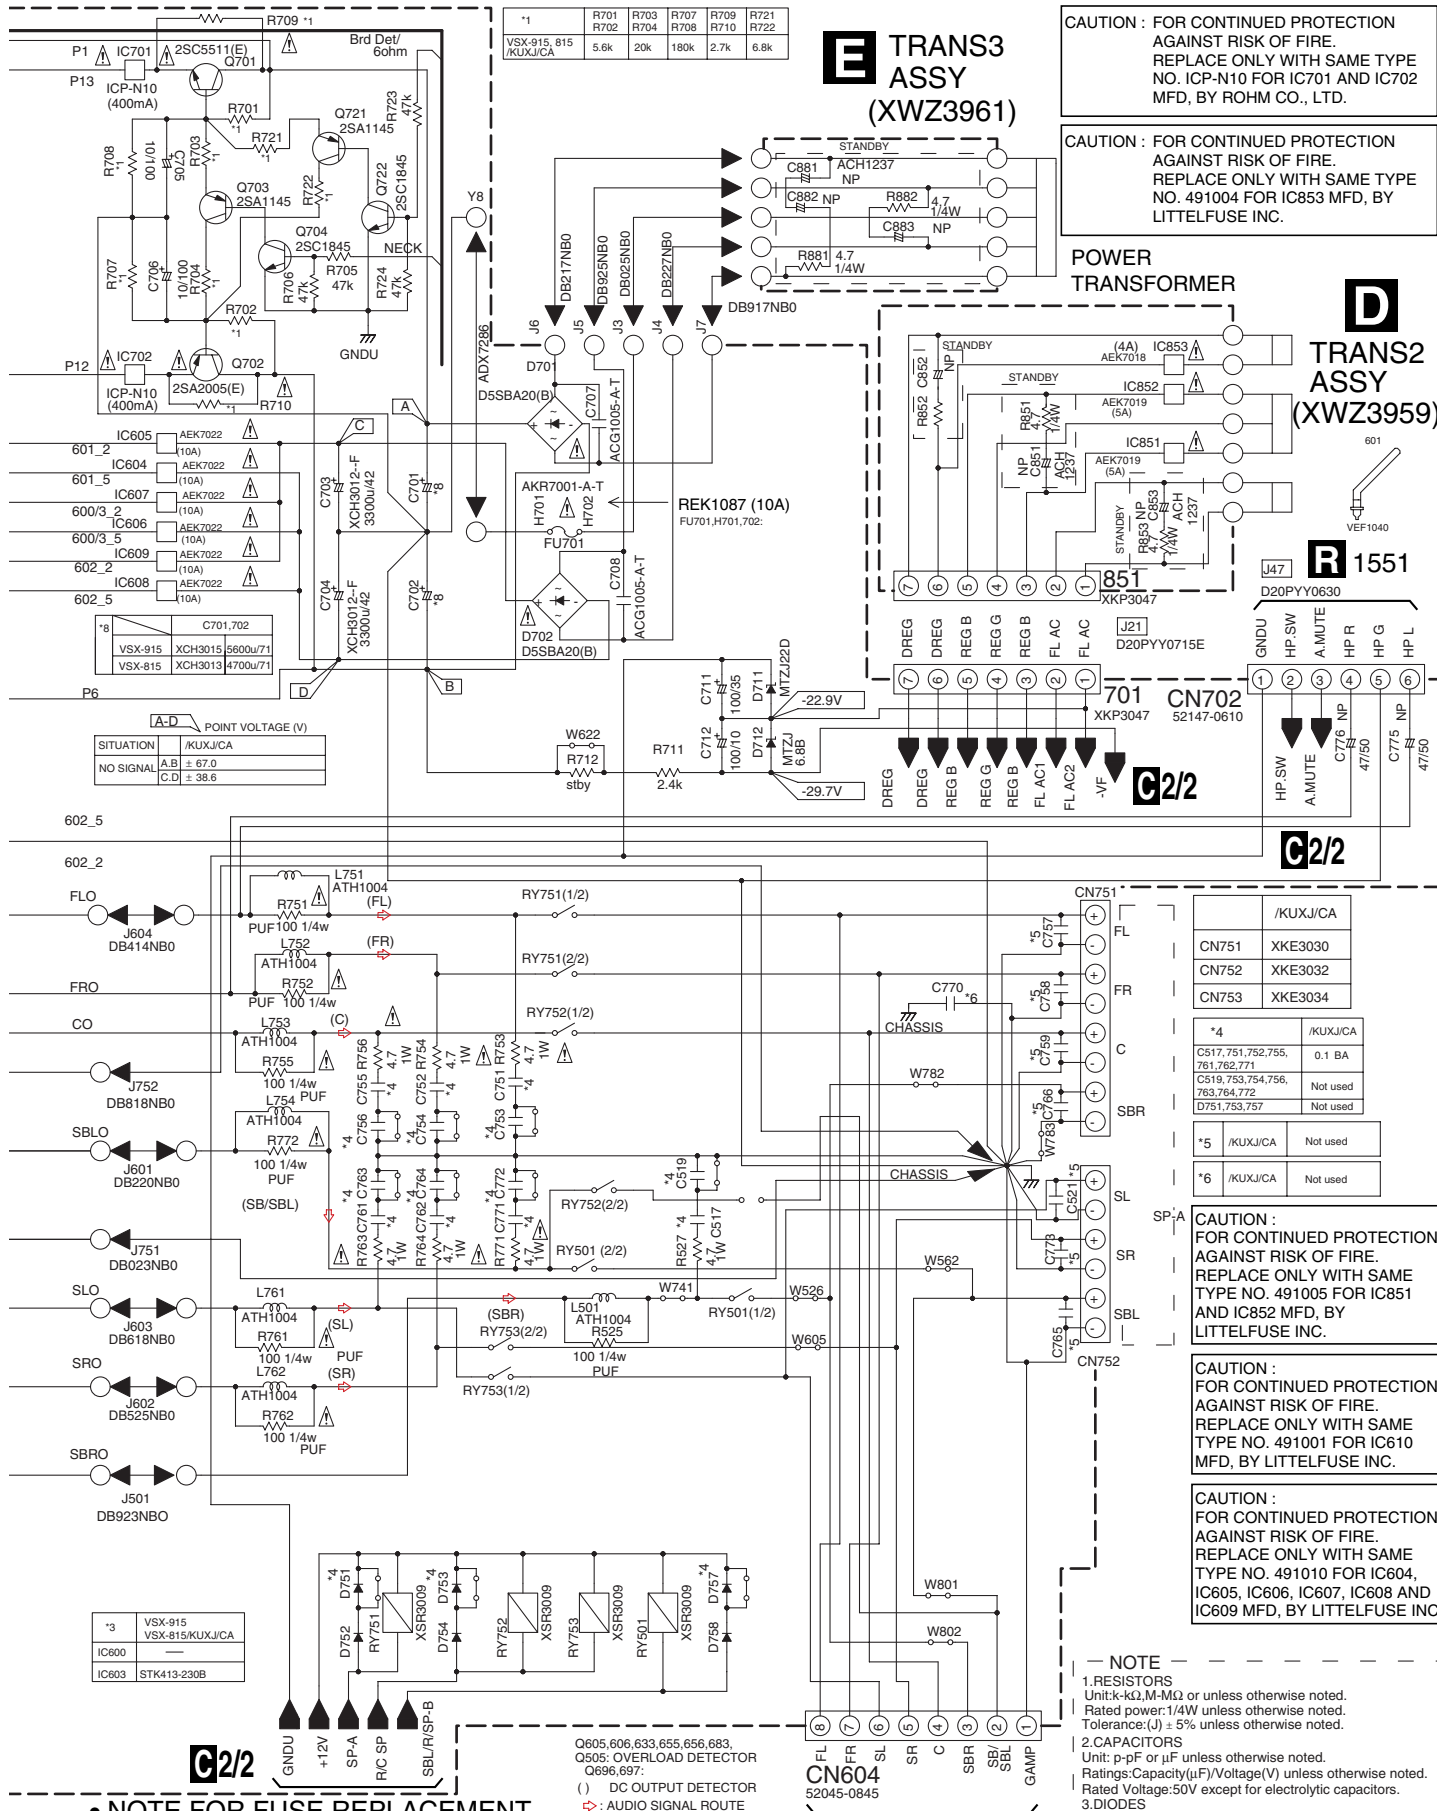

**A-D POINT VOLTAGE (V)**

SITUATION	/KUXJCA
NO SIGNAL	A.B $\pm$ 67.0
	C.D $\pm$ 38.6

*3	VSX-915	
	VSX-815	KUXJCA
IC600		
IC603	STK413-230B	

	/KUXJCA
CN751	XKE3030
CN752	XKE3032
CN753	XKE3034

*4	/KUXJCA
C517, 751, 752, 755, 761, 762, 771	0.1 BA
C519, 753, 754, 756, 763, 764, 772	Not used
D751, 753, 757	Not used

*5	/KUXJCA	Not used
----	---------	----------

*6	/KUXJCA	Not used
----	---------	----------

**CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491005 FOR IC851 AND IC852 MFD, BY LITTELFUSE INC.**

**CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491001 FOR IC610 MFD, BY LITTELFUSE INC.**

**CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491010 FOR IC604, IC605, IC606, IC607, IC608 AND IC609 MFD, BY LITTELFUSE INC.**

A

B

C

D

E

F


# 3.9 AMP&PRIMARY(2/2), REGULATOR, AMP INPUT and TRANS1 ASSYS

1

2

3

4

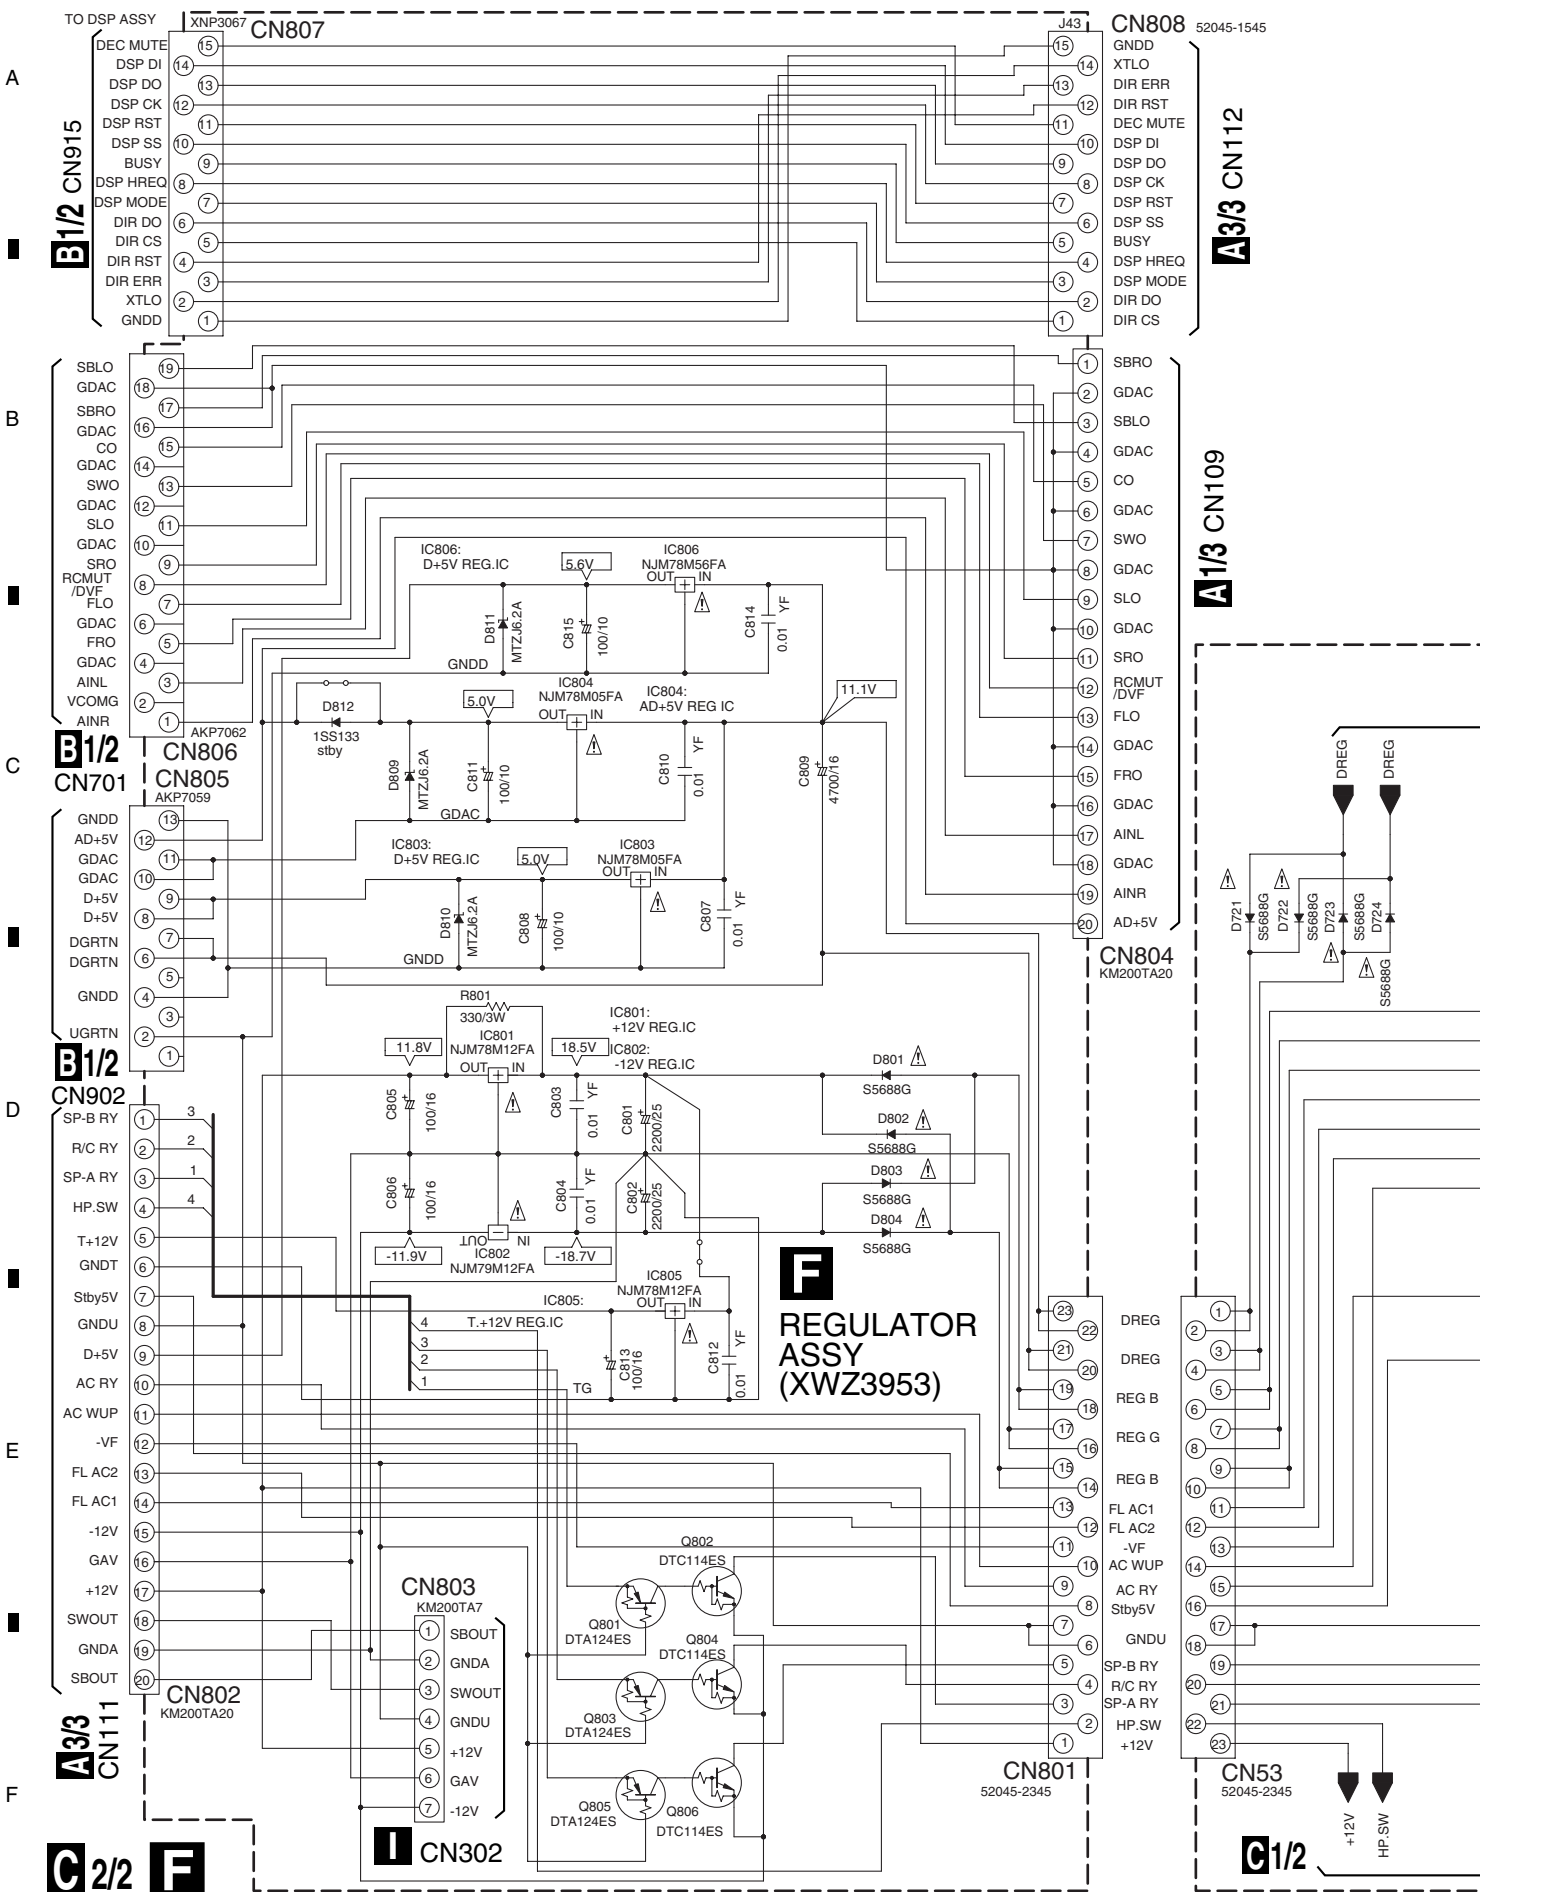

**F**  
REGULATOR  
ASSY  
(XWZ3953)

A

B

C

D

E

F

**B1/2**  
CN915

**B1/2**  
CN806  
CN701

**B1/2**  
CN902

**A3/3**  
CN111

**G2/2**

**I**  
CN302

J43  
CN808

**A3/3**  
CN112

**A1/3**  
CN109

CN804  
KM200TA20

CN801  
52045-2345

CN53  
52045-2345

**G1/2**

1

2

3

4

**NOTE**


1. RESISTORS  
 Unit:k- $\Omega$ ,M-M $\Omega$  or unless otherwise noted.  
 Rated power:1/4W unless otherwise noted.  
 Tolerance:(J) $\pm$ 5% unless otherwise noted.

2. CAPACITORS  
 Unit: p-pF or  $\mu$ F unless otherwise noted.  
 Ratings:Capacity( $\mu$ F)/Voltage(V) unless otherwise noted.  
 Rated Voltage:50V except for electrolytic capacitors.

### FAN MOTOR


### AMP INPUT ASSY (XWZ3956)

### A 2/3 CN106

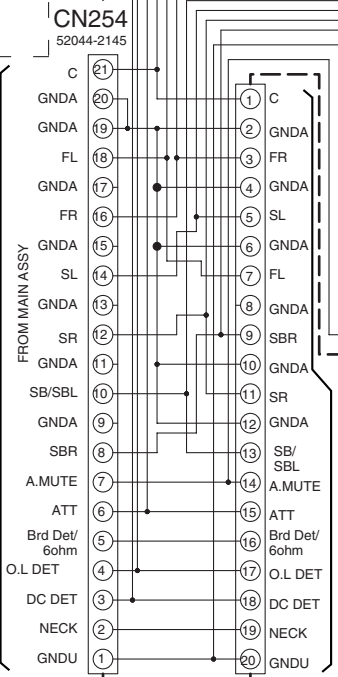

### G 1/2 CN601


### CN253 KP200TA20L

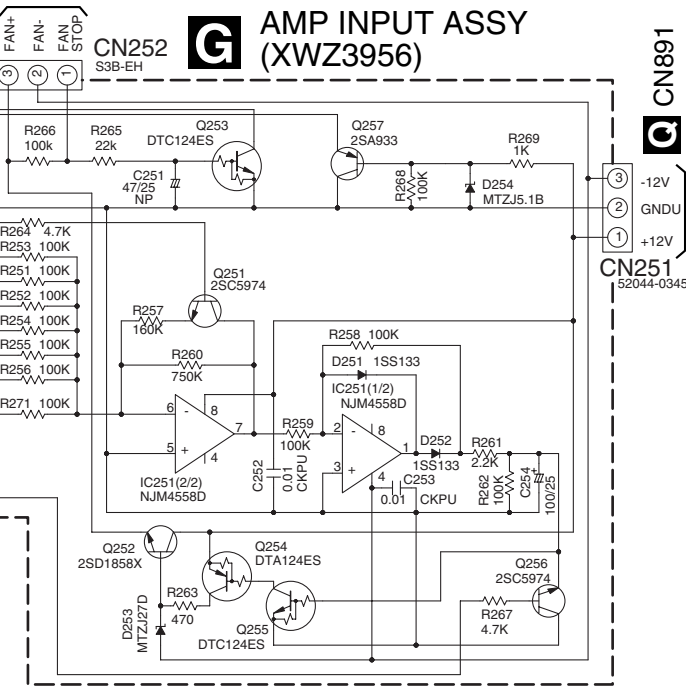

### C CN891

### CN251


### G 1/2



### H

### TRANS1 ASSY (XWZ3958)

### POWER TRANSFORMER

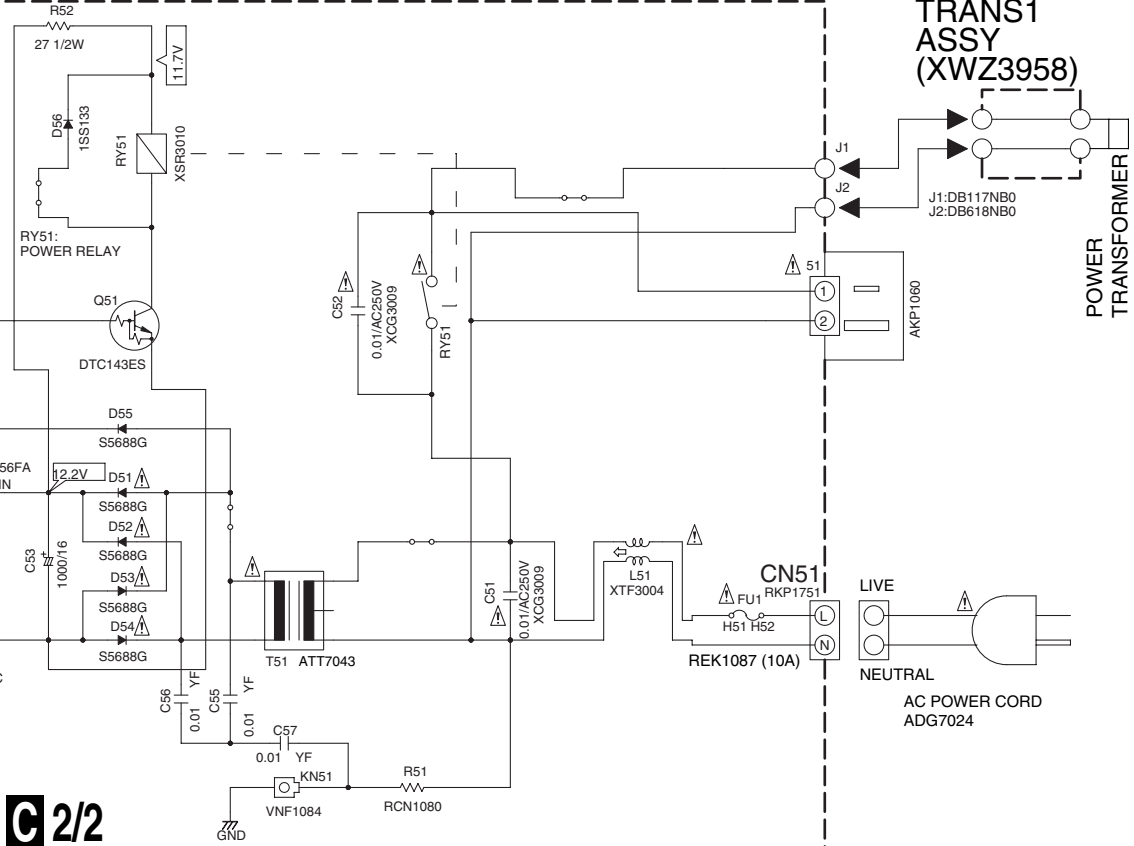

### G 2/2

### AMP & PRIMARY ASSY (VSX-915 : XWZ3948) (VSX-815 : XWZ3945)



• NOTE FOR FUSE REPLACEMENT

**CAUTION** -FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE WITH SAME TYPE AND RATINGS ONLY.

### G 2/2 G H



# 3.10 VIDEO, 5.1CH, B TO B and S. VIDEO ASSYS

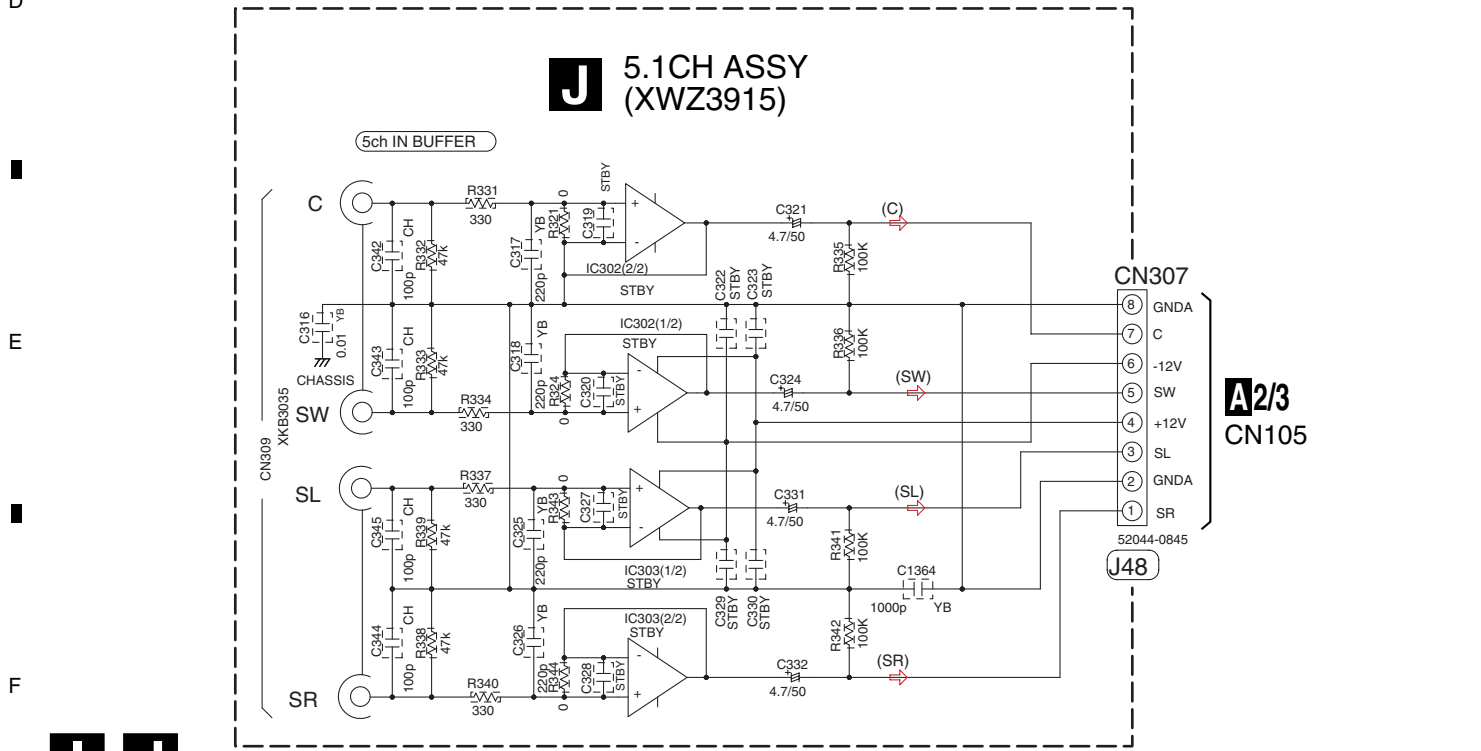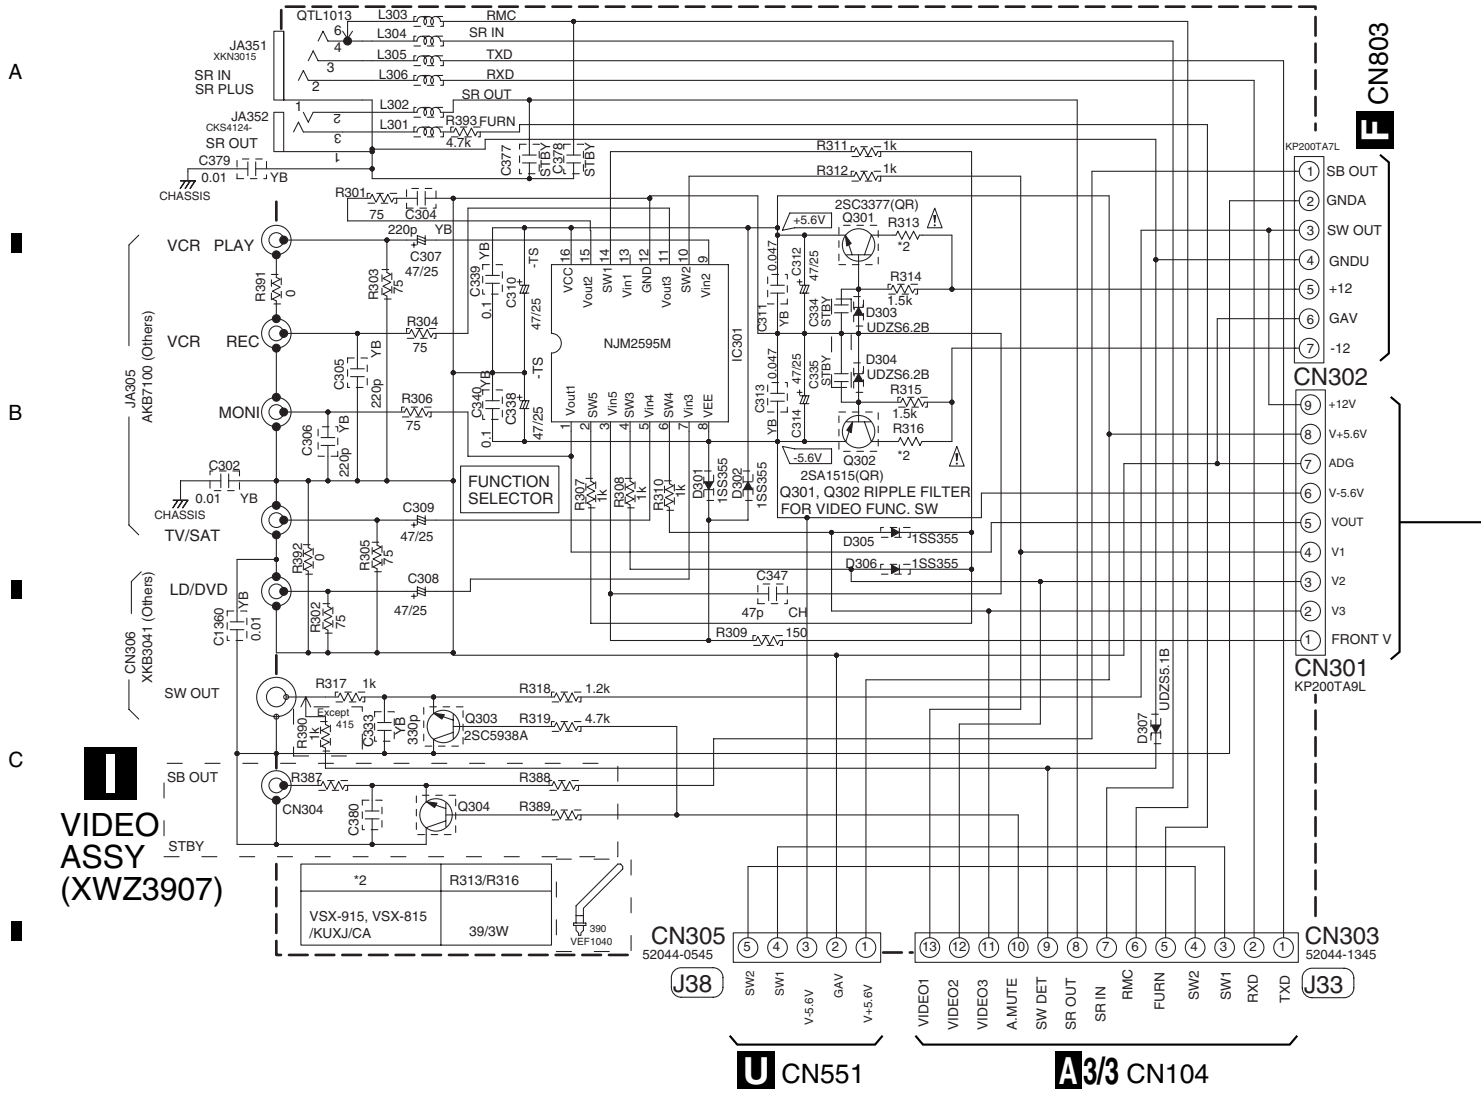


NOTE

1.RESISTORS  
Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.  
Rated power: 1/16W unless otherwise noted.  
Tolerance: (J) ±5% unless otherwise noted.

2.CAPACITORS  
Unit: p-pF or μF unless otherwise noted.  
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.  
Rated Voltage: 50V expect for electrolytic capacitors.

**K**

**B TO B ASSY**  
(VSX-915 : XWZ3996)  
(VSX-815 : XWZ3940)

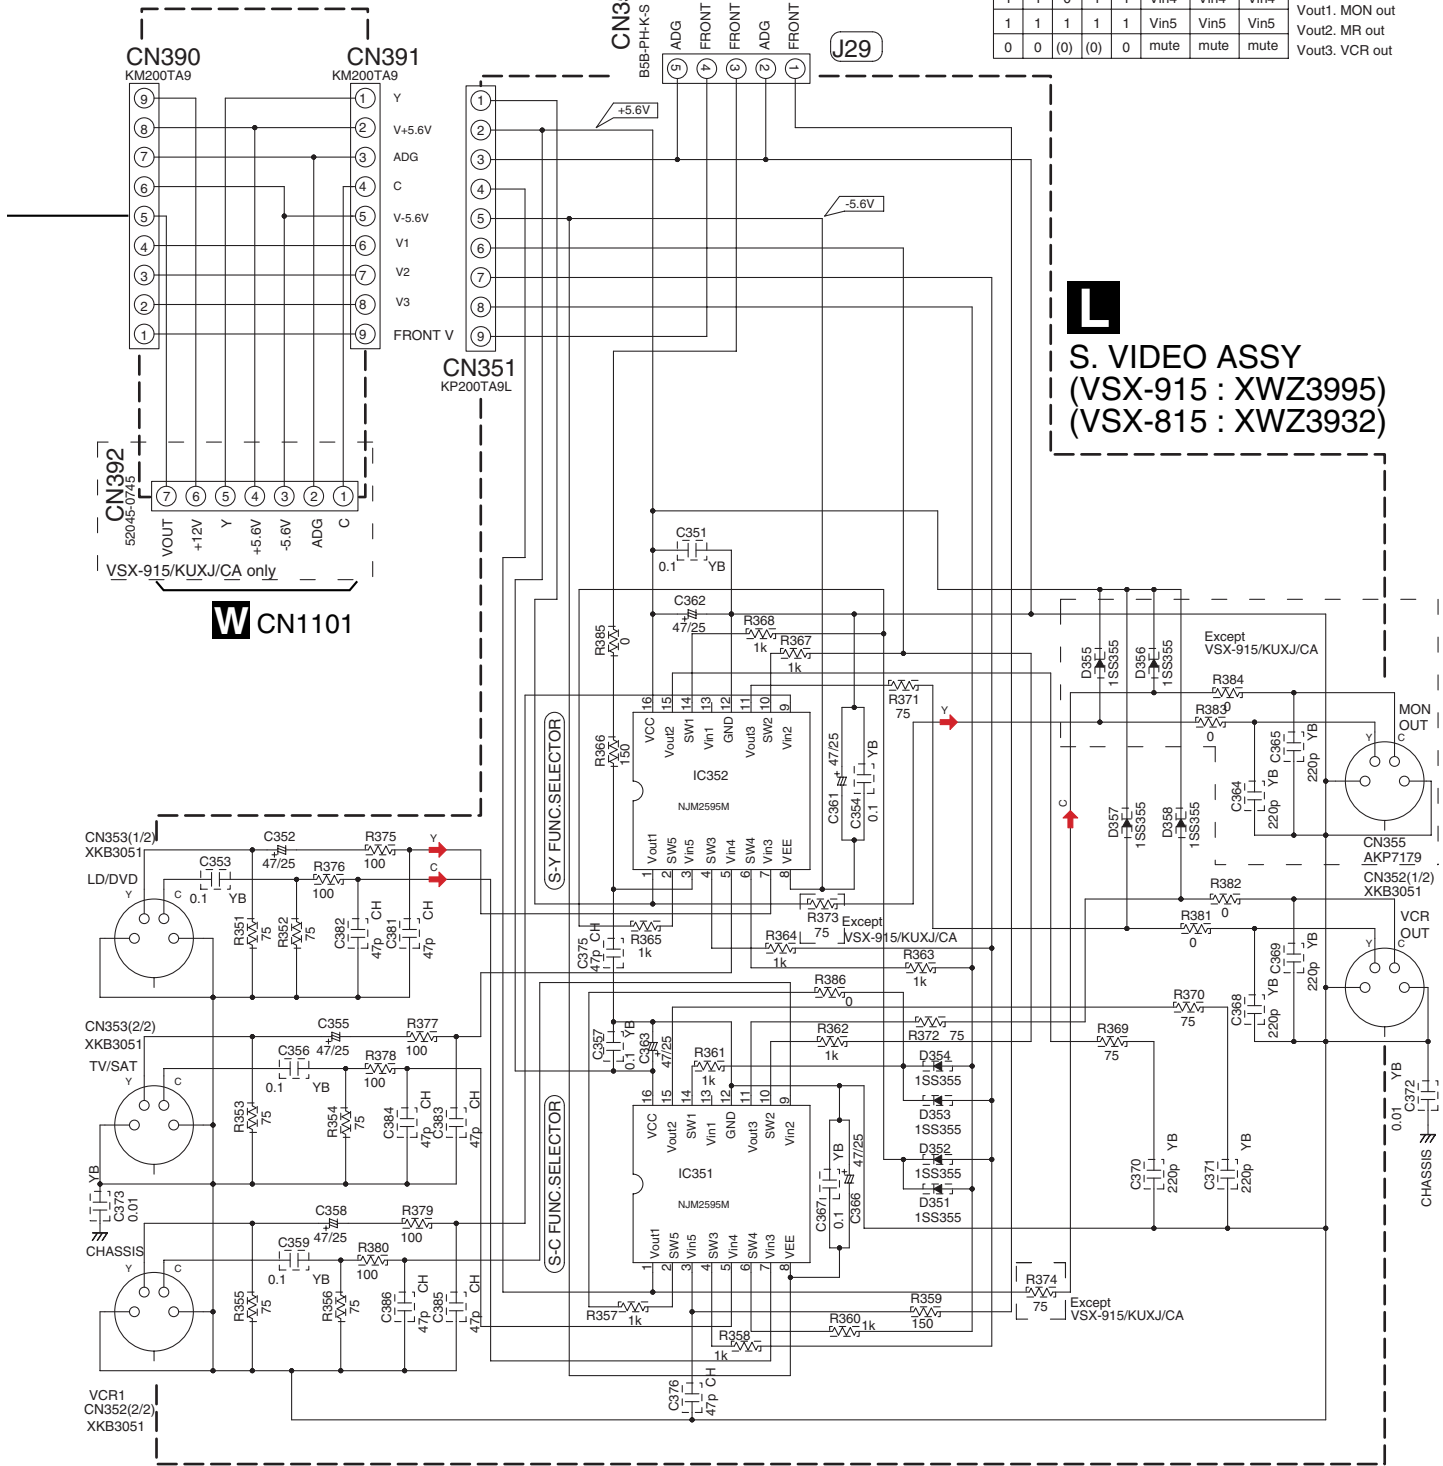

NJM2959M control port status

SW1	SW2	SW3	SW4	SW5	Vout1	Vout2	Vout3	VIN 2.VCR
1	0	(1)	0	1	Vin2	Vin2	mute	VIN 3.DVD/LD
1	1	(1)	0	1	Vin3	Vin3	Vin3	VIN 4.TV/SAT
1	1	0	1	1	Vin4	Vin4	Vin4	VIN 5.FRONT
1	1	1	1	1	Vin5	Vin5	Vin5	Vout1. MON out
0	0	(0)	(0)	0	mute	mute	mute	Vout2. MR out
								Vout3. VCR out


**L**

**S. VIDEO ASSY**  
(VSX-915 : XWZ3995)  
(VSX-815 : XWZ3932)

➔ VIDEO SIGNAL FLOW  
➔ AUDIO SIGNAL FLOW

**K L**



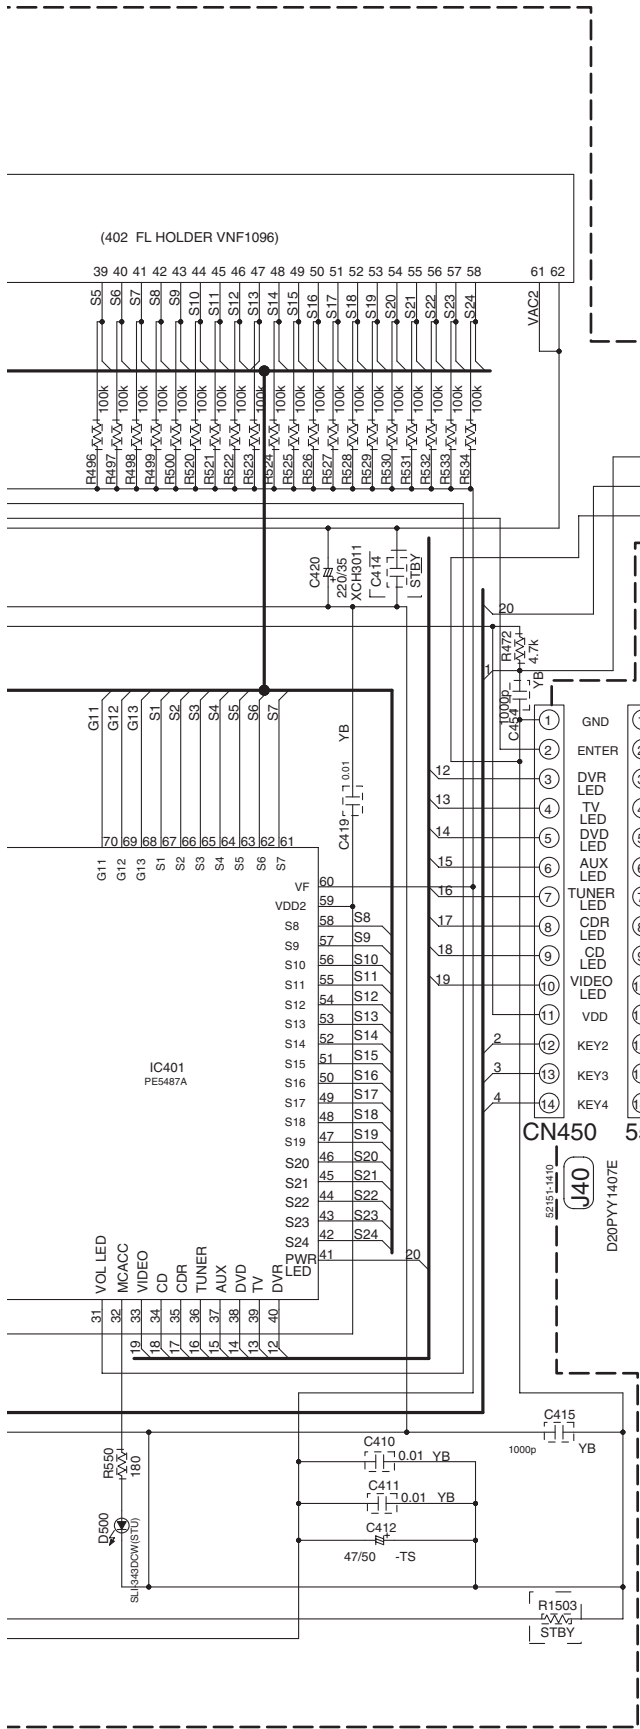

**NOTE**


1. RESISTORS  
Unit: k-Ω, M-Ω or Ω unless otherwise noted.  
Rated power: 1/16W unless otherwise noted.  
Tolerance: (J) ±5% unless otherwise noted.

2. CAPACITORS  
Unit: p-pF or μF unless otherwise noted.  
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.  
Rated Voltage: 50V expect for electrolytic capacitors.


3. TACT SWITCHES  
Indicated in VSG1024

**POWER SW ASSY**  
S501 : POWER STANDBY/ON  
S502 : STANDARD  
S503 : ADVANCED SURROUND  
S504 : STEREO/DIRECT  
S505 : SIGNAL SELECT

**P. SW & FUNC. KEY ASSY (XWZ3919)**

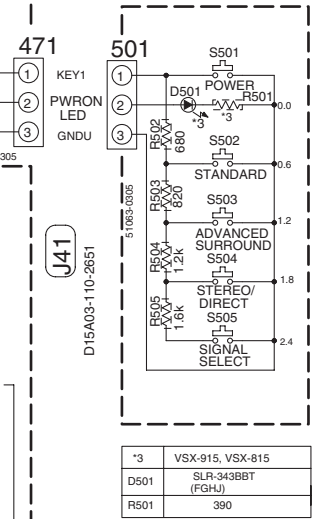

*3	VSX-915, VSX-815
D501	SLR-343BBT (FGHJ)
R501	390

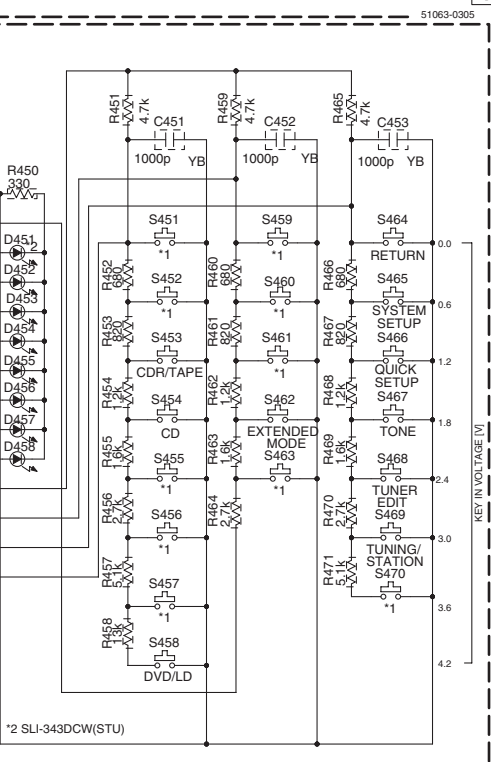

**P FRONT KEY ASSY (XWZ3965)**

*1	VSX-915, 815 /KUXJ/CA
S451	AUX
S452	TUNER
S453	VIDEO
S454	DVR/VCR
S455	TV/SAT
S456	FL DIMMER
S457	INPUT ATT
S458	SPEAKER
S459	ACOUSTIC EQ
S460	BAND


**FRONT KEY ASSY**

- S451 : AUX
- S452 : TUNER
- S453 : CDR/TAPE
- S454 : CD
- S455 : VIDEO
- S456 : VCR/DVR
- S457 : TV/SAT
- S458 : DVD/LD
- S459 : FL DIMMER
- S460 : INPUT ATT
- S461 : SPEAKER
- S462 : EXTENDED MODE
- S463 : ACOUSTIC EQ
- S464 : RETURN
- S465 : SYSTEM SETUP
- S466 : QUICK SETUP
- S467 : TONE
- S468 : TUNER EDIT
- S469 : TUNER STATION
- S470 : BAND



# 3.12 TRANS4, H.P., PRE-OUT, D. IN, COMPONENT and F.OPT & MIC ASSYS

## V FRONT OPT & MIC ASSY (XWZ3926)


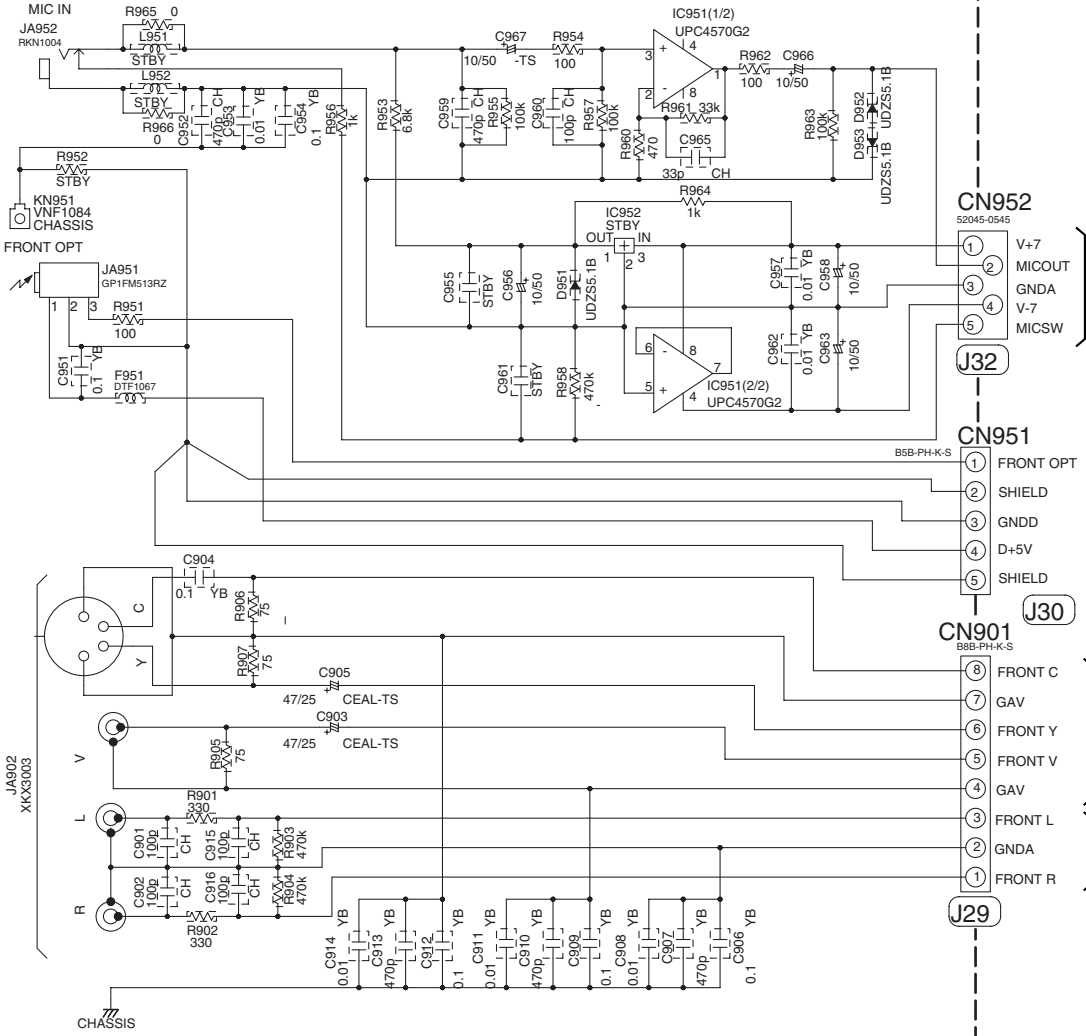


**A1/3** CN108

**T** CN1902

**L** CN354

**A1/3** CN107

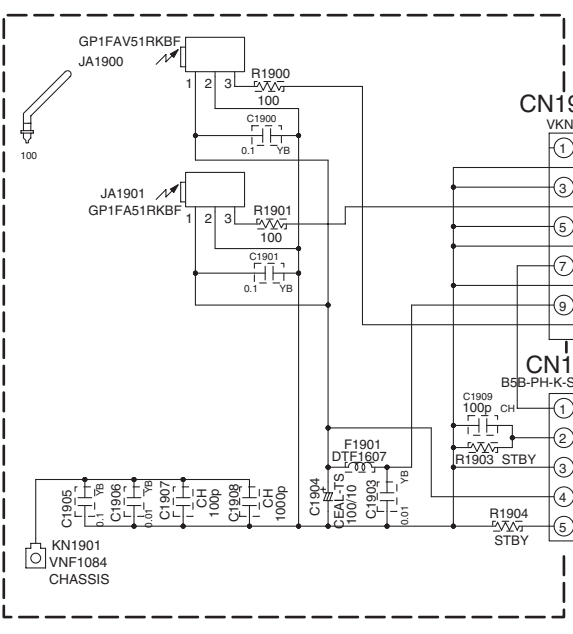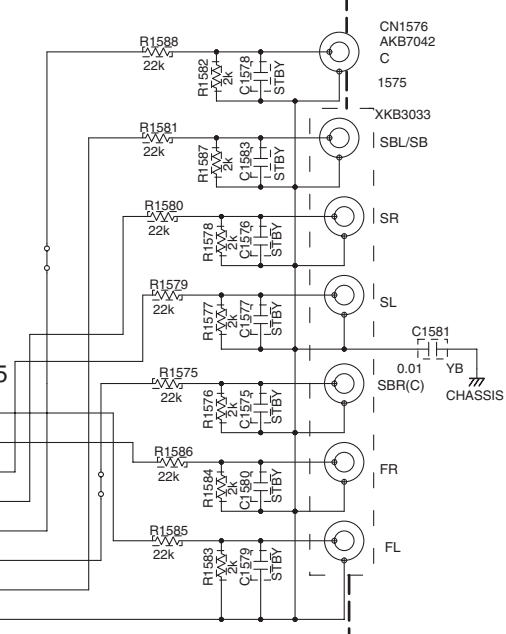

**B1/2** CN601

**J37**

**V** CN951

**C1/2** CN604

**J46**


## S T V S PRE-OUT ASSY (XWZ3938)

## T DIGITAL IN ASSY (XWZ3999)




### 3.13 VIDEO CONVERTER ASSY

#### VIDEO CONVERTER ASSY (XWK3185)

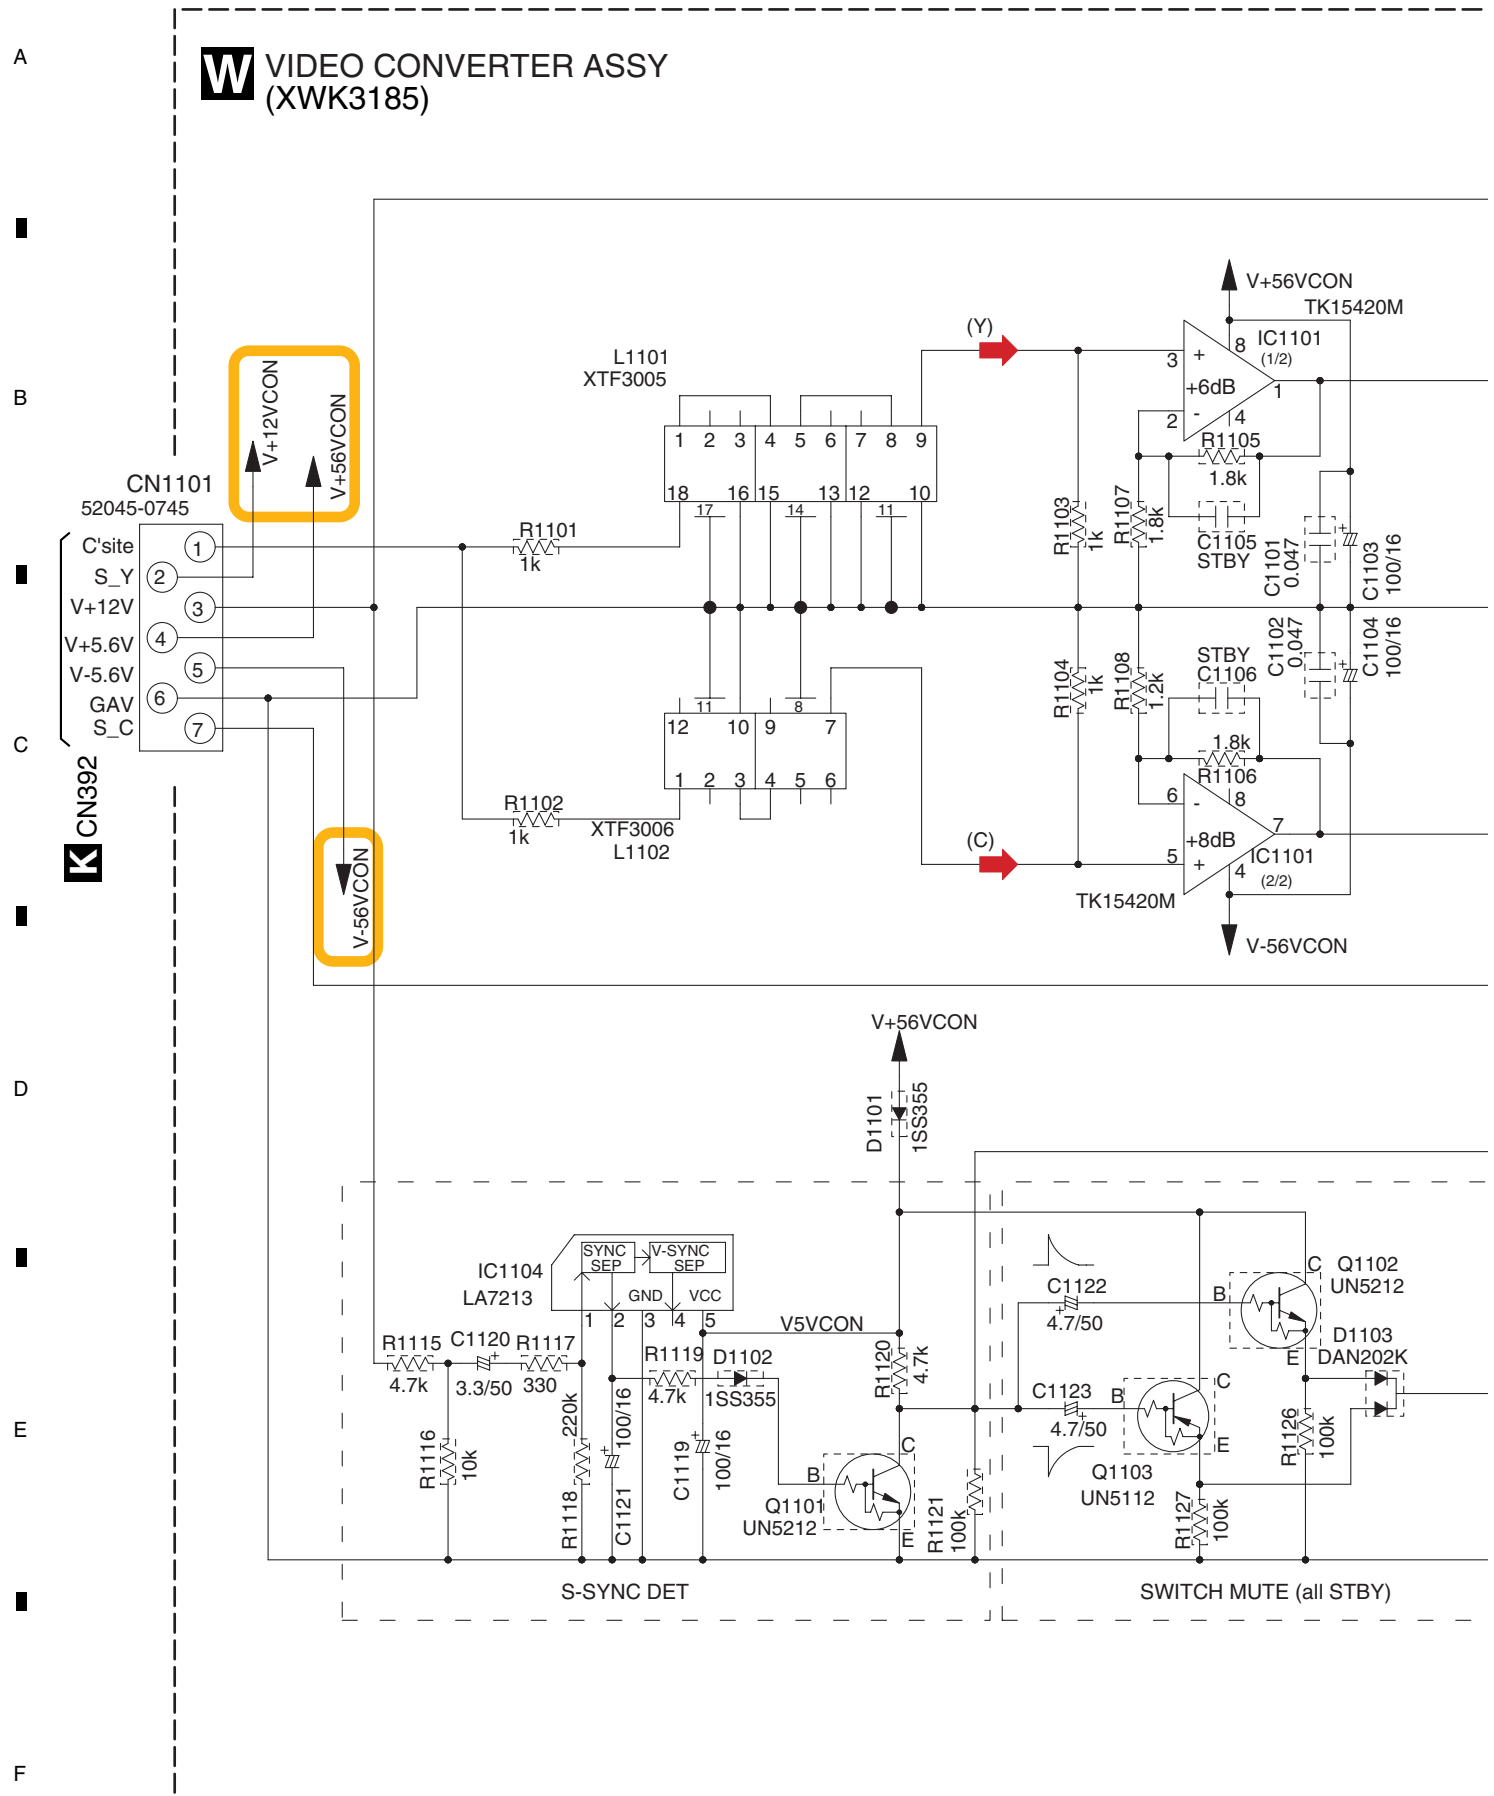



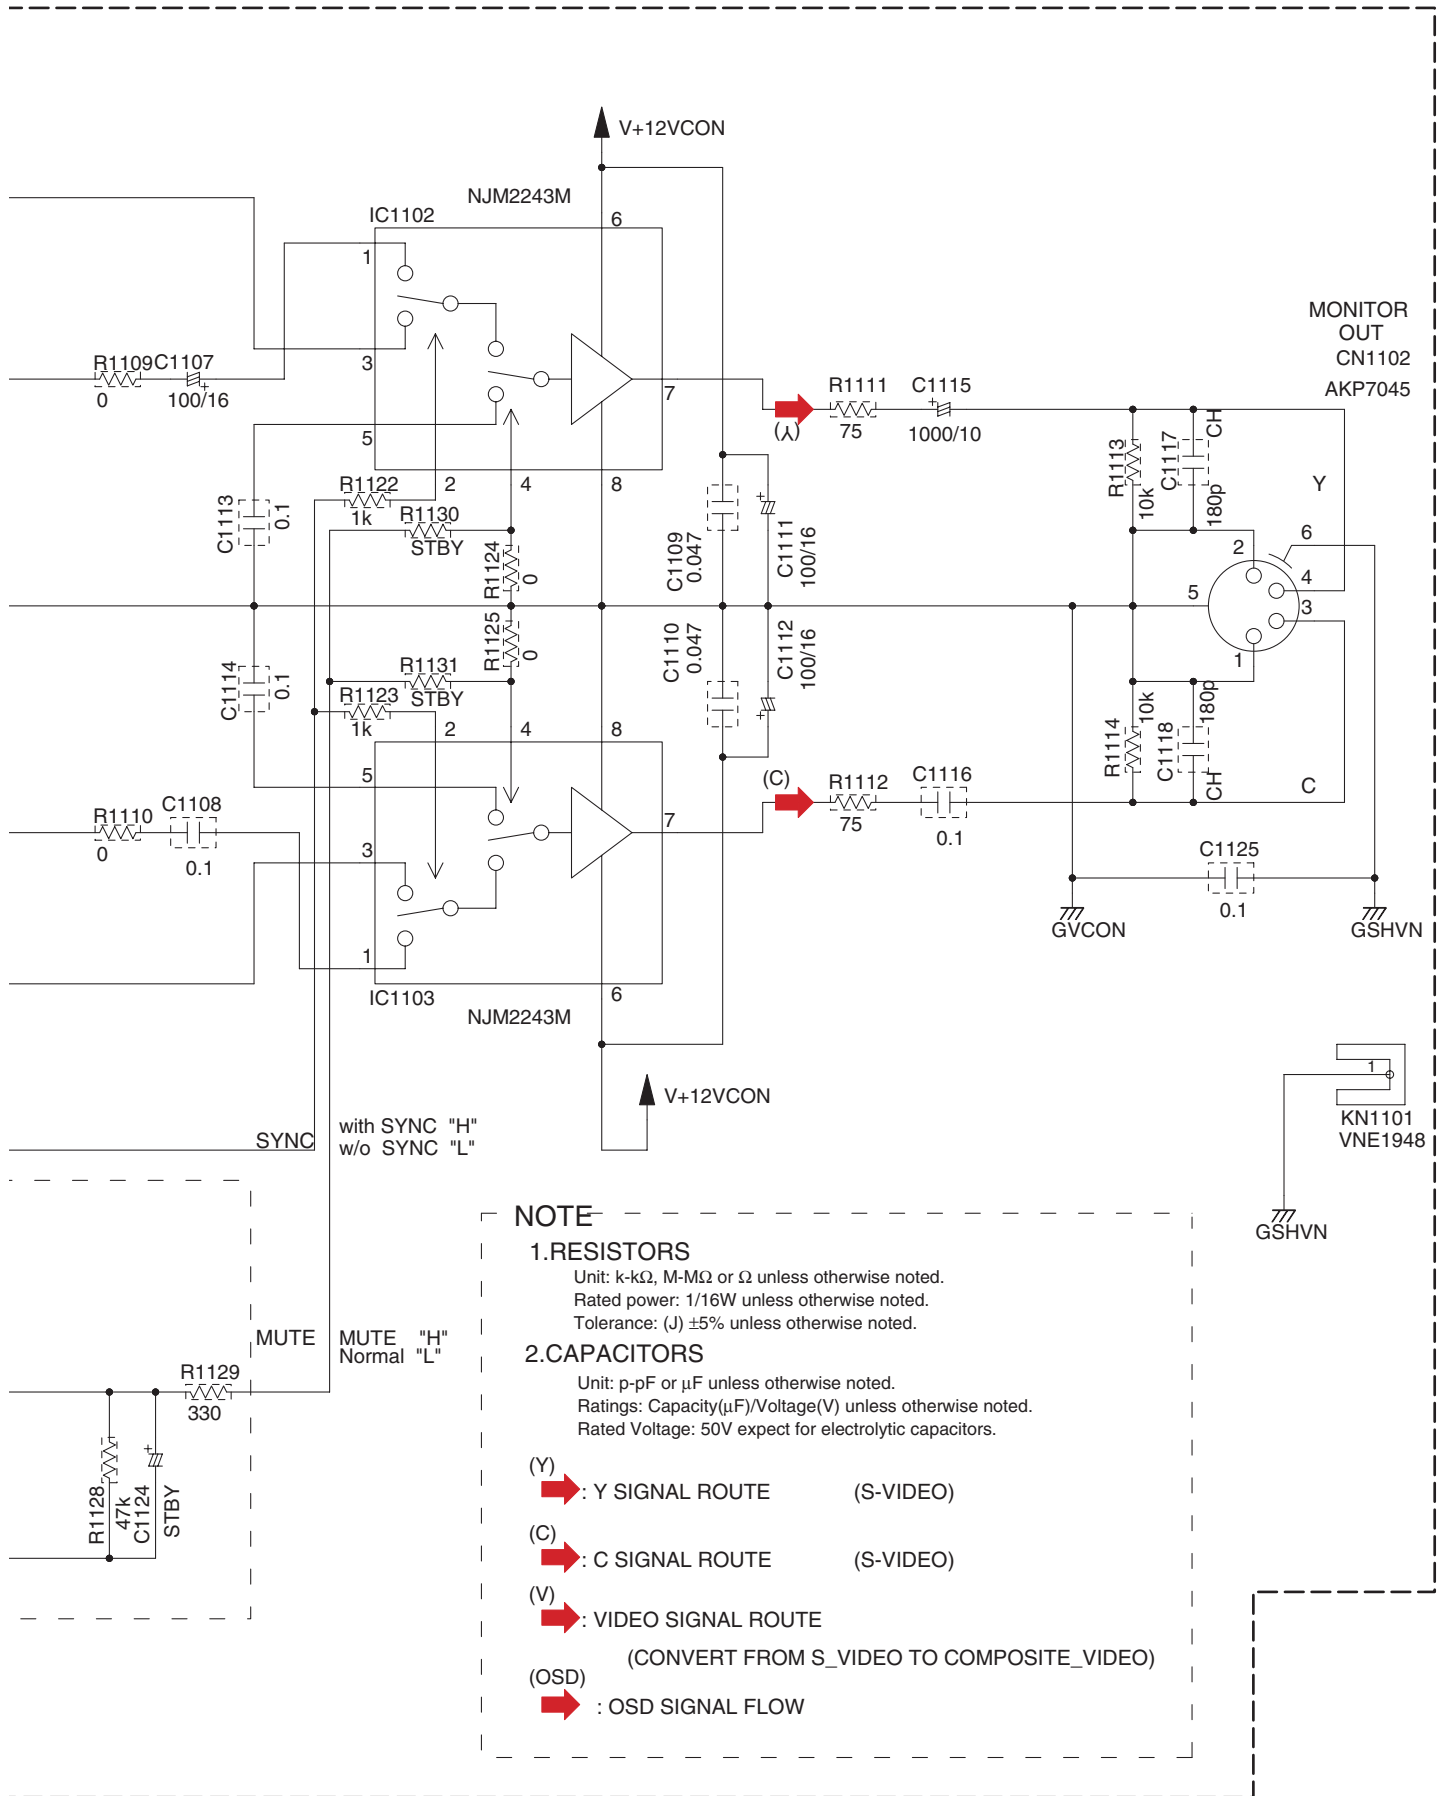

**NOTE**

**1.RESISTORS**

Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.  
Rated power: 1/16W unless otherwise noted.  
Tolerance: (J) ±5% unless otherwise noted.

**2.CAPACITORS**

Unit: p-pF or μF unless otherwise noted.  
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.  
Rated Voltage: 50V expect for electrolytic capacitors.

(Y) → : Y SIGNAL ROUTE (S-VIDEO)

(C) → : C SIGNAL ROUTE (S-VIDEO)

(V) → : VIDEO SIGNAL ROUTE  
(CONVERT FROM S\_VIDEO TO COMPOSITE\_VIDEO)

(OSD) → : OSD SIGNAL FLOW

A  
B  
C  
D  
E  
F






# 4.2 TRANS2, TRANS3, TRANS1 and TRANS4 ASSYS




**SIDE A**

**SIDE B**

## **E** TRANS3 ASSY

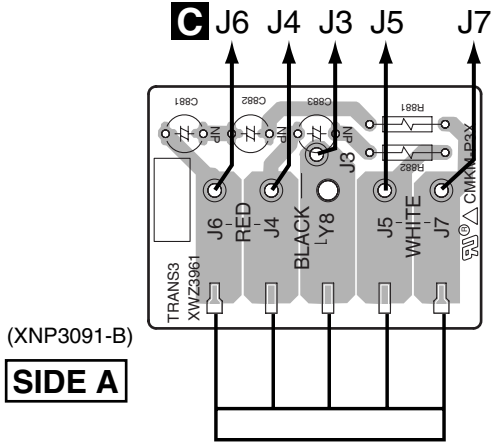

## **Q** TRANS4 ASSY

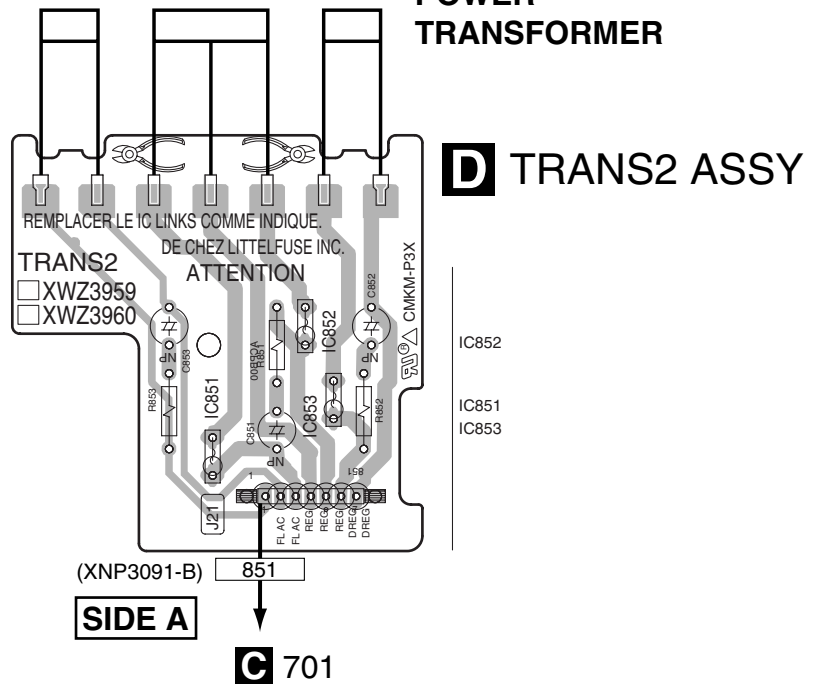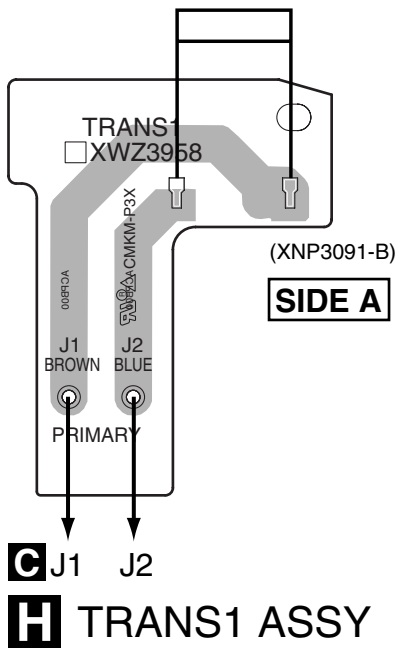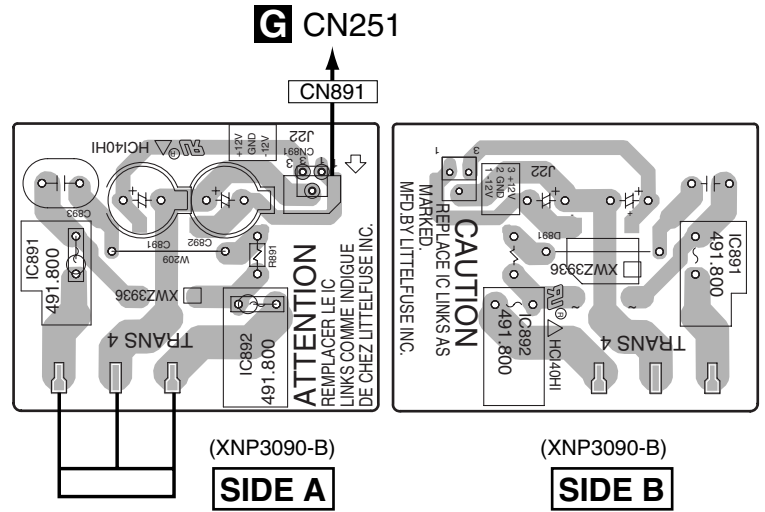

**D E H Q**

**D E H Q**

# 4.3 MAIN ASSY

## SIDE A

A

B

C

D

E

F


1

2

3

4

- Q5001
- Q341
- Q6001
- Q6002
- Q9006
- Q9005
- Q396
- Q342
- Q9004
- IC104
- IC112
- Q362
- Q6007
- Q395
- IC103
- IC108
- IC110
- Q321
- IC105
- IC114
- IC106
- Q9008
- IC115
- IC102
- Q166
- Q165
- Q336
- Q388

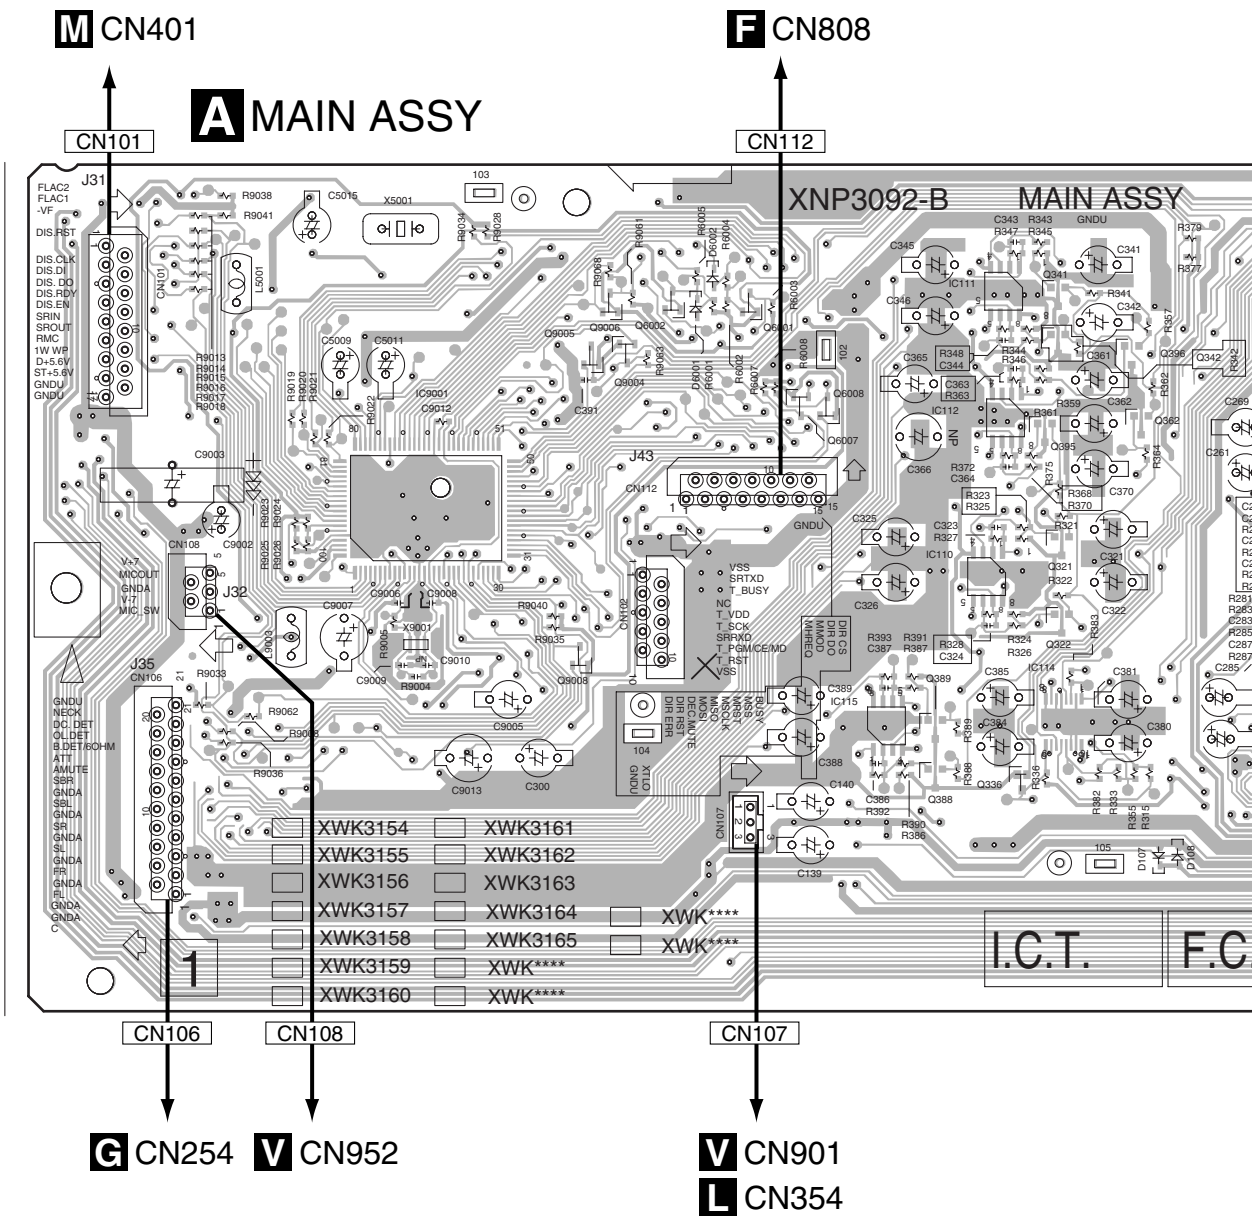

# A

1

2

3

4

**SIDE A**

A

B

C

D

E

F

**A**

FM/AM  
TUNER  
UNIT

**J** CN307 **I** CN303


↑ CN105      ↑ CN104      ↑ CN103

↓ CN109      ↓ CN111

**F** CN804      **F** CN802

(XNP3092-B)

VSX-815-K

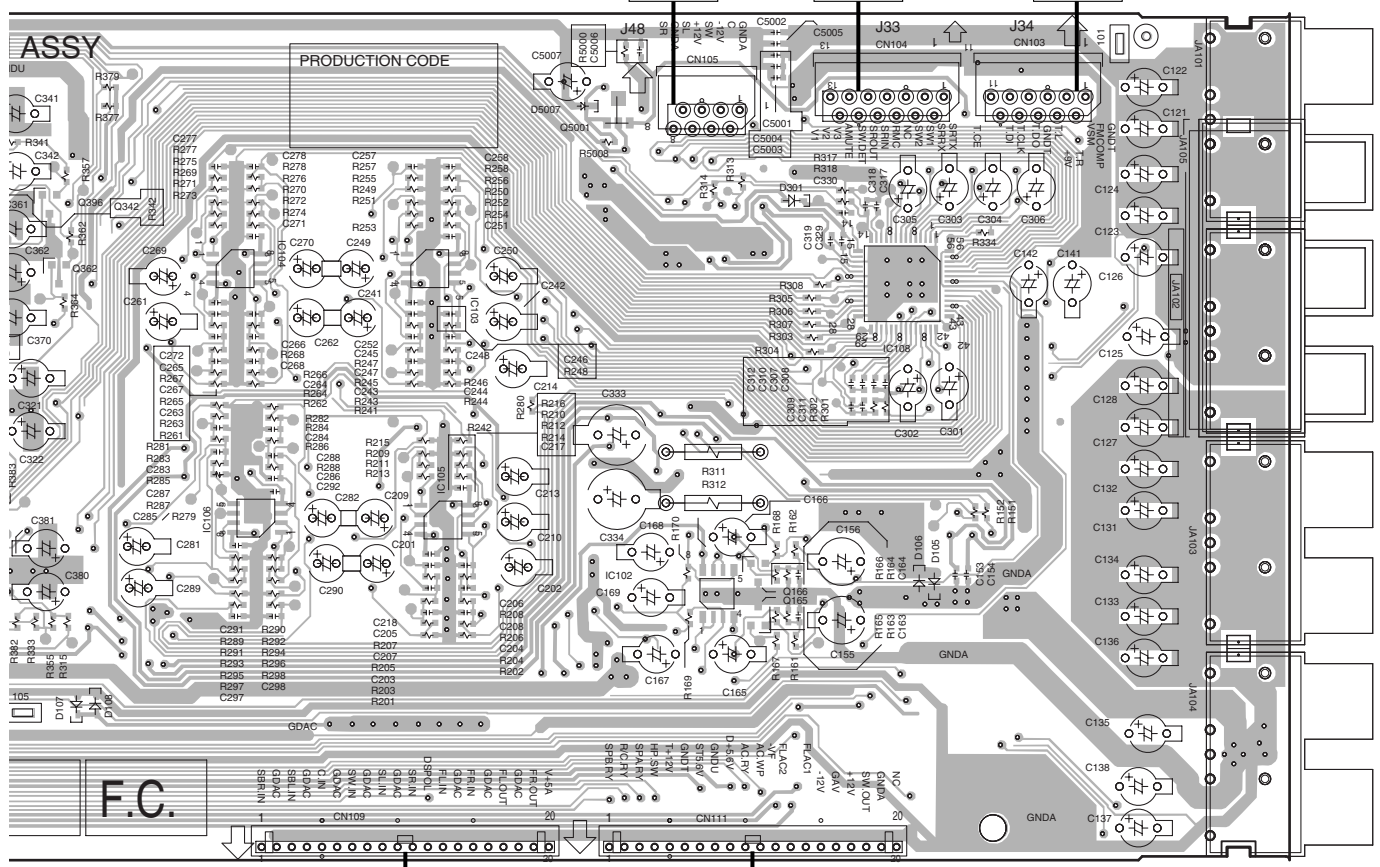

SIDE B

A

B


# A MAIN ASSY

C

D

E

F

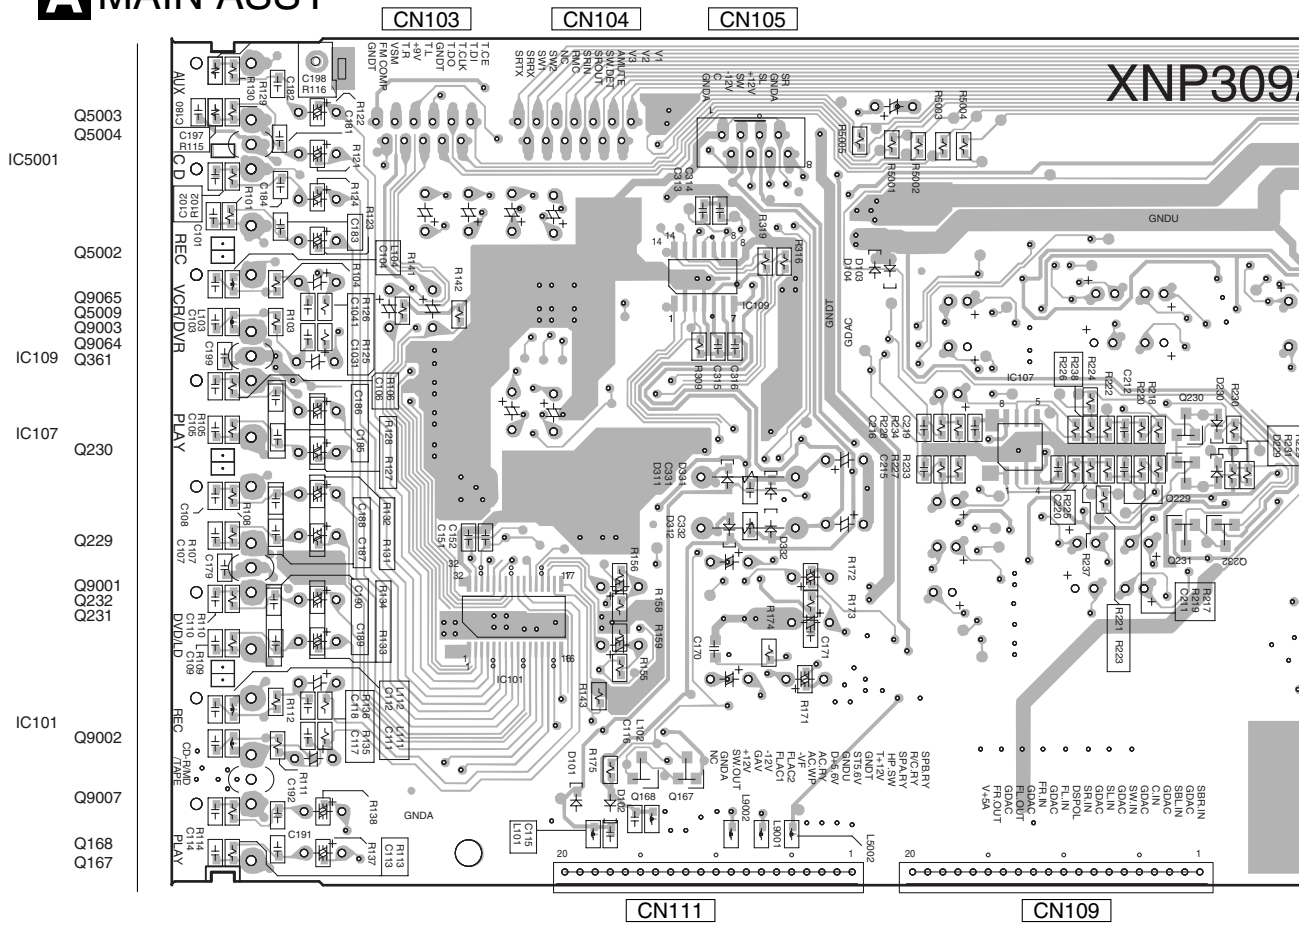

A



**SIDE B**

A

B


C

D

E

F

**A**

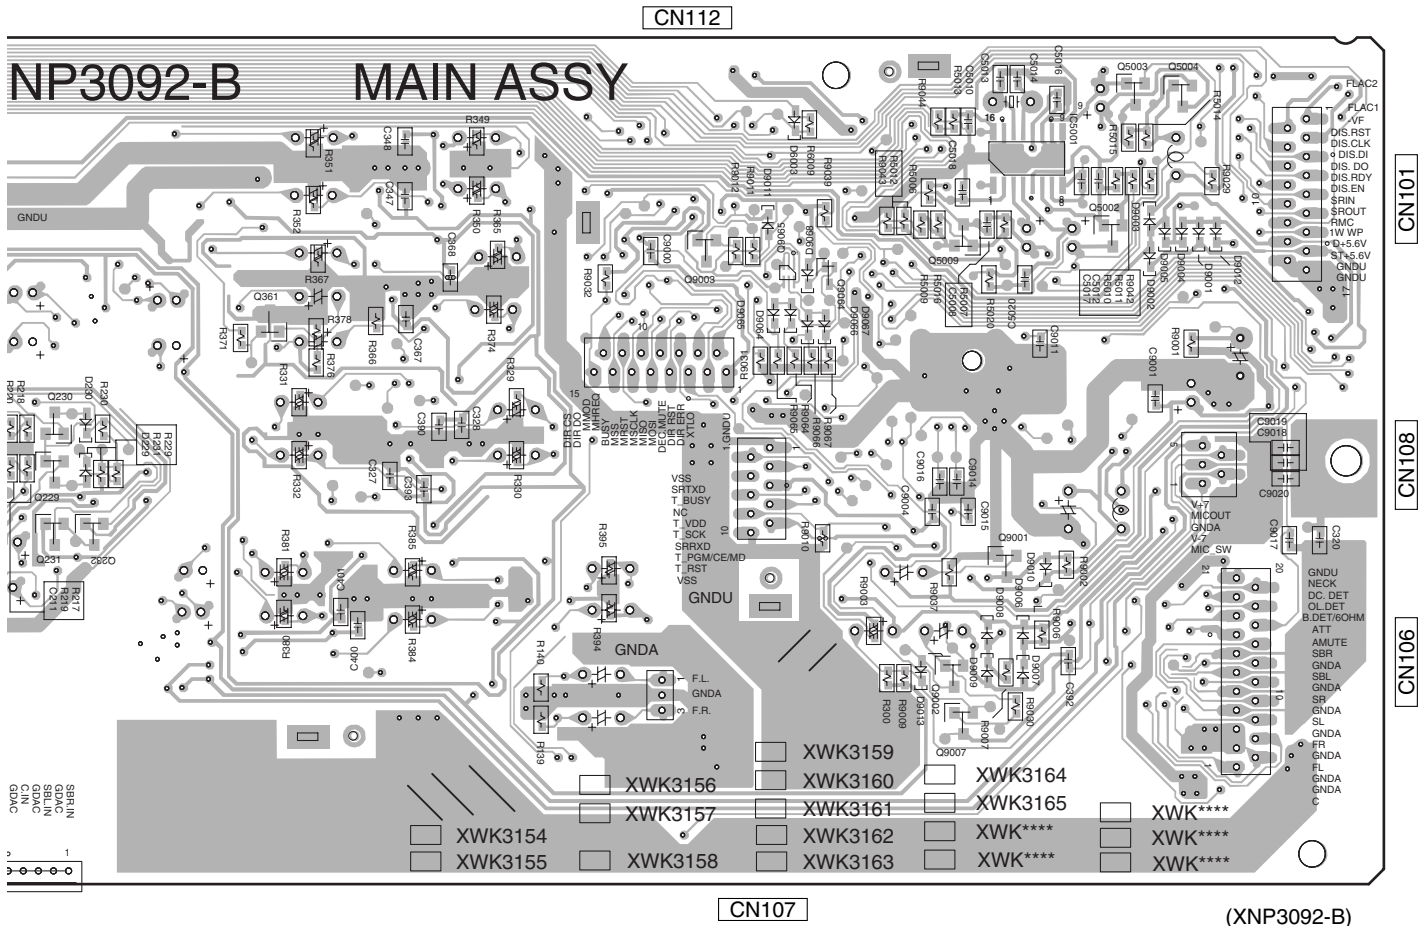

CN112

# NP3092-B MAIN ASSY

CN101

CN108

CN106

CN107

(XNP3092-B)

- |                                  |                                  |                                  |                                  |                                  |                                  |                                  |                                  |                                  |                                  |                                  |                                  |                                  |                                  |                                  |
|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| <input type="checkbox"/> XWK3154 | <input type="checkbox"/> XWK3155 | <input type="checkbox"/> XWK3156 | <input type="checkbox"/> XWK3157 | <input type="checkbox"/> XWK3158 | <input type="checkbox"/> XWK3159 | <input type="checkbox"/> XWK3160 | <input type="checkbox"/> XWK3161 | <input type="checkbox"/> XWK3162 | <input type="checkbox"/> XWK3163 | <input type="checkbox"/> XWK3164 | <input type="checkbox"/> XWK3165 | <input type="checkbox"/> XWK**** | <input type="checkbox"/> XWK**** | <input type="checkbox"/> XWK**** |
|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|



# 4.4 DSP ASSY

**SIDE A**

**B** DSP ASSY

**SIDE A**

A


B

C

D

E

F

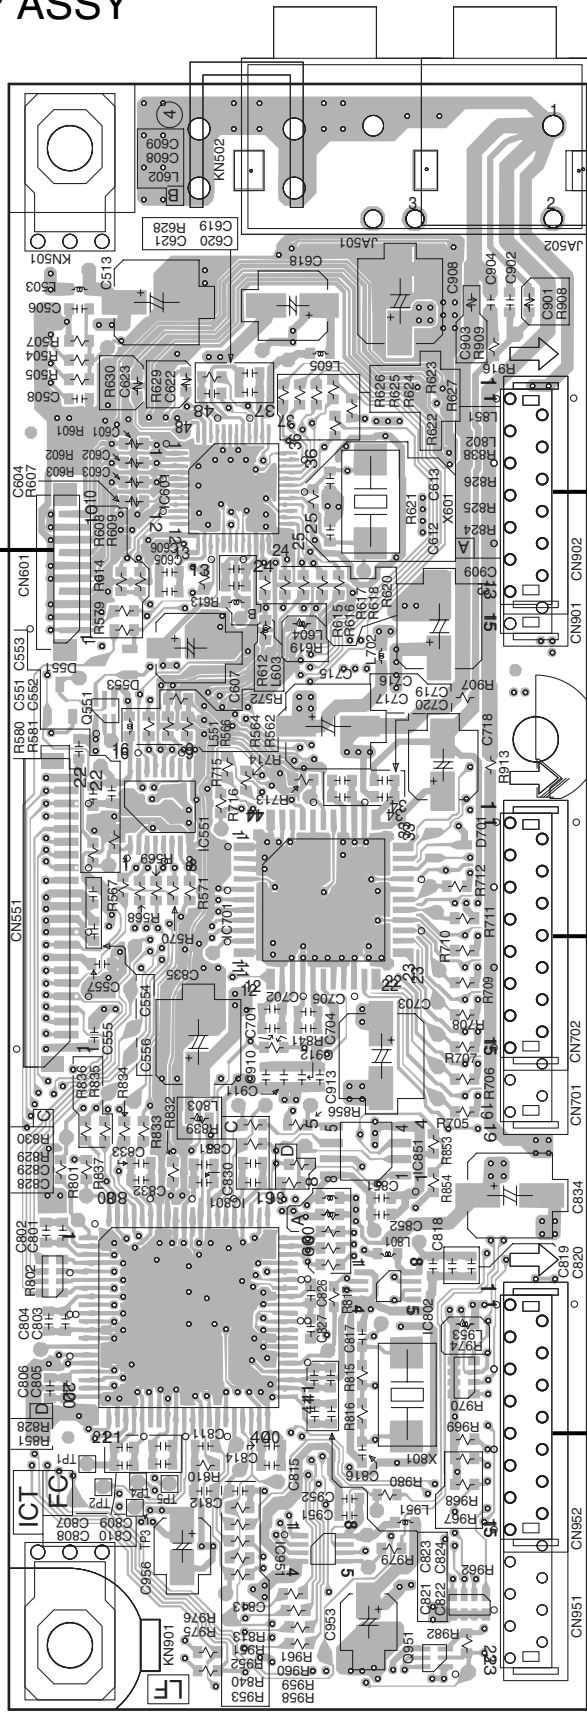

(ANP7525-A)

**B**

**B**

SIDE B

# B DSP ASSY

SIDE B

A


B

C

D

E

F

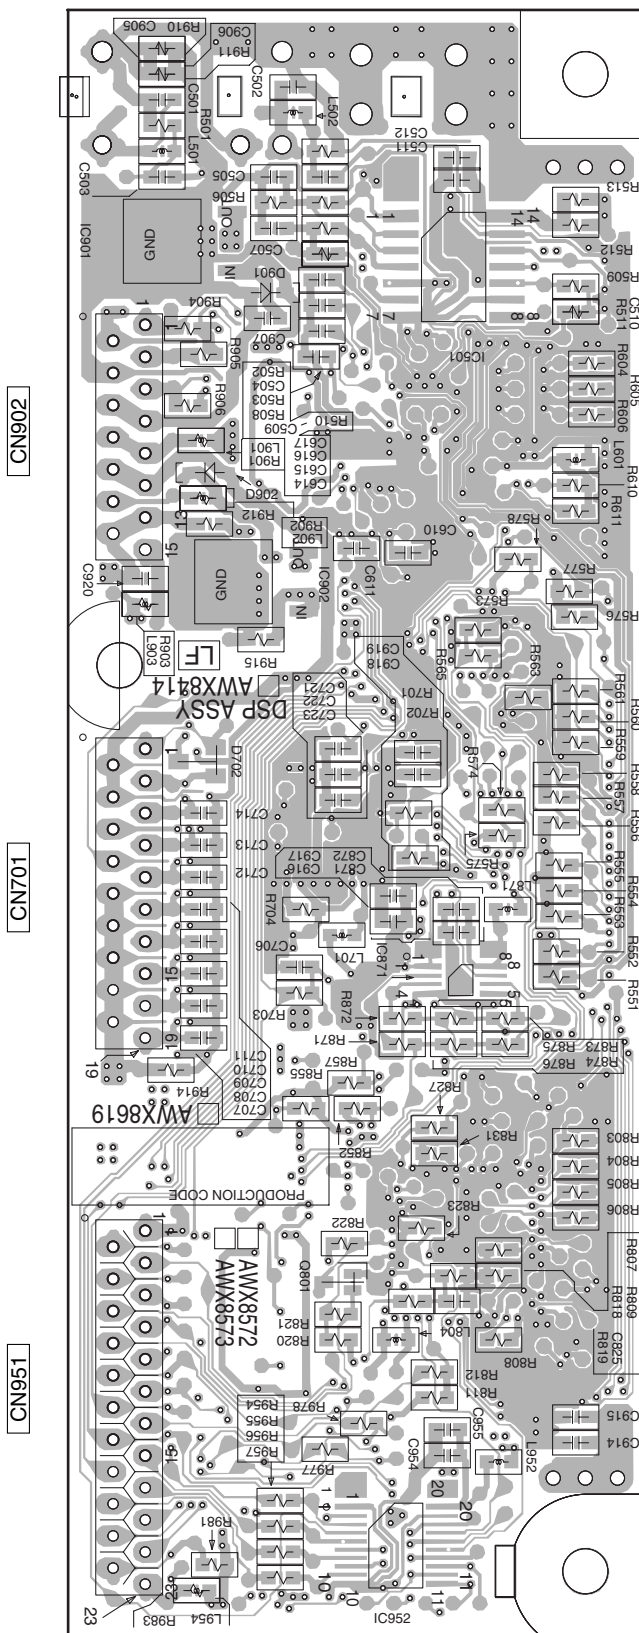

(ANP7525-A)

B

B

# 4.5 AMP & PRIMARY and AMP INPUT ASSYS

**SIDE A**

A


B

C

D

E

F

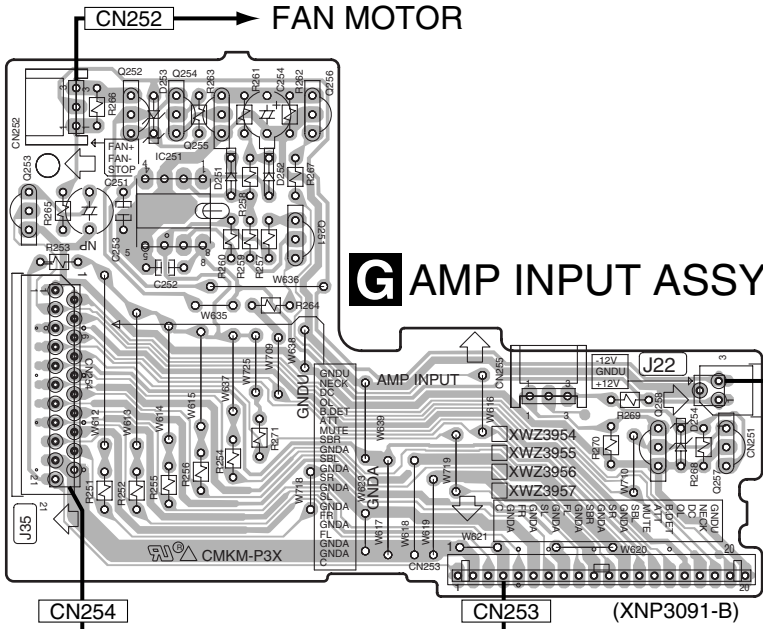


- Q252
- Q254
- Q256
- Q255 IC251
- Q253
- Q251
- Q258
- Q257
- Q CN891

**A** CN106

**C** AMP&PRIMARY ASSY


**E** J3

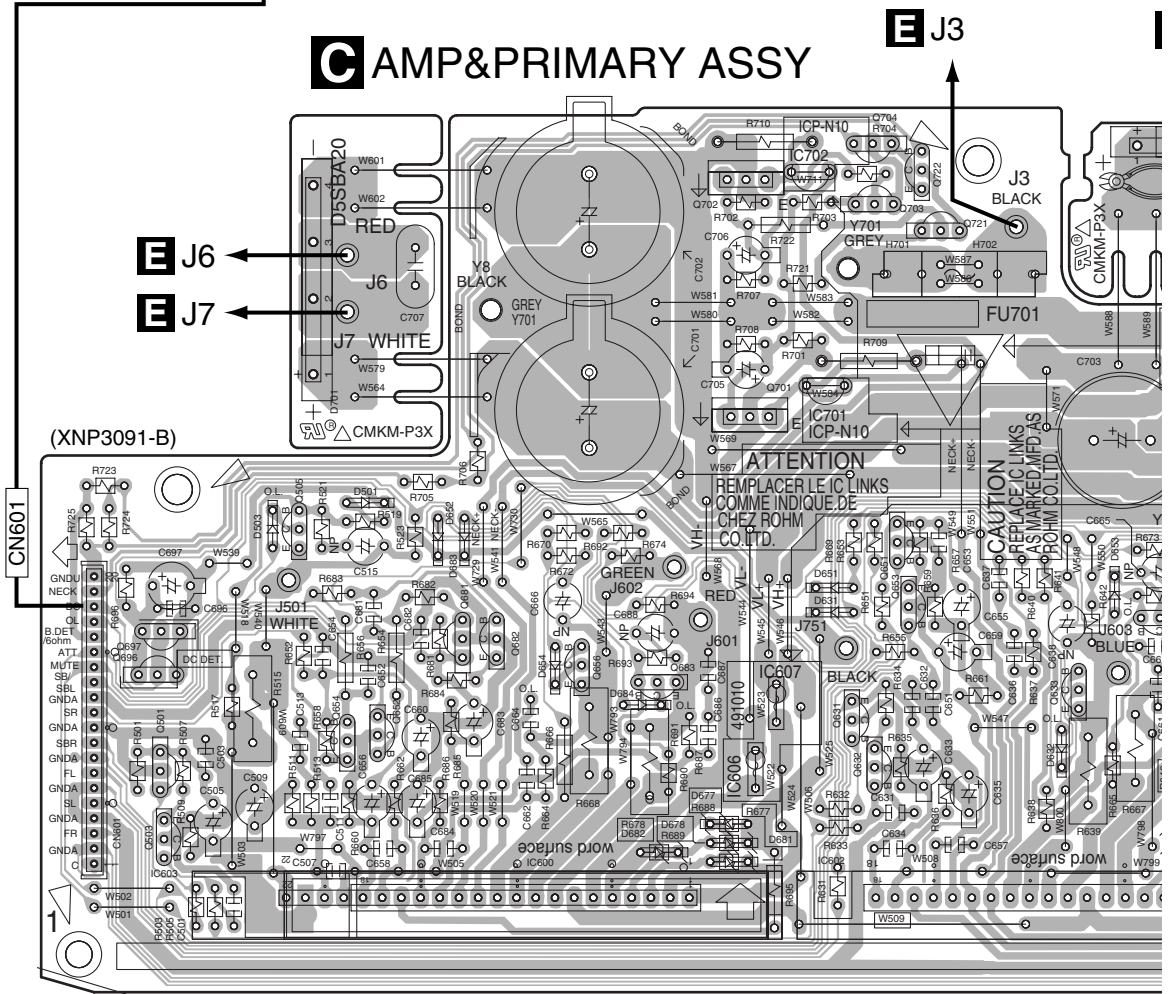

- Q704
- IC702
- Q722
- Q702 Q703
- Q721
- Q701
- IC701
- Q505
- Q651
- Q653 Q602
- Q681 Q604
- Q655
- Q697 Q682 Q606
- Q696 Q683 Q601
- Q656 Q605
- Q652
- Q654
- Q501 Q652 Q631
- Q603
- Q632
- IC607
- IC609 IC605
- IC608
- IC604
- IC606
- Q503
- IC600 IC602
- IC603 IC601
- IC610



VSX-815-K

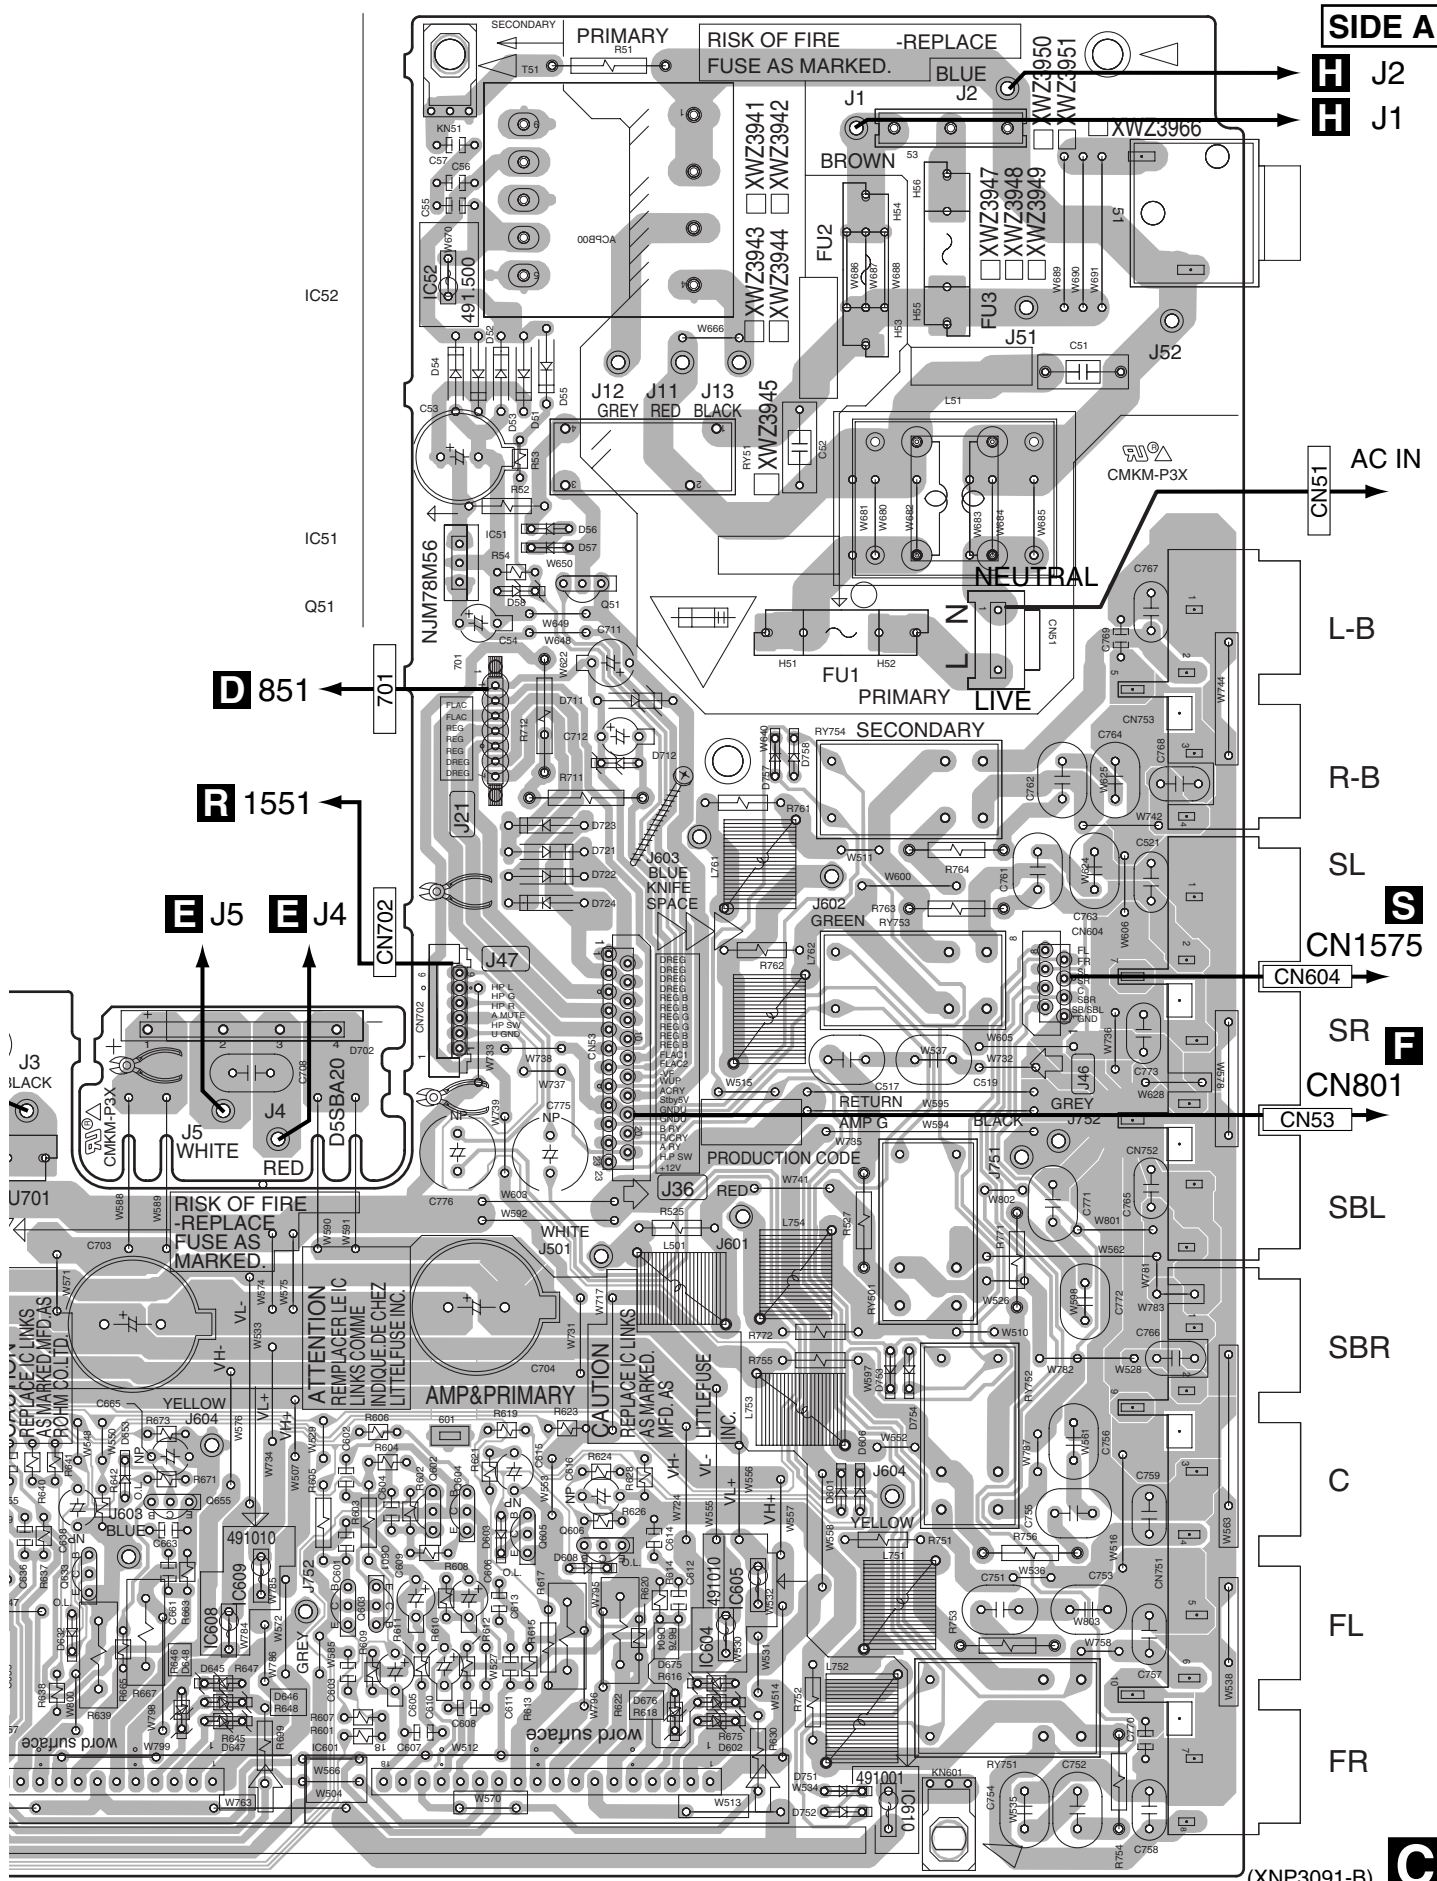

**SIDE A**

**H** J2  
**H** J1

**D** 851

**R** 1551

**E** J5  
**E** J4

AC IN

L-B

R-B

SL

**S**

CN1575

CN604

SR

**F**

CN801

SBL

SBR

C

FL

FR



**C**




4.6 F. DISPLAY, R. ENCODER, P. SW & KEY, H. P. and F. KEY ASSYS

**SIDE A**

**M FRONT DISPLAY ASSY**

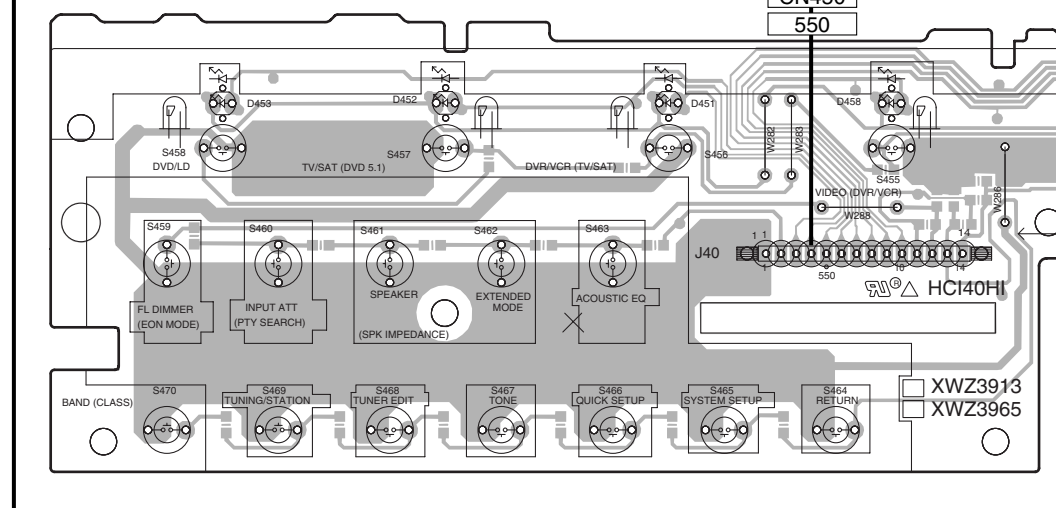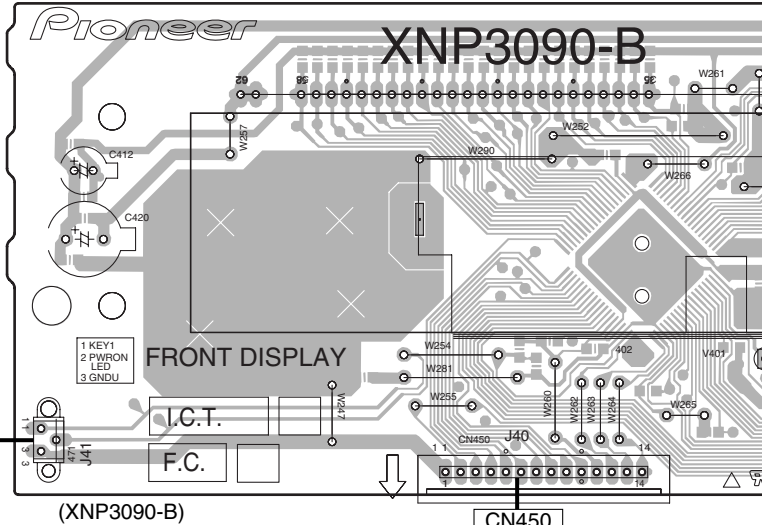


**O POWER SW & KEY ASSY**

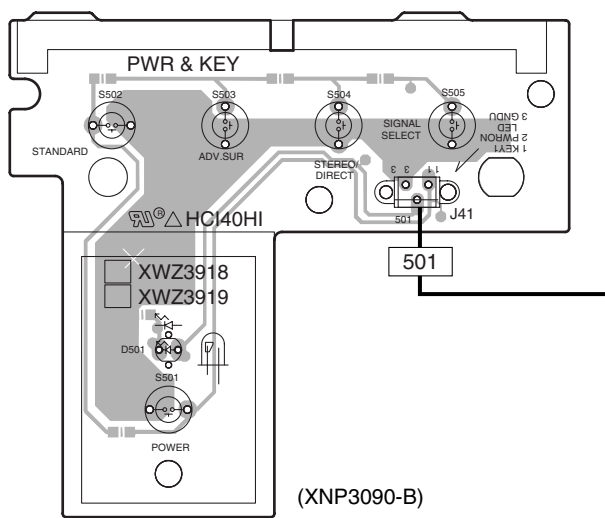

**C CN702**



**R H.P ASSY**

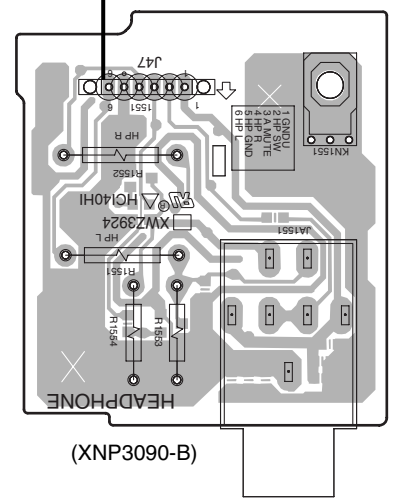

**M O P R**


**SIDE A**

A  
B  
C  
D  
E  
F

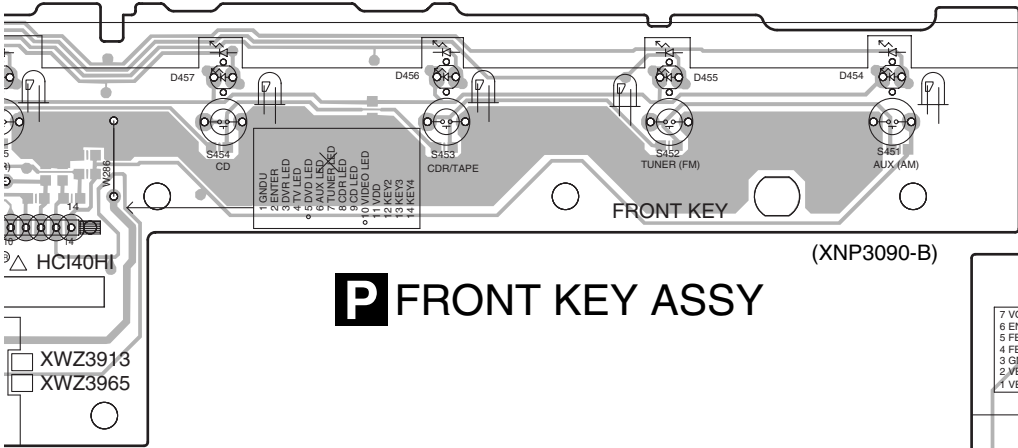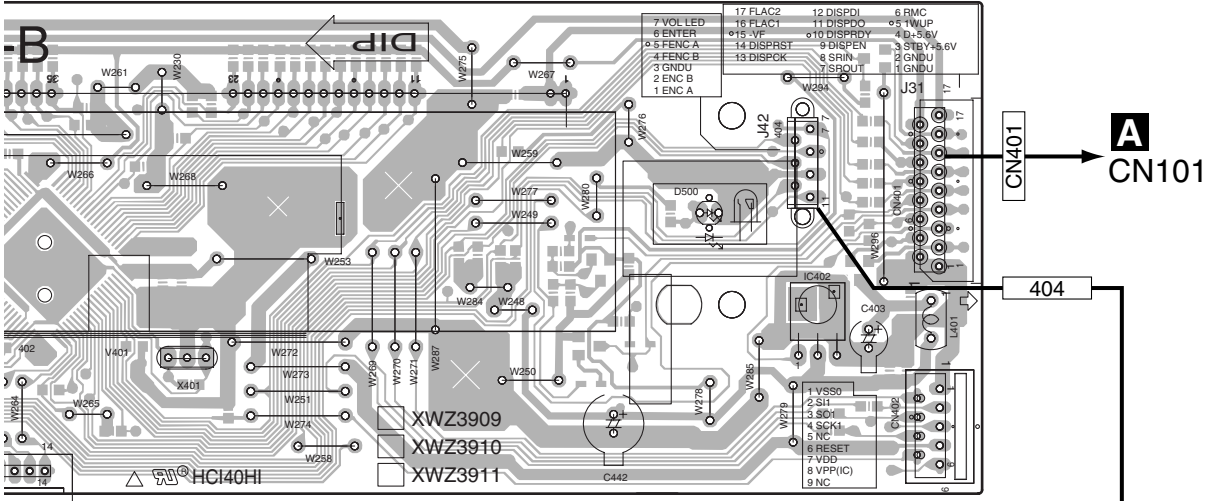

**P** FRONT KEY ASSY

(XNP3090-B)

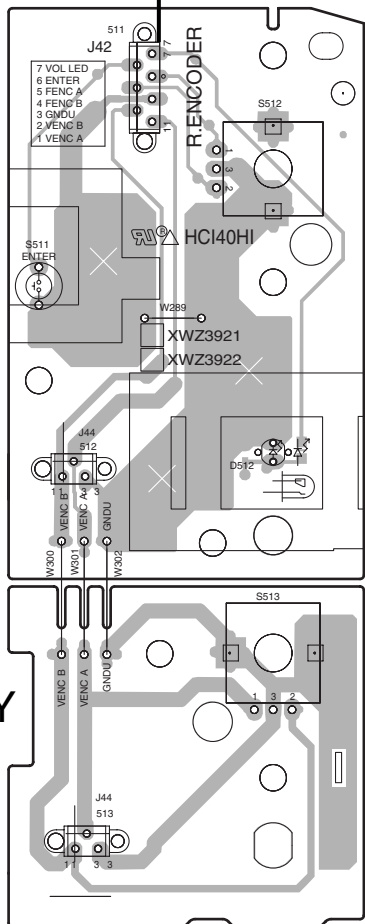

**N** R.ENCODER ASSY

(XNP3090-B)

**M N P**

**SIDE B**

A

B


C

D



E

F

404

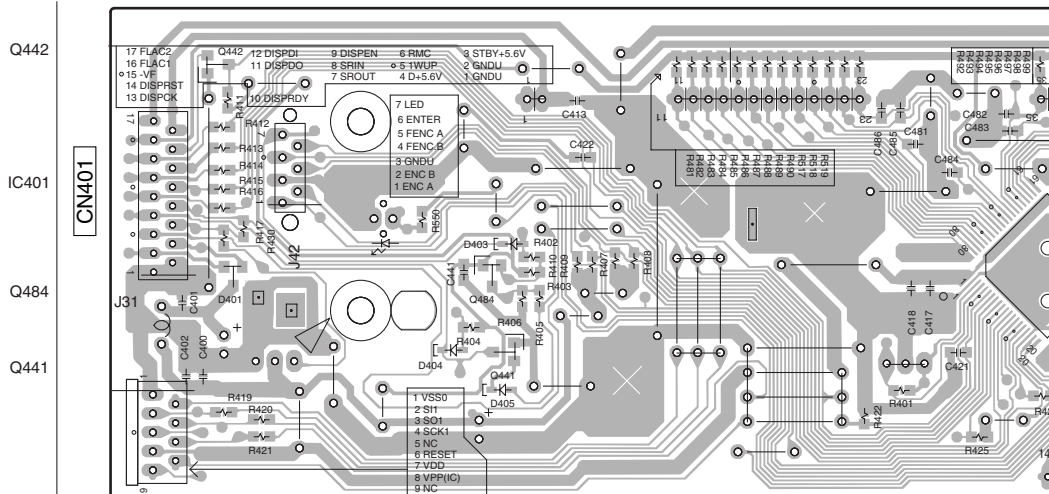

511

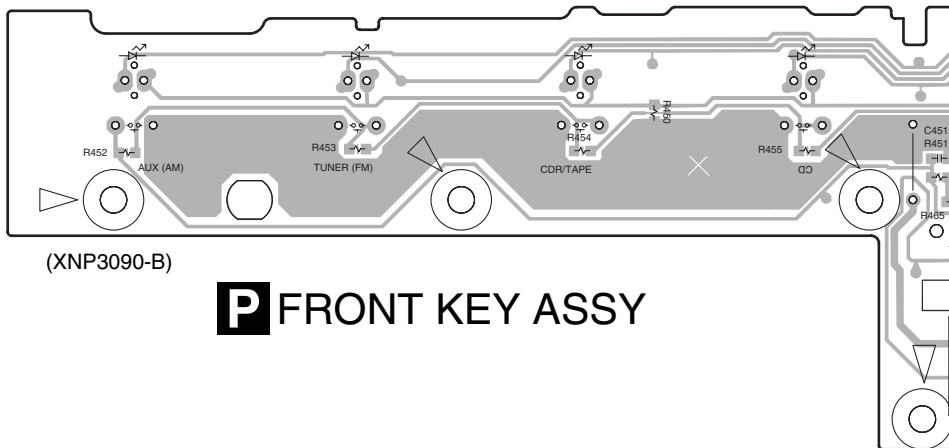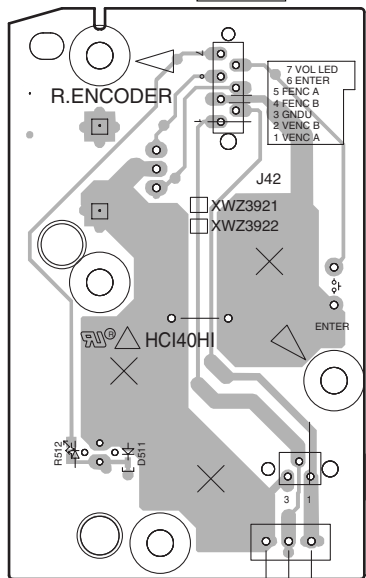

**N** R.ENCODER ASSY

**P** FRONT KEY ASSY


(XNP3090-B)

**M N P**




**SIDE B**

**M FRONT DISPLAY ASSY**

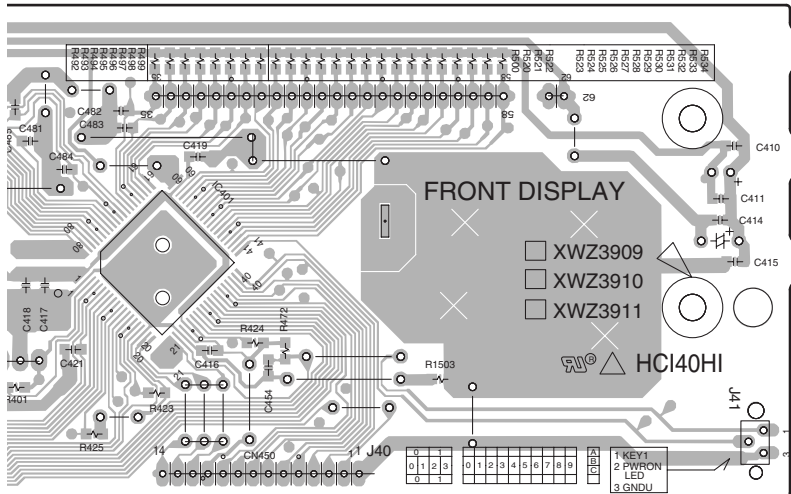


471  
(XNP3090-B)

CN450  
550

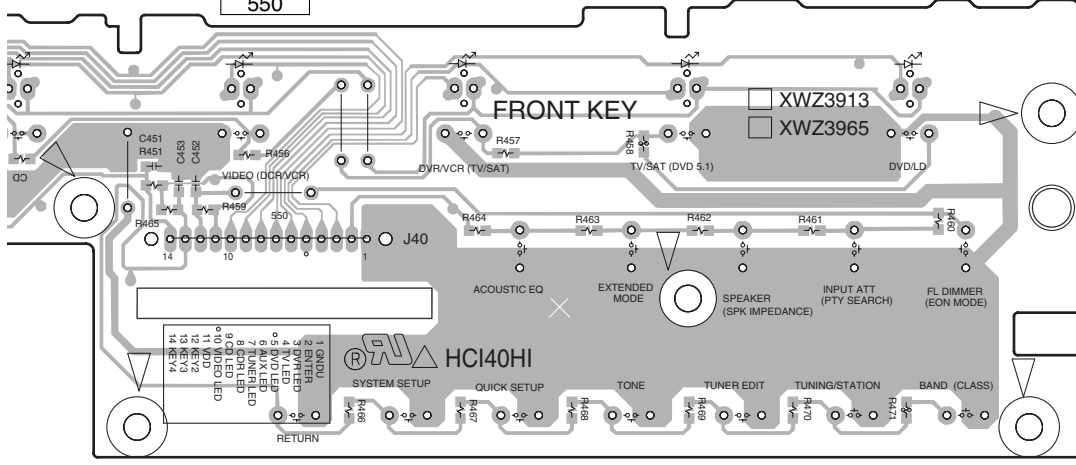


**R H.P ASSY**

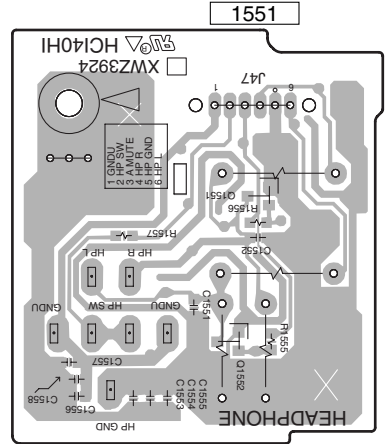

(XNP3090-B)

**O POWER SW & KEY ASSY**

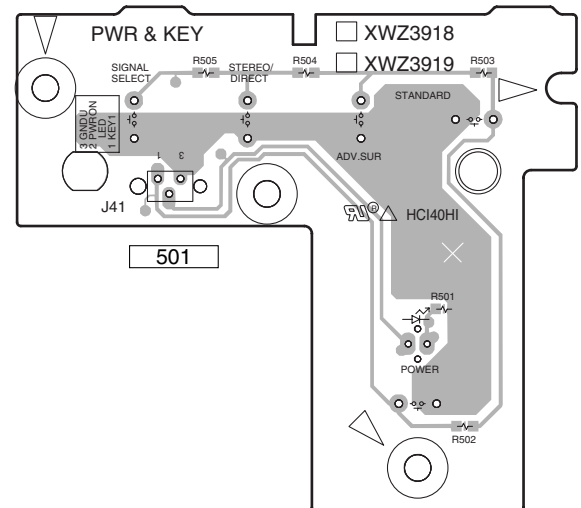

(XNP3090-B)

**M O P R**

4.7 B TO B, DIGITAL IN, VIDEO, 5.1CH and VIDEO CONVERTER ASSYS

**SIDE A**

**T** DIGITAL IN ASSY

**J** 5.1CH ASSY

**SIDE A**

A  
B  
C  
D  
E  
F

**B** CN601

CN1901

**V** CN951

CN1902

(XNP3090-B)

(XNP3090-B)

CN307

**A** CN105

**I** VIDEO ASSY

**U** CN551

CN305

**A** CN104

CN303

**F** CN803

CN302

(XNP3090-B)

**K** B TO B ASSY

CN390

**L** CN351


CN391

(XNP3090-B)

CN392

**W** VIDEO CONVERTER ASSY

(XNP3093-A)

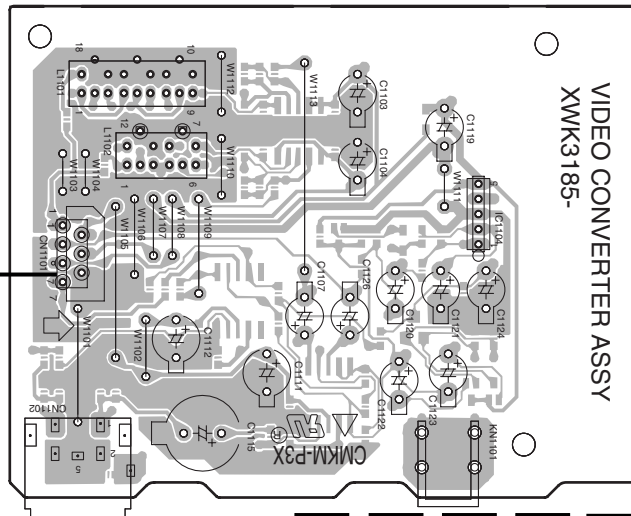


**I J K T W**

**I J K T W**


SIDE B

SIDE B


### J 5.1CH ASSY

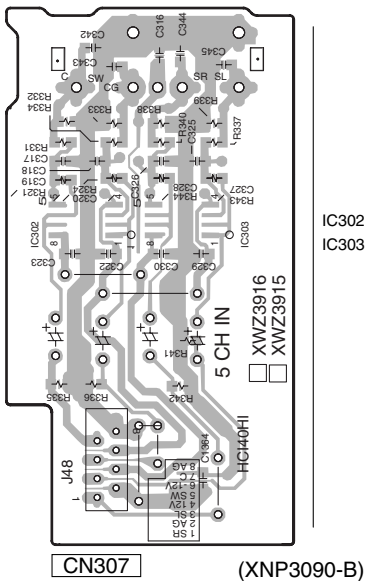


### T DIGITAL IN ASSY

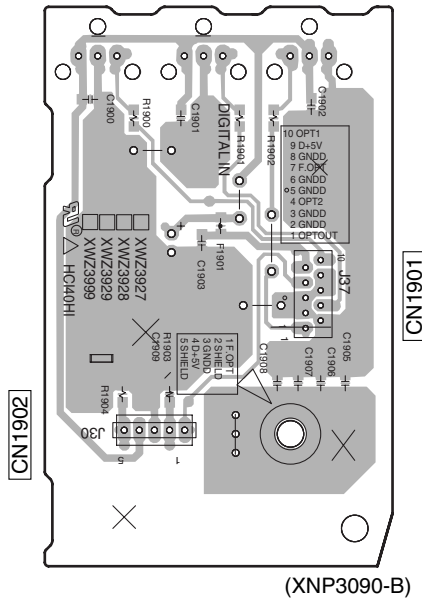


### I VIDEO ASSY

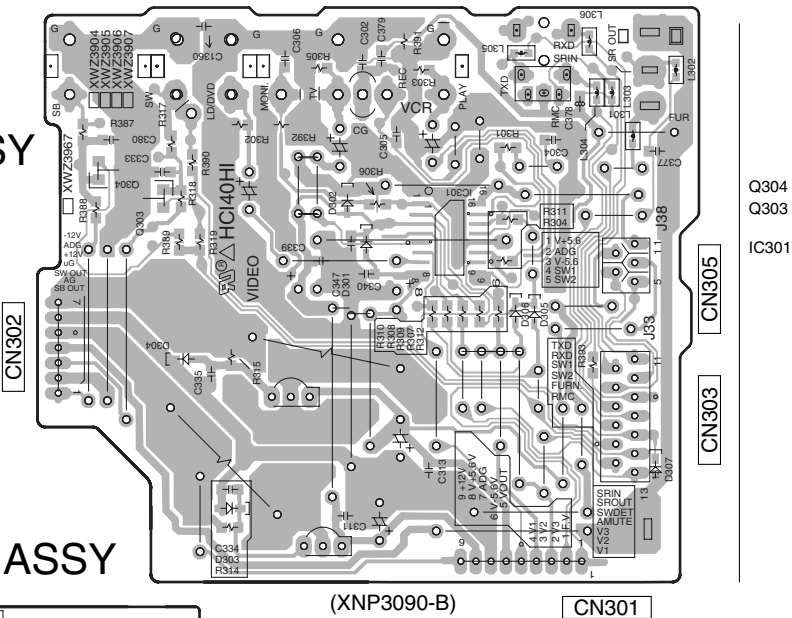

### W VIDEO CONVERTER ASSY

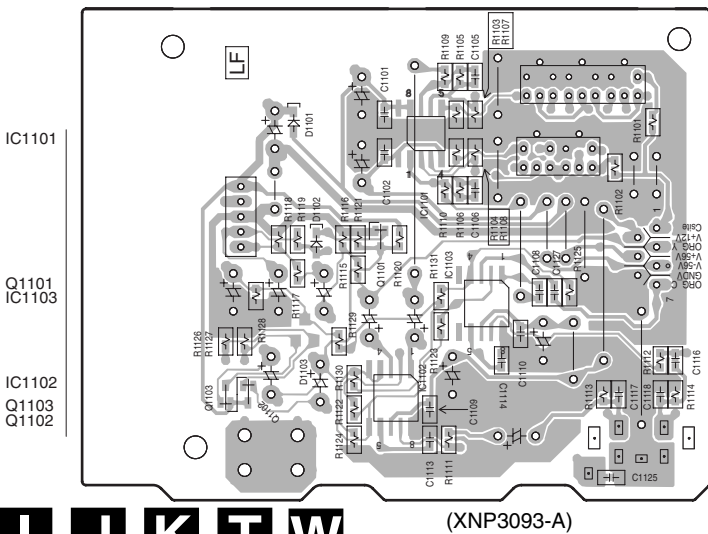

### K B TO B ASSY

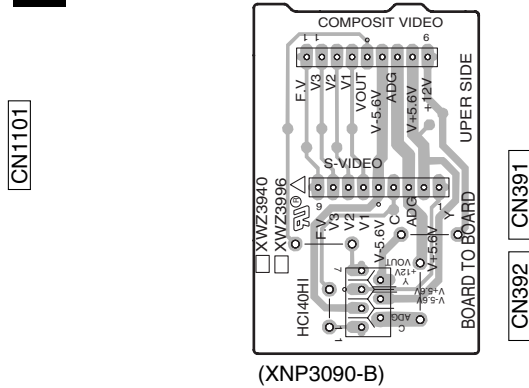

I J K T W

I J K T W


# 4.8 S.VIDEO, F. INPUT, COMPONENT and PRE-OUT ASSYS

**SIDE A**

**S** PRE-OUT ASSY

**U** COMPONENT ASSY

**SIDE A**

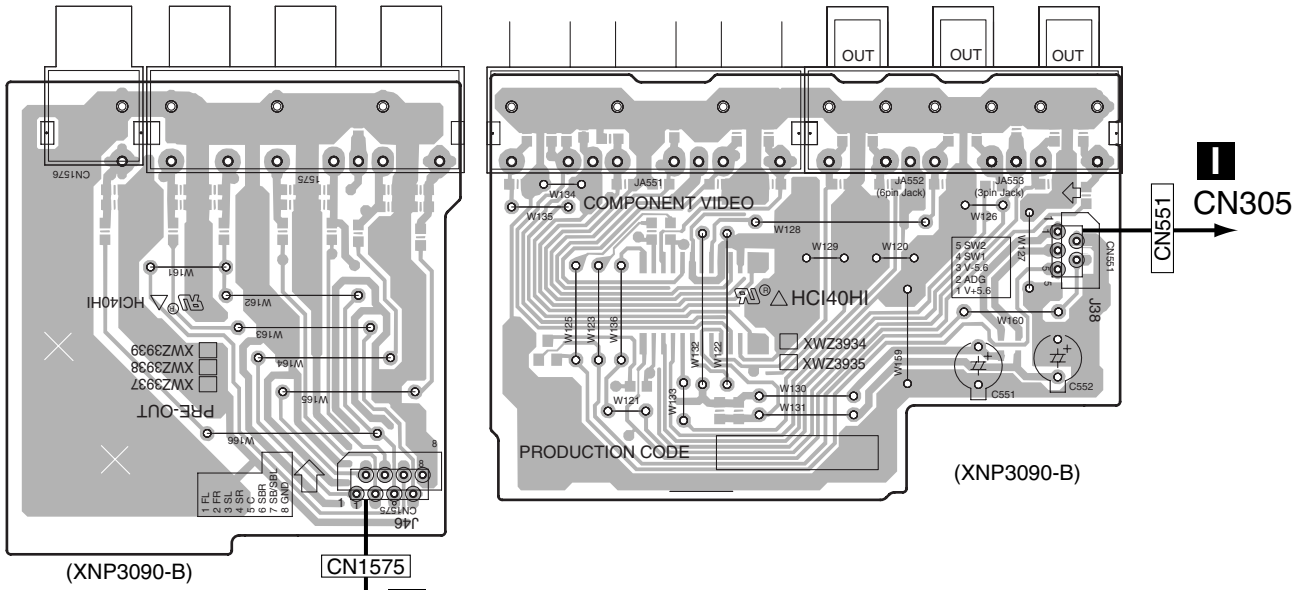

(XNP3090-B)


(XNP3090-B)

CN1575

**C** CN604

CN551

**I** CN305

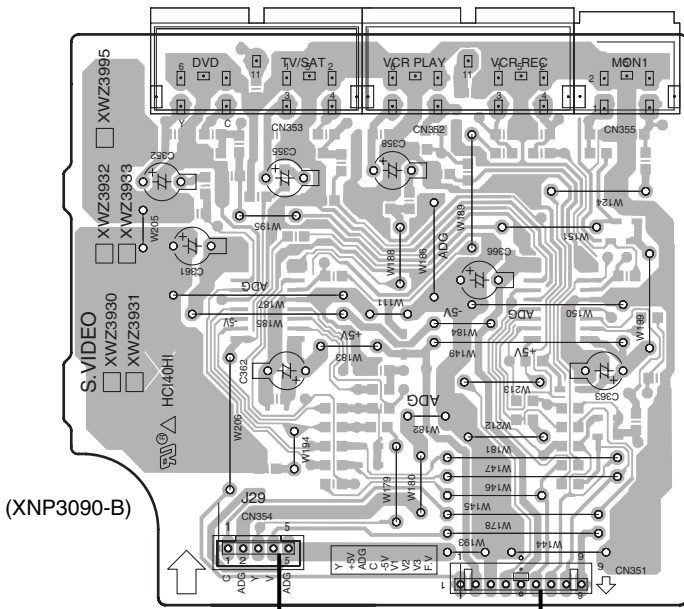

(XNP3090-B)

**L** S.VIDEO ASSY

**A** CN107

CN354

**V** CN901

**K** CN391

CN351

**T** CN1902

**A** CN108

CN952

CN951


**A** CN107

**L** CN354

**V** FRONT INPUT ASSY

CN901

IC952

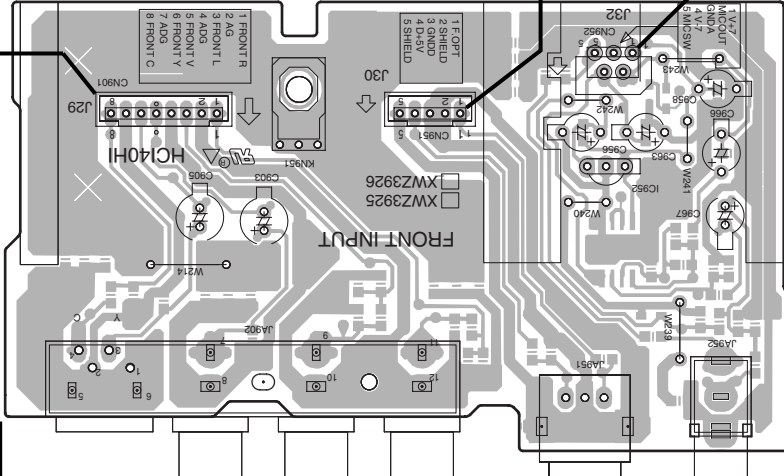

(XNP3090-B)

**L S U V**



**L S U V**

**SIDE B**



**SIDE B**

**U COMPONENT ASSY**

**S PRE-OUT ASSY**

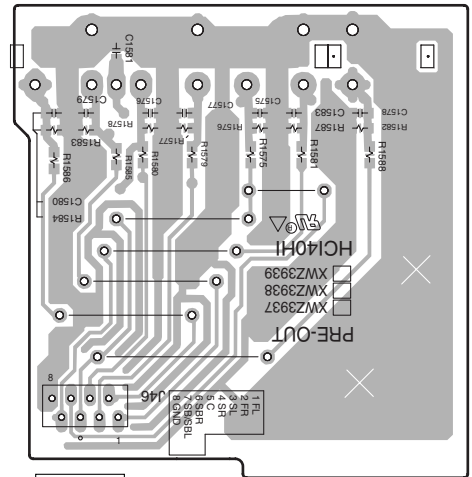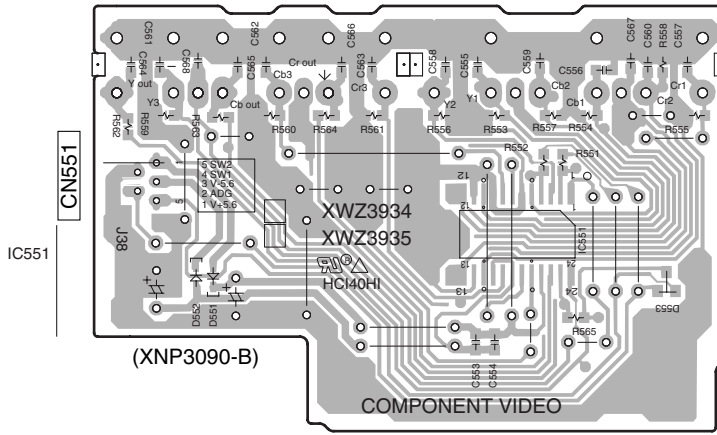

**L S. VIDEO ASSY**

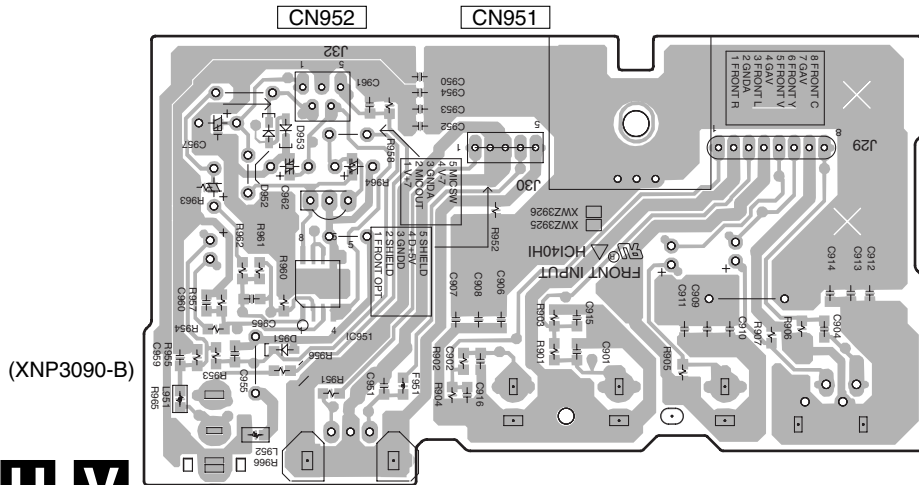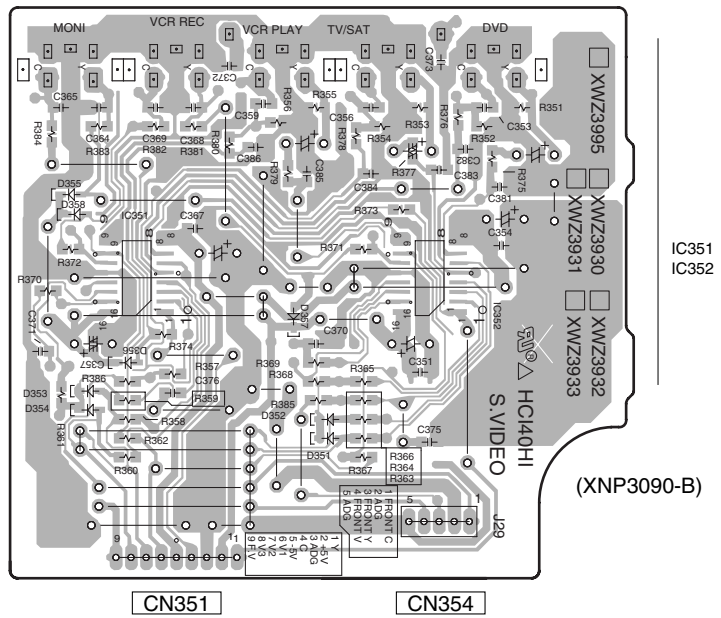

**L S U V**

**L S U V**



# 5. ELECTRICAL PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560  $\Omega$  → 56 x 10<sup>1</sup> → 561 ..... RD1/4PU567J  
 47k  $\Omega$  → 47 x 10<sup>3</sup> → 473 ..... RD1/4PU473J  
 0.5  $\Omega$  → R50 ..... RN2H R50K  
 1  $\Omega$  → 1R0 ..... RS1P 1R0K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k  $\Omega$  → 562 x 10<sup>1</sup> → 5621 ..... RN1/4PC5621F

<b>Mark No.</b>	<b>Description</b>	<b>Part No.</b>	<b>Mark No.</b>	<b>Description</b>	<b>Part No.</b>
-----------------	--------------------	-----------------	-----------------	--------------------	-----------------

## LIST OF ASSEMBLIES

	1..MAIN ASSY (VSX-815)	XWK3159	NSP 1..COMPLEX ASSY (VSX-815)		XWK3191
	1..MAIN ASSY (VSX-915)	XWK3162	NSP 1..COMPLEX ASSY (VSX-915)		XWK3186
	1..DSP ASSY	AWX8572	2..VIDEO ASSY		XWZ3907
	1..VIDEO CONVERTER ASSY (VSX-915)	XWK3185	2..FRONT DISPLAY ASSY		XWZ3911
			2..FRONT KEY ASSY		XWZ3965
			2..5.1CH INPUT ASSY		XWZ3915
			2..POWER SW ASSY		XWZ3919
			2..H.P. ASSY		XWZ3924
			2..FRONT INPUT ASSY		XWZ3926
NSP	1..AMP & PS ASSY (VSX-815)	XWK3178	2..DIGITAL IN ASSY		XWZ3999
NSP	1..AMP & PS ASSY (VSX-915)	XWK3181	2..S. VIDEO ASSY (VSX-815)		XWZ3932
	2..AMP&PRIMARY ASSY (VSX-815)	XWZ3945	2..S. VIDEO ASSY (VSX-915)		XWZ3995
	2..AMP&PRIMARY ASSY (VSX-915)	XWZ3948	2..COMPONENT ASSY		XWZ3935
	2..REGULATOR ASSY	XWZ3753	2..TRANS4 ASSY		XWZ3936
	2..AMP INPUT ASSY	XWZ3956	2..PRE-OUT ASSY		XWZ3938
	2..TRANS1 ASSY	XWZ3958	2..B TO B ASSY (VSX-815)		XWZ3940
	2..TRANS2 ASSY	XWZ3959	2..B TO B ASSY (VSX-915)		XWZ3996
	2..TRANS3 ASSY	XWZ3961	2..R. ENCODER ASSY		XWZ3922
	2..BINDER ASSY	XWZ3963			
	2..HOLDER ASSY	XWZ3964	1..FM/AM TUNER UNIT		AXX7172

## • CONTRAST OF PCB ASSEMBLIES

### A MAIN ASSY

XWK3162 and XWK3159 are constructed the same except for the following :

Mark	Symbol and Description	XWK3159	XWK3162
	R9025	Not used	RS1/16S472J

### C AMP & PRIMARY ASSY

XWZ3948 and XWZ3745 are constructed the same except for the following :

Mark	Symbol and Description	XWZ3945	XWZ3948
	C701, C702 (4700/71V)	XCH3013	Not used
	C701, C702 (5600/71V)	Not used	XCH3015

### K B TO B ASSY

XWZ3996 and XWZ3940 are constructed the same except for the following :

Mark	Symbol and Description	XWZ3940	XWZ3996
	CN392	Not used	52045-0745

# L S. VIDEO ASSY

XWZ3995 and XWZ3932 are constructed the same except for the following :

Mark	Symbol and Description	XWZ3932	XWZ3995
	D355, D356	1SS355	Not used
	R373, R374	RS1/16S750J	Not used
	R383, R384	RS1/16S0R0J	Not used
	C364, C365	CKSRYB221K50	Not used
	CN355	AKP7179	Not used

## • PARTS LIST FOR VSX-815-K

Mark No.	Description	Part No.	Mark No.	Description	Part No.
<b>COMPLEX ASSY</b>			<b>CAPACITORS</b>		
<b>OTHERS</b>			<b>OTHERS</b>		
J41	JUMPER WIRE	D15A03-110-2651	C151, C152, C243, C244, C263		CCSRCH101J50
J42	JUMPER WIRE	D15A07-075-2651	C283, C284, C313, C314		CCSRCH101J50
J47	JUMPER WIRE 6P	D20PYY0630E	C317, C318, C323, C324		CCSRCH101J50
J40	JUMPER WIRE 14P	D20PYY1407E	C343, C344, C363, C386, C387		CCSRCH101J50
			C1031, C1041, C117, C118		CCSRCH220J50
			C205-C208, C245-C248, C265		CCSRCH331J50
			C267, C285-C288		CCSRCH331J50
			C203, C204		CCSRCH471J50
			C366		CEANP4R7M50
			C121-C128, C131-C142		CEAT100M50
			C167, C168, C209, C210		CEAT100M50
			C213, C214, C249, C250		CEAT100M50
			C269, C270, C289, C290		CEAT100M50
			C301-C306, C321, C322		CEAT100M50
			C341, C342, C361, C362		CEAT100M50
			C380, C381, C384, C385		CEAT100M50
			C5007		CEAT101M16
			C169		CEAT221M6R3
			C201, C202, C241, C242		CEAT2R2M50
			C261, C262, C281, C282, C9005		CEAT2R2M50
			C9007		CEAT331M6R3
			C325, C326, C345, C346, C365		CEAT470M25
			C388, C389		CEAT470M25
			C155, C156		CEAT470M50
			C333, C334		CEAT471M10
			C9013		CEAT471M6R3
			C165, C166, C370		CEAT4R7M50
			C170		CKSQYB104K16
			C320, C392, C5001, C9015, C9016		CKSRYB102K50
			C115, C116, C153, C154, C171		CKSRYB103K50
			C179, C180, C199, C215-C218		CKSRYB103K50
			C251, C252, C266, C271, C272		CKSRYB103K50
			C291, C292, C315, C316, C319		CKSRYB103K50
			C327-C330, C347, C348		CKSRYB103K50
			C367, C368, C390, C393		CKSRYB103K50
			C400, C401, C5002, C9004, C9008		CKSRYB103K50
			C9017		CKSRYB103K50
			C219, C220, C309-C312, C9018		CKSRYB104K16
			C5003, C9006		CKSRYB105K10
			C264		CKSRYB223K25
			C257, C258, C277, C278		CKSRYB472K50
			C297, C298, C307, C308, C364		CKSRYB472K50
			C9011, C9014		CKSRYB473K16
			C268		CKSRYB562K50
			C391		CKSRYF104Z16
			C9003 (1F/5.5V)		PCH1132
<b>AMP &amp; PS ASSY</b>			<b>OTHERS</b>		
Y701	AWG14 BOARD IN	ADX7286			
J21	JUMPER WIRED 7P	D20PYY0715E			
<b>MAIN ASSY</b>			<b>OTHERS</b>		
<b>SEMICONDUCTORS</b>			<b>OTHERS</b>		
IC109		BD3812F			
IC108		BD3813KS			
IC101		BD3841FS			
IC102		NJM2100M			
IC9001		PEG094B			
IC114		TC4052BFT			
IC103-IC107, IC110-IC112, IC115		UPC4570G2			
Q6001		2SA1037K			
Q165, Q166, Q321, Q322		2SC5938A			
Q341, Q342, Q361, Q362		2SC5938A			
Q388, Q389, Q395, Q396		2SC5938A			
Q5001		2SD1664			
Q229, Q230		2SK208			
Q167, Q231, Q9002-Q9005		DTA124EK			
Q9008		DTA143TK			
Q232, Q6002		DTC124EK			
Q336		DTC124EUA			
Q168, Q6007, Q6008, Q9001		DTC143EK			
Q9007		DTC143TK			
Q9065		UMD2N			
Q9064		UN5112			
D103-D108, D229, D230, D301		1SS355			
D311, D312, D6001, D6002		1SS355			
D9001-D9013, D9064-D9068		1SS355			
D101, D102		RB501V-40			
D5007		UDZS10(B)			
D331, D332		UDZS6R8(B)			
<b>COILS AND FILTERS</b>			<b>OTHERS</b>		
L9001, L9002	CHIP SOLID INDUCTOR	ATL7002			
L9003		LFEA2R2J			
L101-L104, L111, L112, L5002		QTL1013			
	CHIP SOLID INDUCTOR				



**Mark No. Description****Part No.****RESISTORS**

△ R311, R312  
Other Resistors

RS1LMF101J  
RS1/16S###J

**OTHERS**

CN105 8P CONNECTOR 52044-0845  
CN103 11P CONNECTOR 52044-1145  
CN104 13P CONNECTOR 52044-1345  
CN108 5P CONNECTOR 52045-0545  
CN102 10P CONNECTOR 52045-1045

CN112 15P CONNECTOR 52045-1545  
CN101 17P CONNECTOR 52045-1745  
CN106 21P CONNECTOR 52045-2145  
CN107 CONNECTOR POST B3B-PH-K  
CN109, CN111 20P SOCKET KP200TA20L

101, 102, 105 PCB BINDER VEF1040  
JA101-JA104 PIN JACK(4P) XKB3017  
X9001 CERAMIC RESONATOR (15.7 MHz) XSS3004

**DSP ASSY  
SEMICONDUCTORS**

IC601 AK4114VQ  
IC701 AK4628VQE  
IC801 DSPC56371AF180  
△ IC902 LM1117DT-ADJ  
△ IC901 NJM2391DL1-33

IC851 PDC121A8  
IC501 TC74HCU04AF  
IC952 TC74VHCT244AFTS1  
IC871 TC7WH125FU  
IC802 TC7WU04FU

Q801 UN5212  
D702 DAN202K  
D701 DAP202K  
D901, D902 UDZS5R6(B)

**COILS AND FILTERS**

L802, L803 ATL7002  
L901, L902 CHIP SOLID INDUCTOR ATL7002  
L501-L503, L601, L602, L605 QTL1013  
L701, L702, L801, L804, L851 QTL1013  
L871, L952 CHIP SOLID INDUCTOR QTL1013

**CAPACITORS**

C705 CCSRCH101J50  
C612, C613 CCSRCH120J50  
C505, C506 CCSRCH470J50  
C511, C605, C608, C620, C702 CCSRCH471J50  
C707-C714, C717, C801, C803 CCSRCH471J50

C805, C807, C809, C814, C818 CCSRCH471J50  
C821, C823, C826, C828, C830 CCSRCH471J50  
C832, C851, C871, C916, C919 CCSRCH471J50  
C954 CCSRCH471J50  
C816, C817 CCSRCH8R0D50

C956 CEVW100M16  
C513, C703, C715, C834, C835 CEVW101M16  
C908, C909 CEVW101M16  
C607, C618, C718 CEVW470M6R3  
C617 CKSRYB102K50

**Mark No. Description****Part No.**

C503, C504, C701, C820, C825 CKSRYB103K50  
C917 CKSRYB103K50  
C606, C609, C614, C619, C704 CKSRYB104K16  
C706, C716, C720, C802, C804 CKSRYB104K16  
C806, C808, C810, C815, C819 CKSRYB104K16

C822, C824, C827, C829, C831 CKSRYB104K16  
C833, C852, C872, C907, C918 CKSRYB104K16  
C955 CKSRYB104K16  
C512 CKSRYB105K6R3  
C621 CKSRYB474K10

**RESISTORS**

R802 RAB4C101J  
R962, R970 RAB4C104J  
R628 RS1/16S1802F  
Other Resistors RS1/16S###J

**OTHERS**

JA501 2P PIN JACK AKB7131  
CN601 10P CONNECTOR VKN1414  
CN902 13P SOCKET XKP3077  
CN952 15P SOCKET XKP3078  
CN701 19P SOCKET XKP3080

X601 CRYSTAL RESONATOR ASS7046  
(12.288 MHz)  
X801 CRYSTAL RESONATOR VSS1171  
(20 MHz)

**CAMP & PRIMARY ASSY  
SEMICONDUCTORS**

△ IC610 PROTECTOR(1A) AEK7009  
△ IC604-IC609 PROTECTOR(10A) AEK7022  
△ IC701, IC702 IC PROTECTOR ICP-N10  
△ IC51 NJM78M56FA  
△ IC601, IC602 STK412-230B

△ IC603 STK413-230B  
Q703, Q721 2SA1145  
△ Q702 2SA2005  
Q696, Q697 2SC1740S  
Q704, Q722 2SC1845

Q505, Q605, Q606, Q633 2SC2240  
Q655, Q656, Q683 2SC2240  
△ Q701 2SC5511  
Q501, Q503, Q601-Q604 2SC5974A  
Q631, Q632, Q651-Q654 2SC5974A

Q681, Q682 2SC5974A  
Q51 DTC143ES  
D501, D503, D56, D601, D603 1SS133  
D606, D608, D631, D632 1SS133  
D651-D654, D683, D684, D752 1SS133

D754, D758 1SS133  
△ D701, D702 D5SBA20(B)  
D602, D604, D647, D648 MTZJ15A  
D681, D682 MTZJ15A  
D711 MTZJ22D

D58 MTZJ5.1B  
D712 MTZJ6R8(B)  
△ D51-D55, D721-D724 S5688

**COILS AND FILTERS**

L501, L751-L754, L761, L762 COIL ATH1004  
△ L51 LINE FILTER XTF3004

5  
**Mark No. Description Part No.**

**SWITCHES AND RELAYS**

RY501, RY751-RY753 RELAY XSR3009  
 △ RY51 RELAY XSR3010

**CAPACITORS**

C707, C708 (0.01/AC250V) ACG1005  
 C507, C511, C513, C607, C608 CCPUSL470J50  
 C611-C614, C634, C636, C637 CCPUSL470J50  
 C657, C658, C661-C664, C684 CCPUSL470J50  
 C686, C687 CCPUSL470J50

C515, C615, C616, C638 CEANP2R2M50  
 C665, C666, C688 CEANP2R2M50  
 C775, C776 CEANP470M50  
 C712 CEAT101M10  
 C509, C609, C610, C635 CEAT101M16

C659, C660, C685 CEAT101M16  
 C711 CEAT101M35  
 C53 CEAT102M16  
 C697 CEAT221M10  
 C54 CEAT470M25

C505, C605, C606, C633 CEAT4R7M50  
 C655, C656, C683 CEAT4R7M50  
 C705, C706 CEHAT100M2A  
 C696 CKPUYB102K50  
 C503, C603, C604, C632 CKPUYB331K50

C653, C654, C682 CKPUYB331K50  
 C55-C57 CKPUYF103Z25  
 C517, C751, C752, C755 CQ MBA104J50  
 C761, C762, C771 CQ MBA104J50  
 △ C51, C52 (10000pF/250V(AC)) XCG3009

C703, C704 (3300/42V) XCH3012  
 C701, C702 (4700/71V) XCH3013

**RESISTORS**

△ R515, R617, R622, R639 ACN7094  
 △ R667, R668, R691 (0.22/5W) ACN7094  
 △ R51 (2.2M/ 1/2W) RCN1080  
 △ R52 RD1/2PM270J  
 △ R517, R615, R620, R638 RD1/4PU331J

△ R665, R666, R690 RD1/4PU331J  
 △ R525, R751, R752, R755 RD1/4PUF101J  
 △ R761, R762, R772 RD1/4PUF101J  
 △ R709, R710 RS1LMF272J  
 △ R527, R753, R754, R756 RS1LMF4R7J

△ R763, R764, R771 RS1LMF4R7J  
 △ R711 RS2LMF242J  
 Other Resistors RD1/4PU###J

**OTHERS**

CN604 8P CONNECTOR 52045-0845  
 CN53 23P CONNECTOR 52045-2345  
 CN702 6P JUMPER CONNECTOR 52147-0610  
 △ 51 AC SOCKET 1-P AKP1060  
 H51, H52, H701, H702 FUSE CLIP AKR7001  
 △ T51 STANDBY TRANSFORMER ATT7043  
 CN601 20P PLUG KM200TA20  
 △ CN51 AC CODE SOCKET RKP1751  
 601 PCB BINDER VEF1040  
 KN51, KN601 EARTH METAL FITTING VNF1084  
 CN751 SP TERMINAL 8-P(V0) XKE3030  
 CN752 SP TERMINAL 6-P(V0) XKE3032

7  
**Mark No. Description Part No.**

701 7P CABLE HOLDER XKP3047

**D TRANS2 ASSY SEMICONDUCTORS**

△ IC853 PROTECTOR (4A) AEK7018  
 △ IC851, IC852 PROTECTOR(5A) AEK7019

**OTHERS**

851 7P CABLE HOLDER XKP3047

**E TRANS3 ASSY**

TRANS3 ASSY has no service part.

**F REGULATOR ASSY SEMICONDUCTORS**

△ IC803, IC804 NJM78M05FA  
 △ IC801, IC805 NJM78M12FA  
 △ IC806 NJM78M56FA  
 △ IC802 NJM79M12FA  
 Q801, Q803, Q805 DTA124ES

Q802, Q804, Q806 DTC114ES  
 D809-D811 MTZJ6.2B  
 △ D801-D804 S5688G

**CAPACITORS**

C811, C815 CEAT101M10  
 C813 CEAT101M16  
 C801, C802 CEAT222M25  
 C809 CEAT472M16  
 C808 CEHAT101M10

C805, C806 CEHAT101M16  
 C803, C804, C807, C810, C812 CKPUYF103Z25  
 C814 CKPUYF103Z25

**RESISTORS**

△ R801 RS3LMF331J

**OTHERS**

CN808 15P CONNECTOR 52045-1545  
 CN801 23P CONNECTOR 52045-2345  
 CN802, CN804 20P PLUG KM200TA20  
 CN803 7P PLUG KM200TA7  
 CN805 13P PLUG XKP3066

CN807 15P PLUG XKP3067  
 CN806 19P PLUG XKP3069

**G AMP INPUT ASSY SEMICONDUCTORS**

IC251 NJM4558D-D  
 Q257 2SA933S  
 Q251, Q256 2SC5974A  
 Q252 2SD1858X  
 Q254 DTA124ES

Q253, Q255 DTC124ES  
 D251, D252 1SS133  
 D253 MTZJ27D  
 D254 MTZJ5.1B

**Mark No. Description****Part No.****CAPACITORS**

C251	CEANP470M25
C254	CEAT101M25
C252, C253	CKPUYF103Z25

**RESISTORS**

All Resistors	RD1/4PU####J
---------------	--------------

**OTHERS**

CN251 3P CONNECTOR	52044-0345
CN254 21P CONNECTOR	52044-2145
CN253 20P SOCKET	KP200TA20L
CN252 3PIN CONNECTOR	S3B-EH

**H TRANS1 ASSY**

TRANS1 ASSY has no service part.

**I VIDEO ASSY  
SEMICONDUCTORS**

IC301	NJM2595M
Q302	2SA1515
Q301	2SC3377
Q303	2SC5938A
D301, D302, D305, D306	1SS355

D307	UDZS5R1(B)
D303, D304	UDZS6R2(B)

**COILS AND FILTERS**

L301-L306 CHIP SOLID INDUCTOR	QTL1013
-------------------------------	---------

**CAPACITORS**

C347	CCSRCH470J50
C307-C310, C312, C314, C338	CEAT470M25
C1360, C302, C379	CKSRYB103K50
C339, C340	CKSRYB104K25
C304-C306	CKSRYB221K50

C333	CKSRYB331K50
C311, C313	CKSRYB473K25

**RESISTORS**

⚠ R313, R316	RS3LMF390J
Other Resistors	RS1/16S####J

**OTHERS**

CN305 5P CONNECTOR	52044-0545
CN303 13P CONNECTOR	52044-1345
JA305 PIN JACK(4P)YELLOW	AKB7100
JA352 CONNECTOR	CKS4124
CN302 7P SOCKET	KP200TA7L

CN301 9P SOCKET	KP200TA9L
390 PCB BINDER	VEF1040
CN306 2P PIN JACK	XKB3041
JA351 MINI JACK(4P) /W SW	XKN3015

**J 5.1CH ASSY  
CAPACITORS**

C342-C345	CCSRCH101J50
C321, C324, C331, C332	CEAT4R7M50
C1364	CKSRYB102K50
C316	CKSRYB103K50
C317, C318, C325, C326	CKSRYB221K50

**Mark No. Description****Part No.****RESISTORS**

All Resistors	RS1/16S####J
---------------	--------------

**OTHERS**

CN307 8P CONNECTOR	52044-0845
CN309 PIN JACK(4P)	XKB3035

**K B TO B ASSY****OTHERS**

CN390, CN391 9P PLUG	KM200TA9
----------------------	----------

**L S. VIDEO ASSY  
SEMICONDUCTORS**

IC351, IC352	NJM2595M
D351-D358	1SS355

**CAPACITORS**

C375, C376, C381-C386	CCSRCH470J50
C352, C355, C358, C361-C363	CEAT470M25
C366	CEAT470M25
C372, C373	CKSRYB103K50
C351, C353, C354, C356, C357	CKSRYB104K25

C359, C367	CKSRYB104K25
C364, C365, C368-C371	CKSRYB221K50

**RESISTORS**

R373, R374	RS1/16S750J
R383, R384	RS1/16S0R0J
Other Resistors	RS1/16S####J

**OTHERS**

CN354 CONNECTOR POST	B5B-PH-K
CN351 9P SOCKET	KP200TA9L
CN352, CN353 SOCKET	XKB3051
CN355 SOCKET	AKP7179

**M FRONT DISPLAY ASSY  
SEMICONDUCTORS**

IC402	GP1UM27XK0VF
IC401	PE5487A
Q484	2SA1037K
Q441, Q442	DTC124EK
D403-D405	1SS355

D401	DAN202K
D500	SLI-343DCW(STU)

**COILS AND FILTERS**

L401	LFEA2R2J
------	----------

**CAPACITORS**

C482, C483	CCSRCH221J50
C481	CCSRCH471J50
C442	CEAL470M10
C403	CEAT221M6R3
C412	CEAT470M50

C415, C454	CKSRYB102K50
C401, C402, C410, C411, C419	CKSRYB103K50
C441	CKSRYB103K50
C418, C421	CKSRYB104K16
C420 (220μF/35V)	XCH3011

5	6	
<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
<b>RESISTORS</b>		
	All Resistors	RS1/16S###J
<b>OTHERS</b>		
471	CABLE HOLDER (3P)	51063-0305
404	CABLE HOLDER (7P)	51063-0705
CN401	17P CONNECTOR	52044-1745
CN402	9P CONNECTOR	52492-0920
V401	FL TUBE	XAV3025
X401	CERAMIC RESONATOR (5 MHz)	VSS1142

## **N** R.ENCODER ASSY SEMICONDUCTORS

D512		SLR-343BBT(FGHJ)
<b>SWITCHES AND RELAYS</b>		
S511		VSG1024
S513	ROTARY ENCODER	XSX3005
S512	ROTARY ENCODER	XSX3006

<b>RESISTORS</b>		
	All Resistors	RS1/16S###J

<b>OTHERS</b>		
511	CABLE HOLDER (7P)	51063-0705

## **O** POWER SW & KEY ASSY SEMICONDUCTORS

D501		SLR-343BBT(FGHJ)
<b>SWITCHES AND RELAYS</b>		
S501-S505	SWITCH	VSG1024
<b>RESISTORS</b>		
	All Resistors	RS1/16S###J

<b>OTHERS</b>		
501	CABLE HOLDER (3P)	51063-0305

## **P** FRONTER KEY ASSY SEMICONDUCTORS

D451-D458		SLI-343DCW(STU)
<b>SWITCHES AND RELAYS</b>		
S451-S470	SWITCH	VSG1024

<b>CAPACITORS</b>		
C451-C453		CKSRYB102K50

<b>RESISTORS</b>		
	All Resistors	RS1/16S###J

## **Q** TRANS4 ASSY SEMICONDUCTORS

△ IC891, IC892	PROTECTOR(800mA)	AEK7008
△ D891		S1WB(A)60SD

7	8	
<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
<b>CAPACITORS</b>		
C891, C892		CEAT471M35
<b>OTHERS</b>		
CN891	3P CONNECTOR	52045-0345

## **R** H.P. ASSY SEMICONDUCTORS

Q1551, Q1552		2SC5938A
<b>CAPACITORS</b>		
C1554, C1557		CCSRCH471J50
C1553, C1556		CKSRYB103K50
C1555, C1558		CKSRYB104K16
C1551, C1552		CKSRYB223K50

<b>RESISTORS</b>		
△ R1553, R1554		RS1LMF151J
△ R1551, R1552		RS2LMF331J
Other Resistors		RS1/16S###J

<b>OTHERS</b>		
1551	6P CABLE HOLDER	51048-0600
JA1551	HEADPHONE JACK	RKB1014
KN1551	EARTH METAL FITTING	VNF1084

## **S** PRE-OUT ASSY CAPACITORS

C1581		CKSRYB103K50
<b>RESISTORS</b>		
	All Resistors	RS1/16S###J

<b>OTHERS</b>		
CN1575	8P CONNECTOR	52045-0845
CN1576	PIN JACK 1-P	AKB7042
1575	PIN JACK(6P)	XKB3033

## **T** DIGITAL INPUT ASSY COILS AND FILTERS

F1901	CHIP BEAD	DTF1067
-------	-----------	---------

<b>CAPACITORS</b>		
C1907, C1909		CCSRCH101J50
C1904		CEAL101M10
C1908		CKSRYB102K50
C1903, C1906		CKSRYB103K50
C1900, C1901, C1905		CKSRYB104K25

<b>RESISTORS</b>		
	All Resistors	RS1/16S###J

<b>OTHERS</b>		
CN1902	CONNECTOR POST	B5B-PH-K
JA1900, JA1901	OPT. LINK IN	GP1FAV51RKB
100	PCB BINDER	VEF1040
CN1901	10P CONNECTOR	VKN1186
KN1901	WRAPPING TERMINAL	VNF1084

## **U** COMPONENT ASSY SEMICONDUCTORS

**Mark No. Description**

IC551  
D551, D552  
D553

**Part No.**

NJM2586AM  
1SS355  
DAN202K

**Mark No. Description**

C1111, C1112  
C1115

**Part No.**

CEAT101M25  
CEAT102M10

**CAPACITORS**

C551, C552  
C567, C568  
C553, C554

CEAT101M10  
CKSRYB103K50  
CKSRYB473K50

**RESISTORS**

All Resistors

RS1/16S###J

**OTHERS**

CN551 5P CONNECTOR  
JA551, JA552 6P RCA PINJACK

52045-0545  
XKB3025

**OTHERS**

CN1101 5P CONNECTOR  
CN1102 SOCKET  
KN1101 SCREW PLATE

52045-0745  
AKP7045  
VNE1948

**V FRONT INPUT ASSY  
SEMICONDUCTORS**

IC951  
D951-D953

UPC4570G2  
UDZS5R1(B)

**X FM/AM TUNER UNIT**

FM/AM TUNER UNIT has no service part.

**COILS AND FILTERS**

F951 CHIP BEAD

DTF1067

**6. ADJUSTMENT**

There is no information to be shown in this chapter.

**CAPACITORS**

C901, C902, C915, C916, C960  
C965  
C952, C959  
C903, C905  
C956, C958, C963, C966, C967

CCSRCH101J50  
CCSRCH330J50  
CCSRCH471J50  
CEAL470M25  
CEAT100M50

C908, C911, C914, C953, C957  
C962  
C904, C906, C909, C912  
C950, C951, C954  
C907, C910, C913

CKSRYB103K50  
CKSRYB103K50  
CKSRYB104K25  
CKSRYB104K25  
CKSRYB471K50

**RESISTORS**

All Resistors

RS1/16S###J

**OTHERS**

CN952 CONNECTOR 5P  
CN951 CONNECTOR POST  
CN901 CONNECTOR  
JA951 OPTICAL IN MOD.  
JA952 JACK  
KN951 WRAPPING TERMINAL  
JA902 PIN JACK(4P)

52045-0545  
B5B-PH-K  
B8B-PH-K  
GP1FM513RZ  
RKN1004  
VNF1084  
XKX3003

**W VIDEO CONVERTER ASSY  
SEMICONDUCTORS**

IC1104  
IC1102, IC1103  
IC1101  
Q1101  
D1101, D1102

LA7213  
NJM2243M  
TK15420M  
UN5212  
1SS355

**COILS AND FILTERS**

L1101 3 COMBINATION FILTER  
L1102 2 COMBINATION FILTER

XTF3005  
XTF3006

**CAPACITORS**

C1117, C1118  
C1103, C1104, C1107, C1119, C1121  
C1126

CCSRCH181J50  
CEAT101M16  
CEAT101M16





# 7. GENERAL INFORMATION

## 7.1 DIAGNOSIS

### 7.1.1 DISASSEMBLY

**Note:** Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

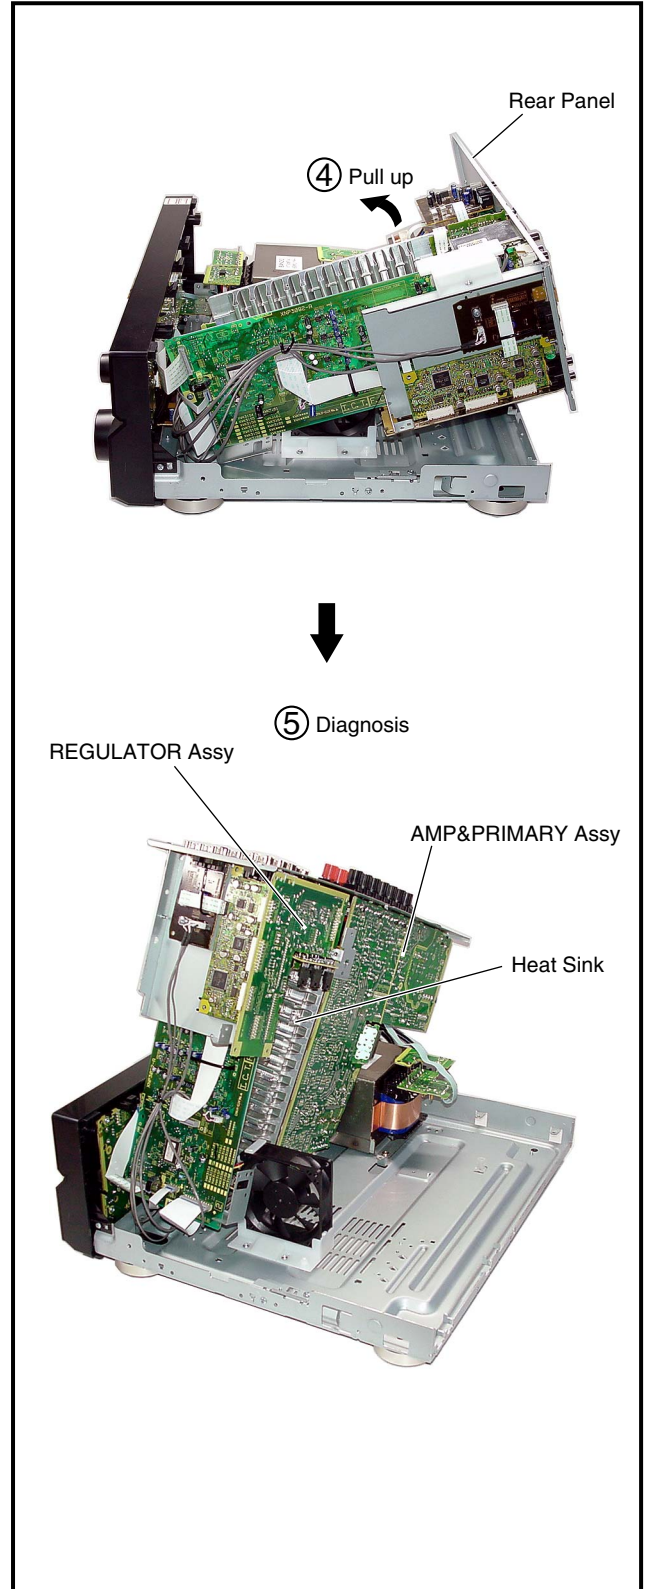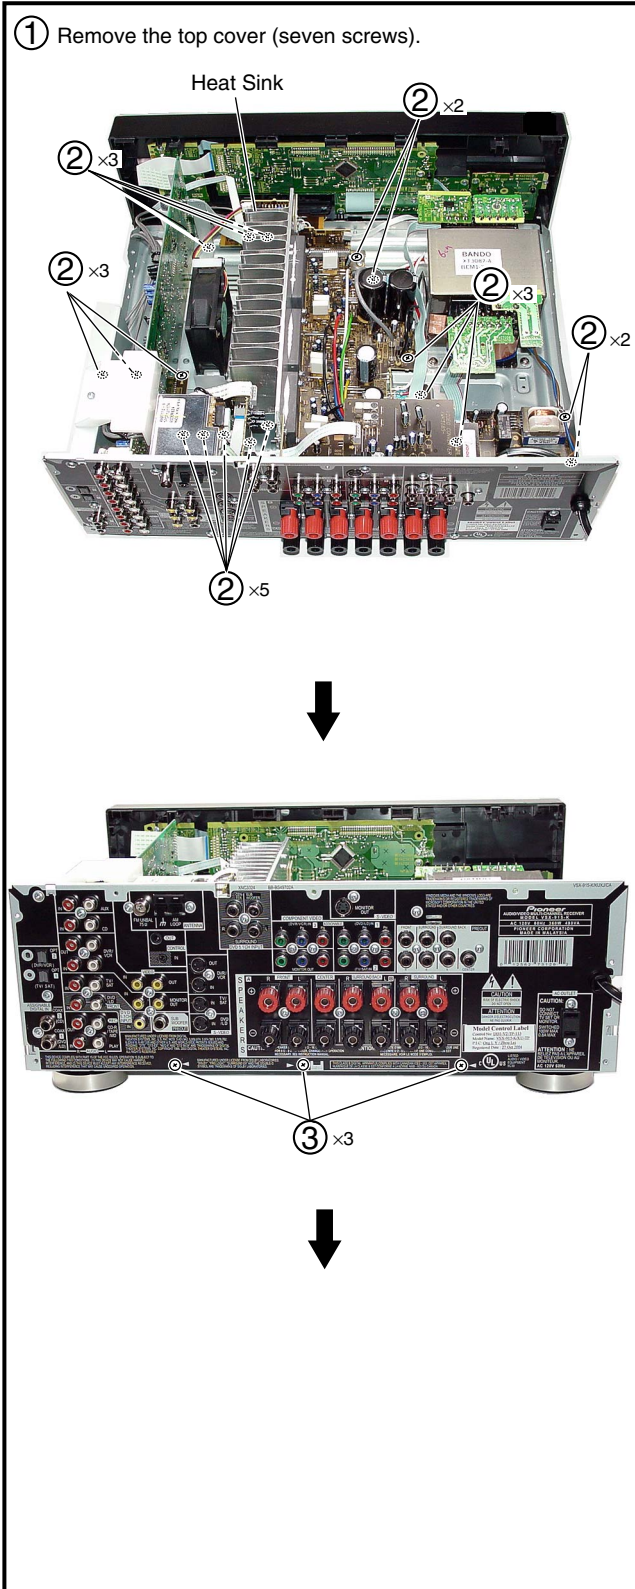

Note : The unit does not operate when the screws of Speaker Terminal are taken off from Rear Panel.

**Heat-sink caution in the disassembling :** Because Heat-sink becomes hot, please pay attention.

A


B

C

D

E

F

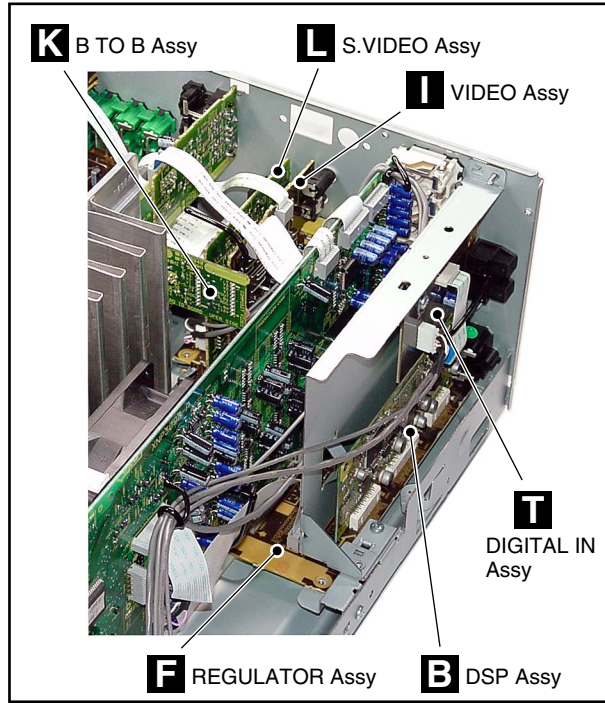

**W** VIDEO CONVERTER Assy

**X** FM/AM TUNER UNIT

**S** PRE-OUT Assy

**U** COMPONENT Assy

**C** AMP&PRIMARY Assy

**J** 5.1CH Assy

**D** TRANS 2 Assy

**A** MAIN Assy

**G** AMP INPUT Assy

**V** FRONT INPUT Assy

**H** TRANS 1 Assy

**E** TRANS 3 Assy

**Q** TRANS 4 Assy

**R** H.P. Assy

**O** POWER. SW & KEY Assy

**P** FRONT KEY Assy

**N** R. ENCODER Assy

**M** FRONT DISPLAY Assy

NOTE : This photograph is VSX-915-K.



# 7.2 PARTS

## 7.2.1 IC

The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


### List of IC

PEG094B, PE5487A

### PEG094B (MAIN ASSY : IC9001)

#### System Control MCU

#### Pin Arrangement (Top View)

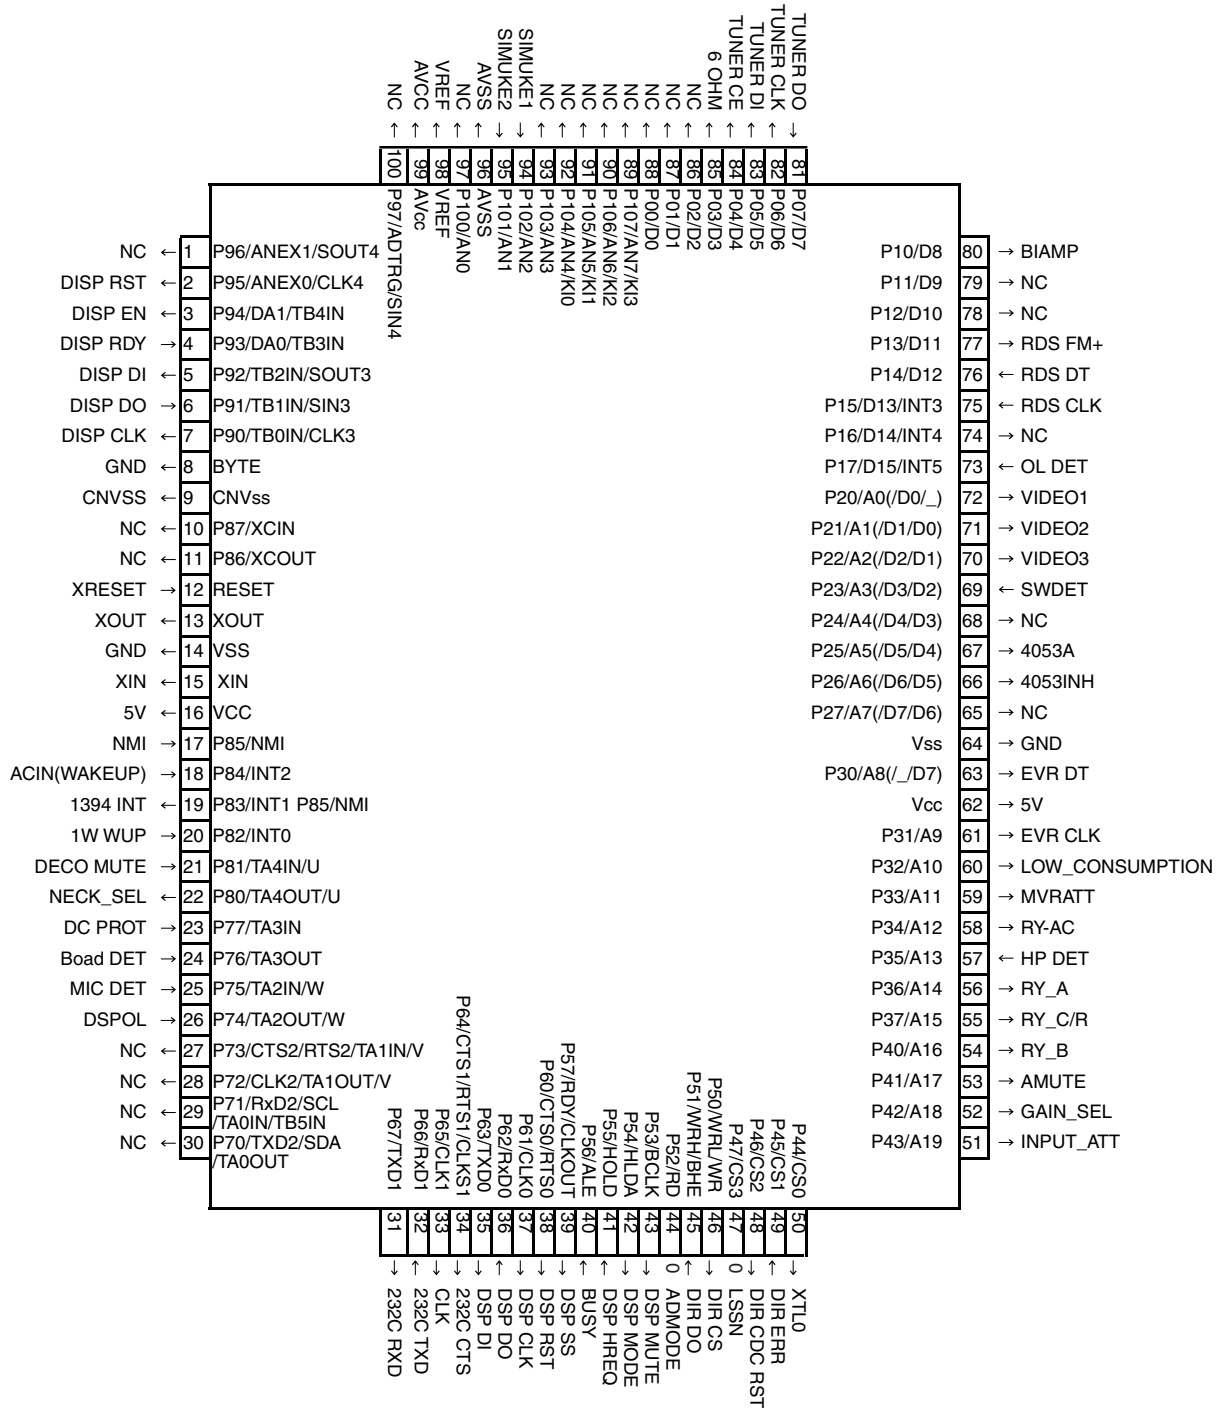

## • Pin Function

No.	Port	Pin Name	I/O	Pin Function
A 1	P96/ANEX1/SOUT4	NC	I/O	
2	P95/ANEX0/CLK4	DISP RST	I/O	Reset signal to display u-com
3	P94/DA1/TB4IN	DISP EN	I/O	Enable signal to display u-com
4	P93/DA0/TB3IN	DISP RDY	I/O	Ready signal from display u-com
5	P92/TB2IN/SOUT3	DISP DI	I/O	Data out to display u-com
6	P91/TB1IN/SIN3	DISP DO	I/O	Data input from display u-com
7	P90/TB0IN/CLK3	DISP CLK	I/O	Clock signal to display u-com
8	BYTE	GND		
9	CNV <sub>ss</sub>	CNVSS		
B 10	P87/XCIN	NC	I/O	
11	P86/XCOUT	NC	I/O	
12	RESET	XRESET		
13	XOUT	XOUT		
14	VSS	GND		
15	XIN	XIN		
16	VCC	5V		
17	P85/NMI	NM	I	No use
18	P84/INT2	ACIN(WAKEUP)	I/O	AC pulse input
19	P83/INT1 P85/NMI	1394 INT	I/O	No use (Standby for 1394)
20	P82/INT0	1W WUP	I/O	Wake up signal from display u-com
C 21	P81/TA4IN/U	DECO MUTE	I/O	1st DSP detect port
22	P80/TA4OUT/U	NECK_SEL	I/O	5.1ch, surround mode and A+B Stereo : H / Stereo : L
23	P77/TA3IN	DC PROT	I/O	AMP DC detect
24	P76/TA3OUT	Boad DET	I/O	AMP INPUT ASSY detect, H : detected
25	P75/TA2IN/W	MIC DET	I/O	MIC detect (VSX-D914 only), L : detect
26	P74/TA2OUT/W	DSP OL	I/O	ANALOG OVER LOAD detect, H : detected
27	P73/CTS2/RTS2/TA1IN/V	NC(1394 CS)	I/O	No use (Standby for 1394)
28	P72/CLK2/TA1OUT/V	NC(1394 CK)	I/O	No use (Standby for 1394)
29	P71/RxD2/SCL/TA0IN/TB5IN	NC(1394 DO)	I/O	No use (Standby for 1394)
30	P70/TXD2/SDA/TA0OUT	NC(1394 DI)	I/O	No use (Standby for 1394)
D 31	P67/TXD1	232C RXD	I/O	For rewriting 232C (Data output)
32	P66/RxD1	232C TXD	I/O	For rewriting 232C (Data input)
33	P65/CLK1	CLK	I/O	It is necessary when writing for JIG
34	P64/CTS1/RTS1/CLKS1	232C CTS	I/O	For rewriting 232C (Admit communication)
35	P63/TXD0	DSP DI	I/O	Data output signal for communication with DSP and DIR
36	P62/RxD0	DSP DO	I/O	Data input signal for communication with DSP
37	P61/CLK0	DSP CLK	I/O	Clock signal for communication with DSP and DIR
38	P60/CTS0/RTS0	DSP RST	I/O	Reset signal for DSP
39	P57/RDY/CLKOUT	DSP SS	I/O	Srobe select signal to DSP
E 40	P56/ALE	BUSY	I/O	Use it in MCACC
41	P55/HOLD	DSP HREQ	I/O	DSP error detect signal
42	P54/HLDA	DSP MODE	I/O	Mode select of DSP (ROM/RAM)
43	P53/BCLK	DSP MUTE	I/O	DSP ASSY mute
44	P52/RD	ADMODE	0	DSP ASSY
45	P51/WRH/BHE	DIR DO	I/O	Data input signal for communication with DIR/DAC
46	P50/WRL/WR	DIR CS	I/O	Chip select signal for communication with DIR/DAC
47	P47/CS3	LSSN	0	DSP ASSY
48	P46/CS2	DIR CDC RST	I/O	Reset signal for DIR CODEC
49	P45/CS1	DIR ERR	I/O	lock/unlock signal
F 50	P44/CS0	XTL0	I/O	DIR X'tal change

### • Pin Function


No.	Port	Pin Name	I/O	Pin Function
51	P43/A19	INPUT_ATT	I/O	Analog input ATT(H : ATT ON)
52	P42/A18	GAIN_SEL	I/O	Gain select (5.1ch and Stereo of analog input : H )
53	P41/A17	AMUTE	I/O	System mute
54	P40/A16	RY_B	I/O	Speaker B relay ON/OFF
55	P37/A15	RY_C/R	I/O	Rear/Center Speaker relay ON/OFF
56	P36/A14	RY_A	I/O	Speaker A relay ON/OFF
57	P35/A13	HP DET	I/O	HP detect, H : detected
58	P34/A12	RY-AC	I/O	AC relay ON/OFF
59	P33/A11	MVRATT	I/O	ATT control of master volume (less than -15dB : L)
60	P32/A10	LOW_CONSUMPTION	I/O	If stop mode, port L, else H
61	P31/A9	EVR CLK	I/O	Clock signal for Function and E-volume
62	Vcc	5V		
63	P30/A8(/_D7)	EVR DT	I/O	Data signal for Function and E-volume
64	Vss	GND		
65	P27/A7(/D7/D6)	NC	I/O	
66	P26/A6(/D6/D5)	4053INH	I/O	Component terminal control
67	P25/A5(/D5/D4)	4053A	I/O	Component terminal control
68	P24/A4(/D4/D3)	NC	I/O	
69	P23/A3(/D3/D2)	SWDET	I/O	SWSP detect
70	P22/A2(/D2/D1)	VIDEO3	I/O	SWSP detect
71	P21/A1(/D1/D0)	VIDEO2	I/O	SWSP detect
72	P20/A0(/D0/_)	VIDEO1	I/O	NJM2296 control (VIDEO input select)
73	P17/D15/INT5	OL DET	I/O	Detect overload of AMP
74	P16/D14/INT4	NC	I/O	
75	P15/D13/INT3	RDS CLK	I/O	Clock input signal for RDS module
76	P14/D12 RDS	DT	I/O	Data input signal for RDS module
77	P13/D11 RDS	FM+	I/O	Power ON/OFF of RDS decoder
78	P12/D10	NC	I/O	
79	P11/D9	NC	I/O	
80	P10/D8	BIAMP	I/O	At the time of BiAMP: L and time of Normal:H
81	P07/D7	TUNER DO	I/O	Data input signal for tuner control
82	P06/D6	TUNER CLK	I/O	Clock signal for tuner control
83	P05/D5	TUNER DI	I/O	Data output signal for tuner control
84	P04/D4	TUNER CE	I/O	Chip select signal for tuner control
85	P03/D3	6 OHM	I/O	If stop mode, port L, else L/H depends on selection.
86	P02/D2	NC	I/O	
87	P01/D1	NC	I/O	
88	P00/D0	NC	I/O	
89	P107/AN7/KI3	NC	I/O	
90	P106/AN6/KI2	NC	I/O	
91	P105/AN5/KI1	NC	I/O	
92	P104/AN4/KI0	NC	I/O	
93	P103/AN3	NC	I/O	
94	P102/AN2	SIMUKE1	I/O	Input 1 to switch region
95	P101/AN1	SIMUKE2	I/O	Input 2 to switch region
96	AVSS	AVSS		Connect to VSS
97	P100/AN0	NC	I/O	
98	VREF	VREF		Connect to VCC
99	AVcc	AVCC		Connect to VCC
100	P97/ADTRG/SIN4	NC	I/O	

# PE5487A (FRONT DISPLAY ASSY : IC401)

## System Control MCU

### Pin Arrangement (Top View)

A  
B  
C  
D  
E  
F

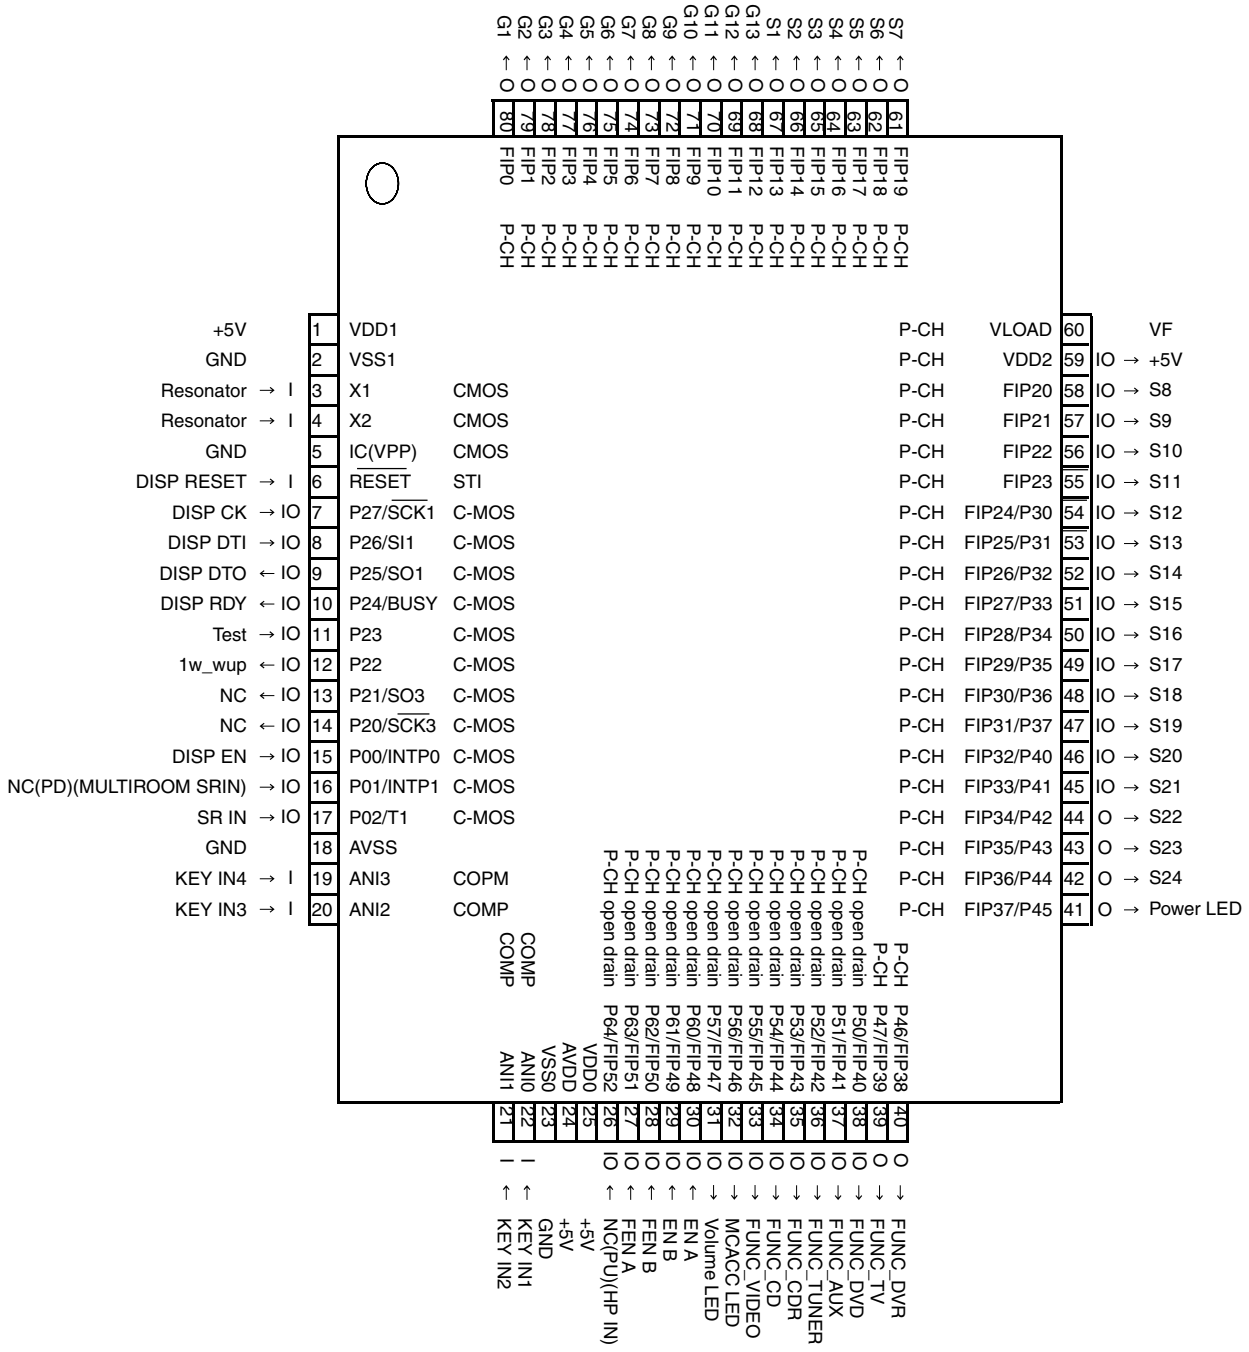

## • Pin Function

No.	Port	Pin Name	I/O	Pin Function
1	VDD1	+5V	-	positive power supply
2	VSS1	GND	-	ground potential
3	X1	Resonator	I	crystal connection for system clock oscillation
4	X2	Resonator	-	crystal connection for system clock oscillation
5	IC(VPP)	GND	-	
6	RESET	DISP RESET	I	receive reset signal from main u-com
7	P27/SCK1	DISP CK	I/O	clock signal from main u-com
8	P26/SI1	DISP DTI	I/O	datain from main u-com
9	P25/SO1	DISP DTO	I/O	data out to main u-com
10	P24/BUSY	DISP RDY	I/O	ready signal from main u-com
11	P23	Test	I/O	test mode input for checker
12	P22	1w_wup	I/O	output wakeup signal to main u-com
13	P21/SO3	NC	I/O	
14	P20/SCK3	NC	I/O	
15	P00/INTP0	DISP EN	I/O	enable signal from main u-com
16	P01/INTP1	NC	I/O	
17	P02/T1	SR IN	I/O	remote control signal input from main room
18	AVSS	GND	-	ground potential for A/D converter
19	ANI3	KEY IN4	I	
20	ANI2	KEY IN3	I	
21	ANI1	KEY IN2	I	
22	ANI0	KEY IN1	I	
23	VSS0	GND	-	ground potential for ports
24	AVDD	+5V	-	analog power voltage input to A/D converter
25	VDD0	+5V	-	positive power supply to ports
26	P64/FIP52	NC	I/O	
27	P63/FIP51	FEN A	I/O	MULTI JOG(Right)
28	P62/FIP50	FEN B	I/O	MULTI JOG(Left)
29	P61/FIP49	EN B	I/O	VOLUME JOG1(-)
30	P60/FIP48	EN A	I/O	VOLUME JOG1(+)
31	P57/FIP47	VOLUME LED	I/O	VOLUME LED Output
32	P56/FIP46	MCACC LED	I/O	MCACC LED Output
33	P55/FIP45	FUNC_VIDEO	I/O	FUNCLED Output
34	P54/FIP44	FUNC_CD	I/O	FUNCLED Output
35	P53/FIP43	FUNC_CDR	I/O	FUNCLED Output
36	P52/FIP42	FUNC_TUNER	I/O	FUNCLED Output
37	P51/FIP41	FUNC_AUX	I/O	FUNCLED Output
38	P50/FIP40	FUNC_DVD	I/O	FUNCLED Output
39	P47/FIP39	FUNC_TV	O	FUNCLED Output
40	P46/FIP38	FUNC_DVR	O	FUNCLED Output

• Pin Function


No.	Port	Pin Name	I/O	Pin Function
A 41	FIP37/P45	POWER LED	O	Power On LED Output
42	FIP36/P44	S24	O	Display
42	FIP35/P43	S23	O	Display
44	FIP34/P42	S22	O	Display
45	FIP33/P41	S21	O	Display
46	FIP32/P40	S20	O	Display
47	FIP31/P37	S19	O	Display
48	FIP30/P36	S18	O	Display
49	FIP29/P35	S17	O	Display
50	FIP28/P34	S16	O	Display
B 51	FIP27/P33	S15	O	Display
52	FIP26/P32	S14	O	Display
53	FIP25/P31	S13	O	Display
54	FIP24/P30	S12	O	Display
55	FIP23	S11	O	Display
56	FIP22	S10	O	Display
57	FIP21	S9	O	Display
58	FIP20	S8	O	Display
59	VDD2	+5V	-	positive power supply to FIP controller.
60	VLOAD	VF	-	pull down resistor connection of FIP controller
C 61	FIP19	S7	O	Display
62	FIP18	S6	O	Display
63	FIP17	S5	O	Display
64	FIP16	S4	O	Display
65	FIP15	S3	O	Display
66	FIP14	S2	O	Display
67	FIP13	S1	O	Display
68	FIP12	G13	O	Display
69	FIP11	G12	O	Display
70	FIP10	G11	O	Display
D 71	FIP9	G10	O	Display
72	FIP8	G9	O	Display
73	FIP7	G8	O	Display
74	FIP6	G7	O	Display
75	FIP5	G6	O	Display
76	FIP4	G5	O	Display
77	FIP3	G4	O	Display
78	FIP2	G3	O	Display
79	FIP1	G2	O	Display
E 80	FIP0	G1	O	Display



# 7.3 EXPLANATION

## 7.3.1 POWER ON AND OFF INITIAL TIMING CHART


POWER ON INITIAL TIMING CHART

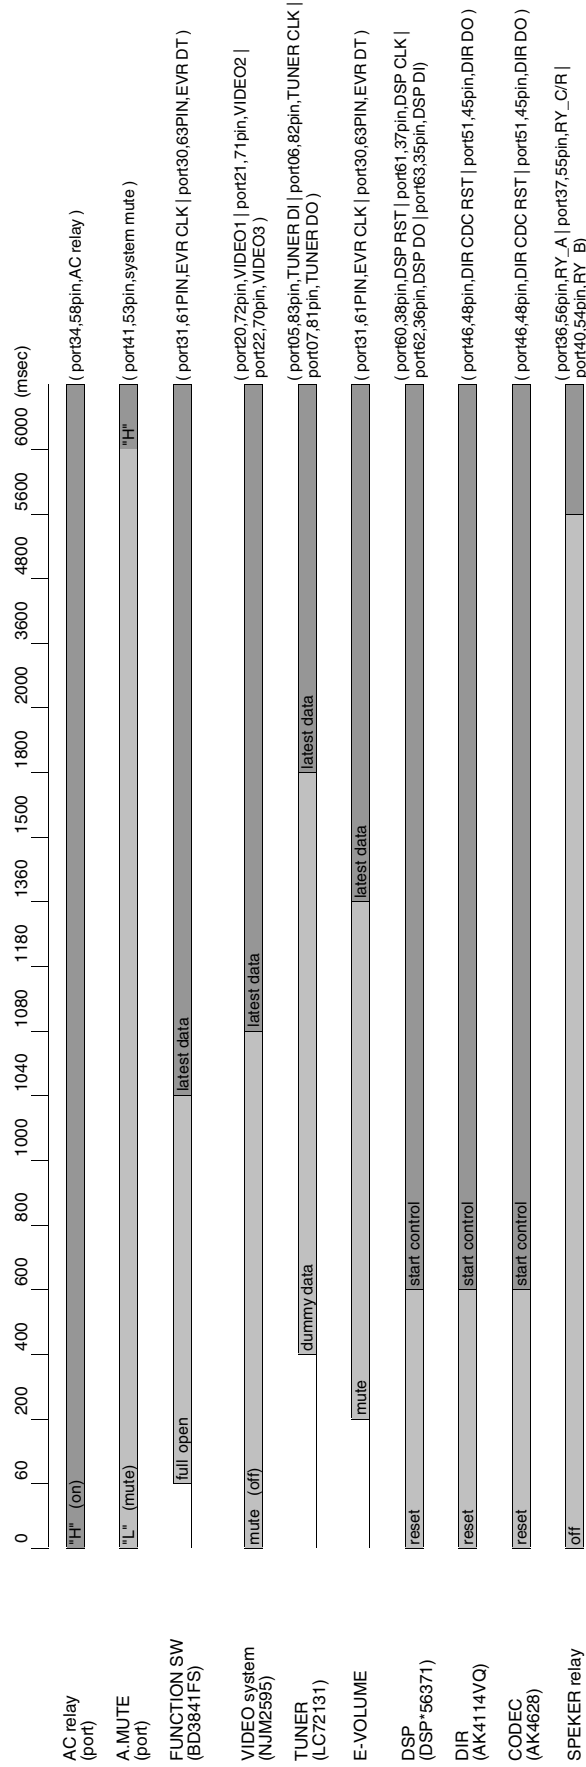

A: SW OPEN MUTE SEQUENCE  
 B: SW NO OPEN MUTE SEQUENCE  
 C: SW NO OPEN MUTE SEQUENCE

### POWER OFF INITIAL TIMING CHART

A



AC relay (port) "H" "L" ( port34,58pin,AC relay )

A.MUTE (port) "L" ( port41,53pin,system mute )

FUNCTION SW (BD3841FS) full open ( port31,61PIN,EVR CLK | port30,63PIN,EVR DT )

B

VIDEO system (NJM2595) mute ( port20,72pin,VIDEO1 | port21,71pin,VIDEO2 | port22,70pin,VIDEO3 )

(LC72131) mute ( port05,83pin,TUNER DI | port06,82pin,TUNER CLK | port07,81pin,TUNER DO )

E-VOLUME (BD3813FS) mute ( port31,61PIN,EVR CLK | port30,63PIN,EVR DT )

DSP (DSP\*58387) \_\_\_\_\_ ( port60,38pin,DSP RST | port61,37pin,DSP CLK | port62,36pin,DSP DO | port63,35pin,DSP DI)

C

DIR (AK4114VQ) \_\_\_\_\_ ( port46,48pin,DIR CDC RST | port51,45pin,DIR DO )

CODEC (AK4628) \_\_\_\_\_ ( port46,48pin,DIR CDC RST | port51,45pin,DIR DO )

SPEKER relay (port) off ( port36,56pin,RY\_A | port37,55pin,RY\_C/R | port40,54pin,RY\_B)

SW DETECT \_\_\_\_\_

OVERLOAD \_\_\_\_\_

D

AMP ERROR DETECT \_\_\_\_\_


BOARD ERROR DETECT \_\_\_\_\_

E

F

■ IC data transmission timing chart

1. When function change

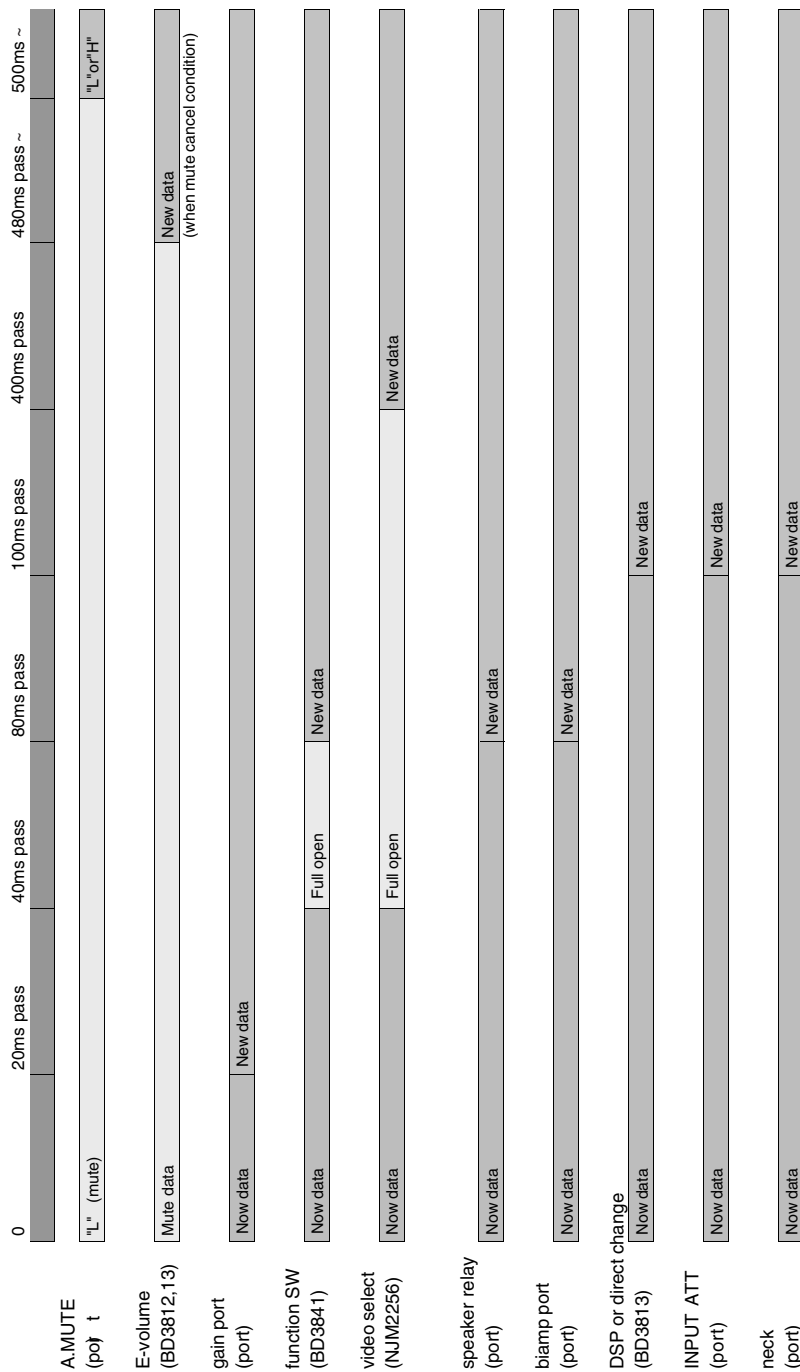

condition of mute cancel (system mute & E-volume mute)

- 1) when tuner mute during Tuner function
- 2) when communicate to DSP
- 3) when initial processing
- 4) when detect trouble of AMP DC
- 5) when detect overload of AMP
- 6) when Power off
- 7) when muting by key input

A

B


C

D

E

F

2. When except function change

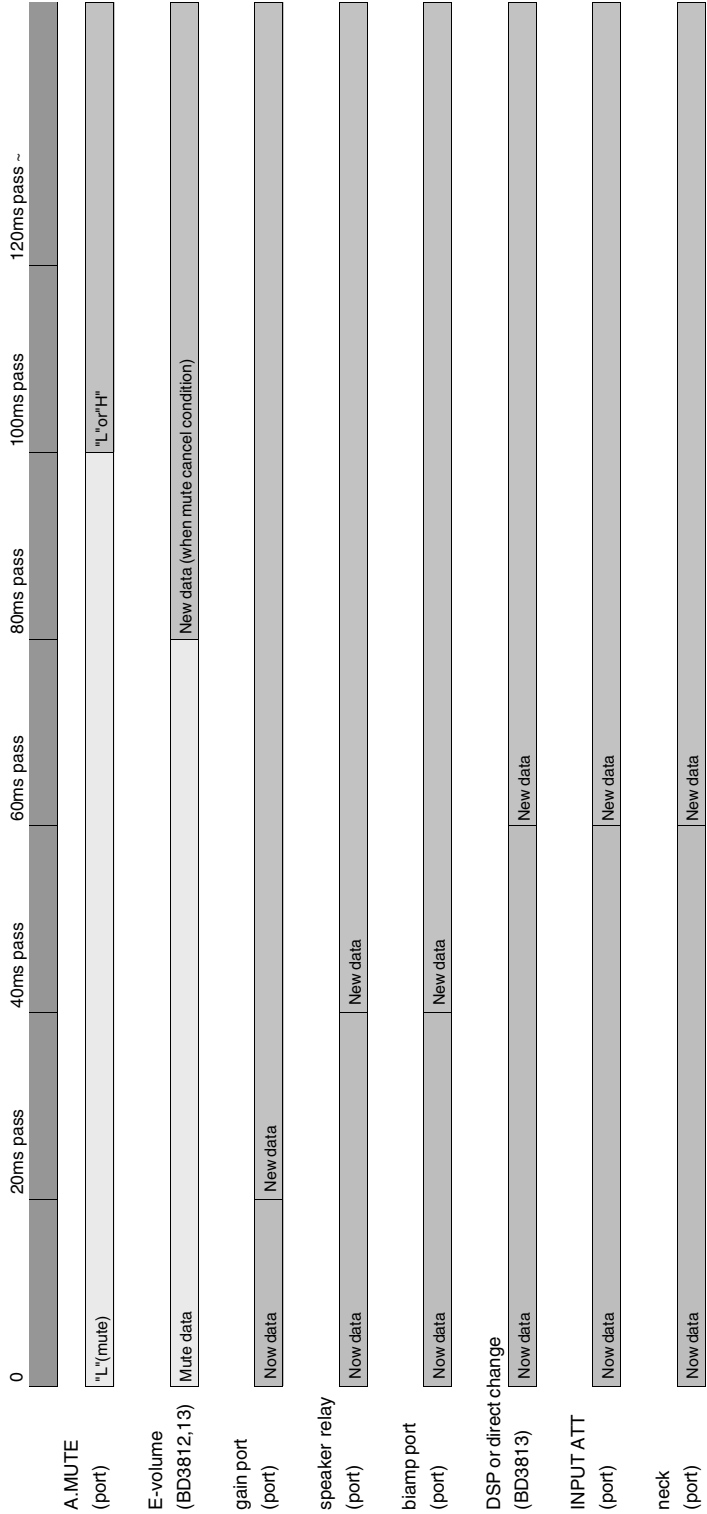

condition of mute cancel (system mute & E-volume mute)

- 1) when tuner mute during Tuner function
- 2) when communicate to DSP
- 3) when initial processing
- 4) when detect trouble of AMP DC
- 5) when detect overload of AMP
- 6) when Power off
- 7) when muting by key input


3. When except function change(case 2)

	0	20ms pass	40ms pass	80ms pass	100ms pass	400ms pass	480ms pass ~	500ms pass ~	520ms pass ~
A.MUTE (port)	"L" or "H"								
E-volume (BD3812, 13)	Mute data								
gain port (port)	New data								
function SW (BD3841)	New data								
speaker relay (port)	New data								
biamp port (port)	New data								
DSP or direct change (BD3813)	New data								
INPUT ATT (port)	New data								
neck (port)	New data								


- (1) When standard mode change.
- (2) When listening mode change.
- (3) When surround back ch change.
- (4) When "dolby\_set\_with\_mete" function call.

# 7.3.3 DETECTION CIRCUIT


1. DC Detection Circuit Diagram:

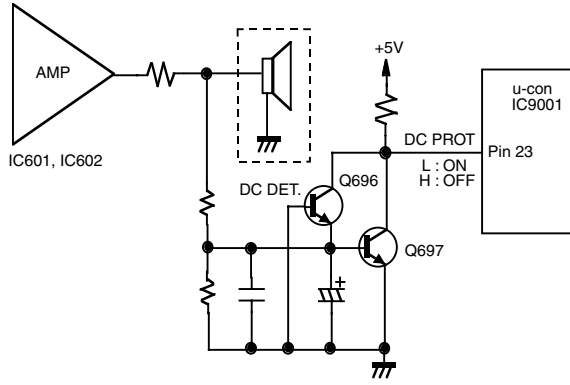


2. Overload Detection Circuit Diagram:

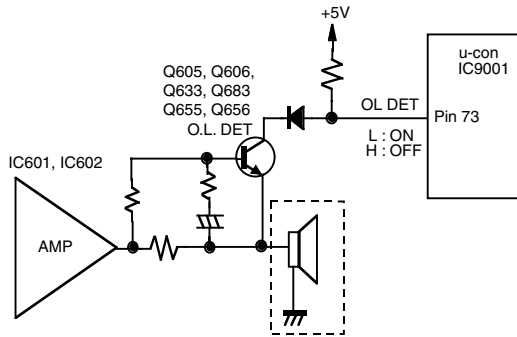

3. Fan Stop Protection Circuit Diagram:

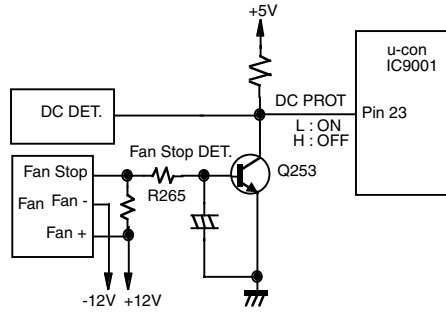

4. PCB Board Protection Circuit Diagram

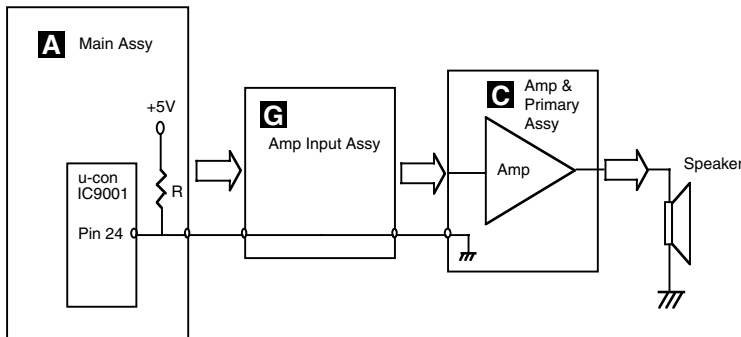



## 7.3.4 AMPLIFIER SYSTEM PROTECTION OPERATION SPECIFICATION


### 1. DC-abnormality detection

DC detection is only enabled 2 seconds after power-on.

If there is a fault in the power amplifier or a high-level signal lower than 5 Hz is input, the DC\_DET port becomes "L".

If the "L" is detected, the microprocessor will perform as following flow chart.

In the case of simultaneous detection with the overload protection circuit, DC-abnormality detection is performed preferentially to overload detection.

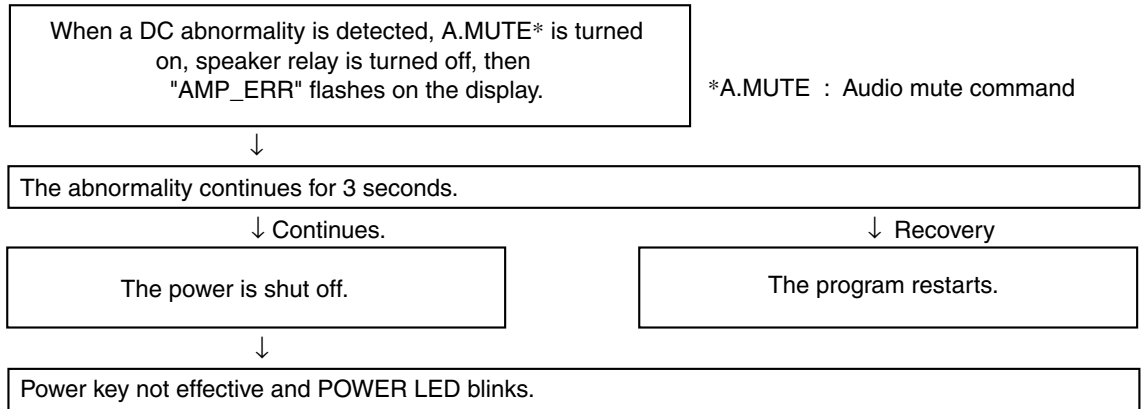

\*A.MUTE : Audio mute command

However, when the following keys are pushed so that the key input of a line and the service can be carried out, power can be on. (If don't push these key, need to wait 1 min then power can be on again.)

① TESTMODE ON (A55F+A55F)


② When power off, push FRONT ENTER key + ADVANCED SURROUND key continuously 2sec.

(②: When a DC abnormality is detected and the power is shut off.)

### 2. Overload detection

If the speaker terminals are short-circuited or low-load driving is detected, the OL\_DET port becomes "L".


If the "L" is detected, the microprocessor will perform as following flow chart.

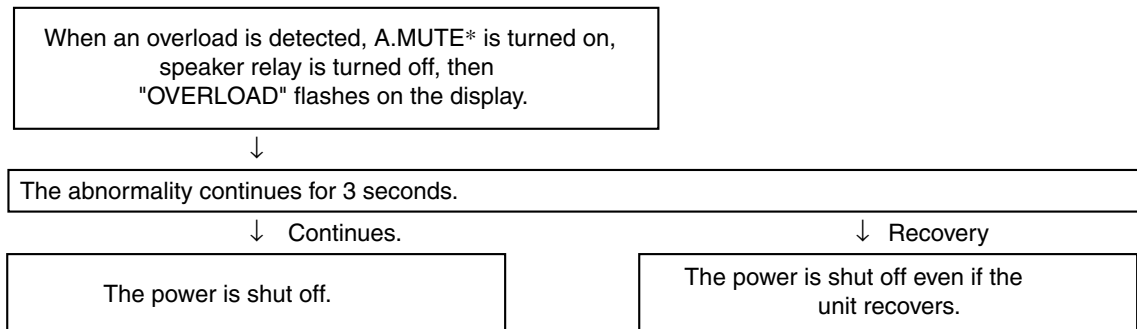

### 3. Board detection


If the board connection from Main Ass'y to Amp&Primary Ass'y is interrupted, the BOARD\_DET port becomes "H".  
If the "H" is detected, the microprocessor will perform as following flow chart.

In the case of simultaneous detection with the overload protection circuit, Board detection is performed preferentially to DC-abnormality detection and Overload detection.

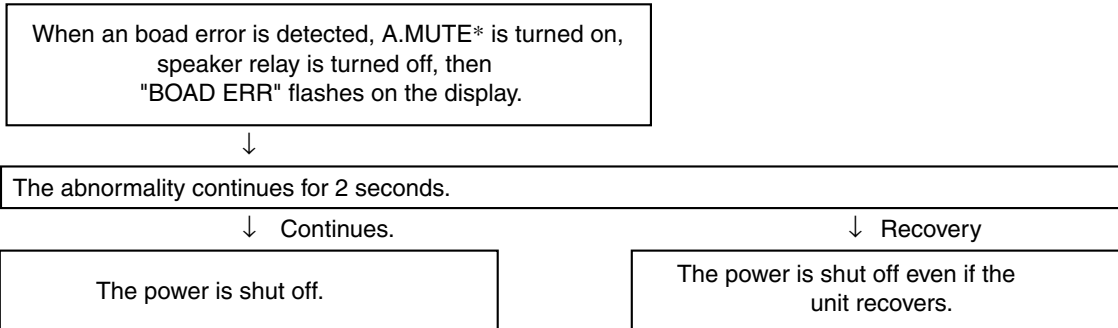

### 4. Fan stop detection operation flow in the DC abnormality detection

If the fan is forcibly stopped, the 'DC PROT' port becomes "L". Then an abnormality of fan is detected.

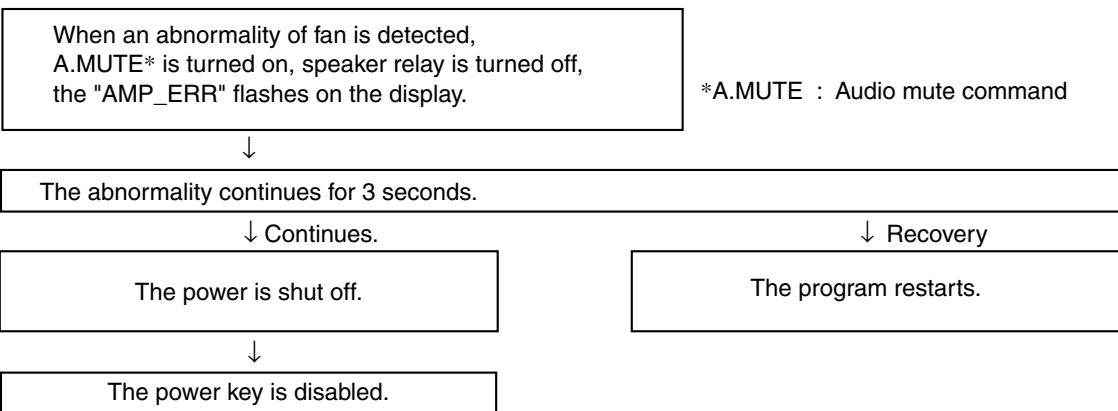

However, when the following keys are pushed so that the key input of a line and the service can be carried out, power can be on.

- ① TESTMODE ON (A55F+A55F)
- ② When power off, push FRONT ENTER key + ADVANCED SURROUND key continuously 2sec.  
(Effective, only when power-off is carried out by DC detection)

## 7.3.5 AMPLIFIER FAILURE DIAGNOSIS FLOW CHART

### ■ Amplifier failure diagnosis flow chart

When DC detection is activated ("AMP\_ERR" flashes on the display), failure (damage) of the power amplifier section is considered.

As DC detection and fan stop protection circuits commonly use same abnormality detection port in microprocessor, please make sure that the operation of fan motor is in normal condition before proceeding to the troubleshooting of amplifier.

#### **Caution:**

When release the lock state of power key before repair, please be careful because there is the possibility that more damages will occur when turns on the power once again!

- According to a symptom, perform the following confirmation beforehand.

- 1) Is the operation of fan motor in normal condition?
- 2) Are there any Fuses and IC protectors open?
- 3) After turn on the power, confirm that the supply voltage of the point that can be measured is appropriate.
- 4) Whether the voltage of pin3 of IC601 or IC602 is equal to (VL-0.7V). If not (eg, equal to VH), then change the corresponding power pack IC601 or IC602.
- 5) Furthermore, check the output DC voltage of each channel of power pack IC601 and IC602 to limit the failure channel and identify the defect power pack.

- After identify the failure channel, check that each part is not damaged (resistor, diode... etc. value / open / short)

## 7.4 CLEANING



Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools:

Position to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

# 8. PANEL FACILITIES

1

2

3

4


A Front panel

B

C

D

F

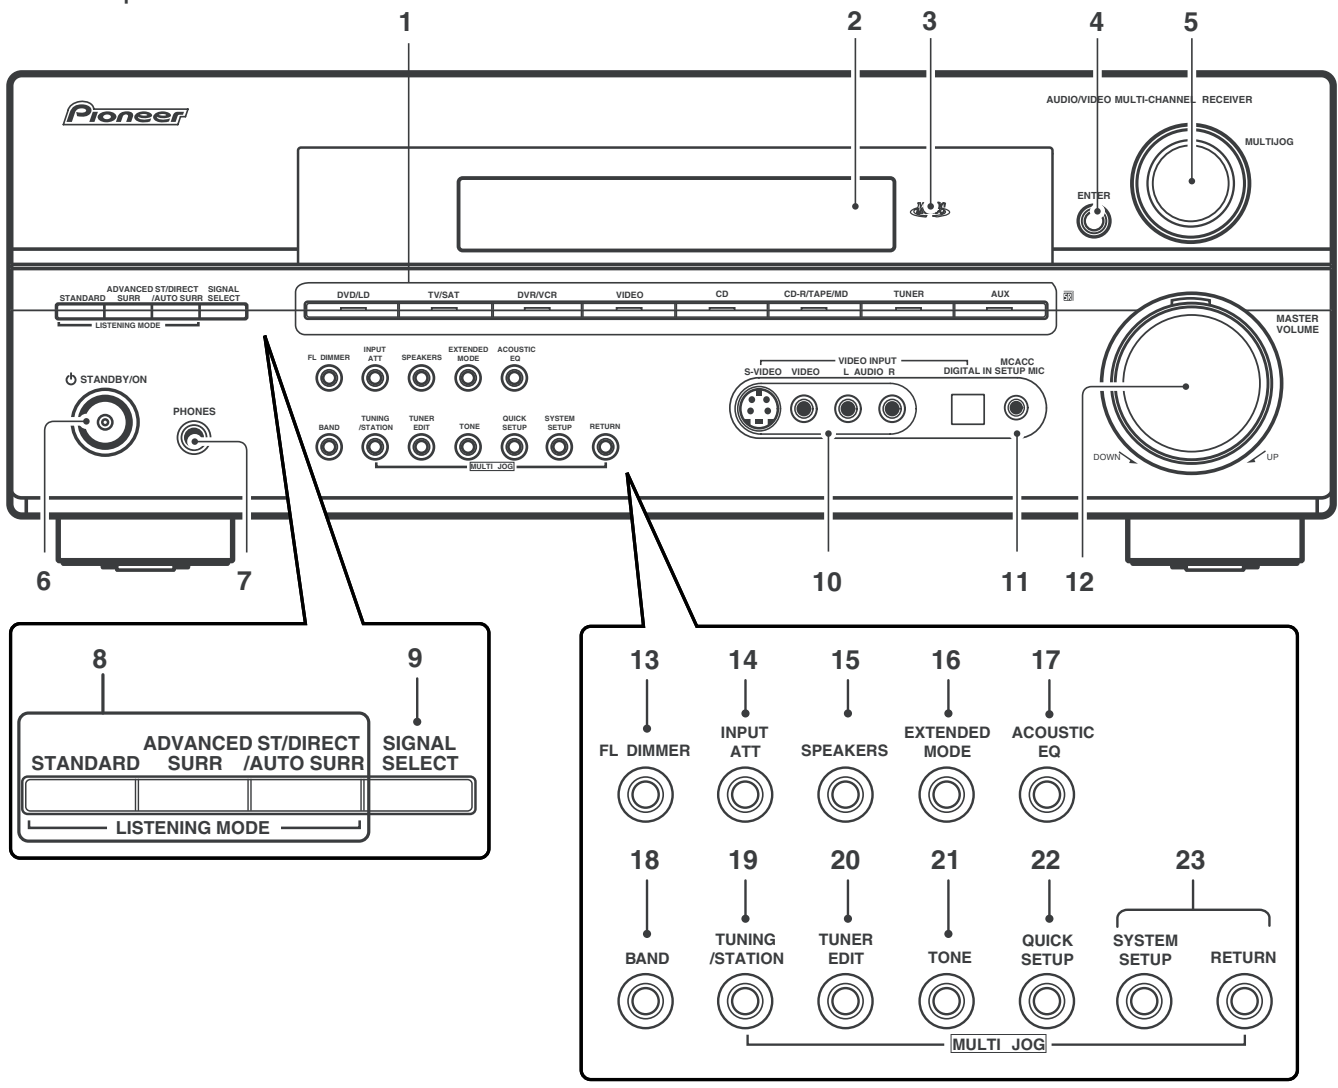

**1 Input select buttons**

Press to select an input source.

**2 Character display**

See Display.

**3 MCACC indicator**

Lights when Acoustic Calibration EQ is on (Acoustic Calibration EQ is automatically set to **ALL CH ADJUST** after the Auto MCACC Setup or EQ Auto Setup is complete).

**4 ENTER**

**5 MULTI JOG dial**

Use the **MULTI JOG** dial to select various settings and menu options.

**6 STANDBY/ON**

Switches the receiver between on and standby.

1

2

3

4

**7 PHONES jack**

Use to connect headphones. When the headphones are connected, there is no sound output from the speakers.

**8 LISTENING MODE buttons**

**STANDARD**

Press for Standard decoding and to switch between the various Pro Logic IIx and Neo:6 options.

**ADVANCED SURROUND**

Use to switch between the various surround modes.

**STEREO/DIRECT (AUTO SURR)**

Switches between direct and stereo playback. Direct playback bypasses the tone controls and any other signal processing for the most accurate reproduction of a source. Also selects the Auto Surround mode (Auto playback).

**9 SIGNAL SELECT**

Use to select an input signal.

**10 VIDEO INPUT**

See Connecting to the front panel video terminal.

**11 MCACC SETUP MIC jack**

Use to connect the supplied microphone.

**12 MASTER VOLUME dial**

**13 FL DIMMER**

Dims or brightens the display.

**14 INPUT ATT**

Attenuates (lowers) the level of an analog input signal to prevent distortion.

**15 SPEAKERS**

Use to change the speaker system and to change the impedance setting.

**16 EXTENDED MODE**

Selects the surround back channel mode or virtual surround back mode.

**17 ACOUSTIC EQ**

Press to select an Acoustic Calibration EQ setting.

**18 BAND**

Switches between the tuner AM and FM bands.

**19 TUNING / STATION buttons**

Selects the frequency and station presets when using the tuner.

**20 TUNER EDIT**

Press to memorize and name a station for recall.

**21 TONE**

Press this button to access the bass and treble controls, which you can then adjust with the MULTI JOG dial.

**22 QUICK SETUP**

See Using the Quick Setup.


**23 System Setup menu controls**

**SYSTEM SETUP**


Use with the MULTI JOG dial to access the System Setup menu.

**RETURN**

Press to confirm and exit the current menu.

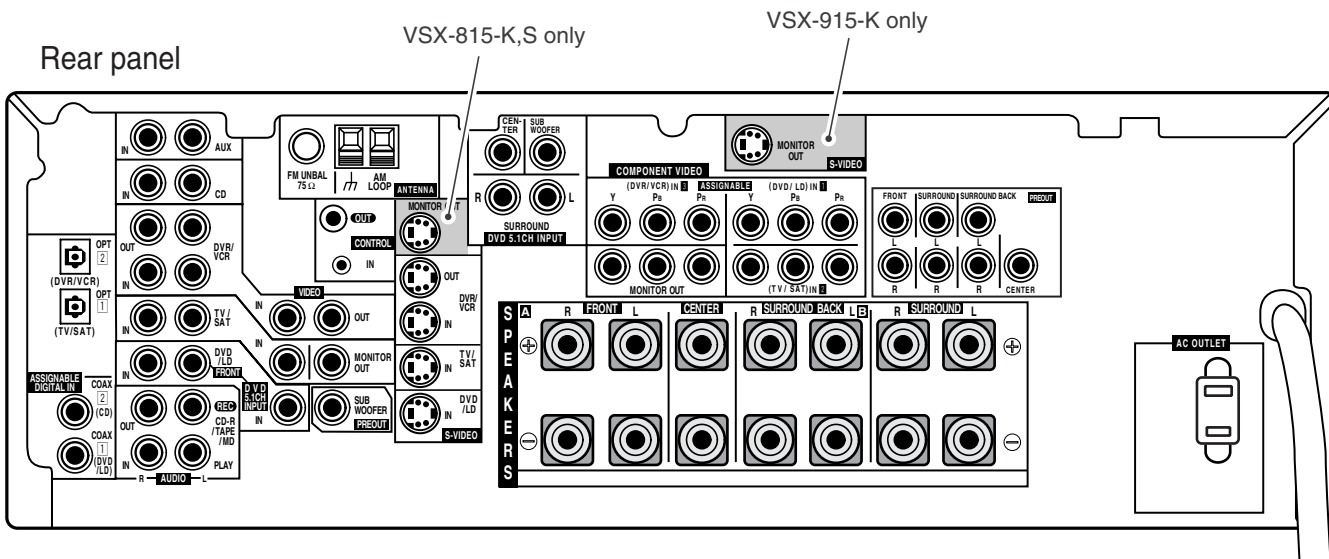

## Display

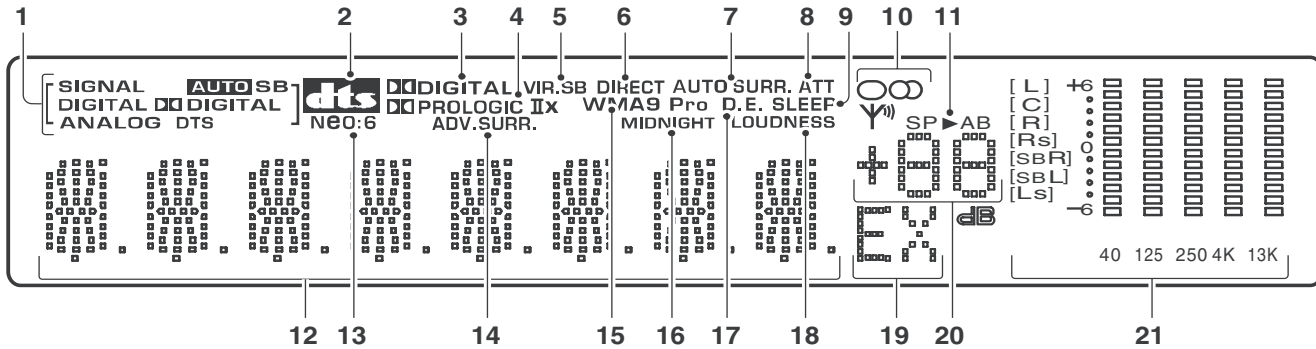

### 1 SIGNAL SELECT indicators

Lights to indicate the type of input signal:

#### AUTO

Lights when **AUTO** signal select is on.

#### SB

Depending on the source, this lights when a signal with surround back channel encoding is detected.

#### DIGITAL

Lights when a digital audio signal is detected.

#### DIGITAL

Lights when a Dolby Digital encoded signal is detected.

#### ANALOG

Lights when an analog signal is detected.

#### DTS

Lights when a source with DTS encoded audio signals is detected.

### 2 **dts**

When the **STANDARD** mode is on, this lights to indicate decoding of a DTS multichannel signal.

### 3 **DIGITAL**

When the **STANDARD** mode of the receiver is on, this lights to indicate decoding of a Dolby Digital multichannel signal.

### 4 **PRO LOGIC IIx**

When the **STANDARD** Pro Logic II mode of the receiver is on, **PRO LOGIC II** lights to indicate Pro Logic II decoding. **PRO LOGIC IIx** lights to indicate Pro Logic IIx decoding (see *Listening in surround sound*).

### 5 **VIR.SB**

Lights during Virtual surround back processing.

### 6 **DIRECT**

Lights when source direct playback is in use. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

### 7 **AUTO SURR.**

Lights when the Auto Surround feature is switched on (see Auto playback).

### 8 **ATT**

Lights when **INPUT ATT** is used to attenuate (reduce) the level of the analog input signal.

### 9 **SLEEP**

Lights when the sleep mode is active.

### 10 **Tuner indicators**



Lights when the mono mode is set using the **MPX** button.



Lights when a stereo FM broadcast is being received in auto stereo mode.



Lights when a broadcast is being received.

### 11 **Speaker indicators**

Lights to indicate the current speaker system, **A** and/or **B**.

### 12 **Character display**

### 13 **Neo:6**

When the **STANDARD** Neo:6 mode of the receiver is on, this lights to indicate Neo:6 processing.

### 14 **ADV.SURR. (Advanced Surround)**

Lights when one of the Advanced Surround modes has been selected.

### 15 **WMA9 Pro**

Lights to indicate decoding of a WMA9 Pro signal.

### 16 **MIDNIGHT**

Lights during Midnight listening.

### 17 **D.E.**

Lights when Dialog Enhancement (**DIALOG E**) is switched on.

### 18 **LOUDNESS**

Lights during Loudness listening.

### 19 **EX**

Lights when a Dolby Digital Surround EX encoded signal is detected.

### 20 **Master volume level**

Shows the overall volume level. **---dB** indicates the minimum level, and **- 0 dB** indicates the maximum level.


Depending on your level settings for each channel, the maximum volume can range between **-10 dB** and **-0 dB**.

### 21 **MCACC channel EQ indicators**

These indicators show the EQ balance for each channel when checking your Acoustic Calibration EQ settings. See Checking your Acoustic Calibration EQ settings for more on this.



## Remote control

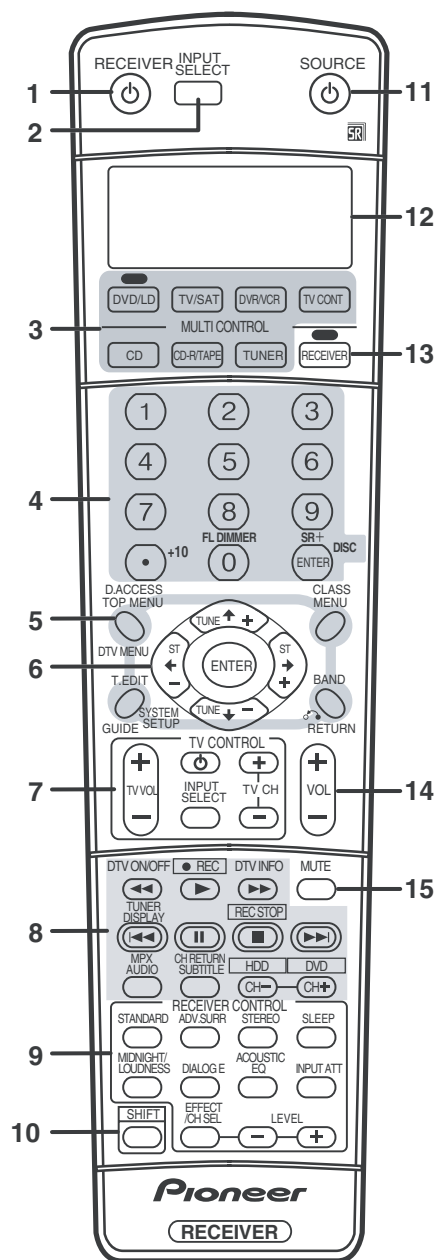

### 1 RECEIVER

This switches between standby and on for this receiver.

### 2 INPUT SELECT

Use to select the input source.

### 3 MULTI CONTROL buttons

Press to select control of other components (see Controlling the rest of your system).

### 4 Number buttons and other receiver/ component controls

Use the number buttons to directly select a radio frequency or the tracks on a CD, DVD, etc.

**DISC (ENTER)** can be used to enter commands for TV or DTV, and can also be used to select a disc in a multi-CD player.

The following are accessed by pressing the **RECEIVER** button first:

#### FL DIMMER

Dims or brightens the display.

#### SR+

Switches the SR+ mode on/off.

### 5 Tuner/component control buttons/ SYSTEM SETUP

The following button controls (except **SYSTEM SETUP**) can be accessed after you have selected the corresponding **MULTI CONTROL** button (**TUNER**, **DVD/LD**, **TV/SAT**, etc.)

#### D. ACCESS

After pressing, you can access a radio station directly using the number buttons.

#### TOP MENU

Displays the disc ětopí menu of a DVD.

#### DTV MENU

Displays menus on a digital TV.

#### T. EDIT

Press to memorize and name a station for recall.

#### GUIDE

Displays the guides on a digital TV.

## SYSTEM SETUP

(Press **RECEIVER** first to access)

Use to access the System Setup menu.

### CLASS

Switches between the three banks (classes) of radio station presets.

### MENU

Displays the disc menu of DVD-Video discs. It also displays TV and DTV menus.

### BAND

Switches between the tuner AM and FM bands.

### RETURN

Press to confirm and exit the current menu (also use to return to the previous menu with DVDs or to select closed captioning with DTV).

## 6 ←→↓↑ (TUNE/ST +/-) /ENTER

Use the arrow buttons when setting up your surround sound system. Also used to control DVD menus/options and for deck 1 of a double cassette deck player. Use the **TUNE +/-** buttons to find radio frequencies and use **ST +/-** to find preset stations.

## 7 TV CONTROL buttons

These buttons are dedicated to control the TV assigned to the **TV CONT** button. Thus if you only have one TV to hook up to this system assign it to the **TV CONT MULTI CONTROL** button. If you have two TVs, assign the main TV to the **TV CONT** button.

### TV⏻

Use to turn on/off the power of the TV.

### TV VOL +/-

Use to adjust the volume on your TV.

### INPUT SELECT

Use to select the TV input signal.

### TV CH +/-

Use to select channels.

## 8 Component control buttons

The main buttons (▶,■, etc.) are used to control a component after you have selected it using the **MULTI CONTROL** buttons.

The controls above these buttons can be accessed after you have selected the corresponding **MULTI CONTROL** button (for example **DVD/LD**, **DVR/VCR** or **TV/SAT** (when connected to a DTV)).

### DTV ON/OFF

Switches a digital TV on/off.

### DTV INFO

Use to bring up information screens on a digital TV.

### TUNER DISPLAY

Switches between named station presets and radio frequencies.

### MPX

Switches between stereo and mono reception of FM broadcasts. If the signal is weak then switching to mono will improve the sound quality.

### AUDIO

Changes the audio language or channel on DVD discs.

### CH RETURN

Returns to the last channel selected with DTV, SAT and some TVs.

### SUBTITLE

Displays/changes the subtitles included in multilingual DVD-Video discs.

### CH +/-

Use to select channels when using a TV, VCR, DVR, etc.

The following DVR controls can be accessed by pressing **SHIFT**:

### ● REC

Starts recording.

### REC STOP

Stops recording.

### HDD/DVD

These buttons switch between the hard disk and DVD controls for DVD/HDD recorders.

**9 RECEIVER CONTROL buttons**

**STANDARD**

Press for Standard decoding and to switch between the various Pro Logic IIx and Neo:6 options.

**ADV. SURR**

Use to switch between the various surround modes.

**STEREO**

Switches between direct and stereo playback. Direct playback bypasses the tone controls and any other signal processing for the most accurate reproduction of a source. Also selects the Auto Surround mode (Auto playback).

**SLEEP**

Use to put the receiver in sleep mode and select the amount of time before the receiver turns off.

**MIDNIGHT/LOUDNESS**

Use Midnight when listening to movie soundtracks at low volume. Use Loudness to boost the bass and treble at low volume.

**DIALOG E**

Use to make dialog stand out when watching TV or a movie.

**ACOUSTIC EQ**

Press to select an Acoustic Calibration EQ setting.

**INPUT ATT**

Attenuates (lowers) the level of an analog input signal to prevent distortion.

**EFFECT/CH SEL**

Press repeatedly to select a channel, then use **LEVEL +/-** to adjust the level. Also adjusts the level of the Advanced Surround effects as well as Dolby Pro Logic IIx Music and Neo:6 Music parameters. You can then use the **LEVEL +/-** buttons to make these adjustments.

**LEVEL +/-**

Use to adjust the effect and channel levels, as well as to change Dolby Pro Logic IIx and Neo:6 Music parameter settings.

**10 SHIFT**

Press to access the DVR controls (above the component control buttons) as well as some **RECEIVER** controls.

**11 SOURCE**

Press to turn on/off other components connected to the receiver.

**12 Character display (LCD)**

This display shows information when transmitting control signals.

The following commands are shown when you're setting the remote to control other components (see Controlling the rest of your system):

**SETUP**

Indicates the setup mode, from which you choose the options below.

**PRESET**

See Selecting preset codes directly.

**LEARN**

See Programming signals from other remote controls.

**DIRECT F**

See Direct function.

**ERASE**

See Erasing one of the remote control button settings.

**RESET**

See Erasing all of the remote control presets.

**READ ID**

See Confirming preset codes.

**13 RECEIVER**

Switches the remote to control the receiver (used to select the green commands above the number buttons (**FL DIMMER**, etc). Also use this button to set up surround sound.

**14 VOL +/-**

Use to set the listening volume.


**15 MUTE**

Mutes the sound or restores the sound if it has been muted (adjusting the volume also restores the sound).

**Operating range of remote control unit**


The remote control may not work properly if:

- There are obstacles between the remote control and the receiver's remote sensor.
- Direct sunlight or fluorescent light is shining onto the remote sensor.
- The receiver is located near a device that is emitting infrared rays.
- The receiver is operated simultaneously with another infrared remote control unit.

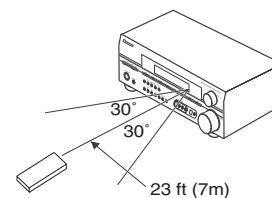


### Using this receiver with a Pioneer plasma display

If you have a Pioneer plasma display<sup>1</sup>, you can use an SR+ cable<sup>2</sup> to connect it to this unit and take advantage of various convenient features, such as automatic video input switching of the plasma display when the input is changed.

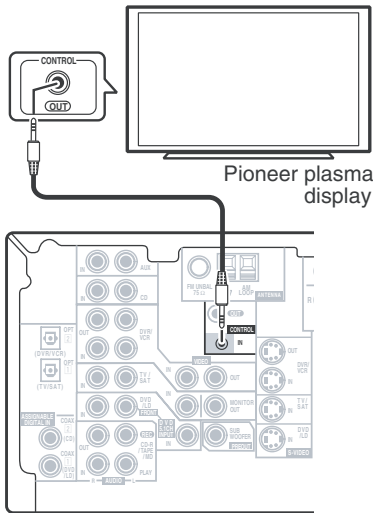

- Use a 3-ringed miniplug SR+ cable to connect the CONTROL IN jack of this receiver with the CONTROL OUT of your plasma display.

Before you can use the extra SR+ features, you need to make a few settings in the receiver. See The Input Assign menu for detailed instructions.

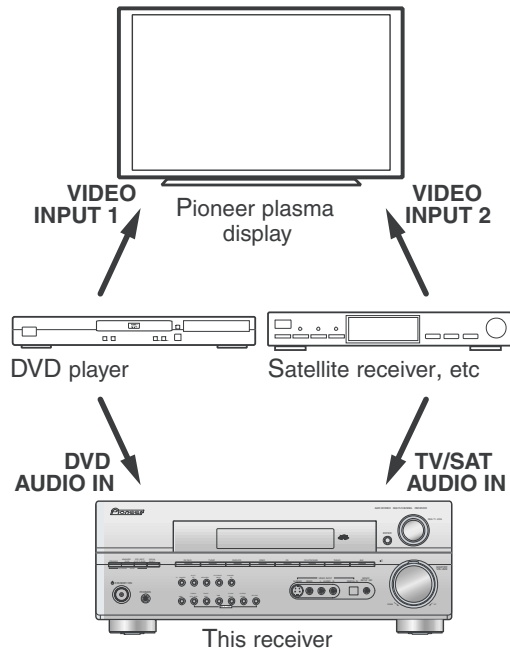

To make the most of the SR+ features, you should connect your source components (DVD player, etc.) in a slightly different way to that described in this chapter.


For each component, connect the video output directly to the plasma display, and just connect the audio (analog and/or digital) to this receiver.

### Using the SR+ mode with a Pioneer plasma display

When connected using an SR+ cable, a number of features become available to make using this receiver with your Pioneer plasma display even easier. These features include:

- On-screen volume display.
- On-screen display of listening mode.
- Automatic video input switching on the plasma display.
- Automatic volume muting on the plasma display.<sup>1</sup>

See also The Input Assign menu for more on setting up the receiver.

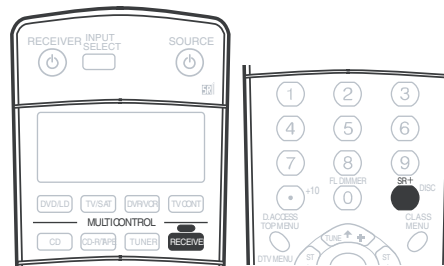

**1** Make sure that the plasma display and this receiver are switched on and that they are connected with the SR+ cable.

See Using this receiver with a Pioneer plasma display above for more on this.

**2** To switch SR+ mode on/off, press REVERSE, then the SR+ button.

The front panel display shows SR+ ON or OFF.

#### Note

- This receiver is compatible with all Pioneer plasma displays from 2003 onward.
- The 3-ringed SR+ cable from Pioneer is commercially available under the part number ADE7095. Contact the Pioneer Customer Support division for more information on obtaining an SR+ cable (you can also use a commercially available 3-ringed mini phone plug for the connection).
  - If you connect to a Pioneer plasma display using an SR+ cable, you will need to point the remote control at the plasma display remote sensor to control the receiver. In this case, you won't be able to control the receiver using the remote control if you switch the plasma display off.
- The automatic volume muting feature is enabled separately; see The Input Assign menu.

#### SERVICE PARTS

