

Service Manual

ORDER NO.
RRV3477

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-84TXSi

VSX-84TXSi-S

VSX-82TXS

VSX-82TXS-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-84TXSi	KUXJ/CA	AC 120 V	
VSX-84TXSi-S	KUXJC	AC 120 V	
VSX-82TXS	KUXJ/CA	AC 120 V	
VSX-82TXS-S	KUXJC	AC 120 V	

- This service manual should be used together with the following manual(s):

Model No.	Order No.	Remarks
VSX-74TXVi/KUXJ/CA	RRV3197	

- For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.

CONTENTS

1. CONTRAST OF MISCELLANEOUS PARTS	2
2. SCHEMATIC DIAGRAM	22
3. PCB CONNECTION DIAGRAM	42
4. DIAGNOSIS METHOD OF HDMI ASSY	46
5. HOW TO UPDATE THE VARIOUS MICROCOMPUTERS	66
6. IC INFORMATION	68

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to ∇ mark on product are used for disassembly.

● Reference Nos. indicate the pages and Nos. in the service manual for the base model.

● For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow 56×10^1 \rightarrow 561 RD1/4PU $\begin{matrix} \boxed{5} & \boxed{6} & \boxed{1} \\ \boxed{J} \end{matrix}$

47k Ω \rightarrow 47×10^3 \rightarrow 473 RD1/4PU $\begin{matrix} \boxed{4} & \boxed{7} & \boxed{3} \\ \boxed{J} \end{matrix}$

0.5 Ω \rightarrow R50 RN2H $\begin{matrix} \boxed{R} & \boxed{5} & \boxed{0} \\ \boxed{K} \end{matrix}$

1 Ω \rightarrow 1R0 RS1P $\begin{matrix} \boxed{1} & \boxed{R} & \boxed{0} \\ \boxed{K} \end{matrix}$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562×10^1 \rightarrow 5621 RN1/4PC $\begin{matrix} \boxed{5} & \boxed{6} & \boxed{2} & \boxed{1} \\ \boxed{F} \end{matrix}$

■ CONTRAST TABLE

VSX-84TXSi/KUXJ/CA, VSX-84TXSi-S/KUXJC and VSX-74TXVi/KUXJ/CA are constructed the same except for the following :

Ref. No.	Mark	Symbol and Description	Part No.			Remarks
			VSX-74TXVi /KUXJ/CA	VSX-84TXSi /KUXJ/CA	VSX-84TXSi-S /KUXJC	
P13- 2		PCB ASSEMBLIES 1394 ASSY	AWK7882	Not used	Not used	
P19- 1	NSP	COMPLEX ASSY └ DISPLAY ASSY	AWM7975 AWX8635	XWM3331 XWZ4170	XWM3331 XWZ4170	
P13- 5		DIGITAL MOTHER ASSY	AXX7226 (AWP7037)	AXX7218 (XWP3004)	AXX7218 (XWP3004)	
P13- 6		HDMI & DVC Assy	AWQ7024	Not used	Not used	
P13- 6		HDMI & 1394 Assy	Not used	AXX7214 (AWX8717)	AXX7214 (AWX8717)	
P15- 2	NSP	VIDEO ASSY └ COMPOSITE V Assy	AWQ7026 AWX8620	XWQ3009 XWZ4167	XWQ3009 XWZ4167	
P15- 3		└ S VIDEO Assy	AWX8622	XWZ4169	XWZ4169	
P15- 4		└ PREOUT & CONTROL Assy	AWX8625	XWZ4175	XWZ4175	
P15- 5		COMPONENT & VOL ASSY	AWQ7028	XWQ3002	XWQ3002	
P13-12	NSP	SECONDARY ASSY └ INTERFACE Assy	AWR7023 AWX8651	XWR3004 XWZ4174	XWR3004 XWZ4174	
P13-15		DSP Assy	AWX8599	AWX8716	AWX8716	
P9- 1		PACKING SECTION Audio Control Cable for iPod	ADE7119	XDE7025	XDE7025	
P9- 4		Setup Microphone (for Auto MCACC setup)	APM7006	APM7008	APM7008	
P9- 5		Remote Control Unit	AXD7455	XXD3116	XXD3116	
		Sub Room Remote Control Unit	Not used	XXD3113	XXD3113	
		Battery Cover	Not used	AZN8018	AZN8018	
		(for Sub Room Remote Control Unit)				
P9- 7	NSP	AA/R6P Dry Cell Batteries	VEM1031	XEX3001	XEX3001	
P9- 8		Operating Instructions (English)	ARB7334	XR3066	XR3066	
P9- 9		Operating Instructions (Audio Control Cable for iPod)	ARE7600	Not used	Not used	
P9-16		Packing Case	AHD8418	XHD3627	XHD3628	
P9-17		iPod Label	ARW7332	Not used	Not used	
		Disclaimer	ARX7073	XRM3008	XRM3008	
P11- 1		EXTERIOR SECTION Bonnet	AZN8006	AZN8006	AZN8008	
P11- 8		Screw	BCZ40P060FTB	BCZ40P060FTB	BCZ40P060FNI	

Ref. No.	Mark	Symbol and Description	Part No.			Remarks
			VSX-74TXVi /KUXJ/CA	VSX-84TXSi /KUXJ/CA	VSX-84TXSi-S /KUXJC	
CHASSIS SECTION						
P13-24	NSP NSP	22P Flexible Cable (J52)	ADD7517	Not used	Not used	
P13-25		10P Flexible Cable (J53)	ADD7518	Not used	Not used	
P13-29		DSP Shield	ANG7540	XNG3155	XNG3155	
P13-33		HDMI Shield	ANK7124	XNK3011	XNK3011	
P13-37		Shield Cushion	AEB7372	Not used	Not used	
P13-38		Nyron Rivet	AEC7406	Not used	Not used	
P13-42		Locking Card Spacer	AEC7549	Not used	Not used	
REAR PANEL SECTION						
P15-17		Rear Panel	ANC8324	XNC3451	XNC3459	
P15-23		Cushion Circle 16B	AED7093	AED7052	AED7052	
FRONT PANEL SECTION						
P19-10		Cushion Circle	AED7083	AED7083	AED7080	
P19-13		Door Base	AMR7508	AMR7508	AMR7510	
P19-14		Door Panel	ANB7369	ANB7369	ANB7391	
P19-16		Rotary Knob	AAA7036	AAA7036	AAA7034	
P19-17		Hinge Button	AAD7744	AAD7744	AAD7746	
P19-18		ENTER Button	AAD7747	AAD7747	AAD7749	
P19-19		Door Sheet	AAK8291	AAK8291	AAK8293	
P19-20		Window	AAK8296	XAK3563	XAK3563	
P19-21		Filter	AAK8308	AAK8308	AAK8311	
P19-24		Panel Base	AMB7900	AMB7900	AMB7907	
P19-25		Front Panel	ANB7374	XNB3005	XNB3006	
P19-27		Pioneer Badge	PAN1376	PAN1376	VAM1124	
P19-28		STBY BTN Assy	XAD3216	XAD3216	XAD3217	
P19-30		Screw	BBZ30P080FTB	BBZ30P080FTB	BBZ30P080FNI	

Notes : For PCB ASSEMBLIES, Refer to "CONTRAST OF PCB ASSEMBLIES", "PCB PARTS LIST", "2. SCHEMATIC DIAGRAM" and "3. PCB CONNECTION DIAGRAM".

VSX-82TXSi/KUXJ/CA, VSX-82TXSi-S/KUXJC and VSX-72TXVi/KUXJ/CA are constructed the same except for the following :

Ref. No.	Mark	Symbol and Description	Part No.			Remarks
			VSX-72TXVi /KUXJ/CA	VSX-82TXSi /KUXJ/CA	VSX-82TXSi-S /KUXJC	
PCB ASSEMBLIES						
P19- 1	NSP	COMPLEX ASSY └ DISPLAY ASSY	AWM7979 AWX8636	XWM3335 XWZ4172	XWM3335 XWZ4172	
P13- 5		DIGITAL MOTHER ASSY	AXX7230 (AWP7041)	AXX7222 (XWP3008)	AXX7222 (XWP3008)	
P13- 6		HDMI & DVC Assy	AWQ7024	AXX7215 (AWX8718)	AXX7215 (AWX8718)	
P15- 2	NSP	VIDEO ASSY	AWQ7026	XWQ3009	XWQ3009	
P15- 3		└ COMPOSITE V Assy	AWX8620	XWZ4167	XWZ4167	
P15- 4		└ S VIDEO Assy	AWX8622	XWZ4169	XWZ4169	
P15- 4		└ PREOUT & CONTROL Assy	AWX8625	XWZ4175	XWZ4175	
P15- 5		COMPONENT & VOL ASSY	AWQ7030	XWQ3006	XWQ3006	
P13-15		DSP Assy	AWX8599	AWX8716	AWX8716	
PACKING SECTION						
P9- 1		Audio Control Cable for iPod	ADE7119	XDE7025	XDE7025	
P9- 4		Setup Microphone (for Auto MCACC setup)	APM7006	APM7008	APM7008	
P9- 5		Remote Control Unit	AXD7455	XXD3116	XXD3116	
P9- 7	NSP	AA/R6P Dry Cell Batteries	VEM1031	XEX3001	XEX3001	
P9- 8		Operating Instructions (English)	ARB7334	XRB3066	XRB3066	
P9- 9		Operating Instructions (for Auto MCACC setup)	ARE7600	Not used	Not used	
P9-16		Packing Case	AHD8419	XHD3629	XHD3630	
P9-17		iPod Label	ARW7332	Not used	Not used	
		Disclaimer	ARX7073	XRM3008	XRM3008	
EXTERIOR SECTION						
P11- 1		Bonnet	AZN8006	AZN8006	AZN8008	
P11- 8		Screw	BCZ40P060FTB	BCZ40P060FTB	BCZ40P060FNI	
CHASSIS SECTION						
P13-29	NSP	DSP Shield	ANG7540	XNG3155	XNG3155	
P13-33	NSP	HDMI Shield	ANK7124	XNK3011	XNK3011	
REAR PANEL SECTION						
P15-17		Rear Panel	ANC8325	XNC3452	XNC3460	
P15-23		Cushion Circle 16B	AED7093	AED7052	AED7052	
FRONT PANEL SECTION						
P19-10		Cushion Circle	AED7083	AED7083	AED7080	
P19-13		Door Base	AMR7508	AMR7508	AMR7510	
P19-14		Door Panel	ANB7369	ANB7369	ANB7391	
P19-16		Rotary Knob	AAA7036	AAA7036	AAA7034	
P19-17		Hinge Button	AAD7744	AAD7744	AAD7746	
P19-18		ENTER Button	AAD7747	AAD7747	AAD7749	
P19-19		Door Sheet	AAK8291	AAK8291	AAK8293	
P19-20		Window	AAK8297	XAK3564	XAK3564	
P19-21		Filter	AAK8308	AAK8308	AAK8311	
P19-24		Panel Base	AMB7900	AMB7900	AMB7907	
P19-25		Front Panel	ANB7375	XNB3007	XNB3008	
P19-27		Pioneer Badge	PAN1376	PAN1376	VAM1124	
P19-28		STBY BTN Assy	XAD3216	XAD3216	XAD3217	
P19-30		Screw	BBZ30P080FTB	BBZ30P080FTB	BBZ30P080FNI	

Notes : For PCB ASSEMBLIES, Refer to "CONTRAST OF PCB ASSEMBLIES", "PCB PARTS LIST", "2. SCHEMATIC DIAGRAM" and "3. PCB CONNECTION DIAGRAM".

■ CONTRAST OF PCB ASSEMBLIES

■ F COMPOSITE V ASSY

XWZ4167 and AWX8620 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX8620	XWZ4167	
	IC2007 R2011 R2012 R2092 C2012	PDC131A Not used RS1/16S750J RS1/16S0R0J CEAT102M6R3	PDC132A RS1/16S0R0J RS1/16S473J Not used CEAT100M50	*

* : Refer to the stby parts of "3.7 COMPOSIT V ASSY" on the service manual RRV3197.

■ F COMPONENT&VOL ASSY (VSX-84TXSi)

XWQ3002 and AWQ7028 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWQ7028	XWQ3002	
	D2752 D2753, D2754 L2752 L2755 L2757-L2760	1SS355 Not used Not used QTL1013 VTL1083	Not used RB501V-40 QTL1013 Not used CTF1385	* *
	CN2409, CN2502 17P FFC CONNECTOR CN2601, CN2603 19P FFC CONNECTOR CN2602 26P FFC CONNECTOR CN2702 11P FFC CONNECTOR JA2703 JACK	52045-1745 52045-1945 52045-2645 52045-1145 Not used	CKS3382 CKS3384 CKS3391 CKS3376 CKS4124	*
	R2467-R2469 R2759 R2760 R2762 C2467	RS1/16S750J RS1/16S102J RS1/16S0R0J Not used CEAT102M6R3	RS1/16S473J Not used Not used RS1/16S0R0J CEAT100M50	*
	C2468, C2469 C2785 C2786	CEAT471M6R3 Not used Not used	CEAT100M50 CKSRYB104K16 CKSRYB471K50	* *

* : Refer to the stby parts of "3.12 COMPONENT & VOL ASSY (4/4)" on the service manual RRV3197.

■ F COMPONENT&VOL ASSY (VSX-82TXS)

XWQ3006 and AWQ7030 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWQ7030	XWQ3006	
	D2752 D2753, D2754 L2752 L2755 L2757-L2760	1SS355 Not used Not used QTL1013 VTL1083	Not used RB501V-40 QTL1013 Not used CTF1385	* *
	CN2409, CN2502 17P FFC CONNECTOR CN2601, CN2603 19P FFC CONNECTOR CN2602 26P FFC CONNECTOR CN2702 11P FFC CONNECTOR JA2703 JACK	52045-1745 52045-1945 52045-2645 52045-1145 Not used	CKS3382 CKS3384 CKS3391 CKS3376 CKS4124	*
	R2467-R2469 R2759 R2760 R2762 C2467	RS1/16S750J RS1/16S102J RS1/16S0R0J Not used CEAT102M6R3	RS1/16S473J Not used Not used RS1/16S0R0J CEAT100M50	*
	C2468, C2469 C2785 C2786	CEAT471M6R3 Not used Not used	CEAT100M50 CKSRYB104K16 CKSRYB471K50	* *

* : Refer to the stby parts of "3.12 COMPONENT & VOL ASSY (4/4)" on the service manual RRV3197.

MF DIGITAL MOTHER ASSY (VSX-82TXS)

XWP3008 and AWP7041 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWP7041	XWP3008	
	IC102 IC202 IC211 IC310 CN101 23P FFC CONNECTOR	AYW7133 AYW7080 Not used Not used 52045-2345	AYW7114 AYW7115 CD4094BPW TC74VHC541FTS1 CKS3388	* (2/8) * (6/8)
	CN103 19P FFC CONNECTOR R231 R242, R243 R274 R275, R416, R418, R474, R475, R562-R564	52045-1945 RS1/16S104J RS1/16S104J RS1/16S0R0J RS1/16S0R0J	CKS3384 Not used RS1/16S0R0J RS1/16S473J Not used	
	R662-R664, R762-R764 R391 R392-R394, R555, R655, R755 R396 R397-R399	RS1/16S0R0J Not used Not used Not used	Not used RAB4C101J RS1/16S101J RAB4C470J RS1/16S470J	* (6/8) * (6/8)-(8/8) * (6/8) * (6/8)
	R417, R419, R476, R477, R556, R557, R656, R657 R756, R757 R471 R474, R475 C201, C347	Not used Not used Not used RS1/16S0R0J Not used	RS1/16S0R0J RS1/16S0R0J RS1/16S104J RS1/16S104J CKSRYB104K16	* (3/8,4/8,7/8) * (8/8) * (3/8) * (2/8, 6/8)
	C348	Not used	CKSRYB471K50	* (6/8)

* : Refer to the stby parts of "3.13 - 3.20 DIGITAL MOTHER ASSY (1/8 - 8/8)" on the service manual RRV3197.

MF DSP ASSY

AWX8716 and AWX8599 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX8599	AWX8716	
	IC105 IC107 IC109 C351 C351 (100/16)	AYW7111 SN74AHC08PW SN74AHC1G32DCK CEVW101M16 Not used	AYW7112 SN74VHC08FTS1 TC7SH32FUS1 Not used VCH1262	

ACF DISPLAY ASSY

XWZ4170, XWZ4172 and AWX8635 are constructed the same except for the following :

Mark	Symbol and Description	Part No.			Remarks
		AWX8635	XWZ4170	XWZ4172	
	Q3356 D3315 D3317 D3320 D3351	Not used SLR-343BBT SLI-343DCW SLI-343URW Not used	UMB1N SLR-343BBT SLI-343URW SLI-343DCW DAN202U	UMB1N SLI-343URW SLI-343URW SLI-343DCW DAN202U	* * * * *
	D3353 D3357 L3301 L3351 R3305	Not used Not used VTL1083 LFCA2R2J RS1/16S391J	DAN217 1SS355 CTF1385 LFCA2R2J RS1/16S391J	DAN217 1SS355 CTF1385 LFCA2R2J RS1/16S331J	* * * * *
	R3362 R3363 R3364 R3365 R3375	RS1/16S0R0J RS1/16S0R0J Not used Not used Not used	RS1/16S392J RS1/16S103J RS1/16S223J RS1/16S103J RS1/16S0R0J	RS1/16S392J RS1/16S103J RS1/16S223J RS1/16S103J RS1/16S0R0J	* * * * *
	R3376 C3352	RS1/16S0R0J Not used	Not used CKSRYB153K50	Not used CKSRYB153K50	* *

* : Refer to the stby parts of "3.30 VOLUME, DISPLAY and INPUT SELECT ASSYS" on the service manual RRV3197.

AE F PREOUT & CONTROL ASSY

XWZ4175 and AWX8625 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX8625	XWZ4175	
	L2933-L2935 R3000 CN2801 26P FFC CONNECTOR	VTL1083 Not used 52045-2645	CTF1385 RS1/16S750J CKS3391	

PCB PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
AG F HDMI & 1394 ASSY (VSX-84TXSi)				IC	1202 (A,40,105)	LOGIC IC	SN74CBT3257CPW
				IC	1203 (B,59,105)	EEPROM	BR24L02FV-W
				IC	1204 (A,57,105)	LOGIC IC	SN74CBT3257CPW
				IC	1205 (B,31,108)	IC	TC7WBD125AFK
				IC	1206 (B,49,108)	IC	TC7WBD125AFK
				IC	1251 (B,42,70)	EEPROM	BR24L02FV-W
				IC	1252 (A,40,70)	LOGIC IC	SN74CBT3257CPW
				IC	1253 (B,42,60)	EEPROM	BR24L02FV-W
				IC	1254 (A,40,60)	LOGIC IC	SN74CBT3257CPW
				IC	1256 (B,31,73)	IC	TC7WBD125AFK
				IC	1257 (B,31,63)	IC	TC7WBD125AFK
				IC	1301 (A,145,85)	IC(VIDEO FORMAT COV)	FLI2310-LF-CF
				IC	1351 (B,145,70)	64M SDRAM	EDS6432AFTA-6B
				IC	1381 (B,124,66)	IC	TC74LCX541FSTS1
				IC	1382 (B,124,48)	IC	TC74LCX541FSTS1
				IC	1383 (B,127,57)	IC	TC74LCX541FSTS1
				Q	101 (A,86,135)	DIGITAL TR(SC-70)	RT1P241M
				Q	301 (B,103,135)	DIGITAL TR(SC-70)	RT1P241M
				Q	401 (B,151,126)	DIGITAL TR(SC-70)	RT1P431M
				Q	461 (B,151,121)	DIGITAL TRANSISTOR	DTC124EUA
				Q	462 (B,122,99)	DIGITAL TRANSISTOR	DTC124EUA
				Q	463 (B,167,124)	DIGITAL TRANSISTOR	DTC124EUA
				Q	464 (A,124,103)	CHIP TRANSISTOR	RN4903
				Q	465 (B,170,132)	CHIP TRANSISTOR	RN4903
				Q	751 (B,114,34)	TRANSISTOR	2SA1576A
				Q	752 (B,117,34)	CHIP TRANSISTOR	DTC114YUA
				Q	771 (A,151,26)	TRANSISTOR	2SA1576A
				Q	781 (A,145,26)	TRANSISTOR	2SA1576A
				Q	791 (A,139,26)	TRANSISTOR	2SA1576A
				Q	801 (B,58,82)	DUAL MOS FET	HN1K02FU
				Q	901 (B,38,29)	CHIP DIGITAL TRANS.	DTA124EUA
				Q	951 (B,32,24)	CHIP TR (PNP X 2)	UMB1N
				Q	952 (B,31,27)	CHIP TRANSISTOR	DTC114YUA
				Q	953 (A,25,24)	DUAL MOS FET	HN1K02FU
				Q	1051 (A,63,25)	TRANSISTOR	2SA1576A
				Q	1052 (A,63,32)	DIGITAL TRANSISTOR	DTC124EUA
				Q	1101 (A,23,110)	CHIP TRANSISTOR	DTC114YUA
				Q	1102 (A,24,89)	CHIP TRANSISTOR	DTC114YUA
				Q	1103 (B,40,92)	CHIP TRANSISTOR	2SB1689
				Q	1104 (B,36,96)	CHIP TRANSISTOR	DTC114YUA
				Q	1151 (A,25,65)	CHIP TRANSISTOR	DTC114YUA
				Q	1152 (A,24,43)	CHIP TRANSISTOR	DTC114YUA
				Q	1153 (B,40,47)	CHIP TRANSISTOR	2SB1689
				Q	1154 (B,36,51)	CHIP TRANSISTOR	DTC114YUA
				Q	1201 (B,37,109)	CHIP TRANSISTOR	DTC114YUA
				Q	1202 (B,55,109)	CHIP TRANSISTOR	DTC114YUA
				Q	1203 (A,48,106)	CHIP TRANSISTOR	DTC114YUA
				Q	1251 (B,36,74)	CHIP TRANSISTOR	DTC114YUA
				Q	1252 (B,36,64)	CHIP TRANSISTOR	DTC114YUA
				Q	1253 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1254 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1255 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1256 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1257 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1258 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1259 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1260 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1261 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1262 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1263 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1264 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1265 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1266 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1267 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1268 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1269 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1270 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1271 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1272 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1273 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1274 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1275 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1276 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1277 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1278 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1279 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1280 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1281 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1282 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1283 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1284 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1285 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1286 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1287 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1288 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1289 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1290 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1291 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1292 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1293 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1294 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1295 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1296 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1297 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1298 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1299 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1300 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1301 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1302 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1303 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1304 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1305 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1306 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1307 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1308 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1309 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1310 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1311 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1312 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1313 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1314 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1315 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1316 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1317 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1318 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1319 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1320 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1321 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1322 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1323 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1324 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1325 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1326 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1327 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1328 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1329 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1330 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1331 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1332 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1333 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1334 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1335 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1336 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1337 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1338 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1339 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1340 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1341 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1342 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1343 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1344 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1345 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1346 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1347 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1348 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1349 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1350 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1351 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1352 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1353 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1354 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1355 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1356 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1357 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1358 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1359 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1360 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1361 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1362 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1363 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1364 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1365 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1366 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1367 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1368 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1369 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1370 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1371 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1372 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1373 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1374 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1375 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1376 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1377 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1378 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1379 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1380 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1381 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1382 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1383 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1384 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1385 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1386 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1387 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1388 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1389 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1390 (B,32,78)	CHIP TRANSISTOR	DTC114YUA
				Q	1391 (B,32,78)	CHIP TRANSISTOR	DTC114YUA

	Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	R	143	(A,69,142)	RS1/16SS103J	R	265	(B,30,135)	RS1/16SS470J
	R	144	(A,69,143)	RS1/16SS470J	R	266	(B,35,134)	RS1/16SS470J
A	R	145	(A,69,144)	RS1/16SS472J	R	267	(B,24,123)	RS1/16SS56R0D
	R	146	(A,69,145)	RS1/16SS470J	R	268	(B,24,124)	RS1/16SS56R0D
	R	147	(A,86,137)	RS1/16SS472J	R	269	(B,24,139)	RS1/16SS56R0D
	R	148	(B,61,139)	RS1/16SS101J	R	270	(B,24,141)	RS1/16SS56R0D
	R	149	(B,62,139)	RS1/16SS472J	R	271	(B,24,125)	RS1/16SS56R0D
	R	201	(A,33,141)	RS1/16SS472J	R	272	(B,24,127)	RS1/16SS56R0D
	R	202	(A,32,141)	RS1/16SS472J	R	273	(B,24,142)	RS1/16SS56R0D
	R	203	(B,28,134)	RS1/16SS101J	R	274	(B,24,143)	RS1/16SS56R0D
	R	204	(B,35,132)	RS1/16SS101J	R	275	(B,24,128)	RS1/16SS5101F
	R	205	(B,31,139) RESISTOR ARRAY	RAB4CQ101J	R	276	(B,24,144)	RS1/16SS5101F
B	R	206	(B,29,131) RESISTOR ARRAY	RAB4CQ472J	R	289	(A,36,120)	RS1/16SS101J
	R	207	(B,40,125)	RS1/16SS472J	R	290	(A,38,117)	RS1/16SS220J
	R	208	(B,36,130)	RS1/16SS472J	R	291	(A,92,135)	RS1/16SS0R0J
	R	209	(B,27,118)	RS1/16SS0R0J	R	292	(A,92,136)	RS1/16SS0R0J
	R	210	(B,29,118)	RS1/16SS0R0J	R	294	(A,93,125)	RS1/16SS0R0J
	R	211	(A,29,122)	RS1/16SS103J	R	295	(A,93,124)	RS1/16SS0R0J
	R	212	(A,30,122)	RS1/16SS103J	R	301	(A,130,145)	RS1/16SS470J
	R	213	(A,31,120) CHIP RESISTOR	RS1/16S6341D	R	302	(A,127,138) RESISTOR ARRAY	RAB4CQ680J
	R	214	(B,39,122)	RS1/16SS0R0J	R	303	(B,134,143)	RS1/16SS680J
	R	215	(B,39,121)	RS1/16SS0R0J	R	304	(B,134,142)	RS1/16SS680J
	R	216	(A,41,115) RESISTOR ARRAY	RAB4CQ472J	R	305	(B,134,141)	RS1/16SS680J
C	R	217	(B,40,124)	RS1/16SS472J	R	307	(A,134,137)	RS1/16SS470J
	R	218	(A,54,117)	RS1/16SS472J	R	308	(A,135,135) RESISTOR ARRAY	RAB4CQ470J
	R	219	(A,43,115)	RS1/16SS472J	R	309	(A,134,131)	RS1/16SS470J
	R	220	(A,46,115) RESISTOR ARRAY	RAB4CQ472J	R	310	(A,134,130)	RS1/16SS470J
	R	221	(A,49,115) RESISTOR ARRAY	RAB4CQ472J	R	325	(A,128,130)	RS1/16SS470J
	R	222	(A,51,115)	RS1/16SS472J	R	326	(B,127,121)	RS1/16SS101J
	R	223	(A,51,120) RESISTOR ARRAY	RAB4CQ472J	R	327	(A,124,129)	RS1/16SS0R0J
	R	224	(A,51,122)	RS1/16SS472J	R	328	(A,60,121)	RS1/16SS101J
	R	225	(A,53,122)	RS1/16SS472J	R	329	(A,60,120)	RS1/16SS103J
	R	226	(A,51,123)	RS1/16SS472J	R	332	(A,113,134)	RS1/16SS101J
	R	227	(A,53,117)	RS1/16SS472J	R	333	(B,107,134)	RS1/16SS101J
D	R	228	(A,53,124)	RS1/16SS472J	R	339	(B,106,146) RESISTOR ARRAY	RAB4CQ470J
	R	229	(A,51,124)	RS1/16SS472J	R	340	(B,103,147) RESISTOR ARRAY	RAB4CQ470J
	R	230	(A,53,126) RESISTOR ARRAY	RAB4CQ101J	R	341	(A,112,147)	RS1/16SS470J
	R	231	(A,53,129) RESISTOR ARRAY	RAB4CQ101J	R	342	(A,112,148)	RS1/16SS470J
	R	232	(A,55,131) RESISTOR ARRAY	RAB4CQ101J	R	343	(A,114,143) RESISTOR ARRAY	RAB4CQ470J
	R	233	(A,56,134) RESISTOR ARRAY	RAB4CQ101J	R	344	(A,117,143) RESISTOR ARRAY	RAB4CQ470J
	R	234	(A,52,140) RESISTOR ARRAY	RAB4CQ472J	R	345	(A,117,138) RESISTOR ARRAY	RAB4CQ470J
	R	235	(A,51,137)	RS1/16SS472J	R	346	(A,121,136) RESISTOR ARRAY	RAB4CQ470J
	R	236	(A,49,140)	RS1/16SS472J	R	347	(A,121,142) RESISTOR ARRAY	RAB4CQ470J
	R	237	(A,48,140)	RS1/16SS472J	R	348	(A,123,135)	RS1/16SS470J
	R	238	(A,46,141) RESISTOR ARRAY	RAB4CQ472J	R	349	(A,124,135)	RS1/16SS470J
E	R	239	(A,43,142) RESISTOR ARRAY	RAB4CQ472J	R	350	(A,124,141) RESISTOR ARRAY	RAB4CQ470J
	R	240	(A,40,143) RESISTOR ARRAY	RAB4CQ472J	R	351	(A,102,141)	RS1/16SS123J
	R	241	(B,42,138)	RS1/16SS101J	R	352	(A,101,141)	RS1/16SS271J
	R	242	(B,41,135)	RS1/16SS472J	R	353	(A,110,141)	RS1/16SS472J
	R	243	(B,42,135)	RS1/16SS472J	R	354	(A,104,136)	RS1/16SS223J
	R	244	(A,38,141)	RS1/16SS472J	R	355	(A,104,138)	RS1/16SS223J
	R	245	(B,40,143) RESISTOR ARRAY	RAB4CQ101J	R	356	(A,110,138)	RS1/16SS0R0J
	R	246	(B,37,142) RESISTOR ARRAY	RAB4CQ101J	R	357	(A,110,137)	RS1/16SS0R0J
	R	247	(A,36,141)	RS1/16SS472J	R	381	(B,134,136) RESISTOR ARRAY	RAB4CQ470J
	R	251	(A,34,141)	RS1/16SS472J	R	382	(B,134,138)	RS1/16SS470J
	R	252	(B,35,139)	RS1/16SS101J	R	401	(A,160,131)	RS1/16SS680J
F	R	253	(B,44,124)	RS1/16SS101J	R	402	(A,160,133) RESISTOR ARRAY	RAB4CQ680J
	R	254	(A,46,120)	RS1/16SS101J	R	403	(A,154,138)	RS1/16SS101J
	R	261	(A,92,138)	RS1/16SS0R0J	R	404	(B,149,134)	RS1/16SS221J
	R	262	(A,92,137)	RS1/16SS0R0J	R	405	(B,149,133)	RS1/16SS221J

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	
R	406	(B,149,132)	RS1/16SS221J	R	551	(B,77,105)	RS1/16SS473J	
R	407	(B,149,130) RESISTOR ARRAY	RAB4CQ221J	R	561	(B,86,91)	RS1/16SS103J	A
R	411	(A,145,127)	RS1/16SS101J	R	562	(B,87,91)	RS1/16SS103J	
R	412	(A,152,122)	RS1/16SS0R0J	R	564	(B,89,91)	RS1/16SS103J	
R	418	(B,142,136)	RS1/16SS101J	R	565	(B,90,91)	RS1/16SS103J	
R	425	(B,143,131)	RS1/16SS101J	R	567	(B,91,91)	RS1/16SS103J	
R	436	(B,156,142)	RS1/16SS221J	R	569	(A,99,105)	RS1/16SS103J	
R	437	(B,155,145)	RS1/16SS101J	R	571	(B,53,145)	RS1/16SS103J	
R	441	(B,118,104)	RS1/16SS0R0J	R	574	(A,99,101)	RS1/16SS473J	
R	442	(B,129,103)	RS1/16SS101J	R	575	(A,99,104)	RS1/16SS101J	
R	443	(B,129,104)	RS1/16SS101J	R	576	(A,99,103)	RS1/16SS101J	
R	444	(B,129,106)	RS1/16SS101J	R	577	(A,97,110)	RS1/16SS101J	
R	445	(B,129,108) RESISTOR ARRAY	RAB4CQ101J	R	581	(A,99,106)	RS1/16SS101J	B
R	456	(B,157,142)	RS1/16SS0R0J	R	586	(B,75,91)	RS1/16SS103J	
R	463	(A,118,111)	RS1/16SS0R0J	R	588	(B,94,91)	RS1/16SS103J	
R	464	(A,118,93)	RS1/16SS103J	R	594	(B,89,82)	RS1/16SS0R0J	
R	466	(B,147,123)	RS1/16SS0R0J	R	601	(A,160,43)	RS1/16SS101J	
R	468	(B,120,102)	RS1/16SS103J	R	602	(B,158,47)	RS1/16SS470J	
R	469	(B,167,120)	RS1/16SS101J	R	603	(B,162,48) RESISTOR ARRAY	RAB4CQ470J	
R	471	(A,127,103)	RS1/16SS103J	R	604	(B,165,47)	RS1/16SS330J	
R	472	(B,170,134)	RS1/16SS103J	R	605	(B,167,47)	RS1/16SS330J	
R	473	(B,169,126)	RS1/16SS103J	R	606	(B,168,47)	RS1/16SS330J	
R	474	(A,129,111)	RS1/16SS390J	R	607	(B,170,49) RESISTOR ARRAY	RAB4CQ560J	
R	475	(A,129,110)	RS1/16SS101J	R	608	(A,172,43)	RS1/16SS560J	C
R	476	(A,129,109)	RS1/16SS101J	R	609	(A,172,42)	RS1/16SS560J	
R	477	(A,129,107) RESISTOR ARRAY	RAB4CQ101J	R	610	(A,172,41)	RS1/16SS103J	
R	478	(A,172,133)	RS1/16SS390J	R	611	(A,172,38)	RS1/16SS100J	
R	479	(A,172,132)	RS1/16SS101J	R	612	(A,172,35)	RS1/16SS560J	
R	480	(A,172,131)	RS1/16SS101J	R	613	(A,172,34)	RS1/16SS560J	
R	481	(A,172,129) RESISTOR ARRAY	RAB4CQ101J	R	614	(B,178,30)	RS1/16SS105J	
R	482	(A,172,124)	RS1/16SS390J	R	615	(B,181,30)	RS1/16SS331J	
R	483	(A,172,122)	RS1/16SS101J	R	616	(B,175,37)	RS1/16SS101J	
R	484	(A,172,121)	RS1/16SS101J	R	617	(B,181,35)	RS1/16SS0R0J	
R	485	(A,172,119) RESISTOR ARRAY	RAB4CQ101J	R	618	(A,175,32)	RS1/16SS132J	
R	486	(A,160,129)	RS1/16SS100J	R	619	(A,173,32)	RS1/16SS391J	D
R	506	(A,80,87)	RS1/16SS221J	R	621	(B,174,17)	RS1/10S0R0J	
R	508	(B,84,91)	RS1/16SS472J	R	622	(B,174,14)	RS1/10S0R0J	
R	511	(A,87,87)	RS1/16SS101J	R	623	(A,169,29)	RS1/16SS103J	
R	517	(A,91,87)	RS1/16SS101J	R	624	(A,164,32)	RS1/16SS272J	
R	520	(B,78,83)	RS1/16SS103J	R	625	(A,165,32)	RS1/16SS272J	
R	524	(B,92,87)	RS1/16SS100J	R	631	(B,151,32)	RS1/16SS471J	
R	525	(A,93,87)	RS1/16SS100J	R	632	(B,154,35)	RS1/16SS103J	
R	526	(A,99,89)	RS1/16SS100J	R	634	(B,154,36)	RS1/16SS330J	
R	527	(A,99,90)	RS1/16SS100J	R	635	(B,154,37)	RS1/16SS330J	
R	528	(A,99,97)	RS1/16SS470J	R	636	(B,154,40) RESISTOR ARRAY	RAB4CQ470J	
R	529	(A,99,99)	RS1/16SS473J	R	637	(B,154,42)	RS1/16SS470J	E
R	530	(B,95,82)	RS1/16SS222J	R	638	(B,154,43)	RS1/16SS470J	
R	531	(B,96,82)	RS1/16SS222J	R	661	(B,152,53) RESISTOR ARRAY	RAB4CQ473J	
R	533	(A,101,89)	RS1/16SS472J	R	662	(B,152,50) RESISTOR ARRAY	RAB4CQ473J	
R	534	(A,101,90)	RS1/16SS472J	R	663	(B,152,58) RESISTOR ARRAY	RAB4CQ473J	
R	537	(A,75,87)	RS1/16SS101J	R	664	(B,152,56) RESISTOR ARRAY	RAB4CQ473J	
R	538	(B,74,87)	RS1/16SS101J	R	665	(A,172,39)	RS1/16SS473J	
R	539	(A,69,93)	RS1/16SS101J	R	666	(B,152,47) RESISTOR ARRAY	RAB4CQ473J	
R	540	(A,48,96)	RS1/16SS470J	R	701	(A,149,36)	RS1/16SS1501F	
R	541	(A,59,96)	RS1/16SS103J	R	702	(A,151,36)	RS1/16SS1501F	
R	542	(A,59,97)	RS1/16SS470J	R	703	(A,151,35)	RS1/16SS390J	
R	543	(A,59,95)	RS1/16SS472J	R	704	(A,133,37)	RS1/16SS681J	F
R	544	(A,59,94)	RS1/16SS470J	R	705	(A,134,36)	RS1/16SS1501F	
R	546	(A,99,94)	RS1/16SS101J	R	706	(A,132,36)	RS1/16SS1501F	
R	549	(A,99,98)	RS1/16SS473J	R	707	(A,130,36)	RS1/16SS390J	

	Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	R	708	(A,128,39)	RS1/16SS471J	R	856	(B,56,84)	RS1/16SS103J
	R	709	(A,128,40)	RS1/16SS103J	R	857	(B,58,79)	RS1/16SS104J
A	R	710	(A,131,46)	RS1/16SS470J	R	858	(B,61,79)	RS1/16SS103J
	R	711	(A,131,47)	RS1/16SS470J	R	859	(B,58,78)	RS1/16SS103J
	R	712	(B,133,47)	RS1/16SS103J	R	881	(A,95,77) RESISTOR ARRAY	RAB4CQ220J
	R	713	(B,138,46)	RS1/16SS472J	R	882	(A,94,75)	RS1/16SS150J
	R	714	(A,148,43)	RS1/16SS0R0J	R	883	(A,107,71) RESISTOR ARRAY	RAB4CQ470J
	R	715	(A,148,40)	RS1/16SS0R0J	R	884	(A,107,68) RESISTOR ARRAY	RAB4CQ470J
	R	716	(A,148,42)	RS1/16SS473J	R	885	(A,107,62) RESISTOR ARRAY	RAB4CQ220J
	R	717	(A,148,41)	RS1/16SS473J	R	886	(A,107,59) RESISTOR ARRAY	RAB4CQ220J
	R	718	(A,149,38)	RS1/16SS103J	R	887	(A,107,53) RESISTOR ARRAY	RAB4CQ220J
	R	719	(A,132,30) CHIP RESISTOR	RS1/16SS3000F	R	888	(A,107,50) RESISTOR ARRAY	RAB4CQ220J
B	R	720	(A,131,32) CHIP RESISTOR	RS1/16SS3000F	R	903	(A,50,37)	RS1/16SS100J
	R	721	(A,130,33) CHIP RESISTOR	RS1/16SS3000F	R	906	(A,46,37)	RS1/16SS101J
	R	751	(B,114,31)	RS1/16SS473J	R	912	(B,41,28) CHIP RESISTOR	RS1/16S4750F
	R	752	(B,116,31)	RS1/16SS821J	R	913	(A,39,34)	RS1/16SS472J
	R	771	(A,149,24)	RS1/16SS471J	R	914	(A,44,16)	RS1/16SS100J
	R	773	(A,150,29)	RS1/16SS2701F	R	915	(A,44,18)	RS1/16SS100J
	R	774	(A,151,33) CHIP RESISTOR	RS1/16SS3300F	R	916	(B,44,20)	RS1/16SS471J
	R	781	(A,143,24)	RS1/16SS471J	R	918	(B,42,20)	RS1/16SS472J
	R	783	(A,145,29)	RS1/16SS2701F	R	919	(B,40,33)	RS1/10S0R0J
	R	784	(A,145,33) CHIP RESISTOR	RS1/16SS3300F	R	920	(B,41,30)	RS1/16S3901F
	R	791	(A,136,25)	RS1/16SS471J	R	925	(B,59,26)	RS1/16SS150J
C	R	793	(A,139,29)	RS1/16SS2701F	R	926	(A,44,37)	RS1/16SS100J
	R	794	(A,139,33) CHIP RESISTOR	RS1/16SS3300F	R	927	(A,42,37)	RS1/16SS100J
	R	801	(A,59,82) RESISTOR ARRAY	RAB4CQ100J	R	931	(A,60,36) RESISTOR ARRAY	RAB4CQ473J
	R	802	(A,80,80) RESISTOR ARRAY	RAB4CQ470J	R	932	(B,60,27)	RS1/16SS473J
	R	803	(A,60,82)	RS1/16SS100J	R	933	(A,60,31) RESISTOR ARRAY	RAB4CQ473J
	R	804	(A,62,82)	RS1/16SS100J	R	934	(A,60,28) RESISTOR ARRAY	RAB4CQ473J
	R	805	(B,55,82)	RS1/16SS103J	R	935	(A,60,25) RESISTOR ARRAY	RAB4CQ473J
	R	806	(B,60,78)	RS1/16SS103J	R	936	(A,59,22) RESISTOR ARRAY	RAB4CQ473J
	R	807	(A,65,83) RESISTOR ARRAY	RAB4CQ470J	R	937	(B,51,21) RESISTOR ARRAY	RAB4CQ473J
	R	808	(A,68,83) RESISTOR ARRAY	RAB4CQ470J	R	938	(B,47,21) RESISTOR ARRAY	RAB4CQ473J
D	R	809	(A,70,82)	RS1/16SS470J	R	951	(B,30,23)	RS1/16SS472J
	R	810	(B,70,77)	RS1/16SS470J	R	952	(B,35,23)	RS1/16SS472J
	R	811	(B,59,62)	RS1/16SS101J	R	953	(B,30,25)	RS1/16SS272J
	R	812	(A,57,54)	RS1/16SS470J	R	954	(B,35,24)	RS1/16SS272J
	R	813	(A,60,51)	RS1/16SS680J	R	955	(A,23,25)	RS1/16SS472J
	R	815	(A,76,54)	RS1/16SS472J	R	956	(A,28,25)	RS1/16SS472J
	R	818	(A,68,55)	RS1/16SS105J	R	986	(A,16,23)	RS1/16SS473J
	R	822	(A,61,51)	RS1/16SS470J	R	989	(A,16,26)	RS1/16SS102J
	R	823	(A,64,54)	RS1/16SS100J	R	1016	(B,69,41)	RS1/10S100J
	R	824	(A,68,53)	RS1/16SS152J	R	1017	(B,109,33)	RS1/10S0R0J
	R	825	(A,58,51) RESISTOR ARRAY	RAB4CQ680J	R	1019	(B,104,35)	RS1/10S0R0J
	R	826	(A,80,76) RESISTOR ARRAY	RAB4CQ470J	R	1020	(B,88,35)	RS1/10S0R0J
E	R	827	(A,80,73) RESISTOR ARRAY	RAB4CQ470J	R	1021	(B,96,35)	RS1/10S0R0J
	R	828	(A,80,70) RESISTOR ARRAY	RAB4CQ220J	R	1022	(A,91,42) CHIP RESISTOR	RS1/16SS1502F
	R	829	(A,80,67) RESISTOR ARRAY	RAB4CQ220J	R	1023	(A,90,42) CHIP RESISTOR	RS1/16SS1202F
	R	830	(A,80,63) RESISTOR ARRAY	RAB4CQ220J	R	1024	(A,89,42)	RS1/16SS273J
	R	831	(A,80,60) RESISTOR ARRAY	RAB4CQ220J	R	1026	(A,73,41)	RS1/10S0R0J
	R	832	(A,80,65)	RS1/16SS220J	R	1027	(A,73,43)	RS1/10S0R0J
	R	839	(A,54,85)	RS1/10S0R0J	R	1052	(A,62,17)	RS1/10S6R8J
	R	847	(A,71,53)	RS1/16SS0R0J	R	1053	(A,62,19)	RS1/10S6R8J
	R	848	(A,73,53)	RS1/16SS0R0J	R	1054	(A,65,25)	RS1/16SS102J
	R	849	(A,75,54)	RS1/16SS472J	R	1056	(A,63,28)	RS1/16SS333J
	R	850	(B,69,63)	RS1/16SS471J	R	1057	(A,65,27)	RS1/16SS103J
F	R	851	(B,70,63)	RS1/16SS221J	R	1058	(A,71,24)	RS1/16SS2001F
	R	852	(B,72,63)	RS1/16SS221J	R	1059	(A,69,40) CHIP RESISTOR	RS1/16SS1801F
	R	853	(B,58,86)	RS1/16SS103J	R	1061	(A,72,24)	RS1/16SS0R0J
	R	855	(B,57,86)	RS1/16SS104J	R	1091	(A,97,27)	RS1/10S0R0J

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
R	1092	(A,97,24)	RS1/10S0R0J	R	1309	(B,126,76)	RS1/16SS101J
R	1101	(A,20,108)	RS1/16SS102J	R	1310	(B,126,74)	RS1/16SS101J
R	1103	(A,21,113)	RS1/16SS473J	R	1311	(A,163,75)	RS1/16SS101J
R	1104	(A,20,85)	RS1/16SS102J	R	1312	(A,163,79) RESISTOR ARRAY	RAB4CQ220J
R	1106	(A,21,93)	RS1/16SS473J	R	1313	(A,163,81)	RS1/16SS220J
R	1107	(B,40,94)	RS1/16SS473J	R	1314	(A,163,85) RESISTOR ARRAY	RAB4CQ220J
R	1108	(B,38,94)	RS1/16SS271J	R	1315	(A,163,88) RESISTOR ARRAY	RAB4CQ220J
R	1109	(A,28,83)	RS1/16SS102J	R	1316	(A,163,94) RESISTOR ARRAY	RAB4CQ220J
R	1110	(A,39,83) CHIP RESISTOR	RS1/16SS4701F	R	1317	(A,163,97) RESISTOR ARRAY	RAB4CQ220J
R	1115	(A,39,97)	RS1/16SS101J	R	1318	(A,163,99)	RS1/16SS103J
R	1116	(A,29,96)	RS1/16SS101J	R	1351	(B,144,62)	RS1/16SS102J
R	1151	(A,21,63)	RS1/16SS102J	R	1381	(B,118,69)	RS1/16SS680J
R	1153	(A,21,70)	RS1/16SS473J	R	1382	(B,118,67)	RS1/16SS680J
R	1154	(A,21,40)	RS1/16SS102J	R	1383	(B,118,66)	RS1/16SS680J
R	1156	(A,21,47)	RS1/16SS473J	R	1384	(B,118,65)	RS1/16SS330J
R	1157	(B,40,49)	RS1/16SS473J	R	1385	(B,118,49) RESISTOR ARRAY	RAB4CQ680J
R	1158	(B,38,49)	RS1/16SS271J	R	1386	(B,118,46) RESISTOR ARRAY	RAB4CQ680J
R	1159	(A,28,38)	RS1/16SS102J	R	1387	(B,121,58) RESISTOR ARRAY	RAB4CQ680J
R	1160	(A,39,38) CHIP RESISTOR	RS1/16SS4701F	R	1388	(B,121,55) RESISTOR ARRAY	RAB4CQ680J
R	1165	(A,39,52)	RS1/16SS101J	R	1389	(B,115,69)	RS1/16SS473J
R	1166	(A,29,51)	RS1/16SS101J	R	1390	(B,115,67)	RS1/16SS473J
R	1201	(B,36,106)	RS1/16SS103J	R	1391	(B,115,66)	RS1/16SS473J
R	1202	(B,36,104)	RS1/16SS103J	R	1392	(B,115,65)	RS1/16SS473J
R	1203	(B,37,101)	RS1/16SS103J	R	1393	(B,129,92) RESISTOR ARRAY	RAB4CQ473J
R	1204	(B,37,106)	RS1/16SS101J	R	1394	(B,129,89) RESISTOR ARRAY	RAB4CQ473J
R	1205	(B,37,104)	RS1/16SS100J	R	1395	(A,114,49) RESISTOR ARRAY	RAB4CQ473J
R	1206	(B,37,102)	RS1/16SS100J	R	1396	(A,114,46) RESISTOR ARRAY	RAB4CQ473J
R	1207	(B,53,106)	RS1/16SS103J	R	1397	(A,117,58) RESISTOR ARRAY	RAB4CQ473J
R	1208	(B,53,104)	RS1/16SS103J	R	1398	(A,117,55) RESISTOR ARRAY	RAB4CQ473J
R	1209	(B,54,101)	RS1/16SS103J	R	2003		RS1/16SS0R0J
R	1210	(B,55,106)	RS1/16SS101J	R	2004		RS1/16SS0R0J
R	1211	(B,55,104)	RS1/16SS100J	R	2007		RS1/16SS0R0J
R	1212	(B,54,102)	RS1/16SS100J	R	2008		RS1/16SS0R0J
R	1213	(A,49,109)	RS1/16SS103J	R	2011		RS1/16SS0R0J
R	1214	(B,29,105)	RS1/16SS101J	R	2012		RS1/16SS0R0J
R	1215	(A,29,109)	RS1/16SS472J	CAPACITORS			
R	1216	(A,47,109)	RS1/16SS472J	C	1	(A,111,123)	CKSSYB104K10
R	1251	(B,36,71)	RS1/16SS103J	C	3	(A,102,120)	CKSQYB225K10
R	1252	(B,36,69)	RS1/16SS103J	C	101	(B,69,120)	CKSSYB103K16
R	1253	(B,37,66)	RS1/16SS103J	C	102	(B,72,121)	CKSSYB104K10
R	1254	(B,37,71)	RS1/16SS101J	C	103	(B,57,124)	CEVW101M16
R	1255	(B,37,69)	RS1/16SS100J	C	104	(B,60,119)	CKSSYB104K10
R	1256	(B,37,67)	RS1/16SS100J	C	105	(A,73,135)	CKSSYB104K10
R	1257	(B,36,61)	RS1/16SS103J	C	106	(A,63,121)	CKSSYB104K10
R	1258	(B,36,59)	RS1/16SS103J	C	107	(B,32,145)	CKSSYB104K10
R	1259	(B,37,56)	RS1/16SS103J	C	108	(A,74,140)	CKSSYB104K10
R	1260	(B,37,61)	RS1/16SS101J	C	109	(B,69,118)	CKSSYB104K10
R	1261	(B,37,59)	RS1/16SS100J	C	110	(B,63,146)	CKSSYB104K10
R	1262	(B,37,57)	RS1/16SS100J	C	111	(B,66,144)	CKSSYB103K16
R	1263	(B,30,76)	RS1/16SS103J	C	113	(B,74,144)	CKSSYB102K50
R	1264	(B,29,67)	RS1/16SS101J	C	201	(B,36,135)	CKSSYB104K10
R	1265	(A,29,73)	RS1/16SS472J	C	202	(B,33,131)	CKSSYB104K10
R	1266	(A,29,64)	RS1/16SS472J	C	203	(B,33,128)	CKSSYB104K10
R	1301	(A,139,103)	RS1/16SS332J	C	204	(B,36,128)	CKSSYB104K10
R	1302	(A,142,103)	RS1/16SS474J	C	205	(B,35,128)	CKSSYB104K10
R	1303	(B,135,96)	RS1/16SS0R0J	C	206	(B,30,124)	CEVW101M16
R	1305	(B,131,78)	RS1/16SS220J	C	207	(B,35,126)	CKSSYB104K10
R	1306	(B,131,77)	RS1/16SS103J	C	209	(A,34,120)	CKSSYB104K10
R	1307	(B,131,76)	RS1/16SS103J	C	210	(A,31,115)	CKSSYB104K10
R	1308	(B,126,77)	RS1/16SS101J				

	Mark No.	Description	Part No.	Mark No.	Description	Part No.
	C 211	(A,31,118)	CKSSYB102K50	C 410	(A,150,124)	CKSSYB104K10
	C 212	(B,37,124)	CKSSYB104K10	C 411	(A,157,124)	CKSSYB104K10
A	C 213	(B,35,124)	CKSSYB102K50	C 412	(A,156,136)	CKSSYB104K10
	C 214	(A,39,120)	CKSSYB104K10	C 415	(B,157,147)	CKSSYB104K10
	C 215	(B,42,120)	CKSSYB102K50	C 416	(B,123,102)	CKSSYB104K10
	C 216	(B,41,120)	CKSSYB102K50	C 419	(B,142,145)	CEVW101M16
	C 217	(B,53,139)	CEVW101M16	C 420	(B,136,144)	CKSSYB104K10
	C 218	(B,59,143)	CKSSYB104K10	C 424	(B,140,134)	CKSSYB104K10
	C 219	(B,43,128)	CKSSYB104K10	C 427	(A,135,146)	CKSSYB104K10
	C 220	(B,43,129)	CKSSYB104K10	C 429	(A,149,144)	CKSQYB225K10
	C 221	(B,44,131)	CKSSYB104K10	C 461	(A,110,107)	CKSSYB104K10
	C 222	(B,49,134)	CKSSYB104K10	C 462	(A,140,139)	CKSSYB104K10
B	C 223	(B,41,133)	CKSSYB104K10	C 463	(A,157,121)	CKSSYB104K10
	C 224	(B,40,135)	CKSSYB104K10	C 464	(A,112,97)	CKSSYB104K10
	C 225	(B,38,137)	CKSSYB104K10	C 465	(A,123,113)	CKSSYB104K10
	C 226	(B,35,136)	CKSSYB104K10	C 466	(A,166,134)	CKSSYB104K10
	C 232	(A,95,130)	CEVW101M16	C 467	(A,166,125)	CKSSYB104K10
	C 235	(A,100,133)	CKSSYB104K10	C 501	(B,81,91)	CKSSYB103K16
	C 241	(A,56,116)	CKSSYB104K10	C 502	(B,85,93)	CKSSYB104K10
	C 242	(B,24,130)	CCSRCH221J50	C 503	(B,64,91)	CEVW101M16
	C 243	(B,27,145)	CCSRCH221J50	C 504	(A,110,81)	CKSSYB104K10
	C 244	(B,24,122)	CKSRYP105K10	C 505	(A,71,95)	CKSSYB104K10
	C 245	(B,24,138)	CKSRYP105K10	C 506	(A,85,109)	CKSSYB104K10
C	C 246	(B,24,118)	CKSSYB104K10	C 507	(A,53,100)	CKSSYB104K10
	C 247	(B,23,135)	CKSSYB104K10	C 508	(A,109,88)	CKSSYB104K10
	C 248	(A,52,115)	CKSSYB104K10	C 551	(B,77,100)	CKSSYB104K10
	C 249	(B,43,125)	CKSSYB104K10	C 552	(B,101,100)	CKSSYB104K10
	C 291		CKSSYB104K10	C 571	(B,49,145)	CKSSYB104K10
	C 292		CKSSYB104K10	C 601	(A,166,47)	CEVW101M16
	C 301	(B,133,148)	CKSSYB104K10	C 602	(B,160,47)	CKSSYB104K10
	C 302	(B,133,139)	CKSSYB104K10	C 603	(A,163,41)	CKSRYP105K10
	C 303	(B,133,132)	CKSSYB104K10	C 604	(A,166,43)	CKSSYB104K10
	C 304	(A,142,117)	CEVW101M16	C 605	(A,168,36)	CKSSYB104K10
	C 305	(A,136,120)	CKSSYB104K10	C 606	(B,183,22)	CCSRCH8R0D50
D	C 309	(B,127,118)	CKSSYB104K10	C 607	(B,183,27)	CCSRCH8R0D50
	C 310	(B,129,118)	CKSSYB102K50	C 608	(B,181,32)	CKSSYB104K10
	C 311	(A,126,129)	CKSSYB104K10	C 609	(A,173,31) CHIP CAPACITOR	CKSRYP823K25
	C 315	(B,118,123)	CKSSYB104K10	C 610	(A,171,32)	CKSSYB103K16
	C 316	(A,110,128)	CKSSYB104K10	C 611	(A,172,30)	CCSRCH471J50
	C 317	(B,107,136)	CKSSYB104K10	C 612	(A,171,28)	CKSQYB225K10
	C 318	(B,107,138)	CKSSYB104K10	C 621	(B,169,26)	CKSSYB104K10
	C 319	(B,107,143)	CKSSYB104K10	C 622	(B,168,26)	CKSSYB104K10
	C 320	(A,121,146)	CKSSYB104K10	C 623	(B,166,26)	CKSSYB104K10
	C 321	(A,90,119)	CEVW101M16	C 624	(A,166,29)	CKSSYB103K16
	C 322	(B,85,132)	CKSSYB104K10	C 625	(A,166,28)	CKSSYB104K10
E	C 323	(B,85,138)	CKSSYB104K10	C 626	(A,166,26)	DCH1201
	C 324	(B,100,136)	CKSSYB102K50	C 627	(A,166,25)	CKSSYB104K10
	C 325	(B,92,118)	CKSSYB104K10	C 628	(A,165,23)	CKSSYB104K10
	C 326	(A,105,136)	CKSRYP105K10	C 629	(A,168,19)	CEVW101M16
	C 327	(A,102,134)	CKSSYB104K10	C 630	(A,160,26)	CKSSYB104K10
	C 328	(A,100,141)	CKSRYP474K10	C 631	(A,159,23)	CEVW100M16
	C 329	(A,98,137)	DCH1201	C 632	(A,162,20)	CKSSYB104K10
	C 330	(A,110,139)	CKSRYP472K50	C 633	(A,160,17)	CEVW100M16
	C 333	(B,98,143)	CKSSYB104K10	C 634	(A,160,29)	CKSSYB103K16
	C 401	(B,157,130)	CEVW101M16	C 635	(A,160,30)	CKSSYB104K10
	C 402	(B,162,127)	CCSRCH471J50	C 636	(A,160,32)	DCH1201
F	C 404	(A,153,136)	CKSSYB104K10	C 637	(A,163,32)	CKSSYB104K10
	C 405	(A,154,124)	CKSSYB104K10	C 638	(B,160,26)	CKSSYB104K10
	C 408	(A,159,128)	CKSSYB104K10	C 639	(B,159,26)	CKSSYB104K10
	C 409	(A,149,136)	CKSSYB104K10	C 640	(B,154,29)	CKSSYB104K10

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
C	641	(B,154,30)	CKSSYB102K50	C	827	(B,57,56)	CKSSYB104K10
C	643	(B,151,33)	CKSSYB103K16	C	828	(B,60,58)	CKSSYB104K10
C	644	(A,157,38)	CEVW101M16	C	829	(A,78,57)	CKSSYB104K10
C	645	(A,161,39)	CKSSYB104K10	C	830	(B,68,63)	CKSSYB103K16
C	701	(B,133,37)	CEVW101M16	C	831	(A,73,55)	CKSSYB103K16
C	702	(B,139,38)	CKSSYB104K10	C	832	(A,78,74)	CKSSYB104K10
C	704	(B,143,40)	CEVW101M16	C	833	(A,78,71)	CKSSYB104K10
C	705	(B,139,42)	CKSSYB104K10	C	834	(A,78,68)	CKSSYB104K10
C	706	(A,138,52)	CKSSYB104K10	C	835	(B,75,65)	CKSSYB104K10
C	707	(B,139,49)	CEVW100M16	C	836	(A,78,62)	CKSSYB104K10
C	708	(A,143,52)	CKSSYB104K10	C	837	(B,55,84)	CKSSYB103K16
C	709	(A,149,35)	CKSSYB104K10	C	838	(B,61,80)	CKSSYB103K16
C	710	(B,139,35)	CKSSYB104K10	C	881	(A,90,80)	CKSSYB104K10
C	711	(A,131,35)	CKSSYB104K10	C	882	(A,102,75)	CKSSYB104K10
C	712	(A,130,37)	CKSRYP392K50	C	883	(A,102,66)	CKSSYB104K10
C	713	(A,130,38)	CCSRCH821J50	C	884	(A,102,57)	CKSSYB104K10
C	714	(A,128,37)	CKSSYB103K16	C	901	(B,52,33)	CKSSYB104K10
C	751	(B,115,40)	CEVW101M16	C	902	(B,47,33)	CKSSYB104K10
C	752	(A,116,37)	CKSSYB104K10	C	903	(B,45,33)	CKSSYB104K10
C	753	(A,124,30)	CKSSYB104K10	C	904	(B,43,25)	CKSSYB104K10
C	754	(A,124,32)	CKSSYB104K10	C	905	(B,40,26)	CKSRYP105K10
C	756	(A,124,34)	CKSSYB104K10	C	908	(B,45,27)	CKSSYB104K10
C	757	(A,124,31)	CKSSYB104K10	C	911	(B,43,32)	CKSSYB104K10
C	758	(A,124,33)	CKSSYB104K10	C	912	(B,53,24)	CKSRYP105K10
C	759	(A,124,35)	CKSSYB104K10	C	913	(B,47,24)	CKSSYB104K10
C	771	(A,152,24)	CKSSYB104K10	C	914	(B,45,24)	CKSSYB104K10
C	772	(A,151,30)	CCSRCH680J50	C	915	(B,43,20)	CKSSYB103K16
C	773	(A,151,31)	CCSRCH330J50	C	916	(B,50,42)	CEVW101M16
C	781	(A,145,24)	CKSSYB104K10	C	917	(B,59,40)	CEVW101M16
C	782	(A,145,30)	CCSRCH680J50	C	918	(B,51,28)	CKSRYP105K10
C	783	(A,145,31)	CCSRCH330J50	C	919	(A,57,29)	CKSSYB104K10
C	791	(A,140,24)	CKSSYB104K10	C	951	(A,20,17)	CKSSYB104K10
C	792	(A,140,30)	CCSRCH680J50	C	1001	(B,77,35)	CEVW101M16
C	793	(A,140,31)	CCSRCH330J50	C	1002	(B,70,39)	CKSSYB104K10
C	801	(B,81,62)	CKSRYP105K10	C	1012	(B,101,36)	CKSRYP105K10
C	802	(A,61,80)	CKSSYB104K10	C	1013	(B,85,36)	CKSRYP105K10
C	803	(A,57,80)	CKSSYB104K10	C	1014	(B,93,36)	CKSRYP105K10
C	804	(A,63,81)	CKSSYB104K10	C	1015	(B,100,34) CHIP CERAMIC C.	DCG1028
C	805	(B,65,60)	CKSSYB104K10	C	1016	(B,84,34)	CKSQYB225K10
C	806	(A,67,80)	CKSSYB104K10	C	1017	(B,92,34)	CKSQYB225K10
C	807	(A,66,55)	CKSSYB104K10	C	1019	(A,85,46)	DCH1201
C	808	(A,66,46)	CCSRCH120J50	C	1020	(A,83,50)	DCH1201
C	809	(A,70,46)	CCSRCH100D50	C	1021	(A,89,45) CHIP CERAMIC C.	CCSRCH821J25
C	810	(A,72,80)	CKSSYB104K10	C	1052	(A,64,29)	CKSQYB105K16
C	811	(B,67,60)	CKSSYB104K10	C	1053	(A,68,24)	CKSQYB105K16
C	812	(B,81,57)	CEVW101M16	C	1054	(B,64,30)	CKSSYB104K10
C	813	(A,70,54)	CKSSYB104K10	C	1055	(B,68,35)	CEVW101M16
C	814	(A,74,53)	CKSSYB104K10	C	1056	(A,64,35)	CKSRYP224K16
C	815	(B,46,83)	CEVW101M16	C	1057	(B,61,18)	CKSSYB102K50
C	816	(B,55,58)	CKSRYP105K10	C	1058	(B,61,16)	CKSSYB104K10
C	817	(A,54,83)	CKSRYP105K10	C	1101	(B,35,84)	CEVW101M16
C	818	(B,56,74)	CKSSYB104K10	C	1102	(A,31,84)	CKSSYB104K10
C	819	(B,56,72)	CKSSYB104K10	C	1103	(A,39,82)	CKSSYB104K10
C	820	(B,56,70)	CKSSYB104K10	C	1104	(A,41,90)	CKSSYB104K10
C	821	(B,58,68)	CKSRYP105K10	C	1105	(A,38,97)	CKSSYB104K10
C	822	(B,56,65)	CKSSYB104K10	C	1106	(A,29,97)	CKSSYB104K10
C	823	(B,56,63)	CKSSYB104K10	C	1107	(A,28,94)	CKSSYB104K10
C	824	(B,56,60)	CKSSYB104K10	C	1108	(A,28,90)	CKSSYB104K10
C	825	(B,50,57)	CEVW101M16	C	1109	(A,28,86)	CKSSYB104K10
C	826	(B,57,58)	CKSSYB104K10	C	1151	(B,35,39)	CEVW101M16

Mark	No.	Description	Part No.
C	1152 (A,31,39)		CKSSYB104K10
C	1153 (A,39,37)		CKSSYB104K10
A	C	1154 (A,41,45)	CKSSYB104K10
	C	1155 (A,38,52)	CKSSYB104K10
	C	1156 (A,29,52)	CKSSYB104K10
	C	1157 (A,28,49)	CKSSYB104K10
	C	1158 (A,28,45)	CKSSYB104K10
	C	1159 (A,28,41)	CKSSYB104K10
	C	1201 (B,42,108)	CKSSYB104K10
	C	1202 (A,39,109)	CKSSYB104K10
	C	1203 (B,59,108)	CKSSYB104K10
	C	1204 (A,56,109)	CKSSYB104K10
B	C	1205 (B,31,110)	CKSSYB104K10
	C	1206 (B,49,110)	CKSSYB104K10
	C	1251 (B,42,73)	CKSSYB104K10
	C	1252 (A,40,73)	CKSSYB104K10
	C	1253 (B,42,63)	CKSSYB104K10
	C	1254 (A,40,63)	CKSSYB104K10
	C	1255 (B,31,75)	CKSSYB104K10
	C	1256 (B,31,65)	CKSSYB104K10
	C	1301 (B,160,104)	CEVW101M16
	C	1302 (B,151,104)	CEVW100M16
C	C	1305 (A,166,109)	CEVW101M16
	C	1306 (A,138,110)	CCSRCH120J50
	C	1307 (A,143,110)	CCSRCH120J50
	C	1308 (A,128,94)	CKSSYB104K10
	C	1309 (A,128,90)	CKSSYB104K10
	C	1310 (A,128,83)	CKSSYB104K10
	C	1311 (A,128,80)	CKSSYB104K10
	C	1312 (A,128,73)	CKSSYB104K10
	C	1313 (B,130,74)	CKSSYB103K16
	C	1314 (A,137,67)	CKSSYB105K6R3
	C	1315 (A,140,66)	CKSSYB105K6R3
	C	1316 (A,146,66)	CKSSYB105K6R3
D	C	1317 (A,150,66)	CKSSYB105K6R3
	C	1318 (A,154,66)	CKSSYB105K6R3
	C	1319 (B,159,76)	CKSSYB104K10
	C	1320 (B,157,81)	CKSSYB104K10
	C	1321 (A,163,83)	CKSSYB104K10
	C	1322 (A,163,90)	CKSSYB104K10
	C	1323 (A,163,92)	CKSSYB104K10
	C	1324 (A,158,102)	CKSSYB104K10
	C	1325 (A,157,104)	CKSSYB104K10
	C	1326 (A,156,102)	CKSSYB104K10
	C	1327 (A,154,104)	CKSSYB104K10
E	C	1328 (A,153,102)	CKSSYB104K10
	C	1329 (A,152,104)	CKSSYB104K10
	C	1330 (A,151,102)	CKSSYB104K10
	C	1331 (A,149,104)	CKSSYB104K10
	C	1332 (A,148,102)	CKSSYB104K10
	C	1333 (A,147,104)	CKSSYB104K10
	C	1334 (A,144,102)	CKSSYB104K10
	C	1335 (B,140,96)	CKSSYB104K10
	C	1336 (A,137,102)	CKSSYB104K10
	C	1351 (B,162,69) CHIP OS CAPACITOR	ACH7174
	C	1352 (B,135,78)	CKSSYB105K6R3
F	C	1353 (B,136,78)	CKSSYB105K6R3
	C	1354 (B,139,78)	CKSSYB105K6R3
	C	1355 (B,141,78)	CKSSYB105K6R3
	C	1356 (B,149,78)	CKSSYB105K6R3

Mark	No.	Description	Part No.
C	1357 (B,152,78)		CKSSYB105K6R3
C	1358 (B,154,78)		CKSSYB105K6R3
C	1359 (B,156,78)		CKSSYB105K6R3
C	1360 (B,153,61)		CKSSYB105K6R3
C	1361 (B,150,61)		CKSSYB105K6R3
C	1362 (B,141,62)		CKSSYB105K6R3
C	1363 (B,137,61)		CKSSYB105K6R3
C	1381 (B,123,71)		CKSSYB104K10
C	1382 (B,123,53)		CKSSYB104K10
C	1383 (B,126,62)		CKSSYB104K10
C	2001 (A,27,112)		CKSSYB104K10
C	2002 (A,27,111)		CKSSYB102K50

AGF HDMI & DVC ASSY (VSX-82TXS)

MISCELLANEOUS

IC	405 (B,123,106)	IC	TC74LCX541FTS1
IC	464 (A,112,93)	IC	TC74VHC00FTS1
IC	465 (A,123,109)	IC	TC74LCX541FTS1
IC	501 (A,84,100)	CPU	PEG118A
IC	502 (B,89,100)	FLASH ROM	AYW7107
		FLASH MEMORY IC(4M)	S29AL004D70TFI010
IC	504 (A,53,96)	IC	TC74VHC125FTS1
IC	505 (A,109,78)	LOGIC IC	CD4094BPW
IC	601 (B,164,37)	VIDEO DECODER	ADV7401BSTZ-80
IC	602 (B,178,33)	IC	TC7WU04FU
IC	701 (A,139,44)	VIDEO ENCODER IC	ADV7322KSTZ
IC	751 (A,117,32)	VIDEO FILTER IC	FMS6403MTC
IC	801 (A,65,68)	HDMI RECEIVER	SII9033CTU
IC	881 (A,89,76)	IC	TC74LCX541FTS1
IC	882 (A,101,71)	IC	TC74LCX541FTS1
IC	883 (A,101,62)	IC	TC74LCX541FTS1
IC	884 (A,101,53)	IC	TC74LCX541FTS1
IC	901 (A,48,28)	HDMI TRANSMITTER	SII9030CTU-7
△ IC	1001 (B,101,43)	REGULATOR IC	NJM2885DL1-25
△ IC	1002 (B,85,43)	REGULATOR IC	NJM2845DL1-33
△ IC	1003 (B,93,43)	REGULATOR IC	NJM2845DL1-33
△ IC	1004 (A,85,42)	DC/DC CONVERTER IC	BD9106FVM
△ IC	1051 (A,70,32)	REGULATOR IC	PQ200WNA1ZPH
IC	1101 (A,34,90)	HDMI/DVI CABLE EQ	CXB1441R
IC	1201 (B,42,105)	EEPROM	BR24L02FV-W
IC	1202 (A,40,105)	LOGIC IC	SN74CBT3257CPW
IC	1203 (B,59,105)	EEPROM	BR24L02FV-W
IC	1204 (A,57,105)	LOGIC IC	SN74CBT3257CPW
IC	1205 (B,31,108)	IC	TC7WBD125AFK
IC	1206 (B,49,108)	IC	TC7WBD125AFK
IC	1251 (B,42,70)	EEPROM	BR24L02FV-W
IC	1252 (A,40,70)	LOGIC IC	SN74CBT3257CPW
IC	1301 (A,145,85)	IC(VIDEO FORMAT COV)	FLI2310-LF-CF
IC	1351 (B,145,70)	64M SDRAM	EDS6432AFTA-6B
IC	1381 (B,124,66)	IC	TC74LCX541FTS1
IC	1382 (B,124,48)	IC	TC74LCX541FTS1
IC	1383 (B,127,57)	IC	TC74LCX541FTS1
Q	462 (B,122,99)	DIGITAL TRANSISTOR	DTC124EUA
Q	464 (A,124,103)	CHIP TRANSISTOR	RN4903
Q	751 (B,114,34)	TRANSISTOR	2SA1576A
Q	752 (B,117,34)	CHIP TRANSISTOR	DTC114YUA
Q	771 (A,151,26)	TRANSISTOR	2SA1576A
Q	781 (A,145,26)	TRANSISTOR	2SA1576A
Q	791 (A,139,26)	TRANSISTOR	2SA1576A
Q	801 (B,58,82)	DUAL MOS FET	HN1K02FU
Q	901 (B,38,29)	CHIP DIGITAL TRANS.	DTA124EUA

Mark	No.	Description	Part No.
Q	951	(B,32,24) CHIP TR (PNP X 2)	UMB1N
Q	952	(B,31,27) CHIP TRANSISTOR	DTC114YUA
Q	953	(A,25,24) DUAL MOS FET	HN1K02FU
Q	1051	(A,63,25) TRANSISTOR	2SA1576A
Q	1052	(A,63,32) DIGITAL TRANSISTOR	DTC124EUA
Q	1101	(A,23,110) CHIP TRANSISTOR	DTC114YUA
Q	1102	(A,24,89) CHIP TRANSISTOR	DTC114YUA
Q	1103	(B,40,92) CHIP TRANSISTOR	2SB1689
Q	1104	(B,36,96) CHIP TRANSISTOR	DTC114YUA
Q	1151	(A,25,65) CHIP TRANSISTOR	DTC114YUA
Q	1201	(B,37,109) CHIP TRANSISTOR	DTC114YUA
Q	1202	(B,55,109) CHIP TRANSISTOR	DTC114YUA
Q	1203	(A,48,106) CHIP TRANSISTOR	DTC114YUA
Q	1251	(B,36,74) CHIP TRANSISTOR	DTC114YUA
Q	1281	(B,31,69) DUAL MOS FET	HN1K02FU
Q	1282	(B,31,73) DUAL MOS FET	HN1K02FU
D	461	(A,119,103) DIODE	1SS355
D	551	(B,102,103) CHIP DIODE	RB501V-40
D	801	(B,57,89) DIODE	DAN202U
D	981	(A,19,25) DIODE	UDZS5R1(B)
D	1101	(A,21,114) DIODE	DAN202U
D	1102	(A,18,92) DIODE	DAN202U
D	1151	(A,18,70) DIODE	DAN202U
L	462	(A,108,98) CHIP SOLID INDUCTOR	ATL7002
L	501	(B,57,93) CHIP SOLID INDUCTOR	ATL7002
L	601	(A,171,49) CHIP SOLID INDUCTOR	ATL7002
L	602	(A,174,27) CHIP SOLID INDUCTOR	ATL7002
L	603	(A,152,40) CHIP SOLID INDUCTOR	ATL7002
L	604	(A,166,14) CHIP SOLID INDUCTOR	ATL7002
L	701	(B,148,41) CHIP SOLID INDUCTOR	ATL7002
L	702	(B,136,42) CHIP SOLID INDUCTOR	ATL7002
L	703	(B,144,49) CHIP SOLID INDUCTOR	ATL7002
L	771	(A,148,31) INDUCTOR	LCTC100K2125
L	781	(A,143,31) INDUCTOR	LCTC100K2125
L	791	(A,137,31) INDUCTOR	LCTC100K2125
L	801	(B,80,52) CHIP BEADS	ATL7010
L	803	(B,50,88) CHIP BEADS	ATL7010
L	804	(B,45,55) CHIP BEADS	ATL7010
L	902	(B,35,30) CHIP BEADS	ATL7010
L	904	(B,45,36) CHIP BEADS	ATL7010
L	905	(B,60,45) CHIP BEADS	ATL7010
⚠	L 951	(A,27,12) COIL	ATH7022
⚠	L 952	(A,27,15) COIL	ATH7022
⚠	L 953	(A,27,18) COIL	ATH7022
⚠	L 954	(A,27,20) COIL	ATH7022
L	1002	(A,78,46) INDUCTOR	ATL7012
L	1018	CHIP BEADS	ATL7010
L	1028	CHIP BEADS	ATL7010
L	1101	(B,40,89) CHIP BEADS	ATL7010
L	1301	(B,166,107) CHIP SOLID INDUCTOR	ATL7002
L	1302	(B,153,108) CHIP SOLID INDUCTOR	ATL7002
L	1303	(A,152,108) CHIP SOLID INDUCTOR	ATL7002
L	1304	(A,159,108) CHIP SOLID INDUCTOR	ATL7002
L	1305	(A,161,111) CHIP SOLID INDUCTOR	ATL7002
L	1351	(B,167,71) CHIP SOLID INDUCTOR	ATL7002
JA	901	(A,14,13) HDMI CONNECTOR	AKP7210
JA	1101	(A,14,103) HDMI CONNECTOR	AKP7210
JA	1102	(A,14,81) HDMI CONNECTOR	AKP7210
JA	1151	(A,14,58) HDMI CONNECTOR	AKP7210
X	501	(A,83,88) CERAMIC RESONATOR (15.7 MHz)	XSS3004

Mark	No.	Description	Part No.
X	601	(B,179,24) CRYSTAL RESONATOR (28.63636 MHz)	ASS7069
X	801	(A,68,49) CRYSTAL RESONATOR (27.000 MHz)	ASS7068
X	1301	(A,141,106) CRYSTAL RESONATOR (13.5 MHz)	ASS7070
CN	501	(A,13,36) 07P CONNECTOR	RKN1048
CN	1001	(A,70,18) CONNECTOR	CKS4668
CN	1002	(A,102,18) CONNECTOR	CKS4668
RESISTORS			
R	441	(B,118,104)	RS1/16SS0R0J
R	442	(B,129,103)	RS1/16SS101J
R	443	(B,129,104)	RS1/16SS101J
R	444	(B,129,106)	RS1/16SS101J
R	445	(B,129,108) RESISTOR ARRAY	RAB4CQ101J
R	461	(B,113,100) RESISTOR ARRAY	RAB4CQ100J
R	462	(B,113,103) RESISTOR ARRAY	RAB4CQ100J
R	463	(A,118,111)	RS1/16SS0R0J
R	464	(A,118,93)	RS1/16SS103J
R	465	(A,120,113)	RS1/16SS0R0J
R	467	(A,124,100)	RS1/16SS0R0J
R	468	(B,120,102)	RS1/16SS103J
R	470	(B,129,101)	RS1/16SS0R0J
R	471	(A,127,103)	RS1/16SS103J
R	474	(A,129,111)	RS1/16SS390J
R	475	(A,129,110)	RS1/16SS101J
R	476	(A,129,109)	RS1/16SS101J
R	477	(A,129,107) RESISTOR ARRAY	RAB4CQ101J
R	506	(A,80,87)	RS1/16SS221J
R	508	(B,84,91)	RS1/16SS472J
R	511	(A,87,87)	RS1/16SS101J
R	517	(A,91,87)	RS1/16SS101J
R	520	(B,78,83)	RS1/16SS103J
R	524	(B,92,87)	RS1/16SS100J
R	525	(A,93,87)	RS1/16SS100J
R	526	(A,99,89)	RS1/16SS100J
R	527	(A,99,90)	RS1/16SS100J
R	528	(A,99,97)	RS1/16SS470J
R	529	(A,99,99)	RS1/16SS473J
R	530	(B,95,82)	RS1/16SS222J
R	531	(B,96,82)	RS1/16SS222J
R	533	(A,101,89)	RS1/16SS472J
R	534	(A,101,90)	RS1/16SS472J
R	537	(A,75,87)	RS1/16SS101J
R	538	(B,74,87)	RS1/16SS101J
R	539	(A,69,93)	RS1/16SS101J
R	540	(A,48,96)	RS1/16SS470J
R	541	(A,59,96)	RS1/16SS103J
R	542	(A,59,97)	RS1/16SS470J
R	543	(A,59,95)	RS1/16SS472J
R	544	(A,59,94)	RS1/16SS470J
R	546	(A,99,94)	RS1/16SS101J
R	549	(A,99,98)	RS1/16SS473J
R	551	(B,77,105)	RS1/16SS473J
R	561	(B,86,91)	RS1/16SS103J
R	562	(B,87,91)	RS1/16SS103J
R	564	(B,89,91)	RS1/16SS103J
R	565	(B,90,91)	RS1/16SS103J
R	567	(B,91,91)	RS1/16SS103J
R	569	(A,99,105)	RS1/16SS103J

	Mark No.	Description	Part No.	Mark No.	Description	Part No.
	R 571	(A,20,38)	RS1/16SS103J	R 715	(A,148,40)	RS1/16SS0R0J
	R 574	(A,99,101)	RS1/16SS473J	R 716	(A,148,42)	RS1/16SS473J
A	R 575	(A,99,104)	RS1/16SS101J	R 717	(A,148,41)	RS1/16SS473J
	R 576	(A,99,103)	RS1/16SS101J	R 718	(A,149,38)	RS1/16SS103J
	R 577	(A,97,110)	RS1/16SS101J	R 719	(A,132,30) CHIP RESISTOR	RS1/16SS3000F
	R 581	(A,99,106)	RS1/16SS101J	R 720	(A,131,32) CHIP RESISTOR	RS1/16SS3000F
	R 586	(B,75,91)	RS1/16SS103J	R 721	(A,130,33) CHIP RESISTOR	RS1/16SS3000F
	R 588	(B,94,91)	RS1/16SS103J	R 751	(B,114,31)	RS1/16SS473J
	R 594	(B,89,82)	RS1/16SS0R0J	R 752	(B,116,31)	RS1/16SS821J
	R 601	(A,160,43)	RS1/16SS101J	R 771	(A,149,24)	RS1/16SS471J
	R 602	(B,158,47)	RS1/16SS470J	R 773	(A,150,29)	RS1/16SS2701F
	R 603	(B,162,48) RESISTOR ARRAY	RAB4CQ470J	R 774	(A,151,33) CHIP RESISTOR	RS1/16SS3300F
	R 604	(B,165,47)	RS1/16SS330J	R 781	(A,143,24)	RS1/16SS471J
B	R 605	(B,167,47)	RS1/16SS330J	R 783	(A,145,29)	RS1/16SS2701F
	R 606	(B,168,47)	RS1/16SS330J	R 784	(A,145,33) CHIP RESISTOR	RS1/16SS3300F
	R 607	(B,170,49) RESISTOR ARRAY	RAB4CQ560J	R 791	(A,136,25)	RS1/16SS471J
	R 608	(A,172,43)	RS1/16SS560J	R 793	(A,139,29)	RS1/16SS2701F
	R 609	(A,172,42)	RS1/16SS560J	R 794	(A,139,33) CHIP RESISTOR	RS1/16SS3300F
	R 610	(A,172,41)	RS1/16SS103J	R 801	(A,59,82) RESISTOR ARRAY	RAB4CQ100J
	R 611	(A,172,38)	RS1/16SS100J	R 802	(A,80,80) RESISTOR ARRAY	RAB4CQ470J
	R 612	(A,172,35)	RS1/16SS560J	R 803	(A,60,82)	RS1/16SS100J
	R 613	(A,172,34)	RS1/16SS560J	R 804	(A,62,82)	RS1/16SS100J
	R 614	(B,178,30)	RS1/16SS105J	R 805	(B,55,82)	RS1/16SS103J
	R 615	(B,181,30)	RS1/16SS331J	R 806	(B,60,78)	RS1/16SS103J
C	R 616	(B,175,37)	RS1/16SS101J	R 807	(A,65,83) RESISTOR ARRAY	RAB4CQ470J
	R 617	(B,181,35)	RS1/16SS0R0J	R 808	(A,68,83) RESISTOR ARRAY	RAB4CQ470J
	R 618	(A,175,32)	RS1/16SS132J	R 809	(A,70,82)	RS1/16SS470J
	R 619	(A,173,32)	RS1/16SS391J	R 810	(B,70,77)	RS1/16SS470J
	R 621	(B,174,17)	RS1/10S0R0J	R 811	(B,59,62)	RS1/16SS101J
	R 622	(B,174,14)	RS1/10S0R0J	R 812	(A,57,54)	RS1/16SS470J
	R 623	(A,169,29)	RS1/16SS103J	R 813	(A,60,51)	RS1/16SS680J
	R 624	(A,164,32)	RS1/16SS272J	R 815	(A,76,54)	RS1/16SS472J
	R 625	(A,165,32)	RS1/16SS272J	R 818	(A,68,55)	RS1/16SS105J
	R 631	(B,151,32)	RS1/16SS471J	R 822	(A,61,51)	RS1/16SS470J
	R 632	(B,154,35)	RS1/16SS103J	R 823	(A,64,54)	RS1/16SS100J
D	R 634	(B,154,36)	RS1/16SS330J	R 824	(A,68,53)	RS1/16SS152J
	R 635	(B,154,37)	RS1/16SS330J	R 825	(A,58,51) RESISTOR ARRAY	RAB4CQ680J
	R 636	(B,154,40) RESISTOR ARRAY	RAB4CQ470J	R 826	(A,80,76) RESISTOR ARRAY	RAB4CQ470J
	R 637	(B,154,42)	RS1/16SS470J	R 827	(A,80,73) RESISTOR ARRAY	RAB4CQ470J
	R 638	(B,154,43)	RS1/16SS470J	R 828	(A,80,70) RESISTOR ARRAY	RAB4CQ220J
	R 661	(B,152,53) RESISTOR ARRAY	RAB4CQ473J	R 829	(A,80,67) RESISTOR ARRAY	RAB4CQ220J
	R 662	(B,152,50) RESISTOR ARRAY	RAB4CQ473J	R 830	(A,80,63) RESISTOR ARRAY	RAB4CQ220J
	R 663	(B,152,58) RESISTOR ARRAY	RAB4CQ473J	R 831	(A,80,60) RESISTOR ARRAY	RAB4CQ220J
	R 664	(B,152,56) RESISTOR ARRAY	RAB4CQ473J	R 832	(A,80,65)	RS1/16SS220J
	R 665	(A,172,39)	RS1/16SS473J	R 839	(A,54,85)	RS1/10S0R0J
E	R 666	(B,152,47) RESISTOR ARRAY	RAB4CQ473J	R 847	(A,71,53)	RS1/16SS0R0J
	R 701	(A,149,36)	RS1/16SS1501F	R 848	(A,73,53)	RS1/16SS0R0J
	R 702	(A,151,36)	RS1/16SS1501F	R 849	(A,75,54)	RS1/16SS472J
	R 703	(A,151,35)	RS1/16SS390J	R 850	(B,69,63)	RS1/16SS471J
	R 704	(A,133,37)	RS1/16SS681J	R 851	(B,70,63)	RS1/16SS221J
	R 705	(A,134,36)	RS1/16SS1501F	R 852	(B,72,63)	RS1/16SS221J
	R 706	(A,132,36)	RS1/16SS1501F	R 853	(B,58,86)	RS1/16SS103J
	R 707	(A,130,36)	RS1/16SS390J	R 855	(B,57,86)	RS1/16SS104J
	R 708	(A,128,39)	RS1/16SS471J	R 856	(B,56,84)	RS1/16SS103J
	R 709	(A,128,40)	RS1/16SS103J	R 857	(B,58,79)	RS1/16SS104J
	R 710	(A,131,46)	RS1/16SS470J	R 858	(B,61,79)	RS1/16SS103J
F	R 711	(A,131,47)	RS1/16SS470J	R 859	(B,58,78)	RS1/16SS103J
	R 712	(B,133,47)	RS1/16SS103J	R 881	(A,95,77) RESISTOR ARRAY	RAB4CQ220J
	R 713	(B,138,46)	RS1/16SS472J	R 882	(A,94,75)	RS1/16SS150J
	R 714	(A,148,43)	RS1/16SS0R0J	R 883	(A,107,71) RESISTOR ARRAY	RAB4CQ470J

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
R	884	(A,107,68) RESISTOR ARRAY	RAB4CQ470J	R	1116	(A,29,96)	RS1/16SS101J
R	885	(A,107,62) RESISTOR ARRAY	RAB4CQ220J	R	1151	(A,21,63)	RS1/16SS102J
R	886	(A,107,59) RESISTOR ARRAY	RAB4CQ220J	R	1153	(A,21,70)	RS1/16SS473J
R	887	(A,107,53) RESISTOR ARRAY	RAB4CQ220J	R	1201	(B,36,106)	RS1/16SS103J
R	888	(A,107,50) RESISTOR ARRAY	RAB4CQ220J	R	1202	(B,36,104)	RS1/16SS103J
R	903	(A,50,37)	RS1/16SS100J	R	1203	(B,37,101)	RS1/16SS103J
R	906	(A,46,37)	RS1/16SS101J	R	1204	(B,37,106)	RS1/16SS101J
R	912	(B,41,28) CHIP RESISTOR	RS1/16S4750F	R	1205	(B,37,104)	RS1/16SS100J
R	913	(A,39,34)	RS1/16SS472J	R	1206	(B,37,102)	RS1/16SS100J
R	914	(A,44,16)	RS1/16SS100J	R	1207	(B,53,106)	RS1/16SS103J
R	915	(A,44,18)	RS1/16SS100J	R	1208	(B,53,104)	RS1/16SS103J
R	916	(B,44,20)	RS1/16SS471J	R	1209	(B,54,101)	RS1/16SS103J
R	918	(B,42,20)	RS1/16SS472J	R	1210	(B,55,106)	RS1/16SS101J
R	919	(B,40,33)	RS1/10S0R0J	R	1211	(B,55,104)	RS1/16SS100J
R	920	(B,41,30)	RS1/16S3901F	R	1212	(B,54,102)	RS1/16SS100J
R	925	(B,59,26)	RS1/16SS150J	R	1213	(A,49,109)	RS1/16SS103J
R	926	(A,44,37)	RS1/16SS100J	R	1214	(B,29,105)	RS1/16SS101J
R	927	(A,42,37)	RS1/16SS100J	R	1215	(A,29,109)	RS1/16SS472J
R	931	(A,60,36) RESISTOR ARRAY	RAB4CQ473J	R	1216	(A,47,109)	RS1/16SS472J
R	932	(B,60,27)	RS1/16SS473J	R	1251	(B,36,71)	RS1/16SS103J
R	933	(A,60,31) RESISTOR ARRAY	RAB4CQ473J	R	1252	(B,36,69)	RS1/16SS103J
R	934	(A,60,28) RESISTOR ARRAY	RAB4CQ473J	R	1253	(B,37,66)	RS1/16SS103J
R	935	(A,60,25) RESISTOR ARRAY	RAB4CQ473J	R	1254	(B,37,71)	RS1/16SS101J
R	936	(A,59,22) RESISTOR ARRAY	RAB4CQ473J	R	1255	(B,37,69)	RS1/16SS100J
R	937	(B,51,21) RESISTOR ARRAY	RAB4CQ473J	R	1256	(B,37,67)	RS1/16SS100J
R	938	(B,47,21) RESISTOR ARRAY	RAB4CQ473J	R	1265	(A,29,73)	RS1/16SS472J
R	951	(B,30,23)	RS1/16SS472J	R	1266	(A,29,64)	RS1/16SS472J
R	952	(B,35,23)	RS1/16SS472J	R	1301	(A,139,103)	RS1/16SS332J
R	953	(B,30,25)	RS1/16SS272J	R	1302	(A,142,103)	RS1/16SS474J
R	954	(B,35,24)	RS1/16SS272J	R	1303	(B,135,96)	RS1/16SS0R0J
R	955	(A,23,25)	RS1/16SS472J	R	1305	(B,131,78)	RS1/16SS220J
R	956	(A,28,25)	RS1/16SS472J	R	1306	(B,131,77)	RS1/16SS103J
R	986	(A,16,23)	RS1/16SS473J	R	1307	(B,131,76)	RS1/16SS103J
R	989	(A,16,26)	RS1/16SS102J	R	1308	(B,126,77)	RS1/16SS101J
R	1016	(B,69,41)	RS1/10S100J	R	1309	(B,126,76)	RS1/16SS101J
R	1017	(B,109,33)	RS1/10S0R0J	R	1310	(B,126,74)	RS1/16SS101J
R	1019	(B,104,35)	RS1/10S0R0J	R	1311	(A,163,75)	RS1/16SS101J
R	1020	(B,88,35)	RS1/10S0R0J	R	1312	(A,163,79) RESISTOR ARRAY	RAB4CQ220J
R	1021	(B,96,35)	RS1/10S0R0J	R	1313	(A,163,81)	RS1/16SS220J
R	1022	(A,91,42) CHIP RESISTOR	RS1/16SS1502F	R	1314	(A,163,85) RESISTOR ARRAY	RAB4CQ220J
R	1023	(A,90,42) CHIP RESISTOR	RS1/16SS1202F	R	1315	(A,163,88) RESISTOR ARRAY	RAB4CQ220J
R	1024	(A,89,42)	RS1/16SS273J	R	1316	(A,163,94) RESISTOR ARRAY	RAB4CQ220J
R	1052	(A,62,17)	RS1/10S6R8J	R	1317	(A,163,97) RESISTOR ARRAY	RAB4CQ220J
R	1053	(A,62,19)	RS1/10S6R8J	R	1318	(A,163,99)	RS1/16SS103J
R	1054	(A,65,25)	RS1/16SS102J	R	1351	(B,144,62)	RS1/16SS102J
R	1056	(A,63,28)	RS1/16SS333J	R	1381	(B,118,69)	RS1/16SS680J
R	1057	(A,65,27)	RS1/16SS103J	R	1382	(B,118,67)	RS1/16SS680J
R	1058	(A,71,24)	RS1/16SS2001F	R	1383	(B,118,66)	RS1/16SS680J
R	1059	(A,69,40) CHIP RESISTOR	RS1/16SS1801F	R	1384	(B,118,65)	RS1/16SS330J
R	1091	(A,97,27)	RS1/10S0R0J	R	1385	(B,118,49) RESISTOR ARRAY	RAB4CQ680J
R	1092	(A,97,24)	RS1/10S0R0J	R	1386	(B,118,46) RESISTOR ARRAY	RAB4CQ680J
R	1101	(A,20,108)	RS1/16SS102J	R	1387	(B,121,58) RESISTOR ARRAY	RAB4CQ680J
R	1103	(A,23,113)	RS1/16SS473J	R	1388	(B,121,55) RESISTOR ARRAY	RAB4CQ680J
R	1104	(A,20,85)	RS1/16SS102J	R	1389	(B,115,69)	RS1/16SS473J
R	1106	(A,21,93)	RS1/16SS473J	R	1390	(B,115,67)	RS1/16SS473J
R	1107	(B,40,94)	RS1/16SS473J	R	1391	(B,115,66)	RS1/16SS473J
R	1108	(B,38,94)	RS1/16SS271J	R	1392	(B,115,65)	RS1/16SS473J
R	1109	(A,28,83)	RS1/16SS102J	R	1393	(B,129,92) RESISTOR ARRAY	RAB4CQ473J
R	1110	(A,39,83) CHIP RESISTOR	RS1/16SS4701F	R	1394	(B,129,89) RESISTOR ARRAY	RAB4CQ473J
R	1115	(A,39,97)	RS1/16SS101J	R	1395	(A,114,49) RESISTOR ARRAY	RAB4CQ473J

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	R	1396 (A,114,46)	RESISTOR ARRAY	RAB4CQ473J	C	702 (B,139,38)	CKSSYB104K10
	R	1397 (A,117,58)	RESISTOR ARRAY	RAB4CQ473J	C	704 (B,143,40)	CEVW101M16
A	R	1398 (A,117,55)	RESISTOR ARRAY	RAB4CQ473J	C	705 (B,139,42)	CKSSYB104K10
	R	2003		RS1/16SS0R0J	C	706 (A,138,52)	CKSSYB104K10
	R	2004		RS1/16SS0R0J	C	707 (B,139,49)	CEVW100M16
	R	2007		RS1/16SS0R0J	C	708 (A,143,52)	CKSSYB104K10
	R	2008		RS1/16SS0R0J	C	709 (A,149,35)	CKSSYB104K10
	R	2011		RS1/16SS0R0J	C	710 (B,139,35)	CKSSYB104K10
	R	2012		RS1/16SS0R0J	C	711 (A,131,35)	CKSSYB104K10
					C	712 (A,130,37)	CKSRYB392K50
					C	713 (A,130,38)	CCSRCH821J50
					C	714 (A,128,37)	CKSSYB103K16
					C	751 (B,115,40)	CEVW101M16
					C	752 (A,116,37)	CKSSYB104K10
					C	753 (A,124,30)	CKSSYB104K10
					C	754 (A,124,32)	CKSSYB104K10
					C	756 (A,124,34)	CKSSYB104K10
					C	757 (A,124,31)	CKSSYB104K10
					C	758 (A,123,33)	CKSSYB104K10
					C	759 (A,124,35)	CKSSYB104K10
					C	771 (A,152,24)	CKSSYB104K10
					C	772 (A,151,30)	CCSRCH680J50
					C	773 (A,151,31)	CCSRCH330J50
					C	781 (A,145,24)	CKSSYB104K10
					C	782 (A,145,30)	CCSRCH680J50
					C	783 (A,145,31)	CCSRCH330J50
					C	791 (A,140,24)	CKSSYB104K10
					C	792 (A,140,30)	CCSRCH680J50
					C	793 (A,140,31)	CCSRCH330J50
					C	801 (B,81,62)	CKSRYB105K10
					C	802 (A,61,80)	CKSSYB104K10
					C	803 (A,57,80)	CKSSYB104K10
					C	804 (A,63,81)	CKSSYB104K10
					C	805 (B,65,60)	CKSSYB104K10
					C	806 (A,67,80)	CKSSYB104K10
					C	807 (A,66,55)	CKSSYB104K10
					C	808 (A,66,46)	CCSRCH120J50
					C	809 (A,70,46)	CCSRCH100D50
					C	810 (A,72,80)	CKSSYB104K10
					C	811 (B,67,60)	CKSSYB104K10
					C	812 (B,81,57)	CEVW101M16
					C	813 (A,70,54)	CKSSYB104K10
					C	814 (A,74,53)	CKSSYB104K10
					C	815 (B,46,83)	CEVW101M16
					C	816 (B,55,58)	CKSRYB105K10
					C	817 (A,54,83)	CKSRYB105K10
					C	818 (B,56,74)	CKSSYB104K10
					C	819 (B,56,72)	CKSSYB104K10
					C	820 (B,56,70)	CKSSYB104K10
					C	821 (B,58,68)	CKSRYB105K10
					C	822 (B,56,65)	CKSSYB104K10
					C	823 (B,56,63)	CKSSYB104K10
					C	824 (B,56,60)	CKSSYB104K10
					C	825 (B,50,57)	CEVW101M16
					C	826 (B,57,58)	CKSSYB104K10
					C	827 (B,57,56)	CKSSYB104K10
					C	828 (B,60,58)	CKSSYB104K10
					C	829 (A,78,57)	CKSSYB104K10
					C	830 (B,68,63)	CKSSYB103K16
					C	831 (A,73,55)	CKSSYB103K16

CAPACITORS

B

C

D

E

F




Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
C	832	(A,78,74)	CKSSYB104K10	C	1251	(B,42,73)	CKSSYB104K10
C	833	(A,78,71)	CKSSYB104K10	C	1252	(A,40,73)	CKSSYB104K10
C	834	(A,78,68)	CKSSYB104K10	C	1301	(B,160,104)	CEVW101M16
C	835	(B,75,65)	CKSSYB104K10	C	1302	(B,151,104)	CEVW100M16
C	836	(A,78,62)	CKSSYB104K10	C	1305	(A,166,109)	CEVW101M16
C	837	(B,55,84)	CKSSYB103K16	C	1306	(A,138,110)	CCSRCH120J50
C	838	(B,61,80)	CKSSYB103K16	C	1307	(A,143,110)	CCSRCH120J50
C	881	(A,90,80)	CKSSYB104K10	C	1308	(A,128,94)	CKSSYB104K10
C	882	(A,102,75)	CKSSYB104K10	C	1309	(A,128,90)	CKSSYB104K10
C	883	(A,102,66)	CKSSYB104K10	C	1310	(A,128,83)	CKSSYB104K10
C	884	(A,102,57)	CKSSYB104K10	C	1311	(A,128,80)	CKSSYB104K10
C	901	(B,52,33)	CKSSYB104K10	C	1312	(A,128,73)	CKSSYB104K10
C	902	(B,47,33)	CKSSYB104K10	C	1313	(B,130,74)	CKSSYB103K16
C	903	(B,45,33)	CKSSYB104K10	C	1314	(A,137,67)	CKSSYB105K6R3
C	904	(B,43,25)	CKSSYB104K10	C	1315	(A,140,66)	CKSSYB105K6R3
C	905	(B,40,26)	CKSRYB105K10	C	1316	(A,146,66)	CKSSYB105K6R3
C	908	(B,45,27)	CKSSYB104K10	C	1317	(A,150,66)	CKSSYB105K6R3
C	911	(B,43,32)	CKSSYB104K10	C	1318	(A,154,66)	CKSSYB105K6R3
C	912	(B,53,24)	CKSRYB105K10	C	1319	(B,159,76)	CKSSYB104K10
C	913	(B,47,24)	CKSSYB104K10	C	1320	(B,157,81)	CKSSYB104K10
C	914	(B,45,24)	CKSSYB104K10	C	1321	(A,163,83)	CKSSYB104K10
C	915	(B,43,20)	CKSSYB103K16	C	1322	(A,163,90)	CKSSYB104K10
C	916	(B,50,42)	CEVW101M16	C	1323	(A,163,92)	CKSSYB104K10
C	917	(B,59,40)	CEVW101M16	C	1324	(A,158,102)	CKSSYB104K10
C	918	(B,51,28)	CKSRYB105K10	C	1325	(A,157,104)	CKSSYB104K10
C	919	(A,57,29)	CKSSYB104K10	C	1326	(A,156,102)	CKSSYB104K10
C	951	(A,20,17)	CKSSYB104K10	C	1327	(A,154,104)	CKSSYB104K10
C	1001	(B,77,35)	CEVW101M16	C	1328	(A,153,102)	CKSSYB104K10
C	1002	(B,70,39)	CKSSYB104K10	C	1329	(A,152,104)	CKSSYB104K10
C	1012	(B,101,36)	CKSRYB105K10	C	1330	(A,151,102)	CKSSYB104K10
C	1013	(B,85,36)	CKSRYB105K10	C	1331	(A,149,104)	CKSSYB104K10
C	1014	(B,93,36)	CKSRYB105K10	C	1332	(A,148,102)	CKSSYB104K10
C	1015	(B,100,34) CHIP CERAMIC C.	DCG1028	C	1333	(A,147,104)	CKSSYB104K10
C	1016	(B,84,34)	CKSQYB225K10	C	1334	(A,144,102)	CKSSYB104K10
C	1017	(B,92,34)	CKSQYB225K10	C	1335	(B,140,96)	CKSSYB104K10
C	1019	(A,85,46)	DCH1201	C	1336	(A,137,102)	CKSSYB104K10
C	1020	(A,83,50)	DCH1201	C	1351	(B,162,69) CHIP OS CAPACITOR	ACH7174
C	1021	(A,89,45) CHIP CERAMIC C.	CCSRCH821J25	C	1352	(B,135,78)	CKSSYB105K6R3
C	1052	(A,64,29)	CKSQYB105K16	C	1353	(B,136,78)	CKSSYB105K6R3
C	1053	(A,68,24)	CKSQYB105K16	C	1354	(B,139,78)	CKSSYB105K6R3
C	1054	(B,64,30)	CKSSYB104K10	C	1355	(B,141,78)	CKSSYB105K6R3
C	1055	(B,68,35)	CEVW101M16	C	1356	(B,149,78)	CKSSYB105K6R3
C	1056	(A,64,35)	CKSRYB224K16	C	1357	(B,152,78)	CKSSYB105K6R3
C	1057	(B,61,18)	CKSSYB102K50	C	1358	(B,154,78)	CKSSYB105K6R3
C	1058	(B,61,16)	CKSSYB104K10	C	1359	(B,156,78)	CKSSYB105K6R3
C	1101	(B,35,84)	CEVW101M16	C	1360	(B,153,61)	CKSSYB105K6R3
C	1102	(A,31,84)	CKSSYB104K10	C	1361	(B,150,61)	CKSSYB105K6R3
C	1103	(A,39,82)	CKSSYB104K10	C	1362	(B,141,62)	CKSSYB105K6R3
C	1104	(A,41,90)	CKSSYB104K10	C	1363	(B,137,61)	CKSSYB105K6R3
C	1105	(A,38,97)	CKSSYB104K10	C	1381	(B,123,71)	CKSSYB104K10
C	1106	(A,29,97)	CKSSYB104K10	C	1382	(B,123,53)	CKSSYB104K10
C	1107	(A,28,94)	CKSSYB104K10	C	1383	(B,126,62)	CKSSYB104K10
C	1108	(A,28,90)	CKSSYB104K10	C	2001	(A,27,112)	CKSSYB104K10
C	1109	(A,28,86)	CKSSYB104K10	C	2002	(A,27,111)	CKSSYB102K50
C	1201	(B,42,108)	CKSSYB104K10				
C	1202	(A,39,109)	CKSSYB104K10				
C	1203	(B,59,108)	CKSSYB104K10				
C	1204	(A,56,109)	CKSSYB104K10				
C	1205	(B,31,110)	CKSSYB104K10				
C	1206	(B,49,110)	CKSSYB104K10				


2. SCHEMATIC DIAGRAM

2.1 PREOUT & CONTROL ASSY

*2	XWZ4175
CN2805	AKB7172
CN2806	

PREOUT

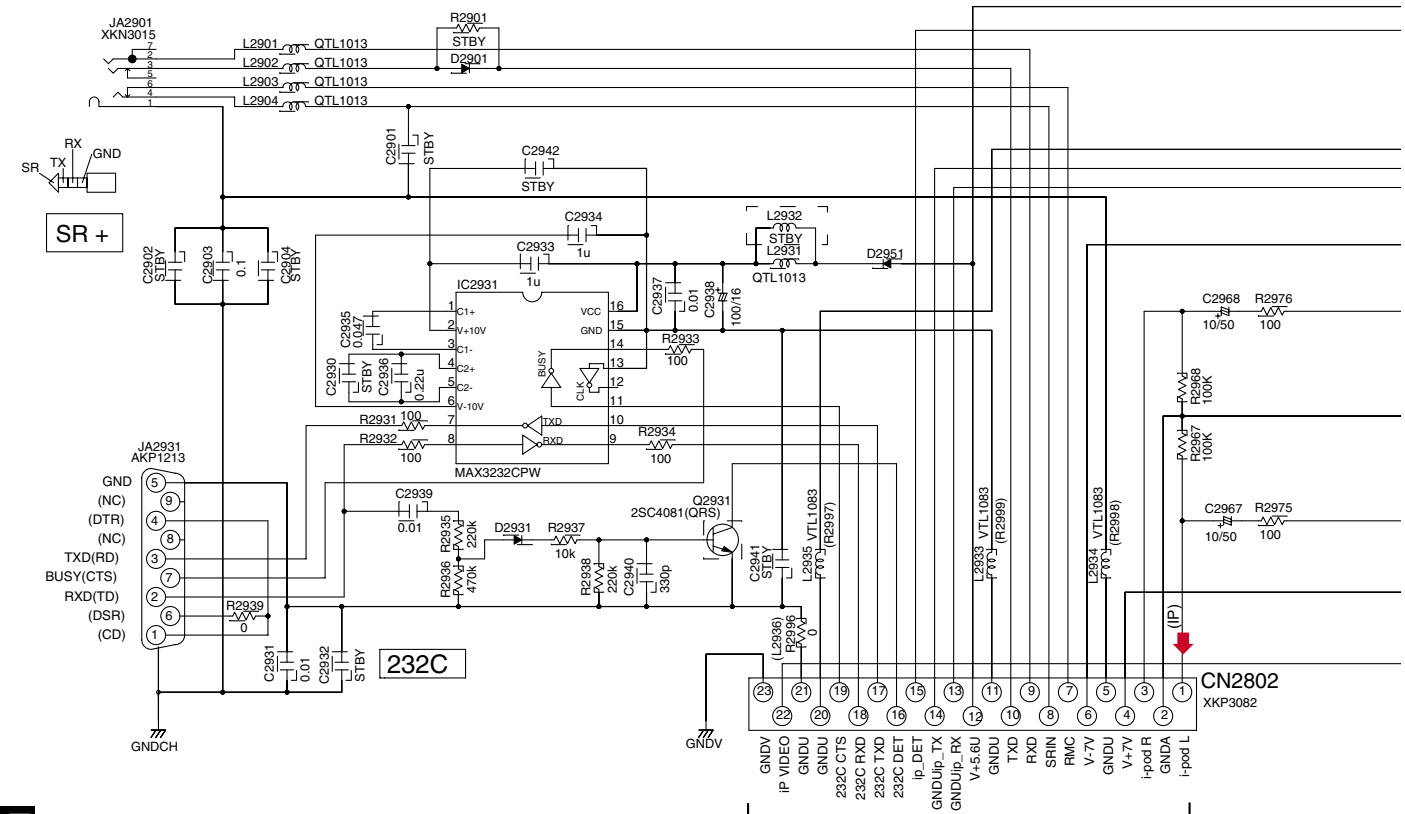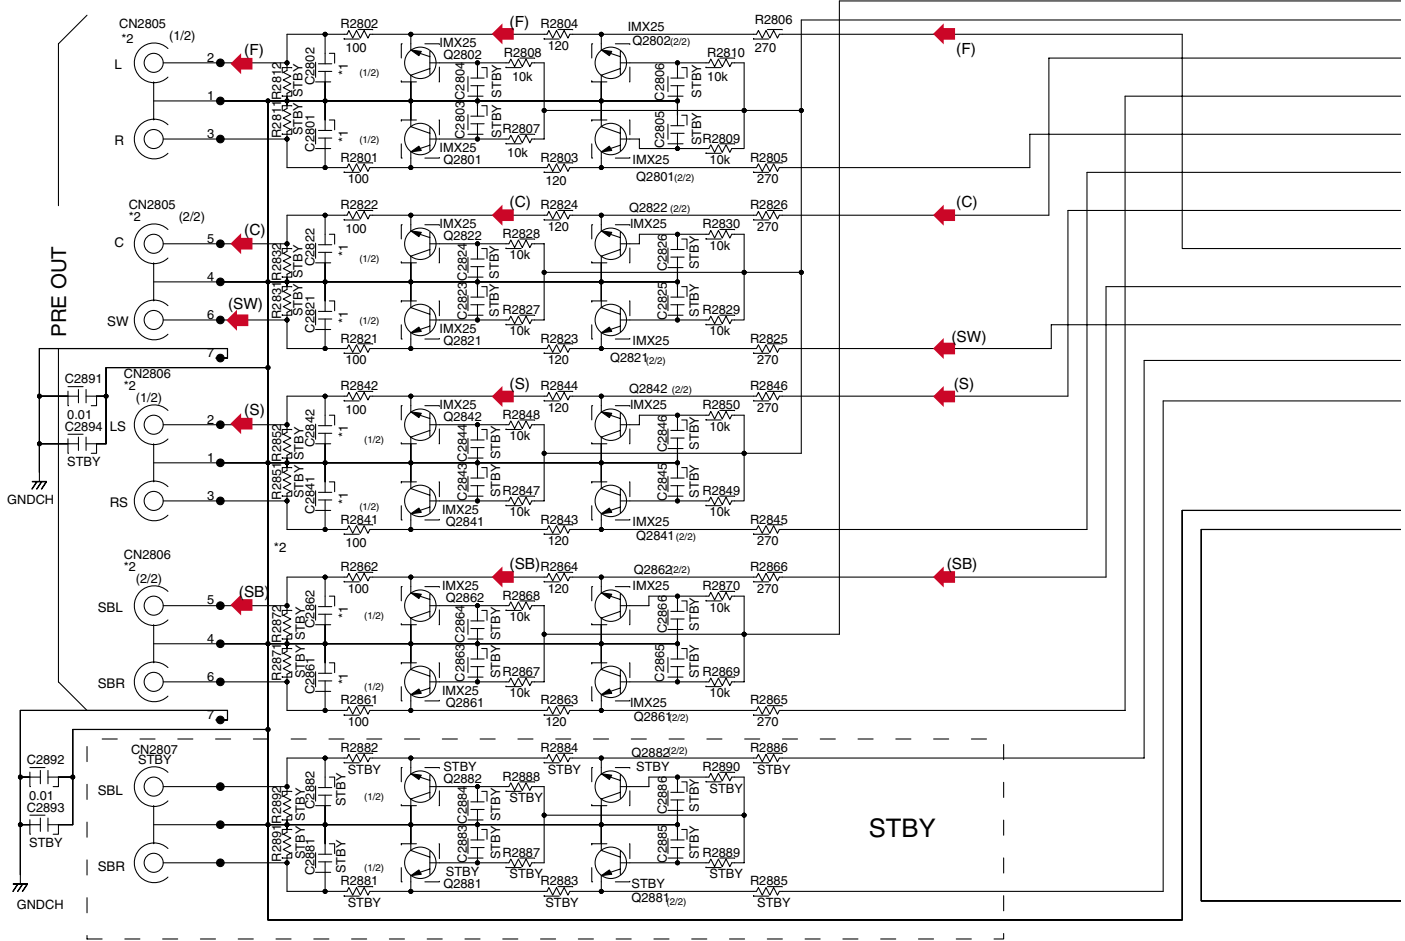

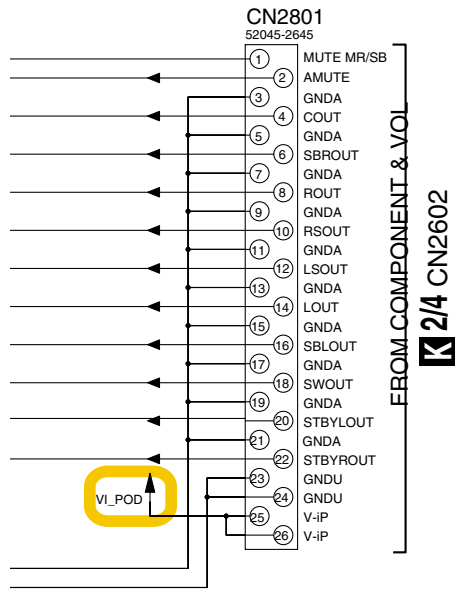


-1	XWZ4175
C2801, C2802 C2851, C2852 C2841, C2842 C2861, C2862 C2951, C2952 C2953, C2954	STBY

AE F PREOUT & CONTROL ASSY (XWZ4175)

- NOTES**
- RESISTORS**
Unit: k-Ω, M-Ω or Ω unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: ±5%(J) unless otherwise noted.
 - CAPACITORS**
No marked Capacitors are CEAT or CKSRBY.
Unit: p-pF or μF unless otherwise noted.
Rated Voltage: shown as "Capacity(μF)/Voltage(V)", or 50V unless otherwise noted.
 - DIODES**
No marked Diodes are 1SS355.
* Parts or parts block marked by "STBY" are standby.

- (F) : AUDIO SIGNAL ROUTE (F)
- (C) : AUDIO SIGNAL ROUTE (C)
- (S) : AUDIO SIGNAL ROUTE (S)
- (SB) : AUDIO SIGNAL ROUTE (SB)
- (SW) : AUDIO SIGNAL ROUTE (SW)
- (IP) : AUDIO SIGNAL ROUTE (IP)

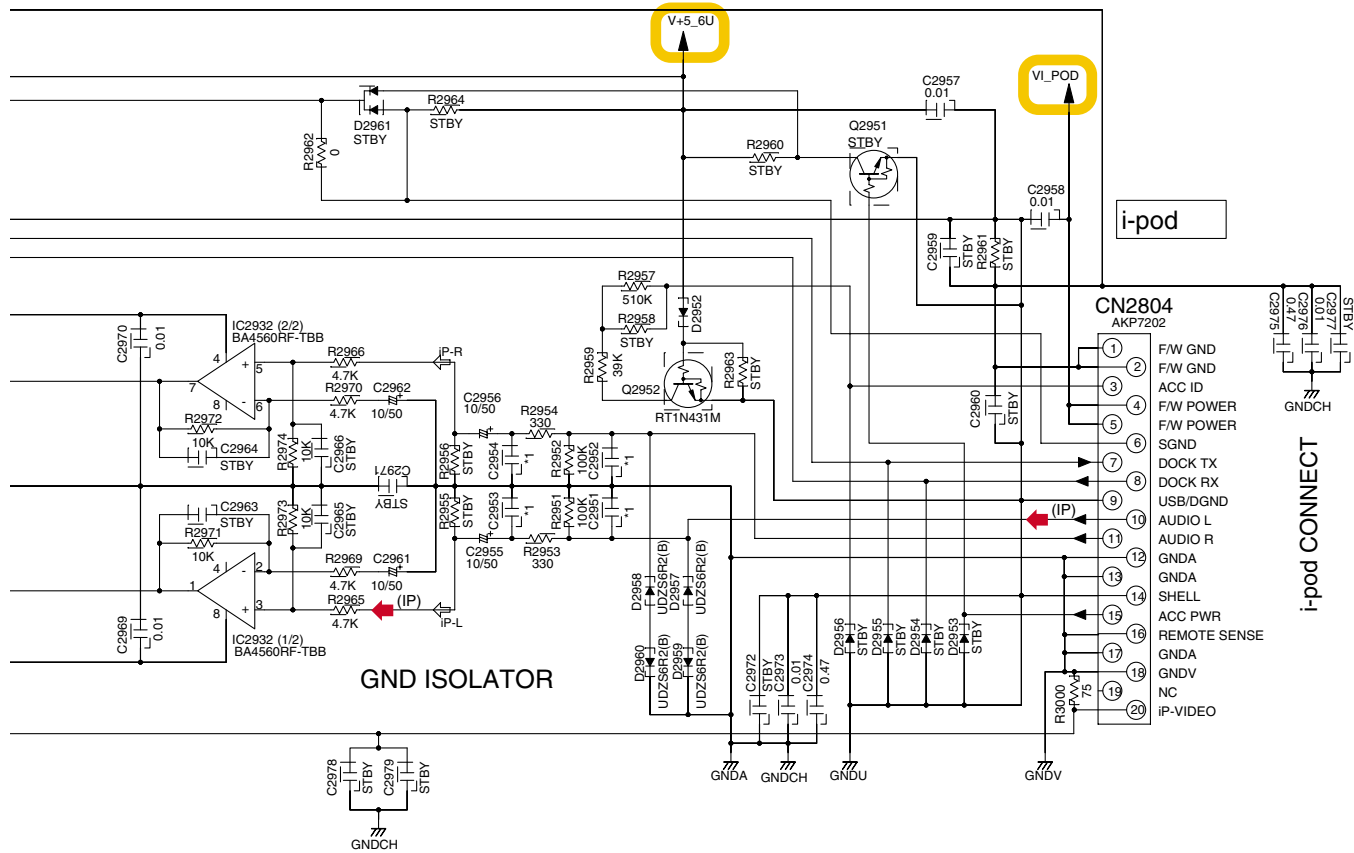

2.2 HDMI&1394 ASSY (1/5) (VSX-84TXSi)


1

2


3

4


A

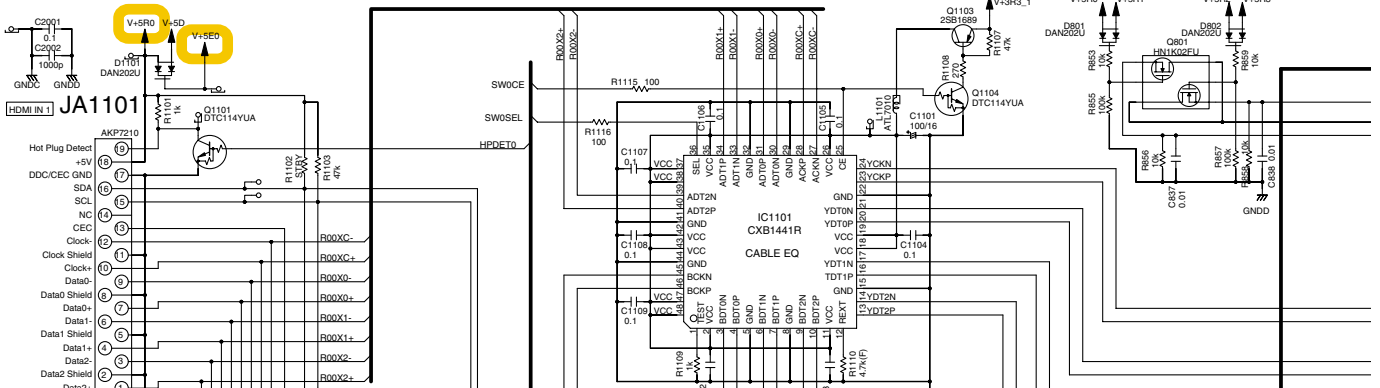


B

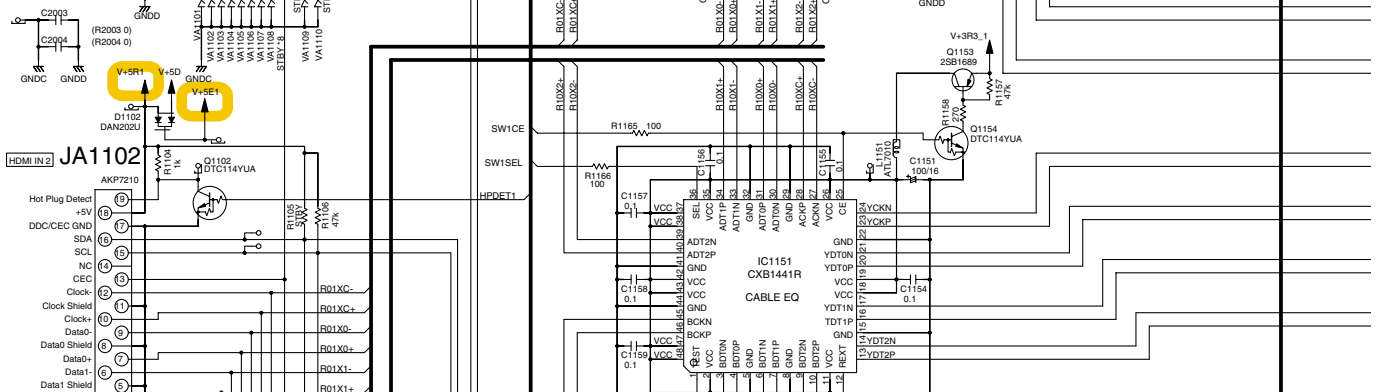

C

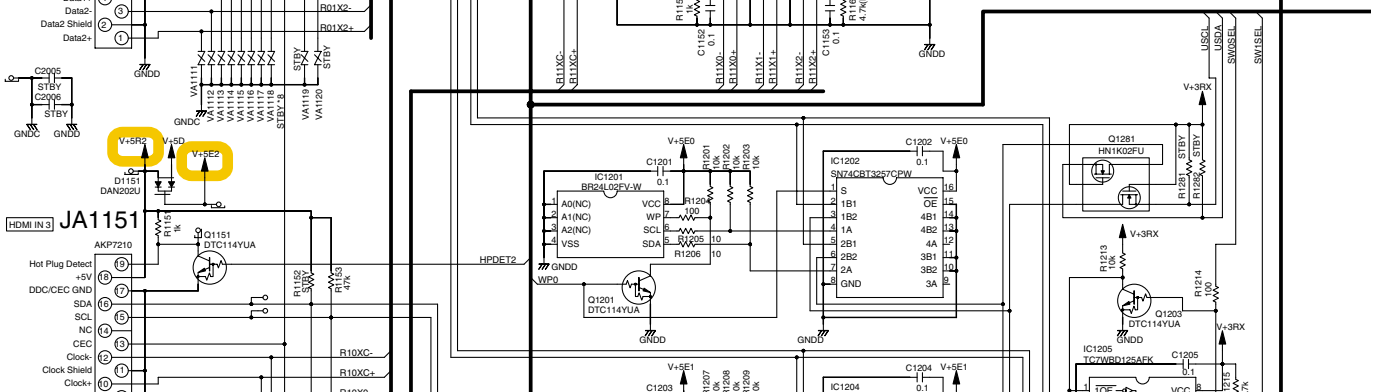

D

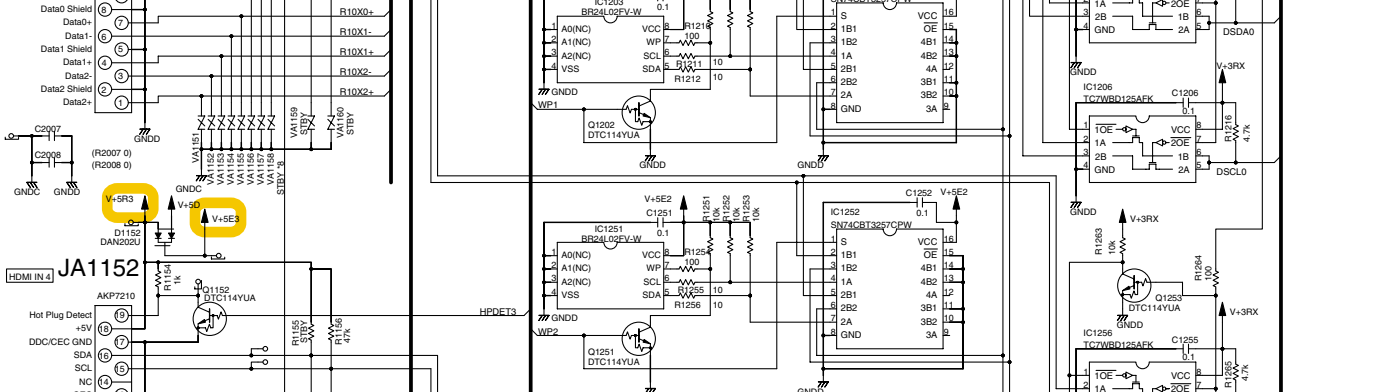

E

F




1

2

3


4

2.3 HDMI&1394 ASSY (2/5) (VSX-84TXSi)

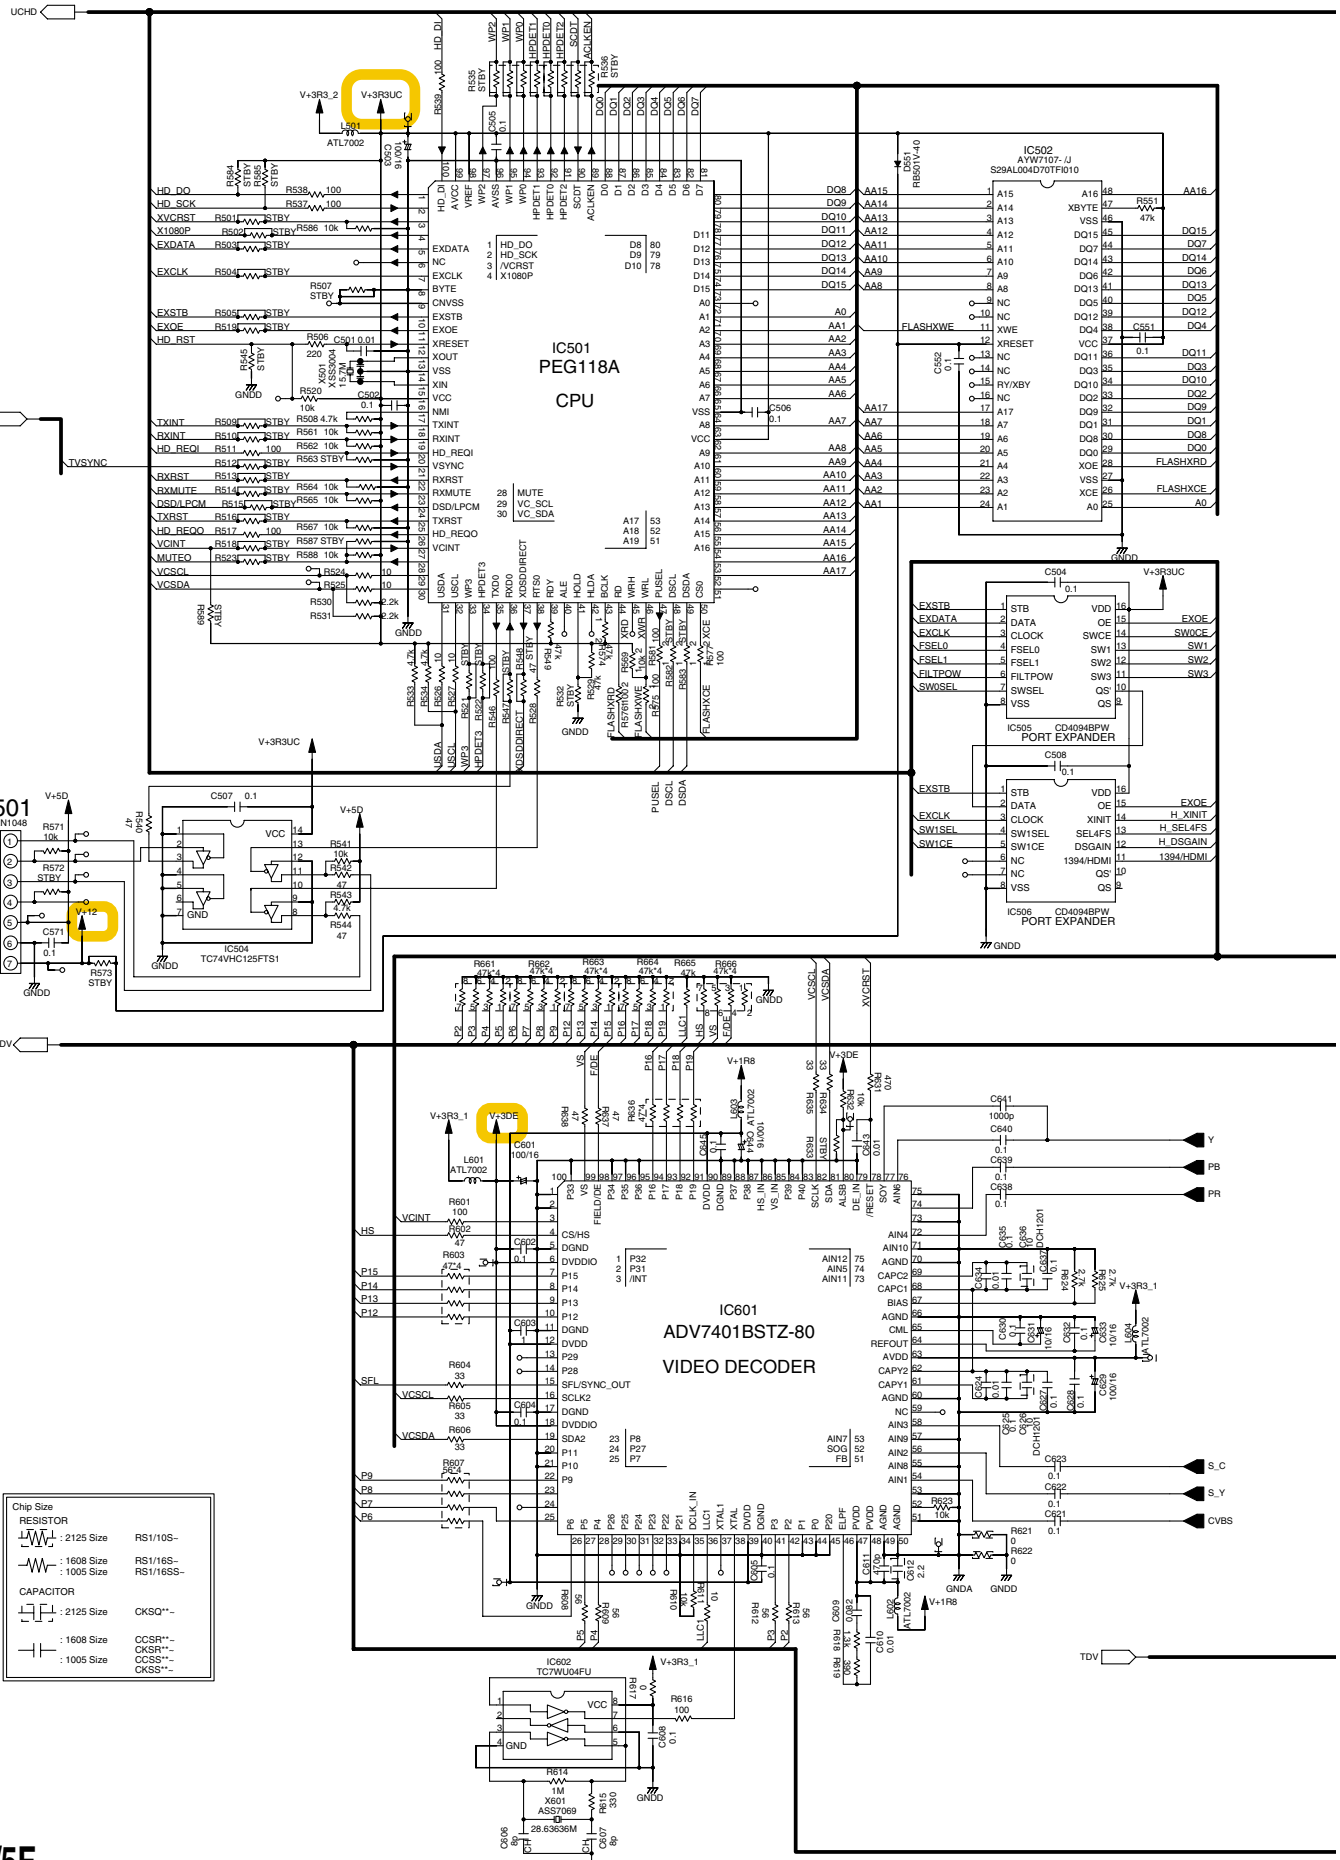

Chip Size	
	: 2125 Size RS1/10S-
	: 1608 Size RS1/16S-
	: 1005 Size RS1/16SS-
CAPACITOR	
	: 2125 Size CKSQ**
	: 1608 Size CCSR**
	: 1005 Size CKSR**
	: 1005 Size CCS**
	: 1005 Size CKS**

AG 2/5F HDMI&1394 ASSY AAX7214 (AWX8717)

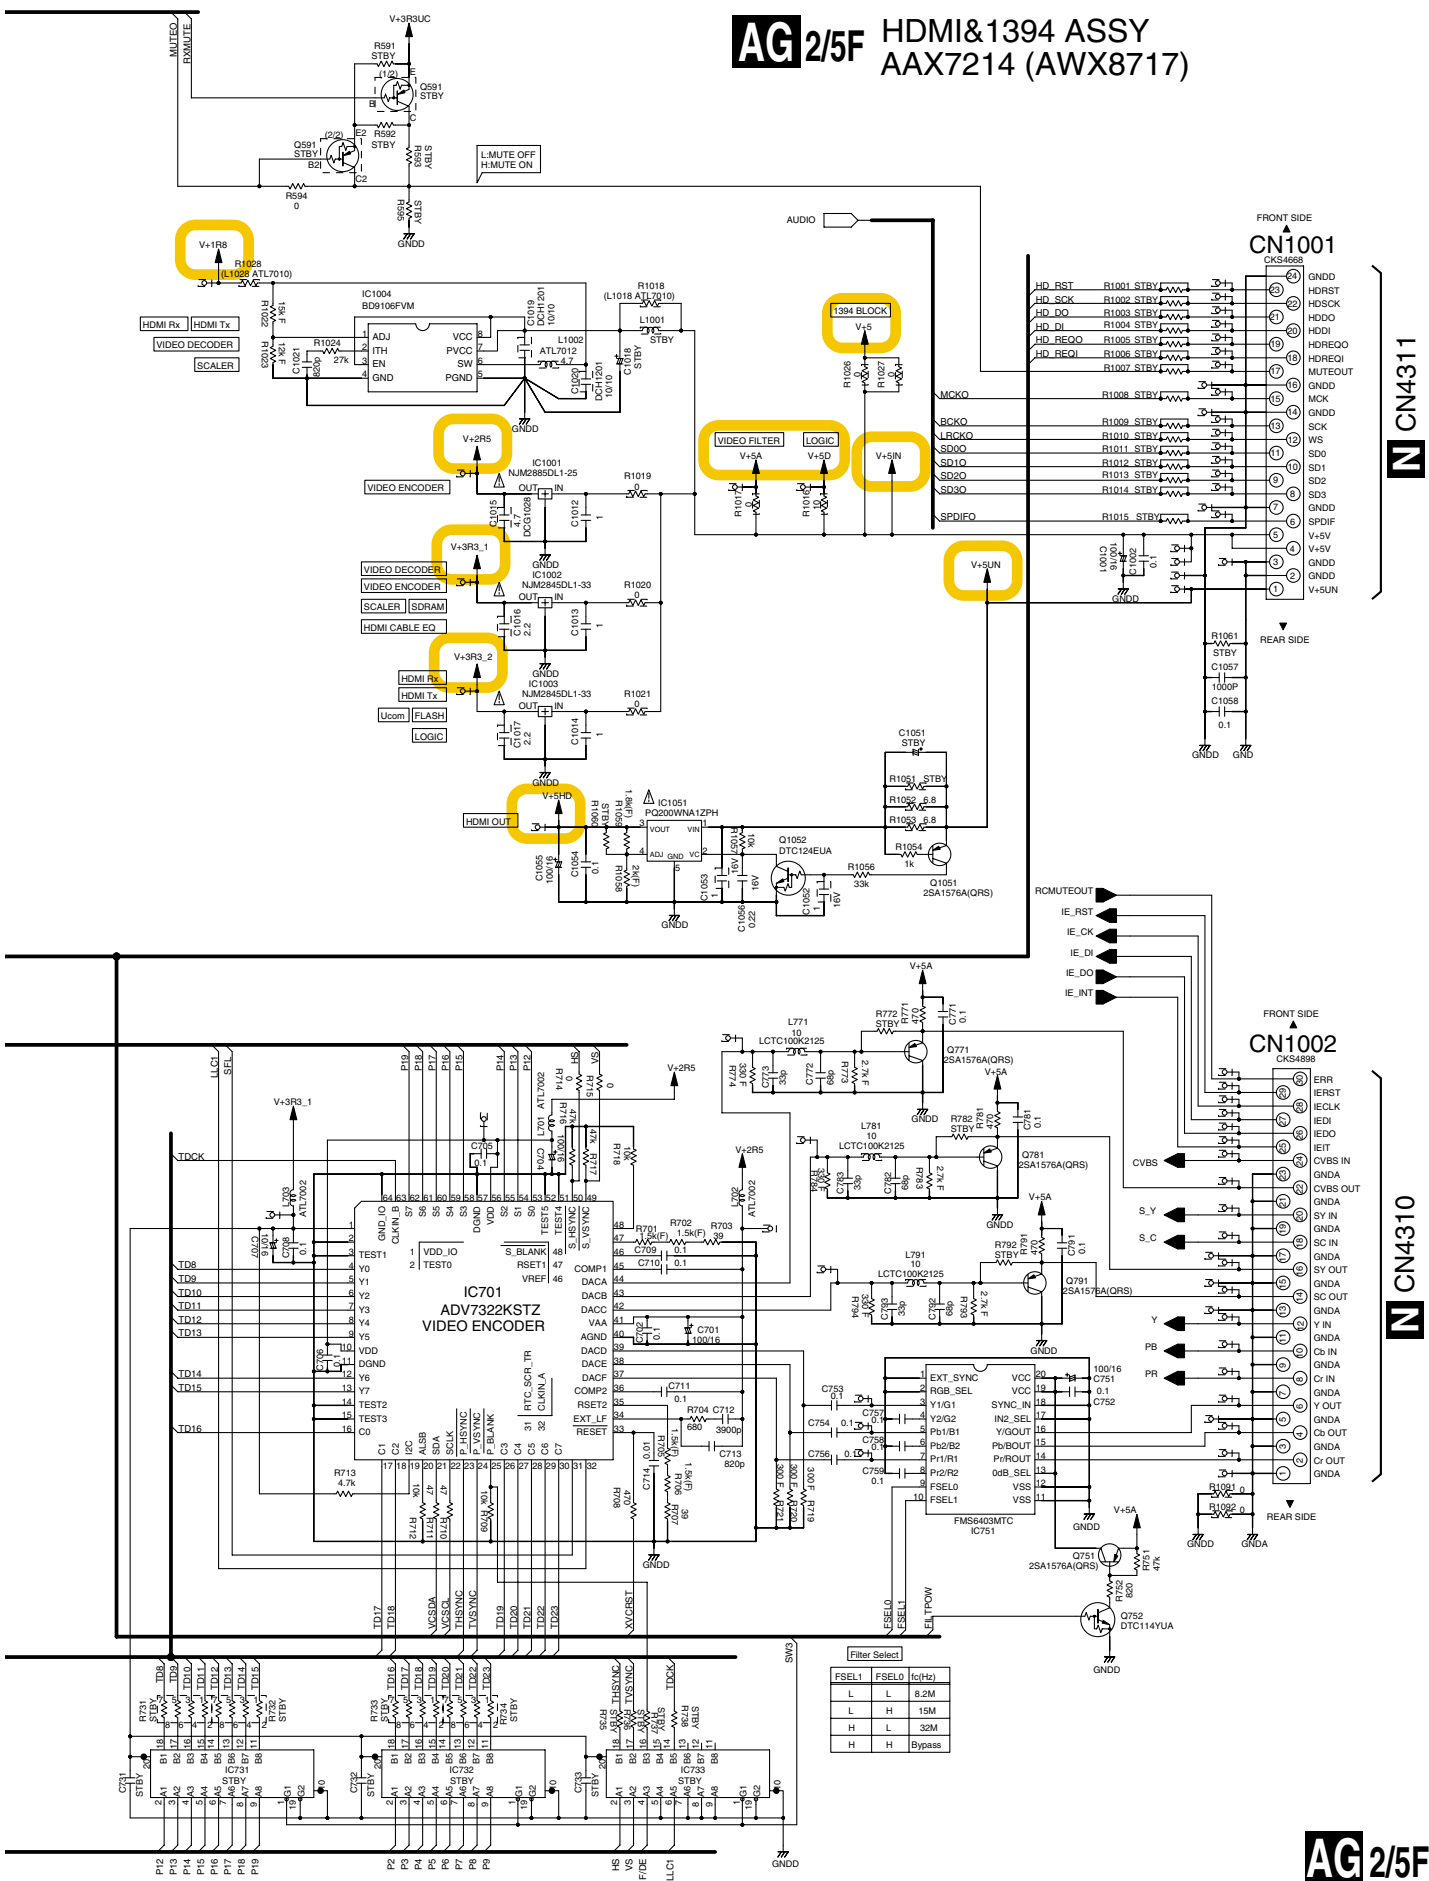

CN4311


CN4310

Filter Select


FSEL1	FSEL0	fc(Hz)
L	L	8.2M
L	H	15M
H	L	32M
H	H	Bypass

2.5 HDMI&1394 ASSY (4/5) (VSX-84TXSi)


A
B
C
D
E
F

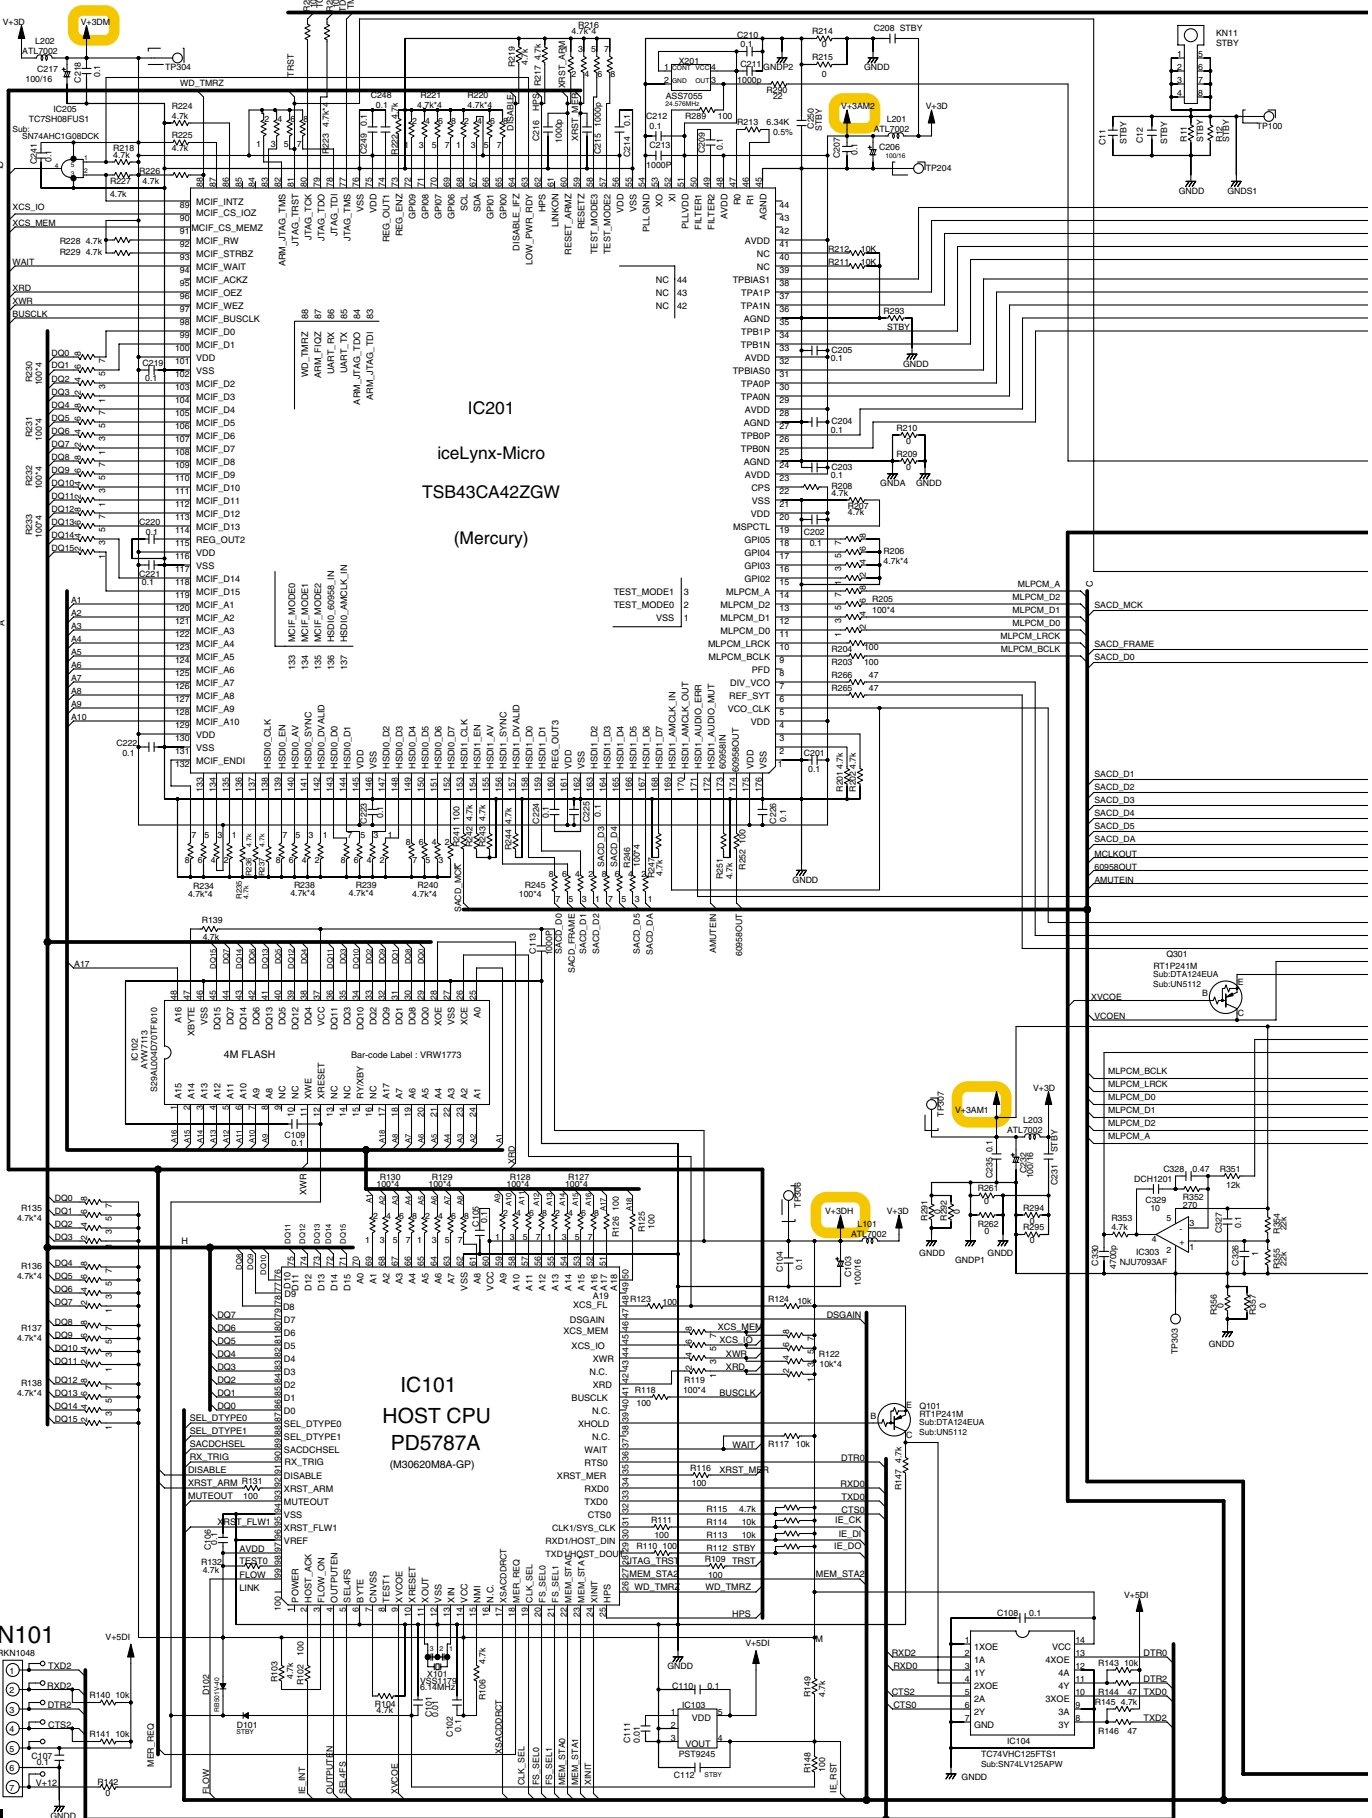

AG 4/5F HDMI&1394 ASSY AAX7214 (AWX8717)

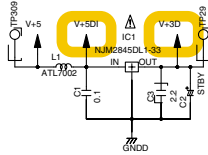

GUID LABEL:VXW1005

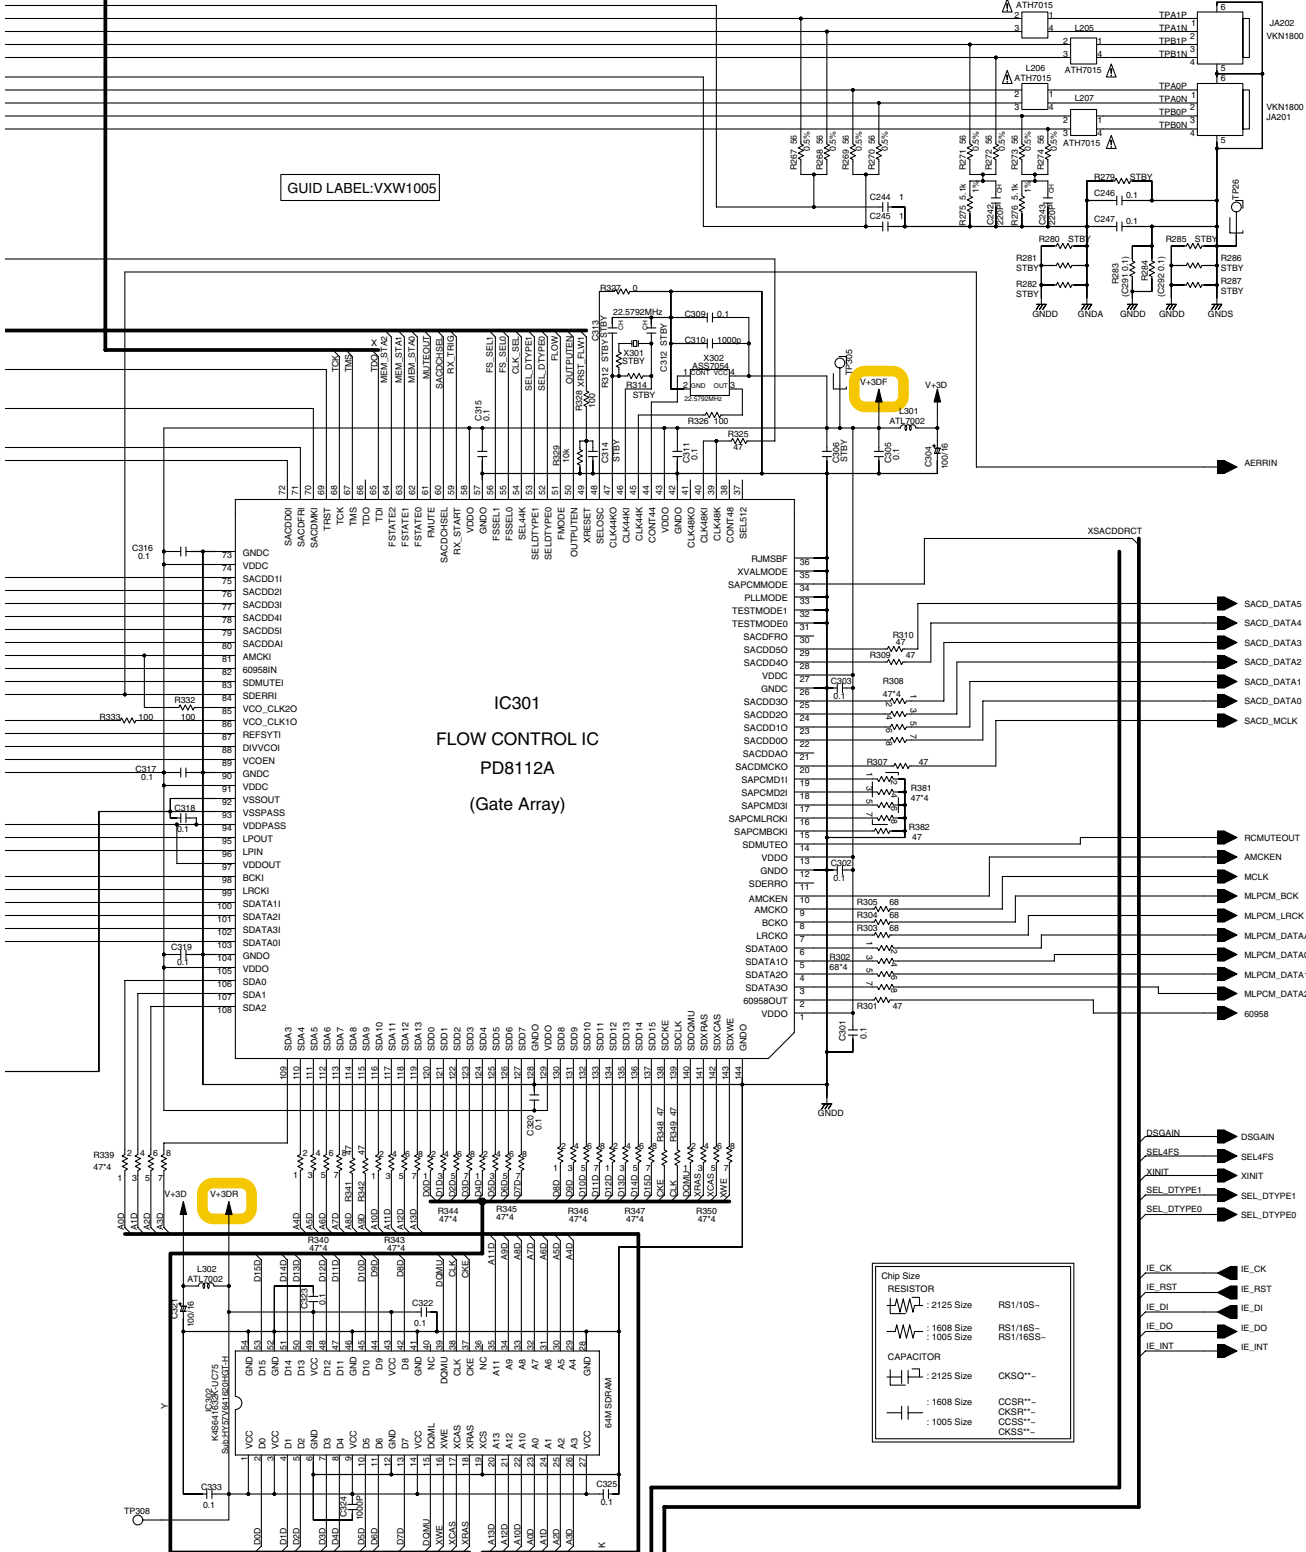


IC301
FLOW CONTROL IC
PD8112A
(Gate Array)


Chip Size	
RESISTOR	<ul style="list-style-type: none"> 2125 Size: RS1/10S- 1608 Size: RS1/16S- 1005 Size: RS1/16S5-
CAPACITOR	
<ul style="list-style-type: none"> 2125 Size: CKSQ** 1608 Size: CKSR** 1005 Size: CKSS** 	

A
B
C
D
E
F

2.6 HDMI&1394 ASSY (5/5) (VSX-84TXSi)

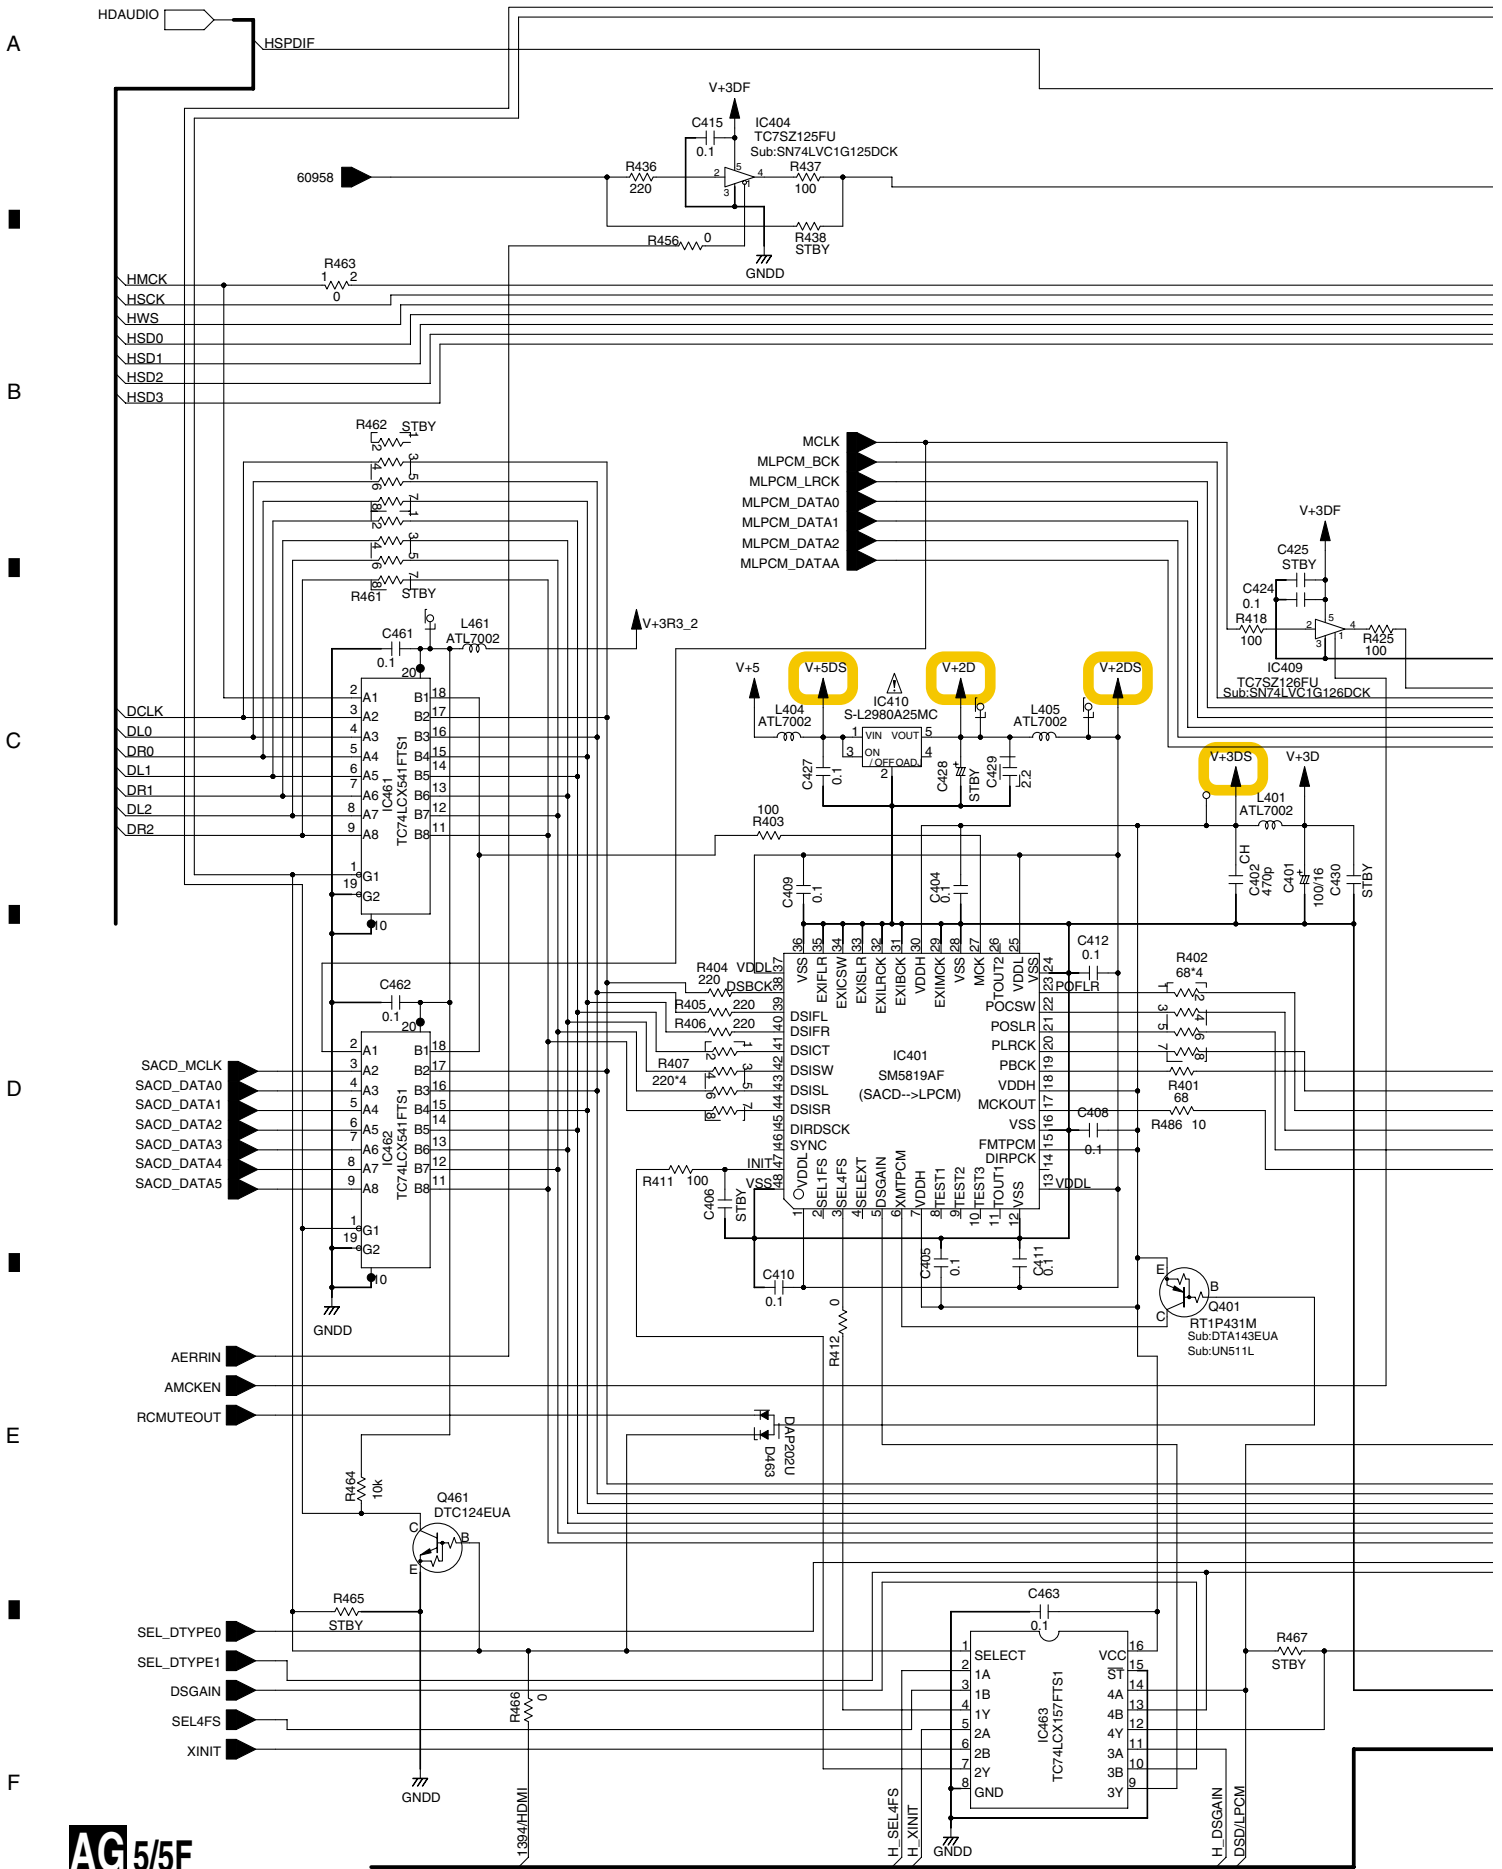


AG 5/5F HDMI&1394 ASSY
AAX7214 (AWX8717)

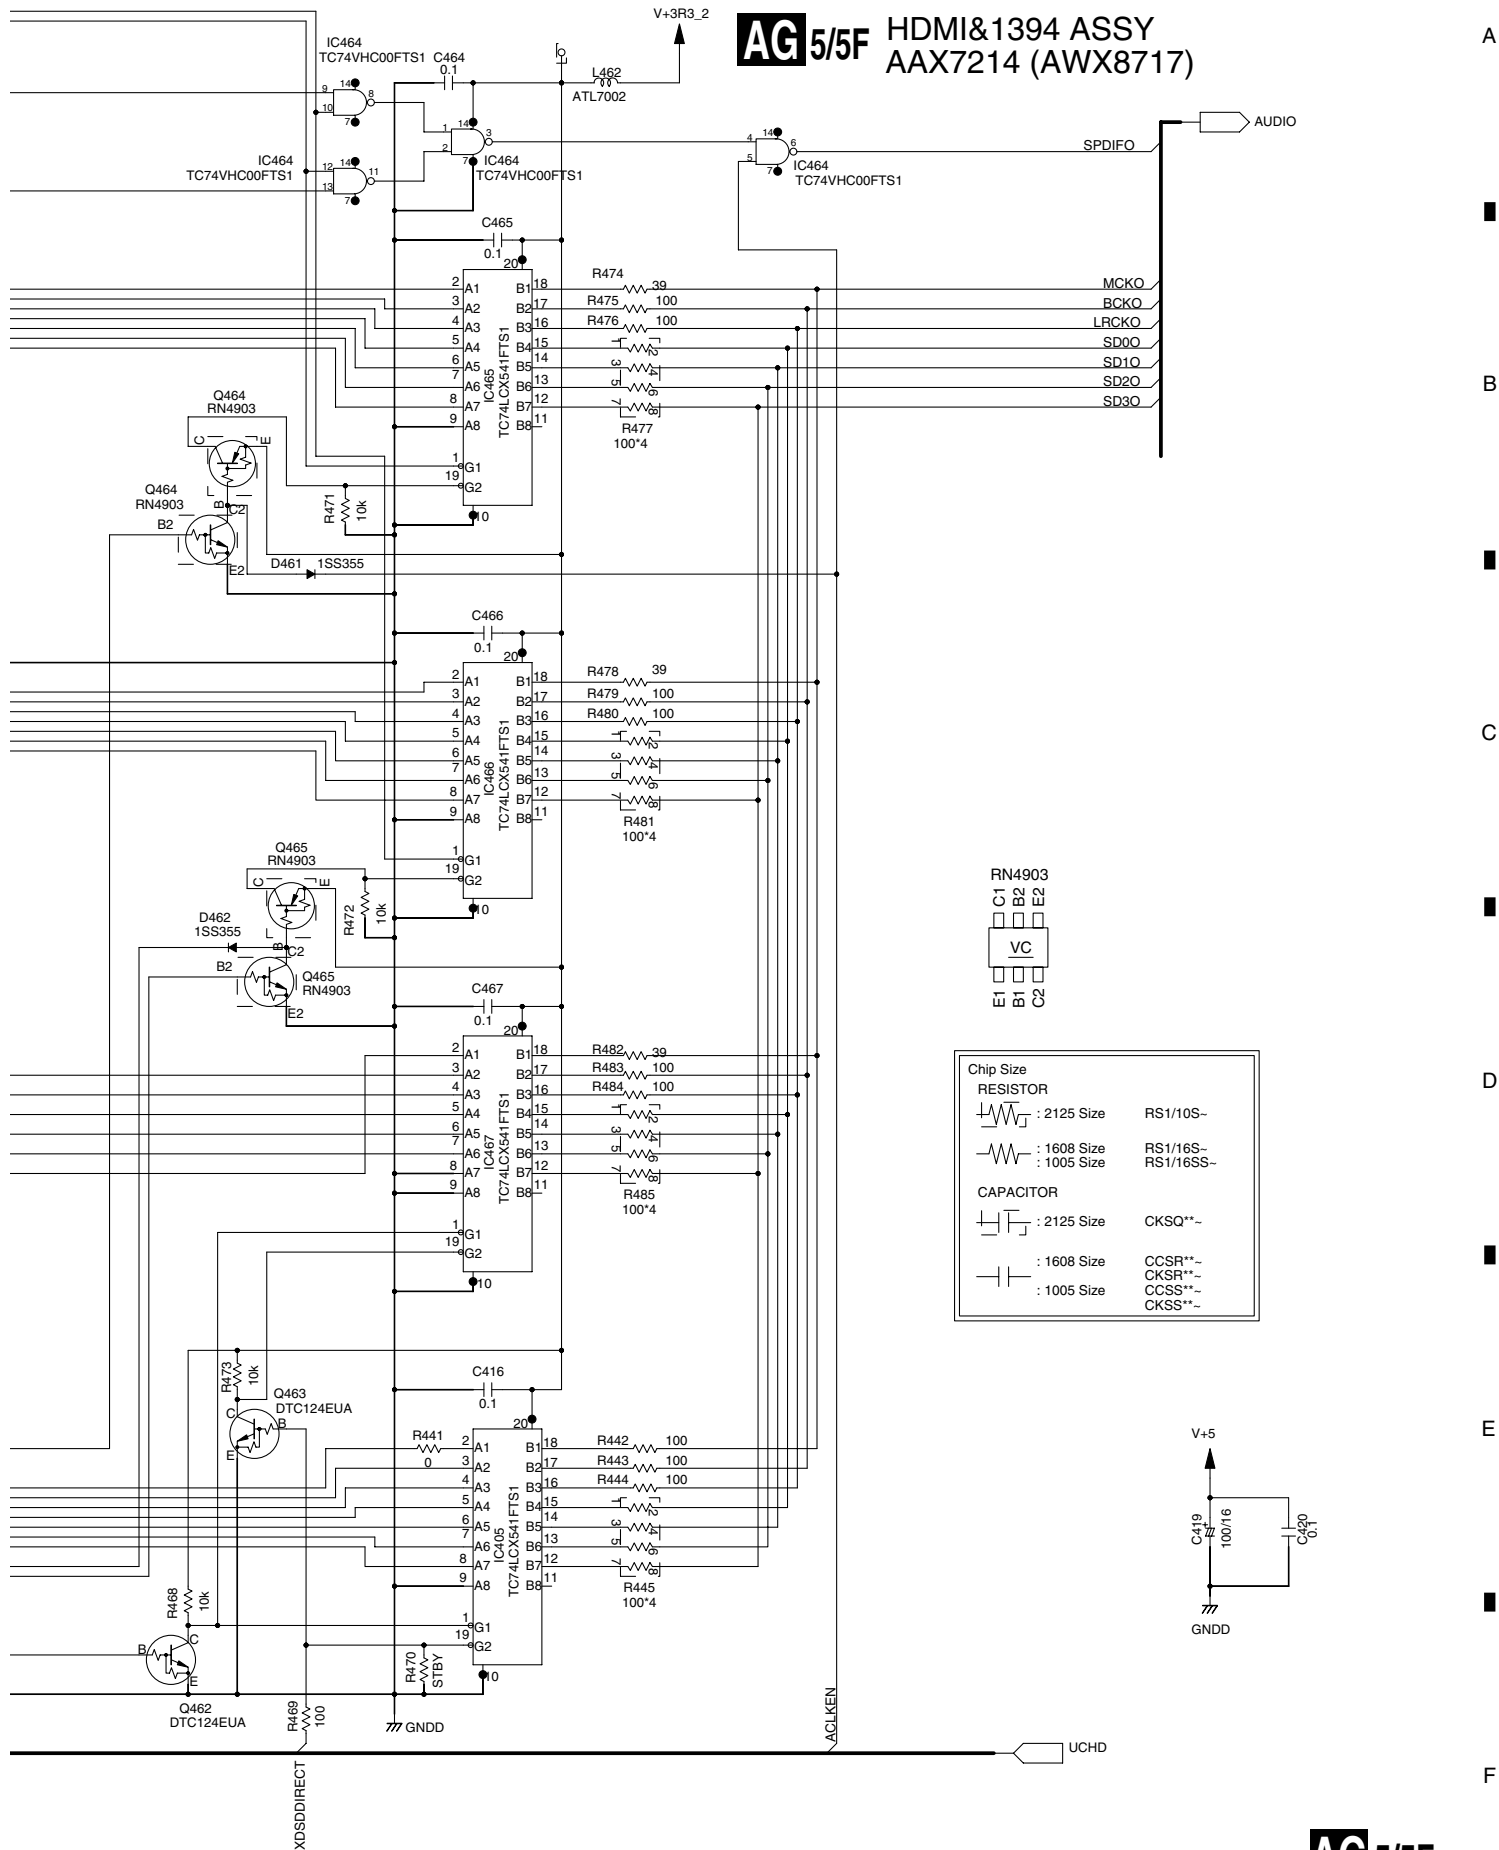


RN4903			
C1	B2	E2	
VC			
E1	B1	C2	

Chip Size	
RESISTOR	
: 2125 Size	RS1/10S-
: 1608 Size	RS1/16S-
: 1005 Size	RS1/16SS-
CAPACITOR	
: 2125 Size	CKSQ**-
: 1608 Size	CCSR**-
: 1005 Size	CKSR**-
	CCSS**-
	CKSS**-

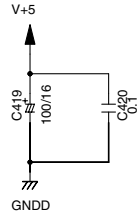


2.7 HDMI&DVC ASSY (1/4) (VSX-82TXS)


A

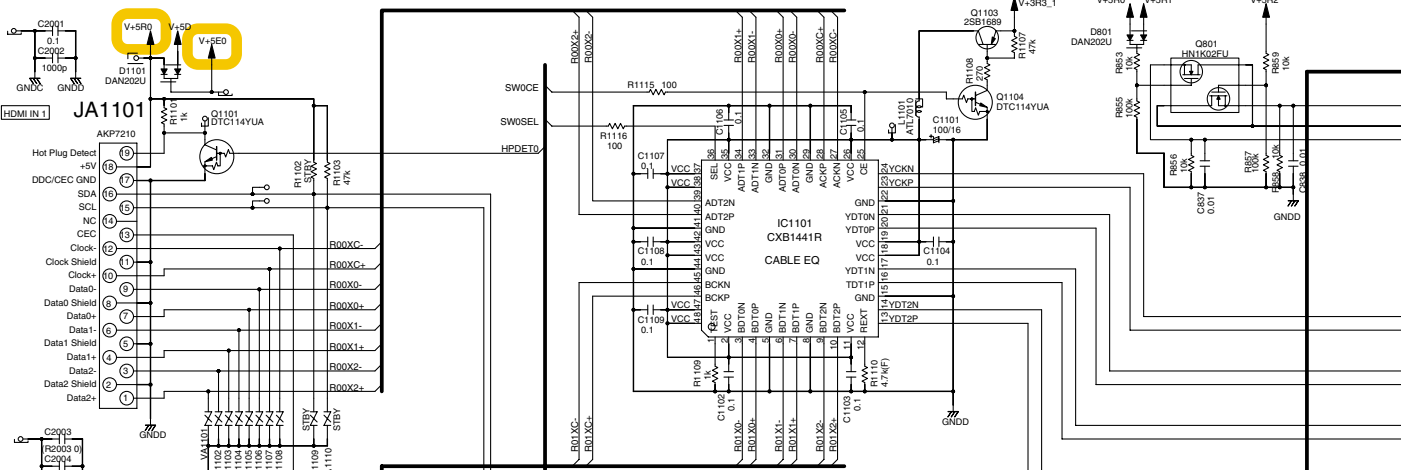


B

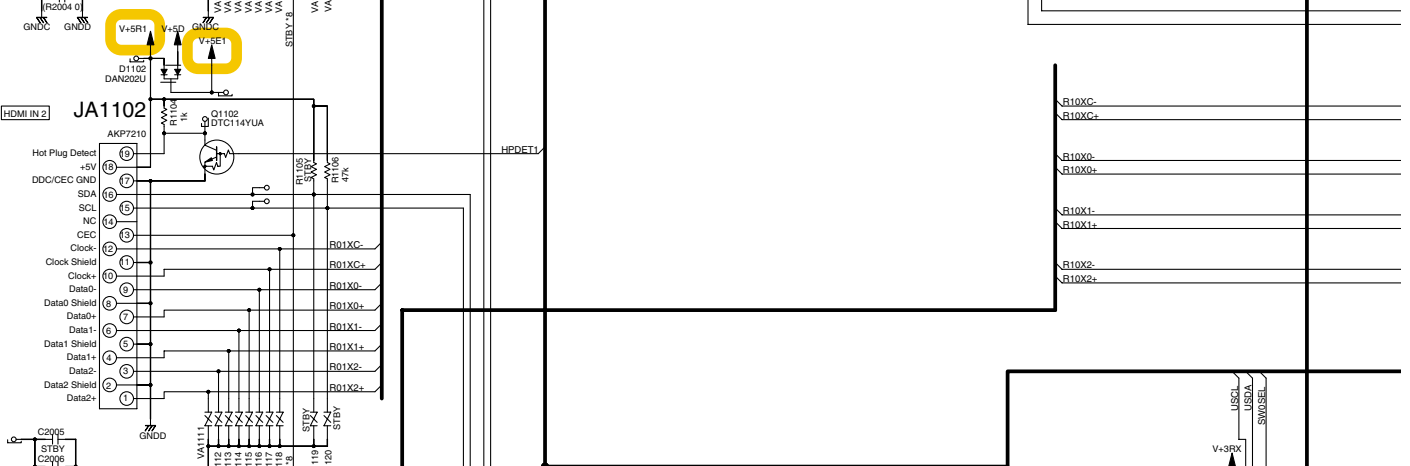

C

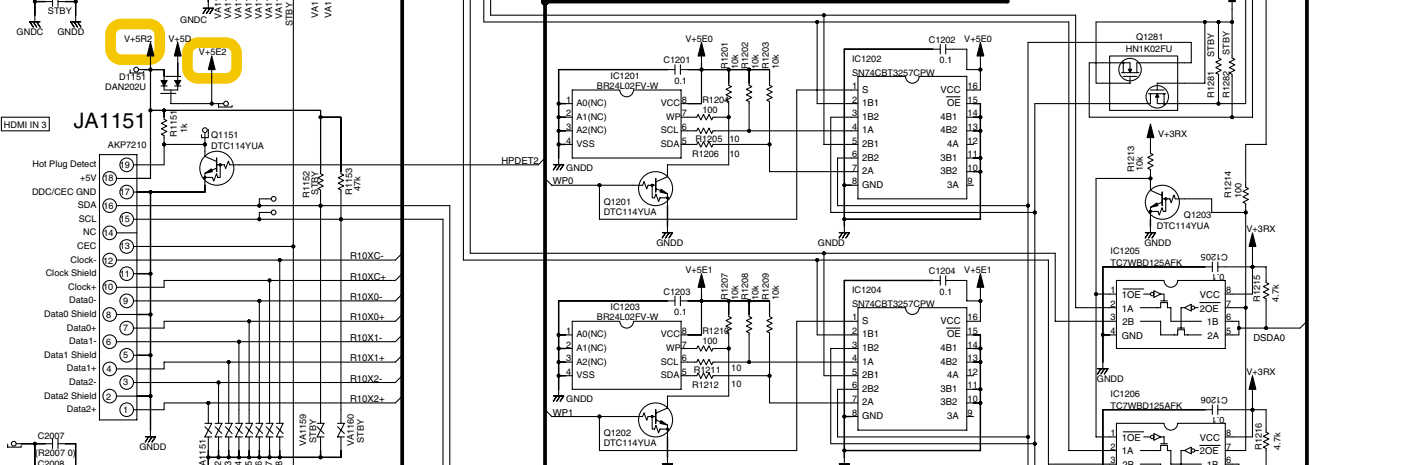

D

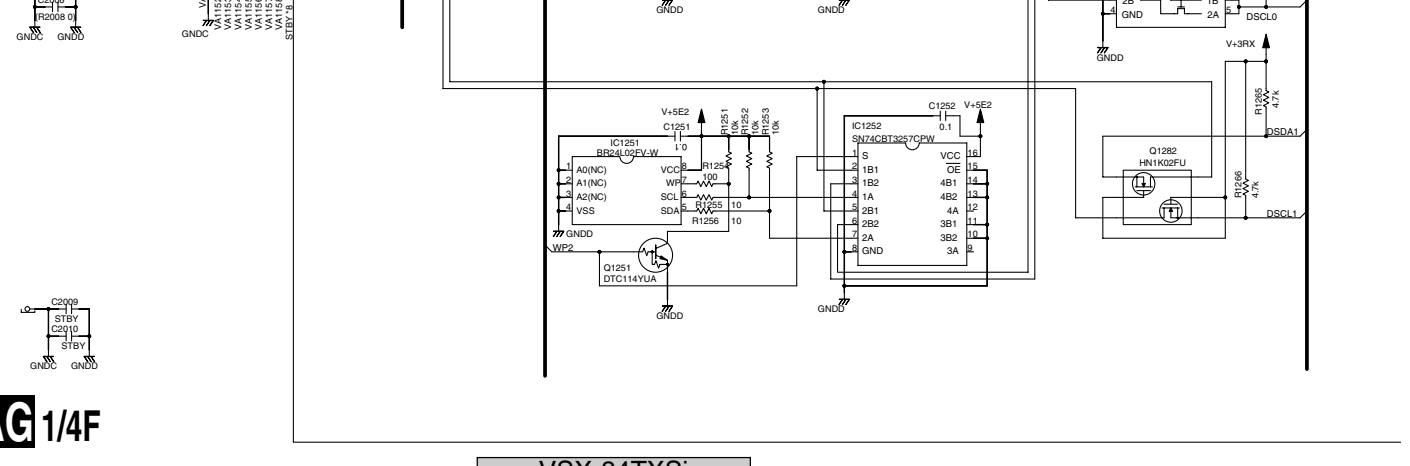


E

F




2.8 HDMI&DVC ASSY (2/4) (VSX-82TXS)

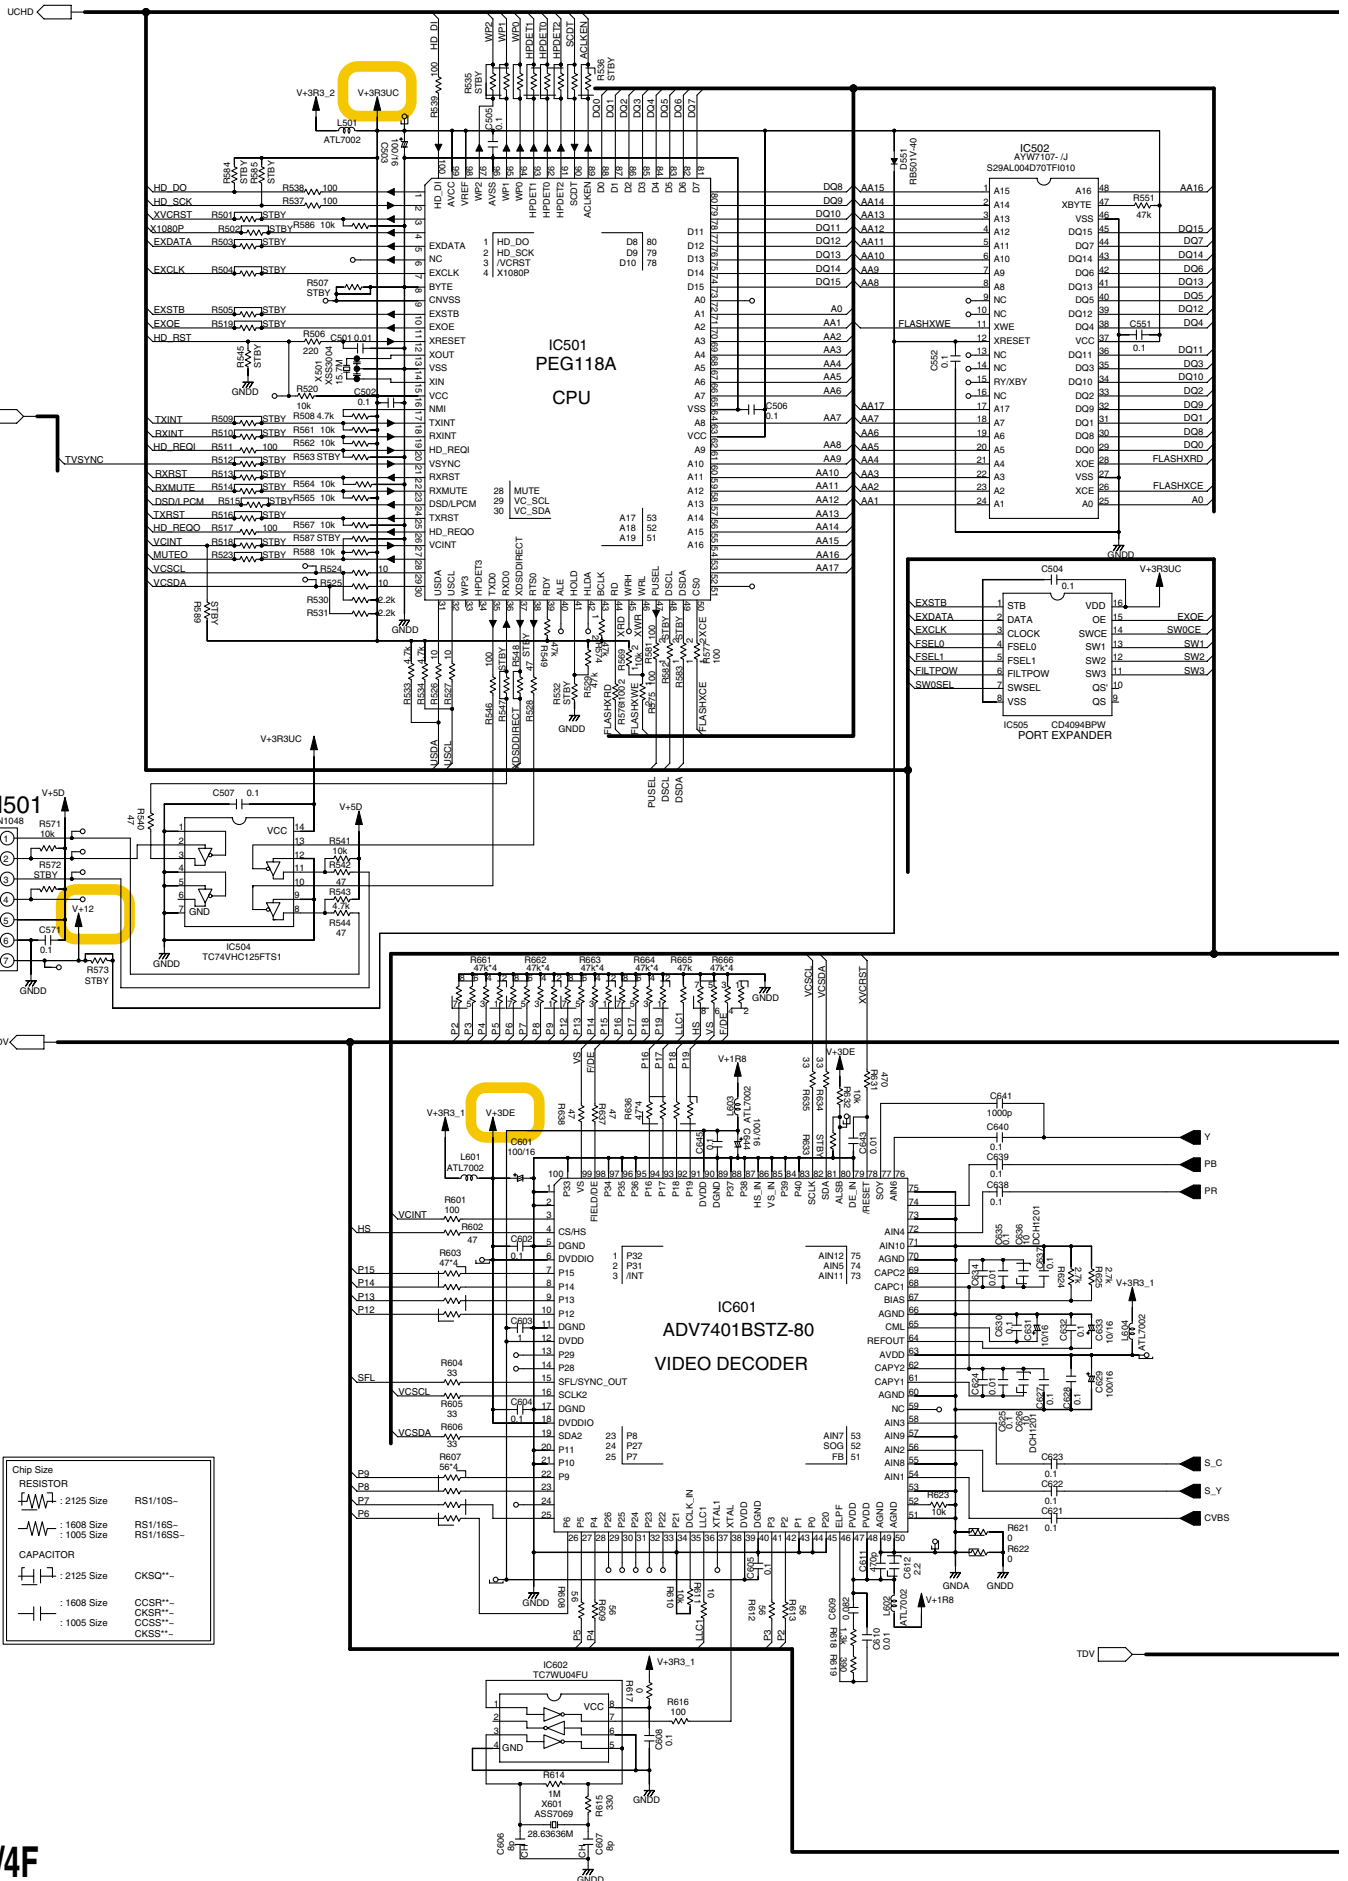

Chip Size	
RESISTOR	
: 2125 Size	RS1/10S-
: 1608 Size	RS1/16S-
: 1005 Size	RS1/16SS-
CAPACITOR	
: 2125 Size	CKSQ+-
: 1608 Size	CCSR+-
: 1005 Size	CCSR+-
: 1005 Size	CKSS+-




AG 2/4F HDMI & DVC ASSY AAX7215 (AWX8718)

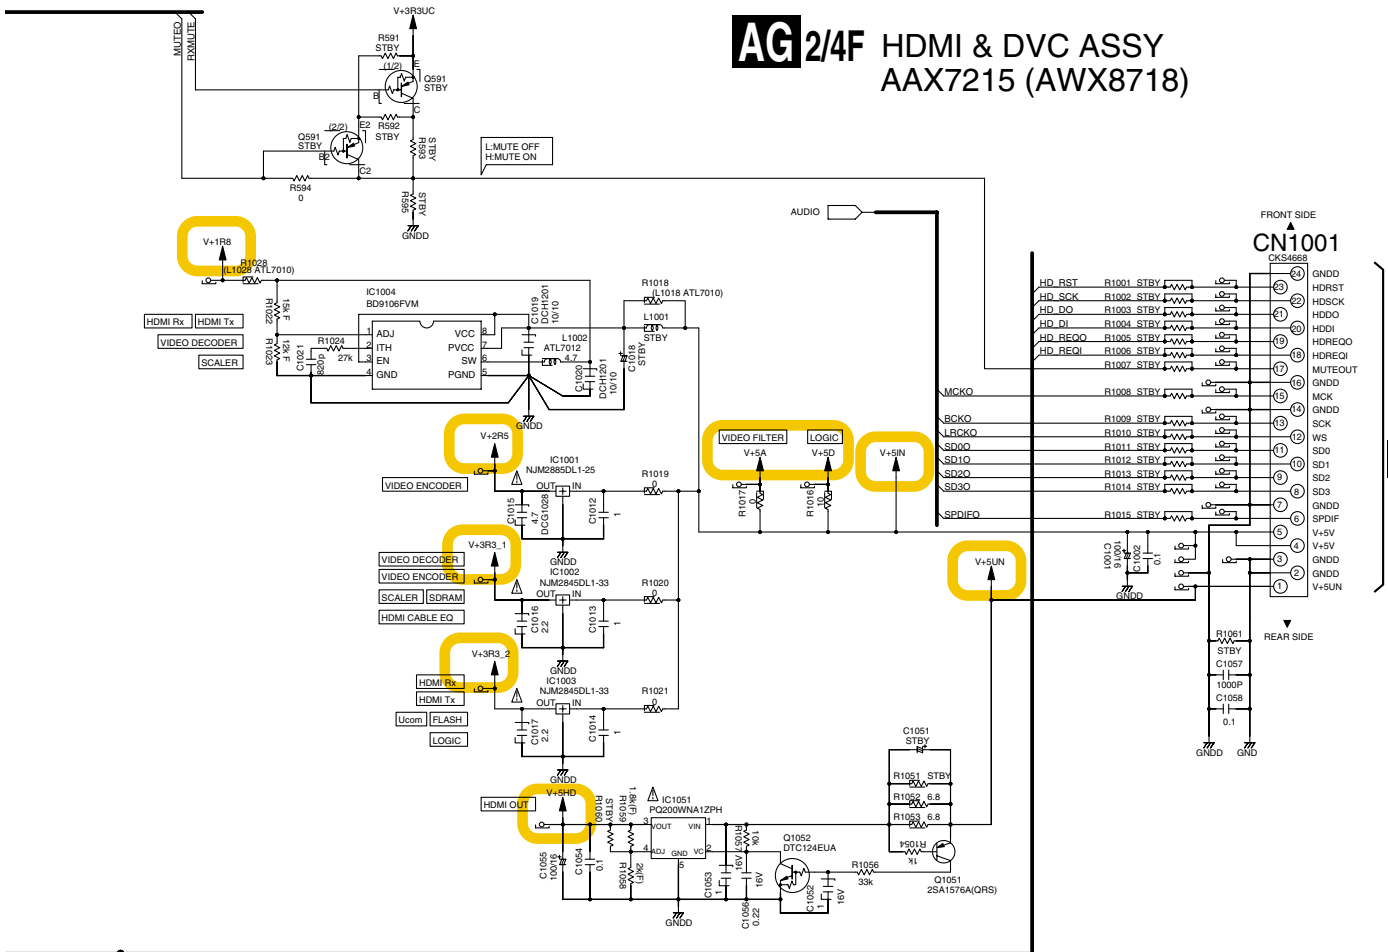

FRONT SIDE
CN1001
CKS4668

REAR SIDE
CN4311

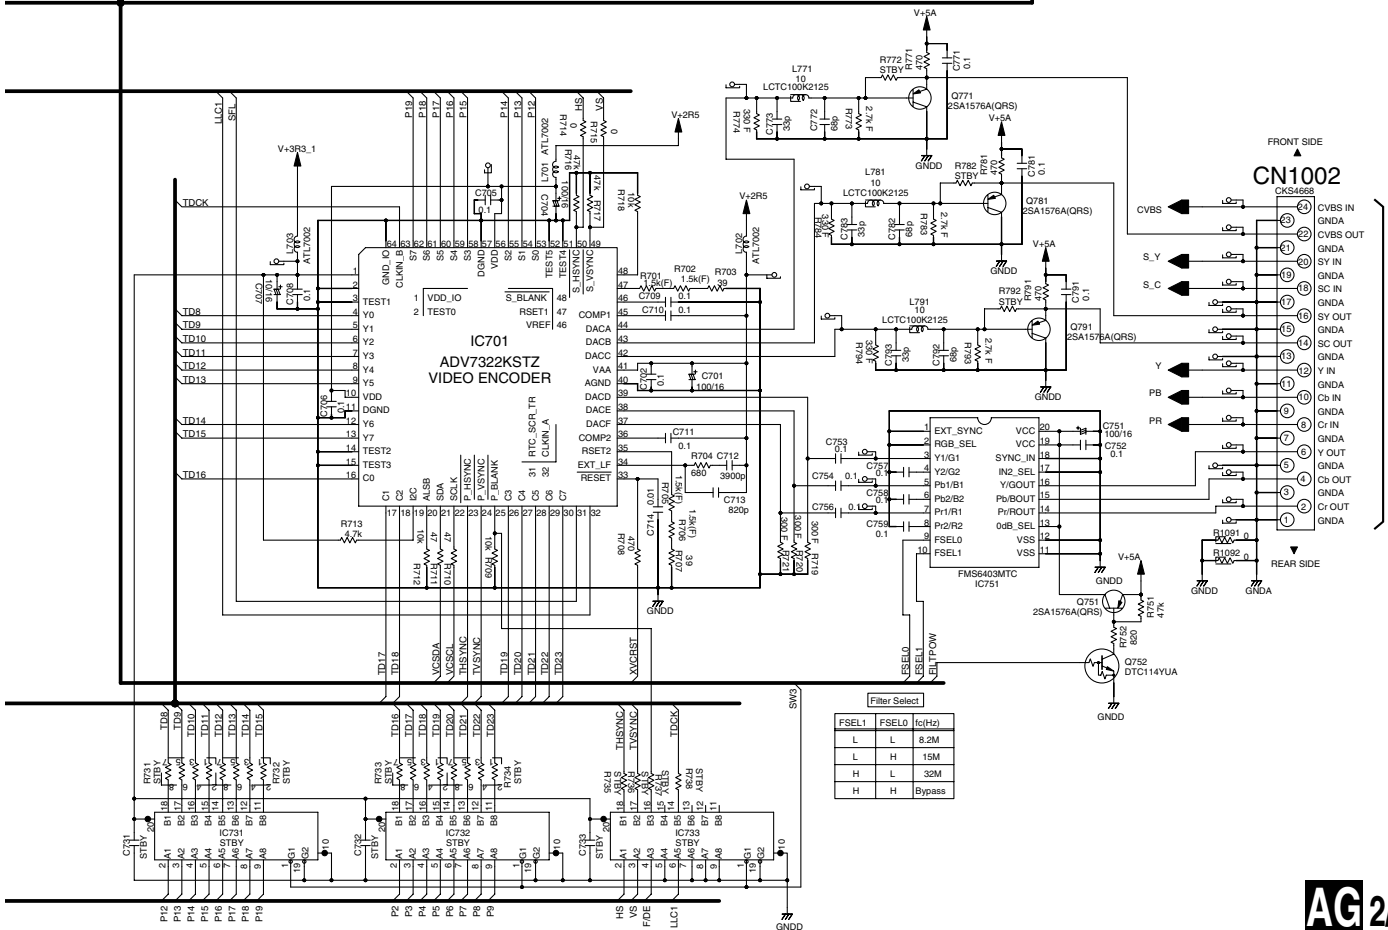

FRONT SIDE
CN1002
CKS4668

REAR SIDE
CN4310

Filter Select

FSEL1	FSEL0	f _c (Hz)
L	L	8.2M
L	H	15M
H	L	32M
H	H	Bypass

VSX-84TXSi

2.9 HDMI&DVC ASSY (3/4) (VSX-82TXS)

A


B

C


D

E


F

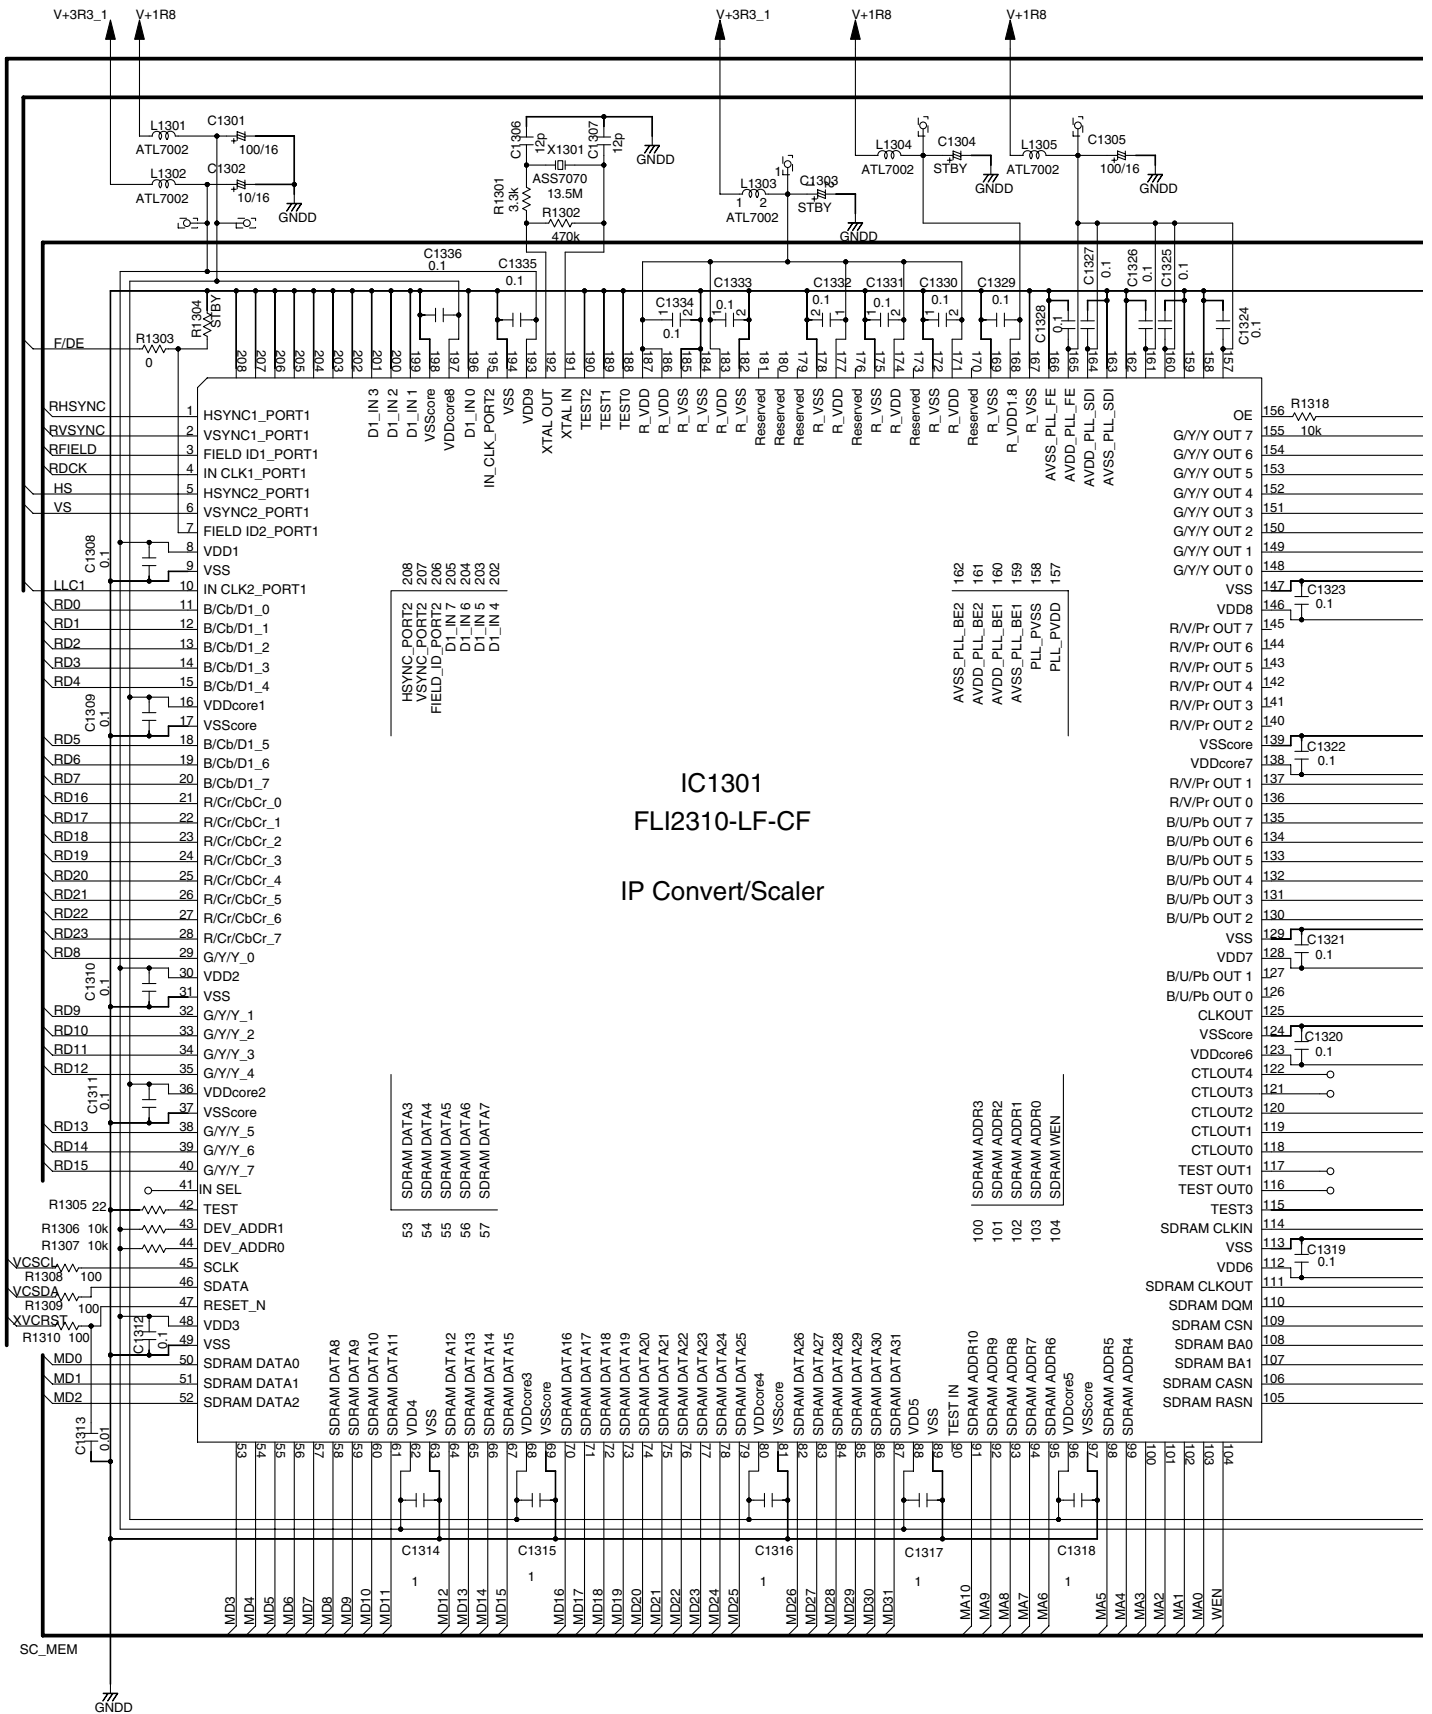




AG 3/4F HDMI & DVC ASSY AAX7215 (AWX8718)

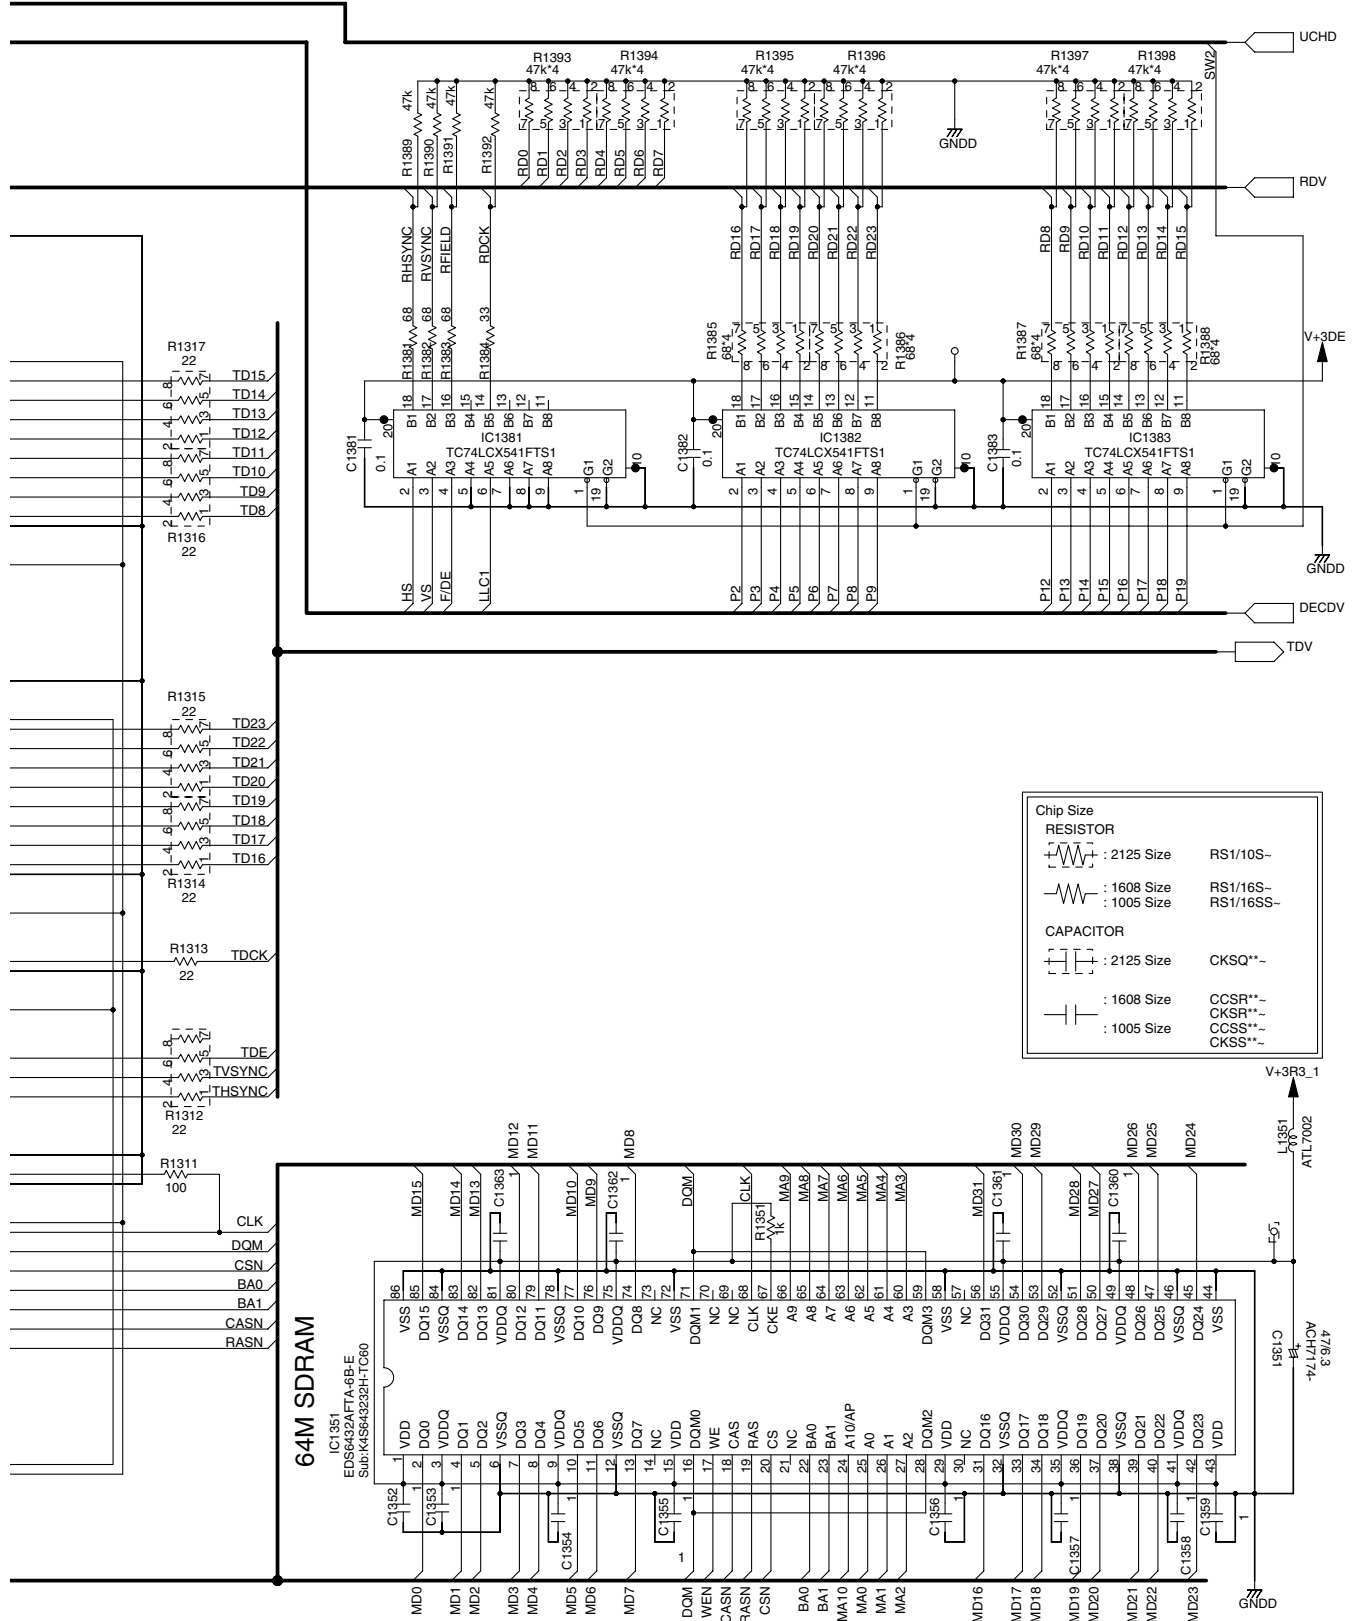

2.10 HDMI&DVC ASSY (4/4) (VSX-82TXS)

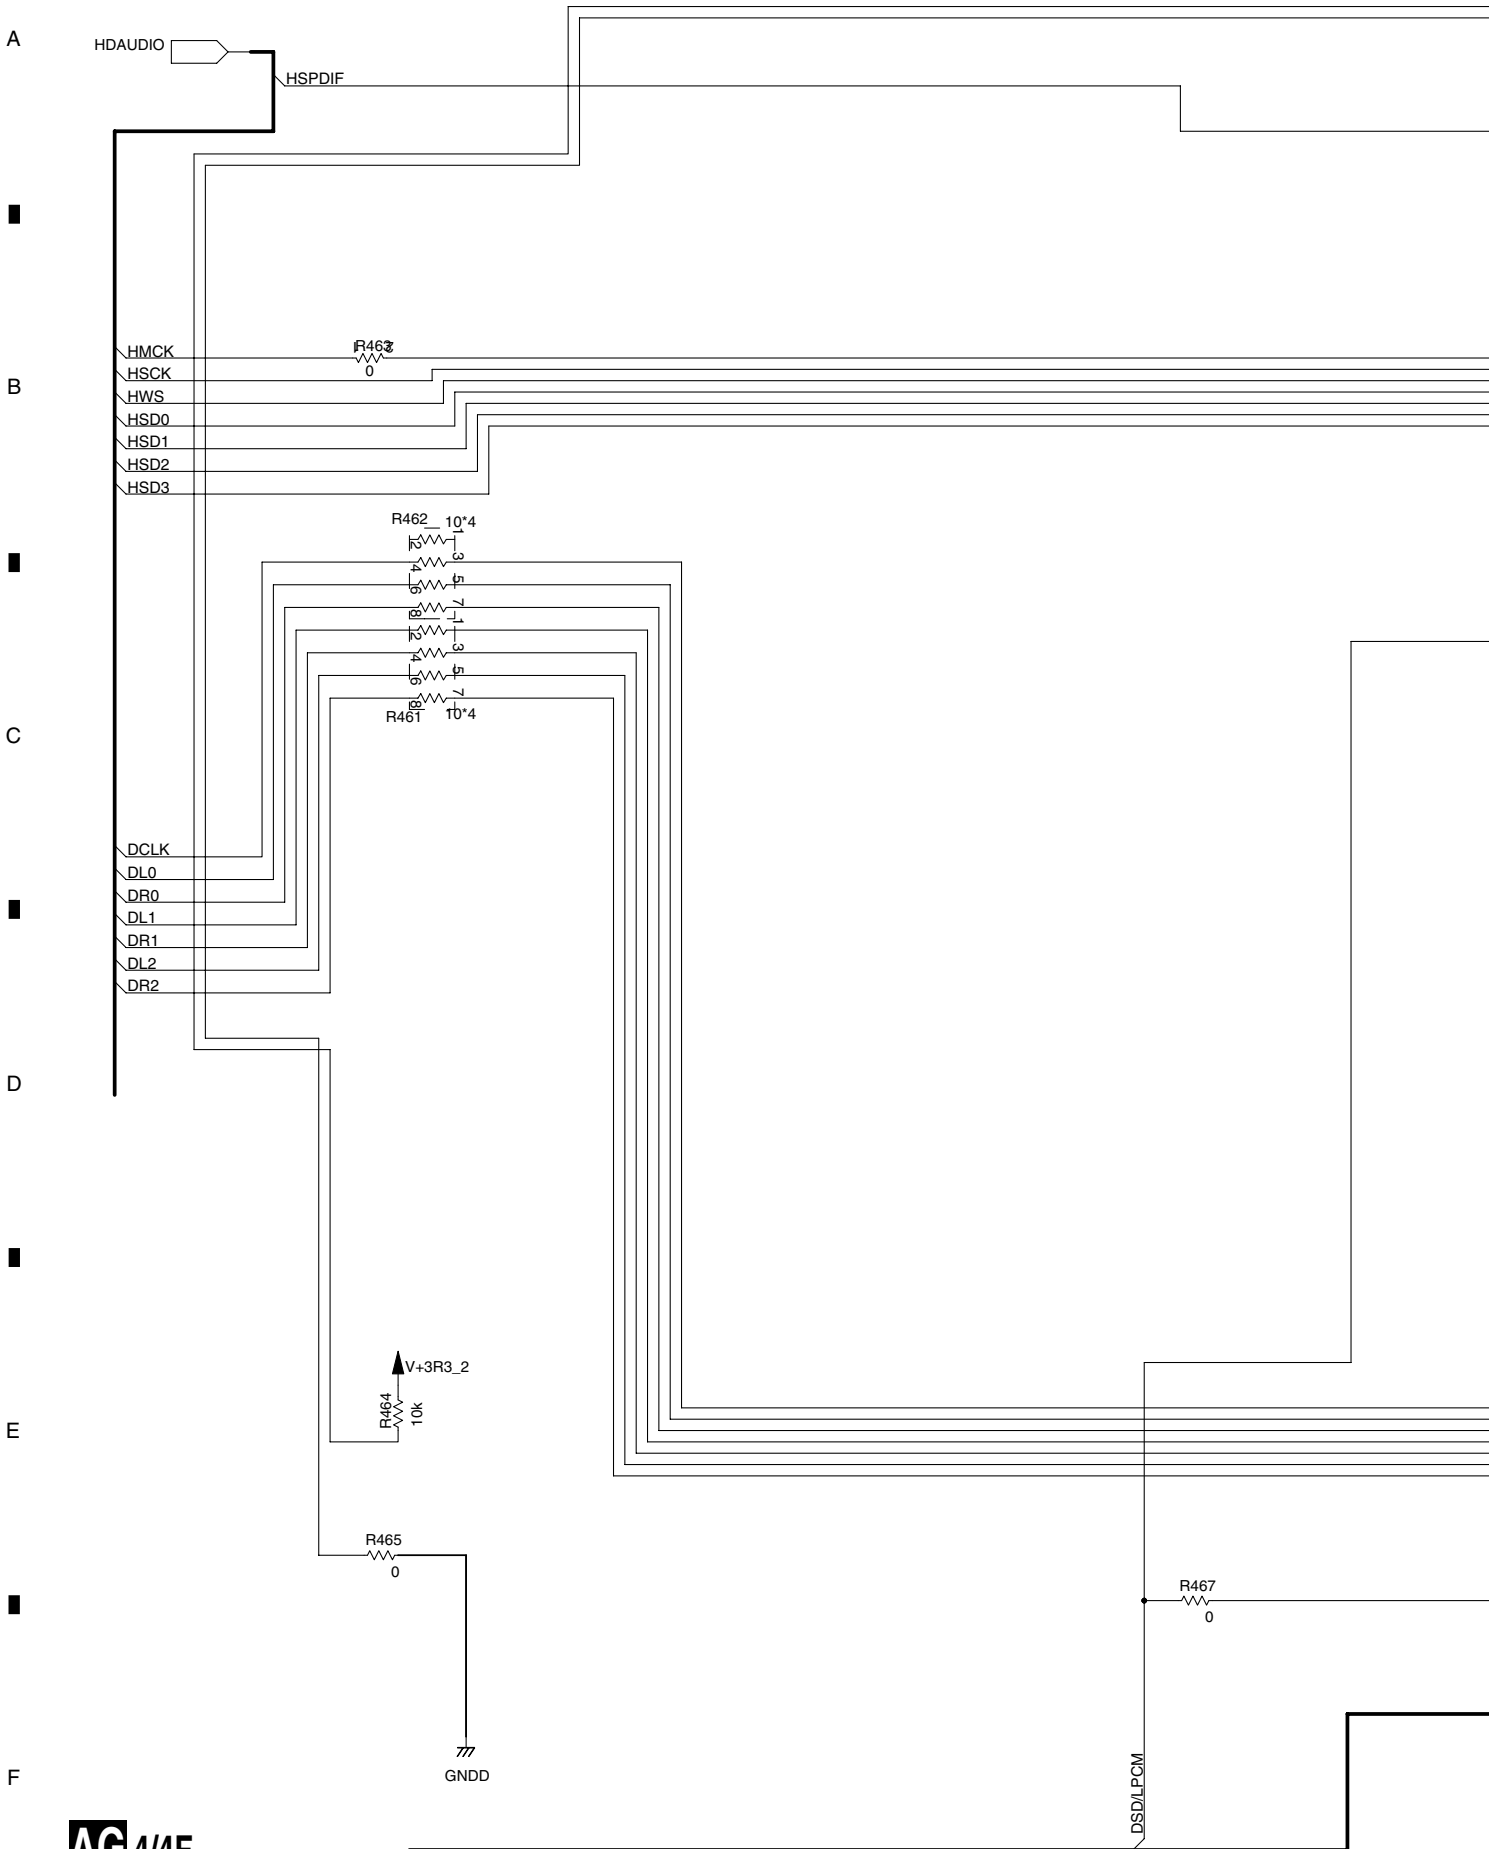

AG 4/4F HDMI & DVC ASSY
AAX7215 (AWX8718)

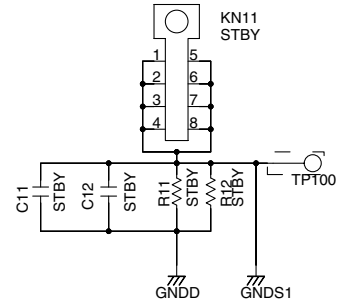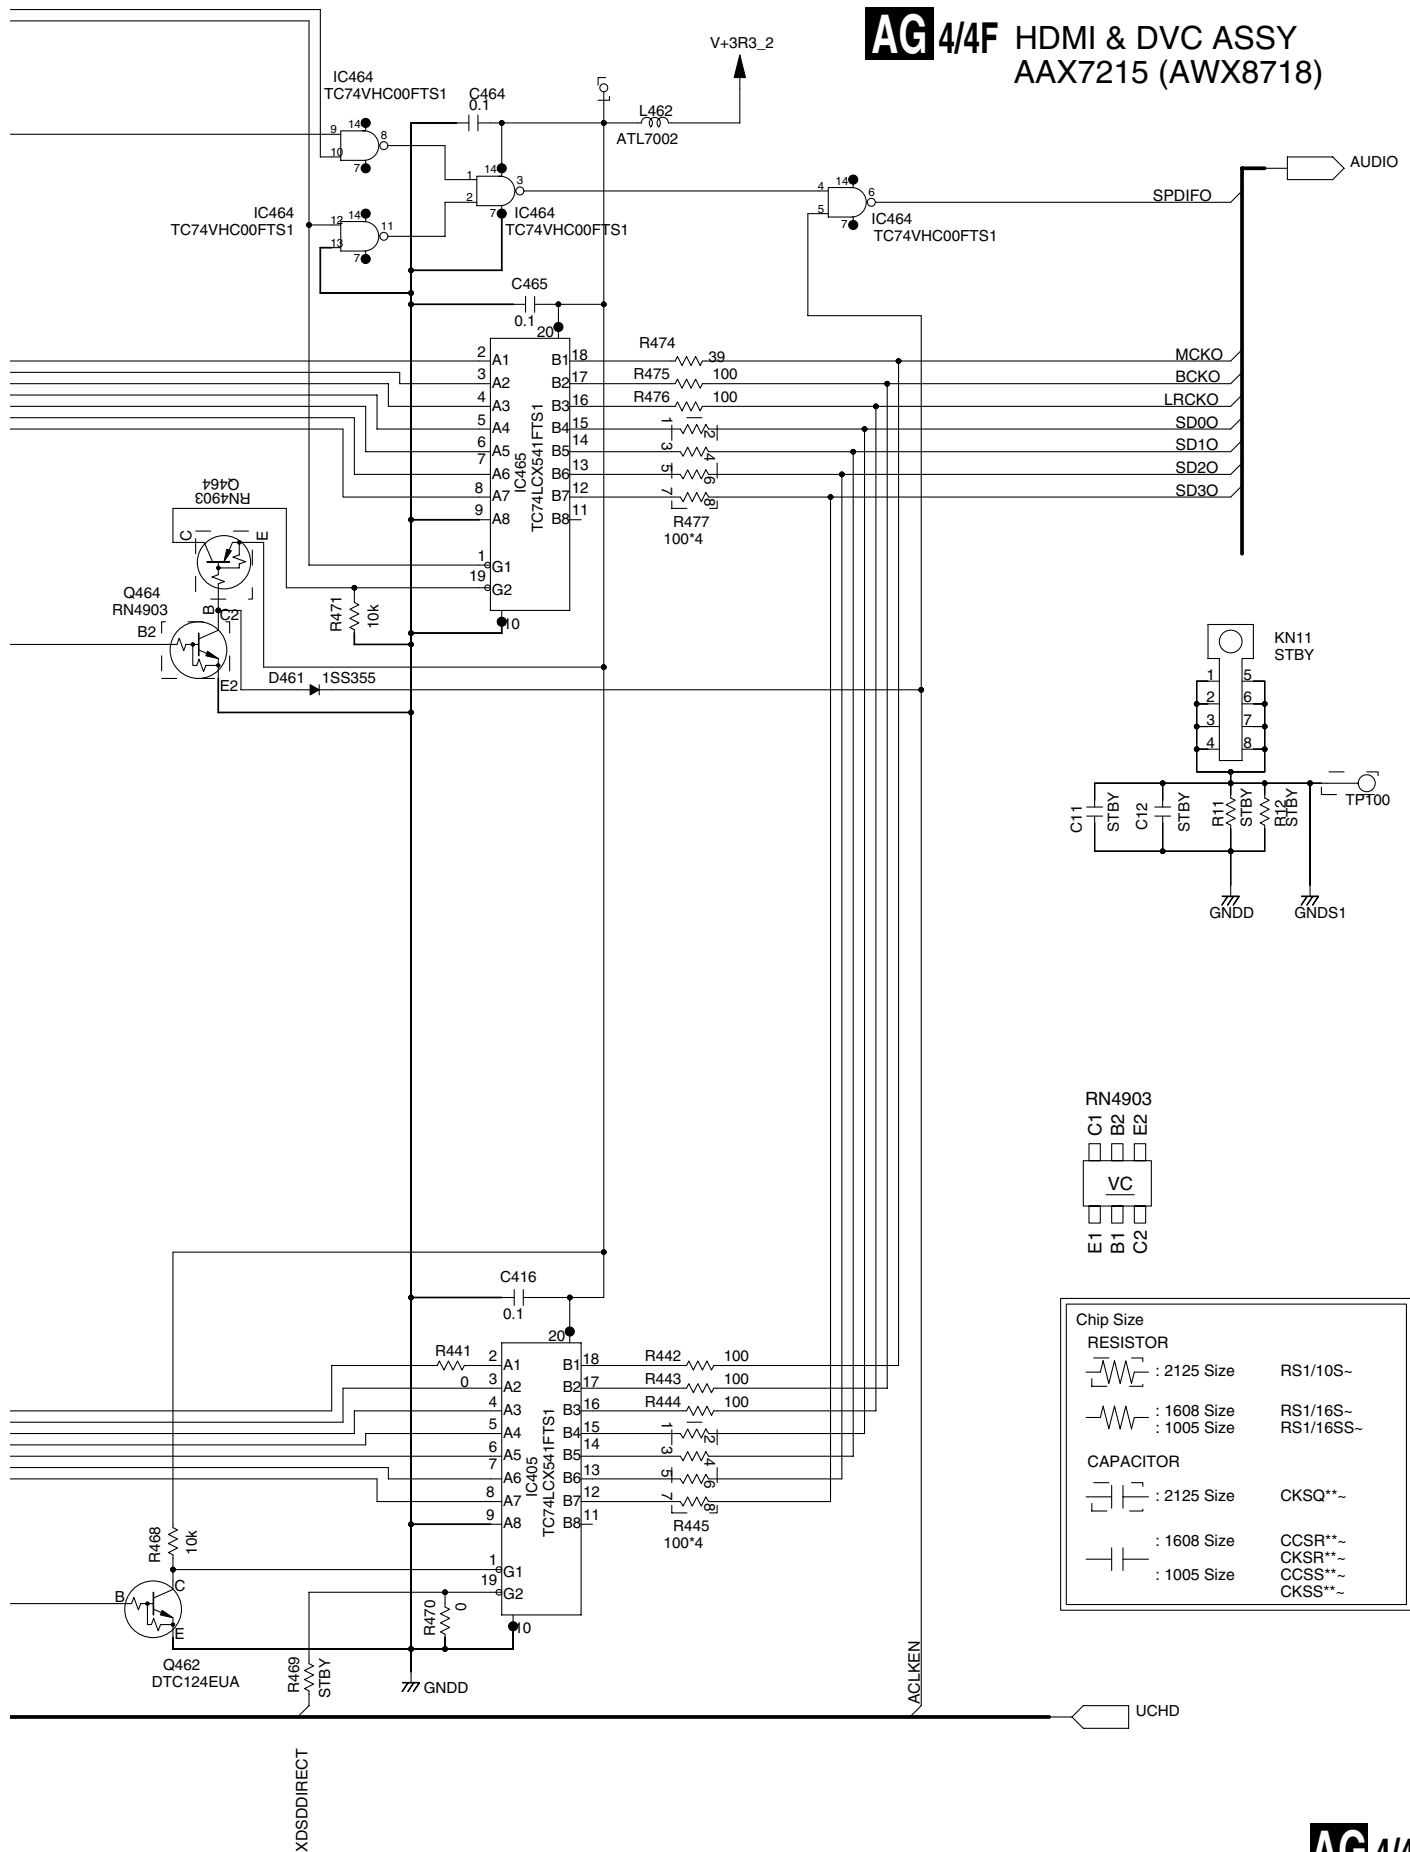

Chip Size	
RESISTOR	
: 2125 Size	RS1/10S~
: 1608 Size	RS1/16S~
: 1005 Size	RS1/16SS~
CAPACITOR	
: 2125 Size	CKSQ**~
: 1608 Size	CCSR**~
: 1005 Size	CKSS**~



3. PCB CONNECTION DIAGRAM

3.1 HDMI&1394 ASSY (VSX-84TXSi)

SIDE A

AGF HDMI&1394 ASSY

SIDE A

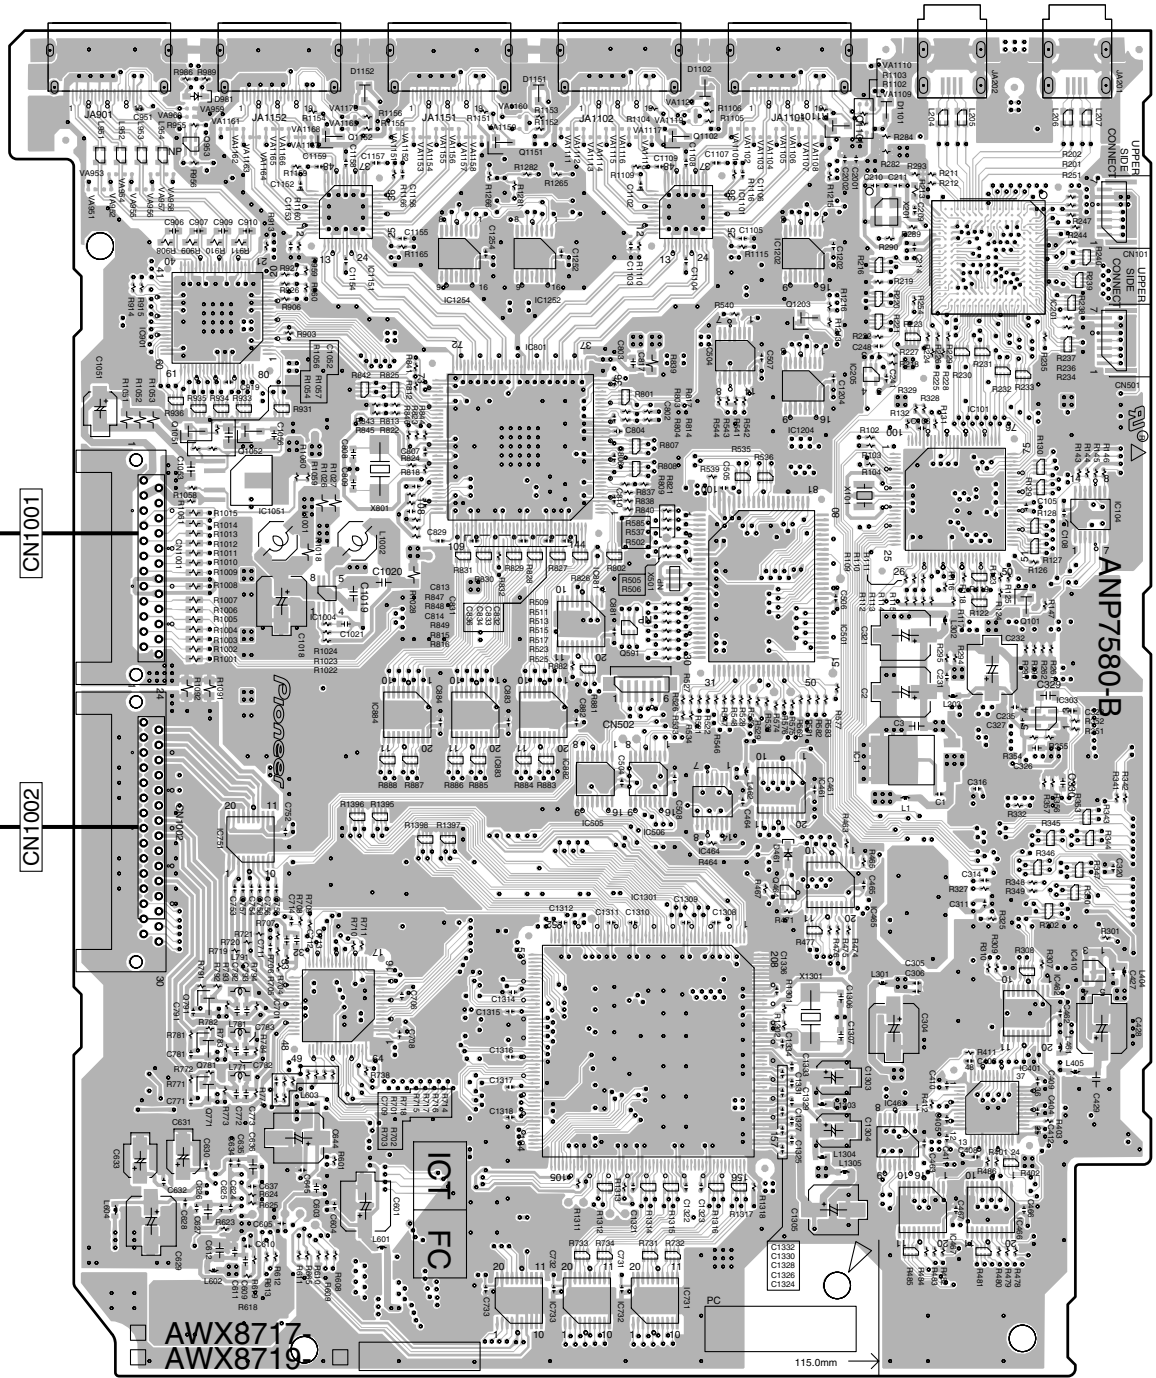

(ANP7580-B)

AGF



AGF

SIDE B

AGF HDMI&1394 ASSY

SIDE B

A

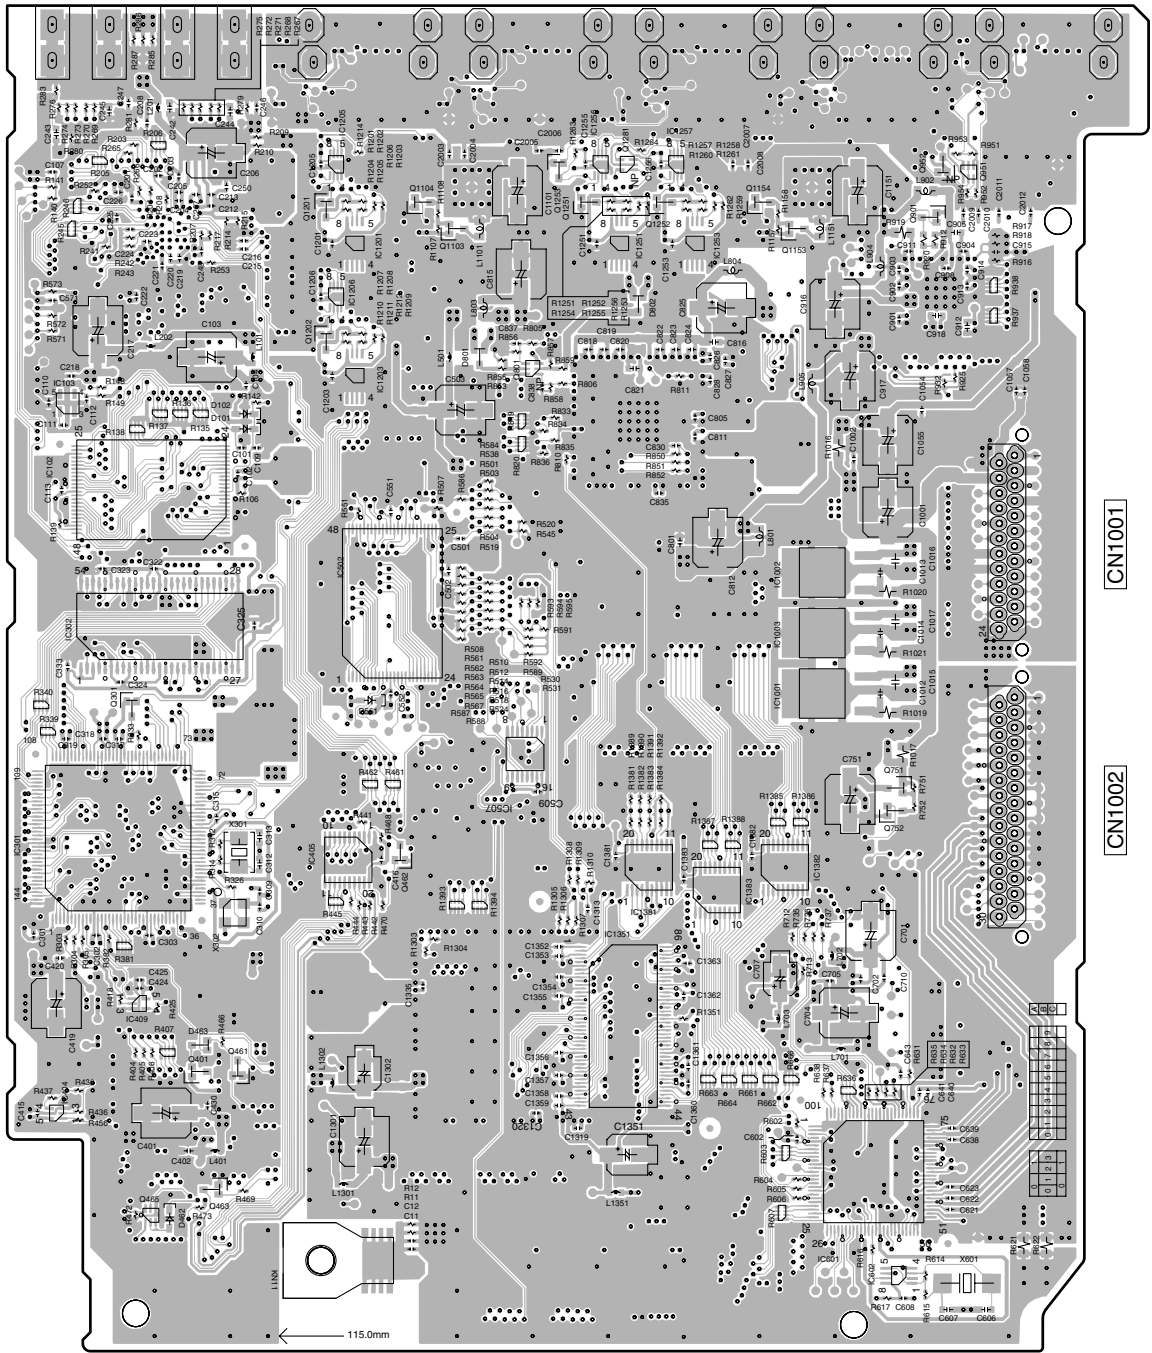

CN1001

CN1002

(ANP7580-B)

F

3.2 HDMI&DVC ASSY (VSX-82TXS)

SIDE A

AGF HDMI&DVC ASSY

SIDE A

A



B

C

D

E

F






(ANP7581-B)

SIDE B

AGF HDMI&DVC ASSY

SIDE B

A

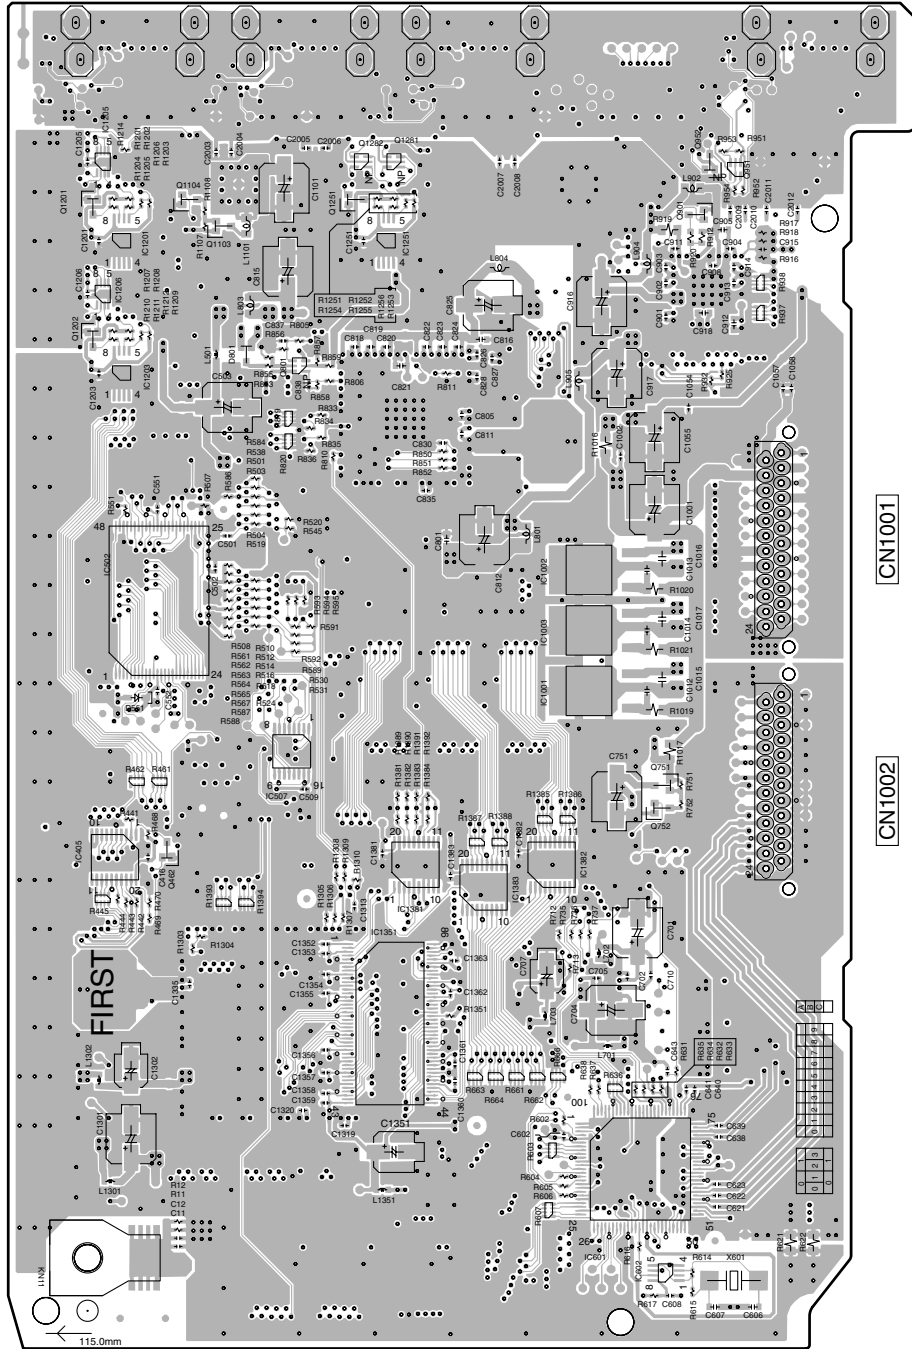

CN1001

CN1002


(ANP7581-B)

F


4. DIAGNOSIS METHOD OF HDMI ASSY (HDMI & 1394 and HDMI & DVC ASSY)

HDMI Simple Diagnosis

1. Causes for noncompletion of HDMI authentication between the source equipment and this unit (the HDMI indicator is unlit or flashes)

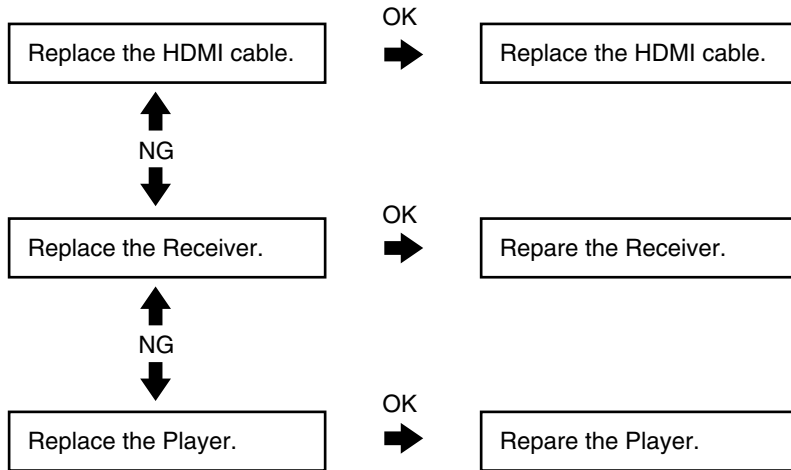


2. Causes for noncompletion of HDMI authentication between the monitor and this unit (no display or sound from the monitor)

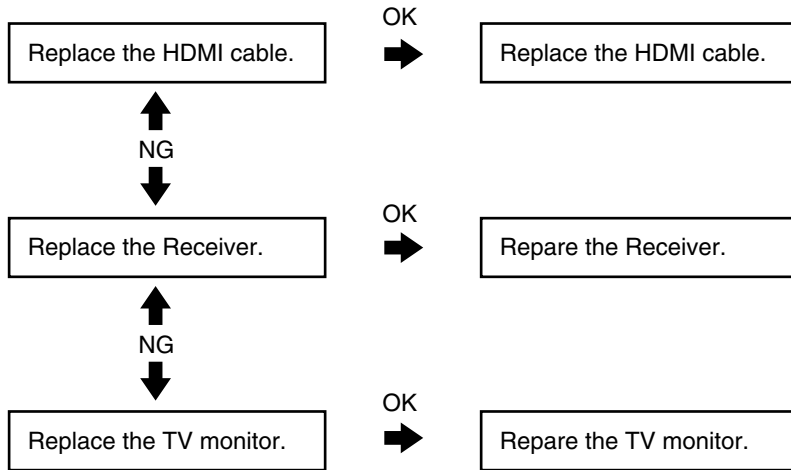

1394 Simple Diagnosis (VSX-84TXSi)

1. Causes that the i.LINK indicator is unlit or flashes

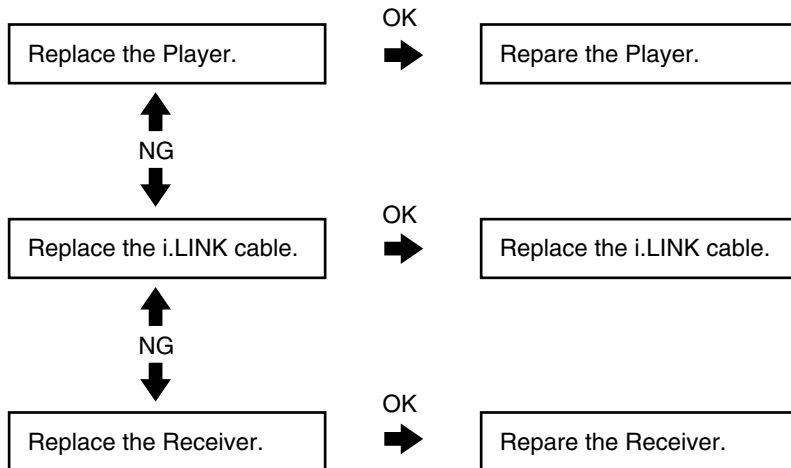

■ Preparations for diagnosis

Note : Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

Jig cable (VSX-84TXSi)



- 24P board to board extension jig cable (GGD1491)
- 30P board to board extension jig cable (GGD1492)

Jig cable (VSX-82TXS)


- 24P board to board extension jig cable (GGD1491) ×2

[Procedures]

- ① Remove the bonnet.
- ② Remove the BRIDGE1 Assy.
- ③ Remove the HDMI shield, first removing the six screws.
- ④ Remove the five screws that secure the HDMI connector to the rear panel.
Remove the two screws that secure the 1394 connector to the rear panel. (VSX-84TXSi)
- ⑤ Remove the rivet that secures the HDMI & 1394 Assy.
- ⑥ Remove the HDMI & 1394 Assy.

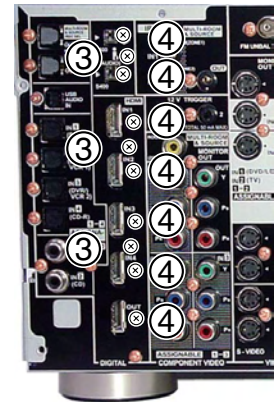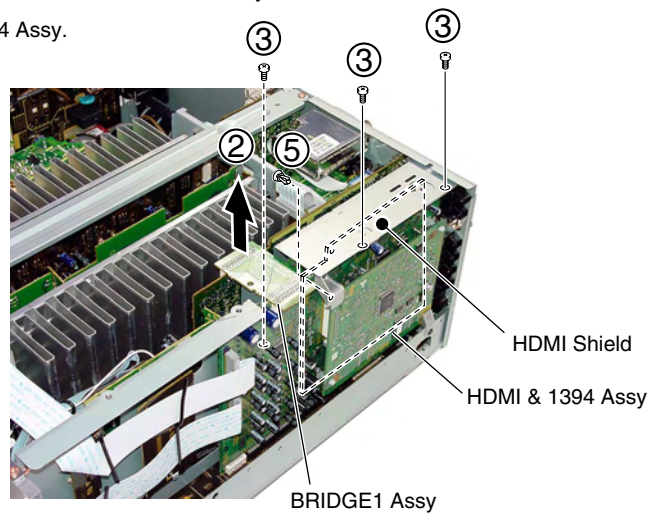

- ⑦ Connect the two extension jig cables.
- ⑧ Connect a cable between the HDMI connector and the chassis.
- ⑨ Connect the BRIDGE1 Assy.

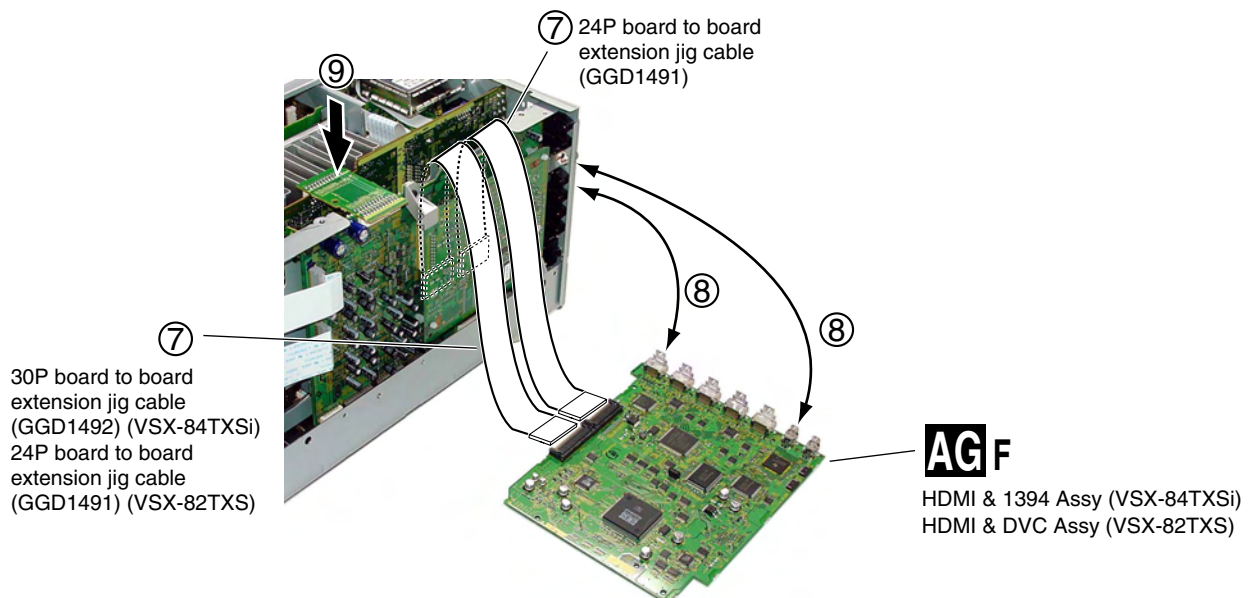

HDMI Troubleshooting

The parts marked like **V+5** in the following chart are located in "HDMI & 1394 Assy Check Points".

Common section

Step 1: Connections

CN1001, CN1002 **A1**

A2

Is soldering of the connectors OK? No Solder the connectors correctly.

Step 2-1: Power supply, CLK

CN1001(Pin 4) 5 V INPUT **V+5IN**

Is the voltage 5 V? No Check the INTERFACE Assy or DC/DC Assy.

R1028 1.8 V **V+1R8**

Is the voltage 1.8 V? No Check the soldering of IC1004 and the peripheries of IC1004. If soldering has not been done correctly, replace IC1004.

IC1001(OUT) 2.5 V **V+2R5**


Is the voltage 2.5 V? No Check the soldering of IC1001. If soldering has not been done correctly, replace IC1001.

IC1002(OUT) 3.3 V **V+3R3_1**

Is the voltage 3.3 V? No Check the soldering of IC1002. If soldering has not been done correctly, replace IC1002.



IC1003(OUT) 3.3 V **V+3R3_2**

Is the voltage 3.3 V? No Check the soldering of IC1003. If soldering has not been done correctly, replace IC1003.

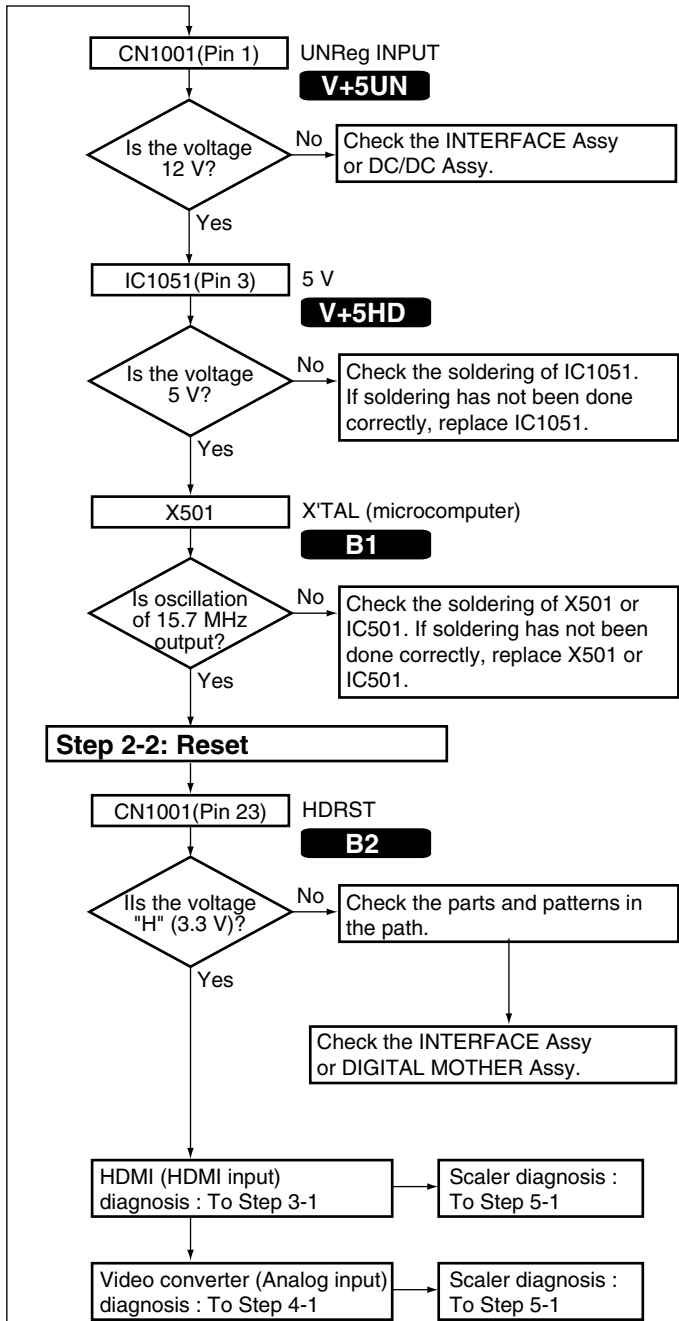


HDMI section


Step 3-1: Power supply, CLK

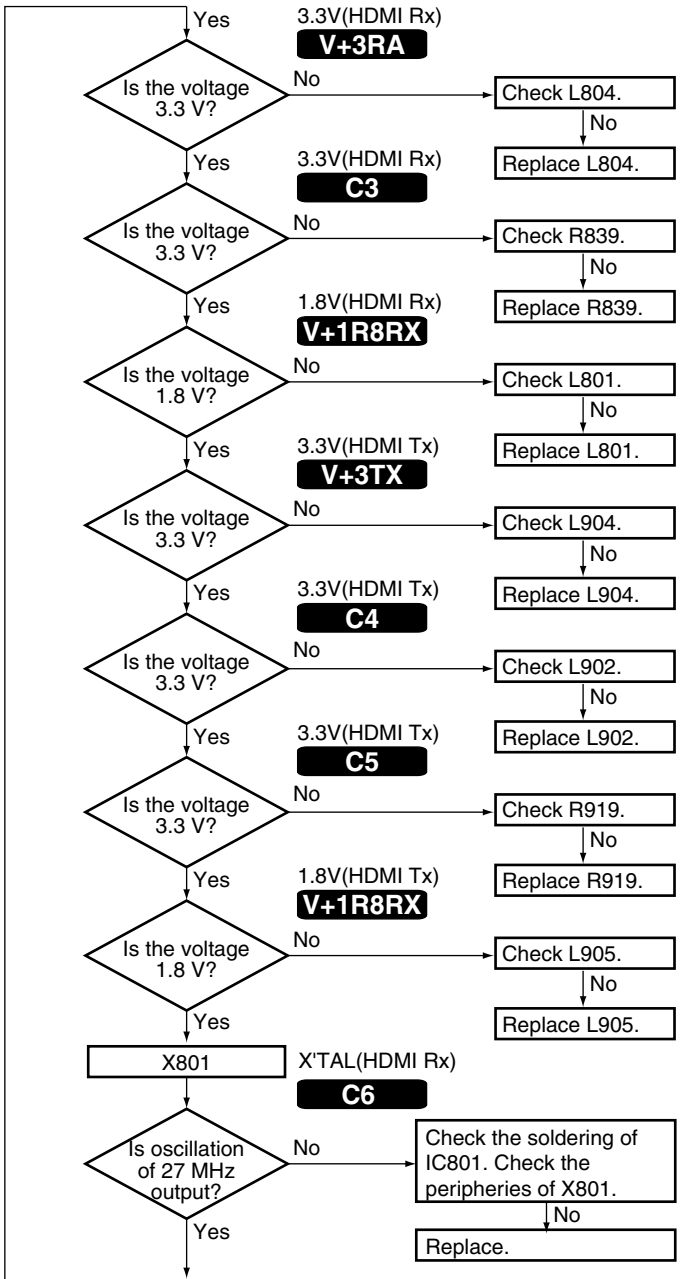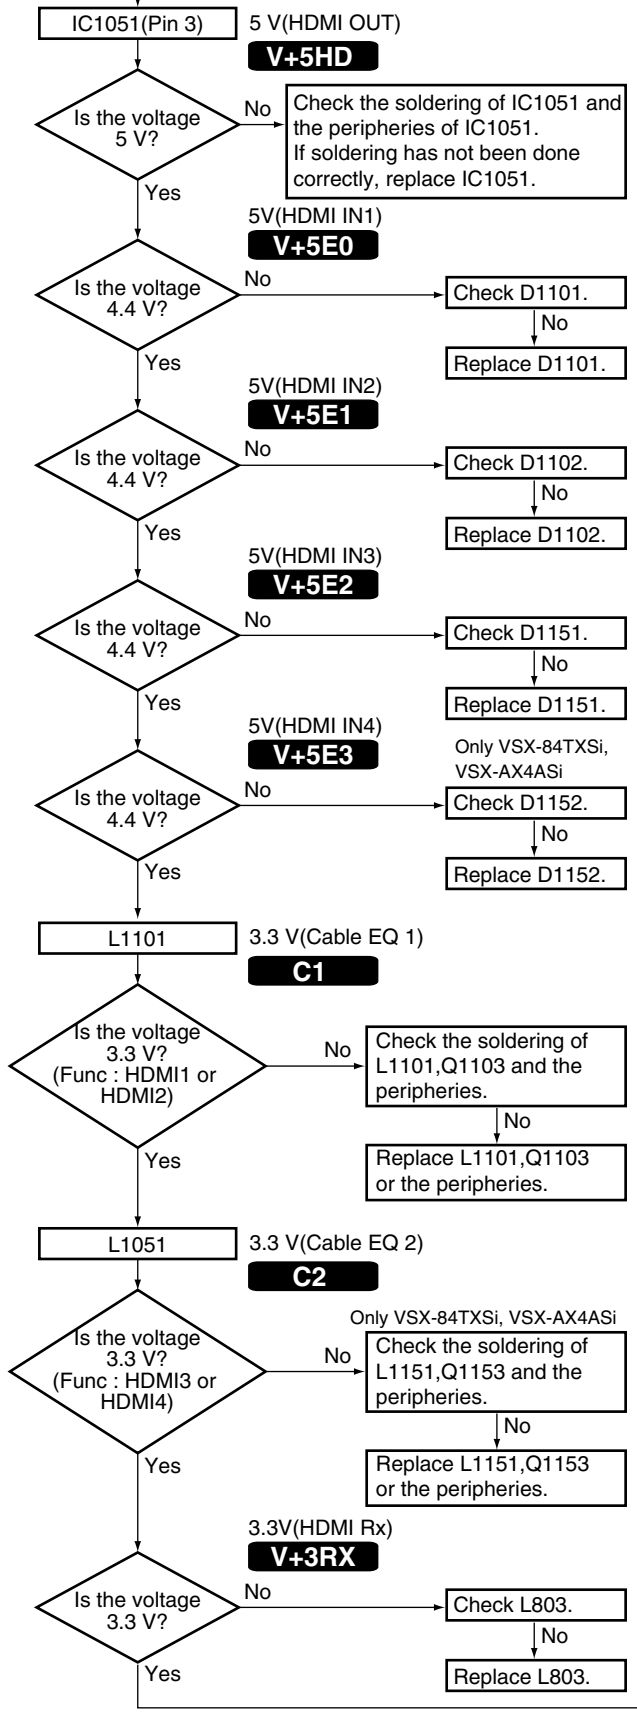

Step 3-2 : Reset

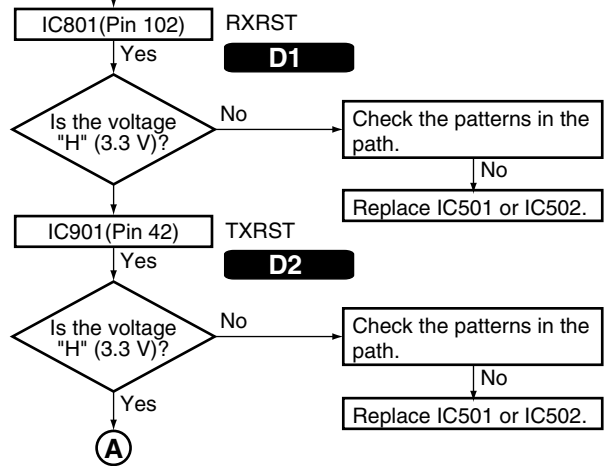

A

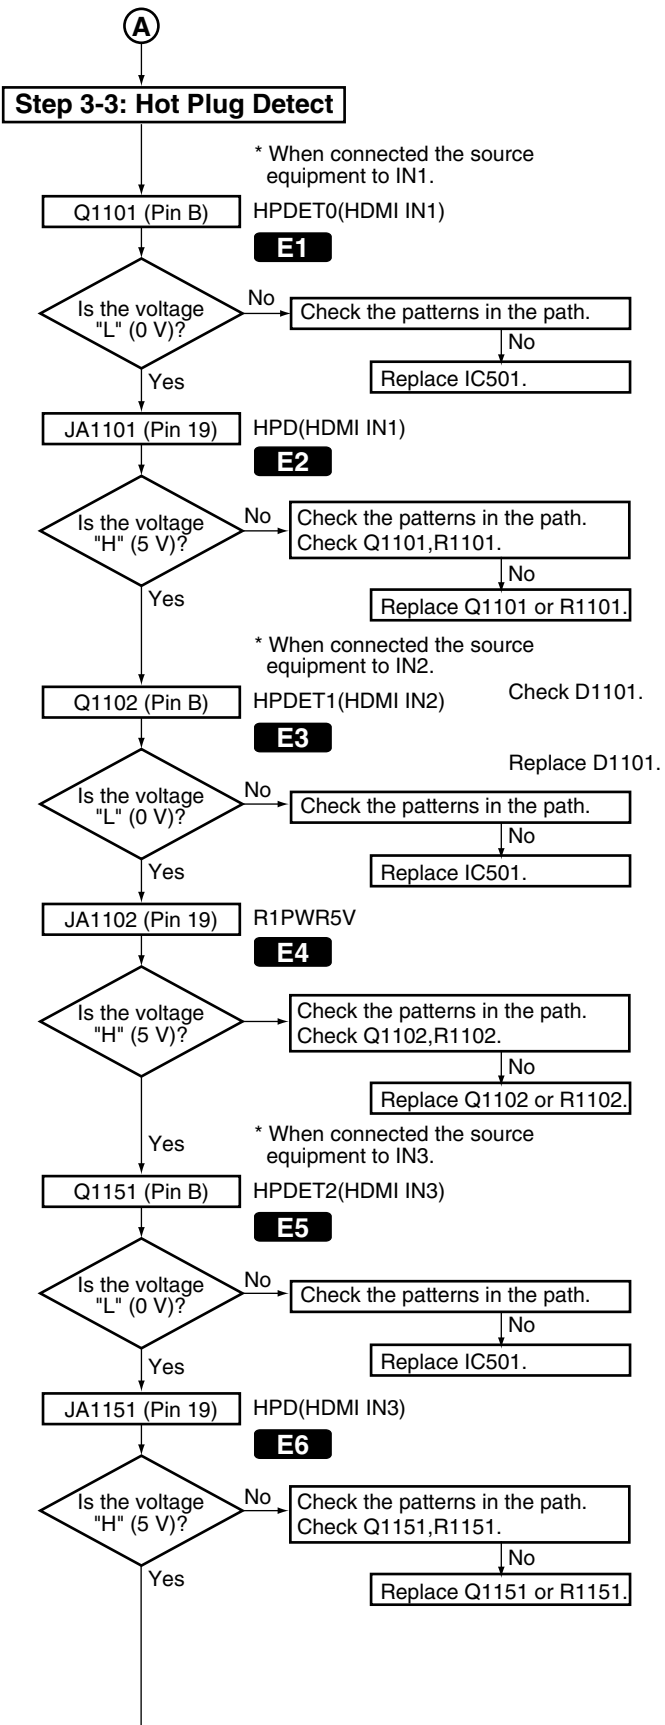


B



C

D


E

F

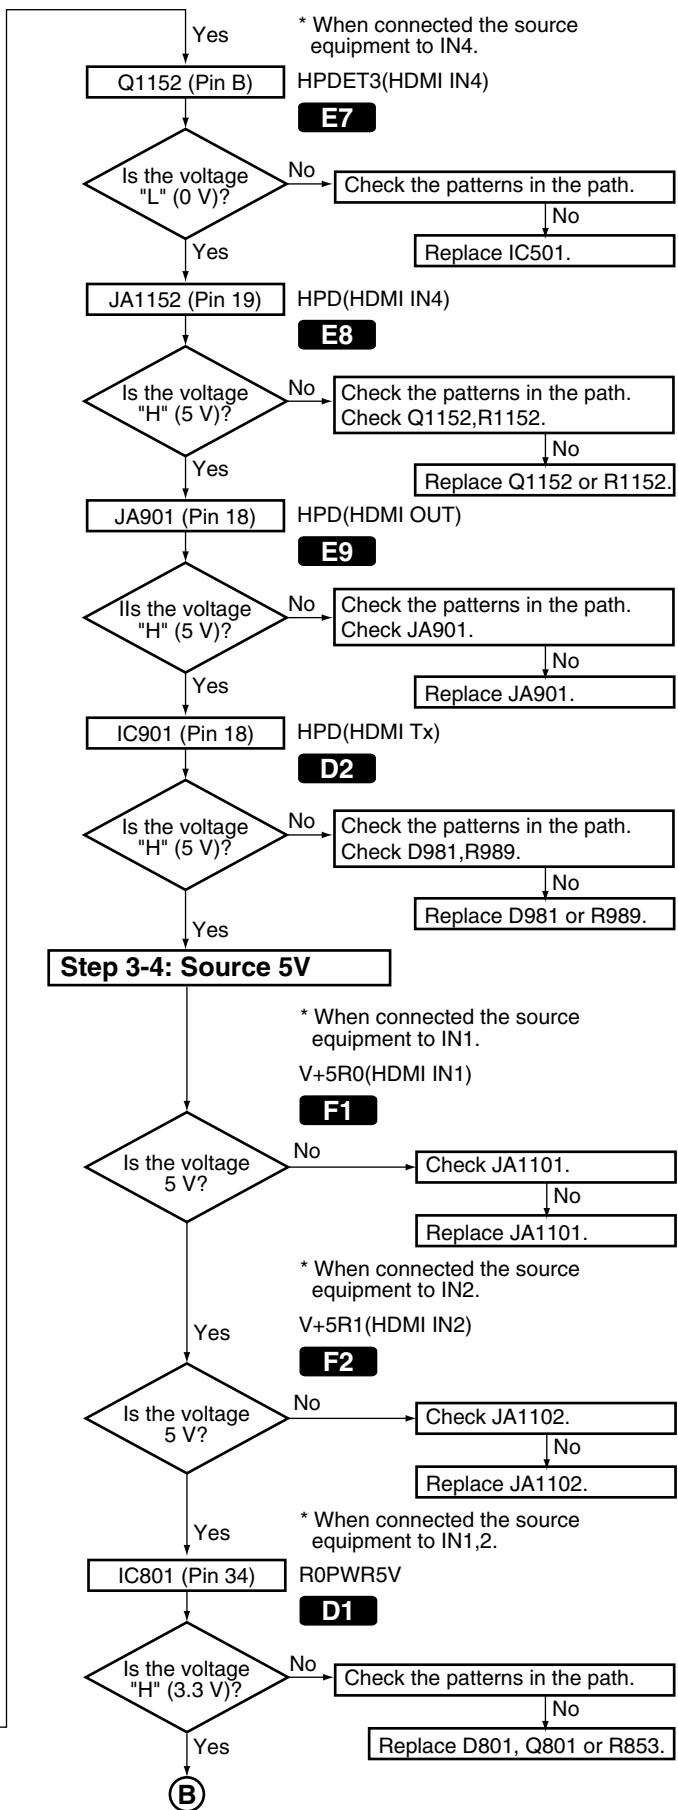


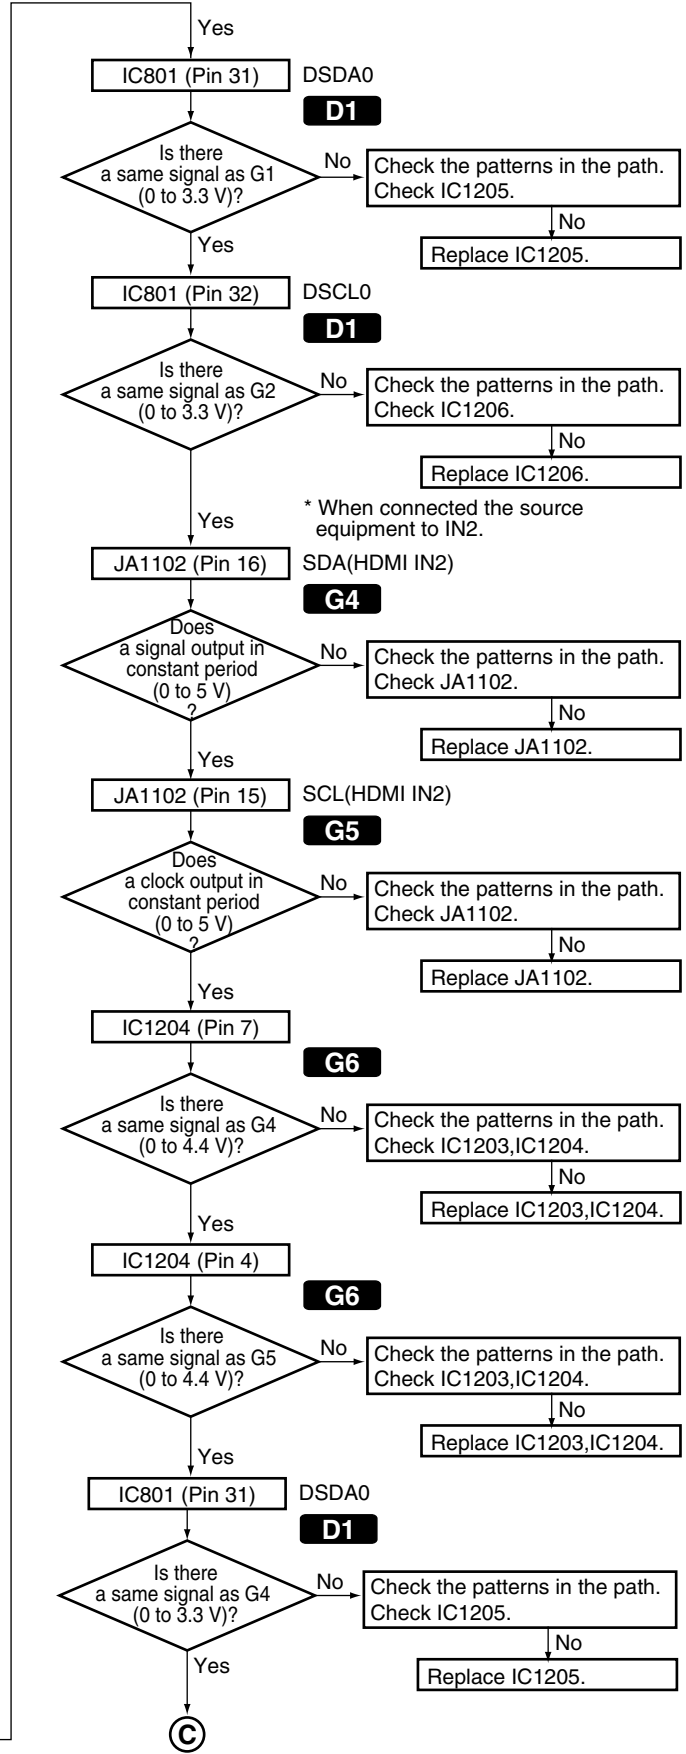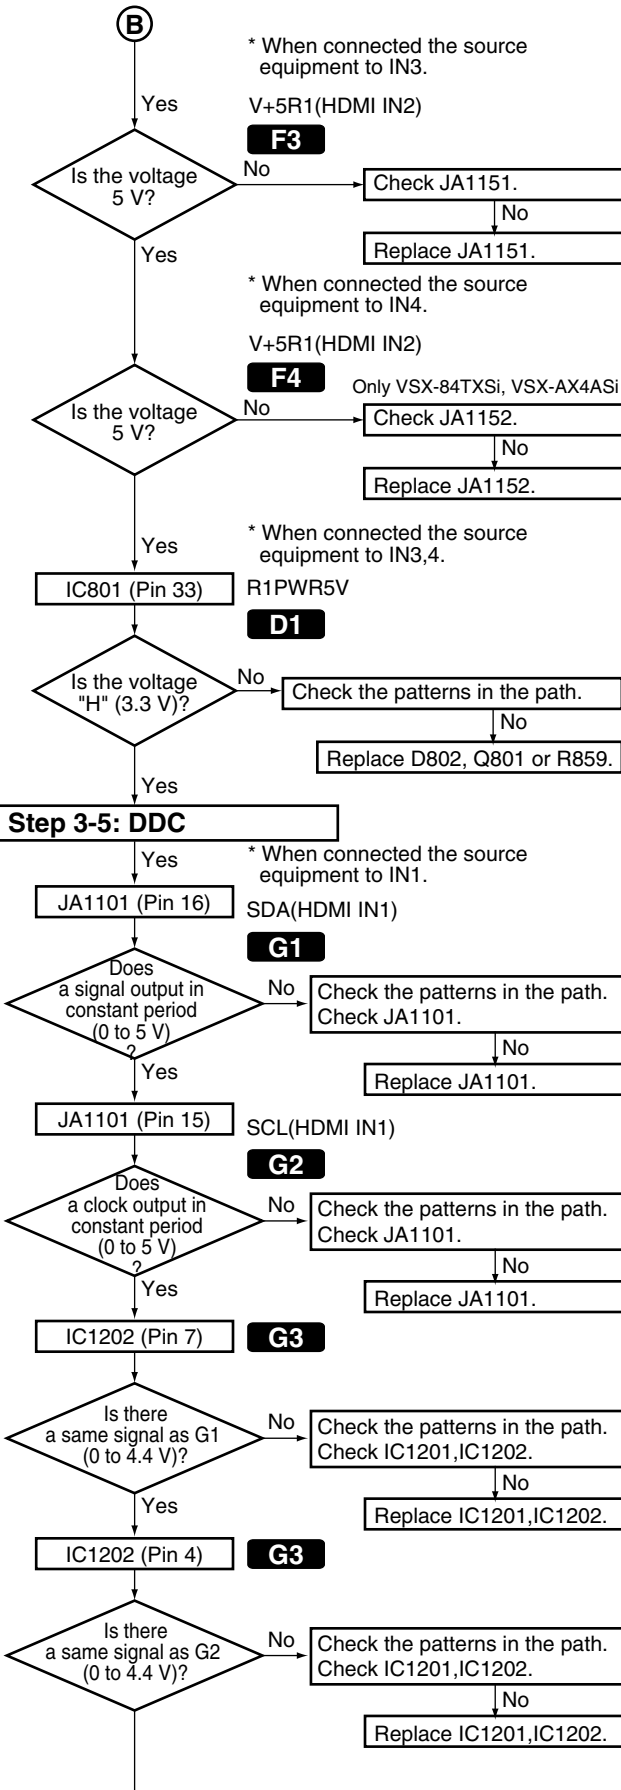


A

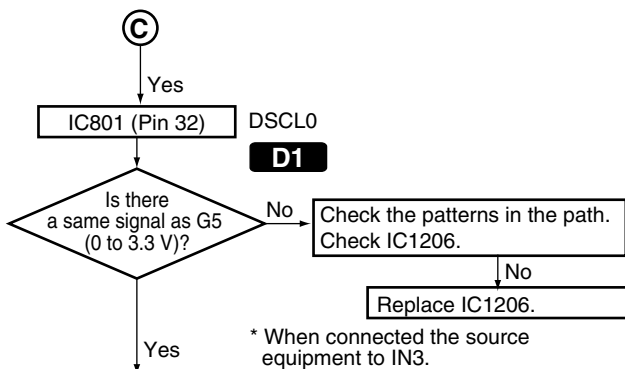


B

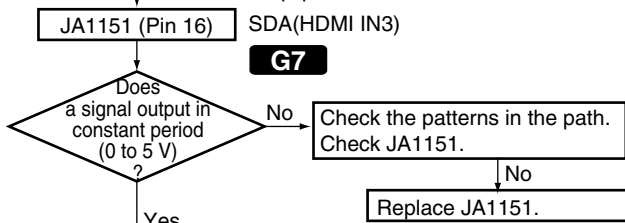


C

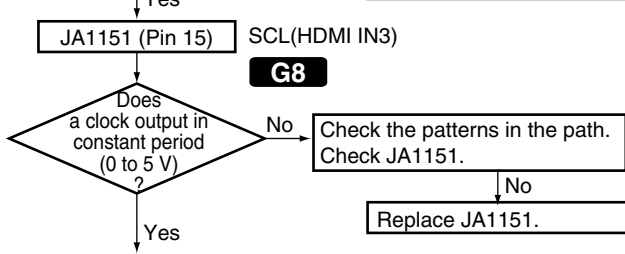



D


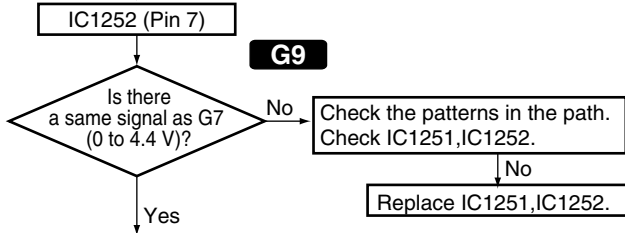


E

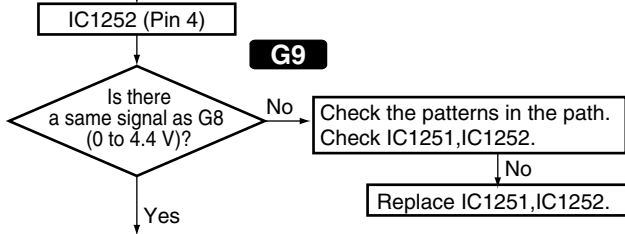


F

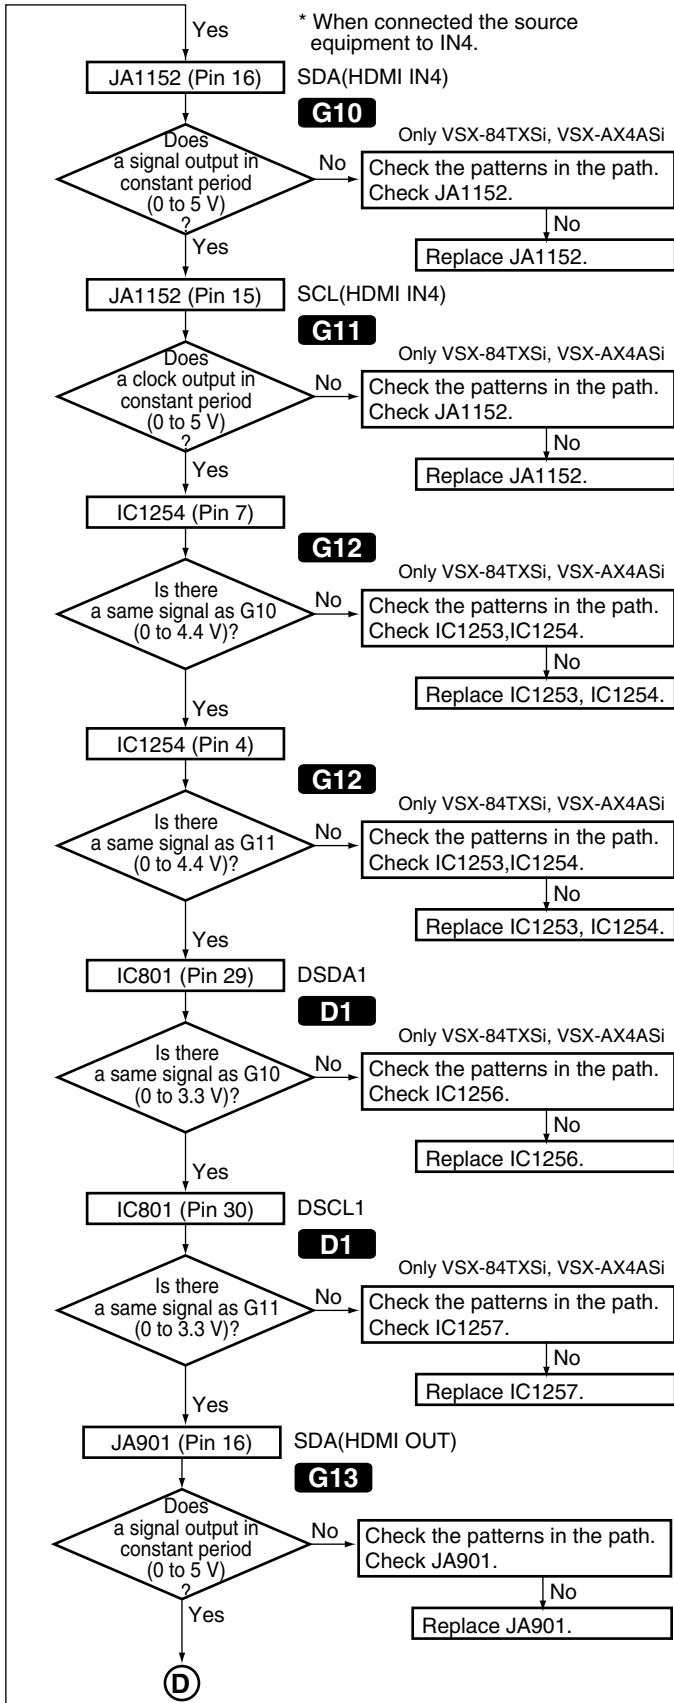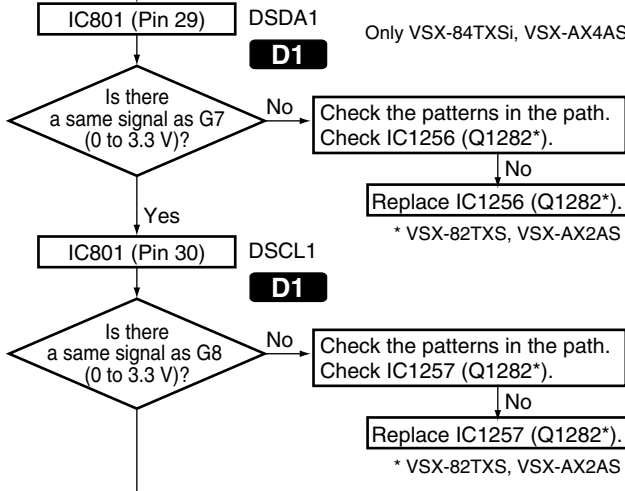


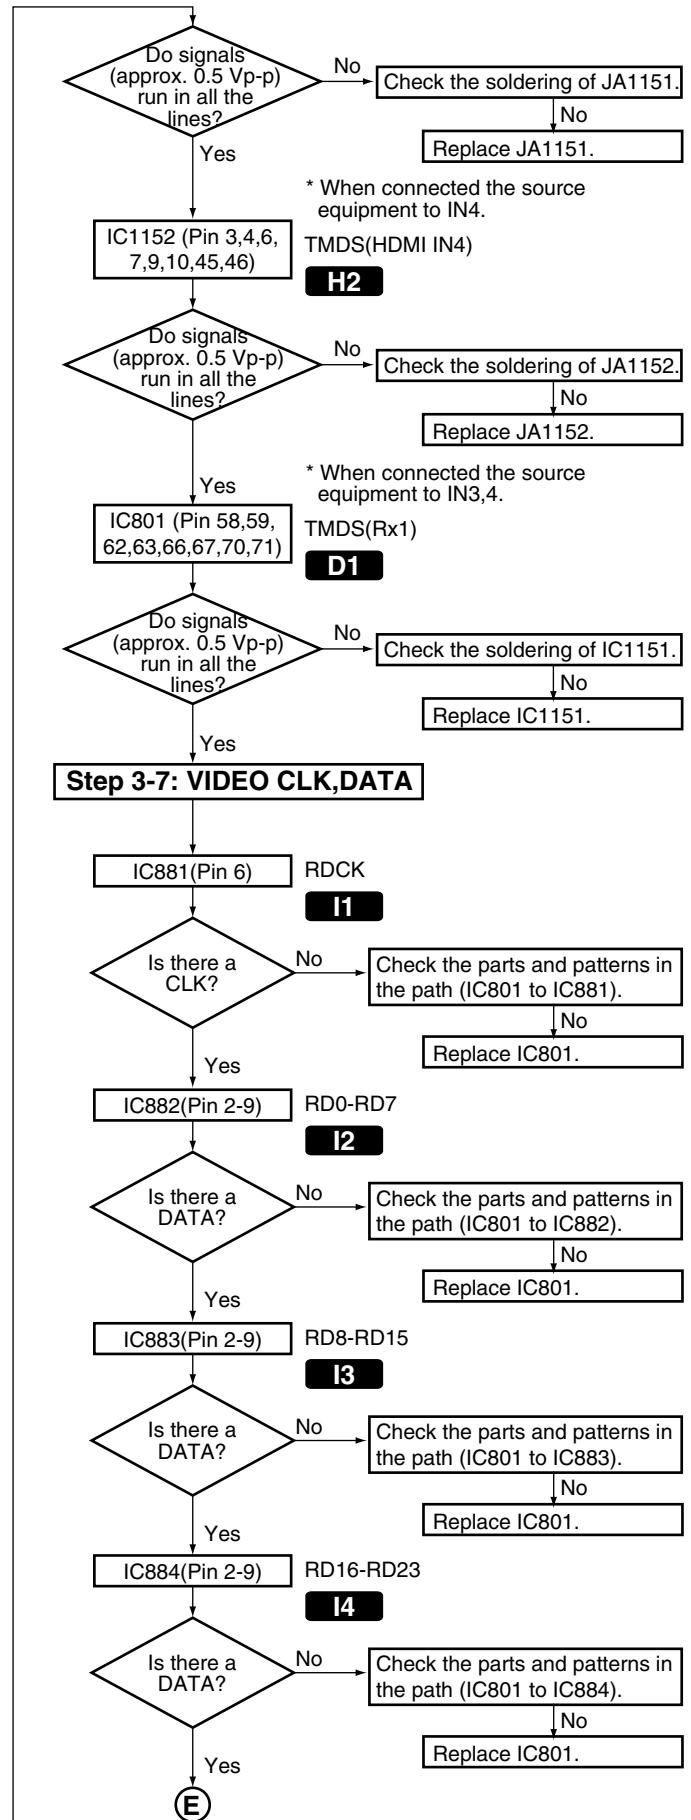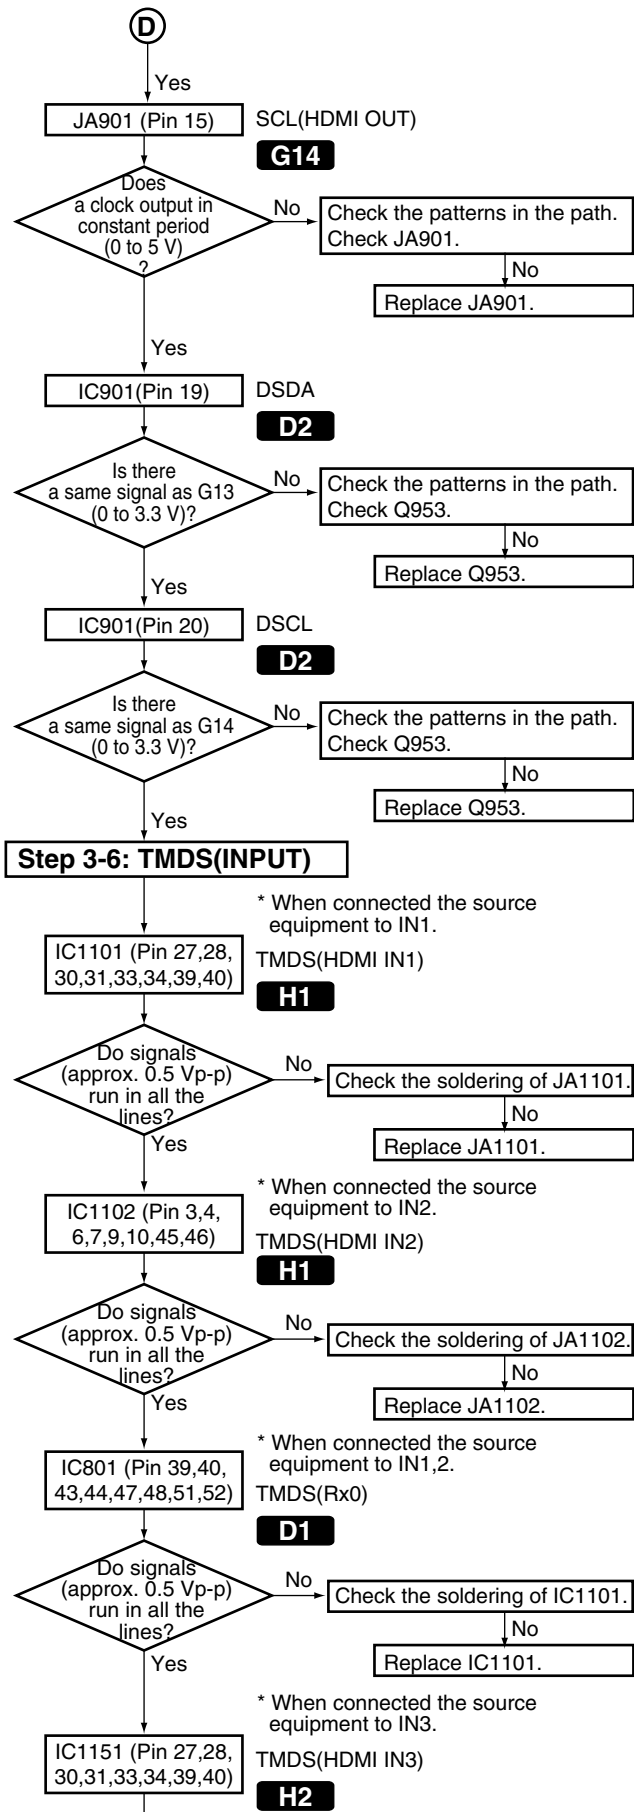


A

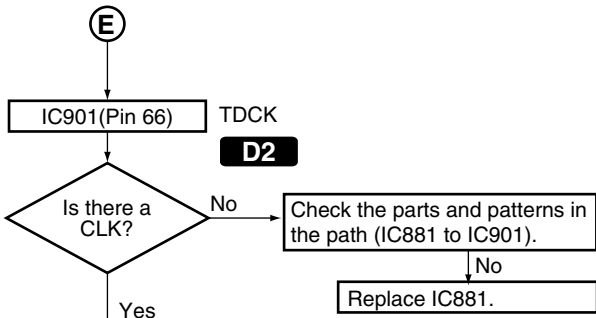

B

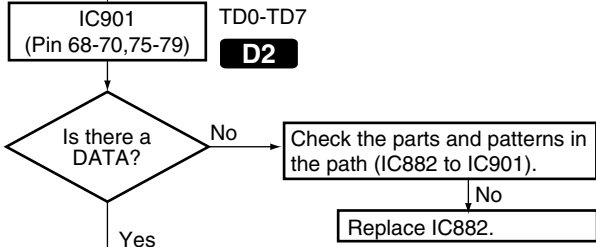


C

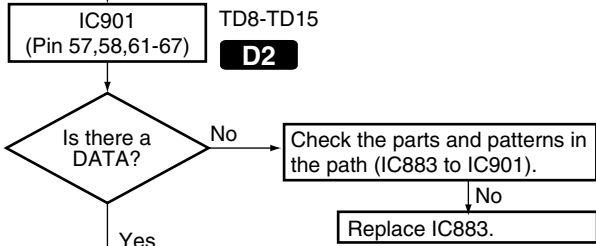


D

Step 3-8: TMDS(OUTPUT)

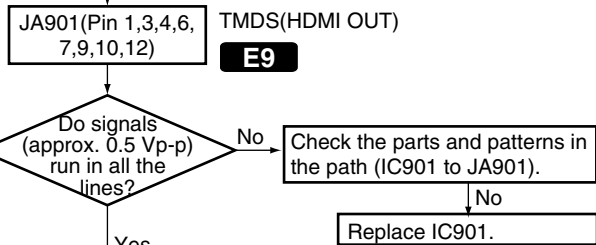


E

Step 3-9: AUDIO CLK,DATA

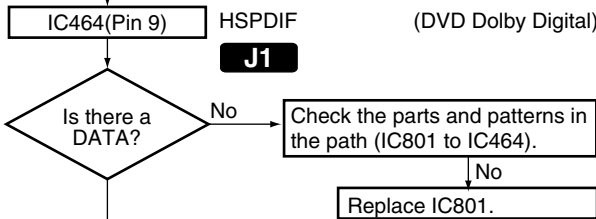


F

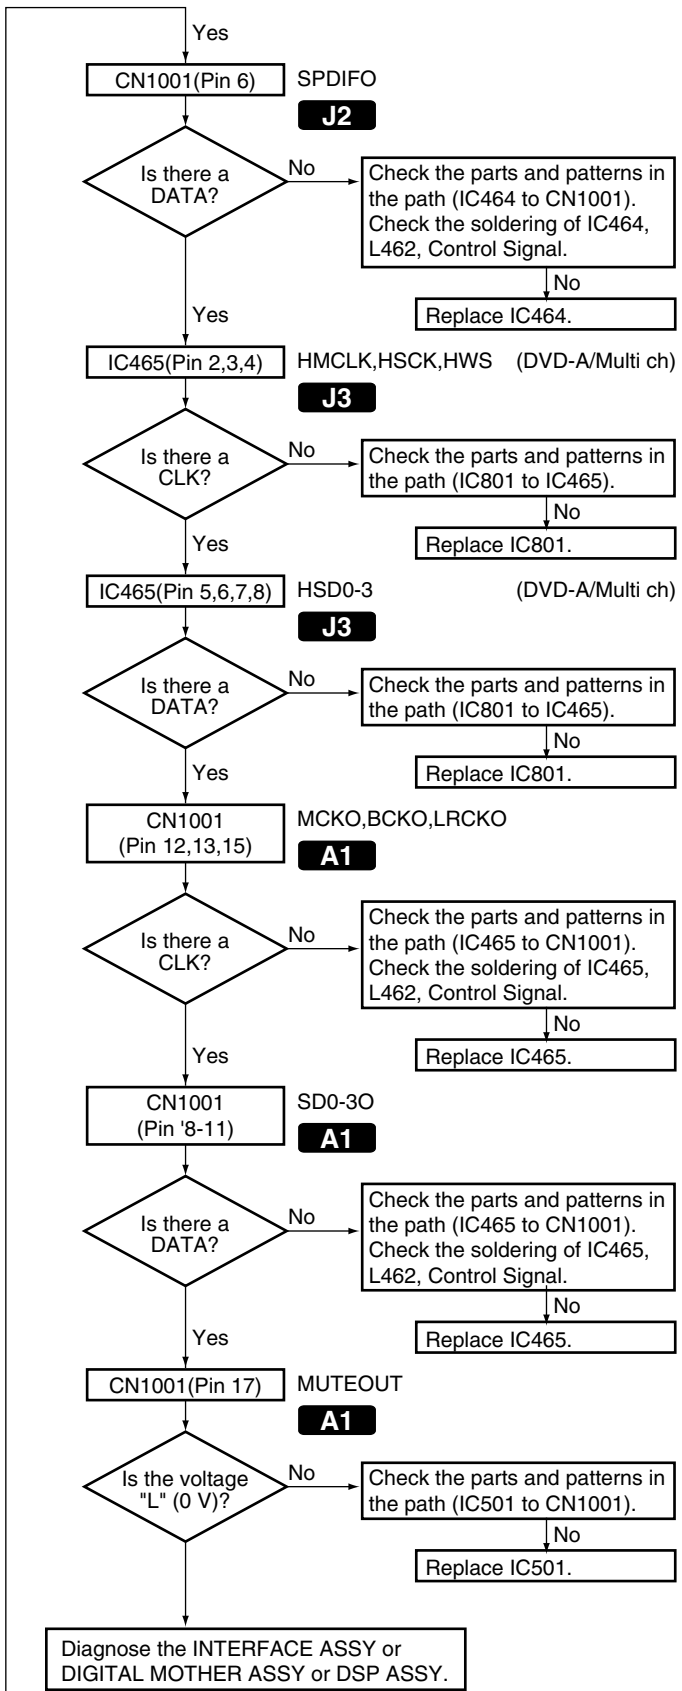


Video converter section


Step 4-1: Power supply

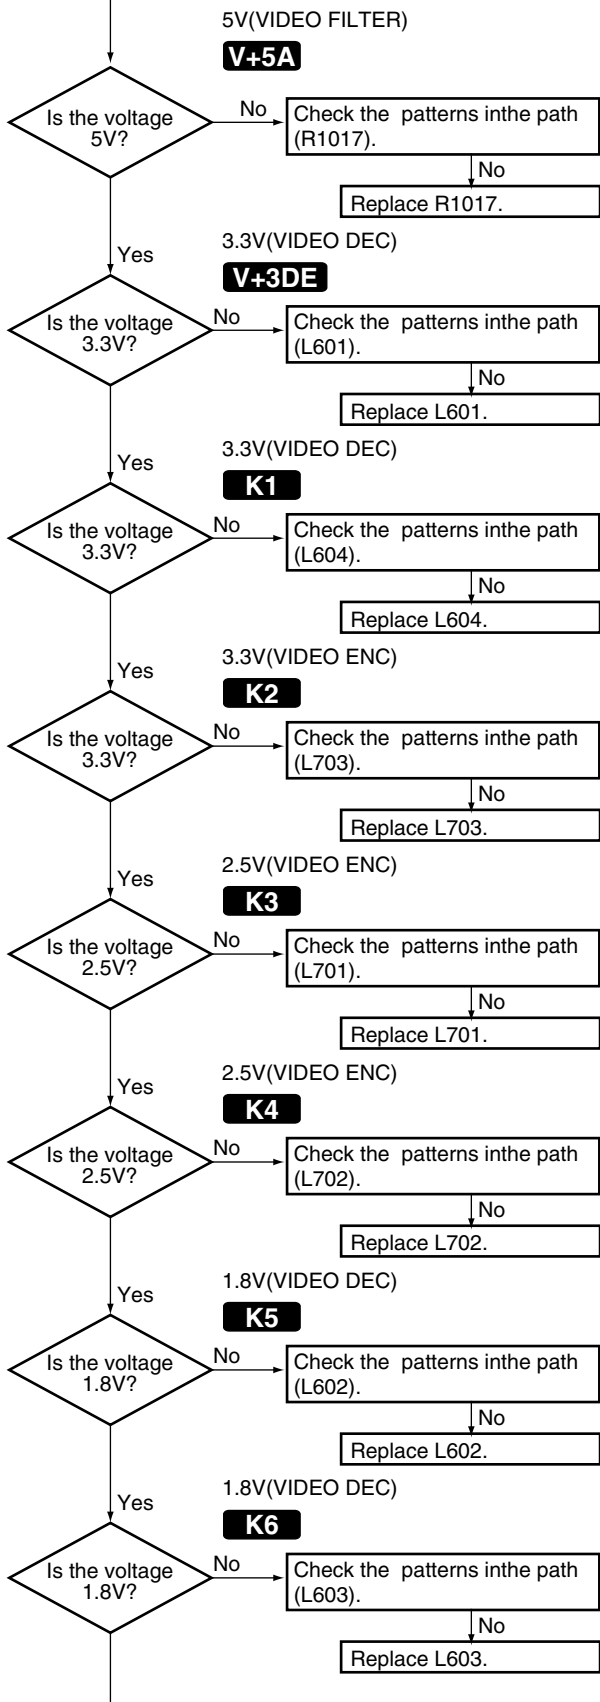


Step 4-2: VIDEO INPUT

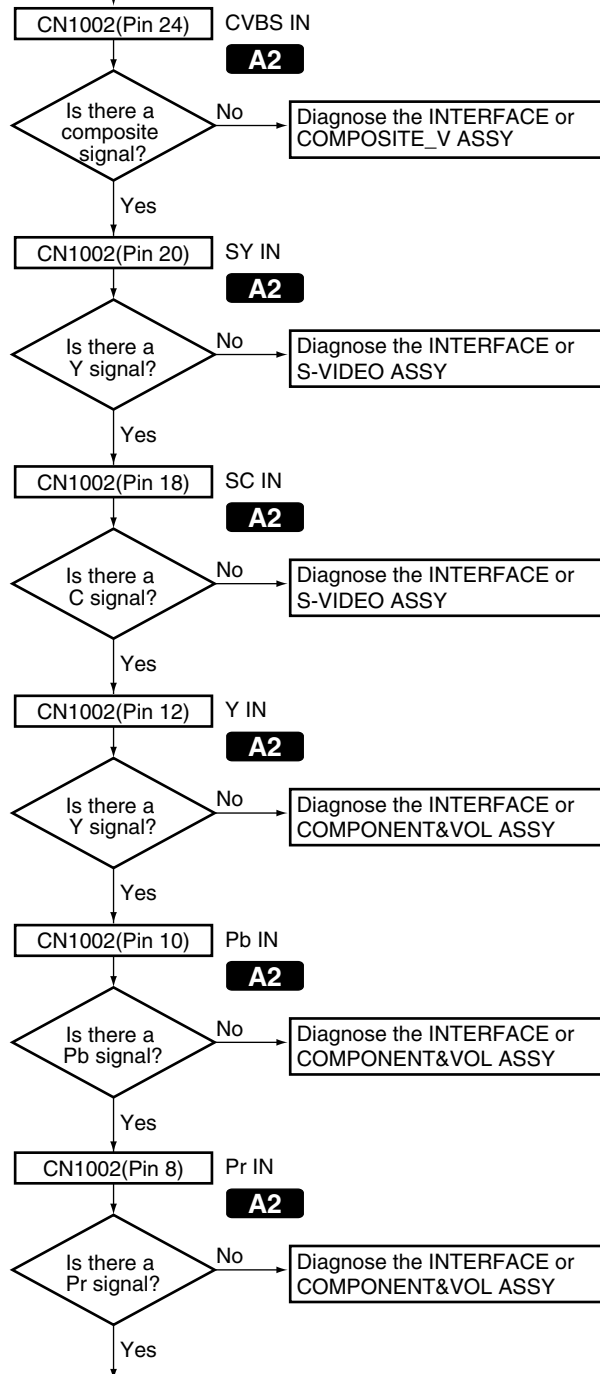


Step 4-3: Reset

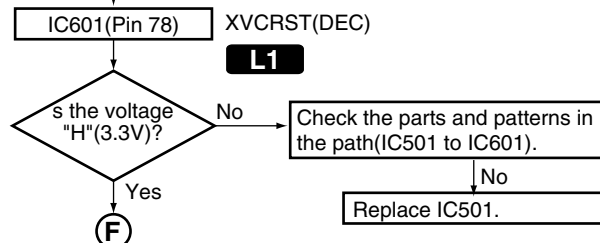

A


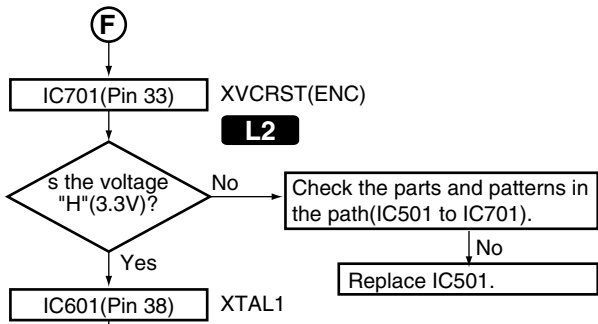


B

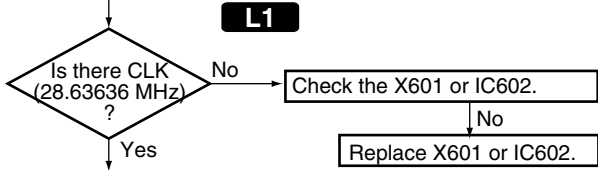




Step 4-4: I2C

C

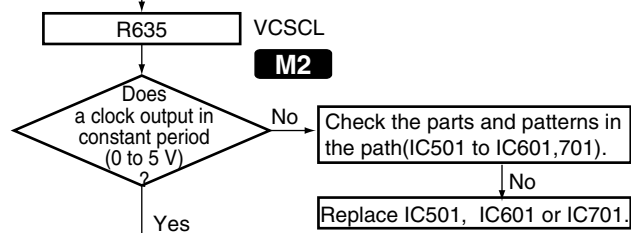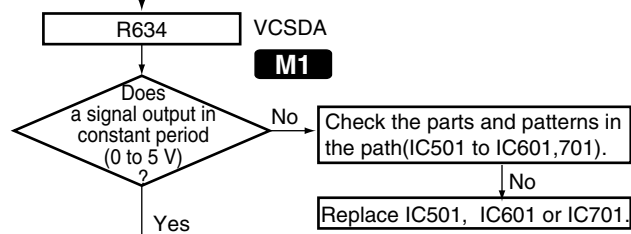






Step 4-5: VIDEO CLK,DATA

D

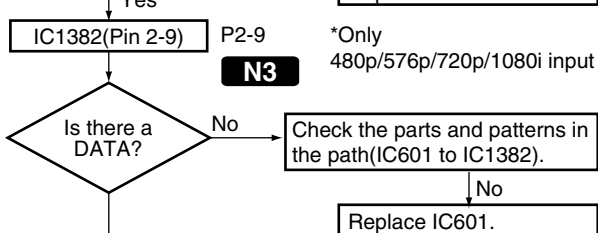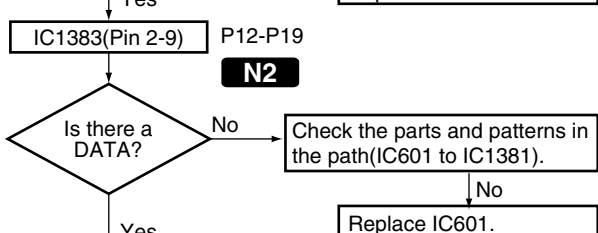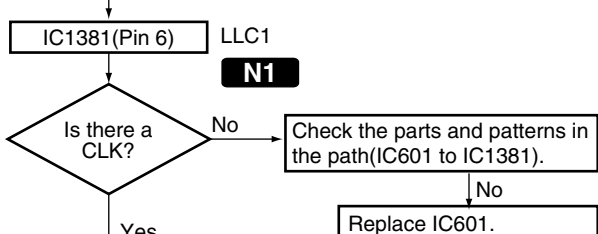


F

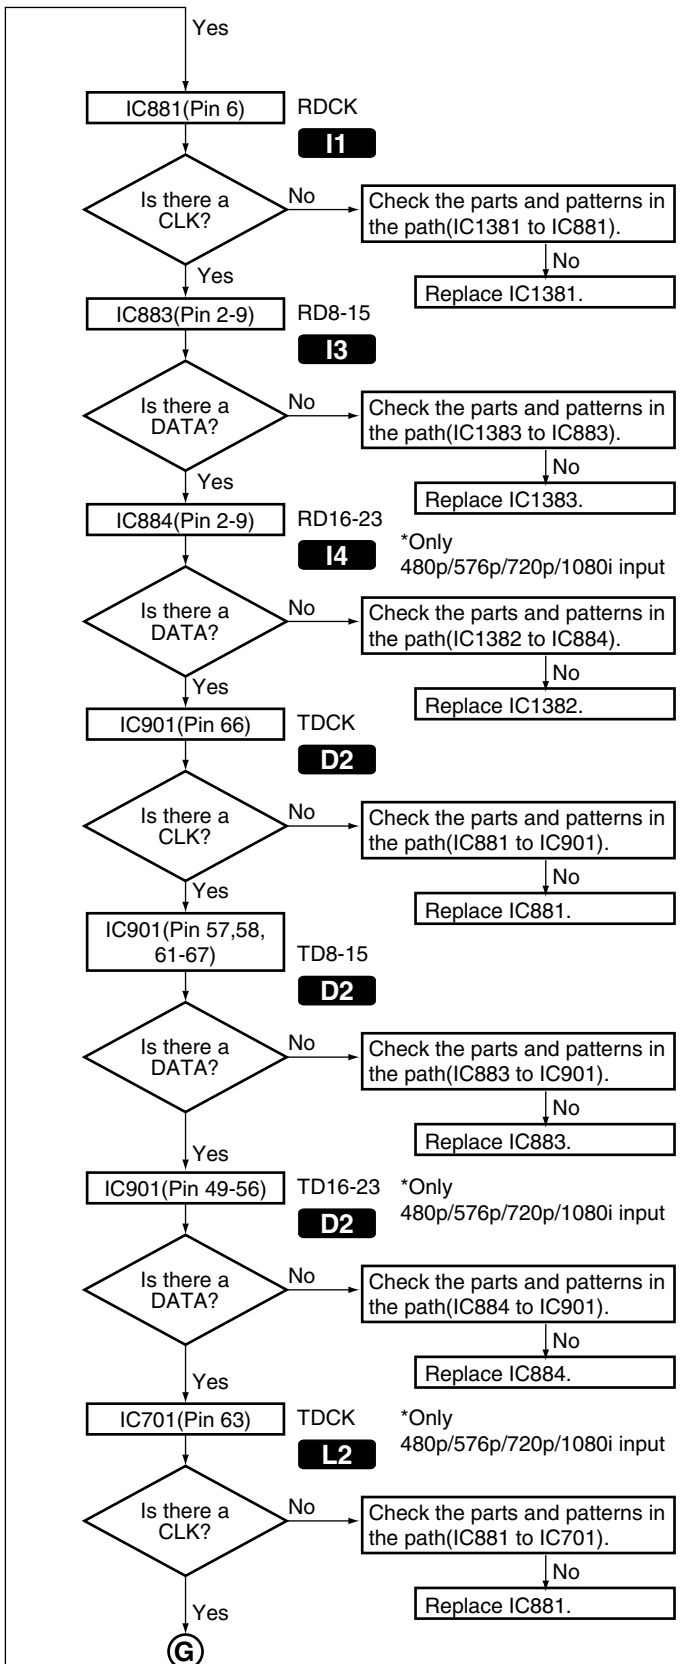


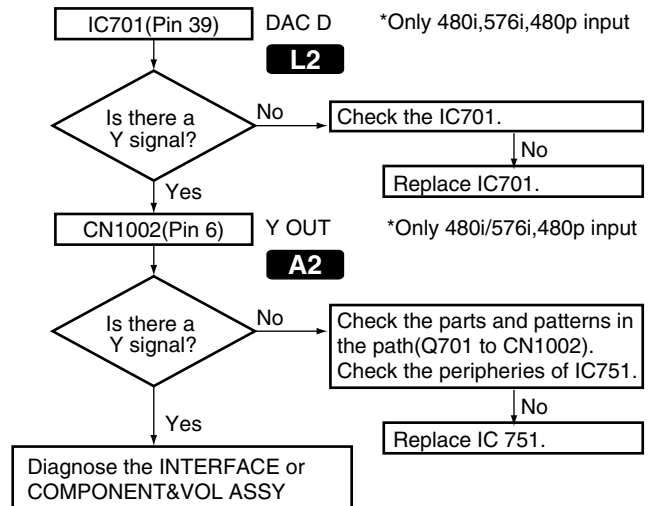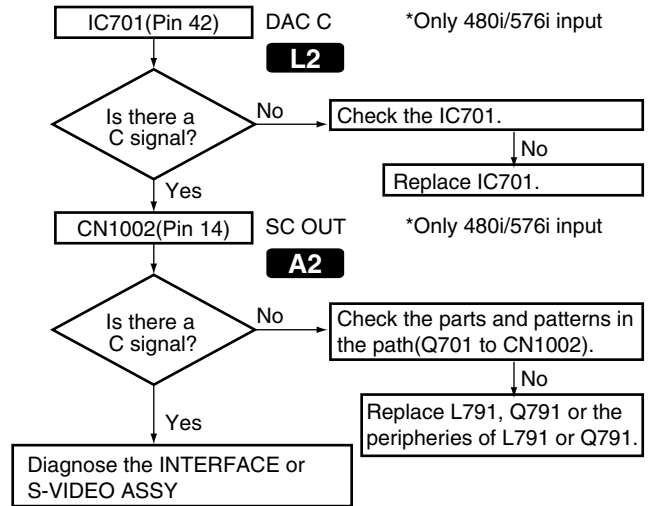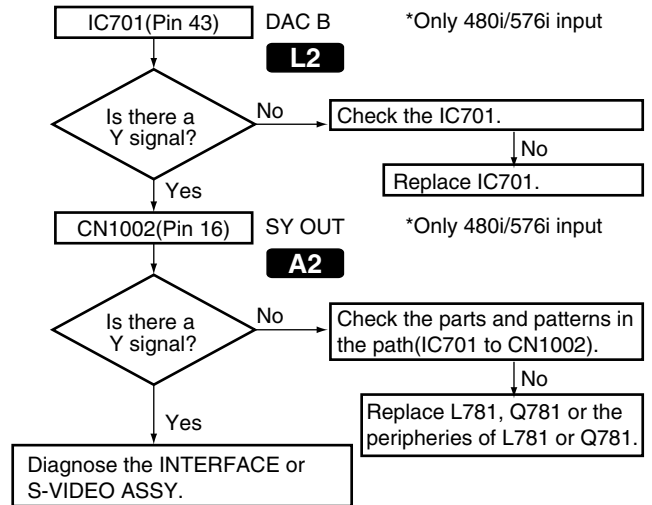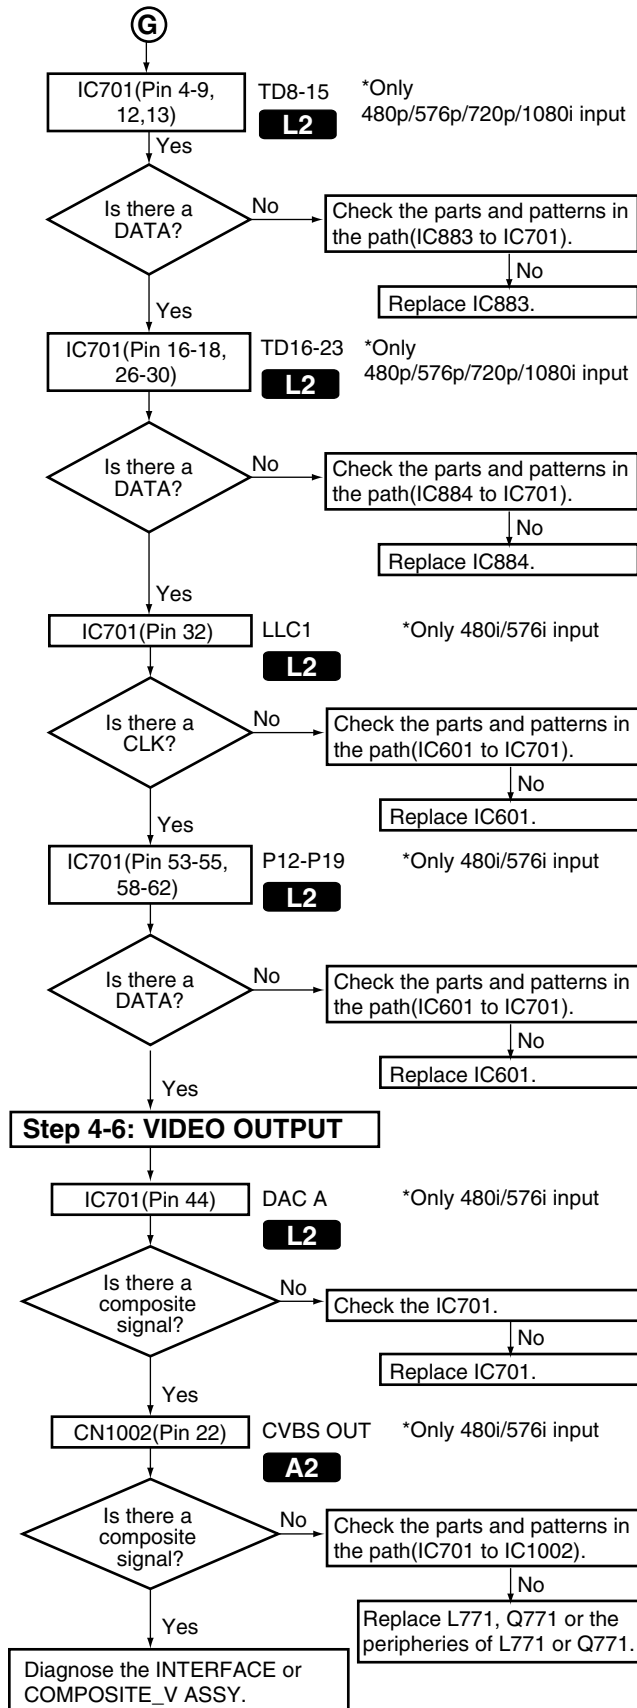

A

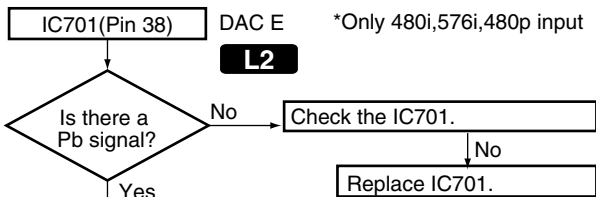


B

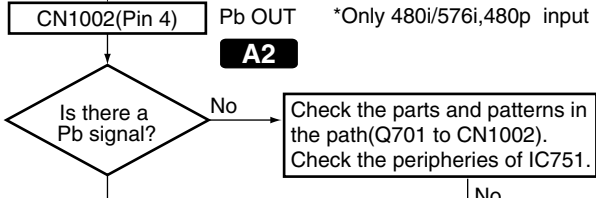


B

Diagnose the INTERFACE or COMPONENT&VOL ASSY

C

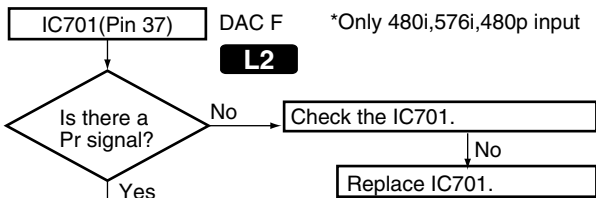

C

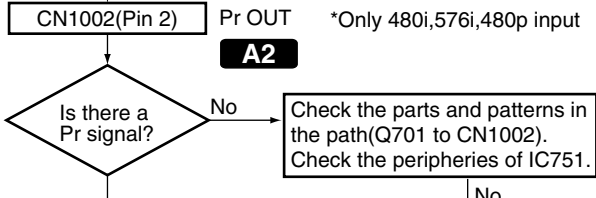


D


Diagnose the INTERFACE or COMPONENT&VOL ASSY

Scaler section


Step 5-1: Power supply


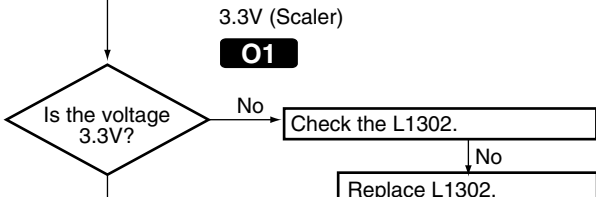


E

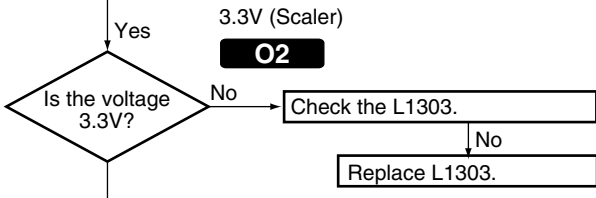

F

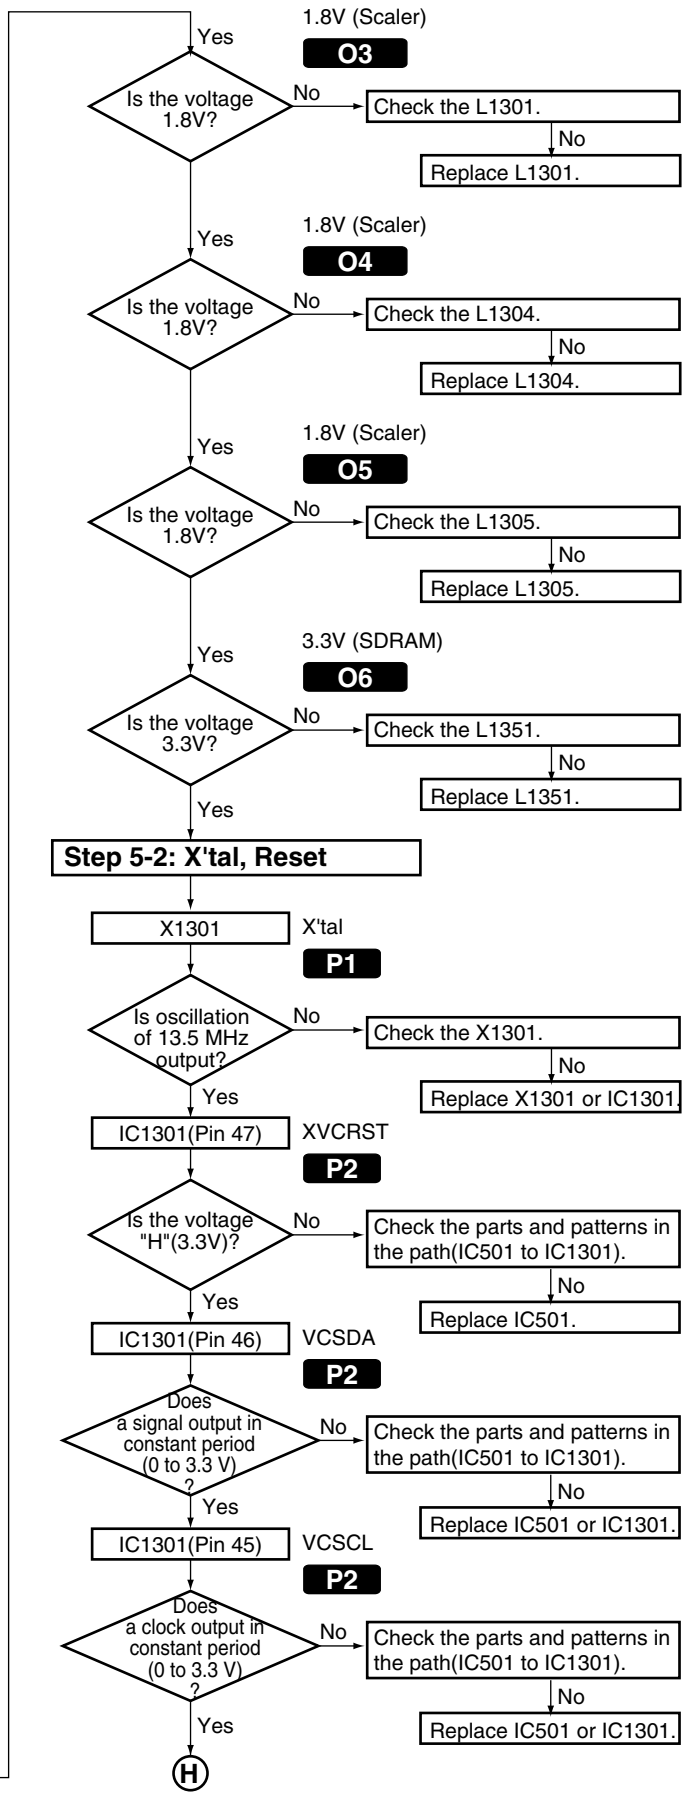


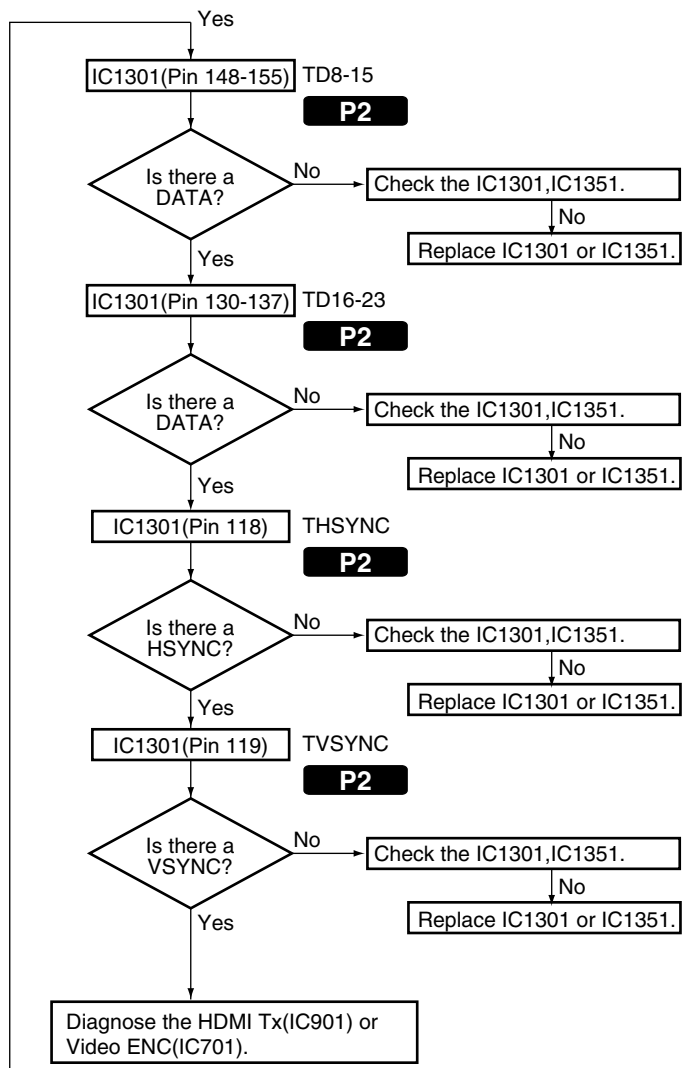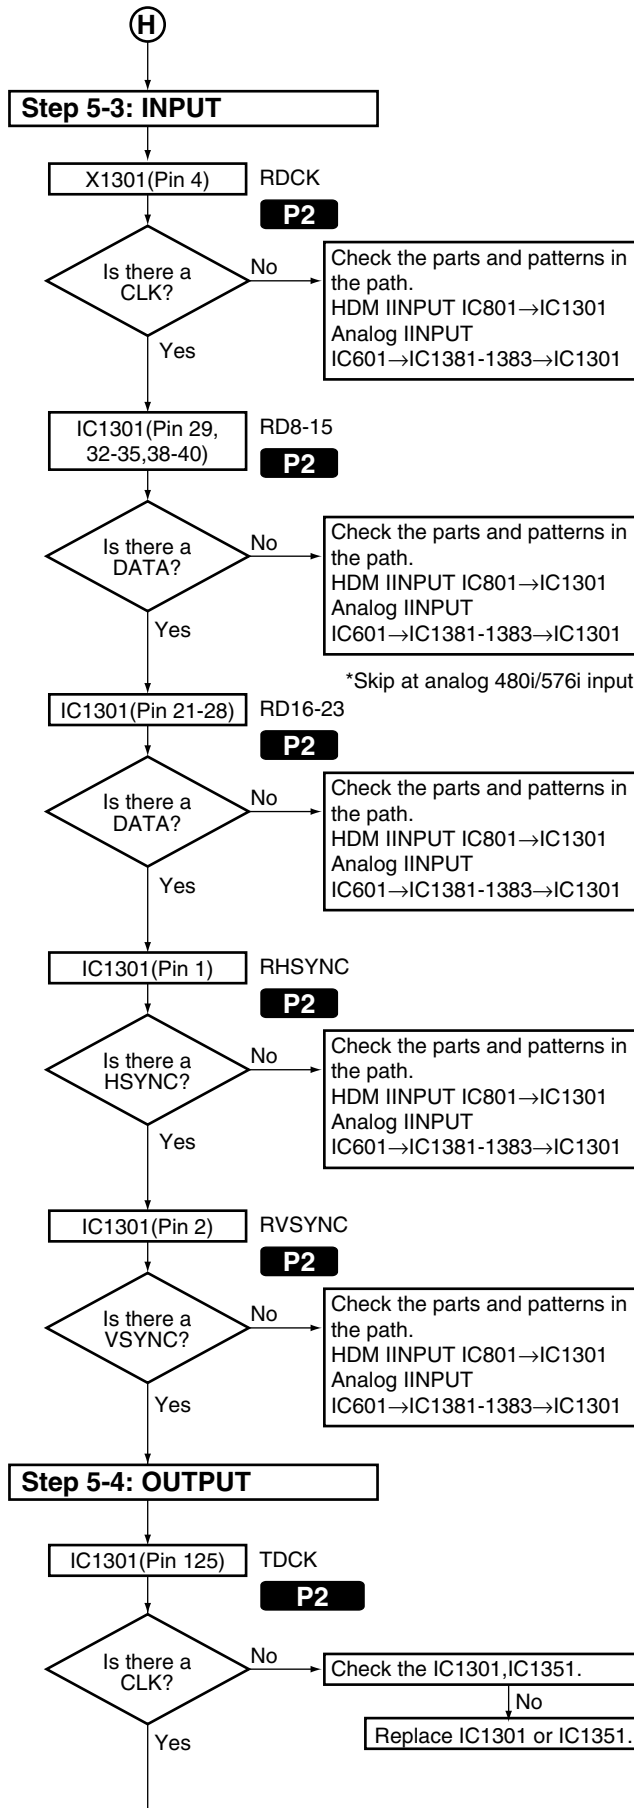


1394 Troubleshooting

- It is assumed that there is no loose connection or damage in the LCRs.
- There must not be an abnormality in pattern.
- The parts marked like **V+5** in the following chart are located in "HDMI & 1394 Assy Check Points".


Step 1: Connections

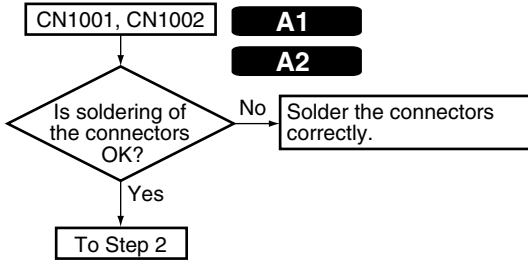


Step 3: Operation of the Master Clock

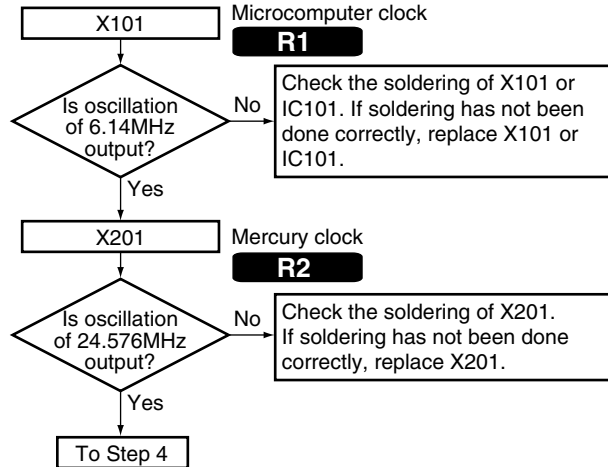



Step 2: Power supply

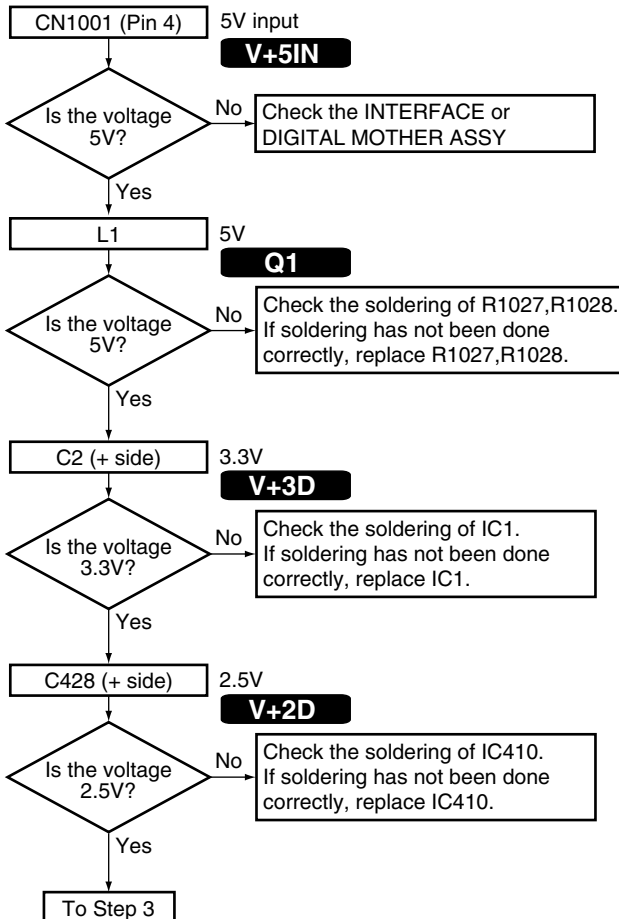

Step 4: Operation of the Master External I/F

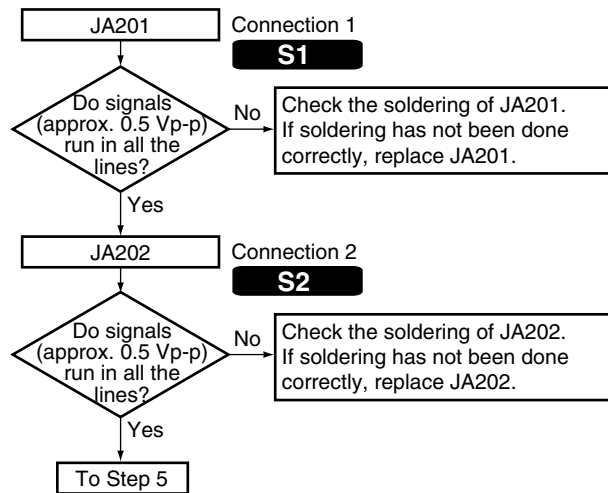

Step 5:

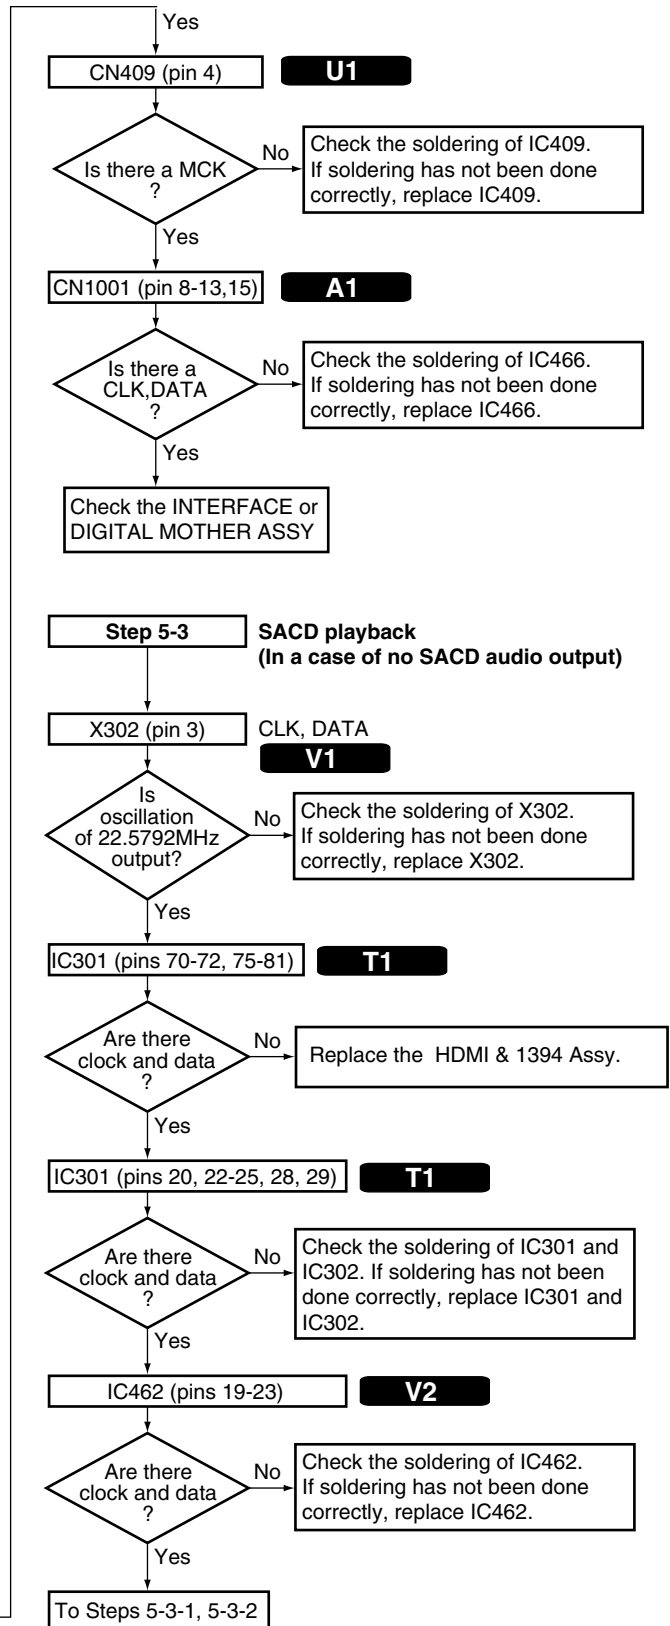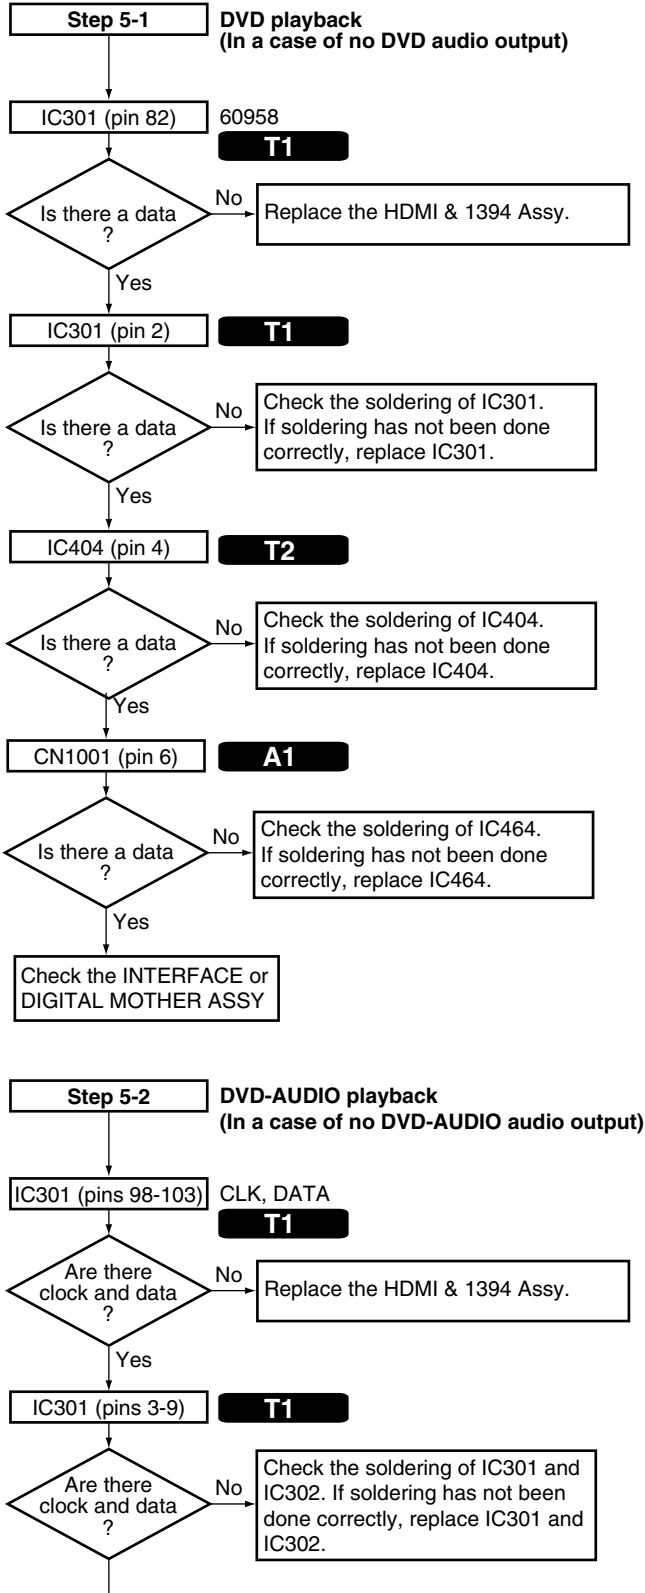

A

Step 5-3-1 Normal

IC467 (pins 2-7)

J6

Are there clock and data ?

No
Check the soldering of IC401. If soldering has not been done correctly, replace IC401.

Yes

CN1001 (pins 9-13,15)

A1

Are there clock and data ?

No
Check the soldering of IC467. If soldering has not been done correctly, replace IC467.

Yes

Check the INTERFACE or DIGITAL MOTHER ASSY

B

C

Step 5-3-2

SACD DIRECT
(Select PURE DIRECT, using the AUTO SURR/STREAM DIRECT key.)

CN1001 (pins 8-13,15)

A1

Are there clock and data ?

No
Check the soldering of IC405. If soldering has not been done correctly, replace IC405.

Yes

Check the INTERFACE or DIGITAL MOTHER ASSY

D

E


F

HDMI & 1394 Assy Check Points


AGF HDMI & 1394 ASSY

Commonness	HDMI	Video Converter	1394
------------	------	-----------------	------

SIDE A

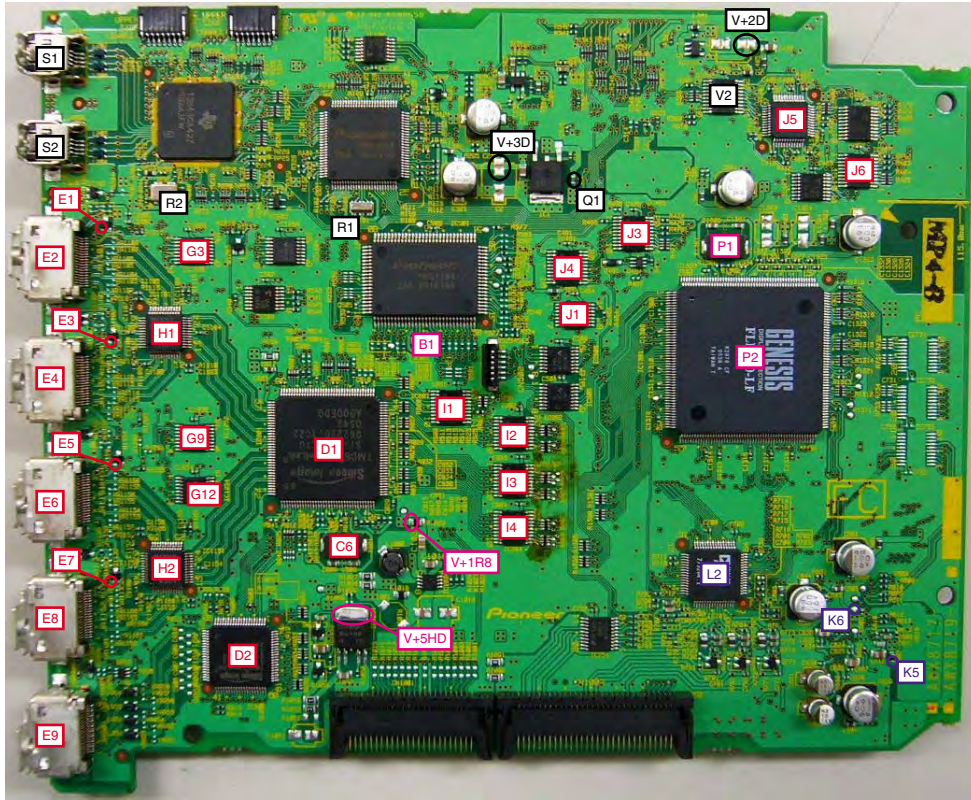


SIDE B

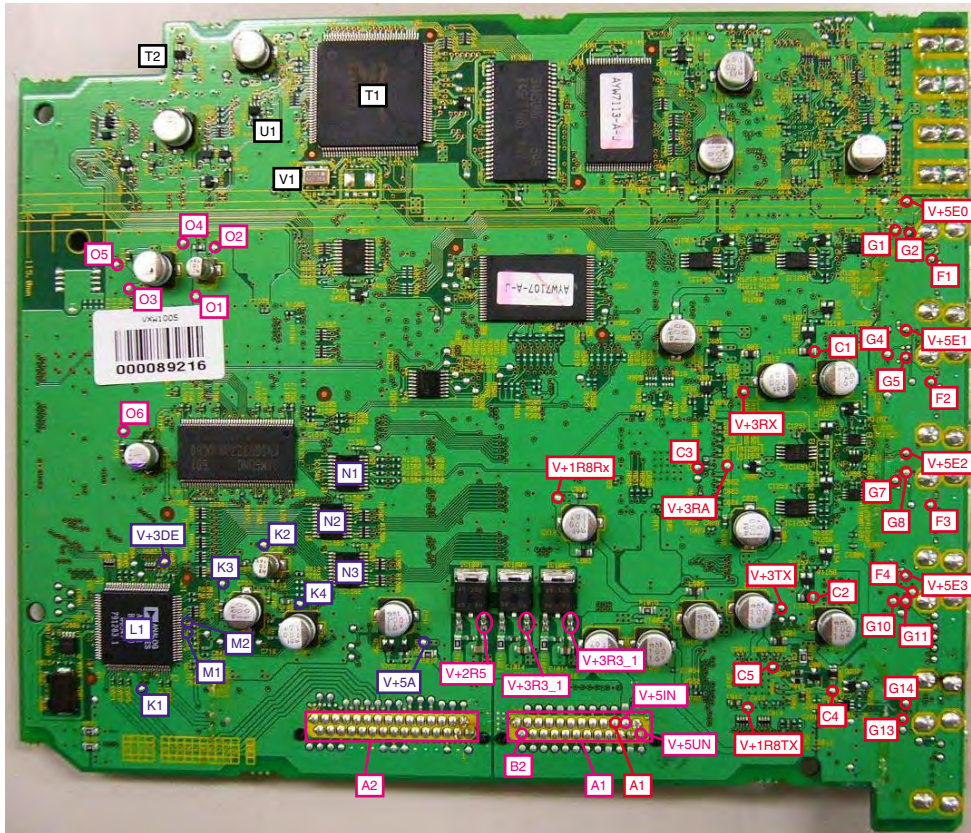


Note : The above photograph is VSX-84TXSi. HDMI/DVC block of VSX-82TXS is the same layout.

■ VSX-84TXSi HDMI & 1394 Assy Block Diagram


A

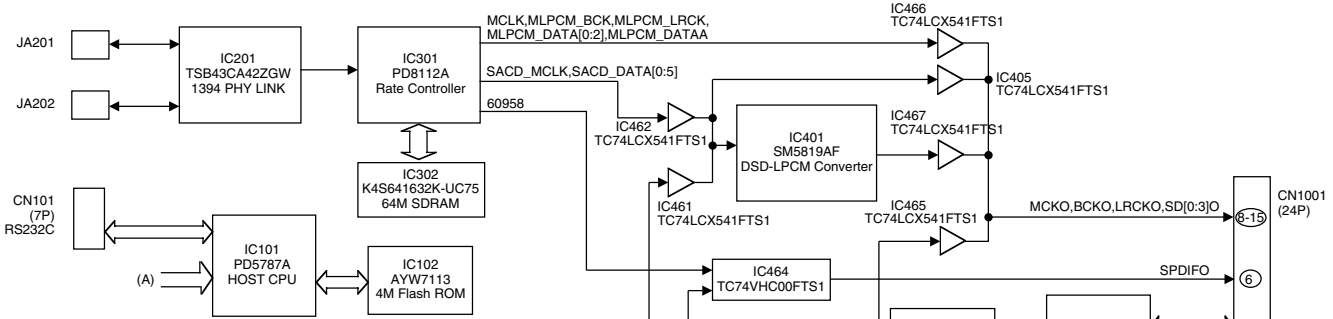


B

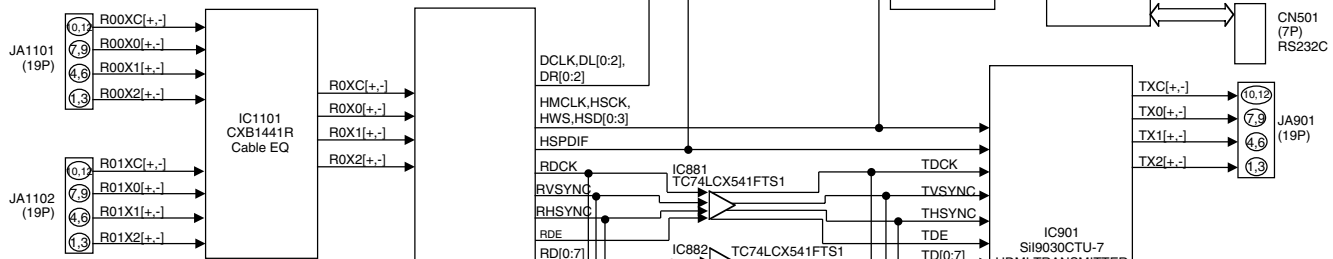

C

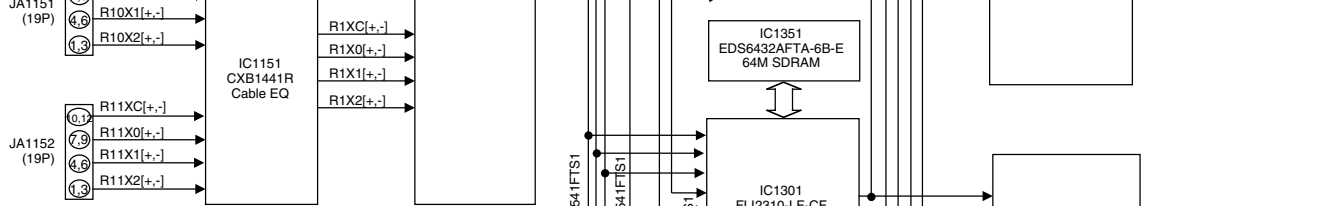


D

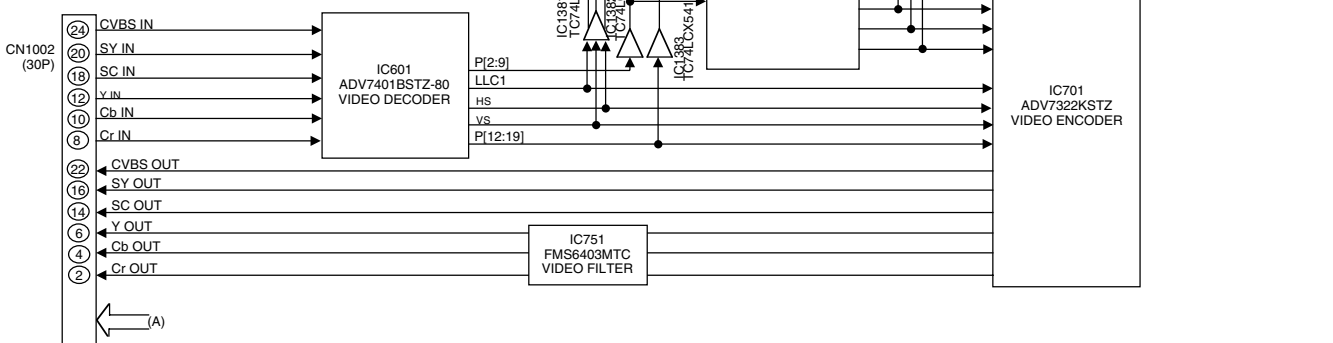

E

F

VSX-82TXS HDMI & DVC Assy Block Diagram

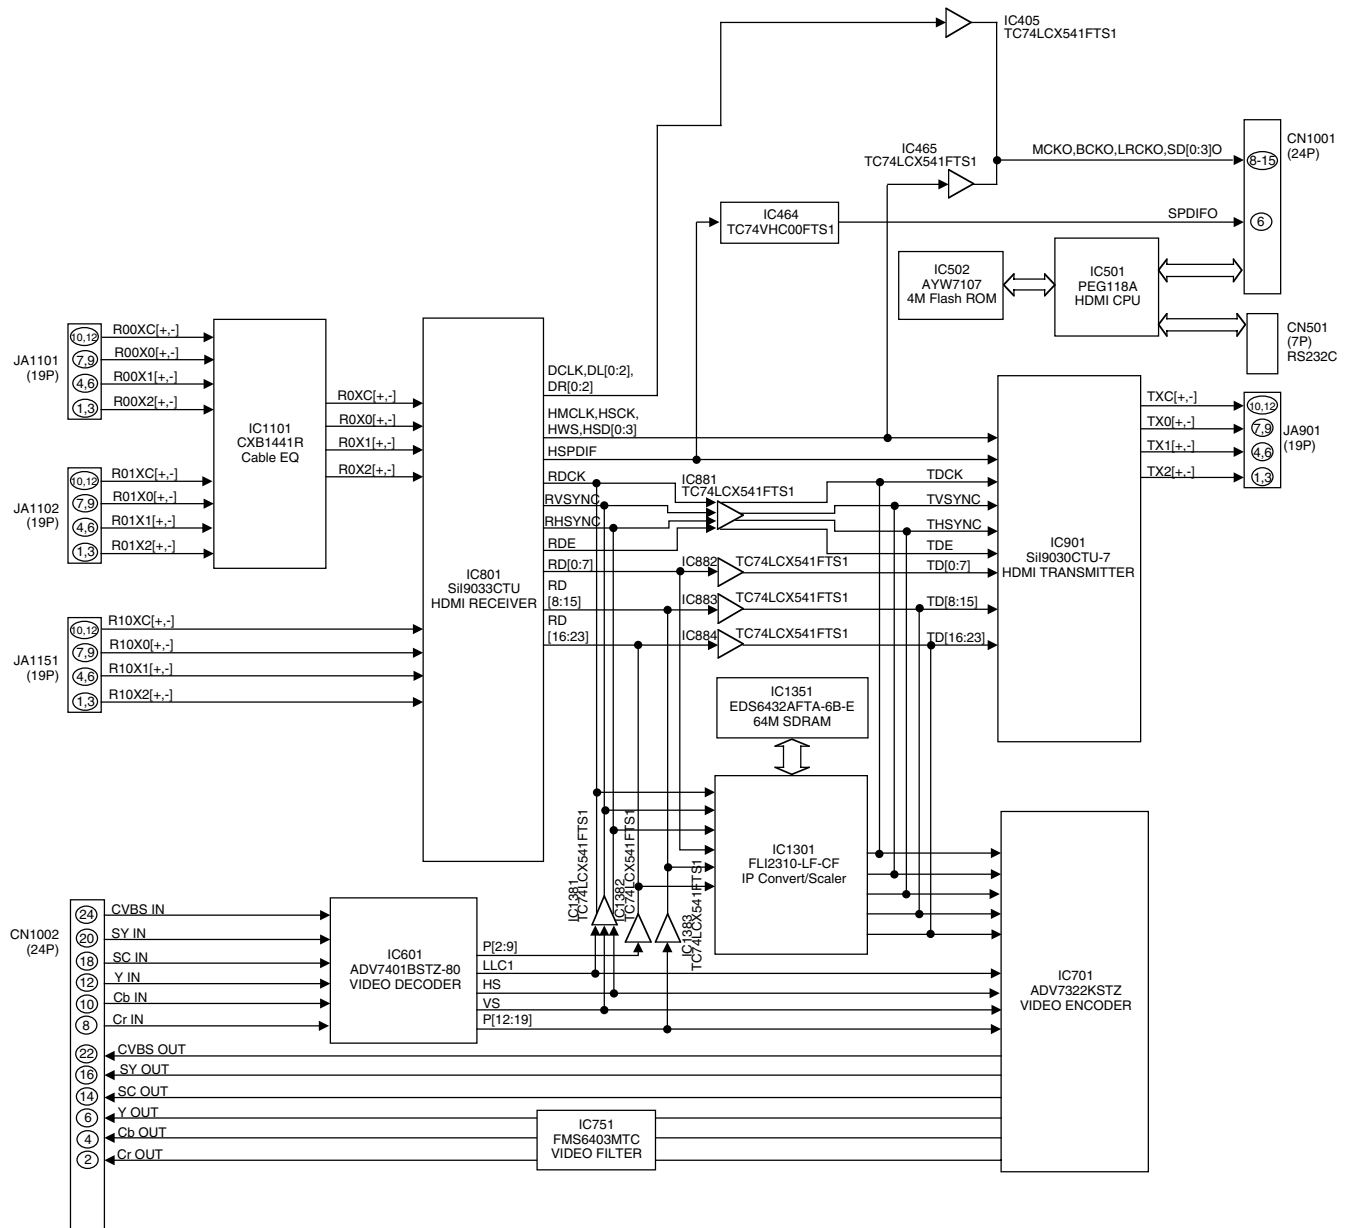

A
B
C
D
E
F

5. HOW TO UPDATE THE VARIOUS MICROCOMPUTERS

■ HDMI, MAIN and DSP microcomputer

[Purpose]

Refer to this section when updating of a Flash ROM is required by the service information, etc.

[Tools to be used]

- PC with a serial port
- RS-232C cable (cf. following note)
- Program for updating (ufu.exe)
- RS-232C I/F jig (GGF1348)
- Firmware ("mot" extension)
- 7-pin FFC (VDA1681)

Note;

Please use a RS-232C cable properly as follows.


For updating HDMI microcomputer --> straight cable (PC terminal-9pin male) [Connections A]

For updating MAIN microcomputer or DSP microcomputer --> cross cable (PC terminal-25pin female) [Connections B]

[Connections A] (VSX-82TXS)

For updating HDMI microcomputer


Connect as indicated in the figure below:

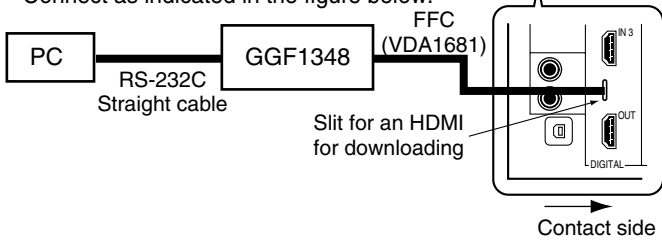

[Connections B]

For updating MAIN microcomputer or DSP microcomputer


Connect as indicated in the figure below:



[Connections A] (VSX-84TXSi)

For updating HDMI microcomputer

Connect as indicated in the figure below:

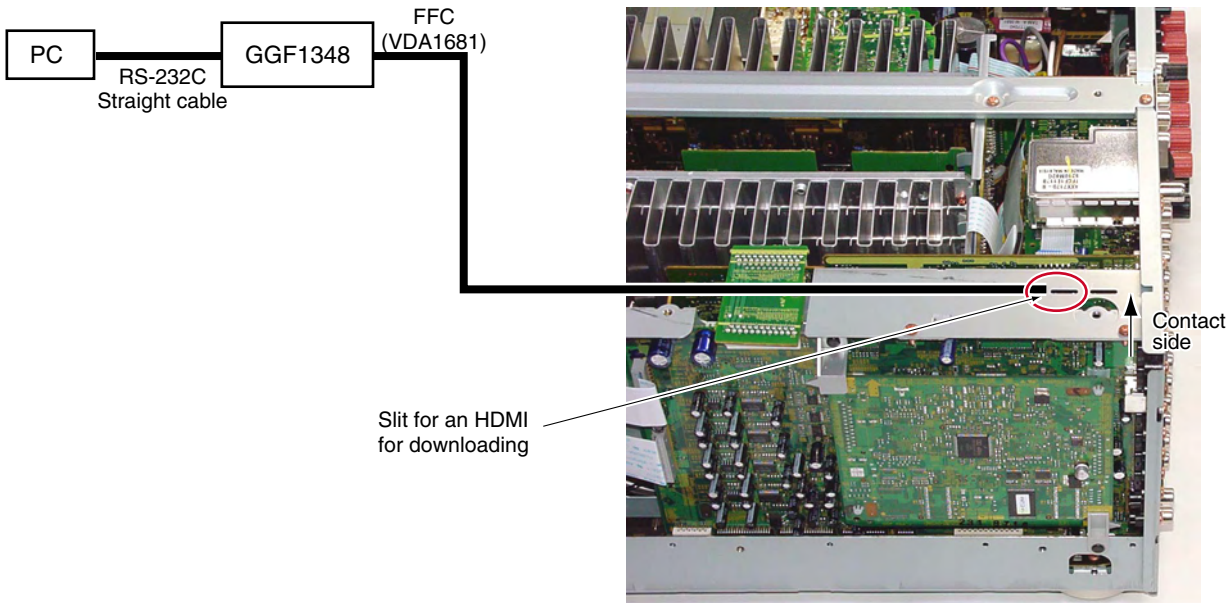


[Note]


Do NOT disconnect the AC power cords of this unit nor the PC.

[Procedures]

1. Turn off the power to this unit by setting the main volume level to "---dB."
2. Connect the 232C I/F jigs and the PC, as indicated in "Connections."
3. (HDMI microcomputer) :
Simultaneously press and hold the VSEL and ← keys for about 5 seconds.
(MAIN microcomputer) :
Simultaneously press and hold the VSEL and ↓ keys for about 5 seconds.
(DSP microcomputer) :
Simultaneously press and hold the VSEL and → keys for about 5 seconds.
4. The unit is turned on, and "HDMI DOWNLOAD", "MAIN DOWNLOAD" or "DSPM DOWNLOAD" is displayed.
5. Double-click on "ufu.exe".
6. Check that "Full" is selected in MODE SELECT.
7. Select the firm ware file with "mot" extension.
8. Select the communication speed.
 - Basic speed: 19200
 - Data transfer speed: 57600
9. Click on "START" button.
10. (HDMI microcomputer) :
"Completed" is displayed for about 1 minutes in the "ufu.exe" window.
(MAIN microcomputer), (DSP microcomputer) :
"Completed" is displayed for about 3 minutes in the "ufu.exe" window.
11. Disconnect then reconnect the AC power cord of the unit. If the unit is not reset, retry from Step 2.
12. Check the version.
Following the procedures described in "Version indication" in "7.1.1 TEST MODE," check that the version has been changed to a new one.

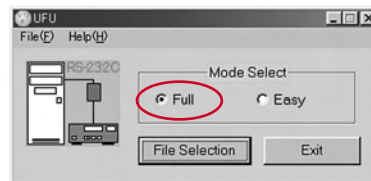

Check that "Full" is selected in MODE SELECT.

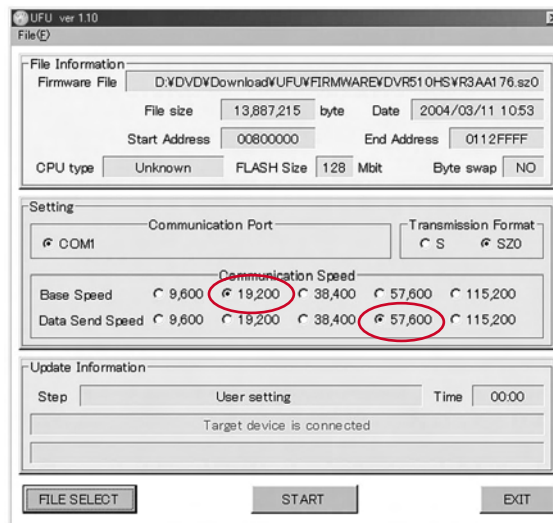

Select the communication speed.

- Basic speed: 19200
- Data transfer speed: 57600

● Pin Function

No.	Mark	Pin Name	I/O	Pin Function
1	P96/ANEX1/SOUT4	HD_DO	O	Main controller communication DATA OUT
2	P95/ANEX0/CLK4	HD_SCK	I	Main controller communication CLOCK IN
3	P94/DA1/TB4IN	VCRST	O	ADV7401/ADV7322/FLI2310 RESET (L:RESET)
4	P93/DA0/TB3IN	/1080P	O	TMD5 amplitude switch (L:1080p, H: excepting 1080p)
5	P92/TB2IN/SOUT3	EXDATA	O	PORT EXPANDER control DATA output
6	P91/TB1IN/SIN3	NC	O	OPEN
7	P90/TB0IN/CLK3	EXCLK	O	PORT EXPANDER control CLOCK output
8	BYTE	BYTE	-	GND
9	CNVss	CNVSS	-	GND
10	P87/XCIN	EXSTB	O	PORT EXPANDER control STB output
11	P86/XCOUT	EXOE	O	PORT EXPANDER control OE output
12	RESET	XRESET	I	Main controller communication RESET input (L: RESET)
13	XOUT	XOUT	O	XTAL
14	VSS	VSS	-	GND
15	XIN	XIN	I	XTAL
16	VCC	VCC	-	Power supply 3.3V
17	P85/NMI	NMI	I	Pull up with Vcc
18	P84/INT2	TXINT	I	SiI9030 interrupt
19	P83/INT1	RXINT	I	SiI9033 interrupt
20	P82/INT0	HD_REQI	I	Main controller communication REQ IN
21	P81/TA4IN/U	VSYNC	I	SiI9030 VSYNC input
22	P80/TA4OUT/U	RXRST	O	SiI9033 RESET (L: RESET)
23	P77/TA3IN	RXMUTE	I	SiI9033 MUTE IN
24	P76/TA3OUT	DSD/LPCM	O	AUDIO output DSD/LPCM switch (H:DSD)
25	P75/TA2IN/W	TXRST	O	SiI9030 RESET (L: RESET)
26	P74/TA2OUT/W	HD_REQO	O	Main controller communication REQ OUT
27	P73/CTS2/RTS2/TA1IN/V	VCINT(NC)	O	ADV7401 interrupt (not used)
28	P72/CLK2/TA1OUT/V	MUTE	O	AUDIO MUTE (H: MUTE)
29	P71/RxD2/SCL/TA0IN/TB5IN	VC_SCL	O	I2C SCL(ADV7401/ADV7322/FLI2310)
30	P70/TXD2/SDA/TA0OUT	VC_SDA	O	I2C SDA(ADV7401/ADV7322/FLI2310)
31	P67/TXD1/SDA1	USDA	O	I2C SDA(SiI9033/SiI9030)
32	P66/RxD1/SCL1	USCL	O	I2C SCL(SiI9033/SiI9030)
33	P65/CLK1	WP3	O	EDID4 E2PROM WP control (L:Normal operation, H: Writing)
34	P64/CTS1/RTS1/CTS0/CLKS1	HPDET3	O	Hot Plug Detect control (IN4)
35	P63/TXD0/SDA0	TXD0	O	RS232C TXD
36	P62/RxD0/SCL0	RXD0	I	RS232C RXD
37	P61/CLK0	XSDDDIRECT	O	DSD output LPCM Convert/ DIRECT output selection (L:SDDDIRECT output)
38	P60/CTS0/RTS0	RTS0	O	RS232C RTS
39	P57/RDY/CLKOUT	RDY	I	Pull up with Vcc
40	P56/ALE	ALE	O	OPEN
41	P55/HOLD	HOLD	I	Pull up with Vcc
42	P54/HLDA	HLDA	O	OPEN
43	P53/BCLK	BCLK	O	Pull up with Vcc
44	P52/RD	RD	O	FLASH ROM I/F RD
45	P51/WRH/BHE	BHE	O	OPEN
46	P50/WRL/WR	WR	O	FLASH ROM I/F WR
47	P47/CS3	PUSEL	O	DDC communication pull-up resistor switch (L: Normal operation)
48	P46/CS2	NC	O	OPEN

No.	Mark	Pin Name	I/O	Pin Function
49	P45/CS1	NC	O	OPEN
50	P44/CS0	CS0	O	FLASH ROM I/F CS
51	P43/A19	NC	O	OPEN
52	P42/A18	A18	O	FLASH ROM I/F
53	P41/A17	A17	O	FLASH ROM I/F
54	P40/A16	A16	O	FLASH ROM I/F
55	P37/A15	A15	O	FLASH ROM I/F
56	P36/A14	A14	O	FLASH ROM I/F
57	P35/A13	A13	O	FLASH ROM I/F
58	P34/A12	A12	O	FLASH ROM I/F
59	P33/A11	A11	O	FLASH ROM I/F
60	P32/A10	A10	O	FLASH ROM I/F
61	P31/A9	A9	O	FLASH ROM I/F
62	Vcc	VCC	–	Power supply 3.3V
63	P30/A8(/_/_D7)	A8	O	FLASH ROM I/F
64	Vss	GND	–	GND
65	P27/A7(/D7/D6)	A7	O	FLASH ROM I/F
66	P26/A6(/D6/D5)	A6	O	FLASH ROM I/F
67	P25/A5(/D5/D4)	A5	O	FLASH ROM I/F
68	P24/A4(/D4/D3)	A4	O	FLASH ROM I/F
69	P23/A3(/D3/D2)	A3	O	FLASH ROM I/F
70	P22/A2(/D2/D1)	A2	O	FLASH ROM I/F
71	P21/A1(/D1/D0)	A1	O	FLASH ROM I/F
72	P20/A0(/D0/_)	NC	O	OPEN
73	P17/D15/INT5	D15	I	FLASH ROM I/F
74	P16/D14/INT4	D14	I	FLASH ROM I/F
75	P15/D13/INT3	D13	I	FLASH ROM I/F
76	P14/D12	D12	I	FLASH ROM I/F
77	P13/D11	D11	I	FLASH ROM I/F
78	P12/D10	D10	I	FLASH ROM I/F
79	P11/D9	D9	I	FLASH ROM I/F
80	P10/D8	D8	I	FLASH ROM I/F
81	P07/D7	D7	I	FLASH ROM I/F
82	P06/D6	D6	I	FLASH ROM I/F
83	P05/D5	D5	I	FLASH ROM I/F
84	P04/D4	D4	I	FLASH ROM I/F
85	P03/D3	D3	I	FLASH ROM I/F
86	P02/D2	D2	I	FLASH ROM I/F
87	P01/D1	D1	I	FLASH ROM I/F
88	P00/D0	D0	I	FLASH ROM I/F
89	P107/AN7/KI3	ACLKEN	O	AUDIO DATA, SPDIF output control (H:ON)
90	P106/AN6/KI2	SCDT	I	Sil9033 SCDT input
91	P105/AN5/KI1	HPDET2	O	Hot Plug Detect control (IN3)
92	P104/AN4/KI0	HPDET0	O	Hot Plug Detect control (IN1)
93	P103/AN3	HPDET1	O	Hot Plug Detect control (IN2)
94	P102/AN2	WP0	O	EDID1 E2PROM WP control (L: Normal operation, H: Writing)
95	P101/AN1	WP1	O	EDID2 E2PROM WP control (L: Normal operation, H: Writing)
96	AVSS	AVSS	–	GND
97	P100/AN0	WP2	O	EDID3 E2PROM WP control (L:Normal operation, H: Writing)
98	VREF	VREF	–	Reference voltage 3.3V
99	AVcc	AVCC	–	Power supply 3.3V
100	P97/ADTRG/SIN4	HD_DI	I	Main controller communication (DATA IN)

■ **CD4094BPW (HDMI & 1394 and HDMI & DVC ASSY : IC505)**
PORT EXPANDER

No.	FUNCTION	NAME	I/O	DESCRIPTION
1	STB	STB	I	STB input
2	DATA	DATA	I	DATA input
3	CLOCK	CLOCK	I	CLOCK input
4	Q1	FSEL0	O	FMS6403 Filter Cut Off frequency switch 0
5	Q2	FSEL1	O	FMS6403 Filter Cut Off frequency switch 1
6	Q3	FILTPOW	O	FMS6403 power supply control (H : ON)
7	Q4	SW0SEL	O	CXB1441R (IC1101) input switch
8	VSS	VSS	O	GND
9	QS	QS	O	NC
10	QS'	QS'	O	QS' output
11	Q8	NC	O	NC
12	Q7	SW2	O	TC74LCX541FTS1(IC1381-1383) output control (H : HighZ, L : IN=OUT)
13	Q6	SW1	O	TC74LCX541FTS1(IC881-884) output control (H : HighZ, L : IN=OUT)
14	Q5	SW0CE	O	CXB1441R (IC1101) chip enable
15	OE	OE	I	OE input
16	VDD	VDD		3.3V

■ **CD4094BPW (HDMI & 1394 ASSY : IC506)**
PORT EXPANDER

No.	FUNCTION	NAME	I/O	DESCRIPTION
1	STB	STB	I	STB input
2	DATA	DATA	I	DATA input
3	CLOCK	CLOCK	I	CLOCK input
4	Q1	SW1SEL	O	CXB1441R (IC1151) input switch
5	Q2	SW1CE	O	CXB1441R (IC1151) chip enable
6	Q3	NC	O	NC
7	Q4	NC	O	NC
8	VSS	VSS	O	GND
9	QS	QS	O	NC
10	QS'	QS'	O	QS' output
11	Q8	1394/HDMI	O	AUDIO output 1394/HDMI switch (H : 1394, L : HDMI)
12	Q7	DSGAIN	O	SM5819 DSGAIN control
13	Q6	SEL4FS	O	SM5819 SEL4FS control
14	Q5	XINIT	O	SM5819 XINIT control
15	OE	OE	I	OE input
16	VDD	VDD		3.3V

■ Jigs list

A

Name	Jig No.	Remarks
24pin board to board extension cable	GGD1491	Diagnosis of HDMI & 1394 Assy (VSX-84TXSi)
30pin board to board extension cable	GGD1492	Diagnosis of HDMI & 1394 Assy (VSX-84TXSi)

■

Name	Jig No.	Remarks
24pin board to board extension cable	GGD1491 (x 2)	Diagnosis of HDMI & DVC Assy (VSX-82TXS)

B

■

C

■

D

■

E

■

F