


Service Manual

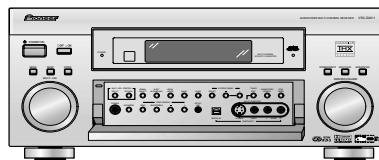

VSX-D2011-S

ORDER NO.
RRV2661

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D2011-S
VSX-D1011-S
VSX-D1011-K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	The voltage can be converted by the following method.
VSX-D2011-S	HYXJI	AC220-230V	AC240V, *
VSX-D1011-S	HYXJI	AC220-230V	AC240V, *
VSX-D1011-K	HYXJI	AC220-230V	AC240V, *

*:Alter the wiring of the power-supply block at the primary winding of Power transformer referring to the Line Voltage Selection described in Service Manual.



For details, refer to "Important symbols for good services".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2002

T-ZZK AUG. 2002 printed in Japan

SAFTY INFORMATION



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

A WARNING

B This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

C NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

D REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

C Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


E (FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

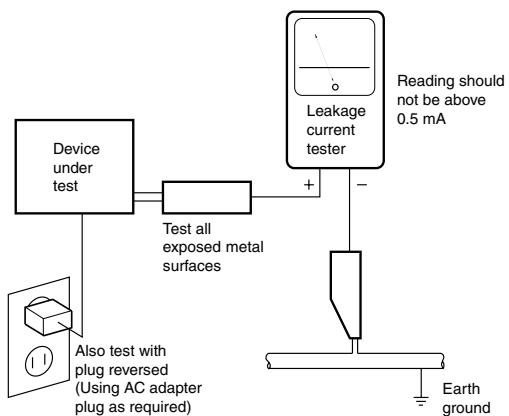

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important symbols for good services]

In this manual, the symbols shown below indicate that adjustments, settings or cleaning should be made securely. When you find the procedures bearing any of the symbols, be sure to fulfill them:

1. Product safety

You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

2. Adjustments

To keep the original performances of the product, optimum adjustments or specification confirmation is indispensable. In accordance with the procedures or instructions described in this manual, adjustments should be performed.

3. Cleaning

For optical pickups, tape-deck heads, lenses and mirrors used in projection monitors, and other parts requiring cleaning, proper cleaning should be performed to restore their performances.

4. Shipping mode and shipping screws

To protect the product from damages or failures that may be caused during transit, the shipping mode should be set or the shipping screws should be installed before shipping out in accordance with this manual, if necessary.

5. Lubricants, glues, and replacement parts

Appropriately applying grease or glue can maintain the product performances. But improper lubrication or applying glue may lead to failures or troubles in the product. By following the instructions in this manual, be sure to apply the prescribed grease or glue to proper portions by the appropriate amount. For replacement parts or tools, the prescribed ones should be used.

A

B

C

D

E

F

CONTENTS

A	SAFTY INFORMATION	2
	1. SPECIFICATIONS	5
	2. EXPLODED VIEWS AND PARTS LIST	6
	2.1 PACKING	6
	2.2 EXTERIOR SECTION	8
	2.3 REAR PANEL SECTION	10
	2.4 HEAT SINK SECTION	12
	2.5 FRONT PANEL SECTION	14
	3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	16
	3.1 AUDIO BLOCK DIAGRAM	16
	3.2 DSP BLOCK DIAGRAM	18
	3.3 VIDEO BLOCK DIAGRAM	20
B	3.4 POWER AMP BLOCK DIAGRAM	21
	3.5 OVERALL WIRING DIAGRAM	22
	3.6 FM/AM TUNER MODULE	24
	3.7 7.1CH I/O, V-AUDIO IN, FRONT IN and OPTICAL IN ASSYS	26
	3.8 INPUT CONNECT and COAXIAL IN ASSYS	28
	3.9 VIDEO ASSY	30
C	3.10 COMPONENT and MECHA SW ASSYS	32
	3.11 MAIN CONTROL ASSY (1/3)	34
	3.12 MAIN CONTROL ASSY (2/3)	36
	3.13 MAIN CONTROL ASSY (3/3)	38
	3.14 MIC & F.OPT IN, MIC AMP and DSP CONNECTION ASSYS	40
	3.15 POWER AMP IN, FAN DRIVE and FAN CONNECTION ASSYS	42
	3.16 DSP ASSY (1/2)	44
	3.17 DSP ASSY (2/2)	46
	3.18 DISPLAY ASSY	48
D	3.19 VOLUME, MULTI JOG and HEADPHONE ASSYS	50
	3.20 REGULATOR ASSY	52
	3.21 POWER AMP-L ASSY	54
	3.22 POWER AMP-R and POWER AMP-C ASSYS	56
	3.23 SP/PS, DIODE, TRANS 2-1 and VH TR ASSYS	58
	3.24 TRANS 2-2, TRANS 1 and PRIMARY ASSYS	60
	4. PCB CONNECTION DIAGRAM	62
	4.1 FM/AM TUNER MODULE	63
	4.2 7.1CH I/O ASSY	64
E	4.3 V-AUDIO IN ASSY	65
	4.4 FRONT IN, OPTICAL IN and INPUT CONNECT ASSYS	66
	4.5 COAXIAL IN ASSY	68
	4.6 VIDEO ASSY	69
	4.7 MAIN CONTROL ASSY	70
	4.8 MIC & F. OPT IN, MIC AMP and DSP CONNECTION ASSYS	74
	4.9 POWER AMP IN ASSY	76
	4.10 FAN DRIVE and FAN CONNECTION ASSYS	77
	4.11 DSP ASSY	78
	4.12 MECHA SW, DISPLAY, VOLUME, MULTI JOG and HEADPHONE ASSYS	80
	4.13 REGULATOR and COMPONENT ASSYS	84
	4.14 POWER AMP L and POWER AMP C ASSYS	88
	4.15 POWER AMP R ASSY	92
	4.16 SP/PS ASSY	96
F	4.17 DIODE, TRANS 2-1 and VH TR ASSYS	98
	4.18 TRANS 2-1, TRANS 1 and PRIMARY ASSYS	100
	5. PCB PARTS LIST	102
	6. ADJUSTMENT	113
	7. GENERAL INFORMATION	114
	7.1 DIAGNOSIS	114
	7.1.1 PROTECTION CIRCUIT CONTROL SPECIFICATION	114
	7.1.2 DIAGNOSTICS OF AMPLIFIER SECTION	116
	7.1.3 TROUBLE SHOOTING	117
	7.1.4 DISASSEMBLY	122
	7.2 PARTS	125
	7.2.1 IC	125
	7.2.2 DISPLAY	139
	7.3 CLEANING	141
	8. PANEL FACILITIES	143

1. SPECIFICATIONS

Amplifier Section

Continuous Power Output (DIN)

FRONT	100 W + 100 W (DIN 1 kHz, THD 1 %, 8 Ω)
CENTER	100 W (DIN 1 kHz, THD 1 %, 8 Ω)
SURROUND	100 W + 100 W (DIN 1 kHz, THD 1 %, 8 Ω)
SURROUND BACK	100 W + 100 W (DIN 1 kHz, THD 1 %, 8 Ω)
Rated Power Output	100 W + 100 W (20 Hz - 20 kHz, 0.09 %, 8 Ω)

Input (Sensitivity/Impedance)

PHONO MM (VSX-D2011).....	4.7 mV/47 kΩ
VCR 1/DVR, VCR 2, DVD/LD, TV/SAT, VIDEO, CD, CD-R/TAPE 1, MD/TAPE 2	335 mV/47 kΩ

Frequency Response

PHONO MM (VSX-D2011).....	20 Hz to 20,000 Hz ± 0.3 dB
VCR 1/DVR, VCR 2, DVD/LD, TV/SAT, VIDEO, CD, CD-R/TAPE 1, MD/TAPE 2	5 Hz to 100,000 Hz ⁺⁰ ₋₃ dB

Output (Level/Impedance)

VCR 1/DVR REC, VCR 2 REC, CD-R/TAPE 1 REC, MD/TAPE 2 REC	335 mV/2.2 kΩ
---	---------------

Tone Control

BASS	± 6 dB (100 Hz)
TREBLE	± 6 dB (10 kHz)
LOUDNESS	+4/+2 dB (100 Hz/10 kHz) (at volume position -40dB)

Signal-to-Noise Ratio (IHF, short circuited, A network)

VCR 1/DVR, VCR 2, DVD/LD, TV/SAT, VIDEO, CD, CD-R/TAPE 1, MD/TAPE 2, MULTI CH IN	101 dB
---	--------

Signal-to-Noise Ratio

[DIN (Continuous rated power output/50 mW)]	
VCR 1/DVR, VCR 2, DVD/LD, TV/SAT, VIDEO, CD, CD-R/TAPE 1, MD/TAPE 2	92/65 dB

VIDEO Section (S jack)

Input (Sensitivity/Impedance)

VCR 1/DVR, VCR 2, VIDEO, DVD/LD, TV/SAT	
Luminance signal (Y)	1 Vp-p/75 Ω
Chrominance signal (C)	0.286 Vp-p/75 Ω

Output (Level/Impedance)

VCR 1/DVR, VCR 2, MONITOR OUT	
Luminance signal (Y)	1 Vp-p/75 Ω
Chrominance signal (C)	0.286 Vp-p/75 Ω

Frequency Response

VCR 1/DVR, VCR 2, VIDEO, DVD/LD, TV/SAT	
Luminance signal (Y)	5 Hz to 10 MHz ⁺⁰ ₋₃ dB

Signal-to-Noise Ratio

Luminance signal (Y)	65 dB
----------------------------	-------

Component Video Section (VSX-D2011)

Input (Sensitivity)

Y	1 Vp-p/75 Ω
P _B /P _R	0.7 V/75 Ω

Output (Level/Impedance)

Y	1 Vp-p/75 Ω
P _B /P _R	0.7 V/75 Ω

Frequency Response

Y	5 Hz to 40 MHz ⁺⁰ ₋₃ dB
P _B /P _R	5 Hz to 40 MHz ⁺⁰ ₋₃ dB

Lucasfilm and THX are trademarks or registered trademarks of Lucasfilm, Ltd. & TM. Surround EX is a jointly developed technology of THX and Dolby Laboratories, and is a trademark of Dolby Laboratories. All rights reserved. Used under authorization.

VIDEO Section (Composite)

Input (Sensitivity/Impedance)

VCR 1/DVR, VCR 2, VIDEO, DVD/LD, TV/SAT	1 Vp-p/75 Ω
--	-------------

Output (Level/Impedance)

VCR 1/DVR, VCR 2, MONITOR OUT, MONITOR OUT2	1 Vp-p/75 Ω
--	-------------

Frequency Response

VCR 1/DVR, VCR 2, TV/SAT, DVD/LD VIDEO→MONITOR OUT,	5 Hz to 10 MHz ⁺⁰ ₋₃ dB
Signal-to-Noise Ratio	65 dB

FM Tuner Section

Frequency Range

87.5 MHz to 108 MHz

Usable Sensitivity

Mono: 15.2 dBf, IHF (1.6 μV/75 Ω)

50 dB Quieting Sensitivity

Mono: 20.2 dBf

Stereo: 41.2 dBf

Sensitivity (DIN)

Mono: 1.1 μV (S/N 26 dB)

Stereo: 50 μV (S/N 46 dB)

Signal-to-Noise Ratio

Mono: 76 dB (at 85 dBf)

Stereo: 72 dB (at 85 dBf)

Signal-to-Noise Ratio (DIN)

Mono: 62 dB

Stereo: 58 dB

Distortion

Mono: 0.6 % (1 kHz)

Stereo: 0.6 % (1 kHz)

Alternate Channel Selectivity

70 dB (400 kHz)

Stereo Separation

40 dB (1 kHz)

Frequency Response

30 Hz to 15 kHz (± 1 dB)

Antenna Input

75 Ω unbalanced

AM Tuner Section

Frequency Range

531 kHz to 1,602 kHz

Sensitivity (IHF, Loop antenna)

350 μV/m

Selectivity

30 dB

Signal-to-Noise Ratio

50 dB

Antenna

Loop antenna

Furnished Parts

FM Wire Antenna

1

AM Loop Antenna

1

"AA" IEC LR6 batteries

4

Remote Control Unit

1

Microphone for Auto Surround Sound Setup

1

Microphone Stand for Auto Surround Sound Setup

1

Operating Instructions

1

NOTE:

Specifications and the design are subject to possible

modifications without notice, due to improvements.

Manufactured under license from Dolby Laboratories.


"Dolby", "Pro Logic", "Surround EX" and double-D symbol are trademarks of Dolby Laboratories

"DTS", "DTS-ES Extended Surround" and "Neo:6" are trademarks of Digital Theater Systems, Inc.


2. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to  mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

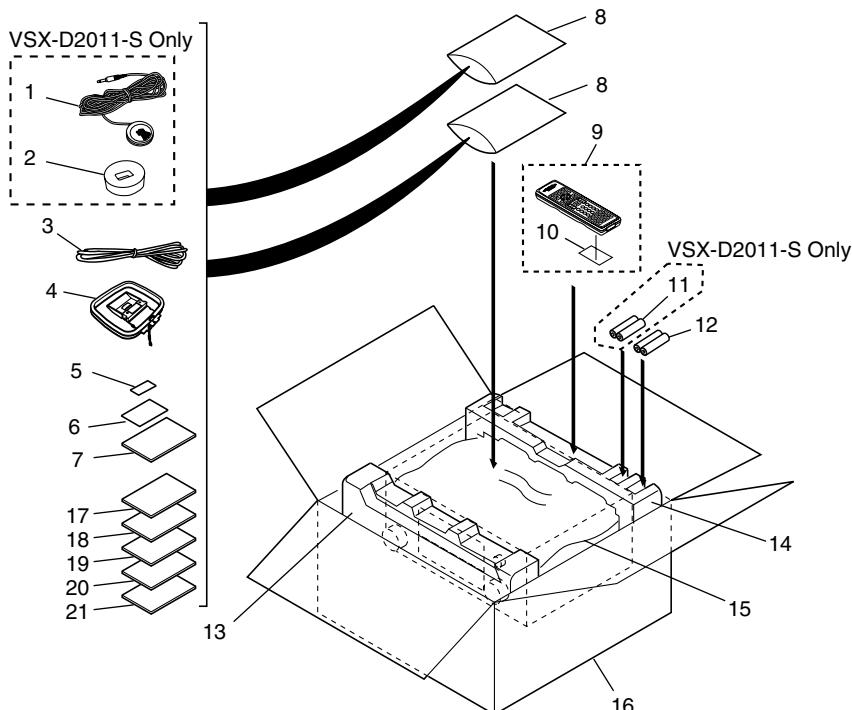

● Accessories

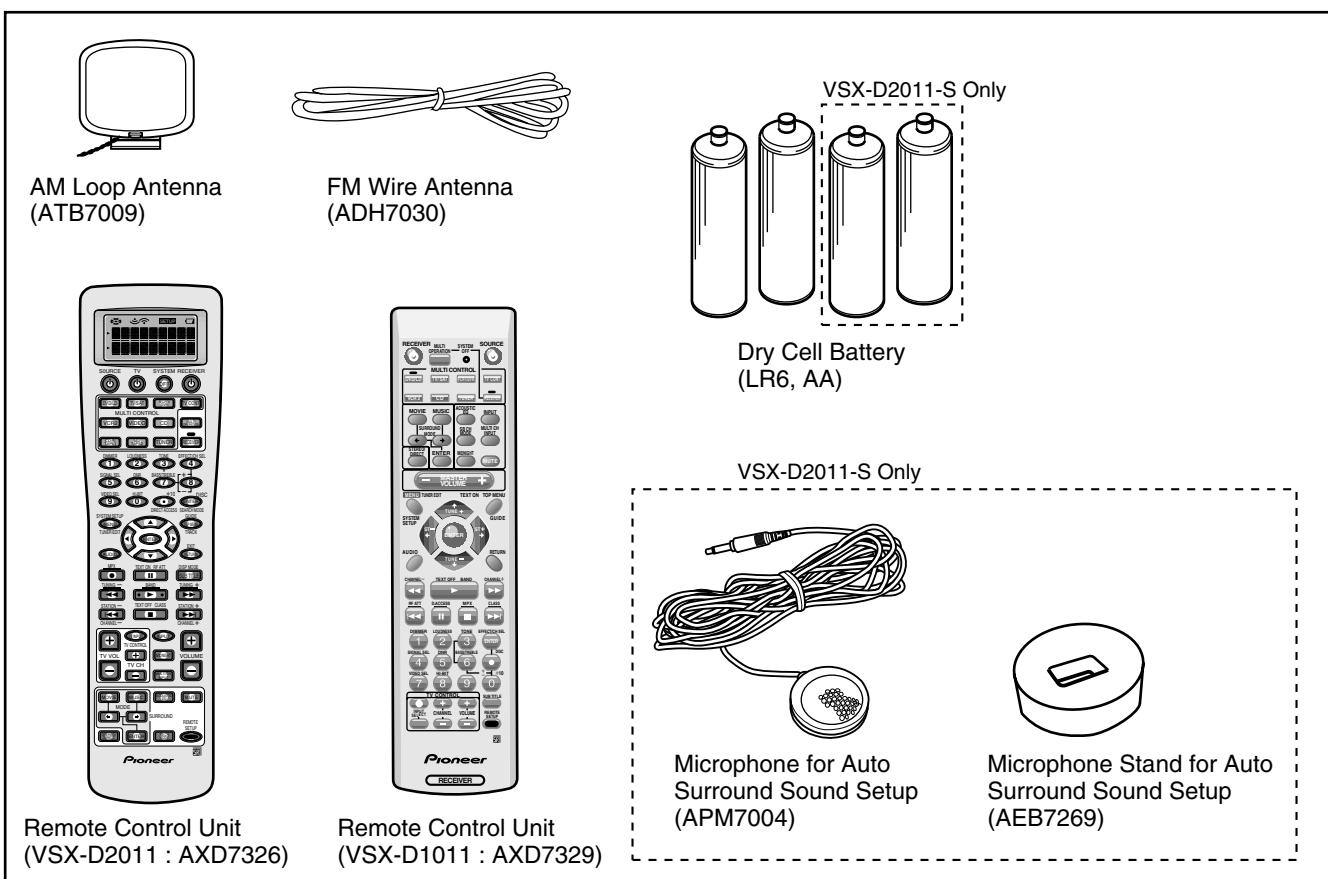

PACKING parts List

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	MIC Assy	See Contrast table (2)	NSP 12	Alkaline Dry Cell Battery (LR6, AA)	VEM1021
2	MIC Stand 45	See Contrast table (2)			
3	FM Wire Antenna	ADH7030			
4	AM Loop Antenna	ATB7009	13	Front Pad 45	AHA7374
5	Caution Sheet SPE	ARM7056	14	Rear Pad 45	AHA7375
			15	Packing Sheet	RHC1023
NSP 6	Warranty Card	ARY7022	16	Packing Case	See Contrast table (2)
7	Operating Instructions (English)	See Contrast table (2)	17	Operating Instructions (French)	See Contrast table (2)
NSP 8	Polyethylene Bag (0.03*230*340)	Z21-038	18	Operating Instructions (German)	See Contrast table (2)
9	Remote Control Unit	See Contrast table (2)	19	Operating Instructions (Italian)	See Contrast table (2)
10	Battery Cover	See Contrast table (2)	20	Operating Instructions (Spanish)	See Contrast table (2)
NSP 11	Alkaline Dry Cell Battery (LR6, AA)	See Contrast table (2)	21	Operating Instructions (Dutch)	See Contrast table (2)

(2) CONTRAST TABLE

VSX-D2011-S/HYXJI, VSX-D1011-S/HYXJI and VSX-D1011-K/HYXJI are constructed the same except for the following:

Mark	NO	Symbol and Description	VSX-D2011-S/ HYXJI	VSX-D1011-S/ HYXJI	VSX-D1011-K/ HYXJI
NSP	1	MIC Assy	APM7004	Not used	Not used
	2	MIC Stand 45	AEB7269	Not used	Not used
	7	Operating Instructions (English)	ARB7263	ARB7264	ARB7264
	9	Remote Control Unit	AXD7326	AXD7329	AXD7329
	10	Battery Cover	AZN7896	AZN7424	AZN7424
	11	Alkaline Dry Cell Battery (LR6, AA)	VEM1021	Not used	Not used
	16	Packing Case	AHD8079	AHD8081	AHD8080
	17	Operating Instructions (French)	ARC7388	ARC7395	ARC7395
	18	Operating Instructions (German)	ARC7389	ARC7396	ARC7396
	19	Operating Instructions (Italian)	ARC7390	ARC7397	ARC7397
	20	Operating Instructions (Spanish)	ARC7391	ARC7398	ARC7398
	21	Operating Instructions (Dutch)	ARC7392	ARC7399	ARC7399

2.2 EXTERIOR SECTION

A


B

C

D

E

F

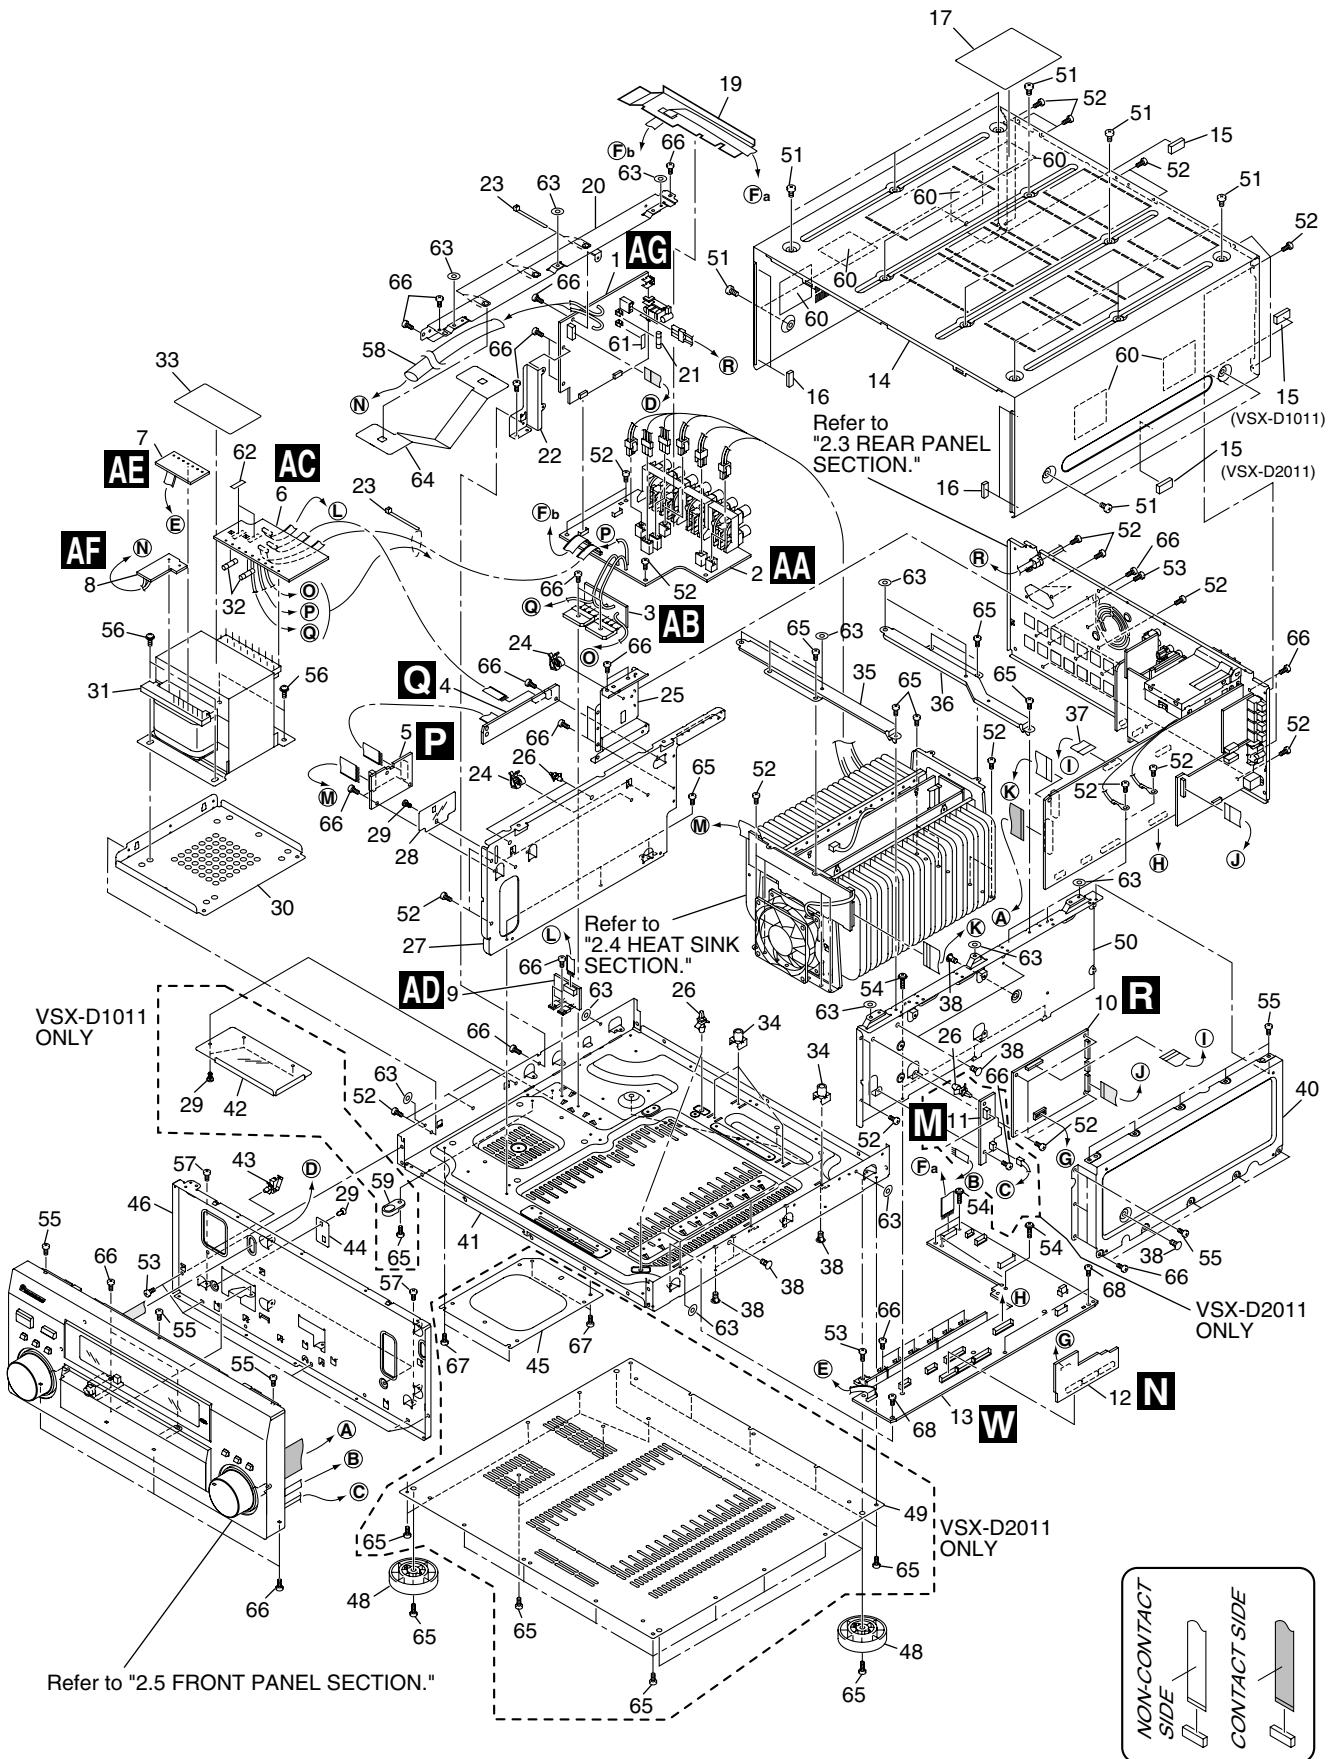

EXTERIOR SECTION parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	PRIMARY Assy	AWX7998	36	Bridge Frame 45R	ANG7410
2	SP/PS Assy	See Contrast table (2)	37	J7 21P FFC/60V	ADD7355
3	DIODE Assy	See Contrast table (2)	38	Card Spacer	DNK2769
4	FAN CONNECTION Assy	AWX8005	39	•••••	
5	FAN DRIVE Assy	AWX8135	40	DSP Shield 45B	ANG7403
6	TRANS 2-1 Assy	AWX7979	NSP 41	Under Base	See Contrast table (2)
7	TRANS 2-2 Assy	AWX7970	42	Screw Cover 45A	See Contrast table (2)
8	TRANS 1 Assy	AWX7969	NSP 43	Wire Saddle	DEC1450
9	VH TR Assy	AWX8018	44	Styling Sheet	AEC7413
10	DSP ASSY	AWX8016	45	Stabilizer 45	See Contrast table (2)
11	MIC AMP Assy	See Contrast table (2)	NSP 46	Panel Stay 45	AND7047
12	DSP CONNECTION Assy	AWX8024	47	•••••	
13	REGULATOR Assy	AWX8020	48	Insulator	See Contrast table (2)
14	Bonnet Case	See Contrast table (2)	49	Bottom Plate 45	See Contrast table (2)
15	Spacer 45A	AEB7263	50	DSP Shield 45A	ANG7402
16	Spacer 45B	AEB7264	51	Screw	See Contrast table (2)
17	Label (DD/DTS/THX)	ARW7177	52	Screw	BBZ30P080FZK
18	•••••		53	Screw	BBZ30P100FCC
19	Barrier 45	AEC7444	54	Screw	IBZ30P150FCC
20	Left Beam 45	ANG7401	55	Screw	BBT30P080FCC
△ 21	FU1 Fuse (4A)	REK-106	56	Screw	ABA7066
22	Primary Angle 35	ANG7301	57	Screw	ABA7009
NSP 23	Binder	ZCA-BK1	58	UL Tube	ADN7007
NSP 24	Mini Clamp	VEC1597	59	Screw Cover	
25	Fan Box 45	ANG7413			See "2.5 FRONT PANEL SECTION" No. 19-3
26	Locking Card Spacer	PNW2917	60	Bonnet Sheet	See Contrast table (2)
27	Trans Shield 45	ANG7400	NSP 61	Fuse Card	AAX7099
28	Styling Sheet B	AEC7437	NSP 62	Fuse Card	AAX7277
29	Push Rivet	AEC7370	63	Spacer Circle	See Contrast table (2)
30	Trans Frame 45	ANG7399	64	FMEA Spacer	AEC7446
△ 31	T1 Power Transformer	ATS7329	65	Screw	BBZ30P080FCC
△ 32	FU4,FU5 Fuse (2.5A)	REK1026	66	Screw	IBZ30P080FCC
NSP 33	Trans Label 45	AAX7957	67	Screw	IBZ30P100FCC
34	PCB Mold	AMR2534			
35	Bridge Frame 45F	ANG7409			


(2) CONTRAST TABLE

VSX-D2011-S/HYXJI, VSX-D1011-S/HYXJI and VSX-D1011-K/HYXJI are constructed the same except for the following:

Mark	NO	Symbol and Description	VSX-D2011-S/ HYXJI	VSX-D1011-S/ HYXJI	VSX-D1011-K/ HYXJI
NSP	2	SP/PS Assy	AWX8039	AWX8040	AWX8040
	3	DIODE Assy	AWX8017	AWX8038	AWX8038
	11	MIC AMP Assy	AWX8004	Not used	Not used
	14	Bonnet Case	AZN7899	AZN7899	AZN7897
	41	Under Base	ANA7138	ANA7144	ANA7144
	42	Screw Cover 45A	Not used	AEC7414	AEC7414
	45	Stabilizer 45	ANG7408	Not used	Not used
	48	Insulator	VXA2368	PNW2766	PNW2766
	49	Bottom Plate 45	ANF7031	Not used	Not used
	51	Screw	BBZ40P080FCC	BBZ40P080FCC	BBZ40P080FZK
	60	Bonnet Sheet	AEB7265	Not used	Not used
	63	Spacer Circle	AEC7330	Not used	Not used

2.3 REAR PANEL SECTION

A

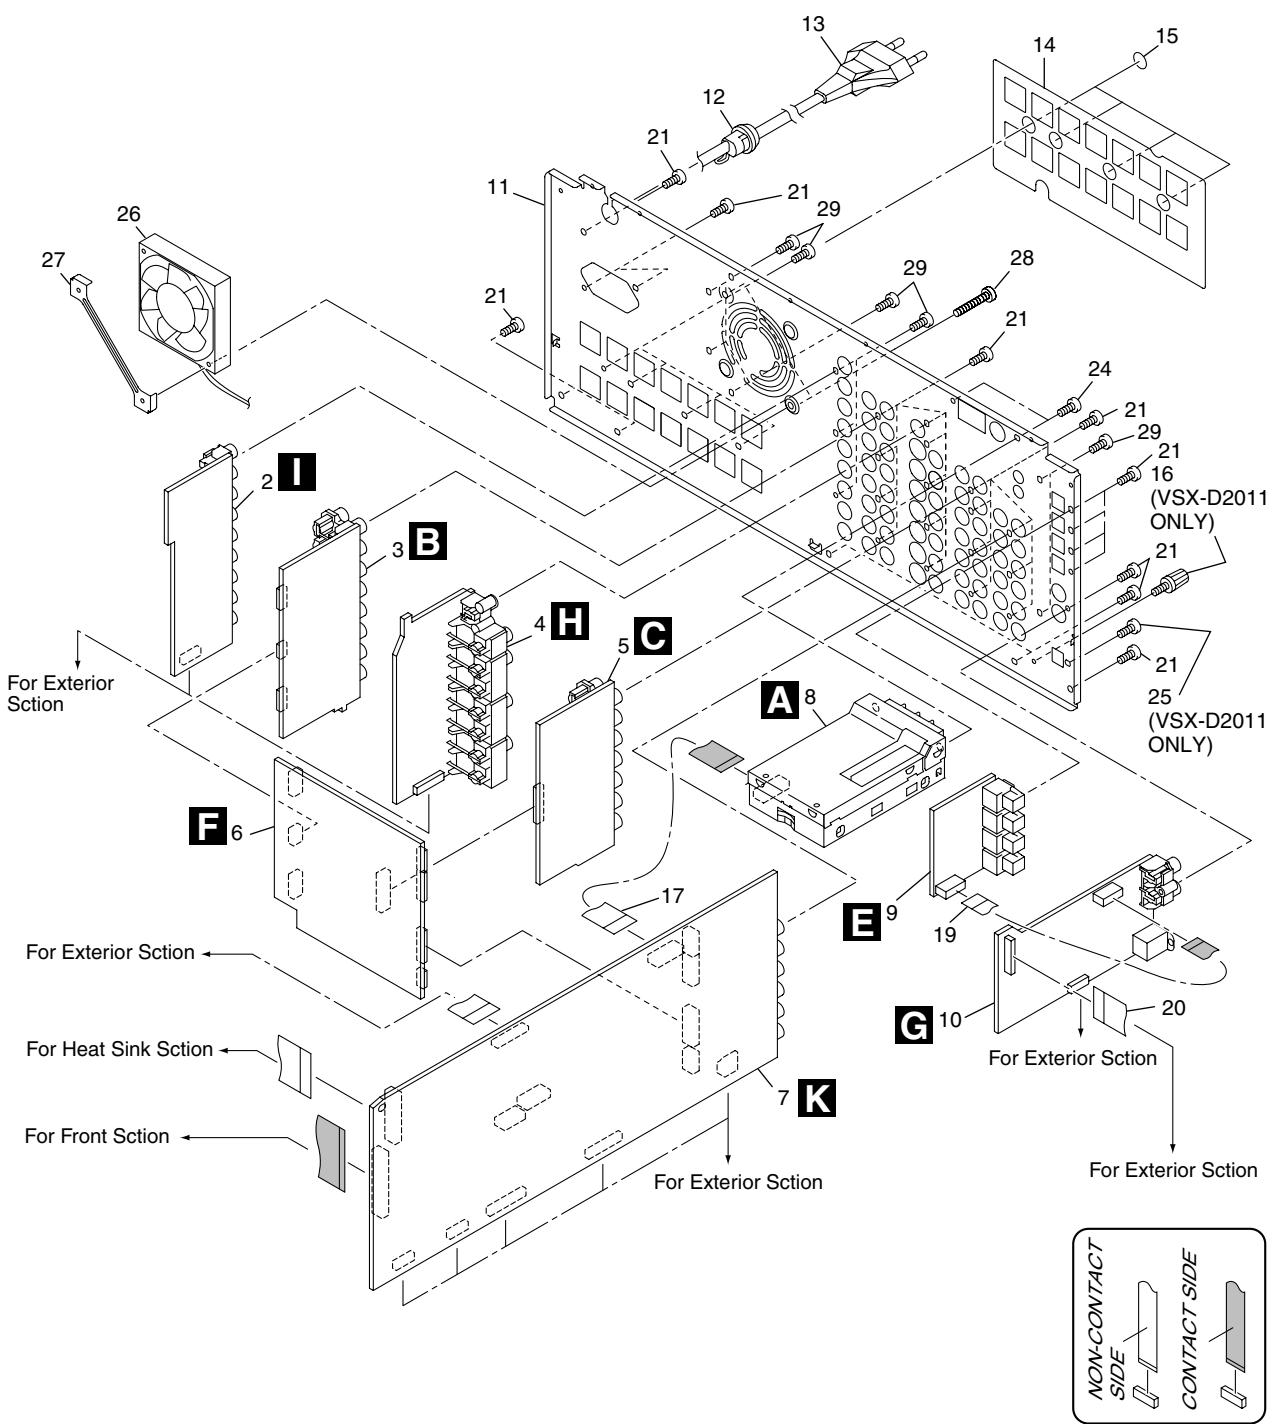

REAR PANEL SECTION parts List

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	•••••		16	Screw with Terminal	See Contrast table (2)
2	COMPONENT Assy	See Contrast table (2)	17	J8 13P FFC/60V	ADD7356
3	7.1CH I/O Assy	AWX7973	18	•••••	A
4	VIDEO Assy	See Contrast table (2)	19	J5 9P FFC/60V	ADD7353
5	V-AUDIO IN Assy	AWX7991	20	J6 20P FFC/60V	ADD7354
6	INPUT CONNECT Assy	AWX8041	21	Screw	BBZ30P080FZK
7	MAIN CONTROL Assy	See Contrast table (2)	22	Screw	IBZ30P100FCC
8	FM/AM TUNER Module	AXQ7232	23	•••••	
9	OPTICAL IN Assy	AWX7978	24	Screw	VPZ30P080FZK
10	COAXIAL IN Assy	See Contrast table (2)	25	Screw	See Contrast table (2)
11	Rear Panel	See Contrast table (2)	26	Fan Motor	AXM7020
12	Cord Stopper	CM-22B	27	Fan Plate	ANG7153
△ 13	AC Power Cord	VDG1080	28	Screw	BBZ30P200FZK
14	Speaker Sheet	AAK8016	29	Screw	IBZ30P080FCC
15	Cushion Circle 16B	AED7052			


(2) CONTRAST TABLE

VSX-D2011-S/HYXJI, VSX-D1011-S/HYXJI and VSX-D1011-K/HYXJI are constructed the same except for the following:


Mark	NO	Symbol and Description	VSX-D2011-S/ HYXJI	VSX-D1011-S/ HYXJI	VSX-D1011-K/ HYXJI
	2	COMPONENT Assy	AWX7963	Not used	Not used
	4	VIDEO Assy	AWX8001	AWX8002	AWX8002
	7	MAIN CONTROL Assy	AWX7997	AWX8010	AWX8010
	10	COAXIAL IN Assy	AWX7965	AWX8013	AWX8013
	11	Rear Panel	ANC8064	ANC8090	ANC8088
	16	Screw with Terminal	AKE-031	Not used	Not used
	25	Screw	PMZ30P060FCC	Not used	Not used

2.4 HEAT SINK SECTION


A

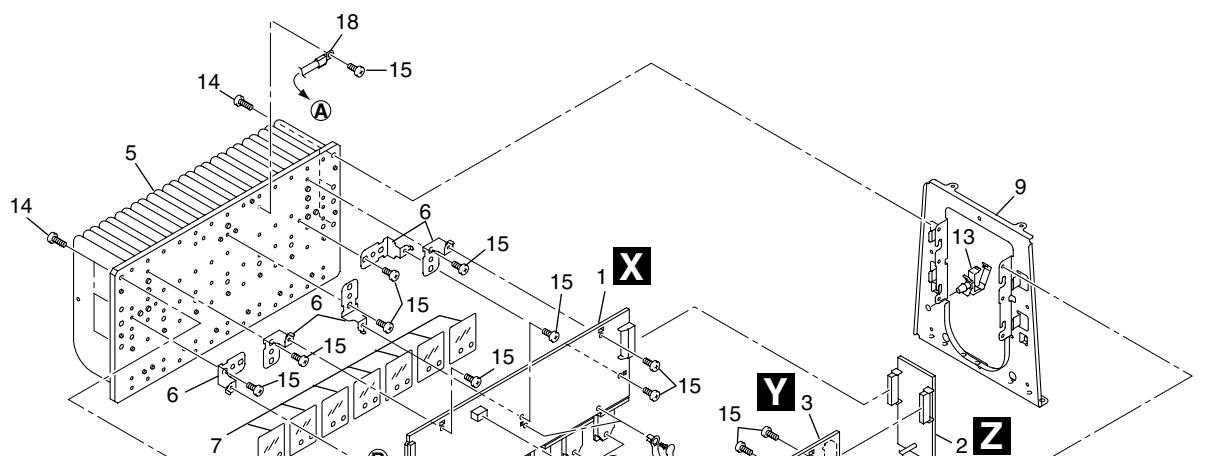

B

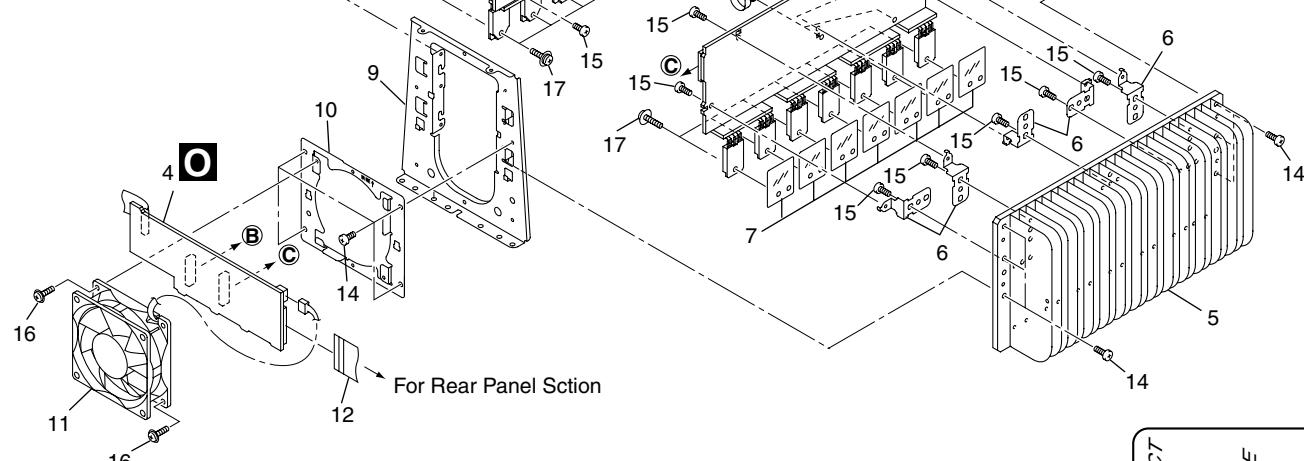

C

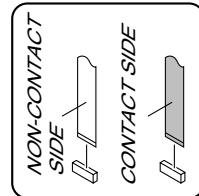

D

E

F

HEAT SINK SECTION parts List

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	POWER AMP-L Assy	AWX7984
2	POWER AMP-C Assy	AWX7986
3	POWER AMP-R Assy	AWX7985
4	POWER AMP IN Assy	AWX7982
NSP 5	Heat Sink 45	ANH7152
6	PCB Angle 45	ANG7406
7	Mica Sheet 45	AEE7047
NSP 8	Speed Clamp	AEC7445
9	H.S Angle 45	ANG7404
10	Fan Holder 80	ANG7407
△ 11	Fan Motor	AXM7023
12	J14 24P FFC/60V	ADD7357
NSP 13	Wire Saddle	DEC1450
14	Screw	BBZ30P100FCC
15	Screw	BBZ30P080FZK
16	Screw	BBZ30P300FMC
17	Screw	ABA7085
△ 18	TH1 Thermistor	AEX7004

A

B

C


D

E


F

2.5 FRONT PANEL SECTION


A

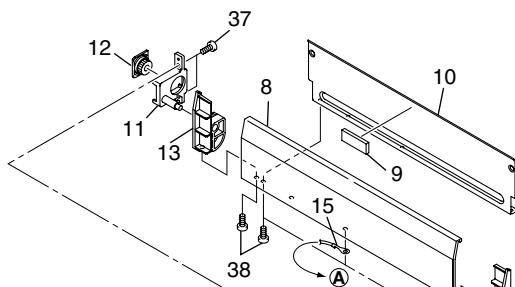


B

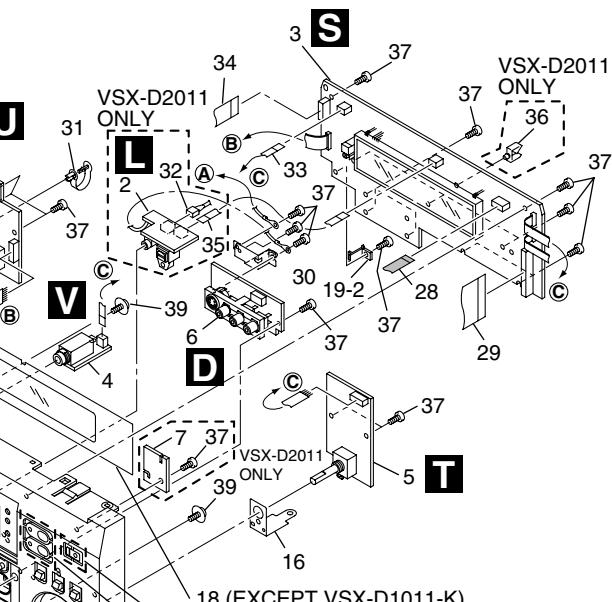

C

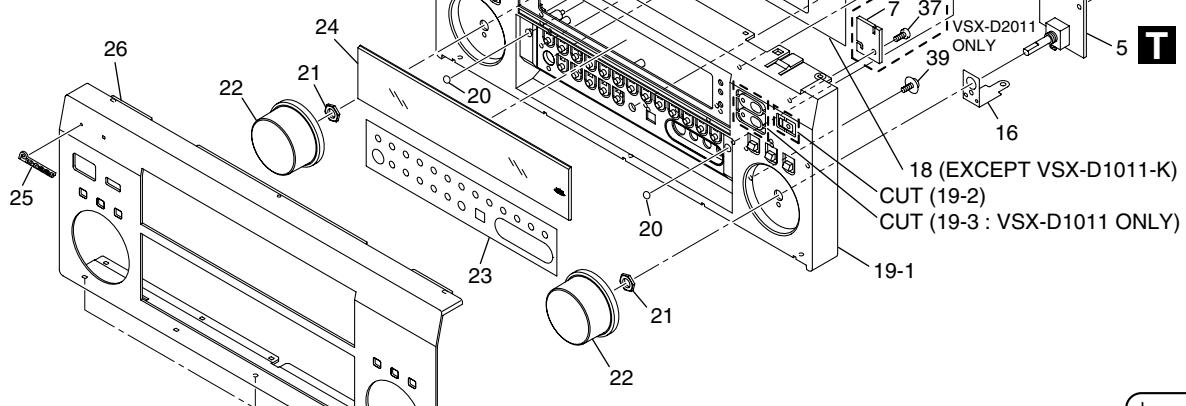

D

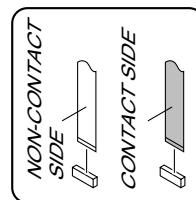

E

F

FRONT PANEL SECTION parts List

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	MULTI JOG Assy	AWX8015	22	Rotary Knob L	See Contrast table (2)
2	MIC & F.OPT IN Assy	See Contrast table (2)	23	D.Sheet	See Contrast table (2)
3	DISPLAY Assy	See Contrast table (2)	24	Window	See Contrast table (2)
4	HEADPHONE Assy	AWX7980	25	Pionner Badge B	See Contrast table (2)
5	VOLUME Assy	AWX7971	26	F.Panel	See Contrast table (2)
6	FRONT IN Assy	AWX8186	27	•••••	
7	STYLING Assy	•••••	28	J4 7P FFC/60V	ADD7352
8	Door	See Contrast table (2)	29	J1 32P FFC/60V	ADD7349
9	Spacer 45A	AEB7263	30	Earth Plate A	ANG7411
10	Door Stay	See Contrast table (2)	NSP 31	Speed Clamp	AEC7445
11	Door Shaft 35	AMR7295	32	J1901 Connector Assy (3P)	See Contrast table (2)
12	Damper Assy (200)	AXA7088	33	J15 3P FFC/60V	ADD7371
13	Door Hinge L	See Contrast table (2)	34	J2 11P FFC/60V	ADD7350
14	Door Hinge R	See Contrast table (2)	35	J3 4P FFC/60V	See Contrast table (2)
NSP 15	Earth Lead Wire	ADH7022	NSP 36	Wire Clip (A)	See Contrast table (2)
16	Earth Plate B	ANG7412	37	Screw	BPZ30P100FMC
17	Magnet 35	AMF7007	38	Screw	BBZ30P080FZK
18	FL Sheet	See Contrast table (2)	39	Screw	ABA7009
19-1	Panel Base	See Contrast table (2)	40	MECHA SW Assy	AWX7995
19-2	Magnet Holder		41	Power Button	See Contrast table (2)
19-3	Screw Cover		42	Screw	IPZ30P100FCC
20	Cushion Circle	See Contrast table (2)			
21	Nut	NK90FUC			

(2) CONTRAST TABLE


VSX-D2011-S/HYXJI, VSX-D1011-S/HYXJI and VSX-D1011-K/HYXJI are constructed the same except for the following:

Mark	NO	Symbol and Description	VSX-D2011-S/ HYXJI	VSX-D1011-S/ HYXJI	VSX-D1011-K/ HYXJI
	2	MIC & F.OPT IN Assy	AWX7981	Not used	Not used
	3	DISPLAY Assy	AWX8147	AWX8011	AWX8011
	8	Door	ANB7280	ANB7280	ANB7275
	10	Door Stay	AAH7097	AAH7097	AAH7089
	13	Door Hinge L	AMR7424	AMR7424	AMR7386
	14	Door Hinge R	AMR7425	AMR7425	AMR7387
	18	FL Sheet	AAK7956	AAK7956	Not used
	19-1	Panel Base	AMB7820	AMB7820	AMB7803
	20	Cushion Circle	AED7045	AED7045	AED7044
	22	Rotary Knob L	AAA7017	AAA7017	Not used
	22	VOL Knob	Not used	Not used	AAB7249
	23	D.Sheet	AAK8023	AAK8025	AAK8024
	24	Window	AAK8034	AAK8036	AAK8071
	25	Pionner Badge B	VAN1124	VAN1124	AAN7218
	26	F.Panel	ANB7283	ANB7285	ANB7284
	32	J1901 Connector Assy (3P)	ADE7084	Not used	Not used
	35	J3 4P FFC/60V	ADD7351	Not used	Not used
NSP	36	Wire Clip (A)	VEC1355	Not used	Not used
	41	Power Button	AAD7675	AAD7675	AAD7647


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 AUDIO BLOCK DIAGRAM


A

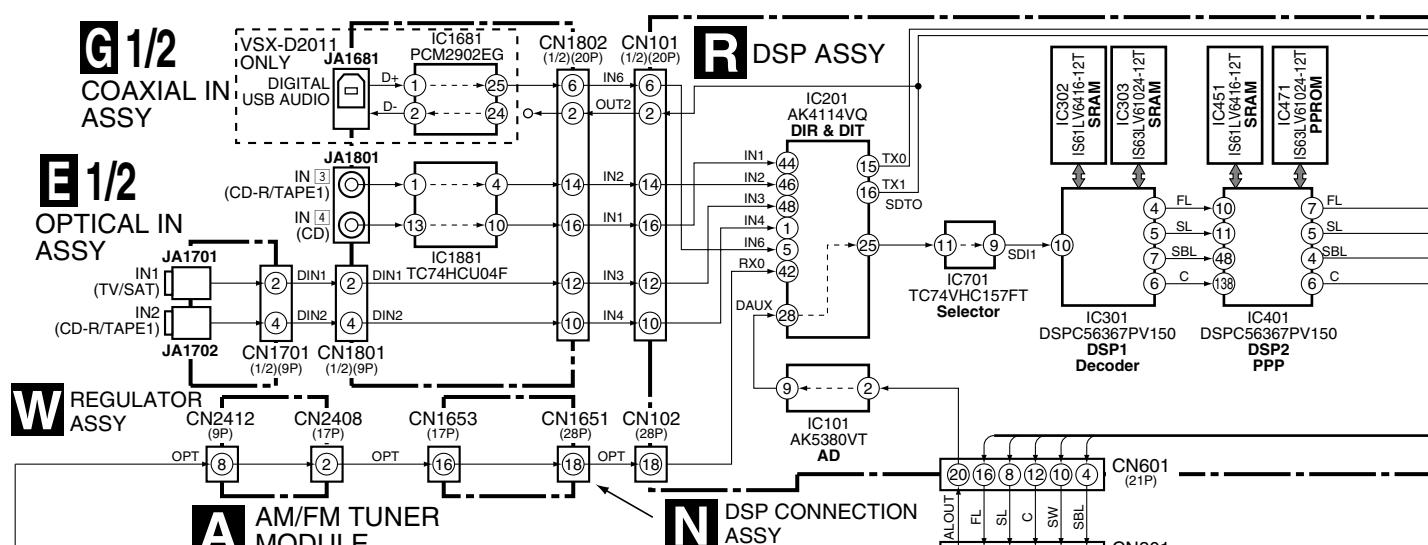


C

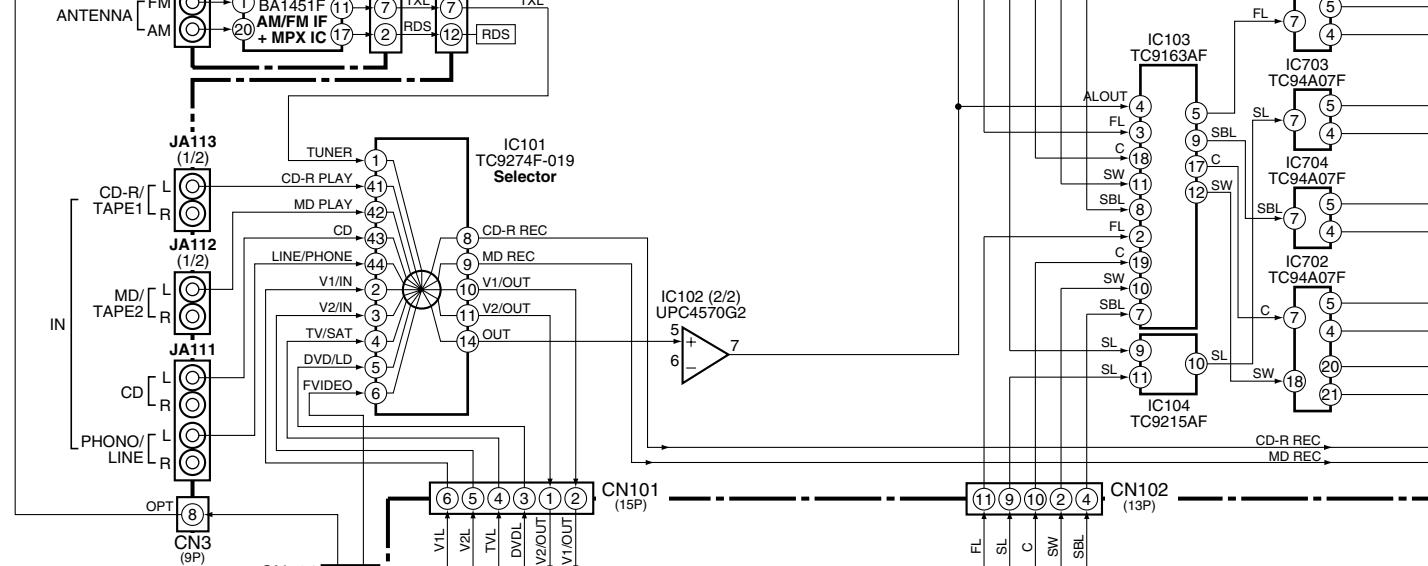


E

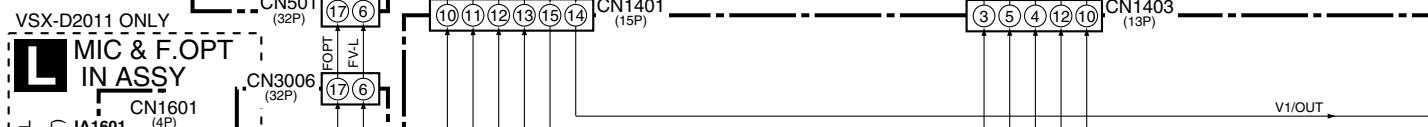


F

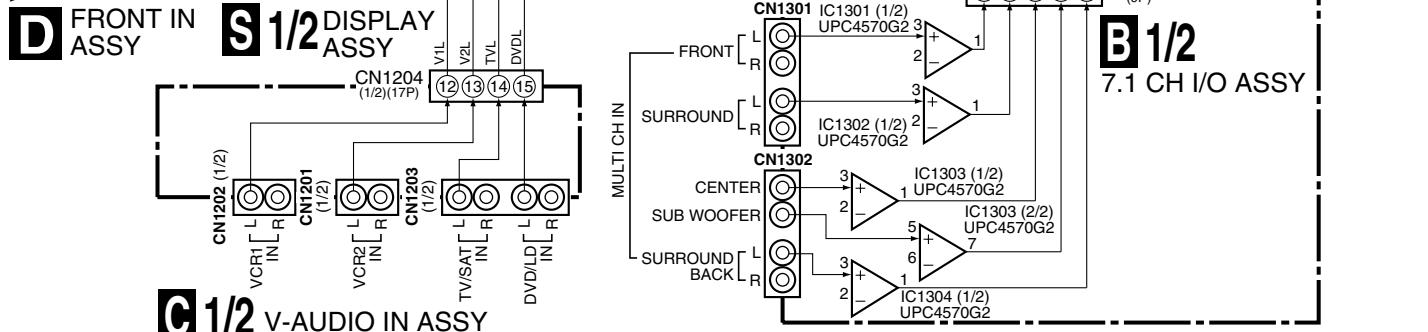


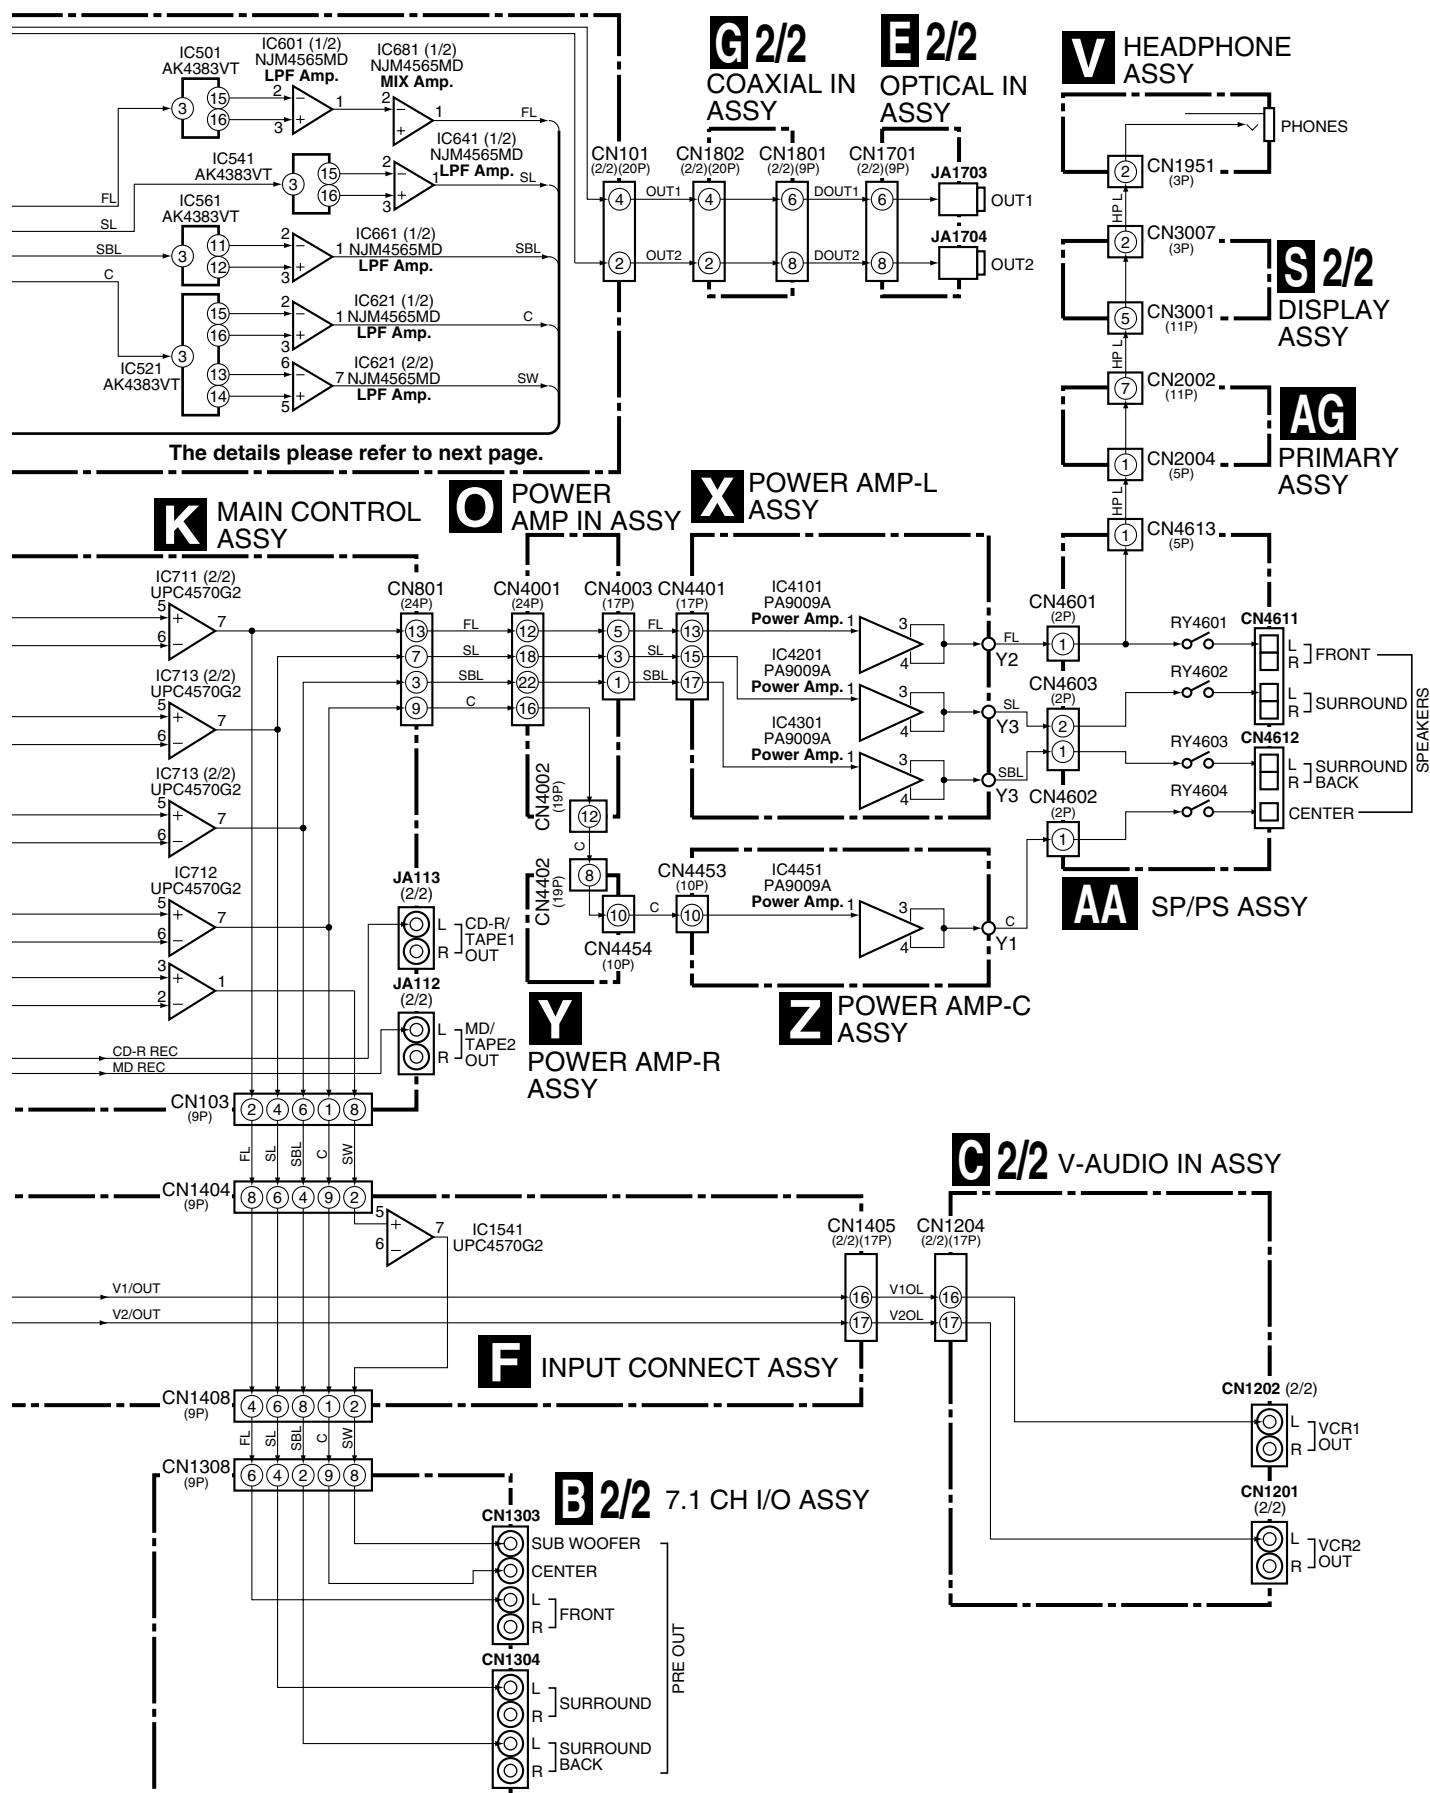


3.2 DSP BLOCK DIAGRAM

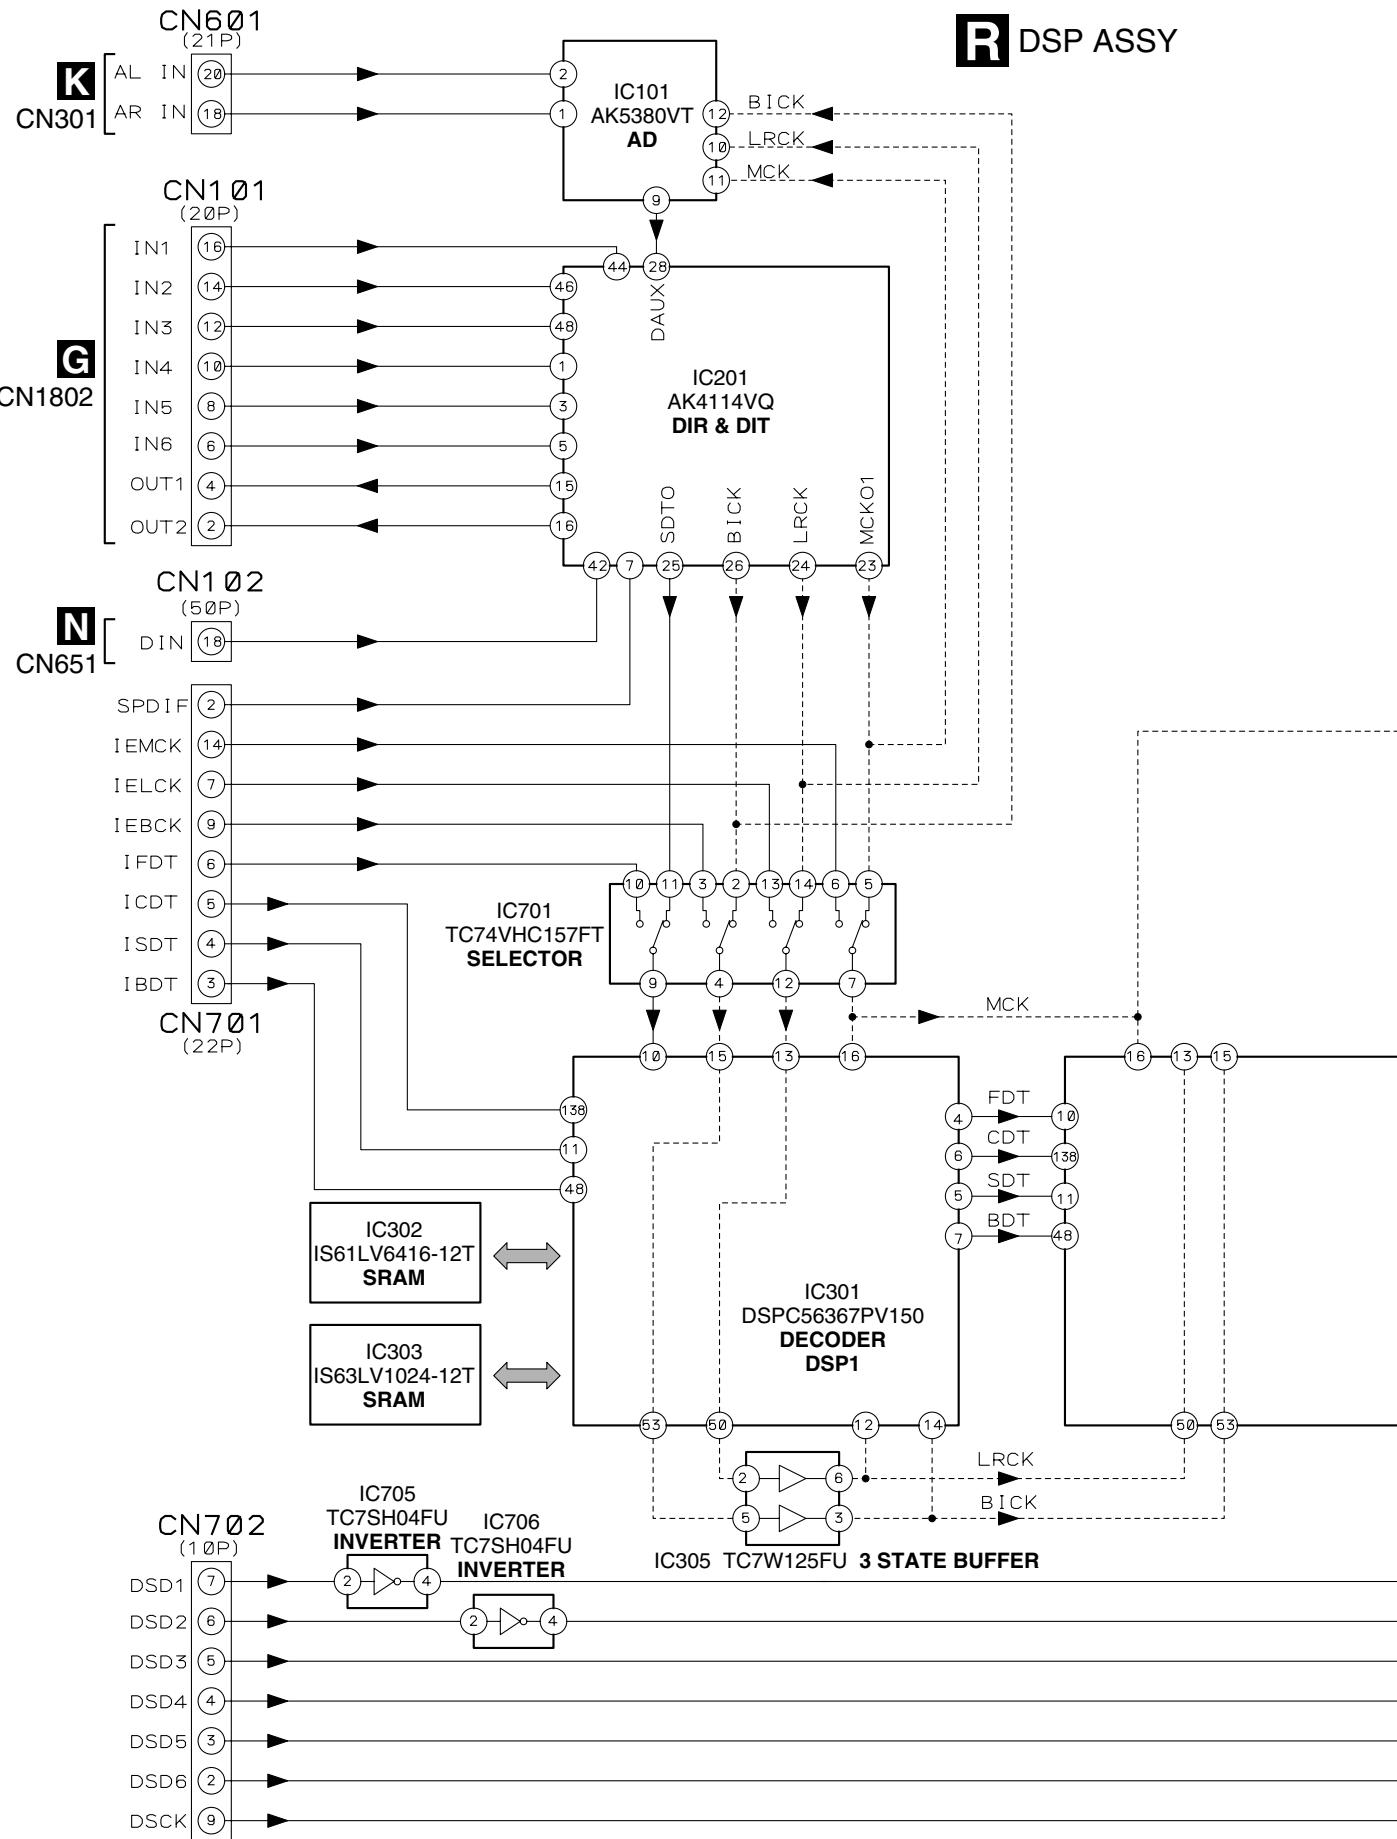


----- CLOCK LINE
——— DATA LINE

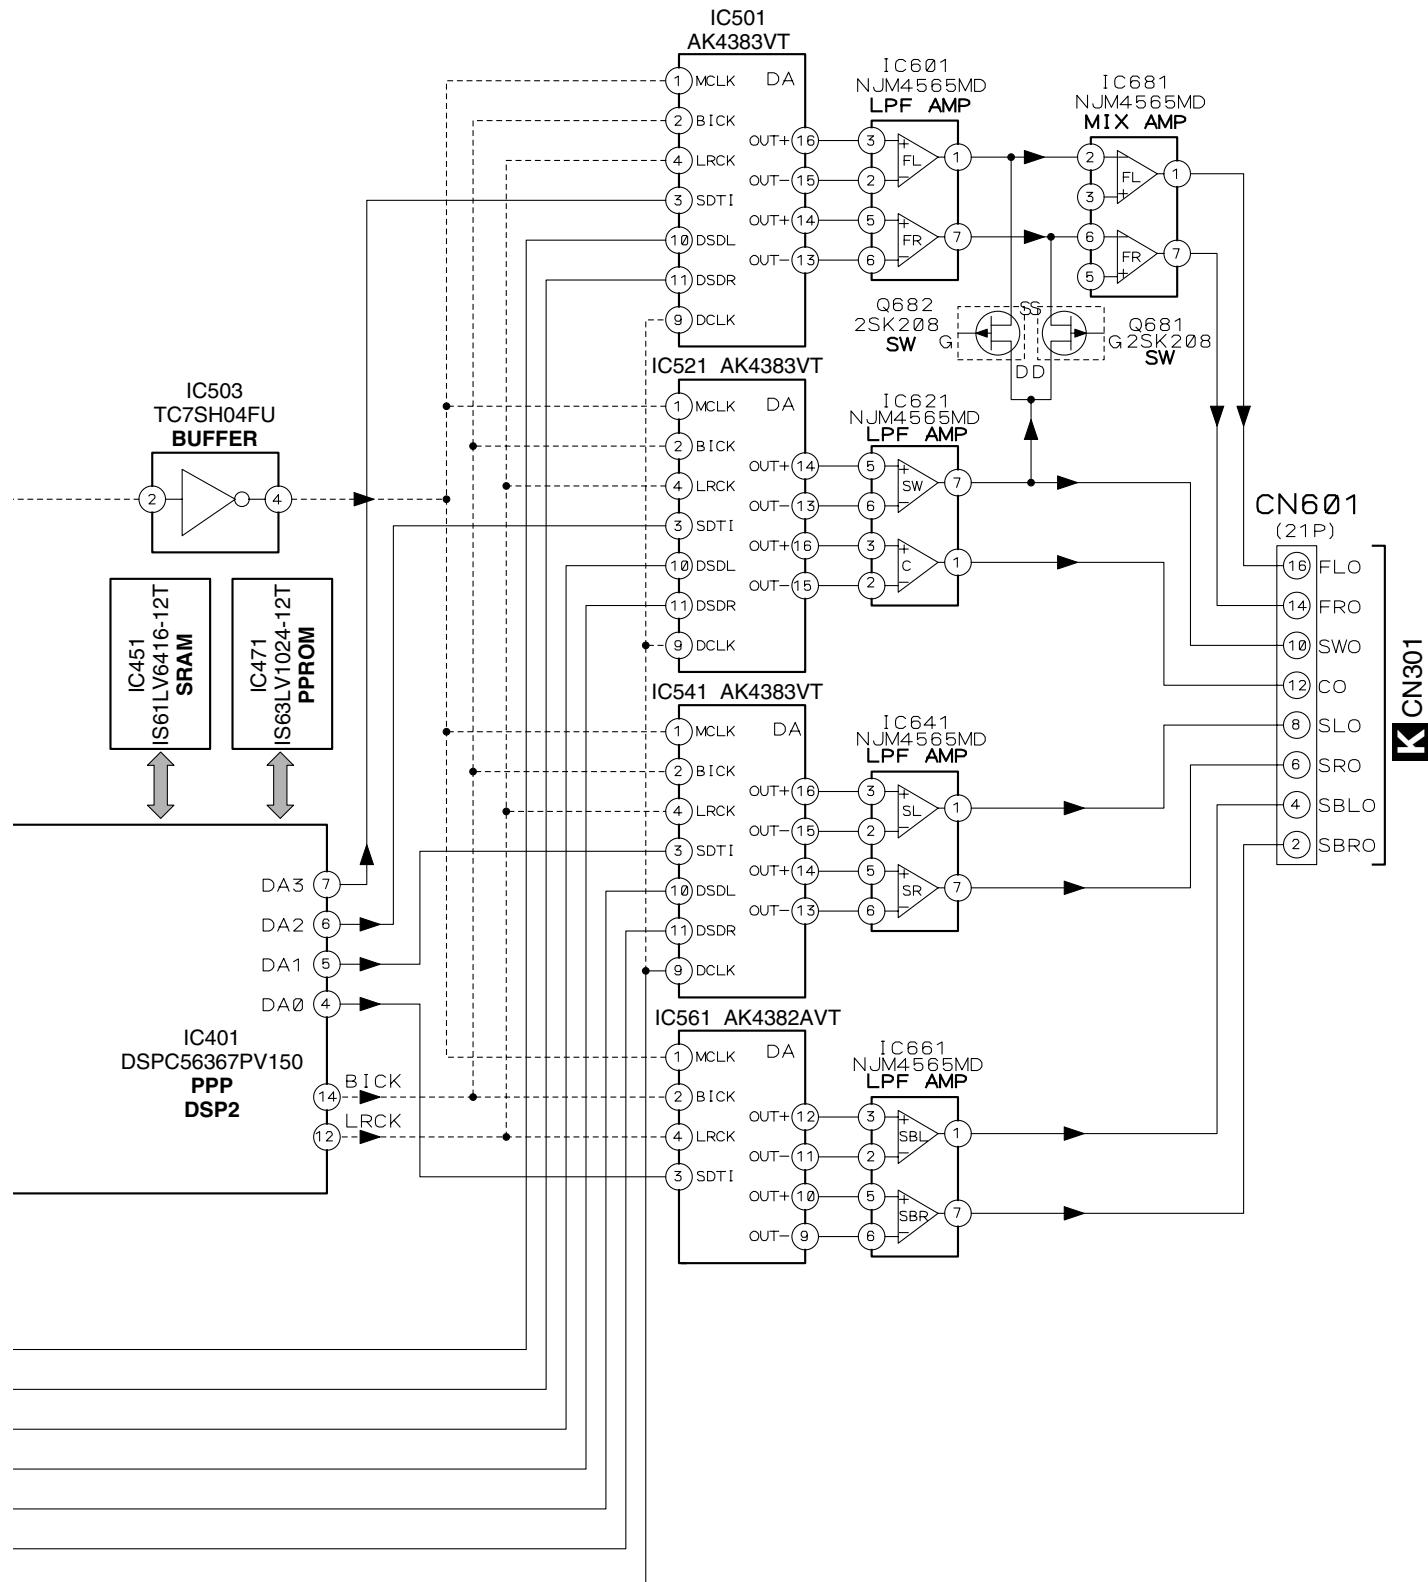


3.3 VIDEO BLOCK DIAGRAM

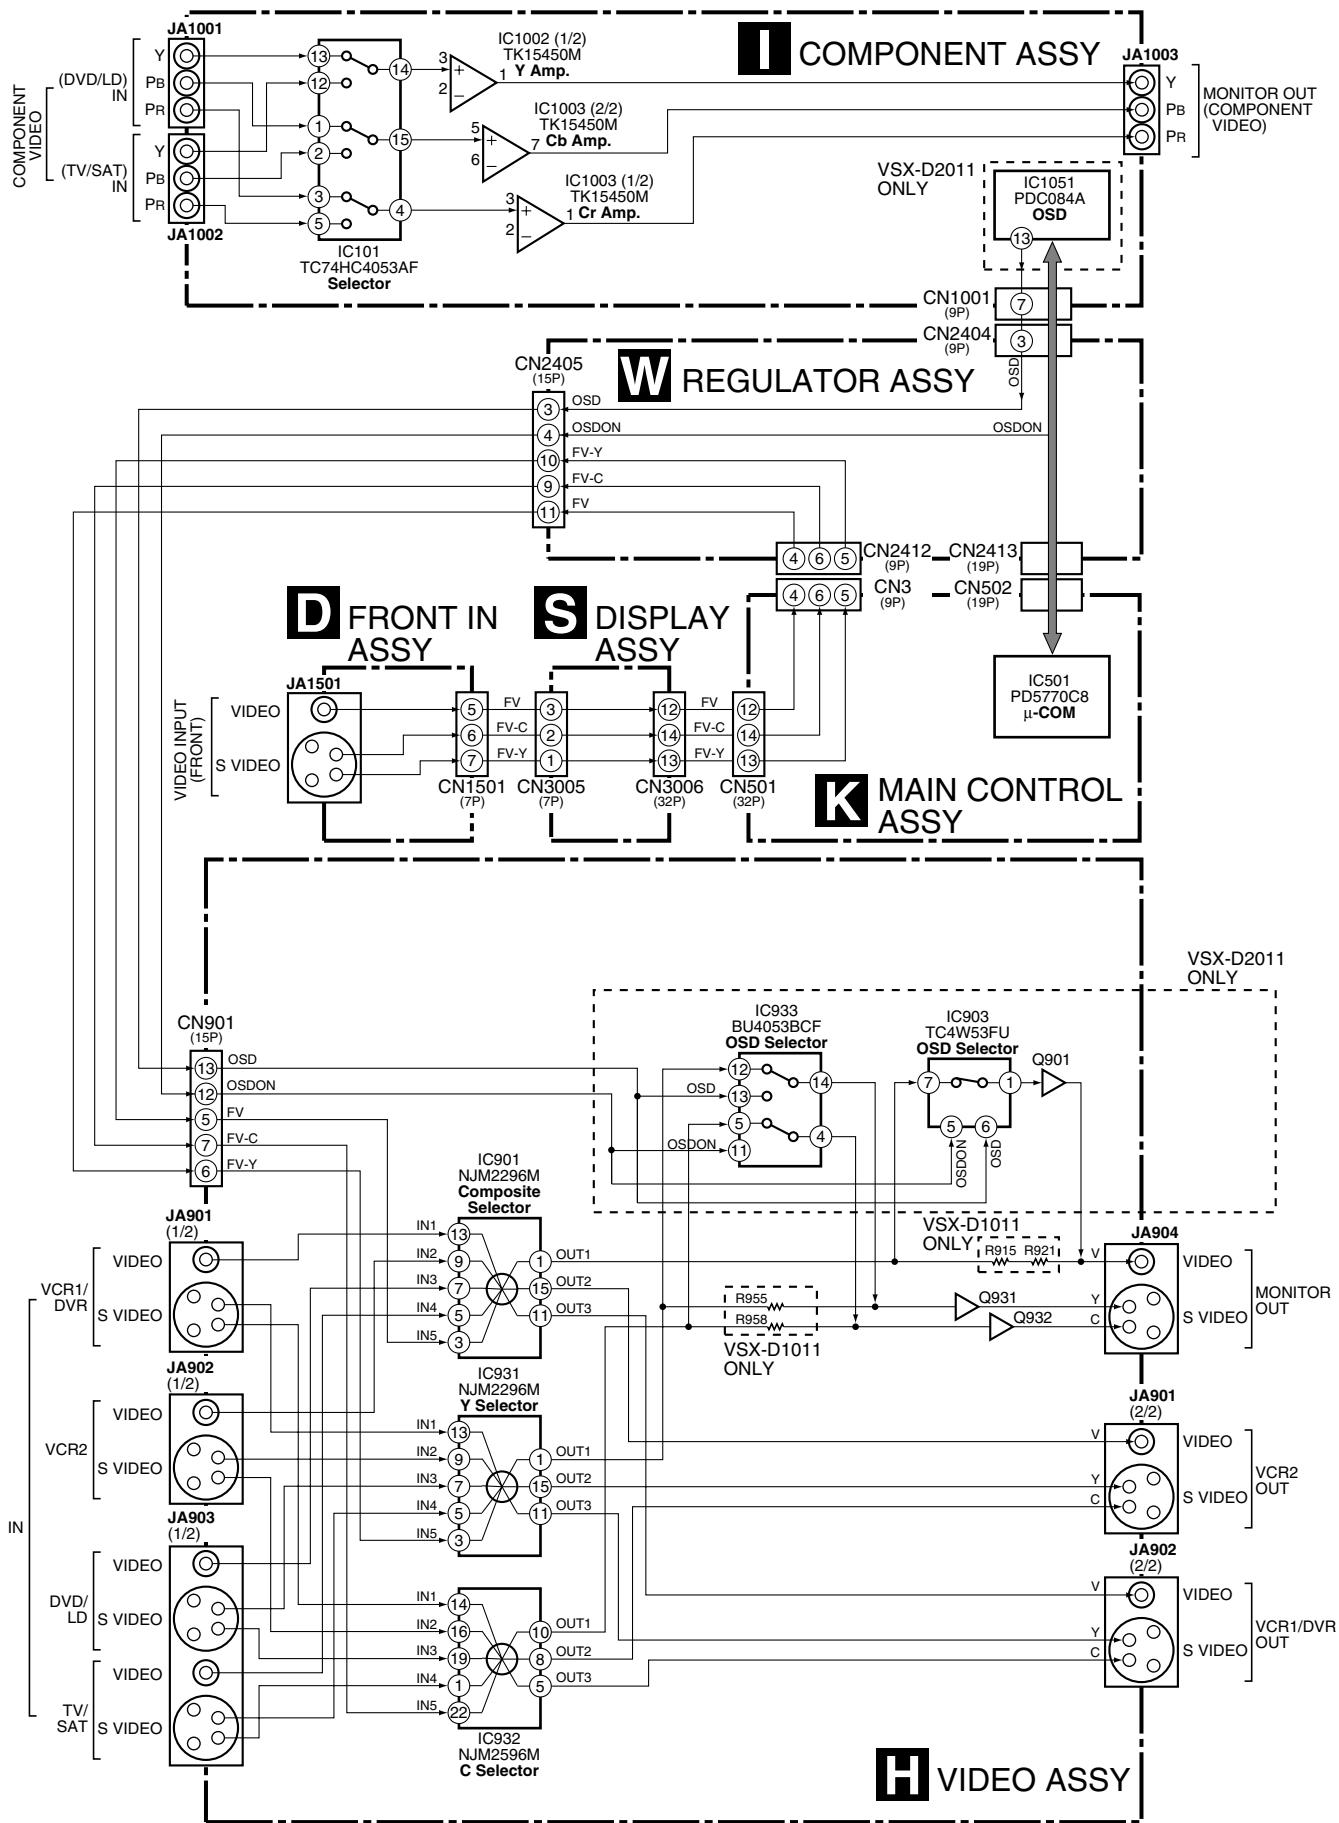


3.4 POWER AMP BLOCK DIAGRAM

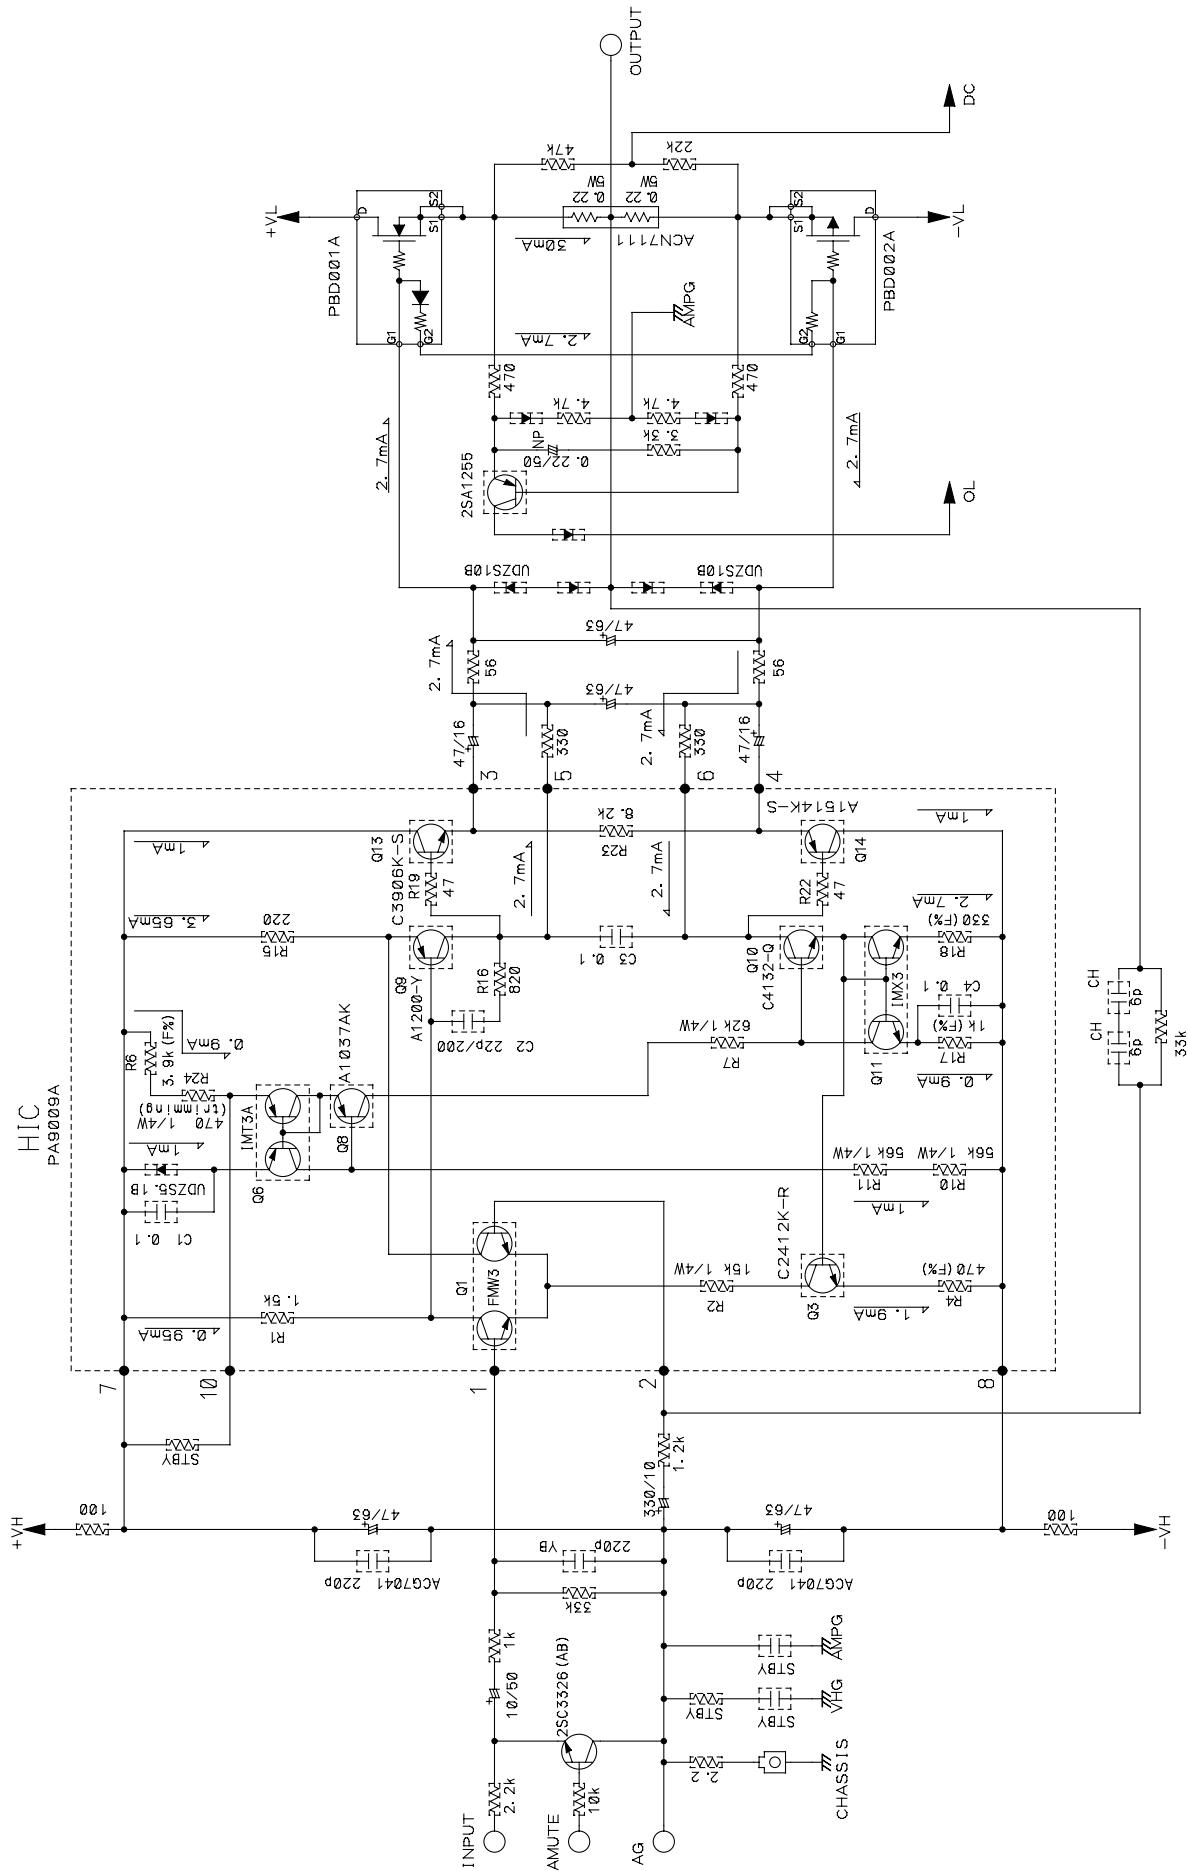

3.5 OVERALL WIRING DIAGRAM

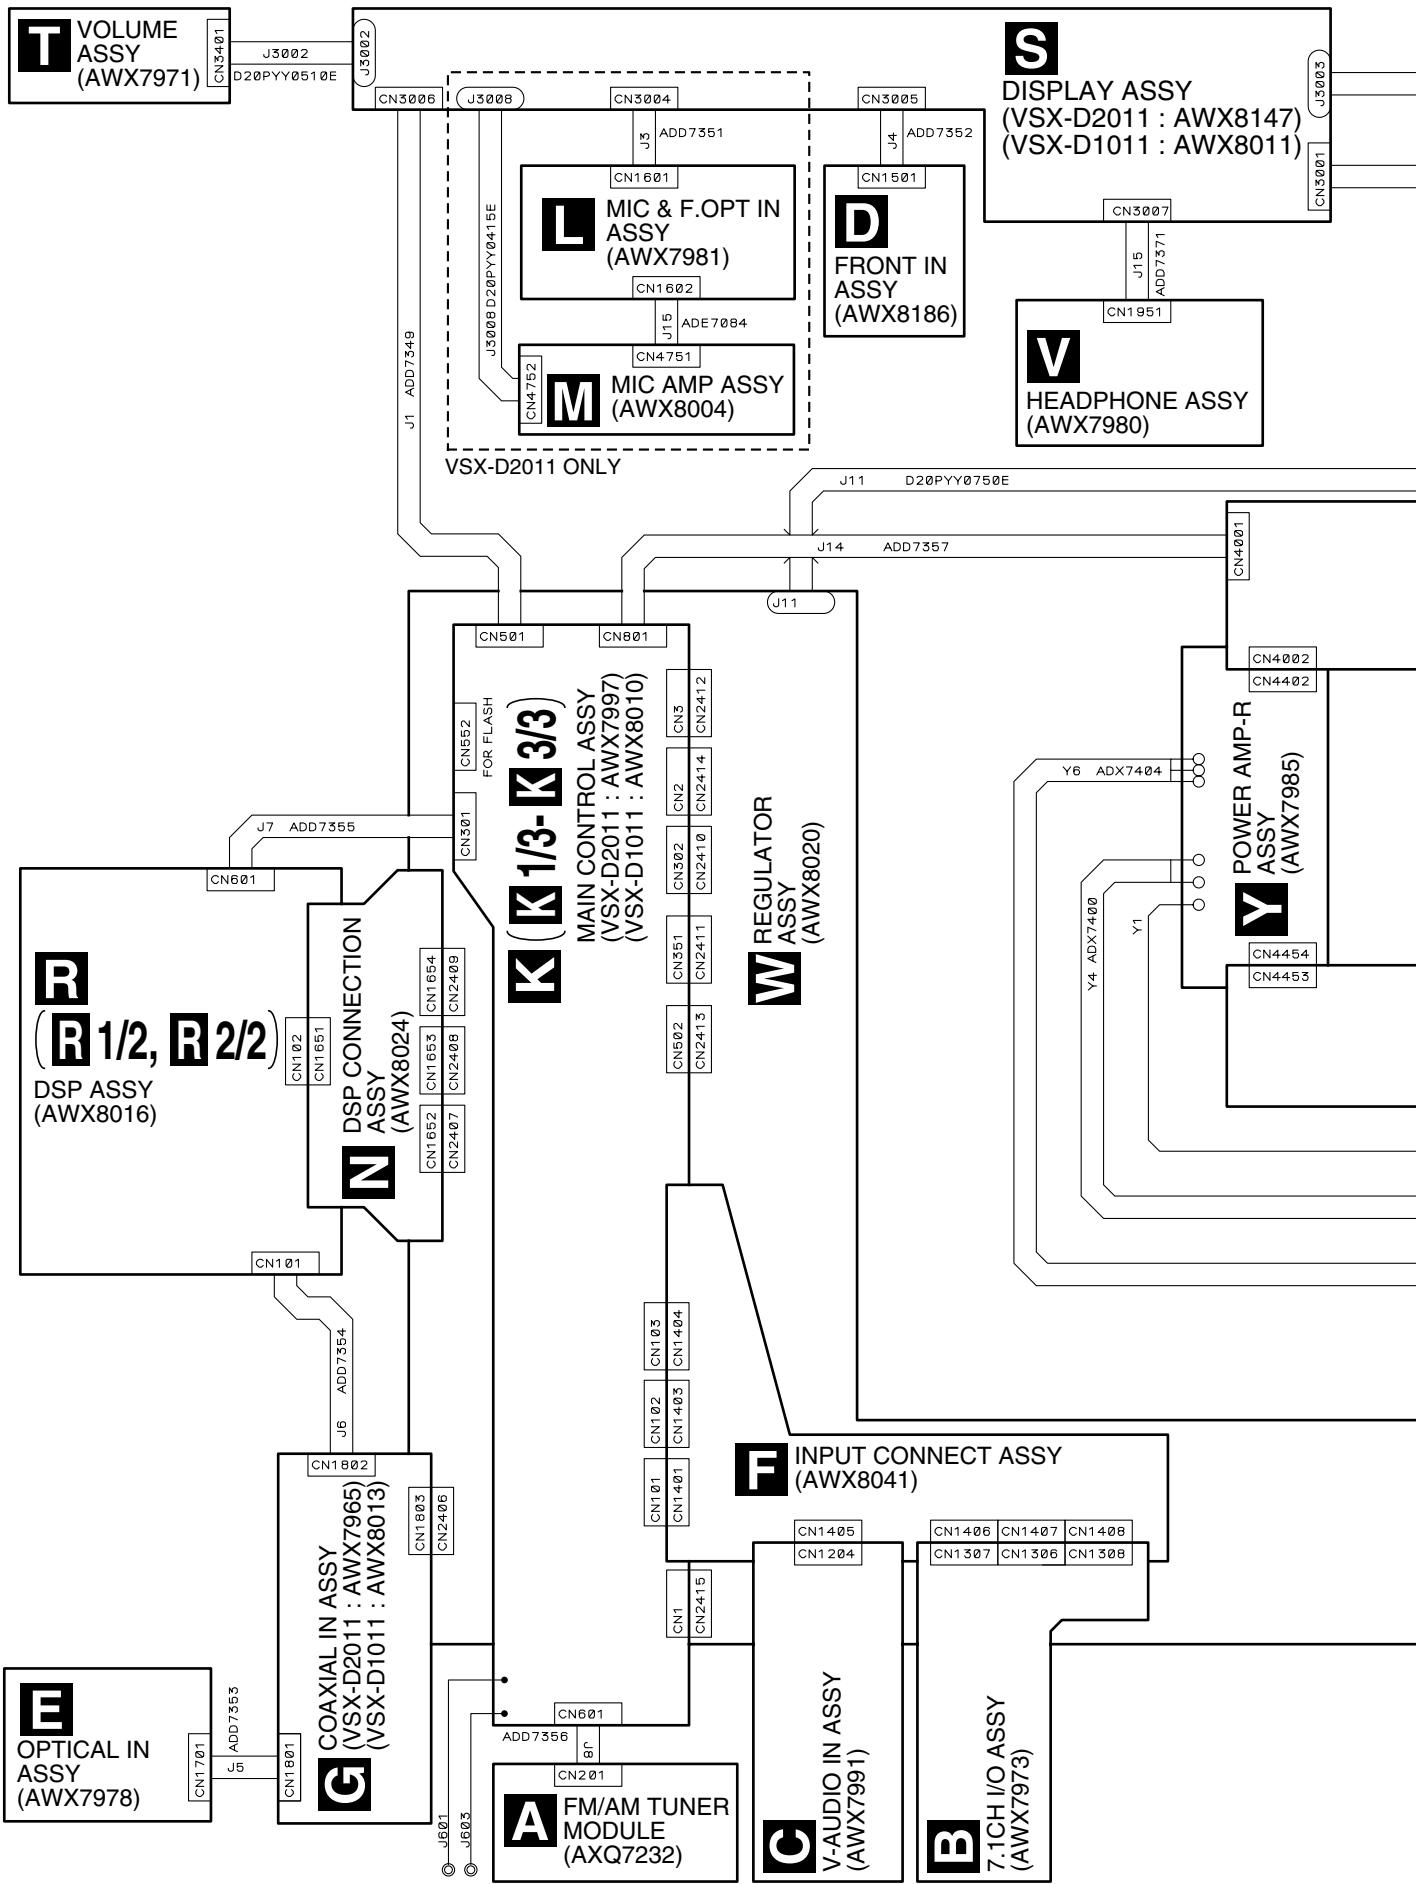


Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

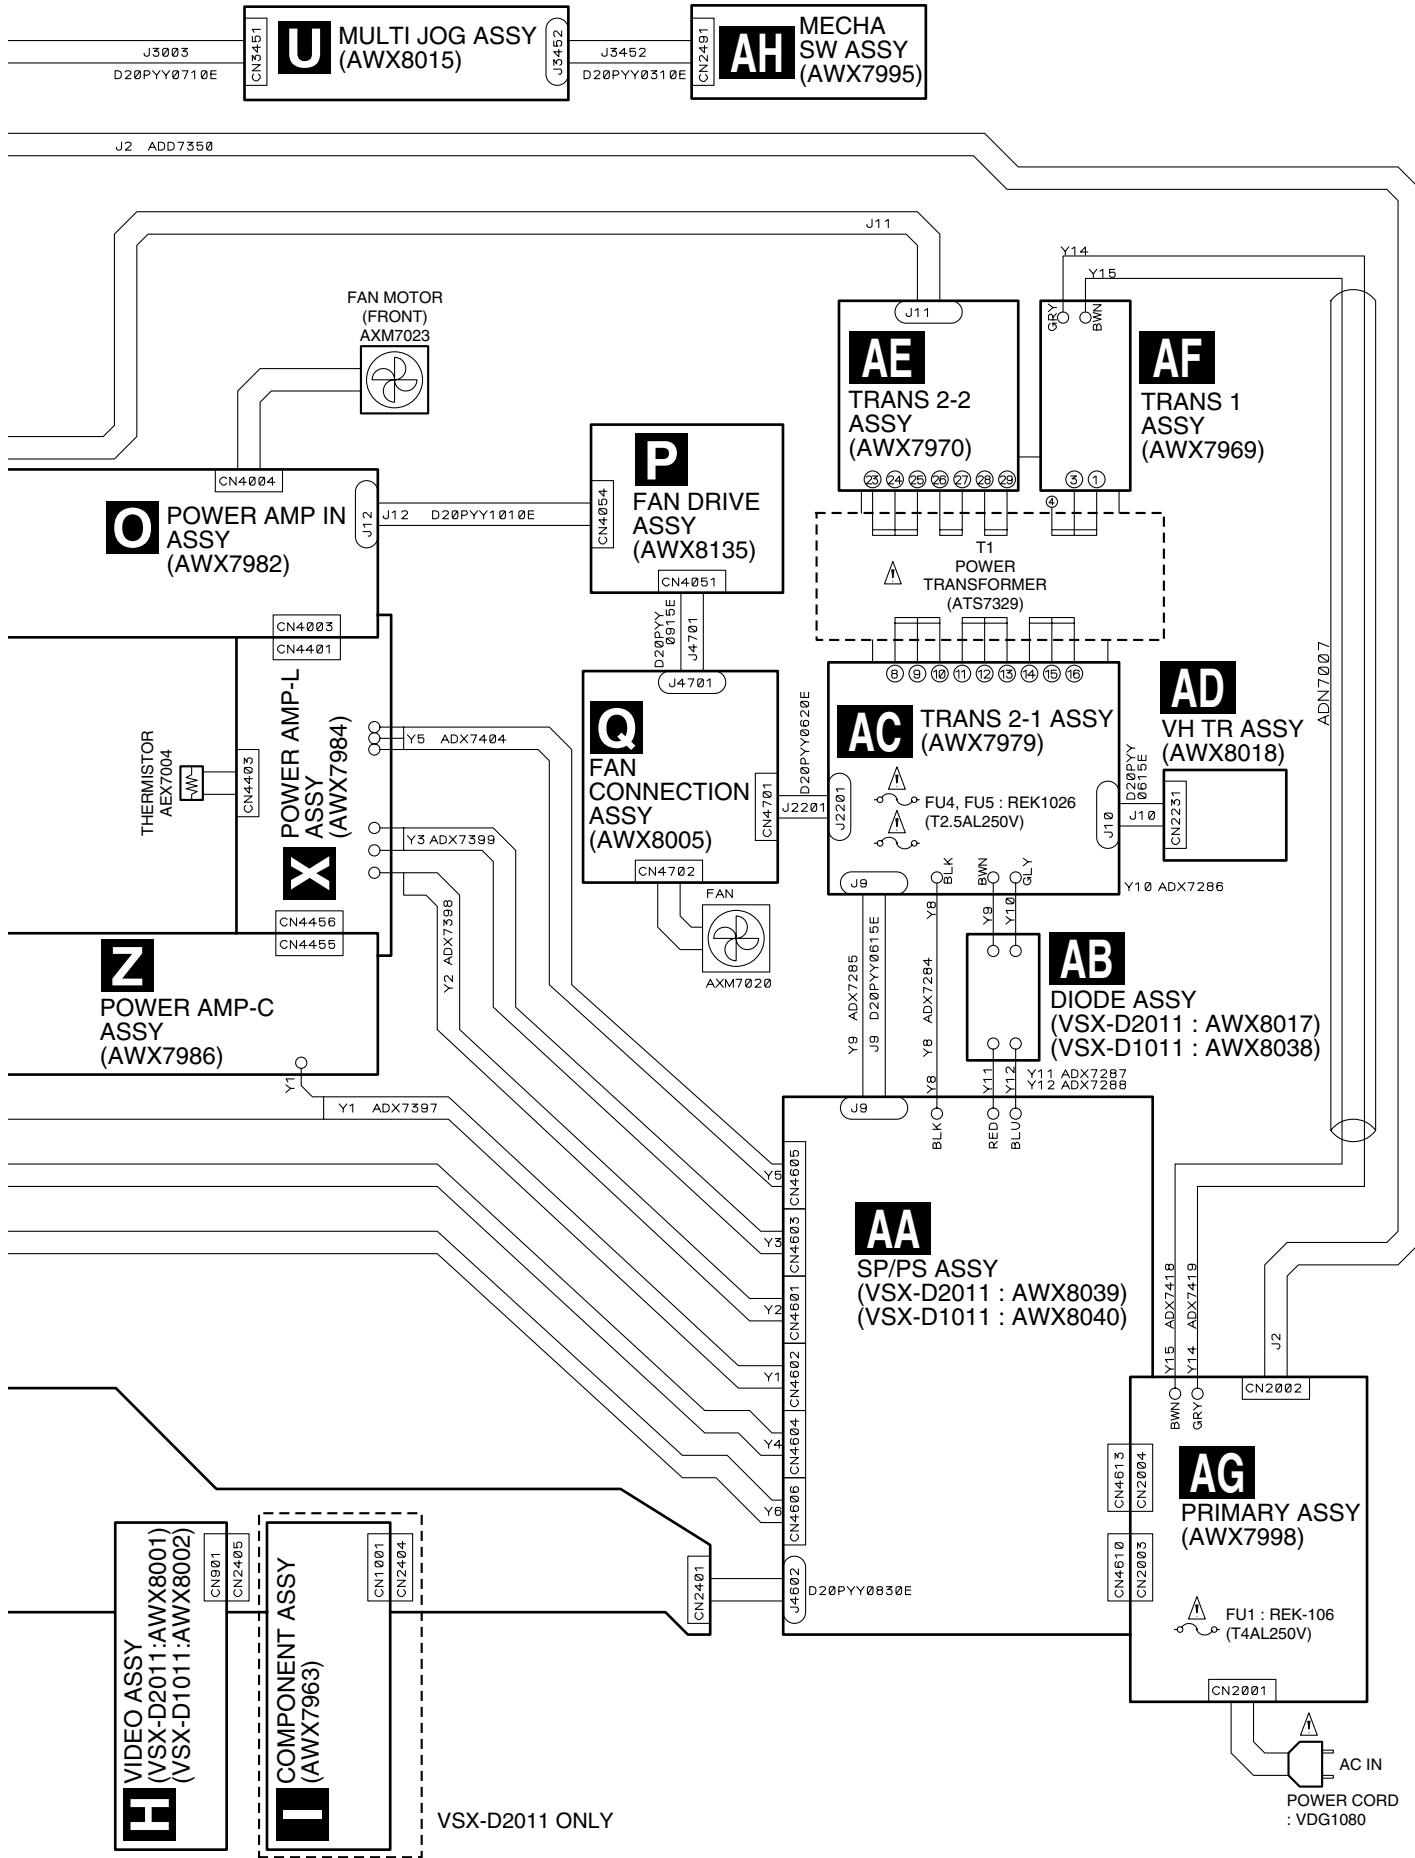

3.6 FM/AM TUNER MODULE

A FM/AM TUNER MODULE (AXQ7232)

MITSUMI FM FE

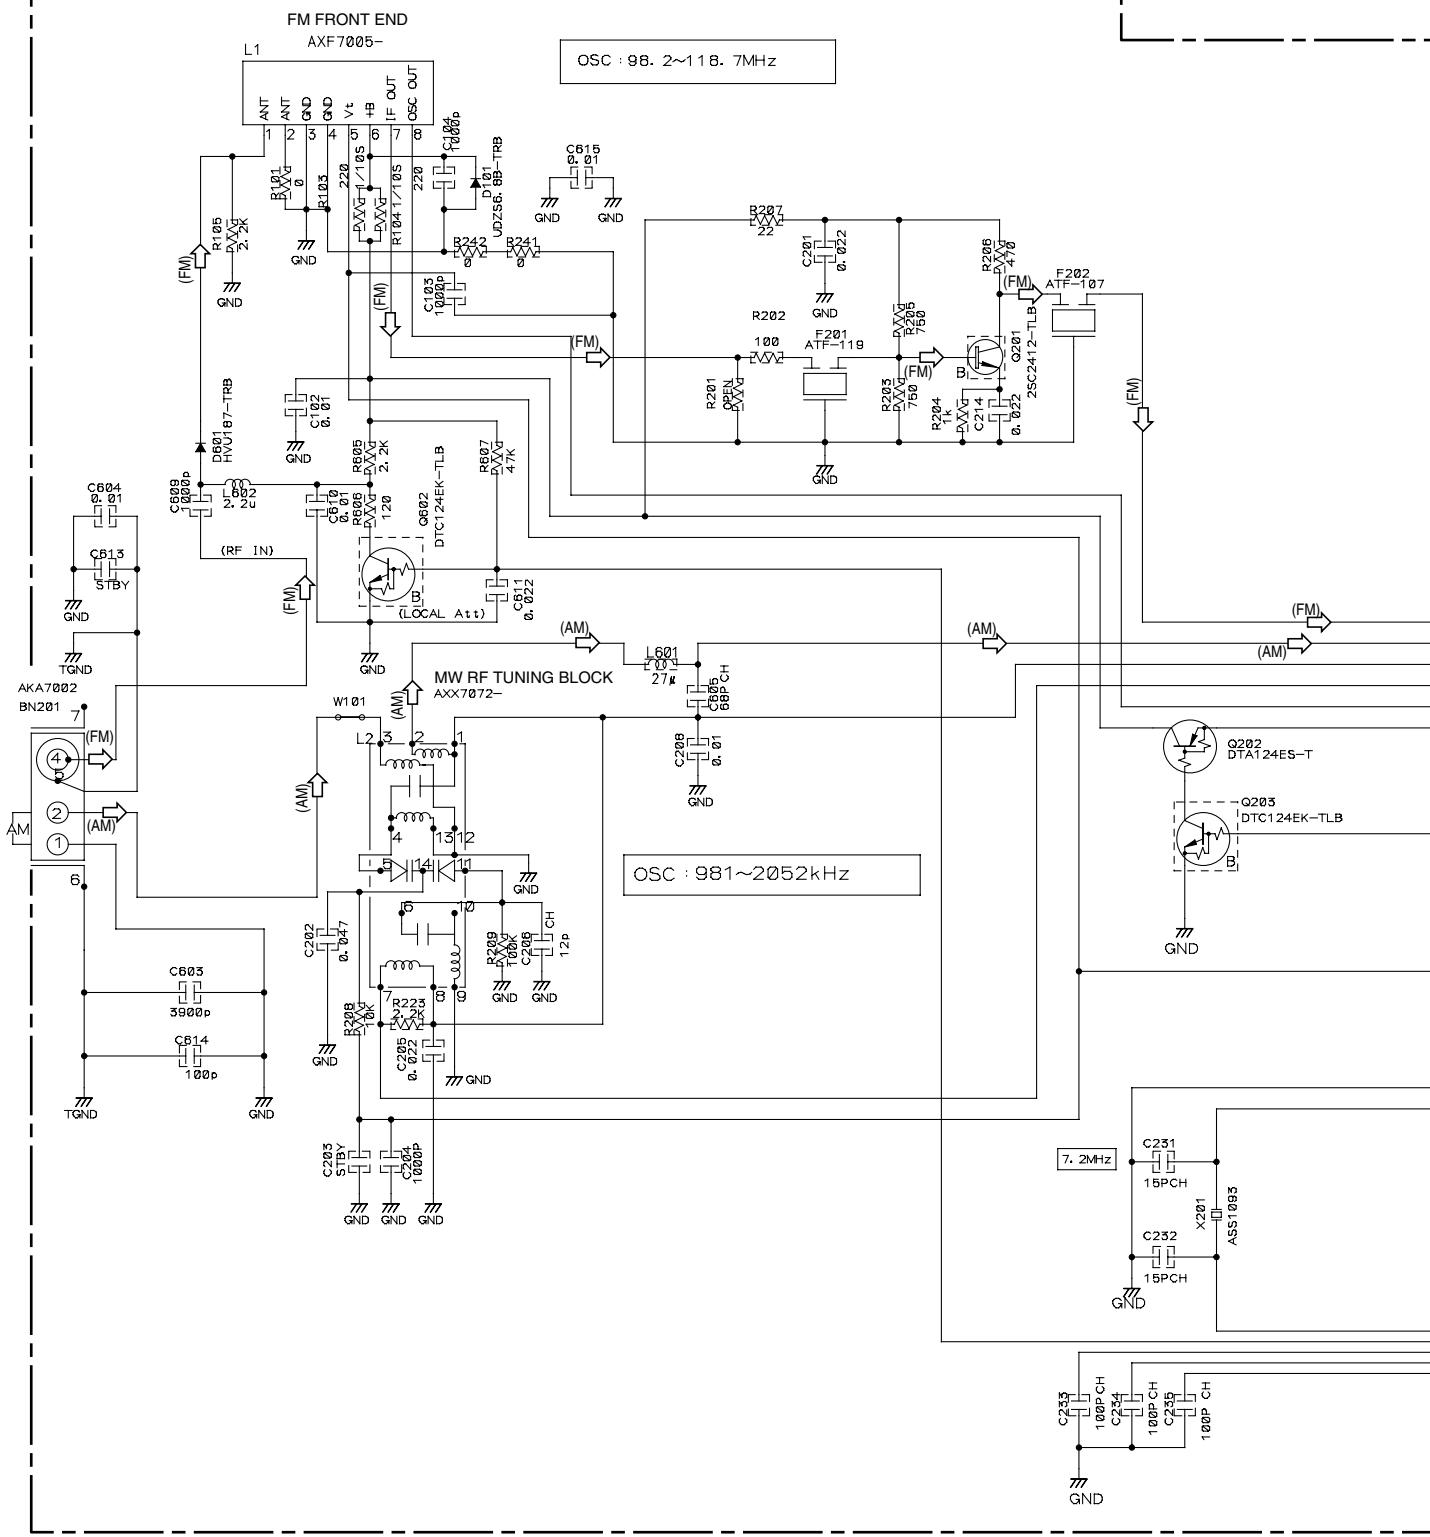

A

Notes**1. RESISTORS**

Indicated in Ω , $1/16W \pm 5\%$ Tolerance unless otherwise noted K:K Ω , M:M Ω .

2. CAPACITORS


Indicated in Capacity (μF) / VOLTAGE (V) unless otherwise noted P:PF.

3. DIODES


No mark diode is 1SS133.




: The power supply is shown with the marked box.

(TX) : AUDIO SIGNAL ROUTE (TUNER)
 (AM) : AM SIGNAL ROUTE
 (FM) : FM SIGNAL ROUTE

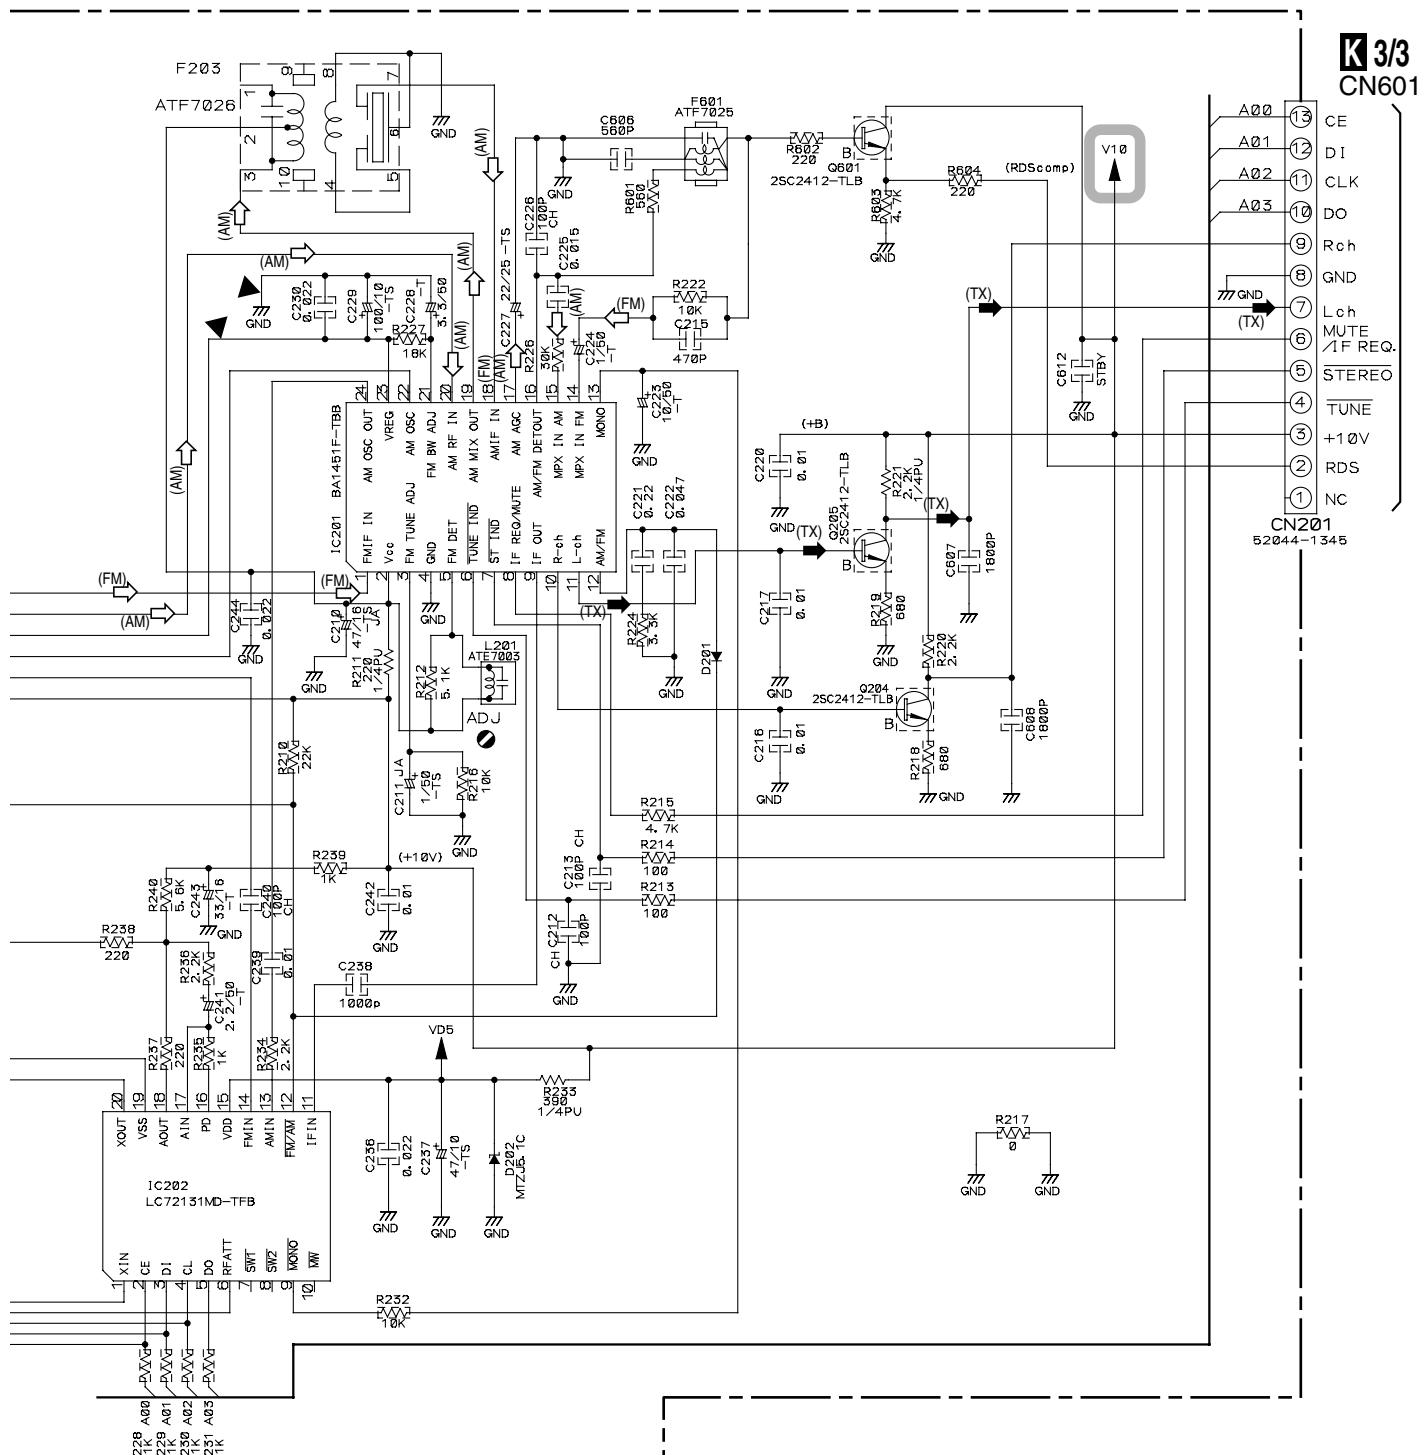



3.7 7.1CH I/O, V-AUDIO IN, FRONT IN and OPTICAL IN ASSYS

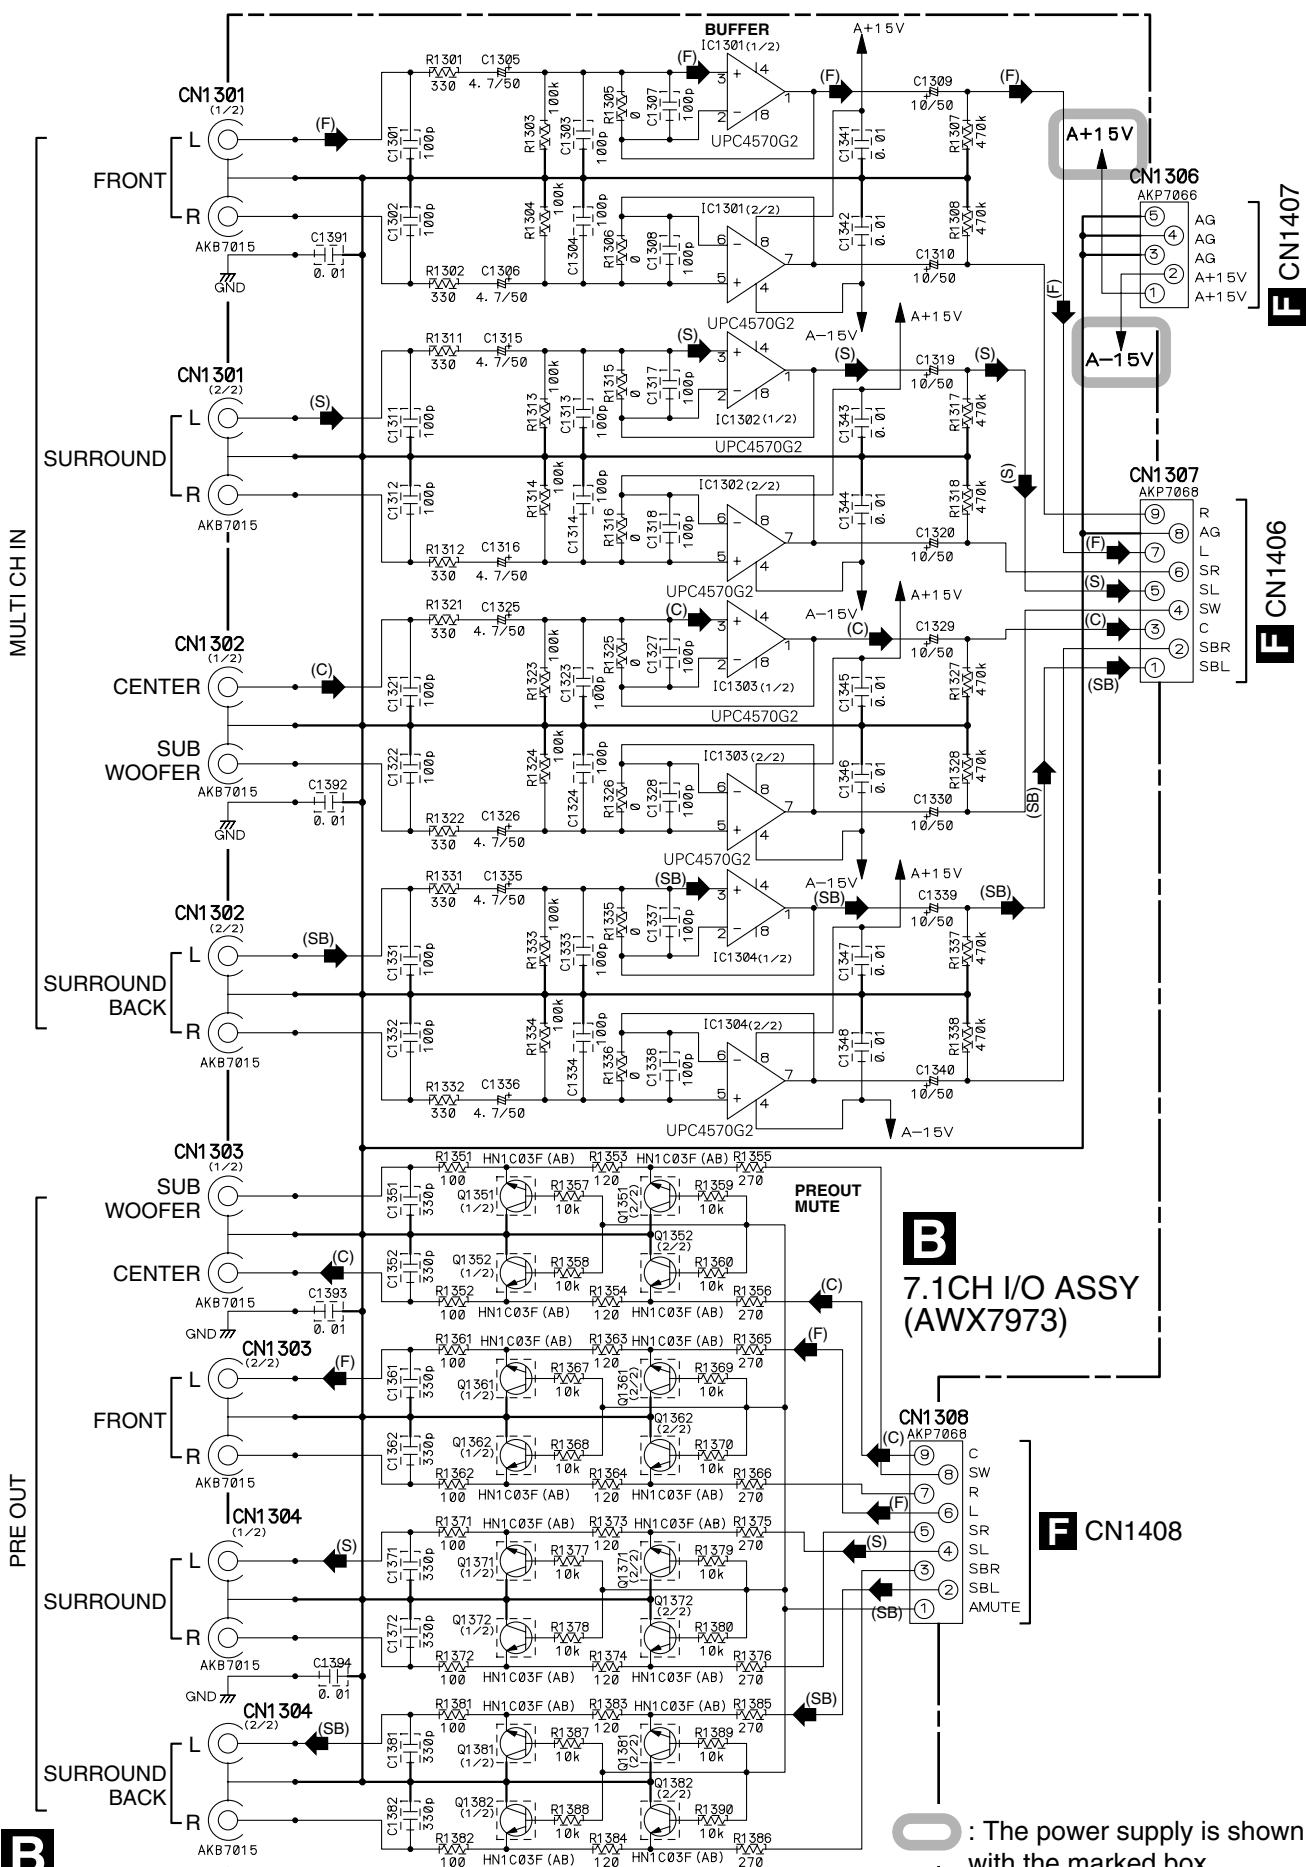

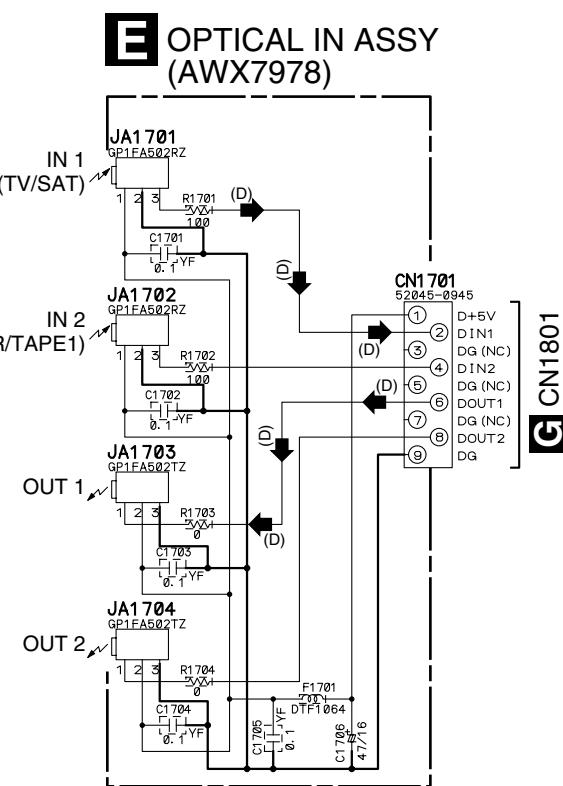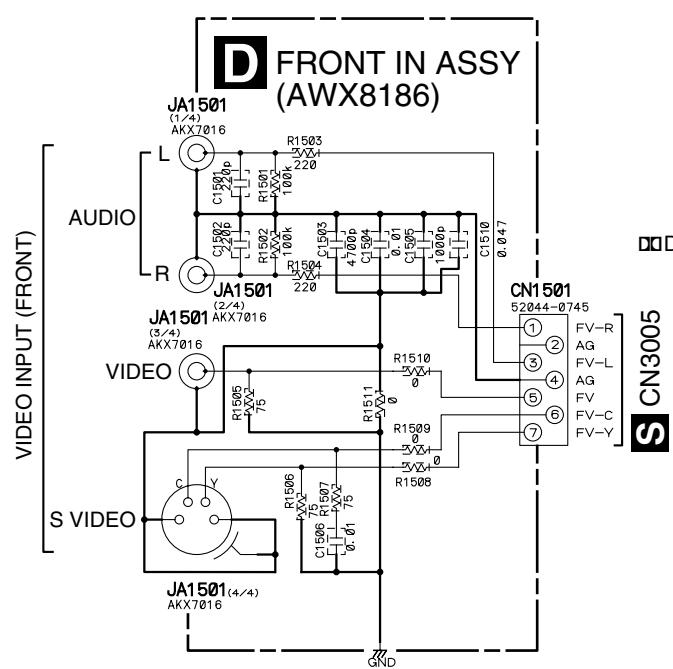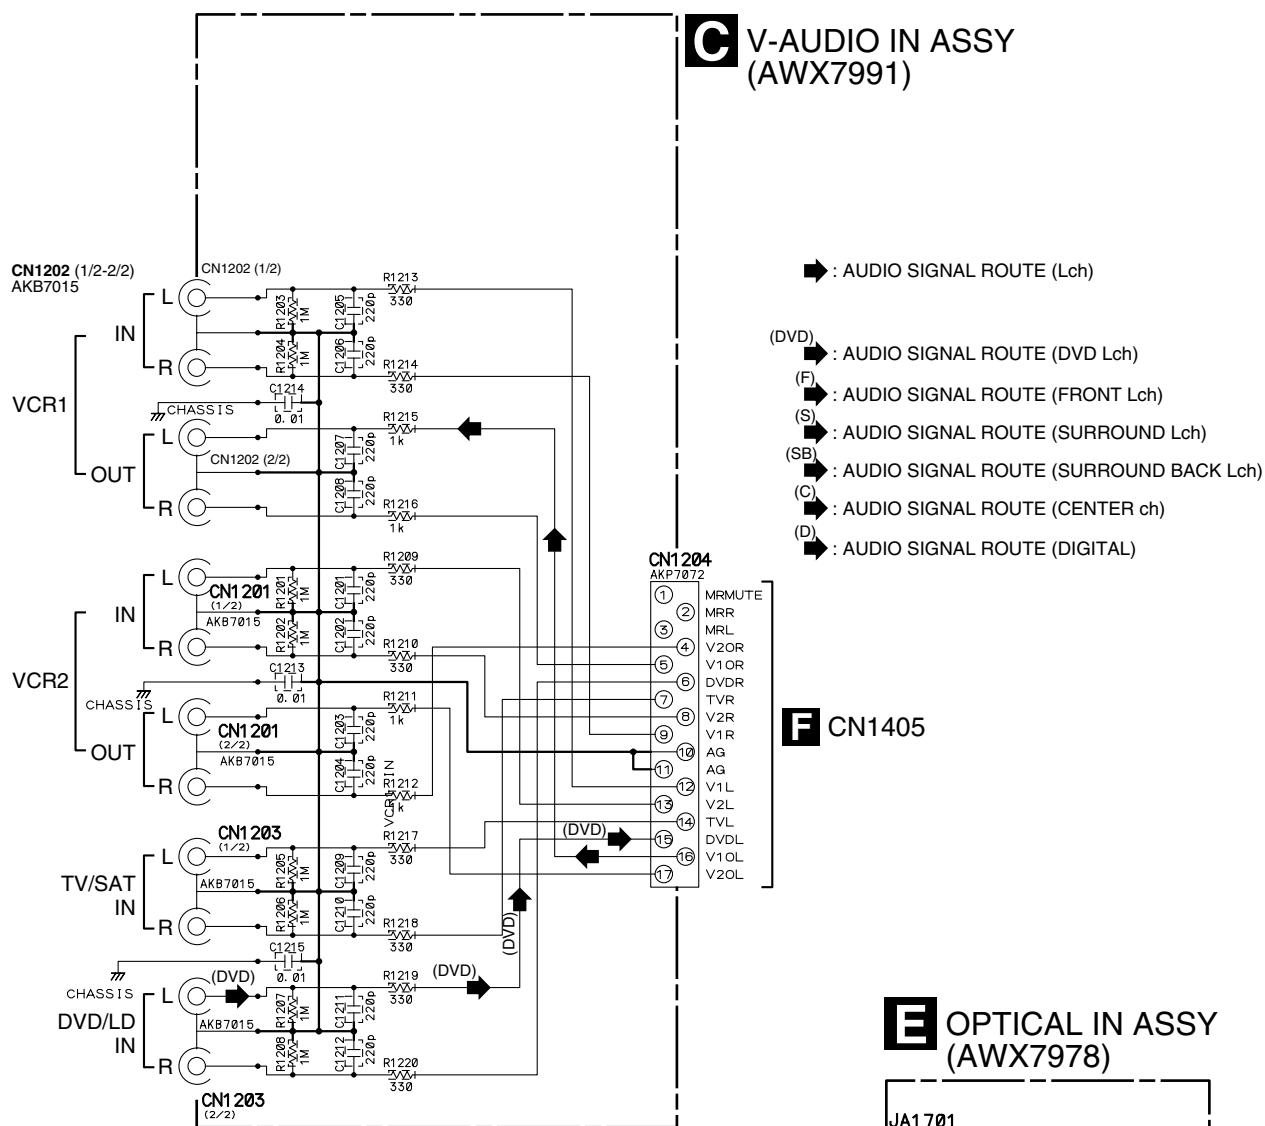


3.8 INPUT CONNECT and COAXIAL IN ASSYS

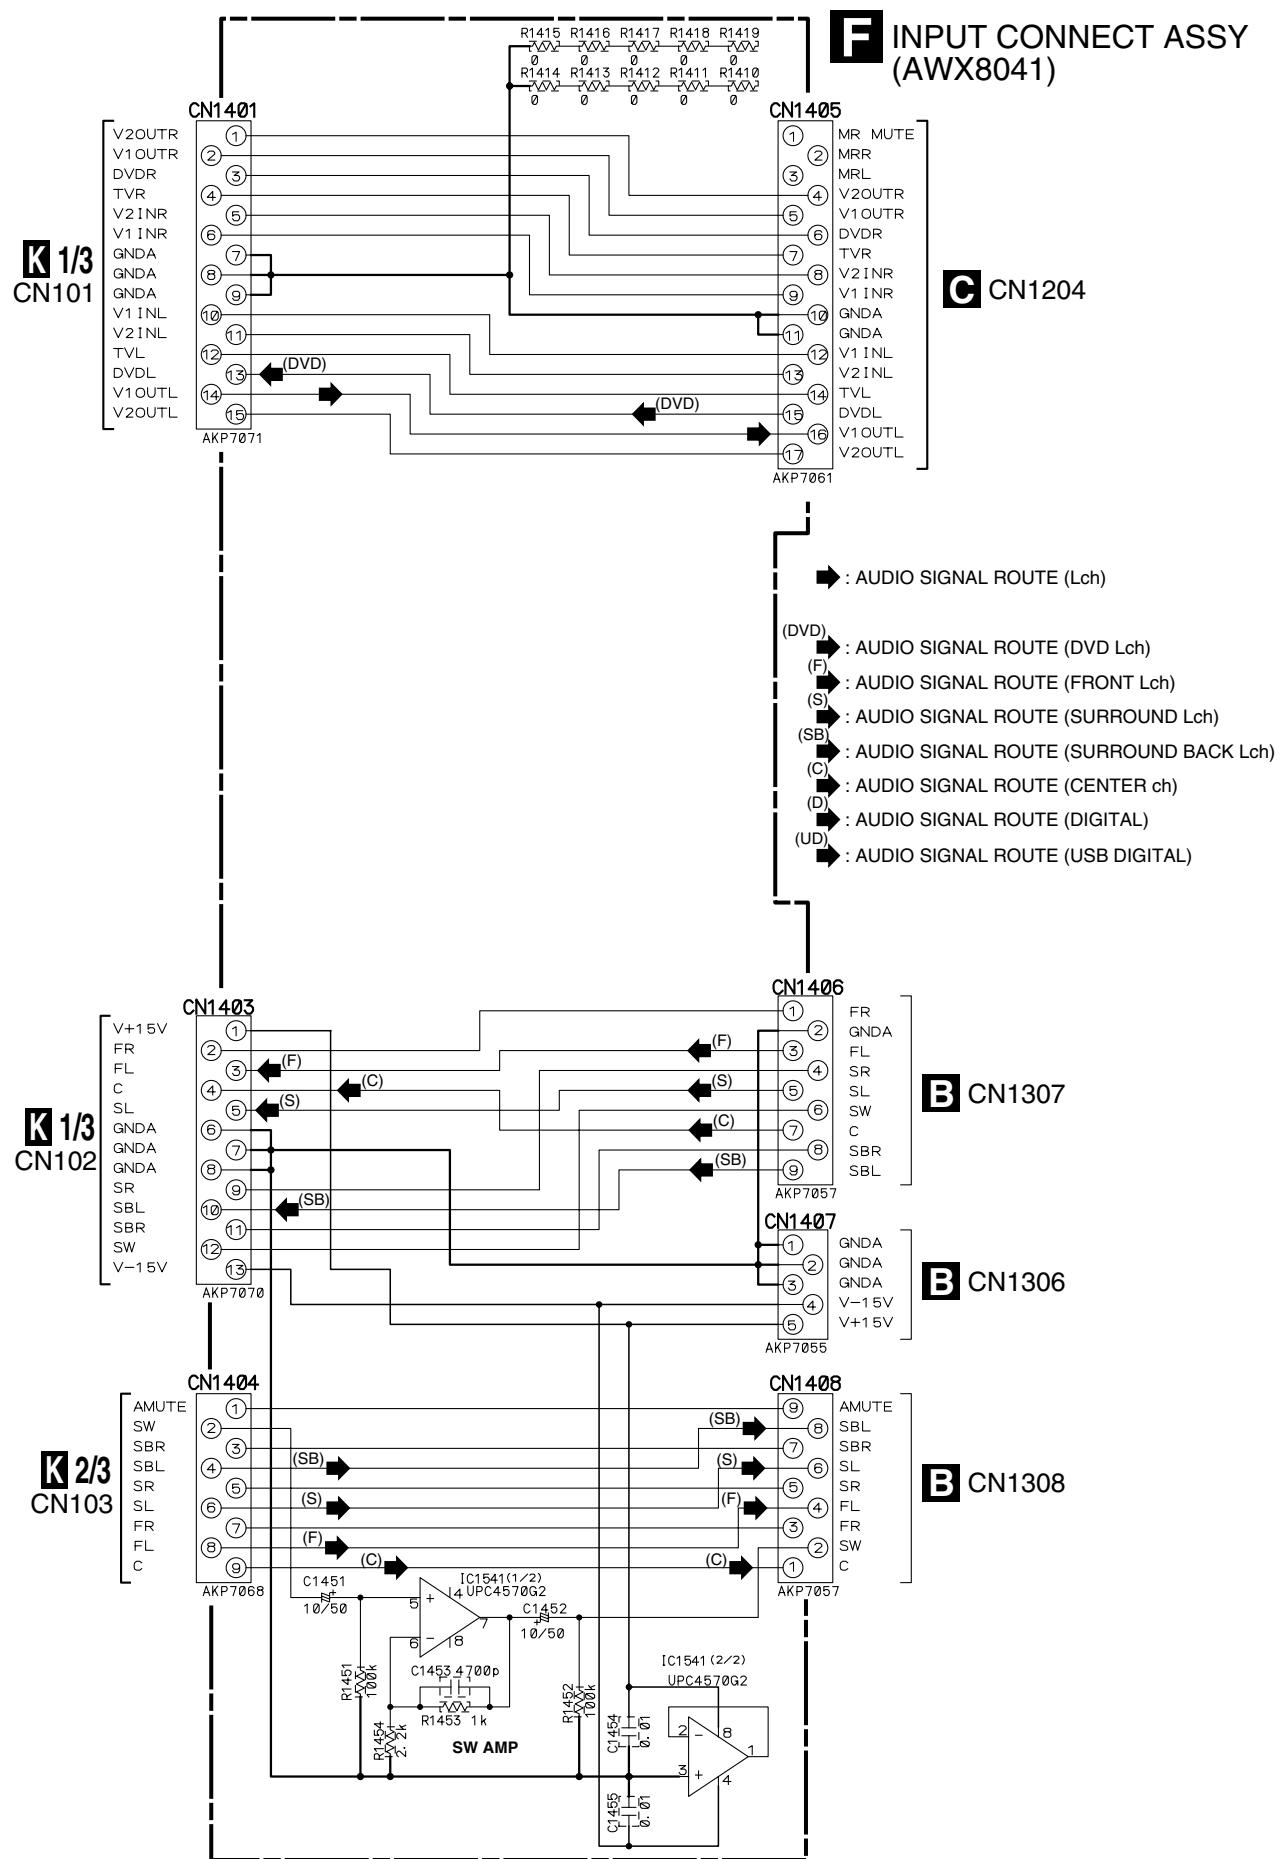

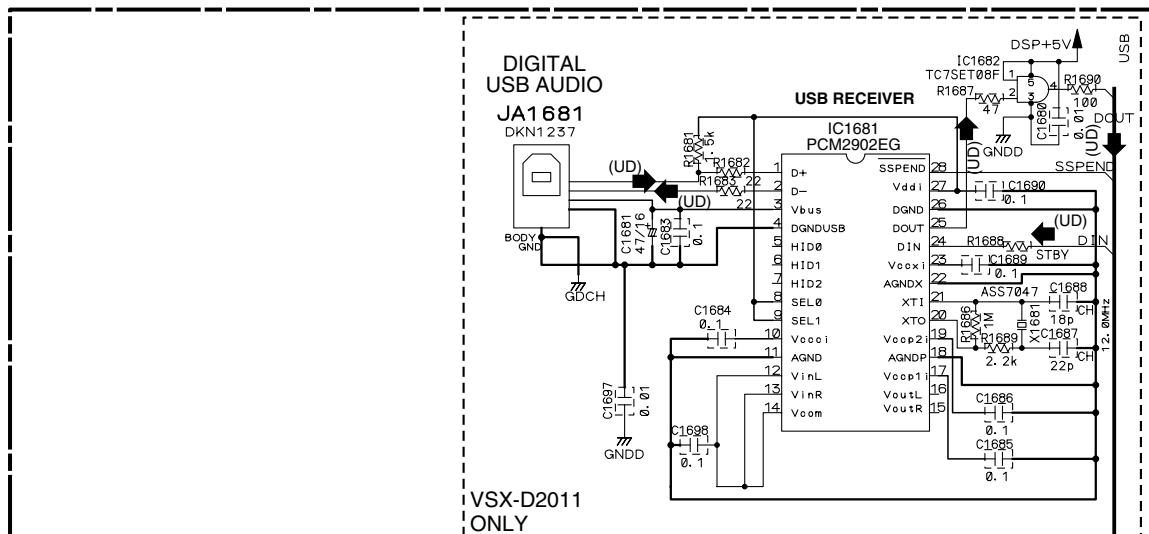

G COAXIAL IN ASSY (VSX-D2011 : AWX7965) (VSX-D1011 : AWX8013)

: The power supply is shown with the marked box.

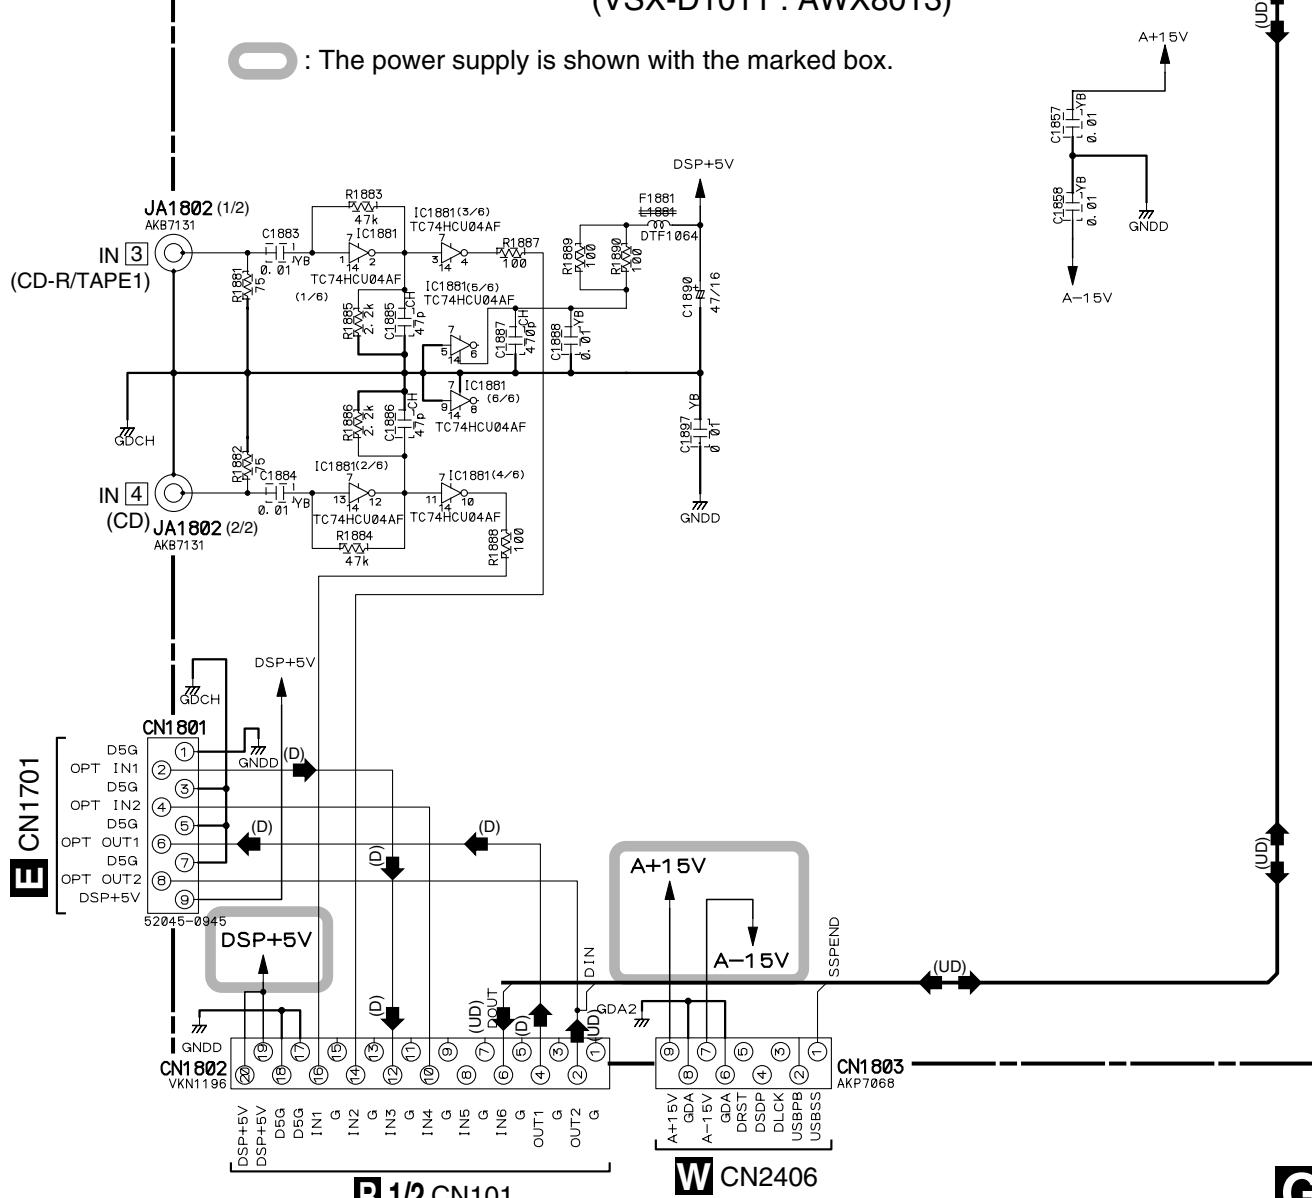

R 1/2 CN101


W CN2406

G

3.9 VIDEO ASSY


H VIDEO ASSY

(VSX-D2011 : AWX8001)
(VSX-D1011 : AWX8002)


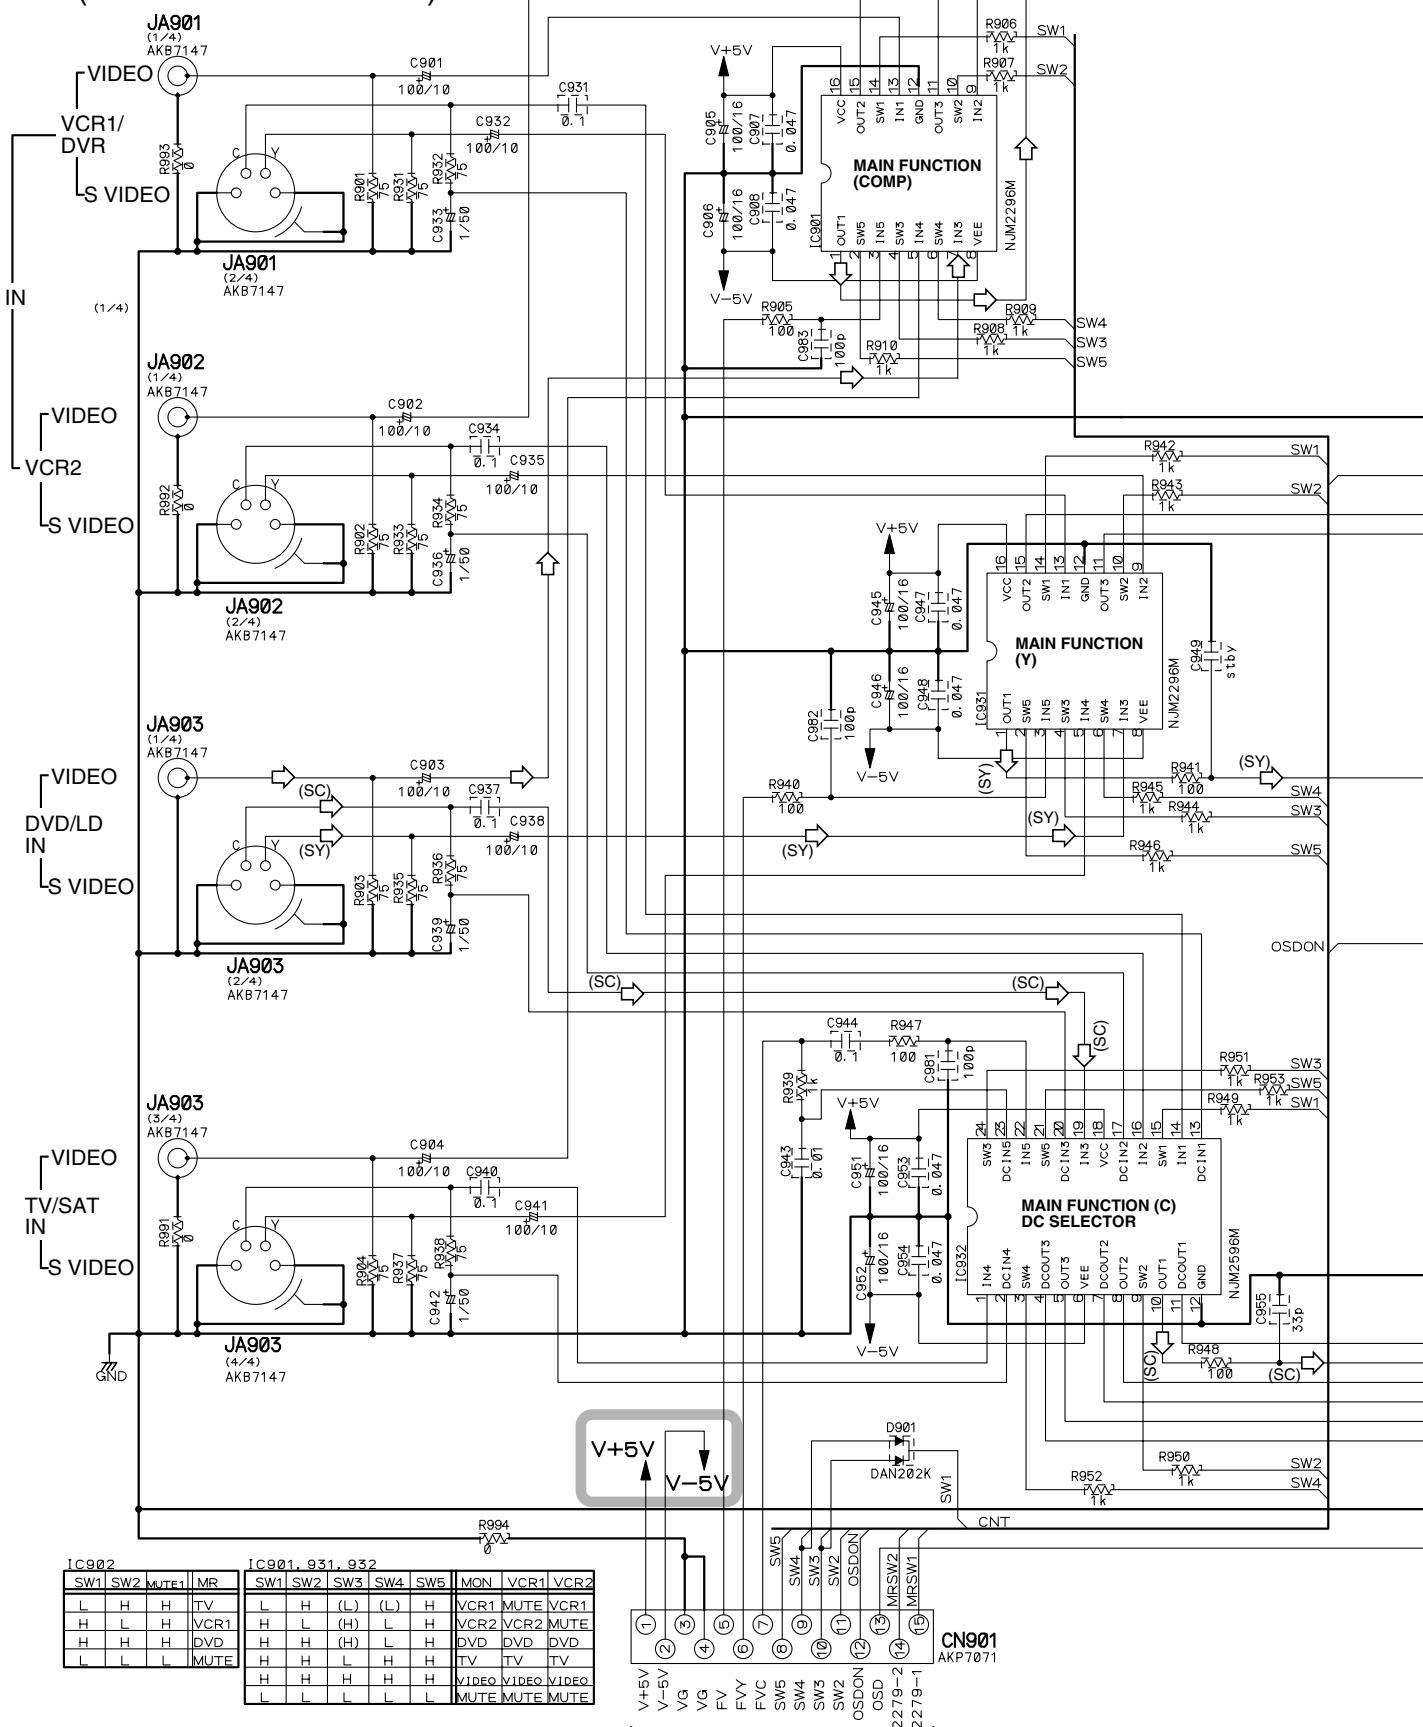


H


W CN2405

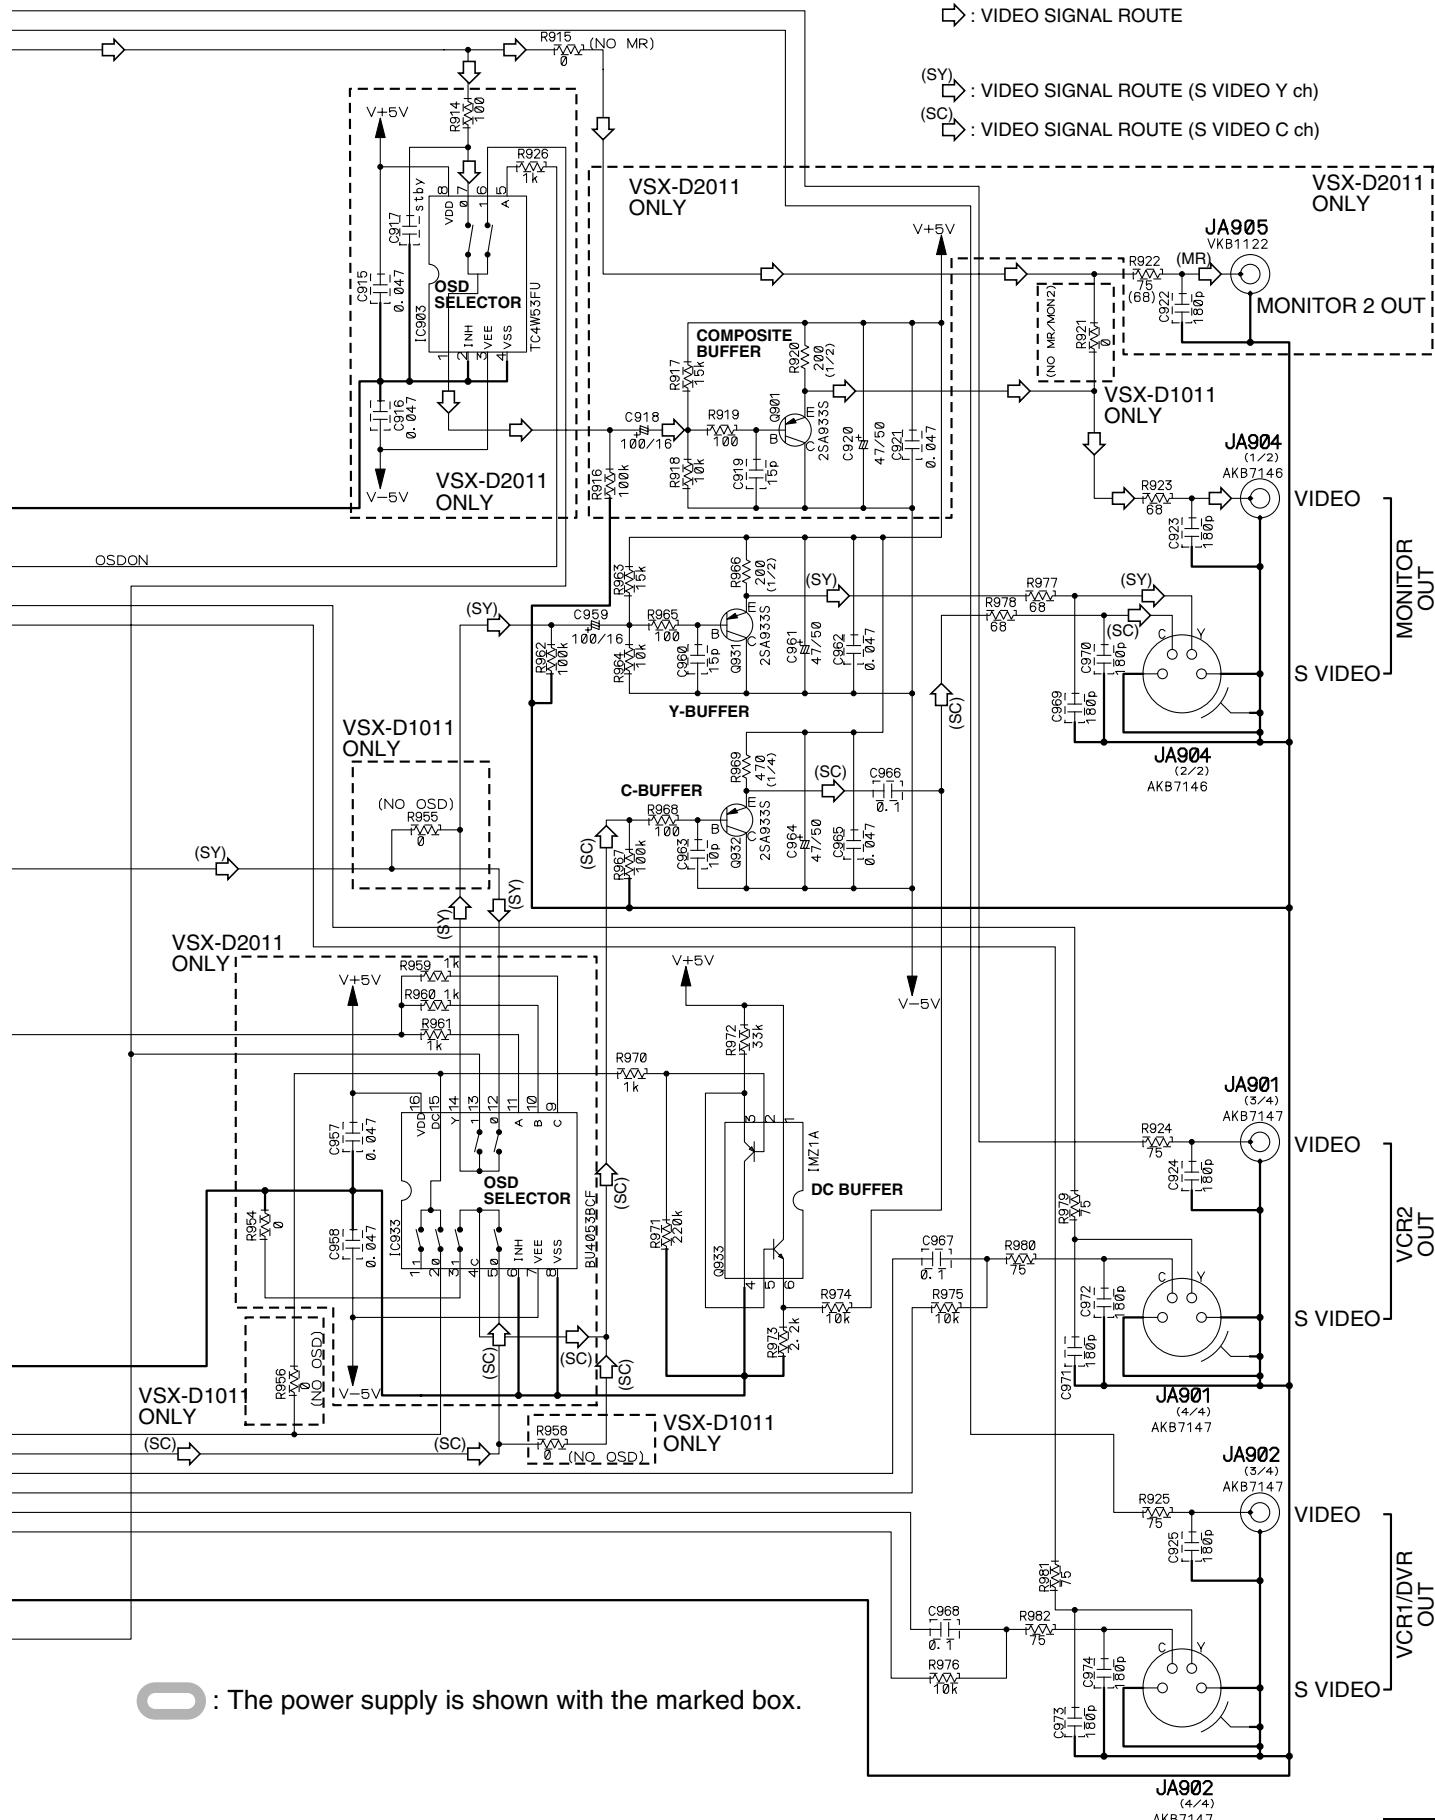


3.10 COMPONENT and MECHA SW ASSYS

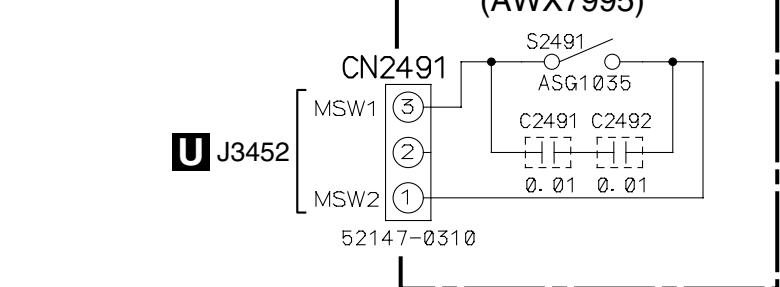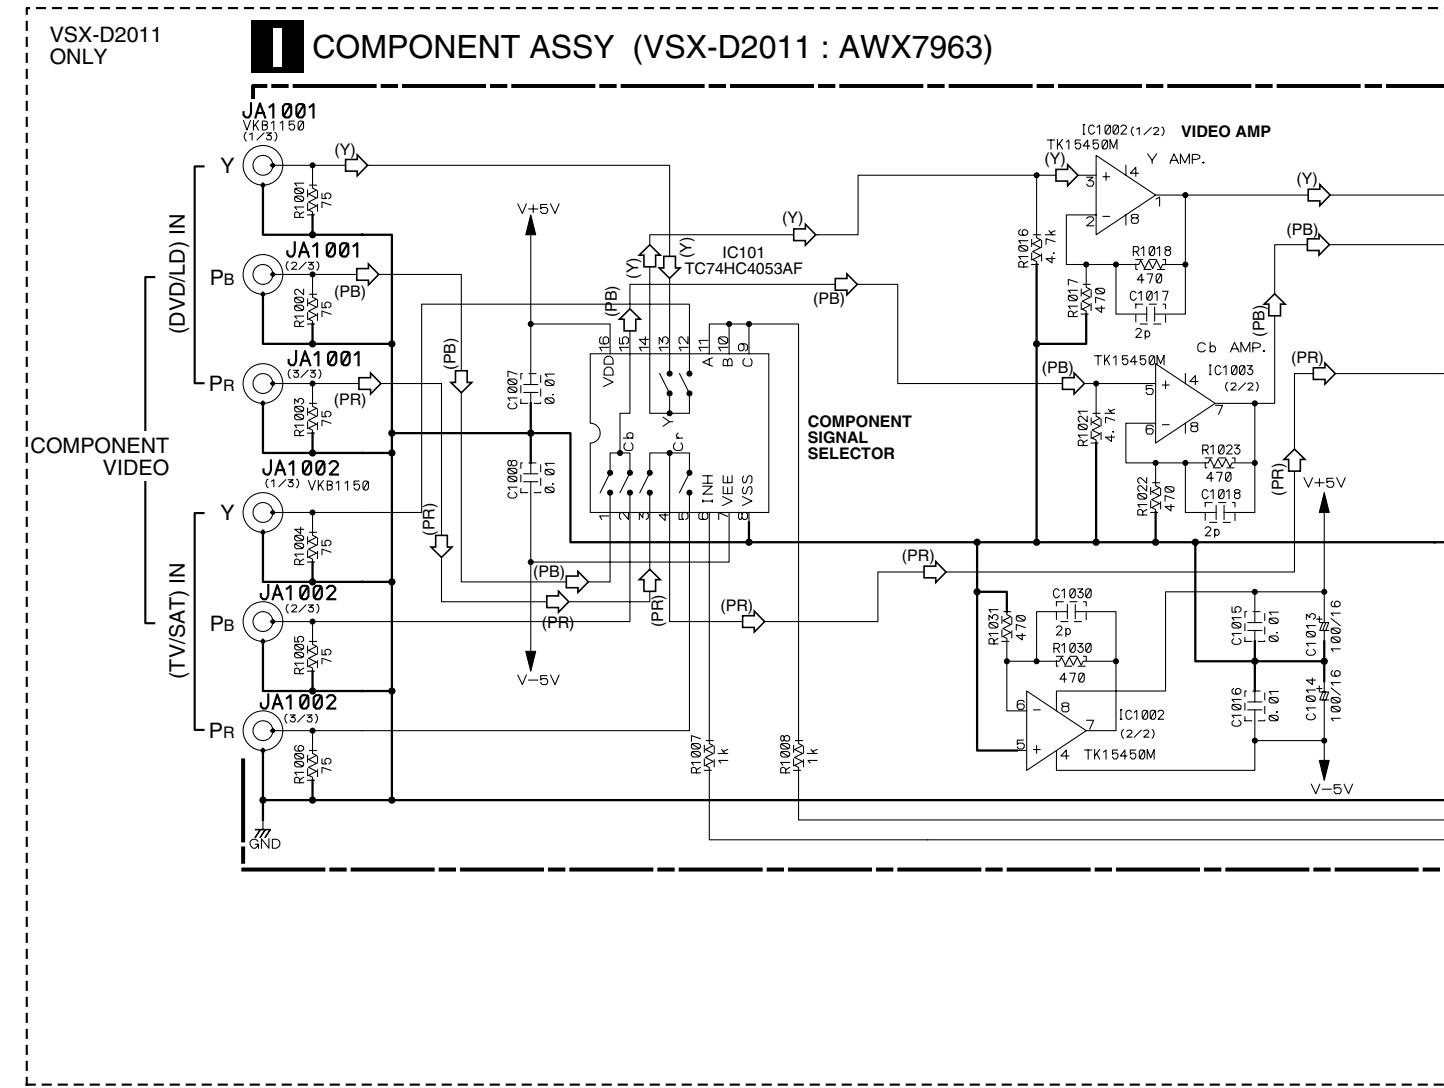

: The power supply is shown with the marked box.

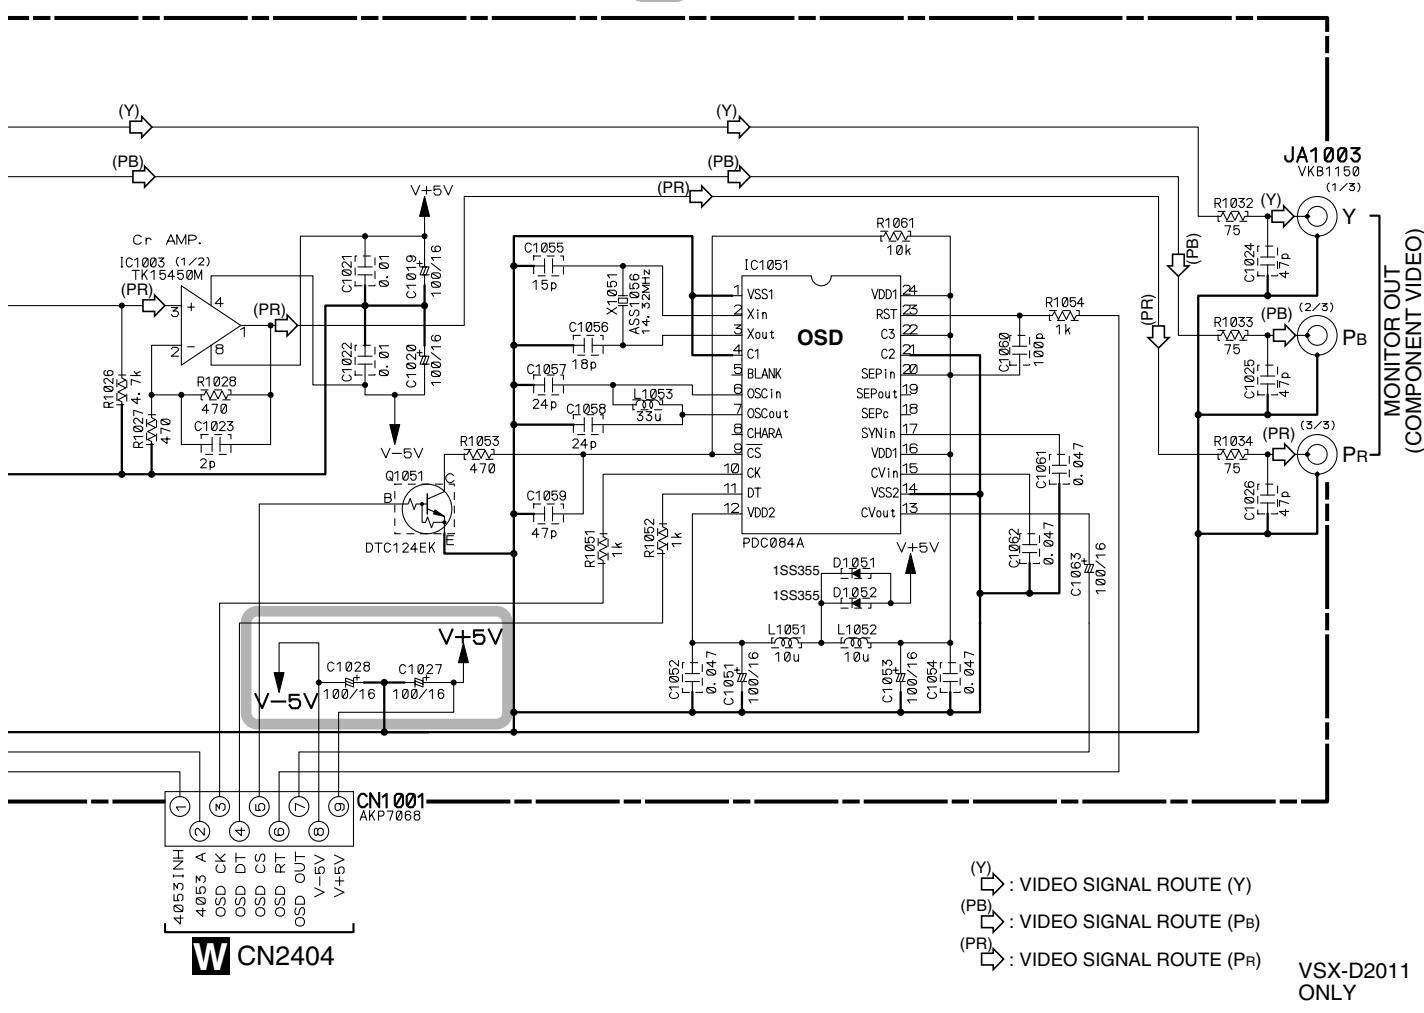


3.11 MAIN CONTROL ASSY (1/3)

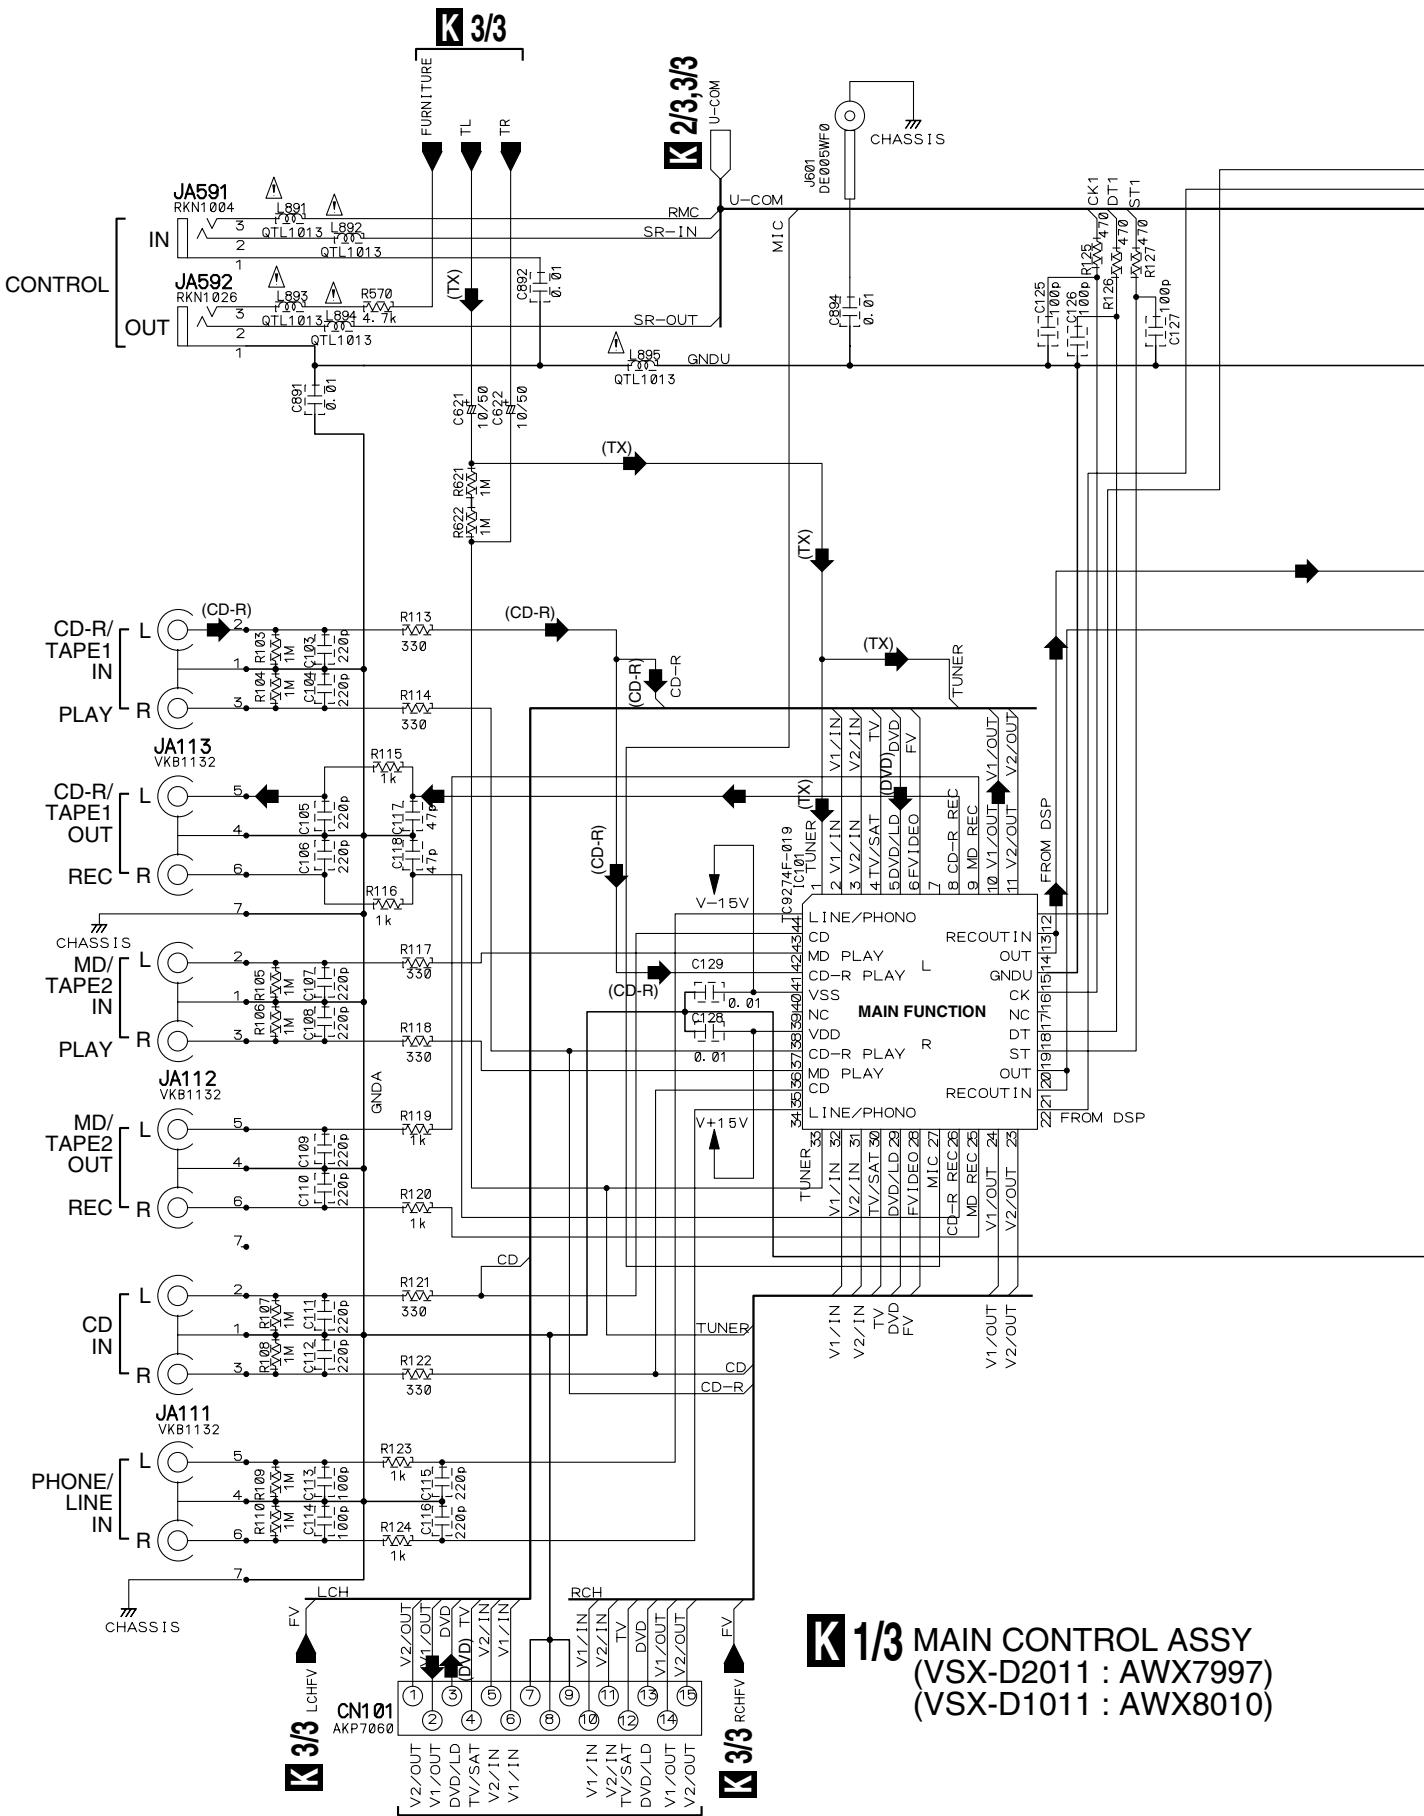

K 1/3

F CN1401

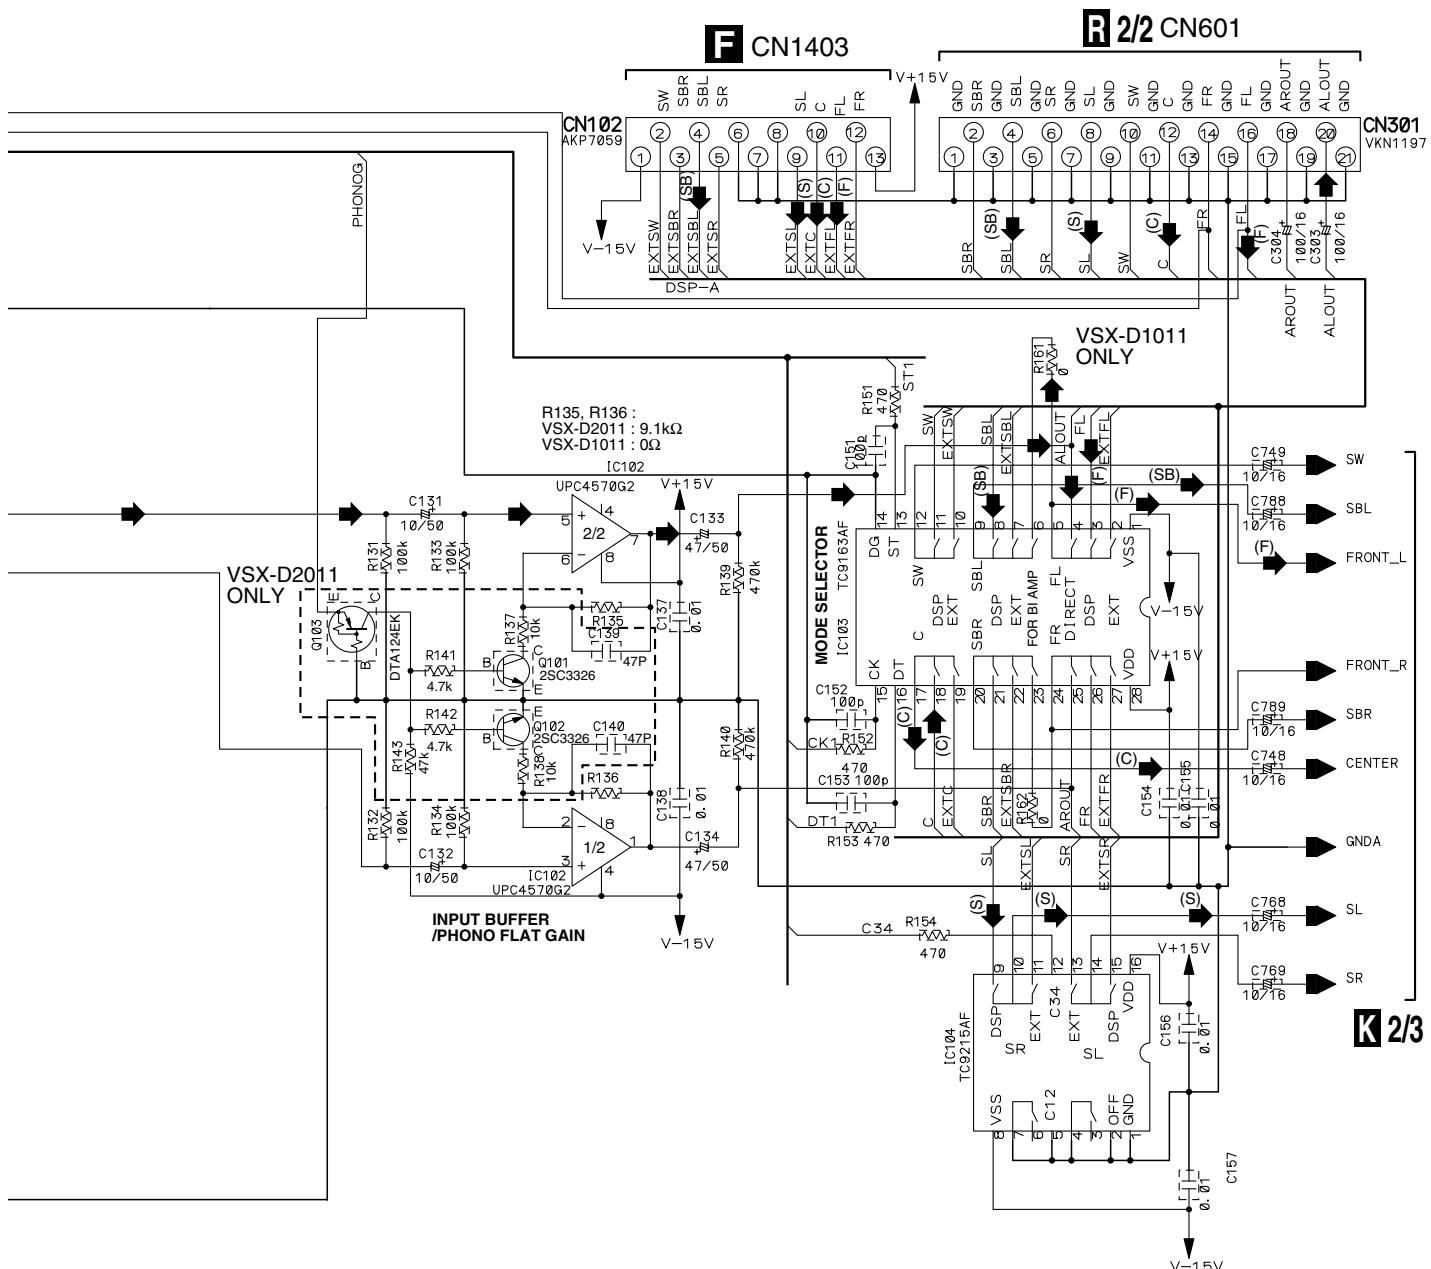

► : AUDIO SIGNAL ROUTE (Lch)

► : AUDIO SIGNAL ROUTE (CD-R)

▶ : AUDIO SIGNAL ROUTE (CD-R Lch)
(TX).

(BVB)

→ : AUDIO SIGNAL ROUTE (DVD Lch)

→ . AUDIO SIGNAL ROUTE (DVB-F)

→ : AUDIO SIGNAL ROUTE (FRONT Lch)
(S)

→ : AUDIO SIGNAL ROUTE (SURROUND Lch)

(SB) → : AUDIO SIGNAL ROUTE (SURROUND)

(C) AUDIO SIGNAL ROUTE (CENTER-LY)

→ : AUDIO SIGNAL ROUTE (CENTER ch)

5


5


VSX-D2011-S

K 1/3


3.12 MAIN CONTROL ASSY (2/3)

K 2/3 MAIN CONTROL ASSY
(VSX-D2011 : AWX7997)
(VSX-D1011 : AWX8010)

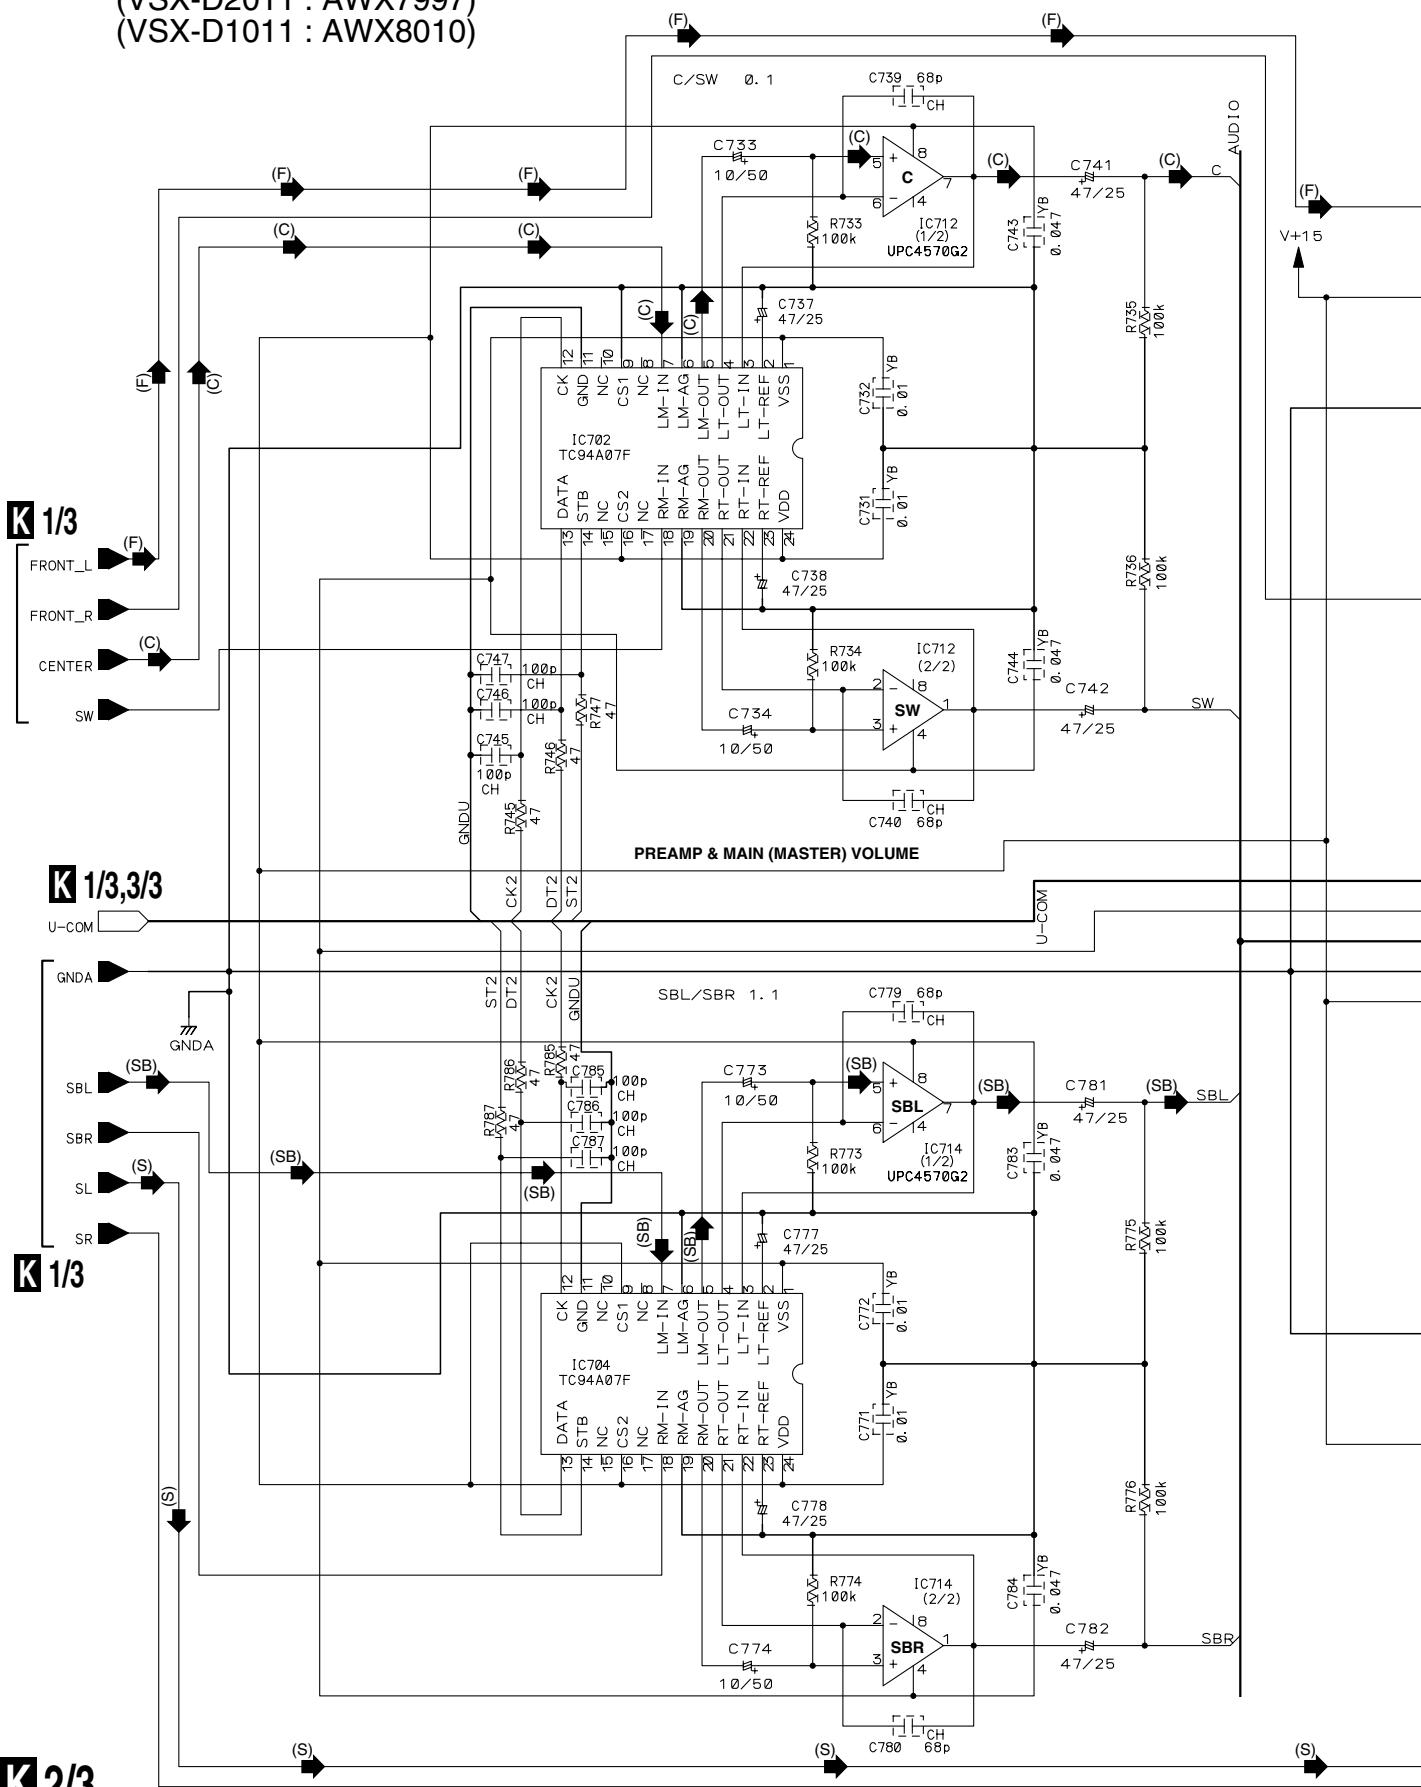

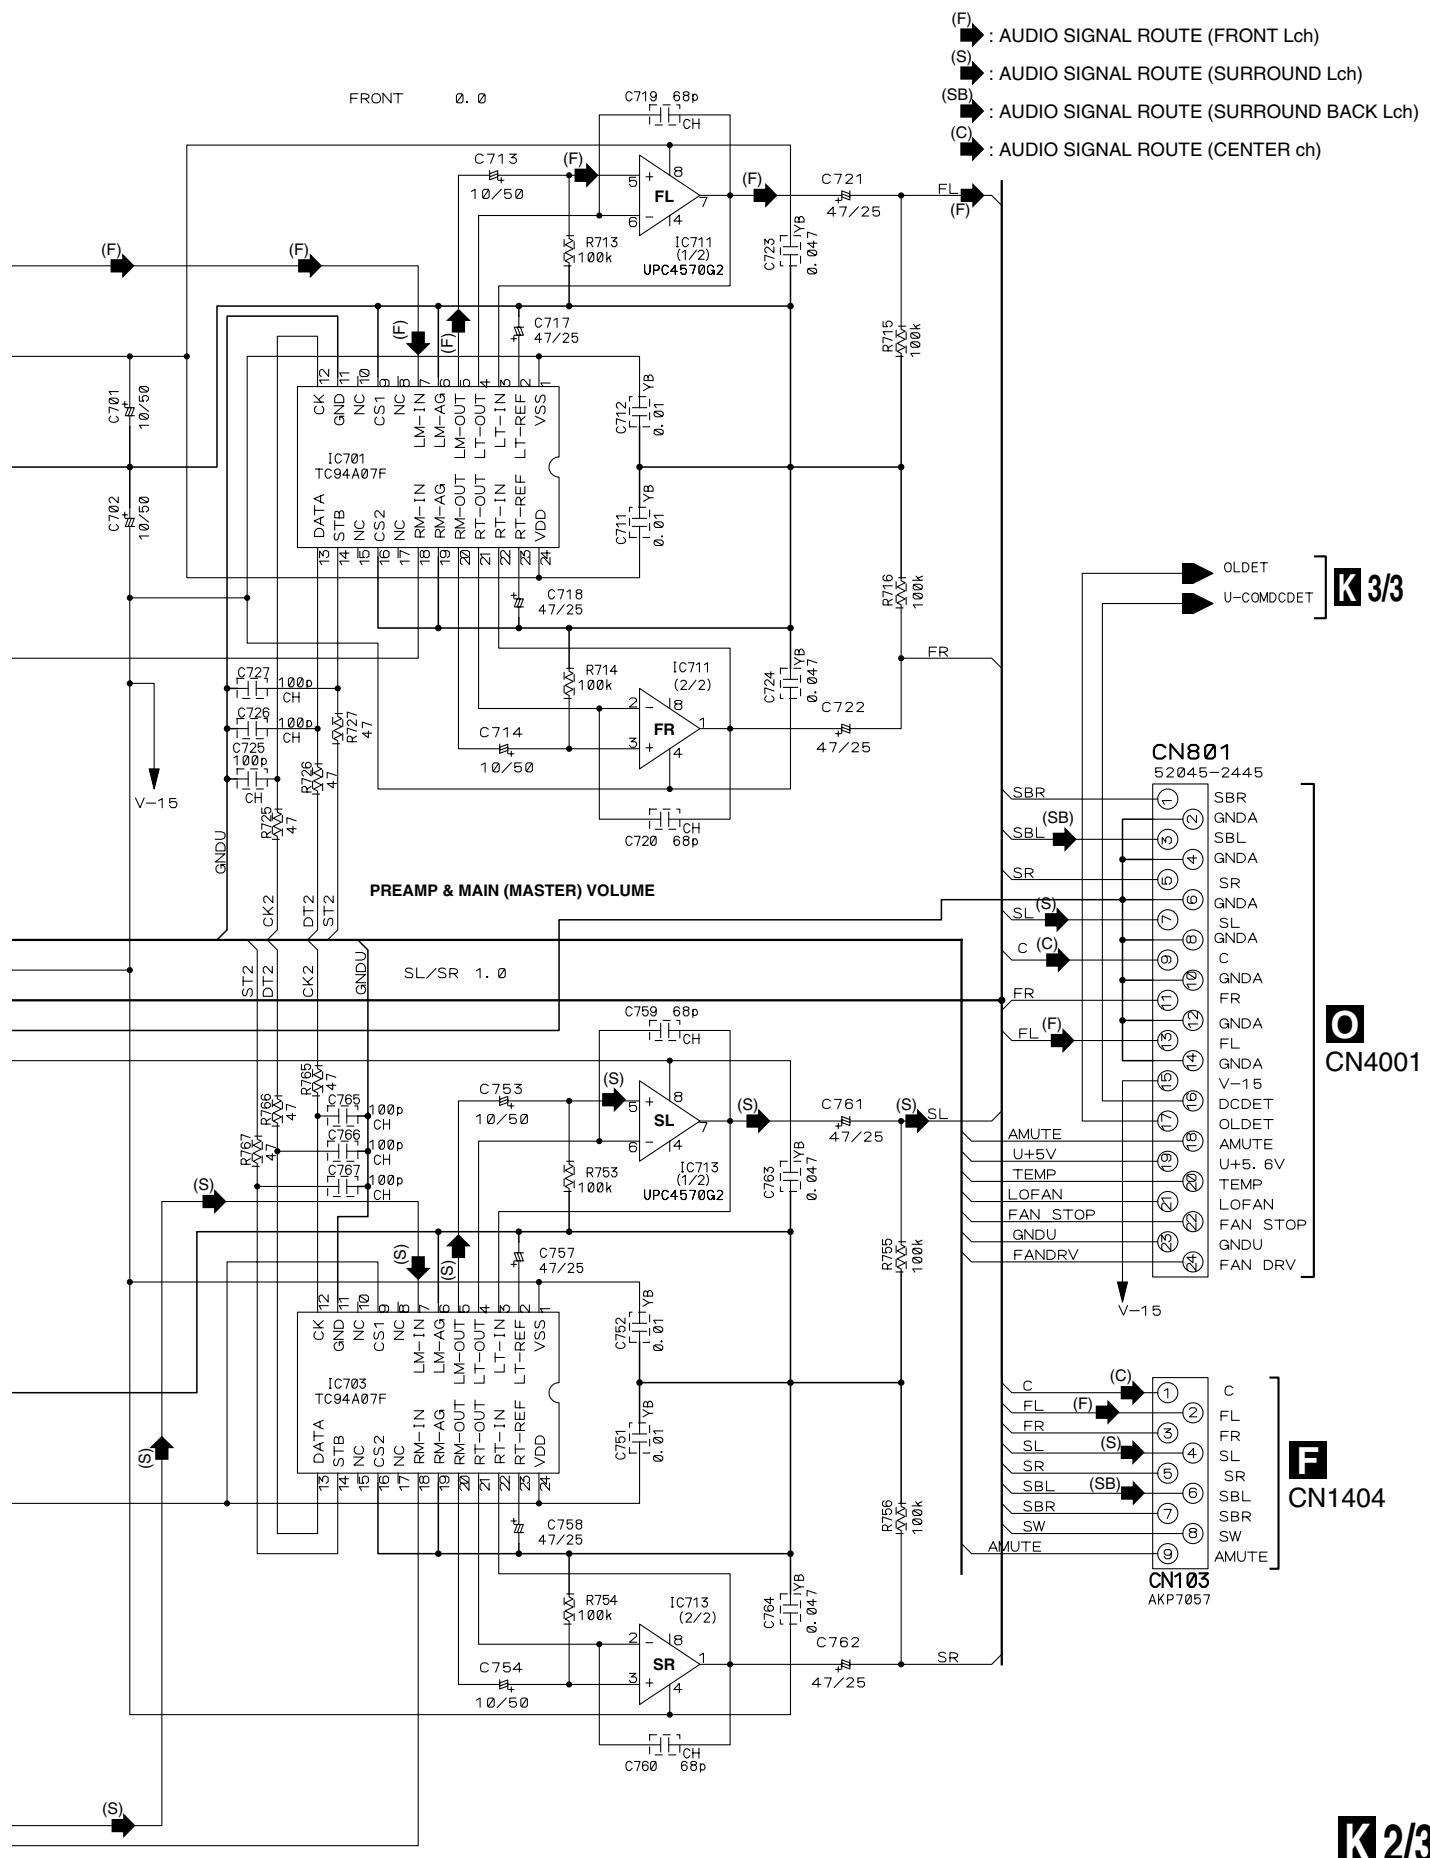


3.13 MAIN CONTROL ASSY (3/3)

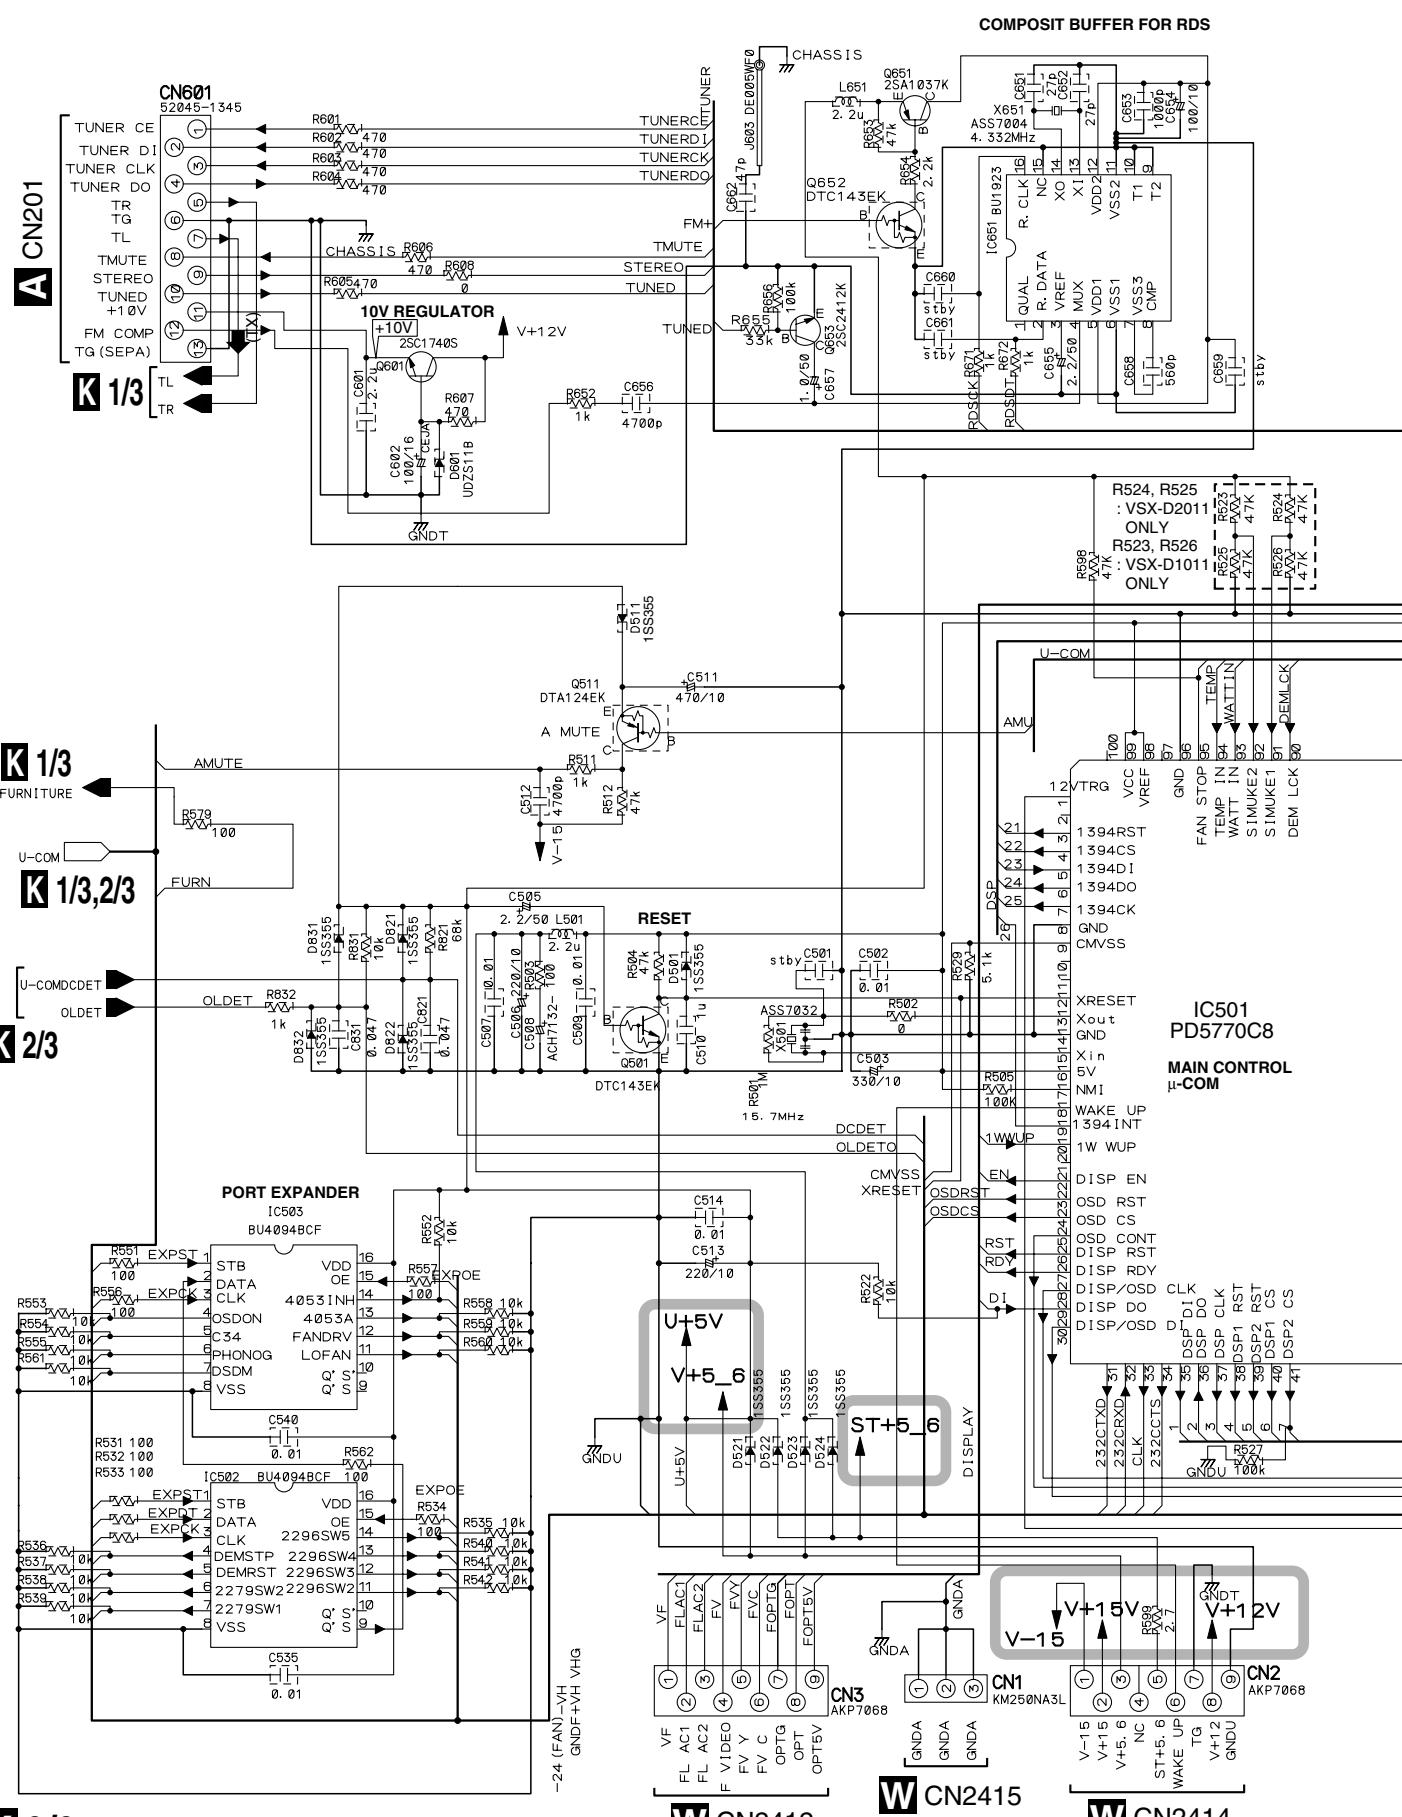

S CN3006

K 3/3 MAIN CONTROL ASSY
 (VSX-D2011 : AWX7997)
 (VSX-D1011 : AWX8010)


(TX) → : AUDIO SIGNAL ROUTE (TUNER Lch)

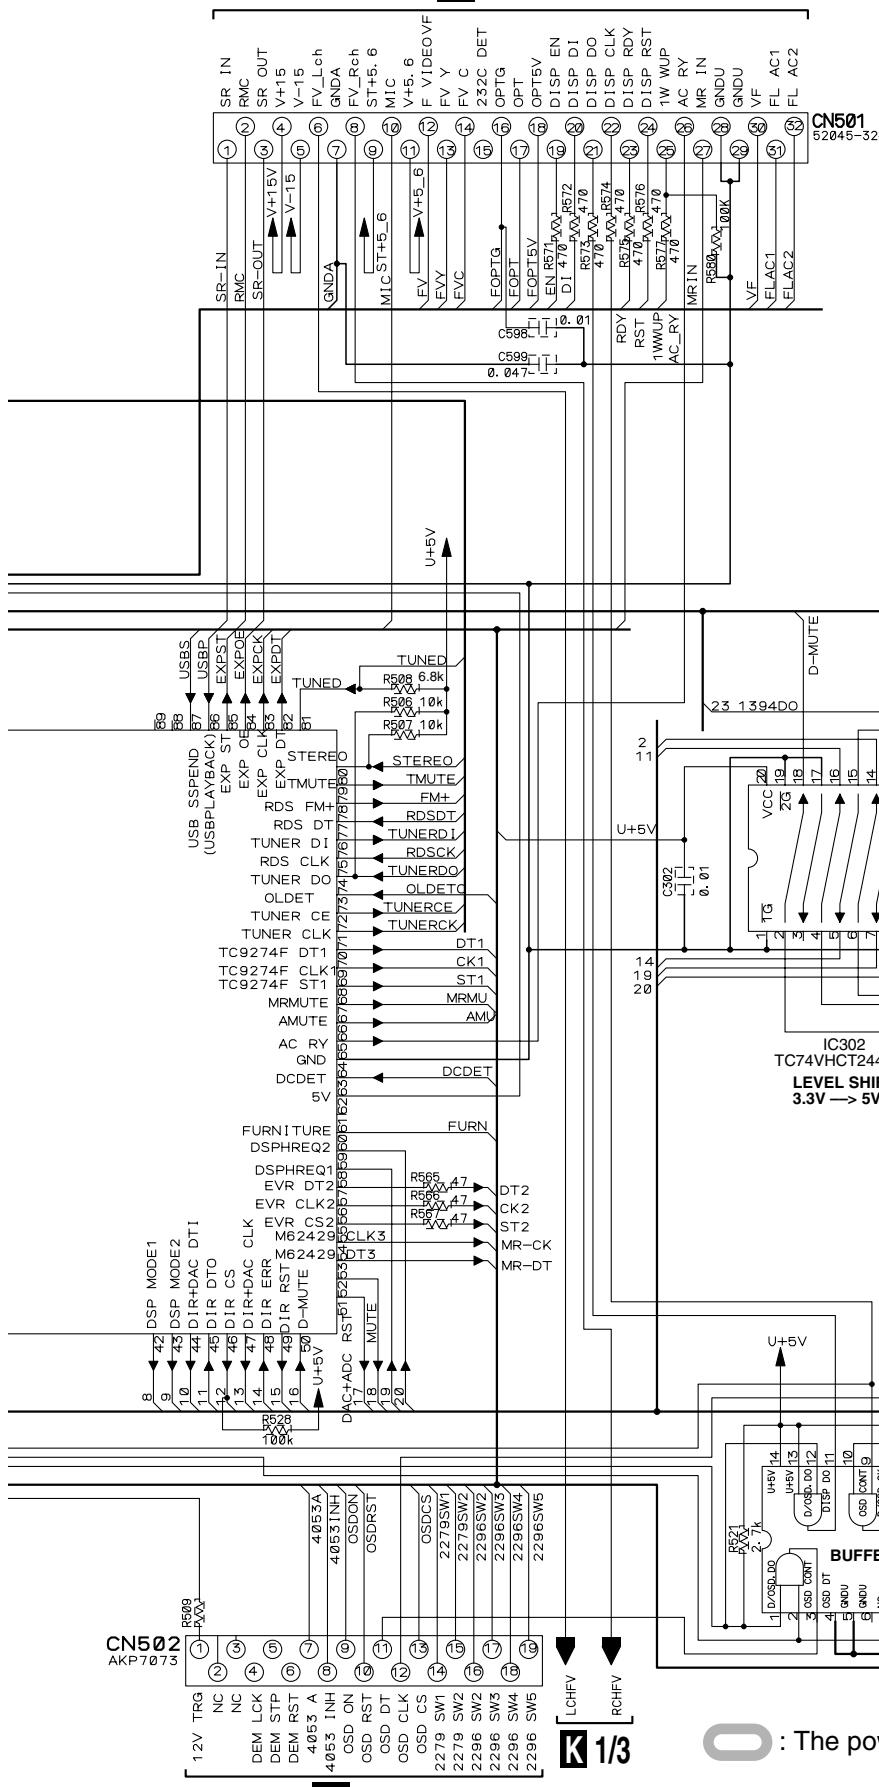


K 1/3

W CN2413

W CN2411

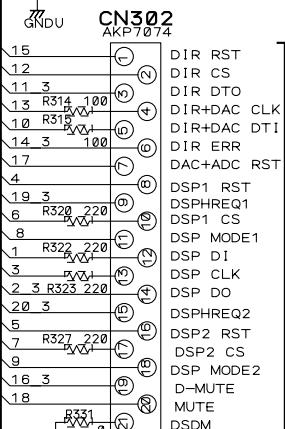




W CN2410

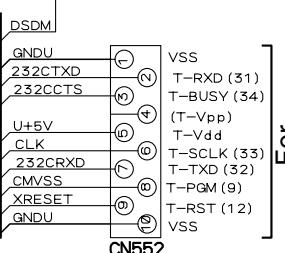

For Flash ROM

3.14 MIC & F.OPT IN, MIC AMP and DSP CONNECTION ASSYS


A

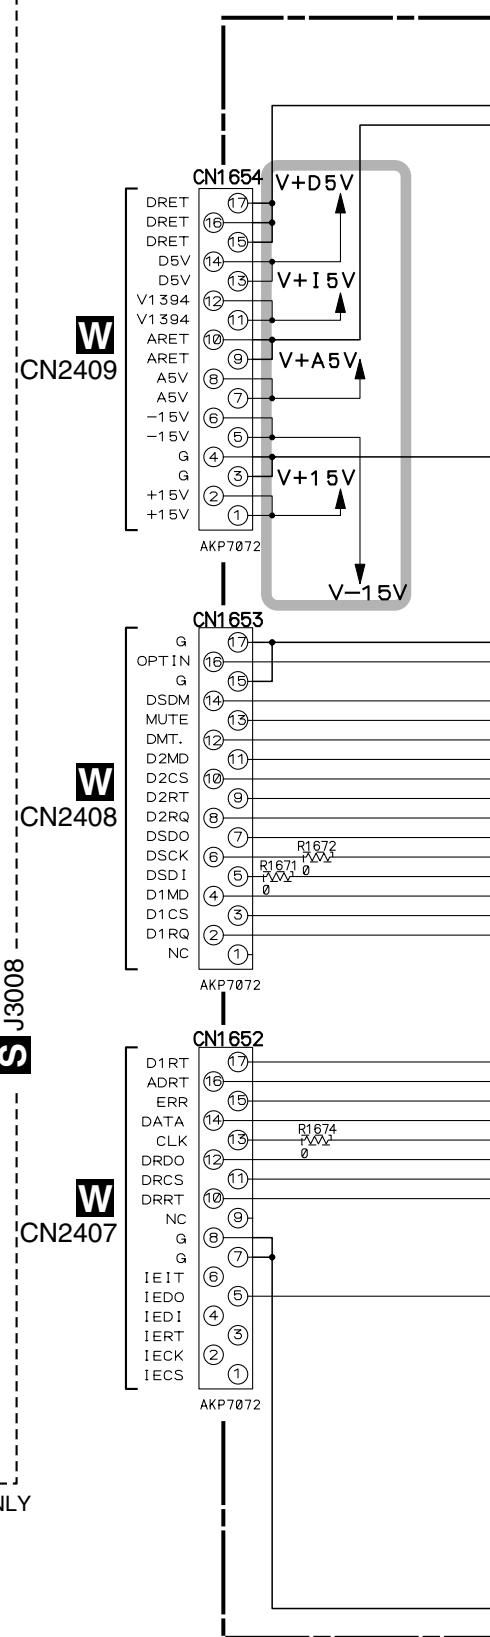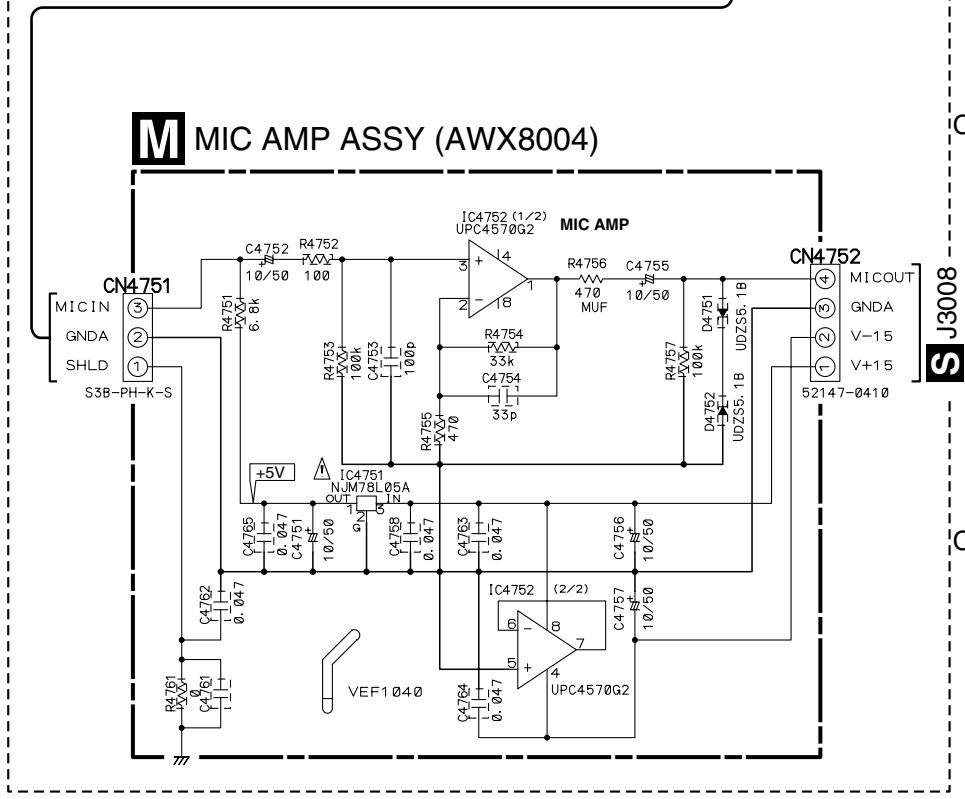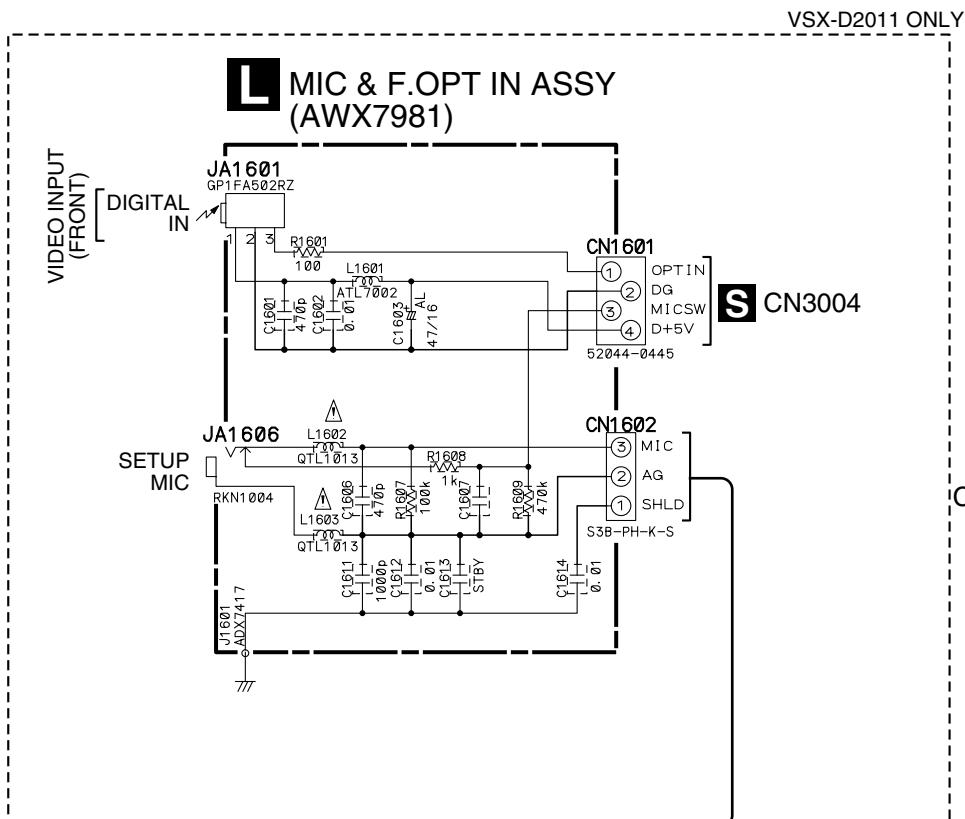

: The power supply is shown with the marked box.

L M N

N DSP CONNECTION ASSY (AWX8024)

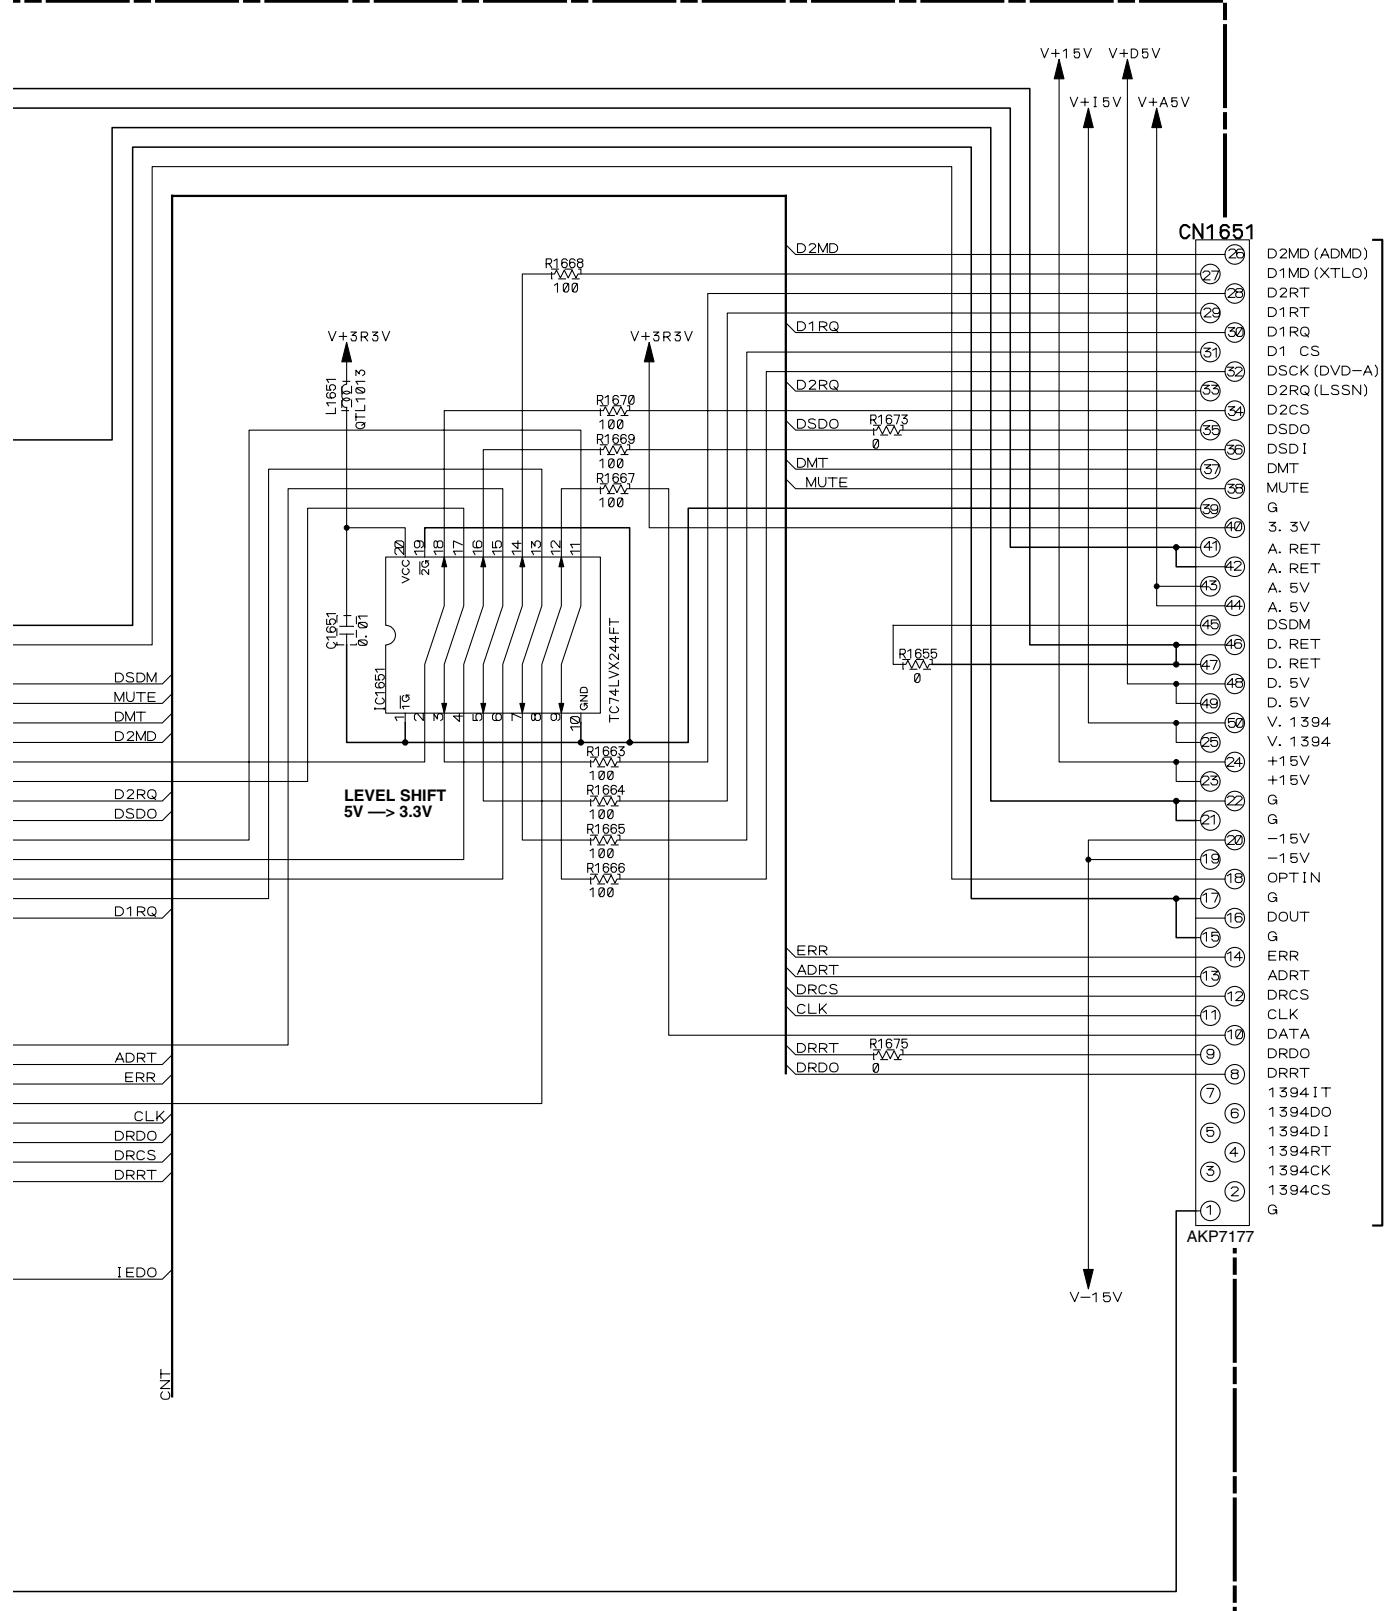

R 1/2 CN102

N


3.15 POWER AMP IN, FAN DRIVE and FAN CONNECTION ASSYS

A


- (F) : AUDIO SIGNAL ROUTE (FRONT Lch)
- (S) : AUDIO SIGNAL ROUTE (SURROUND Lch)
- (SB) : AUDIO SIGNAL ROUTE (SURROUND BACK Lch)
- (C) : AUDIO SIGNAL ROUTE (CENTER ch)

B

O POWER AMP IN ASSY (AWX7982)

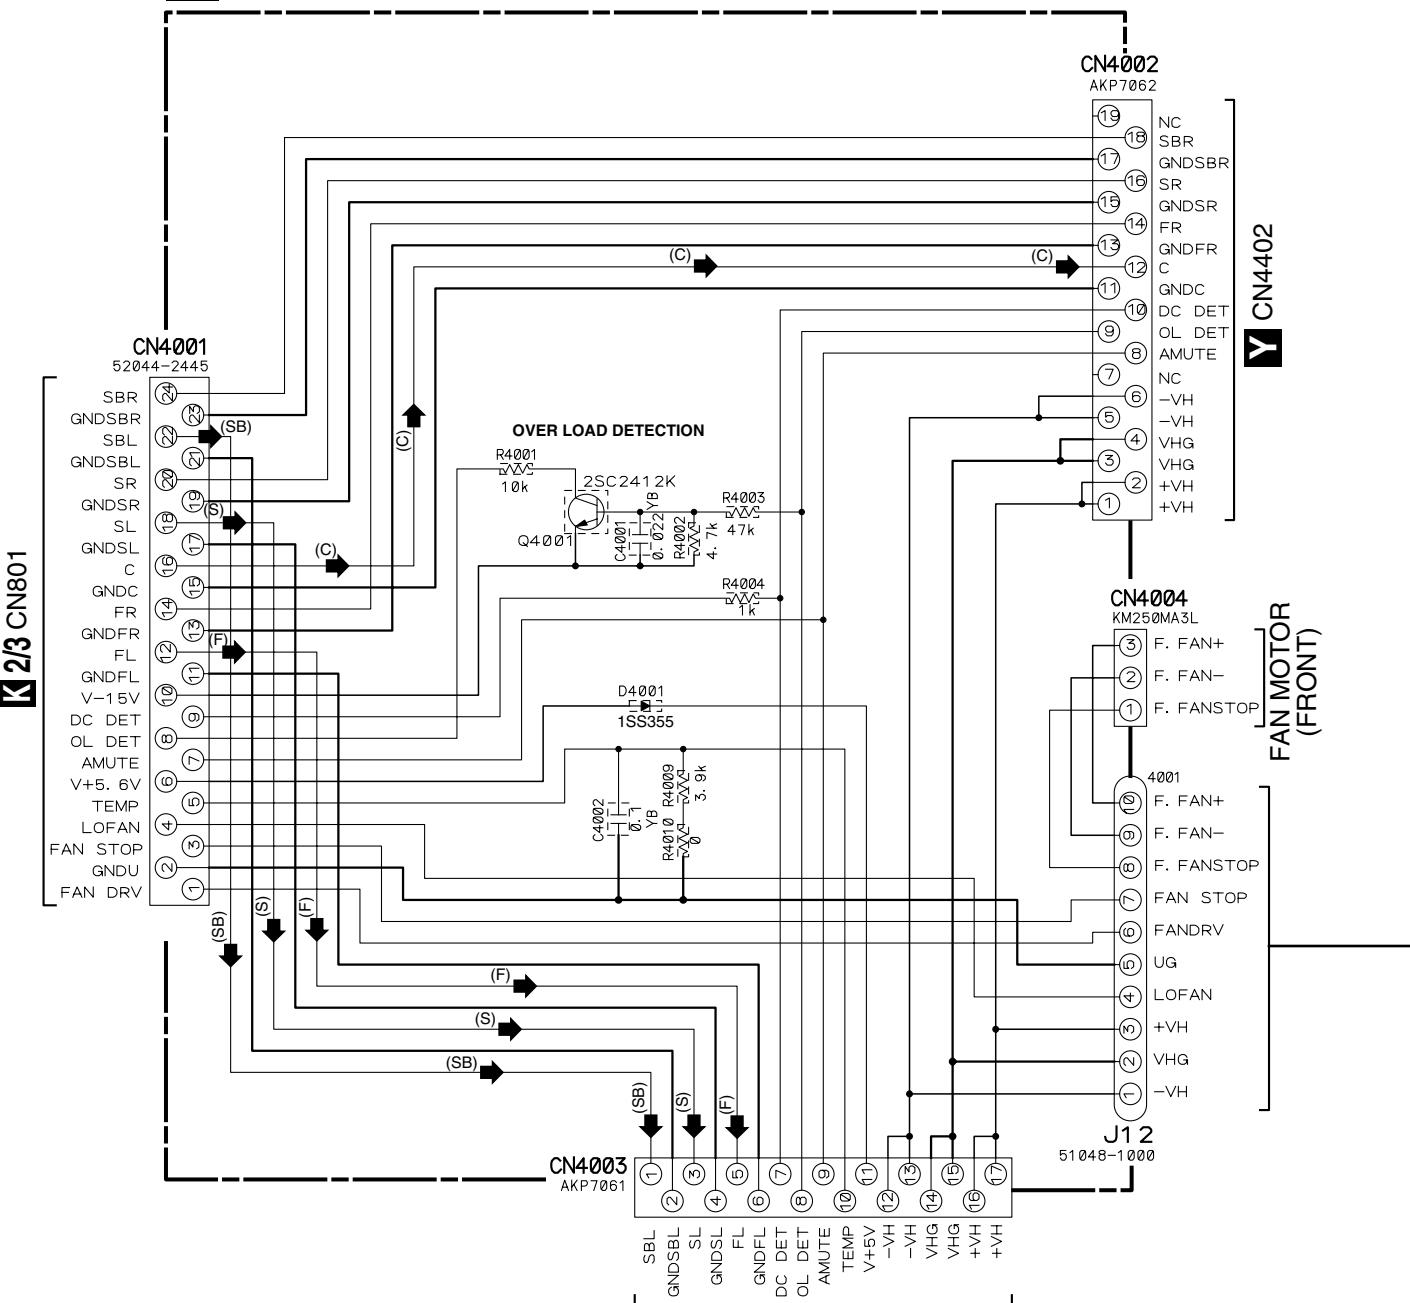


Q FAN CONNECTION ASSY (AWX8005)

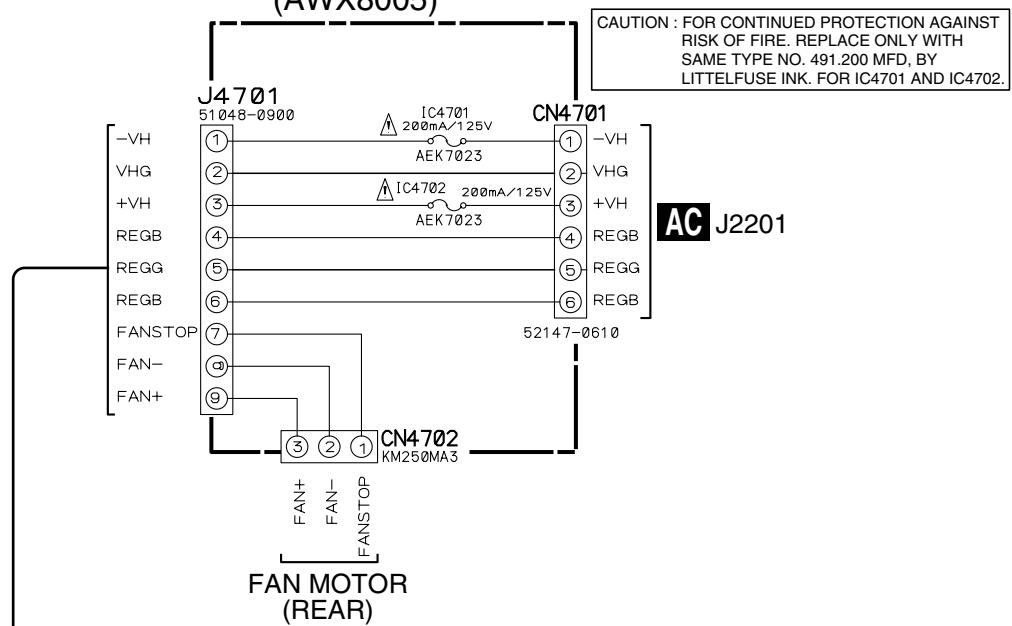

YA CFTYA0000J50-T
 LA CFTLAC000J2A-T
 OH CCSRCH0000J50-T
 YB CKSRYB0000K50-T
 YF CKSRYF0000Z25-T
 1SS355-TRB
 RS1/16S000J-T
 RDR RDR1/4VM000J-T
 (MUF) RD1/4MF000J-T
 3W RS3LMF000J
 NON-FRAMABLE


P FAN DRIVE ASSY (AWX8135)

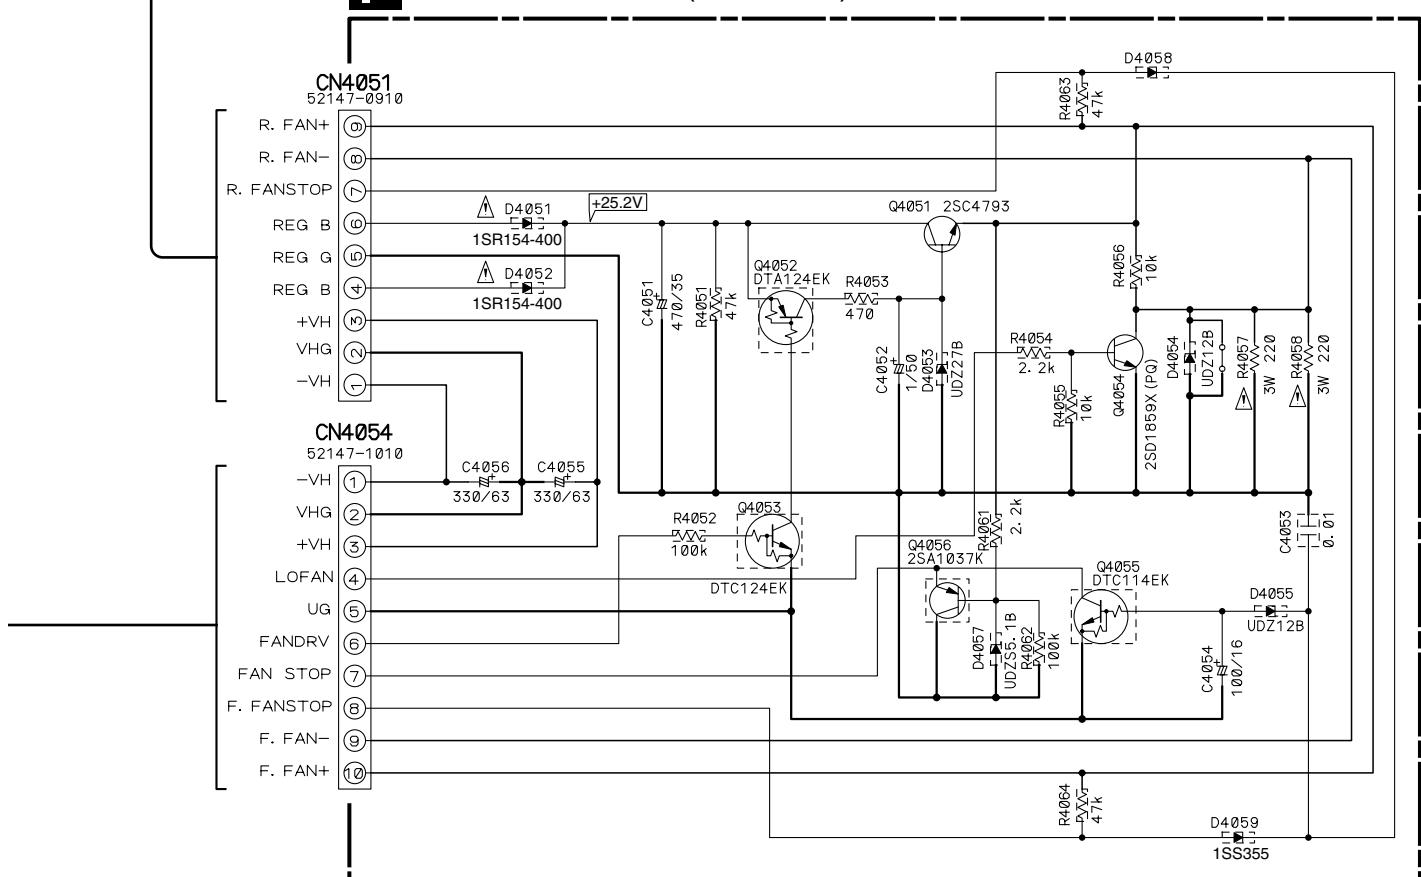

P Q

3.16 DSP ASSY (1/2)


R 1/2 DSP ASSY (AWX8016)

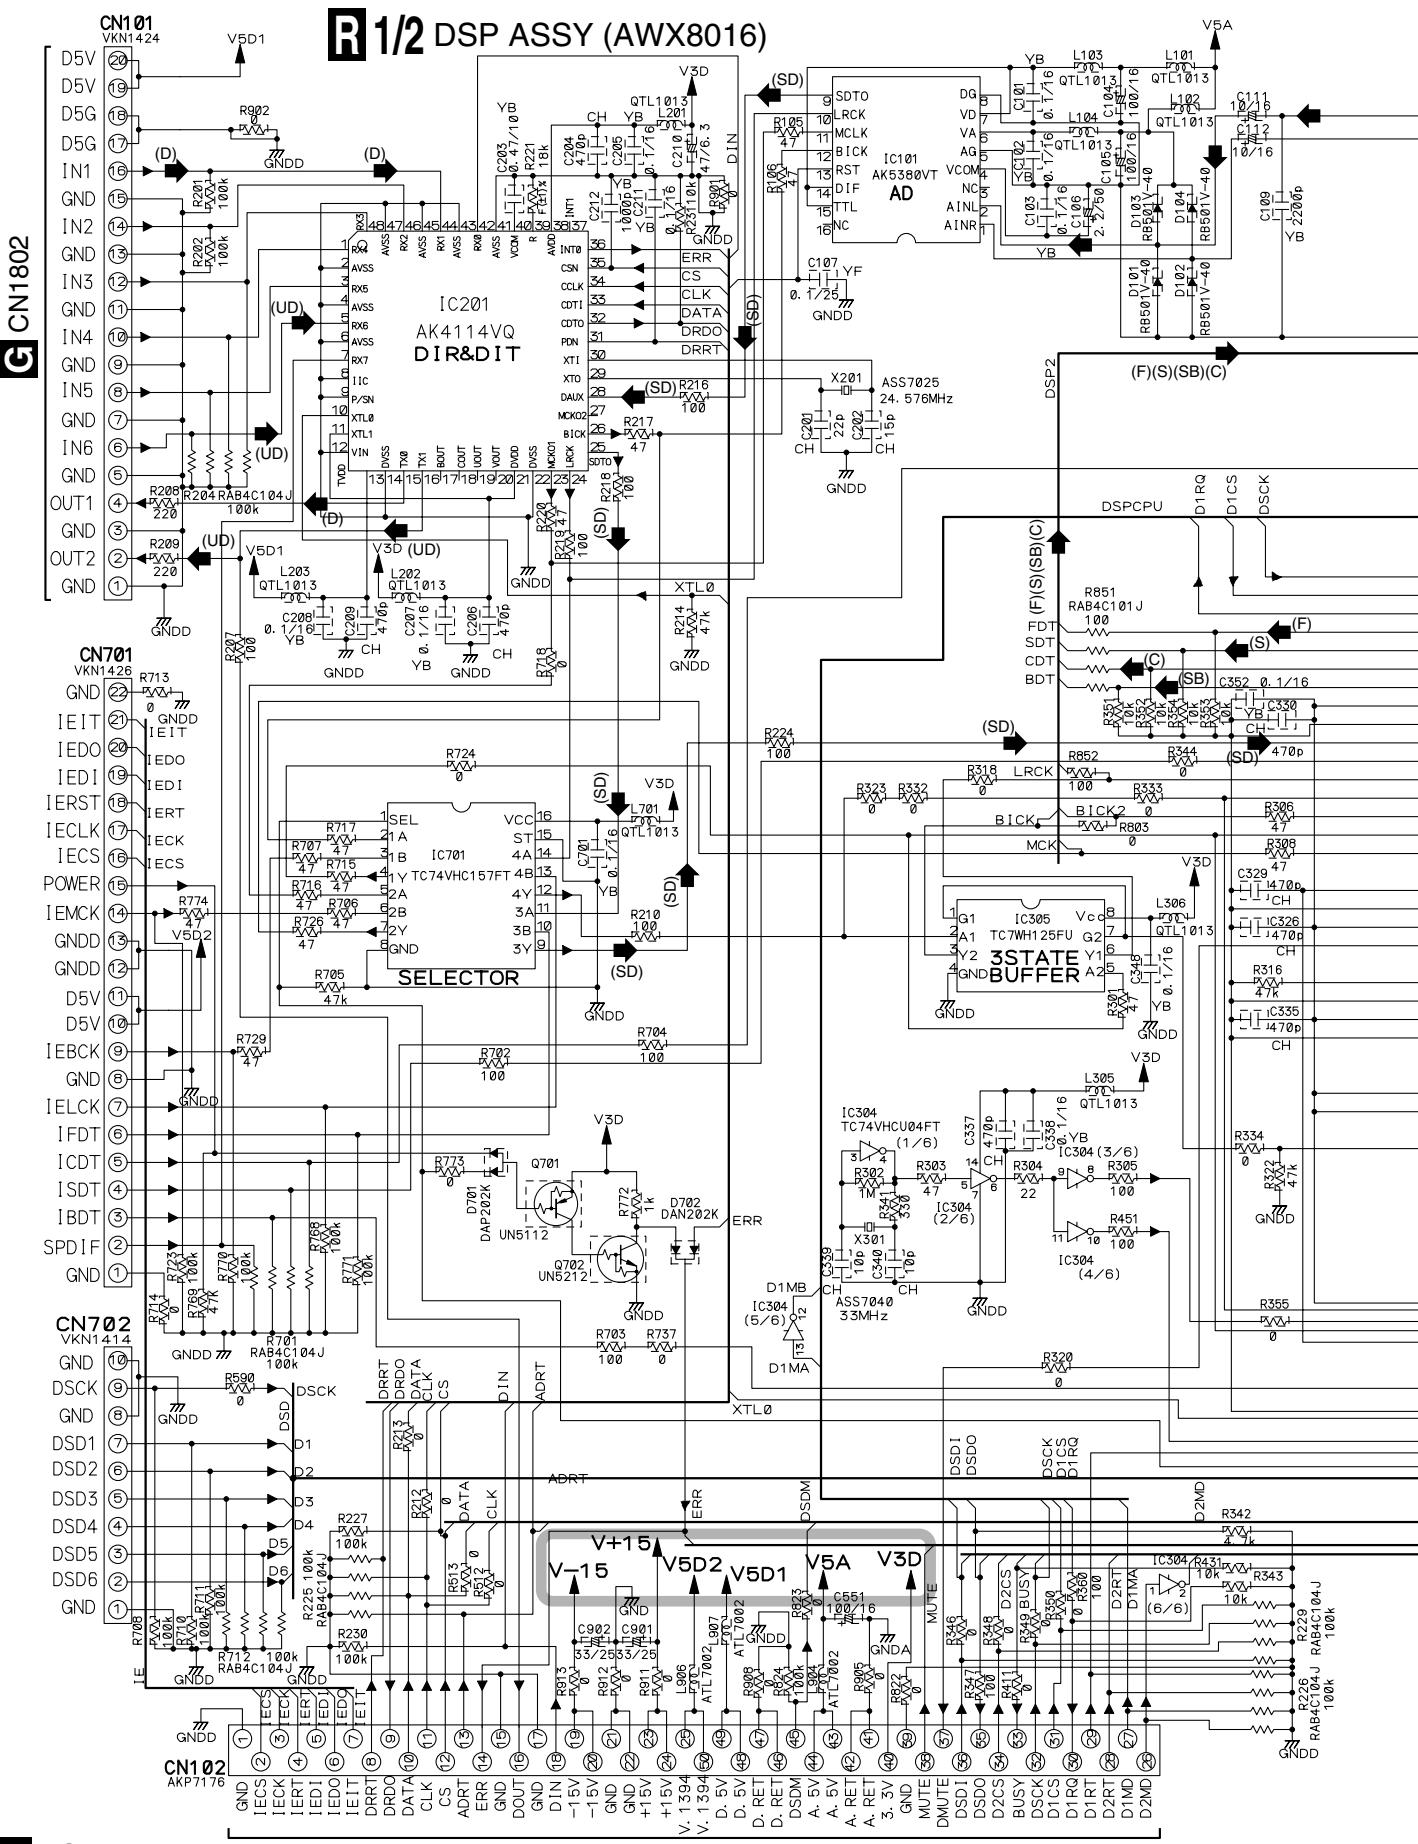

R 1/2

N CN1651

 : The power supply is shown with the marked box.

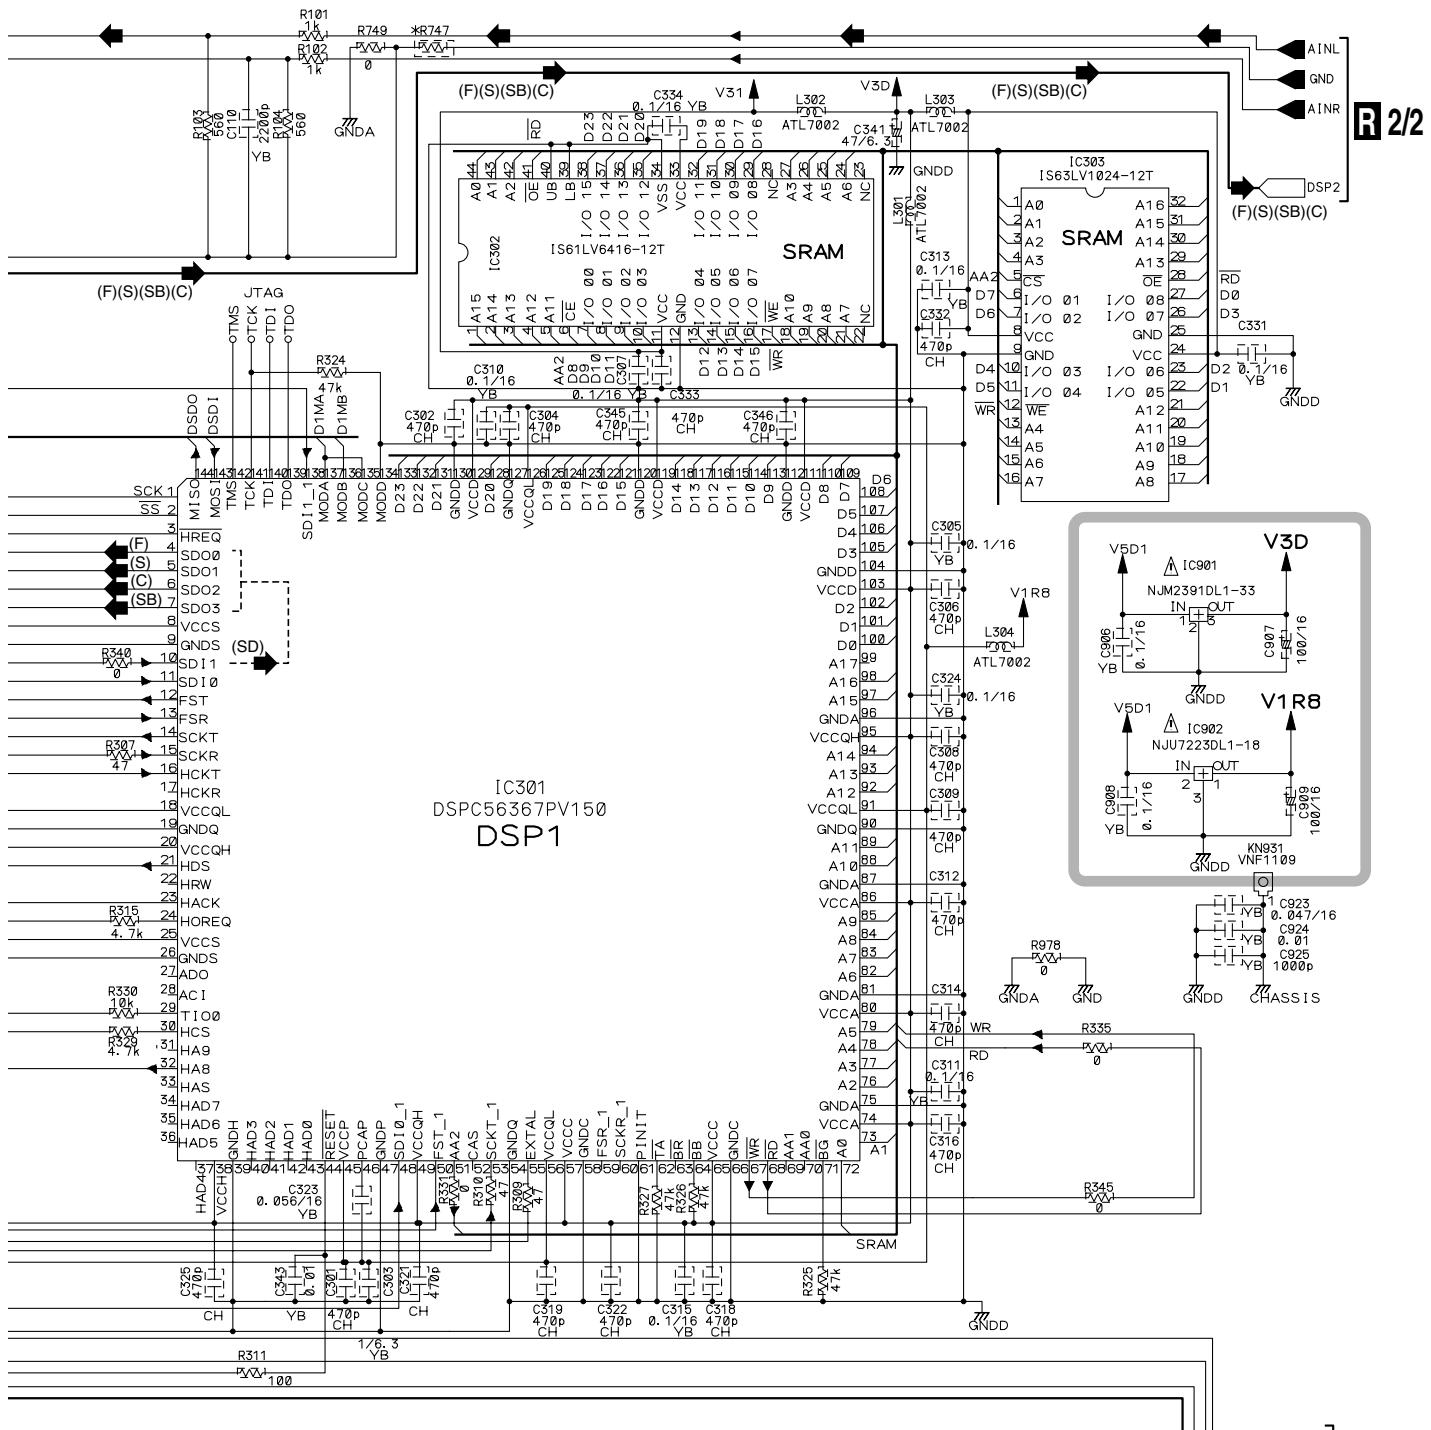

▶ : AUDIO SIGNAL ROUTE (1ch)

→ : AUDIO SIGNAL ROUTE (Ech)
(F)

→ : AUDIO SIGNAL ROUTE (FRONT Lch)
(S)

→ : AUDIO SIGNAL ROUTE (SURROUND Lch)

(SB) ► : AUDIO SIGNAL ROUTE (SUBROUND)

(C) ➤ AUDIO SIGNAL ROUTE (CENTER)

 : AUDIO SIGNAL ROUTE (CENTER ch)
(SD)

 : SURROUND DATA SIGNAL ROUTE

(D) ➔ : AUDIO SIGNAL ROUTE (DIGITAL)

(UD) : AUDIO SIGNAL ROUTE (USB DIGITAL)

▶ . AUDIO SIGNAL ROUTE (USB DIGITAL)


VSX-D2011-S

R 2/2


R 1/2

3.17 DSP ASSY (2/2)

R 2/2 DSP ASSY (AWX8016)

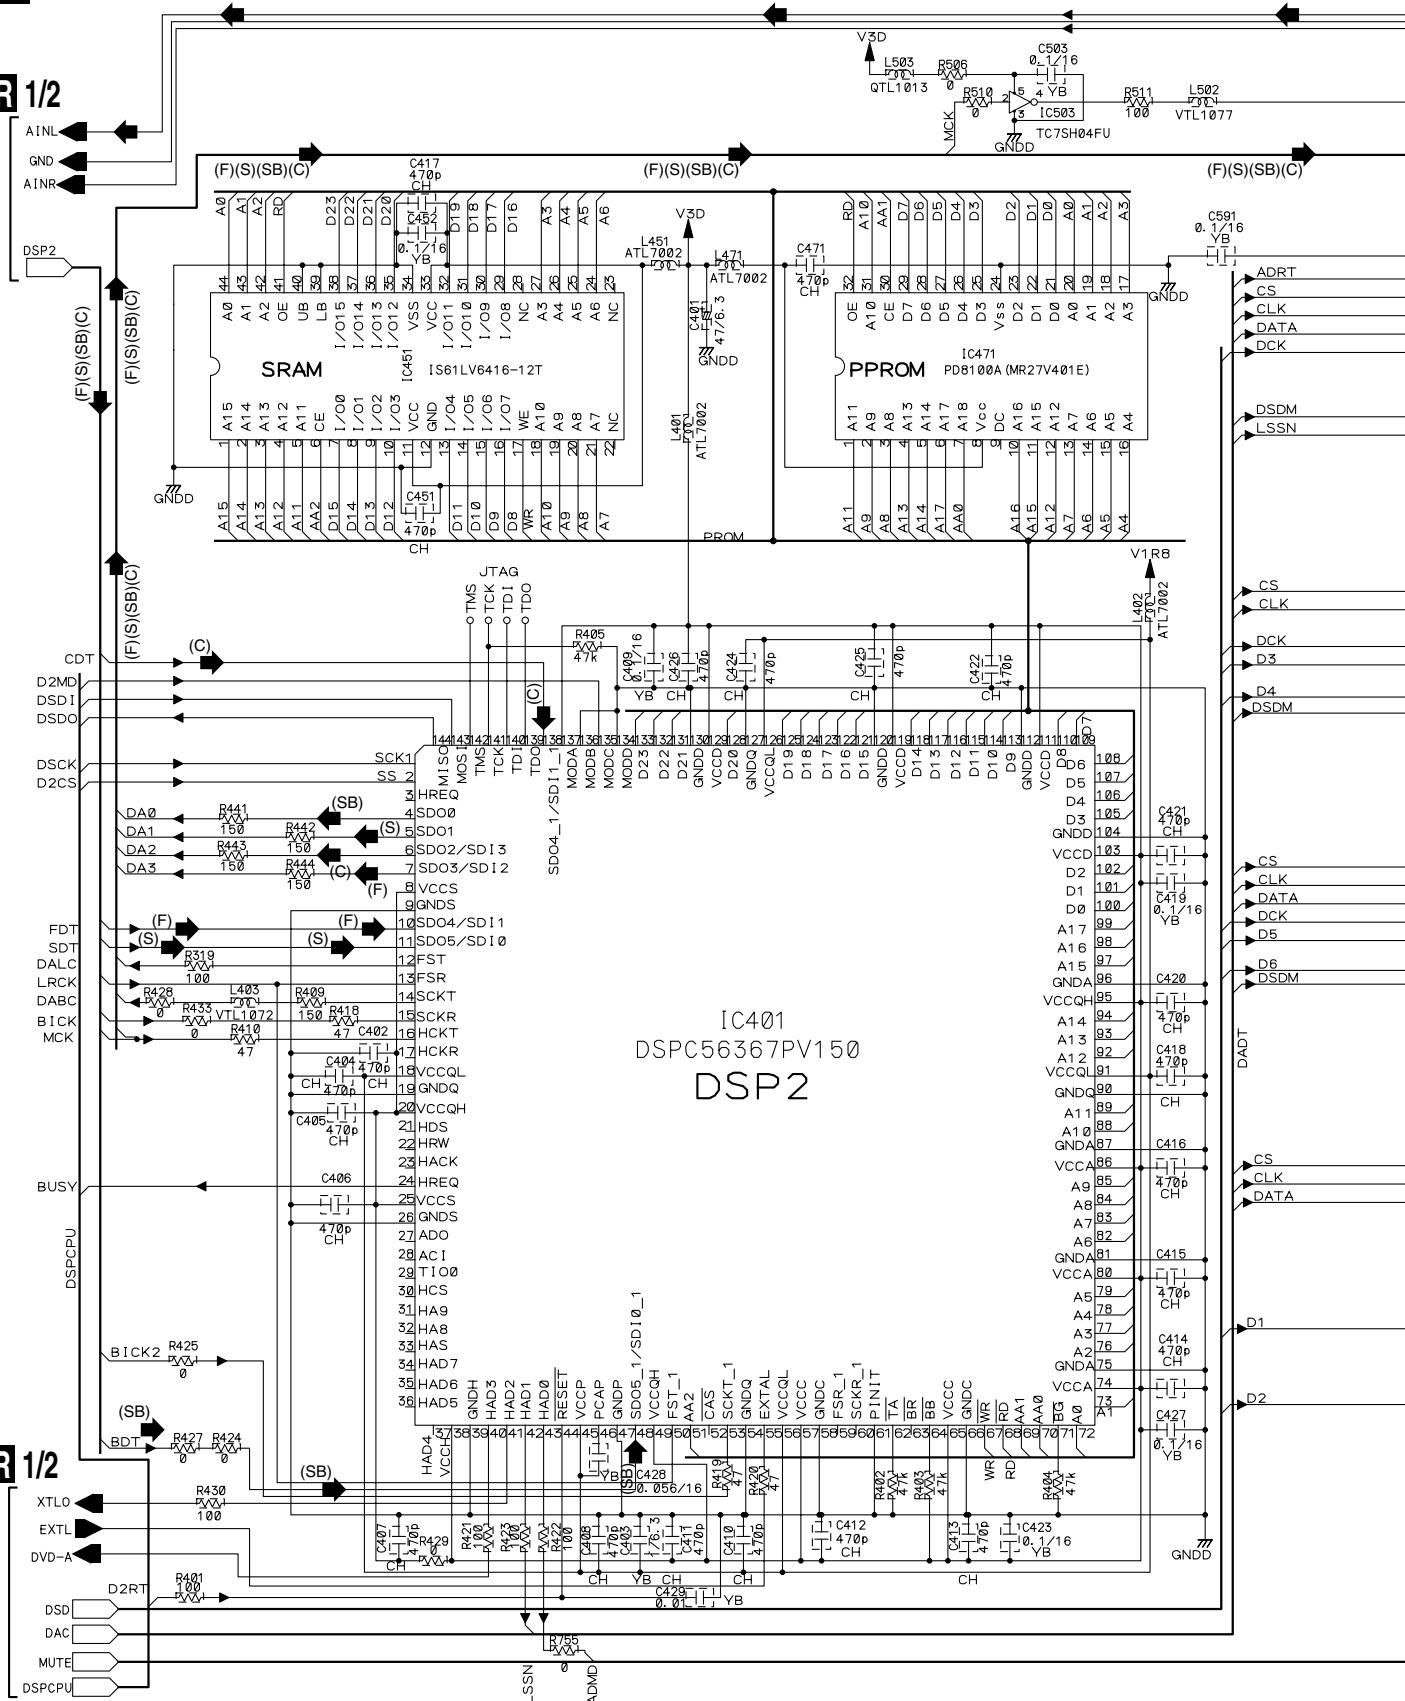

R 2/2

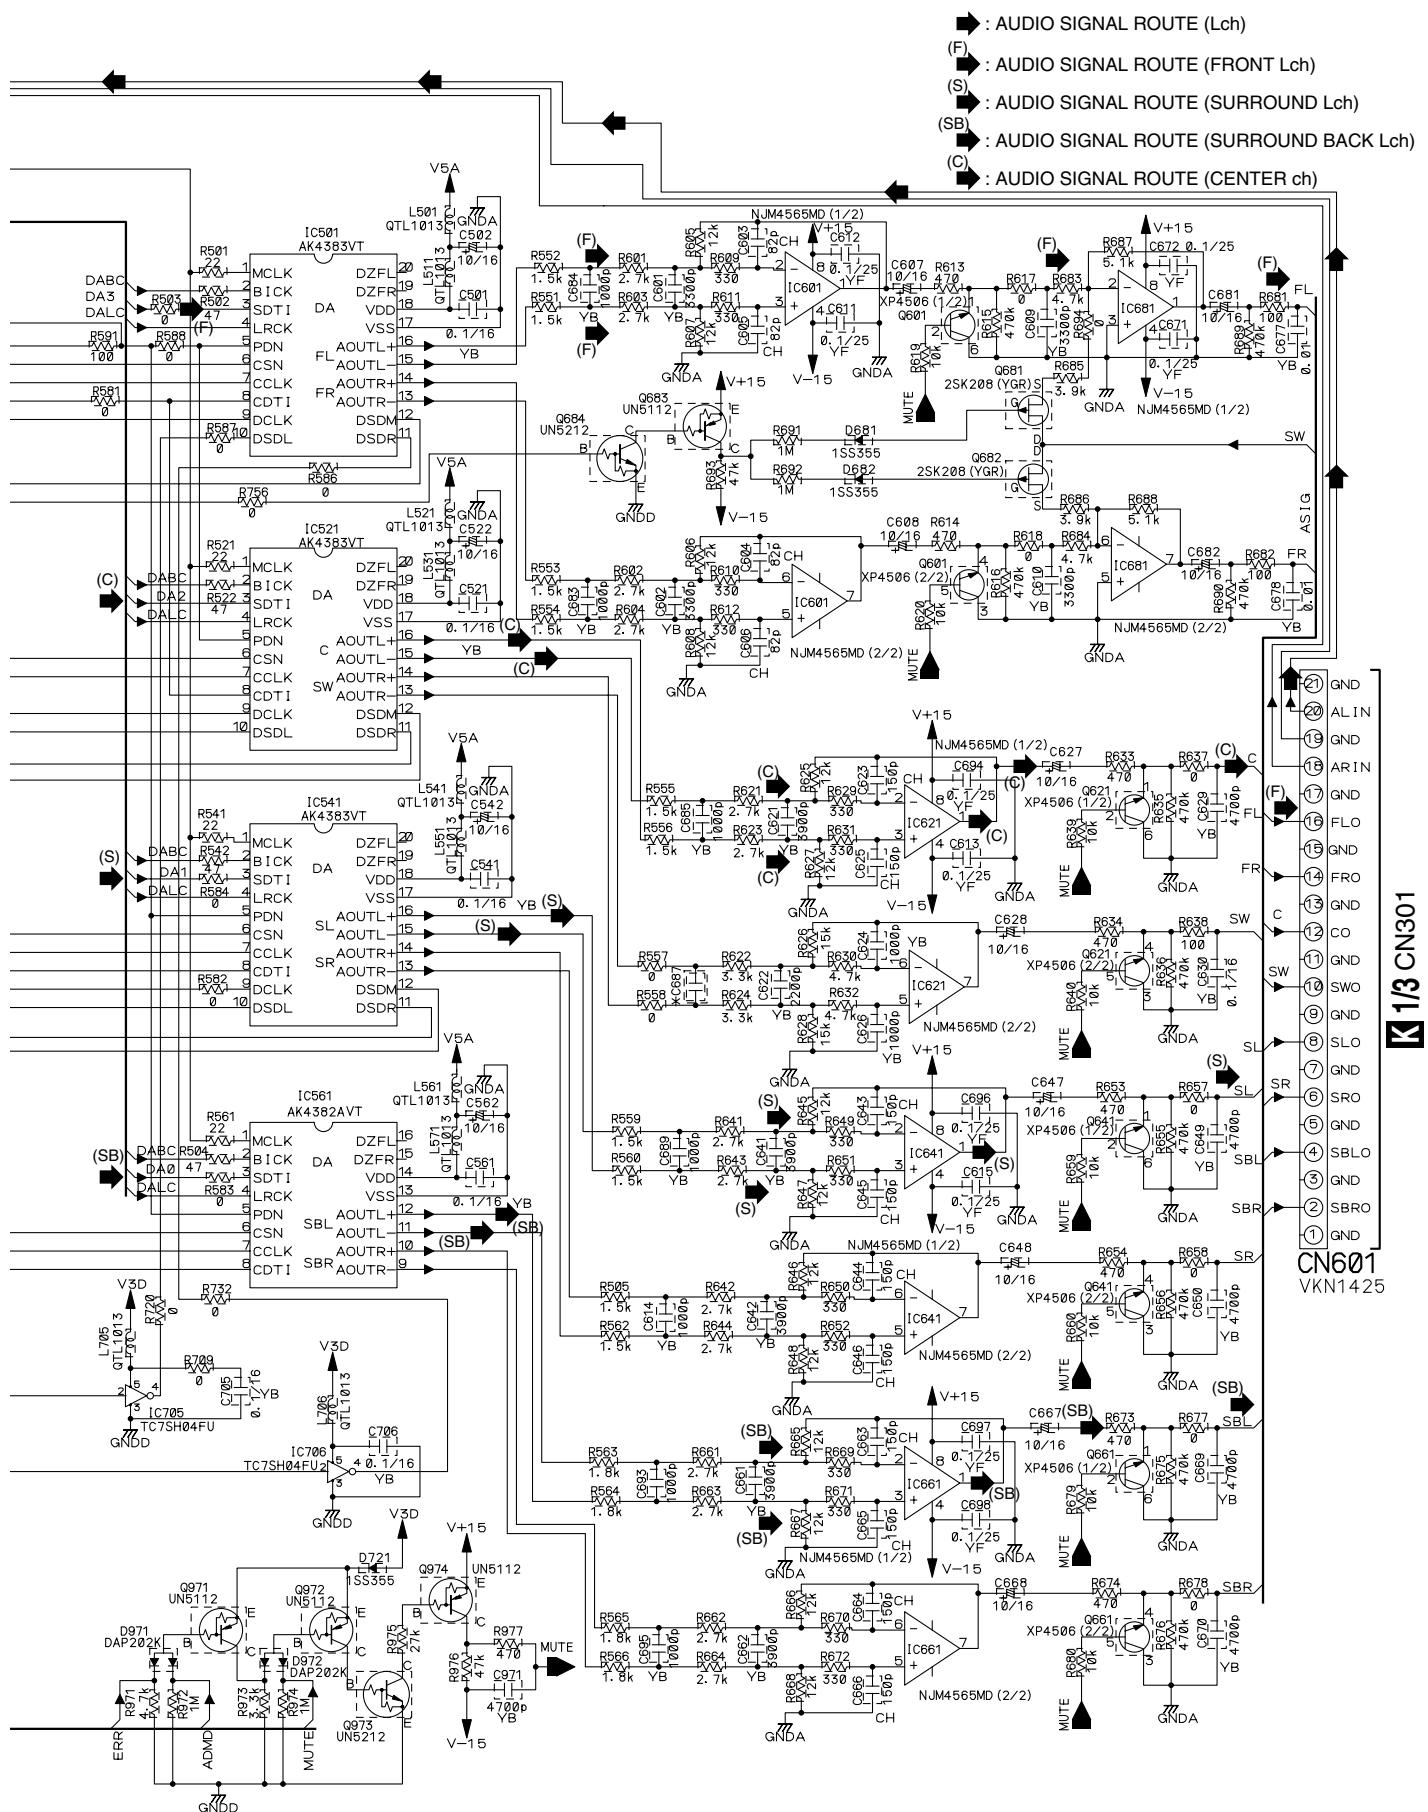

R 2/2

3.18 DISPLAY ASSY

S DISPLAY ASSY
(VSX-D2011 : AWX8147)
(VSX-D1011 : AWX8011)


45TX
 1-1 SB CH MODE
 1-2 HI-BIT/
 HI-SAMPLING
 1-3 SIGNAL SELECT
 1-4 MULTI JOG
 CONT. RETURN
 1-5 MULTI JOG
 CONT. SETUP
 1-6 SPEAKER

 2-1 CLASS
 2-2 BAND
 2-3 TONE +
 2-4 TONE -
 2-5 BASS/
 TREBLE
 2-6 TILT
 ON/OFF


 3-1 TUNING
 SELECT
 3-2 (GT. FREQ) -
 3-3 (GT. FREQ) +
 3-4 TUNER EDIT
 3-5 MRAS
 CONTROL
 3-6 MRAS
 ON/OFF

/HY
2-1 CLASS
2-2 BAND

3-1 TUNING
SELECT
3-2 (ST. FREQ) -
3-3 (ST. FREQ) +
3-4 TUNER EDIT
3-5 CHARA/
SEARCH
3-6 EON MODE

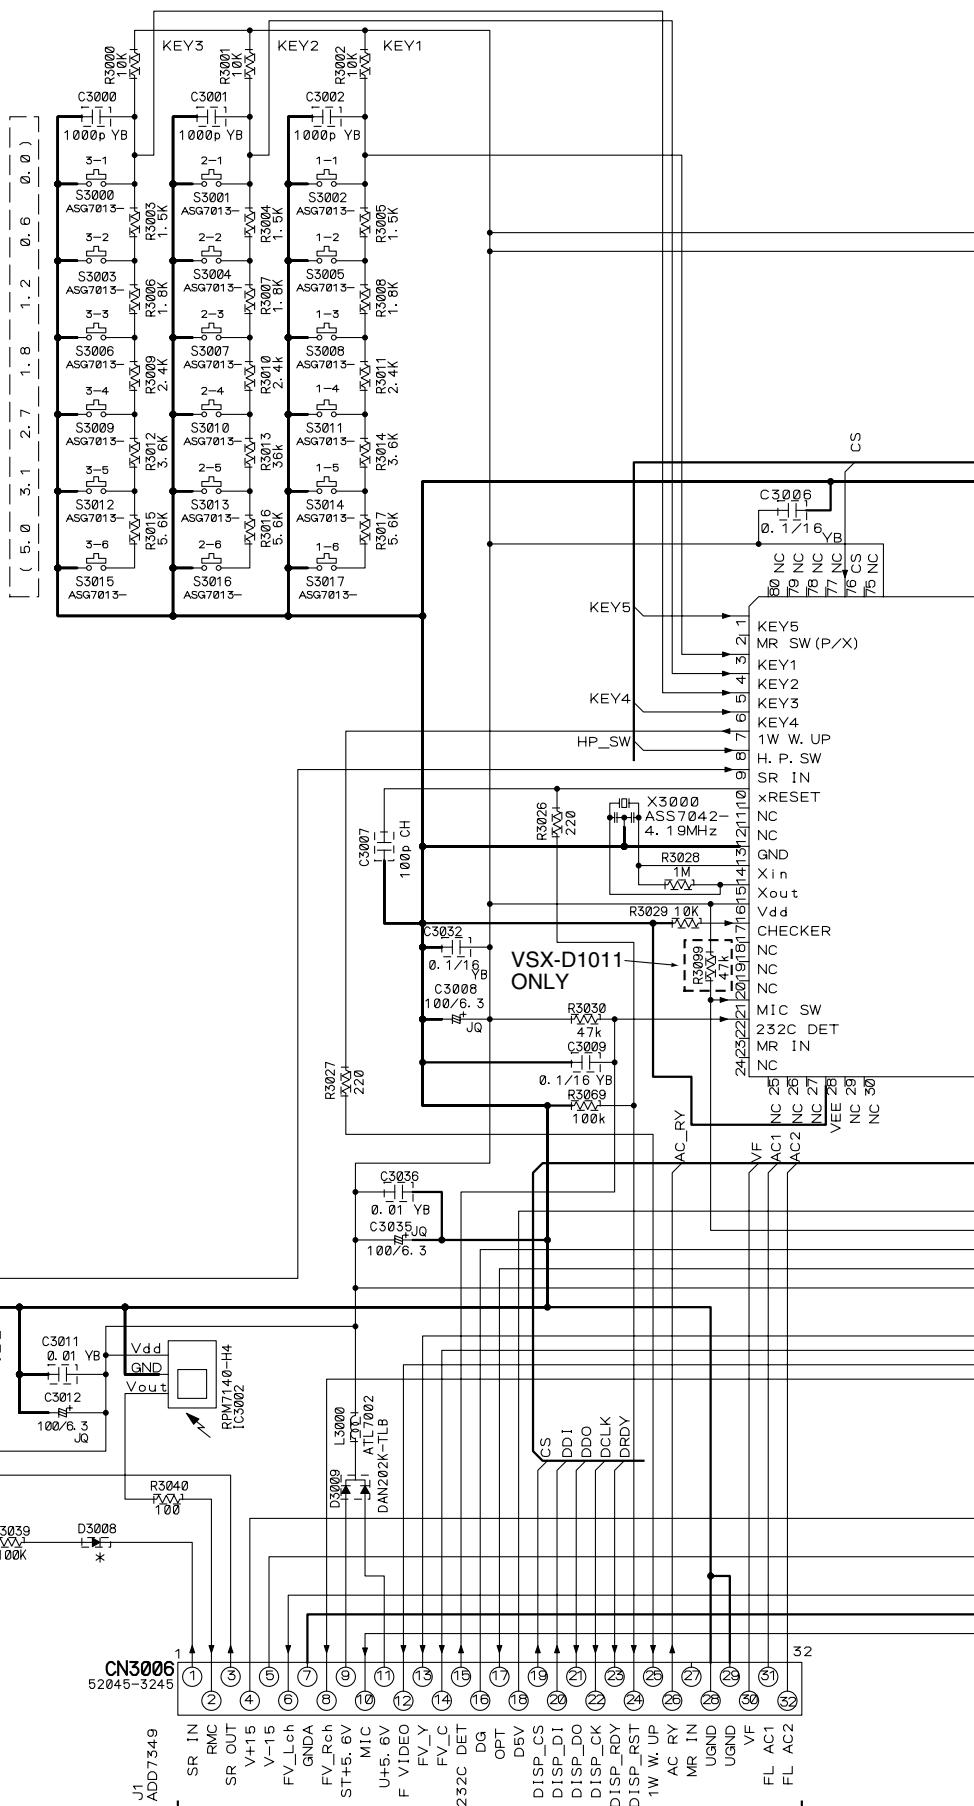


K 3/3 CN501

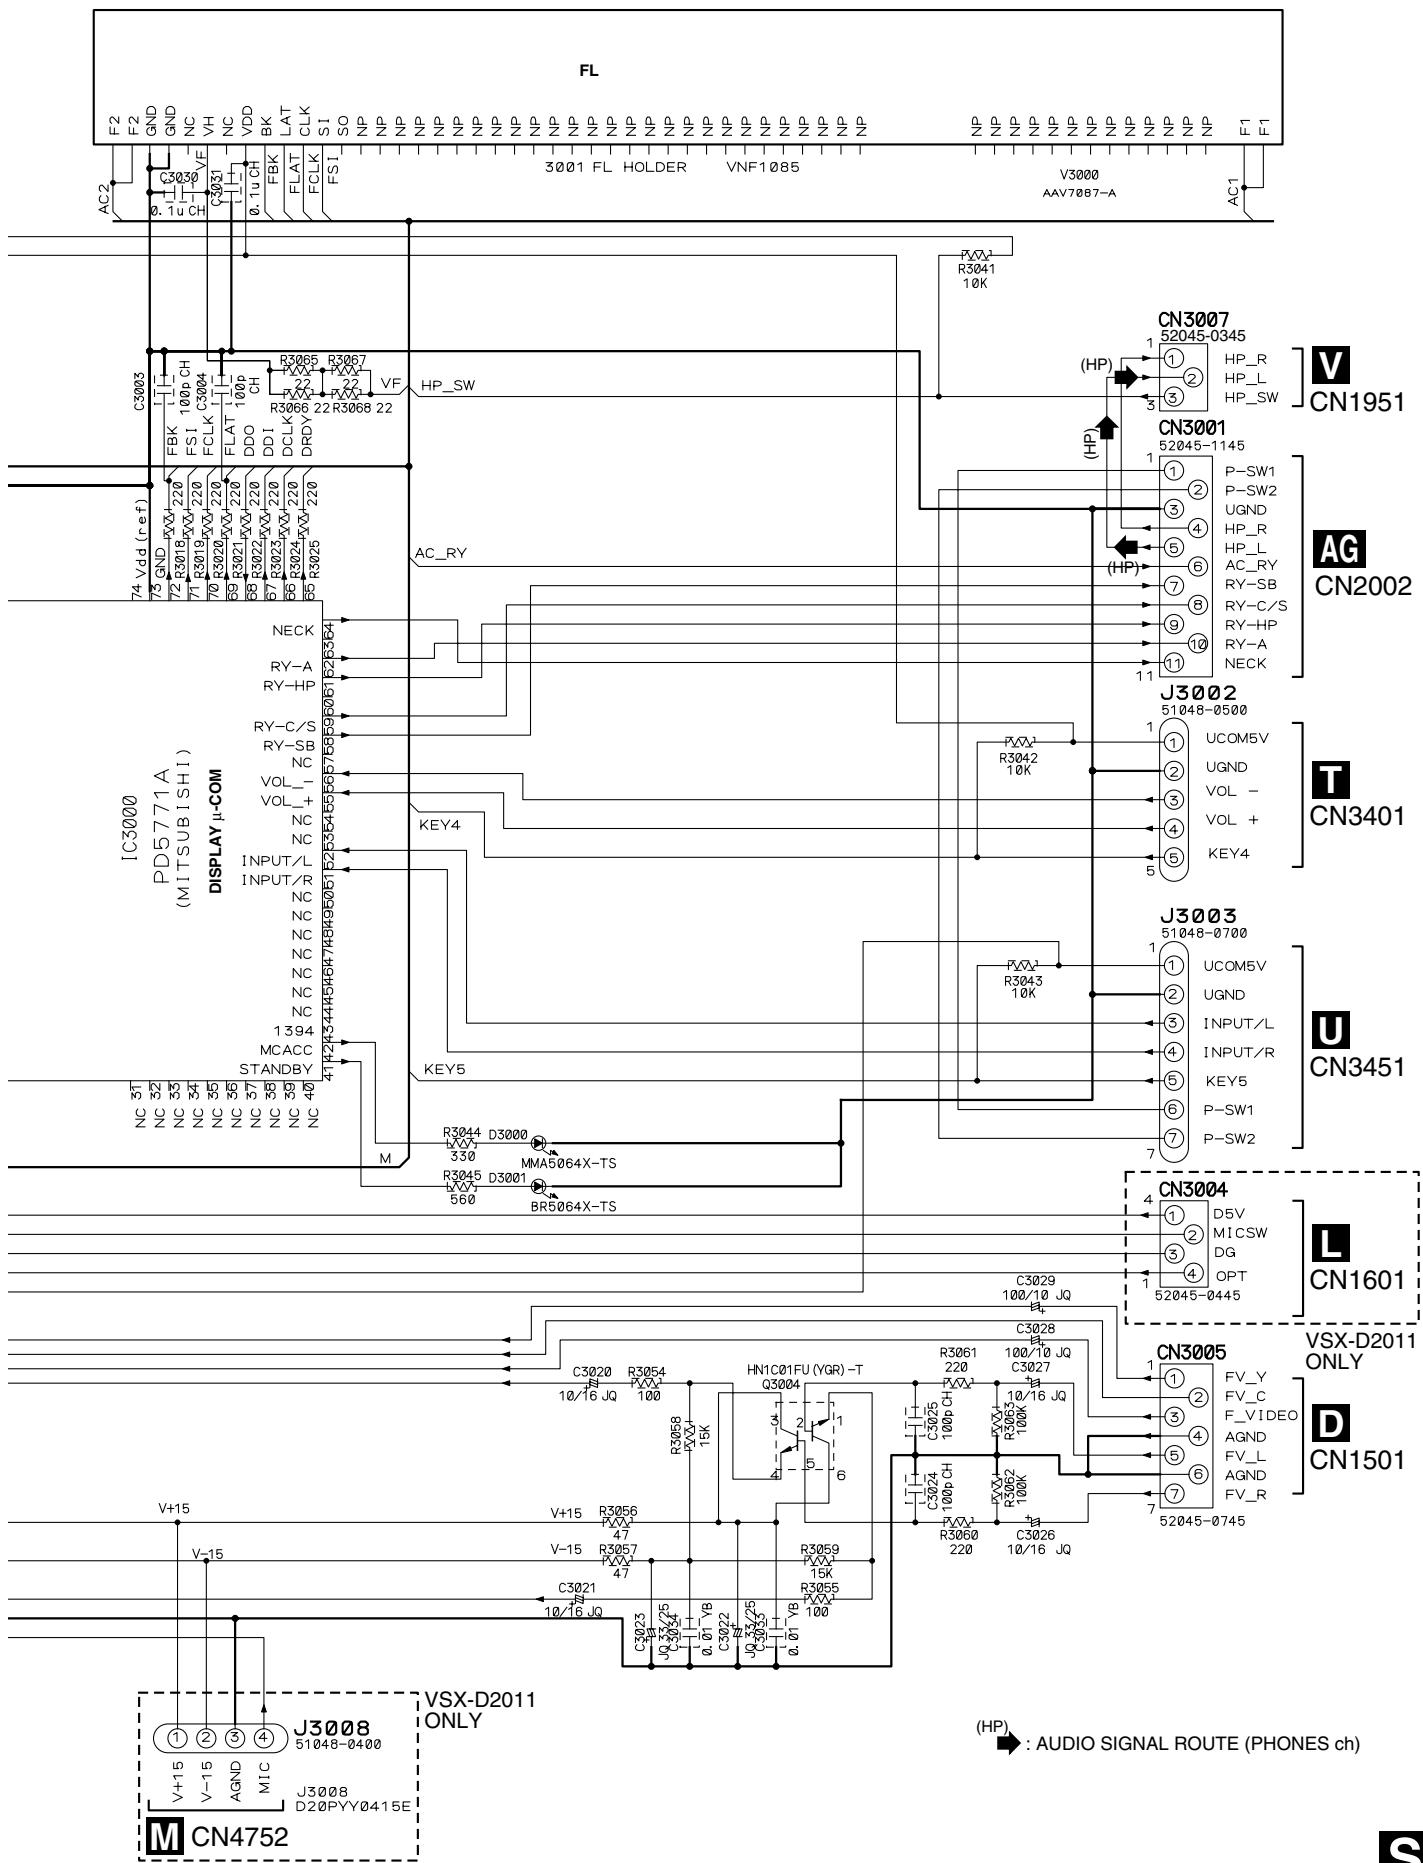

(HP) → : AUDIO SIGNAL ROUTE (PHONES ch)

3.19 VOLUME, MULTI JOG and HEADPHONE ASSYS

A

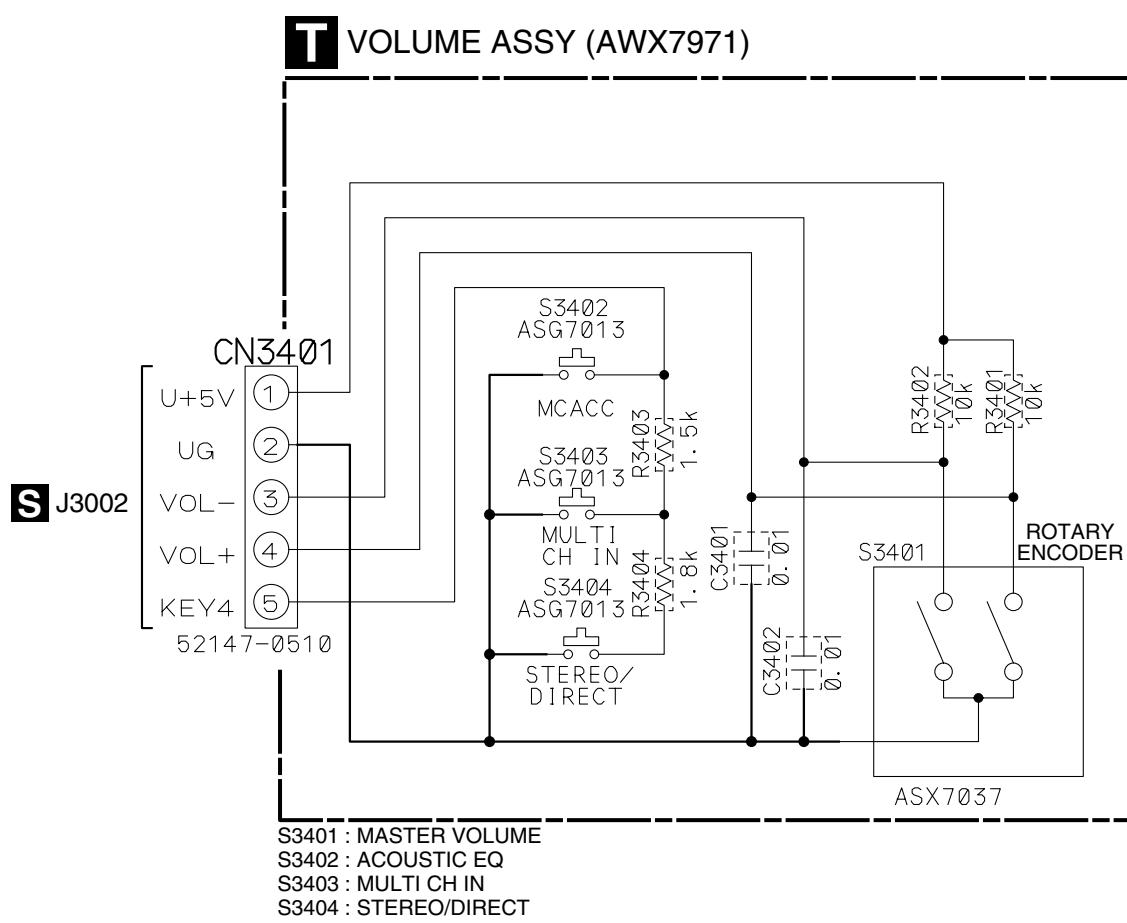

B

C


D

E

F


T

U MULTI JOG ASSY (AWX8015)

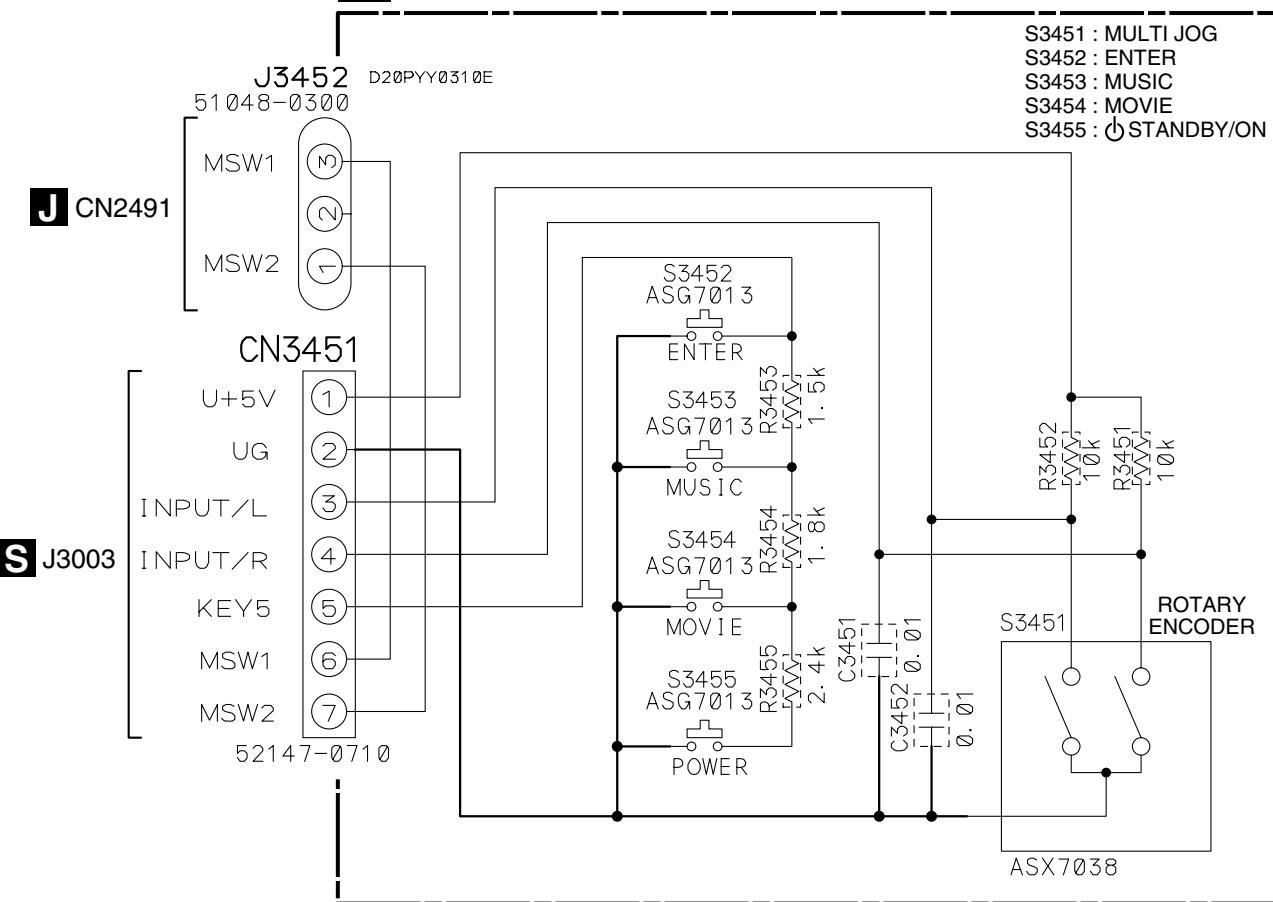

(HP) → : AUDIO SIGNAL ROUTE (PHONES ch)

V HEADPHONE ASSY (AWX7980)

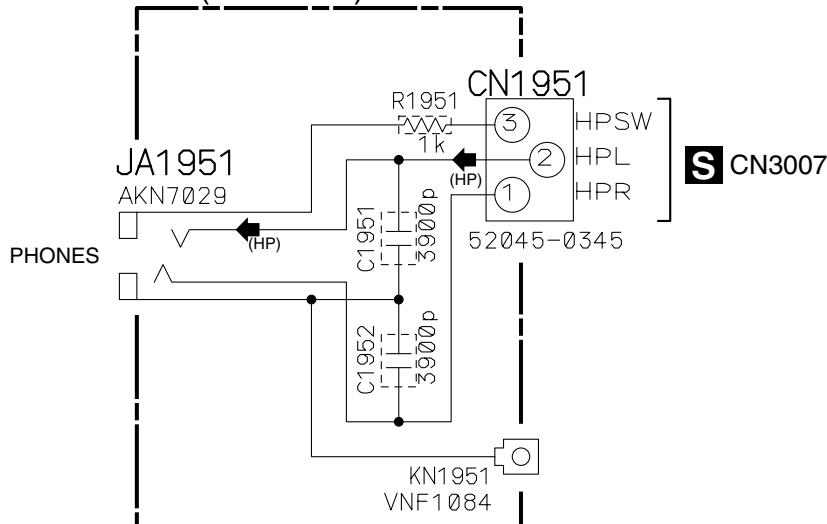



U **V**

3.20 REGULATOR ASSY


A

W REGULATOR ASSY (AWX8020)

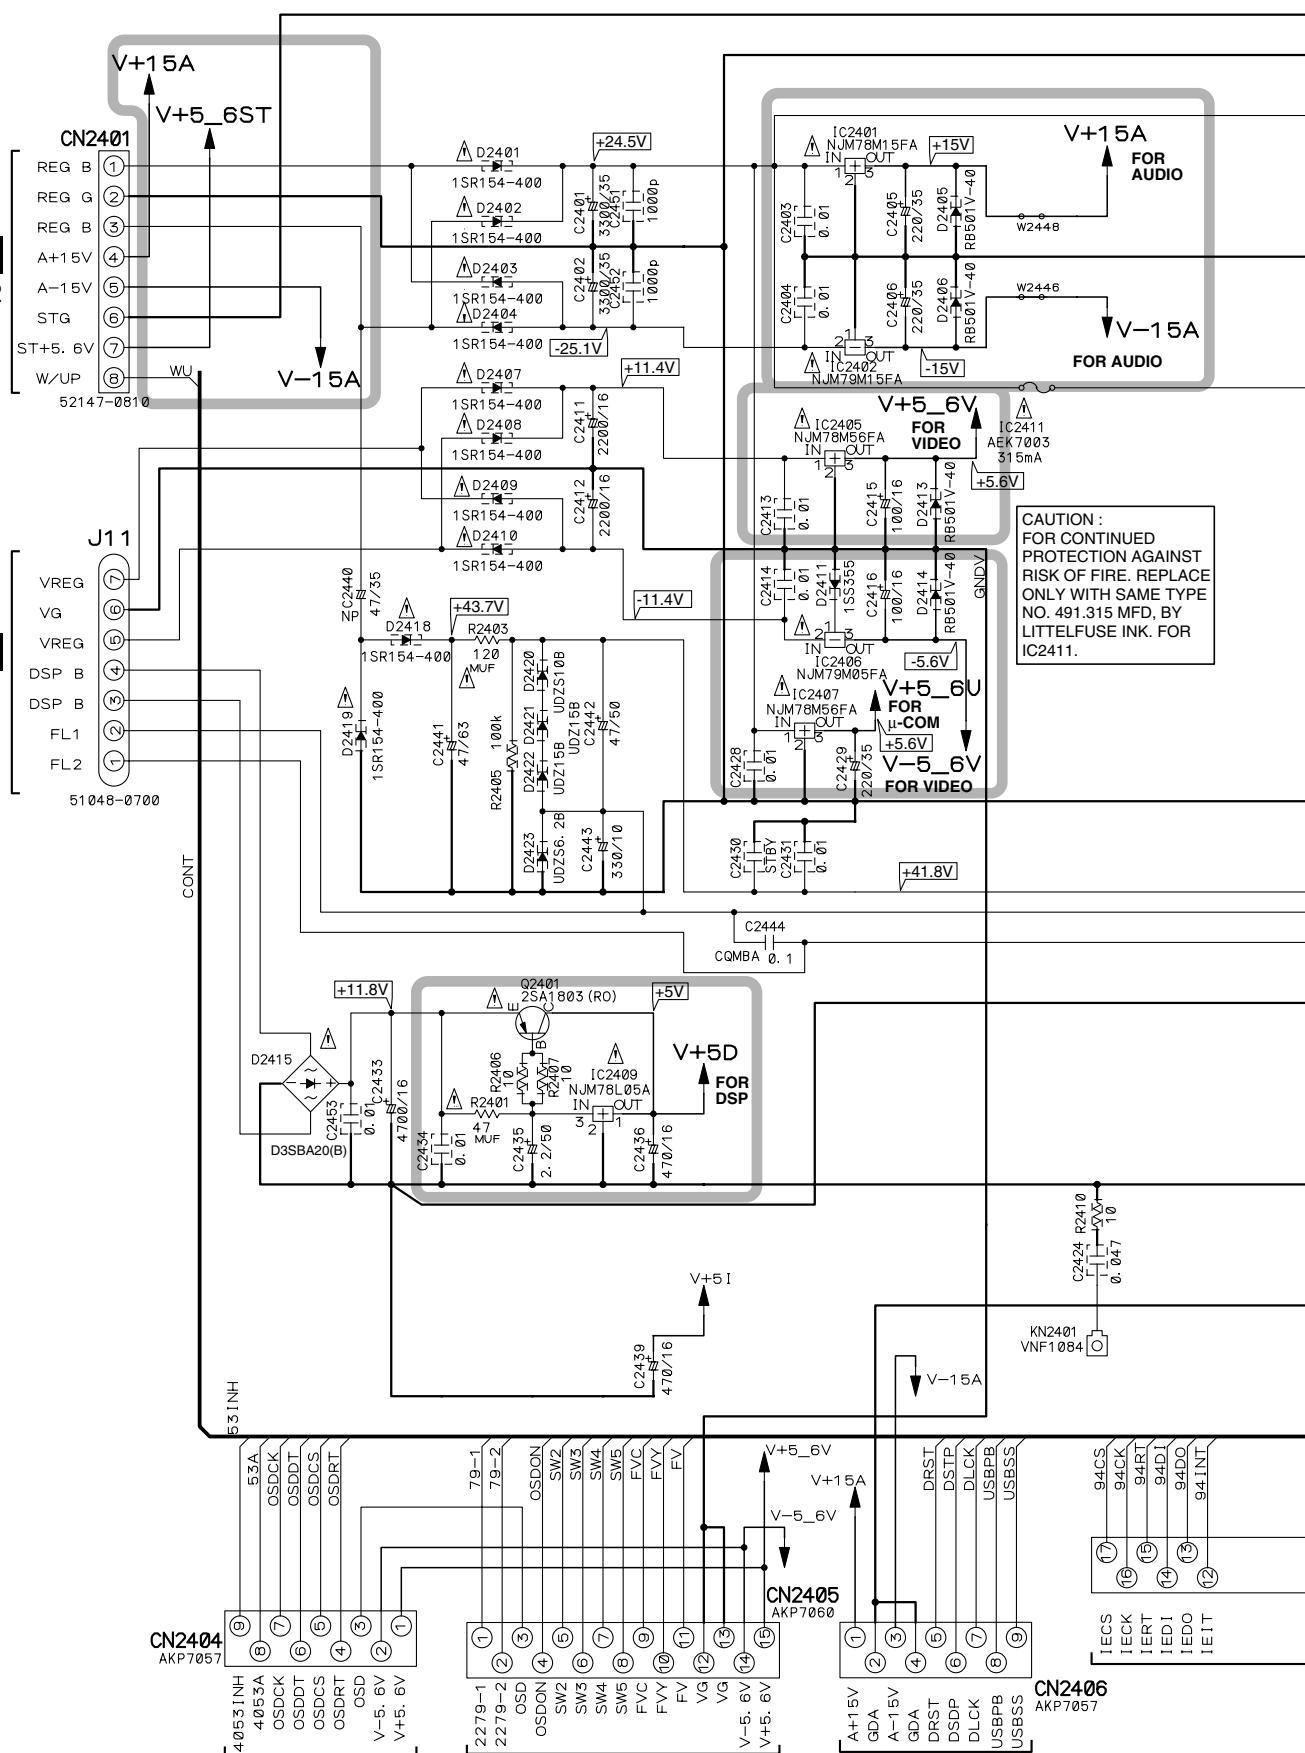

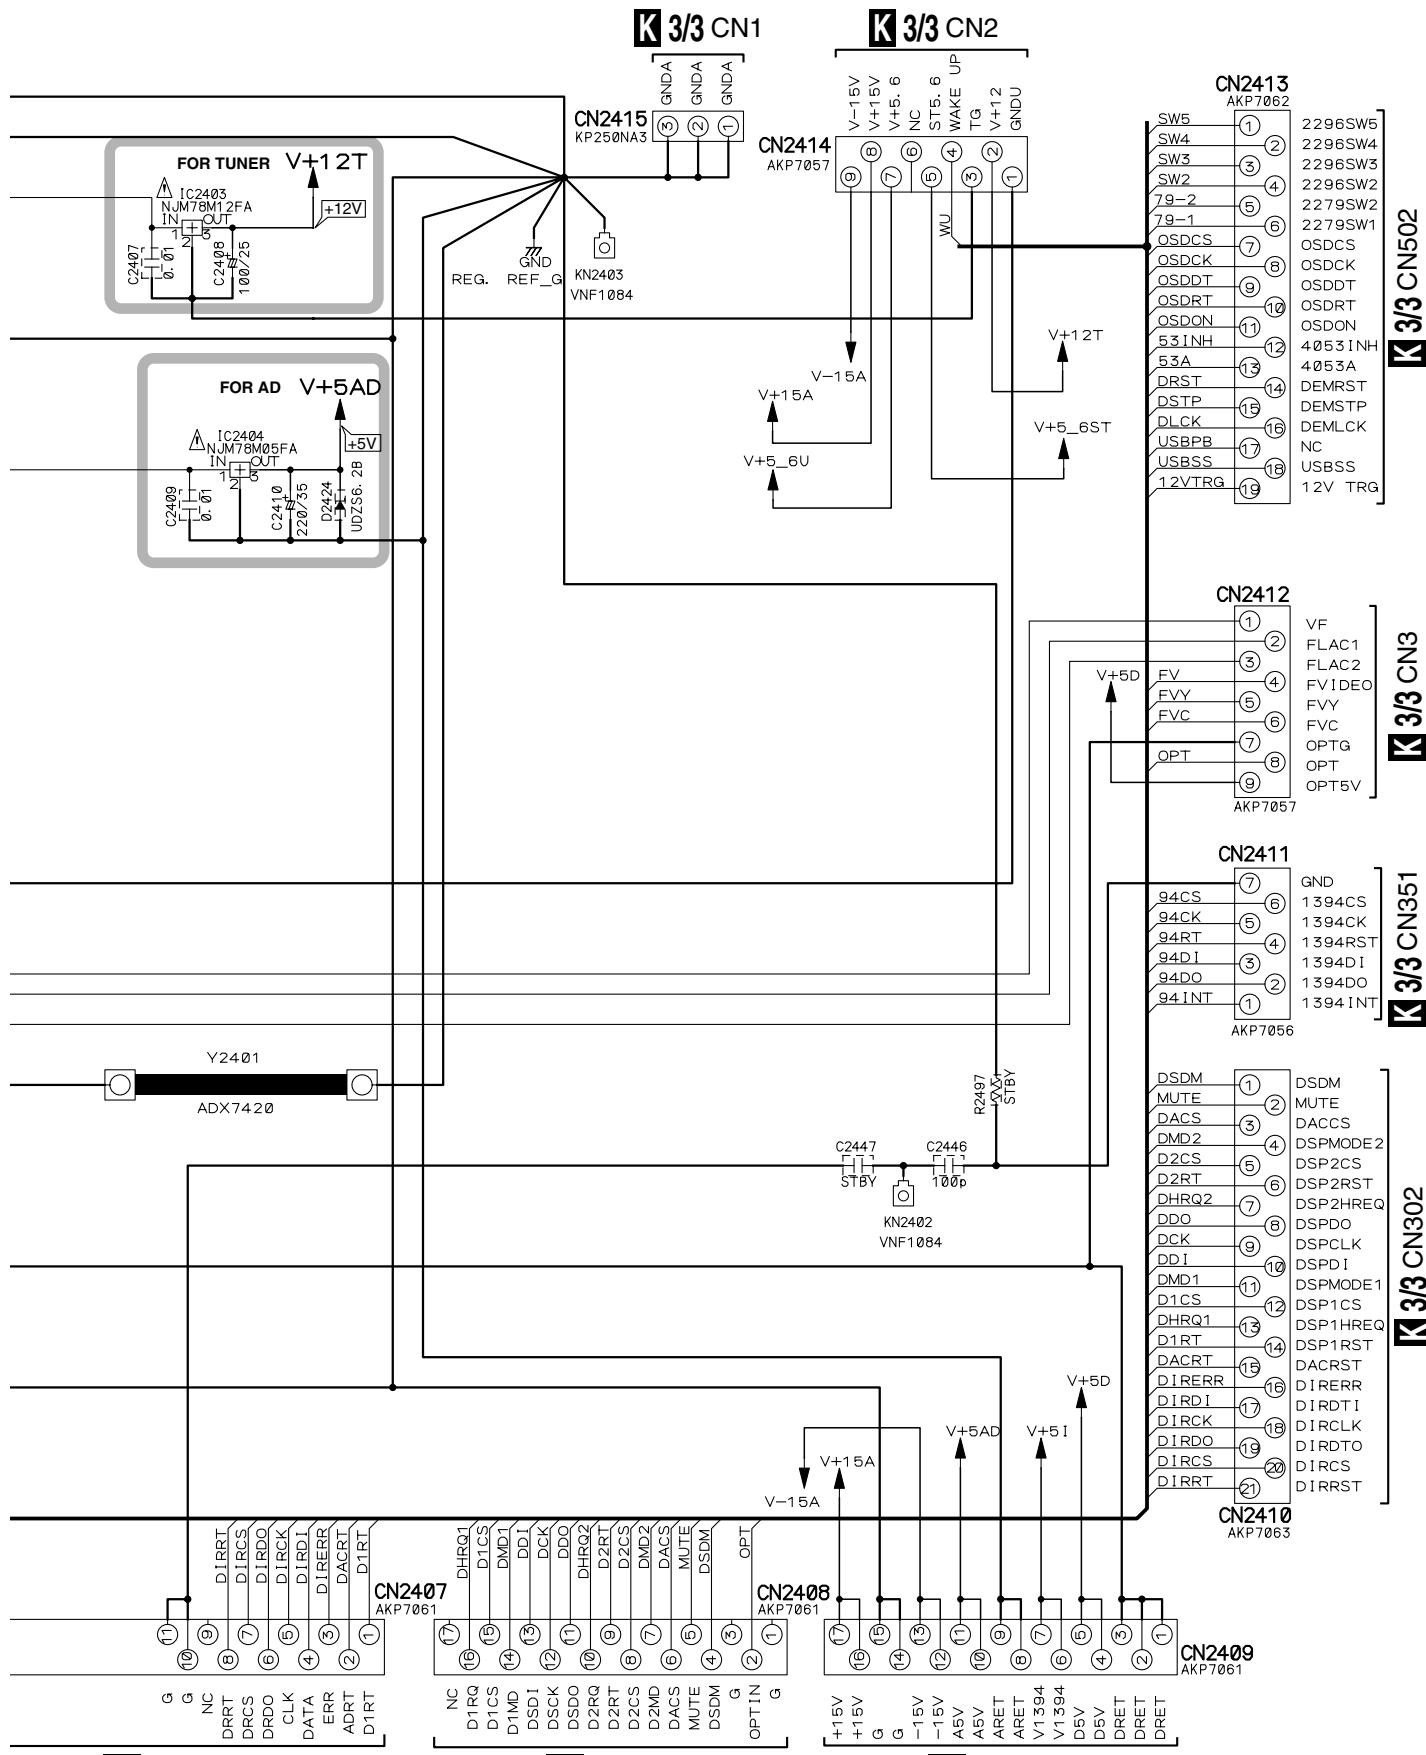


3.21 POWER AMP-L ASSY

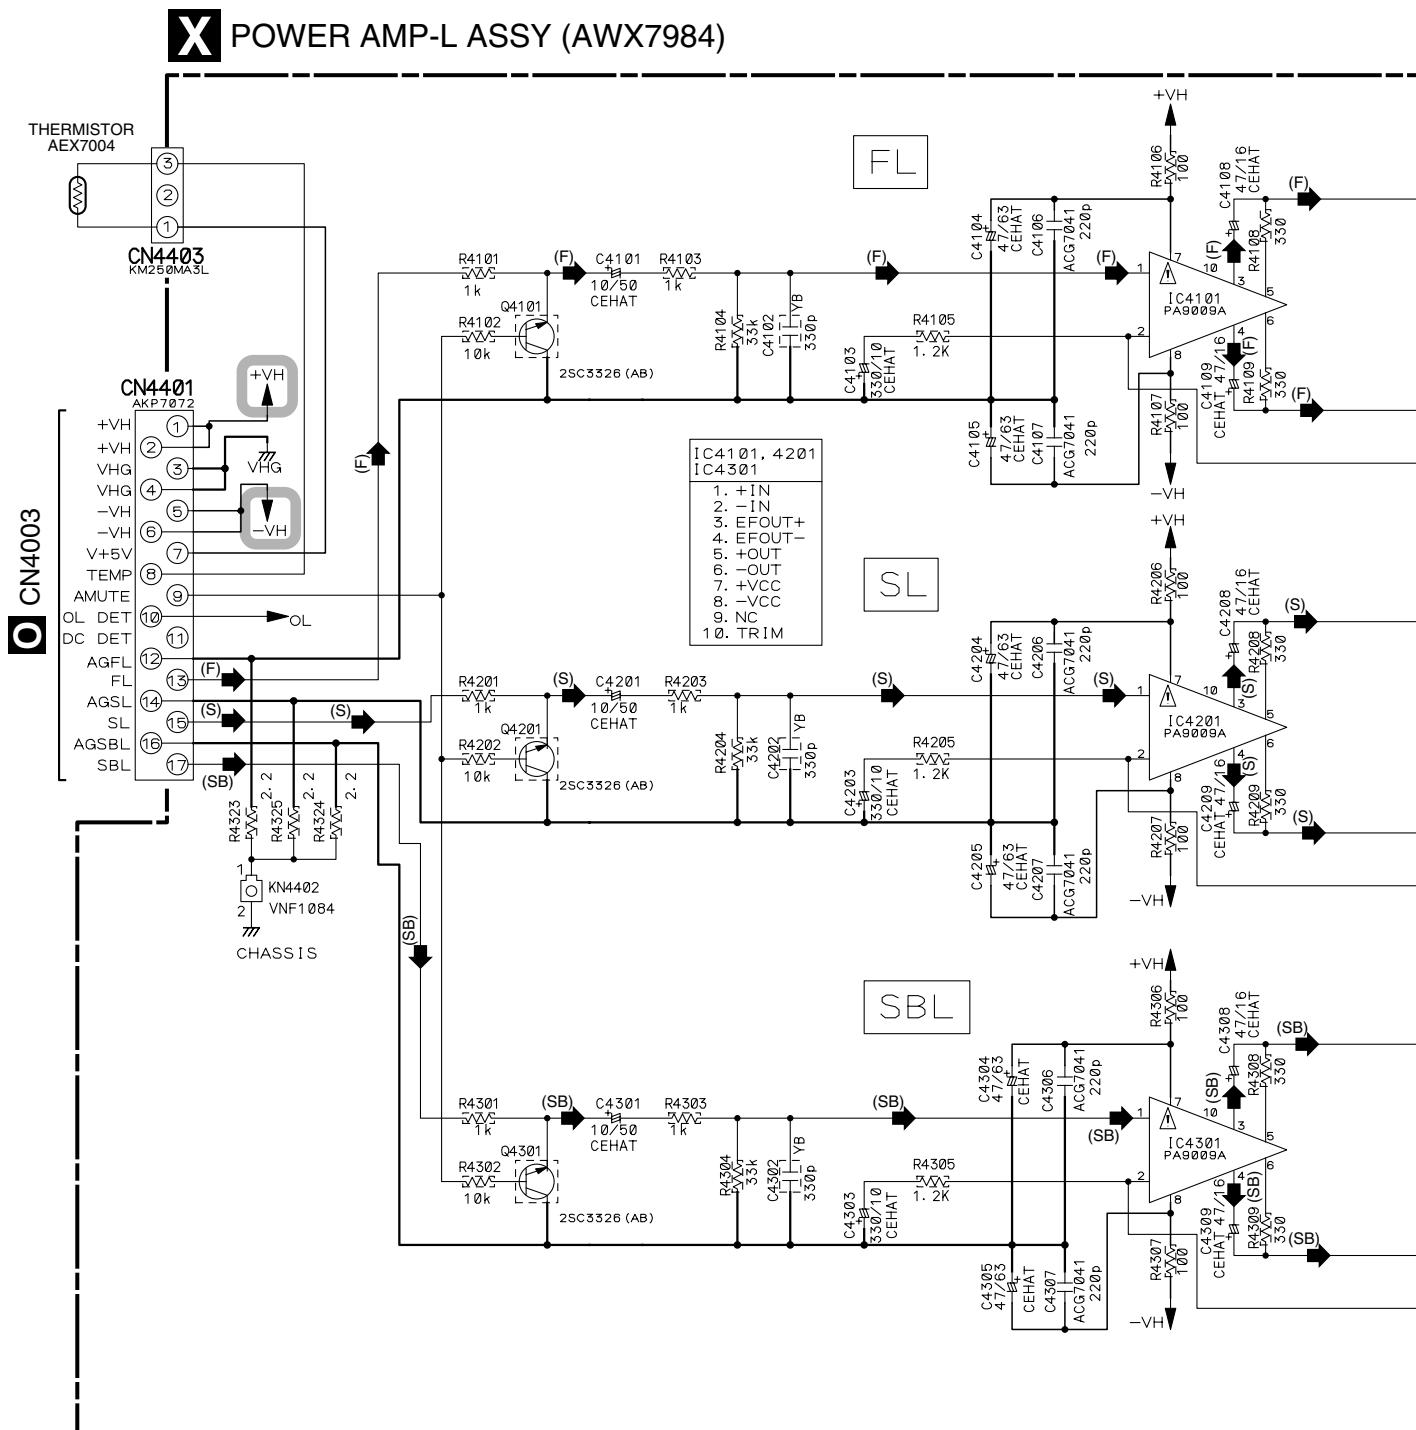



(F) : AUDIO SIGNAL ROUTE (FRONT Lch)
 (S) : AUDIO SIGNAL ROUTE (SURROUND Lch)
 (SB) : AUDIO SIGNAL ROUTE (SURROUND BACK Lch)
 (C) : AUDIO SIGNAL ROUTE (CENTER ch)

: The power supply is shown with the marked box.

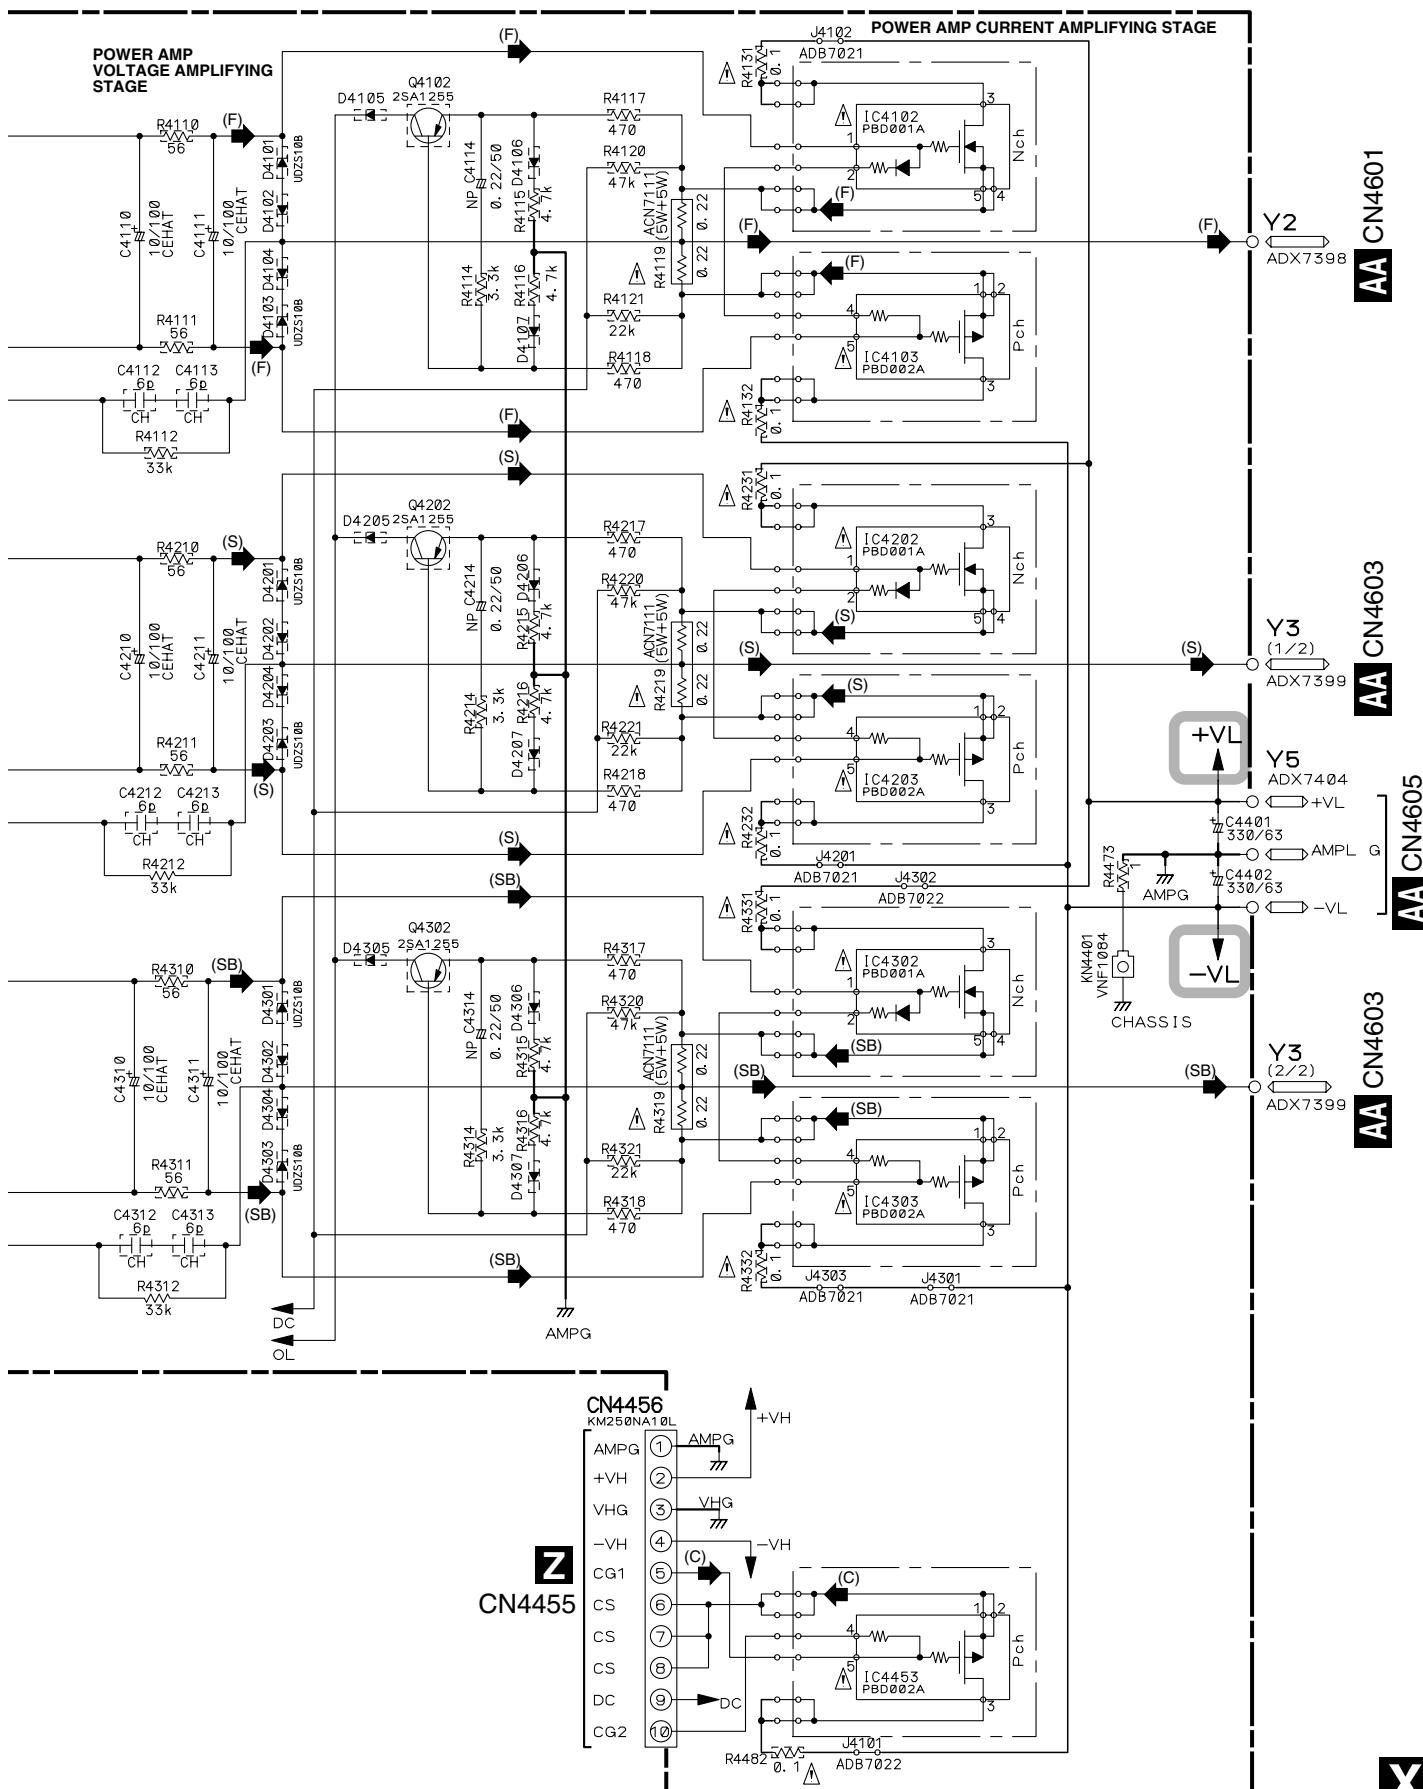


3.22 POWER AMP-R and POWER AMP-C ASSYS

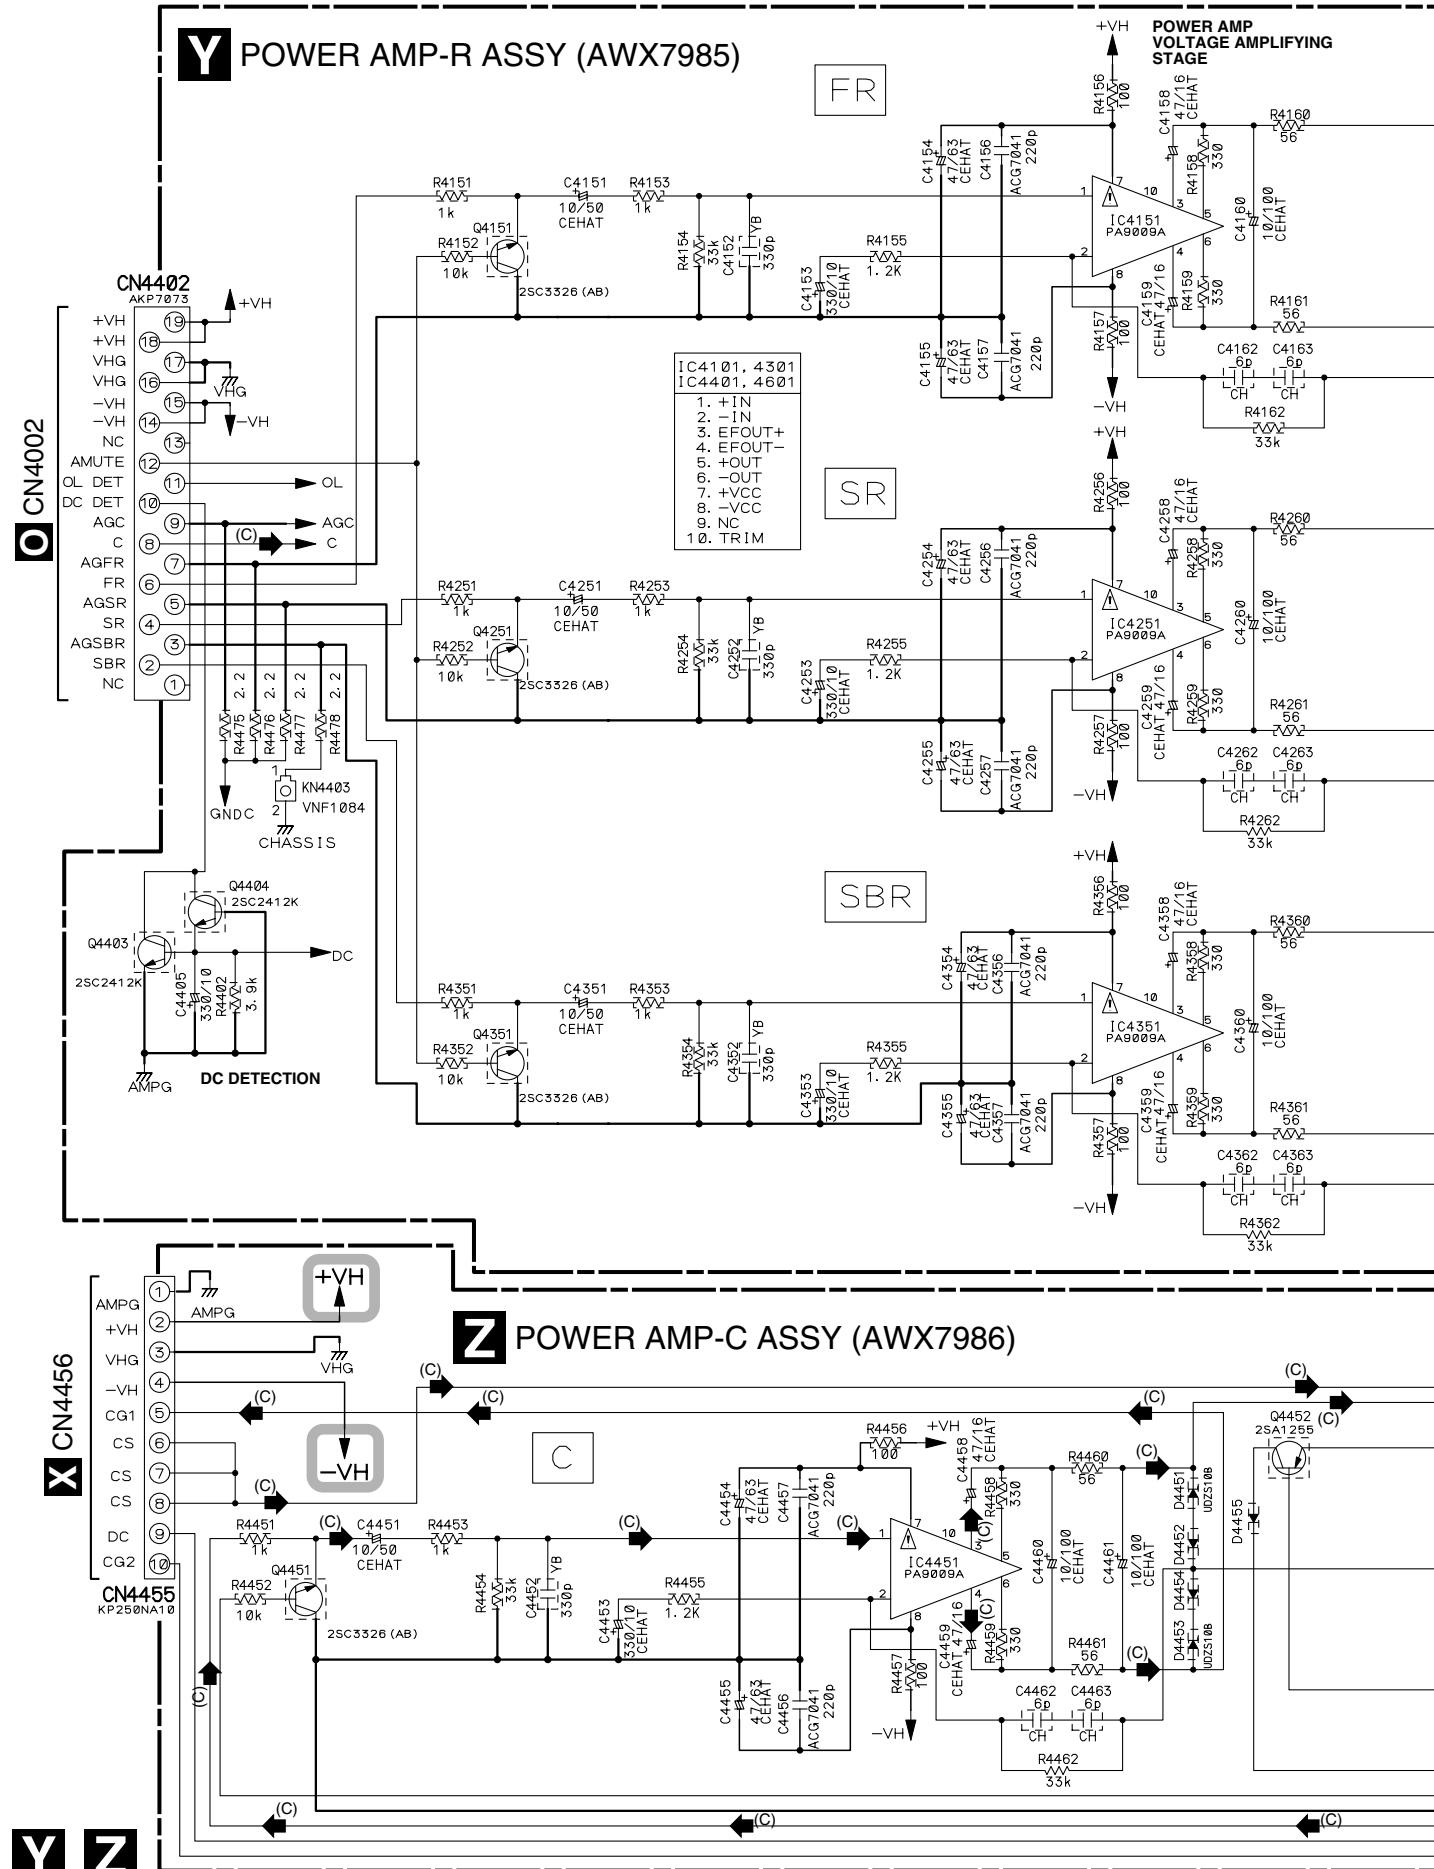

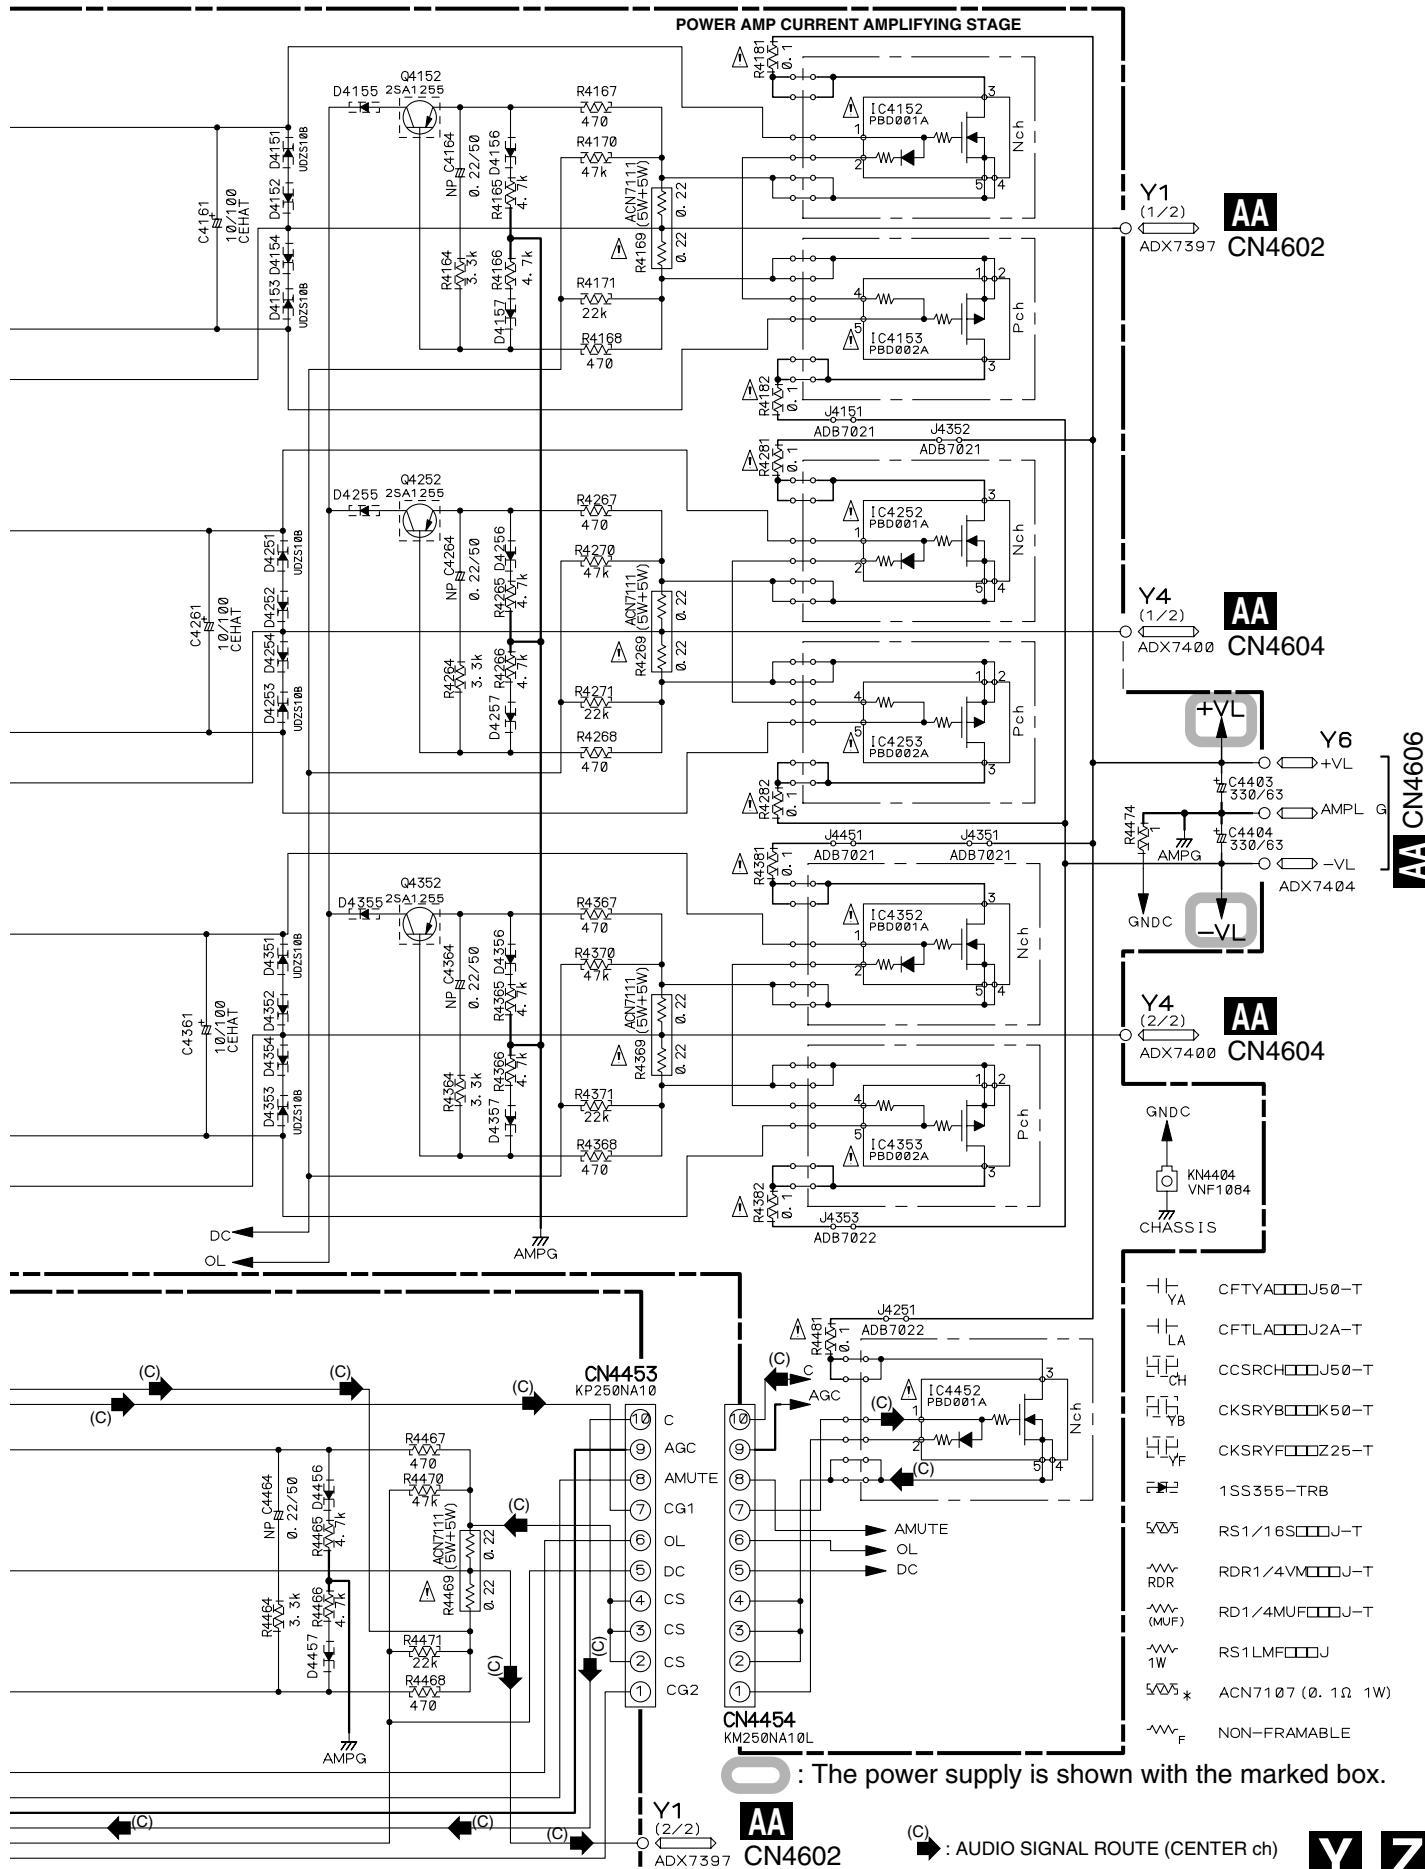


3.23 SP/PS, DIODE, TRANS 2-1 and VH TR ASSYS

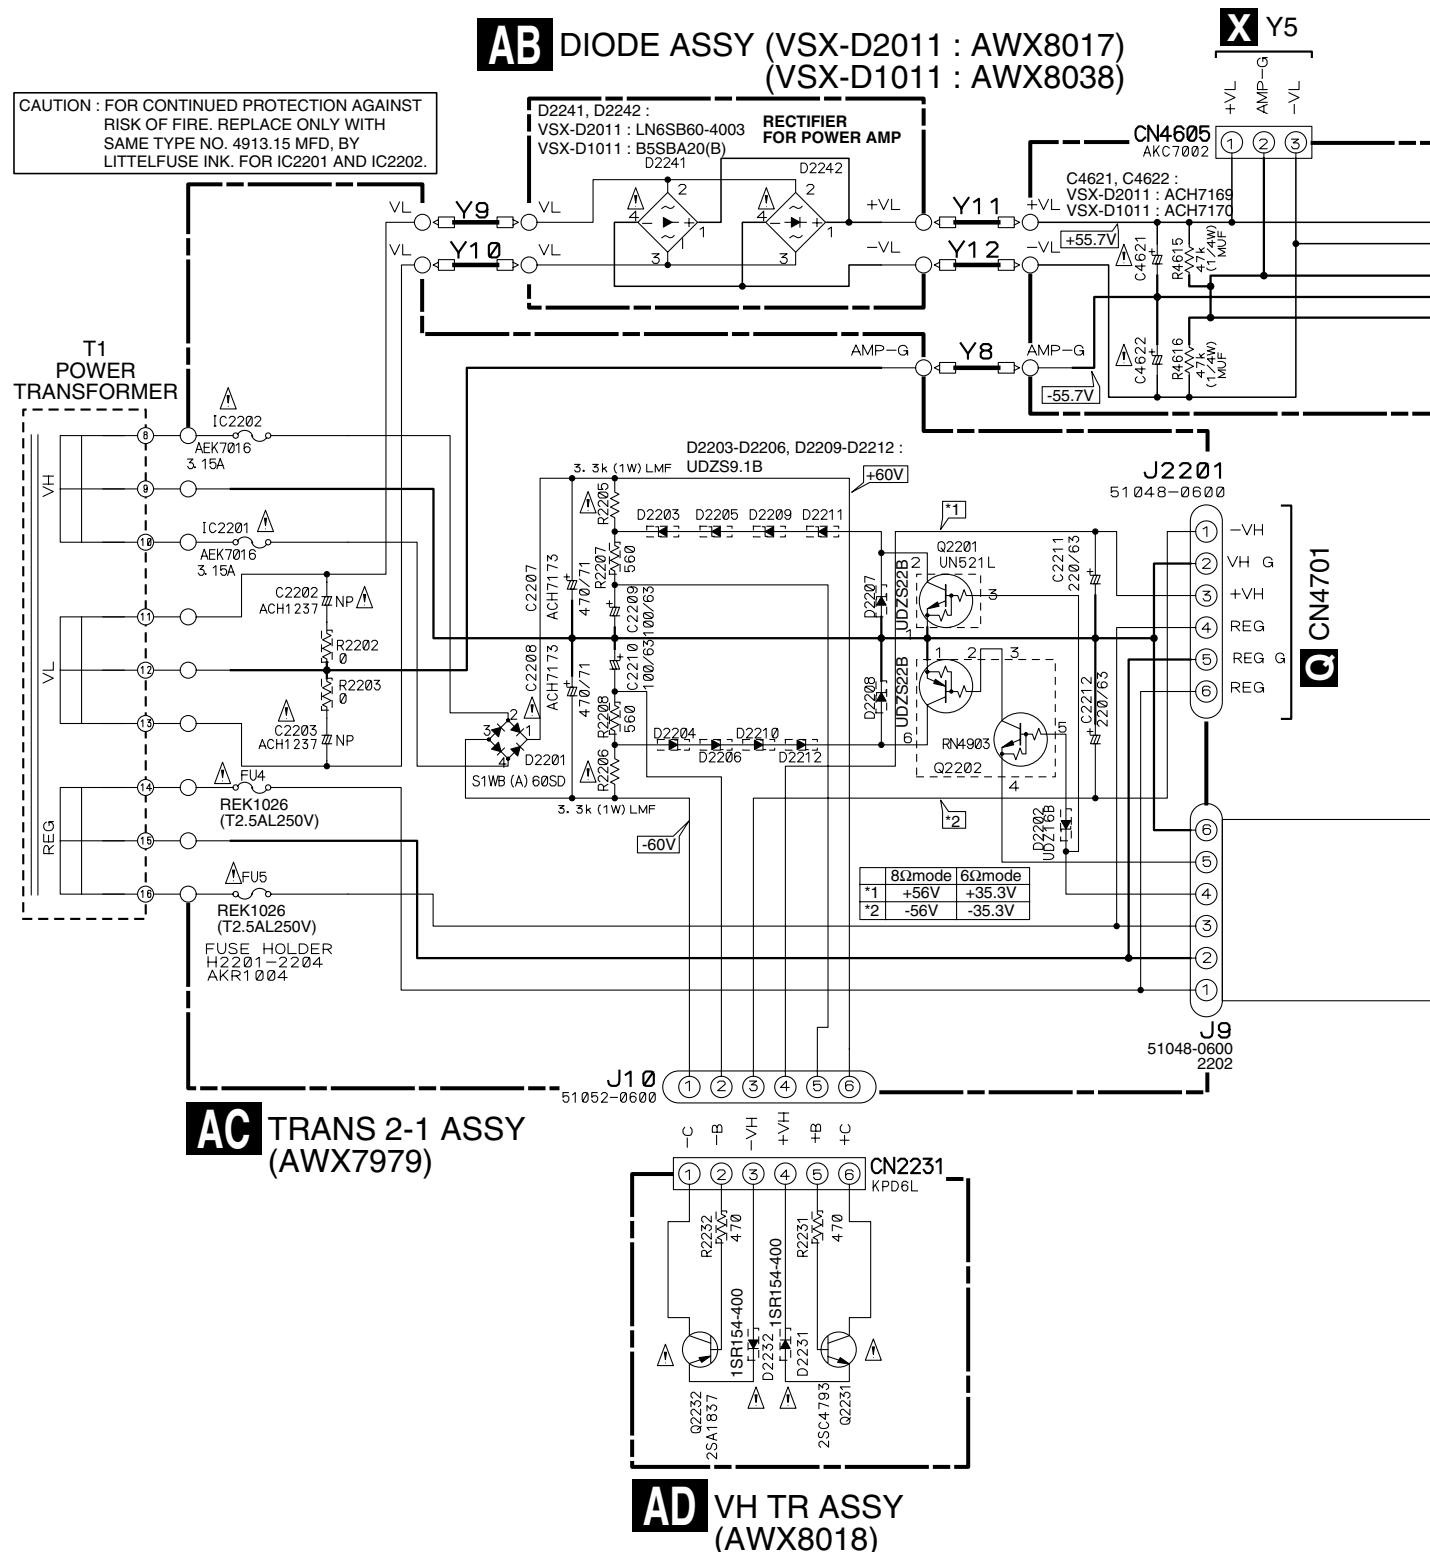

• NOTE FOR FUSE REPLACEMENT

**CAUTION -FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE WITH SAME TYPE AND RATINGS ONLY.**

AA AB AC AD

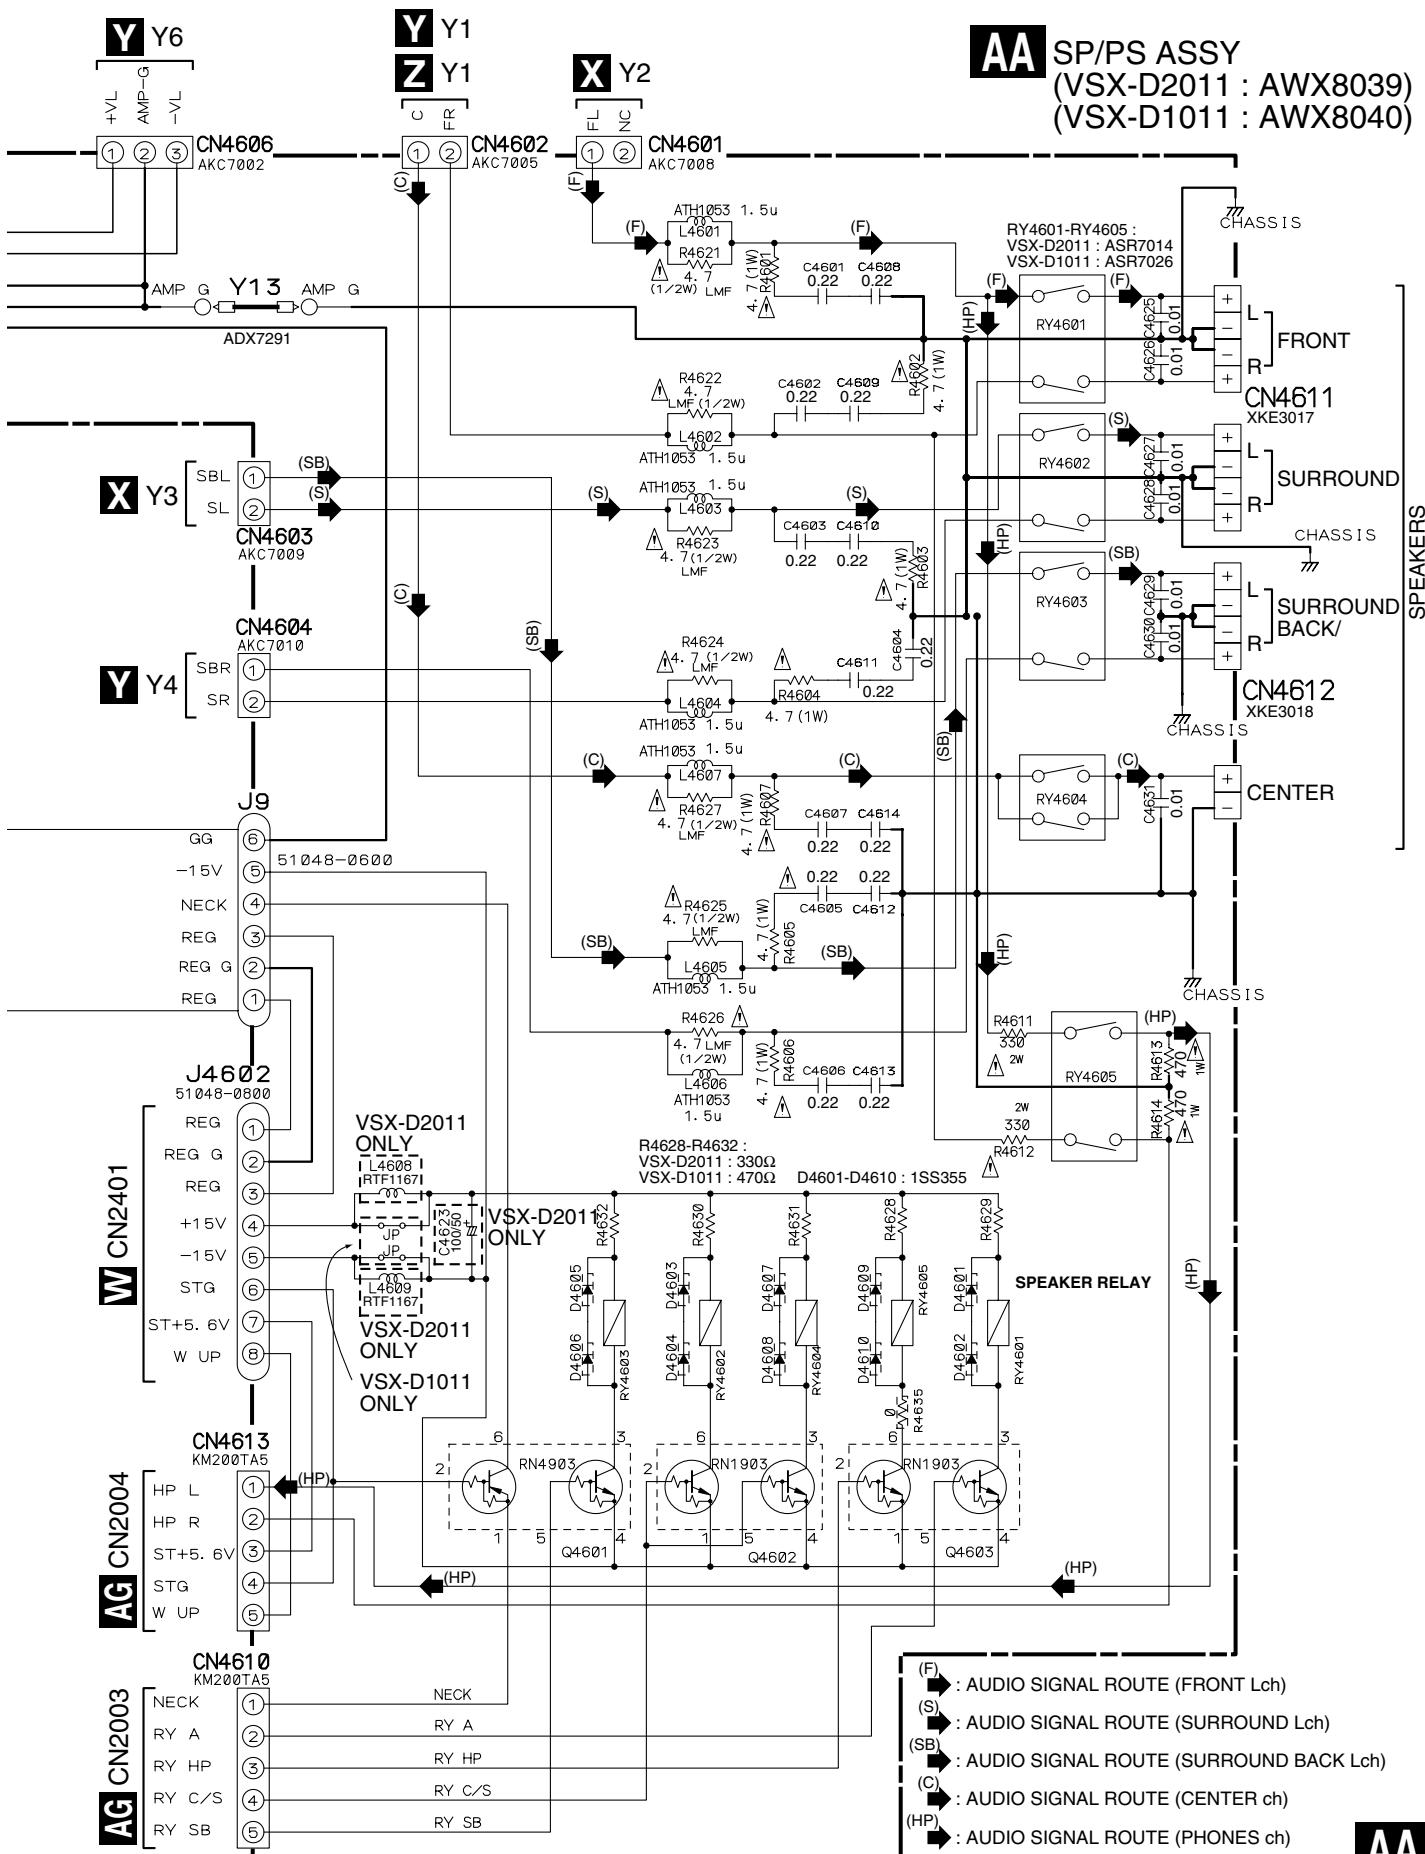


3.24 TRANS 2-2, TRANS 1 and PRIMARY ASSYS

A

- NOTE FOR FUSE REPLACEMENT


**CAUTION -FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE WITH SAME TYPE AND RATINGS ONLY.**

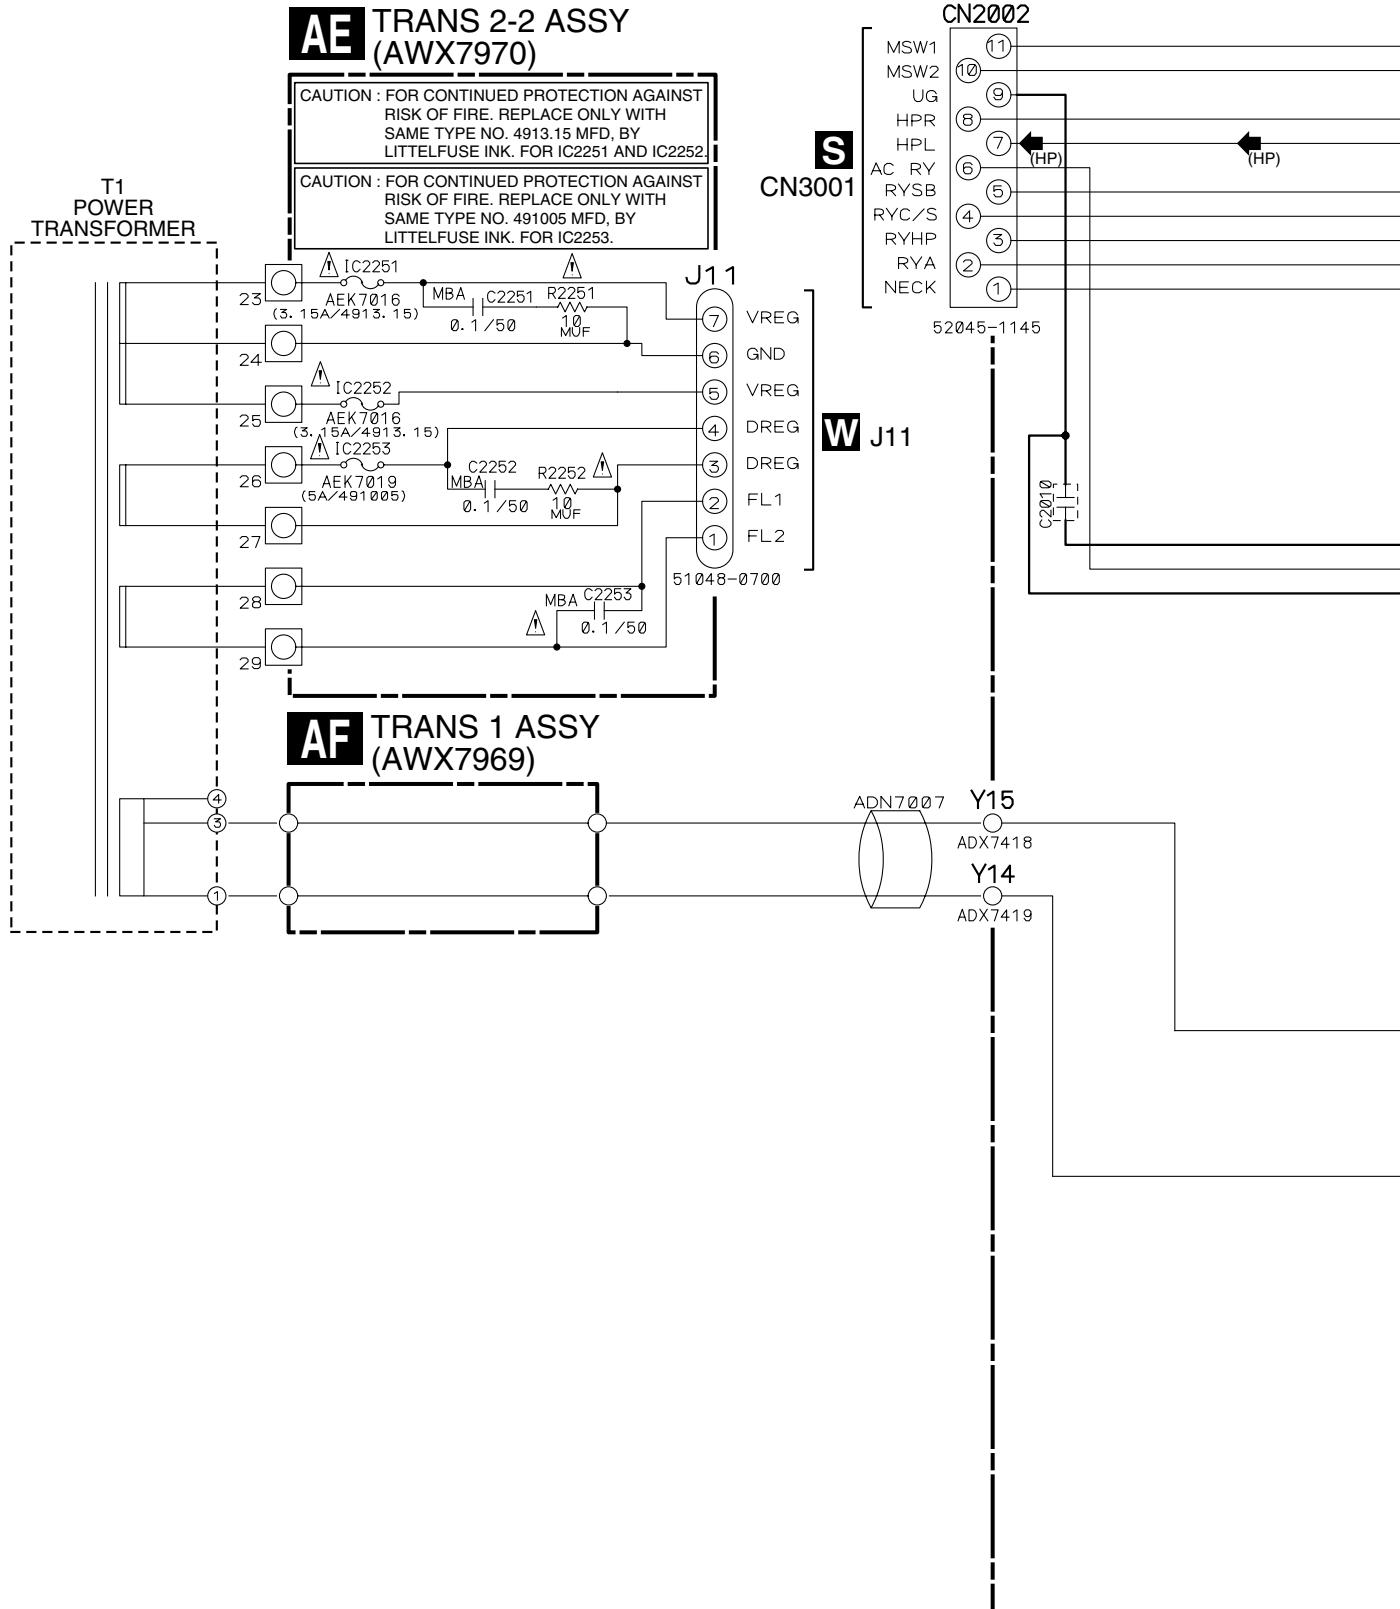

AE AF AG

AA CN4613**AA CN4610**

(HP) → : AUDIO SIGNAL ROUTE (PHONES ch)

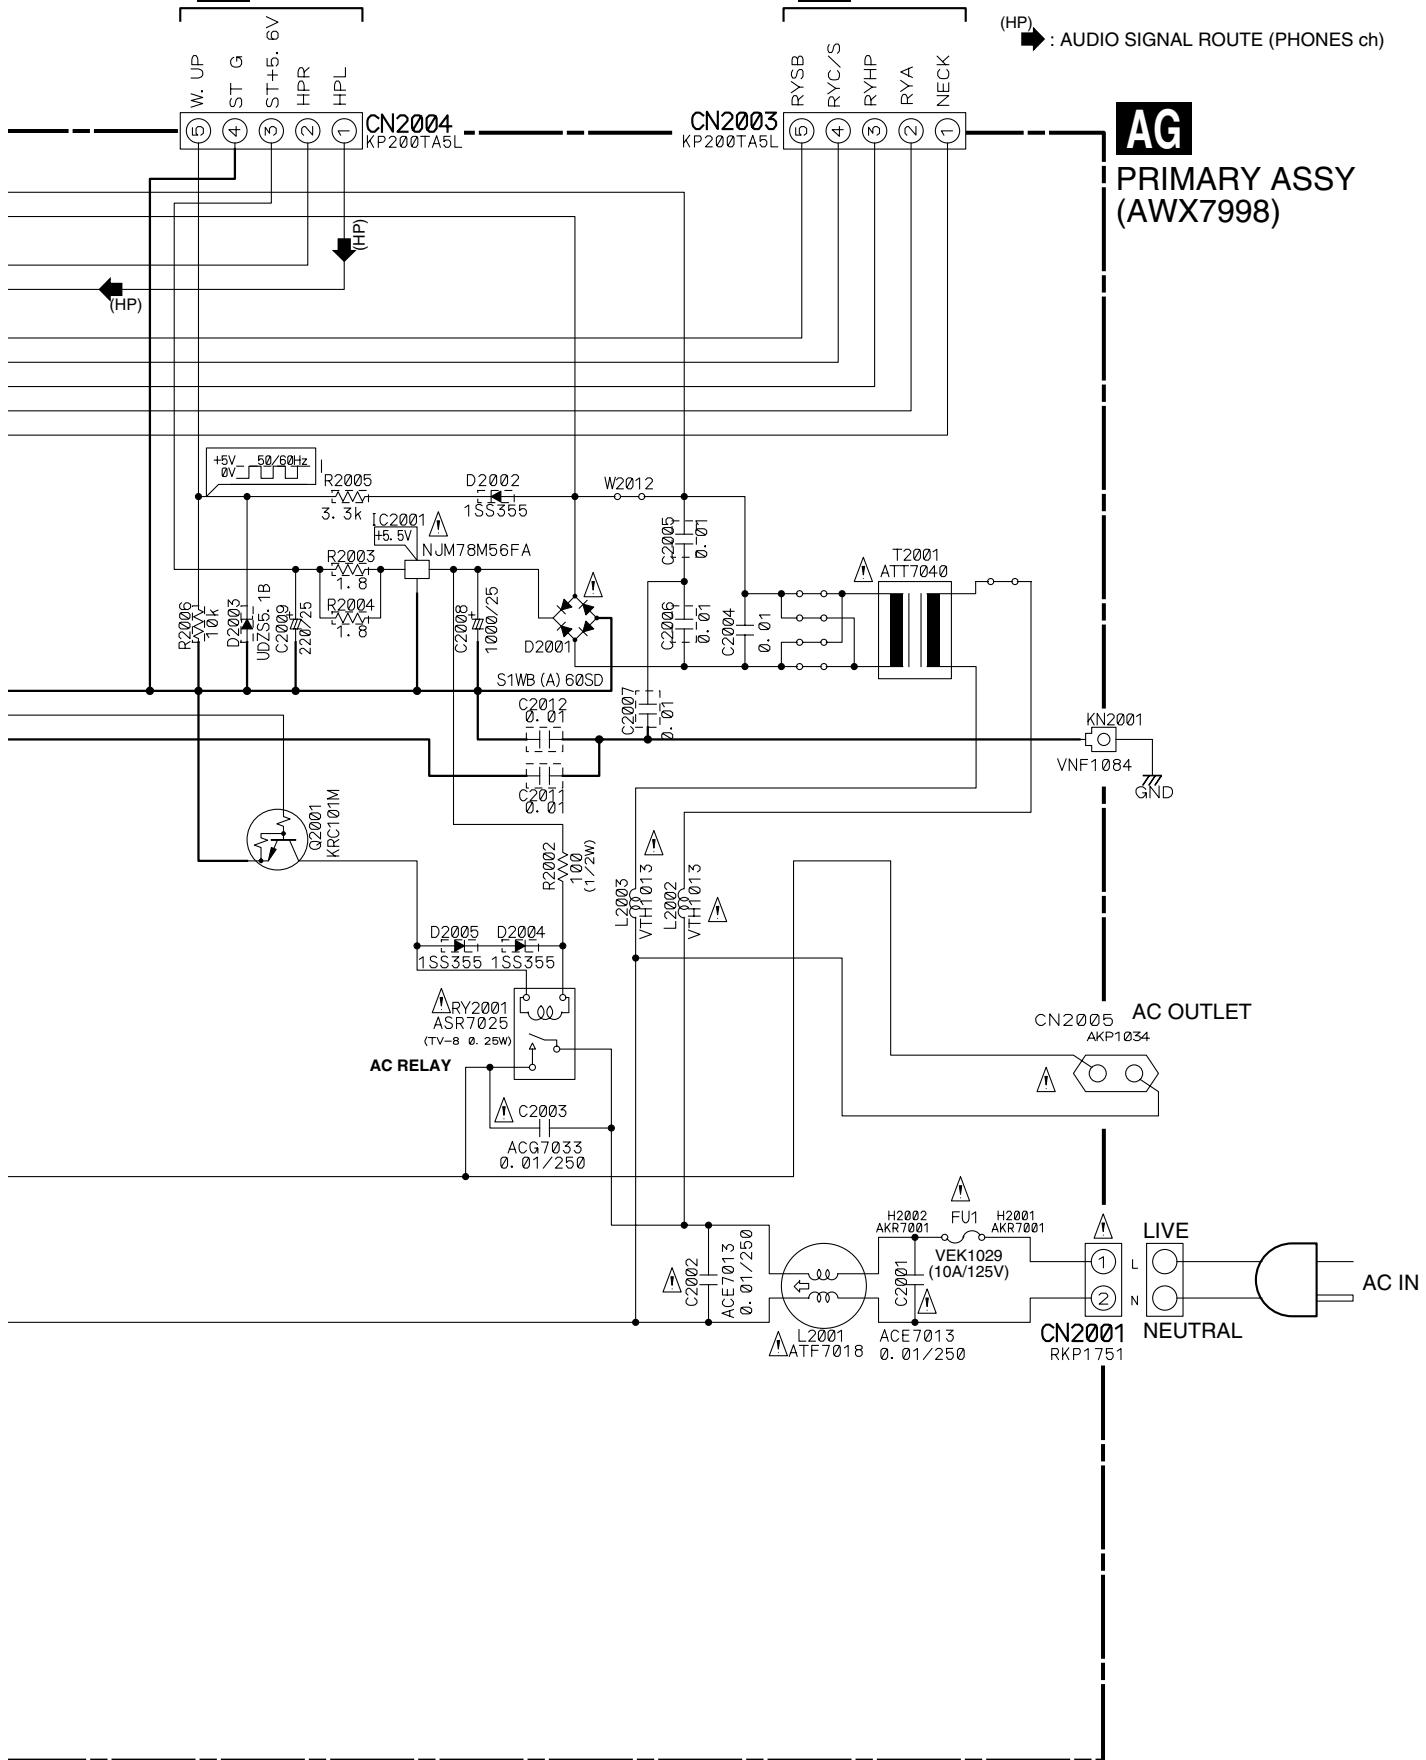


4. PCB CONNECTION DIAGRAM

A

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.
3. The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

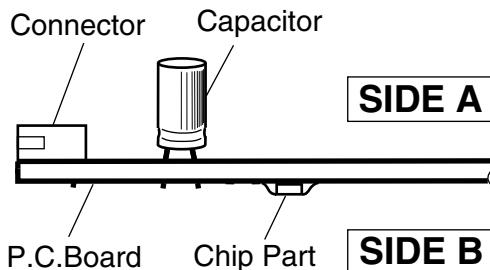

B

C

D

E


F

4.1 FM/AM TUNER MODULE

SIDE A

A FM/AM TUNER MODULE


SIDE A

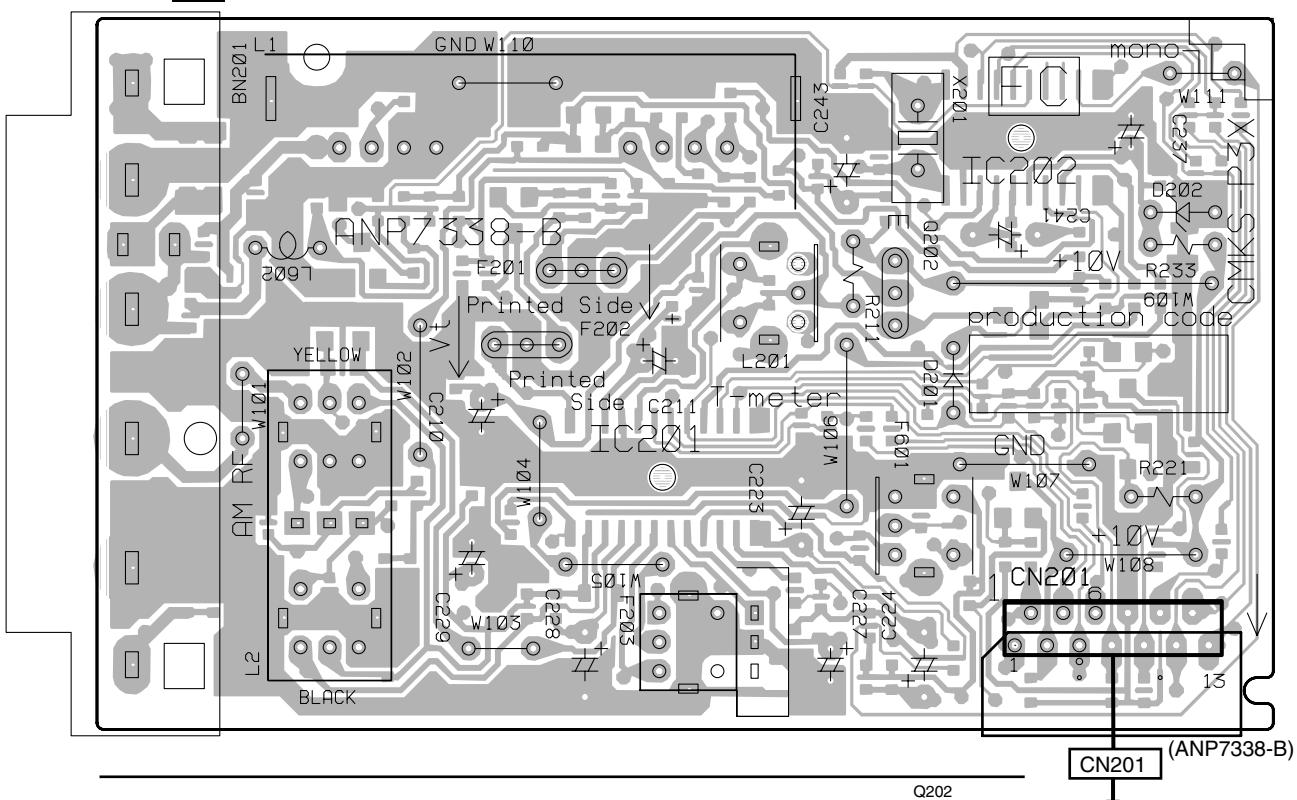

SIDE B

A FM/AM TUNER MODULE

SIDE B

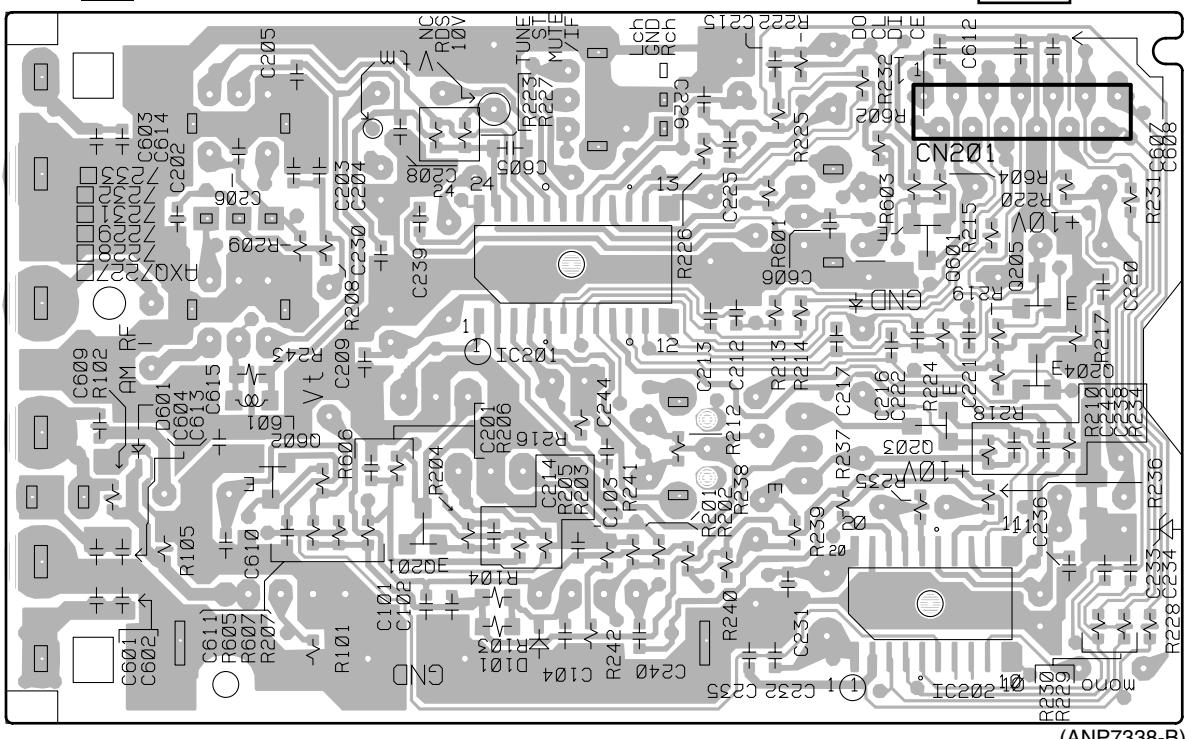


4.2 7.1CH I/O ASSY

A

SIDE A

B 7.1CH I/O ASSY

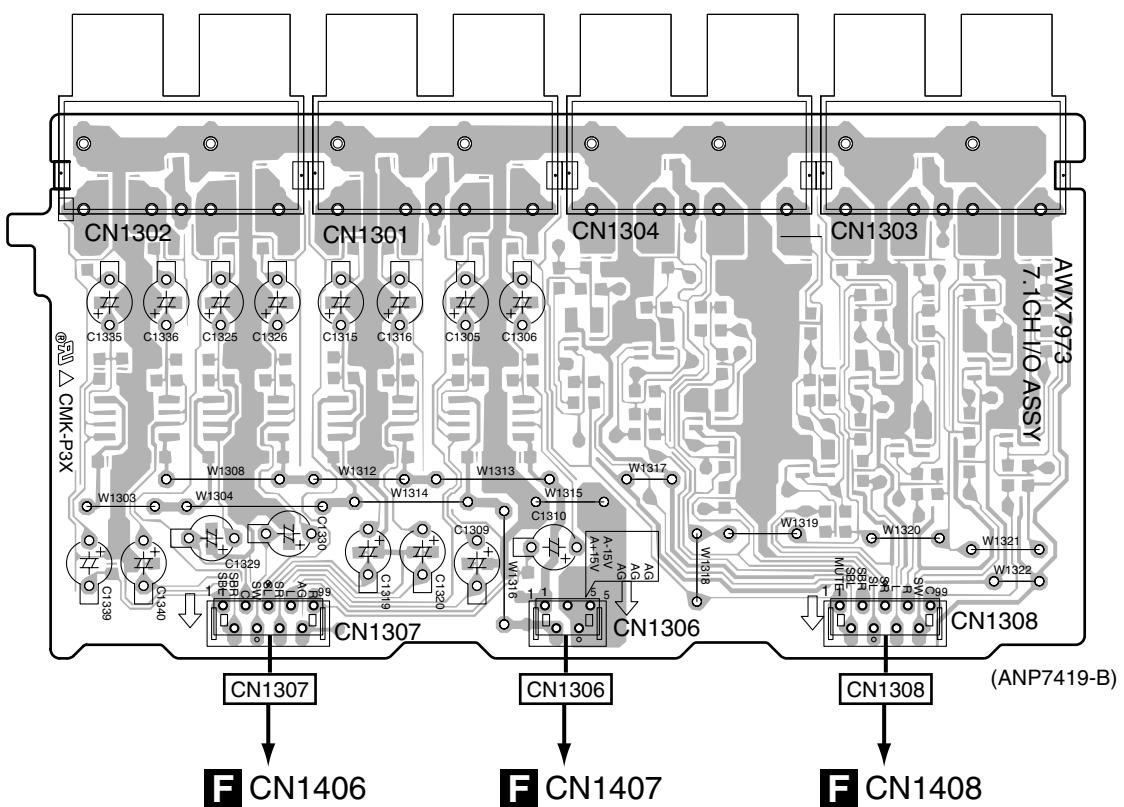SIDE A

B

C


D

E

F

SIDE B

B 7.1CH I/O ASSY

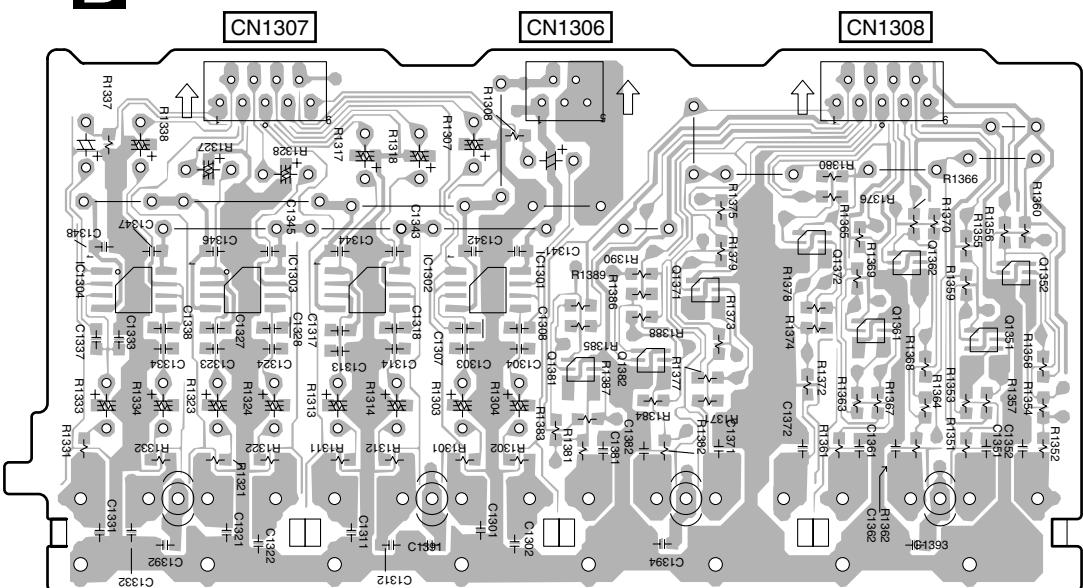
SIDE B**B**

4.3 V-AUDIO IN ASSY

SIDE A

SIDE A

C V-AUDIO IN ASSY

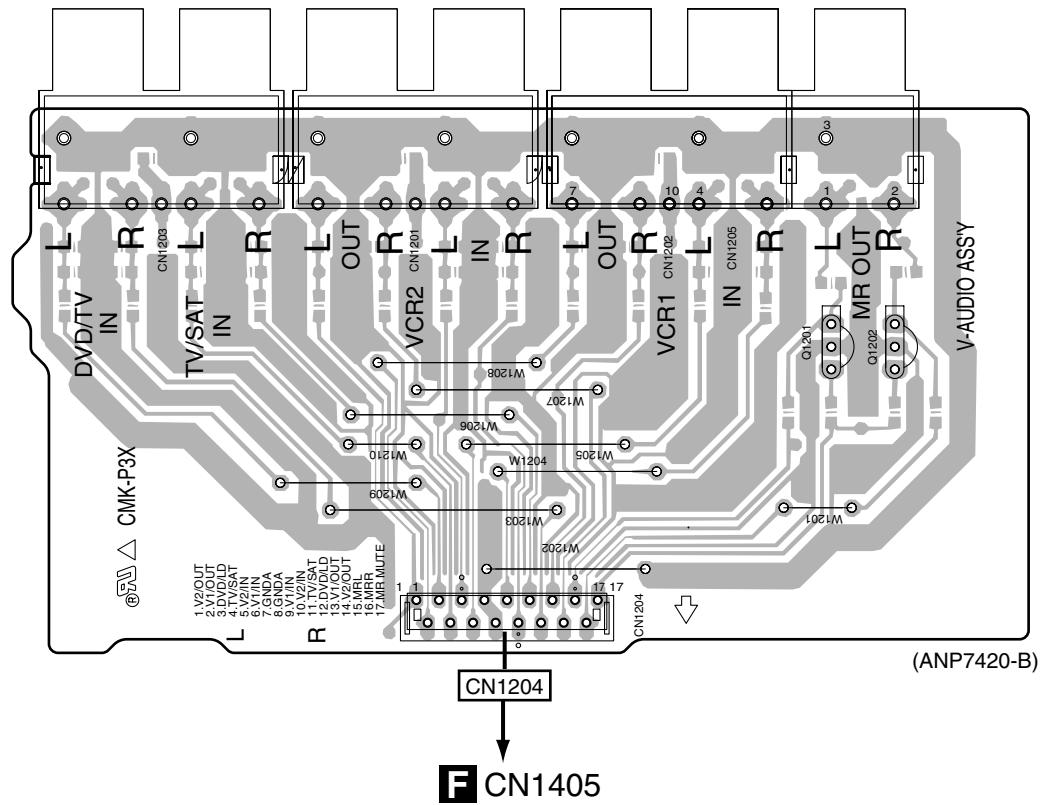


F CN1405

Q1201
Q1202

SIDE B

SIDE B


C V-AUDIO IN ASSY

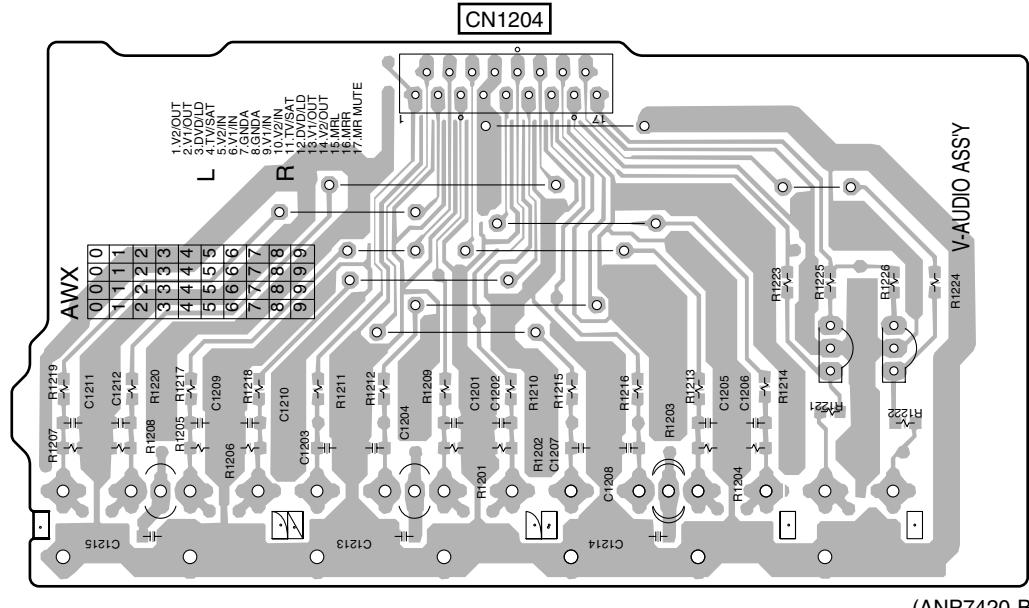


C

4.4 FRONT IN, OPTICAL IN and INPUT CONNECT ASSYS


A

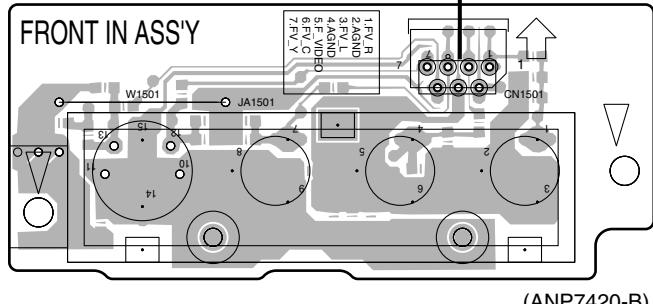SIDE A**D FRONT IN ASSY**

B

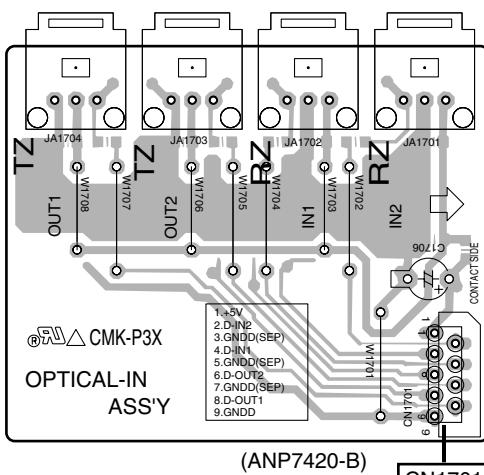E OPTICAL IN ASSY

C

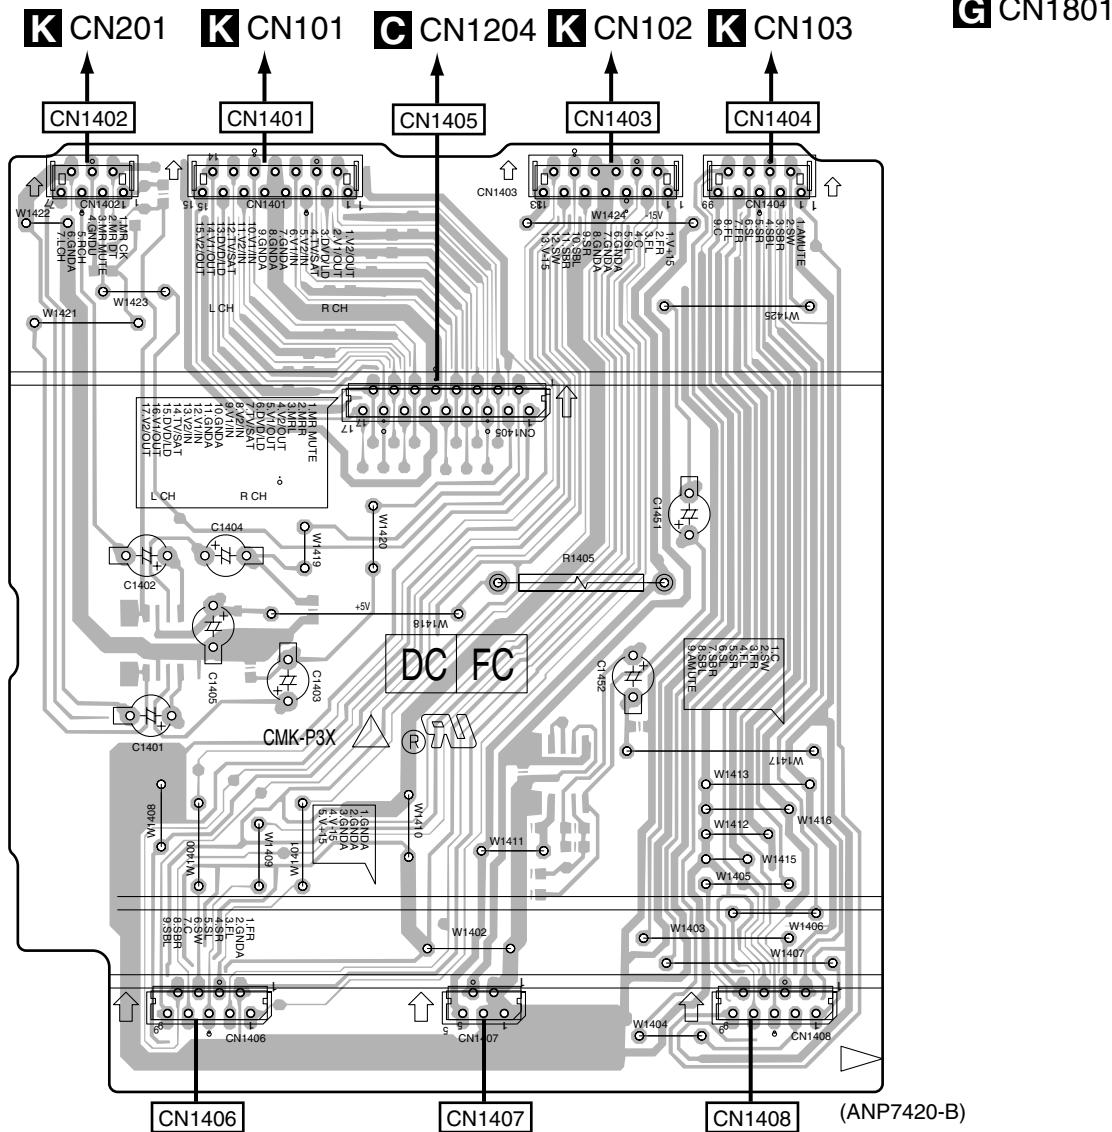
F INPUT CONNECT ASSY

D

D E F**B CN1307****B CN1306****B CN1308**


SIDE B

E OPTICAL IN ASSY

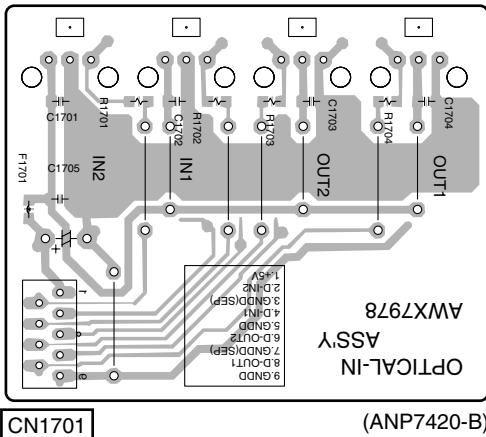


(ANP7420-B)

D FRONT IN ASSY

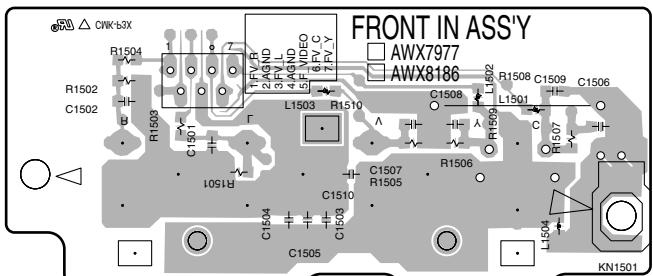

(ANP7420-B)

F INPUT CONNECT ASSY

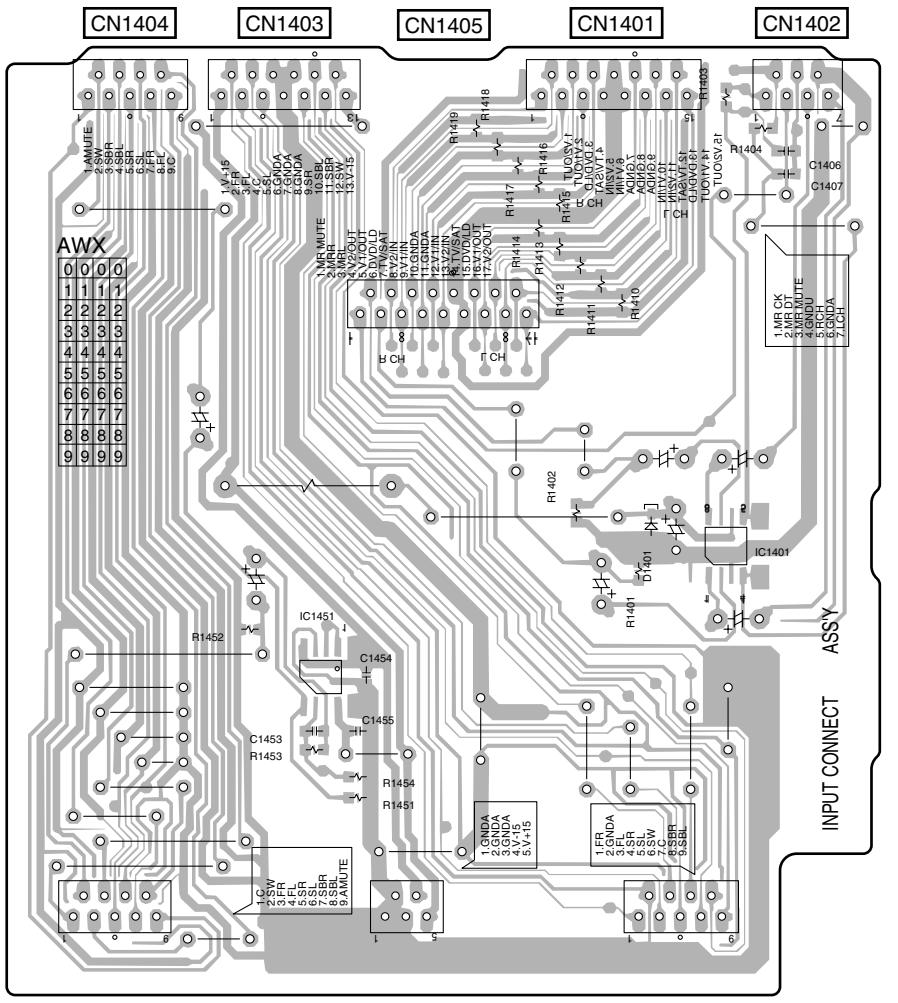

06 (ANP7420-B)

5

3

7


6

67

VSX-D2011-S

D E F

4.5 COAXIAL IN ASSY

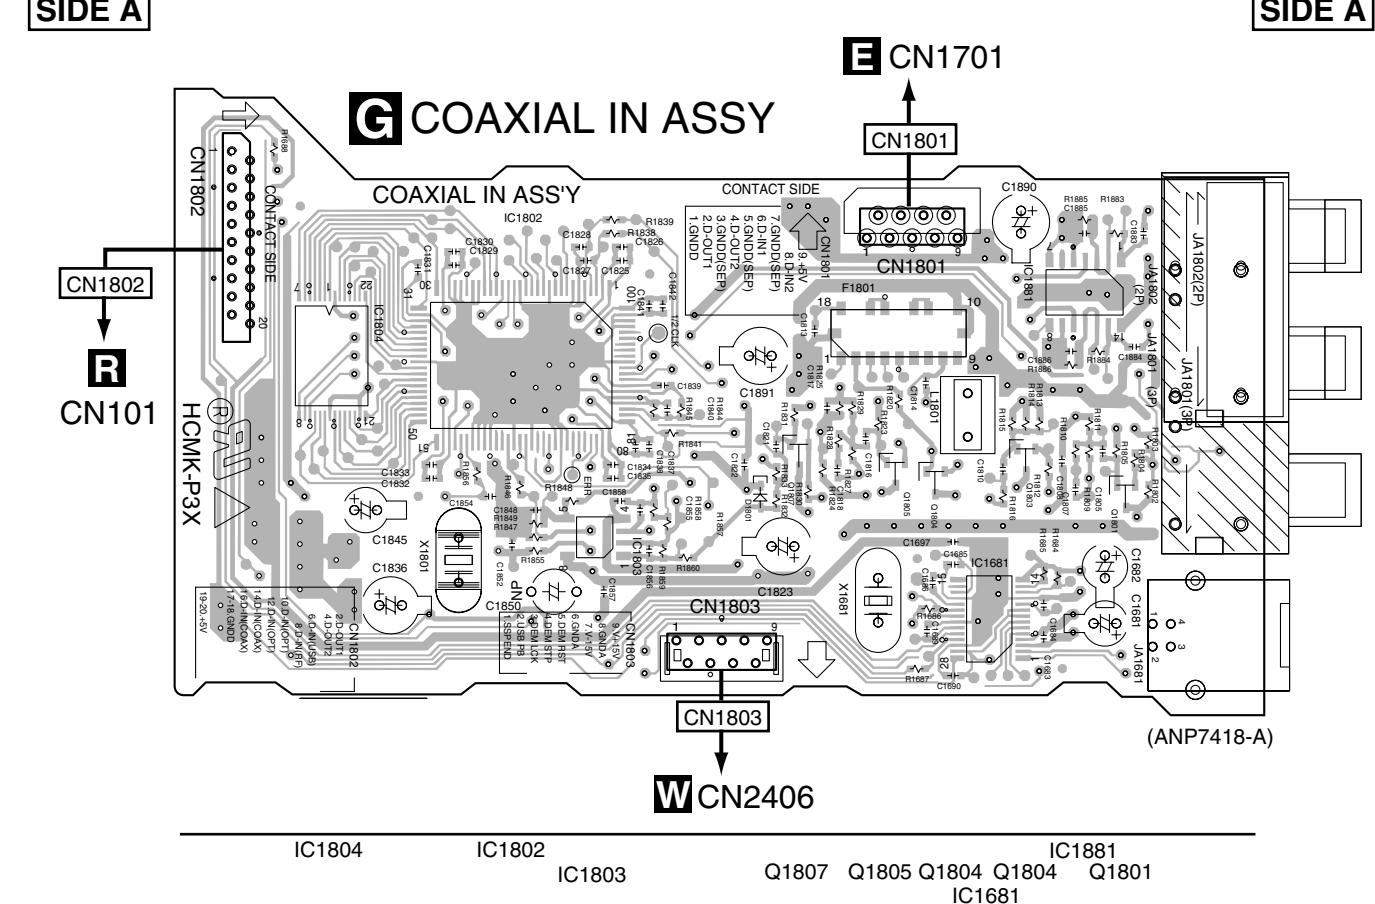

A

B

C

D

E

F

G

68

1

2

3

4

SIDE B**SIDE B**

G COAXIAL IN ASSY


G

4.6 VIDEO ASSY

SIDE A

SIDE A

H VIDEO ASSY

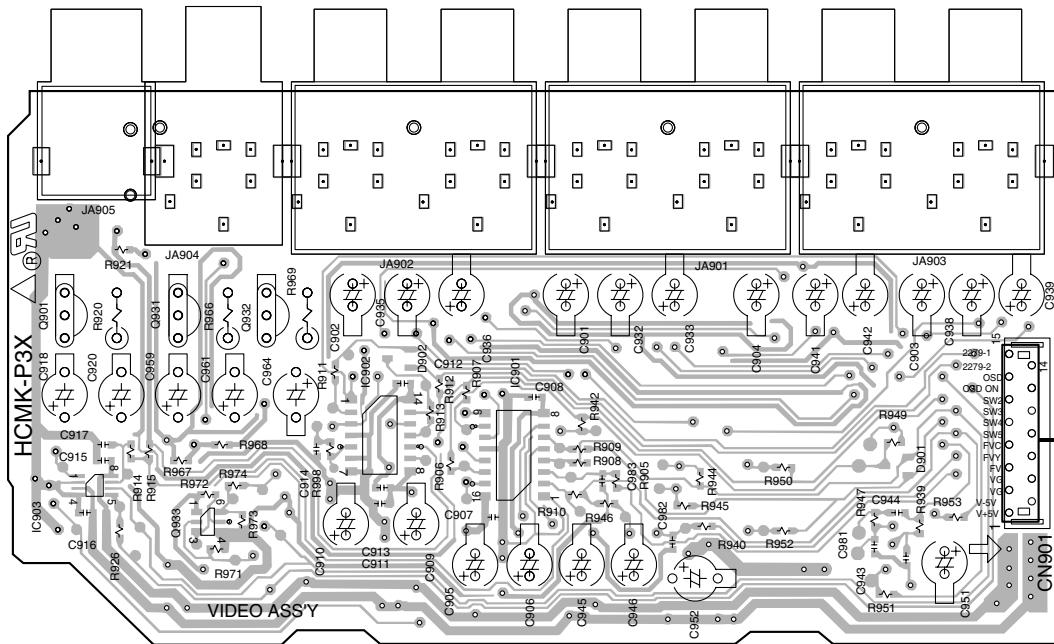


(ANP7418-A)

Q901 Q931 Q932 IC902 IC901
IC903 Q933

SIDE B

SIDE B

H VIDEO ASSY

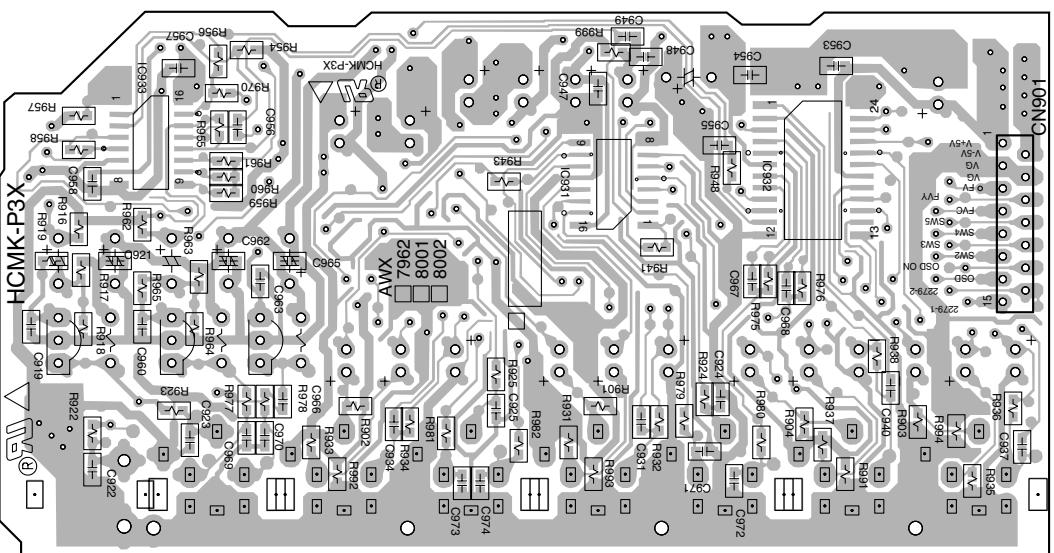


(ANP7418-A)


IC933 IC931 IC932

4.7 MAIN CONTROL ASSY

SIDE A

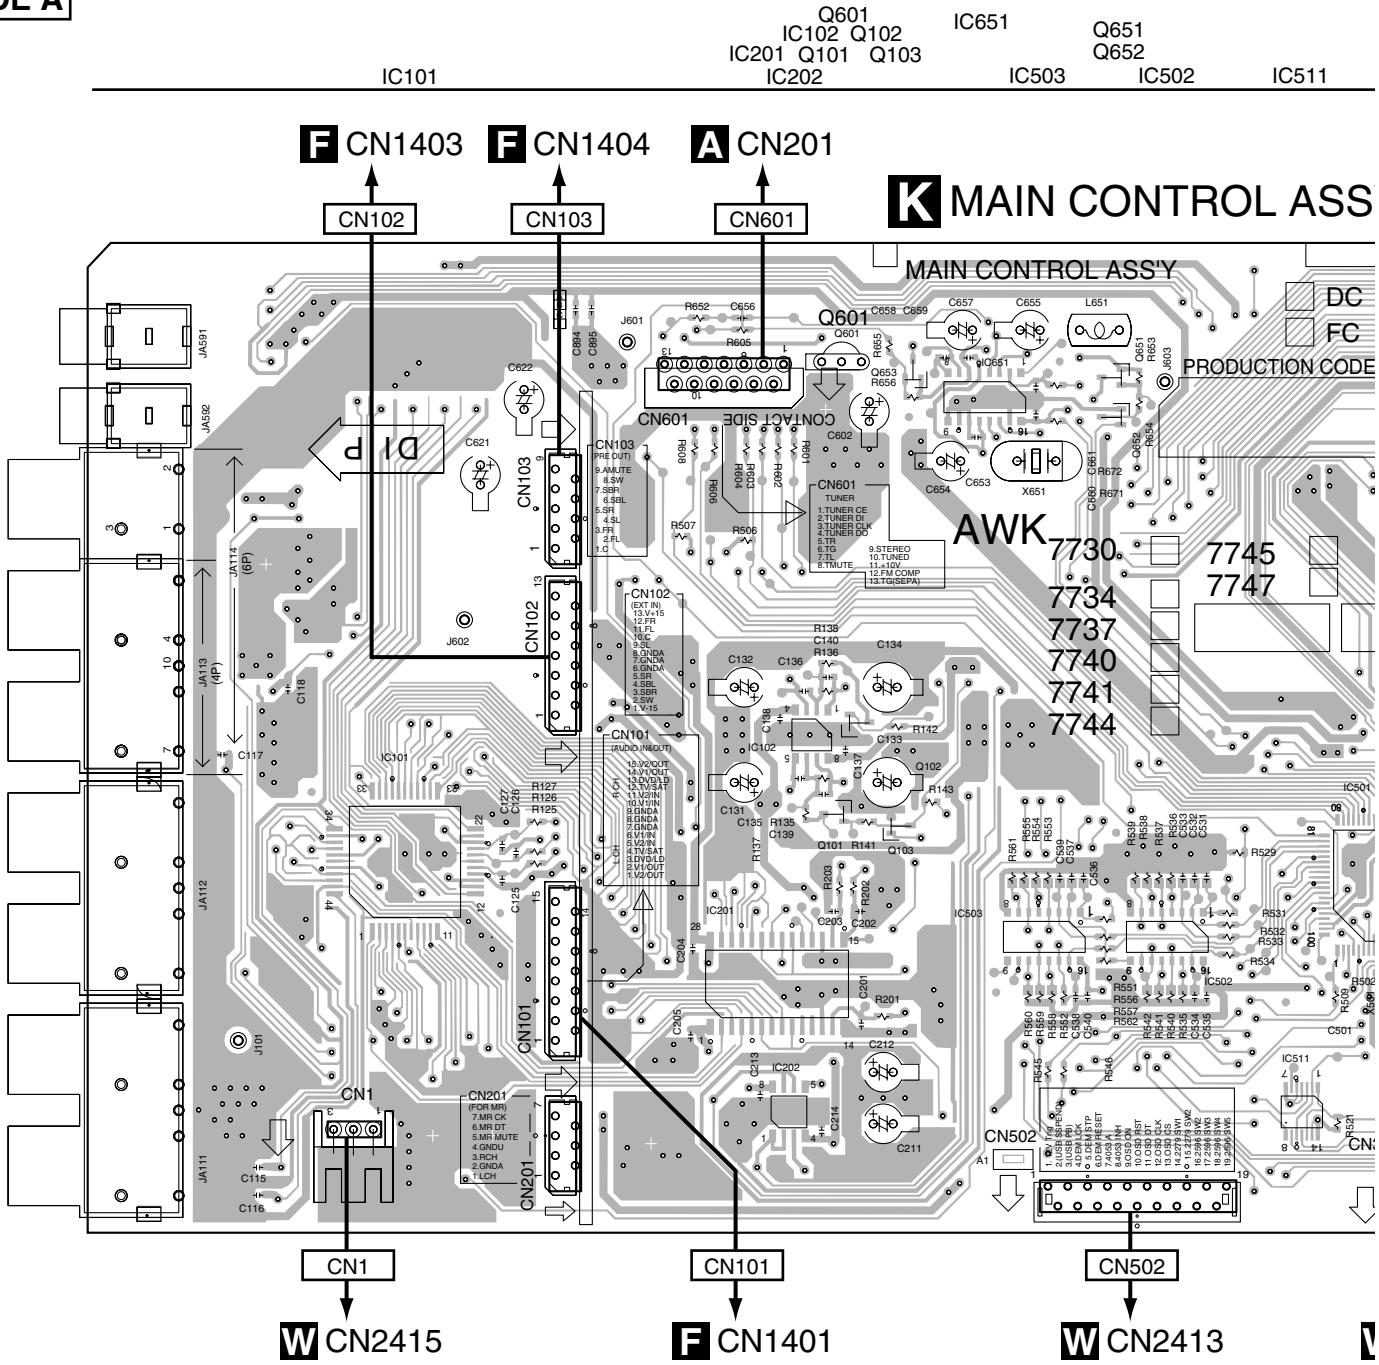

SIDE A

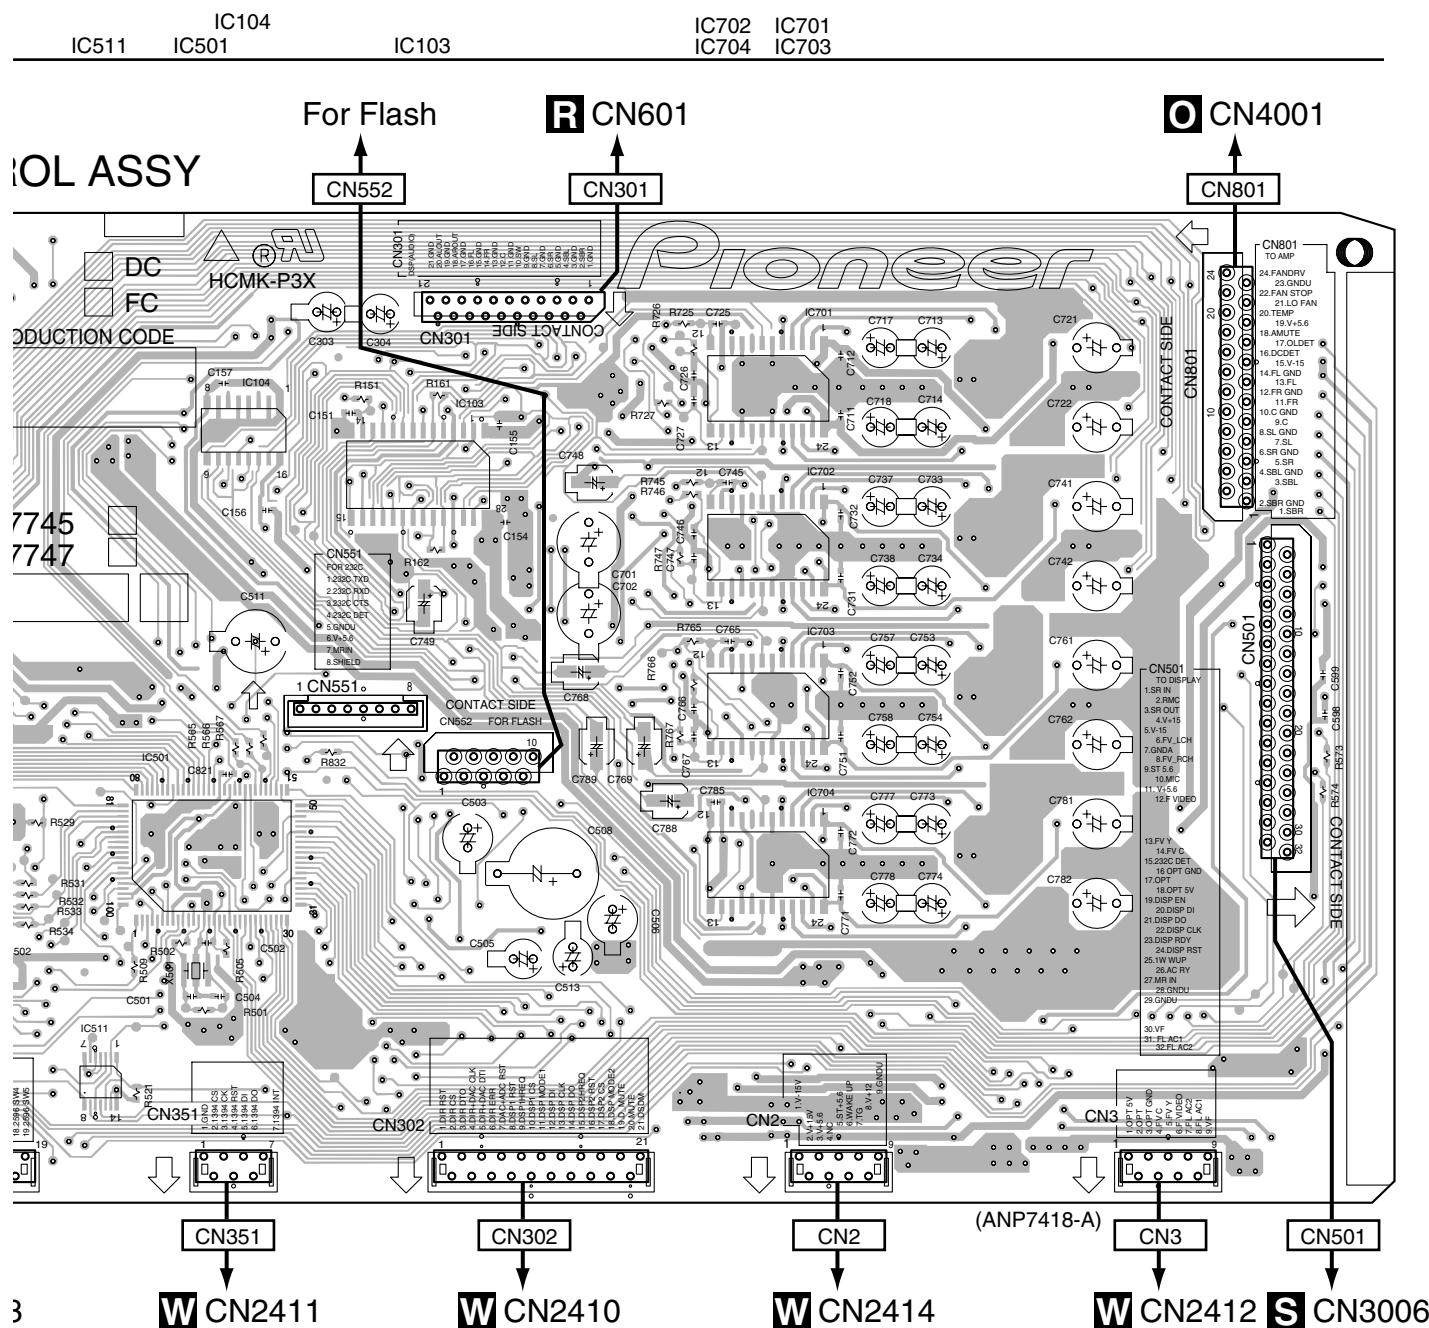


SIDE B

IC711
IC712
IC713
IC714

Q501 IC302 Q511

K MAIN CONTROL ASSY

CN301

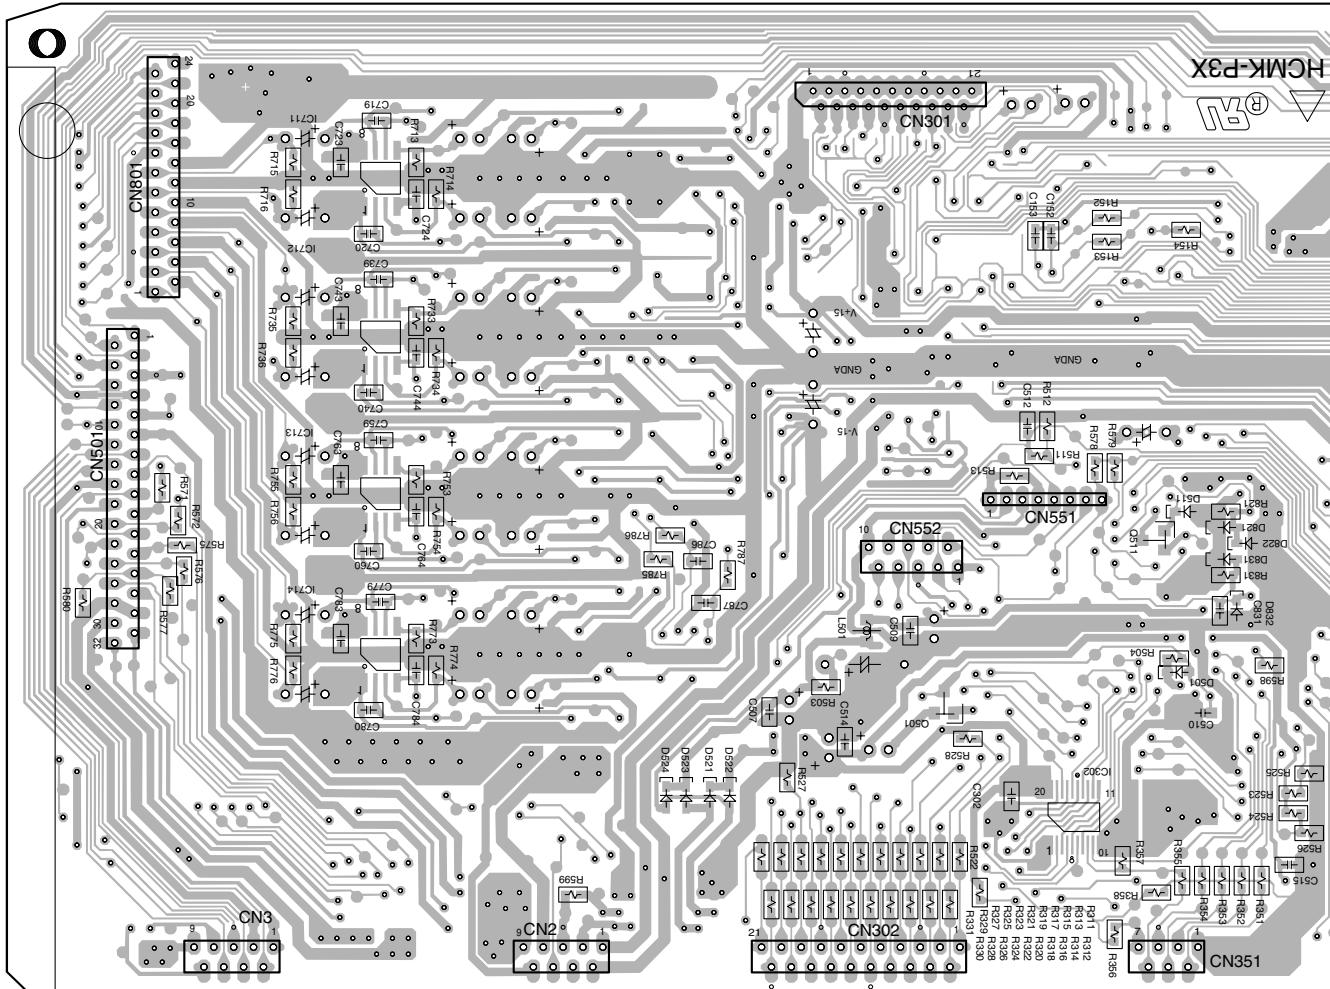

CN3

CN2

CN30

CN551

CN351


K

SIDE B

1

Q601

Q251

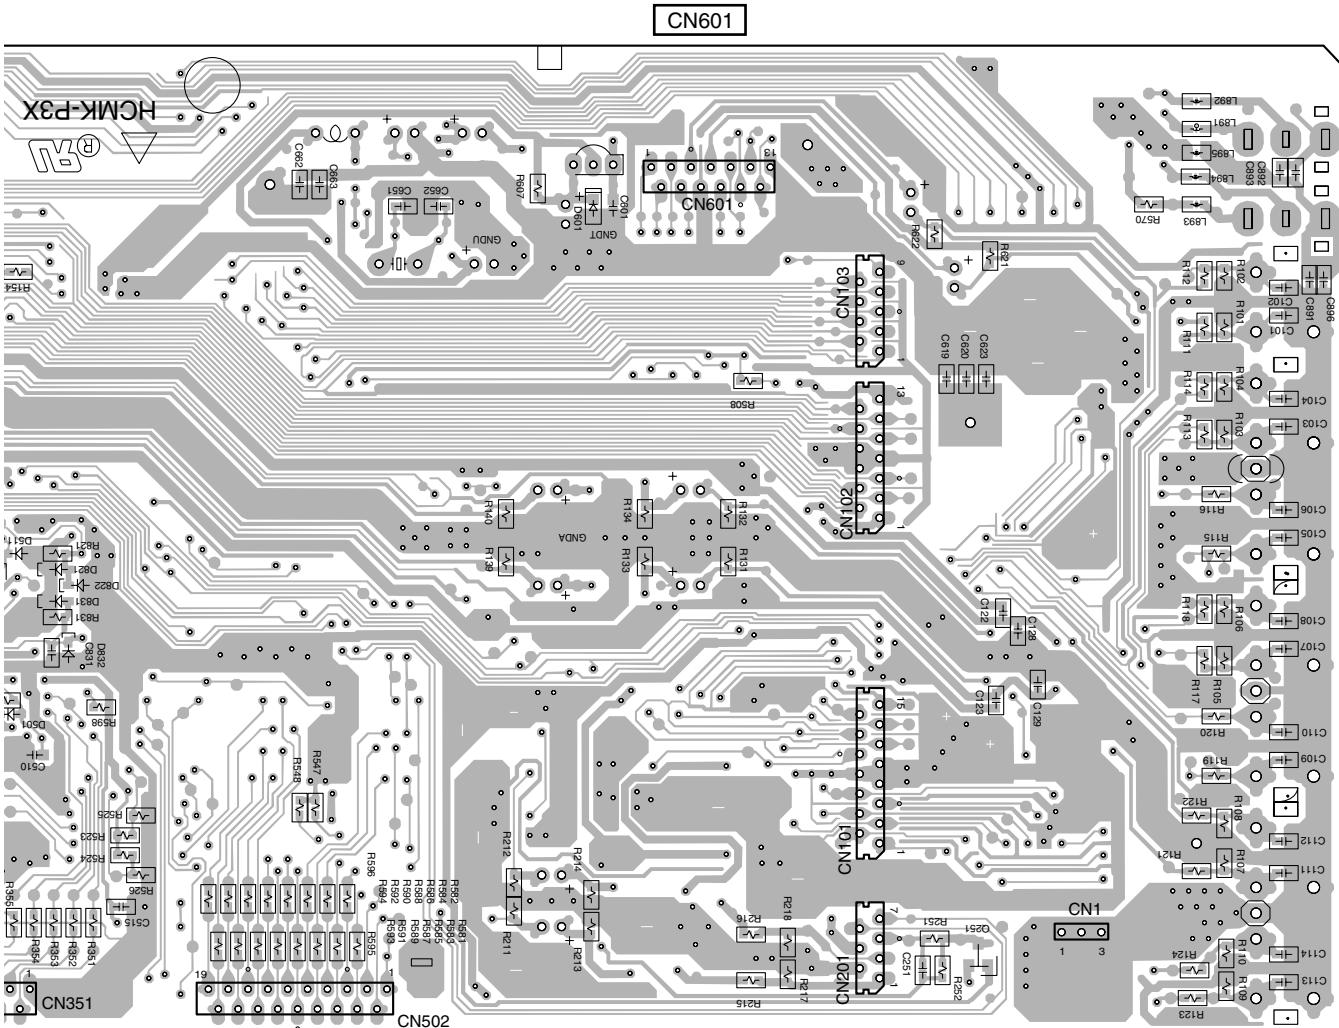

351

CN502


CN1

(ANP7418-A)

K

4.8 MIC & F.OPT IN, MIC AMP and DSP CONNECTION ASSYS


SIDE A

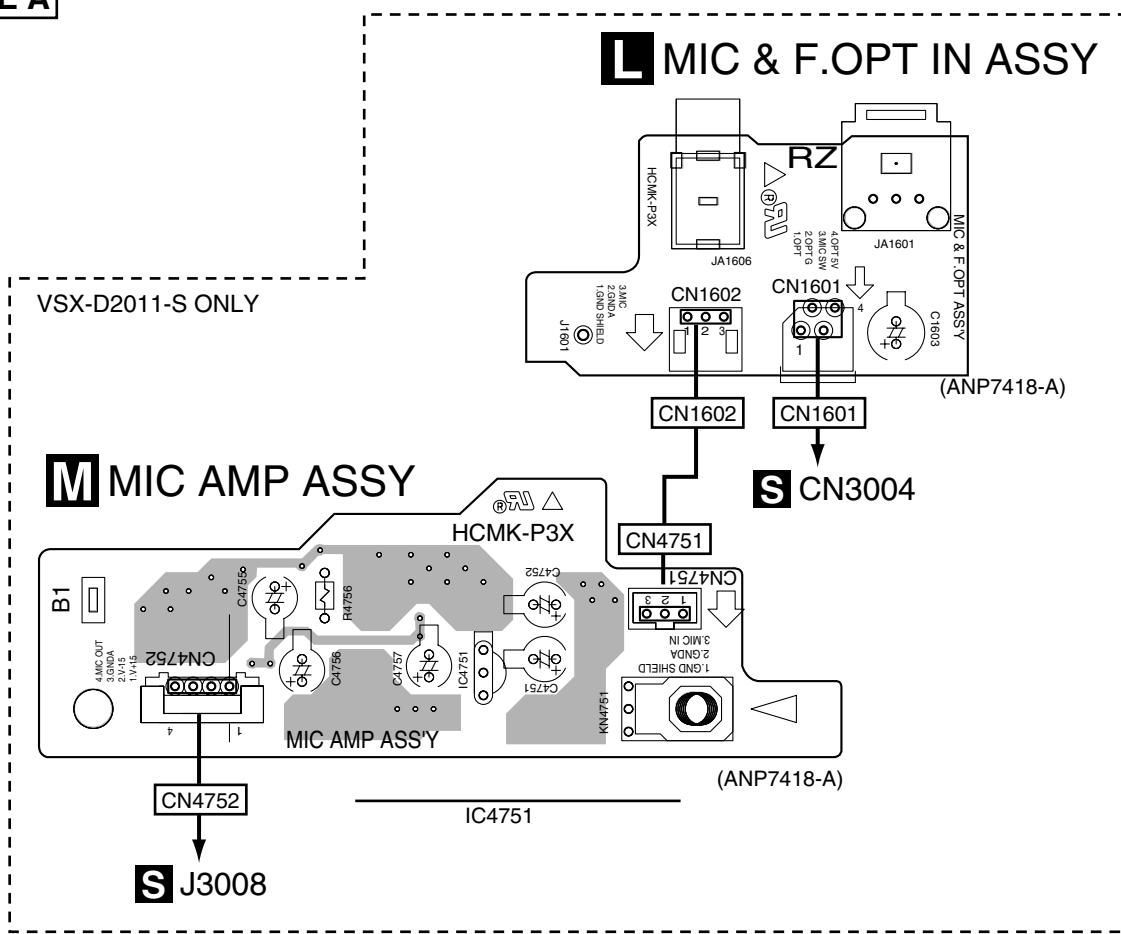

L M N

SIDE B


A

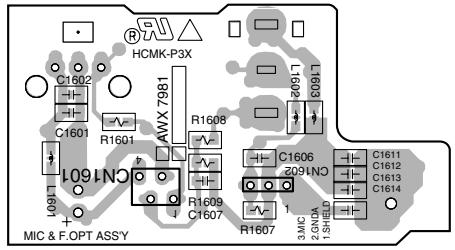L MIC & F.OPT IN ASSY

CN1601 CN1602 (ANP7418-A)


VSX-D2011-S ONLY

B

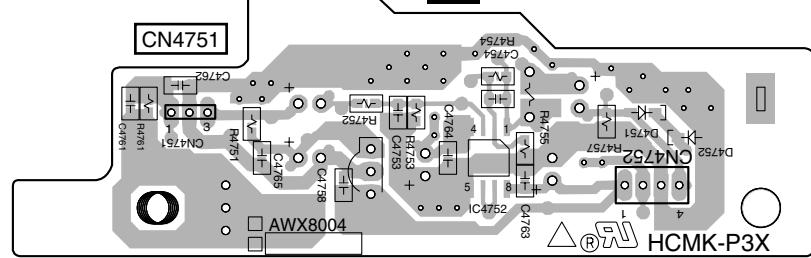M MIC AMP ASSY

CN4752 (ANP7418-A)

C

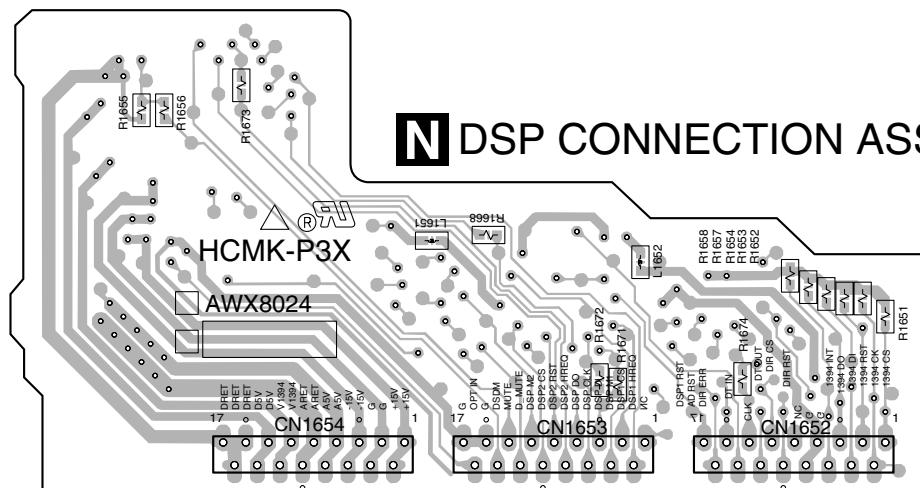N DSP CONNECTION ASSY

CN1654

CN1653

CN1652

(ANP7418-A)

D

E


F

L M N

VSX-D2011-S

4.9 POWER AMP IN ASSY

A

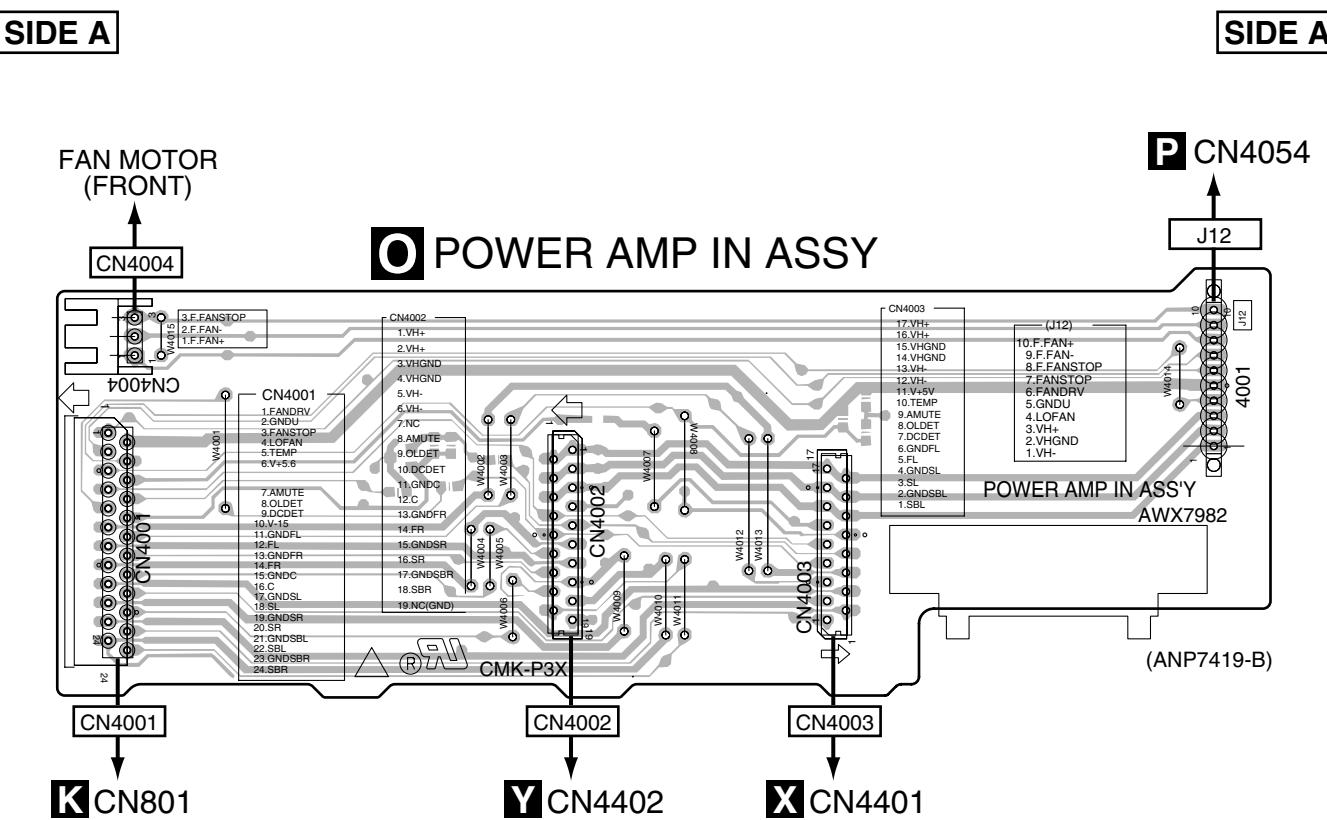

B


C

D

E

F


76

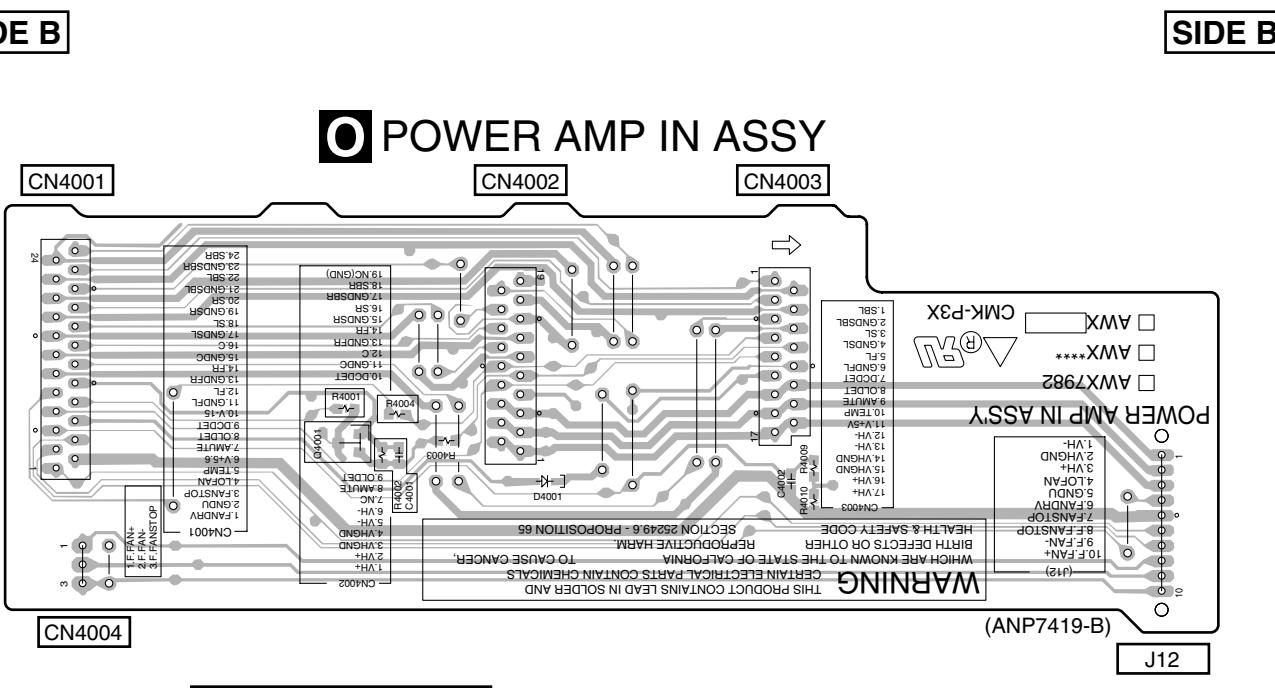SIDE A


4.10 FAN DRIVE and FAN CONNECTION ASSYS

SIDE A

P FAN DRIVE ASSY

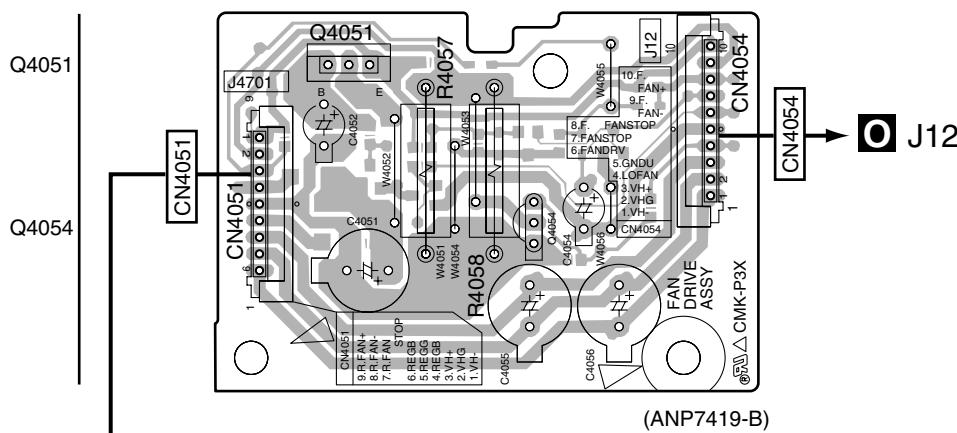


Q FAN CONNECTION ASSY

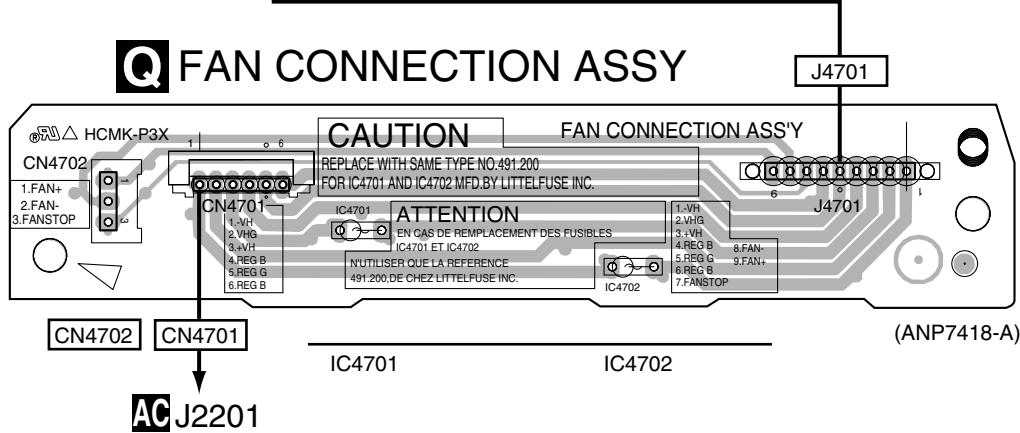


SIDE B

Q FAN CONNECTION ASSY

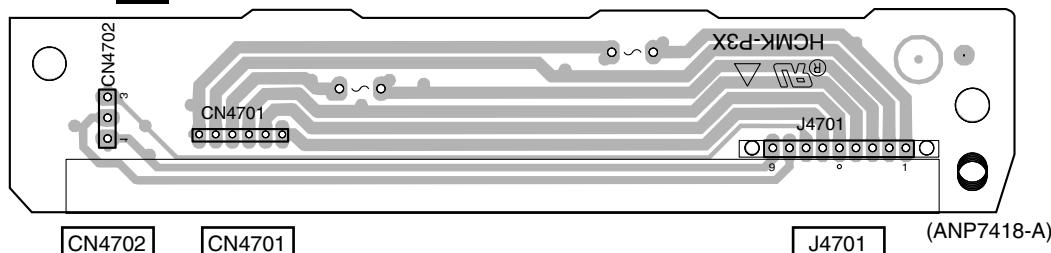

P FAN DRIVE ASSY

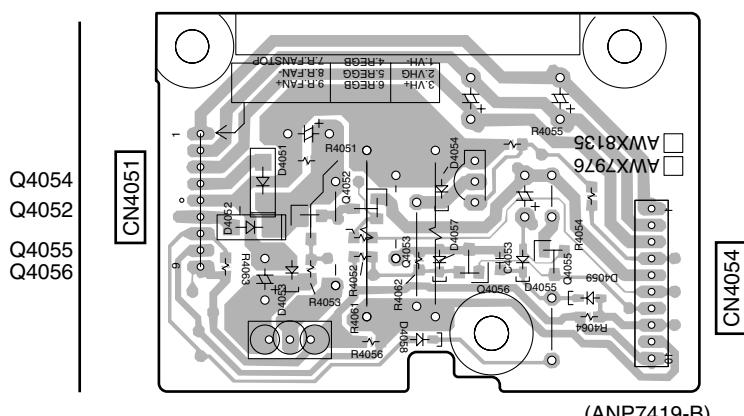

SIDE A

P Q

4.11 DSP ASSY

A

SIDE A
K CN301
R DSP ASSY

- This diagram has four layers.
- In the two middle layers, mainly Vcc and GND are connected.




Q972	IC661	IC561	IC621	IC521	IC471	IC302	IC306	IC304
Q971		IC901				IC301	IC305	IC701

R

SIDE B

- This diagram has four layers.
- In the two middle layers, mainly Vcc and GND are connected.

R DSP ASSY

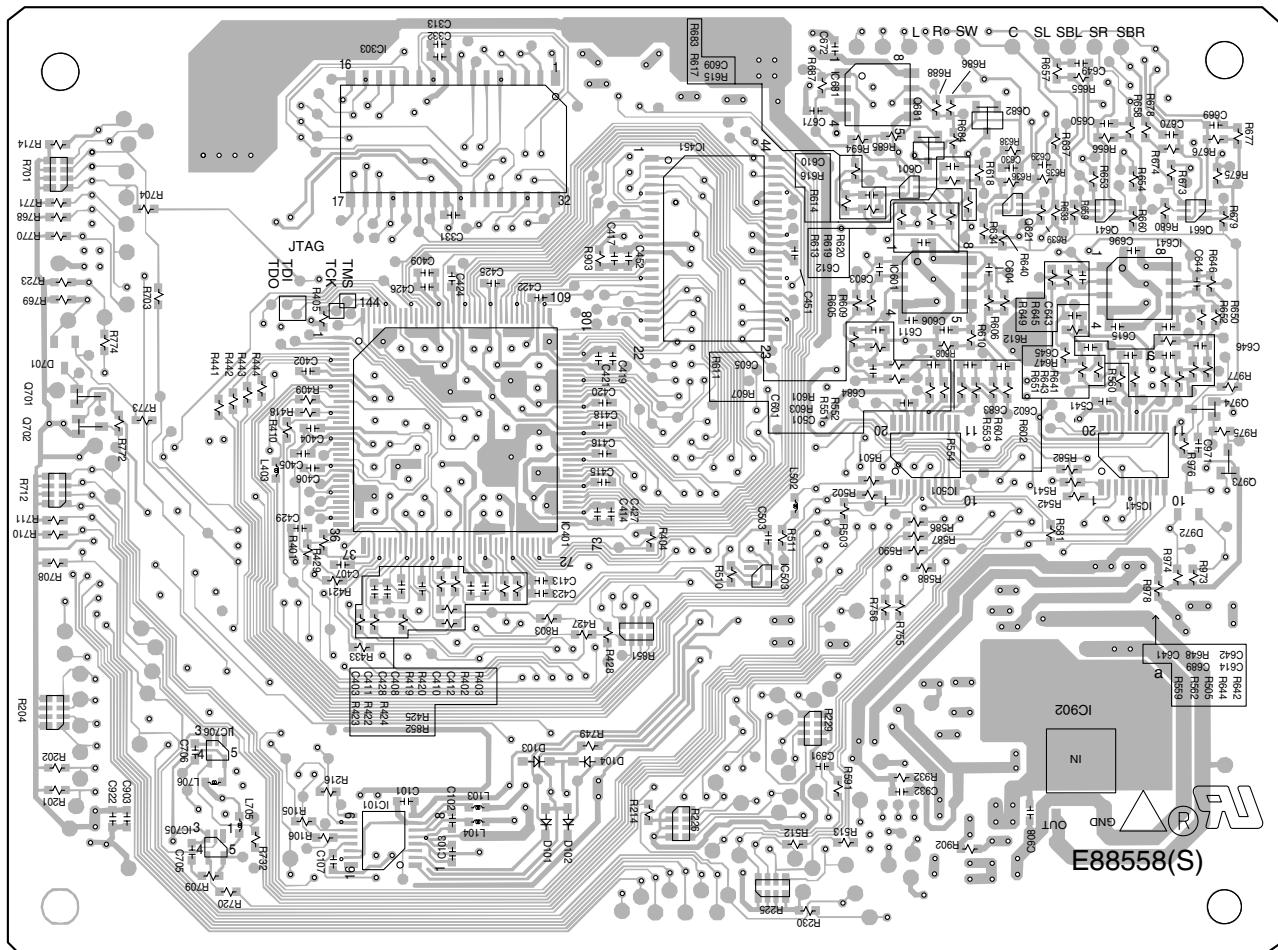

(ANP7441-A)

Q701
Q702IC706
IC705IC303
IC101 IC401


IC451

IC681
Q681
Q601
IC601Q682
Q621Q641
IC611
Q661
Q974
IC902 IC541 Q973**R**


1 2 3 4
4.12 MECHA SW, DISPLAY, VOLUME, MULTI JOG and HEADPHONE ASSYS

A SIDE A


U MULTI JOG ASSY

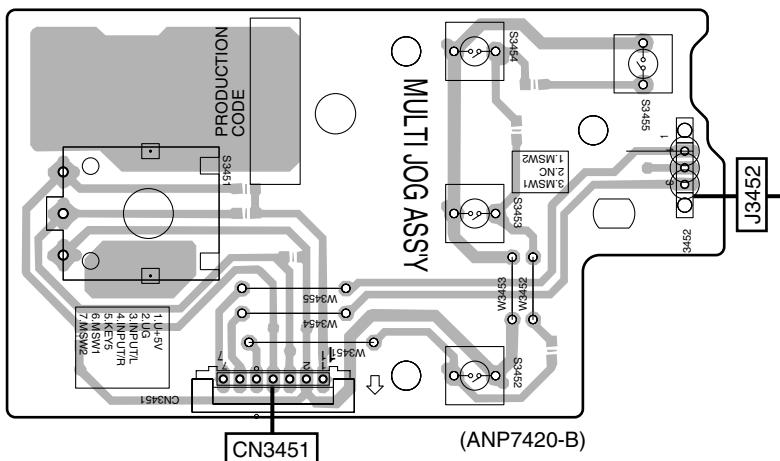


J MECHA SW ASSY

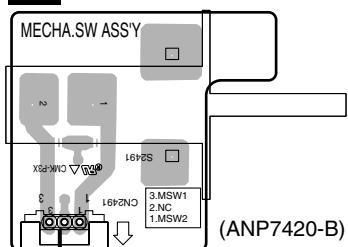

V HEADPHONE ASSY

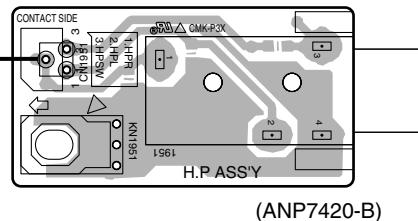

S DISPLAY ASSY

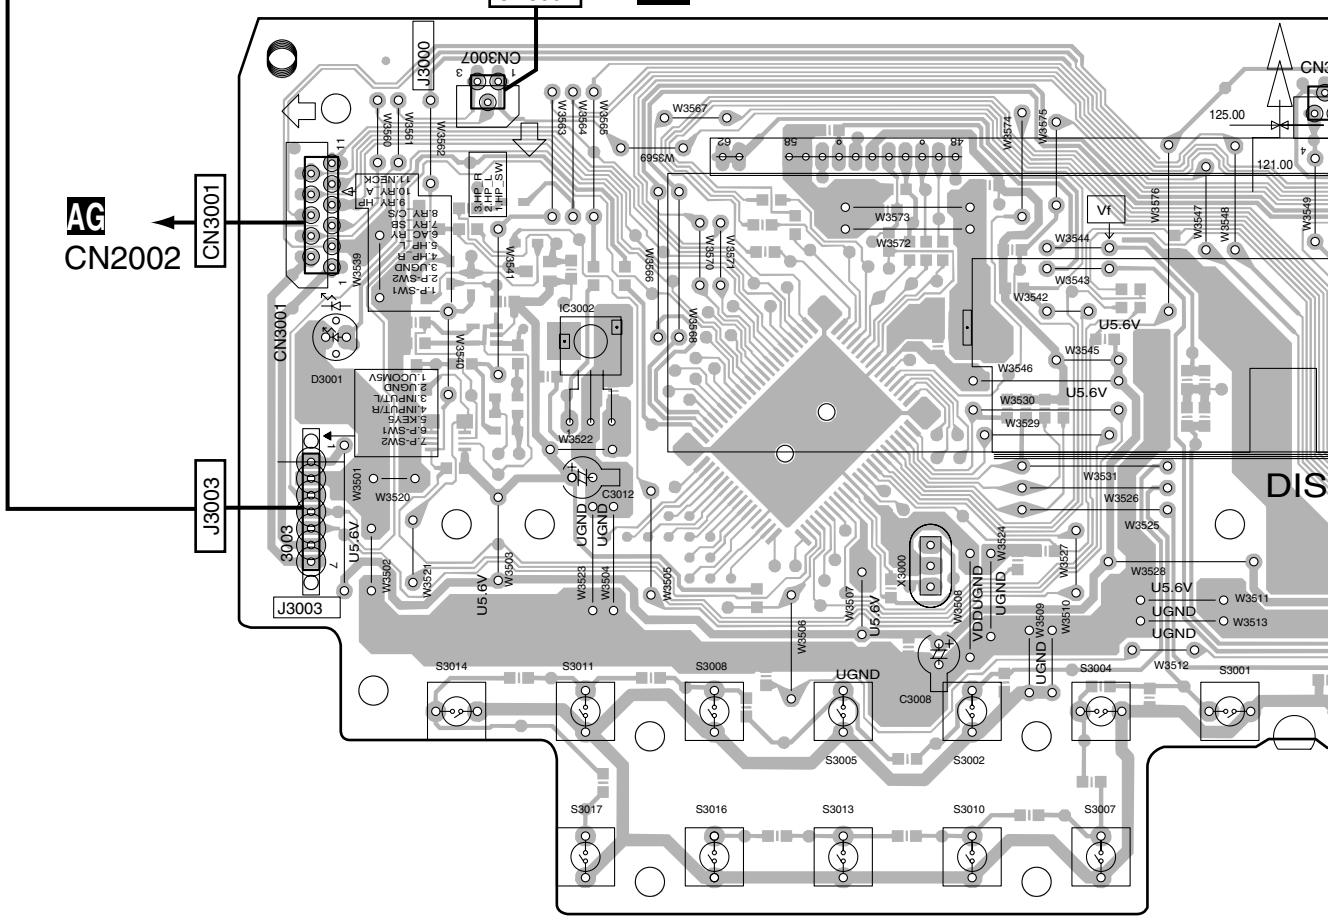


IC3002


J S U V

SIDE A


ASSY

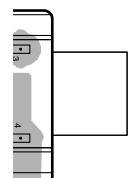

'420-B)

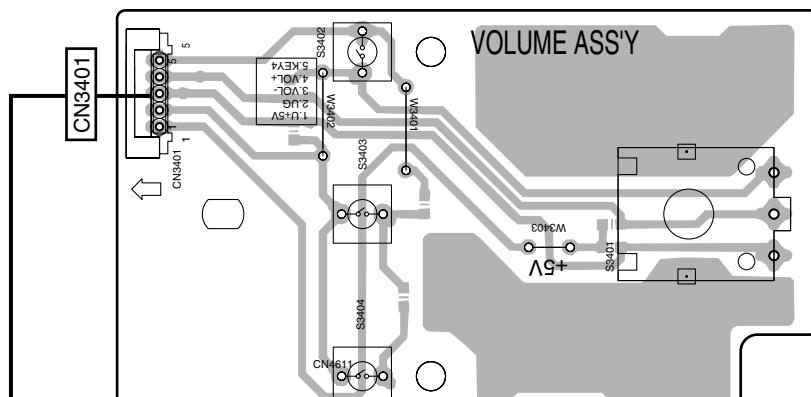T VOLUME ASSY


(ANP7420-B)

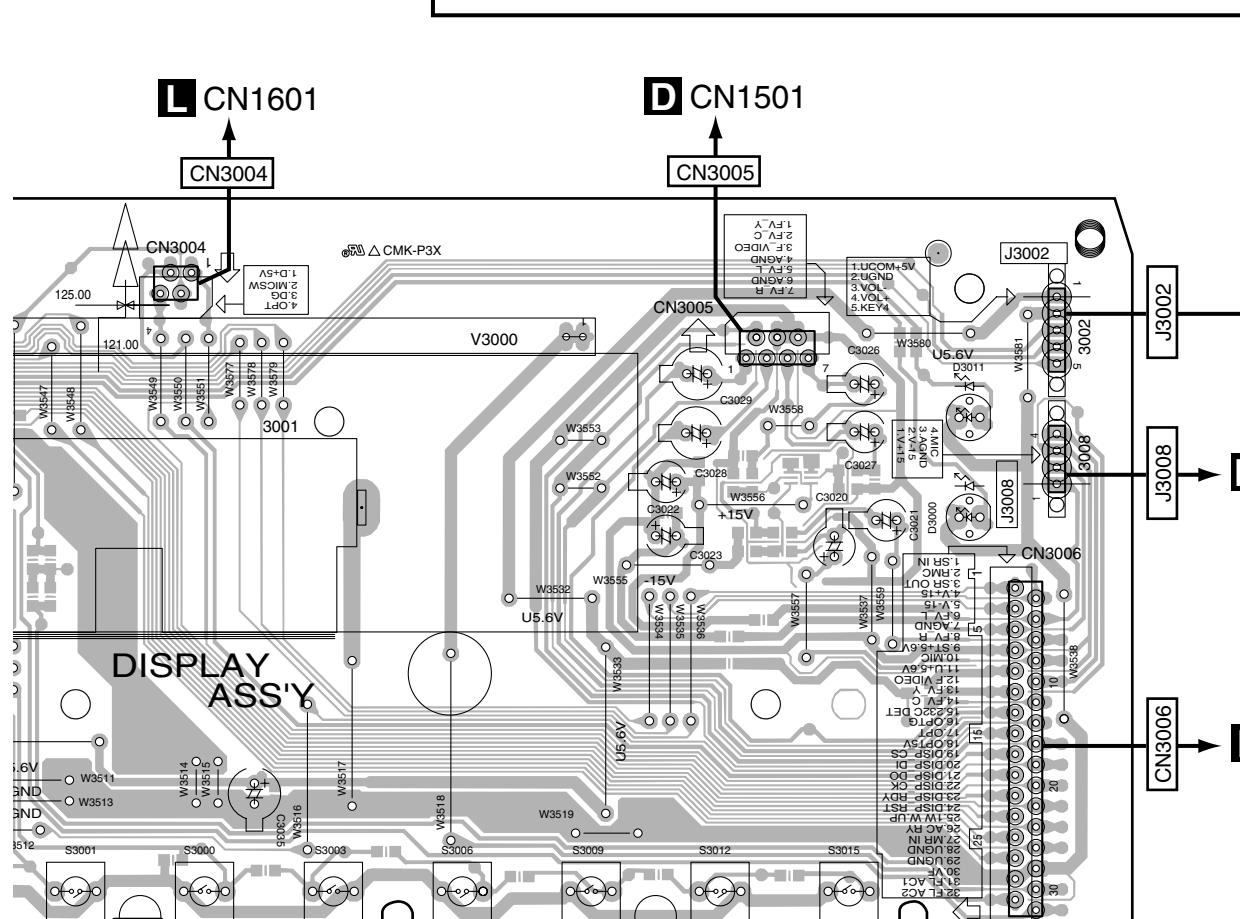


(ANP7421-A)

S T V

A

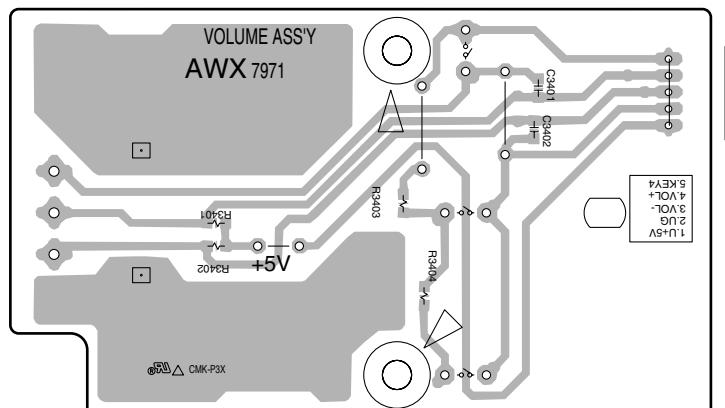
SIDE B**T VOLUME ASSY**

(ANP7420-B)

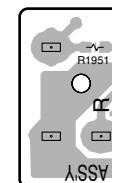V HEAD

B


C

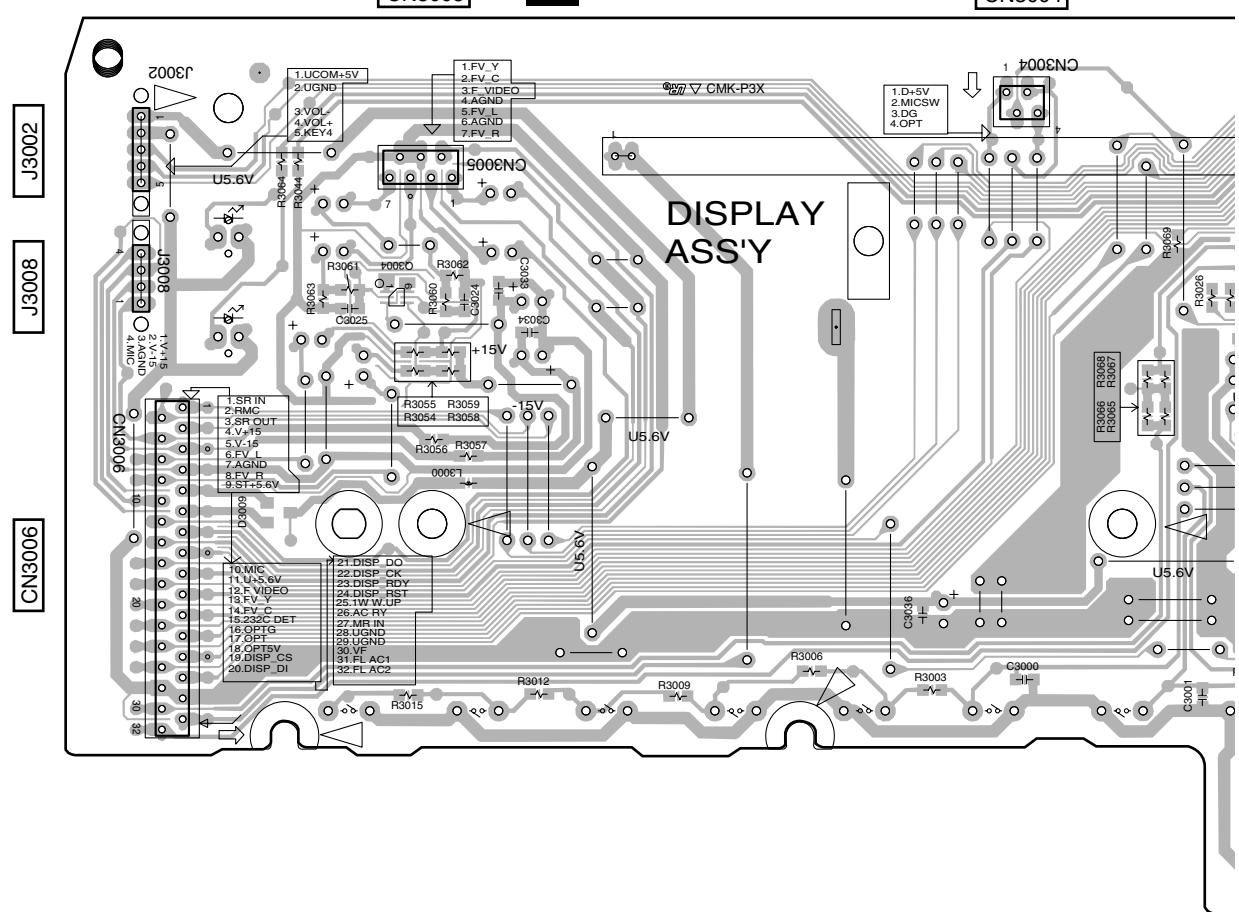S DISPLAY ASSY

Q3004


S T V

J MECHA SW ASSY

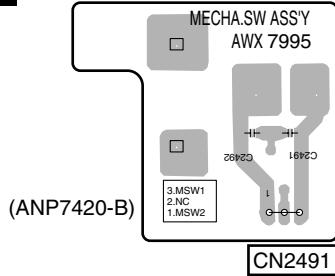


SIDE B

U MULTI JOG ASSY

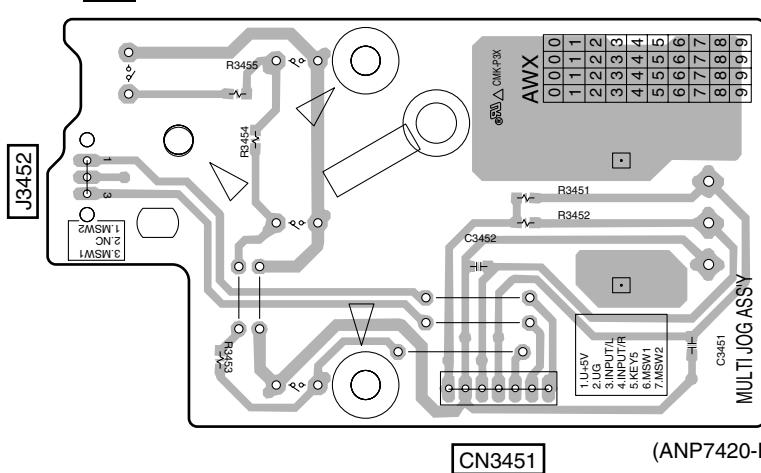


V HEADPHONE ASSY

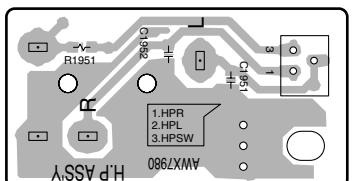

(ANP7420-B)

CN1951

(ANP7420-B)

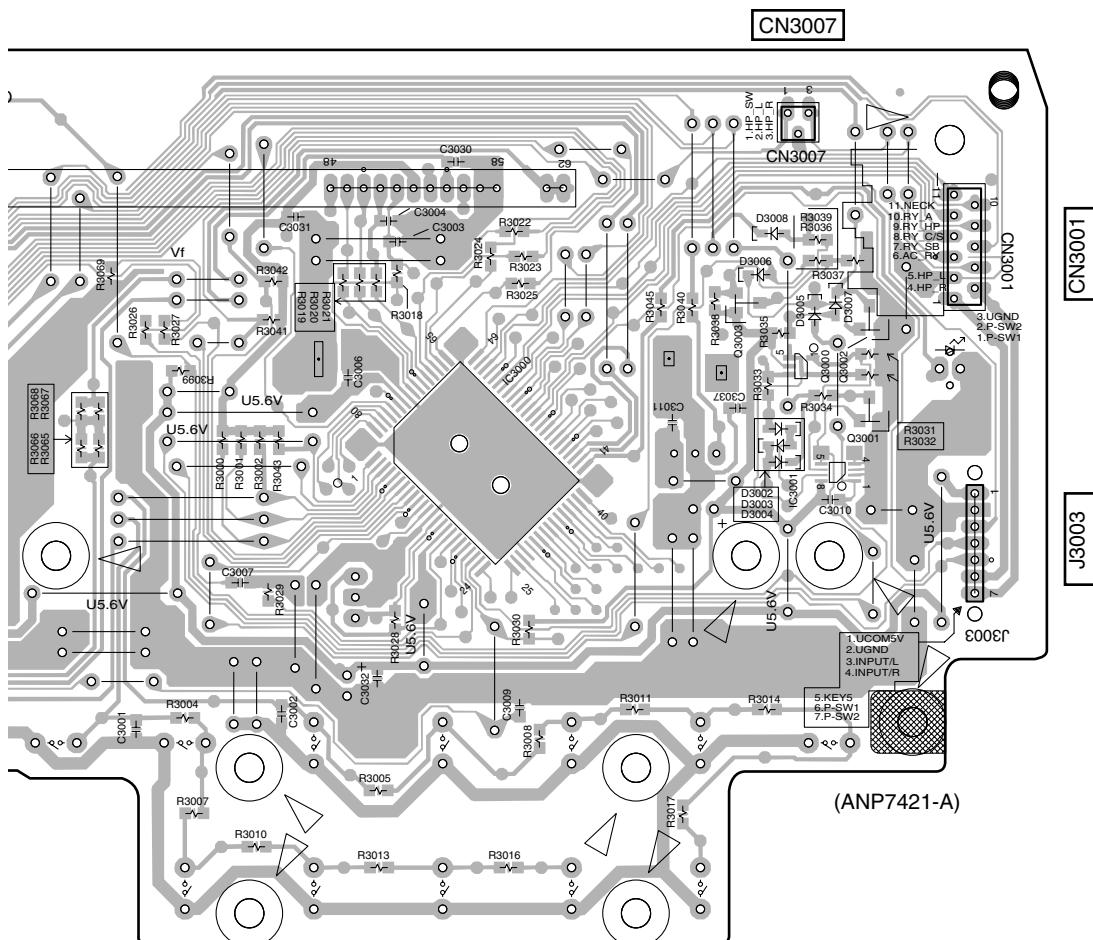

(ANP7421-A)


IC3000

Q3003 Q3002
Q3000 Q3001
IC3001

J S U V

4.13 REGULATOR and COMPONENT ASSYS

SIDE A

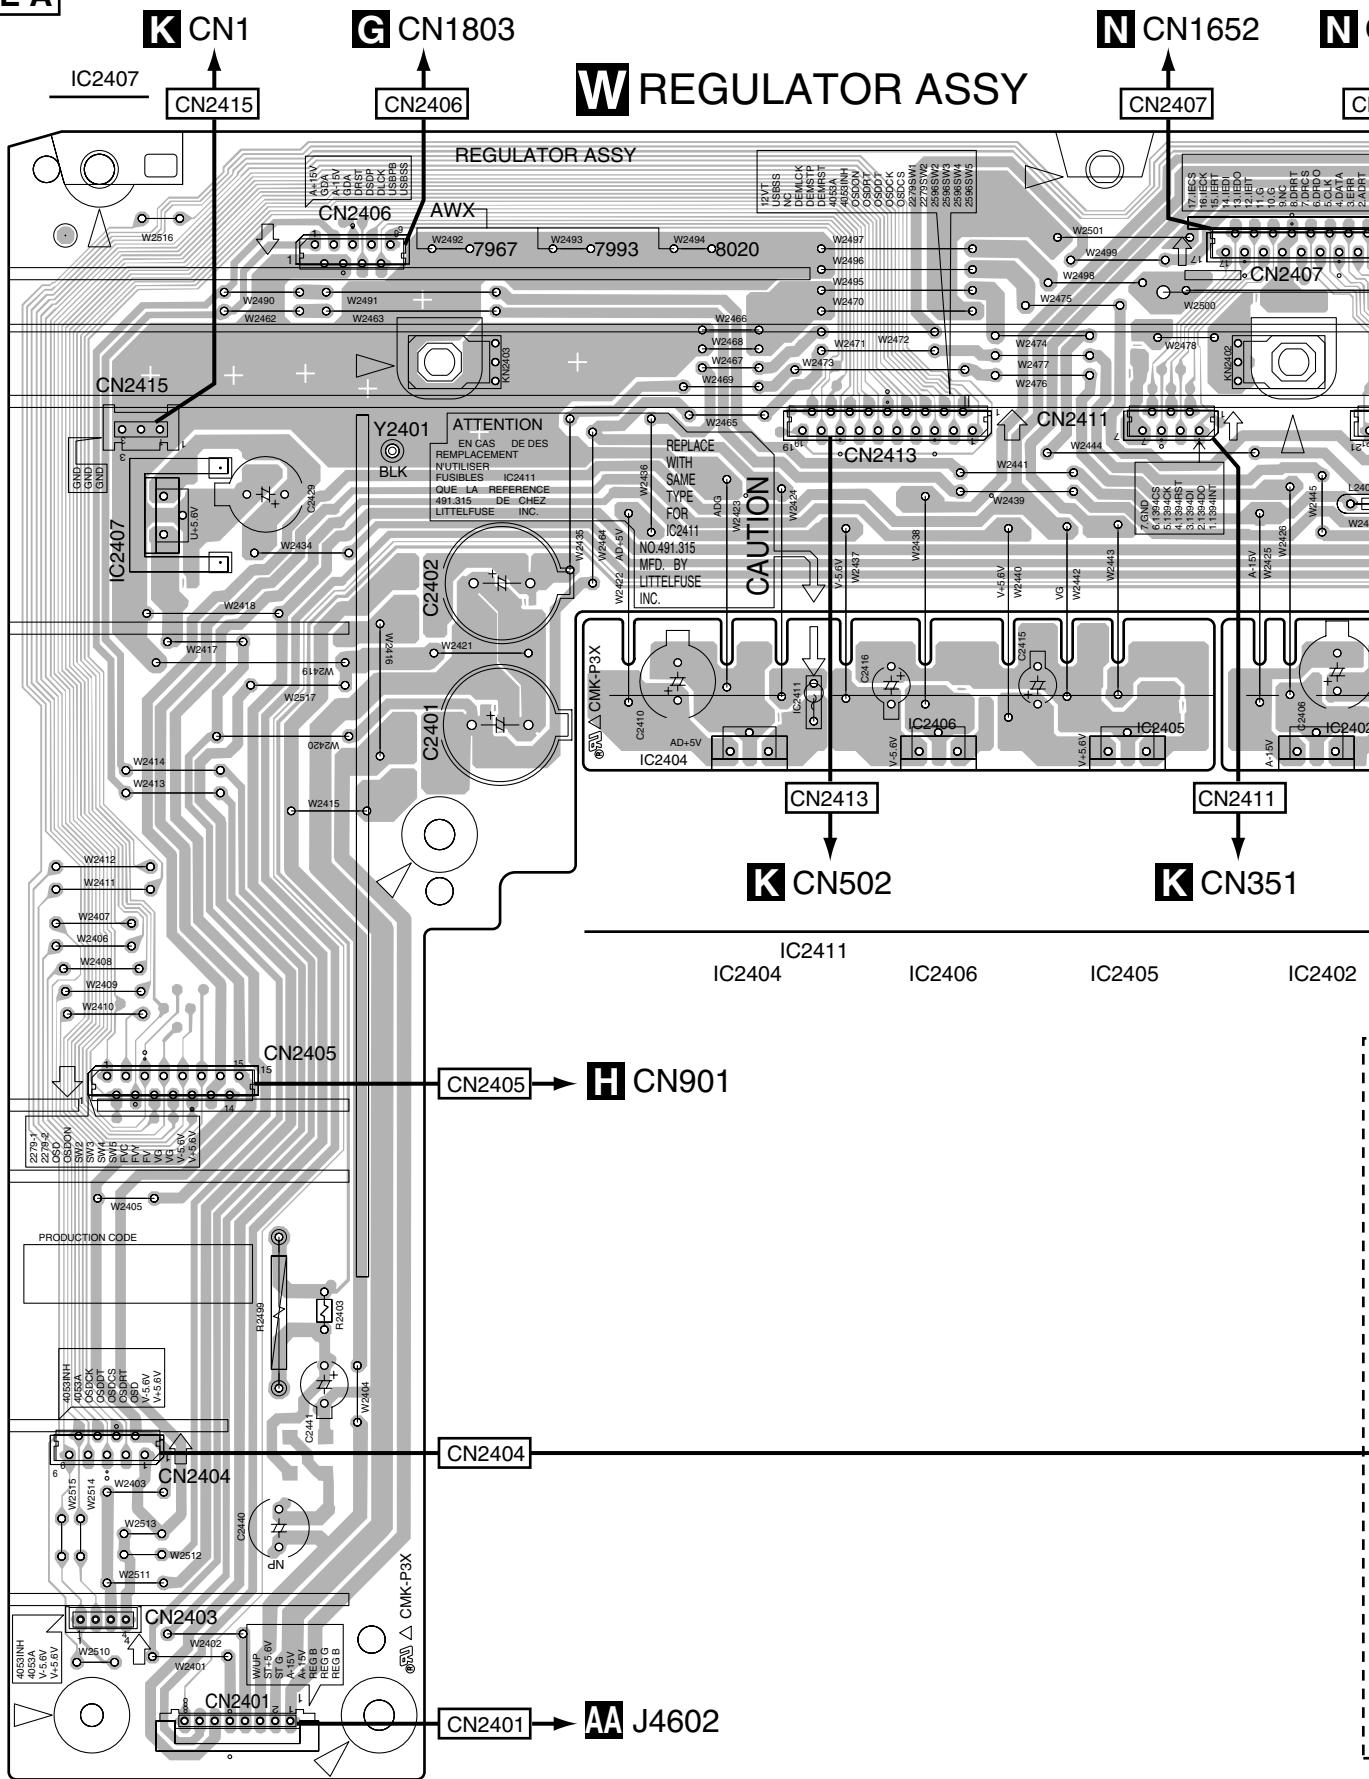

W


552

N CN1653

N CN1654


K CN3

SIDE A

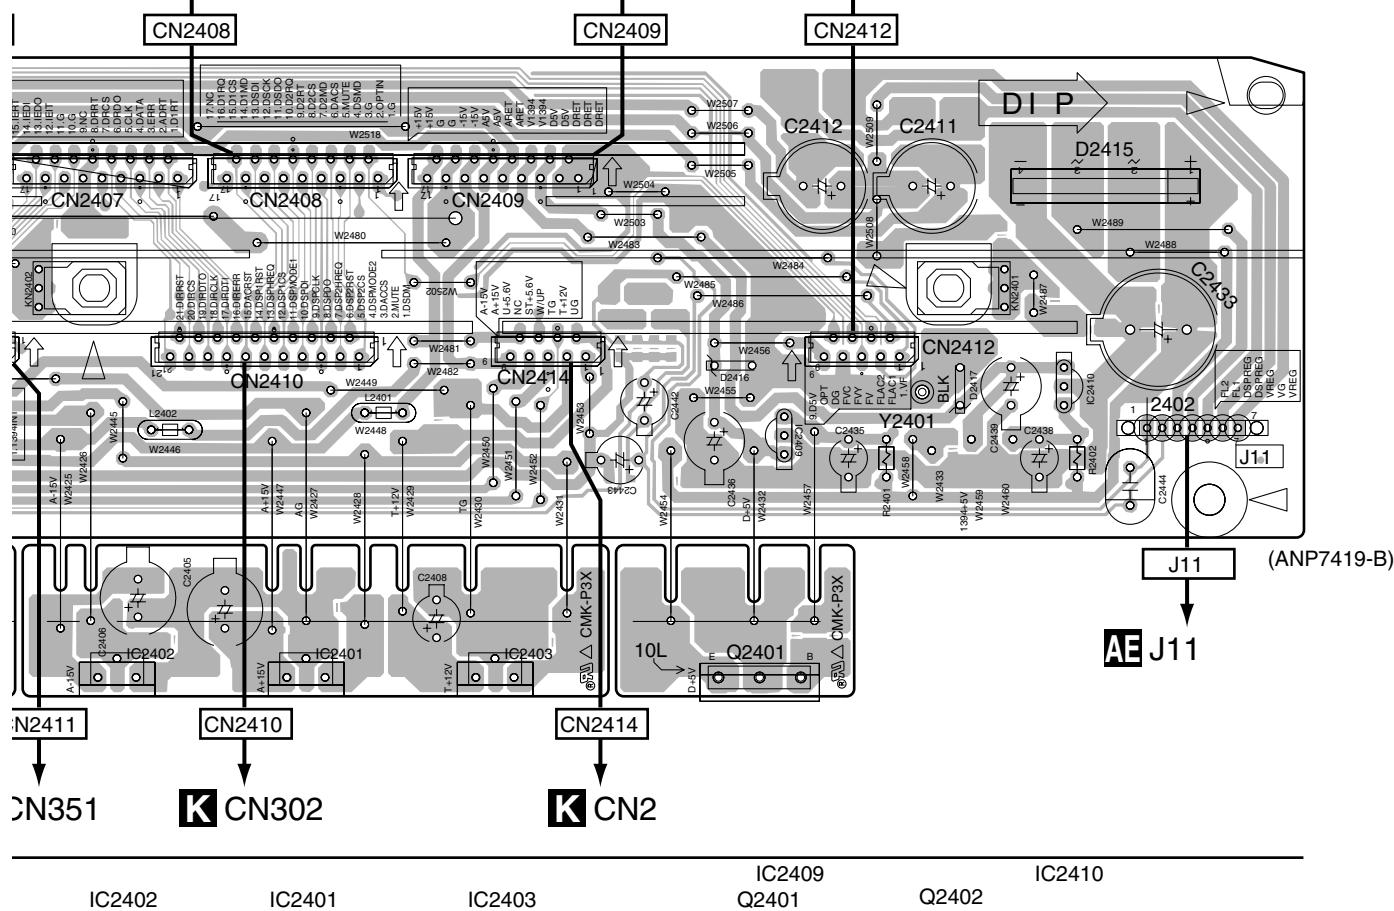

VSX-D2011-S ONLY


I COMPONENT ASSY

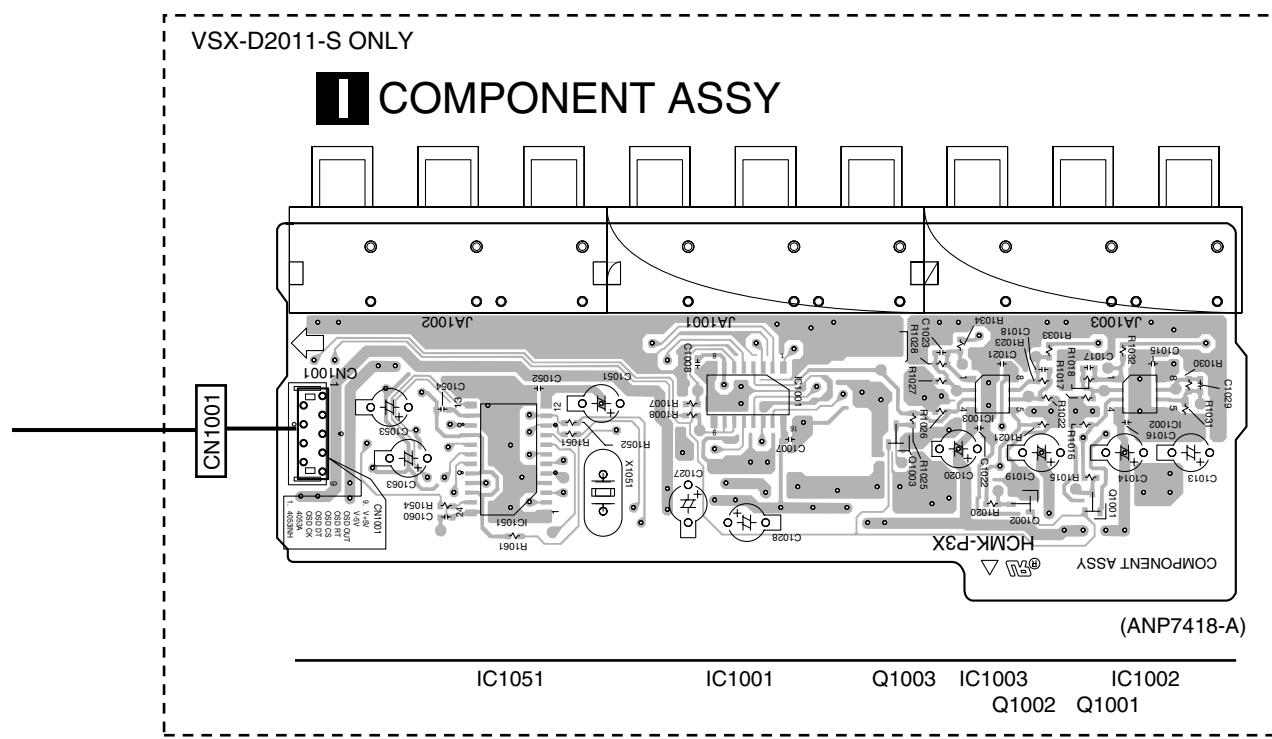

(ANP7418-A)

I W

SIDE B

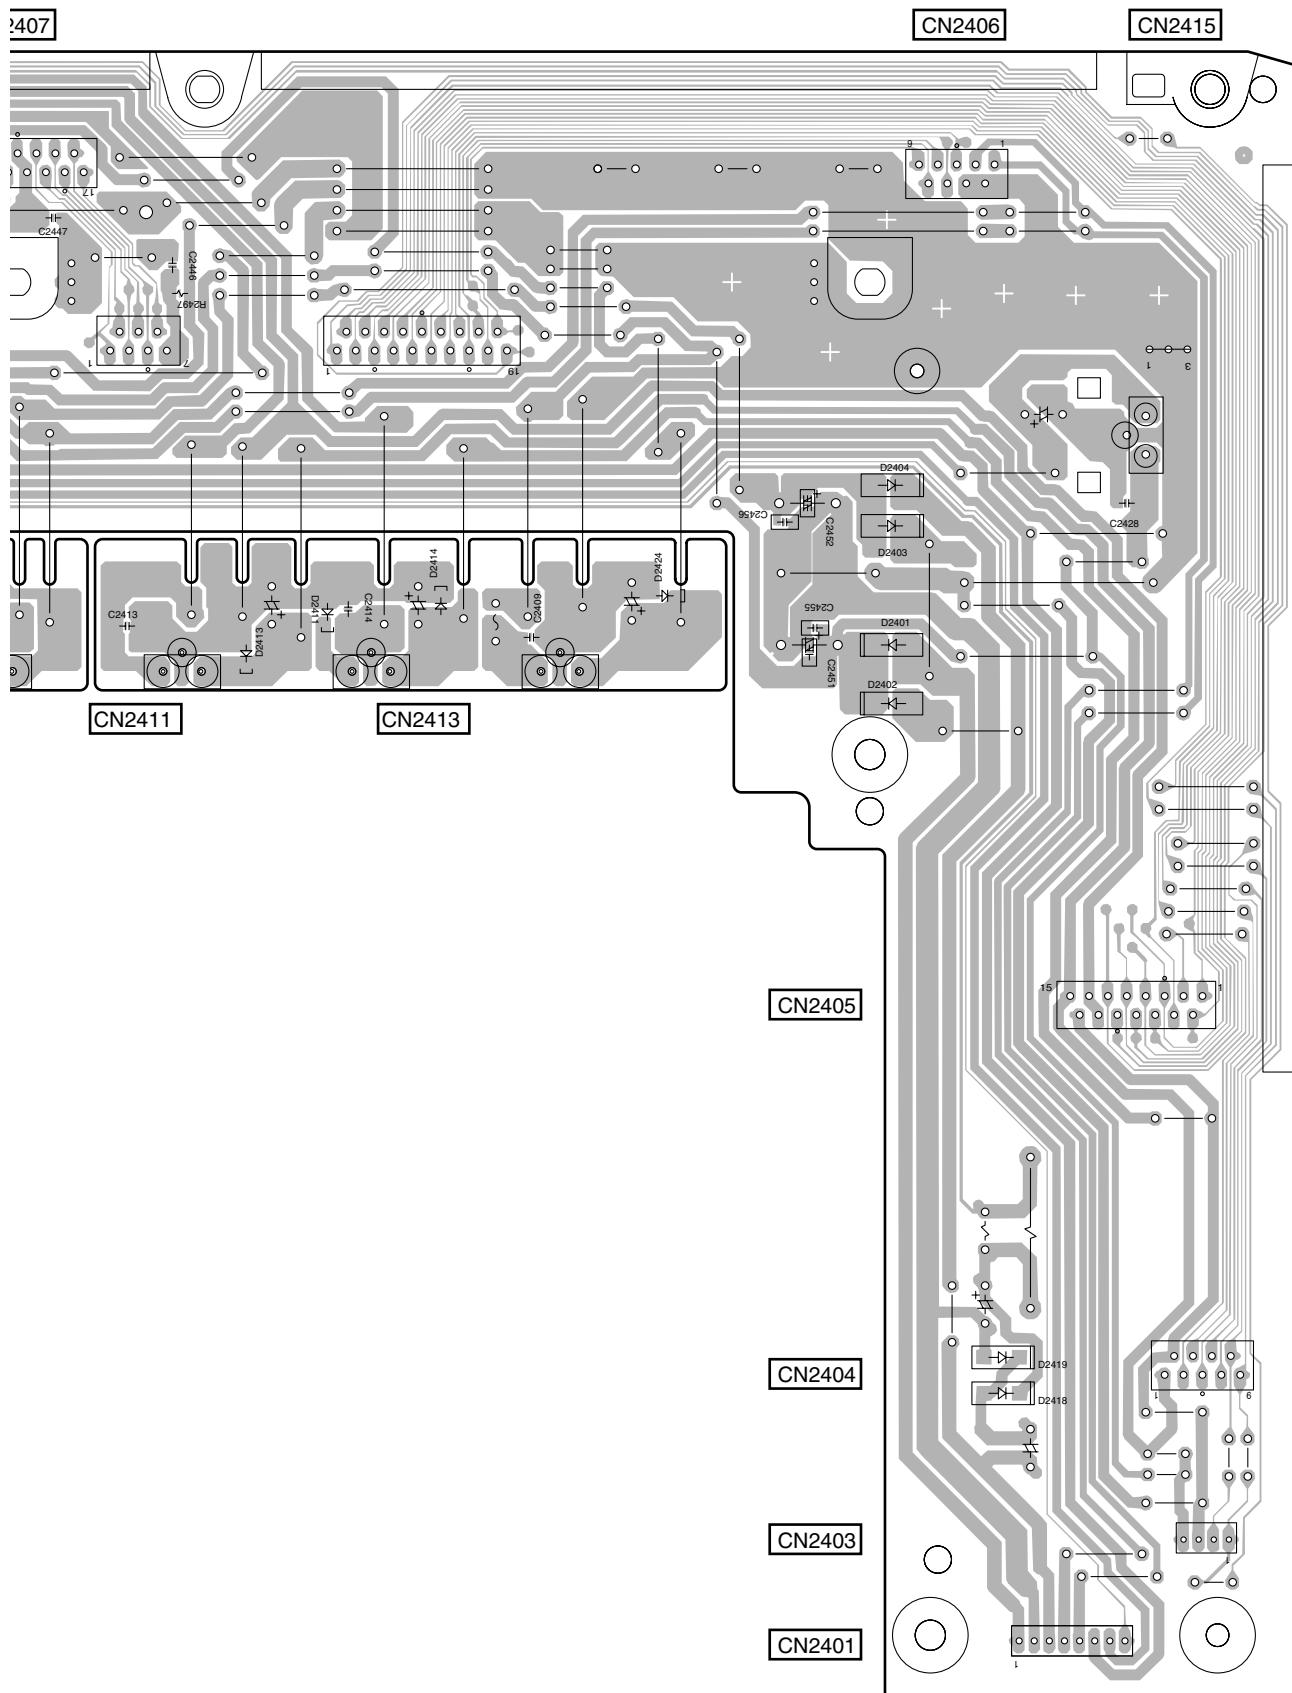


W


4.14 POWER AMP L and POWER AMP C ASSYS

SIDE A


X POWER AMP-L ASSY

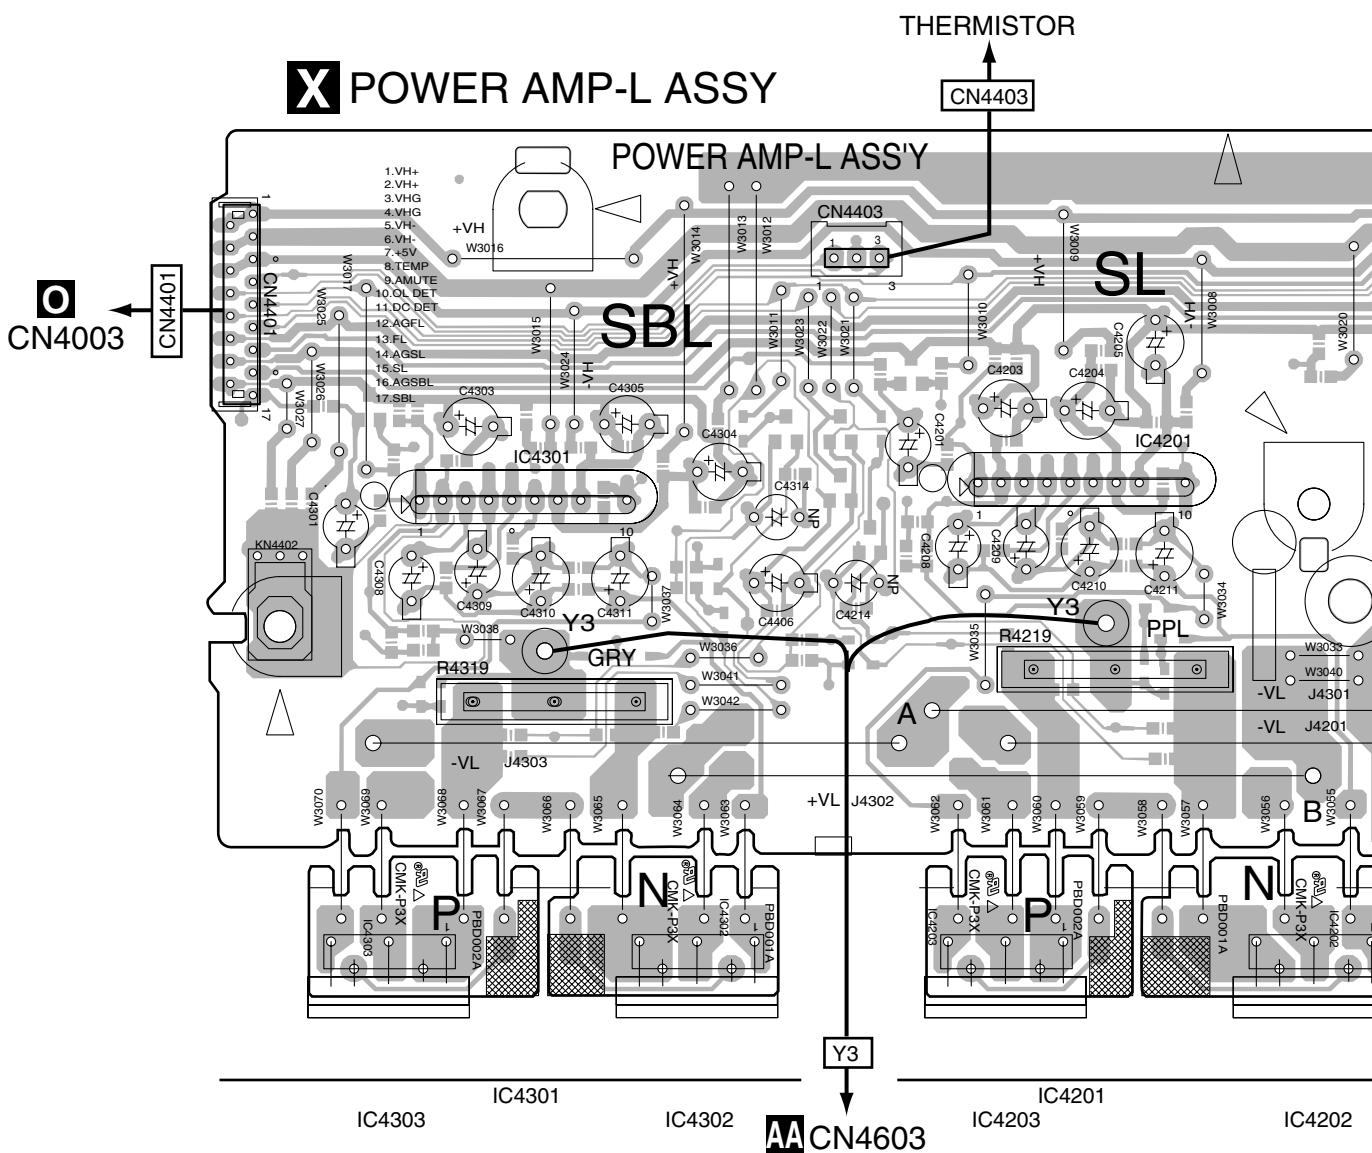


SIDE A

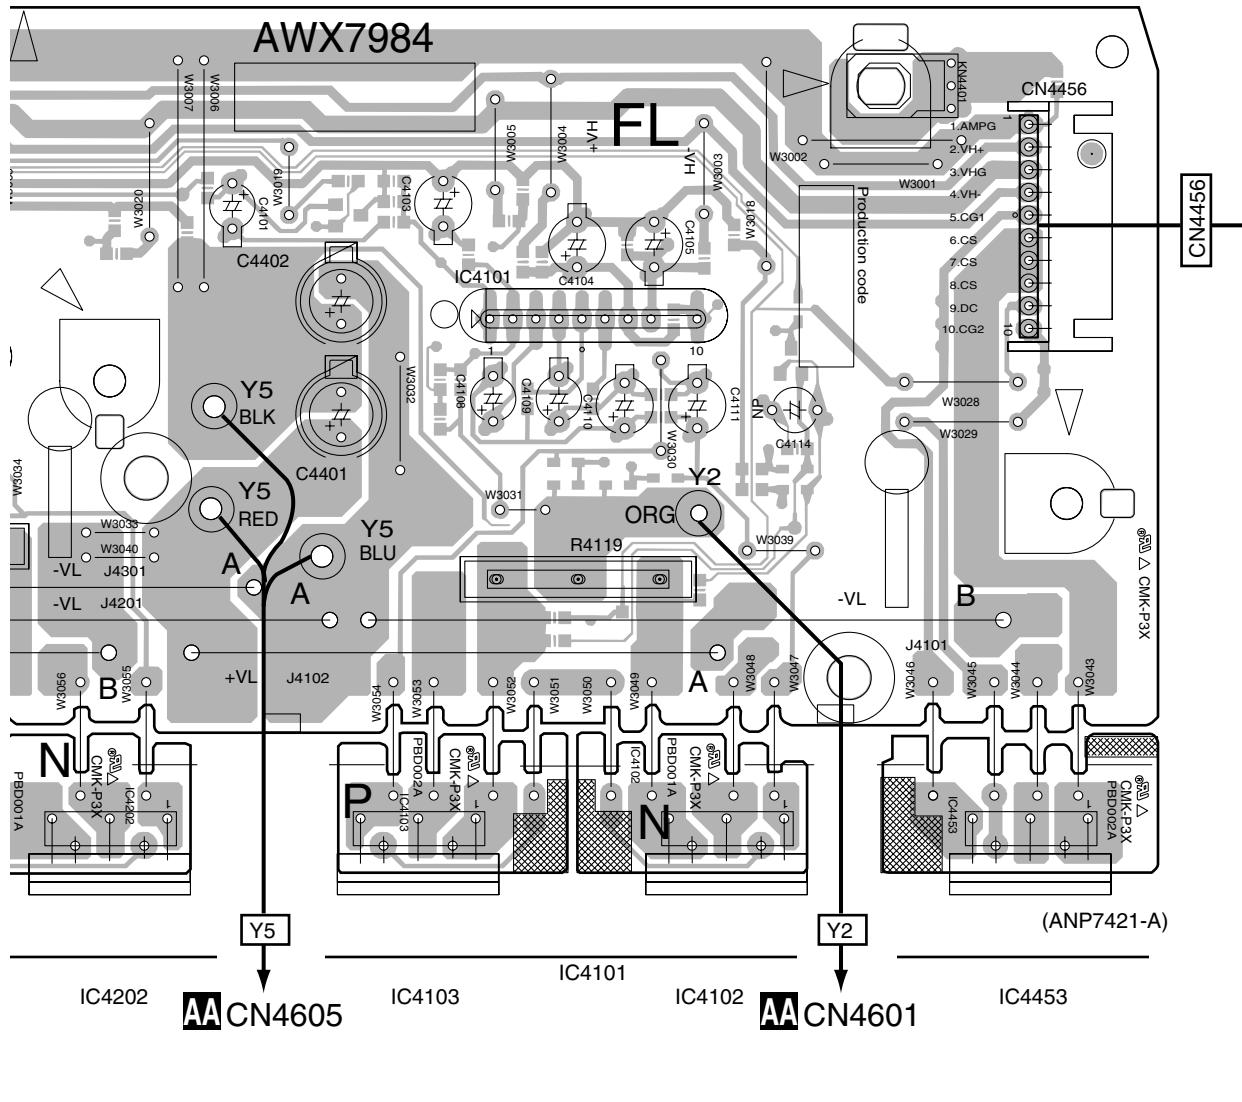

Z POWER AMP-C ASSY

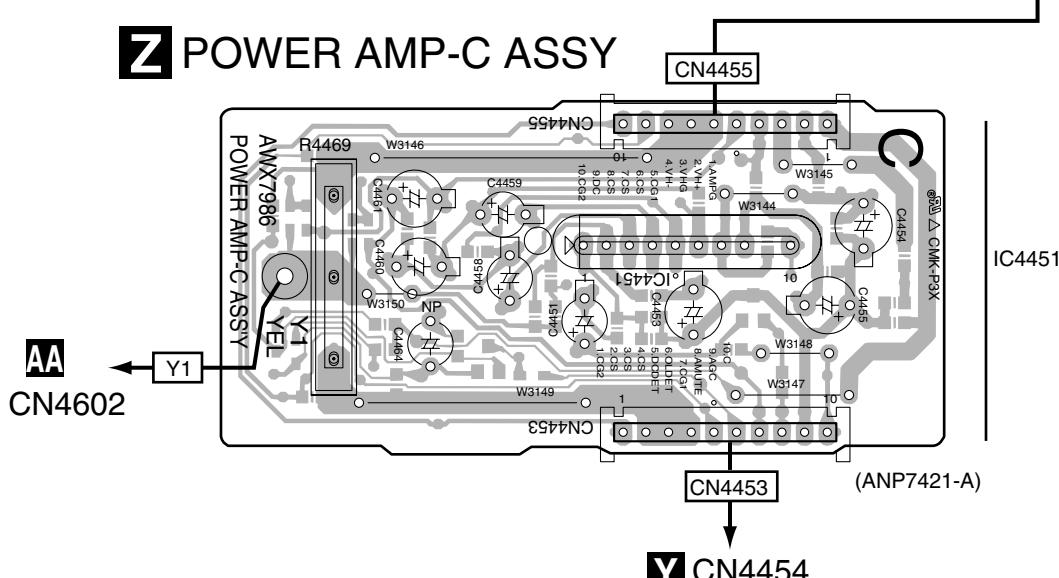

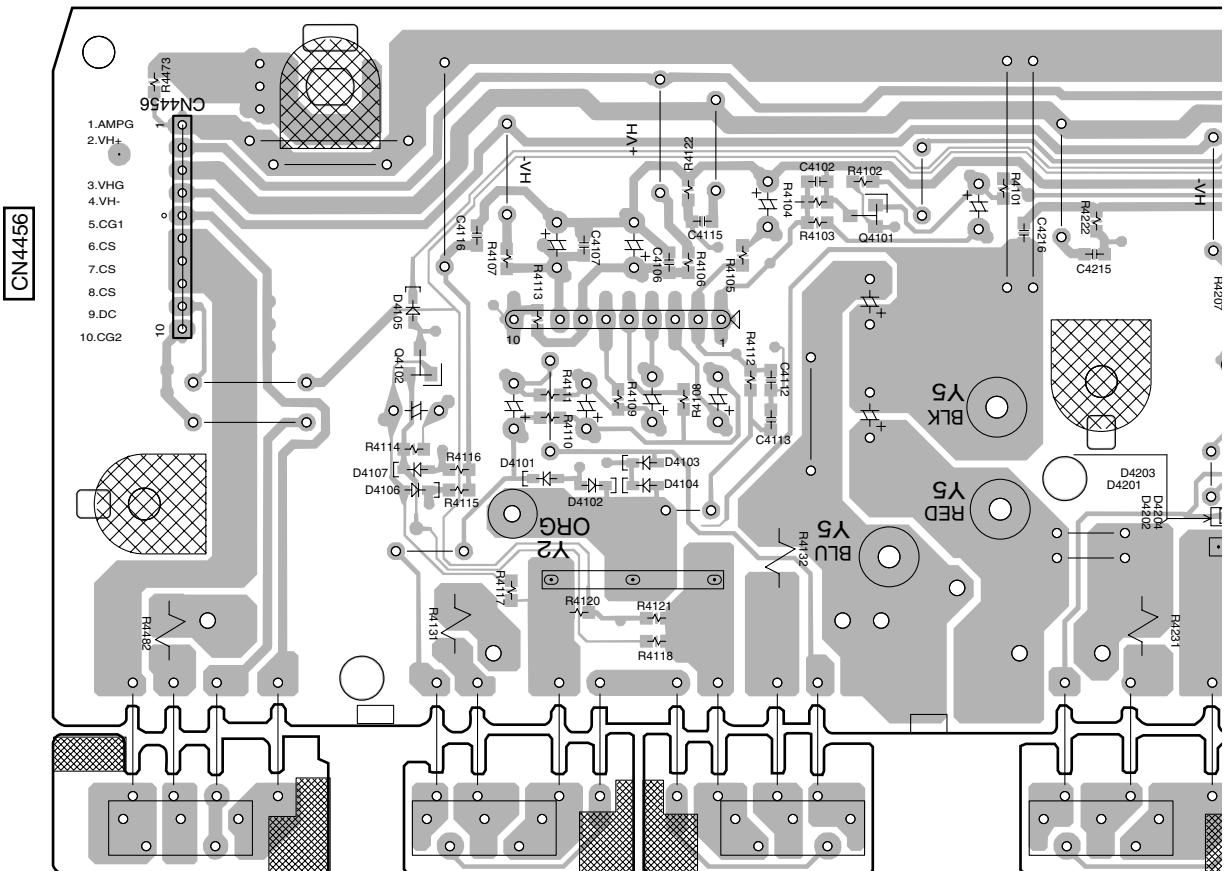SIDE B**X POWER AMP-L ASSY**

Q4102

Q4101

A


B

C

D

E

F

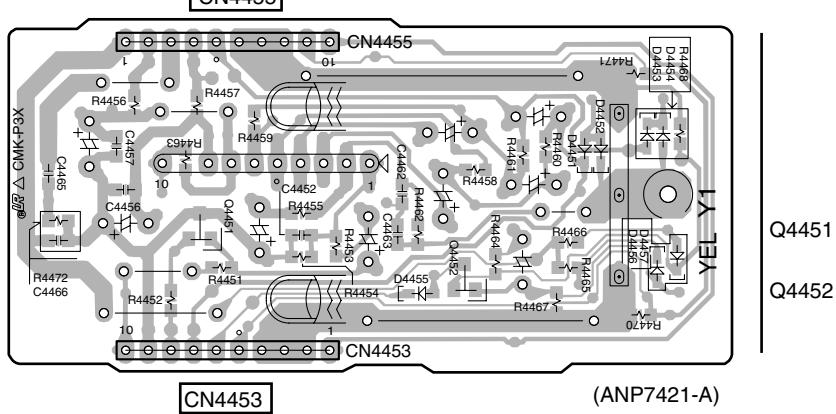
Z POWER AMP-C ASSY

(ANP7421-A)

X Z

SIDE B

A

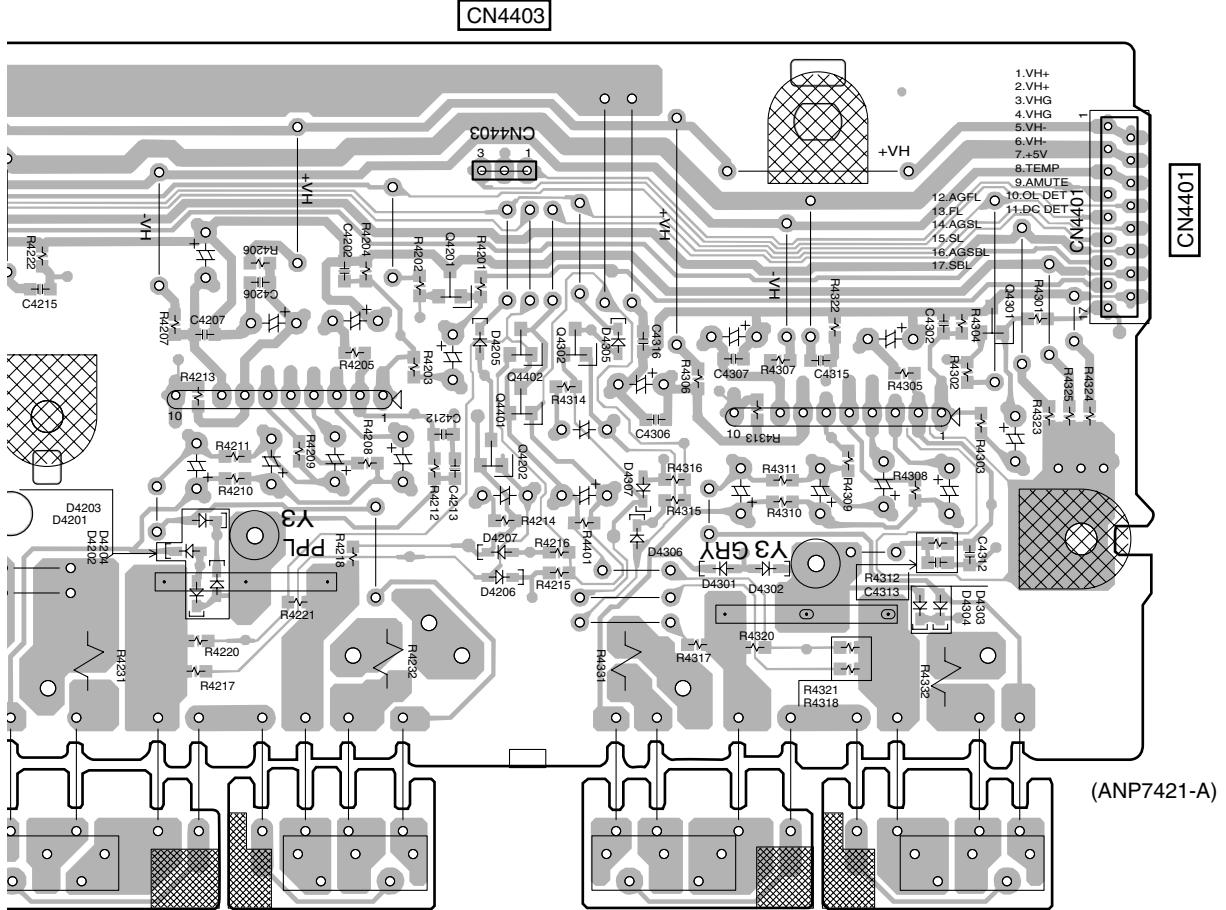

Q4201 Q4402 Q4302
Q4401
Q4202

Q4301

B

C

D


E

F


X

4.15 POWER AMP R ASSY

SIDE A

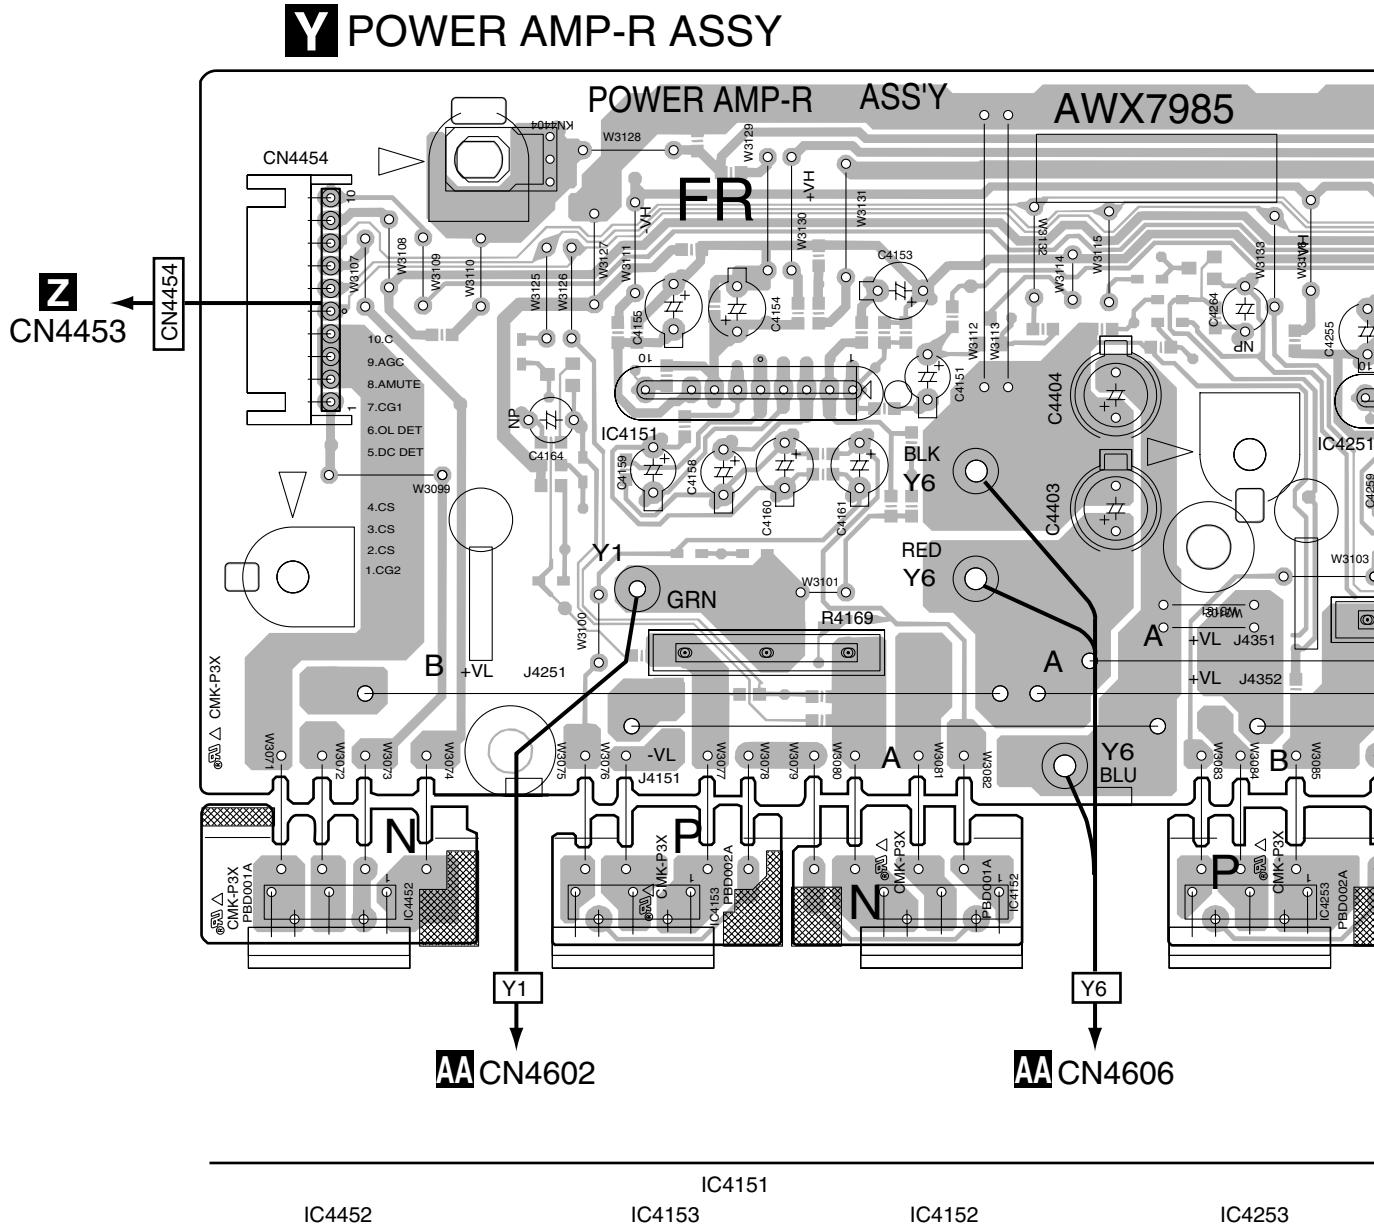

SIDE A

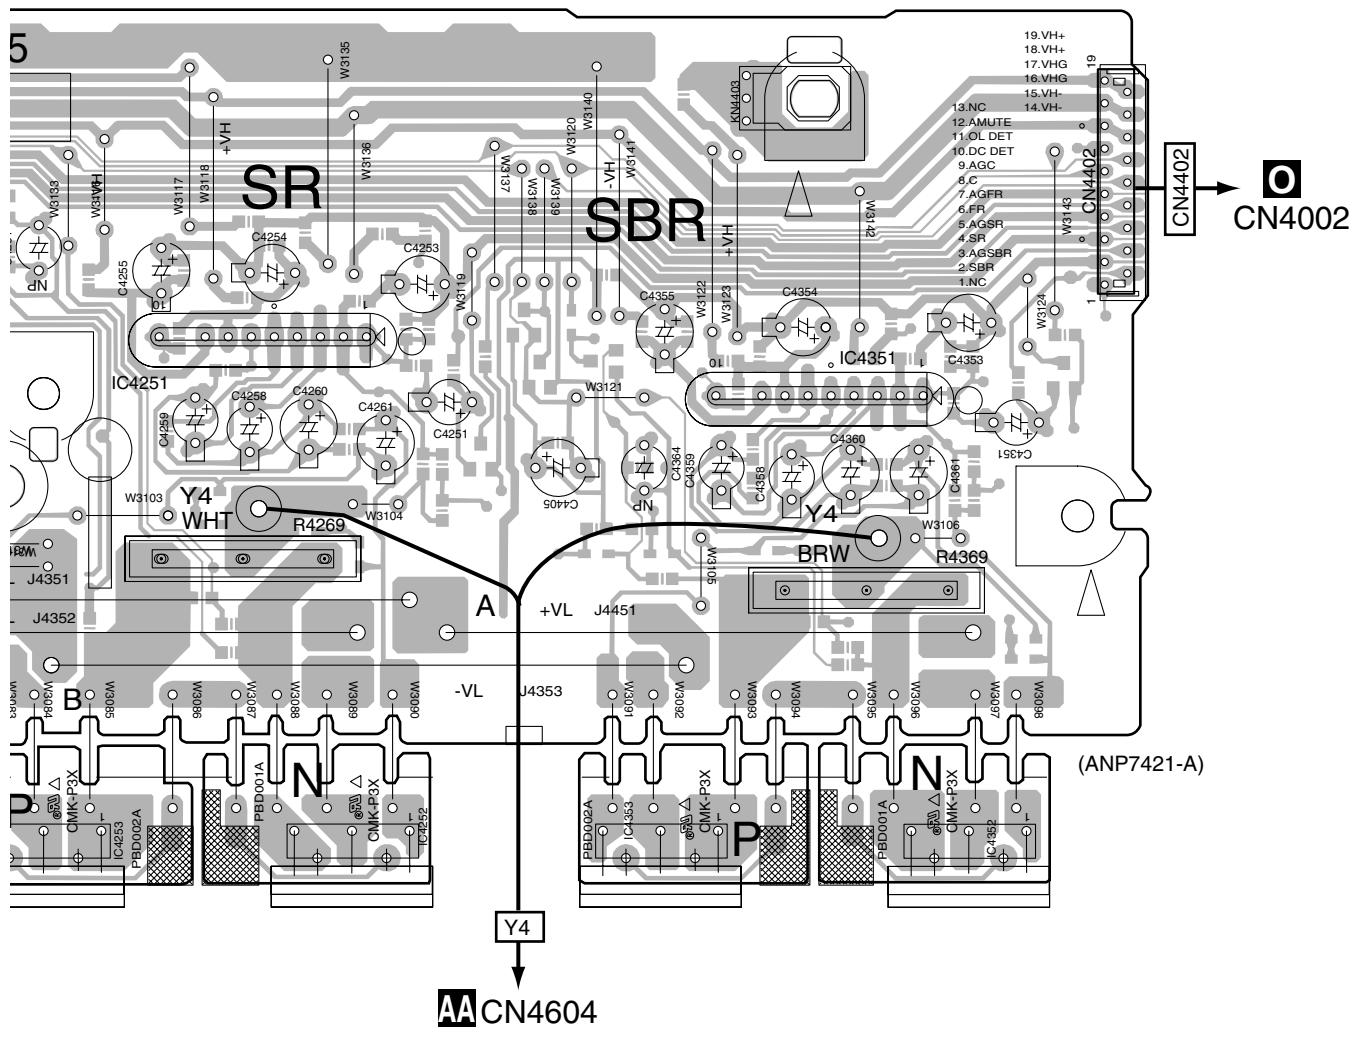

IC4251

|C4351

IC4859

IC4253


IC4252

IC4352

Y

SIDE B


Y POWER AMP-R ASSY

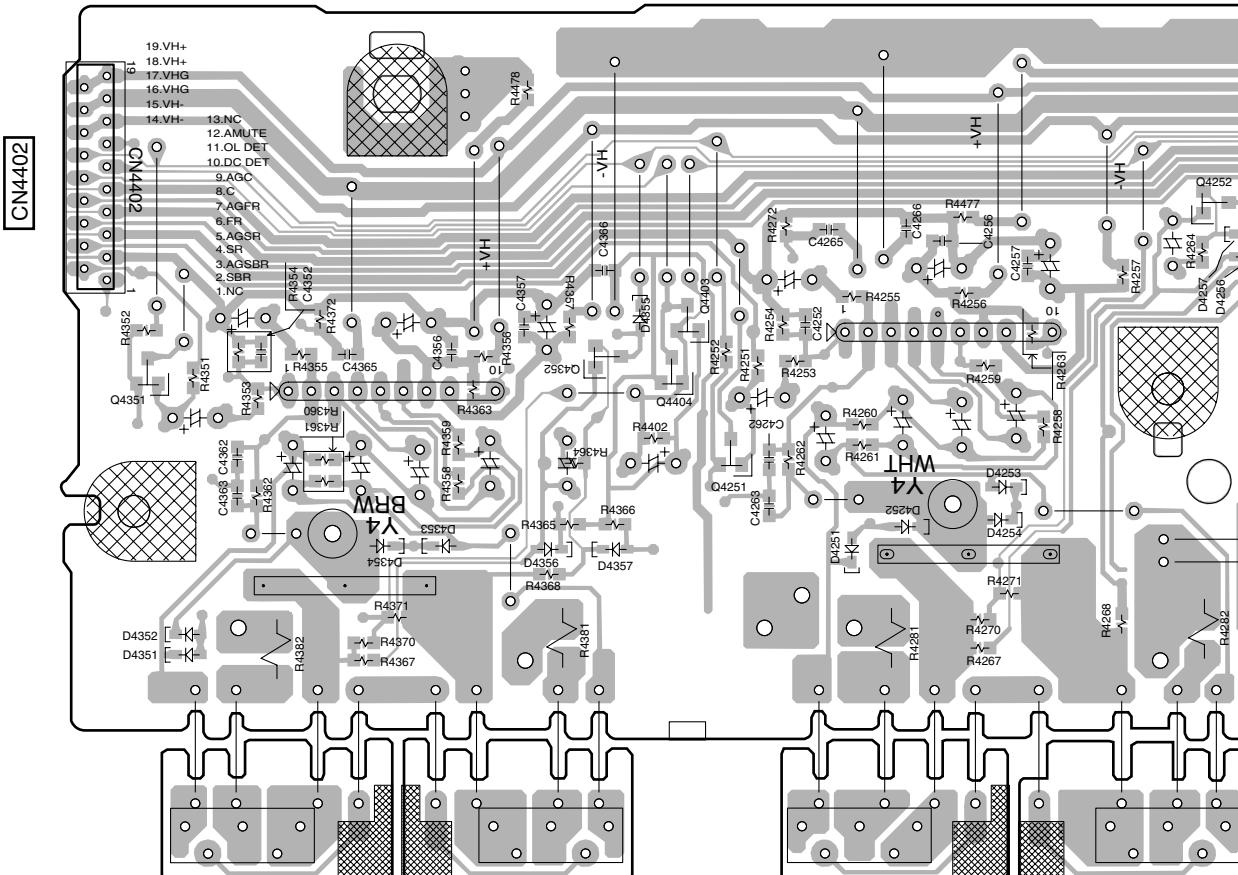

Q4351

Q4403
Q4352 Q4404
Q4251

Q4252

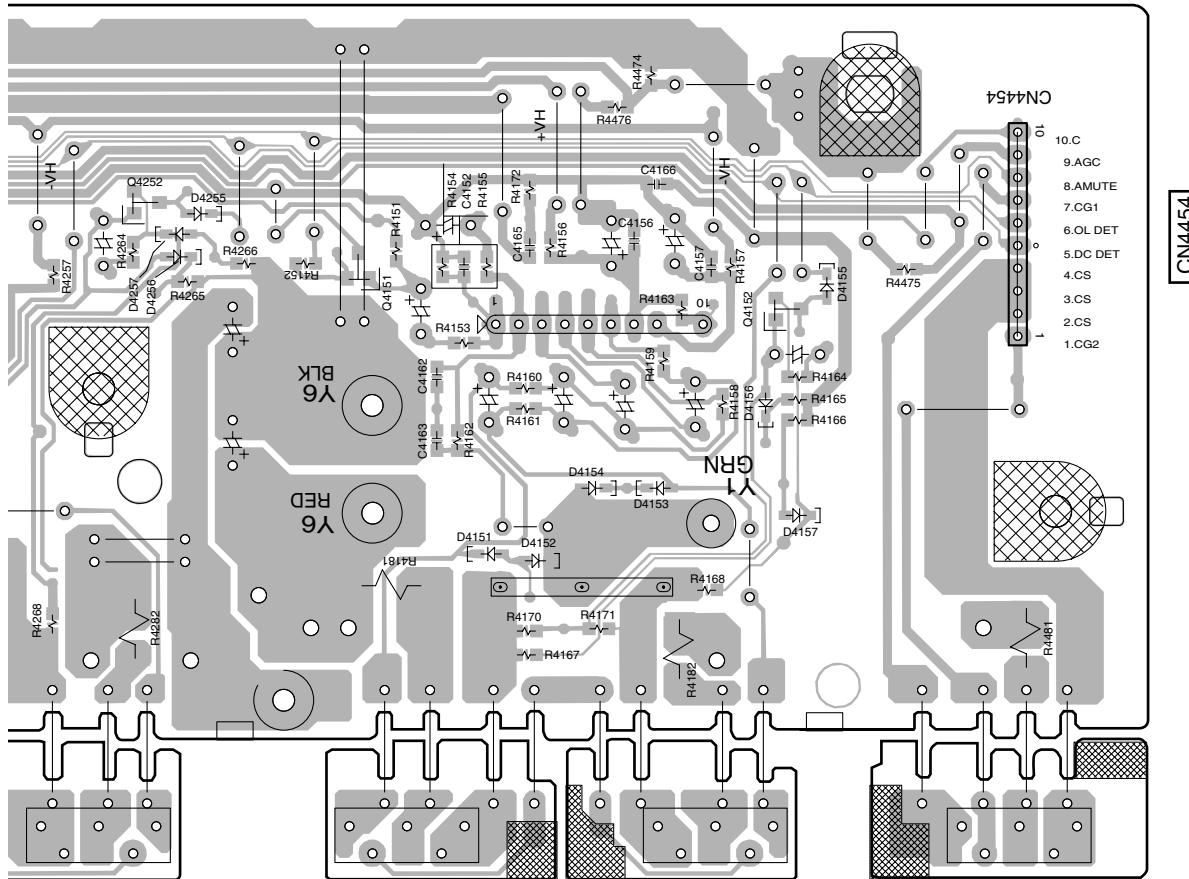SIDE B

(ANP7421-A)

Q4252

Q4151

Q4152


Y

4.16 SP/PS ASSY

A

SIDE A

AA SP/PS ASSY

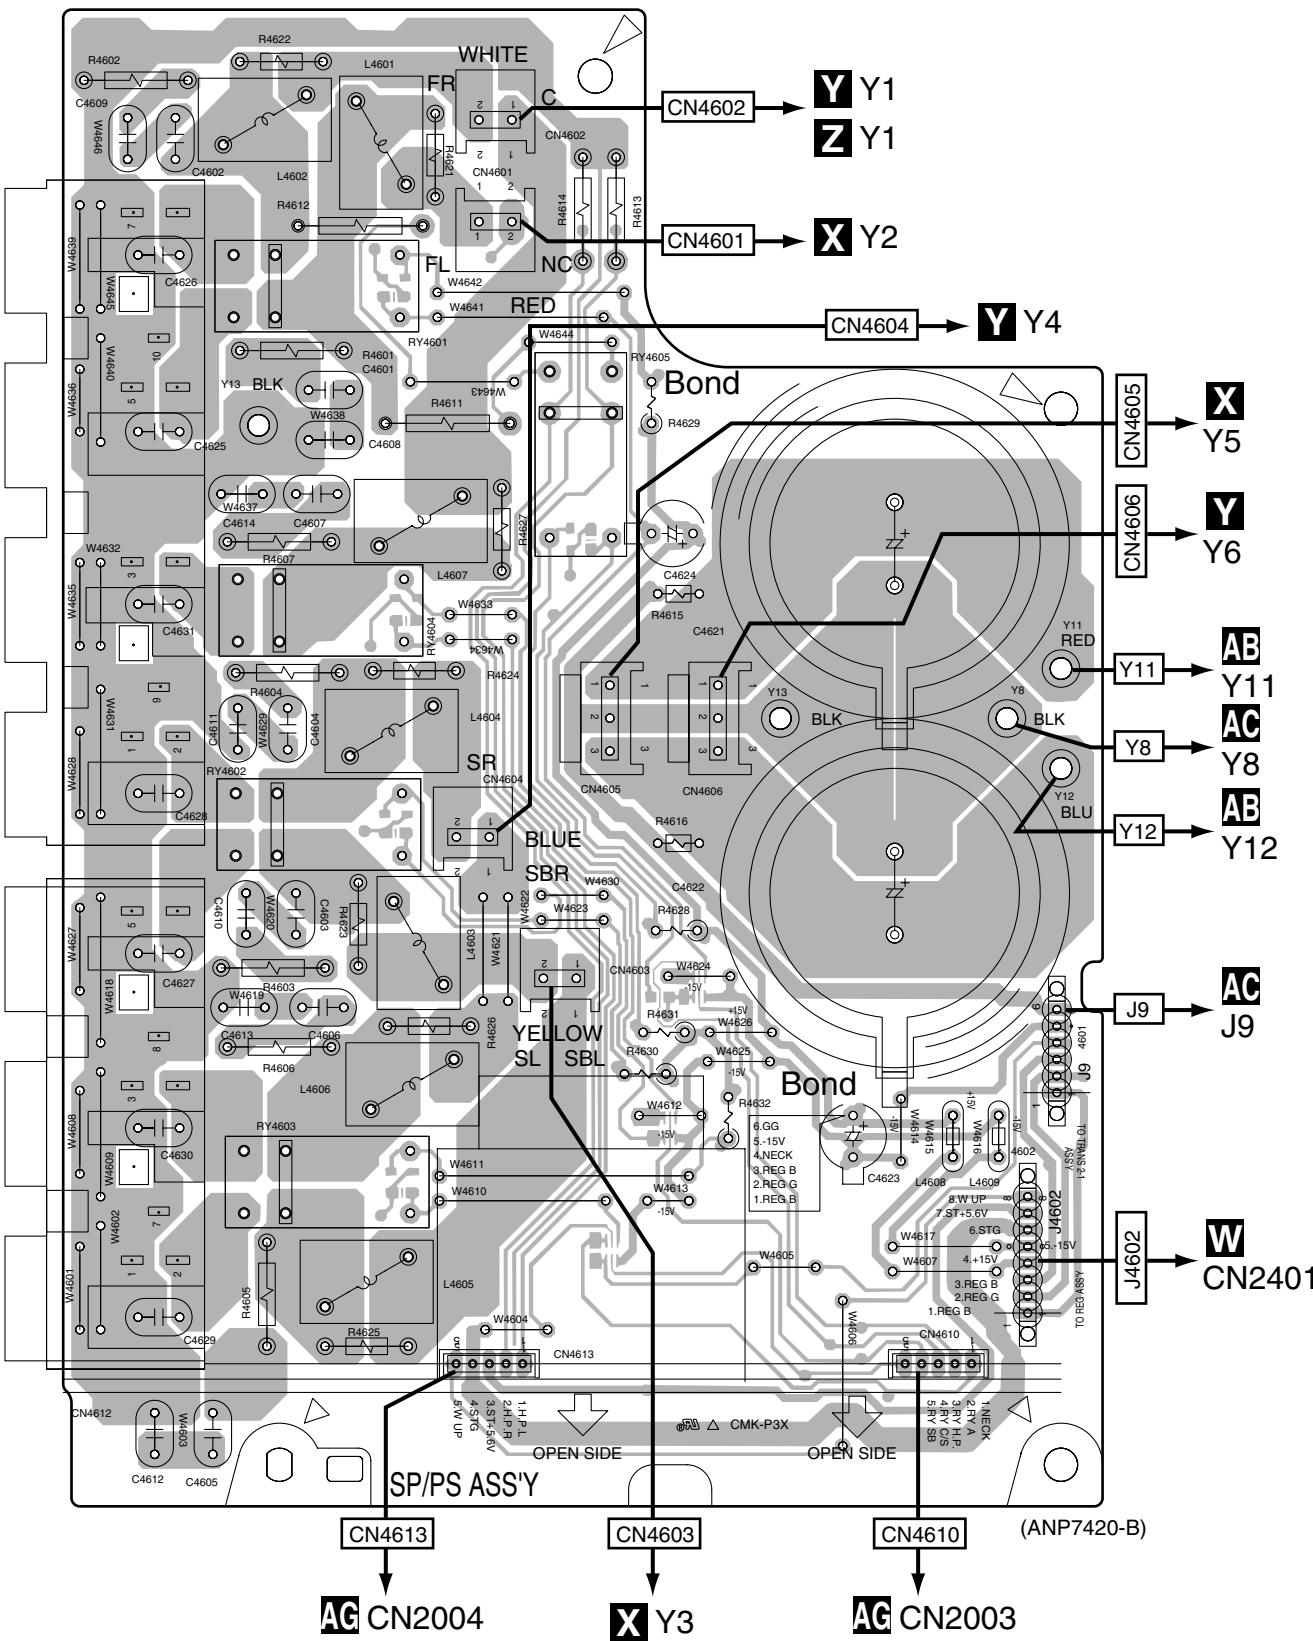

AA

SIDE B

A


B

C

D

E



F

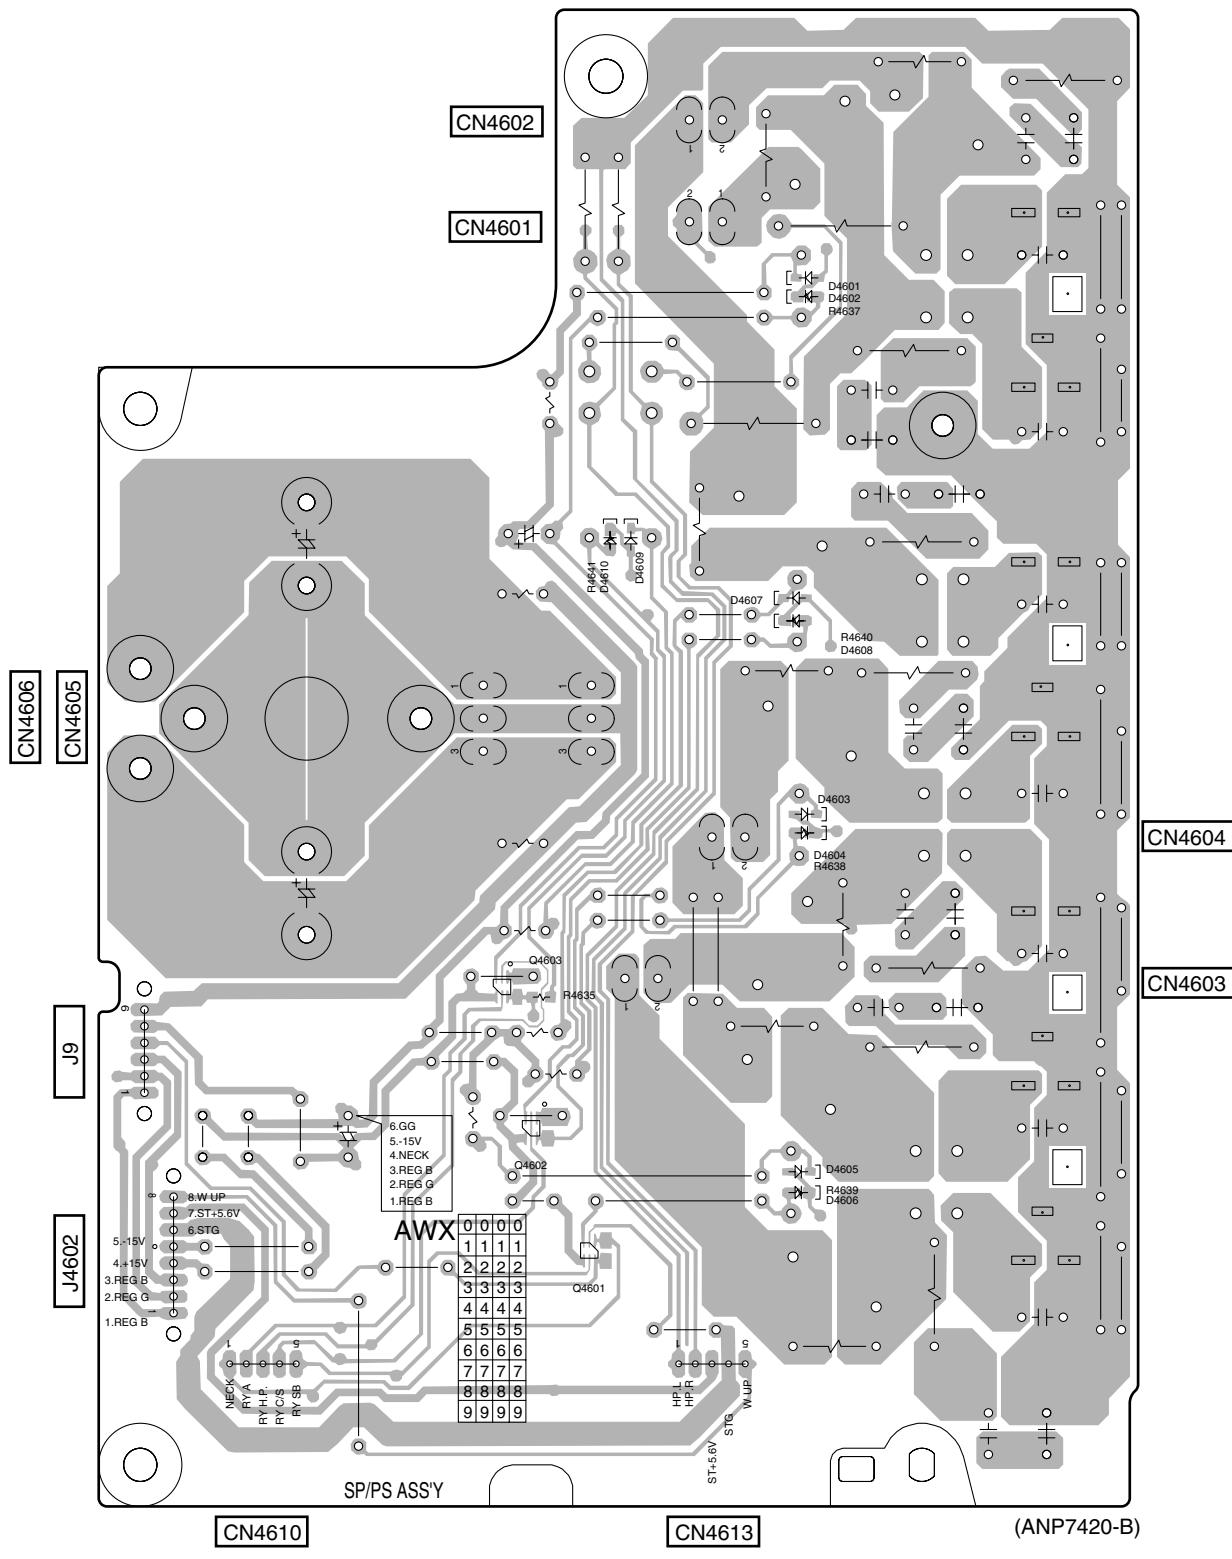AA SP/PS ASSYQ4603
Q4602
Q4601

4.17 DIODE, TRANS 2-1 and VH TR ASSYS

SIDE A


AC TRANS 2-1 ASSY

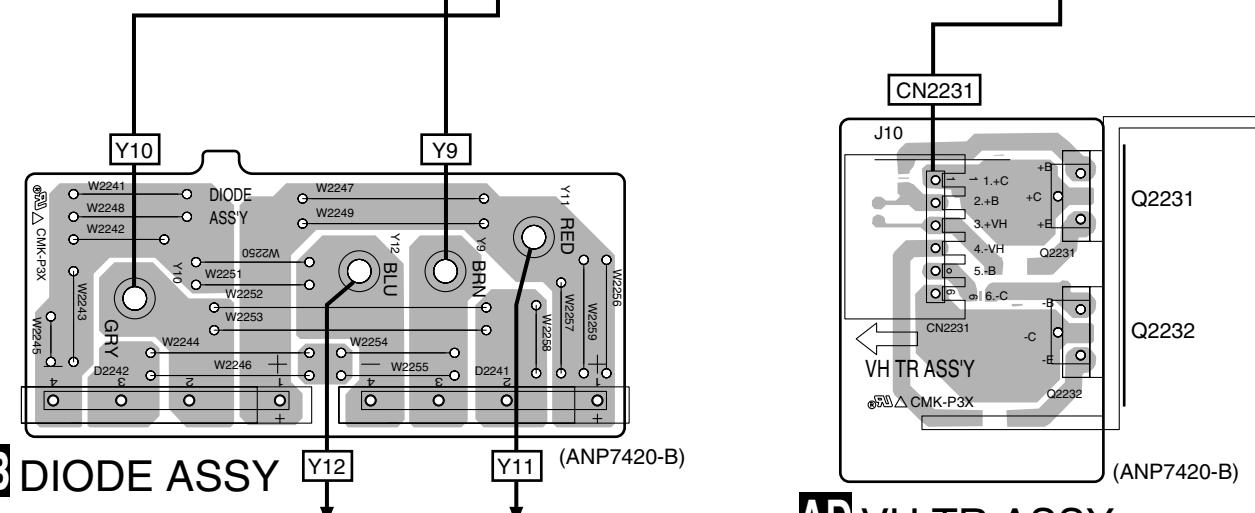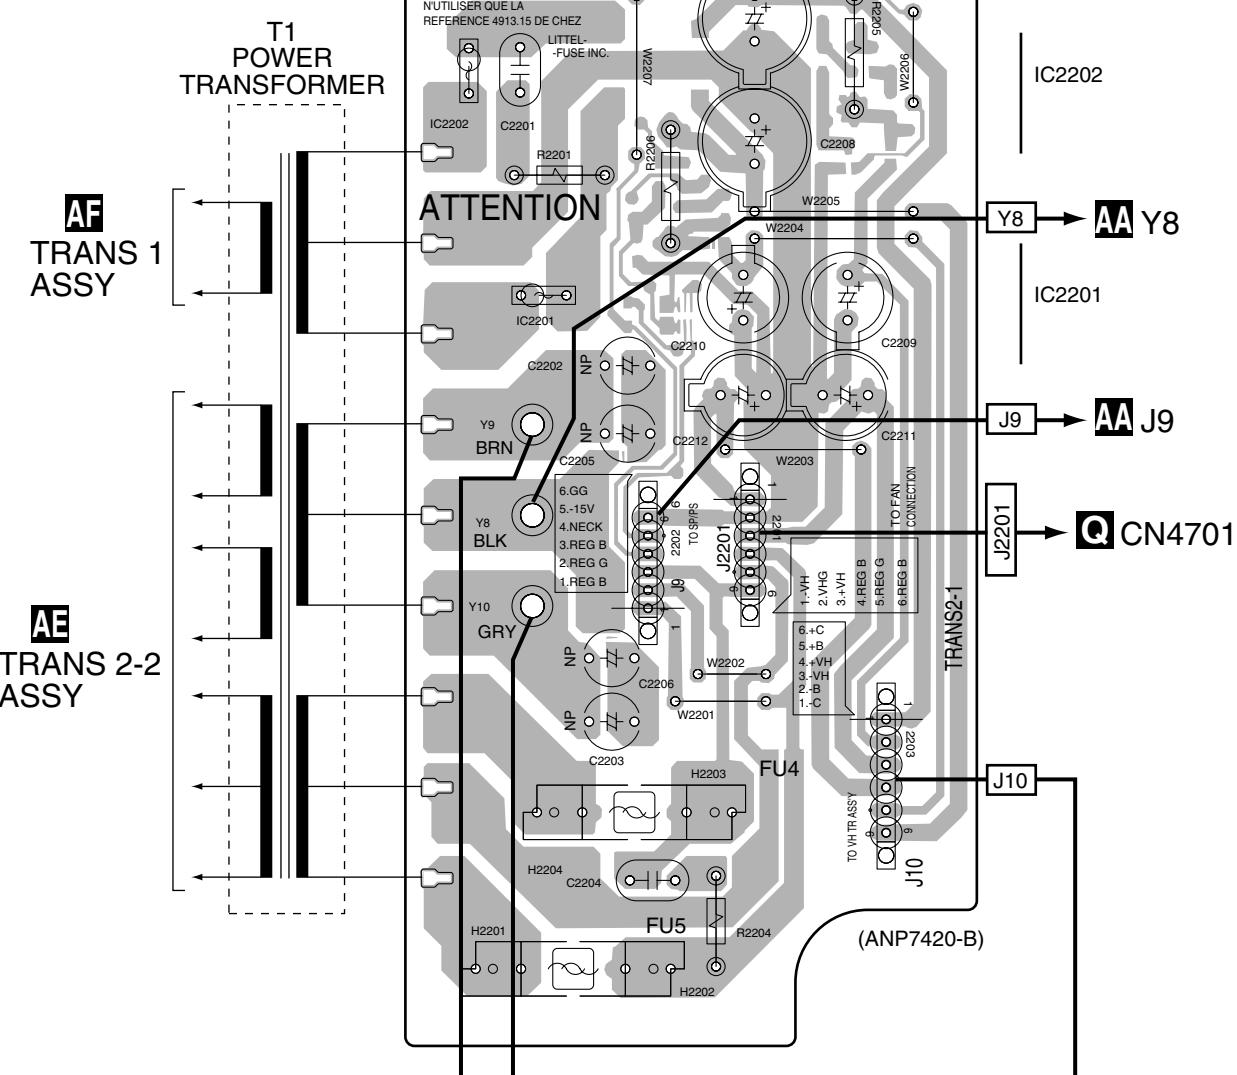

AB AC AD

SIDE B

A

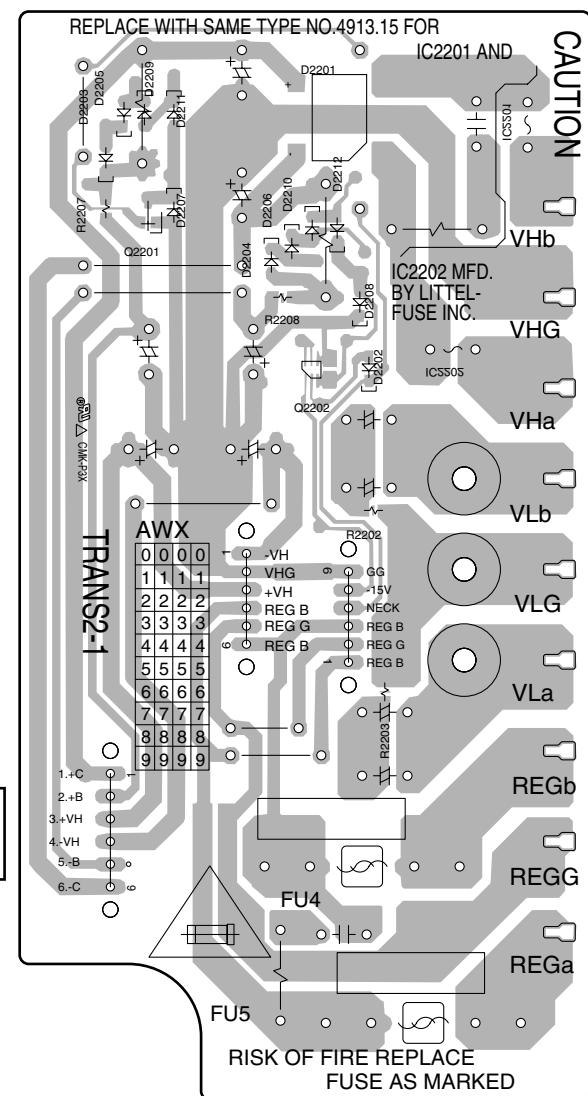AC TRANS 2-1 ASSY

IC2201

Q2201

IC2202



Q2202

J2201**6J**

B

C

D

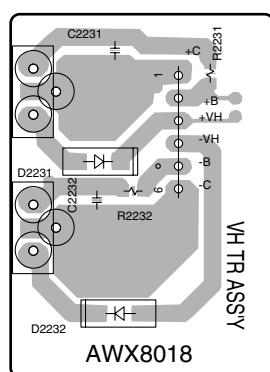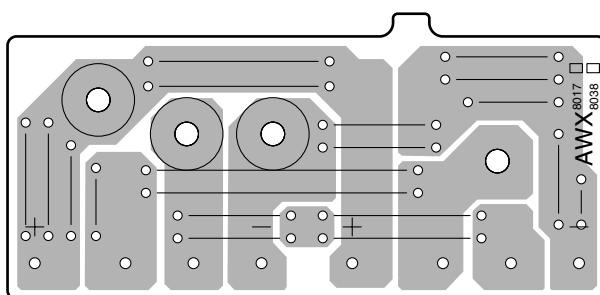**CN2231****AD VH TR ASSY**


E

AB AC AD

99

4.18 TRANS 2-1, TRANS 1 and PRIMARY ASSYS

SIDE A

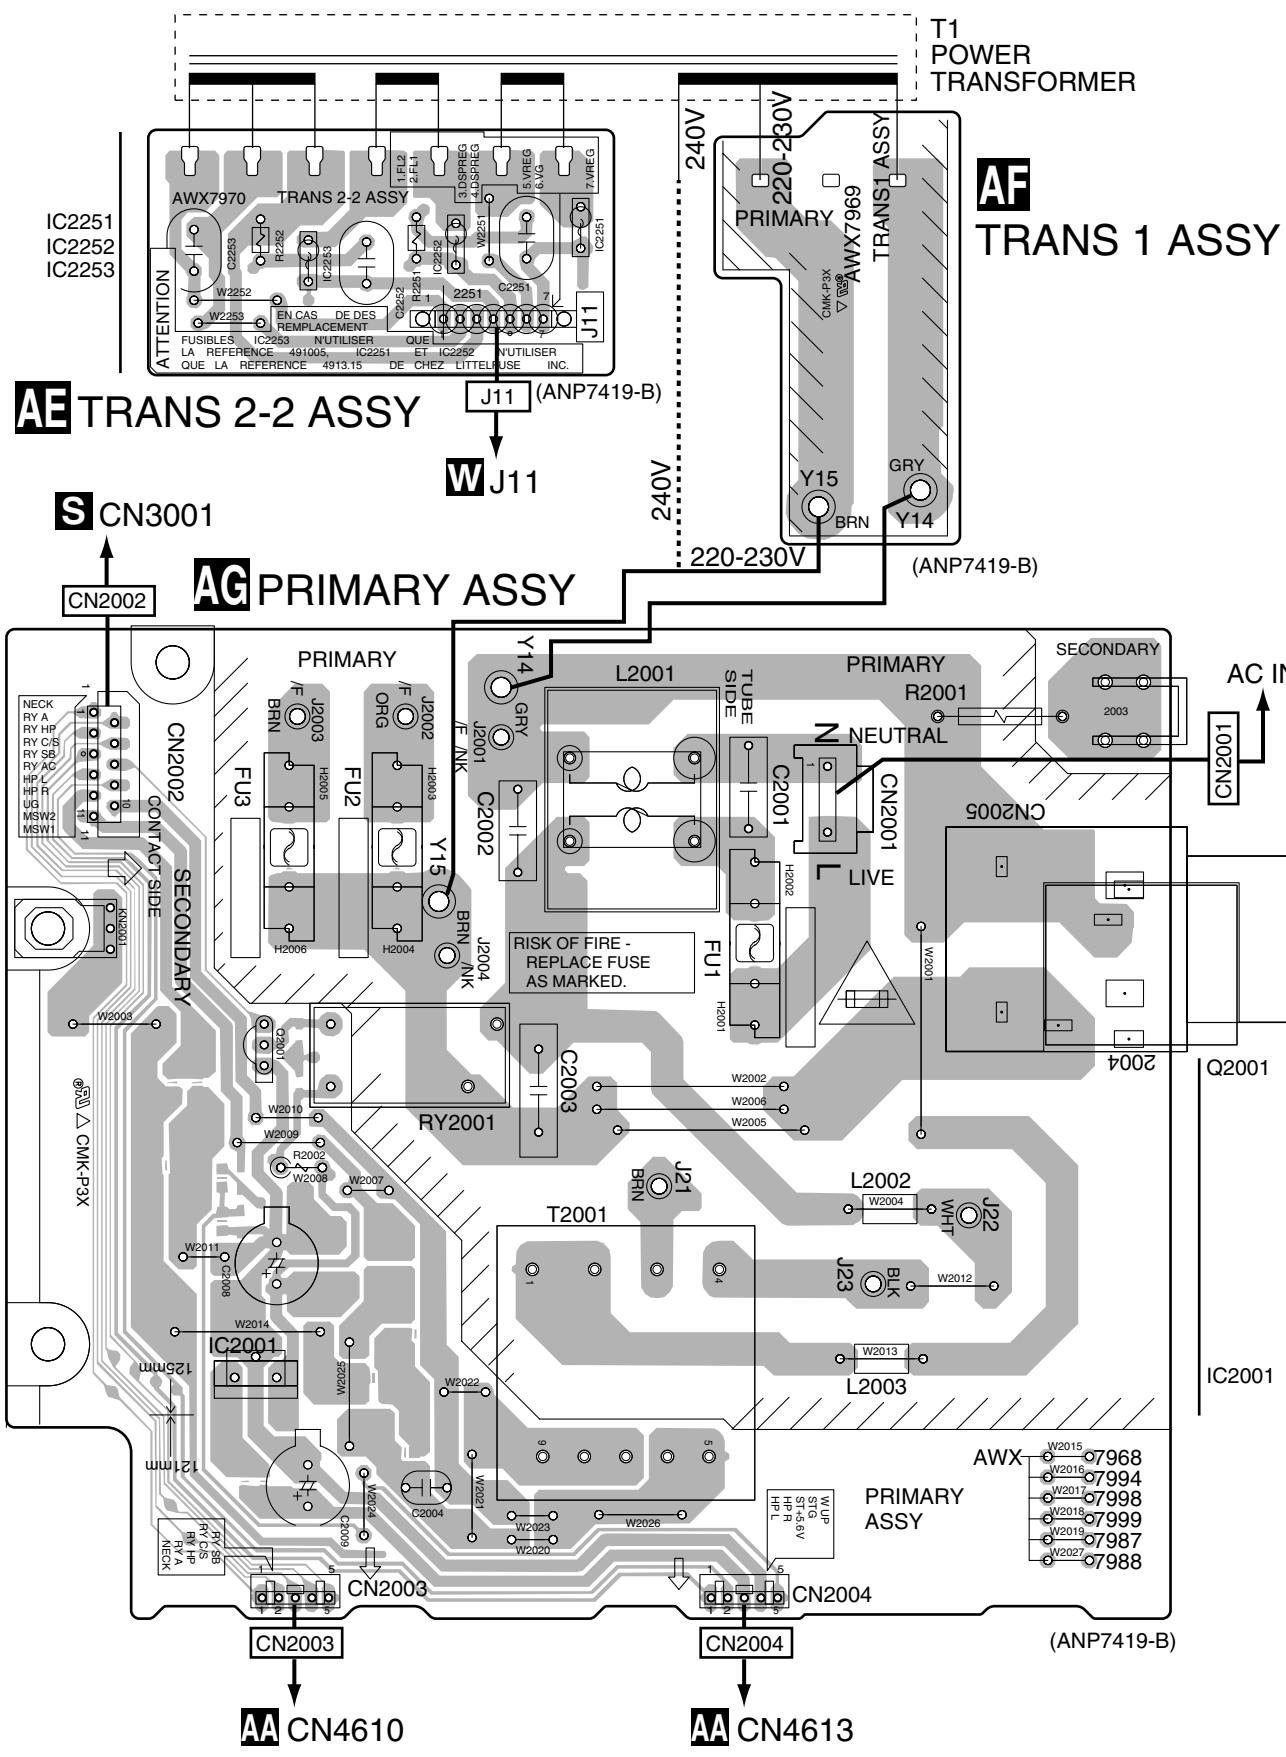

AE AF AG AH

SIDE B

● Line Voltage Selection

Line Voltage can be changed by the following modification:


1. Disconnect the AC power cord.
2. Remove the cover.
3. Change the connection wire from TRANS 1 ASSY to PRIMARY ASSY (Terminal No. Y15) as follows.

Voltage	Terminal No.
220-230V	Y15 of TRANS 1 ASSY
240V	240V terminal of power transformer


4. Stick a line voltage label on the rear panel.

Description	Part No.
220V label	AAX-193
240V label	AAX-192

AF TRANS 1 ASSY

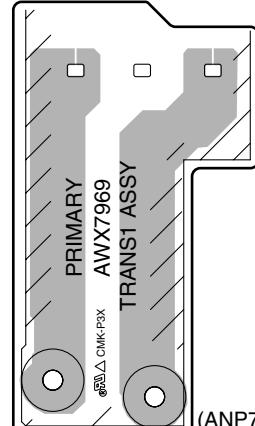


AE TRANS 2-2 ASSY

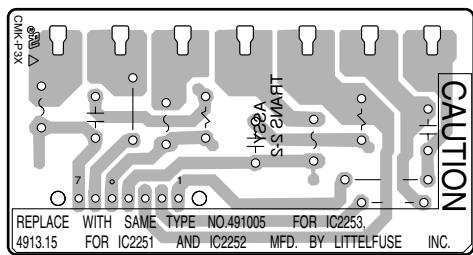

(ANP7419-B)

AG PRIMARY ASSY

CN2002

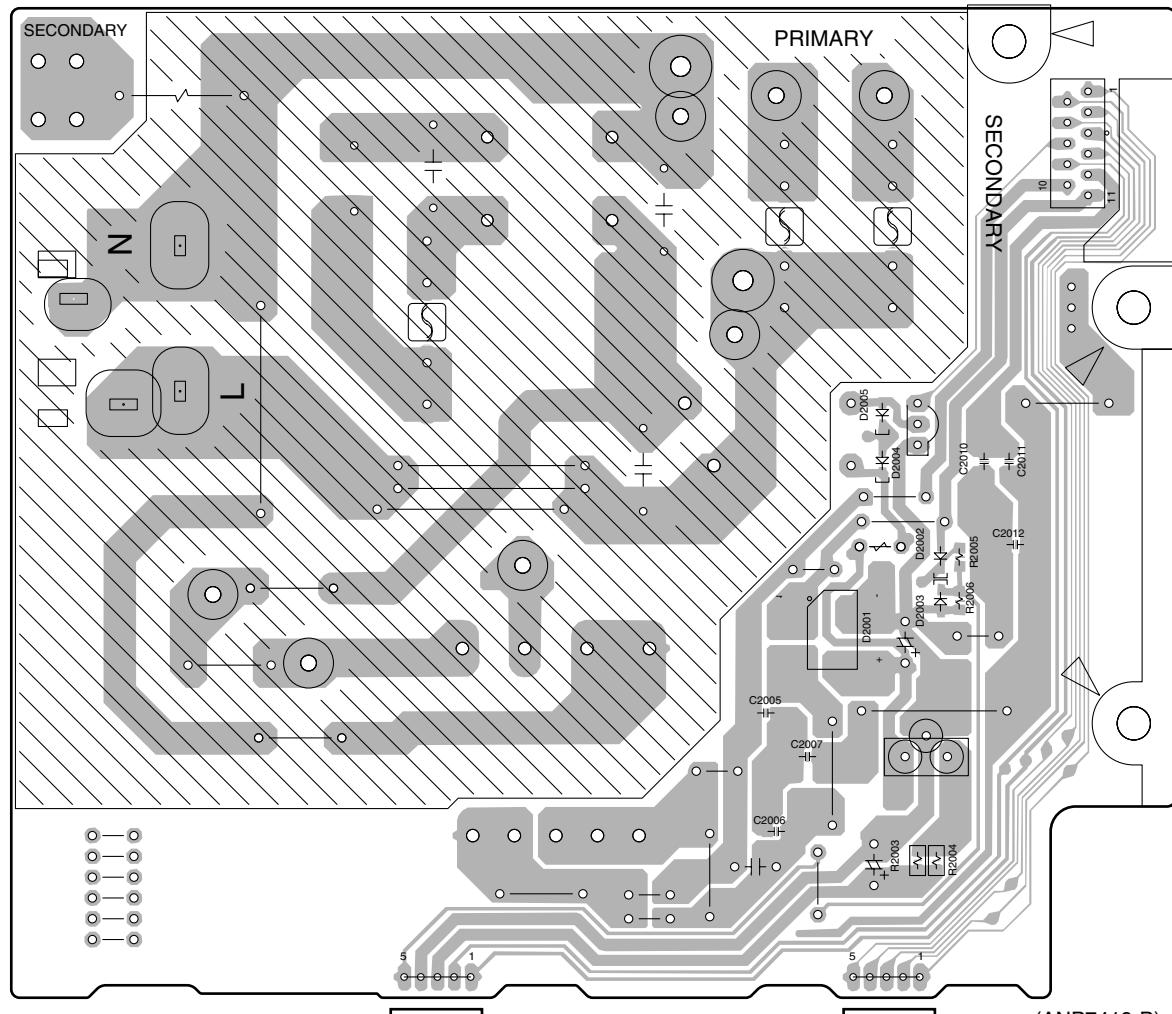

(ANP7419-B)

AE AF AG AH

5. PCB PARTS LIST

- A**
- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).
- | | | | |
|--------------|--|-------|-----------------|
| 560 Ω | $\rightarrow 56 \times 10^1 \rightarrow 561$ | | RD1/4PU[5 6 1]J |
| 47k Ω | $\rightarrow 47 \times 10^3 \rightarrow 473$ | | RD1/4PU[4 7 3]J |
| 0.5 Ω | $\rightarrow R50$ | | RN2H[R 5 0]K |
| 1 Ω | $\rightarrow 1R0$ | | RS1P[1 R 0]K |
- Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).
- | | | | |
|----------------|--|-------|-------------------|
| 5.62k Ω | $\rightarrow 562 \times 10^3 \rightarrow 5621$ | | RNI/4PC[5 6 2 1]F |
|----------------|--|-------|-------------------|

B

• LIST OF WHOLE PCB ASSEMBLIES

Mark	Symbol and Description	VSX-D2011-S/ HYXJI	VSX-D1011-S/ HYXJI	VSX-D1011-K/ HYXJI
NSP	1..FM/AM TUNER MODULE	AXQ7232	AXQ7232	AXQ7232
	1..REGULATOR ASSY	AWK7738	AWK7738	AWK7738
	2..7.1 CH I/O ASSY	AWX7973	AWX7973	AWX7973
	2..POWER AMP IN ASSY	AWX7982	AWX7982	AWX7982
	2..FAN DRIVE ASSY	AWX8135	AWX8135	AWX8135
	2..REGULATOR ASSY	AWX8020	AWX8020	AWX8020
	2..TRANS 2-2 ASSY	AWX7970	AWX7970	AWX7970
	2..TRANS 1 ASSY	AWX7969	AWX7969	AWX7969
	2..PRIMARY ASSY	AWX7998	AWX7998	AWX7998
NSP	1..COMPLEX ASSY	AWK7755	AWK7757	AWK7757
	2..V-AUDIO IN ASSY	AWX7991	AWX7991	AWX7991
	2..FRONT IN ASSY	AWX8186	AWX8186	AWX8186
	2..OPTICAL IN ASSY	AWX7978	AWX7978	AWX7978
	2..INPUT CONNECT ASSY	AWX8041	AWX8041	AWX8041
	2..VOLUME ASSY	AWX7971	AWX7971	AWX7971
	2..MULTI JOG ASSY	AWX8015	AWX8015	AWX8015
	2..HEADPHONE ASSY	AWX7980	AWX7980	AWX7980
	2..SP/PS ASSY	AWX8039	AWX8040	AWX8040
	2..DIODE ASSY	AWX8017	AWX8038	AWX8038
	2..TRANS 2-1 ASSY	AWX7979	AWX7979	AWX7979
	2..VH TR ASSY	AWX8018	AWX8018	AWX8018
	2..MECHA SW ASSY	AWX7995	AWX7995	AWX7995
NSP	1..MAIN ASSY	AWK7737	AWK7747	AWK7747
	2..COAXIAL IN ASSY	AWX7965	AWX8013	AWX8013
	2..VIDEO ASSY	AWX8001	AWX8002	AWX8002
	2..COMPONENT ASSY	AWX7963	Not used	Not used
	2..MAIN CONTROL ASSY	AWX7997	AWX8010	AWX8010
	2..MIC & F.OPT IN ASSY	AWX7981	Not used	Not used
	2..MIC AMP ASSY	AWX8004	Not used	Not used
	2..DSP CONNECTION ASSY	AWX8024	AWX8024	AWX8024
	2..FAN CONNECTION ASSY	AWX8005	AWX8005	AWX8005
NSP	1..POWER AMP ASSY	AWK7763	AWK7743	AWK7743
	2..DISPLAY ASSY	AWX8147	AWX8011	AWX8011
	2..POWER AMP-L ASSY	AWX7984	AWX7984	AWX7984
	2..POWER AMP-R ASSY	AWX7985	AWX7985	AWX7985
	2..POWER AMP-C ASSY	AWX7986	AWX7986	AWX7986
	1..DSP ASSY	AWX8016	AWX8016	AWX8016

F

• **CONTRAST OF PCB ASSEMBLIES**

G COAXIAL IN ASSY

AWX7965 and AWX8013 are constructed the same except for the following :

Mark	Symbol and Description	AWX7965	AWX8013
	IC1681 IC1682 C1680, C1697 C1681 C1683-C1686, C1689, C1690, C1698	PCM2902EG TC7SET08F CKSRYB103K50 CEAT470M16 CKSRYB104K16	Not used Not used Not used Not used Not used
	C1687 C1688 R1681 R1682, R1683 R1686	CCSRCH220J50 CCSRCH180J50 RS1/16S152J RS1/16S220J RS1/16S105J	Not used Not used Not used Not used Not used
	R1687 R1689 R1690 X1681 CRYSTAL RESONATOR (12.0MHz) JA1681 USB CONNECTOR	RS1/16S470J RS1/16S222J RS1/16S101J ASS7047 DKN1237	Not used Not used Not used Not used Not used

H VIDEO ASSY

AWX8001 and AWX8002 are constructed the same except for the following :

Mark	Symbol and Description	AWX8001	AWX8002
	IC903 IC933 Q901 C918 C915, C916, C921, C957, C958	TC4W53FU BU4053BCF 2SA933S CEAT101M16 CKSRYB473K50	Not used Not used Not used Not used Not used
	C919 C920 C922 R914 R916	CCSRCH150J50 CEAT470M25 CCSRCH181J50 RS1/16S101J RS1/16S104J	Not used Not used Not used Not used Not used
	R917 R918 R919 R920 R921, R955, R956, R958	RS1/16S153J RS1/16S103J RS1/16S101J RD1/2VM221J Not used	Not used Not used Not used Not used RS1/16S0R0J
	R922 R926, R959, R960, R961 R954 JA905 1P PIN JACK	RS1/16S750J RS1/16S102J RS1/16S0R0J VKB1122	Not used Not used Not used Not used

K MAIN CONTROL ASSY

AWX7997 and AWX8010 are constructed the same except for the following :

Mark	Symbol and Description	AWX7997	AWX8010
	Q101, Q102 Q103 C139, C140 R135, R136 R137, R138	2SC3326 DTA124EK CCSRCH470J50 RS1/16S912J RS1/16S102J	Not used Not used Not used RS1/16S0R0J Not used
	R141, R142 R143, R524, R525 R523, R526	RS1/16S472J RS1/16S473J Not used	Not used Not used RS1/16S473J

S DISPLAY ASSY

A AWX8147 and AWX8011 are constructed the same except for the following :

Mark	Symbol and Description	AWX8147	AWX8011
	R3099 4P CABLE HOLDER J3008 JUMPER WIRE 04P	Not used 51048-0400 D20PYY0415E	RS1/16S473J Not used Not used

AA SP/PS ASSY

B AWX8039 and AWX8040 are constructed the same except for the following :

Mark	Symbol and Description	AWX8039	AWX8040
⚠	L4608, L4609 RY4601-RY4605 C4621, C4622 C4623 R4628-R4632	RTF1167 ASR7014 ACH7169 CEAT101M50 RD1/2VM331J	Not used ASR7026 ACH7170 Not used RD1/2VM471J

AB DIODE ASSY

C AWX8017 and AWX8038 are constructed the same except for the following :

Mark	Symbol and Description	AWX8017	AWX8038
⚠	D2241, D2242	LN6SB60-4003	D5SBA20(B)

• PARTS LIST FOR VSX-D2011-S

Mark No.	Description	Part No.	Mark No.	Description	Part No.
REGULATOR ASSY					
OTHERS					
Y15	BOARD IN JUMPER	ADX7418	L602		LAU2R2J
Y14	BOARD IN JUMPER	ADX7419	L601		LCTA270J2520
J11	JUMPER WIRE 7P	D20PYY0745E			
CAPACITORS					
COMPLEX ASSY					
OTHERS					
Y8	BOARD IN JUMPER	ADX7284	C605		CCSQCH680J50
Y9	BOARD IN JUMPER	ADX7285	C212, C213, C226, C233-C235		CCSRCH101J50
Y10	BOARD IN JUMPER	ADX7286	C240, C614		CCSRCH101J50
Y11	BOARD IN JUMPER	ADX7287	C206		CCSRCH120J50
Y12	BOARD IN JUMPER	ADX7288	C231, C232		CCSRCH150J50
J9	JUMPER WIRE 6P	D20PYY0615E	C223		CEAT100M50
			C229		CEAT101M10
			C224		CEAT1R0M50
			C227		CEAT220M25
			C241		CEAT2R2M50
A FM/AM TUNER MODULE					
SEMICONDUCTORS					
IC201		BA1451F	C243		CEAT330M16
IC202		LC72131MD	C228		CEAT3R3M50
Q201, Q204, Q205, Q601		2SC2412K	C237		CEAT470M10
Q202		DTA124ES	C211		CEJQ1R0M50
Q203, Q602		DTC124EK	C210		CEJQ470M16
D201		1SS133			
D601		HVU187			
D202		MTZJ5.1C			
D101		UDZS6.8B			
COILS AND FILTERS					
L201	FL COIL	ATE7003	C201, C205, C214, C230, C236		CKSRYB223K50
F202	FM CERAMIC FILTER	ATF-107	C244, C611		CKSRYB223K50
			C221		CKSRYB224K10
			C603		CKSRYB392K50
			C215		CKSRYB471K50

Mark No.**Description****Part No.**

C202, C222
C606

CKSRYB473K16
CKSRYB561K50

RESISTORS

R211
R221
R233
R103, R104
Other Resistors

RD1/4PU221J
RD1/4PU222J
RD1/4PU391J
RS1/10S221J
RS1/16S###J

OTHERS

CN201 13P FFC CONNECTOR
BN201 2P TERMINAL WITH PAL
SHIELD CASE T
SHIELD CASE B
X201 CRYSTAL RESONATOR
(7.2MHz)

52044-1345
AKA7002
ANK7072
ANK7073
ASS1093

FM FRONTEND
AM RF TUNING BLOCK

AXF7005
AXX7072

B 7.1 CH I/O ASSY**SEMICONDUCTORS**

IC1301–IC1304
Q1351, Q1352, Q1361, Q1362
Q1371, Q1372, Q1381, Q1382

UPC4570G2
HN1C03F
HN1C03F

CAPACITORS

C1301–C1304, C1307, C1308
C1311–C1314, C1317, C1318
C1321–C1324, C1327, C1328
C1331–C1334, C1337, C1338
C1351, C1352, C1361, C1362

C1371, C1372, C1381, C1382
C1309, C1310, C1319, C1320
C1329, C1330, C1339, C1340
C1305, C1306, C1315, C1316
C1325, C1326, C1335, C1336

C1341–C1348, C1391–C1394

CCSRCH101J50
CCSRCH101J50
CCSRCH101J50
CCSRCH101J50
CCSRCH331J50

CCSRCH331J50
CEAT100M50
CEAT100M50
CEAT4R7M50
CEAT4R7M50

CEAT4R7M50
CKSRYB103K50

RESISTORS

All Resistors

RS1/16S###J

OTHERS

CN1301–CN1304 4P PIN JACK
CN1306 5P SOCKET
CN1307, CN1308 9P SOCKET

AKB7015
AKP7066
AKP7068

C V-AUDIO IN ASSY**CAPACITORS**

C1201–C1212
C1213–C1215

CCSRCH221J50
CKSRYB103K50

RESISTORS

All Resistors

RS1/16S###J

OTHERS

CN1201–CN1203 4P PIN JACK
CN1204 17P SOCKET

AKB7015
AKP7072

D FRONT IN ASSY**CAPACITORS****Mark No.****Description****Part No.**

C1501, C1502
C1505
C1504, C1506
C1503
C1510

CCSRCH221J50
CKSRYB102K50
CKSRYB103K50
CKSRYB472K50
CKSRYB473K50

RESISTORS

All Resistors

RS1/16S###J

OTHERS

CN1501 7P FFC CONNECTOR
JA1501 FRONT INPUT
KN1501 EARTH METAL FITTING

52044-0745
AKX7016
VNF1084

E OPTICAL IN ASSY**COILS AND FILTERS**

F1701 CHIP BEAD

DTF1064

CAPACITORS

C1706
C1701–C1705

CEAT470M16
CKSRYF104Z16

RESISTORS

All Resistors

RS1/16S###J

OTHERS

CN1701 9P FFC CONNECTOR
JA1701, JA1702 OPTICAL LINK IN
JA1703, JA1704 OPTICAL LINK OUT

52045-0945
GP1FA502RZ
GP1FA502TZ

F INPUT CONNECT ASSY**SEMICONDUCTORS**

IC1451

UPC4570G2

CAPACITORS

C1451, C1452
C1454, C1455
C1453

CEAT100M50
CKSRYB103K50
CKSRYB472K50

RESISTORS

All Resistors

RS1/16S###J

OTHERS

CN1407 5P PLUG
CN1406, CN1408 9P PLUG
CN1405 17P PLUG
CN1404 9P SOCKET
CN1403 13P SOCKET

AKP7055
AKP7057
AKP7061
AKP7068
AKP7070

CN1401 15P SOCKET

AKP7071

G COAXIAL IN ASSY**SEMICONDUCTORS**

IC1681
IC1881
IC1682

PCM2902EG
TC74HCU04AF
TC7SET08F

COILS AND FILTERS

F1881 CHIP BEAD

DTF1064

CAPACITORS

C1688
C1687

CCSRCH180J50
CCSRCH220J50

Mark No. **Description****Part No.****Mark No.** **Description****Part No.**

A	C1885, C1886	CCSRCH470J50	SEMICONDUCTORS	PDC084A
	C1887	CCSRCH471J50	IC1051	TC74HC4053AF
	C1681	CEAT470M16	IC1001	TK15450M
	C1890	CEAT470M25	IC1002, IC1003	DTC124EK
	C1680, C1697, C1857, C1858	CKSRYB103K50	Q1051	1SS355
	C1883, C1884, C1888, C1897	CKSRYB103K50	D1051, D1052	
	C1683-C1686, C1689, C1690, C1698	CKSRYB104K16		
			COILS AND FILTERS	
			L1051, L1052	LCYA100J2520
			L1053	LCYA330J2520

RESISTORS

All Resistors

RS1/16S###J

CAPACITORS

C1060	CCSRCH101J50
C1055	CCSRCH150J50
C1056	CCSRCH180J50
C1057, C1058	CCSRCH240J50
C1024-C1026, C1059	CCSRCH470J50
C1017, C1018, C1023, C1029	CCSRCK2R0C50
C1013, C1014, C1019, C1020	CEAT101M16
C1027, C1028, C1051, C1053, C1063	CEAT101M16
C1007, C1008, C1015, C1016	CKSRYB103K50
C1021, C1022	CKSRYB103K50
C1052, C1054, C1061, C1062	CKSRYB473K50

RESISTORS

All Resistors

RS1/16S###J

OTHERS

CN1001	9P SOCKET	AKP7068
JA1001-JA1003	3P PIN JACK	VKB1150
X1051	CRYSTAL RESONATOR (14.32MHz)	ASS1056

CAPACITORSCCSRCH101J50
CCSRCH150J50
CCSRCH181J50
CCSRCH330J50
CEAT101M10**J MECHA SW ASSY**
SWITCHES AND RELAYS

S2491 ASG1035

CAPACITORS

C2491, C2492 CKSRYB103K50

OTHERS

CN2491 3P JUMPER CONNECTOR 52147-0310

K MAIN CONTROL ASSY
SEMICONDUCTORS

IC651	BU1923F
IC502, IC503	BU4094BCF
IC501	PD5770C8
IC511	TC74VHC08FT
IC302	TC74VHCT244AFT

RESISTORSR920, R966
R969
Other Resistors RD1/2VM221J
RD1/2VM471J
RS1/16S###J

IC103	TC9163AF
IC104	TC9215AF
IC101	TC9274F-019
IC701-IC704	TC94A07F
IC102, IC711-IC714	UPC4570G2

OTHERSJA904 COMB. JACK (S+1P) AKB7146
JA901-JA903 COMB. JACK (2S+2P) AKB7147
CN901 15P SOCKET AKP7071
JA905 1P PIN JACK VKB1122

Q651	2SA1037K
Q601	2SC1740S
Q653	2SC2412K
Q101, Q102	2SC3326
Q103, Q511	DTA124EK
Q501, Q652	DTC143EK

Mark No. **Description**

D501, D511, D521–D524
 D821, D822, D831, D832
 D601

COILS AND FILTERS

L501
 L651
 △ L891–L895 CHIP SOLID INDUCTOR

CAPACITORS

C508
 C719, C720, C739, C740
 C759, C760, C779, C780
 C113, C114, C125–C127
 C151–C153, C725–C727
 C745–C747, C765–C767
 C785–C787
 C103–C112, C115, C116
 C651, C652
 C117, C118, C139, C140, C662

C131, C132, C621, C622
 C701, C702, C713, C714
 C733, C734, C753, C754
 C773, C774
 C654

C303, C304, C602
 C657
 C506, C513
 C505, C655
 C503

C717, C718, C721, C722
 C737, C738, C741, C742
 C757, C758, C761, C762
 C777, C778, C781, C782
 C133, C134

C511
 C748, C749, C768, C769
 C788, C789
 C510
 C601

C653
 C128, C129, C137, C138
 C155–C157, C302, C502, C507
 C509, C514, C515, C535, C540
 C598, C711, C712, C723, C724

C731, C732, C743, C744
 C751, C752, C763, C764
 C771, C772, C783, C784
 C891, C892, C894
 C512, C656

C154, C599, C821, C831
 C658

RESISTORS

All Resistors

OTHERS

CN552 10P FFC CONNECTOR
 CN601 13P FFC CONNECTOR
 CN801 24P FFC CONNECTOR
 CN501 32P FFC CONNECTOR
 CN103 9P PLUG

Part No.

1SS355
 1SS355
 UDZ11B

LCYA2R2J2520
 LFCA2R2J
 QTL1013

ACH7132
 CCSRCH680J50
 CCSRCH680J50
 CCSRCH101J50
 CCSRCH101J50
 CCSRCH101J50

CEAT100M50
 CEAT100M50
 CEAT100M50
 CEAT100M50
 CEAT100M50
 CEAT101M10

CEAT101M16
 CEAT1R0M50
 CEAT221M10
 CEAT2R2M50
 CEAT331M10

CEAT470M25
 CEAT470M25
 CEAT470M25
 CEAT470M25
 CEAT470M50

CEAT471M10
 CEV100M16
 CEV100M16
 CKSQYF105Z16
 CKSQYF225Z16

CKSRYB102K50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50

CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB472K50

CKSRYB473K50
 CKSRYB561K50

Mark No. **Description**

CN102 13P PLUG
 CN101 15P PLUG
 CN351 7P SOCKET
 CN2, CN3 9P SOCKET
 CN502 19P SOCKET

CN302 21P SOCKET
 CN1 3P PLUG
 JA591 REMOTE CONTROL JACK
 JA592 REMOTE CONTROL JACK
 JA111–JA113 4P PIN JACK
 CN301 21P FFC CONNECTOR
 X651 CRYSTAL RESONATOR
 (4.332MHz)
 X501 CERAMIC RESONATOR
 (15.7MHz)

L MIC & F.OPT IN ASSY

COILS AND FILTERS

L1601 CHIP FERRITE BEAD
 △ L1602, L1603 CHIP SOLID INDUCTOR

CAPACITORS

C1601, C1606
 C1603
 C1611
 C1602, C1612, C1614

RESISTORS

All Resistors

OTHERS

CN1601 4P FFC CONNECTOR	52044-0445
J1601 CORD WITH PLUG	ADX7417
JA1601 OPTICAL LINK IN	GP1FA502RZ
JA1606 REMOTE CONTROL JACK	RKN1004
CN1602 KR CONNECTOR	S3B-PH-K

M MIC AMP ASSY

SEMICONDUCTORS

△ IC4751
 IC4752
 D4751, D4752

CAPACITORS

C4753	CCSRCH101J50
C4754	CCSRCH330J50
C4751, C4752, C4755–C4757	CEAT100M50
C4758, C4762–C4765	CKSRYB473K50

RESISTORS

R4756	RD1/4MUF471J
Other Resistors	RS1/16S###J

OTHERS

CN4752 4P JUMPER CONNECTOR	52147-0410
CN4751 KR CONNECTOR	B3B-PH-K
PCB BINDER	VEF1040
KN4751 EARTH METAL FITTING	VNF1084

N DSP CONNECTION ASSY

SEMICONDUCTORS

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	IC1651	TC74LVX244FT		CN4054 10P JUMPER CONNECTOR	52147-1010
A	COILS AND FILTERS				
	L1651	QTL1013			
	CAPACITORS				
	C1651	CKSRYB103K50			
	RESISTORS				
	All Resistors	RS1/16S###J			
	OTHERS				
	CN1652-CN1654 17P SOCKET	AKP7072		4701 9P CABLE HOLDER	51048-0900
	CN1651 B TO B CONNECTOR 50P	AKP7177		CN4701 6P JUMPER CONNECTOR	52147-0610
B	O POWER AMP IN ASSY			J4701 JUMPER WIRE 9P	D20PY0915E
	SEMICONDUCTORS			CN4702 3P PLUG	KM250MA3
	Q4001	2SC2412K			
	D4001	1SS355			
	CAPACITORS				
	C4002	CKSRYB104K16		IC201	AK4114VQ
	C4001	CKSRYB223K50		IC561	AK4382AVT
	RESISTORS			IC501, IC521, IC541	AK4383VT
C	All Resistors	RS1/16S###J		IC101	AK5380VT
	OTHERS			IC301, IC401	DSPC56367PV150
	4001 10P CABLE HOLDER	51048-1000			
	CN4001 24P FFC CONNECTOR	52044-2445		IC302, IC451	IS61LV6416-12T
	CN4003 17P PLUG	AKP7061		IC303	IS63LV1024-12T
	CN4002 19P PLUG	AKP7062		⚠ IC901	NJM2391DL1-33
	J12 JUMPER WIRE 10P	D20PYY1010E		IC601, IC621, IC641, IC661, IC681	NJM4565MD
	CN4004 3P L TYPE PLUG	KM250MA3L		⚠ IC902	NJU7223DL1-18
D	P FAN DRIVE ASSY				
	SEMICONDUCTORS			IC471	PD8100A
	Q4056	2SA1037K		IC701	TC74VHC157FT
	Q4051	2SC4793		IC304	TC74VHCU04FT
	Q4054	2SD1859X		IC503, IC705, IC706	TC7SH04FU
	Q4052	DTA124EK		IC305	TC7WH125FU
	Q4055	DTC114EK			
	Q4053	DTC124EK		Q681, Q682	2SK208
	⚠ D4051, D4052	1SR154-400		Q683, Q701, Q971, Q972, Q974	UN5112
	D4058, D4059	1SS355		Q684, Q702, Q973	UN5212
	D4054, D4055	UDZ12B		Q601, Q621, Q641, Q661	XP4506
E	D4053	UDZ27B		D681, D682, D721	1SS355
	D4057	UDZS5.1B			
	CAPACITORS			D702	DAN202K
	C4054	CEAT101M16		D701, D971, D972	DAP202K
	C4052	CEAT1R0M50		D101-D104	RB501V-40
	C4055, C4056	CEAT331M63			
	C4051	CEAT471M35		COILS AND FILTERS	
	C4053	CKSRYB103K50		L301-L304, L401, L402, L451	ATL7002
F	RESISTORS			L471, L904, L906, L907	ATL7002
	R4057, R4058	RS3LMF331J		CHIP FERRITE BEAD	
	Other Resistors	RS1/16S###J		L101-L104, L201-L203	QTL1013
	OTHERS			L305, L306, L501, L503, L511	QTL1013
	CN4051 9P JUMPER CONNECTOR	52147-0910		L521, L531, L541, L551, L561	QTL1013
				L571, L701, L705, L706	QTL1013
				CHIP SOLID INDUCTOR	
				⚠ L403 CHIP BEAD	VTL1072
				⚠ L502 CHIP BEAD	VTL1077
	CAPACITORS				
	C4054	CEAT101M16		CAPACITORS	
	C4052	CEAT1R0M50		C339, C340	CCSRCH100D50
	C4055, C4056	CEAT331M63		C202	CCSRCH150J50
	C4051	CEAT471M35		C623, C625, C643-C646	CCSRCH151J50
	C4053	CKSRYB103K50		C663-C666	CCSRCH151J50
				C201	CCSRCH220J50
	RESISTORS				
	R4057, R4058	RS3LMF331J		C204, C206, C209, C301, C302	CCSRCH471J50
	Other Resistors	RS1/16S###J		C304, C306, C308, C309, C312	CCSRCH471J50
	OTHERS			C314, C316, C318, C319	CCSRCH471J50
	CN4051 9P JUMPER CONNECTOR	52147-0910		C321, C322, C325, C326	CCSRCH471J50
				C329, C330, C332, C333, C335	CCSRCH471J50

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
C337, C345, C346, C402	CCSRCH471J50	Q3004	HN1C01FU		
C404-C408, C410-C418	CCSRCH471J50	D3006-D3008	1SS355		A
C420-C422, C424-C426, C451	CCSRCH471J50	D3001	BR5064X		
C471	CCSRCH471J50	D3009	DAN202K		
C603-C606	CCSRCH820J50	D3000	MAA5064X		
C111, C112, C502, C522, C542	CEV100M16	COILS AND FILTERS			
C562, C607, C608, C627, C628	CEV100M16	L3000 CHIP FERRITE BEAD	ATL7002		
C647, C648, C667, C668	CEV100M16	SWITCHES AND RELAYS			
C681, C682	CEV100M16	S3000-S3017	ASG7013		
C104, C105, C551, C907, C909	CEV101M16	CAPACITORS			
C106	CEV2R2M50	C3003, C3004, C3007, C3024, C3025	CCSRCH101J50		B
C901, C902	CEV330M25	C3020, C3021, C3026, C3027	CEJQ100M16		
C210, C341, C401	CEV470M6R3	C3028, C3029	CEJQ101M10		
C212, C614, C624, C626	CKSRYB102K50	C3008, C3012, C3035	CEJQ101M6R3		
C683-C685, C689, C693, C695	CKSRYB102K50	C3022, C3023	CEJQ330M25		
C925	CKSRYB102K50	C3000-C3002	CKSRYB102K50		
C343, C429, C677, C678, C924	CKSRYB103K50	C3009, C3011, C3032-C3034	CKSRYB103K50		
C101-C103, C205, C207, C208	CKSRYB104K16	C3036, C3037	CKSRYB103K50		
C211, C305, C307, C310, C311	CKSRYB104K16	C3006, C3031	CKSRYB104K16		
C313, C315, C324, C331, C334	CKSRYB104K16	C3030	CKSRYF104Z50		
C338, C348, C352, C409, C419	CKSRYB104K16	RESISTORS			
C423, C427, C452, C501, C503	CKSRYB104K16	All Resistors	RS1/16S###J		C
C521, C541, C561, C591, C630	CKSRYB104K16	OTHERS			
C701, C705, C706, C906, C908	CKSRYB104K16	3008 4P CABLE HOLDER	51048-0400		
C303, C403	CKSRYB105K6R3	3002 5P CABLE HOLDER	51048-0500		
C109, C110, C622	CKSRYB222K50	3003 7P CABLE HOLDER	51048-0700		
C601, C602, C609, C610	CKSRYB332K50	CN3007 3P FFC CONNECTOR	52045-0345		
C621, C641, C642, C661, C662	CKSRYB392K50	CN3004 4P FFC CONNECTOR	52045-0445		
C629, C649, C650, C669, C670	CKSRYB472K50	RESISTORS			
C971	CKSRYB472K50	CN3005 7P FFC CONNECTOR	52045-0745		
C923	CKSRYB473K16	CN3001 11P FFC CONNECTOR	52045-1145		
C203	CKSRYB474K10	CN3006 32P FFC CONNECTOR	52045-3245		
C323, C428	CKSRYB563K16	V3000 FL TUBE	AAV7087		
C107, C611-C613, C615	CKSRYF104Z25	J3008 JUMPER WIRE 4P	D20PYY0415E		D
C671, C672, C694, C696-C698	CKSRYF104Z25	OTHERS			
RESISTORS		J3002 JUMPER WIRE 5P	D20PYY0510E		
R851	RAB4C101J	J3003 JUMPER WIRE 7P	D20PYY0715E		
R204, R225, R226, R229, R701	RAB4C104J	3001 FL HOLDER	VNF1085		
R712	RAB4C104J	X3000 CERAMIC RESONATOR	ASS7042		
R221	RS1/16S1802F	(4.19MHz)			
Other Resistors	RS1/16S###J	RESISTORS			
OTHERS		J3402-S3404	ASG7013		E
CN102	B TO B CONNECTOR 50P	S3401	ASX7037		
X201	CRYSTAL RESONATOR (24MHz)	CAPACITORS			
X301	CRYSTAL RESONATOR (33MHz)	C3401, C3402	CKSRYB103K50		
CN702	10P FFC CONNECTOR	RESISTORS			
CN101	20P FFC CONNECTOR	All Resistors	RS1/16S###J		
CN601	21P FFC CONNECTOR	OTHERS			
CN701	22P FFC CONNECTOR	CN3401 5P JUMPER CONNECTOR	52147-0510		
KN931	EARTH METAL FITTING	VKN1414			
		VKN1424			
		VKN1425			
		VKN1426			
		VNF1109			

S DISPLAY ASSY SEMICONDUCTORS

IC3000	PD5771A
IC3002	RPM7140-H4
Q3003	2SA1037K
Q3002	DTC124EK

T VOLUME ASSY SWITCHES AND RELAYS

S3402-S3404	ASG7013
S3401	ASX7037

CAPACITORS

C3401, C3402	CKSRYB103K50
--------------	--------------

RESISTORS

All Resistors	RS1/16S###J
---------------	-------------

OTHERS

CN3401 5P JUMPER CONNECTOR	52147-0510
----------------------------	------------

U MULTI JOG ASSY SWITCHES AND RELAYS

S3452-S3455	ASG7013
S3451	ASX7038

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	CAPACITORS C3451, C3452	CKSRYB103K50	C2413, C2414, C2428, C2434, C2453 C2424 C2444	CKSRYB103K50 CKSRYB473K50 CQMBA104J50	
	RESISTORS All Resistors	RS1/16S###J	RESISTORS R2403 R2401 Other Resistors	RD1/4MUF121J RD1/4MUF470J RS1/16S###J	
	OTHERS 3452 3P CABLE HOLDER CN3451 7P JUMPER CONNECTOR J3452 3P JUMPER WIRE	51048-0300 52147-0710 D20PYY0310E	OTHERS 2402 7P CABLE HOLDER CN2401 8P JUMPER CONNECTOR Y2401 BOARD IN JUMPER CN2411 7P PLUG CN2404, CN2406, CN2412, CN2414 9P PLUG	51048-0700 52147-0810 ADX7420 AKP7056 AKP7057	
B	V HEADPHONE ASSY CAPACITORS C1951, C1952	CKSRYB392K50	CN2405 15P PLUG CN2407-CN2409 17P PLUG CN2413 19P PLUG CN2410 21P PLUG CN2415 3P SOCKET	AKP7060 AKP7061 AKP7062 AKP7063 KP250NA3	
	RESISTORS All Resistors	RS1/16S###J	KN2401-KN2403 EARTH METAL FITTING	VNF1084	
	OTHERS CN1951 3P FFC CONNECTOR 1951 PHONE JACK KN1951 EARTH METAL FITTING	52045-0345 AKN7029 VNF1084			
C	W REGULATOR ASSY SEMICONDUCTORS IC2411 IC2409 IC2404 IC2403 IC2401 IC2405, IC2407 IC2406 IC2402 Q2401 D2401-D2404, D2407-D2410 D2418, D2419 D2411 D2415 D2405, D2406, D2413, D2414 D2421, D2422 D2420 D2423, D2424	AEK7003 NJM78L05A NJM78M05FA NJM78M12FA NJM78M15FA NJM78M56FA NJM79M05FA NJM79M15FA 2SA1803 1SR154-400 1SR154-400 1SS355 D3SBA20(B) RB501V-40 UDZ15B UDZS10B UDZS6.2B	X POWER AMP-L ASSY SEMICONDUCTORS IC4101, IC4201, IC4301 IC4102, IC4202, IC4302 IC4103, IC4203, IC4303, IC4453 Q4102, Q4202, Q4302 Q4101, Q4201, Q4301 D4102, D4104-D4107, D4202 D4204-D4207, D4302, D4304-D4307 D4101, D4103, D4201, D4203, D4301 D4303 C4102, C4202, C4302 C4112, C4113, C4212, C4213 C4312, C4313 D4102, D4104-D4107, D4202 D4204-D4207, D4302, D4304-D4307 D4101, D4103, D4201, D4203, D4301 D4303 C4106, C4107, C4206, C4207 C4306, C4307 (221μF/100V) C4102, C4202, C4302 C4112, C4113, C4212, C4213 C4312, C4313 C4114, C4214, C4314 C4401, C4402 C4110, C4111, C4210, C4211 C4310, C4311 C4101, C4201, C4301 C4103, C4203, C4303 C4104, C4105, C4204, C4205 C4304, C4305 C4108, C4109, C4208, C4209 C4308, C4309 C4114, C4214, C4314 C4401, C4402 C4110, C4111, C4210, C4211 C4310, C4311 C4101, C4201, C4301 C4103, C4203, C4303 C4104, C4105, C4204, C4205 C4304, C4305 C4108, C4109, C4208, C4209 C4308, C4309 CEANPR22M50 CEAT331M63 CEHAT100M2A CEHAT100M2A CEHAT100M50 CEHAT331M10 CEHAT470M63 CEHAT470M63 CEHAZL470M25 CEHAZL470M25 CEAT222M16 CEAT2R2M50 CEAT331M10 CEAT332M35 CEAT470M50 CEAT470M63 CEAT471M16 CEAT472M16 CKSRYB102K50 CKSRYB103K50	PA9009A PBD001A PBD002A 2SA1255 2SC3326 1SS355 1SS355 UDZS10B UDZS10B ACG7041 ACG7041 CCSRCH331J50 CCSRCH6R0D50 CCSRCH6R0D50 CEANPR22M50 CEAT331M63 CEHAT100M2A CEHAT100M2A CEHAT100M50 CEHAT331M10 CEHAT470M63 CEHAT470M63 CEHAZL470M25 CEHAZL470M25 ACN7107 ACN7107 ACN7111 RS1/16S###J	
E	CAPACITORS C2446 C2440 C2415, C2416 C2408 C2405, C2406, C2410, C2429 C2411, C2412 C2435 C2443 C2401, C2402 C2442 C2441 C2436, C2439 C2433 C2451, C2452 C2403, C2404, C2407, C2409	CCSRCH101J50 CEANP470M35 CEAT101M16 CEAT101M25 CEAT221M35 CEAT222M16 CEAT2R2M50 CEAT331M10 CEAT332M35 CEAT470M50 CEAT470M63 CEAT471M16 CEAT472M16 CKSRYB102K50 CKSRYB103K50	RESISTORS R4131, R4132, R4231, R4232 R4331, R4332, R4482 (0.1Ω) R4119, R4219, R4319 (0.22Ω/5W) Other Resistors	ACN7107 ACN7107 ACN7111 RS1/16S###J	
F			OTHERS Y2 LEAD WITH HOUSING Y3 LEAD WITH HOUSING Y5 LEAD WITH HOUSING	ADX7398 ADX7399 ADX7404	

Mark No. **Description**

CN4401 17P SOCKET
 CN4403 3P L TYPE PLUG

 CN4456 10P PLUG
 KN4401, KN4402
 EARTH METAL FITTING

Part No.

AKP7072
 KM250MA3

 KM250NA10L
 VNF1084

Mark No. **Description****CAPACITORS**

C4456, C4457 (221 μ F/100V)
 C4452
 C4462, C4463
 C4464
 C4460, C4461
 C4451

ACG7041
 CCSRCH331J50
 CCSRCH6R0D50
 CEANPR22M50
 CEHAT100M2A
 CEHAT100M50

Y POWER AMP-R ASSY
SEMICONDUCTORS

IC4151, IC4251, IC4351
 IC4152, IC4252, IC4352, IC4452
 IC4153, IC4253, IC4353
 Q4152, Q4252, Q4352
 Q4403, Q4404

PA9009A
 PBD001A
 PBD002A
 2SA1255
 2SC2412K

Q4151, Q4251, Q4351
 D4152, D4154–D4157, D4252
 D4254–D4257, D4352, D4354–D4357
 D4151, D4153, D4251, D4253, D4351
 D4353

2SC3326
 1SS355
 1SS355
 UDZS10B
 UDZS10B

CAPACITORS

C4156, C4157, C4256, C4257
 C4356, C4357 (221 μ F/100V)
 C4152, C4252, C4352
 C4162, C4163, C4262, C4263
 C4362, C4363

ACG7041
 ACG7041
 CCSRCH331J50
 CCSRCH6R0D50
 CCSRCH6R0D50

C4164, C4264, C4364
 C4405
 C4403, C4404
 C4160, C4161, C4260, C4261
 C4360, C4361

CEANPR22M50
 CEAT331M10
 CEAT331M63
 CEHAT100M2A
 CEHAT100M2A

C4151, C4251, C4351
 C4153, C4253, C4353
 C4154, C4155, C4254, C4255
 C4354, C4355
 C4158, C4159, C4258, C4259

CEHAT100M50
 CEHAT331M10
 CEHAT470M63
 CEHAT470M63
 CEHAZL470M25

C4358, C4359

CEHAZL470M25

RESISTORS

R4181, R4182, R4281, R4282
 R4381, R4382, R4481 (0.1 Ω)
 R4169, R4269, R4369 (0.22 Ω /5W)
 Other Resistors

ACN7107
 ACN7107
 ACN7111
 RS1/16S###J

OTHERS

Y1 LEAD WITH HOUSING
 Y4 LEAD WITH HOUSING
 Y6 LEAD WITH HOUSING
 CN4402 19P SOCKET
 CN4454 10P PLUG

 KN4403, KN4404
 EARTH METAL FITTING

ADX7397
 ADX7400
 ADX7404
 AKP7073
 KM250NA10L

 VNF1084

Mark No. **Description****RESISTORS**

R4469 (0.22 Ω /5W)
 Other Resistors

ACN7111
 RS1/16S###J

 CEHAT331M10
 CEHAT470M63
 CEHAZL470M25

OTHERS

CN4453, CN4455 10P SOCKET

KP250NA10

AA SP/PS ASSY
SEMICONDUCTORS

Q4602, Q4603
 Q4601
 D4601–D4610

RN1903
 RN4903
 1SS355

COILS AND FILTERS

L4601–L4607
 L4608, L4609

ATH1053
 RTF1167

SWITCHES AND RELAYS

RY4601–RY4605

ASR7014

CAPACITORS

R4621, R4622
 C4623
 C4601–C4614
 C4625–C4631

ACH7169
 CEAT101M50
 CFTYA224J50
 CQMBA103J50

RESISTORS

R4621–R4627
 R4628–R4632
 R4615, R4616

 R4613, R4614
 R4601–R4607

 R4611, R4612
 Other Resistors

RD1/2LMF4R7J
 RD1/2VM331J
 RD1/4MUF473J
 RS1LMF471J
 RS1LMF4R7J

 RS2LMF331J
 RS1/16S###J

OTHERS

4601	6P CABLE HOLDER	51048-0600
4602	8P CABLE HOLDER	51048-0800
Y13	BOARD IN JUMPER	ADX7291
J4602	JUMPER WIRE 8P	D20PYY0830E
CN4610, CN4613	5P PLUG	KM200TA5
CN4611 8P SPEAKER TERMINAL		XKE3017
CN4612 6P SPEAKER TERMINAL		XKE3018

Z POWER AMP-C ASSY
SEMICONDUCTORS

IC4451
 Q4452
 Q4451
 D4452, D4454–D4457
 D4451, D4453

PA9009A
 2SA1255
 2SC3326
 1SS355
 UDZS10B

AB DIODE ASSY
SEMICONDUCTORS

D2241, D2242

LN6SB60-4003

AC TRANS 2-1 ASSY

Mark No.	Description	Part No.
-----------------	--------------------	-----------------

SEMICONDUCTORS

A	⚠ IC2201, IC2202 PROTECTOR(3.15A) Q2202 Q2201 ⚠ D2201 D2202 D2207, D2208 D2203-D2206, D2209-D2212	AEK7016 RN4903 UN521L S1WB(A)60SD UDZ16B UDZS22B UDZS9.1B
---	---	---

CAPACITORS

B	⚠ C2202, C2203 (1μF/100V) C2207, C2208 (470μF/71V) C2209, C2210 C2211, C2212	ACH1237 ACH7173 CEAT101M63 CEAT221M63
---	---	--

RESISTORS

	⚠ R2205, R2206 Other Resistors	RS1LMF332J RS1/16S###J
--	-----------------------------------	---------------------------

OTHERS

C	2201 HOLDER51048-0600 2203 6P CABLE HOLDER H2201-H2204 FUSE CLIP J2201 JUMPER WIRE6P J10 JUMPER WIRE	2202 6P CABLE 51052-0600 AKR1004 D20PYY0615E D25PYY0607E
---	---	--

AD VH TR ASSY
SEMICONDUCTORS

	⚠ Q2232 ⚠ Q2231 ⚠ D2231, D2232	2SA1837 2SC4793 1SR154-400
--	--------------------------------------	----------------------------------

RESISTORS

D	All Resistors	RS1/16S###J
---	---------------	-------------

OTHERS

	CN2231 6P L TYPE CONNECTOR	KPD6L
--	----------------------------	-------

AE TRANS 2-2 ASSY
SEMICONDUCTORS

	⚠ IC2251, IC2252 PROTECTOR(3.15A) ⚠ IC2253 PROTECTOR(5A)	AEK7016 AEK7019
--	---	--------------------

CAPACITORS

	C2251-C2253	CQMBA104J50
--	-------------	-------------

RESISTORS

E	⚠ R2251, R2252	RD1/4MUF100J
---	----------------	--------------

OTHERS

	2251 7P CABLE HOLDER	51048-0700
--	----------------------	------------

AF TRANS 1 ASSY

TRANS 1 Assy has no service parts.

AG PRIMARY ASSY
SEMICONDUCTORS

F	⚠ IC2001 Q2001 D2002, D2004, D2005	NJM78M56FA KRC101M 1SS355
---	--	---------------------------------

Mark No.	Description	Part No.
-----------------	--------------------	-----------------

⚠ D2001 D2003	LINE FILTER	S1WB(A)60SD UDZS5.1B
------------------	-------------	-------------------------

COILS AND FILTERS

⚠ L2001 L2002, L2003	FERRITE BEAD	ATF7018 VTH1013
-------------------------	--------------	--------------------

TRANSFORMERS

⚠ T2001		ATT7040
---------	--	---------

SWITCHES AND RELAYS

⚠ RY2001		ASR7025
----------	--	---------

CAPACITORS

⚠ C2001, C2002 (0.01F/AC275V) ⚠ C2003 (10000pF/AC250V)		ACE7013 ACG7033
C2008		CEAT102M25
C2009		CEAT221M25
C2005-C2007, C2011, C2012		CKSRYB103K50

OTHERS

C2004		CQMA103J50
RESISTORS		
R2002		RD1/2VM101J
Other Resistors		RS1/16S###J
OTHERS		
CN2002 11P FFC CONNECTOR		52045-1145
⚠ CN2005 1P AC SOCKET		AKP1034
H2001, H2002 FUSE CLIP		AKR7001
CN2003, CN2004 5P SOCKET		KP200TA5L
⚠ CN2001 AC CORD SOCKET		RKP1751
KN2001 EARTH METAL FITTING		VNF1084

6. ADJUSTMENT



■ AM Tuner Section

- There is no adjustment in the AM tuner.

■ FM Tuner Section

- Set the mode selector to FM BAND.
- Connect the wiring as shown in Fig. 1.

Step No.	Adjustment Title	ANT. Input level and signal condition			Adjustment	
		Frequency (MHz)	Modulation	Input Level (dB μ V)	Adjust point	Contents
1	T-METER Adjustment	98	OFF	80	L201	Adjust L201 so that the DC voltage between Pin 21 and Pin 23 of IC201 (Test point Vtm) gets within $0 \pm 50\text{mV}$.


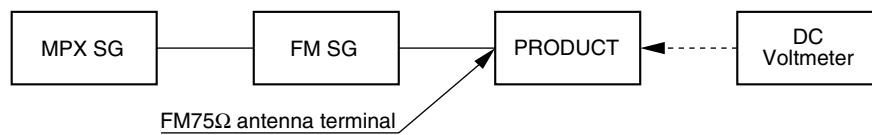


Fig.1 Adjustment Wiring Diagram

A FM/AM TUNER MODULE

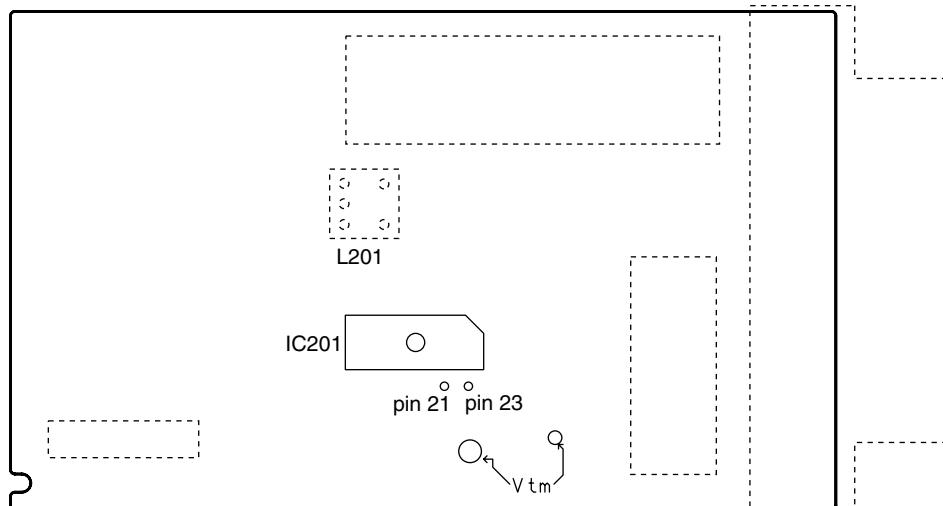

SIDE B

Fig.2 Adjustment Point

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 PROTECTION CIRCUIT CONTROL SPECIFICATION

Microcomputer-related ports

FAN_DRIVE (Expansion IC) : For Fan on/off

TEMP_IN (pin 94)

Input port (A/D) : To detect temperature

FAN_STOP (pin 95)

Input port : To detect Fan forced stop

OL_DET (pin 73)

Input port : To detect overloading at the amplifier

(Interrupt port)

DC_DET (pin 63)

Input port : For DC detection

The following control processes are activated immediately before the relay system is turned on upon power-on. The time is 4.8 seconds after power-on. (Control of the relay system is enabled 5.2 seconds after power-on.)

Only DC detection is enabled 2 seconds after power-on to activate it before other protection functions.

① Thermal and Fan detection, and Fan control

1) Thermal detection and Fan control

Valid with American and Japanese models only.

TEMPIN (V)	Temperature (°C)	Fan	Remarks
More than 4.10	More than 125	ON	Mute ON & speaker relay OFF : The warning indication "OVERHEAT"
3.83 to 4.09	110 to 125	ON	
2.91 to 3.82	80 to 110	ON	Leading hold
2.58 to 2.90	70 to 80	Leading hold	
Less than 2.52	Less than 70	OFF	Mute OFF & speaker relay ON : Normal mode

Valid with European and other general-area models only.

TEMPIN (V)	Temperature (°C)	Fan	Remarks
More than 3.58	More than 100	ON	Mute ON & speaker relay OFF : The warning indication "OVERHEAT"
3.30 to 3.57	90 to 100	ON	
2.91 to 3.29	80 to 90	ON	Leading hold
2.53 to 2.90	70 to 80	Leading hold	
Less than 2.52	Less than 70	OFF	Mute OFF & speaker relay ON : Normal mode

* By poor contact of Thermistor and alien substance mixture, there are the following cases displayed FL.

Become STBY after having done flushing with "THDCT NG" for three seconds.

By opening of thermistor junction or energization in very cold place (less than -15°C), TEMP line becomes high impedance. And when TEMP port became equal to or less than 0.1V.

2) Fan detection

If the fan is forcibly stopped, the FAN_DET port becomes "L"

Detecting "L" the microcomputer performs the following operations:

1. System muting on
2. Protection relays off

The warning indication "FAN STOP" appears (flashing) on the FL display.

If this status continues for more than 3 seconds, the power is turned off (for Standby mode).

If the port becomes "H" within 3 seconds, the unit resets automatically.

FAN_DET port performs the chattering check for 7 msec.

In addition, there is the case that detection delays for maximum 20 msec because performs monitor of FAN_DET port with a main loop.

② Overload detection (abnormality detection)

If the speaker terminals are short-circuited or low-load driving is detected, the OL_DET port becomes "L"

Detecting "L" edge interrupt in an interrupt process, the microcomputer performs the following operations:

1. System muting on
2. Speaker relay off (Control with the display microcomputer)
3. Power off (Standby mode)

③ DC detection (defect detection)

Only DC detection is enabled 2 seconds after power-on.

If there is a fault in the power amplifier or a high-level signal lower than 5 Hz is input, the DC_DET port becomes "L"

Detecting "L" the microcomputer performs the following operations:

1. System muting on
2. Speaker relay off (Control with the display microcomputer)

The warning indication "AMP ERR" appears on the FL display.

If this status continues for more than 3 seconds, the power is turned off (for Standby mode) and flashes the standby LED.

Do not accept the key input afterward.

(Flash it always till turns the primary side off.)

If the port becomes "L" within 3 seconds, the unit resets automatically.

DC_DET port performs the chattering check for 1 msec.

In addition, there is the case that detection delays for maximum 20 msec because performs monitor of DC_DET port with a main loop.

Even if turns the primary side off and turns on once again, standby LED flashes as it is.

If detects DC once and turned the power off, do not accept the key input afterward.

However, power on is possible when the following key was pressed to be able to key input in the protection line and service.

1. Test mode (remote control code : A55F)
2. When the STEREO/DIRECT key and SIGNAL SELECT key are both held pressed for 2 seconds.
(Be effective when turned the power off by DC detection regarding 2.)

④ Diagnostic mode


This mode is only for servicing and checking the circuit design, and not open to users.

When the STEREO/DIRECT key and TONE + key are both held pressed for 2 seconds in Standby mode, the power is turned on, and the number of times of each defect or Speaker relay off by abnormality detection is sequentially displayed on the FL display.

Displayed items:

- DC detection
- Overload detection
- Fan detection
- Temperature detection

Hold the STEREO/DIRECT key and TONE + key pressed for 2 seconds in Standby mode.

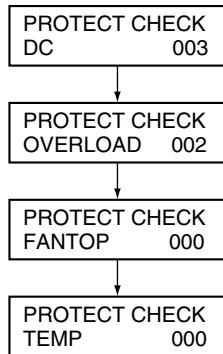

When the MULTI CH IN key and TONE – key are both held pressed for 2 seconds in standby mode, all clear the counter for detection.

● Protection Process List

Item	Purpose	Detection Method	Process	Warning Indication	Remarks
DC detection	To detect amplifier damage (defect status) A process to protect speakers (for protection of connected external devices)	Detects when the DC_DET port becomes "L".	Turns muting on and speaker relay off, then turns off the power after 3 seconds.	Flashing "AMP ERR" for 3 seconds. Flash the standby LED after the power off.	Once detected and turned the power off, input a key never again.
AMP overload	To detect overloading (abnormal status) With low-load driving or a short circuit of the speaker terminals (for protection of the amplifier)	Detects when the AMP_OL port becomes "L" (checks by interrupt).	Turns muting on and speaker relay off, and immediately turns off the power.	None	
Fan control	Protection function against a temperature rise at the heat sink	HY, F : Detect temperature more than 100°C. KU, J : Detect temperature more than 125°C.	Turns muting on and speaker relay off. Rotate the fan	Continue flasing with "OVERHEAT"	
		HY, F : Detect temperature of 90 to 100°C. KU, J : Detect temperature of 110 to 125°C.	Rotate the fan	Mute, relay and warning indications is leading hold.	
		HY, F : Detect temperature of 80 to 90°C. KU, J : Detect temperature of 80 to 110°C.	Rotate the fan		Mute off & relay on (normal mode)
		Detect temperature of 70 to 80°C.	Fan is leading hold		
Fan stop	To know that the rotating fan is forcibly stopped	A condition except the above.	Stop the fan	Flashing "FAN STOP" for 3 seconds	If the FAN_DET port becomes "H" within 3 seconds, the unit resets automatically. After the power off, the key input is possible once again.
		Detects when the FAN_DET port becomes "L".	Turns muting on and speaker relay off, then turns off the power after 3 seconds.		

7.1.2 DIAGNOSTICS OF AMPLIFIER SECTION

When DC detection worked (STBY IND. flashes for a long time) in the protection circuit of foregoing section (or there is not the speaker output, probably only 1CH), failure (damage) of the power amplifier section is considered.

Because this receiver cannot diagnose the amplifier section by an electricity state by structure, please diagnose it in the following steps.

Caution:

When release the STBY (flashes) state before repair, Because there is the case that the damage progresses when turns the power on once again, please be careful.

B

- According to a symptom, perform the following confirmation beforehand.
 1. Are not Fuse and IC protector opening it?
 - 2-a. When can turn on electricity, confirm that supply voltage of the point that can measure is appropriate.
 - 2-b. Furthermore, confirm that voltage ((in a no signal) DC and the appropriate signal output) between GND and R4621-4627 (Either of the amplifier side and the speaker terminal side is possible) (Or remove either of CN4601-4604). And limit failure CH.

If was able to limit failure CH, diagnose the CH in the following steps.

C

- Use the tester basically and check that each part is not damaged (resistance value / open / short circuit).

About parts with damaged possibility, explain FL ch to an example in order.


1. R4131, 4132 (ACN7107: 0.1 Ω, 1W chip drain resistor)
IC 4102, 4103
(PBD001A: Nch, PBD002A: Pch output POWER MOS Tr.)
2. R4119 (ACN7111: 0.22 Ω .5W ×2 cement source resistor)
R4117, 4118
(RS1/16S471J: 470 Ω chip resistor for protection circuit)
D4101, 4103
(UDZS10B: 10V Zener diode for current limiting)
D4102, 4104 (1SS355: Small signal diodes same as above)
R4110, 4111 (RS1/16S560J: 56 Ω chip gate resistor)
R4106, 4107
(RS1/16S101J:100 Ω chip IC4101 power filter resistor)
3. IC4101 (PA9009A: Power amplifier with output current bias
Voltage step HIC)
IC4701, 4702
(AEK7023: 200mA IC protector /FAN CONNECTION Assy)
4. Q2231, 2232 (2SC4793,2SA1837 TO-220 Tr. /VH TR Assy)

F


7.1.3 TROUBLE SHOOTING

- When a sound is not out in the surround mode with the digital signal input.
- Suppose CR to be poor contact and that is not damaged.
- This shows failure analysis of DSP Assy.


Step 1


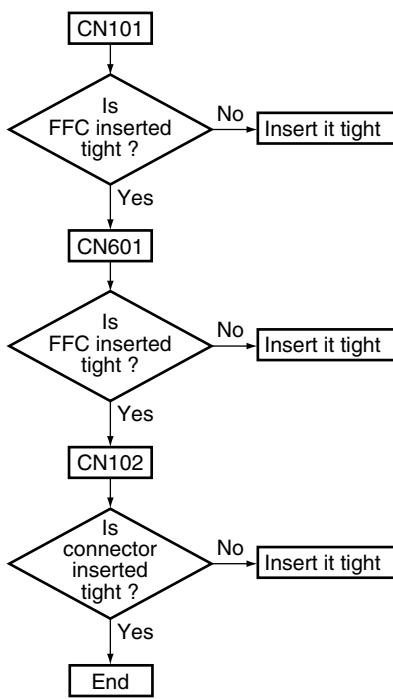



Step 2

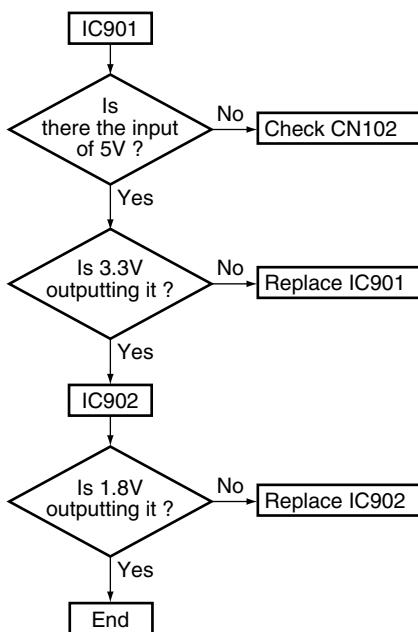


Step 3

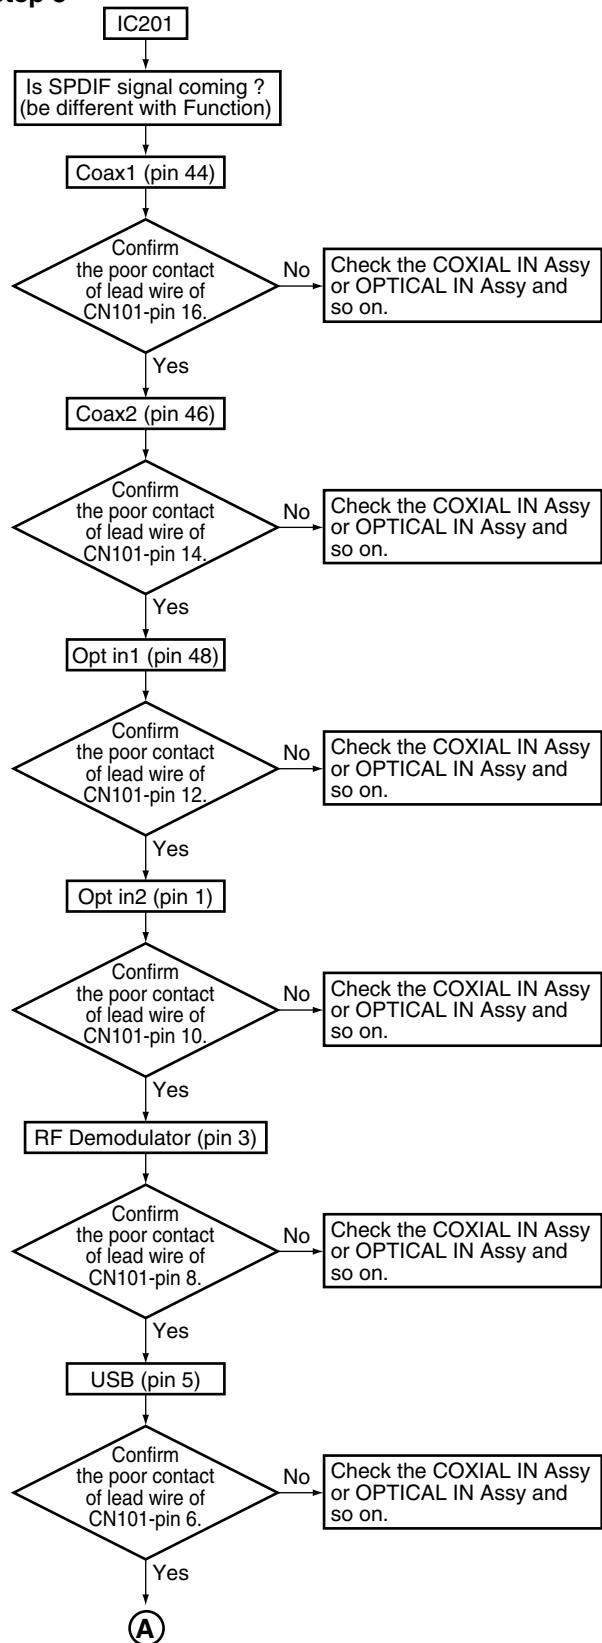

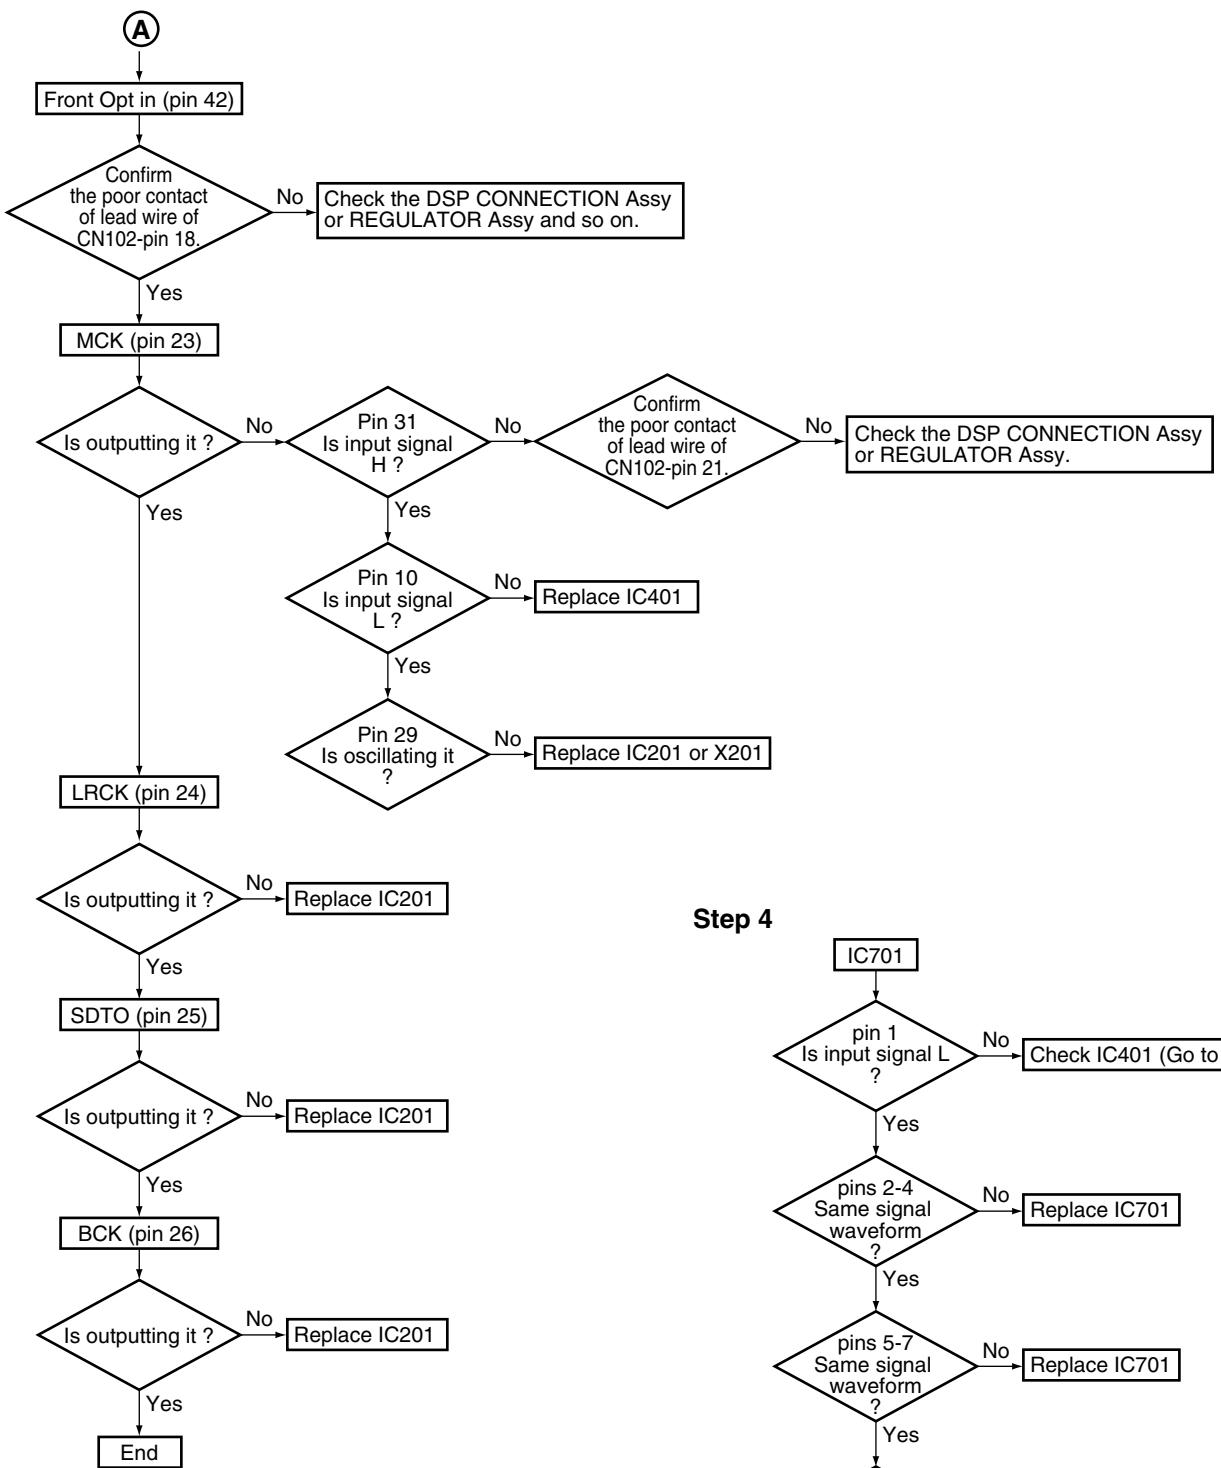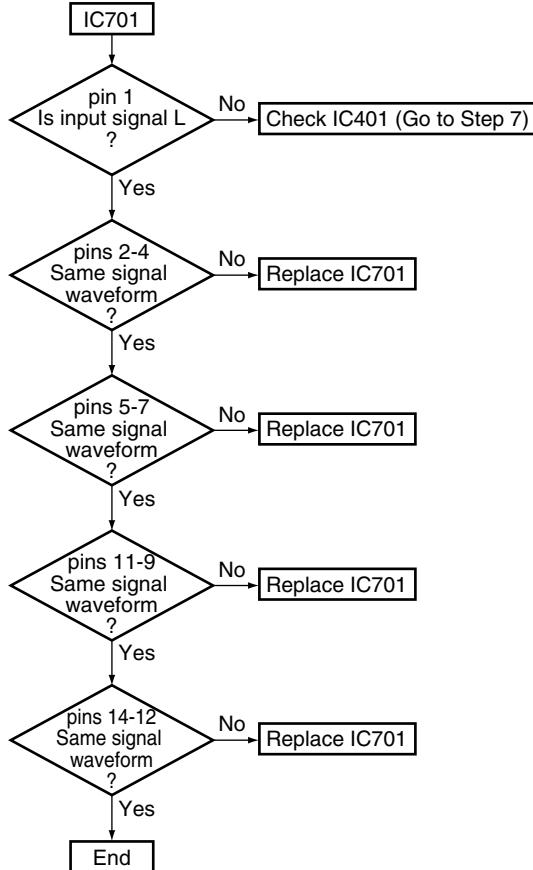**Step 4**

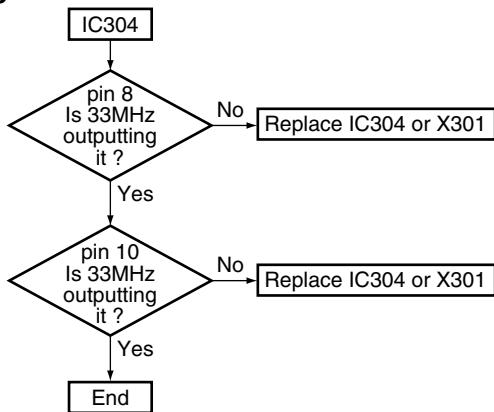Step 5


A

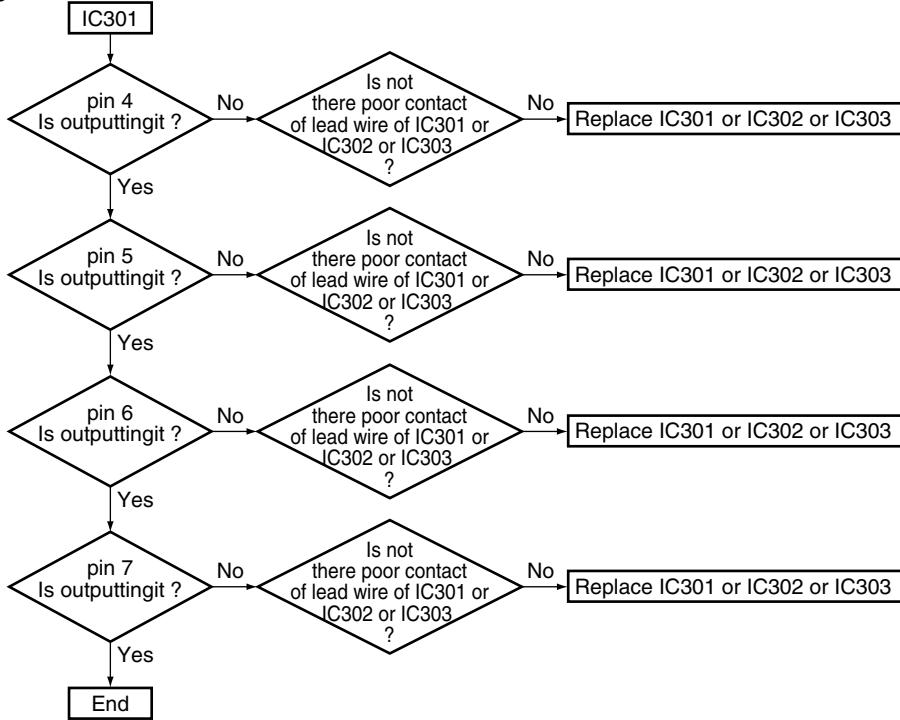Step 6

B



C



D

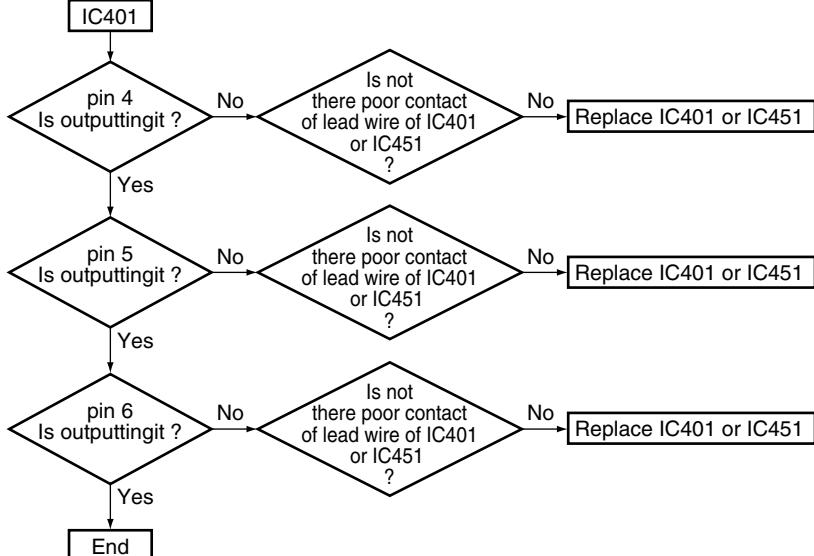Step 7

E

F

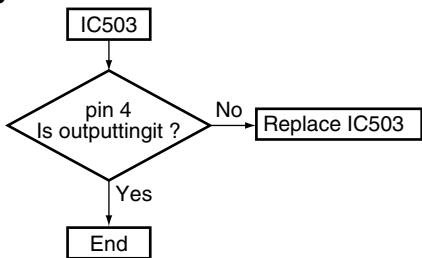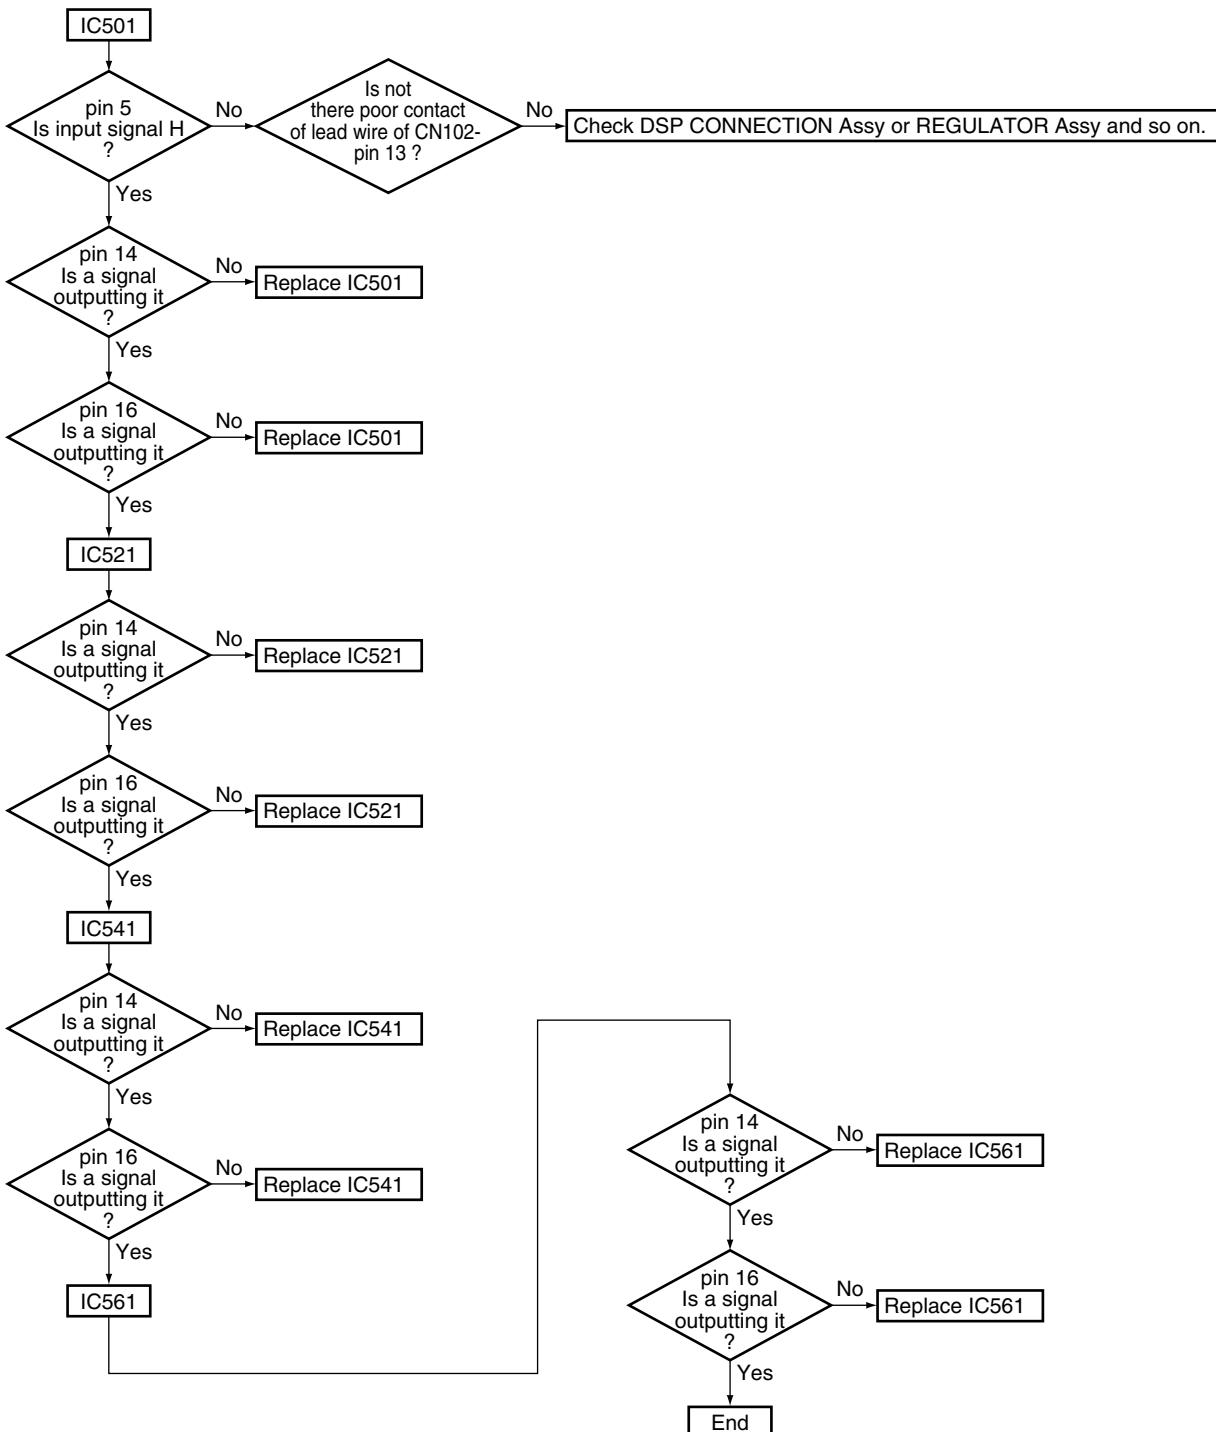Step 8**Step 9**



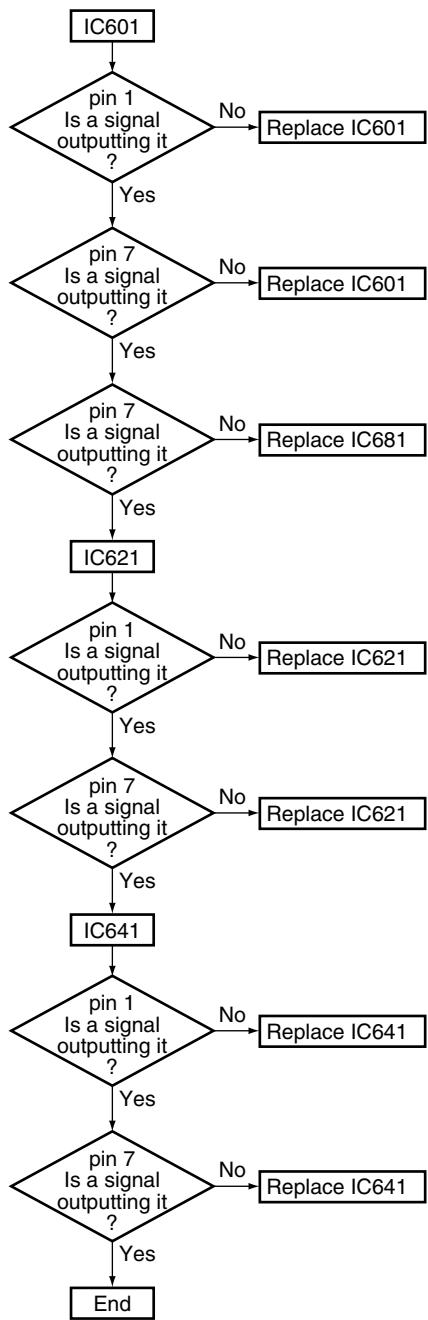
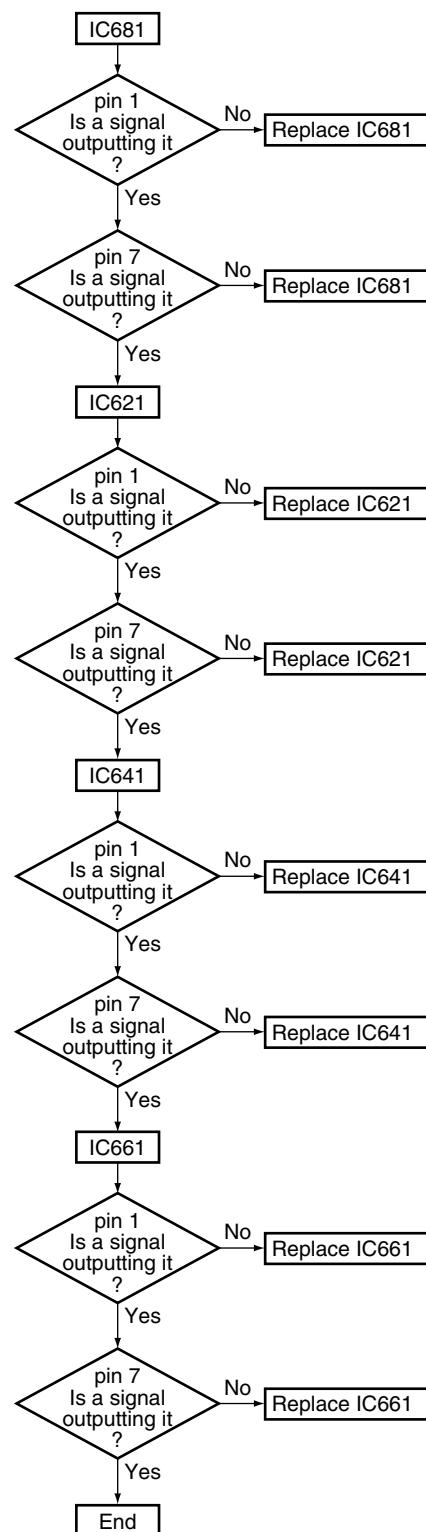
Step 10**Step 11**

7.1.4 DISASSEMBLY

1 Bonnet and Heat Sink Block


- A
 ① Remove the bonnet case (screws × 23)
 ② Remove the heat sink block (screws × 10, connectors × 8)

Note : This photograph shows other models.
 However, the work method is the same.

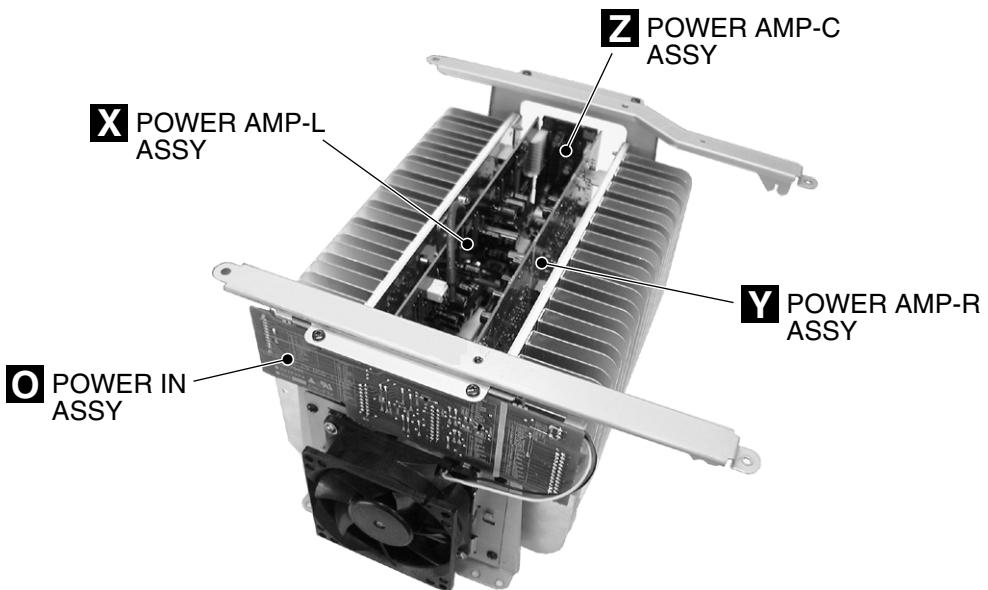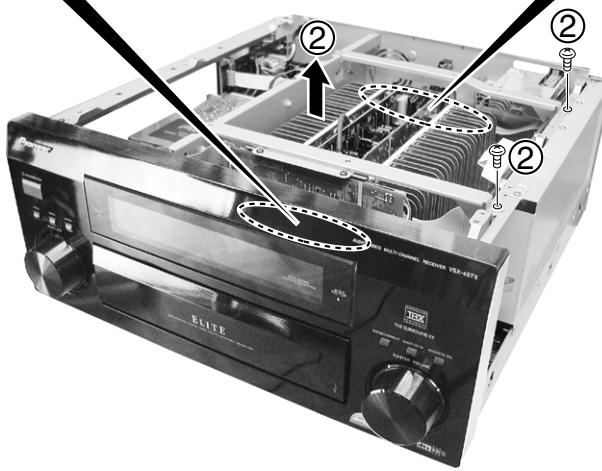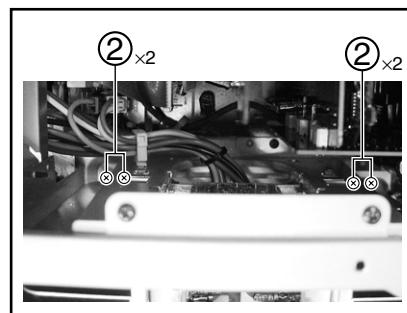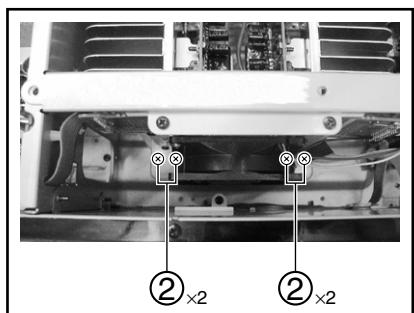


2 DSP Block

- ① Remove the DSP shield 45B (screws × 13)

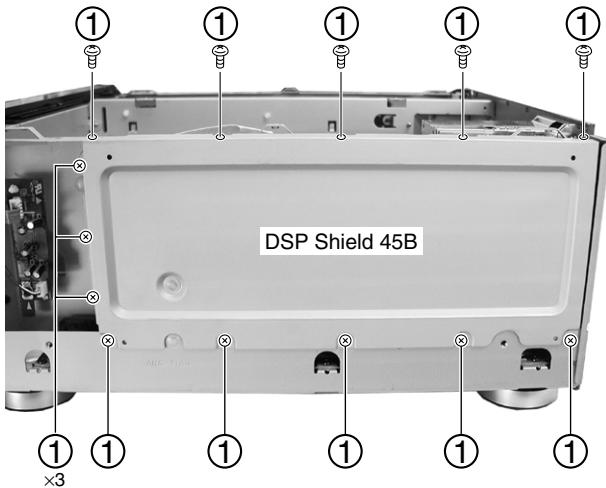


- ② Remove the DSP ASSY
(screws × 4, connectors × 4)


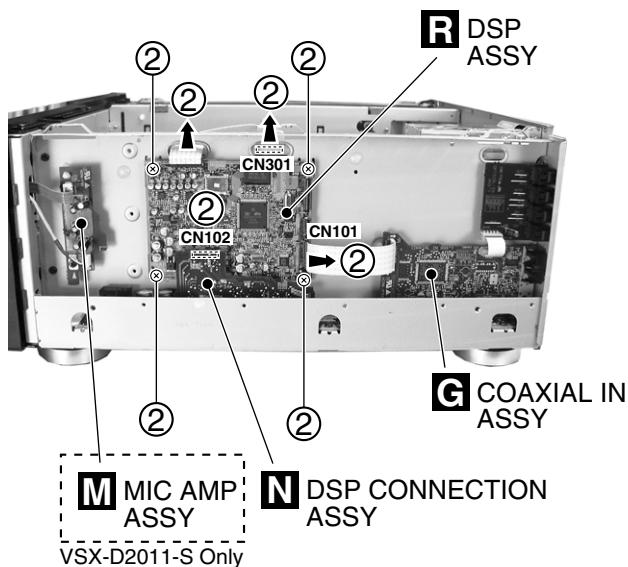


3 Front Panel Block

- ① Remove six screws

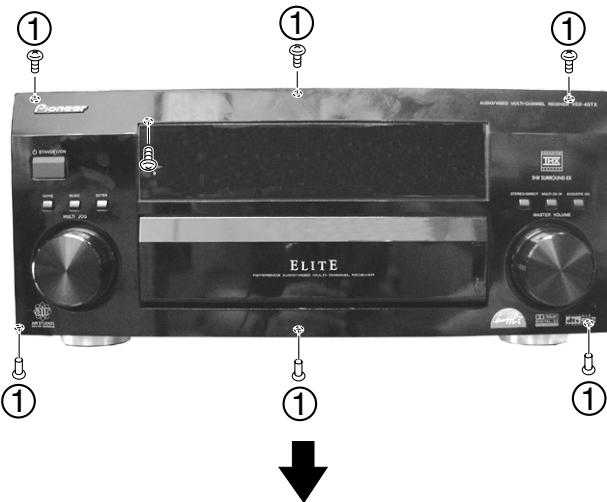


- ② Remove two screws
 - ③ Remove two screws
 - ④ Remove the front panel block

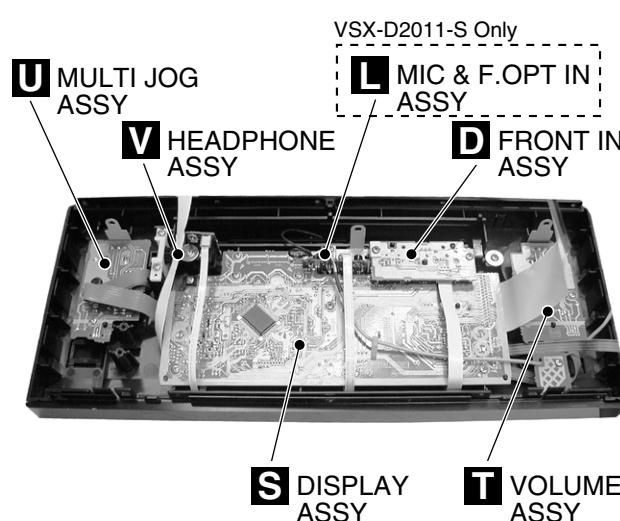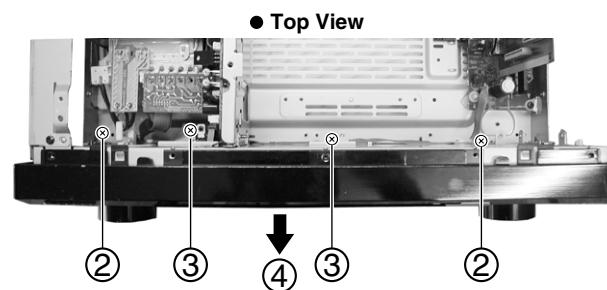


4 Rear Panel Block

① Remove 14 screws

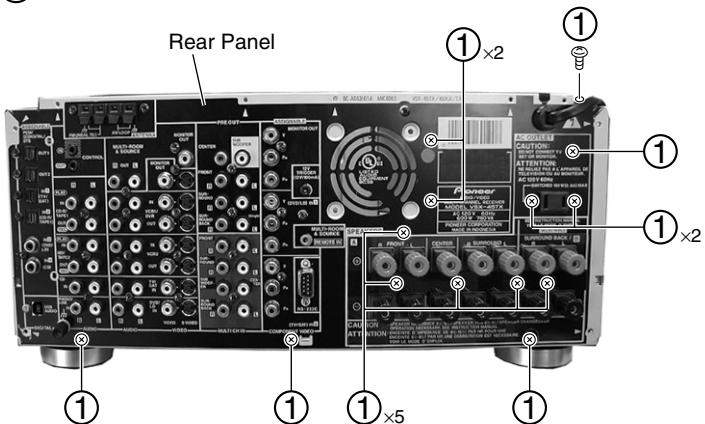

② Remove 13 screws

③ Remove the locking card spacer

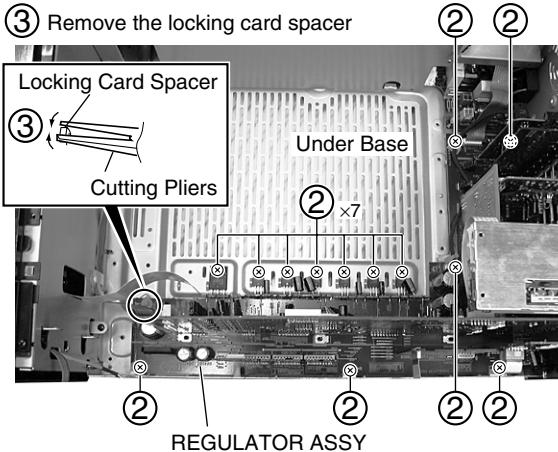

B 7.1 CH I/O ASSY

I COMPONENT ASSY

H VIDEO ASSY

A FM/AM TUNER MODULE


C V-AUDIO IN ASSY

E OPTICAL IN ASSY

G COAXIAL ASSY

N DSP CONNECTION ASSY

F INPUT CONNECT ASSY

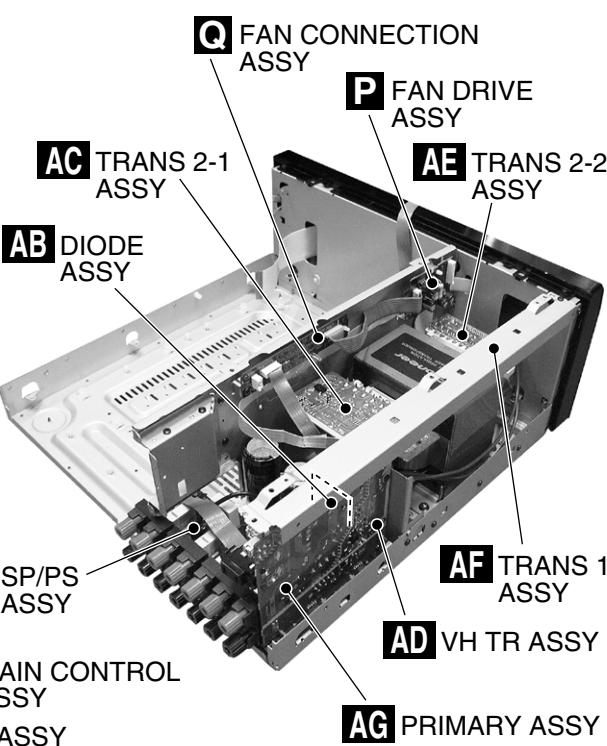

7.2 PARTS

7.2.1 IC

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

● List of IC

PDSPC56367PV150, PD5770C8, PD5771A, BU4094BCF, PCM2902EG

■ DSPC56367PV150 (DSP ASSY: IC301)

- DSP Microcomputer

● Pin Function

No.	Pin Name	I/O	Function
1	SCK1	I	Microcomputer communication clock
2	SS	I	Microcomputer communication chip select
3	HREQ	O	Microcomputer communication request
4	SDO0	O	Digital audio data (Front L/R)
5	SDO1	O	Digital audio data (Surround L/R)
6	SDO2	O	Digital audio data (Center/Subwoofer)
7	SDO3	O	Digital audio data (Front L/R)
8	VCCS	-	Interface power supply (3.3V)
9	GNDS	-	Interface GND
10	SDI1	I	Digital audio data (Front L/R)
11	SDI0	I	Digital audio data (Surround L/R)
12	FST	O	Digital audio LR clock
13	FSR	I	Digital audio LR clock
14	SCKT	O	Digital audio Bit clock
15	SCKR	I	Digital audio Bit clock
16	HCKT	I	Digital audio master clock
17	HCKR	I	Digital audio master clock
18	VCCQL	-	Quiet core power supply (1.8V)
19	GNDQ	-	Quiet GND
20	VCCQH	-	Quiet external power supply (3.3V)
21	HDS	I	Host data strobe
22	HRW	I	Host write data
23	HACK	I	Host acknowledge
24	HOREQ	O	Host request
25	VCCS	-	Interface power supply (3.3V)
26	GNDS	-	Interface GND
27	ADO	O	Digital audio data output
28	ACI	I	Digital audio master clock input
29	TIO0	I	Timer input
30	HCS	I	Host chip select
31	HA9	O	General-purpose port
32	HA8	O	DSP master switch
33	HAS	O	General-purpose port
34	HAD7	O	General-purpose port
35	HAD6	O	General-purpose port
36	HAD5	O	General-purpose port
37	HAD4	O	General-purpose port
38	VCCH	-	Host power supply (3.3V)
39	GNDH	-	Host GND
40	HAD3	O	General-purpose port
41	HAD2	O	General-purpose port
42	HAD1	O	General-purpose port
43	HAD0	O	General-purpose port
44	RESET	I	Reset
45	VCCP	-	PLL power supply (1.8V)
46	PCAP	I	PLL capacitor connection pin
47	GNDP	-	PLL GND
48	SDI0_1	I	Digital audio data (Surroundback L/R)

No.	Pin Name	I/O	Function
49	VCCQH	-	Quiet external power supply (3.3V)
50	FST_1	I	Digital audio LR clock
51	AA2	O	External memory chip select
52	CAS	O	Column address
53	SCKT_1	I	Digital audio Bit clock
54	GNDQ	-	Quiet GND
55	EXTAL	I	External clock input
56	VCCQL	-	Quiet core power supply (1.8V)
57	VCCC	-	Bus control power supply (3.3V)
58	GNDC	-	Bus control GND
59	FSR_1	O	Digital audio LR clock
60	SCKR_1	O	Digital audio Bit clock
61	PINIT	I	PLL initial pin
62	TA	I	Transfer acknowledge
63	BR	O	Bus request
64	BB	I	Bus busy
65	VCCC	-	Bus control power supply (3.3V)
66	GNDC	-	Bus control GND
67	WR	O	External memory read enable
68	RD	O	External memory write enable
69	AA1	O	Address control (Not used)
70	AA0	O	Address control (Not used)
71	BG	O	Bus control
72	A0	O	External memory address
73	A1	O	External memory address
74	VCCA	-	Address bus power supply (3.3V)
75	GNDA	-	Address bus GND
76	A2	O	External memory address
77	A3	O	External memory address
78	A4	O	External memory address
79	A5	O	External memory address
80	VCCA	-	Address bus power supply (3.3V)
81	GNDA	-	Address bus GND
82	A6	O	External memory address
83	A7	O	External memory address
84	A8	O	External memory address
85	A9	O	External memory address
86	VCCA	-	Address bus power supply (3.3V)
87	GNDA	-	Address bus GND
88	A10	O	External memory address
89	A11	O	External memory address
90	GNDQ	-	Quiet GND
91	VCCQL	-	Quiet core power supply (1.8V)
92	A12	O	External memory address
93	A13	O	External memory address
94	A14	O	External memory address
95	VCCQH	-	Quiet external power supply (3.3V)
96	GNDA	-	Address bus GND

No.	Pin Name	I/O	Function
97	A15	O	External memory address
98	A16	O	External memory address
99	A17	O	External memory address
100	D0	I/O	External memory data
101	D1	I/O	External memory data
102	D2	I/O	External memory data
103	VCCD	-	Data bus power supply (3.3V)
104	GNDD	-	Data bus GND
105	D3	I/O	External memory data
106	D4	I/O	External memory data
107	D5	I/O	External memory data
108	D6	I/O	External memory data
109	D7	I/O	External memory data
110	D8	I/O	External memory data
111	VCCD	-	Data bus power supply (3.3V)
112	GNDD	-	Data bus GND
113	D9	I/O	External memory data
114	D10	I/O	External memory data
115	D11	I/O	External memory data
116	D12	I/O	External memory data
117	D13	I/O	External memory data
118	D14	I/O	External memory data
119	VCCD	-	Data bus power supply (3.3V)
120	GNDD	-	Data bus GND
121	D15	I/O	External memory data
122	D16	I/O	External memory data
123	D17	I/O	External memory data
124	D18	I/O	External memory data
125	D19	I/O	External memory data
126	VCCQL	-	Quiet core power supply (1.8V)
127	GNDQ	-	Quiet GND
128	D20	I/O	External memory data
129	VCCD	-	Data bus power supply (3.3V)
130	GNDD	-	Data bus GND
131	D21	I/O	External memory data
132	D22	I/O	External memory data
133	D23	I/O	External memory data
134	MODD	I	Mode select D
135	MODC	I	Mode select C
136	MODB	I	Mode select B
137	MODA	I	Mode select A
138	SDI1_1	I	Digital audio data (Center/Subwoofer)
139	TDO	O	JTAG data output
140	TDI	I	JTAG data input
141	TCK	I	JTAG test clock
142	TMS	I	JTAG mode select
143	MOSI	I	Microcomputer communication data input
144	MISO	O	Microcomputer communication data output

■ DSPC56367PV150 (DSP ASSY: IC401)

- DSP Microcomputer

● Pin Function

No.	Pin Name	I/O	Function
1	SCK1	I	Microcomputer communication clock
2	SS	I	Microcomputer communication chip select
3	HREQ	O	Microcomputer communication request
4	SDO0	O	Digital audio data (Front L/R)
5	SDO1	O	Digital audio data (Surround L/R)
6	SDO2	O	Digital audio data (Center/Subwoofer)
7	SDO3	O	Digital audio data (Front L/R)
8	VCCS	-	Interface power supply (3.3V)
9	GNDS	-	Interface GND
10	SDI1	I	Digital audio data (Front L/R)
11	SDI0	I	Digital audio data (Surround L/R)
12	FST	O	Digital audio LR clock
13	FSR	I	Digital audio LR clock
14	SCKT	O	Digital audio Bit clock
15	SCKR	I	Digital audio Bit clock
16	HCKT	I	Digital audio master clock
17	HCKR	I	Digital audio master clock
18	VCCQL	-	Quiet core power supply (1.8V)
19	GNDQ	-	Quiet GND
20	VCCQH	-	Quiet external power supply (3.3V)
21	HDS	I	Host data strobe
22	HRW	I	Host write data
23	HACK	I	Host acknowledge
24	HOREQ	O	Host request
25	VCCS	-	Interface power supply (3.3V)
26	GNDS	-	Interface GND
27	ADO	O	Digital audio data output
28	ACI	I	Digital audio master clock input
29	TIO0	I	Timer input
30	HCS	I	Host chip select
31	HA9	O	General-purpose port
32	HA8	O	General-purpose port
33	HAS	O	General-purpose port
34	HAD7	O	General-purpose port
35	HAD6	O	General-purpose port
36	HAD5	O	General-purpose port
37	HAD4	O	General-purpose port
38	VCCH	-	Host power supply (3.3V)
39	GNDH	-	Host GND
40	HAD3	O	DVD-A switch
41	HAD2	O	DIR oscillation stop
42	HAD1	O	LSSN mode (LFE addition)
43	HAD0	O	Analog mode
44	RESET	I	Reset
45	VCCP	-	PLL power supply (1.8V)
46	PCAP	I	PLL capacitor connection pin
47	GNDP	-	PLL GND
48	SDI0_1	I	Digital audio data (Surroundback L/R)


No.	Pin Name	I/O	Function
49	VCCQH	-	Quiet external power supply (3.3V)
50	FST_1	I	Digital audio LR clock
51	AA2	O	External memory chip select
52	CAS	O	Column address
53	SCKT_1	I	Digital audio Bit clock
54	GNDQ	-	Quiet GND
55	EXTAL	I	External clock input
56	VCCQL	-	Quiet core power supply (1.8V)
57	VCCC	-	Bass control power supply (3.3V)
58	GNDC	-	Bass control GND
59	FSR_1	O	Digital audio LR clock
60	SCKR_1	O	Digital audio Bit clock
61	PINIT	I	PLL initial pin
62	TA	I	Transfer acknowledge
63	BR	O	Bus request
64	BB	I	Bus busy
65	VCCC	-	Bus control power supply (3.3V)
66	GNDC	-	Bus control GND
67	WR	O	External memory read enable
68	RD	O	External memory write enable
69	AA1	O	Address control (Not used)
70	AA0	O	Address control (Not used)
71	BG	O	Bus control
72	A0	O	External memory address
73	A1	O	External memory address
74	VCCA	-	Address bus power supply (3.3V)
75	GNDA	-	Address bus GND
76	A2	O	External memory address
77	A3	O	External memory address
78	A4	O	External memory address
79	A5	O	External memory address
80	VCCA	-	Address bus power supply (3.3V)
81	GNDA	-	Address bus GND
82	A6	O	External memory address
83	A7	O	External memory address
84	A8	O	External memory address
85	A9	O	External memory address
86	VCCA	-	Address bus power supply (3.3V)
87	GNDA	-	Address bus GND
88	A10	O	External memory address
89	A11	O	External memory address
90	GNDQ	-	Quiet GND
91	VCCQL	-	Quiet core power supply (1.8V)
92	A12	O	External memory address
93	A13	O	External memory address
94	A14	O	External memory address
95	VCCQH	-	Quiet external power supply (3.3V)
96	GNDA	-	Address bus GND

No.	Pin Name	I/O	Function
97	A15	O	External memory address
98	A16	O	External memory address
99	A17	O	External memory address
100	D0	I/O	External memory data
101	D1	I/O	External memory data
102	D2	I/O	External memory data
103	VCCD	-	Data bus power supply (3.3V)
104	GNDD	-	Data bus GND
105	D3	I/O	External memory data
106	D4	I/O	External memory data
107	D5	I/O	External memory data
108	D6	I/O	External memory data
109	D7	I/O	External memory data
110	D8	I/O	External memory data
111	VCCD	-	Data bus power supply (3.3V)
112	GNDD	-	Data bus GND
113	D9	I/O	External memory data
114	D10	I/O	External memory data
115	D11	I/O	External memory data
116	D12	I/O	External memory data
117	D13	I/O	External memory data
118	D14	I/O	External memory data
119	VCCD	-	Data bus power supply (3.3V)
120	GNDD	-	Data bus GND
121	D15	I/O	External memory data
122	D16	I/O	External memory data
123	D17	I/O	External memory data
124	D18	I/O	External memory data
125	D19	I/O	External memory data
126	VCCQL	-	Quiet core power supply (1.8V)
127	GNDQ	-	Quiet GND
128	D20	I/O	External memory data
129	VCCD	-	Data bus power supply (3.3V)
130	GNDD	-	Data bus GND
131	D21	I/O	External memory data
132	D22	I/O	External memory data
133	D23	I/O	External memory data
134	MODD	I	Mode select D
135	MODC	I	Mode select C
136	MODB	I	Mode select B
137	MODA	I	Mode select A
138	SDI1_1	I	Digital audio data (Center/Subwoofer)
139	TDO	O	JTAG data output
140	TDI	I	JTAG data input
141	TCK	I	JTAG test clock
142	TMS	I	JTAG mode select
143	MOSI	I	Microcomputer communication data input
144	MISO	O	Microcomputer communication data output

■ PD5770C8 (MAIN CONTROL ASSY: IC501)

- Main Microcomputer

- Pin Assignment (Top view)

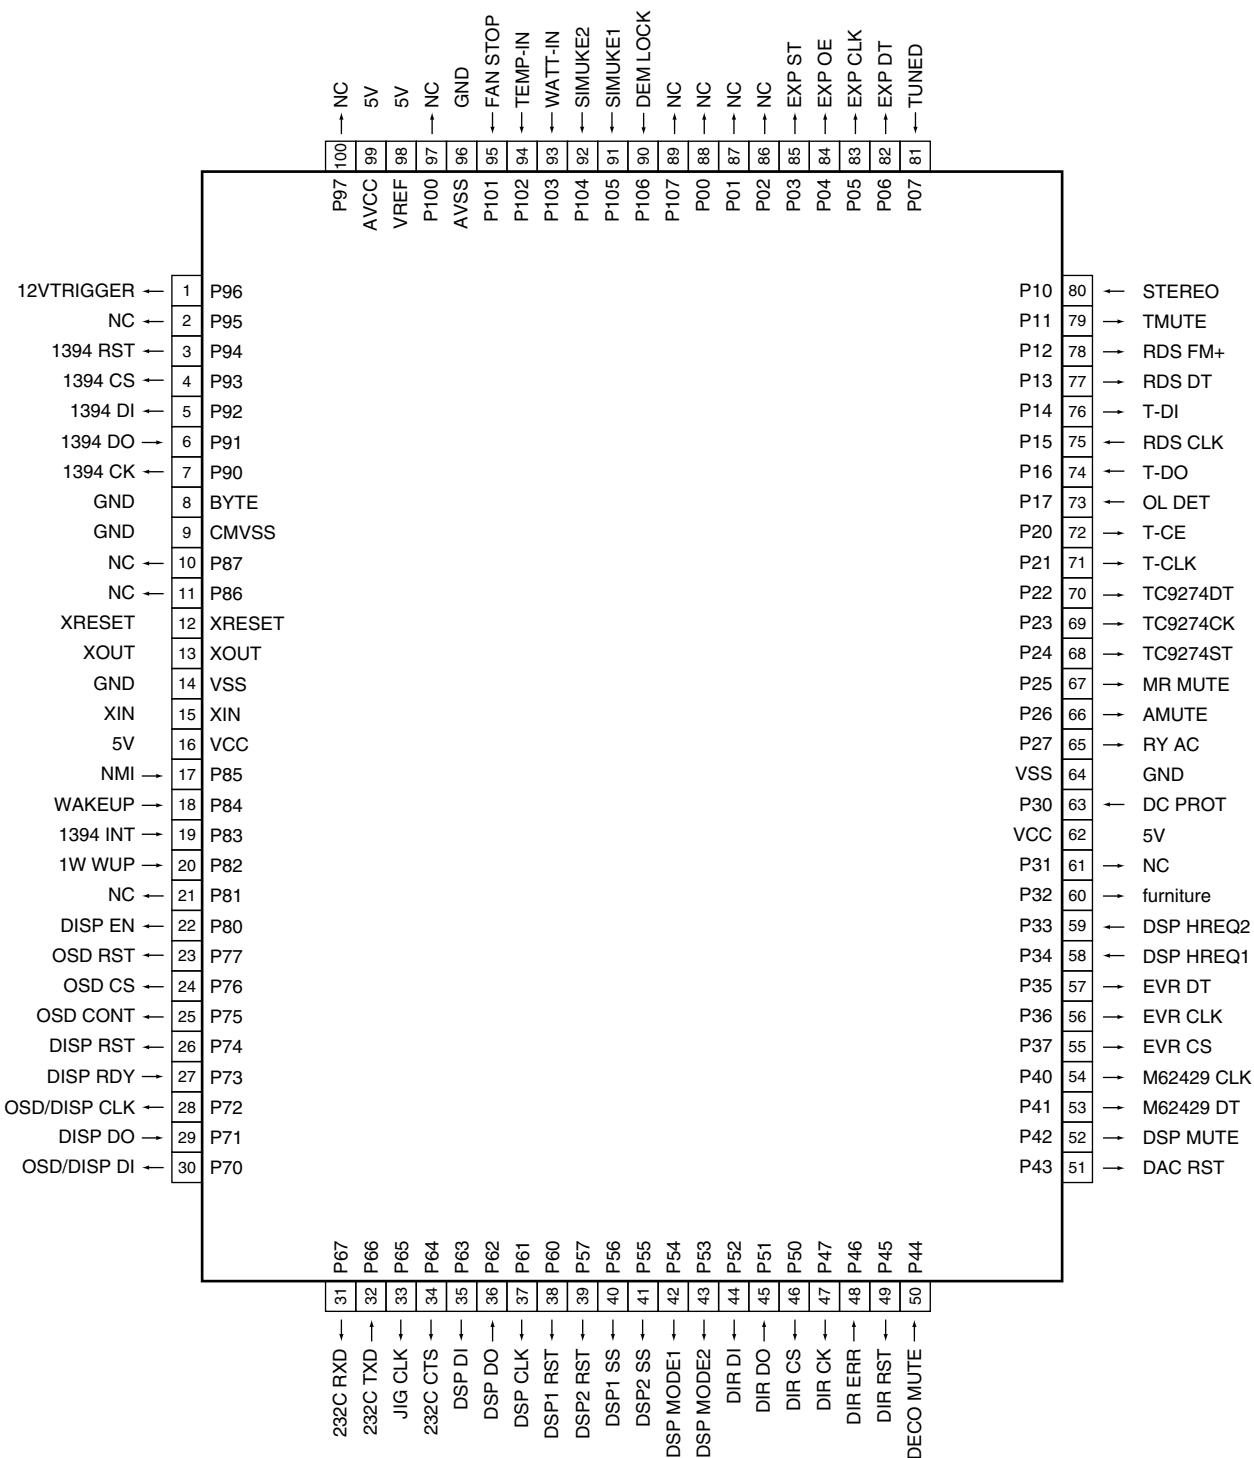

● Pin Function


No.	Pin Name	I/O	Pin Function	Active
1	12VTRIGGER	O	"H" at O	
2	-	O	NC "L" fixed.	
3	1394 RST	O	Standby for 1394 (Not used) "L" fixed.	
4	1394 CS	O	Standby for 1394 (Not used) "L" fixed.	
5	1394 DI	O	Standby for 1394 (Not used) "L" fixed.	
6	1394 DO	I	Standby for 1394 (Not used) Standby with the circuit.	
7	1394 CK	O	Standby for 1394 (Not used) "L" fixed.	
8	GND	-	Ground	
9	CNVSS	-	5.1kΩ pulldown	
10	-	O	L" fixed	
11	-	O	L" fixed	
12	XRESET	-	Reset	
13	XOUT	-	Oscillator	
14	GND	-	Ground	
15	XIN	-	Oscillator	
16	5V	-	5V power supply	
17	NMI	I	Cannot use it as usual input port (100kΩ pullup)	
18	WAKEUP	I	Wakeup	H
19	1394 INT	I	Standby for 1394 (Not used) Standby with the circuit.	
20	1W WUP	I	Wakeup signal at standby (from the display microcomputer) (pulldown)	H
21	-	O	L" fixed	
22	DISP EN	O	Communication enabling signal to the display microcomputer	H
23	OSD RST	O	OSD-IC reset signal L: reset, H: release reset	
24	OSD CS	O	OSD-IC chip select signal	H
25	OSD CONT.	O	At data transfer to the OSD-IC: "H"	
26	DISP RST	O	Display microcomputer reset signal L: reset, H: release reset (pulldown)	
27	DISP RDY	I	Communication enabling signal from the display microcomputer	H
28	OSD/DISP CLK	O	Communication clock signal with the OSD-IC/display microcomputer	
29	DISP DO	I	Communication data in signal with the display microcomputer (N ch open drain)	
30	OSD/DISP DI	O	Communication data out signal with the OSD-IC/display microcomputer (N ch open drain: pullup)	
31	232C RXD	O	For 232C rewriting (data output)	
32	232C TXD	I	For 232C rewriting (data input)	
33	CLK	O	Not used	
34	232C CTS	O	For 232C rewriting (communication enabling)	
35	DSP DI	O	Communication data out signal with the DSP1 microcomputer	
36	DSP DO	I	Communication data in signal with the DSP2 microcomputer	
37	DSP CLK	O	Communication clock signal with the DSP microcomputer	
38	DSP1 RST	O	DSP1 microcomputer reset signal L: reset, H: release reset	
39	DSP2 RST	O	DSP2 microcomputer reset signal L: reset, H: release reset	
40	DSP1 SS	O	Slave select signal to DSP1 microcomputer	L
41	DSP2 SS	O	Slave select signal to DSP2 microcomputer	L
42	DSP MODE1	O	Mode selection of DSP1 microcomputer (ROM/RAM) H: ROM mode, L: RAM (PPP) mode	H
43	DSP MODE2	O	Mode selection of DSP2 microcomputer (ROM/RAM) H: ROM mode, L: RAM (PPP) mode	H
44	DIR DI	O	Communication data out signal with the DIR	
45	DIR DO	I	Communication data in signal with the DIR/DAC	
46	DIR CS	O	Communication chip select signal with the DIR/DAC	
47	DIR CK	O	Communication clock signal with the DIR/DAC	
48	DIR ERR	I	Lock/Unlock signal	
49	DIR RST	O	DIR reset signal	
50	DECO MUTE	I	Boot success detecting port of 1st DSP	

No.	Pin Name	I/O	Pin Function	Active
51	DAC RST	O	DAC/AD reset	
52	DSP MUTE	O	DSP Assy mute	H
53	M62429 DT	O	Data signal for multi room volume IC control	
54	M62429 CLK	O	Clock signal for multi room volume IC control	
55	EVR CS	O	Chip select signal for electronic volume	
56	EVR CLK	O	Clock signal for electronic volume	
57	EVR DT	O	Data signal for electronic volume	
58	DSP HREQ1	I	Error detection signal of DSP1 microcomputer	
59	DSP HREQ2	I	Error detection signal of DSP2 microcomputer	
60	furniture	O	Furniture control signal	
61	-	O	L" fixed	
62	5V	-	5V power supply	
63	DC PROT	I	DC detection L: Detection	L
64	GND	-	Ground	
65	RC-AC	O	AC relay ON/OFF	H
66	AMUTE	O	System mute L: Mute ON	L
67	MRMUTE	O	Multi room mute L: Mute ON	L
68	tc9274f-st	O	Function SW control (STEREO)	
69	tc9274f-ck	O	Function SW control (CLOCK)	
70	tc9274f-dt	O	Function SW control (DATA)	
71	TUNER CLK	O	Clock signal of tuner control	
72	TUNER CE	O	Chip select signal of tuner control	
73	OL DET	I	Amp. overload detection L: Detection	L
74	TUNER DO	I	Data input signal of tuner control (pullup)	
75	RDS CLK	O	L" fixed	
76	TUNER DI	I	Data output signal of tuner control	
77	RDS DT	O	L" fixed	
78	RDS FM+	O	L" fixed	
79	TMUTE	O	Tuner mute	H
80	STEREO	I	L: STEREO (pullup)	L
81	TUNED	I	L: TUNED (pullup)	L
82	EXP DT	O	Data signal of expansion IC control	
83	EXP CLK	O	Clock signal of expansion IC control	
84	EXP OE	O	Output enable signal of expansion IC control	
85	EXP ST	O	Chip clock signal of expansion IC control	
86	-	O	NC	
87	-	O	NC	
88	-	O	NC	
89	-	O	NC	
90	DEM LOCK	I	Not used	
91	SIMUKE1	I	Destination read 1	
92	SIMUKE2	I	Destination read 2	
93	WATT-IN	I	Wattage detection Level detection with AD	A/D
94	TEMP-IN	I	Temperature detection Level detection with AD	A/D
95	FAN STOP	I	Fan forced stop detection	H
96	AVSS	-	Connect to VSS	
97	-	O	NC	L
98	VREF	-	Connect to VCC	
99	AVCC	-	Connect to VCC	
100	-	O	NC	

■ PD5771A (DISPLAY ASSY: IC3000)

- Display Microcomputer

● Pin Assignment (Top view)

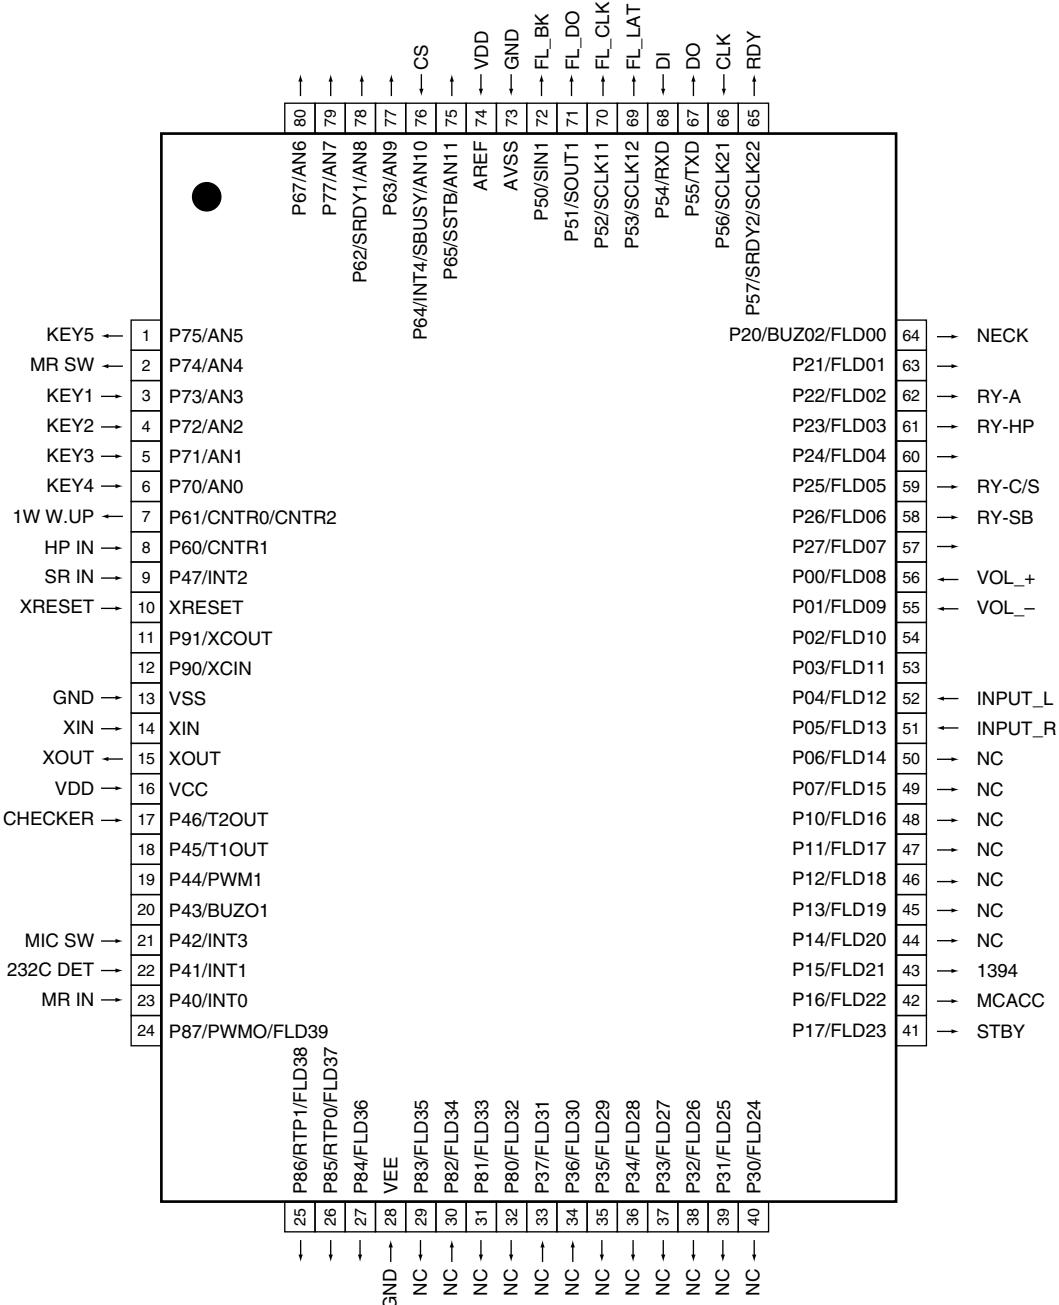

● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	KEY5	I	KEY AD input	41	STANDBY	O	Standby LED
2	MR SW	O	Multi room input Pioneer/others L: Pioneer	42	MCACC	O	MCACC LED
3	KEY1	I	KEY AD input	43	1394	O	1394 LED
4	KEY2			44	NC	O	Non connection
5	KEY3			45	NC		
6	KEY4			46	NC		
7	1W WUP	O	1W correspondence main wakeup	47	NC	O	Non connection
8	HP	I	Headphone detection (active: H)	48	NC		
9	SR IN	I	Remote control input of main room	49	NC		
10	RESET	-	Reset input from the main microcomputer	50	NC		
11	NC	O	Non connection	51	INPUT_R	I	Input selector RIGHT
12	NC			52	INPUT_L	I	Input selector LEFT
13	Vss	-	Ground	53	NC	O	Non connection
14	XIN	-	Oscillator	54	NC	O	Non connection
15	XOUT	-	Oscillator	55	VOL_-	I	Volume -
16	Vcc	-	Power supply 5V	56	VOL_+	I	Volume +
17	CHECKER	I	Checker mode detection (10kΩ pulldown)	57	NC	O	Non connection
18	NC	O	Non connection	58	RY-SB	O	Surround back/SP-B relay ON/OFF (active: H)
19	NC			59	RY-C/S	O	C/S relay ON/OFF (active: H)
20	NC			60	NC	O	Non connection
21	MIC SW	I	MIC detection	61	RY-HP	O	Headphone relay ON/OFF (active: H)
22	232C DET	I	232C signal input detection	62	RY-A	O	Speaker A relay ON/OFF (active: H)
23	MR IN	I	Remote control input of sub room (active: H)	63	NC	O	Non connection
24	NC	O	Non connection	64	NECK	O	6/8Ω switch L: 6Ω, H: 8Ω, Initial: 8Ω
25	NC	O	Non connection	65	RDY	O	Communication ready with main UCOM
26	NC			66	CLK	O	Communication clock with main UCOM
27	NC			67	DO	O	Communication data out with main UCOM
28	VEE	-	Ground	68	DI	I	Communication data in with main UCOM
29	NC	O	Non connection	69	FL_LAT	O	FL DRV LAT
30	NC			70	FL_CLK	O	FL DRV CLK
31	NC			71	FL_DO	O	FL DRV DATA
32	NC			72	FL_BK	O	FL DRV BK
33	NC			73	AVSS	-	Ground
34	NC			74	VREF	-	5V reference voltage
35	NC			75	NC	O	Non connection
36	NC			76	CS	I	Communication CS with main UCOM
37	NC			77	NC	O	Non connection
38	NC			78	NC		
39	NC			79	NC		
40	NC			80	NC		

■ BU4094BCF (MAIN CONTROL ASSY: IC502)

- Expansion IC

A ● Pin Function

No.	Pin Name	Pin Function	Active
1	DEM_STP	Demodulator oscillation OFF/ON	H
2	DEM_RST	Demodulator reset L: RESET	L
3	NJM2279_SW1	NJM2279 video control of sub room system	
4	NJM2279_SW2		H
5	NJM2596_SW2	NJM2596 video control of main system	H
6	NJM2596_SW3		H
7	NJM2596_SW4		H
8	NJM2596_SW5		

B

■ BU4094BCF (MAIN CONTROL ASSY: IC503)

- Expansion IC

C ● Pin Function

No.	Pin Name	Pin Function	Active
1	OSD ON	ON at OSD on	H
2	TC9215_C34	Switch the DSP/DIRECT/MULTI CH IN of surround signal H: Multi ch input path	
3	PHONO GAIN	"H" at PHONO equalizer ON	H
4	DSDM	For SACD "L" fixed	
5	TC74HC4053_INH	Select the Component/D4 input (2 inputs → 1 output)	
6	TC74HC4053_A		
7	FAN DRIVE	ON when rotates the FAN	H
8	LOFAN	Not used "H" fixed	

D


E

F

PCM2902EG (COAXIAL IN ASSY: IC1681)

- USB Codec IC

Pin Assignment (Top view)

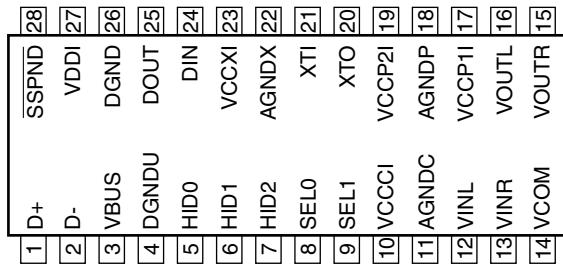

Pin Function

No.	Pin Name	I/O	Pin Function
1	D+	I/O	USB differential input/output plus(1)
2	D-	I/O	USB differential input/output minus(1)
3	VBUS	I	Connect to USB power (VBUS)
4	DGNDU	-	Digital ground for USB transceiver
5	HID0	I	HID key state input (mute), active high(3)
6	HID1	I	HID key state input (volume up), active high(3)
7	HID2	I	HID key state input (volume down), active high(3)
8	SEL0	I	Must be set to high(6)
9	SEL1	I	Must be set to high(6)
10	VCCCI	-	Internal analog power supply for codec(4)
11	AGNDC	-	Analog ground for codec
12	VINL	I	ADC analog input for L-channel
13	VINR	I	ADC analog input for R-channel
14	VCOM	-	Common for ADC/DAC (VCCCI/2) (4)
15	VOUTR	O	DAC Analog output for R-channel
16	VOUTL	O	DAC analog output for L-channel
17	VCCP1I	-	Internal analog power supply for PLL(4)
18	AGNDP	-	Analog ground for PLL
19	VCCP2I	-	Internal analog power supply for PLL(4)
20	XTO	O	Crystal oscillator output
21	XTI	I	Crystal oscillator input(2)
22	AGNDX	-	Analog ground for oscillator
23	VCCXI	-	Internal analog power supply for oscillator(4)
24	DIN	I	S/PDIF input(5)
25	DOUT	O	S/PDIF output
26	DGND	-	Digital ground
27	VDDI	-	Internal digital power supply(4)
28	SSPND	O	Suspend flag, active low (Low: suspend, High: operational)

(1) LV-TTL level

(2) 3.3-V CMOS level input


(3) 3.3-V CMOS level input with internal pulldown. This pin informs the PC of serviceable control signals such as mute, volume up, or volume down, which has no connection with the internal DAC or ADC directly. See the volume control and mute control section.

(4) Connect a decouple capacitor to GND

(5) 3.3-V CMOS level input with internal pulldown, 5 V tolerant

(6) TTL Schmitt trigger, 5 V tolerant

● Flow of USB Input Data

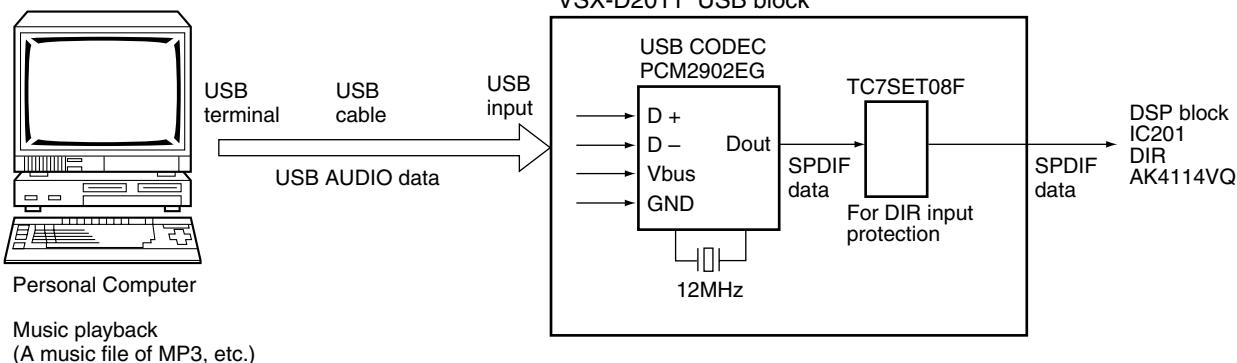


7.2.2 DISPLAY

■ AAV7087 (DISPLAY ASSY : V3000)

- FL DISPLAY

- Pin Assignment

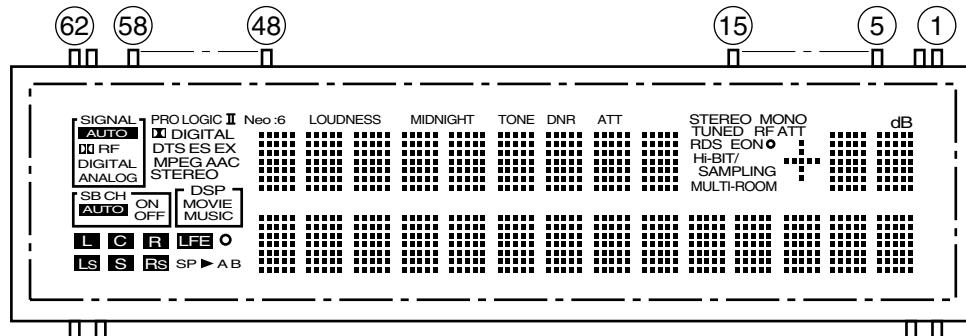


- Pin Connection



Pin No.	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47-3	2	1
Connection	F2	F2	NP	NP	GND	GND	NC	VH	NC	VDD	BK	LAT	CLK	SI	SO	NP	F1	F1

NOTE 1) F1, F2..... Filament 6) VDD..... Logic Voltage Supply pin 10) CLK..... Shift Register Clock
 2) NP..... No pin (5-15 cut it by 2mm) 7) NC..... No connection 11) SI..... Serial Data Input
 3) DL..... Datum Line (NC pin should be electrically open on the PC board) 12) SO..... Serial Data Output
 4) GND..... GND pin 8) BK..... Driver Output Blanking (to be open, if don't use)
 5) VH..... High Voltage Supply pin 9) LAT..... Latch Control Input 13) Field of vision is a minimum of 21° from the lower side.

- Grid Assignment

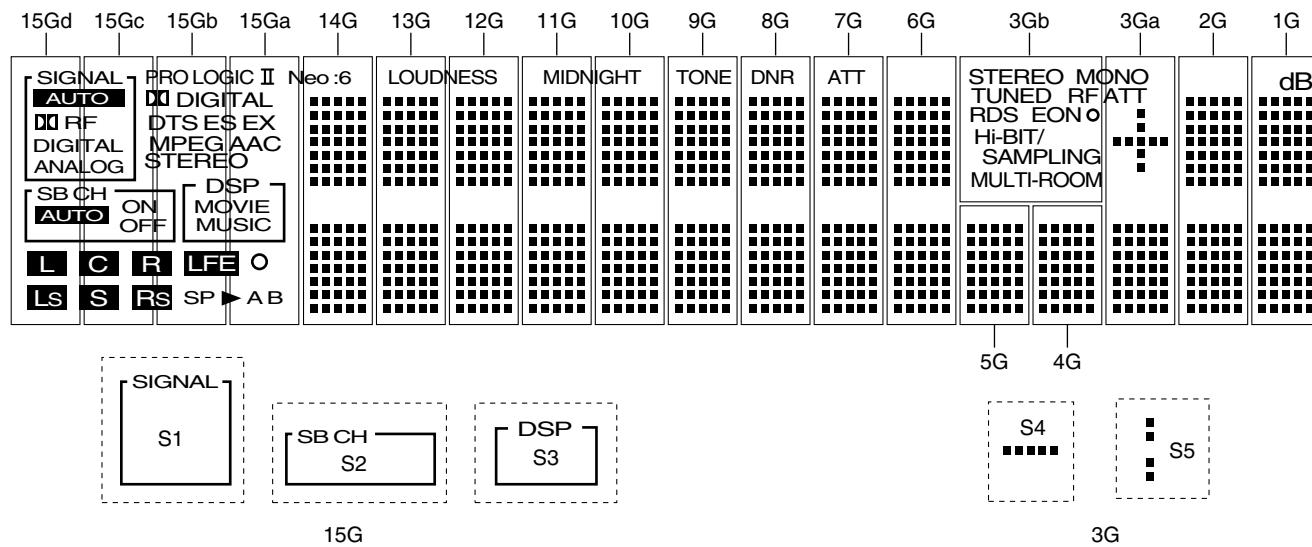

- Segment Designation

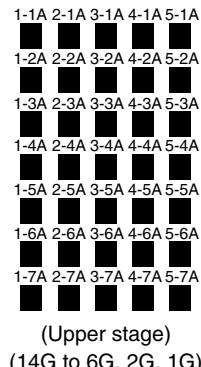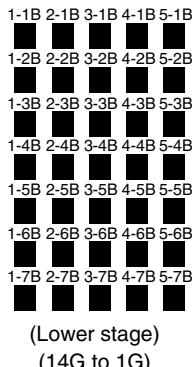

• Anode Connection

	15Gd-15Ga	14G	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3Gb, 3Ga	2G	1G
P1	Neo:6		LOUDNESS	MIDNIGHT	TONE	DNR	ATT	—	—	—	—	STEREO	—	—	dB
P2	PROLOGIC	1-1A	1-1A	1-1A	1-1A	1-1A	1-1A	1-1A	1-1A	—	—	MONO	1-1A	1-1A	
P3	II	2-1A	2-1A	2-1A	2-1A	2-1A	2-1A	2-1A	2-1A	—	—	TUNED	2-1A	2-1A	
P4	S1	3-1A	3-1A	3-1A	3-1A	3-1A	3-1A	3-1A	3-1A	—	—	RF ATT	3-1A	3-1A	
P5	AUTO	4-1A	4-1A	4-1A	4-1A	4-1A	4-1A	4-1A	4-1A	—	—	RDS	4-1A	4-1A	
P6	RF	5-1A	5-1A	5-1A	5-1A	5-1A	5-1A	5-1A	5-1A	—	—	EON	5-1A	5-1A	
P7	DIGITAL	1-2A	1-2A	1-2A	1-2A	1-2A	1-2A	1-2A	1-2A	—	—	○	1-2A	1-2A	
P8	ANALOG	2-2A	2-2A	2-2A	2-2A	2-2A	2-2A	2-2A	2-2A	—	—	HI-BIT/ SAMPLING	2-2A	2-2A	
P9	DIGITAL	3-2A	3-2A	3-2A	3-2A	3-2A	3-2A	3-2A	3-2A	—	—	S4	3-2A	3-2A	
P10	DTS	4-2A	4-2A	4-2A	4-2A	4-2A	4-2A	4-2A	4-2A	—	—	S5	4-2A	4-2A	
P11	ES	5-2A	5-2A	5-2A	5-2A	5-2A	5-2A	5-2A	5-2A	—	—	—	5-2A	5-2A	
P12	EX	1-3A	1-3A	1-3A	1-3A	1-3A	1-3A	1-3A	1-3A	—	—	—	1-3A	1-3A	
P13	MPEG	2-3A	2-3A	2-3A	2-3A	2-3A	2-3A	2-3A	2-3A	—	—	—	2-3A	2-3A	
P14	AAC	3-3A	3-3A	3-3A	3-3A	3-3A	3-3A	3-3A	3-3A	—	—	—	3-3A	3-3A	
P15	STEREO	4-3A	4-3A	4-3A	4-3A	4-3A	4-3A	4-3A	4-3A	—	—	—	4-3A	4-3A	
P16	S2	5-3A	5-3A	5-3A	5-3A	5-3A	5-3A	5-3A	5-3A	—	—	—	5-3A	5-3A	
P17	AUTO	1-4A	1-4A	1-4A	1-4A	1-4A	1-4A	1-4A	1-4A	—	—	—	1-4A	1-4A	
P18	ON	2-4A	2-4A	2-4A	2-4A	2-4A	2-4A	2-4A	2-4A	—	—	—	2-4A	2-4A	
P19	OFF	3-4A	3-4A	3-4A	3-4A	3-4A	3-4A	3-4A	3-4A	—	—	—	3-4A	3-4A	
P20	S3	4-4A	4-4A	4-4A	4-4A	4-4A	4-4A	4-4A	4-4A	—	—	—	4-4A	4-4A	
P21	MOVIE	5-4A	5-4A	5-4A	5-4A	5-4A	5-4A	5-4A	5-4A	—	—	—	5-4A	5-4A	
P22	MUSIC	1-5A	1-5A	1-5A	1-5A	1-5A	1-5A	1-5A	1-5A	—	—	—	1-5A	1-5A	
P23	L	2-5A	2-5A	2-5A	2-5A	2-5A	2-5A	2-5A	2-5A	—	—	—	2-5A	2-5A	
P24	C	3-5A	3-5A	3-5A	3-5A	3-5A	3-5A	3-5A	3-5A	—	—	—	3-5A	3-5A	
P25	R	4-5A	4-5A	4-5A	4-5A	4-5A	4-5A	4-5A	4-5A	—	—	—	4-5A	4-5A	
P26	LS	5-5A	5-5A	5-5A	5-5A	5-5A	5-5A	5-5A	5-5A	—	—	—	5-5A	5-5A	
P27	S	1-6A	1-6A	1-6A	1-6A	1-6A	1-6A	1-6A	1-6A	—	—	—	1-6A	1-6A	
P28	RS	2-6A	2-6A	2-6A	2-6A	2-6A	2-6A	2-6A	2-6A	—	—	—	2-6A	2-6A	
P29	LFE	3-6A	3-6A	3-6A	3-6A	3-6A	3-6A	3-6A	3-6A	—	—	—	3-6A	3-6A	
P30	○	4-6A	4-6A	4-6A	4-6A	4-6A	4-6A	4-6A	4-6A	—	—	—	4-6A	4-6A	
P31	SP ►	5-6A	5-6A	5-6A	5-6A	5-6A	5-6A	5-6A	5-6A	—	—	—	5-6A	5-6A	
P32	A	1-7A	1-7A	1-7A	1-7A	1-7A	1-7A	1-7A	1-7A	—	—	—	1-7A	1-7A	
P33	B	2-7A	2-7A	2-7A	2-7A	2-7A	2-7A	2-7A	2-7A	—	—	—	2-7A	2-7A	
P34	—	3-7A	3-7A	3-7A	3-7A	3-7A	3-7A	3-7A	3-7A	—	—	—	3-7A	3-7A	
P35	—	4-7A	4-7A	4-7A	4-7A	4-7A	4-7A	4-7A	4-7A	—	—	—	4-7A	4-7A	
P36	—	5-7A	5-7A	5-7A	5-7A	5-7A	5-7A	5-7A	5-7A	—	—	—	5-7A	5-7A	
P37	—	1-1B	1-1B	1-1B	1-1B	1-1B	1-1B	1-1B	1-1B	—	—	—	1-1B	1-1B	
P38	—	2-1B	2-1B	2-1B	2-1B	2-1B	2-1B	2-1B	2-1B	—	—	—	2-1B	2-1B	
P39	—	3-1B	3-1B	3-1B	3-1B	3-1B	3-1B	3-1B	3-1B	—	—	—	3-1B	3-1B	
P40	—	4-1B	4-1B	4-1B	4-1B	4-1B	4-1B	4-1B	4-1B	—	—	—	4-1B	4-1B	
P41	—	5-1B	5-1B	5-1B	5-1B	5-1B	5-1B	5-1B	5-1B	—	—	—	5-1B	5-1B	
P42	—	1-2B	1-2B	1-2B	1-2B	1-2B	1-2B	1-2B	1-2B	—	—	—	1-2B	1-2B	
P43	—	2-2B	2-2B	2-2B	2-2B	2-2B	2-2B	2-2B	2-2B	—	—	—	2-2B	2-2B	
P44	—	3-2B	3-2B	3-2B	3-2B	3-2B	3-2B	3-2B	3-2B	—	—	—	3-2B	3-2B	
P45	—	4-2B	4-2B	4-2B	4-2B	4-2B	4-2B	4-2B	4-2B	—	—	—	4-2B	4-2B	
P46	—	5-2B	5-2B	5-2B	5-2B	5-2B	5-2B	5-2B	5-2B	—	—	—	5-2B	5-2B	
P47	—	1-3B	1-3B	1-3B	1-3B	1-3B	1-3B	1-3B	1-3B	—	—	—	1-3B	1-3B	
P48	—	2-3B	2-3B	2-3B	2-3B	2-3B	2-3B	2-3B	2-3B	—	—	—	2-3B	2-3B	
P49	—	3-3B	3-3B	3-3B	3-3B	3-3B	3-3B	3-3B	3-3B	—	—	—	3-3B	3-3B	
P50	—	4-3B	4-3B	4-3B	4-3B	4-3B	4-3B	4-3B	4-3B	—	—	—	4-3B	4-3B	
P51	—	5-3B	5-3B	5-3B	5-3B	5-3B	5-3B	5-3B	5-3B	—	—	—	5-3B	5-3B	
P52	—	1-4B	1-4B	1-4B	1-4B	1-4B	1-4B	1-4B	1-4B	—	—	—	1-4B	1-4B	
P53	—	2-4B	2-4B	2-4B	2-4B	2-4B	2-4B	2-4B	2-4B	—	—	—	2-4B	2-4B	
P54	—	3-4B	3-4B	3-4B	3-4B	3-4B	3-4B	3-4B	3-4B	—	—	—	3-4B	3-4B	
P55	—	4-4B	4-4B	4-4B	4-4B	4-4B	4-4B	4-4B	4-4B	—	—	—	4-4B	4-4B	
P56	—	5-4B	5-4B	5-4B	5-4B	5-4B	5-4B	5-4B	5-4B	—	—	—	5-4B	5-4B	
P57	—	1-5B	1-5B	1-5B	1-5B	1-5B	1-5B	1-5B	1-5B	—	—	—	1-5B	1-5B	
P58	—	2-5B	2-5B	2-5B	2-5B	2-5B	2-5B	2-5B	2-5B	—	—	—	2-5B	2-5B	
P59	—	3-5B	3-5B	3-5B	3-5B	3-5B	3-5B	3-5B	3-5B	—	—	—	3-5B	3-5B	
P60	—	4-5B	4-5B	4-5B	4-5B	4-5B	4-5B	4-5B	4-5B	—	—	—	4-5B	4-5B	
P61	—	5-5B	5-5B	5-5B	5-5B	5-5B	5-5B	5-5B	5-5B	—	—	—	5-5B	5-5B	
P62	—	1-6B	1-6B	1-6B	1-6B	1-6B	1-6B	1-6B	1-6B	—	—	—	1-6B	1-6B	
P63	—	2-6B	2-6B	2-6B	2-6B	2-6B	2-6B	2-6B	2-6B	—	—	—	2-6B	2-6B	
P64	—	3-6B	3-6B	3-6B	3-6B	3-6B	3-6B	3-6B	3-6B	—	—	—	3-6B	3-6B	
P65	—	4-6B	4-6B	4-6B	4-6B	4-6B	4-6B	4-6B	4-6B	—	—	—	4-6B	4-6B	
P66	—	5-6B	5-6B	5-6B	5-6B	5-6B	5-6B	5-6B	5-6B	—	—	—	5-6B	5-6B	
P67	—	1-7B	1-7B	1-7B	1-7B	1-7B	1-7B	1-7B	1-7B	—	—	—	1-7B	1-7B	
P68	—	2-7B	2-7B	2-7B	2-7B	2-7B	2-7B	2-7B	2-7B	—	—	—	2-7B	2-7B	
P69	—	3-7B	3-7B	3-7B	3-7B	3-7B	3-7B	3-7B	3-7B	—	—	—	3-7B	3-7B	
P70	—	4-7B	4-7B	4-7B	4-7B	4-7B	4-7B	4-7B	4-7B	—	—	—	4-7B	4-7B	
P71	—	5-7B	5-7B	5-7B	5-7B	5-7B	5-7B	5-7B	5-7B	—	—	—	5-7B	5-7B	

• **Anode Timing Chart**

	15Gd-15Ga	14G	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3Gb, 3Ga	2G	1G	
P1	T18		T17			T16		T9	T8	T7	—	—	—	T3	—	T1
P2 P11	T15 T15	T14 T14	T13 T13	T12 T12	T11 T11	T10 T10	T9 T9	T8 T8	T7 T7	T6 T6	— —	— —	T3 T3	T2 T2	T1 T1	
P12 P12	T15 T15	T14 T14	T13 T13	T12 T12	T11 T11	T10 T10	T9 T9	T8 T8	T7 T7	T6 T6	— —	— —	— —	T2 T2	T1 T1	
P33 P71	— —	T14 T14	T13 T13	T12 T12	T11 T11	T10 T10	T9 T9	T8 T8	T7 T7	T6 T6	— —	— —	— —	T2 T2	T1 T1	

7.3 CLEANING



Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools:

Position to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

A

B

C

D

E

F

7.4 REMOTE CONTROL UNIT

7.4.1 EXPLODED VIEWS AND PARTS LIST (VSX-D2011S : AXD7326)


A

B

C

D

F

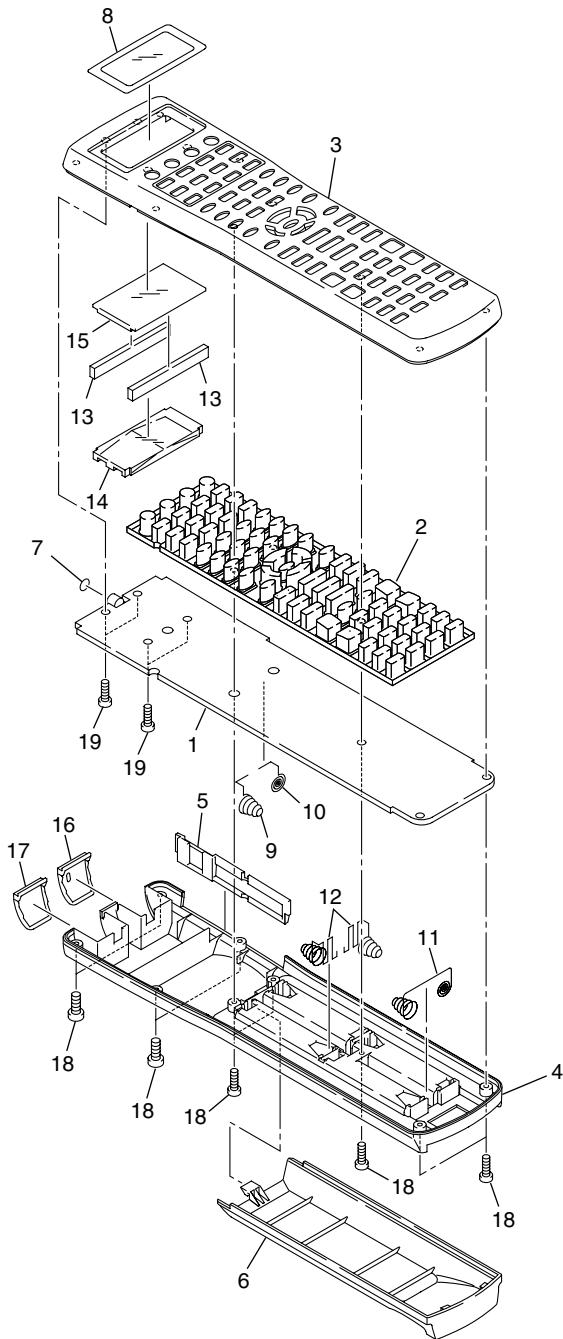
Mark No.
Description
Part No.

E 1 PCB Assy

AZC7301

Mark No.
Description

423RRC-046-01G

2 Rubber Key

AZA7425

481RRC-018-01G

3 Case A

AZN7906

801RRC-020-01L

4 Case B

AZN7892

811RRC-109-01G

5 Frame

AZN7908

811RRC-110-01G

6 Battery Cover

AZN7896

A-BA2008-225002

7 MIC Cap

AZN7909

A-BJ2006

8 Name Plate

201RRC-314-01L

9 Terminal A

411RRC-212-01G

10 Terminal B

411RRC-213-01G

11 Battery Terminal

413RRC-143-01R

12 Spring

413RRC-171-01G

Mark No.
Description
Part No.

13 Connector

14 Plate

15 Shield Plate

16 Filter A

17 Filter B


18 Screw

19 Screw

8. PANEL FACILITIES

8.1 FRONT PANEL

All the controls on the front panel are explained and/or referenced here. To open the front panel push gently on the lower third of the panel.

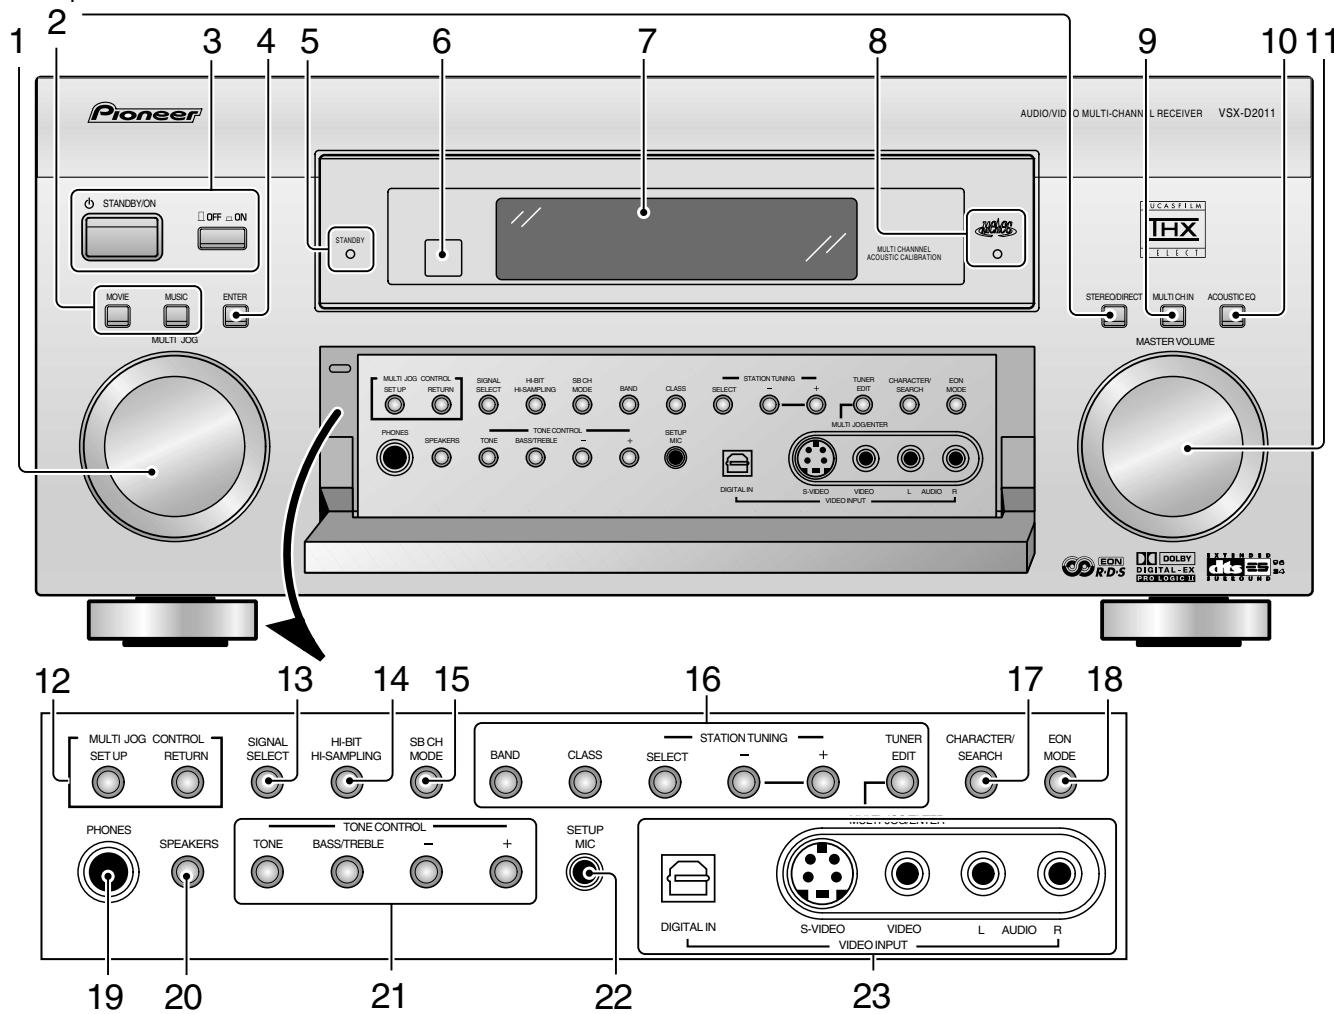

1 MULTI JOG dial

You can use this dial for many purposes. When you press the SET UP button (12), you can use it to perform SYSTEM SETUP operations; select a function (like a DVD) or a listening mode (like Dolby Pro logic II) or do TUNER EDIT functions (in TUNER mode).

2 Listening mode buttons

There are two types of SURROUND modes:

MOVIE: Press to put the receiver into MOVIE listening mode.

MUSIC: Press to put the receiver into MUSIC listening mode.

STEREO/DIRECT: Switches the receiver into STEREO mode if it was in a different sound mode or toggles between DIRECT and STEREO mode.

DIRECT playback bypasses the tone controls and channel level for the most accurate reproduction of a program source.

3 OFF ON button

Press to switch the receiver between OFF and STANDBY mode or ON.

4 STANDBY/ON button

Press to switch the receiver between ON and STANDBY mode.

4 ENTER button

Use this button to enter information concerning the SYSTEM SETUP, listening mode or the tuner.

5 STANDBY indicator

Lights when the receiver is in STANDBY mode. (Please note that this receiver consumes a small amount of power [0.7 W for the European model and 0.9 W for the multi-voltage model] in the standby mode.)

6 Remote sensor

Receives the signals from the remote control.

7 Display

8 MCACC indicator

Lights when the ACOUSTIC CAL EQ is on. (After the AUTO SURROUND SOUND SETUP has been completed the ACOUSTIC CAL EQ is set on and this display will light.)

9 MULTI CH IN button

Use this button to select the component you have hooked up to the MULTI CH IN terminals (for example, a DVD-Audio player).

10 ACOUSTIC EQ button

Press to switch on/off and select the type of acoustic calibr

11 MASTER VOLUME dial

Use to raise or lower the volume of the receiver.

12 MULTI JOG CONTROL buttons**SET UP**

Press to switch the SYSTEM SETUP mode.

RETURN

Press to move back one step in the SYSTEM SETUP process.

13 SIGNAL SELECT button

Press SIGNAL SELECT repeatedly to select one of the following:

AUTO – If there are analog and digital signals input, the receiver automatically selects the digital signal.

DIGITAL – To select an optical or coaxial digital signal.

ANALOG – To select an analog signal.

14 HI-BIT HI-SAMPLING button

Use this button to switch the HI-BIT HI-SAMPLING mode on or off. Use to hear CD and DVD, as well as other digital soundtracks at a wider dynamic range, allowing for finer audio reproduction.

15 SB CH MODE button

Use this button to turn the surround back channels ON/OFF/AUTO or switch the VIRTUAL SURROUND BACK mode between ON/OFF/AUTO.

16 TUNER CONTROL buttons**BAND**

Press to select the AM or FM band.

CLASS

Press repeatedly to switch the preset station classes.

SELECT

Switches the -/+ buttons between station memory and frequency select modes.

-/+

Selects station memories or frequencies when using the tuner.


TUNER EDIT

Press to memorize and name a station for recall using the MULTI JOG and ENTER buttons.

17 CHARACTER/SEARCH button

Use to search for different program types in RDS mode.

VSX-D1011

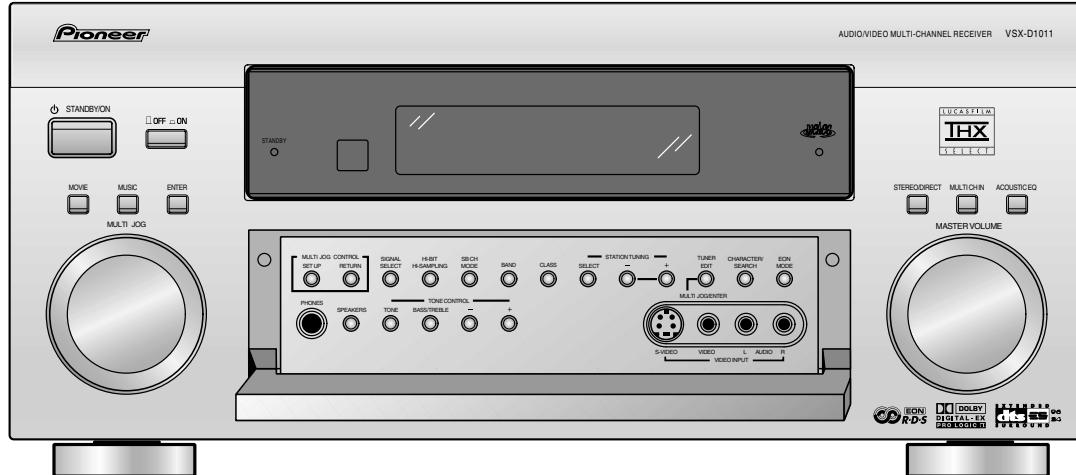**18 EON MODE button**

Use to search for different programs that are transmitting traffic or news information (this search method is called EON).

19 PHONES jack

Connect headphones for private listening (no sound will be heard through the speakers).

20 SPEAKERS (A/B) button

The use of this button depends on how the SURRBACK SYSTEM is set. If NORMAL SYSTEM is chosen this button toggles between A and OFF. If FRONT Bi-AMP is chosen this button toggles between A+B and OFF. If SECOND ZONE is chosen this button toggles between A, B, A+B and OFF.

21 TONE control buttons**TONE button**

This button switches between TONE ON and TONE BYPASS, which bypasses the tone circuitry.

BASS/TREBLE button

Use to select whether the bass or treble will be adjusted.

-/+ buttons

Use to adjust the frequency levels.

22 SET UP MIC jack

Plug in the set up mic here. This is very important in order to set up your system and get proper surround sound.

23 VIDEO INPUT jacks**DIGITAL IN**

Digital input for connecting a game console, DVD player, video camera (etc.), that has an optical digital connection.

S-VIDEO

Video input for connecting a portable DVD player, video camera (etc.), that has an S video out.

RCA VIDEO / AUDIO (L/R)

Video input for connecting a portable DVD player, video camera, etc. That has standard RCA video/audio outputs.

24 MIDNIGHT button

Switches the MIDNIGHT listening mode on or off (for all modes except THX CINEMA and MULTI CH IN).

25 LOUDNESS button

Switches the LOUDNESS mode on or off (for all modes except THX CINEMA and MULTI CH IN).

A

B

C


D

E

F

8.2 DISPLAY

All the display information is explained and/or referenced here.

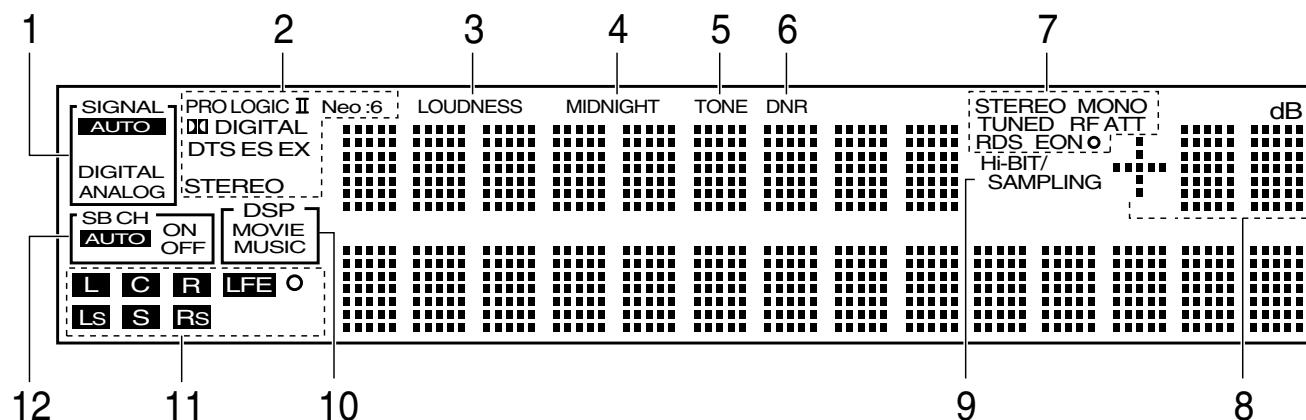

1 SIGNAL SELECT indicators

Light to indicate the input signal you selected.

AUTO: Lights when the receiver is set to select the input signal automatically.

DIGITAL: Lights when digital audio signals are selected.

ANALOG: Lights when analog signals are selected.

2 Digital format indicators

PRO LOGIC II: Lights during Dolby Pro Logic II processing.

NEO:6: Lights during NEO:6 processing.

DOLBY DIGITAL: Lights when a Dolby Digital signal is detected.

DTS: Lights when a DTS signal is detected.

ES: Lights when playing back a DTS ES signal.

EX: Lights when playing back a Dolby Digital EX signal.

STEREO: Lights during two-channel playback.

3 LOUDNESS indicator

Lights when LOUDNESS is on.

4 MIDNIGHT indicator

Lights when MIDNIGHT is on.

5 TONE indicator

Lights when the TONE control is on.

6 DNR indicator

Lights when DIGITAL NR is on.

7 TUNER indicators

STEREO: Lights when an FM stereo broadcast is received in the auto stereo mode.

MONO: Lights when the tuner is set to receive FM broadcasts and when MPX mode is selected.

TUNED: Lights when a broadcast is received.

RF ATT (European model only): Lights when the RF ATT is on.

RDS (European model only): Lights when an RDS broadcast is received.

EON o (European model only): EON lights when it has been set. The dot indicator next to it lights when the station you are currently tuned to carries the EON data service.

8 Volume level indicator

9 Hi-BIT/SAMPLING indicator

Lights when a HI-BIT/SAMPLING mode is on.

10 DSP indicators

MOVIE: Lights when a MOVIE mode is selected. When a DSP MOVIE mode is selected DSP will light with a box around it.

MUSIC: Lights when a MUSIC mode is selected. When a DSP MUSIC mode is selected DSP will light with a box around it.

11 Program Format indicators

For Dolby Digital or DTS sources: These indicators change according to which channels are active in the source. When all three **LS** (left surround), **S** (surround) and **RS** (right surround) light at the same time it means a source with a 6.1 channel playback flag is being used.

L – Left front channel.

C – Center channel.

R – Right front channel.

LS – Left surround channel.

S – Surround channel or Surround back channel.

RS – Right surround channel.

LFE – Low Frequency Effects channel.

o – Lights when LFE signal is input.

12 SB CH indicators

Light to indicate the status of the surround back channels.


AUTO – Lights when the SB CH MODE or VIRTUAL SURROUND BACK mode is set to AUTO.

ON – Lights when the SB CH MODE or VIRTUAL SURROUND BACK mode is set to ON.

OFF – Lights when the SB CH MODE or VIRTUAL SURROUND BACK mode is set to OFF.

8.3 REAR PANEL

All the terminals on the back panel are explained and/or referenced here.

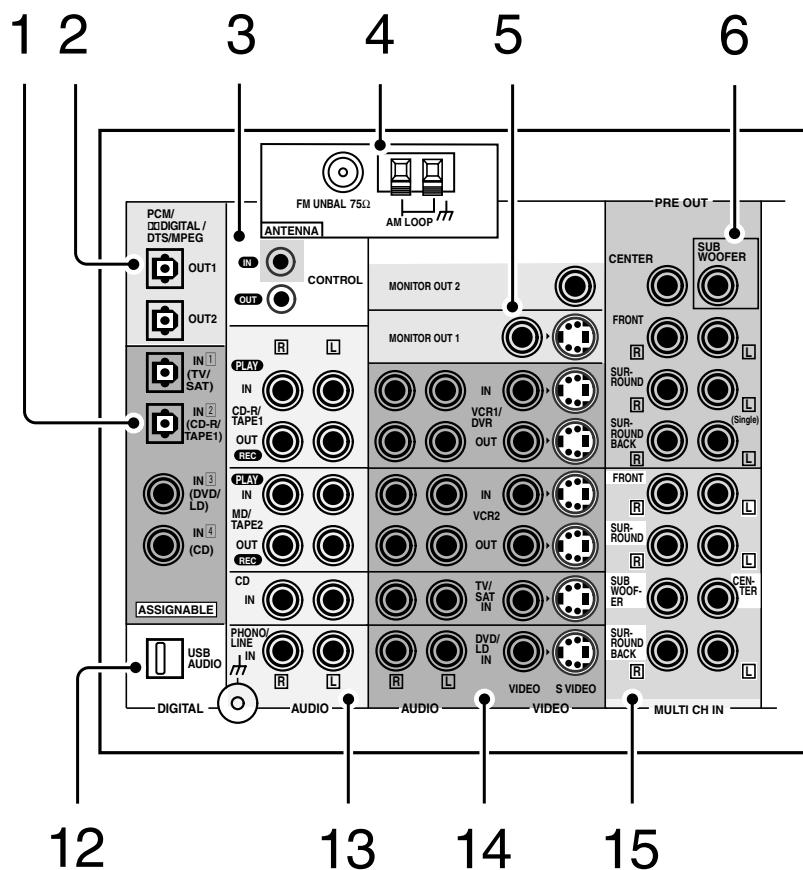

1 DIGITAL IN terminals

Use these terminals to input the signal from a DVD, CD player or any other kind of digital player. To be able to play Dolby Digital and other surround soundtracks you need to make digital connections. To do this use the digital terminals here. If you don't connect as per the default settings you need to complete "Assigning the Digital Inputs".

2 DIGITAL OUT terminals

Use these terminals to output a digital signal to a DVD-R, CD-R, MD recorder or any other kind of digital recorder.

3 CONTROL IN/OUT terminal

You can use this jack to hook up other PIONEER equipment, that has a CONTROL terminal, so that you can control them all by pointing the remote control(s) at one remote sensor.

4 Radio antenna terminals

Hook up antennas for the radio tuner built into the receiver here.

5 MONITOR OUT 1 & 2 terminals (connect a TV or monitor here)

Use either of these terminals to output the video signal to your TV(s), video projector(s) or monitor(s). The on-screen displays to setup the receiver will only be output through MONITOR OUT 1.

6 PRE OUT analog terminals (connect an amplifier here)


Use these terminals to output the audio signal from this amplifier to a different amplifier if that's how you choose to set up your system.

7 COMPONENT VIDEO MONITOR OUT terminals

Use these terminals to output the video signal from the COMPONENT VIDEO IN terminals to your TV. See #16 for more information.

8 SPEAKERS terminals

Use these terminals to connect speakers to the receiver. The FRONT, CENTER and SURROUND terminals are for the main speaker system and the SURROUND BACK speakers can be set to either the main system or the SECOND ZONE. See page 37 to set the SURROUND BACK speakers.

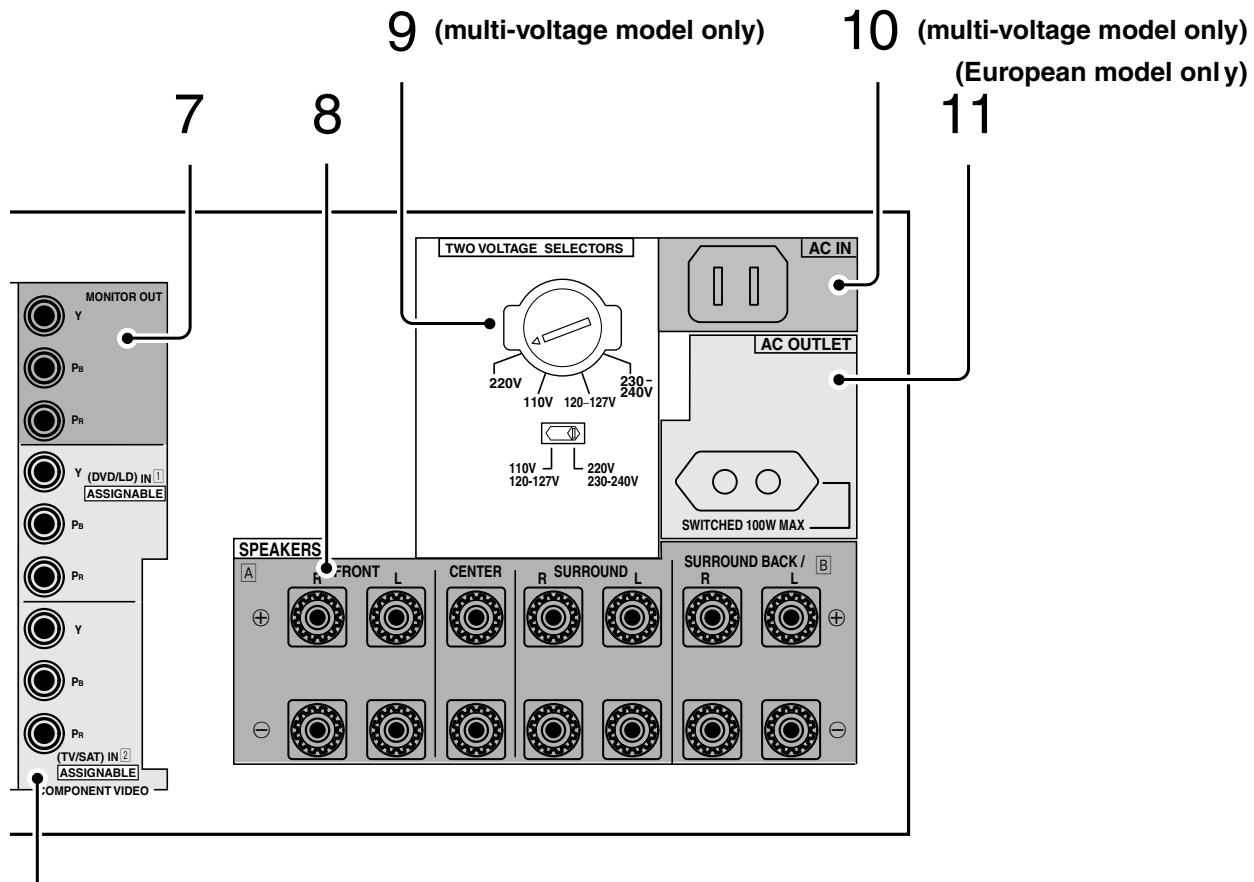

16

9 Voltage Selector (multi-voltage model only)

Use to match the voltage coming into the receiver with the voltage in your country or region.

10 AC IN (multi-voltage model only)

Hook up the power cord to this terminal.

11 AC OUTLET (European model only) (switched, 100 W max)

Hook up an external component to the power supply of this receiver. Only do this with audio or video components being used in this system and never hook up heavy equipment (like TVs, heaters, air conditioners, refrigerators, etc.) to this receiver.

12 USB AUDIO IN terminal

Use this terminal to connect a PC to this receiver.

13 Audio input/output terminals (connect analog components here)

Use these terminals to input/output the audio signal from analog components (like a cassette deck or turntable). These are analog jacks.

14 Video components input/output terminals

Input/output signals from your video components (DVD, VCR, TV tuners, SAT tuners, etc.) here.

15 MULTI CH IN terminals


Use these terminals to input a multichannel surround signal (for example, a DVD-Audio signal) in an analog fashion. These are analog jacks.

16 COMPONENT VIDEO IN terminals

Use these terminals to hook up the video connections of your video components with this high quality method. Your components will have to have the terminals as well to take advantage of this kind of connection. If you don't connect as per the default settings you need to complete "Assigning the Component Video Inputs".

8.4 REMOTE CONTROL UNIT

This page describes the buttons on the remote control used to operate the receiver.

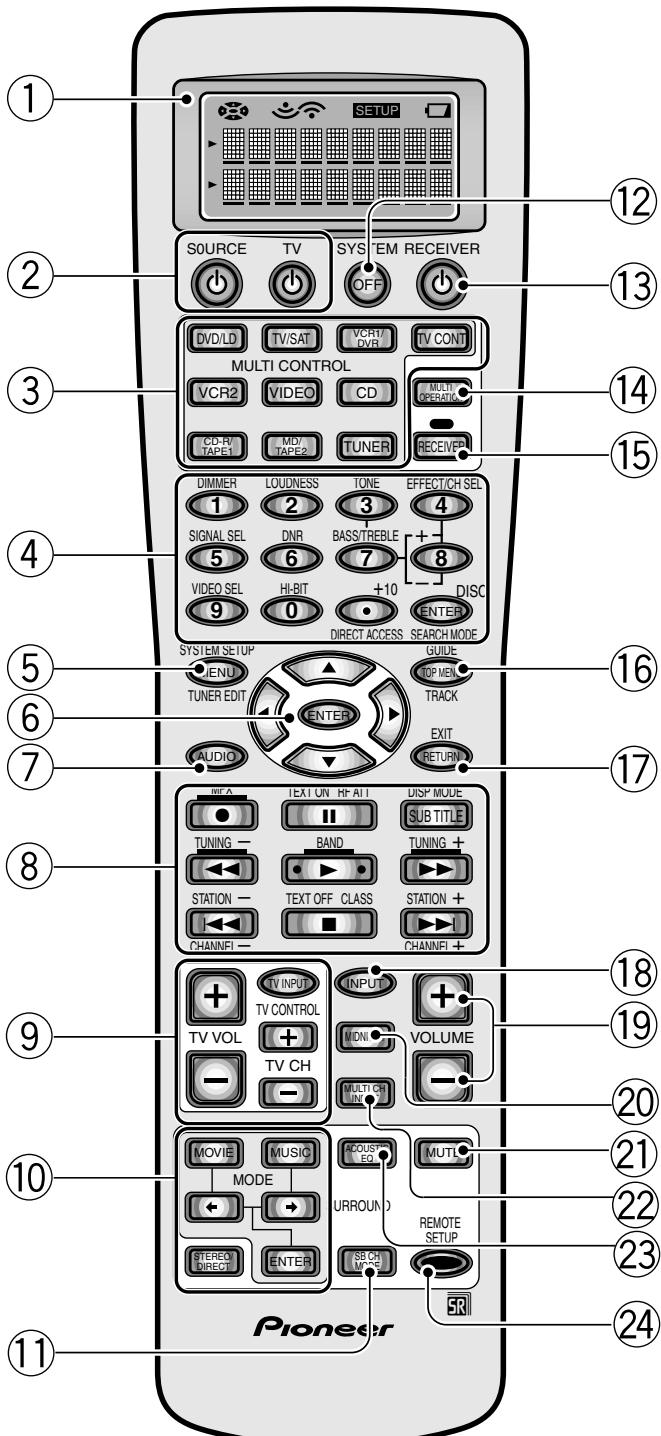

① Remote Control Display Screen

② SOURCE ⌂ button

Use this button to turn on/off other components. You must input the preset code in order to use this function.

TV ⌂ button

This is a dedicated TV button. Use it to turn on/off your TV.

③ MULTI CONTROL buttons

These buttons are the basic controls that switch the mode of the receiver and the remote control, which allows you to control your other components.

TV CONT: Press so that the remote control can operate the TV control commands.

④ Number buttons

These can be used for many purposes depending on the mode of the remote control.

When in receiver mode the buttons operate as below:

DIMMER button

Use to adjust the brightness of the receiver's display.

LOUDNESS button

Switches the LOUDNESS mode on or off (for all modes except THX CINEMA and MULTI CH IN).

TONE button

This button switches between TONE ON and TONE BYPASS, which bypasses the tone circuitry.

BASS/TREBLE buttons

Use to select whether the bass or treble will be adjusted.

(+/-) buttons

Use to adjust the TONE level, effect level and channel level as well as make Dolby Pro Logic II MUSIC parameter settings.

EFFECT/CH SEL. button

Switches between the different channels so you can add volume individually to each channel with the + and - buttons. Also selects EFFECT mode of PIONEER original sound modes and Dolby Pro Logic II MUSIC parameter settings. You can then use the + and - buttons to make these adjustments.

SIGNAL SELECT button

Press SIGNAL SELECT repeatedly to select one of the following:

AUTO – If there are analog and digital signals input, the receiver automatically selects the digital signal.

DIGITAL – To select an optical or coaxial digital signal.

ANALOG – To select an analog signal.

DIGITAL NR (DNR) button

Switches the DIGITAL NR on or off.

VIDEO SELECT button

Use to toggle between the different video input possibilities.

HI-BIT button

Use this button to switch the HI-BIT HI-SAMPLING on or off. Use to hear CD and DVD, as well as other digital soundtracks at a wider dynamic range, allowing for finer audio reproduction.

⑤ SYSTEM SETUP button

Use for all system setups, including the speaker and sound systems. For more information see, "Setting up for Surround Sound" starting on page 36. For a DVD player use this button to bring up the DVD menu and for a tuner use this button in the same way as the TUNER EDIT button.

⑥ ▲/▼/◀/▶/ENTER buttons

These buttons can be used for a variety of operations in the SYSTEM SETUP menu.

These buttons are used to control the menus for other components when in those modes (DVD, digital TV tuner, satellite tuner, cable tuner, etc.). In TUNER mode, they can select a station and/or a frequency.

⑦ AUDIO button

Use to switch the audio tracks of a DVD when in DVD mode.

⑧ Command button for other components

Use these buttons to control other components you selected with the MULTI CONTROL buttons. You must input the preset code in order use this function.

⑨ TV CONTROL buttons

The following buttons are used to control the TV only and can be used once they are preset to control your TV.

TV INPUT: Press to select the input source for the TV.

TV CH +/- : Use these buttons to change the channel of the TV.

TV VOL +/- : Press to control the volume of the TV.

⑩ Listening mode buttons

SURROUND buttons (MOVIE, MUSIC, ←→ & ENTER):

MOVIE: Press to put the receiver into MOVIE listening mode.

MUSIC: Press to put the receiver into MUSIC listening mode.

←→: Use to select the MOVIE or MUSIC listening mode.

ENTER: Use this button to enter information concerning the listening modes.

STEREO/DIRECT: Switches the receiver into STEREO mode if it was in a different sound mode or toggles between DIRECT and STEREO mode.

DIRECT playback bypasses the tone controls and channel level for the most accurate reproduction of a program source.

⑪ SB CH MODE button

Use this button to turn the surround back channels ON/OFF/AUTO or switch the VIRTUAL SURROUND BACK mode between ON/OFF/AUTO.

⑫ SYSTEM OFF button

This button turns off components in two ways. First, when pressed it will turn off all PIONEER components. Secondly, any component that has programmed into the SYSTEM OFF settings will be turned off.

For example: If you programmed power off in the SYSTEM OFF settings for your TV and VCR, pressing the SYSTEM OFF button will turn off these components even if they are not PIONEER products.

⑬ ⓧ RECEIVER (STANDBY/ON) button

Press to turn power of the receiver on or to standby (off).

⑭ MULTI OPERATION button

Use this button to start the MULTI OPERATION mode. For how to program and use the MULTI OPERATION mode.

⑮ RECEIVER button

Use this button to switch the remote control into receiver mode in order to get certain receiver functions or do receiver setups.

⑯ TOP MENU/GUIDE button

Use to find stations or menus on a digital TV tuner. For a DVD player use this button to bring up the DVD menu.

⑰ RETURN button

When you are in a receiver setup operation this button will go back one step in the SYSTEM SETUP procedure. When you are using your DVD menu screen this button acts the same as the DVD player's "RETURN" button. When you are using cable tuners, satellite tuners or digital TV tuners this button will either exit you from the menu screen or act like a "RETURN" button above, depending on the maker of the unit.

⑱ INPUT button

Press to select an input source. The button will cycle through all the possible sources.

⑲ VOLUME (+/-) buttons

Use to raise or lower the volume of the receiver.

⑳ MIDNIGHT button

Switches the MIDNIGHT listening mode on or off (for all modes except THX CINEMA and MULTI CH IN).

㉑ MUTE button

Press to mute or restore the volume.

㉒ MULTI CH INPUT button

Use this button to select the component you have hooked up to the MULTI CH IN terminals (for example, a DVD-Audio player).

㉓ ACOUSTIC EQ button

Press to switch on/off and select the type of acoustic calibration EQ.

㉔ REMOTE SETUP button.

Use to customize the remote control functions and the remote control itself.

A

B

C


D

E

F

A

VSX-D1011 : AXD7329

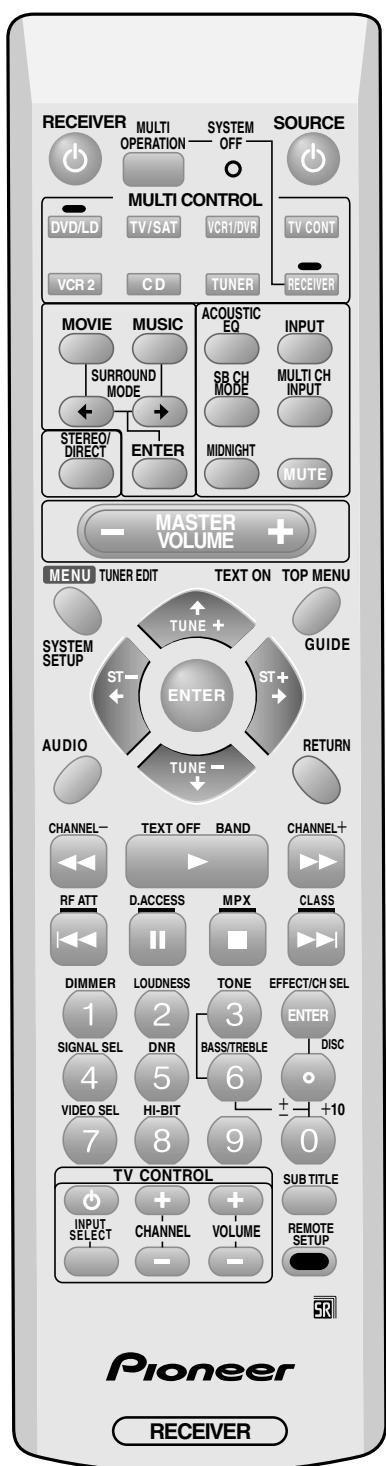

B

C

D

E

F