


# Service Manual

**Pioneer**

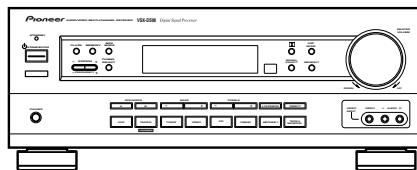

ORDER NO.  
RRV2086

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

# VSX-D508

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	Remarks
	VSX-D508		
KUXJI	○	AC120V	
KCXJI	○	AC120V	

## CONTENTS

1. SAFETY INFORMATION .....	2	7. GENERAL INFORMATION .....	48
2. EXPLODED VIEWS AND PARTS LIST .....	3	7.1 PARTS .....	48
3. SCHEMATIC DIAGRAM .....	6	7.1.1 IC .....	48
4. PCB CONNECTION DIAGRAM .....	26	7.1.2 DISPLAY .....	51
5. PCB PARTS LIST .....	39	7.2 DISASSEMBLY .....	53
6. ADJUSTMENT .....	47	7.3 BLOCK DIAGRAM .....	55
		7.4 REMOTE CONTROL UNIT .....	56
		[CU-VSX138 (AXD7178)]	
		8. PANEL FACILITIES AND SPECIFICATIONS .....	60

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan  
**PIONEER ELECTRONICS SERVICE, INC.** P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.  
**PIONEER ELECTRONIC (EUROPE) N.V.** Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium  
**PIONEER ELECTRONICS ASIACENTRE PTE. LTD.** 253 Alexandra Road, #04-01, Singapore 159936  
 © PIONEER ELECTRONIC CORPORATION 1999

# 1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.



**WARNING**

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65



**NOTICE**

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

**REMARQUE**

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


**(FOR USA MODEL ONLY)**

## 1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

### LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

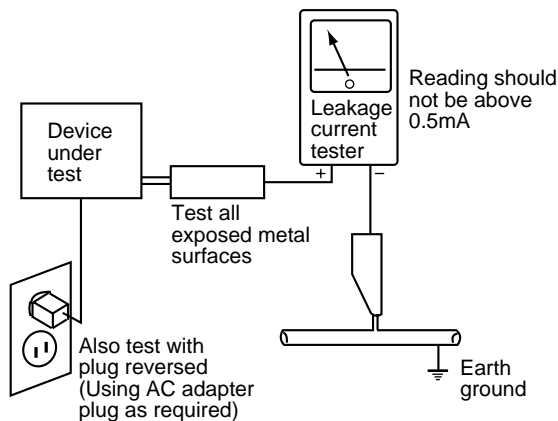

AC Leakage Test

**ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.**

## 2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a  $\Delta$  on the schematics and on the parts list in this Service Manual.


The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

## 2. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
  - The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
  - Screws adjacent to  $\blacktriangledown$  mark on the product are used for disassembly.

### 2.1 PACKING

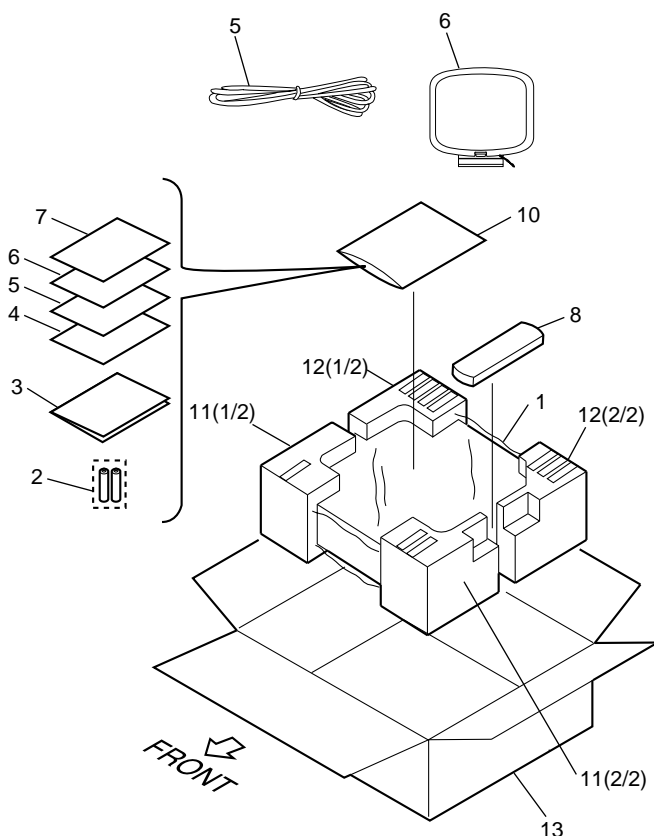

#### (1) PACKING PARTS LIST


Mark	No.	Description	Part No.
NSP	1	Packing Sheet	AHG7010
	2	Alkaline Dry Cell Battery (LR6, AA)	VEM1012
	3	Operating Instructions	See Contrast table (2)
	4	Sub Instruction Manual (System Set up)	ARH7039
NSP	5	FM Antenna	ADH7004
	6	AMLoop Antenna	ATB7009
	7	Warranty Card	See Contrast table (2)
	8	Remote Control Unit (CU-VSX138)	AXD7178
	9	.....	
	10	Polyethylene Bag (0.03×230×340)	Z21-038
	11	Front Pad 508	AHA7236
	12	Rear Pad 508	AHA7237
	13	Packing Case 508UC	AHD7643

#### (2) CONTRAST TABLE

VSX-D508/KUXJI and KCXJI are constructed the same except for the following :

Mark	No.	Symbol and Description	Part No.		Remarks
			KUXJI Type	KCXJI Type	
NSP	3	Operating Instructions (English)	ARB7157	Not used	
	3	Operating Instructions (English/French)	Not used	ARE7179	
	7	WarrantyCard	ARY7023	ARY7024	

2.2 EXTERIOR

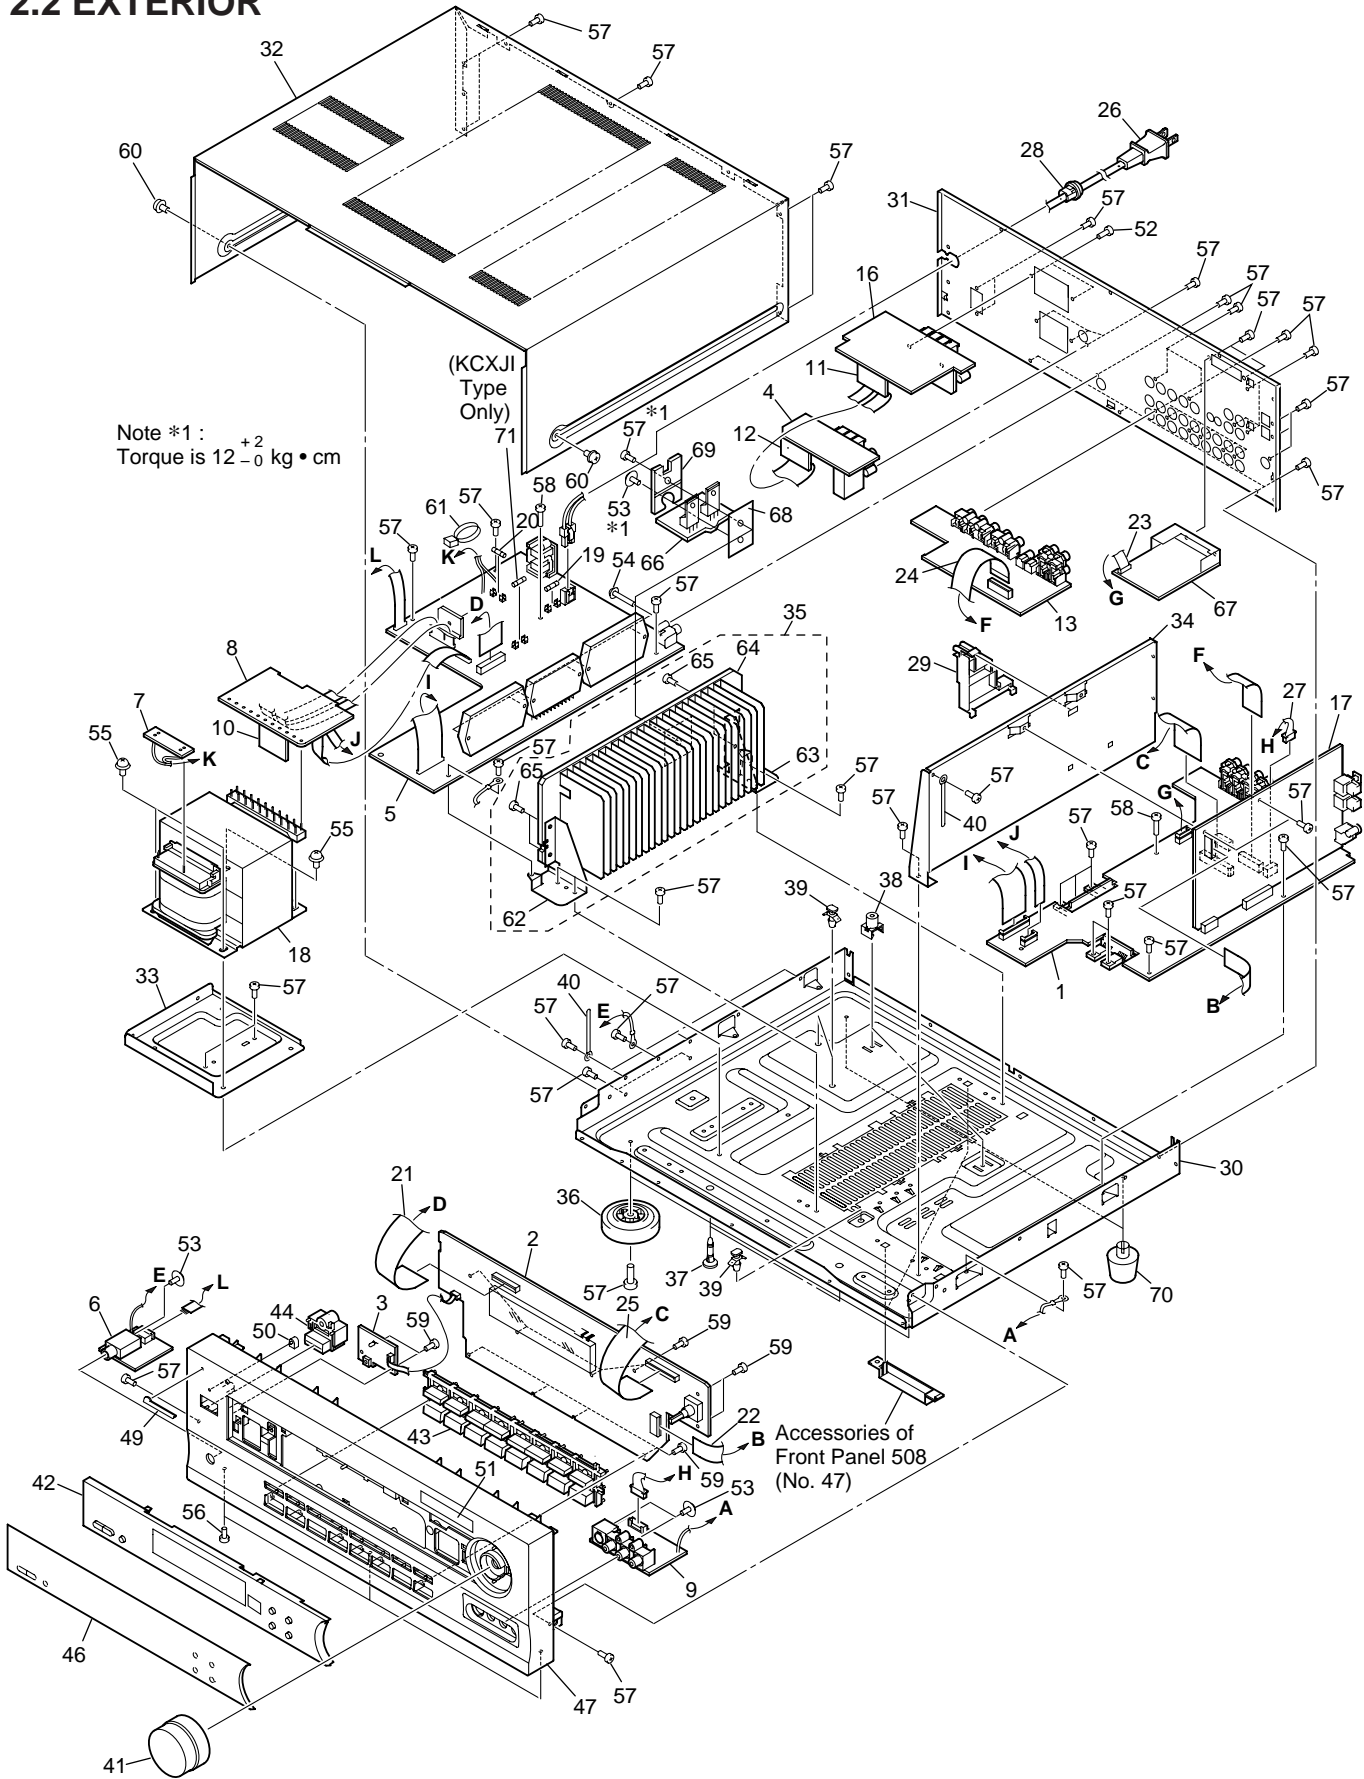

**(1) EXTERIOR PARTS LIST**

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	INPUT Assy	AWX7207		36	Insulator	PNW2766
	2	FRONT Assy	AWX7212		37	Locking Card Spacer	AEC7160
NSP	3	POWER SW Assy	AWX7222		38	PCB Mold	AMR2533
NSP	4	REAR SP Assy	AWX7250	NSP	39	Card Spacer	DEC1770
	5	AMP Assy	See Contrast table (2)	NSP	40	Binder	RNE1277
NSP	6	HEADPHONE Assy	AWX7229		41	Volume Knob 508	AAB7179
	7	TRANS 1 Assy	AWX7231		42	Sub Panel 508	AAD7482
	8	TRANS 2 Assy	AWX7232		43	Function Button	AAD7483
NSP	9	FRONT VIDEO Assy	AWX7239		44	Power Button	AAD7440
	10	BARRIER Assy	AWX7284		45	•••••	
NSP	11	F.SP.CONNECT Assy	AWX7285		46	Display Window R508	AAK7579
NSP	12	R.C.SP.CONNECT Assy	AWX7286		47	Front Panel 508	AMB7525
	13	VIDEO Assy	AWX7234		48	•••••	
	14	•••••			49	Name Plate	PAM1776
	15	•••••			50	LED Lens	PNW2019
	16	FRONT SP. Assy	AWX7243		51	•••••	
	17	DOLBY DIGITAL Assy	AWX7333		52	•••••	
△	18	Power Transformer (T1)	See Contrast table (2)		53	Screw	ABA7009
△	19	Fuse (FU1 : 10A)	REK1087		54	Screw	ABA7043
△	20	Fuse (FU2 : 7A)	VEK1027		55	Screw	ABA7044
	21	FFC 21P (J2)	ADD7100		56	•••••	
	22	FFC 15P (J4)	ADD7102		57	Screw	BBZ30P080FZK
	23	FFC 13P (J5)	ADD7103		58	Screw	BBZ30P200FMC
	24	FFC 17P (J8)	ADD7107		59	Screw	BPZ30P080FMC
	25	FFC 26P (J3)	ADD7118		60	Screw	FBT40P080FZK
△	26	AC Power Cord	ADG7024		61	Binder (BK-1)	ZCA-BK1
NSP	27	8P Shield Cable (J6)	ADX7242	NSP	62	Heat Sink Angle F	ANG7194
	28	Cord Stopper	CM-22C		63	Heat Sink Angle R	ANG7195
	29	Tuner Holder B	AAD7490	NSP	64	Heat Sink D5	ANH7090
NSP	30	Under Base D5	ANA7079		65	Screw	BBZ30P080FMC
	31	Rear Panel	See Contrast table (2)	NSP	66	FET Assy	AWX7228
	32	Bonnet Case	AZN7762		67	FM/AM TUNER Unit	AXX7046
	33	Trans Frame	ANG7193		68	Sheet	AEE7026
	34	DSP Shield	ANG7196		69	FET Angle	ANG7186
NSP	35	Heat Sink Assy D5	ANH7095		70	Foot Assy	REC1263
				△	71	Fuse (FU701 : 10A)	See Contrast table (2)


**(2) CONTRAST TABLE**

VSX-D508/KUXJI and KCXJI are constructed the same except for the following :

Mark	No.	Symbol and Description	Part No.		Remarks
			KUXJI Type	KCXJI Type	
△	5	AMP Assy	AWX7223	AWX7331	
	18	Power Transformer (T1)	ATS7234	ATS7235	
	31	Rear Panel 508U	ANC7700	Not used	
	31	Rear Panel 508C	Not used	ANC7751	
△	71	Fuse (FU701 : 10A)	Not used	REK1087	


### 3. SCHEMATIC DIAGRAM

#### 3.1 OVERALL WIRING CONNECTION DIAGRAM

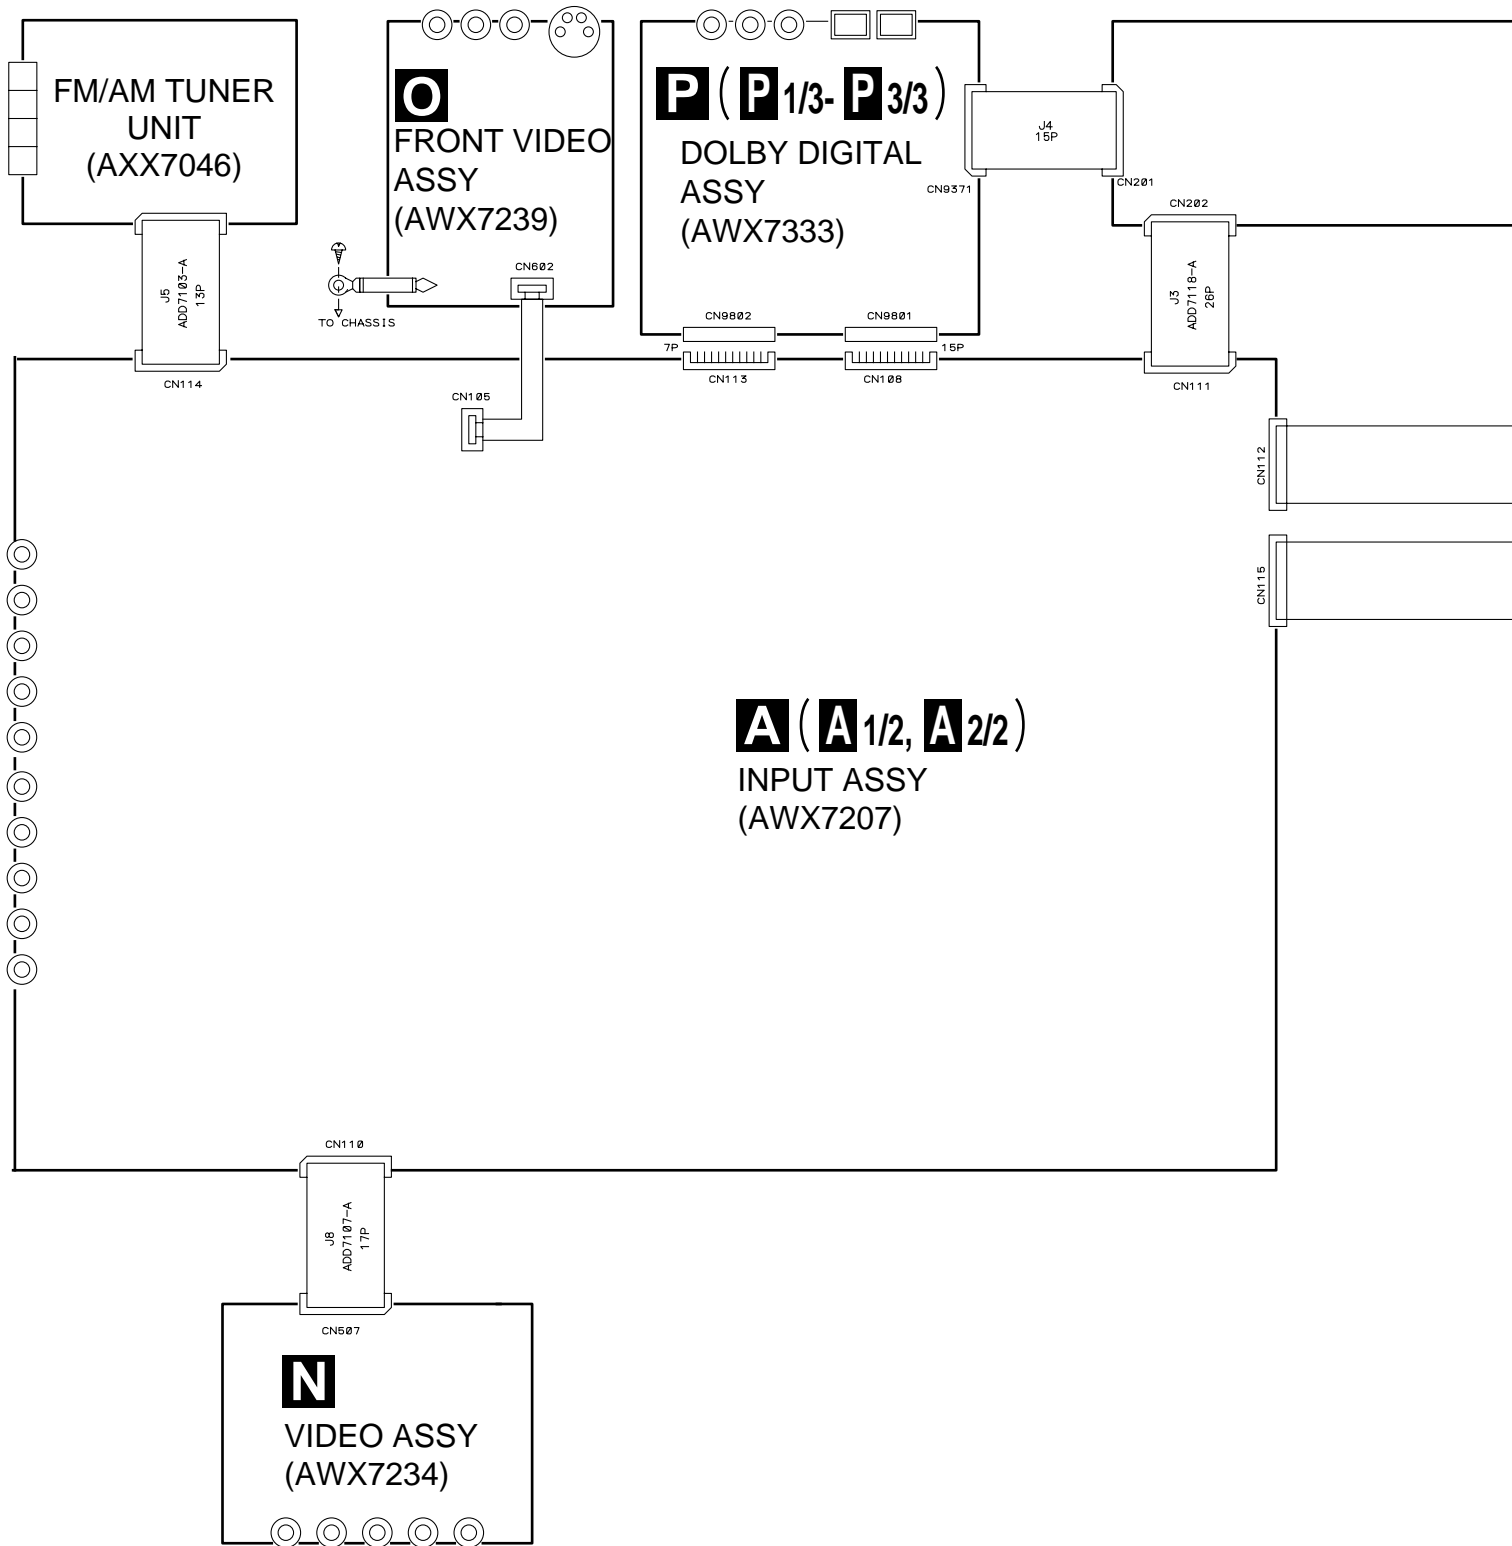

BORD IN CABLE	PCB-PCB CONNECTOR	F/F/C AND CONNECTOR	F/C AND CONNECTOR	F/C AND CABLEHOLDER	SHIELDCABLE AND CONNECTOR	AC CODE AND CONNECTOR

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

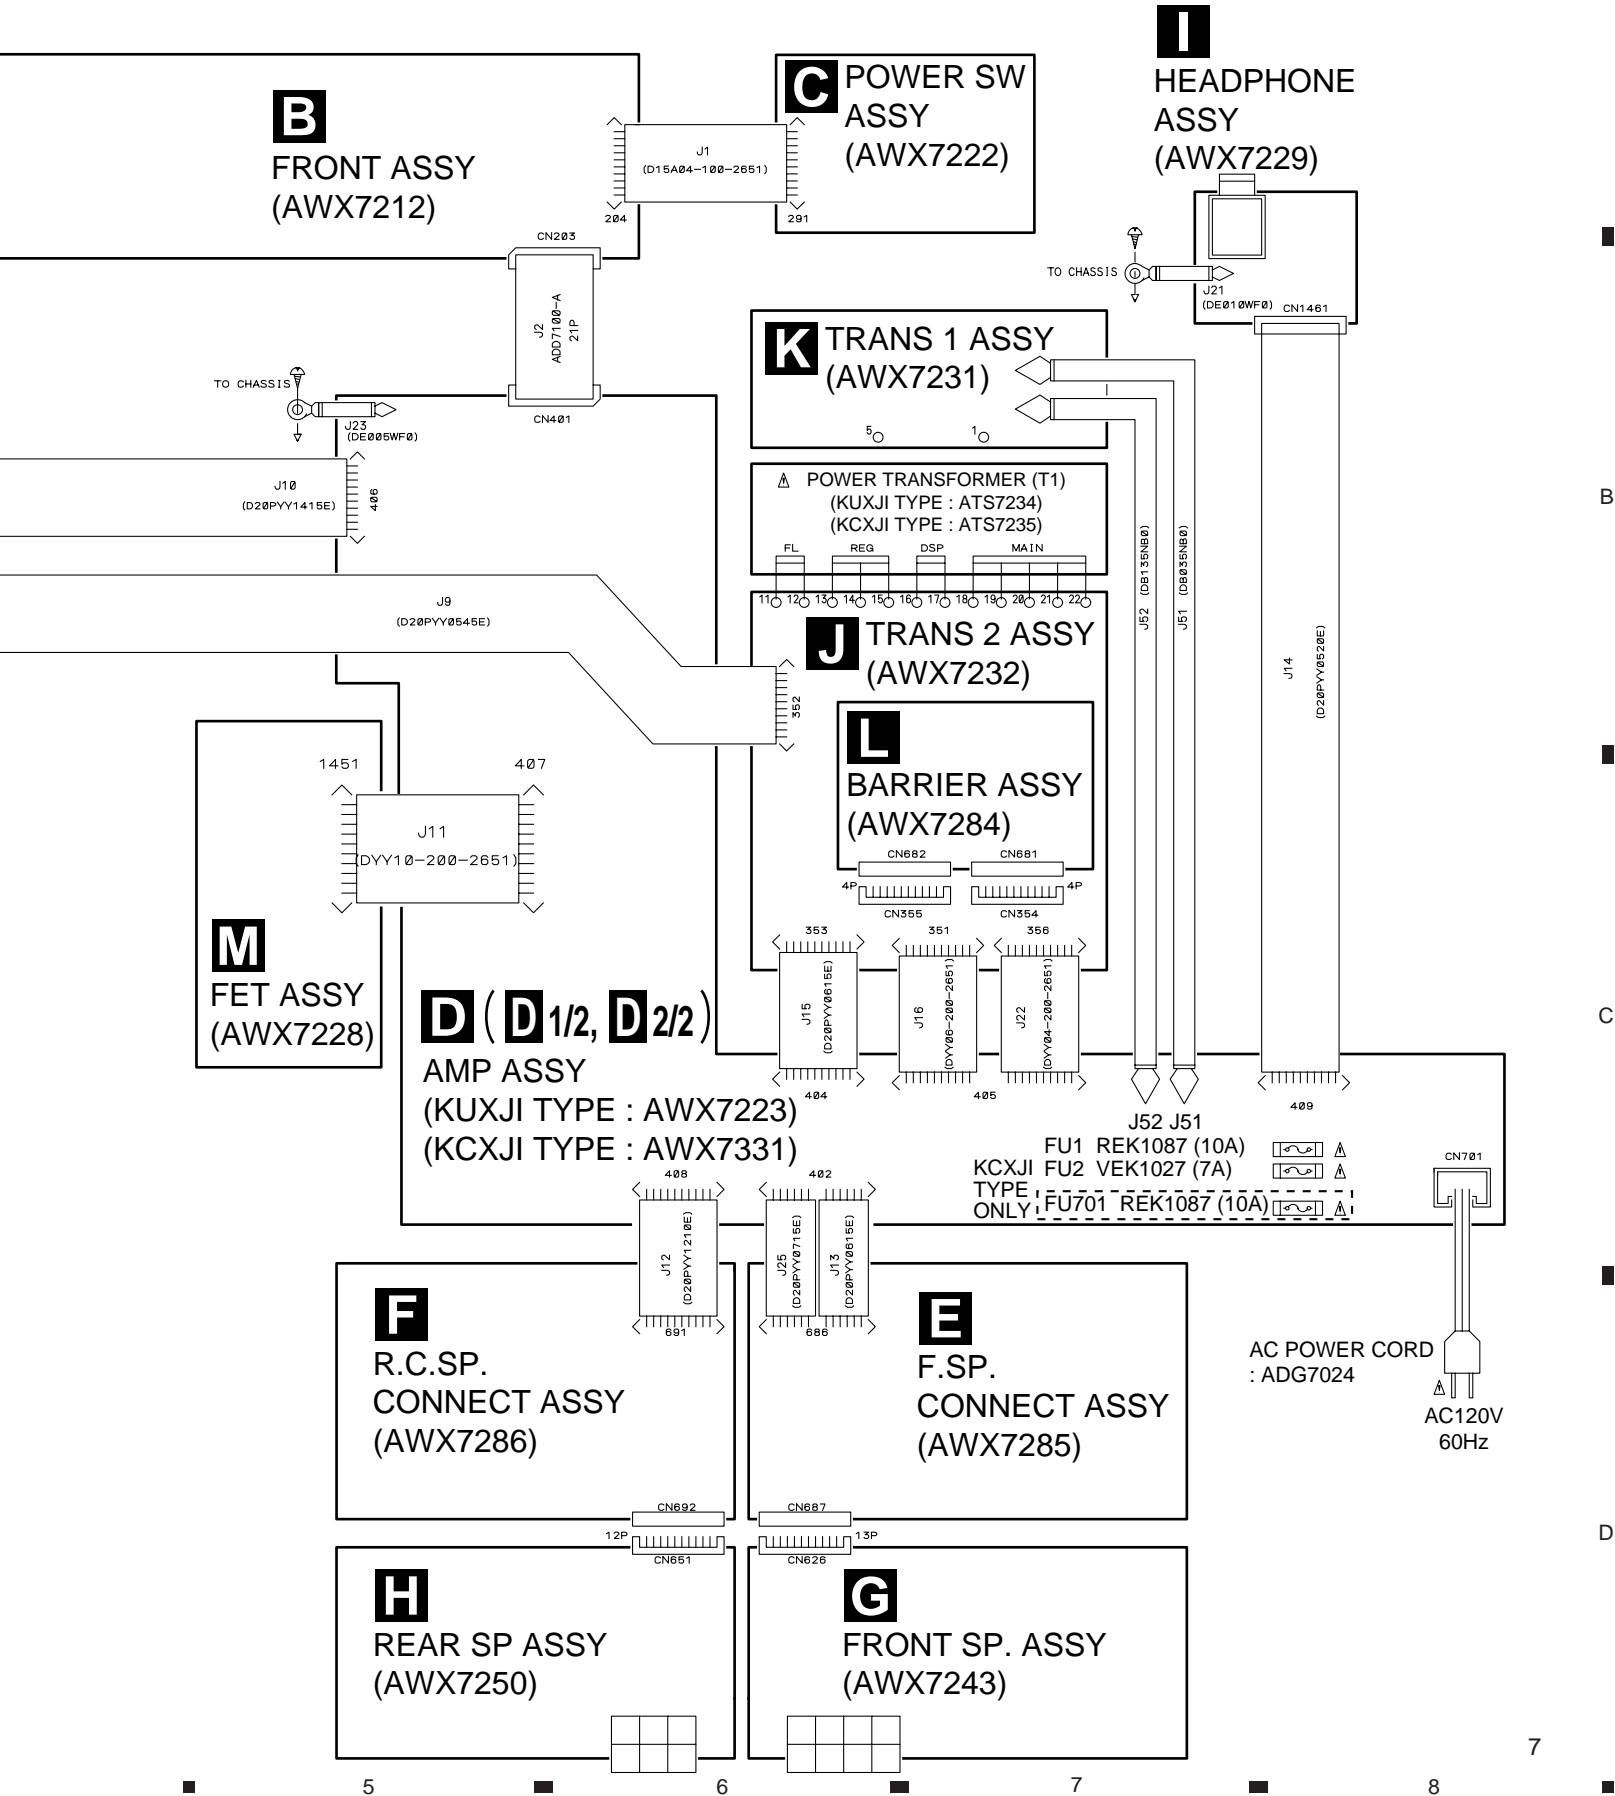

3.2 INPUT ASSY (1/2)

A 1/2 INPUT ASSY(1/2) (AWX7207)

FUNCTION BLOCK


A

B


C

D


JA103 (1/2) AKB7113  
REC  
VCR L  
PLAY  
DVD /LD  
TV /SAT  
JA102 (1/2) AKB7113  
REC  
TAPES /TAPE  
PLAY  
φ L  
JA101 (1/2) AKB7113  
REC /TUNER  
MD /TAPE  
PLAY /AUX  
φ R  
JA101 (2/2) AKB7113  
PLAY /AUX  
REC /TUNER  
φ R  
JA102 (2/2) AKB7113  
PLAY  
TAPES /TAPE  
REC  
TV /SAT  
DVD /LD  
JA103 (2/2) AKB7113  
PLAY  
VCR R  
REC

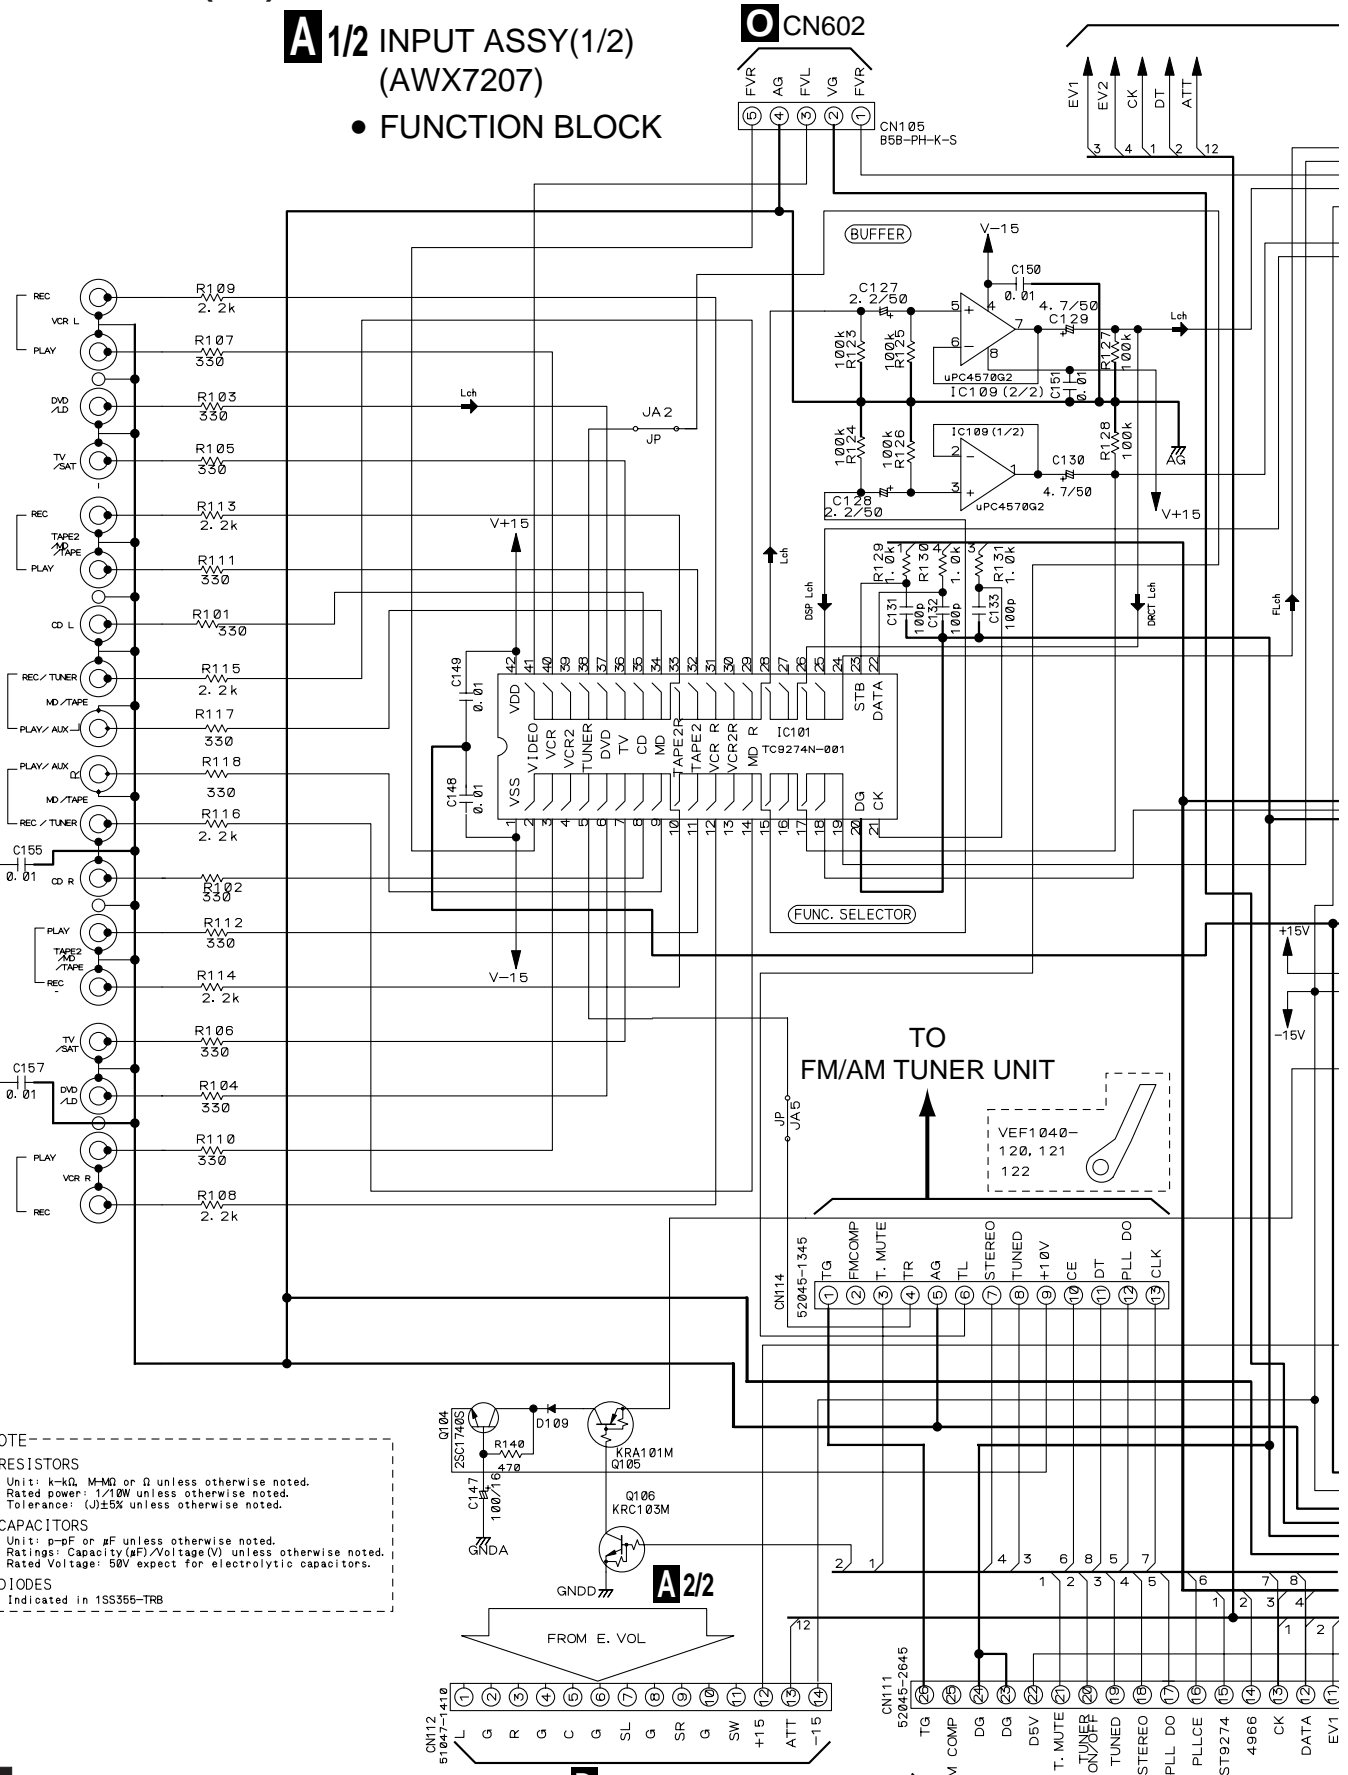

- NOTE
- RESISTORS  
Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.  
Rated power: 1/10W unless otherwise noted.  
Tolerance: (J)±5% unless otherwise noted.
  - CAPACITORS  
Unit: p-pF or μF unless otherwise noted.  
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.  
Rated Voltage: 50V except for electrolytic capacitors.
  - DIODES  
Indicated in 1SS355-TRB

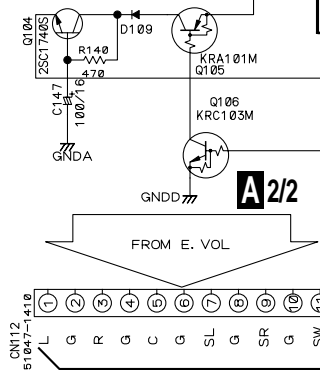



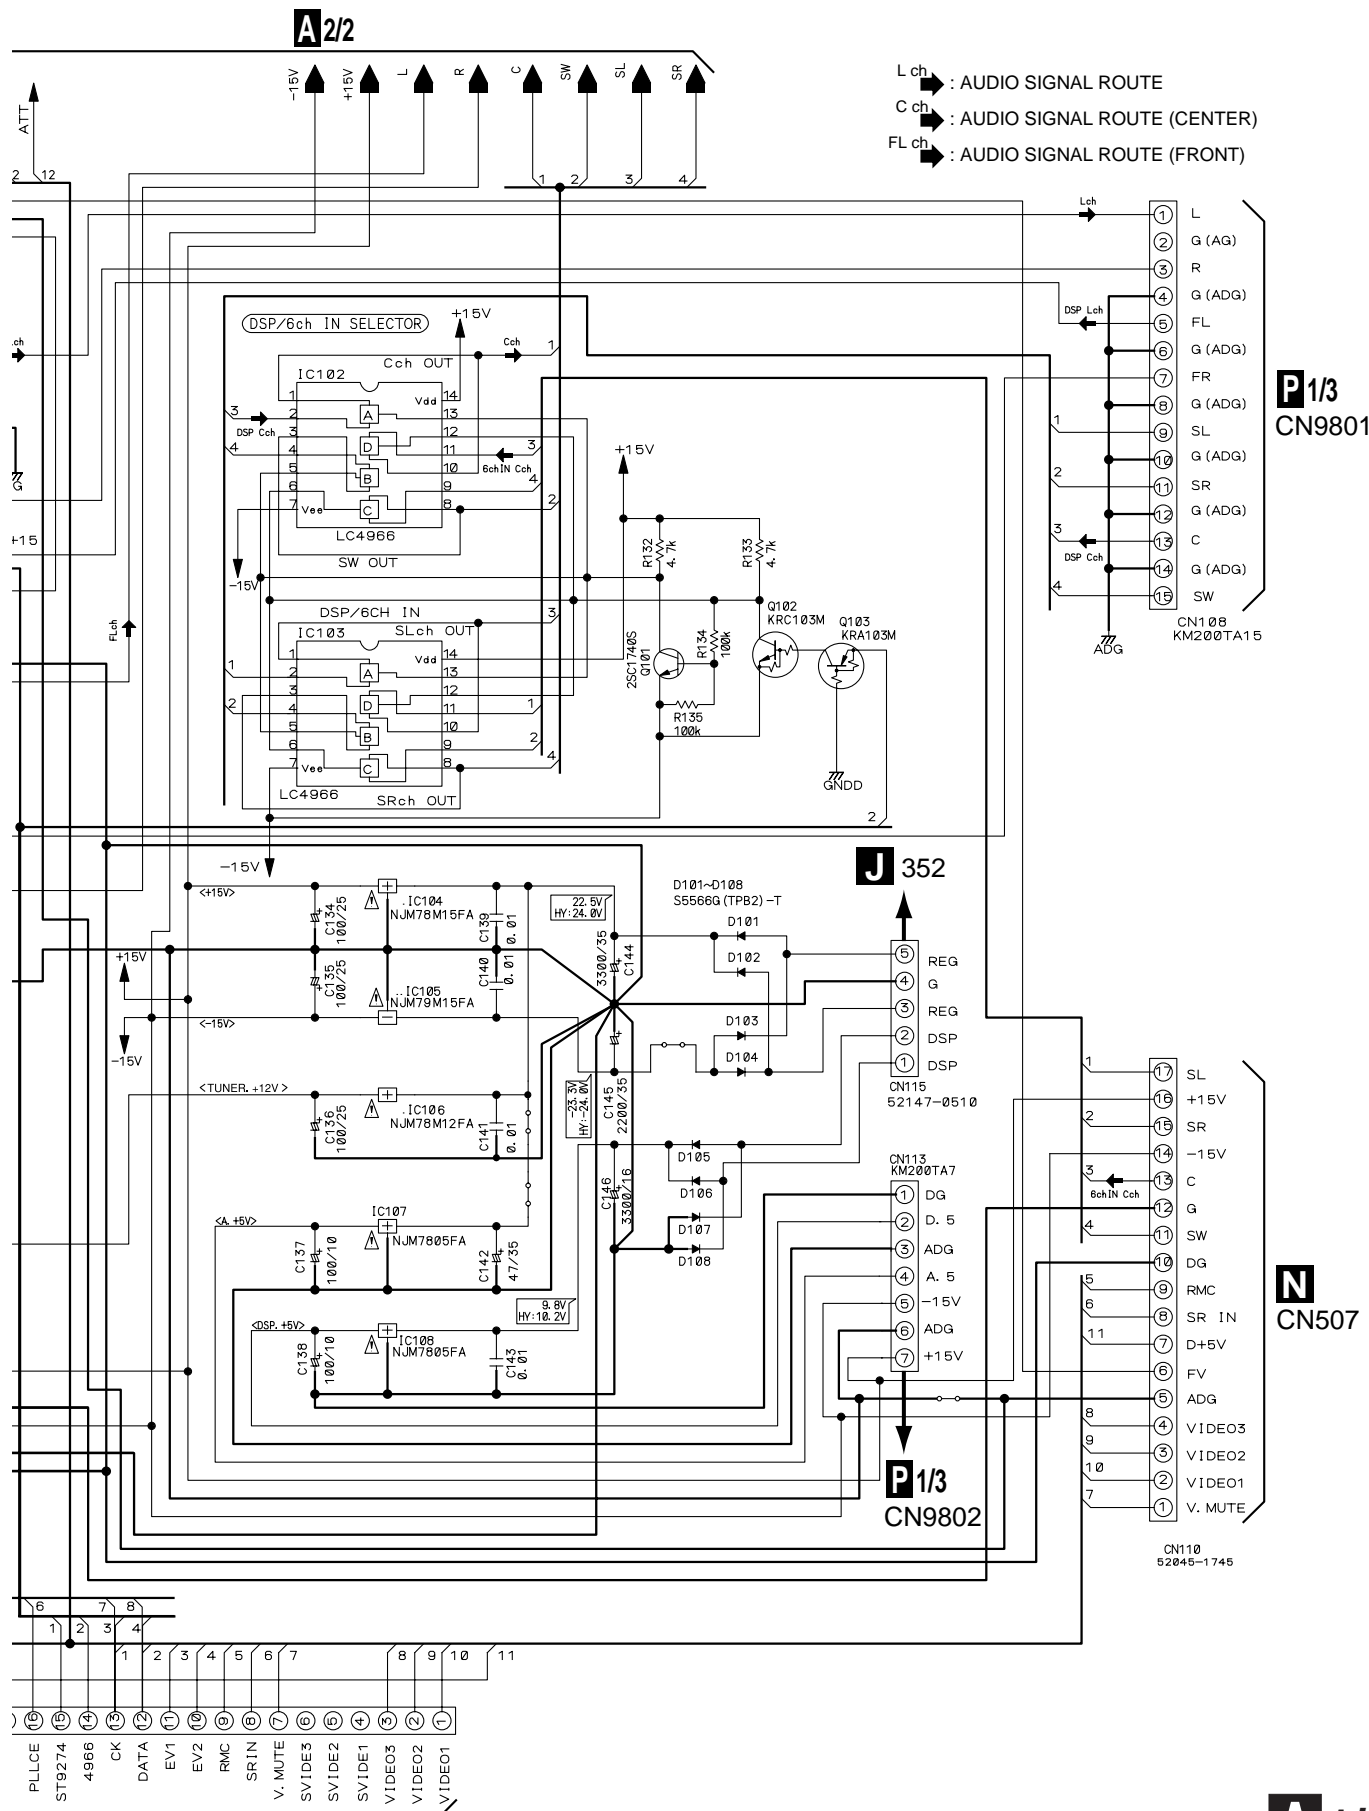

3.3 INPUT ASSY (2/2)

**A** 2/2 INPUT ASSY(2/2)  
(AWX7207)

• E. VOL BLOCK

A

B




C

D


**A** 1/2

**A** 1/2


**A** 1/2

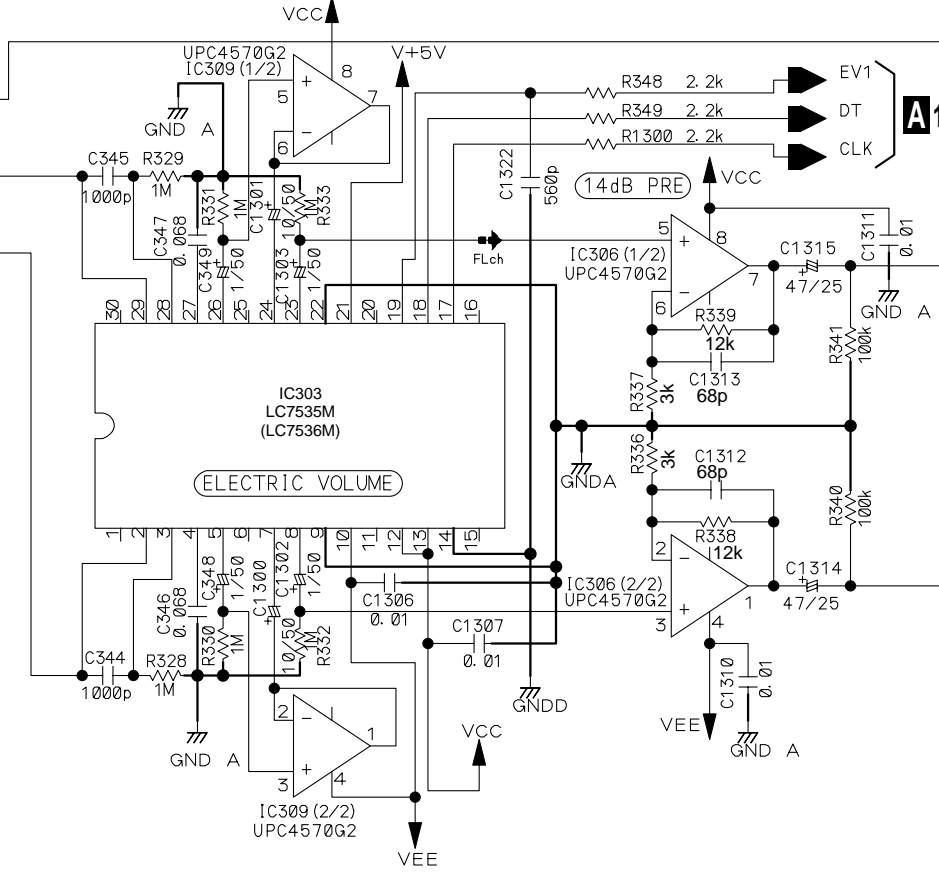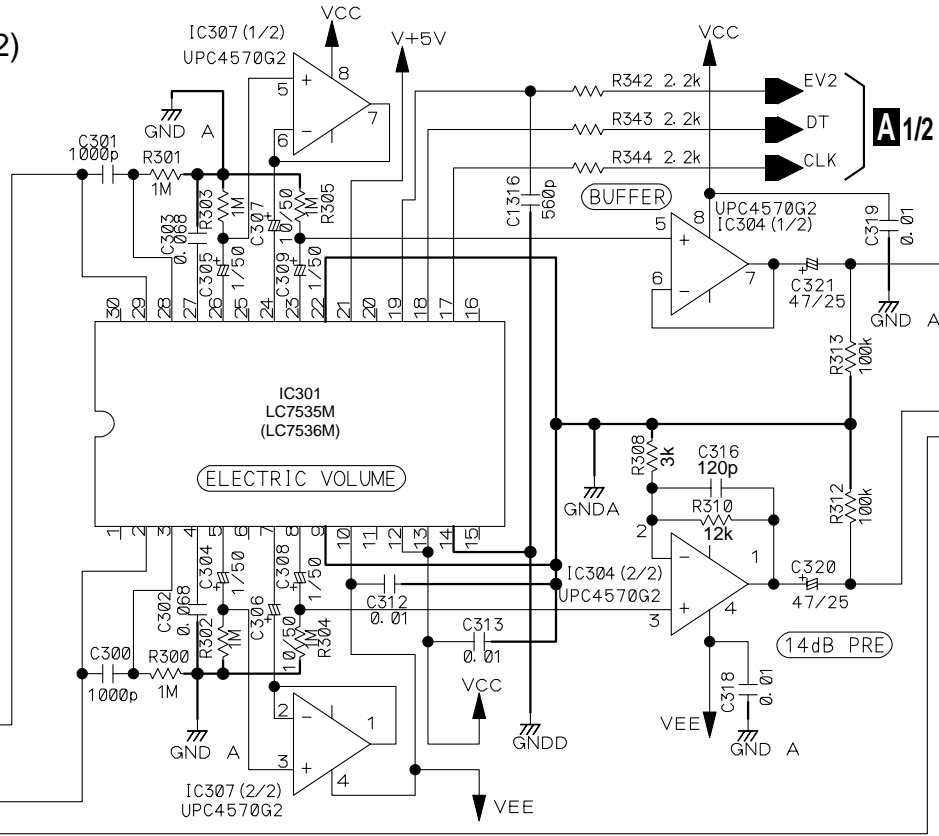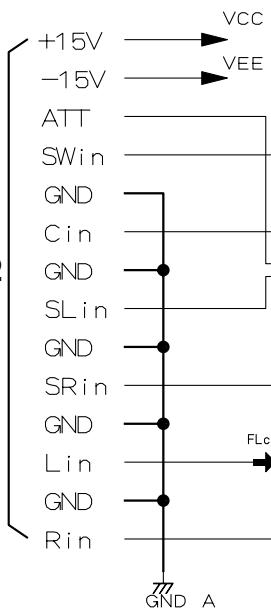


- NOTE
- RESISTORS  
Unit: k- $\Omega$ , M- $\Omega$  or  $\Omega$  unless otherwise noted.  
Rated power: 1/10W unless otherwise noted.  
Tolerance: (J) $\pm$ 5% unless otherwise noted.
  - CAPACITORS  
Unit: p-pF or  $\mu$ F unless otherwise noted.  
Ratings: Capacity ( $\mu$ F)/Voltage (V) unless otherwise noted.  
Rated Voltage: 50V expect for electrolytic capacitors.
  - DIODES  
Indicated in 1S355-TRB

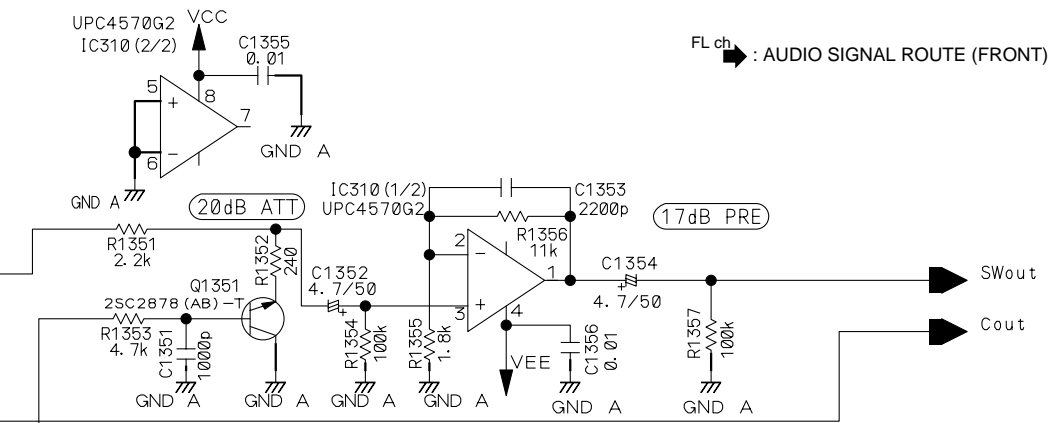

FL ch → AUDIO SIGNAL ROUTE (FRONT)

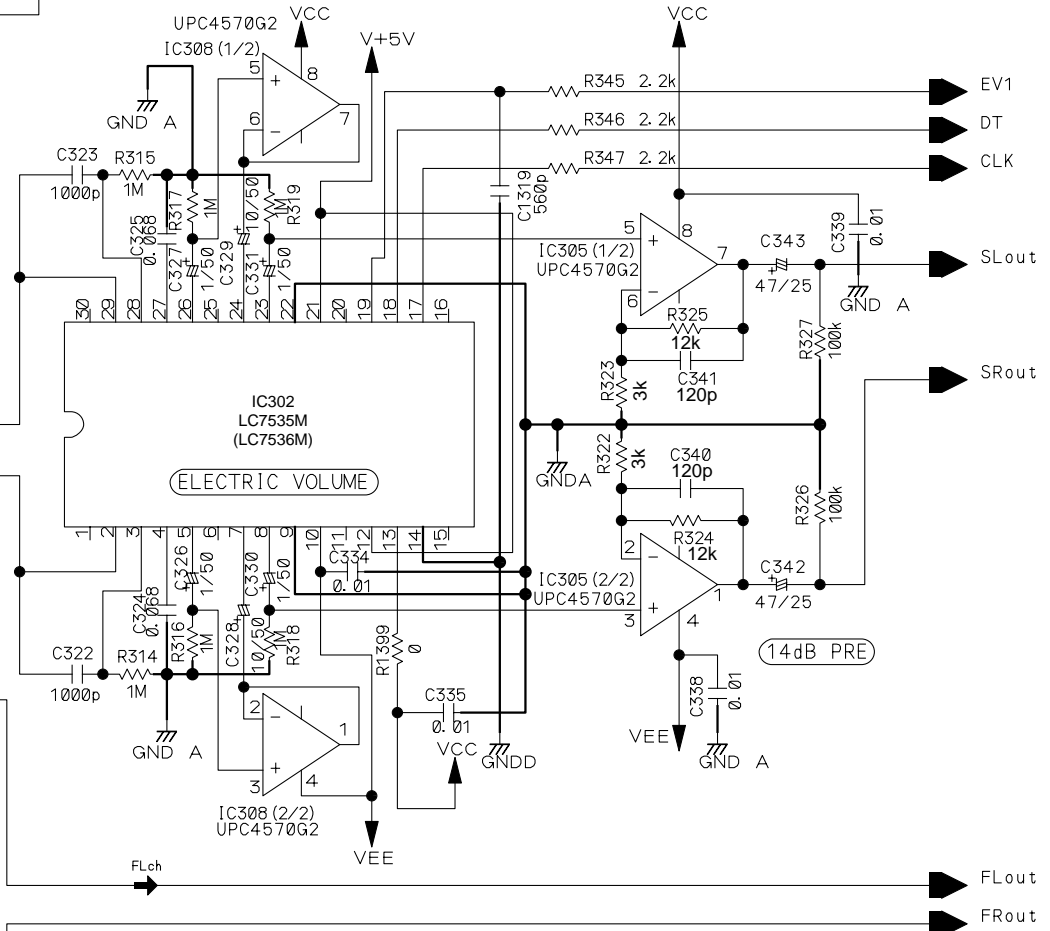

A1/2

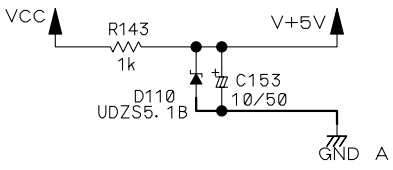

3.4 FRONT and POWER SW ASSEMBLIES


A1/2 CN111

B FRONT ASSY (AWX7212)

- NOTE
- RESISTORS  
Unit: k- $\Omega$ , M- $\Omega$  or  $\Omega$  unless otherwise noted.  
Rated power: 1/10W unless otherwise noted.  
Tolerance: (J) $\pm 5\%$  unless otherwise noted.
  - CAPACITORS  
Unit: p-pF or #F unless otherwise noted.  
Ratings: Capacity ( $\mu$ F)/Voltage (V) unless otherwise noted.  
Rated Voltage: 50V except for electrolytic capacitors.  
JA:CE:JA
  - DIODES  
Indicated in 1SS355-TRB.

C POWER SW ASSY (AWX7222)


P2/3 CN9371

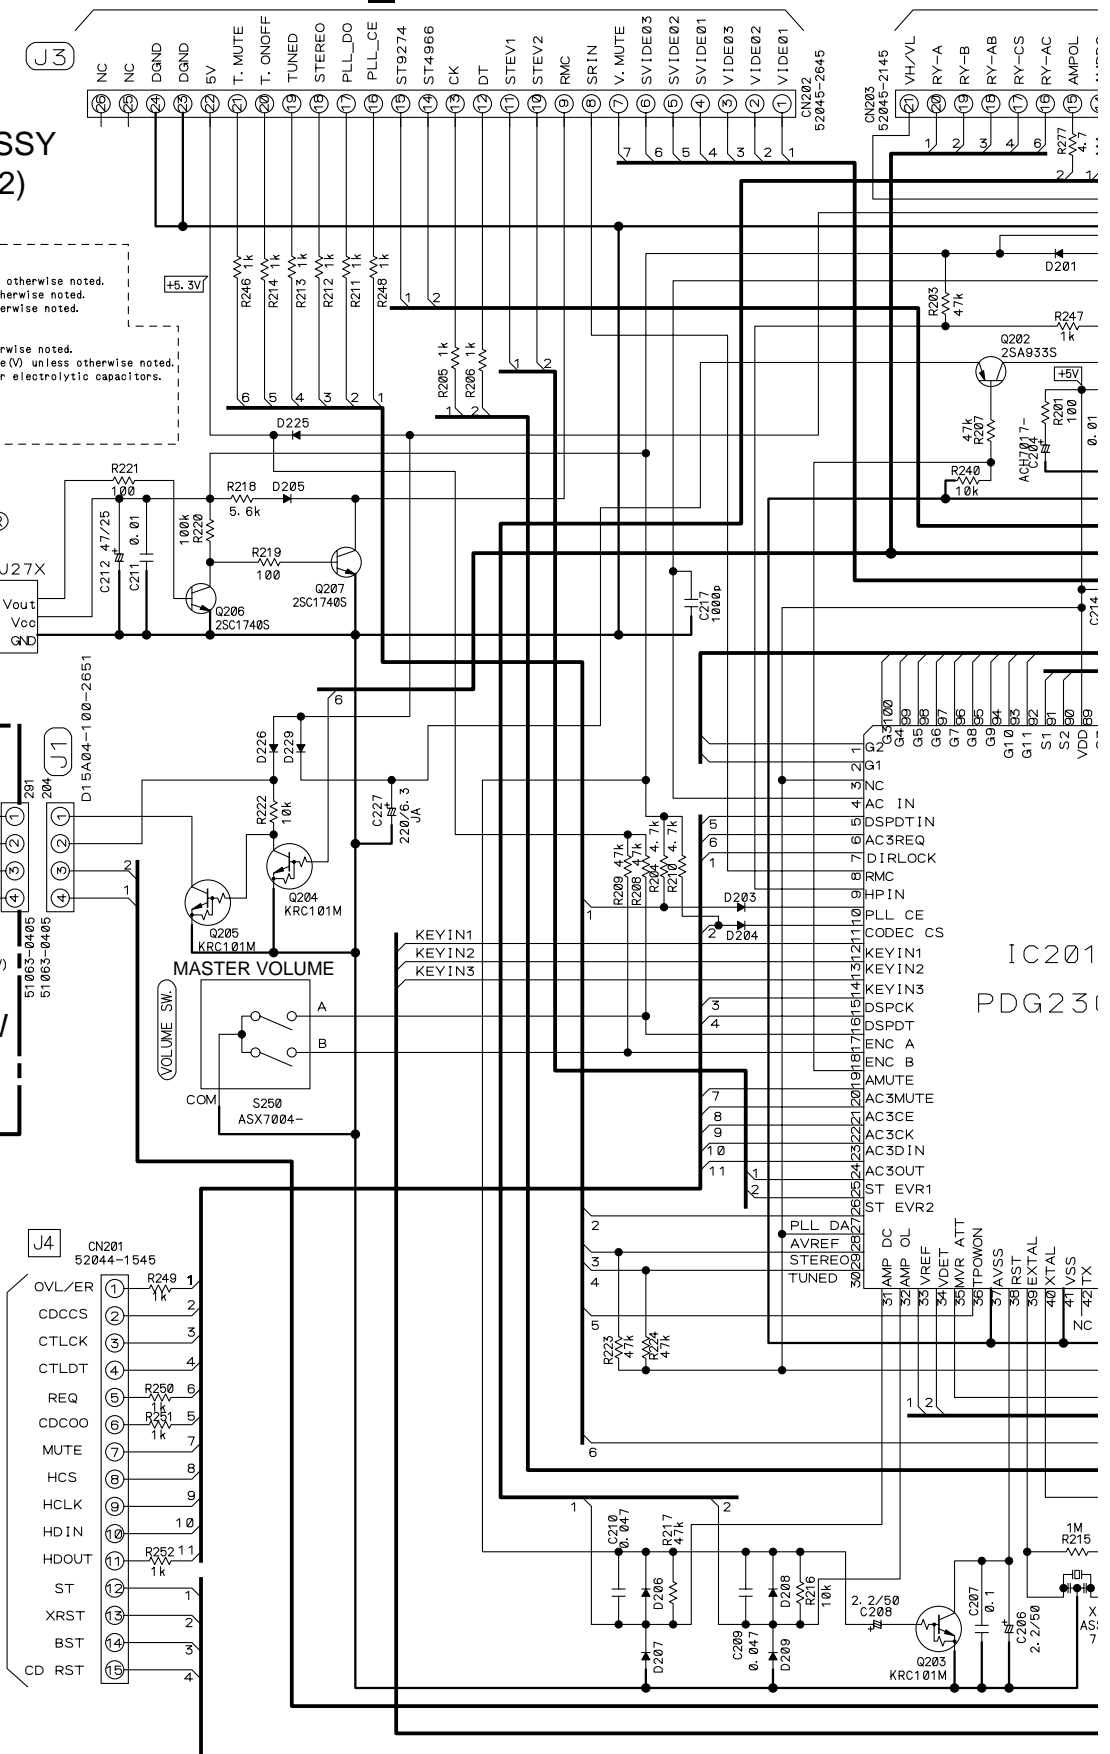

IC201 PDG231



D/2/2 CN401

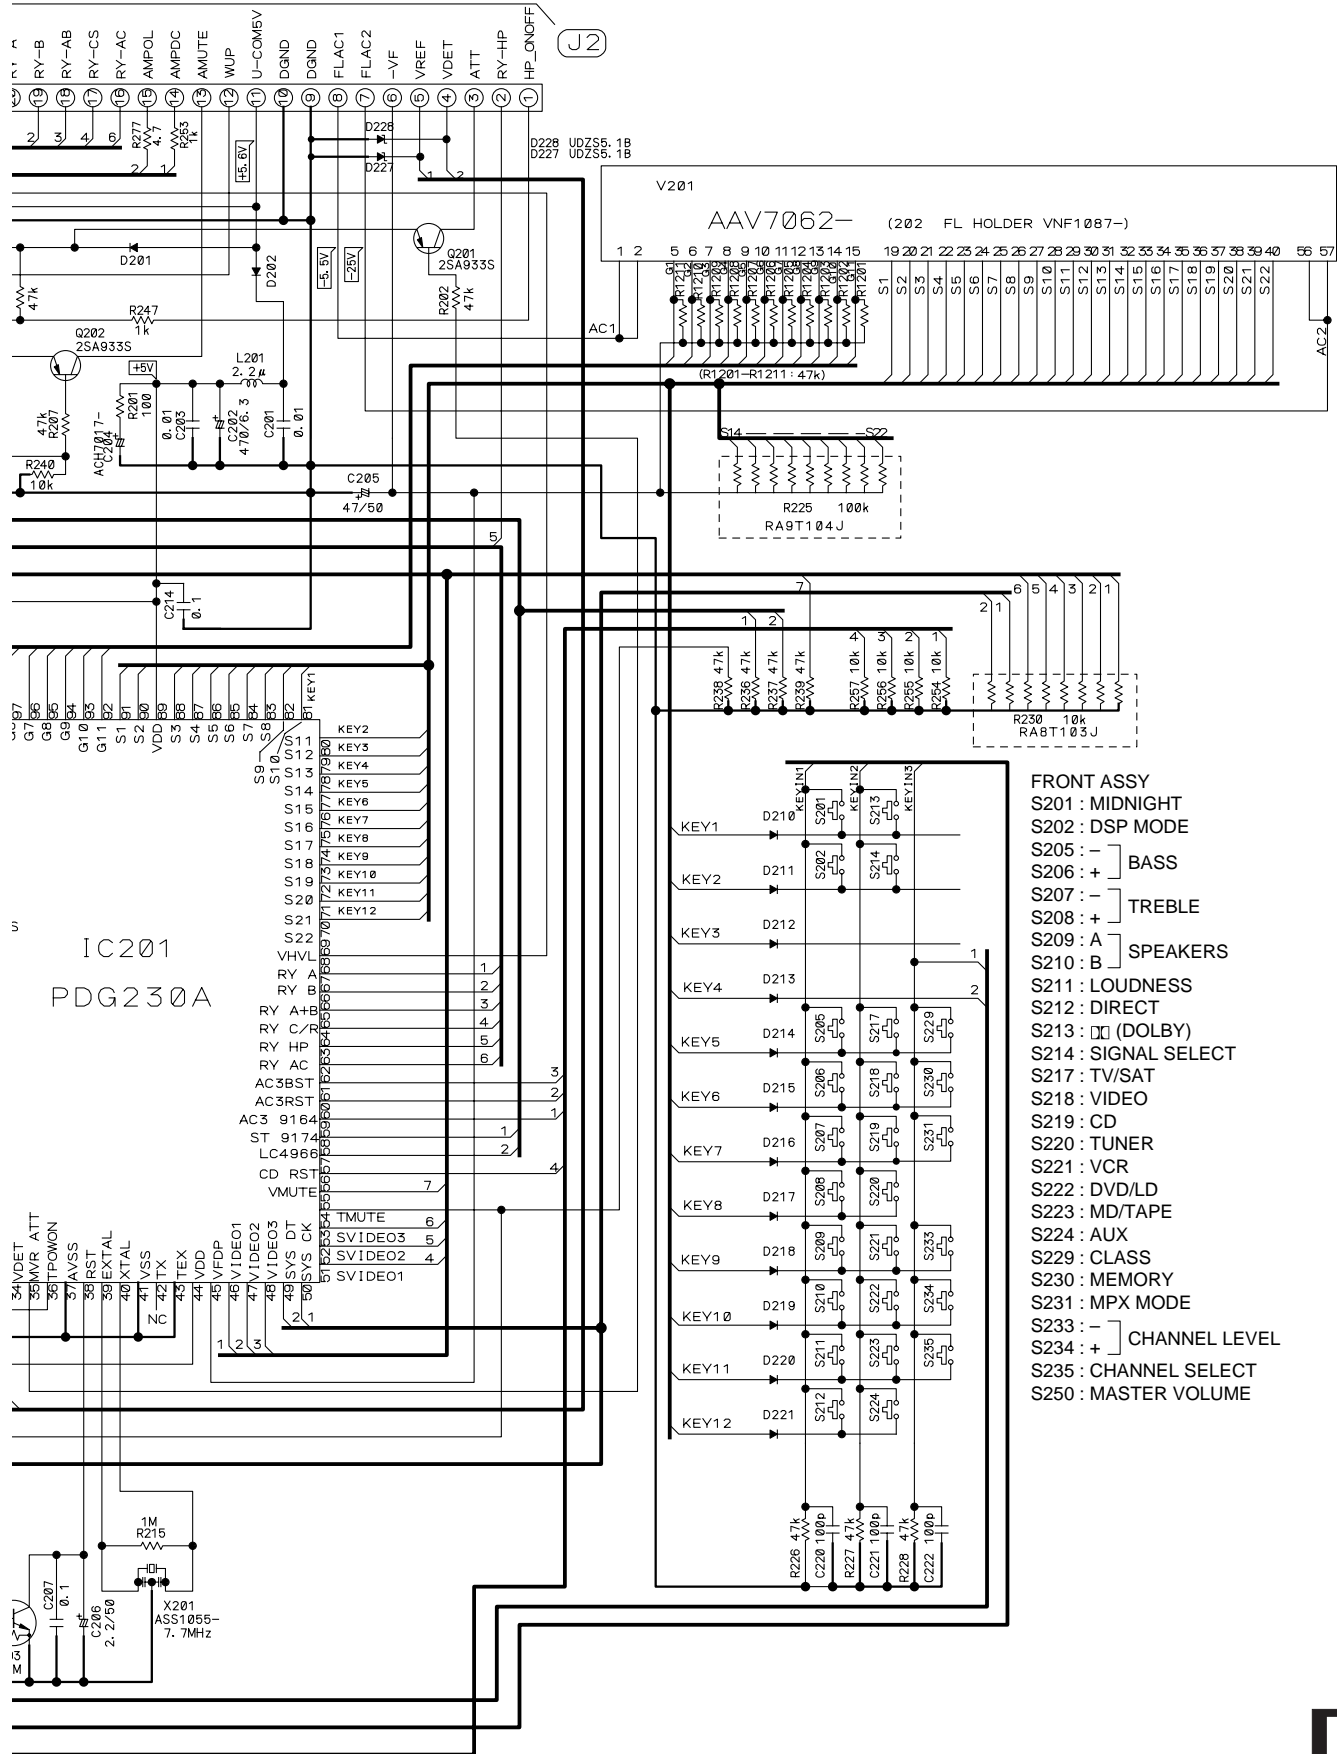

- FRONT ASSY
- S201 : MIDNIGHT
  - S202 : DSP MODE
  - S205 : -
  - S206 : +
  - S207 : -
  - S208 : +
  - S209 : A
  - S210 : B
  - S211 : LOUDNESS
  - S212 : DIRECT
  - S213 : [ ] (DOLBY)
  - S214 : SIGNAL SELECT
  - S217 : TV/SAT
  - S218 : VIDEO
  - S219 : CD
  - S220 : TUNER
  - S221 : VCR
  - S222 : DVD/LD
  - S223 : MD/TAPE
  - S224 : AUX
  - S229 : CLASS
  - S230 : MEMORY
  - S231 : MPX MODE
  - S233 : -
  - S234 : +
  - S235 : CHANNEL SELECT
  - S250 : MASTER VOLUME

3.5 AMP (1/2), F.SP.CONNECT, R.C.SP.CONNECT, FRONT SP. and REAR SP ASSEMBLIES

A

B


C

D

- NOTE ---
- RESISTORS  
Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.  
Rated power: 1/4W unless otherwise noted.  
Tolerance: (J)±5% unless otherwise noted.
  - CAPACITORS  
Unit: p-pF or μF unless otherwise noted.  
Ratings:  
Capacity (μF)/Voltage (V) unless otherwise noted.  
Rated Voltage: 50V except for electrolytic capacitors.
  - DIODES  
Indicated in 1SS135-T


**A1/2** CN112

- L
  - R
  - C
  - S
  - SR
  - SW
  - +16
  - ATT
  - 15
- D20PYY1415E  
405  
51048-1400

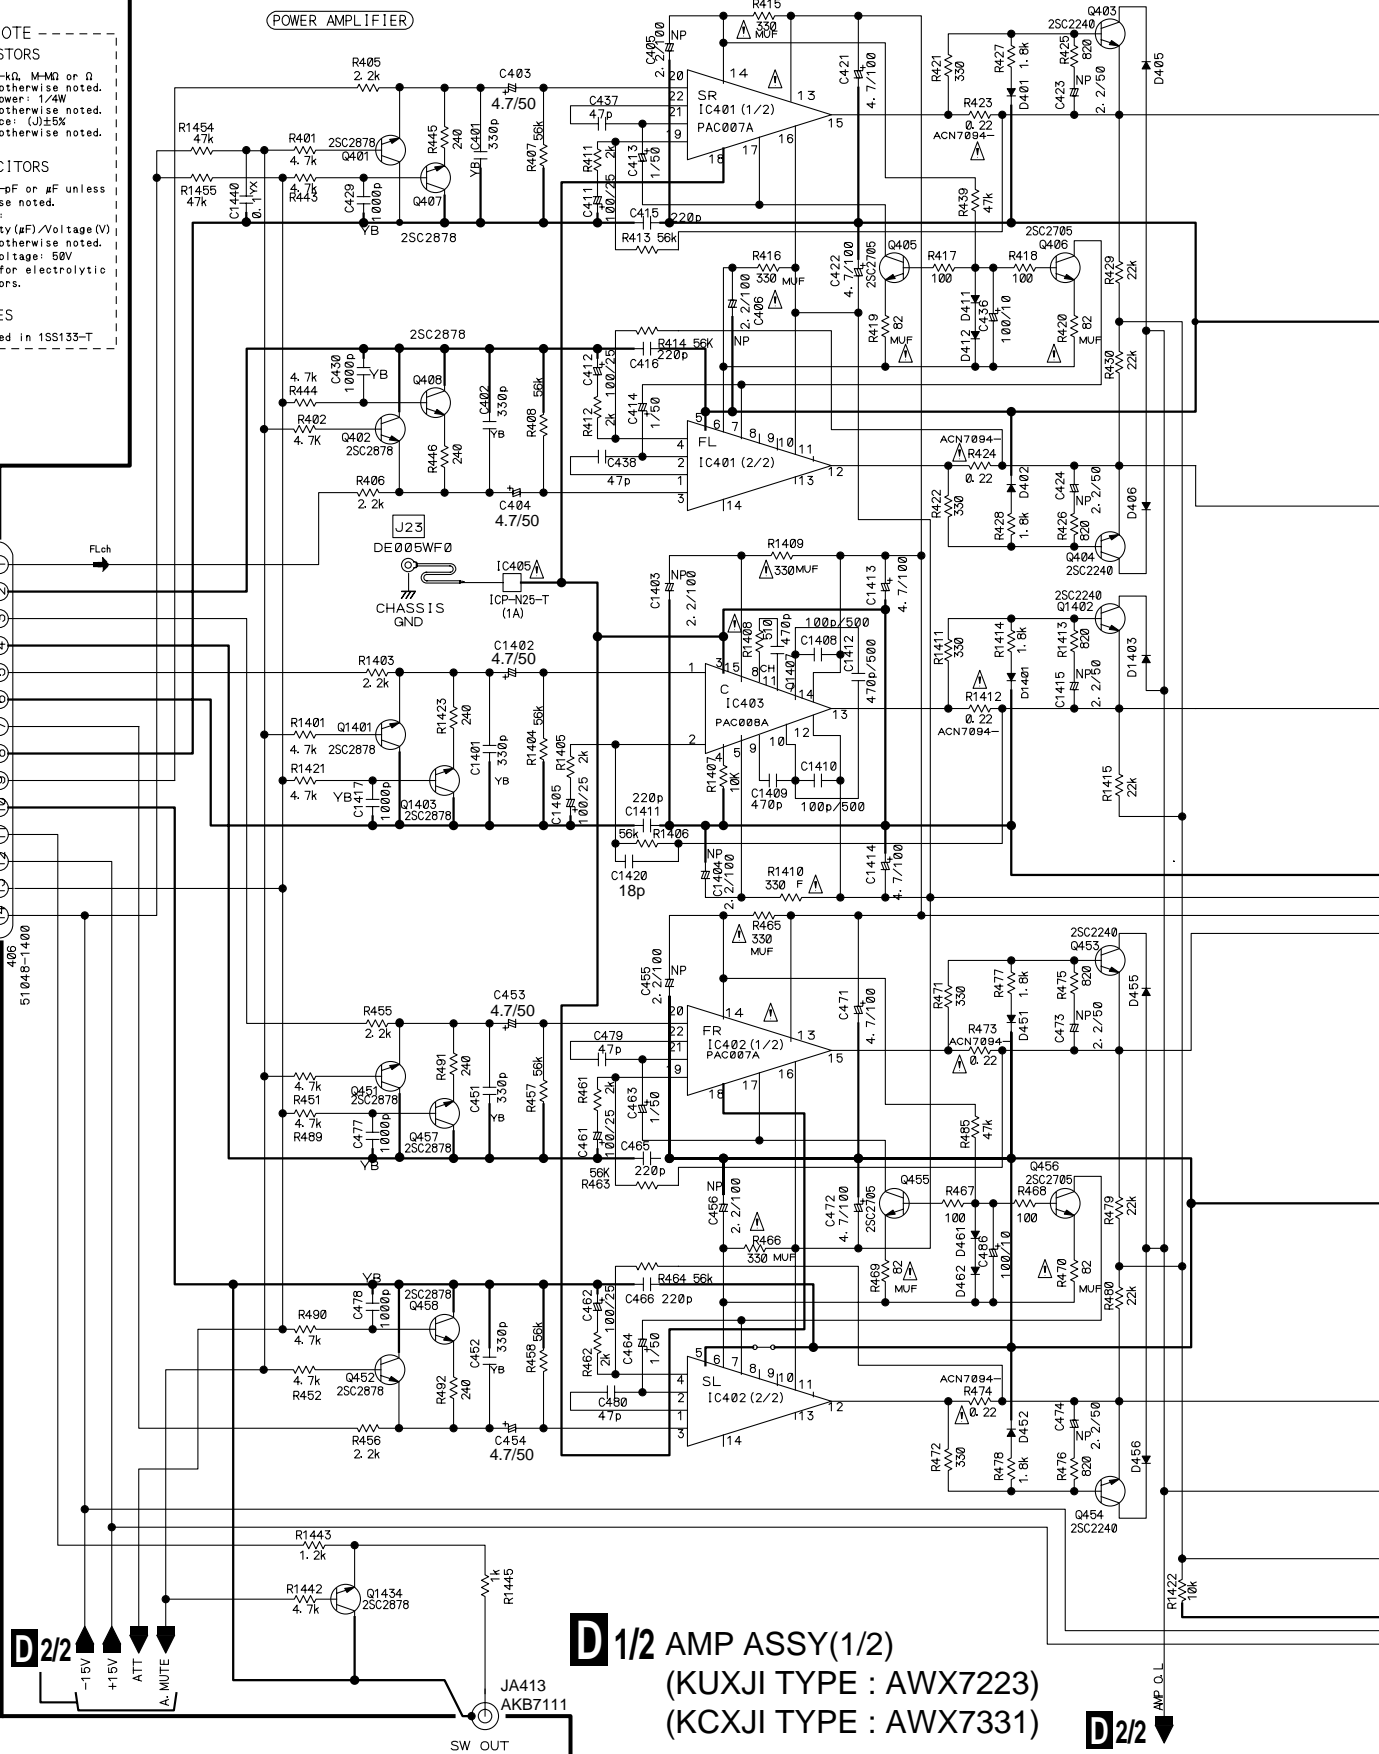




**D 1/2** AMP ASSY (1/2)  
(KUXJI TYPE : AWX7223)  
(KCXJI TYPE : AWX7331)

**D2/2**

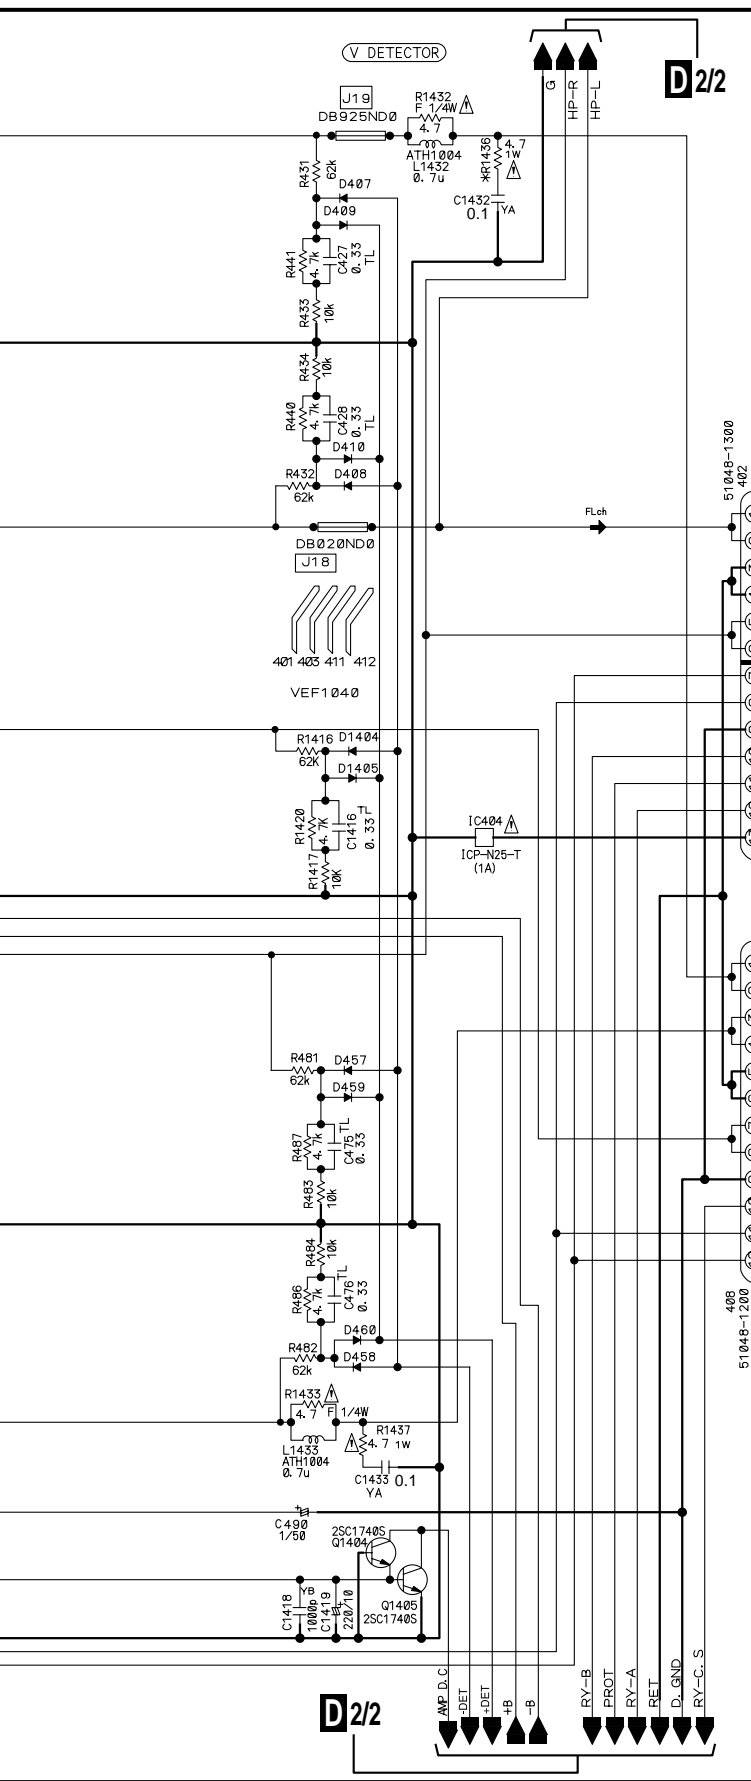

FL ch → AUDIO SIGNAL ROUTE (FRONT)

**E** F.SP. CONNECT ASSY (AWX7285)

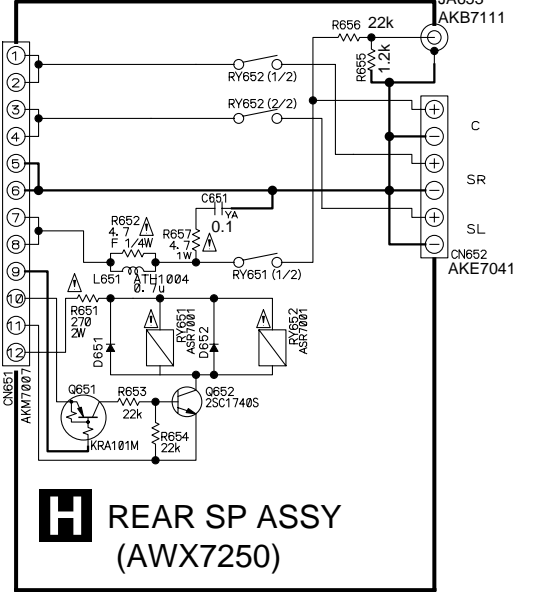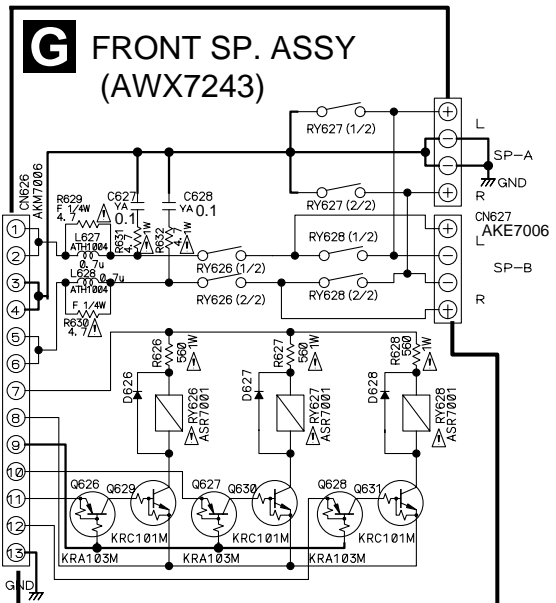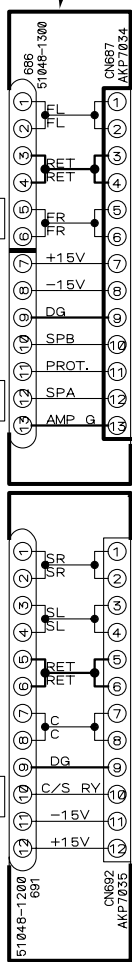

**F** R.C.SP. CONNECT ASSY (AWX7286)

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE NO. ICP-N25, MFD BY ROHM CO., LTD. FOR IC404 AND IC405.

### 3.6 AMP (2/2), HEADPHONE, TRANS 2, TRANS 1, BARRIER and FET ASSEMBLIES

A

B

C


D

D1/2

B CN203

D2/2

AMP ASSY(2/2)  
(KUXJI TYPE : AWX7223)  
(KCXJI TYPE : AWX7331)

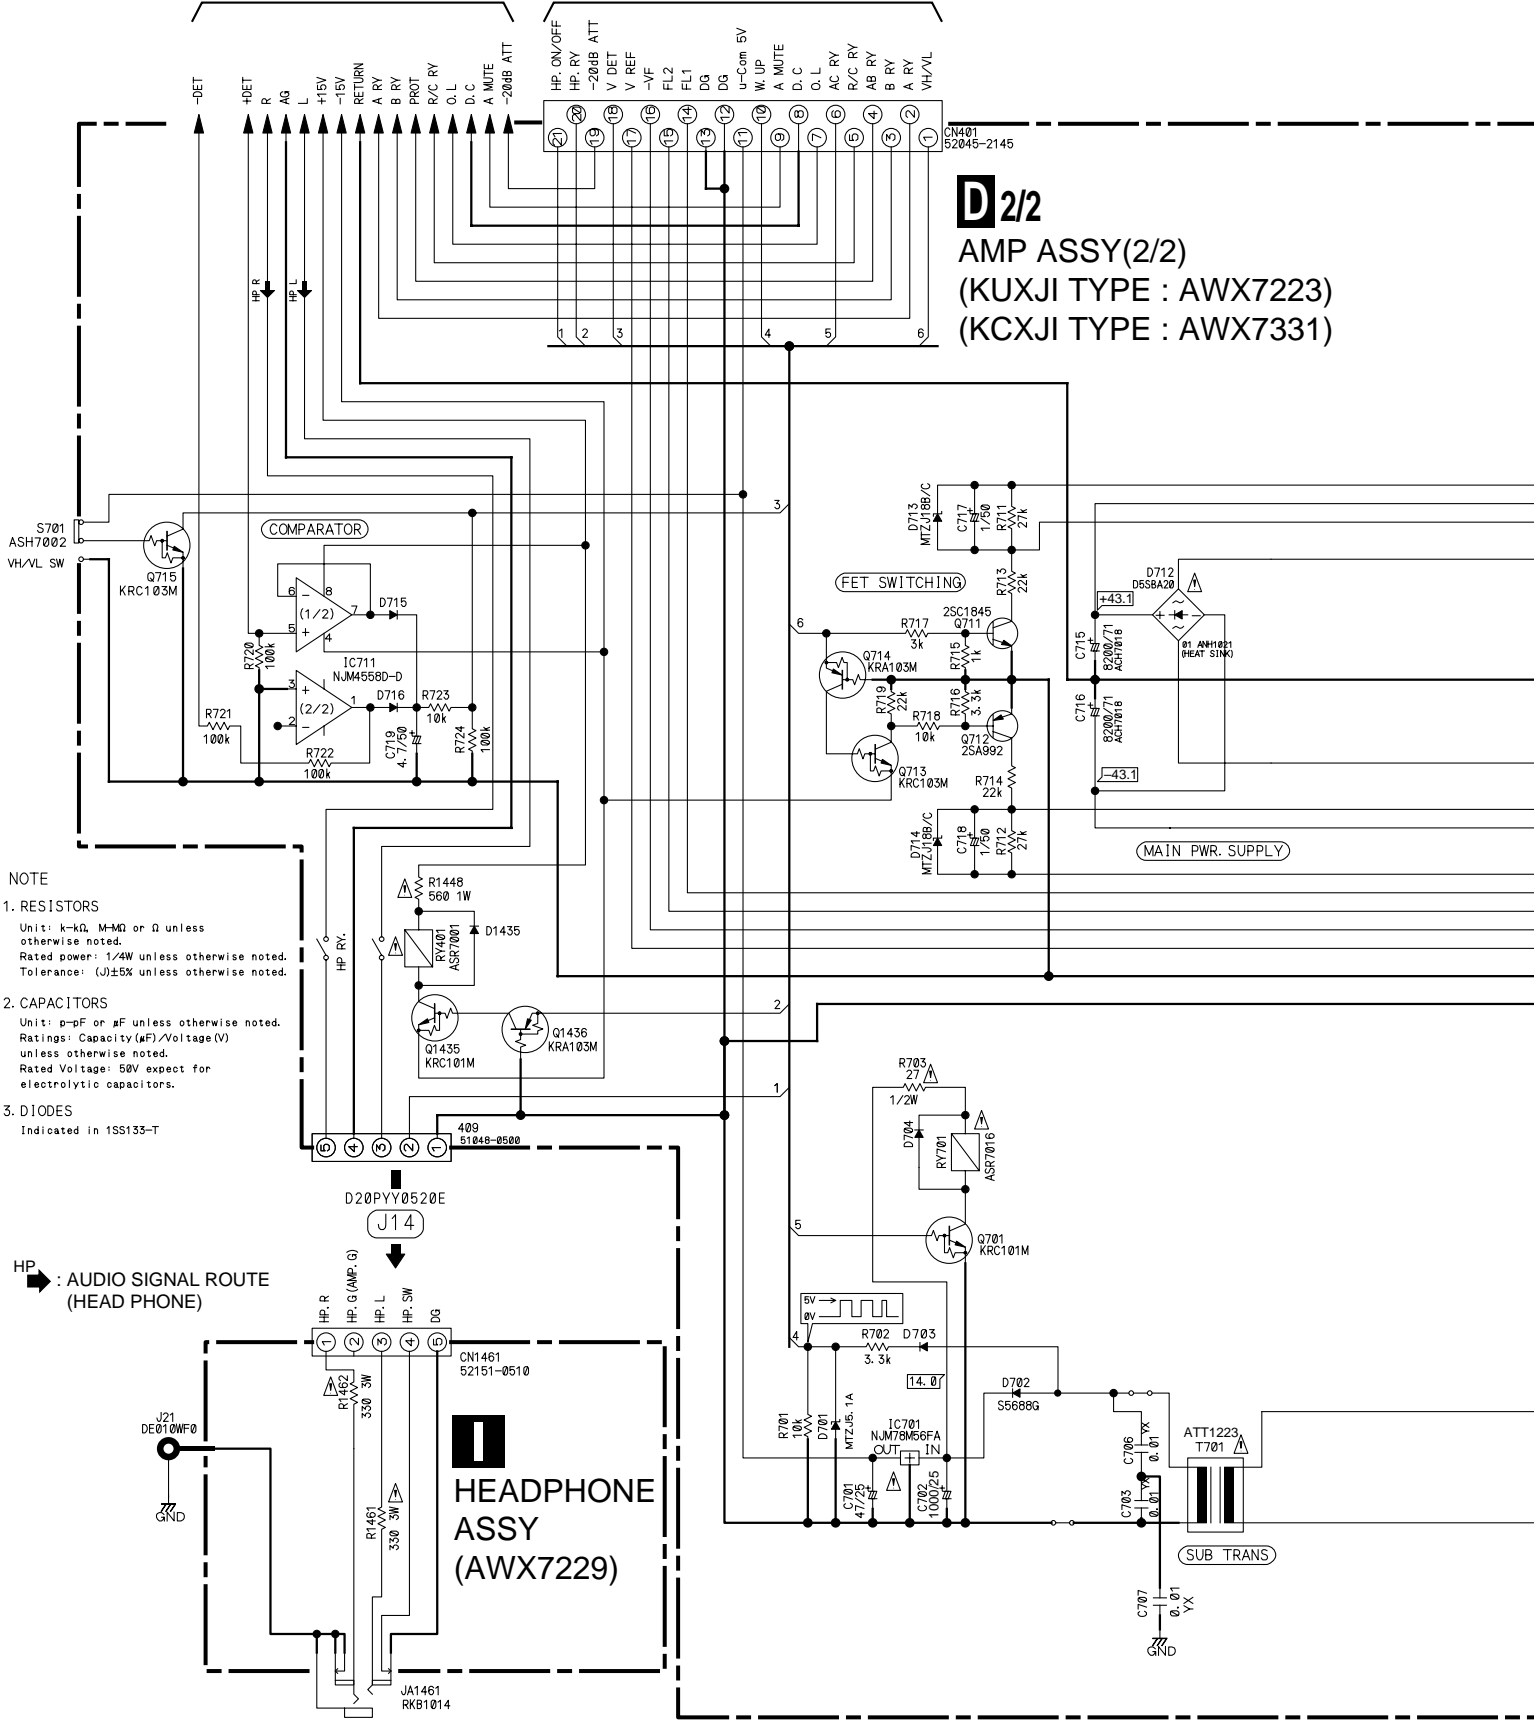


- NOTE**
- RESISTORS**  
Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.  
Rated power: 1/4W unless otherwise noted.  
Tolerance: (J)±5% unless otherwise noted.
  - CAPACITORS**  
Unit: p-pF or μF unless otherwise noted.  
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.  
Rated Voltage: 50V expect for electrolytic capacitors.
  - DIODES**  
Indicated in 1SS133-T





HP : AUDIO SIGNAL ROUTE (HEAD PHONE)

HEADPHONE ASSY (AWX7229)



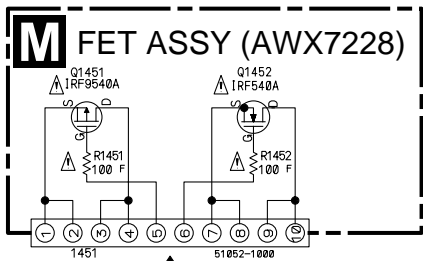


J11 DYY10-200-2651

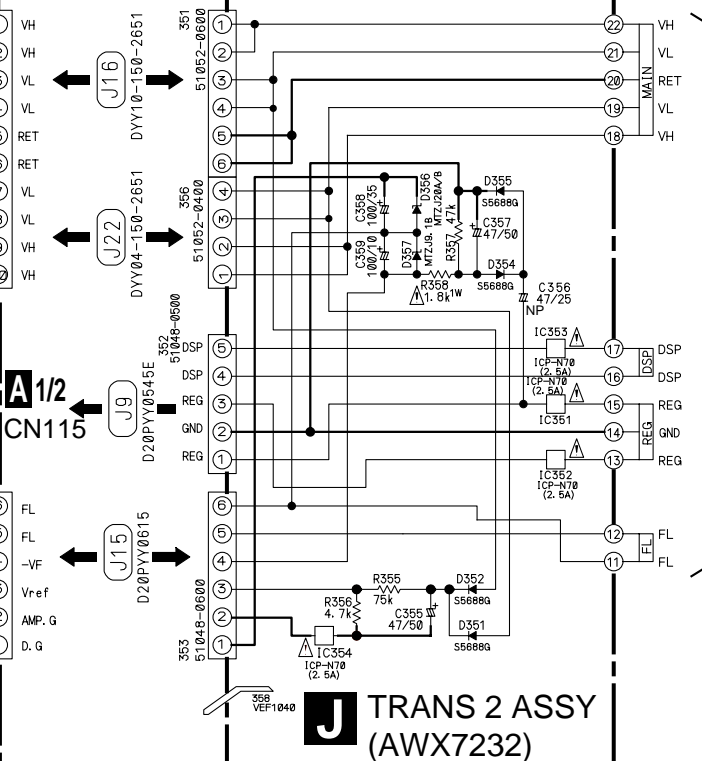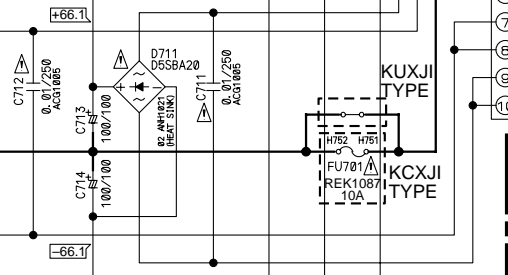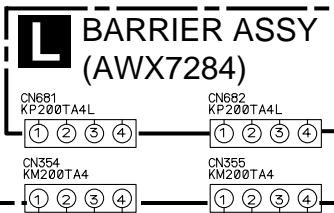

A/2 CN115

J15 D20PY0615

J9 D20PY0645E

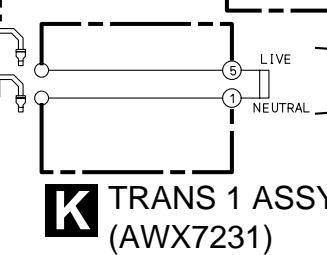


MAIN TRANS.

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE NO. ICP-N70, MFD BY ROHM CO., LTD. FOR IC351 - IC354.

NOTE FOR FUSE REPLACEMENT  
**CAUTION** - FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE WITH SAME TYPE AND RATINGS ONLY.

3.7 VIDEO ASSY


VIDEO ASSY (AWX7234)

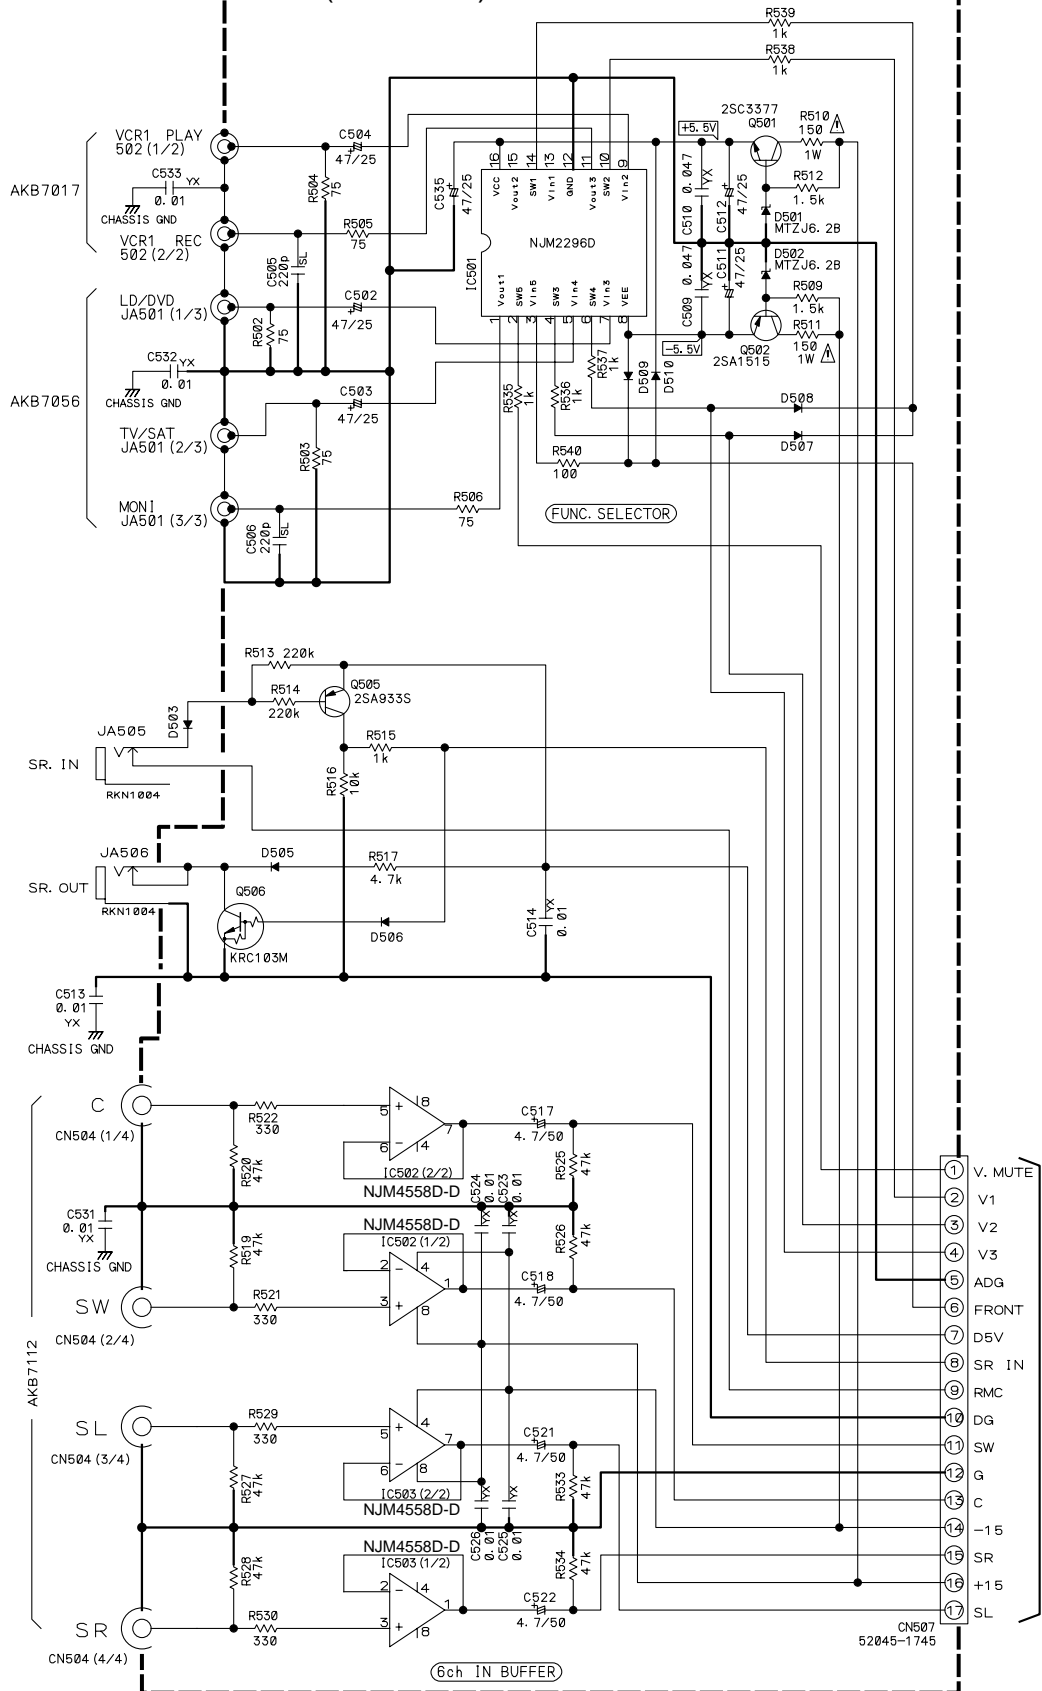

A/2 CN110




### 3.8 FRONT VIDEO ASSY

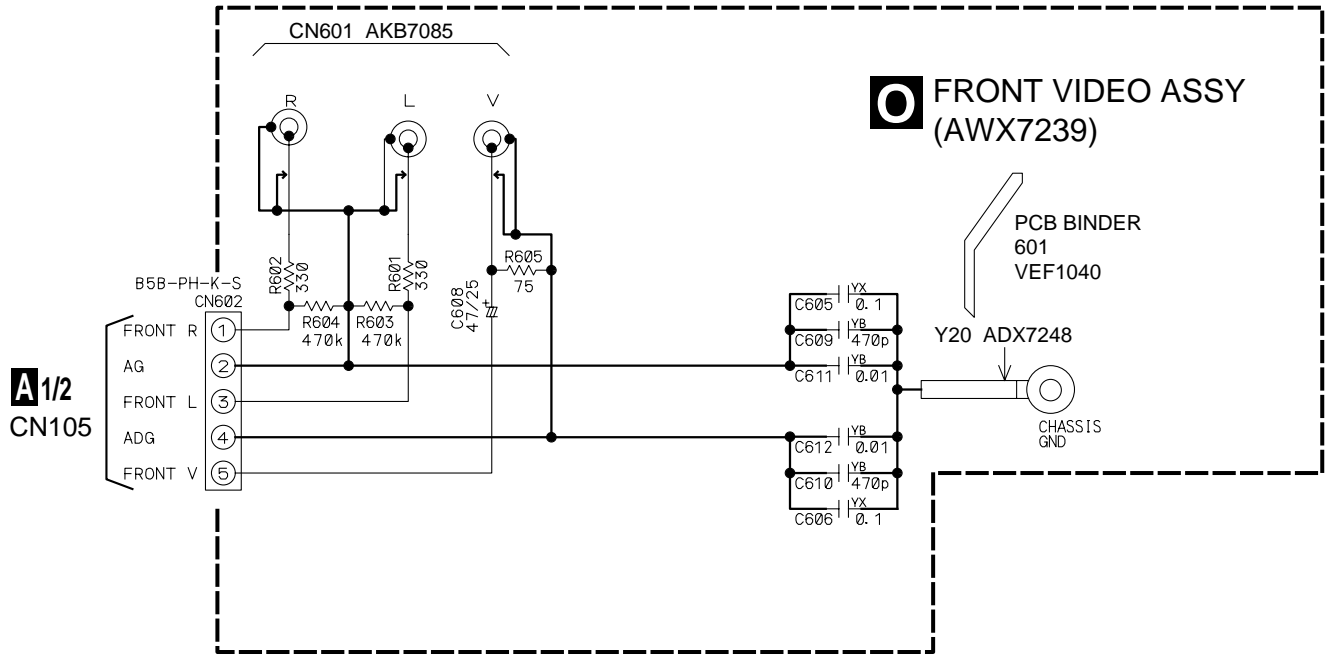


3.9 DOLBY DIGITAL ASSY (1/3)

A

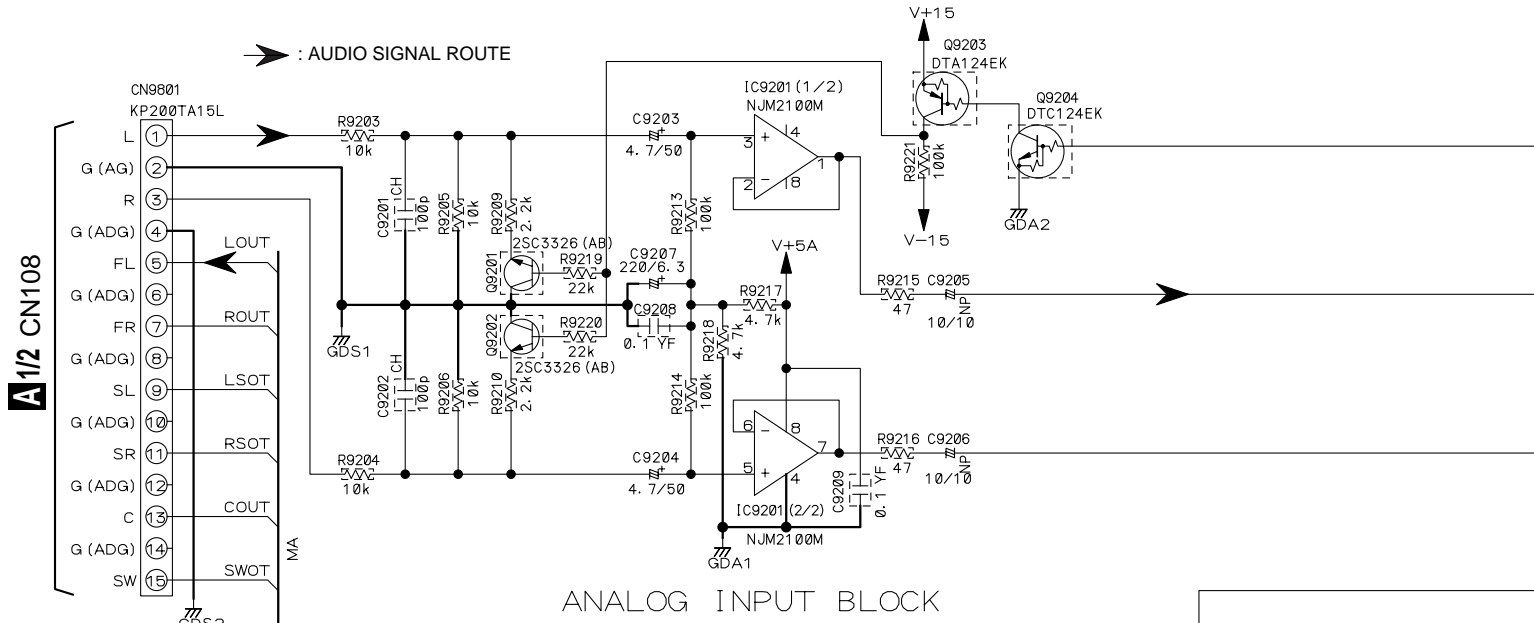


ANALOG INPUT BLOCK

B

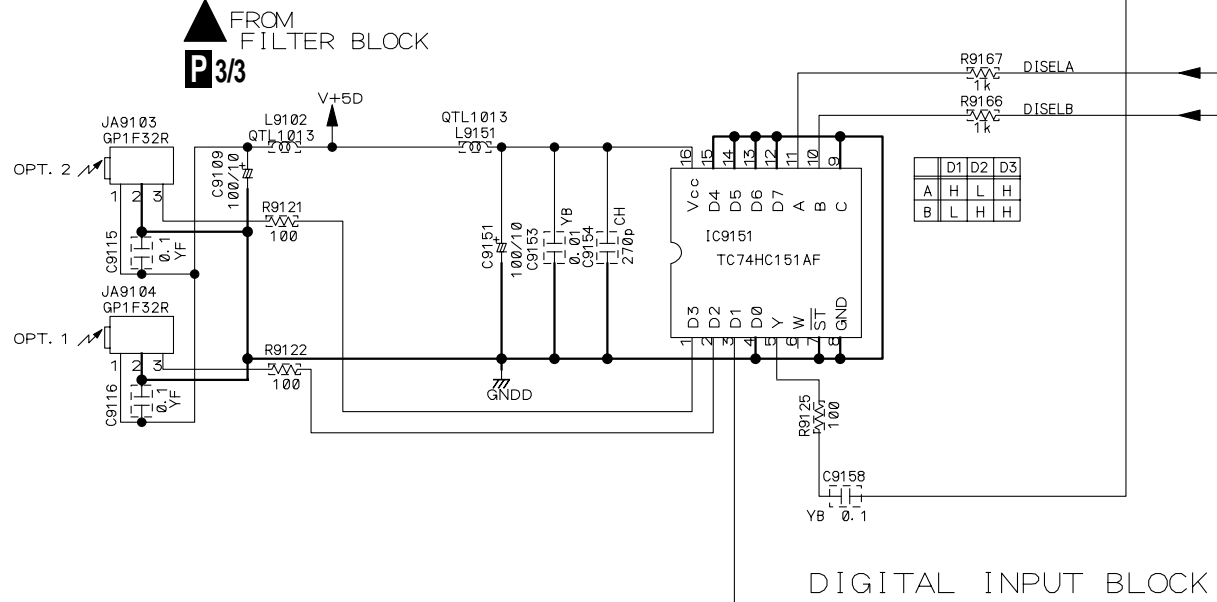

DIGITAL INPUT BLOCK

C

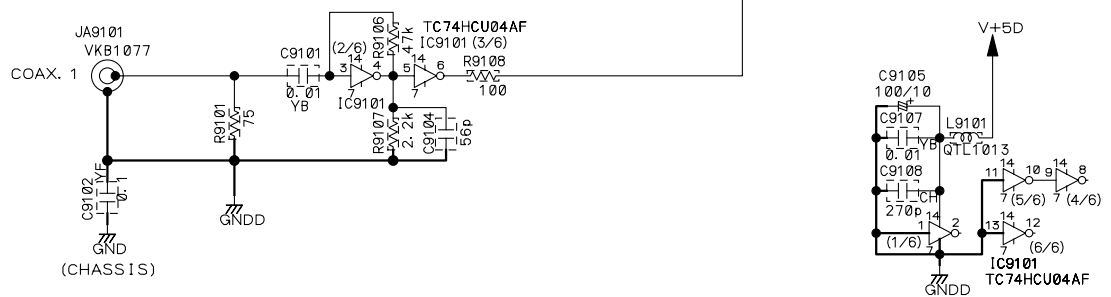


(CHASSIS)

D


# P1/3 DOLBY DIGITAL ASSY(1/3) (AWX7333)

## • INPUT & CODEC BLOCK

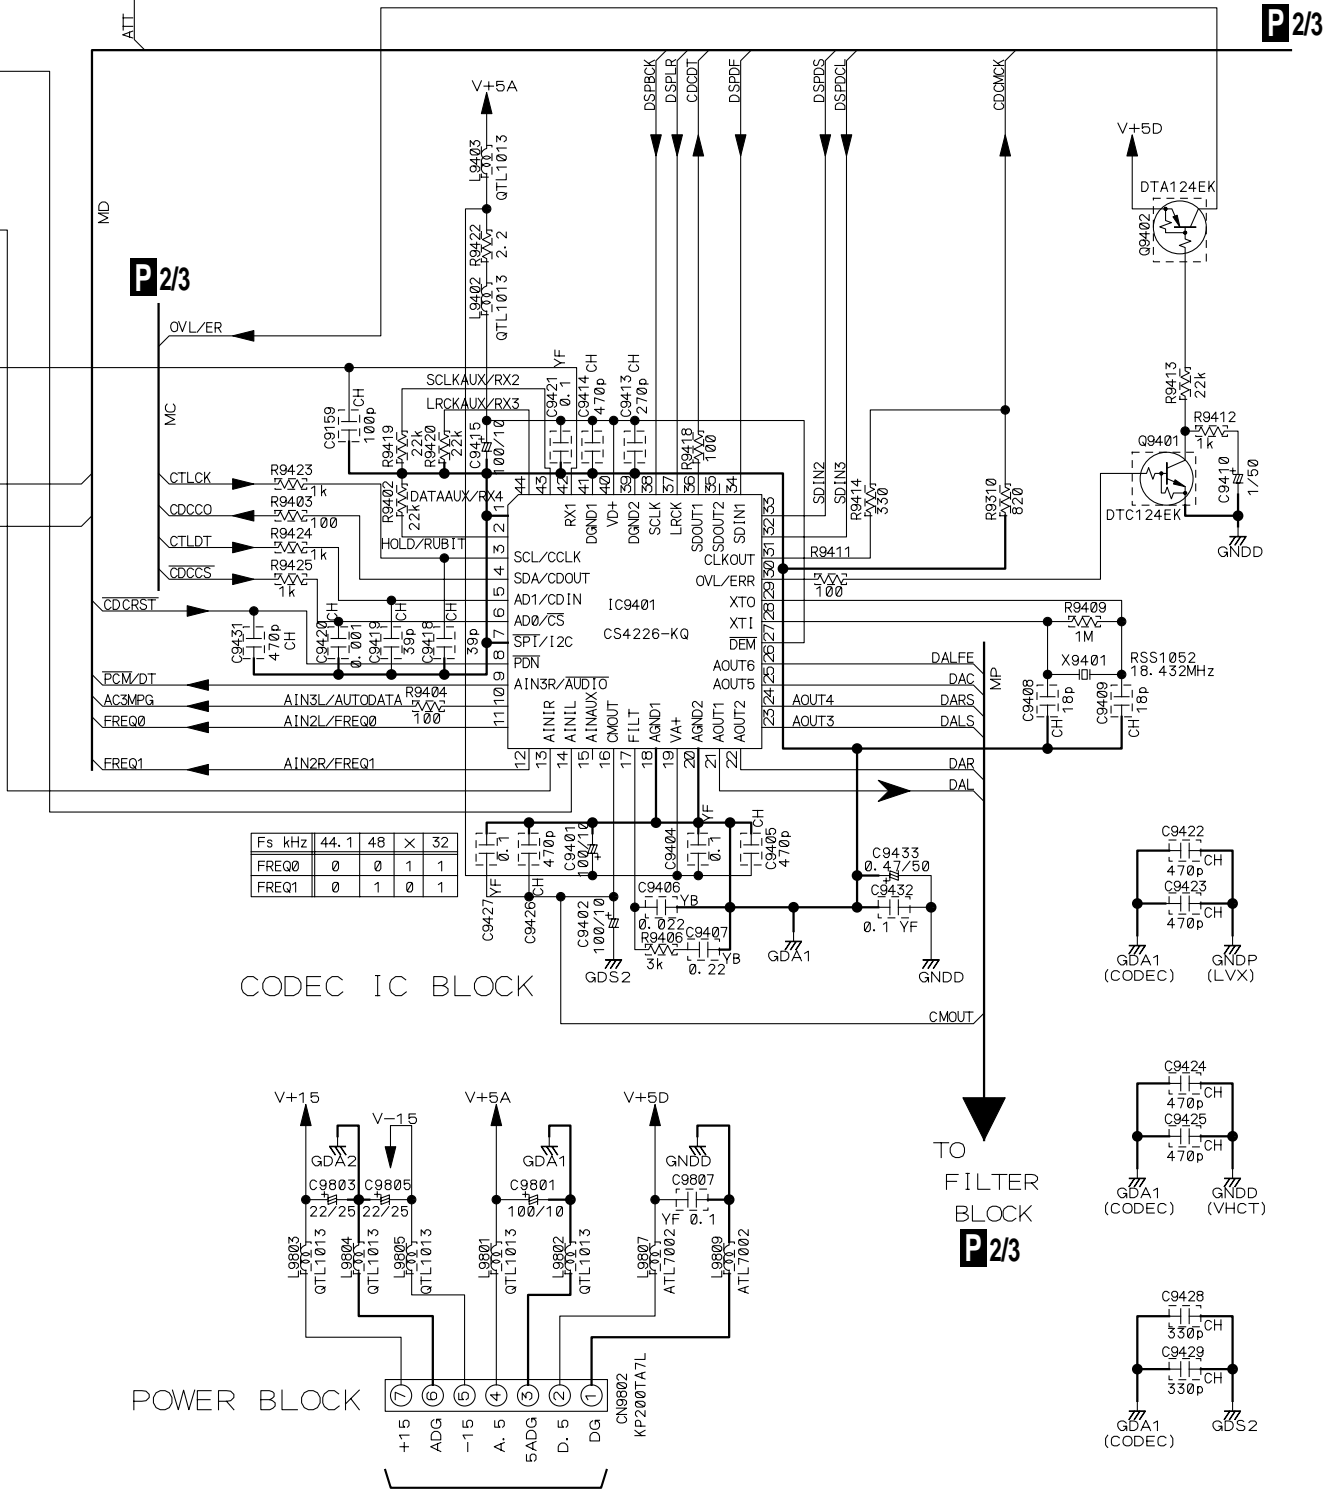

Fs kHz	44.1	48	X	32
FREQ0	0	0	1	1
FREQ1	0	1	0	1


CODEC IC BLOCK

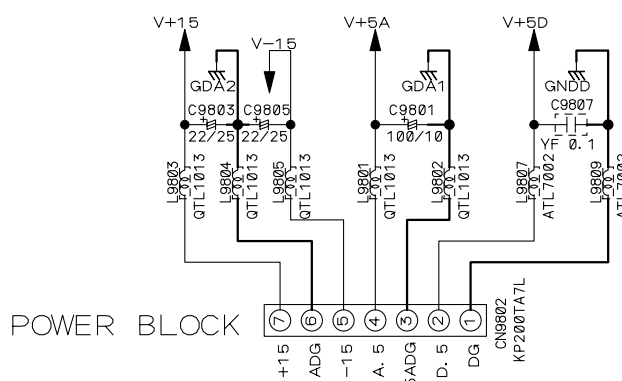


POWER BLOCK

### A1/2 CN113

TO FILTER BLOCK  
P2/3

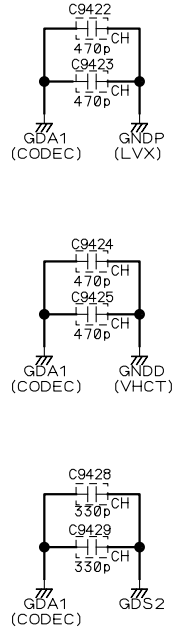

3.10 DOLBY DIGITAL ASSY (2/3)

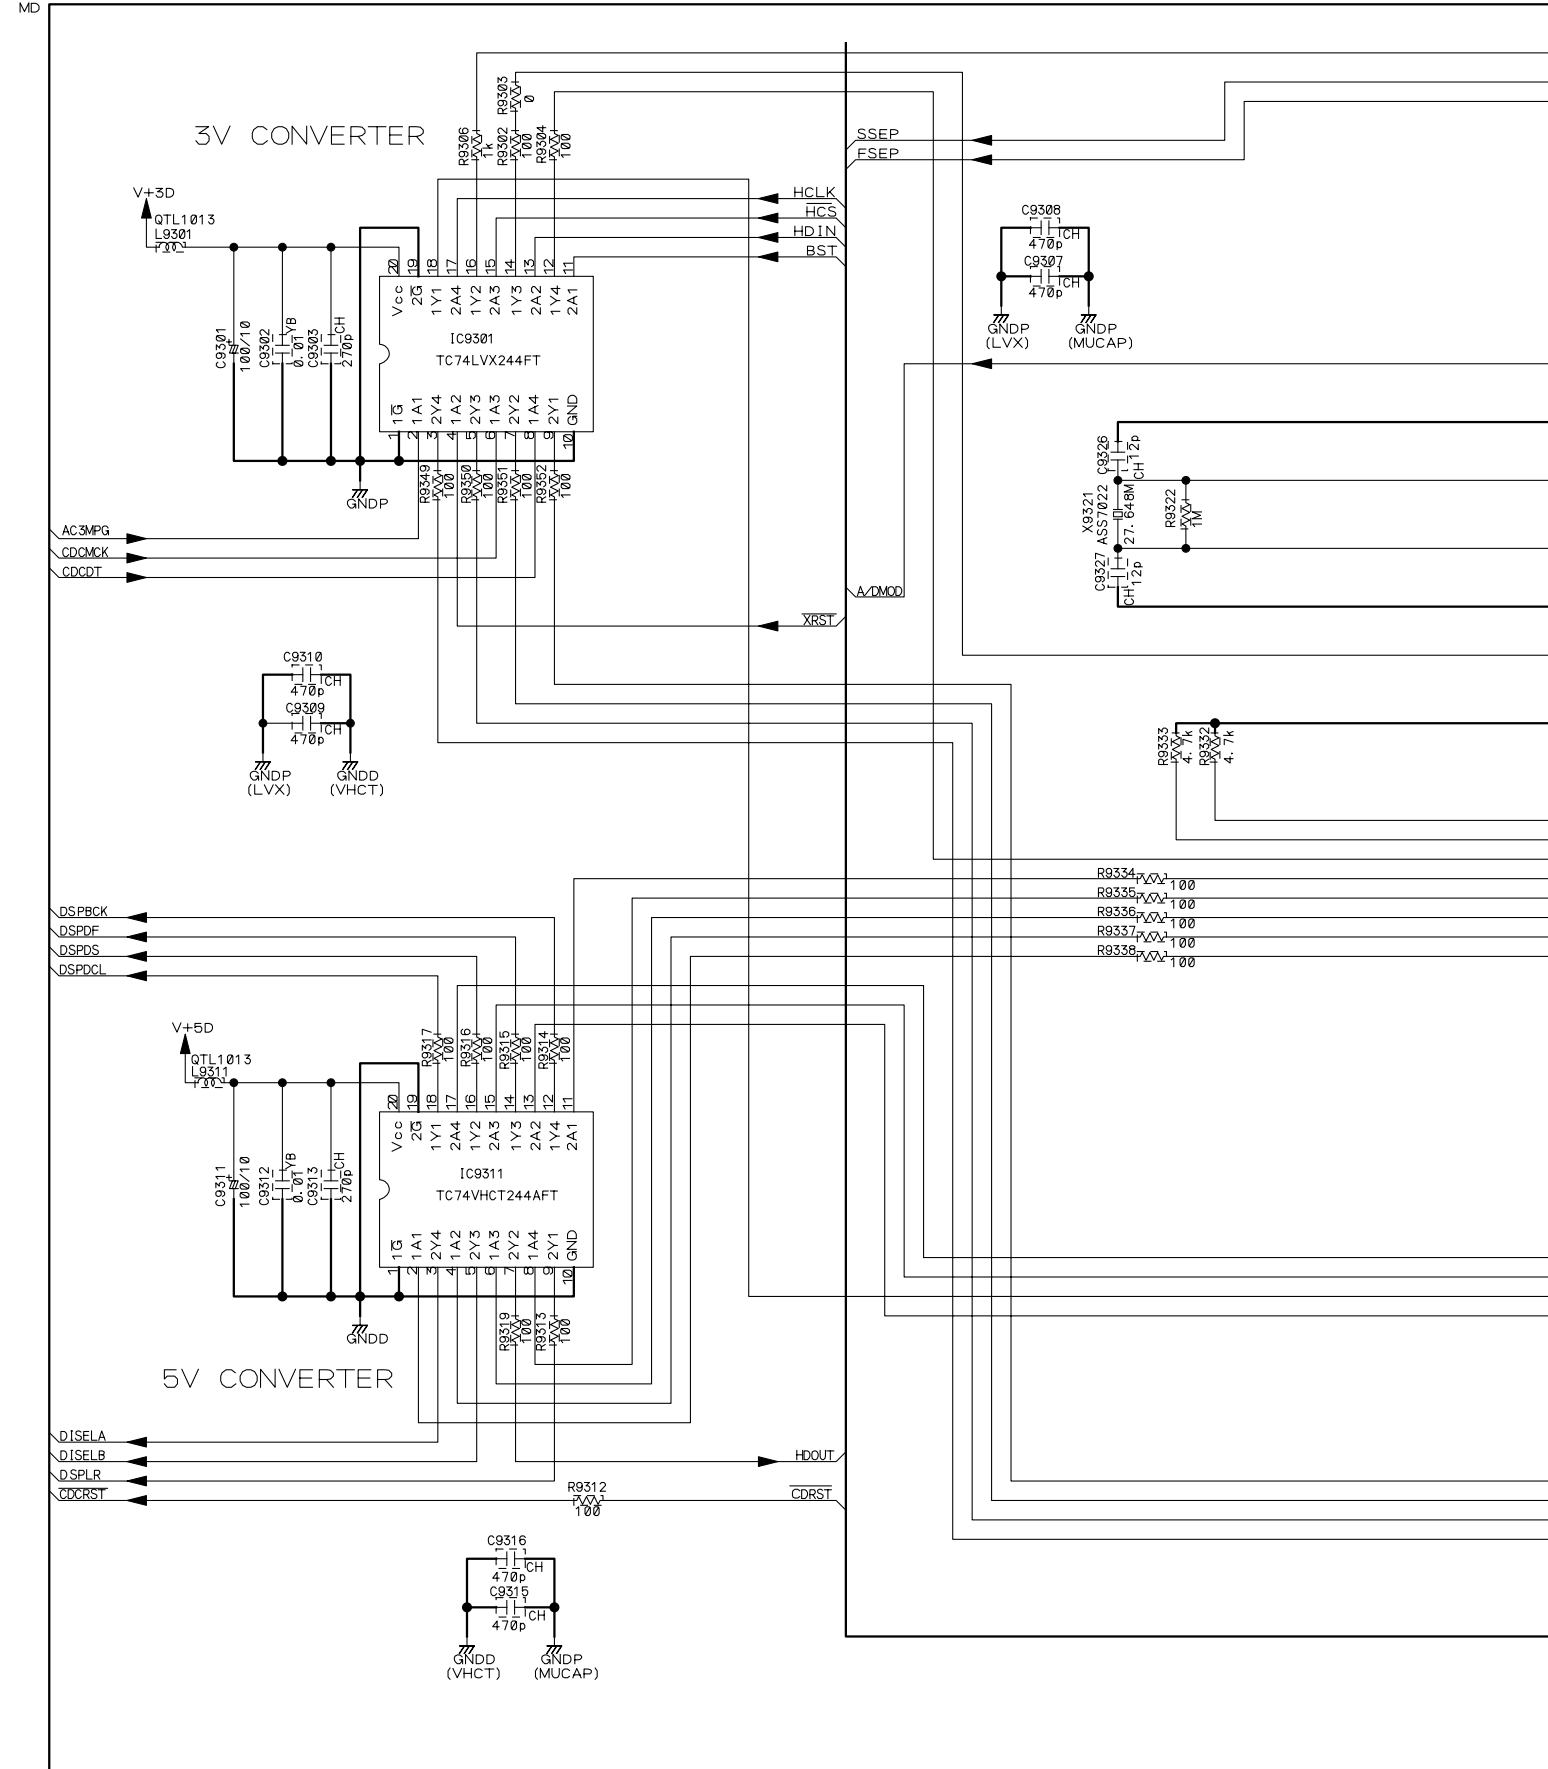



3.11 DOLBY DIGITAL ASSY (3/3)


P1/3

A

B

C

D

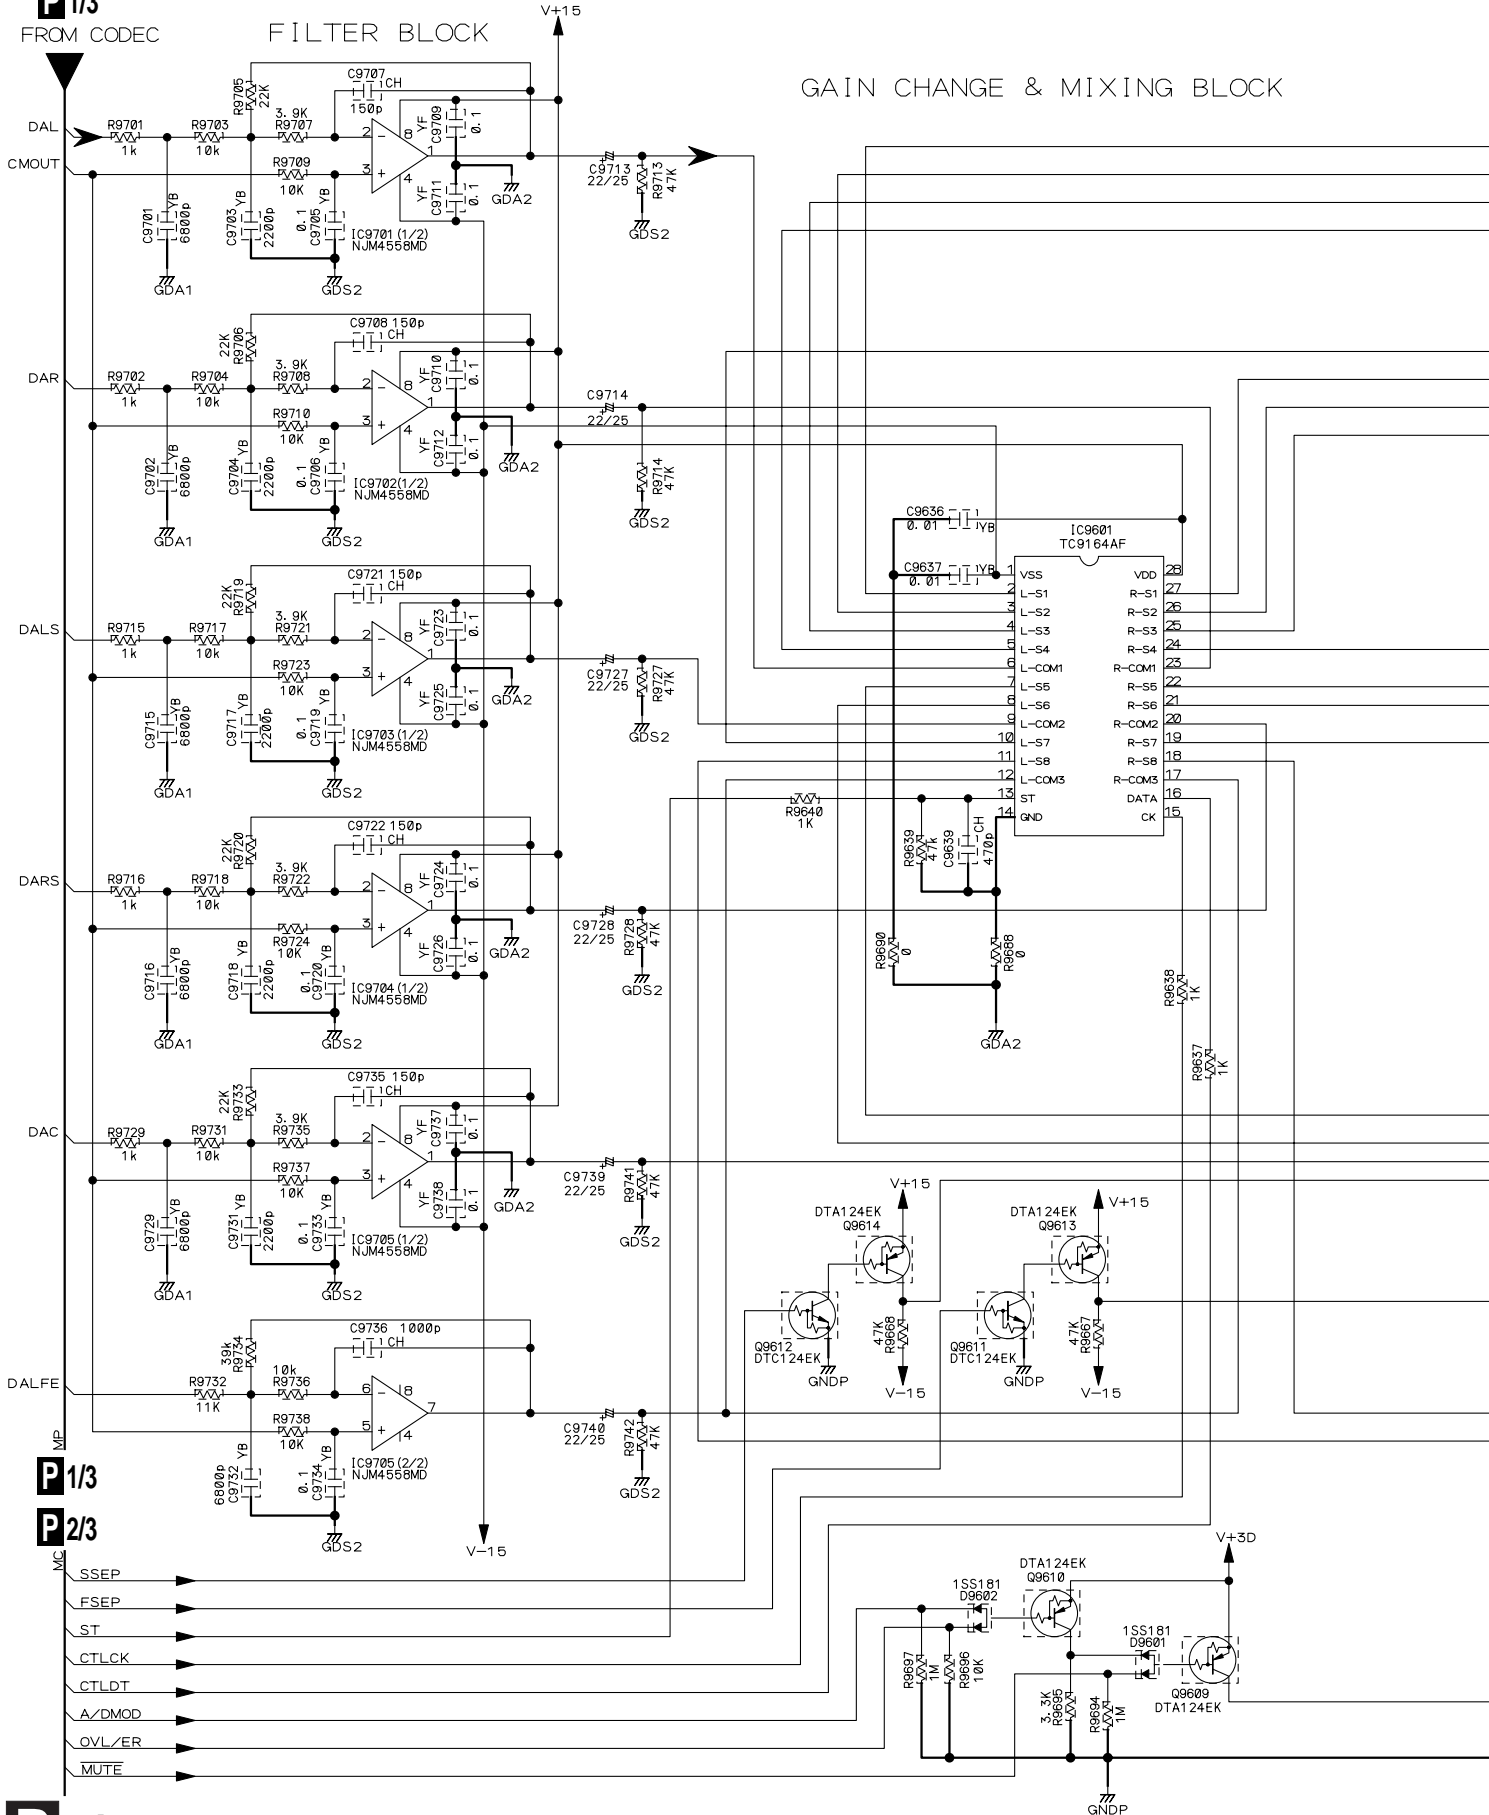

P1/3

P2/3

P3/3




# P 3/3 DOLBY DIGITAL ASSY(3/3) (AWX7333)

## • FILTER & MUTE BLOCK

### FILTER BLOCK

➔ : AUDIO SIGNAL ROUTE

P 1/3

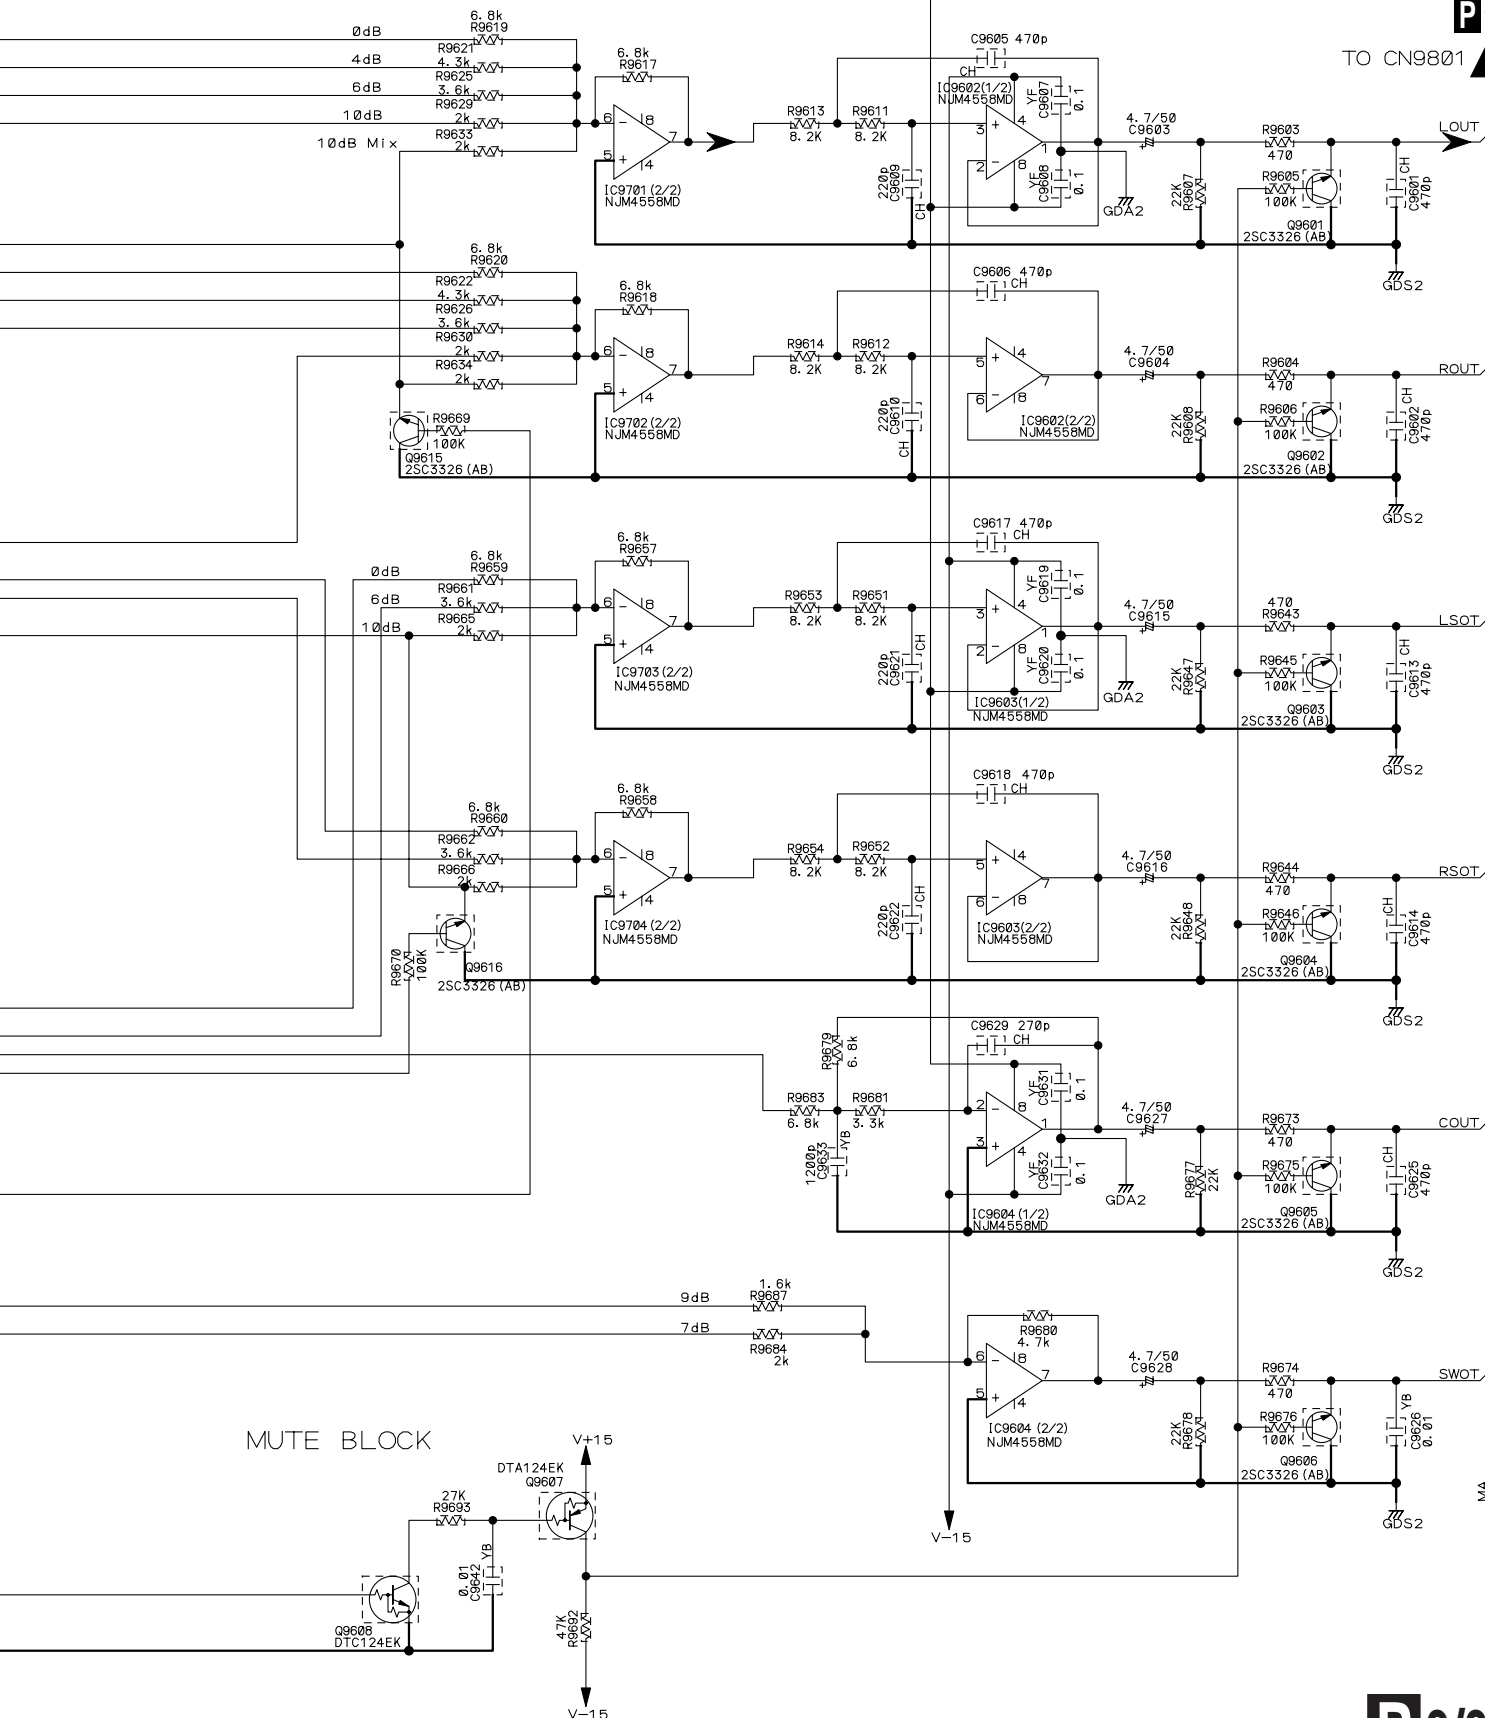

A

B

C

D


# 4. PCB CONNECTION DIAGRAM

## 4.1 INPUT and FRONT VIDEO ASSEMBLIES


### NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.
3. The parts mounted on this PCB include all necessary parts for several destinations.
4. View point of PCB diagrams.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

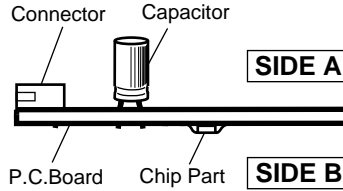


B

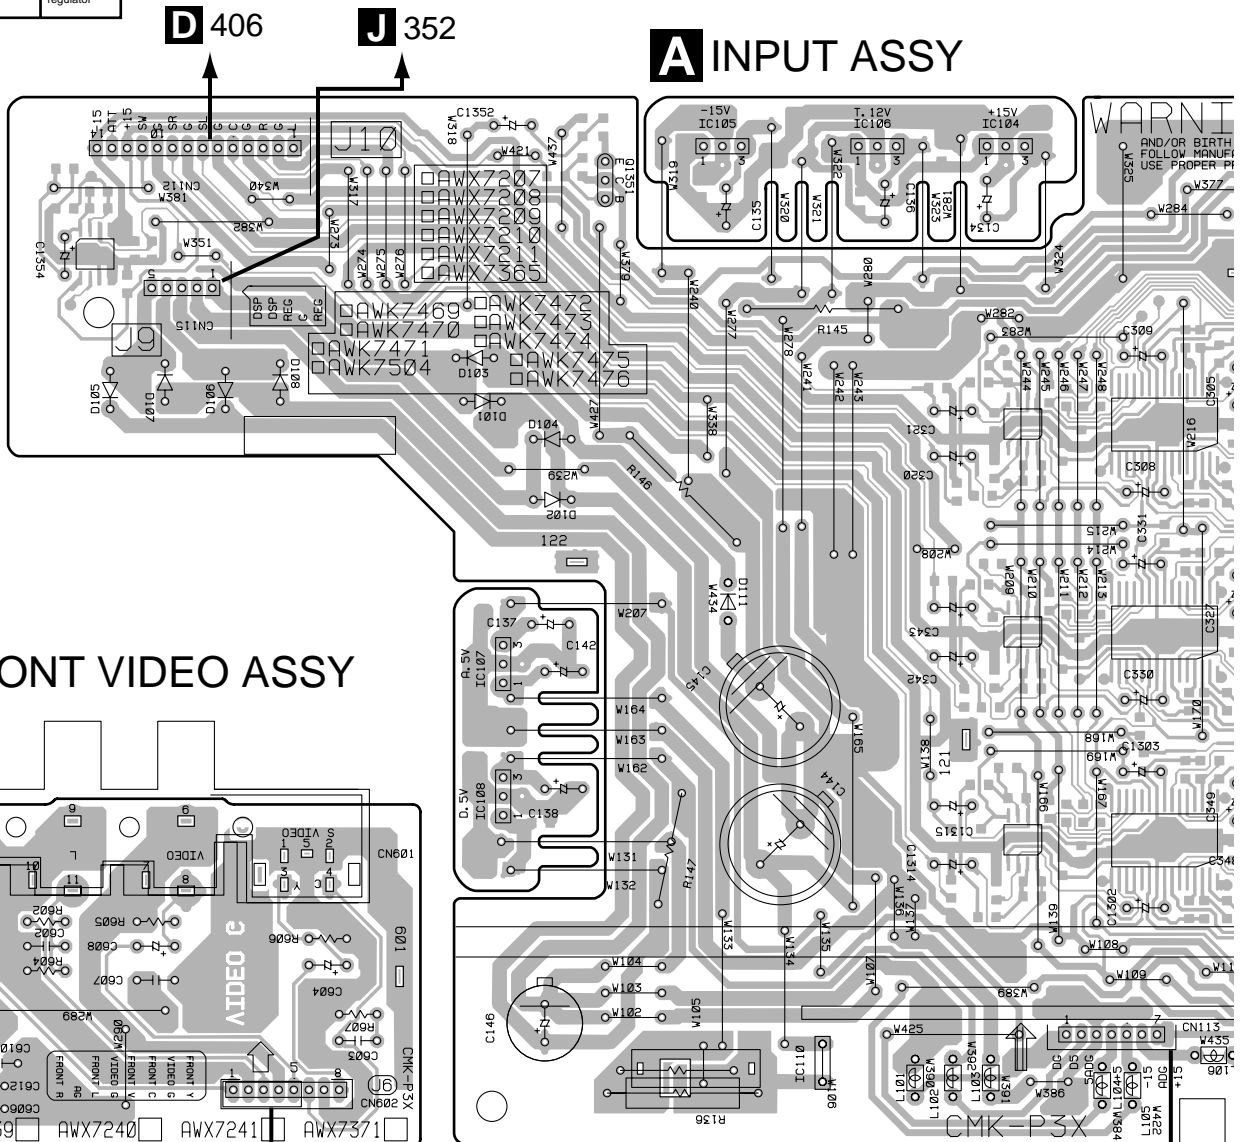

C

### FRONT VIDEO ASSY

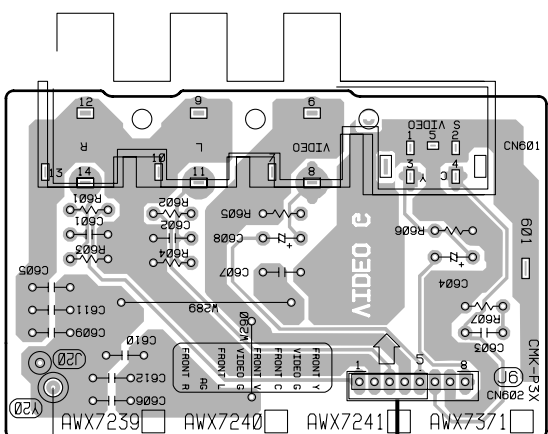


D

Q1351 IC107 IC108 IC104-IC106 IC110

**A O**

**SIDE A**

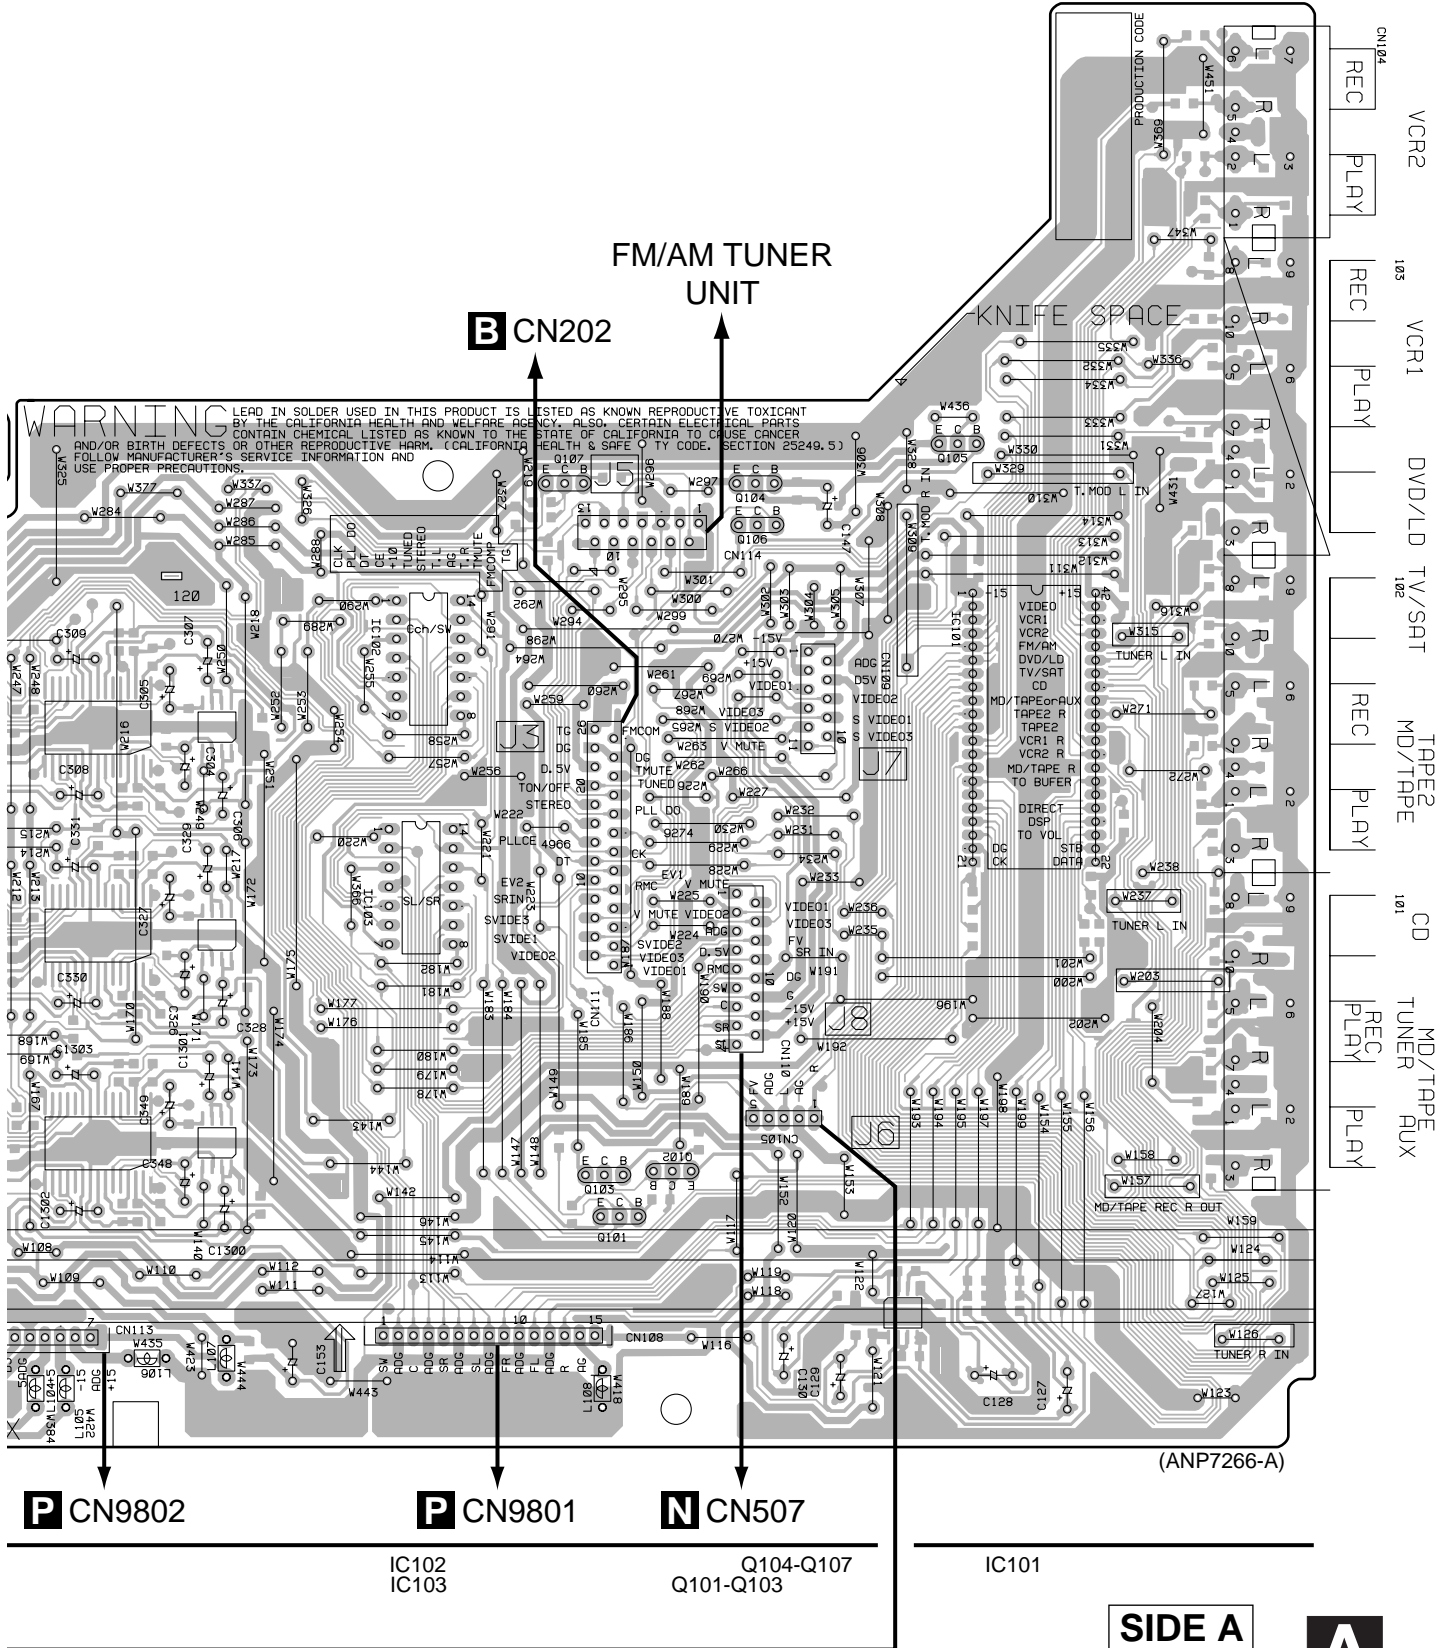


A

B

C

D

# A INPUT ASSY

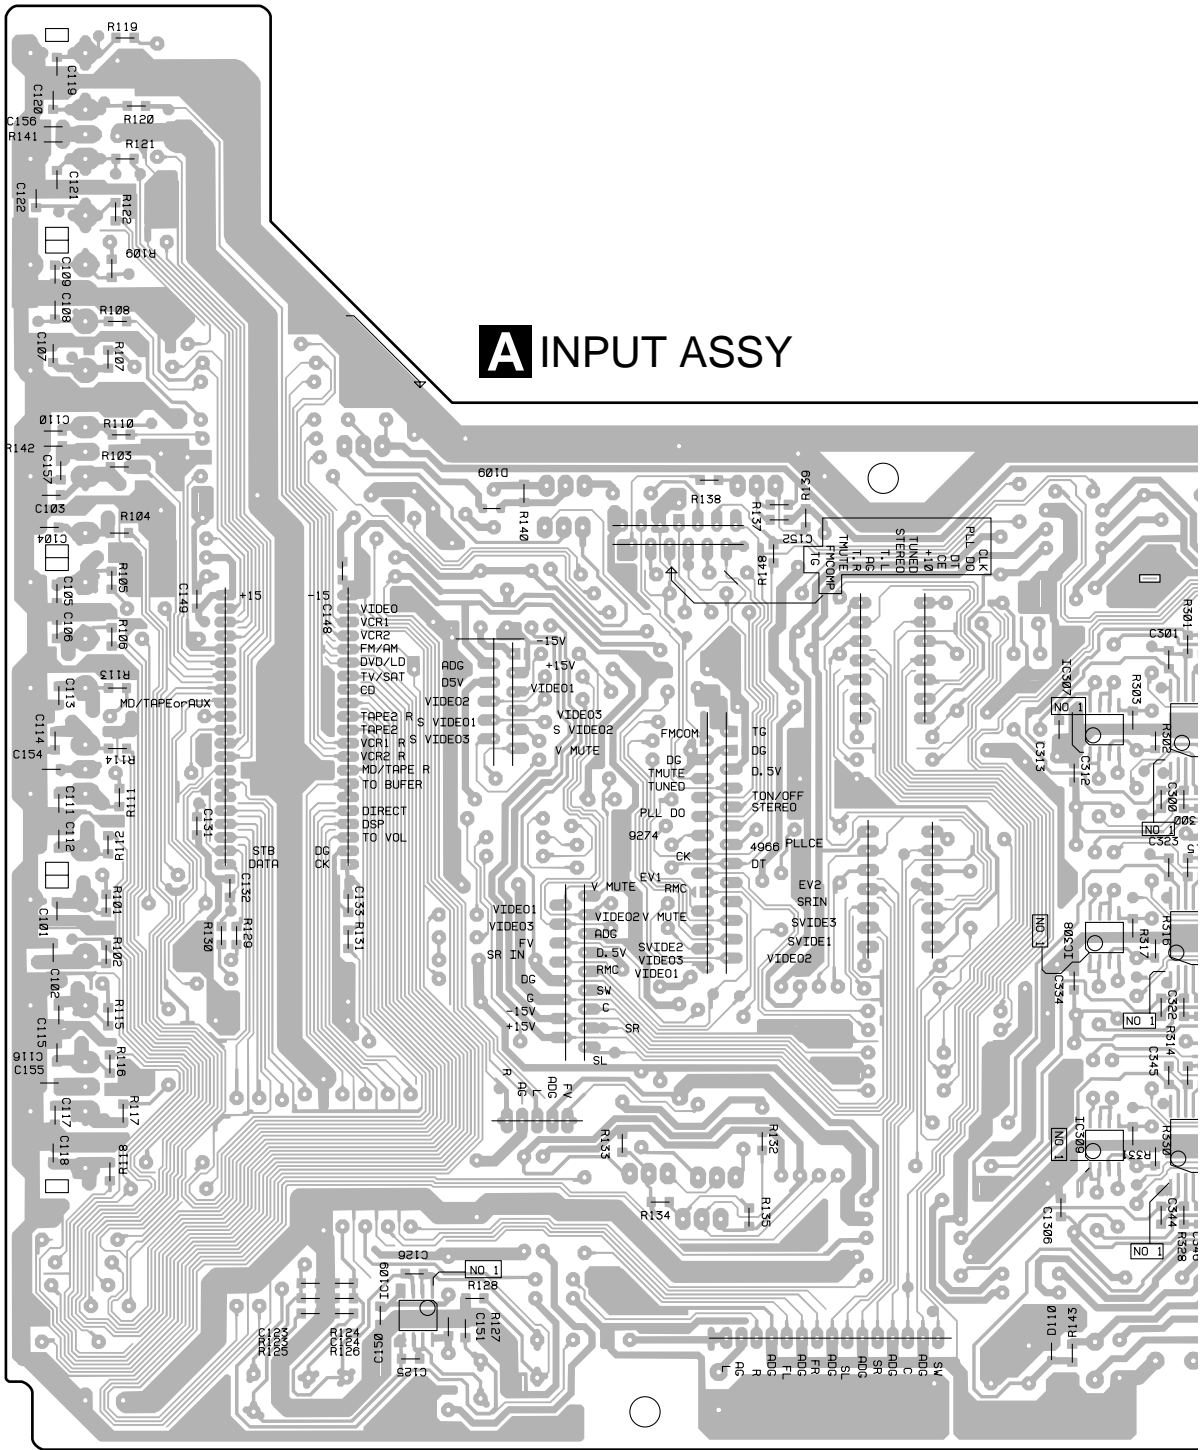

IC109

IC307-IC309

**SIDE B**




A

B

C

D

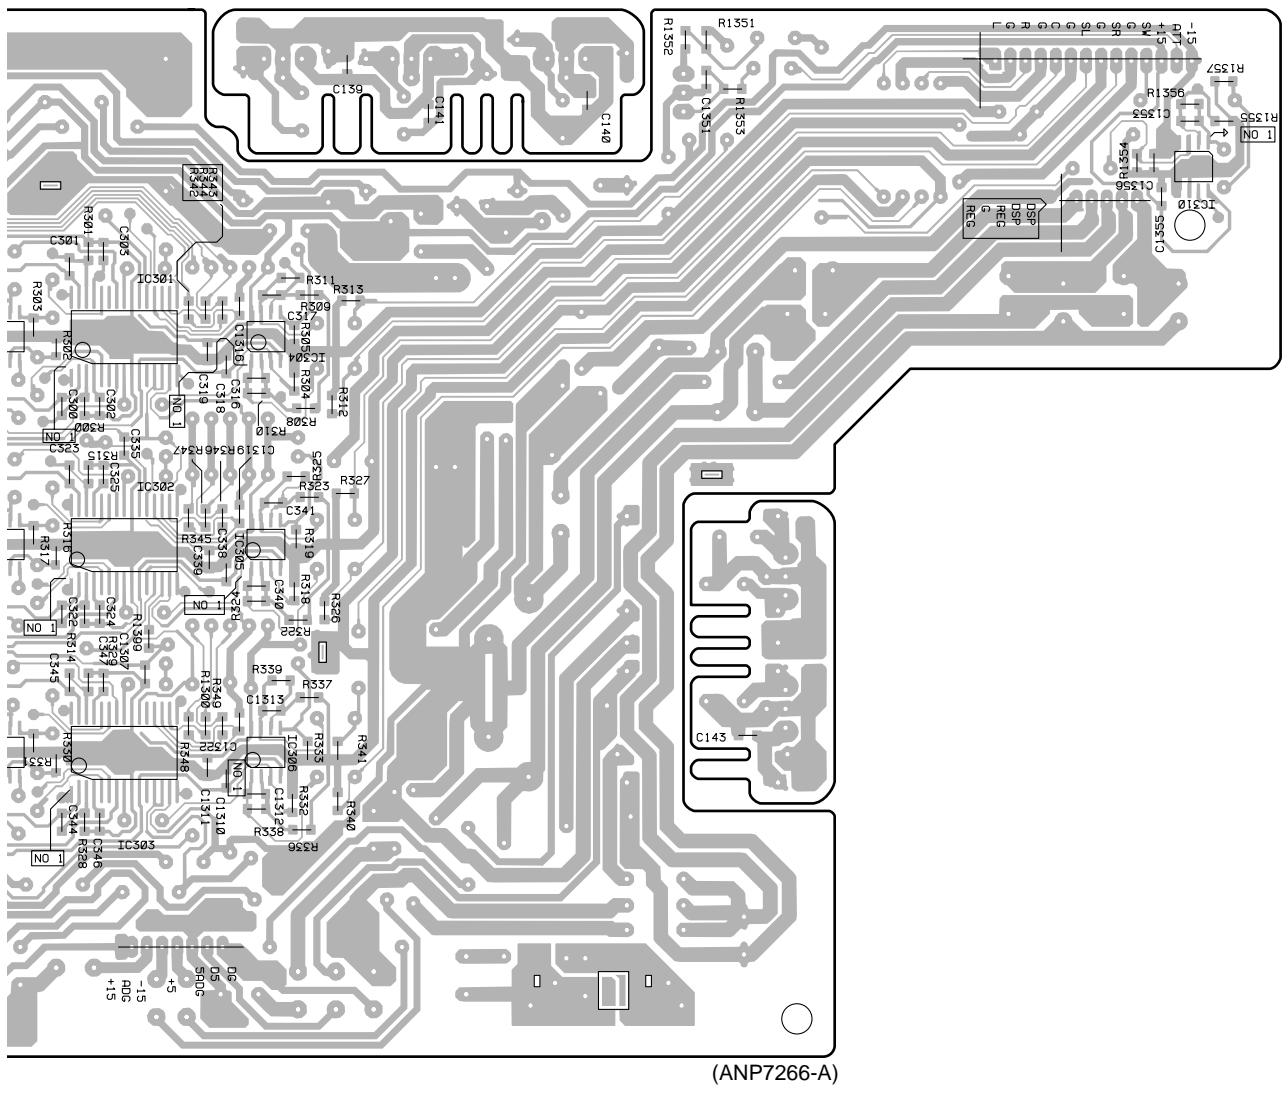


17-IC309 IC301-IC303 IC304-IC306

IC310


**SIDE B**

4.2 FRONT and POWER SW ASSEMBLIES

D CN401

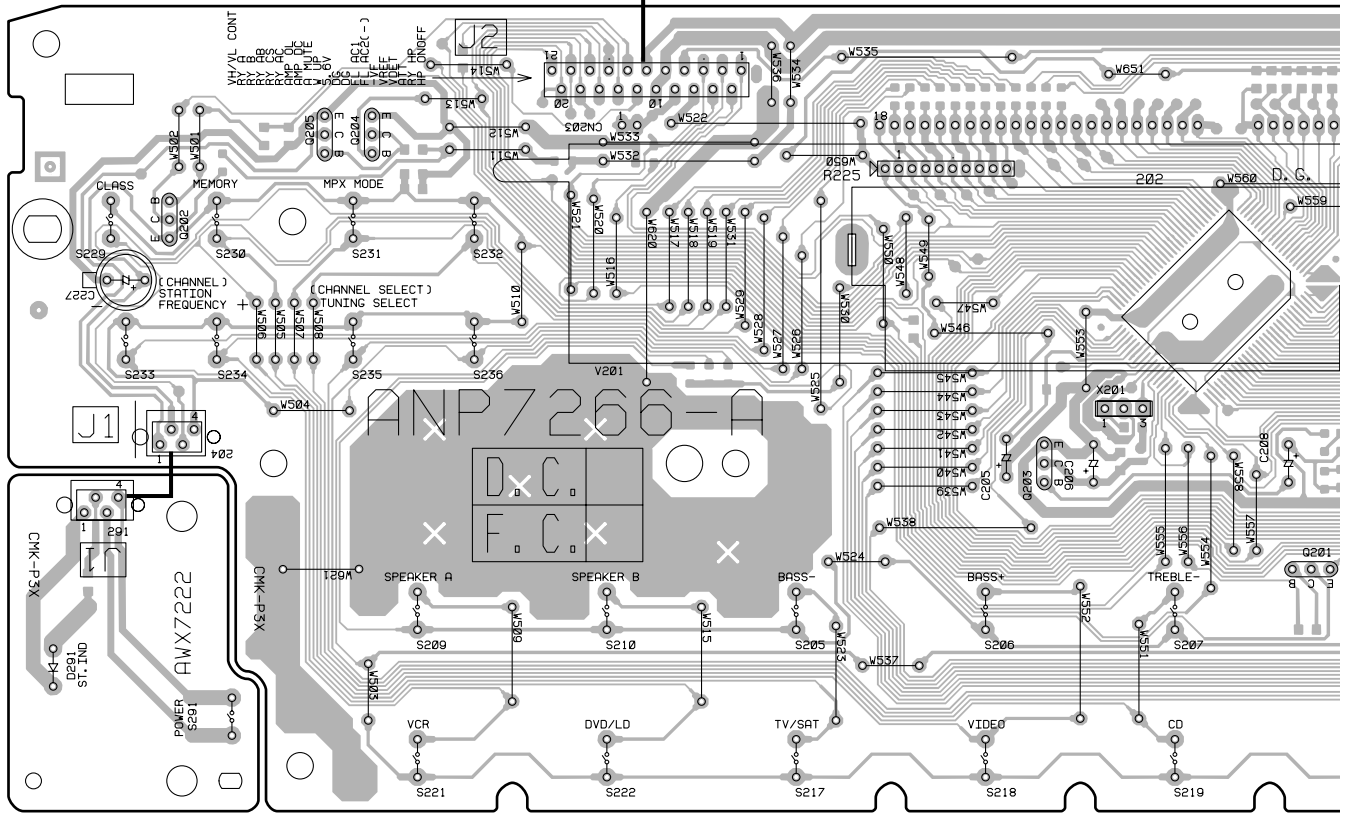


C POWER SW ASSY

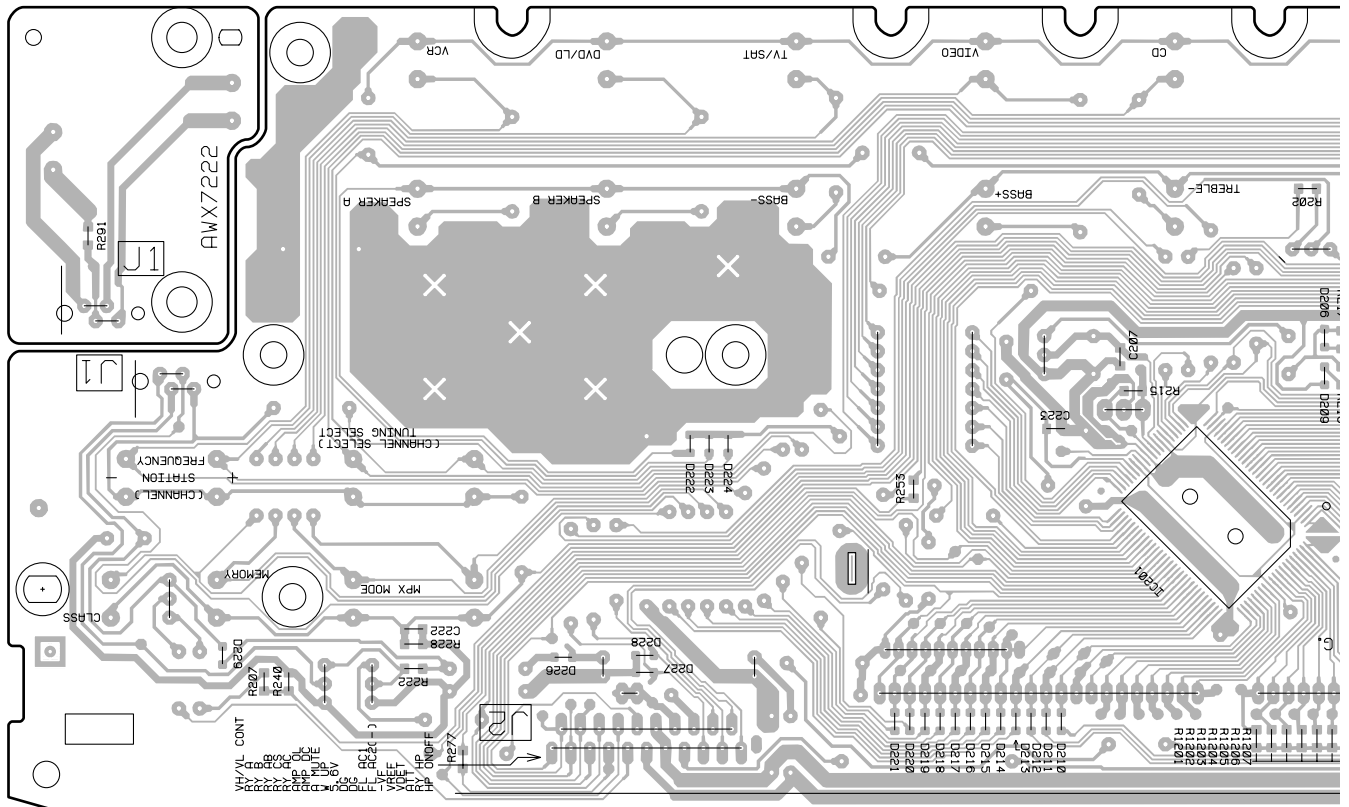

IC201



**A** CN111

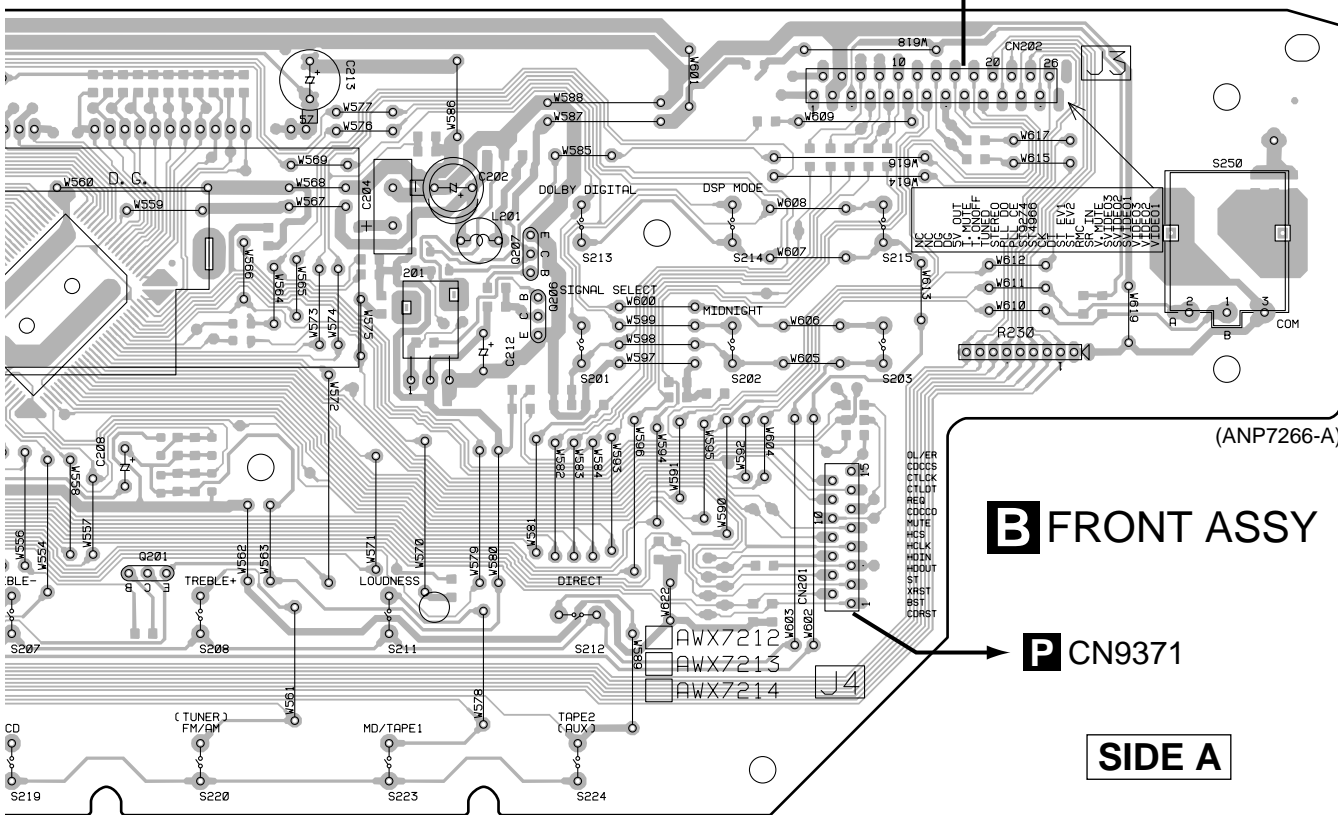

(ANP7266-A)

**B** FRONT ASSY

**P** CN9371

**SIDE A**


Q201

Q207 Q206

**SIDE B**

**B** FRONT ASSY

(ANP7266-A)

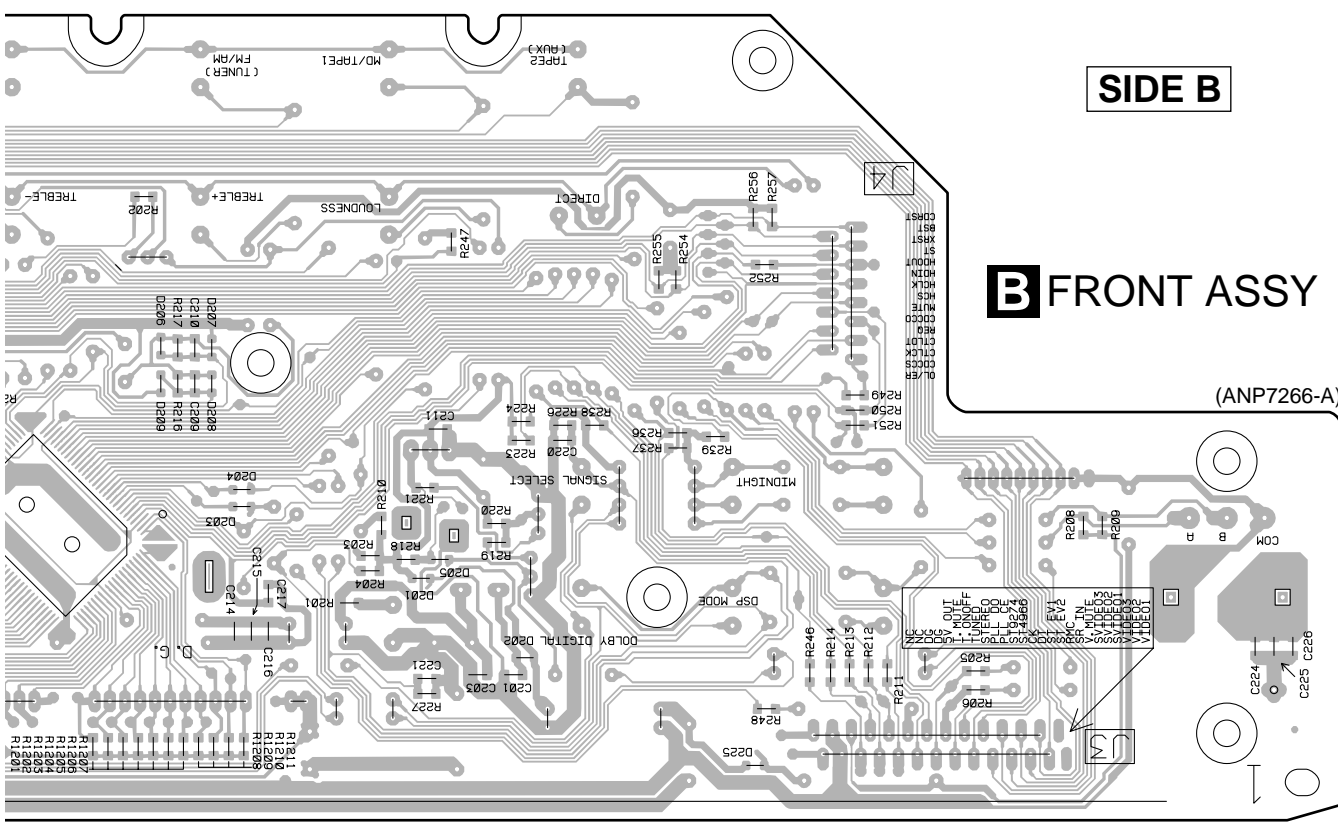


IC201

**B** **C**

### 4.3 AMP, HEADPHONE and FET ASSEMBLIES


A

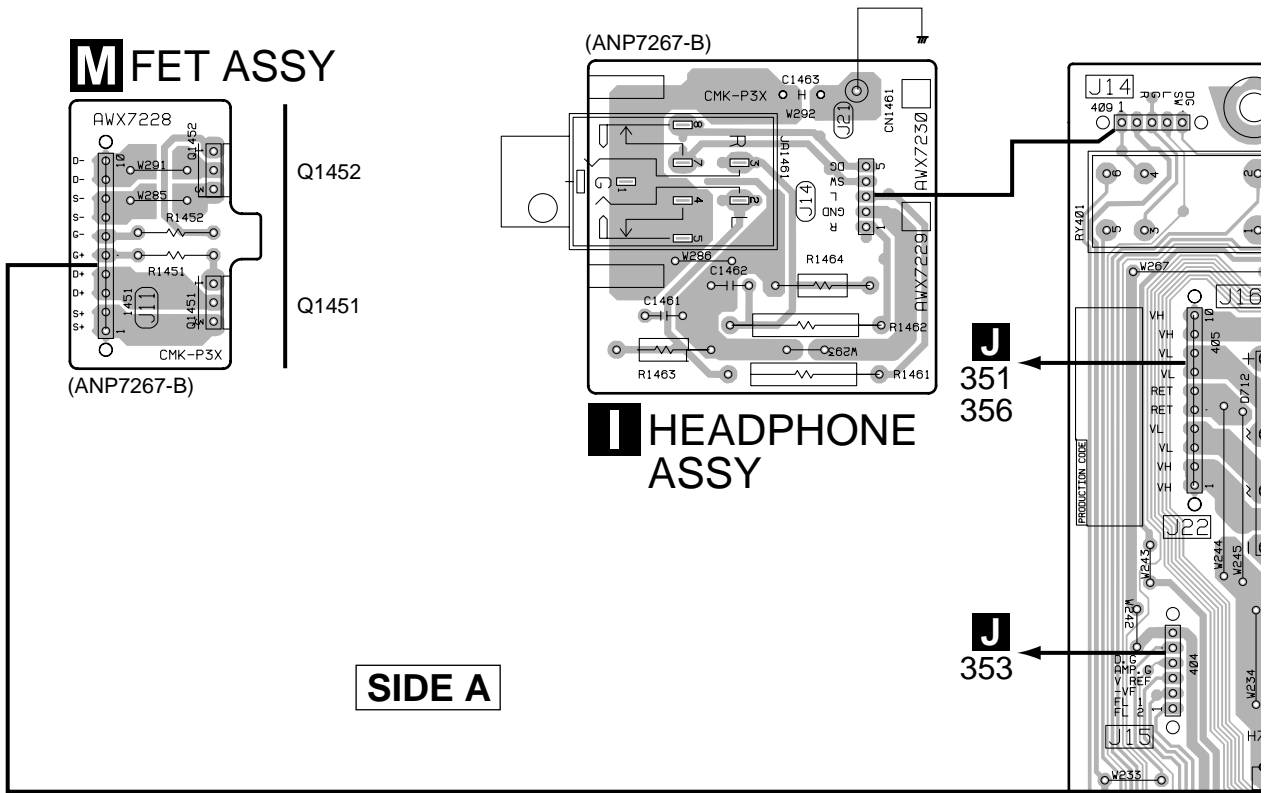

B

**SIDE A**

C

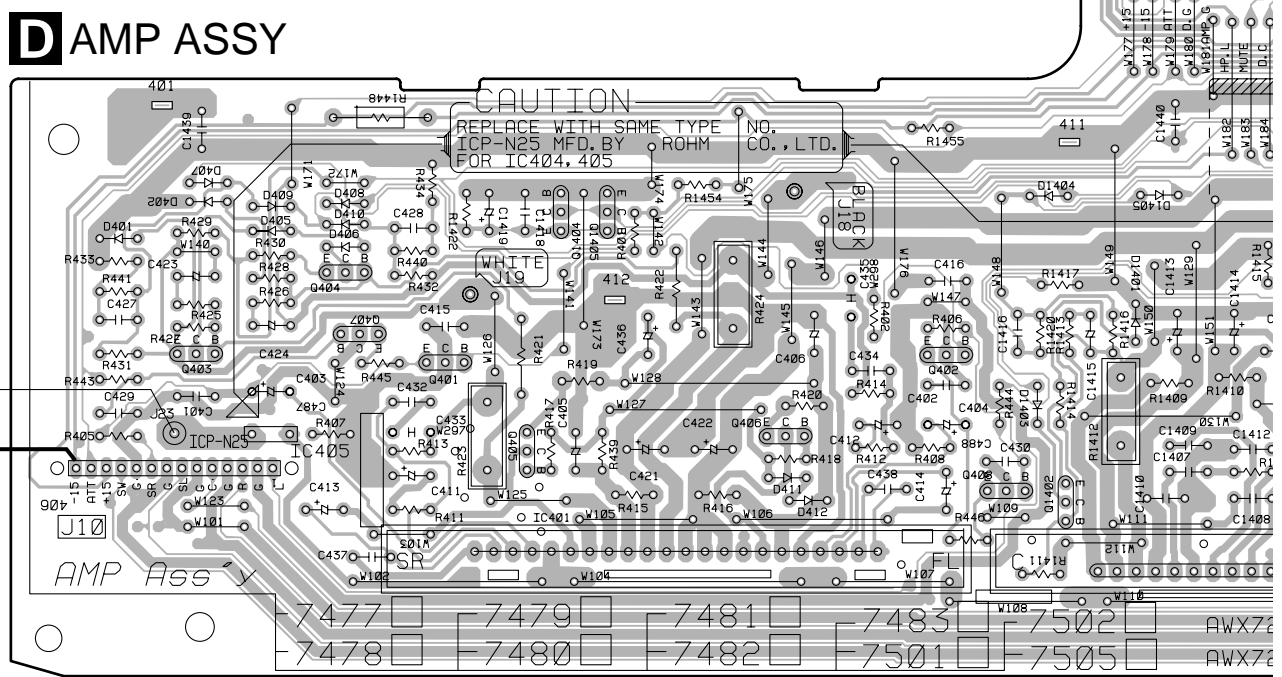


D

- Q403
- Q401
- Q1404
- Q1405
- IC401
- Q406
- Q402
- Q408
- Q1402
- IC405
- Q407
- Q401
- Q405
- IC401
- Q406
- Q402
- Q408
- Q1402
- IC405





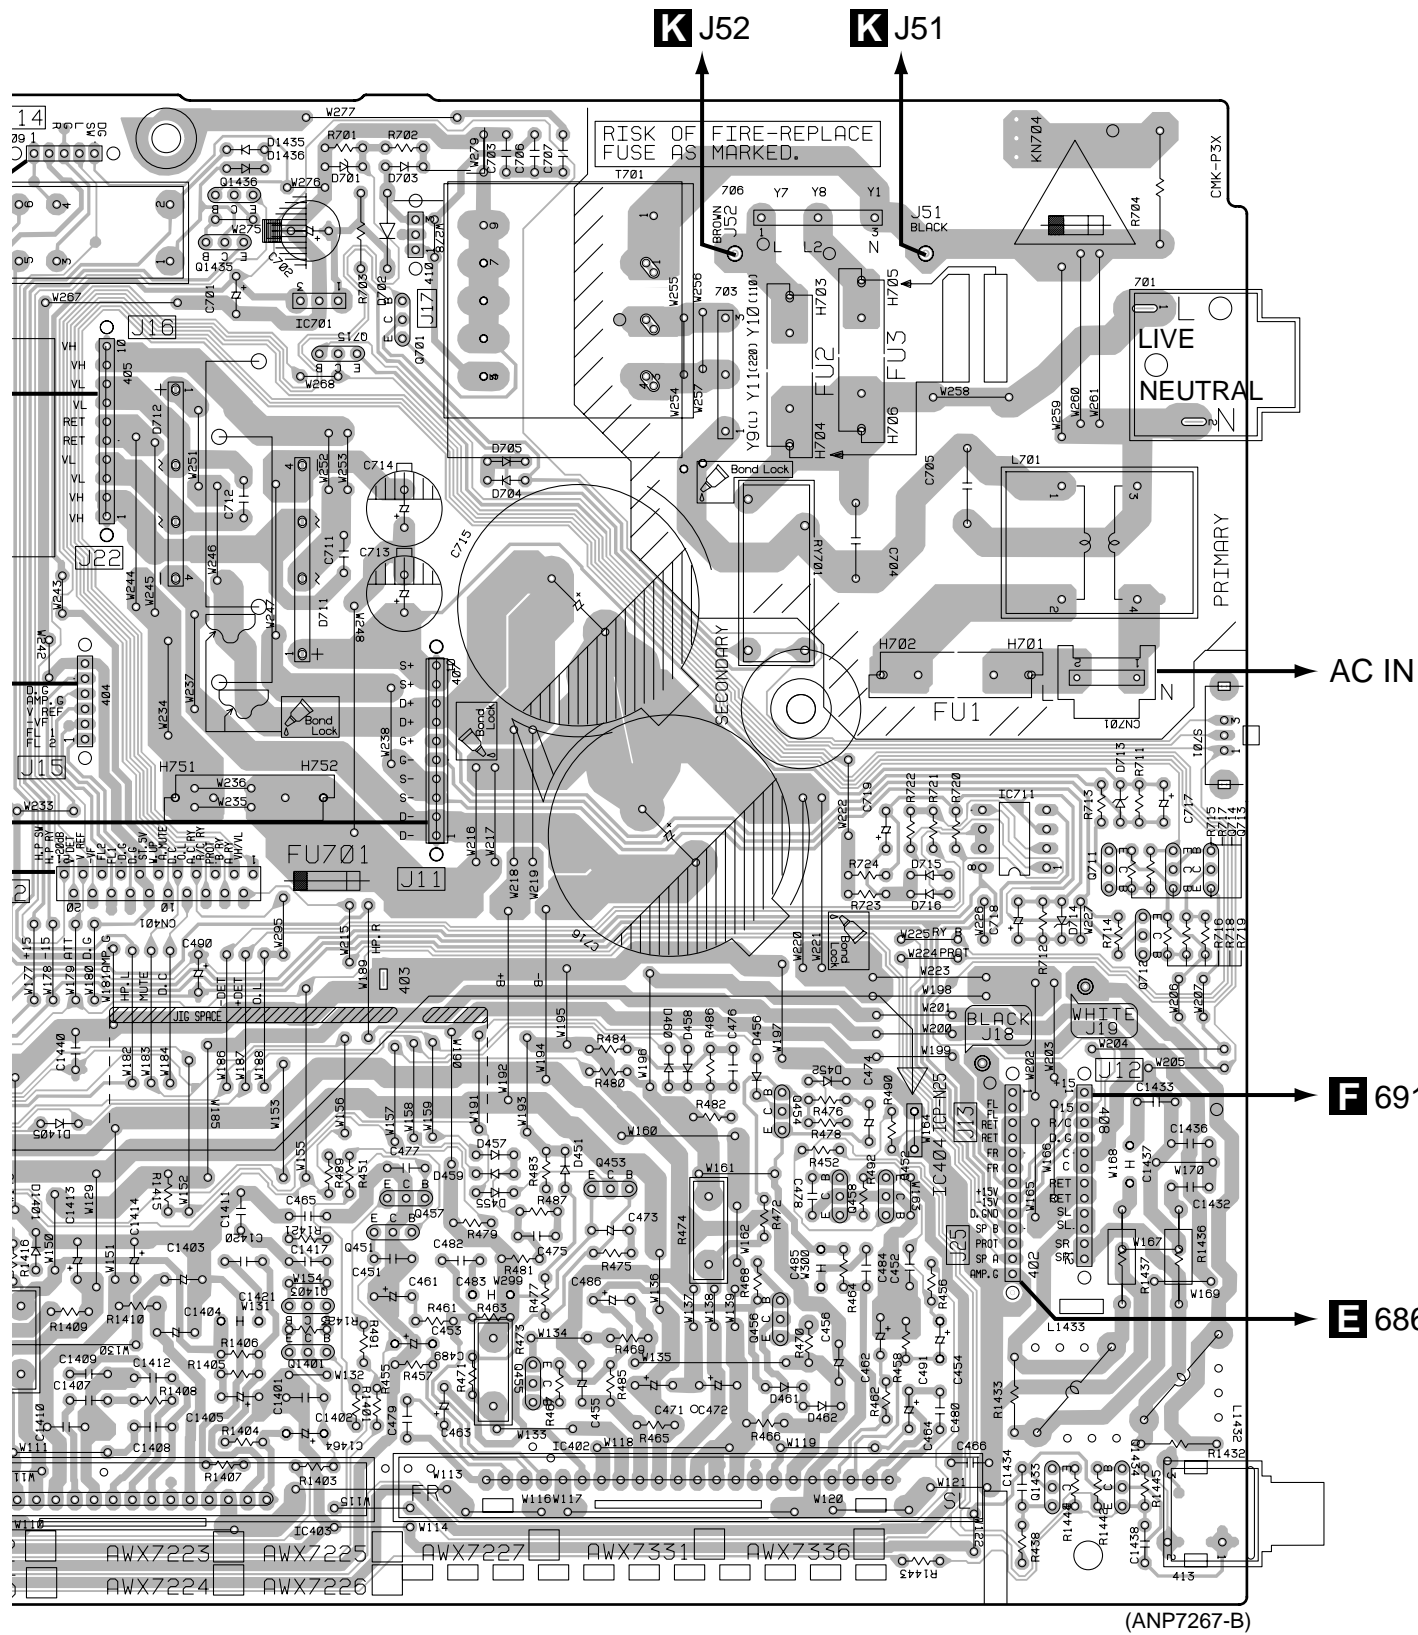


12 IC1403 Q1403 Q1401 Q451 Q457 Q453 IC402 Q454 Q456 Q458 IC404 Q452 IC711 Q1433 Q711-Q714 Q1434




4.4 F.SP.CONNECT, R.C.SP.CONNECT, FRONT SP. and REAR SP ASSEMBLIES

**G** FRONT SP. ASSY

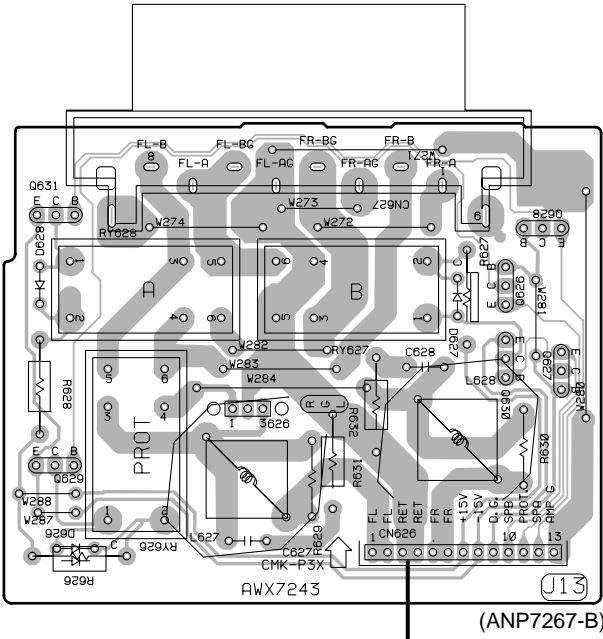


- Q631 Q628
- Q626
- Q630 Q627
- Q629

**E** F.SP. CONNECT ASSY

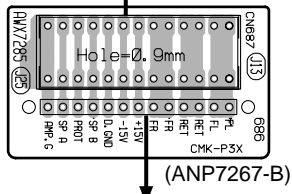

**D** 402


**F** R.C.SP. CONNECT ASSY

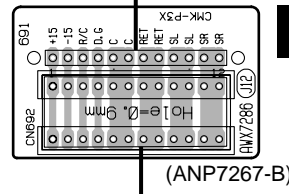

**D** 408

**SIDE A**

**H** REAR SP ASSY

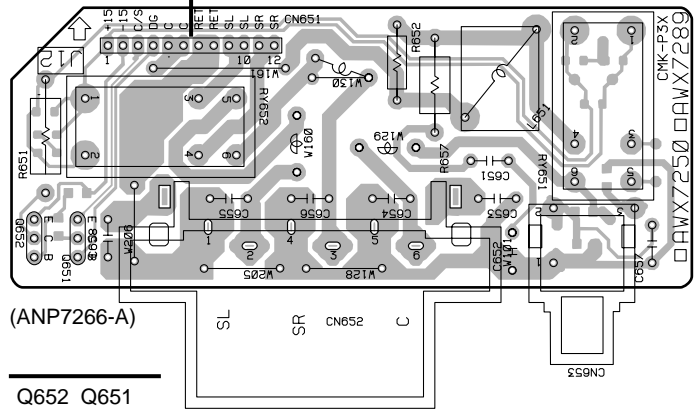


- Q652 Q651


**H** REAR SP ASSY

**SIDE B**

(ANP7266-A)

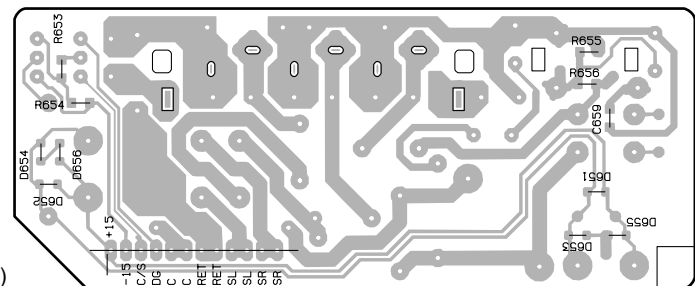

4.5 TRANS 2, TRANS 1 and BARRIER ASSEMBLIES

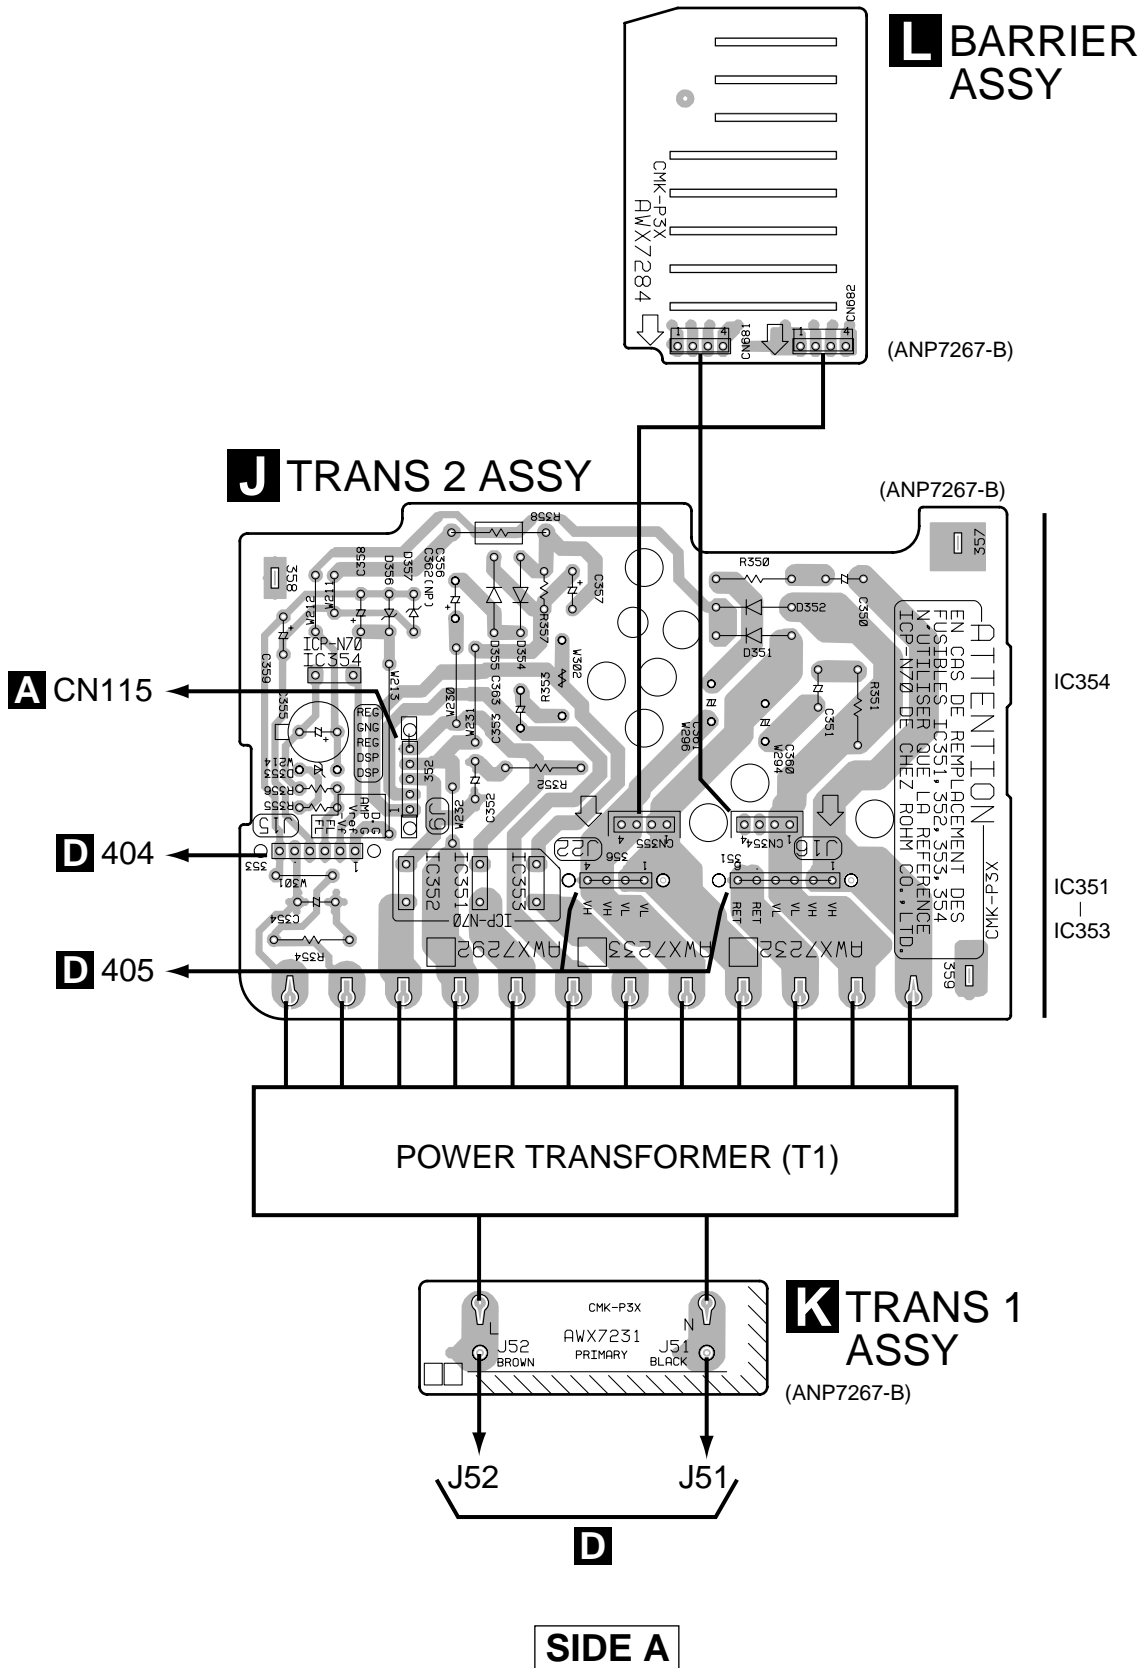


4.6 DOLBY DIGITAL ASSY

**P** DOLBY DIGITAL ASSY

**B** CN201

**A** CN113

**A** CN108

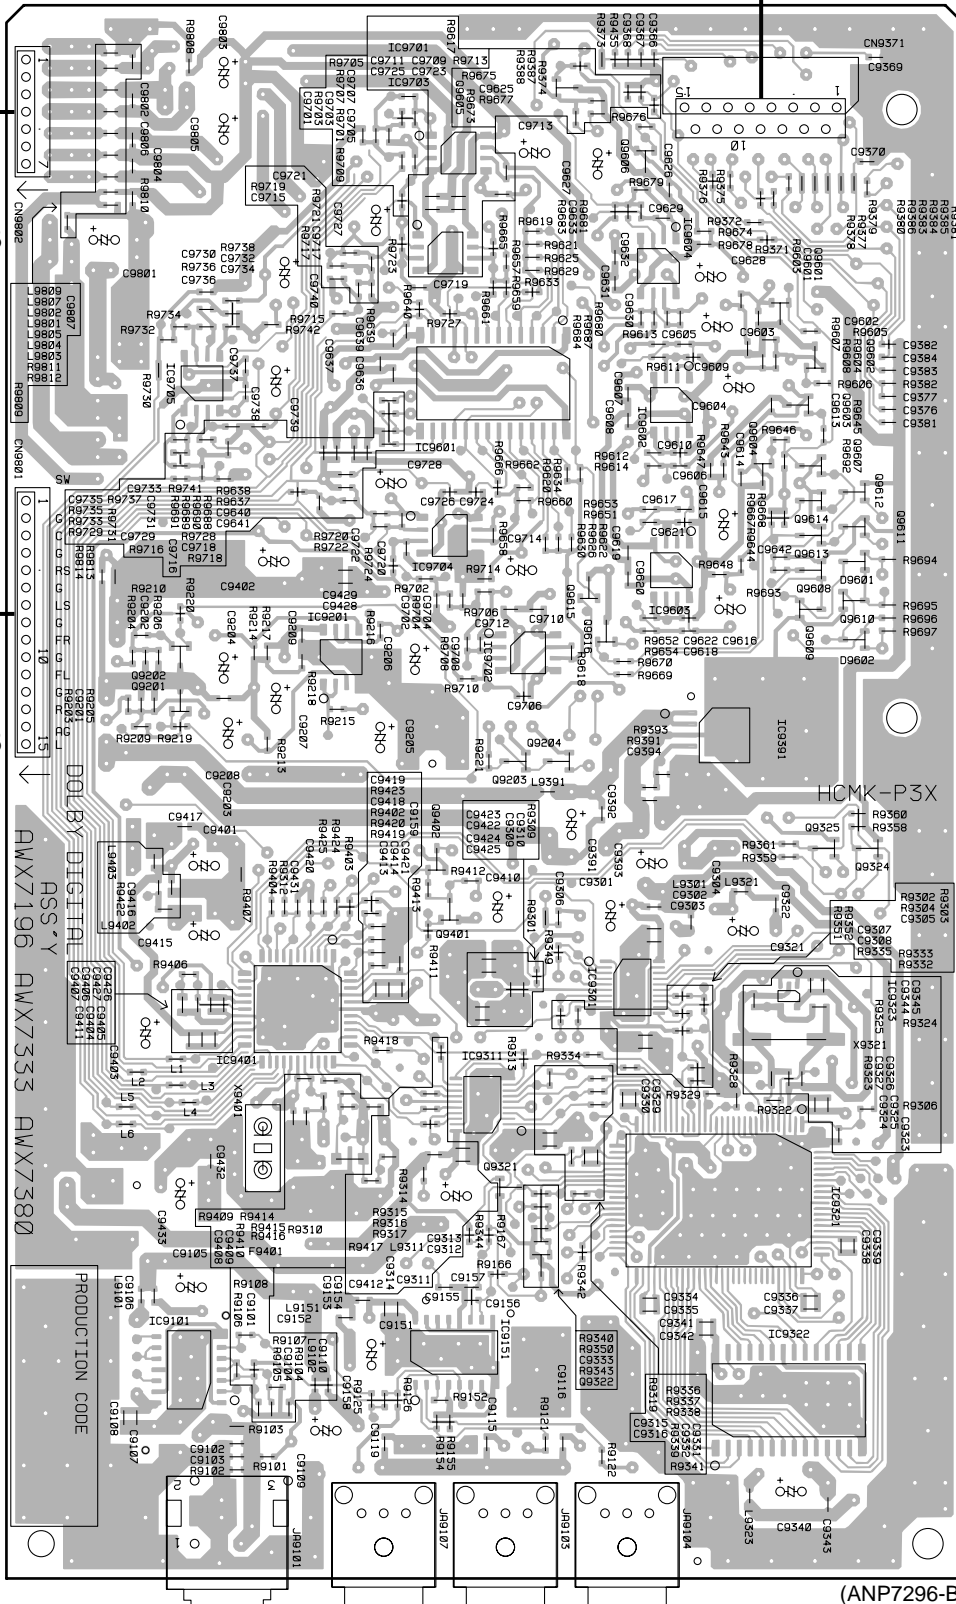


- IC9701
- IC9703
- Q9605 Q9606
- IC9604
- Q9602
- Q9604
- IC9705 IC9601 IC9602 Q9611
- Q9614
- IC9704 IC9603 Q9608
- Q9610
- Q9202 IC9201 Q9615
- Q9201 IC9702 Q9616
- IC9391
- Q9402 Q9325
- Q9324
- Q9401
- IC9301 IC9323
- IC9401 IC9311
- Q9321 IC9321
- IC9101 IC9151
- IC9322

**SIDE A**



**P** DOLBY DIGITAL ASSY

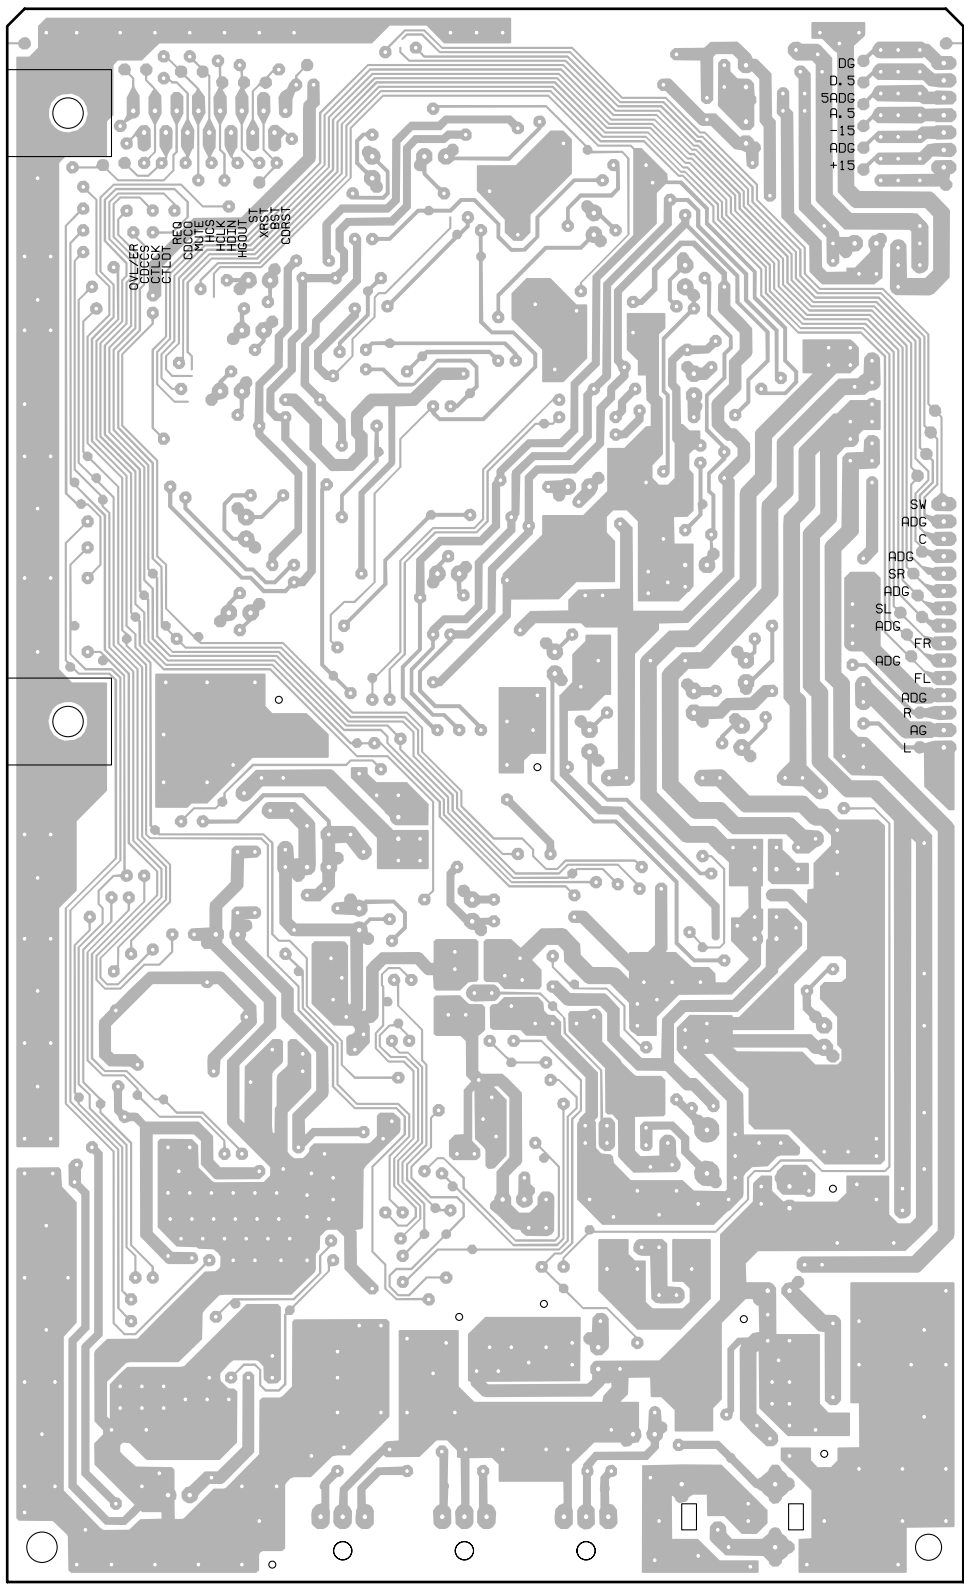


(ANP7296-B)

**SIDE B**

### 4.7 VIDEO ASSY

A

IC501      Q501-Q505      Q506      IC502      IC503

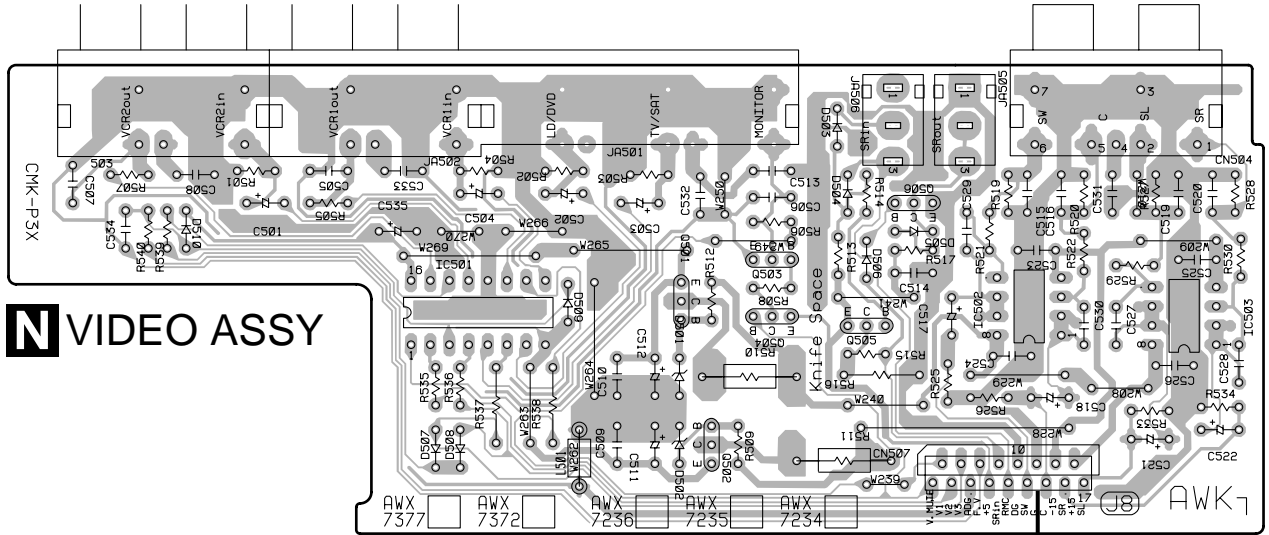

**N** VIDEO ASSY

B

**A** CN110

**SIDE A**

C

D



## 5. PCB PARTS LIST

NOTES: ●Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

●The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.

●When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560  $\Omega$   $\rightarrow$   $56 \times 10^1$   $\rightarrow$  561 ..... RD1/4PU  $\begin{matrix} 5 & 6 & 1 \\ \hline & & J \end{matrix}$

47k  $\Omega$   $\rightarrow$   $47 \times 10^3$   $\rightarrow$  473 ..... RD1/4PU  $\begin{matrix} 4 & 7 & 3 \\ \hline & & J \end{matrix}$

0.5  $\Omega$   $\rightarrow$  R50 ..... RN2H  $\begin{matrix} R & 5 & 0 \\ \hline & & K \end{matrix}$

1  $\Omega$   $\rightarrow$  1R0 ..... RS1P  $\begin{matrix} 1 & R & 0 \\ \hline & & K \end{matrix}$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k  $\Omega$   $\rightarrow$   $562 \times 10^1$   $\rightarrow$  5621 ..... RN1/4PC  $\begin{matrix} 5 & 6 & 2 & 1 \\ \hline & & & F \end{matrix}$

### LIST OF WHOLE PCB ASSEMBLIES

Mark	PCB Assemblies	Part No.		Remarks
		VSX-D508		
		KUXJI Type	KCXJI Type	
NSP	INPUT ASSY	AWK7469	AWK7469	
	└ INPUT ASSY	AWX7207	AWX7207	
	└ FRONT ASSY	AWX7212	AWX7212	
NSP	└ POWER SW ASSY	AWX7222	AWX7222	
NSP	└ REAR SP ASSY	AWX7250	AWX7250	
NSP	AMP ASSY	AWK7477	AWK7501	
	└ AMP ASSY	AWX7223	AWX7331	
NSP	└ FET ASSY	AWX7228	AWX7228	
NSP	└ HEADPHONE ASSY	AWX7229	AWX7229	
	└ TRANS 1 ASSY	AWX7231	AWX7231	
	└ TRANS 2 ASSY	AWX7232	AWX7232	
	└ VIDEO ASSY	AWX7234	AWX7234	
NSP	└ FRONT VIDEO ASSY	AWX7239	AWX7239	
	└ FRONT SP. ASSY	AWX7243	AWX7243	
	└ BARRIER ASSY	AWX7284	AWX7284	
NSP	└ F.SP.CONNECT ASSY	AWX7285	AWX7285	
NSP	└ R.C.SP.CONNECT ASSY	AWX7286	AWX7286	
	DOLBY DIGITAL ASSY	AWX7333	AWX7333	

### PARTS LIST

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
<b>A</b>	<b>INPUT ASSY</b>						
	<b>SEMICONDUCTORS</b>						
	IC101	ANALOG SW ARRAY IC	TC9274N-001	Q102	TRANSISTOR	KRC103M	
	IC102	E-SW IC	LC4966	Q103	TRANSISTOR	KRA103M	
	IC103	E-SW IC	LC4966	Q104	TRANSISTOR	2SC1740S	
$\Delta$	IC104	REGULATOR IC	NJM78M15FA	Q105	TRANSISTOR	KRA101M	
$\Delta$	IC105	REGULATOR IC	NJM79M15FA	Q106	TRANSISTOR	KRC103M	
$\Delta$	IC106	REGULATOR IC	NJM78M12FA	Q1351	TRANSISTOR	2SC2878	
$\Delta$	IC107	REGULATOR IC	NJM7805FA	D101	DIODE	S5566G(TPB2)	
$\Delta$	IC108	REGULATOR IC	NJM7805FA	D102	DIODE	S5566G(TPB2)	
	IC109	OP-AMP IC	UPC4570G2	D103	DIODE	S5566G(TPB2)	
	IC301	E-VR IC	LC7535M	D104	DIODE	S5566G(TPB2)	
	IC302	E-VR IC	LC7535M	D105	DIODE	S5566G(TPB2)	
	IC303	E-VR IC	LC7535M	D106	DIODE	S5566G(TPB2)	
	IC304	OP-AMP IC	UPC4570G2	D107	DIODE	S5566G(TPB2)	
	IC305	OP-AMP IC	UPC4570G2	D108	DIODE	S5566G(TPB2)	
	IC306	OP-AMP IC	UPC4570G2	D109	DIODE	1SS355	
	IC307	OP-AMP IC	UPC4570G2	D110	CHIP ZENER DIODE	UDZS5.1B	
	IC308	OP-AMP IC	UPC4570G2				
	IC309	OP-AMP IC	UPC4570G2				
	IC310	OP-AMP IC	UPC4570G2				
	Q101	TRANSISTOR	2SC1740S				
				<b>CAPACITORS</b>			
				C127	ELECT. CAPACITOR	CEAT2R2M50	
				C128	ELECT. CAPACITOR	CEAT2R2M50	
				C129	ELECT. CAPACITOR	CEAT4R7M50	
				C130	ELECT. CAPACITOR	CEAT4R7M50	
				C1300	ELECT. CAPACITOR	CEAT100M50	

# VSX-D508

Mark No.	Description	Parts No.	Mark No.	Description	Parts No.
C1301	ELECT. CAPACITOR	CEAT100M50	C320	ELECT. CAPACITOR	CEAT470M25
C1302	ELECT. CAPACITOR	CEAT1R0M50	C321	ELECT. CAPACITOR	CEAT470M25
C1303	ELECT. CAPACITOR	CEAT1R0M50	C322	CHIP CAPACITOR	CCSQCH102J50
C1306	CERAMIC CAPACITOR	CKSQYB103K50	C323	CHIP CAPACITOR	CCSQCH102J50
C1307	CERAMIC CAPACITOR	CKSQYB103K50	C324	CHIP CAPACITOR	CKSQYB683K25
C131	CHIP CAPACITOR	CCSQCH101J50	C325	CHIP CAPACITOR	CKSQYB683K25
C1310	CERAMIC CAPACITOR	CKSQYB103K50	C326	ELECT. CAPACITOR	CEAT1R0M50
C1311	CERAMIC CAPACITOR	CKSQYB103K50	C327	ELECT. CAPACITOR	CEAT1R0M50
C1312	CHIP CAPACITOR	CCSQCH680J50	C328	ELECT. CAPACITOR	CEAT100M50
C1313	CHIP CAPACITOR	CCSQCH680J50	C329	ELECT. CAPACITOR	CEAT100M50
C1314	ELECT. CAPACITOR	CEAT470M25	C330	ELECT. CAPACITOR	CEAT1R0M50
C1315	ELECT. CAPACITOR	CEAT470M25	C331	ELECT. CAPACITOR	CEAT1R0M50
C1316	CERAMIC CAPACITOR	CCSQCH561J50	C334	CERAMIC CAPACITOR	CKSQYB103K50
C1319	CERAMIC CAPACITOR	CCSQCH561J50	C335	CERAMIC CAPACITOR	CKSQYB103K50
C132	CHIP CAPACITOR	CCSQCH101J50	C338	CERAMIC CAPACITOR	CKSQYB103K50
C1322	CERAMIC CAPACITOR	CCSQCH561J50	C339	CERAMIC CAPACITOR	CKSQYB103K50
C133	CHIP CAPACITOR	CCSQCH101J50	C340	CHIP CAPACITOR	CCSQCH121J50
C134	ELECT. CAPACITOR	CEAT101M25	C341	CHIP CAPACITOR	CCSQCH121J50
C135	ELECT. CAPACITOR	CEAT101M25	C342	ELECT. CAPACITOR	CEAT470M25
C1351	CHIP CAPACITOR	CKSQYB102K50	C343	ELECT. CAPACITOR	CEAT470M25
C1352	ELECT. CAPACITOR	CEAT4R7M50	C344	CHIP CAPACITOR	CCSQCH102J50
C1353	CHIP CAPACITOR	CKSQYB222K50	C345	CHIP CAPACITOR	CCSQCH102J50
C1354	ELECT. CAPACITOR	CEAT4R7M50	C346	CHIP CAPACITOR	CKSQYB683K25
C1355	CERAMIC CAPACITOR	CKSQYB103K50	C347	CHIP CAPACITOR	CKSQYB683K25
C1356	CERAMIC CAPACITOR	CKSQYB103K50	C348	ELECT. CAPACITOR	CEAT1R0M50
C136	ELECT. CAPACITOR	CEAT101M25	C349	ELECT. CAPACITOR	CEAT1R0M50
C137	ELECT. CAPACITOR	CEAT101M10			
C138	ELECT. CAPACITOR	CEAT101M10			
C139	CERAMIC CAPACITOR	CKSQYB103K50			
C140	CERAMIC CAPACITOR	CKSQYB103K50			
C141	CERAMIC CAPACITOR	CKSQYB103K50			
C142	ELECT. CAPACITOR	CEAT470M35			
C143	CERAMIC CAPACITOR	CKSQYB103K50			
C144	ELECT. CAPACITOR	CEAT332M35			
C145	ELECT. CAPACITOR	CEAT222M35			
C146	ELECT. CAPACITOR	CEAT332M16			
C147	ELECT. CAPACITOR	CEAT101M16			
C148	CERAMIC CAPACITOR	CKSQYB103K50			
C149	CERAMIC CAPACITOR	CKSQYB103K50			
C150	CERAMIC CAPACITOR	CKSQYB103K50			
C151	CERAMIC CAPACITOR	CKSQYB103K50			
C153	ELECT. CAPACITOR	CEAT100M50			
C154	CERAMIC CAPACITOR	CKSQYB103K50			
C155	CERAMIC CAPACITOR	CKSQYB103K50			
C157	CERAMIC CAPACITOR	CKSQYB103K50			
C300	CHIP CAPACITOR	CCSQCH102J50			
C301	CHIP CAPACITOR	CCSQCH102J50			
C302	CHIP CAPACITOR	CKSQYB683K25			
C303	CHIP CAPACITOR	CKSQYB683K25			
C304	ELECT. CAPACITOR	CEAT1R0M50			
C305	ELECT. CAPACITOR	CEAT1R0M50			
C306	ELECT. CAPACITOR	CEAT100M50			
C307	ELECT. CAPACITOR	CEAT100M50			
C308	ELECT. CAPACITOR	CEAT1R0M50			
C309	ELECT. CAPACITOR	CEAT1R0M50			
C312	CERAMIC CAPACITOR	CKSQYB103K50			
C313	CERAMIC CAPACITOR	CKSQYB103K50			
C316	CHIP CAPACITOR	CCSQCH121J50			
C318	CERAMIC CAPACITOR	CKSQYB103K50			
C319	CERAMIC CAPACITOR	CKSQYB103K50			

## RESISTORS

All Resistors

RS1/10S□□□J

## OTHERS

120	PCB BINDER	VEF1040
121	PCB BINDER	VEF1040
122	PCB BINDER	VEF1040
CN105	CONNECTOR POST	B5B-PH-K-S
CN108	15P PLUG	KM200TA15
CN110	CONNECTOR	52045-1745
CN111	26P CONNECTOR	52045-2645
CN112	14PJUMPER CONNECTOR	52147-1410
CN113	7P PLUG	KM200TA7
CN114	CONNECTOR	52045-1345
CN115	5P JUMPER CONNECTOR	52147-0510
JA101	PIN JACK(6P)	AKB7113
JA102	PIN JACK(6P)	AKB7113
JA103	PIN JACK(6P)	AKB7113

## **B** FRONT ASSY SEMICONDUCTORS

IC201	CONTROL MCU	PDG230A
Q201	TRANSISTOR	2SA933S
Q202	TRANSISTOR	2SA933S
Q203	TRANSISTOR	KRC101M
Q204	TRANSISTOR	KRC101M
Q205	TRANSISTOR	KRC101M
Q206	TRANSISTOR	2SC1740S
Q207	TRANSISTOR	2SC1740S
D201	DIODE	1SS355
D202	DIODE	1SS355



Mark No.	Description	Parts No.
D203	DIODE	1SS355
D204	DIODE	1SS355
D205	DIODE	1SS355
D206	DIODE	1SS355
D207	DIODE	1SS355
D208	DIODE	1SS355
D209	DIODE	1SS355
D210	DIODE	1SS355
D211	DIODE	1SS355
D212	DIODE	1SS355
D213	DIODE	1SS355
D214	DIODE	1SS355
D215	DIODE	1SS355
D216	DIODE	1SS355
D217	DIODE	1SS355
D218	DIODE	1SS355
D219	DIODE	1SS355
D220	DIODE	1SS355
D221	DIODE	1SS355
D225	DIODE	1SS355
D226	DIODE	1SS355
D227	CHIP ZENER DIODE	UDZS5.1B
D228	CHIP ZENER DIODE	UDZS5.1B
D229	DIODE	1SS355

**COIL**

L201	RADIAL INDUCTOR	LFA2R2J
------	-----------------	---------

**SWITCHES**

S201	SWITCH	ASG1034
S202	SWITCH	ASG1034
S205	SWITCH	ASG1034
S206	SWITCH	ASG1034
S207	SWITCH	ASG1034
S208	SWITCH	ASG1034
S209	SWITCH	ASG1034
S210	SWITCH	ASG1034
S211	SWITCH	ASG1034
S212	SWITCH	ASG1034
S213	SWITCH	ASG1034
S214	SWITCH	ASG1034
S217	SWITCH	ASG1034
S218	SWITCH	ASG1034
S219	SWITCH	ASG1034
S220	SWITCH	ASG1034
S221	SWITCH	ASG1034
S222	SWITCH	ASG1034
S223	SWITCH	ASG1034
S224	SWITCH	ASG1034
S229	SWITCH	ASG1034
S230	SWITCH	ASG1034
S231	SWITCH	ASG1034
S233	SWITCH	ASG1034
S234	SWITCH	ASG1034
S235	SWITCH	ASG1034
S250	ROTARY ENCODER	ASX7004

**CAPACITORS**

C201	CERAMIC CAPACITOR	CKSQYB103K50
C202	ELECT. CAPACITOR	CEAT471M6R3
C203	CERAMIC CAPACITOR	CKSQYB103K50
C204	EDL CAPACITOR(0.047F/5.5V)	ACH7017
C205	ELECT. CAPACITOR	CEAT470M50

Mark No.	Description	Parts No.
C206	ELECT. CAPACITOR	CEAT2R2M50
C207	CERAMIC CAPACITOR	CKSQYF104Z25
C208	ELECT. CAPACITOR	CEAT2R2M50
C209	CERAMIC CAPACITOR	CKSQYB473K50
C210	CERAMIC CAPACITOR	CKSQYB473K50
C211	CERAMIC CAPACITOR	CKSQYB103K50
C212	ELECT. CAPACITOR	CEAT470M25
C214	CERAMIC CAPACITOR	CKSQYB104K25
C217	CHIP CAPACITOR	CCSQCH102J50
C220	CHIP CAPACITOR	CCSQCH101J50
C221	CHIP CAPACITOR	CCSQCH101J50
C222	CHIP CAPACITOR	CCSQCH101J50
C227	ELECT. CAPACITOR	CEJA221M6R3

**RESISTORS**

R225	RESISTOR ARRAY (100KΩ)	RA9T104J
R230	RESISTOR ARRAY (10KΩ)	RA8T103J
Other Resistors		RS1/10S□□□J

**OTHERS**

201	REMOTE RECEIVER UNIT	GP1U27X
204	CABLE HOLDER (4P)	51063-0405
CN201	15P CONNECTOR	52044-1545
CN202	26P CONNECTOR	52045-2645
CN203	21P CONNECTOR	52045-2145
V201	FL TUBE	AAV7062
X201	CERAMIC RESONATOR (7.7MHz)	ASS1055

**C POWER SW ASSY SEMICONDUCTOR**

D291	LED	BR3371XJ30A
------	-----	-------------

**SWITCH**

S291	SWITCH	ASG1034
------	--------	---------

**RESISTORS**

All Resistors		RS1/10S□□□J
---------------	--	-------------

**OTHERS**

291	CABLE HOLDER(4P)	51063-0405
-----	------------------	------------

**D AMP ASSY**

**(1) CONTRAST TABLE**

AWX7223 and AWX7331 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7223	AWX7331	
	H751, H752 FUSE CLIP	Not used	AKR1004	

**(2) PARTS LIST FOR AWX7223**

**SEMICONDUCTORS**

△	IC401	AUDIO IC	PAC007A
△	IC402	AUDIO IC	PAC007A
△	IC403	AUDIO IC	PAC008A
△	IC404	IC PROTECTOR	ICP-N25
△	IC405	IC PROTECTOR	ICP-N25

# VSX-D508

Mark No.	Description	Parts No.	Mark No.	Description	Parts No.		
△	IC701	REGULATOR IC		D704	DIODE	1SS133	
	IC711	OP-AMP IC		△	D711	DIODE	D5SBA20
	Q1401	TRANSISTOR		△	D712	DIODE	D5SBA20
	Q1402	TRANSISTOR			D713	ZENNER DIODE	MTZJ18B
	Q1403	TRANSISTOR			D714	ZENNER DIODE	MTZJ18B
	Q1404	TRANSISTOR			D715	DIODE	1SS133
	Q1405	TRANSISTOR			D716	DIODE	1SS133
	Q1434	TRANSISTOR		<b>COILS AND FILTERS</b>			
	Q1435	TRANSISTOR		L1432	COIL	ATH1004	
	Q1436	TRANSISTOR		L1433	COIL	ATH1004	
	Q401	TRANSISTOR		△	L701	LINE FILTER	ATF7018
	Q402	TRANSISTOR		<b>SWITCHES AND RELAYS</b>			
	Q403	TRANSISTOR		△	RY401	RELAY	ASR7001
	Q404	TRANSISTOR		△	RY701	LOWPOWER RELAY	ASR7016
	Q405	TRANSISTOR			S701	SLIDE SWITCH	ASH7002
	Q406	TRANSISTOR		<b>CAPACITORS</b>			
	Q407	TRANSISTOR		C1401	CERAMIC CAPACITOR	CKCYB331K50	
	Q408	TRANSISTOR		C1402	ELECT. CAPACITOR	CEHAQ4R7M50	
	Q451	TRANSISTOR		C1403	ELECT. CAPACITOR	CEANP2R2M2A	
	Q452	TRANSISTOR		C1404	ELECT. CAPACITOR	CEANP2R2M2A	
	Q453	TRANSISTOR		C1405	ELECT. CAPACITOR	CEHAQ101M25	
	Q454	TRANSISTOR		C1407	CERAMIC CAPACITOR	CKCYB471K50	
	Q455	TRANSISTOR		C1408	CERAMIC CAPACITOR	CCCSL101K2H	
	Q456	TRANSISTOR		C1409	CERAMIC CAPACITOR	CKCYB471K50	
	Q457	TRANSISTOR		C1410	CERAMIC CAPACITOR	CCCSL101K2H	
	Q458	TRANSISTOR		C1411	CERAMIC CAPACITOR	CCCSL221J50	
	Q701	TRANSISTOR		C1412	CERAMIC CAPACITOR	CKCYB471K2H	
	Q711	TRANSISTOR		C1413	ELECT. CAPACITOR	CEAT4R7M2A	
	Q712	TRANSISTOR		C1414	ELECT. CAPACITOR	CEAT4R7M2A	
	Q713	TRANSISTOR		C1415	ELECT. CAPACITOR	CEANP2R2M50	
	Q714	TRANSISTOR		C1416	FILM CAPACITOR	CFTLA334J50	
	Q715	TRANSISTOR		C1417	CERAMIC CAPACITOR	CKCYB102K50	
	D1401	DIODE		C1418	CERAMIC CAPACITOR	CKCYB102K50	
	D1403	DIODE		C1419	ELECT. CAPACITOR	CEAT221M10	
	D1404	DIODE		C1420	CERAMIC CAPACITOR	CCCSL180J50	
	D1405	DIODE		C1432	AUDIO FILM CAPACITOR	CFTYA104J50	
	D1435	DIODE		C1433	AUDIO FILM CAPACITOR	CFTYA104J50	
	D401	DIODE		C1440	CERAMIC CAPACITOR	CGCYX104M25	
	D402	DIODE		C401	CERAMIC CAPACITOR	CKCYB331K50	
	D405	DIODE		C402	CERAMIC CAPACITOR	CKCYB331K50	
	D406	DIODE		C403	ELECT. CAPACITOR	CEAT4R7M50	
	D407	DIODE		C404	ELECT. CAPACITOR	CEAT4R7M50	
	D408	DIODE		C405	ELECT. CAPACITOR	CEANP2R2M2A	
	D409	DIODE		C406	ELECT. CAPACITOR	CEANP2R2M2A	
	D410	DIODE		C411	ELECT. CAPACITOR	CEHAQ101M25	
	D411	DIODE		C412	ELECT. CAPACITOR	CEAT101M25	
	D412	DIODE		C413	ELECT. CAPACITOR	CEHAQ1R0M50	
	D451	DIODE		C414	ELECT. CAPACITOR	CEAT1R0M50	
	D452	DIODE		C415	CERAMIC CAPACITOR	CCCSL221J50	
	D455	DIODE		C416	CERAMIC CAPACITOR	CCCSL221J50	
	D456	DIODE		C421	ELECT. CAPACITOR	CEAT4R7M2A	
	D457	DIODE		C422	ELECT. CAPACITOR	CEAT4R7M2A	
	D458	DIODE		C423	ELECT. CAPACITOR	CEANP2R2M50	
	D459	DIODE		C424	ELECT. CAPACITOR	CEANP2R2M50	
	D460	DIODE		C427	FILM CAPACITOR	CFTLA334J50	
	D461	DIODE		C428	FILM CAPACITOR	CFTLA334J50	
	D462	DIODE		C429	CERAMIC CAPACITOR	CKCYB102K50	
	D701	ZENER DIODE		C430	CERAMIC CAPACITOR	CKCYB102K50	
	D702	DIODE		C436	ELECT. CAPACITOR	CEAT101M10	
	D703	DIODE		C437	CERAMIC CAPACITOR	CCCSL470J50	
				C438	CERAMIC CAPACITOR	CCCSL470J50	

Mark No.	Description	Parts No.
C451	CERAMIC CAPACITOR	CKCYB331K50
C452	CERAMIC CAPACITOR	CKCYB331K50
C453	ELECT. CAPACITOR	CEAT4R7M50
C454	ELECT. CAPACITOR	CEAT4R7M50
C455	ELECT. CAPACITOR	CEANP2R2M2A
C456	ELECT. CAPACITOR	CEANP2R2M2A
C461	ELECT. CAPACITOR	CEAT101M25
C462	ELECT. CAPACITOR	CEAT101M25
C463	ELECT. CAPACITOR	CEAT1R0M50
C464	ELECT. CAPACITOR	CEAT1R0M50
C465	CERAMIC CAPACITOR	CCCSL221J50
C466	CERAMIC CAPACITOR	CCCSL221J50
C471	ELECT. CAPACITOR	CEAT4R7M2A
C472	ELECT. CAPACITOR	CEAT4R7M2A
C473	ELECT. CAPACITOR	CEANP2R2M50
C474	ELECT. CAPACITOR	CEANP2R2M50
C475	FILM CAPACITOR	CFTLA334J50
C476	FILM CAPACITOR	CFTLA334J50
C477	CERAMIC CAPACITOR	CKCYB102K50
C478	CERAMIC CAPACITOR	CKCYB102K50
C479	CERAMIC CAPACITOR	CCCSL470J50
C480	CERAMIC CAPACITOR	CCCSL470J50
C486	ELECT. CAPACITOR	CEAT101M10
C490	ELECT. CAPACITOR	CEAT1R0M50
C701	ELECT. CAPACITOR	CEAT470M25
C702	ELECT. CAPACITOR	CEAT102M25
C703	CERAMIC CAPACITOR	CKCYF103Z50
△ C704	CKA (10000pF/AC250V)	ACG7020
△ C705	CKA (10000pF/AC250V)	ACG7020
C706	CERAMIC CAPACITOR	CKCYF103Z50
△ C707	CERAMIC CAPACITOR	CKCYF103Z50
△ C711	CKA (0.01F/AC250V)	ACG1005
△ C712	CKA (0.01F/AC250V)	ACG1005
C713	ELECT. CAPACITOR	CEAT101M2A
C714	ELECT. CAPACITOR	CEAT101M2A
C715	ELECTROLYTIC CAPACIT (8200μF/71V)	ACH7018
C716	ELECTROLYTIC CAPACIT (8200μF/71V)	ACH7018
C717	ELECT. CAPACITOR	CEAT1R0M50
C718	ELECT. CAPACITOR	CEAT1R0M50
C719	ELECT. CAPACITOR	CEAT4R7M50

**RESISTORS**

△ R1409	CARBON FILM RESISTOR	RD1/4MUF331J
△ R1410	CARBON FILM RESISTOR	RD1/4MUF331J
△ R1412	RESISTOR (0.22Ω/5W)	ACN7094
△ R1432	CARBON FILM RESISTOR	RD1/4PMF4R7J
△ R1433	CARBON FILM RESISTOR	RD1/4PMF4R7J
△ R1436	METAL OXIDE RESISTOR	RS1LMF4R7J
△ R1437	METAL OXIDE RESISTOR	RS1LMF4R7J
△ R1448	METAL OXIDE RESISTOR	RS1LMF561J
△ R415	CARBON FILM RESISTOR	RD1/4MUF331J
△ R416	CARBON FILM RESISTOR	RD1/4MUF331J
△ R419	CARBON FILM RESISTOR	RD1/4MUF820J
△ R420	CARBON FILM RESISTOR	RD1/4MUF820J
△ R423	RESISTOR (0.22Ω/5W)	ACN7094
△ R424	RESISTOR (0.22Ω/5W)	ACN7094
△ R465	CARBON FILM RESISTOR	RD1/4MUF331J
△ R466	CARBON FILM RESISTOR	RD1/4MUF331J
△ R469	CARBON FILM RESISTOR	RD1/4MUF820J
△ R470	CARBON FILM RESISTOR	RD1/4MUF820J
△ R473	RESISTOR (0.22Ω/5W)	ACN7094
△ R474	RESISTOR (0.22Ω/5W)	ACN7094

Mark No.	Description	Parts No.
△ R703	CARBON FILM RESISTOR	RD1/2PM270J
△ R704	RESISTOR(2.2MΩ/ 1/2W)	RCN1080
	Other Resistors	RD1/4PU□□□J

**OTHERS**

1	HEAT SINK B	ANH1021
2	HEAT SINK B	ANH1021
401	PCB BINDER	VEF1040
402	13P CABLE HOLDER	51048-1300
403	PCB BINDER	VEF1040
404	6P CABLE HOLDER	51048-0600
405	CABLE HOLDER(10P)	51052-1000
407	CABLE HOLDER(10P)	51052-1000
408	12P CABLE HOLDER	51048-1200
409	5P CABLE HOLDER	51048-0500
411	PCB BINDER	VEF1040
412	PCB BINDER	VEF1040
△ 701	AC SOCKET 1-P	AKP1060
CN401	21P CONNECTOR	52045-2145
CN701	AC CORD SOCKET	RKP1751
H701	FUSE CLIP	AKR1004
H702	FUSE CLIP	AKR1004
H703	FUSE CLIP	AKR1004
H704	FUSE CLIP	AKR1004
J10	JUMPER WIRE	D20PYY1415E
J14	JUMPER WIRE	D20PYY0520E
J18	BOARD IN WIRE	DB020ND0
J19	BOARD IN WIRE	DB925ND0
JA413	PIN JACK(1P)	AKB7111
KN704	EARTH METAL FITTING	VNF1084
△ T701	POWER TRANSFORMER	ATT1223

**E F.SP.CONNECT ASSY****OTHERS**

686	13P CABLE HOLDER	51048-1300
-----	------------------	------------

**F R.C.SP.CONNECT ASSY****OTHERS**

691	12P CABLE HOLDER	51048-1200
-----	------------------	------------

**G FRONT SP. ASSY****SEMICONDUCTORS**

Q626	TRANSISTOR	KRA103M
Q627	TRANSISTOR	KRA103M
Q628	TRANSISTOR	KRA103M
Q629	TRANSISTOR	KRC101M
Q630	TRANSISTOR	KRC101M
Q631	TRANSISTOR	KRC101M
D626	DIODE	1SS133
D627	DIODE	1SS133
D628	DIODE	1SS133

**COILS**

L627	COIL	ATH1004
L628	COIL	ATH1004

# VSX-D508

Mark No.	Description	Parts No.
----------	-------------	-----------

## RELAYS

△	RY626	RELAY	ASR7001
△	RY627	RELAY	ASR7001
△	RY628	RELAY	ASR7001

## CAPACITORS

C627	AUDIO FILM CAPACITOR	CFTYA104J50
C628	AUDIO FILM CAPACITOR	CFTYA104J50

## RESISTORS

△	R626	METAL OXIDE RESISTOR	RS1LMF561J
△	R627	METAL OXIDE RESISTOR	RS1LMF561J
△	R628	METAL OXIDE RESISTOR	RS1LMF561J
△	R629	CARBON FILM RESISTOR	RD1/4PMF4R7J
△	R630	CARBON FILM RESISTOR	RD1/4PMF4R7J
△	R631	METAL OXIDE RESISTOR	RS1LMF4R7J
△	R632	METAL OXIDE RESISTOR	RS1LMF4R7J
	Other Resistors		RD1/4PM□□□J

## OTHERS

CN626	PLUG(13P)	AKM7006
CN627	SPEAKER TERMINAL 8-P	AKE7006

## H REAR SP ASSY

### SEMICONDUCTORS

Q651	TRANSISTOR	KRA101M
Q652	TRANSISTOR	2SC1740S
D651	DIODE	1SS355
D652	DIODE	1SS355

### COIL

L651	COIL	ATH1004
------	------	---------

## RELAYS

△	RY651	RELAY	ASR7001
△	RY652	RELAY	ASR7001

## CAPACITORS

C651	AUDIO FILM CAPACITOR	CFTYA104J50
------	----------------------	-------------

## RESISTORS

△	R651	METAL OXIDE RESISTOR	RS2LMF271J
△	R652	CARBON FILM RESISTOR	RD1/4LMF4R7J
△	R657	METAL OXIDE RESISTOR	RS1LMF4R7J
	Other Resistors		RS1/10S□□□J

## OTHERS

CN651	PLUG(12P)	AKM7007
CN652	SPEAKER TERMINAL 6-P	AKE7041
JA653	PIN JACK(1P)	AKB7111

## I HEADPHONE ASSY

### RESISTORS

△	R1461	METAL OXIDE RESISTOR	RS3LMF331J
△	R1462	METAL OXIDE RESISTOR	RS3LMF331J

### OTHERS

JA1461	HEADPHONE JACK	RKB1014
--------	----------------	---------

Mark No.	Description	Parts No.
----------	-------------	-----------

## J TRANS 2 ASSY

### SEMICONDUCTORS

△	IC351	IC PROTECTOR	ICP-N70
△	IC352	IC PROTECTOR	ICP-N70
△	IC353	IC PROTECTOR	ICP-N70
△	IC354	IC PROTECTOR	ICP-N70
	D351	DIODE	S5688G
	D352	DIODE	S5688G
	D354	DIODE	S5688G
	D355	DIODE	S5688G
	D356	ZENER DIODE	MTZJ20A
	D357	ZENER DIODE	MTZJ9.1B

### CAPACITORS

C355	ELECT. CAPACITOR	CEAT470M50
C356	ELECT. CAPACITOR	CEAT470M25
C357	ELECT. CAPACITOR	CEAT470M50
C358	ELECT. CAPACITOR	CEAT101M35
C359	ELECT. CAPACITOR	CEAT101M10

### RESISTORS

△	R358	METAL OXIDE RESISTOR	RS1LMF182J
	Other Resistors		RD1/4PU□□□J

### OTHERS

351	CABLE HOLDER(6P)	51052-0600
352	5P CABLE HOLDER	51048-0500
353	6P CABLE HOLDER	51048-0600
356	CABLE HOLDER(4P)	51052-0400
357	PCB BINDER	VEF1040
358	PCB BINDER	VEF1040
CN354	4P PLUG	KM200TA4
CN355	4P PLUG	KM200TA4
J9	JUMPER WIRE	D20PY0545E

## K TRANS 1 ASSY

### OTHERS

J51	LEAD WIRE UNIT	DB035NB0
J52	LEAD WIRE UNIT	DB135NB0

## L BARRIER ASSY

### OTHERS

CN681	4P SOCKET	KP200TA4L
CN682	4P SOCKET	KP200TA4L

## M FET ASSY

### SEMICONDUCTORS

△	Q1451	POWER MOS FET	IRF9540A
△	Q1452	POWER MOS FET	IRF540A

### RESISTORS

△	R1451	CARBON FILM RESISTOR	RD1/4PMF101J
△	R1452	CARBON FILM RESISTOR	RD1/4PMF101J
	Other Resistors		RD1/4PM□□□J

### OTHERS

1451	CABLE HOLDER(10P)	51052-1000
------	-------------------	------------

Mark No.	Description	Parts No.
----------	-------------	-----------

## N VIDEO ASSY

### SEMICONDUCTORS

IC501	VIDEO SW IC	NJM2296D
IC502	OP-AMP IC	NJM4558D-D
IC503	OP-AMP IC	NJM4558D-D
Q501	TRANSISTOR	2SC3377
Q502	TRANSISTOR	2SA1515
Q505	TRANSISTOR	2SA933S
Q506	TRANSISTOR	KRC103M
D501	ZENER DIODE	MTZJ6.2B
D502	ZENER DIODE	MTZJ6.2B
D503	DIODE	1SS133
D505	DIODE	1SS133
D506	DIODE	1SS133
D507	DIODE	1SS133
D508	DIODE	1SS133
D509	DIODE	1SS133
D510	DIODE	1SS133

### CAPACITORS

C502	ELECT. CAPACITOR	CEAT470M25
C503	ELECT. CAPACITOR	CEAT470M25
C504	ELECT. CAPACITOR	CEAT470M25
C505	CERAMIC CAPACITOR	CCCSL221J50
C506	CERAMIC CAPACITOR	CCCSL221J50
C509	CERAMIC CAPACITOR	CGCYX473M25
C510	CERAMIC CAPACITOR	CGCYX473M25
C511	ELECT. CAPACITOR	CEAT470M25
C512	ELECT. CAPACITOR	CEAT470M25
C513	CERAMIC CAPACITOR	CKCYF103Z50
C514	CERAMIC CAPACITOR	CKCYF103Z50
C517	ELECT. CAPACITOR	CEAT4R7M50
C518	ELECT. CAPACITOR	CEAT4R7M50
C521	ELECT. CAPACITOR	CEAT4R7M50
C522	ELECT. CAPACITOR	CEAT4R7M50
C523	CERAMIC CAPACITOR	CKCYF103Z50
C524	CERAMIC CAPACITOR	CKCYF103Z50
C525	CERAMIC CAPACITOR	CKCYF103Z50
C526	CERAMIC CAPACITOR	CKCYF103Z50
C531	CERAMIC CAPACITOR	CKCYF103Z50
C532	CERAMIC CAPACITOR	CKCYF103Z50
C533	CERAMIC CAPACITOR	CKCYF103Z50
C535	ELECT. CAPACITOR	CEAT470M25

### RESISTORS

△	R510	METAL OXIDE RESISTOR	RS1LMF151J
△	R511	METAL OXIDE RESISTOR	RS1LMF151J
		Other Resistors	RD1/4PU□□□J

### OTHERS

502	2P RCA PIN JACK	AKB7017
CN504	PIN JACK (4P)	AKB7112
CN507	CONNECTOR	52045-1745
JA501	3P RCA PIN JACK	AKB7056
JA505	JACK	RKN1004
JA506	JACK	RKN1004

Mark No.	Description	Parts No.
----------	-------------	-----------

## O FRONT VIDEO ASSY

### CAPACITORS

C605	CERAMIC CAPACITOR	CGCYX104M25
C606	CERAMIC CAPACITOR	CGCYX104M25
C608	ELECT. CAPACITOR	CEAT470M25
C609	CERAMIC CAPACITOR	CKCYB471K50
C610	CERAMIC CAPACITOR	CKCYB471K50
C611	CERAMIC CAPACITOR	CKCYF103Z50
C612	CERAMIC CAPACITOR	CKCYF103Z50

### RESISTORS

All Resistors RD1/4PU□□□J

### OTHERS

601	PCB BINDER	VEF1040
CN601	PIN JACK(3P)	AKB7085
CN602	CONNECTOR POST	B5B-PH-K-S

## P DOLBY DIGITAL ASSY

### SEMICONDUCTORS

IC9101	LOGIC IC	TC74HCU04AF
IC9151	LOGIC IC	TC74HC151AF
IC9201	OP-AMP IC	NJM2100M
IC9301	IC	TC74LVX244FT
IC9311	OCTAL BUS BUFFER IC	TC74VHCT244AFT
IC9321	DOLBY DIGITAL IC	MB86342B
IC9322	SRAM(256K)	CY62256VLL-70SNC
△ IC9391	REGULATOR IC	PQ20WZ51
IC9401	MULTI CH CODEC IC	CS4226-KQ
IC9601	E-SW IC	TC9164AF
IC9602	IC	NJM4558MD
IC9603	IC	NJM4558MD
IC9604	IC	NJM4558MD
IC9701	IC	NJM4558MD
IC9702	IC	NJM4558MD
IC9703	IC	NJM4558MD
IC9704	IC	NJM4558MD
IC9705	IC	NJM4558MD
Q9201	CHIP MUTING TR	2SC3326
Q9202	CHIP MUTING TR	2SC3326
Q9203	CHIP DIGITAL TRANS.	DTA124EK
Q9204	DIGITAL TRANSISTOR	DTC124EK
Q9321	DIGITAL TRANSISTOR	DTC124EK
Q9322	DIGITAL TRANSISTOR	DTC124EK
Q9324	DIGITAL TRANSISTOR	DTC124EK
Q9325	CHIP DIGITAL TRANS.	DTA124EK
Q9401	DIGITAL TRANSISTOR	DTC124EK
Q9402	CHIP DIGITAL TRANS.	DTA124EK
Q9601	CHIP MUTING TR	2SC3326
Q9602	CHIP MUTING TR	2SC3326
Q9603	CHIP MUTING TR	2SC3326
Q9604	CHIP MUTING TR	2SC3326
Q9605	CHIP MUTING TR	2SC3326
Q9606	CHIP MUTING TR	2SC3326
Q9607	CHIP DIGITAL TRANS.	DTA124EK
Q9608	DIGITAL TRANSISTOR	DTC124EK
Q9609	CHIP DIGITAL TRANS.	DTA124EK
Q9610	CHIP DIGITAL TRANS.	DTA124EK
Q9611	DIGITAL TRANSISTOR	DTC124EK
Q9612	DIGITAL TRANSISTOR	DTC124EK

# VSX-D508

Mark No.	Description	Parts No.	Mark No.	Description	Parts No.
Q9613	CHIP DIGITAL TRANS.	DTA124EK	C9321	ELECT. CAPACITOR	CEJA221M6R3
Q9614	CHIP DIGITAL TRANS.	DTA124EK	C9323	CHIP CERAMIC C.	CCSRCH221J50
Q9615	CHIP MUTING TR	2SC3326	C9324	CERAMIC CAPACITOR	CCSRCH101J50
Q9616	CHIP MUTING TR	2SC3326	C9325	CERAMIC CAPACITOR	CKSRYP104Z16
D9601	DIODE	1SS181	C9326	CHIP CERAMIC C.	CCSRCH120J50
D9602	DIODE	1SS181	C9327	CHIP CERAMIC C.	CCSRCH120J50
<b>COILS</b>			C9329	CERAMIC CAPACITOR	CCSRCH101J50
L9101	CHIP SOLID INDUCTOR	QTL1013	C9330	CERAMIC CAPACITOR	CKSRYP104Z16
L9102	CHIP SOLID INDUCTOR	QTL1013	C9331	CERAMIC CAPACITOR	CCSRCH101J50
L9151	CHIP SOLID INDUCTOR	QTL1013	C9332	CERAMIC CAPACITOR	CKSRYP104Z16
L9301	CHIP SOLID INDUCTOR	QTL1013	C9334	CERAMIC CAPACITOR	CCSRCH101J50
L9311	CHIP SOLID INDUCTOR	QTL1013	C9335	CERAMIC CAPACITOR	CKSRYP104Z16
L9321	CHIP SOLID INDUCTOR	ATL7002	C9336	CERAMIC CAPACITOR	CCSRCH101J50
L9323	CHIP SOLID INDUCTOR	QTL1013	C9337	CERAMIC CAPACITOR	CKSRYP104Z16
L9391	CHIP SOLID INDUCTOR	ATL7002	C9338	CERAMIC CAPACITOR	CCSRCH101J50
L9402	CHIP SOLID INDUCTOR	QTL1013	C9339	CERAMIC CAPACITOR	CKSRYP104Z16
L9403	CHIP SOLID INDUCTOR	QTL1013	C9340	ELECT. CAPACITOR	CEJA101M10
L9801	CHIP SOLID INDUCTOR	QTL1013	C9341	CERAMIC CAPACITOR	CKSRYP104Z16
L9802	CHIP SOLID INDUCTOR	QTL1013	C9342	CERAMIC CAPACITOR	CCSRCH101J50
L9803	CHIP SOLID INDUCTOR	QTL1013	C9368	CHIP CERAMIC C.	CCSRCH471J50
L9804	CHIP SOLID INDUCTOR	QTL1013	C9369	CHIP CERAMIC C.	CCSRCH221J50
L9805	CHIP SOLID INDUCTOR	QTL1013	C9370	CHIP CERAMIC C.	CCSRCH221J50
L9807	CHIP SOLID INDUCTOR	ATL7002	C9377	CHIP CERAMIC C.	CCSRCH151J50
L9809	CHIP SOLID INDUCTOR	ATL7002	C9391	ELECT. CAPACITOR	CEJA4R7M50
			C9393	ELECT. CAPACITOR	CEJA101M10
			C9401	ELECT. CAPACITOR	CEJA101M10
			C9402	ELECT. CAPACITOR	CEJA101M10
C9101	CHIP CERAMIC C.	CKSRYP103K50	C9404	CERAMIC CAPACITOR	CKSRYP104Z16
C9102	CERAMIC CAPACITOR	CKSRYP104Z16	C9405	CHIP CERAMIC C.	CCSRCH471J50
C9104	CERAMIC CAPACITOR	CCSRCH560J50	C9406	CHIP CERAMIC C.	CKSRYP223K50
C9105	ELECT. CAPACITOR	CEJA101M10	C9407	CERAMIC CAPACITOR	CKSQYB224K16
C9107	CHIP CERAMIC C.	CKSRYP103K50	C9408	CERAMIC CAPACITOR	CCSRCH180J50
C9108	CHIP CERAMIC C.	CCSRCH271J50	C9409	CERAMIC CAPACITOR	CCSRCH180J50
C9109	ELECT. CAPACITOR	CEJA101M10	C9410	ELECT. CAPACITOR	CEJA1R0M50
C9115	CERAMIC CAPACITOR	CKSRYP104Z16	C9413	CHIP CERAMIC C.	CCSRCH271J50
C9116	CERAMIC CAPACITOR	CKSRYP104Z16	C9414	CHIP CERAMIC C.	CCSRCH471J50
C9151	ELECT. CAPACITOR	CEJA101M10	C9415	ELECT. CAPACITOR	CEJA101M10
C9153	CHIP CERAMIC C.	CKSRYP103K50	C9418	CERAMIC CAPACITOR	CCSRCH390J50
C9154	CHIP CERAMIC C.	CCSRCH271J50	C9419	CERAMIC CAPACITOR	CCSRCH390J50
C9158	CERAMIC CAPACITOR	CKSRYP104K16	C9420	CERAMIC CAPACITOR	CCSRCH102J50
C9159	CERAMIC CAPACITOR	CCSRCH101J50	C9421	CERAMIC CAPACITOR	CKSRYP104Z16
C9201	CERAMIC CAPACITOR	CCSRCH101J50	C9422	CHIP CERAMIC C.	CCSRCH471J50
C9202	CERAMIC CAPACITOR	CCSRCH101J50	C9423	CHIP CERAMIC C.	CCSRCH471J50
C9203	ELECT. CAPACITOR	CEJA4R7M50	C9424	CHIP CERAMIC C.	CCSRCH471J50
C9204	ELECT. CAPACITOR	CEJA4R7M50	C9425	CHIP CERAMIC C.	CCSRCH471J50
C9205	ELECT. CAPACITOR	CEJANP100M10	C9426	CHIP CERAMIC C.	CCSRCH471J50
C9206	ELECT. CAPACITOR	CEJANP100M10	C9427	CERAMIC CAPACITOR	CKSRYP104Z16
C9207	ELECT. CAPACITOR	CEJA221M6R3	C9428	CHIP CERAMIC C.	CCSRCH331J50
C9208	CERAMIC CAPACITOR	CKSRYP104Z16	C9429	CHIP CERAMIC C.	CCSRCH331J50
C9209	CERAMIC CAPACITOR	CKSRYP104Z16	C9431	CHIP CERAMIC C.	CCSRCH471J50
C9301	ELECT. CAPACITOR	CEJA101M10	C9432	CERAMIC CAPACITOR	CKSRYP104Z16
C9302	CHIP CERAMIC C.	CKSRYP103K50	C9433	ELECT. CAPACITOR	CEJAR47M50
C9303	CHIP CERAMIC C.	CCSRCH271J50	C9601	CHIP CERAMIC C.	CCSRCH471J50
C9307	CHIP CERAMIC C.	CCSRCH471J50	C9602	CHIP CERAMIC C.	CCSRCH471J50
C9308	CHIP CERAMIC C.	CCSRCH471J50	C9603	ELECT. CAPACITOR	CEJA4R7M50
C9309	CHIP CERAMIC C.	CCSRCH471J50	C9604	ELECT. CAPACITOR	CEJA4R7M50
C9310	CHIP CERAMIC C.	CCSRCH471J50	C9605	CHIP CERAMIC C.	CCSRCH471J50
C9311	ELECT. CAPACITOR	CEJA101M10	C9606	CHIP CERAMIC C.	CCSRCH471J50
C9312	CHIP CERAMIC C.	CKSRYP103K50	C9607	CERAMIC CAPACITOR	CKSRYP104Z16
C9313	CHIP CERAMIC C.	CCSRCH271J50	C9608	CERAMIC CAPACITOR	CKSRYP104Z16
C9315	CHIP CERAMIC C.	CCSRCH471J50			
C9316	CHIP CERAMIC C.	CCSRCH471J50			

Mark No.	Description	Parts No.	Mark No.	Description	Parts No.
C9609	CHIP CERAMIC C.	CCSRCH221J50	C9738	CERAMIC CAPACITOR	CKSRYF104Z16
C9610	CHIP CERAMIC C.	CCSRCH221J50	C9739	ELECT. CAPACITOR	CEJA220M25
C9613	CHIP CERAMIC C.	CCSRCH471J50	C9740	ELECT. CAPACITOR	CEJA220M25
C9614	CHIP CERAMIC C.	CCSRCH471J50	C9801	ELECT. CAPACITOR	CEJA101M10
C9615	ELECT. CAPACITOR	CEJA4R7M50	C9803	ELECT. CAPACITOR	CEJA220M25
C9616	ELECT. CAPACITOR	CEJA4R7M50	C9805	ELECT. CAPACITOR	CEJA220M25
C9617	CHIP CERAMIC C.	CCSRCH471J50	C9807	CERAMIC CAPACITOR	CKSRYF104Z16
C9618	CHIP CERAMIC C.	CCSRCH471J50			
C9619	CERAMIC CAPACITOR	CKSRYF104Z16	<b>RESISTORS</b>		
C9620	CERAMIC CAPACITOR	CKSRYF104Z16	R9391	CHIP RESISTOR	RS1/16S5600F
C9621	CHIP CERAMIC C.	CCSRCH221J50	R9393	CHIP RESISTOR	RS1/16S2001F
C9622	CHIP CERAMIC C.	CCSRCH221J50	Other Resistors		
C9625	CHIP CERAMIC C.	CCSRCH471J50			RS1/16S□□□J
C9626	CHIP CERAMIC C.	CKSRYB103K50	<b>OTHERS</b>		
C9627	ELECT. CAPACITOR	CEJA4R7M50	CN9371	15P CONNECTOR	52044-1545
C9628	ELECT. CAPACITOR	CEJA4R7M50	CN9801	15P SOCKET	KP200TA15L
C9629	CHIP CERAMIC C.	CCSRCH271J50	CN9802	7P SOCKET	KP200TA7L
C9631	CERAMIC CAPACITOR	CKSRYF104Z16	JA9101	JACK	VKB1077
C9632	CERAMIC CAPACITOR	CKSRYF104Z16	JA9103	OPTICAL RECEIVE MOD.	GP1F32R
C9633	CHIP CERAMIC C.	CKSRYB122K50			
C9636	CHIP CERAMIC C.	CKSRYB103K50	JA9104	OPTICAL RECEIVE MOD.	GP1F32R
C9637	CHIP CERAMIC C.	CKSRYB103K50	X9321	CRYSTAL RESONATOR (27.648MHz)	ASS7022
C9639	CHIP CERAMIC C.	CCSRCH471J50	X9401	CRYSTAL RESONATOR (18.432MHz)	RSS1052
C9642	CHIP CERAMIC C.	CKSRYB103K50			
C9701	CERAMIC CAPACITOR	CKSRYB682K50			
C9702	CERAMIC CAPACITOR	CKSRYB682K50			
C9703	CHIP CERAMIC C.	CKSRYB222K50			
C9704	CHIP CERAMIC C.	CKSRYB222K50			
C9705	CERAMIC CAPACITOR	CKSRYB104K16			
C9706	CERAMIC CAPACITOR	CKSRYB104K16			
C9707	CHIP CERAMIC C.	CCSRCH151J50			
C9708	CHIP CERAMIC C.	CCSRCH151J50			
C9709	CERAMIC CAPACITOR	CKSRYF104Z16			
C9710	CERAMIC CAPACITOR	CKSRYF104Z16			
C9711	CERAMIC CAPACITOR	CKSRYF104Z16			
C9712	CERAMIC CAPACITOR	CKSRYF104Z16			
C9713	ELECT. CAPACITOR	CEJA220M25			
C9714	ELECT. CAPACITOR	CEJA220M25			
C9715	CERAMIC CAPACITOR	CKSRYB682K50			
C9716	CERAMIC CAPACITOR	CKSRYB682K50			
C9717	CHIP CERAMIC C.	CKSRYB222K50			
C9718	CHIP CERAMIC C.	CKSRYB222K50			
C9719	CERAMIC CAPACITOR	CKSRYB104K16			
C9720	CERAMIC CAPACITOR	CKSRYB104K16			
C9721	CHIP CERAMIC C.	CCSRCH151J50			
C9722	CHIP CERAMIC C.	CCSRCH151J50			
C9723	CERAMIC CAPACITOR	CKSRYF104Z16			
C9724	CERAMIC CAPACITOR	CKSRYF104Z16			
C9725	CERAMIC CAPACITOR	CKSRYF104Z16			
C9726	CERAMIC CAPACITOR	CKSRYF104Z16			
C9727	ELECT. CAPACITOR	CEJA220M25			
C9728	ELECT. CAPACITOR	CEJA220M25			
C9729	CERAMIC CAPACITOR	CKSRYB682K50			
C9731	CHIP CERAMIC C.	CKSRYB222K50			
C9732	CERAMIC CAPACITOR	CKSRYB682K50			
C9733	CERAMIC CAPACITOR	CKSRYB104K16			
C9734	CERAMIC CAPACITOR	CKSRYB104K16			
C9735	CHIP CERAMIC C.	CCSRCH151J50			
C9736	CERAMIC CAPACITOR	CCSRCH102J50			
C9737	CERAMIC CAPACITOR	CKSRYF104Z16			

## 6. ADJUSTMENT

There is no information to be shown in this chapter.

# 7. GENERAL INFORMATION

## 7.1 PARTS


### 7.1.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

#### ■ PDG230A (FRONT ASSY : IC201)

• System Control Microcomputer

• Pin Arrangement (Top View)

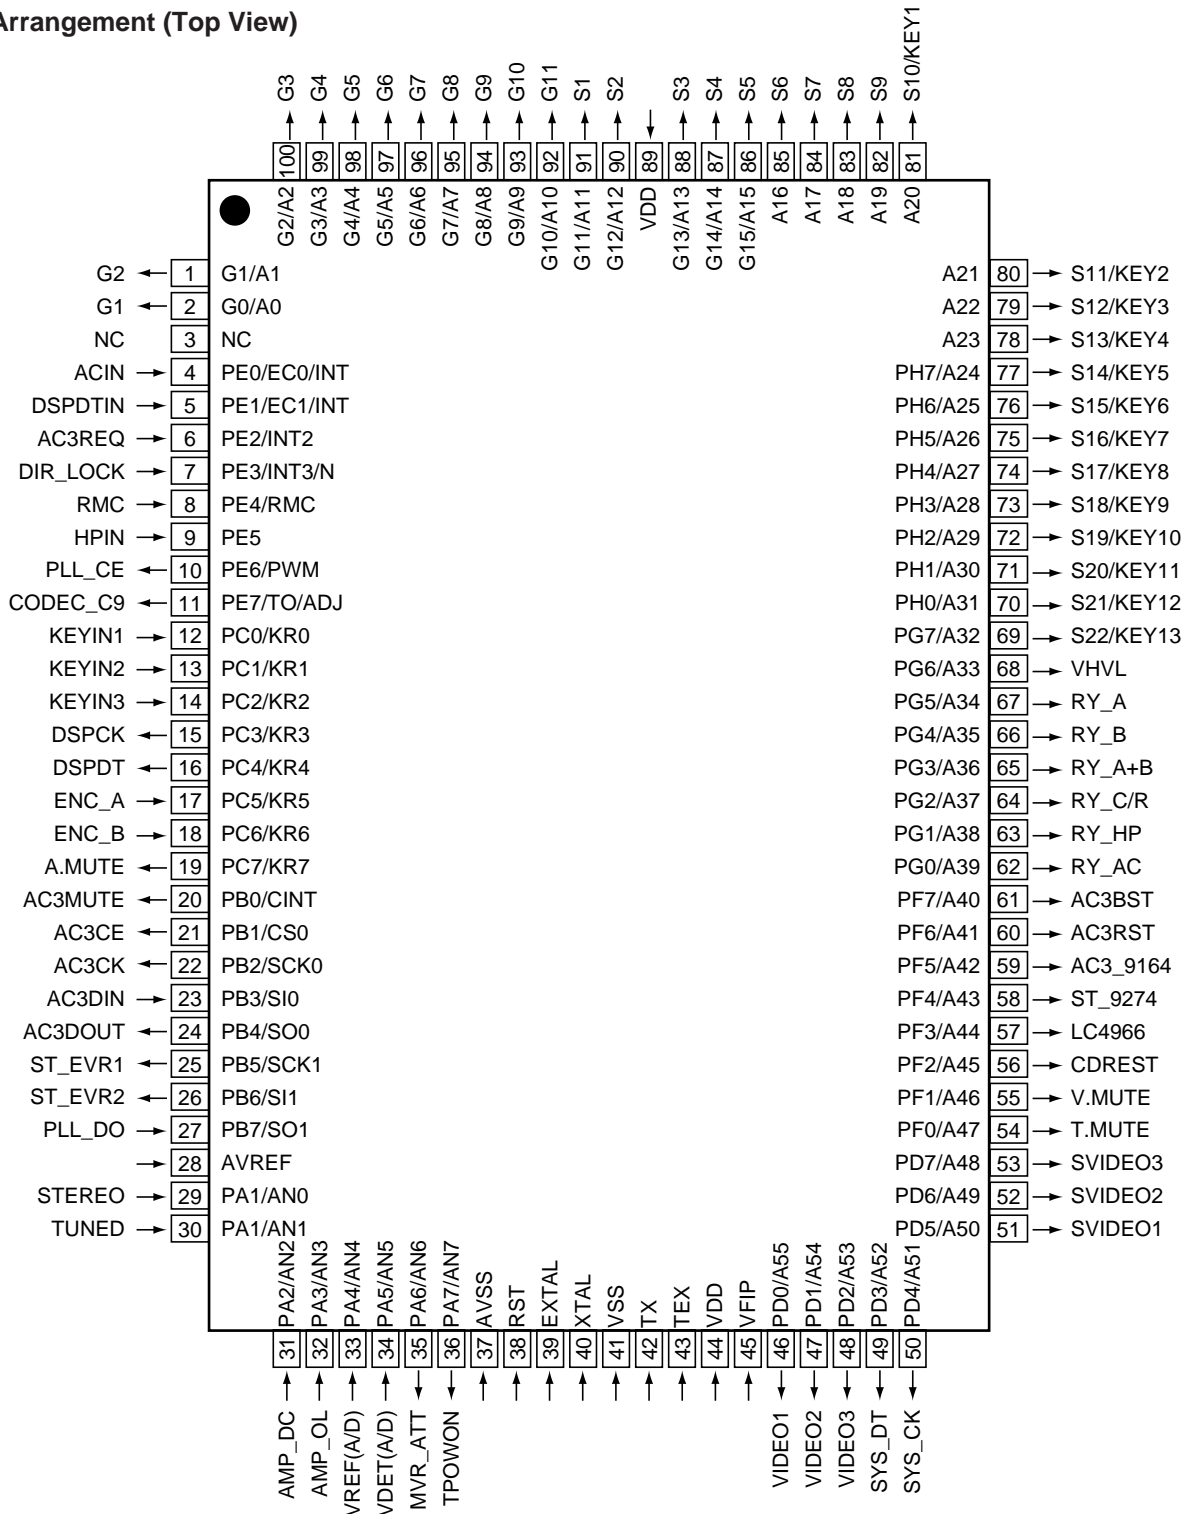



## ●Pin Function

No.	Pin Name	I/O	Pin Function	Active
1	G2	O	Grid output 2	H
2	G1	O	Grid output 1	H
3	NC	–	Connect to VDD	
4	ACIN	I	AC pulse input	
5	DSPDTIN	I	Data input from CS4226-KQ	
6	AC3REQ	I	Data request from MUCAP	
7	DIRLOCK	I	Digital mode : DIR lock/unlock (L : Lock) Analog mode : DSP over-load detection (H : Detection)	
8	RMC	I	Remote control signal input (no-carrier signal)	
9	HPIN	I	Headphone connection detection (H : connect)	
10	PLL_CE	O	Chip select signal for communication with LC72131 (tuner)	H
11	CODEC_CS	O	CS4226-KQ chip select	L
12	KEYIN1	I	Key scan input 1	
13	KEYIN2	I	Key scan input 2	
14	KEYIN3	I	Key scan input 3	
15	DSPCK	O	Clock line for communication with CS4226-KQ and TC9164AF	H
16	DSPDT	O	Data line for communication with CS4226-KQ and TC9164AF	H
17	ENC_A	I	Rotary encoder signal input A	
18	ENC_B	I	Rotary encoder signal input B	
19	AMUTE	O	Audio mute	L
20	AC3MUTE	O	MUCAP mute	H
21	AC3CE	O	Chip select for communication with MUCAP	L
22	AC3CK	O	Clock line for communication with MUCAPMUCAP	H
23	AC3DIN	I	Data reception line from MUCAP	
24	AC3DOUT	O	Data line for communication with MUCAP	H
25	ST_EVR1	O	Strobe 1 for electric volume LC7535M	H
26	ST_EVR2	O	Strobe 2 for electric volume LC7535M	H
27	PLL_DA	O	Data output signal for communication with LC72131 (tuner)	H
28	AVref	–	Connect to VDD	
29	STEREO	I	Stereo/Monoral signal judgment signal	
30	TUNED	I	TUNED information	
31	AMP_DC	I	DC abnormality detection of protection circuit (L : Abnormality detection)	
32	AMP_OL	I	Over-load detection of protection circuit (L : Abnormality detection)	
33	VREF	I	Reference value (A/D) for detecting the AMP input signal level for VH/VL switch	
34	VDET	I	AMP input signal level detection (A/D) for VH/VL switch	
35	MVR_ATT	O	ATT control of master volume (L : Less than -20dB)	L
36	TPOWON	O	Tuner module ON/OFF	H
37	AVSS	–	Connect to VSS	
38	RST	–	Reset	
39	EXTAL	–	Connect to the oscillator (7.7MHz)	
40	XTAL	–		
41	VSS	–	Connect to VSS	
42	TX	–	Open	
43	TEX	–	Connect to VSS	
44	VDD	–	+5V	
45	VFDP	–	-30V	
46	VIDEO1	O	NJM2296D control	H
47	VIDEO2			
48	VIDEO3			
49	SYS_DT	O	Clock signal for communication with LC7535M and TC9274N-001	H
50	SYS_CK			

# VSX-D508

No.	Pin Name	I/O	Pin Function	Active
51	SVIDEO1	O	TC4051 control (S terminal control)	H
52	SVIDEO2			
53	SVIDEO3			
54	TMUTE	O	Tuner mute	H
55	VMUTE	O	Video mute	L
56	CDREST	O	CS4226-KQ reset	L
57	LC4966	O	Input switch the DVD 6ch (L: DVD 5.1ch)	H
58	ST_9174	O	Strobe signal for communication with TC9174	H
59	AC3_9164	O	Strobe signal for communication TC9164AF	H
60	AC3RST	O	Reset the MUCAP	L
61	AC3BST	O	During transfer the application data to MUCAP "H"	H
62	RY_AC	O	AC relay ON/OFF	H
63	RY_HP	O	Headphone relay ON/OFF	H
64	RY_C/R	O	Rear/Center relay ON/OFF	H
65	RY_A+B	O	Speaker A + B relay ON/OFF	H
66	RY_B	O	Speaker B relay ON/OFF	H
67	RY_A	O	Speaker A relay ON/OFF	H
68	VHVL	O	Power switch for AMP system (H : VH)	H
69	S22/KEY13	O	Segment output 22/key scan output 13	H
70	S21/KEY12		Segment output 21/key scan output 12	
71	S20/KEY11		Segment output 20/key scan output 11	
72	S19/KEY10		Segment output 19/key scan output 10	
73	S18/KEY9		Segment output 18/key scan output 9	
74	S17/KEY8		Segment output 17/key scan output 8	
75	S16/KEY7		Segment output 16/key scan output 7	
76	S15/KEY6		Segment output 15/key scan output 6	
77	S14/KEY5		Segment output 14/key scan output 5	
78	S13/KEY4		Segment output 13/key scan output 4	
79	S12/KEY3		Segment output 12/key scan output 3	
80	S11/KEY2		Segment output 11/key scan output 2	
81	S10/KEY1		Segment output 10/key scan output 1	
82	S9	O	Segment output 9	H
83	S8		Segment output 8	
84	S7		Segment output 7	
85	S6		Segment output 6	
86	S5		Segment output 5	
87	S4		Segment output 4	
88	S3		Segment output 3	
89	VDD	-	5V	
90	S2	O	Segment output 2	H
91	S1		Segment output 1	
92	G11		Grid output 11	
93	G10		Grid output 10	
94	G9		Grid output 9	
95	G8		Grid output 8	
96	G7		Grid output 7	
97	G6		Grid output 6	
98	G5		Grid output 5	
99	G4		Grid output 4	
100	G3		Grid output 3	

- Note :**
- In the power off condition (with the remote control unit key or the main unit tact key), set to "L" excepting tuner mute (pin 54). However, it nothing is done against to the input port.
  - When pin 10 and 11 detect "L" at the reset, be careful because it enter the microcomputer's own test mode.



• Anode Connection

	11G	10G	9G-2G	1G
P1	LFE	B	a1	dB
P2	○	A	a2	2a
P3	RS	SP▶	h	2b
P4	S	H.P	j	2f
P5	LS	TUNED	k	2g
P6	R	MONO	b	2c
P7	C	STEREO	f	2e
P8	L	TAPE 2	m	2d
P9	DIGITAL	DIRECT	g	1a
P10	PRO LOGIC	LOUDNESS	c	1b
P11	MPEG	DNR	e	1f
P12	dB	VIRTUAL	r	1g
P13	MPEG	MIDNIGHT	p	1c
P14	DTS	S-D THEATER	n	1e
P15	AC-3	○	d1	1d
P16	DIGITAL	ATT	d2	◀▶
P17	ANALOG	SFC	DP2	RDS
P18	S5	-	DP1	RFATT
P19	-	-	S1	EON
P20	-	-	S4	(EON)
P21	-	-	S2	-
P22	-	-	S3	-


## 7.2 DISASSEMBLY

**1** Remove the Bonnet. (seven screws)


**2** Release three binders (1) from the Power Transformer (T1).

**3** Remove all screws which fixing the Chassis.

- INPUT Assy (eight screws (2), Card Spacer (3))
- DSP Shield (screw (4))
- Heat Sink (four screws (5))
- AMP Assy (three screws (6), Locking Card Spacer (7))
- Power Transformer (T1) (four screws (8))
- Rear Panel (three screws (9))

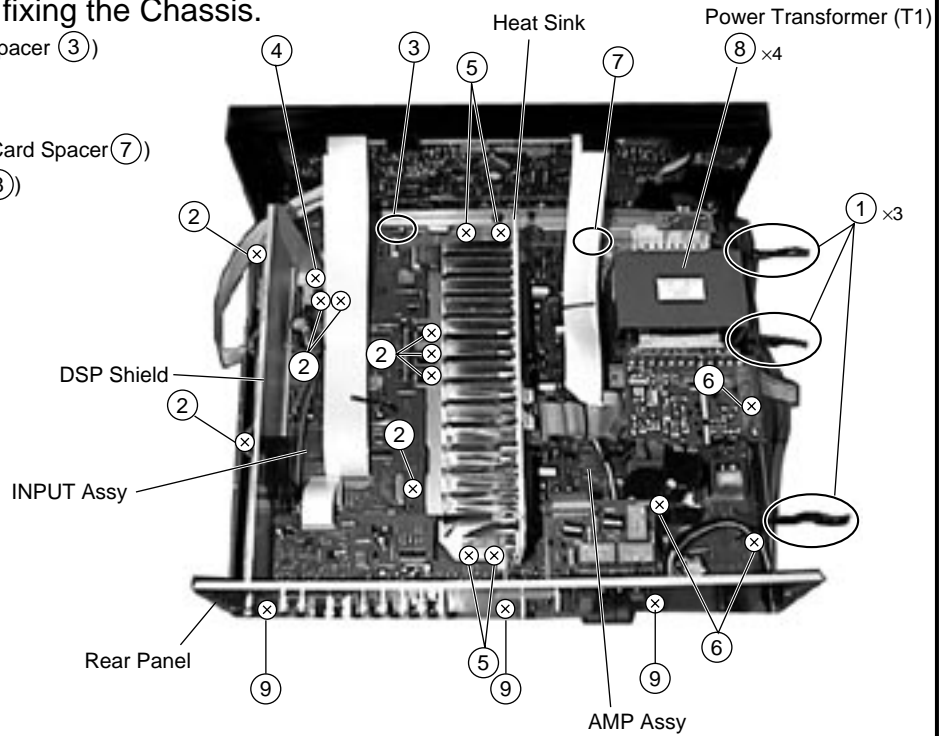


**4** Put the Power Transformer on the bottom side, and stand the component sideways.

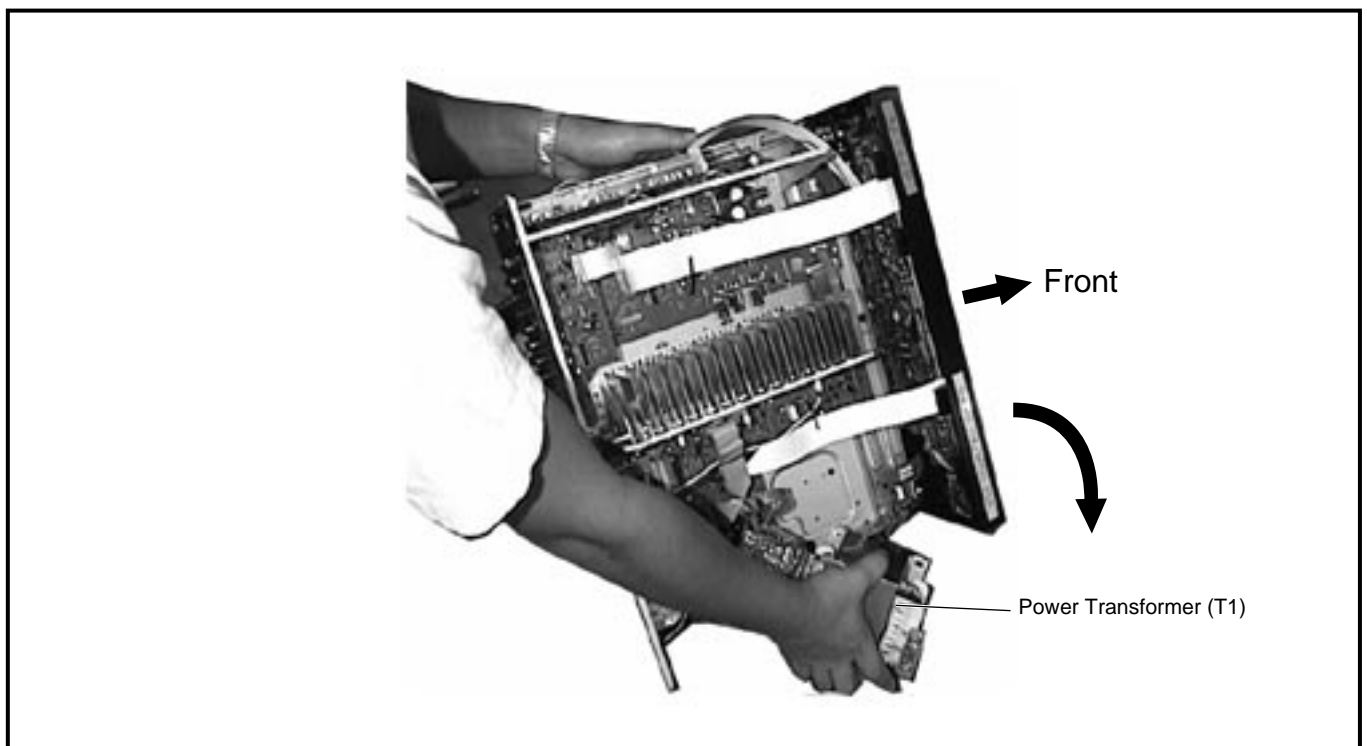


**5** Open the Chassis and Rear Panel

It can be diagnosed under this condition.  
Show the principal PCB Assemblies  
in the illustration.

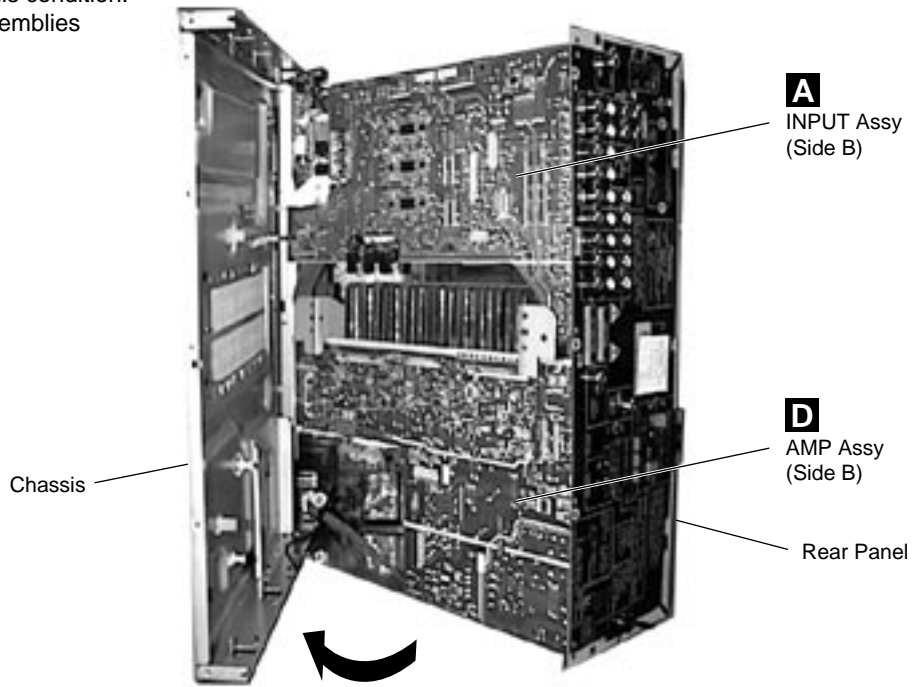


**Rear View**

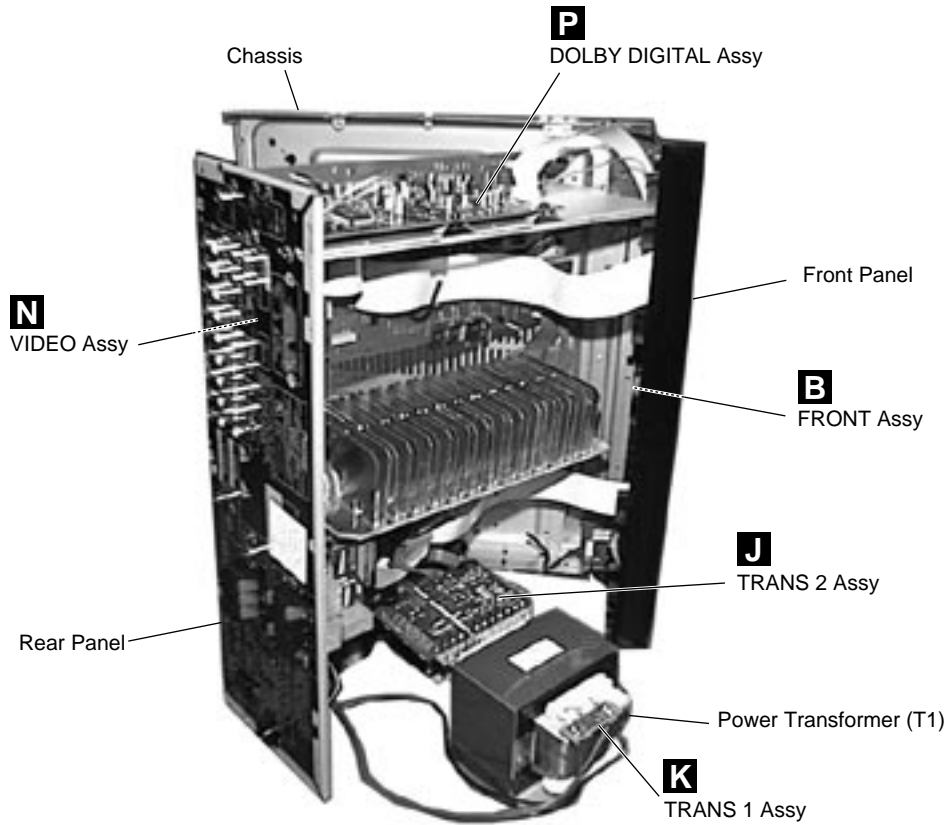

**Top View**


### 7.3 BLOCK DIAGRAM

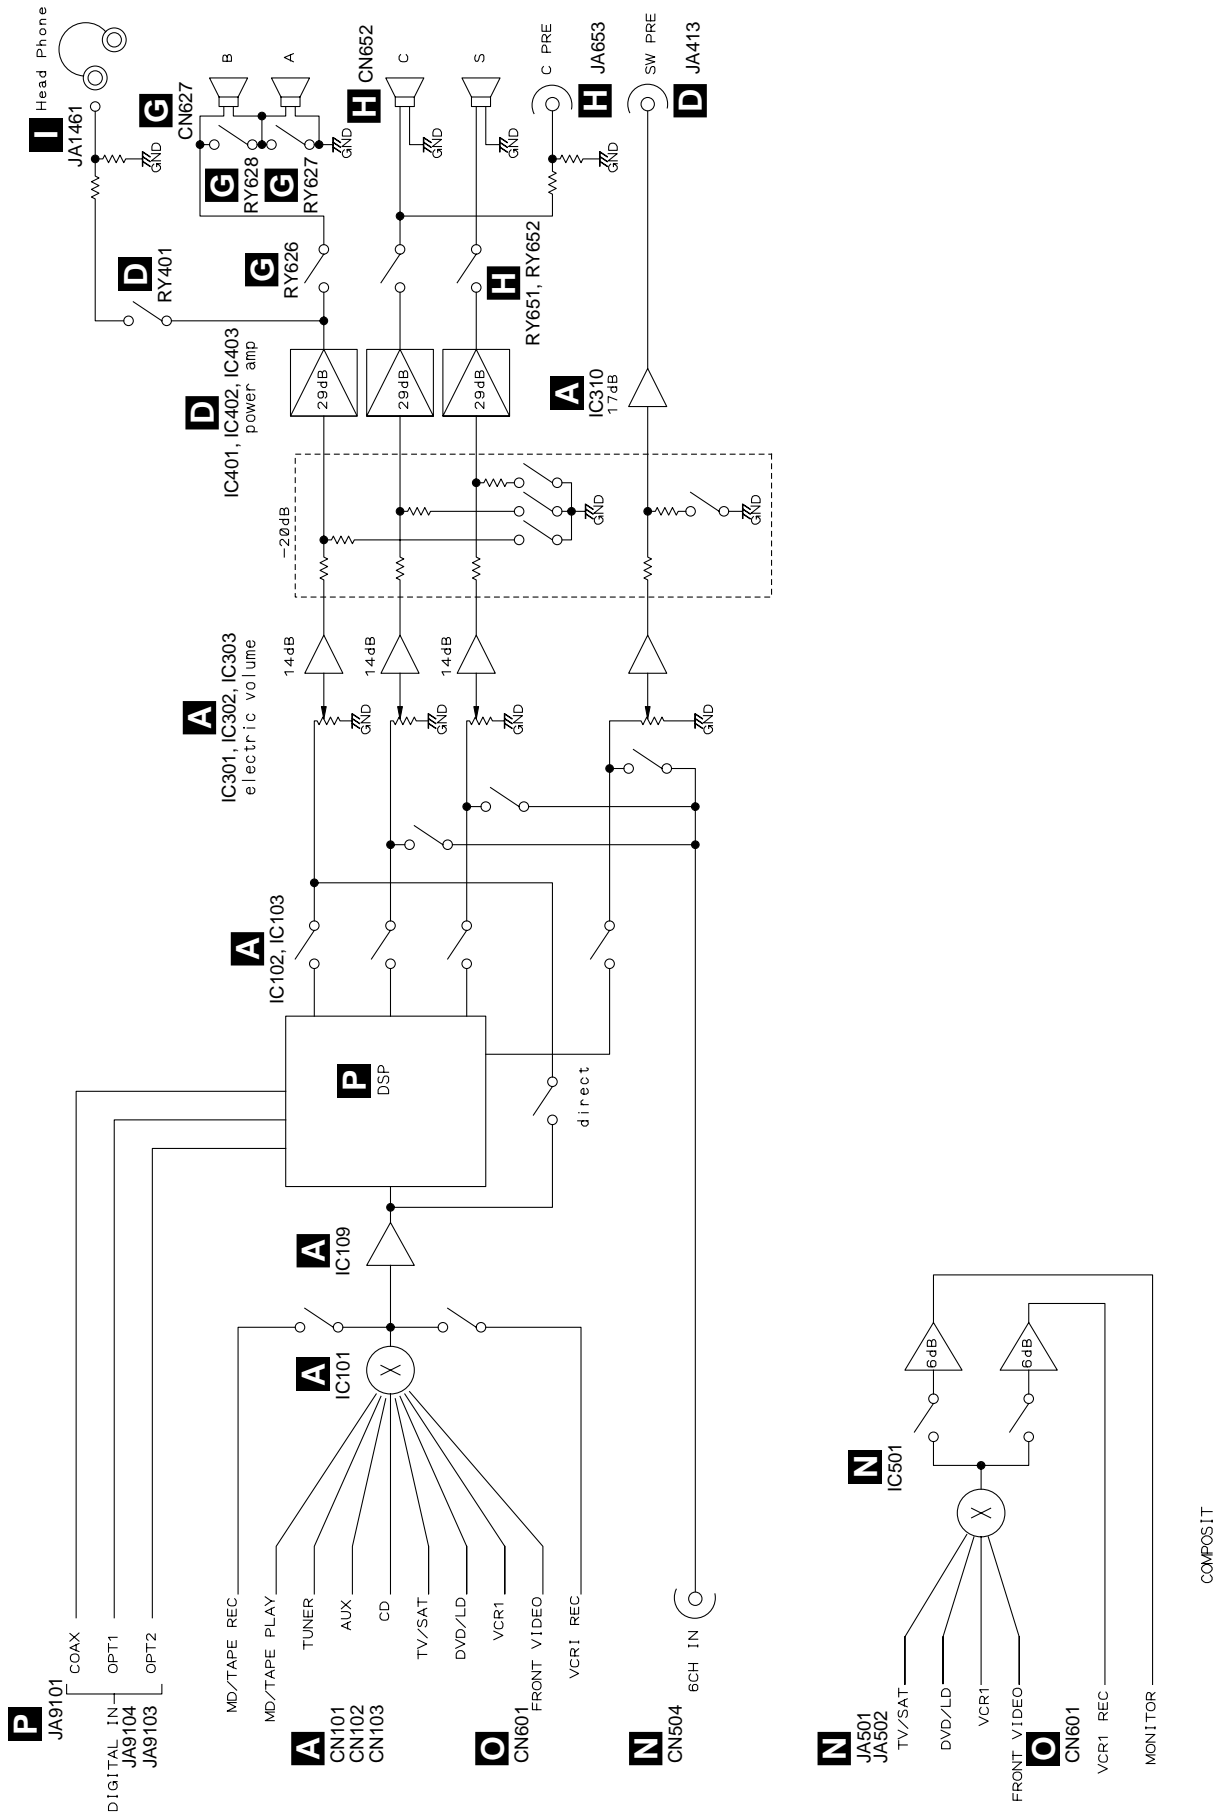

## 7.4 REMOTE CONTROL UNIT [CU-VSX138 (AXD7178)]

### 7.4.1 Exploded Views and Parts List

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
  - The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
  - Screws adjacent to  $\blacktriangledown$  mark on the product are used for disassembly.

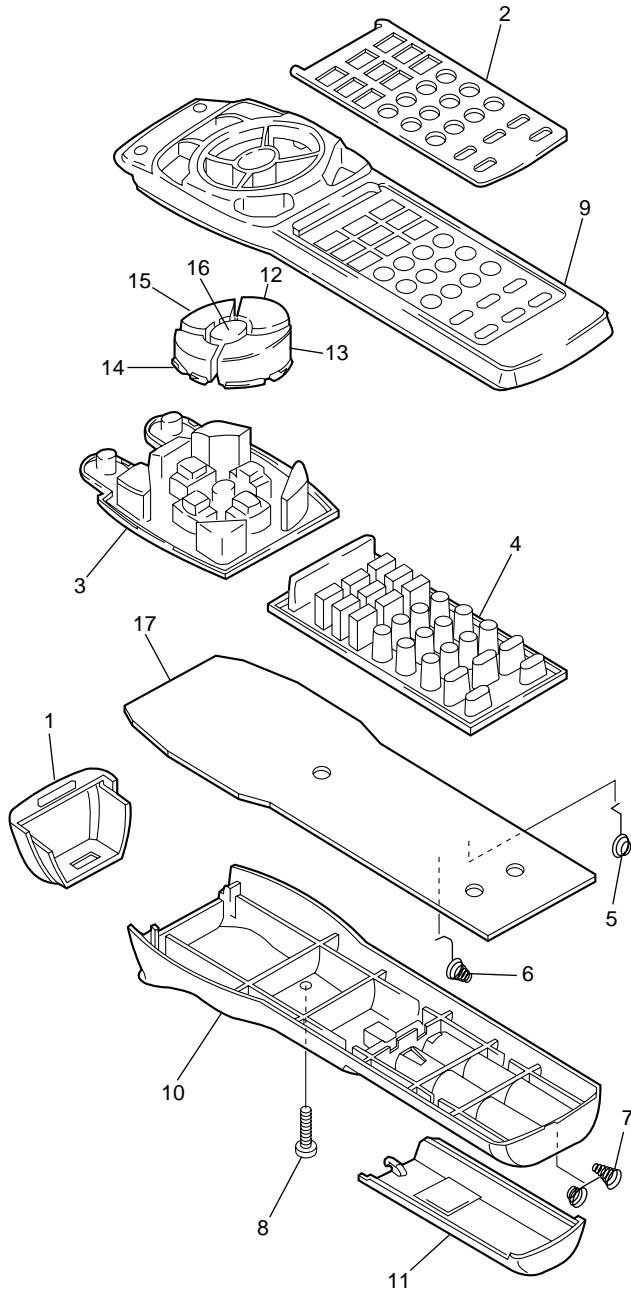


### ● Parts List

Mark	No.	Description	Part No.
	1	Filter	AZA7152
	2	Name Plate	AZA7304
	3	Rubber Sheet (A)	AZA7308
	4	Rubber Sheet (B)	AZA7307
	5	Spring (+)	AZB7049
	6	Spring (-)	AZB7050
	7	Spring	AZB7051
	8	Screw	AZB7052
	9	Remo-con Case (A)	AZN7738
	10	Remo-con Case (B)	AZN7326
	11	Battery Cover	AZN7327
	12	Main Key (FF)	AZN7666
	13	Main Key (STOP)	AZN7741
	14	Main Key (REV)	AZN7665
	15	Main Key (PAUSE)	AZN7742
	16	Main Key (PLAY)	AZN7664
NSP	17	PCB	AZW7248



### 7.4.2 Schematic Diagram

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

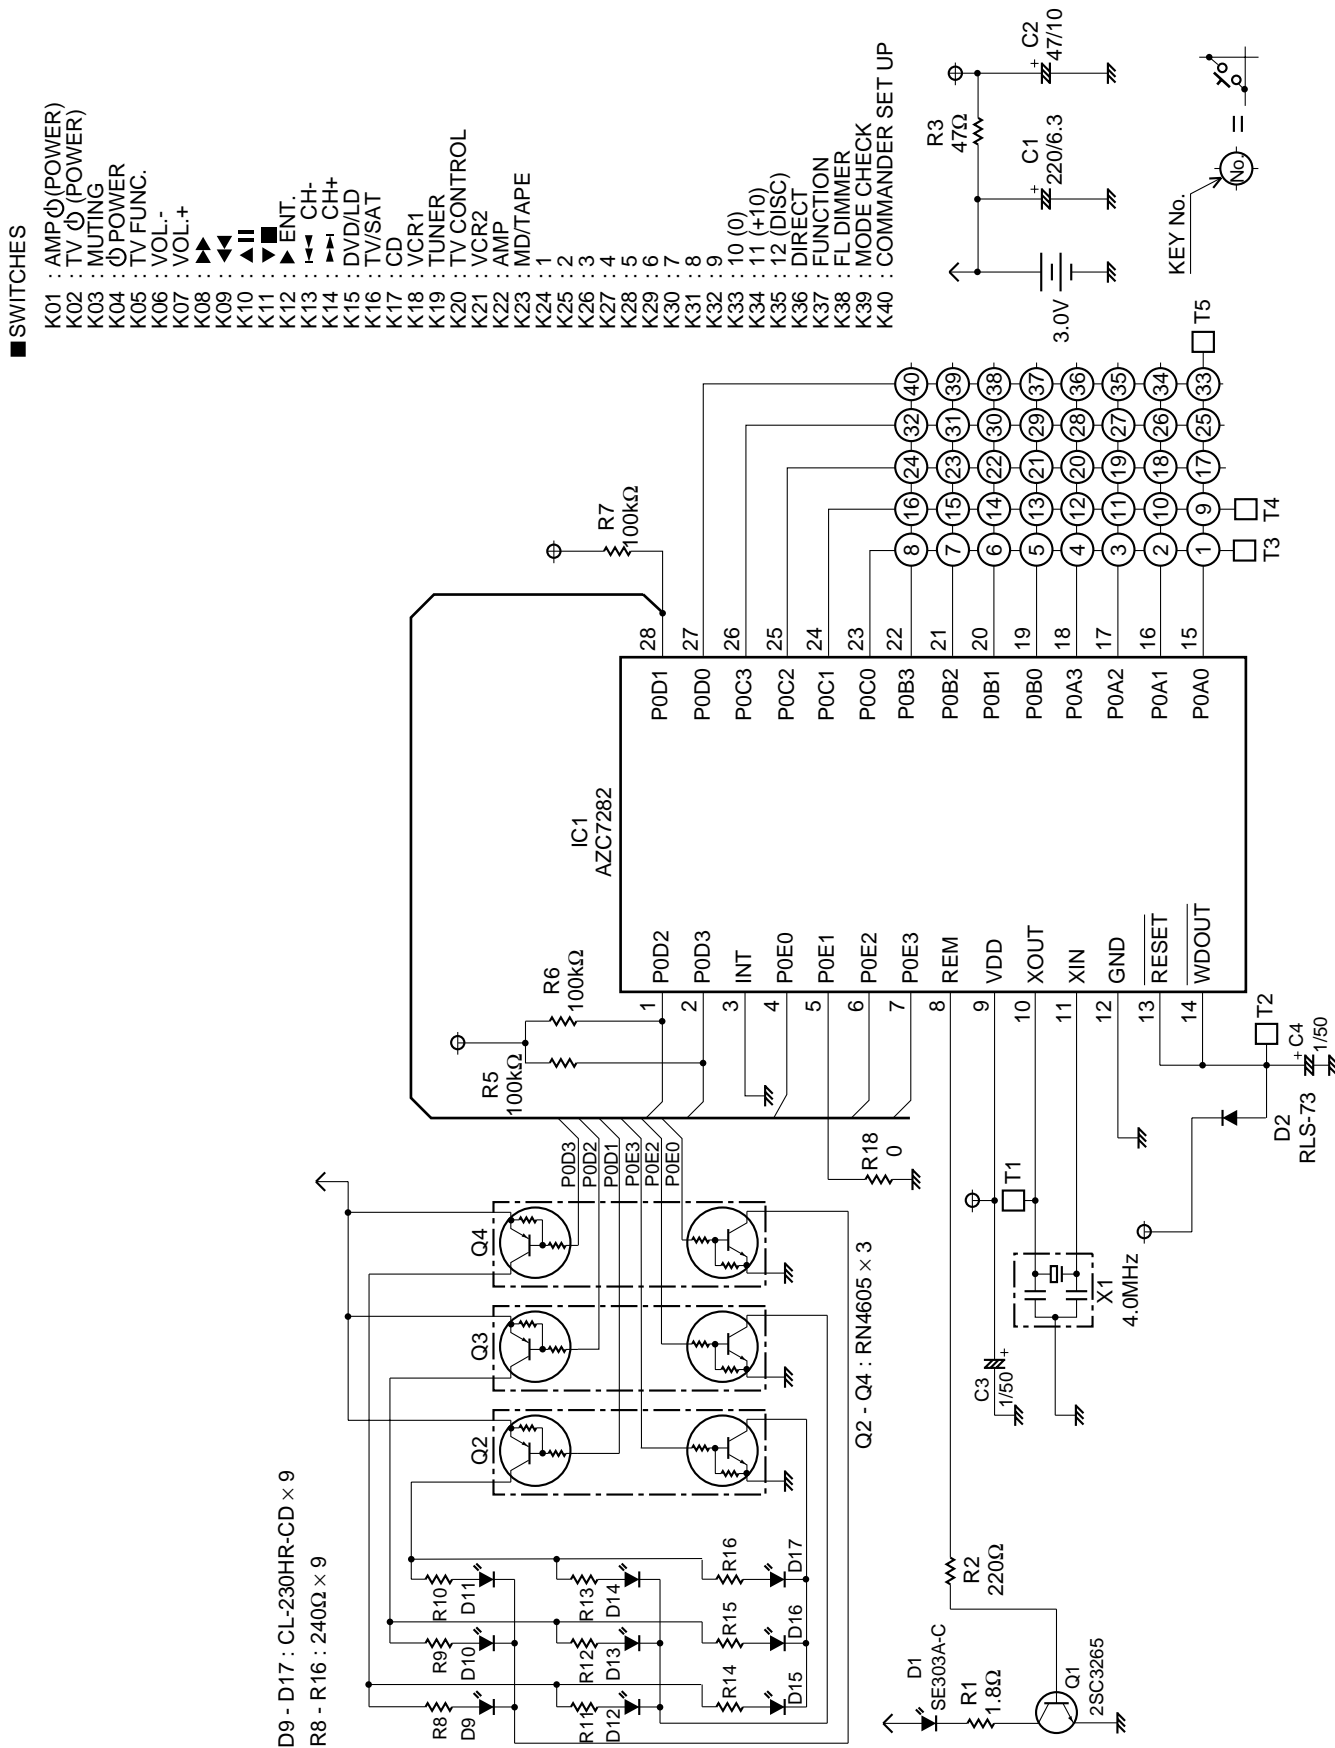


### 7.4.3 PCB Diagram

A


B

C

D

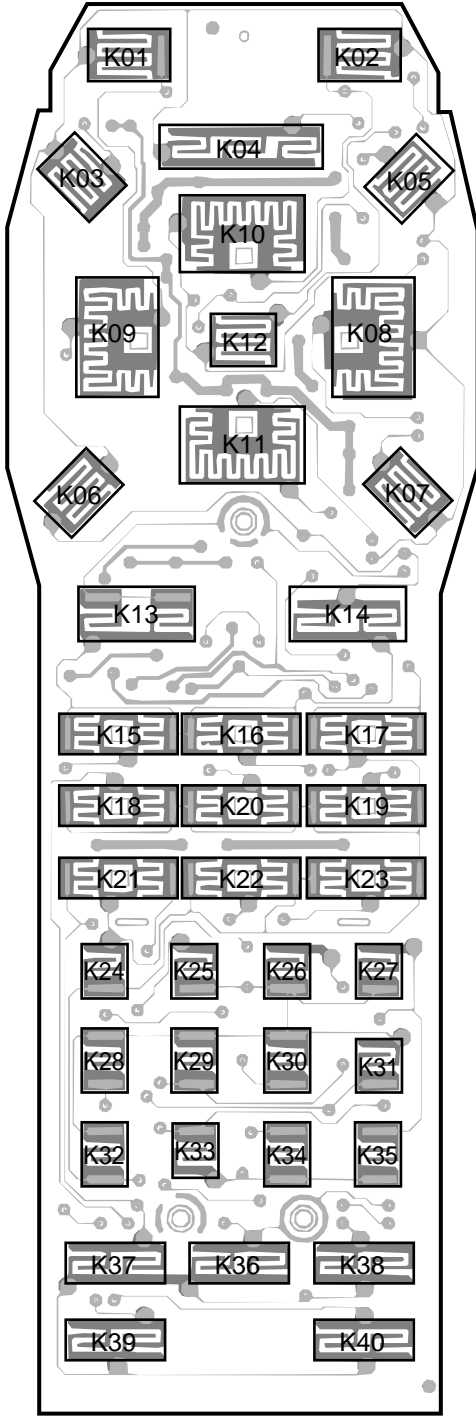

**SIDE A**

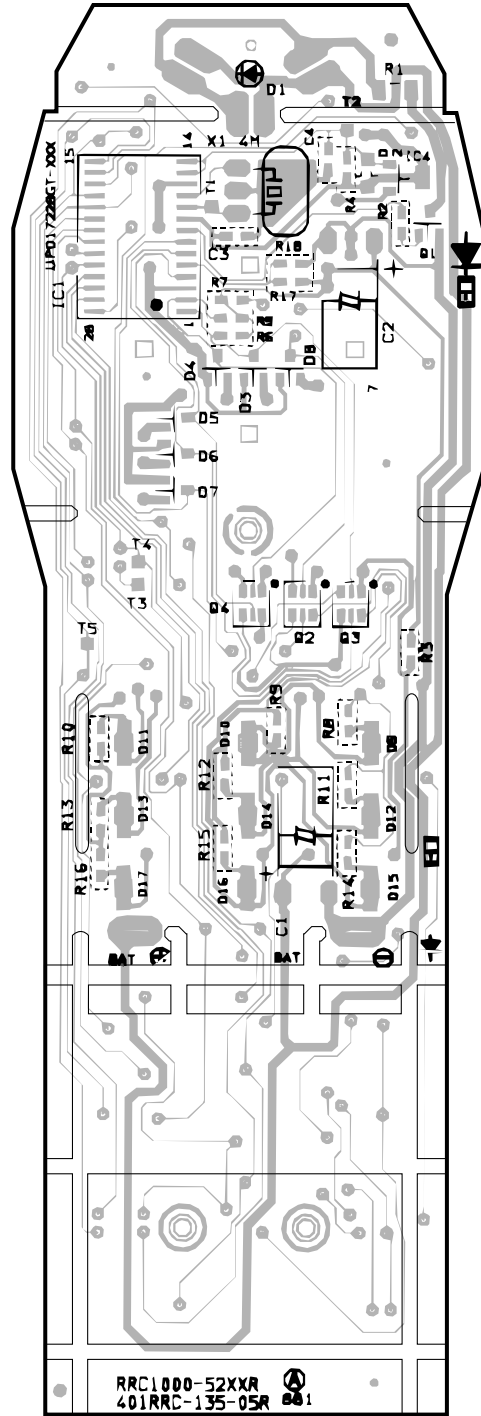

**SIDE B**

## 7.4.4 PCB Parts List

NOTES: ●Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

●The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.

●When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 $\Omega$	→	$56 \times 10^1$	→	561 .....	RD1/4PU	$\begin{matrix} 5 & 6 & 1 \\ \hline \end{matrix}$	J
47k $\Omega$	→	$47 \times 10^3$	→	473 .....	RD1/4PU	$\begin{matrix} 4 & 7 & 3 \\ \hline \end{matrix}$	J
0.5 $\Omega$	→	R50 .....			RN2H	$\begin{matrix} R & 5 & 0 \\ \hline \end{matrix}$	K
1 $\Omega$	→	1R0 .....			RS1P	$\begin{matrix} 1 & R & 0 \\ \hline \end{matrix}$	K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).


5.62k $\Omega$	→	$562 \times 10^1$	→	5621 .....	RN1/4PC	$\begin{matrix} 5 & 6 & 2 & 1 \\ \hline \end{matrix}$	F
----------------	---	-------------------	---	------------	---------	---	---

Mark No.	Description	Part No.
<b>SEMICONDUCTORS</b>		
IC1		AZC7282
Q1		2SC3265
Q2-Q4		RN4605
D1		SE303A-C
D2		RLS-73
D9-D17		CL-230HR-CD
<b>CAPACITORS</b>		
C2		CEAT470M10
C1		CEAT221M6R3
C3,C4		CEATR10M50
<b>RESISTORS</b>		
R1		RS1/8S1R8J
Other Resistors		RS1/10S□□□J
<b>OTHERS</b>		
X1	CERAMIC RESONATOR (4MHz)	KBR-4.0M

## 8. PANEL FACILITIES AND SPECIFICATIONS

### 8.1 PANEL FACILITIES

#### ■ Front Section

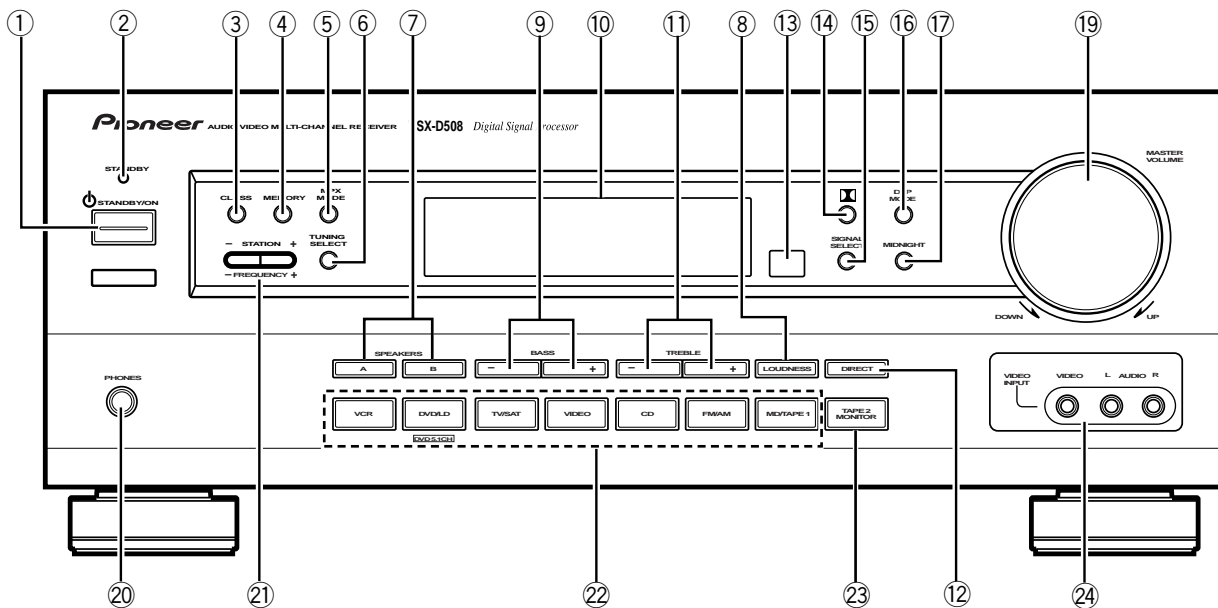

① **STANDBY/ON button**

Press to switch the receiver on or put in standby.

② **STANDBY indicator**

Lights when the receiver is in standby mode. (Please note that this receiver consumes a small amount of power (2.5 W) during the standby mode.)

③ **CLASS button**

Press repeatedly to switch the preset station classes.

④ **MEMORY button**

Press to memorize a preset station.

⑤ **MPX MODE button**

Press to switch between auto stereo and monaural ("MONO") reception of FM broadcasts. When the broadcast signal is weak, selecting "MONO" will improve the sound quality.

⑥ **TUNING SELECT button**

Press to switch between STATION and FREQUENCY.

⑦ **SPEAKERS (A/B) buttons**

Use to switch the corresponding speaker system on or off. To listen to both speaker systems (A and B), press the buttons so that both A and B appear in the display (refer to "Display" ⑩ Speaker indicators). Only A speakers are available when using surround sound modes.

⑧ **LOUDNESS button**

Switches the loudness on or off. Use to raise the level of the low and high frequencies so they can be more easily heard when listening at low volumes.

⑨ **BASS (+/-) button**

Press to adjust low frequencies in the range of  $\pm 6$ .

⑩ **Display**

⑪ **TREBLE (+/-) button**

Used to adjust high frequencies in the range of  $\pm 6$ .

⑫ **DIRECT button**

Switches direct playback on or off. Use to bypass the receiver's tone control circuitry or level control for higher fidelity to the program source. When DIRECT is ON, Dolby, DSP, LOUDNESS and MIDNIGHT mode are automatically turned OFF.

⑬ **Remote sensor**

Point the remote control toward the remote sensor to operate the receiver.

⑭ **□ button**

Press to select the □ (Dolby) sound mode. This mode automatically switches between Dolby Digital and Dolby Pro Logic decoding according to the input signal.

⑮ **SIGNAL SELECT button**

Use to select input signals for the digital components. First press DVD/LD, TV/SAT, MD/TAPE 1, CD or VCR (② Function buttons) to select the component, then press SIGNAL SELECT repeatedly to select one of the following:

**ANALOG** : Selects the analog (R and L) audio signals.

**DIGITAL** : Selects the digital audio signals. This receiver automatically detects and displays the format of the signal being input. AC-3 lights when Dolby Digital signals are input, and DTS lights when DTS signals are input. (AC-3 and DTS decoding is switched automatically.)

- SIGNAL SELECT is fixed in the “ANALOG” position for components not assigned to one of the three digital input jacks.
- Because the audio from a karaoke microphone and LD recorded with analog audio only is not output from the digital output, set SIGNAL SELECT to “ANALOG”.
- This receiver can only play back Dolby Digital and PCM (32kHz, 44kHz, and 48kHz) digital signal formats. With digital signal formats other than these, set SIGNAL SELECT to “ANALOG”.

#### ⑩ DSP MODE button

Press repeatedly to select a DSP sound mode (HALL 1, HALL 2, JAZZ, DANCE, THEATER 1, or THEATER 2). Use these modes to produce surround sound from standard (two channel) stereo sources.

#### ⑪ MIDNIGHT button

Press to hear effective surround sound at low volume levels. The effect is automatically adjusted according to the volume level.

#### ⑲ MASTER VOLUME

After turning on the desired component, rotate to adjust the volume.

#### ⑳ PHONES jack

Connect headphones for private listening (the speakers turn off automatically).

#### ㉑ STATION/FREQUENCY (+/-) button

**STATION:** Press to select the preset channel.

**FREQUENCY:** Press to select the frequency.

#### ㉒ Function buttons

Selects the function. Each press switches the DVD/LD input between DVD/LD and DVD 5.1 channel.


#### ㉓ TAPE 2 MONITOR button

Switches the TAPE 2 monitor on or off.

#### ㉔ VIDEO INPUT jacks

Connect a video camera, video game system, etc. to the VIDEO INPUT jacks.

■ Display

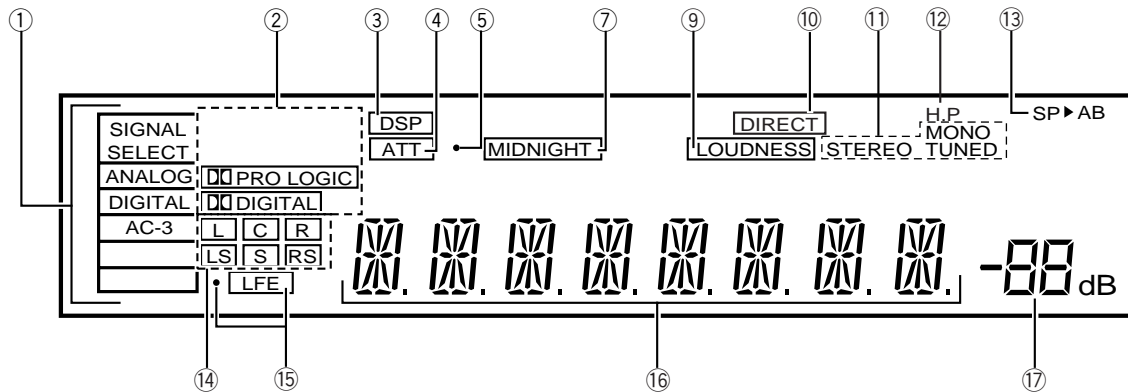

① **SIGNAL SELECT indicators**

Light to indicate the type of input signal selected for the current component (refer to “Front Panel” ⑮ SIGNAL SELECT).

**ANALOG** : Lights when the analog audio signals are selected.

**DIGITAL** : Lights when the digital audio signals are selected.

**AC-3** : Lights when a source with Dolby Digital signals is played.

② **Digital indicators**

**PRO LOGIC** : When the Dolby mode on the receiver is on, this indicator lights during 2 channel playback of Dolby Digital sources.

**DIGITAL** : When the Dolby mode on the receiver is on, this indicator lights to indicate playback of a Dolby Digital signal. However, **PRO LOGIC** lights during 2 channel playback of Dolby Digital.

③ **DSP mode indicator**

Lights when the DSP mode is selected.

④ **ATT indicator**

Lights when ATT (refer to “Remote Control” ⑦ Number buttons) is used to reduce the level of the input signal. (Available in ANALOG mode only)

⑤ **Overload indicator**

When “ANALOG” is selected in SIGNAL SELECT, this indicator lights when an excessively strong signal is being processed. When this indicator lights, press ATT on the remote control to attenuate (lower) the signal and prevent distortion.

⑦ **MIDNIGHT indicator**

Lights when the MIDNIGHT mode is on.

⑨ **LOUDNESS indicator**

Lights when loudness is on (refer to “Front Panel” ⑧ LOUDNESS).

⑩ **DIRECT indicator**

Lights when direct playback is on (refer to “Front Panel” ⑫ DIRECT).

⑪ **Tuner indicators**

**STEREO** : Lights when an FM stereo broadcast is received in the auto stereo mode.

**TUNED** : Lights when a broadcast is received.

**MONO** : Lights when the tuner is set to receive FM broadcasts in monaural.

⑫ **H.P indicator**

Lights when headphones are plugged in.

⑬ **Speaker indicators**

Light to indicate the current speaker system (refer to “Front Panel” ⑦ SPEAKERS (A/B)).

**SP ▶ A** : Lights when speaker system A is selected.

**SP ▶ B** : Lights when speaker system B is selected.

⑭ **Program format indicators**

The following indicators light to show the channels being played back.

**L** : Left front<sup>\*1\*2</sup>, **C** : Center<sup>\*1</sup>, **R** : Right front<sup>\*1\*2</sup>,

**LS** : Left surround<sup>\*1</sup>, **S** : Surround (mono)<sup>\*2</sup>,

**RS** : Right surround<sup>\*1</sup>

\*1: Indicates 5.1ch Dolby Digital playback.

\*2: Indicates Dolby surround playback.

⑮ **LFE indicator**

LFE (Low Frequency Effects) indicator lights to indicate that the program source contains an LFE channel. The indicator to the left of LFE lights during actual playback of the LFE signals (LFE signals are not present in all parts of the sound track).


⑯ **Character display**

⑰ **Volume level display**

Displays the volume level. Volume level is maintained even when the power is off. ---dB indicates the minimum level, and 0dB indicates the maximum level.

- Depending on the level settings for individual channels, the MAX level can range between -10dB and 0dB.

## Remote Control Unit

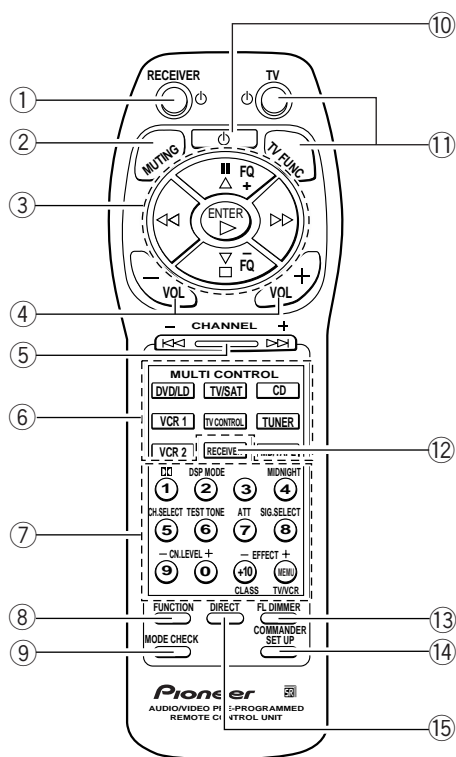

### ① RECEIVER button

Press to switch the receiver on or to put in standby.

### ② MUTING button

Press to mute the volume. "MUTING" appears in the display. Press again to cancel.

### ③ $\Delta/\nabla/\triangleleft/\triangleright$ /ENTER buttons

Specific use of these buttons is described in conjunction with the operations they are used in.

**ENTER** : Press to switch the band (FM/AM) when using the tuner.

### ④ VOL (+/-) buttons

Press to adjust the volume. When VOL (+/-) buttons are pressed while muting, muting is canceled.

### ⑤ CHANNEL (+/-) button

Use to select preset stations when operating the tuner. When the remote is used to control other components, this button may be used to change channels, tracks, or chapters.

### ⑥ MULTI CONTROL buttons

Use these buttons to select the source and corresponding remote operation mode.

For example, pressing TUNER selects the built in tuner and sets the remote to operate the tuner functions.

### ⑦ Number buttons

These buttons can perform a variety of different functions depending on the remote operation mode.

- **[RECEIVER operations (press RECEIVER first) ]**  
Selects the  $\square$  (Dolby) mode.

**DSP MODE** : Press repeatedly to select a DSP sound mode.

**MIDNIGHT** : Press to hear surround sound effectively at low volumes.

**CH.SELECT** : Use to select a speaker when adjusting speaker levels.

**TEST TONE** : Press to switch the test tone on or off when listening to a surround mode.

**ATT** : Press to attenuate (lower) the level of the input signals and prevent distortion (refer to "Display" ⑤ Overload indicator).

**SIG.SELECT** : When the same component uses both analog and digital connections, use to select input signals as digital or analog.

**CH.LEVEL (-/+)** : Use to adjust individual speaker levels.

**EFFECT (+/-)** : Use to adjust the DSP mode effect level.

- **[TUNER operations (press TUNER first)]**

**Number buttons (0~9)** : During preset tuning, use to input the number of the preset station. Use to input the station frequency during direct tuning.

**CLASS (+10)** : Press repeatedly to switch the preset station classes during preset tuning.

**MENU** : Press to activate direct tuning.

### ⑧ FUNCTION button

Press repeatedly to select a source.

### ⑨ MODE CHECK button

Press to confirm the current remote operation mode and to switch operation modes without changing the source .

### ⑩ Power button

Press to turn on or put in standby all connected components other than this unit.

### ⑪ TV/TV FUNC button

Press TV to turn the TV's power on or put in standby. Press TV FUNC to select the TV for remote control operation.

### ⑫ RECEIVER button

Press to select the receiver for remote control operation.

### ⑬ FL DIMMER button

Press to adjust the brightness of the fluorescent display. Four levels of brightness ranging from very dim to very bright can be selected.

### ⑭ COMMANDER SET UP button

Use to customize the remote control functions.

### ⑮ DIRECT button


Use to playback original source audio. When DIRECT is ON, Dolby, DSP, LOUDNESS and MIDNIGHT mode are automatically turned OFF.

## ■ Audio Components Connections

Be sure to switch power to standby and remove the power cord from the wall outlet when you make or change connections.

Connect your audio components as shown below.


• Illustration shows VSX-D608.

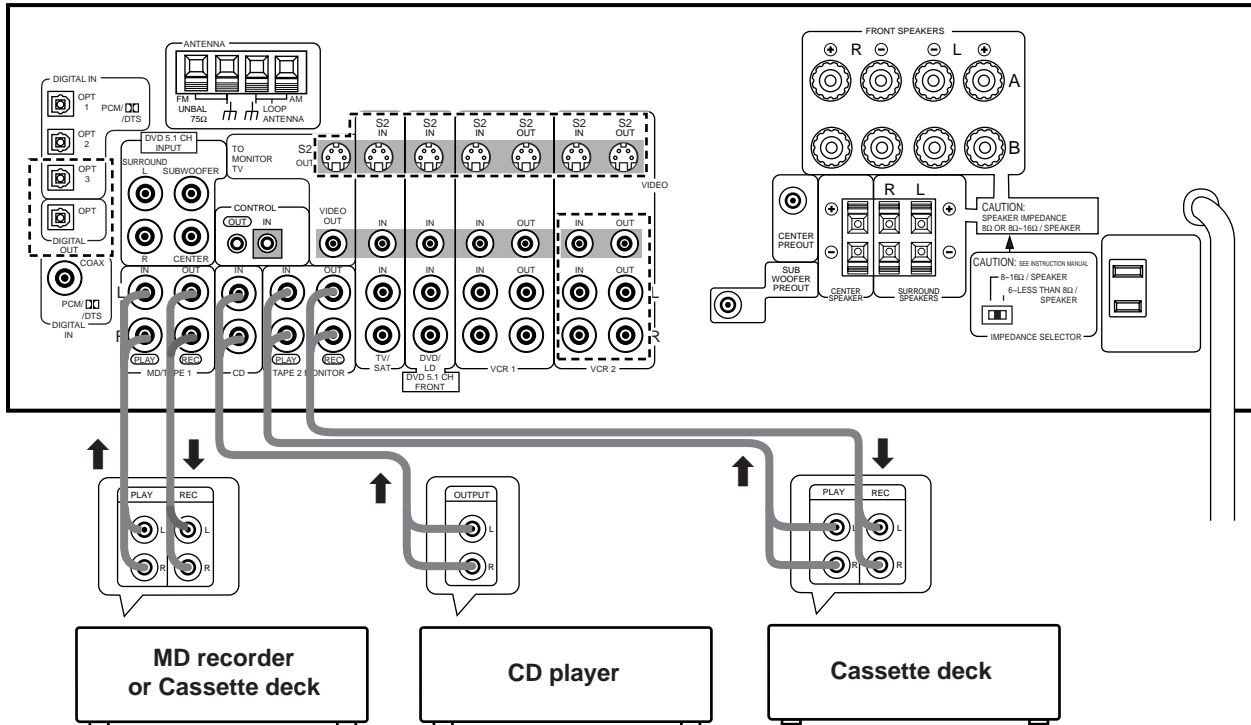

\*The arrows indicate the direction of the audio signal.

### ■ Audio cords

Use audio cords (not supplied) to connect the audio components.

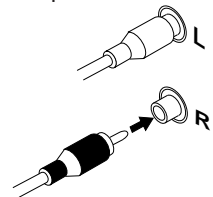

Connect red plugs to R (right) and white plugs to L (left). Be sure to insert completely.

### Cassette Deck Installment

Depending on where the cassette deck is placed, noise may occur during playback of your cassette deck which is caused by leakage flux from the transformer in the receiver. If you experience noise, move the cassette deck farther away from the receiver.



## 8.2 SPECIFICATIONS

### Amplifier Section

**Continuous average power output of 100 watts\* per channel, min., at 8 ohms, from 20 Hz to 20,000 Hz with no more than 0.09 %\*\* total harmonic distortion (front).**

\* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers.

\*\* Measured by Audio Spectrum Analyzer.

#### Continuous Power Output

Front ..... 100 W + 100 W (1 kHz, 0.8 %, 8 Ω)

Center ..... 100 W (1 kHz, 0.8 %, 8 Ω)

Rear ..... 100 W + 100 W (1 kHz, 0.8 %, 8 Ω)

#### Input (Sensitivity/Impedance)

VCR, DVD/LD, TV/SAT, VIDEO, CD, MD/TAPE, TAPE 2 ..... 200 mV/47 kΩ

#### Frequency Response

VCR, DVD/LD, TV/SAT, VIDEO, CD, MD/TAPE, TAPE 2 ..... 5 Hz to 100,000 Hz <sup>+0</sup><sub>-3</sub> dB

#### Output (Level/Impedance)

VCR REC, MD/TAPE REC, TAPE 2 REC ..... 200 mV/2.2 kΩ

#### Tone Control

BASS ..... ± 6 dB (100 Hz)

TREBLE ..... ± 6 dB (10 kHz)

LOUDNESS ..... +7 dB/+6 dB (100 Hz/10 kHz)

#### Signal-to-Noise Ratio (IHF, short circuited, A network)

VCR, DVD/LD, TV/SAT, VIDEO, CD, MD/TAPE, TAPE 2 ..... 97 dB

#### Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]

VCR, DVD/LD, TV/SAT, VIDEO, CD, MD/TAPE, TAPE 2 ..... 80 dB

### VIDEO Section

#### Input (Sensitivity/Impedance)

VCR, DVD/LD, TV/SAT, VIDEO ..... 1 Vp-p/75 Ω

#### Output (Level/Impedance)

VCR, MONITOR ..... 1 Vp-p/75 Ω

#### Frequency Response

VCR, MONITOR ..... 5 Hz to 7 MHz <sup>+0</sup><sub>-3</sub> dB

#### Signal-to-Noise Ratio

Cross Talk ..... 55 dB

### FM Tuner Section

Frequency Range ..... 87.5 MHz to 108 MHz

Usable Sensitivity ..... Mono: 13.2 dBf, IHF (1.3 μV/75 Ω)

50 dB Quieting Sensitivity ..... Mono: 20.2 dBf

Stereo: 38.6 dBf

Signal-to-Noise Ratio ..... Mono: 73 dB (at 85 dBf)

Stereo: 70 dB (at 85 dBf)

Distortion ..... Stereo: 0.5 % (1 kHz)

Alternate Channel Selectivity ..... 60 dB (400 kHz)

Stereo Separation ..... 40 dB (1 kHz)

Frequency Response ..... 30 Hz to 15 kHz (± 1) dB

Antenna Input ..... 75 Ω unbalanced

### AM Tuner Section

Frequency Range ..... 531 kHz to 1,620 kHz (9 kHz step)

530 kHz to 1,700 kHz (10 kHz step)

Sensitivity (IHF, Loop antenna) ..... 350 μV/m

Selectivity ..... 25 dB

Signal-to-Noise Ratio ..... 50 dB

Antenna ..... Loop antenna

### Miscellaneous

Power Requirement ..... AC 120 V, 60 Hz

Power Consumption ..... 280 W, 400 VA

Power Consumption in Standby mode ..... 2.5 W

#### AC Outlet

SWITCHED ..... 100 W (0.8 A) MAX

Dimensions ..... 420 (W) × 158 (H) × 391 (D) mm

16-9/16 (W) × 6-1/4 (H) × 15-3/8 (D) in

Weight (without package) ..... 9.8 kg (21 lb 10 oz)

### Furnished Parts

FM Antenna ..... 1

AM Loop Antenna ..... 1

Dry Cell Batteries (SIZE "AA" (IEC LR6)) ..... 2

Remote Control Unit ..... 1

Operating Instructions ..... 1

Sub instruction manual [System Set up] ..... 1

#### NOTE:

Specifications and the design are subject to possible modifications without notice, due to improvements.

Manufactured under license from Dolby Laboratories. "Dolby", "AC-3", "Pro Logic", " and double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992 - 1997 Dolby Laboratories, Inc. All rights reserved.

## ■ Accessories



**FM wire antenna  
(ADH7004)**



**AM loop antenna  
(ATB7009)**



**Remote control unit  
(CU-VSX138 : AXD7178)**



**"AA" IEC LR6 batteries × 2**