


Pioneer

Service Manual

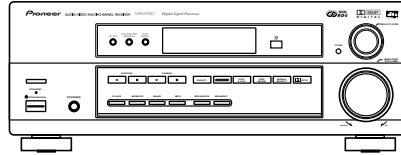

ORDER NO.
RRV2439

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D510

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	Remarks
	VSX-D510		
MYXJIEW	○	AC220-230V	
MYXJIGR	○	AC220-230V	
MVXJI	○	AC230V	

CONTENTS

1. SAFETY INFORMATION	2	7. GENERAL INFORMATION	47
2. EXPLODED VIEWS AND PARTS LIST	3	7.1 DISASSEMBLY and DIAGNOSIS	47
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	8	7.2 PARTS	49
4. PCB CONNECTION DIAGRAM	26	7.2.1 IC	49
5. PCB PARTS LIST	39	7.2.2 DISPLAY	54
6. ADJUSTMENT	46	8. PANEL FACILITIES AND SPECIFICATIONS	56

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
 © PIONEER CORPORATION 2001

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.



WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65



NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

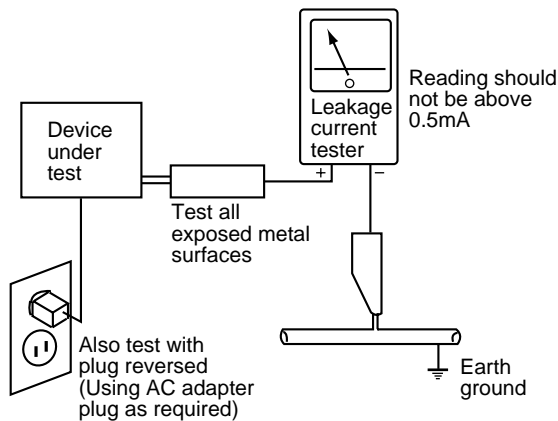

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.


The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. EXPLODED VIEWS AND PARTS LIST

- NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 ● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 ● Screws adjacent to \blacktriangledown mark on the product are used for disassembly.

2.1 PACKING

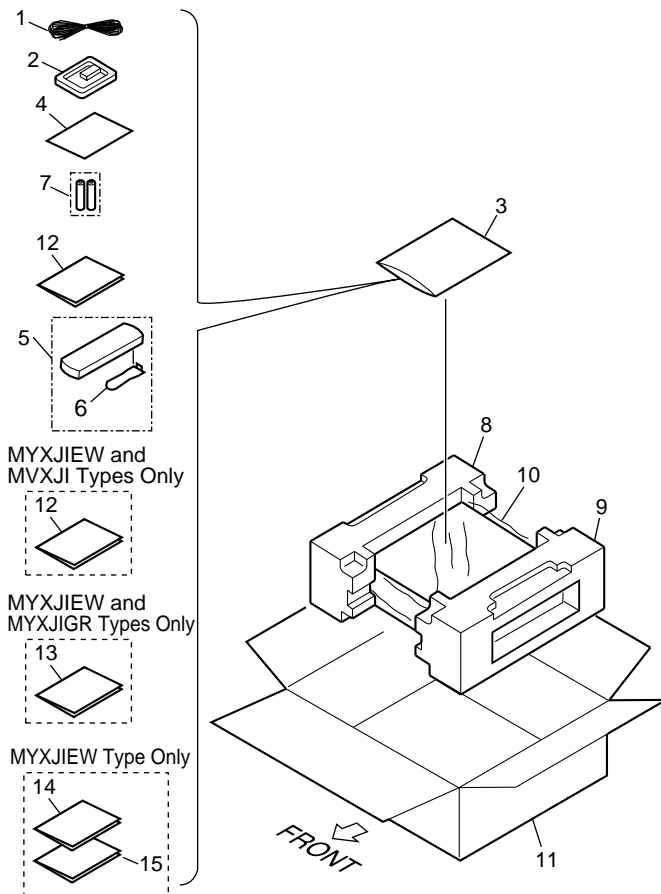

(1) PACKING PARTS LIST


Mark	No.	Description	Part No.
	1	FM Wire Antenna	ADH7005
	2	AM Loop Antenna	ATB7009
NSP	3	Polyethylene Bag (0.03 × 230 × 340)	Z21-038
NSP	4	Warranty Card	ARY7022
	5	Remote Control Unit	AXD7247
NSP	6	Battery Cover	AZA7378
	7	Dry Cell Battery (R6P, AA)	VEM1011
	8	Left Pad	XHA3024
	9	Right Pad	XHA3025
	10	Packing Sheet	AHG7069
	11	Packing Case	XHD3149
	12	Operating Instructions (English)	See Contrast table (2)
	13	Operating Instructions (German)	See Contrast table (2)
	14	Operating Instructions (Dutch/Swedish/Portuguese)	See Contrast table (2)
	15	Operating Instructions (French/Italian/Spanish)	See Contrast table (2)

(2) CONTRAST TABLE

VSX-D510/MYXJIEW, /MYXJIGR and VSX-D510/MVXJI are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			VSX-D510			
			/MYXJIEW	/MYXJIGR	/MVXJI	
	12	Operating Instructions (English)	XRB3003	Not used	XRB3003	
	13	Operating Instructions (German)	XRC30027	XRC3027	Not used	
	14	Operating Instructions (Dutch/Swedish/Portuguese)	XRC3028	Not used	Not used	
	15	Operating Instructions (French/Italian/Spanish)	XRC3029	Not used	Not used	

2.2 EXTERIOR SECTION

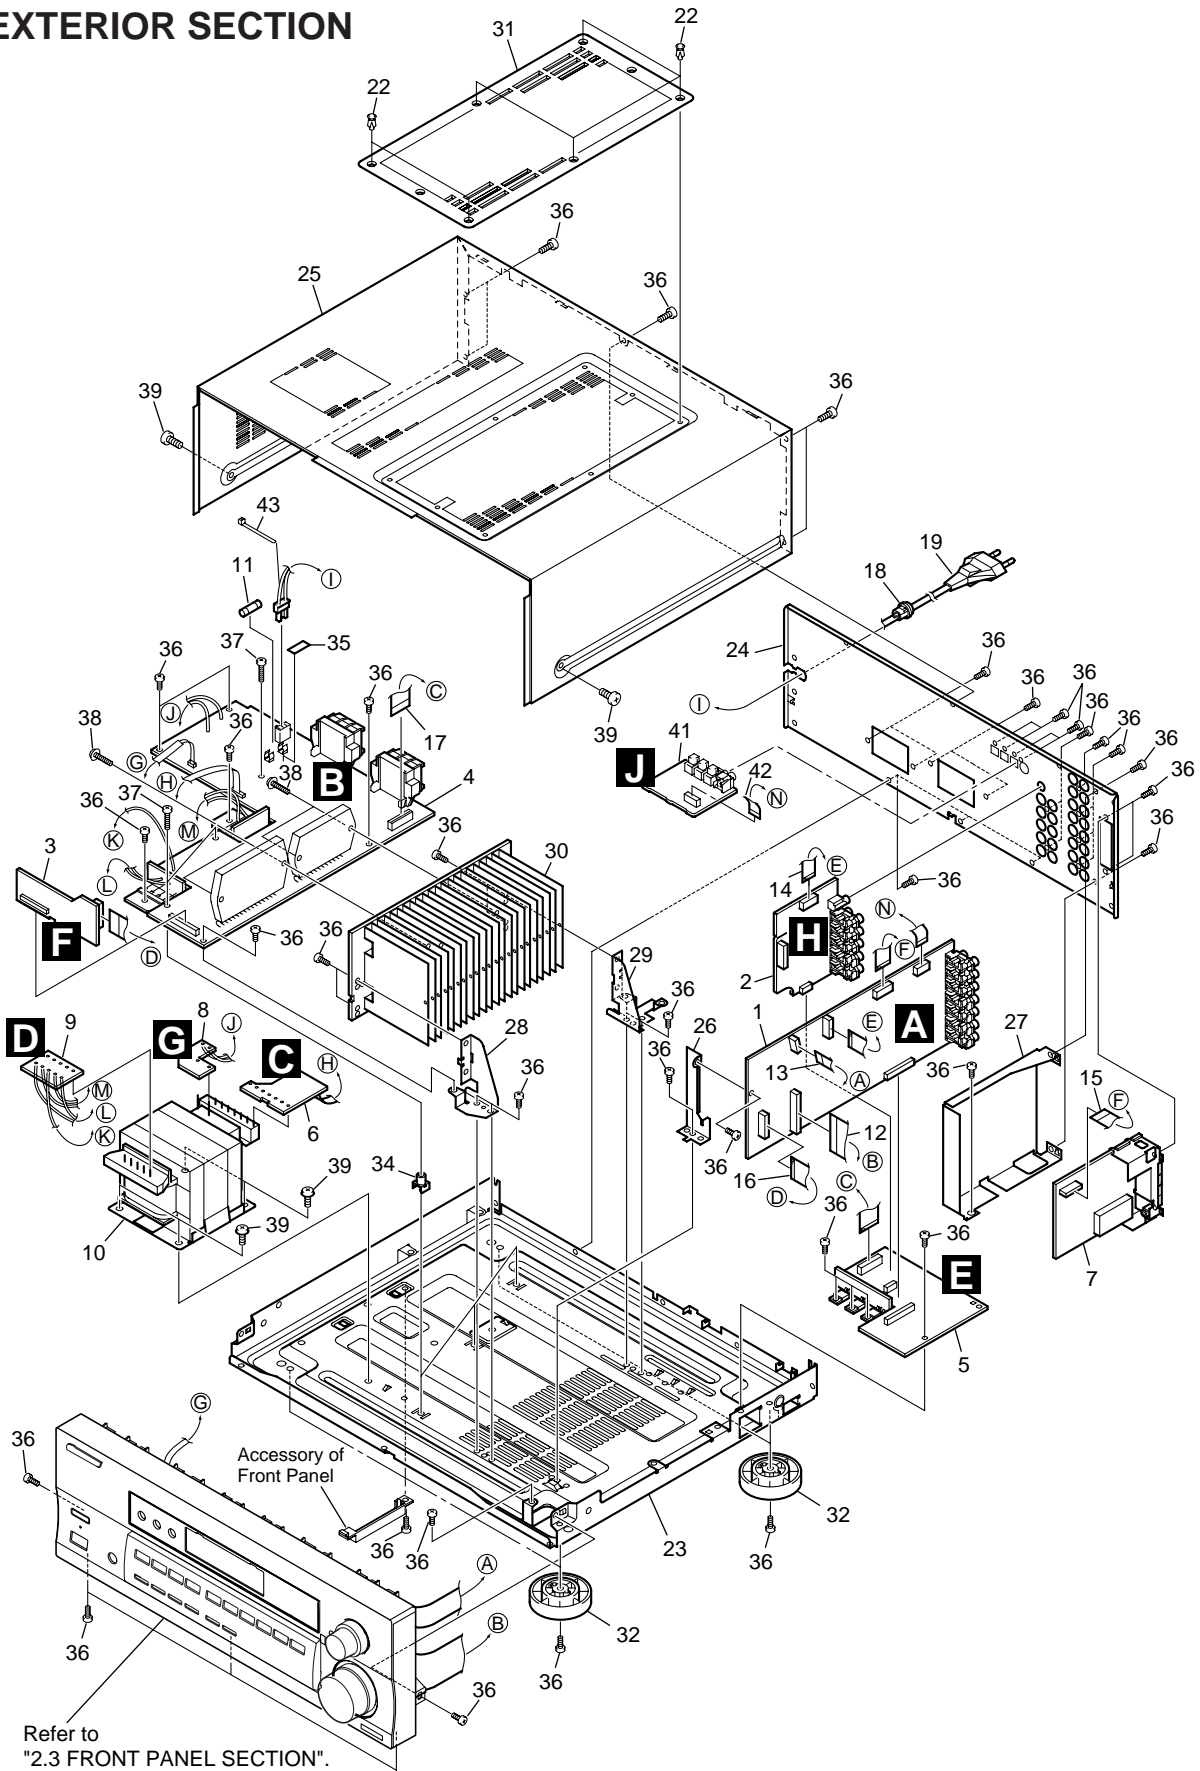

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
NSP	1	D.D & INPUT Assy	XWX3025	NSP	21	•••••	
	2	VIDEO&6CH IN Assy	XWZ3333		22	Push Rivet	AEC7025
	3	AMP INPUT Assy	AWX7382		23	Under Base 409	ANA7094
	4	AMP&PRIMARY Assy	XWZ3373		24	Rear Panel	XNC3080
	5	REGULATOR Assy	AWX7493		25	Bonnet Case	XZN3111
NSP	6	TRANS 2 Assy	AWX7468	26	PCB Angle	ANG7253	
	7	FM/AM TUNER Unit	AXX7048	27	Shield R3	ANG7277	
NSP	8	TRANS 1 Assy	AWX7390	28	Heat Sink Angle F	ANG7251	
NSP	9	TRANS 3 Assy	AWX7392	29	Heat Sink Angle R	ANG7252	
△	10	Power Transformer (AC230V)	ATS7259	NSP	30	Heat Sink Assy 0.8	ANH7118
△	11	Fuse (FU1 : T2.5A)	REK1026	31	Top Cover	XME3001	
	12	FFC (J31 : 31P/180 BD 60V) (D.D & INPUT CN102 ↔ FRONT CN402)	XDD3055	32	Insulator	PNW2766	
△	13	FFC (J32 : 19P/180 BD 60V) (D.D & INPUT CN103 ↔ FRONT CN401)	XDD3054	33	•••••		
	14	FFC (J33 : 14P/200 BD 60V) (D.D & INPUT CN104 ↔ VIDEO&6CH IN CN303)	XDD3060	34	PCB Mold	AMR2533	
△	15	FFC (J34 : 13P/100 BD 60V) (D.D & INPUT CN105 ↔ FM/AM TUNER CN1)	XDD3059	NSP	35	Fuse Card	AAX7277
	16	FFC (J35 : 17P/90 BD 60V) (D.D & INPUT CN106 ↔ AMP INPUT CN290)	XDD3072	36	Screw	BBZ30P080FMC	
△	17	FFC (J36 : 22P/80 BD 60V) (REGULATOR CN801 ↔ AMP&PRIMARY CN53)	XDD3057	37	Screw	BBZ30P200FMC	
	18	Strain Relief	CM-22B	38	Screw (3x23)	ABA7043	
△	19	AC Power Cord	See Contrast table (2)	39	Screw	FBT40P080FZK	
	20	•••••		40	•••••		
△				41	DIGITAL IN Assy	XWZ3361	
				42	FFC (J37 : 6P/130 BD 60V) (D.D & INPUT CN1501 ↔ DIGITAL IN CN1901)	XDD3058	
				43	Binder	ZCA-BK1	

(2) CONTRAST TABLE

VSX-D510/MYXJIEW, /MYXJIGR and VSX-D510/MVXJI are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			VSX-D510			
			/MYXJIEW	/MYXJIGR	/MVXJI	
△	19	AC Power Cord	VDG1077	VDG1077	VDG1076	

2.3 FRONT PANEL SECTION

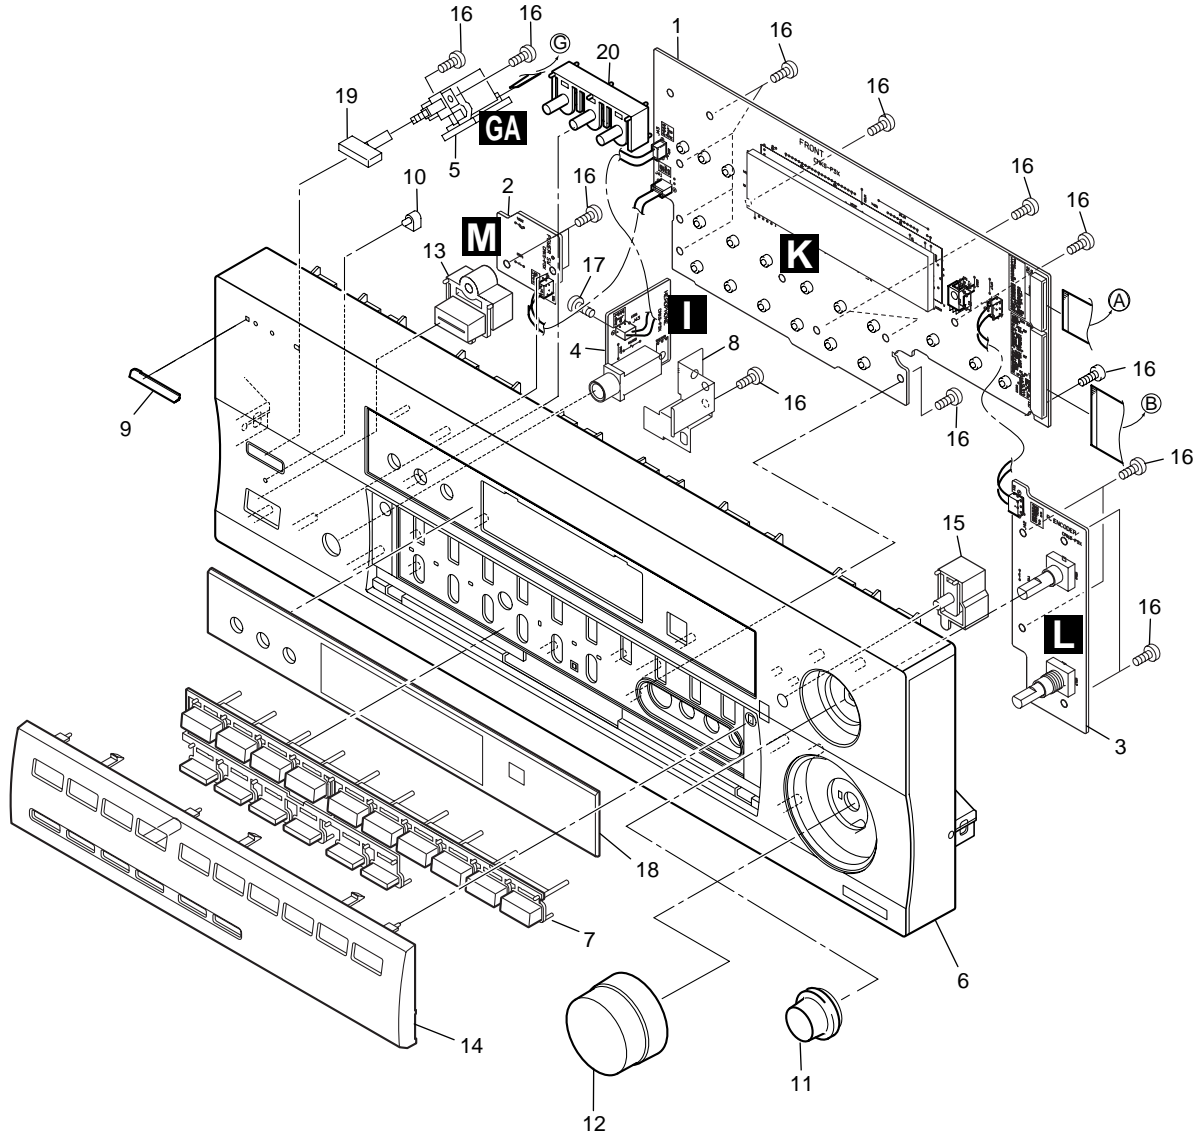




● FRONT PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	FRONT Assy	XWZ3337
	2	POWER SW Assy	XWZ3352
NSP	3	R. ENCODER Assy	XWZ3353
NSP	4	H.P. Assy	XWZ3356
	5	MECHA SW Assy	XWZ3358
	6	Front Panel	XMB3035
	7	Sub Button	XAD3068
	8	Earth Plate A	XNG3044
	9	Name Plate	PAM1776
	10	LED Lens	PNW2019
	11	Select Knob	XAB3008
	12	Volume Knob	XAB3011
	13	Power Button	XAD3062
	14	Sub Panel	XAK3169
	15	Jog Button	XAD3065
	16	Screw	PPZ30P080FMC
	17	Screw	BBZ30P080FMC
	18	Display Panel	XAK3171
	19	Power Button M	AAD7442
	20	RDS Button	XAD3072


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

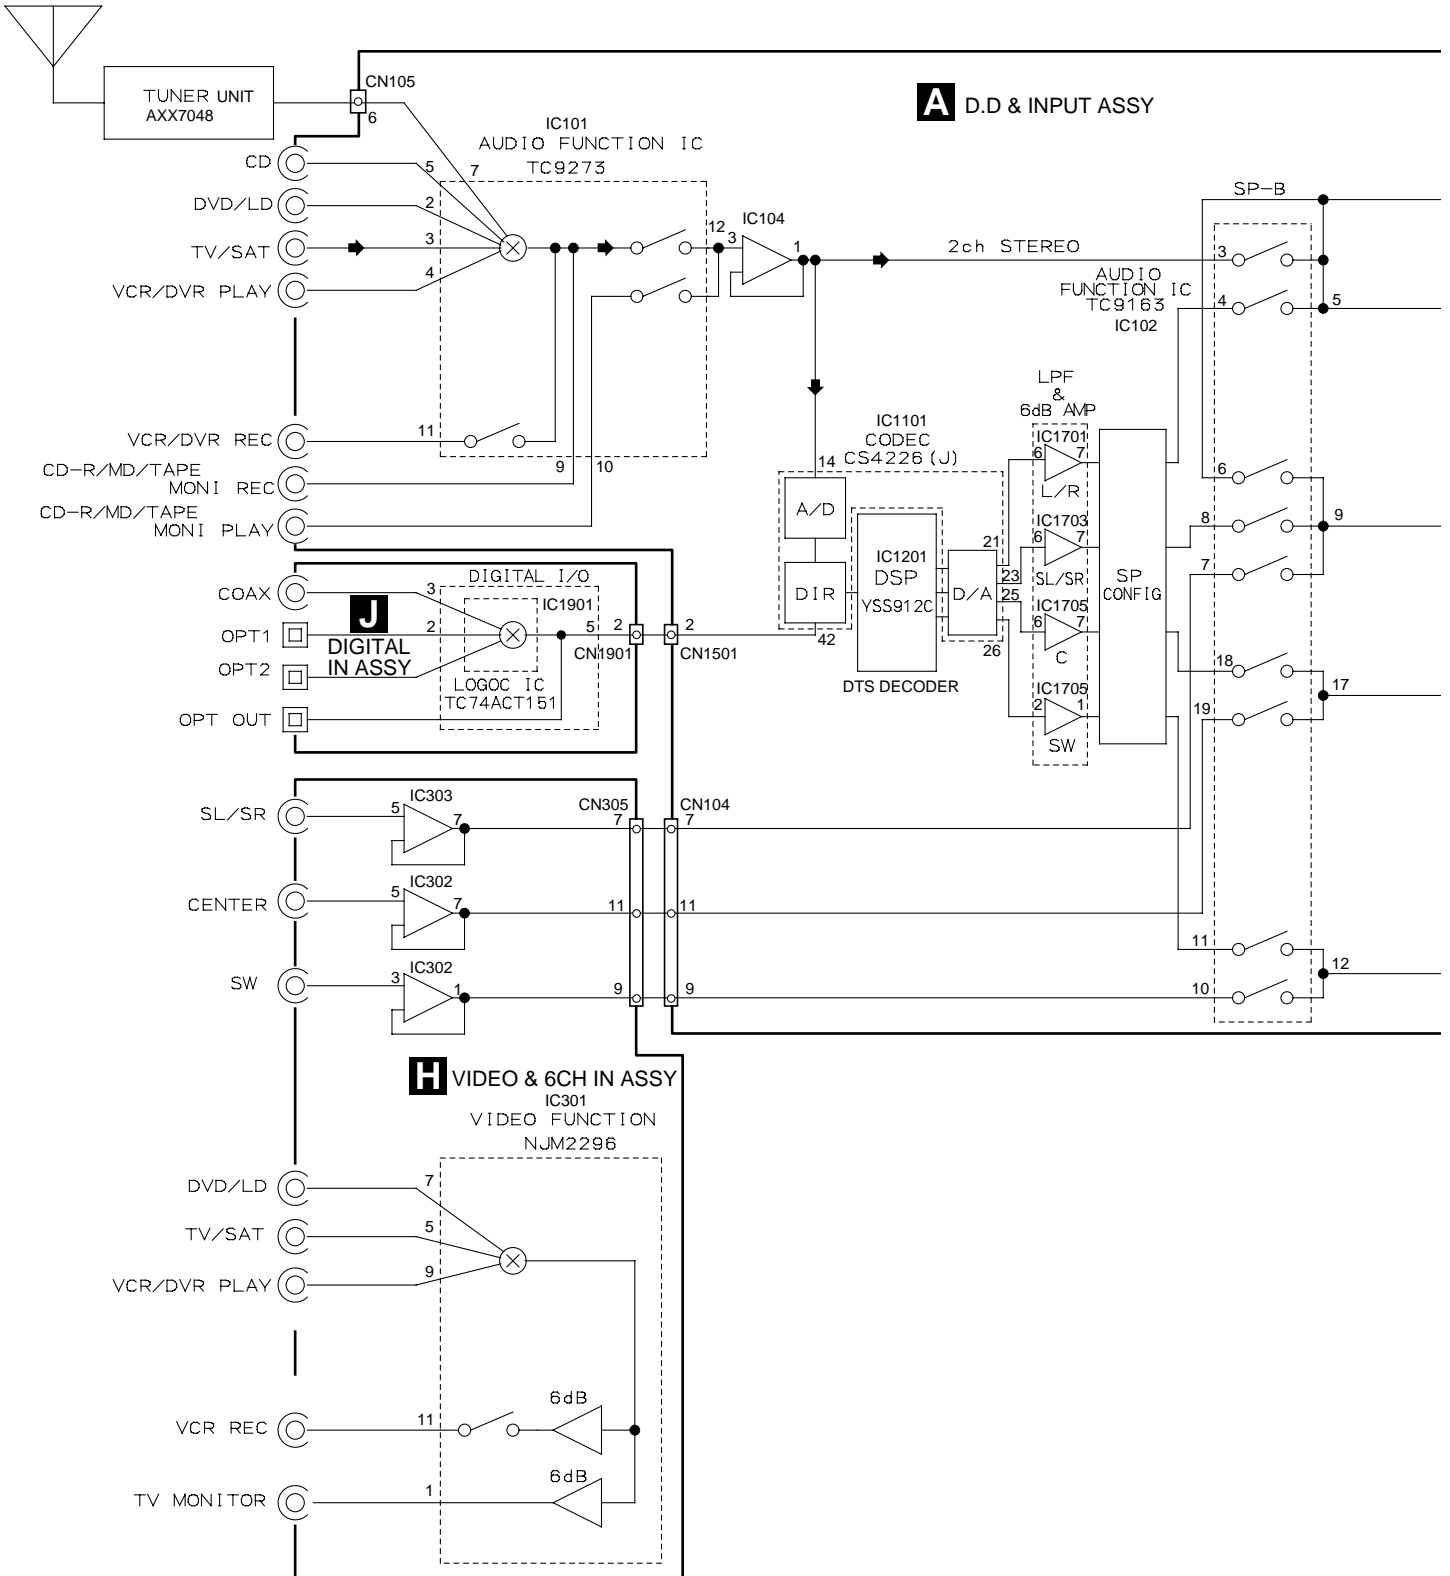


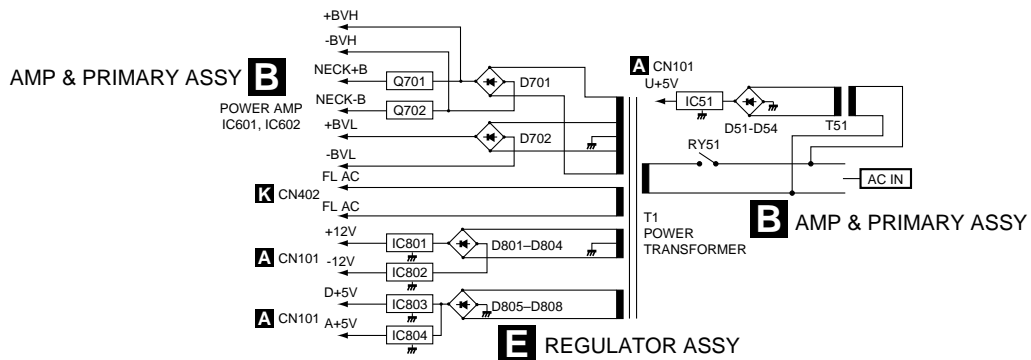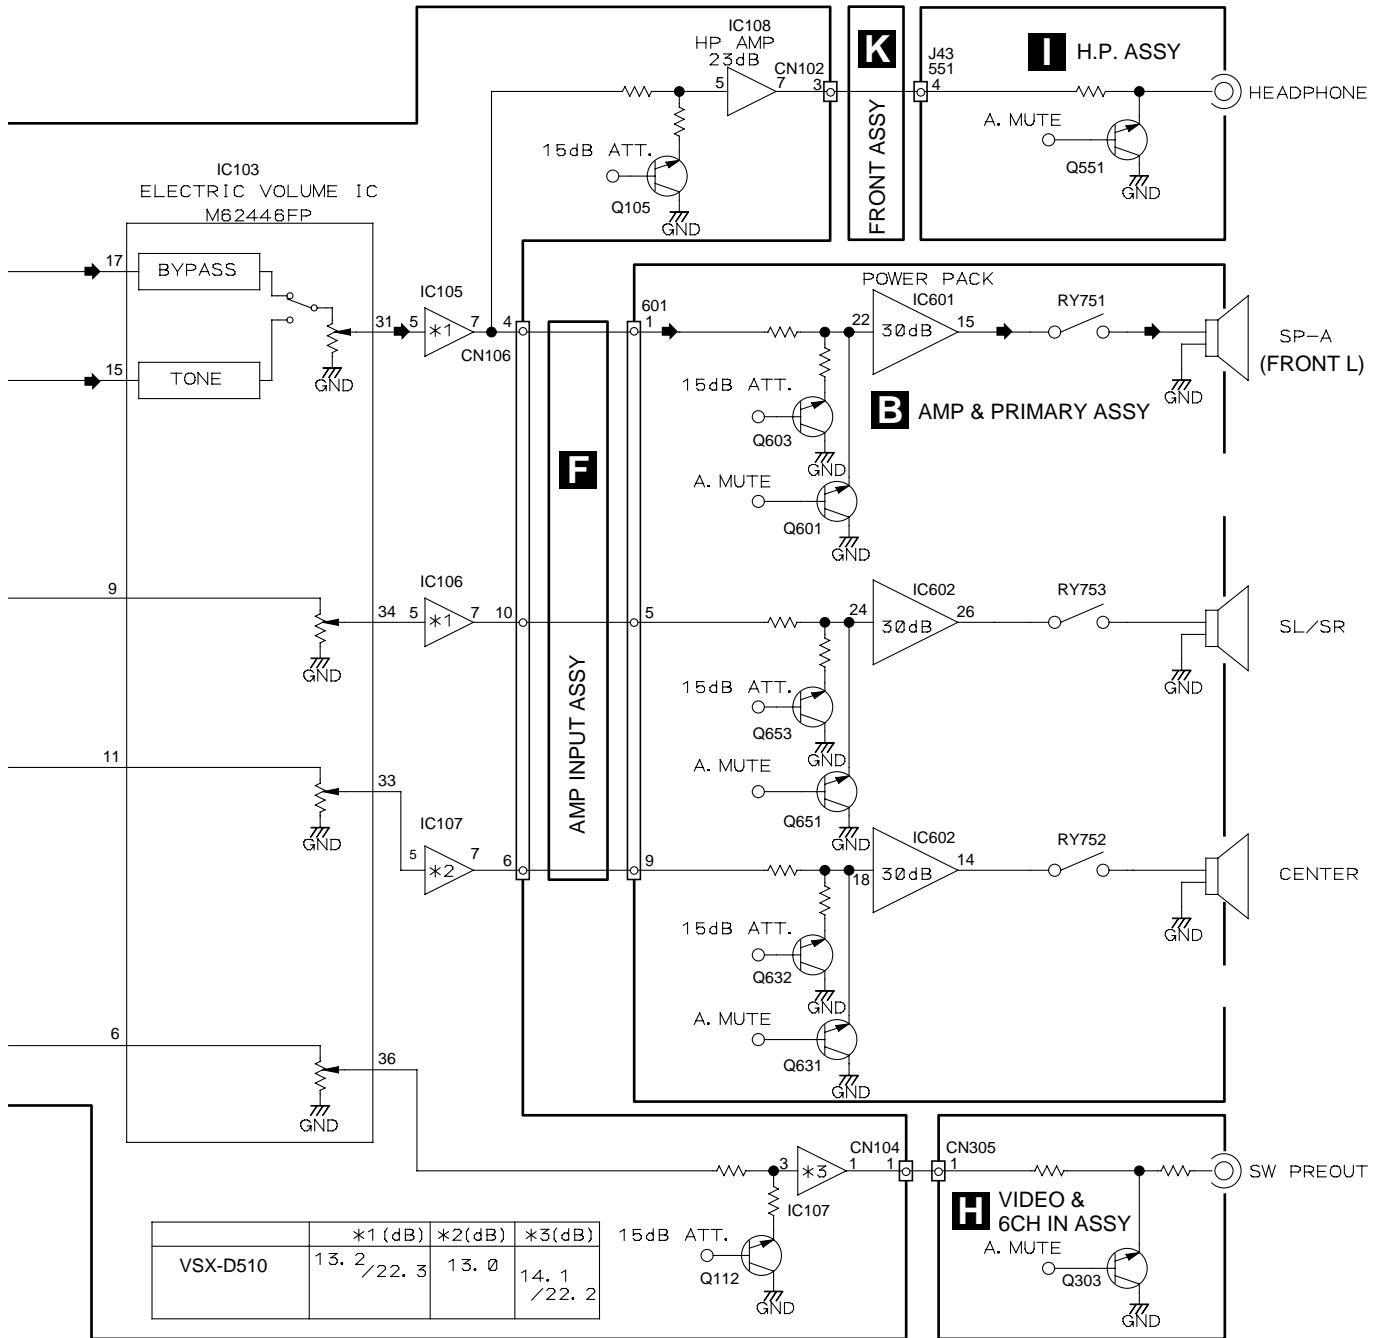

3.2 OVERALL WIRING CONNECTION DIAGRAM and AMP INPUT ASSY

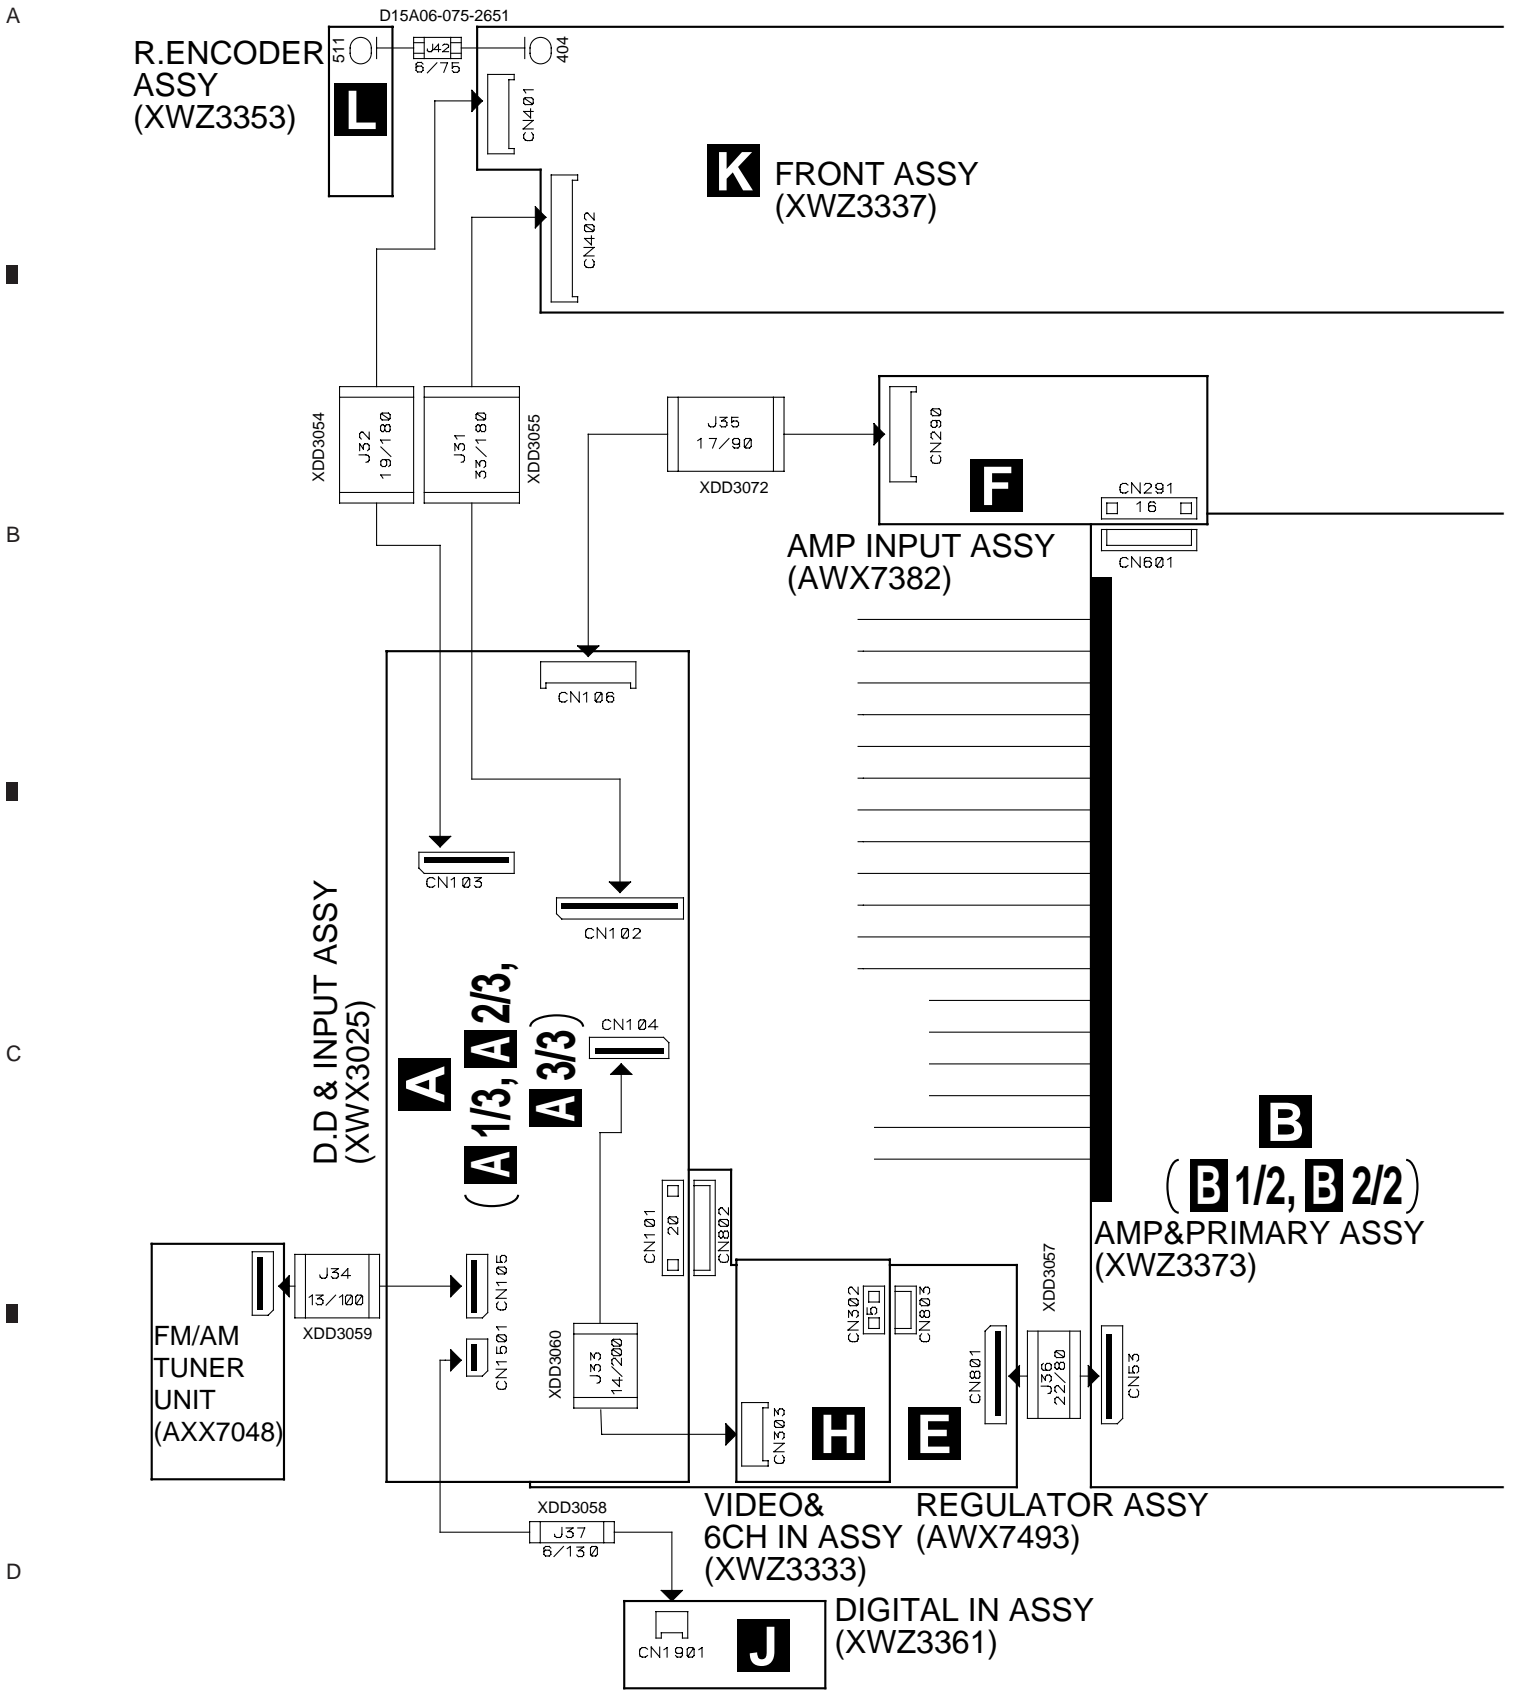

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

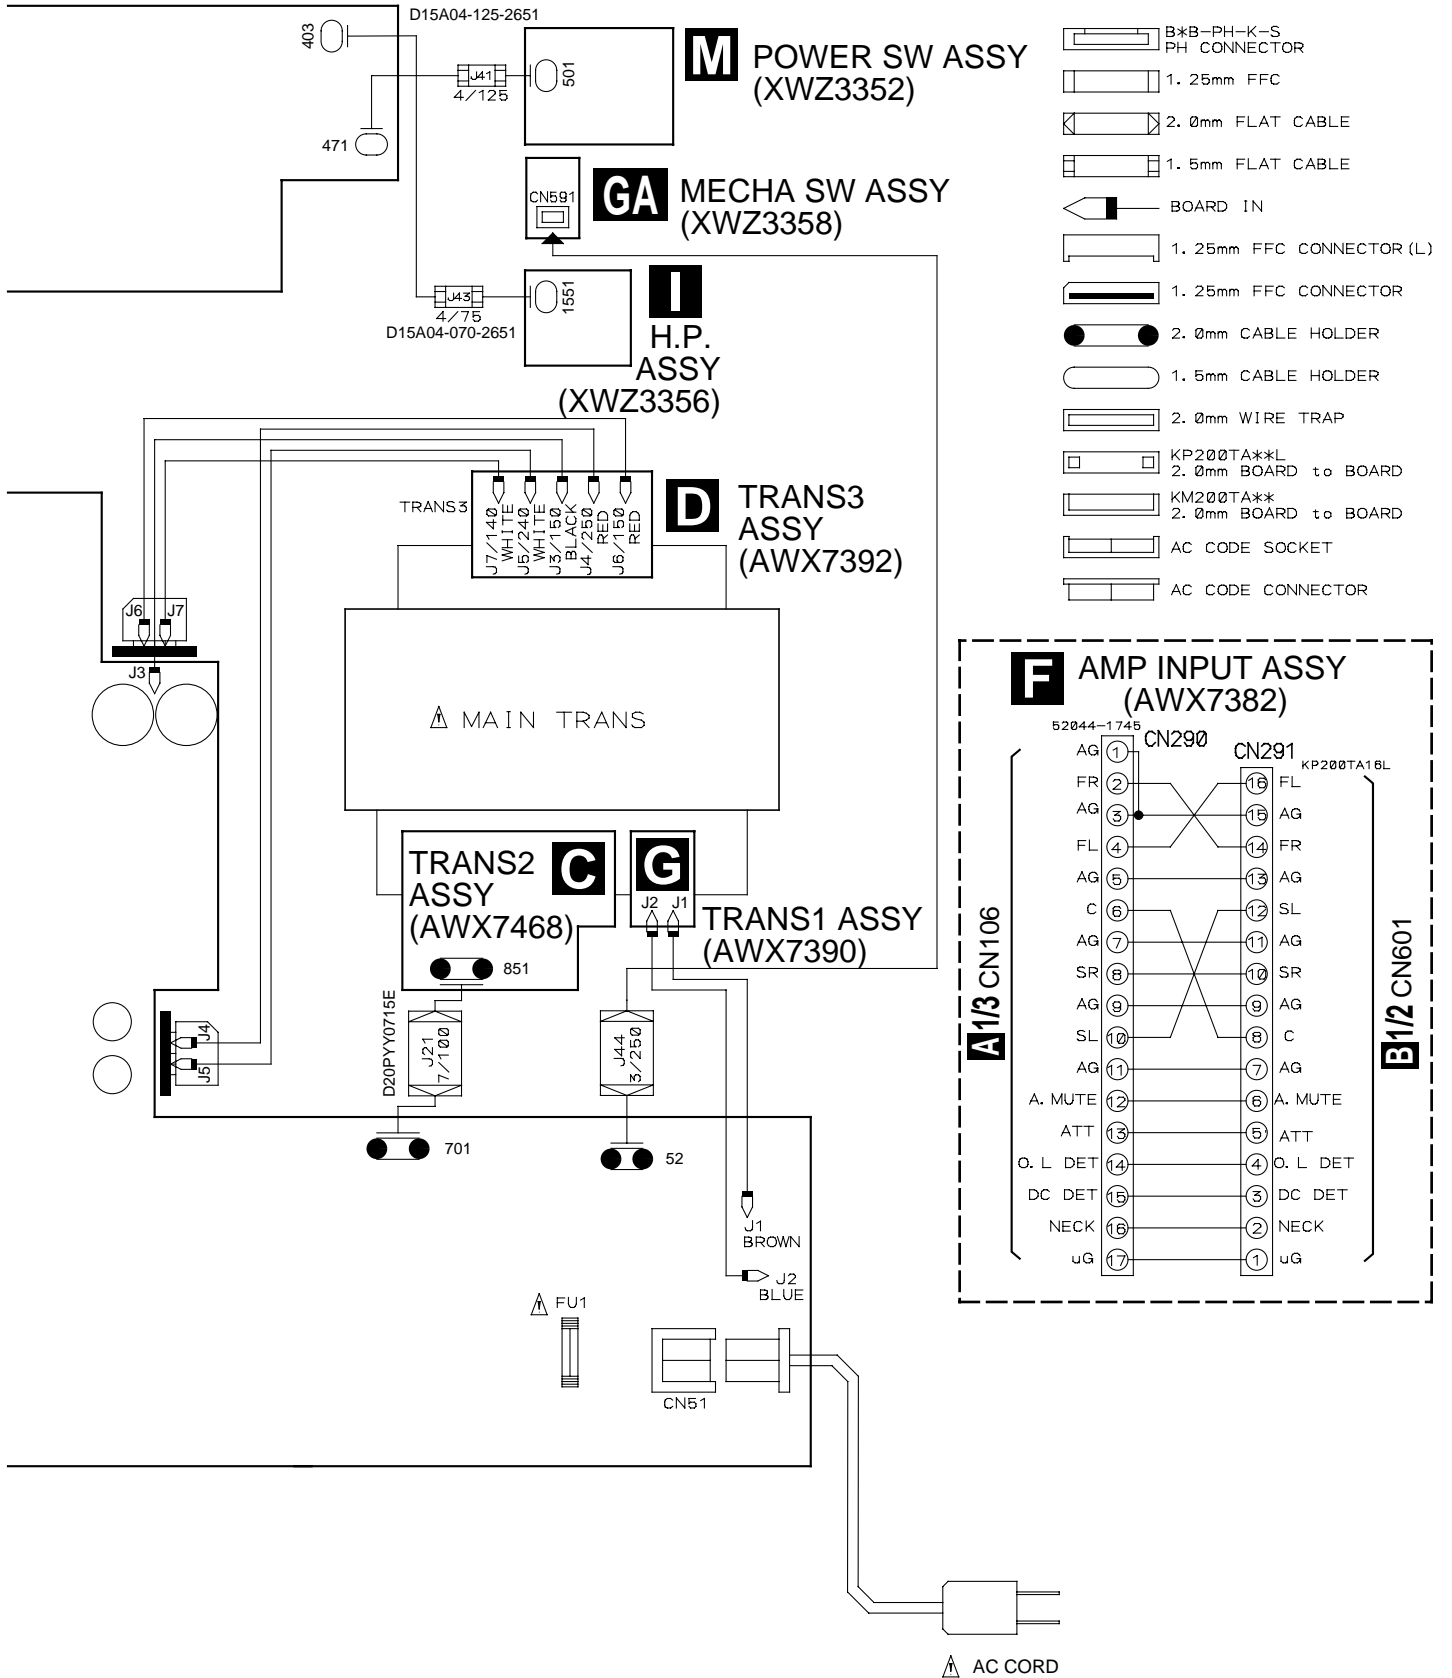

A
B
C
D



3.3 D.D & INPUT ASSY (1/3)


FM/AM TUNER UNIT **A 1/3** D.D & INPUT ASSY (XWX3025)

A


B

C

D

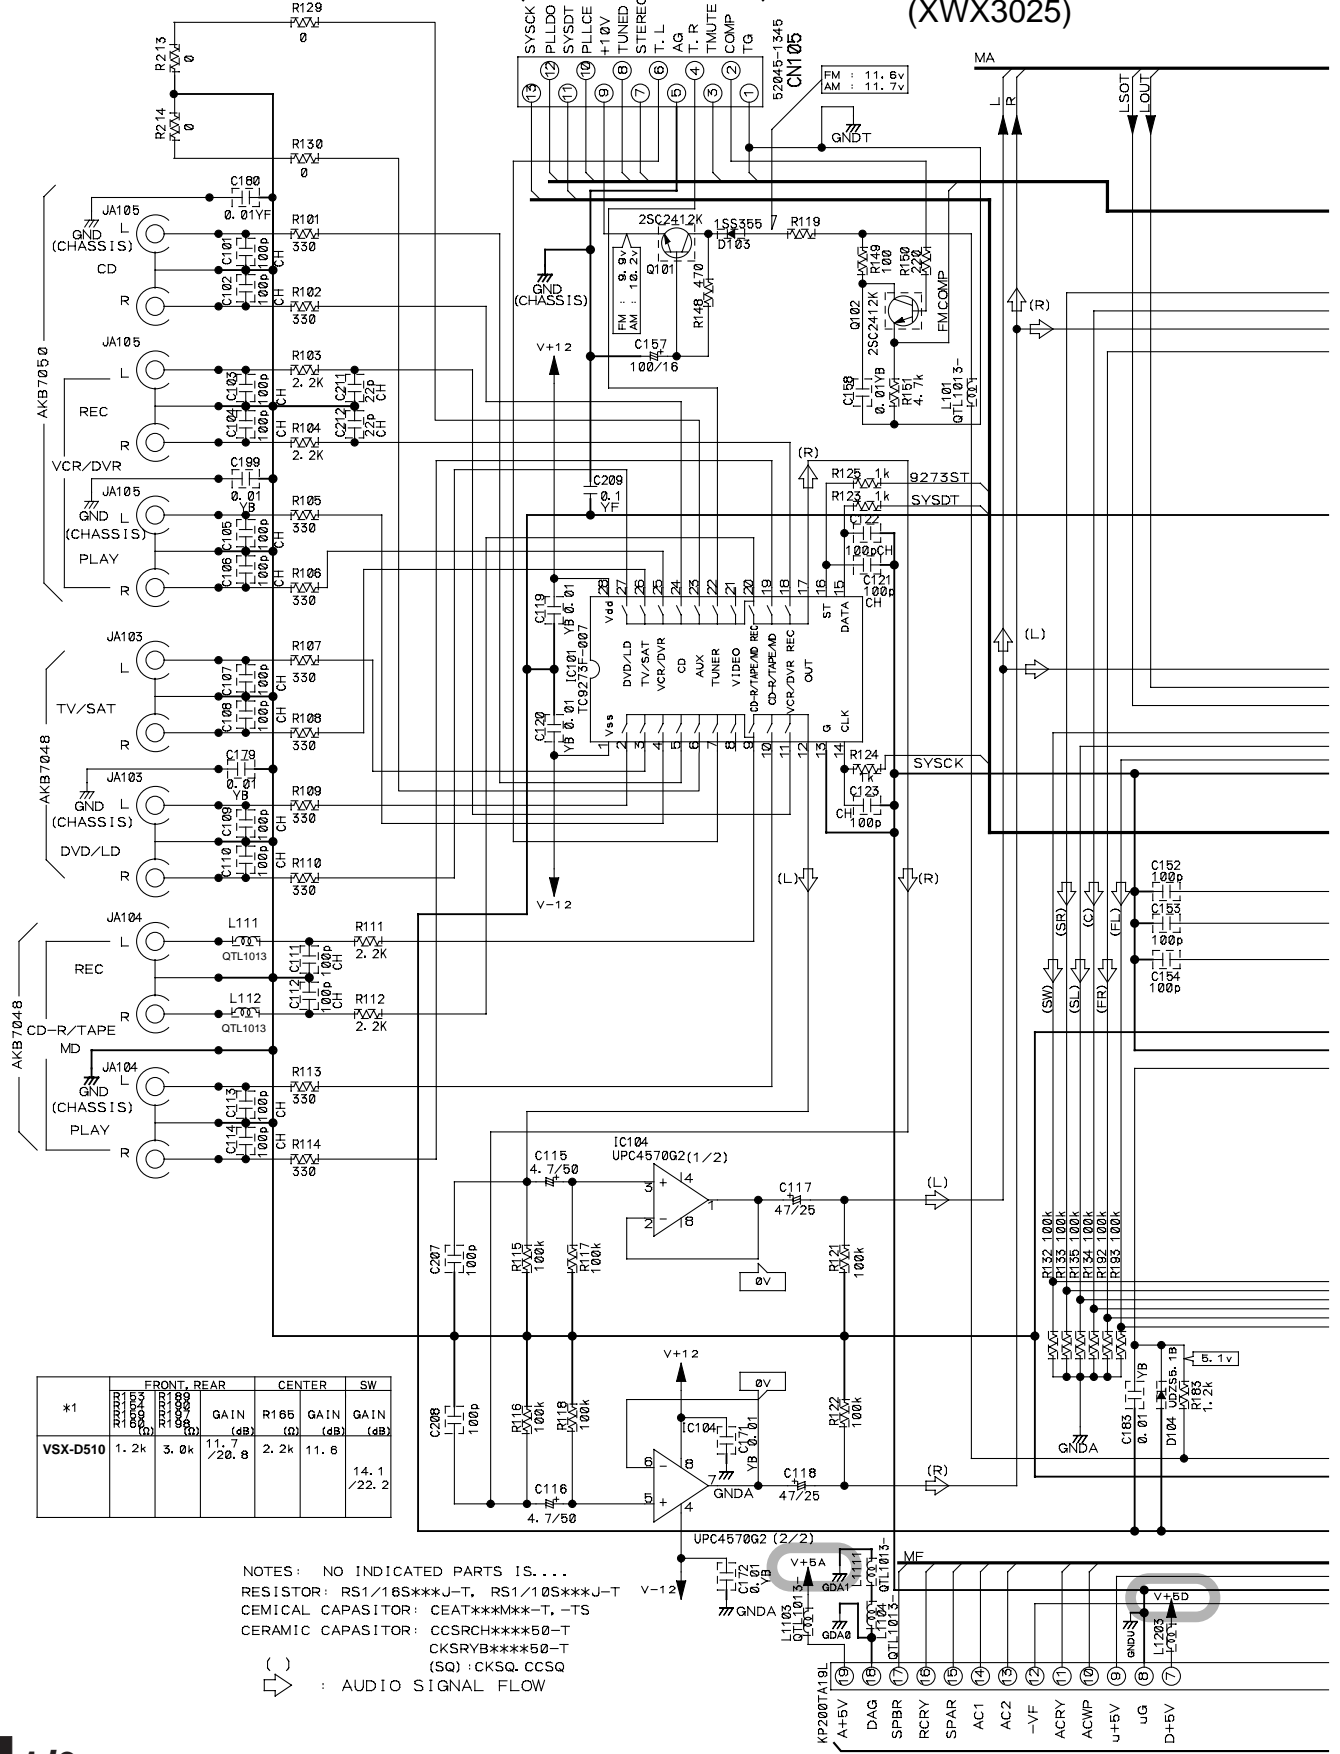


O : The power supply is shown with the marked box.

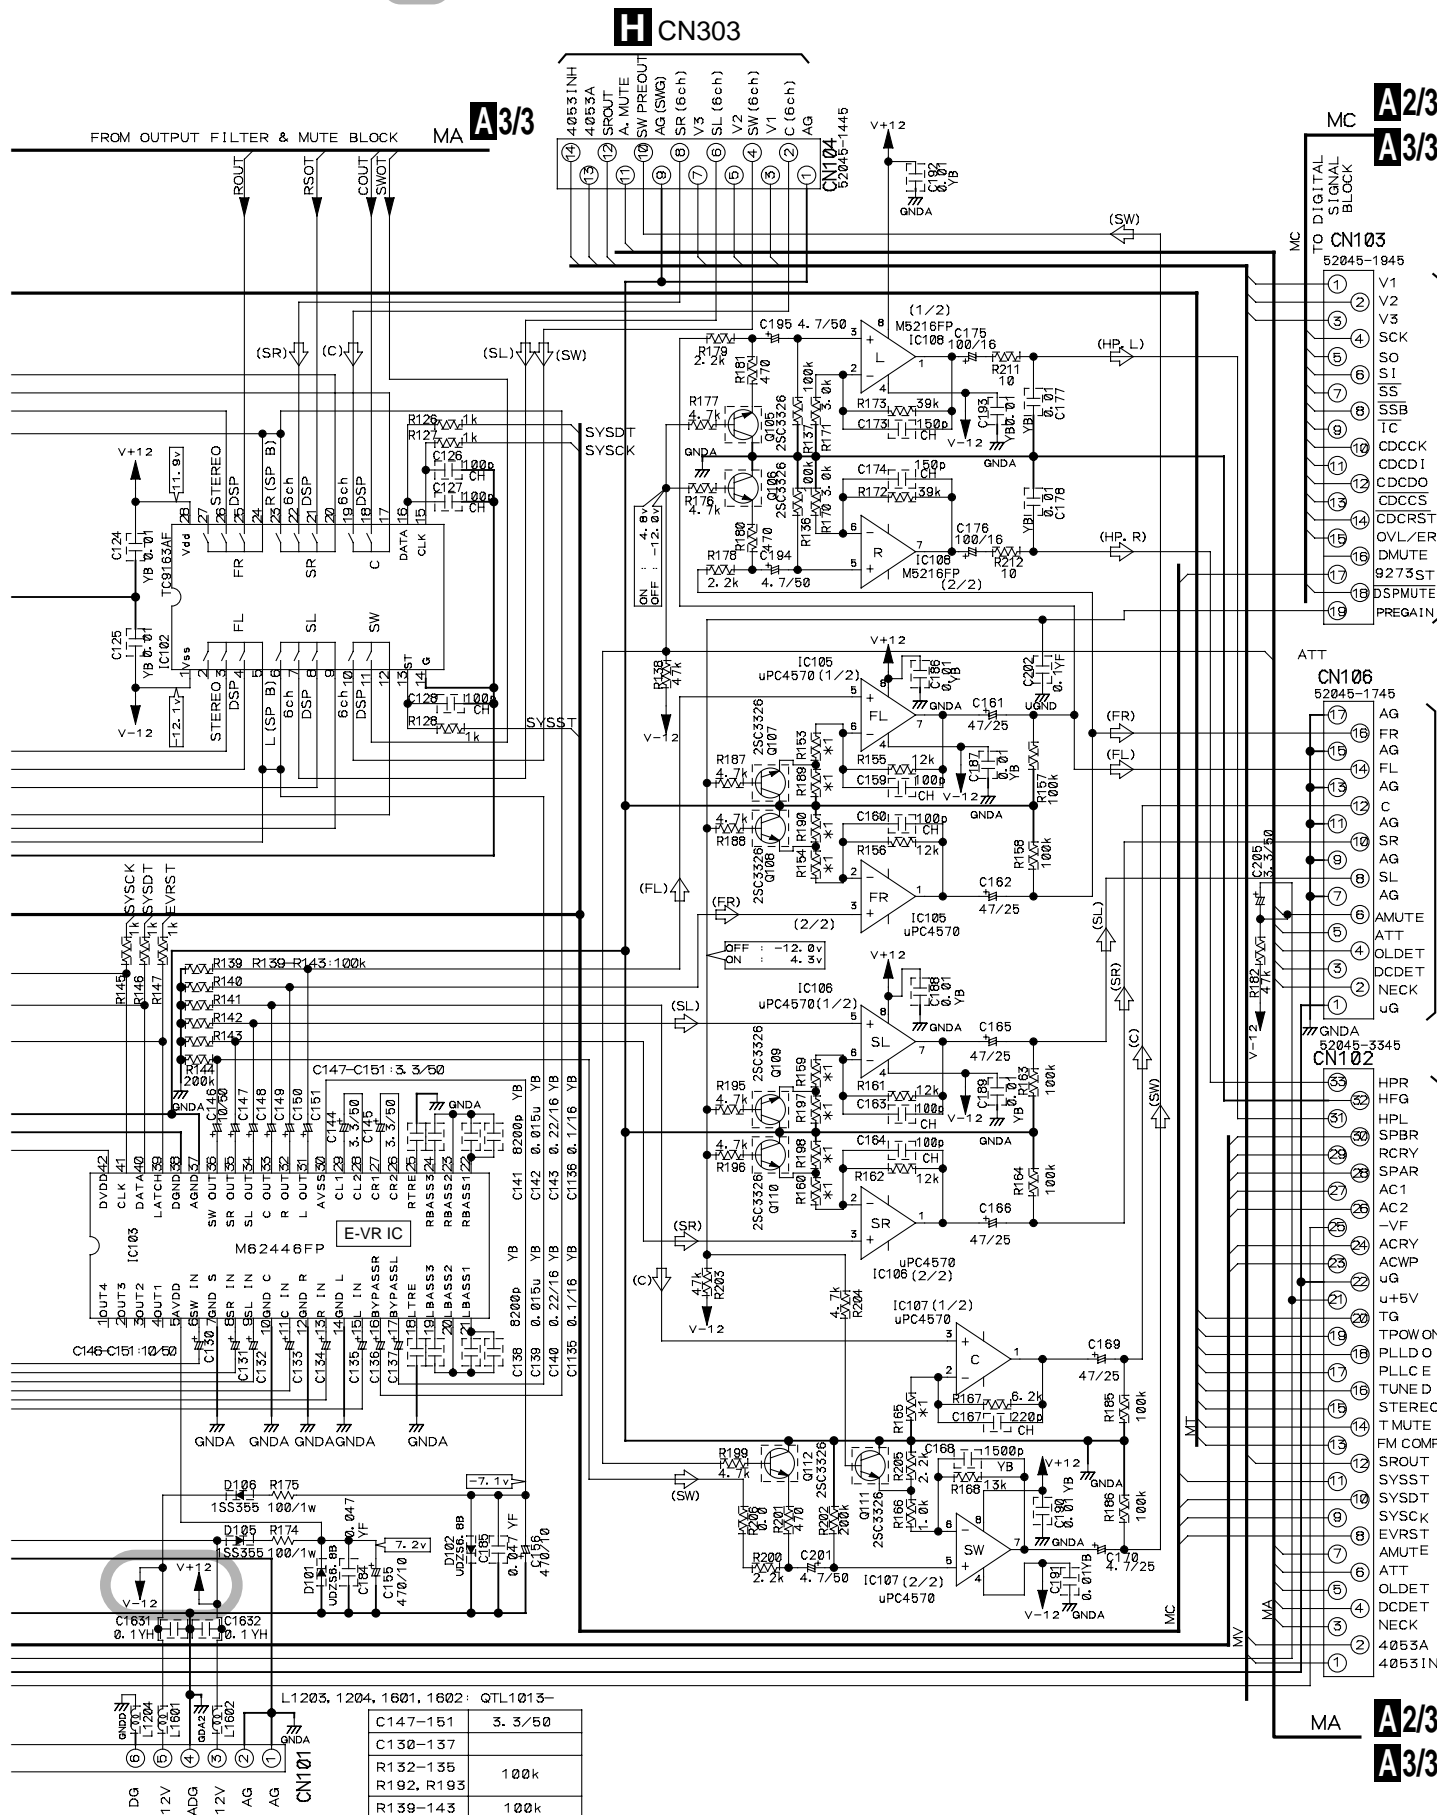

C147-151	3.3/50
C130-137	
R132-135	100k
R192, R193	
R139-143	100k


3.4 D.D & INPUT ASSY (2/3)

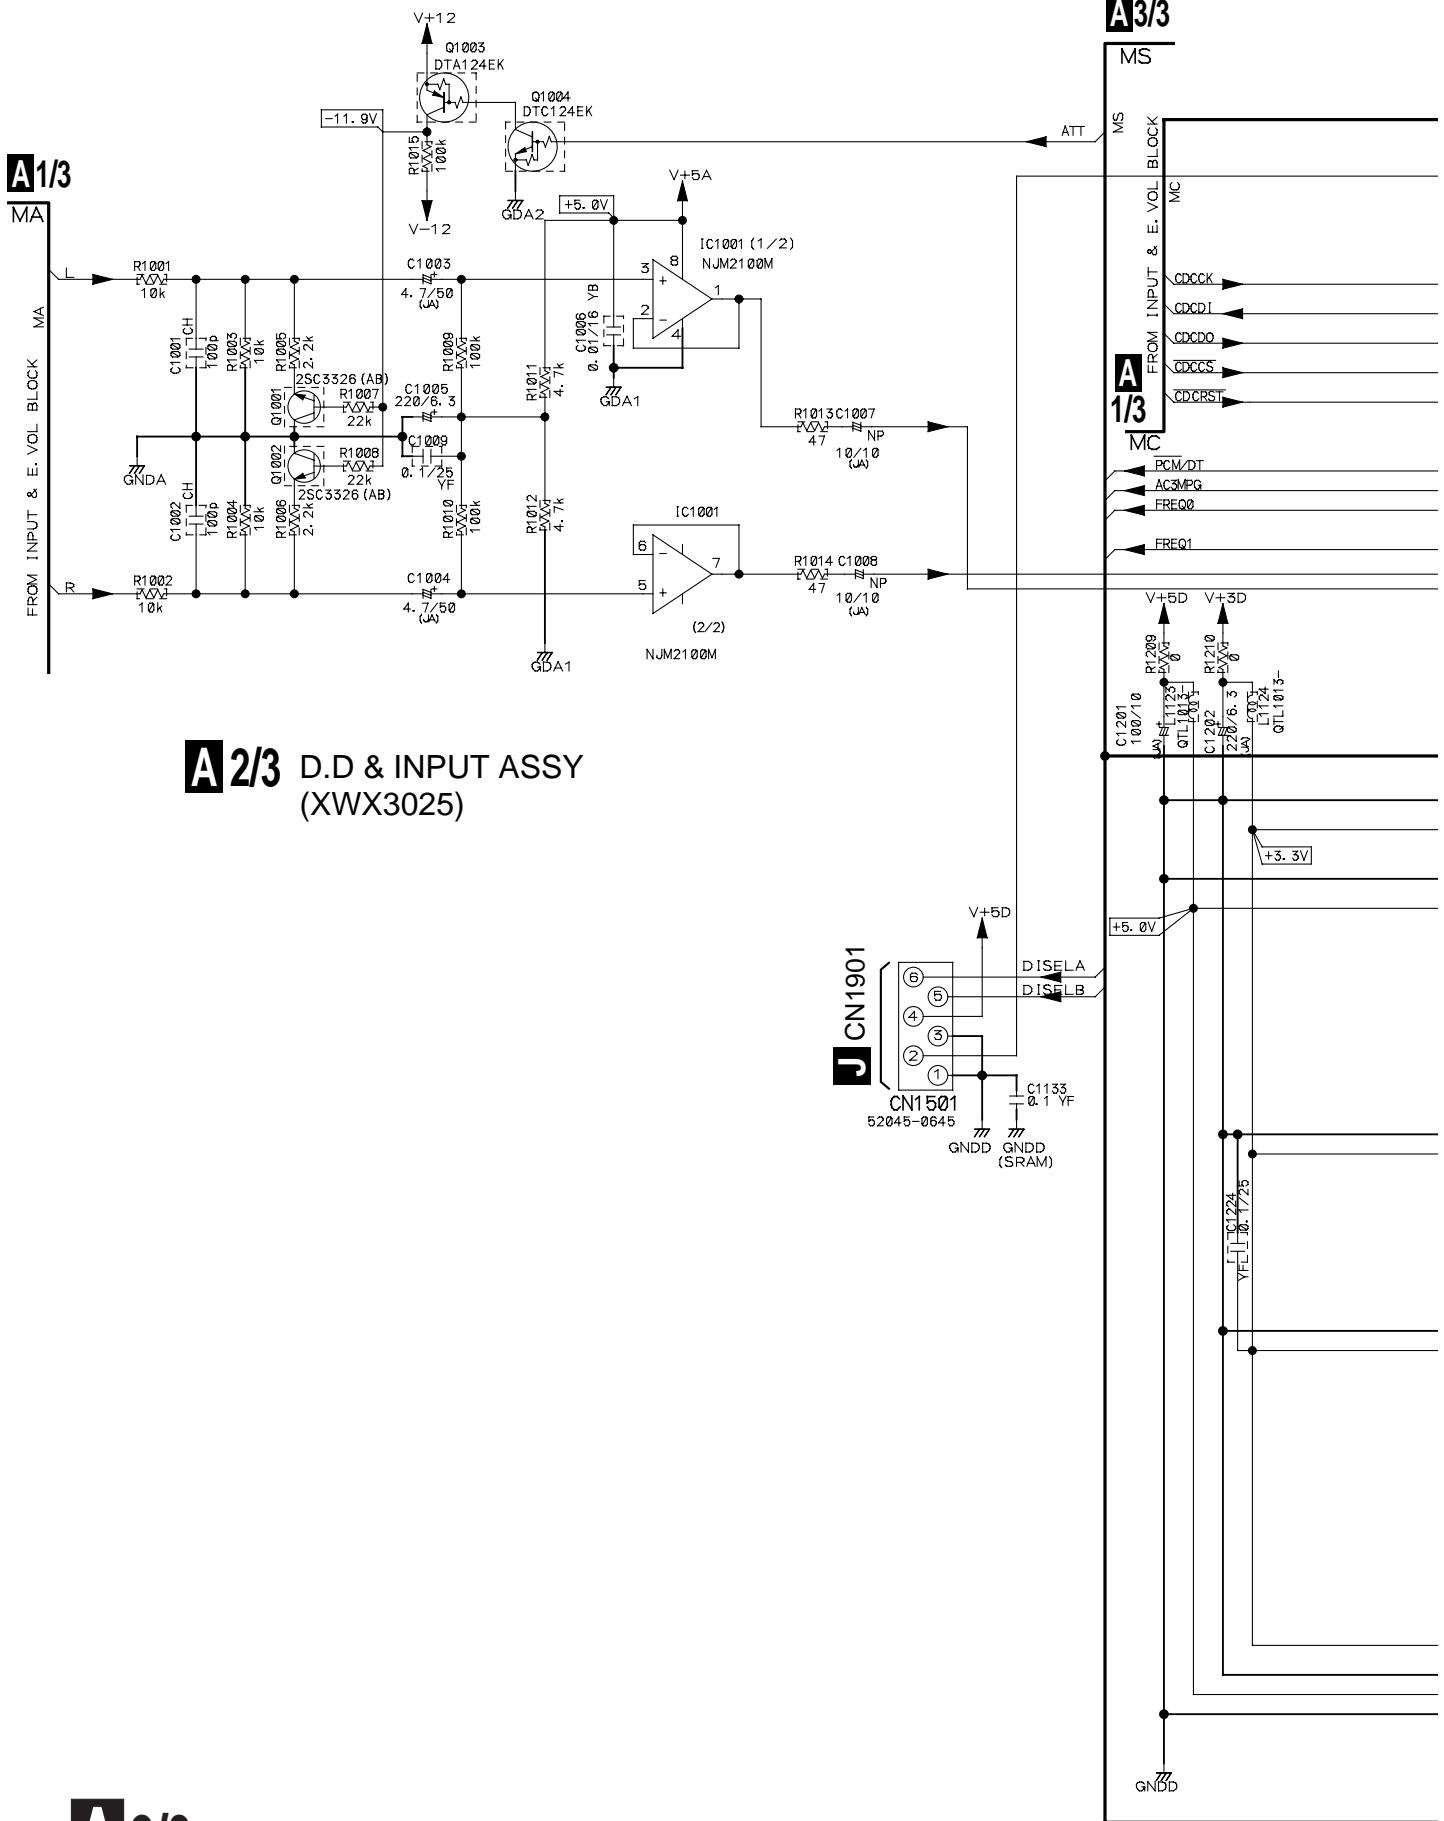

A 2/3 D.D & INPUT ASSY (XWX3025)

O : The power supply is shown with the marked box.

A

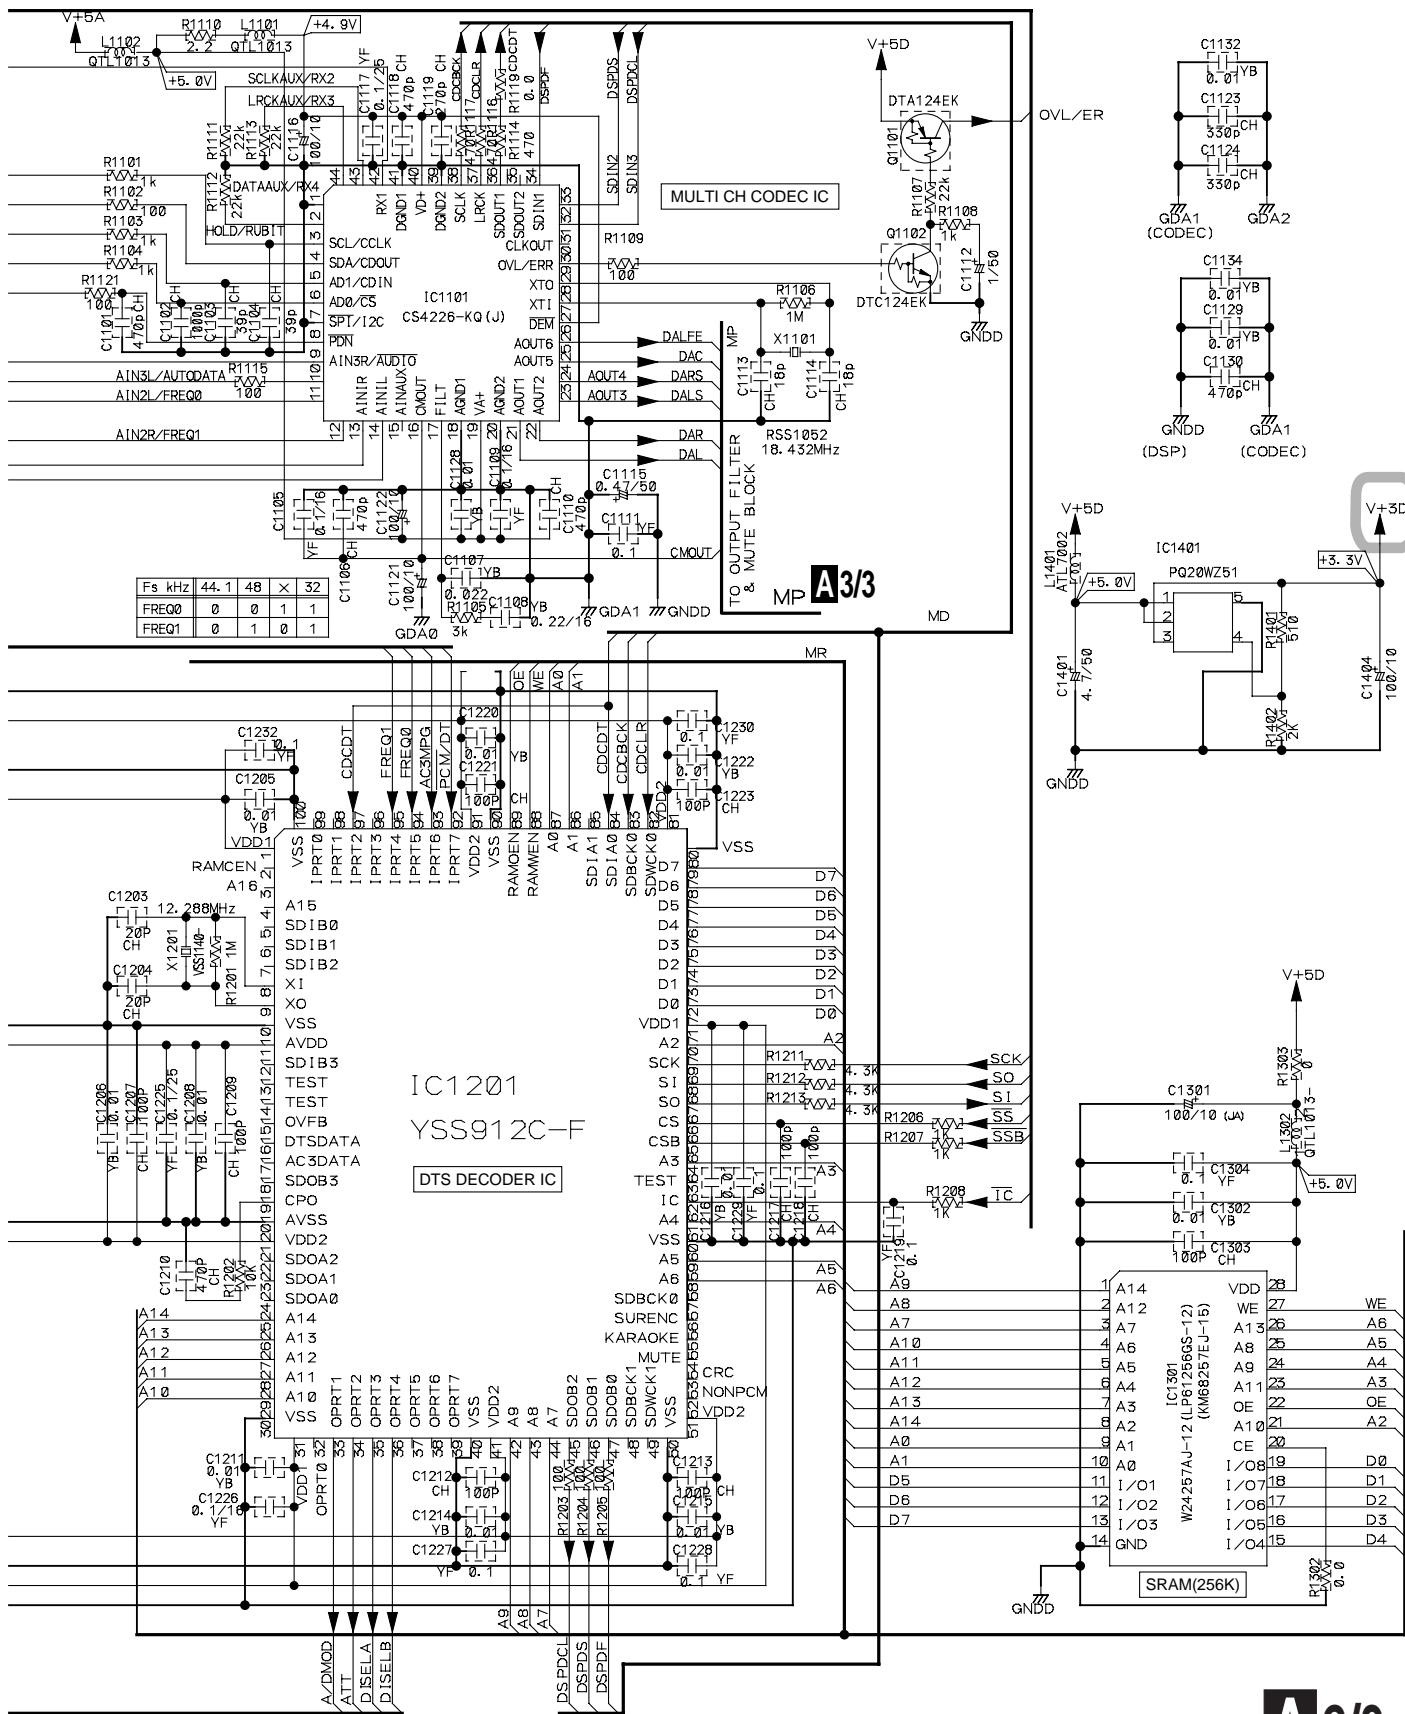


B


C

D

3.5 D.D & INPUT ASSY (3/3)

A 3/3 D.D & INPUT ASSY (XWX3025)

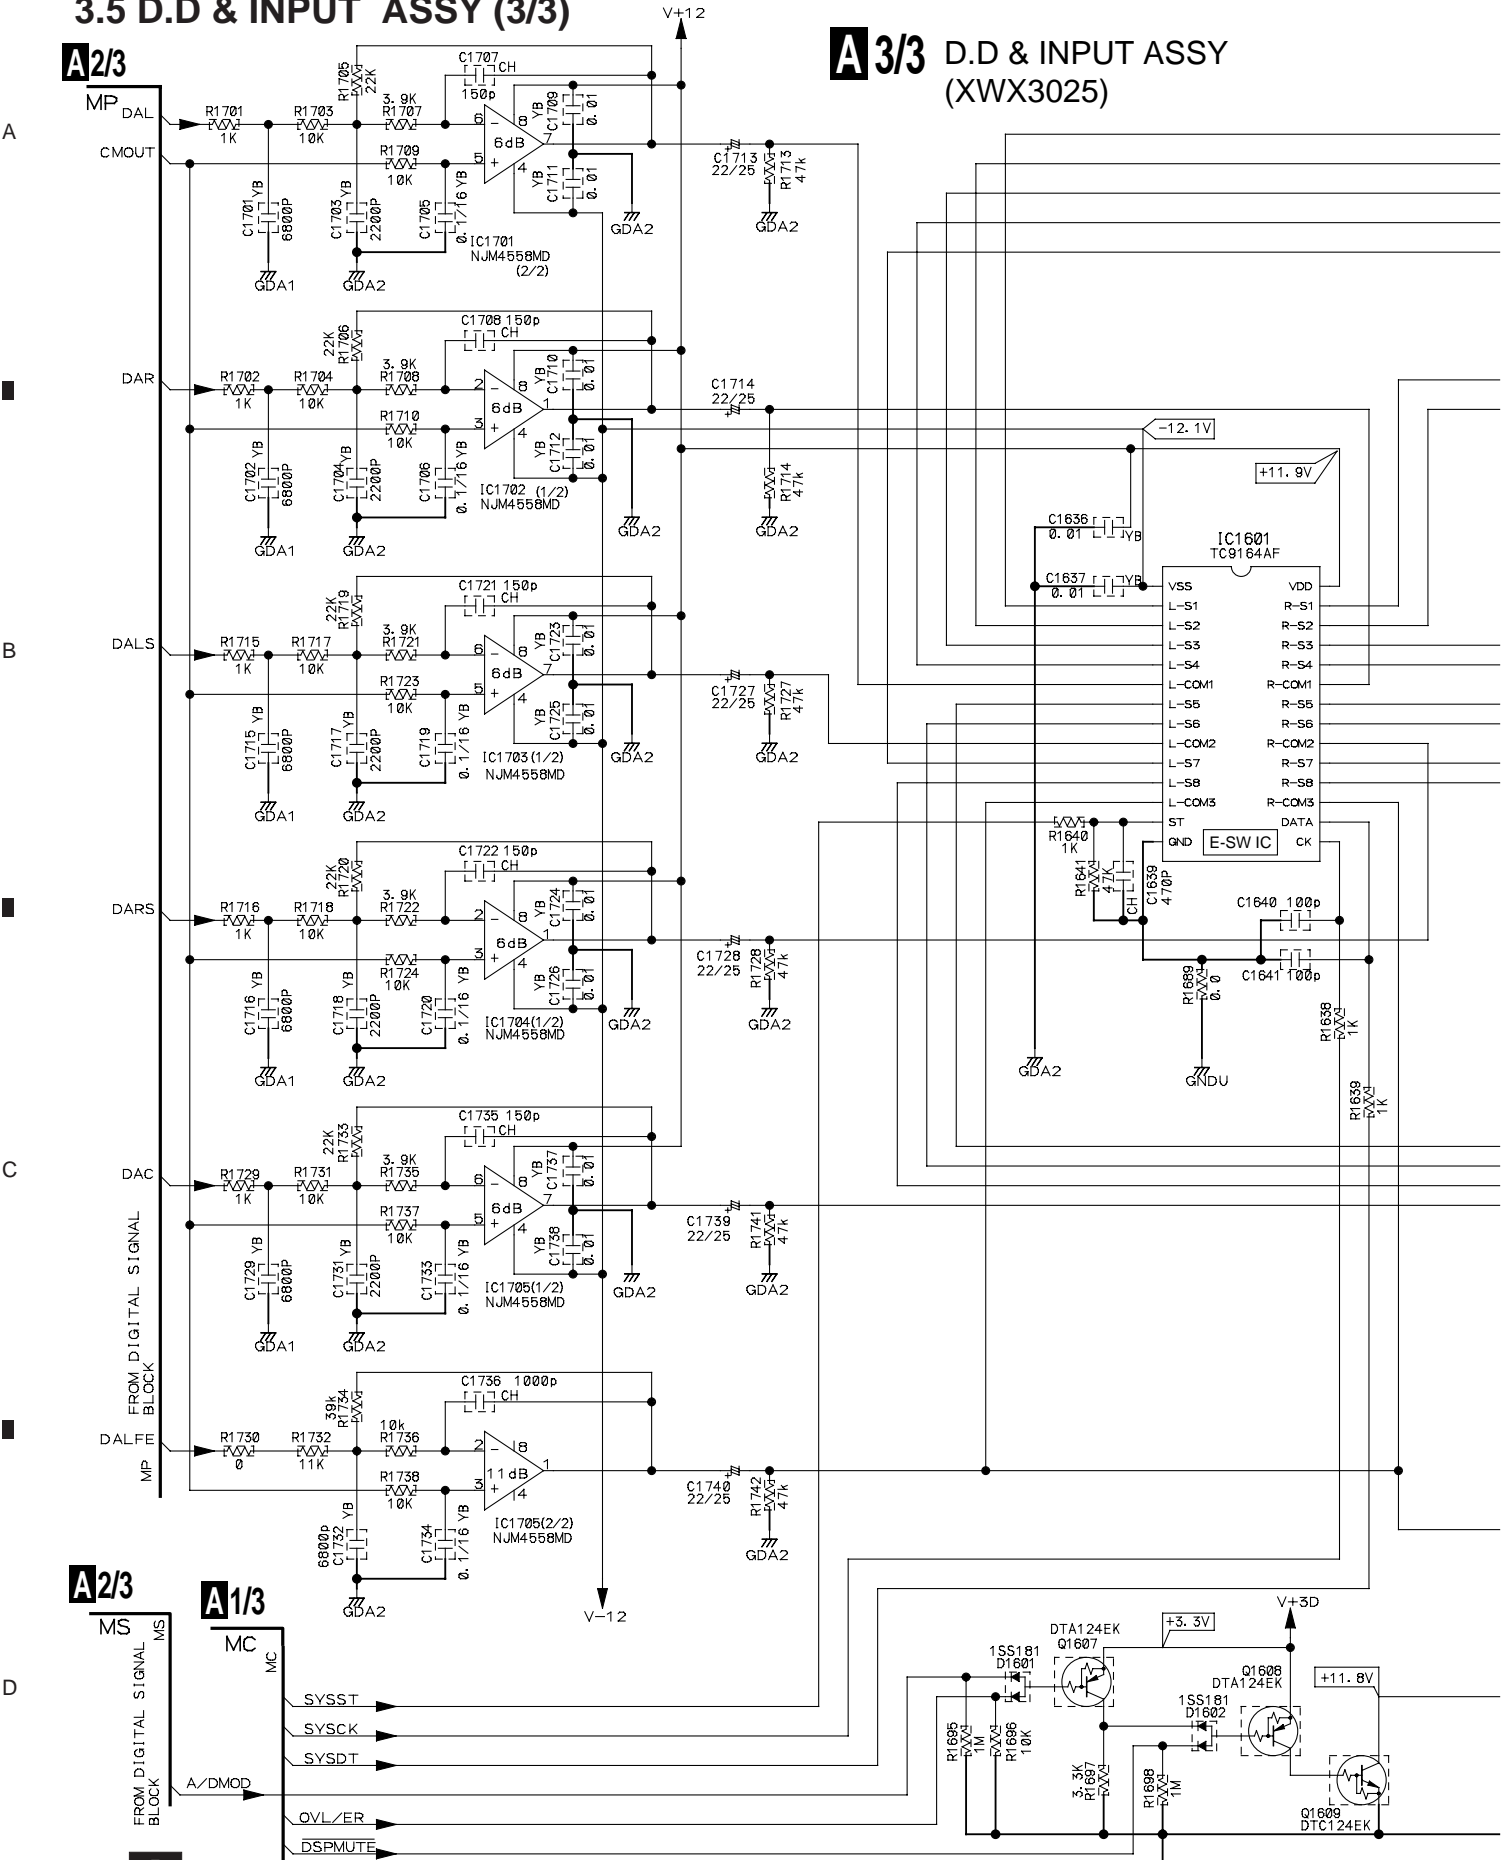

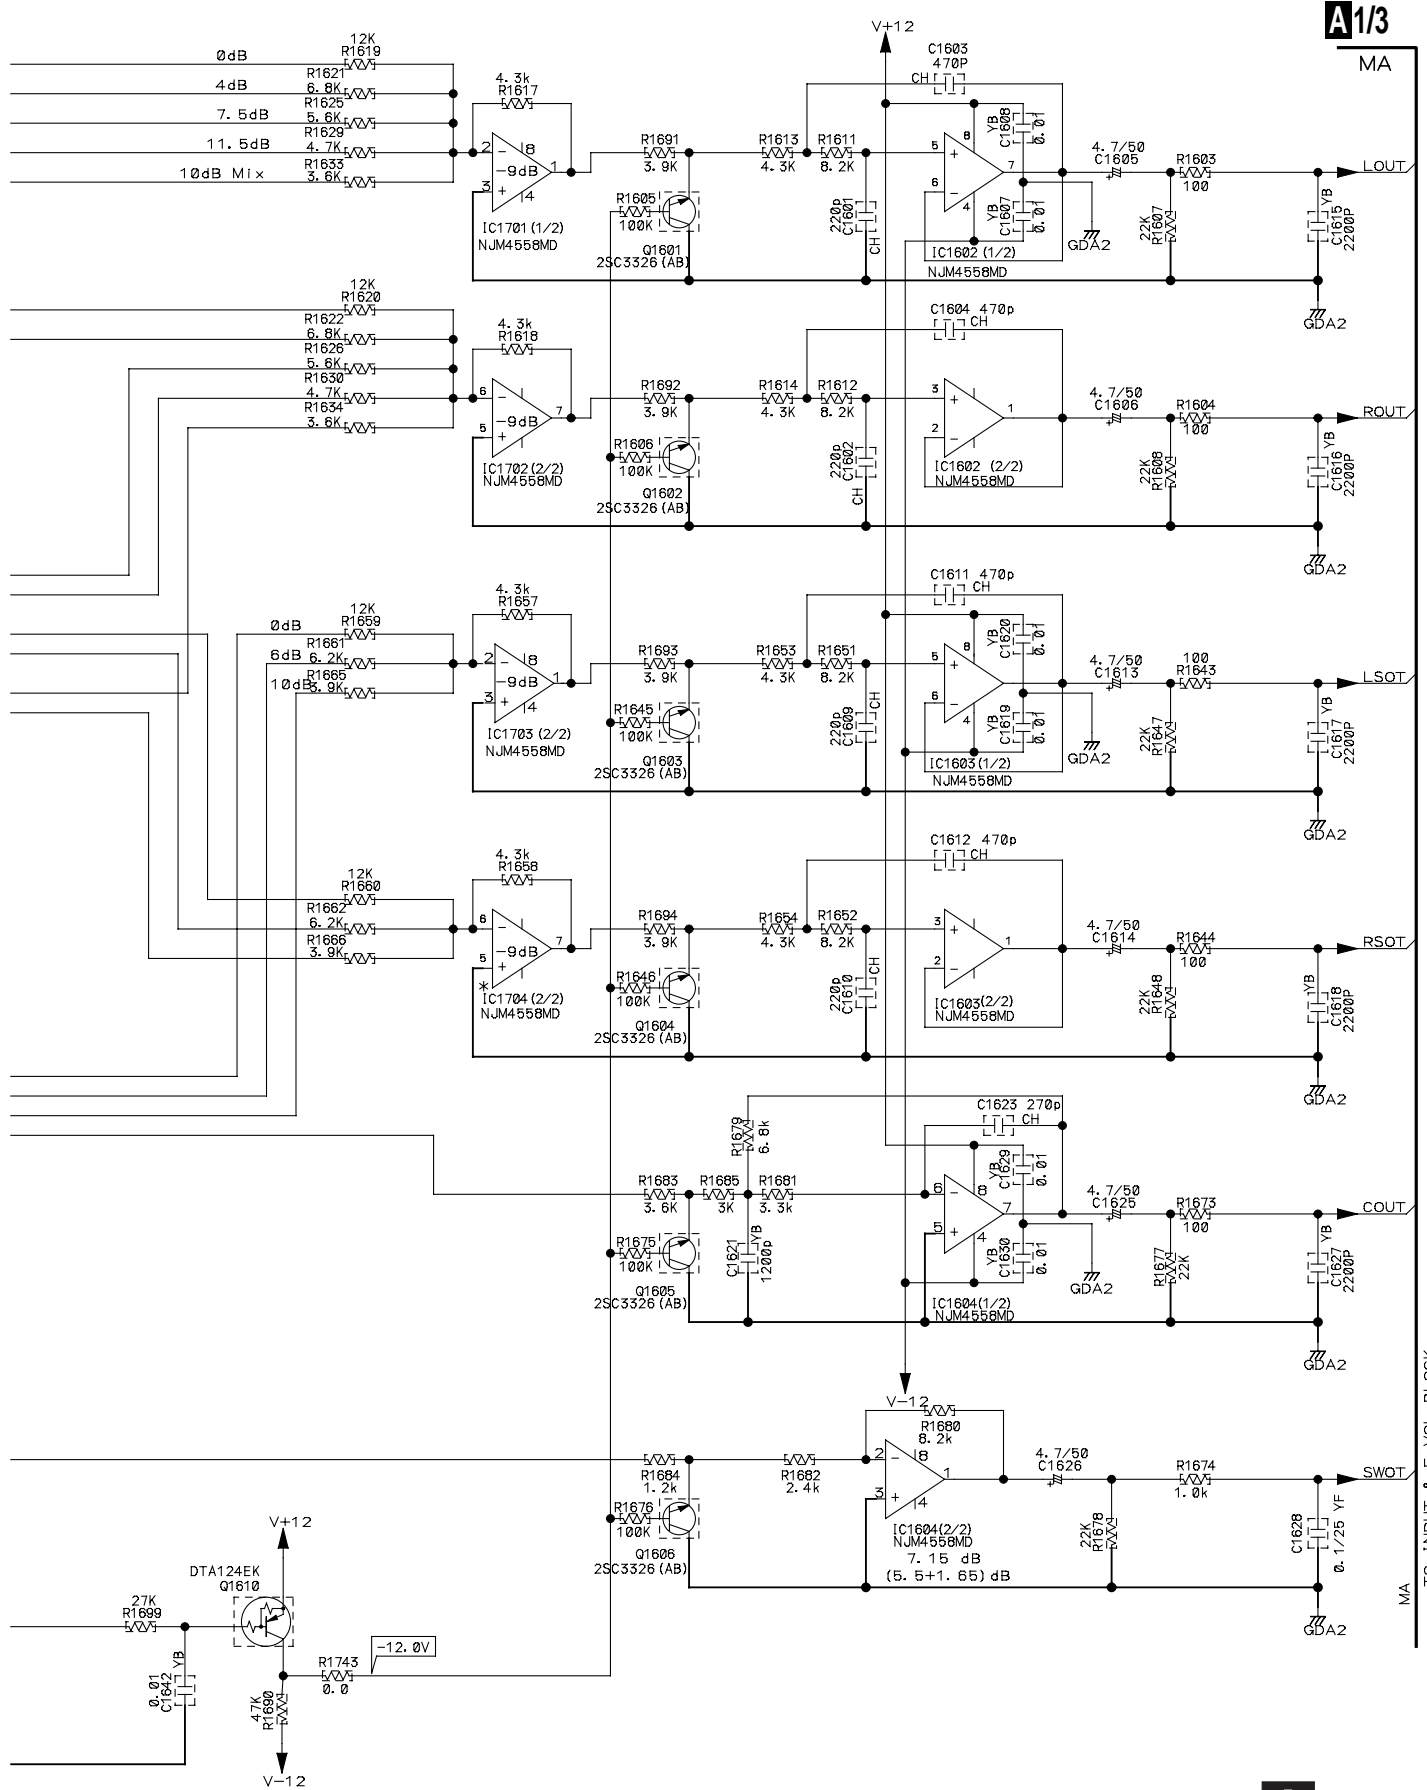

A1/3

3.6 AMP&PRIMARY (1/2), TRANS2 and TRANS3 ASSYS

B 1/2 AMP&PRIMARY ASSY (XWZ3373)

A

B


C

D

F CN291

- FL (1)
- AG (2)
- FR (3)
- AG (4)
- SL (5)
- AG (6)
- SR (7)
- AG (8)
- C (9)
- AG (10)
- A. MUTE (11)
- ATT. (12)
- OL (13)
- DC DET. (14)
- NECK (15)
- UG (16)

KM2001A16

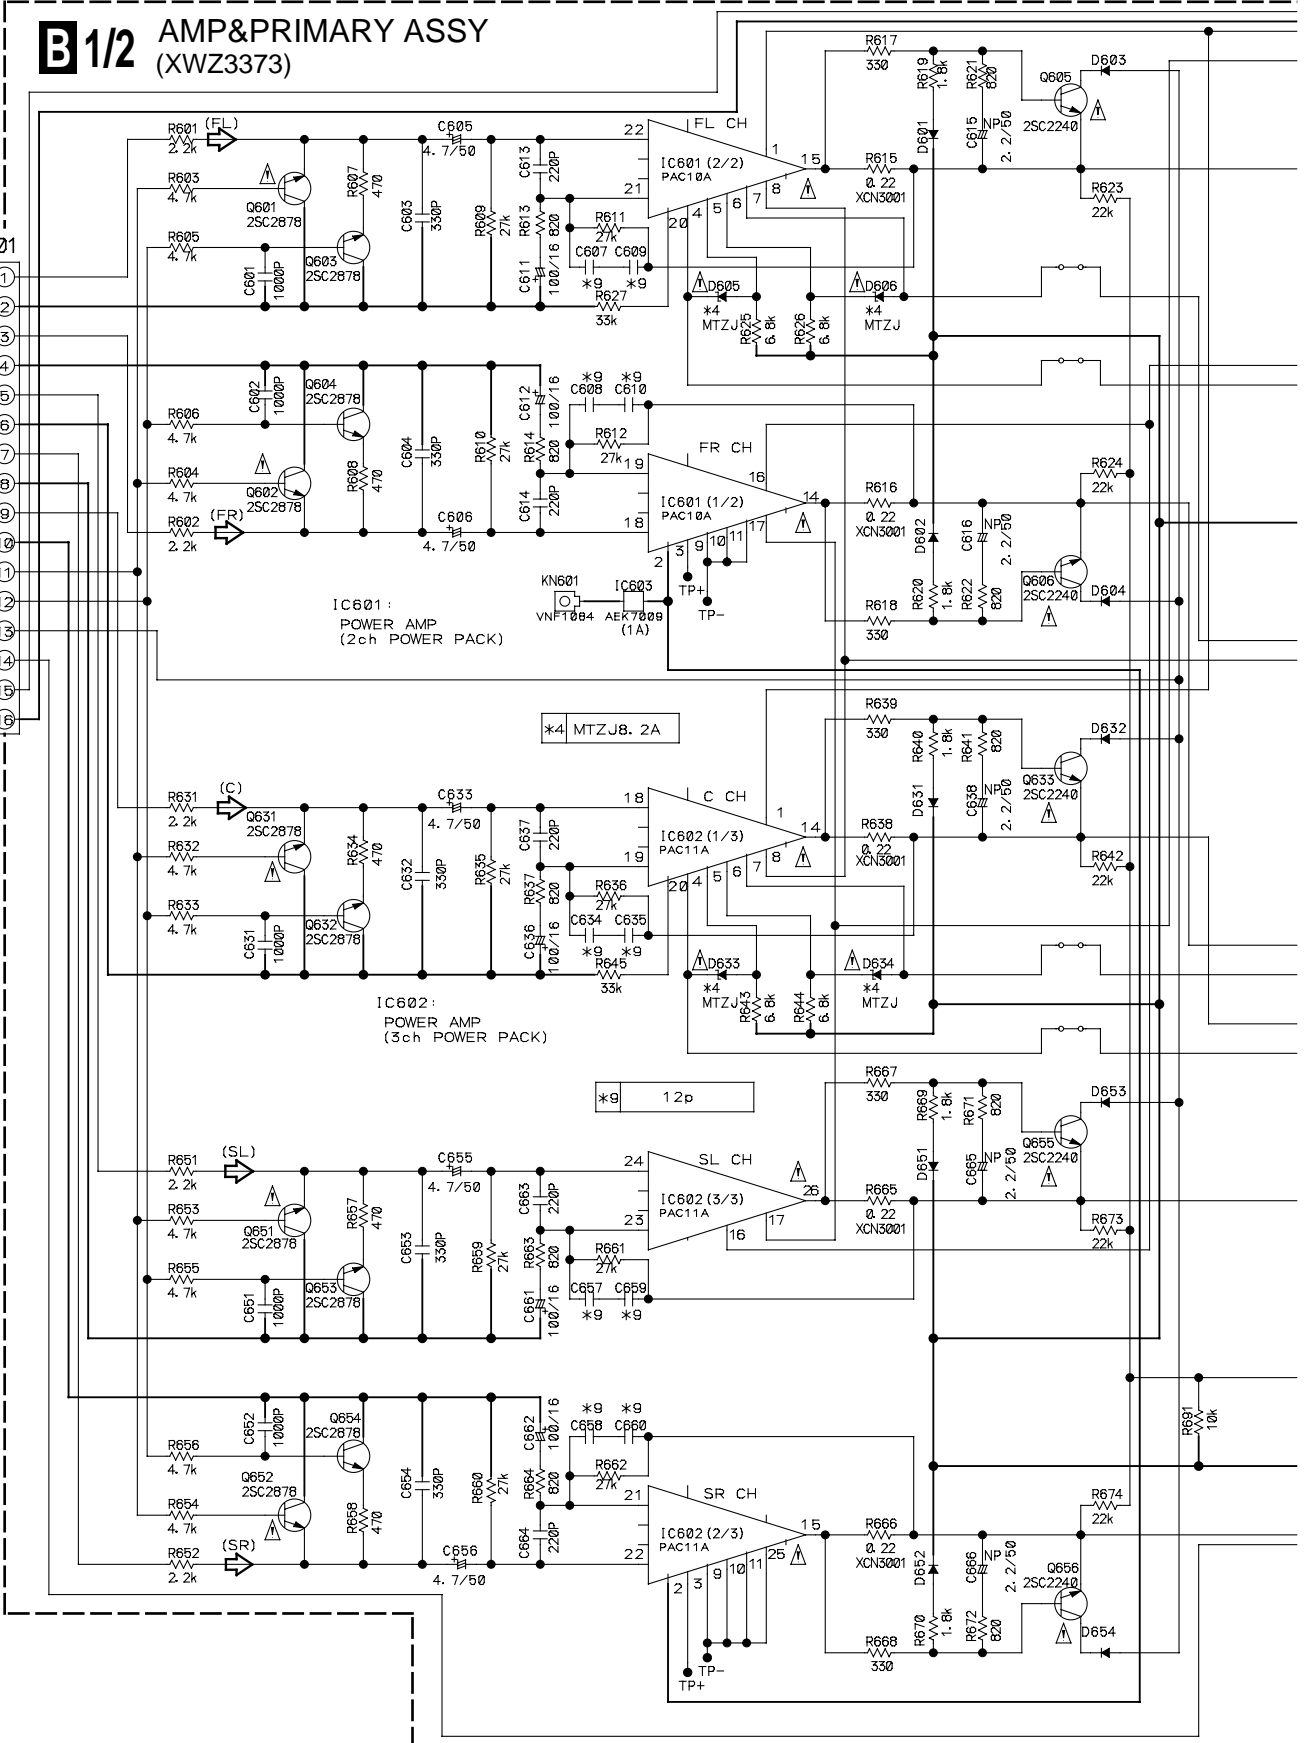


NOTE FOR FUSE REPLACEMENT

CAUTION - FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE WITH SAME TYPE AND RATINGS ONLY.

D TRANS3 ASSY (AWX7392)

C TRANS2 ASSY (AWX7468)

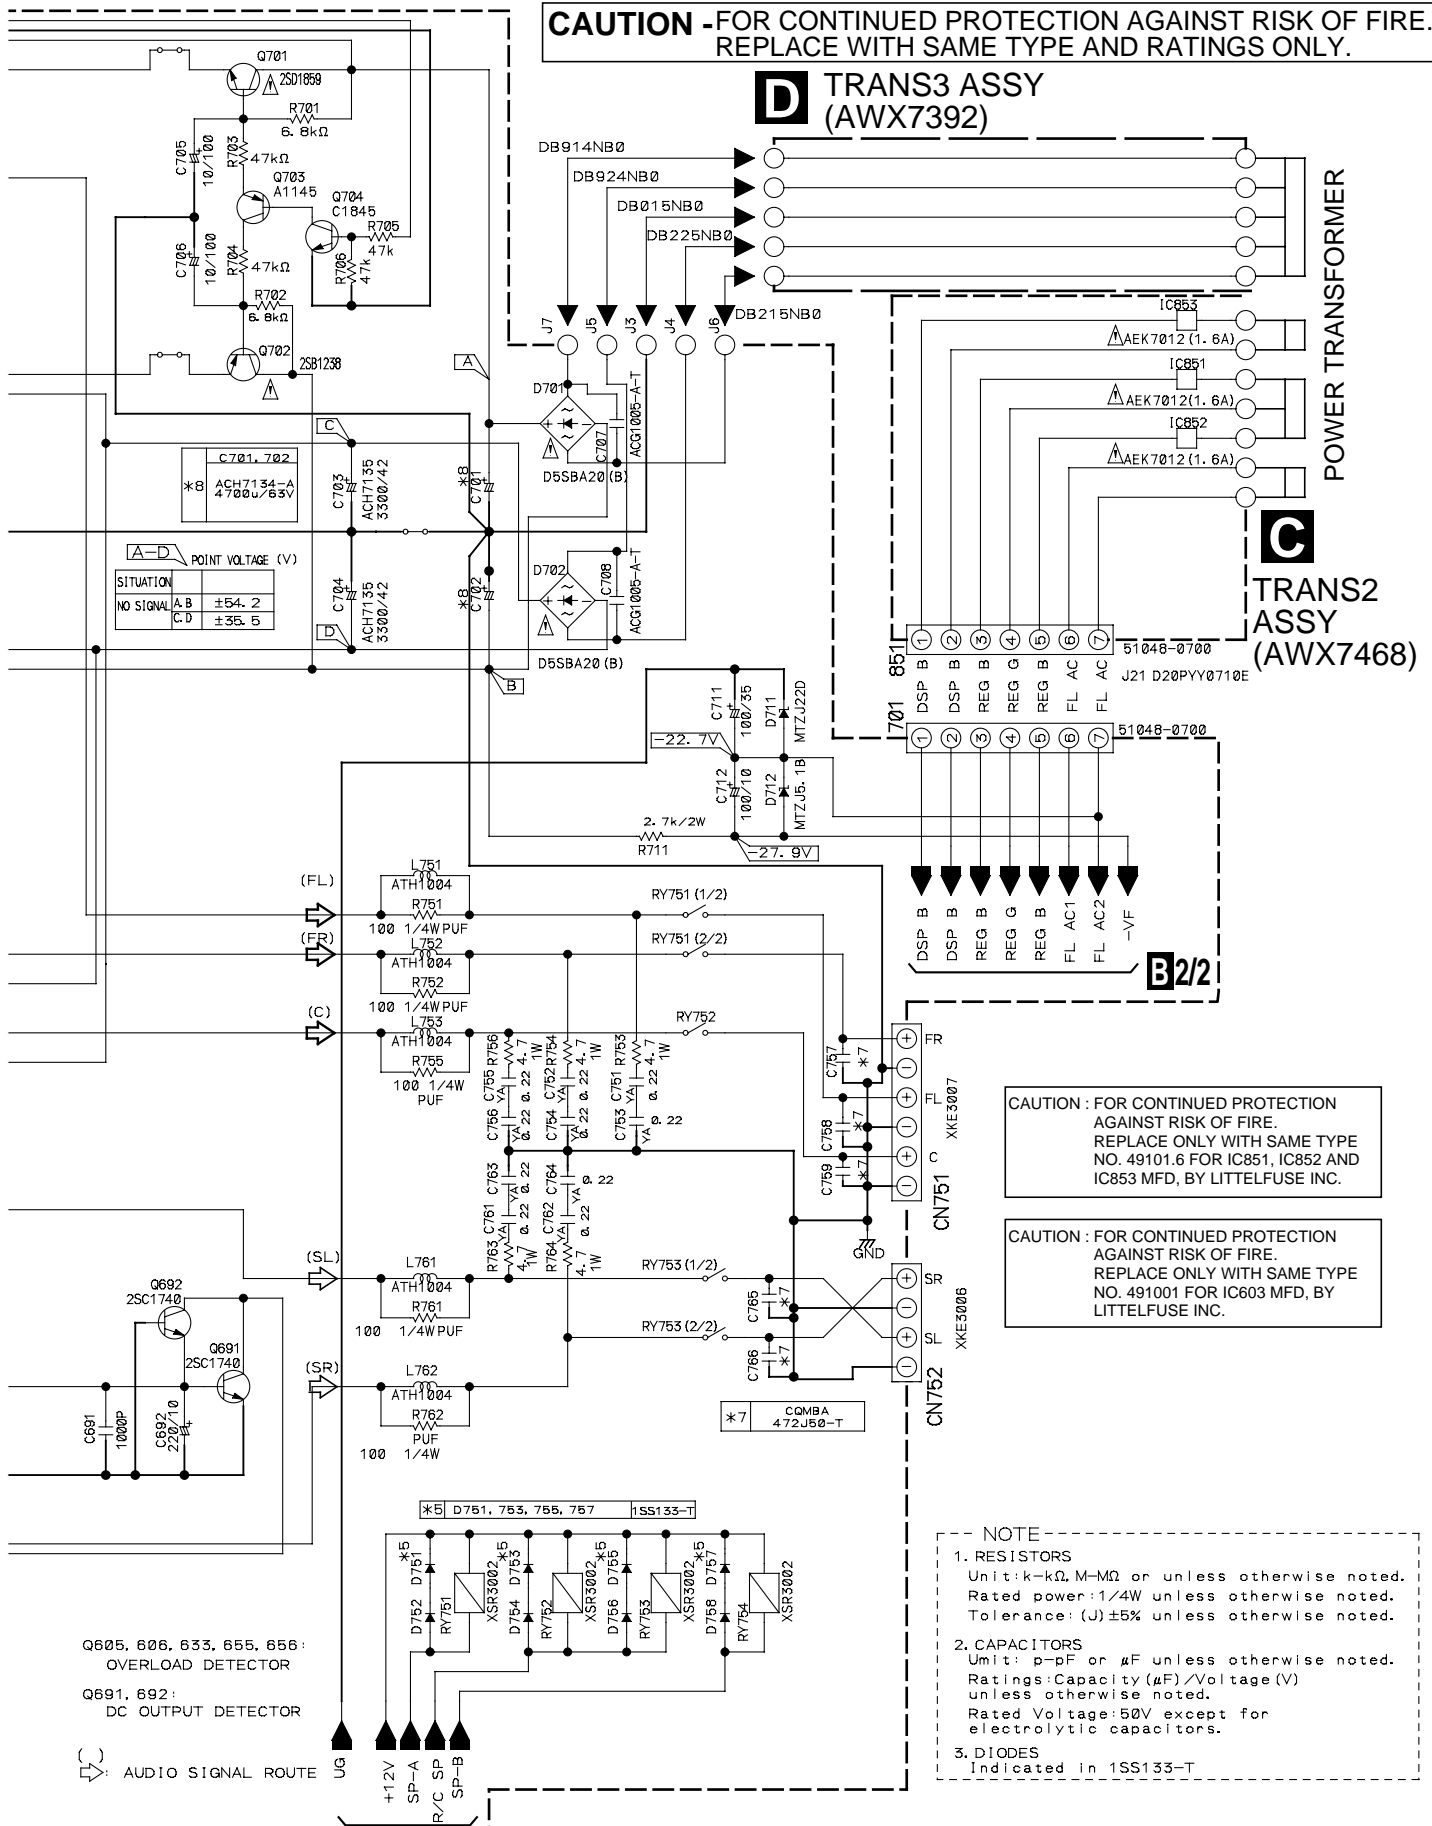

A-D POINT VOLTAGE (V)

SITUATION	A	B	±	54.2
NO SIGNAL	A	B	±	54.2
	C	D	±	35.5

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 49101.6 FOR IC851, IC852 AND IC853 MFD, BY LITTELFUSE INC.

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491001 FOR IC603 MFD, BY LITTELFUSE INC.

- NOTE
- RESISTORS
Unit: k- Ω , M-M Ω or unless otherwise noted.
Rated power: 1/4W unless otherwise noted.
Tolerance: (J) $\pm 5\%$ unless otherwise noted.
 - CAPACITORS
Unit: p-pF or μ F unless otherwise noted.
Ratings: Capacity (μ F) / Voltage (V) unless otherwise noted.
Rated Voltage: 50V except for electrolytic capacitors.
 - DIODES
Indicated in 1SS133-T

Q805, 806, 833, 855, 856 : OVERLOAD DETECTOR
Q891, 892 : DC OUTPUT DETECTOR

AUDIO SIGNAL ROUTE

B2/2

B1/2 C D

3.7 AMP&PRIMARY (2/2), REGULATOR, MECHA SW and TRANS1 ASSYS

A

B

C

D

E REGULATOR ASSY (AWX7493)

IC804: (DSP) A+5V REG. IC





IC804 NJM78M05FA

IC803: D+5V REG. IC

IC803 NJM78M05FA

IC801: +12V REG. IC
IC802: -12V REG. IC

IC801 NJM78M12FA
IC802 NJM79M12FA

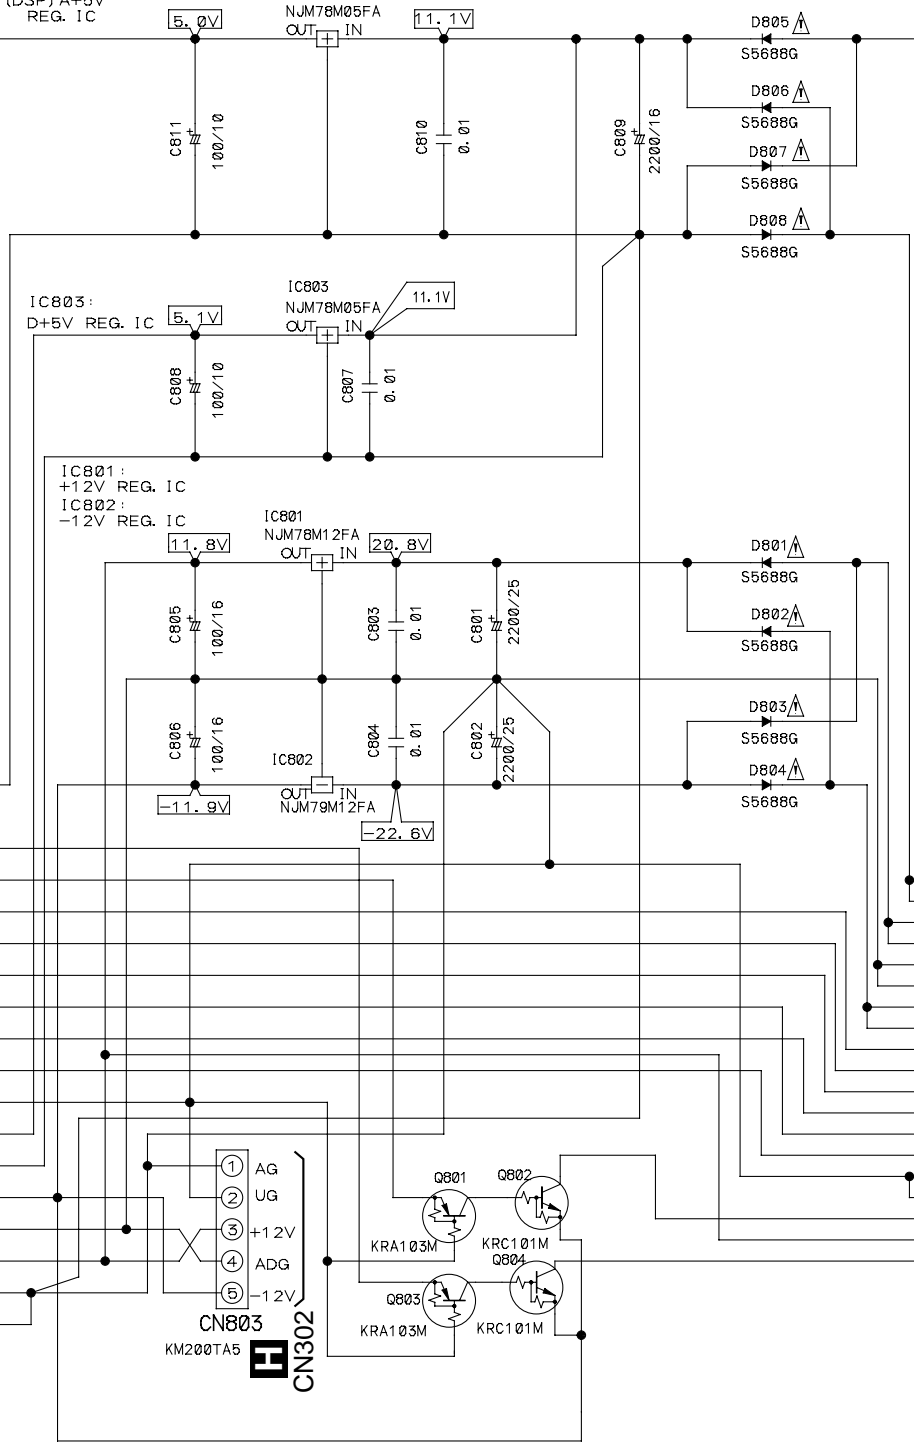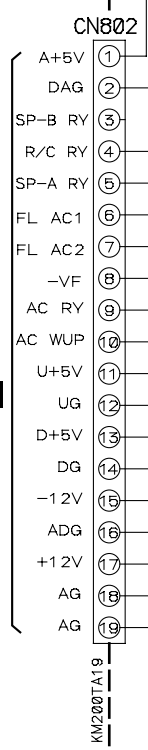


B 2/2 AMP&PRIMARY ASSY (XWZ3373)

GA MECHA SW ASSY (XWZ3358)

B1/2

G TRANS1 ASSY (AWX7390)

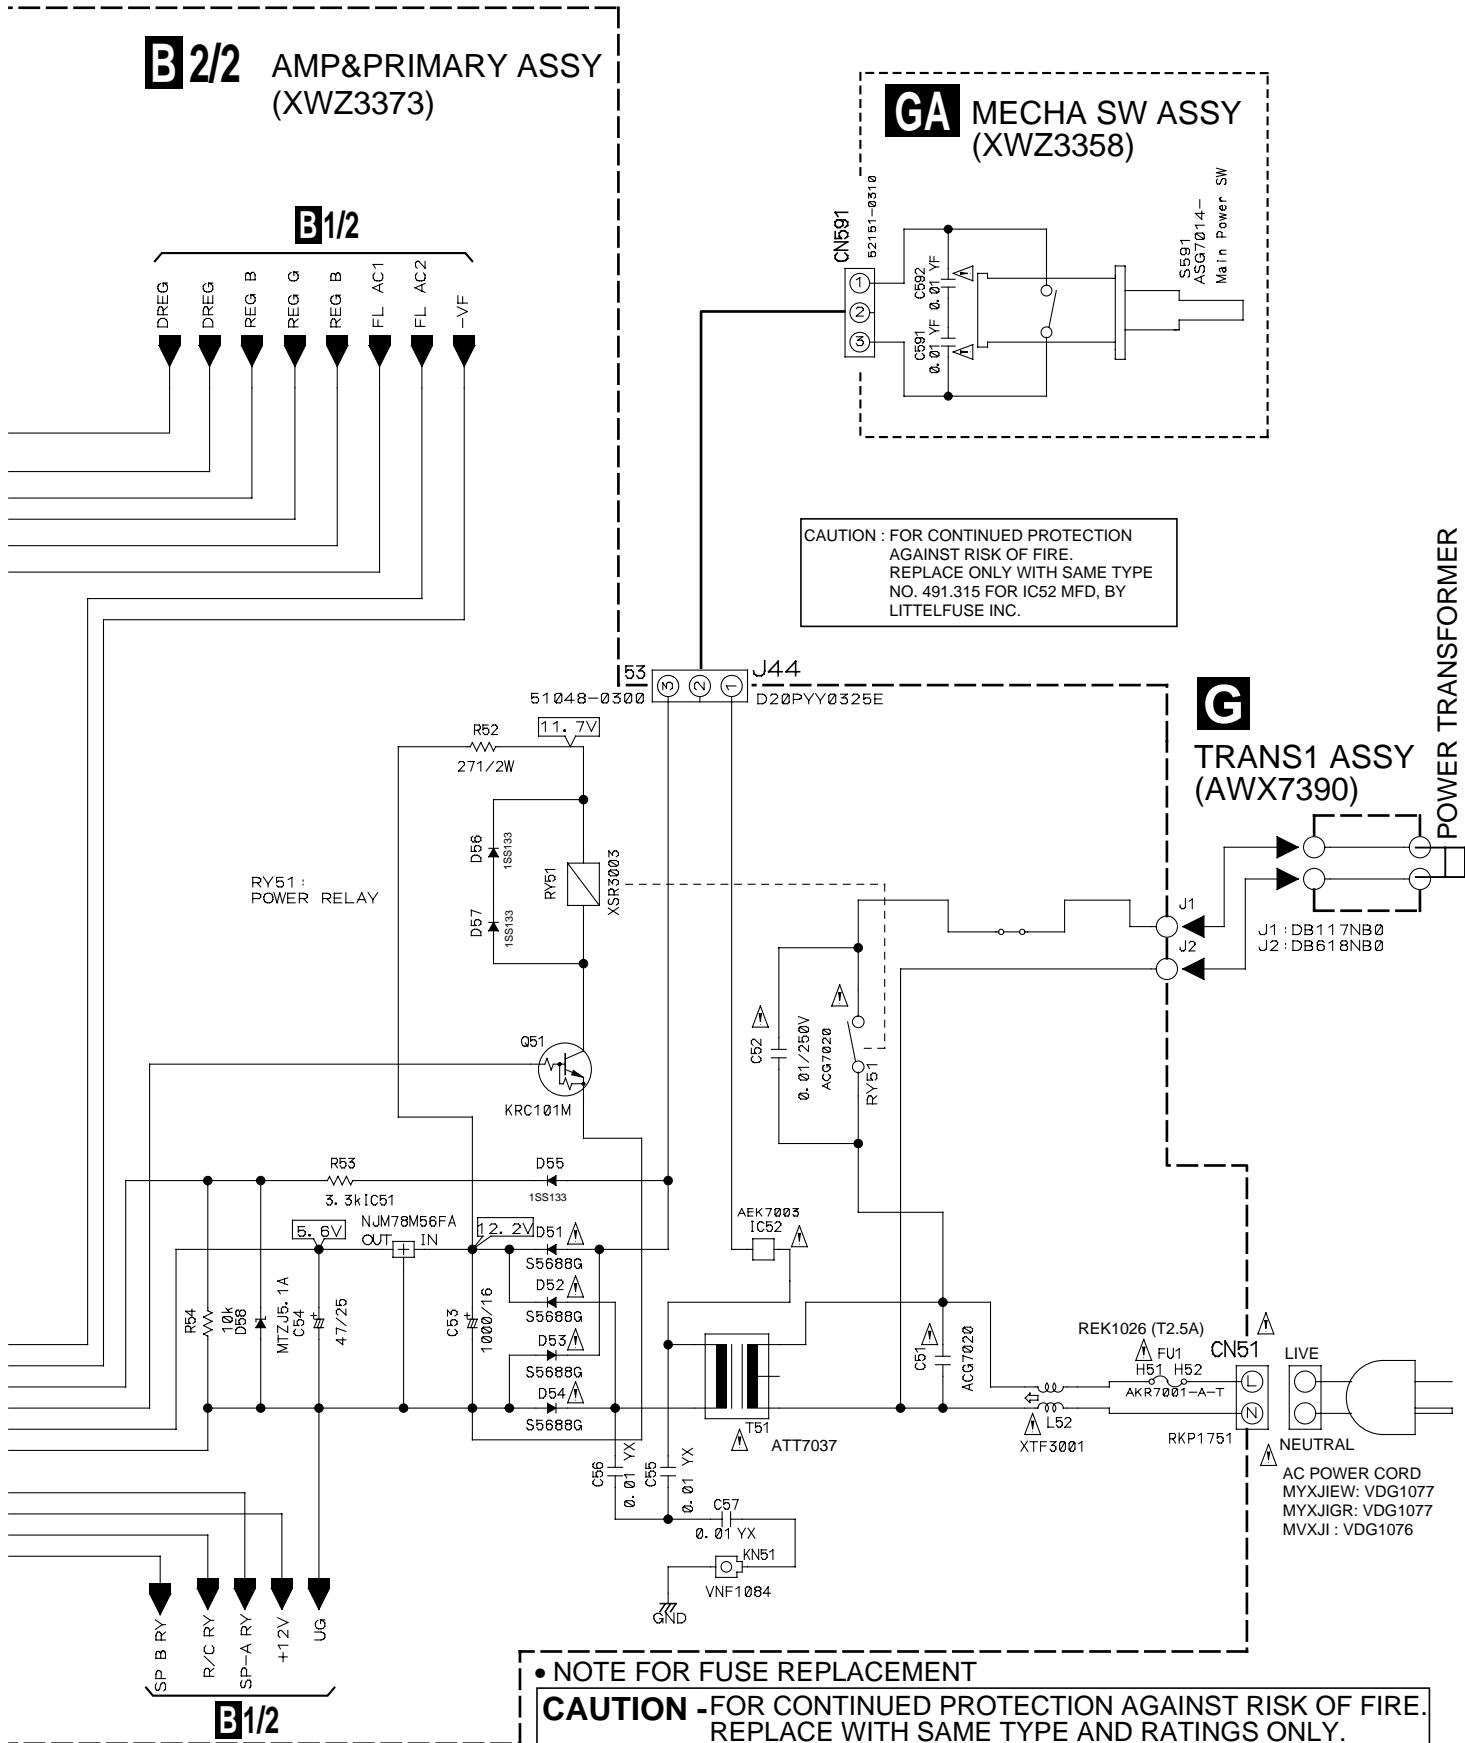


CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491.315 FOR IC52 MFD, BY LITTELFUSE INC.

NOTE FOR FUSE REPLACEMENT
CAUTION - FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE WITH SAME TYPE AND RATINGS ONLY.

3.8 VIDEO&6CH IN, H. P. and DIGITAL IN ASSYS

H VIDEO&6CH IN ASSY (XWZ3333)

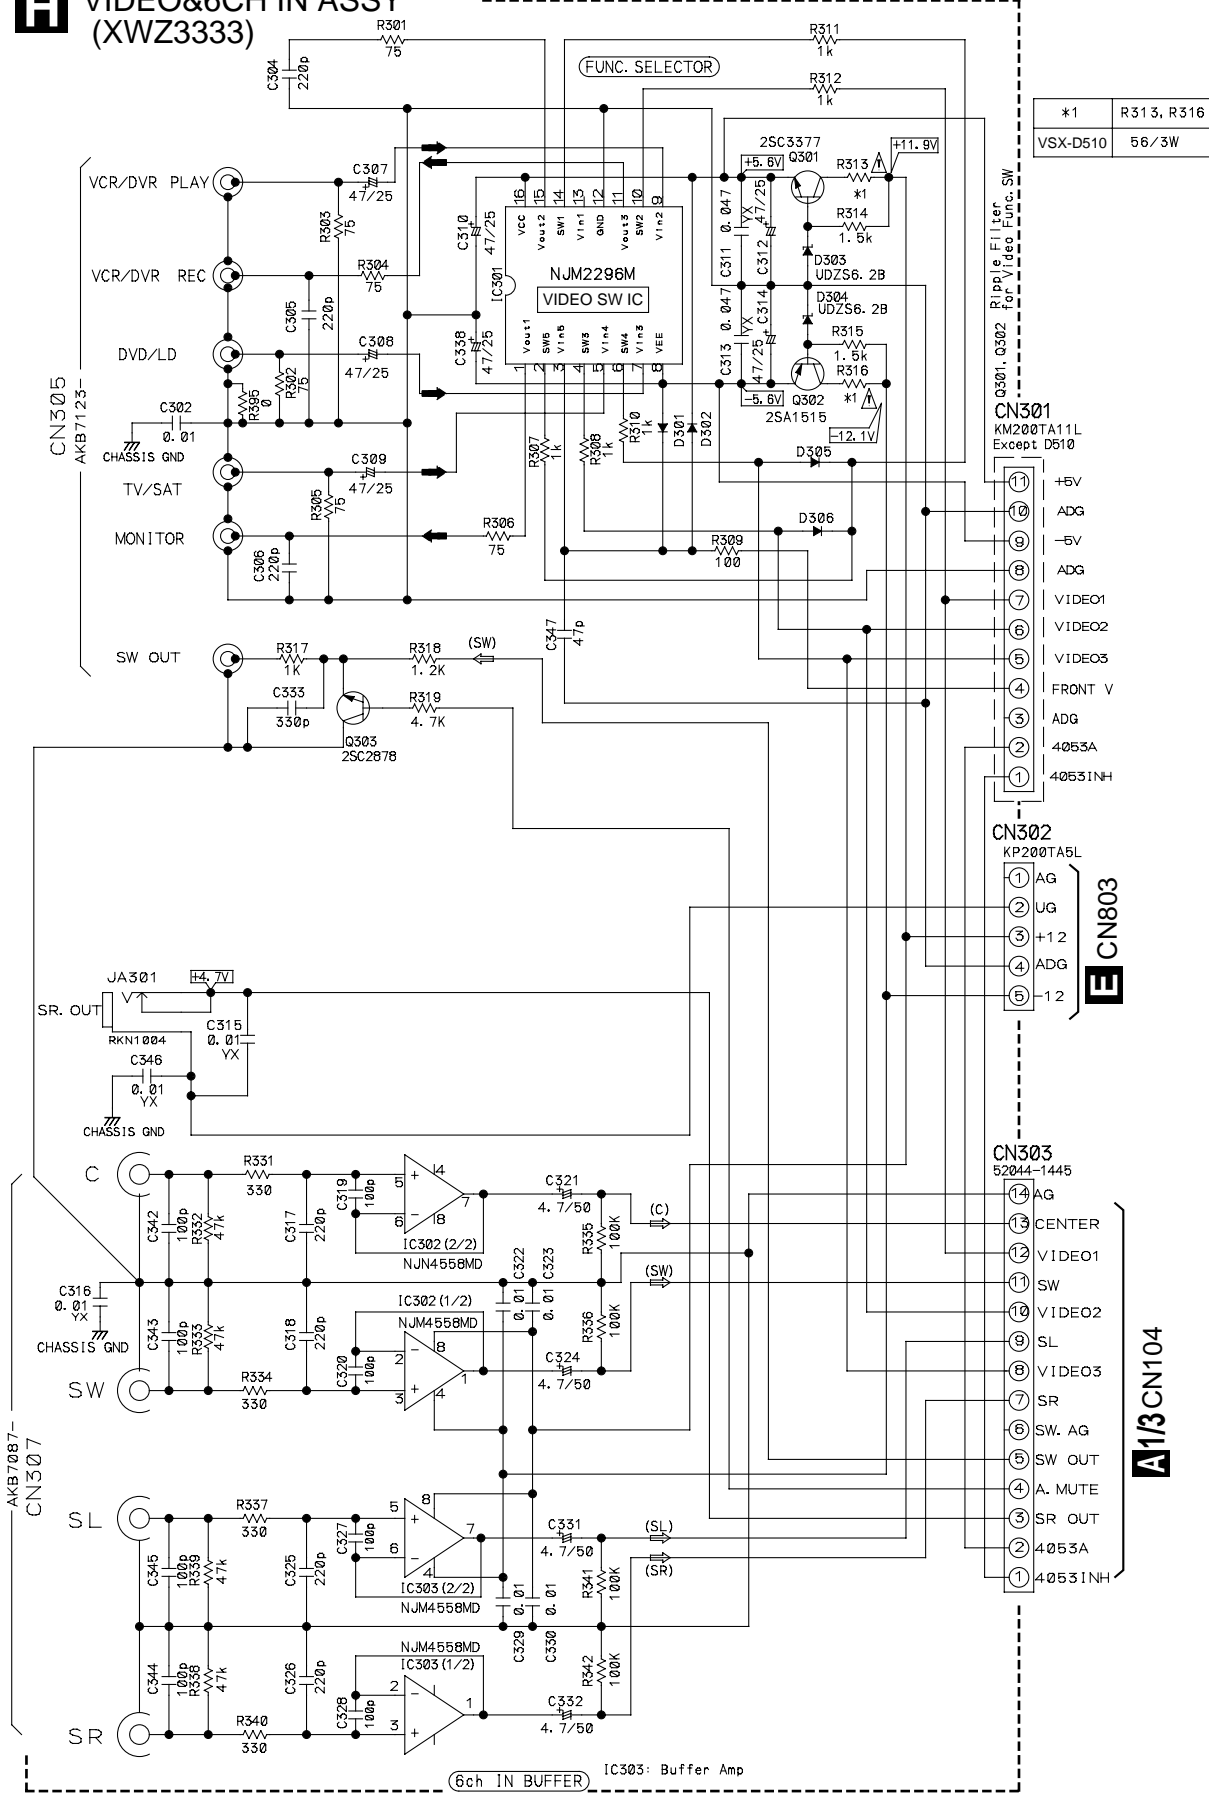

*1	R313, R316
VSX-D510	56/3W

A

B

C

D



NJM2296M control port status


SW1	SW2	SW3	SW4	SW5	Vout1	Vout2	Vout3
1	0	(1)	0	1	Vin2	Vin2	mute
1	1	(1)	0	1	Vin3	Vin3	Vin3
1	1	0	1	1	Vin4	Vin4	Vin4
1	1	1	1	1	Vin5	Vin5	Vin5
0	0	(0)	(0)	0	mute	mute	mute

VIN 2. VCR/DVR Vout1. MONITOR out
 VIN 3. DVD/LD Vout2. MR out
 VIN 4. TV/SAT Vout3. VCR/DVR out
 VIN 5. FRONT VIDEO

NOTE

- RESISTORS
 Unit: k-Ω, M-Ω or Ω unless otherwise noted.
 Rated power: 1/10W unless otherwise noted.
 Tolerance: (J)±5% unless otherwise noted.
- CAPACITORS
 Unit: p-F or μF unless otherwise noted.
 Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
 Rated Voltage: 50V except for electrolytic capacitors.
- DIODES
 Indicated in 1SS355-TRB

Video Signal Flow
 Audio Signal Flow

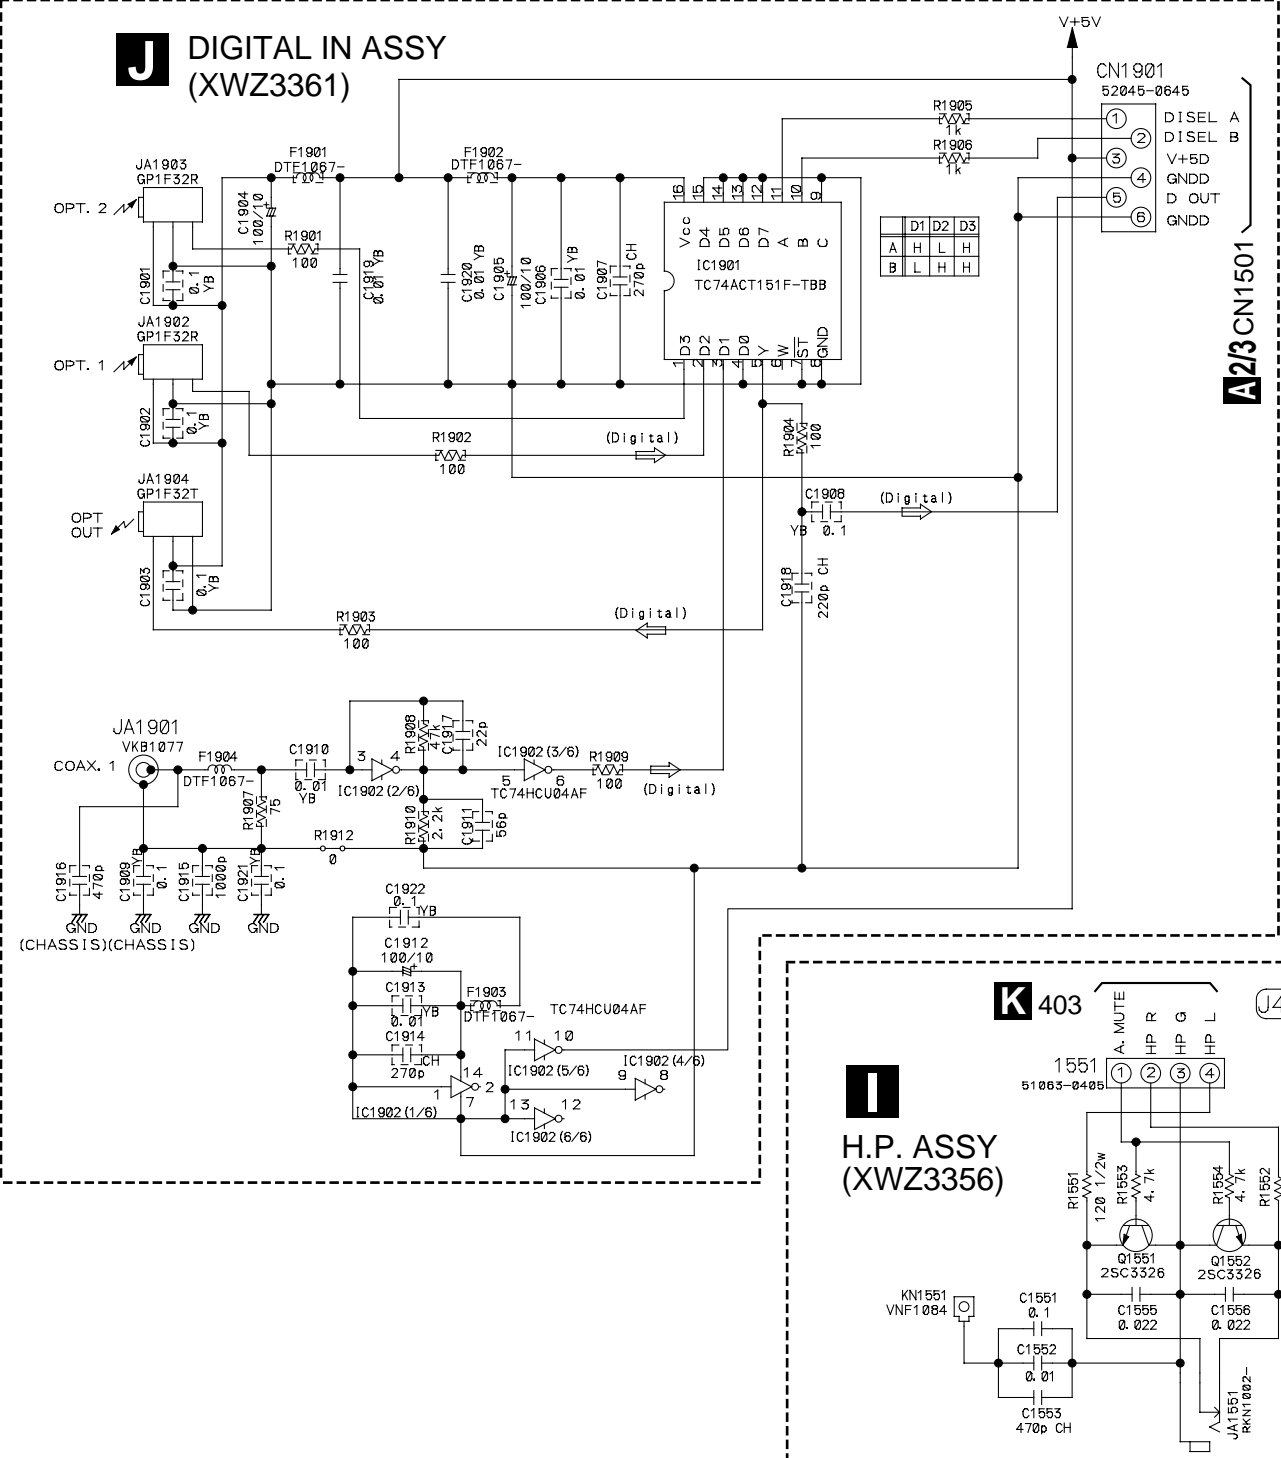

VSX-D510

3.9 FRONT, R. ENCODER and POWER SW ASSYS

L R. ENCODER ASSY (XWX3353)

K FRONT ASSY (XWZ3337)

V401
XAV3010

A


B

C

D

A1/3 CN103

A1/3 CN102

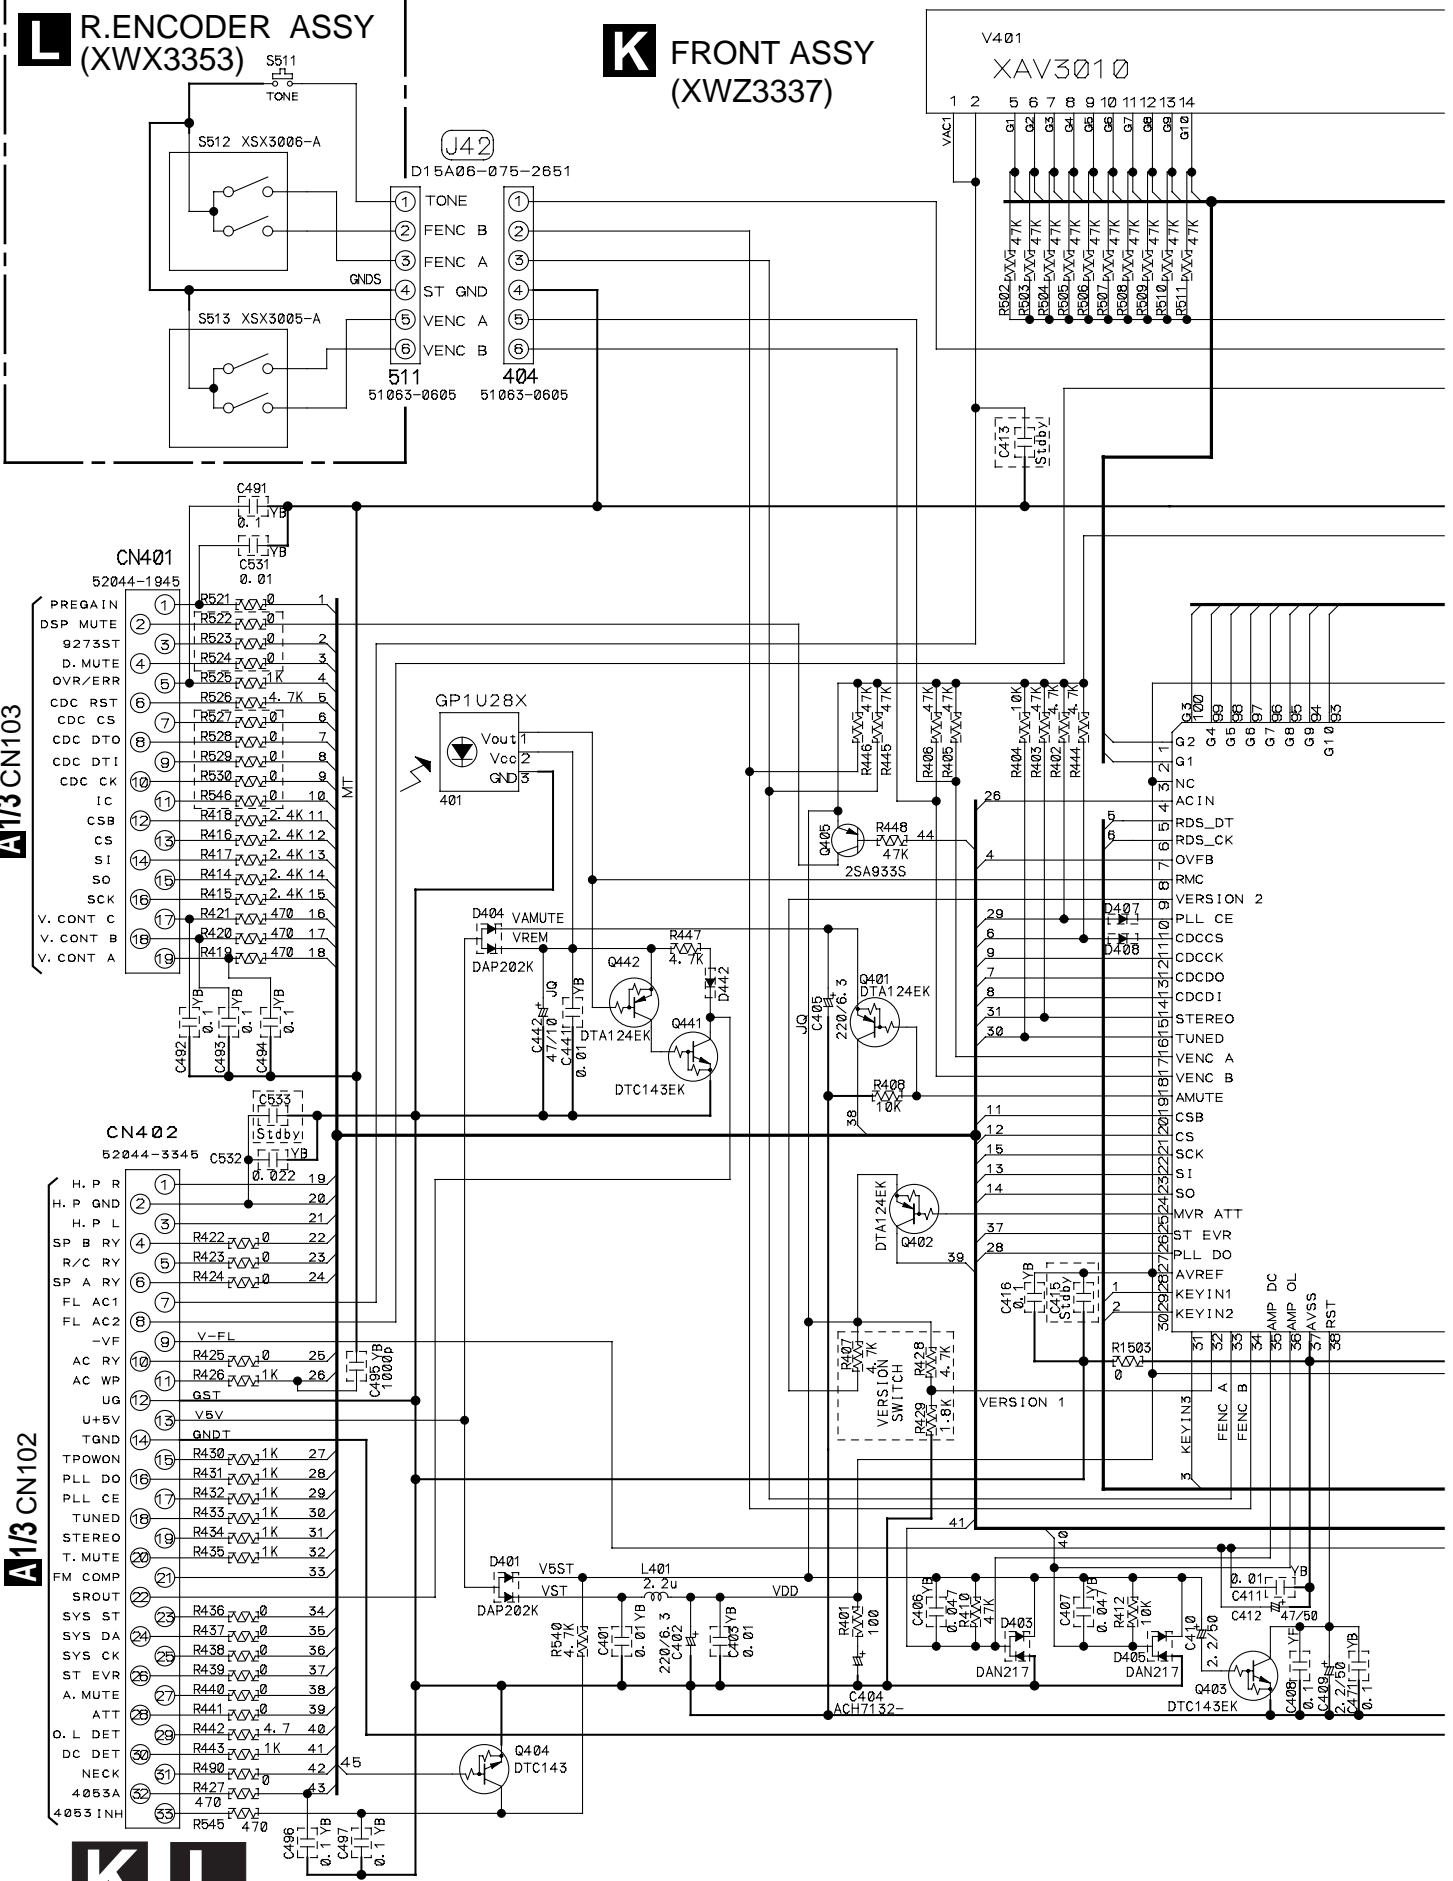


4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator



3. The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

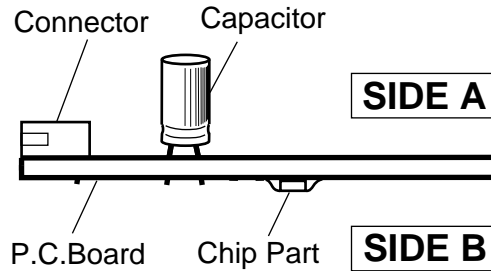

4.1 DIGITAL IN ASSY


J DIGITAL IN ASSY

J DIGITAL IN ASSY

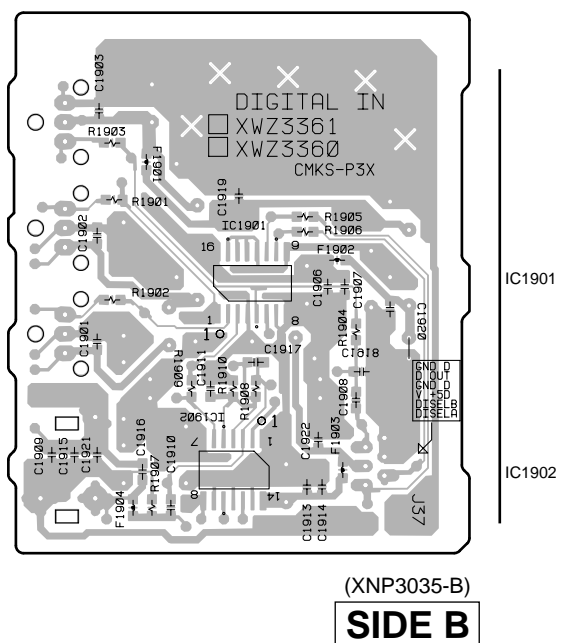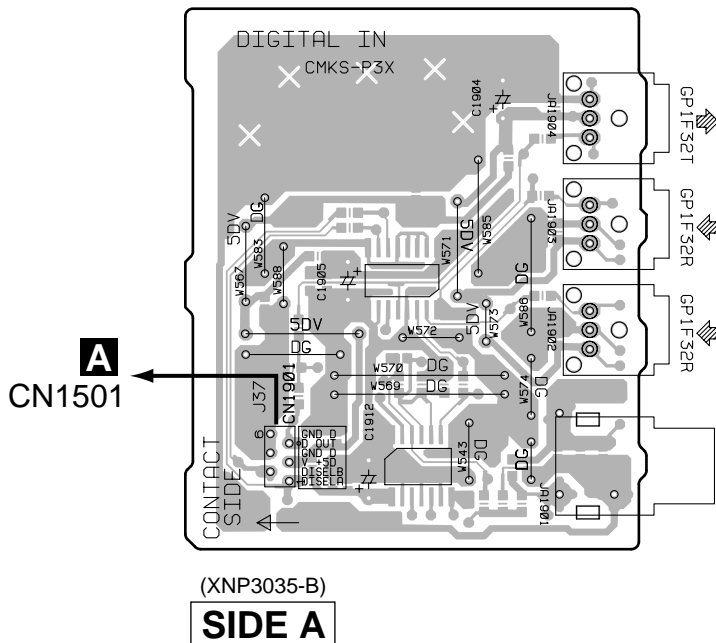


4.2 TRANS2, TRANS3, REGULATOR and TRANS1 ASSYS

REGULATOR ASSY

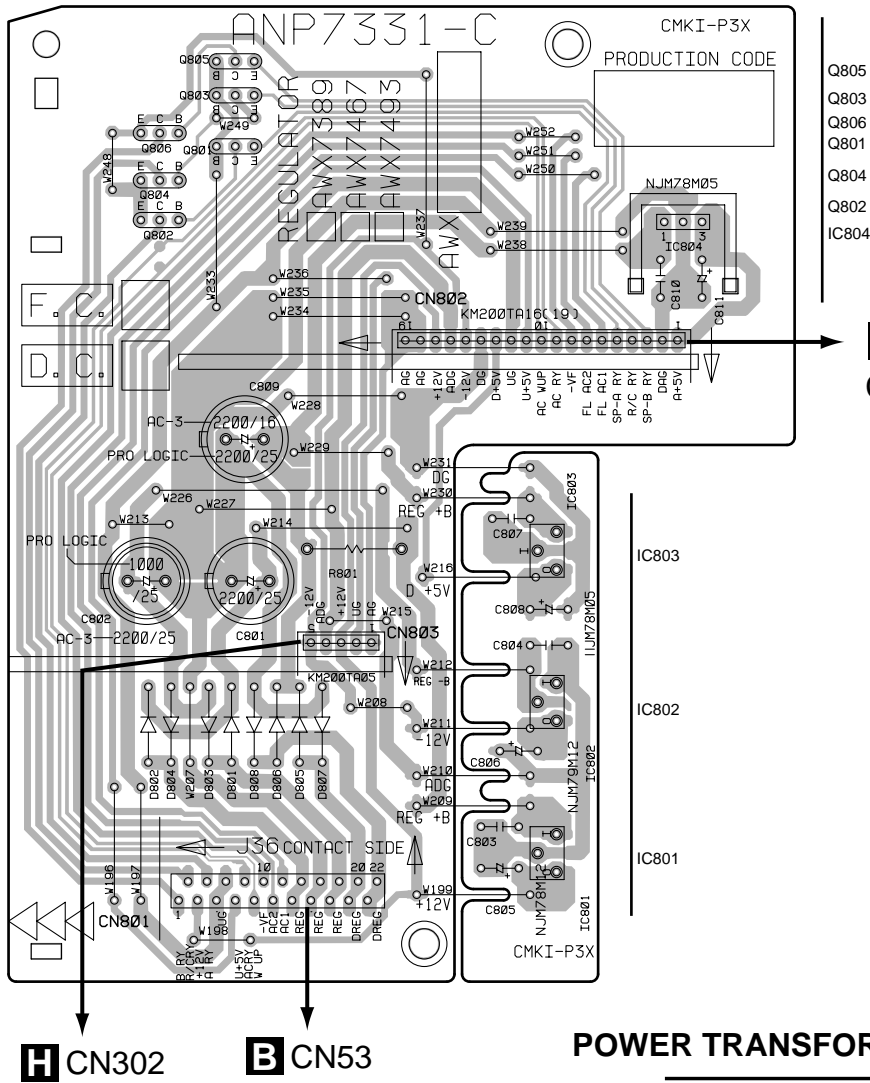


TRANS3 ASSY

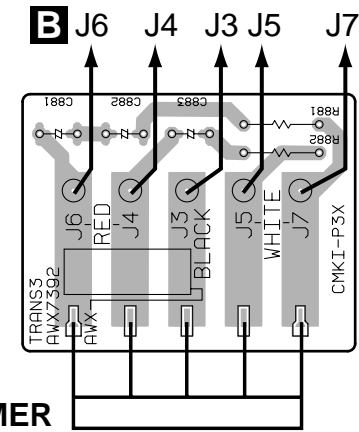


TRANS1 ASSY

(ANP7331-C)
SIDE A

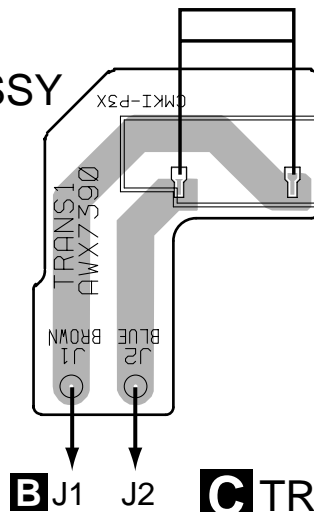


TRANS2 ASSY

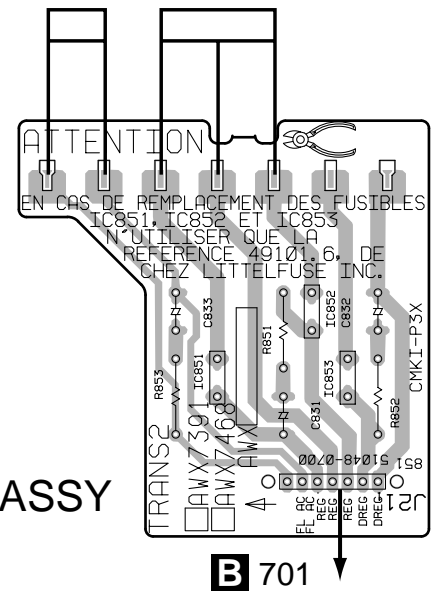


4.3 D.D & INPUT ASSY

A D.D & INPUT ASSY

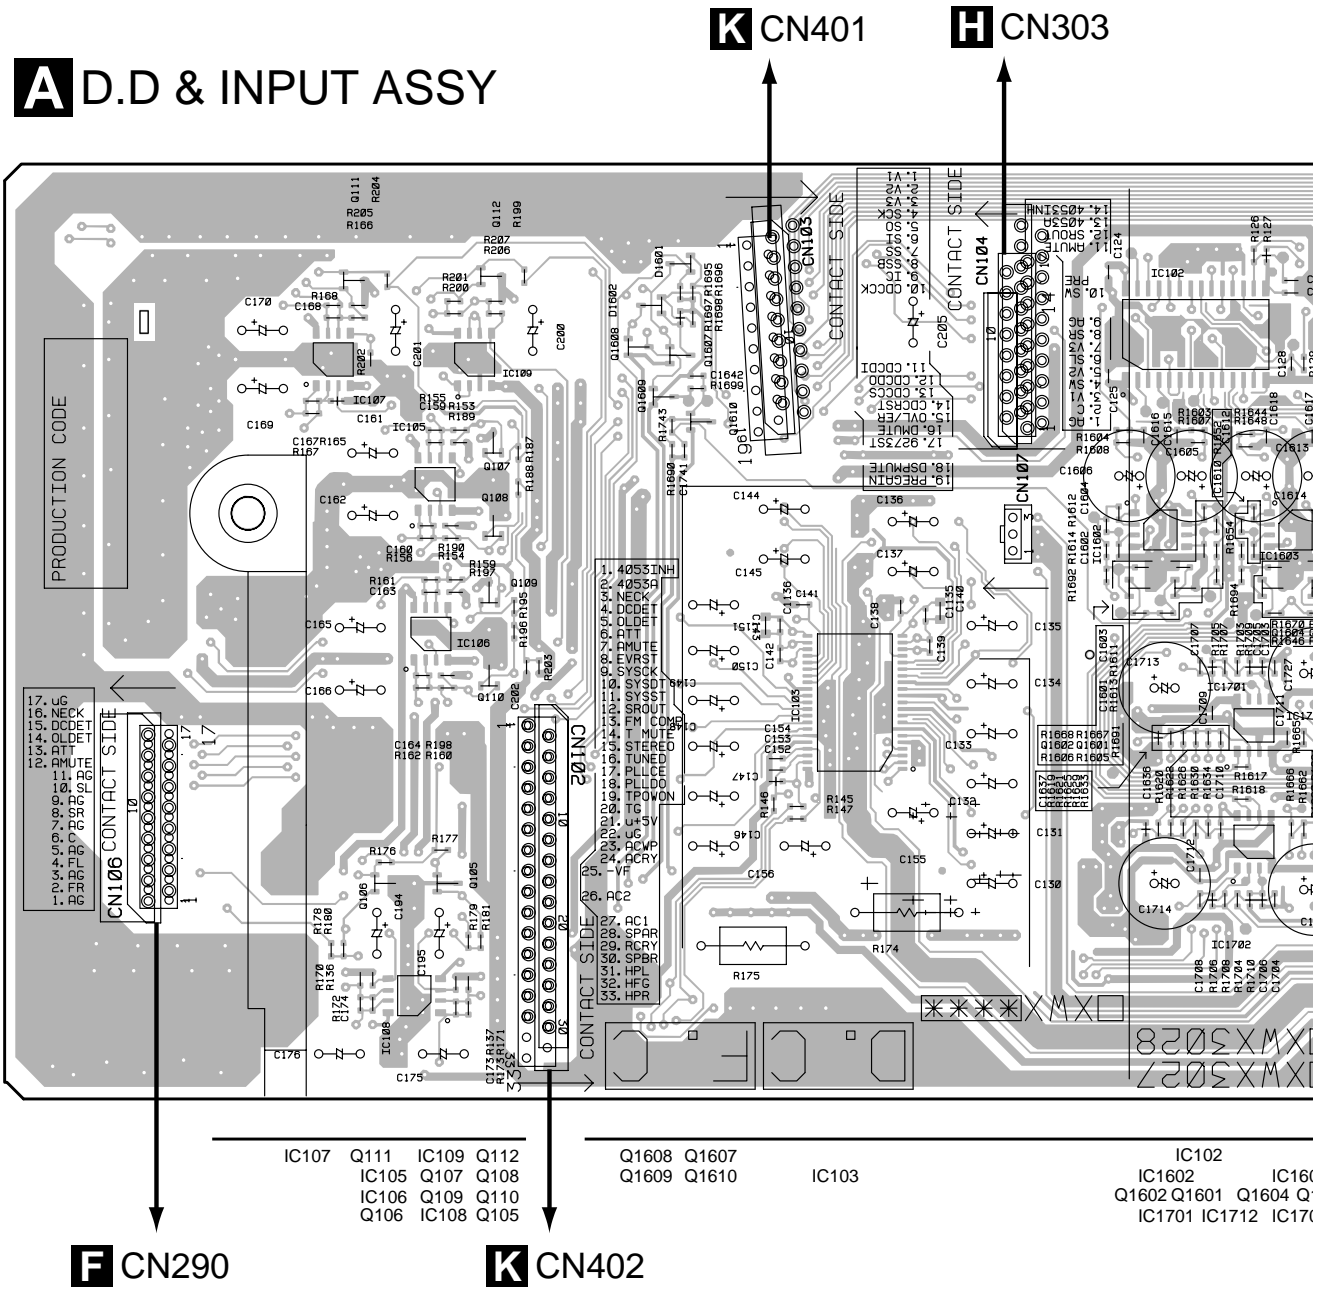

FM/AM TUNER UNIT **J** CN1901

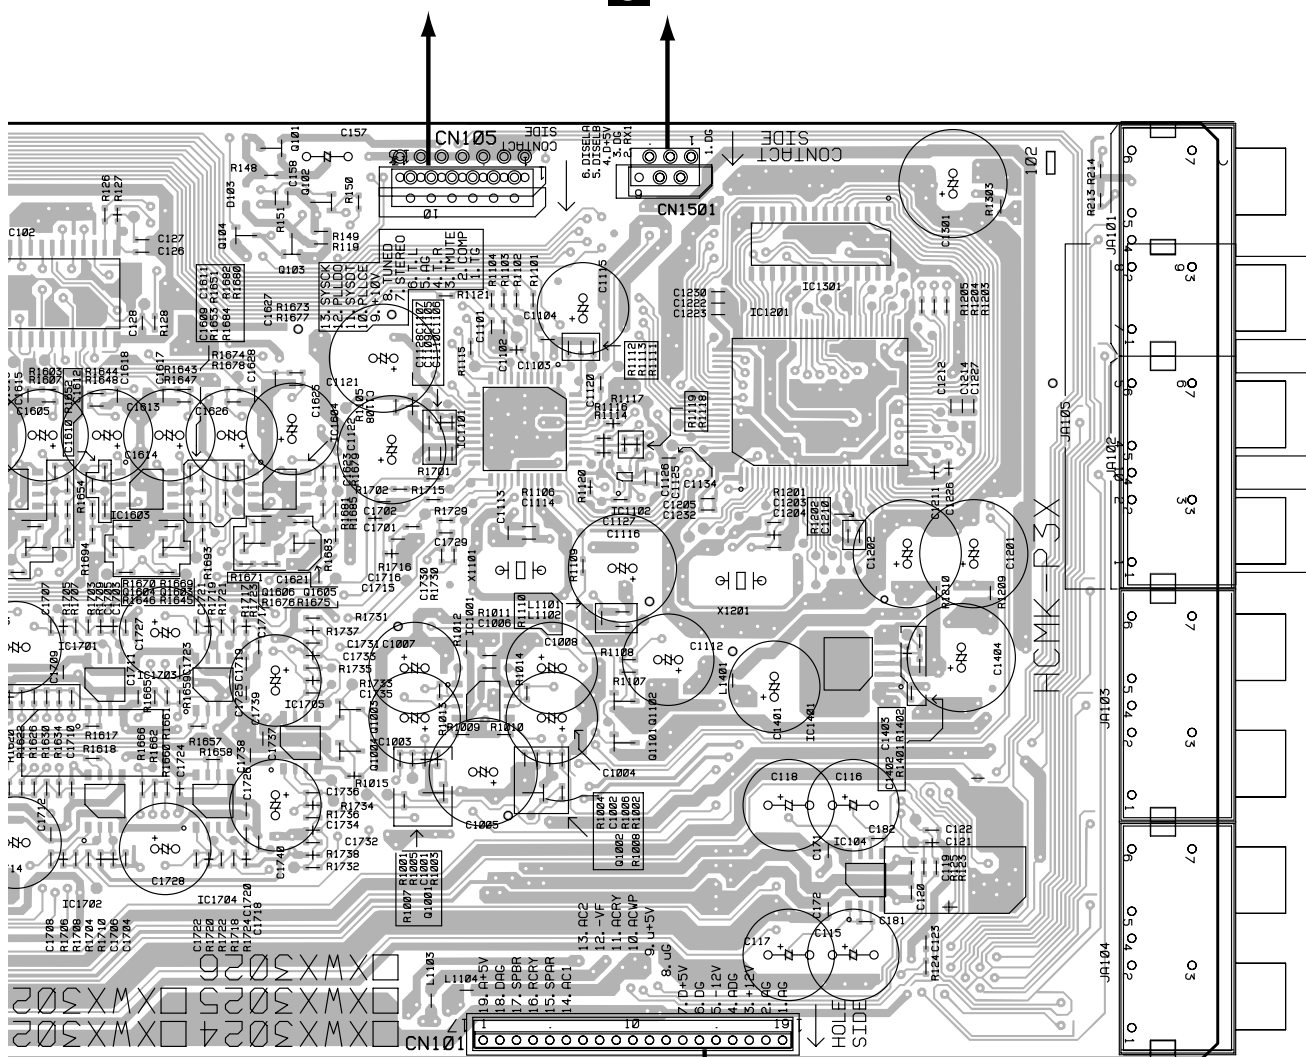


- IC102 1602
- 2Q1601
- 1701
- IC1712
- IC1603
- Q1604
- Q1606
- IC1703
- IC1704
- IC1705
- IC1704
- IC1705
- Q1003
- Q1004
- Q1001
- Q1002
- IC1101
- IC1001
- Q1101
- Q1102

- IC1301
- IC1201
- IC1401
- IC104

(XNP3037-A)
SIDE A


E CN802

A D.D & INPUT ASSY

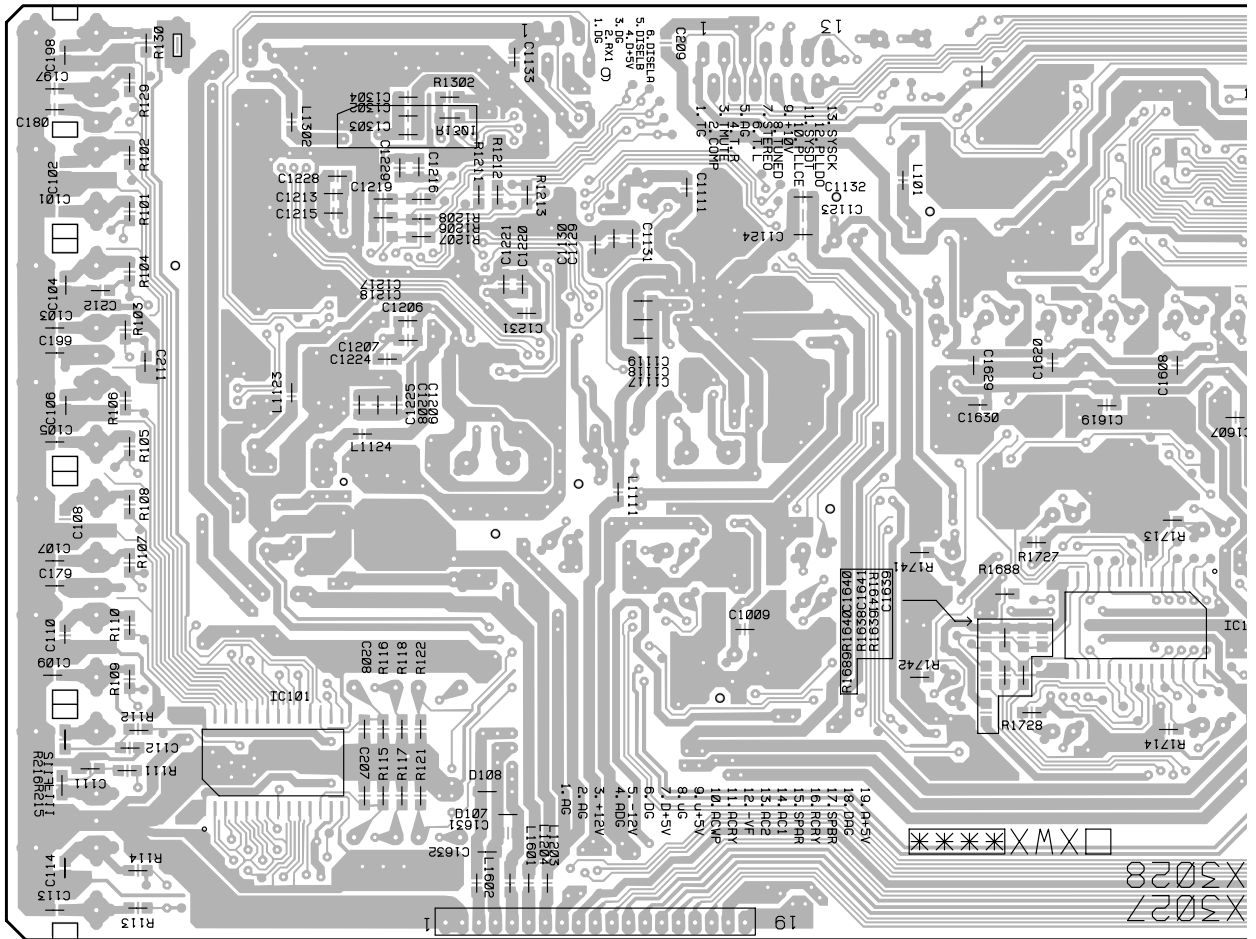

IC101

IC1601

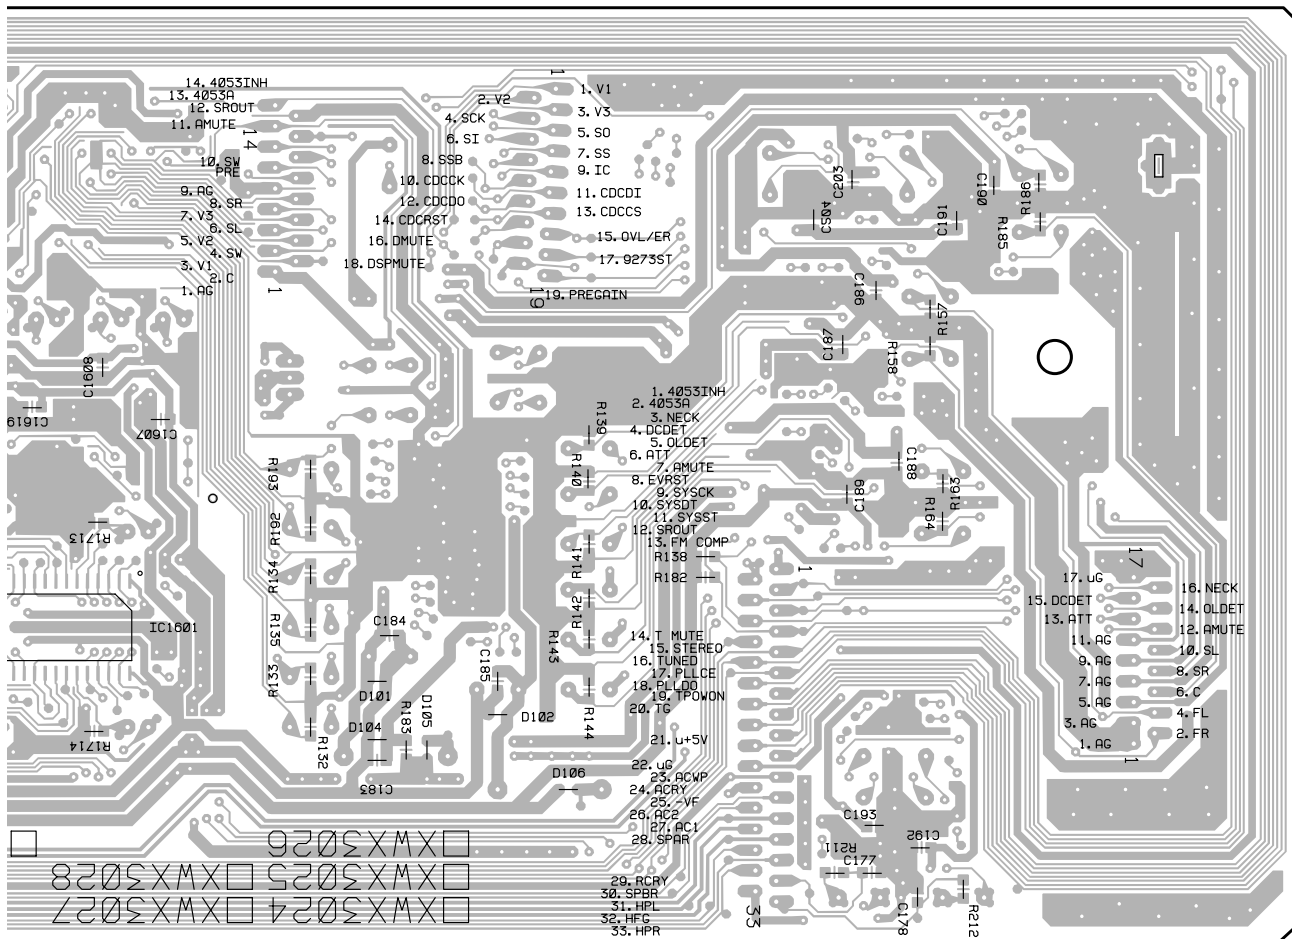


IC1601

(XNP3037-A)

SIDE B


4.4 AMP INPUT, AMP&PRIMARY and MECHA SW ASSYS

GA MECHA SW ASSY

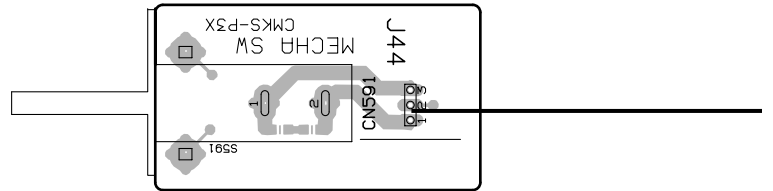

(XNP3035-B)


SIDE A

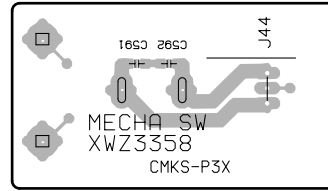

(XNP3035-B)

SIDE B


F AMP INPUT ASSY

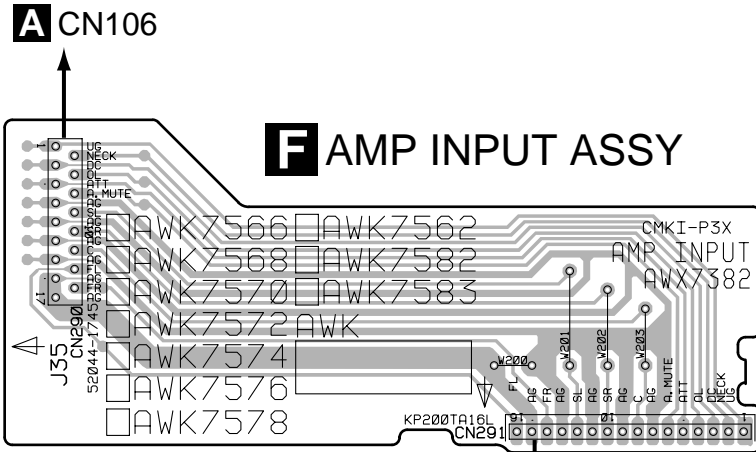

(ANP7331-C)

SIDE A

B AMP&PRIMARY ASSY

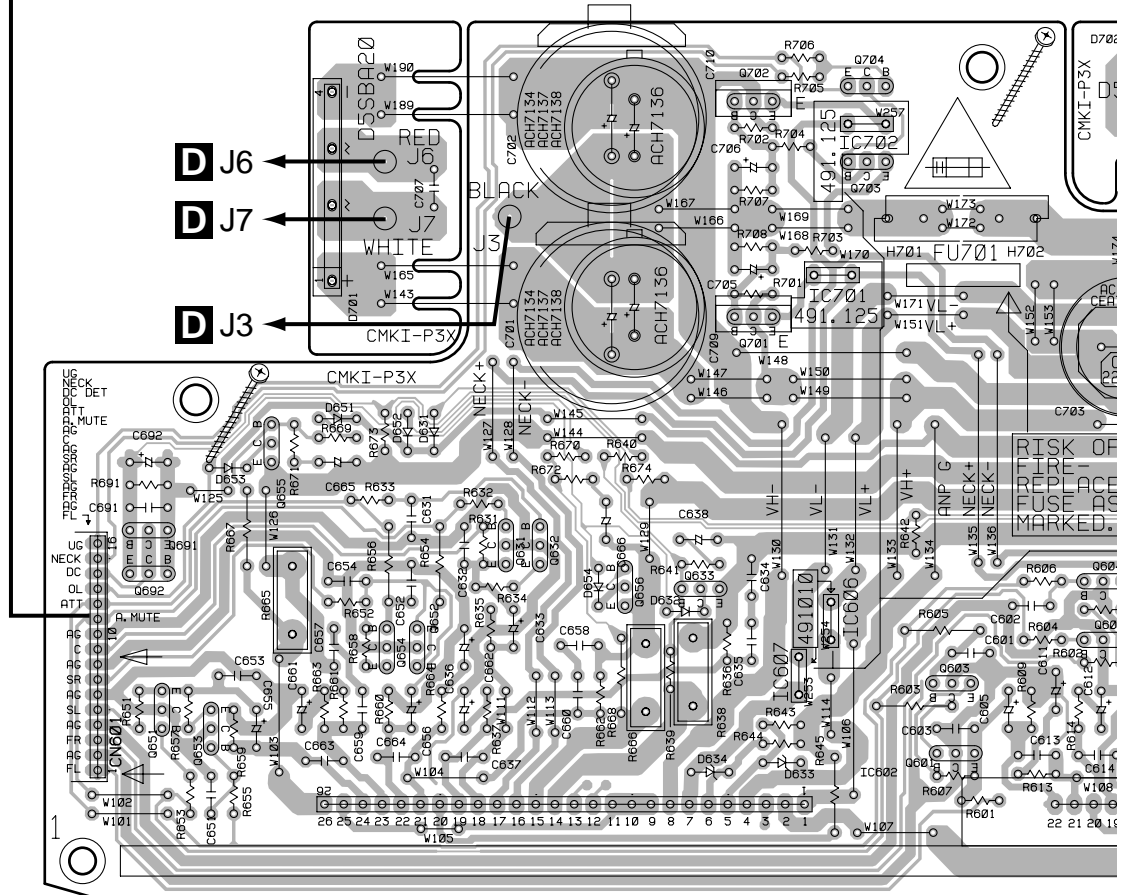


- D** J6
- D** J7
- D** J3

- Q704
- Q702
- Q703
- Q701
- Q655
- Q691
- Q631
- Q632
- Q633
- Q656
- Q604
- Q606
- Q605
- Q602
- Q603
- Q651
- Q653
- IC602
- IC601
- IC603

(ANP7331-C)

SIDE A

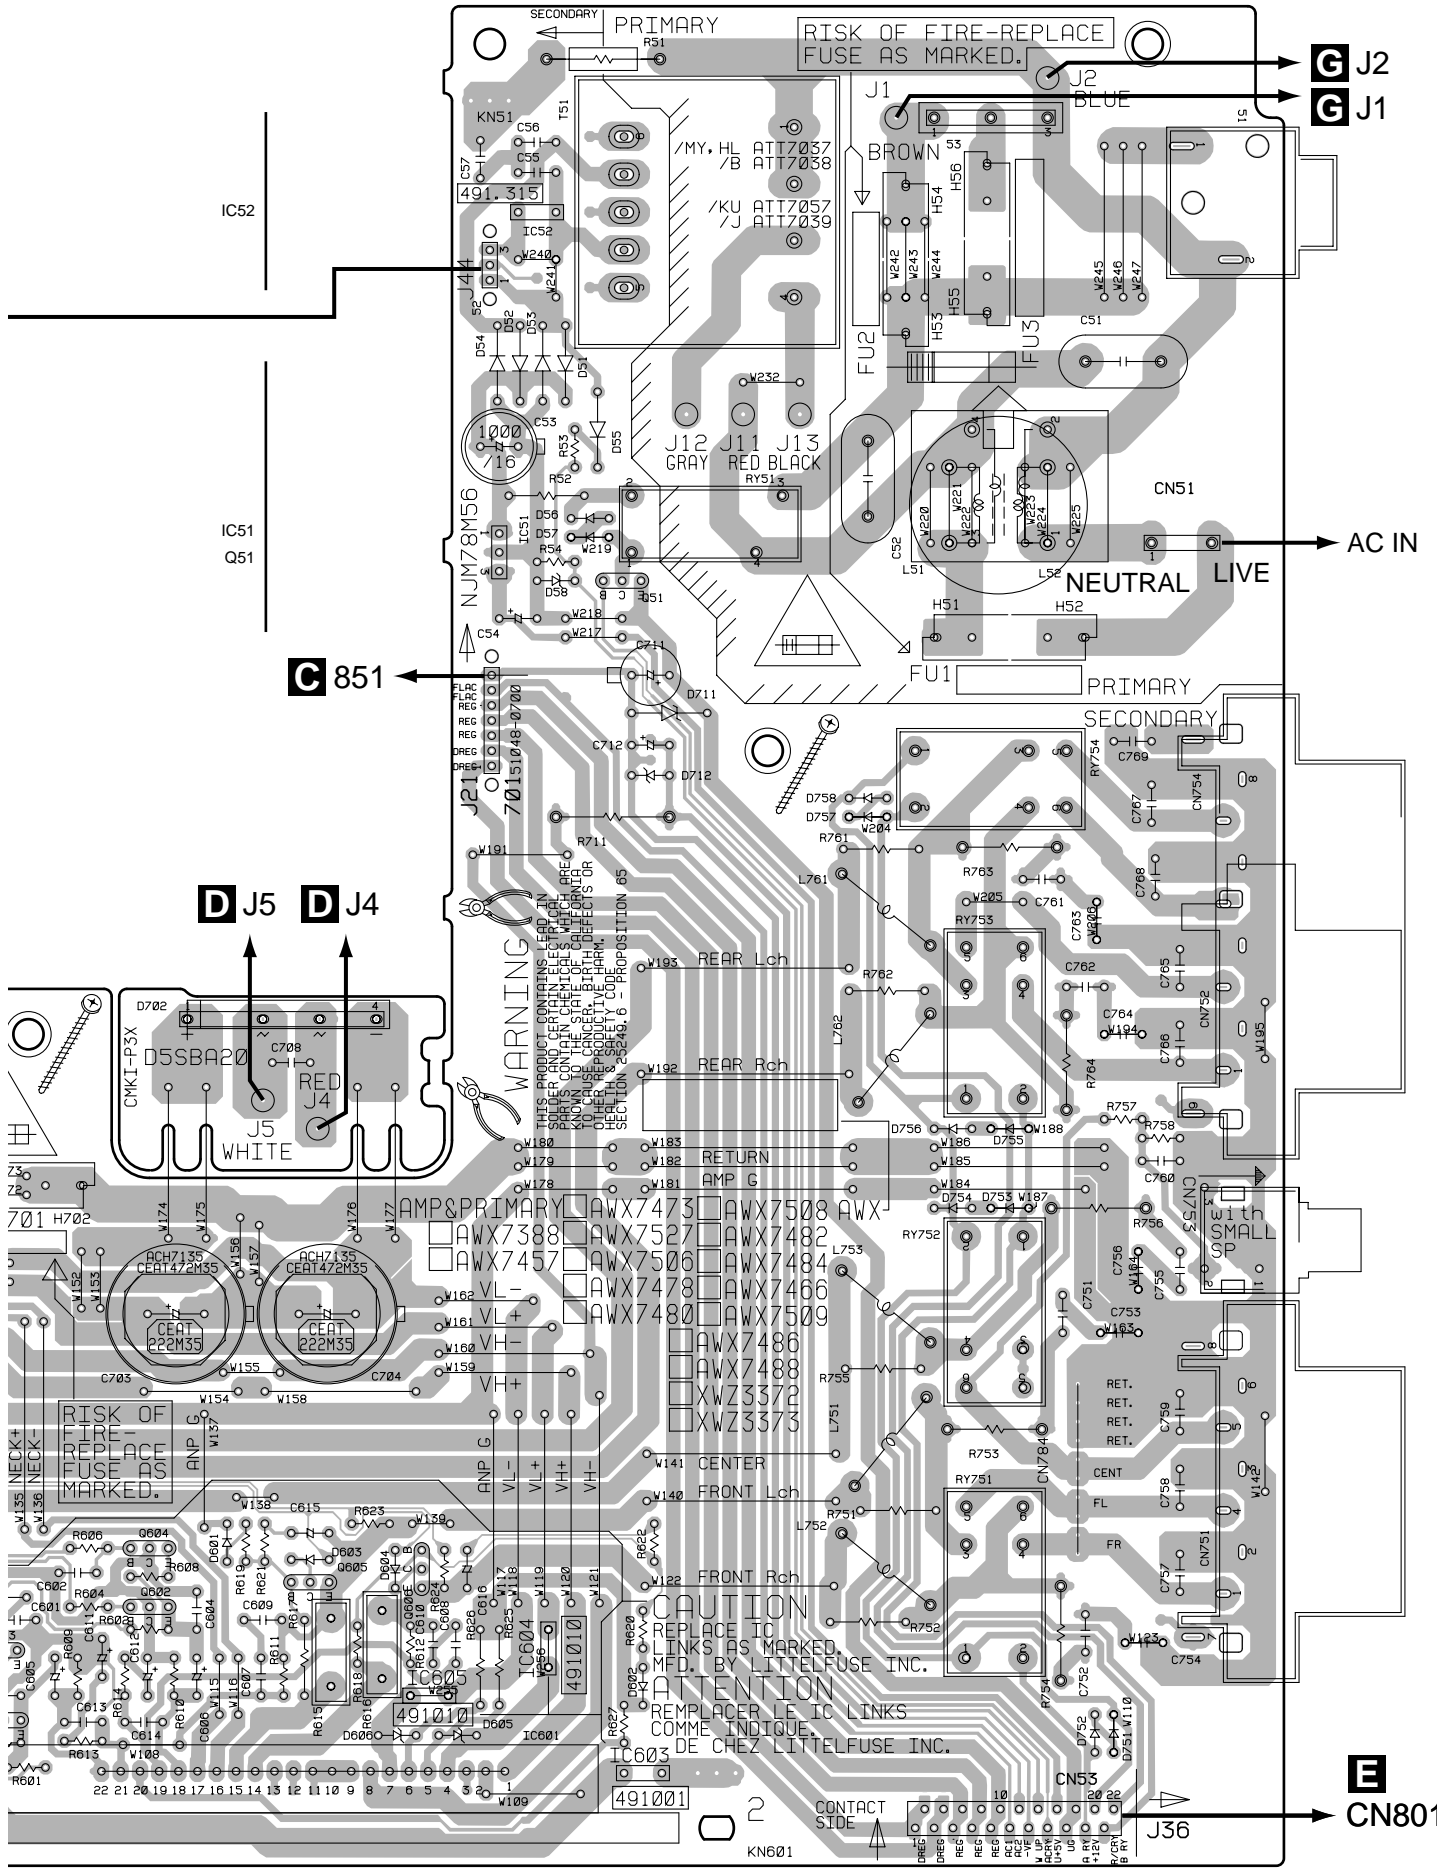

C 851

D J5 **D** J4


G J2
G J1

E CN801



B

4.5 H.P., FRONT, R.ENCODER and POWER SW ASSYS

K FRONT ASSY

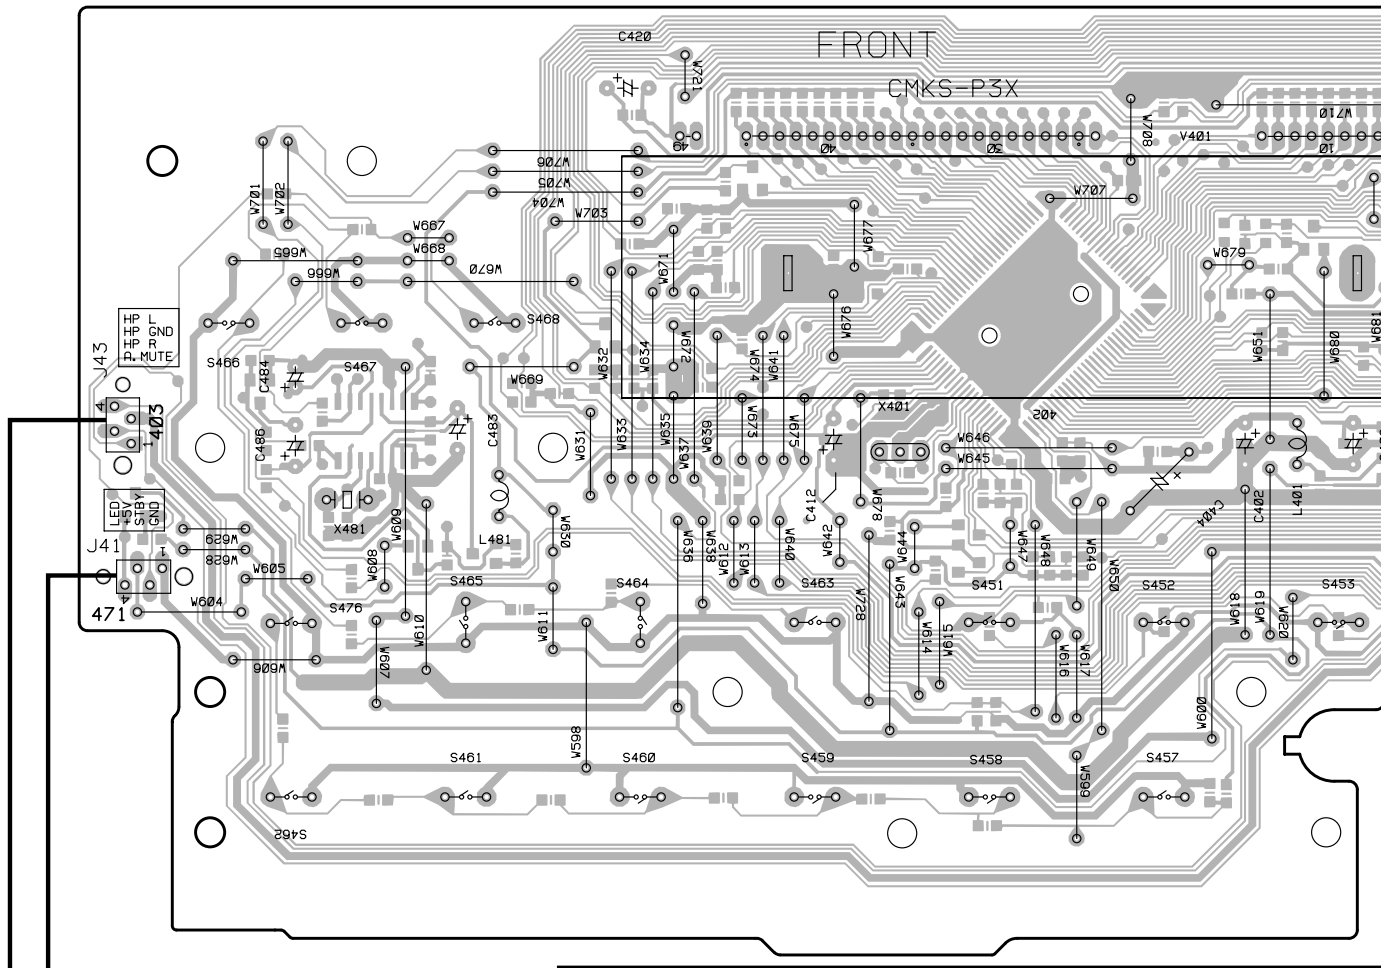


I H.P. ASSY

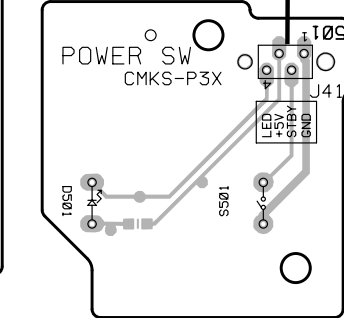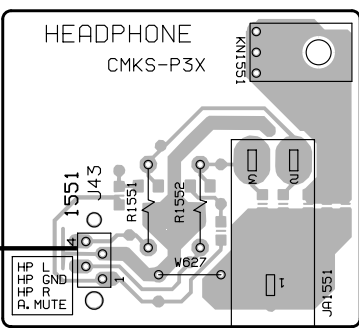

M POWER SW ASSY



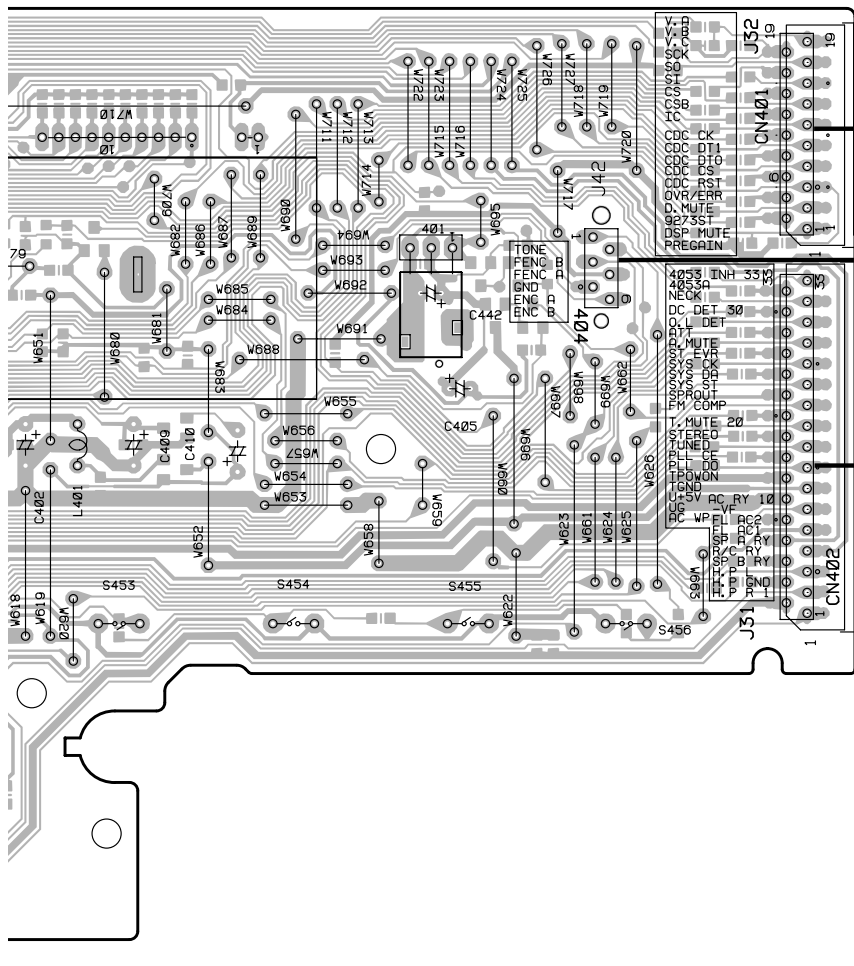


A CN103

A CN102

L R.ENCODER ASSY

(XNP3035-B)
SIDE A

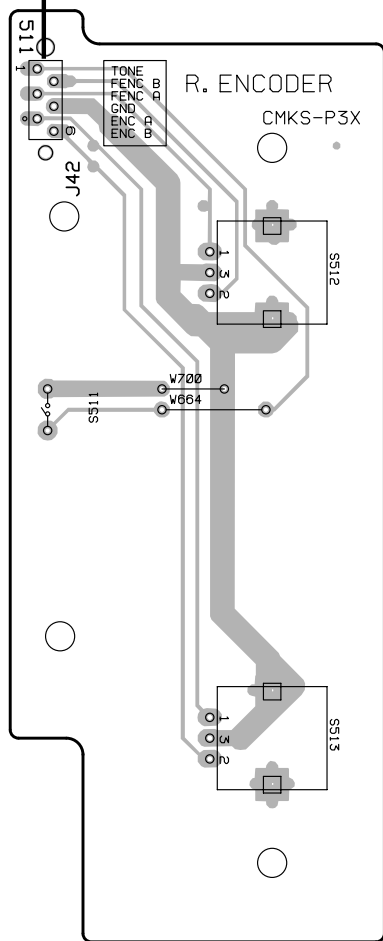



A

B

C

D

K FRONT ASSY

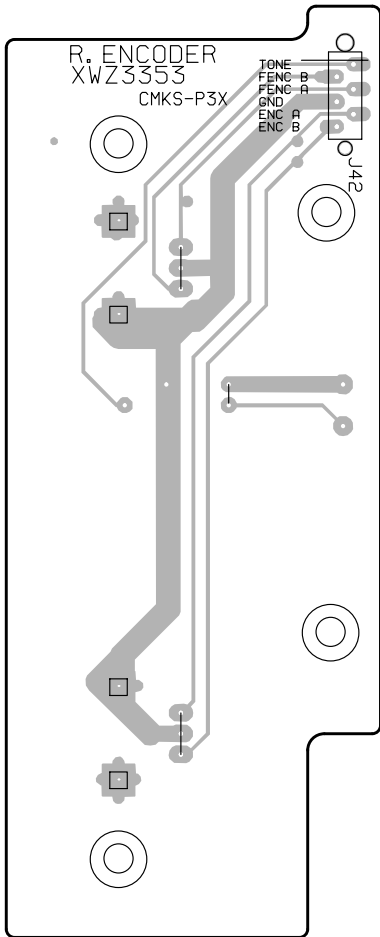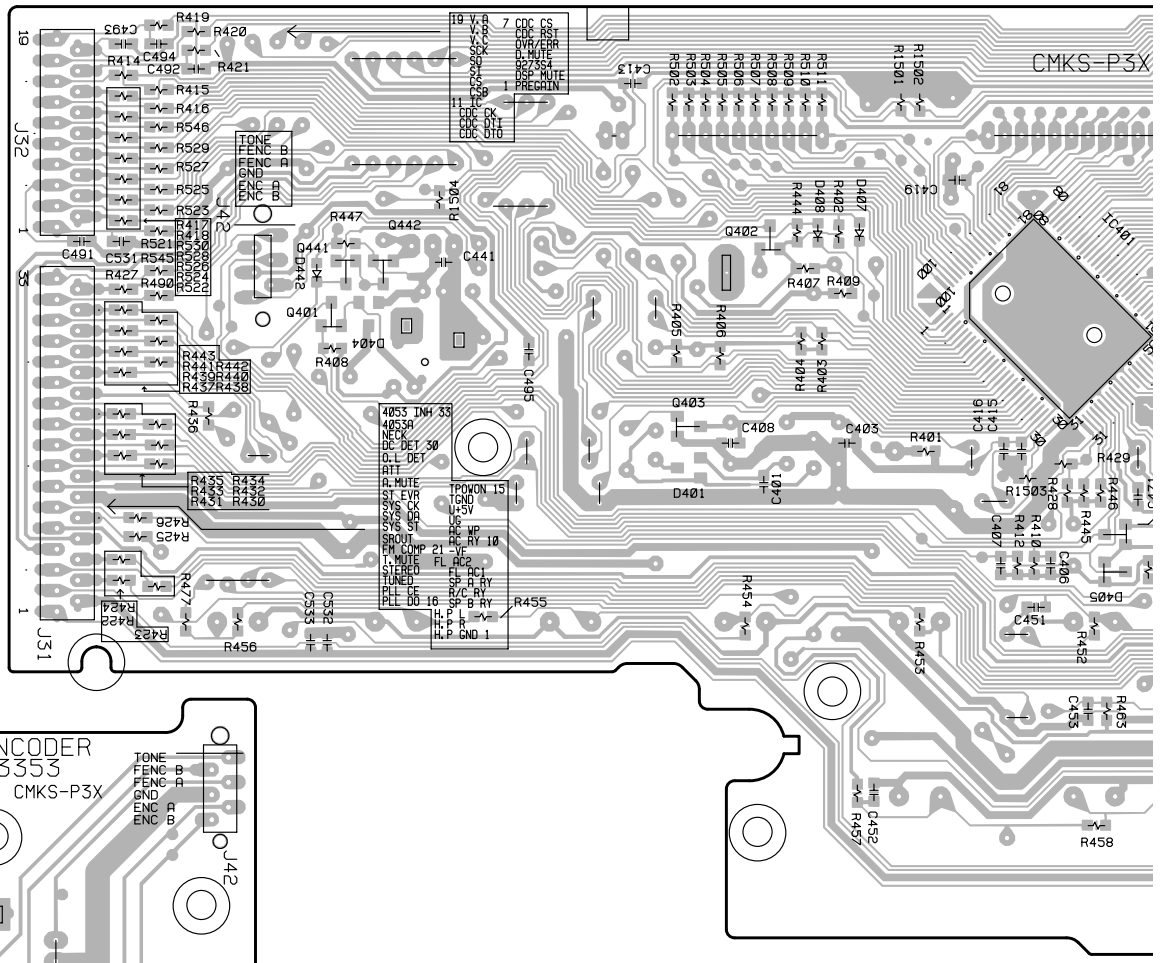

Q401 Q441 Q442 Q403 Q402 IC401

L R.ENCODER ASSY

(XNP3035-B)


SIDE B

A

B



C

D

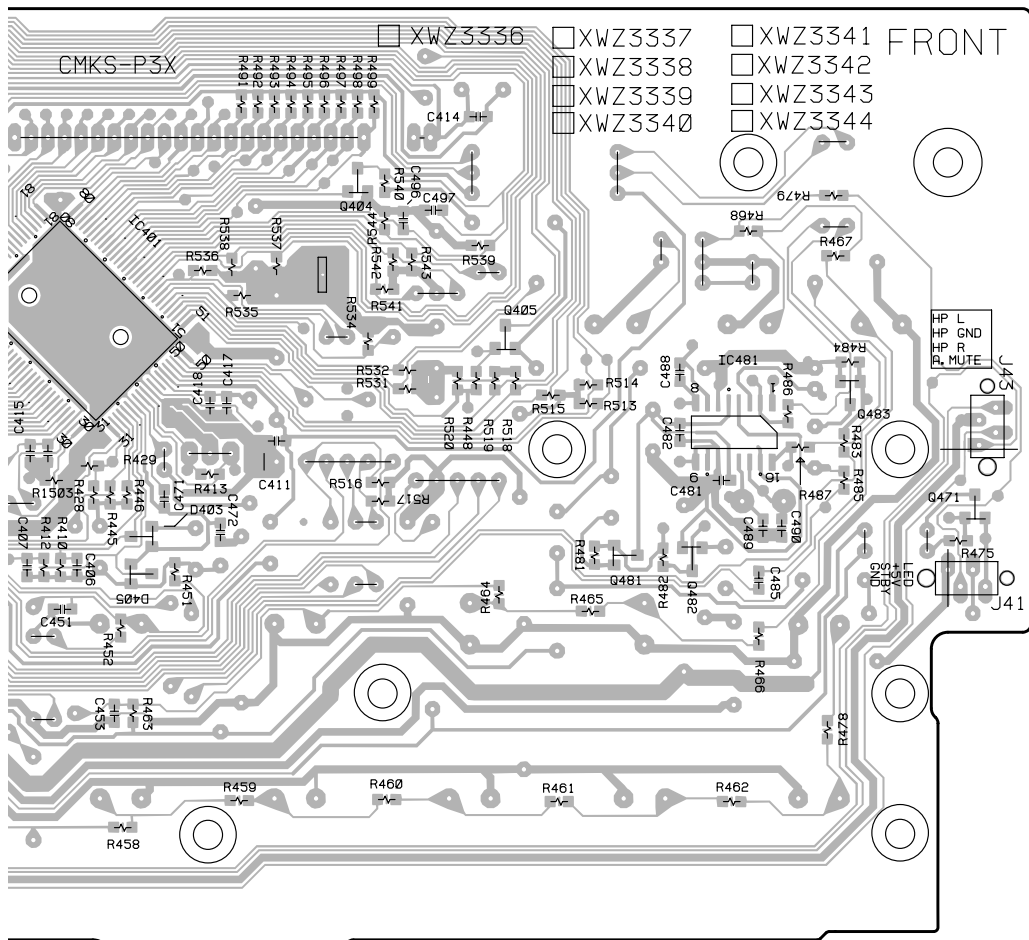

IC401 Q404 Q405 Q481 Q482 IC481 Q485 Q471

H.P. ASSY

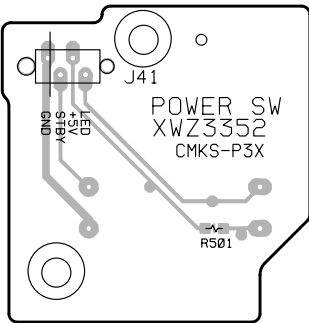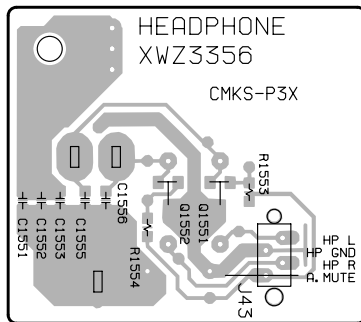


POWER SW ASSY



4.6 VIDEO&6CH IN ASSY

H VIDEO&6CH IN ASSY

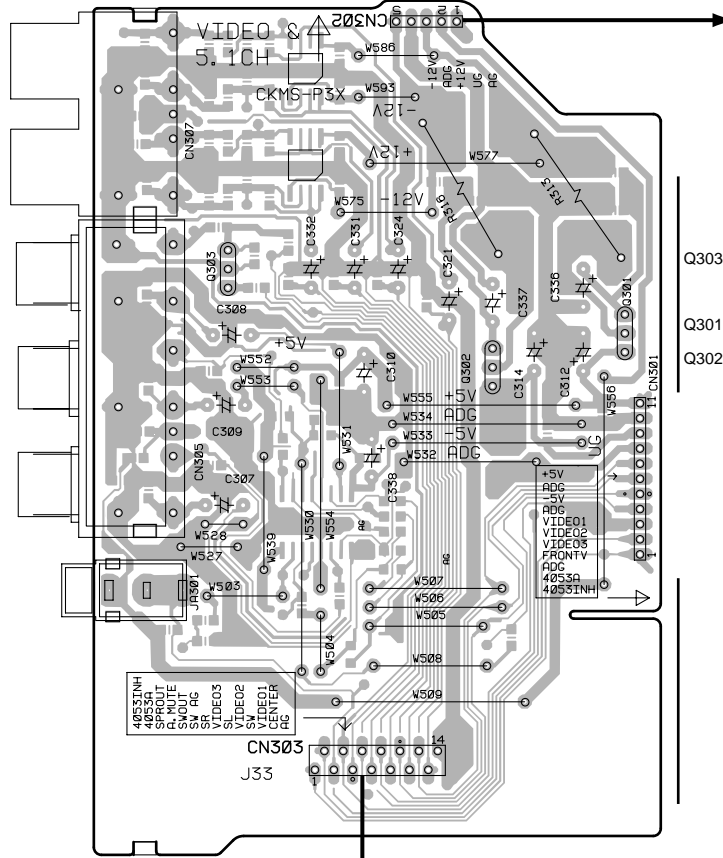


E CN803

(XNP3035-B)
SIDE A

Q303
Q301
Q302

A CN104

H VIDEO&6CH IN ASSY

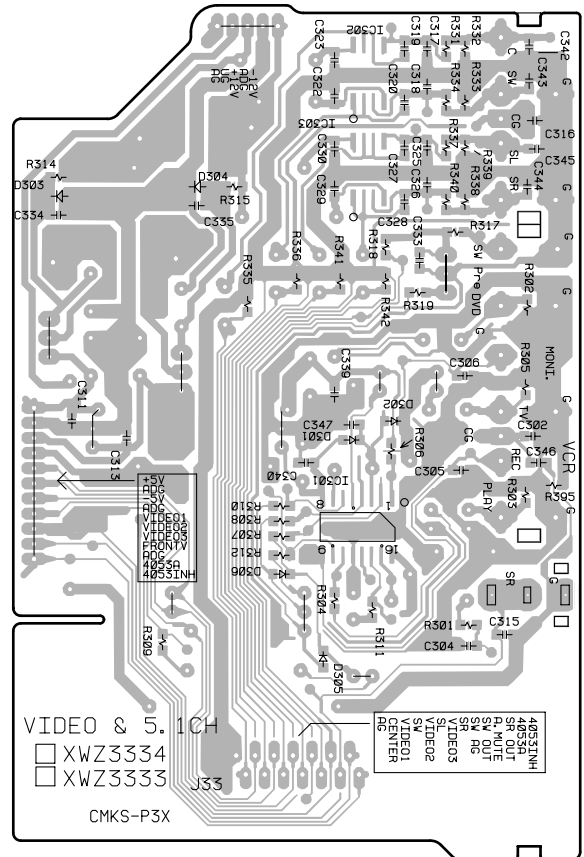

(XNP3035-B)
SIDE B

IC302
IC303
IC301



5. PCB PARTS LIST

- NOTES :**
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex. 1* When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by $J = 5\%$, and $K = 10\%$).
- 560 $\Omega \rightarrow 56 \times 10^1 \rightarrow 561$ RD1/4PU $\begin{matrix} 5 & 6 & 1 \\ \square & \square & \square \end{matrix} J$
- 47k $\Omega \rightarrow 47 \times 10^3 \rightarrow 473$ RD1/4PU $\begin{matrix} 4 & 7 & 3 \\ \square & \square & \square \end{matrix} J$
- 0.5 $\Omega \rightarrow R50$ RN2H $\begin{matrix} R & 5 & 0 \\ \square & \square & \square \end{matrix} K$
- 1 $\Omega \rightarrow 1R0$ RS1P $\begin{matrix} 1 & R & 0 \\ \square & \square & \square \end{matrix} K$
- Ex. 2* When there are 3 effective digits (such as in high precision metal film resistors).
- 5.62k $\Omega \rightarrow 562 \times 10^1 \rightarrow 5621$ RN1/4PC $\begin{matrix} 5 & 6 & 2 & 1 \\ \square & \square & \square & \square \end{matrix} F$

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
LIST OF PCB ASSEMBLIES							
NSP		COMPLEX ASSY	XWK3002	Q 1003		CHIP DIGITAL TRANS.	DTA124EK
		— POWER SW ASSY	XWZ3352	Q 1004		DIGITAL TRANSISTOR	DTC124EK
		— R.ENCODER ASSY	XWZ3353	Q 101		CHIP TRANSISTOR	2SC2412K
		— VIDEO&6CH IN ASSY	XWZ3333	Q 102		CHIP TRANSISTOR	2SC2412K
		— DIGITAL IN ASSY	XWZ3361	Q 105		CHIP MUTING TR	2SC3326
		— FRONT ASSY	XWZ3337	Q 106		CHIP MUTING TR	2SC3326
NSP		— H.P. ASSY	XWZ3356	Q 107		CHIP MUTING TR	2SC3326
		— MECHA SW ASSY	XWZ3358	Q 108		CHIP MUTING TR	2SC3326
				Q 109		CHIP MUTING TR	2SC3326
				Q 110		CHIP MUTING TR	2SC3326
NSP		AMP&PS ASSY	XWK3016	Q 1101		CHIP DIGITAL TRANS.	DTA124EK
NSP		— AMP INPUT ASSY	AWX7382	Q 1102		DIGITAL TRANSISTOR	DTC124EK
		— AMP&PRIMARY ASSY	XWZ3373	Q 111		CHIP MUTING TR	2SC3326
		— REGULATOR ASSY	AWX7493	Q 112		CHIP MUTING TR	2SC3326
		— TRANS2 ASSY	AWX7468	Q 1601		CHIP MUTING TR	2SC3326
NSP		— TRANS1 ASSY	AWX7390				
NSP		— TRANS3 ASSY	AWX7392	Q 1602		CHIP MUTING TR	2SC3326
		D.D & INPUT ASSY	XWX3025	Q 1603		CHIP MUTING TR	2SC3326
				Q 1604		CHIP MUTING TR	2SC3326
				Q 1605		CHIP MUTING TR	2SC3326
				Q 1606		CHIP MUTING TR	2SC3326

A D.D & INPUT ASSY SEMICONDUCTORS

IC1001	OP-AMP IC	NJM2100M
IC101	ANALOG SWITCH IC	TC9273F-007
IC102	E-SW IC	TC9163AF
IC103	E-VR IC	M62446FP
IC104	OP-AMP IC	UPC4570G2-TFB
IC105	OP-AMP IC	UPC4570G2-TFB
IC106	OP-AMP IC	UPC4570G2-TFB
IC107	OP-AMP IC	UPC4570G2-TFB
IC108	OP-AMP IC	M5216FP
IC1101	MULTI CH CODEC IC	CS4226-KQ(J)
IC1201	DTS DECORDER IC	YSS912C
IC1301	SRAM	IS61C256AH-15J
IC1401	REGULATOR IC	PQ20WZ51
IC1601	E-SW IC	TC9164AF
IC1602	IC	NJM4558MD
IC1603	IC	NJM4558MD
IC1604	IC	NJM4558MD
IC1701	IC	NJM4558MD
IC1702	IC	NJM4558MD
IC1703	IC	NJM4558MD
IC1704	IC	NJM4558MD
IC1705	IC	NJM4558MD
Q 1001	CHIP MUTING TR	2SC3326
Q 1002	CHIP MUTING TR	2SC3326

COILS AND FILTERS

L 101	CHIP SOLID INDUCTOR	QTL1013
L 1101	CHIP SOLID INDUCTOR	QTL1013
L 1102	CHIP SOLID INDUCTOR	QTL1013
L 1103	CHIP SOLID INDUCTOR	QTL1013
L 1104	CHIP SOLID INDUCTOR	QTL1013
L 111	CHIP SOLID INDUCTOR	QTL1013
L 1111	CHIP SOLID INDUCTOR	QTL1013
L 112	CHIP SOLID INDUCTOR	QTL1013
L 1123	CHIP SOLID INDUCTOR	QTL1013
L 1124	CHIP SOLID INDUCTOR	QTL1013
L 1203	CHIP SOLID INDUCTOR	QTL1013
L 1204	CHIP SOLID INDUCTOR	QTL1013

VSX-D510

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
L 1302		CHIP SOLID INDUCTOR	QTL1013	C 116		ELECT. CAPACITOR	CEAT4R7M50
L 1401		CHIP SOLID INDUCTOR	ATL7002	C 117		ELECT. CAPACITOR	CEAT470M25
L 1601		CHIP SOLID INDUCTOR	QTL1013	C 118		ELECT. CAPACITOR	CEAT470M25
L 1602		CHIP SOLID INDUCTOR	QTL1013	C 119		CHIP CERAMIC C.	CKSRYP103K50
				C 120		CHIP CERAMIC C.	CKSRYP103K50
CAPACITORS				C 1201		ELECT. CAPACITOR	CEAT101M10
C 1001		CERAMIC CAPACITOR	CCSRCH101J50	C 1202		ELECT. CAPACITOR	CEAT221M6R3
C 1002		CERAMIC CAPACITOR	CCSRCH101J50	C 1203		CHIP CERAMIC C.	CCSRCH200J50
C 1003		ELECT. CAPACITOR	CEAT4R7M50	C 1204		CHIP CERAMIC C.	CCSRCH200J50
C 1004		ELECT. CAPACITOR	CEAT4R7M50	C 1205		CHIP CERAMIC C.	CKSRYP103K50
C 1005		ELECT. CAPACITOR	CEAT221M6R3	C 1206		CHIP CERAMIC C.	CKSRYP103K50
C 1006		CHIP CERAMIC C.	CKSRYP103K50	C 1207		CERAMIC CAPACITOR	CCSRCH101J50
C 1007		ELECT. CAPACITOR	CEJQNP100M10	C 1208		CHIP CERAMIC C.	CKSRYP103K50
C 1008		ELECT. CAPACITOR	CEJQNP100M10	C 1209		CERAMIC CAPACITOR	CCSRCH101J50
C 1009		CERAMIC CAPACITOR	CKSRYP104Z25	C 121		CERAMIC CAPACITOR	CCSRCH101J50
C 101		CERAMIC CAPACITOR	CCSRCH101J50	C 1210		CHIP CERAMIC C.	CCSRCH471J50
C 102		CERAMIC CAPACITOR	CCSRCH101J50	C 1211		CHIP CERAMIC C.	CKSRYP103K50
C 103		CERAMIC CAPACITOR	CCSRCH101J50	C 1212		CERAMIC CAPACITOR	CCSRCH101J50
C 104		CERAMIC CAPACITOR	CCSRCH101J50	C 1213		CERAMIC CAPACITOR	CCSRCH101J50
C 105		CERAMIC CAPACITOR	CCSRCH101J50	C 1214		CHIP CERAMIC C.	CKSRYP103K50
C 106		CERAMIC CAPACITOR	CCSRCH101J50	C 1215		CHIP CERAMIC C.	CKSRYP103K50
C 107		CERAMIC CAPACITOR	CCSRCH101J50	C 1216		CHIP CERAMIC C.	CKSRYP103K50
C 108		CERAMIC CAPACITOR	CCSRCH101J50	C 1217		CERAMIC CAPACITOR	CCSRCH101J50
C 109		CERAMIC CAPACITOR	CCSRCH101J50	C 1218		CERAMIC CAPACITOR	CCSRCH101J50
C 110		CERAMIC CAPACITOR	CCSRCH101J50	C 1219		CERAMIC CAPACITOR	CKSRYP104Z25
C 1101		CHIP CERAMIC C.	CCSRCH471J50	C 122		CERAMIC CAPACITOR	CCSRCH101J50
C 1102		CERAMIC CAPACITOR	CCSRCH102J50	C 1220		CHIP CERAMIC C.	CKSRYP103K50
C 1103		CERAMIC CAPACITOR	CCSRCH390J50	C 1221		CERAMIC CAPACITOR	CCSRCH101J50
C 1104		CERAMIC CAPACITOR	CCSRCH390J50	C 1222		CHIP CERAMIC C.	CKSRYP103K50
C 1105		CERAMIC CAPACITOR	CKSRYP104Z16	C 1223		CERAMIC CAPACITOR	CCSRCH101J50
C 1106		CHIP CERAMIC C.	CCSRCH471J50	C 1224		CERAMIC CAPACITOR	CKSRYP104Z25
C 1107		CHIP CERAMIC C.	CKSRYP223K50	C 1225		CERAMIC CAPACITOR	CKSRYP104Z25
C 1108		CERAMIC CAPACITOR	CKSQYB224K16	C 1226		CERAMIC CAPACITOR	CKSRYP104Z16
C 1109		CERAMIC CAPACITOR	CKSRYP104Z16	C 1227		CERAMIC CAPACITOR	CKSRYP104Z16
C 111		CERAMIC CAPACITOR	CCSRCH101J50	C 1228		CERAMIC CAPACITOR	CKSRYP104Z25
C 1110		CHIP CERAMIC C.	CCSRCH471J50	C 1229		CERAMIC CAPACITOR	CKSRYP104Z25
C 1111		CERAMIC CAPACITOR	CKSRYP104Z25	C 123		CERAMIC CAPACITOR	CCSRCH101J50
C 1112		ELECT. CAPACITOR	CEAT1R0M50	C 1230		CERAMIC CAPACITOR	CKSRYP104Z16
C 1113		CERAMIC CAPACITOR	CCSRCH180J50	C 1231		CERAMIC CAPACITOR	CKSRYP104Z25
C 1114		CERAMIC CAPACITOR	CCSRCH180J50	C 1232		CERAMIC CAPACITOR	CKSRYP104Z16
C 1115		ELECT. CAPACITOR	CEATR47M50	C 124		CHIP CERAMIC C.	CKSRYP103K50
C 1116		ELECT. CAPACITOR	CEAT101M10	C 125		CHIP CERAMIC C.	CKSRYP103K50
C 1117		CERAMIC CAPACITOR	CKSRYP104Z25	C 126		CERAMIC CAPACITOR	CCSRCH101J50
C 1118		CHIP CERAMIC C.	CCSRCH471J50	C 127		CERAMIC CAPACITOR	CCSRCH101J50
C 1119		CHIP CERAMIC C.	CCSRCH271J50	C 128		CERAMIC CAPACITOR	CCSRCH101J50
C 112		CERAMIC CAPACITOR	CCSRCH101J50	C 130		ELECT. CAPACITOR	CEAT100M50
C 1121		ELECT. CAPACITOR	CEAT101M10	C 1301		ELECT. CAPACITOR	CEJA101M10
C 1122		ELECT. CAPACITOR	CEAT101M10	C 1302		CHIP CERAMIC C.	CKSRYP103K50
C 1123		CHIP CERAMIC C.	CCSRCH331J50	C 1303		CERAMIC CAPACITOR	CCSRCH101J50
C 1124		CHIP CERAMIC C.	CCSRCH331J50	C 1304		CERAMIC CAPACITOR	CKSRYP104Z25
C 1128		CHIP CERAMIC C.	CKSRYP103K50	C 131		ELECT. CAPACITOR	CEAT100M50
C 1129		CHIP CERAMIC C.	CKSRYP103K50	C 132		ELECT. CAPACITOR	CEAT100M50
C 113		CERAMIC CAPACITOR	CCSRCH101J50	C 133		ELECT. CAPACITOR	CEAT100M50
C 1130		CHIP CERAMIC C.	CCSRCH471J50	C 134		ELECT. CAPACITOR	CEAT100M50
C 1132		CHIP CERAMIC C.	CKSRYP103K50	C 135		ELECT. CAPACITOR	CEAT100M50
C 1133		CERAMIC CAPACITOR	CKSRYP104Z25	C 136		ELECT. CAPACITOR	CEAT100M50
C 1134		CHIP CERAMIC C.	CKSRYP103K50	C 137		ELECT. CAPACITOR	CEAT100M50
C 1135		CERAMIC CAPACITOR	CKSRYP104K16	C 138		CHIP CERAMIC C.	CKSRYP822K50
C 1136		CERAMIC CAPACITOR	CKSRYP104K16	C 139		CHIP CERAMIC C.	CKSRYP153K50
C 114		CERAMIC CAPACITOR	CCSRCH101J50	C 140		CERAMIC CAPACITOR	CKSQYB224K16
C 115		ELECT. CAPACITOR	CEAT4R7M50	C 1401		ELECT. CAPACITOR	CEAT4R7M50
				C 1404		ELECT. CAPACITOR	CEAT101M10

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
C 141		CHIP CERAMIC C.	CKSRYB822K50	C 167		CHIP CERAMIC C.	CCSRCH221J50
C 142		CHIP CERAMIC C.	CKSRYB153K50	C 168		CERAMIC CAPACITOR	CKSRYB152K50
C 143		CERAMIC CAPACITOR	CKSQYB224K16	C 169		ELECT. CAPACITOR	CEAT470M25
C 144		ELECT. CAPACITOR	CEAT3R3M50	C 170		ELECT. CAPACITOR	CEAT4R7M50
C 145		ELECT. CAPACITOR	CEAT3R3M50	C 1701		CERAMIC CAPACITOR	CKSRYB682K50
C 146		ELECT. CAPACITOR	CEAT100M50	C 1702		CERAMIC CAPACITOR	CKSRYB682K50
C 147		ELECT. CAPACITOR	CEAT3R3M50	C 1703		CHIP CERAMIC C.	CKSRYB222K50
C 148		ELECT. CAPACITOR	CEAT3R3M50	C 1704		CHIP CERAMIC C.	CKSRYB222K50
C 149		ELECT. CAPACITOR	CEAT3R3M50	C 1705		CERAMIC CAPACITOR	CKSRYB104K16
C 150		ELECT. CAPACITOR	CEAT3R3M50	C 1706		CERAMIC CAPACITOR	CKSRYB104K16
C 151		ELECT. CAPACITOR	CEAT3R3M50	C 1707		CHIP CERAMIC C.	CCSRCH151J50
C 152		CERAMIC CAPACITOR	CCSRCH101J50	C 1708		CHIP CERAMIC C.	CCSRCH151J50
C 153		CERAMIC CAPACITOR	CCSRCH101J50	C 1709		CHIP CERAMIC C.	CKSRYB103K50
C 154		CERAMIC CAPACITOR	CCSRCH101J50	C 171		CHIP CERAMIC C.	CKSRYB103K50
C 155		ELECT. CAPACITOR	CEAT471M10	C 1710		CHIP CERAMIC C.	CKSRYB103K50
C 156		ELECT. CAPACITOR	CEAT471M10	C 1711		CHIP CERAMIC C.	CKSRYB103K50
C 157		ELECT. CAPACITOR	CEAT101M16	C 1712		CHIP CERAMIC C.	CKSRYB103K50
C 158		CHIP CERAMIC C.	CKSRYB103K50	C 1713		ELECT. CAPACITOR	CEAT220M25
C 159		CERAMIC CAPACITOR	CCSRCH101J50	C 1714		ELECT. CAPACITOR	CEAT220M25
C 160		CERAMIC CAPACITOR	CCSRCH101J50	C 1715		CERAMIC CAPACITOR	CKSRYB682K50
C 1601		CHIP CERAMIC C.	CCSRCH221J50	C 1716		CERAMIC CAPACITOR	CKSRYB682K50
C 1602		CHIP CERAMIC C.	CCSRCH221J50	C 1717		CHIP CERAMIC C.	CKSRYB222K50
C 1603		CHIP CERAMIC C.	CCSRCH471J50	C 1718		CHIP CERAMIC C.	CKSRYB222K50
C 1604		CHIP CERAMIC C.	CCSRCH471J50	C 1719		CERAMIC CAPACITOR	CKSRYB104K16
C 1605		ELECT. CAPACITOR	CEAT4R7M50	C 172		CHIP CERAMIC C.	CKSRYB103K50
C 1606		ELECT. CAPACITOR	CEAT4R7M50	C 1720		CERAMIC CAPACITOR	CKSRYB104K16
C 1607		CHIP CERAMIC C.	CKSRYB103K50	C 1721		CHIP CERAMIC C.	CCSRCH151J50
C 1608		CHIP CERAMIC C.	CKSRYB103K50	C 1722		CHIP CERAMIC C.	CCSRCH151J50
C 1609		CHIP CERAMIC C.	CCSRCH221J50	C 1723		CHIP CERAMIC C.	CKSRYB103K50
C 161		ELECT. CAPACITOR	CEAT470M25	C 1724		CHIP CERAMIC C.	CKSRYB103K50
C 1610		CHIP CERAMIC C.	CCSRCH221J50	C 1725		CHIP CERAMIC C.	CKSRYB103K50
C 1611		CHIP CERAMIC C.	CCSRCH471J50	C 1726		CHIP CERAMIC C.	CKSRYB103K50
C 1612		CHIP CERAMIC C.	CCSRCH471J50	C 1727		ELECT. CAPACITOR	CEAT220M25
C 1613		ELECT. CAPACITOR	CEAT4R7M50	C 1728		ELECT. CAPACITOR	CEAT220M25
C 1614		ELECT. CAPACITOR	CEAT4R7M50	C 1729		CERAMIC CAPACITOR	CKSRYB682K50
C 1615		CHIP CERAMIC C.	CKSRYB222K50	C 173		CHIP CERAMIC C.	CCSRCH151J50
C 1616		CHIP CERAMIC C.	CKSRYB222K50	C 1731		CHIP CERAMIC C.	CKSRYB222K50
C 1617		CHIP CERAMIC C.	CKSRYB222K50	C 1732		CERAMIC CAPACITOR	CKSRYB682K50
C 1618		CHIP CERAMIC C.	CKSRYB222K50	C 1733		CERAMIC CAPACITOR	CKSRYB104K16
C 1619		CHIP CERAMIC C.	CKSRYB103K50	C 1734		CERAMIC CAPACITOR	CKSRYB104K16
C 162		ELECT. CAPACITOR	CEAT470M25	C 1735		CHIP CERAMIC C.	CCSRCH151J50
C 1620		CHIP CERAMIC C.	CKSRYB103K50	C 1736		CERAMIC CAPACITOR	CCSRCH102J50
C 1621		CHIP CERAMIC C.	CKSRYB122K50	C 1737		CHIP CERAMIC C.	CKSRYB103K50
C 1623		CHIP CERAMIC C.	CCSRCH271J50	C 1738		CHIP CERAMIC C.	CKSRYB103K50
C 1625		ELECT. CAPACITOR	CEAT4R7M50	C 1739		ELECT. CAPACITOR	CEAT220M25
C 1626		ELECT. CAPACITOR	CEAT4R7M50	C 174		CHIP CERAMIC C.	CCSRCH151J50
C 1627		CHIP CERAMIC C.	CKSRYB222K50	C 1740		ELECT. CAPACITOR	CEAT220M25
C 1628		CERAMIC CAPACITOR	CKSRYF104Z50	C 175		ELECT. CAPACITOR	CEAT101M16
C 1629		CHIP CERAMIC C.	CKSRYB103K50	C 176		ELECT. CAPACITOR	CEAT101M16
C 163		CERAMIC CAPACITOR	CCSRCH101J50	C 177		CHIP CERAMIC C.	CKSRYB103K50
C 1630		CHIP CERAMIC C.	CKSRYB103K50	C 178		CHIP CERAMIC C.	CKSRYB103K50
C 1631		CERAMIC CAPACITOR	CKSRYF104Z25	C 179		CHIP CERAMIC C.	CKSRYB103K50
C 1632		CERAMIC CAPACITOR	CKSRYF104Z25	C 180		CHIP CERAMIC C.	CKSRYB103K50
C 1636		CHIP CERAMIC C.	CKSRYB103K50	C 183		CHIP CERAMIC C.	CKSRYB103K50
C 1637		CHIP CERAMIC C.	CKSRYB103K50	C 184		CERAMIC CAPACITOR	CKSRYF473Z50
C 1639		CHIP CERAMIC C.	CCSRCH471J50	C 185		CERAMIC CAPACITOR	CKSRYF473Z50
C 164		CERAMIC CAPACITOR	CCSRCH101J50	C 186		CHIP CERAMIC C.	CKSRYB103K50
C 1640		CERAMIC CAPACITOR	CCSRCH101J50	C 187		CHIP CERAMIC C.	CKSRYB103K50
C 1641		CERAMIC CAPACITOR	CCSRCH101J50	C 188		CHIP CERAMIC C.	CKSRYB103K50
C 1642		CHIP CERAMIC C.	CKSRYB103K50	C 189		CHIP CERAMIC C.	CKSRYB103K50
C 165		ELECT. CAPACITOR	CEAT470M25	C 190		CHIP CERAMIC C.	CKSRYB103K50
C 166		ELECT. CAPACITOR	CEAT470M25	C 191		CHIP CERAMIC C.	CKSRYB103K50

VSX-D510

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	C 192	CHIP CERAMIC C.	CKSRYB103K50		Q 702	TRANSISTOR	2SB1238X
	C 193	CHIP CERAMIC C.	CKSRYB103K50		Q 703	TRANSISTOR	2SA1145
	C 194	ELECT. CAPACITOR	CEAT4R7M50		Q 704	TRANSISTOR	2SC1845
	C 195	ELECT. CAPACITOR	CEAT4R7M50	△	D 51	DIODE	S5688G
	C 199	CHIP CERAMIC C.	CKSRYB103K50	△	D 52	DIODE	S5688G
	C 201	ELECT. CAPACITOR	CEAT4R7M50	△	D 53	DIODE	S5688G
	C 202	CERAMIC CAPACITOR	CKSRYF104Z16	△	D 54	DIODE	S5688G
	C 205	ELECT. CAPACITOR	CEAT3R3M50	△	D 55	DIODE	S5688G
	C 207	CERAMIC CAPACITOR	CCSRCH101J50		D 56	DIODE	1SS133
	C 208	CERAMIC CAPACITOR	CCSRCH101J50		D 57	DIODE	1SS133
	C 209	CERAMIC CAPACITOR	CKSRYF104Z25		D 58	ZINER DIODE	MTZJ5.1A
	C 211	CERAMIC CAPACITOR	CCSRCH220J50		D 601	DIODE	1SS133
	C 212	CERAMIC CAPACITOR	CCSRCH220J50		D 602	DIODE	1SS133

RESISTORS

△	R174	METAL OXIDE RESISTOR	RS1LMF101J		D 605	ZENER DIODE	MTZJ8.2A
△	R175	METAL OXIDE RESISTOR	RS1LMF101J		D 606	ZENER DIODE	MTZJ8.2A
	Other Resistors		RS1/16S□□□J		D 631	DIODE	1SS133

OTHERS

	CN101	19P SOCKET	KP200TA19L		D 634	ZENER DIODE	MTZJ8.2A
	CN102	33P CONNECTOR	52045-3345		D 651	DIODE	1SS133
	CN103	19P CONNECTOR	52045-1945		D 652	DIODE	1SS133
	CN104	CONNECTOR	52045-1445		D 653	DIODE	1SS133
	CN105	CONNECTOR	52045-1345		D 654	DIODE	1SS133
	CN106	CONNECTOR	52045-1745	△	D 701	DIODE	D5SBA20(B)
	CN1501	CONNECTOR 6P	52045-0645	△	D 702	DIODE	D5SBA20(B)
	JA103	PIN JACK(4P)	AKB7048		D 711	ZENER DIODE	MTZJ22D
	JA104	PIN JACK(4P)	AKB7048		D 712	ZENER DIODE	MTZJ5.1B
	JA105	PIN JACK(6P)	AKB7050		D 751	DIODE	1SS133
	X1101	CRYSTAL RESONATOR (18.432MHz)	RSS1052		D 752	DIODE	1SS133
	X1201	CRYSTAL RESONATOR (12.288MHz)	VSS1140		D 753	DIODE	1SS133
					D 754	DIODE	1SS133
					D 755	DIODE	1SS133
					D 756	DIODE	1SS133

B AMP&PRIMARY ASSY SEMICONDUCTORS

	IC51	REGULATOR IC	NJM78M56FA				
△	IC52	PROTECTOR(315mA)	AEK7003				
△	IC601	AUDIO IC	PAC010A				
△	IC602	AUDIO IC	PAC011A				
△	IC603	PROTECTOR(1A)	AEK7009				
	Q 51	TRANSISTOR	KRC101M				
	Q 601	TRANSISTOR	2SC2878				
	Q 602	TRANSISTOR	2SC2878				
	Q 603	TRANSISTOR	2SC2878				
	Q 604	TRANSISTOR	2SC2878				
	Q 605	TRANSISTOR	2SC2240				
	Q 606	TRANSISTOR	2SC2240				
	Q 631	TRANSISTOR	2SC2878				
	Q 632	TRANSISTOR	2SC2878				
	Q 633	TRANSISTOR	2SC2240				
	Q 651	TRANSISTOR	2SC2878				
	Q 652	TRANSISTOR	2SC2878				
	Q 653	TRANSISTOR	2SC2878				
	Q 654	TRANSISTOR	2SC2878				
	Q 655	TRANSISTOR	2SC2240				
	Q 656	TRANSISTOR	2SC2240				
	Q 691	TRANSISTOR	2SC1740S				
	Q 692	TRANSISTOR	2SC1740S				
	Q 701	TRANSISTOR	2SD1859X				

COILS AND FILTERS

△	L 52	LINE FILTER			XTF3001
	L 751	COIL			ATH1004
	L 752	COIL			ATH1004
	L 753	COIL			ATH1004
	L 761	COIL			ATH1004
	L 762	COIL			ATH1004

SWITCHES AND RELAYS

△	RY51	JOE LOWPOWER RELAY			XSR3003
	RY751	RELAY			XSR3002
	RY752	RELAY			XSR3002
	RY753	RELAY			XSR3002

CAPACITORS

△	C51	CKA (10000pF/AC250V)			ACG7020
△	C52	CKA (10000pF/AC250V)			ACG7020
	C53	ELECT. CAPACITOR			CEAT102M16
	C54	ELECT. CAPACITOR			CEAT470M25
	C55	CERAMIC CAPACITOR			CGCYX103M25
	C56	CERAMIC CAPACITOR			CGCYX103M25
	C57	CERAMIC CAPACITOR			CGCYX103M25
	C601	CERAMIC CAPACITOR			CKCYB102K50
	C602	CERAMIC CAPACITOR			CKCYB102K50
	C603	CERAMIC CAPACITOR			CKCYB331K50
	C604	CERAMIC CAPACITOR			CKCYB331K50
	C605	ELECT. CAPACITOR			CEAT4R7M50

VSX-D510

Mark	No.	Description	Part No.
	Q802	TRANSISTOR	KRC101M
	Q803	TRANSISTOR	KRA103M
	Q804	TRANSISTOR	KRC101M
△	D801	DIODE	S5688G
△	D802	DIODE	S5688G
△	D803	DIODE	S5688G
△	D804	DIODE	S5688G
△	D805	DIODE	S5688G
△	D806	DIODE	S5688G
△	D807	DIODE	S5688G
△	D808	DIODE	S5688G

CAPACITORS

C801	ELECT. CAPACITOR	CEAT222M25
C802	ELECT. CAPACITOR	CEAT222M25
C803	CERAMIC CAPACITOR	CGCYX103M25
C804	CERAMIC CAPACITOR	CGCYX103M25
C805	ELECT. CAPACITOR	CEAT101M16
C806	ELECT. CAPACITOR	CEAT101M16
C807	CERAMIC CAPACITOR	CGCYX103M25
C808	ELECT. CAPACITOR	CEAT101M10
C809	ELECT. CAPACITOR	CEAT222M16
C810	CERAMIC CAPACITOR	CGCYX103M25
C811	ELECT. CAPACITOR	CEAT101M10

OTHERS

CN801	22P CONNECTOR	52045-2245
CN802	19P PLUG	KM200TA19
CN803	5P PLUG	KM200TA5

F AMP INPUT ASSY

OTHERS

CN290	17P CONNECTOR	52044-1745
CN291	16P SOCKET	KP200TA16L

G TRANS1 ASSY

TRANS1 ASSY has no service part.

H VIDEO&6CH IN ASSY

SEMICONDUCTORS

IC301	VIDEO SW IC	NJM2296M
IC302	IC	NJM4558MD
IC303	IC	NJM4558MD
Q301	TRANSISTOR	2SC3377
Q302	TRANSISTOR	2SA1515
Q303	TRANSISTOR	2SC2878
D301	DIODE	1SS355
D302	DIODE	1SS355
D303	CHIP ZENER DIODE	UDZS6.2B
D304	CHIP ZENER DIODE	UDZS6.2B
D305	DIODE	1SS355
D306	DIODE	1SS355

CAPACITORS

C302	CERAMIC CAPACITOR	CKSRYB103K50
C304	CERAMIC CAPACITOR	CKSRYB221K50
C305	CERAMIC CAPACITOR	CKSRYB221K50
C306	CERAMIC CAPACITOR	CKSRYB221K50

Mark	No.	Description	Part No.
	C307	ELECT. CAPACITOR	CEAT470M25
	C308	ELECT. CAPACITOR	CEAT470M25
	C309	ELECT. CAPACITOR	CEAT470M25
	C310	ELECT. CAPACITOR	CEAT470M25
	C311	CERAMIC CAPACITOR	CKSRYB473K50
	C312	ELECT. CAPACITOR	CEAT470M25
	C313	CERAMIC CAPACITOR	CKSRYB473K50
	C314	ELECT. CAPACITOR	CEAT470M25
	C315	CERAMIC CAPACITOR	CKSRYB103K50
	C316	CERAMIC CAPACITOR	CKSRYB103K50
	C317	CERAMIC CAPACITOR	CKSRYB221K50
	C318	CERAMIC CAPACITOR	CKSRYB221K50
	C319	CHIP CAPACITOR	CCSRCH101J50
	C320	CHIP CAPACITOR	CCSRCH101J50
	C321	ELECT. CAPACITOR	CEAT4R7M50
	C322	CERAMIC CAPACITOR	CKSRYB103K50
	C323	CERAMIC CAPACITOR	CKSRYB103K50
	C324	ELECT. CAPACITOR	CEAT4R7M50
	C325	CERAMIC CAPACITOR	CKSRYB221K50
	C326	CERAMIC CAPACITOR	CKSRYB221K50
	C327	CHIP CAPACITOR	CCSRCH101J50
	C328	CHIP CAPACITOR	CCSRCH101J50
	C329	CERAMIC CAPACITOR	CKSRYB103K50
	C330	CERAMIC CAPACITOR	CKSRYB103K50
	C331	ELECT. CAPACITOR	CEAT4R7M50
	C332	ELECT. CAPACITOR	CEAT4R7M50
	C333	CERAMIC CAPACITOR	CKSRYB331K50
	C338	ELECT. CAPACITOR	CEAT470M25
	C339	CERAMIC CAPACITOR	CKSRYB104K25
	C340	CERAMIC CAPACITOR	CKSRYB104K25
	C342	CHIP CAPACITOR	CCSRCH101J50
	C343	CHIP CAPACITOR	CCSRCH101J50
	C344	CHIP CAPACITOR	CCSRCH101J50
	C345	CHIP CAPACITOR	CCSRCH101J50
	C346	CERAMIC CAPACITOR	CKSRYB104K16
	C347	CHIP CAPACITOR	CCSRCH470J50

RESISTORS

△	R 313	METAL OXIDE RESISTOR	RS3LMF560J
△	R 316	METAL OXIDE RESISTOR	RS3LMF560J
		Other Resistors	RS1/16S□□□J

OTHERS

CN302	5P SOCKET	KP200TA5L
CN303	14P CONNECTOR	52044-1445
CN305	PIN JACK(6P)	XKB3009
CN307	PIN JACK(4P)	XKB3013
JA301	JACK	RKN1004

I H.P. ASSY

SEMICONDUCTORS

Q1551	TRANSISTOR	2SC3326
Q1552	TRANSISTOR	2SC3326

CAPACITORS

C1551	CERAMIC CAPACITOR	CKSRYB104K16
C1552	CERAMIC CAPACITOR	CKSRYB103K50
C1553	CHIP CERAMIC C.	CCSRCH471J50
C1555	CHIP CAPACITOR	CKSRYB223K50
C1556	CHIP CAPACITOR	CKSRYB223K50

Mark	No.	Description	Part No.
RESISTORS			
△	R1551	METAL OXIDE RESISTOR	RS1/2LMF121J
△	R1552	METAL OXIDE RESISTOR	RS1/2LMF121J
	R1553	CHIP RESISTOR	RS1/16S472J
	R1554	CHIP RESISTOR	RS1/16S472J

OTHERS

1551	CABLE HOLDER(4P)	51063-0405
JA1551	JACK	RKN1002
KN1551	EARTH METAL FITTING	VNF1084

J DIGITAL IN ASSY**SEMICONDUCTORS**

IC1901	LOGIC IC	TC74ACT151F
IC1902	LOGIC IC	TC74HCU04AF

COILS AND FILTERS

F1901	CHIP BEAD	DTF1067
F1902	CHIP BEAD	DTF1067
F1903	CHIP BEAD	DTF1067
F1904	CHIP BEAD	DTF1067

CAPACITORS

C1901	CERAMIC CAPACITOR	CKSRYB104K25
C1902	CERAMIC CAPACITOR	CKSRYB104K25
C1903	CERAMIC CAPACITOR	CKSRYB104K25
C1904	ELECT. CAPACITOR	CEAT101M10
C1905	ELECT. CAPACITOR	CEAT101M10
C1906	CERAMIC CAPACITOR	CKSRYB103K50
C1907	CHIP CERAMIC C.	CCSRCH271J50
C1908	CERAMIC CAPACITOR	CKSRYB104K25
C1909	CERAMIC CAPACITOR	CKSRYB104K25
C1910	CERAMIC CAPACITOR	CKSRYB103K50
C1911	CERAMIC CAPACITOR	CCSRCH560J50
C1912	ELECT. CAPACITOR	CEAT101M10
C1913	CERAMIC CAPACITOR	CKSRYB103K50
C1914	CHIP CERAMIC C.	CCSRCH271J50
C1915	CHIP CAPACITOR	CKSRYB102K50
C1916	CHIP CERAMIC C.	CCSRCH471J50
C1917	CHIP CERAMIC C.	CCSRCH220J50
C1918	CHIP CERAMIC C.	CCSRCH221J50
C1919	CERAMIC CAPACITOR	CKSRYB103K50
C1920	CERAMIC CAPACITOR	CKSRYB103K50
C1921	CERAMIC CAPACITOR	CKSRYB104K25
C1922	CERAMIC CAPACITOR	CKSRYB104K25

RESISTORS

All Resistors	RS1/16S□□□J
---------------	-------------

OTHERS

CN1901	CONNECTOR 6P	52045-0645
JA1901	JACK (1P)	VKB1077
JA1902	OPTICAL RECEIV MOD.	GP1F32R
JA1903	OPTICAL RECEIV MOD.	GP1F32R
JA1904	OPTICAL LINK OUT	GP1F32T

K FRONT ASSY**SEMICONDUCTORS**

IC401	CONTROL MCU	PDG260A
IC481	RDS RECORDER	BU1923F

Mark	No.	Description	Part No.
Q 401	CHIP DIGITAL TRANS.	DTA124EK	
Q 402	CHIP DIGITAL TRANS.	DTA124EK	
Q 403	DIGITAL TRANSISTOR	DTC143EK	
Q 404	DIGITAL TRANSISTOR	DTC143EK	
Q 405	CHIP TANSISTOR	2SA1037K	
Q 441	DIGITAL TRANSISTOR	DTC143EK	
Q 442	CHIP DIGITAL TRANS.	DTA124EK	
Q 471	CHIP DIGITAL TRANS.	DTA124EK	
Q 481	CHIP TANSISTOR	2SA1037K	
Q 482	DIGITAL TRANSISTOR	DTC143EK	
Q 483	CHIP MUTING TRANS.	2SC3326	
D 401	CHIP DIODE ARRAY	DAP202K	
D 403	DIODE	DAN217	
D 404	CHIP DIODE ARRAY	DAP202K	
D 405	DIODE	DAN217	
D 407	DIODE	1SS355	
D 408	DIODE	1SS355	
D 442	DIODE	1SS355	

COILS AND FILTERS

L401	RADIAL INDUCTOR	LFEA2R2J
L481	RADIAL INDUCTOR	LFEA2R2J

SWITCHES AND RELAYS

S 451	SWITCH	ASG1051
S 452	SWITCH	ASG1051
S 453	SWITCH	ASG1051
S 454	SWITCH	ASG1051
S 455	SWITCH	ASG1051
S 456	SWITCH	ASG1051
S 457	SWITCH	ASG1051
S 458	SWITCH	ASG1051
S 459	SWITCH	ASG1051
S 460	SWITCH	ASG1051
S 461	SWITCH	ASG1051
S 462	SWITCH	ASG1051
S 463	SWITCH	ASG1051
S 464	SWITCH	ASG1051
S 465	SWITCH	ASG1051
S 466	SWITCH	ASG1051
S 467	SWITCH	ASG1051
S 468	SWITCH	ASG1051
S 476	SWITCH	ASG1051

CAPACITORS

C401	CERAMIC CAPACITOR	CKSRYB103K50
C402	ELECT. CAPACITOR	CEAT221M6R3
C403	CERAMIC CAPACITOR	CKSRYB103K50
C404	EDL CAPACITOR (0.047F/5.5V)	ACH7132
C405	ELECT. CAPACITOR	CEAT221M6R3
C406	CERAMIC CAPACITOR	CKSRYB473K16
C407	CERAMIC CAPACITOR	CKSRYB473K16
C408	CERAMIC CAPACITOR	CKSRYB104K16
C409	ELECT. CAPACITOR	CEAT2R2M50
C410	ELECT. CAPACITOR	CEAT2R2M50
C411	CERAMIC CAPACITOR	CKSRYB103K50
C412	ELECT. CAPACITOR	CEAT470M50
C416	CERAMIC CAPACITOR	CKSRYB104K16
C418	CERAMIC CAPACITOR	CKSRYB104K16
C419	CERAMIC CAPACITOR	CKSRYB103K50
C420	ELECTROLYTIC CAPACIT (220μF/35V)	ACH7101

VSX-D510

Mark	No.	Description	Part No.
	C441	CERAMIC CAPACITOR	CKSRYB103K50
	C442	ELECT. CAPACITOR	CEJA470M10
	C451	CHIP CAPACITOR	CKSRYB102K50
	C452	CHIP CAPACITOR	CKSRYB102K50
	C453	CHIP CAPACITOR	CKSRYB102K50
	C471	CERAMIC CAPACITOR	CKSRYB104K16
	C481	CHIP CAPACITOR	CKSRYB102K50
	C482	CHIP CAPACITOR	CKSRYB102K50
	C483	ELECT. CAPACITOR	CEAT101M10
	C484	ELECT. CAPACITOR	CEJQ2R2M50
	C485	CHIP CAPACITOR	CKSRYB472K50
	C486	ELECT. CAPACITOR	CEATR10M50
	C488	CHIP CERAMIC C.	CCSRCH561J50
	C489	CHIP CERAMIC C.	CCSRCH270J50
	C490	CHIP CERAMIC C.	CCSRCH270J50
	C491	CERAMIC CAPACITOR	CKSRYB104K16
	C492	CERAMIC CAPACITOR	CKSRYB104K16
	C493	CERAMIC CAPACITOR	CKSRYB104K16
	C494	CERAMIC CAPACITOR	CKSRYB104K16
	C495	CHIP CAPACITOR	CKSRYB102K50
	C531	CERAMIC CAPACITOR	CKSRYB103K50
	C532	CERAMIC CAPACITOR	CKSRYB223K25

RESISTORS

All Resistors RS1/16S□□□J

OTHERS

401	REMOTE RECEIVER UNIT	GP1U28X
403	CABLE HOLDER(4P)	51063-0405
404	CABLE HOLDER(6P)	51063-0605
471	CABLE HOLDER(4P)	51063-0405
CN401	19P CONNECTOR	52044-1945
CN402	33P CONNECTOR	52044-3345
V401	FL TUBE	XAV3010
X401	CERAMIC RESONATOR (7.2MHz)	ASS7018
X481	CERAMIC RESONATOR (4.332MHz)	ASS7004

L R.ENCODER ASSY

SWITCHES AND RELAYS

S 511	SWITCH	ASG1051
S 512	ROTARY ENCODER	XSX3006
S 513	ROTARY ENCODER	XSX3005

OTHERS

511	CABLE HOLDER(6P)	51063-0605
-----	------------------	------------

M POWER SW ASSY

SEMICONDUCTORS

D501		BR3371XJ30A
------	--	-------------

SWITCHES AND RELAYS

S 501	SWITCH	ASG1051
-------	--------	---------

RESISTORS

R 501	CHIP RESISTOR	RS1/16S271J
-------	---------------	-------------

OTHERS

501	CABLE HOLDER(4P)	51063-0405
-----	------------------	------------

Mark	No.	Description	Part No.
GA		MECHA SW ASSY	
		SWITCHES AND RELAYS	
	S 591	SWITCH	ASG7014
		CAPACITORS	
	C 591	CERAMIC CAPACITOR	CKSQYF103Z50
	C 592	CERAMIC CAPACITOR	CKSQYF103Z50
		OTHERS	
	CN591	CONNECTOR(3P)	52151-0310



6. ADJUSTMENT

There is no information to be shown in this chapter.

7. GENERAL INFORMATION


7.1 DISASSEMBLY and DIAGNOSIS

■ Diagnosis

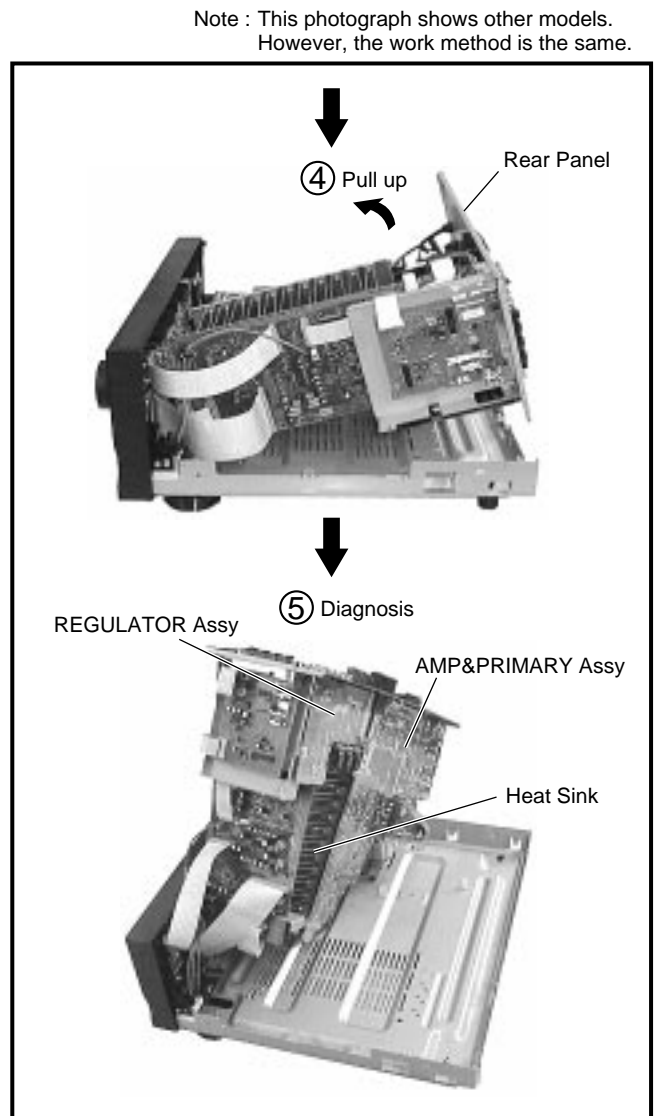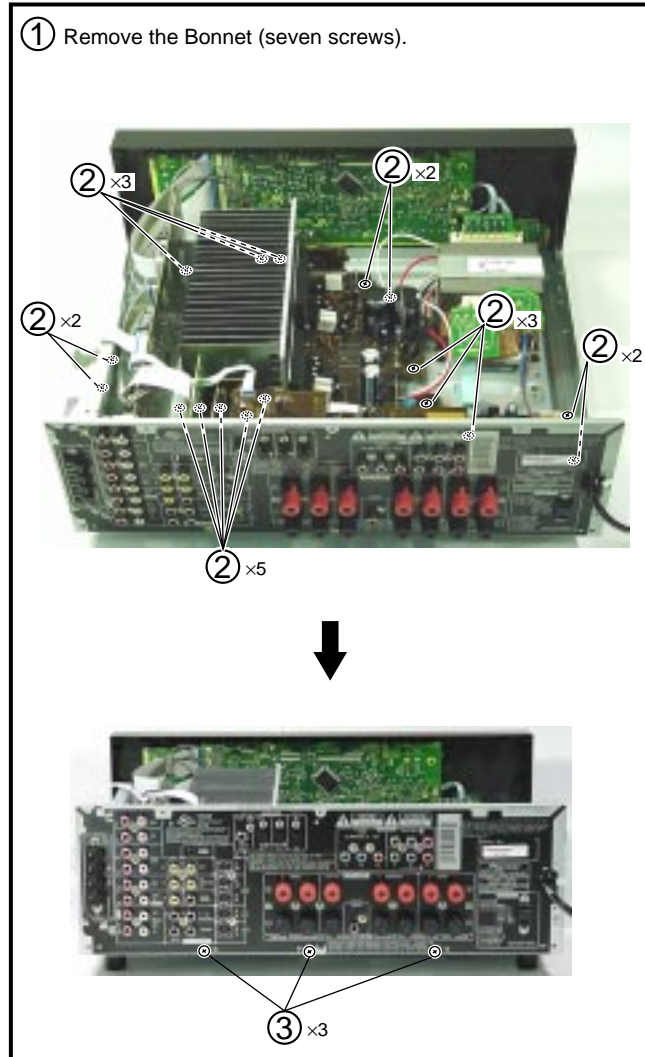

Note : If a speaker and the screw of a rear panel are removed, a set will stop moving.
 Even if it removes TUNER Unit, it is uninfliuential in operation of those other than TUNER Unit.


■ PCB Location

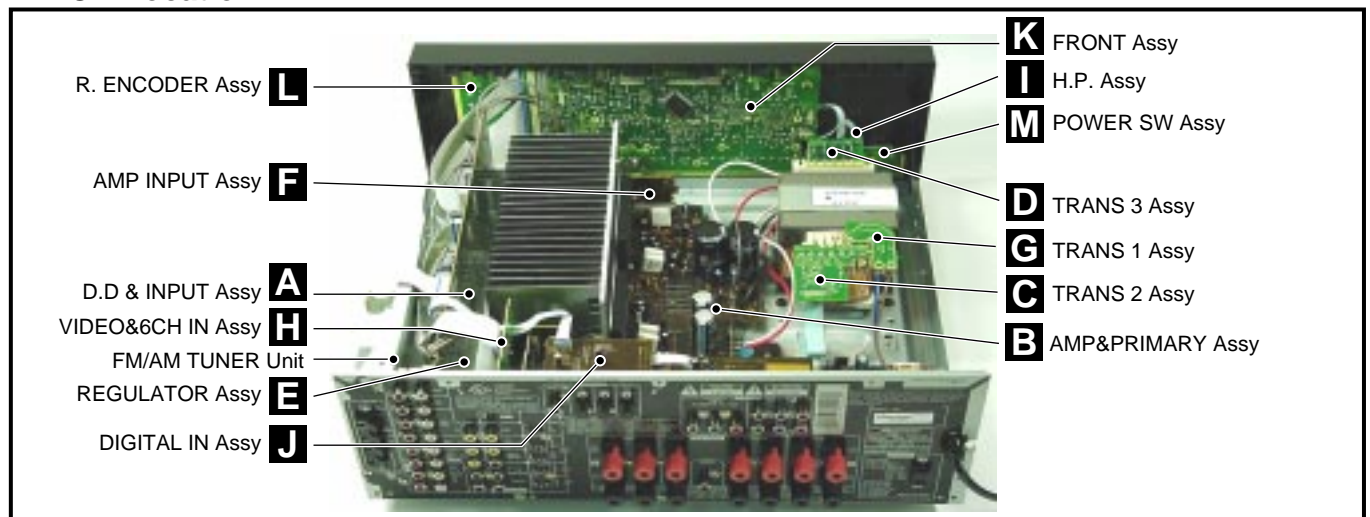

■ Diagnosis of D.D & INPUT Assy

- ① Remove FM/AM TUNER Unit and Shield R3 (five screws).
Please check SIDE A of the D.D & INPUT Assy on this status.

Please check IC101 mounted on side B from SIDE A.
The Pin number points on SIDE A of IC 101 are shown as follows.

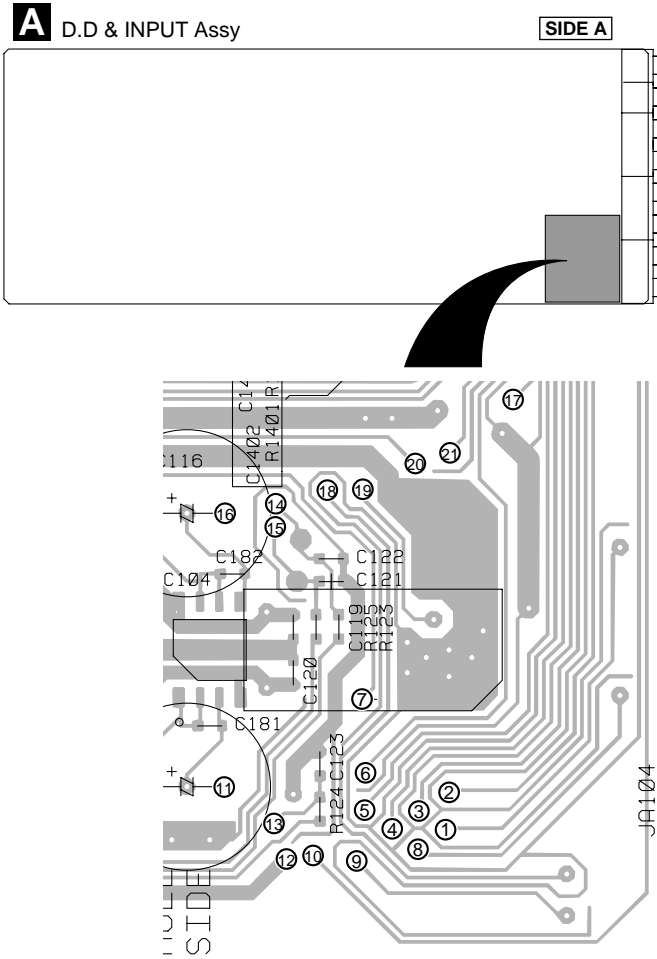

7.2 PARTS


7.2.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ PDG260A (FRONT ASSY : IC401)

• System Control MCU

• Pin Arrangement (Top View)

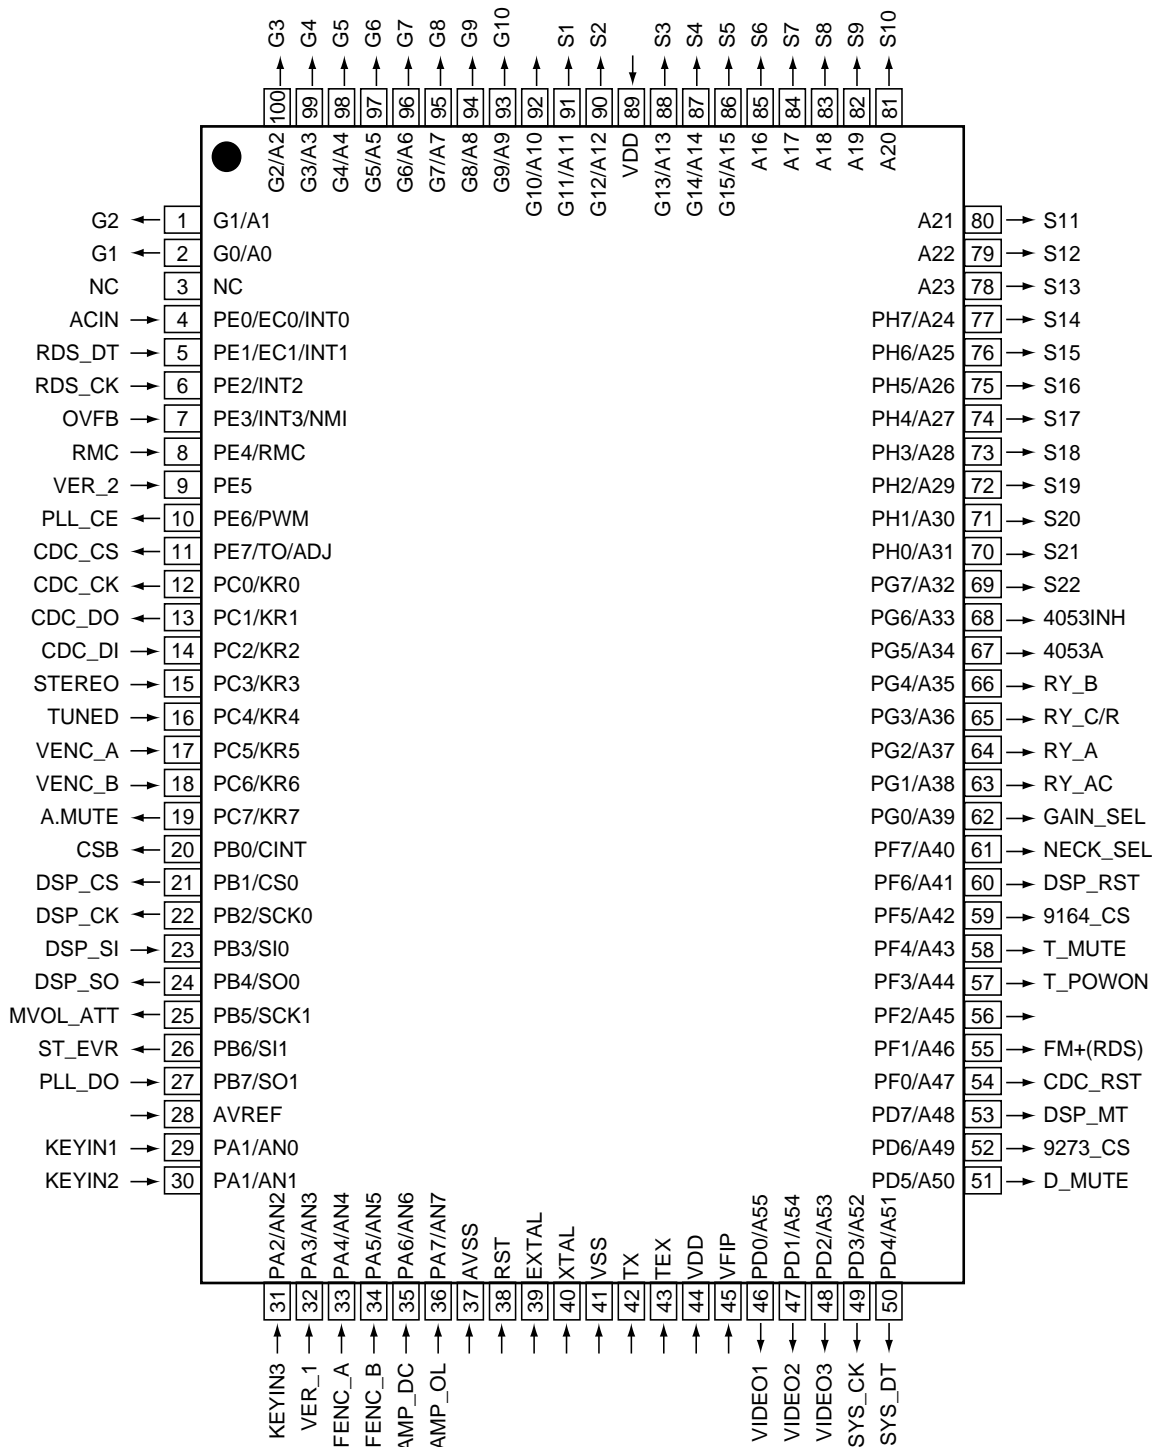

VSX-D510

● Pin Function

No.	Pin Name	I/O	Pin Function	Active
1	G2	O	Grid output 2	H
2	G1	O	Grid output 1	H
3	NC	-	Connect to VDD	
4	ACIN	I	AC pulse input	
5	RDS_DT	I	Serial control DATA signal of RDS communication	
6	RDS_CK	I	Serial control CLOCK signal of RDS communication	
7	DIRLOCK	I	ERR/OVER input from CODEC	
8	RMC	I	Remote control signal input (no-carrier signal)	
9	VER_2	I	Destination switch 2	
10	PLL_CE	O	Chip select signal for communication with LC72131 (tuner)	H
11	CDC_CS	O	CODEC chip select	
12	CDC_CK	O	CODEC, TC9164 control clock	
13	CDC_DO	O	CODEC, TC9164 control data output	
14	CDC_DI	I	Data input from CODEC	
15	STEREO	I	Stereo/Monoral signal judgment signal	
16	TUNED	I	TUNED information	
17	ENC_A	I	EVOL Rotary encoder signal input A	
18	ENC_B	I	EVOL Rotary encoder signal input B	
19	AMUTE	O	Audio mute	L
20	CSB	O	Chip select for control of YSS912 sub DSP	L
21	DSP_CS	O	Chip select for control of YSS912 main DSP	L
22	DSP_CK	O	Clock signal for communication with YSS912	H
23	DSP_SI	I	DATA input signal for communication with YSS912	
24	DSP_SO	O	DATA output signal for communication with YSS912	H
25	MVRATT	O	ATT control of master volume (L : Less than -15dB)	H
26	ST_EVR	O	Strobe signal for communication with electric volume IC	H
27	PLL_DO	I	Data input signal for communication with LC72131 (tuner)	
28	AVref	-	Connect to VDD	
29	KEYIN1	I	Key input A/D conversion port 1	
30	KEYIN2	I	Key input A/D conversion port 2	
31	KEYIN3	I	Key input A/D conversion port 3	
32	VER_1	I	Destination switch (A/D input)	
33	FENC_A	I	FUNC Rotary encoder signal input A	
34	FENC_B	I	FUNC Rotary encoder signal input B	
35	AMP_DC	I	DC abnormality detection of protection circuit (L : Abnormality detection)*	L
36	AMP_OL	I	Over-load detection of protection circuit (L : Abnormality detection)*	L
37	AVSS	-	Connect to VSS	
38	RST	-	Reset	
39	EXTAL	-	Connect to the oscillator (7.2MHz)	
40	XTAL	-		
41	VSS	-	Connect to VSS	
42	TX	-	Open	
43	TEX	-	Connect to VSS	
44	VDD	-	+5V	
45	VFDP	-	-30V	
46	VIDEO1	O	NJM2296D control	H
47	VIDEO2			
48	VIDEO3			
49	SYS_DT	O	Data signal for communication with M62446, TC9163, TC9164 and PLL	H
50	SYS_CK	O	Clock signal for communication with M62446, TC9163, TC9164 and PLL	H


*: To FL "PowerOFF" When displayed, it is the case where DC is in the output of AMP.
 To FL "OVER LOAD" When displayed, it is the case where the output of AMP is Over-load.

No.	Pin Name	I/O	Pin Function	Active
51	D_MUTE	O	Digital mute (Not used)	H
52	9273_CS	O	TC9273 Chip select	H
53	DSP_MT	O	DSP mute (ASSY mute)	H
54	CDC_RST	O	CODEC reset	H
55	FM+(RDS)	O	Tr switch ON/OFF for power supply of RDS decoder (L : AM, power OFF , H : Other)	H
56	Not used	-		
57	T_POWON	O	Tuner module ON/OFF (North America model only)	H
58	T_MUTE	O	Tuner mute	H
59	9164_CS	O	TC9163, TC9164 Chip select	
60	DSP_RST	O	YSS912 reset	
61	NECK_SEL	O	5.1ch, surround mode and A+B Stereo : H / Stereo : L	
62	GAIN_SEL	O	Gain select (5.1ch and Stereo of analog input : H)	H
63	RY_AC	O	AC relay ON/OFF	H
64	RY_A	O	Speaker A relay ON/OFF	H
65	RY_C/R	O	Rear/Center Speaker relay ON/OFF	H
66	RY_B	O	Speaker B relay ON/OFF	H
67	4053A	O	Component terminal control	H
68	4053INH	O	Component terminal control	H
69	S22	O	Segment output 22	H
70	S21		Segment output 21	
71	S20		Segment output 20	
72	S19		Segment output 19	
73	S18		Segment output 18	
74	S17		Segment output 17	
75	S16		Segment output 16	
76	S15		Segment output 15	
77	S14		Segment output 14	
78	S13		Segment output 13	
79	S12		Segment output 12	
80	S11		Segment output 11	
81	S10		Segment output 10	
82	S9		Segment output 9	
83	S8		Segment output 8	
84	S7		Segment output 7	
85	S6		Segment output 6	
86	S5		Segment output 5	
87	S4		Segment output 4	
88	S3		Segment output 3	
89	VDD	-	5V	
90	S2	O	Segment output 2	H
91	S1		Segment output 1	
92	Not used	O	Not used (Fixed Vfdp)	
93	G10	O	Grid output 10	H
94	G9		Grid output 9	
95	G8		Grid output 8	
96	G7		Grid output 7	
97	G6		Grid output 6	
98	G5		Grid output 5	
99	G4		Grid output 4	
100	G3		Grid output 3	

■ M62446FP (D.D & INPUT ASSY : IC103)

• Sound Controller IC (Volume and Tone Control)

● Block Diagram

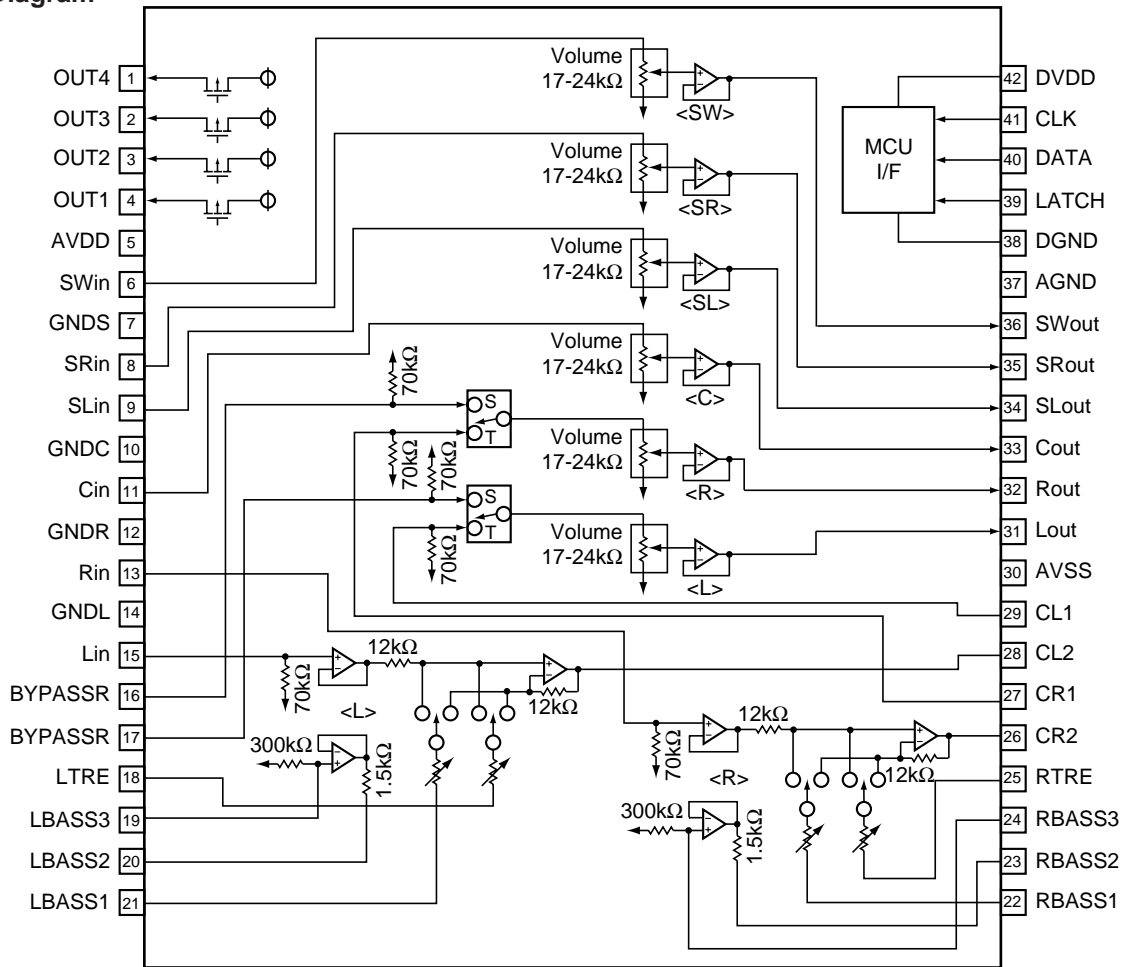

● Pin Function


No.	Pin Name	Function
1	OUT4	Output port (open drain of PchTr)
2	OUT3	
3	OUT2	
4	OUT1	
5	AVDD	Analog positive power supply port
7	GND	GND (connect to analog ground)
10	GND	
12	GND	
14	GND	
6	SWin	Volume input
8	SRin	
9	SLin	
11	Cin	Volume output
36	SWout	
35	SRout	
34	SLout	
33	Cout	TONE input
13	Rin	
15	Lin	L and R Volume input at bypass
16	BYPASSR	
17	BYPASSL	
31	Lout	L output
32	Rout	R output

No.	Pin Name	Function
18	LTRE	TONE TREBLE frequency control port
25	RTRE	
19	LBASS3	TONE BASS frequency control port
24	RBASS3	
20	LBASS2	
23	RBASS2	
21	LBASS1	
22	RBASS1	
26	CR2	TONE output port
28	CL2	L and R volume input
27	CR1	
29	CL1	L output
31	Lout	
32	Rout	R output
30	AVSS	Analog negative power supply port
37	AGND	Analog ground port
38	DGND	Digital ground port
39	LATCH	Latch input port
40	DATA	Data input port
41	CLK	Clock input port for data transmission
42	DVDD	Digital power supply port

■ W24257AJ-12 (D.D & INPUT ASSY : IC1301)

- 32K × 8 High-Speed CMOS Static RAM

● Block Diagram

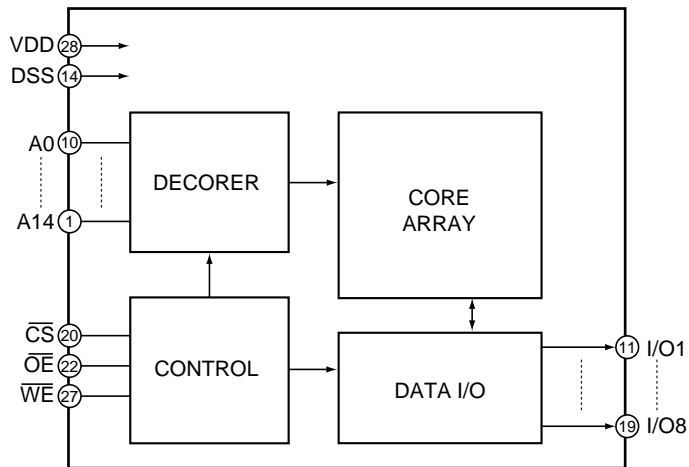


● Pin Function

No.	Pin Name	Function
1	A14	Addresses Inputs
2	A12	
3	A7	
4	A6	
5	A5	
6	A4	
7	A3	
8	A2	
9	A1	
10	A0	
11	I/O1	Data Inputs/Outputs
12	I/O2	
13	I/O3	
14	I/O4	
15	I/O5	
16	I/O6	
17	I/O7	
18	I/O8	
19	I/O8	
20	CS	Chip Select Input
22	OE	Output Enable Input
27	WE	Write Enable Input
28	Vdd	Power Supply
14	Vss	Ground

■ TC9273F-007 (D.D & INPUT ASSY : IC101)

- Analog Switch Array

● Block Diagram

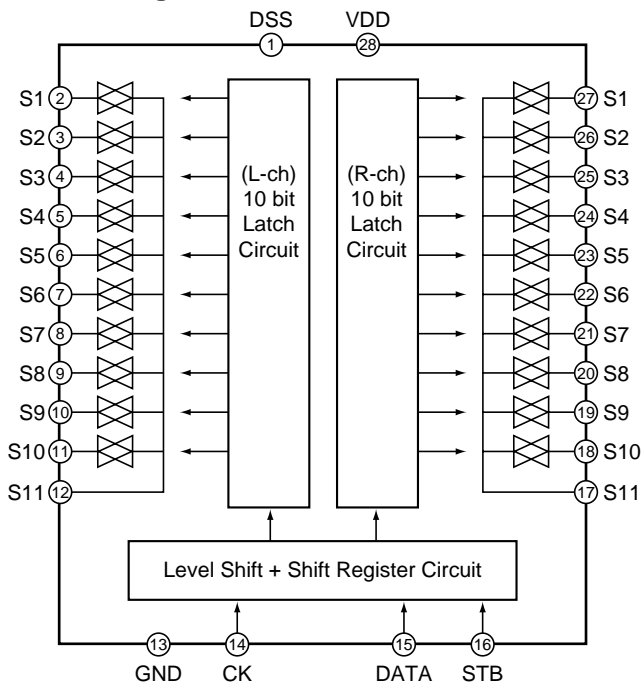

● Pin Function


No.	Pin Name	Function
1	VSS	Input and Output
2, 27	S1	
3, 26	S2	
4, 25	S3	
5, 24	S4	
6, 23	S5	
7, 22	S6	
8, 21	S7	
9, 20	S8	
10, 19	S9	
11, 18	S10	
12, 17	S11	
13	GND	Digital Ground
14	CK	Clock Input
15	DATA	Data Input
16	STB	Strobe Input
28	VDD	Plus Power Supply

7.2.2 DISPLAY


■ XAV3010 (FRONT ASSY : V401)

• FL DISPLAY


• Pin Assignment

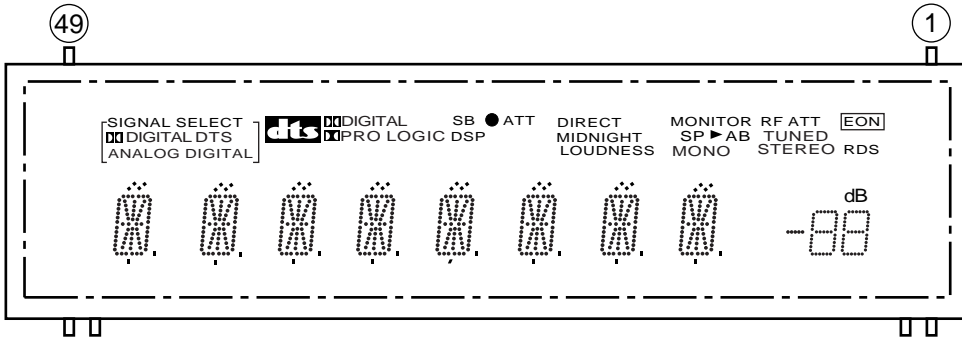

• Grid Assignment

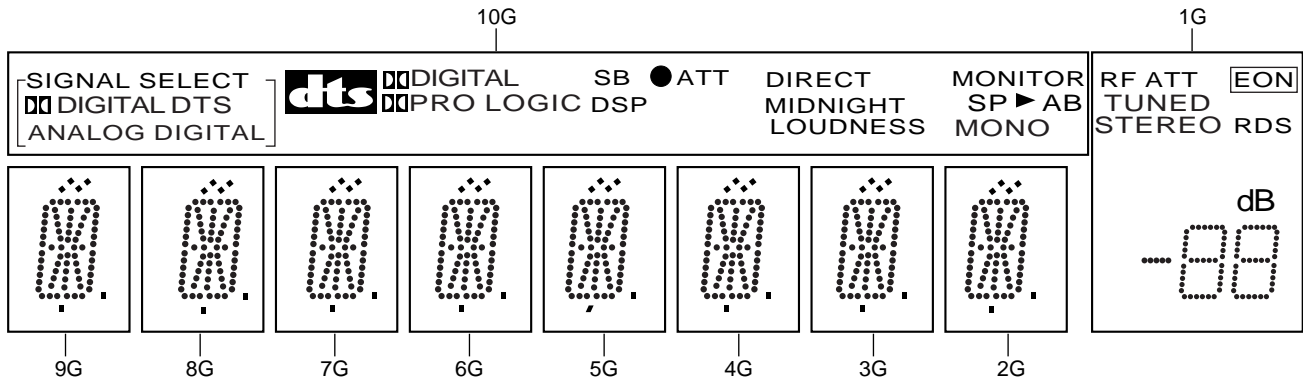

• Segment Designation

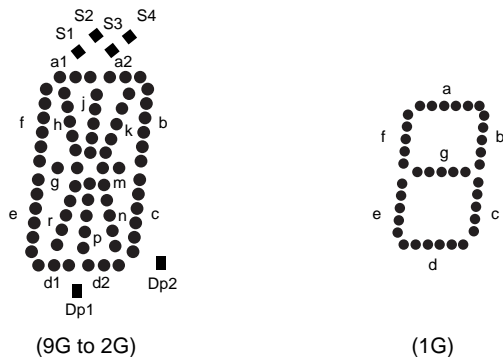

• Pin Connection

Pin No.	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25
Connection	F2	F2	NP	NP	P22	P21	P20	P19	P18	P17	P16	P15	P14	P13	P12	P11	P10	P9	P8	P7	P6	P5	P4	P3	P2
Pin No.	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
Connection	P1	NX	NX	NX	NX	NX	NX	NX	NX	NX	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G	NP	NP	F1	F1	

- NOTE
- 1) F1, F2..... Filament
 - 2) NP..... No pin
 - 3) NX..... No extend pin
 - 4) DL..... Datum Line
 - 5) 1G to 10G..... Grid
 - 6) Field of vision is a minimum of 29° from the lower side.


• Anode Connection

	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	MONO	a1	a1	a1	a1	a1	a1	a1	a1	dB
P2	B	a2	a2	a2	a2	a2	a2	a2	a2	2a
P3	A	h	h	h	h	h	h	h	h	2b
P4	SP ►	j	j	j	j	j	j	j	j	2f
P5	MONITOR	k	k	k	k	k	k	k	k	2g
P6	LOUDNESS	b	b	b	b	b	b	b	b	2c
P7	MIDNIGHT	f	f	f	f	f	f	f	f	2e
P8	DIRECT	m	m	m	m	m	m	m	m	2d
P9	—	g	g	g	g	g	g	g	g	1a
P10	ATT	c	c	c	c	c	c	c	c	1b
P11	●	e	e	e	e	e	e	e	e	1f
P12	DSP	r	r	r	r	r	r	r	r	1g
P13	SB	p	p	p	p	p	p	p	p	1c
P14	PRO LOGIC	n	n	n	n	n	n	n	n	1e
P15	DIGITAL	d1	d1	d1	d1	d1	d1	d1	d1	1d
P16	ds	d2	d2	d2	d2	d2	d2	d2	d2
P17	ANALOG	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	RDS
P18	DIGITAL	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	RF ATT
P19	[]	S1	S1	S1	S1	S1	S1	S1	S1	EON
P20	DTS	S4	S4	S4	S4	S4	S4	S4	S4	<input type="checkbox"/>
P21	DIGITAL	S2	S2	S2	S2	S2	S2	S2	S2	TUNED
P22	SIGNAL SELECT	S3	S3	S3	S3	S3	S3	S3	S3	STEREO

8. PANEL FACILITIES AND SPECIFICATIONS


8.1 PANEL FACILITIES

Front Panel

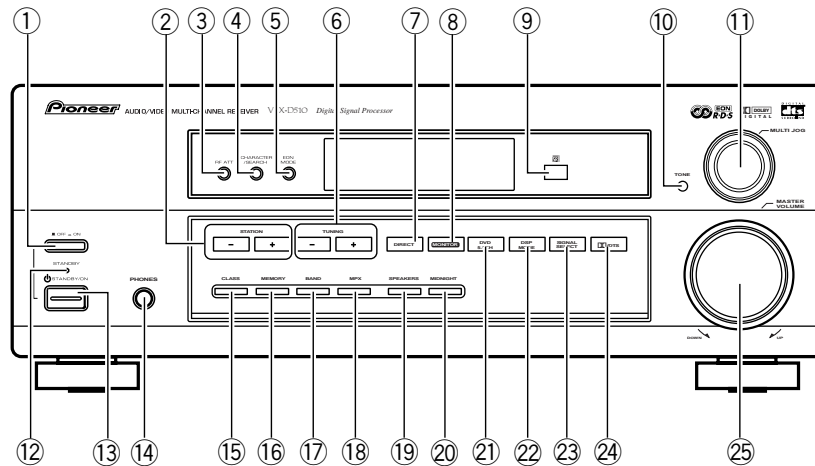

- ① **■ OFF/ \blacksquare ON (Main power) button**
If the button is OFF (■), the power of the receiver is shut off and the **STANDBY/ON** button (⑬) on the receiver or the remote control do not function. Pressing the button again will turn the receiver ON (\blacksquare) and the receiver enters the standby mode. In the standby mode, you can turn on the receiver using the **STANDBY/ON** button (⑬) on the receiver or the remote control.
- ② **STATION (+/-) buttons**
Selects station memories when using the tuner.
- ③ **RF ATT button**
Use to lower the input level of a radio signal that is too powerful or contain interference thus causing the receiver to distort
- ④ **CHARACTER/SEARCH button**
Use to search for different program types in RDS mode. It is also used to input station names.
- ⑤ **EON MODE button**
Use to search for different programs that are transmitting traffic or news information (this search method is called EON).
- ⑥ **TUNING buttons**
Selects the frequency when using the tuner.
- ⑦ **DIRECT button**
Use to switch DIRECT playback on or off. This mode bypasses the tone controls and channel levels for the most accurate reproduction of a source.
- ⑧ **MONITOR button**
Press to switch tape monitoring on/off.
- ⑨ **Remote sensor**
Receives the signals from the remote control.
- ⑩ **TONE button**
Press this button to access the bass and treble controls, which you can then adjust with the **MULTI JOG** dial.
- ⑪ **MULTI JOG DIAL**
The **MULTI JOG** dial performs a number of tasks. Use it to select the function (like DVD or CD) that you want to play. You can also use it, after pressing the **TONE** button to increase or decrease the amount of bass or treble.
- ⑫ **STANDBY indicator**
Lights when the receiver is in standby mode (note that the receiver consumes a small amount of power (1W) in standby mode).
- ⑬ **⏻ STANDBY/ON button**
Switches the receiver between on and standby.(note that the receiver consumes a small amount of power (1W) in standby mode).
- ⑭ **PHONES jack**
Use to connect headphones. (Use the **SPEAKER** button to turn off the speakers if you want to mute the sound from the speakers.)
- ⑮ **CLASS button**
Switches between the three banks (classes) of station memories.
- ⑯ **MEMORY button**
Press to memorize a station for recall using the **STATION (+/-)** buttons.
- ⑰ **BAND button**
Switches between station AM and FM radio bands.
- ⑱ **MPX button**
If there is interference or noise during a FM radio broadcast, or the radio reception is weak, press the **MPX** button to switch the receiver into mono reception mode. This should improve the sound quality and allow you to enjoy the broadcast.
- ⑲ **SPEAKER button**
Use to switch the speaker system between **A** (on) and **off**.
- ⑳ **MIDNIGHT button**
Use when listening to movie soundtracks at low volume. This feature will enable you to hear quiet sounds and not get jolted by loud or sudden sound effects.
- ㉑ **DVD 5.1ch button**
Use this button to switch between a DVD player hooked up to the digital inputs and a 5.1 ch external decoder hooked up to the 5.1 ch analog inputs.
- ㉒ **DSP MODE button**
Use to switch between the various DSP modes available (**HALL 1, HALL 2, JAZZ, DANCE, THEATER 1, THEATER 2**) and **DSP off**. Use to create different surround sound effects from any stereo source.
- ㉓ **SIGNAL SELECT button**
Use to select between an analog or digital signal.
- ㉔ **DD /DTS button**
Use to switch between the various Dolby/DTS surround modes.
- ㉕ **MASTER VOLUME**
Use to set the overall listening volume.

Display

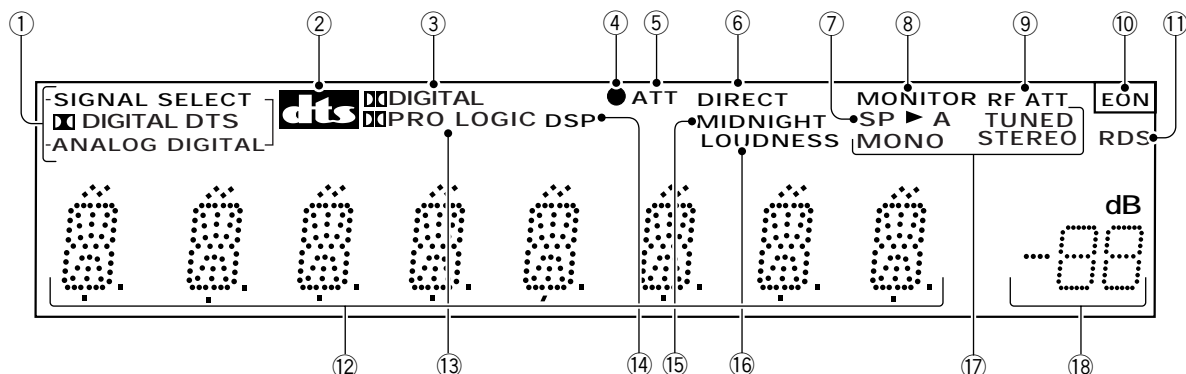

① SIGNAL SELECT indicators

Lights to indicate the type of input signal assigned for the current component :

DIGITAL : Lights when a DOLBY DIGITAL signal is played.

DTS : Lights when a source with DTS audio signals is played.

ANALOG : Lights when an analog signal is selected.

DIGITAL : Lights when a digital audio signal is selected.

② DTS indicator

Lights when DTS mode is being used.

③ DIGITAL indicator

When the **DIGITAL** (DOLBY)/DTS mode of the receiver is on, this lights to indicate playback of a Dolby Digital signal. However, **PRO LOGIC** lights during two channel playback of Dolby Digital.

④ OVERLOAD indicator

This lights when an analog signal is too high (the SIGNAL SELECT would have to be on ANALOG). It indicates the sound is distorting and the input signal should be reduced.

⑤ ATT indicator

Lights when ATT is used to attenuate (reduce) the level of the input signal (can only be used in ANALOG mode).

⑥ DIRECT indicator

Lights when source DIRECT is in use. This function bypasses all tone, balance, DSP and Dolby Surround effects.

⑦ SPEAKER indicator

Shows if the speaker system is on or not. SP ► A means speakers are switched on. SP ► means speakers are switched off.

⑧ MONITOR indicator

Lights when **MONITOR** is selected. Used to hear a recording as it's being made .

⑨ RF ATT indicator

Lights when the **RF ATT** is on .

⑩ EON indicator

The box around **EON** indicator lights to inform you that the currently tuned station carries the EON data service. When the EON mode is set, the **EON** indicator lights, but during actual reception of an EON broadcast the **EON** indicator will flash. An empty box in the **EON** indicator spot means it is possible to pick up an EON broadcast but the receiver has not been set to do so (this will only appear when RDS is switched on).

⑪ RDS indicator

Lights when an RDS broadcast is received.

⑫ CHARACTER display

Shows the radio frequency or function (DVD/LD, CD, etc.) receiver is using.

⑬ PRO LOGIC indicator

When the **DIGITAL** (DOLBY)/DTS mode of the receiver is on, this lights to indicate playback of a two channel source.

⑭ DSP indicator

Lights when any Advanced Theater or DSP mode is selected.

⑮ MIDNIGHT indicator

Lights when MIDNIGHT listening mode is in use.

⑯ LOUDNESS indicator

Lights when the LOUDNESS is on. Use to boost the bass and treble at low volume.

⑰ TUNER indicators

MONO:

Lights when the mono mode is set using the **MPX** button.

TUNED:

Lights when a broadcast is being received.

STEREO:


Lights when a stereo FM broadcast is being received in auto stereo mode.

⑱ MASTER VOLUME LEVEL

Shows the overall volume level. Volume level is maintained even when the power is off. **---dB** indicates the minimum level, and **0dB** indicates the maximum level.

- Depending on the level settings you make for individual channels, the MAX level can range between -10dB and 0dB .

Remote Control

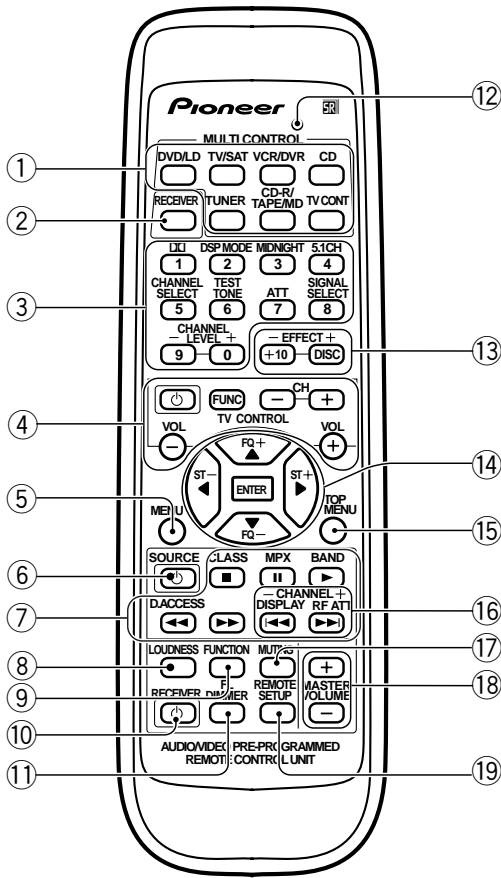

① **MULTI CONTROL buttons**

Use to put the receiver/remote control in the stated mode. For other equipment controls, see Controlling the Rest of Your System on .

② **RECEIVER button**

Use this button when setting up the surround sound for the receiver.

③ **NUMBER/MODE buttons**

Use the number buttons to select the radio frequency in tuner DIRECT ACCESS mode or the tracks in CD, DVD mode etc.

Also, buttons marked with the following names have special functions. If you try to use one of these functions but the display flashes it means that function cannot be used in the current mode (for example DSP modes cannot be used when 5.1 CH setting is on).



Use to put receiver in DOLBY DIGITAL, DOLBY SURROUND and DTS modes. To use first press the **RECEIVER** button then operate this button.

DSP MODE

Use to put receiver in one of the DSP modes. To use first press the **RECEIVER** button then operate this button.

MIDNIGHT

Use to put receiver in MIDNIGHT mode. To use first press the **RECEIVER** button then operate this button.

5.1 ch

When the DVD/LD or DVD 5.1 CH function is selected each press switches the DVD/LD input between DVD/LD and DVD 5.1 CH. To use first press the **RECEIVER** button then operate this button.

CHANNEL SELECT

Use to select a speaker when setting up the surround sound of the receiver. To use first press the **RECEIVER** button then operate this button.

TEST TONE

Use to sound the TEST TONE when setting up the surround sound of the receiver. To use first press the **RECEIVER** button then operate this button.

ATT

If the Overload indicator lights often, use to attenuate (lower) the level of an analog input signal to prevent distortion. To use, press the **RECEIVER** button first, then press this button.

CHANNEL LEVEL +/-

Use to set up the levels of the surround sound of the receiver. To use first press the **RECEIVER** button then operate this button.

SIGNAL SELECT

Use to select the proper signal (analog, digital) for the source you are inputting. To use first press the **RECEIVER** button then operate this button.

④ **THE FOLLOWING FOUR SETS OF BUTTONS ARE DEDICATED TV CONTROL. THEY ARE ONLY USED FOR CONTROLLING YOUR TV.**

TV FUNC button

Use select the TV function.

TV (POWER) button

Use to turn on the power of the TV.

TV CH +/- buttons

Use to change channels on your TV.

TV VOL +/- buttons

Use to adjust the volume on your TV.

⑤ **MENU button**

Use to access different menus associated with your DVD player. To use first press the **DVD/LD** button then operate this button.

⑥ **SOURCE button**

Use to turn on/off the components connected to the receiver. To use first press the **MULTI CONTROL** buttons then operate this button.

⑦ **THE FOLLOWING BUTTONS ARE BOTH CONTROLS FOR OTHER COMPONENTS (LIKE A DVD PLAYER) AND DEDICATED TUNER CONTROLS. THE TUNER CONTROLS ARE EXPLAINED HERE. YOU CAN USE THEM AFTER YOU HAVE PUSHED THE TUNER MULTI CONTROL BUTTON.**

CLASS button

Use to switch between the three banks (classes) of station memories.

MPX button

Use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to MONO will improve the sound quality. Also, this is the pause button for CDs, tapes, DVDs, etc.

BAND button

Use to switch between the AM and FM band when in TUNER mode.

D. ACCESS button


Use to directly access a radio station by pressing the number of the station you want.

⑧ **LOUDNESS button**

Use to switch on the loudness. This feature is useful for getting good bass and treble sounds listening at low volumes.

⑨ **FUNCTION button**

Use to select the playback or recording source. This button lets you cycle through the different functions of the receiver in the following order: CD, tuner, CDR/TAPE/MD, VCR/DVR, DVD/LD, DVD 5.1 CH., and TV/SAT.

⑩ **RECEIVER  (POWER) button**

This switches between STANDBY mode and power ON for this receiver.

⑪ **FL DIMMER button**

Use this button to make the fluorescent display (FL) dimmer or brighter. There are three brightness settings as well as an off setting.

⑫ **LED DISPLAY**

This display flashes when a command is sent from the remote control to the receiver. It also flashes at other times, for example when teaching the receiver preset codes with specific meanings.

⑬ **EFFECT +/- buttons**

Use to add or subtract the amount of effect in different DSP sound modes or advanced listening modes. To use first press the **RECEIVER** button then operate this button.

⑭ **  (ST +/-)   (FQ +/-) & ENTER buttons**

Use these arrow buttons when setting up your surround sound system. These buttons are also used to control DVD menus/options and for deck 1 of a double cassette deck player. The **FQ +/-** buttons can be used to find radio frequencies. The **ST +/-** buttons can be used to select the stations of memorized radio frequencies.

⑮ **TOP MENU button**

In DVD mode this button brings you to the top or most fundamental menu.

⑯ **CHANNEL +/- buttons (DISPLAY, RF ATT)**

Use to select the stations of memorized radio frequencies. Also use to skip tracks backward or forward on CDs, DVDs, etc. Also use to display the **RDS** information (**DISPLAY**) and use to lower the input level of a radio signal (**RF ATT**).

⑰ **MUTING button**

Use to mute the sound or restore the sound if it has been muted.


⑱ **MASTER VOLUME +/- buttons**

Use to set the overall listening volume.

⑲ **REMOTE SETUP button**

Use this button when setting up the remote control to control other components.

Rear Panel

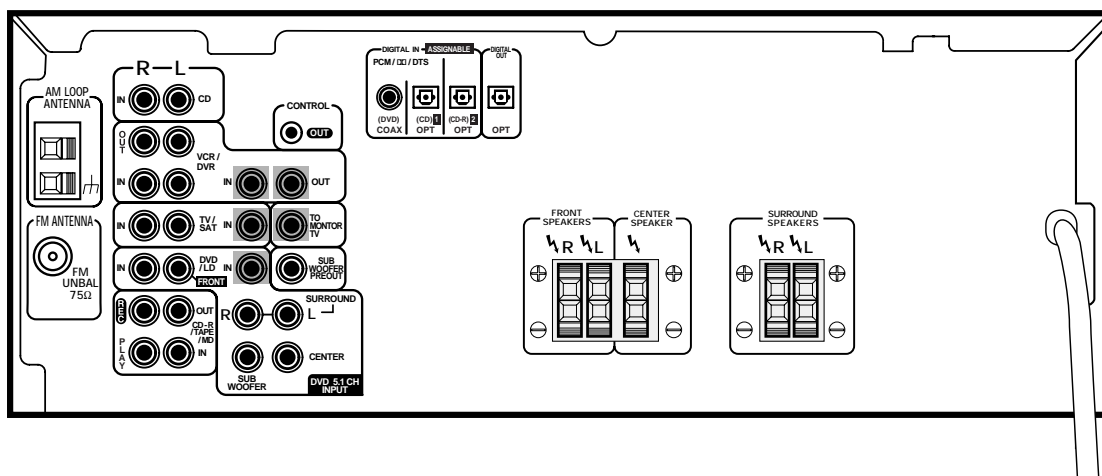

8.2 SPECIFICATIONS

Amplifier Section

Continuous Power Output (STEREO MODE)
FRONT 80 W + 80 W (DIN 1 kHz, THD 1.0 %, 8 Ω)

Continuous Power Output (SURROUND MODE)
FRONT 80 W/ch (1 kHz, THD 1.0 %, 8 Ω)
CENTER 80 W (1 kHz, THD 1.0 %, 8 Ω)
SURROUND 80 W/ch (1 kHz, THD 1.0 %, 8 Ω)

- Above specifications are applicable when the power supply is 230V.

Input (Sensitivity/Impedance)
CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT
..... 200 mV/47 kΩ

Frequency Response
CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT
..... 5 Hz to 100,000 Hz $^{+0}_{-3}$ dB

Output (Level/Impedance)
VCR/DVR REC, CD-R/TAPE/MD REC
..... 200 mV/2.2 kΩ

Tone Control
BASS ± 6 dB (100 Hz)
TREBLE ± 6 dB (10 kHz)
LOUDNESS +9 dB/+9 dB (100 Hz/10 kHz)

Signal-to-Noise Ratio
[DIN (Continuous rated power output/50 mW)]
CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT
..... 88 dB/64 dB

VIDEO Section

Input (Sensitivity/Impedance)
VCR/DVR, DVD/LD, TV/SAT 1 Vp-p/75 Ω

Output (Level/Impedance)
VCR/DVR 1 Vp-p/75 Ω

Frequency Response
VCR/DVR, DVD/LD, TV/SAT → MONITOR
..... 5 Hz to 7 MHz $^{+0}_{-3}$ dB

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

FM Tuner Section

Frequency Range 87.5 MHz to 108 MHz
Usable Sensitivity
..... Mono:13.2 dBf, IHF (1.3 μV/ 75 Ω)
50 dB Quieting Sensitivity Mono: 20.2 dBf
Stereo: 38.6 dBf
Signal-to-Noise Ratio Mono: 73 dB (at 85 dBf)
Stereo: 70 dB (at 85 dBf)
Signal-to-Noise Ratio (DIN) Mono: 62 dB
Stereo: 58 dB
Distortion Stereo: 0.5 % (1 kHz)
Alternate Channel Selectivity 60 dB (400 kHz)
Stereo Separation 40 dB (1 kHz)
Frequency Response 30 Hz to 15 kHz (±1dB)
Antenna Input (DIN) 75 Ω unbalanced

AM Tuner Section

Frequency Range 531 kHz to 1,602 kHz
Sensitivity (IHF Loop antenna) 350 μV/m
Selectivity 30 dB
Signal-to-Noise Ratio 50 dB
Antenna Loop antenna

Miscellaneous

Power Requirements
UK model AC 230 V, 50/60 Hz
European model AC 220 – 230 V, 50/60 Hz
Power Consumption 220 W
In Standby 1 W
Dimensions 420 (W) x 158 (H) x 391 (D) mm
Weight (without package) 8.7 kg

Furnished Parts


AM loop antenna 1
FM wire antenna 1
Dry cell batteries (AA size IEC R6P) 2
Remote control 1
Operating instructions 1

NOTE:


- Specifications and the design are subject to possible modifications without notice, due to improvements.

"DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. Manufactured under license from Digital Theater Systems, Inc.


Accessories

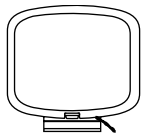


AM loop antenna
(ATB7009)



FM wire antenna
(ADH7005)



AA size IEC R6P
Dry cell batteries (x2)

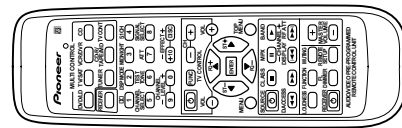

Remote control unit
(AXD7247)