

Service Manual

ORDER NO.
RRV1222

STEREO CD CASSETTE DECK RECEIVER

XR-P350

XR-P250

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model		Power Requirement	The voltage can be converted by the following method.
	XR-P350	XR-P250		
MEXK/EA	○	○	AC220-230V	—
MEXK/EB	○	○	AC220-230V	—
MEZIXK/DI	○	○	AC220-230V	—
NBXX	○	○	AC230V	—
SD	○	—	AC110-115V/120-127V/220-230V/240V	With the voltage selector
S/DF	○	—	AC110-115V/120-127V/220-230V/240V	With the voltage selector
SL	○	—	AC110-115V/120V/220-230V/240V	With the voltage selector
YPW	○	—	AC240V	—

● For the following: XR-P350/MEXK/EB, MEZIXK/DI, NBXX, SD, S/DF, SL and YPW; XR-P250/MEXK/EA, MEXK/EB, MEZIXK/DI and NBXX, refer to page 104.

CONTENTS

1. SAFETY INFORMATION	2	8. SCHEMATIC AND PCB CONNECTION	
2. SPECIFICATIONS	3	DIAGRAMS	30
3. PANEL FACILITIES	4	9. ADJUSTMENTS	79
4. DISASSEMBLY	7	10. FL INFORMATION	97
5. EXPLODED VIEWS, PACKING AND		11. IC INFORMATION	99
PARTS LIST	9	12. FOR XR-P350/MEXK/EB, MEZIXK/DI, NBXX,	
6. PCB PARTS LIST	22	SD, S/DF, SL, YPW, XR-P250/MEXK/EA,	
7. BLOCK DIAGRAM	27	MEXK/EB, MEZIXK/DI AND NBXX	104

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801, U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2, Canada

PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 580-9911

© **PIONEER ELECTRONIC CORPORATION 1995**

T-DFG FEB. 1995 Printed in Japan

1. SAFETY INFORMATION

(FOR EUROPEAN MODEL ONLY)

VARO!

AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.



LASER
Kuva 1
Lasersäteilyr
varoitusemkki

WARNING!

DEVICE INCLUDES LASER DIODE WHICH EMITS INVISIBLE INFRARED RADIATION WHICH IS DANGEROUS TO EYES. THERE IS A WARNING SIGN ACCORDING TO PICTURE 1 INSIDE THE DEVICE CLOSE TO THE LASER DIODE.



LASER
Picture 1
Warning sign for
laser radiation

ADVARSEL:

USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UNDGÅ UDSÆTTELSE FOR STRÅLING.

VARNING:

OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD BETRÄKTA EJ STRÅLEN.

IMPORTANT

THIS PIONEER APPARATUS CONTAINS LASER OF CLASS 1. SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUMENTED PERSON.

LASER DIODE CHARACTERISTICS

MAXIMUM OUTPUT POWER: 5 mW
WAVELENGTH: 780 - 785 nm

LABEL CHECK




MEXK/EA, MEXK/EB, NBXK, MEZIXK/DI, SL and YPW types



MEXK/EA, MEXK/EB, NBXK, and MEZIXK/DI types



SL and YPW types

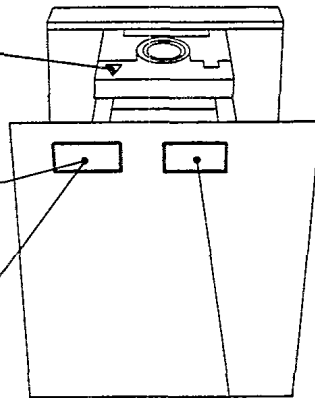

Additional Laser Caution

1. Laser Interlock Mechanism

The position of the switch (S601) for detecting loading state is detected by the system microprocessor, and the design prevents laser diode oscillation when the switch (S601) is not on CLMP terminal side (CLMP signal is OFF or high level.) Thus, the interlock will no longer function if the switch (S601) is deliberately set to CLMP terminal side. (low level)

The interlock also does not function in the test mode*. Laser diode oscillation will continue, if pin 1 of M51593FP (IC101) on the PRE-AMP BOARD ASSY mounted on the pickup assembly is connected to GND, or pin 19 is connected to low level (ON), or else the terminals of Q101 are shorted to each other (fault condition).

2. When the cover is opened, close viewing of the objective lens with the naked eye will cause exposure to a Class 1 laser beam.

*92S1B

* Refer to page 89.

<p>ADVARSEL USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.</p> <p>VARO! Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.</p>	<p>VORSICHT! UNSIHTBARE LASER-STRÄHLUNG TRITZ AUS, WENN DECKEL(ODER KLAPPE)GEÖFFNET IST! NICHT DEM STRAHL AUSSETZEN!</p> <p>VARNING! Osynlig laserstråling när denna del är öppnad och spärren är urkopplad. Beträkta ej strålen.</p>
---	---

MEXK/EA and MEXK/EB types

<p>ADVARSEL USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.</p> <p>VORSICHT! UNSIHTBARE LASER-STRÄHLUNG TRITZ AUS, WENN DECKEL(ODER KLAPPE)GEÖFFNET IST! NICHT DEM STRAHL AUSSETZEN!</p>
--

<p>ADVARSEL! USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.</p> <p>VORSICHT! UNSIHTBARE LASER-STRÄHLUNG TRITZ AUS, WENN DECKEL(ODER KLAPPE)GEÖFFNET IST! NICHT DEM STRAHL AUSSETZEN!</p>

MEZIXK/DI type

<p>CAUTION INVISIBLE LASER RADIATION WHEN OPEN, AVOID EXPOSURE TO BEAM</p>

NBXK type

<p>CAUTION INVISIBLE LASER RADIATION WHEN OPEN, AVOID EXPOSURE TO BEAM</p>

SL and YPW types

2. SPECIFICATIONS

STEREO CD CASSETTE DECK RECEIVER

Amplifier Section

<XR-P350 / XR-P250>

[FRONT]

Continuous Power Output (DIN) 36 W + 36 W
(1 kHz, T.H.D. 1 %, 8 Ω)

Continuous Power Output (DIN MUSIC) 100 W + 100 W

● Above specifications are for when power supply is 230 V.

FM/AM Tuner Section

FM Tuner Section

Frequency Range 87.5 MHz to 108 MHz

Antenna Input 75 Ω unbalanced

AM Tuner Section

Frequency Range

With 9 kHz step 531 kHz to 1,602 kHz

Antenna Loop antenna

Miscellaneous

Power Requirements 230 V AC, 50/60 Hz (UK model)
AC 220 - 230 V AC, 50/60 Hz (European model)

Power Consumption

XR-P350 270 W

XR-P250 230 W

CD Section

Type Compact disc digital audio system

Wow and Flutter Limit of measurement
(± 0.001 % W.PEAK) or less (EIAJ)

Cassette Deck Section

Systems 4 track, 2-channel stereo

Heads Recording/playback head x 1
Playback head x 1
Erasing head x 1

Motor DC servo motor x 1

Tape Type TYPE I (Normal) tape/TYPE II (HIGH/CrO₂) tape

Dimensions 240 (W) x 270 (H) x 342 (D) mm

Weight (without package) 7.1 kg

Accessories

Operating Instructions 1

Remote Control Unit 1

FM T-type Antenna 1

AM Loop Antenna 1


Size AAA/R03 Dry Cell Batteries 2

Speaker Cords (included with speaker systems) 2

NOTE:

Specifications and design are subject to possible modifications without notice, due to improvements.

3. PANEL FACILITIES

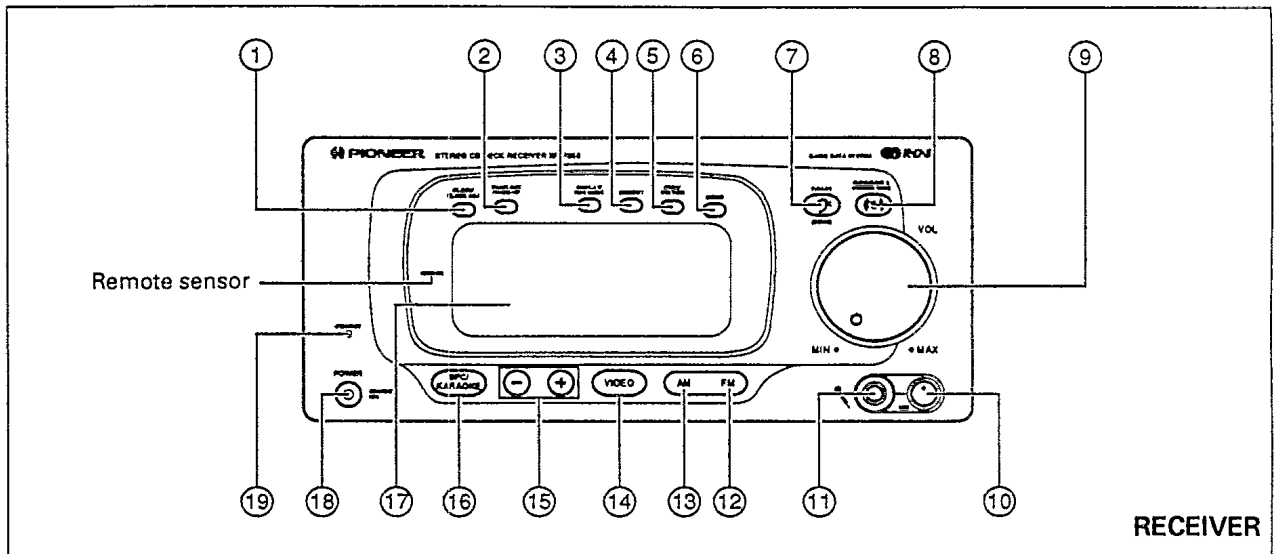

RECEIVER

- ① **CLOCK/CLOCK ADJ** button
- ② **TIMER REC/WAKE-UP** button
- ③ **DISPLAY/RDS MODE** button (XR-P350)
DISPLAY button (XR-P250)
- ④ **MEMORY** button
- ⑤ **FREQ/STATION** button
Each time this button is pressed, the mode changes between FREQUENCY and STATION.
- ⑥ **MONO** button
- ⑦ **P.BASS (DEMO)** button
Each time this button is pressed, the mode changes in the following sequence:


P.BASS 1	→	P.BASS 2
off	←	off
- ⑧ **SURROUND & STEREO WIDE** button (XR-P350)
STEREO WIDE button (XR-P250)
Each time this button is pressed, the mode changes in the following sequence:

STWIDE 1	→	STWIDE 2
off	←	off
- ⑨ **Volume control (VOL)**
- ⑩ **Mic level control (XR-P350 only)**
- ⑪ **Microphone jack (XR-P350 only)**
- ⑫ **FM** button
- ⑬ **AM** button
- ⑭ **VIDEO** button
- ⑮ **Tuning/station call (⊖, ⊕)** buttons
- ⑯ **SFC/KARAOKE** button (XR-P350)
SFC button (XR-P250)
Each time this button is pressed, the mode changes in the following sequence:
(XR-P350)

DISCO	→	HALL	→	MOVIE
off	←	KARAOKE	←	off

(XR-P250)

DISCO	→	HALL	→	MOVIE
off	←	off	←	off
- ⑰ **Display**
- ⑱ **POWER STANDBY/ON** switch
- ⑲ **STANDBY** indicator
This is the switch for electric power.
ON : When set to the ON position, power is supplied and the unit becomes operational.
STANDBY : When set to the STANDBY position, the main power flow is cut and the unit is no longer fully operational. A minute flow of power feeds the unit to maintain operation readiness. (The STANDBY indicator lights.)

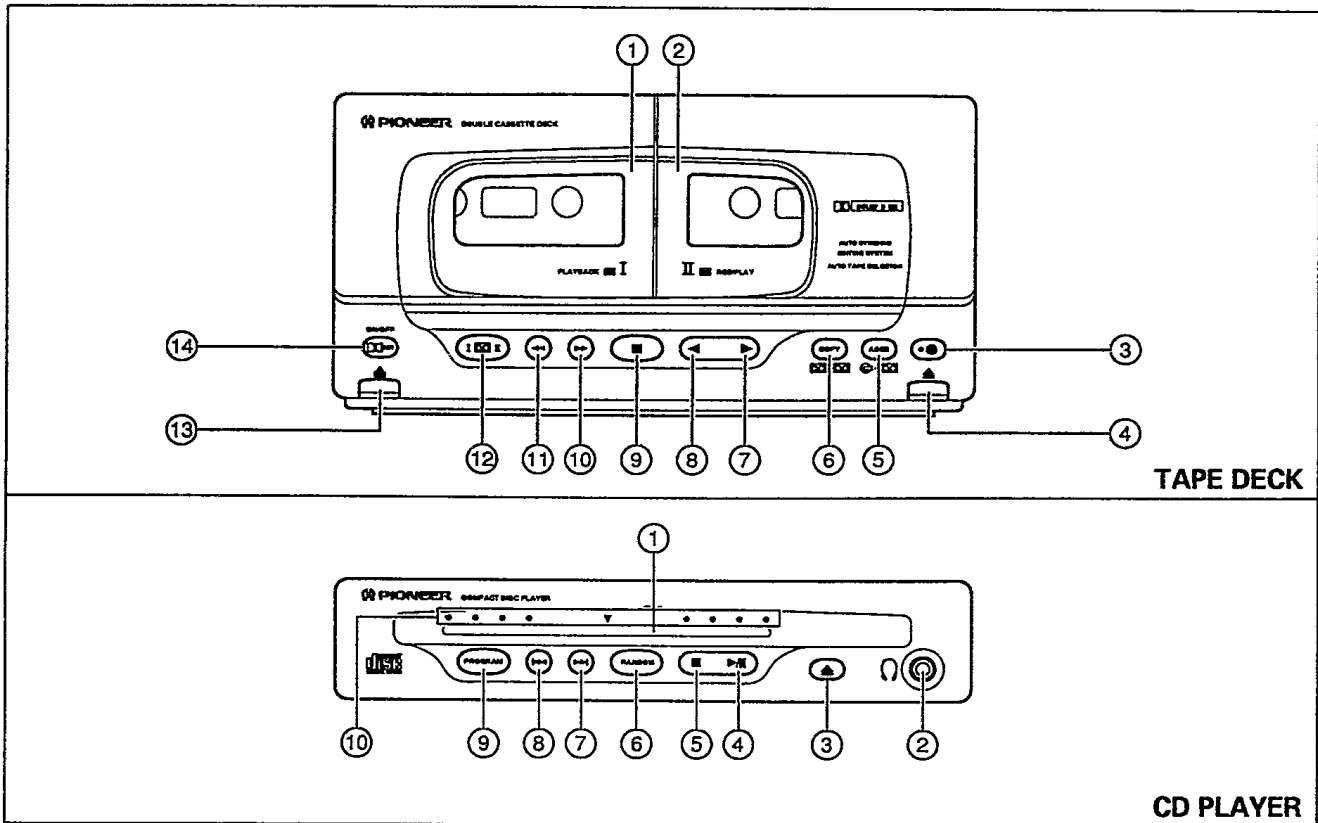

TAPE DECK

- ① TAPE I cassette door
- ② TAPE II cassette door
- ③ Rec standby button (●)
- ④ TAPE II Eject button (▲)
- ⑤ ASES (Auto Synchro Editing System) button
- ⑥ COPY button
- ⑦ Forward play button (▶)
- ⑧ Reverse play button (◀)
- ⑨ Stop button (■)
- ⑩ Fast forward button (▶▶)
- ⑪ Rewind button (◀◀)
- ⑫ TAPE I/II selector button
- ⑬ TAPE I Eject button (▲)
- ⑭ □□(DOLBY*) NR ON/OFF button

Each time this button is pressed, DOLBY NR system turns ON and OFF.

- *
 - Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
 - "DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

CD PLAYER


- ① Disc insert position
- ② Headphones jack
- ③ Eject button (▲)
- ④ Play/Pause button (▶/||)
- ⑤ Stop button (■)
- ⑥ RANDOM button
- ⑦ Forward Manual/Track search button (▶▶)
- ⑧ Reverse Manual/Track search button (◀◀)
- ⑨ PROGRAM button
- ⑩ Disc indicator

■ Auto Function

This model is equipped with "Auto Function" operation, so when the switch for PLAY/PAUSE, RANDOM, PLAY (tape), or FM and AM (AM/FM with remote control unit) is pressed, the function switches automatically. Use the FUNC button on the remote control unit to select the component connected to the VIDEO/AUX IN jacks, since Auto Function is not effective for this.

NOTE:

The function cannot be switched during recording and tape copying.

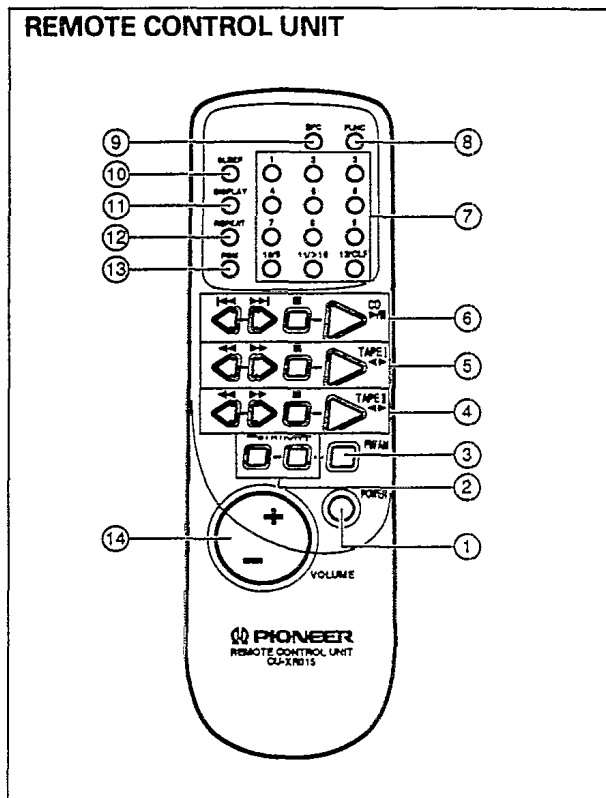

REMOTE CONTROL UNIT

① POWER button

② STATION - (down), + (up) buttons

Before operation, memorize broadcast stations with the STATION CALL buttons.

+ Stations change in order in the upward direction.
 - Stations change in order in the downward direction.

③ FM/AM band button

④ TAPE II operation buttons

: Playback
 Each time this button is pressed, the mode changes between forward and reverse playback.

: STOP (Stops tape transport)
 : FF (Fast forward)
 : REW (Rewinds the tape)

⑤ TAPE I operation buttons

: Playback
 Each time this button is pressed, the mode changes between forward and reverse playback.

: STOP (Stops tape transport)
 : FF (Fast forward)
 : REW (Rewinds the tape)

⑥ CD operation buttons

: Playback/Pause
 Each time this button is pressed, the mode changes between playback and pause.

: STOP
 : Track search

⑦ Number buttons

These buttons are used for selecting track numbers of a CD and for scanning preset stations.


⑧ FUNC button

Each time this button is pressed, the function changes in the following sequence:




⑨ SFC (SOUND FIELD CONTROL) button

Each time this button is pressed, the mode changes in the following sequence:



⑩ SLEEP button

Each time this button is pressed, the setting changes in the following sequence:



⑪ DISPLAY button

⑫ REPEAT button

⑬ PGM (PROGRAM) button

⑭ VOLUME + (up), - (down) buttons

Increases/decreases the sound volume of the unit.

4. DISASSEMBLY

CD SLOT-IN MECHANISM

1. Remove the two screws ① from the rear panel side and the two screws ② from the front panel side.
2. Remove the VOLUME knob and the screw ③. (Refer to Fig. 2)
(Please be careful as the STA. lens is in the VOLUME knob.)
3. Lift frame L and frame R from the rear panel side and remove them.
When removal is difficult, lightly push the rear panel and/or the front panel to the outside for the removal.

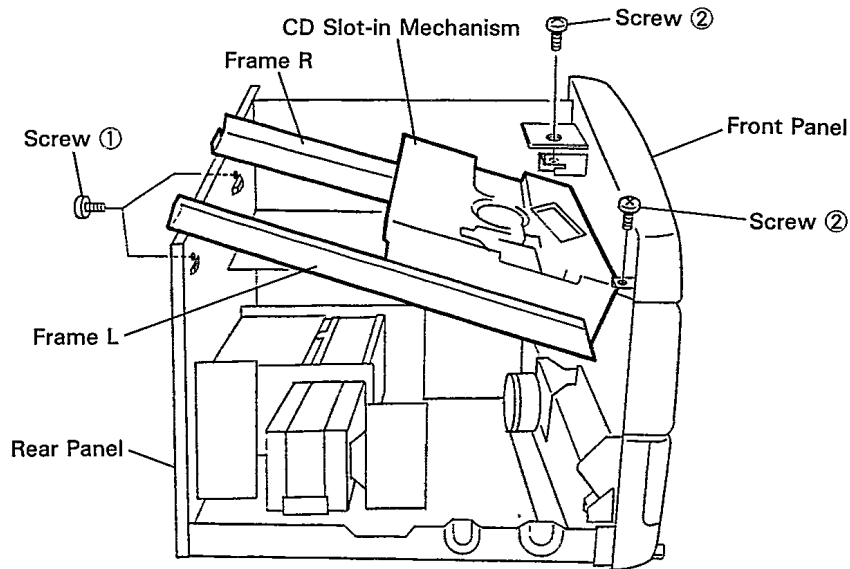


Fig. 1 Remove the CD Slot-in Mechanism

FRONT PANEL

1. Remove the CD slot-in mechanism.
2. Remove the two screws ① and the screw ②. (Refer to Fig. 2)
3. Pull the front panel quietly to the front to remove it.

POWER AMP MODULE

1. Remove the CD slot-in mechanism.
2. Remove the screw ④ and remove the four screws ⑤ from the rear panel side.
3. Pull out the power module while turning it to the front (transformer side).

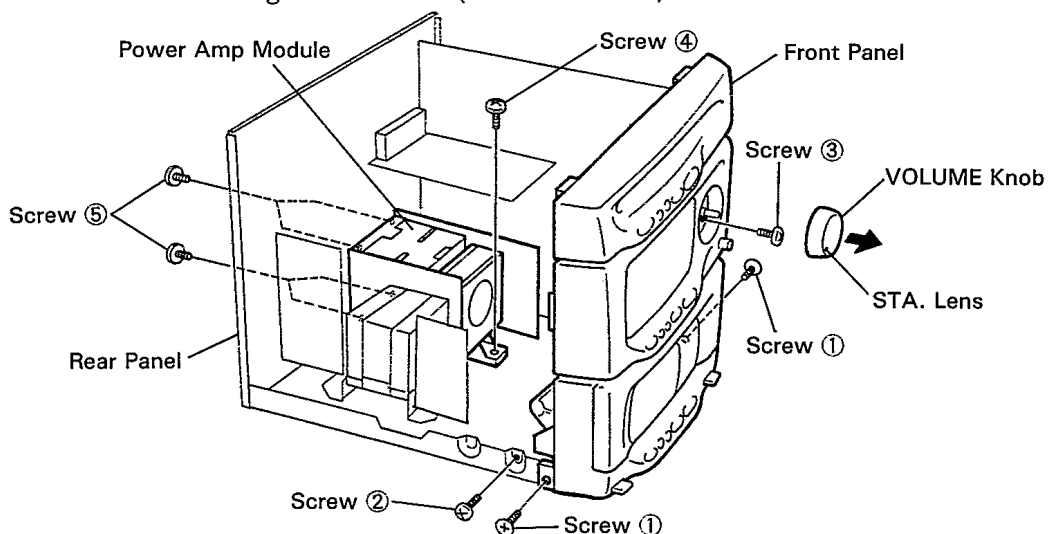


Fig. 2 Remove the Front panel and Power amp module

■ CASSETTE MECHANISM UNIT, CD SW ASSY AND DISPLAY ASSY

● As the cassette mechanism unit, the CD SW assy, the DISPLAY assy, etc. are installed on the front panel, please refer to the "5. EXPLODED VIEWS, PACKING AND PARTS LIST".
(Remove the respective assemblies after removal of the front panel.)

● **Installation of the parallel jumper wires connecting the cassette mechanism unit and the AF assy**

The connector on the AF assy side is 8P on the side of mechanism unit I and 14P on the side of mechanism unit II, and for the cassette mechanism unit it is 9P on the side of mechanism unit I and 15P on the side of mechanism unit II.

When connecting the parallel jumper wire on cassette mechanism unit side, connect so that the pin position on the outside is open. (Refer to Fig. 3)

● **Circuit operation check with removed CD slot-in mechanism**

When the CD slot-in mechanism has been removed, the operation of the other circuits, except for the CD part, can be checked.

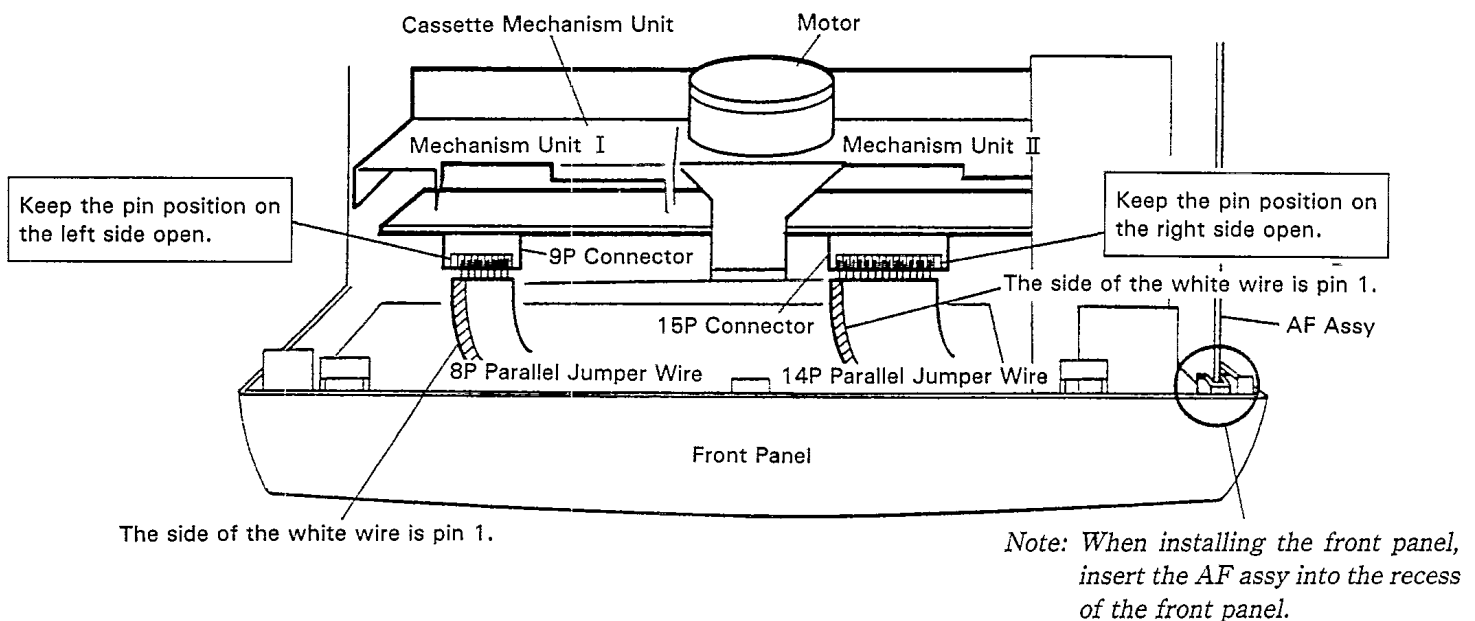


Fig. 3 Installation of the Parallel Jumper Wire


5. EXPLODED VIEWS, PACKING AND PARTS LIST

- NOTES :**
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Parts marked by "☉" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

5.1 PACKING (for XR-P350/MEXK/EA)

Parts List

Mark	No.	Description	Parts No.
	1	FM ANTENNA ASSY	ADH1019
	2	OPERATING INSTRUCTIONS (French/Dutch)	ARC7024
	2	OPERATING INSTRUCTIONS (RDS) (French/Dutch)	ARC7026
	2	OPERATING INSTRUCTIONS (German/Italian)	ARC7036
	2	OPERATING INSTRUCTIONS (RDS) (German/Italian)	ARC7037
	3	
	4	LOOP ANTENNA	ATB1012
	5	REMOTE CONTROL UNIT (CU-XR015)	AXD7030
	6	BATTERY COVER	AZA7050
NSP	7	BATTERIES (R03, AAA)	PEM1004
	8	
	9	FRONT PAD	AHA7039
	10	REAR PAD	AHA7040
	11	PACKING CASE	AHD7087
	12	SHEET	AHG7001
NSP	13	VINYL BAG	AHG1091


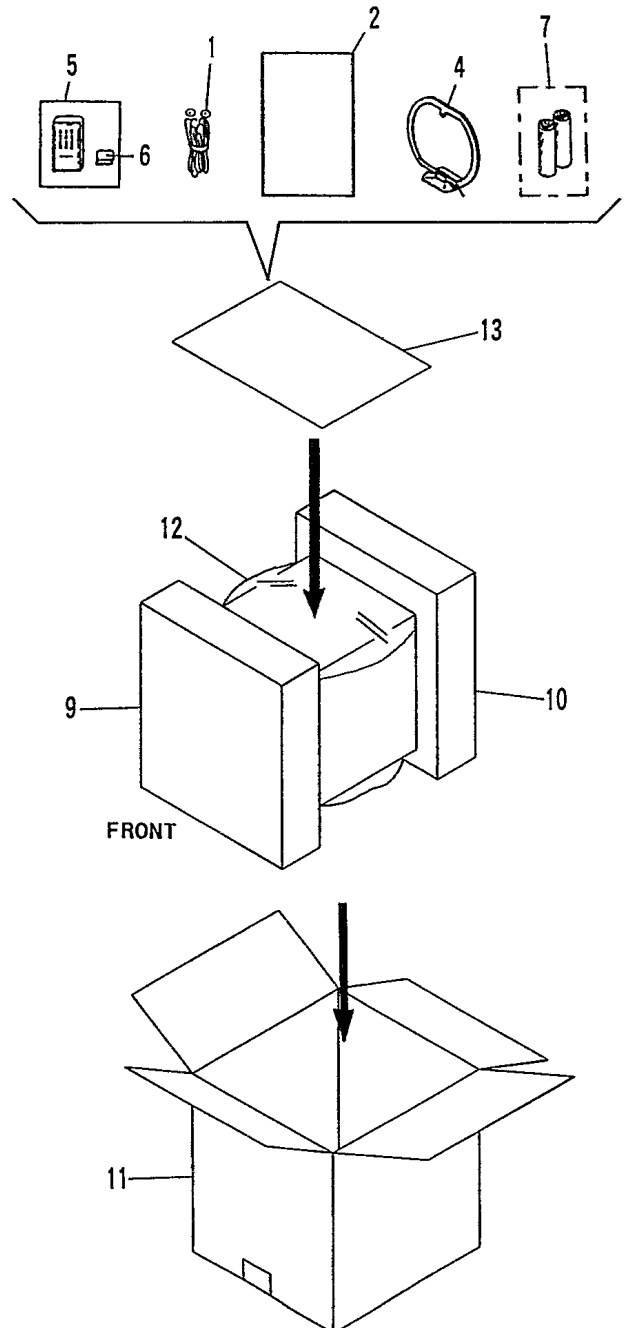


5.2 EXPLODED VIEWS**1. Exterior (1/3) (for XR-P350/MEXK/EA)****Parts List**

Mark	No.	Description	Parts No.
NSP	1	FRAME L	ANG7015
NSP	2	FRAME R	ANG7016
NSP	3	CD SLOT IN MECHANISM	AXA7014
	4	PLASTIC RIVET	AEC1389
	5	MIC VOLUME KNOB	AAB7045
	6	VOLUME KNOB	AAB7046
	7	STA. LENS	AAK7118
	8	SCREW	BBZ30P080FZK
	9	BONNET CASE	ANE7040
	10	DISPLAY PANEL	AAK7119
	11	DOOR PANEL L	AAK7096
	12	DOOR PANEL R	AAK7097
	13	DECK PANEL L	AAN7059
	14	DECK PANEL R	AAN7060
	15	BLIND MOLD L	AMR7029
	16	BLIND MOLD R	AMR7030

2. Exterior (2/3) (for XR-P350/MEXK/EA)**Parts List**


Mark	No.	Description	Parts No.
	1	RUBBER SHEET	AEB1111
NSP	2	CHASSIS	ANA7015
	3	SCREW	CBZ30P080FZK
	4	SCREW	BBZ30P080FZK
NSP	5	SPACER	AEC1360
	6	AF ASSY	AWZ7336
	7	VR ASSY	AWZ7349
	8	REAR PANEL	ANC7161
	9	POWER MODULE F50	AXQ7218
	10	SCREW	BBZ30P080FZK
△	11	POWER TRANSFORMER (T1) (AC220-230V)	ATS7032
	12	SCREW	ASZ40P060FMC
△	13	FUSE (T1A, FU1)	REK-100
	14	PRIMARY ASSY	AWZ7426
	15	SECONDARY ASSY	AWZ7362
	16	STRAIN RELIEF	CM-22B
△	17	AC POWER CORD	ADG1138
	18	TUNER MODULE	AXQ7013
	19	BINDER	Z09-056

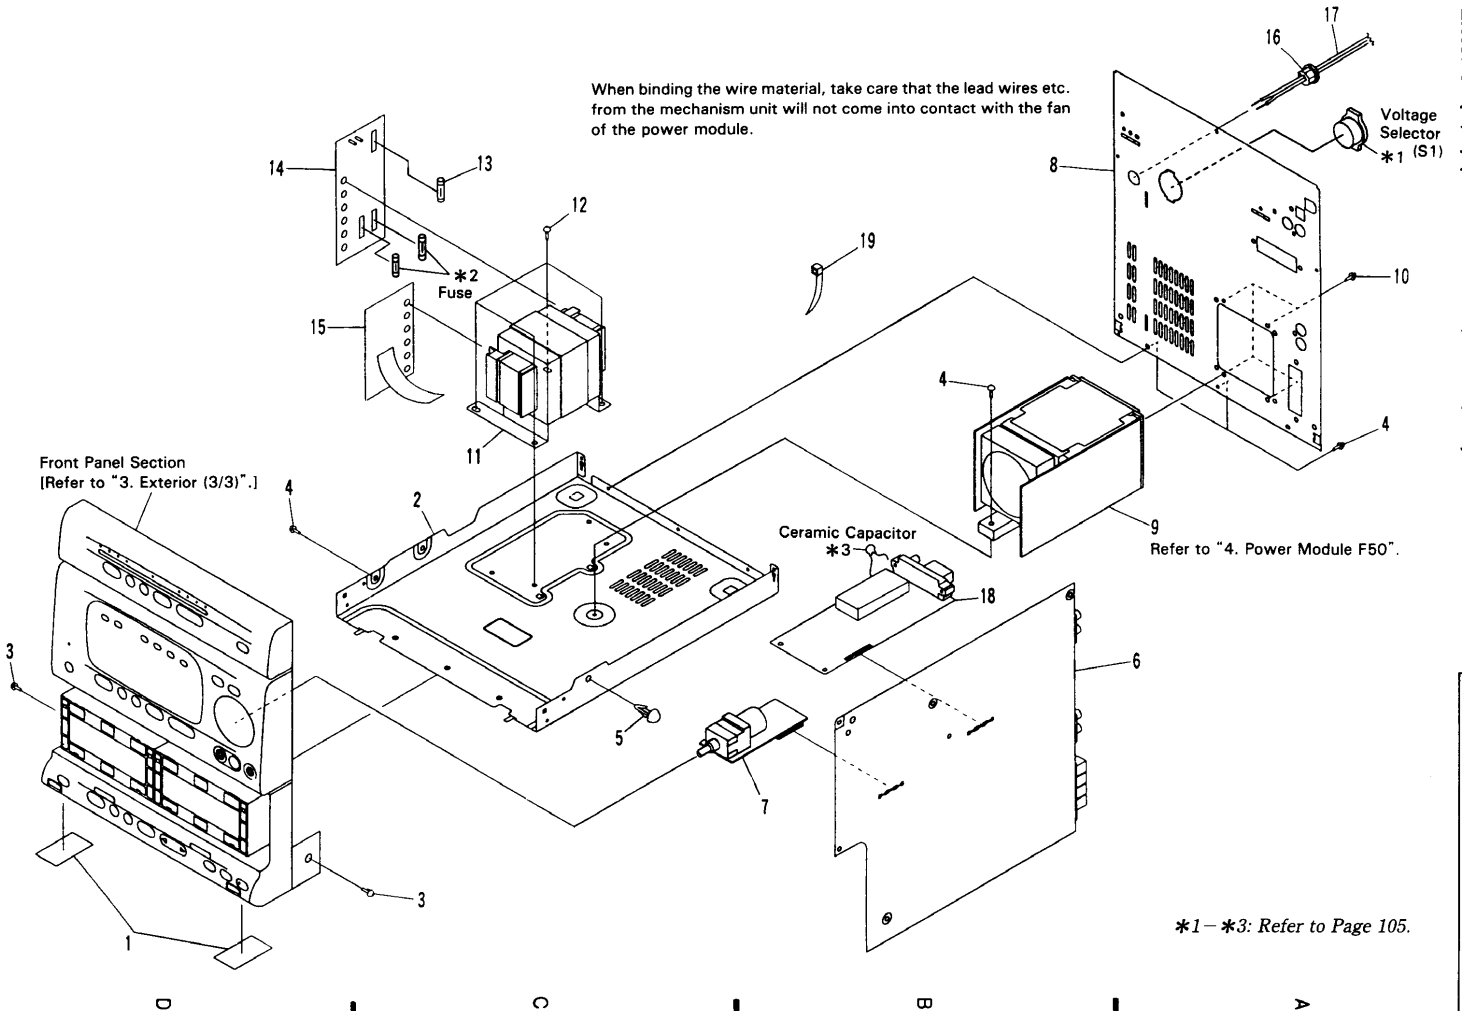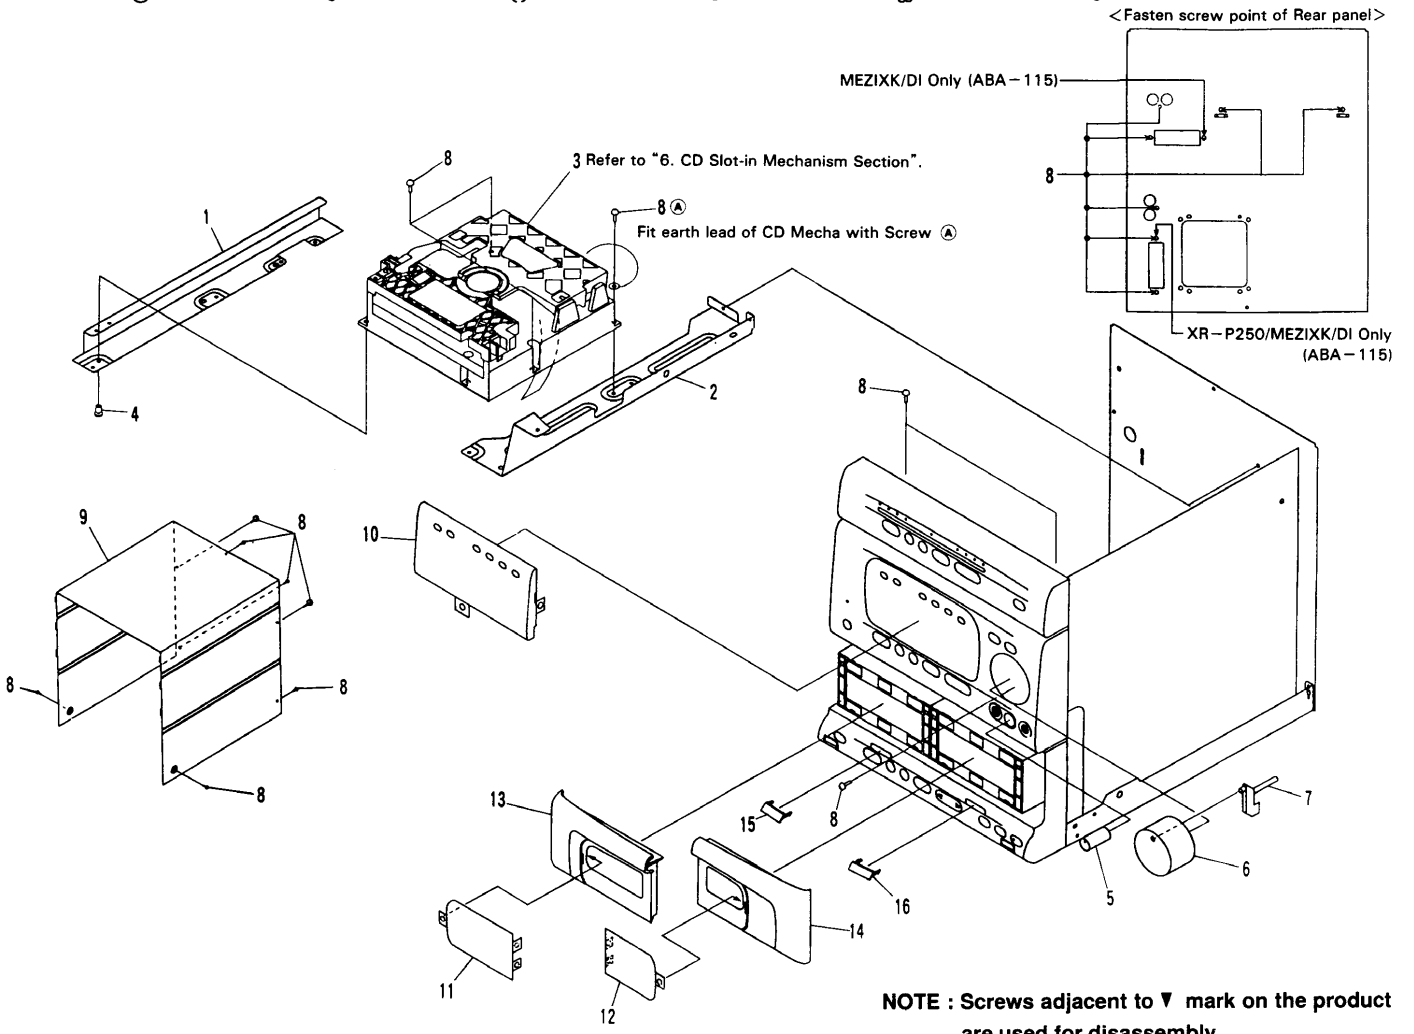

3. Exterior (3/3) (for XR-P350/MEXK/EA)

Parts List


Mark	No.	Description	Parts No.
	1	FRONT PANEL	AMB7188
A	2	LENS	AAK7098
	3	STA. LENS	AAK7118
	4	COVER UNIT	AWL7015
	5	CD BUTTON	AAD7121
	6	SCREW	BPZ26P060FMC
	7	TUNER BUTTON	AAD7120
	8	POWER BUTTON	AAD7119
	9	DAMPER ASSY	AXA7021
	10	SCREW	ABA1095
	11	CD SW ASSY	AWZ7412
	12	DISPLAY ASSY	AWZ7388
	13	DECK BUTTON	AAD7122
NSP	14	DECK SW ASSY	AWZ7405
	15	COUPLING MOLD	AMR7026
	16	EJECT BUTTON L	AAD7123
	17	EJECT BUTTON R	AAD7124
NSP	18	MIC ASSY	AWZ7398
B	19	MIC HOLDER	AMR7022
NSP	20	H. P. ASSY	AWZ7391
	21	DOOR POCKET L	AAAN7051
	22	SPRING	RBR1004
	23	DOOR SPRING L	ABH7032
	24	DOOR POCKET R	AAAN7052
	25	SCREW	BSZ20P120FMC
	26	DOOR SPRING R	ABH7033
	27	MECHANISM UNIT	RYM1225
	28	EJECT ARM L	AMR7024
	29	COLLAR	RNK2135
	30	SPRING L	ABH7028
	31	EJECT ARM R	AMR7025
	32	SCREW	BPZ30P080FZK
	33	SPRING R	ABH7029
C	34	SHIELD	ANR7007
	35	SCREW	VPZ30P080FZK
	36	SCREW	BPZ26P060FMC
	37	CONNECTOR ASSY 3P	ADX7045
	38	CONNECTOR ASSY 3P	ADX7046

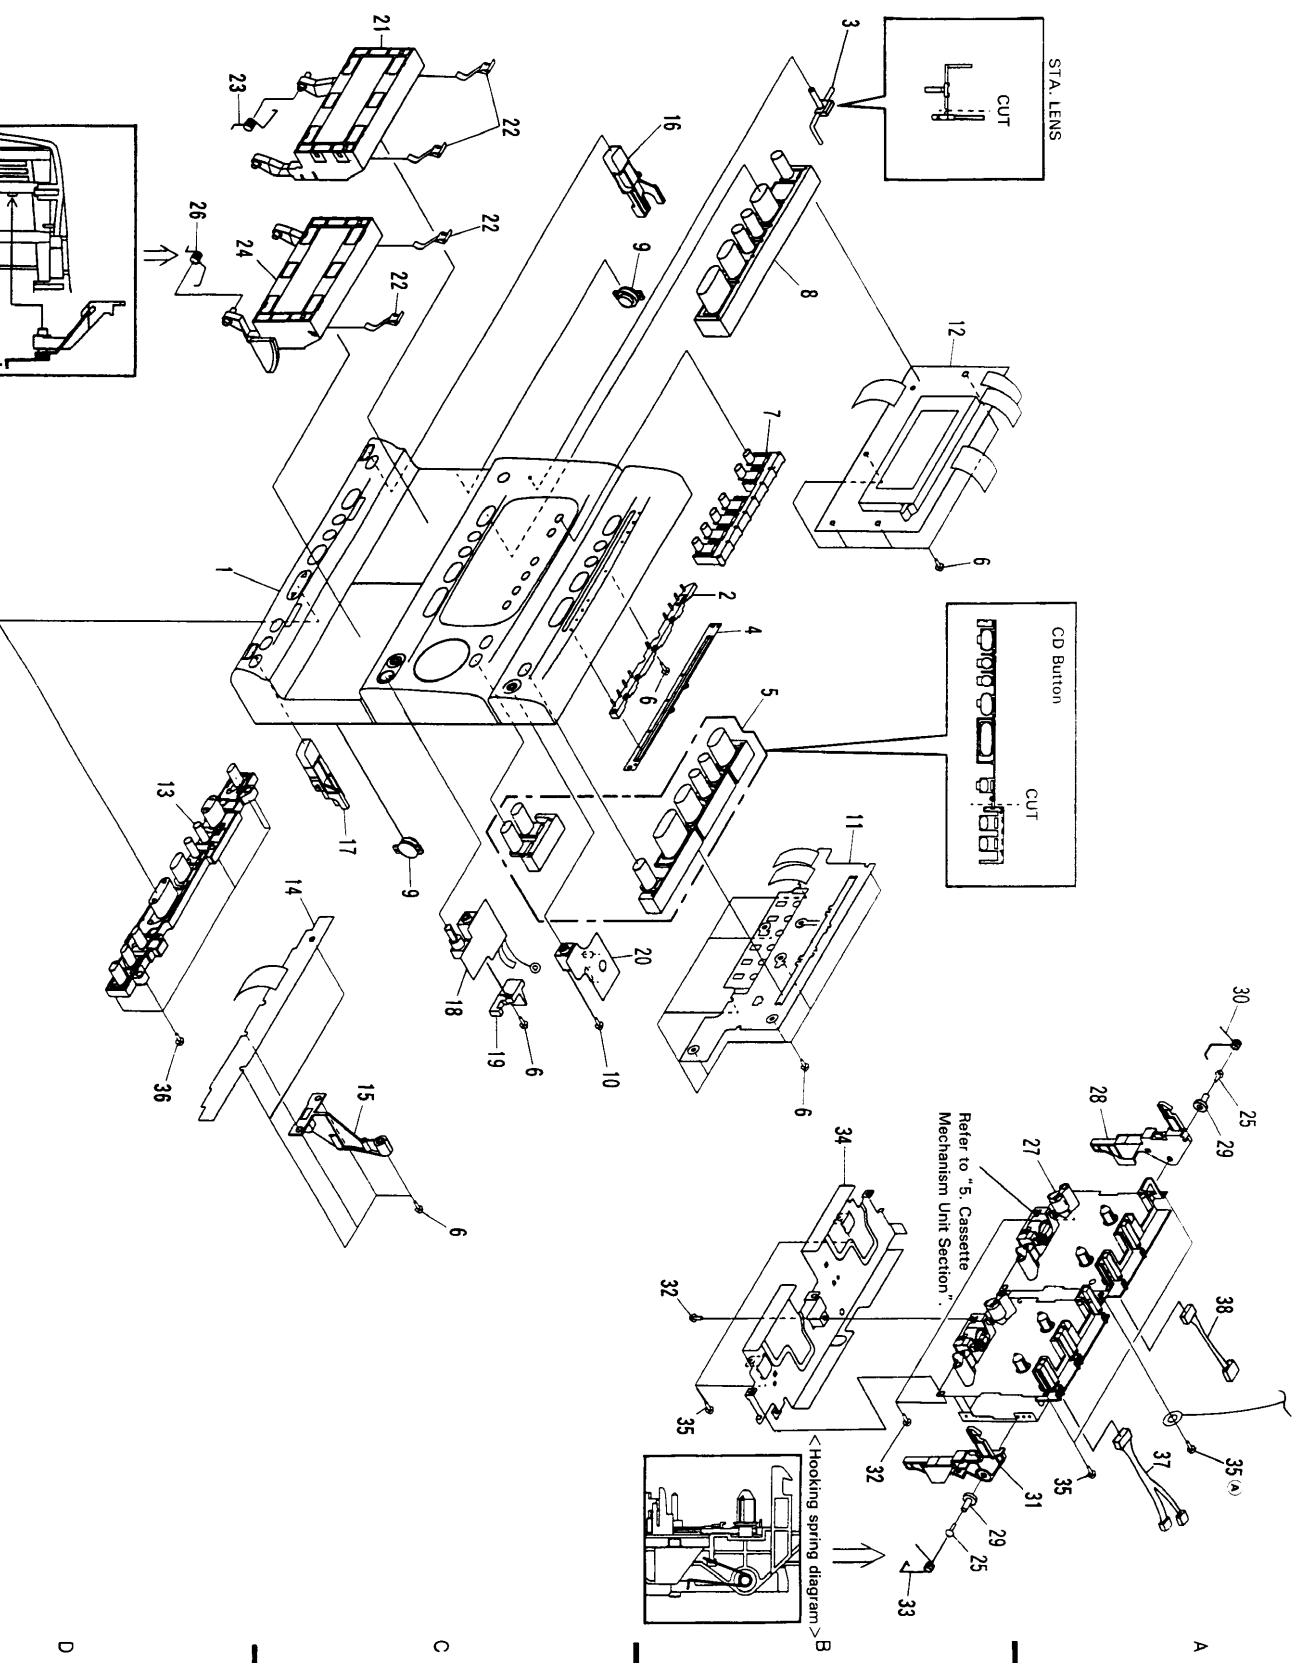

4. Power Module F50

Parts List

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
A	1	FRONT 50W ASSY	AWZ7561		11	DC FAN MOTOR	AXM7003
	2	REGULATOR ASSY	AWZ7562		12	REGULATOR IC (IC7401)	NJM7812FAS
	3	HEAT SINK	ANH7009		13	REGULATOR IC (IC7402)	NJM7912FA
	4	BRACKET	ANG1868		14	REGULATOR IC (IC7403)	NJM7812FAS
	5			15	REGULATOR IC (IC7404)	NJM7805FAS
	6	MOLD A	AMR7005	△	16	TRANSISTOR (Q7511)	2SA1263N
	7	MOLD B	AMR7006	△	17	TRANSISTOR (Q7512)	2SA1263N
	8	SCREW (3 × 10)	ABA1021	△	18	TRANSISTOR (Q7513)	2SC3180N
	9	SCREW	BBZ30P140FZK	△	19	TRANSISTOR (Q7514)	2SC3180N
	10	SCREW	BPZ30P350FZK				

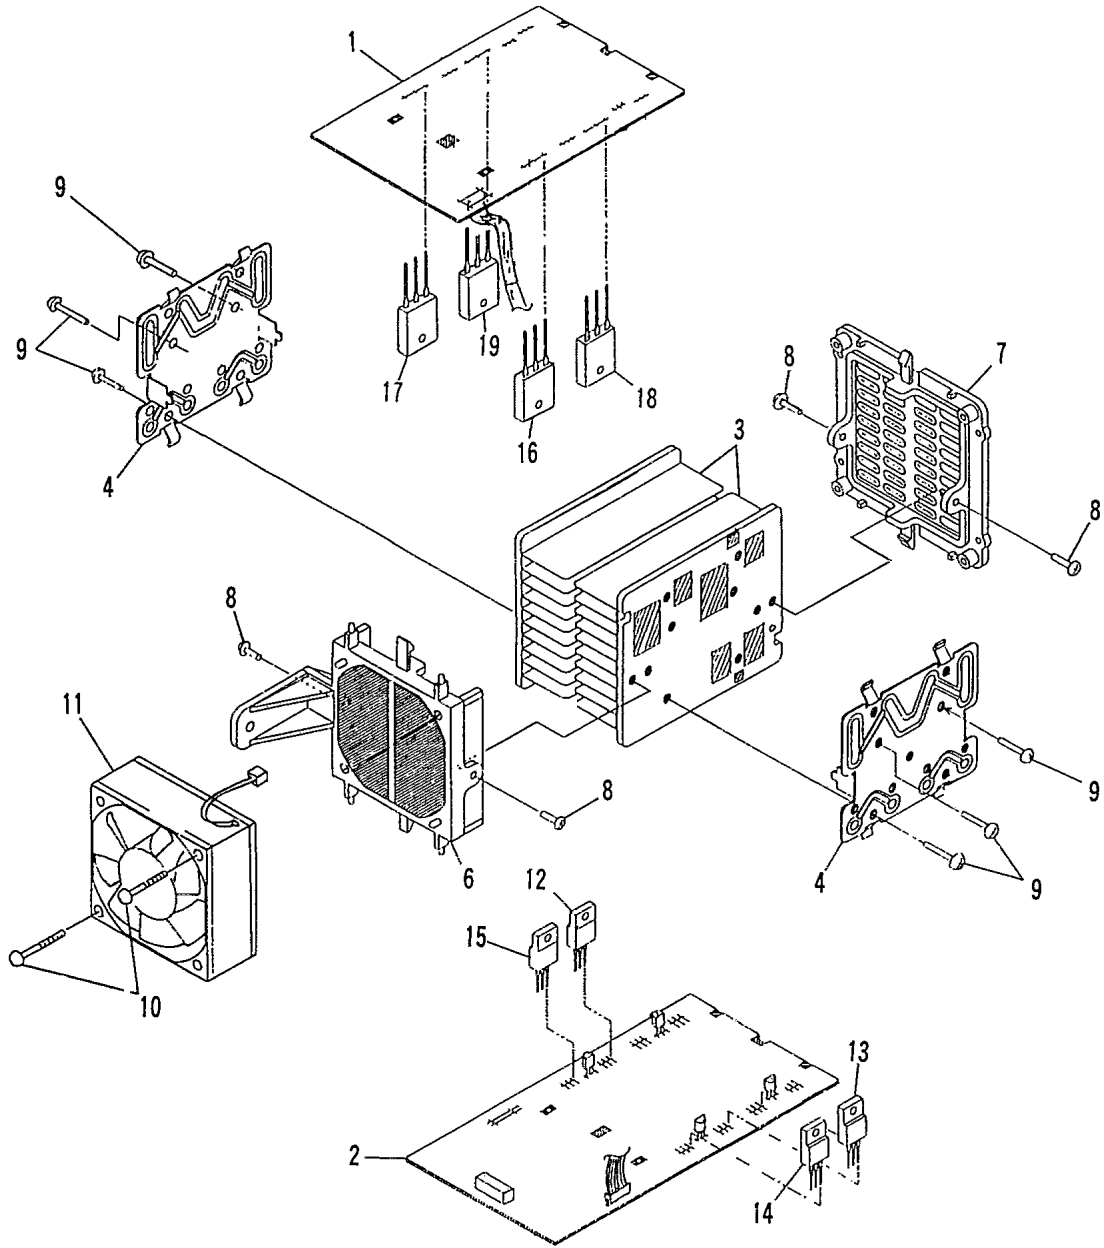

Note: Ensure that silicon grease does not adhere to the MOLD A (No. 6) and MOLD B (No. 7).

5. Cassette Mechanism Unit Section

● Mechanism unit I and II (1/2)

Parts List

Mark	No.	Description	Parts No.
NSP	1	ASSY MOTOR	RXM1080
	2	JUMPER WIRE	RDD1012
	3	BRACKET MOTOR	RNE1830
	4	SPACER	RNK1822
	5	SCREW	RBA1100
	6	SCREW	PCZ20P040FMC

● Mechanism unit I and II (2/2)

Parts List

Mark	No.	Description	Parts No.
	1	ASSY HOLDER HEAD (*1)	RXA1400
	1	ASSY HOLDER HEAD (*2)	RXA1664
	2	FRAME HEAD	RNK1715
	3	LEVER HEAD	RNK1716
	4	SPRING AZIMUTH	RBK1006
	5	ASSY ARM ASSIST	RXA1401
	6	GEAR ARM HEAD	RNK1717
	7	SPRING CASSETTE	RBK1039
	8	EJECT LOCK	RNK1718
	9	CAP REEL	RNK1719
	10	ASSY PINCH ARM L	RXA1403
	11	CHASSIS HEAD	RNE1437
	12	ASSY PINCH ARM R	RXA1404
	13	ARM PLAY L	RNK1866
	14	GEAR PLAY	RNK1867
	15	ARM PLAY R	RNK1868
	16	CHASSIS OS	RXA1411
	17	ASSY SUB REEL L	RXA1407
	18	SOLENOID	RXP1020
	19	WIRE	RDC1006
	20	ARM RVS	RNK1721
	21	GEAR FF	RNK1723
	22	ASSY ARM FR	RXA1412
	23	ASSY PULLEY FR	RXA1413
	24	BELT FR	REB1158
	25	METAL	RNG1048
	26	ASSY FLYWHEEL L (*1)	RXA1666
	26	ASSY FLYWHEEL L2 (*2)	RXA1668
	27	METAL	RNG1005
	28	ARM BRAKE	RNK1724
	29	ASSY SUB REEL R	RXA1408
	30	ARM TRIGGER	RNK1722
	31	GEAR CAM	RNK1725
	32	METAL	RNG1049
	33	ASSY FLYWHEEL R (*1)	RXA1667
	33	ASSY FLYWHEEL R2 (*2)	RXA1669
	34	METAL	RNG1004
	35	


Mark	No.	Description	Parts No.
	36	
	37	P. C. BOARD	RNP1610
	38	SWITCH MODE	RSN1020
	39	SWITCH (LEAF)	RSN1019
	40	HALL IC	DN6851A
	41	ASSY BRACKET (*1)	RXA1665
	41	BRACKET FW (*2)	RNE1438
	42	PULLEY (*1 only)	RNK2132
	43	
	44	
	45	BELT MAIN (*1)	REB1273
	45	BELT MAIN (*2)	REB1272
	46	P. C. BOARD	RNP1348
	47	HOUSING (*1)	RKP1396
	47	HOUSING (*2)	RKP1397
	48	CONNECTOR (*1)	RKP1713
	48	CONNECTOR (*2)	RKP1714
	49	
	50	
	51	SPRING	RBH1282
	52	SPRING	RBH1283
	53	SPRING	RBH1284
	54	SPRING	RBH1286
	55	SPRING	RBH1288
	56	SPRING	RBH1291
	57	SPRING	RBH1285
	58	SPRING	RBH1287
	59	SPRING	RBH1289
	60	SPRING	RBH1290
	61	SPRING	RBH1292
	62	FWP SP (SPRING)	RBH1061
	63	SPRING	RBH1325
	64	SCREW (FOR AZIMUTH)	RBA1023
	65	SCREW	RBA1027
	66	SCREW	RBA1030
	67	SCREW	PCZ20P040FMC
	68	SCREW	RBA1093
	69	SCREW	RBA1094
	70	WASHER	RBF1046
	71	WASHER	WA26D047D013
	72	WASHER (*1 only)	WT13D030D025

Note)


*1: Mechanism Unit I

*2: Mechanism Unit II


● Mechanism unit I and II (1/2)

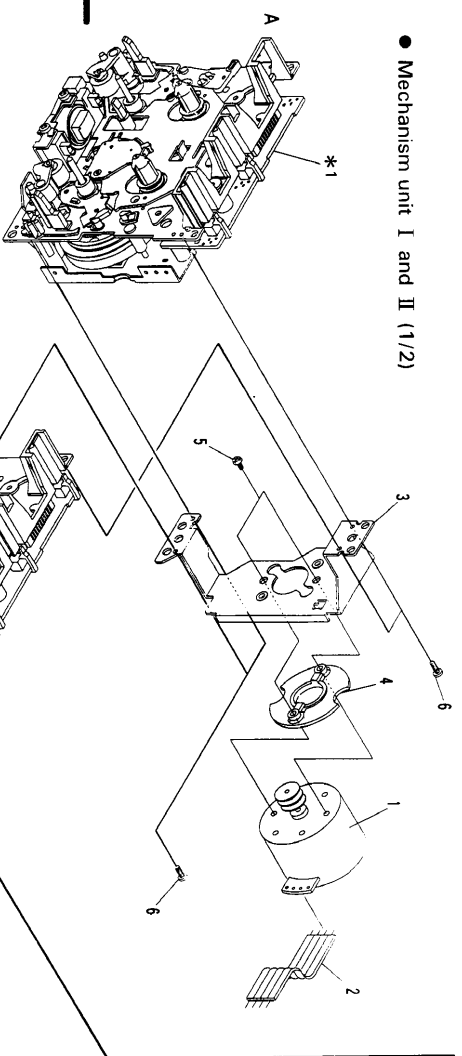


● Mechanism unit I and II (2/2)

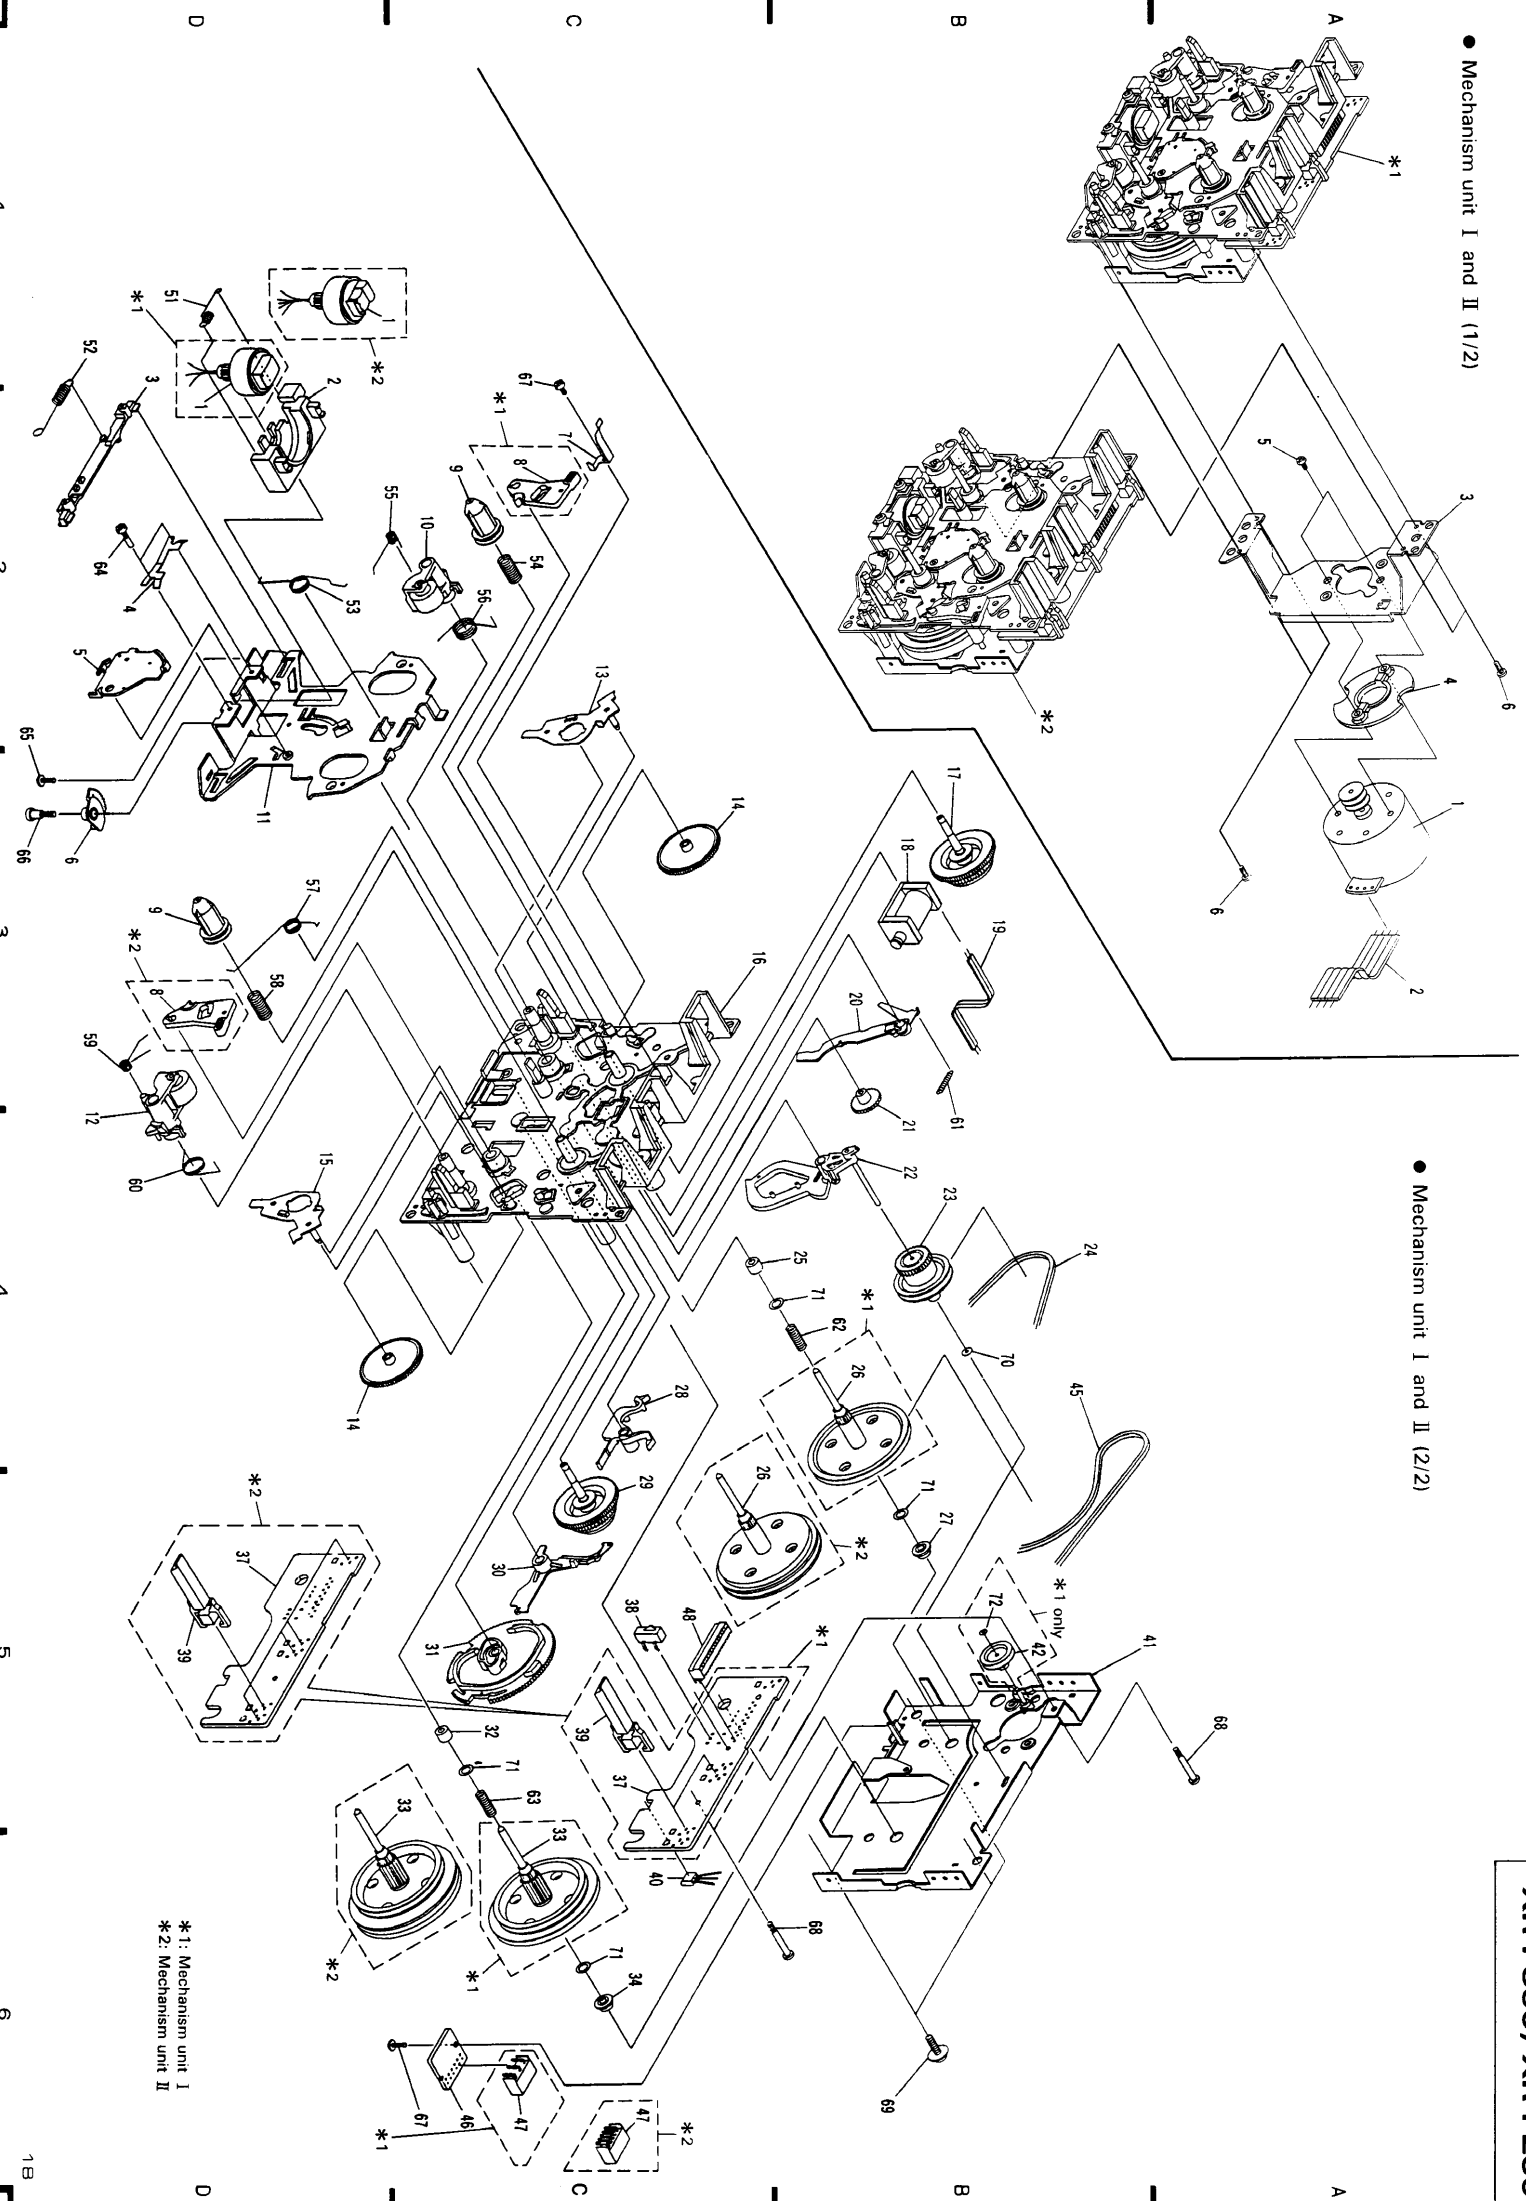


*1: Mechanism unit I
*2: Mechanism unit II

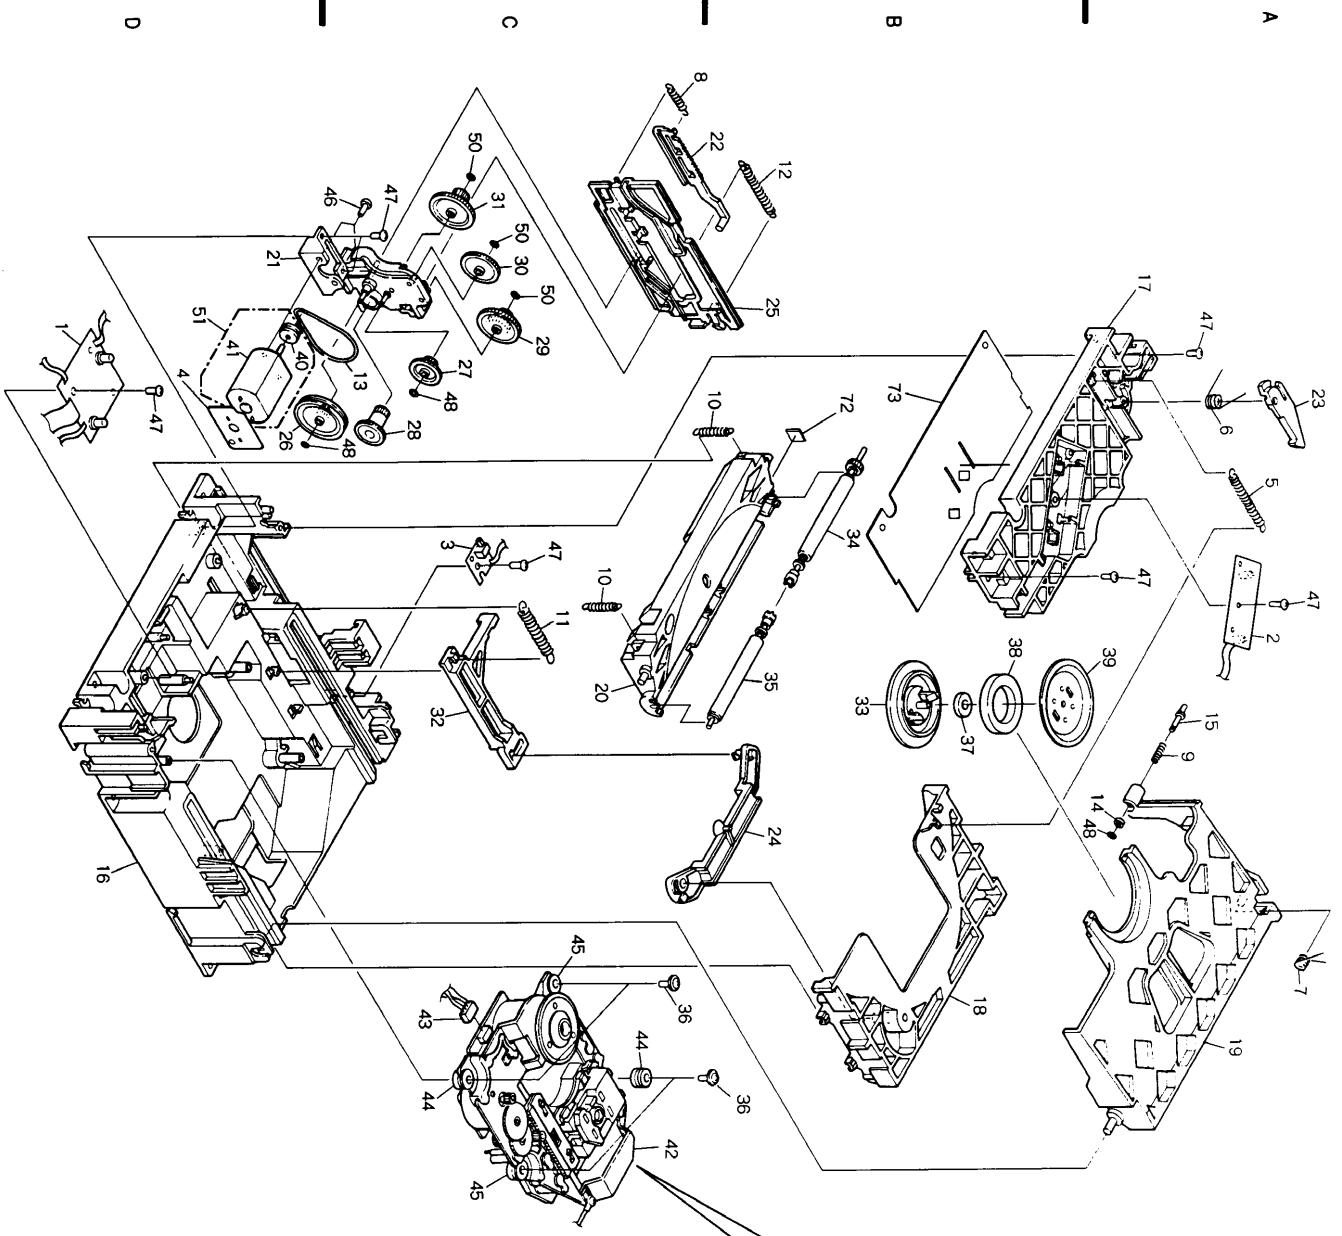

Servo Mechanism Assy SL

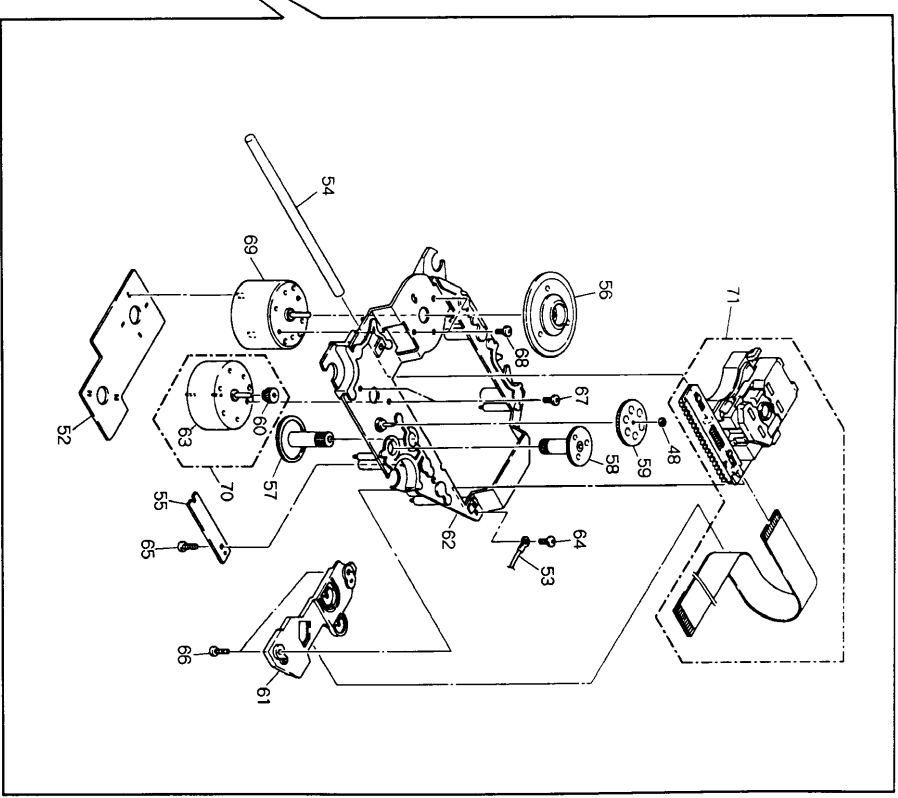

- How to install the disc table
- 1 Use nippers or other tool to cut the two sections marked ① in figure. Then remove the spacer.
- 2 While supporting the spindle motor shaft with the stopper, put spacer on top of carriage base, and stick the disc table on top (takes about 9 kg pressure). Detach the spacer.

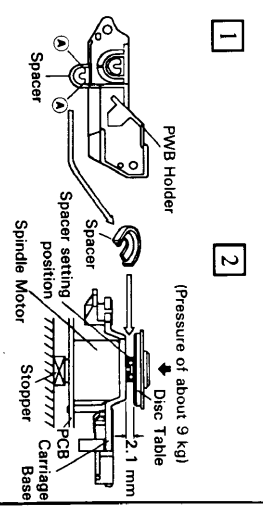

Parts List

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
NSP	1	SENSOR BOARD ASSY	AWZ7328		51	MOTOR ASSY	AEA7000
NSP	2	LED BOARD ASSY	AWZ7329	NSP	52	MECHANISM BOARD ASSY	PWX1192
NSP	3	SW BOARD ASSY	AWZ7330		53	GROUND LEAD UNIT	PDF1104
NSP	4	MOTOR BOARD ASSY	AWZ7331		54	GUIDE BAR	PLA1094
	5	SPRING	ABH7035	NSP	55	GEAR STOPPER	PNB1303
	6	ROCK LEVER SPRING	ABH7019		56	DISC TABLE	PNW1608
	7	CLAMP SPRING	ABH7020		57	GEAR 1	PNW2052
	8	RACK SPRING	ABH7021		58	GEAR 2	PNW2053
	9	P SPRING	ABH7022		59	GEAR 3	PNW2054
	10	ROLLER HOLDER SPRING	ABH7023		60	PINION GEAR	PNW2055
	11	SPRING B	ABH7024		61	PWB HOLDER	PNW2057
	12	CAM PLATE SPRING	ABH7025		62	CARRIAGE BASE	PNW2445
	13	BELT A	AEB7012	NSP	63	DC MOTOR (CARRIAGE)	PXM1027
	14	WASHER	AEB7018		64	SCREW	BBZ26P060FMC
	15	PIN	ALA7005		65	SCREW	BPZ20P060FMC
	16	MECHANISM BASE	ANW7022		66	SCREW	BPZ26P100FMC
	17	DISC PLATE	ANW7023		67	SCREW	JFZ17P025FZK
	18	CENTERING PLATE	ANW7024		68	SCREW	JFZ20P030FNI
	19	CLAMPER HOLDER	ANW7025		69	DC MOTOR ASSY (SPINDLE)	PEA1235
	20	ROLLER HOLDER	ANW7026		70	DC MOTOR ASSY (CARRIAGE)	PEA1246
	21	GEAR HOLDER	ANW7027		71	PICKUP ASSY	PEA1291
	22	RACK	ANW7028		72	AV SHEET	AEB7021
	23	ROCK LEVER	ANW7029		73	DISC PLATE SHEET	AEB7022
	24	STARTING LEVER	ANW7030				
	25	CAM PLATE	ANW7031				
	26	GEAR PULLEY	ANW7032				
	27	GEAR A	ANW7033				
	28	GEAR B	ANW7034				
	29	GEAR C	ANW7035				
	30	GEAR D	ANW7036				
	31	DRIVE GEAR	ANW7037				
	32	STARTING PLATE	ANW7038				
	33	CLAMPER	ANW7044				
	34	ROLLER ASSY L	AXA7019				
	35	ROLLER ASSY R	AXA7020				
	36	SCREW	PBA1048				
NSP	37	H SPACER	PEB1249				
	38	CLAMP MAGNET	PMF1014				
	39	YOKE	PNB1216				
	40	MOTOR PULLEY	PNW1634				
NSP	41	MOTOR	PXM1002				
NSP	42	SERVO MECHANISM ASSY SL	AXA7017				
	43	CONNECTOR ASSY 2P (2MM PITCH)	PDE1238				
	44	FLOAT RUBBER	PEB1014				
	45	FLOAT RUBBER	PEB1132				
	46	SCREW	BMZ20P040FMC				
	47	SCREW	PPZ30P060FMC				
	48	WASHER	WT12D032D025				
	49					
	50	WASHER	WT17D034D025				

6. PCB PARTS LIST

For XR-P350/MEXK/EA

NOTES :

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω \rightarrow 56 \times 10¹ \rightarrow 561 RD1/8PM \square \square \square J
 47k Ω \rightarrow 47 \times 10³ \rightarrow 473 RD1/4PS \square \square \square J
 0.5 Ω \rightarrow 0R5 RN2H \square \square \square K
 1 Ω \rightarrow 010 RS1P \square \square \square K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562 \times 10¹ \rightarrow 5621 RM1/4PC \square \square \square \square F

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
LIST OF ASSEMBLIES							
NSP	MAIN ASSY		AWK7089		Q3503, Q4101, Q4102, Q4203-Q4206		2SC2458
	├ AF ASSY		AWZ7336		Q4301, Q4302, Q4305, Q4306		2SC2458
	├ VR ASSY		AWZ7349		Q4451-Q4454		2SC2458
	├ SECONDARY ASSY		AWZ7362		Q1003, Q4111, Q4161, Q4353, Q4354		2SC3377
	└ PRIMARY ASSY		AWZ7426		Q1403, Q4355, Q8401, Q8402		2SD2144S
NSP	COMPLEX ASSY		AWM7116		Q105		2SD438
	├ DISPLAY ASSY		AWZ7388		Q8301		2SK246
NSP	├ H. P. ASSY		AWZ7391		Q4307, Q4308		2SK373
NSP	├ MIC ASSY		AWZ7398		Q1004, Q4456, Q8302, Q8403, Q8404		DTA143ES
NSP	├ DECK SW ASSY		AWZ7405		Q1001, Q1007, Q1041, Q1100, Q3502		DTC143ES
	└ CD SW ASSY		AWZ7412		Q4112, Q4207, Q4351, Q4455		DTC143ES
	TUNER MODULE		AXQ7013		D1013-D1020		11ES2
	POWER MODULE F50		AXQ7218		D1021, D1022, D1027, D1031-D1033		1SS254
	├ FRONT 50W ASSY		AWZ7561		D1104, D1153, D4111-D4113		1SS254
	└ REGULATOR ASSY		AWZ7562		D4161, D4162, D4201, D4202		1SS254
				Δ	D4301-D4306, D4551, D4552, D8301		1SS254
NSP	CD SLOT-IN MECHANISM		AXA7014		D1001		D3SBA20 (B)
NSP	├ SL MECHANISM BOARD ASSY		AWX7007		D1023		MTZJ33B
NSP	├ ─ SENSOR BOARD ASSY		AWZ7328		D1151, D1152		MTZJ5.1B/C
NSP	├ ─ LED BOARD ASSY		AWZ7329		D1011		MTZJ5.6B
NSP	├ ─ SW BOARD ASSY		AWZ7330		D8218		MTZJ6.2B/C
NSP	└ ─ MOTOR BOARD ASSY		AWZ7331		D1010		MTZJ7.5B
NSP	SERVO MECHANISM ASSY SL		AXA7017	Δ	D1003-D1006, D1035, D1998, D1999		S5566
NSP	└ MECHANISM BOARD ASSY		PWX1192	Δ	D1007, D1008, D1034		S5688G
AF ASSY							
SEMICONDUCTORS							
	IC2101		BU4052BCF		L8321		LAU1R2J
	IC4202		BU4066BCF		L1101		LAU220J
	IC4421		CXA1101P		L4301, L4302		LTA472J
	IC8151		CXA1372Q		L4303, L4304		LTA822J
	IC8301		CXD2508AQ		F4401, F4402		RTF1209
	IC1999		ICP-N20				
	IC3501		LA2232M				
Δ	IC8201, IC8202		LA6520				
	IC4101, IC4301, IC8401		NJM4558MD				
	IC1101		PD4562A				
	IC2103		PM0006A				
	Q1051, Q3501		2SA1048				
	Q1002, Q1006, Q1040, Q4113, Q4352		2SA1515				
	Q1005		2SB560				
	Q4356		2SC2240				
COILS AND FILTERS							
TRANSFORMERS							
					T4351		ATX-043
CAPACITORS							
					C4361 (2000P/630V)		ACE1020
					C1009 (0.01/150V)		ACG1005
					C4319, C4320		CCCSL271K500
					C4323, C4324, C8322		CCSQCH100D50
					C8407-C8410		CCSQCH121J50
					C8323		CCSQCH220J50
					C4353		CCSQCH221J50
					C3508, C8403-C8406		CCSQCH271J50
					C4998, C4999, C8401, C8402		CCSQCH391J50
					C4191, C4192		CCSQCH470J50

Mark	No.	Description	Parts No.
	C4101, C4102 C4151, C4152, C4355 C1112, C1113, C8350, C8351 C8411, C8412 C4303, C4304, C4451, C4452		CCSQCH471J50 CCSQCH681J50 CCSQSL101J50 CEANP2R2M50 CEAS010M50
	C2403, C2404 C1019, C3509, C3511, C4359, C4360 C4364, C4403-C4405, C4407, C4454 C1011, C1016, C4401, C4408 C1018		CEAS0R1M50 CEAS100M50 CEAS100M50 CEAS101M10 CEAS101M63
	C1004 C1224 C1007, C3504, C4453 C1103 C1017, C1099		CEAS102M35 CEAS1R5M50 CEAS220M50 CEAS221M10 CEAS221M35
	C1003 C1001, C1002 C4103, C4104, C4309, C4310 C4317, C4318, C8301 C8175, C8176		CEAS222M35 CEAS222M50 CEAS330M16 CEAS330M16 CEAS331M16
	C4357 C1014, C2251, C2252, C4107, C4108 C4351 C1225 C1021		CEAS3R3M50 CEAS470M16 CEAS470M16 CEAS470M25 CEAS470M50
	C2201, C2202, C3503, C3510, C3512 C4207, C4208, C4301, C4302 C4315, C4316, C8160, C8162 C8309 C4402, C4406		CEAS4R7M50 CEAS4R7M50 CEAS4R7M50 CEASR47M50 CEASR68M50
	C8302 C4363 C2203, C2209, C8171, C8321 C4352, C4354, C8157, C8164, C8167 C8169, C8218, C8308, C8361		CGCYX104K25 CKCYB222K500 CKSQYB102K50 CKSQYB103K50 CKSQYB103K50
	C4411, C4412, C8306 C4313, C4314 C4307, C4308 C3505, C3506, C8170 C4305, C4306, C8156, C8168		CKSQYB152K50 CKSQYB182K50 CKSQYB273K50 CKSQYB332K50 CKSQYB333K50
	C8172 C8307 C8155 C2208 C3516		CKSQYB472K50 CKSQYB473K50 CKSQYB561K50 CKSQYB562K50 CKSQYB682K50
	C2210, C2211 C3501, C3507, C8207, C8210, C8215 C8219 C1301-C1304, C2206, C2207, C2212 C8158, C8159, C8161, C8163, C8220		CKSQYB822K50 CKSQYF103Z50 CKSQYF103Z50 CKSQYF104Z50 CKSQYF104Z50
	C8303, C8420, C8421 C3513 C3514, C3515 C1101, C1102, C1110, C1111, C1114 C4409, C4410		CKSQYF104Z50 CKSQYF223Z50 CKSQYF333Z50 CKSQYF473Z50 CQMA103J50
	C4358 C4356 C4362 C4105, C4106 C2204, C2205		CQMA123K250 CQMA153J50 CQMA562K400 CQMA682J50 CQMA683J50
	C4311, C4312		CQMA823J50

Mark	No.	Description	Parts No.
	RESISTORS		
	VR4111 (2.2K) VR3501, VR4301, VR4302 (4.7K) VR4201-VR4204 (10K) VR8151, VR8152 (22K) VR4351, VR4352 (220K)		PCP1025 PCP1028 PCP1029 PCP1030 PCP1033
	R4352 R1157 R1002 R4353 R1159-R1162		RD1/2PM102J RD1/2PM152J RD1/2PM272J RD1/2PM470J RD1/2PM680J
	R4357 R1064, R1153 R4117 R1995 R1021, R1199, R3502, R8454		RD1/2PM6R8J RD1/4PM102J RD1/4PM122J RD1/6PM010J RD1/6PM102J
	R1003, R1022, R1102, R4112, R4416 R4211, R4212 R1041 R1051 R1151, R1178		RD1/6PM103J RD1/6PM153J RD1/6PM222J RD1/6PM331J RD1/6PM472J
	R3520 R4113, R4114, R4323, R4324 R1223 R1998 R1999		RD1/6PM563J RD1/6PM820J RS1LMF122J RS2LMF220J RS2LMF2R2J
	R1007, R1017 Other Resistors		RS2LMFR22J RS1/10S□□□□
	OTHERS		
	CN8131 CONNECTOR (12P) CN8202 CONNECTOR (4P) CN8205 6P JUMPER CONNECTOR CN2101 PIN JACK (2P) (VIDEO/AUX) PIN JACK (2P) (SPEAKERS • REAR) SPEAKER TERMINAL 4-P		12FMZ-ABT 173981-4 52147-0610 AKB1100 AKB1164
	X8301 (33.8688MHZ) X3501 (456KHZ) CN4003 2P TOP POST CN4002 3P TOP POST CN4001 3P TOP POST CN1 CONNECTOR (13P) CN7 CONNECTOR (4P) PCB BINDER CN8201 JACK X1101 (4.19MHZ)		AKE-109 ASS7000 ASS7001 B2B-EH B3B-EH B3B-EH-R KPE13 KPE4 VEF1008 VKN-004 VSS1014
	VR ASSY		
	SEMICONDUCTORS		
	IC1501 IC1551 Q1501, Q1502 Q1503		NJM4558M-D TA8409S 2SC2458 DTA143ES
	CAPACITORS		
	C1511, C1512 C1599 C1501-C1504 C1557, C1558 C1551-C1553 C1555, C1556		CEAS010M50 CEAS470M50 CEAS4R7M50 CKSQYB473K50 CKSQYF104Z50 CCSQSL221J50
	RESISTORS		
	VR301 (100K-A5×2) Other Resistors		ACX7003 RS1/10S□□□□

XR-P350, XR-P250

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
SECONDARY ASSY				OTHERS			
SECONDARY assy has no service part.				CN1251 JACK AKN1028			
PRIMARY ASSY				MIC ASSY			
PRIMARY assy has no service part.				SEMICONDUCTORS			
DISPLAY ASSY				IC2501 NJM4558MD			
SEMICONDUCTORS				CAPACITORS			
IC3701-IC3703 NJM4558MD				C2504 CCSQCH221J50			
IC1901 PDC022A				C2503, C2505, C2510 CEJA100M50			
Q1901 2SC2458				C2501 CKSQYB122K50			
Q1701-Q1705 DTA143ES				C2506 CKSQYB682K50			
Q1902 DTC143ES				C2507-C2509 CKSQYF473Z50			
D1801-D1808, D1810, D1819, D1901				RESISTORS			
D1903, D1905, D1907, D1908, D1910				VR2501 (10K-B) ACS1028			
D3701-D3706 1SS254				Other Resistors RS1/10S□□□□			
D1715 1SS254				OTHERS			
D3751, D3752 BR3372XJ65A				CN2501 MINI JACK AKN-207			
D1904 MTZJ5.1B/C				DECK SW ASSY			
MTZJ6.8B				SEMICONDUCTORS			
COILS AND FILTERS				D1702 AEL1122			
L1901 LAU220J				D1701, D1703, D1704 AEL1130			
SWITCHES AND RELAYS				D1705 BR3372XJ30A			
S1801-S1807 ASG1051				SWITCHES AND RELAYS			
CAPACITORS				S1809-S1818 ASG1051			
C1903 (0.047μF/5.5V) ACH1246				RESISTORS			
C3707, C3708, C3710, C3711 CCSQCH271J50				All Resistors RS1/10S□□□□			
C1906 CEAS331M10				CD SW ASSY			
C1917 CEAS470M50				SEMICONDUCTORS			
C1908 CEJA010M50				Q1706-Q1709 2SA1037K			
C1910 CEJA100M50				Q1710 DTA143EK			
C3751, C3752 CEJA220M10				D1721-D1724, D1726-D1729 GL1EG21			
C1902 CEJA470M16				D1725 GL1HS21			
C1907 CEJAR47M50				SWITCHES AND RELAYS			
C1909 CKSQYB102K50				S1819-S1833 ASG1051			
C3701, C3702, C3716, C3717				RESISTORS			
C3704, C3705, C3713, C3714				R1707, R1711, R1715, R1719 RD1/4PM241J			
C3703, C3706, C3709, C3712, C3715				R1722 RD1/6PM181J			
C3718 CKSQYB473K50				R1706, R1710, R1714, R1718 RD1/6PM241J			
C1913 CKSQYF104Z50				Other Resistors RS1/10S□□□□			
C1901, C1904, C1905, C1911, C1912				TUNER MODULE			
RESISTORS				SEMICONDUCTORS			
R1758 RA15T473J				IC6201 LA1836M			
R3751 RD1/2PM181J				IC6202 LM7001J			
R3752 RD1/2PM331J				Q6102 2SC2223			
R1905 RD1/4PM103J				Q6203 2SC2235			
R1965-R1969 RD1/4PM472J				Q6202 2SC2712			
R1740 RD1/6PM221J				Q6103, Q6214 2SC2714			
R1801-R1805 RD1/6PM223J				Q6201 2SK208			
Other Resistors RS1/10S□□□□				Q6104 2SK302			
OTHERS				Q6101 3SK194			
V1701 FL TUBE AAV7009				Q6204 XDA124EK			
REMOTE SENSOR UNIT SBX1785				RESISTORS			
X1901 (6.00MHZ) VSS1045				Q6217 XDC124EK			
H. P. ASSY				D6101, D6102 1T33			
RESISTORS				OTHERS			
R1201, R1202 RS2LMF331J				CN1251 JACK AKN1028			

Mark	No.	Description	Parts No.
COILS AND FILTERS			
	L6104		ATC1003
	L6101		ATC1020
	L6102		ATC1021
	L6207 (10.7MHZ)		ATE1013
	F6203, F6204		ATF-119
	F6101		ATF-155
	F6202 (450KHZ)		ATF1155
	L6103 (2.2UH)		ATH1043
	L6202, L6203, L6208		LCTA2R2J3225

TRANSFORMERS

T6101 ATE-063

CAPACITORS

C6234, C6236, C6270 (1 μ F/16V)	ACG1051
C6107	CCSCH010C50
C6229	CCSCH821J50
C6110	CCSQCH020C50
C6101	CCSQCH050C50
C6108, C6203, C6269	CCSQCH101J50
C6111, C6116, C6208, C6221, C6222	CCSQCH150J50
C6115	CCSQCH330J50
C6114	CCSQRH080D50
C6113	CCSQRH180J50
C6105	CCSQTH150J50
C6261	CEAS010M50
C6224, C6246, C6262	CEAS100M50
C6216, C6217	CEAS330M16
C6231, C6233	CEAS3R3M50
C6219	CEAS470M10
C6243-C6245	CEAS470M16
C6227	CEAS470M25
C6238	CEJA100M16
C6249, C6250	CEJA4R7M35
C6215	CFTXA103J50
C6214	CFTXA224J50
C6103, C6106, C6112, C6204	CKSQYB102K50
C6102, C6109, C6117, C6210, C6264	CKSQYB103K50
C6213	CKSQYB223K50
C6230	CKSQYB273K50
C6228	CKSQYB472K50
C6209, C6237, C6265, C6267	CKSQYB473K50
C6252	CKSQYB822K50
C6212, C6218	CKSQYF103Z50
C6220, C6226, C6239, C6242, C6255	CKSQYF223Z50
C6235	CKSQYF224Z25
C6225, C6241, C6266	CKSQYF473Z50
C6232	CKSYB273K50
C6251	CKSYB822K50
C6223	CKSYF103Z50
C6263	CKSYF473Z50

RESISTORS

VR6201 (10K)	ACP1056
VR6202	VRTB6VS223
R6299, R6300	RD1/6PM102J
R6113, R6116, R6118, R6268-R6271	RS1/8S000J
R6275, R6276, R6278, R6283, R6284	RS1/8S000J
R6290, R6293, R6294, R6297	RS1/8S000J
R6243, R6244	RS1/8S101J
R6211	RS1/8S103J
R6237	RS1/8S182J
R6209	RS1/8S221J

Mark	No.	Description	Parts No.
	R6239		RS1/8S332J
	R6101		RS1/8S470J
	Other Resistors		RS1/10S□□□□

OTHERS

X6203 (7.200MHZ)	ASS1042
X6201 (456KHZ)	ASS1066
X6202 (450KHZ)	ATF1027
BN6201 2P ANTENNA TERMINAL WITH PAL	AKA1017
AM RF TUNING BLOCK	AXX1041

FRONT 50W ASSY

SEMICONDUCTORS

IC7501	UPC4570G2
Q7507, Q7508	2SA1182
Q7601	2SA1255
Q7517, Q7518	2SB1115
Q7501, Q7502	2SC2240
Q7505, Q7506	2SC2859
Q7602, Q7603	2SC3138
Q7515, Q7516	2SD1615
D7505, D7506, D7517, D7518	1SS181
D7503, D7504, D7516	1SS184
D7535-D7538	1SS226
D7521-D7524	1SS244
D7519, D7520, D7525, D7526, D7531	HSS104-02
D7533	HSS104-02
D7507-D7510	RD3.3ESB2

CAPACITORS

C7523, C7524	CEALR10M50
C7519-C7522, C7545-C7552	CCSQCH101J50
C7525-C7528	CCSQCH271J50
C7503, C7504	CCSQCH331J50
C7541, C7542	CCSQCH470J50
C7509, C7510	CEAS101M10
C7602	CEJA221M6R3
C7540	CEJA3R3M50
C7539	CEJA4R7M50
C7699	CKSQYB104K25
C7529-C7532	CKSQYB333K50
C7543, C7544	CKSQYB472K50
C7601, C7603	CKSQYF104Z50
C7537	CKSQYF473Z50

RESISTORS

R7519, R7520 (634)	ACN1106
R7515, R7516 (1.8K)	ACN1107
△ R7541, R7542	RD1/4PMF100J
△ R7547-R7550	RS1/10S2200F
R7753	RS1/8S000J
△ R7537-R7540	RS1/8S100J
R7553	RS1/8S101J
△ R7543, R7544	RS1/8S7R5J
Other Resistors	RS1/10S□□□□

REGULATOR ASSY

SEMICONDUCTORS



IC7201	PAC006B
Q7301, Q7302	2SC1815
Q7202	2SC2712
D7204	1SS184
D7205, D7208	HSS104-02

Mark	No.	Description	Parts No.
	D7210 D7206, D7211 D7207		RB441Q-40 RD4.7ESB RD5.6ESB2
CAPACITORS			
	C7402, C7406, C7408 (0.082 μ F/25V) C7204 (1 μ F/16V) C7401, C7405, C7407 (0.33 μ F/50V) C7409 (10 μ F/35V) C7202 (4.7U/35V)		ACG1050 ACG1051 ACG1053 ACH1150 ACH7008
	C7203 (0.33U/50V) C7140 C7205 C7201, C7208, C7219 C7301		ACH7009 CEAS010M50 CEJA101M10 CKSQYB103K50 CKSQYB332K50
	C7206, C7215, C7216, C7404, C7698		CKSQYF104Z50
RESISTORS			
	VR7201 (22K) R7403-R7405 (1.0) R7252 R7253 R7303		RCP1103 ACN1104 RD1/6PM102J RD1/6PM103J RS1/10S1002F
	R7304 Other Resistors		RS1/10S8200F RS1/10S□□□J
OTHERS			
	CN7101 CONNECTOR (12P)		KPE12
SENSOR BOARD ASSY			
SEMICONDUCTORS			
	Q601, Q602		PS3062
RESISTORS			
	All Resistors		RD1/6PM□□□J
LED BOARD ASSY			
SEMICONDUCTORS			
	D601, D602		AN306
RESISTORS			
	All Resistors		RD1/6PM□□□J
SW BOARD ASSY			
SWITCHES AND RELAYS			
	S601		DSG1017
MOTOR BOARD ASSY			
MOTOR BOARD assy has no service part.			
MECHANISM BOARD ASSY			
SWITCHES AND RELAYS			
	S610		DSG1016
OTHERS			
	CN610 CONNECTOR (4P)		173979-4

7. BLOCK DIAGRAM
AMPLIFIER SECTION

CD SECTION

XR-P350, XR-P250

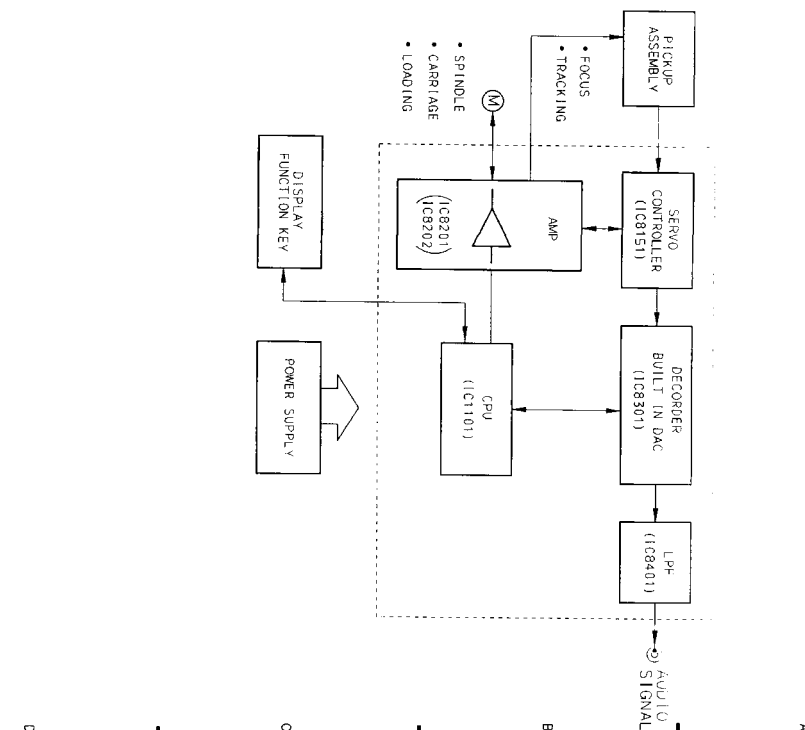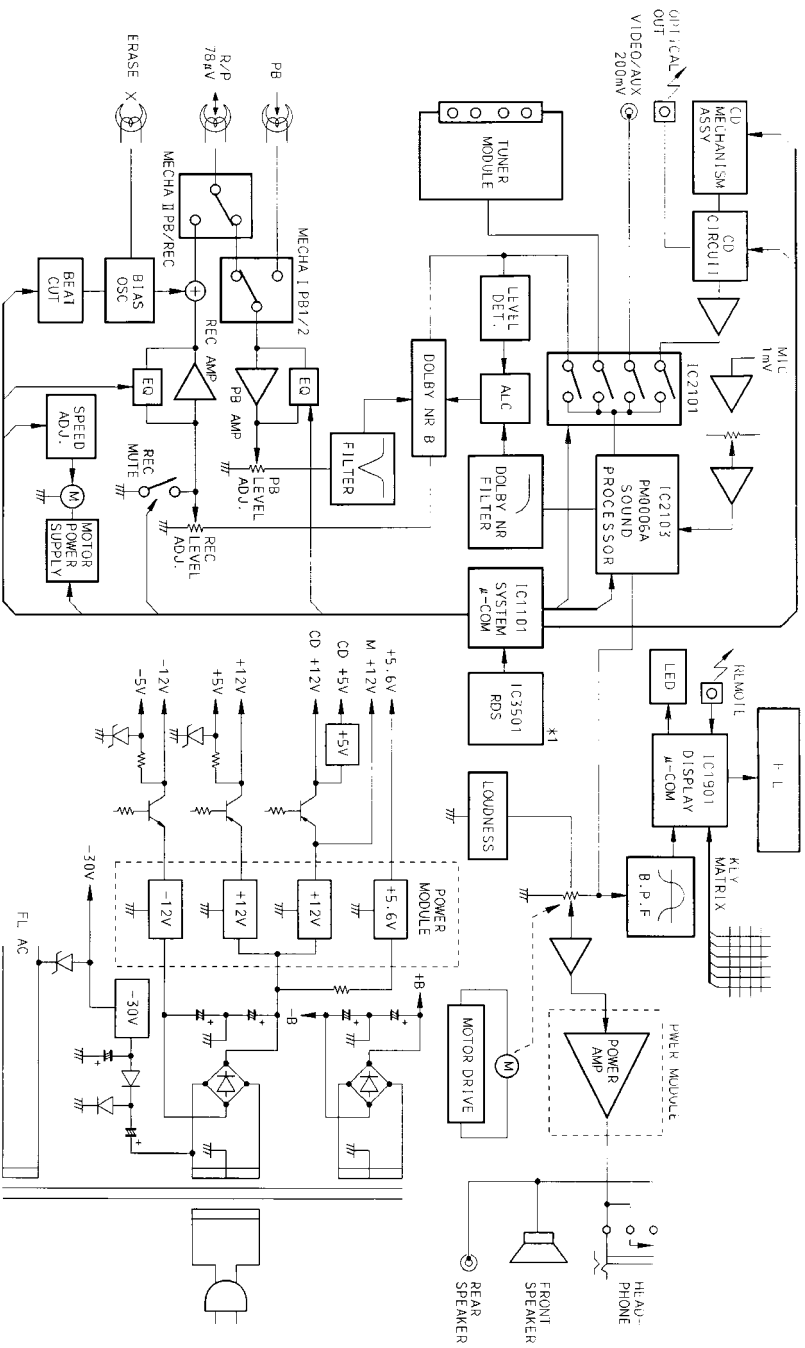

NOTE
*1: XR-P350/MEKX/EA, MEKX/EB, NBXK, MEZIXK/D1 ONLY

1 2 3 4 5 6 7 8 9


8.2 FM/AM TUNER MODULE

- For XR-P350\MEK\EA, MEK\EB and NBK types (AX07013)
- XR-P250\MEK\EA, MEK\EB and NBK types (AX03213)
- XR-P350\SD, SL and YPW types (AX01012)


FM/AM TUNER MODULE (AX07013 and AX03213)

FM/AM TUNER MODULE (AX01012)

- The differences in the PCB diagram between AX07013 and AX01012 are as follows.

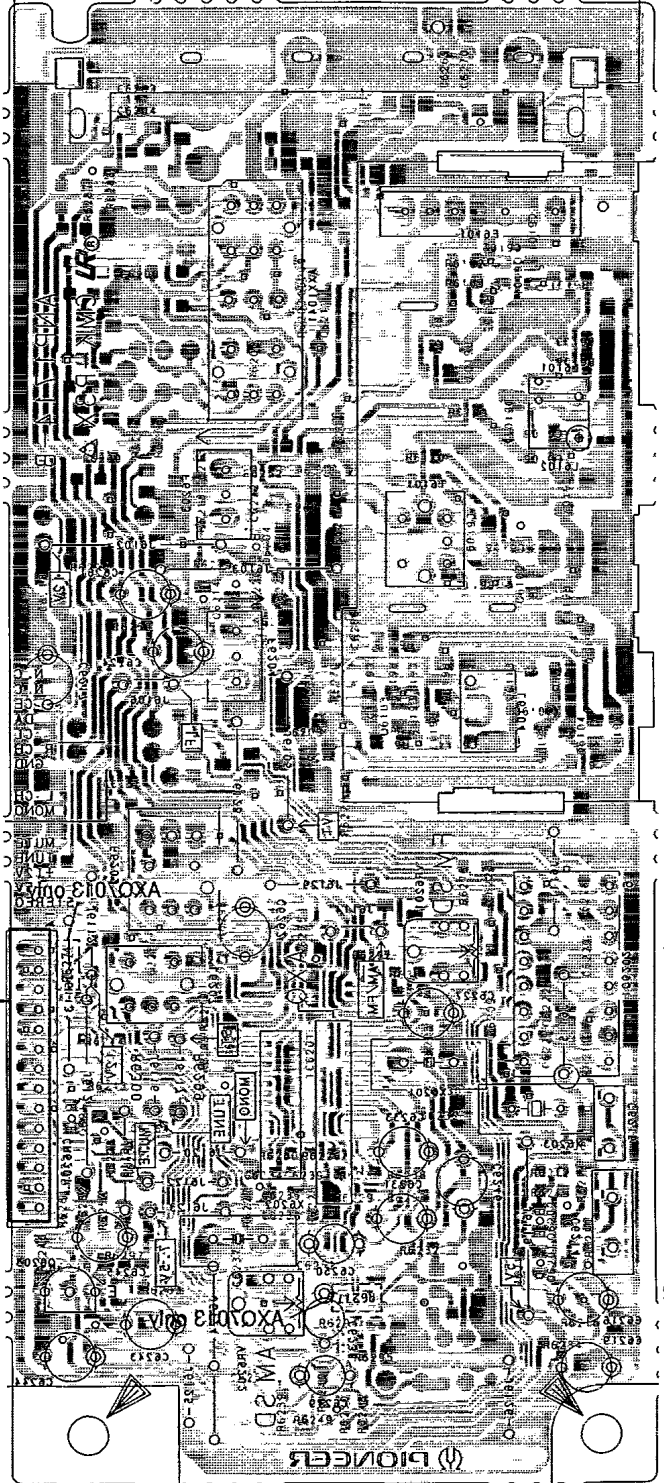

To AF Assy CNA

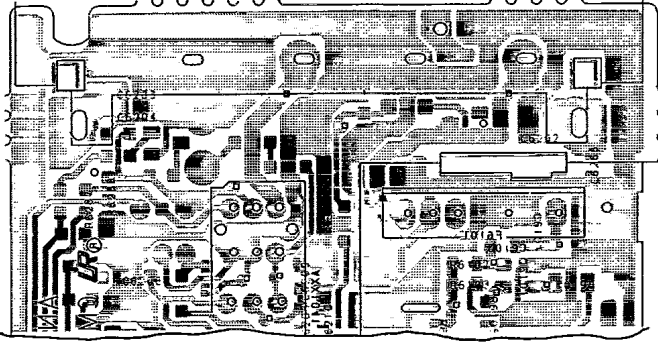

● This diagram is viewed from the foil side.



8.2 FM/AM TUNER MODULE

- For XR-P350/MEXK/EA, MEXK/EB and NBXK types (AXQ7013)
- XR-P250/MEXK/EA, MEXK/EB and NBXK types (AXQ3213)
- XR-P350/SD, SL and YPW types (AXQ1012)

FM/AM TUNER MODULE
(AXQ7013 and AXQ3213)

FM/AM TUNER MODULE (AXQ1012)

- The differences in the PCB diagram between AXQ7013 and AXQ1012 are as follows.

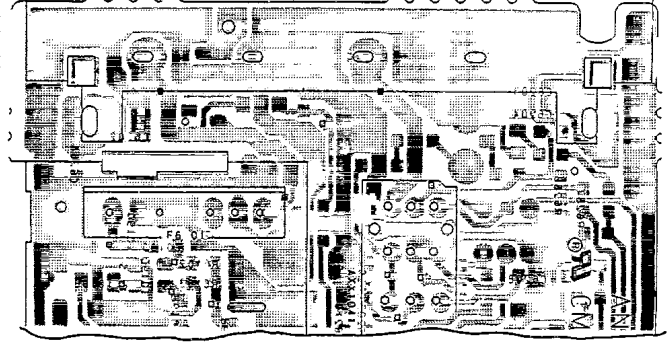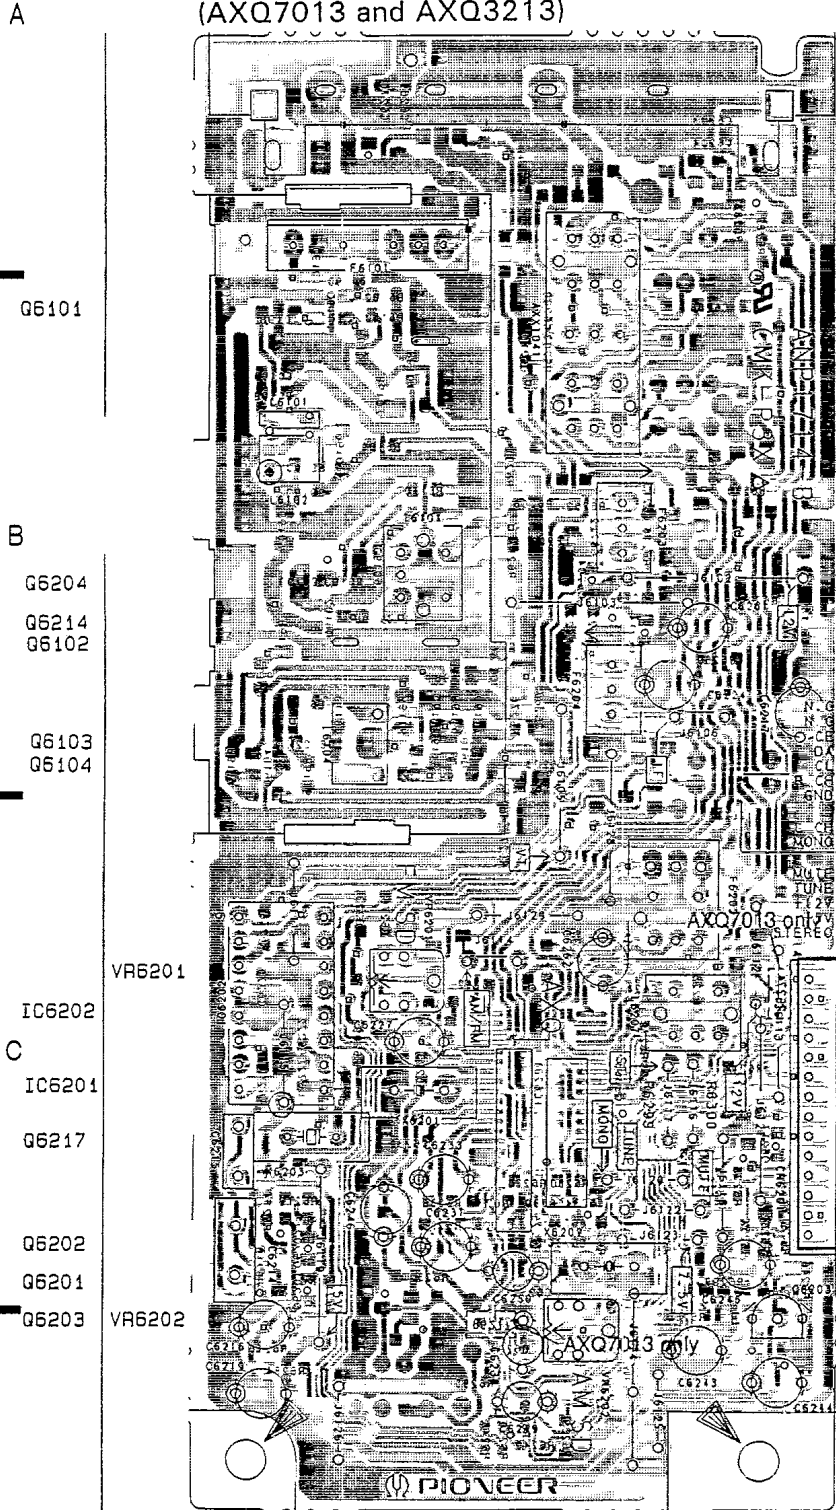

- This diagram is viewed from the mounted parts side.


NOTE:
 ● MEXK/E Series indicator models XR-P350/MEXK/E, MEXK/E and NBKX.
 ● XR-P350/MEXK/E Series indicator models XR-P350/MEXK/E, MEXK/E and NBKX.
 ● XR-P250/MEXK/E Series indicator models XR-P250/MEXK/E, MEXK/E and NBKX.

SCH-2

RDS
N.C.
CE
DA
CL
R CH
CND
L CH
MOND
MUTE
+12V
+5V
STEREO

To AF assy CN9 (SCH-10)

SIGNAL ROUTE
 (AM) : AUDIO SIGNAL ROUTE
 (FM) : FM SIGNAL ROUTE
 (FM) : FM SIGNAL ROUTE

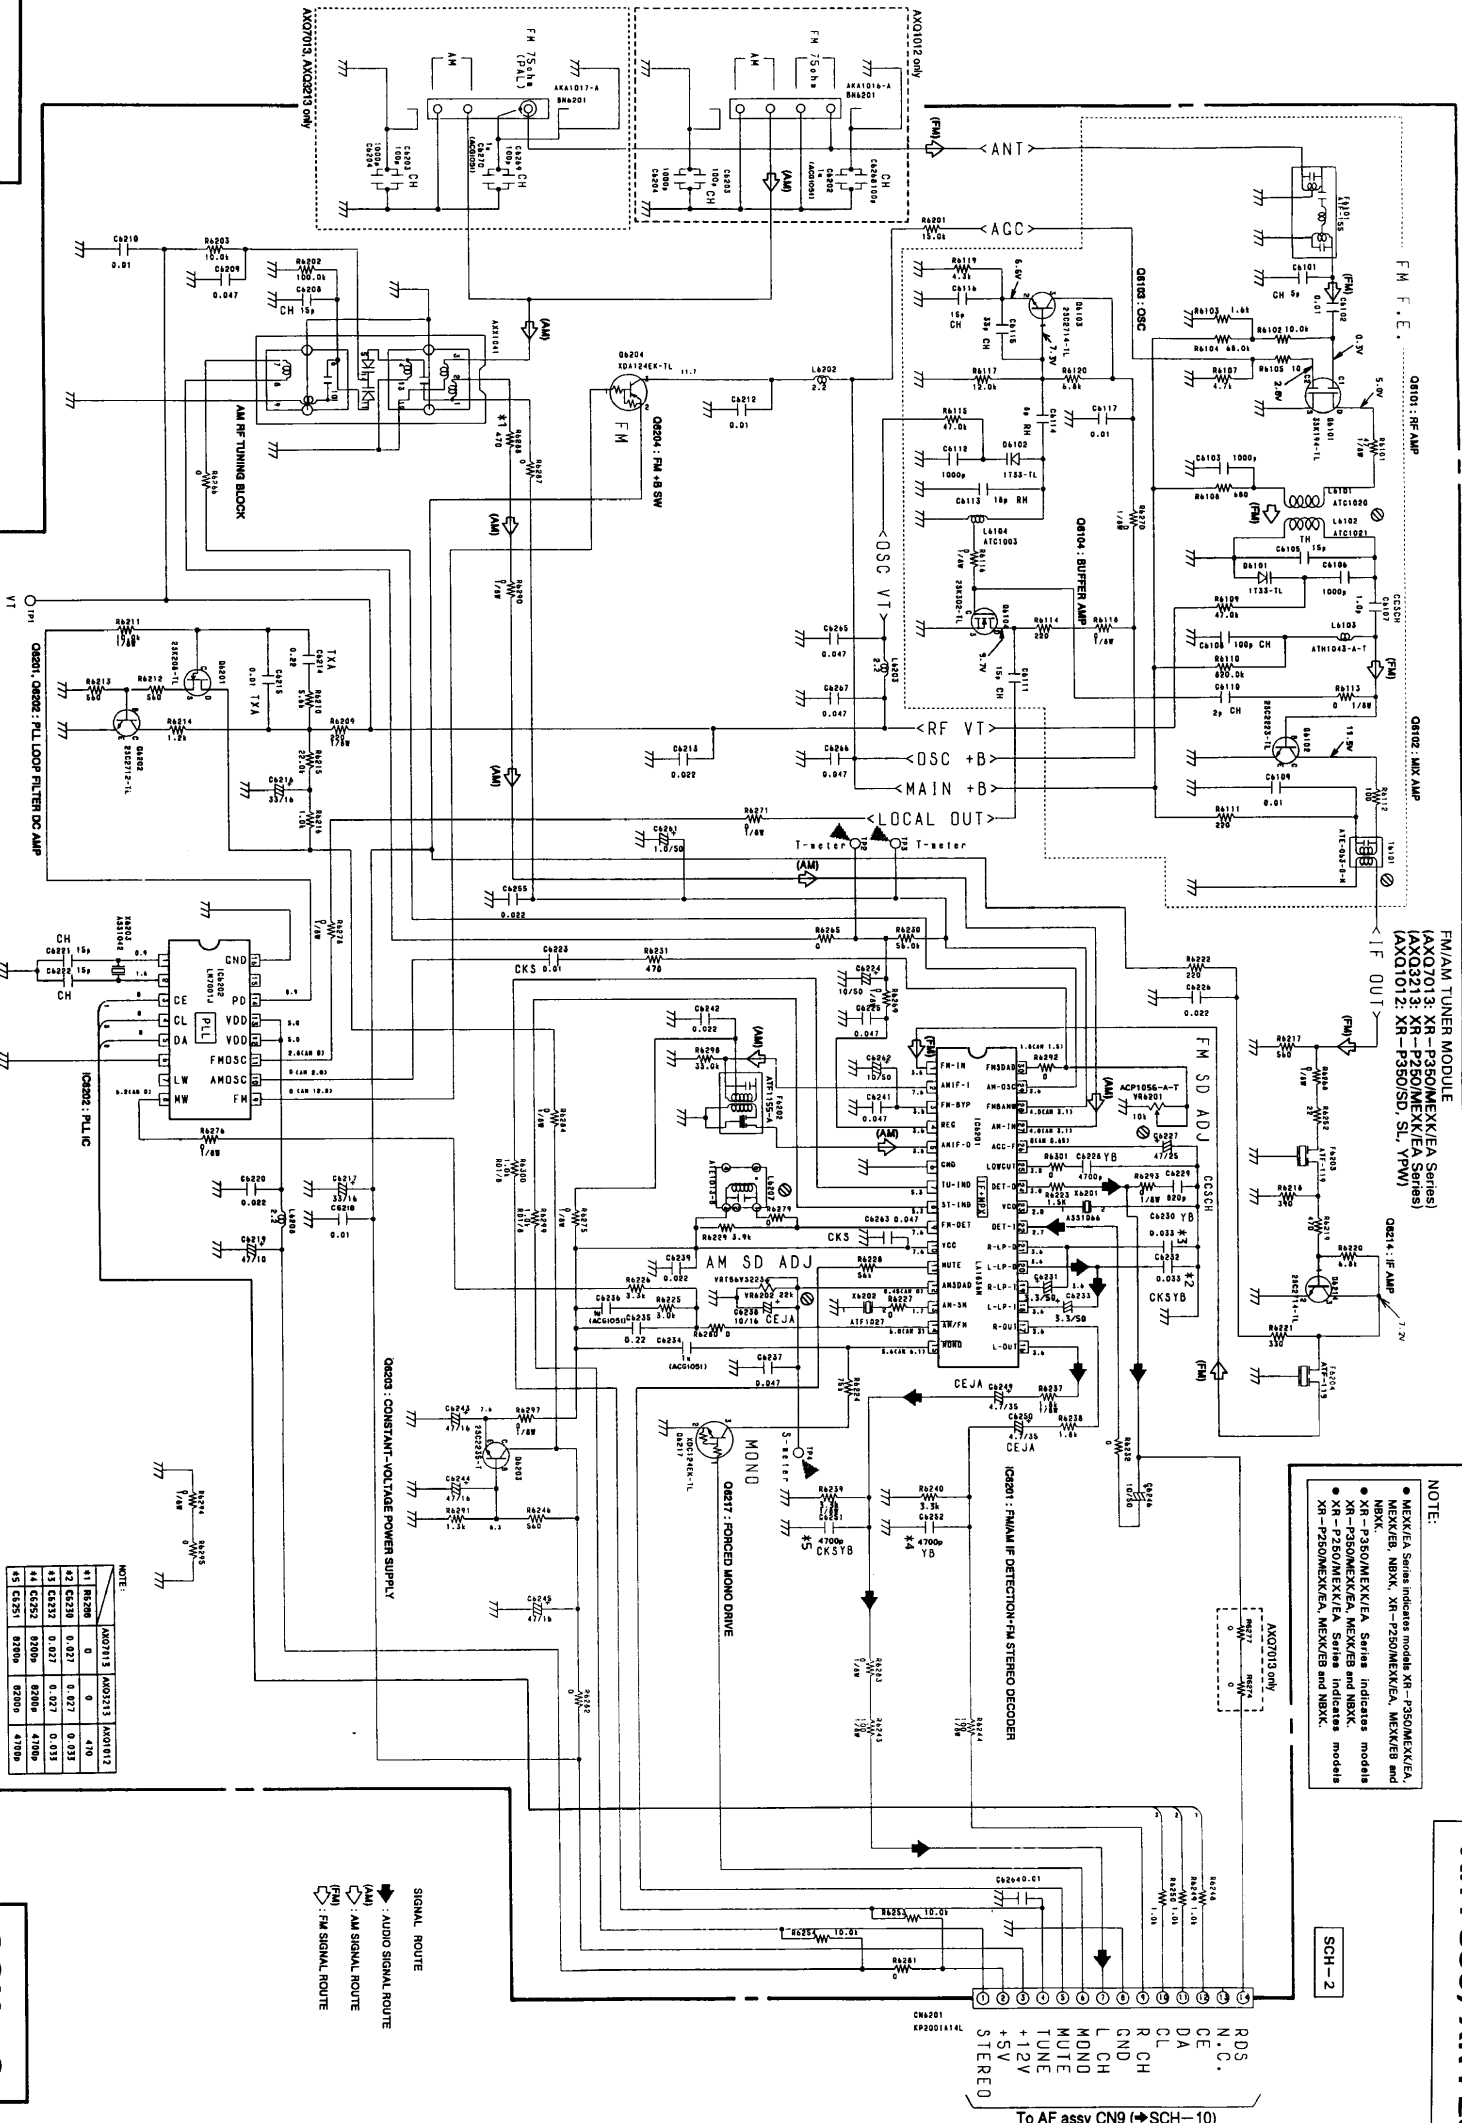

SCH-2

FM/AM TUNER MODULE
(For AXQ7013, AXQ3213 and AXQ1012)

FM/AM TUNER MODULE
(For AXQ7013, AXQ3213 and AXQ1012)

SCH-2

NOTE:


	AXQ713	AXQ3213	AXQ1012
41	R8208	0	410
42	S2328	0.027	0.153
43	C2323	0.027	0.153
44	C2323	0.027	0.153
45	C2323	0.027	0.153

For XR-P350/MEZIXK/DI (AXQ7014)
XR-P250/MEZIXK/DI (AXQ3214)

SCH-3
FM/AM TUNER MODULE
(For AXQ7014 and AXQ3214)

SCH-3
FM/AM TUNER MODULE
(For AXQ7014 and AXQ3214)

SCH-3

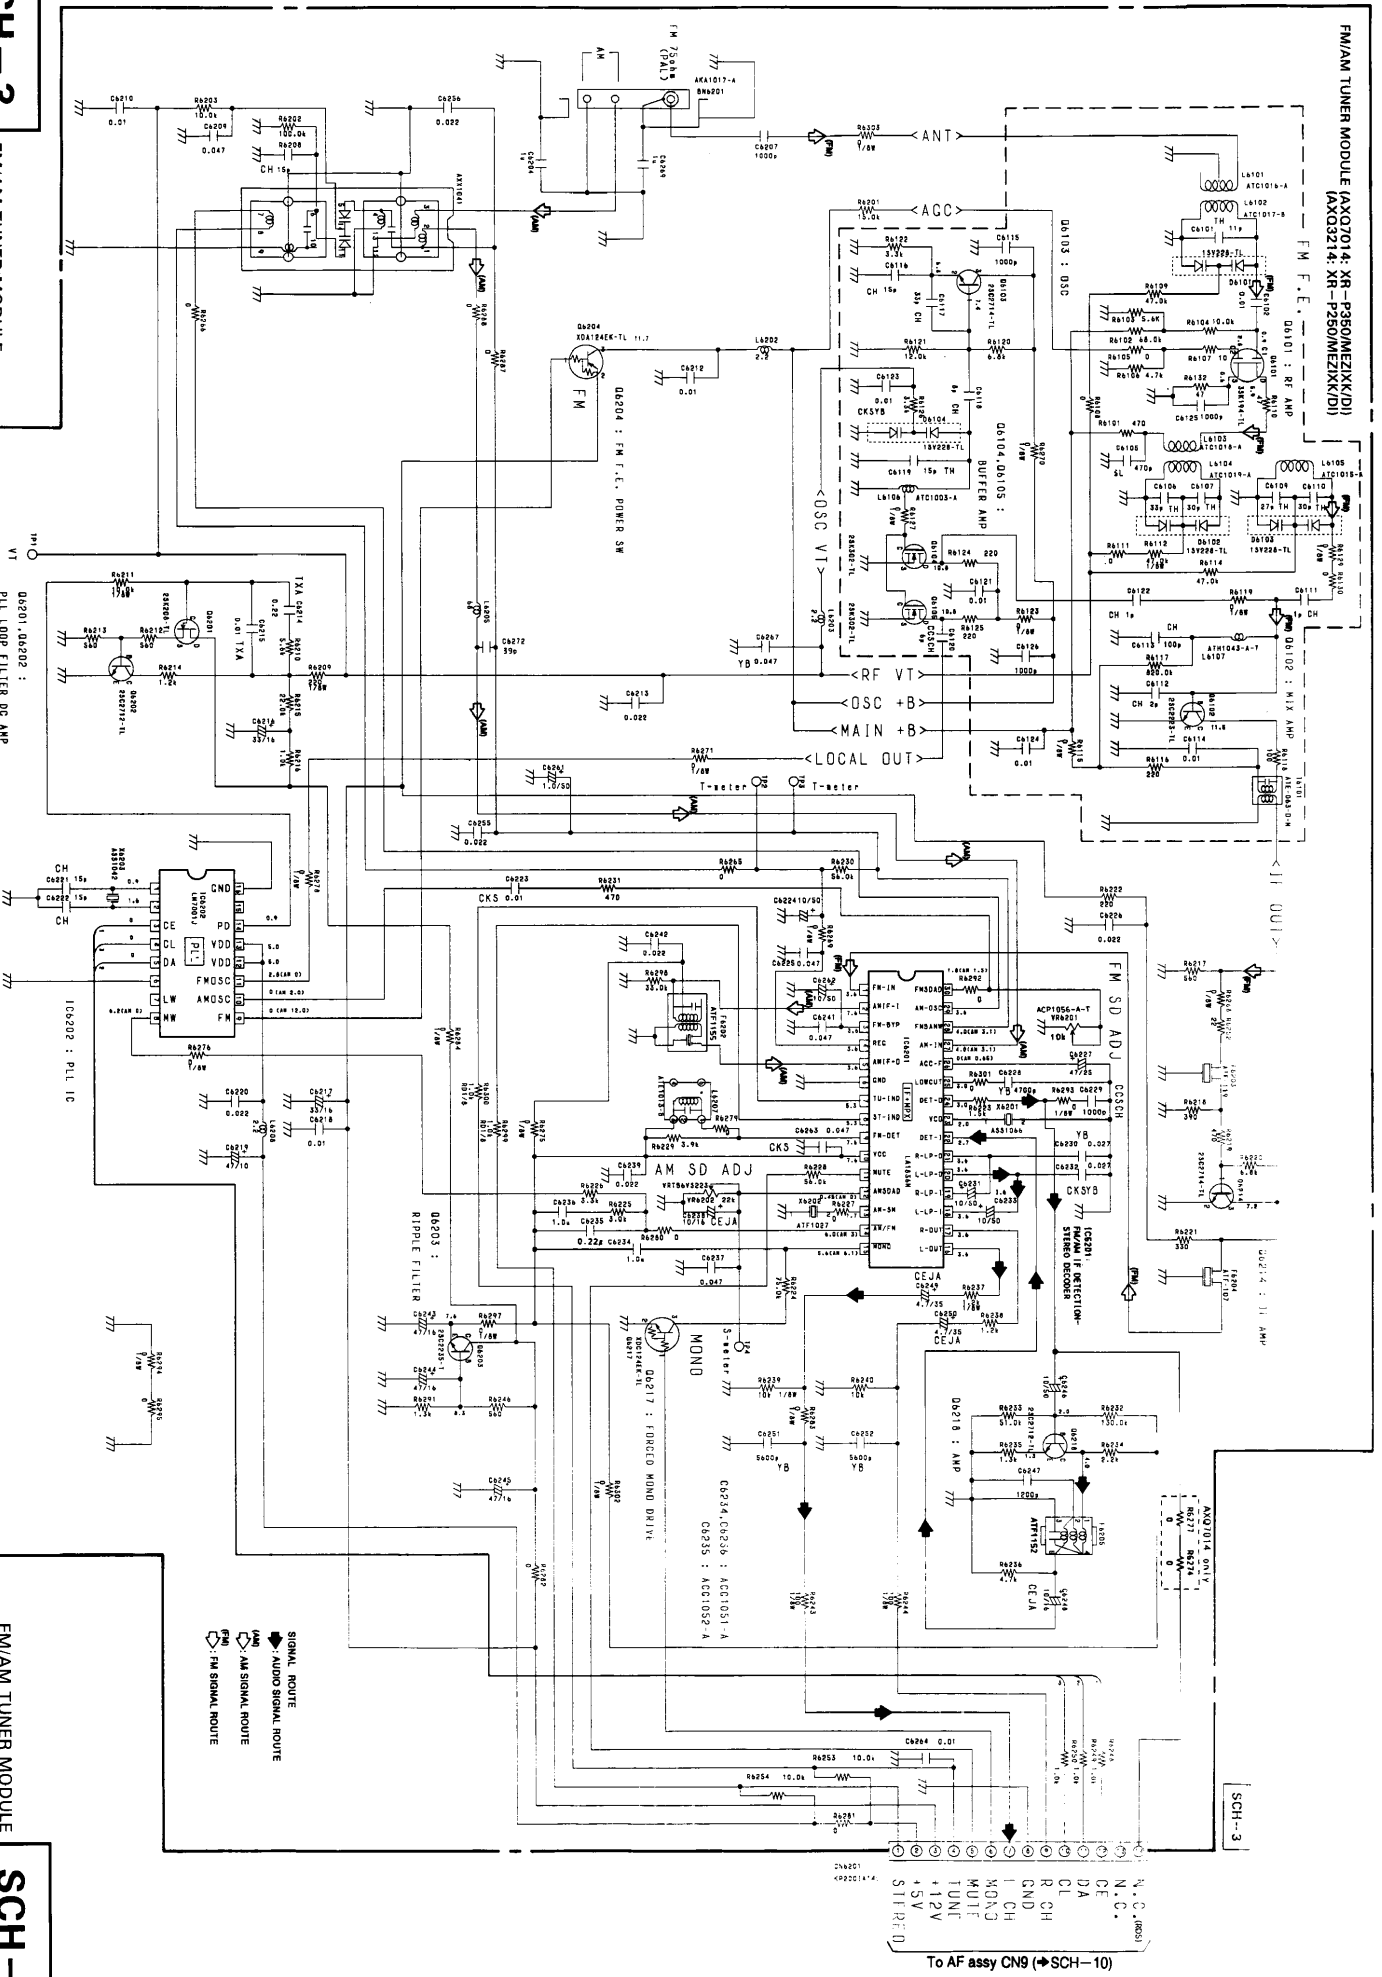

N.C. (JMS3)
 CE
 DA
 CL
 CH
 CND
 I CH
 KOND
 MUF
 TUNT
 +12V
 4.5V
 STRE: D
 To AF assy CN9 (→SCH-10)

FM/AM TUNER MODULE (AXQ7014 and AXQ3214)

A

A

Q6101

B

B

Q6204

Q6102

Q6214

Q6104

Q6103

Q6105

C

C

IC6202

VR6201

IC6201

Q6217

To AF assy CN9

Q6202

Q6201


Q6203

Q6218

VR6202


D

D

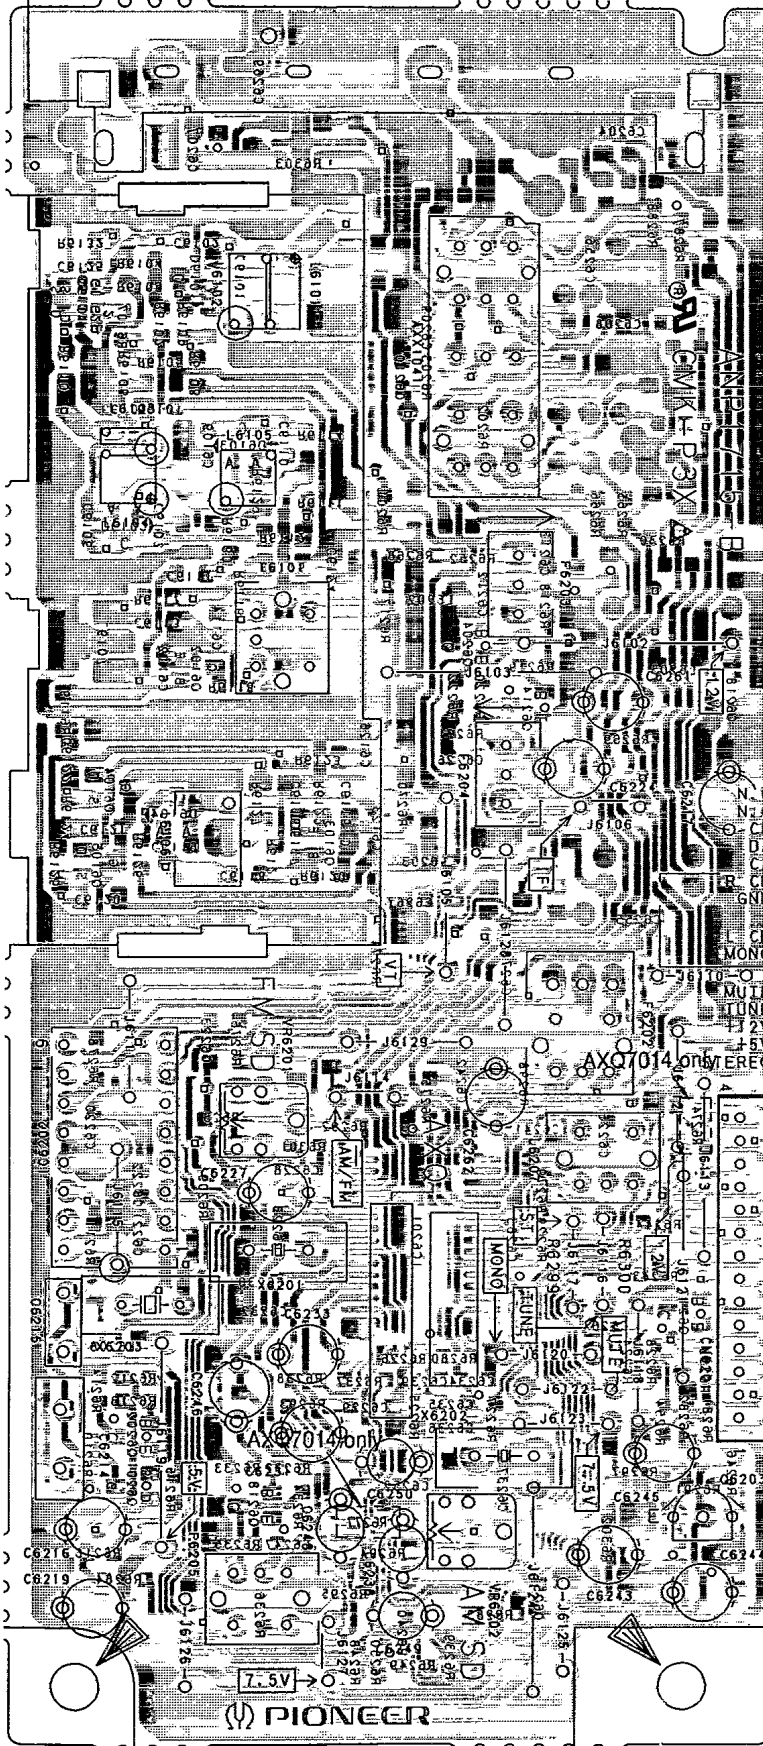

• This diagram is viewed from the mounted parts side.

FM/AM TUNER MODULE (AXQ7014 and AXQ3514)

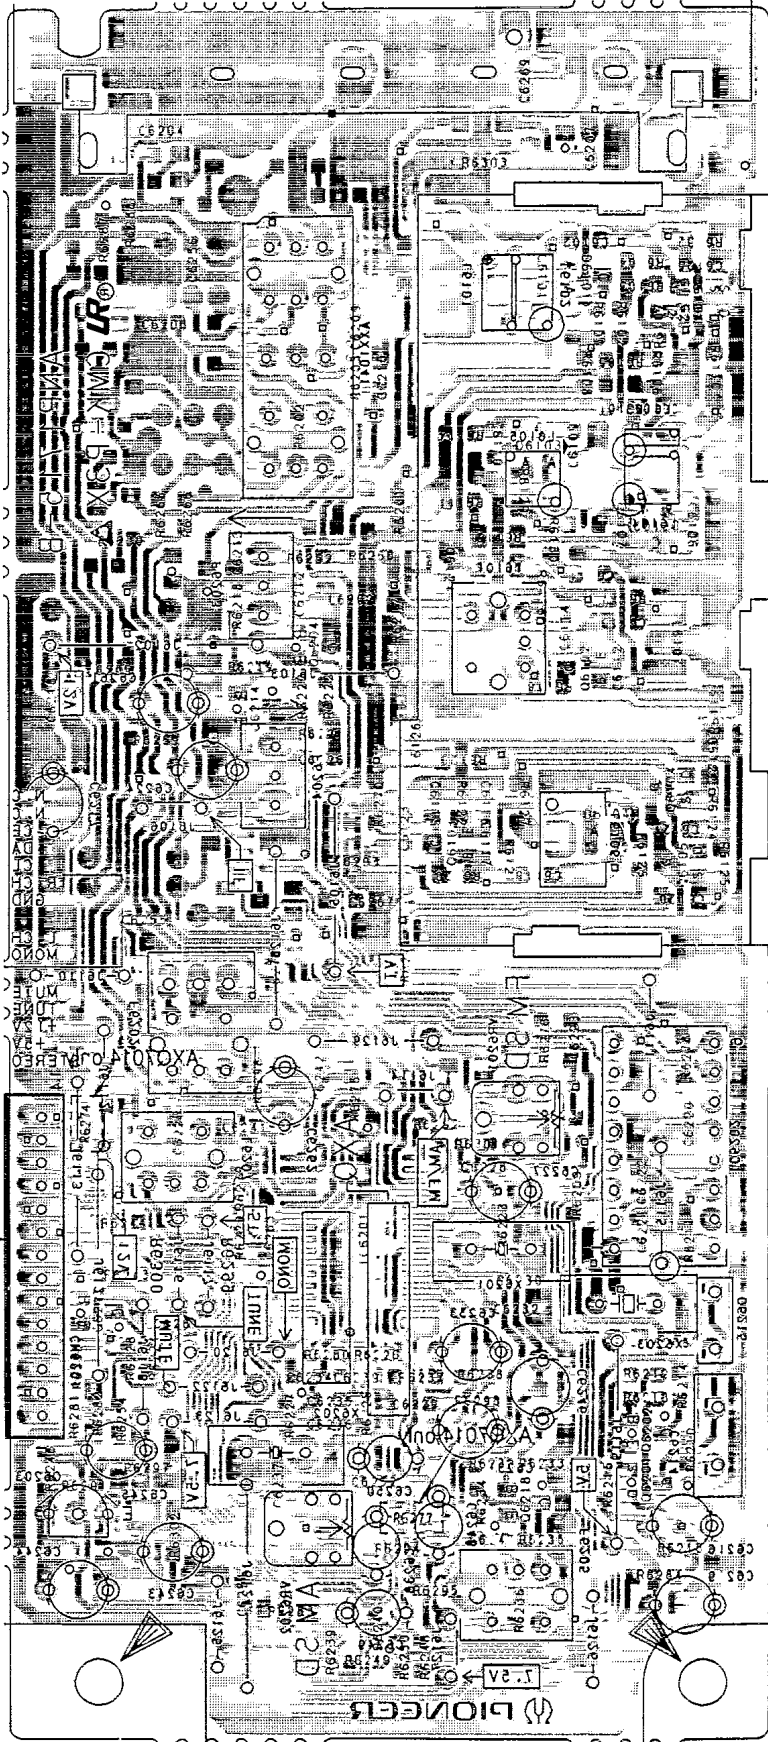

TO AF assy CNG

• This diagram is viewed from the foil side.

08101

08504

08105

08514

08104

08103

08102

VRB501

IC9505

IC9501

08517

08505

08501

08503

08518

VRB505

A

B

C

D

A

B

C

D

PCB-3

3

S

A

A

FMM TUNER MODULE (AXO1016)

B

B


C

C

D

D

To AF assy CNA

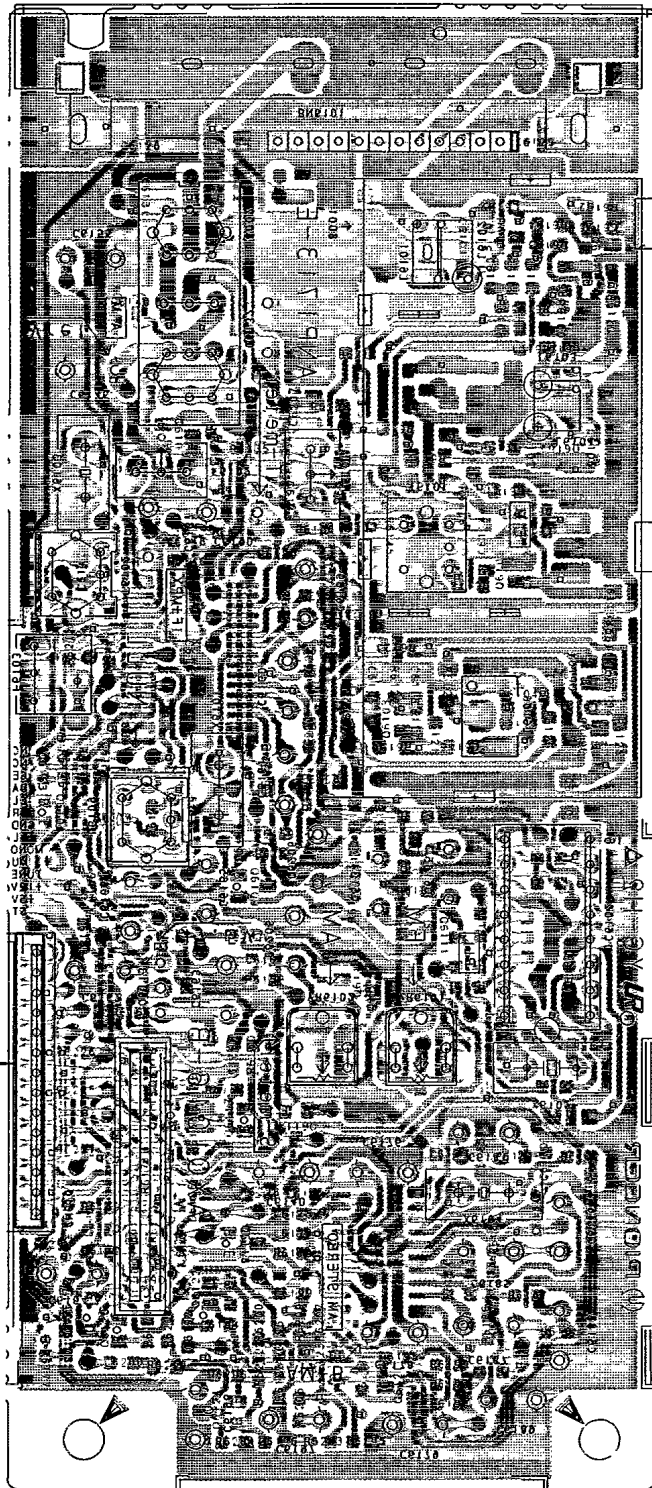

- 08101
- 08102
- 08103
- 08104
- 08105
- 08106
- 08107
- 08108
- 08109
- 08110
- 08111
- 08112
- 08113
- 08114
- 08115
- 08116
- 08117
- 08118
- 08119
- 08120
- 08121
- 08122
- 08123
- 08124
- 08125
- 08126
- 08127
- 08128
- 08129
- 08130
- 08131
- 08132
- 08133
- 08134
- 08135
- 08136
- 08137
- 08138
- 08139
- 08140
- 08141
- 08142
- 08143
- 08144
- 08145
- 08146
- 08147
- 08148
- 08149
- 08150
- 08151
- 08152
- 08153
- 08154
- 08155
- 08156
- 08157
- 08158
- 08159
- 08160
- 08161
- 08162
- 08163
- 08164
- 08165
- 08166
- 08167
- 08168
- 08169
- 08170
- 08171
- 08172
- 08173
- 08174
- 08175
- 08176
- 08177
- 08178
- 08179
- 08180
- 08181
- 08182
- 08183
- 08184
- 08185
- 08186
- 08187
- 08188
- 08189
- 08190
- 08191
- 08192
- 08193
- 08194
- 08195
- 08196
- 08197
- 08198
- 08199
- 08200

- This diagram is viewed from the gray colored foil side.
- This PCB is double sided.

3

S

● For XR-P350/S/DF type (AXQ1016)

A

A

FM/AM TUNER MODULE (AXQ1016)

B

B


C

C

D


D

- Q6101
- Q6107
- Q6102
- IC6101
- Q6104
- Q6105
- Q6103
- Q6108
- Q6110
- Q6109
- Q6106
- Q6111
- IC6102
- Q6112
- Q6113
- VR6101
- VR6102
- Q6115
- Q6117
- Q6114
- Q6118
- IC6103
- Q6122
- Q6119
- Q6120
- Q6123
- Q6121
- Q6124

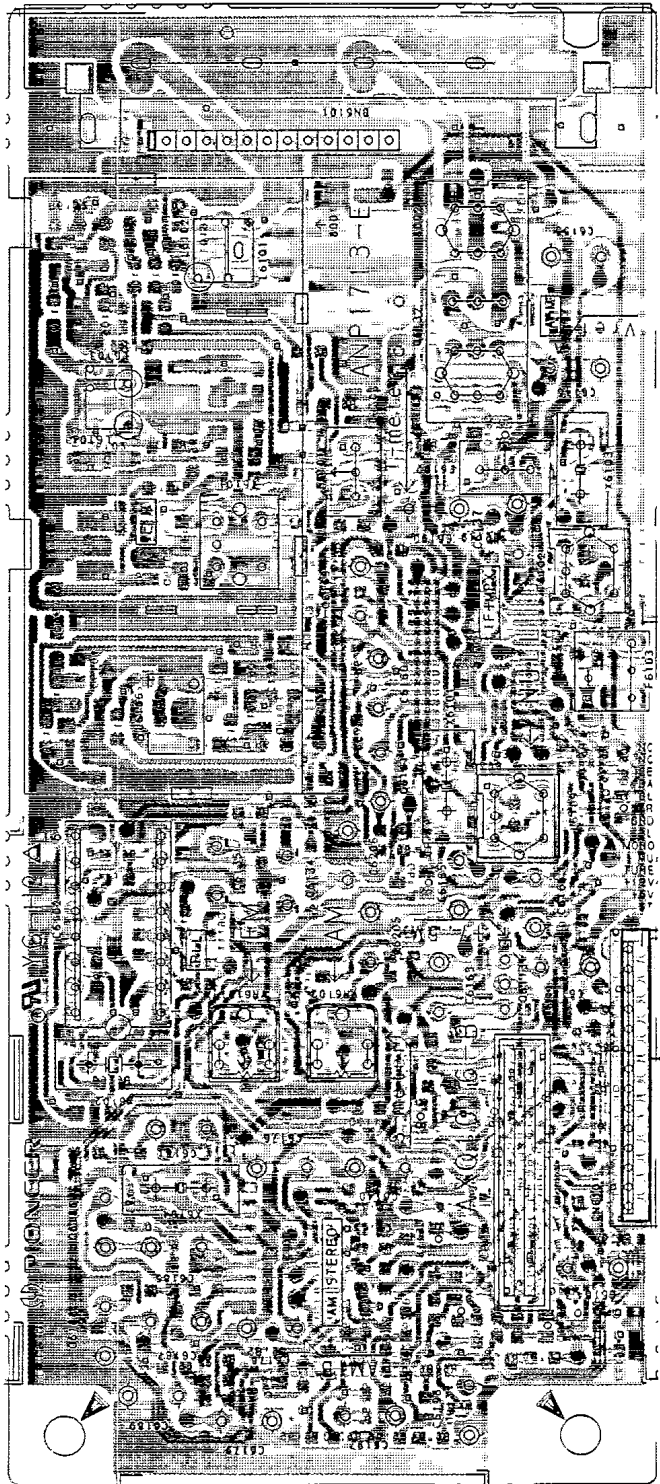

To AF assy CN9

- This diagram is viewed from the pink colored foil side.
- This PCB is double sided.

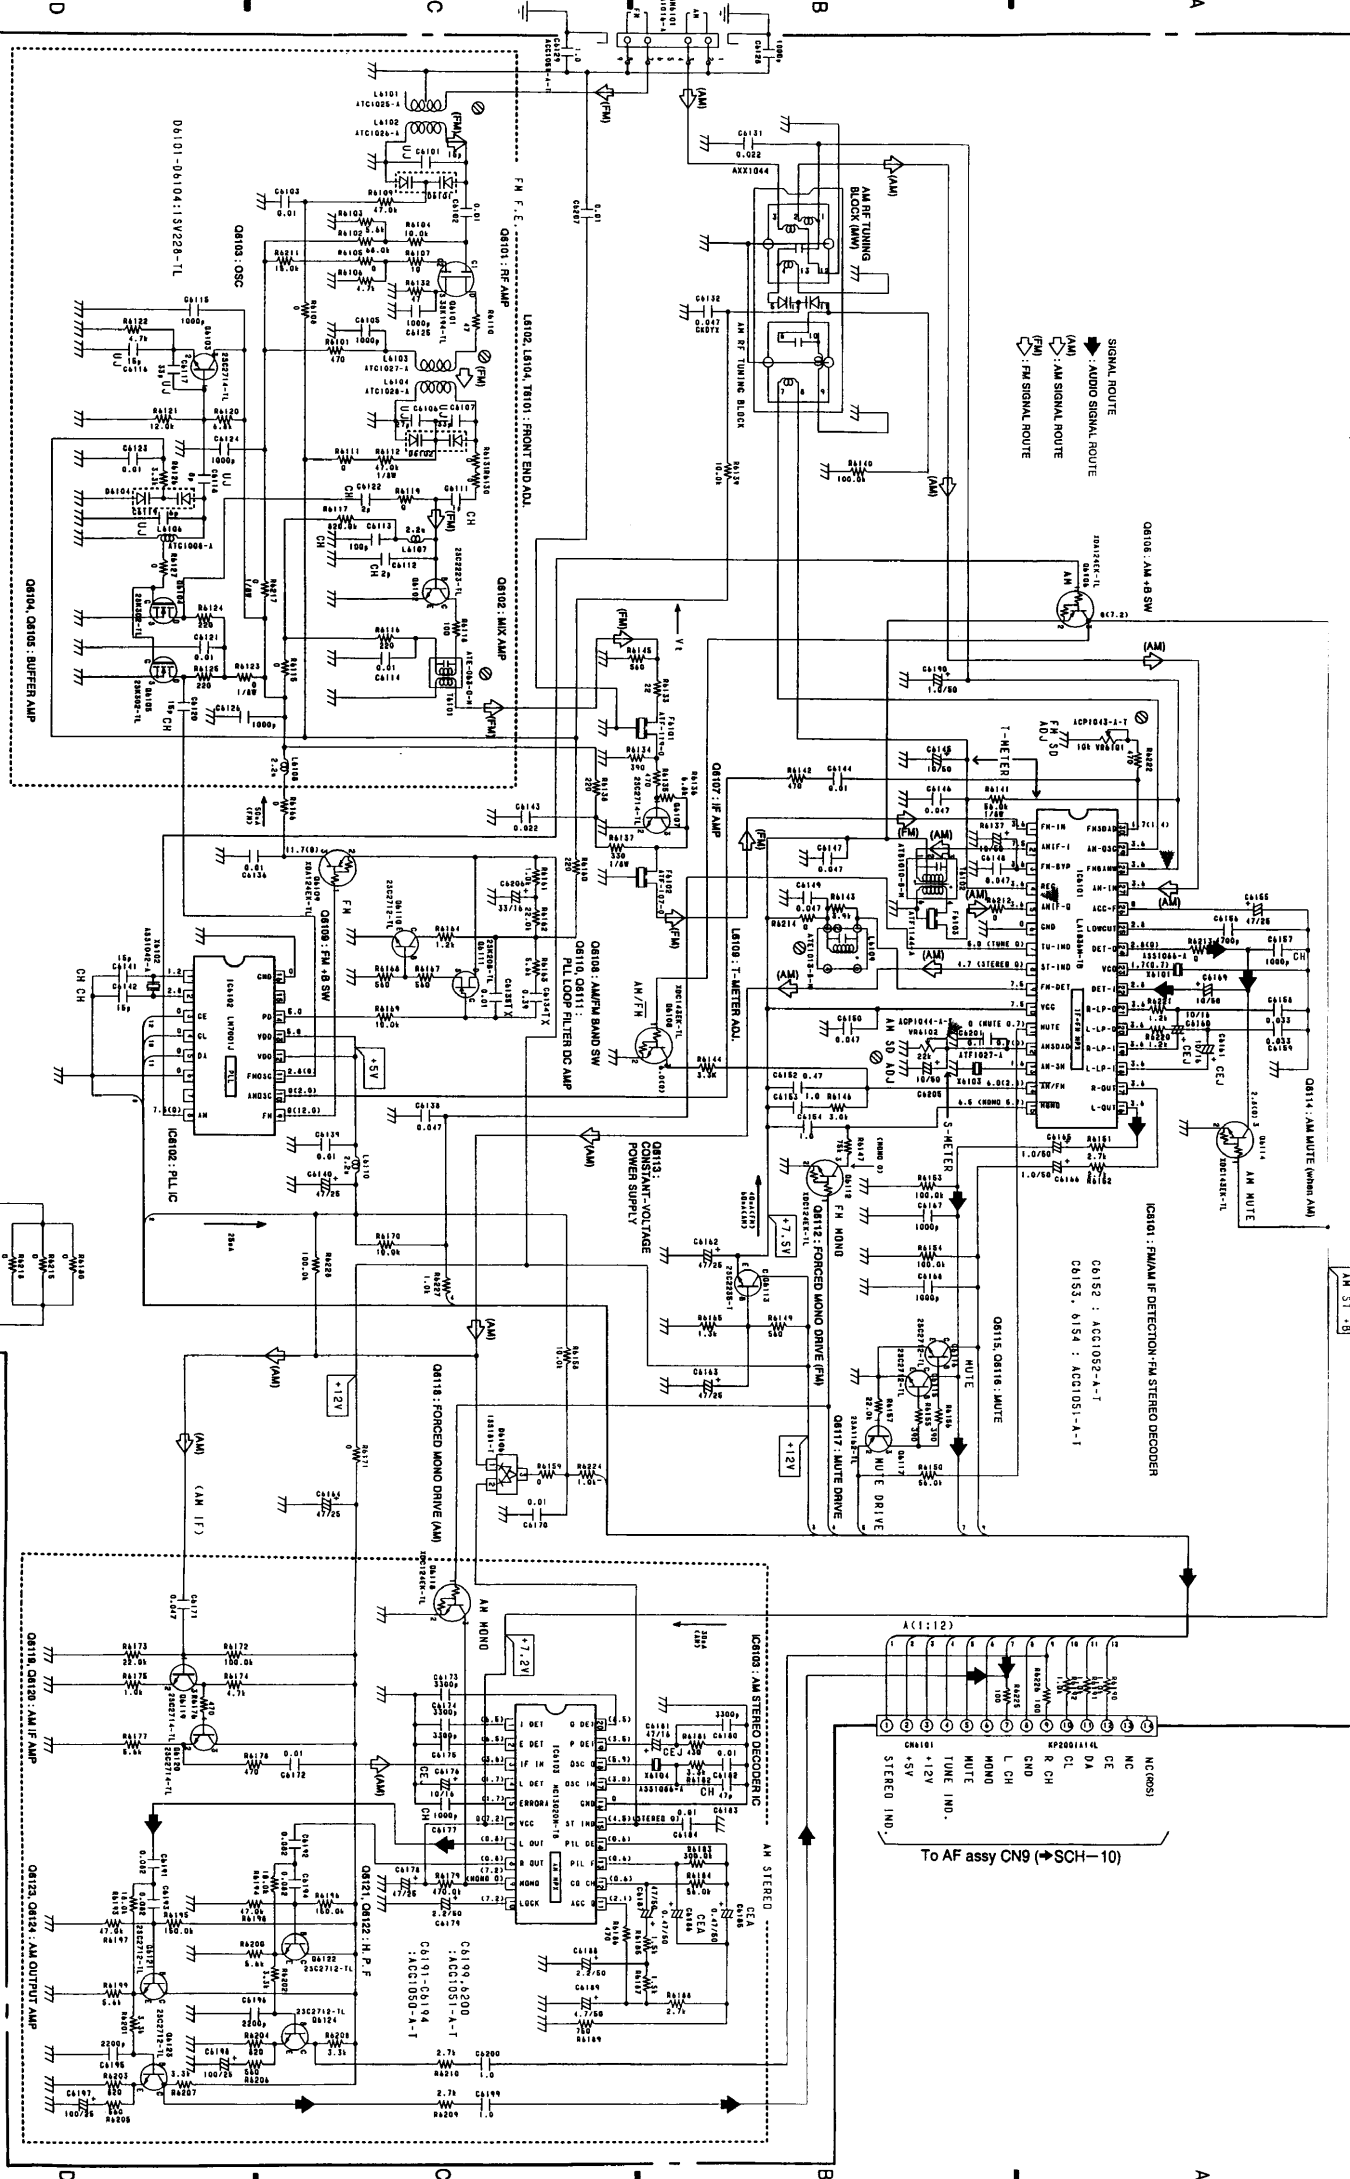

SCH-4



FM/AM TUNER MODULE
(For AXQ1016)

FM/AM TUNER MODULE
(For AXQ1016)

SCH-4

44

8.3 LED BOARD ASSY, SENSOR BOARD ASSY, MOTOR BOARD ASSY, SW BOARD ASSY, MECHANISM BOARD ASSY AND PICKUP ASSY

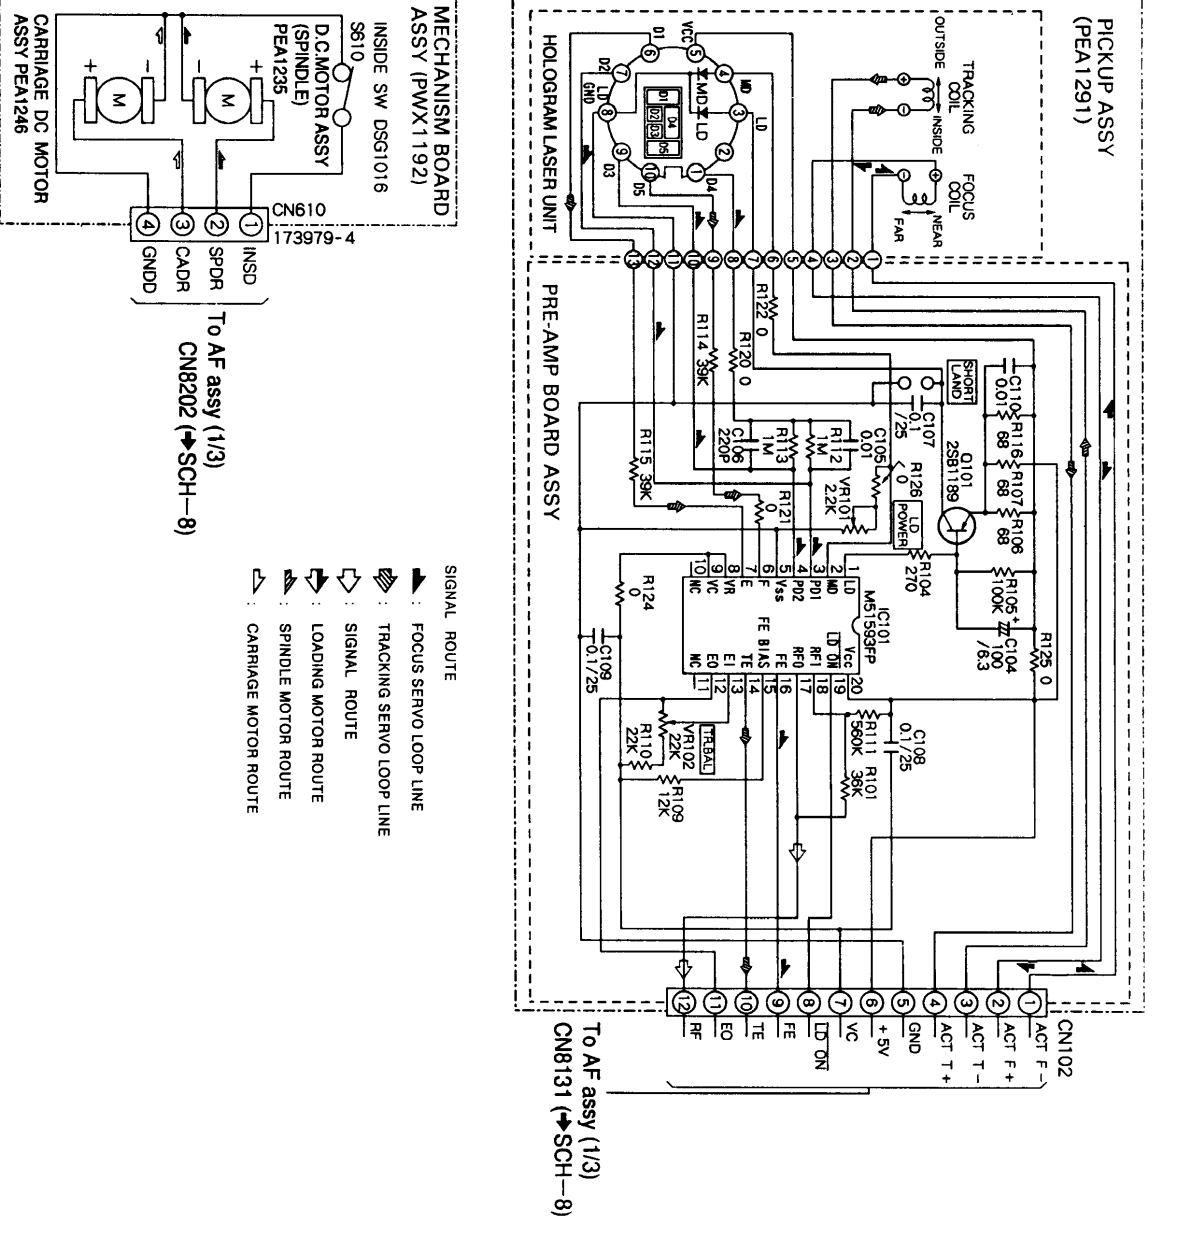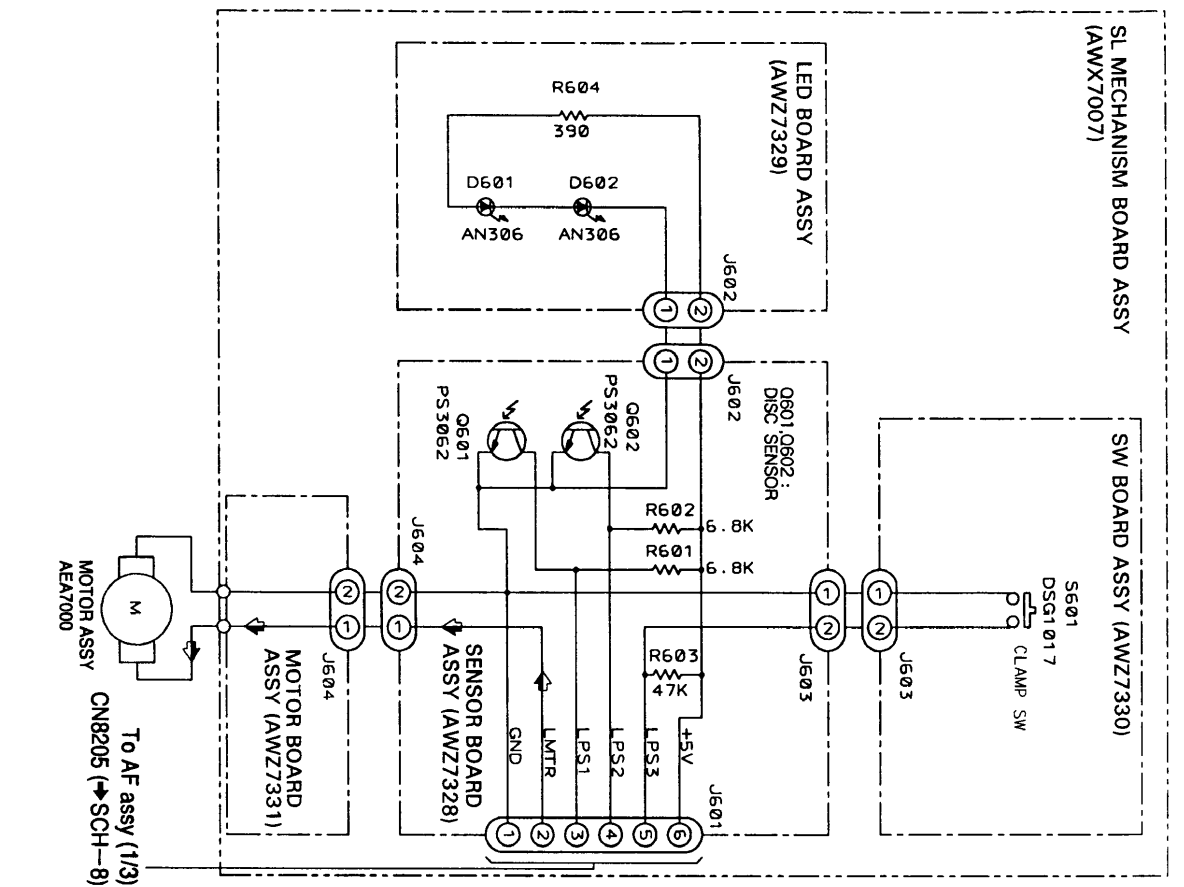

- ▶ SIGNAL ROUTE
- ▶ FOCUS SERVO LOOP LINE
- ▶ TRACKING SERVO LOOP LINE
- ▶ SIGNAL ROUTE
- ▶ LOADING MOTOR ROUTE
- ▶ SPINDLE MOTOR ROUTE
- ▶ CARRIAGE MOTOR ROUTE

SCH-5

SENSOR BOARD ASSY, MOTOR BOARD ASSY, SW BOARD ASSY, MECHANISM BOARD ASSY, LED BOARD ASSY, PICKUP ASSY


SCH-5

SENSOR BOARD ASSY, MOTOR BOARD ASSY, SW BOARD ASSY, MECHANISM BOARD ASSY, LED BOARD ASSY, PICKUP ASSY

A

SENSOR BOARD ASSY

LED BOARD ASSY

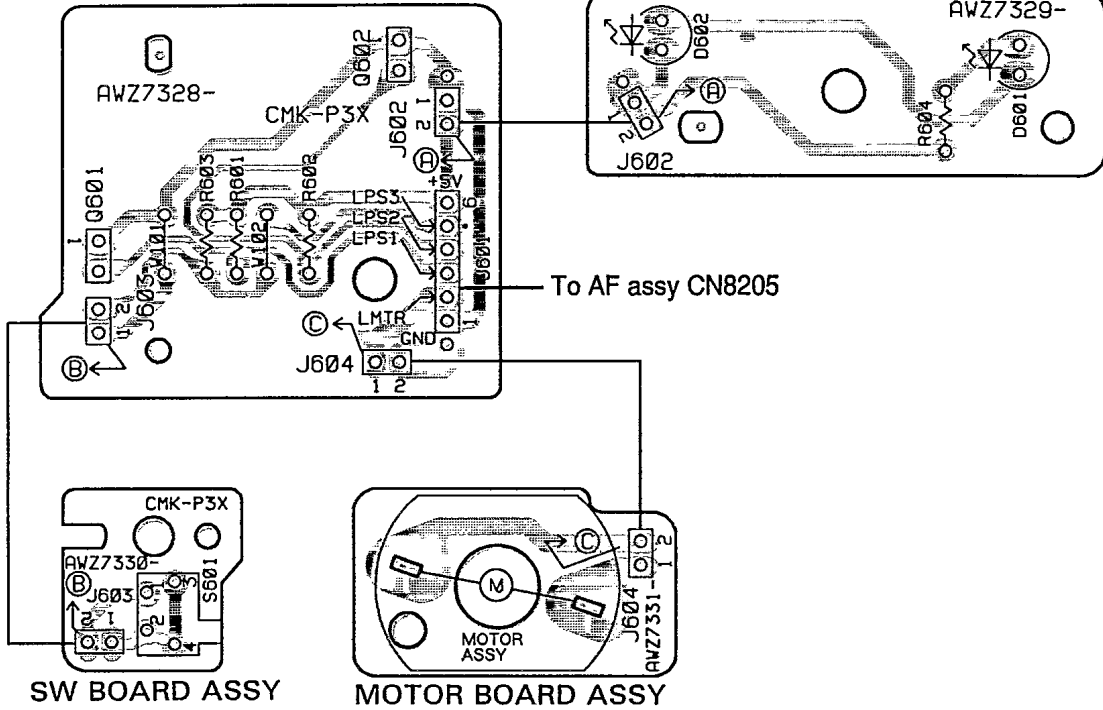


B

• This diagram is viewed from the mounted parts side.


C

MECHANISM BOARD ASSY


PICKUP ASSY

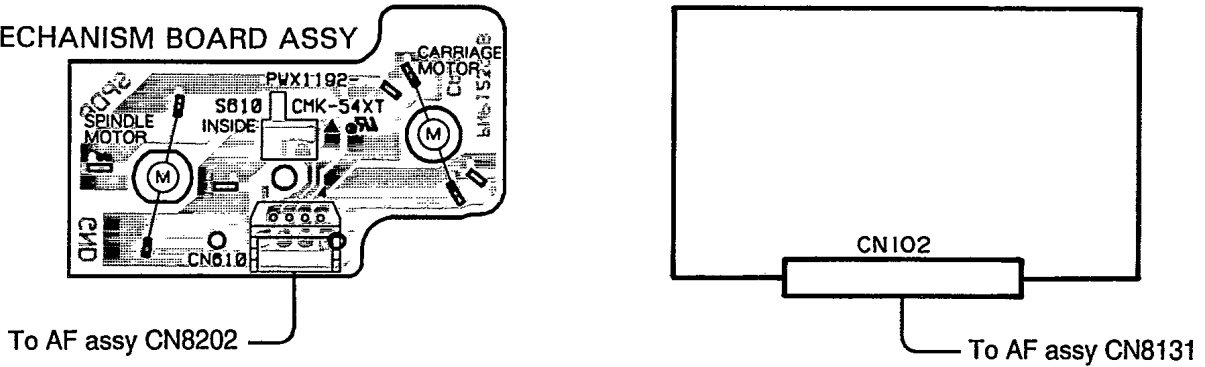

D

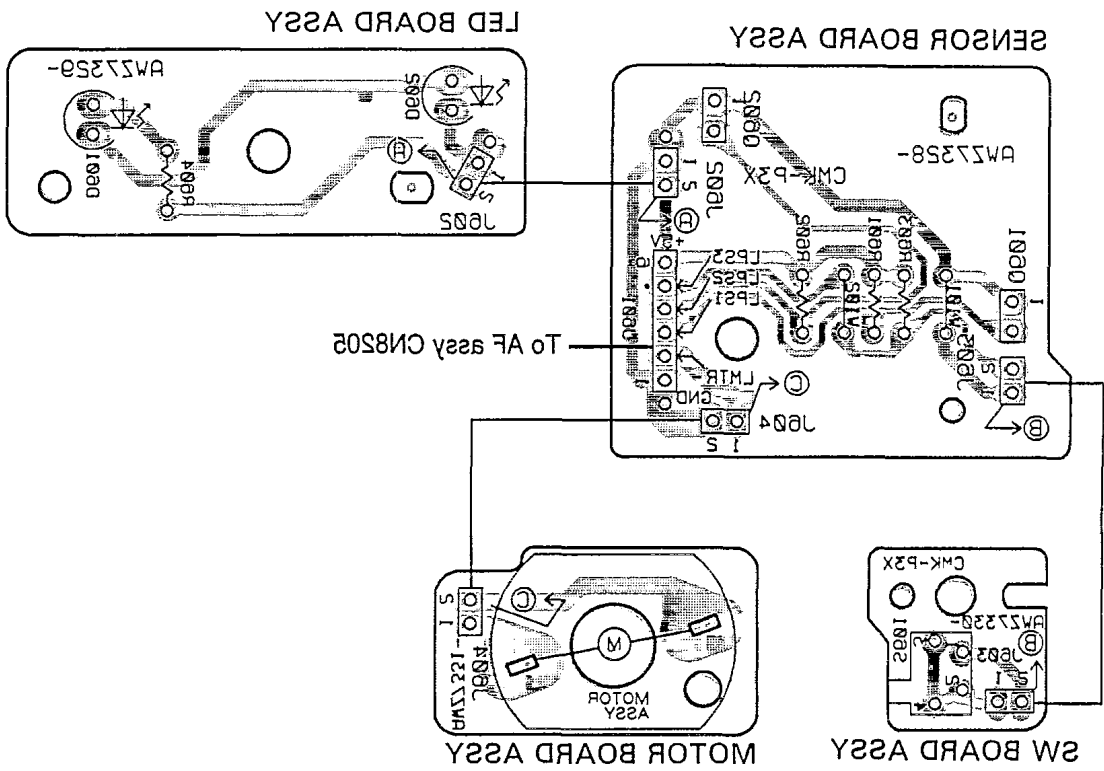

• This diagram is viewed from the foil side.

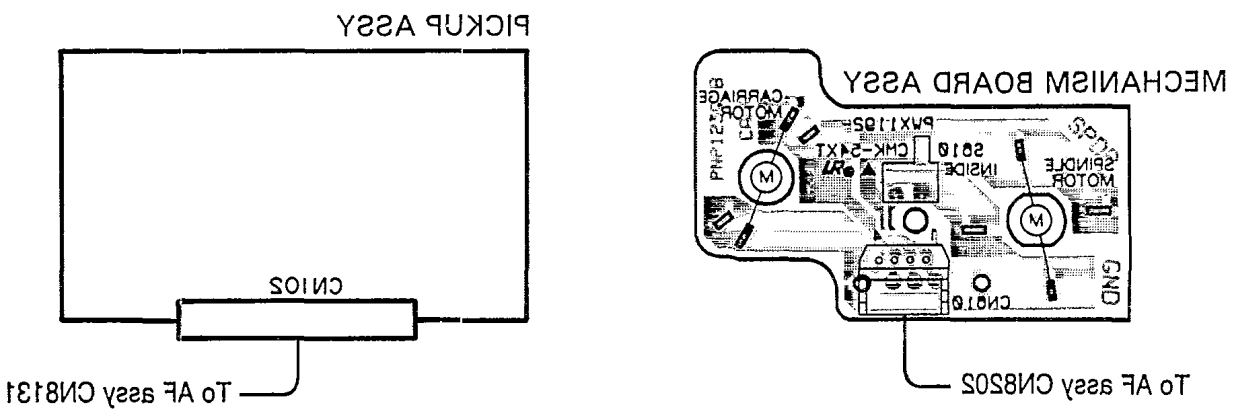

8.4 FRONT 50W ASSY


• This diagram is viewed from the mounted parts side.

A

A

FRONT 50W ASSY

- Q7508
- Q7507
- Q7517
- IC7501
- Q7501
- Q7513
- Q7505
- Q7515
- Q7603
- Q7516
- Q7506
- Q7601
- Q7511
- Q7512
- Q7602

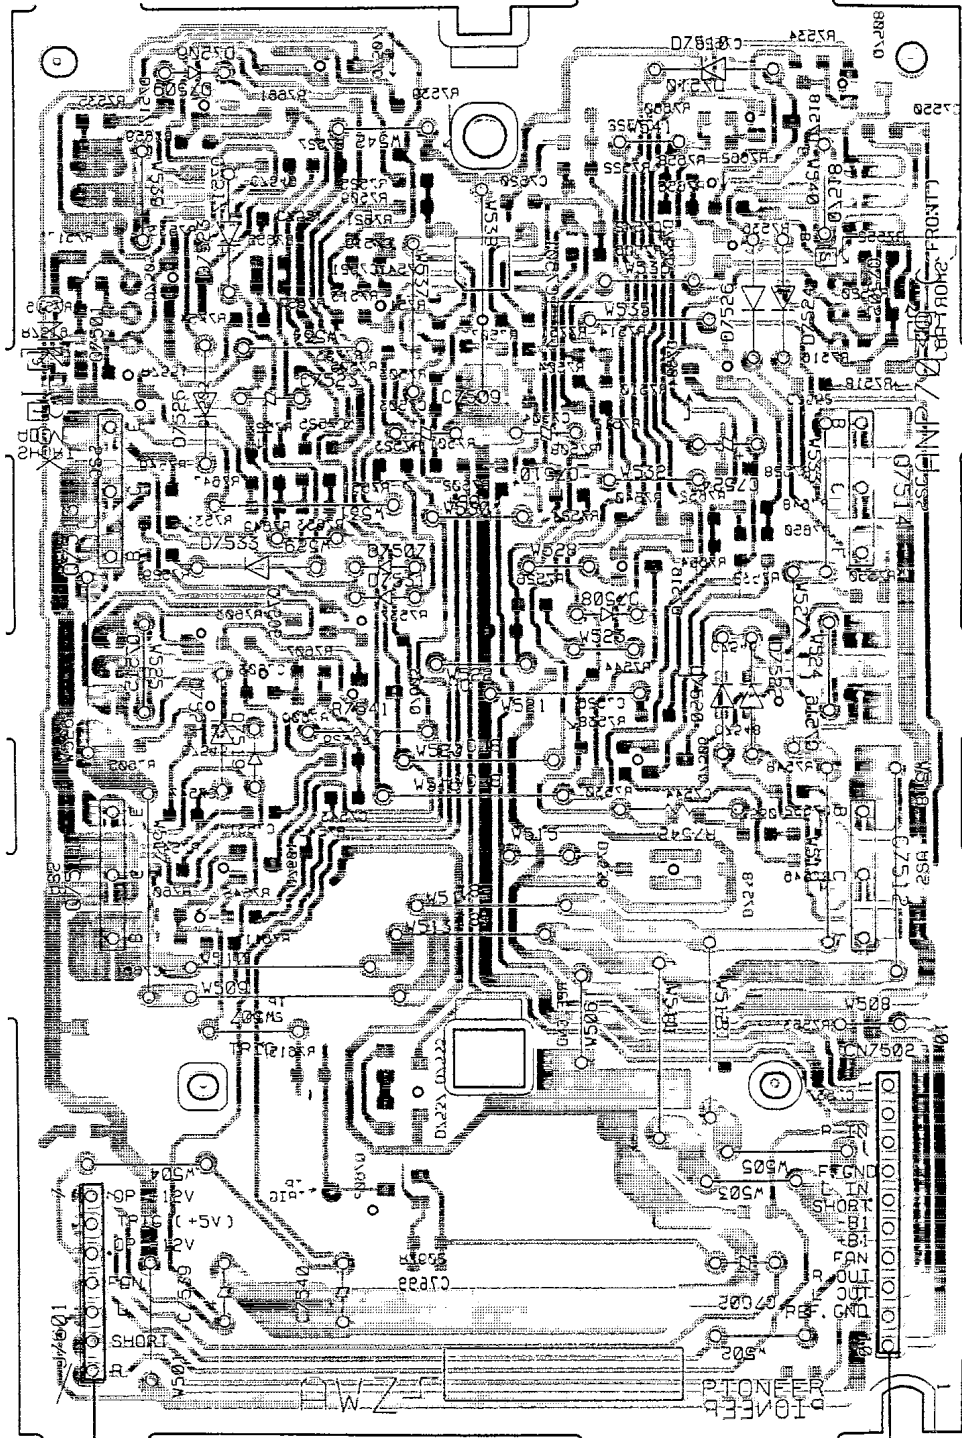

7

B

B

C

C

D

D


To REGULATOR assy J7601

To AF assy J6


To REGULATOR ASSY J7601 (SCH-7) To AF ASSY (3/3) J6 (SCH-10)

FRONT 50W ASSY (AWZ7561:MEKX/EA,MEKX/EB,NBXX,MEZIXK/DI TYPES) (AWZ7517:SD,SL,YPW,S/DF TYPES)

SIGNAL ROUTE AUDIO SIGNAL ROUTE

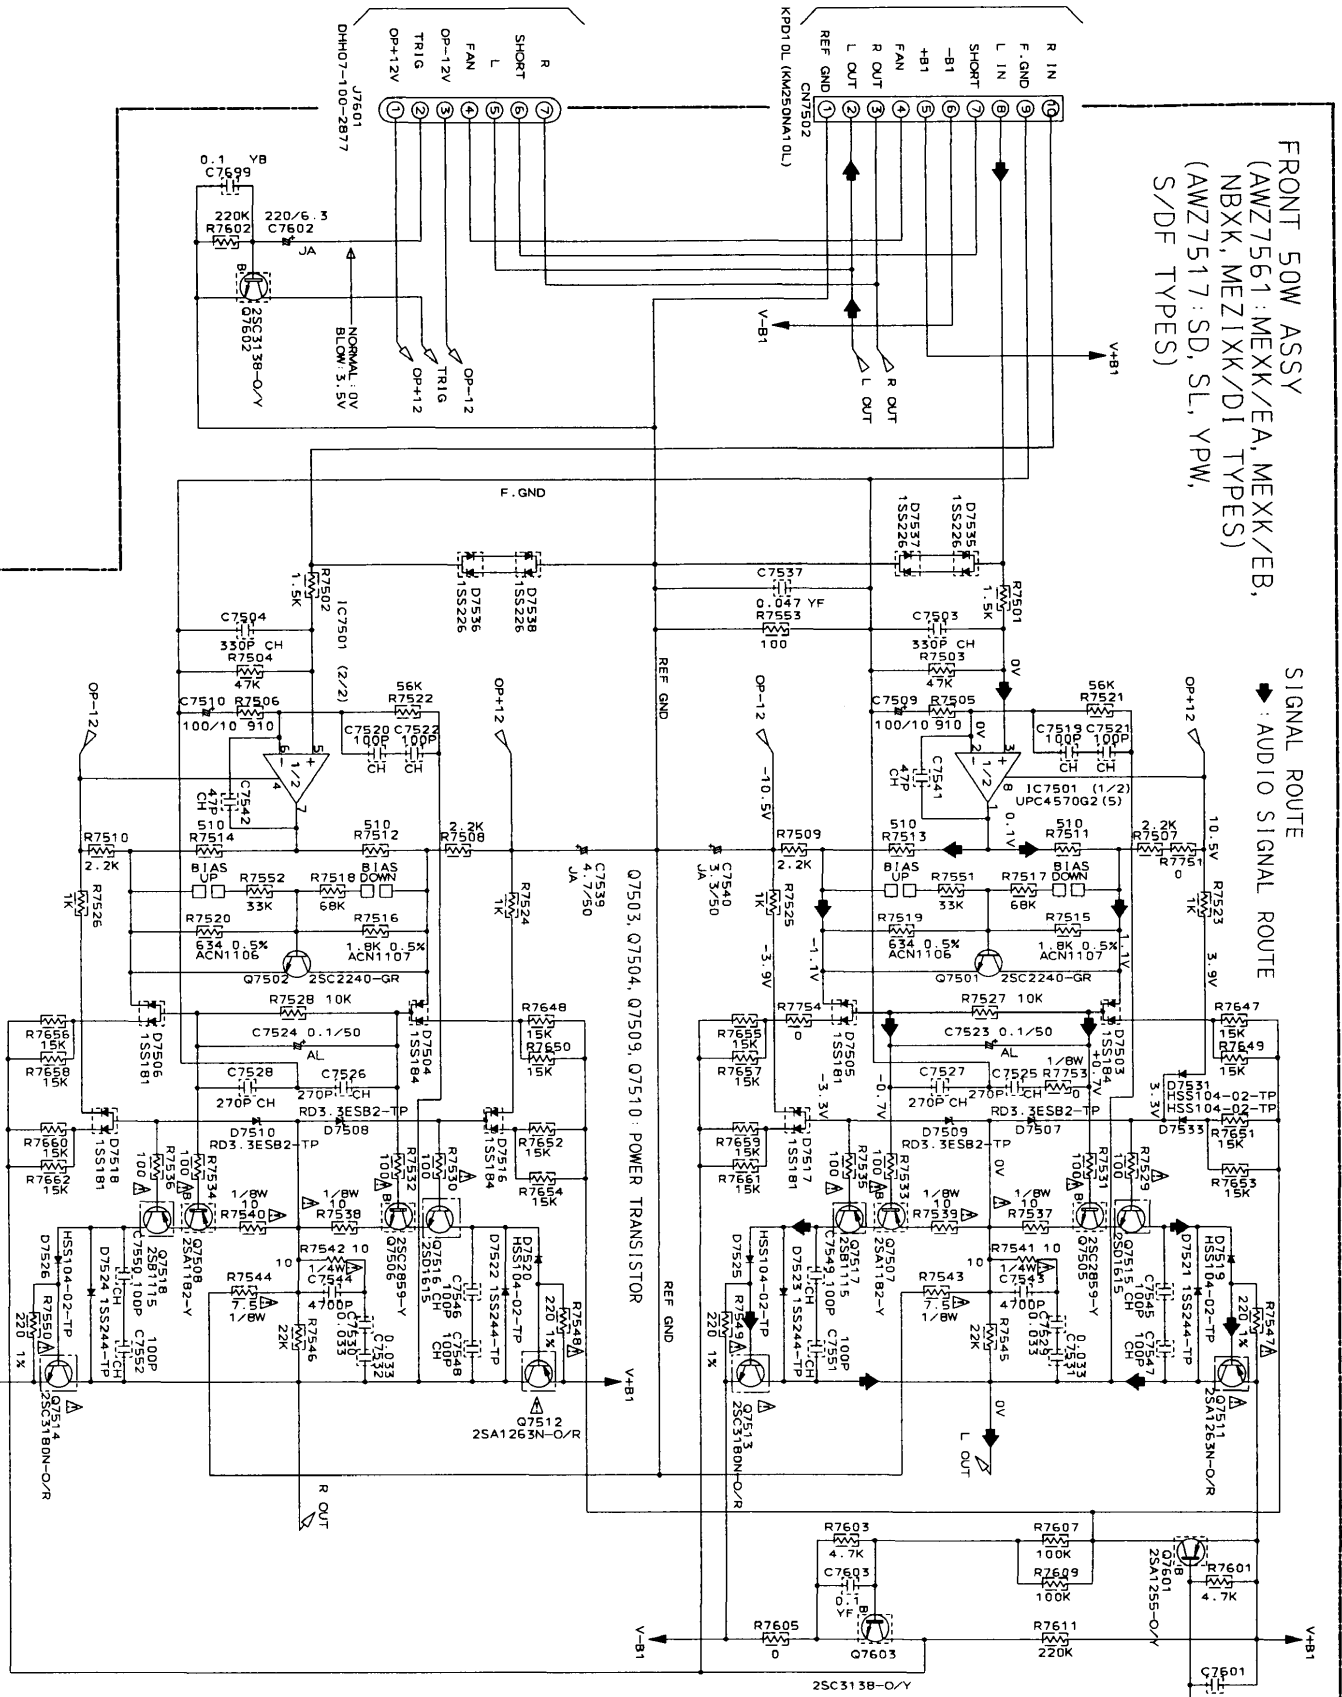

REGULATOR ASSY
(AWZ7562: MEXK/EA, MEXK/EB, NBKX, MEZ1KX/D1 TYPES)
(AWZ7560: SD, SL, YPW, S/DF TYPES)

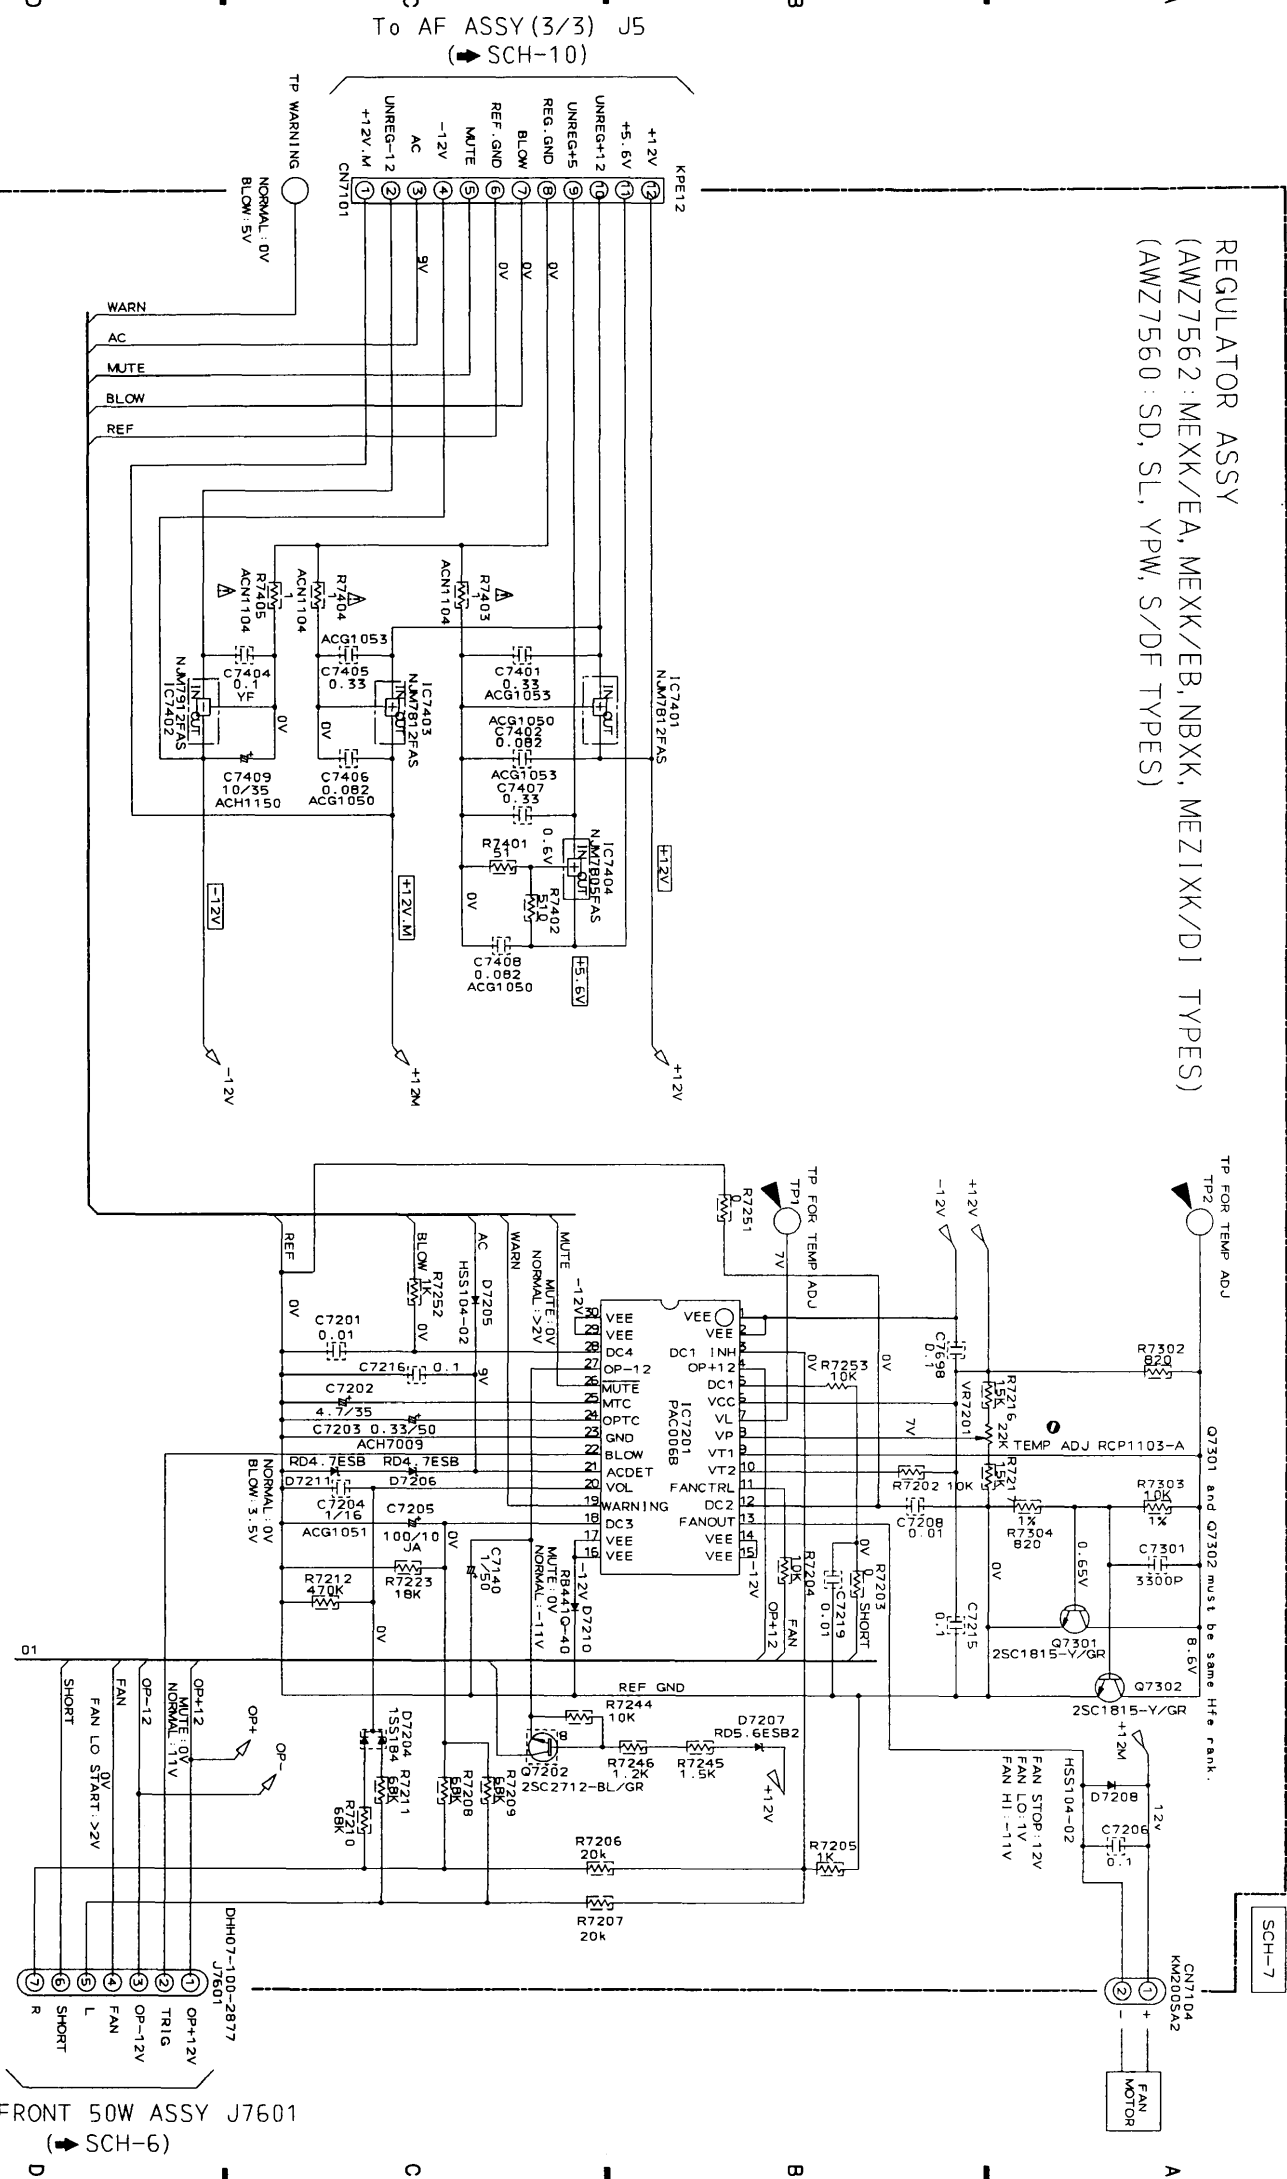

SCH-7

REGULATOR ASSY

SCH-7

SCH-7

REGULATOR ASSY

To FRONT 50W ASSY J7601 (SCH-6)

To AF ASSY (3/3) J5 (SCH-10)

REGULATOR ASSY

PCB-6

A

A

B

B


C

C

D

D

- Q7202
- IC7401 IC7402
- Q7302
- Q7301
- IC7404 IC7403
- IC7201

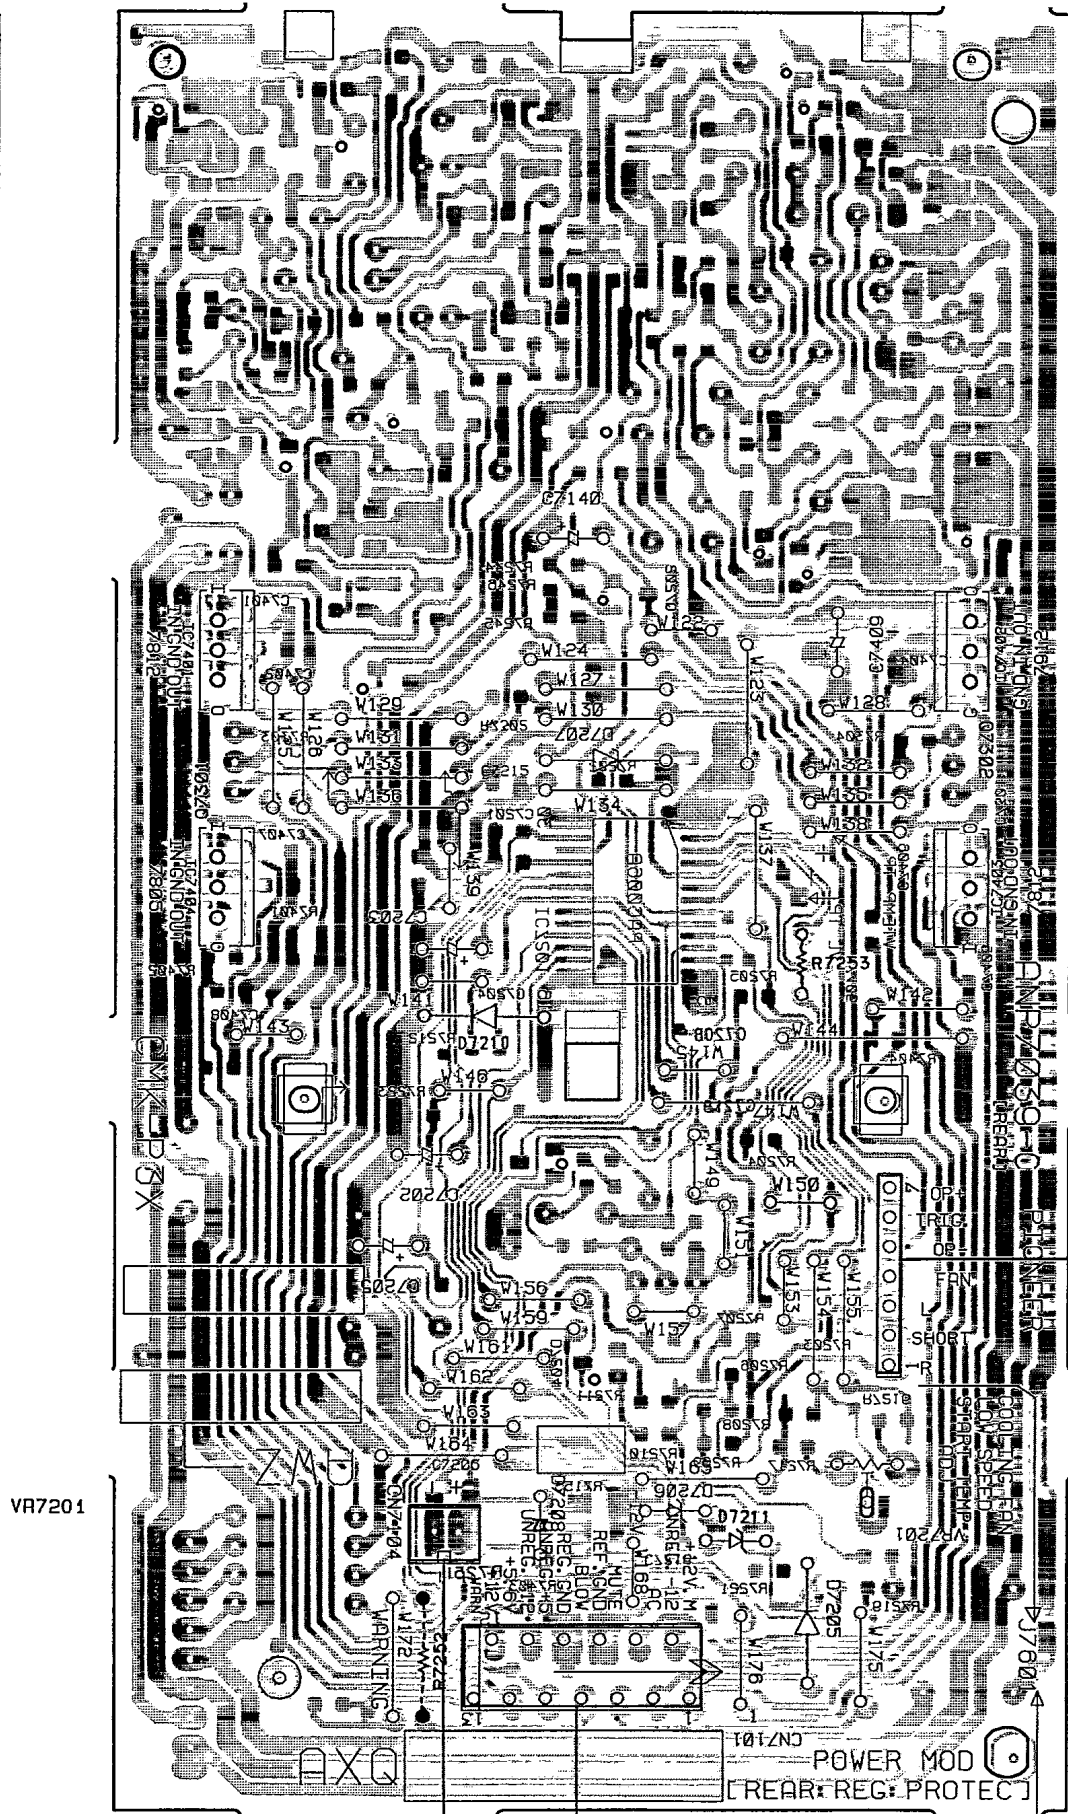

VR7201

To FAN MOTOR

To FRONT 50W assy J7601

To AF assy J5

POWER MOD
[REAR REG. PROTECT]

• This diagram is viewed from the mounted parts side.


PCB-6

A

B

C

D

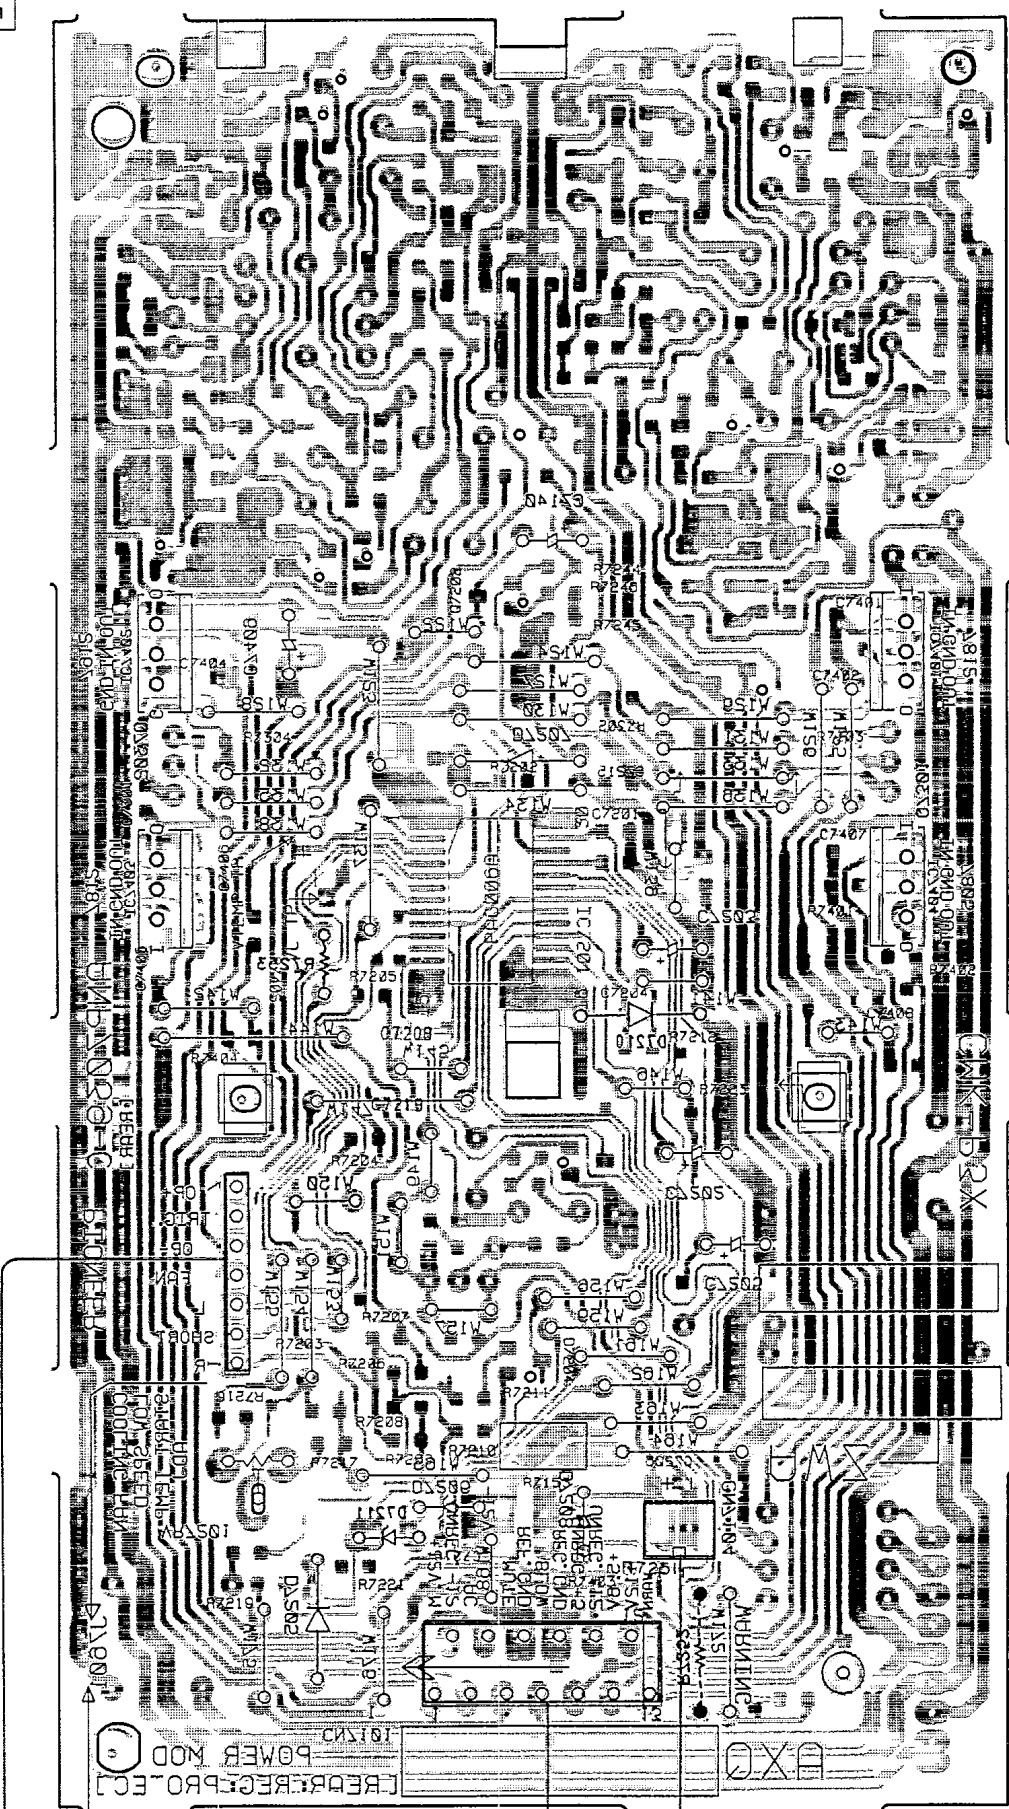

IC1501 IC1404 IC1403
 Q1301
 Q1305
 IC1405 IC1401
 Q1505

VA1501

REAR REG. PROTECT.
 POWER MOD.
 101210




TO FRONT 50Wassy 17601

TO FAN MOTOR


TO Af assy 12

• This diagram is viewed from the foil side.

8. AF ASSY, VR ASSY, SECONDARY ASSY,
PRIMARY ASSY AND CASSETTE MECHANISM UNIT

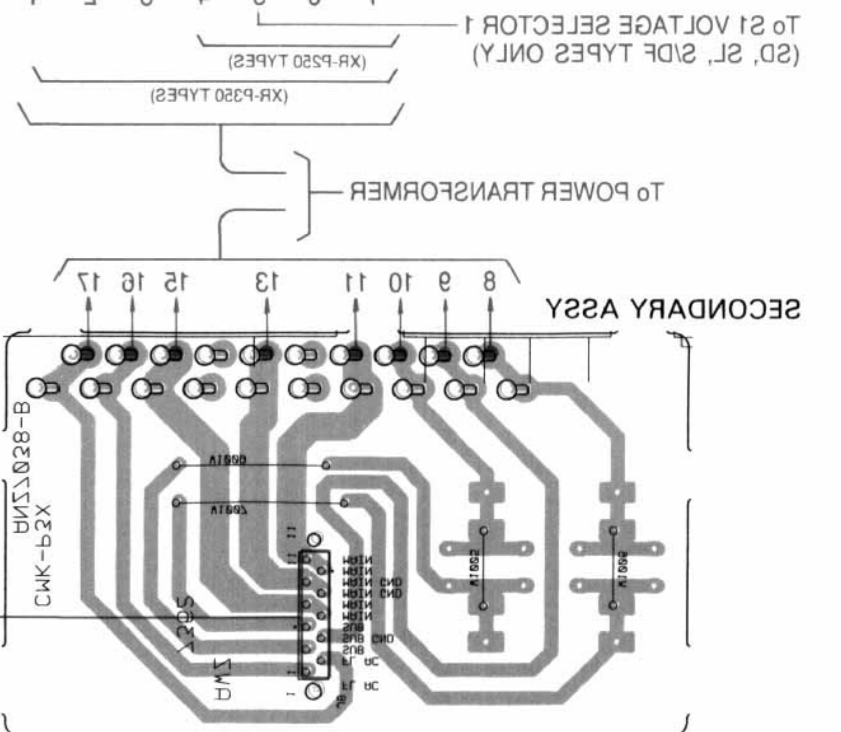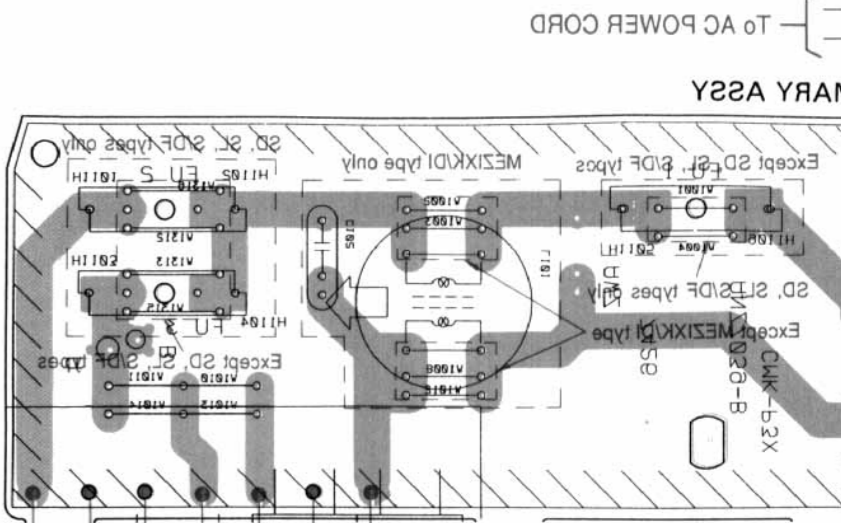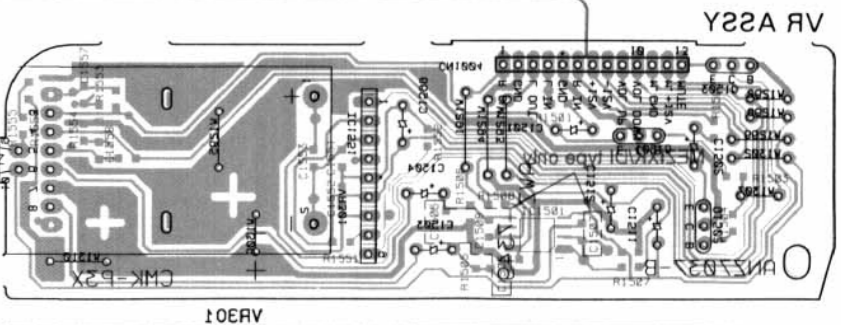

- 01005 01001 04302 04301 IC4301 IC4301 04302 04301
- 01006 04308 04322 04324 04324 04305 04324 04324
- 01007 04307 04326 04326 04326 04326 04326 04326
- 01403 04426 04302 04302 04302 04302 04302 04302
- 01041 04425 04308 04308 04308 04308 04308 04308
- 01040 04423 04308 04308 04308 04308 04308 04308
- IC1388 04421 04324 04324 04324 04324 04324 04324
- 04502 04502 04502 04502 04502 04502 04502 04502
- 04503 04503 04503 04503 04503 04503 04503 04503
- 04504 04504 04504 04504 04504 04504 04504 04504
- 04505 04505 04505 04505 04505 04505 04505 04505
- 04501 04501 04501 04501 04501 04501 04501 04501
- 01100 01100 01100 01100 01100 01100 01100 01100
- IC4101 04101 04101 04101 04101 04101 04101 04101
- IC4505 04105 04105 04105 04105 04105 04105 04105
- 03505 03505 03505 03505 03505 03505 03505 03505
- IC1501 03501 03501 03501 03501 03501 03501 03501
- IC1521 04111 04111 04111 04111 04111 04111 04111
- 03503 03503 03503 03503 03503 03503 03503 03503
- 04121 04121 04121 04121 04121 04121 04121 04121
- 04113 04113 04113 04113 04113 04113 04113 04113
- IC8121 04115 04115 04115 04115 04115 04115 04115
- 08305 08305 08305 08305 08305 08305 08305 08305
- IC8501 08301 08301 08301 08301 08301 08301 08301
- 08403 08403 08403 08403 08403 08403 08403 08403
- 08404 08404 08404 08404 08404 08404 08404 08404
- 08401 08401 08401 08401 08401 08401 08401 08401
- 08301 08301 08301 08301 08301 08301 08301 08301
- IC8401 08405 08405 08405 08405 08405 08405 08405
- 08405 08405 08405 08405 08405 08405 08405 08405

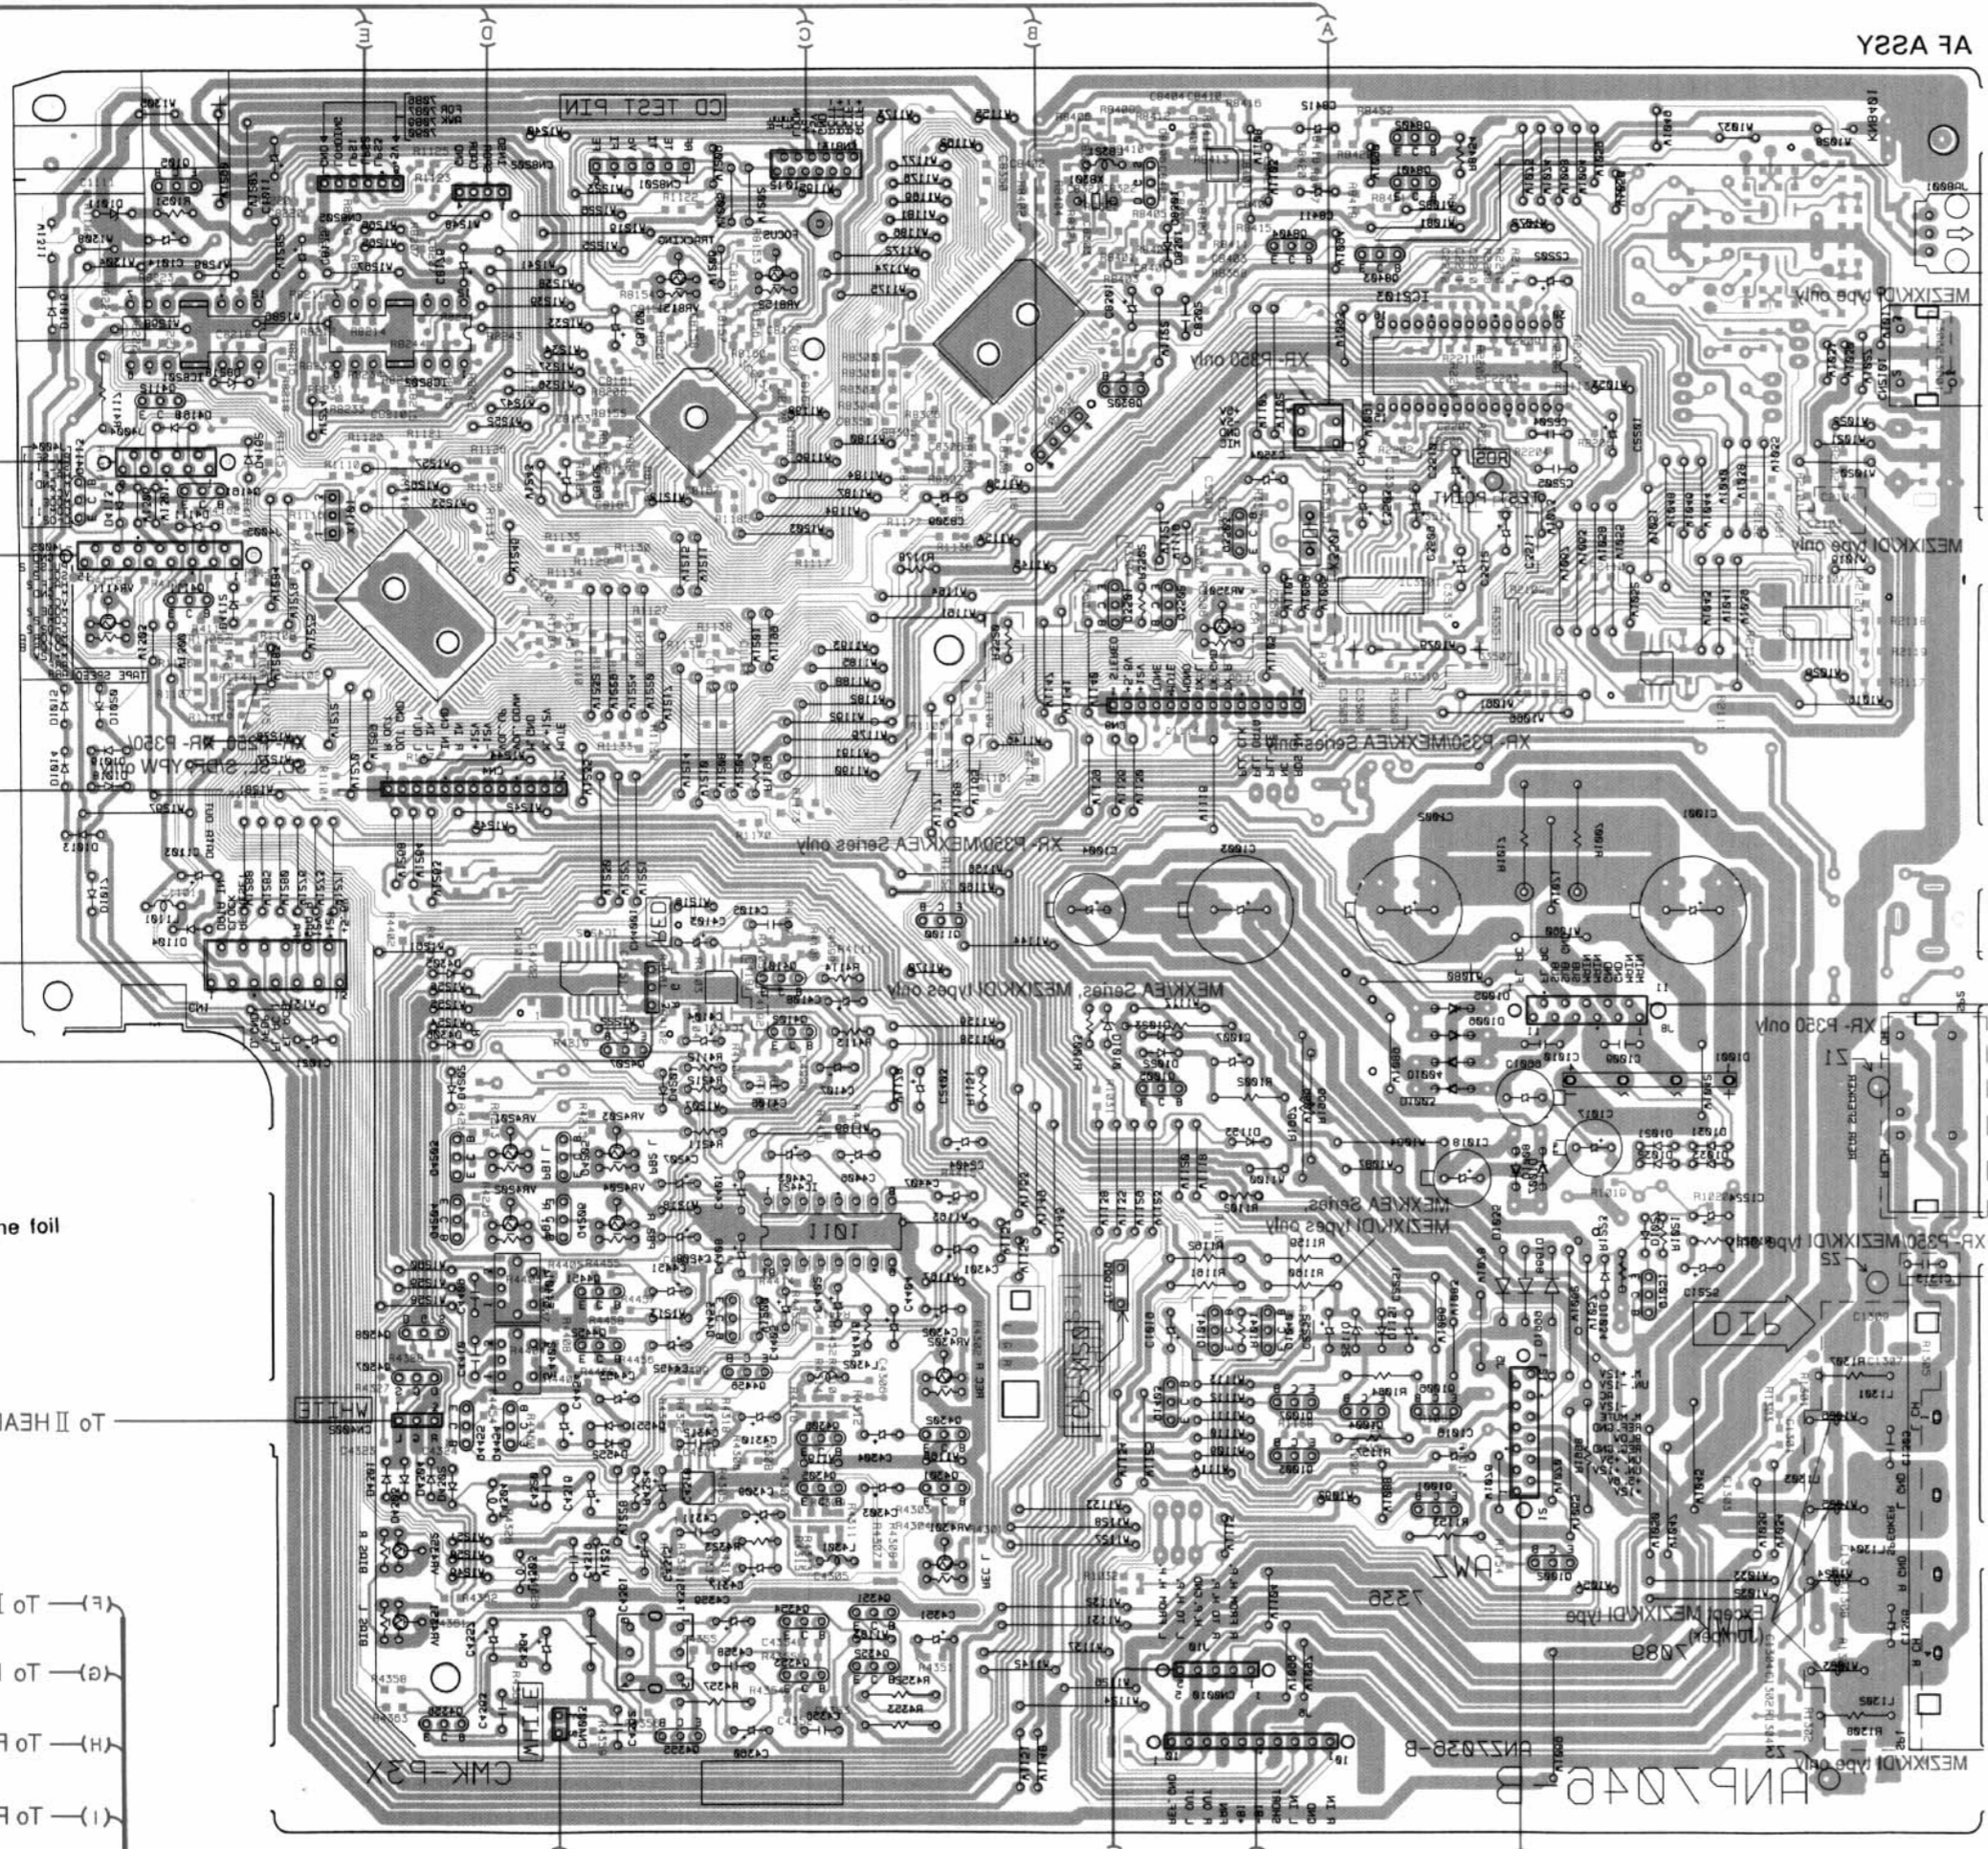


- (1) TO REGULATOR assy CN1701
- (H) TO FRONT 50W assy CN2505
- (G) TO H.P. assy 110
- (F) TO II HEAD MECH unit
- (E) TO II HEAD MECH unit
- (D) TO I HEAD MECH unit
- (C) TO DISPLAY assy 11
- (B) TO I MECH unit
- (A) TO II MECH unit
- (E) TO SENSOR BOARD assy 1601
- (D) TO MECHA BOARD assy CN610
- (C) TO PICKUP assy CN105
- (B) TO FMAM TUNER MODULE CN8501 (AXQ1016 type) FMAM TUNER MODULE CN8501 (Except AXQ1016 type)
- (A) TO MIC assy 17

• This diagram is viewed from the foil side.

8.6 AF ASSY, VR ASSY, SECONDARY ASSY, PRIMARY ASSY AND CASSETTE MECHANISM UNIT


A

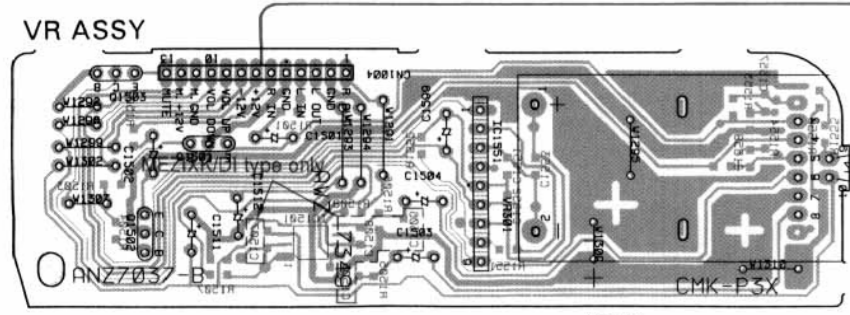

Q1501-Q1503 IC1501 IC1551

To AC POWER CORD

B

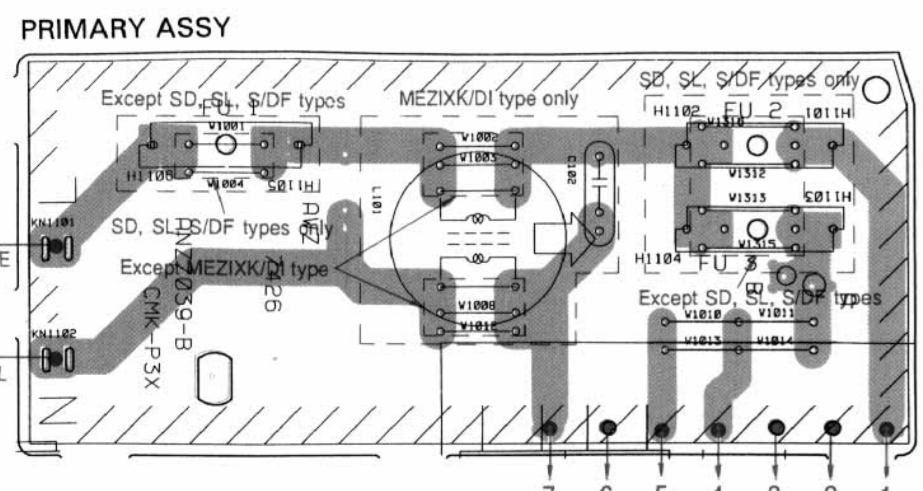


To S1 VOLTAGE SELECTOR 1 (SD, SL, S/DF TYPES ONLY)

(XR-P250 TYPES)

(XR-P350 TYPES)

To POWER TRANSFORMER


D

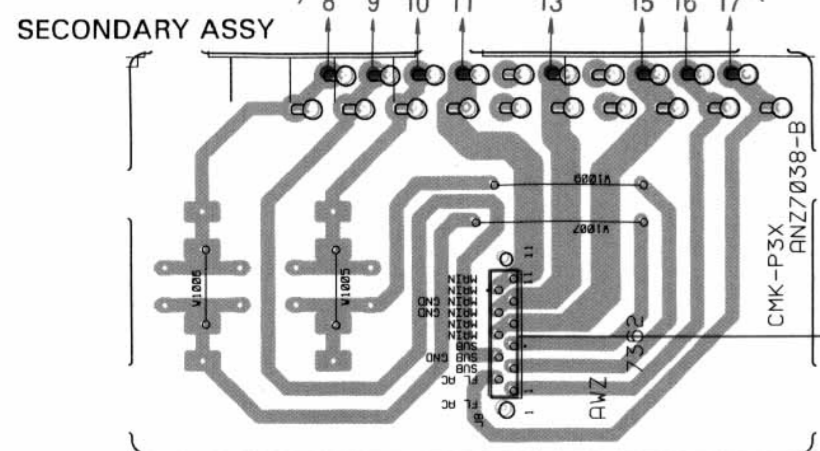

Q8402	Q105
IC8401	
Q8301	
Q8401	
Q8404	
Q8403	
IC8301	IC8202
IC2103	IC8201
Q8302	IC8151
Q4112	
Q4113	
Q4161	
Q3503	
IC3501	Q4111
Q3501	VR4111
Q3502	VR3501

Q1100	
IC4202	
Q4101	
IC4101	
Q4102	
Q4207	
Q1005	
Q4205	Q4203
Q4206	Q4204
IC4421	
IC1999	Q4451
Q1040	Q4453
Q1041	Q4452
Q1403	Q4456
Q1007	Q4308
Q1004	Q4307
Q1006	Q4306
Q1006	Q4454
Q1003	Q4455
IC4301	
Q1001	Q4301
Q4305	
Q1002	
Q4351	
Q4354	
Q4355	Q4356

AF ASSY

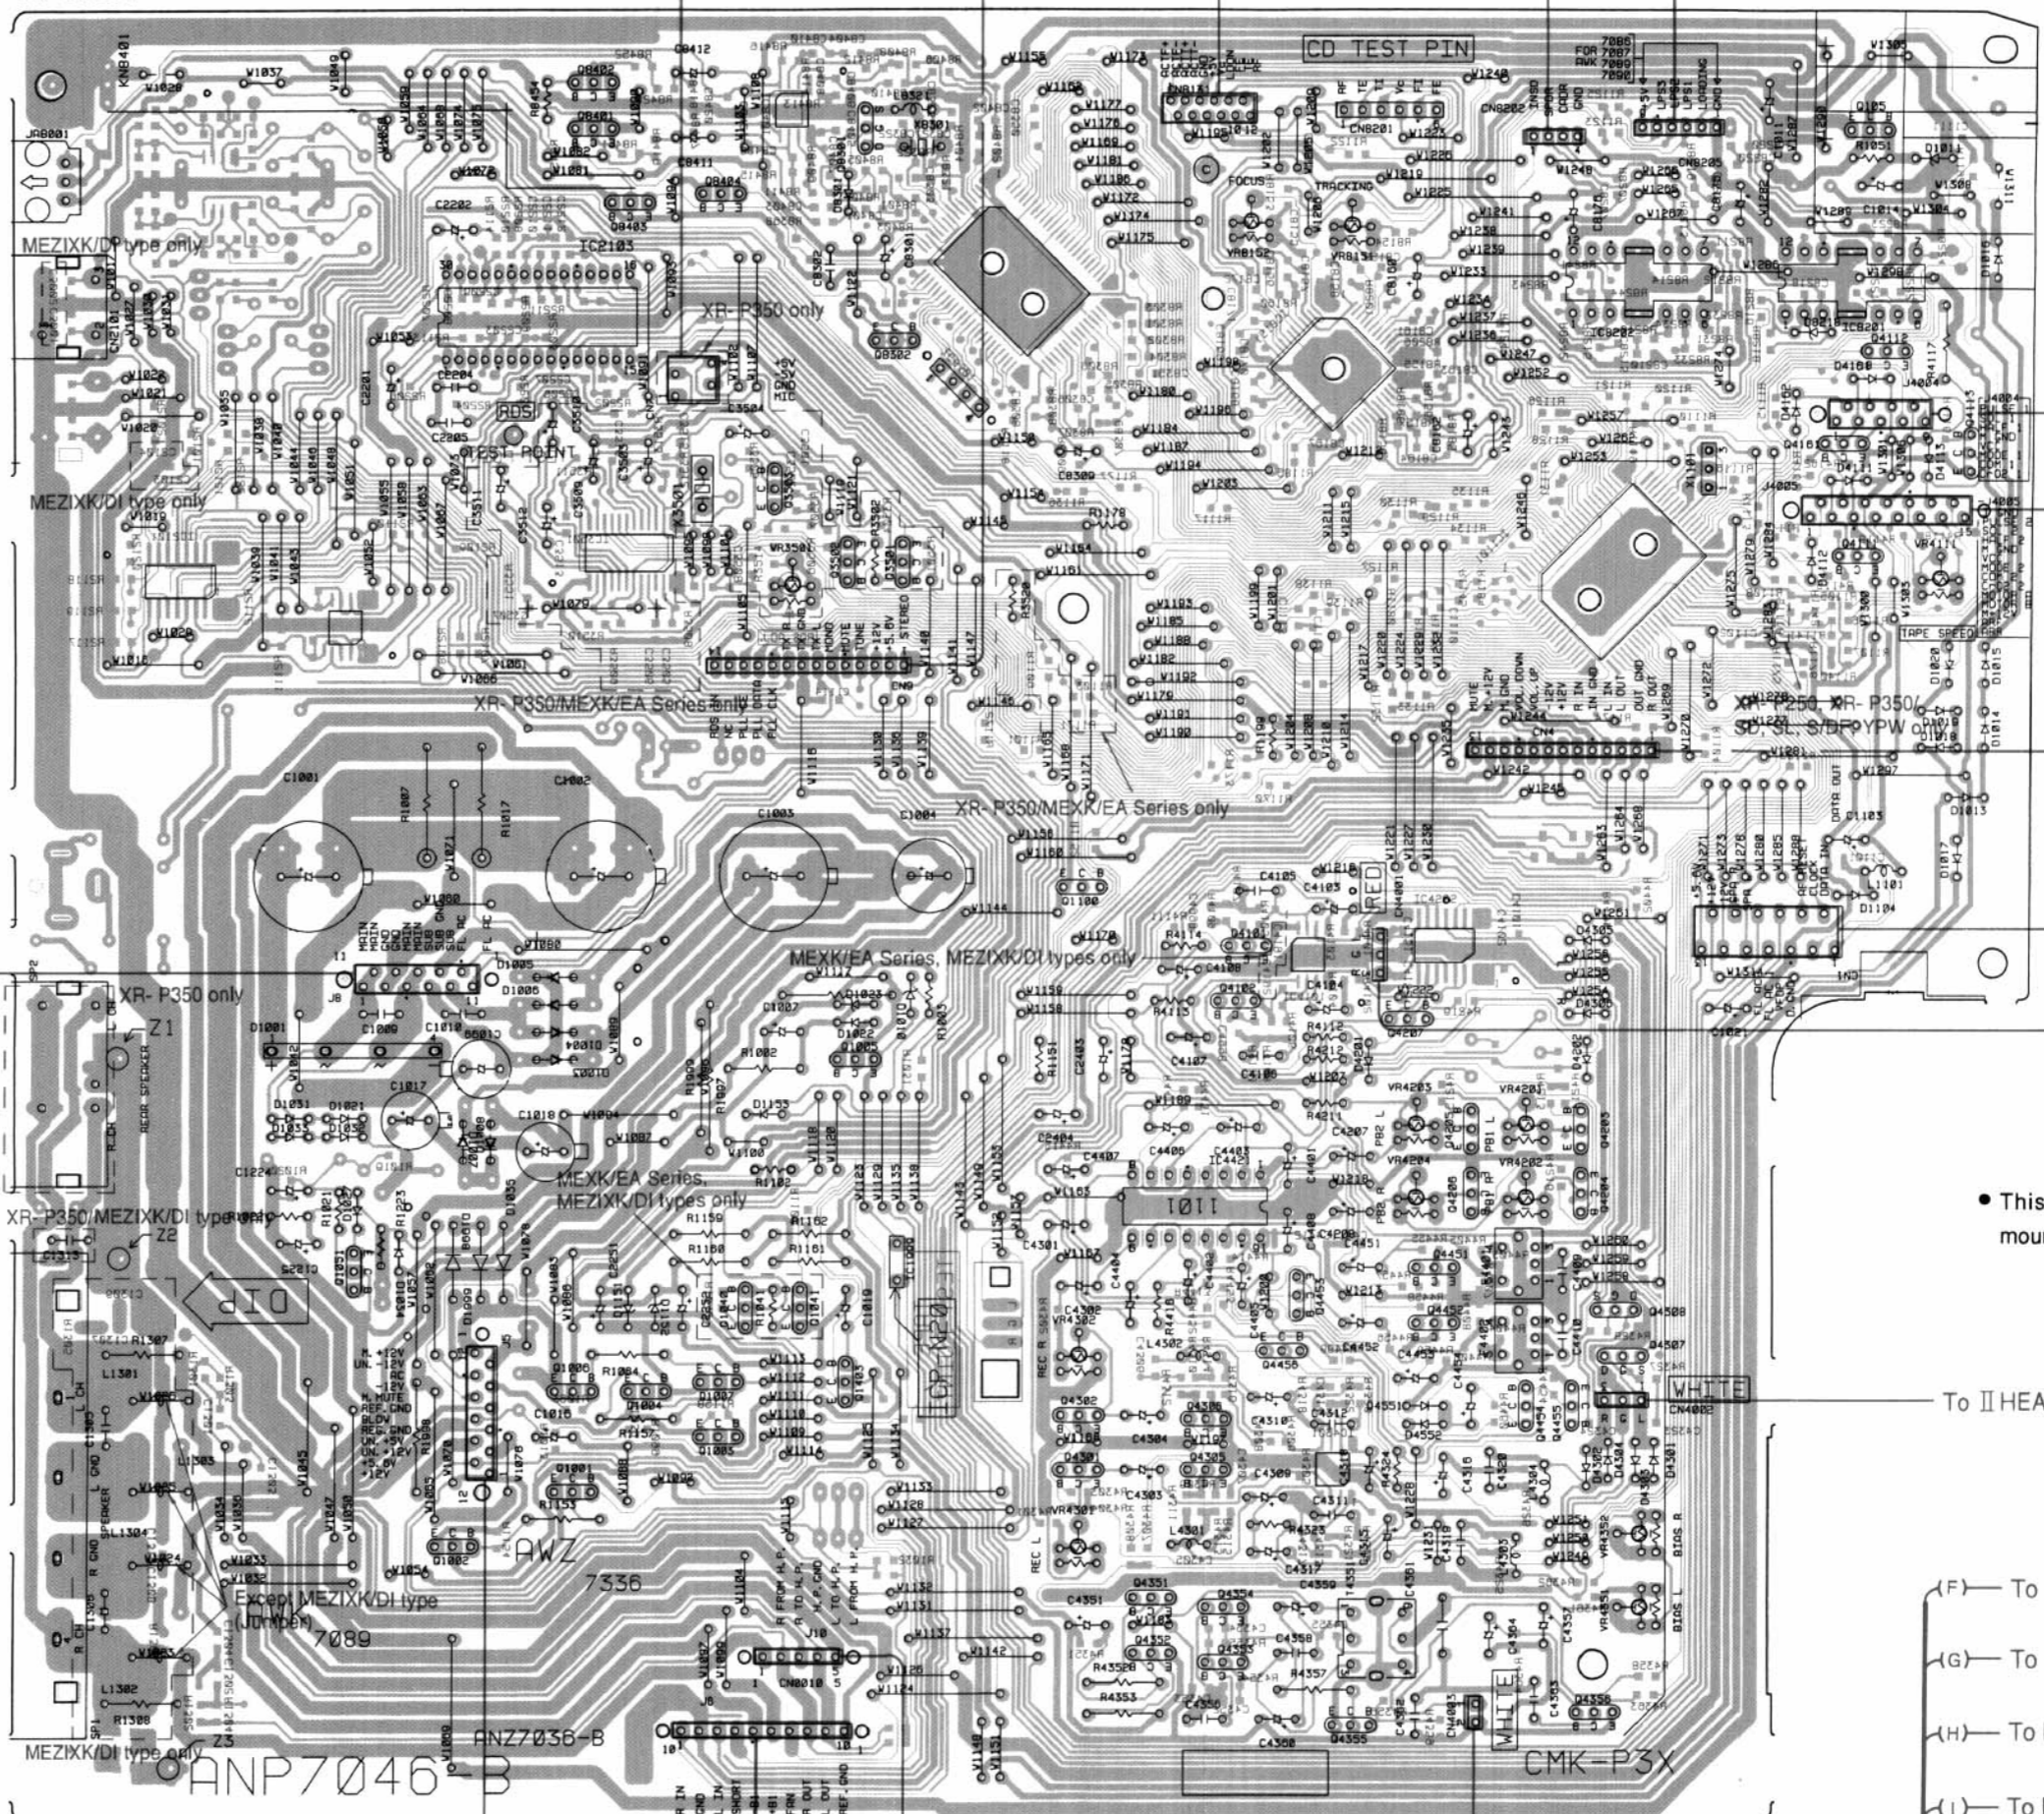

- (A) To MIC assy J7
- (b) To FM/AM TUNER MODULE CN6101 (AXQ1016 type)
FM/AM TUNER MODULE CN6201 (Except AXQ1016 type)
- (c) To PICKUP assy CN102
- (d) To MECHA BOARD assy CN610
- (E) To SENSOR BOARD assy J601

- To I MECHA unit
- To II MECHA unit

NOTE:

- MEXK/EA Series indicates models XR-P350/MEXK/EA, MEXK/EB, NBXK, XR-P250/MEXK/EA, MEXK/EB and NBXK.
- XR-P350/MEXK/EA Series indicates models XR-P350/MEXK/EA, MEXK/EB and NBXK.
- XR-P250/MEXK/EA Series indicates models XR-P250/MEXK/EA, MEXK/EB and NBXK.

- To DISPLAY assy J1
- To I HEAD MECHA unit













● This diagram is viewed from the mounted parts side.


- To II HEAD MECHA unit
- (F) To II HEAD MECHA unit
- (G) To H.P.assy J10
- (H) To FRONT 50W assy CN7502
- (I) To REGULATOR assy CN7101

Waveforms

Note: The encircled numbers denote measuring point in the schematic diagram.

*2 FOCUS-IN: Press the key without loading a disc.
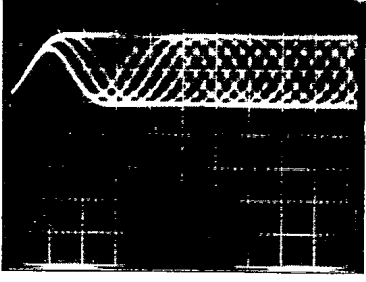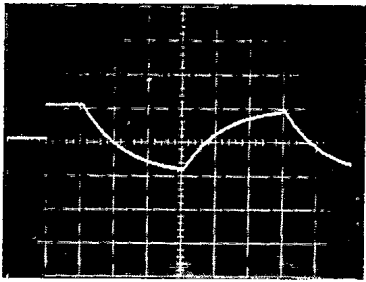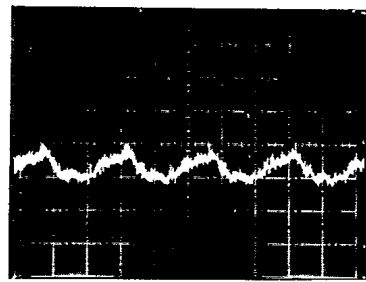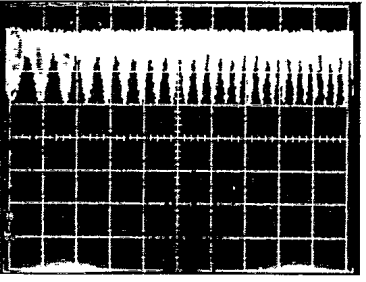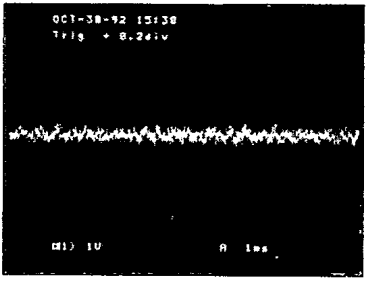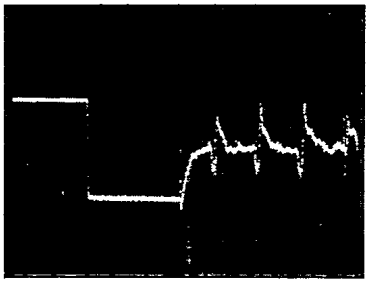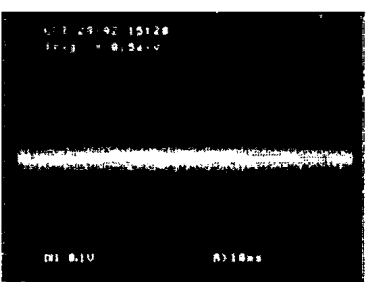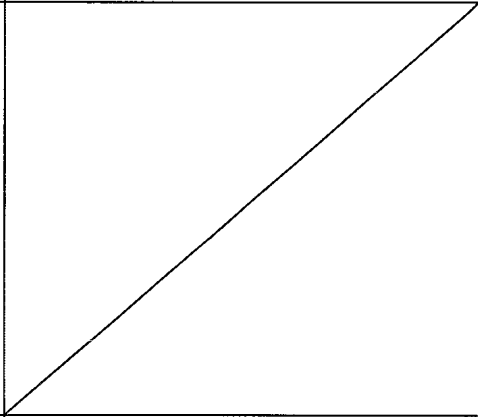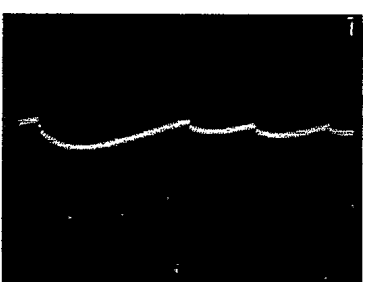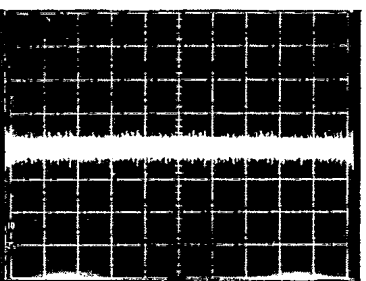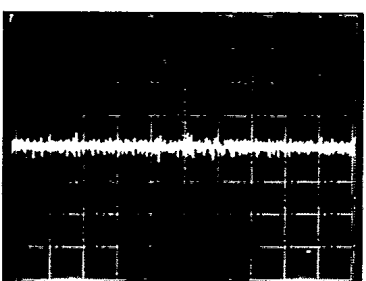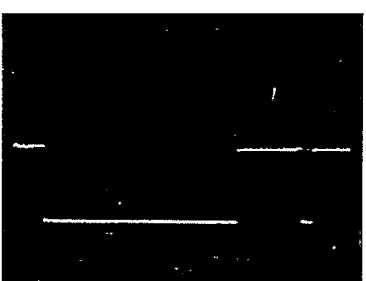
<p>② TP1-Pin1: PLAY MODE (RF) 500mV/div 500nsec/div</p>  <p style="text-align: right;">- GND</p>	<p>⑤ IC8202-Pin3: FOCUS-IN (*2) MODE (FODR) 1V/div 200msec/div</p>  <p style="text-align: right;">- GND</p>	<p>⑦ IC8201-Pin3: PLAY MODE (SPDR) 1V/div 50msec/div</p>  <p style="text-align: right;">- GND</p>	
<p>② TP1-Pin1: TRACK SEARCH MODE (RF) 500mV/div 200µsec/div</p>  <p style="text-align: right;">- GND</p>	<p>⑤ IC8202-Pin3: PLAY MODE (FODR) 1V/div 1msec/div</p>  <p style="text-align: right;">- GND</p>	<p>⑦ IC8201-Pin3: TRACK SEARCH MODE (SPDR) 2V/div 50msec/div</p>  <p style="text-align: right;">- GND</p>	
<p>③ TP1-Pin6: PLAY MODE (FOER) 100mV/div 10msec/div</p>  <p style="text-align: right;">- GND</p>			<p>⑧ IC8202-Pin9: PLAY MODE (CADR) 0.2V/div 2sec/div</p>  <p style="text-align: right;">- GND</p>
<p>④ TP1-Pin2: PLAY MODE (TRER) 1V/div 1msec/div</p>  <p style="text-align: right;">- GND</p>	<p>⑥ IC8202-Pin4: PLAY MODE (TRDR) 500mV/div 1msec/div</p>  <p style="text-align: right;">- GND</p>	<p>⑧ IC8202-Pin9: TRACK SEARCH MODE (CADR) 2V/div 200msec/div</p>  <p style="text-align: right;">- GND</p>	

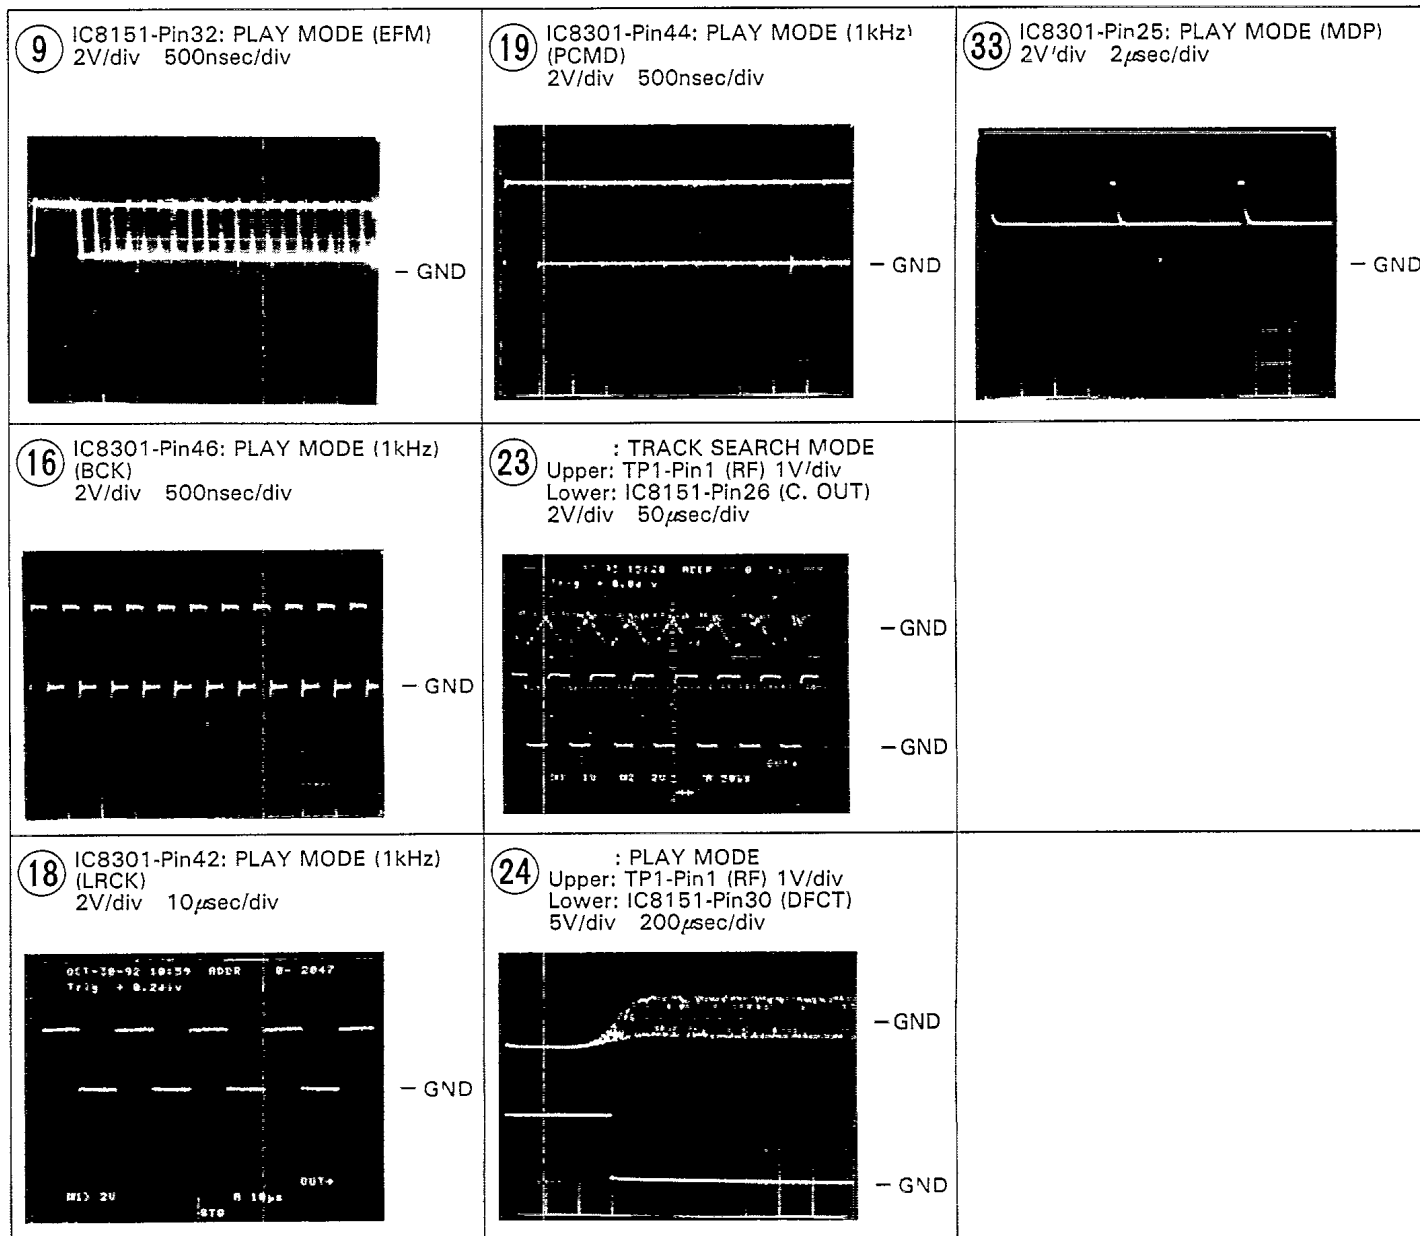

IC8151 (CXA1372Q)

Pin No.	Voltage [V]	Pin No.	Voltage [V]	Pin No.	Voltage [V]	Pin No.	Voltage [V]
1	2.5	13	2.5	25	5.0	37	2.0
2	2.5	14	2.5 to 2.6	26	0.1	38	2.7 to 2.8
3	2.5	15	2.5	27	4.9	39	2.5
4	2.5	16	0.8	28	0	40	3.2
5	2.4	17	1.3	29	0	41	0
6	2.5	18	2.5	30	0	42	2.5
7	2.6	19	0	31	0	43	2.5
8	2.5	20	5.0	32	2.7	44	2.5
9	2.5	21	5.0	33	5.0	45	2.5
10	5.0	22	4.9	34	1.3	46	2.5
11	2.5	23	5.0	35	1.0	47	2.5
12	2.5	24	4.9 to 5.0	36	5.0	48	2.4

IC8301 (CXD2508AQ)





Pin No.	Voltage [V]	Pin No.	Voltage [V]	Pin No.	Voltage [V]	Pin No.	Voltage [V]
1	0.1	21	5.0	41	2.4	61	2.0
2	0.1	22	0	42	2.4	62	0
3	5.0	23	5.0	43	2.4	63	0
4	0.1	24	5.0	44	2.4	64	2.5
5	4.9	25	2.6 to 2.7	45	2.4	65	0
6	0	26	0.1	46	1.8	66	0
7	2.2 to 2.5	27	5.0	47	1.8	67	0
8	5.0	28	0	48	0	68	5.0
9	4.9	29	2.7	49	4.9	69	2.5
10	5.0	30	2.6	50	1.2	70	2.5
11	4.9	31	2.6	51	4.9	71	5.0
12	0	32	5.0	52	2.5	72	5.0
13	4.9	33	0	53	0	73	2.4
14	0.1	34	2.7	54	0	74	2.4
15	4.9 to 5.0	35	5.0	55	4.9	75	0
16	5.0	36	2.7	56	4.5	76	0
17	4.9	37	0	57	0	77	2.5
18	0	38	0	58	0 to 0.3	78	2.5
19	0	39	2.5	59	2.8	79	0
20	0	40	0	60	1.4	80	0

AF ASSY (2/3) (AW27336: XR-P350MEKX/EA Series)
 (AW27337: XR-P350MEZKX/DI)
 (AW27338: XR-P350SD SL/PW, S/D/F)
 (AW27339: XR-P250MEKX/EA Series)
 (AW27334: XR-P250MEZKX/DI)

NOTE:
 MEKX/EA Series indicates models XR-P350MEKX/EA, MEKX/EB and NBXX.
 MEZKX/DI, NBKX, XR-P250MEKX/EA, MEKX/EB and NBXX.
 XR-P350MEKX/EA Series indicates models XR-P350MEKX/EA, MEKX/EB and NBXX.
 XR-P250MEKX/EA Series indicates models XR-P250MEKX/EA, MEKX/EB and NBXX.

SCH-9


To AF Assy (3/3) (SCH-10)

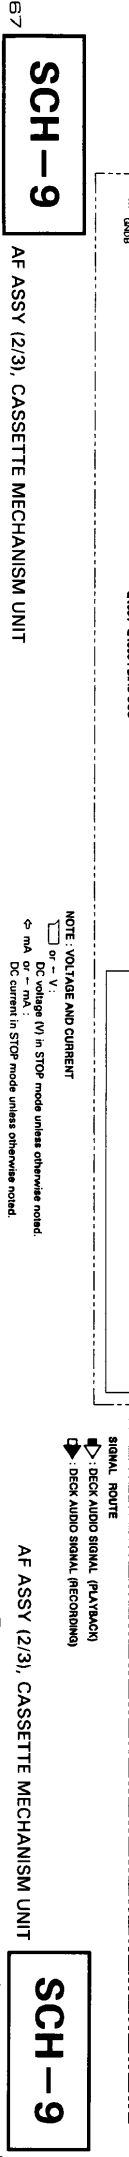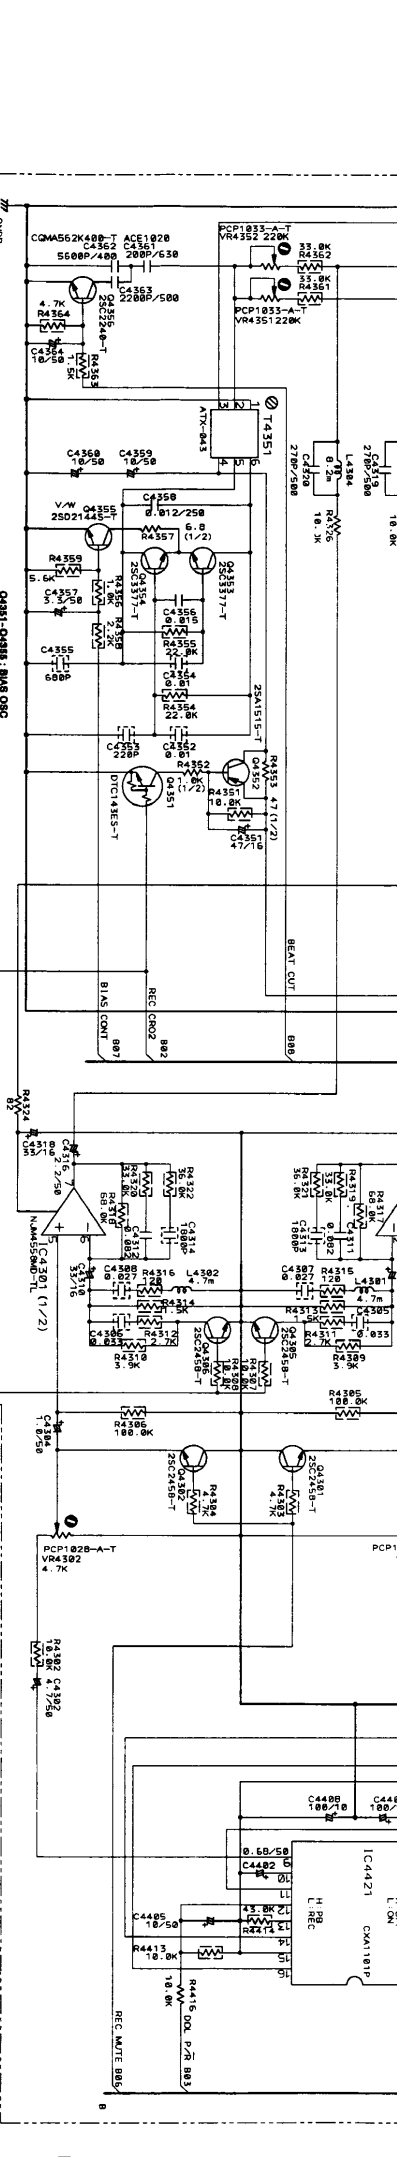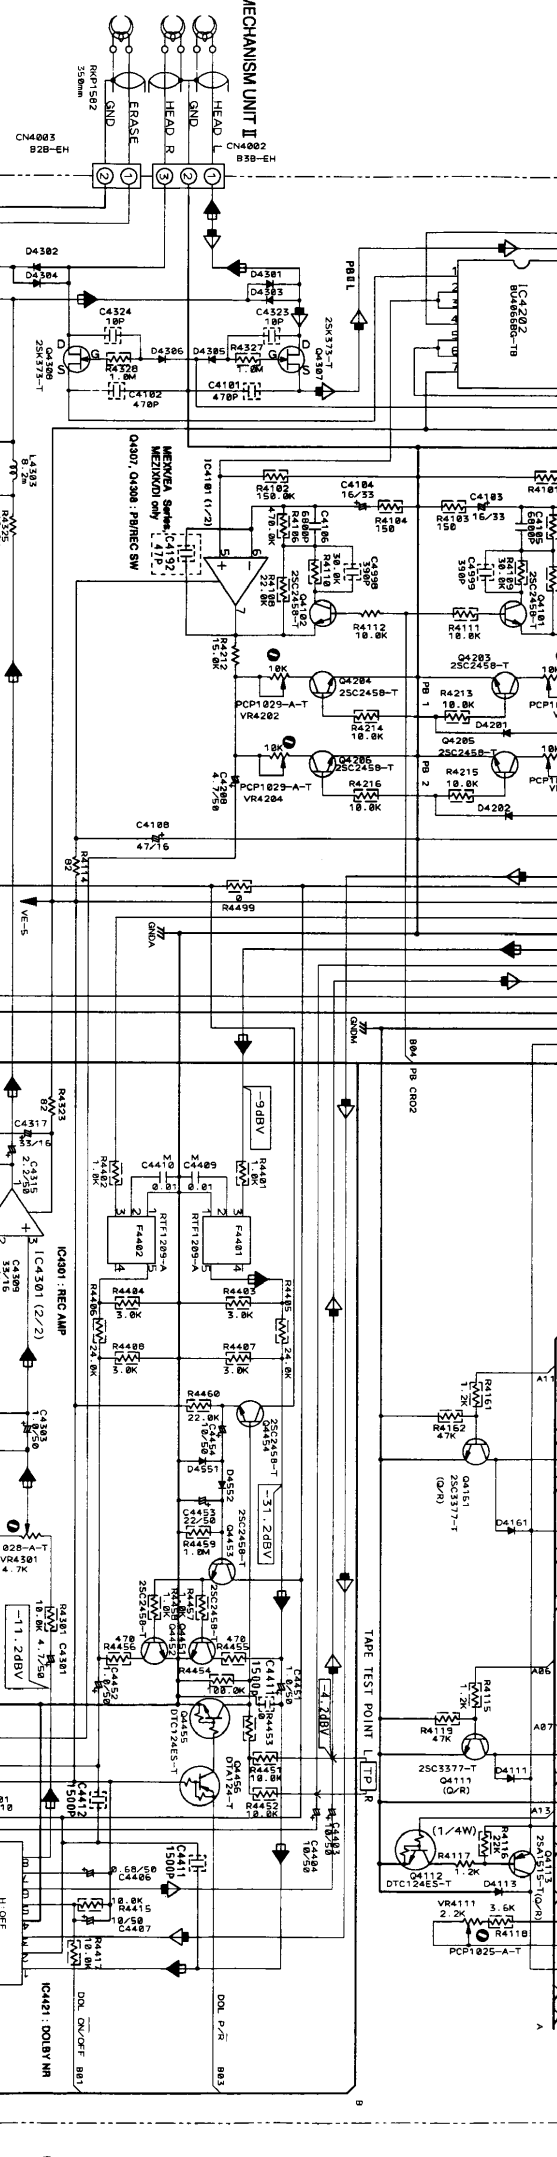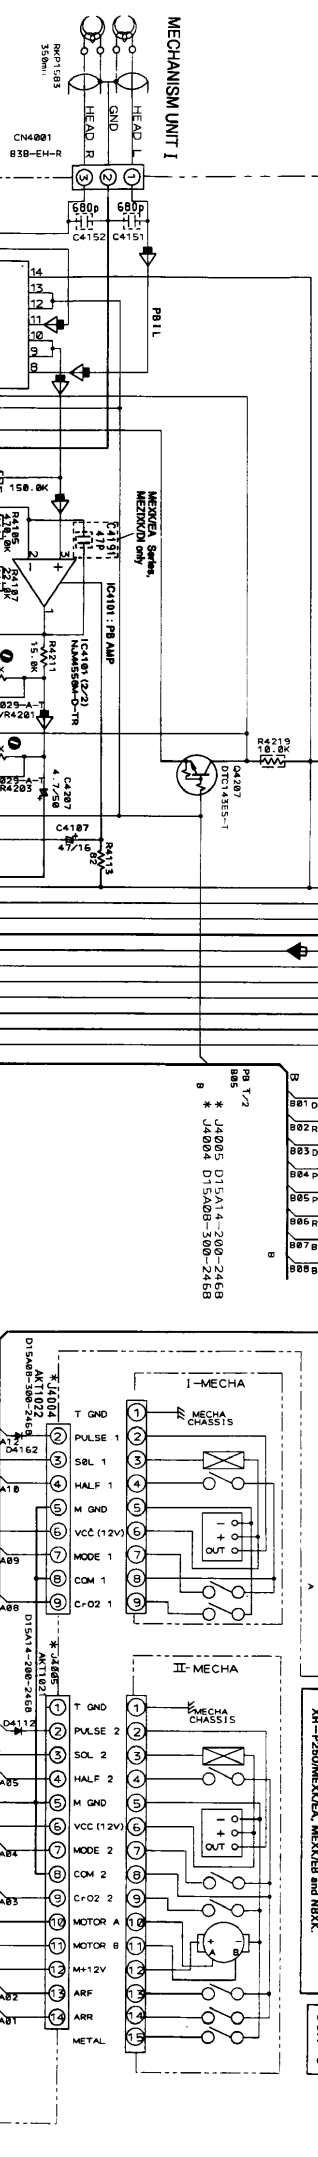


NOTE: VOLTAGE AND CURRENT
 or - V.
 DC voltage (V) in STOP mode unless otherwise noted.
 mA or - mA.
 DC current in STOP mode unless otherwise noted.

SIGNAL ROUTE
 DECK AUDIO SIGNAL (PLAYBACK)
 DECK AUDIO SIGNAL (RECORDING)

SCH-9

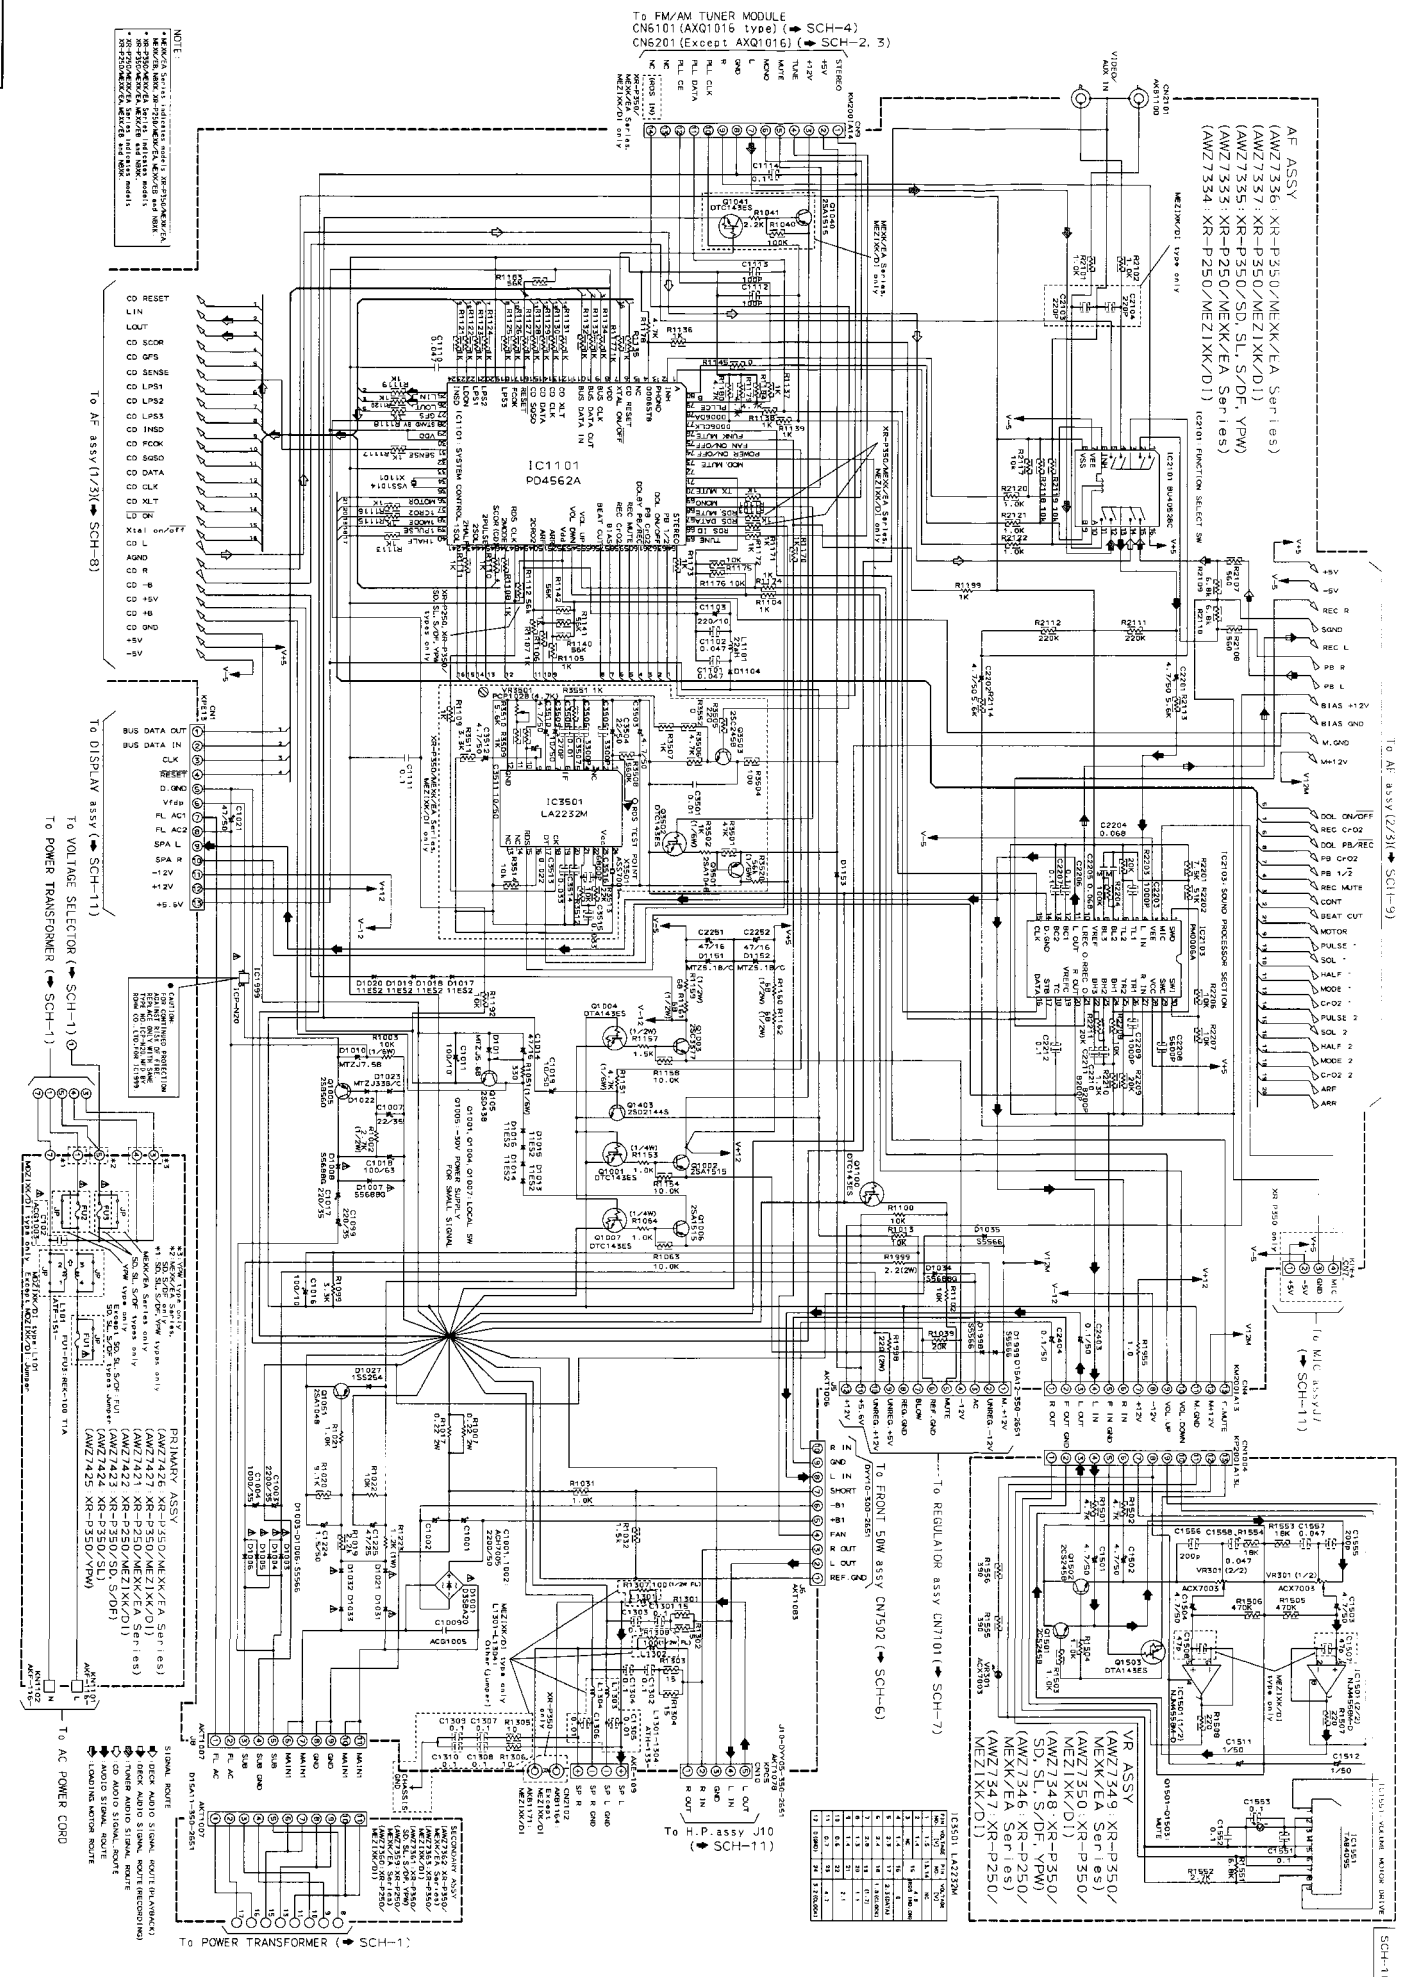

SCH-10

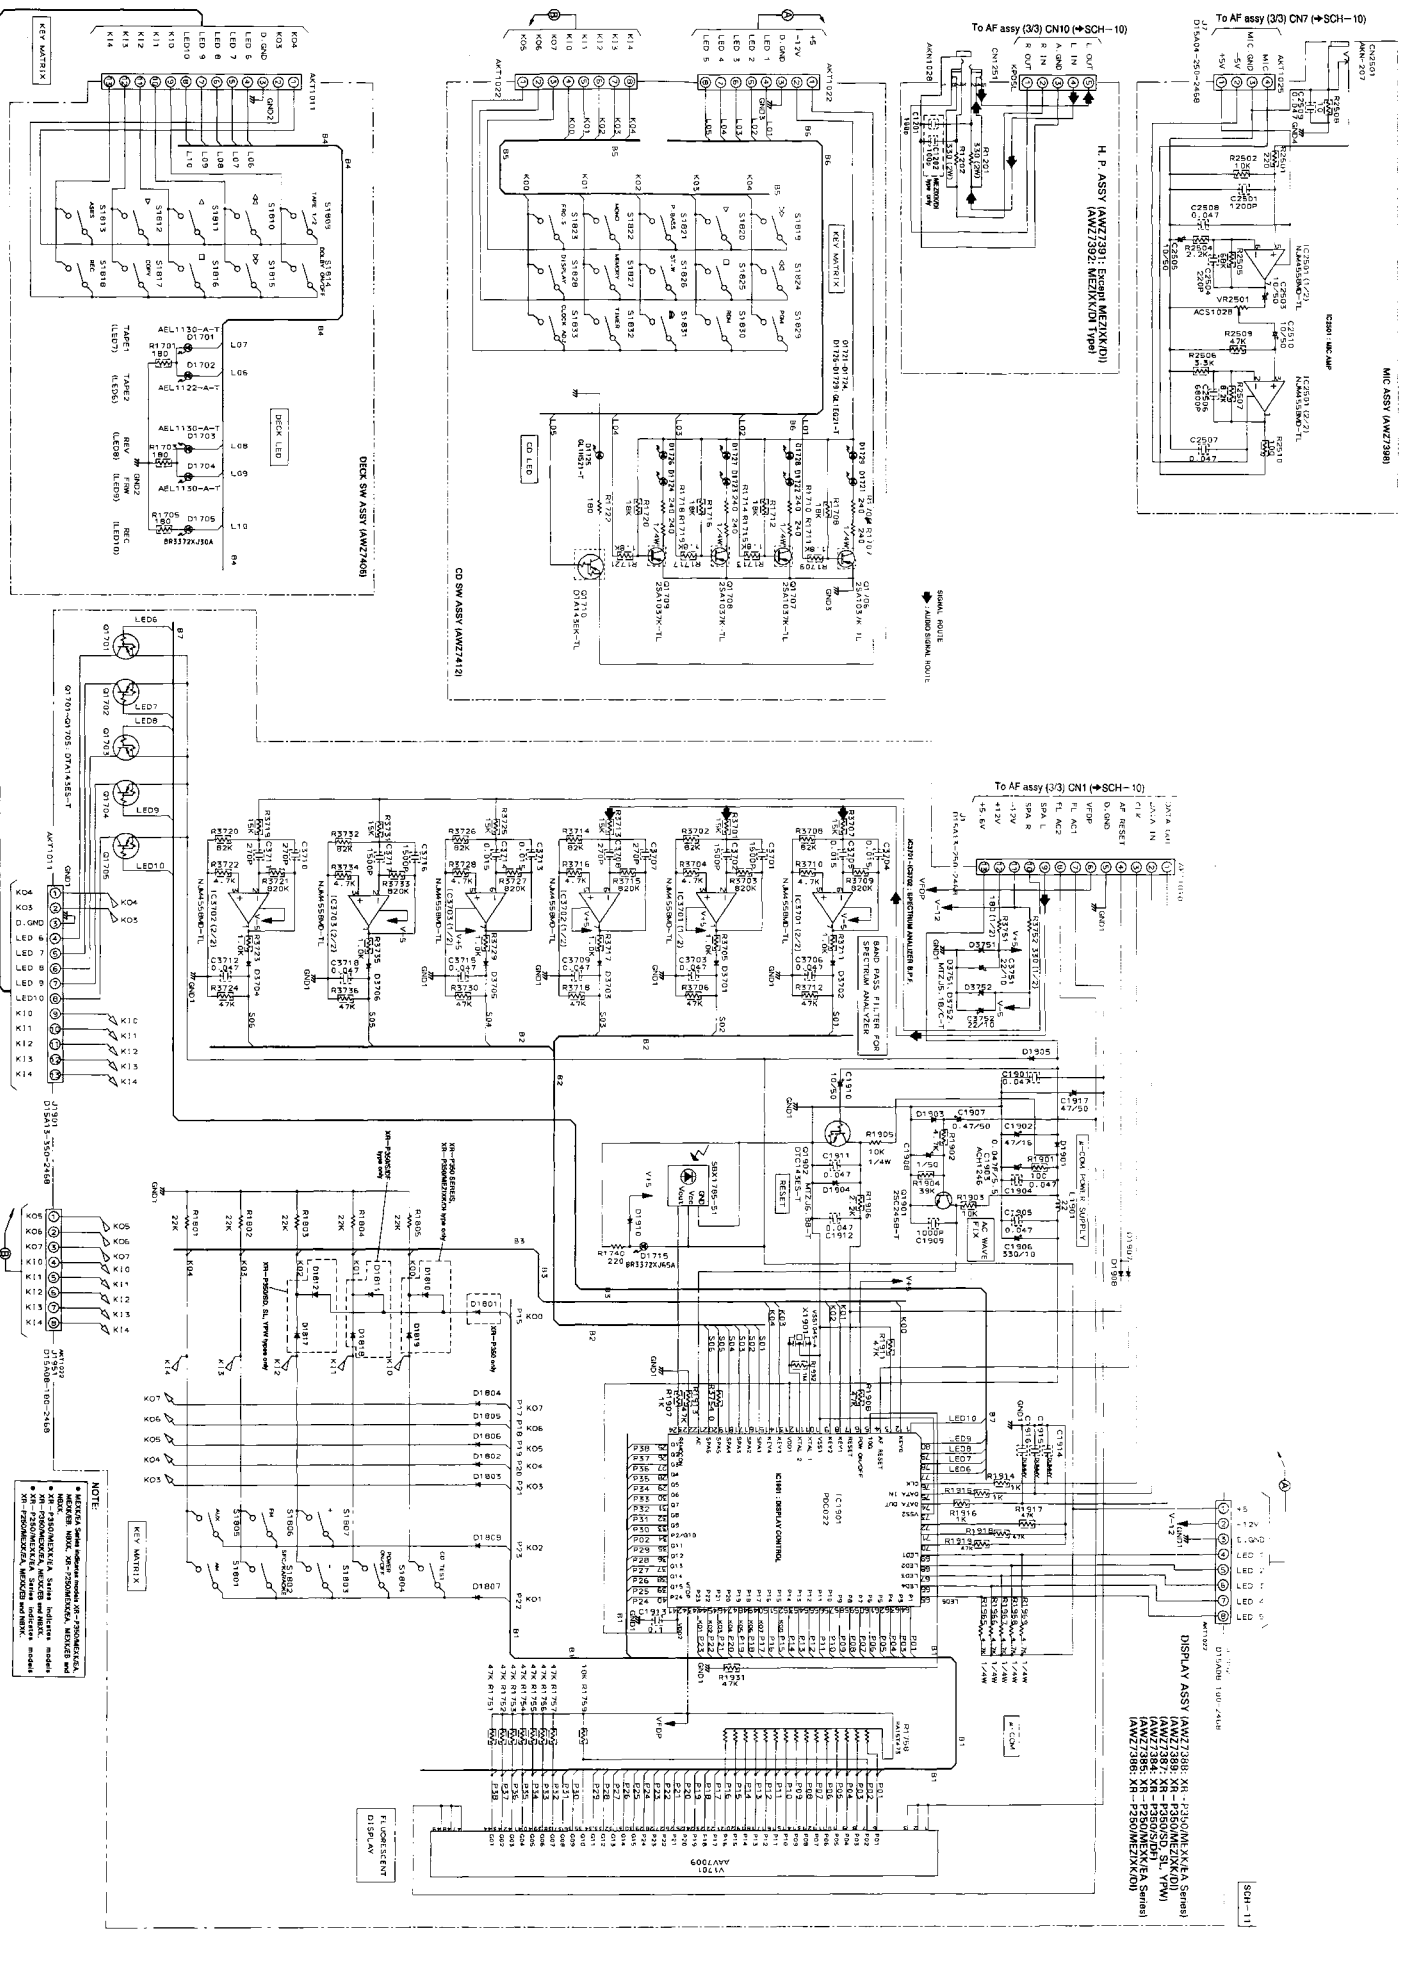

SCH-11

DISPLAY ASSY, H. P. ASSY, MIC ASSY,
DECK SW ASSY, CD SW ASSY

3

4

5

6



7

8

SCH-11

DISPLAY ASSY, H. P. ASSY, MIC ASSY,
DECK SW ASSY, CD SW ASSY

9

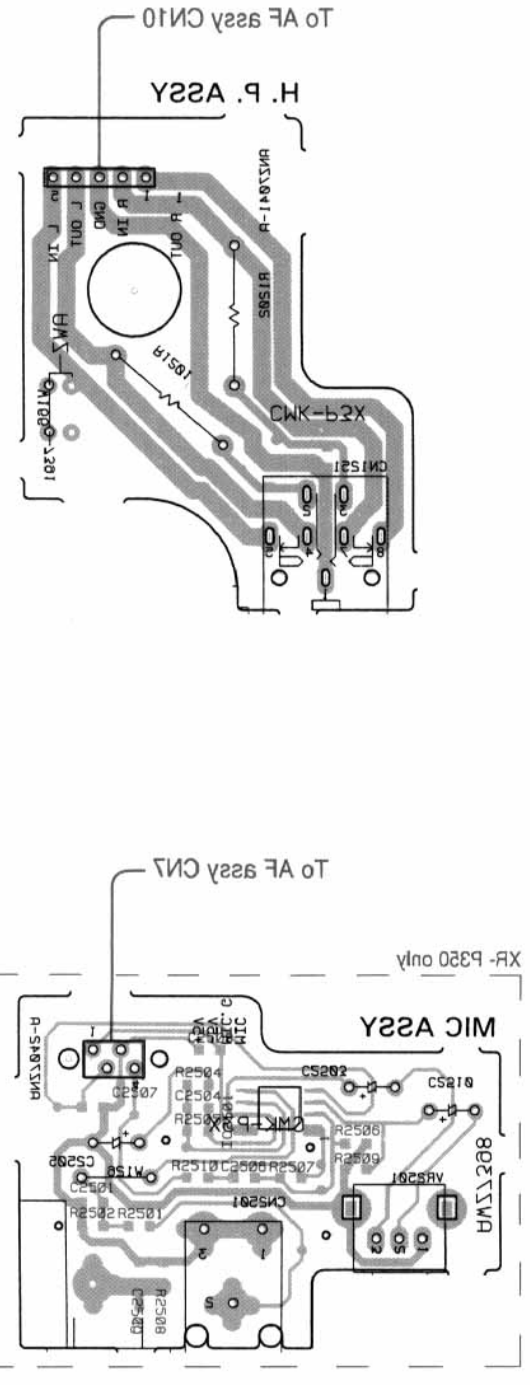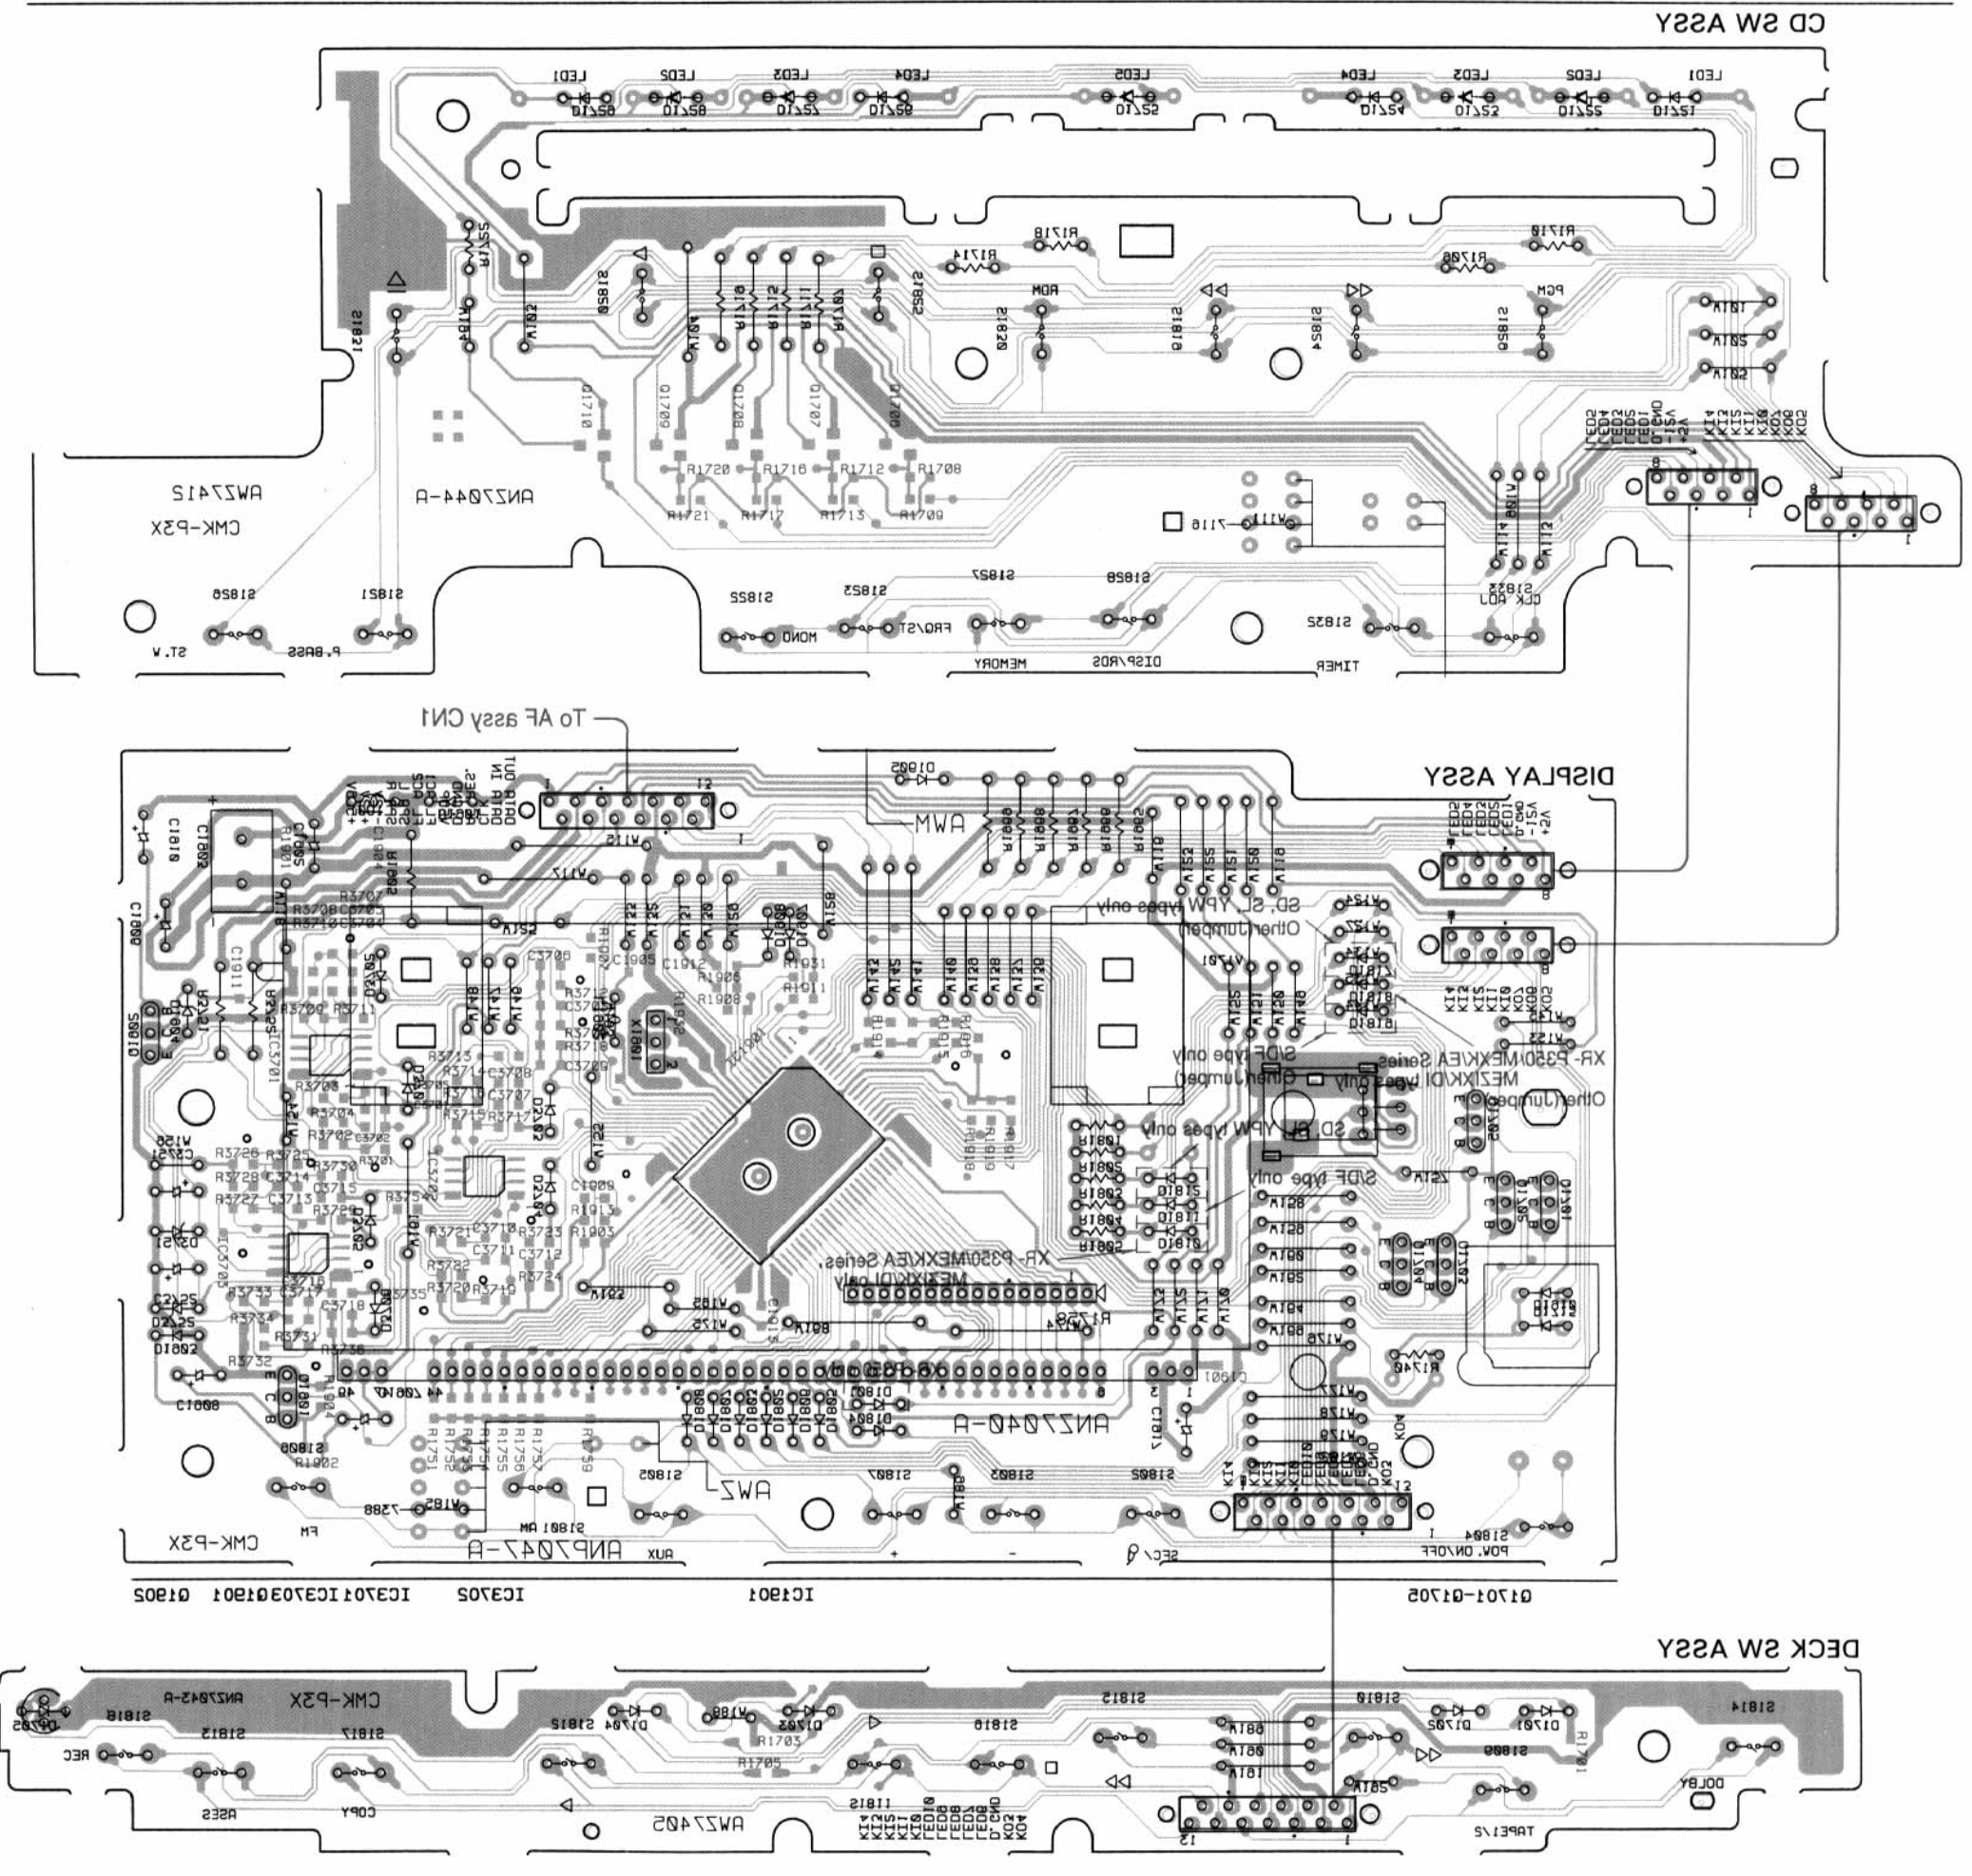

• This diagram is viewed from the foil side.

9. ADJUSTMENTS

9.1 TUNER SECTION

■ FM Tuner Section

- Set the mode selector to FM BAND.
- Connect the wiring as shown in Fig. 1-1.
- For MEXK/EA, MEXK/EB, NBXK, SD, SL and YPW types (AXQ7013, AXQ1012 and AXQ3213)

Step No.	Adjustment Title	FM SG (1kHz, ± 75 kHz dev.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (MHz)	Level (dB μ V)			
1	Center Adjustment	98 Non modulation	80 or more	98MHz	L6207	Adjust so that the DC voltage between IC6201-Pin 4 and Pin 28 (or \oplus leads of C6224 and C6261) becomes $0V \pm 50mV$.
2	Front End Sensitivity	98	0-30	98MHz	L6102 T6101	Adjust so that the DC voltage between the IC6201-Pin 12 and GND (or \oplus leads of C6238 and GND) becomes at maximum level.
3	Stereo Distortion	98	80	98MHz	T6101	Minimize the distortion with 1/8 rotation of the core.
4	TUNED IND. Lighting Level	98	15 ± 2	98MHz	VR6201	Adjust so that the indicator of TUNED IND. starts to light up.

Notes:

- Before adjusting, make sure there is no gap between L6101 and L6102. If there is a gap between them, bring them into contact with each other first, and then make adjustments.
- Make indicator adjustments in order of AM \rightarrow FM.

- For MEZIXK/DI type (AXQ7014 and AXQ3214)

Step No.	Adjustment Title	FM SG (1kHz, ± 75 kHz dev.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (MHz)	Level (dB μ V)			
1	Center Adjustment	98 Non modulation	80 or more	98MHz	L6207	Adjust so that the DC voltage between IC6201-Pin 4 and Pin 28 (or \oplus leads of C6224 and C6261) becomes $0V \pm 50mV$.
2	Front End Sensitivity	106	0-30	106MHz	L6104 L6105 L6102 T6101	After adjusting L6104 and L6105 so that the DC voltage between IC6201-Pin 12 and GND (or \oplus leads of C6238 and GND) becomes at maximum level, adjust T6101 and L6102.
3	Stereo Distortion	98	80	98MHz	T6101	Minimize the distortion with 1/8 rotation of the core.
4	TUNED IND. Lighting Level	98	15 ± 2	98MHz	VR6201	Adjust so that the indicator of TUNED IND. starts to light up.

Notes:

- Before adjusting, make sure there is no gap between L6101 and L6102 and between L6103 and L6104. If there is a gap between them, bring them into contact with each other first, and then make adjustments.
- Make indicator adjustments in order of AM \rightarrow FM.
- Adjustment sequence : L6104 \rightarrow L6105 \rightarrow L6102 \rightarrow T6101

● For S/DF type (AXQ1016)

Step No.	Adjustment Title	FM SG (1kHz, ± 75 kHz dev.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (MHz)	Level (dB μ V)			
1	Center Adjustment	83 Non modulation	80 or more	83MHz	L6109	Adjust so that the DC voltage between Pin 4 and Pin 28 of IC6101 becomes $0V \pm 50mV$. (Both ends of R6141)
2	Front End Sensitivity	83	0–30	83MHz	L6104 L6102 T6101	Adjust so that the DC voltage of the Pin12 of IC6101 (S-meter) becomes at maximum level.
3	TUNED IND. Lighting Level	83	15 ± 2	83MHz	VR6101	Adjust so that the indicator of TUNED IND. starts to light up.

Notes:

- Before adjusting, make sure there is no gap between L6101 and L6102, L6103 and L6104. If there is a gap between them, bring them into contact with each other first, and then make adjustments.
- Make indicator adjustments in order of AM → FM.

■ AM Tuner Section

- Set the mode selector to AM BAND.
- Connect the wiring as shown in Fig. 1–1.
- For MEXK/EA, MEXK/EB, NBXK, SD, SL, YPW and MEZIXK/DI types (AXQ7013, AXQ3213, AXQ1012, AXQ7014 and AXQ3214)

Step No.	Adjustment Title	AM SG (400Hz, 30% Mod.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (kHz)	Level (dB μ V/m)			
1	TUNED IND. Lighting Level	999 *1	47 ± 2	999kHz *1	VR6202	Adjust so that the indicator of TUNED IND. starts to light up.

Note:

- When SD, SL and YPW types are used, set the AM frequency step to 10 kHz.
- *1: For the area using 10kHz step, frequencies should be 1000 kHz.

● For S/DF type (AXQ1016)

Step No.	Adjustment Title	AM SG (400Hz, 30% Mod.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (kHz)	Level (dB μ V/m)			
1	TUNED IND. Lighting Level	999	47 ± 2	999kHz	VR6102	Adjust so that the indicator of TUNED IND. starts to light up.



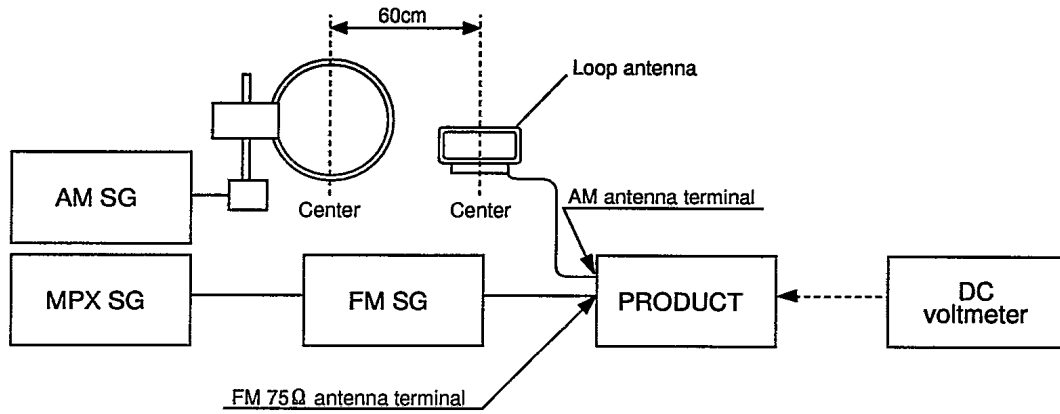


Fig. 1-1 AM and FM Adjustment Wiring Diagram

FM/AM TUNER MODULE (AXQ7013, AXQ3213 and AXQ1012)

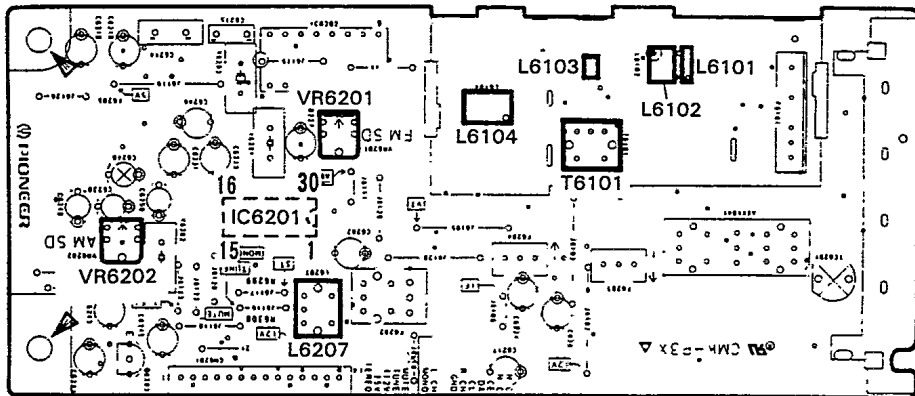

FM/AM TUNER MODULE (AXQ7014 and AXQ3214)

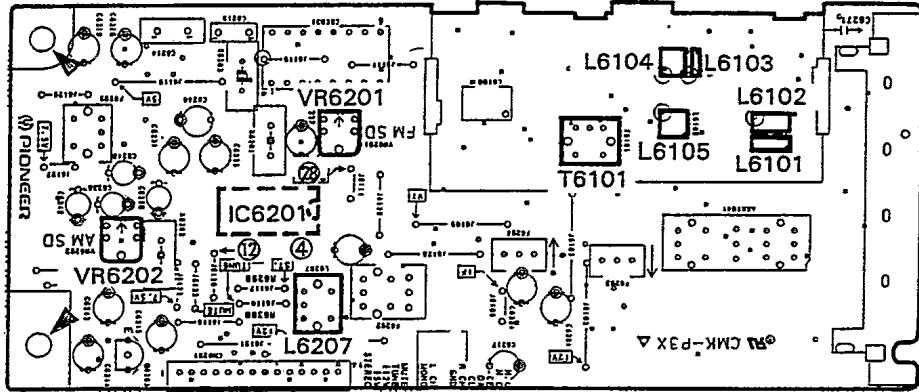

FM/AM TUNER MODULE (AXQ1016)

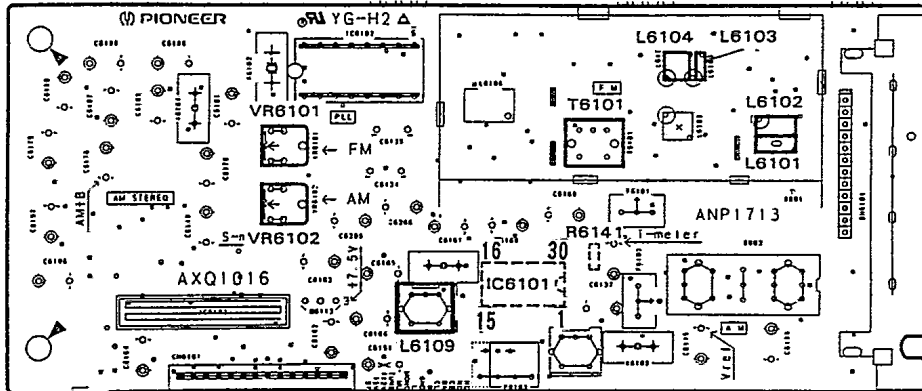


Fig. 1-2 Adjustment Points

9.2 POWER AMP MODULE SECTION (Refer to Fig. 2-1.)

1. Handling Precautions

- Since the heat sink and transistor metallic parts are connected to the Front Amp output, make sure they do not contact the GND (chassis) or other circuits.
- Since there is residual high voltage in the Power Amp Module ±B1 (FRONT 50W ASSY) and ±B2 (REGULATOR ASSY) even when the power is OFF, caution should be exercised. (If necessary, the voltage should be discharged).
- When handling the Power Amp Module, make sure you do not touch the fan motor blade.

2. Adjustment and Confirmation of Idle Current

- Basically, the idle current needs to be confirmed when replacing a power transistor, driver transistor, or bias transistor, or when the entire split board Assy of the Power Amp Module has been replaced.
- Make sure the heat sink has cooled sufficiently before measuring the idle current. (Temperature should be the same as room temperature; 25°C is ideal, if possible.)
- Idle current stipulated value: 3-100mA.

■ Front Amp Side (FRONT 50W ASSY)

Step	Measurement	Item	Remarks
1	Lch side	Insert a resistor (0.22Ω, 3W or more) in series in the connector CN7502 +B1 (or -B1) line (terminal No. 5 or 6). (Refer to Fig. 2-2.)	For measuring voltage at both sides of resistor
2		Short both sides of C7524.	Do not operate Rch side.
3		Turn the power ON, wait 6 seconds, and then measure the resistance voltage in Step 1.	Lch Idle current $I = V / 0.22$
4	Rch side	<ul style="list-style-type: none"> ● Same as Step 1 above. ● Short both sides of C7523. 	Do not operate Lch side.
5		Turn the power ON under the above conditions, and after 6 seconds measure the resistance voltage in Step 1.	
6	—	If the measured idle current is greater than 100mA, perform the following procedure.	
7	Lch side	Short between the Point ㉑ pattern in Fig. 2-3 using solder.	Connect R7517 to R7515 in a parallel circuit.
8	Rch side	Short between the Point ㉒ pattern in Fig. 2-3 using solder.	Connect R7518 to R7516 in a parallel circuit.
9	—	After performing Steps 7 and 8, remeasure the idle current and confirm that it is below 100mA.	
10	—	If the measured idle current is below 3mA, perform the following procedure.	
11	Lch side	Short between the Point ㉓ pattern in Fig. 2-3 using solder.	Connect R7551 to R7519 in a parallel circuit.
12	Rch side	Short between the Point ㉔ pattern in Fig. 2-3 using solder.	Connect R7552 to R7520 in a parallel circuit.
13	—	After performing Steps 11 and 12, remeasure the idle current and confirm that it is greater than 3mA. (Within 3-100mA)	

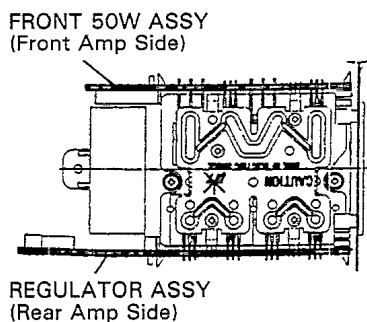


Fig. 2-1 Power Amp Module (POWER MOD. F50)

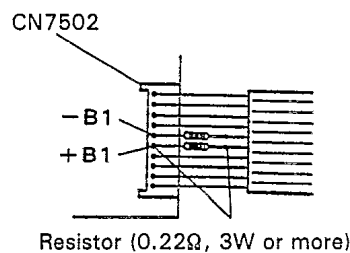


Fig. 2-2 FRONT 50W ASSY

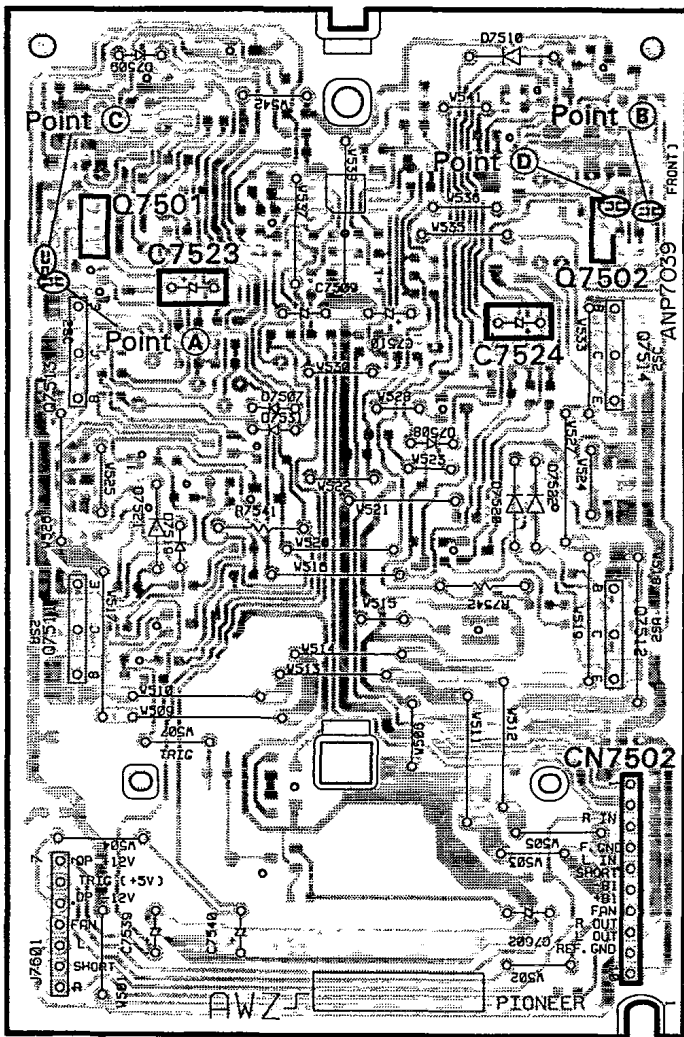


Fig. 2-3 FRONT 50W ASSY

3. Adjusting the Operating Temperature Setting of the Fan Motor (VR7201)

This adjustment is necessary when IC7401 (+12V regulator), Q7301 and Q7302 (temperature sensors), IC7201 (protection IC), or VR7201 has been replaced, or when the entire split board Assy of the Power Amp Module has been replaced.

■ Adjustment-Related Cautions

- Make sure the heat sink has sufficiently cooled (is the same as room temperature Ta.)
- Once the power has been turned ON, make measurements and adjustments as quickly as possible. (If too much time is taken, the heat sink temperature will rise, and the measurements will deviate from the Ta measurement point.)

■ Adjustment

1. Connect a voltmeter between TEMP and VL (or between IC7201 terminals No.7 and 9). (Refer to Fig. 2-4, Fig. 2-5)
2. Determine the fan motor operating temperature setting by means of the following formula. (Tolerance is within $\pm 30\text{mV}$.)
Formula: $(75^\circ\text{C} - T_a) \times 19 \text{ (mV)}$
Ta: ambient temperature ($^\circ\text{C}$)
3. Adjust VR7201 so that the voltage between TEMP and VL is the value obtained from the above formula.

For example:

when the room temperature is 25°C ,
set value = $(75 - 25) \times 19 \text{ (mV)}$
= 950mV (tolerance within $\pm 30\text{mV}$).

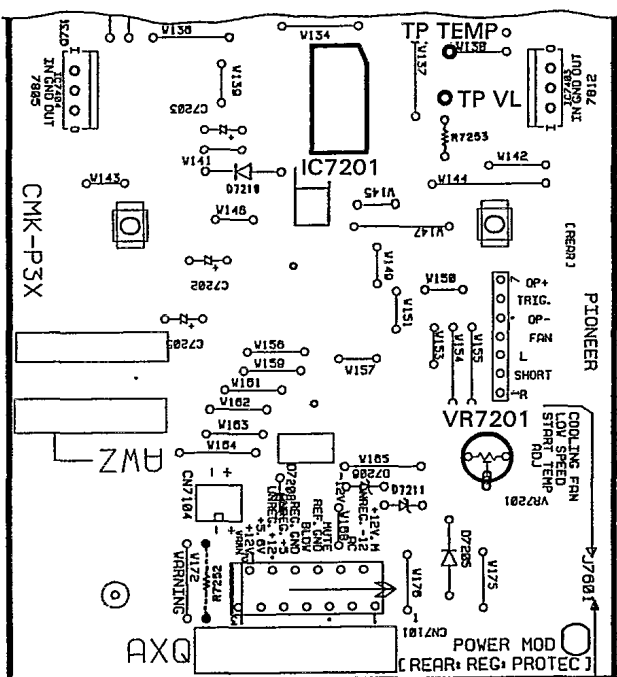


Fig. 2-5 REGULATOR ASSY

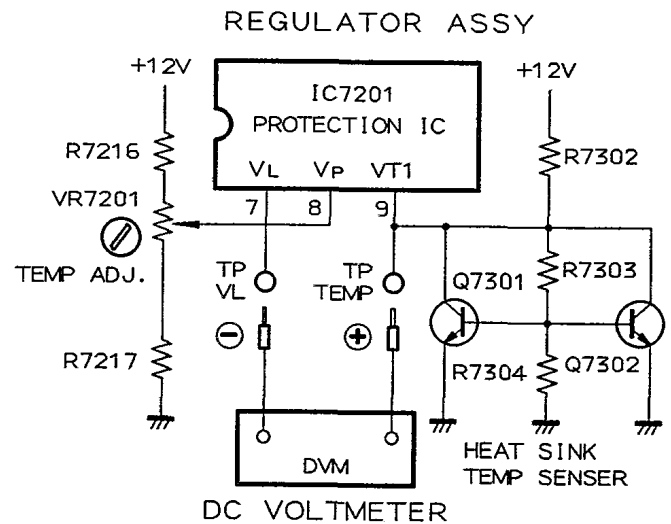


Fig. 2-4 Adjustment of Operating Temperature Setting of Fan Motor

9.3 CASSETTE DECK SECTION

● Adjustment points and test points are shown in Fig. 3-2 and Fig. 3-4.

■ Mechanical Adjustment

- Set the TAPE function.
- Test tape: STD-301 (3kHz, 30min).

1. Tape Speed Adjustment

No.	Mode	Test Tape	Adjusting Points	Measurement Points	Adjustment Procedure	Remarks
1	PLAY	STD-301 (Playback: 3kHz)	DECK Unit VR4111	TAPE TEST POINT (Rch) (AF Assy)	Press the PLAY SW and adjust so that the reading becomes 3010Hz ± 10Hz. Confirm that wow & flutter level is below 0.2% (in the reverse direction, confirm that the reading is within 3010Hz ± 60Hz).	

■ Electrical Adjustment

Check the following before starting.

1. Confirm that the tape speed adjustment has been completed.
2. Clean the heads and demagnetize them using a head eraser.
3. Set the measurement level to 0 dBV = 1 Vrms.
4. Use the specified tape for adjustment. Use the labeled (A) side of the test tape.
STD-331E: For playback adjustment
STD-631: Normal blank tape
5. Provide yourself with the following measuring devices:
 - AC millivoltmeter
 - Low-frequency oscillator
 - Attenuator
 - Oscilloscope
6. Adjust both right and left channels unless otherwise specified.
7. Turn the DOLBY NR switch off unless otherwise specified.
8. Warm up the unit for several minutes before adjustment. In particular, be sure to warm up the unit in the REC/PLAY mode for 3 to 5 minutes before starting recording/playback frequency characteristics adjustment.
9. Always follow the indicated adjustment order. Otherwise, a complete adjustment may not be achieved.

Playback Adjustment (Decks I and II)

1. Head Azimuth Adjustment
2. Playback Level Adjustment

Recording Adjustment (Deck II)

1. Bias Oscillation Frequency Adjustment
2. Recording Bias Adjustment
3. Recording Level Adjustment.
4. ALC Operation Check

**As the reference recording level is 250nwb/m for STD-331E, the recording level will be higher by 4 dB for STD-331B (160nwb/m). When adjusting, pay careful attention to the type of tape used.*

*Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.*

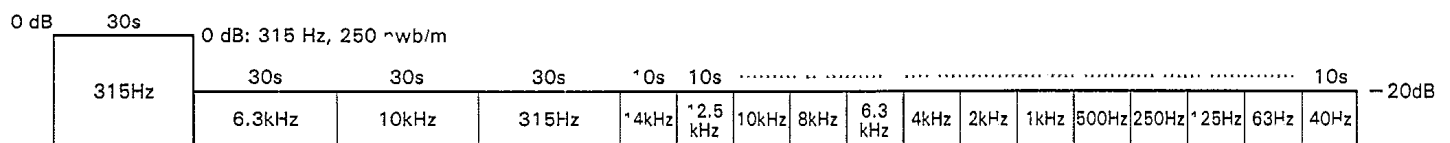


Fig. 3-1 STD-331E Test Tape


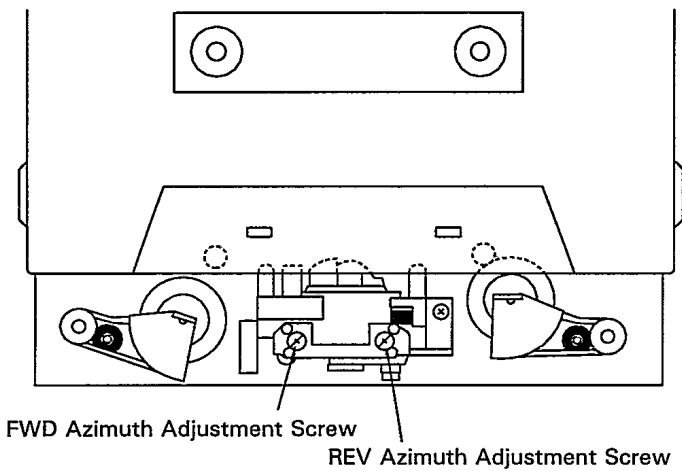


Fig. 3-2 Head Azimuth Adjustment

PLAY BACK

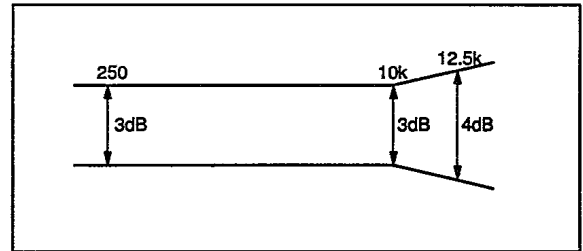

RECORDING

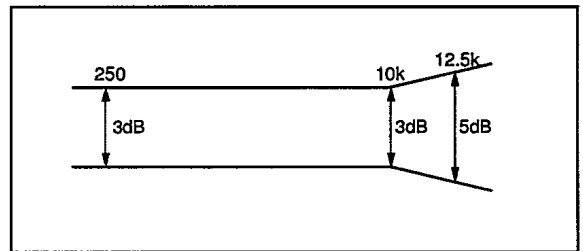


Fig. 3-3 Frequency Characteristics

● **Playback Adjustment**

- This unit is equipped with auto tape selector.
- Do not switch between forward and reverse operation with the screwdriver inserted.

1. Head Azimuth Adjustment

Step	Tape Selector (AUTO)	Mode	Input Signal/ Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	PLAY	STD-331E test tape (Playback: 10kHz, -20dB)	Deck I	Head azimuth adjustment screw (Fig. 3-2)	TAPE TEST POINT (L, Rch) (AF Assy)	Max. playback signal level	After adjustment, apply lock paint to the head azimuth adjustment screw.
				Deck II				

2. Playback Level Adjustment

- Since this adjustment determines playback Dolby NR level, perform it carefully.

Step	Tape Selector (AUTO)	Mode	Input Signal/ Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	PLAY	STD-331E test tape (Playback: 315Hz, 0dB)	Deck I	VR4201 (Lch) VR4202 (Rch)	TAPE TEST POINT (L, Rch) (AF Assy)	-4.2 dBV	
				Deck II	VR4203 (Lch) VR4204 (Rch)			

● Recording Adjustment

1. Bias Oscillation Frequency Adjustment

Step	Tape Selector (AUTO)	Mode	Input Signal/Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	REC	Load the STD-631 test tape and set the recording mode.	Deck I	—	Between ① point in Fig. 3-4 and GND.	Oscillation frequency to be 105.0kHz ±2kHz.	When the power is turned ON while the MONO button is depressed, the frequency will decrease 2-3 kHz.
				Deck II	T4351			

- After the adjustment, caution should be exercised so as not to become under bias by checking the distortion rate.

2. Recording Bias Adjustment

Step	Tape Selector (AUTO)	Mode	Input Signal/Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	REC	Input a 315Hz signal to the VIDEO/AUX IN terminal and set the input selector to VIDEO.	Deck I	—	TAPE TEST POINT (L, Rch) (AF Assy)	-25.2 dBV	
				Deck II	Input signal level			
2	NORMAL	REC → PLAY	Load the STD-631 test tape and record/playback the 315Hz and 10kHz signals. (see the Note below)	Deck I	—	TAPE TEST POINT (L, Rch) (AF Assy)		Repeat adjustment until playback level of the 10kHz signal is within 0±0.5dB from that of the 315Hz signal.
				Deck II	VR4351 (Lch) VR4352 (Rch)			

Note: Set the 10 kHz input signal level to the same value as the 315 Hz input signal level of step 1.

3. Recording Level Adjustment

Step	Tape Selector (AUTO)	Mode	Input Signal/Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	REC	Input a 315Hz signal to the VIDEO/AUX IN terminal and set the input selector to VIDEO.	Deck I	Input signal level	TAPE TEST POINT (L, Rch) (AF Assy)	-8.2 dBV	
				Deck II				
2	NORMAL	REC → PLAY	STD-631 test tape and record/playback the 315Hz signal.	Deck I	—	TAPE TEST POINT (L, Rch) (AF Assy)		Repeat recording, playback and adjustment until playback level of the 315Hz signal becomes -8.2dBV.
				Deck II	VR4301 (Lch) VR4302 (Rch)			

4. ALC Operation Check

Step	Tape Selector (AUTO)	Mode	Input Signal/Test Tape	Adjusting Points		Measurement Points	Adjustment Value	Remarks
1	NORMAL	REC/PAUSE	Input a 315Hz signal to the VIDEO/AUX IN terminal and set the input selector to VIDEO.	Input signal level		TAPE TEST POINT (L, Rch) (AF Assy)	-5.2 dBV	
2				Set to a level +10dB above the input level at step 1.	-2.2±2.5dBV			

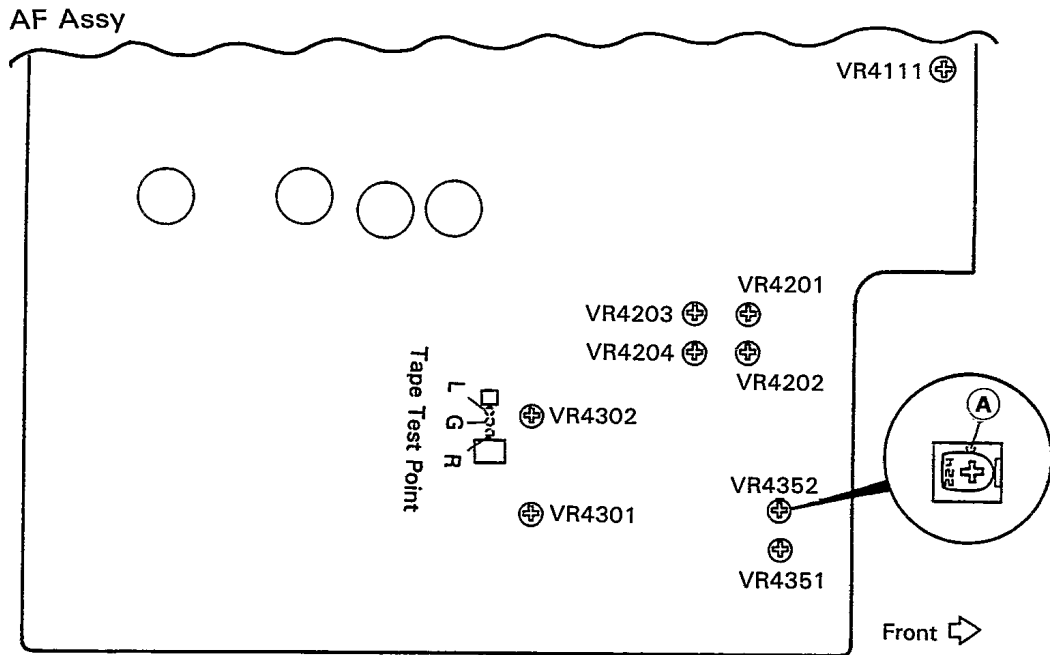


Fig. 3-4 Adjusting Points and Measurement Points

9.4 RDS ADJUSTMENT (FOR XR-P350/MEXK/EA, MEXK/EB, NBXK AND MEZIXK/DI ONLY)

- Setting the RDS-Signal generator (*1).
- Set the mode selector to FM BAND.
- Connect the wiring as shown in Fig. 4-1

Note *1 : Audio Main 1kHz, 85 %
Pilot 10 % RDS 1.6 %
SK 4.7 %

Step No.	Adjustment Title	FM/AM SG		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (MHz)	Level (dB μ V)			
1	RDS (BPF) Level	88	60	88MHz	VR3501	Adjust so that the Waveform of RDS test point becomes at maximum. (Photo 1)
2	RDS IND. Lighting Level Verification	88	45	88MHz	—	Confirm that the RDS IND. to light up.

Note: Entry into RDS mode is done by switching to the FM band and entering an RDS signal from FM (RDS) SG to the FM 75 Ω antenna terminal.

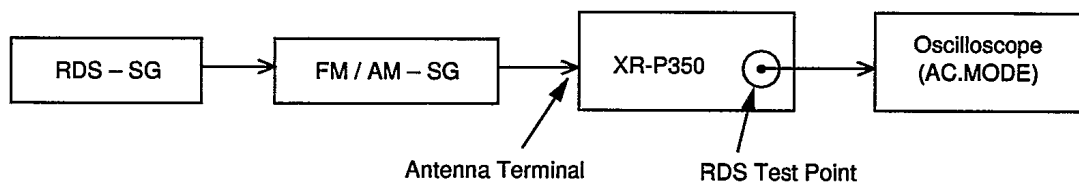


Fig. 4-1 RDS Adjustment Wiring Diagram


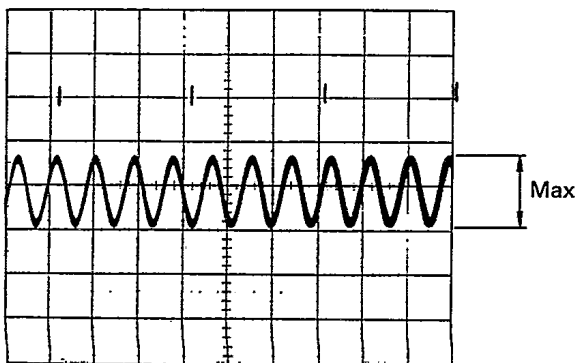


Photo 1

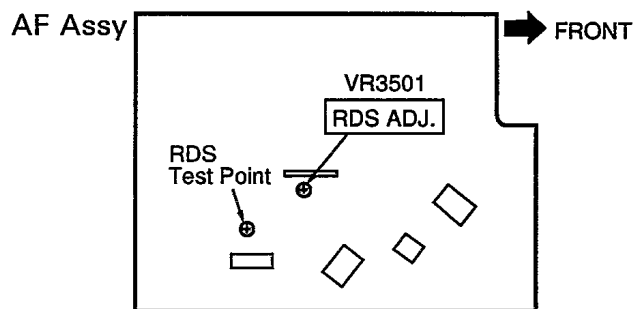

This diagram is viewed from the foil side.

Fig. 4-2 Adjustment Points

9.5 CD SECTION

■ Adjustment Methods

If a disc player is adjusted incorrectly or inadequately, it may malfunction or not work at all even though there is nothing at all wrong with the pickup or the circuitry. Adjust correctly following the adjustment procedure.

● Adjustment Items/Verification Items and Order

If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in steps 1–4, the pickup block may be defective.

Step	Item	Test Point	Adjustment Location
1	Focus offset verification	TP1 (CN8201), Pin6 (FE)	None
2	Tracking error balance verification	TP1 (CN8201), Pin2 (TE)	None
3	Pickup radial tangential direction tilt adjustment	TP1 (CN8201), Pin1 (RF)	Radial tilt adjustment screw, Tangential tilt adjustment screw
4	RF level verification	TP1 (CN8201), Pin1 (RF)	None
5	Focus servo loop gain adjustment	TP1 (CN8201), Pin5 (FI) TP1 (CN8201), Pin6 (FE)	VR8152 (FOCUS)
6	Tracking servo loop gain adjustment	TP1 (CN8201), Pin3 (TI) TP1 (CN8201), Pin2 (TE)	VR8151 (TRACKING)

Abbreviation Table

- FE : Focus Error
- TE : Tracking Error
- FI : Focus In
- TI : Tracking In

● Measuring Instruments and Tools

1. Dual trace oscilloscope (10 : 1 probe)
2. Low-frequency oscillator
3. Test disc (YEDS-7)
4. Low pass filter (39kΩ + 0.001μF)
5. Resistor (100kΩ)
6. 8 cm disc (With at least about 20 minutes of recording)
7. Ball point hexagon wrench (GGK1002)
8. Standard tools

● Test Point and Adjustment Variable Resistor Positions

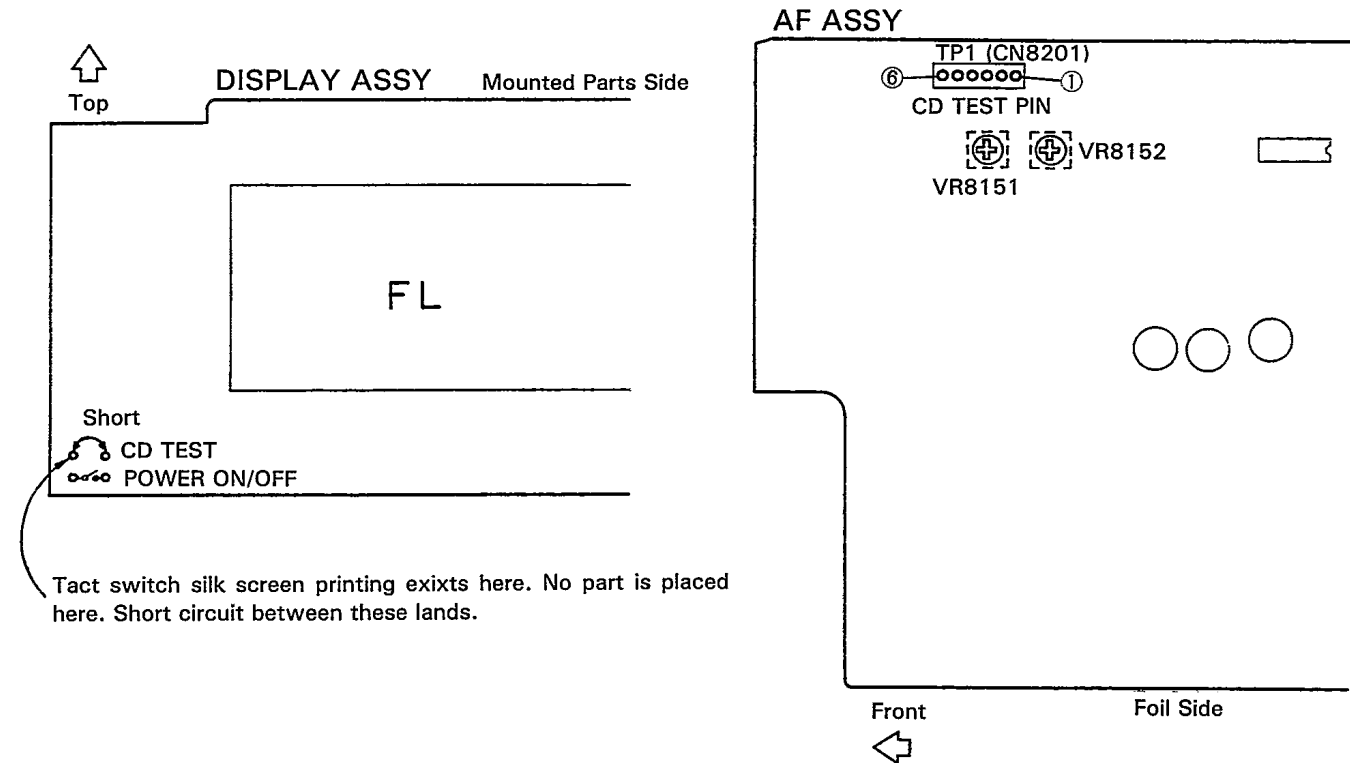


Fig. 5-1 Adjustment Location

● Notes

1. Use a 10 : 1 probe for the oscilloscope.
2. All the knob positions (settings) for the oscilloscope in the adjustment procedures are for when a 10 : 1 probe is used.

● Test Mode

These models have a test mode so that the adjustment and checks required for service can be carried out easily. When these models are in test mode, the keys on the front panel work differently from normal. Adjustments and checks can be carried out by operating these keys with the correct procedure. For these models, all adjustments are carried out in test mode.

[Setting these models to test mode]

How to set this model into test mode.

1. When the Power switch is activated, set the FUNCTION button to CD.
2. Short-circuit between both CD TEST points. (See Fig. 5-1)

When the test mode is set correctly, the display is different from what it usually is when the power is turned on. If the display is still the same as usual, test mode has not been set correctly, so repeat Steps 1-2.





[Release from test mode]

Here is the procedure for releasing the test mode:

1. Press the STOP key and stop all operations.
2. Turn off the power switch on the front panel.

[Operations of the keys in test mode]


Code	Key Name	Function in Test Mode	Explanation
	PROGRAM	Focus servo close	<p>The laser diode is lit up and the focus actuator is lifted up, then lowered slowly and the focus servo is closed at the point where the objective lens is focused on the disc.</p> <p>With the player in this state, if you lightly rotate the stopped disc by hand, you can hear the sound the focus servo.</p> <p>If you can hear this sound, the focus servo is operating correctly. If you press this key with no disc mounted, the laser diode lights up, the focus actuator is pulled up, then the actuator is lowered and raised three times and returned to its original position.</p>
▷/□□	(PLAY/PAUSE)	Spindle servo ON	<p>Starts the spindle motor in the clockwise direction and when the disc rotation reaches the prescribed speed (about 500rpm at the inner periphery), sets the spindle servo in a closed loop.</p> <p>Be careful. Pressing this key when there is no disc mounted makes the spindle motor run at the maximum speed.</p> <p>If the focus servo does not go correctly into a closed loop or the laser light shines on the mirror section at the outermost periphery of the disc, the same symptom is occurred.</p>
		Tracking servo close/open	<p>Pressing this key when the focus servo and spindle servo are operating correctly in closed loops puts the tracking servo into a closed loop, displays the track number being played back and the elapsed time on the front panel, and outputs the playback signal.</p> <p>If the elapsed time is not displayed or not counted correctly or the audio is not played back correctly, it may be that the laser is shining on the section with no sound recorded at the outer edge of the disc, that something is out of adjustment, or that there is some other problem.</p> <p>This key is a toggle key and open/close the tracking servo alternately. This key has no effect if no disc is mounted.</p>

Code	Key Name	Function in Test Mode	Explanation
	(MANUAL/TRACK SEARCH REV)	Carriage reverse (inwards)	Moves the pickup position toward the inner diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
	(MANUAL/TRACK SEARCH FWD)	Carriage forward (outwards)	Moves the pickup position toward the outer diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
	(STOP)	Stop	Initializes and the disc rotation stops. The pickup and disc remain where they are when this key is pressed.
	(EJECT)	Disc Eject	Eject the disc. This key operation does not affect the position of the pickup.

[How to playback a disc in test mode]

In test mode, since the servos operate independently, playing back a disc requires that you operate the keys in the correct order to close the servos.

Here is the key operation sequence for playing back a disc in test mode.

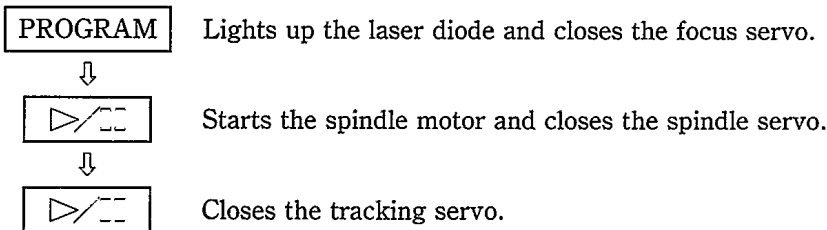

Wait at least 2–3 seconds between each of these operations.

1. Focus Offset Verification

● Objective	Verify the DC offset for the focus error amp.		
● Symptom when out of adjustment	The model does not focus in and the RF signal is dirty.		
● Measurement Instrument Connections	Connect the oscilloscope to TP1 (CN8201), Pin6 (FE) [Settings] 5mV division 10ms division DC mode	● Player State ● Adjustment Location ● Disc	Test mode, stopped (just the Power switch on) None None needed
[Procedure] Verify the DC voltage at TP1 (CN8201), Pin6 (FE) is $0 \pm 50\text{mV}$.			

Note: If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in adjustment items 1–4, the pickup block may be defective.

2. Tracking Error Balance Verification

● Objective	To verify that there is no variation in the sensitivity of the tracking photo diode.		
● Symptom when out of adjustment	Play does not start or track search is impossible.		
● Measurement Instrument Connections	Connect the oscilloscope to TP1 (CN8201), Pin2 (TE). This connection may be via a low pass filter. [Settings] 50mV/division 5ms/division DC mode	● Player State ● Adjustment Location ● Disc	Test mode, focus and spindle servos closed and tracking servo open. None YEDS-7
[Procedure] <ol style="list-style-type: none"> 1. Move the pickup to midway across the disc (R=35mm) with the $\triangleright \triangleright \square$ (MANUAL TRACK SEARCH FWD) key or $\square \triangleleft \triangleleft$ (REV) key. 2. Press the PROGRAM key, then the $\triangleright \square$ (PLAY/PAUSE) key in that order to close the focus servo then the spindle servo. 3. Line up the bright line (ground) at the center of the oscilloscope screen and put the oscilloscope into DC mode. 4. Supposing that the positive amplitude of the tracking error signal at TP1 (CN8201), pin2 (TE) is (A) and the negative amplitude is (B), the following expression is satisfied. 			
<p>When $A \geq B$, $\frac{A-B}{C} \times \frac{1}{2} \leq 0.1$</p> <p>When $A < B$, $\frac{B-A}{C} \times \frac{1}{2} \leq 0.1$</p>		<p>When there is a DC component</p> <p>When there is no DC component</p>	


3. Pickup Radial/Tangential Tilt Adjustment


● Objective	To adjust the angle of the pickup relative to the disc so that the laser beams are shone straight down into the disc for the best read out of the RF signals.		
● Symptom when out of adjustment	Sound broken; some discs can be played but not others.		
● Measurement Instrument Connections	Connect the oscilloscope to TP1 (CN8201), Pin1 (RF). [Settings] 20mV/division 200ns/division AC mode	● Player State ● Adjustment Location ● Disc	Test mode, play Pickup radial tilt adjustment screw and tangential tilt adjustment screw 8 cm disc [However, those with approx. 20 min of audio signal (music).]

[Procedure]

- Press the $\triangleright\triangleright\blacksquare$ (MANUAL/TRACK SEARCH FWD) key or $\blacksquare\triangleleft\triangleleft$ (REV) key to move the pickup to the external circumference of the disc.
Press the PROGRAM key, the $\triangleright/\blacksquare\blacksquare$ (PLAY/PAUSE) key twice in that order to close the respective servos and put the player into play mode.
- First, adjust the radial tilt adjustment screw with the hexagon wrench (GGK1002) so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly.
- Next, adjust the tangential tilt adjustment screw with the hexagon wrench (GGK1002) so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly (Fig. 5-3).
※ The ball-point type hexagonal wrench is used because the disc will get in the way if a normal hexagonal wrench is used.
- Adjust the radial tilt adjustment screw and the tangential tilt adjustment screw again so that the eye pattern can be seen the most clearly. As necessary, adjust the two screws alternately so that the eye pattern can be seen the most clearly.
- When the adjustment is completed, lock the radial and tangential adjustment screw.

Note: Radial and tangential mean the directions relative to the disc shown in Fig. 5-2.

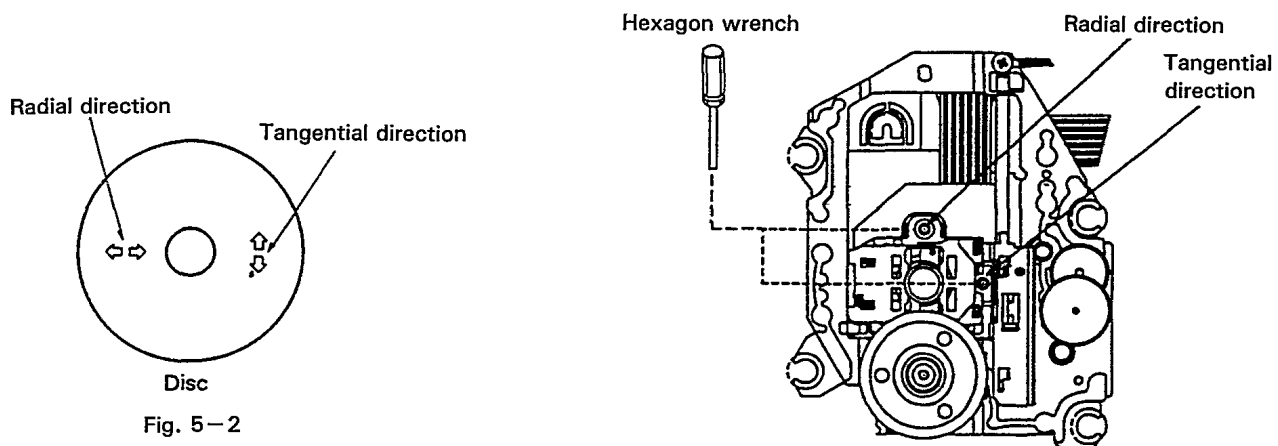

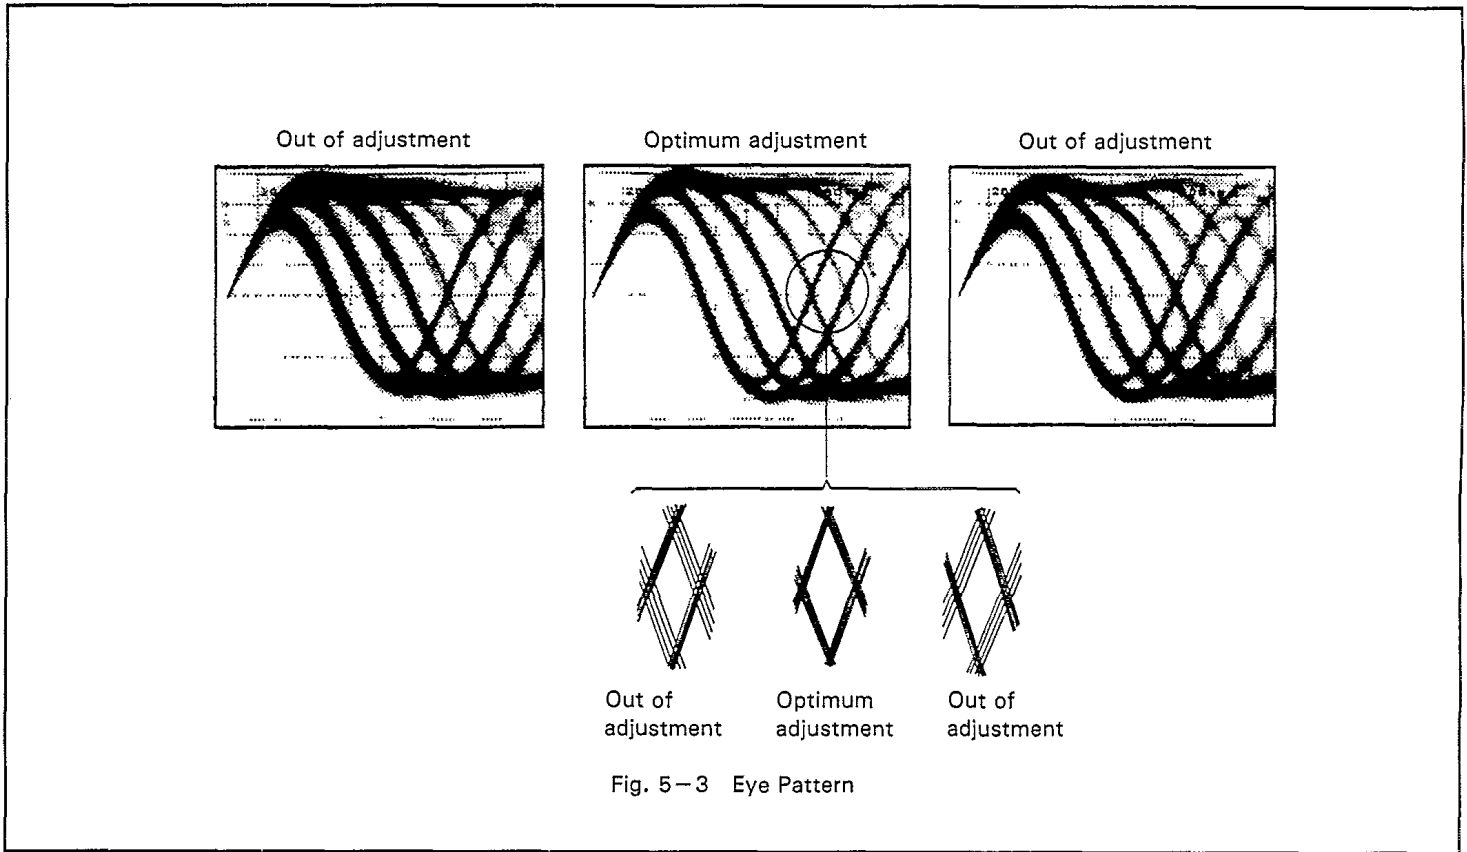

4. RF Level Verification

<ul style="list-style-type: none"> ● Objective 	To verify the playback RF signal amplitude.		
<ul style="list-style-type: none"> ● Symptom when out of adjustment 	No play or no search		
<ul style="list-style-type: none"> ● Measurement Instrument Connections 	Connect the oscilloscope to TP1 (CN8201), Pin1 (RF). [Settings] 50mV/division 10ms/division AC mode	<ul style="list-style-type: none"> ● Player State ● Adjustment Location ● Disc 	Test mode, play None YEDS-7
<p>[Procedure]</p> <ol style="list-style-type: none"> 1. Move the pickup to midway across the disc (R=35mm) with the $\triangleright\triangleright\blacksquare$ (MANUAL/ TRACK SEARCH FWD) key or $\blacksquare\triangleleft\triangleleft$ (REV) key, then press the PROGRAM key, the $\triangleright/\blacksquare\blacksquare$ (PLAY/PAUSE) key twice in that order to close the respective servos and put the player into play mode. 2. Verify the RF signal amplitude is $1.2V_{p-p} \pm 0.2V$. 			

5. Focus Servo Loop Gain Adjustment

<ul style="list-style-type: none"> ● Objective 	To optimize the focus servo loop gain.		
<ul style="list-style-type: none"> ● Symptom when out of adjustment 	Playback does not start or focus actuator noisy.		
<ul style="list-style-type: none"> ● Measurement Instrument Connections 	See Fig. 5-4. [Settings] CH1 20mV/division X-Y mode CH2 5mV/division	<ul style="list-style-type: none"> ● Player State ● Adjustment Location ● Disc 	Test mode, play VR8152 (FOCUS) YEDS-7

[Procedure]

1. Set the AF generator output to 1.2kHz and 1Vp-p.
2. Press the $\triangleright \triangleright \square$ (MANUAL / TRACK SEARCH FWD) key or $\square \triangleleft \triangleleft$ (REV) key to move the pickup to halfway across the disc (R=35mm), then press the PROGRAM key, the $\triangleright / \square \square$ (PLAY / PAUSE) key twice in that order to close the corresponding servos and put the player into play mode.
3. Adjust VR8152 (FOCUS) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.



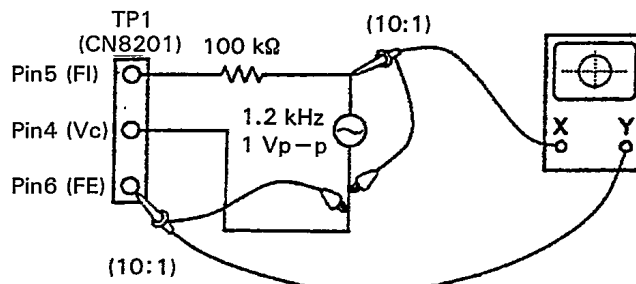


Fig. 5-4


Focus Gain Adjustment

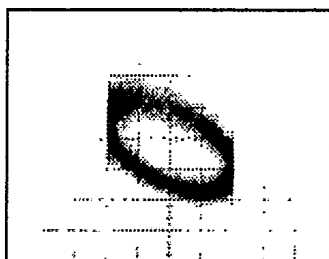

Higher gain

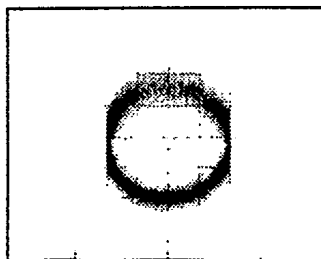

Optimum gain

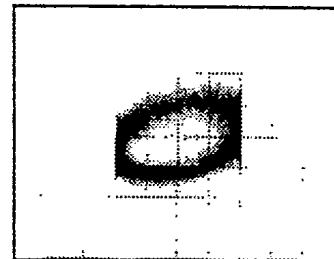

Lower gain

6. Tracking Servo Loop Gain Adjustment

● Objective	To optimize the tracking servo loop gain.		
● Symptom when out of adjustment	Playback does not start, during searches the actuator is noisy, or tracks are skipped.		
● Measurement Instrument Connections	See Fig. 5-5. [Settings] CH1 50mV/division X-Y mode CH2 20mV/division	● Player State ● Adjustment Location ● Disc	Test mode, play VR8151 (TRACKING) YEDS-7

[Procedure]

1. Set the AF generator output to 1.2kHz and 2Vp-p.
2. Press the $\triangleright\triangleright$ (MANUAL/TRACK SEARCH FWD) key or $\triangleleft\triangleleft$ (REV) key to move the pickup to halfway across the disc (R=35mm), then press the PROGRAM key, the \triangleright/\square (PLAY/PAUSE) key twice in that order to close the corresponding servos and put the player into play mode.
3. Adjust VR8151 (TRACKING) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.



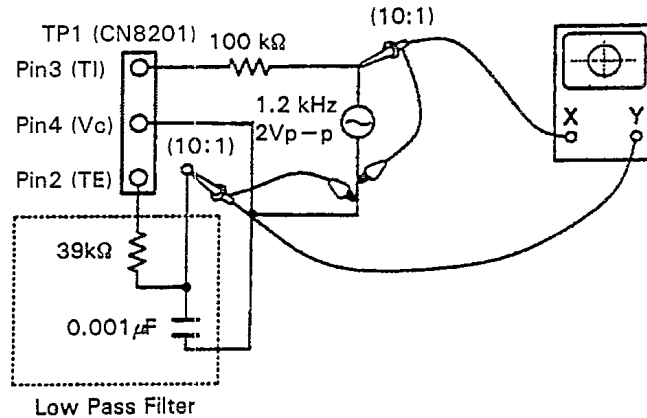


Fig. 5-5


Tracking Gain Adjustment

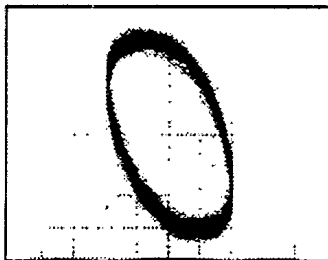

Higher gain

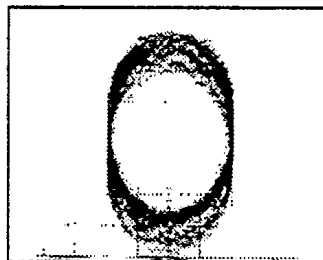

Optimum gain


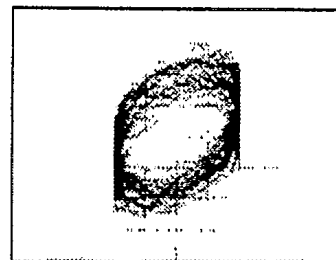


Lower gain


10. FL INFORMATION

AAV7009 (V1701 : DISPLAY ASSY)


- FL Tube
- Grid Assignment

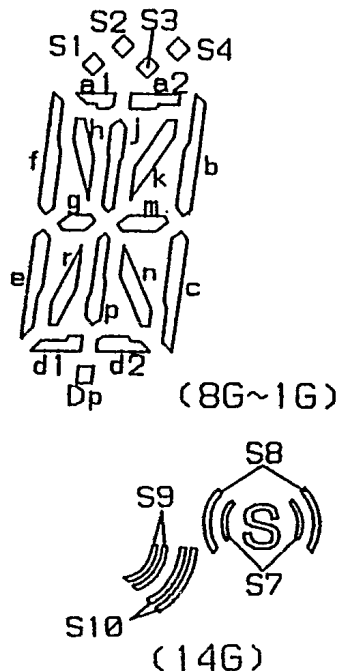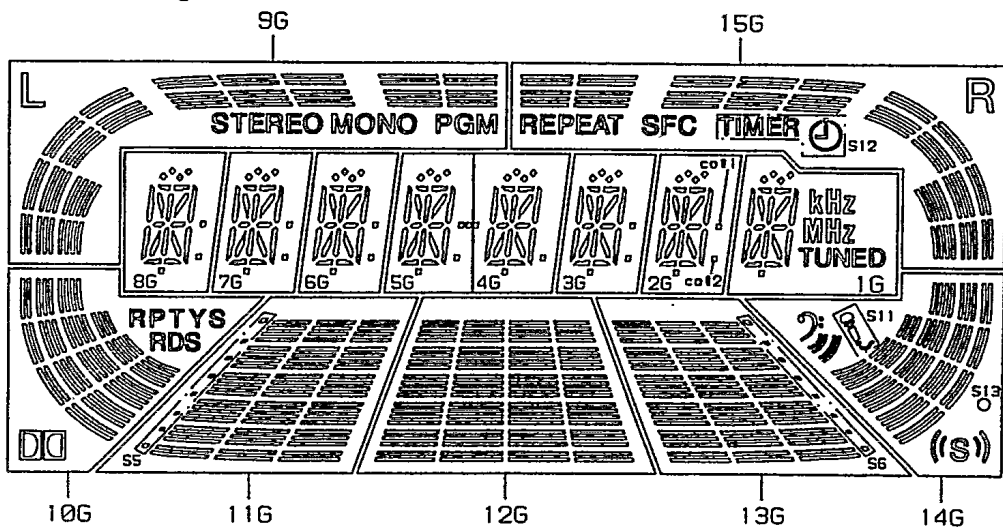

● Segment Assignment

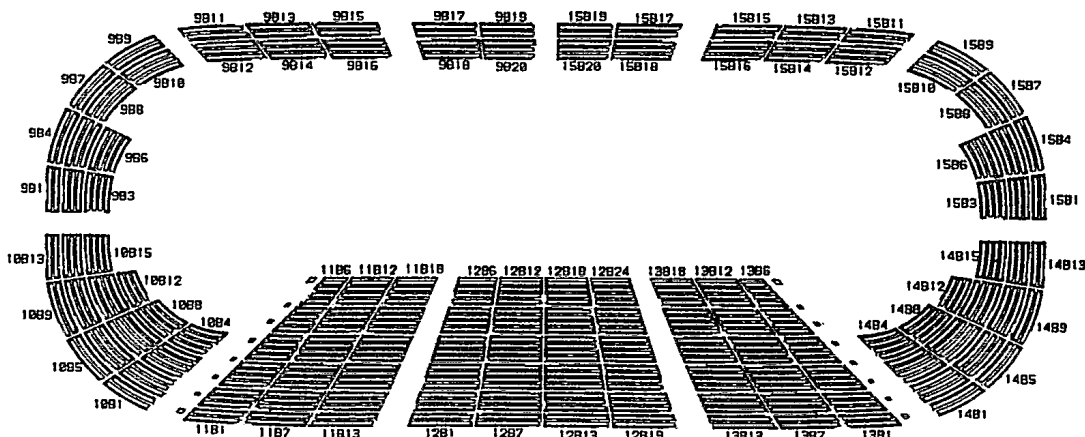

● Pin Assignment

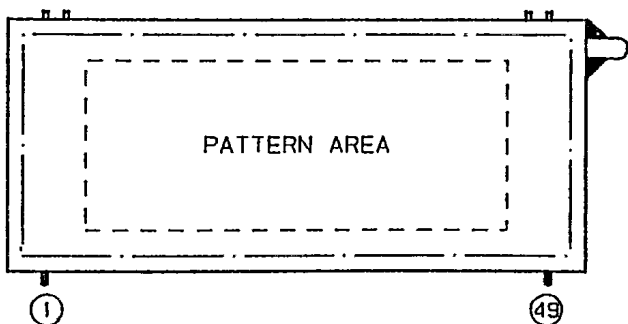

● Pin Connection


PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49											
CONNECTION	F	F	F	N	N	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	1	1	1	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G	G

NOTE
 1) F1, F2 --- Filament
 2) NP ----- No pin
 3) DL ----- Datum Line
 4) 1G~15G --- Grid
 5) The angle of the field of vision shall be 28.6° on the upper side and 26.6° on the lower side.

● Anode Connection

	15G	14G	13G	12G	11G	10G	9G	8G~6G	5G	4G	3G, 2G	1G
P1	15B11	14B8	-	12B22	-	S	9B11	m	m	m	m	m
P2	15B14	14B7	13B15	12B15	11B15	-	9B14	col1	ooo		col1	kHz
P3	15B13	14B6	13B9	12B9	11B9	10B8	9B13	f	f	f	f	f
P4	15B16	14B5	13B3	12B3	11B3	10B7	9B16	b	b	b	b	b
P5	15B15	-	S6	12B21	S5	RDS	9B15	h	h	h	h	h
P6	15B18	14B4	13B14	12B14	11B14	10B6	9B18	k	k	k	k	k
P7	15B17	14B3	13B8	12B8	11B8	10B5	9B17	j	j	j	j	j
P8	15B20	14B2	13B2	12B2	11B2	10B4	9B20	a2	a2	a2	a2	a2
P9	15B19	14B1	-	12B20	-	10B3	9B19	a1	a1	a1	a1	a1
P10	S12	S8	13B13	12B13	11B13	10B2	STEREO	S3	S3	S3	S3	S3
P11	SFC	S7	13B7	12B7	11B7	10B1	MONO	S1	S1	S1	S1	S1
P12	REPEAT	S13	13B1	12B1	11B1	-	PGM	S4	S4	S4	S4	S4
P13	R	S	-	12B19	-	DO	L	S2	S2	S2	S2	S2
P14	15B12	S10	13B4	12B4	11B4	Y	9B12	g	g	g	g	g
P15	15B9	S9	13B10	12B10	11B10	T	9B9	c	c	c	c	c
P16	15B10	?	13B16	12B16	11B16	P	9B10	e	e	e	e	e
P17	15B7	S11	-	12B23	-	R	9B7	n	n	n	n	n
P18	15B8	14B9	13B5	12B5	11B5	10B9	9B8	r	r	r	r	r
P19	15B4	14B10	13B11	12B11	11B11	10B10	9B4	p	p	p	p	p
P20	15B5	14B11	13B17	12B17	11B17	10B11	9B5	col2	col2	col2	col2	kHz
P21	15B6	14B12	-	12B24	-	10B12	9B6	d1	d1	d1	d1	d1
P22	15B1	14B13	13B6	12B6	11B6	10B13	9B1	d2	d2	d2	d2	d2
P23	15B2	14B14	13B12	12B12	11B12	10B14	9B2	Dp	Dp	Dp	Dp	Dp
P24	15B3	14B15	13B18	12B18	11B18	10B15	9B3	-	-	-	-	TUNED

● Grid Timing Chart

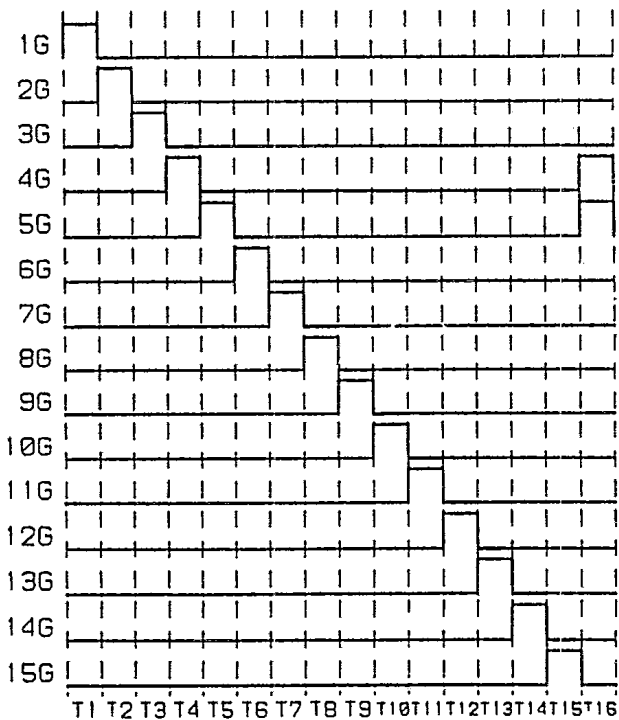

● Anode Timing Chart


	15G	14G	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	T15	T14	-	T12	-	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P2	T15	T14	T13	T12	T11	-	T9	T8	T7	T6	T5	T4	T3	T2	T1
P3	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P4	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P5	T15	-	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P6	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P7	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P8	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P9	T15	T14	-	T12	-	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P10	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P11	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P12	T15	T14	T13	T12	T11	-	T9	T8	T7	T6	T5	T4	T3	T2	T1
P13	T15	T14	-	T12	-	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P14	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P15	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P16	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P17	T15	T14	-	T12	-	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P18	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P19	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P20	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P21	T15	T14	-	T12	-	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P22	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P23	T15	T14	T13	T12	T11	T10	T9	T8	T7	T6	T5	T4	T3	T2	T1
P24	T15	T14	T13	T12	T11	T10	T9	-	-	-	-	-	-	-	T1

11. IC INFORMATION

● The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ PD4562A (IC1101 : AF ASSY)

- System Control Micro-computer
- Pin Assignment (Top view)

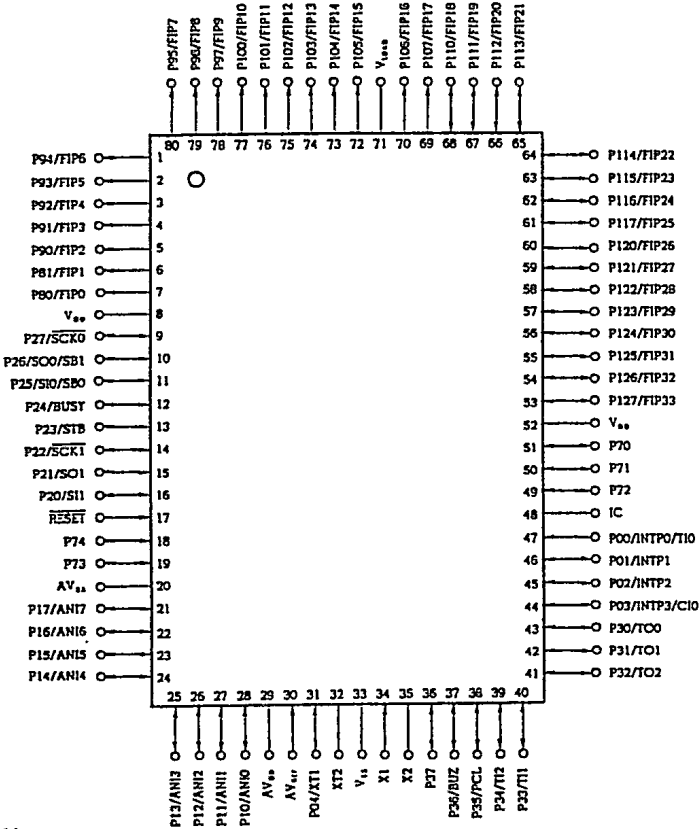

- Notes:
1. IC (Internally Connected): Connected to Vss.
 2. AVDD: Connected to VDD.
 3. AVss: Connected to Vss.

● Pin Function

No.	Pin Name	Pin Function	I/O	Description
1	P94	A	O	Switching analog switch output
2	P93	INH	O	Analog switch inhibit output
3	P92	PHONO	O	Switching PHONO output (Not used)
4	P91	0006 STB	O	PM0006 strobe output
5	P90	—	—	—
6	P81	CD RESET	O	CD, reset output
7	P80	XTAL ON/OFF	O	CD, XTAL ON/OFF

No.	Pin Name	Pin Function	I/O	Description
8	VDD	VDD	—	+5V
9	P27	BUS CLK	I	DISPLAY μ -COM. communication CLK
10	P26	BUS DATA OUT	O	DISPLAY μ -COM. DATA OUT
11	P25	BUS DATA IN	I	DISPLAY μ -COM. DATA IN
12	P24	—	—	—
13	P23	CD XLT	O	CD control (Latch)
14	P22	CD CLK	O	CD control (Clock)
15	P21	CD DATA	O	CD control (Data)
16	P20	CD SQSO	I	Sub code Q data serial input
17	RESET	RESET	—	Reset
18	P74	FCOK	I	Focus OK input
19	P73	LPS3	I	CD mechanism control input
20	AVss	—	—	GND
21	P17	LPS2	I	CD mechanism control input
22	P16	LPS1	I	
23	P15	LDON	O	Laser diode ON/OFF
24	P14	INSD	I	CD mechanism inside detection input
25	P13	LIN	O	CD loading in
26	P12	LOUT	O	CD loading out
27	P11	GFS	I	GFS detection input
28	P10	STANDBY	I	Standby input
29	AVDD	VDD	—	+5V
30	AVREF	VDD	—	
31	P04	SENS	I	CD LSI operation status multi-mode input
32	XT2	—	—	—

No.	Pin Name	Pin Function	I/O	Description
33	Vss	—	—	GND
34	X1	XTAL	—	Connected to oscillator
35	X2	XTAL	—	
36	P37	MOTOR	O	Deck motor control
37	P36	1CRO2	I	CrO2 tape detection switch input (Mecha I)
38	P35	1MODE	I	Head base position detection switch input (Mecha I)
39	P34	1PULSE	I	Reel pulse input (Mecha I)
40	P33	1HALF	I	Cassette half detection switch (Mecha I)
41	P32	1SOL	O	Solenoid control output (Mecha I)
42	P31	2HALF	I	Cassette half detection switch input (Mecha II)
43	P30	2SOL	O	Solenoid control output (Mecha II)
44	P03	2PULSE	I	Reel pulse input (Mecha II)
45	P02	SCOR	I	Subcode synch S0+S1 input
46	P01	2MODE	I	Head base position detection switch input (Mecha II)
47	P00	RDS CLK	I	RDS clock input *1
48	IC	—	—	GND
49	P72	2CRO2	I	CrO2 tape detection switch input (Mecha II)
50	P71	ARF	I	FWD REC prevention tab detection switch
51	P70	ARR	I	REV REC prevention tab detection switch
52	VDD	VDD	—	+5V
53	P127	VOL DOWN	O	VOLUME DOWN
54	P126	VOL UP	O	VOLUME UP
55	P125	—	—	—
56	P124	BEAT CUT	O	Switching beat cut output
57	P123	BIAS	O	REC BIAS circuit control output
58	P122	REC CRO2	O	Equalizer circuit control output for CrO2 tape when recording.


No.	Pin Name	Pin Function	I/O	Description
59	P121	REC MUTE	O	REC MUTE circuit control output
60	P120	DOLBY PB/REC	O	CXA1101 Playback/Recording control output
61	P117	PB CRO2	O	Equalizer circuit control output for CrO2 tape when playback.
62	P116	DOL ON/OFF	O	CXA1101 Dolby NR ON/OFF control output
63	P115	PB 1/2	O	Mecha I, II control output
64	P114	STEREO	I	STEREO status discrimination input
65	P113	TUNE	I	TUNE status discrimination input
66	P112	RDS ID	I	RDS tuning status discrimination input *1
67	P111	RDS DATA	I	RDS data input *1
68	P110	RDS MUTE	O	RDS circuit power supply control output *1
69	P107	MONO	O	Execution MONO control output
70	P106	TX MUTE	O	Tuner mute output
71	VLOAD	—	—	GND
72	P105	—	—	—
73	P104	MOD MUTE	O	Power module mute output
74	P103	POWER ON/OFF	O	Power ON/OFF
75	P102	FAN ON/OFF	O	Fan motor ON/OFF
76	P101	FUNC MUTE	O	Function mute output
77	P100	0006 CLK	O	PM0006 control clock output
78	P97	0006 DA	O	PM0006 control data output
79	P96	PLL CE	O	PLL IC control chip enable output
80	P95	B	O	Switching analog switch output

*1: XR-P350/MEXK/EA, MEXK/EB, NBXK and MEZIXK/DI only.

■ PDC022A (IC1901 : DISPLAY ASSY)

● System Control Micro-computer

● Pin Assignment (Top view)

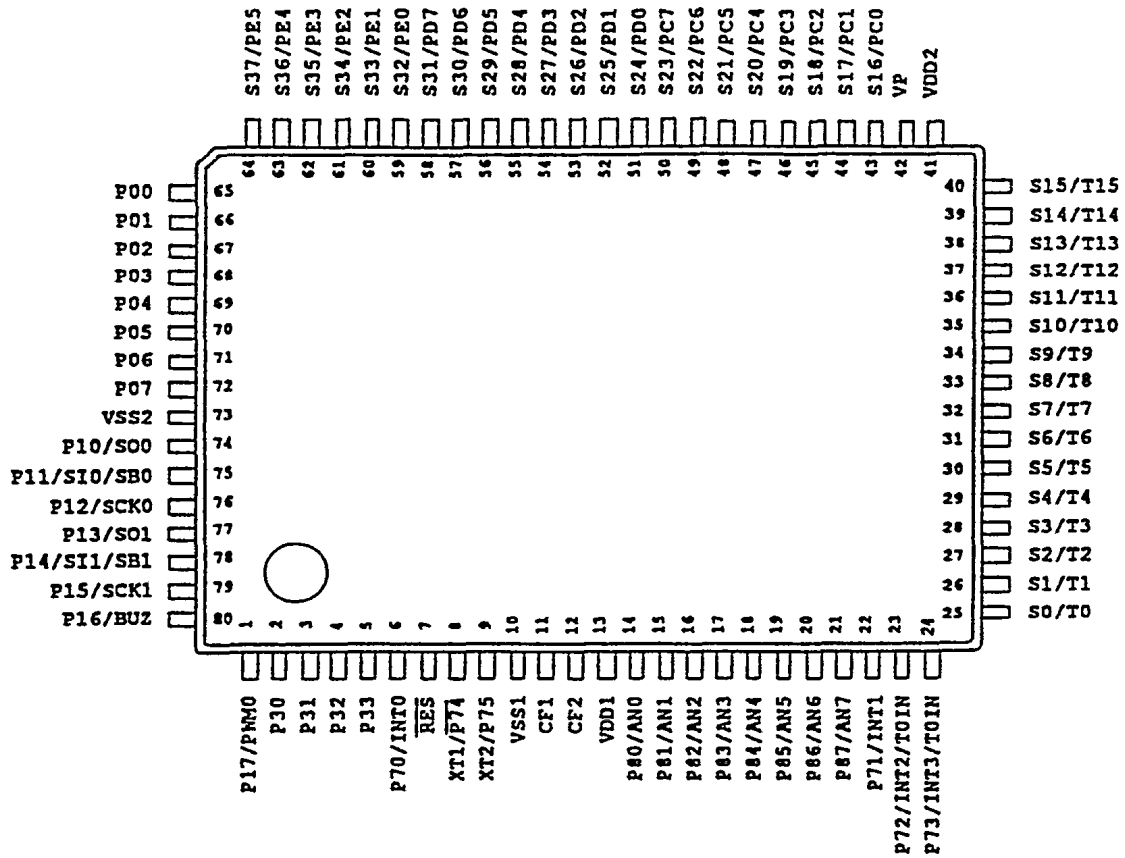

● Pin Function

No.	Pin Name	Pin Function	I/O	Description
1	P17	LED10	O	LED ON output
2	P30	KEY0	I	Key input
3	P31	-	-	---
4	P32	AF RESET	O	AF RESET output
5	P33	10G	O	FL GRID
6	P70	POW ON/OFF	-	POWER ON/OFF
7	$\overline{\text{RES}}$	$\overline{\text{RESET}}$	-	Reset
8	XT1	KEY1	I	Key input
9	XT2	KEY2	I	
10	VSS1	VSS1	-	GND

No.	Pin Name	Pin Function	I/O	Description
11	CF1	XTAL1	-	X'TAL input
12	CF2	XTAL2	-	
13	VDD1	VDD1	-	+5V
14	P80	KEY3	I	Key input
15	P81	KEY4	I	
16	P82	SPA1	I	Spectrum analyzer input
21	P87	SPA6		
22	P71	AC	I	AC input
23	P72	-	-	---
24	P73	REMOCON	I	Remote control signal input


No.	Pin Name	Pin Function	I/O	Description
25 33	T0 T8	G1 G9	O	FL grid
34	T9	P2/G10	O	
35 39	T10 T14	G11 G15	O	
40	T15	P24	O	FL segment
41	VDD2	VDD2	-	+5V
42	VP	VFDP	-	-30V
43 50	PC0 PC7	P23 P16	O	FL segment
51 58	PD0 PD7	P15 P8	O	
59 63	PE0 PE4	P7 P3	O	
64	PE5	P1	O	
65 68	P00 P03	LED5 LED2	O	LED ON output
69	P04	LED1	-	
70 72	P05 P07	-	-	---
73	VSS2	VSS2	-	GND
74	P10	DATA OUT	O	AF μ -COM. DATA OUT
75	P11	DATA IN	I	AF μ -COM. DATA IN
76	P12	CLK	O	AF μ -COM. communication CLK
77 80	P13 P16	LED6 LED9	O	LED ON output

LA2232M (IC3501 : AF ASSY)
(FOR XR-P350/MEXK/EA, MEXK/EB, NBXK AND MEZIXK/DI ONLY)

RDS Signal Demodulator

In addition to a 57 kHz band pass filter, an ARI-SK, DK signal discrimination function etc. are built in.

Block Diagram

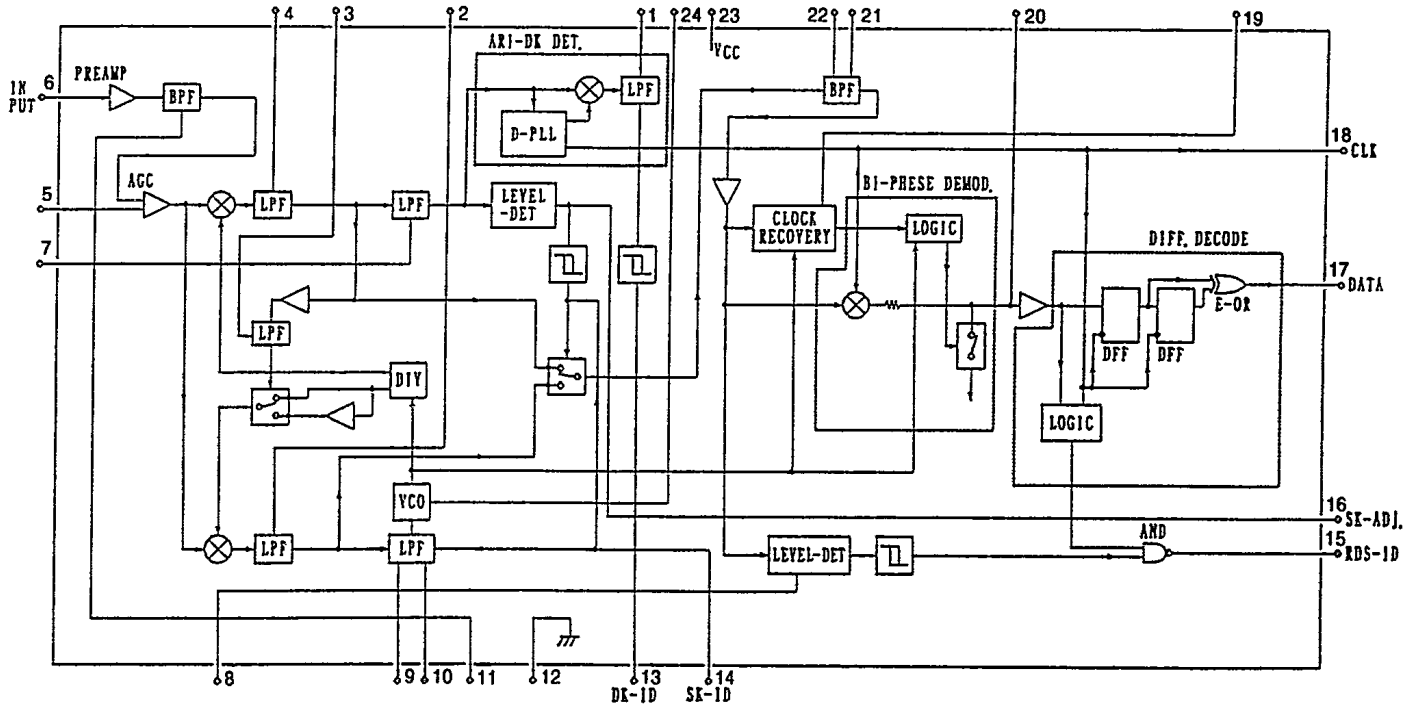

Pin Function

No.	Pin Name	I/O	Description
1	DK filter	-	Low pass filter for DK detection
2	Q-DET	-	Low pass filter for Quadrature detection
3	NC	-	OPEN, Low pass filter for remodulation comparison
4	I-DET	-	Low pass filter for Synchronous detection
5	BYPASS	-	Band pass filter check terminal
6	RDS input	I	RDS input terminal
7	SK filter	-	Low pass filter for SK detection
8	RDS filter	-	Low pass filter for RDS detection
9	PLL loop filter	-	Remodulation comparison method PLL loop filter
10			
11	Filter adjustment	-	Band pass filter (57kHz) adjustment terminal
12	GND	-	GND
13	ARI-DK display	O	ARI-DK display terminal

No.	Pin Name	I/O	Description
14	ARI-SK display	O	ARI-SK display terminal
15	RDS display	O	RDS display terminal
16	SK sensitivity adjustment	-	SK sensitivity adjustment terminal
17	DATA	O	DATA output terminal
18	CLK	O	Clock signal output terminal
19	D-PLL	-	Low pass filter for digital PLL for clock playback
20	INTEG/D	-	Capacitor for integration damp
21	B. E. F.	-	Band pass filter for RDS detection
22			
23	Vcc	-	Vcc +5V
24	VCO	-	456 kHz oscillation circuit

12. FOR XR – P350/MEXK/EB, MEZIXK/DI, NBXK, SD, S/DF, SL, YPW, XR – P250/MEXK/EA, MEXK/EB, MEZIXK/DI AND NBXK

12.1 CONTRAST OF MISCELLANEOUS PARTS

NOTES :

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω \rightarrow 56 \times 10¹ \rightarrow 561 RD1/8PM $\begin{matrix} \boxed{5} & \boxed{6} & \boxed{1} & J \end{matrix}$
 47k Ω \rightarrow 47 \times 10³ \rightarrow 473 RD1/4PS $\begin{matrix} \boxed{4} & \boxed{7} & \boxed{3} & J \end{matrix}$
 0.5 Ω \rightarrow 0R5 RN2H $\begin{matrix} \boxed{0} & \boxed{R} & \boxed{5} & K \end{matrix}$
 1 Ω \rightarrow 010 RS1P $\begin{matrix} \boxed{0} & \boxed{1} & \boxed{0} & K \end{matrix}$

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562 \times 10¹ \rightarrow 5621 RM1/4PC $\begin{matrix} \boxed{5} & \boxed{6} & \boxed{2} & \boxed{1} & F \end{matrix}$

LIST OF WHOLE PCB ASSEMBLIES

For XR – P350/MEXK/EB, NBXK, MEZIXK/DI, SD, SL, S/DF and YPW

Mark	Description	Part No.								Remarks
		XR – P350								
		MEXK/EA	MEXK/EB	NBXK	MEZIXK/DI	S/DF	SD	SL	YPW	
NSP	MAIN ASSY	AWK7089	AWK7089	AWK7089	AWK7090	AWK7088	AWK7088	AWK7109	AWK7110	
	└ AF ASSY	AWZ7336	AWZ7336	AWZ7336	AWZ7337	AWZ7335	AWZ7335	AWZ7335	AWZ7335	
	└ VR ASSY	AWZ7349	AWZ7349	AWZ7349	AWZ7350	AWZ7348	AWZ7348	AWZ7348	AWZ7348	
	└ SECONDARY ASSY	AWZ7362	AWZ7362	AWZ7362	AWZ7363	AWZ7361	AWZ7361	AWZ7361	AWZ7361	
	└ PRIMARY ASSY	AWZ7426	AWZ7426	AWZ7426	AWZ7427	AWZ7423	AWZ7423	AWZ7424	AWZ7425	
NSP	COMPLEX ASSY	AWM7116	AWM7116	AWM7116	AWM7117	AWM7112	AWM7115	AWM7115	AWM7115	
	└ DISPLAY ASSY	AWZ7388	AWZ7388	AWZ7388	AWZ7389	AWZ7384	AWZ7387	AWZ7387	AWZ7387	
NSP	└ H. P. ASSY	AWZ7391	AWZ7391	AWZ7391	AWZ7392	AWZ7391	AWZ7391	AWZ7391	AWZ7391	
NSP	└ MIC ASSY	AWZ7398	AWZ7398	AWZ7398	AWZ7398	AWZ7398	AWZ7398	AWZ7398	AWZ7398	
NSP	└ DECK SW ASSY	AWZ7405	AWZ7405	AWZ7405	AWZ7405	AWZ7405	AWZ7405	AWZ7405	AWZ7405	
	└ CD SW ASSY	AWZ7412	AWZ7412	AWZ7412	AWZ7412	AWZ7412	AWZ7412	AWZ7412	AWZ7412	
	TUNER MODULE	AXQ7013	AXQ7013	AXQ7013	AXQ7014	AXQ1016	AXQ1012	AXQ1012	AXQ1012	
	POWER MODULE F50	AXQ7218	AXQ7218	AXQ7218	AXQ7218	AXQ7018	AXQ7018	AXQ7018	AXQ7018	
	└ FRONT 50W ASSY	AWZ7561	AWZ7561	AWZ7561	AWZ7561	AWZ7517	AWZ7517	AWZ7517	AWZ7517	
	└ REGULATOR ASSY	AWZ7562	AWZ7562	AWZ7562	AWZ7562	AWZ7560	AWZ7560	AWZ7560	AWZ7560	
NSP	CD SLOT-IN MECHANISM	AXA7014	AXA7014	AXA7014	AXA7014	AXA7014	AXA7014	AXA7014	AXA7014	
NSP	└ SL MECHANISM BOARD ASSY	AWX7007	AWX7007	AWX7007	AWX7007	AWX7007	AWX7007	AWX7007	AWX7007	
NSP	└ └ SENSOR BOARD ASSY	AWZ7328	AWZ7328	AWZ7328	AWZ7328	AWZ7328	AWZ7328	AWZ7328	AWZ7328	
NSP	└ └ LED BOARD ASSY	AWZ7329	AWZ7329	AWZ7329	AWZ7329	AWZ7329	AWZ7329	AWZ7329	AWZ7329	
NSP	└ └ SW BOARD ASSY	AWZ7330	AWZ7330	AWZ7330	AWZ7330	AWZ7330	AWZ7330	AWZ7330	AWZ7330	
NSP	└ └ MOTOR BOARD ASSY	AWZ7331	AWZ7331	AWZ7331	AWZ7331	AWZ7331	AWZ7331	AWZ7331	AWZ7331	
NSP	└ SERVO MECHANISM ASSY	AXA7017	AXA7017	AXA7017	AXA7017	AXA7017	AXA7017	AXA7017	AXA7017	
NSP	SL └ MECHANISM BOARD ASSY	PWX1192	PWX1192	PWX1192	PWX1192	PWX1192	PWX1192	PWX1192	PWX1192	

For XR-P250/MEXK/EA, MEXK/EB, NBXK and MEZIXK/DI

Mark	Description	Part No.					Remarks
		XR-P350	XR-P250				
		MEXK/EA	MEXK/EA	MEXK/EB	NBXK	MEZIXK/DI	
NSP	MAIN ASSY	AWK7089	AWK7086	AWK7086	AWK7086	AWK7087	
	└ AF ASSY	AWZ7336	AWZ7333	AWZ7333	AWZ7333	AWZ7334	
	└ VR ASSY	AWZ7349	AWZ7346	AWZ7346	AWZ7346	AWZ7347	
	└ SECONDARY ASSY	AWZ7362	AWZ7359	AWZ7359	AWZ7359	AWZ7360	
	└ PRIMARY ASSY	AWZ7426	AWZ7421	AWZ7421	AWZ7421	AWZ7422	
NSP	COMPLEX ASSY	AWM7116	AWM7113	AWM7113	AWM7113	AWM7114	
	└ DISPLAY ASSY	AWZ7388	AWZ7385	AWZ7385	AWZ7385	AWZ7386	
NSP	└ H. P. ASSY	AWZ7391	AWZ7391	AWZ7391	AWZ7391	AWZ7392	
NSP	└ MIC ASSY	AWZ7398	Not used	Not used	Not used	Not used	
NSP	└ DECK SW ASSY	AWZ7405	AWZ7405	AWZ7405	AWZ7405	AWZ7405	
	└ CD SW ASSY	AWZ7412	AWZ7412	AWZ7412	AWZ7412	AWZ7412	
	TUNER MODULE	AXQ7013	AXQ3213	AXQ3213	AXQ3213	AXQ3214	
	POWER MODULE F50	AXQ7218	AXQ7218	AXQ7218	AXQ7218	AXQ7018	
	└ FRONT 50W ASSY	AWZ7561	AWZ7561	AWZ7561	AWZ7561	AWZ7561	
	└ REGULATOR ASSY	AWZ7562	AWZ7562	AWZ7562	AWZ7562	AWZ7562	
NSP	CD SLOT-IN MECHANISM	AXA7014	AXA7014	AXA7014	AXA7014	AXA7014	
NSP	└ SL MECHANISM BOARD ASSY	AWX7007	AWX7007	AWX7007	AWX7007	AWX7007	
NSP	└ └ SENSOR BOARD ASSY	AWZ7328	AWZ7328	AWZ7328	AWZ7328	AWZ7328	
NSP	└ └ LED BOARD ASSY	AWZ7329	AWZ7329	AWZ7329	AWZ7329	AWZ7329	
NSP	└ └ SW BOARD ASSY	AWZ7330	AWZ7330	AWZ7330	AWZ7330	AWZ7330	
NSP	└ └ MOTOR BOARD ASSY	AWZ7331	AWZ7331	AWZ7331	AWZ7331	AWZ7331	
NSP	└ SERVO MECHANISM ASSY SL	AXA7017	AXA7017	AXA7017	AXA7017	AXA7017	
NSP	└ └ MECHANISM BOARD ASSY	PWX1192	PWX1192	PWX1192	PWX1192	PWX1192	

CONTRAST OF MISCELLANEOUS PARTS

XR-P350/MEXK/EB, NBXK, MEZIXK/DI, SD, SL, S/DF, YPW, XR-P250/MEXK/EA, MEXK/EB, NBXK, MEZIXK/DI and XR-P350/MEXK/EA have the same construction except for the following:

● PACKING

Mark	No.	Description	Part No.							Remarks	
			XR-P350								
			MEXK/EA	MEXK/EB	NBXK	MEZIXK/DI	S/DF	SD	SL		YPW
	1	FM antenna assy	ADH1019	ADH1019	ADH1019	ADH1019	Not used	Not used	Not used	Not used	
	1	FM antenna	Not used	Not used	Not used	Not used	ADH1016	ADH1016	ADH1016	ADH1016	
	2	Operating instructions (French/Dutch)	ARC7024	Not used	Not used	Not used	Not used	Not used	Not used	Not used	
	2	Operating instructions (RDS) (French/Dutch)	ARC7026	Not used	Not used	Not used	Not used	Not used	Not used	Not used	
	2	Operating instructions (German/Italian)	ARC7036	Not used	Not used	ARC7036	Not used	Not used	Not used	Not used	
	2	Operating instructions (RDS) (German/Italian)	ARC7037	Not used	Not used	ARC7037	Not used	Not used	Not used	Not used	
	2	Operating instructions (English)	Not used	ARB7016	ARB7016	Not used	Not used	Not used	Not used	ARB7020	
	2	Operating instructions (RDS) (English)	Not used	ARB7017	ARB7017	Not used	Not used	Not used	Not used	Not used	
	2	Operating instructions (French/Spanish/Portuguese/Swedish)	Not used	ARC7040	Not used	Not used	Not used	Not used	Not used	Not used	
	2	Operating instructions (RDS) (French/Spanish/Portuguese/Swedish)	Not used	ARC7041	Not used	Not used	Not used	Not used	Not used	Not used	
	2	Operating instructions (English/Spanish/Chinese)	Not used	Not used	Not used	Not used	ARC7025	ARC7025	ARC7025	Not used	

Mark	No.	Description	Part No.								Remarks
			XR-P350								
			MEXK/EA	MEXK/EB	NBXX	MEZIXK/DI	S/DF	SD	SL	YPW	
NSP	7	Batteries (R03, AAA)	PEM1004	PEM1004	PEM1004	PEM1004	VEM-022	VEM-022	VEM-022	VEM-022	
	9	Front pad	AHA7039	AHA7039	AHA7039	AHA7039	AHA7034	AHA7034	AHA7034	AHA7034	
	10	Rear pad	AHA7040	AHA7040	AHA7040	AHA7040	AHA7035	AHA7035	AHA7035	AHA7035	
	11	Packing case	AHD7087	AHD7087	AHD7087	AHD7087	AHD7085	AHD7085	AHD7085	AHD7148	
	12	Sheet	AHG7001	AHG7001	AHG7001	AHG7001	AHG7003	AHG7003	AHG7003	AHG7003	
NSP	13	Vinyl bag	AHG1091	AHG1091	AHG1091	AHG1091	Not used	Not used	Not used	Not used	
	13	Vinyl bag	Not used	Not used	Not used	Not used	Z21-038	Z21-038	Z21-038	Z21-038	

Mark	No.	Description	Part No.					Remarks
			XR-P350		XR-P250			
			MEXK/EA	MEXK/EA	MEXK/EB	NBXX	MEZIXK/DI	
	2	Operating instructions (French/Dutch)	ARC7024	ARC7024	Not used	Not used	Not used	
	2	Operating instructions (German/Italian)	ARC7036	ARC7036	Not used	Not used	ARC7036	
	2	Operating instructions (English)	Not used	Not used	ARB7016	ARB7016	Not used	
	2	Operating instructions (French/Spanish/Portuguese/Swedish)	Not used	Not used	ARC7040	Not used	Not used	
	2	Operating instructions (RDS) (French/Dutch)	ARC7026	Not used	Not used	Not used	Not used	
	2	Operating instructions (RDS) (German/Italian)	ARC7037	Not used	Not used	Not used	Not used	
	11	Packing case	AHD7087	AHD7086	AHD7086	AHD7086	AHD7086	

● EXTERIOR (1/3)

Mark	No.	Description	Part No.								Remarks
			XR-P350								
			MEXK/EA	MEXK/EB	NBXX	MEZIXK/DI	S/DF	SD	SL	YPW	
NSP	1	Frame L	ANG7015	ANG7015	ANG7015	ANG7015	ANG7011	ANG7011	ANG7011	ANG7011	
NSP	2	Frame R	ANG7016	ANG7016	ANG7016	ANG7016	ANG7012	ANG7012	ANG7012	ANG7012	
	5	Mic volume knob	AAB7045	AAB7045	AAB7045	AAB7045	AAB7040	AAB7040	AAB7040	AAB7040	
	6	Volume knob	AAB7046	AAB7046	AAB7046	AAB7046	AAB7039	AAB7039	AAB7039	AAB7039	
	7	STA. Lens	AAK7118	AAK7118	AAK7118	AAK7118	AAK7099	AAK7099	AAK7099	AAK7099	
	9	Bonnet case	ANE7040	ANE7040	ANE7040	ANE7040	ANE7041	ANE7041	ANE7041	ANE7041	
	10	Display panel	AAK7119	AAK7119	AAK7119	AAK7119	AAK7095	AAK7095	AAK7095	AAK7095	
	13	Deck panel L	AAN7059	AAN7059	AAN7059	AAN7059	AAN7057	AAN7057	AAN7057	AAN7057	
	14	Deck panel R	AAN7060	AAN7060	AAN7060	AAN7060	AAN7058	AAN7058	AAN7058	AAN7058	
	15	Blind mold L	AMR7029	AMR7029	AMR7029	AMR7029	AMR7027	AMR7027	AMR7027	AMR7027	
	16	Blind mold R	AMR7030	AMR7030	AMR7030	AMR7030	AMR7028	AMR7028	AMR7028	AMR7028	

Mark	No.	Description	Part No.					Remarks
			XR-P350		XR-P250			
			MEXK/EA	MEXK/EA	MEXK/EB	NBXX	MEZIXK/DI	
	5	Mic volume knob	AAB7045	Not used	Not used	Not used	Not used	
	10	Display panel	AAK7119	AAK7095	AAK7095	AAK7095	AAK7095	

● EXTERIOR (2/3)

Mark	No.	Description	Part No.								Remarks
			XR-P350								
			MEXK/EA	MEXK/EB	NBXX	MEZIXK/DI	S/DF	SD	SL	YPW	
NSP	2	Chassis	ANA7015	ANA7015	ANA7015	ANA7015	ANA7013	ANA7013	ANA7013	ANA7013	
	6	AF assy	AWZ7336	AWZ7336	AWZ7336	AWZ7337	AWZ7335	AWZ7335	AWZ7335	AWZ7335	
	7	VR assy	AWZ7349	AWZ7349	AWZ7349	AWZ7350	AWZ7348	AWZ7348	AWZ7348	AWZ7348	
	8	Rear panel	ANC7161	ANC7161	ANC7162	ANC7163	ANC7133	ANC7133	ANC7155	ANC7154	
	9	Power module F50	AXQ7218	AXQ7218	AXQ7218	AXQ7218	AXQ7018	AXQ7018	AXQ7018	AXQ7018	
△	11	Power transformer (T1) (AC220-230V)	ATS7032	ATS7032	ATS7032	ATS7032	Not used	Not used	Not used	Not used	
△	11	Power transformer (T1) (AC110-115V/120-127V/ 220-230V/240V)	Not used	Not used	Not used	Not used	ATS7033	ATS7033	ATS7033	ATS7033	
△	13	Fuse (T1A, FU1)	REK-100	REK-100	REK-100	REK-100	Not used	Not used	Not used	REK-100	
	14	PRIMARY assy	AWZ7426	AWZ7426	AWZ7426	AWZ7427	AWZ7423	AWZ7423	AWZ7424	AWZ7425	
	15	SECONDARY assy	AWZ7362	AWZ7362	AWZ7362	AWZ7363	AWZ7361	AWZ7361	AWZ7361	AWZ7361	*4
	16	Strain relief	CM-22B	CM-22B	CM-22B	CM-22B	AEC-882	AEC-882	AEC-882	AEC-882	
△	17	AC power cord	ADG1138	ADG1138	ADG1148	ADG1138	PDG1013	PDG1013	PDG1003	ADG1123	
△		Fuse (5A)	Not used	Not used	AEK1046	Not used	Not used	Not used	Not used	Not used	*6
	18	Tuner module	AXQ7013	AXQ7013	AXQ7013	AXQ7014	AXQ1016	AXQ1012	AXQ1012	AXQ1012	
△		Voltage selector (S1)	Not used	Not used	Not used	Not used	AKX-507	AKX-507	AKX-507	Not used	*1
△		Fuse (T1A, FU2, FU3)	Not used	Not used	Not used	Not used	REK-100	REK-100	REK-100	Not used	*2
△		Ceramic capacitor	Not used	Not used	Not used	CKCYB102K50	Not used	Not used	Not used	Not used	*3

Mark	No.	Description	Part No.					Remarks
			XR-P350	XR-P250				
			MEXK/EA	MEXK/EA	MEXK/EB	NBXX	MEZIXK/DI	
	6	AF assy	AWZ7336	AWZ7333	AWZ7333	AWZ7333	AWZ7334	
	7	VR assy	AWZ7349	AWZ7346	AWZ7346	AWZ7346	AWZ7347	
	8	Rear panel	ANC7161	ANC7158	ANC7158	ANC7159	ANC7160	
	14	PRIMARY assy	AWZ7426	AWZ7421	AWZ7421	AWZ7421	AWZ7422	
	15	SECONDARY assy	AWZ7362	AWZ7359	AWZ7359	AWZ7359	AWZ7360	*5
△	17	AC power cord	ADG1138	ADG1138	ADG1138	ADG1148	ADG1138	
△		Fuse (5A)	Not used	Not used	Not used	AEK1046	Not used	*6
	18	Tuner module	AXQ7013	AXQ3213	AXQ3213	AXQ3213	AXQ3214	
△		Ceramic capacitor	Not used	Not used	Not used	Not used	CKCYB102K50	*3


Notes)

*1 - *3: Refer to Page 12.

*4: Although AWZ7363, AWZ7361 and AWZ7362 are different in part number, they consist of the same component.

*5: Although AWZ7359, AWZ7360 and AWZ7362 are different in part number, they consist of the same component.

*6: NBXX Only

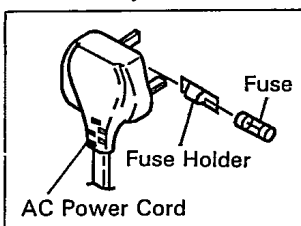

● **EXTERIOR (3/3)**

Mark	No.	Description	Part No.								Remarks
			XR - P350								
			MEXK/EA	MEXK/EB	NBXX	MEZIXK/DI	S/DF	SD	SL	YPW	
	1	Front panel	AMB7188	AMB7188	AMB7188	AMB7188	AMB7185	AMB7185	AMB7185	AMB7185	
	3	STA. lens	AAK7118	AAK7118	AAK7118	AAK7118	AAK7099	AAK7099	AAK7099	AAK7099	
	12	DISPLAY assy	AWZ7388	AWZ7388	AWZ7388	AWZ7389	AWZ7384	AWZ7387	AWZ7387	AWZ7387	
	20	H. P. assy	AWZ7391	AWZ7391	AWZ7391	AWZ7392	AWZ7391	AWZ7391	AWZ7391	AWZ7391	
	21	Door pocket L	AAN7051	AAN7051	AAN7051	AAN7051	AAN7041	AAN7041	AAN7041	AAN7041	
	23	Door spring L	ABH7032	ABH7032	ABH7032	ABH7032	ABH7040	ABH7040	ABH7040	ABH7040	
	24	Door pocket R	AAN7052	AAN7052	AAN7052	AAN7052	AAN7042	AAN7042	AAN7042	AAN7042	
	26	Door spring R	ABH7033	ABH7033	ABH7033	ABH7033	ABH7041	ABH7041	ABH7041	ABH7041	
	28	Eject arm L	AMR7024	AMR7024	AMR7024	AMR7024	AMR7020	AMR7020	AMR7020	AMR7020	
	30	Spring L	ABH7028	ABH7028	ABH7028	ABH7028	RBH1411	RBH1411	RBH1411	RBH1411	
	31	Eject arm R	AMR7025	AMR7025	AMR7025	AMR7025	AMR7021	AMR7021	AMR7021	AMR7021	
	33	Spring R	ABH7029	ABH7029	ABH7029	ABH7029	RBH1412	RBH1412	RBH1412	RBH1412	
	34	Shield	ANK7007	ANK7007	ANK7007	ANK7007	ANK7006	ANK7006	ANK7006	ANK7006	
	37	Connector assy 5P	ADX7045	ADX7045	ADX7045	ADX7045	RKP1582	RKP1582	RKP1582	RKP1582	
	38	Connector assy 3P	ADX7046	ADX7046	ADX7046	ADX7046	RKP1583	RKP1583	RKP1583	RKP1583	
	39	Coupling mold	AMR7026	AMR7026	AMR7026	AMR7026	AMR7019	AMR7019	AMR7019	AMR7019	

Mark	No.	Description	Part No.					Remarks
			XR - P350	XR - P250				
			MEXK/EA	MEXK/EA	MEXK/EB	NBXX	MEZIXK/DI	
	1	Front panel	AMB7188	AMB7187	AMB7187	AMB7187	AMB7187	
	8	Power button	AAD7119	AAD7155	AAD7155	AAD7155	AAD7155	
	12	DISPLAY assy	AWZ7388	AWZ7385	AWZ7385	AWZ7385	AWZ7386	
NSP	18	MIC assy	AWZ7398	Not used	Not used	Not used	Not used	
	19	Mic holder	AMR7022	Not used	Not used	Not used	Not used	
NSP	20	H.P. assy	AWZ7391	AWZ7391	AWZ7391	AWZ7391	AWZ7392	

● **POWER MODULE F50**

AXQ7018 and AXQ7218 have the same construction except for the following:

Mark	No.	Description	Part No.		Remarks
			AXQ7218	AXQ7018	
	1	Front 50W assy	AWZ7561	AWZ7517	*1
	2	Regulator assy	AWZ7562	AWZ7560	
	3	Heat sink	ANH7009	ANH7007	
	6	Mold A	AMR7005	AMR2594	
	7	Mold B	AMR7006	AMR2595	
	11	DC fan motor	AXM7003	AXM1019	

Note *1: Although AWZ7517 and AWZ7561 are different in part number, they have the same service parts.

CONTRAST OF PCB ASSEMBLIES

AF ASSY

AWZ7337, AWZ7335, AWZ7333, AWZ7334 and AWZ7336 have the same construction except for the following :

Mark	Symbol & Description	Part No.					Remarks
		AWZ7336	AWZ7337	AWZ7335	AWZ7333	AWZ7334	
IC3501 IC4101, IC4301, IC8401 Q3501 Q3502 Q3503		LM2232M NJM4558M-D 2SA1048 DTC143ES 2SC2458	LM2232M NJM4558M-D 2SA1048 DTC143ES 2SC2458	Not used NJM4558MD Not used Not used Not used	Not used NJM4558M-D Not used Not used Not used	Not used NJM4558M-D Not used Not used Not used	
Q1040 Q1041 D1023 L1301-L1304 C1305, C1306		2SA1515 DTC143ES MTZJ33B/C Not used Not used	2SA1515 DTC143ES MTZJ33B/C ATH-133 CQMXA103J100	Not used Not used MTZJ33B Not used Not used	2SA1515 DTC143ES MTZJ33B/C Not used Not used	2SA1515 DTC143ES MTZJ33B/C ATH-133 CQMXA103J100	
C1307-C1310 C2103, C2104 C3501, C3507 C3503, C3510, C3512 C3504		Not used Not used CKSQYF103Z50 CEAS4R7M50 CEAS220M50	CKSQYF104Z50 CCSQL221J50 CKSQYF103Z50 CEAS4R7M50 CEAS220M50	Not used Not used Not used Not used Not used	Not used Not used Not used Not used Not used	CKSQYF104Z50 CCSQL221J50 Not used Not used Not used	
C3505, C3506 C3508 C3509, C3511 C3513 C3514, C3515		CKSQYB332K50 CCSQCH271J50 CEAS100M50 CKSQYF223Z50 CKSQYF333Z50	CKSQYB332K50 CCSQCH271J50 CEAS100M50 CKSQYF223Z50 CKSQYF333Z50	Not used Not used Not used Not used Not used	Not used Not used Not used Not used Not used	Not used Not used Not used Not used Not used	
C3516 C4191, C4192 VR3501 (4.7k) R1040 R1041		CKSQYB682K50 CCSQCH470J50 PCP1028 RS1/10S103J RS1/6PM222J	CKSQYB682K50 CCSQCH470J50 PCP1028 RS1/10S103J RS1/6PM222J	Not used Not used Not used Not used Not used	Not used CCSQCH470J50 Not used RS1/10S103J RS1/6PM222J	Not used CCSQCH470J50 Not used RS1/10S103J RS1/6PM222J	
R1103, R1109, R1171, R3507, R3509, R3551 R1112 R1305, R1306 R1307, R1308 R3501		RS1/10S102J Not used Not used Not used RS1/10S473J	RS1/10S102J Not used RS1/10S100J RD1/2PMFL101J RS1/10S473J	Not used RS1/10S563J Not used Not used Not used	Not used RS1/10S563J Not used Not used Not used	Not used RS1/10S563J RS1/10S100J RS1/2PMFL101J Not used	
R3502 R3504 R3505 R3506 R3508		RS1/6PM102J RS1/10S101J RS1/10S221J RS1/10S472J RS1/10S564J	RS1/6PM102J RS1/10S101J RS1/10S221J RS1/10S472J RS1/10S564J	Not used Not used Not used Not used Not used	Not used Not used Not used Not used Not used	Not used Not used Not used Not used Not used	
R3510 R3511 R3512, R3514 R3513 R3520 R3552		RS1/10S562J RS1/10S332J RS1/10S103J RS1/10S223J RS1/6PM563J RS1/10S000J	RS1/10S562J RS1/10S332J RS1/10S103J RS1/10S223J RS1/6PM563J RS1/10S000J	Not used Not used Not used Not used Not used Not used	Not used Not used Not used Not used Not used Not used	Not used Not used Not used Not used Not used Not used	
X3501 (456kHz) CN2102 Pin jack (2P) CN7 CONNECTOR 4P		ASS7001 AKB1164 KPE4	ASS7001 AKB1171 KPE4	Not used AKB1164 KPE4	Not used Not used Not used	Not used Not used Not used	

VR ASSY

AWZ7350, AWZ7348, AWZ7346, AWZ7347 and AWZ7349 have the same construction except for the following :

Mark	Symbol & Description	Part No.					Remarks
		AWZ7349	AWZ7350	AWZ7348	AWZ7346	AWZ7347	
	IC1501 C1507, C1508 C1555, C1556 R1505, R1506	NJM4558M-D Not used CCSQSL221J50 RS1/10S474J	NJM4558M-D CCSQSL470J50 CCSQSL221J50 RS1/10S474J	NJM4558MD Not used Not used RS1/10S104J	NJM4558M-D Not used CCSQSL221J50 RS1/10S474J	NJM4558M-D CCSQSL470J50 CCSQSL221J50 RS1/10S474J	

PRIMARY ASSY

AWZ7427, AWZ7423, AWZ7424, AWZ7425, AWZ7421, AWZ7422 and AWZ7426 have the same construction except for the following :

Mark	Symbol & Description	Part No.							Remarks
		AWZ7426	AWZ7427	AWZ7423	AWZ7424	AWZ7425	AWZ7421	AWZ7422	
NSP△ NSP△ NSP△	C102 L101 H1101-H1104 Fuse clip H1105, H1106 Fuse clip Board in clip	Not used Not used Not used AKR1003 Not used	ACG1003 ATF-151 Not used AKR1003 Not used	Not used Not used AKR1003 Not used ADX1980	Not used Not used AKR1003 Not used ADX1980	Not used Not used AKR1003 Not used	Not used Not used AKR1003 Not used	ACG1003 ATF-151 Not used AKR1003 Not used	

SECONDARY ASSY

Although AWZ7363, AWZ7361, AWZ7360, AWZ7359 and AWZ7362 are different in part number, they consist of the same components.

DISPLAY ASSY

AWZ7389, AWZ7387, AWZ7384, AWZ7385, AWZ7386 and AWZ7388 have the same construction except for the following :

Mark	Symbol & Description	Part No.						Remarks
		AWZ7388	AWZ7389	AWZ7387	AWZ7384	AWZ7385	AWZ7386	
	D1801 D1810, D1819 D1812, D1817 D1811, D1818	1SS254 1SS254 Not used Not used	1SS254 1SS254 Not used Not used	1SS254 Not used 1SS254 Not used	1SS254 Not used Not used 1SS254	Not used Not used Not used Not used	Not used Not used Not used Not used	

H. P. ASSY

AWZ7392 and AWZ7391 have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ7391	AWZ7392	
	C1201, C1202	Not used	CCSQCH101J50	

REGULATOR ASSY

AWZ7560 and AWZ7562 have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ7562	AWZ7560	
	C7697	CKCYB103K50	CKDYB103K50	

TUNER MODULE (AXQ3213 and AXQ1012))

AXQ3213, AXQ1012 and AXQ7013 have the same construction except for the following :

Mark	Symbol & Description	Part No.			Remarks
		AXQ7013	AXQ3213	AXQ1012	
	C6202 (1 μ F/16V)	Not used	Not used	ACG1051	
	C6230	CKSQYB273K50	CKSQYB273K50	CKSQYB333K50	
	C6232	CKSYB273K50	CKSYB273K50	CKSYB333K50	
	C6251	CKSYB822K50	CKSYB822K50	CKSYB472K50	
	C6252	CKSQYB822K50	CKSQYB822K50	CKSQYB472K50	
	C6268	Not used	Not used	CCSQCH101J50	
	C6269	CCSQCH101J50	CCSQCH101J50	Not used	
	C6270 (1 μ F/16V)	ACG1051	ACG1051	Not used	
	R6274, R6277	RS1/10S000J	Not used	Not used	
	R6288	RS1/10S000J	RS1/10S000J	RS1/10S471J	
	BN6201 Terminal 4P	Not used	Not used	AKA1016	
	BN6201 Terminal 2P with PAL	AKA1017	AKA1017	Not used	

Note: For schematic and PCB diagram, refer to page 34.

TUNER MODULE (AXQ3214)

AXQ3214 and AXQ7014 have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AXQ7014	AXQ3214	
	R6274, R6277	RS1/10S000J	Not used	

Notes:

- For AXQ7014, refer to "■ PCB PARTS LIST".
- For schematic and PCB diagram, refer to page 37.

PCB PARTS LIST

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
TUNER MODULE (AXQ7014)							
SEMICONDUCTORS							
	IC6201		LA1836M		C6213		CKSQYB223K50
	IC6202		LM7001J		C6230		CKSQYB273K50
	Q6102		2SC2223		C6228		CKSQYB472K50
	Q6203		2SC2235		C6209, C6237, C6267		CKSQYB473K50
	Q6202, Q6218		2SC2712		C6251, C6252		CKSQYB562K50
	Q6103, Q6214		2SC2714		C6212, C6218		CKSQYF103Z50
	Q6201		2SK208		C6220, C6226, C6239, C6242		CKSQYF223Z50
	Q6104, Q6105		2SK302		C6255, C6256		CKSQYF223Z50
	Q6101		3SK194		C6235		CKSQYF224Z25
	Q6204		XDA124EK		C6225, C6241		CKSQYF473Z50
	Q6217		XDC124EK		C6123		CKSYB103K50
	D6101-D6104		1SV228		C6232		CKSYB273K50
					C6223		CKSYF103Z50
					C6263		CKSYF473Z50
COILS AND FILTERS				RESISTORS			
	L6106		ATC1003		VR6201 (10K)		ACP1056
	L6105		ATC1015		VR6202		VRTB6VS223
	L6101		ATC1016		R6299, R6300		RD1/6PM102J
	L6102		ATC1017		R6115, R6119, R6123, R6127, R6129		RS1 8S000J
	L6103		ATC1018		R6268-R6271, R6275, R6276, R6278		RS1/8S000J
	L6104		ATC1019		R6283, R6284, R6293, R6294, R6297		RS1 8S000J
	L6207 (10.7MHZ)		ATE1013		R6302, R6303		RS1 8S000J
	F6204		ATF-107		R6243, R6244		RS1/8S101J
	F6203		ATF-119		R6211, R6239		RS1/8S103J
	F6205		ATF1152		R6237		RS1 8S122J
	F6202 (450KHZ)		ATF1155		R6209		RS1 8S221J
	L6107 (2.2UH)		ATH1043		R6112		RS1 8S473J
	L6202, L6203, L6208		LCTA2R2J3225		Other Resistors		RS1/10S□□□□
	L6205		LCTA680J3225	OTHERS			
CAPACITORS					X6203 (7.200MHZ)		ASS1042
	C6204, C6234, C6236, C6269 (1μF/16V)		ACG1051		X6201 (456KHZ)		ASS1066
	C6120		CCSCH060D50		X6202 (450KHZ)		ATF1027
	C6229		CCSCH102J50		BN6201 2P ANTENNA TERMINAL WITH PAL AM RF TUNING BLOCK		AKA1017
	C6111, C6122		CCSQCH010C50				AXX1041
	C6112		CCSQCH020C50	TUNER MODULE (AXQ1016)			
	C6118		CCSQCH080D50	SEMICONDUCTORS			
	C6113		CCSQCH101J50		IC6101		LA1836M
	C6116, C6208, C6221, C6222		CCSQCH150J50		IC6102		LM7001J
	C6117		CCSQCH330J50		IC6103		MC13020M
	C6272		CCSQSL390J50		Q6117		2SA1162
	C6105		CCSQSL471J50		Q6102		2SC2223
	C6101		CCSQTH110J50		Q6113		2SC2235
	C6119		CCSQTH150J50		Q6110, Q6115, Q6116, Q6121-Q6124		2SC2712
	C6109		CCSQTH270J50		Q6103, Q6107, Q6119, Q6120		2SC2714
	C6107, C6110		CCSQTH300J50		Q6111		2SK208
	C6106		CCSQTH330J50		Q6104, Q6105		2SK302
	C6261		CEAS010M50		Q6101		3SK194
	C6224, C6231, C6233, C6246, C6262		CEAS100M50		Q6106, Q6109		XDA124EK
	C6216, C6217		CEAS330M16		Q6112, Q6118		XDC124EK
	C6219		CEAS470M10		Q6108, Q6114		XDC143EK
	C6243-C6245		CEAS470M16		D6106		1SS181
	C6227		CEAS470M25		D6101, D6102, D6104		1SV228
	C6238, C6248		CEJA100M16	COILS AND FILTERS			
	C6249, C6250		CEJA4R7M35		T6102		ATB1010
	C6215		CFTXA103J50		L6106		ATC1008
	C6214		CFTXA224J50		L6101		ATC1025
	C6115, C6125, C6126, C6207		CKSQYB102K50		L6102		ATC1026
	C6102, C6114, C6121, C6124, C6210		CKSQYB103K50		L6103		ATC1027
	C6264		CKSQYB103K50				
	C6247		CKSQYB122K50				

Mark	No.	Description	Parts No.
	L6104		ATC1028
	T6101		ATE-063
	L6109		ATE1013
	F6102		ATF-107
	F6101		ATF-119
	F6103		ATF1144
	L6107		ATH1043
	L6108, L6110		LCTA2R2J3225

CAPACITORS

C6191-C6194	ACG1050
C6129, C6153, C6154, C6199, C6200 (1 μ F/16V)	ACG1051
C6120	CCSCH150J50
C6111	CCSQCH010C50
C6112, C6122	CCSQCH020C50
C6113	CCSQCH101J50
C6157, C6177	CCSQCH102J50
C6141, C6142	CCSQCH150J50
C6183	CCSQCH470J50
C6119	CCSQUJ060D50
C6118	CCSQUJ080D50
C6101, C6116	CCSQUJ150J50
C6106	CCSQUJ270J50
C6107, C6117	CCSQUJ330J50
C6185, C6186	CEANLR47M50
C6165, C6166, C6190	CEAS010M50
C6137, C6145, C6169, C6205	CEAS100M50
C6164, C6197, C6198	CEAS101M25
C6179, C6188	CEAS2R2M50
C6206	CEAS330M16
C6140, C6155, C6162, C6163, C6178	CEAS470M25
C6187	CEAS470M25
C6189	CEAS4R7M50
C6160, C6161, C6176	CEJA100M16
C6181	CEJA470M16
C6135	CFTXA103J50
C6134	CFTXA394J50
C6132	CKCYX473M16
C6105, C6115, C6125, C6126, C6128	CKSQYB102K50
C6167, C6168	CKSQYB102K50
C6102, C6103, C6114, C6121, C6124	CKSQYB103K50
C6136, C6139, C6144, C6170, C6172	CKSQYB103K50
C6182, C6184	CKSQYB103K50
C6195, C6196	CKSQYB222K50
C6131, C6143	CKSQYB223K50
C6173-C6175, C6180	CKSQYB332K50
C6158, C6159	CKSQYB333K50
C6156	CKSQYB472K50
C6201	CKSQYF104Z50
C6152	CKSQYF224Z25
C6138, C6146-C6150, C6171	CKSQYF473Z50
C6123	CKSYB103K50
C6207	CKSYF103Z50

RESISTORS

VR6101 (10k)	ACP1043
VR6102 (22k)	ACP1044
R6115, R6119, R6123, R6127	RS1/8S000J
R6217, R6218	RS1/8S000J
R6137	RS1/8S331J
R6112	RS1/8S473J
R6141	RS1/8S563J
Other Resistors	RS1/10S□□□J

Mark	No.	Description	Parts No.
OTHERS			
	BN6101	TERMINAL 4-P	AKA1016
	X6102	CRYSTAL RESONATOR	ASS1042
	X6101	CRYSTAL RESONATOR	ASS1066
	X6104	CERAMIC RESONATOR	ASS1086
	X6103	CERAMIC RESONATOR	ATF1027
		AM RF TUNING BLOCK	AXX1044