


# Service Manual

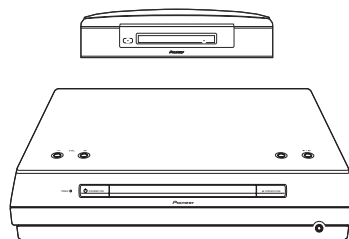

XV-DV99

ORDER NO.  
**RRV2792**

DVD/CD TUNER

# XV-DV99

# XV-DV990

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Regional restriction codes (Region No.)	Remarks
XV-DV99	ZYXJ, ZVXJ	DC power supplied from other system component	2	
XV-DV990	ZYXJ, ZVXJ	DC power supplied from other system component	2	

**This product is a system(s) component.**

**This product does not function properly when independent ; to avoid malfunctions, be sure to connect it to the prescribed system component(s), otherwise damage may result.**

**Please connect it to the POWERED SUBWOOFER S-DV99SW/S-DV990SW, for adjustment and operation inspection.**

Component	System	Service Manual	Remarks
DVD/CD TUNER	XV-DV99	RRV2792	This manual
SPEAKER SYSTEM	S-DV99	RRV2807	
POWERED SUBWOOFER	S-DV99SW		
SPEAKER SYSTEM	S-DV99ST		

Component	System	Service Manual	Remarks
DVD/CD TUNER	XV-DV990	RRV2792	This manual
POWERED SUBWOOFER	S-DV990SW	RRV2806	
SPEAKER SYSTEM	S-DV990ST	RRV2811	



For details, refer to "Important symbols for good services" .

# SAFETY INFORMATION



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.


## WARNING !

THE AEL (ACCESSIBLE EMISSION LEVEL) OF THE LASER POWER OUTPUT IS LESS THAN CLASS 1 BUT THE LASER COMPONENT IS CAPABLE OF EMITTING RADIATION EXCEEDING THE LIMIT FOR CLASS 1.  
A SPECIALLY INSTRUCTED PERSON SHOULD DO SERVICING OPERATION OF THE APPARATUS.


## LASER DIODE CHARACTERISTICS

FOR DVD : MAXIMUM OUTPUT POWER : 5 mW  
WAVELENGTH : 650 nm  
FOR CD : MAXIMUM OUTPUT POWER : 7 mW  
WAVELENGTH : 780 nm


## LABEL CHECK

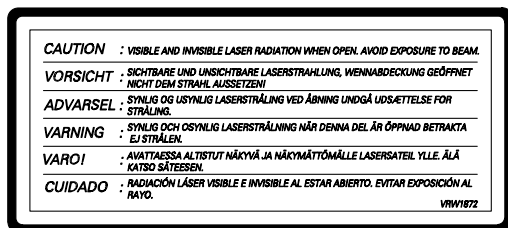

VRW1872

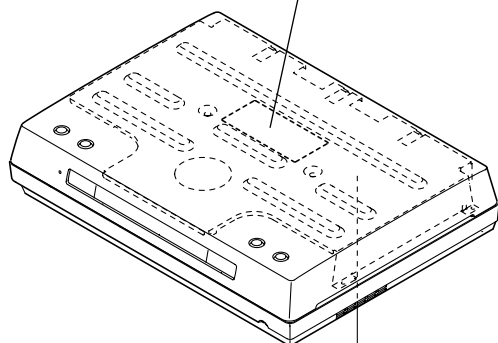

Name Label

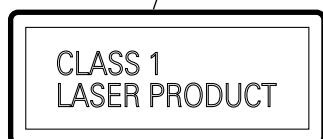

## Additional Laser Caution

1. Laser Interlock Mechanism
  - Loading switch (S101 on the LOAB Assy) is used for interlock mechanism of the laser.  
When this switch turned ON in SW2 (XCLOSE) side (OPEN signal is 0V and XCLOSE signal is 3.5V), a laser becomes the status which can completely oscillation.  
Furthermore, the laser completely oscillates in the disc judgment and disc playback.  
When player is power ON state and laser diode is not completely oscillating, 780nm laser diode is always oscillating by half power.
  - Laser diode is driving with Q201 (650nm LD) and Q211 (780nm LD) on the DVDM Assy.  
Therefore, when short-circuit between the emitter and collector of these transistors or the base voltage is supplied for transistors turn on, the laser oscillates. (failure mode)
  - In the test mode \*, there is the mode that the laser oscillates except for the disc judgment and playback. LD ON mode in the test mode oscillates with the laser forcibly.  
The interlock mechanism mentioned above becomes invalid in this mode.
2. When the cover is open, close viewing through the objective lens with the naked eye will cause exposure to the laser beam.

\* : See page 74.

### [ Important symbols for good services ]

In this manual, the symbols shown-below indicate that adjustments, settings or cleaning should be made securely. When you find the procedures bearing any of the symbols, be sure to fulfill them:

#### 1. Product safety



You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

#### 2. Adjustments



To keep the original performances of the product, optimum adjustments or specification confirmation is indispensable. In accordance with the procedures or instructions described in this manual, adjustments should be performed.

#### 3. Cleaning



For optical pickups, tape-deck heads, lenses and mirrors used in projection monitors, and other parts requiring cleaning, proper cleaning should be performed to restore their performances.

#### 4. Shipping mode and shipping screws



To protect the product from damages or failures that may be caused during transit, the shipping mode should be set or the shipping screws should be installed before shipping out in accordance with this manual, if necessary.

#### 5. Lubricants, glues, and replacement parts



Appropriately applying grease or glue can maintain the product performances. But improper lubrication or applying glue may lead to failures or troubles in the product. By following the instructions in this manual, be sure to apply the prescribed grease or glue to proper portions by the appropriate amount. For replacement parts or tools, the prescribed ones should be used.

**\* When the FFC cable between the VIDEO ASSY-CN8301 and DVDM ASSY-CN 943 is off from the connector and then the power is turned on, the parts below on the DVDM ASSY may be destroyed.**

**Be sure to take care when diagnosing the ASSYS. Refer to P.106.**

IC851	DSD1791DBR (AUDIO DAC)
IC861, IC871	DSD1702EG (AUDIO DAC)

# CONTENTS

	SAFETY INFORMATION .....	2
A	1. SPECIFICATIONS .....	5
	2. EXPLODED VIEWS AND PARTS LIST .....	8
	2.1 PACKING .....	8
	2.2 EXTERIOR SECTION.....	10
	2.3 LOADING MECHA ASSY .....	12
	2.4 TRAVERSE MECHA ASSY-S .....	14
	2.5 DISPLAY UNIT .....	15
	3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM .....	16
	3.1 BLOCK DIAGRAM .....	16
	3.2 LOAB ASSY and OVERALL WIRING DIAGRAM.....	18
	3.3 DVDM ASSY(1/4).....	20
	3.4 DVDM ASSY(2/4).....	22
B	3.5 DVDM ASSY(3/4).....	24
	3.6 DVDM ASSY(4/4).....	26
	3.7 VIDEO and DSP TRADE ASSYS.....	28
	3.8 DSP ASSY(1/2).....	30
	3.9 DSP ASSY(2/2).....	32
	3.10 FM/AM TUNER MODULE .....	34
	3.11 TATRADE and CONTROL(1/3) ASSYS .....	36
	3.12 CONTROL(2/3) and HP ASSYS .....	38
	3.13 CONTROL ASSY(3/3).....	40
	3.14 LCDCONT, CONNECT, KEY RTOP, KEY R, KEY L and KEY LTOP ASSYS .....	42
	3.15 WAVEFORMS .....	44
	4. PCB CONNECTION DIAGRAM .....	45
C	4.1 LOAB ASSY .....	45
	4.2 DVDM ASSY .....	46
	4.3 VIDEO and DSP TRADE ASSYS.....	48
	4.4 DSP ASSY .....	52
	4.5 FM/AM TUNER MODULE .....	54
	4.6 KEY RTOP, KEY R, KEY L and KEY LTOP ASSYS.....	55
	4.7 TXTRADE, CONTROL and HP ASSYS .....	56
	4.8 LCDCONT and CONNECT ASSYS.....	60
	5. PCB PARTS LIST .....	62
	6. ADJUSTMENT .....	68
	6.1 TUNER SECTION.....	68
	6.2 ADJUSTMENT ITEMS AND LOCATION .....	69
D	6.3 JIGS AND MEASURING INSTRUMENTS.....	69
	6.4 NECESSARY ADJUSTMENT POINTS .....	70
	6.5 TEST MODE .....	71
	6.6 MECHANISM ADJUSTMENT .....	72
	7. GENERAL INFORMATION .....	74
	7.1 DIAGNOSIS .....	74
	7.1.1 TEST MODE .....	74
	7.1.2 DISPLAY SPECIFICATIONS OF THE TEST MODE .....	76
	7.1.3 FUNCTIONAL SPECIFICATION OF THE SHORTCUT KEY .....	77
	7.1.4 SPECIFICATION OF MODEL INFORMATION .....	78
	7.1.5 FUNCTIONAL SPECIFICATION OF THE SERVICE MODE.....	79
	7.1.6 MECHANICAL ERROR HISTORY .....	80
E	7.1.7 ID NUMBER AND DATA SETTING .....	85
	7.1.8 TROUBLE SHOOTING .....	88
	7.1.9 DSP TROUBLE SHOOTING .....	91
	7.1.10 SEQUENCE AFTER POWER ON .....	95
	7.1.11 SINGLE OPERATION METHOD.....	100
	7.1.12 PROTECTION CIRCUIT .....	101
	7.1.13 DISASSEMBLY .....	105
	7.2 IC .....	114
	7.3 DISC/CONTENT FORMAT .....	137
	7.4 CLEANING.....	139
F	8. PANEL FACILITIES .....	140

# 1. SPECIFICATIONS

## Amplifier Section

Continuous Power (RMS) . . . . 75W / channel  
 . . . . . (1 kHz, THD 10%, 6Ω)

## Disc section

Digital audio characteristics . . . . . DVD fs: 96 kHz, 24-bit  
 Type . . . . . DVD system, Video CD system and Compact Disc digital audio system  
 Frequency response  
   48 kHz sampling . . . . . 4 Hz – 22 kHz  
   96 kHz sampling . . . . . 4 Hz – 44 kHz  
   192 kHz sampling . . . . . 4 Hz – 88 kHz  
 S/N ratio . . . . . 108dB  
 Dynamic range . . . . . 95dB  
 Total harmonic distortion . . . . . 0.005 %  
 Wow and Flutter . . . . . Limit of measurement  
   (±0.001 % W.PEAK) or less (JEITA)

## FM tuner section

Frequency Range . . . . . 87.5 - 108MHz  
 Antenna . . . . . 75Ω, unbalanced

## AM tuner section

Frequency Range . . . . . 531 kHz to 1,602 kHz  
 Antenna . . . . . Loop antenna

## Miscellaneous

Power Requirements  
   European model . . AC 220 - 230 V, 50/60 Hz  
   U.K. model . . . . . AC 230V, 50/60 Hz  
 Power Consumption . . . . . 163 W  
 Power Consumption in standby mode . . . . . 0.48 W  
 Dimensions:  
 DVD/CD Tuner . .360 (W) x 74 (H) x 270 (D) mm  
 Display Unit . . . . 274 (W) x 44 (H) x 35 (D) mm  
 Weight:  
 DVD/CD Tuner . . . . . 3.2 kg  
 Display Unit . . . . . 0.2 kg

## Accessories

Operating Instructions . . . . . 1  
 Setup guide . . . . . 1  
 Display unit . . . . . 1  
 Remote control unit . . . . . 1  
 Power cord . . . . . 1  
 Video Cord (yellow plugs) . . . . . 1  
 Display cable (gray plugs) . . . . . 1  
 Control cable A (blue plugs) . . . . . 1  
 Control cable B (black plugs) . . . . . 1  
 FM antenna . . . . . 1  
 AM loop antenna . . . . . 1  
 Dry cell batteries (AA/R6) . . . . . 2  
 Speaker cords (5 m) . . . . . 3  
 Speaker cords (10 m) . . . . . 2  
 Non-skid pads (center speaker) . . . . . 3  
 Non-skid pads (subwoofer) . . . . . 4  
 Speaker stands . . . . . 4  
 Warranty Card . . . . . 1

## Satellite Speaker System (S-DV99ST)

Type Sealed, antimagnetic  
 Speaker . . . . . 8.7 cm (cone type)  
   . . . . . 5.2 cm (cone type)  
 Nominal impedance . . . . . 6Ω  
 Frequency range . . . . . 80 – 20,000 Hz  
 Max. input . . . . . 75 W (JEITA)  
 Front / Surround speakers  
 Dimensions . . . . 110 (W) x 59 (D) x 284 (H) cm  
 Weight . . . . . 0.7 kg  
 Center speaker  
 Dimensions . . . . 284 (W) x 58 (D) x 110 (H) cm  
 Weight . . . . . 0.7 kg

## Satellite Speaker System (S-DV990ST)

Type . . . . . Flat panel type bookshelf  
 Speaker  
   Exciter . . . . . 2.5 cm exciter x 3  
   Tweeter . . . . . 2.6 cm (cone type)  
 Nominal impedance . . . . . 6Ω  
 Frequency range . . . . . 100 – 35,000 Hz  
 Max. input . . . . . 75 W (JEITA)  
 Front / Surround speakers  
 Dimensions . . . . 120 (W) x 30 (D) x 450 (H) cm  
 Weight . . . . . 0.9 kg  
 Center speaker  
 Dimensions . . . . 420 (W) x 32 (D) x 120 (H) cm  
 Weight . . . . . 0.9 kg

## Powered subwoofer (S-DV99SW S-DV990SW)

Type . . . . . Bass reflex floor type, antimagnetic  
 Speaker . . . . . 18 cm (cone type)  
 Nominal impedance . . . . . 6Ω  
 Frequency range . . . . . 28 – 250 Hz  
 Max. input . . . . . 75 W (JEITA)  
 Dimensions . . . . 192 (W) x 436 (D) x 395 (H) cm  
 Weight . . . . . 12.5 kg


**Note**

- Specifications and design subject to possible modification without notice, due to improvements.


This product includes FontAvenue® fonts licenced by NEC corporation. FontAvenue is a registered trademark of NEC Corporation.

## accessories

Remote control unit (AXD7368)

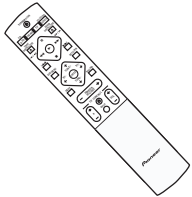


Dry cell batteries (sizeAA/R6P) x2



Display unit (AXX7163)




AM loop antenna (ATB7009)

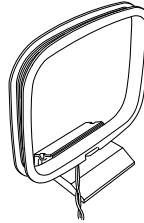

FM antenna (ADH7030)



Control cable A (ADE7063) L=3m




Blue plugs

Control cable B (ADE7078) L=3m



Black plugs

Display cable (ADE7077) L=1.5m




Gray plugs

Video cord (VDE1065)




Yellow plugs

• Power cord (ZYXJ : ADG1154)



• Power cord (ZVXJ : ADG1156)





5



6



7



8



A

B

C

D

E

F



5



6

XV-DV99



7



8


7



# 2. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
  - The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
  - Screws adjacent to  $\blacktriangledown$  mark on product are used for disassembly.
  - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

## 2.1 PACKING

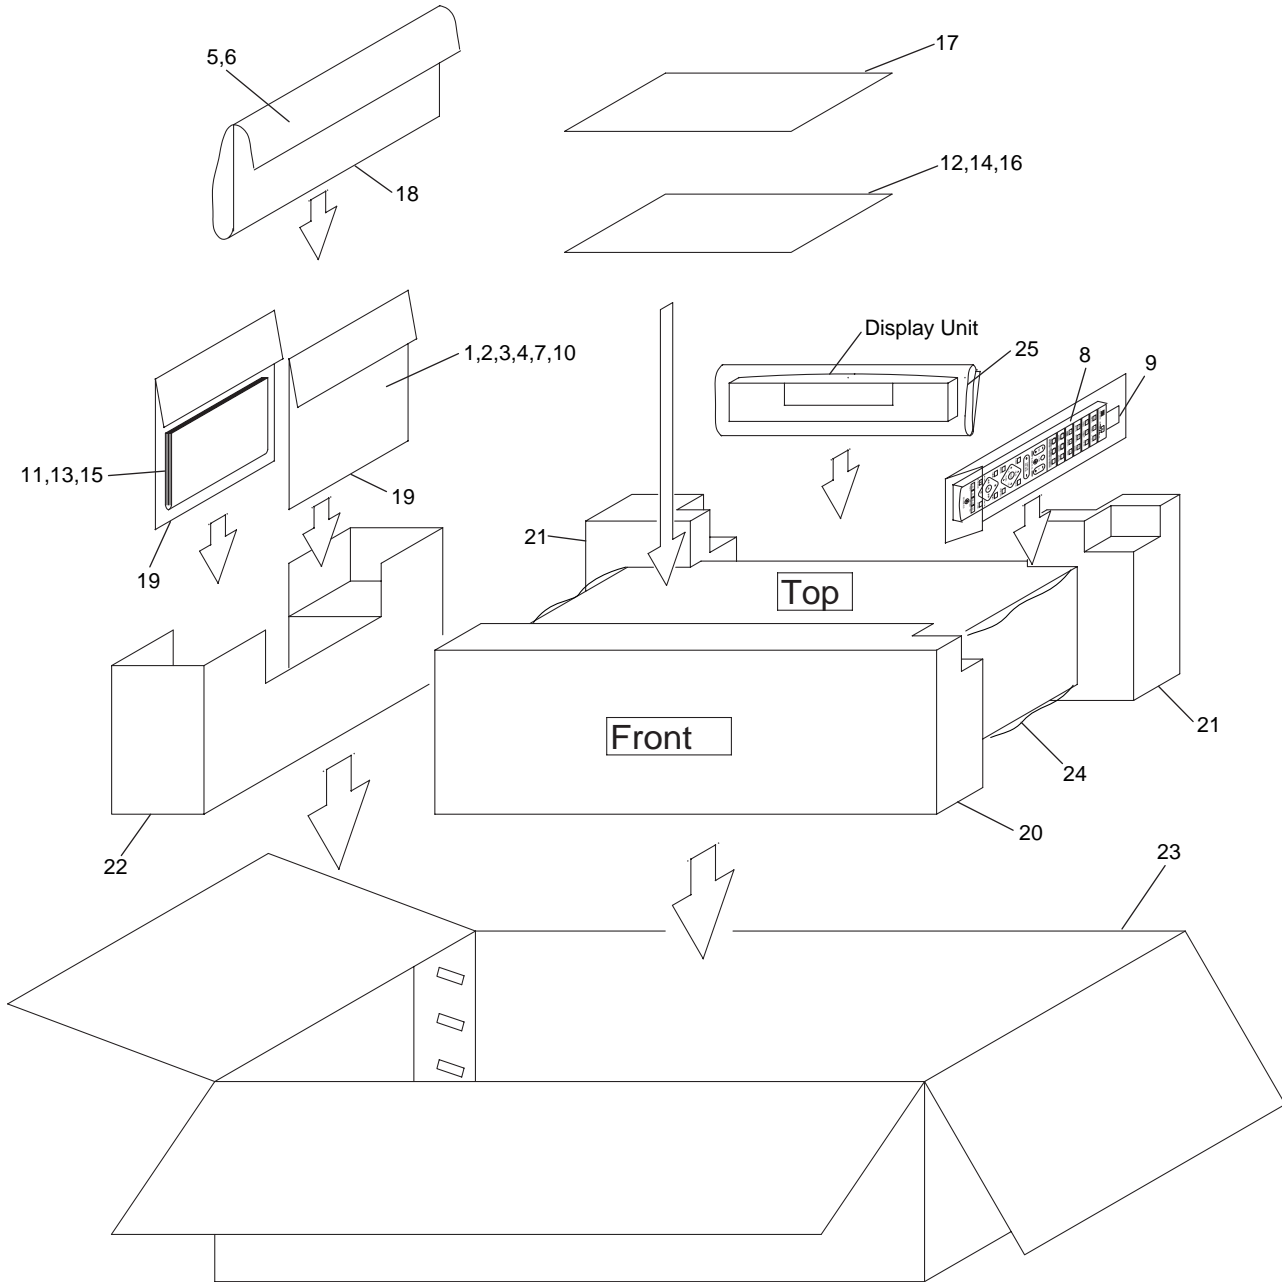



## PACKING parts List

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	Power Cord	See Contrast table (2)	14	Setup Guide (German, Italian)	See Contrast table (2)
2	FM Antenna	ADH7030	15	Operating Instructions (Swedish, Dutch)	See Contrast table (2)
3	AM Loop Antenna	ATB7009	16	Setup Guide (Swedish, Dutch)	See Contrast table (2)
4	Video Cord	VDE1065	NSP 17	Warranty Card	ARY7065
5	Control Cable A (Blue Pugs)	ADE7063	NSP 18	Polyethylene Bag	AHG7098
6	Control Cable B (Black Plugs)	ADE7078	NSP 19	Polyethylene Bag	Z21-038
7	Display Cable (Gray Plugs)	ADE7077	20	Front Pad	AHA7420
8	Remote Control Unit	AXD7368	21	Rear Pad	AHA7421
9	Battery Cover	XZN3130	22	Spacer	AHB7087
NSP 10	Dry Cell Batteries (R6P,AA)	VEM1031	23	Packing Case	See Contrast table (2)
11	Operating Instructions (English, French)	ARE7333	24	Packing Sheet	AHG7015
12	Setup Guide (English, French)	See Contrast table (2)	25	Protection Bag	AHG7109
13	Operating Instructions (German, Italian)	See Contrast table (2)			


## (2) CONTRAST TABLE

XV-DV99/ZYXJ, ZVXJ, XV-DV990/ZYXJ and ZVXJ are constructed the same except for the following :

Mark	No.	Symbol and Description	XV-DV99/ZYXJ	XV-DV99/ZVXJ	XV-DV990/ZYXJ	XV-DV990/ZVXJ
⚠	1	Power Cord	ADG1154	ADG1156	ADG1154	ADG1156
	12	Setup Guide (English, French)	ARE7332	ARE7332	ARE7334	ARE7334
	13	Operating Instructions (German, Italian)	ARC7491	Not used	ARC7491	Not used
	14	Setup Guide (German, Italian)	ARC7490	Not used	ARC7506	Not used
	15	Operating Instructions (Swedish, Dutch)	ARC7493	Not used	ARC7493	Not used
	16	Setup Guide (Swedish, Dutch)	ARC7492	Not used	ARC7508	Not used
	23	Packing Case	AHD8185	AHD8185	AHD8220	AHD8220

# 2.2 EXTERIOR SECTION

A

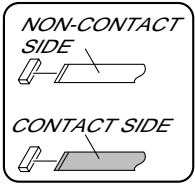


B

C

D

E

F

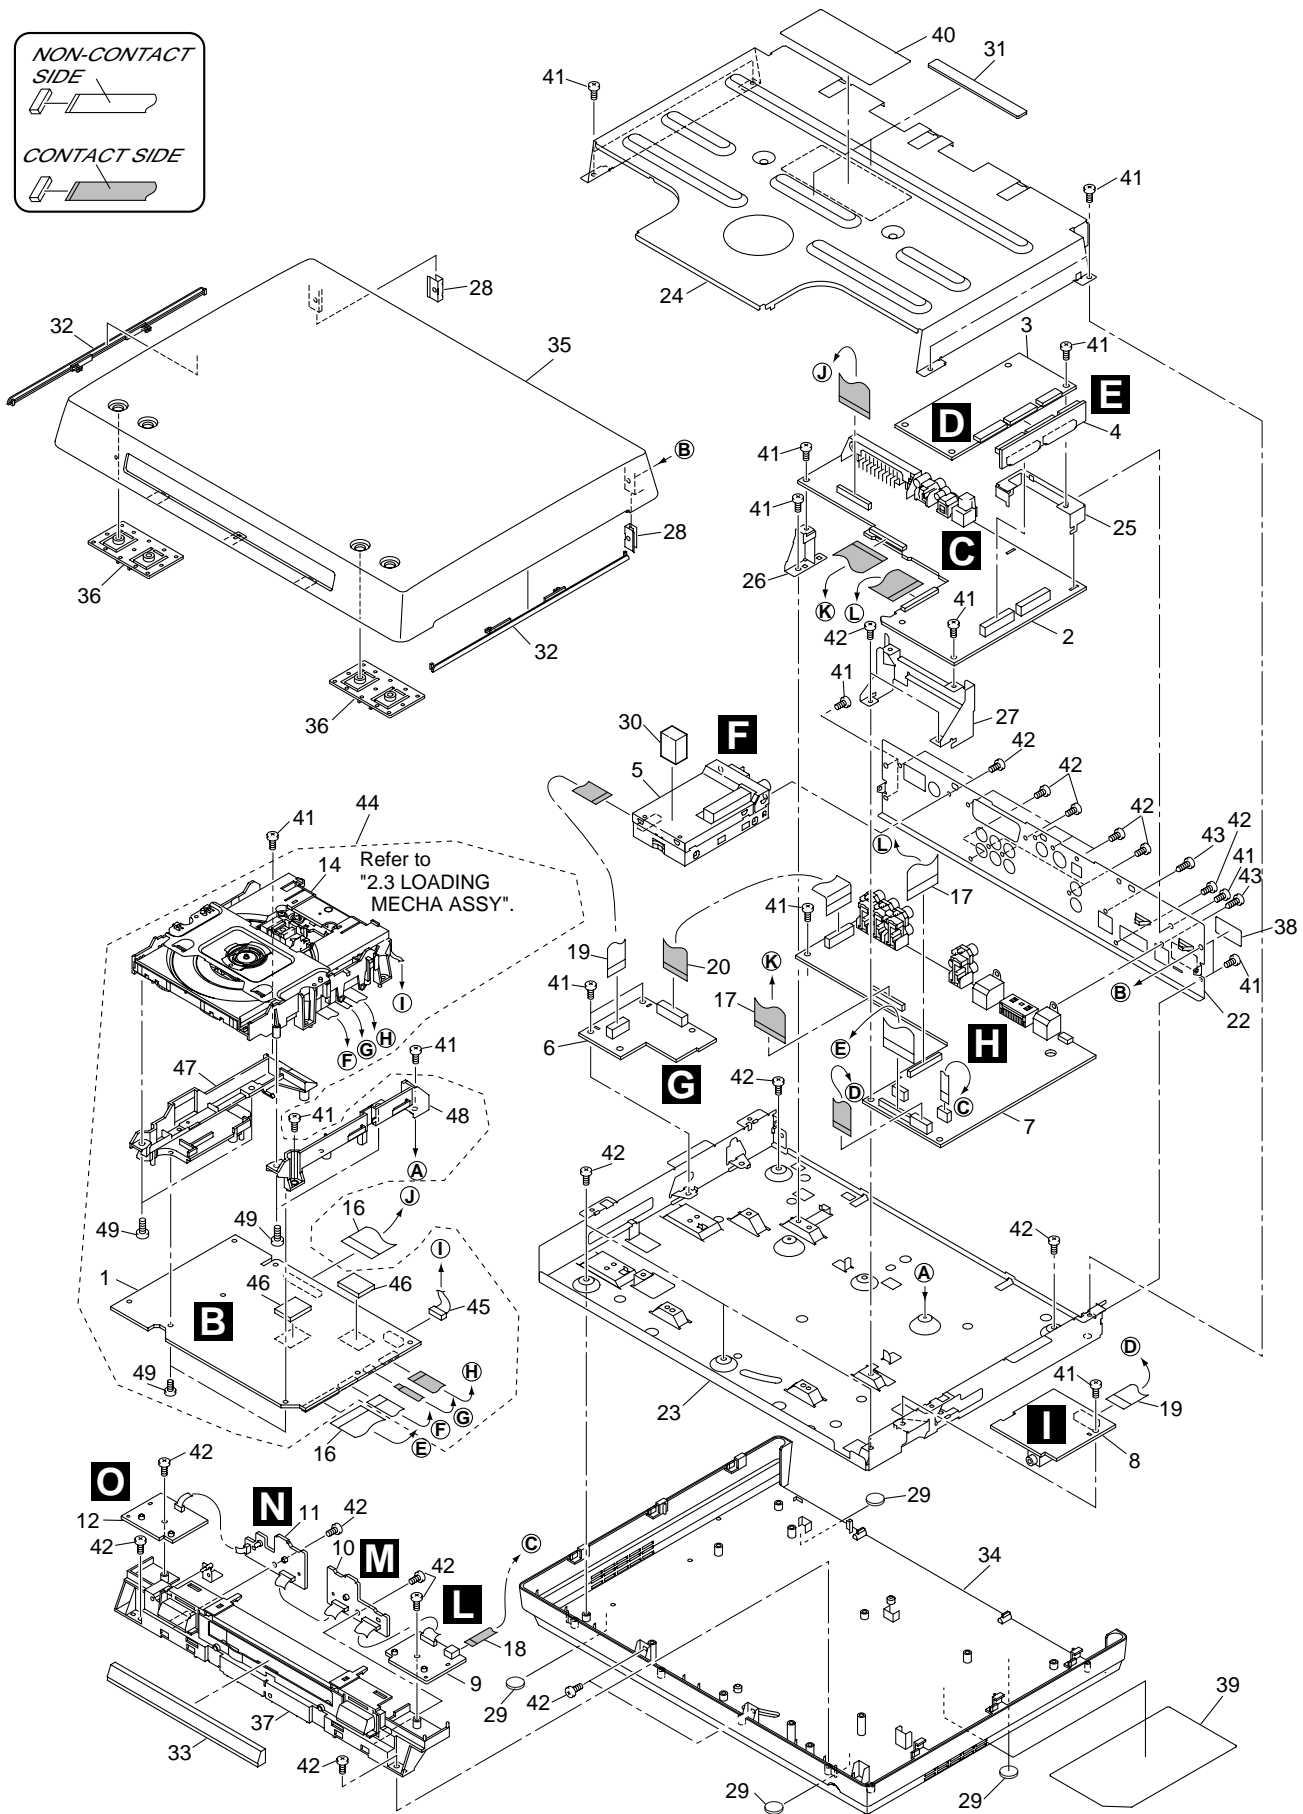

## EXTERIOR SECTION parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	DVDM Assy	AWM7813	26	Angle PCB S	ANG7468
2	VIDEO Assy	AWU8100	27	Angle PCB M	ANG7475
3	DSP Assy	AWX8325	28	Screw Plate	ANG7470
4	DSP TRADE Assy	AWU8101	29	Leg	AEB7090
5	FM/AM TUNER Module	AXQ7229	30	Tuner Spacer	AEB7320
6	TX TRADE Assy	AWU8114	31	Top Spacer	AEB7321
7	CONTROL Assy	See Contrast table (2)	32	Side Plate	AAK8135
8	HP Assy	AWU8102	33	Tray Panel	AAN7223
9	KEY R TOP Assy	AWU8113	34	Bottom Base ZY	AMA7028
10	KEY R Assy	AWU8112	35	Top Panel	AMB7850
11	KEY L Assy	AWU8110	36	Button Assy T	AXG7205
12	KEY L TOP Assy	AWU8111	37	Button Assy F	AXG7206
13	••••••••		NSP 38	ID Label Assy	VXW1003
NSP 14	LOADING MECHA Assy	VWT1208	NSP 39	Name Label R	See Contrast table (2)
15	••••••••		40	Label	VRW1872
16	30P FFC/30V	ADD7436	41	Screw	BBZ30P080FMC
17	30P FFC/30V	ADD7437	42	Screw	BPZ30P080FZK
18	5P FFC/30V	ADD7438	43	Screw	PSC30P080FNI
19	13P FFC/30V	ADD7439	NSP 44	DVD Assy	AXA7126
20	19P FFC/30V	ADD7440	45	Connector Assy	PG05KK-E25
21	••••••••		46	Cushion	AEB7267
22	Rear Panel	See Contrast table (2)	47	Adapter02 L	ANW7267
NSP 23	Bottom Plate	ANF7035	48	Adapter02 R	ANW7268
NSP 24	Top Plate	ANF7036	49	Screw	BPZ30P080FMC
25	Angle DSP	ANG7467			

### (2) CONTRAST TABLE

XV-DV99/ZYXJ, ZVXJ, XV-DV990/ZYXJ and ZVXJ are constructed the same except for the following :


Mark	No.	Symbol and Description	XV-DV99/ZYXJ	XV-DV99/ZVXJ	XV-DV990/ZYXJ	XV-DV990/ZVXJ
	7	CONTROL Assy	AWU8099	AWU8099	AWU8148	AWU8148
	22	Rear Panel	ANC8185	ANC8185	ANC8213	ANC8213
NSP	39	Name Label R	AAL7333	AAL7333	AAL7336	AAL7336

## 2.3 LOADING MECHA ASSY

### Note :




Refer to "Application of Lubricant".

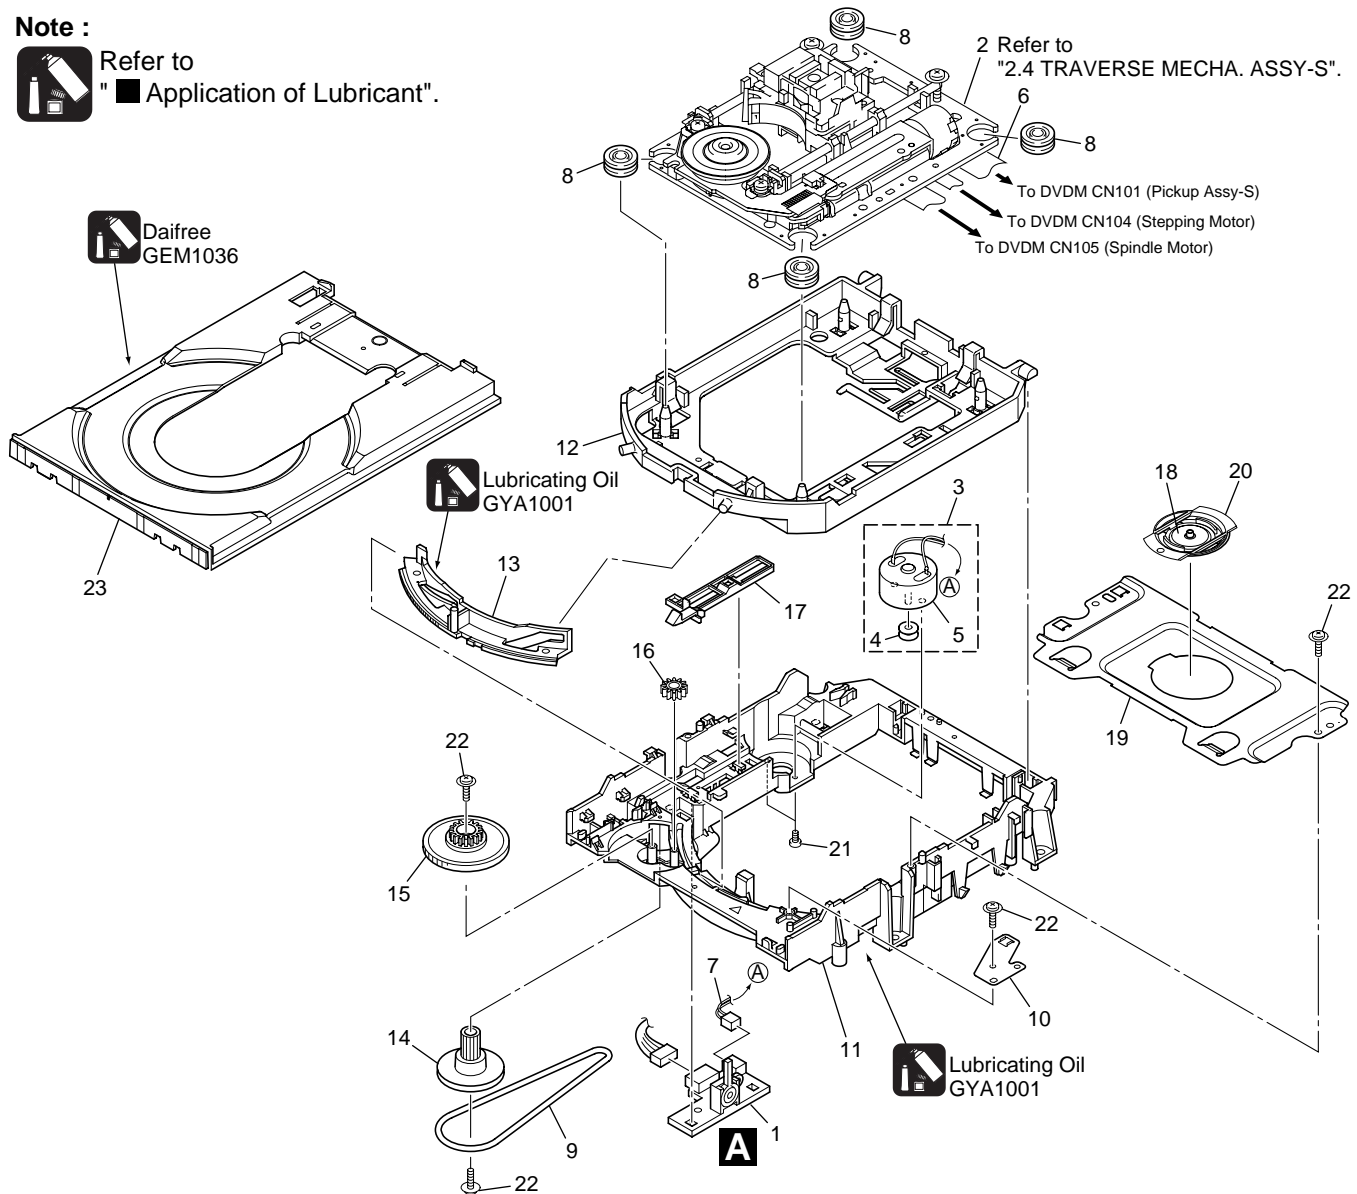

### LOADING MECHA ASSY parts List


Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP 1	LOAB Assy	VWG2346	17	SW Lever	VNL1925
2	Traverse Mechanism Assy-S	VXX2871	18	Clamper Plate	VNE2251
3	Loading Motor Assy	VXX2872	19	Bridge	VNE2252
4	Motor Pulley	PNW1634	20	Clamper	VNL1924
5	Motor	VXM1105	21	Screw	JGZ17P028FMC
6	Flexible Cable (24P)	VDA1947	22	Screw	Z39-019
7	Connector Assy 2P	VKP2253	23	Tray	VNL1920
8	Floating Rubber	VEB1351			
9	Belt	VEB1330			
10	Stabilizer	VNE2253			
11	Loading Base	VNL1917			
12	Float Base DVD	VNL1918			
13	Drive Cam	VNL1919			
14	Gear Pulley	VNL1921			
15	Loading Gear	VNL1922			
16	Drive Gear	VNL1923			

# Application of Lubricant

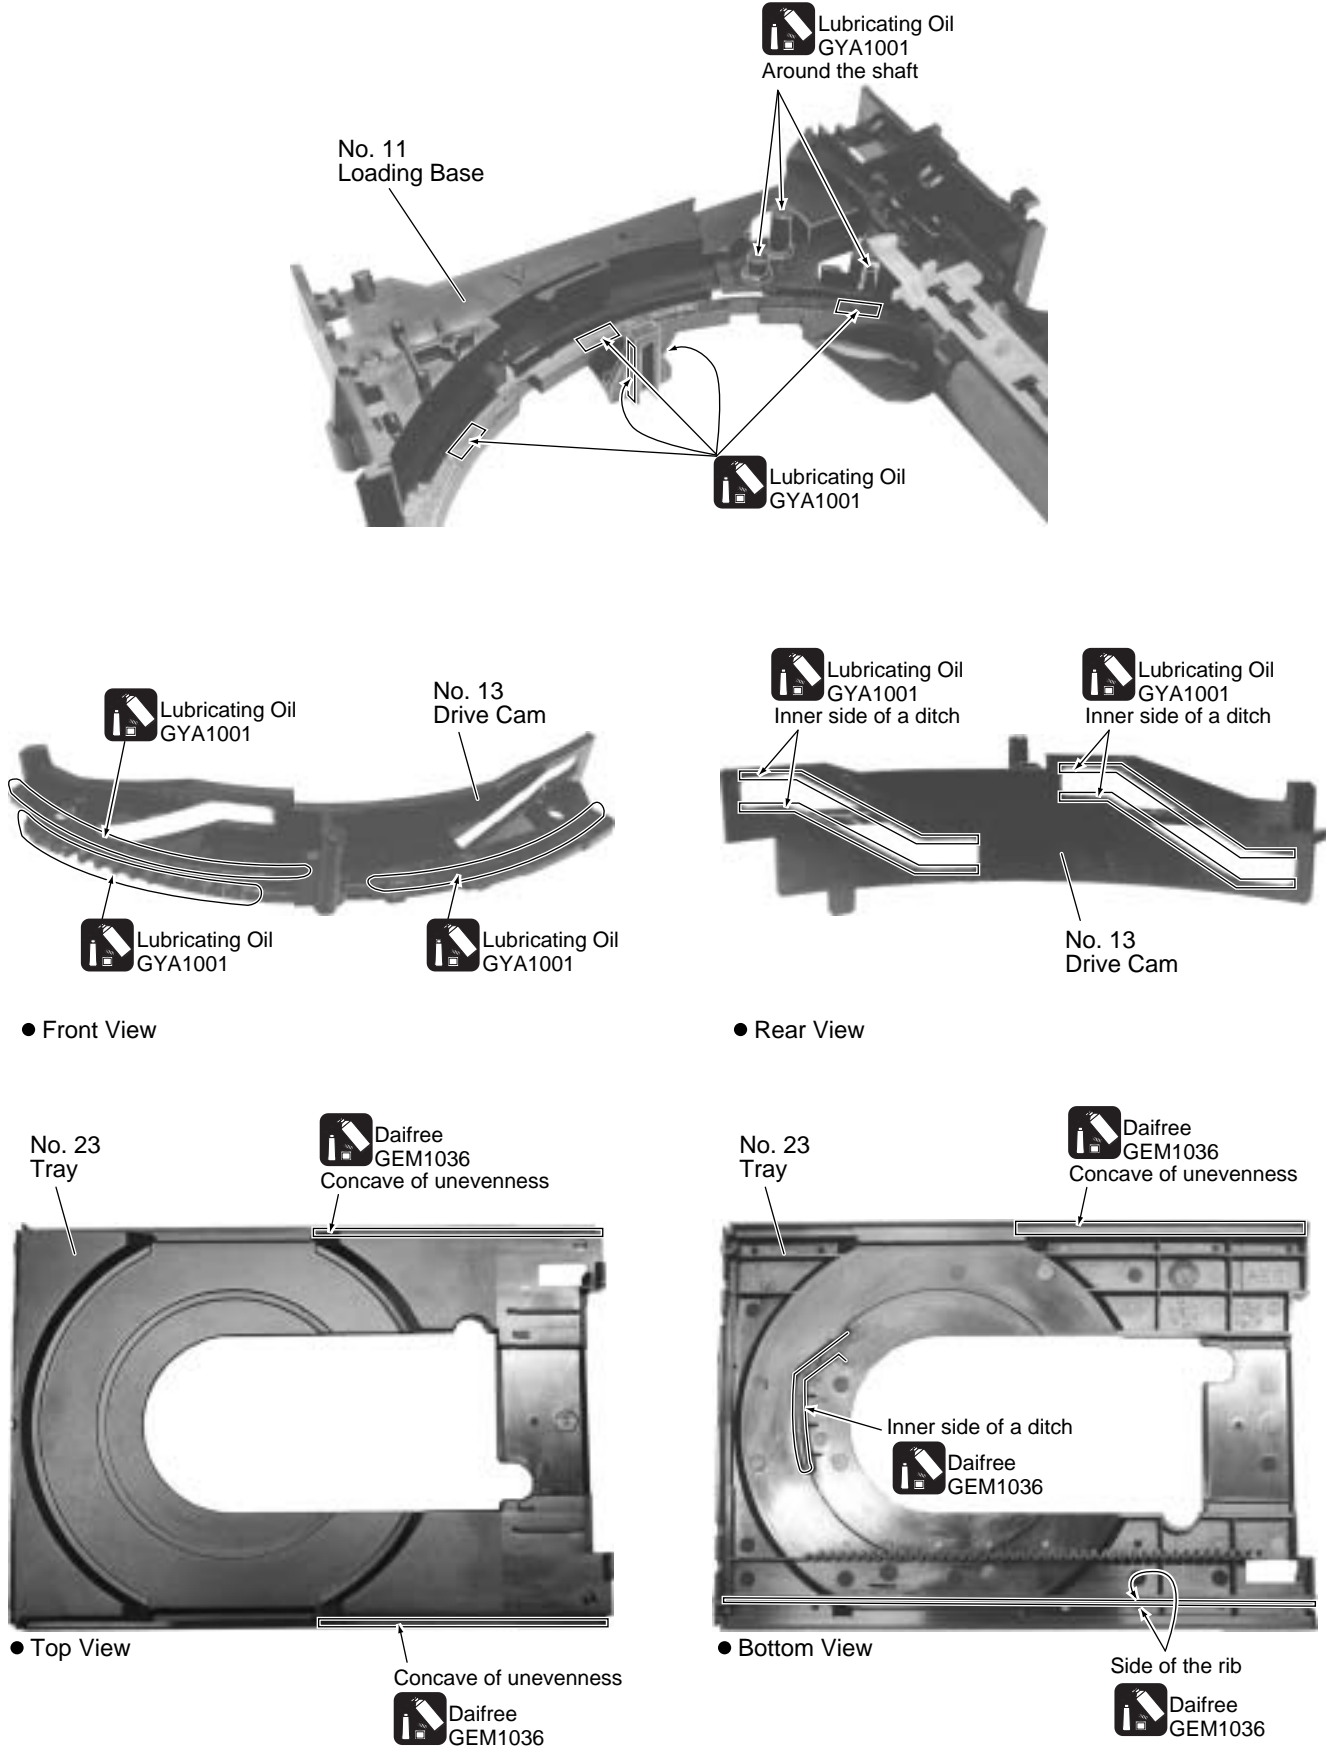

A  
B  
C  
D  
E  
F


## 2.4 TRAVERSE MECHA ASSY-S

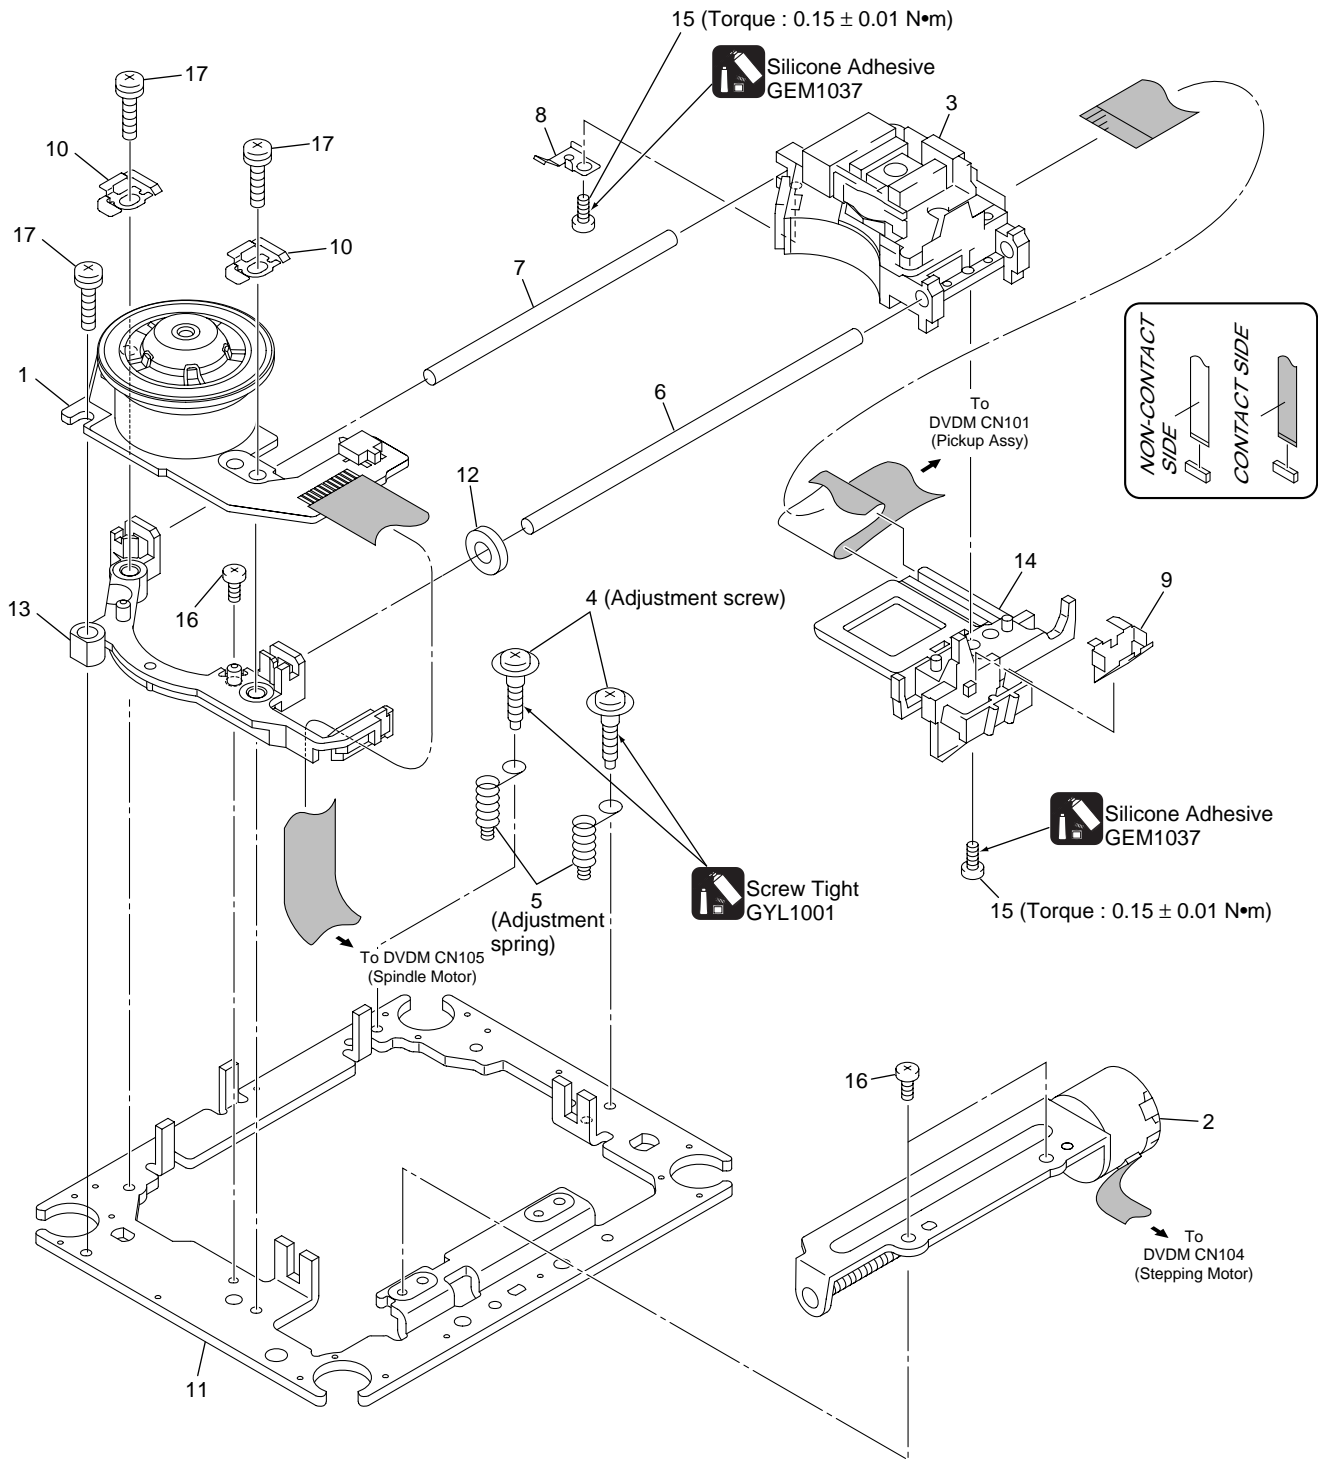

### TRAVERSE MECHA ASSY-S parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Spindle Motor	VXM1099	10	Support Spring	VNC1020
2	Stepping Motor	VXM1101	NSP 11	Mechanism Chassis	VNE2248
⚠ 3	Pickup Assy-S	OXX8005	12	Damper Sheet	VEB1335
4	Skew Screw	VBA1080	13	Spacer	VNL1913
5	Skew Spring	VBH1335	14	Joint 03	VNL1949
6	Guide Bar	VLL1514	15	Tapping Screw	OBA8021
7	Sub Guide Bar	VLL1515	16	Screw	BBZ20P050FZK
8	Leaf Spring	VNC1023	17	Screw	PMA26P100FMC
9	Joint Spring	VNC1019			

## 2.5 DISPLAY UNIT

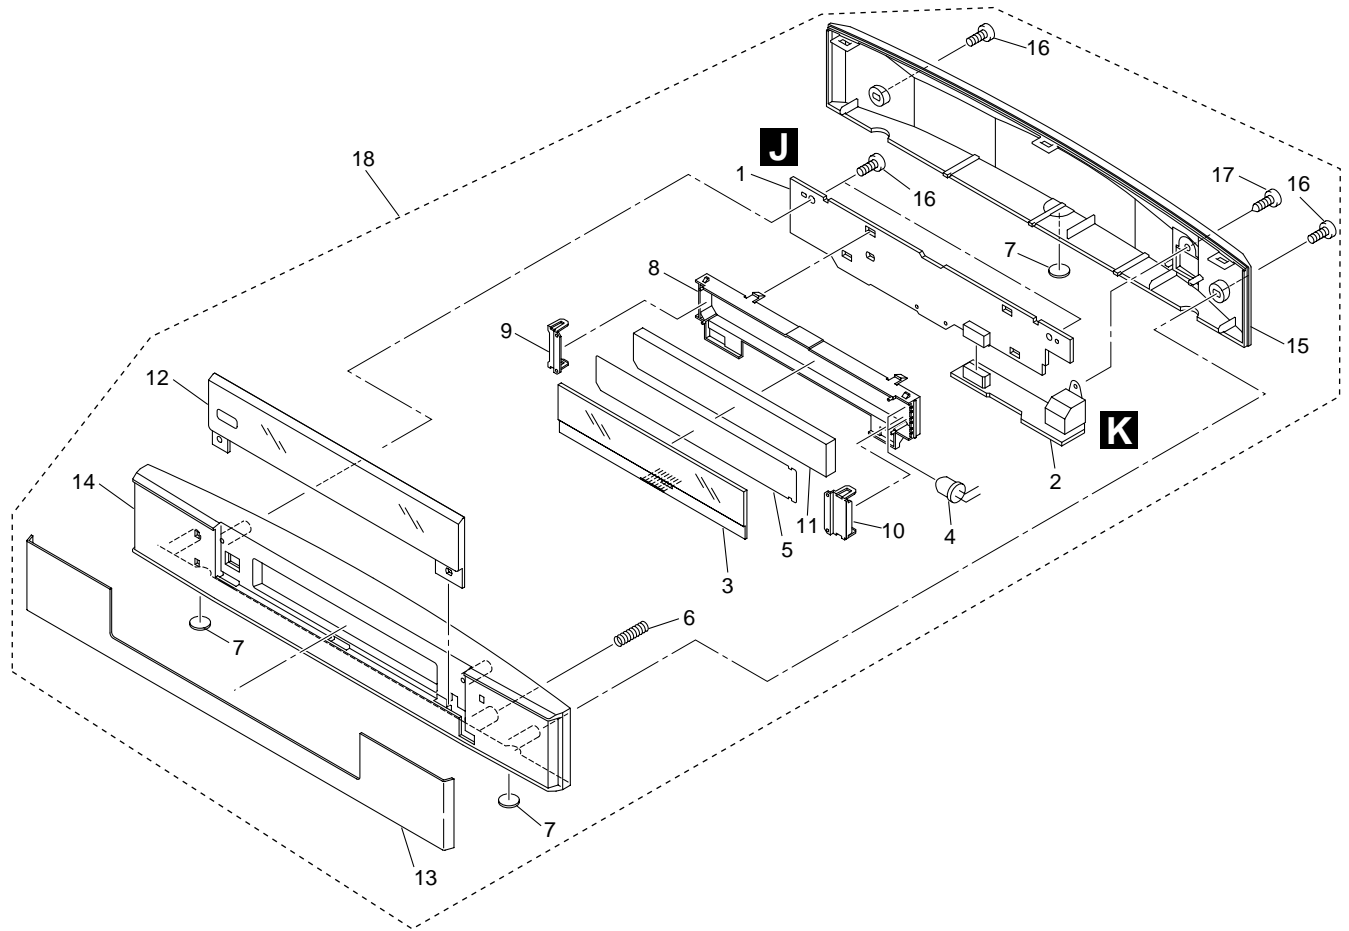

### DISPLAY UNIT parts List

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	LCD CONT Assy	AWU8119
2	CONNECT Assy	AWU8118
3	LCD	AAV7098
4	LED (White)	NSPW510BS-1064
5	Diffusion Sheet	AAK8144
6	Earth Spring	ABH7233
7	Leg	AEB7090
8	Back Light Case	AMR7463
9	REF Plate A	AMR7464
10	REF Plate B	AMR7465
11	Optical Plate	AMR7466
12	Display Window	AAK8137
13	Display AL	AAP7094
14	Display Panel	AMB7851
15	Display Cover	AMC7051
16	Screw	BPZ30P080FZK
17	Screw	PSC30P080FNI
18	Display Unit	AXX7163

# 3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

## 3.1 BLOCK DIAGRAM

A


B

C


D

E

F

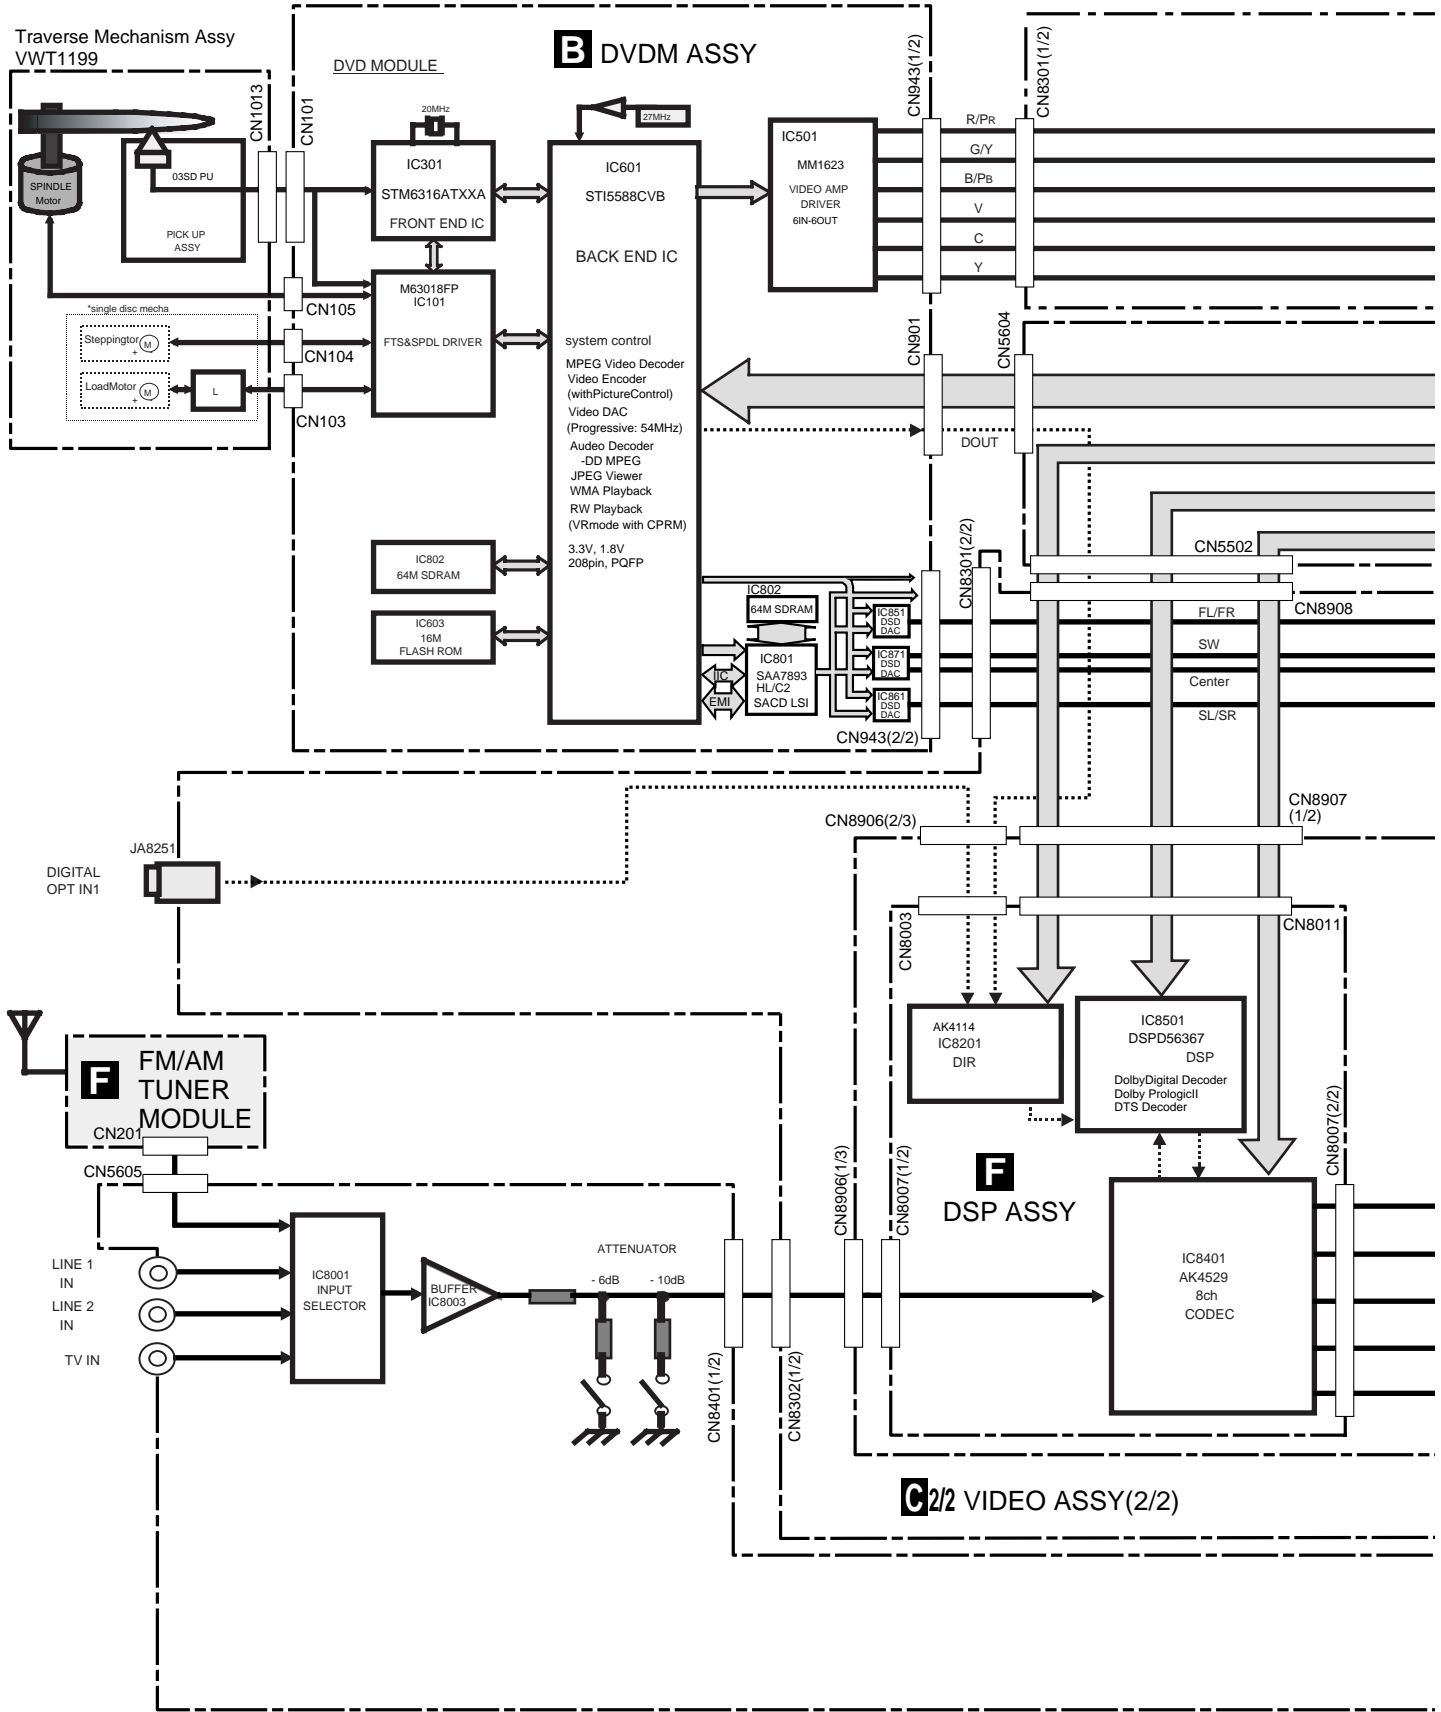




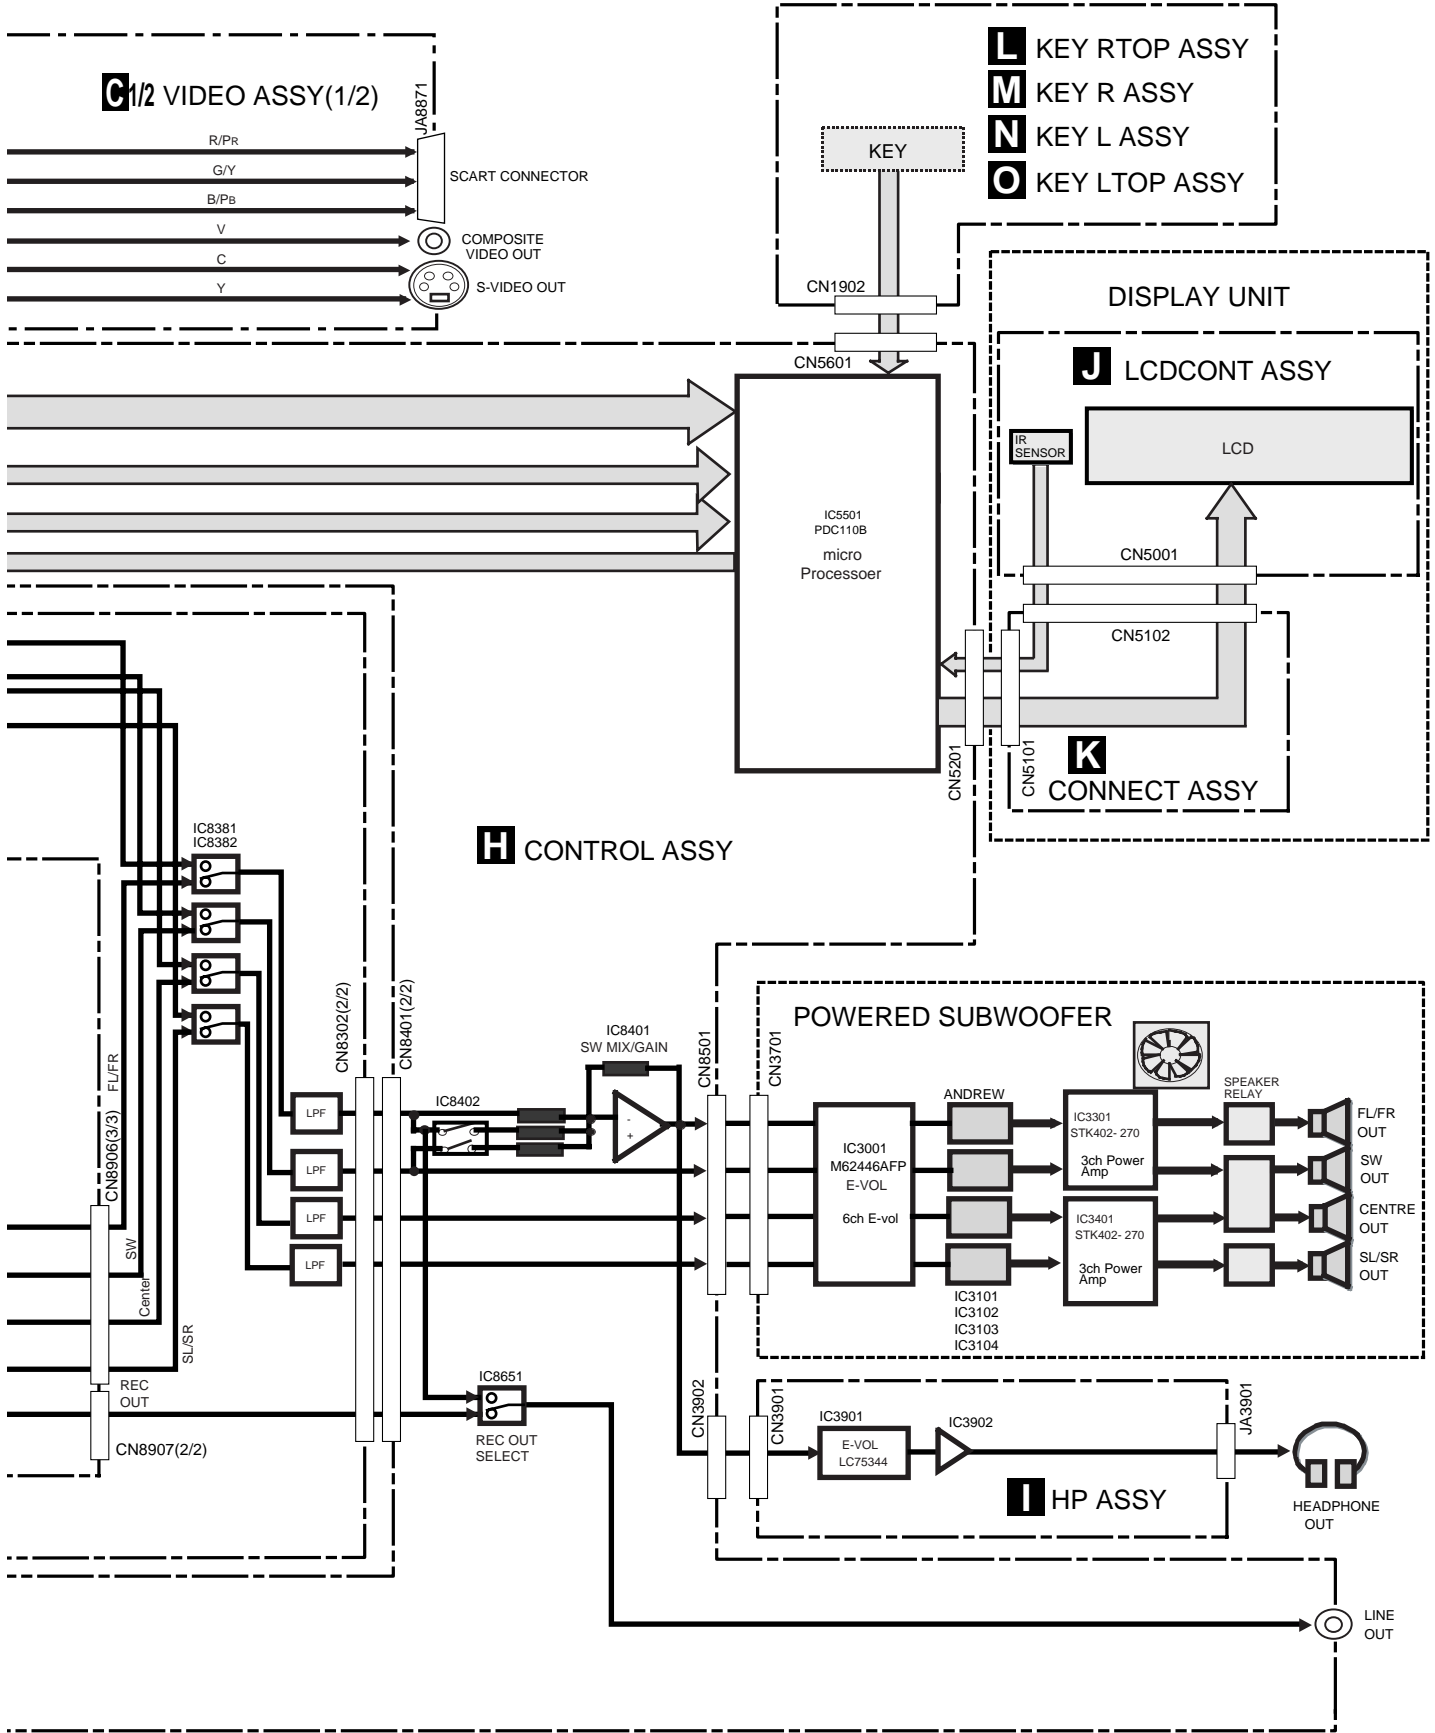


### 3.2 LOAB ASSY and OVERALL WIRING DIAGRAM


A

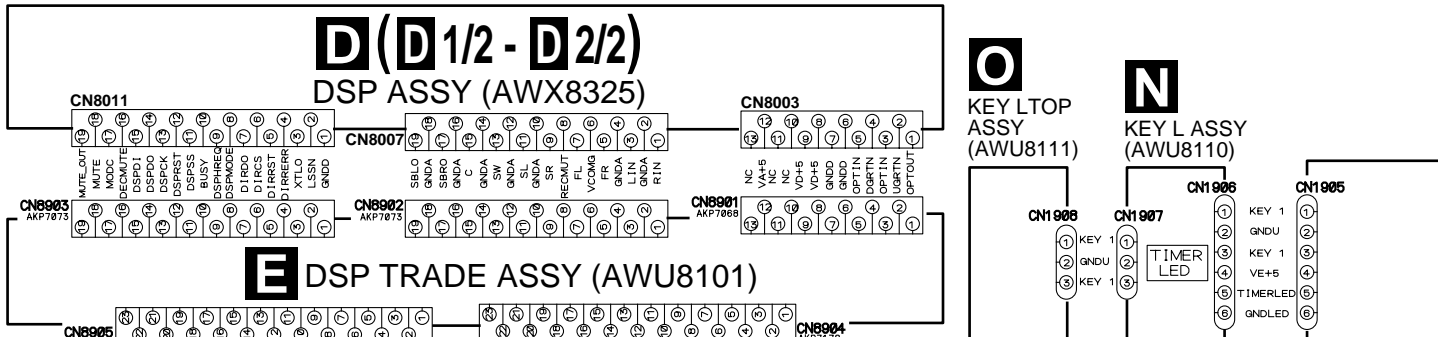


B

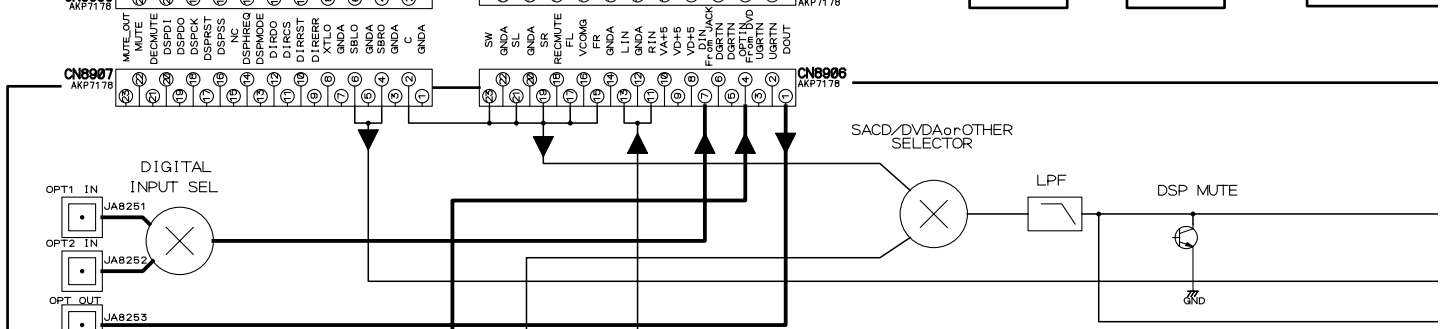


C

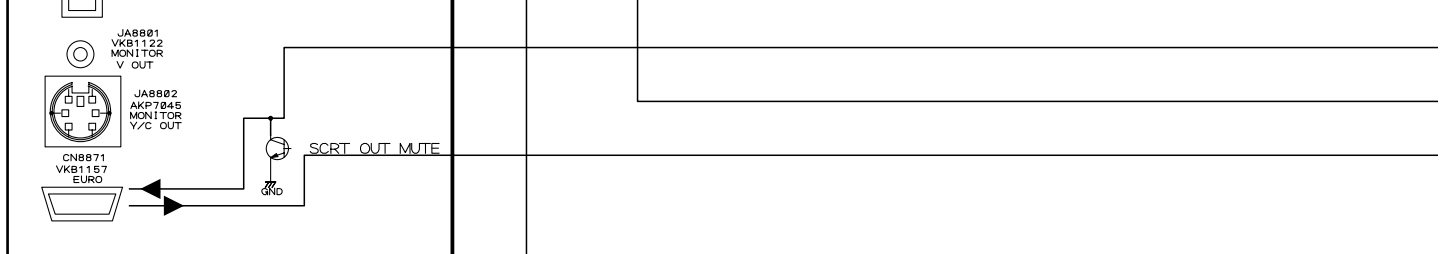


D

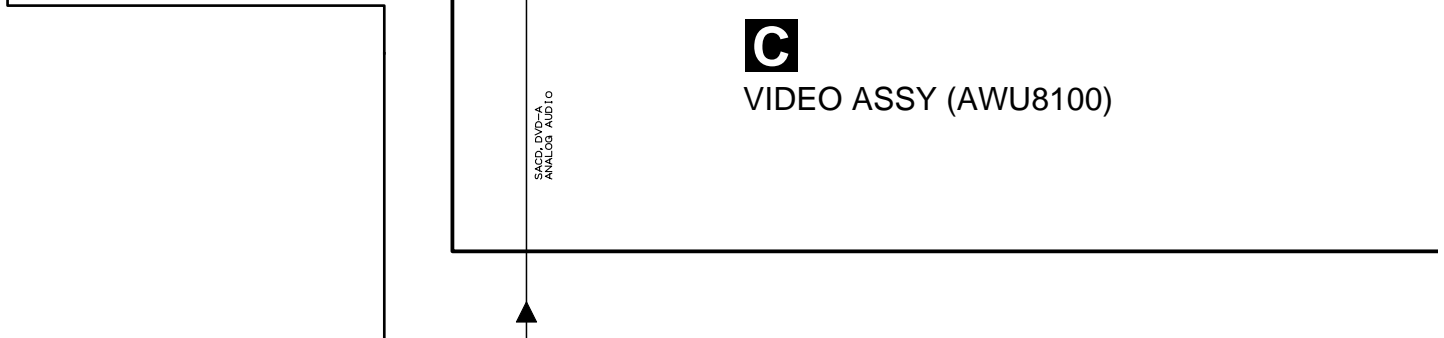


E

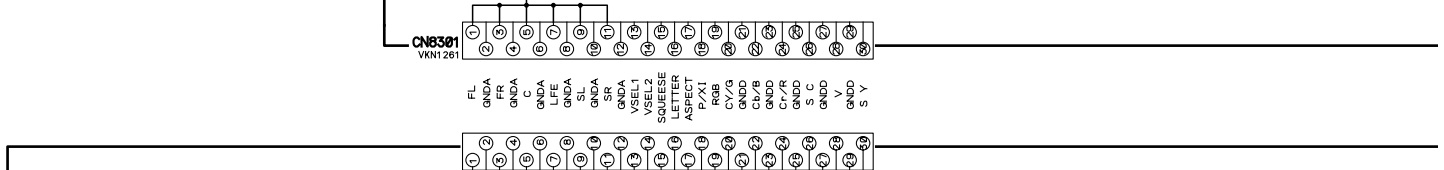

F

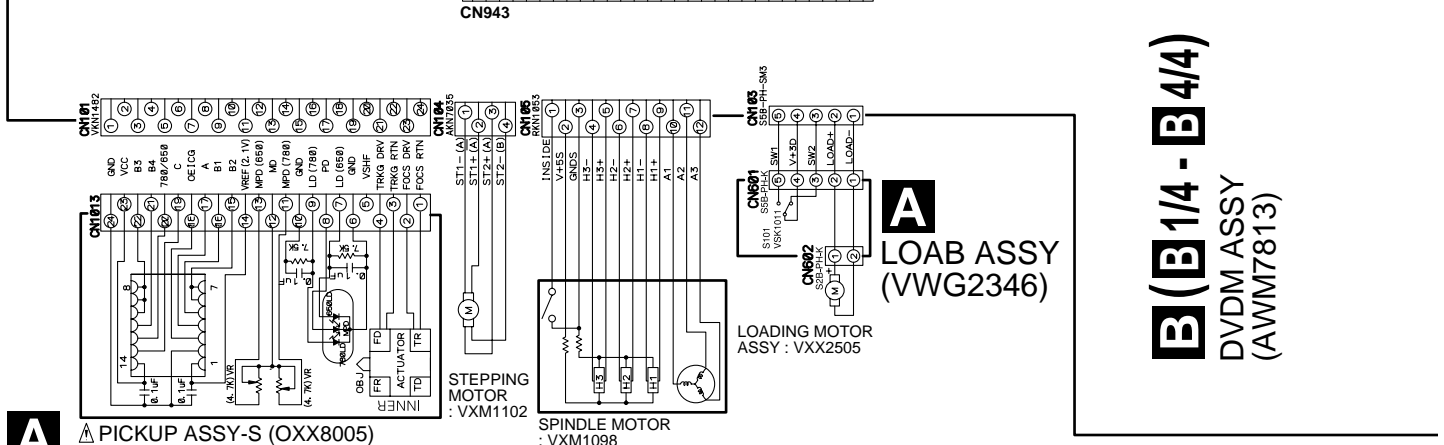


Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

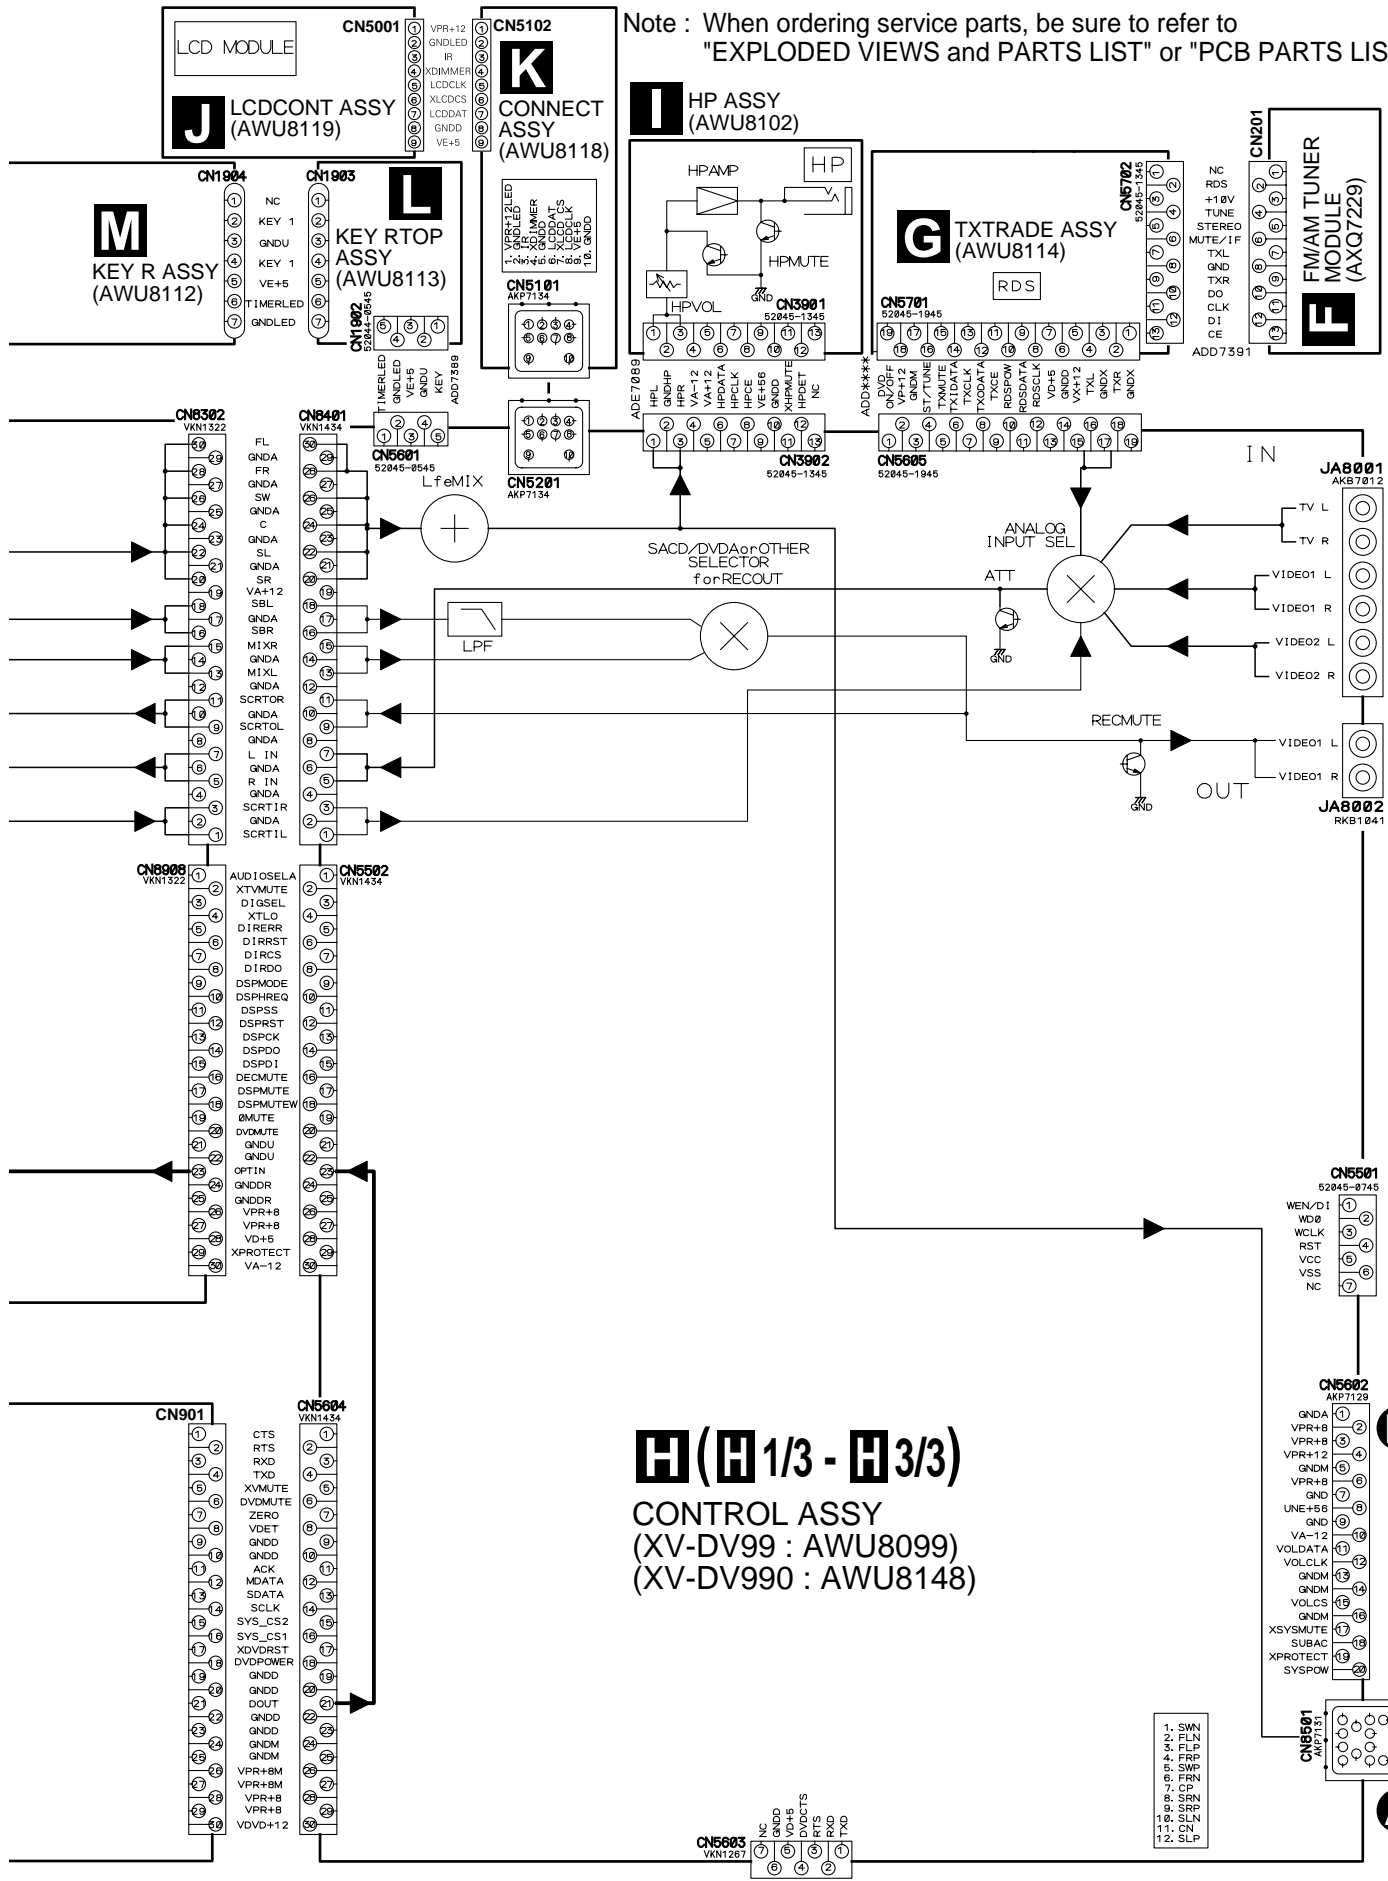


**H (H 1/3 - H 3/3)**  
**CONTROL ASSY**  
 (XV-DV99 : AWU8099)  
 (XV-DV990 : AWU8148)

### 3.3 DVDM ASSY(1/4)

## B 1/4 DVDM ASSY (AWM7813)

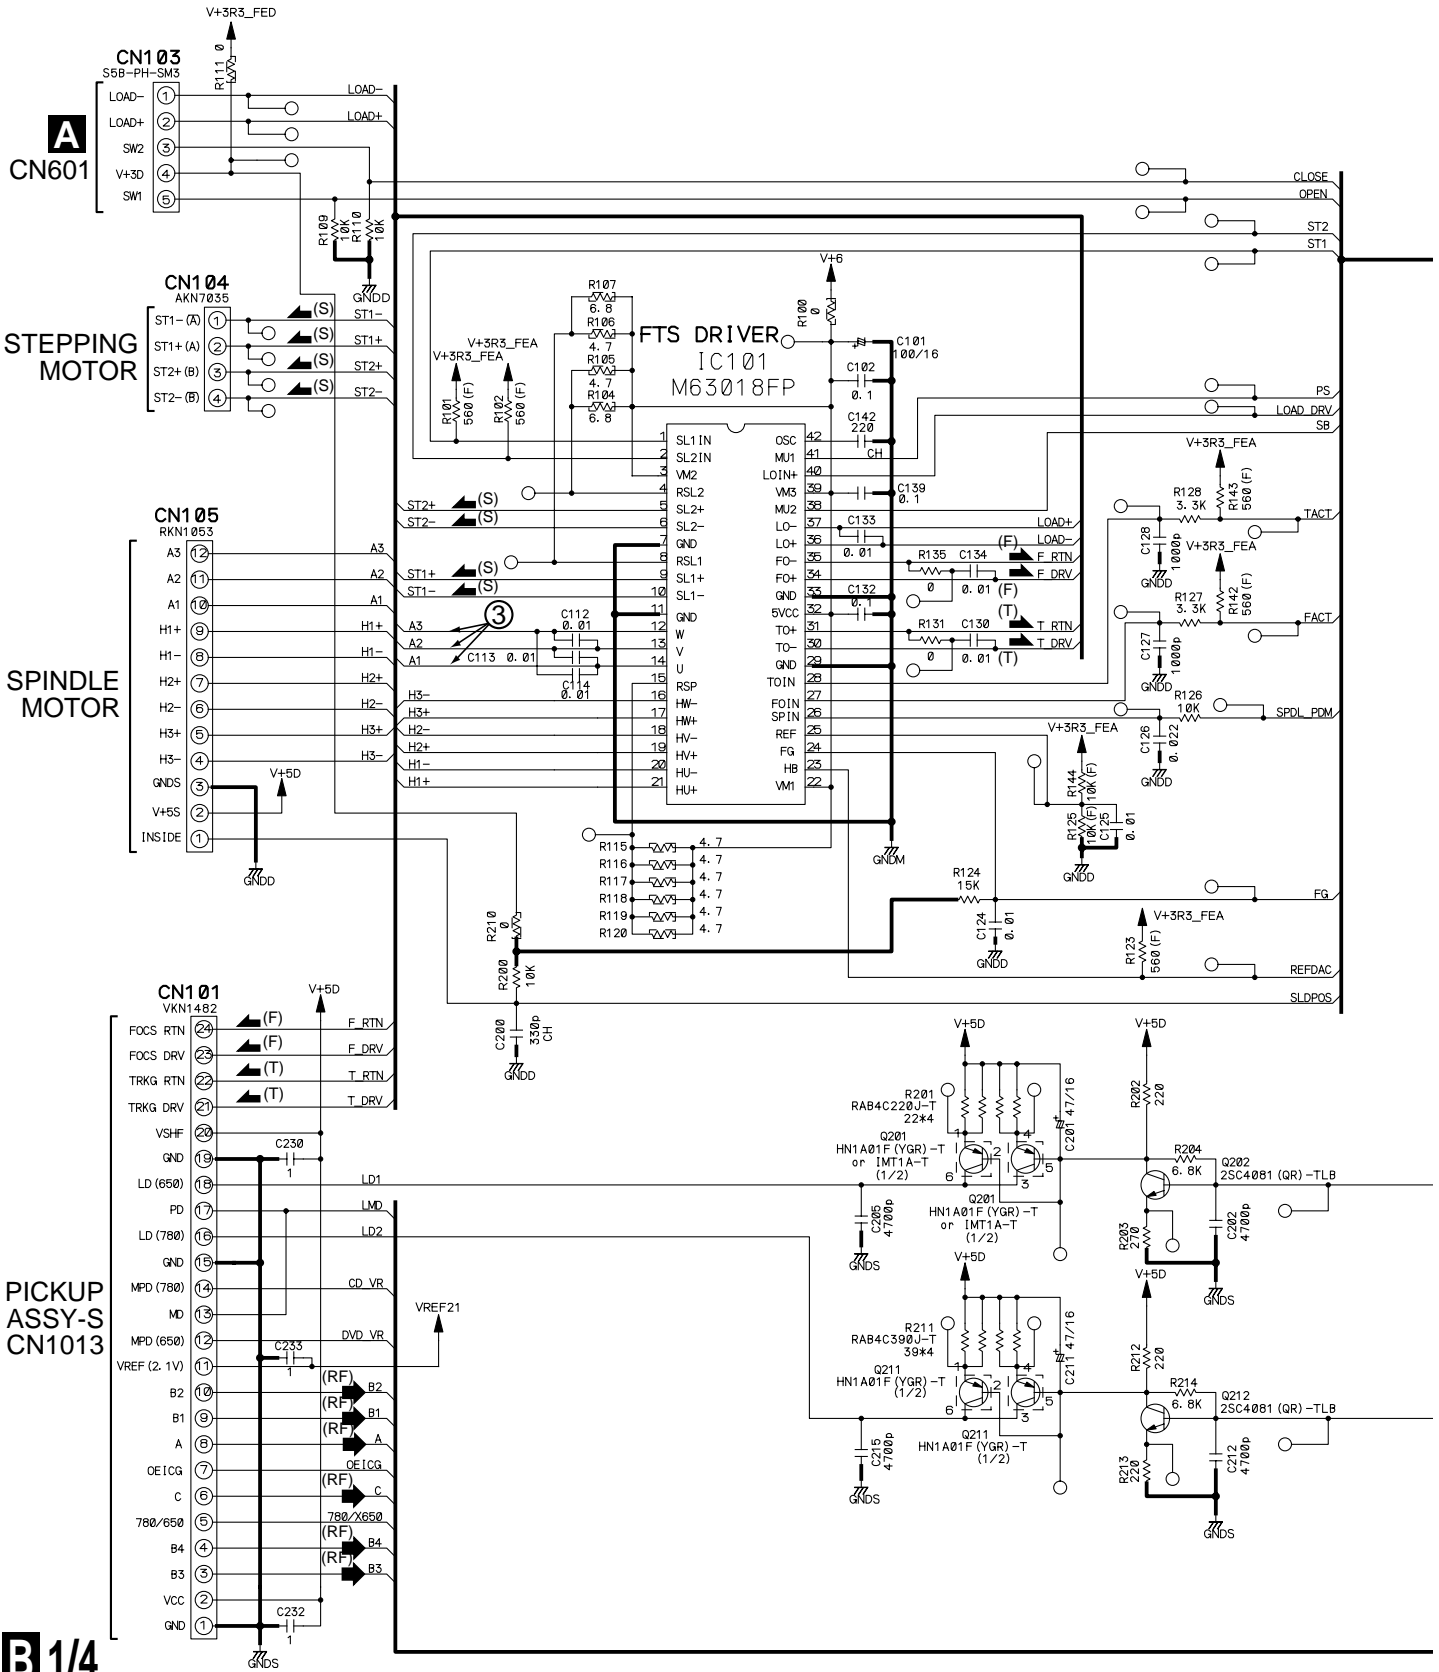

- (RF) : RF SIGNAL ROUTE
- (DVD) : DVD DATA SIGNAL ROUTE
- (F) : FOCUS SERVO LOOP LINE
- (T) : TRACKING SERVO LOOP LINE
- (S) : STEPPING SERVO LOOP LINE

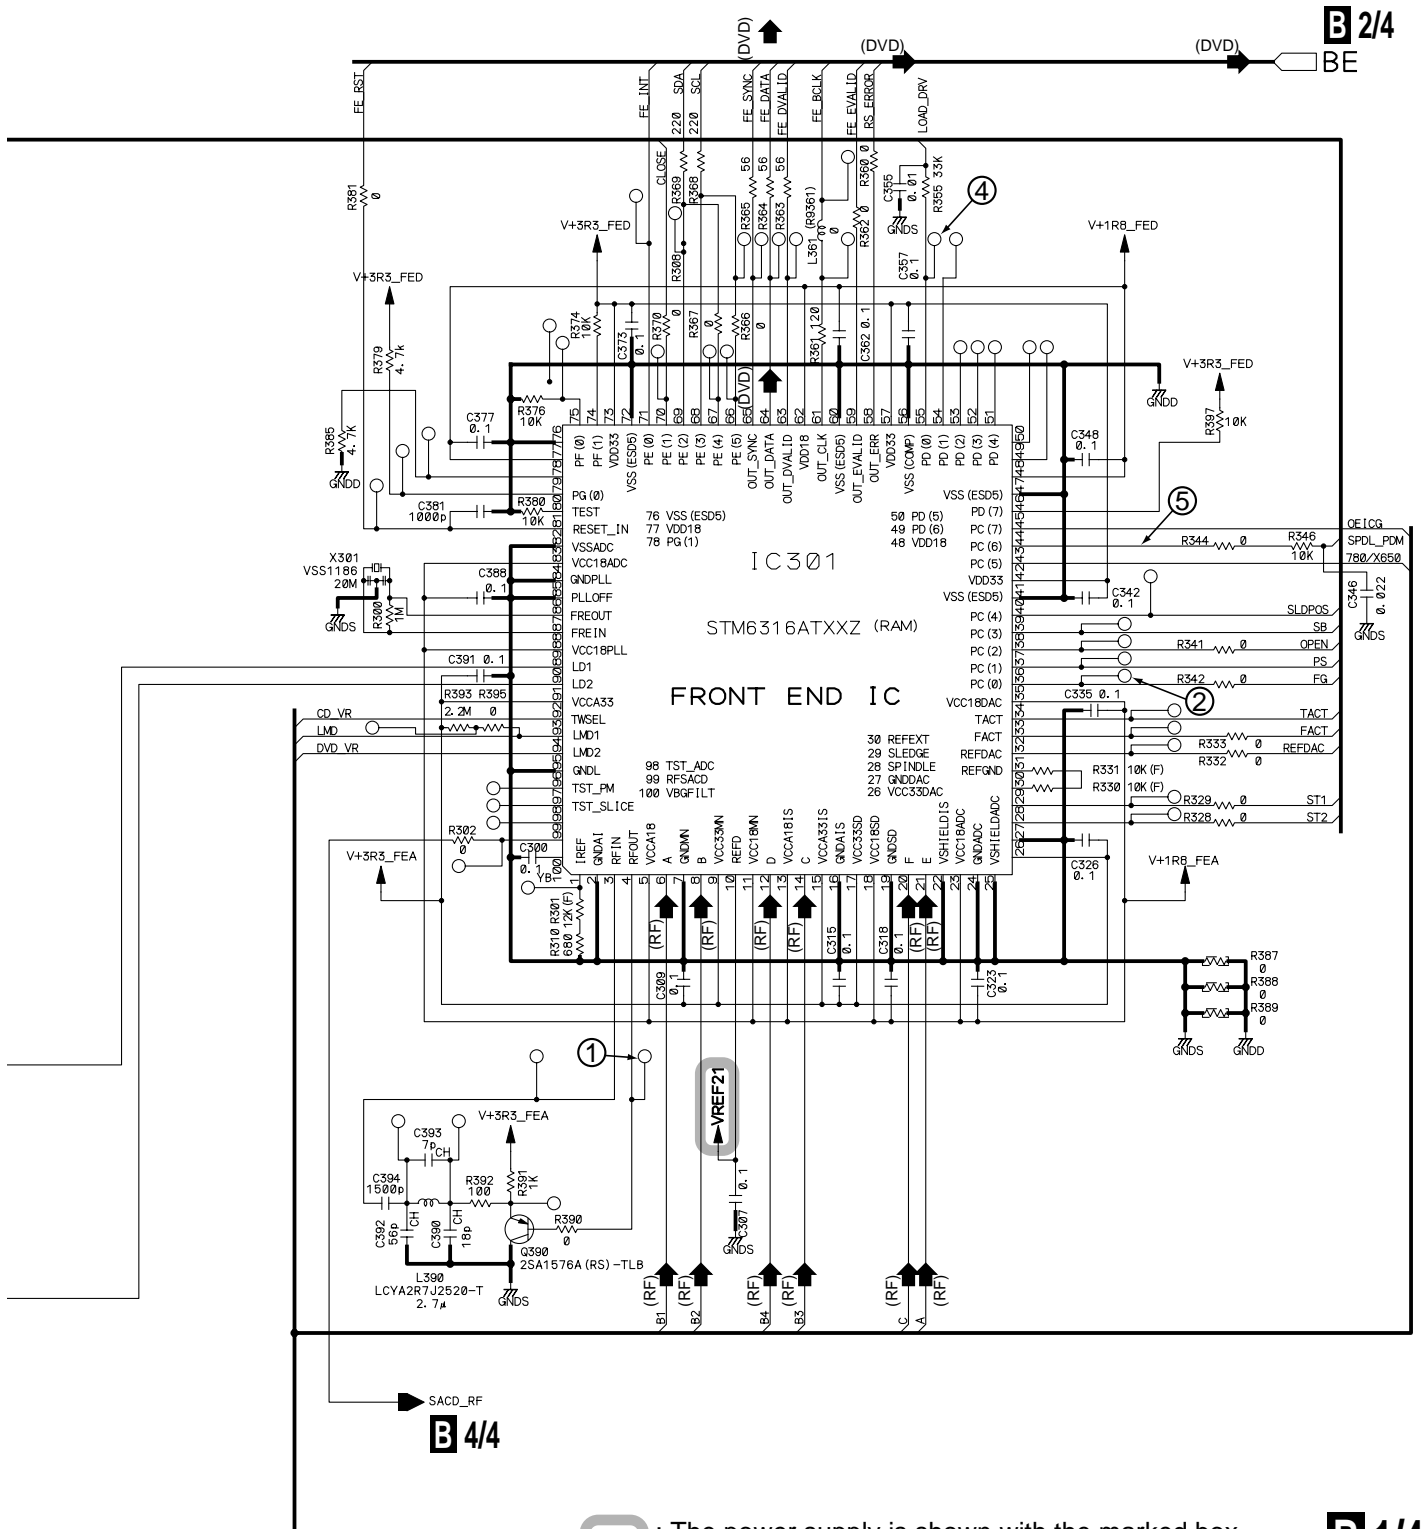


B 2/4  
BE

B 4/4

○ : The power supply is shown with the marked box.

B 1/4



# 3.4 DVDM ASSY(2/4)

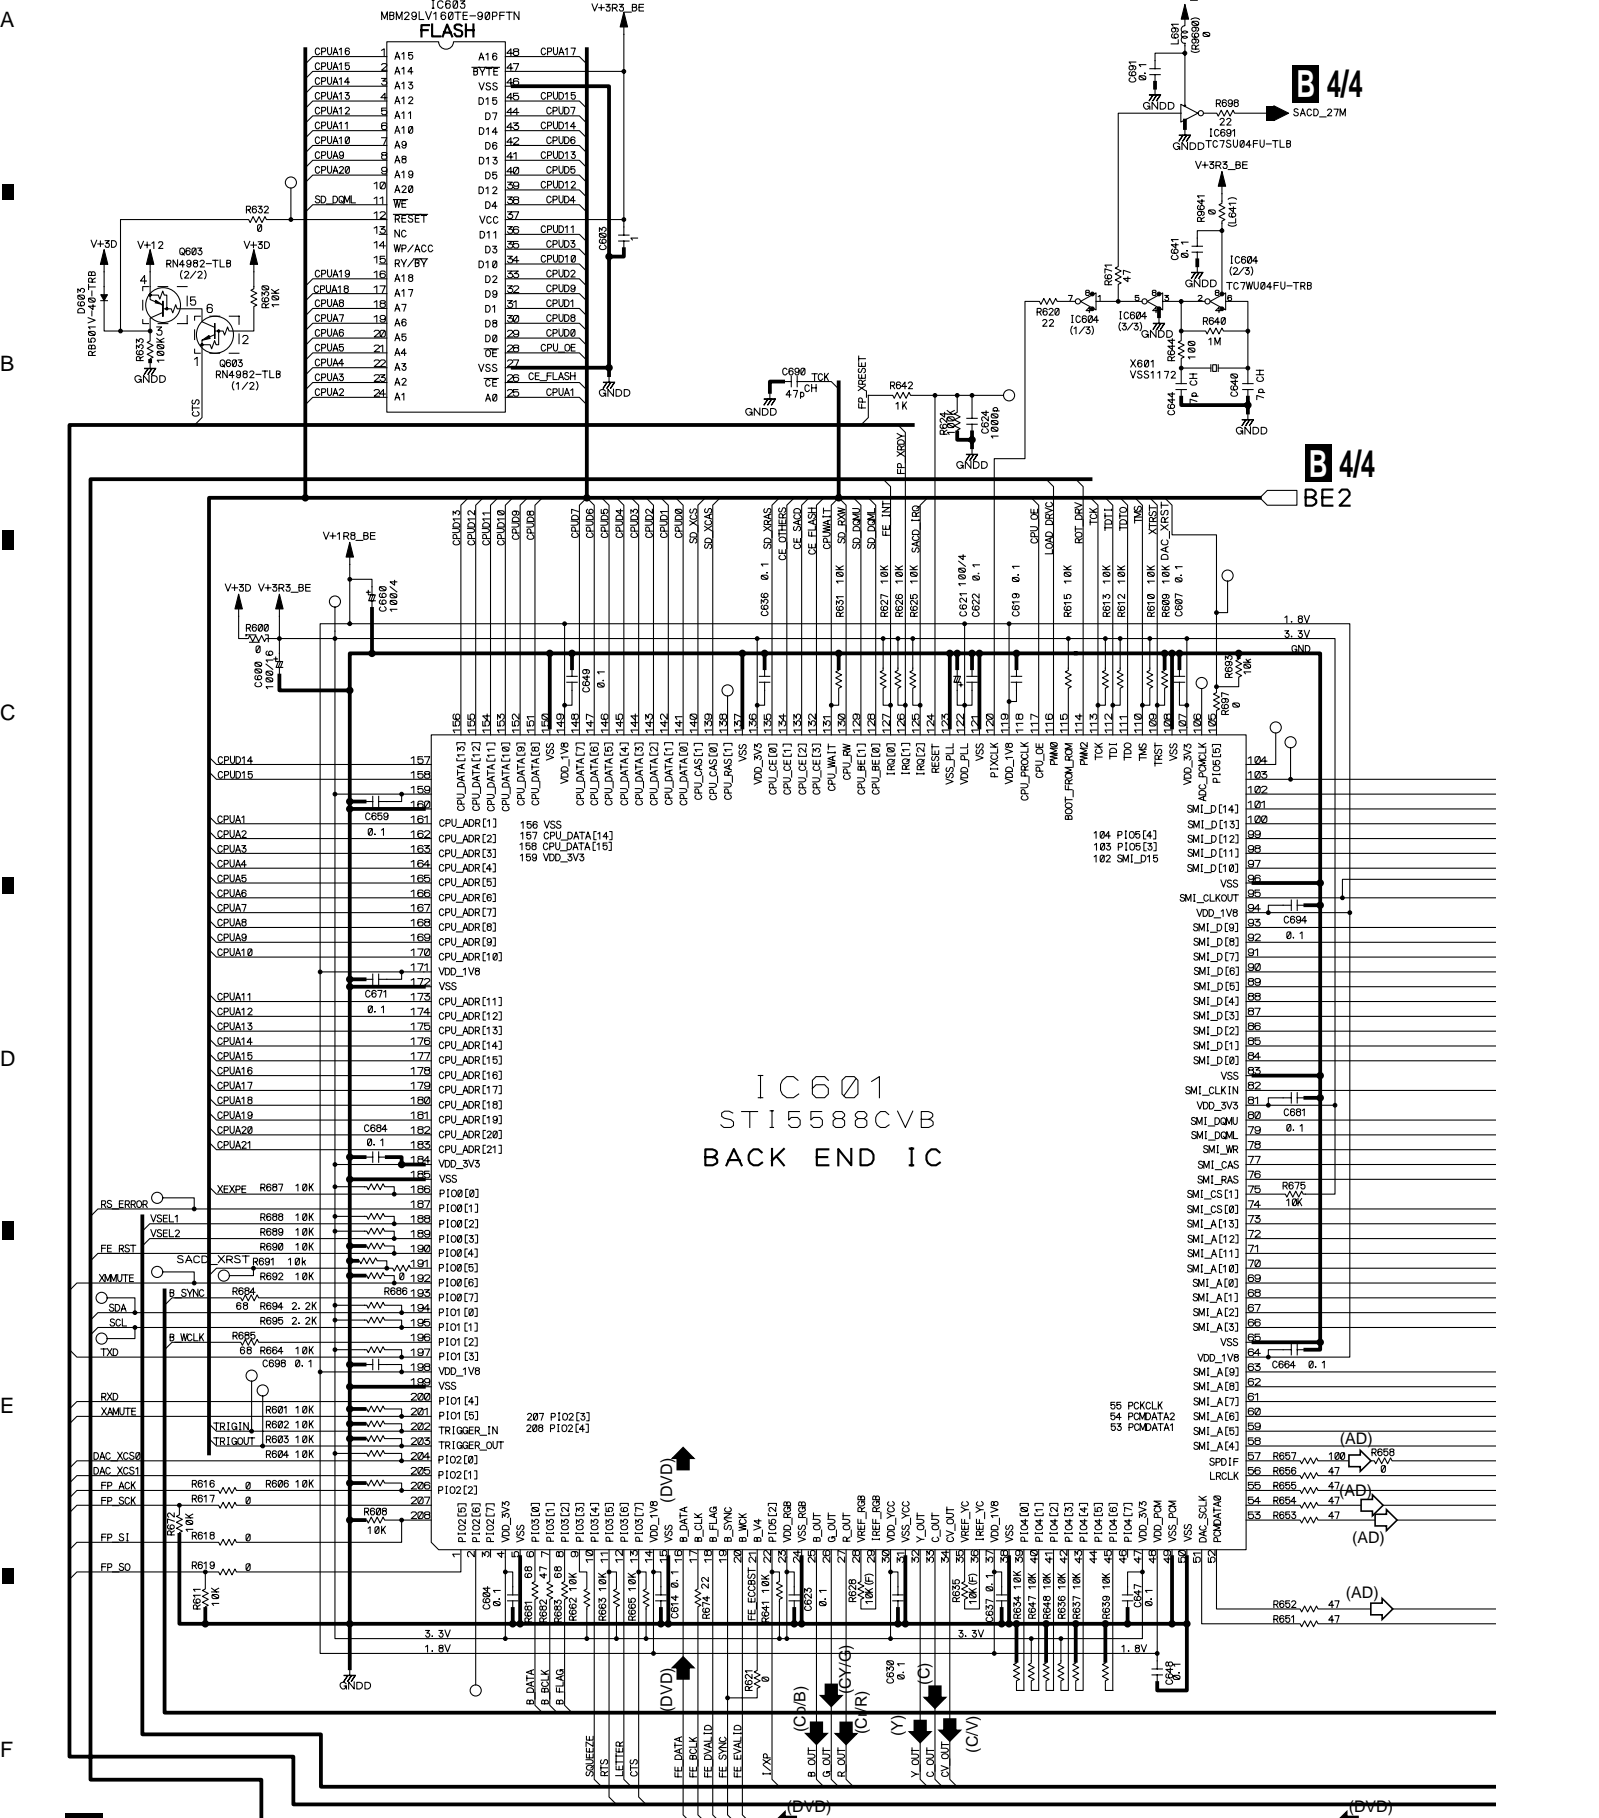





**B 2/4**

# B 2/4 DVDM ASSY (AWM7813)

- (DVD) → DVD DATA SIGNAL ROUTE
- (Cr/R) → VIDEO SIGNAL ROUTE (Cr/R)
- (CY/G) → VIDEO SIGNAL ROUTE (CY/G)
- (Cb/B) → VIDEO SIGNAL ROUTE (Cb/B)
- (Y) → S VIDEO SIGNAL ROUTE (Y)
- (C) → S VIDEO SIGNAL ROUTE (Y)
- (C/V) → S VIDEO SIGNAL ROUTE (C/V)
- (AD) → AUDIO DATA SIGNAL ROUTE

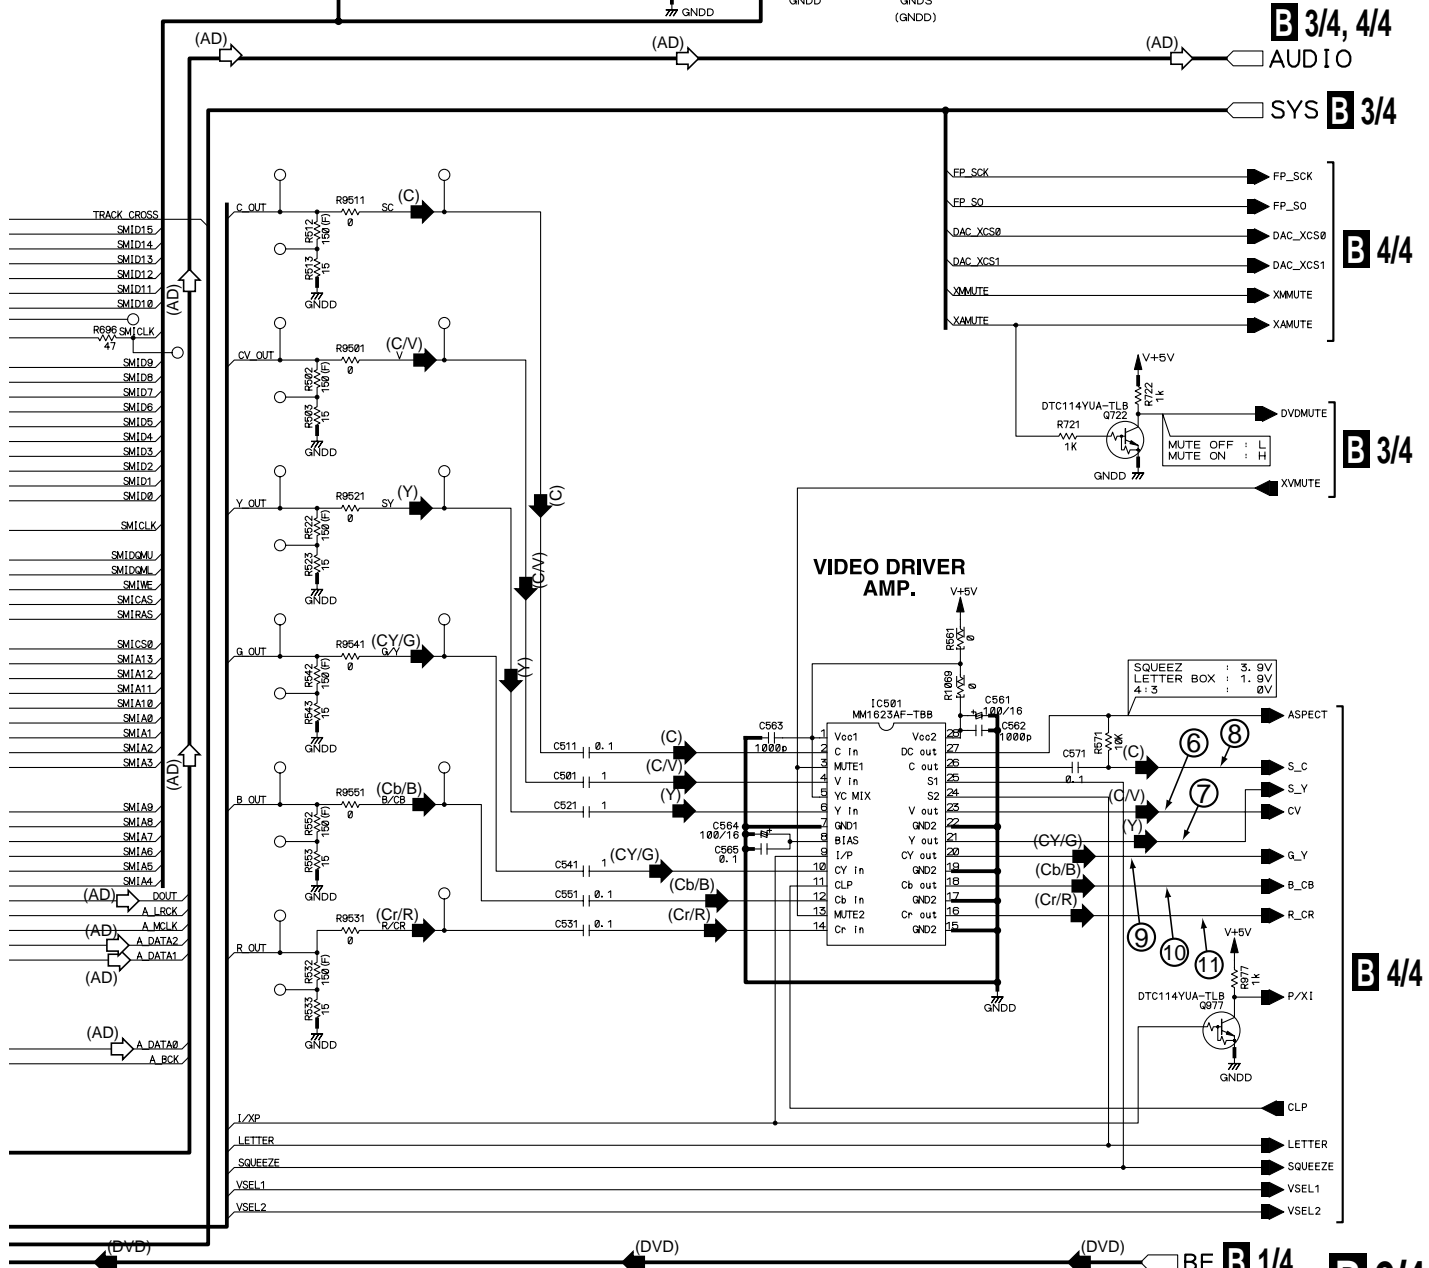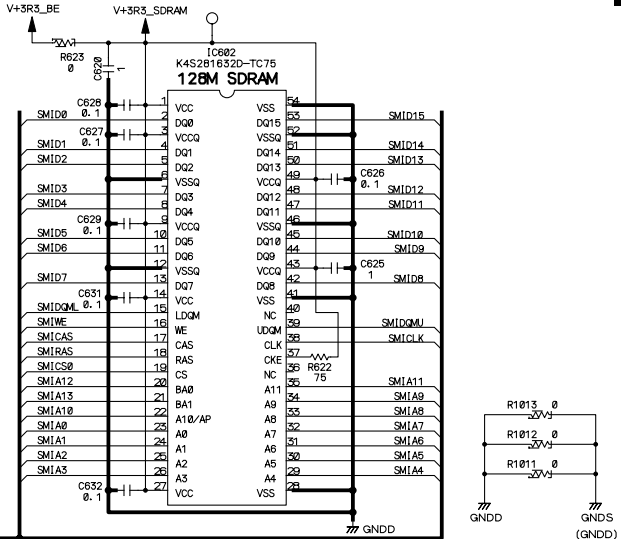

### 3.5 DVDM ASSY(3/4)

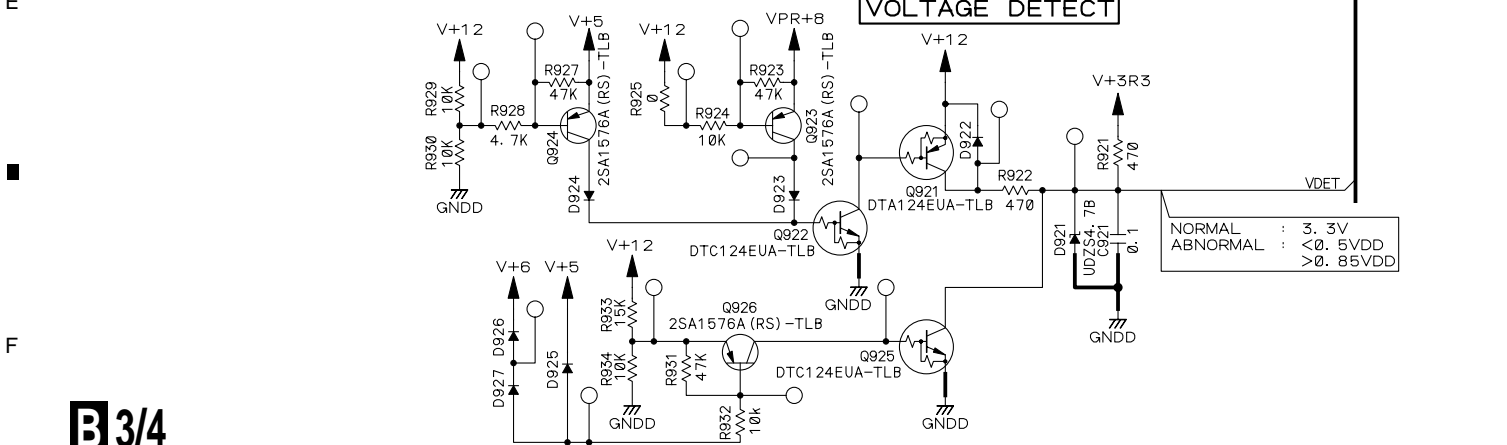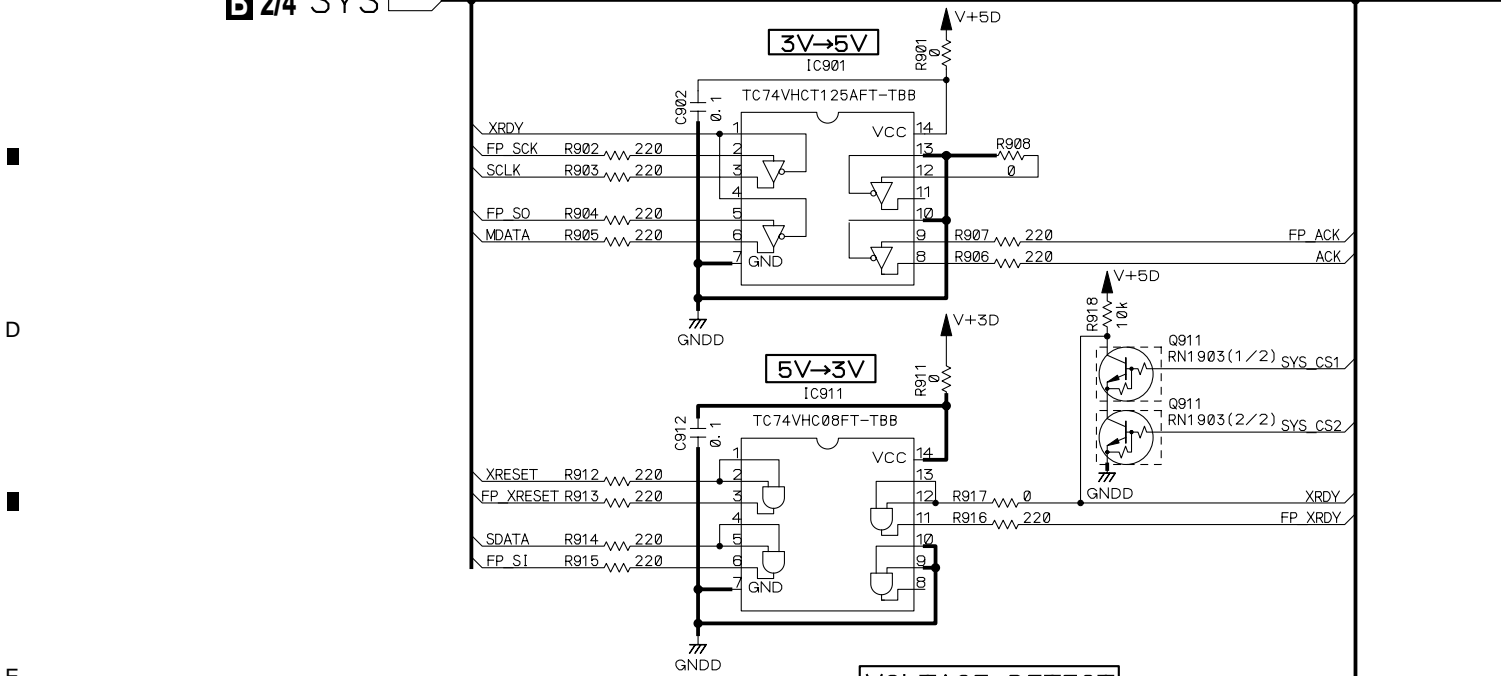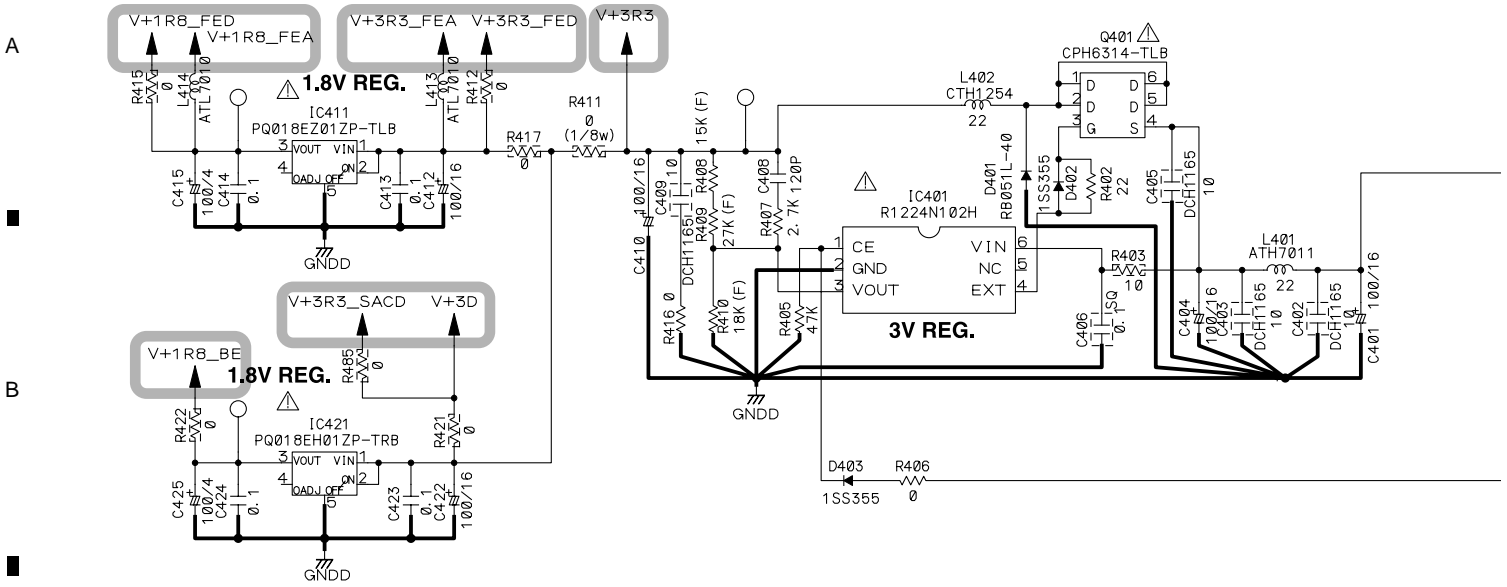


### B 3/4




# B 3/4 DVDM ASSY (AWM7813)

(AD) : AUDIO DATA SIGNAL ROUTE

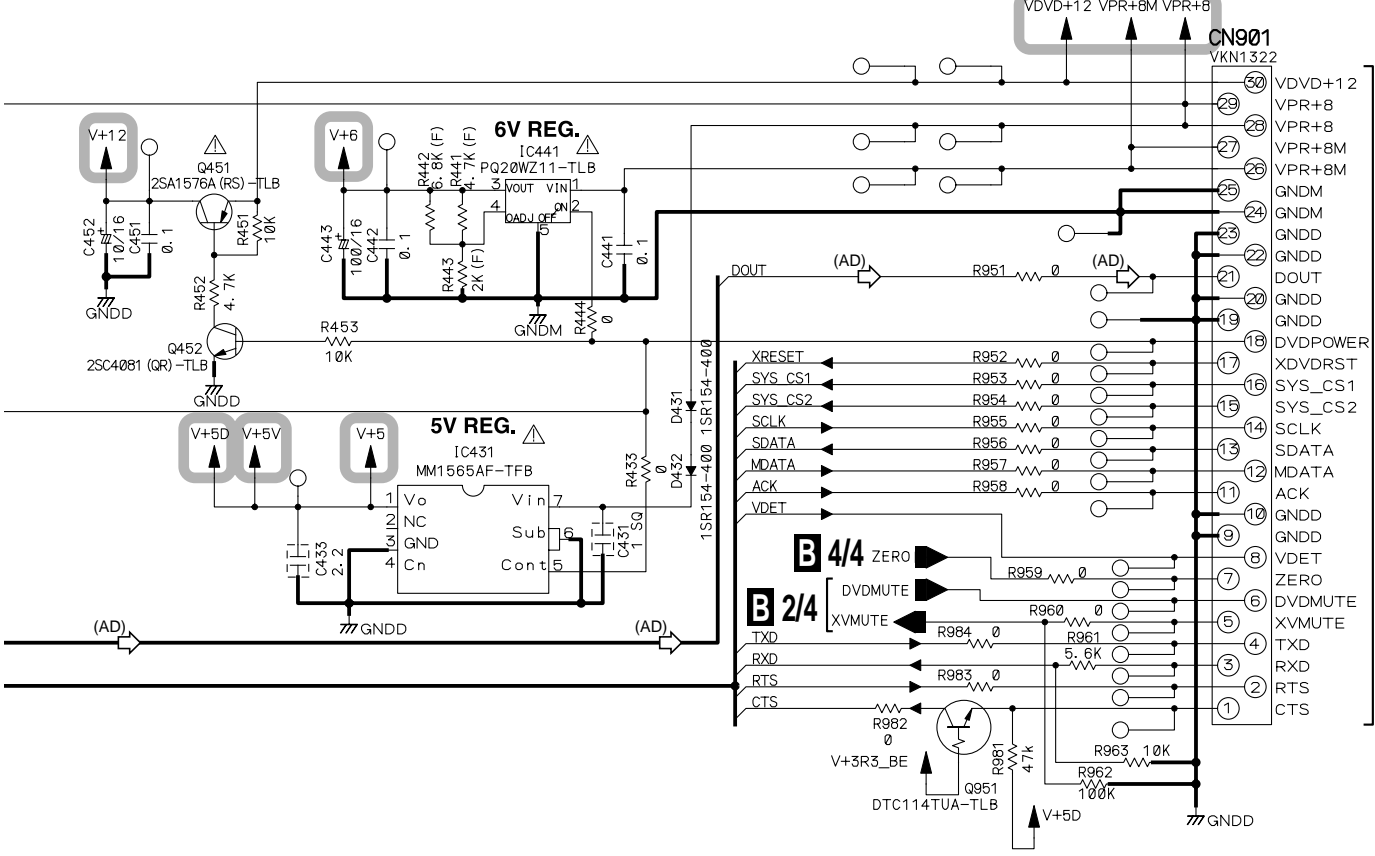

H 1/3 CN5604

for Checker




: The power supply is shown with the marked box.


# B 3/4

# 3.6 DVDM ASSY(4/4)

A

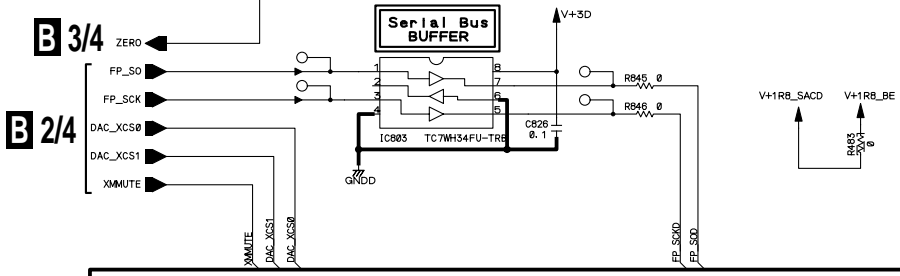

B

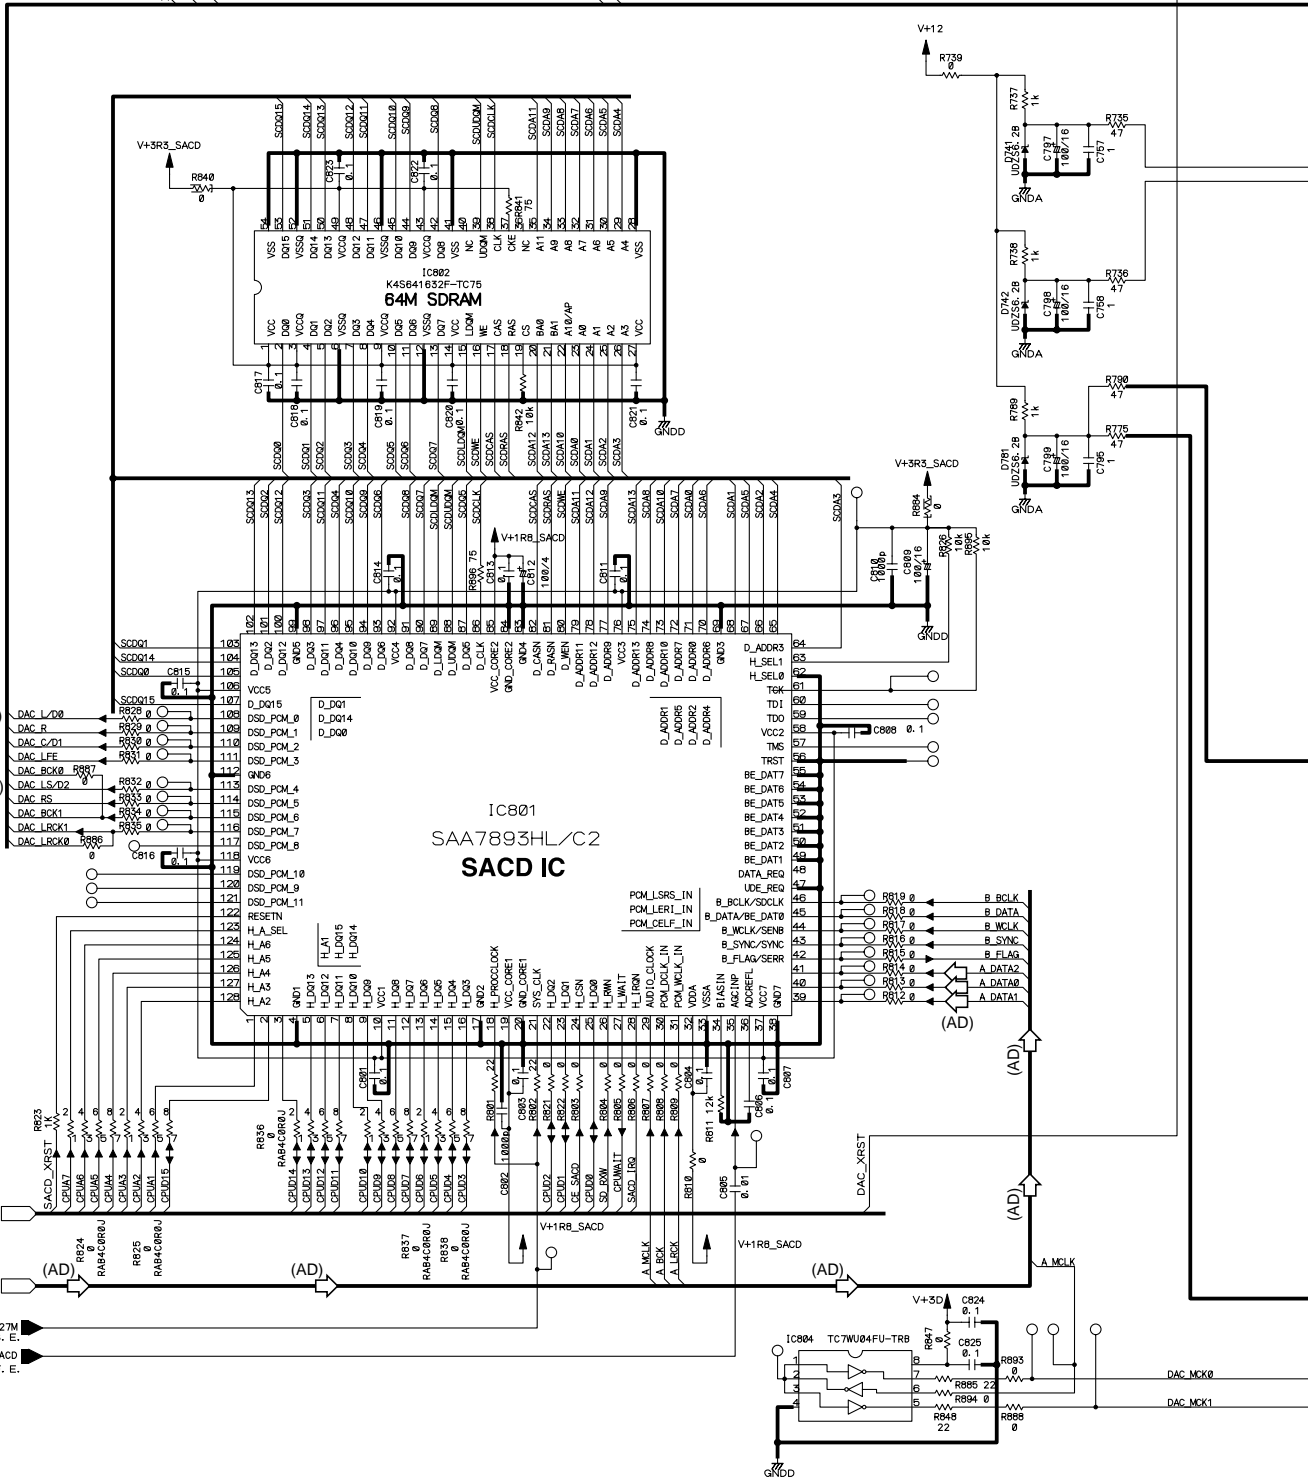

C

D

E

F

- B 2/4** BE2
- B 2/4, 3/4** AUDIO (AD)
- B 2/4** SACD 27M from B, E
- B 1/4** RF\_SACD from F, E
- B 4/4**


1

2

3

4


# B 4/4 DVDM ASSY (AWM7813)

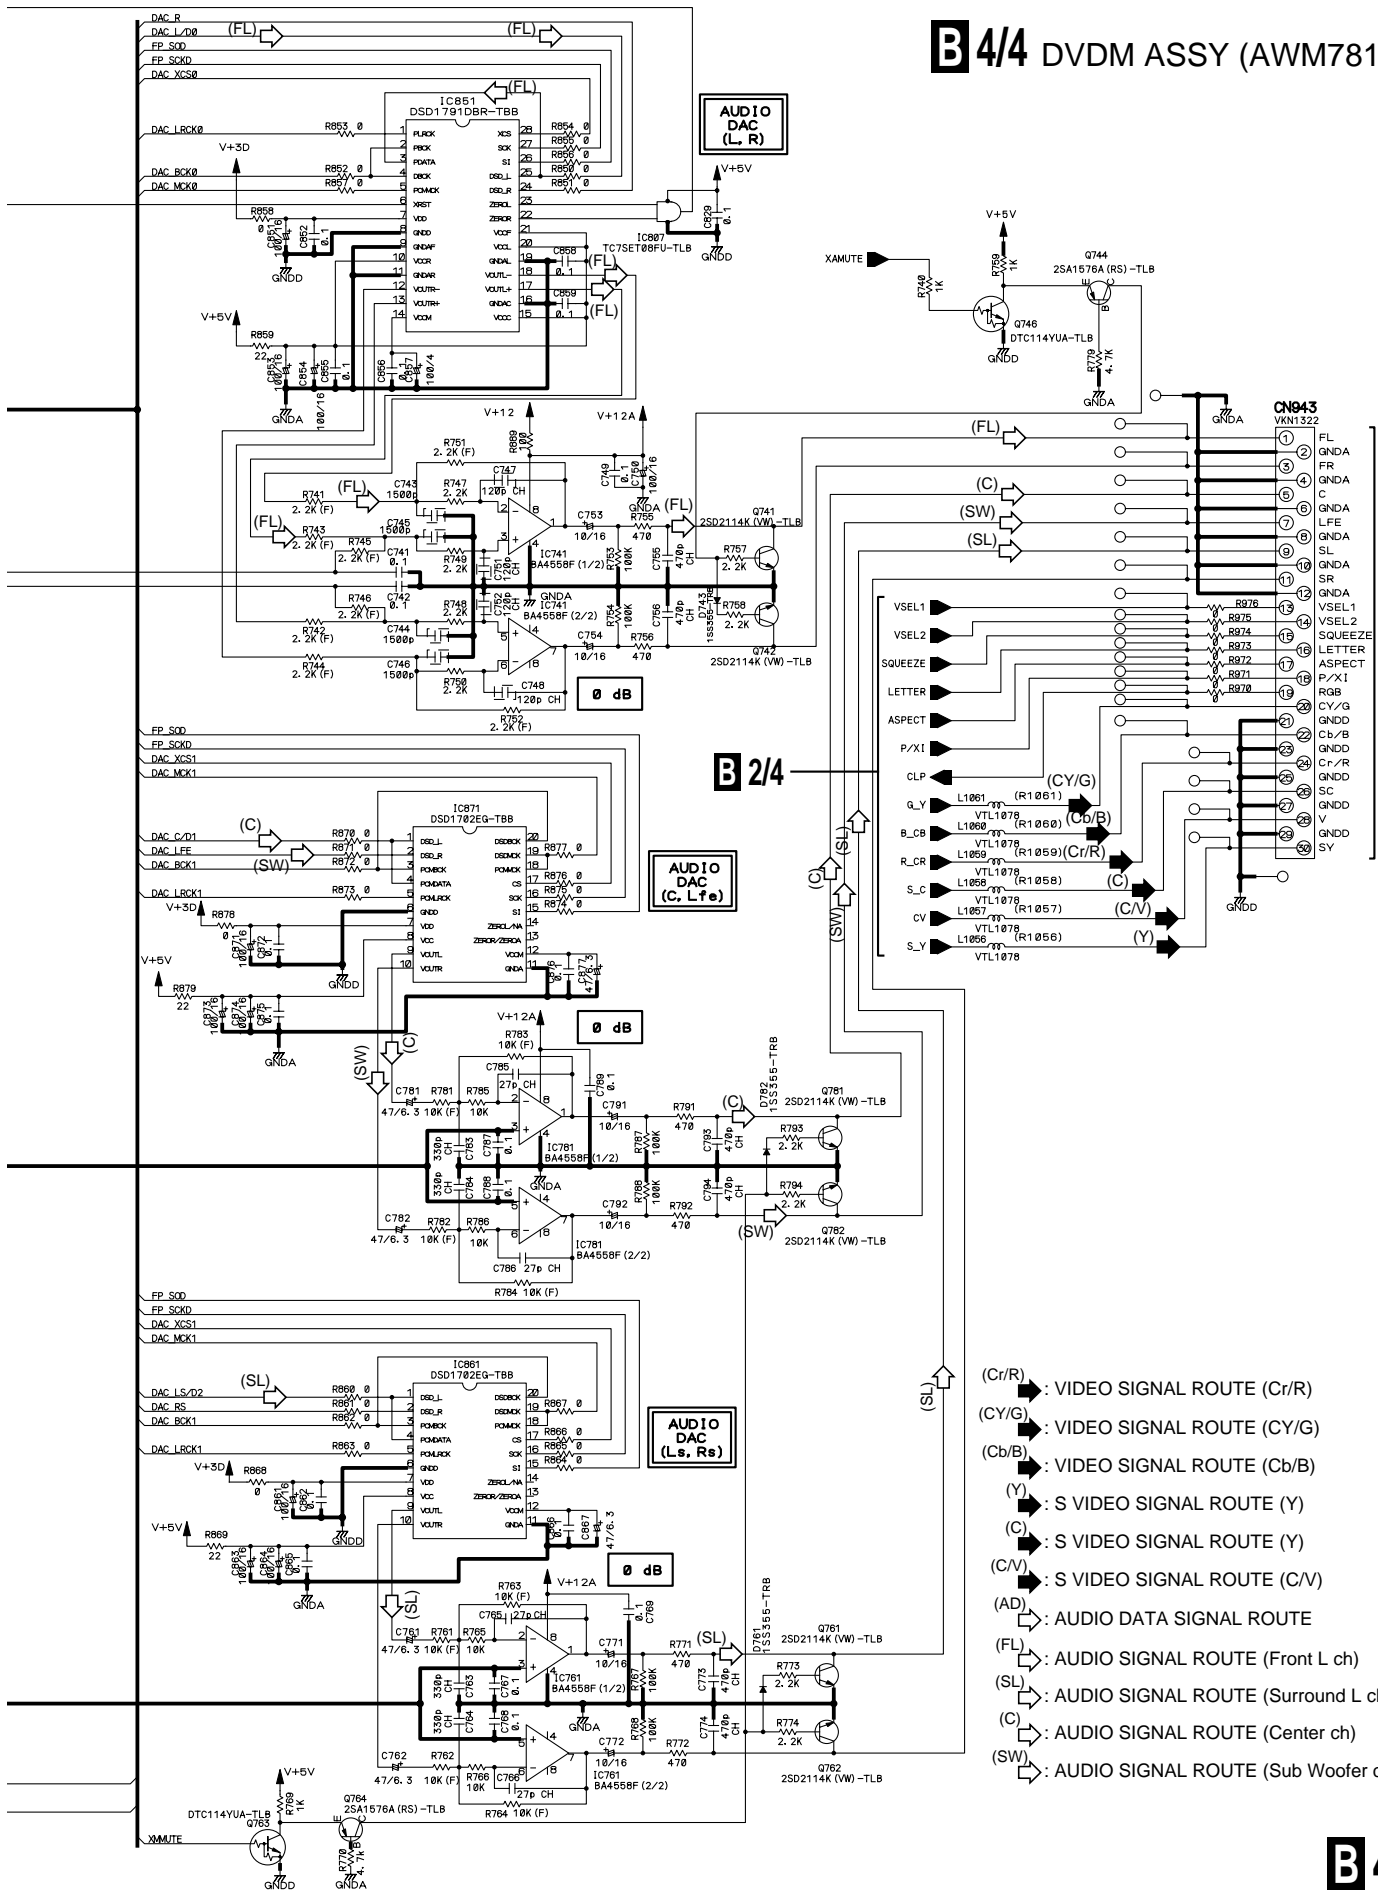

CN8301

- (Cr/R) : VIDEO SIGNAL ROUTE (Cr/R)
- (CY/G) : VIDEO SIGNAL ROUTE (CY/G)
- (Cb/B) : VIDEO SIGNAL ROUTE (Cb/B)
- (Y) : S VIDEO SIGNAL ROUTE (Y)
- (C) : S VIDEO SIGNAL ROUTE (Y)
- (C/V) : S VIDEO SIGNAL ROUTE (C/V)
- (AD) : AUDIO DATA SIGNAL ROUTE
- (FL) : AUDIO SIGNAL ROUTE (Front L ch)
- (SL) : AUDIO SIGNAL ROUTE (Surround L ch)
- (C) : AUDIO SIGNAL ROUTE (Center ch)
- (SW) : AUDIO SIGNAL ROUTE (Sub Woofer ch)


# 3.7 VIDEO and DSP TRADE ASSYS

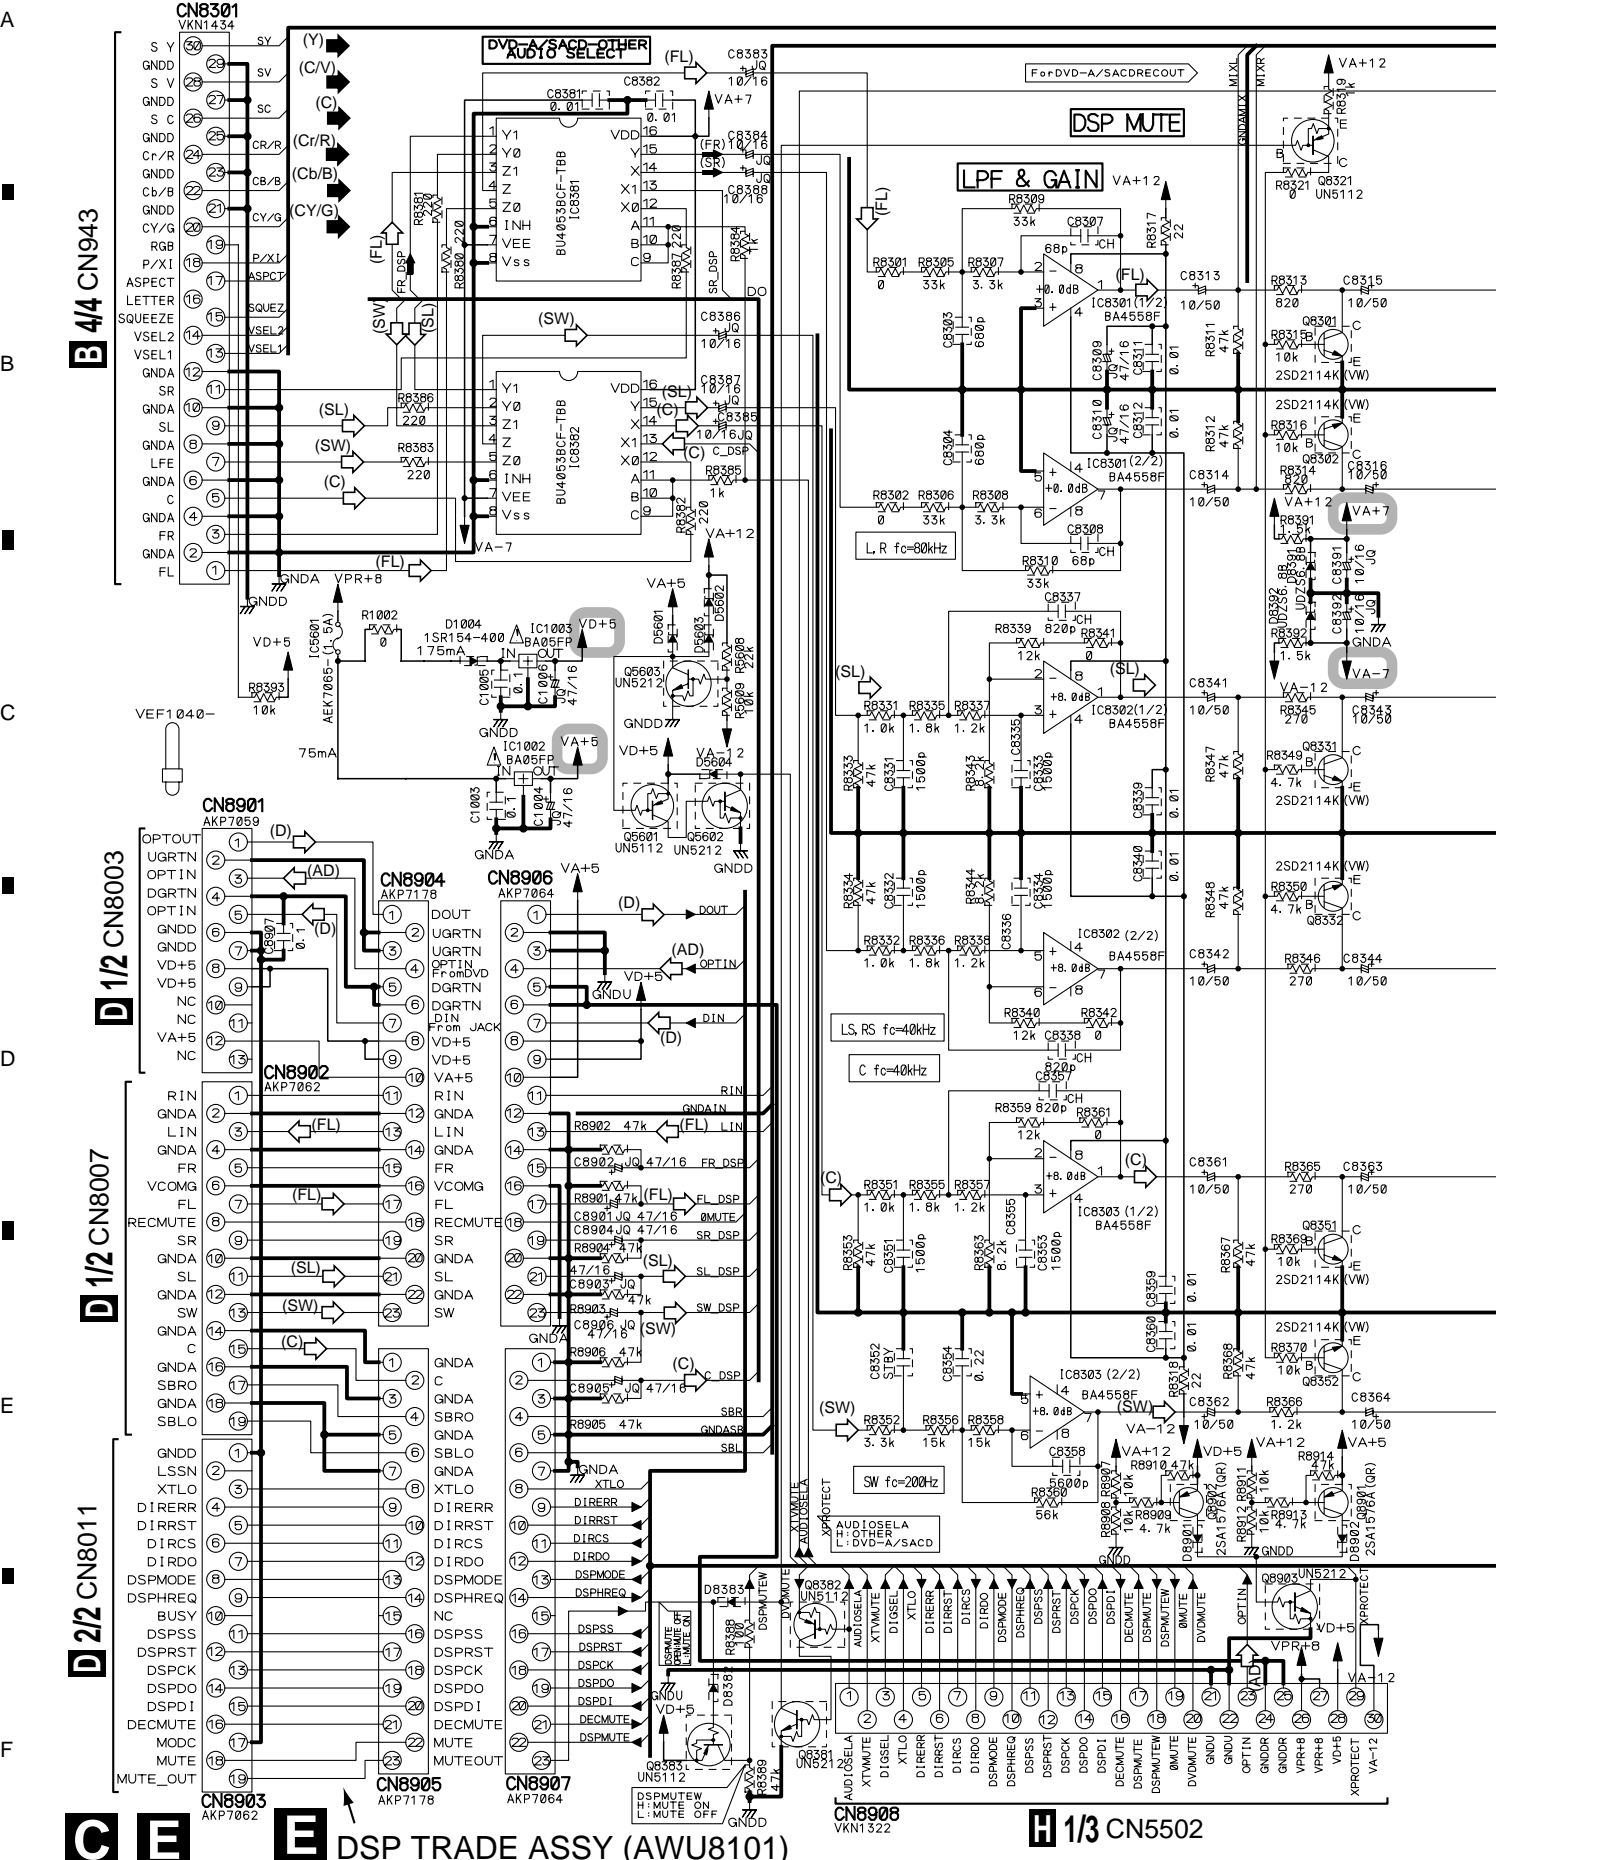

DSP TRADE ASSY (AWU8101)

# C VIDEO ASSY (AWU8100)

**O** : The power supply is shown with the marked box.

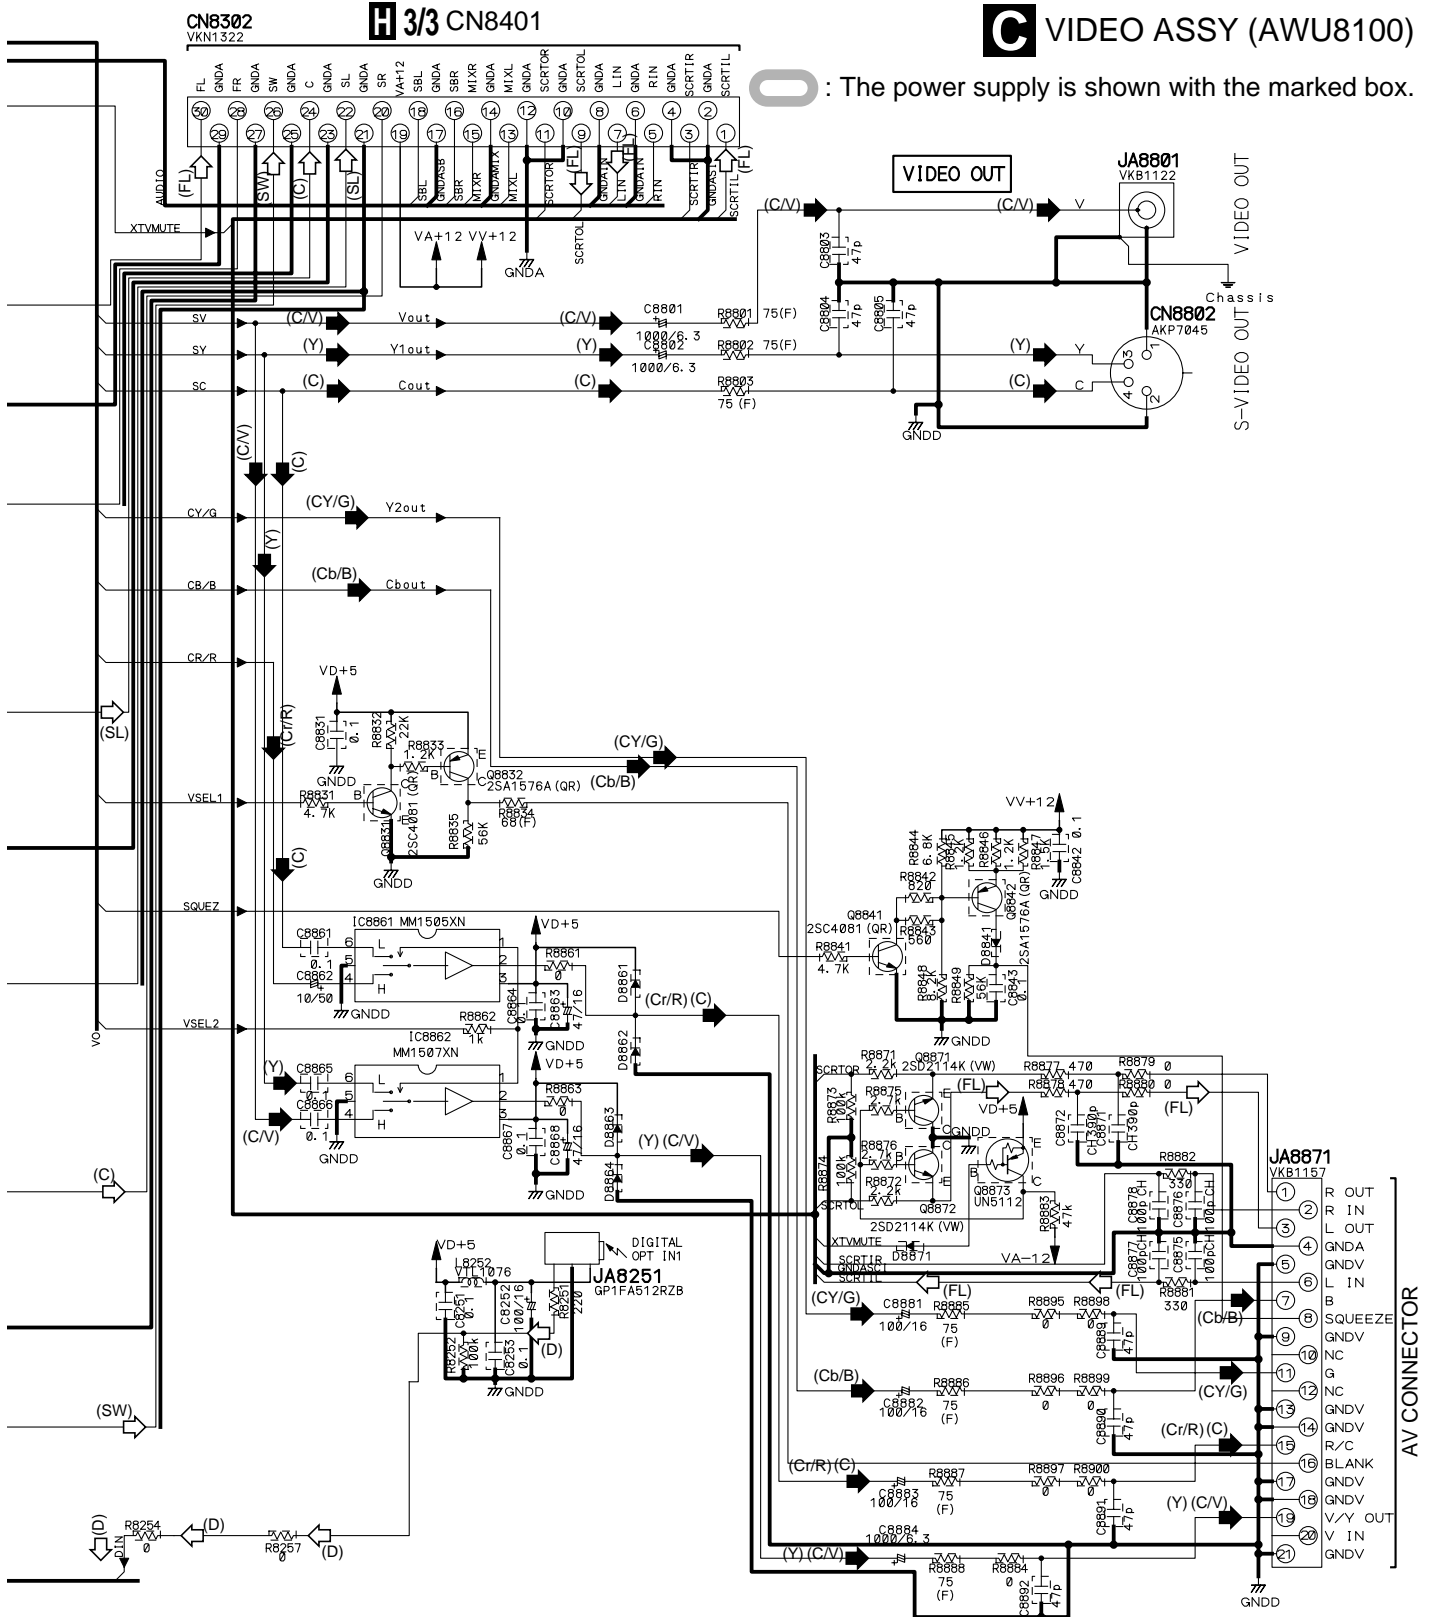




**CAUTION :**  
 FOR CONTINUED PROTECTION AGAINST  
 RISK OF FIRE. REPLACE ONLY WITH  
 SAME TYPE NO. 49101.5F MFD. BY  
 LITTELFUSE INK. FOR IC5601 (AEK7065).

- (Cr/R) : VIDEO SIGNAL ROUTE (Cr/R)
- (CY/G) : VIDEO SIGNAL ROUTE (CY/G)
- (Cb/B) : VIDEO SIGNAL ROUTE (Cb/B)
- (Y) : S VIDEO SIGNAL ROUTE (Y)
- (C) : S VIDEO SIGNAL ROUTE (Y)
- (C/V) : S VIDEO SIGNAL ROUTE (C/V)
- (FL) : AUDIO SIGNAL ROUTE (Front L ch)
- (SL) : AUDIO SIGNAL ROUTE (Surround L ch)
- (C) : AUDIO SIGNAL ROUTE (Center ch)
- (SW) : AUDIO SIGNAL ROUTE (Sub Woofer ch)
- (D) : AUDIO SIGNAL ROUTE (DIGITAL ch)
- (AD) : AUDIO DATA SIGNAL ROUTE


# 3.8 DSP ASSY(1/2)

## D 1/2 DSP ASSY (AWX8325)


- (AD) : AUDIO DATA SIGNAL ROUTE
- (FL) : AUDIO SIGNAL ROUTE (Front L ch)
- (SL) : AUDIO SIGNAL ROUTE (Surround L ch)
- (C) : AUDIO SIGNAL ROUTE (Center ch)
- (SW) : AUDIO SIGNAL ROUTE (Sub Woofer ch)
- (D) : AUDIO SIGNAL ROUTE (DIGITAL)

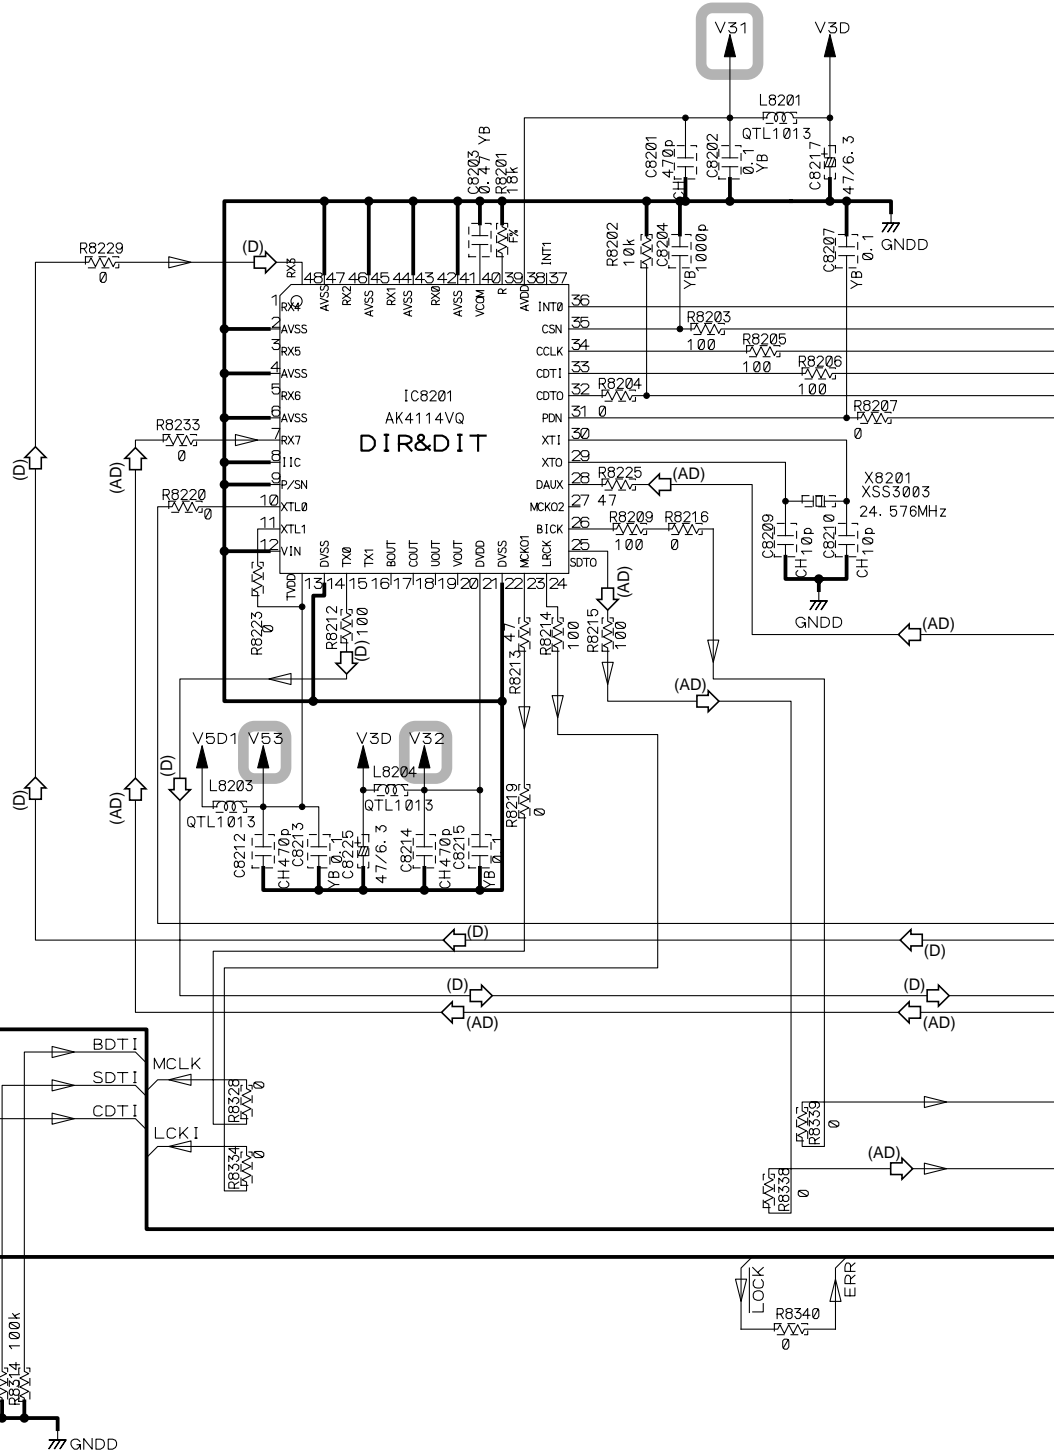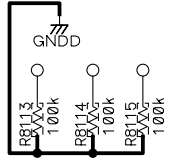

- D 2/2 MD
- D 2/2 MC
- D 2/2 IE

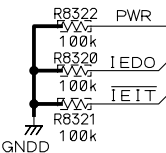

## D 1/2

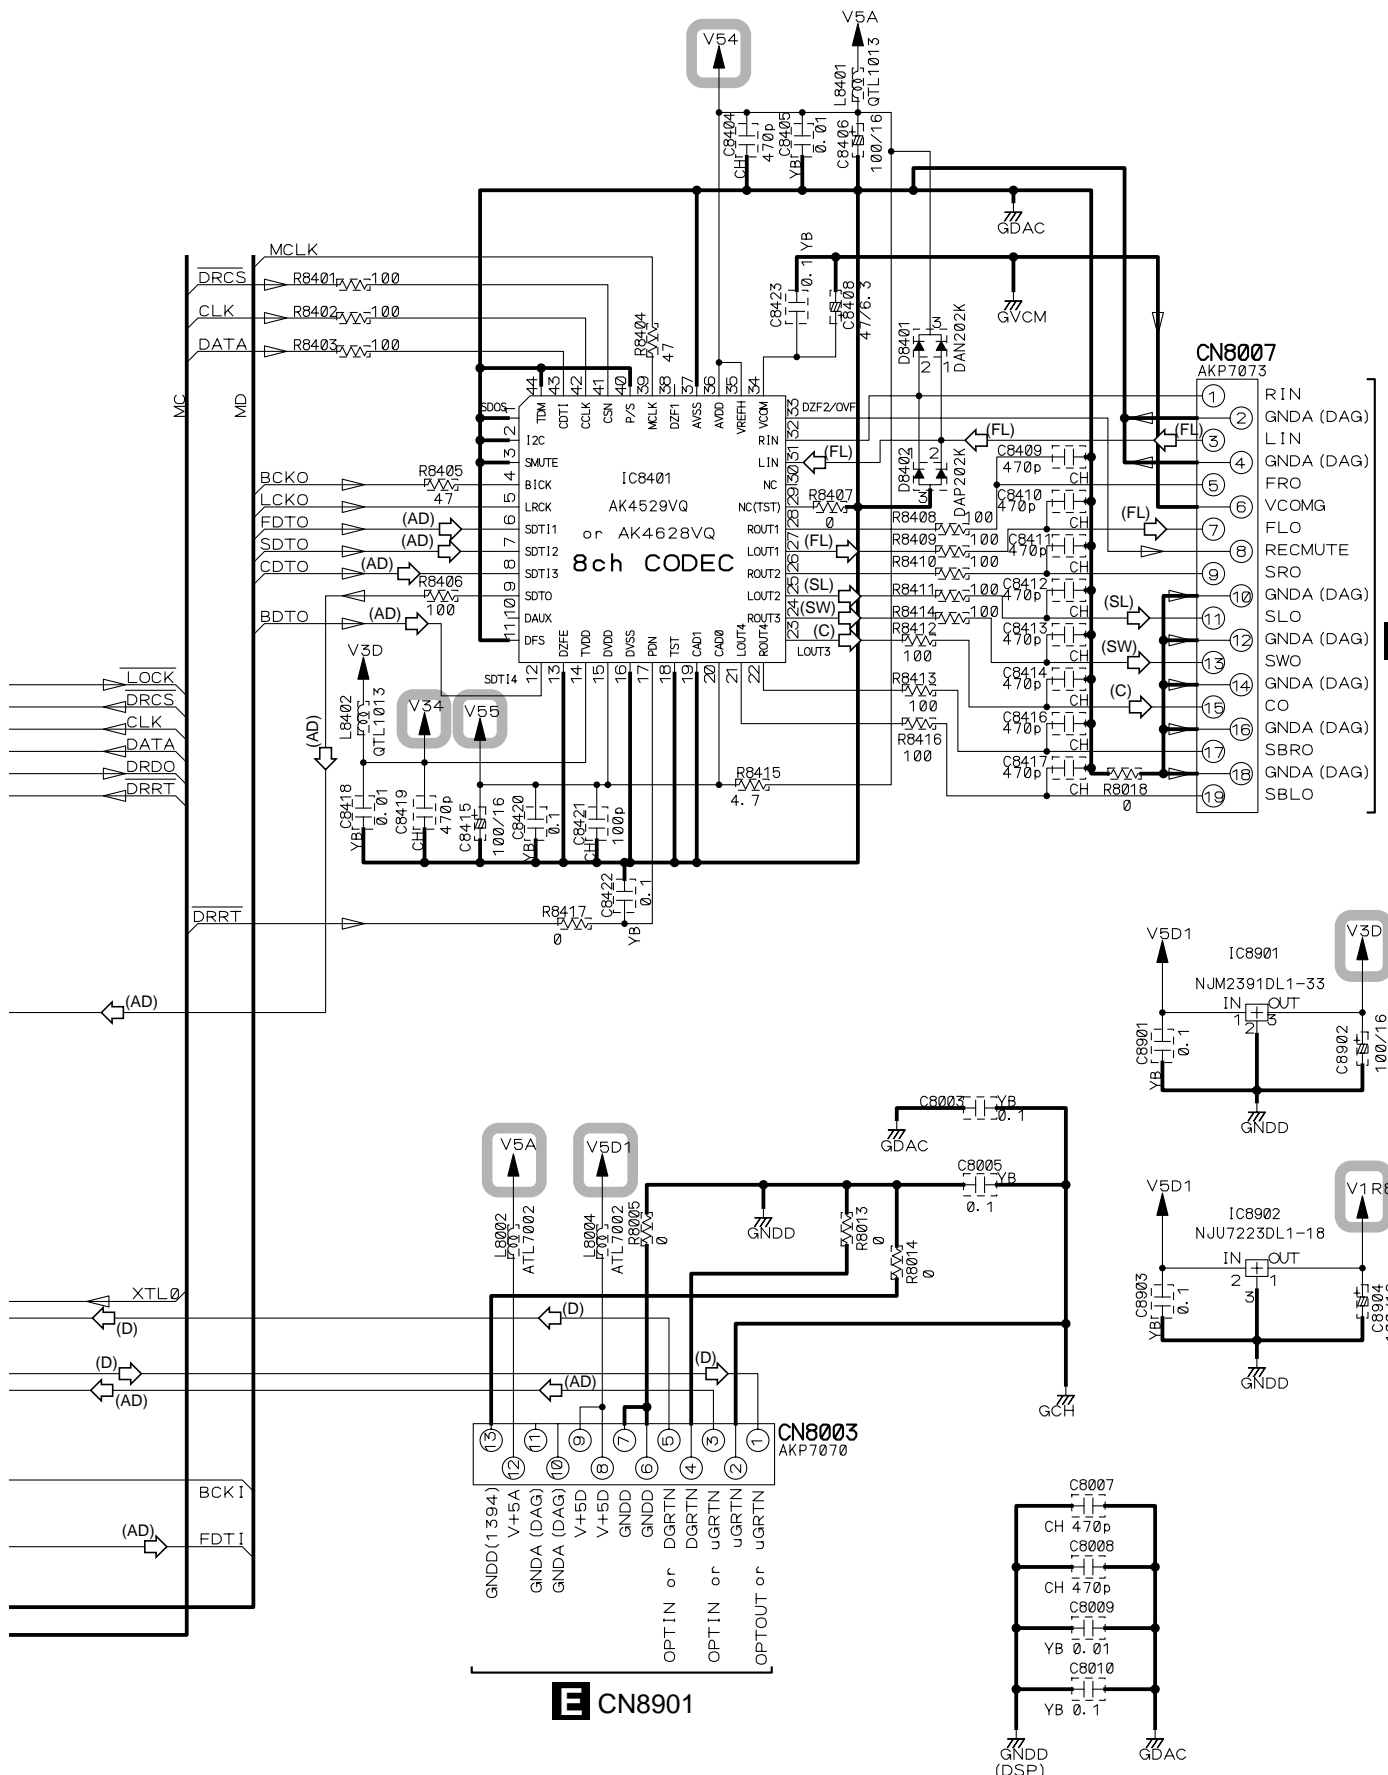


: The power supply is shown with the marked box.

**D** 1/2





(AD) : AUDIO DATA SIGNAL ROUTE

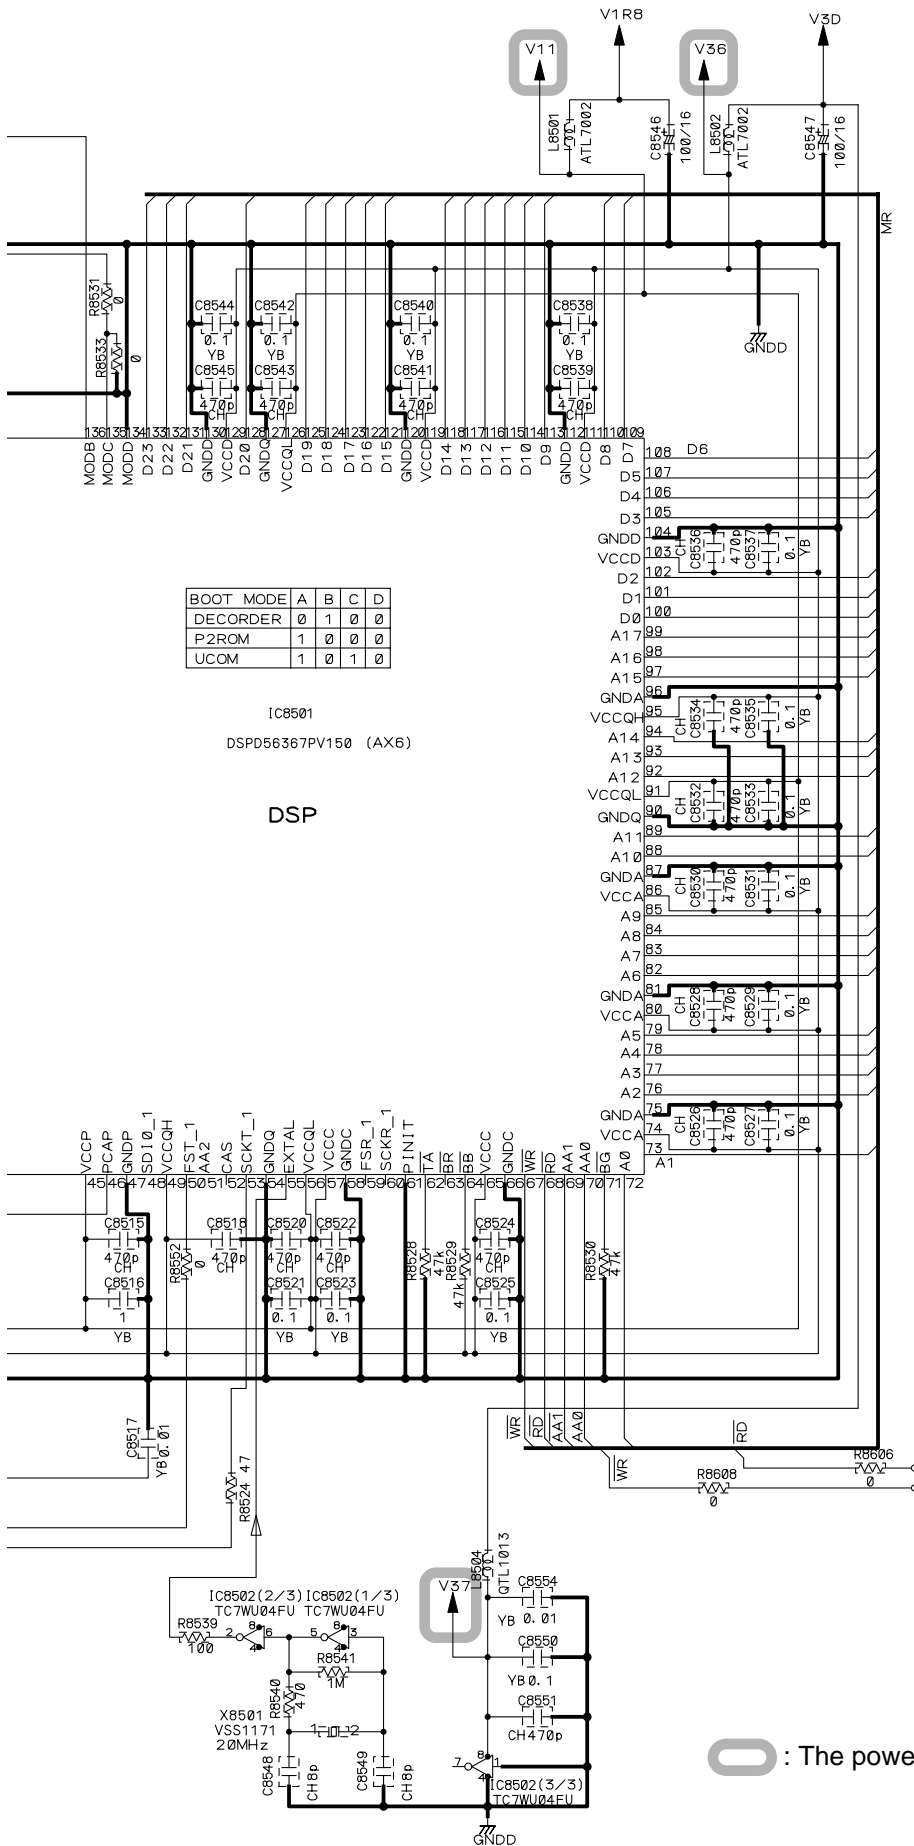

○ : The power supply is shown with the marked box.

# 3.10 FM/AM TUNER MODULE

## Notes

### 1. RESISTORS

Indicated in  $\Omega$ ,  $1/16W \pm 5\%$  Tolerance unless otherwise noted K:K $\Omega$ , M:M $\Omega$ .


### 2. CAPACITORS


Indicated in Capacity ( $\mu F$ )/VOLTAGE (V) unless otherwise noted P:PF.

### 3. DIODES

No mark diode is 1SS133.

## FM/AM TUNER MODULE (AXQ7229)

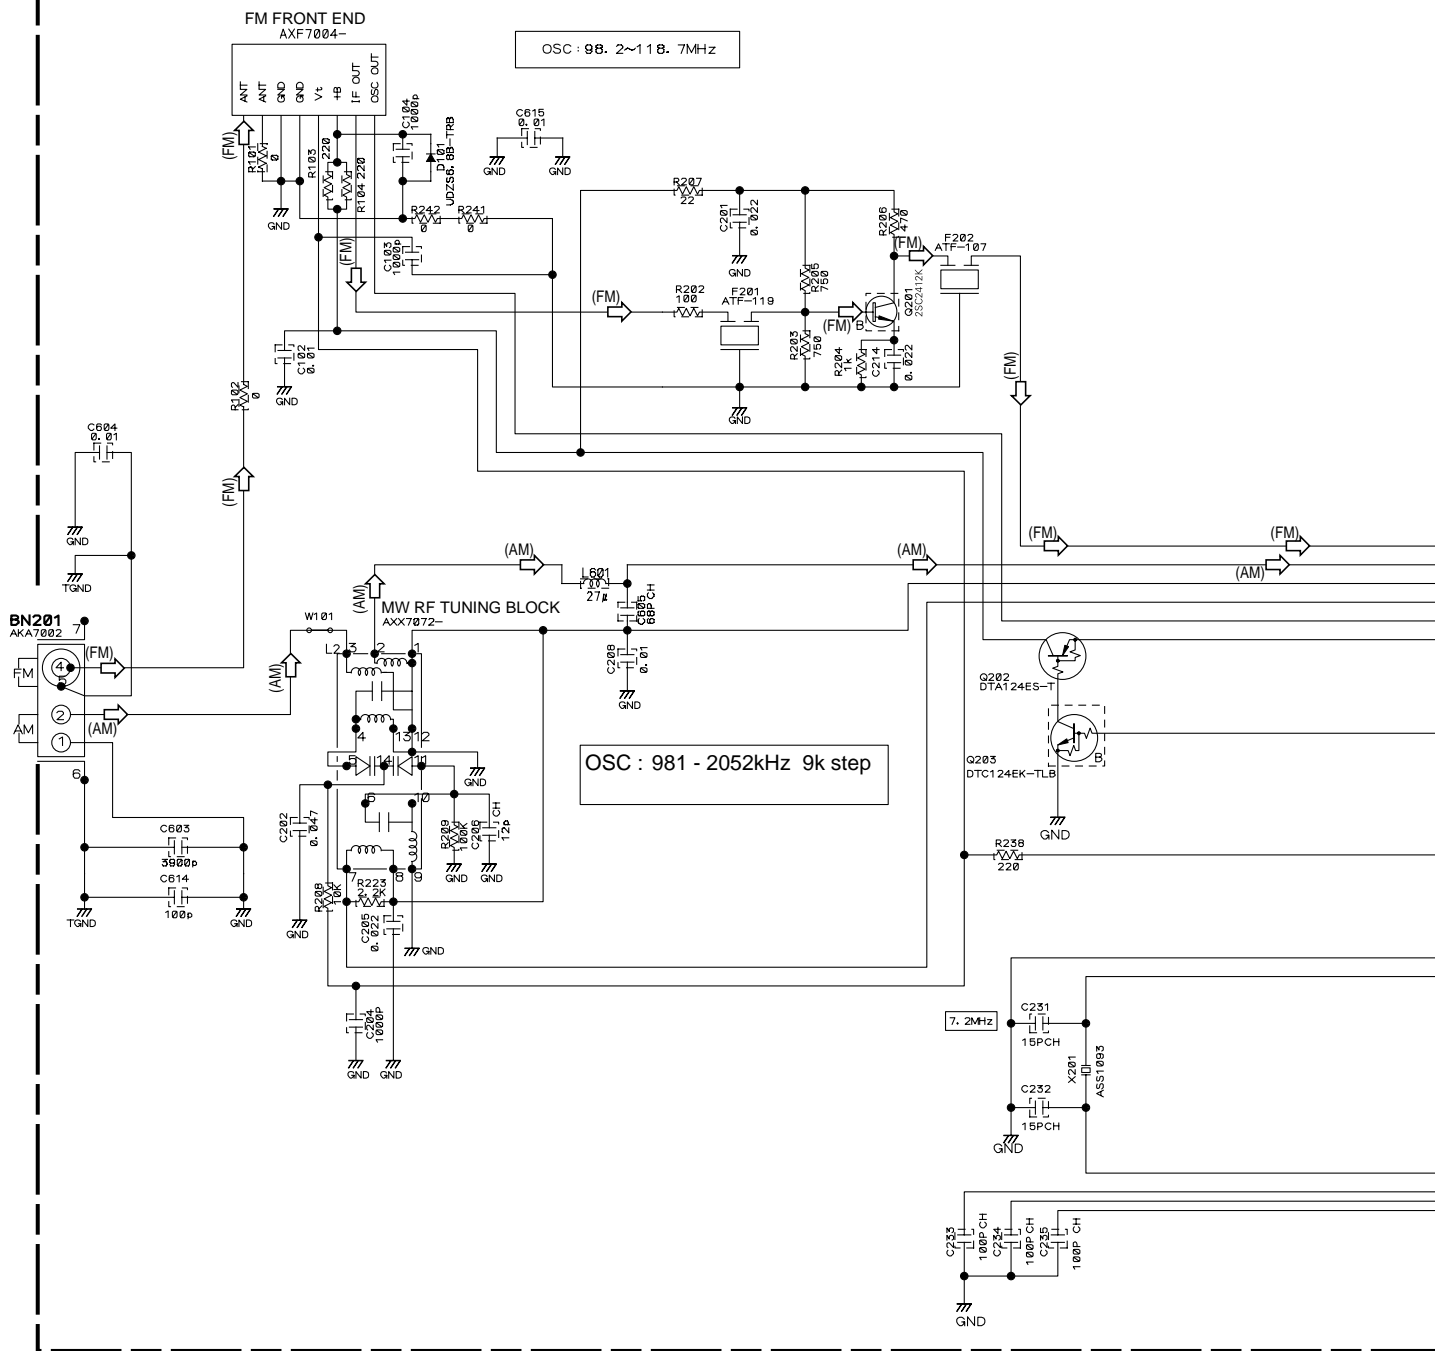


 : The power supply is shown with the marked box.

 : AUDIO SIGNAL ROUTE (Tuner L ch)

 : AM SIGNAL ROUTE


 : FM SIGNAL ROUTE

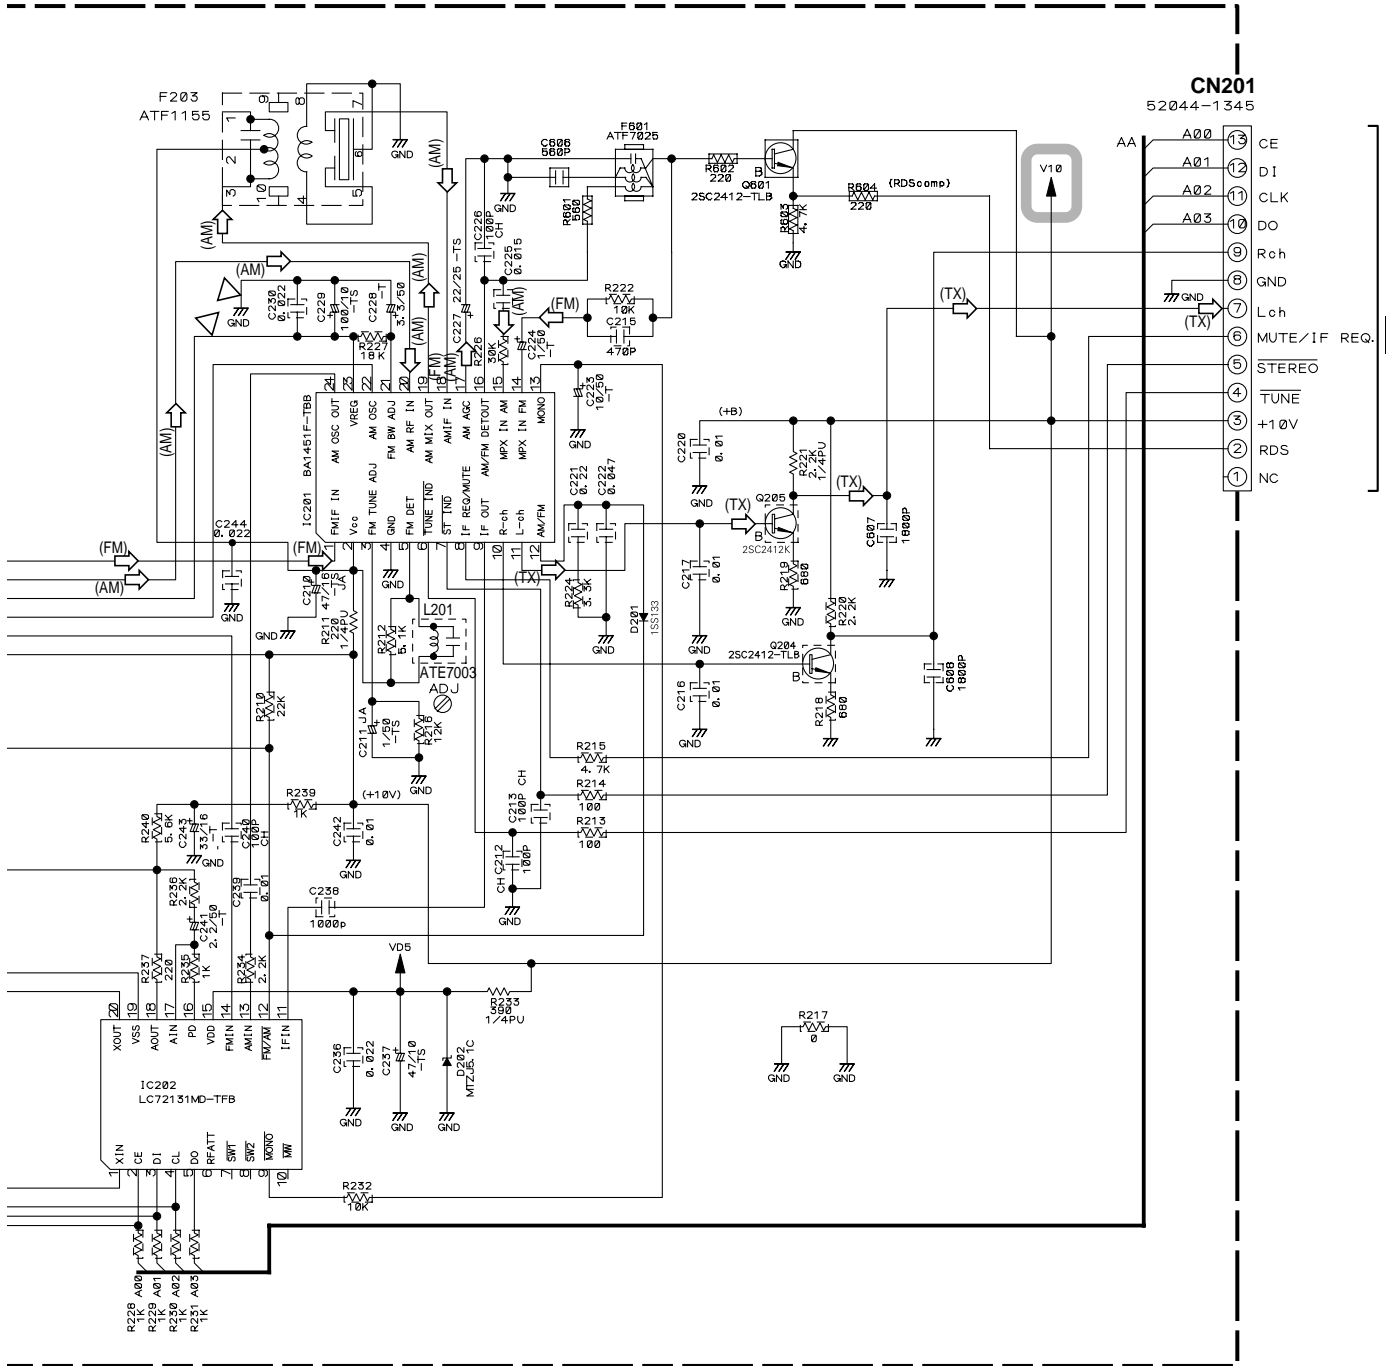


 CN5702


13	CE
12	DI
11	CLK
10	DO
9	Rch
8	GND
7	Lch
6	MUTE/IF REQ.
5	STEREO
4	TUNE
3	+10V
2	RDS
1	NC

# 3.11 TATRADE and CONTROL(1/3) ASSYS

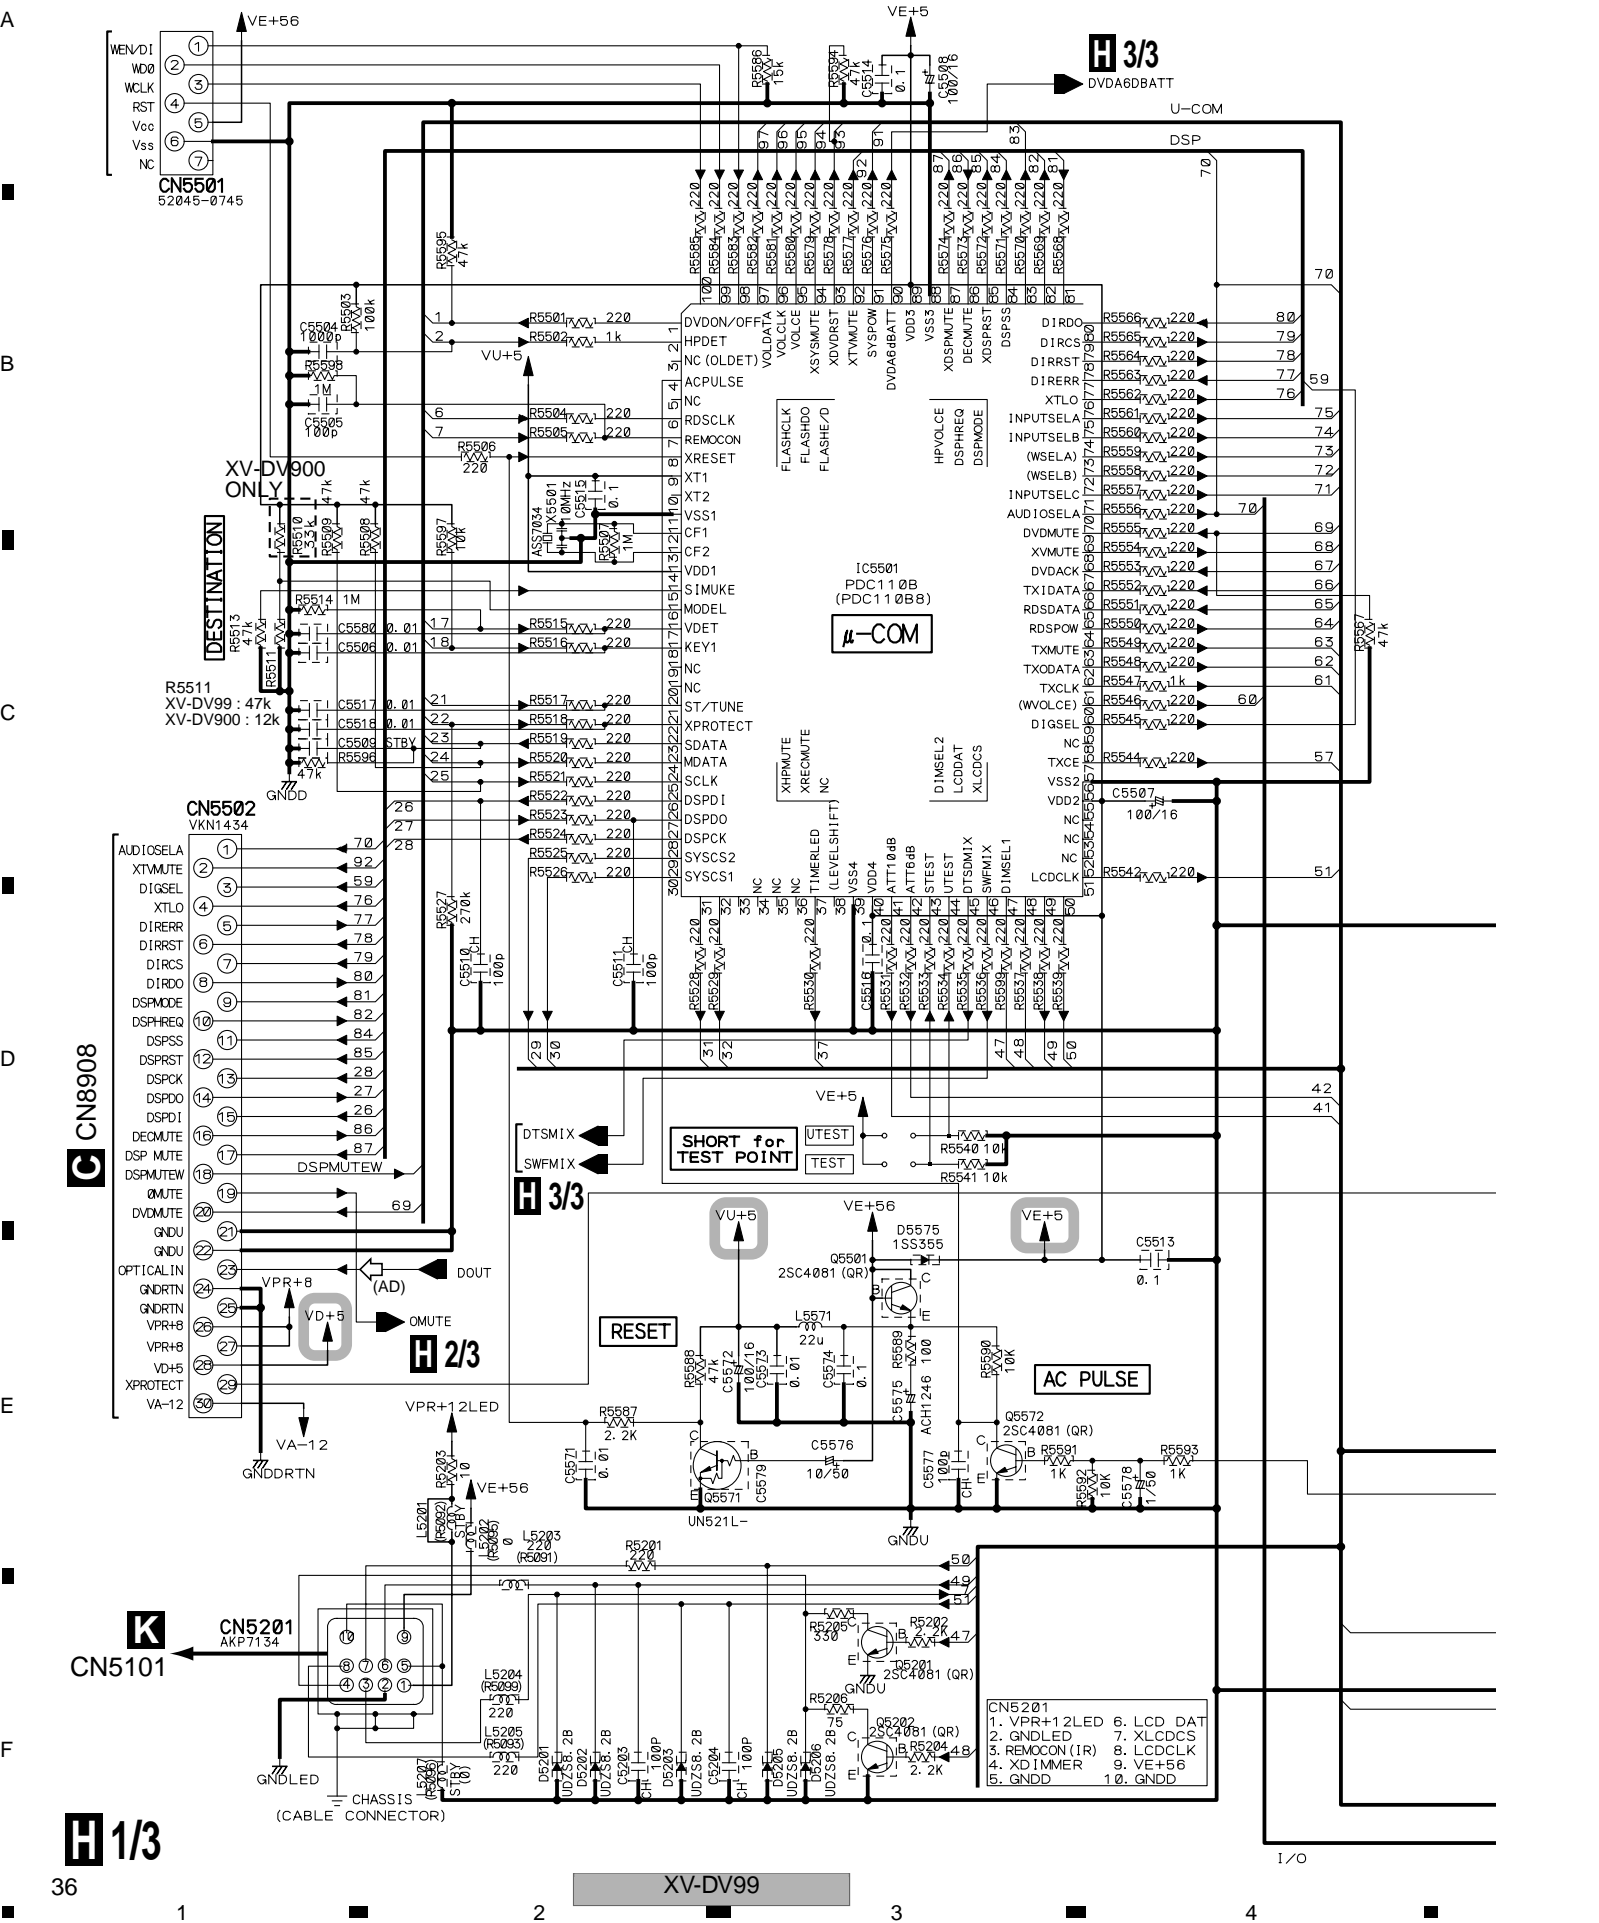


 : The power supply is shown with the marked box.

# G TXTRADE ASSY (AWU8114)

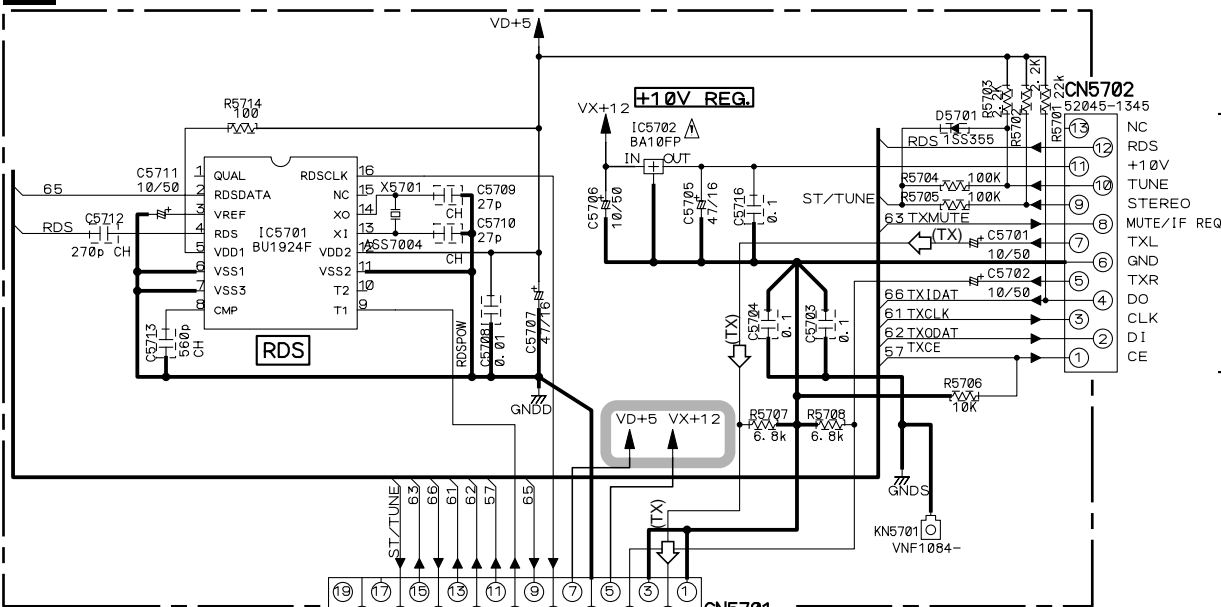

# H 1/3 CONTROL ASSY (XV-DV99 : AWU8099)

# H 2/3 (XV-DV990 : AWU8148)

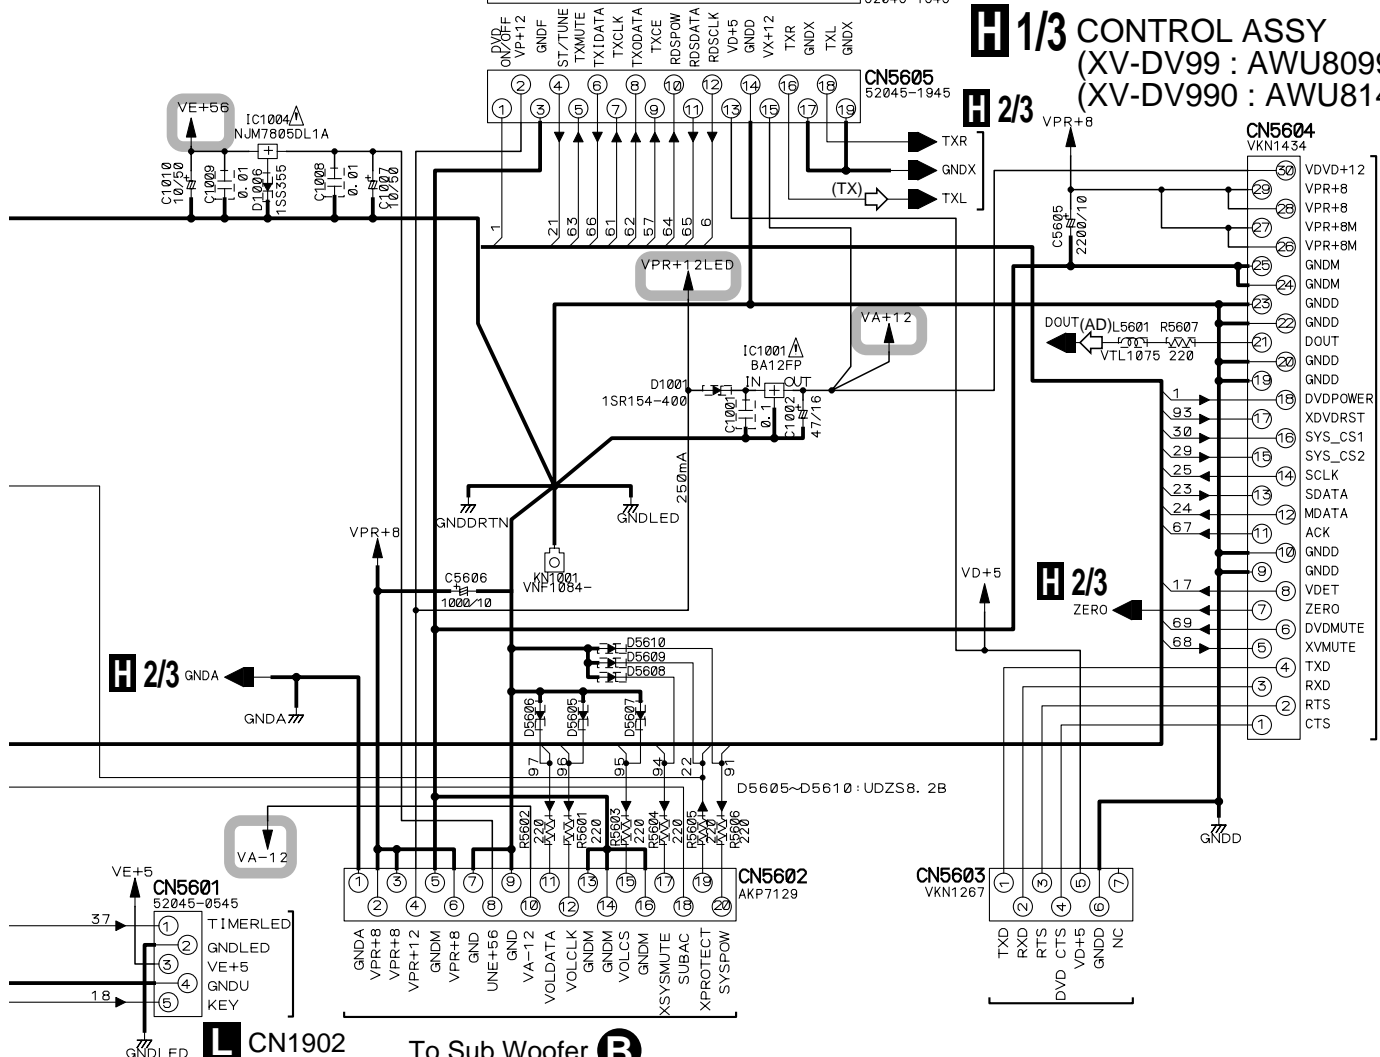

# H 2/3 GND A

# L CN1902

To Sub Woofer **B**

U-COM **H 2/3, 3/3**

I/O **H 3/3**

(AD) : AUDIO DATA SIGNAL ROUTE


(TX) : AUDIO SIGNAL ROUTE (Tuner L ch)

# G H 1/3


### 3.12 CONTROL(2/3) and HP ASSYS

A


	INPUT SELA	INPUT SELB	INPUT SELC
SCART	L	L	H
TV	L	L	L
LINE1	H	L	L
LINE2	L	H	L
TUNER	H	H	L

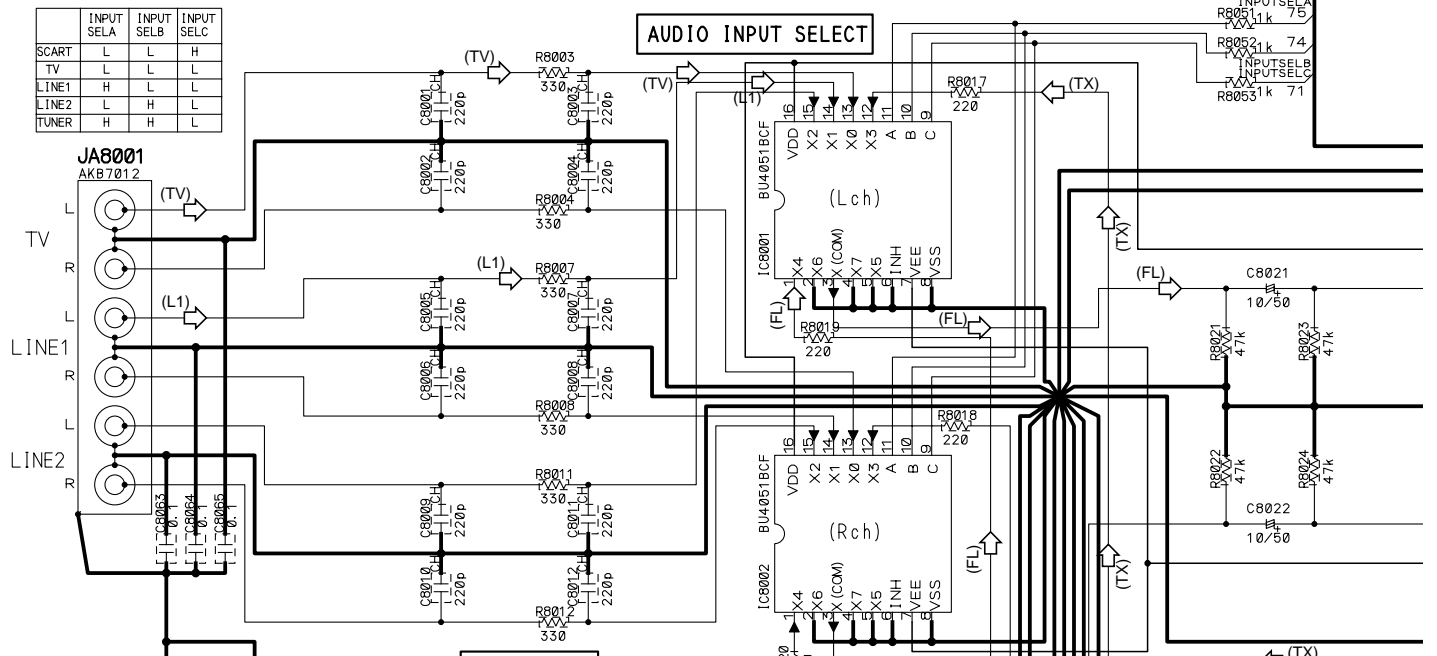


B

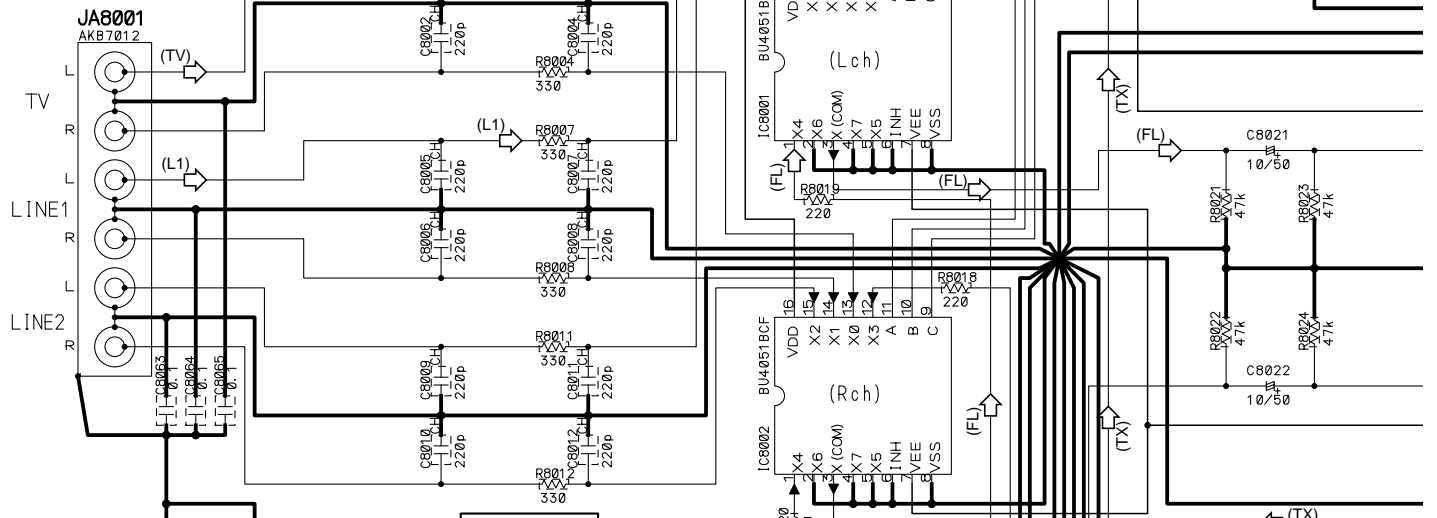


C

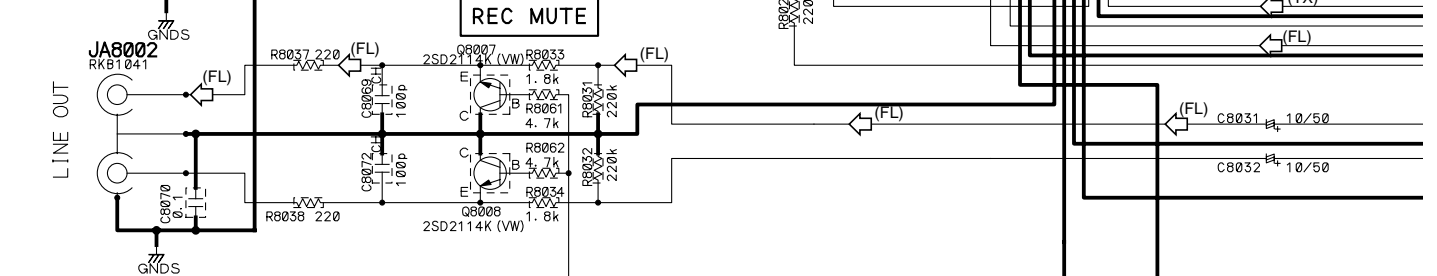

D

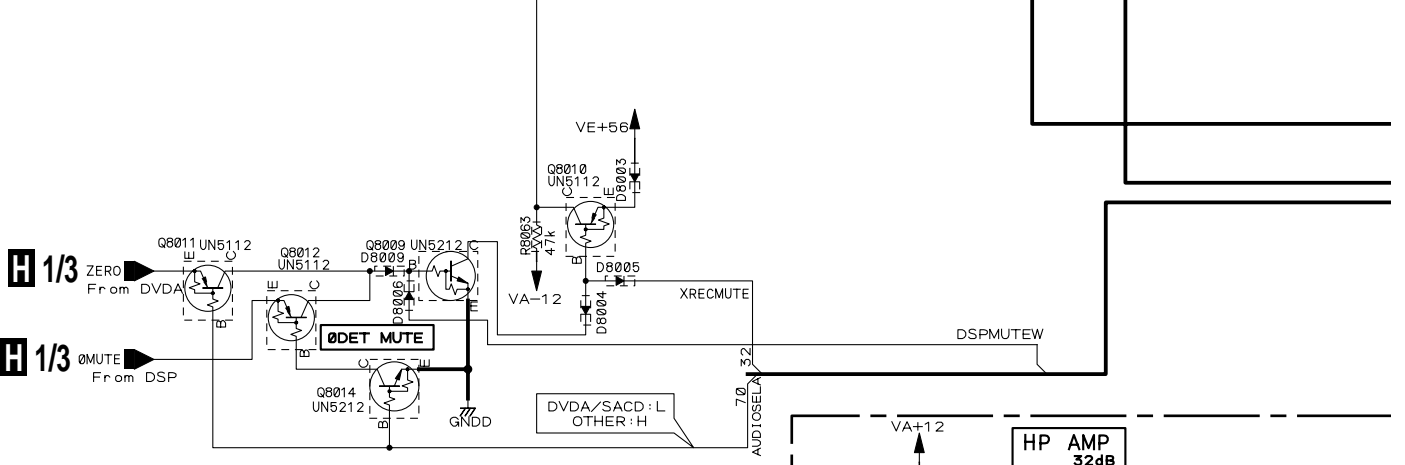

E

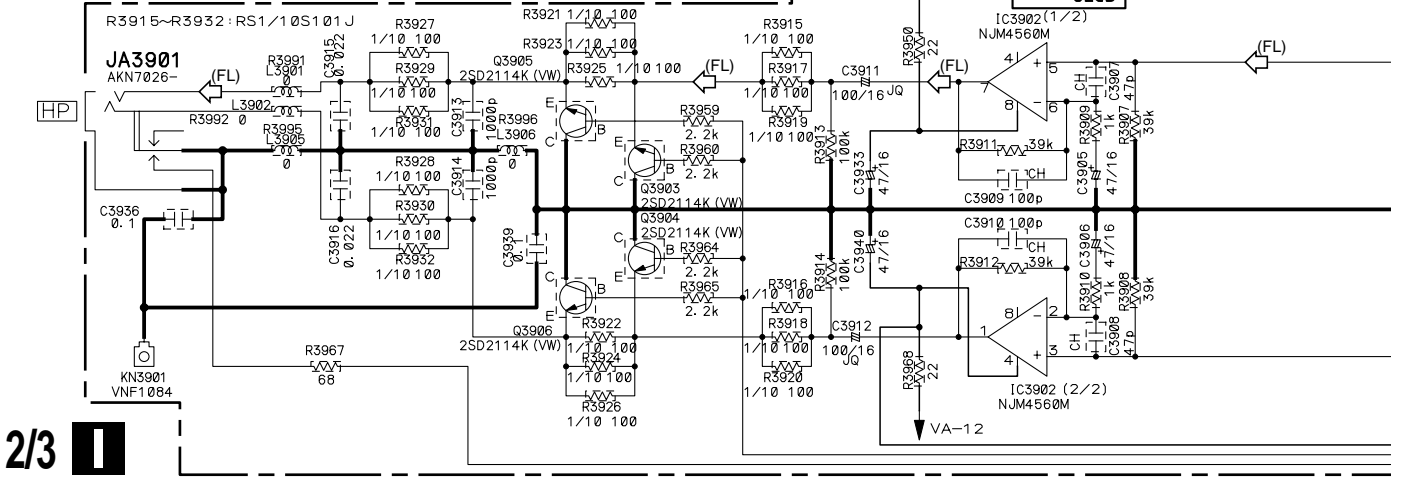


F



- (FL) : AUDIO SIGNAL ROUTE (Front L ch)
- (TV) : AUDIO SIGNAL ROUTE (TV L ch)
- (L1) : AUDIO SIGNAL ROUTE (LINE 1 L ch)
- (TX) : AUDIO SIGNAL ROUTE (Tuner L ch)

# H 2/3 CONTROL ASSY (XV-DV99 : AWU8099) (XV-DV990 : AWU8148)

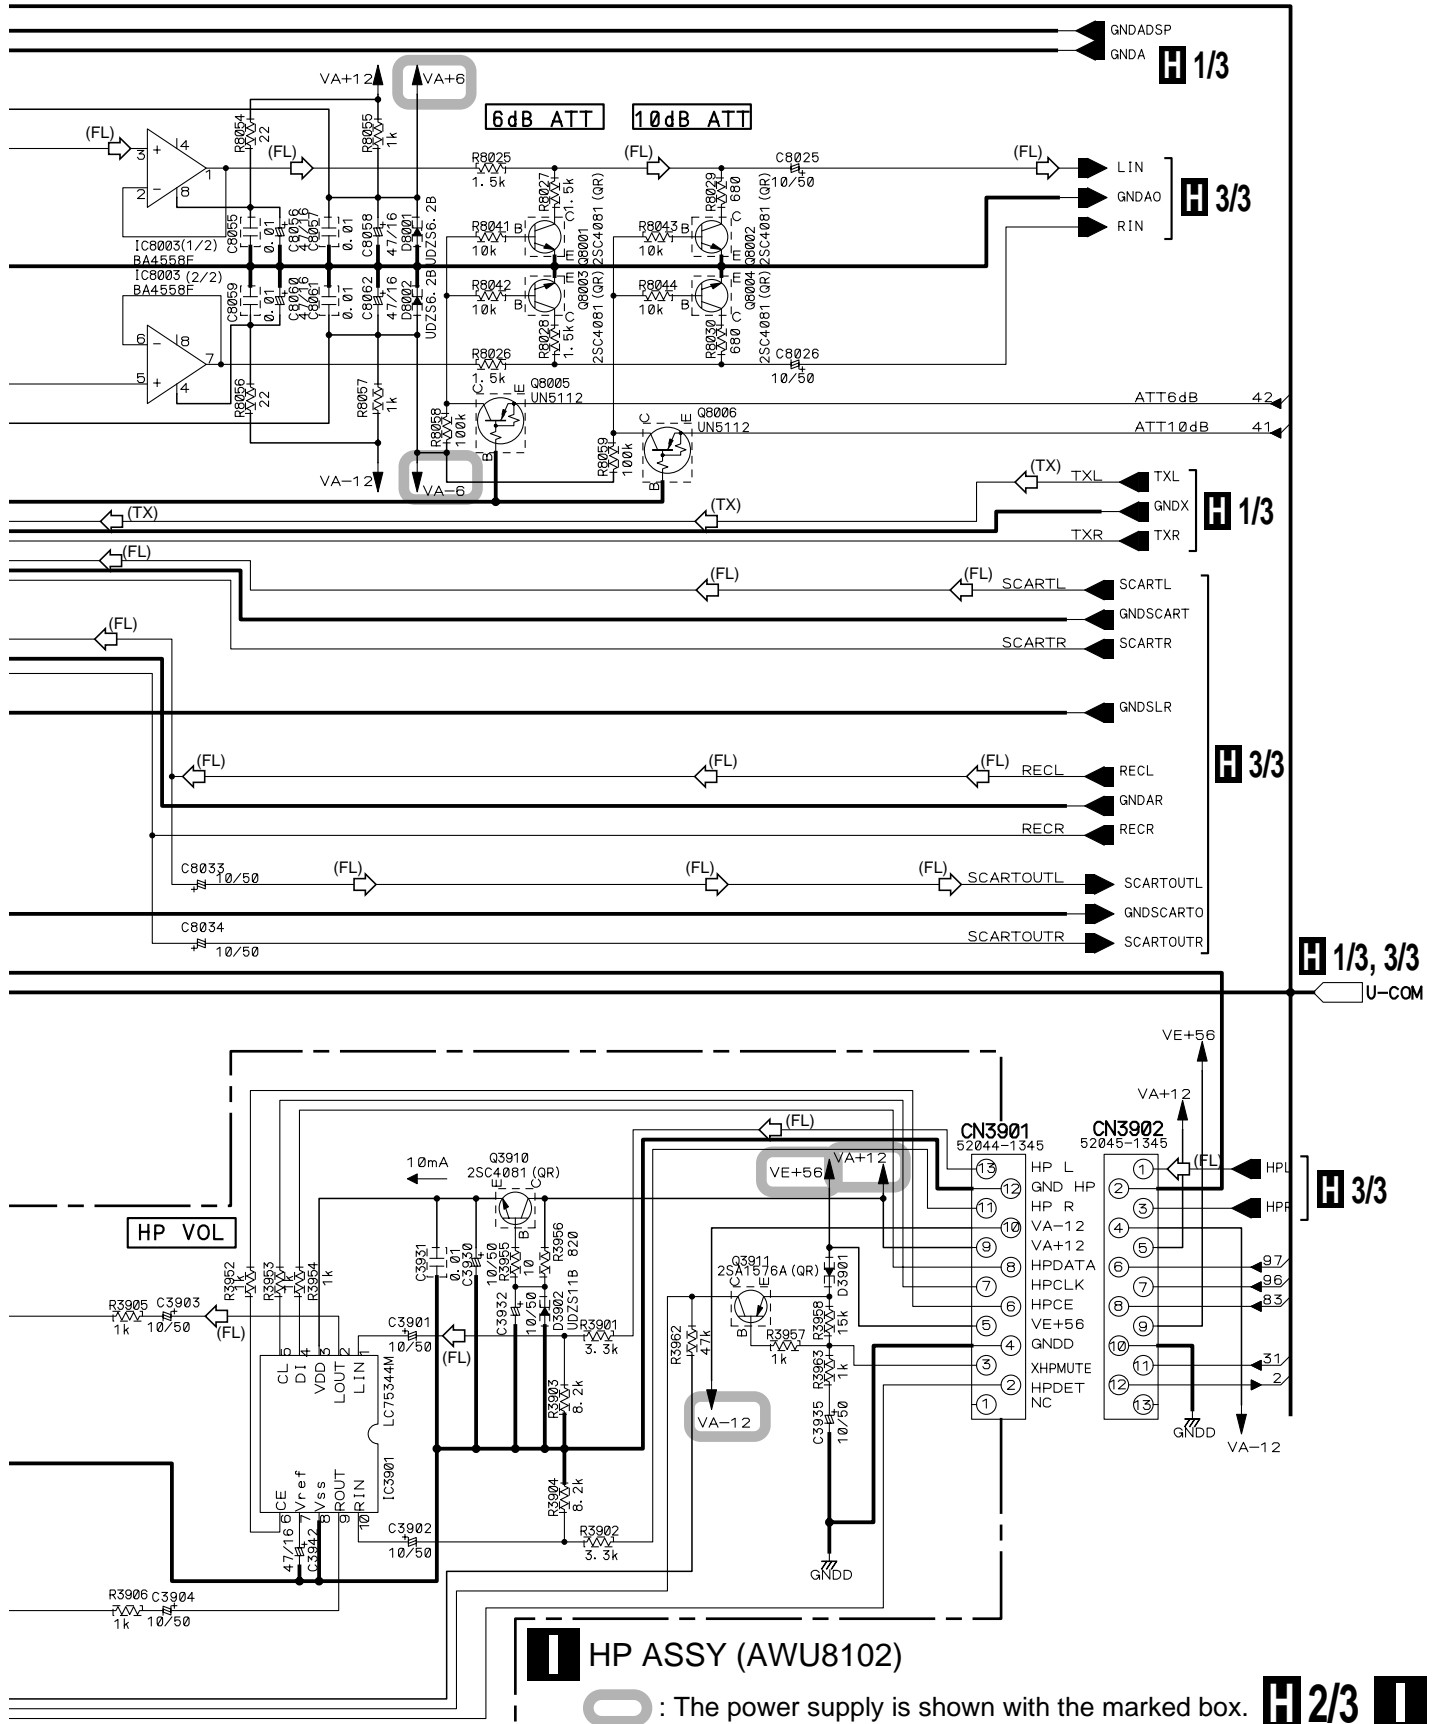

## HP ASSY (AWU8102)

: The power supply is shown with the marked box.

# H 2/3

### 3.13 CONTROL ASSY(3/3)

A


B

C

D


E

F

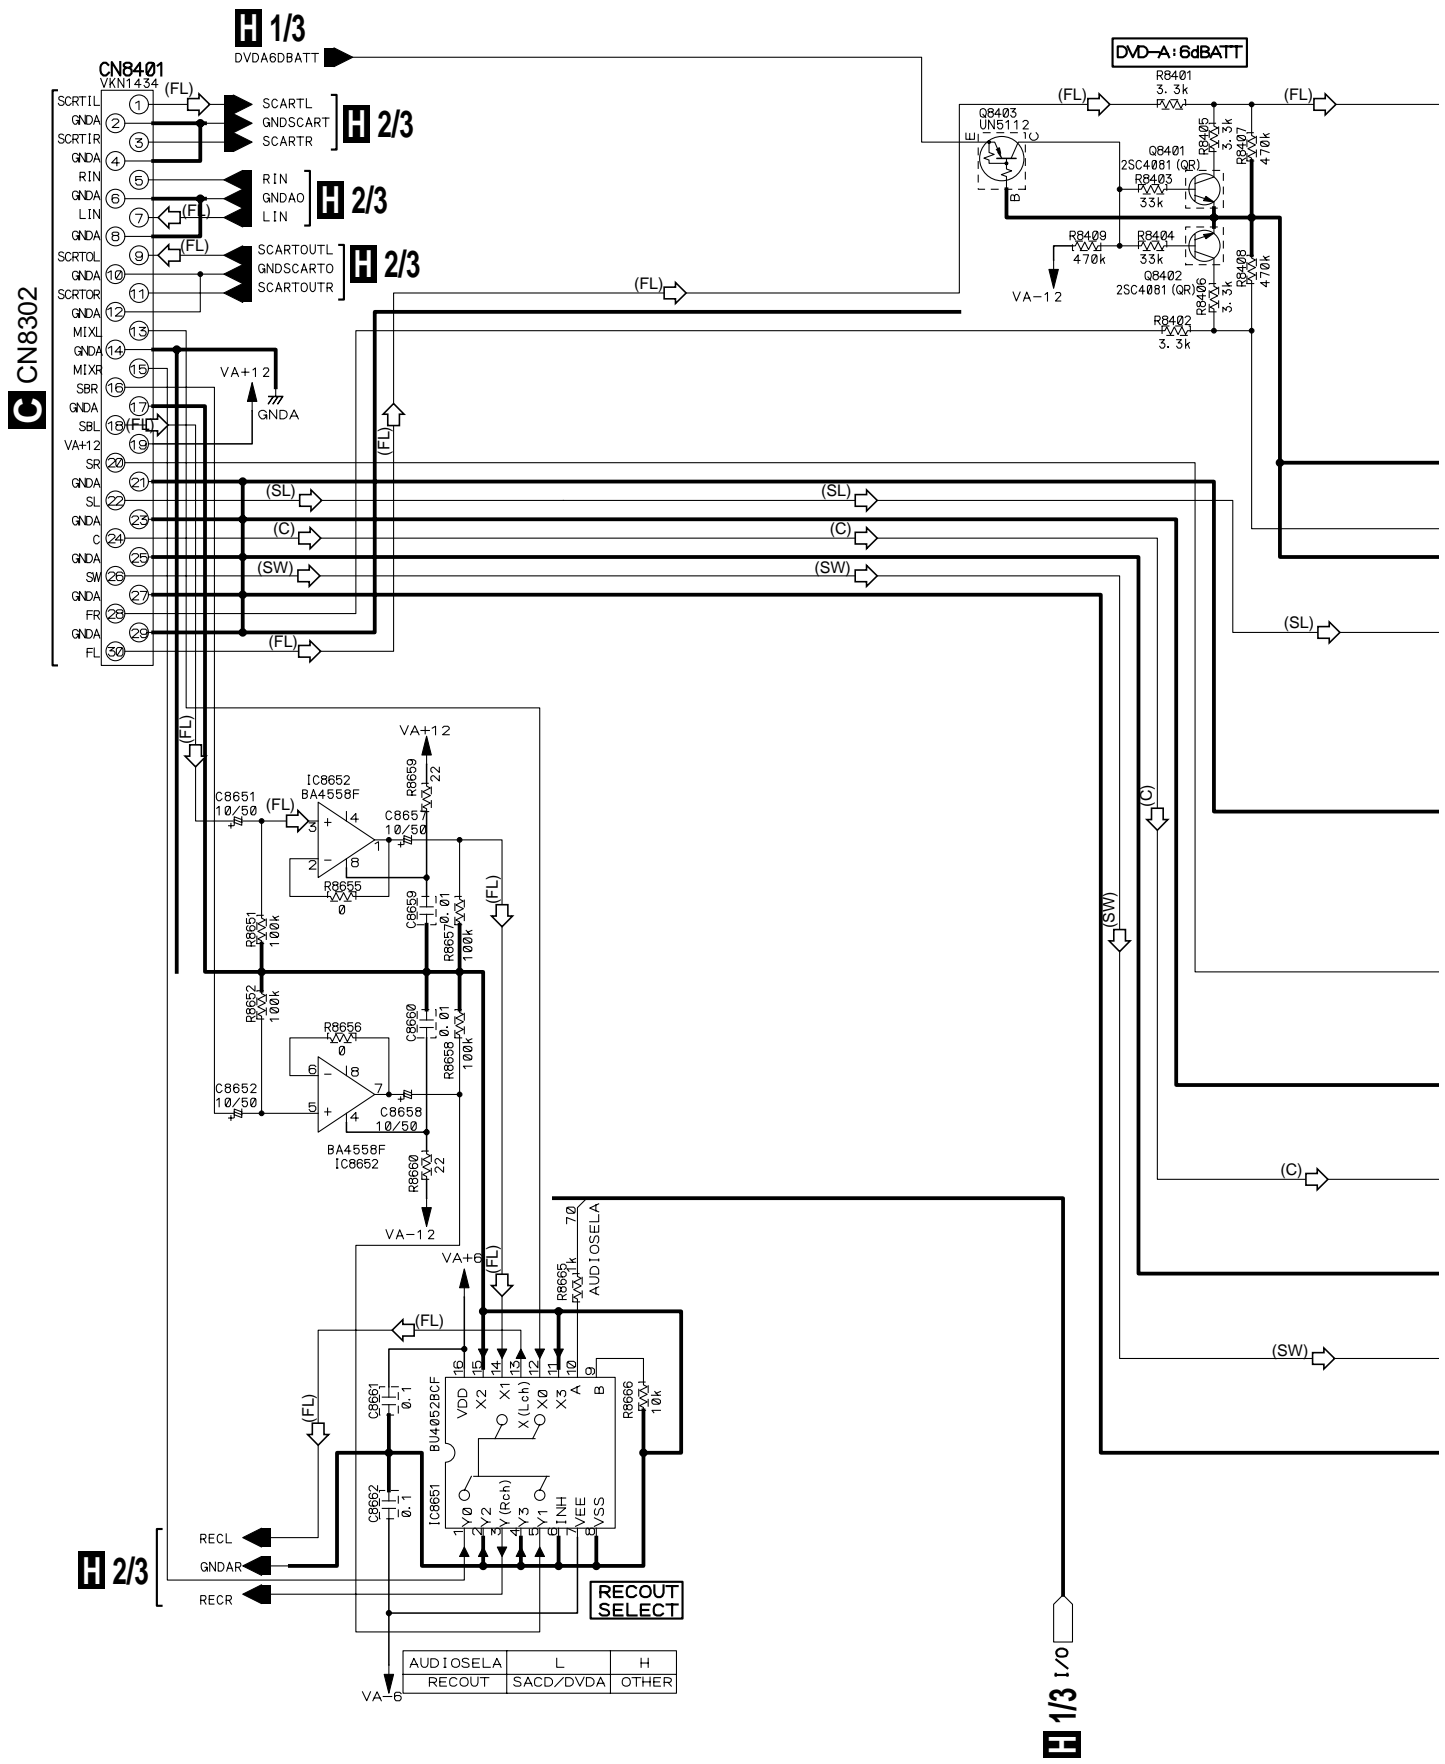



# 3/3 CONTROL ASSY (XV-DV99 : AWU8099) (XV-DV990 : AWU8148)

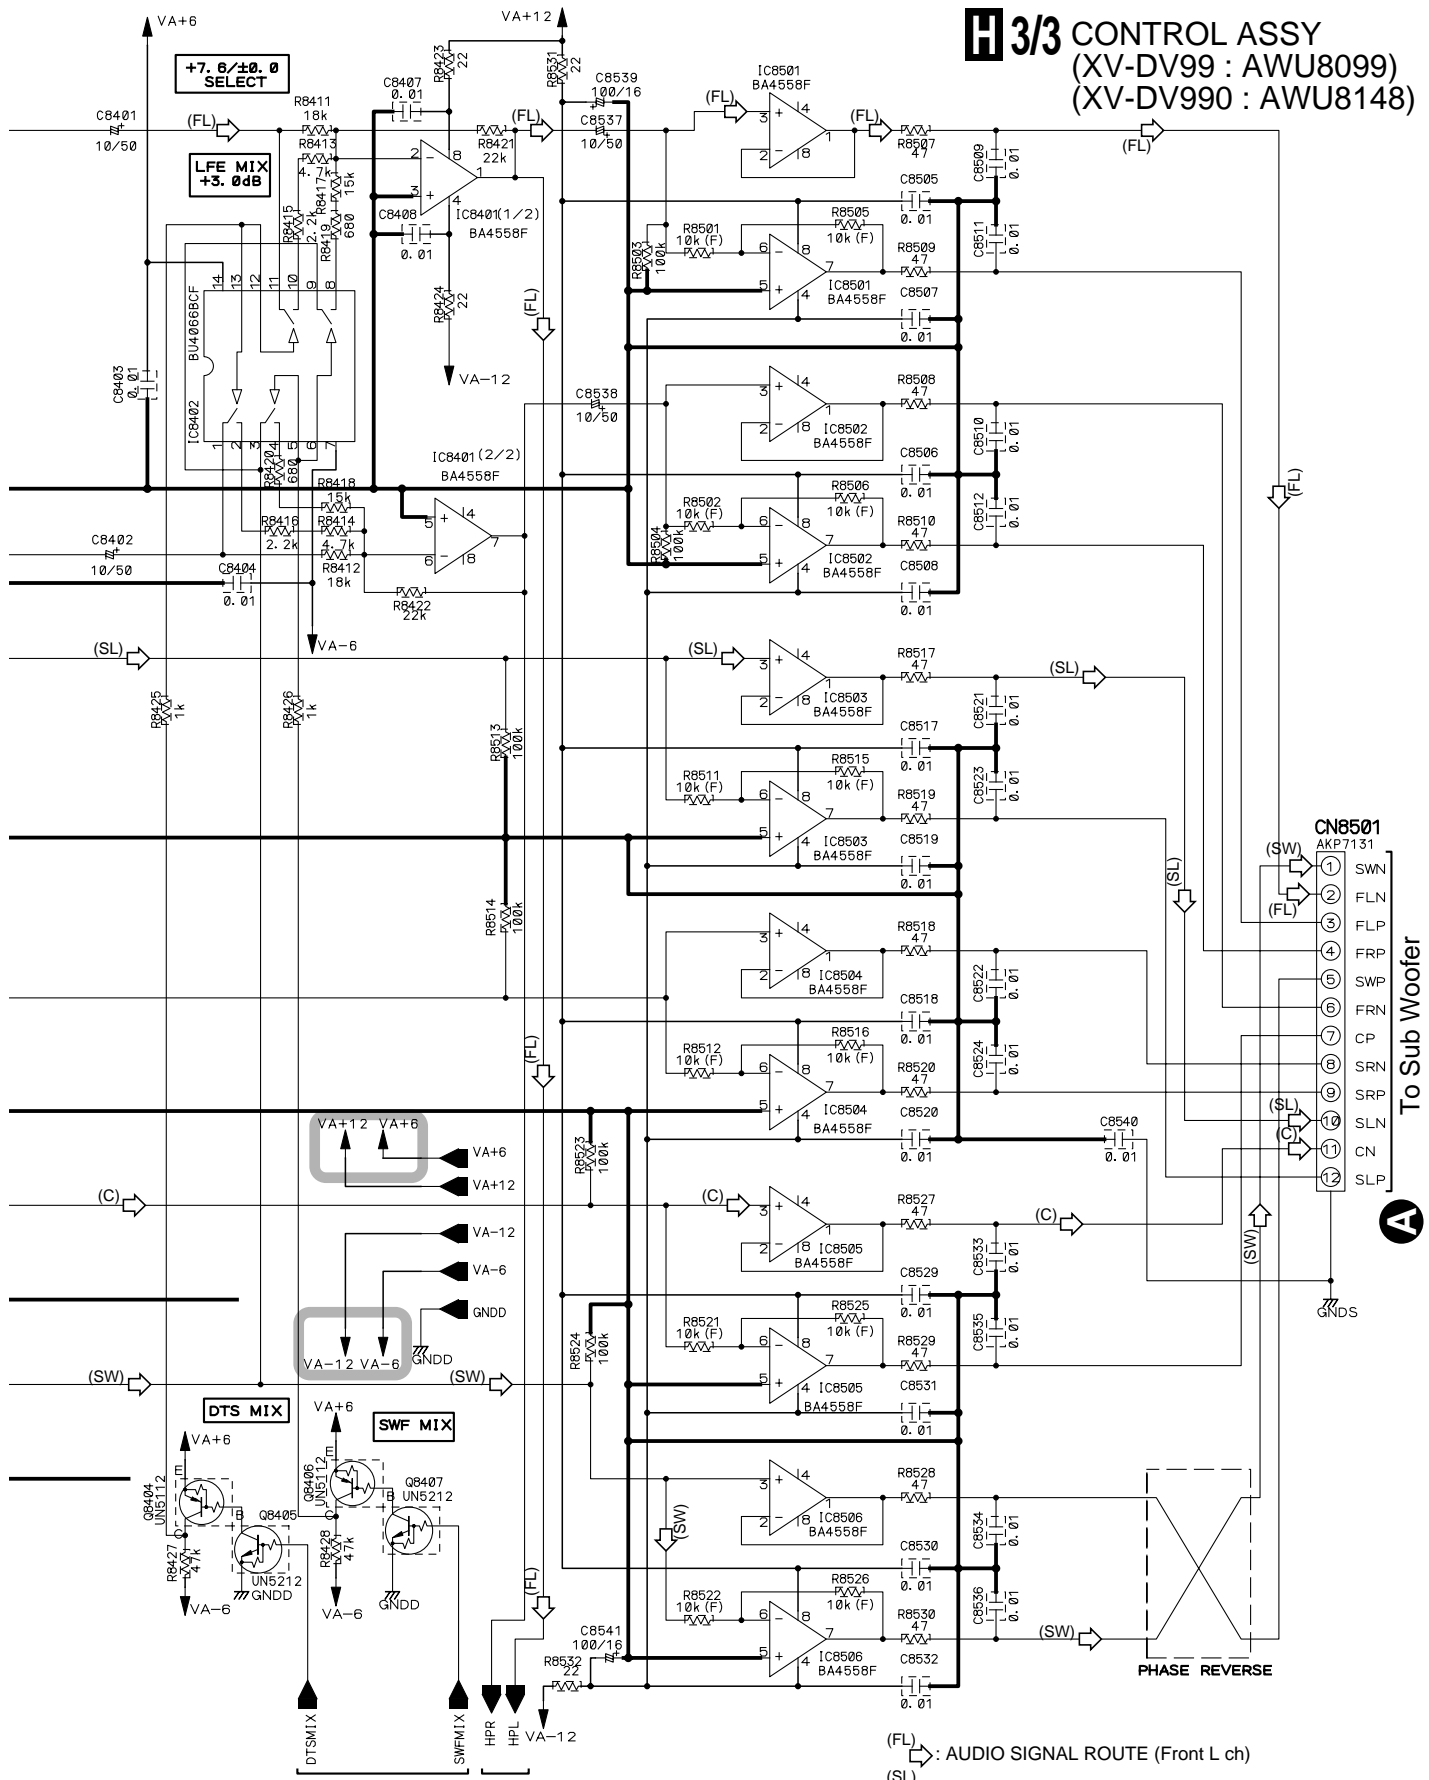

: The power supply is shown with the marked box.

- (FL) : AUDIO SIGNAL ROUTE (Front L ch)
- (SL) : AUDIO SIGNAL ROUTE (Surround L ch)
- (C) : AUDIO SIGNAL ROUTE (Center ch)
- (SW) : AUDIO SIGNAL ROUTE (Sub Woofer ch)

**1/3**   **2/3**

**3/3**

### 3.14 LCDCONT, CONNECT, KEY RTOP, KEY R, KEY L and KEY LTOP ASSYS


#### **K** CONNECT ASSY (AWU8118)

**KEY R ASSY**  
S1901 : ▲ (OPEN/CLOSE)


**KEY RTOP ASSY**  
S1902 : ■ (STOP)  
S1903 : ▶/⏸ (PLAY/PAUSE)

**KEY L ASSY**  
S1904 : ⏻ STANDBY/ON




**KEY LTOP ASSY**  
S1905 : + ] VOL  
S1906 : - ] VOL

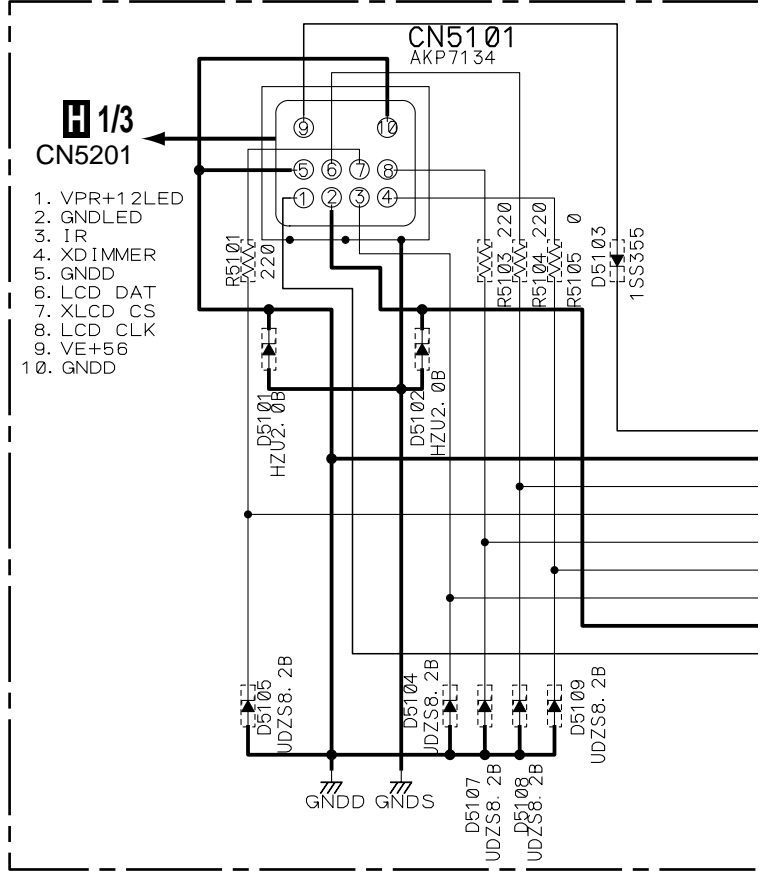

#### **O** KEY LTOP ASSY (AWU8111)

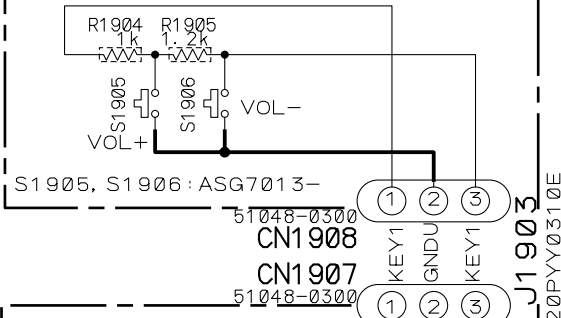


#### **L** KEY RTOP ASSY (AWU8113)

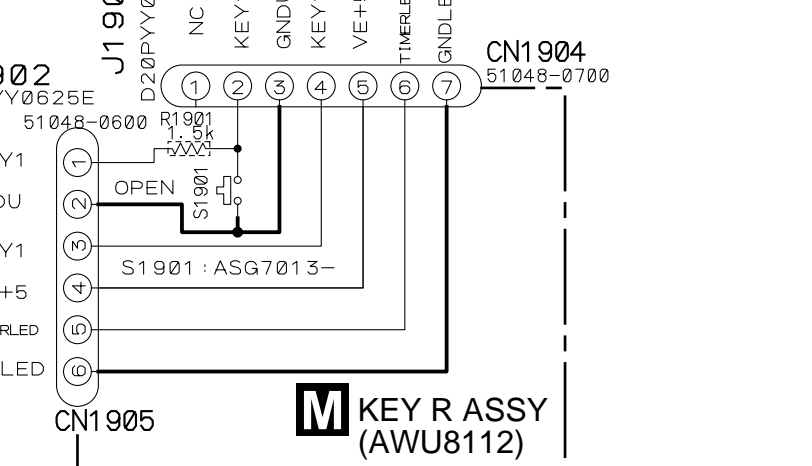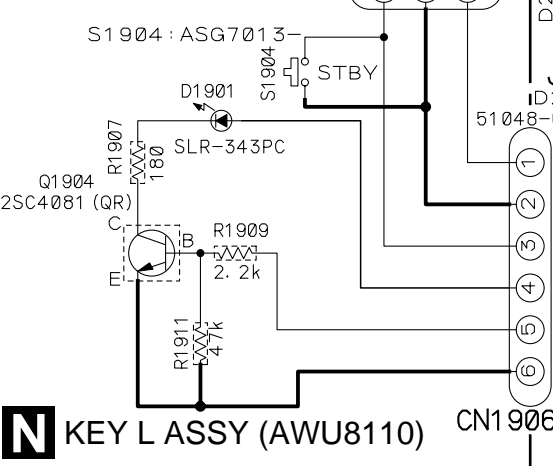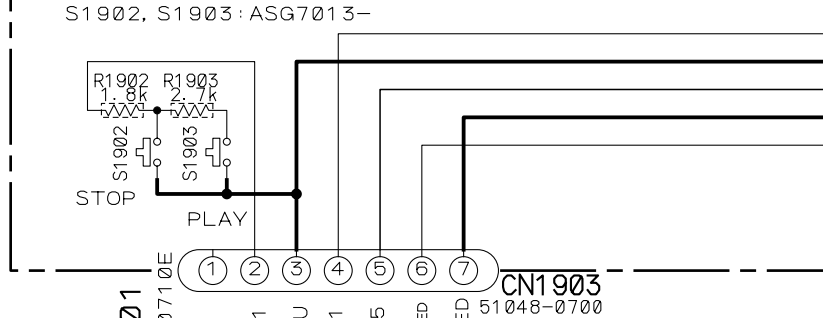

**K L M N O**

# J LCDCONT ASSY (AWU8119)

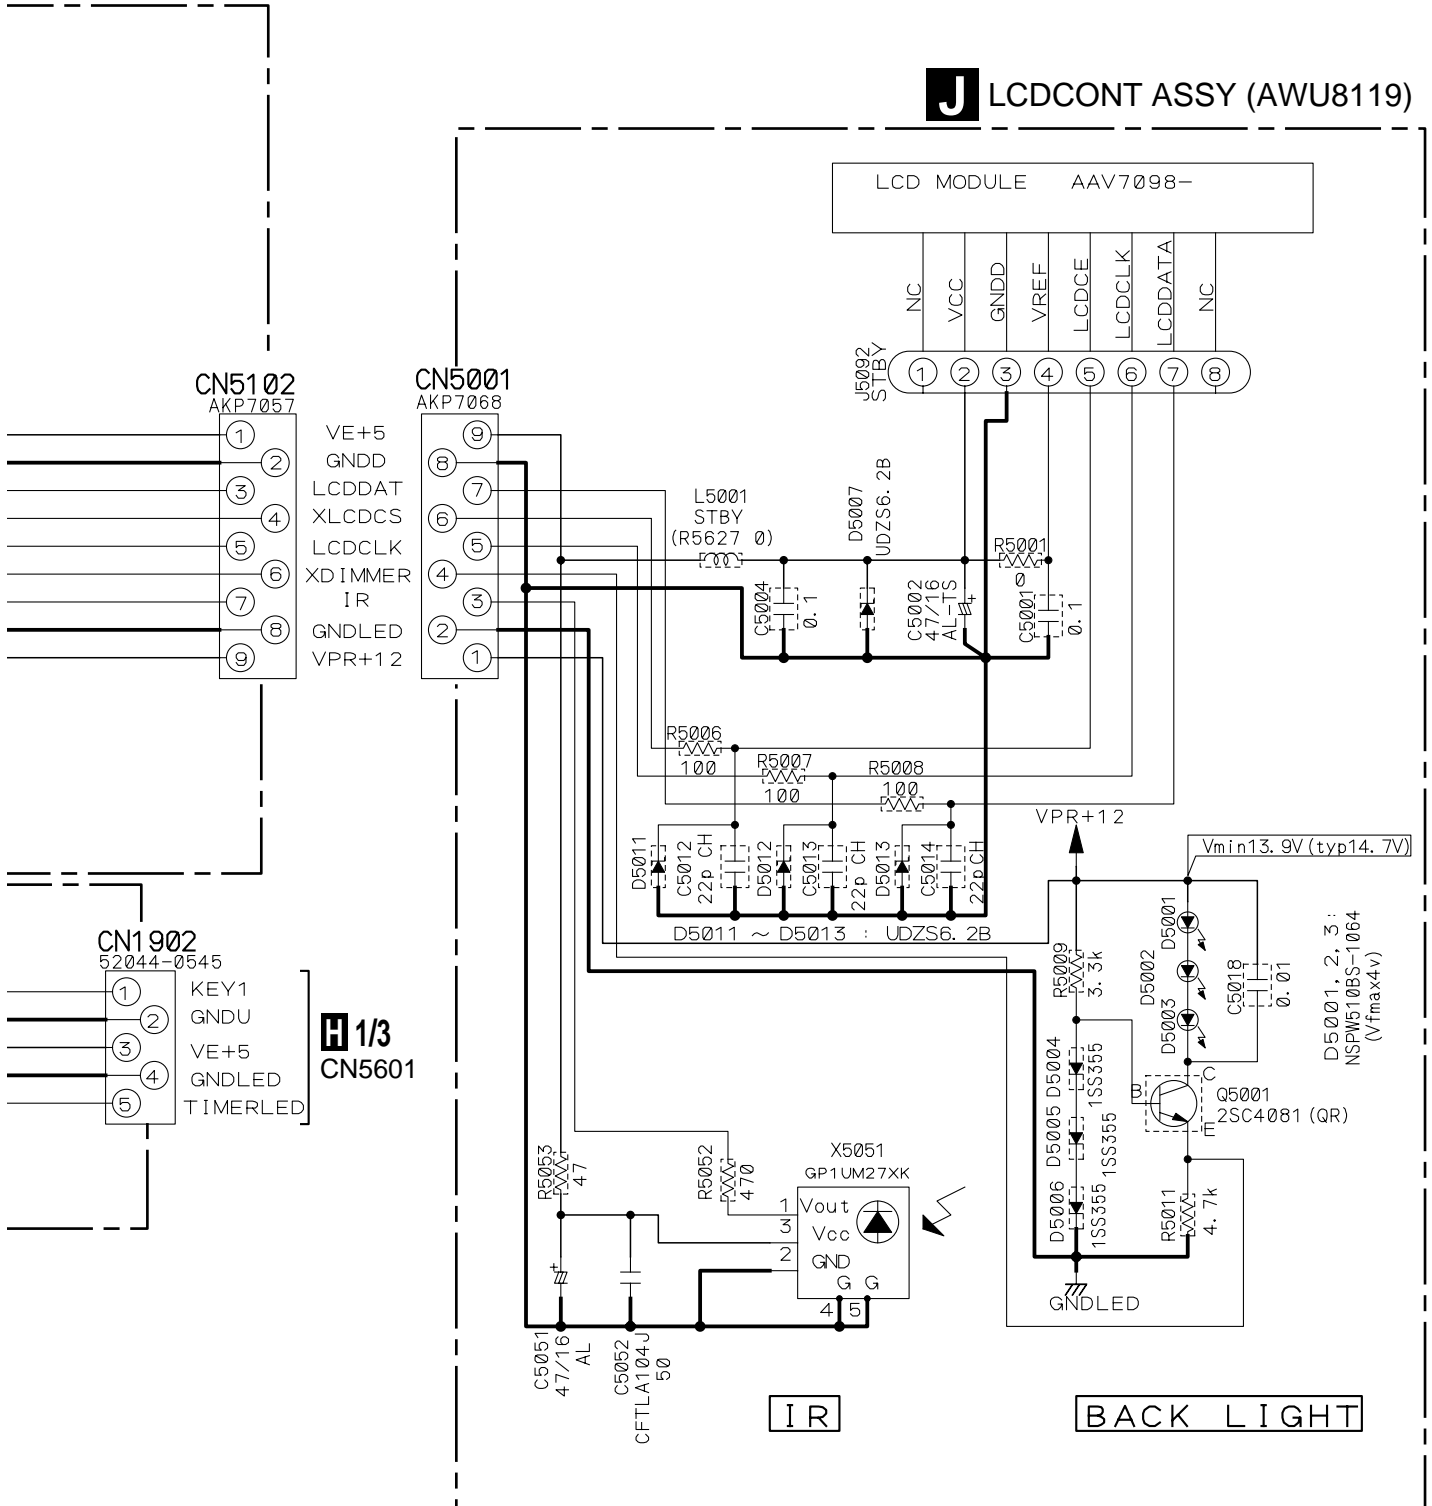


### 3.15 WAVEFORMS

Note : The encircled numbers denote measuring point in the schematic diagram.

#### **B** DVDM ASSY

Measurement condition ; No. 1, 2 and 12 to 17 : MJK1, Title 1-chp 1  
No. 8 : CD, ABEX-784 Track 1

No. 13, 14 and 17 : DVD-REF-A1, T2-Chap.1  
No. 3 to 5 : DVD-REF-A1, T2-Chap.19

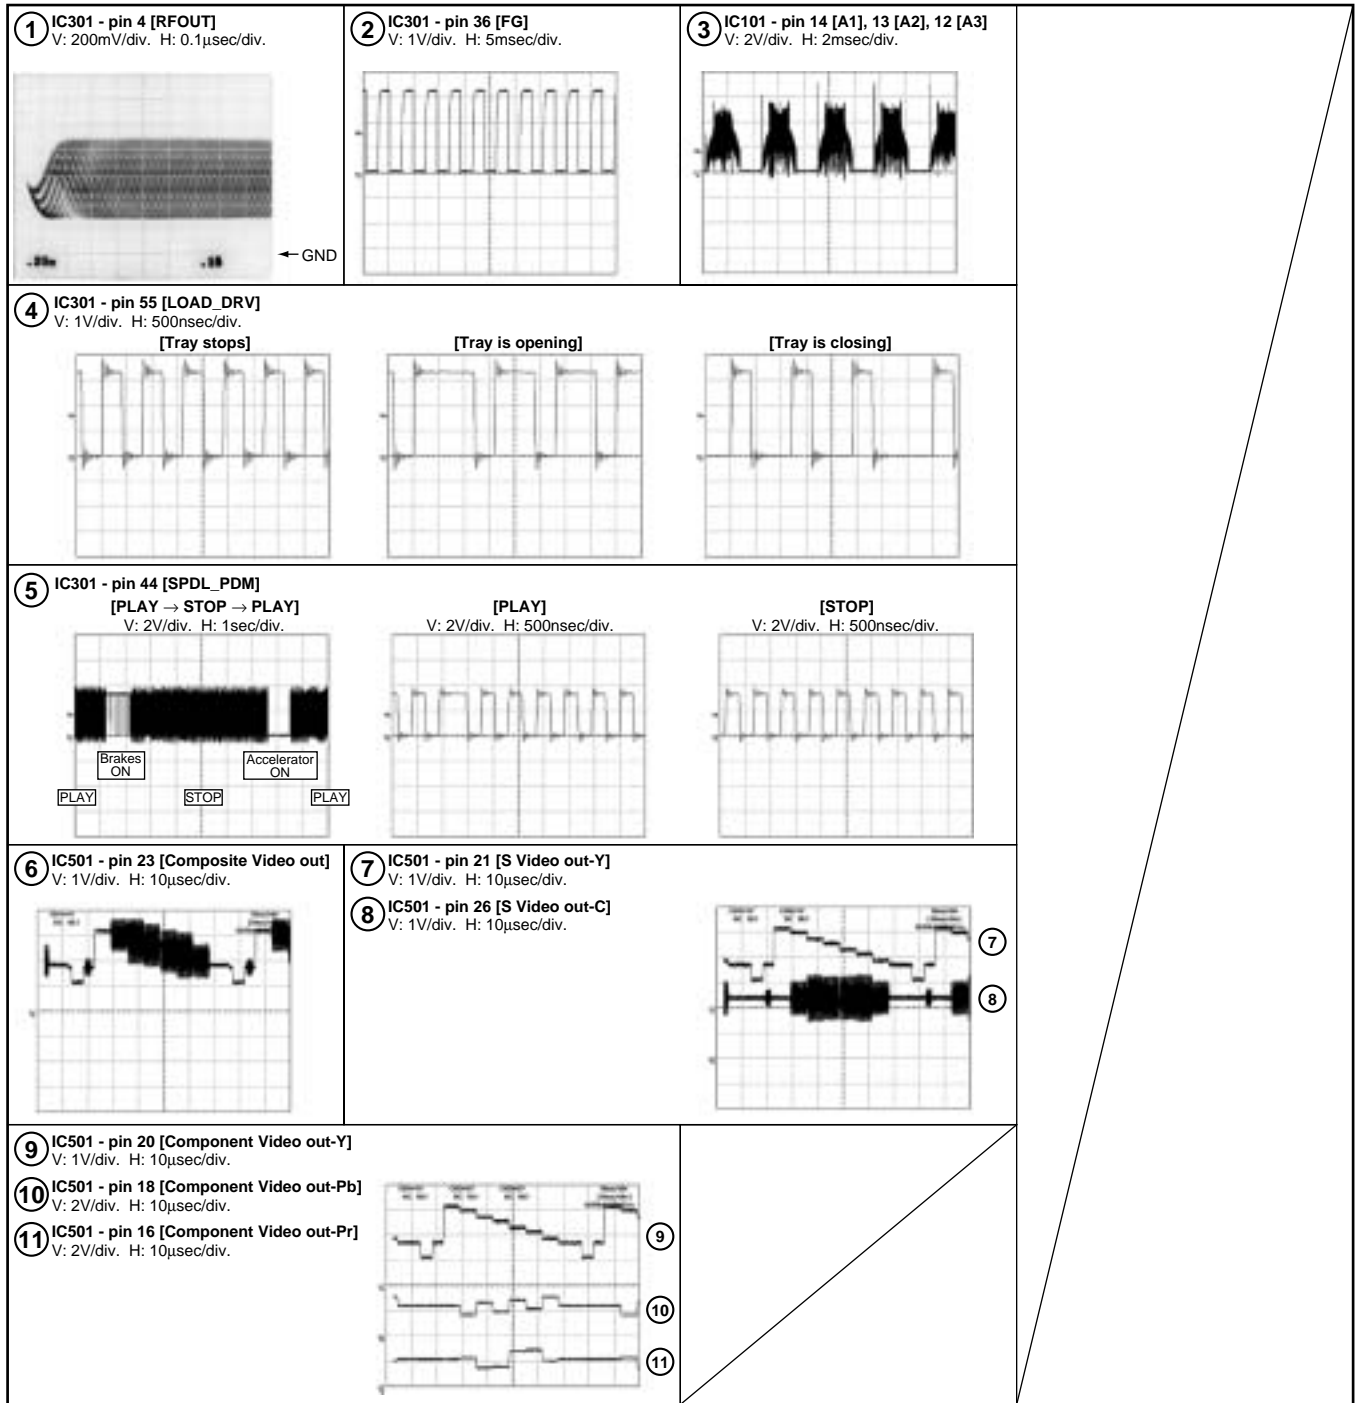


# 4. PCB CONNECTION DIAGRAM

## NOTE FOR PCB DIAGRAMS :

- 1. Part numbers in PCB diagrams match those in the schematic diagrams.
- 2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator



- 3. The parts mounted on this PCB include all necessary parts for several destinations.  
For further information for respective destinations, be sure to check with the schematic diagram.
- 4. View point of PCB diagrams.

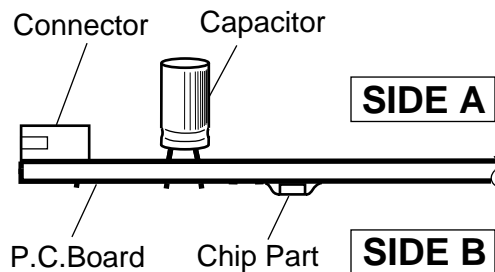

## 4.1 LOAB ASSY

**SIDE A**

**SIDE B**

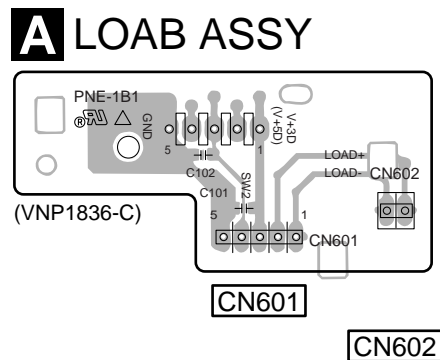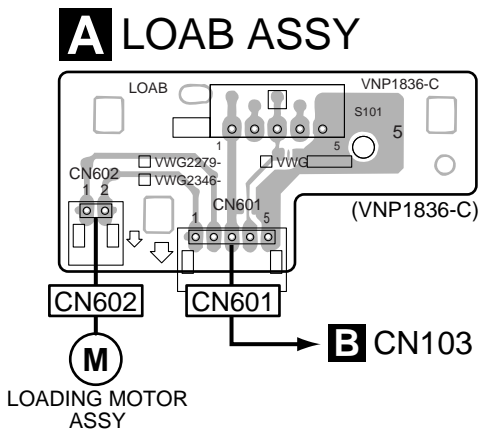

**A**


**A**

# 4.2 DVDM ASSY

**SIDE A**

**B** DVDM ASSY

**SIDE A**

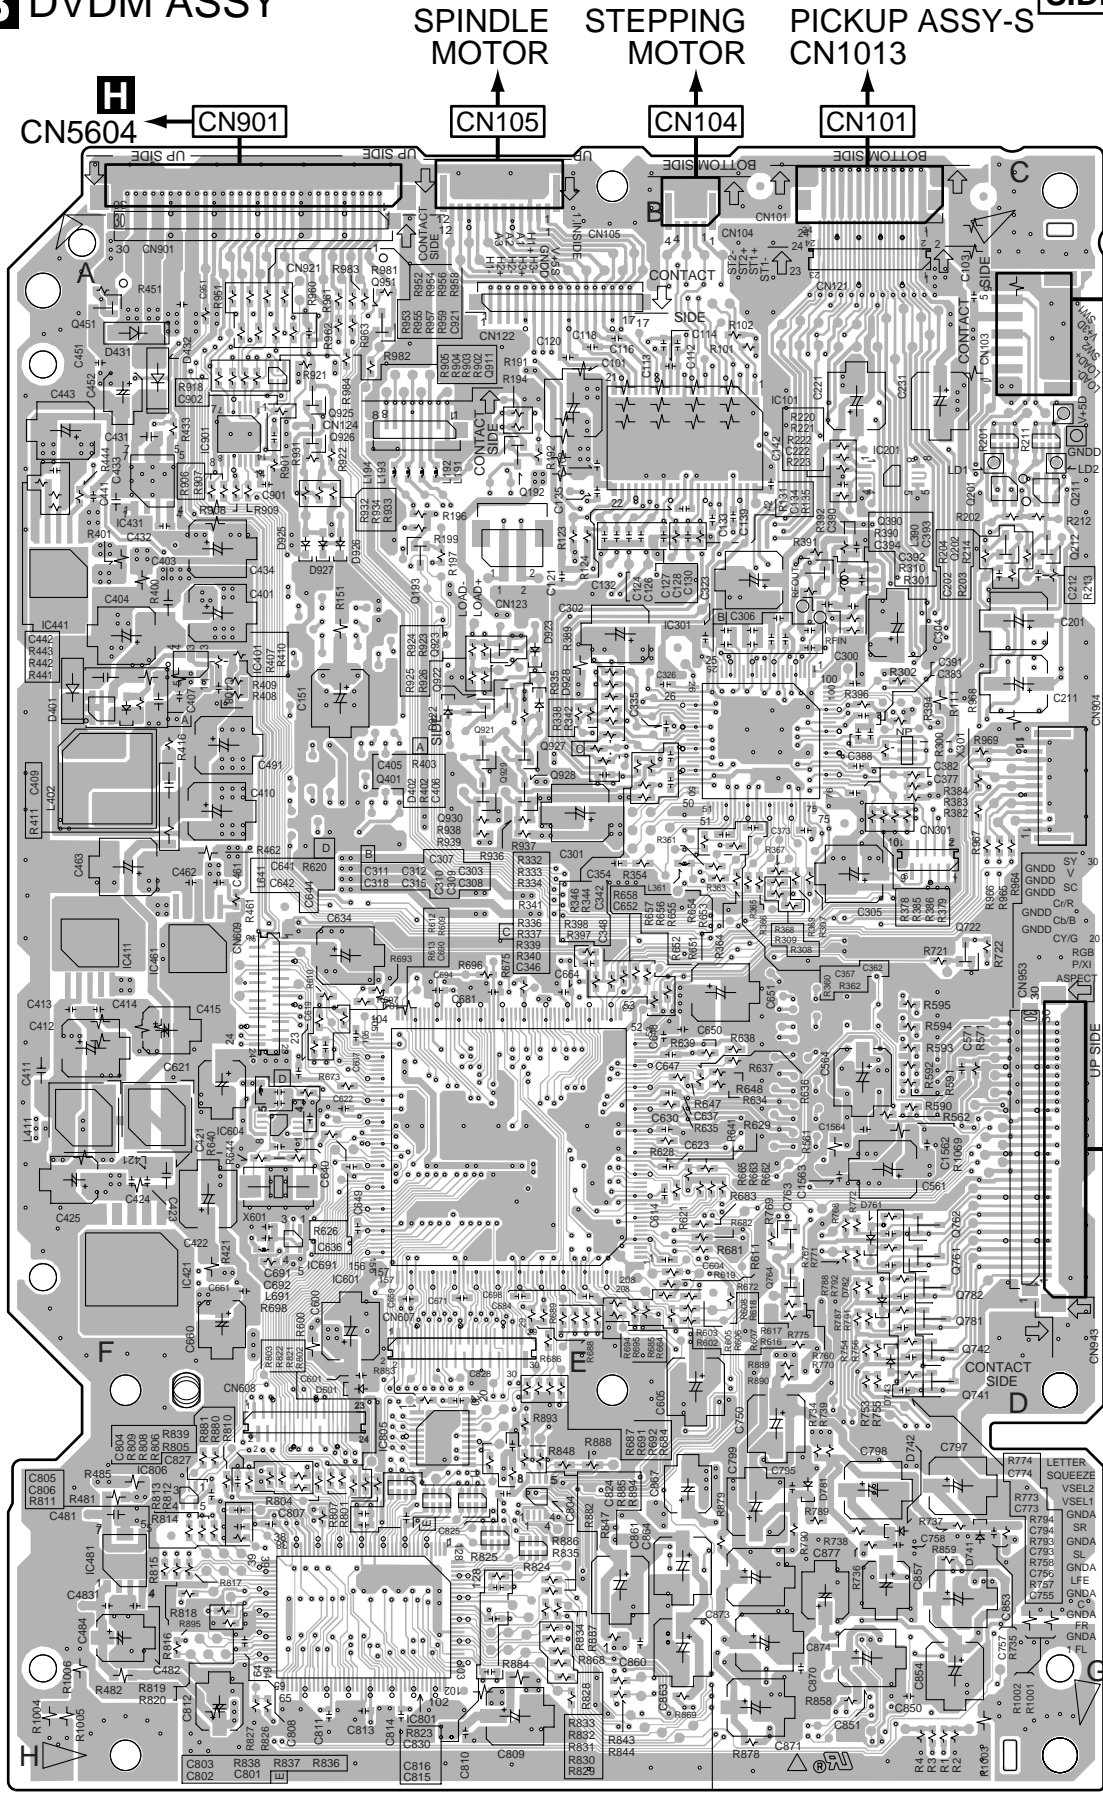

(ANP7480-A)


**B**

**B**

SIDE B

SIDE B

# B DVDM ASSY

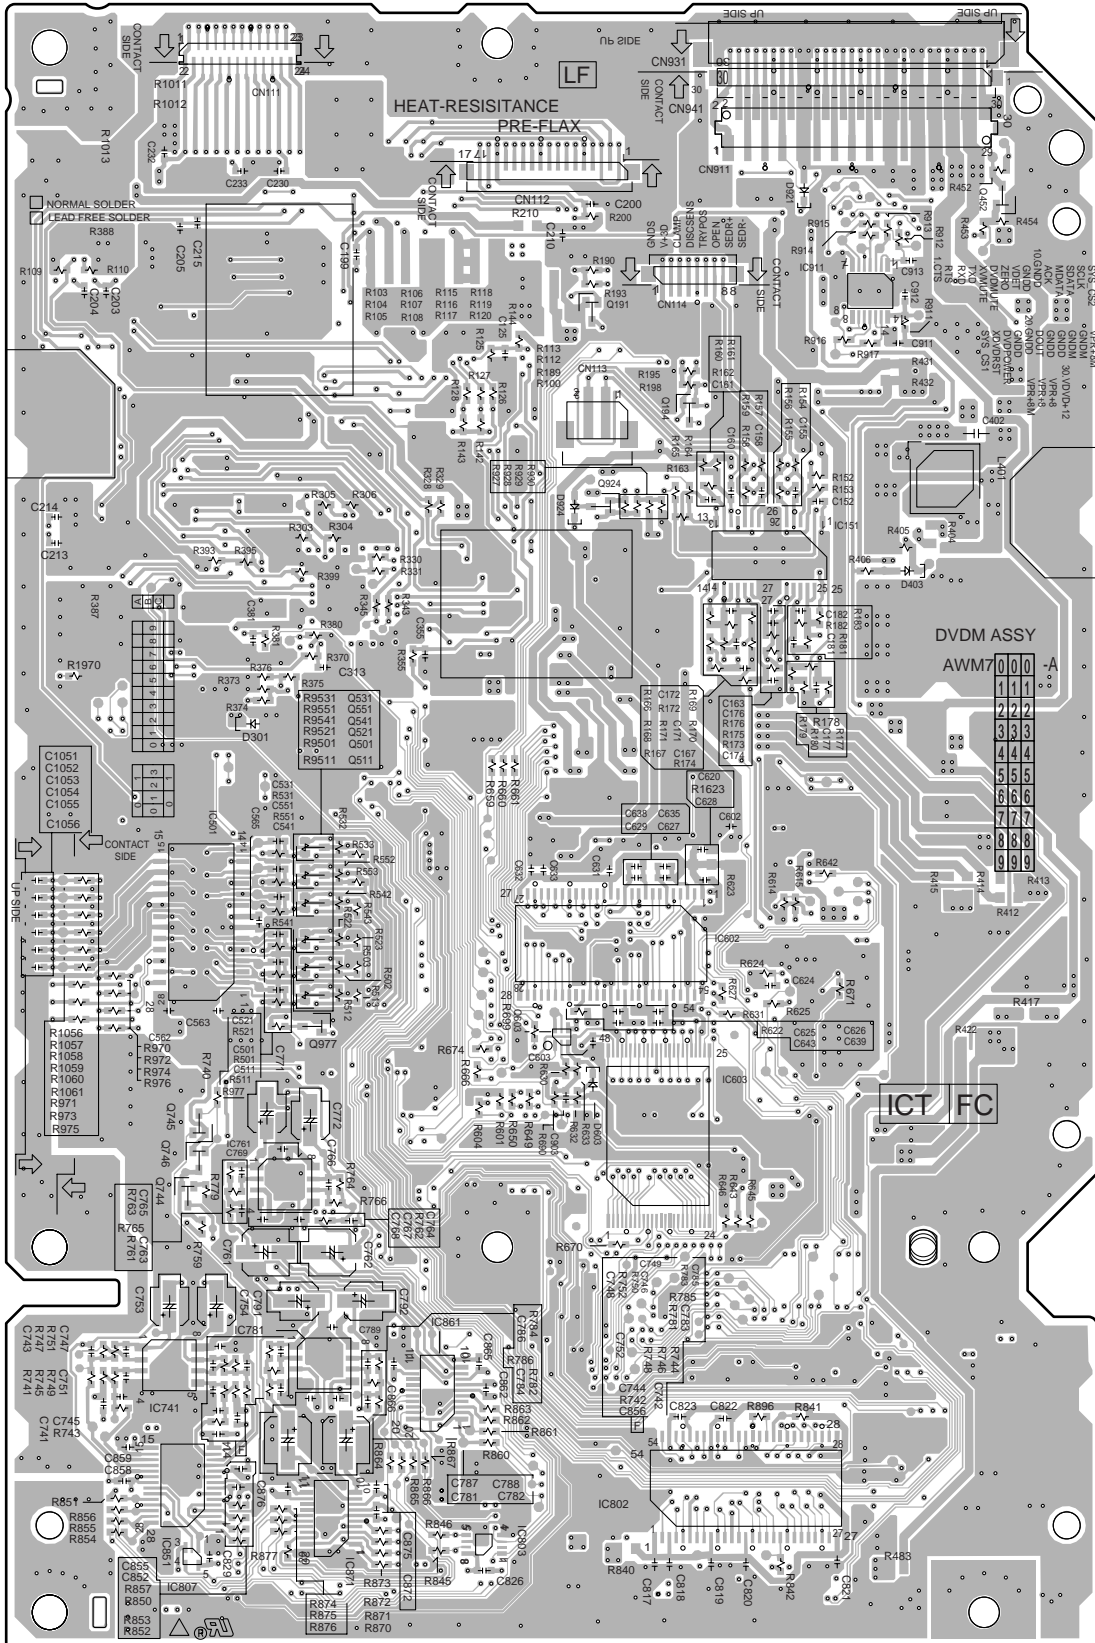

(ANP7480-A)


B

B

# 4.3 VIDEO and DSP TRADE ASSYS

**SIDE A**

## **C** VIDEO ASSY

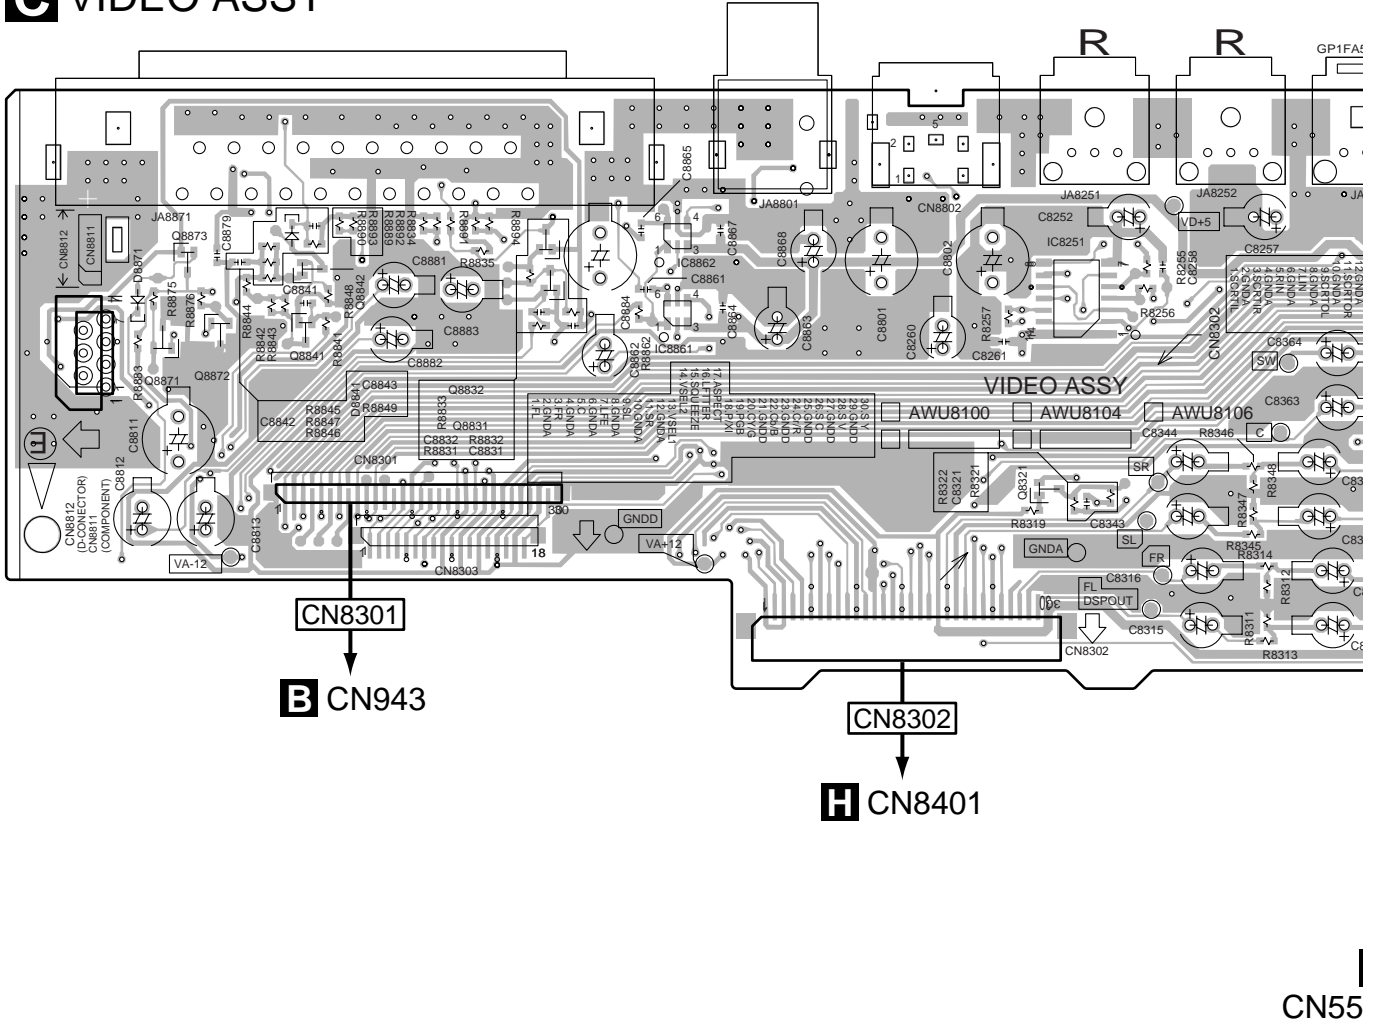

Q8873  
Q8871 Q8872

Q8842  
Q8841


Q8832  
Q8831

IC8862  
IC8861

IC8251  
Q8321



SIDE A

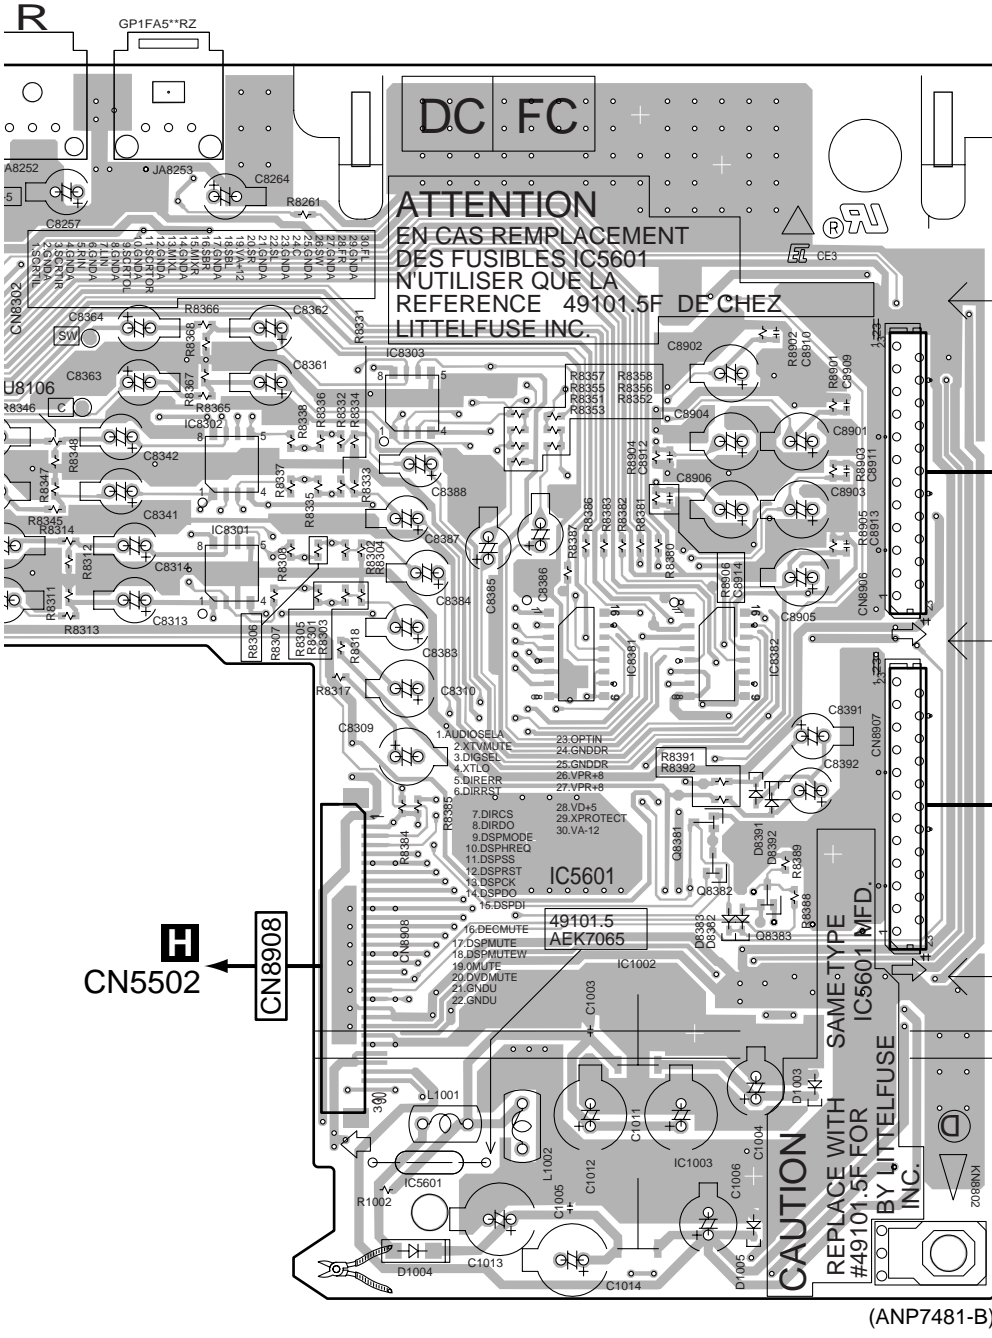

**E** DSP TRADE ASSY

**D** CN8003

**D** CN8007

**D** CN8011

(ANP7481-B)

**E** CN5502

**E** CN8908

**CN8906**

**CN8904**

**CN8907**

**CN8905**

**CN8901**

**CN8902**

**CN8903**

IC8302  
IC8301

IC8303

IC8381

IC8382  
Q8381  
Q8382

IC5601

IC1003



Q8383

**C E**

**SIDE B**

**C VIDEO ASSY**

**E DSP TRADE ASSY**

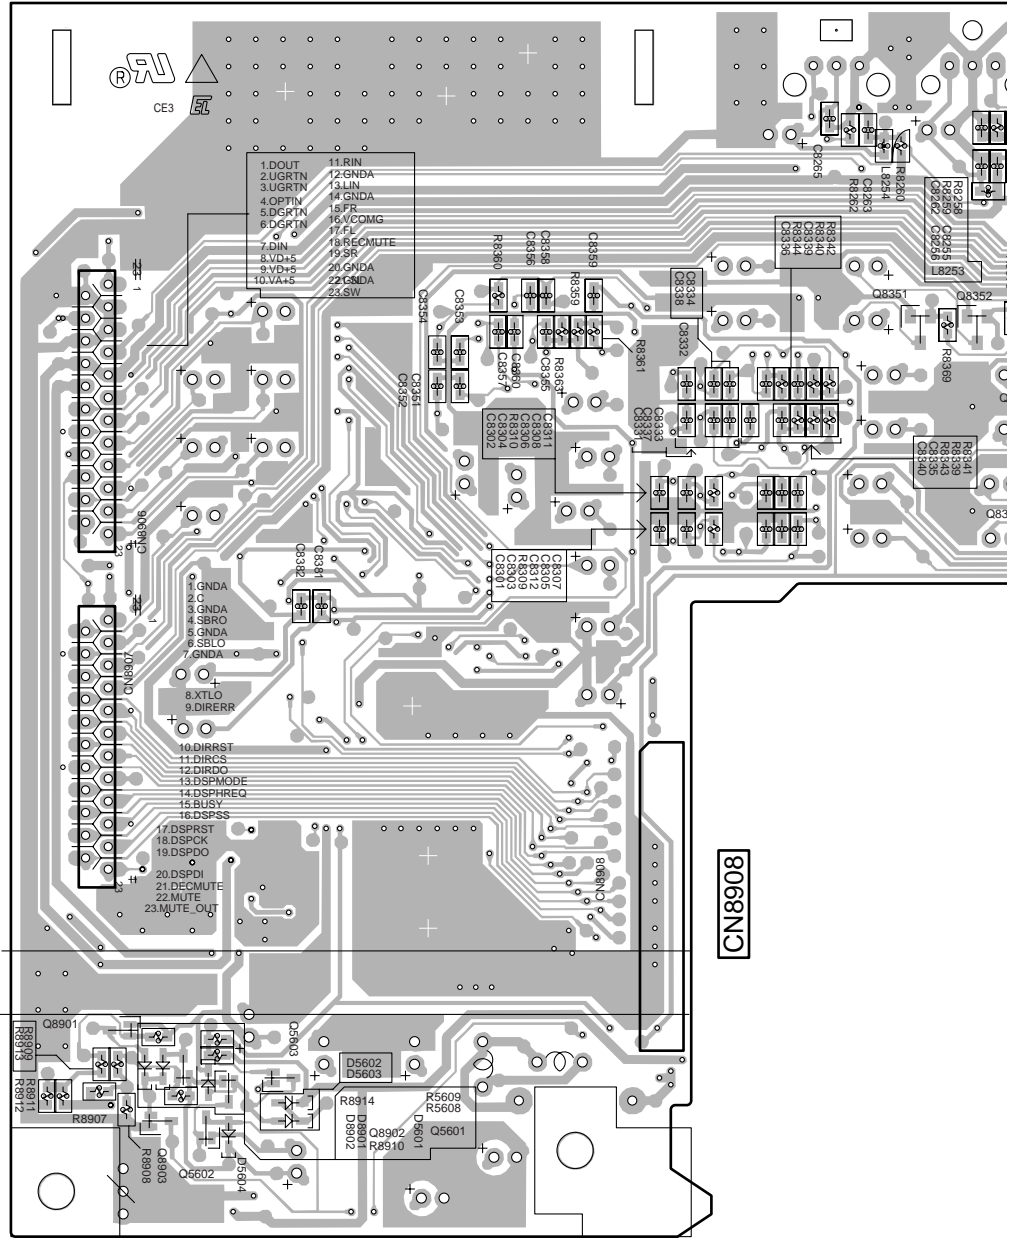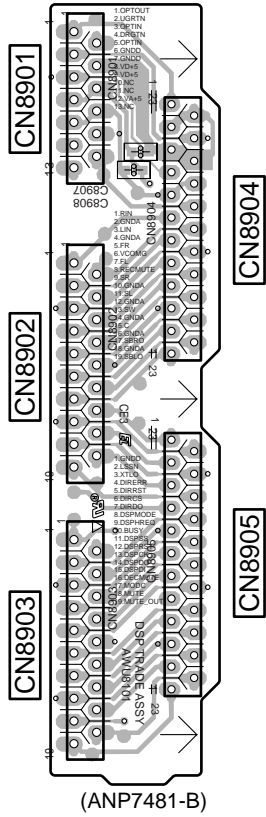


- Q8901
- Q8902
- Q5601
- Q8903
- Q5602

- Q8351
- Q8352

**C E**

SIDE B

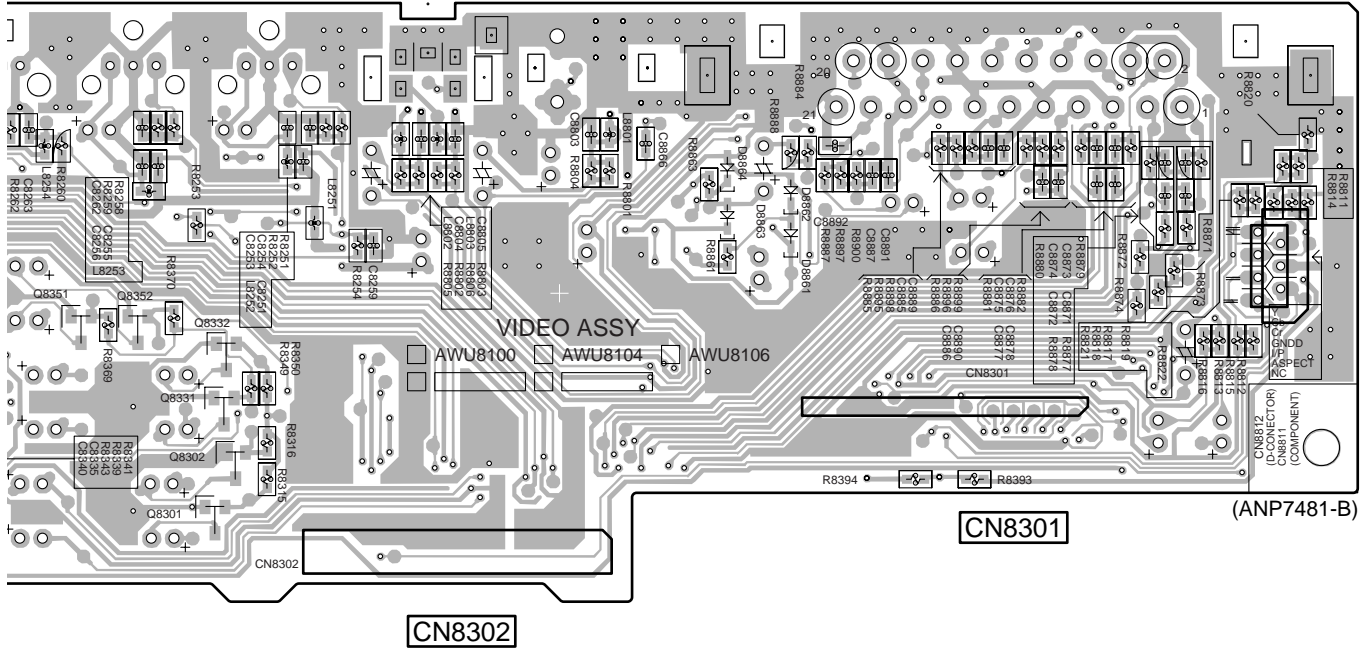

Q8351 Q8352





Q8332  
 Q8331  
 Q8302  
 Q8301

# 4.4 DSP ASSY

**SIDE A**

**SIDE A**

## D DSP ASSY

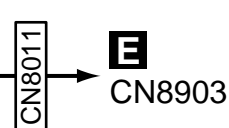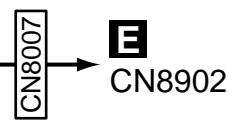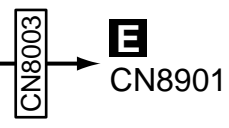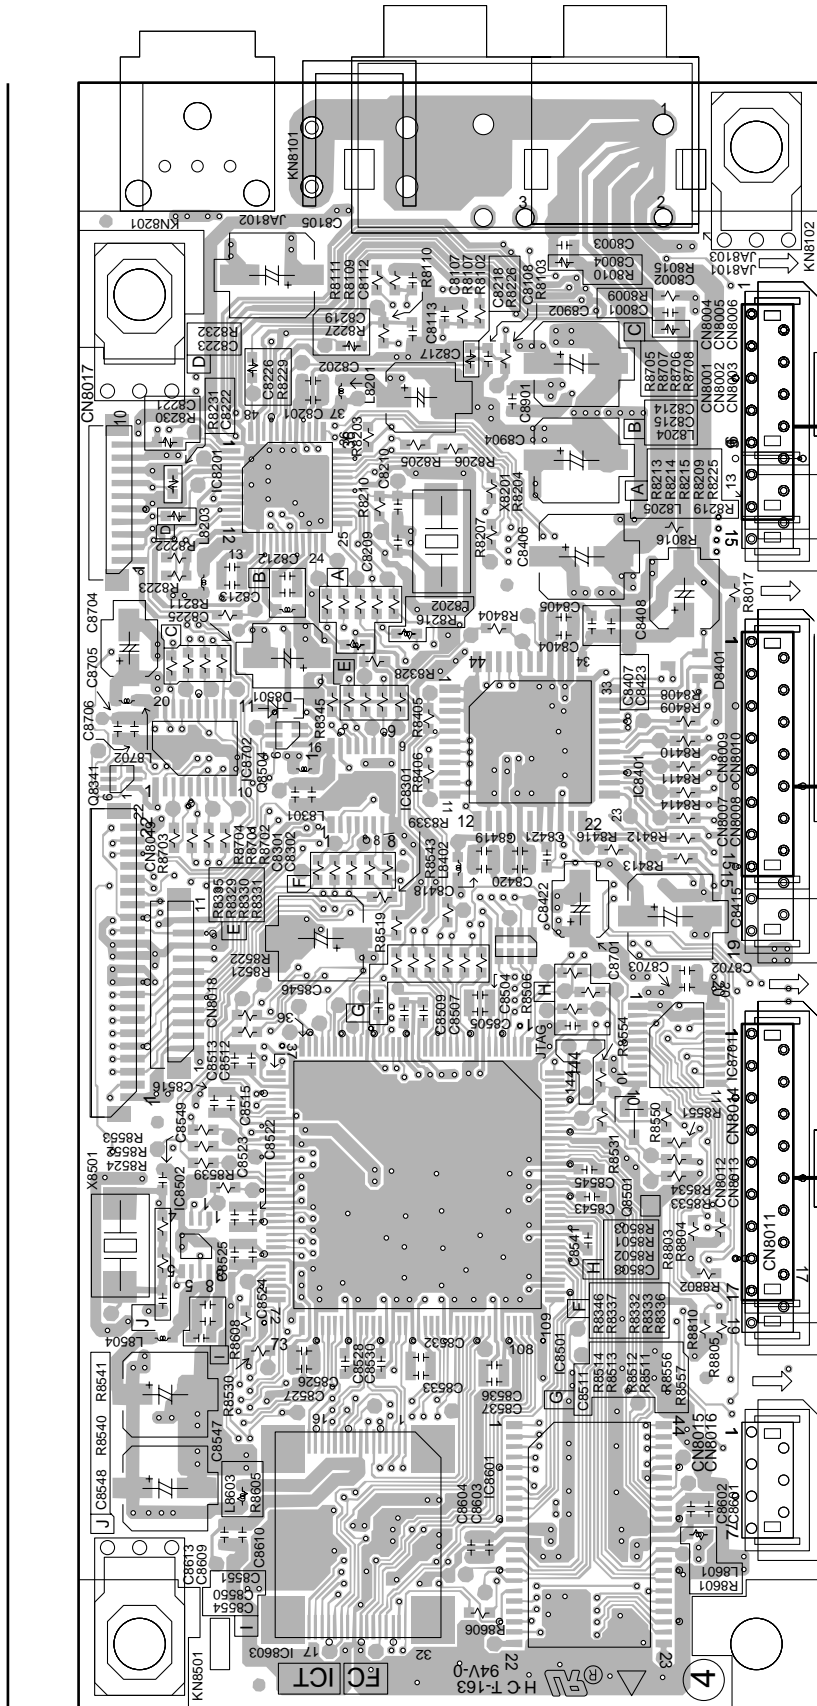


**D**

**D**

**SIDE B**

**SIDE B**

# D DSP ASSY

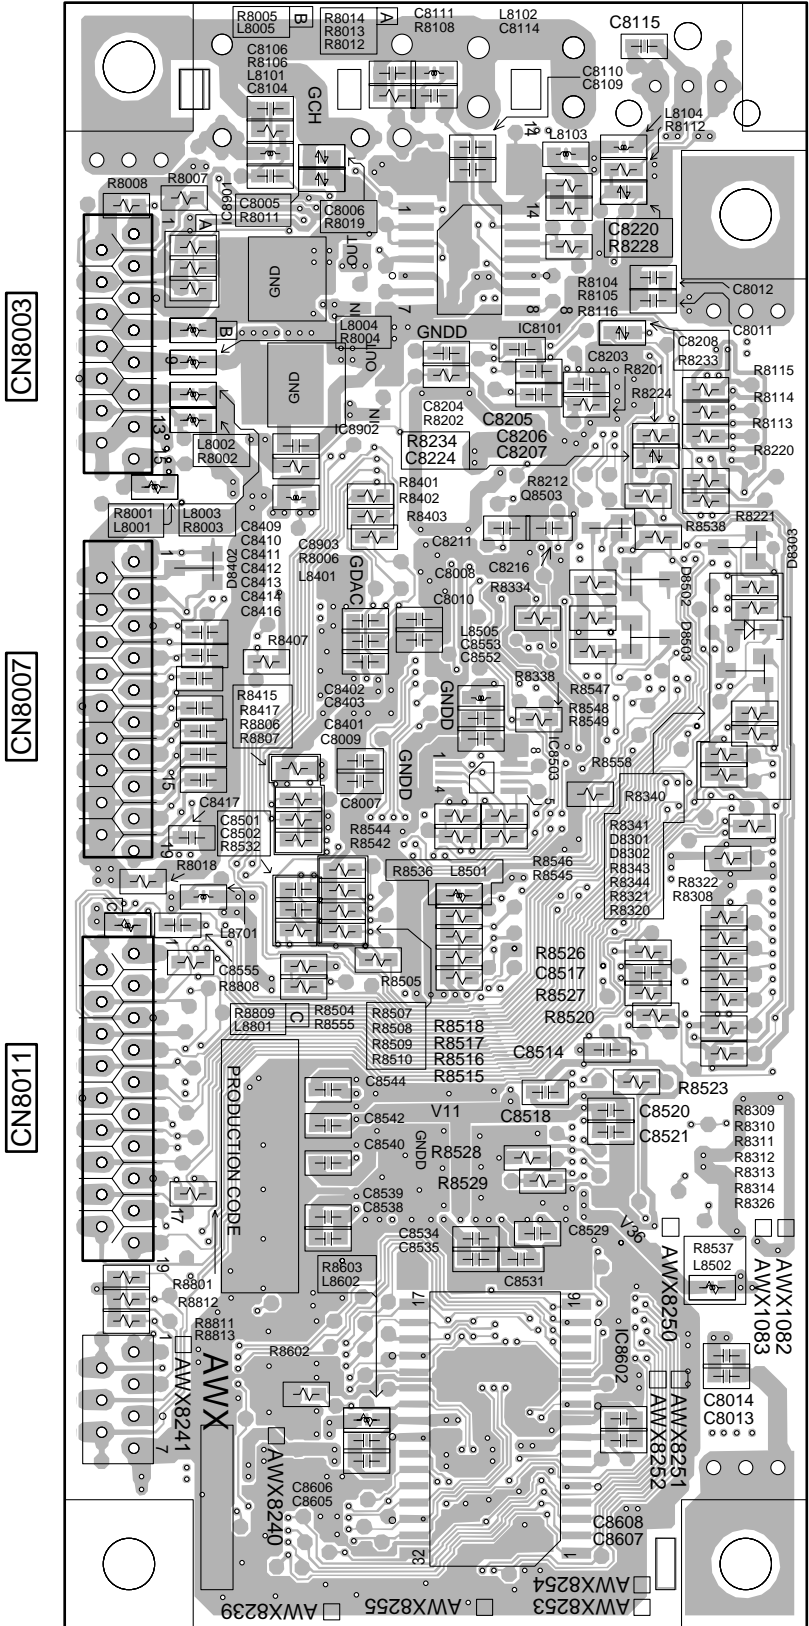

CN8003

CN8007

CN8011

IC8101  
IC8901

IC8902

Q8503

IC8503

A  
B  
C  
D  
E  
F

(ANP7022-B)

**D**


**D**

# 4.5 FM/AM TUNER MODULE

**SIDE A**

**SIDE A**

## **F** FM/AM TUNER MODULE

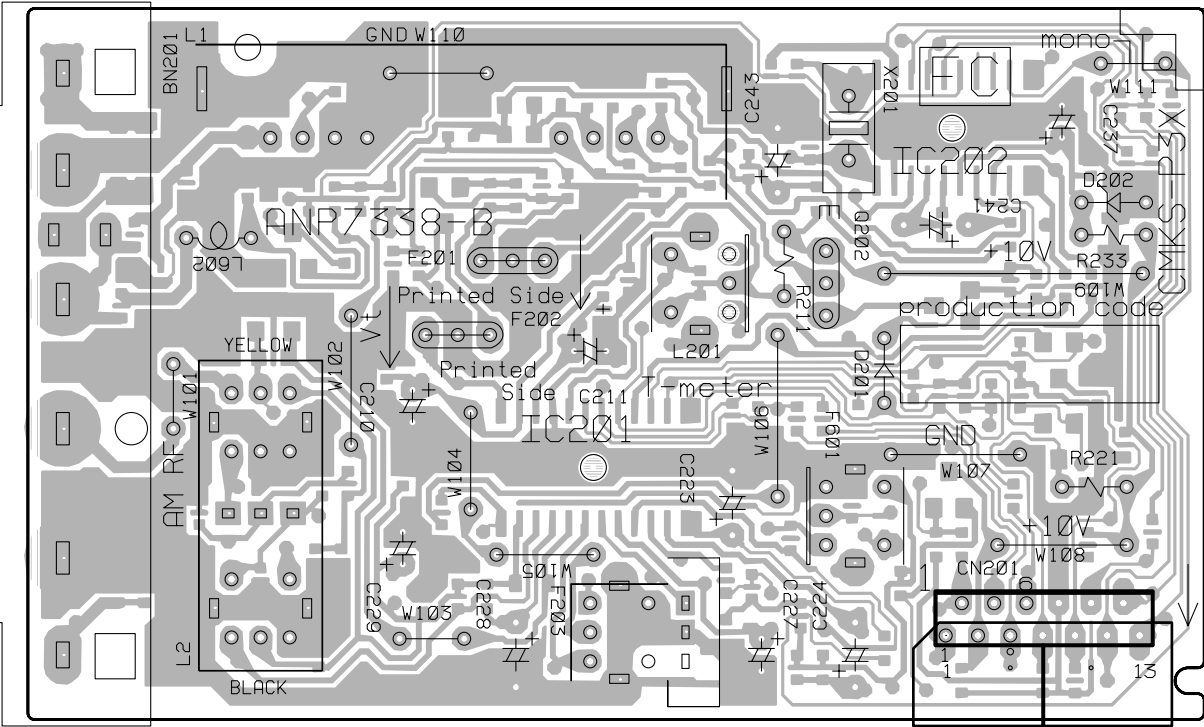


**G** CN5702 ← CN201 (ANP7338-B)

Q202

**SIDE B**

**SIDE B**

## **F** FM/AM TUNER MODULE

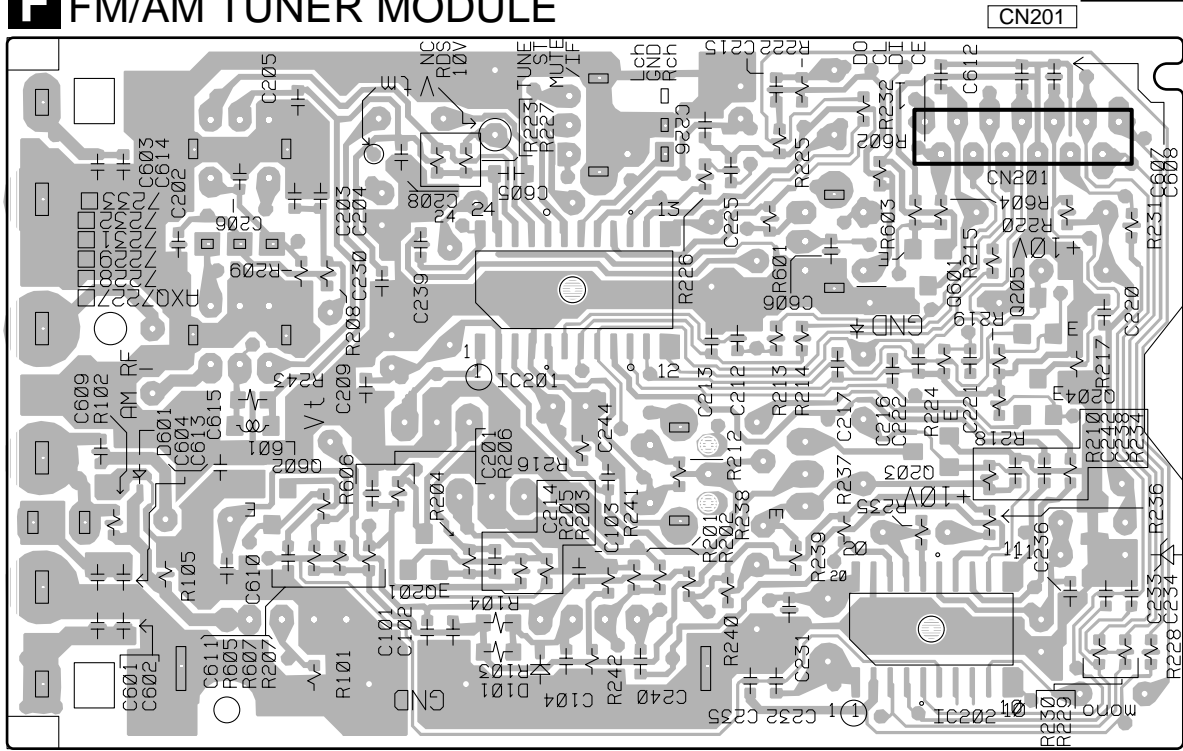

(ANP7338-B)

Q201

IC201

Q203  
IC202

Q205  
Q204

**F**

**F**





# 4.6 KEY RTOP, KEY R, KEY L and KEY LTOP ASSYS

**SIDE A**

**SIDE A**

**N** KEY L ASSY

**M** KEY R ASSY

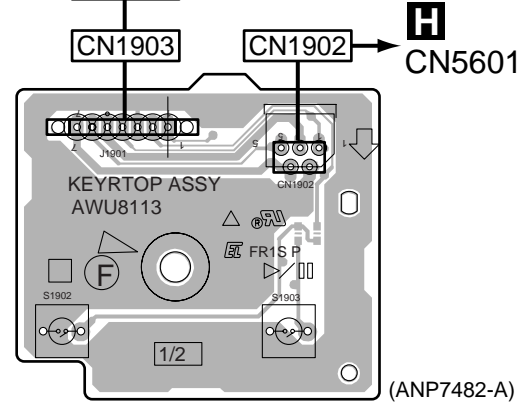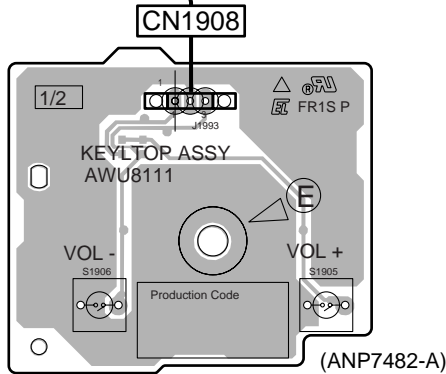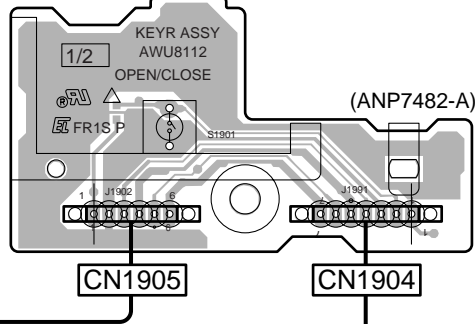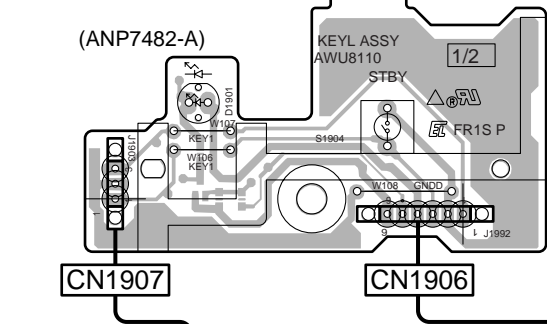

**O** KEY LTOP ASSY





**L** KEY RTOP ASSY

**SIDE B**

**SIDE B**

**O** KEY LTOP ASSY

**L** KEY RTOP ASSY

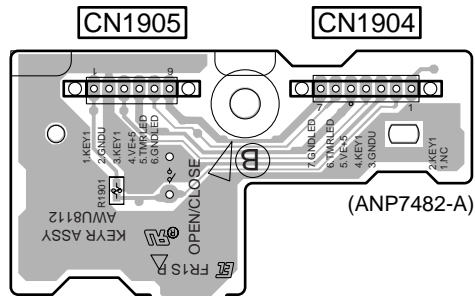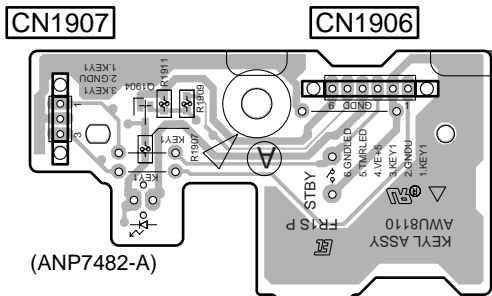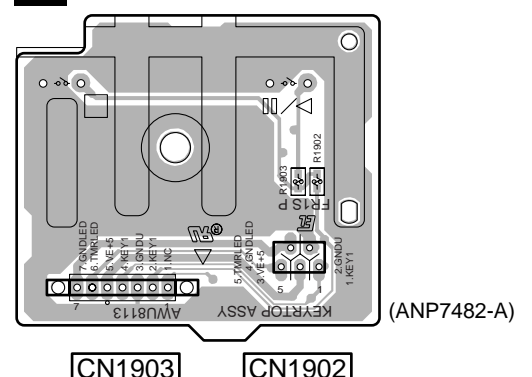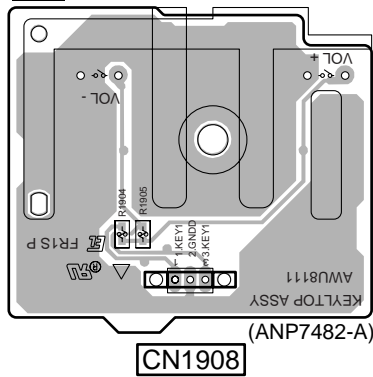

**N** KEY L ASSY

**M** KEY R ASSY


**L M N O**

**L M N O**


# 4.7 TXTRADE, CONTROL and HP ASSYS

**SIDE A**


## **H** CONTROL ASSY

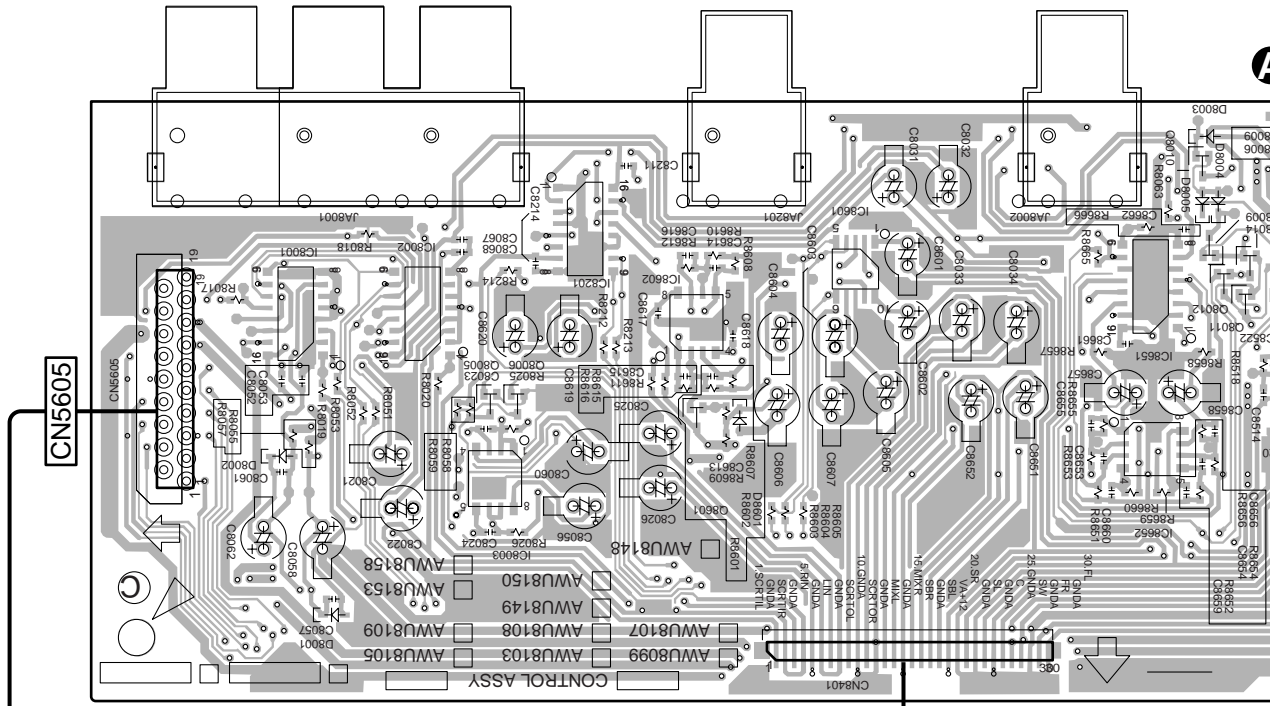

## **G** TXTRADE ASSY

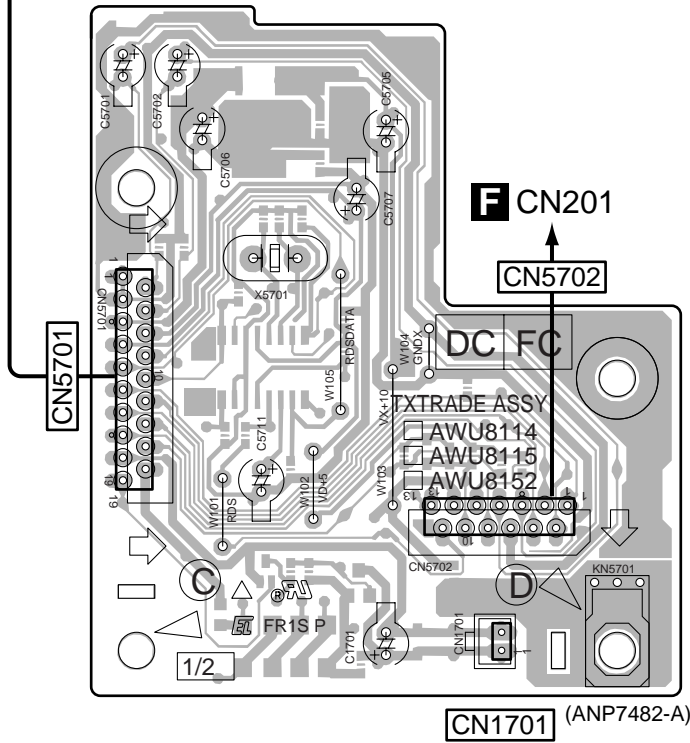

## **C** CN8302

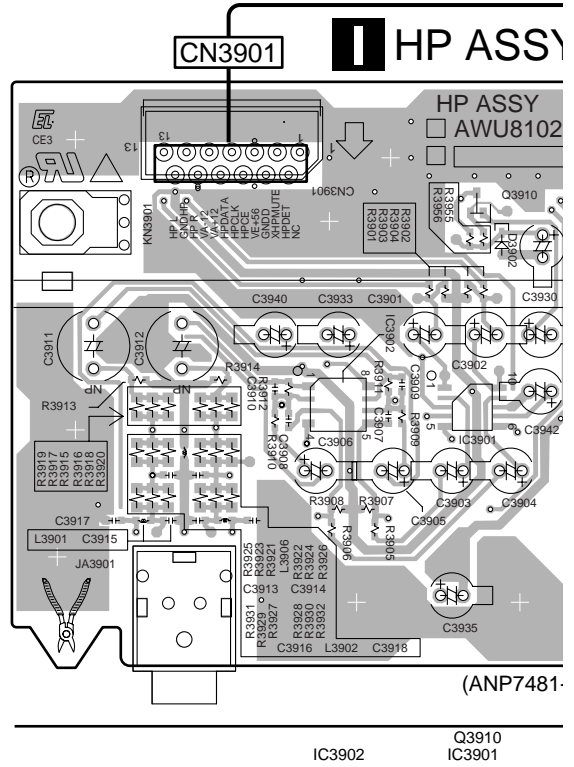

(ANP7481)

IC3902 Q3910 IC3901

IC8001 IC8002 IC8201 IC8602 IC8601 Q8010 Q8005 Q8006 Q8601 IC8651 Q8009 Q8014 IC8652 Q8012 Q8011



SIDE A

To SUB WOOFER


K CN5101

A CN8501


B CN5602

CN5201

CN5603

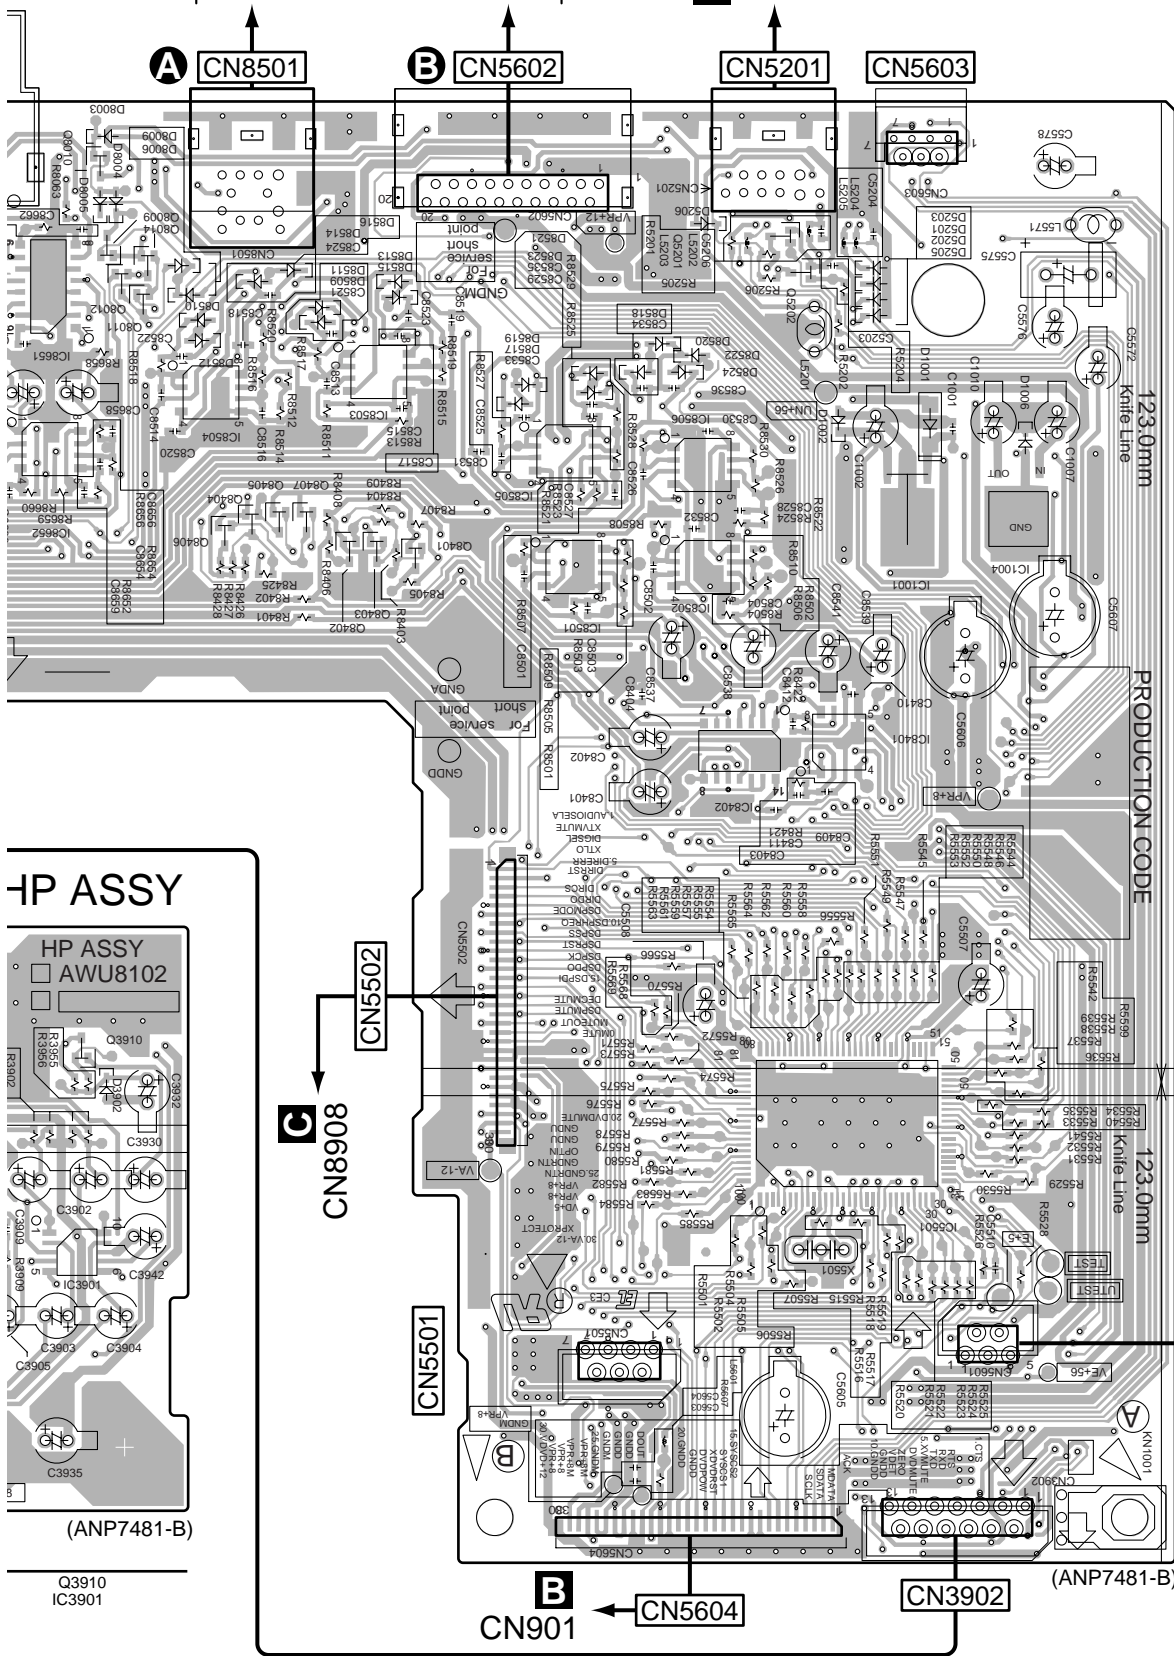

HP ASSY

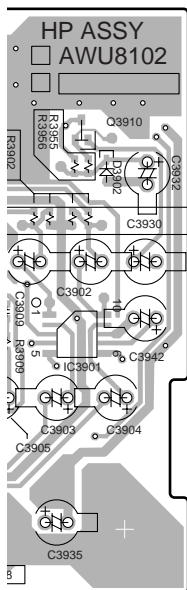

(ANP7481-B)


Q3910  
IC3901

Q8010 IC8503 IC8505 IC8506 Q5201 IC1001 IC1004  
 IC8651 Q8009 Q8014 IC8504 IC8501 IC8502  
 IC8652 Q8012 Q8011 Q8404 Q8405 IC8402 IC8401  
 Q8406 Q8407 Q8402 Q8403 Q8401 IC5501




**SIDE B**

# CONTROL ASSY

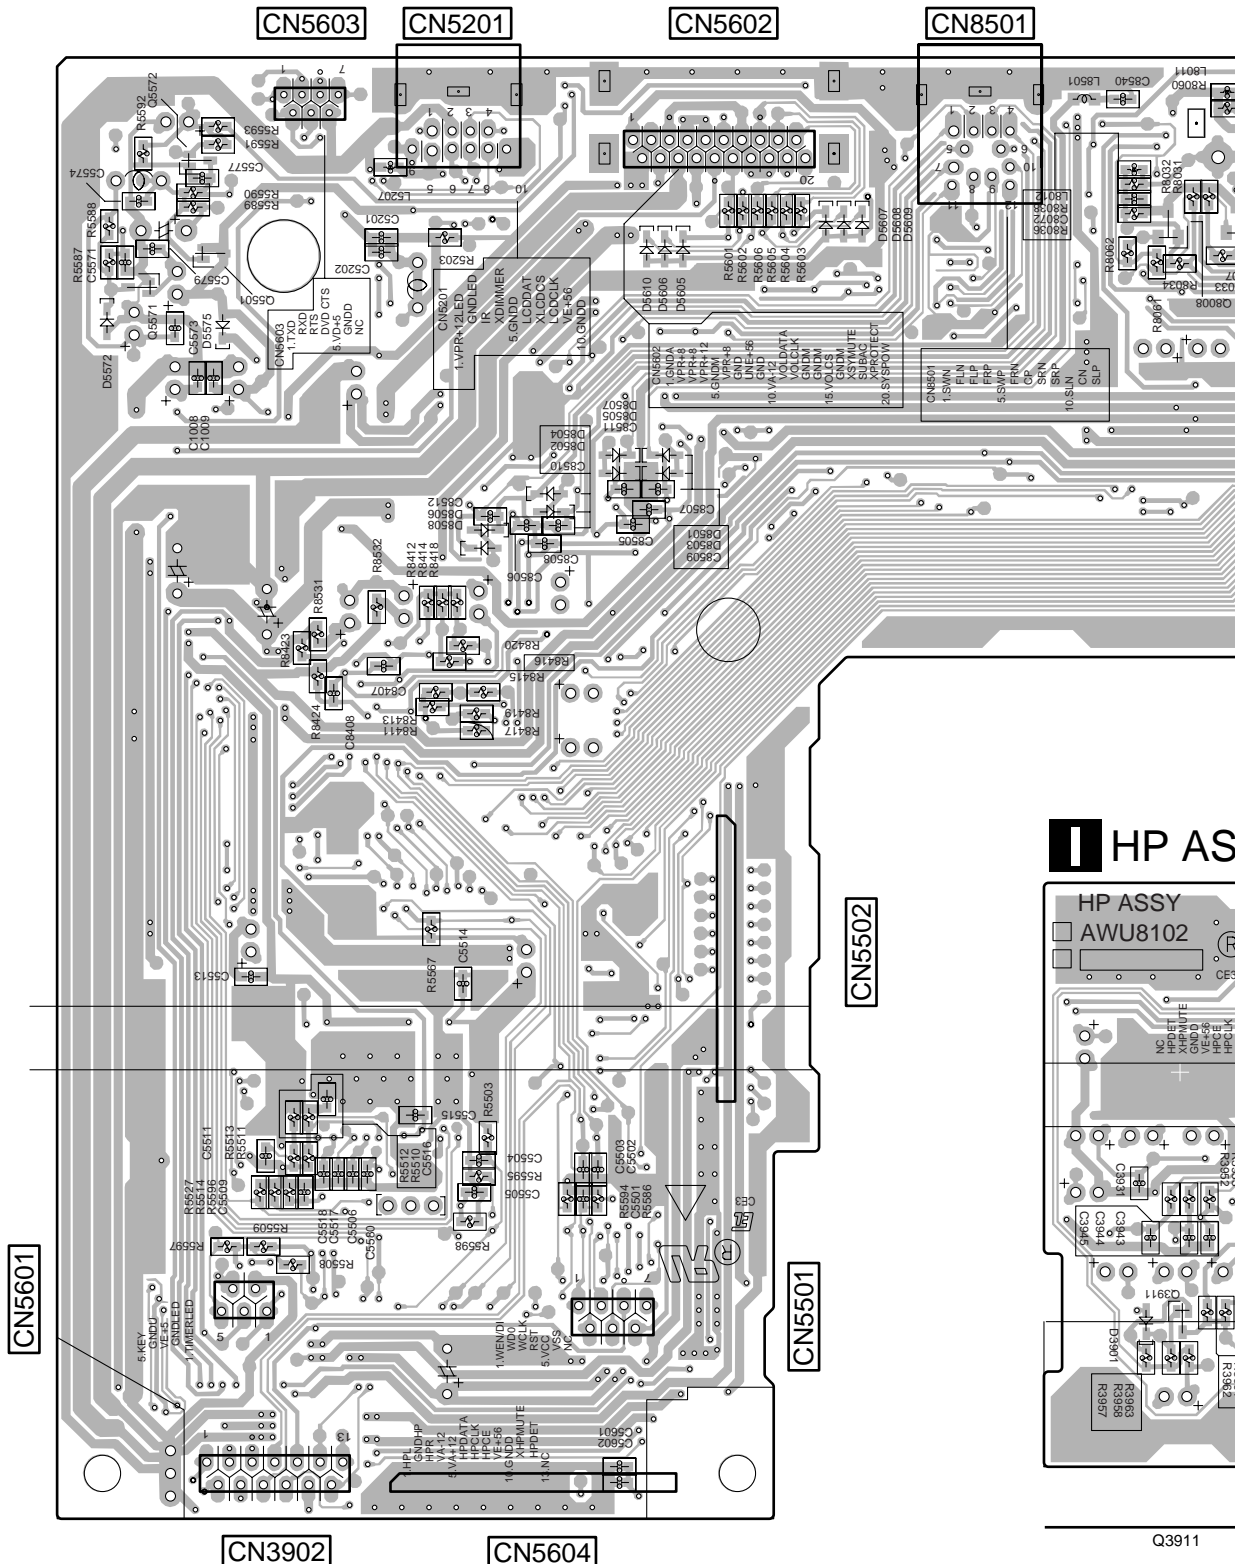

## HP AS

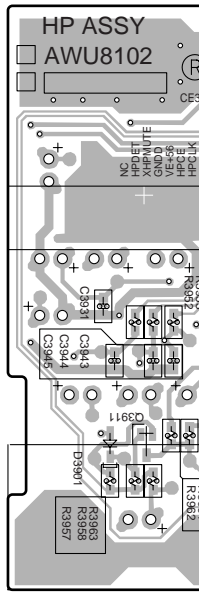


Q3911

Q5571 Q5501

Q8008 Q8009




SIDE B

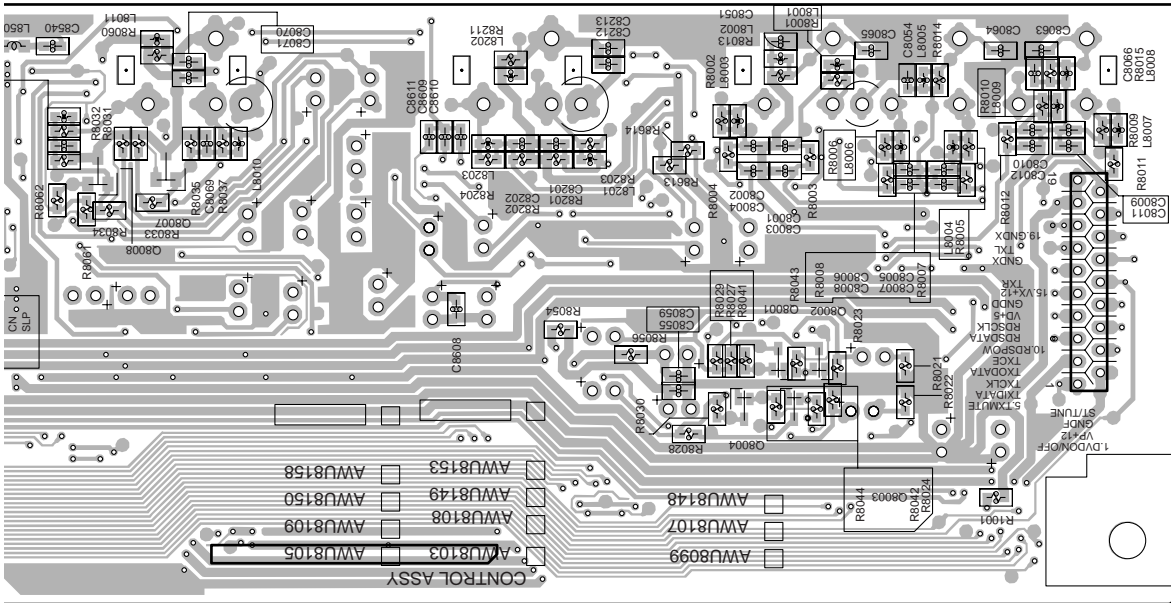

CN8401


(ANP7481-B)

G TXTRADE ASSY

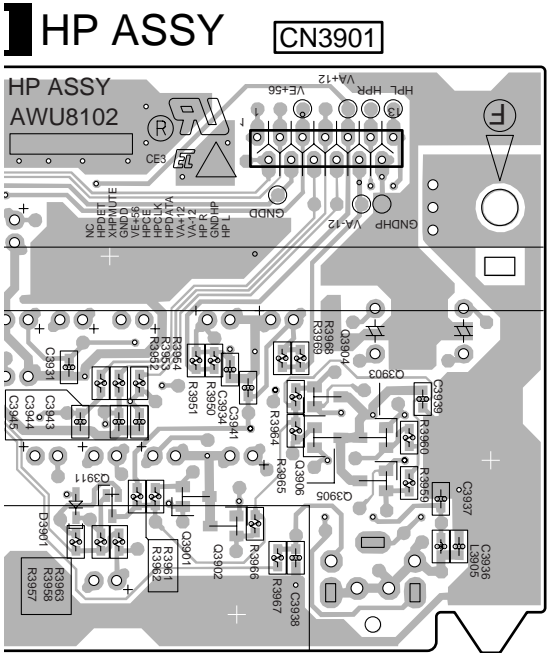

CN3901

(ANP7481-B)

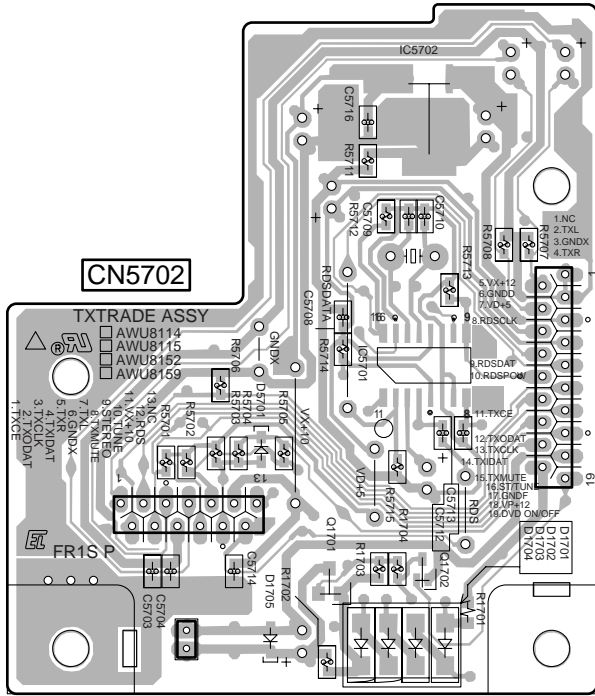

CN5702

CN5701

(ANP7482-A)

- Q3911 Q3901 Q3904
- Q3902 Q3905 Q3903
- Q3906 Q3905


Q8008 Q8007

Q8001 Q8002  
Q8004 Q8003

# 4.8 LCDCONT and CONNECT ASSYS

**SIDE A**

**SIDE A**

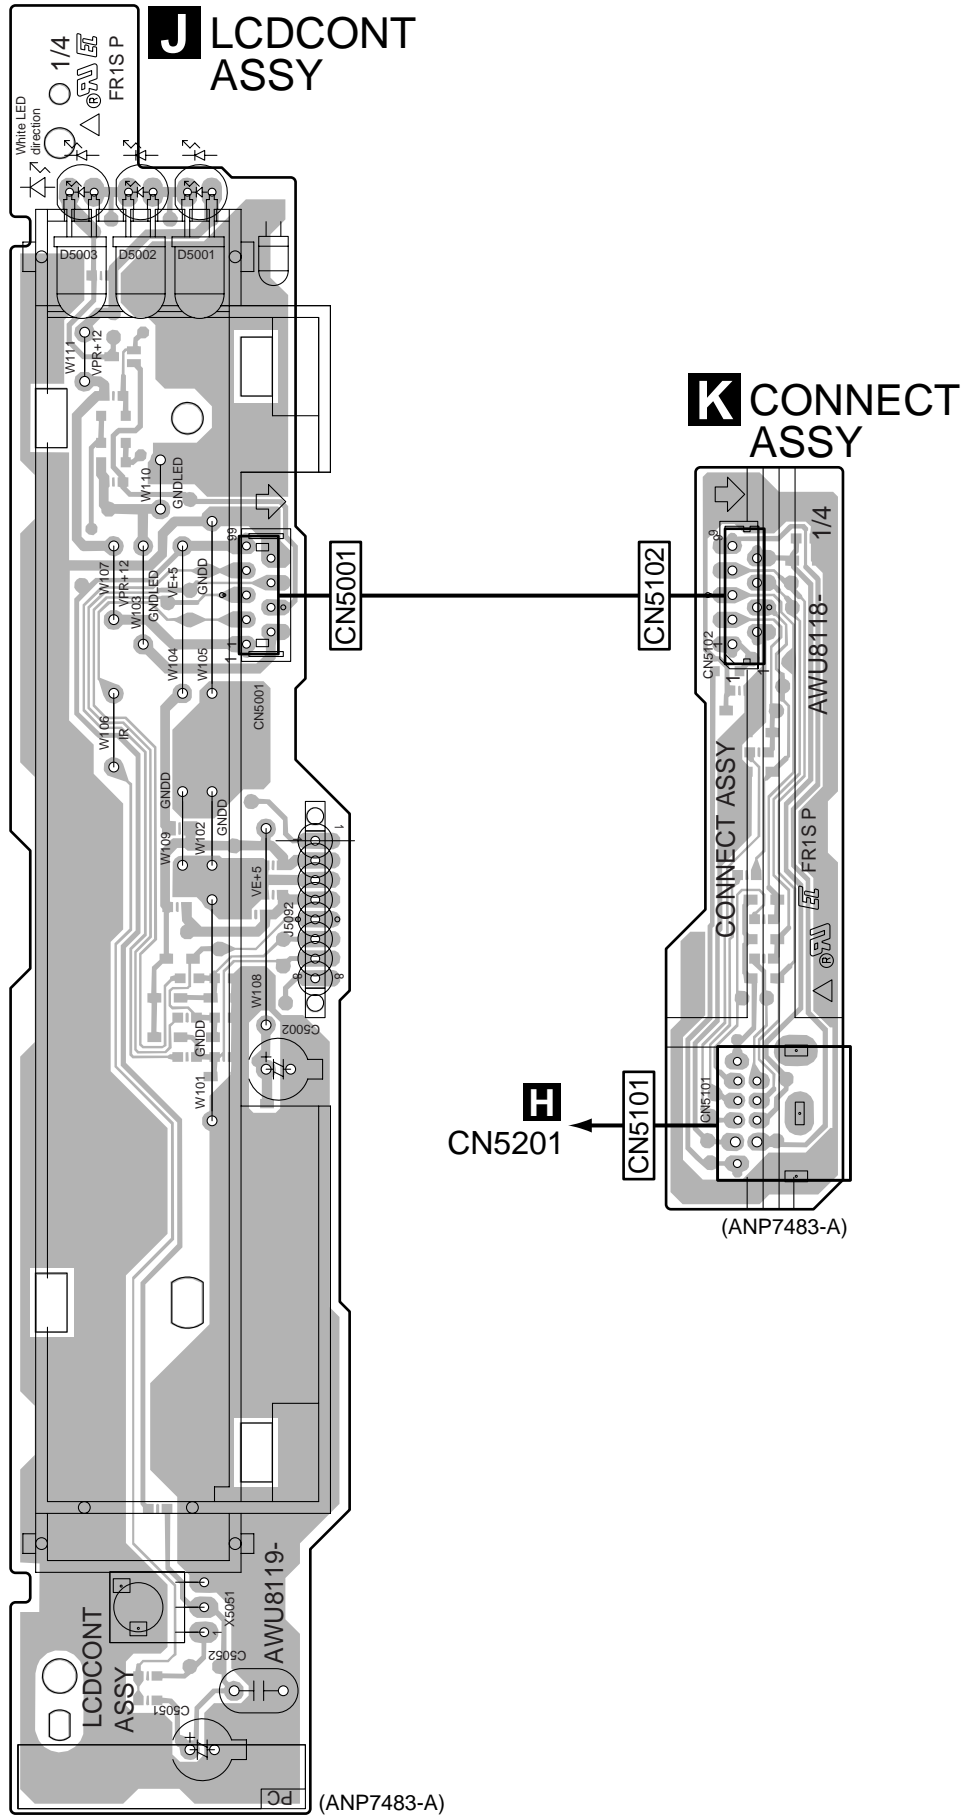

**J** LCDCONT ASSY

**K** CONNECT ASSY

CN5001

CN5102

**H**

CN5201

CN5101

(ANP7483-A)

AWU8119-

(ANP7483-A)

CONNECT ASSY

CONNECT ASSY

CONNECT ASSY

CONNECT ASSY

CONNECT ASSY

CONNECT ASSY

CONNECT ASSY

CONNECT ASSY

CONNECT ASSY

CONNECT ASSY


**J K**

**J K**


SIDE B

SIDE B

### K CONNECT ASSY

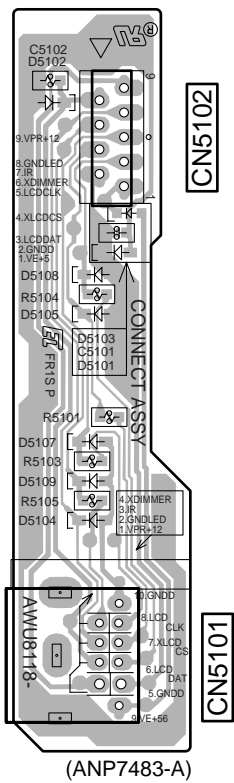

### J LCDCONT ASSY

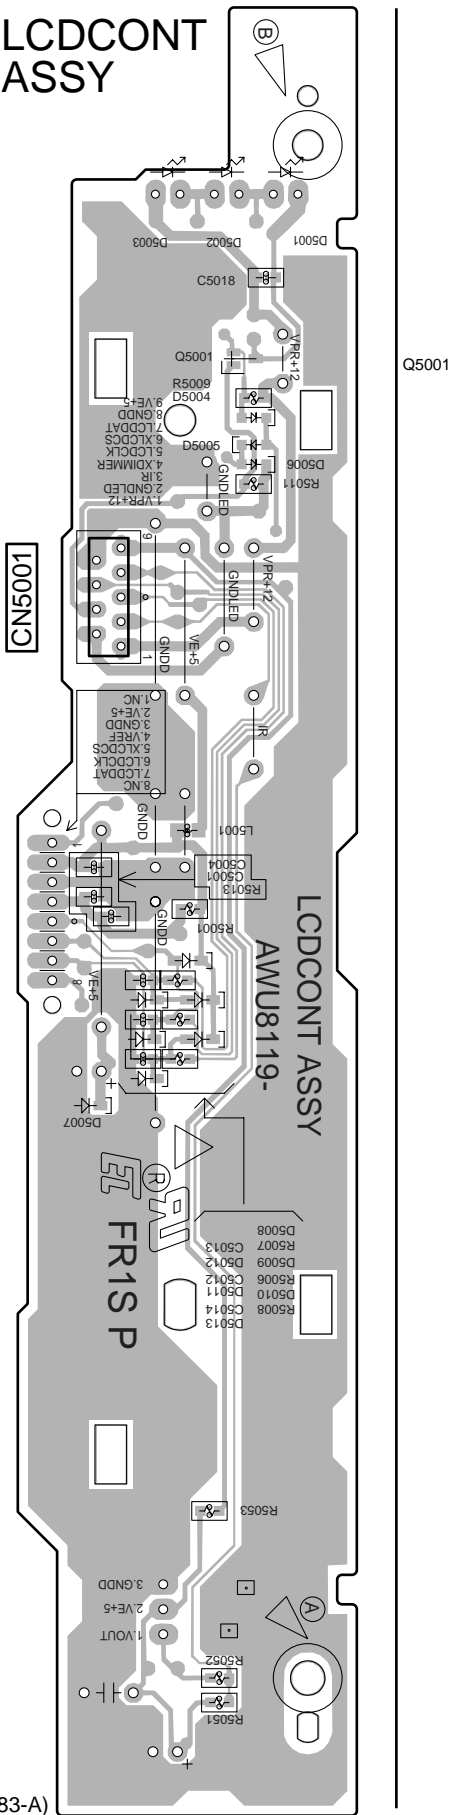

J K

J K

## 5. PCB PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5% and K=10%).

560  $\Omega$   $\rightarrow$  56 x 10<sup>1</sup>  $\rightarrow$  561 ..... RD1/4PU  $\overline{561}J$

47k  $\Omega$   $\rightarrow$  47 x 10<sup>3</sup>  $\rightarrow$  473 ..... RD1/4PU  $\overline{473}J$

0.5  $\Omega$   $\rightarrow$  R50 ..... RN2H  $\overline{R50}K$

1  $\Omega$   $\rightarrow$  1R0 ..... RS1P  $\overline{1R0}K$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k  $\Omega$   $\rightarrow$  562 x 10<sup>1</sup>  $\rightarrow$  5621 ..... RN1/4PC  $\overline{5621}F$

### • LIST OF WHOLE PCB ASSEMBLIES

Mark	Symbol and Description	XV-DV99/ ZYXJ	XV-DV99/ ZVXJ	XV-DV990/ ZYXJ	XV-DV990/ ZVXJ
NSP	1..DVD ASSY	AXA7126	AXA7126	AXA7126	AXA7126
NSP	2..Loading Mech. ASSY	VWT1208	VWT1208	VWT1208	VWT1208
NSP	3..LOAB ASSY	VWG2346	VWG2346	VWG2346	VWG2346
	2..DVDM ASSY	AWM7813	AWM7813	AWM7813	AWM7813
NSP	1..DVD COMP ASSY	AWM7844	AWM7844	AWM7866	AWM7866
	2..VIDEO ASSY	AWU8100	AWU8100	AWU8100	AWU8100
	2..DSPTRADE ASSY	AWU8101	AWU8101	AWU8101	AWU8101
	2..CONTROL ASSY	AWU8099	AWU8099	AWU8148	AWU8148
	2..HP ASSY	AWU8102	AWU8102	AWU8102	AWU8102
	1..DSP ASSY	AWX8325	AWX8325	AWX8325	AWX8325
	1..FM/AM TUNER MODULE	AXQ7229	AXQ7229	AXQ7229	AXQ7229
NSP	1..DISPLAY UNIT	AXX7163	AXX7163	AXX7163	AXX7163
	2..DISPLAY ASSY	AWM7853	AWM7853	AWM7853	AWM7853
	3..LCDCONT ASSY	AWU8119	AWU8119	AWU8119	AWU8119
	3..CONNECT ASSY	AWU8118	AWU8118	AWU8118	AWU8118
NSP	1..DVD SUB ASSY	AWM7850	AWM7850	AWM7850	AWM7850
	2..TXTRADE ASSY	AWU8114	AWU8114	AWU8114	AWU8114
	2..KEY R TOP ASSY	AWU8113	AWU8113	AWU8113	AWU8113
	2..KEY R ASSY	AWU8112	AWU8112	AWU8112	AWU8112
	2..KEY L ASSY	AWU8110	AWU8110	AWU8110	AWU8110
	2..KEY L TOP ASSY	AWU8111	AWU8111	AWU8111	AWU8111

### **H** CONTROL ASSY

AWU8099 and AWU8148 are constructed the same except for the following :

Mark	Symbol and Description	AWU8099	AWU8148
	R5510	Not used	RS1/16S333J
	R5511	RS1/16S473J	RS1/16S123J

**Mark No.**      **Description**      **Part No.**      **Mark No.**      **Description**      **Part No.**

### **A** LOAB ASSY SWITCHES AND RELAYS

S101      VSK1011

#### OTHERS

CN602 KR CONNECTOR      S2B-PH-K  
CN601 KR CONNECTOR      S5B-PH-K  
PC BOARD LOAB      VNP1836

### **B** DVDM ASSY SEMICONDUCTORS

IC741, IC761, IC781

IC861, IC871

IC851

IC602

IC802

IC101

$\Delta$  IC431

IC501

$\Delta$  IC421

$\Delta$  IC411

BA4558F-HT

DSD1702EG

DSD1791DBR

K4S281632D-TC75

K4S641632F-TC75

M63018FP

MM1565AF

MM1623AF

PQ018EH01ZP

PQ018EZ01ZP

Mark No.	Description	Part No.	Mark No.	Description	Part No.
⚠ IC441		PQ20WZ11			
⚠ IC401		R1224N102H	C761, C762, C781, C782, C867	CEVW470M6R3	
IC801		SAA7893HL/C2	C877	CEVW470M6R3	A
IC601		STI5588CVB	C406	CKSQYB104K25	
IC301		STM6316ATXXA	C431	CKSQYB105K16	
			C433	CKSQYB225K10	
IC911		TC74VHC08FT			
IC901		TC74VHCT125AFT	C127, C128, C381, C562, C563	CKSRYB102K50	
IC807		TC7SET08FU	C624, C802, C810	CKSRYB102K50	
IC691		TC7SU04FU	C112-C114, C124, C125, C130	CKSRYB103K50	
IC803		TC7WH34FU	C133, C134, C355, C805	CKSRYB103K50	
			C102, C132, C139, C300, C307	CKSRYB104K16	
IC604, IC804		TC7WU04FU			
IC603		VYW2087	C309, C315, C318, C323, C326	CKSRYB104K16	
Q390		2SA1576A	C335, C342, C348, C357, C362	CKSRYB104K16	
⚠ Q451		2SA1576A	C373, C377, C388, C391	CKSRYB104K16	B
Q744, Q764, Q923, Q924, Q926		2SA1576A	C413, C414, C423, C424	CKSRYB104K16	
			C441, C442, C451, C511, C531	CKSRYB104K16	
Q202, Q212, Q452		2SC4081			
Q741, Q742, Q761, Q762		2SD2114K	C551, C565, C571, C604, C607	CKSRYB104K16	
Q781, Q782		2SD2114K	C614, C619, C622, C623	CKSRYB104K16	
⚠ Q401		CPH6314	C626-C632, C636, C637, C641	CKSRYB104K16	
921		DTA124EUA	C647-C649, C659, C664, C671	CKSRYB104K16	
			C681, C684, C691, C694, C698	CKSRYB104K16	
Q951		DTC114TUA			
Q722, Q746, Q763, Q977		DTC114YUA	C741, C742, C749, C767-C769	CKSRYB104K16	
Q922, Q925		DTC124EUA	C787-C789, C801, C803, C804	CKSRYB104K16	
Q201, Q211		HN1A01F	C806-C808, C811, C813-C826	CKSRYB104K16	
Q911		RN1903	C829, C852, C855, C856	CKSRYB104K16	C
			C858, C859, C862, C865, C866	CKSRYB104K16	
Q603		RN4982			
D431, D432		1SR154-400	C872, C875, C876, C902, C912	CKSRYB104K16	
D402, D403, D743, D761, D782		1SS355	C921	CKSRYB104K16	
D922-D927		1SS355	C230, C232, C233, C501, C521	CKSRYB105K10	
D401		RB051L-40	C541, C603, C620, C625	CKSRYB105K10	
			C757, C758, C795	CKSRYB105K10	
D603		RB501V-40			
D921		UDZS4.7B	C394, C743-C746	CKSRYB152K50	
D741, D742, D781		UDZS6.2B	C126, C346	CKSRYB223K50	
			C202, C205, C212, C215	CKSRYB472K50	
			C402, C403, C405, C409 (10µF/16V)	DCH1165	
<b>COILS AND FILTERS</b>			<b>RESISTORS</b>		
L401 POWER INDUCTOR		ATH7011	R824, R825, R836-R838	RAB4C0R0J	
L402 POWER INDUCTOR		CTH1254	R201	RAB4C220J	
L413, L414 CHIP BEADS		ATL7010	R211	RAB4C390J	
L390		LCYA2R7J2520	R100, R1011-R1013, R1069, R111	RS1/10S0R0J	
L1056-L1061 CHIP BEADS		VTL1078	R210, R387-R389, R412, R415	RS1/10S0R0J	
<b>CAPACITORS</b>			R417, R421, R422, R483, R485	RS1/10S0R0J	
C408, C747, C748, C751, C752		CCSRCH121J50	R561, R600, R623, R840, R884	RS1/10S0R0J	
C390		CCSRCH180J50	R403	RS1/10S100J	
C142		CCSRCH221J50	R105, R106, R115-R120	RS1/10S4R7J	
C765, C766, C785, C786		CCSRCH270J50	R104, R107	RS1/10S6R8J	
C200, C763, C764, C783, C784		CCSRCH331J50			
C690		CCSRCH470J50	R125, R144, R330, R331, R628	RS1/16S1002F	E
C755, C756, C773, C774		CCSRCH471J50	R635, R761-R764, R781-R784	RS1/16S1002F	
C793, C794		CCSRCH471J50	R301	RS1/16S1202F	
C392		CCSRCH560J50	R502, R512, R522, R532, R542	RS1/16S1500F	
C393, C640, C644		CCSRCH7R0D50	R552	RS1/16S1500F	
C452, C753, C754, C771, C772		CEVW100M16			
C791, C792		CEVW100M16	R408	RS1/16S1502F	
C101, C401, C404, C410, C412		CEVW101M16	R410	RS1/16S1802F	
C422, C443, C561, C564, C600		CEVW101M16	R443	RS1/16S2001F	
C750, C797-C799, C809, C851		CEVW101M16	R741-R746, R751, R752	RS1/16S2201F	
			R409	RS1/16S2702F	
C853, C854, C861, C863, C864		CEVW101M16			
C871, C873, C874		CEVW101M16	R441	RS1/16S4701F	F
C415, C425, C621, C660, C812		CEVW101M4	R101, R102, R123, R142, R143	RS1/16S5600F	
C857		CEVW101M4	R442	RS1/16S6801F	
C201, C211		CEVW470M16	R411	RS1/8S0R0J	

Mark No.	Description	Part No.
	Other Resistors	RS1/16S###J

**OTHERS**

CN104	4P CONNECTOR	AKN7035
CN105	12P FFC CONNECTOR	RKN1053
CN103	CONNECTOR	S5B-PH-SM3
	FLEXIBLE CABLE	VDA1681
CN901, CN943	30P FFC CONNECTOR	VKN1322
CN101	0.5-24P CONNECTOR	VKN1482
X601	(27MHz)	VSS1172
X301	(20MHz)	VSS1186

## C VIDEO ASSY SEMICONDUCTORS

IC5601	AEK7065
IC1002, IC1003	BA05FP
IC8301-IC8303	BA4558F-HT
IC8381, IC8382	BU4053BCF
IC8861	MM1505XN

IC8862	MM1507XN
Q8832, Q8842, Q8901, Q8902	2SA1576A
Q8831, Q8841	2SC4081
Q8301, Q8302, Q8331, Q8332	2SD2114K
Q8351, Q8352, Q8871, Q8872	2SD2114K

Q5601, Q8321, Q8382, Q8383, Q8873	UN5112
Q5602, Q5603, Q8381, Q8903	UN5212
D1004	1SR154-400
D5601-D5604, D8382, D8383, D8841	1SS355
D8861-D8864, D8871, D8901, D8902	1SS355

D8391, D8392	UDZS6.8B
--------------	----------

**COILS AND FILTERS**

L8252 CHIP BEADS	VTL1076
------------------	---------

**CAPACITORS**

C8877, C8878	CCSRCH101J50
C8875, C8876	CCSRCH221J50
C8871, C8872	CCSRCH391J50
C8803-C8805, C8889-C8892	CCSRCH470J50
C8307, C8308	CCSRCH680J50

C8303, C8304	CCSRCH681J50
C8337, C8338, C8357	CCSRCH821J50
C8313-C8316, C8341-C8344	CEAT100M50
C8361-C8364, C8862	CEAT100M50
C8252, C8881-C8883	CEAT101M16

C8801, C8802, C8884	CEAT102M6R3
C8863, C8868	CEAT470M16
C8383-C8388, C8391, C8392	CEJQ100M16
C8901-C8906	CEJQ100M16
C1004, C1006, C8309, C8310	CEJQ470M16

C8311, C8312, C8339, C8340	CKSRYB103K50
C8359, C8360, C8381, C8382	CKSRYB103K50
C1003, C1005, C8251, C8253, C8831	CKSRYB104K25
C8842, C8843, C8861, C8864-C8867	CKSRYB104K25
C8331-C8334, C8351, C8353	CKSRYB152K50

C8354	CKSRYB224K10
C8358	CKSRYB562K50

**RESISTORS**

R8834	RS1/16S68R0F
R8801-R8803, R8885-R8888	RS1/16S75R0F
Other Resistors	RS1/16S###J

Mark No.	Description	Part No.
----------	-------------	----------

**OTHERS**

CN8802	4P MINI DIN SOCKET	AKP7045
CN8906, CN8907	23P PLUG	AKP7064
JA8251	OPT LINK IN	GP1FA512RZB
	PCB BINDER	VEF1040
JA8801	1P PIN JACK	VKB1122
JA8871	RGB CONNECTOR	VKB1157
CN8302, CN8908	30P FFC CONNECTOR	VKN1322
CN8301	30P FFC CONNECTOR	VKN1434

## D DSP ASSY SEMICONDUCTORS

IC8201	AK4114VQ
IC8401	AK4628VQ
IC8501	DSPD56367PV150
IC8901	NJM2391DL1-33
IC8902	NJU7223DL1-18

IC8701	TC74LVX244FT
IC8702	TC74VHCT244AFT
IC8502	TC7WU04FU
Q8504	UMD2N
Q8503	UN5112

D8501	1SS355
D8401	DAN202K
D8402, D8502, D8503	DAP202K

**COILS AND FILTERS**

L8002, L8004, L8501, L8502	ATL7002
L8201, L8203, L8204, L8401, L8402	QTL1013
L8504, L8701, L8702	QTL1013

**CAPACITORS**

C8209, C8210	CCSRCH100D50
C8421	CCSRCH101J50
C8007, C8008, C8201, C8212, C8214	CCSRCH471J50
C8404, C8409-C8414, C8416, C8417	CCSRCH471J50
C8419, C8505, C8507, C8509	CCSRCH471J50

C8511, C8512, C8515, C8518, C8520	CCSRCH471J50
C8522, C8524, C8526, C8528, C8530	CCSRCH471J50
C8532, C8534, C8536, C8539, C8541	CCSRCH471J50
C8543, C8545, C8551, C8703, C8706	CCSRCH471J50
C8548, C8549	CCSRCH8R0D50

C8701, C8704	CEV100M16
C8406, C8415, C8546, C8547, C8902	CEV101M16
C8904	CEV101M16
C8217, C8225, C8408	CEV470M6R3
C8204, C8555	CKSRYB102K50

C8009, C8405, C8418, C8517, C8554	CKSRYB103K50
C8003, C8005, C8010, C8202, C8207	CKSRYB104K16
C8213, C8215, C8407, C8420, C8422	CKSRYB104K16
C8504, C8513, C8521, C8523, C8525	CKSRYB104K16
C8527, C8529, C8531, C8533, C8535	CKSRYB104K16

C8537, C8538, C8540, C8542, C8544	CKSRYB104K16
C8550, C8702, C8705, C8901, C8903	CKSRYB104K16
C8516	CKSRYB105K6R3
C8514	CKSRYB333K16
C8203	CKSRYB473K50

**RESISTORS**

R8506	RAB4C101J
R8201	RS1/16S1802F



<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
	Other Resistors	RS1/16S###J
<b><u>OTHERS</u></b>		
X8501	(27MHz)	VSS1171
X8201	(24.576MHz)	XSS3003
CN8003	13P SOCKET	AKP7070
CN8007, CN8011	19P SOCKET	AKP7073
KN8102	WRAPPING TERMINAL	VNF1084

## **E** DSPTRADE ASSY **CAPACITORS**

C8907	CKSRYB104K16
-------	--------------

### **OTHERS**

CN8901	13P PLUG	AKP7059
CN8902, CN8903	19P PLUG	AKP7062
CN8904, CN8905	23P SOCKET	AKP7178

## **F** FM/AM TUNER MODULE **SEMICONDUCTORS**

IC201	BA1451F
IC202	LC72131MD
Q201, Q204, Q205, Q601	2SC2412K
Q202	DTA124ES
Q203	DTC124EK
D201	1SS133
D202	MTZJ5.1C
D101	UDZS6.8B

### **COILS AND FILTERS**

L201	FM DETECTOR COIL	ATE7003
F202	FM CERAMIC FILTER	ATF-107
F201	FM CERAMIC FILTER	ATF-119
F203	AM CERAMIC FILTER	ATF1155
F601	ANTIBIRDY FILTER	ATF7025
L601	LCTA270J2520	

### **CAPACITORS**

C605	CCSQCH680J50
C212, C213, C226, C233-C235	CCSRCH101J50
C240, C614	CCSRCH101J50
C206	CCSRCH120J50
C231, C232	CCSRCH150J50
C223	CEAT100M50
C229	CEAT101M10
C224	CEAT1R0M50
C227	CEAT220M25
C241	CEAT2R2M50
C243	CEAT330M16
C228	CEAT3R3M50
C237	CEAT470M10
C211	CEJA1R0M50
C210	CEJA470M16
C103, C104, C204, C238	CKSRYB102K50
C102, C208, C216, C217, C220	CKSRYB103K50
C239, C242, C604, C615	CKSRYB103K50
C225	CKSRYB153K50
C607, C608	CKSRYB182K50
C201, C205, C214, C230, C236	CKSRYB223K50
C244	CKSRYB223K50
C221	CKSRYB224K10

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
C603		CKSRYB392K50
C215		CKSRYB471K50
C202, C222		CKSRYB473K16
C606		CKSRYB561K50

### **RESISTORS**

R211	RD1/4PU221J
R221	RD1/4PU222J
R233	RD1/4PU391J
R103, R104	RS1/10S221J
Other Resistors	RS1/16S###J

### **OTHERS**

CN201	13P FFC CONNECTOR	52044-1345
BN201	AKA7002	
	2P ANTENNA TERMINAL WITH PAL SHIELD CASE T	ANK7072
	SHIELD CASE B	ANK7073
X201	CRYSTAL RESONATOR (7.2MHz)	ASS1093

## **G** TXTRADE ASSY **SEMICONDUCTORS**

IC5702	BA10FP
IC5701	BU1924F
D5701	1SS355

### **CAPACITORS**

C5709, C5710	CCSRCH270J50
C5712	CCSRCH271J50
C5713	CCSRCH561J50
C5701, C5702, C5706, C5711	CEAT100M50
C5705, C5707	CEAT470M16
C5708	CKSRYB103K50
C5703, C5704, C5716	CKSRYB104K16

### **RESISTORS**

Other Resistors	RS1/16S###J
-----------------	-------------

### **OTHERS**

X5701 (4.332MHz)	ASS7004	
CN5702	13P FFC CONECTOR	52045-1345
CN5701	19P FFCCONNECTOR	52045-1945
KN5701	WRAPPING TERMINAL	VNF1084

## **H** CONTROL ASSY **SEMICONDUCTORS**

IC1001	BA12FP
IC8003, IC8401, IC8501-IC8506, IC8652	BA4558F-HT
IC8001, IC8002	BU4051BCF
IC8651	BU4052BCF
IC8402	BU4066BCF
IC1004	NJM7805DL1A
IC5501	PDC110B
Q5201, Q5202, Q5501, Q5572	2SC4081
Q8001-Q8004, Q8401, Q8402	2SC4081
Q8007, Q8008	2SD2114K
Q8005, Q8006, Q8010-Q8012	UN5112
Q8403, Q8404, Q8406	UN5112
Q8009, Q8014, Q8405, Q8407	UN5212
Q5571	UN521L

Mark No.	Description	Part No.
D1001		1SR154-400
D1006, D5575, D8003-D8006, D8009 D8001, D8002 D5201-D5203, D5205, D5206 D5605-D5610		1SS355 UDZS6.8B UDZS8.2B UDZS8.2B

### COILS AND FILTERS

L5571	INDUCTOR	LFEA220J
L5601	CHIP BEADS	VTL1075

### CAPACITORS

C5575 (0.047F/5.5V) C5203, C5204, C5505, C5510, C5511 C5577, C8069, C8072 C8001-C8012 C1007, C1010, C5576, C8021, C8022		ACH1246 CCSRCH101J50 CCSRCH101J50 CCSRCH221J50 CEAT100M50 CEAT100M50
---	--	---

C8025, C8026, C8031-C8034 C8401, C8402, C8537, C8538 C8651, C8652, C8657, C8658 C5507, C5508, C5572, C8539, C8541 C5606		CEAT100M50 CEAT100M50 CEAT100M50 CEAT101M16 CEAT102M10
---	--	--

C5578 C5605 C1002, C8056, C8058, C8060, C8062 C5504 C1008, C1009, C5506, C5517, C5518		CEAT1R0M50 CEAT222M10 CEAT470M16 CKSRYB102K50 CKSRYB103K50
---	--	--

C5571, C5573, C5580, C8055, C8057 C8059, C8061, C8403, C8404 C8407, C8408, C8505-C8512 C8517-C8524, C8529-C8536, C8540 C8659, C8660		CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB103K50
---	--	--

C1001, C5513-C5516, C5574 C8063-C8065, C8070, C8661, C8662		CKSRYB104K16 CKSRYB104K16
---	--	------------------------------

### RESISTORS

R8501, R8502, R8505, R8506 R8511, R8512, R8515, R8516 R8521, R8522, R8525, R8526 Other Resistors		RS1/16S1002F RS1/16S1002F RS1/16S1002F RS1/16S###J
---	--	---

### OTHERS

X5501 (10MHz) CN5601 5P FFC CONNECTOR CN5501 7P FFC CONNECTORS CN3902 13P FFC CONNECTOR CN5605 19P FFC CONNECTOR		ASS7034 52045-0545 52045-0745 52045-1345 52045-1945
--	--	---

8001 6P PIN JACK CN5602 20P SOCKET CN8501 12P CONNECTOR CN5201 10P CONNECTOR JA8002 2P PIN JACK		AKB7012 AKP7129 AKP7131 AKP7134 RKB1041
---	--	---

CN5603 7P FFC CONNECTOR CN5502, CN5604, CN8401 30P FFC CONNECTOR KN1001 WRAPPING TERMINAL		VKN1267 VKN1434 VNF1084
--	--	-------------------------------

### HP ASSY SEMICONDUCTORS

IC3901 IC3902 Q3911 Q3910		LC75344M NJM4560M 2SA1576A 2SC4081
------------------------------------	--	---

Mark No.	Description	Part No.
Q3903-Q3906		2SD2114K
D3901 D3902		1SS355 UDZS11B

### CAPACITORS

C3909, C3910 C3907, C3908 C3901-C3904, C3930, C3932, C3935 C3905, C3906, C3933, C3940, C3942 C3911, C3912		CCSRCH101J50 CCSRCH470J50 CEAT100M50 CEAT470M16 CEJQNP101M16
---	--	--

C3913, C3914 C3931 C3936, C3939 C3915, C3916		CKSRYB102K50 CKSRYB103K50 CKSRYB104K16 CKSRYB223K25
---	--	--

### RESISTORS

R3915-R3932 Other Resistors		RS1/10S101J RS1/16S###J
--------------------------------	--	----------------------------

### OTHERS

CN3901 13P FFC CONNECTOR 3901 MINI JACK KN3901 WRAPPING TERMINAL		52044-1345 AKN7026 VNF1084
--	--	----------------------------------

### J LCDCONT ASSY SEMICONDUCTORS

Q5001 D5004-D5006 D5007, D5011-D5013		2SC4081 1SS355 UDZS6.2B
--	--	-------------------------------

### CAPACITORS

C5012-C5014 C5002, C5051 C5052 C5018 C5001, C5004		CCSRCH220J50 CEAL470M16 CFTLA104J50 CKSRYB103K50 CKSRYB104K16
---	--	---

### RESISTORS

Other Resistors		RS1/16S###J
-----------------	--	-------------

### OTHERS

CN5001 9P SOCKET 5051 REMOTE RECEIVER UNIT		AKP7068 GP1UM27XK
---	--	----------------------

### K CONNECT ASSY SEMICONDUCTORS

D5103 D5101, D5102 D5104, D5105, D5107-D5109		1SS355 HZU2.0B UDZS8.2B
--	--	-------------------------------

### RESISTORS

Other Resistors		RS1/16S###J
-----------------	--	-------------

### OTHERS

CN5102 9P PLUG CN5101 10P CONNECTOR		AKP7057 AKP7134
--	--	--------------------

### L KEY R TOP ASSY SWITCHES AND RELAYS

S1902, S1903		ASG7013
--------------	--	---------

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
-----------------	--------------------	-----------------

**RESISTORS**

Other Resistors		RS1/16S###J
-----------------	--	-------------

**OTHERS**

1903	7P CABLE HOLDER	51048-0700
CN1902	5P FFC CONNECTOR	52044-0545
J1901	JUMPER WIRE	D20PYY0710E

### **M** KEY R ASSY

#### **SWITCHES AND RELAYS**

S1901		ASG7013
-------	--	---------

**RESISTORS**

Other Resistors		RS1/16S###J
-----------------	--	-------------

**OTHERS**

1905	6P CABLE HOLDER	51048-0600
1904	7P CABLE HOLDER	51048-0700
J1902	PARALELL WIRE	D20PYY0625E

### **N** KEY L ASSY

#### **SEMICONDUCTORS**

Q1904		2SC4081
D1901		SLR-343PC(LM)

**SWITCHES AND RELAYS**

S1904		ASG7013
-------	--	---------

**RESISTORS**

Other Resistors		RS1/16S###J
-----------------	--	-------------

**OTHERS**

1907	3P CABLE HOLDER	51048-0300
1906	6P CABLE HOLDER	51048-0600
J1903	JUMPER WIRE	D20PYY0310E

### **O** KEY L TOP ASSY

#### **SWITCHES AND RELAYS**

S1905, S1906		ASG7013
--------------	--	---------

**RESISTORS**

Other Resistors		RS1/16S###J
-----------------	--	-------------

**OTHERS**

1908	3P CABLE HOLDER	51048-0300
------	-----------------	------------

# 6. ADJUSTMENT

## 6.1 TUNER SECTION



### AM Tuner Section

- There is no adjustment in the AM tuner.

### FM Tuner Section

- Set the mode selector to FM BAND.
- Connect the wiring as shown in Fig. 1.

#### [ANT. INPUT SIGNAL]

- Frequency : 98 MHz
- Modulation : OFF
- Input Level : 80 dB $\mu$ V

Step No.	Adjustment Title	Adjustment point	Measurement point	Adjustment value	Adjustment State
1	T-METER Adjustment	L201	IC201 Pin 21/Pin23	0 $\pm$ 50mV	Adjust L201 so that the DC voltage between Pin 21 and Pin 23 of IC201 (Test point "Vtm") gets within 0 $\pm$ 50mV.

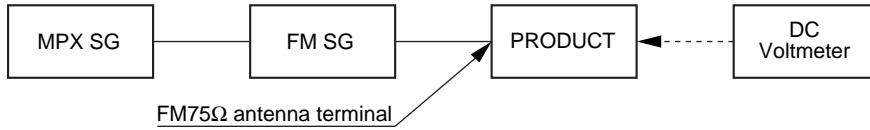


Fig.1 Adjustment Wiring Diagram

### FM/AM TUNER MODULE

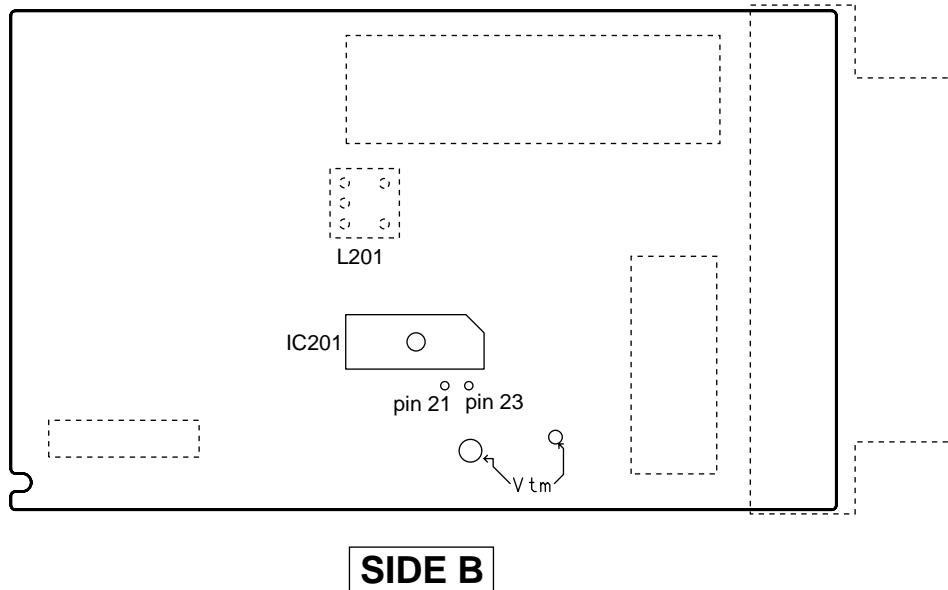


Fig.2 Adjustment Point

## 6.2 ADJUSTMENT ITEMS AND LOCATION

### ■ Adjustment Items

[Mechanism Part]


- ① Tangential and Radial Height Coarse Adjustment
- ② DVD Jitter Adjustment

[Electrical Part]








Electrical adjustments are not required.
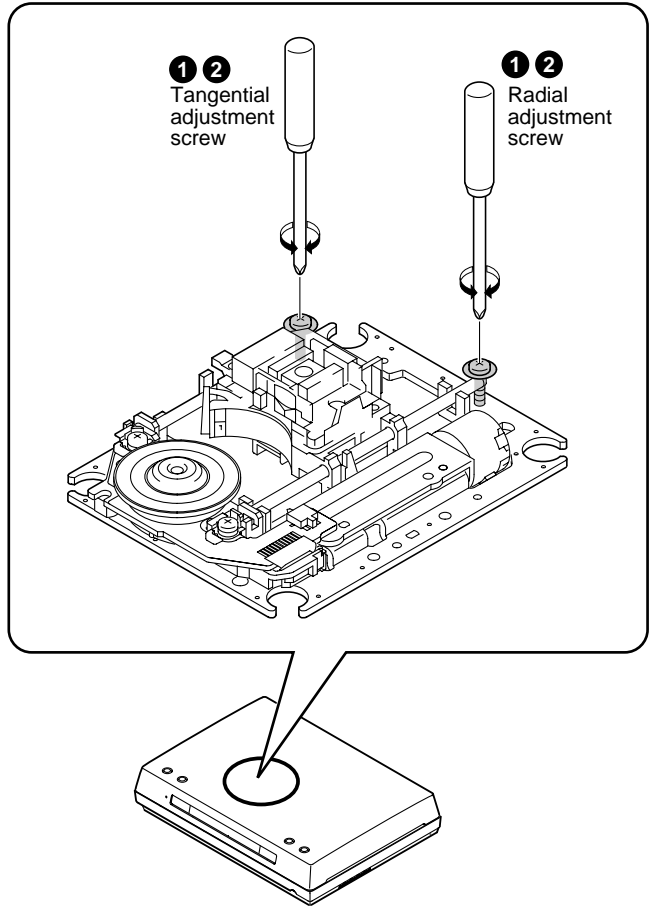
### ■ Adjustment Points (Mechanism Part)

**Cautions:** After adjustment, adjustment screw locks with the Screw tight.

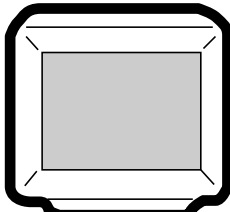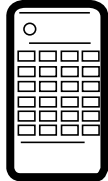

## 6.3 JIGS AND MEASURING INSTRUMENTS

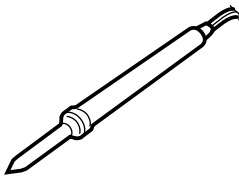 <p>⊕ Screwdriver (large)</p>	 <p>⊕ Screwdriver (medium)</p>	 <p>TV monitor</p>	 <p>Test mode remote control unit (GGF1381)</p>
 <p>⊕ Precise screwdriver</p>	 <p>DVD test disc (GGV1025)</p>	 <p>Soldering iron</p>	<p>Screw tight (GYL1001)</p>

# 6.4 NECESSARY ADJUSTMENT POINTS

When

Adjustment Points

## ■ Exchange Parts of Mechanism Assy

Exchange the Pickup

Mechanical point

①, ②

\* After adjustment, screw locks with the Screw tight.

Electric point

Exchange the Traverse Mechanism

Mechanical point

Electric point

Exchange the Spindle Motor

Mechanical point

②

\* After adjustment, screw locks with the Screw tight.

Electric point

## ■ Exchange PCB Assy

Exchange PC Board  
LOAB and DVDM ASSY


Mechanical point

Electric point


# 6.5 TEST MODE

• The TEST MODE functions that are used only during adjustment are described here. For details, see "7.1.1 TEST MODE".


## TEST MODE: ON

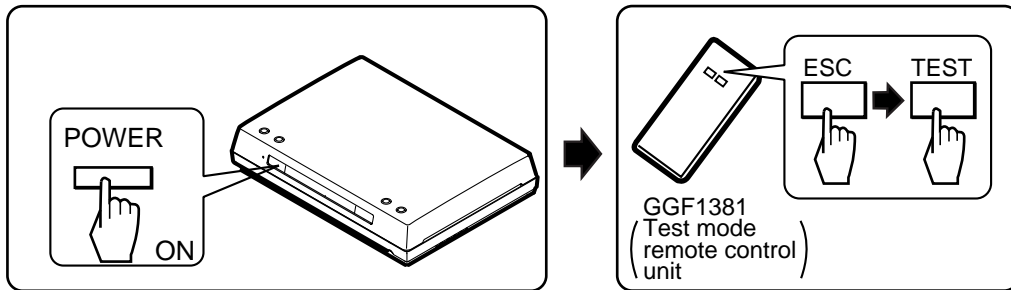

## TEST MODE: DISC SET

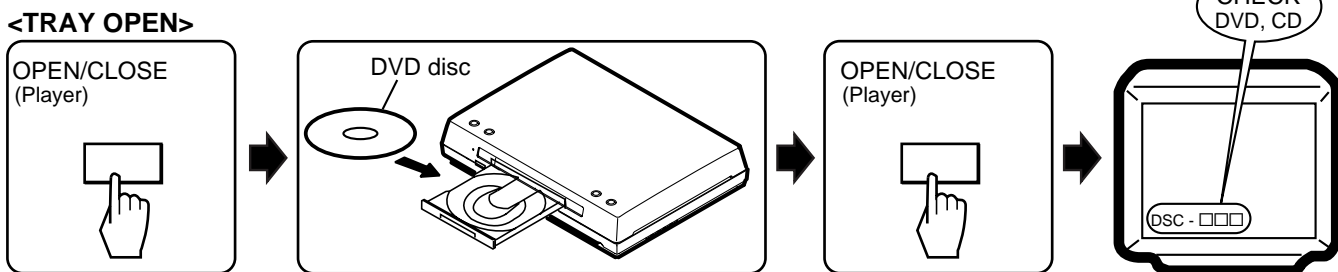


## TEST MODE: PLAY

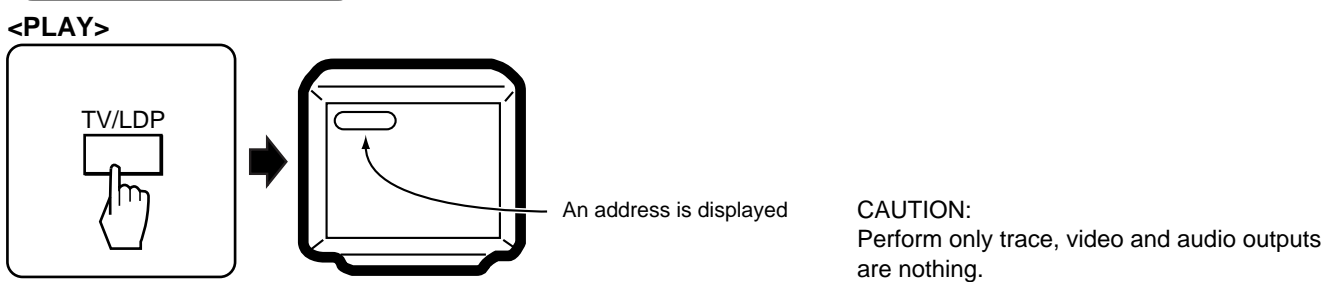


### < When playback with the target address of disc (DVD)>

For example, when playback with # 30000

During PLAY +10 → 3 → 0 → 0 → 0 → 0 → CHP/TIM Press keys in order

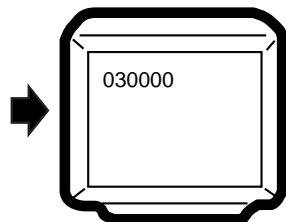

## TEST MODE: OFF

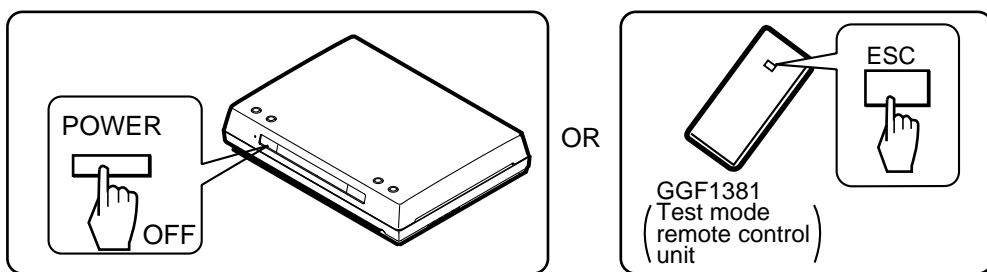


# 6.6 MECHANISM ADJUSTMENT



## 1 Tangential and Radial Height Coarse Adjustment

### START

- Remove the Loading Mecha. Assy.
- Remove a Spacer for height adjustment attached to the back side (shaded area) of the Loading Mecha. Assy (Float Base) with nippers.

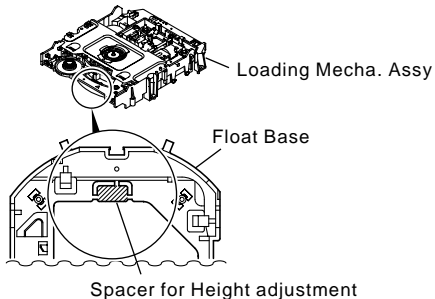


**Note:**  
 Before removing the flexible cable for the pickup, soldering of the pickup circuit is necessary.  
 For details, see "7.1.9 DISASSEMBLY".

### Cautions:

Because there is not a Spacer for height adjustment in adjustment after the second time, will keep it at need.  
 (This parts is Traverse mechanism exclusive use of a model for 2003 years)



Put a spacer between a Tangential (or Radial) adjustment screw and Mechanism Base and turn each screw to adjust the height. (Refer to "6.1 ADJUSTMENT ITEMS AND LOCATION".)

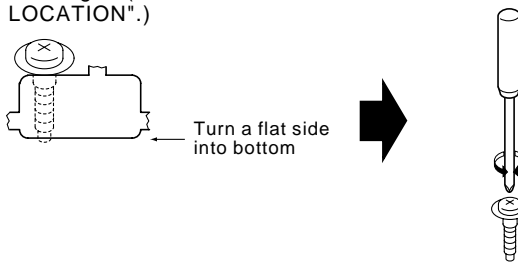



## 2 DVD Jitter Adjustment

- Playback method of inner and outer address for the purpose is referred to "6.5 TEST MODE".
- Jitter indication of the monitor is referred to "7.1.2 DISPLAY SPECIFICATION OF THE TEST MODE".


Use disc: GGV1025

### START

- Test mode
- Play the DVD test disc at outer track (around #200000)

Mechanism Assy

Adjust the Tangential Adjustment Screw so that jitter becomes minimum.




J : Min



- Play the DVD test disc at inner track (around #30000)

Mechanism Assy

Adjust the Radial Adjustment Screw so that jitter becomes minimum.




J : Min

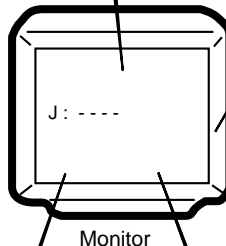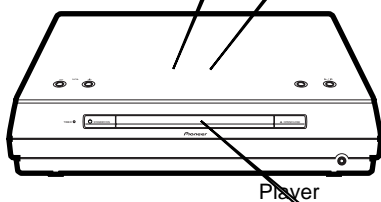

- Play the DVD test disc at outer track (around #200000)

Mechanism Assy

Readjust the Tangential Adjustment Screw so that jitter becomes minimum.



J : Min

### CHECK


Turn the POWER OFF in case of NG once, and perform the adjustment once again.

NG

Confirm the error rate that is displayed "OK"  
(Example ERROR RATE: 6.60e - 6 OK)


OK

If error rate is OK, locks a root of tangential and radial adjustment screws with the Screw tight, and go to step ③.





Screw tight: GYL1001

Disc playback normally.  
• The measurement of block error rate

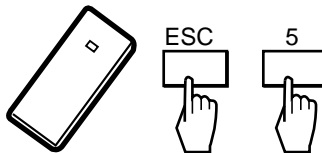

Test mode end
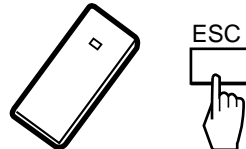
# 7. GENERAL INFORMATION

## 7.1 DIAGNOSIS

### 7.1.1 TEST MODE

#### ■ Test Mode Functional Specification

##### ① Test mode entry

In the power ON state, press the [ESC] (A8-5F) key and [TEST / RANDOM] (A8-5E) key in order of the Test mode remote control unit.

- OSD displays test mode. Refer to the "7.1.2 DISPLAY SPECIFICATION OF THE TEST MODE".

##### ② Release the Test mode

- Turn off the power.
- Press the [ESC] (A8-5F) key of the remote control unit and reset it.

##### ③ Tray open / close

- Press the [REPEAT A-B] (A8 - 48) key of the remote control unit.
- Press the [OPEN / CLOSE] key of the main unit from the stop state.

##### ④ Playback stop

1. Press the [REPEAT] (A8 - 44) key of the remote control unit from the playback state.
2. Press the [STOP] key of the remote control unit or main unit from the playback state.  
(Playback stops, but the loaded disc keeps rotating.)

##### ⑤ LD ON

DVD : Press the [TEST] (A8-5E) and [1] (A8-01) keys in order, and turn on the laser diode (650n).

CD : Press the [TEST] (A8-5E) and [4] (A8-04) keys in order, and turn on the laser diode (780n).

##### ⑥ Focus on / sweep

1. Lock the focus by pressing the [TEST] (A8-5E) and [2] (A8-02) keys in order.
2. Repeat focus sweep by pressing the [TEST] (A8-5E) and [3] (A8-03) keys in order.

##### ⑦ Spindle FG servo

CAV : Press the [TEST] (A8-5E) and [5] (A8-05) keys in order, then rise up the spindle and FG servo becomes on.

CLV : Press the [TEST] (A8-5E) and [9] (A8-09) keys in order, then rise up the spindle and FG servo becomes on.

##### ⑧ Tracking open / close

1. Open tracking by pressing the [STEP FWD] (A8-54) key of the remote control unit in the play state.
2. Close tracking by pressing the [STEP REV] (A8-50) key of the remote control unit in the play state.

##### ⑨ Slider servo on/off

1. Turn on the slider servo by pressing the [TEST] (A8-5E) and [CX] (A8-0E) keys in order.
2. Turn off the slider servo by pressing the [TEST] (A8-5E) and [TV/LDP] (A8-0F) keys in order.

##### ⑩ Slider in / out

Slider in : In the tracking off state, press the [SCAN REV] (A8-11) key of the remote control unit.

Slider out : In the tracking off state, press the [SCAN FWD] (A8-10) key of the remote control unit.

##### ⑪ Play (perform only the ID search and trace to the specified location)

Press the [TV/LDP] (A8-0F) key of the remote control unit from the stop state.

Perform only trace, video and audio outputs are nothing.

##### ⑫ Screen display ON/OFF

1. Turn off the display by pressing the [AUDIO] (A8-1E) key of the remote control unit.
2. Turn on the display by pressing the [DISPLAY] (A8-43) key of the remote control unit.

### ⑬ Search

#### 1. Search address input entry

- It becomes the address input mode when pressing the [+10] (A8-1F) key. (Most significant digit of an address displays "<".)
- In this time, display the last address as the initial state.

#### 2. Search address input

- Press the [0] to [9] (A8-00 to 09) keys of the remote control unit. In the DVD, set an address with hexadecimal.
- In the address input mode, turn to the hexadecimal input by pressing the [PROGRAM] (A8-4C) key (display a "\*" mark), and [1] to [6] keys are each input as A to F.
- Hexadecimal input and decimal input can switch with toggle.
- In case of CD, perform only the absolute time search.


#### 3. Search execution

- Press the [CHP/TM] (A8-13) key of the remote control unit.
- After the search, perform only trace and video and audio outputs are nothing.

#### 4. Release the Search address input

- Clear the address by pressing the [CLEAR] (A8-45) key. Release the address input mode when pressing the [CLEAR] key once again.

## 7.1.2 DISPLAY SPECIFICATIONS OF THE TEST MODE

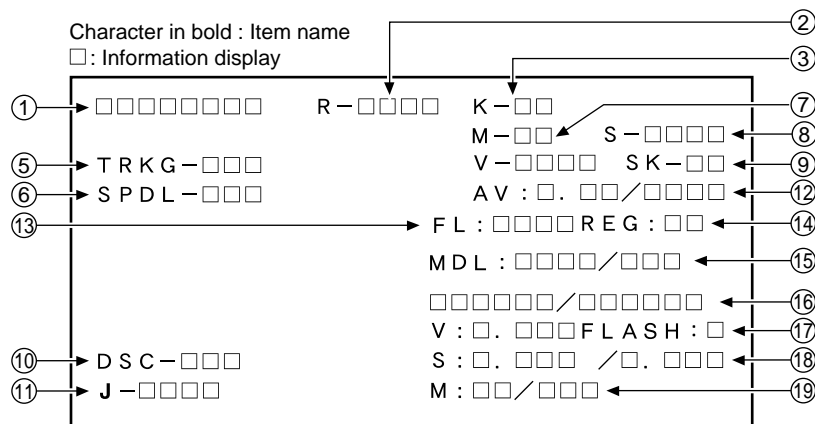

### ① Address indication

The address being traced is displayed in number.  
 (as for the DVD, indication of decimal number is possible.)  
 DVD : ID indication (hexadecimal number, 8 digits)

[\*\*\*\*\*]

CD : A-TIME (min. sec.) [0000\*\*\*\*\*]

### ② Code indication of remote control unit [R-\*\*\*\*\*]

In case of double code, display a 2nd code.

### ③ Main unit keycode indication [K-\*\*\*]

### ⑤ Tracking status [TRKG-\*\*\*]

Tracking on : [ON]  
 Tracking off : [OFF]

### ⑥ Spindle status [SPDL-\*\*\*]

[OFF], [ACC/BRK], [CAV], [CLV]

### ⑦ Mechanism (loading) position value [M-\*\*\*]

Unknown : [01] or [41]  
 Open state : [04]  
 Close state : [08]  
 During opening : [12]  
 During closing : [22]

### ⑧ Slider position [S-\*\*\*\*]

In Side Switch ON : [01]  
 In Side Switch OFF : [00]

### ⑨ Output video system [V-\*\*\*\*]

NTSC system : [NTSC]  
 PAL system : [PAL]  
 Automatic setting : [AUTO]

### Scart terminal output [SK-\*\*\*]

(Display only the WY model which can do the output setting of scart terminal.)

VIDEO : [00]  
 S-VIDEO : [01]  
 RGB : [02]

### ⑩ Disc sensing [DSC-\*\*\*]

The type of discs loaded is displayed.  
 [DVD], [CD], [ ]

### ⑪ Jitter value [J-\*\*\*\*]

### ⑫ Version of the AV-1 chip / version of firmware

[AV: \*\*/\*\*\*\*\*]

### ⑬ Version of the FL controller [FL:\*\*\*\*]

### ⑭ Region setting of the player [REG: \*]

Setting value : [1] to [6]

### ⑮ Destination setting of the System Control Microcomputer [MDL: \*\*\*\*/\*\*\*\*]

Four characters in the front represent the type of model.  
 Three characters in the back represent the destination code.  
 J: /J, K: /KU, /KC, /KU/KC, R: /RL/RD, RAM: /RAM,  
 LB: /LB, WY: /WY

### ⑯ Part number of the flash ROM and DVD Control Microcomputer

[\*\*\*\*\*/\*\*\*\*]

### ⑰ Version of the flash ROM [V: \*.\*\*\*]

Flash ROM size [FLASH = \*\*]

### ⑱ Revision of the DVD Control Microcomputer

[S: \*.\*\*\*/\*.\*\*\*]

version . revision / build number of the ST core

### ⑱ Revision of the DVD mechanism controller

[M: \*\*/\*\*\*\*]

Kinds of version / firmware of the FE.  
 RAM or ROM

### 7.1.3 FUNCTIONAL SPECIFICATION OF THE SHORTCUT KEY

Only during normal playback, the following shortcut keys can be assigned by pressing a required key after pressing the ESC key of the remote control unit. To quit, press the ESC key

Command Contents	Conditions	Remote Control Key Name	Remote Control Code
Memory clear and resion / revision indication		CLEAR (*1)	A8-45
Average value measurement of DVD error rate		5 (*1)	A8-05
CD error rate measurement		5 (*1)	A8-05
Aspect : Pan scan		2	A6-01
Aspect : Letter box		3	A6-02
Aspect : Wide		4	A6-03
Digital : AC3		5	A6-04
Digital : AC-3 > PCM		6	A6-05
Virtual surround : OFF	Only for models having the corresponding functions	7	A6-06
Virtual surround : TruSurround		8	A6-07
Digital output ON		REPEAT A	A6-A1 AF-E8
Digital output OFF		REPEAT B	A6-A1 AF-E4
DTS Digital output ON		STEP FWD	A6-A1 AF-B7
DTS Digital output OFF		STEP REV	A6-A1 AF-B8
Scart terminal output : VIDEO	WY, models equipped with Scart terminal	AUDIO	A6-A1 AF-BE
Scart terminal output : S-VIDEO		SUBTITLE	A6-A1 AF-36
Scart terminal output : RGB		ANGLE	A6-A1 AF-B5
Progressive OFF	Only for progressive models	R_SKIP	A6-92
Progressive ON		F_SKIP	A6-91
Audio 5.1 CH ON	Only for models having the corresponding functions	KD_ENTER	A6-74
FL indication of EDC / ID error		CX (*1)	A8-0E
FL indication of ID number		STEREO (*1)	A8-4A
ZOOM ON (X4)		ZOOM	A6-A1 AF-37
ZOOM OFF		< X3 (*1)	A8-59
Service mode indication (error rate indication, etc.)		CHP/TIM (*1)	A8-13
Model information indication		CHAP (*1)	A8-40
Background color change		+10 (*1)	A8-1F
Audio last stage mute ON		9	A6-08
Audio last stage mute OFF		0	A6-09
Title search Input mode IN Title No. input Search execution		SIDE A (*1) Numbers (*1) PLAY (*1)	A8-4D A8-00 to A8-09 A8-17
Region confirmation mode		AUDIO (*1) Numbers (*1)	A8-1E A8-01 to A8-08

#### • Service mode indication (ESC + CHP/TIM keys)

\*1 : Test mode remote control unit

ID Address

The error rate is always displayed in exponential notation, e.g., \*.\* \* e - \*, for both DVDs and CDs.

EDC/ID/AV 1 error history (ID Address, EDC/ID/AV 1 Error, last eight errors)

Self-diagnosis functions (If a mechanical error has occurred, the mechanical-error history is also displayed.)

#### • Calculation of the average error rate (ESC + "5" [Test mode remote control unit] keys)

The average of the last eight error rates is calculated and indicated in exponential notation. After the calculation is completed, "OK" or "NG" is displayed. If "NG" is displayed, the disc tray will open (for both DVDs and CDs)

For DVDs: OK with 5.0e-4 or less, for CDs: OK with 7.6e-3 or less

#### • Indication of model information (ESC + CHAP keys)

The items from 12 to 19 of the TEST MODE Indications are displayed. However, in the indications, S in the standard test mode is changed to B.E VERSION, and M is changed to F.E VERSION. For details, see 7.1.4.

#### • Change of the background colors (ESC + "+10" [Test mode remote control unit] keys)

Every time the keys are pressed, the background color is changed between blue and green alternately.

(The green background is used in SETUP NAVIGATOR.)


#### • Region confirmation mode (ESC + AUDIO [Test mode remote control unit] + "1"- "8" [Test mode remote control unit] keys)

After you press the AUDIO key while holding the ESC key pressed and then input the region number, if the number is different from that set in the unit, an error message is displayed, and the tray opens.

## 7.1.4 SPECIFICATION OF MODEL INFORMATION

To display model information : Press the ESC key then the CHAP key.  
To close the model information display : Press the ESC key.

### • Display contents

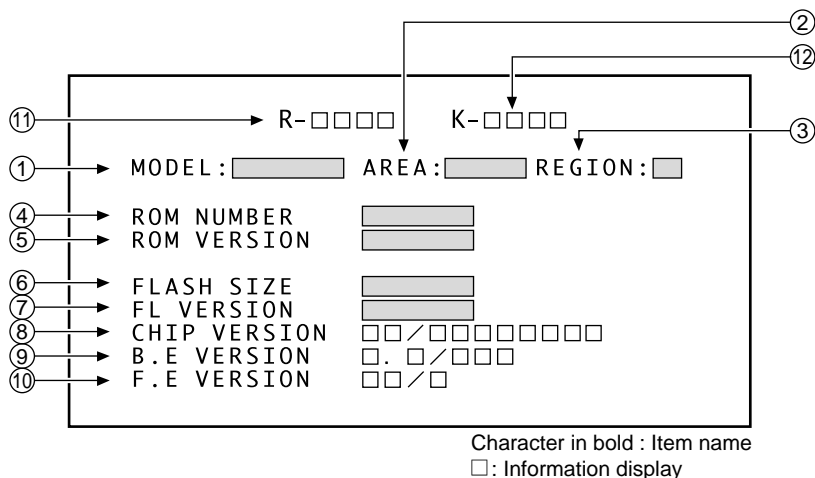

#### ① **Model name**

Display it according to model information set from the System Control Microcomputer.

#### ② **Destination indication**

Display it according to model information set from the System Control Microcomputer.

#### ③ **Region No.**

#### ④ **Part number**

#### ⑤ **ROM version**

#### ⑥ **Flash size**

#### ⑦ **FL controller version**

#### ⑧ **CHIP VERSION**

Version of ST CHIP

CUT ID / JTAG ID

(two columns) (eight columns)

#### ⑨ **B.E VERSION**

Version of BACK END (version of ST core software)

□.□ / □□□

softwareVersion . softwareRevision / buildNumber

#### ⑩ **F.E VERSION**

Version of FRONT END (version of mechanism controller CHIP software)

□□/□

MainVersion / Kinds of firmware RAM or ROM

#### ⑪ **Remote control code**


#### ⑫ **Key code of Main unit**

### 7.1.5 FUNCTIONAL SPECIFICATION OF THE SERVICE MODE

#### • EDC / ID error LCD display (shortcut function)

EDC/ID error is displayed on the LCD display if you press the CX key while holding the ESC key on the TEST MODE remote control unit pressed. To quit while an EDC/ID error is displayed, press the ESC key.

LCD display  
00 / 00 / 01 \*

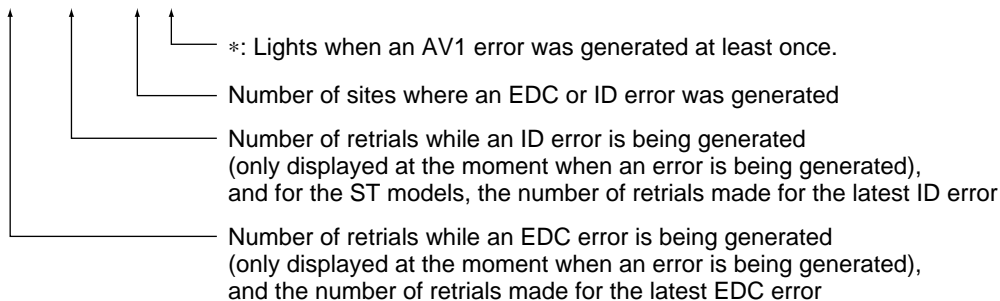


#### • Display during Service Mode

To enter Service Mode, press the CHP/TIM key while holding the ESC key pressed. To quit, press the ESC key.

##### Service mode display

- ① ID Address
- ② Error rate (always displayed), in exponential notation

\*\* (\*\*\*\*)

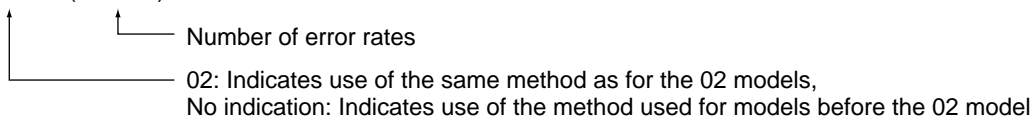

- ③ EDC/ID/AV1 error history (ID Address, EDC/ID/AV1 errors, last eight errors)

Description of AV1 errors

BIT0: In BE code, an EDC error, FEC I/F buffer overflow, or "not valid" is generated (B.E error)

BIT1: In BE code, the ID is different from that of the target (B.E error)

BIT2: An error was generated in FE-added 2-byte EDC data. (F.E error)

- ④ Self-diagnosis functions


Whether F.E is normal or not is checked.

FE OK: No abnormality in F.E

FE Error: Abnormality is recognized in F.E.

Pressing the CHP/TIM key again displays the mechanical error history. Each press of the CHP/TIM key changes the displays between the mechanical error history and the Service Mode display. For details on the mechanical error history, refer to the addendum.

Indication plan contents

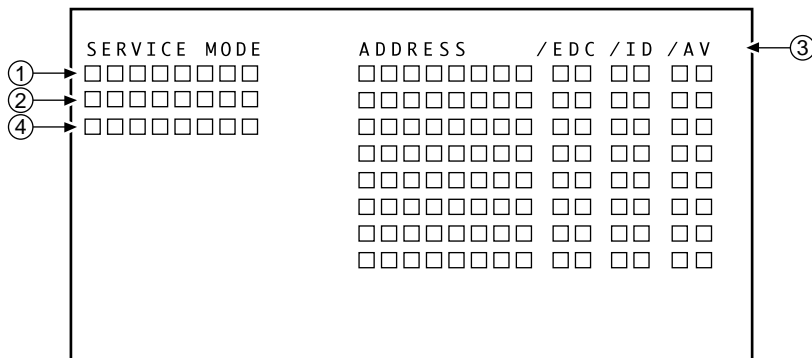

AV1 ERR	BIT		
	2	1	0
00	0	0	0
01	0	0	1
02	0	1	0
03	0	1	1
04	1	0	0
05	1	0	1
06	1	1	0
07	1	1	1

Character in bold : Item name  
□: Information display


### 7.1.6 MECHANICAL ERROR HISTORY

#### Mechanical Error History

Only if a mechanical error (FE error) has been generated, a mechanical error history containing up to the last eight errors is displayed if you press the "ESC" + "CHP/TIM" key in Normal Mode. Errors are displayed in descending order, with the latest one at the top.

##### Description of the mechanical error history


- ① Error number  
The first two digits are for the error code, and the second two digits are for the servo state.



Note: When an error has been generated, if the servo state is "Disc judge," the disc tray opens, and if the servo state is other than "Disc judge," the unit stops (excluding a case of a device error with the error code 0xd\*).

- ② Error number  
The elapsed time from the time when the system was turned on until an error was generated is displayed. Note: If a later error time is shorter than the previous error time, it means that the unit was turned off then on again.

- ③ Description of errors  
Error messages are displayed. Example: If the error code is 0x13 (Focus lost timeout) and the servo state is 0x05 (Disc judge), the message becomes "Focus lost timeout in Disc judge."

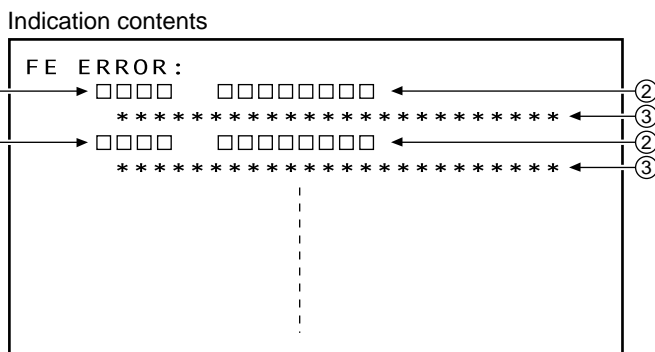

##### List of the error codes

<b>FOCUS ERROR</b>	0x0*	<b>FOCUS TIMEOUT</b>	0x1*
Focus on error	0x01	Focus on timeout	0x11
Focus off error	0x02	Focus off timeout	0x12
Focus lost error	0x03	Focus lost timeout	0x13
Focus balance adjust error	0x04	Focus balance adjust timeout	0x14
Focus gain adjust error	0x05	Focus gain adjust timeout	0x15
Focus sweep error	0x06	Focus sweep timeout	0x16
Focus reflection error	0x07	Focus reflection timeout	0x17
<b>TRACKING ERROR</b>	0x2*	<b>TRACKING TIMEOUT</b>	0x3*
Tracking on error	0x21	Tracking on timeout	0x31
Tracking off error	0x22	Tracking off timeout	0x32
Tracking lost error	0x23	Tracking lost timeout	0x33
Tracking balance adjust error	0x24	Tracking balance adjust timeout	0x34
Tracking gain adjust error	0x25	Tracking gain adjust timeout	0x35
<b>STEPPING ERROR</b>	0x4*	<b>STEPPING TIMEOUT</b>	0x5*
Stepping on error	0x41	Stepping on timeout	0x51
Stepping off error	0x42	Stepping off timeout	0x52
Stepping lost error	0x43	Stepping lost timeout	0x53
Stepping move error	0x44	Stepping move timeout	0x54
<b>SPINDLE ERROR</b>	0x6*	<b>SPINDLE TIMEOUT</b>	0x7*
Spindle on error	0x61	Spindle on timeout	0x71
Spindle off error	0x62	Spindle off timeout	0x72
Spindle lost error	0x63	Spindle lost timeout	0x73
Spindle CAV error	0x64	Spindle CAV timeout	0x74
Spindle CLV error	0x65	Spindle CLV timeout	0x75
<b>ACQUISITION ERROR</b>	0x8*	<b>ACQUISITION TIMEOUT</b>	0x9*
PLL lost error	0x83	PLL lost timeout	0x93
<b>DECODER ERROR</b>	0xa*	<b>DECODER TIMEOUT</b>	0xb*
ID lost error	0xa3	ID lost timeout	0xb3
<b>DEVICE ERROR</b>	0xd*		
SRAM error	0xd1		

##### List of the servo states

0x00	Reset
0x01	Stop (inside position)
0x02	Stop (any position)
0x03	Braking for stop
0x04	New disc
0x05	Disc judge
0x06	Reserved 1
0x07	Playing
0x08	Start up
0x09	Seeking
0x0A	Pausing
0x0B	Reading BCA
0x0C	Reserved 2
0x0D	
0x0E	Tray open
0x0F	Tray moving

Note : 0 x □ □  
code  
(Only this part is displayed to a display)



## ERROR CODE TABLE

Error Name	No.	Causes	Check Item	Possibility of Trouble	Remarks
<b>FOCUS ERROR (0 x 0*)</b>					
Focus on error	0 x 01	Focus on could not be completed	Are not there a dirt or a scratch in the Disc? Does LD become weak? Does the lens move up and down?	1. Pickup 2. Driver 3. Front End IC	
Focus off error	0 x 02	Focus off could not be completed	Unknown		
Focus lost error	0 x 03	Focus servo is lost	Are not there a dirt or a scratch in the Disc? Does LD become weak?	1. Pickup	
Focus balance adjust error	0 x 04	AFB on could not be completed			
Focus gain adjust error	0 x 05	Focus AGC could not be completed			
Focus sweep error	0 x 06				
Focus reflection error	0 x 07	Dimensions of S curve did not reach to the aim value	Does LD become weak?	1. Pickup	
<b>FOCUS TIMEOUT (0 x 1*)</b>					
Focus on timeout	0 x 11	Did timeout at focus on	Are not there a dirt or a scratch in the Disc? Does LD become weak? Does the lens move up and down?	1. Pickup 2. Driver 3. Front End IC	
Focus off timeout	0 x 12	Did timeout at focus off			
Focus lost timeout	0 x 13	Did timeout at focus backup			
Focus balance adjust timeout	0 x 14	Did timeout at AFB			
Focus gain adjust timeout	0 x 15	Did timeout at AGC			
Focus sweep timeout	0 x 16				
<b>TRACKING ERROR (0 x 2*)</b>					
Tracking on error	0 x 21	Tracking on could not be completed		1. Pickup 2. Driver 3. Front End IC	
Tracking off error	0 x 22	Tracking off could not be completed			
Tracking lost error	0 x 23	Tracking servo is lost		1. Pickup	
Tracking balance adjust error	0 x 24	ATB could not be completed		1. Pickup	
Tracking gain adjust error	0 x 25	AGC could not be completed		1. Pickup	
Tracking jump error	0 x 26	Tracking jump could not be completed			
<b>TRACKING TIMEOUT (0 x 3*)</b>					
Tracking on timeout	0 x 31	Did timeout at tracking on	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Driver 3. Front End IC	
Tracking off timeout	0 x 32	Did timeout at tracking off			
Tracking lost timeout	0 x 33	Did timeout at tracking backup	Are not there a dirt or a scratch in the Disc?	1. Pickup	
Tracking balance adjust timeout	0 x 34	Did timeout at ATB		1. Pickup	
Tracking gain adjust timeout	0 x 35	Did timeout at AGC		1. Pickup	
Tracking jump timeout	0 x 36	Did timeout at tracking jump			
<b>STEPPING ERROR (0 x 4*)</b>					
Stepping on error	0 x 41	Stepping on could not be completed		1. Pickup 2. Driver 3. Front End IC	
Stepping off error	0 x 42	Stepping off could not be completed			
Stepping lost error	0 x 43	Stepping servo is lost			
Stepping move error	0 x 44	Stepping could not move	Do move to inner and outer periphery of the stepping in the test mode? Do indicate "S-04" at the most inner periphery of the stepping?	1. Stepping motor 2. Inside switch 3. Driver	
<b>STEPPING TIMEOUT (0 x 5*)</b>					
Stepping on timeout	0 x 51	Did timeout at stepping on		1. Pickup 2. Driver 3. Front End IC	
Stepping off timeout	0 x 52	Did timeout at stepping off			
Stepping lost timeout	0 x 53	Did timeout at stepping backup			
Stepping move timeout	0 x 54	Did timeout at stepping movement	Do move to inner and outer periphery of the stepping in the test mode? Do indicate "S-04" at the most inner periphery of the stepping?	1. Stepping motor 2. Inside switch 3. Driver	

Error Name	No.	Causes	Check Item	Possibility of Trouble	Remarks
<b>SPINDLE ERROR (0 x 6*)</b>					
Spindle on error	0 x 61	Spindle on could not be completed			
Spindle off error	0 x 62	Spindle off could not be completed			
Spindle lost error	0 x 63	Spindle lost control			
Spindle CAV error	0 x 64	CAV on could not be completed			
Spindle CLV error	0 x 65	CLV on could not be completed			
<b>SPINDLE TIMEOUT (0 x 7*)</b>					
Spindle on timeout	0 x 71	Did timeout at spindle on			
Spindle off timeout	0 x 72	Did timeout at spindle stop			
Spindle lost timeout	0 x 73	Did timeout at spindle backup	Are not there a dirt or a scratch in the Disc? Is FG output from the driver?	1. Spindle motor 2. Spindle driver	
Spindle CAV timeout	0 x 74	Did timeout at CAV on	Is spindle rotating? Is FG output from the driver? Is the PDM output from L6315?	1. Spindle motor 2. Spindle driver 3. Front End IC	
Spindle CLV timeout	0 x 75	Did timeout at CLV on			
<b>ACQUISITION ERROR (0 x 8*)</b>					
PLL lost error	0 x 83	PLL is lost	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Front End IC	
<b>ACQUISITION TIMEOUT (0 x 9*)</b>					
PLL lost timeout	0 x 93	Did timeout at PLL backup	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Front End IC	
<b>DECODER ERROR (0 x a*)</b>					
ID lost error	0 x a3	ID is not readable	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Front End IC	
<b>DECODER TIMEOUT (0 x b*)</b>					
ID lost timeout	0xb3	Did timeout at ID backup	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Front End IC	
<b>DEVICE ERROR (0 x d*)</b>					
SRAM error	0 x d1	Cannot access SRAM	Power supply of SRAM Is not bus line short-circuiting?	1. SRAM 2. Front End IC 3. Front End-SRAM bus line	
<b>FAILSAFE (0 x e*)</b>					
Unexpected error	0 x e1	Unexpected error		1. software runaway 3. Software bug	

## ■ Protection Specifications and Service Mode

### ● Protection Specifications

The system microcomputer (CONTRL Assy IC5501) for this unit always monitors if abnormality of the power is generated, and as soon as an abnormality is detected shuts off the power. The specifications of the microcomputer terminal for monitoring are as follows:

Name of microcomputer terminal		XPROTECT (Pin 22)	VDET (Pin 17)
Monitoring item		Abnormality of AMP-system power Short-circuiting of the SP terminal, etc.	Abnormality of power inside the DVDM Assy
Voltage at terminal	In normal conditions	$0.71 \times V_{dd}^*$ or more	$0.5 V_{dd} - 0.85 V_{dd}^*$
	In abnormal conditions	$0.36 \times V_{dd} - 0.71 \times V_{dd}^*$	
	In failure	$0.36 \times V_{dd}^*$ or less	$0.85 V_{dd}^*$ or more $0.5 V_{dd}^*$ or less
Monitoring start time		1.5 sec after power is turned on	1.5 sec after power is turned on
Time required for determining abnormality		0.5 sec after detection	0.5 sec after detection

\*Vdd = Approx. 5 V (depending on the unit)

In abnormal conditions or in failure, the TIMER LED flashes after the power is shut off. If the power was shut off because of an abnormality, it can be turned on by pressing the STANDBY/ON key. However, if the power was shut off because of failure, **for one minute after a shutdown the STANDBY/ON key is disabled in order to protect against possible ignition of fumes.** If the AC power cord is pulled out during this one minute of standby, when the AC power cord is reconnected, the STANDBY/ON key will still be disabled until the remaining seconds have elapsed.

This unit has Service Test mode for analyzing the above power abnormality. Its specifications are as follows:

#### 1. Specific conditions for Service Test mode

- VDET is neglected.
- XPROTECT is neglected.
- **Even if the unit is urgently shut down in failure in Normal mode, you can turn it on without waiting for one minute.**
- Able to operate without AC pulse.
- Only DVD-TUNER block can operate without AMP POWER block if supplying needed DC voltage.

#### 2. How to enter Service Test mode

- While connecting STEST port (IC5501 Pin43) to "+5V", connect AC power cord. (See next page.)

#### 3. How to quit Service Test mode, and the conditions for quitting

- To quit Service Test mode, turn the power off or disconnect the AC power cord.
- When quitting Service Test mode, only data on protection in RAM are cleared.

#### 4. Indications when Service Test mode starts

- Indications on the LCD display when Service Test mode starts differ depending on whether the unit was turned off normally or if the unit

[After the power is turned off normally]

LCD display **W:e:l:c:o:m:e!**

LCD display **V:o:l:u:m:e 0:**

LCD display **D:V S:E:R:V:I:C:E**

[After the power is shut down because of a failure in the AMP system]

LCD display **P:R:T:C:T: E:R:R:**

LCD display **V:o:l:u:m:e 0:**

LCD display **D:V S:E:R:V:I:C:E**

[After the power is shut down because of an abnormality in the AMP system]

LCD display **P:R:T:C:T: W:R:N:G:**

LCD display **V:o:l:u:m:e 0:**

LCD display **D:V S:E:R:V:I:C:E**

[After the power is shut down because of a failure in the DVD system]

LCD display **D:V:D: P:R:T:E:C:T**

LCD display **V:o:l:u:m:e 0:**

LCD display **D:V S:E:R:V:I:C:E**

#### 5. Operations during Service Test mode

- Basically, operations in Service Test mode are the same as in Normal mode. However, to clarify that it is in Service Test mode, during this mode, when functions are changed, the indications on the LCD display become as follows:

[Functions] [Indications on the LCD display]

DVD/CD **D:V S:E:R:V:I:C:E**

TUNER **T:X S:E:R:V:I:C:E**

LINE1 ANA **L:1a S:E:R:V:I:C:E**

LINE1 DIG **L:1d S:E:R:V:I:C:E**

[Functions] [Indications on the FL display]

LINE2 **L:2 S:E:R:V:I:C:E**

TV **T:V S:E:R:V:I:C:E**

■ Service Test mode connecting point

A


B

C

D


E

F

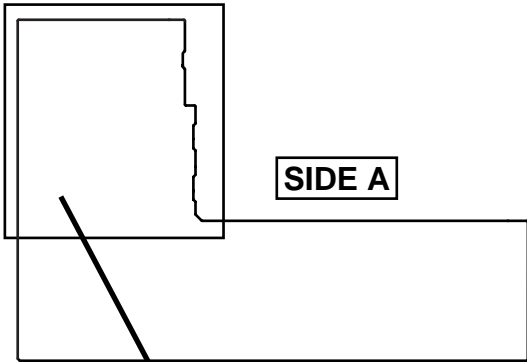

**H** CONTROL ASSY

Connecting point

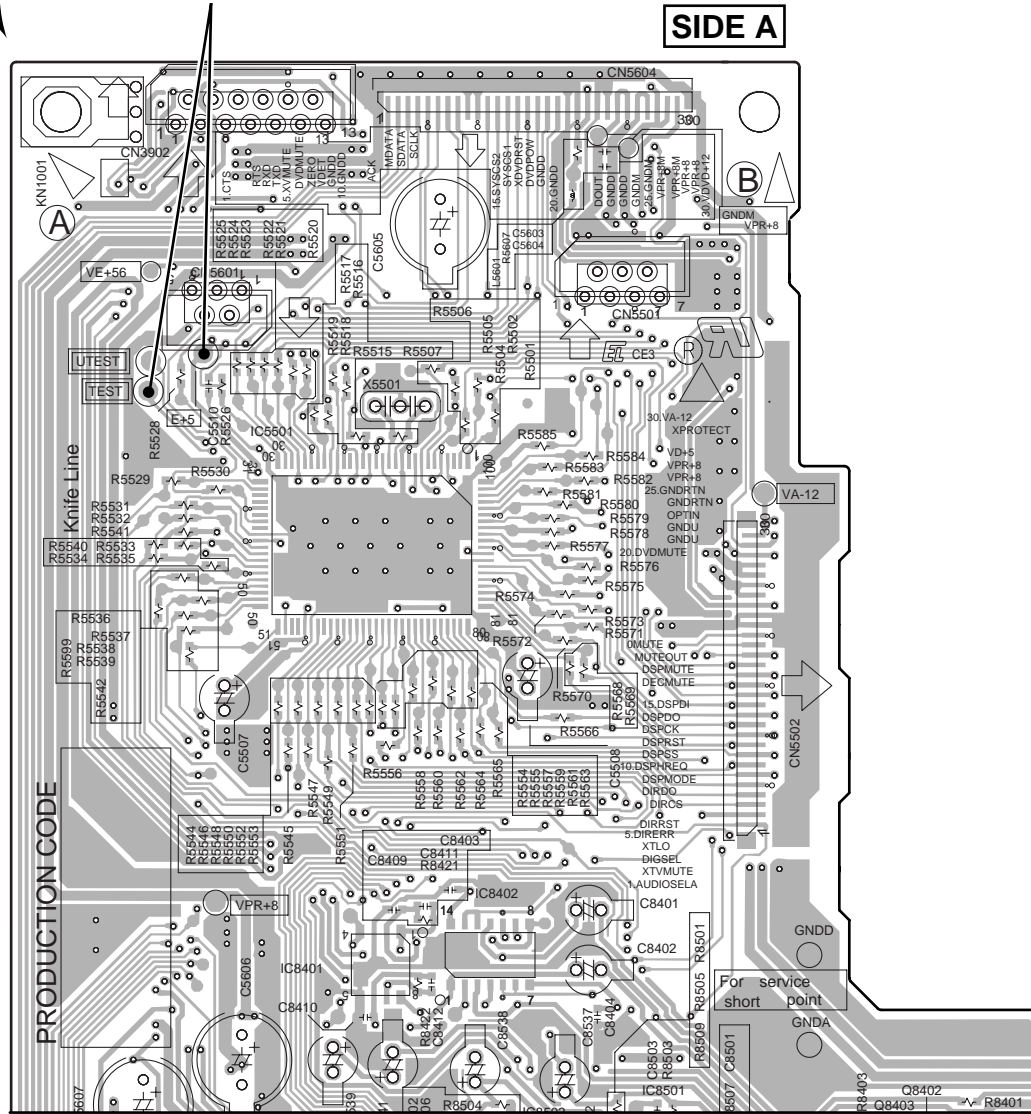

### 7.1.7 ID NUMBER AND DATA SETTING

**Caution:**

For the DVD players compatible with DVD-RW, for playback of a DVD-RW disc (CPRM), it is necessary that an individual ID number and ID data are set for each player. If the ID number and ID data be not properly set in the manner described below, future operations cannot be guaranteed. The ID number is written on the yellow label at the rear panel of the player.

**If there is no yellow label, before downloading FLASH ROM, take note of the ID number set following the procedures outlined in "ID Number Confirmation Mode" on the next page.**

**Note:** Enter ID numbers while the unit is in Stop mode so that the values set will be immediately written to the flash ROM. The following operations are all made with the TEST MODE remote control unit (GGF1381).


#### ■ ID Number Input Mode

① To enter ID Number Input Mode, with no ID number set, such as in a case of immediately after upgrading the firmware, press the ESC key then the STEREO key.

**Note:** If a previous ID number and ID data, such as a factory-preset ID number and ID data, are maintained, the unit enters ID Number Confirmation Mode when the above keys are pressed. However, if only an ID number is maintained, the unit enters ID Data Input Mode.

② Enter a 9-digit ID number. The ID number is also displayed on the LCD display.


③ By pressing the CLEAR key without having input a number, you can exit this mode. Each press of this key after a number has been input deletes one digit.

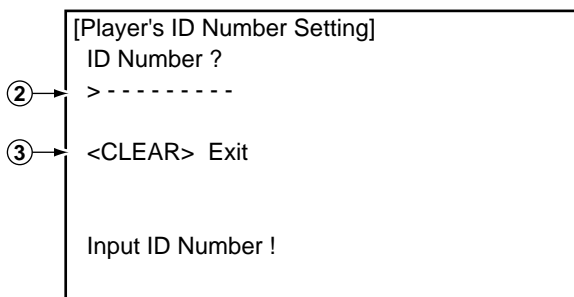

④ After entering all 9 digits, if you press the PLAY key, the unit enters Compare mode. Enter the same ID number again. Only if your two input numbers match, the ID number is set. Compare mode helps eliminate mistyping of the ID number.


**Note:** If you press the PLAY button before inputting a 9-digit ID number, the unit returns to Step ② without doing anything else.

⑤ After entering all 9 digits, if you press the SEARCH key, the unit unconditionally sets the input number as the ID number. Then the unit automatically enters Player's Data Input Mode. (The SEARCH key is not accepted after all 9 digits have been entered.)

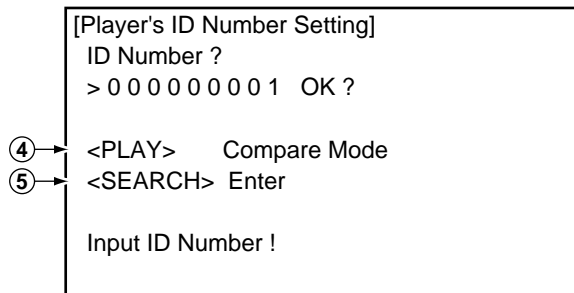


⑥ This display appears when the PLAY key is pressed in Step 4. Enter a 9-digit number to compare. The number is also displayed on the LCD display.

⑦ By pressing the CLEAR key without having input a number, the unit returns to Step ② without doing anything else. Each press of this key after a number has been input deletes one digit.

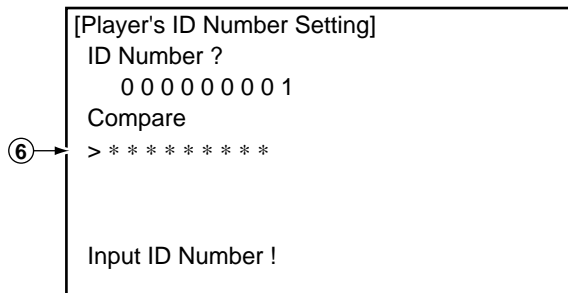

⑧ After entering all 9 digits, if you press the PLAY key, the unit compares the numbers input in Steps ② and ⑥, and only if the numbers match, that number is set as the ID. Then the unit automatically enters ID DATA Input Mode. If the numbers do not match, the disc tray is opened, and the unit exits ID Number Input Mode.

**Note:** If you press the PLAY button before inputting a 9-digit ID number, the unit returns to Step ⑥ without doing anything else.

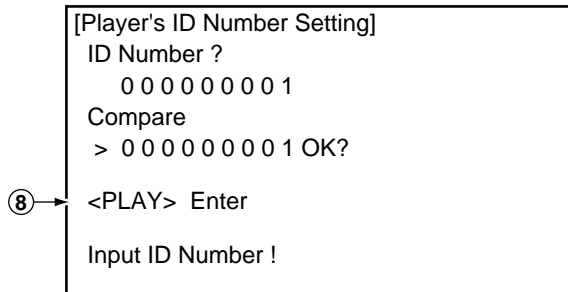

## ■ ID Number Confirmation Mode

- ① To enter ID Number Confirmation Mode after the ID number and the ID data are set, press the ESC key then the STEREO key.
- ② The ID number already set is displayed. (It is also displayed on the LCD display.)
- ③ Enter a 9-digit number for comparison. This is not required when you only wish to check the ID number visually. (The number is also displayed on the LCD display.)
- ④ By pressing the CLEAR key without having input a number, you can exit this mode. Each press of this key after a number has been input deletes one digit.


### • Indication of an ID number already set

An ID number already set is displayed in the following cases:

- 1) When the ESC key then the CLEAR key are pressed, user settings are cleared, then the ID number set is displayed on the screen. In this case, the ID number is not displayed on the LCD display.
- 2) When the unit enters ID Number Confirmation Mode by your pressing the ESC key then the STEREO key, the ID number set is displayed. In this case, the ID number is also displayed on the LCD display.  
If you only need to confirm the ID number, you can exit this mode by pressing the CLEAR key or turning off the power.

### • Indication when no ID number is set


If no ID number is set, the message "No ID Number!" flashes on the screen and LCD display for a few seconds after the power is turned on or during Stop mode.

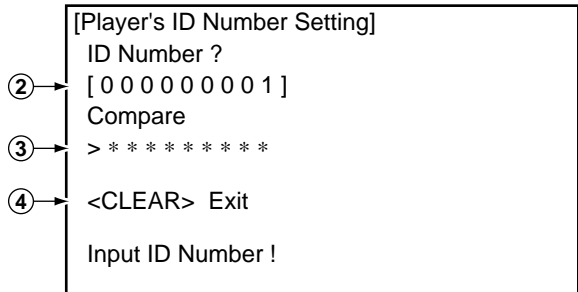

- ⑤ After entering all 9 digits, if you press the PLAY key, the unit compares the number entered in Step ② with the ID number set, and only if the numbers match, the unit automatically exits ID Number Confirmation Mode. If an ID data has not been entered, the unit enters ID DATA Input Mode. If the numbers do not match, the disc tray is opened, and the unit exits ID Number Confirmation Mode.

**Note:** If you press the PLAY button before inputting a 9-digit ID number, the unit returns to Step ④ without doing anything else.

- ⑥ After entering all 9 digits, if you press the STOP key, the unit compares the number entered in Step ③ with the ID number set, and only if the numbers match, the unit automatically deletes the ID number and exits this mode. If the numbers do not match, the disc tray is opened, and the unit exits this mode. (The STOP key is not accepted after all 9 digits have been entered.)

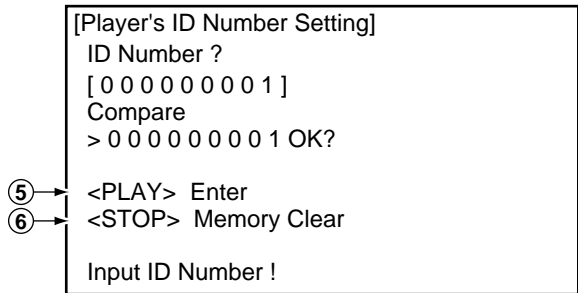

## ■ ID DATA Input Mode

- ① To enter ID DATA Input Mode, with the ID number set, press the ESC key then the STEREO key.
- ② When the STEREO key is pressed, the unit enters ID DATA Input Mode.

```

[Player's ID Number Setting]
ID Number ?
[ 0 0 0 0 0 0 0 1 ]
Compare
> * * * * *
<CLEAR> Exit
<STEREO> ID Data Setting Mode

Input ID Number !
  
```



- ③ If the DVD DATA DISC (GGV1085) is loaded in this mode, the unit automatically starts reading the data. (If the ID DISC has already been loaded, the unit does not start reading the data. In this case, open then close the tray.)
- ④ To exit this mode, press the CLEAR key. While data are being read from the DVD DATA DISC (GGV1085), you cannot exit this mode.

```

[Player's Data Input Mode]

<CLEAR> Exit

Insert The ID Data Disc !
  
```



- ⑤ When writing of the data read from the disc to flash ROM is completed, "Rom Write OK!" is displayed. After seeing this message, you can exit this mode by pressing the CLEAR key.

**Note:** Whether or not the data have been written to flash ROM can be confirmed by watching for the message "Rom Write OK!" being displayed after the disc is read.

```

[Player's Data Input Mode]

Rom Write OK!

<CLEAR> Exit
  
```



- ⑥ If the data cannot be read from the disc, "Disc Error!" is displayed on the screen, and the disc is ejected.

```

[Player's Data Input Mode]

Disc Error!

<CLEAR> Exit
  
```

### • Indication when the data have not been set

If no ID data are set after the ID number is changed, the message "NO ID DATA" flashes on the screen and LCD display for a few seconds after the power is turned on or during Stop mode.

## 7.1.8 TROUBLE SHOOTING

### Microcomputer Section (CONTROL Assy : IC5501)

Symptom	Possible Cause	Check Method
• The unit cannot be turned on.	The microcomputer was not reset.	Check if the level of the terminal XRESET (Pin 8) is "H." If it is not, check the RESET circuit.
	The AC pulse is not input.	Check if the AC pulse is input to Pin 4 of the AC input terminal. If it is not, check the AC pulse generation circuit.
	The oscillation circuit of the microcomputer does not function.	The microcomputer or the oscillation circuit is broken. Change the microcomputer or the oscillation circuit.
The unit shuts itself off soon after it is turned on.	<ul style="list-style-type: none"> <li>If the Function is DVD, the voltage of the VDET input (Pin 17) is either 0.5 Vdd* or less or 0.85 Vdd* or more.</li> <li>The voltage of the PROTECT input (Pin 22) is 0.71 Vdd* or less.</li> </ul>	If the voltage at Pin 17 of the VDET terminal of the microcomputer is either 0.5 Vdd or less or 0.85 Vdd or more, adjust so that it stays between 0.5 and 0.85 Vdd.
<ul style="list-style-type: none"> <li>DVD does not operate at all.</li> <li>Time is not displayed in LCD display during DVD function.</li> </ul>	Communication with the DVD microcomputer has not been established.	<ul style="list-style-type: none"> <li>Check that the terminal (Pins 23-25, 29, and 30) for communication with the DVD microcomputer is live, and if it is not, check if the flexible cable is disconnected.</li> <li>Check if an "H" signal is output to Pin 93 of the XDVRST terminal.</li> </ul>
All operation keys are disabled.	The unit recognizes that an operation key has already been pressed.	If no operation key has been pressed, check if the voltage at Pins 18 of the KEY input terminal is 5 V. If it is not, check if the operation switch on the line is in failure.

\* Vdd= Approx. 5V (depending on the unit)  
 ex.)  $0.85V_{dd} = 0.85 \times 5 (V)$   
 $= 4.25 (V)$



## DVD Section


No.	Symptoms	Diagnosis Contents	Possible Defective Points
1	An opening screen is not displayed on the monitor (The LCD display lights. The mechanism does not work.)	Is the level at both IC5501-pin 93 (XDVDRST) and pin 1(DVD ON/OFF) on the CONTROL Assy "H" ?	μcom (CONTROL IC5501)
		Check the voltage of CN901-pin 28 and 29 (VPR+8) on the DVDM Assy.	DVDM Assy CN901
		Check that the following voltages are output : IC411-pin 3 : 1.8V, IC421-pin 3 : 1.8V and IC431-pin 1 : 5V on the DVDM Assy	Each regulator on the DVDM Assy
		Are resonators (27MHz, 20MHz) on the DVDM Assy oscillating ?	Crystal resonator (DVDM Assy X601 and X301)
		Refer to contents of an FE error displayed on the LCD display. (SRAM defectiveness, I2C communication line defectiveness, etc.)	FRONT END IC (DVDM IC301)
		<ul style="list-style-type: none"> <li>• Is a signal input into IC601-pin 132 (CE3) on the DVDM Assy ? (Is a signal fluctuating for several seconds after the power is turned on ?) → Communication with flash ROM</li> <li>• Are the signals input into IC602-pin 16 (SMIWE), pin 19 (SMICS0) and pin 38 (SMICLK) on the DVDM Assy ? (Is a signal fluctuating ?) → Communication with flash ROM</li> </ul>	<ul style="list-style-type: none"> <li>• BACK END IC (DVDM IC601)</li> <li>• Flash ROM (DVDM IC603)</li> <li>• 64M SDRAM (DVDM IC602)</li> </ul>
		Is a signal output from IC603-pin 28 (CPU_OE) on the DVDM Assy? (Is a signal fluctuating for several seconds after the power is turned on ?)	<ul style="list-style-type: none"> <li>• BACK END IC (DVDM IC601)</li> <li>• Flash ROM (DVDM IC603)</li> </ul>
		Is a signal input into IC5501-pin 67 (DVDACK) on the CONTROL Assy ? (Is a signal fluctuating ?)	μcom (CONTROL IC5501)
Is a signal output from IC5501-pin 29 and 30 (SYS_1, 2) on the AF Assy ? (Is a signal fluctuating in the range of 0-5V ?)	μcom (CONTROL IC5501)		
	Are the signals output from IC5501-pin 23, 24 and 25 on the CONTROL Assy? (in the range of 0-5V)	μcom (AF IC5501) – BACK END IC (DVDM IC601) communication line	
2	An opening screen is not displayed on the monitor (The LCD display lights. The mechanism does not work.)	Check the video signal path between BACK END IC (DVDM IC601) and video-out terminal (see the block diagram)	DVDM Assy <ul style="list-style-type: none"> <li>• Video circuit</li> <li>• after BACK END IC (IC601)</li> </ul>
3	A tray cannot be opened. (An opening screen is displayed on the monitor)	• Are wires of CN103 on the DVDM Assy disconnected or damaged ?	Connector / wire LOADING SW (LOAB S101)
		<ul style="list-style-type: none"> <li>• Is a LOAD-DRVC signal reaching ?</li> <li>• Does the voltage of CN105 pin 1 change by pressing the Inside switch</li> </ul>	BACK END IC (DVDM IC601)  Inside switch

No.	Symptoms	Diagnosis Contents	Possible Defective Points
A 4	Playback impossible (no focusing)	Are the signals output from IC101-pin 34 (F_DRV) and pin 35 (F_RTN) on the DVDM Assy ?	FTS Driver IC (DVDM IC101)
		Does 650-nm LD emit light ? Does a pickup lens move up / down ? Does an actuator spring bend ?	Pickup
		• Are plastic parts damaged? Or is a shaft detached? • Is the turntable detached or tilted?	Mechanism section
		Is flexible cable of CN101 on the DVDM Assy disconnected or damaged ?	Flexible cable / connector
		Is signal output from IC301-pin 33 (FACT) on the DVDM Assy ? (Device control of about 2.6 V is output usually. It is fluctuated by about $\pm 100$ mV with focus up / down.)	FRONT END IC (DVDM IC301)
B 5	Playback impossible (Spindle does not turn)	Are the signals output from IC101-pin 12 (A3), pin 13 (A2) and pin 14 (A1) on the DVDM Assy ? Is pin 41 fixed LOW and is pin 38 fixed HIGH ?	FTS Driver IC (DVDM IC101)
		Is there any part detached from the spindle motor? Or Is there any foreign object lodged in it?	Mechanism section (Spindle motor)
		Are wires of CN105 (DVDM Assy) disconnected or damaged ?	Flexible cable / connector
		Is signal output from IC301-pin 44 (SPDL_PDM) on the DVDM Assy ?	FRONT END IC (DVDM IC301)
C 6	Playback impossible (Playback stops)	Does 650-nm LD deteriorate ? If the voltage at both ends of R201 on the DVDM Assy is 0.7 V or more, the 650-nm LD is definitely deteriorated.	650-nm LD deteriorated. (When playback of a DVD is impossible)
		Does 780-nm LD deteriorate ? If the voltage at both ends of R211 on the DVDM Assy is 1.5 V or more, the 780-nm LD is definitely deteriorated.	780-nm LD deteriorated. (When playback of CD is impossible)
		Is there abnormality in FG waveform ?	FG output : FTS Driver IC (DVDM IC101)
		Are there scratches or dirt on the disc ?	Disc
7	Picture disturbance during playback (block noise, freeze, other)	Are there scratches or dirt on the disc ?	Disc
		Is there a problem with the format of the disc?	Disc
8	No sound (Picture is normal)	Is signal output from DOUT signal (CN901-pin 21) on the DVDM Assy ?	BACK END IC (DVDM IC601)


### 7.1.9 DSP TROUBLE SHOOTING

- When a sound is not out in the surround mode with the digital signal input.
- Suppose C,R parts to be poor contact and that is not damaged.
- This shows failure analysis of DSP Assy.


#### Step 1

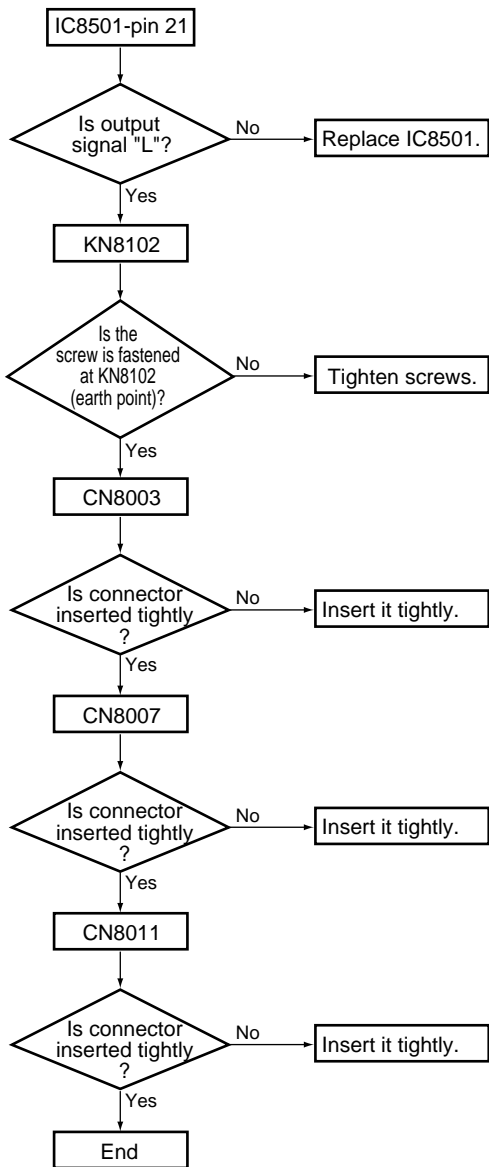


#### Step 2

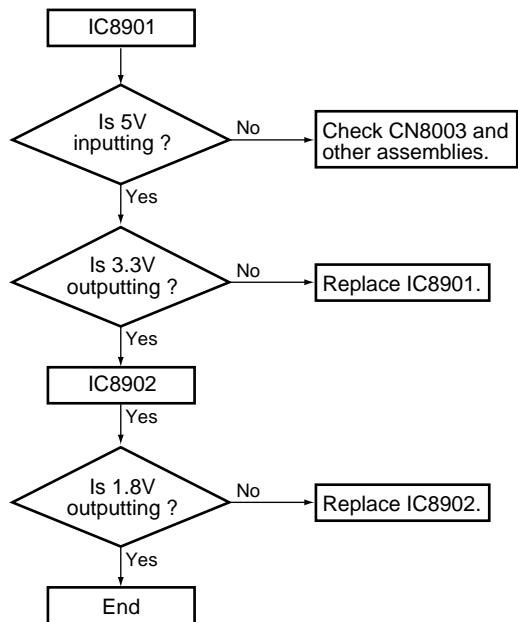

#### Step 3

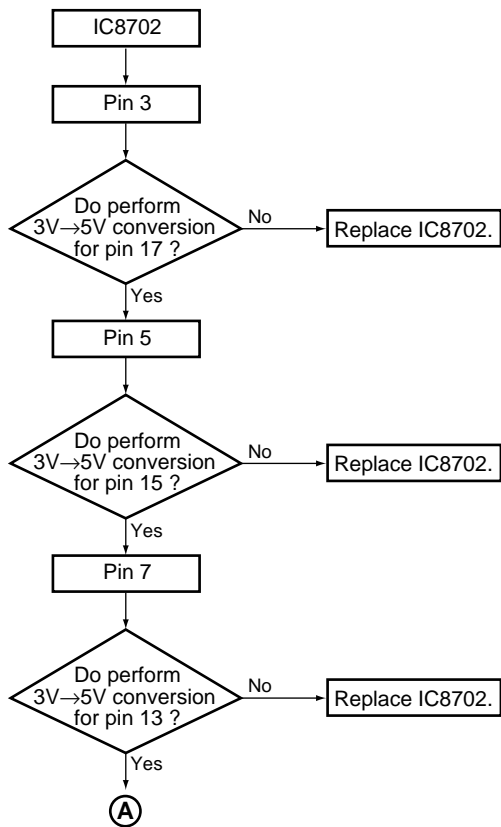

A

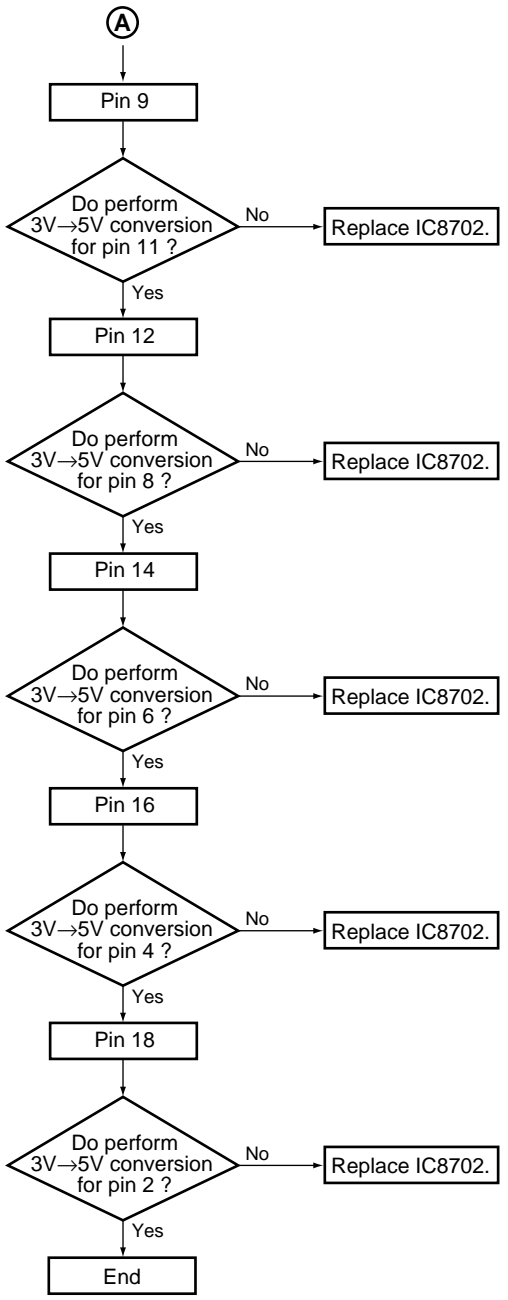

B


C

D


Step 4

E


F

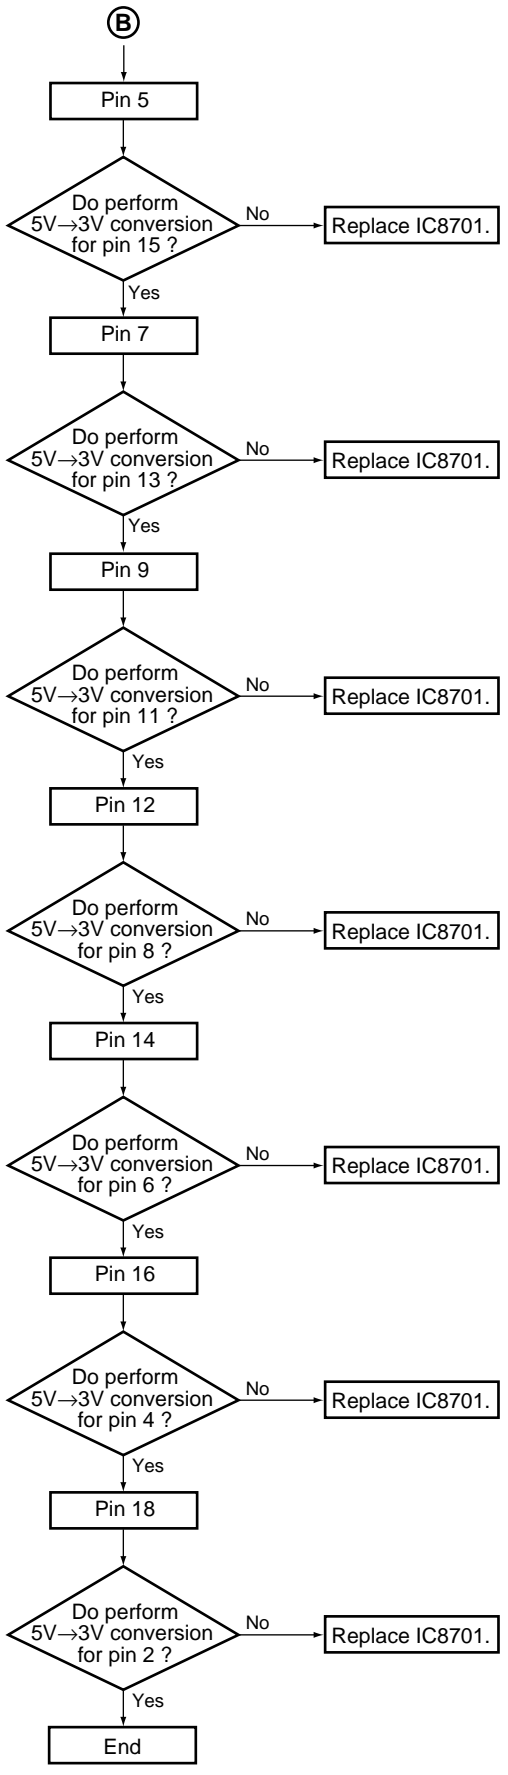


### Step 5

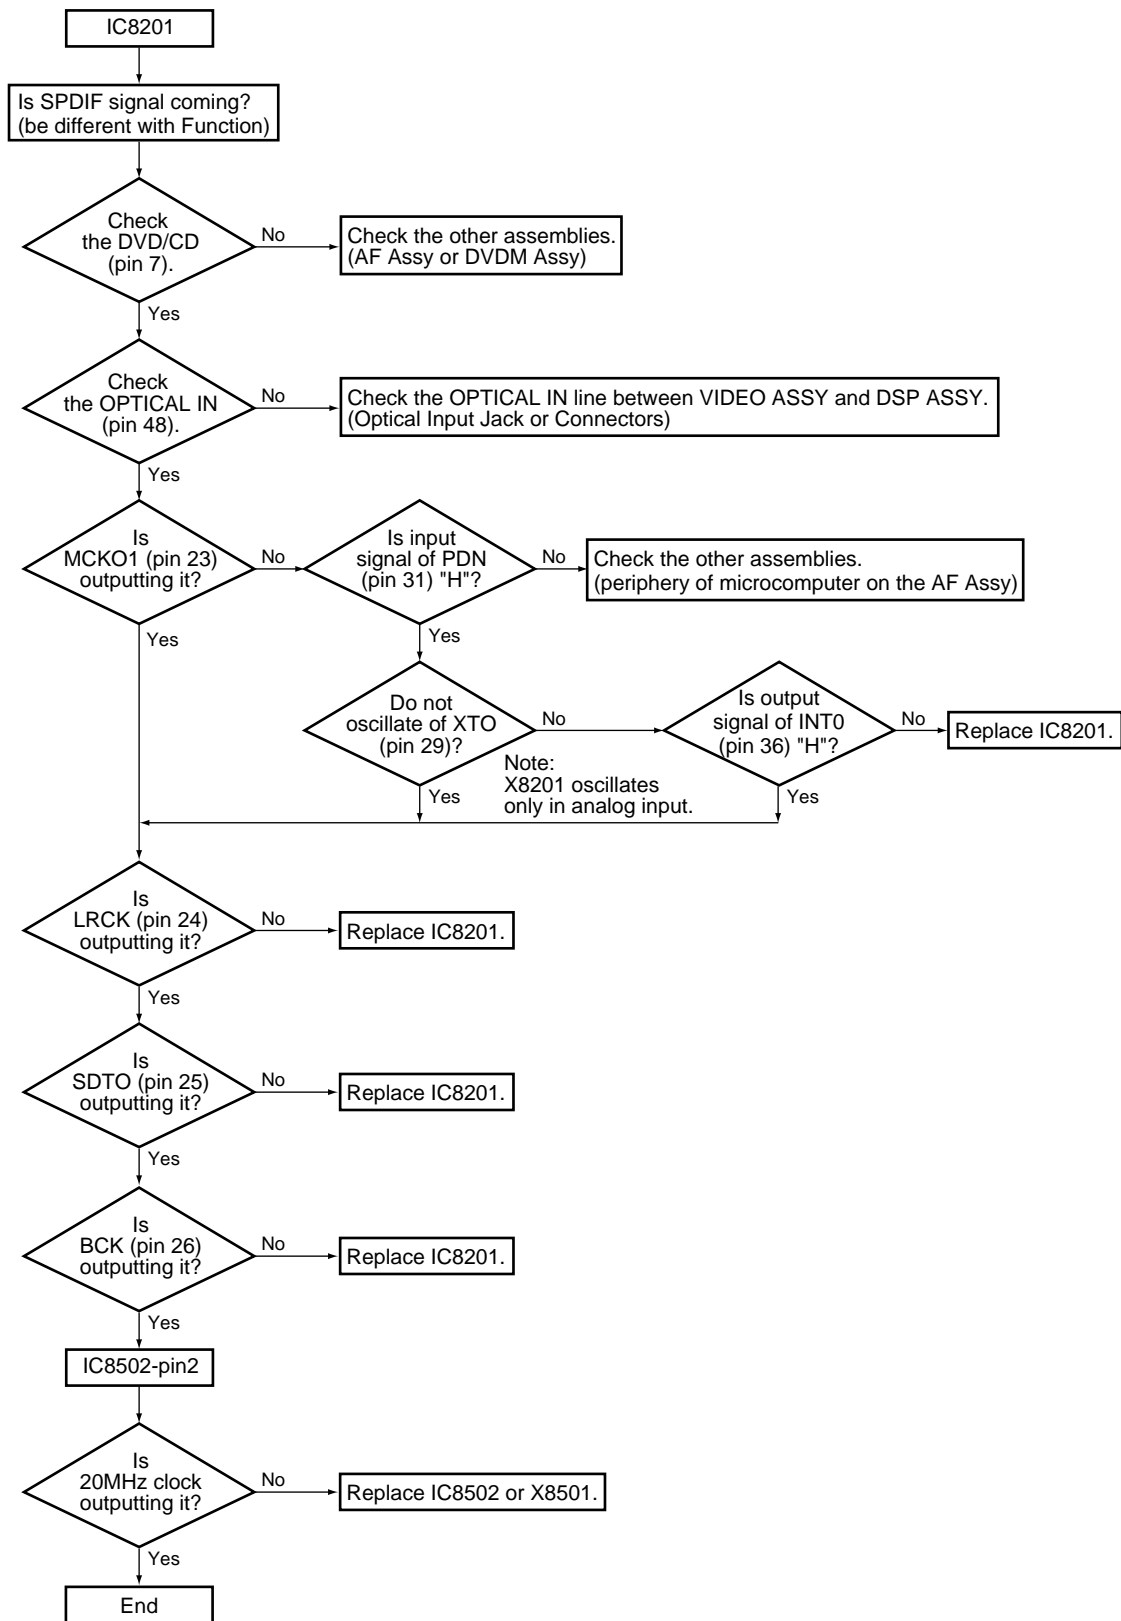


### Step 6

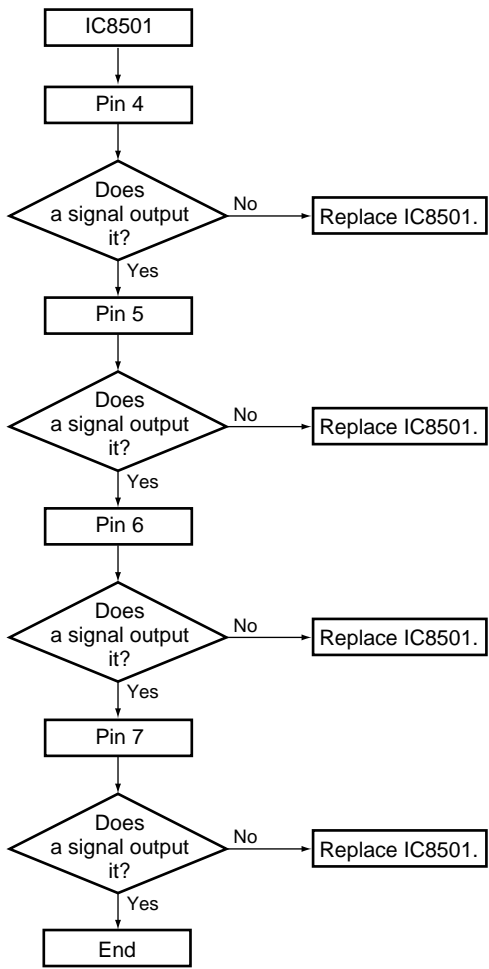

### Step 7

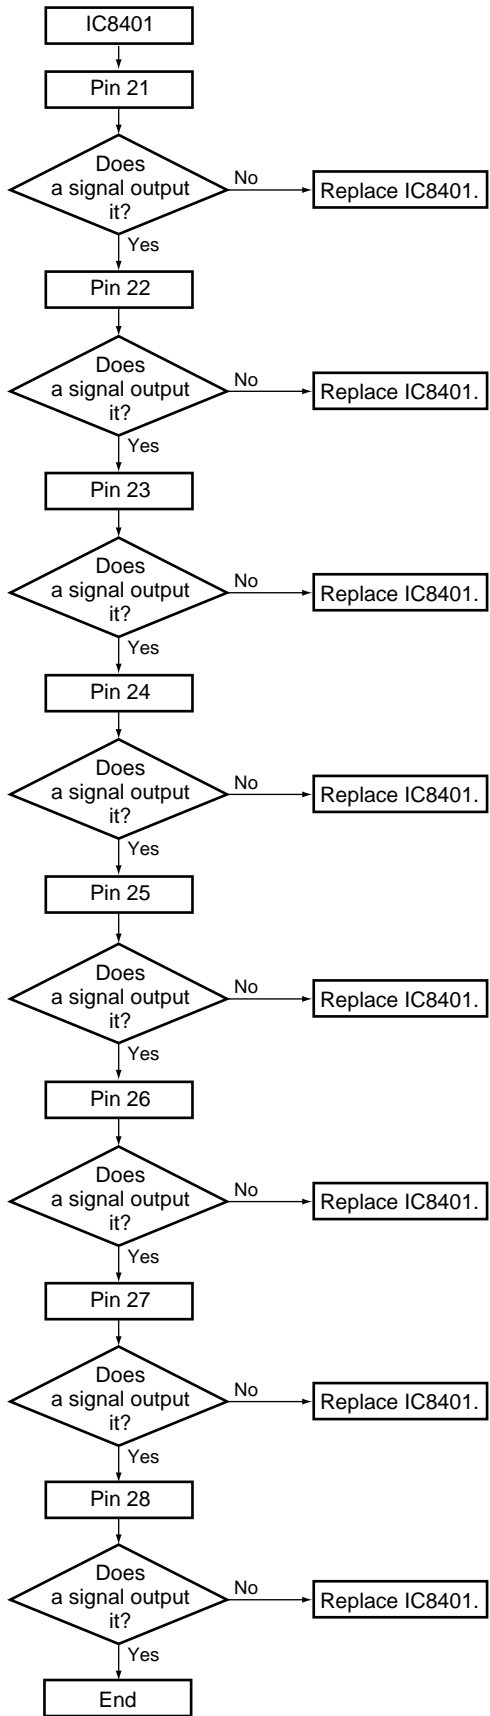


### 7.1.10 SEQUENCE AFTER POWER ON

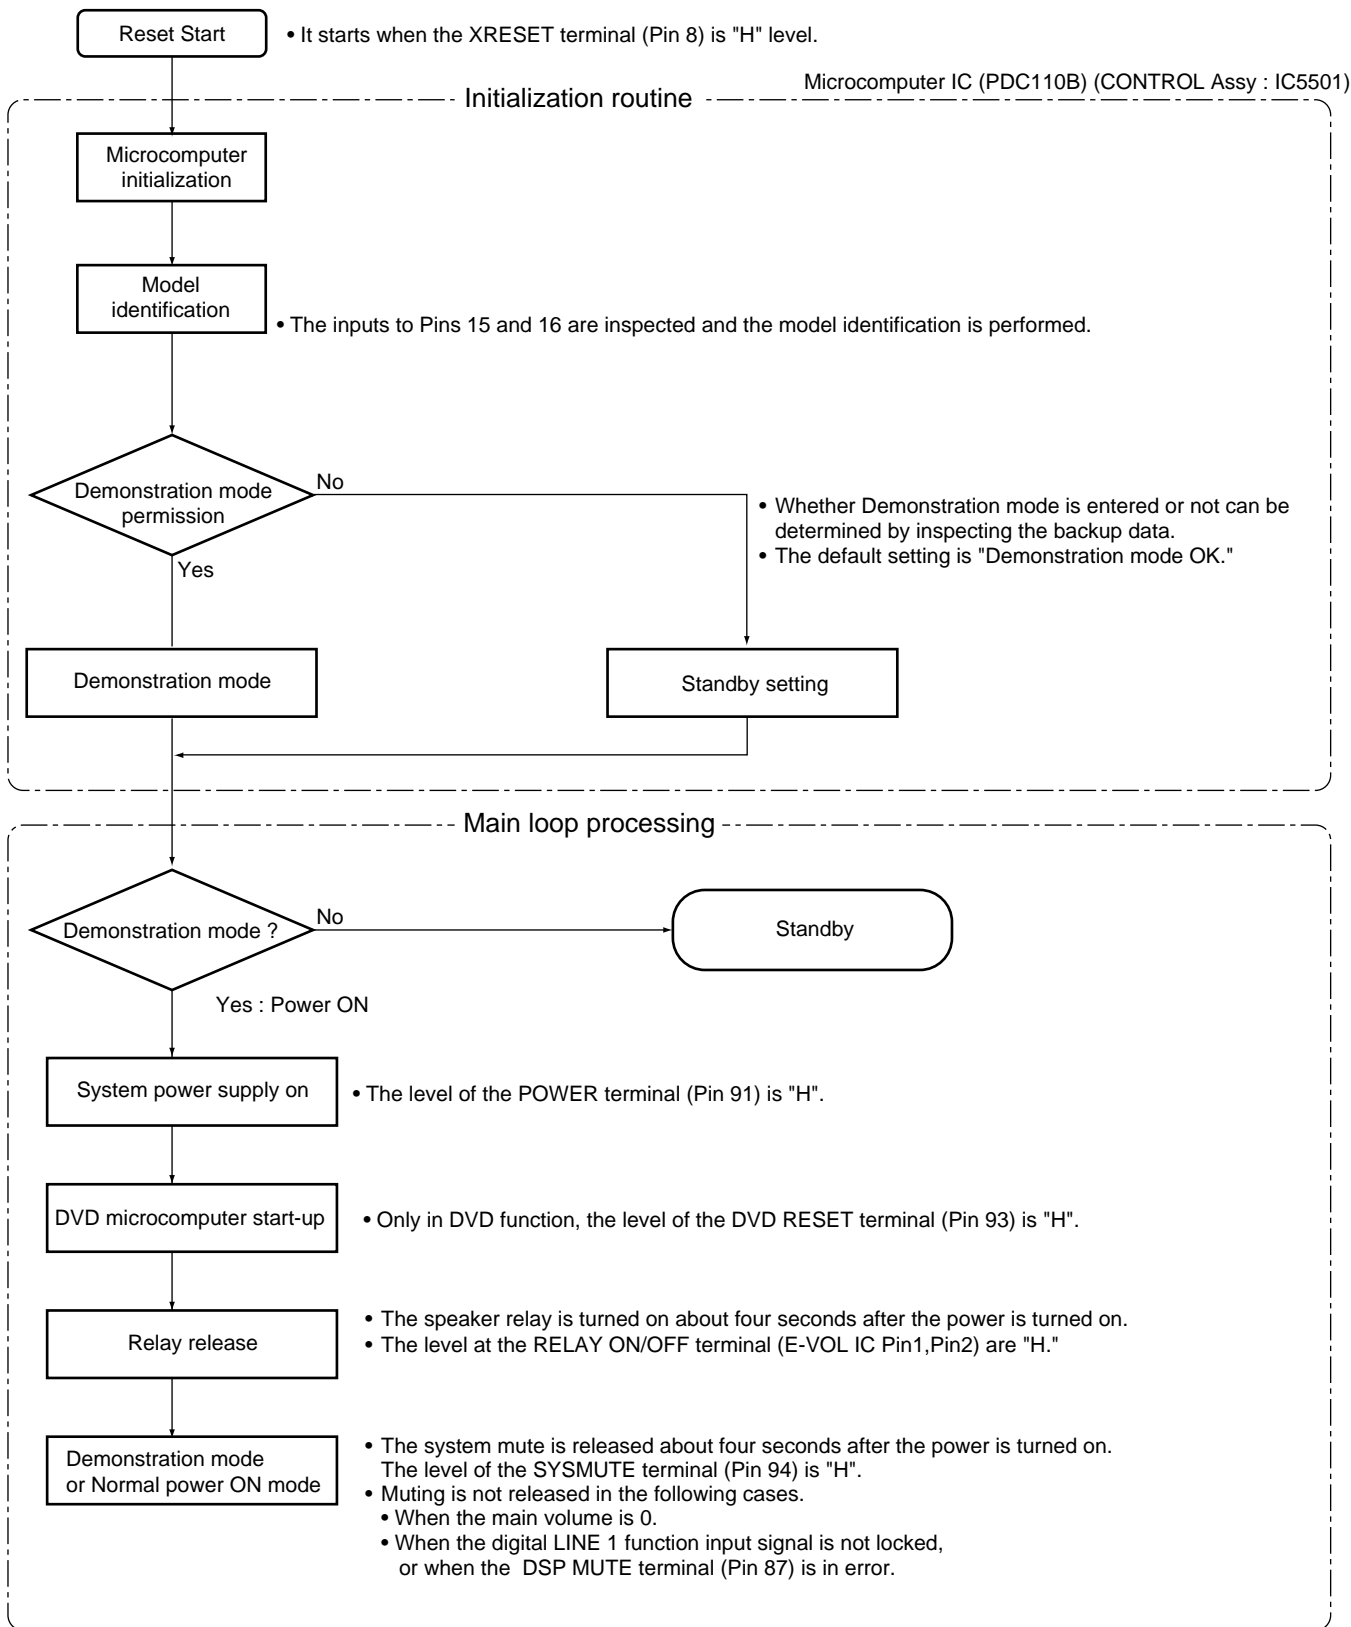


- If no pulse is input to the AC terminal (Pin 4) for about 60 msec, the microcomputer becomes in Memory Backup mode, it will not do any processing.
- The unit will recover from Memory Backup mode if a reset command is input to the XRESET terminal (Pin 8).

# [ STANDBY ON TIMING CHART ]

A

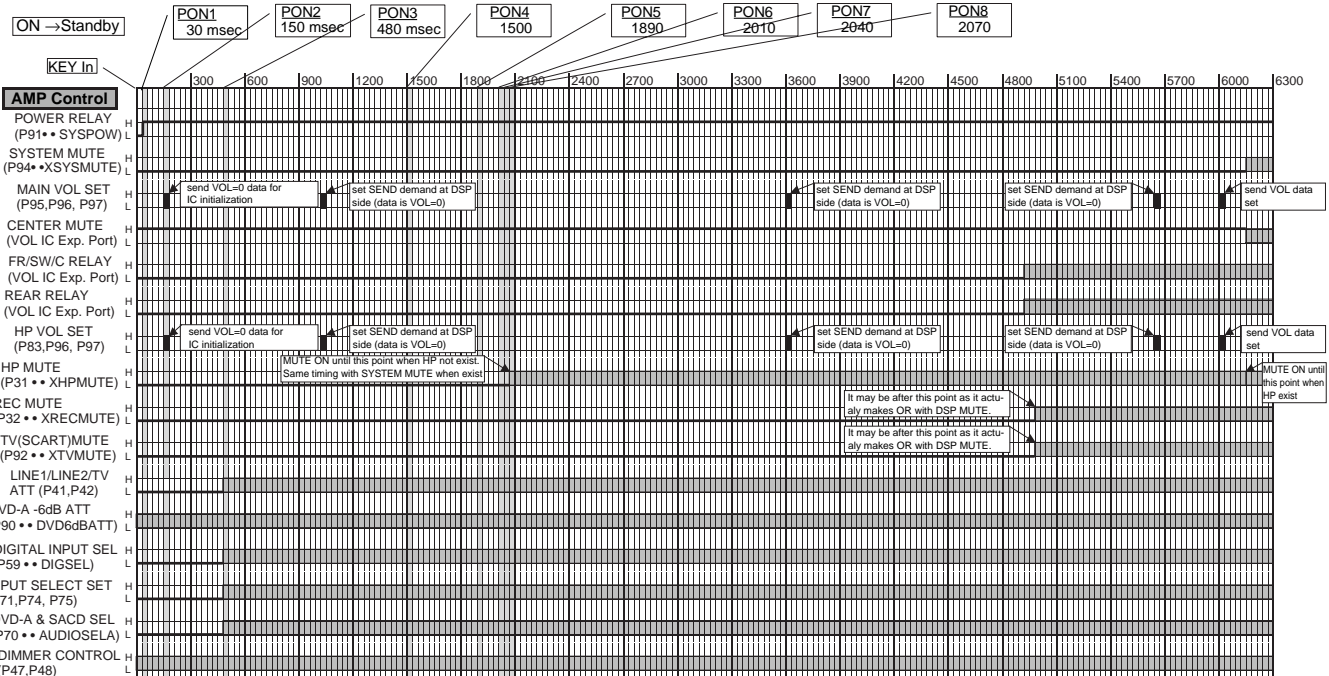


B

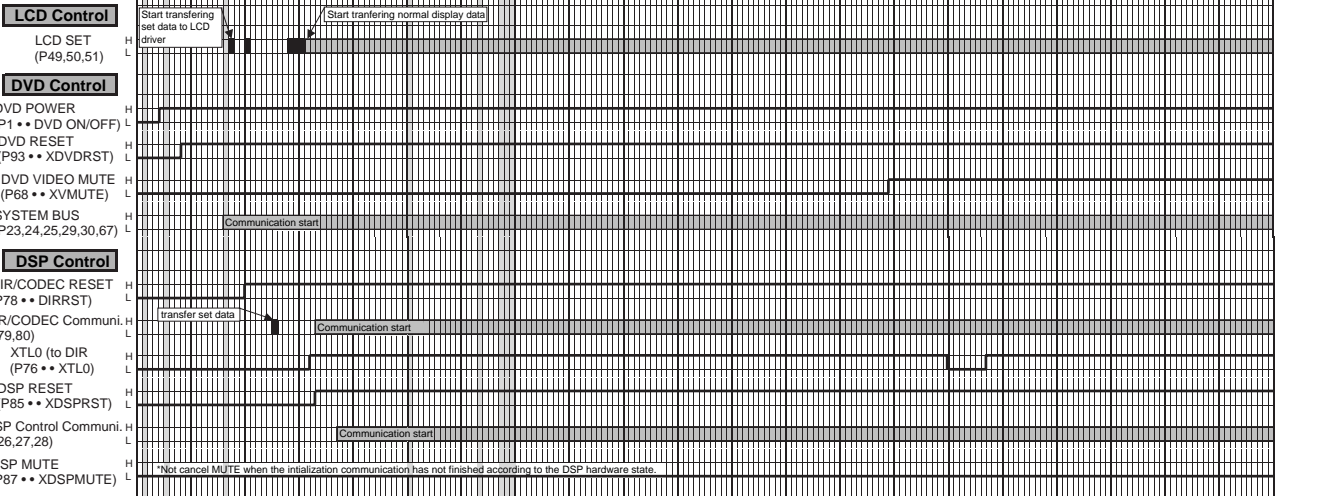

C

D

E

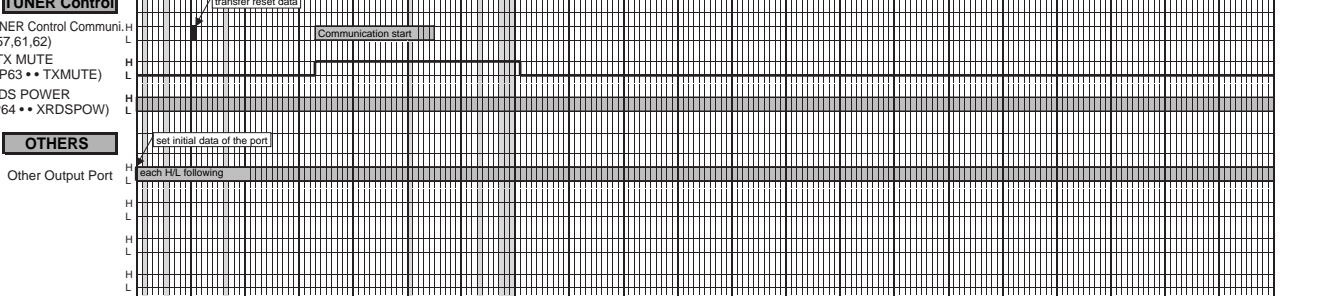

F



## [ STANDBY ON SEQUENCE ]

Function	Set Time from Former Step	Passing Time	Detail about the Control
SY_PON0	—————	0 msec	<b>Start the POWER ON Each Initial Setting ①</b> <ul style="list-style-type: none"> <li>• Set the MASK FLAG of all keys</li> <li>• Set the MASK FLAG of normal key</li> <li>• POWER Lines MUTE ON (SYSTEM MUTE REQUEST)</li> <li>• MUTING FLAG CLEAR (SYSTEM MUTE REQUEST)</li> <li>• VOLUME Lines MUTE REQUEST CLEAR (SYSTEM MUTE REQUEST)</li> <li>• DSP MUTE REQUEST CLEAR (SYSTEM MUTE REQUEST)</li> <li>• AMP Lines MUTE REQUEST CLEAR (SYSTEM MUTE REQUEST)</li> <li>• TUNER MUTE REQUEST CLEAR (SYSTEM MUTE REQUEST)</li> <li>• EMERGENCY POWER OFF FLAG CLEAR</li> <li>• LCD Driver STAND-BY</li> <li>• Set the TIMER for canceling the SP-Relay (5 sec)</li> <li>• Set the TIMER for starting the PROTECT Process (1.5 sec)</li> <li>• PROTECT FLAG CLEAR</li> <li>• REC MUTE ON (Pin No.32 : L)</li> <li>• HEADPHONE MUTE ON (Pin No.31 : L)</li> </ul>
SY_PON1	+ 30 msec	30 msec	<b>Each Initial Setting ②</b> <ul style="list-style-type: none"> <li>• SYSTEM POWER ON (Pin No.91 : L)</li> <li>• Set the One-Shot Display of " WELCOME " (display time : 3.5 sec)</li> </ul>
SY_PON2	+ 120 msec	150 msec	<b>Each Initial Setting ③</b> <ul style="list-style-type: none"> <li>• Set +5V ON (the Power is stabilized) FLAG</li> <li>• Transfer the initial data to the MAIN VOLUME IC.</li> <li>• Transfer the initial data to the HEADPHONE IC.</li> </ul>
SY_PON3	+ 330 msec	480 msec	<b>Each Initial Setting ④</b> <ul style="list-style-type: none"> <li>• Start transferring to the LCD driver if the remote control port data is High.</li> <li>• Set the DIGITAL INPUT (Pin No.59)</li> <li>• Set the INPUT FUNCTION (Selector : BU4051) (Pin No.71,74,75)</li> <li>• Start the BUS communication</li> </ul>
SY_PON4	+ 1020 msec	1500 msec	<b>Each Initial Setting ④</b>
SY_PON5	+ 390 msec	1890 msec	<b>Each Initial Setting ⑤</b>
SY_PON6	+ 120 msec	2010 msec	<b>Each Initial Setting ⑥</b>
SY_PON7	+ 30 msec	2040 msec	<b>Each Initial Setting ⑦</b> <ul style="list-style-type: none"> <li>• Clear the MASK FLAG of all keys.</li> <li>• Clear the MASK FLAG of normal key.</li> <li>• POWER Lines MUTE OFF (SYSTEM MUTE REQUEST)</li> </ul>
SY_PON8	+ 30 msec	2070 msec	<b>POWER ON Finished</b>

# [ STANDBY OFF TIMING CHART ]

A


B

C

D

E

F

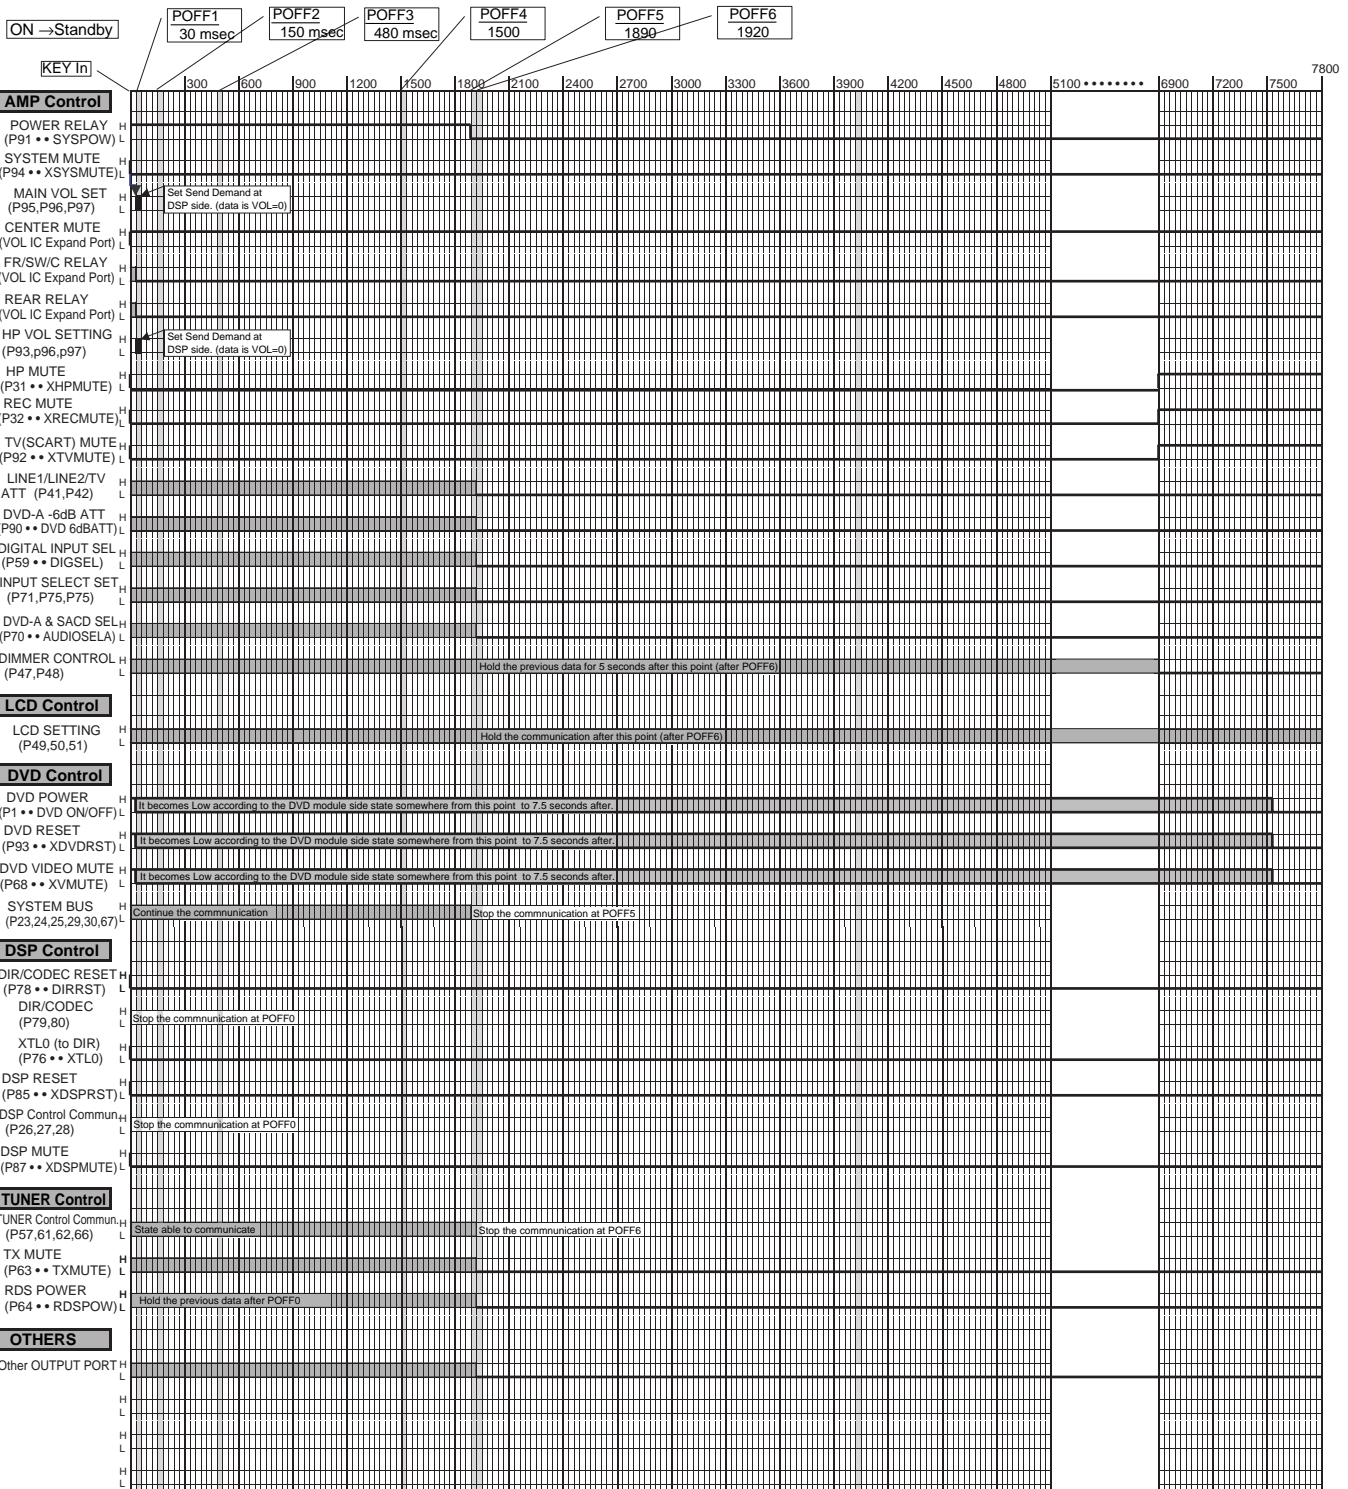

## [ STANDBY OFF SEQUENCE ]


Function	Set Time from Former Step	Passing Time	Detail about the Control
SY_POFF0	—————	0 msec	<b>Start the POWER OFF Each Initial Setting ①</b> <ul style="list-style-type: none"> <li>• Set the MASK FLAG of all keys</li> <li>• Set the MASK FLAG of normal key</li> <li>• POWER Lines MUTE ON (SYSTEM MUTE REQUEST)</li> <li>• MUTING FLAG CLEAR (SYSTEM MUTE REQUEST)</li> <li>• Set the transfer demand of the VOLUME DATA to the DSP module. (The DSP module controls the MAIN VOLUME.)</li> <li>• Set the Counter for not coming DVD POWER OFF information.(20sec)</li> <li>• MENU clear</li> <li>• Clear the demand of One-Shot Display.</li> <li>• Clear the RAM relative to PROTECT if in SERVICE TEST MODE.</li> <li>• Force to set the each data to the Factory Setting state in the TEST MODE except the SERVICE TEST MODE.</li> <li>• Clear the TEST MODE FLAG except the LINE TEST MODE</li> <li>• Clear the RAM FLAG relative to the TIMER.</li> <li>• DEMO CLEAR</li> </ul>
SY_POFF1	+ 30 msec	30 msec	<b>Each Initial Setting ②</b> <ul style="list-style-type: none"> <li>• If it is not the Emergency POWER OFF, Set the Admission FLAG of the SP-Relay OFF</li> <li>• Check if the DVD is POWER OFF OK</li> </ul>
SY_POFF2	+ 120 msec	150 msec	<b>Each Initial Setting ③</b>
SY_POFF3	+ 330 msec	480 msec	<b>Each Initial Setting ④</b>
SY_POFF4	+ 1020 msec	1500 msec	<b>Each Initial Setting ④</b>
SY_POFF5	+ 390 msec	1890 msec	<b>Each Initial Setting ⑤</b> <ul style="list-style-type: none"> <li>• Clear 5V ON (the Power is stabilized) FLAG</li> <li>• SYSTEM POWER OFF (Pin No.91 : L)</li> <li>• DVD DEBUG MODE CLEAR</li> <li>• Finished the BUS communication.</li> </ul>
SY_POFF6	+ 30 msec	1920 msec	<b>POWER OFF Finished (passes every loop in the POWER OFF)</b> <ul style="list-style-type: none"> <li>• Clear the MASK FLAG of all keys.</li> <li>• Hold to set the MASK FLAG of normal key</li> <li>• Clear the Emergency POWER OFF FLAG</li> <li>• Clear the Admission FLAG of SP-Relay OFF</li> <li>• POWER Lines MUTE OFF (SYSTEM MUTE REQUEST)</li> <li>• Clear the LINE TEST MODE FLAG</li> <li>• REC MODE OFF</li> <li>• PORT Process in the POWER OFF</li> <li>• Only when the 5 sec after point after the POWER OFF, REC MUTE OFF (Pin No. 32 : H)</li> <li>• HEADPHONE MUTE OFF (Pin No.31 : H)</li> <li>• TV MUTE OFF (Pin No.92 : H)</li> <li>• Set the DIMMER PORT OFF (Pin No. 47,48 : H)</li> </ul>

### 7.1.11 SINGLE OPERATION METHOD

• Please connect DISPLAY UNIT (AXX7163) in order to use Remote Control Unit.


A

#### TEST MODE : ON Service TEST mode

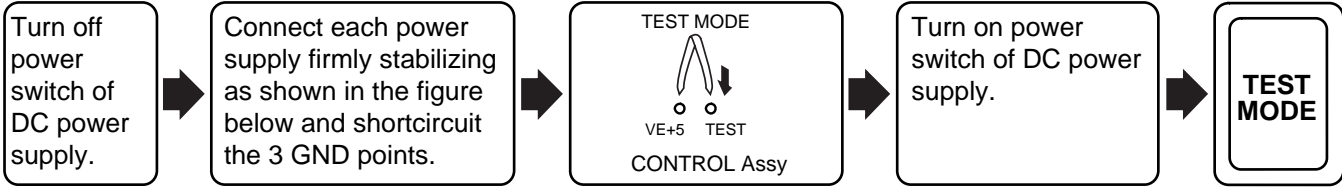

B

### CONTROL ASSY

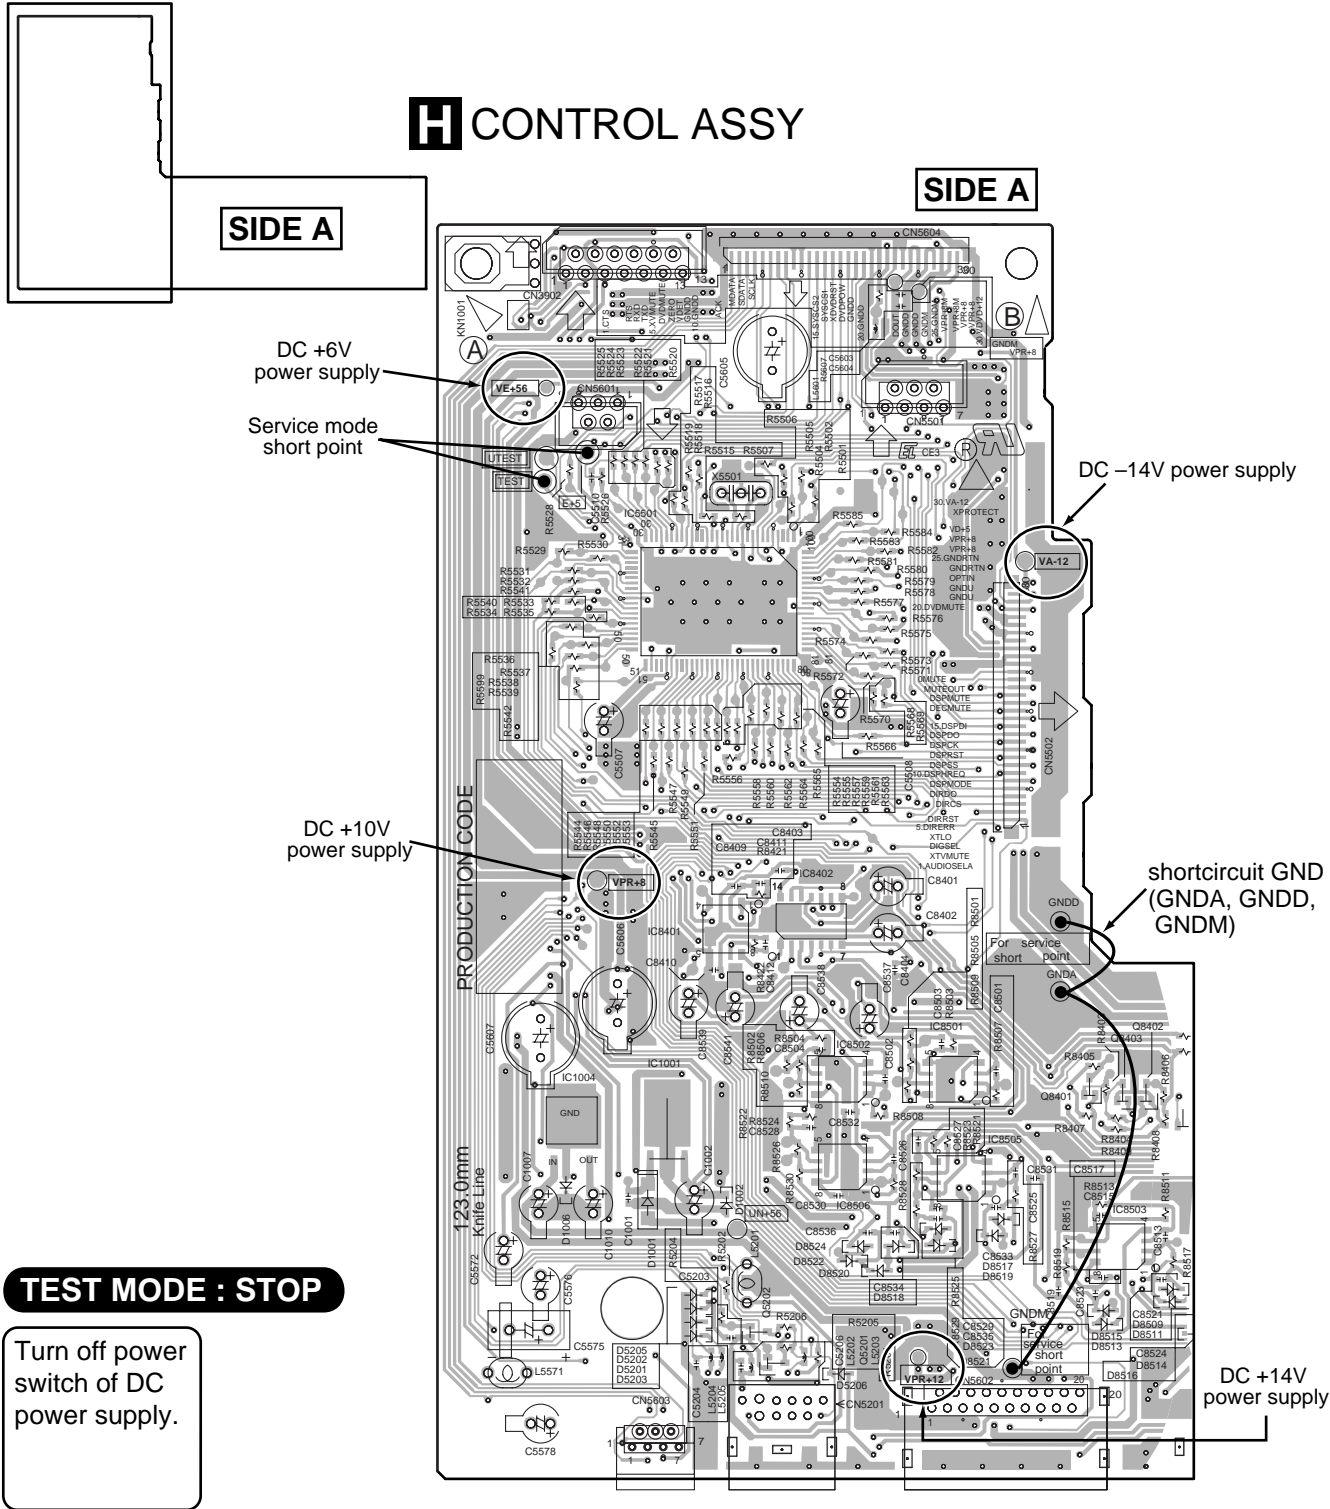

C

D

E

F

#### TEST MODE : STOP

Turn off power switch of DC power supply.

## 7.1.12 PROTECTION CIRCUIT

If the TIMER LED on the front panel flashes, check the protection circuit.

Note: If the protection circuit activates, the unit will not recover for 60 seconds even if the AC power cord is disconnected then reconnected. If you activate Service Test mode, the protection circuit becomes invalid, which makes diagnosis easy. (To activate Service Test mode, while connecting STTEST port (IC5501 Pin43) to "+5V", connect AC power cord.)

There are three types of operations for the protection circuit, which are indicated on the FL display when Service Test mode is entered:

PRCT WNG: The unit was shut down because of an abnormality in the AMP system. (The PROTECT line operates at the MID level.)

PRCT ERR: The unit was shut down because of a failure in the AMP system. (The PROTECT line operates at the LO level.)

DVD PRTECT: The unit was shut down because of a failure in the DVD system. (The VDET line operates at the HI or LO level.)

### Conditions for the protect circuit operations

	Voltage		Conditions	FL display in Service Test mode
PROTECT	HI level	>3.55V	Normal	
	MID level	1.8V - 3.5V	The unit is shut down because of an abnormality.	PRTCT WNG
	LO level	<1.8V	The unit is shut down because of a failure.	PRTCT ERR
VDET	HI level	>4.25V	The unit is shut down because of a failure.	DVD PRTECT
	MID level	3.3V	Normal	
	LO level	<2.5V	The unit is shut down because of an abnormality.	DVD PRTECT

The possible failures for each error message are as follows:

PRCT WNG:

- The Speaker terminal became overloaded because of short-circuit. (See ①.)

PRCT ERR:


- The main power supply became LO level because of short-circuit or disconnection of connectors. (See ②.)
- Disconnection of the FAN connector or interruption of rotation of the fan (See ③.)
- DC was generated at the output because of a failure in the AMP system, etc. (See ④.)
- Abnormal temperature was detected by the thermistor. (See ⑤.)

DVD PRTECT:

- An error was generated in the main power supply inside the DVDM. (See ⑥.)

### Protection circuit that activates against a PRCT WNG error

#### ① When the Speaker terminal becomes overloaded

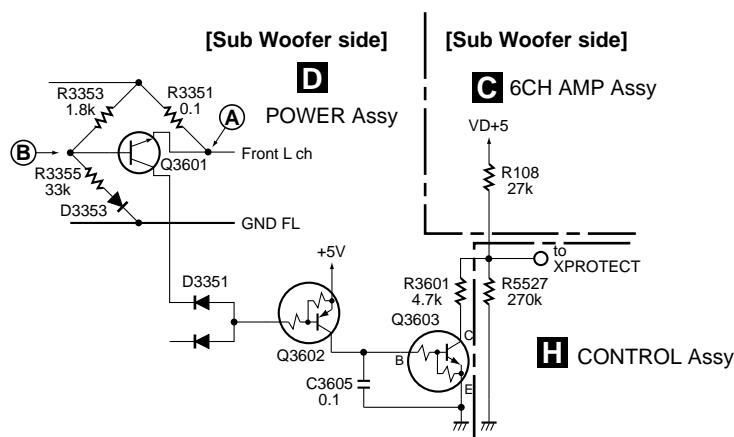

In Normal mode, the speaker (6 ohms) is connected between the FL and GND FL points. Because the voltage at Point (A) is higher than that at Point (B), Q3601 does not operate.

If the resistance between the FL and GND FL points becomes 1.83 ohms or less, Q3601 begins to operate, Q3602 is turned on, Q3603 (E, C, and B) is turned on, and the level of XPROTECT becomes MID.


- The microcomputer detects the XPROTECT level and shuts the power to the unit off.

## ■ Protection circuit that activates against a PRTCT ERR error

- ② When the main power supply becomes LO level because of short-circuit or disconnection of connectors

### ② -1 Short-circuit-detection circuit for the amplifier power circuit (VH+[VP+15], VD+5, -12 V [VA-12])

Circuit for shutting the power off when VP+15, VD+5, or VA-12 is short-circuited to ground (GND)

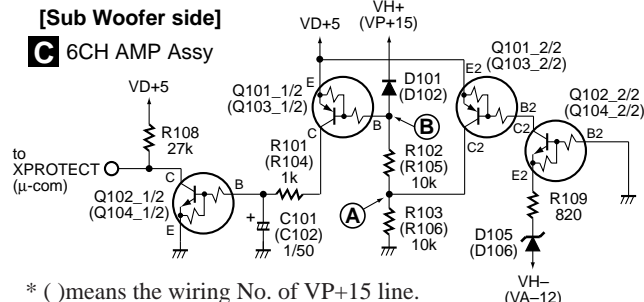

\* ( ) means the wiring No. of VP+15 line.

- In Normal mode, as Q101 (Q103) (E2, B2, C2) and Q102 (Q104) (E2, B2, C2) are on, the voltage at Point (A) is about 5 V. The voltage at Point (B) is therefore about the same. As Q101 (Q103) (E, C, B) is off, Q102 (Q104) (E, C, B) is also off.

#### (1) When VH+(VP+15) is short-circuited to GND

As the voltage at Point (B) becomes almost ground potential, and Q101 (Q103) (E, C, B) then Q102 (Q104) (E, C, B) are turned on, the level of XPROTECT becomes low.

→ The microcomputer detects the XPROTECT level and shuts the power to the unit off.


#### (2) When VH-(VA-12) is short-circuited

As the electric potential of VE at Q102 (Q104) (E2, C2, B2) becomes the same as that at VB, Q102 (Q104) (E2, C2, B2) is turned off. Following this, Q101 (Q103) (E2, B2, C2) is turned off, which changes the voltage at Points (A) and (B) to a value other than 5 V. Therefore, Q101 (Q103) (E, C, B) then Q102 (Q104) (E, C, B) are turned on, the level of XPROTECT becomes low.

#### (3) When VD+5 is short-circuited

The level of the XPROTECT line becomes low. The microcomputer detects the XPROTECT level and shuts the power to the unit off.

### ② -2 Short-circuit-detection circuit for the DVD power supply (VP+8)

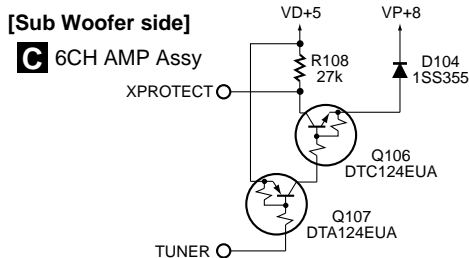


As the TUNER line is fixed to GND level, Q107 is always on. If the level at VP+8 falls to GND level because of short-circuit, etc., Q106 is turned on, and the level of the XPROTECT line becomes low.

← The microcomputer detects the XPROTECT level and shuts the power to the unit off.

- ③ When the FAN connector is disconnected or when rotation of the fan is interrupted

[Sub Woofer side]

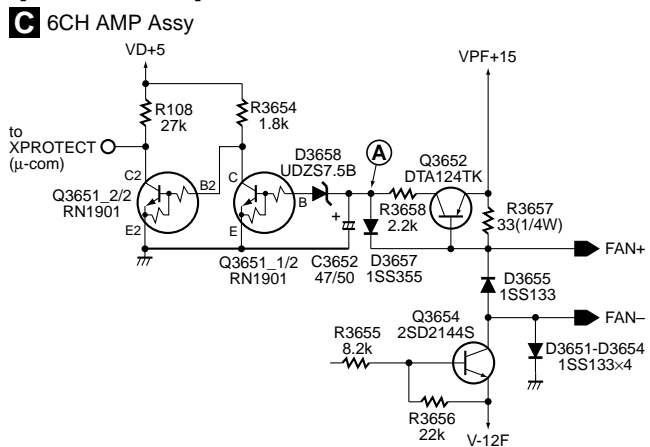


If no fan is connected between FAN+ and FAN-, or when the fan cannot rotate because of a foreign object caught in the blades, the BASE of Q3652 becomes OPEN, and Q3652 and Q3651-1/2 (E, C, B) are turned off. Then Q3651-2/2 (E2, B2, C2) is turned on, and the level of XPROTECT becomes low.

→ The microcomputer detects the XPROTECT level and shuts the power to the unit off.

When FAN+ and FAN- are short-circuited, the electric potential at Point (A) becomes higher than GND level by the addition of the values at D3656 and D3657. As this value is lower than that at D3658, Q3651 (E, C, B) is turned off, Q3651 (E2, B2, C2) is turned on, and the level of XPROTECT becomes low.

- ④ When DC is generated at the output because of a failure in the AMP system, etc.

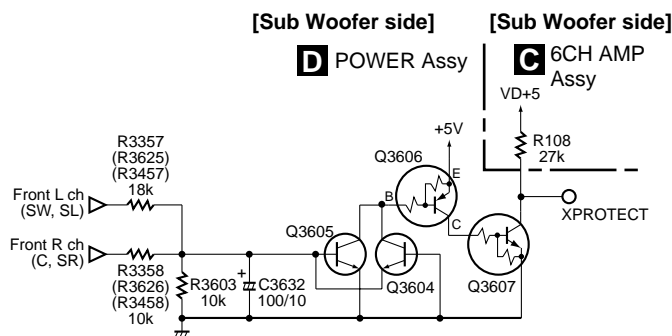

• In Normal mode, both Q3605 and Q3604 are off.

- (1) When positive (+) DC voltage is generated at the SP terminal

When positive (+) DC voltage is generated at the L or R channel, and VB of Q3605 becomes higher than that at the operation point, Q3606 (E, C, B) is turned on, and the level of XPROTECT becomes low.


→ The microcomputer detects the XPROTECT level and shuts the power to the unit off.

- (2) When negative (-) DC voltage was generated at the SP terminal

Q3604 is turned on, and XPROTECT is activated.

- ⑤ When abnormally high temperature is detected by the thermistor

- ⑤ -1 IC81 abnormal temperature detection circuit

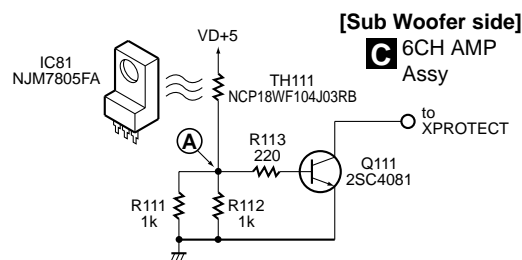


The voltage at Point (A) becomes the divided voltage of TH111 and R111//R112 (combined resistance of parallel-connected resistors R111 and R112.) In Normal mode, the resistance at TH111 is much higher than R111//R112, and Q111 is off. (Note that the resistance at TH111 becomes lower as the temperature increases.) If the solder temperature at IC81 increases abnormally, the temperature at TH111 (thermistor) mounted closest to the land of IC81 increases accordingly, and the resistance at TH111 decreases.

When the temperature at TH111 reaches 90-110\_C (varying according to conditions,) the voltage at Point (A) becomes high enough to turn Q111 on, and the level of the XPROTECT line becomes low. The microcomputer detects the XPROTECT level and shuts the power to the unit off.

## Protection circuit that activates against a DVD PRTECT error

⑥ The DVDM monitors the voltage of the main power supply by VDET signals.

In Normal mode, the VDET signal is at the MID level (3.3 V). In the following conditions, the VDET signal level becomes L or H, and the microcomputer is notified of this abnormality.

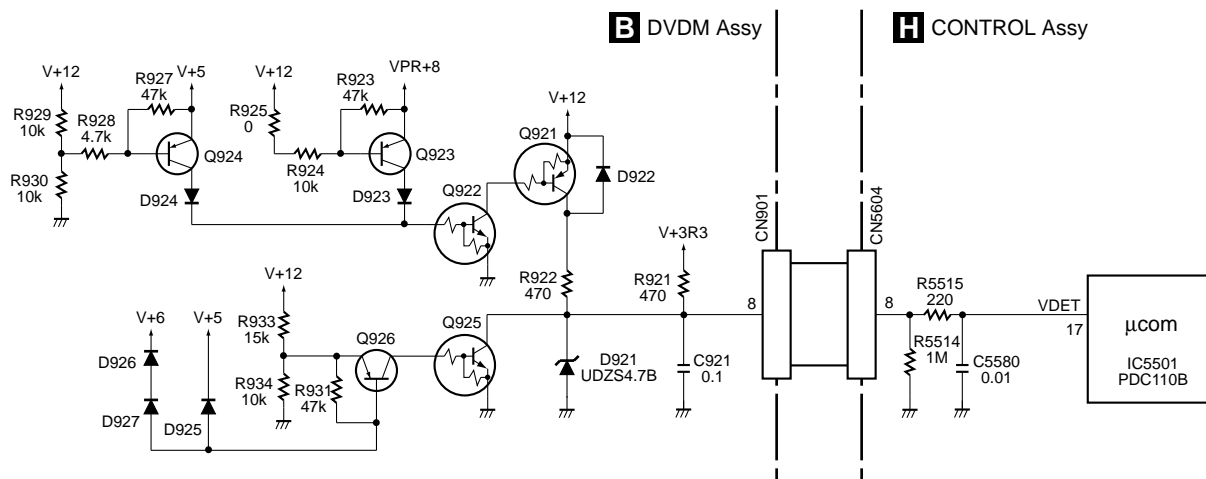

### Items to be detected by VDET

(1) When the power voltages inside the DVDM become abnormal, as shown in the table below

Status	Power	Voltage	Operation								VDET voltage	
			Q923	Q924	Q922	Q921	D921	D922	Q926	Q925		
In Normal mode			off	off	off	off	off	off	off	off	off	Mid
When an abnormality is generat	VDVD+12	<1V	(on)	(on)	(on)	(off)	off	on	off	off	off	L
		>15.5V	off	off	off	off	off	off	on	on	on	L
	VPR+8	<5.2V	–	off	off	off	off	–	on	on	on	L
		>12.6V	on	–	on	on	on	–	off	off	off	H
	V+6	<3V	–	–	–	–	–	–	on	on	on	L
	V+5	<3.6V	–	off	off	off	off	–	on	on	on	L
		>6.6V	–	on	on	on	on	–	off	off	off	H
	V+3R3	<2.5V	–	–	–	–	–	–	–	–	–	–
>4.25V		–	–	–	–	–	(on)	–	–	–	–	H

(2) When the VDET signal to the microcomputer is interrupted because of defective soldering of the 30-pin connector or incomplete insertion of FFC

→ The VDET level is lowered by the pull-down resistor (1 Mohms) on the side of the microcomputer.



### 7.1.13 DISASSEMBLY


**Note:** For performing the diagnosis shown below, the following jig cable for service are required:

- GGD1222


**This unit is a system component, so it does not operate independently.**

**Refer to section "7.1.11 SINGLE OPERATION METHOD" to work it independently.**

#### 1 Top panel, Top plate

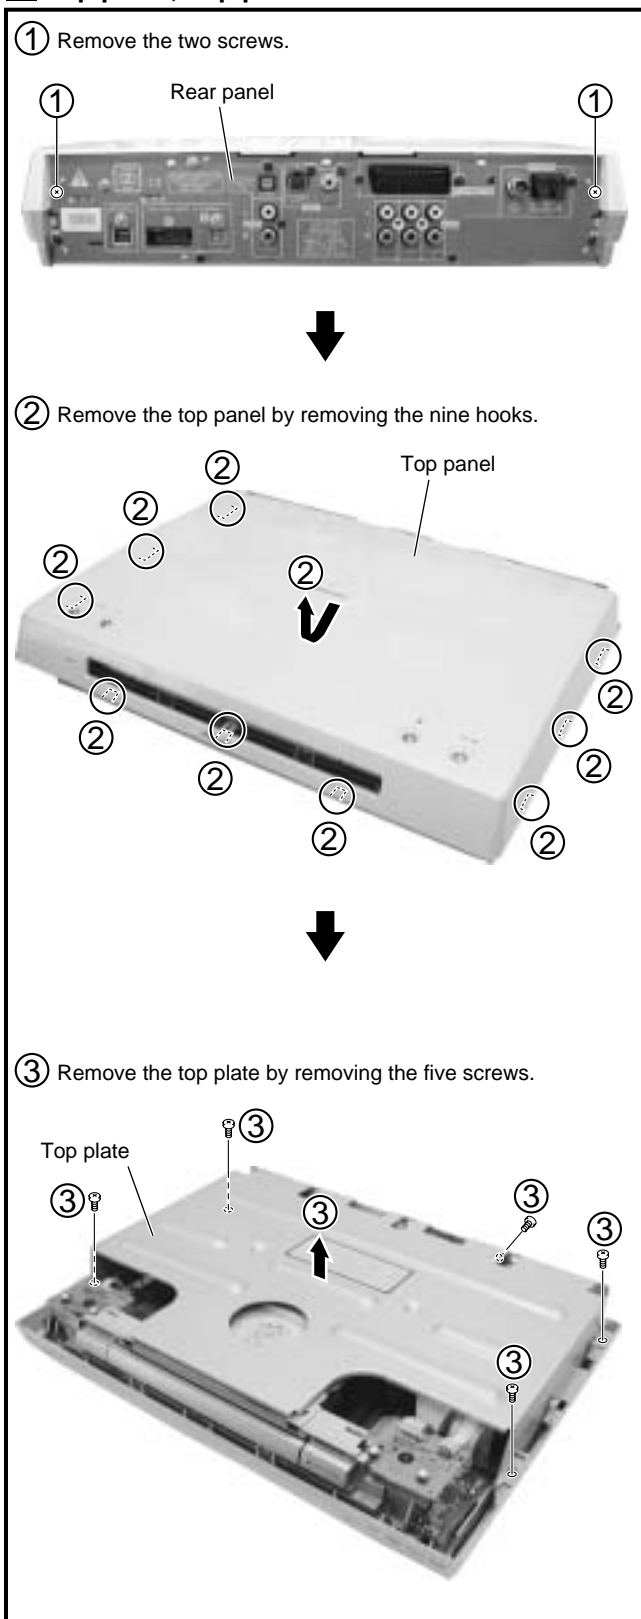


#### 2 VIDEO Assy

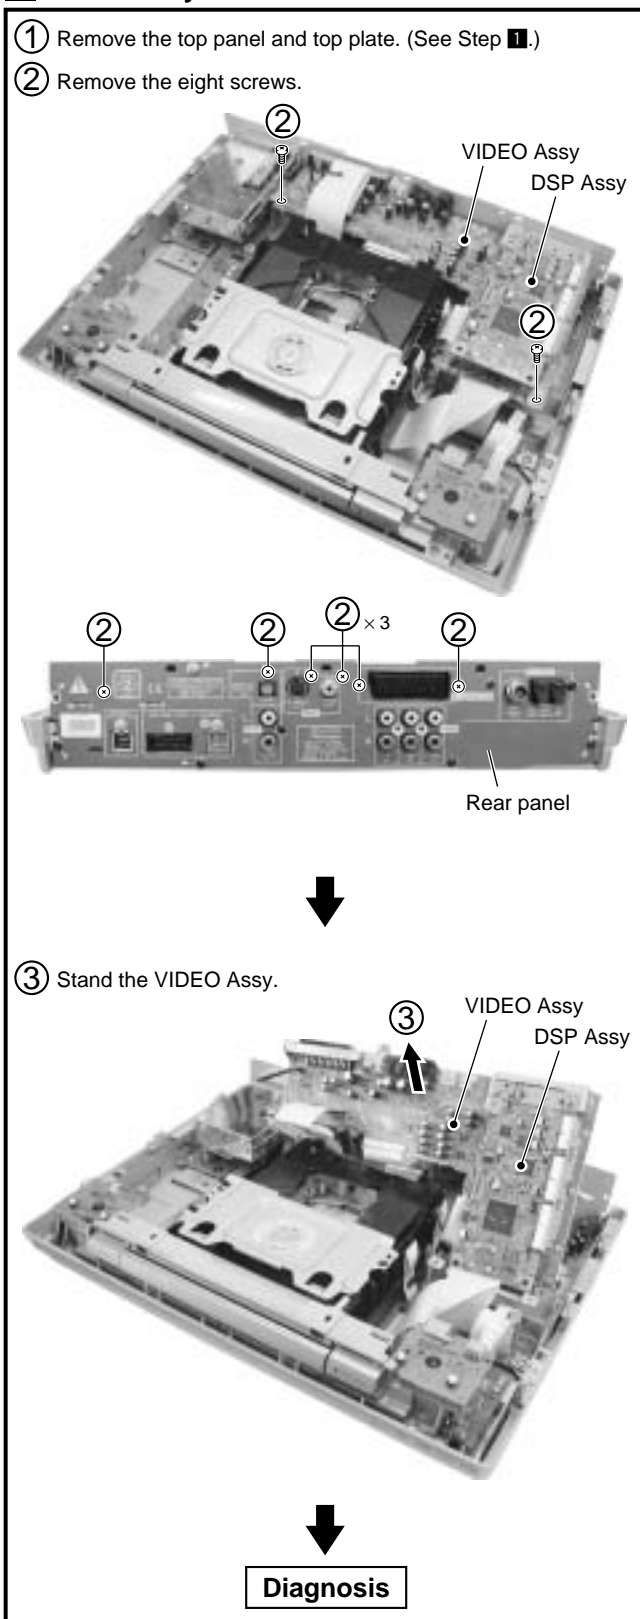


### 3 CONTROL Assy

① Remove the top panel and top plate. (See Step 1.)

② Remove the ten screws.

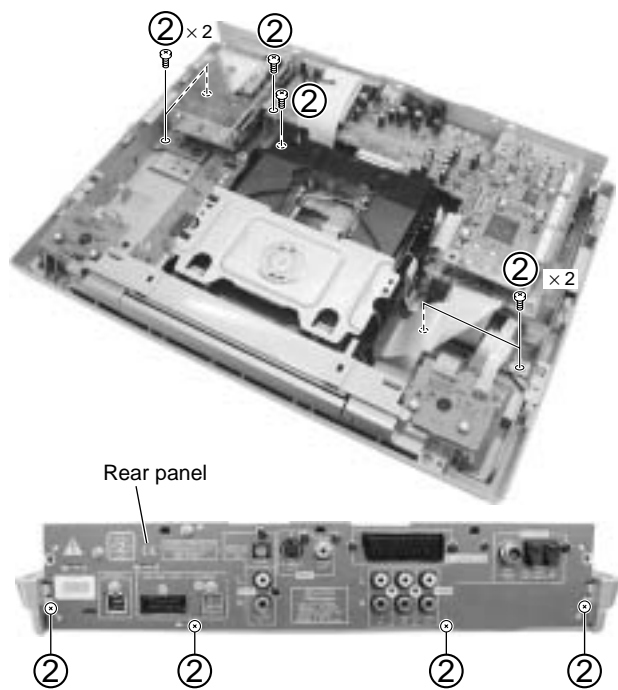

③ Stand the CONTROL Assy.

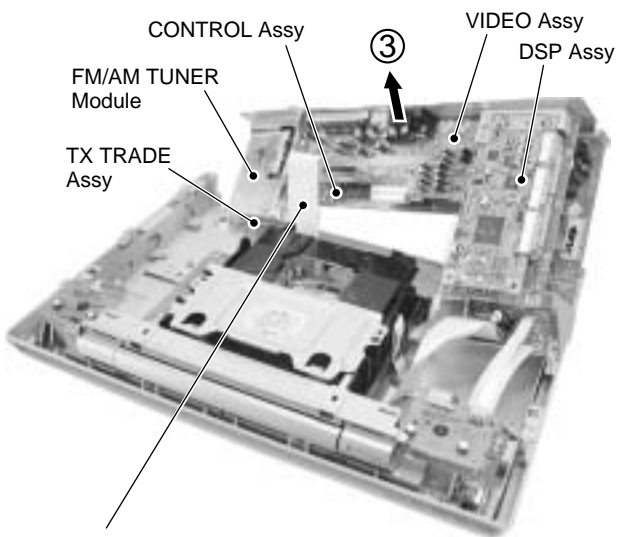

NOTE:  
When this FFC cable is off from the connector and the power is turned on, the parts below on the DVDM ASSY may be destroyed. Be sure to take care when servicing.

IC851 DSD1791DBR  
IC861, IC871 DSD1702EG

**Diagnosis**


### 4 DVDM Assy

① Remove the top panel and top plate. (See Step 1.)


② Remove the six screws.

③ Remove the three flexible cables.

④ Remove the DVD mechanism section with front section.

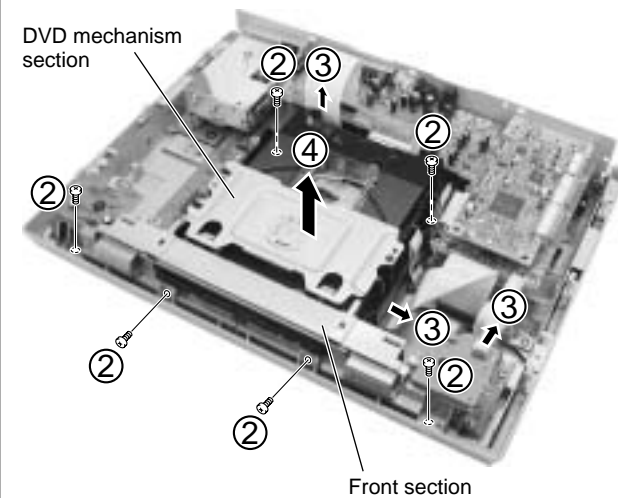

⑤ Remove the two screws.

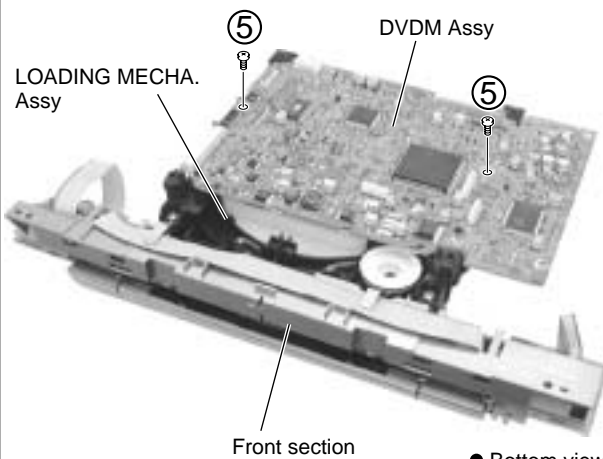

● Bottom view

⑥ Release the jumper wire.

⑦ Connect the jig cable.

⑧ Arrange the DVDM Assy as shown in the photo below.

⑨ Insert the insulation sheet.

LOADING MECHA. Assy

⑥ ⑥ ⑥

• Rear view

DVDM Assy

⑦ Jig cable (GGD1222)

DVDM Assy

⑨ Insulation Sheet

LOADING MECHA. Assy

**Diagnosis**

**PCB Location**

**A** TX TRADE Assy

**B** DVDM Assy

**C** VIDEO Assy

**D** CONTROL Assy

**E** DSP Assy

**F** FM/AM TUNER Module

**G** DSP TRADE Assy

**H** HP Assy

**I** LOADING MECHA. Assy

**J** KEY LTOP Assy

**K** KEY L Assy


**L** KEY RTOP Assy

**M** KEY R Assy

### 5 Tray panel

Firstly remove the tray panel to remove the mecha. section. In this section, explain a disassembly of the tray panel.



- ① Remove the top panel and top plate. (See Step 1.)
- ② Press the STANDBY/ON button to turn on the power.
- ③ Press the (OPEN/CLOSE) button to open the tray.
- ④ Remove the tray panel.
- ⑤ Press the (OPEN/CLOSE) button to close the tray.
- ⑥ Press the STANDBY/ON button to turn off the power.

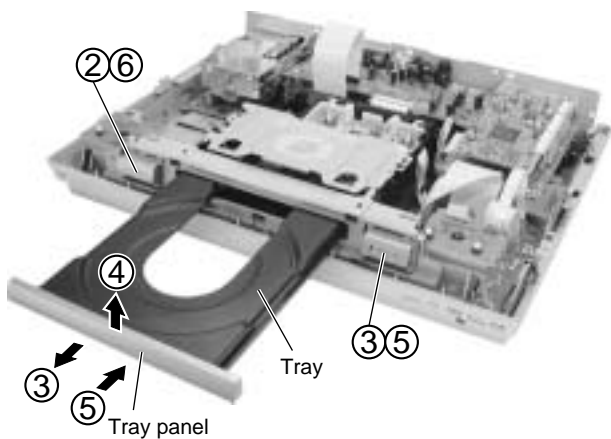

- ⑦ Disassembly of after step 7, refer to "Step 4 DVDM Assy".

#### ● How to open the tray when the power cannot be on

Insert a screwdriver (small) into the slit located at the bottom of the unit, and slide the projection of the drive gear in the LOADING MECHA. Assy in the direction of the arrow, as indicated in the photo. If the tray pops out a little, fully pull it out by a hand.

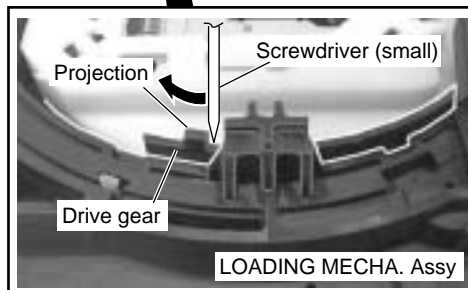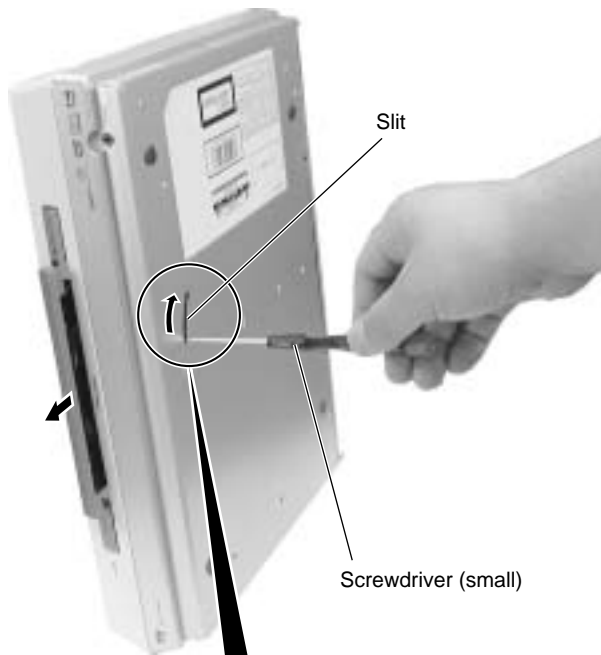


# Removing the TRAVERSE MECHA. Assy-S and Pickup Assy-S

## 1 LOADING MECHA. Assy

- ① Remove the bridge by removing the one screw.
- ② Pull out the tray, then remove it by pressing the hook.
- ③ Short-circuit two points of C and D by soldering.


**Note:** After replacement, connect the flexible cable, then remove the soldered joint (open).

- ④ Remove the four connectors from the LOADING MECHA. Assy.

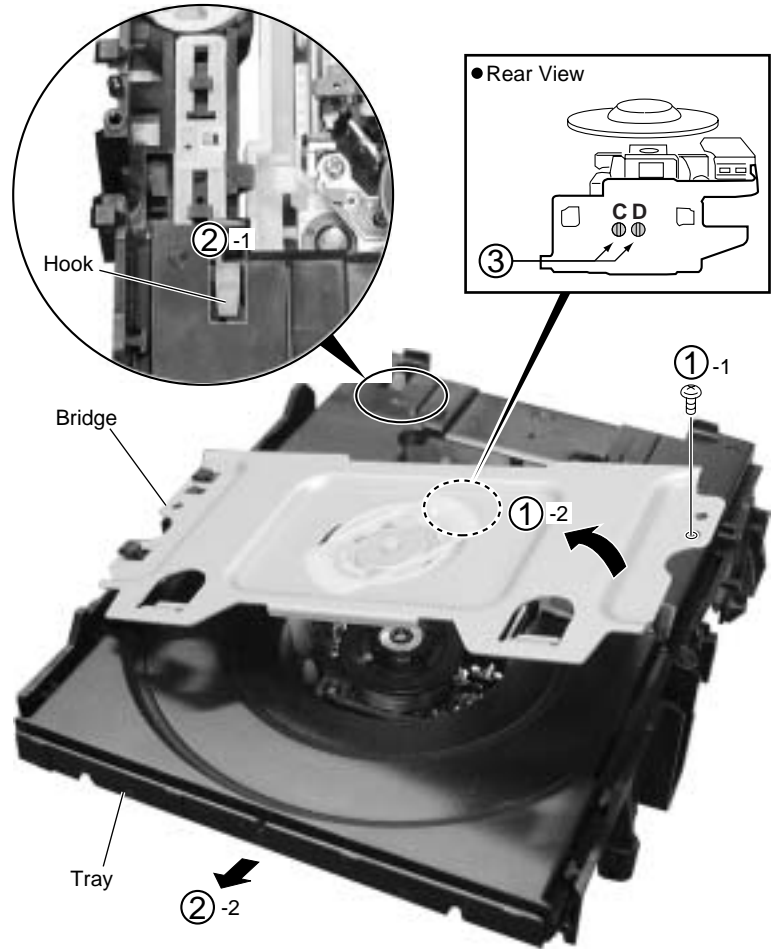


### Note when reinserting the Tray

When reinserting the Tray, first align the triangle printed on the Loading base and the pin of the Drive cam, then insert the Tray.

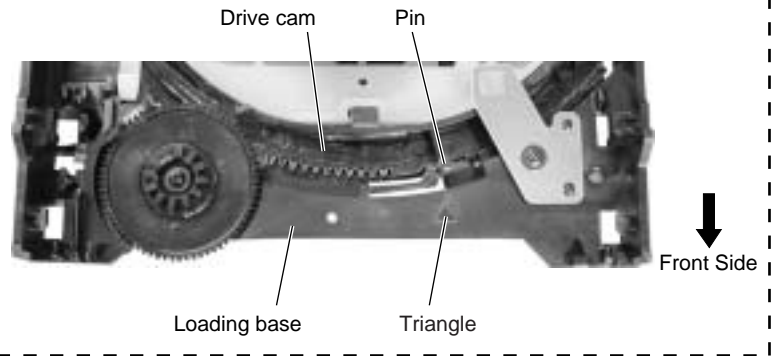


## 2 TRAVERSE MECHA. Assy-S

- ① Dislodge the flexible cables from their packaged placement.

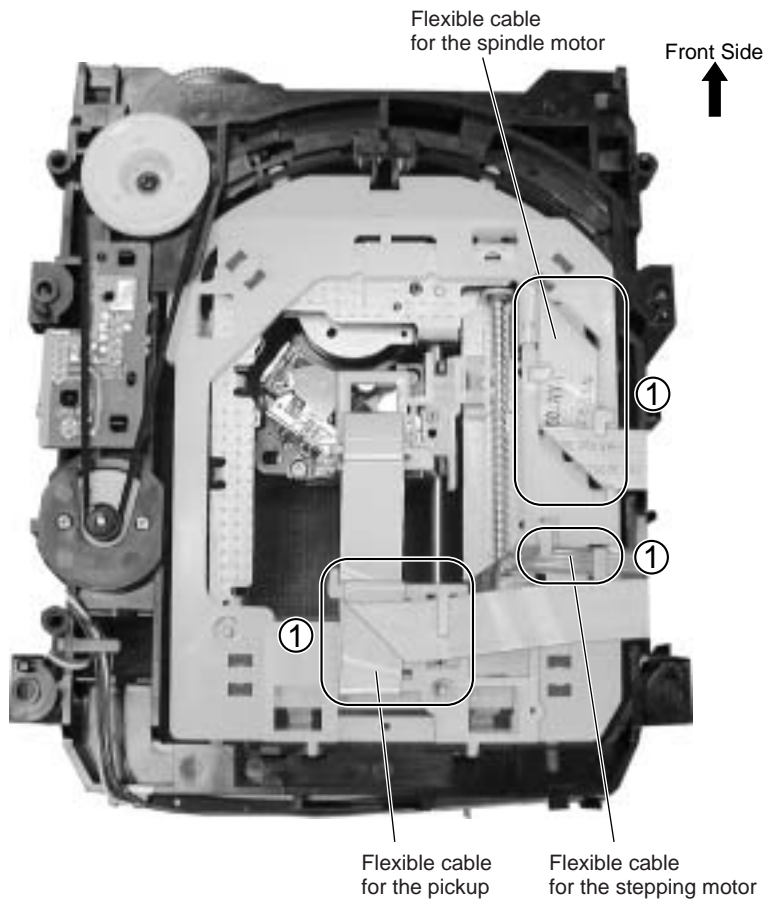

● Bottom View


- ② Remove the four hooks.
- ③ Remove the TRAVERSE MECHA. Assy-S.

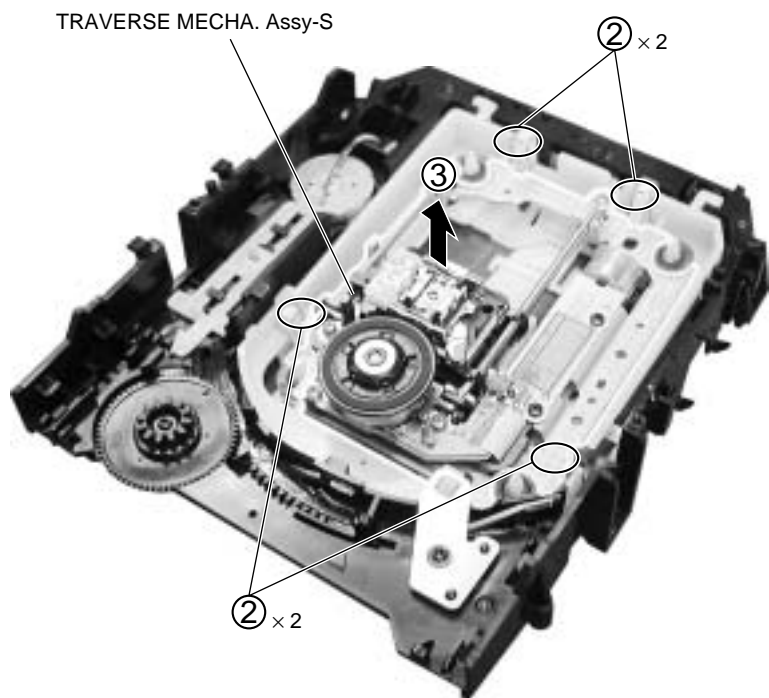


### 3 Pickup Assy-S

**Note:** The Pickup Assy-S can be removed without removing the TRAVERSE MECHA. Assy-S. (shown as Step 2.)

- ① Dislodge the flexible cable for the pickup from its packaged placement.
- ② Remove the flexible cable for the pickup.

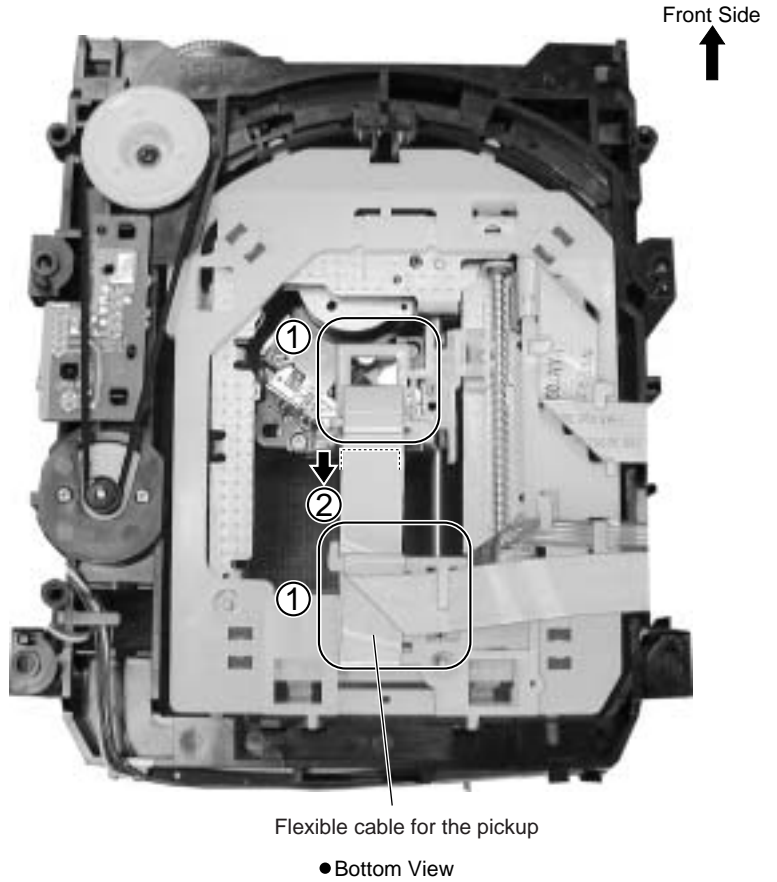


- ③ Remove the two skew screws and two skew springs.
- ④ Remove the Pickup Assy-S.

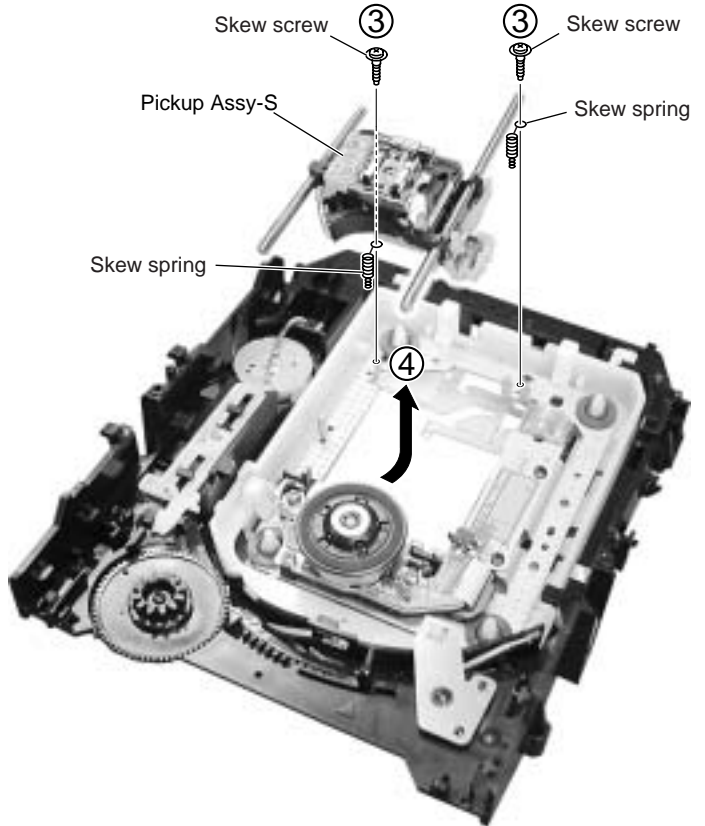


⑤ Remove the two screws.

**Note:** The screws are secured with epoxy. Make sure to apply epoxy after reattaching the screws.

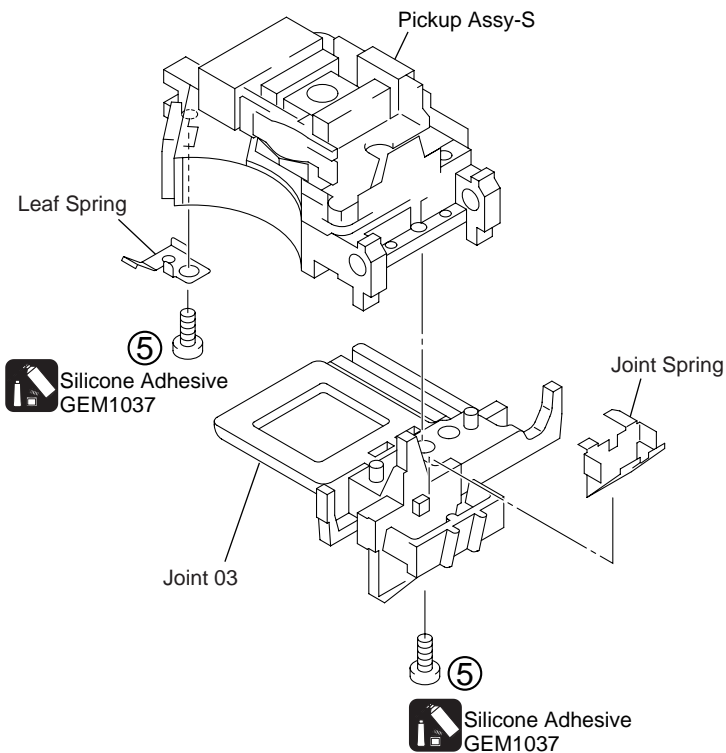


**Arrangement of the flexible cable for the spindle motor**

■ : Conductive surface

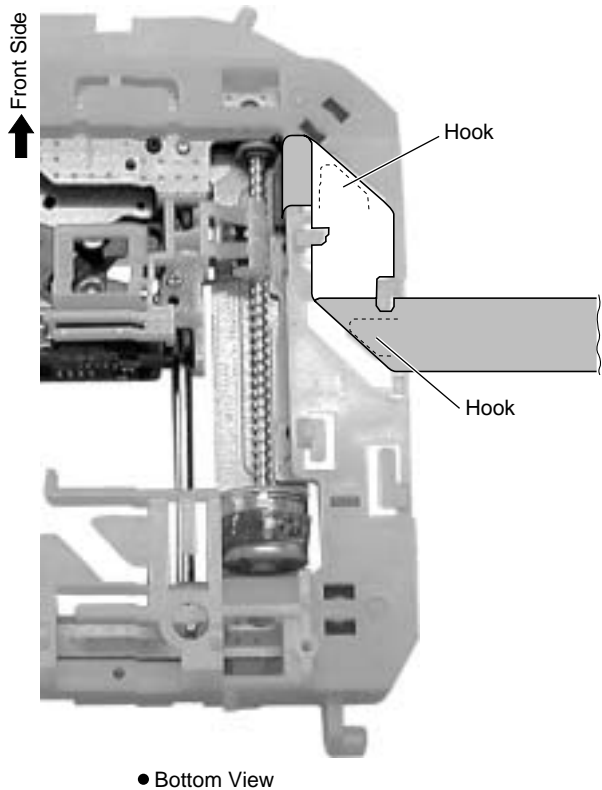

**Arrangement of the flexible cable for the stepping motor**

■ : Conductive surface

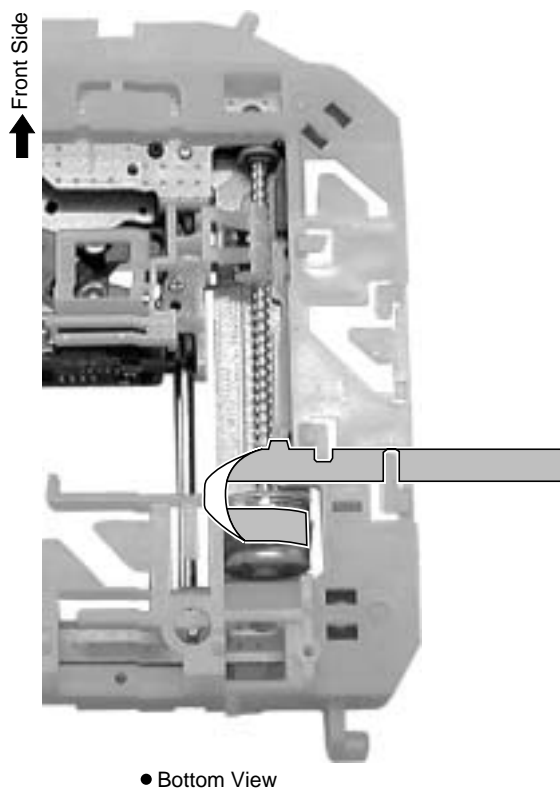




### Arrangement of the flexible cable for the pickup

 : Conductive surface

#### Note:


Be sure to move the Pickup Assy-S to the innermost perimeter.

- ① Fold the flexible cable inward at the position of the reference line.
- ② Attach the flexible cable of the pickup to the connector.
- ③ Fold the flexible cable of the pickup with the backing inward.

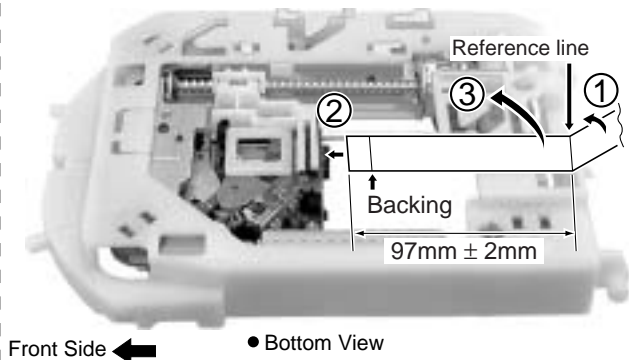


- ⑦ Pass the flexible cable below the hook, and fold it back.

Make sure that the cable does not have any slack

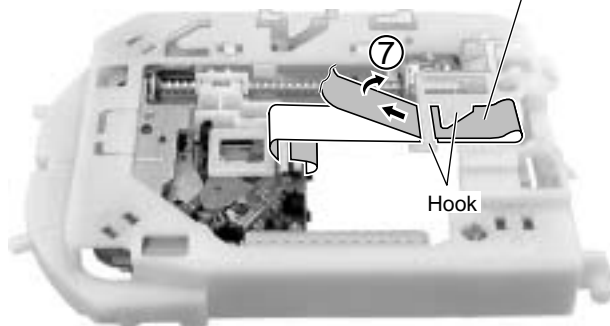


- ⑧ Fold the flexible cable back at the hook.

Make sure that the cable is loose

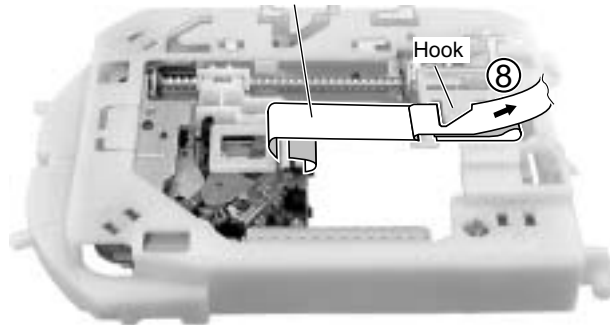


- ④ Pass the flexible cable through the hook not allowing any slack.

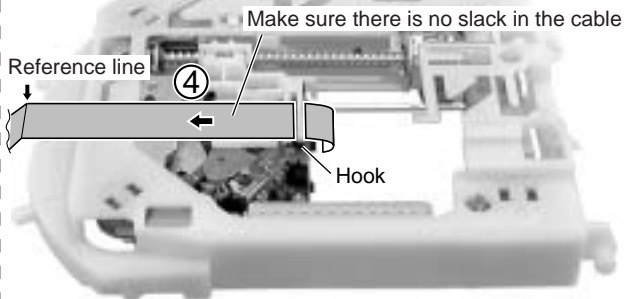


- ⑤ Fold the flexible cable as indicated in the photo.

- ⑥ Hook the part folded in Step ① to the hook.

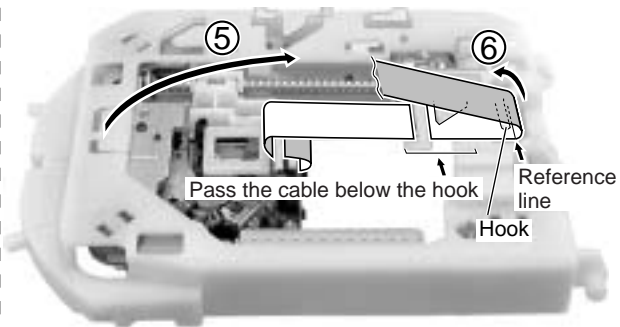

- ⑨ Fold the flexible cable along the hook.

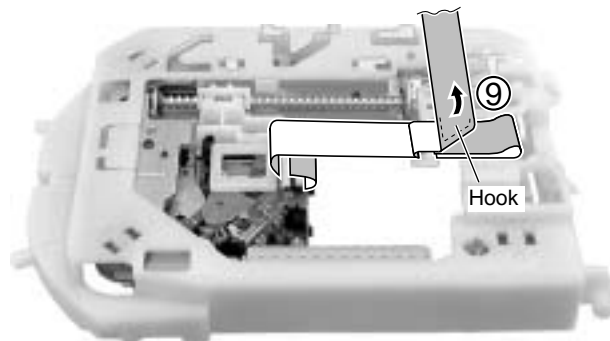

# 7.2 IC

The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


## List of IC

STM6316ATXXZ, STM5588CVB, M63108FP, SAA7893HL/C2, PDC110B

## STM6316ATXXZ (DVDM ASSY : IC301)

### FRONT END IC

### Block Diagram

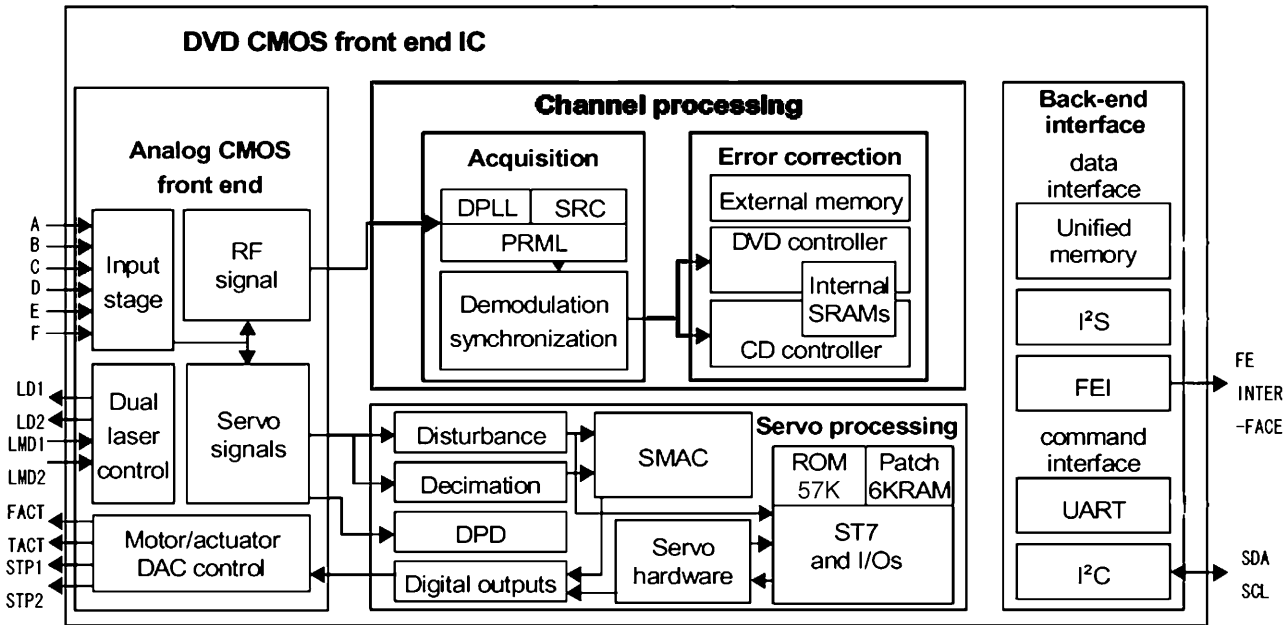

## ● Pin Function

No.	PIN name	description	detail
1	IREF	12.7kF	Analog block reference part
2	GNDAI	GNDA	analog gnd
3	RFIN	capacitor	RF signal C association input to a demodulation block
4	RFOUT	capacitor	B1+B2+B3+B4 mixture listing from an analog block
5	VCCA18	1V8A	analog 1V8
6	A	B1	PU - B1 input
7	GNDMN	GNDA	analog gnd
8	B	B2	PU - B2 input
9	VCC33MN	3V3A	analog 3V3
10	REFD	to pick up	2V1 output for PU
11	VCC18MN	1V8A	analog 1V8
12	D	B4	PU - B4 input
13	VCCA18IS	1V8A	analog 1V8
14	C	B3	PU - B3 input
15	VCCA33IS	3V3A	analog 3V3
16	GNDAIS	GNDA	analog gnd
17	VCC33SD	3V3A	analog 3V3
18	VCC18SD	1V8A	analog 1V8
19	GNDSD	GNDA	analog gnd
20	F	C	PU-3 beam C input
21	E	A	PU-3 beam A input
22	VSHIELDIS	GNDA	analog gnd
23	VCC18ADC	1V8A	analog 1V8
24	GNDADC	GNDA	analog gnd
25	VSHIELDADC	GNDA	analog gnd
26	VCC33DAC	3V3A	analog 3V3
27	GNDDAC	GNDA	analog gnd
28	SPINDLE	560ohm(st2)	DAC current listing for stepper drive
29	SLEDGE	560ohm(st1)	DAC current listing for stepper drive
30	REFEXT	20K1%	Reference for DAC
31	REFGND	refext	analog gnd
32	REFDAC	560ohm1%	DAC reference
33	FACT	560ohm1%	DAC current listing for focus
34	TACT	560ohm1%	DAC current listing for tracking
35	VCC18DAC	1V8A	analog 1V8
36	PC0	FG	FG pulse input
37	PC1	PS	Driver control signal
38	PC2	tray SW1(open)	SW input for tray OPEN position
39	PC3	SB	Driver control signal
40	PC4	SLD position	Inside SW input


No.	PIN name	description	detail
41	VSS	GNDD	digital gnd
42	VDD33	3V3D	digital 3V3
43	PC5	780/X650	780nm/650nmLD change control signal
44	PC6	spinde PDM	Control PDM listing for spindle drive
45	PC7	opicgain	OEIC gain control signal
46	PD7	03PU/X02PU	Pull-up settlement
47	VSS	GNDD	digital gnd
48	VDD18	1V8D	digital 1V8
49	PD6	(debug)	test
50	PD5	(debug)	test
51	PD4	(DSPclk)	test
52	PD3	(DSPdata)	test
53	PD2	(DSPstrb1)	test
54	PD1	error monitor	Terminal for TRKG error monitor (30KHzLPF add need)
55	PD0	tray PDM drive	Control PDM signal for tray drive
56	VSS	GNDD	digital gnd
57	VDD33	3V3D	digital 3V3
58	OUT_ERR	RS_ERROR	BE DATA I/F
59	OUT_EVALID	RS_ERR_EN	BE DATA I/F
60	VSS	GNDD	digital gnd
61	OUT_CLK	RS_BCLK	BE DATA I/F
62	VDD18	1V8D	digital 1V8
63	OUT_DVALID	RS_DVALID	BE DATA I/F
64	OUT_DATA	RS_DATA	BE DATA I/F
65	OUT_SYNC	RS_ECCBST	BE DATA I/F
66	PE5	SCL(DMA)	FE routine download input
67	PE4	SDA(DMA)	FE routine download input
68	PE3	SCL	BE command I/F
69	PE2	SDA	BE command I/F
70	PE1	tray SW2(close)	SW input for tray CLOSE position
71	PE0	DXXINT	FE status propagation signal
72	VSS	GNDD	digital gnd
73	VDD33	3V3D	digital 3V3
74	PF1	10K-pullup	Built-in facility setting terminal
75	PF0	10K-pulldown	Built-in facility setting terminal
76	VSS	GNDD	digital gnd
77	VDD18	1V8D	digital 1V8
78	PG1	to EMULATOR	Built-in facility setting terminal
79	PG0	to EMULATOR	Built-in facility setting terminal
80	TEST	10K-pulldown	test

No.	PIN name	description	detail
81	RESET_N	RESET	RESET input
82	VSSADC	GNDA	analog gnd
83	VDD18ADC	1V8A	analog 1V8
84	GNDPLL	GNDA	analog gnd
85	PLLOFF	GNDA	analog gnd
86	FREOUT	20MXtal	SYSTEMCLK oscillating circuit
87	FREIN	20MXtal	SYSTEMCLK oscillating circuit
88	VCC18PLL	1V8A	analog 1V8
89	LD1	650nmLD	650nmLD driving signal
90	LD2	780nmLD	780nmLD driving signal
91	VCCA33	3V3A	digital 3V3
92	TWSEL	CD_VR/GND	Monitor diodes VR junction terminal for CD
93	LMD1	LMD/LMD1	Monitor voltage junction terminal
94	LMD2	DVD_VR/LMD2	Monitor diodes VR junction terminal for DVD
95	GNDL	GNDA	analog gnd
96	TST_PM	nc	tset
97	TST_SLICE	nc	test
98	TST_ADC	nc	test
99	RFSACD	SACD_IC	RF signal output
100	VBGFILT	capacitor	Condenser junction terminal for inside reference stability

# STI5588CVB (DVDMM ASSY : IC601)


• BACK END IC

## ● Pin Configuration

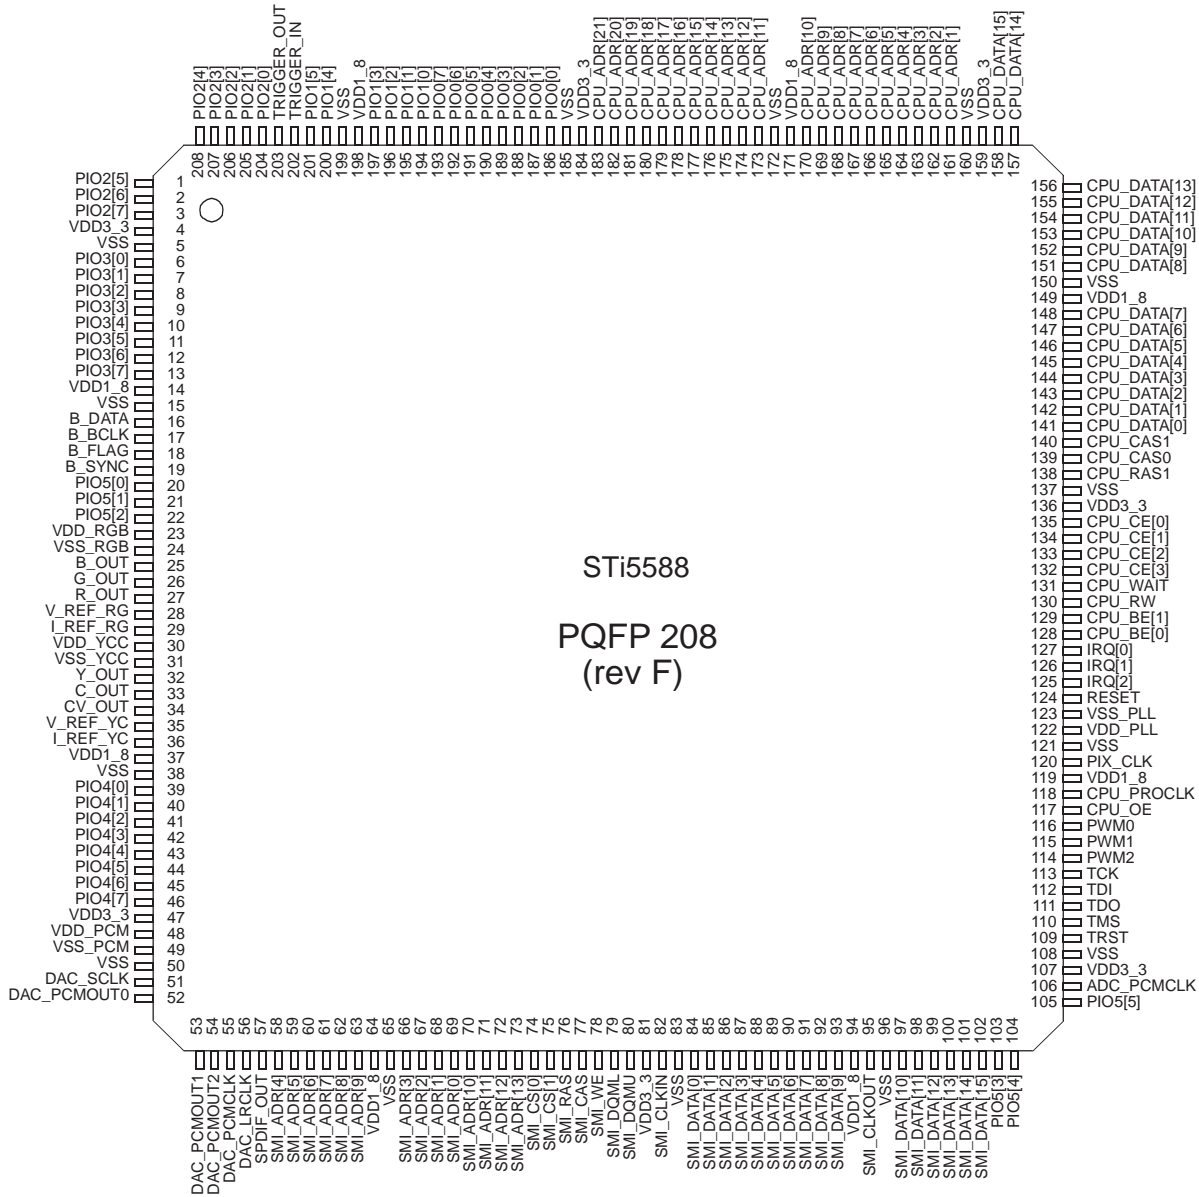

STI5588  
PQFP 208  
(rev F)

● Block Diagram

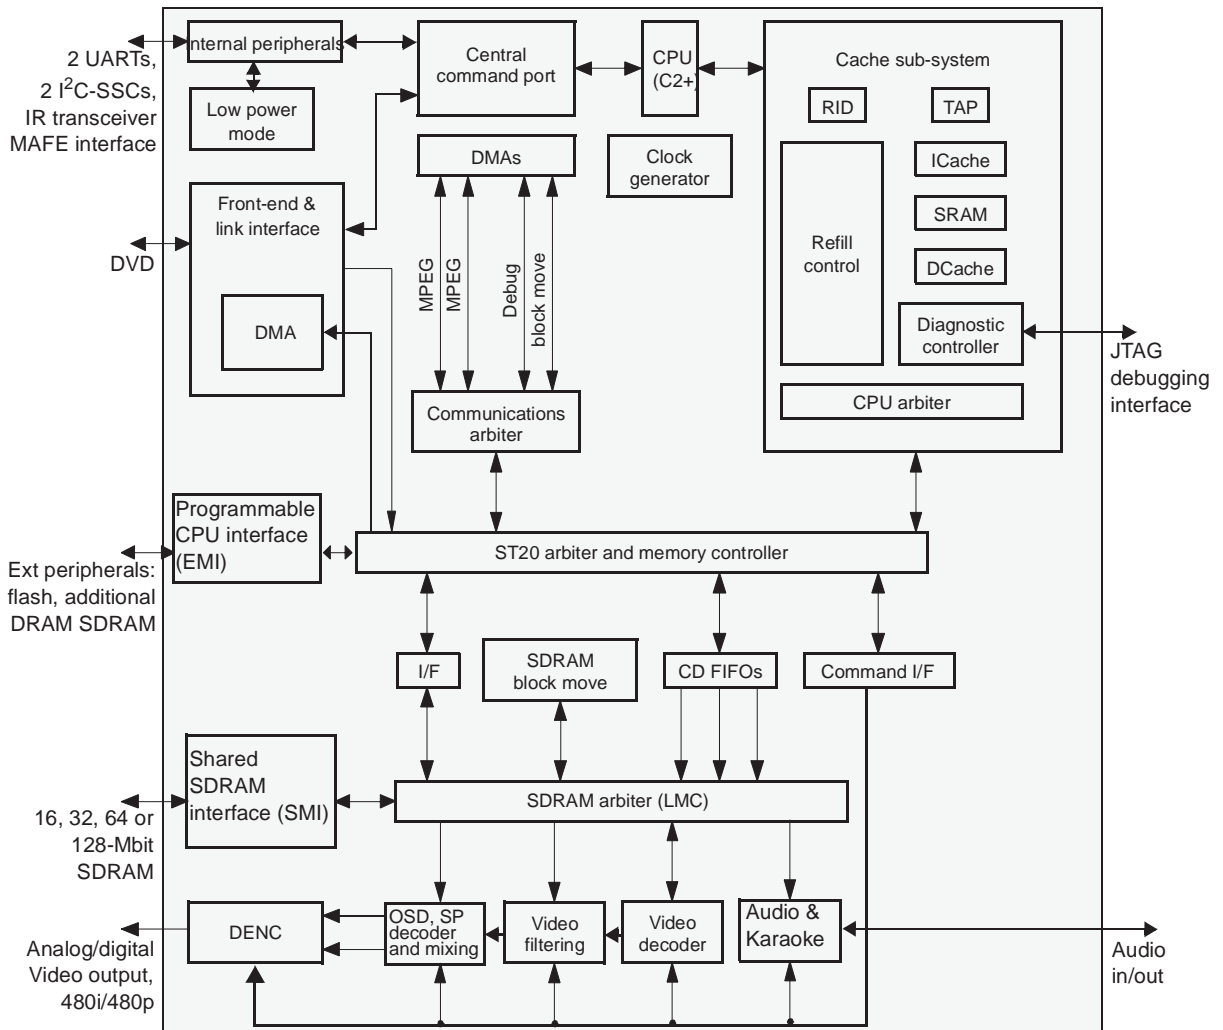

A  
B  
C  
D  
E  
F

## ● Pin Function

No.	Pin Name	Dir.	Pin Function
1	FP_SO	OUT	Front Panel / DAC interface. Serial transfer data output.
2	A_DATA3	OUT	Data output to SACD decoder
3	VCLK	OUT	reserved
4	VDD_3V3	-	3.3 V Power supply
5	VSS	-	Ground
6	B_DATA	OUT	SACD data output to SACD decoder
7	B_BCLK	OUT	SACD bit clock output to SACD decoder
8	B_FLAG	OUT	SACD flag output to SACD decoder
9	TRYPOS	OUT	It is not connected except 5 Disc Changer.
		IN	Only 5 Disc Changer. Tray rotation pulse input. CAPTURE_IN0 can be used.
10	SQUEEZE	OUT	Output signal for S-Video output S1/S2 control. 'H' : squeeze output mode.
11	RTS	OUT	UART(RS-232C) Request To Send signal output.
12	LETTER	OUT	Output signal for S-Video output S1/S2 control & EURO(SCART) connector (FUNCTION SWITCHING) signal. 'H' : letter-box output mode.
13	CTS	IN	UART(RS-232C) Clear To Send signal input.
14	VDD_1V8	-	1.8 V Power supply
15	VSS	-	Ground
16	FE_DATA	IN	Front-End L6316 stream interface. Serial data input.
17	FE_BCLK	IN	Front-End L6316 stream interface. Serial clock input.
18	FE_DVALID	IN	Front-End L6316 stream interface. Data valid flag input.
19	FE_SYNC	IN	Front-End L6316 stream interface. Serial synchronize flag input.
20	FE_EVALID	IN	Front-End L6316 stream interface. Error valid flag for RS_split.
21	FE_ECCBST	IN	Front-End L6316 stream interface. ECC block start flag for RS_split.
22	I/XP	OUT	Output signal for a change of interlace/Progressive output for video driver. 'L' : progressive 'H' : interlace
23	VDD_RGB	-	RGB circuit 3.3 V Power supply
24	VSS_RGB	-	RGB circuit Ground
25	B_OUT	OUT	B / Cb
26	G_OUT	OUT	G / Y
27	R_OUT	OUT	R / Cr
28	VREF_RGB	IN	RGB DAC reference
29	IREF_RGB	IN	RGB DAC current reference
30	VDD_YCC	-	YC circuit 3.3 V Power supply
31	VSS_YCC	-	YC circuit Ground
32	Y_OUT	OUT	Y
33	C_OUT	OUT	C
34	CV_OUT	OUT	CV
35	VREF_YCC	IN	YCC DAC reference
36	IREF_YCC	IN	YCC DAC current reference
37	VDD_1V8	-	1.8 V Power supply
38	VSS	-	Ground



No.	Pin Name	Dir.	Pin Function
39	FE_XDRV_MUTE	OUT	It is not connected except 5 Disc Changer. Only 5 Disc Changer. Output signal for motor driver muting. 'L' : muting
		OUT	It is not connected except 5 Disc Changer.
40	FE_OPEN	IN	Only 5 Disc Changer. Input signal for tray position. 'H' : complete OPEN position.
		OUT	It is not connected except 5 Disc Changer.
41	FE_CLOSE	IN	Only 5 Disc Changer. Input signal for tray position. 'H' : complete CLOSE position.
		OUT	It is not connected except 5 Disc Changer.
42	CLAMP	IN	Only 5 Disc Changer. Input signal for showing disc clamp position. 'H' : complete disc clamp position.
		OUT	It is not connected except 5 Disc Changer.
43	XUNCLAMP	IN	Only 5 Disc Changer. Input signal for showing disc un-clamp position. 'H' : complete disc clamp position.
		OUT	It is not connected except 5 Disc Changer.
44	DISC_SNS	IN	Only 5 Disc Changer. Input signal for disc existing. 'L' : existing
		OUT	It is not connected except 5 Disc Changer.
45	XDRVMUTE2	OUT	reserved
46	TP-x	OUT	reserved
47	VDD_3V3	-	3.3 V Power supply
48	VDD_PCM	-	1.8 V Power supply
49	VSS_PCM	-	Ground
50	VSS	-	Ground
51	A_BCK	OUT	Audio DAC clock
52	A_DATA0	OUT	Audio DAC Front L,R data
53	A_DATA1	OUT	Audio DAC Center, LFE data
54	A_DATA2	OUT	Audio DAC Surround L, R data
55	A_MCLK	OUT	Audio DAC Master clock
56	A_LRCK	OUT	Audio DAC L/R clock
57	A_DOUT	OUT	S/PDIF(IEC60958) digital audio output.
58	SMI_A4	OUT	SMI SDRAM Address
59	SMI_A5		
60	SMI_A6		
61	SMI_A7		
62	SMI_A8		
63	SMI_A9		
64	VDD_1V8	-	1.8 V Power supply
65	VSS	-	Ground
66	SMI_A3	OUT	SMI SDRAM Address
67	SMI_A2		
68	SMI_A1		
69	SMI_A0		
70	SMI_A10		
71	SMI_A11		
72	SMI_A12		
73	SMI_A13		

No.	Pin Name	Dir.	Pin Function
74	SMI_CS0	OUT	SMI SDRAM chip select 'L'.
75	SMI_CS1	OUT	reserved
76	SMI_RAS	OUT	SMI SDRAM RAS 'L'
77	SMI_CAS	OUT	SMI SDRAM CAS 'L'
78	SMI_WE	OUT	SMI SDRAM Write Enable 'L'
79	SMI_DQML	OUT	SMI SDRAM Lower DQM 'L': Lower select
80	SMI_DQMU	OUT	SMI SDRAM Upper DQM 'L': Upper select
81	VDD_3V3	-	3.3 V Power supply
82	SMI_CLKIN	IN	External SDRAM clock input.
83	VSS	-	Ground
84	SMI_D0	I/O	SMI SDRAM Data
85	SMI_D1		
86	SMI_D2		
87	SMI_D3		
88	SMI_D4		
89	SMI_D5		
90	SMI_D6		
91	SMI_D7		
92	SMI_D8		
93	SMI_D9		
94	VDD_1V8	-	1.8 V Power supply
95	SMI_CLKOUT	OUT	SDRAM clock output.
96	VSS	-	Ground
97	SMI_D10	I/O	SMI SDRAM Data
98	SMI_D11		
99	SMI_D12		
100	SMI_D13		
101	SMI_D14		
102	SMI_D15		
103	TRACK_CROSS	OUT	reserved
104	DSD_XPCM	OUT	reserved
105	DAC_XRST	OUT	Reset signal of audio DAC. 'L': Reset
106	ADC_PCMCLK	OUT	reserved
107	VDD_3V3	-	3.3 V Power supply
108	VSS	-	Ground
109	XTRST	IN	Diagnostic Control Unit interface
110	TMS	IN	Diagnostic Control Unit interface
111	TDO	OUT	Diagnostic Control Unit interface
112	TDI	IN	Diagnostic Control Unit interface
113	TCK	IN	Diagnostic Control Unit interface
114	ROTDRV	OUT	Only 5 disc changer. PWM output for tray rotation.
115	BOOT_FROM_ROM	IN	Boot select 'L' : Boot from DCU. 'H' : Boot form ROM.
116	LOAD_DRV	OUT	Only 5 disc changer. PWM output for tray Open/Close drive.
117	CPU_OE	OUT	OE signal for 16M bits FLASH memory for firmware. 'L': enable

No.	Pin Name	Dir.	Pin Function
118	CPU_SDCK	OUT	CLOCK for 64M bits SDRAM for debugging firmware.
119	VDD_1V8	-	1.8 V Power supply
120	PIXCLK	IN	Master 27MHz system clock input.
121	VSS	-	Ground
122	VDD_PLL	-	Clock PLL circuit 1.8 V Power supply
123	VSS_PLL	-	Clock PLL circuit Ground
124	XRESET	IN	Power ON system RESET signal. 'L': reset
125	SACD_IRQ	IN	Interrupt signal from SACD decoder
126	FP_XRDY	IN	Front Panel interface. Hand-shake input.
127	FE_INT	IN	Interrupt input signal from Front-End L6316.
128	F_XWE, SD_DQML	OUT	Flash memory write enable. Debug SDRAM/SRAM Lower DQM. 'L': enable, Lower select.
129	SD_DQMU	OUT	Debug SDRAM/SRAM Upper DQM 'L':upper select
130	SD_RXW	OUT	Debug SDRAM Read/Write 'L':write, 'H':read
131	CPU_WAIT	IN	CPU wait 'H' input
132	CE_FLASH	OUT	Flash memory Chip Enable 'L'.
133	CE_SACD	OUT	Licence signal from SACD decoder
134	CPU_CE1	OUT	reserved
135	SD_XRAS	OUT	Debug SDRAM RAS 'L' Debug SRAM chip enable 'L'
136	VDD_3V3	-	3.3 V Power supply
137	VSS	-	Ground
138	CPU_RAS1	OUT	reserved
139	SD_XCAS	OUT	Debug SDRAM CAS 'L'
140	SD_XCS	OUT	Debug SDRAM Chip Select 'L'
141	CPU_D0	I/O	FLASH, Debug SDRAM/SRAM data
142	CPU_D1		
143	CPU_D2		
144	CPU_D3		
145	CPU_D4		
146	CPU_D5		
147	CPU_D6		
148	CPU_D7		
149	VDD_1V8	-	1.8 V Power supply
150	VSS	-	Ground
151	CPU_D8	I/O	FLASH, Debug SDRAM/SRAM data
152	CPU_D9		
153	CPU_D10		
154	CPU_D11		
155	CPU_D12		
156	CPU_D13		
157	CPU_D14		
158	CPU_D15		
159	VDD_3V3	-	3.3 V Power supply
160	VSS	-	Ground


No.	Pin Name	Dir.	Pin Function
161	CPU_A1	OUT	FLASH, Debug SDRAM/SRAM Address
162	CPU_A2		
163	CPU_A3		
164	CPU_A4		
165	CPU_A5		
166	CPU_A6		
167	CPU_A7		
168	CPU_A8		
169	CPU_A9		
170	CPU_A10		
171	VDD_1V8	-	1.8 V Power supply
172	VSS	-	Ground
173	CPU_A11	OUT	FLASH, Debug SDRAM/SRAM Address
174	CPU_A12		
175	CPU_A13		
176	CPU_A14		
177	CPU_A15		
178	CPU_A16		
179	CPU_A17		
180	CPU_A18		
181	CPU_A19		
182	CPU_A20		
183	CPU_A21		
184	VDD_3V3	-	3.3 V Power supply
185	VSS	-	Ground
186	XEXPE	OUT	reserved
187	FE_ERROR	IN	Front-End L6316 stream interface. ECC Error flag
188	VSEL1	OUT	EURO(SCART) connector (BLINKING) output signal 'L' : RGB output disable 'H' : RGB output enable
189	VSEL2	OUT	EURO(SCART) connector V/Y, R/C signal. 'L' : VRGB output = YCGB 'H' : VRGB output = VRGB
190	FE_RST	OUT	Front-End L6316. Hardware reset output. 'L' : reset
191	SACD_XRST	OUT	Reset signal of SACD decoder. 'L' : reset
192	XMMUTE	OUT	Output for tone quality enhancement
193	B_SYNC	OUT	Sector synchronization output to SACD decoder
194	SDA	I/O	Front-End L6316 command interface I2C bus serial data line.
195	SCL	OUT	Front-End L6316 command interface I2C bus serial clock line.
196	B_WCLK	OUT	Word clock output to SACD decoder
197	TXD	OUT	UART(RS-232C) data output
198	VDD_1V8		1.8 V Power supply
199	VSS	-	Ground
200	RXD	IN	UART(RS-232C) data input

No.	Pin Name	Dir.	Pin Function
201	XAMUTE	OUT	Output signal for analog audio output line muting. 'L' : muting
202	TRIGIN	IN	Diagnostic Control Unit interface
203	TRIGOUT	OUT	Diagnostic Control Unit interface
204	DAC_XCS0	OUT	Chip enable for audio DAC serial control. 'L' : enable
205	DAC_XCS1	OUT	Use of serial control of 5.1ch audio DAC is possible. 'L' : enable
206	FP_ACK	OUT	Front Panel / DAC interface. Hand-shake (acknowledge) output 'H'.
207	FP_SCK	OUT	Front Panel / DAC interface. Serial transfer clock output.
208	FP_SI	IN	Front Panel interface. Serial transfer data input.


# M63018FP (DVDM ASSY : IC101)

• FTS Driver IC

## Pin Arrangement

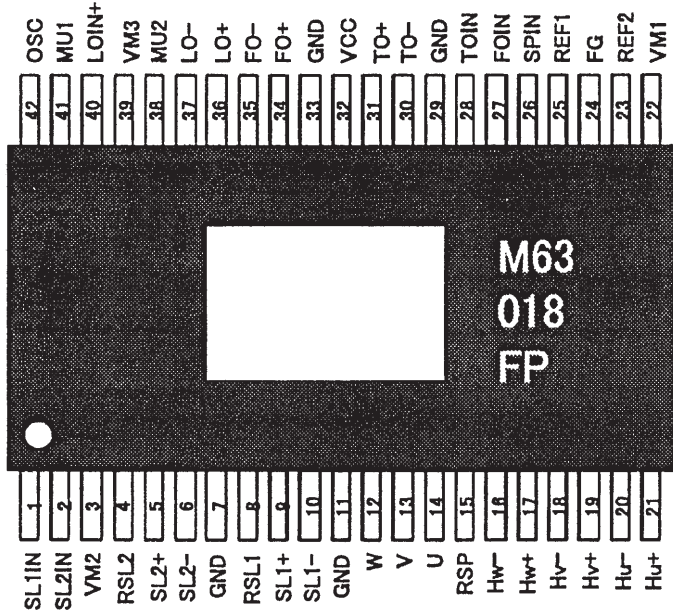

## Block Diagram

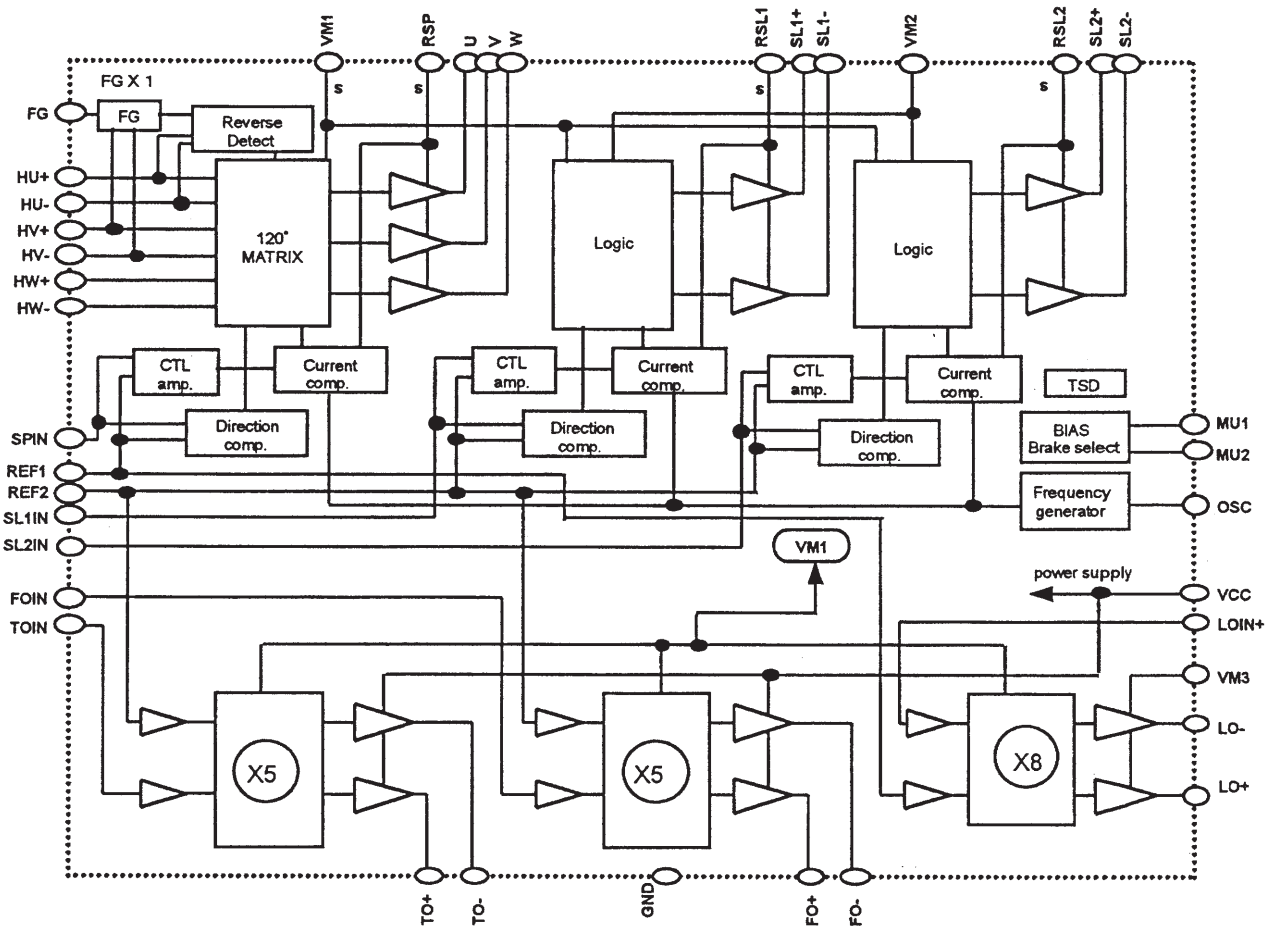


## ● Pin Function

TERMINAL	SYMBOL	TERMINAL FUNCTION	TERMINAL	SYMBOL	TERMINAL FUNCTION
1	SL1IN	Slide control voltage input 1	4 2	OSC	PWM carrier oscillation set
2	SL2IN	Slide control voltage input 2	4 1	MU1	mute / brake select terminal 1
3	VM2	Motor Power Supply 2 (for Slide)	4 0	LOIN+	Loading control input(+)
4	RSL2	Slide current sense 2	3 9	VM3	Power Supply3 (for Loading)
5	SL2+	Slide non-inverted output 2	3 8	MU2	mute / brake select terminal 2
6	SL2-	Slide inverted output 2	3 7	LO-	Loading inverted output
7	GND	GND	3 6	LO+	Loading non-inverted output
8	RSL1	Slide current sense 1	3 5	FO-	Focus inverted output
9	SL1+	Slide non-inverted output 1	3 4	FO+	Focus non-inverted output
1 0	SL1-	Slide inverted output 1	3 3	GND	GND
1 1	GND	GND	3 2	VCC	Power Supply (for FS ,TS)
1 2	W	Motor drive output W	3 1	TO+	Tracking non-inverted output
1 3	V	Motor drive output V	3 0	TO-	Tracking inverted output
1 4	U	Motor drive output U	2 9	GND	GND
1 5	RSP	Spindle current sense	2 8	TOIN	Tracking control voltage input
1 6	HW-	HW- sensor amp. input	2 7	FOIN	Focus control voltage input
1 7	HW+	HW+ sensor amp. input	2 6	SPIN	Spindle control voltage input
1 8	HV-	HV- sensor amp. input	2 5	REF1	Reference voltage input 1 (for Spindle,Loading)
1 9	HV+	HV+ sensor amp. input	2 4	FG	Frequency generator output
2 0	HU-	HU- sensor amp. input	2 3	REF2	Reference voltage input 2 (for Slide,Focus,Tracking)
2 1	HU+	HU+ sensor amp. input	2 2	VM1	Motor Power Supply 1 (for Spindle)

# ■ SAA7893HL/C2 (DVDM ASSY : IC801)


• SACD Decoder IC

## ● Block Diagram

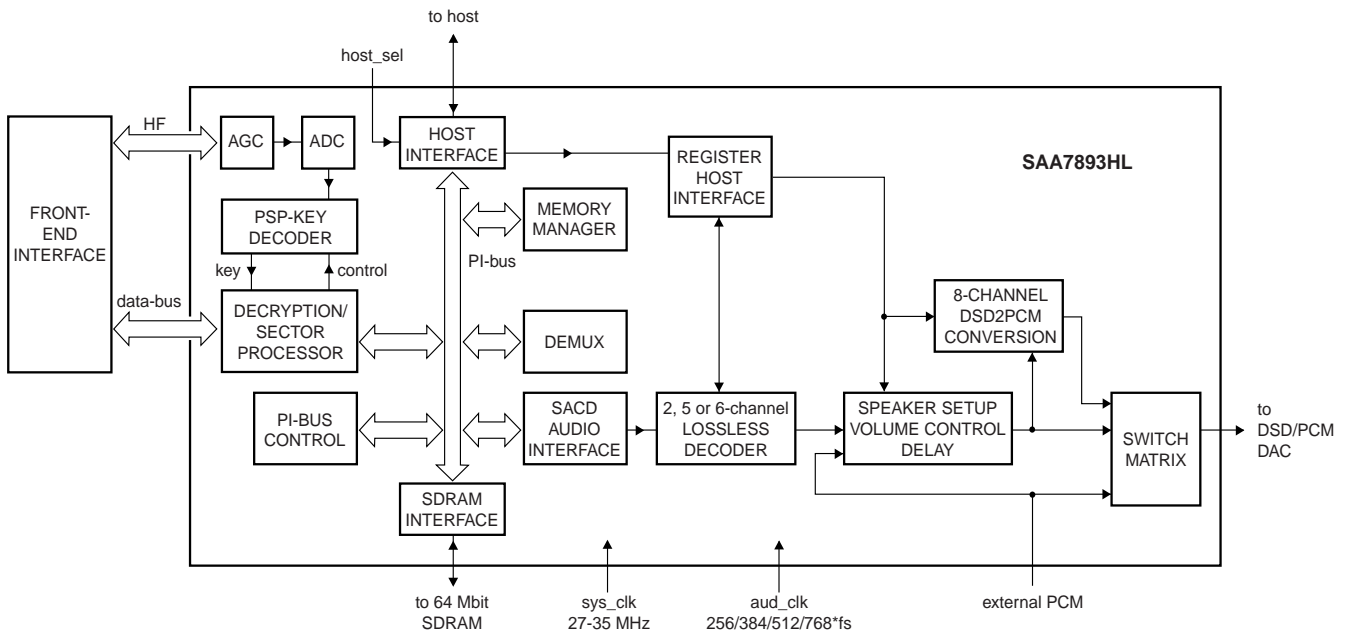



● Pin Layout

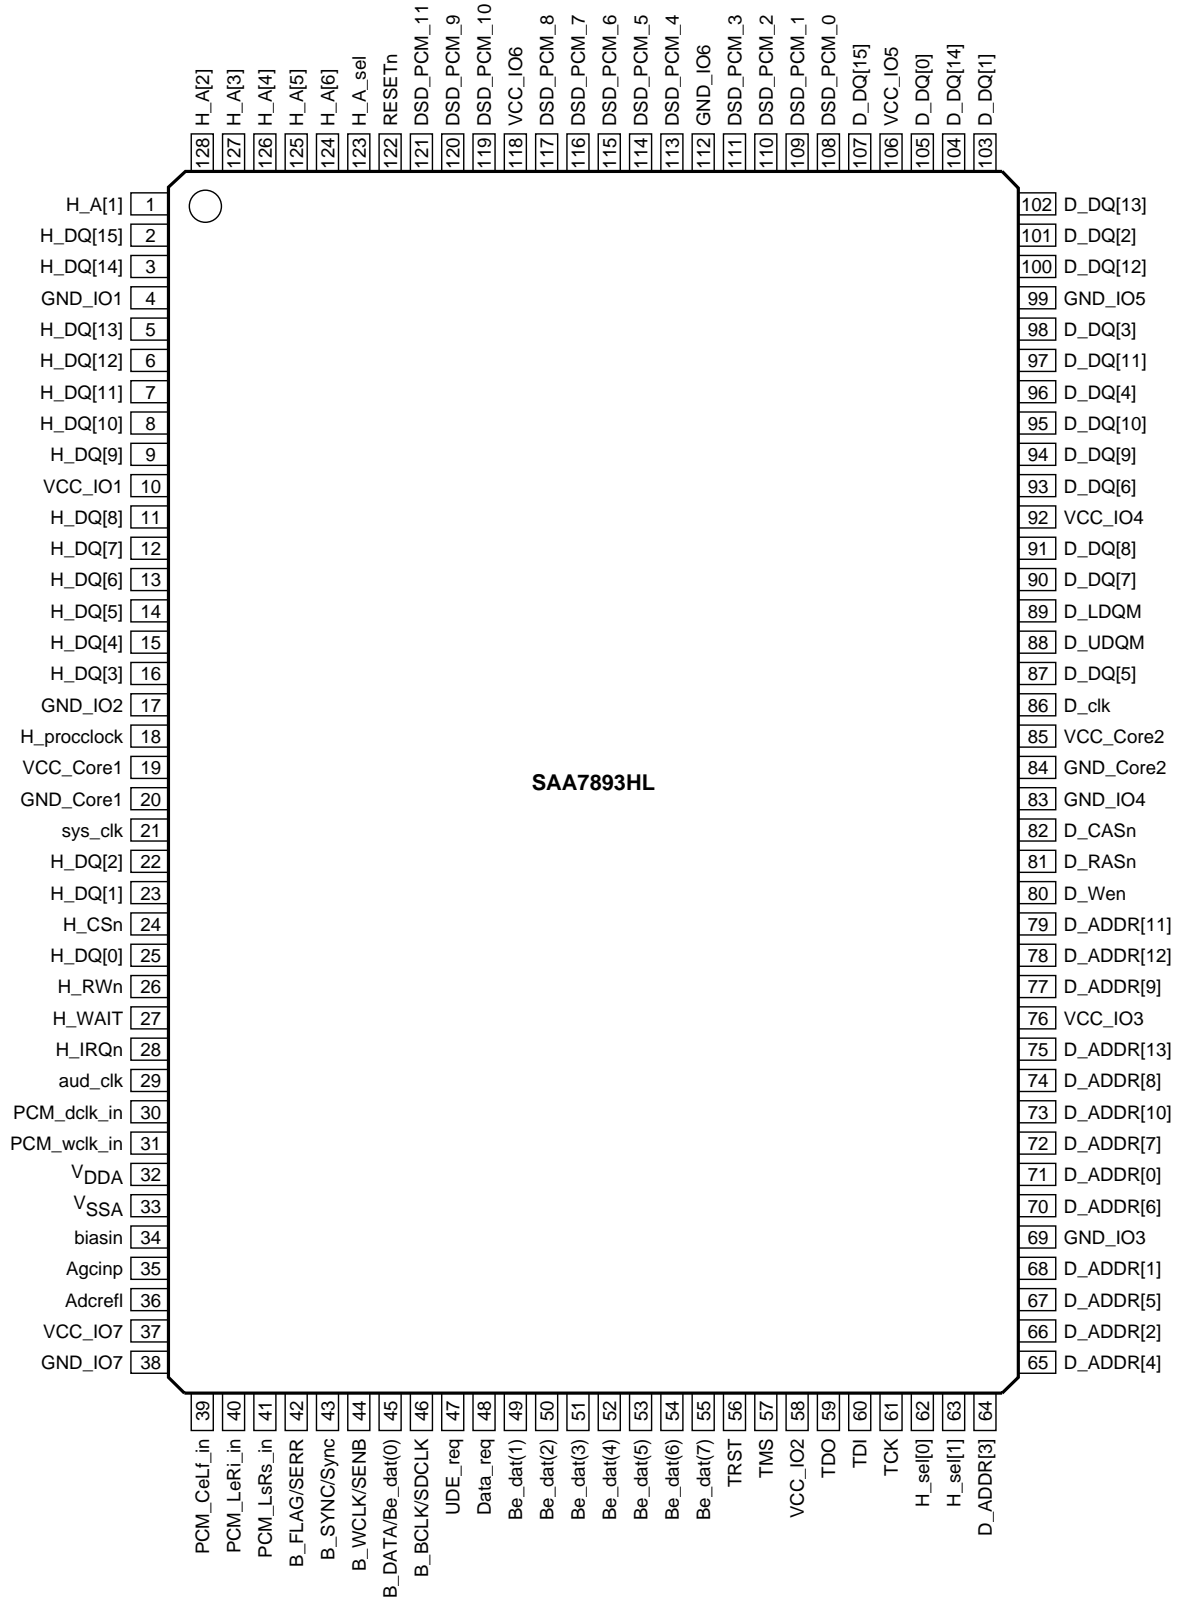

## ● Pin Function

Symbol	Pin	Type <sup>[1]</sup>	Description
H_A[1]	1	IN	address bus
H_DQ[15]	2	I/O10	data bus
H_DQ[14]	3	I/O10	data bus
GND_IO1	4	GND_IO	GND I/O pads
H_DQ[13]	5	I/O10	data bus
H_DQ[12]	6	I/O10	data bus
H_DQ[11]	7	I/O10	data bus
H_DQ[10]	8	I/O10	data bus
H_DQ[9]	9	I/O10	data bus
VCC_IO1	10	VCC_IO	V <sub>CC</sub> I/O pads
H_DQ[8]	11	I/O10	data bus
H_DQ[7]	12	I/O10	data bus
H_DQ[6]	13	I/O10	data bus
H_DQ[5]	14	I/O10	data bus
H_DQ[4]	15	I/O10	data bus
H_DQ[3]	16	I/O10	data bus
GND_IO2	17	GND_IO	GND I/O pads
H_procclock	18	IN	host processor EMI interface clock
VCC_Core1	19	VCC_core	core supply voltage
GND_Core1	20	GND_core	core ground
sys_clk	21	IN	system clock
H_DQ[2]	22	I/O10	data bus
H_DQ[1]	23	I/O10	data bus
H_CS <sub>n</sub>	24	IN	host chip select; active LOW
H_DQ[0]	25	I/O10	data bus
H_RW <sub>n</sub>	26	IN	read = 1; write = 0
H_WAIT	27	O10	wait signal
H_IRQ <sub>n</sub>	28	O10	interrupt request; active LOW
aud_clk	29	IN	DSD audio clock
PCM_dclk_in	30	IN	PCM data clock
PCM_wclk_in	31	IN	PCM word clock
V <sub>D</sub> DA	32	VDDCO	V <sub>DD</sub> of ADC
V <sub>SS</sub> A	33	VSSCO	V <sub>SS</sub> of AGC and ADC; connected to substrate
biasin	34	APIO	bias current input
Agcinp	35	APIO	AGC positive input signal; HF in
Adcrefl	36	APIO	ADC decoupling
VCC_IO7	37	VCC_IO	V <sub>CC</sub> I/O pads
GND_IO7	38	GND_IO	GND I/O pads
PCM_CeLf_in	39	IN	PCM data center or LFE

Symbol	Pin	Type <sup>[1]</sup>	Description
PCM_LeRi_in	40	IN	PCM data left or right
PCM_LsRs_in	41	IN	PCM data left or right surround
B_FLAG/SERR	42	IN	I <sup>2</sup> S-bus flag (EDC flag)
B_SYNC/Sync	43	IN	sector sync or absolute time sync
B_WCLK/SENB	44	IN	I <sup>2</sup> S-bus word clock or UDE data sense from host
B_DATA/Be_dat(0)	45	IN	I <sup>2</sup> S-bus data or LSB data of parallel interface
B_BCLK/SDCLK	46	IN	I <sup>2</sup> S-bus bit clock
UDE_req	47	IN	host request data from front-end; routed via the SAA7893HL
Data_req	48	O10	data request for UDE
Be_dat(1)	49	IN	front-end parallel data interface
Be_dat(2)	50	IN	front-end parallel data interface
Be_dat(3)	51	IN	front-end parallel data interface
Be_dat(4)	52	IN	front-end parallel data interface
Be_dat(5)	53	IN	front-end parallel data interface
Be_dat(6)	54	IN	front-end parallel data interface
Be_dat(7)	55	IN	front-end parallel data interface
TRST	56	IN1	boundary scan reset
TMS	57	IN1	boundary scan mode select
VCC_IO2	58	VCC_IO	V <sub>CC</sub> I/O pads
TDO	59	O10	output
TDI	60	IN1	boundary scan data input
TCK	61	IN	boundary scan clock
H_sel[0]	62	IN	host select signals: SAD16, MAD16 and SAD08
H_sel[1]	63	IN	host select signals: SAD16, MAD16 and SAD08
D_ADDR[3]	64	O10	SDRAM address bus
D_ADDR[4]	65	O10	SDRAM address bus
D_ADDR[2]	66	O10	SDRAM address bus
D_ADDR[5]	67	O10	SDRAM address bus
D_ADDR[1]	68	O10	SDRAM address bus
GND_IO3	69	GND_IO	GND I/O pads
D_ADDR[6]	70	O10	SDRAM address bus
D_ADDR[0]	71	O10	SDRAM address bus
D_ADDR[7]	72	O10	SDRAM address bus
D_ADDR[10]	73	O10	SDRAM address bus
D_ADDR[8]	74	O10	SDRAM address bus
D_ADDR[13]	75	O10	SDRAM address bus
VCC_IO3	76	VCC_IO	V <sub>CC</sub> I/O pads
D_ADDR[9]	77	O10	SDRAM address bus

Symbol	Pin	Type <sup>[1]</sup>	Description
D_ADDR[12]	78	O10	SDRAM address bus
D_ADDR[11]	79	O10	SDRAM address bus
D_Wen	80	O10	read or write
D_RASn	81	O10	row address select; active LOW
D_CASn	82	O10	column address select; active LOW
GND_IO4	83	GND_IO	GND I/O pads
GND_Core2	84	GND_core	core ground
VCC_Core2	85	VCC_core	core supply voltage
D_clk	86	O10	clock signal needed for SDRAM
D_DQ[5]	87	I/O10	data bus
D_UDQM	88	O10	DQ mask enable (upper)
D_LDQM	89	O10	DQ mask enable (lower)
D_DQ[7]	90	I/O10	data bus
D_DQ[8]	91	I/O10	data bus
VCC_IO4	92	VCC_IO	V <sub>CC</sub> I/O pads
D_DQ[6]	93	I/O10	data bus
D_DQ[9]	94	I/O10	data bus
D_DQ[10]	95	I/O10	data bus
D_DQ[4]	96	I/O10	data bus
D_DQ[11]	97	I/O10	data bus
D_DQ[3]	98	I/O10	data bus
GND_IO5	99	GND_IO	GND I/O pads
D_DQ[12]	100	I/O10	data bus
D_DQ[2]	101	I/O10	data bus
D_DQ[13]	102	I/O10	data bus
D_DQ[1]	103	I/O10	data bus
D_DQ[14]	104	I/O10	data bus
D_DQ[0]	105	I/O10	data bus
VCC_IO5	106	VCC_IO	V <sub>CC</sub> I/O pads
D_DQ[15]	107	I/O10	data bus
DSD_PCM_0	108	O10	6-channel data output
DSD_PCM_1	109	O10	6-channel data output
DSD_PCM_2	110	O10	6-channel data output
DSD_PCM_3	111	O10	6-channel data output
GND_IO6	112	GND_IO	GND I/O pads
DSD_PCM_4	113	O10	6-channel data output
DSD_PCM_5	114	O10	6-channel data output
DSD_PCM_6	115	O10	6-channel clock/control
DSD_PCM_7	116	O10	6-channel clock/control
DSD_PCM_8	117	O10	2-channel clock/control
VCC_IO6	118	VCC_IO	V <sub>CC</sub> I/O pads

Symbol	Pin	Type <sup>[1]</sup>	Description
DSD_PCM_10	119	O10	2-channel data output
DSD_PCM_9	120	O10	2-channel clock or control
DSD_PCM_11	121	O10	2-channel data output
RESETn	122	IN	asynchronous reset; active LOW
H_A_sel	123	IN	address select
H_A[6]	124	IN	address bus
H_A[5]	125	IN	address bus
H_A[4]	126	IN	address bus
H_A[3]	127	IN	address bus
H_A[2]	128	IN	address bus

[1] Explanation of input and output ports:

IN: digital input port; all dedicated inputs are TTL tolerant.

IN1: digital input port with internal pull-up resistor.

I/O10: bidirectional port with 10 ns slew rate.

O10: 3-state (in test mode) output port with 10 ns slew rate.

APIO: analog input port.

VDDCO: analog  $V_{DD}$  port (1.8 V).

VSSCO: analog  $V_{SS}$  port.

GND\_IO: ground for I/O pads.

VCC\_IO:  $V_{CC}$  for I/O pads (3.3 V).

GND\_core: ground for core.

VCC\_core:  $V_{CC}$  for core (1.8 V).

## ■ PDC110B (CONTROL ASSY : IC5501)

- System Control Microcomputer

### ● Pin Functions

No.	Mark	Pin Name	I/O	Function
1	PA3/WR#	DVDON/OFF	O	Control power supply for DVD module
2	PA4/RD#	HPDET	I	Detect to insert headphone
3	PA5/RS	NC	O	NC
4	P70 / INT0 / T0LCP / AN8	ACPULSE	I	AC PULSE input (Interruption)
5	P71 / INT1 / T0HCP / AN9	NC	O	NC
6	P72 / INT2 / T0IN	RDSCLK	I (O)	Clock input from RDS decoder (without RDS : Low output)
7	P73 / INT3 / T0IN	REMOCON	I	REMOCON signal input (Interruption)
8	RES#	XRESET	I	μ-com reset input
9	XT1 / AN10	XT1	–	(When this port don't use , please connect VDD)
10	XT2 / AN11	XT2	–	(When this port don't use , please set open)
11	VSS1	VSS1	–	GND
12	CF1	CF1	–	for OSC
13	CF2	CF2	–	for OSC
14	VDD1	VDD1	–	VDD
15	P80 / AN0	SIMUKE	I	Destination distinction input
16	P81 / AN1	MODEL	I	model distinction input
17	P82 / AN2	VDET	I	DVD 3.3V detection input
18	P83 / AN3	KEY1	I	Key1 input
19	P84 / AN4	NC	O	NC
20	P85 / AN5	NC	O	NC
21	P86 / AN6	ST/TUNE	I	STEREO tuned detection input
22	P87 / AN7	XPROTECT	I	Protection and Fan Error detection input
23	P10/SO0	SDATA	O	System bus data output (AMP side output)
24	P11 / SI0 / SB0	MDATA	I	System bus data input (AMP side input)
25	P12 / SCK0	SCLK	I	System bus clock input
26	P13 / SO1	DSPDI	O	Data output to DSP (MOTOROLA) and DIR
27	P14 / SI1 / SB1	DSPDO	I	Data input from DSP (MOTOROLA)
28	P15 / SCK1	DSPCK	O	Clock output to DSP (MOTOROLA) and DIR
29	P16/T1PWML	SYSCS2	O	Chip select 2 for system bus
30	P17/T1PWHM/BUZ	SYSCS1	O	Chip select 1 for system bus
31	PE0	XHPMUTE	O	HP MUTE ON/OFF
32	PE1	XRECMUTE	O	REC OUTPUT MUTE ON/OFF
33	PE2	NC	O	NC
34	PE3	NC	O	NC
35	PE4	NC	O	NC
36	PE5	NC	O	NC
37	PE6	TIMERLED	O	Control TIMER LED
38	PE7	(LEVELSHIFT)	O	VOL 0 to 5 : H (standby)
39	VSS4	VSS4	–	GND
40	VDD4	VDD4	–	VDD

No.	Mark	Pin Name	I/O	Function
41	PF0	ATT10dB	O	Control ATT 10dB
42	PF1	ATT6dB	O	Control ATT 6dB
43	PF2	STEST	I	Set SERVICE TEST MODE for Service
44	PF3	UTEST	I	Set UNIT CHECK for checker
45	PF4	DTSDMIX	O	Control of gain-up for dts down-mix
46	PF5	SWFMIX	O	Control for subwoofer mix
47	PF6	DIMSEL1	O	DIMMER SELECT1
48	PF7	DIMSEL2	O	DIMMER SELECT2
49	SI2P0/SO2	LCDDAT	O	Data for LCD driver
50	SI2P1/SI2/SB2	LCDCS	O	Chip enable for LCD driver
51	SI2P2/SCK2	LCDCLK	O	Clock for LCD driver
52	SI2P3/SCK20	(XLCDRST)	O	Reset for LCD driver (standby)
53	PWM1	NC		NC
54	PWM0	NC		NC
55	VDD2	VDD2	-	VDD
56	VSS2	VSS2	-	GND
57	P00	TXCE	O	Chip enable for tuner LSI
58	P01	NC	O	NC
59	P02	DIGSEL	O	SW for Digital 1/2 select
60	P03	WVOLCE	O	Chip enable for wireless-vol IC
61	P04	TXCLK	O	Clock for tuner LSI
62	P05	TXODATA	O	Data for tuner LSI
63	P06	TXMUTE	O	Control mute of tuner
64	P07	RDSP0W	O	Control power supply of RDS (L : POWER ON)
65	P20/INT4/T1IN	RDSDATA	I (O)	Input RDS data
66	P21/INT4/T1IN	TXIDATA	I	Input data from tuner LSI
67	P22/INT4/T1IN	DVDACK	I	Acknowledgement from DVD MODULE (Interruption)
68	P23/INT4/T1IN	XVMUTE	O	VIDEO MUTE request to DVD MODULE
69	P24/INT5/T1IN	DVDMUTE	I	Request of MUTE from DVD MODULE (Interruption)
70	P25/INT5/T1IN	AUDIOSELA	O	SW for Audio in DVD-A and SA-CD
71	P26/INT5/T1IN	INPUTSELC	O	AUDIO INPUT SELECT C (or TV AUDIO INPUT SELECT)
72	P27/INT5/T1IN	XWMUTE	O	WIRE LESS MUTE request
73	P30	WSELA	O	WIRE LESS OUTPUT SELECT A
74	P31	INPUTSELB	O	AUDIO INPUT SELECT B
75	P32	INPUTSELA	O	AUDIO INPUT SELECT A
76	P33	XTL0	O	Selection X'tal to DIR
77	P34	DIRERR	I	LOCK/UNLOCK from DIR
78	P35	DIRRST	O	Reset to DIR
79	P36	DIRCS	O	Chip select to DIR
80	PB7/D7	DIRDO	I	Data input from DIR

No.	Mark	Pin Name	I/O	Function
81	PB6/D6	DSPMODE	O	MODE selection (ROM/RAM) to DSP (MOTOROLA)
82	PB5/D5	DSPHREQ	I	Error detection from DSP (MOTOROLA)
83	PB4/D4	HPVOLCE	O	Chip enable for HP-vol IC
84	PB3/D3	DSPSS	O	Slave selection to DSP (MOTOROLA)
85	PB2/D2	XDSPRST	O	RESET to DSP (MOTOROLA) MODULE
86	PB1/D1	DECMUTE	I	Detection of 1st DSP boot success from DSP MODULE
87	PB0/D0	XDSPMUTE	O	MUTE request to DSP MODULE
88	VSS3	VSS3	-	GND
89	VDD3	VDD3	-	VDD
90	PC7/A7	DVDA6dBATT	O	ATTENUATION(6dB) operating Bass/Treble at DVD-AUDIO
91	PC6/A6	SYSPOW	O	Control power supply of system
92	PC5/A5	XTVMUTE	O	Control muting of TV (EURO)
93	PC4/A4	XDVDRST	O	RESET to DVD MODULE
94	PC3/A3	XSYSTEMUTE	O	Control mute of system
95	PC2/A2	VOLCE	O	Chip enable for E-vol IC
96	PC1/A1	VOLCLK	O	Clock for E-vol IC / HP-vol IC / Wireless-vol IC
97	PC0/A0	VOLDATA	O	Data for E-vol IC / HP-vol IC / Wireless-vol IC
98	PA0/CS2#	FLASHE/D	-	for FLASH writing
99	PA1/CS1#	FLASHDO	-	for FLASH writing
100	PA2/CS0#	FLASHCLK	-	for FLASH writing

- Port0 (P00-P07) can be selected for input or output by each 4 bits (P00-P03,P04-P07). Set for input when reset. And it can be set C-MOS or Nch-OD by each 1 bit in option.
- Port1 (P10-P17) can be selected for input or output by each 1 bit. Set for input when reset. And it can be set C-MOS or Nch-OD by each 1bit in option.
- Port2 (P20-P27) can be selected for input or output by each 1 bit. Set for input when reset. And it can be set C-MOS or Nch-OD by each 1 bit in option.
- Port3 (P30-P36) can be selected for input or output by each 1 bit. Set for input when reset. And it can be set C-MOS or Nch-OD by each 1 bit in option.
- Port7 (P70-P73) can be selected for input or output by each 1 bit. Set for input when reset.
- Port8 (P80-P87) can be selected for input or output by each 1 bit. Set for input when reset.
- PortA (PA0-PA5) can be selected for input or output by each 1 bit. Set for input when reset. And it can be set C-MOS or Nch-OD by each 1 bit in option.
- PortB (PB0-PB7) can be selected for input or output by each 1 bit. Set for input when reset. And it can be set C-MOS or Nch-OD by each 1 bit in option.
- PortC (PC0-PC7) can be selected for input or output by each 1 bit. Set for input when reset. And it can be set C-MOS or Nch-OD by each 1 bit in option.
- PortE and PortF can be selected for input or output by each 2 bits.




## 7.3 DISC/CONTENT FORMAT

### Disc / content format playback compatibility

#### General disc compatibility

This player was designed and engineered to be compatible with software bearing one or more of the following logos:



- KODAK Picture CD
-  is a trademark of Fuji Photo Film Co. Ltd.

Other formats, including but not limited to the following, are not playable in this player:

#### DVD-RAM / DVD-ROM / CD-ROM\*

- \* Except those that contain MP3 or JPEG. See also "Compressed audio compatibility" and "JPEG file compatibility" below.

DVD-R/RW and CD-R/RW discs (Audio CDs and Video CD/Super VCDs) recorded using a DVD recorder, CD recorder or personal computer may not be playable on this unit. This may be caused by a number of possibili-

ties, including but not limited to: the type of disc used; the type of recording; damage, dirt or condensation on either the disc or the player's pick-up lens. See below for notes about particular software and formats.

#### CD-R/RW compatibility

- This unit will play CD-R and CD-RW discs recorded in CD Audio or Video CD/Super VCD format, or as a CD-ROM containing MP3 or JPEG files. However, any other content may cause the disc not to play, or create noise/distortion in the output.
- This unit cannot record CD-R or CD-RW discs.
- Unfinalized CD-R/RW discs recorded as CD Audio can be played, but the full Table of Contents (playing time, etc.) will not be displayed.

#### DVD-R/RW compatibility

- This unit will play DVD-R/RW discs recorded using the DVD-Video format that have been finalized using a DVD-recorder.
- This unit will play DVD-RW discs recorded using the Video Recording (VR) format.
- **DVD-RW** shows in the display when a VR format DVD-RW disc is loading.
- When playing a VR format DVD-RW discs that was edited on a DVD recorder, the screen may go momentarily black at edited points and/or you may see scenes from immediately before the edited point.
- This unit cannot record DVD-R/RW discs.
- Unfinalized DVD-R/RW discs cannot be played in this player.

## PC-created disc compatibility

- If you record a disc using a personal computer, even if it is recorded in a "compatible format" as listed above, there will be cases in which the disc may not be playable in this machine due to the setting of the application software used to create the disc. In these particular instances, check with the software publisher for more detailed information.
- Check the DVD-R/RW or CD-R/RW software disc boxes for additional compatibility information.

## Compressed audio compatibility

- This unit will play CD-ROM, CD-R, and CD-RW discs containing files saved in the MPEG-1 Audio Layer 3 (MP3) format with a sampling rate of 32, 44.1 or 48kHz. Incompatible files will not play and the message **Can't play this format** will be displayed (**NO PLAY** in the front panel display).
- Fixed bit-rate MP3 files are recommended. Variable bit-rate (VBR) MP3 files are playable, but playing time may not be shown correctly..
- The CD-ROM used to compile your MP3 files must be ISO 9660 Level 1 or 2 compliant. CD physical format: Mode1, Mode2 XA Form1. Romeo and Joliet file systems are both compatible with this player.
- Use CD-R or CD-RW media for recording your files. The disc must be finalized (i.e. the session must be closed) in order to play in this unit. This player is not compatible with multi-session discs. Only the first session of a multi-session disc will be recognized.
- This player only plays tracks that are named with the file extension .mp3 or .MP3.

- When naming MP3 files, add the corresponding file name extension (.mp3). Files are played according to the file extension. To prevent noise and malfunctions, do not use these extensions for other kinds of files.
- This player can recognize up to 999 files (MP3/JPEG) and up to 499 folders. If a disc exceeds these limits, only files and folders up to these limits will be playable. Files and folders are read/displayed in alphabetical order. Note that if the file structure is very complex, you may not be able to read/play all files on the disc.
- Folder and track names (excluding the file extension) are displayed.
- There are many different recording bit-rates available to encode MP3 files. This unit was designed to be compatible with all of them. Audio encoded at 128Kbps should sound close to regular CD Audio quality. This player will play lower bit-rate files, but please note that the sound quality becomes noticeably worse at lower bit-rates.

## JPEG file compatibility

- Baseline JPEG and EXIF 2.1\* still image files up to 8 mega-pixels are supported (maximum vertical and horizontal resolution is 5120 pixels). (\**File format used by digital still cameras*)
- The CD-ROM used to compile your JPEG files must be ISO 9660 Level 1 or 2 compliant. CD physical format: Mode1, Mode2 XA Form1. Romeo and Joliet file systems are both compatible with this player.
- This player only displays files that are named with the file extension .jpg or .JPG.

## 7.4 CLEANING



Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools:

Position to be cleaned	Cleaning tools
Pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

Position to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

A

B

C

D


E

F

# 8. PANEL FACILITIES

## 8.1 PANEL FACILITIES

### Front panel

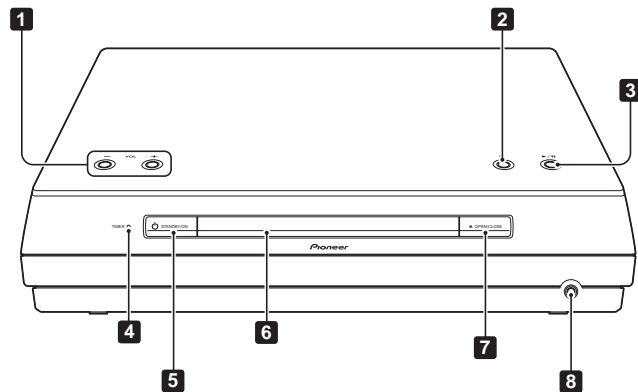

**1 VOLUME buttons**

Use to adjust the volume.

**2 ■**

Press to stop playback.

**3 ►/||**

Press to switch to the **DVD/CD** function. Also press to start/pause/resume playback.

**4 Timer indicator**

Lights when the wake-up timer is set.

**5 ⏻ STANDBY/ON**

Press to switch the system on or into standby.

**6 Disc tray**


**7 ▲ OPEN/CLOSE**

Press to open/close the disc tray.

**8 PHONES jack**

Headphone jack.

### Display unit

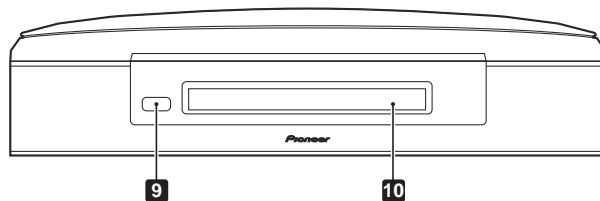


**9 Remote sensor**

**10 Display**

See Display on next page for detailed information.

## Display

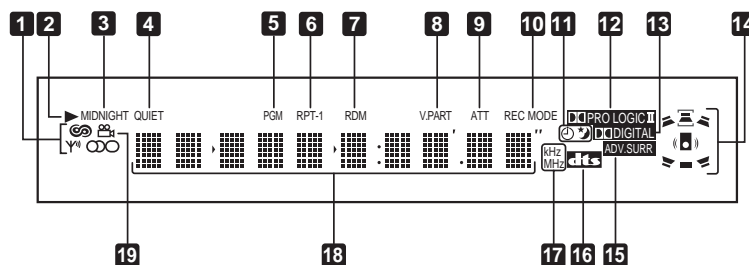

### 1 Tuner indicators



Lights when in one of the RDS display or search modes.



Lights when a broadcast is being received.



Lights when a stereo FM broadcast is being received in auto stereo mode.



Lights when FM mono reception is selected.



Lights when a disc is playing.

### 3 MIDNIGHT

Lights when the Midnight mode is selected.

### 4 QUIET

Lights when the Quiet mode is selected.

### 5 PGM

Lights when a program list has been programmed.

### 6 RPT and RPT-1

RPT lights during repeat play. RPT-1 lights during repeat one-track play.

### 7 RDM

Lights during random play.

### 8 V.PART

Light when playing a video part of a DVD disc.

### 9 ATT

Lights when the input attenuator is active for the currently selected analog input.

### 10 REC MODE

Lights when Rec Mode is active.

### 11 Timer indicators



Lights when the wake-up timer is set.



Lights when the sleep timer is active.

### 12 PRO LOGIC II

Lights during Dolby Pro Logic decoding.

### 13 DIGITAL

Lights during playback of a Dolby Digital source.

#### 14 Speaker indicators

These show which speakers are being used to output the current source. The illustrations below show some example displays.



5.1 channel surround sound



Stereo (2.1 channel) sound



3.1 channel sound with Dialogue enhancement on the center channel



5.1 channel surround sound with Virtual Surround Back mode active

#### 15 ADV.SURR.

Lights when one of the Advanced Surround listening modes is selected.

#### 16 DTS

Lights during playback of a DTS source.

#### 17 kHz / MHz


Indicates the unit of the frequency shown in the character display (**kHz** for AM, **MHz** for FM).

#### 18 Character display

#### 19

Lights during multi-angle scenes on a DVD disc.

## Remote control

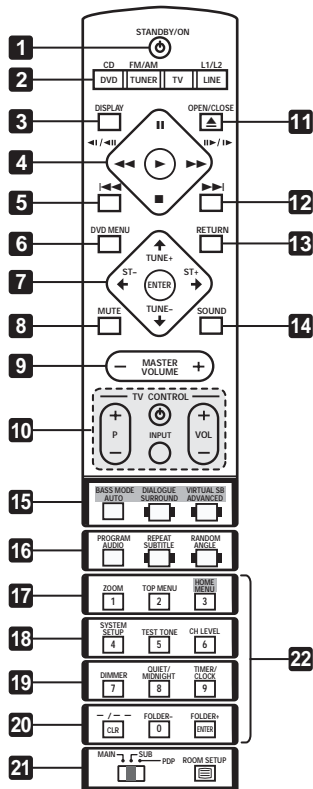

### Important

- Functions printed in green on the remote control are accessed by switching the **MAIN/SUB/PDP** switch to **SUB**.

#### 1 STANDBY/ON

Press to switch the system on or into standby.

#### 2 **Function select buttons**

Press to select the source you want to listen to (**DVD (CD), TUNER, TV, LINE**)

#### 3 **DISPLAY**

Press to display/change disc information shown on-screen.

#### 4 **Disc playback controls**

▶ Press to start or resume playback.

#### ◀◀ and ◀|◀◀

Use for reverse slow motion playback, frame reverse and reverse scanning.

#### ▶▶ and ◀|▶▶

Use for forward slow motion playback, frame advance and forward scanning.

#### ||

Press to pause playback; press again to restart.

#### ■

Press to stop playback.

#### 5 I◀◀

Press to jump to the beginning of the current chapter/track, then to previous chapters/tracks.

#### 6 **DVD MENU**

Press to display a DVD disc menu, or the Disc Navigator if a VR format DVD-RW, CD, Video CD, MP3 or JPEG disc is loaded.

#### 7 **Cursor buttons, ENTER and tuning buttons**

##### **Cursor buttons**

Use the cursor buttons (↑ / ↓ / ← / →) to navigate on-screen displays and menus.

##### **ENTER**

Press to select an option or execute a command.

##### **TUNE +/-**

Use to tune the radio.

##### **ST +/-**

Use to select station presets when listening to the radio.

**8 MUTE**

Press to mute all sound from the speakers and headphones (press again to cancel).

**9 MASTER VOLUME**

Use to adjust the volume.

**10 TV CONTROL**

Press to switch the TV on or into standby.

**INPUT**

Press to switch the TV input.

**P +/-**

Use to select channels on the TV.

**VOL +/-**

Use to adjust the volume on the TV.

**11 ▲ OPEN/CLOSE**

Press to open/close the disc tray.

**12 ►►**

Press to jump to the next chapter/track.

**13 RETURN**

Press to return to a previous menu screen.

**14 SOUND**

Press to access the sound menu, from which you can adjust the DSP effect level, bass and treble, etc.

**15 Surround sound mode/sound enhancement buttons****(In MAIN)****AUTO**

Press to select the default decoding for the current source.

**SURROUND**

Use to select a Surround mode.

**ADVANCED**

Use to select an Advanced Surround.

**(In SUB)****BASS MODE**

Use to select a Bass Mode.

**DIALOGUE**

Use to select a Dialogue mode.

**VIRTUAL SB**

Press to switch the Virtual Surround Back speaker effect on/off.

**16 DVD/CD buttons****(In MAIN)****AUDIO**

Press to select an audio channel or language.

**SUBTITLE**

Press to display/change the DVD subtitle display.

**ANGLE**

Press to change camera angle during DVD multi-angle scene playback.

**(In SUB)****PROGRAM**

Use to program/play a program list.

**REPEAT**

Use to select a repeat play mode.

**RANDOM**

Use to select a random play mode.

**17 (In SUB)****ZOOM**

Press to change the screen zoom level.

**TOP MENU**

Use to display the top menu of a DVD disc in the play position (this may be the same as pressing **DVD MENU**).



**HOME MENU**

Press to display (or exit) the on-screen menu for Initial Settings, Play Mode functions, etc.

**18 (In SUB)****SYSTEM SETUP**

Use to make various system and surround sound settings.

**TEST TONE**

Use to output the test tone (for speaker setup).

**CH LEVEL**

Use to adjust the speaker level.

**19 (In SUB)****DIMMER**

Press to dim or brighten the display.

**QUIET/MIDNIGHT**

Use to select the Quiet and Midnight modes.

**TIMER/CLOCK**

Press to display the clock and to access the timer menu.

**20 (In MAIN)****CLR**

Press to clear an entry.

**ENTER**

Selects menu options, etc. (works exactly the same as the **ENTER** button in 7 above).

**(In SUB)****FOLDER –**

Press to jump to previous folders.

**FOLDER +**

Press to jump to the next folder.

**21 MAIN / SUB / PDP**

Change from **MAIN** to **SUB** to access functions printed in green. Switch to **PDP** to be able to use teletext with Pioneer plasma displays (see Teletext on/off below)

**(In MAIN)****ROOM SETUP**

Press to start Room Setup.

**(In PDP)****☰ (Teletext on/off)**

Press to display/hide the teletext screen. (Use the number buttons and the blue, green, yellow and red buttons to navigate teletext screens when using with a Pioneer plasma display.)

**22 (In MAIN)****Number buttons**

Use the number buttons for selecting titles/chapters/tracks from a disc directly.

A

B

C

D

E

F