

CDP-C265 / C365

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
Australian Model
CDP-C265/C365
E Model
CDP-C365



Photo : CDP-C265

Model Name Using Similer Mechanism	CDP-C235/C335
CD Mechanism Type	CDM27A1-5BD13
Base Unit Type	BU-5BD13
Optical Pick-up Type	KSS-240A

SPECIFICATIONS

Compact Disc Player

System	Compact disc digital audio system
Laser	Semiconductor laser
Wavelength	780-790 nm
Frequency response	2 Hz-20 kHz (± 0.5 dB)
Signal to noise ratio	More than 102 dB
Dynamic range	More than 98 dB
Harmonic distortion	Less than 0.0045%
Channel separation	More than 100 dB

Output

LINE OUT (phono jacks)	Output level 2 V (at 50 kilohms) Load impedance over 10 kilohms
---------------------------	--

General

Power requirements	Model for US and Canadian 120V AC, 60Hz Model for AEP, German, UK, Singapore, Malaysia 220 — 230V AC, 50/60Hz Model for Australian 240V AC, 50/60Hz Model for E 110—120V, 220—240V AC, 50/60Hz
Power consumption	14W
Dimensions (w/h/d)	Approx. 430 x 125 x 385 mm (17 x 5 x 15 ¹ / ₄ inches) Including projecting parts and controls

Mass	Approx. 5.6 kg, net (12 lbs 6oz)
Remote Commander	RM-D335 (CDP-C365 only)
Remote control system	Infrared control
Power requirements	3 V DC with two size AA batteries (IEC designation R6)
Dimensions	45 x 185 x 20 mm (w/h/d) (1 13/16 x 7 3/8 x 13/16 inches)
Mass	100 g (3.5 oz) including batteries

Supplied accessories



Audio signal connecting cord
(phono plug x 2 — phono plug x 2) (1)
Remote commander (1) (CDP-C365 only)
Sony SUM-3 (NS) batteries (2) (CDP-C365 only)
AC plug adaptor (1) (CDP-C365 E model only)

Design and specifications are subject to change without notice.



COMPACT DISC PLAYER
SONY[®]

The following caution label is located inside of the unit.

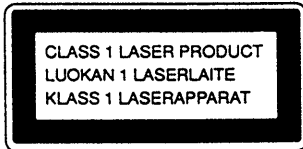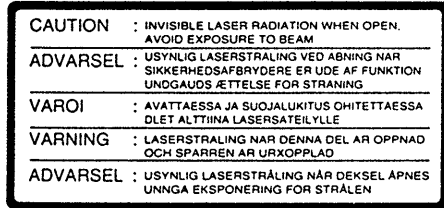

This Compact Disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

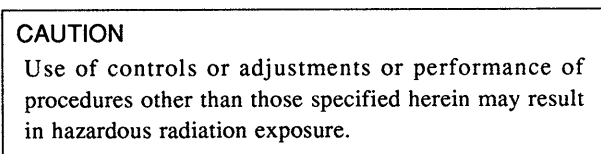


TABLE OF CONTENTS


<u>Section</u>	<u>Title</u>	<u>Page</u>
SECTION 1.	GENERAL	5
SECTION 2.	DISASSEMBLY	
2-1.	Case, Bottom Plate and Front Panel	6
2-2.	Back Panel and Disc Table	6
2-3.	Optical Pick-up Block Assembly	7
2-4.	Bracket (Gear) Assembly	7
SECTION 3.	ELECTRICAL BLOCK CHECKING	8
SECTION 4.	DIAGRAMS	
4-1.	Block Diagram	10
4-2.	Circuit Boards Location	12
4-3.	Semiconductor Lead Layouts	12
4-4.	Printed Wiring Board	13
4-5.	Schematic Diagram	17
4-6.	IC Block Diagrams	21
4-7.	IC Pin Functions	
	• IC101 Focus/Tracking Sled Servo, EFM Comparator (CXD2515Q)	23
	• IC103 Digital Filter, D/A Converter (CXD2565AM-T6)	25
	• IC401 System Control (CXP82316-050Q)	26
SECTION 5.	EXPLODED VIEWS	
5-1.	Front Panel and Case Sections	27
5-2.	Backpanel and Disk Table Section	28
5-3.	Chassis Section	29
5-4.	Base Unit Section (BU-5BD13)	30
SECTION 6.	ELECTRICAL PARTS LIST	31

SAFETY-RELATED COMPONENT WARNING !!
COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!
LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE Δ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

MODEL IDENTIFICATION

— BACK PANEL —

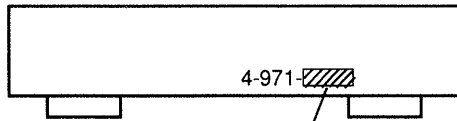

CDP-C265	
US Model	: 080-5□ (U)
(made in malaysia)	
US Model	: 532-4□ (U)
(made in china)	
Canadian Model	: 532-1□ (CA)
AEP Model	: 080-6□ (CED)
UK Model	: 080-7□ (CEK)
German Model	: 532-3□ (CEE)
Australian Model	: 080-8□ (AU)
CDP-C365	
US Model	: 080-0□ (U)
Canadian Model	: 532-0□ (CA)
AEP, Singapore,	
Malaysia Model	: 080-1□ (CED)
UK Model	: 080-2□ (CEK)
German Model	: 532-2□ (CEE)
E Model	: 080-4□ (E2/E3)
Australian Model	: 080-3□ (AU)

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

SAFETY CHECK-OUT (US model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)



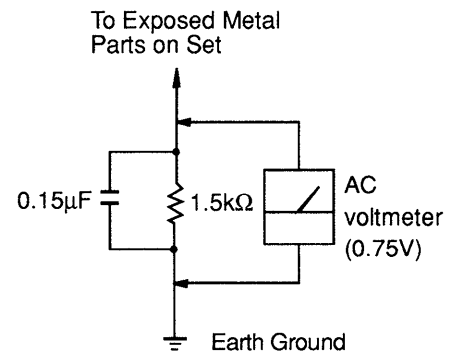


Fig. A. Using an AC voltmeter to check AC leakage.

HOW TO OPEN THE DISC TRAY WHEN POWER SWITCH TURNS OFF

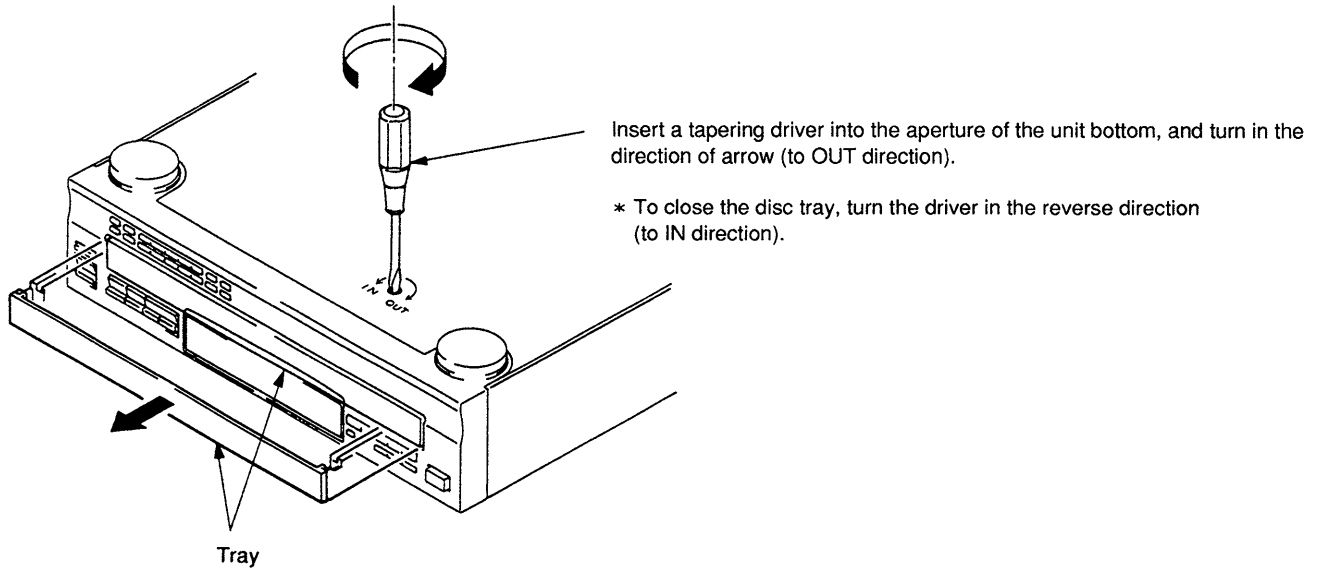


NOTE FOR MAIN GEAR INSTALLATION

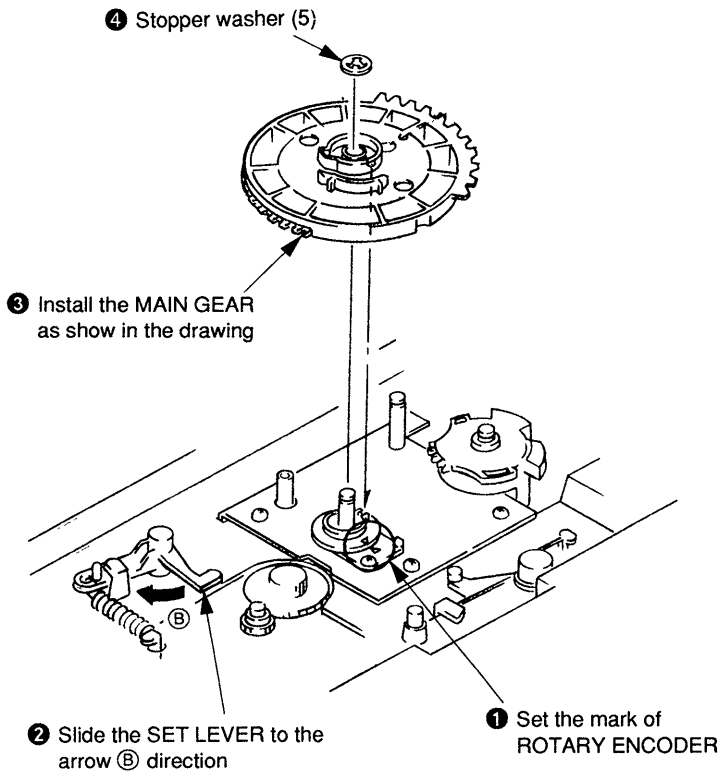

SECTION 1 GENERAL


Identifying the Parts

Front Panel

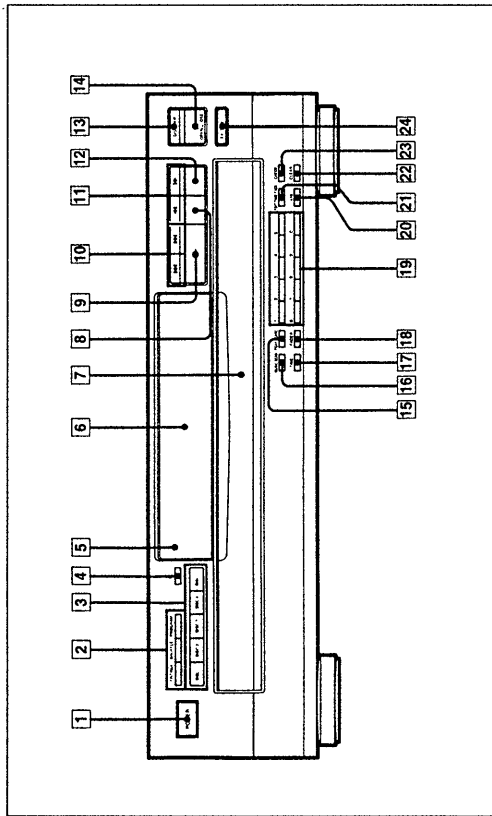

- 1 POWER switch
- 2 PLAY MODE buttons
CONTINUE button
SHUFFLE button
PROGRAM button
- 3 DISC 1-5 buttons
- 4 DISC CHECK button
- 5 Remote sensor
(CDP-C365 only)
- 6 Display window
- 7 Disc tray
- 8 || (pause) button
- 9 ▶ (play) button
- 10 ◀◀◀▶▶▶ (AMS*) buttons
buttons
- 11 ◼ (stop) button
- 12 DISC SKIP button
- 13 ▲ OPEN/CLOSE button
- 14 PEAK SEARCH button
- 15 REPEAT button
- 16 TIME button
- 17 FADER button
- 18 Numeric buttons
- 19 >10 (over 10) button
- 20 EDIT/TIME FADE button
- 21 CLEAR button
- 22 CHECK button
- 23 EX-CHANGE button

Remote Commander (CDP-C365 only)

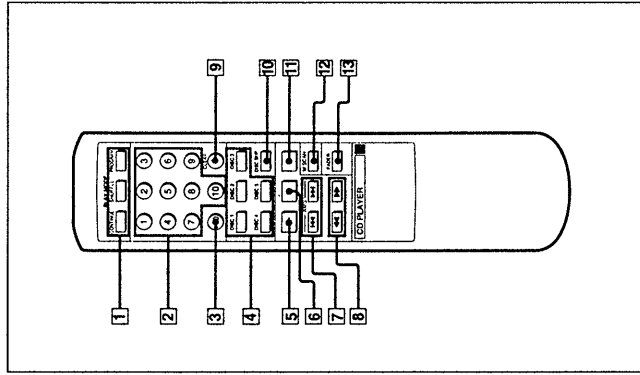


- 1 PLAY MODE buttons
CONTINUE button
SHUFFLE button
PROGRAM button
- 2 Numeric buttons
- 3 >10 (over 10) button
- 4 DISC 1-5 buttons
- 5 ▶ (play) button
- 6 || (pause) button
- 7 ◀◀◀▶▶▶ (AMS) buttons
buttons
- 8 ◼ (stop) button
- 9 CLEAR button
- 10 DISC SKIP button
- 11 ◼ (stop) button
- 12 MUSIC SCAN (M. SCAN)
button
- 13 FADER button


* AMS is the abbreviation for Automatic Music Sensor.

SECTION 2 DISASSEMBLY


2-1. CASE, BOTTOM PLATE AND FRONT PANEL

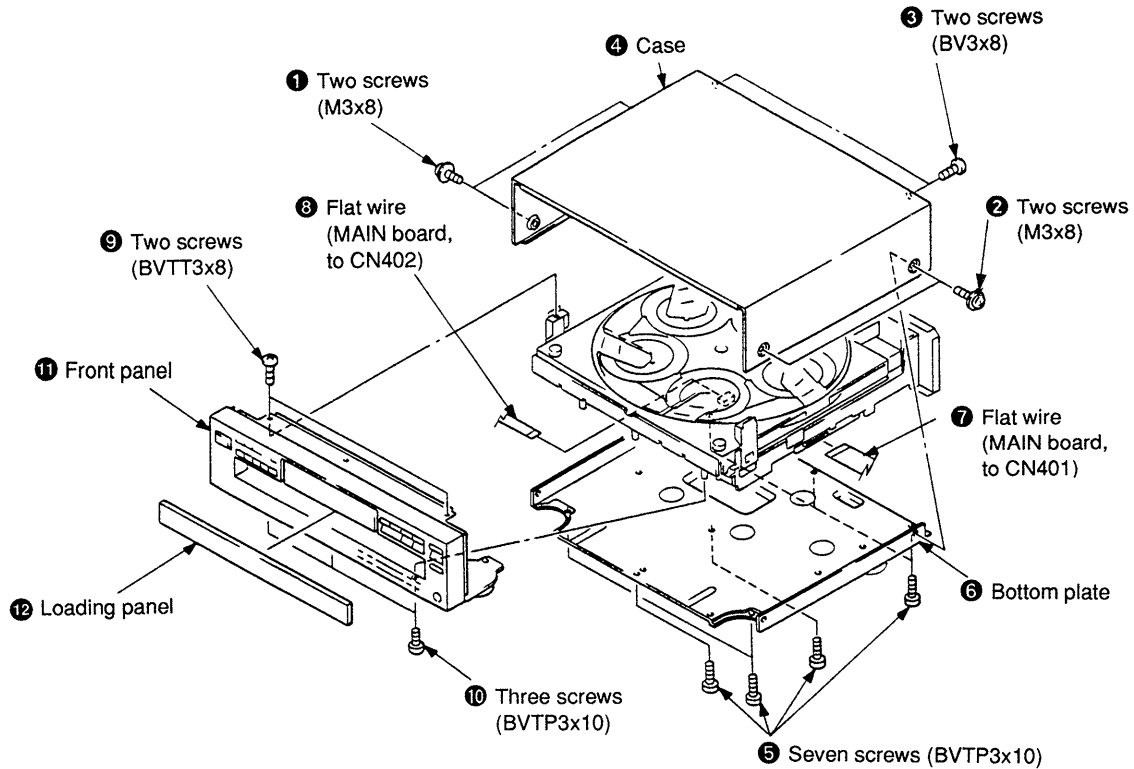


2-2. BACK PANEL AND DISC TABLE

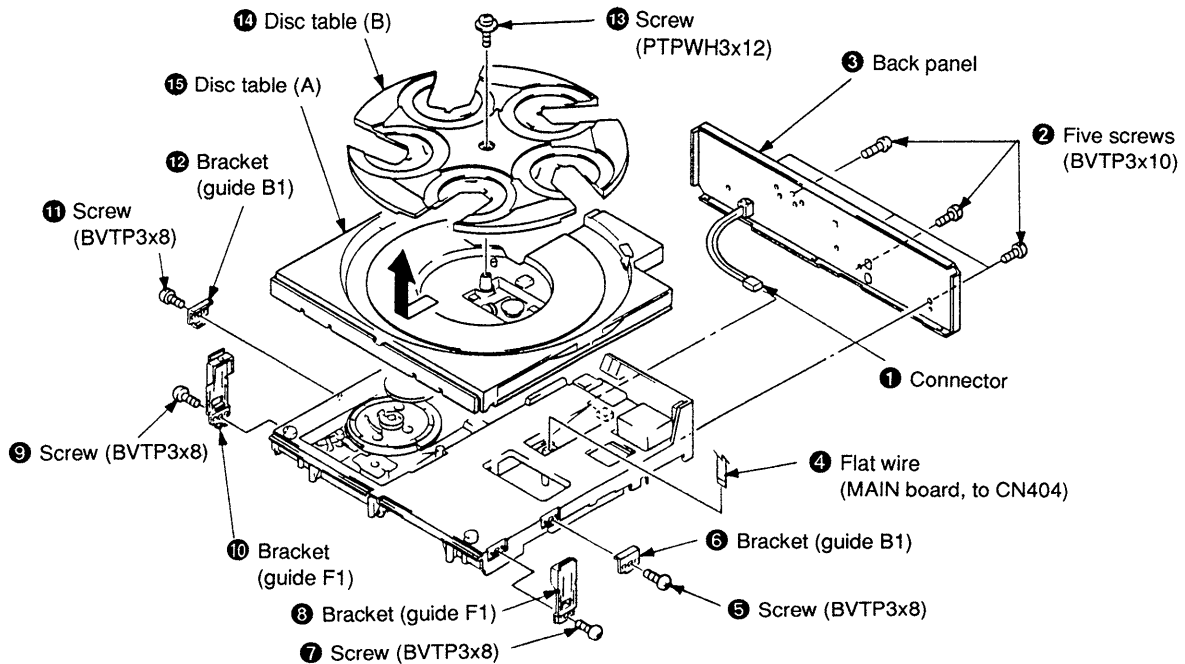

2-3. OPTICAL PICK-UP BLOCK ASSEMBLY

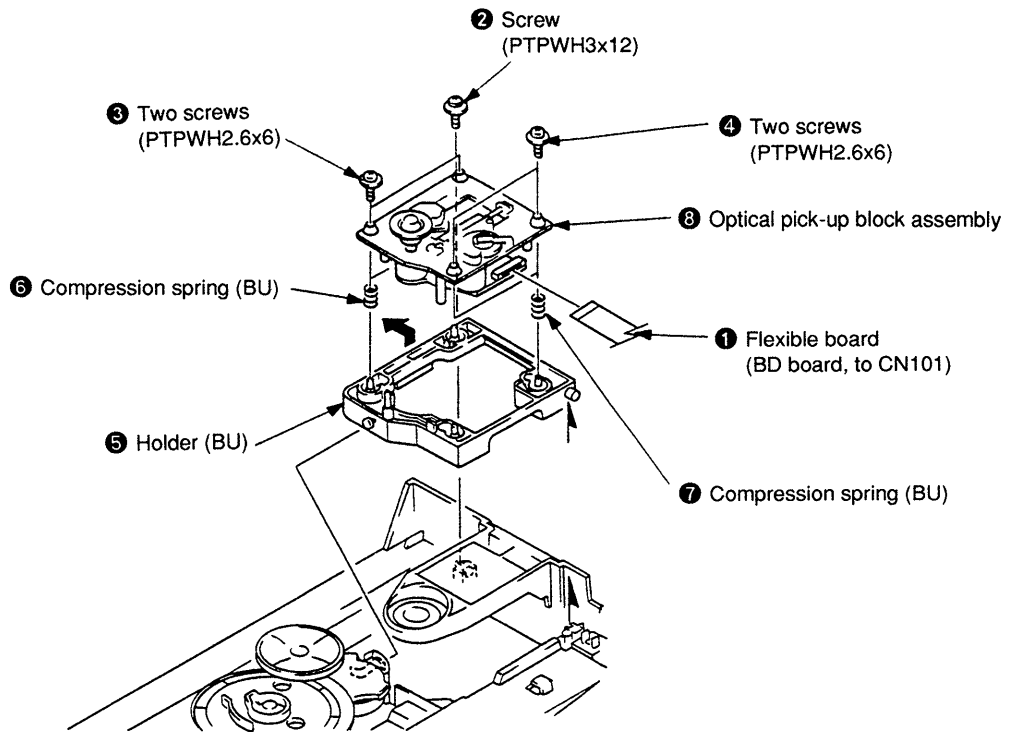

2-4. BRACKET (GEAR) ASSEMBLY

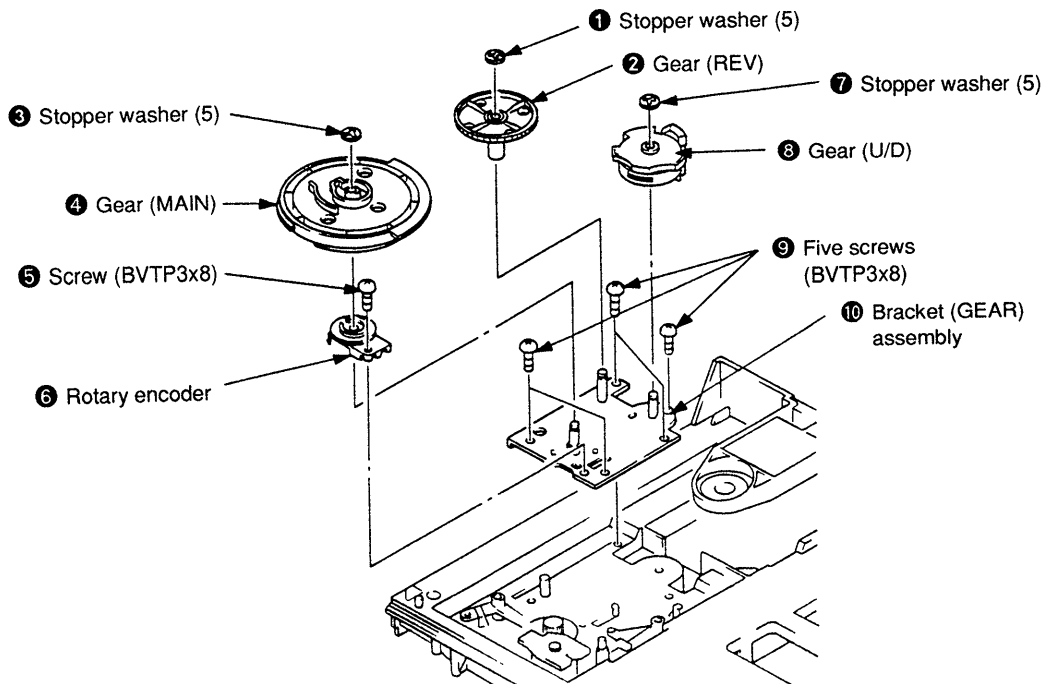

NOTE : As for the installation of the main gear, refer to "Note for MAIN GEAR installation" on page 4.


SECTION 3

ELECTRICAL BLOCK CHECKING

Note :


1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10MΩ impedance.
4. Clean the object lens using an applicator with neutral detergent when the signal level is low than specified value with the following checks.

S Curve Check

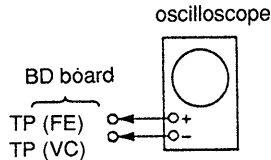


Procedure :

1. Connect oscilloscope to test point TP (FE) on BD board.
2. Connect between test point TP (FEI) and TP (VC) by lead wire.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and turn Power switch on again and actuate the focus search. (actuate the focus search when disc table is moving in and out.)
5. Check if the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3 ± 1 Vp-p.

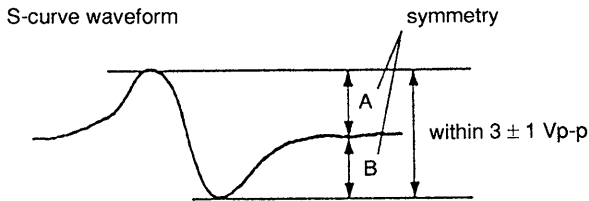

6. After check, remove the lead wire connected in step 2.
- Note :**
- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
 - Set sweep time as long as possible and set the brightness to obtain best waveform.

RF Level Check

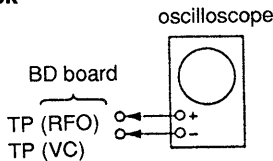

Procedure :


1. Connect oscilloscope to test point TP (RFO) on BD board.
2. Turn Power switch on.

3. Put disc (YEDS-18) in and playback.
4. Confirm that oscilloscope waveform is clear and check if RF signal level is correct or not.


Note :

A clear RF signal waveform means that the shape “◇” can be clearly distinguished at the center of the waveform.

RF signal waveform

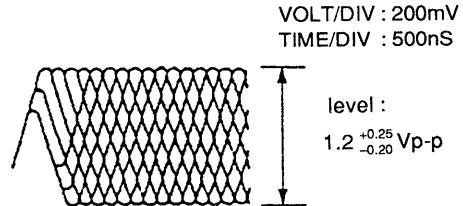


E-F Balance Check

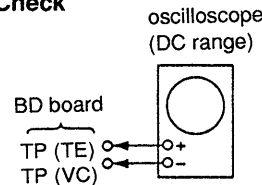

Procedure :

1. Connect test point TP (ADJ) on MAIN board to ground and TP (TEI) to TP (VC) with a lead wire.
2. Connect oscilloscope to test point TP (TE) on BD board.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and playback.
5. Confirm that the oscilloscope waveform is symmetrical on the top and bottom in relation to 0V, and check this level.

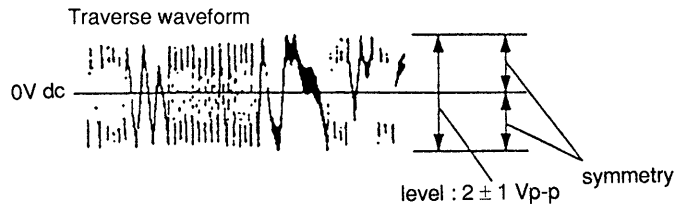


6. Remove the lead wire connected in step 1.

RF PLL Free-run Frequency Check

Procedure :


1. Connect frequency counter to test point (PLCK) with lead wire.

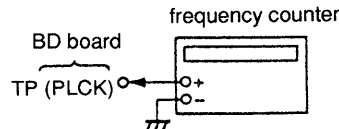


2. Turn Power switch on.
3. Confirm that reading on frequency counter is 4.3218MHz.

Adjustment Location :

[BD BOARD] — Conductor Side —

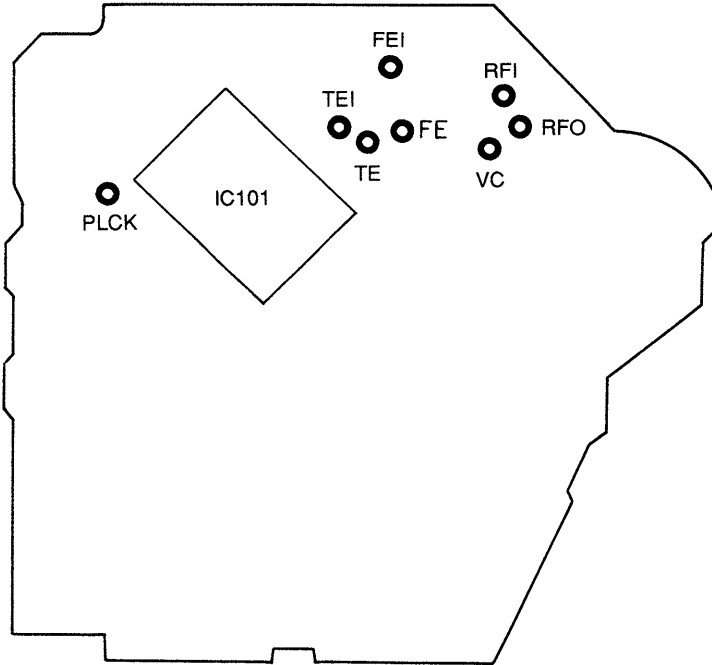


[MAIN BOARD] — Conductor Side —

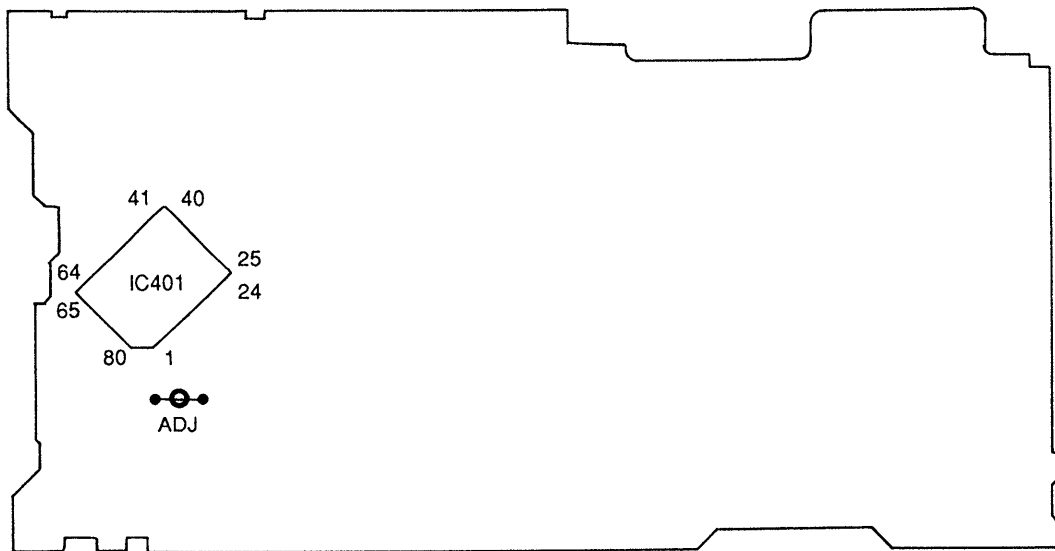

SECTION 4 DIAGRAMS

4-1. BLOCK DIAGRAM

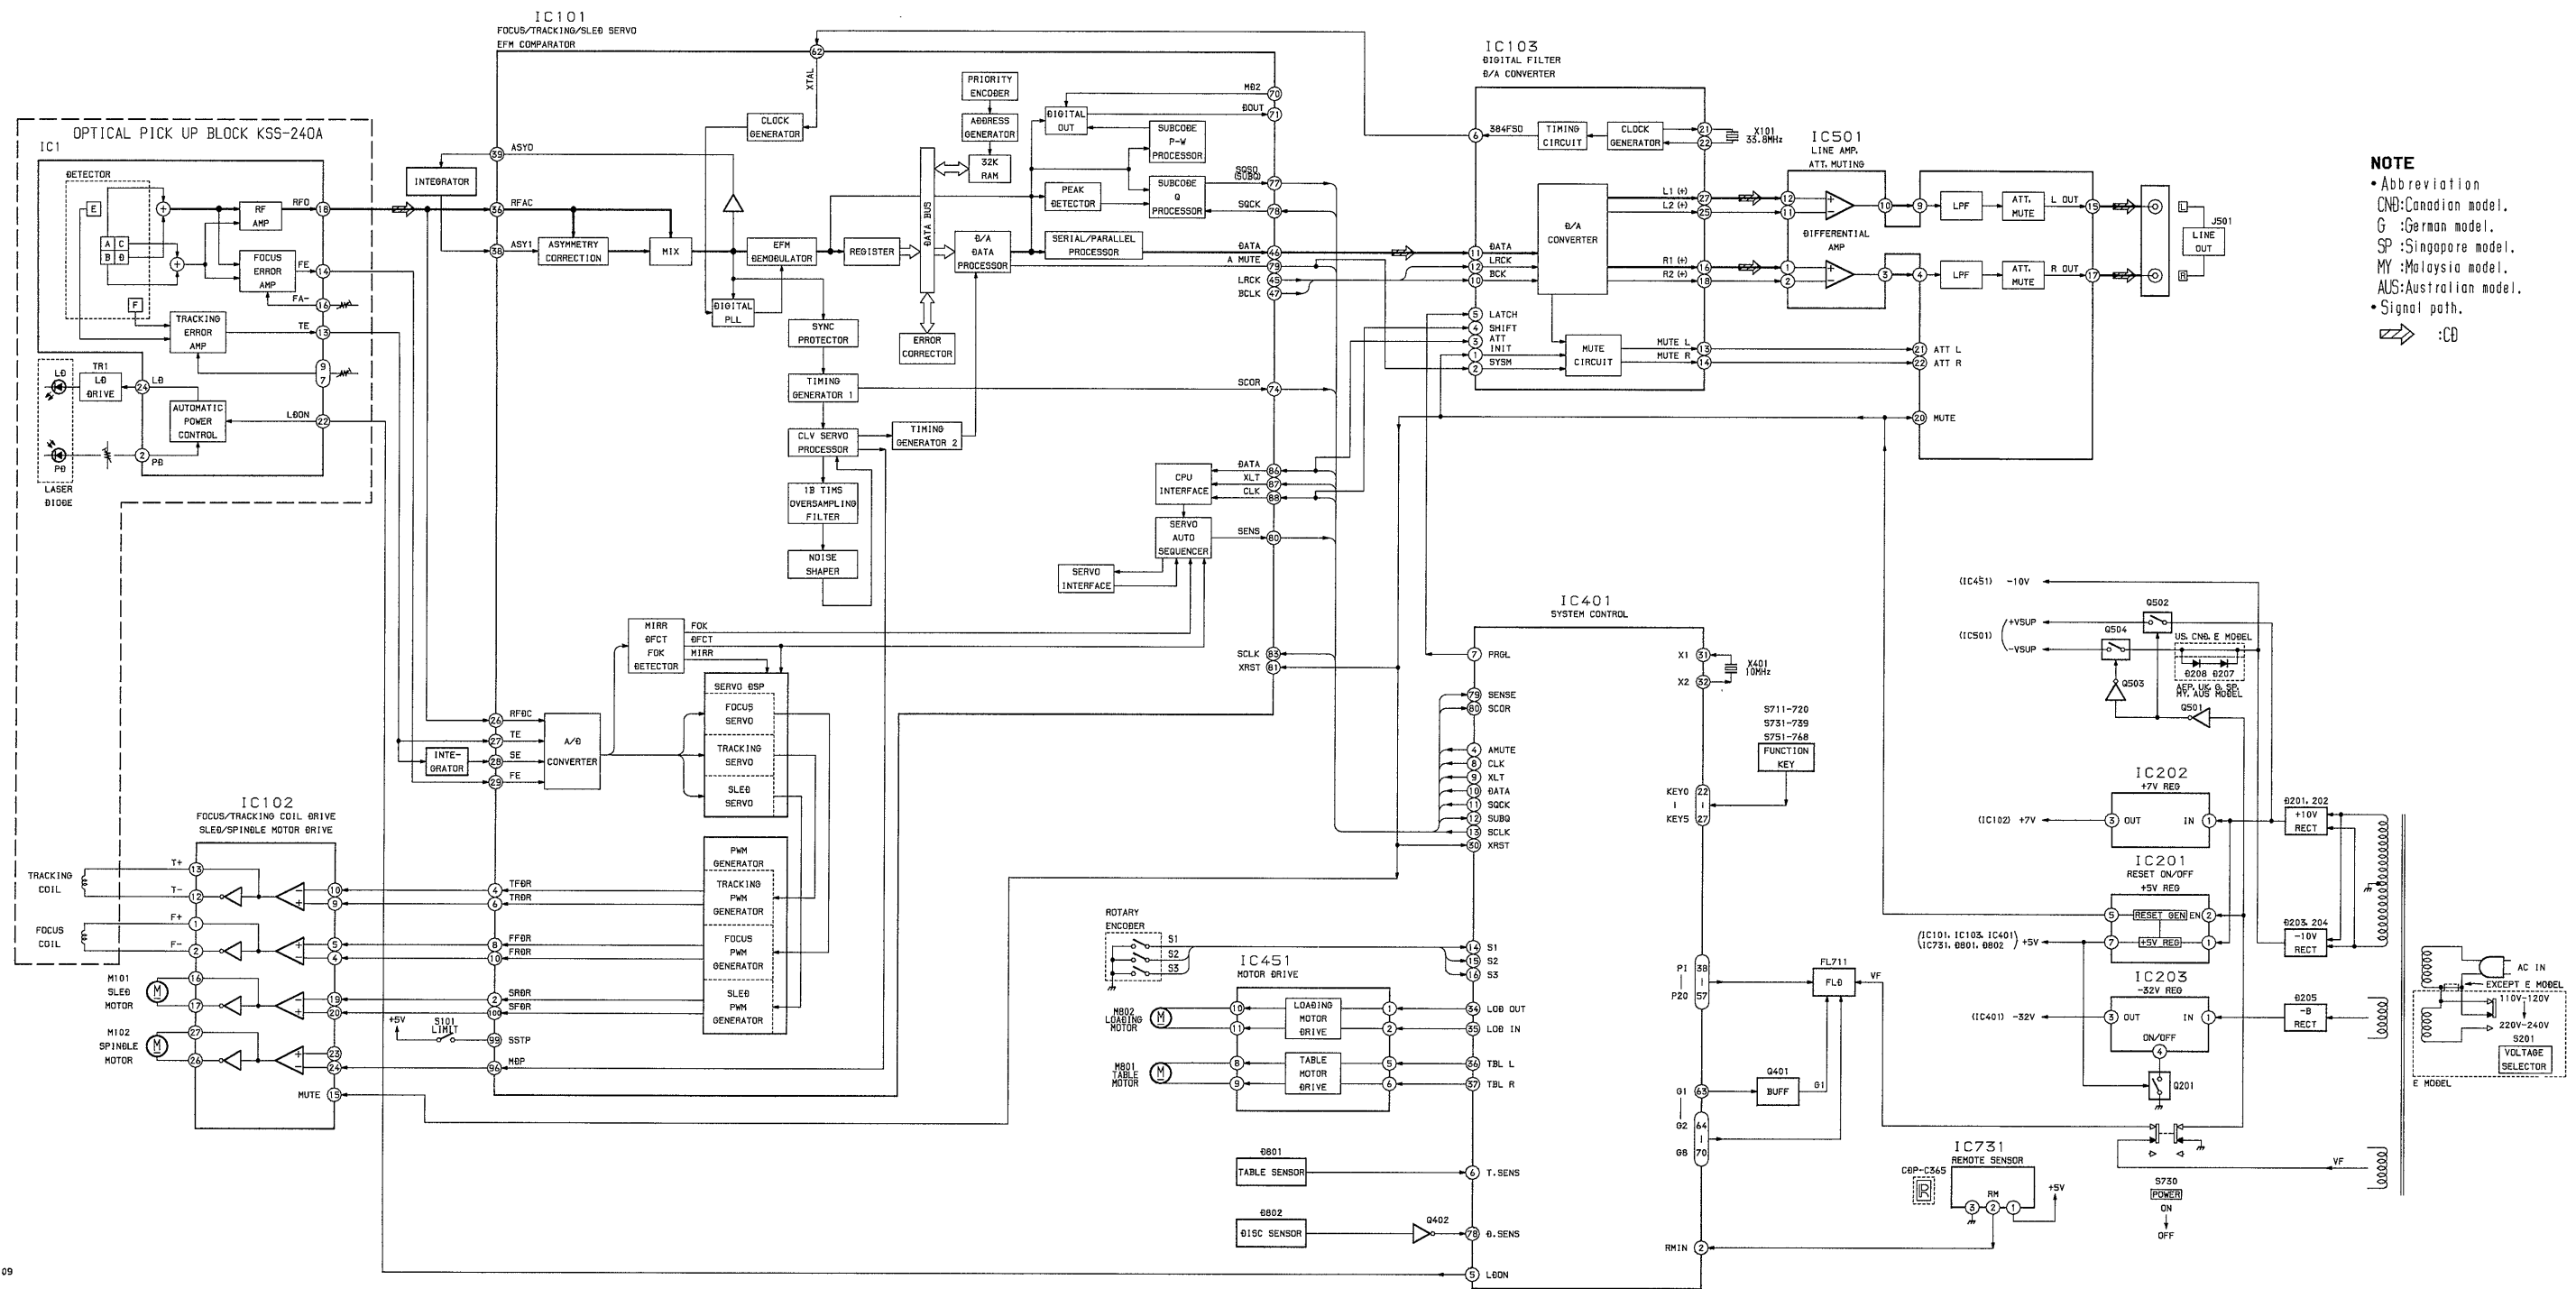


NOTE

- Abbreviation
- CND: Canadian model.
- G : German model.
- SP : Singapore model.
- MY : Malaysia model.
- AUS: Australian model.
- Signal path.


⇒ : CD

4-2. CIRCUIT BOARDS LOCATION

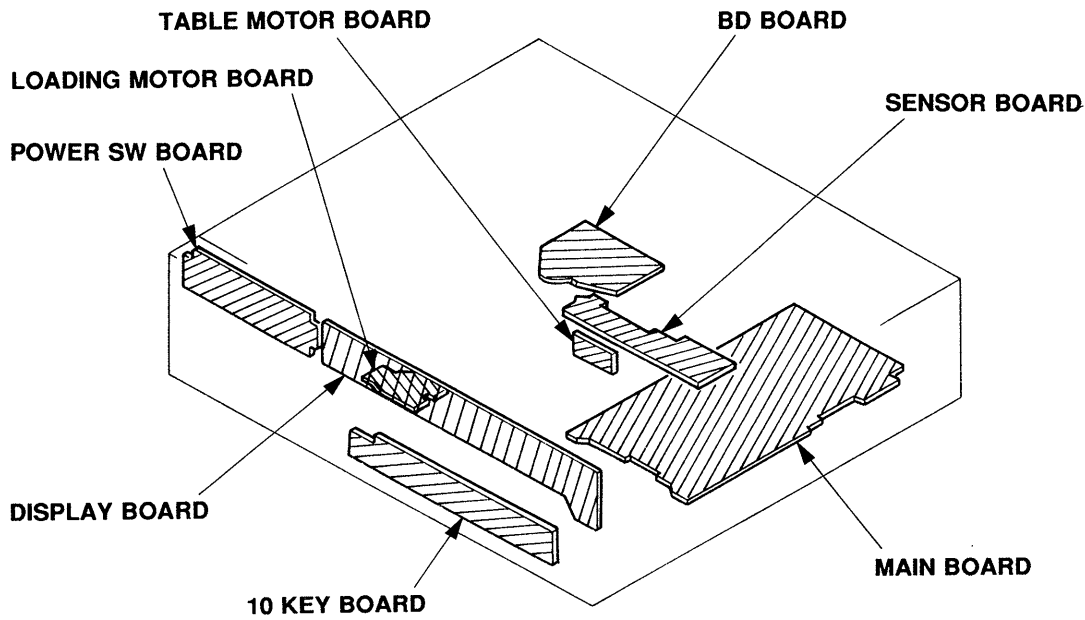


4-3. SEMICONDUCTOR LEAD LAYOUTS


BA6191




CXP82316-050Q

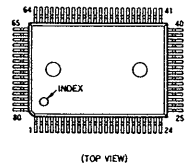


M5293L




UN4111
2SA1175-HFE




1N4148M




BA6392FP




LA5602

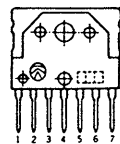


SBX1810-59

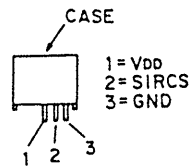


GP2S28




RD6.2ES-B1
RD9.1ES-B2
11ES2-NTA2B

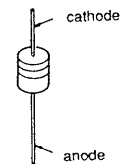

CXD2515Q

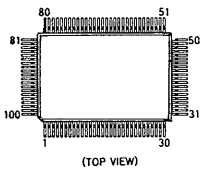


LA9215-ST

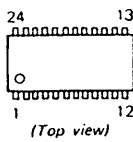


DTC114ES
DTC144ES
2SC2458-YGR




RPI-1391

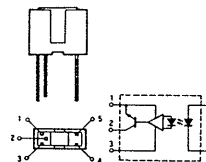

CXD2565AM

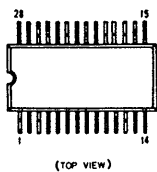



M5F78M07L



4-4. PRINTED WIRING BOARD
• See page 12 for Circuit Board Location.
• See page 12 for Semiconductor Lead Layouts.

• Semiconductor Location

Ref. No.	Location
D201	C-25
D202	C-25
D203	C-25
D204	C-25
D205	D-25
D206	D-25
D207	B-22
D208	D-22
D451	E-20
D501	E-21
D801	J-8
D802	J-5
IC101	J-16
IC102	J-21
IC103	J-17
IC201	D-23
IC202	C-24
IC203	D-25
IC401	D-18
IC451	E-19
IC501	F-23
IC731	H-8
Q201	D-24
Q401	B-18
Q402	F-20
Q501	C-22
Q502	D-22
Q503	D-22
Q504	D-22








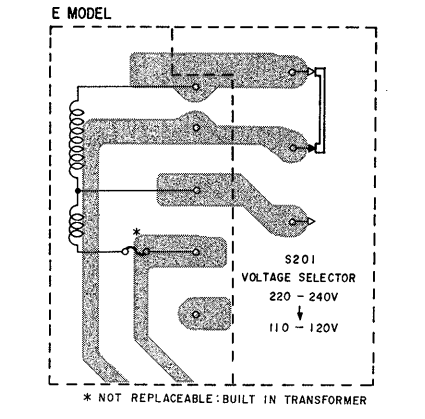
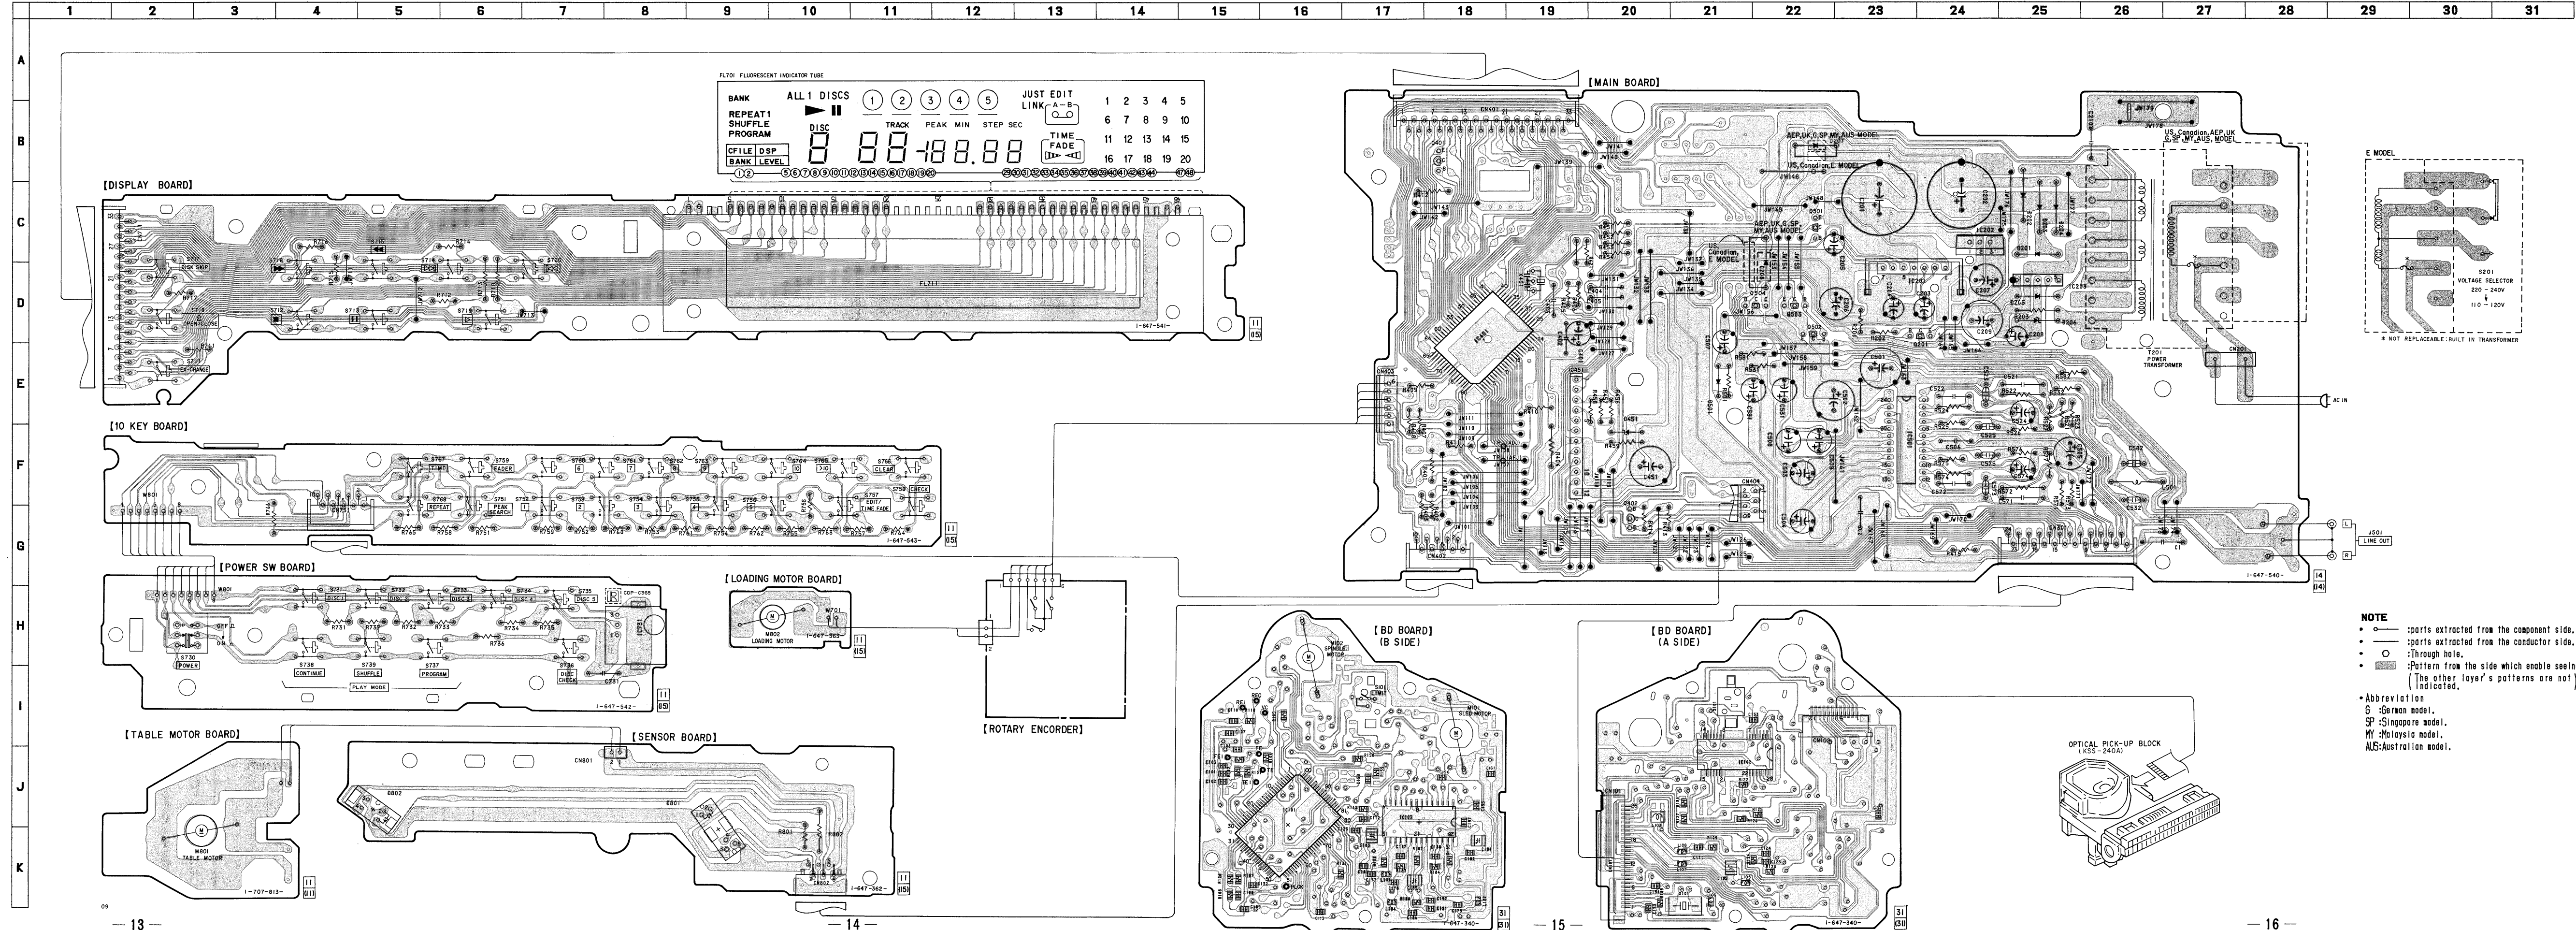


NOTE

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : through hole.
- : Pattern from the side which enable seeing. (The other layer's patterns are not indicated).

• Abbreviation
G : German model.
SP : Singapore model.
MY : Malaysia model.
AU : Australian model.

4-5. SCHEMATIC DIAGRAM
- See page 21 for IC Block Diagrams.
- See page 23 for IC Pin Functions. (IC101, IC103, IC401)

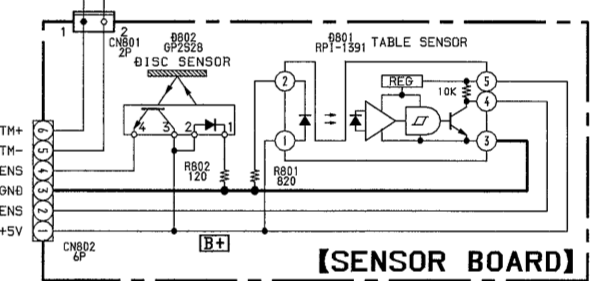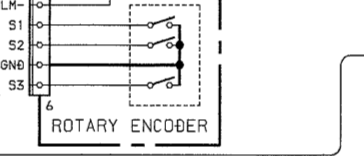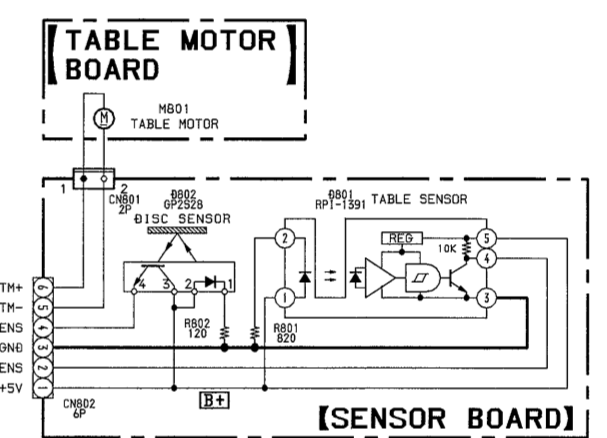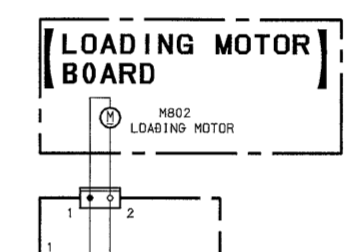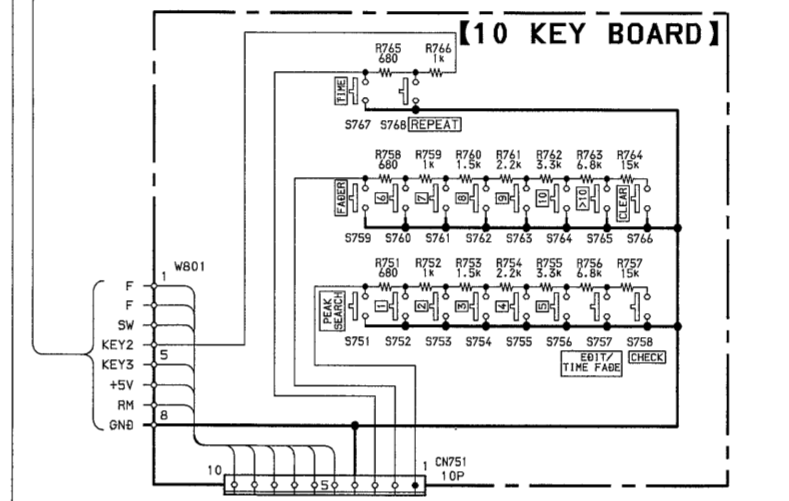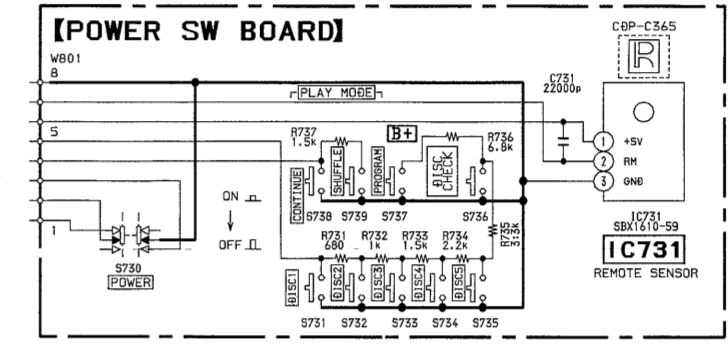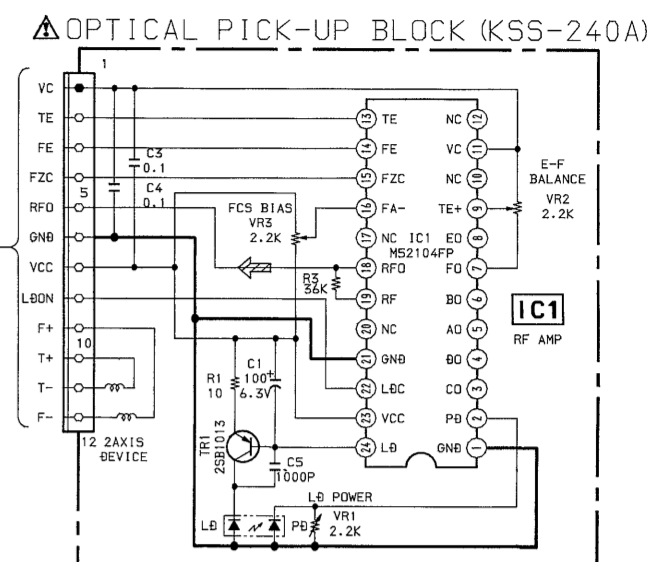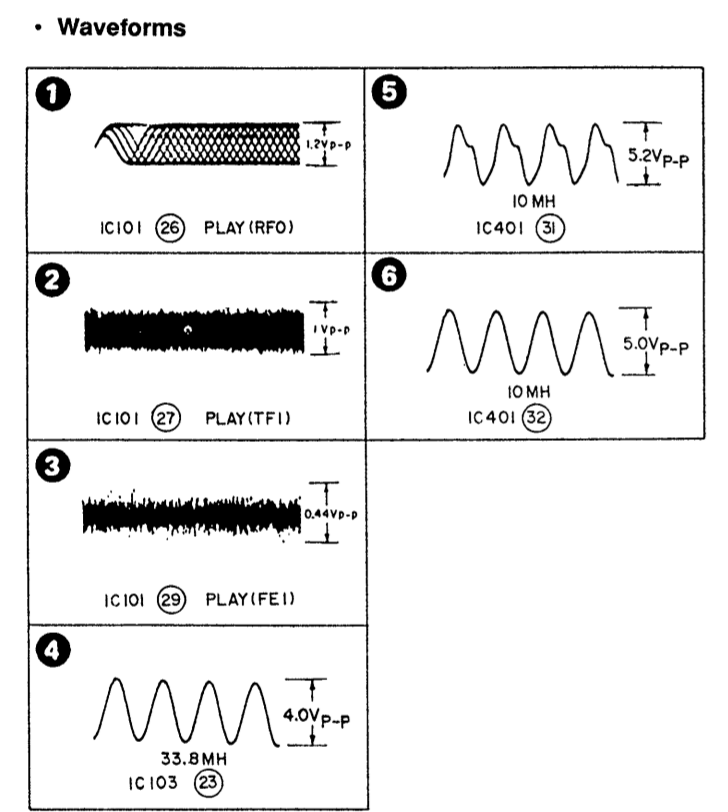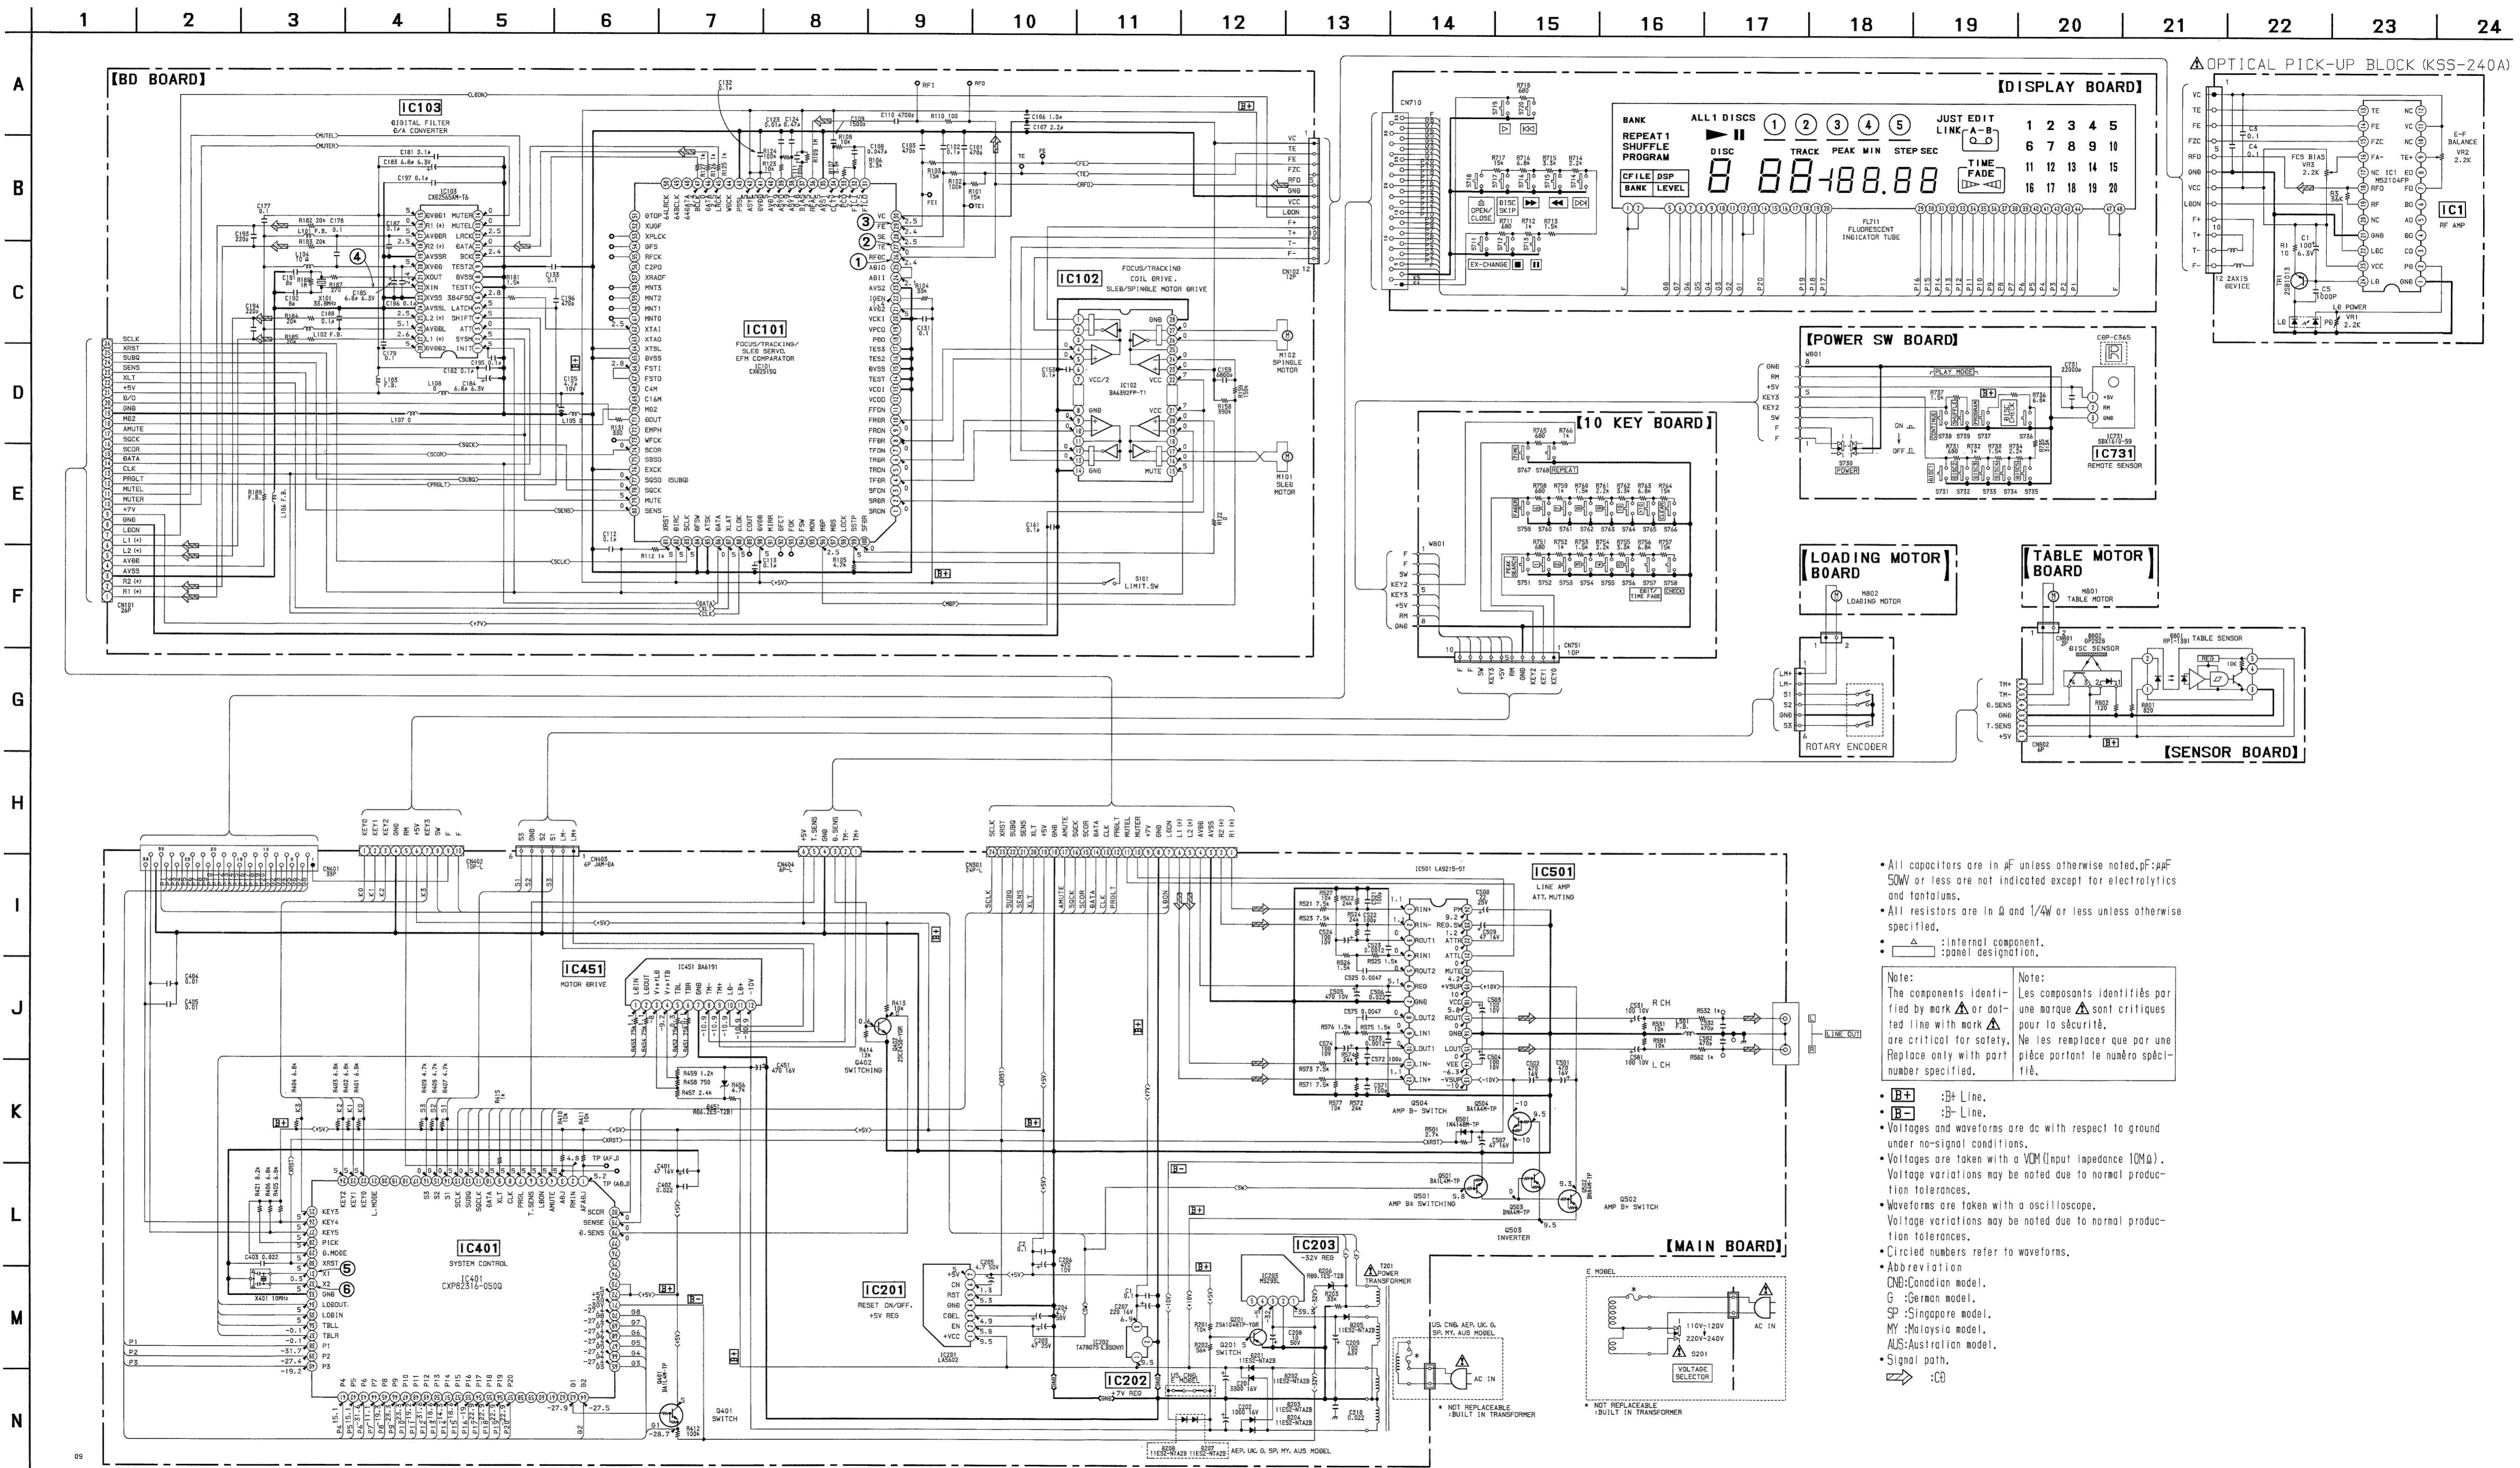

All capacitors are in μF unless otherwise noted. $\mu\text{F} = \mu\text{F}$.
50W or less are not indicated except for electrolytics and tantalums.
All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
 \square : internal component.
 Δ : panel designation.


Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une marque Δ ou pointillés pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


- \square : Bt Line.
- \square : B Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
- Voltages are taken with a VOM (input impedance $10\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Abbreviation: CND: Canadian model, G: German model, SP: Singapore model, MY: Malaysia model, AUS: Australian model.
- Signal path: \Rightarrow

4-6. IC BLOCK DIAGRAMS


IC101 CXD2515Q

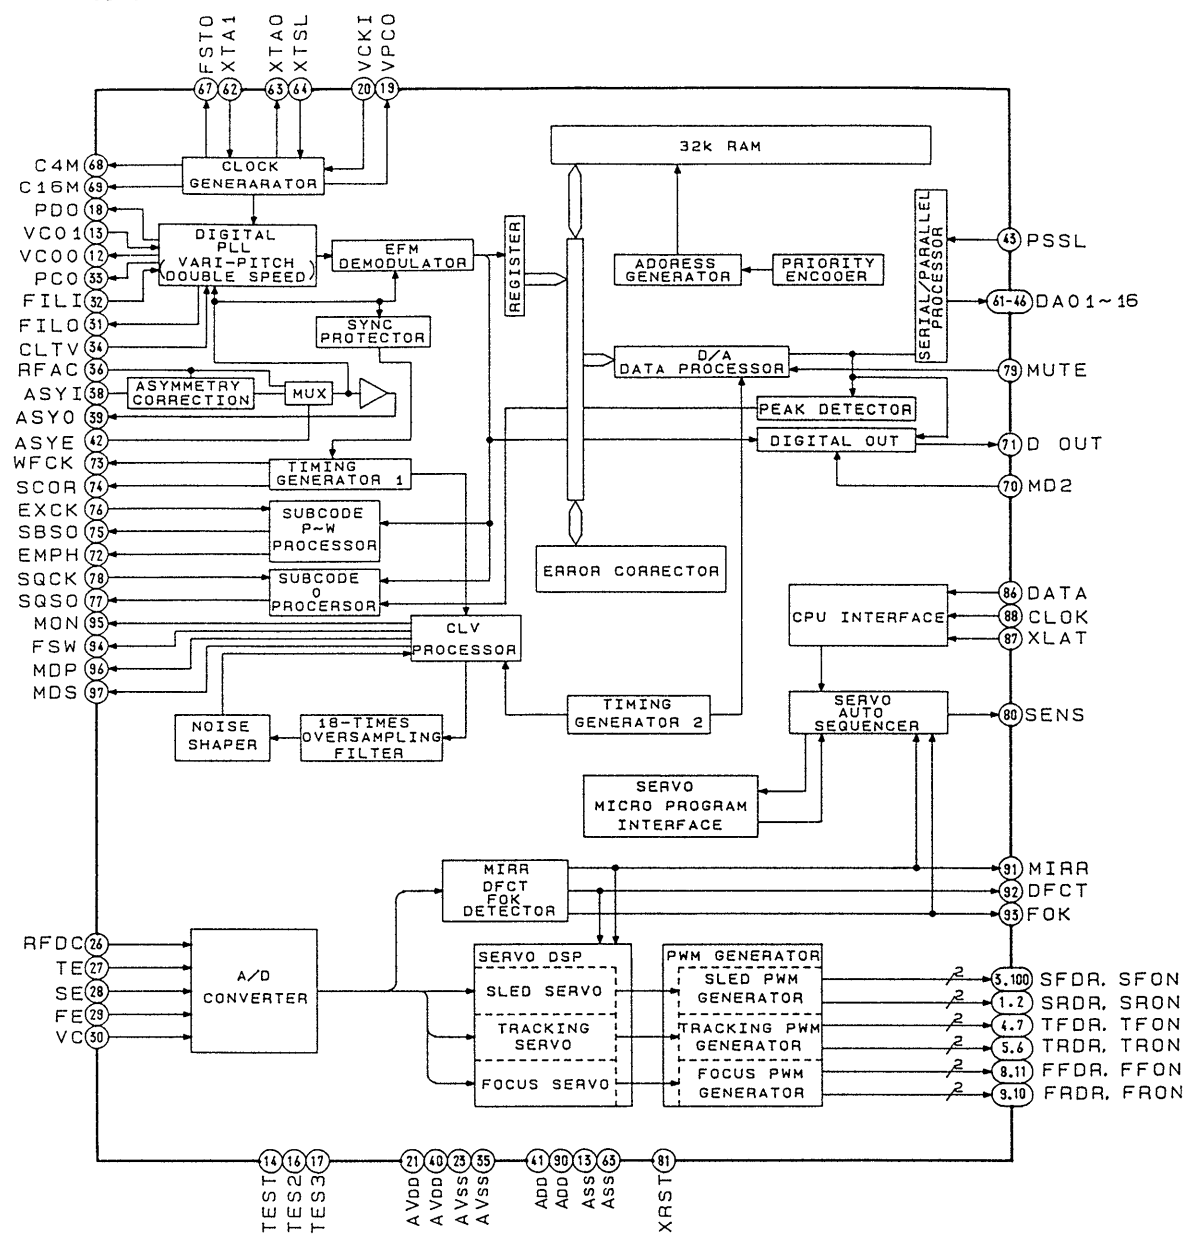


IC103 CXD2565AM-T6

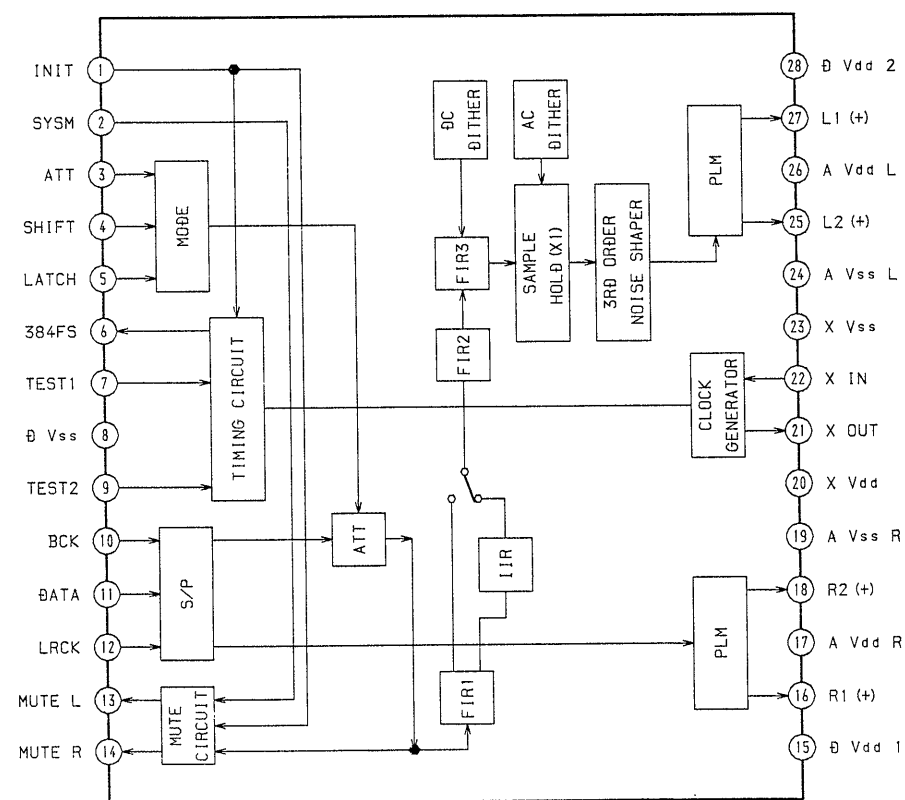


IC201 LA5602

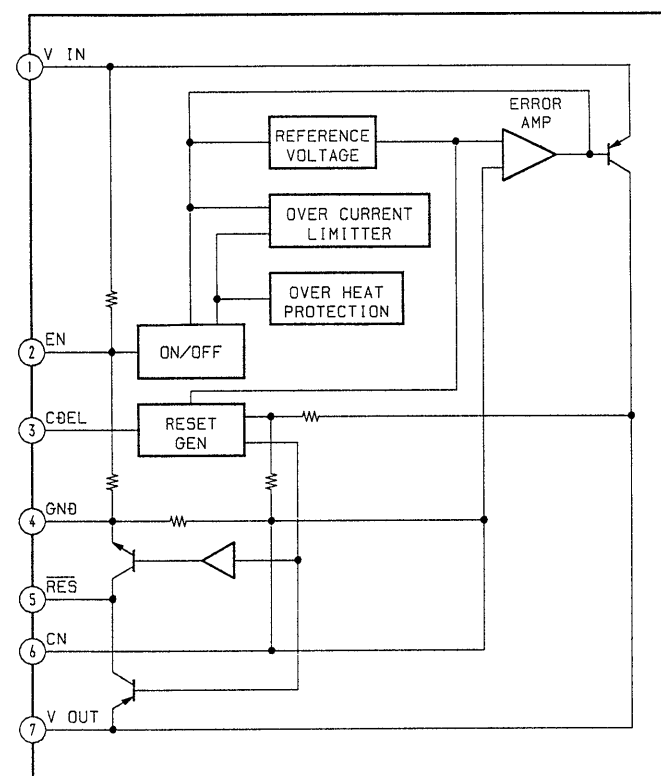


IC203 M5293L

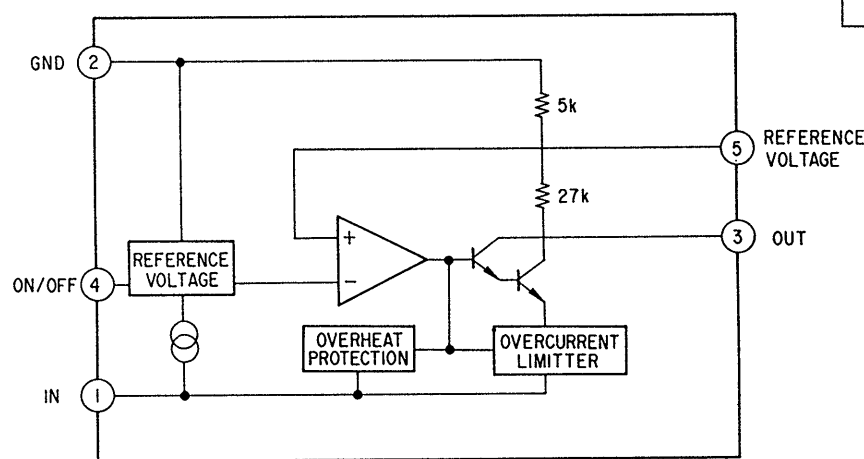

IC451 BA6191

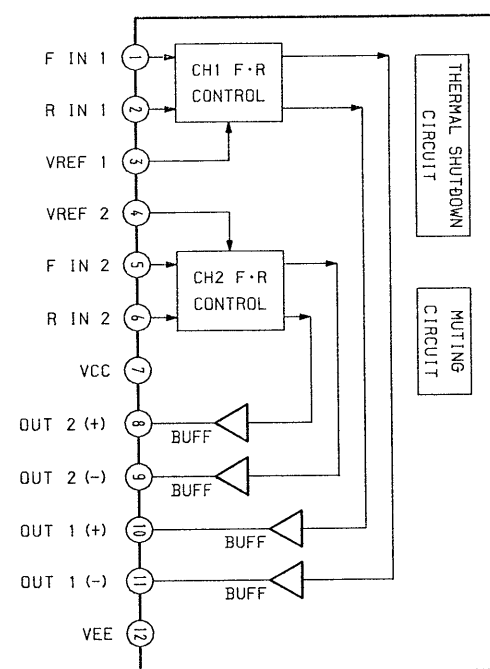

IC501 LA9215-ST

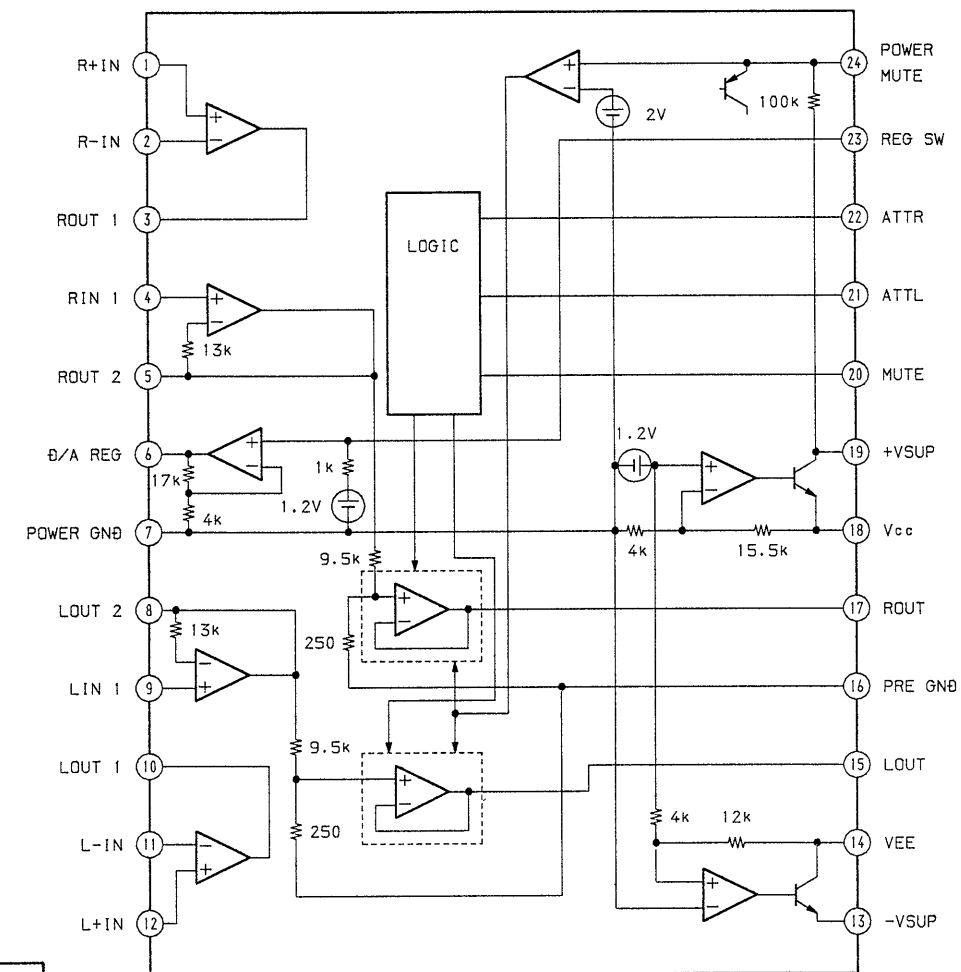

4-7. IC PIN FUNCTIONS

• IC101 FOCUS/TRACKING/SLED SERVO, EFM COMPARATOR (CXD2515Q)

Pin No.	Pin Name	I/O	Function
1	SRON	O	Sled drive output (Not used)
2	SRDR	O	Sled drive output
3	SFON	O	Sled drive output (Not used)
4	TFDR	O	Tracking drive output
5	TRON	O	Tracking drive output (Not used)
6	TRDR	O	Tracking drive output
7	TFON	O	Tracking drive output (Not used)
8	FFDR	O	Focus drive output
9	FRON	O	Focus drive output (Not used)
10	FRDR	O	Focus drive output
11	FFON	O	Focus drive output (Not used)
12	VCOO	O	VCO output for analog EFM PLL (Not used)
13	VCOI	I	VCO output for analog EFM PLL (Connected to GND)
14	TEST	I	TEST pin connected normally to GND
15	DVss	—	Digital GND
16	TES2	I	TEST pin connected normally to GND
17	TES3	I	TEST pin connected normally to GND
18	PDO	O	Charge-pump output for analog EFM PLL (Not used)
19	VPCO	O	Charge-pump output for variable pitch PLL (Not used)
20	VCKI	I	Clock input from variable pitch external VCO (Connected to GND)
21	AVD2	—	Analog power supply
22	IGEN	I	Power supply pin for operational amplifiers
23	AVS2	—	Analog GND
24	ADII	I	Input pin for A/D converter
25	ADIO	O	Operational amplifier output pin
26	RFDC	I	RF signal input
27	TE	I	Tracking error signal input
28	SE	I	Sled error signal input
29	FE	I	Focus error signal input
30	VC	I	Center voltage input pin
31	FILO	O	Filter output for master PLL
32	FILI	I	Filter input for master PLL
33	PCO	O	Charge-pump output for master PLL
34	CLTV	I	Control voltage input for master VCO
35	AVS1	—	Analog GND
36	RFAC	I	EFM signal input
37	BIAS	I	Asymmetry circuit constant current input
38	ASYI	I	Asymmetry compare voltage input
39	ASYO	O	EFM full swing output
40	AVD1	—	Analog power supply

Pin No.	Pin Name	I/O	Function
41	DVDD	–	Digital power supply
42	ASYE	I	Asymmetry circuit ON/OFF (Connected to +5V)
43	PSSL	I	Audio data output mode selection input (Connected to GND)
44	WDCK	O	48-bit slot D/A interface. Word clock (Not used)
45	LRCK	O	48-bit slot D/A interface. LR clock
46	DATA	O	DA 16 output when PSSL=1. 48-bit slot serial data when PSSL=0
47	BCLK	O	DA 15 output when PSSL=1. 48-bit slot data when PSSL=0
48	64DATA	O	DA 14 output when PSSL=1. 64-bit slot data when PSSL=0 (Not used)
49	64BCLK	O	DA 13 output when PSSL=1. 64-bit slot data when PSSL=0 (Not used)
50	64LRCK	O	DA 12 output when PSSL=1. 64-bit slot data when PSSL=0 (Not used)
51	GTOP	O	DA 11 output when PSSL=1. GTOP output when PSSL=0 (Not used)
52	XUGF	O	DA 10 output when PSSL=1. XUGF output when PSSL=0 (Not used)
53	XPLCK	O	DA 09 output when PSSL=1. XPLCK output when PSSL=0
54	GFS	O	DA 08 output when PSSL=1. GFS output when PSSL=0
55	PFCK	O	DA 07 output when PSSL=1. RFCK output when PSSL=0
56	C2PO	O	DA 06 output when PSSL=1. C2PO output when PSSL=0 (Not used)
57	XRAOF	O	DA 05 output when PSSL=1. XRA0F output when PSSL=0 (Not used)
58	MNT3	O	DA 04 output when PSSL=1. MNT3 output when PSSL=0
59	MNT2	O	DA 03 output when PSSL=1. MNT2 output when PSSL=0
60	MNT1	O	DA 02 output when PSSL=1. MNT1 output when PSSL=0
61	MNT0	O	DA 01 output when PSSL=1. MNT0 output when PSSL=0
62	XTAI	I	X'tal oscillator circuit input
63	XTAO	O	X'tal oscillator circuit output (Not used)
64	XTSL	I	X'tal selection input pin (Connected to GND)
65	DVss	–	Digital GND
66	FSTI	I	2/3 divider output of pins 62, 63
67	FSTO	O	2/3 divider output of pins 62, 63
68	C4M	O	4.2336 MHz output (Not used)
69	C16M	O	16.9344 MHz output (Not used)
70	MD2	I	Digital-out ON/OFF control pin
71	DOUT	O	Digital-out output pin
72	EMPH	O	Playback disc output in emphasis mode (Not used)
73	WFCK	O	WFCK output
74	SCOR	O	Sub-code sync output
75	SBSO	O	Sub-P through Sub-W serial output (Not used)
76	EXCK	I	Clock input for SBS0 read-out (Connected to GND)
77	SQSO (SUBQ)	O	Sub-Q 80-bit output
78	SQCK	I	Clock input for SQS0 read-out
79	MUTE	I	Muting selection pin
80	SENS	O	SENS output
81	XRST	I	System reset
82	DIRC	I	Used in 1-track jump mode
83	SCLK	I	SENS serial data read-out clock
84	DFSW	I	DFCT selection pin (Connected to GND)
85	ATSK	I	Input pin for anti-shock (Connected to GND)

Pin No.	Pin Name	I/O	Function
86	DATA	I	Serial data input, supplied from CPU
87	XLAT	I	Latch input, supplied from CPU
88	CLOK	I	Serial data transfer clock input, supplied from CPU
89	COUT	O	Numbers of track counted signal output
90	DVDD	–	Digital power supply
91	MIRR	O	Mirror signal output (Not used)
92	DFCT	O	Defect signal output
93	FOK	O	Focus OK output
94	FSW	O	Output to select spindle motor output filter (Not used)
95	MON	O	Output to control ON/OFF of spindle motor (Not used)
96	MDP	O	Output to control spindle motor servo
97	MDS	O	Output to control spindle motor servo (Not used)
98	LOCK	O	GFS is sampled by 460 Hz. H when GFS is H (Not used)
99	SSTP	I	Input signal to detect disc inner most track
100	SFDR	O	Sled drive output

• IC103 DIGITAL FILTER, D/A CONVERTER (CXD2565AM-T6)

Pin No.	Pin Name	I/O	Function
1	INIT	I	Re-synchronizing at rise-up edge of this signal
2	SYSM	–	System muting input
3	ATT	I	Attenuation data input
4	SHIFT	I	Shift clock input
5	LATCH	I	Latch clock input
6	384FSO	O	384fs clock output
7	TEST1	–	Test pin. Fixed to “L” level during normal operation
8	DVss	–	Digital GND
9	TEST2	–	Test pin. Fixed to “L” level during normal operation
10	BCK	I	BCK input
11	DATA	I	Data input
12	LRCK	I	LRCK input
13	MUTEL	O	Not used
14	MUTER	O	Not used
15	DVDD1	–	Digital power supply
16	R1 (+)	O	R-ch PLM output-1 (positive phase)
17	AVDDR	–	L-ch analog power supply
18	R2 (+)	O	R-ch PLM output-2 (positive phase)
19	AVssR	–	L-ch analog GND
20	XVDD	–	Master clock power supply
21	XOUT	O	X'tal oscillator output (33.8 MHz)
22	XIN	I	X'tal oscillator input (33.8 MHz)
23	XVss	–	Master clock GND
24	AVssL	–	L-ch analog GND
25	L2 (+)	O	L-ch PLM output-2 (positive phase)
26	AVDDL	–	L-ch analog power supply
27	L1 (+)	O	L-ch PLM output-1 (positive phase)
28	DVDD2	–	Digital power supply

• IC401 SYSTEM CONTROL (CXP82316-050Q)

Pin No.	Pin Name	I/O	Function
1	AF ADJ	I	Test mode pin. Normally: "H"
2	RM IN	I	Remote control signal input pin.
3	ADJ	I	Test mode pin. Normally: "H"
4	A MUTE	O	Analog muting control signal output pin.
5	LDON	O	Optical pick-up laser diode control pin. ON: "H"
6	T.SEN	I	Slit sensor of disc table input pin.
7	PRGL	O	Latch signal output pin to digital filter IC.
8	CLK	O	Serial clock output pin.
9	XLT	O	Serial data latch signal output pin.
10	DATA	O	Serial data output pin.
11	SQCLK	O	Subcode Q data readout clock output pin.
12	SUBQ	I	Subcode Q data input pin.
13	SCLK	O	Internal register of SSP/DSP readout clock output pin.
14 to 16	S1 to S3	I	Loading encoder input pin.
17 to 20	—	—	Not used.
21	L.MODE	I	Loading mode setup pin.
22 to 27	KEY0 to KEY5	I	Key input pin. (A/D)
28	PICK	I	Optical pick-up setup pin. 0V: KSS-240A, 2.5V: KSS-390A, 5V: Automatic discrimination
29	D.MODE	I	Disc table feeling and stop precision fine adjustment pin.
30	XRST	I	Reset signal input pin.
31	X1	I	10MHz clock input pin.
32	X2	O	10MHz clock output pin.
33	GND	—	GND
34	LODOUT	O	Loading motor control pin.
35	LODIN	O	Loading motor control pin.
36	TBLL	O	Table motor control pin.
37	TBLR	O	Table motor control pin.
38 to 57	P1 to P20	O	FL segment output pin.
58 to 62		—	Not used.
63 to 70	G1 to G8	O	FL timing output pin.
71	-30V	—	-30V
72	+5V	—	+5V
73		—	+5V
74 to 77		—	Not used.
78	D.SENS	I	Disc sensor input pin. "L": disc present.
79	SENSE	I	SENSE signal input pin.
80	SCOR	I	Subcode Q data readout timing signal input pin.

SECTION 5 EXPLODED VIEWS

NOTE:


- Items marked “ * ” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation
 CND : Canadian model
 G : German model
 SP : Singapore model
 MY : Malaysia model
 AUS : Australian model

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-1. FRONT PANEL AND CASE SECTIONS

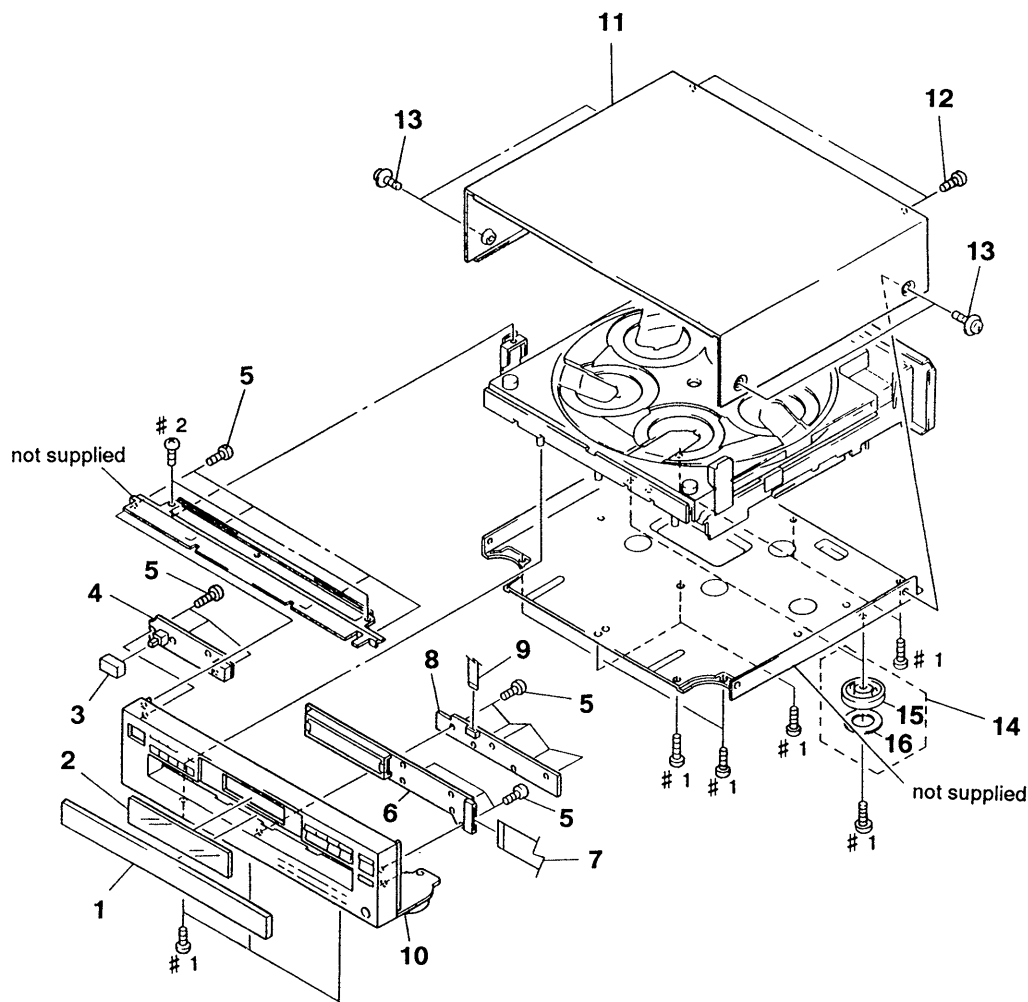

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-964-390-01	PANEL, LOADING (C365)		10	X-4945-452-1	PANEL ASSY, FRONT (C265:AEP, UK, G, AUS)	
1	4-964-390-11	PANEL, LOADING (C265)		10	X-4945-453-1	PANEL ASSY, FRONT (C365:US, CND)	
2	4-957-548-01	PLATE (FL), INDICATION (C365)		10	X-4945-454-1	PANEL ASSY, FRONT (C365:AEP, UK, E, G, MY, SP, AUS)	
2	4-957-548-11	PLATE (FL), INDICATION (C265)					
3	4-922-921-31	BUTTON (POWER)					
* 4	1-647-542-11	POWER SW BOARD		11	4-944-153-01	CASE	
5	4-951-620-01	SCREW (2.6X8), +BVTP		* 11	4-944-153-51	CASE	
* 6	1-647-541-11	DISPLAY BOARD		12	3-703-685-21	SCREW (+BV 3X8)	
7	1-751-053-11	WIRE (FLAT TYPE)(33 CORE)		13	3-363-099-01	SCREW (CASE 3 TP2)	
* 8	1-647-543-11	10 KEY BOARD		14	X-4941-228-1	FOOT ASSY (US, CND, E, AUS)	
9	1-751-054-11	WIRE (FLAT TYPE)(10 CORE)		15	4-937-929-31	FOOT (DIA. 58) (AEP, UK, G, MY, SP)	
10	X-4945-451-1	PANEL ASSY, FRONT (C265:US, CND)		16	4-923-836-21	CUSHION (AEP, UK, G, MY, SP)	

5-2. BACK PANEL AND DISK TABLE SECTION

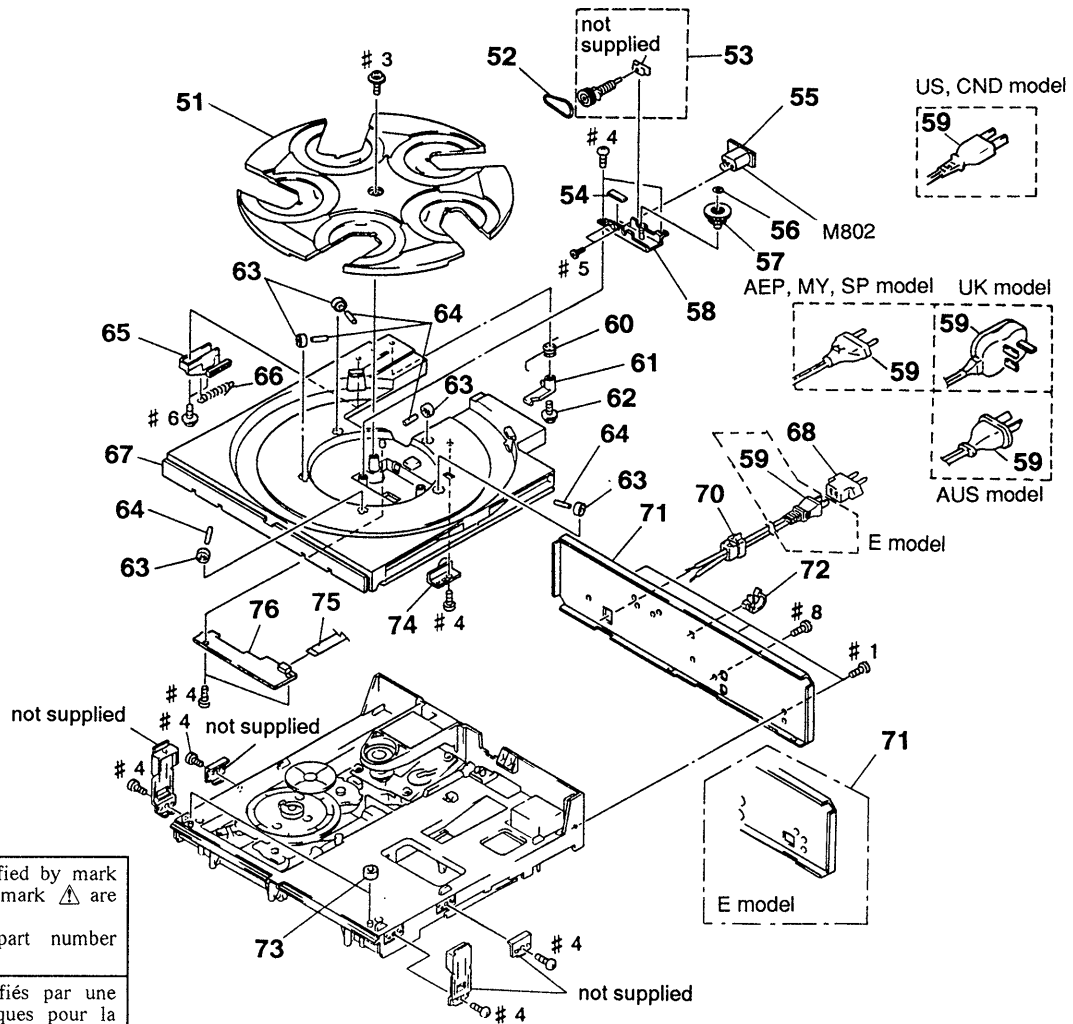


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 51	4-957-299-11	TABLE (B), DISK		* 70	3-703-244-00	BUSHING (2104), CORD (US, CND, AEP, UK, G, MY, SP, AUS)	
52	4-957-304-01	BELT (RM)		70	3-703-571-11	BUSHING (S) (4516), CORD (C365:E)	
53	X-4943-479-1	GEAR (ROTARY A) ASSY		* 71	4-971-080-01	PANEL, BACK (C365:US)	
* 54	4-957-295-11	CUSHION (RM)		* 71	4-971-080-11	PANEL, BACK (C365:AEP, MY, SP)	
* 55	1-650-082-11	TABLE MOTOR BOARD		* 71	4-971-080-21	PANEL, BACK (C365:UK)	
56	3-325-697-21	WASHER		* 71	4-971-080-31	PANEL, BACK (C365:AUS)	
57	4-957-284-01	GEAR (LOTARY B)		* 71	4-971-080-41	PANEL, BACK (C365:E)	
58	X-4944-128-1	BRACKET (RM) ASSY		* 71	4-971-080-51	PANEL, BACK (made in MALAYSIA) (C265:US)	
\triangle 59	1-575-042-21	CORD, POWER (US, CND)		* 71	4-971-080-61	PANEL, BACK (C265:AEP)	
\triangle 59	1-575-651-21	CORD, POWER (C265:AEP, G/C365:AEP, G, MY, SP)		* 71	4-971-080-71	PANEL, BACK (C265:UK)	
\triangle 59	1-696-027-11	CORD, POWER (C365:E)		* 71	4-971-080-81	PANEL, BACK (C265:AUS)	
\triangle 59	1-696-845-11	CORD, POWER (AUS)		* 71	4-971-532-01	PANEL, BACK (C365:CND)	
\triangle 59	1-751-529-11	CORD, POWER (UK)		* 71	4-971-532-11	PANEL, BACK (C265:CND)	
60	4-957-293-11	SPRING (RACK RELEASE)		* 71	4-971-532-21	PANEL, BACK (C365:G)	
61	4-957-291-11	LEVER (RACK RELEASE)		* 71	4-971-532-31	PANEL, BACK (C265:G)	
62	4-957-868-11	SCREW (+PTPHW 2.6X20)		* 71	4-971-532-41	PANEL, BACK (made in CHINA) (C265:US)	
63	X-4924-457-1	ROLLER ASSY		* 72	4-949-235-01	HOOK	
64	4-934-376-01	SHAFT (ROLLER)		* 73	4-951-619-01	CUSHION (A)	
65	4-957-292-11	SLIDER (RACK)		74	X-4944-129-1	BRACKET (ROLLER D) ASSY	
66	4-957-294-11	SPRING (D. T), TENSION		75	1-751-052-11	WIRE (FLAT TYPE) (6 CORE)	
* 67	4-957-298-01	TABLE (A), DISK		* 76	1-647-362-11	SENSOR BOARD	
\triangle 68	1-569-007-11	ADAPTER, CONVERSION 2P (C365:E)		M802	A-4660-525-A	MOTOR ASSY, ROTARY (TABLE)	

5-3. CHASSIS SECTION

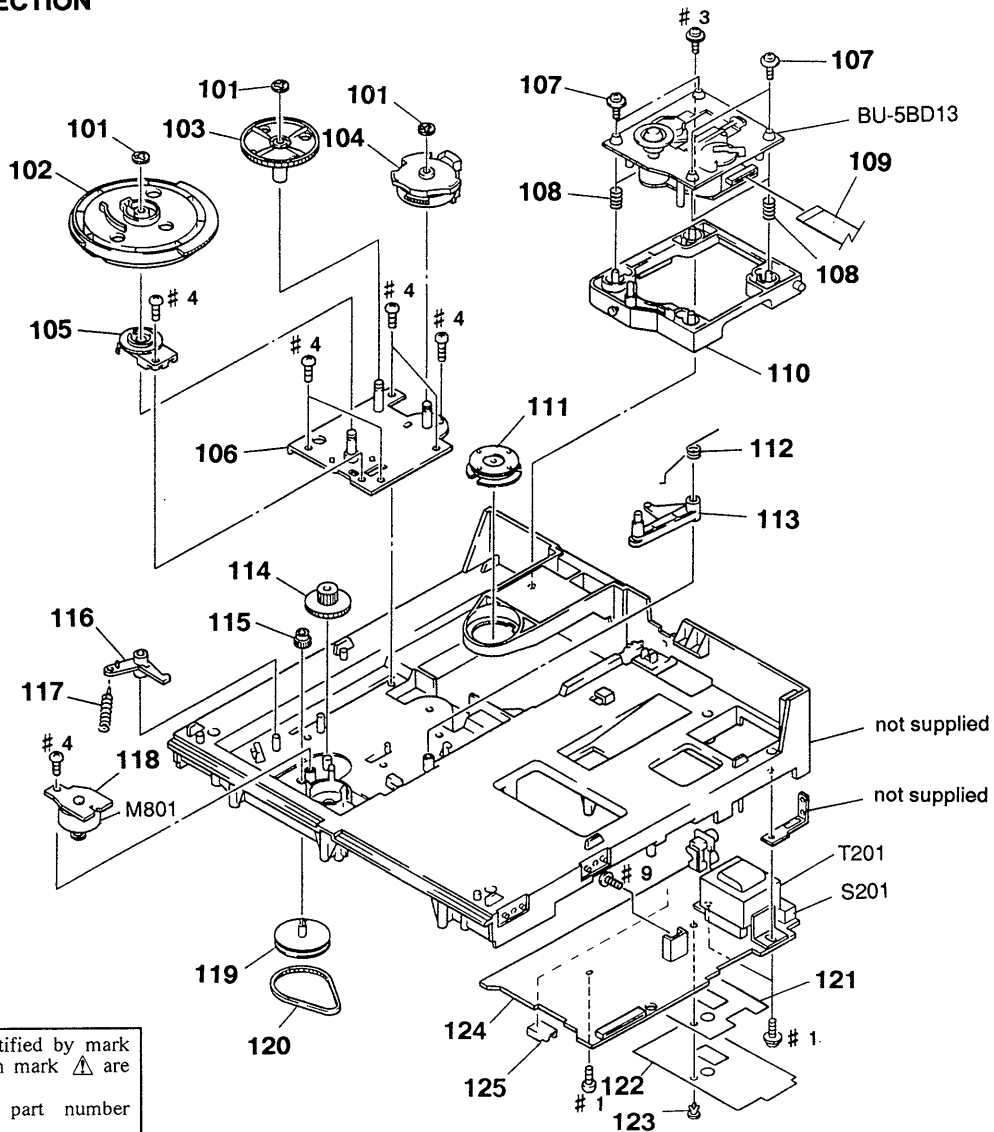


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	4-957-283-11	WASHER (5), STOPPER		* 118	1-647-363-11	LOADING MOTOR BOARD	
102	4-957-288-01	GEAR (MAIN)		119	X-4941-529-1	PULLEY ASSY	
103	4-957-287-01	GEAR (REV)		120	4-944-490-01	BELT (TIMING)	
104	4-957-286-01	GEAR (U/D)		* 121	4-957-556-11	SHEET, INSULATING (EXCEPT US, CND)	
105	1-466-996-11	ENCODER, ROTARY		* 122	4-957-555-11	SHEET, INSULATING (EXCEPT US, CND)	
106	X-4944-127-1	BRACKET (GEAR) ASSY		123	3-531-576-11	RIVET (EXCEPT US, CND)	
107	4-933-134-01	SCREW (+PTPWH M2.6X6)		* 124	A-4673-265-A	MAIN BOARD, COMPLETE (C365:E)	
108	4-948-503-01	SPRING (BU), COMPRESSION		* 124	A-4673-266-A	MAIN BOARD, COMPLETE	
* 109	1-648-409-11	PC BOARD, FLEXIBLE				(C265:AEP, UK, G, AUS/C365:AEP, UK, G, SP, MY, AUS)	
* 110	4-957-289-12	HOLDER (BU)		* 124	A-4673-386-A	MAIN BOARD, COMPLETE (US, CND)	
* 111	1-452-538-11	MAGNET		* 125	1-573-047-11	PIN, CONNECTOR (PC BOARD) 2P	
112	4-957-281-11	SPRING (LOCK LEVER)		M801	A-4353-974-A	MOTOR ASSY, LOADING	
113	4-957-279-11	LEVER, LOCK		\triangle S201	1-572-675-11	SWITCH, POWER VOLTAGE CHANGE (C365:E)	
114	4-957-303-01	GEAR (LOADING C)		\triangle T201	1-423-872-11	TRANSFORMER, POWER (US, CND)	
115	4-934-375-11	GEAR (LOADING B)		\triangle T201	1-423-992-11	TRANSFORMER, POWER	
116	4-957-285-11	LEVER, SET				(C265:AEP, UK, G, AUS/C365:AEP, UK, G, SP, MY, AUS)	
117	4-962-087-01	SPRING (S), TENSION		\triangle T201	1-423-993-11	TRANSFORMER, POWER (C365:E)	

**5-4. BASE UNIT SECTION
(BU-5BD13)**

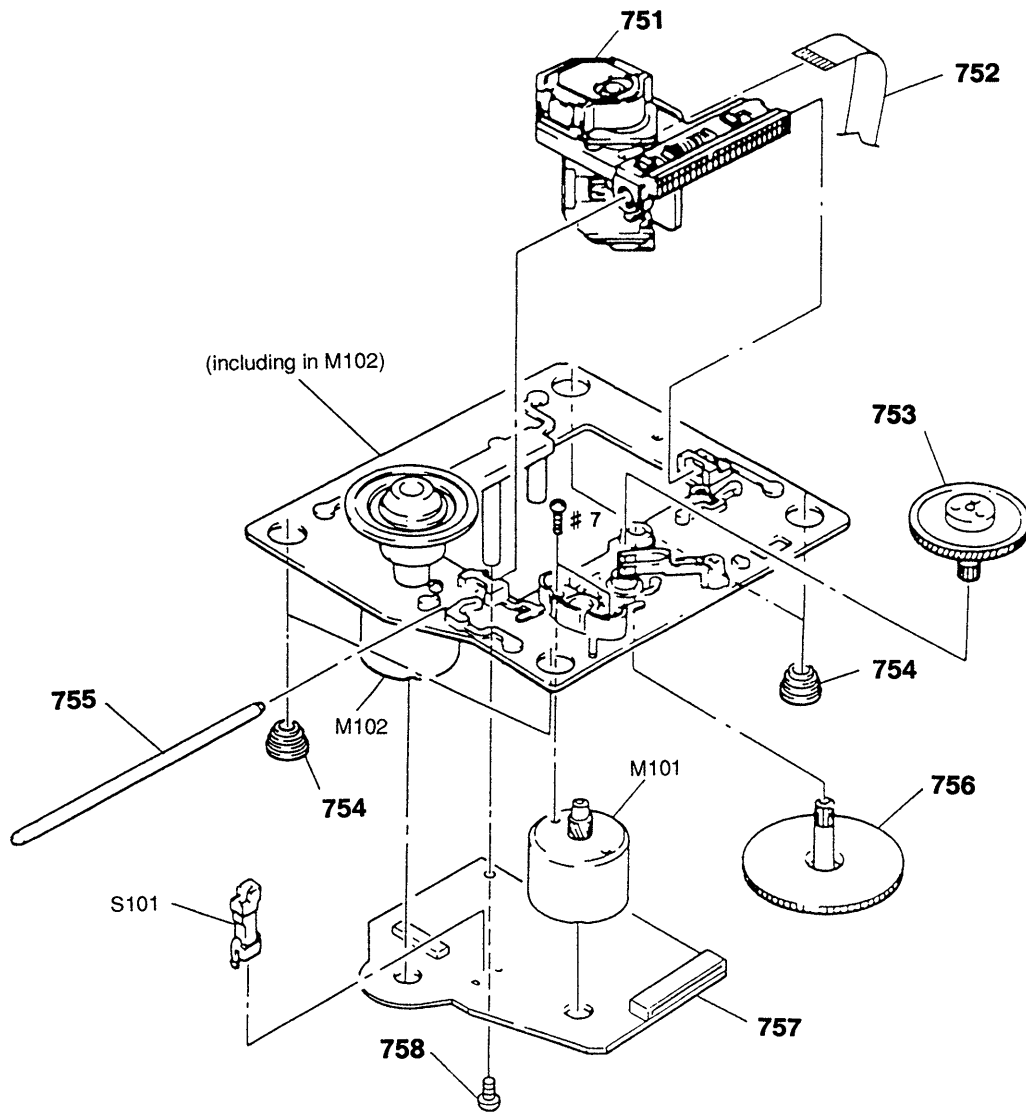

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
\triangle 751	8-848-144-11	OPTICAL PICK-UP KSS-240A		757	A-4649-890-A	BD BOARD, COMPLETE	
752	1-575-001-11	WIRE, FLAT TYPE (12 CORE)		* 758	4-951-620-01	SCREW (2.6X8), +BVTP	
753	4-917-567-21	GEAR (M)		M101	X-4917-504-1	MOTOR ASSY (SLED)	
754	4-951-940-01	INSULATOR (BU)		M102	X-4917-523-4	BASE (OUTSERT) ASSY (SPINDLE MOTOR)	
755	4-917-565-01	SHAFT, SLED		S101	1-572-085-11	SWITCH, LEAF (LIMIT)	
756	4-917-564-01	GEAR (P), FLATNESS					

SECTION 6 ELECTRICAL PARTS LIST

10 KEY	BD
---------------	-----------

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Abbreviation
 CND : Canadian model
 G : German model
 SP : Singapore model
 MY : Malaysia model
 AUS : Australian model
- RESISTORS
 All resistors are in ohms
 METAL: Metal-film resistor
 METAL OXIDE: Metal Oxide-film resistor
 F : nonflammable
- SEMICONDUCTORS
 In each case, u: μ , for example:
 uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
 uPC...: μ PC..., uPD...: μ PD...
- CAPACITORS
 uF : μ F
- COILS
 uH : μ H
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
*	1-647-543-11	10 KEY BOARD *****		S767	1-554-303-21	SWITCH, TACTILE (TIME)	
		< CONNECTOR >		S768	1-554-303-21	SWITCH, TACTILE (REPEAT)	
CN751	1-750-228-11	CONNECTOR, FFC/FPC 10P		*****			
		< RESISTOR >		A-4649-890-A	BD BOARD, COMPLETE	*****	
R751	1-249-415-11	CARBON	680 5% 1/4W F	< CAPACITOR >			
R752	1-249-417-11	CARBON	1K 5% 1/4W F	C101	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
R753	1-249-419-11	CARBON	1.5K 5% 1/4W F	C102	1-163-038-91	CERAMIC CHIP	0.1uF 25V
R754	1-249-421-11	CARBON	2.2K 5% 1/4W F	C103	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
R755	1-249-423-11	CARBON	3.3K 5% 1/4W F	C105	1-135-155-21	TANTALUM CHIP	4.7uF 10% 16V
R756	1-249-427-11	CARBON	6.8K 5% 1/4W F	C106	1-164-346-11	CERAMIC CHIP	1uF 16V
R757	1-249-431-11	CARBON	15K 5% 1/4W F	C107	1-164-505-11	CERAMIC CHIP	2.2uF 16V
R758	1-249-415-11	CARBON	680 5% 1/4W F	C108	1-163-035-00	CERAMIC CHIP	0.047uF 50V
R759	1-249-417-11	CARBON	1K 5% 1/4W F	C109	1-163-011-11	CERAMIC CHIP	0.0015uF 10% 50V
R760	1-249-419-11	CARBON	1.5K 5% 1/4W F	C110	1-163-017-00	CERAMIC CHIP	0.0047uF 5% 50V
R761	1-249-421-11	CARBON	2.2K 5% 1/4W F	C111	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
R762	1-249-423-11	CARBON	3.3K 5% 1/4W F	C112	1-163-038-91	CERAMIC CHIP	0.1uF 25V
R763	1-249-427-11	CARBON	6.8K 5% 1/4W F	C113	1-163-038-91	CERAMIC CHIP	0.1uF 25V
R764	1-249-431-11	CARBON	15K 5% 1/4W F	C123	1-164-232-11	CERAMIC CHIP	0.01uF 50V
R765	1-249-415-11	CARBON	680 5% 1/4W F	C124	1-164-005-11	CERAMIC CHIP	0.47uF 25V
R766	1-249-417-11	CARBON	1K 5% 1/4W F	C131	1-163-038-91	CERAMIC CHIP	0.1uF 25V
		< SWITCH >		C132	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S751	1-554-303-21	SWITCH, TACTILE (PEAK SEARCH)		C133	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S752	1-554-303-21	SWITCH, TACTILE (1)		C153	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S753	1-554-303-21	SWITCH, TACTILE (2)		C159	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
S754	1-554-303-21	SWITCH, TACTILE (3)		C161	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S755	1-554-303-21	SWITCH, TACTILE (4)		C177	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S756	1-554-303-21	SWITCH, TACTILE (5)		C178	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S757	1-554-303-21	SWITCH, TACTILE (EDIT/TIME FADE)		C179	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S758	1-554-303-21	SWITCH, TACTILE (CHECK)		C181	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S759	1-554-303-21	SWITCH, TACTILE (FADER)		C182	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S760	1-554-303-21	SWITCH, TACTILE (6)		C183	1-135-156-21	TANTALUM CHIP	6.8uF 10% 10V
S761	1-554-303-21	SWITCH, TACTILE (7)		C184	1-135-156-21	TANTALUM CHIP	6.8uF 10% 10V
S762	1-554-303-21	SWITCH, TACTILE (8)		C185	1-135-156-21	TANTALUM CHIP	6.8uF 10% 10V
S763	1-554-303-21	SWITCH, TACTILE (9)		C186	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S764	1-554-303-21	SWITCH, TACTILE (10)		C187	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S765	1-554-303-21	SWITCH, TACTILE (>10)		C188	1-163-038-91	CERAMIC CHIP	0.1uF 25V
S766	1-554-303-21	SWITCH, TACTILE (CLEAR)		C191	1-163-091-00	CERAMIC CHIP	8PF 50V
				C192	1-163-091-00	CERAMIC CHIP	8PF 50V
				C193	1-163-125-00	CERAMIC CHIP	220PF 5% 50V

BD **DISPLAY**

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
C194	1-163-125-00	CERAMIC CHIP 220PF 5%	50V	R181	1-216-053-00	METAL CHIP 1.5K 5%	1/10W
C195	1-163-038-91	CERAMIC CHIP 0.1uF	25V	R182	1-216-080-00	METAL CHIP 20K 5%	1/10W
C196	1-163-005-11	CERAMIC CHIP 470PF 10%	50V	R183	1-216-080-00	METAL CHIP 20K 5%	1/10W
C197	1-163-038-91	CERAMIC CHIP 0.1uF	25V	R184	1-216-080-00	METAL CHIP 20K 5%	1/10W
		< CONNECTOR >		R185	1-216-080-00	METAL CHIP 20K 5%	1/10W
* CN101	1-580-875-11	SOCKET, CONNECTOR (SMT) 26P		R187	1-216-035-00	METAL CHIP 270 5%	1/10W
CN102	1-580-866-11	SOCKET, CONNECTOR (SMT) 12P		R188	1-216-121-00	METAL CHIP 1M 5%	1/10W
		< IC >		R189	1-414-234-11	INDUCTOR, FERRITE BEAD	
IC101	8-752-351-94	IC CXD2515Q				< SWITCH >	
IC102	8-759-176-09	IC BA6392FP		S101	1-572-085-11	SWITCH, LEAF (LIMIT)	
IC103	8-752-367-61	IC CXD2565AM				< VIBRATOR >	
		< COIL >		X101	1-579-904-11	VIBRATOR, CRYSTAL (33.8MHz)	
L101	1-414-234-11	INDUCTOR, FERRITE BEAD		*****			
L102	1-414-234-11	INDUCTOR, FERRITE BEAD		* 1-647-541-11	DISPLAY BOARD		
L103	1-414-234-11	INDUCTOR, FERRITE BEAD			*****		
L104	1-216-001-00	METAL CHIP 10 5%	1/10W		< CONNECTOR >		
L105	1-216-295-91	CONDCTOR, CHIP (2012)		CN710	1-750-237-11	CONNECTOR, FFC/FPC 33P	
L106	1-414-234-11	INDUCTOR, FERRITE BEAD				< FLUORESCENT INDICATOR >	
L107	1-216-295-91	CONDCTOR, CHIP (2012)		FL711	1-517-164-11	INDICATOR TUBE, FLUORESCENT	
L108	1-216-295-91	CONDCTOR, CHIP (2012)				< RESISTOR >	
		< MOTOR >		R711	1-249-415-11	CARBON 680 5%	1/4W F
M101	X-4917-504-1	MOTOR ASSY (SLED)		R712	1-249-417-11	CARBON 1K 5%	1/4W F
M102	X-4917-523-4	BASE (OUTSERT) ASSY (SPINDLE MOTOR)		R713	1-249-419-11	CARBON 1.5K 5%	1/4W F
		< RESISTOR >		R714	1-249-421-11	CARBON 2.2K 5%	1/4W F
R101	1-216-077-00	METAL CHIP 15K 5%	1/10W	R715	1-249-423-11	CARBON 3.3K 5%	1/4W F
R102	1-216-097-00	METAL CHIP 100K 5%	1/10W	R716	1-249-427-11	CARBON 6.8K 5%	1/4W F
R103	1-216-077-00	METAL CHIP 15K 5%	1/10W	R717	1-249-431-11	CARBON 15K 5%	1/4W F
R104	1-216-085-00	METAL CHIP 33K 5%	1/10W	R718	1-249-415-11	CARBON 680 5%	1/4W F
R105	1-216-065-00	METAL CHIP 4.7K 5%	1/10W			< SWITCH >	
R106	1-216-061-00	METAL CHIP 3.3K 5%	1/10W	S711	1-554-303-21	SWITCH, TACTILE (EX-CHANGE)	
R107	1-216-061-00	METAL CHIP 3.3K 5%	1/10W	S712	1-554-303-21	SWITCH, TACTILE (■)	
R108	1-216-073-00	METAL CHIP 10K 5%	1/10W	S713	1-554-303-21	SWITCH, TACTILE (▨)	
R109	1-216-121-00	METAL CHIP 1M 5%	1/10W	S714	1-554-303-21	SWITCH, TACTILE (▷▷)	
R110	1-216-025-00	METAL CHIP 100 5%	1/10W	S715	1-554-303-21	SWITCH, TACTILE (◀◀)	
R112	1-216-049-00	METAL CHIP 1K 5%	1/10W	S716	1-554-303-21	SWITCH, TACTILE (▶▶)	
R122	1-216-295-91	CONDCTOR, CHIP (2012)		S717	1-554-303-21	SWITCH, TACTILE (DISC SKIP)	
R123	1-216-073-00	METAL CHIP 10K 5%	1/10W	S718	1-554-303-21	SWITCH, TACTILE (OPEN/CLOSE)	
R124	1-216-097-00	METAL CHIP 100K 5%	1/10W	S719	1-554-303-21	SWITCH, TACTILE (▷)	
R125	1-216-049-00	METAL CHIP 1K 5%	1/10W	S720	1-554-303-21	SWITCH, TACTILE (◀◀)	
R126	1-216-049-00	METAL CHIP 1K 5%	1/10W	S730	1-572-714-11	SWITCH, PUSH (POWER)	
R127	1-216-049-00	METAL CHIP 1K 5%	1/10W	S731	1-554-303-21	SWITCH, TACTILE (DISC 1)	
R131	1-216-037-00	METAL CHIP 330 5%	1/10W	S732	1-554-303-21	SWITCH, TACTILE (DISC 2)	
R158	1-216-111-00	METAL CHIP 390K 5%	1/10W				
R159	1-216-101-00	METAL CHIP 150K 5%	1/10W				

DISPLAY

LOADING MOTOR

MAIN

Ref.No.	Part No.	Description	Remark
S733	1-554-303-21	SWITCH, TACTILE (DISC 3)	
S734	1-554-303-21	SWITCH, TACTILE (DISC 4)	
S735	1-554-303-21	SWITCH, TACTILE (DISC 5)	
S736	1-554-303-21	SWITCH, TACTILE (DISC CHECK)	
S737	1-554-303-21	SWITCH, TACTILE (PROGRAM)	
S738	1-554-303-21	SWITCH, TACTILE (CONTINUE)	
S739	1-554-303-21	SWITCH, TACTILE (SHUFFLE)	

*	1-647-363-11	LOADING MOTOR BOARD ***** < MOTOR >	
M801	A-4660-525-A	MOTOR ASSY, LOADING	

*	A-4673-265-A	MAIN BOARD, COMPLETE (C365:E) *****	
*	A-4673-266-A	MAIN BOARD, COMPLETE ***** (C265:AEP, UK, G, AUS/C365:AEP, UK, G, SP, MY, AUS)	
*	A-4673-386-A	MAIN BOARD, COMPLETE ***** (C265:US, CND/C365:US, CND)	
	7-685-871-01	SCREW +BVT 3X6 (S) < CAPACITOR >	
C1	1-164-159-11	CERAMIC 0.1uF	50V
C2	1-164-159-11	CERAMIC 0.1uF	50V
C201	1-128-489-11	ELECT 330uF	20% 16V
C202	1-124-360-00	ELECT 1000uF	20% 16V
C203	1-124-910-11	ELECT 47uF	20% 50V
C204	1-126-163-11	ELECT 4.7uF	20% 50V
C205	1-126-163-11	ELECT 4.7uF	20% 50V
C206	1-124-997-11	ELECT 470uF	20% 10V
C207	1-126-024-11	ELECT 220uF	20% 16V
C208	1-126-059-11	ELECT 10uF	20% 50V
C209	1-124-572-11	ELECT 100uF	20% 63V
C210	1-161-494-00	CERAMIC 0.022uF	25V
C401	1-126-022-11	ELECT 47uF	20% 16V
C402	1-161-494-00	CERAMIC 0.022uF	25V
C403	1-161-494-00	CERAMIC 0.022uF	25V
C404	1-162-306-11	CERAMIC 0.01uF	20% 16V
C405	1-162-306-11	CERAMIC 0.01uF	20% 16V
C451	1-126-012-11	ELECT 470uF	20% 16V
C501	1-126-012-11	ELECT 470uF	20% 16V
C502	1-126-012-11	ELECT 470uF	20% 16V
C503	1-124-994-11	ELECT 100uF	20% 10V

Ref.No.	Part No.	Description	Remark
C504	1-124-994-11	ELECT 100uF	20% 10V
C505	1-124-997-11	ELECT 470uF	20% 10V
C506	1-161-494-00	CERAMIC 0.022uF	25V
C507	1-126-022-11	ELECT 47uF	20% 16V
C508	1-126-796-11	ELECT 22uF	20% 25V
C509	1-126-786-11	ELECT 47uF	20% 16V
C521	1-162-282-31	CERAMIC 100PF	10% 50V
C522	1-162-282-31	CERAMIC 100PF	10% 50V
C523	1-137-433-11	FILM 0.0012uF	5% 50V
C524	1-124-994-11	ELECT 100uF	20% 10V
C525	1-137-368-11	FILM 0.0047uF	5% 50V
C531	1-124-994-11	ELECT 100uF	20% 10V
C532	1-130-467-00	MYLAR 470PF	5% 50V
C571	1-162-282-31	CERAMIC 100PF	10% 50V
C572	1-162-282-31	CERAMIC 100PF	10% 50V
C573	1-137-433-11	FILM 0.0012uF	5% 50V
C574	1-124-994-11	ELECT 100uF	20% 10V
C575	1-137-368-11	FILM 0.0047uF	5% 50V
C581	1-124-994-11	ELECT 100uF	20% 10V
C582	1-130-467-00	MYLAR 470PF	5% 50V
< CONNECTOR >			
CN301	1-750-236-11	CONNECTOR, FFC/FPC 24P	
CN401	1-750-237-11	CONNECTOR, FFC/FPC 33P	
CN402	1-750-228-11	CONNECTOR, FFC/FPC 10P	
* CN403	1-695-006-11	PIN, CONNECTOR (PC BOARD) 6P	
CN404	1-750-223-11	CONNECTOR, FFC/FPC 6P	
< DIODE >			
D201	8-719-024-99	DIODE 11ES2-NTA2B	
D202	8-719-024-99	DIODE 11ES2-NTA2B	
D203	8-719-024-99	DIODE 11ES2-NTA2B	
D204	8-719-024-99	DIODE 11ES2-NTA2B	
D205	8-719-024-99	DIODE 11ES2-NTA2B	
D206	8-719-110-13	DIODE RD9.1ESB2	
D207	8-719-024-99	DIODE 11ES2-NTA2B (C265:AEP, UK, G, AUS/C365:AEP, UK, G, SP, MY, AUS)	
D208	8-719-024-99	DIODE 11ES2-NTA2B (C265:AEP, UK, G, AUS/C365:AEP, UK, G, SP, MY, AUS)	
D451	8-719-109-92	DIODE RD6.2ES-B1	
D501	8-719-987-63	DIODE 1N4148M	
< IC >			
IC201	8-759-061-65	IC LA5602	
IC202	8-759-605-00	IC M5F78M07L	
IC203	8-759-633-42	IC M5293L	
IC401	8-752-861-78	IC CXP82316-050Q	
IC451	8-759-172-31	IC BA6191	
IC501	8-759-175-88	IC LA9215-ST	

MAIN

POWER SW

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		< JACK >					
J501	1-750-679-21	JACK, PIN 2P (LINE OUT)		R526	1-249-419-11	CARBON 1.5K 5% 1/4W F	
		< COIL >		R527	1-249-429-11	CARBON 10K 5% 1/4W	
L501	1-412-473-21	INDUCTOR 0uH		R531	1-249-429-11	CARBON 10K 5% 1/4W	
		< TRANSISTOR >		R532	1-249-417-11	CARBON 1K 5% 1/4W F	
Q201	8-729-119-76	TRANSISTOR 2SA1175-HFE		R571	1-247-852-11	CARBON 7.5K 5% 1/4W	
Q401	8-729-900-89	TRANSISTOR DTC144ES		R572	1-247-864-11	CARBON 24K 5% 1/4W	
Q402	8-729-230-45	TRANSISTOR 2SC2458-YGR		R573	1-247-852-11	CARBON 7.5K 5% 1/4W	
Q501	8-729-900-89	TRANSISTOR DTC144ES		R574	1-247-864-11	CARBON 24K 5% 1/4W	
Q502	8-729-422-57	TRANSISTOR UN4111		R575	1-249-419-11	CARBON 1.5K 5% 1/4W F	
Q503	8-729-422-57	TRANSISTOR UN4111		R576	1-249-419-11	CARBON 1.5K 5% 1/4W F	
Q504	8-729-900-80	TRANSISTOR DTC114ES		R577	1-249-429-11	CARBON 10K 5% 1/4W	
		< RESISTOR >		R581	1-249-429-11	CARBON 10K 5% 1/4W	
R201	1-249-429-11	CARBON 10K 5% 1/4W		R582	1-249-417-11	CARBON 1K 5% 1/4W F	
R202	1-249-438-11	CARBON 56K 5% 1/4W				< SWITCH >	
R203	1-249-435-11	CARBON 33K 5% 1/4W		△S201	1-572-675-11	SWITCH, POWER VOLTAGE CHANGE (C365:E)	
R401	1-249-427-11	CARBON 6.8K 5% 1/4W F				< TRANSFORMER >	
R402	1-249-427-11	CARBON 6.8K 5% 1/4W F		△T201	1-423-872-11	TRANSFORMER, POWER (US, CND)	
R403	1-249-427-11	CARBON 6.8K 5% 1/4W F		△T201	1-423-992-11	TRANSFORMER, POWER (C265:AEP, UK, G, AUS/C365:AEP, UK, G, SP, MY, AUS)	
R404	1-249-427-11	CARBON 6.8K 5% 1/4W F		△T201	1-423-993-11	TRANSFORMER, POWER (C365:E)	
R405	1-249-427-11	CARBON 6.8K 5% 1/4W F				< VIBRATOR >	
R407	1-249-425-11	CARBON 4.7K 5% 1/4W F		X401	1-579-175-11	VIBRATOR, CERAMIC (10MHz)	
R408	1-249-425-11	CARBON 4.7K 5% 1/4W F				*****	
R409	1-249-425-11	CARBON 4.7K 5% 1/4W F		*	1-647-542-11	POWER SW BOARD *****	
R410	1-249-429-11	CARBON 10K 5% 1/4W				< CAPACITOR >	
R411	1-249-429-11	CARBON 10K 5% 1/4W		C731	1-161-494-00	CERAMIC 0.022uF 25V	
R412	1-249-441-11	CARBON 100K 5% 1/4W				< IC >	
R413	1-249-429-11	CARBON 10K 5% 1/4W		IC731	8-741-810-59	IC SBX1810-59	
R414	1-249-430-11	CARBON 12K 5% 1/4W				< RESISTOR >	
R415	1-249-417-11	CARBON 1K 5% 1/4W F		R731	1-249-415-11	CARBON 680 5% 1/4W F	
R421	1-249-428-11	CARBON 8.2K 5% 1/4W F		R732	1-249-417-11	CARBON 1K 5% 1/4W F	
R451	1-247-876-11	CARBON 75K 5% 1/4W		R733	1-249-419-11	CARBON 1.5K 5% 1/4W F	
R452	1-247-876-11	CARBON 75K 5% 1/4W		R734	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R453	1-247-876-11	CARBON 75K 5% 1/4W		R735	1-249-423-11	CARBON 3.3K 5% 1/4W F	
R454	1-247-876-11	CARBON 75K 5% 1/4W		R736	1-249-427-11	CARBON 6.8K 5% 1/4W F	
R456	1-249-425-11	CARBON 4.7K 5% 1/4W F		R737	1-249-419-11	CARBON 1.5K 5% 1/4W F	
R457	1-247-840-00	CARBON 2.4K 5% 1/4W				*****	
R458	1-247-828-11	CARBON 750 5% 1/4W					
R459	1-249-418-11	CARBON 1.2K 5% 1/4W F					
R501	1-249-422-11	CARBON 2.7K 5% 1/4W F					
R521	1-247-852-11	CARBON 7.5K 5% 1/4W					
R522	1-247-864-11	CARBON 24K 5% 1/4W					
R523	1-247-852-11	CARBON 7.5K 5% 1/4W					
R524	1-247-864-11	CARBON 24K 5% 1/4W					
R525	1-249-419-11	CARBON 1.5K 5% 1/4W F					

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

SENSOR TABLE MOTOR

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	1-647-362-11	SENSOR BOARD *****		△T201	1-423-993-11	TRANSFORMER, POWER (C365:E)	
		< CONNECTOR >		*****			
CN801	1-573-383-11	PIN, CONNECTOR (PC BOARD) 2P				ACCESSORIES & PACKING MATERIALS *****	
CN802	1-750-243-11	SOCKET, CONNECTOR 6P				1-467-123-11	REMOTE COMMANDER (RM-D335) (C365)
		< DIODE >				1-558-271-11	CORD, CONNECTION (AUDIO 108cm)
D801	8-749-924-18	DIODE PHOTO INTERRUPTER RPI-1391				3-759-798-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH, CHINESE)
D802	8-749-924-30	DIODE PHOTO REFLECTOR GP2S28					(C265:CND, AEP, UK/C365:CND, AEP, UK, E, MY, SP)
		< RESISTOR >				3-759-798-21	MANUAL, INSTRUCTION (ENGLISH) (US, AUS)
R801	1-249-416-11	CARBON 820 5% 1/4W F				3-759-798-41	MANUAL, INSTRUCTION (GERMAN, ITALIAN, DUTCH, PORTUGUESE)
R802	1-249-406-11	CARBON 120 5% 1/4W F					(C265:AEP, G/C365:AEP, G, MY, SP)
*****						3-759-798-91	MANUAL, INSTRUCTION (DANISH, FINNISH, SWEDISH) (AEP)
*	1-650-082-11	TABLE MOTOR BOARD *****		*	4-949-235-01	HOOK	
		< MOTOR >		*	4-959-044-01	COVER, BATTERY (for RM-D335) (C365)	
M802	A-4353-974-A	MOTOR ASSY, ROTARY (TABLE)		*	4-965-249-01	CUSHION (FRONT)	
*****				*	4-965-250-01	CUSHION (REAR)	
		MISCELLANEOUS *****		*	4-972-155-01	INDIVIDUAL CARTON (C265:US, CND, AUS)	
7	1-751-053-11	WIRE (FLAT TYPE) (33 CORE)		*	4-972-156-01	INDIVIDUAL CARTON (C265:AEP, UK, G)	
9	1-751-054-11	WIRE (FLAT TYPE) (10 CORE)		*	4-972-157-01	INDIVIDUAL CARTON (C365:US, CND, E, AUS)	
△59	1-575-042-21	CORD, POWER (US, CND)		*	4-972-158-01	INDIVIDUAL CARTON (C365:AEP, UK, G, MY, SP)	
△59	1-575-651-21	CORD, POWER (C265:AEP, G/C365:AEP, G, MY, SP)		*****			
△59	1-696-027-11	CORD, POWER (C365:E)				HARDWARE LIST *****	
△59	1-696-845-11	CORD, POWER (AUS)		#1	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
△59	1-751-529-11	CORD, POWER (UK)		#2	7-682-548-04	SCREW +BVIT 3X8 (S)	
△68	1-569-007-11	ADAPTER, CONVERSION 2P (C365:E)		#3	7-685-648-79	SCREW (M3X12), TAPPING	
75	1-751-052-11	WIRE (FLAT TYPE) (6 CORE)		#4	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
105	1-466-996-11	ENCODER, ROTARY		#5	7-621-772-00	SCREW +B 2X3	
* 109	1-648-409-11	PC BOARD, FLEXIBLE		#6	7-685-134-19	SCREW +PTPWH 2.6X8 (TYPE2)	
* 111	1-452-538-11	MAGNET		#7	7-621-255-15	SCREW +P 2X3	
* 125	1-573-047-11	PIN, CONNECTOR (PC BOARD) 2P		#8	7-621-849-00	SCREW, TAPPING	
△751	8-848-144-11	OPTICAL PICK-UP KSS-240A		#9	7-685-871-01	SCREW +BVIT 3X6 (S)	
752	1-575-001-11	WIRE, FLAT TYPE (12 CORE)					
M101	X-4917-504-1	MOTOR ASSY (SLED)					
M102	X-4917-523-4	BASE (OUTSERT) ASSY (SPINDLE MOTOR)					
M801	A-4353-974-A	MOTOR ASSY, LOADING					
M802	A-4660-525-A	MOTOR ASSY, ROTARY (TABLE)					
S101	1-572-085-11	SWITCH, LEAF (LIMIT)					
△S201	1-572-675-11	SWITCH, POWER VOLTAGE CHANGE (C365:E)					
△T201	1-423-872-11	TRANSFORMER, POWER (US, CND)					
△T201	1-423-992-11	TRANSFORMER, POWER (C265:AEP, UK, G, AUS/C365:AEP, UK, G, MY, SP, AUS)					

<p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	---

CDP-C265 / C365

SONY® SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
Australian Model
CDP-C265/C365
E Model
CDP-C365

SUPPLEMENT-1

File this supplement with the service manual.

Subject : 1. SERVICE PARTS CHANGED
2. Addition to the CDP-C365 (Chinese model)
3. BD BOARD Circuit change
4. ELECTRICAL BLOCK CHECKING change (BU-5BD23)

(ENG-95005, ECN-CD500193)

- As for CDP-C365 (Chinese model), refer to CDP-C365 (AEP model).
Refer to the following "Difference Table" for differences.
- The two of base unit BU-5BD13 and BU-5BD23 in the CD section are used for this model.
Refer to this service manual supplement-1 for the BD board of a set used BU-5BD23, and to the service manual is issued previously for the BD board of a set used BU-5BD13.

EXPLODED VIEWS

NOTE:

- Items marked “ * ” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SERVICE PARTS CHANGED

Page	FORMER			NEW		
	<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>
29	* 109	1-648-409-11	PC BOARD, FLEXIBLE	* 109	1-655-696-11	PC BOARD, FLEXIBLE
	115	4-934-375-11	GEAR (LOADING B)	115	4-934-375-01	GEAR (LOADING B)
	M801	A-4353-974-A	MOTOR ASSY, LOADING	M801	A-4604-847-A	MOTOR ASSY, LOADING

Addition to the CDP-C365 (Chinese model) DIFFERENCE TABLE

Page	CDP-C365 (AEP model)			CDP-C365 (Chinese model)		
	<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>
28	* 71	4-971-080-01	PANEL, BACK	* 71	4-971-532-51	PANEL, BACK
35		3-759-798-41	MANUAL, INSTRUCTION (GERMAN, ITALIAN, DUTCH, PORTUGUESE)			Not supplied.
	*	4-972-158-01	INDIVIDUAL CARTON	*	4-972-157-01	INDIVIDUAL CARTON

ELECTRICAL PARTS CHANGED


Page	FORMER			NEW		
	<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>
33		** MAIN BOARD **			** MAIN BOARD **	
	IC401	8-752-861-78	IC CXP82316-050Q	IC401	8-752-864-88	IC CXP82316-056Q

ELECTRICAL BLOCK CHECKING (for BU-5BD23)

Note :

1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.


S Curve Check

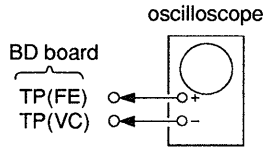

Procedure :


1. Connect oscilloscope to test point TP (FE) on BD board.
2. Connect between test point TP (FEI) and TP (VC) by lead wire.
3. Turned Power switch on.
4. Put disc (YEDS-18) in and turned Power switch on again and actuate the focus search. (actuate the focus search when disc table is moving in and out.)
5. Check the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3±1Vp-p.

S-curve waveform

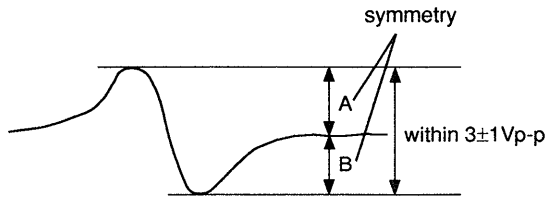

6. After check, remove the lead wire connected in step 2.
- Note :**
- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
 - Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

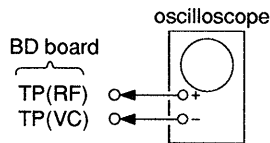

Procedure :


1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turned Power switch on.

3. Put disc (YEDS-18) in to play the number five track.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.


Note :

A clear RF signal waveform means that the shape “◇” can be clearly distinguished at the center of the waveform.

RF signal waveform

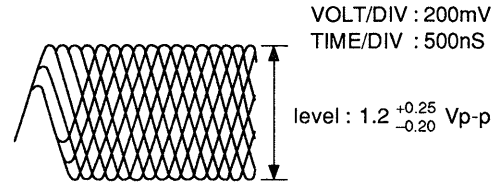


E-F Balance Check

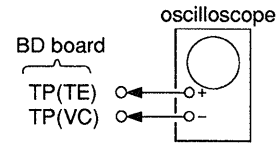

Procedure :


1. Connect test point TP (ADJ) to ground with lead wire.
2. Connect oscilloscope to test point TP (TE) on BD board.
3. Turned Power switch on.
4. Put disc (YEDS-18) in to play the number five track.
5. Press the “3” button. (The tracking servo and the sledding servo are turned OFF.)
6. Check the level B of the oscilloscope’s waveform and the A (DC voltage) of the center of the Traverse waveform. Confirm the following :
 $A/B \times 100 = \text{less than } \pm 20\%$.

Traverse waveform

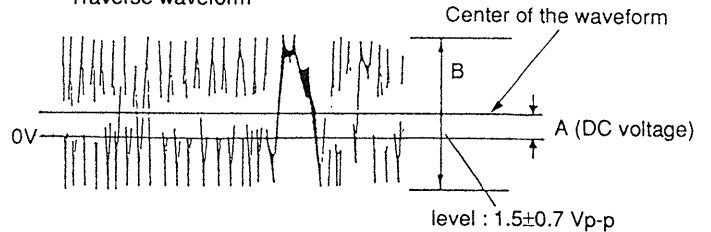

7. Press the “8” button. (The tracking servo and sledding servo are turned ON.) Confirm the C (DC voltage) is almost equal to the A (DC voltage) in step 6.

Traverse waveform

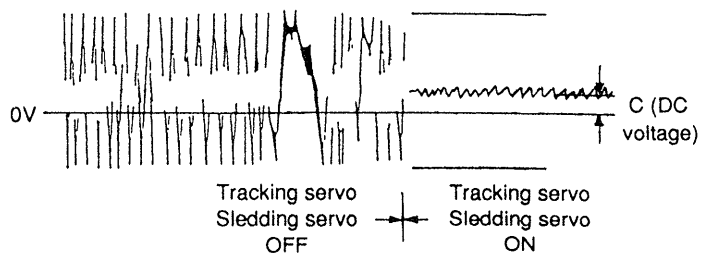


8. Disconnect the laed wire of TP (ADJ) connected in step 1.

RF PLL Free-run Frequency Check

Procedure :


1. Connect frequency counter to test point (PLCK) with lead wire.

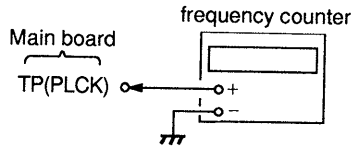


2. Turned Power switch on.
3. Put the disc (YEDS-18) in to play the number five track. Confirm that reading on frequency counter is 4.3218MHz.

Adjustment Location :

[MAIN BOARD] — Conductor Side —

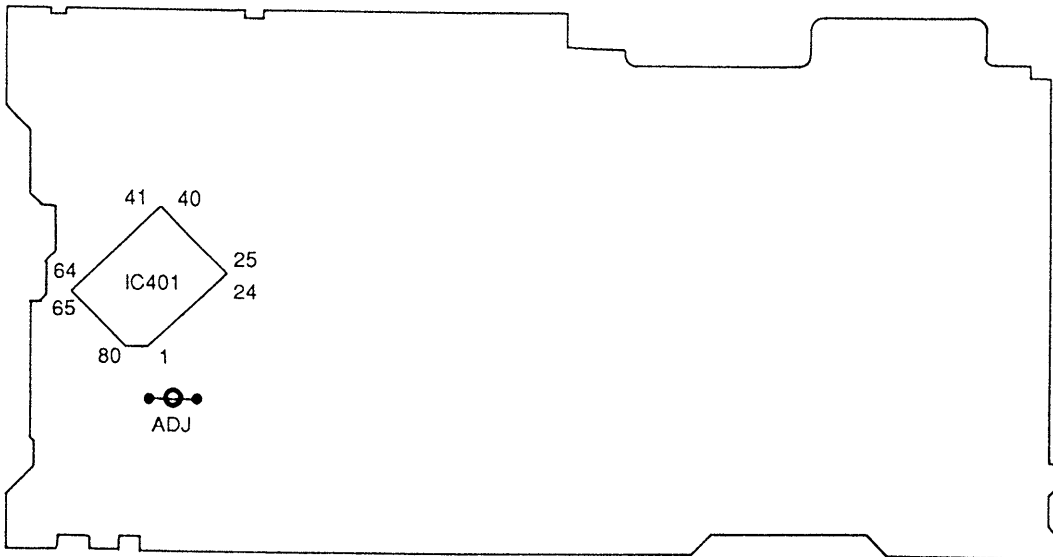

[BD BOARD] — SIDE A —

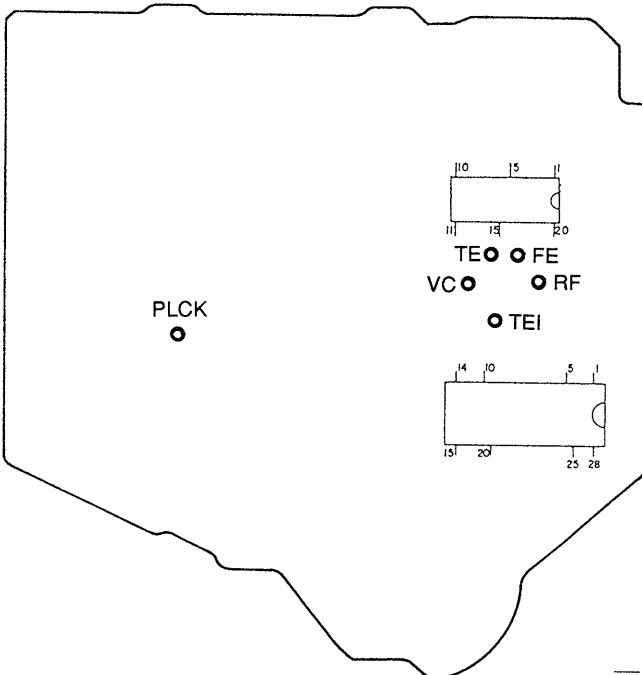

BU-5BD23 DIFFERENCE TABLE

Page	BU-5BD13			BU-5BD23		
	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
30	△751	8-848-144-11	OPTICAL PICK-UP KSS-240A	△751	8-848-387-11	OPTICAL PICK-UP KSS-213BA/S-N
	752	1-575-001-11	WIRE, FLAT TYPE (12 CORE)	752	1-769-069-11	WIRE (FLAT TYPE) (16 CORE)
	757	A-4649-890-A	BD BOARD, COMPLETE	757	A-4673-515-A	BD BOARD, COMPLETE

- **Base Unit Change**

As the base unit BU-5BD13 has changed to BU-5BD23, IC401 of the MAIN BOARD has changed.



The interchangeability between IC401 and BD BOARD is as below:

		MAIN BOARD IC401	
		FORMER	NEW
		8-752-861-78 CXP82316-050Q	8-752-864-88 CXP82316-056Q
Base Unit Type	BU-5BD13	○	○
	BU-5BD23	×	○

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.


Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

SCHEMATIC DIAGRAM
 • See page 11 for IC Block Diagrams.
 • See page 12 for IC Pin Function. (IC101)

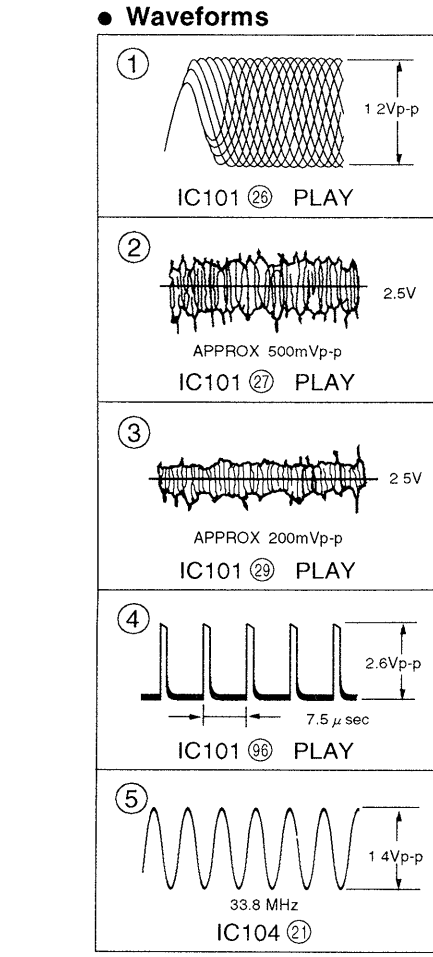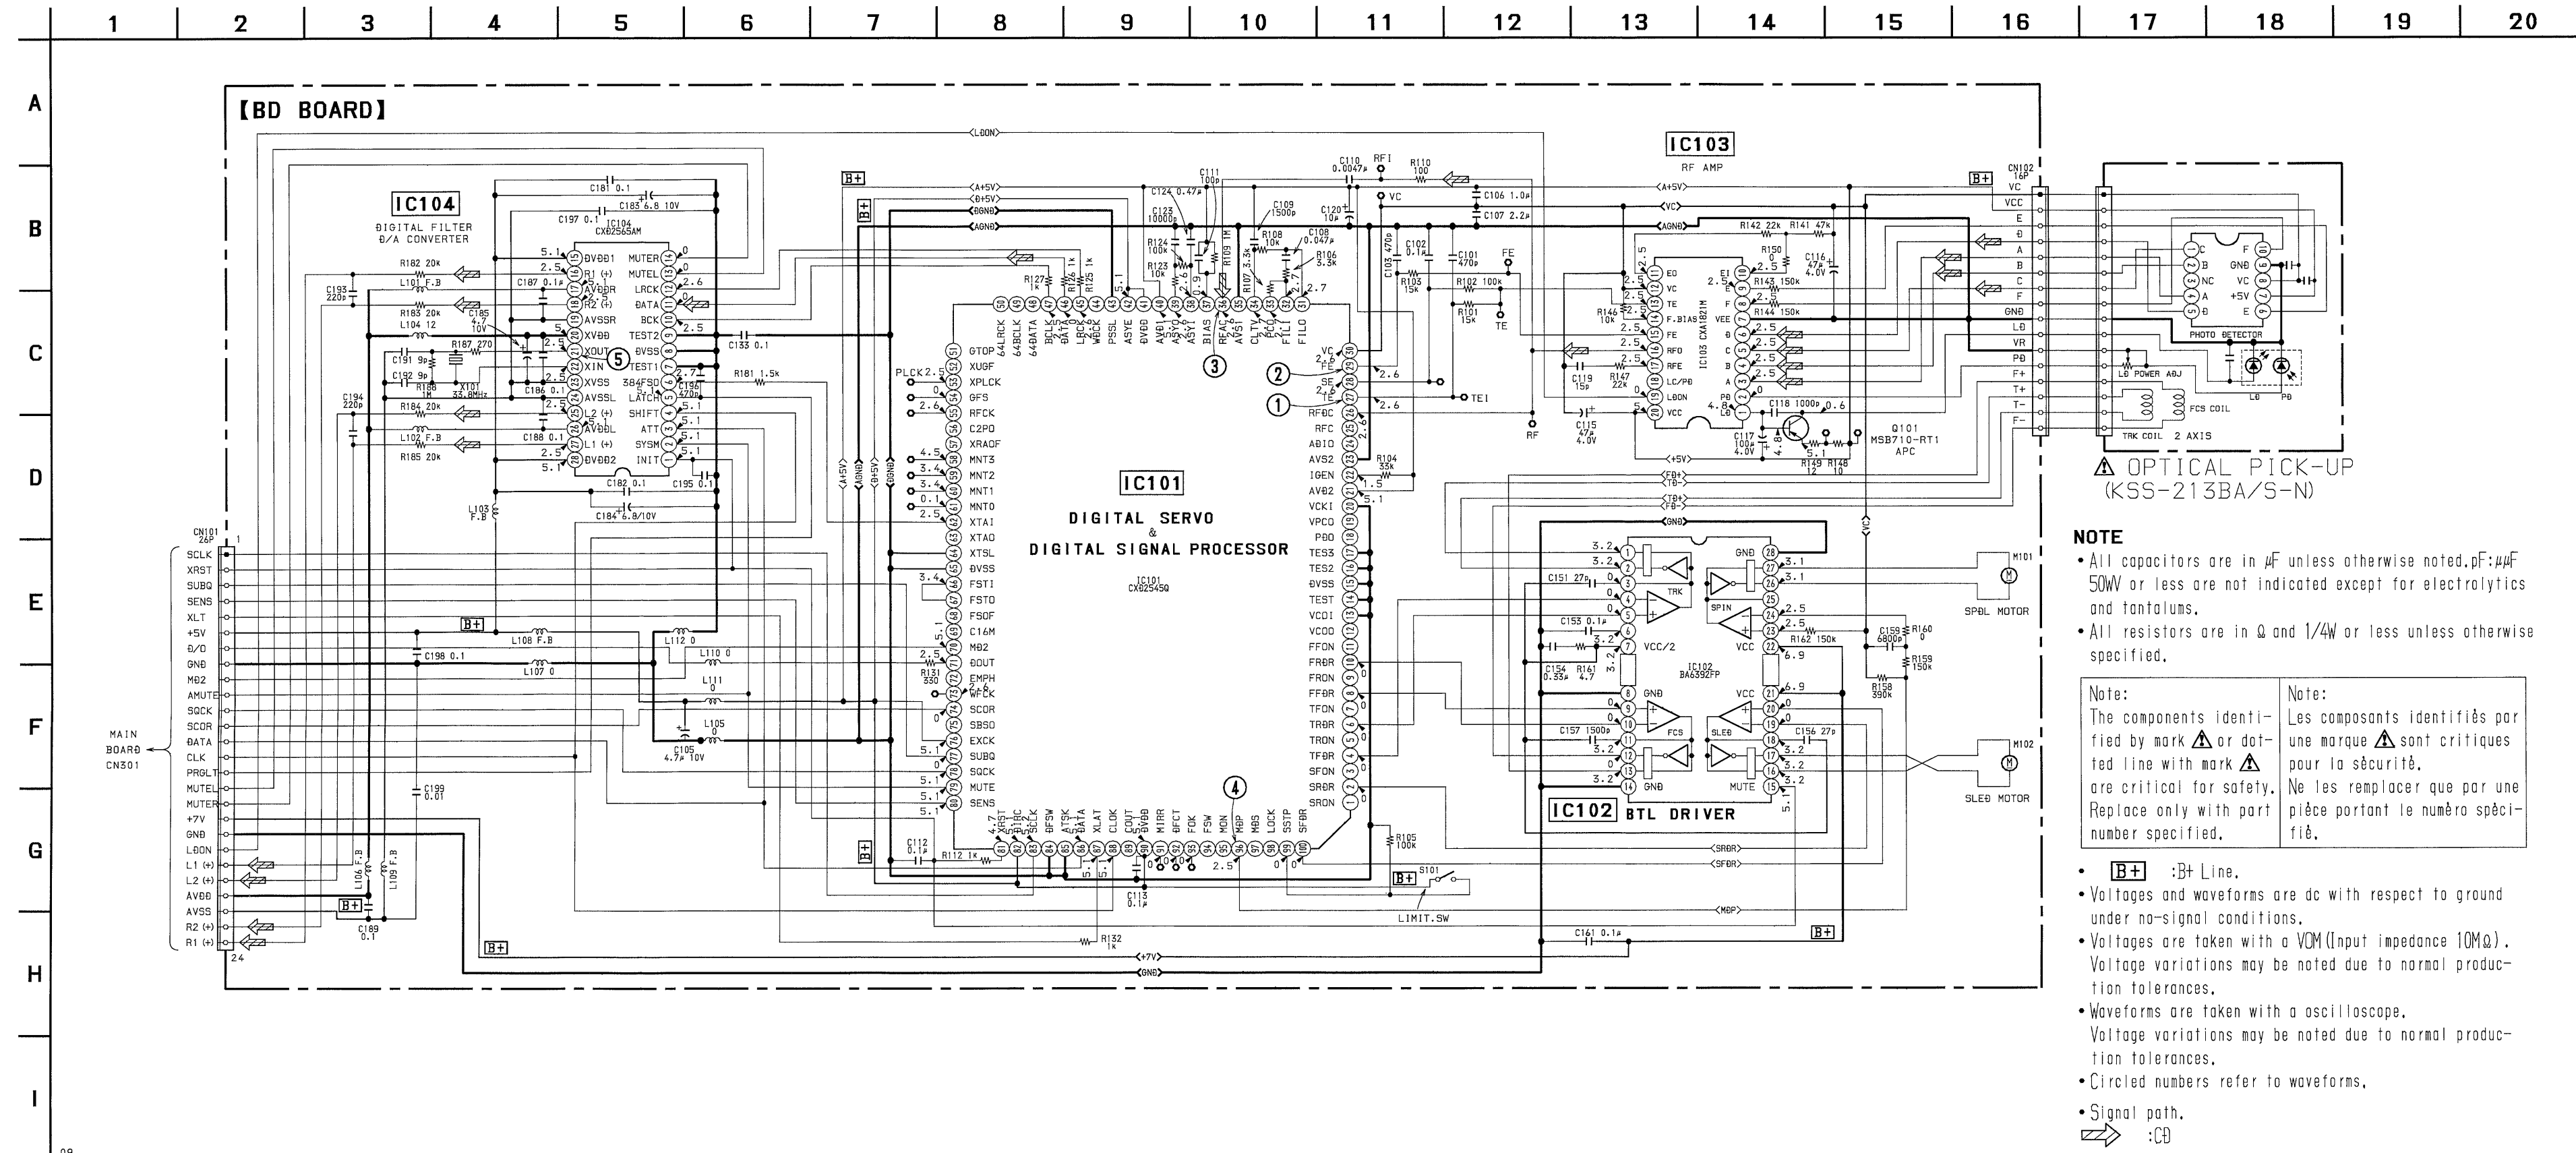

DIAGRAMS

PRINTED WIRING BOARD

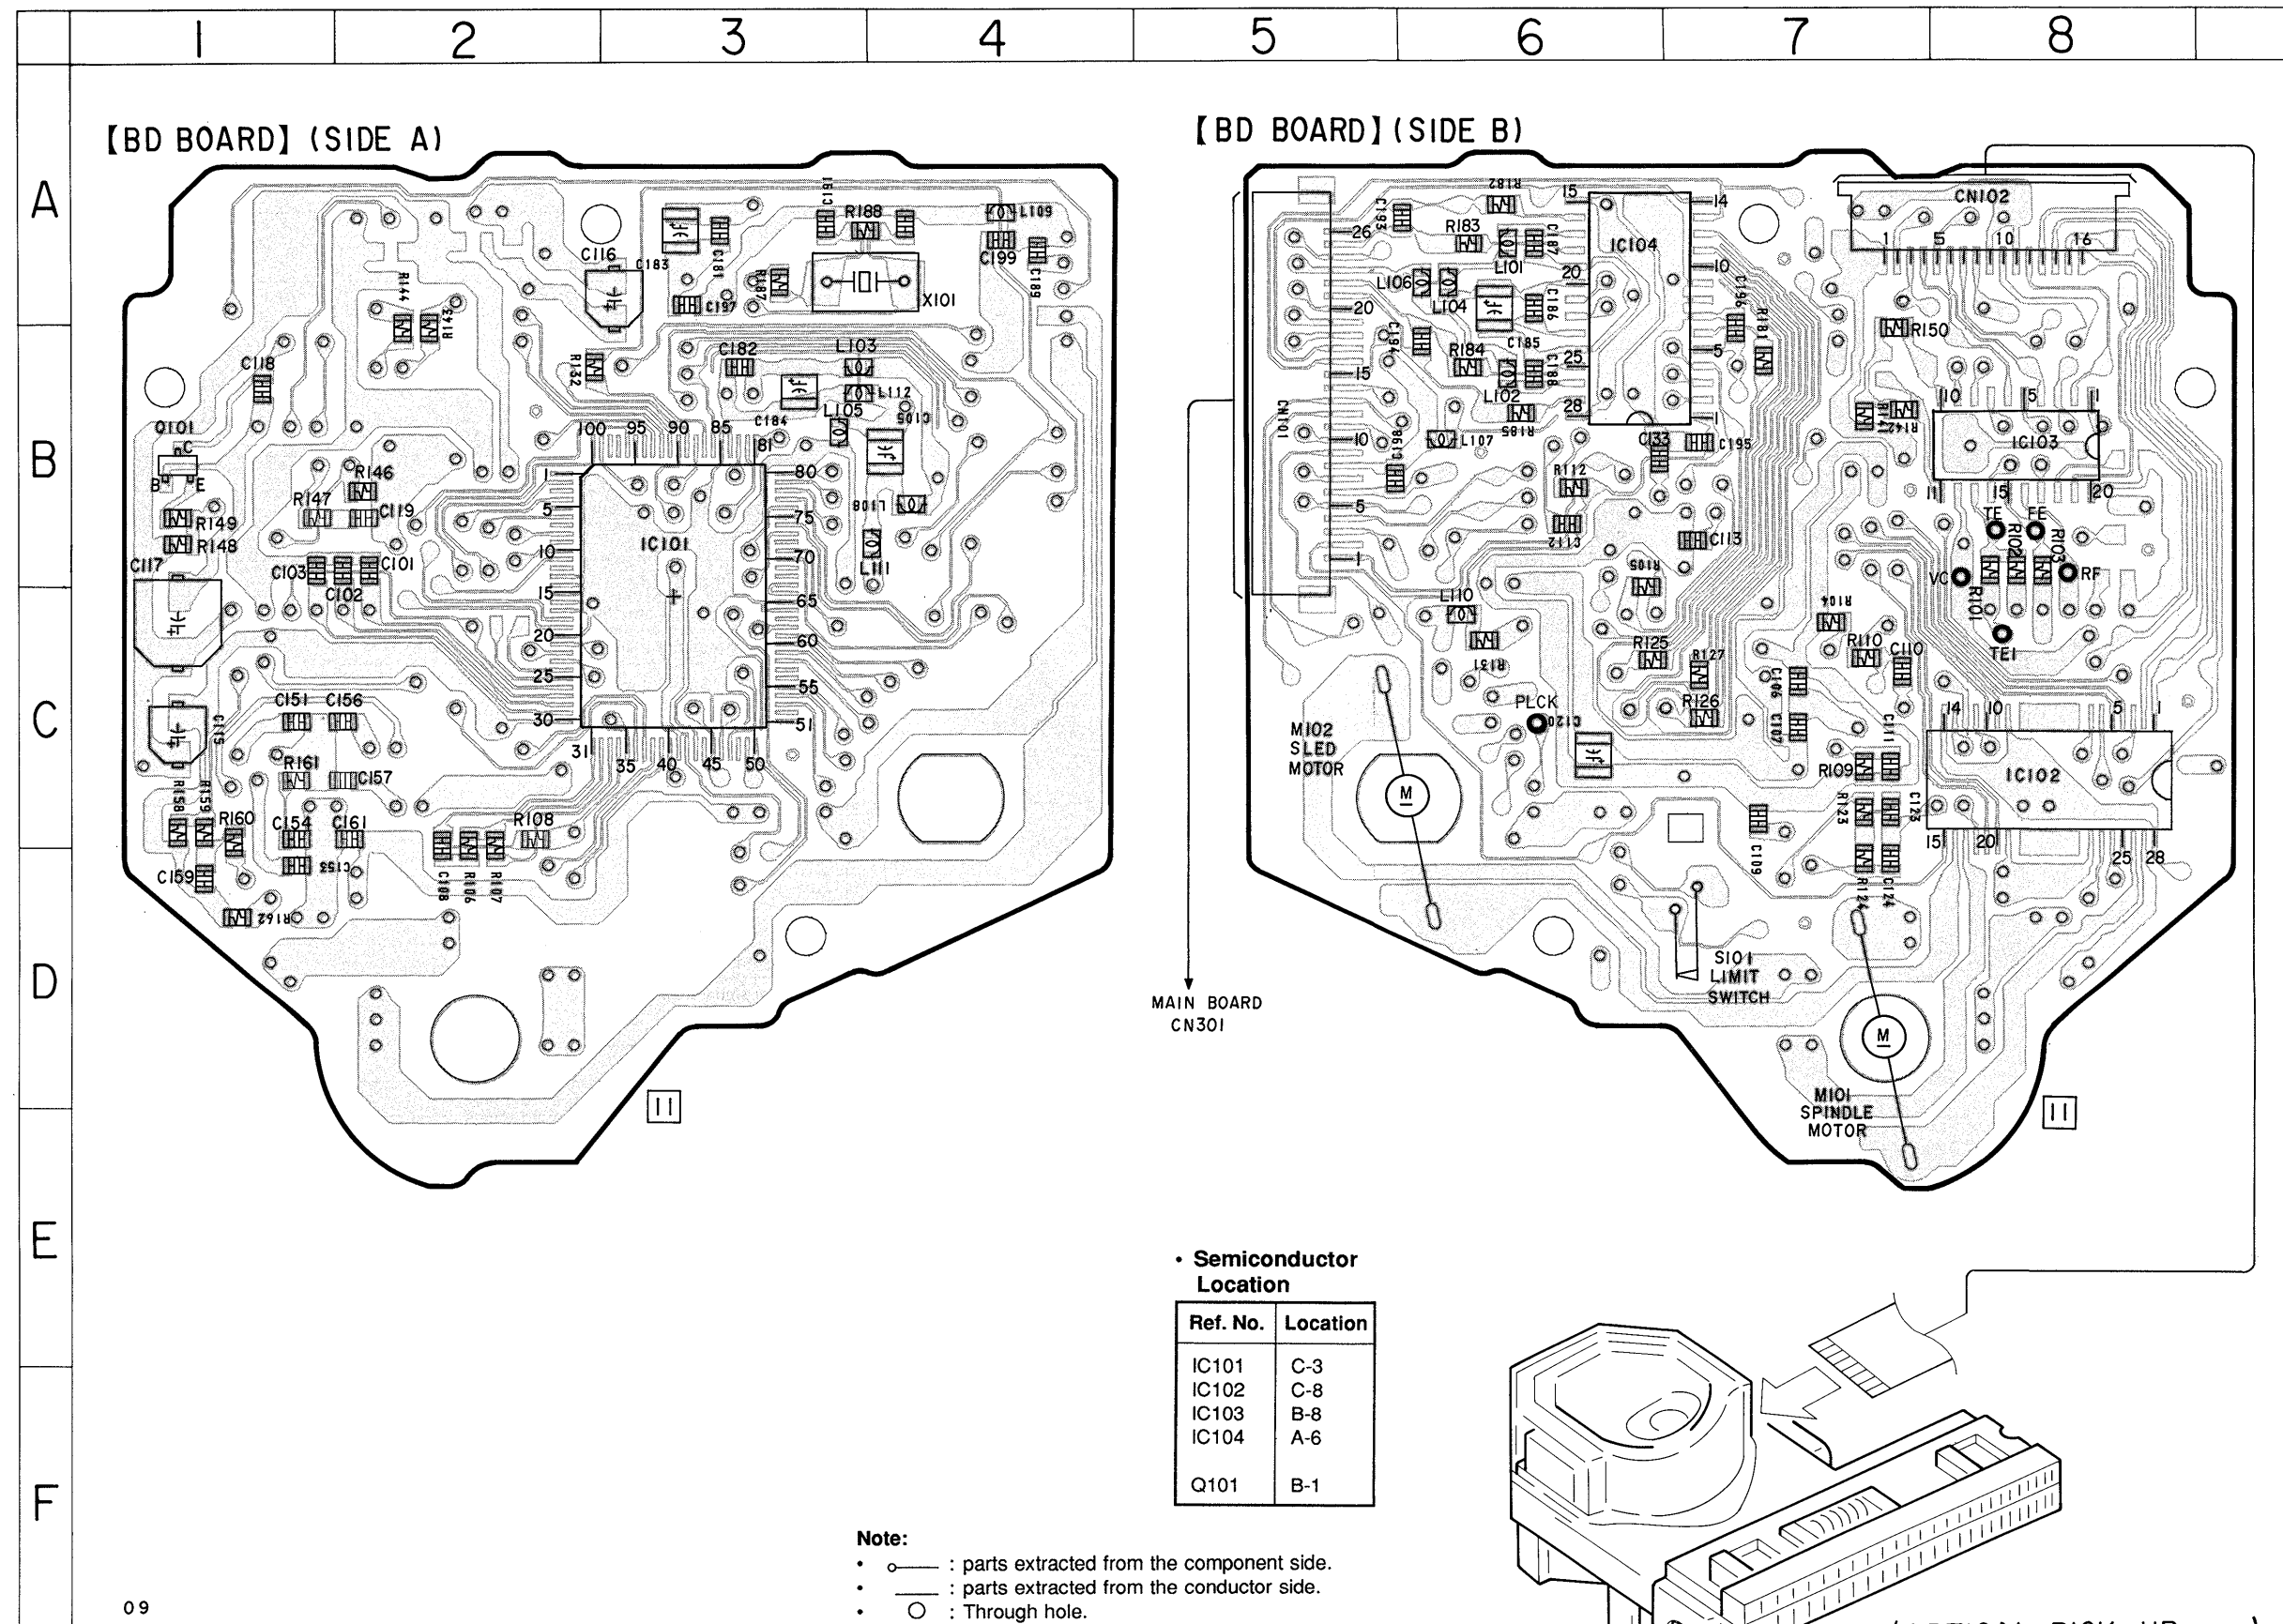


MAIN BOARD
CN301

• Semiconductor Location

Ref. No.	Location
IC101	C-3
IC102	C-8
IC103	B-8
IC104	A-6
Q101	B-1


Note:
 • ○ : parts extracted from the component side.
 • — : parts extracted from the conductor side.
 • ○ : Through hole.
 • □ : Pattern from the side which enable seeing.
 (The other layer's patterns are not indicated.)

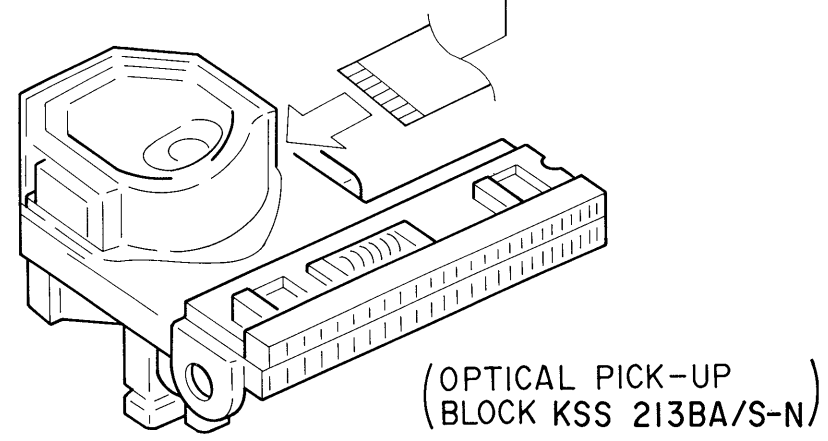


(OPTICAL PICK-UP
BLOCK KSS 213BA/S-N)

IC BLOCK DIAGRAMS


IC101 CXD2545Q

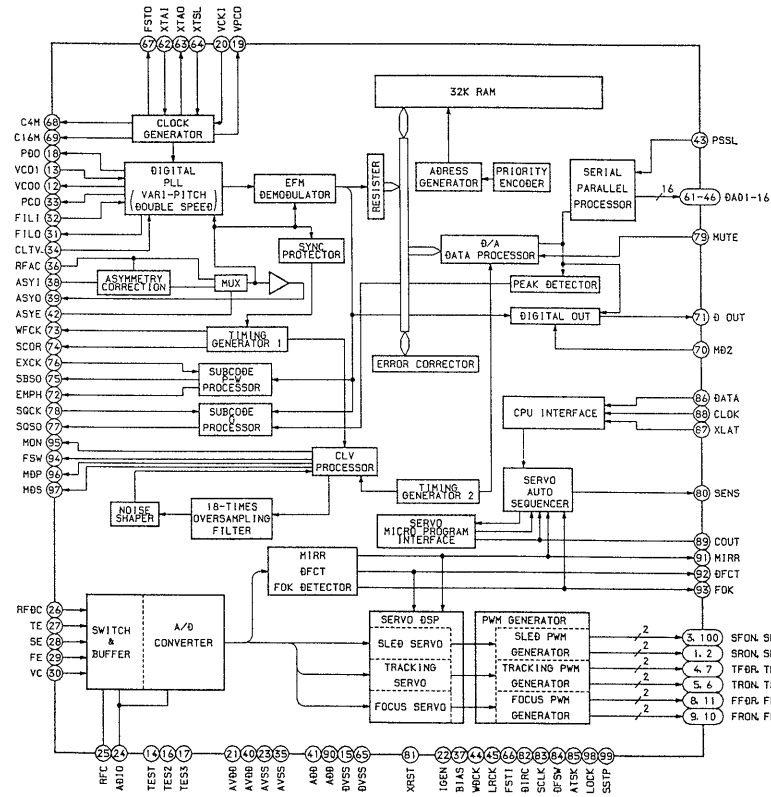


IC103 CXA1821M

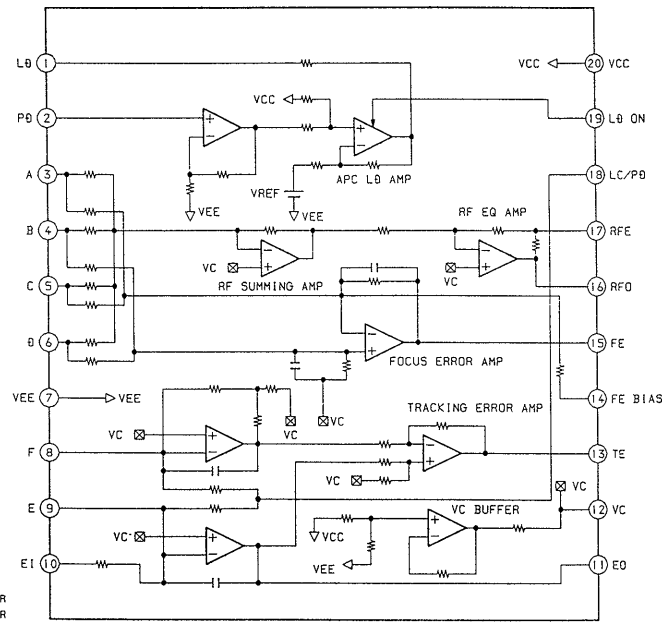

IC102 BA6392FP

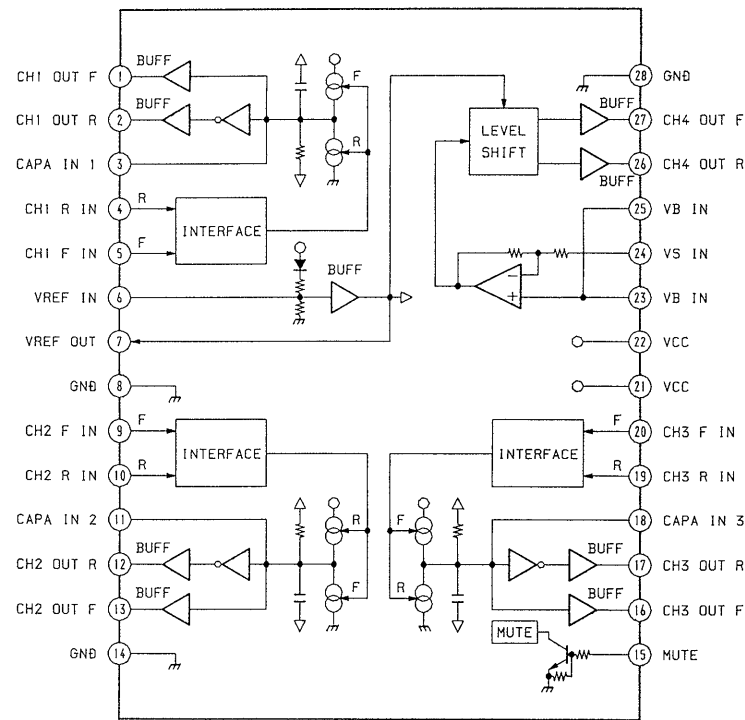

IC104 CXD2565AM

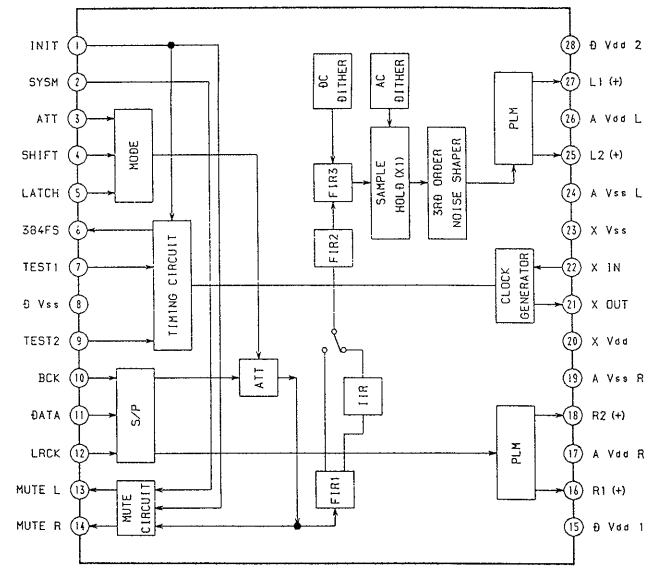

IC PIN FUNCTION

• IC101 (CXD2545Q)

Pin No.	Pin Name	I/O	Function
1	SRON	O	Sled drive output (Not used)
2	SRDR	O	Sled drive output
3	SFON	O	Sled drive output (Not used)
4	TFDR	O	Tracking drive output
5	TRON	O	Tracking drive output (Not used)
6	TRDR	O	Tracking drive output
7	TFON	O	Tracking drive output (Not used)
8	FFDR	O	Focus drive output
9	FRON	O	Focus drive output (Not used)
10	FRDR	O	Focus drive output
11	FFON	O	Focus drive output (Not used)
12	VCOO	O	VCO output for analog EFM PLL (Not used)
13	VCOI	I	VCO output for analog EFM PLL (GND)
14	TEST	I	TEST pin connected normally to GND
15	DVss	-	Digital GND
16	TES2	I	TEST pin connected normally to GND
17	TES3	I	TEST pin connected normally to GND
18	PDO	O	Charge-pump output for analog EFM PLL (Not used)
19	VPCO	O	Charge-pump output for variable pitch PLL (Not used)
20	VCKI	I	Clock input from variable pitch external VCO (GND)
21	AVD2	-	Analog power supply
22	IGEN	I	Power supply pin for operational amplifiers
23	AVS2	-	Analog GND
24	ADIO	I	(Not used)
25	RFC	O	(Not used)
26	RFDC	I	RF signal input
27	TE	I	Tracking error signal input
28	SE	I	Sled error signal input
29	FE	I	Focus error signal input
30	VC	I	Center voltage input pin
31	FILO	O	Filter output for master PLL
32	FILI	I	Filter input for master PLL
33	PCO	O	Charge-pump output for master PLL
34	CLTV	I	Control voltage input for master VCO
35	AVS1	-	Analog GND
36	RFAC	I	EFM signal input
37	BIAS	I	Asymmetry circuit constant current input
38	ASYI	I	Asymmetry compare voltage input
39	ASYO	O	EFM full swing output
40	AVD1	-	Analog power supply

Pin No.	Pin Name	I/O	Function
41	DVDD	–	Digital power supply
42	ASYE	I	Asymmetry circuit ON/OFF
43	PSSL	I	Audio data output mode selection input (GND)
44	WDCK	O	48-bit slot D/A interface. Word clock (Not used)
45	LRCK	O	48-bit slot D/A interface. LR clock
46	DATA	O	DA 16 output when PSSL=1. 48-bit slot serial data when PSSL=0
47	BCLK	O	DA 15 output when PSSL=1. 48-bit slot data when PSSL=0
48	64DATA	O	DA 14 output when PSSL=1. 64-bit slot data when PSSL=0 (Not used)
49	64BCLK	O	DA 13 output when PSSL=1. 64-bit slot data when PSSL=0 (Not used)
50	64LRCK	O	DA 12 output when PSSL=1. 64-bit slot data when PSSL=0 (Not used)
51	GTOP	O	DA 11 output when PSSL=1. GTOP output when PSSL=0 (Not used)
52	XUGF	O	DA 10 output when PSSL=1. XUGF output when PSSL=0 (Not used)
53	XPLCK	O	DA 09 output when PSSL=1. XPLCK output when PSSL=0
54	GFS	O	DA 08 output when PSSL=1. GFS output when PSSL=0
55	RFCK	O	DA 07 output when PSSL=1. RFCK output when PSSL=0
56	C2PO	O	DA 06 output when PSSL=1. C2PO output when PSSL=0 (Not used)
57	XRAOF	O	DA 05 output when PSSL=1. XRAOF output when PSSL=0 (Not used)
58	MNT3	O	DA 04 output when PSSL=1. MNT3 output when PSSL=0
59	MNT2	O	DA 03 output when PSSL=1. MNT2 output when PSSL=0
60	MNT1	O	DA 02 output when PSSL=1. MNT1 output when PSSL=0
61	MNT0	O	DA 01 output when PSSL=1. MNT0 output when PSSL=0
62	XTAI	I	X'tal oscillator circuit input
63	XTAO	O	X'tal oscillator circuit output (Not used)
64	XTSL	I	X'tal selection input pin (GND)
65	DVss	–	Digital GND
66	FSTI	I	2/3 divider output of pins 62, 63
67	FSTO	O	2/3 divider output of pins 62, 63
68	FSOF	O	(Not used)
69	C16M	O	16.9344 MHz output (Not used)
70	MD2	I	Digital-out ON/OFF control pin (+5V)
71	DOUT	O	Digital-out output pin
72	EMPH	O	Playback disc output in emphasis mode (Not used)
73	WFCK	O	WFCK output
74	SCOR	O	Sub-code sync output
75	SBSO	O	Sub-P through Sub-W serial output (Not used)
76	EXCK	I	Clock input for SBS0 read-out (+5V)
77	SUBQ	O	Sub-Q 80-bit output
78	SQCK	I	Clock input for SQS0 read-out
79	MUTE	I	Muting selection pin
80	SENS	O	SENS output
81	XRST	I	System reset
82	DIRC	I	Used in 1-track jump mode (+5V)
83	SCLK	I	SENS serial data read-out clock
84	DFSW	I	DFCT selection pin (GND)
85	ATSK	I	Input pin for anti-shock (GND)

Pin No.	Pin Name	I/O	Function
86	DATA	I	Serial data input, supplied from CPU
87	XLAT	I	Latch input, supplied from CPU
88	CLOCK	I	Serial data transfer clock input, supplied from CPU
89	COUT	O	Numbers of track counted signal output (Not used)
90	DVDD	—	Digital power supply
91	MIRR	O	Mirror signal output
92	DFCT	O	Defect signal output
93	FOK	O	Focus OK output
94	FSW	O	Output to select spindle motor output filter (Not used)
95	MON	O	Output to control ON/OFF of spindle motor (Not used)
96	MDP	O	Output to control spindle motor servo
97	MDS	O	Output to control spindle motor servo (Not used)
98	LOCK	O	GFS is sampled by 460 Hz. H when GFS is H (Not used)
99	SSTP	I	Input signal to detect disc inner most track
100	SFDR	O	Sled drive output

ELECTRICAL PARTS LIST

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable

- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
uPC...: μ PC..., uPD...: μ PD...
- CAPACITORS
uF : μ F
- COILS
uH : μ H

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-4673-515-A	BD BOARD, COMPLETE *****		C192	1-163-092-00	CERAMIC CHIP 9PF	0.25PF 50V
		< CAPACITOR >		C193	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C101	1-163-005-11	CERAMIC CHIP 470PF	10% 50V	C194	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C102	1-163-038-11	CERAMIC CHIP 0.1uF	25V	C195	1-163-038-11	CERAMIC CHIP 0.1uF	25V
C103	1-163-005-11	CERAMIC CHIP 470PF	10% 50V	C196	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
C105	1-135-155-21	TANTALUM CHIP 4.7uF	10% 16V	C197	1-163-038-11	CERAMIC CHIP 0.1uF	25V
C106	1-164-346-11	CERAMIC CHIP 1uF	16V	C198	1-163-038-11	CERAMIC CHIP 0.1uF	25V
C107	1-164-505-11	CERAMIC CHIP 2.2uF	16V	C199	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C108	1-163-035-00	CERAMIC CHIP 0.047uF	50V			< CONNECTOR >	
C109	1-163-011-11	CERAMIC CHIP 0.0015uF	10% 50V	CN102	1-770-014-11	CONNECTOR, FFC/FPC 16P	
C110	1-163-017-00	CERAMIC CHIP 0.0047uF	5% 50V			< IC >	
C111	1-163-251-11	CERAMIC CHIP 100PF	5% 50V	IC101	8-752-369-78	IC CXD2545Q	
C112	1-163-038-11	CERAMIC CHIP 0.1uF	25V	IC102	8-759-176-09	IC BA6392FP	
C113	1-163-038-11	CERAMIC CHIP 0.1uF	25V	IC103	8-752-072-45	IC CXA1821M	
C115	1-126-607-11	ELECT CHIP 47uF	20% 4V	IC104	8-752-367-61	IC CXD2565AM	
C116	1-126-607-11	ELECT CHIP 47uF	20% 4V			< COIL >	
C117	1-126-209-11	ELECT 100uF	20% 4V	L101	1-414-234-11	INDUCTOR, FERRITE BEAD	
C118	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	L102	1-414-234-11	INDUCTOR, FERRITE BEAD	
C119	1-163-097-00	CERAMIC CHIP 15PF	5% 50V	L103	1-414-234-11	INDUCTOR, FERRITE BEAD	
C120	1-135-157-21	TANTALUM CHIP 10uF	20% 6.3V	L104	1-216-003-11	METAL GLAZE 12 5%	1/10W
C123	1-164-232-11	CERAMIC CHIP 0.01uF	50V	L105	1-216-295-00	METAL CHIP 0 5%	1/10W
C124	1-164-005-11	CERAMIC CHIP 0.47uF	25V	L106	1-414-234-11	INDUCTOR, FERRITE BEAD	
C133	1-163-038-11	CERAMIC CHIP 0.1uF	25V	L107	1-216-295-00	METAL CHIP 0 5%	1/10W
C151	1-163-237-11	CERAMIC CHIP 27PF	5% 50V	L108	1-414-234-11	INDUCTOR, FERRITE BEAD	
C153	1-163-038-11	CERAMIC CHIP 0.1uF	25V	L109	1-414-234-11	INDUCTOR, FERRITE BEAD	
C154	1-164-336-11	CERAMIC CHIP 0.33uF	25V	L110	1-216-295-00	METAL CHIP 0 5%	1/10W
C156	1-163-237-11	CERAMIC CHIP 27PF	5% 50V	L111	1-216-295-00	METAL CHIP 0 5%	1/10W
C157	1-163-011-11	CERAMIC CHIP 0.0015uF	10% 50V	L112	1-216-295-00	METAL CHIP 0 5%	1/10W
C159	1-163-019-00	CERAMIC CHIP 0.0068uF	10% 50V			< MOTOR >	
C161	1-163-038-11	CERAMIC CHIP 0.1uF	25V	M101	X-4917-523-4	BASE (OUTSERT) ASSY (SPINDLE)	
C181	1-163-038-11	CERAMIC CHIP 0.1uF	25V	M102	X-4917-504-1	MOTOR ASSY (SLED)	
C182	1-163-038-11	CERAMIC CHIP 0.1uF	25V			< TRANSISTOR >	
C183	1-135-156-21	TANTALUM CHIP 6.8uF	10% 10V	Q101	8-729-118-01	TRANSISTOR 2SB1116-K	
C184	1-135-156-21	TANTALUM CHIP 6.8uF	10% 10V				
C185	1-135-155-21	TANTALUM CHIP 4.7uF	10% 16V				
C186	1-163-038-11	CERAMIC CHIP 0.1uF	25V				
C187	1-163-038-11	CERAMIC CHIP 0.1uF	25V				
C188	1-163-038-11	CERAMIC CHIP 0.1uF	25V				
C189	1-163-038-11	CERAMIC CHIP 0.1uF	25V				
C191	1-163-092-00	CERAMIC CHIP 9PF	0.25PF 50V				

BD

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>				<u>Remark</u>
< RESISTOR >						
R101	1-216-077-00	METAL CHIP	15K	5%		1/10W
R102	1-216-097-00	METAL CHIP	100K	5%		1/10W
R103	1-216-077-00	METAL CHIP	15K	5%		1/10W
R104	1-216-085-00	METAL CHIP	33K	5%		1/10W
R105	1-216-097-00	METAL CHIP	100K	5%		1/10W
R106	1-216-061-00	METAL CHIP	3.3K	5%		1/10W
R107	1-216-061-00	METAL CHIP	3.3K	5%		1/10W
R108	1-216-073-00	METAL CHIP	10K	5%		1/10W
R109	1-216-121-91	METAL GLAZE	1M	5%		1/10W
R110	1-216-025-00	METAL CHIP	100	5%		1/10W
R112	1-216-049-00	METAL CHIP	1K	5%		1/10W
R123	1-216-073-00	METAL CHIP	10K	5%		1/10W
R124	1-216-097-00	METAL CHIP	100K	5%		1/10W
R125	1-216-049-00	METAL CHIP	1K	5%		1/10W
R126	1-216-049-00	METAL CHIP	1K	5%		1/10W
R127	1-216-049-00	METAL CHIP	1K	5%		1/10W
R131	1-216-037-00	METAL CHIP	330	5%		1/10W
R132	1-216-049-00	METAL CHIP	1K	5%		1/10W
R141	1-216-089-91	METAL GLAZE	47K	5%		1/10W
R142	1-216-081-00	METAL CHIP	22K	5%		1/10W
R143	1-216-101-00	METAL CHIP	150K	5%		1/10W
R144	1-216-101-00	METAL CHIP	150K	5%		1/10W
R146	1-216-073-00	METAL CHIP	10K	5%		1/10W
R147	1-216-081-00	METAL CHIP	22K	5%		1/10W
R148	1-216-001-00	METAL CHIP	10	5%		1/10W
R149	1-216-003-11	METAL GLAZE	12	5%		1/10W
R150	1-216-295-00	METAL CHIP	0	5%		1/10W
R158	1-216-111-91	METAL GLAZE	390K	5%		1/10W
R159	1-216-101-00	METAL CHIP	150K	5%		1/10W
R160	1-216-295-00	METAL CHIP	0	5%		1/10W
R161	1-216-308-00	METAL CHIP	4.7	5%		1/10W
R162	1-216-101-00	METAL CHIP	150K	5%		1/10W
R181	1-216-053-00	METAL CHIP	1.5K	5%		1/10W
R182	1-216-080-00	METAL CHIP	20K	5%		1/10W
R183	1-216-080-00	METAL CHIP	20K	5%		1/10W
R184	1-216-080-00	METAL CHIP	20K	5%		1/10W
R185	1-216-080-00	METAL CHIP	20K	5%		1/10W
R187	1-216-035-00	METAL CHIP	270	5%		1/10W
R188	1-216-121-91	METAL GLAZE	1M	5%		1/10W
< SWITCH >						
S101	1-572-085-11	SWITCH, LEAF (LIMIT SWITCH)				
< VIBRATOR >						
X101	1-579-904-11	VIBRATOR, CRYSTAL (33.8MHz)				
