


CDP-C500M

SERVICE MANUAL

*AEP Model
UK Model
E Model*

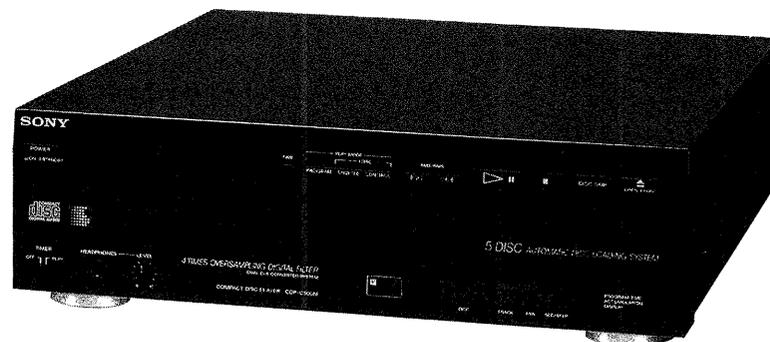

COMPACT
disc
DIGITAL AUDIO

SPECIFICATIONS

COMPACT DISC PLAYER

System	Compact disc digital audio system
Laser	Semiconductor laser ($\lambda = 780 \text{ nm}$) Emission duration: continuous
Laser output	Max. $44.6 \mu\text{W}^*$ * This output is the value measured at a distance of about 200 mm from the objective lens surface on the Optical Pick-up Block.
Frequency response	2 Hz - 20 kHz ($\pm 1 \text{ dB}$)
Signal to noise ratio	More than 100 dB
Dynamic range	More than 90 dB
Harmonic distortion	Less than 0.05% (1 kHz)
Channel separation	More than 95 dB (1 kHz)
Wow and flutter	Below measurable limit
Outputs	LINE OUT (phono jacks) Output level 2 V (at 50 kilohms) Load impedance over 10 kilohms PHONES (stereo phone jack) Output level 0 - 10 mW (variable) (at 32 ohms)

GENERAL

Power requirements	UK model : 240 V AC, 50 Hz AEP model : 220 V AC, 50/60 Hz E model : 110-120, 220-240 V AC adjustable, 50/60 Hz
Power consumption	10 W
Dimensions	Approx. $355 \times 105 \times 385 \text{ mm}$ (w/h/d) ($14 \times 4\frac{1}{4} \times 15\frac{1}{4}$ inches) not including projecting parts and controls
Weight	Approx. 5.1 kg (11.4 lb)

REMOTE COMMANDER (RM-D505)

Remote control system	Infrared control
Power requirements	3 V DC with two size AA (R6) batteries
Dimensions	Approx. $43 \times 20 \times 175 \text{ mm}$ (w/h/d) ($1\frac{11}{16} \times 1\frac{3}{16} \times 6\frac{15}{16}$ inches)
Weight	Approx. 110 g (4 oz) including batteries

SUPPLIED ACCESSORIES

Audio signal connecting cord
(phono plug X 2 \leftrightarrow phono plug X 2) (1)
Remote commander (1)
AC plug Adaptor (1) (for countries other than UK and EC only)
Sony SUM-3 (NS) batteries (2)
Operating Manual (1)

Design and specifications subject to change without notice.

COMPACT DISC PLAYER
SONY®

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
	Specifications	1		REFERENCE	
	Servicing Note	2		Focus/Tracking Gain Adjustment	6
1. GENERAL			4. DIAGRAMS		
	Location and Function of Controls	3	4-1.	Circuit Boards Location	8
2. DISASSEMBLY		4	4-2.	Semiconductor Lead Layouts	8
			4-3.	Printed Wiring Boards	9
3. ELECTRICAL ADJUSTMENTS			4-4.	Schematic Diagram	13
	RF PLL Frequency Adjustment/Lock		•	IC Block Diagrams	16
	Frequency Check	5	5. EXPLODED VIEWS		17
	E-F Balance Adjustment	5	6. ELECTRICAL PARTS LIST		21
	Focus Bias Adjustment	5	SUPPLEMENT-1 (BLOCK DIAGRAM)		25

SERVICING NOTE

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

Laser Diode Properties


- Material: GaAlAs
 - Wavelength: 780 nm
 - Emission Duration: continuous
 - Laser Output Power: less than 44.6 μ W*
- * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

During service, do not take the Optical Pick-up Block apart, and do not adjust the APC circuit. If there is a breakdown in the APC circuit (including laser diode), replace the entire Optical Pick-up Block (including APC board).

Note on the Transit Key

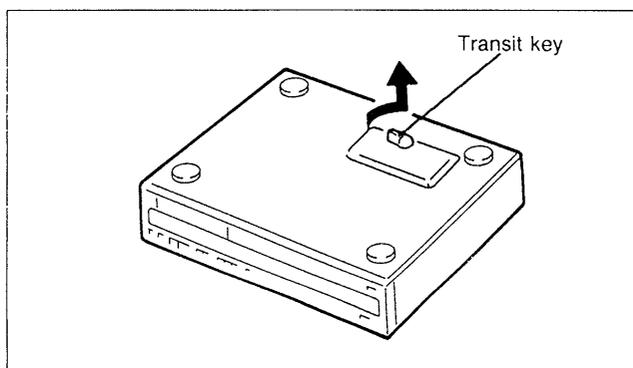

The white transit key on the bottom exterior of the unit protects the optical system against shock during transportation. Before operating the CD player, be sure to remove the key by following the instructions on the label, and store it in a safe place.

When transporting the unit, replace the key in its original hole and lock it in place.


SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 OUTLINE

1-1. LOCATION AND FUNCTION OF CONTROLS


Front Panel

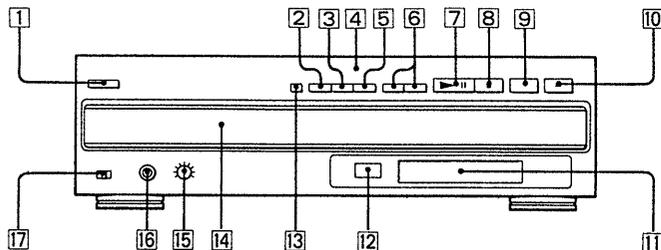

- 1 POWER switch
- 2 PROGRAM button
- 3 SHUFFLE button
- 4 1 DISC indicator
- 5 CONTINUE button
- 6 ◀▶ (AMS*/RMS**) buttons
- 7 ▶|| (play/pause) button
- 8 ■ (stop) button
- 9 DISC SKIP button
- 10 ▲ OPEN/CLOSE button
- 11 Display window
- 12 Remote sensor
- 13 TIME button
- 14 DISC tray
- 15 (headphone) LEVEL control
- 16 PHONES (headphones) jack
- 17 TIMER switch

* AMS is the abbreviation of Automatic Music Sensor.
 ** RMS is the abbreviation of Random Music Sensor.

REMOTE COMMANDER RM-D505

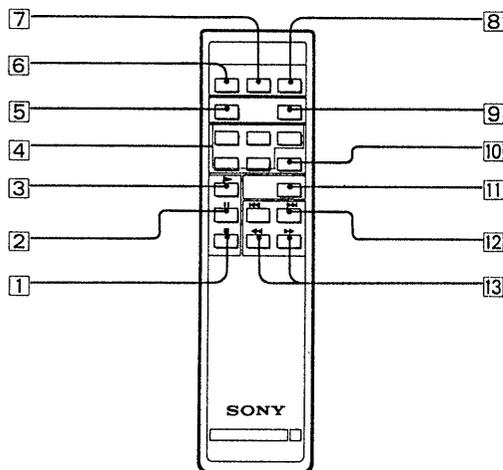

- 1 ■ (stop) button
- 2 || (pause) button
- 3 ▶ (play) button
- 4 DISC 1 - 5 buttons
- 5 TIME button
- 6 PGM (program) button
- 7 SHUFFLE button
- 8 CONTINUE button
- 9 REPEAT button
- 10 DISC SKIP button
- 11 FADER button
- 12 ◀▶ (AMS*) buttons
- 13 ▶▶ (manual search) buttons


SECTION 2 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

FRONT PANEL


A. When disc table opens automatically by pressing OPEN/CLOSE button;

- ① Remove top cover.
- ② Press POWER switch to turn the power on.
- ③ Press OPEN/CLOSE button to open disc table.

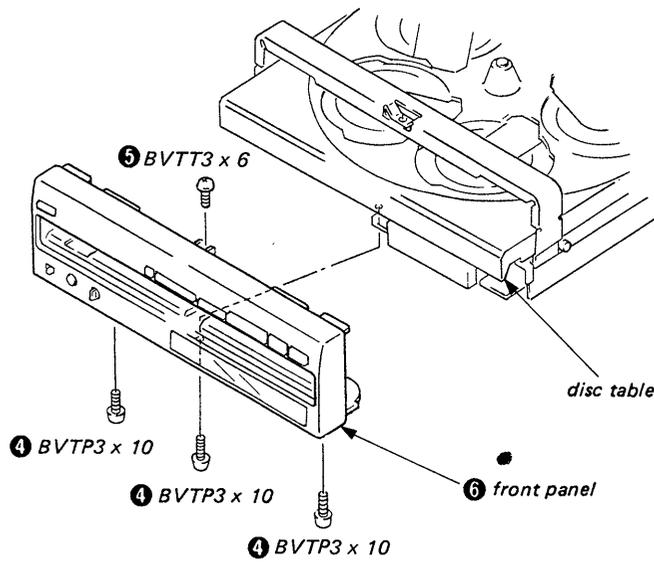

B. When disc table does not open even if OPEN/CLOSE button is pressed;

- ① Remove top cover.
- ③ Perform steps A-4 to A-6.

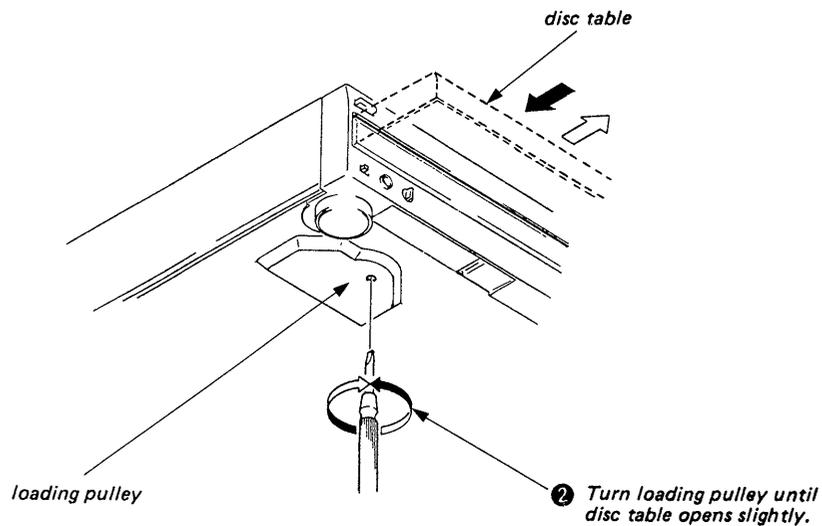


SECTION 3 ELECTRICAL ADJUSTMENTS

1. Perform adjustments in the order given.
2. Use YEDS-18 (Part No.: 3-702-101-01) disc unless otherwise indicated.
3. Use the oscilloscope with more than 10 MΩ impedance.

RF PLL Frequency Adjustment/Lock Frequency Check

Procedure:

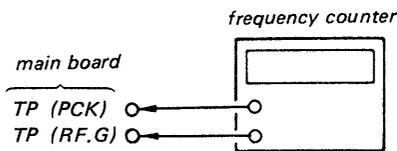


1. Connect test point TP (ASY) to ground with lead wire.
2. Turn POWER switch on.
3. Connect the frequency counter to test points TP (PCK).
4. Adjust RV5 so that the reading on frequency counter is 4.3218 MHz ±30 kHz.
..... (RF PLL frequency adjustment)
5. Remove lead wire connecting TP (ASY) to ground.
6. Put disc (YEDS-18) in and press ▷ button.
7. Confirm that the reading on frequency counter is 4.3218 MHz.

E-F Balance Adjustment


This adjustment should be made when replacing TOP (T-type Optical Pick-up).

Procedure:

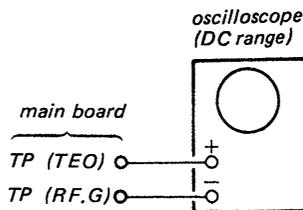

1. Connect test point TP (TST) and TP (TE) to ground with lead wire.
2. Connect oscilloscope to test point TP (TEO).
3. Turn POWER switch on.
4. Put disc (YEDS-18) in and press ▷ button.
5. Adjust RV1 so that the traverse waveform is symmetrical above and below.

6. After adjustment, remove the lead wire connected in step 1.

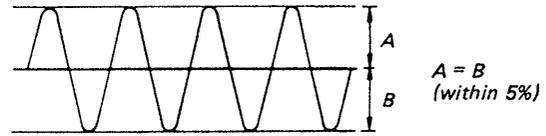


VOLT/DIV: 1 V
TIME/DIV: 1 ms


Focus Bias Adjustment

This adjustment should be made when replacing TOP (T-type Optical Pick-up).

Procedure:

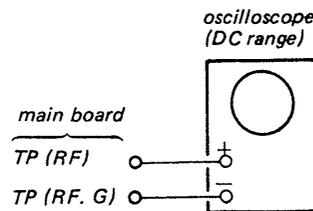

1. Connect oscilloscope to test points TP (RF) and test point TP (RF.G).
2. Turn POWER switch on.
3. Put disc (YEDS-18) in and press ▷ button.
4. Adjust RV2 for an optimum waveform eye pattern or so that the peak is maximum. Optimum eye pattern means that shape "◇" can be clearly distinguished at the center of the waveform.

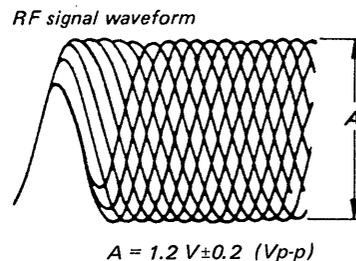

REFERENCE

Focus/Tracking Gain Adjustment

A frequency response analyzer is necessary in order to perform this adjustment exactly.

However, this gain has a margin, so even if it is slightly off, there is no problem. Therefore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when the 2-axis device operate.

However, as these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is raised, the noise when the 2-axis device operates increases.
- When gain is lowered, mechanical shock and skipping occurs more easily.
- When gain adjustment is off, the symptoms below appear.


Symptoms \ Gain	Focus	Tracking
• The time until music starts becomes longer for STOP →▷PLAY or automatic selection (◀▶▶▶ buttons pressed.) (Normally takes about 1 seconds.)	low	low or high
• Music does not start and disc continues to rotate for STOP →▷PLAY or automatic selection. (◀▶▶▶ buttons pressed.)	—	low
• Disc table opens shortly after STOP →▷PLAY.	low or high	—
• Sound is interrupted during PLAY. Or time counter display stops progressing.	—	low
• More noise during 2-axis device operation.	high	high

The following is a simple adjustment method.


— Primary Adjustment —

Note: Since exact adjustment cannot be performed, remember the positions of the controls before performing the adjustment. If the positions after the primary adjustment are only a little different, return the controls to the original position.



Procedure:

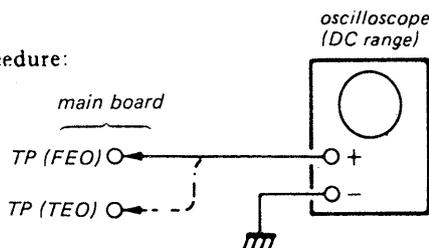

1. Keep the set horizontal.
(If the set is not horizontal, this adjustment cannot be performed due to the gravity against the 2 axis device.)
2. Insert disc (YEDS-18: Fifth Selection) and press ▷ PLAY button.
3. Connect oscilloscope to main amp board TP (FEO).
4. Adjust RV3 so that the waveform is as shown in the figure below. (focus gain adjustment)

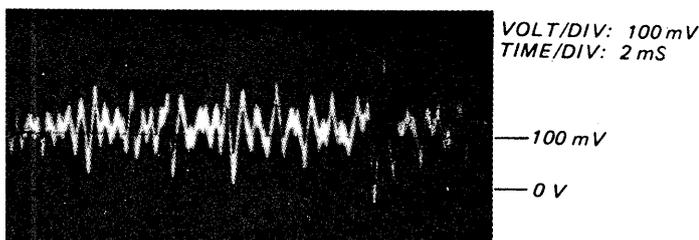

- Inccornt Examples (DC level changes more than on adjusted waveform)

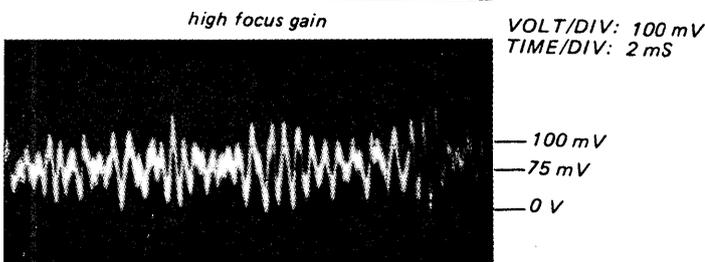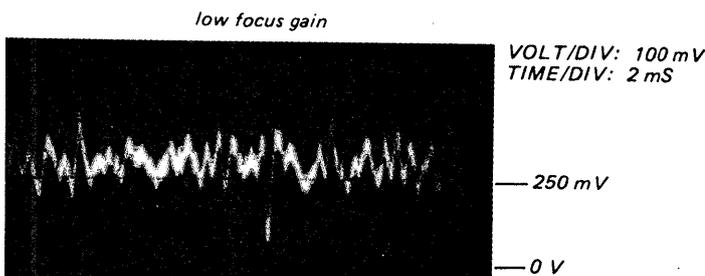

5. Connect oscilloscope to main board TP (TEO).
6. Adjust RV4 so that the waveform is as shown in the figure below. (tracking gain adjustment)



- Incorrect Examples (fundamental wave appears)


low tracking gain



VOLT/DIV: 1 V
TIME/DIV: 2 mS

0 V


high tracking gain
(higher fundamental wave than for low gain)

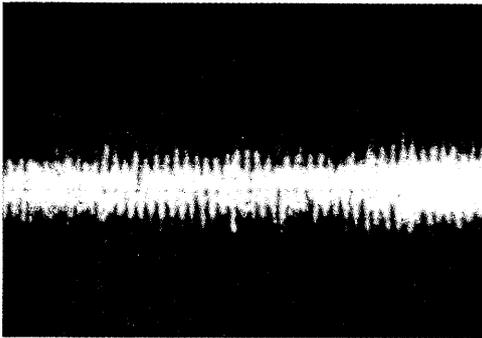

VOLT/DIV: 1 V
TIME/DIV: 2 mS

0 V


Adjustment Location: main board

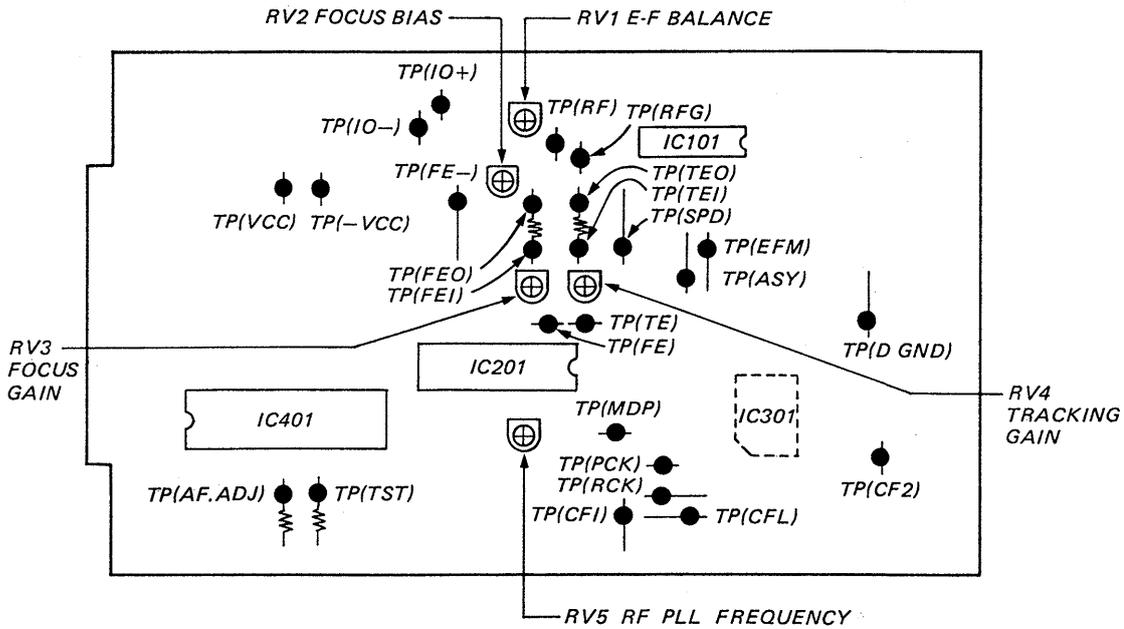


COMPONENT SIDE (FRONT)

SECTION 4 DIAGRAMS

4-1. CIRCUIT BOARD LOCATION

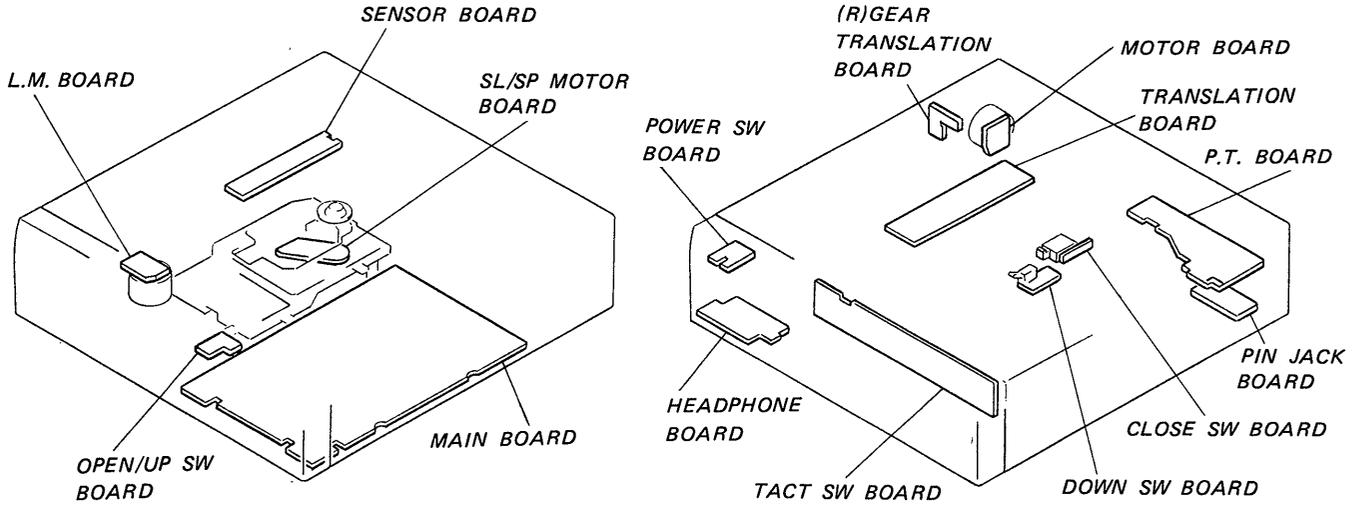


4-2. SEMICONDUCTOR LEAD LAYOUTS

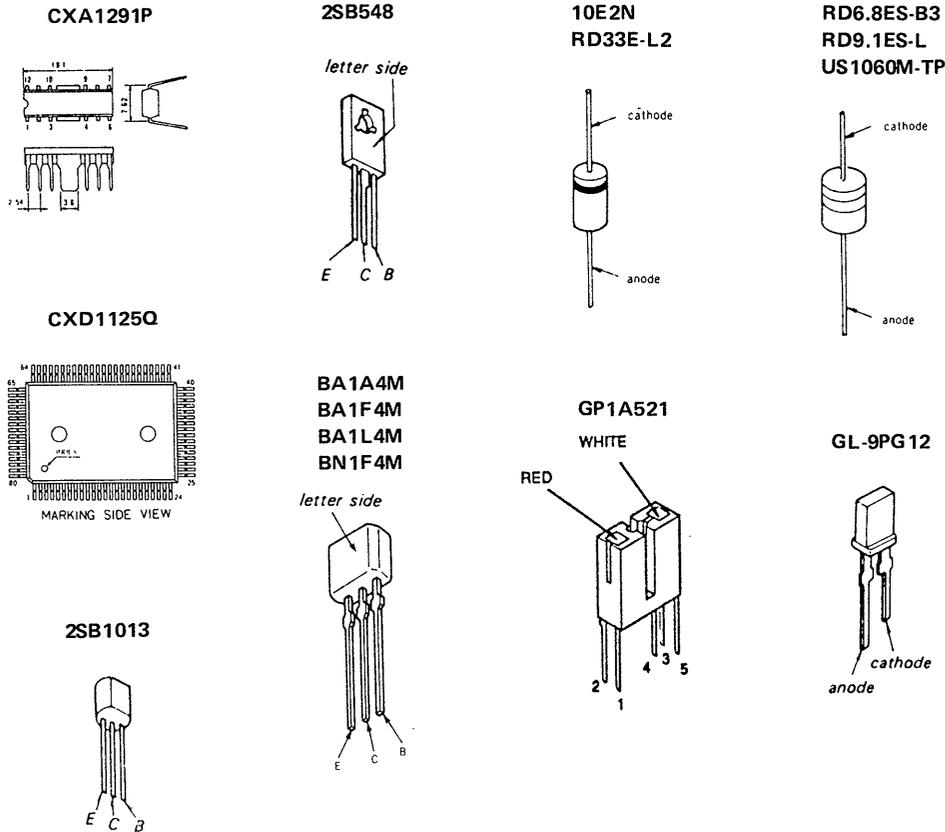

4-3. PRINTED WIRING BOARD • See page 8 for Semiconductor lead layouts.

• Semiconductors Location

Ref. No.	Location
D101	E-12
D401	H-15
D402	J-17
D403	J-17
D404	J-17
D405	J-17
D901	E-8
D902	E-8
D903	E-8
D904	E-8
D905	F-8
D906	G-8
D907	F-7
D908	E-9
D909	E-8
IC101	E-11
IC201	H-13
IC202	E-15
IC203	E-14
IC301	H-10
IC302	H-9
IC303	I-9
IC304	J-9
IC401	H-15
IC402	E-17
IC501	J-8
IC701	C-26
IC901	G-9
Q101	E-13
Q201	I-13
Q202	I-13
Q401	H-15
Q402	J-17
Q901	G-8
Q902	G-8
Q903	G-8

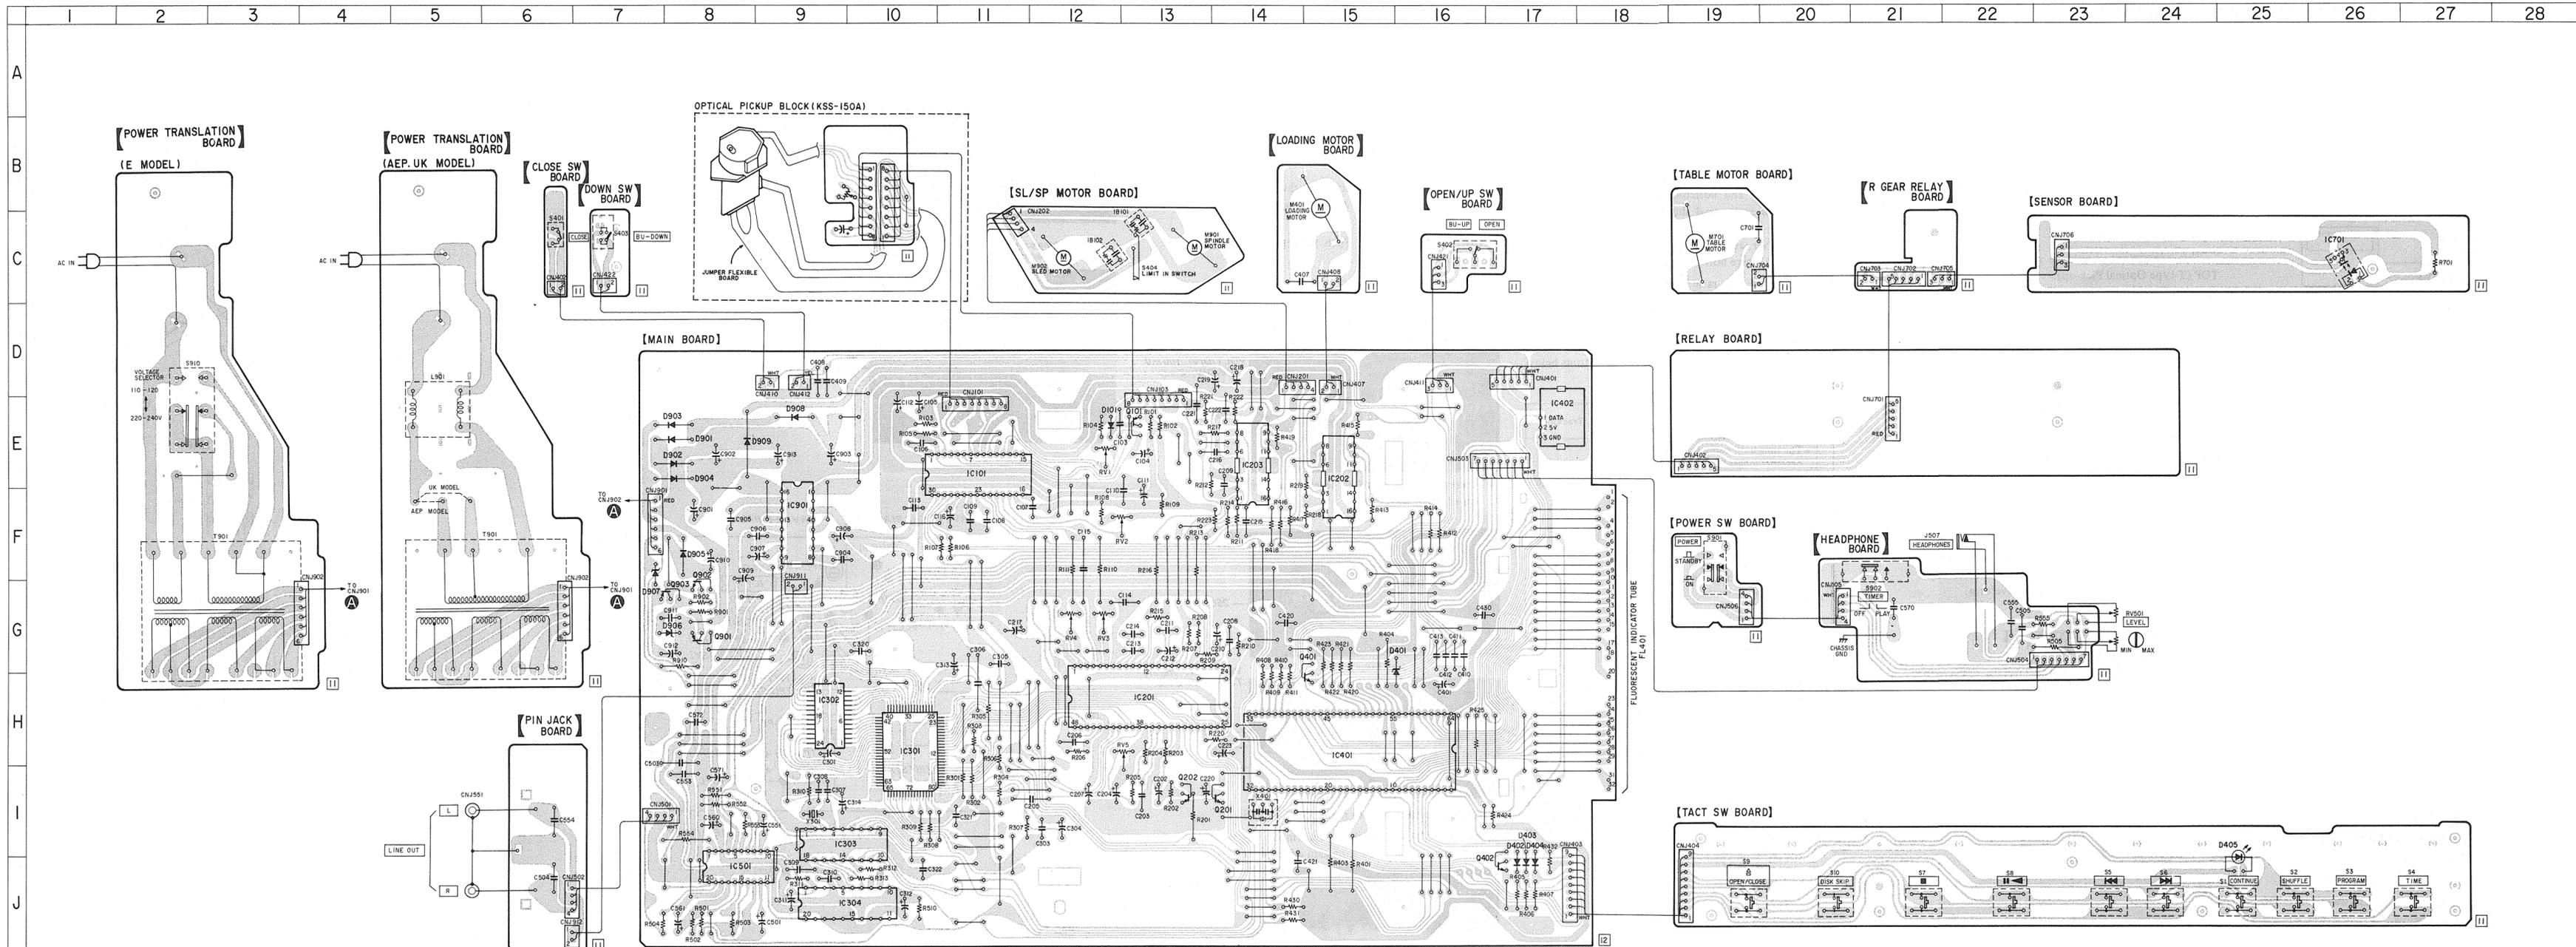


Note on Printed Wiring Boards:

- — : parts extracted from the component side.
- : parts mounted on the conductor side.
- ⊞ : indicates side identified with part number.
- — ○ : Jumper wire connected to the ground pattern on the component side.

4.4. SCHEMATIC DIAGRAM

• IC BLOCK DIAGRAMS.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

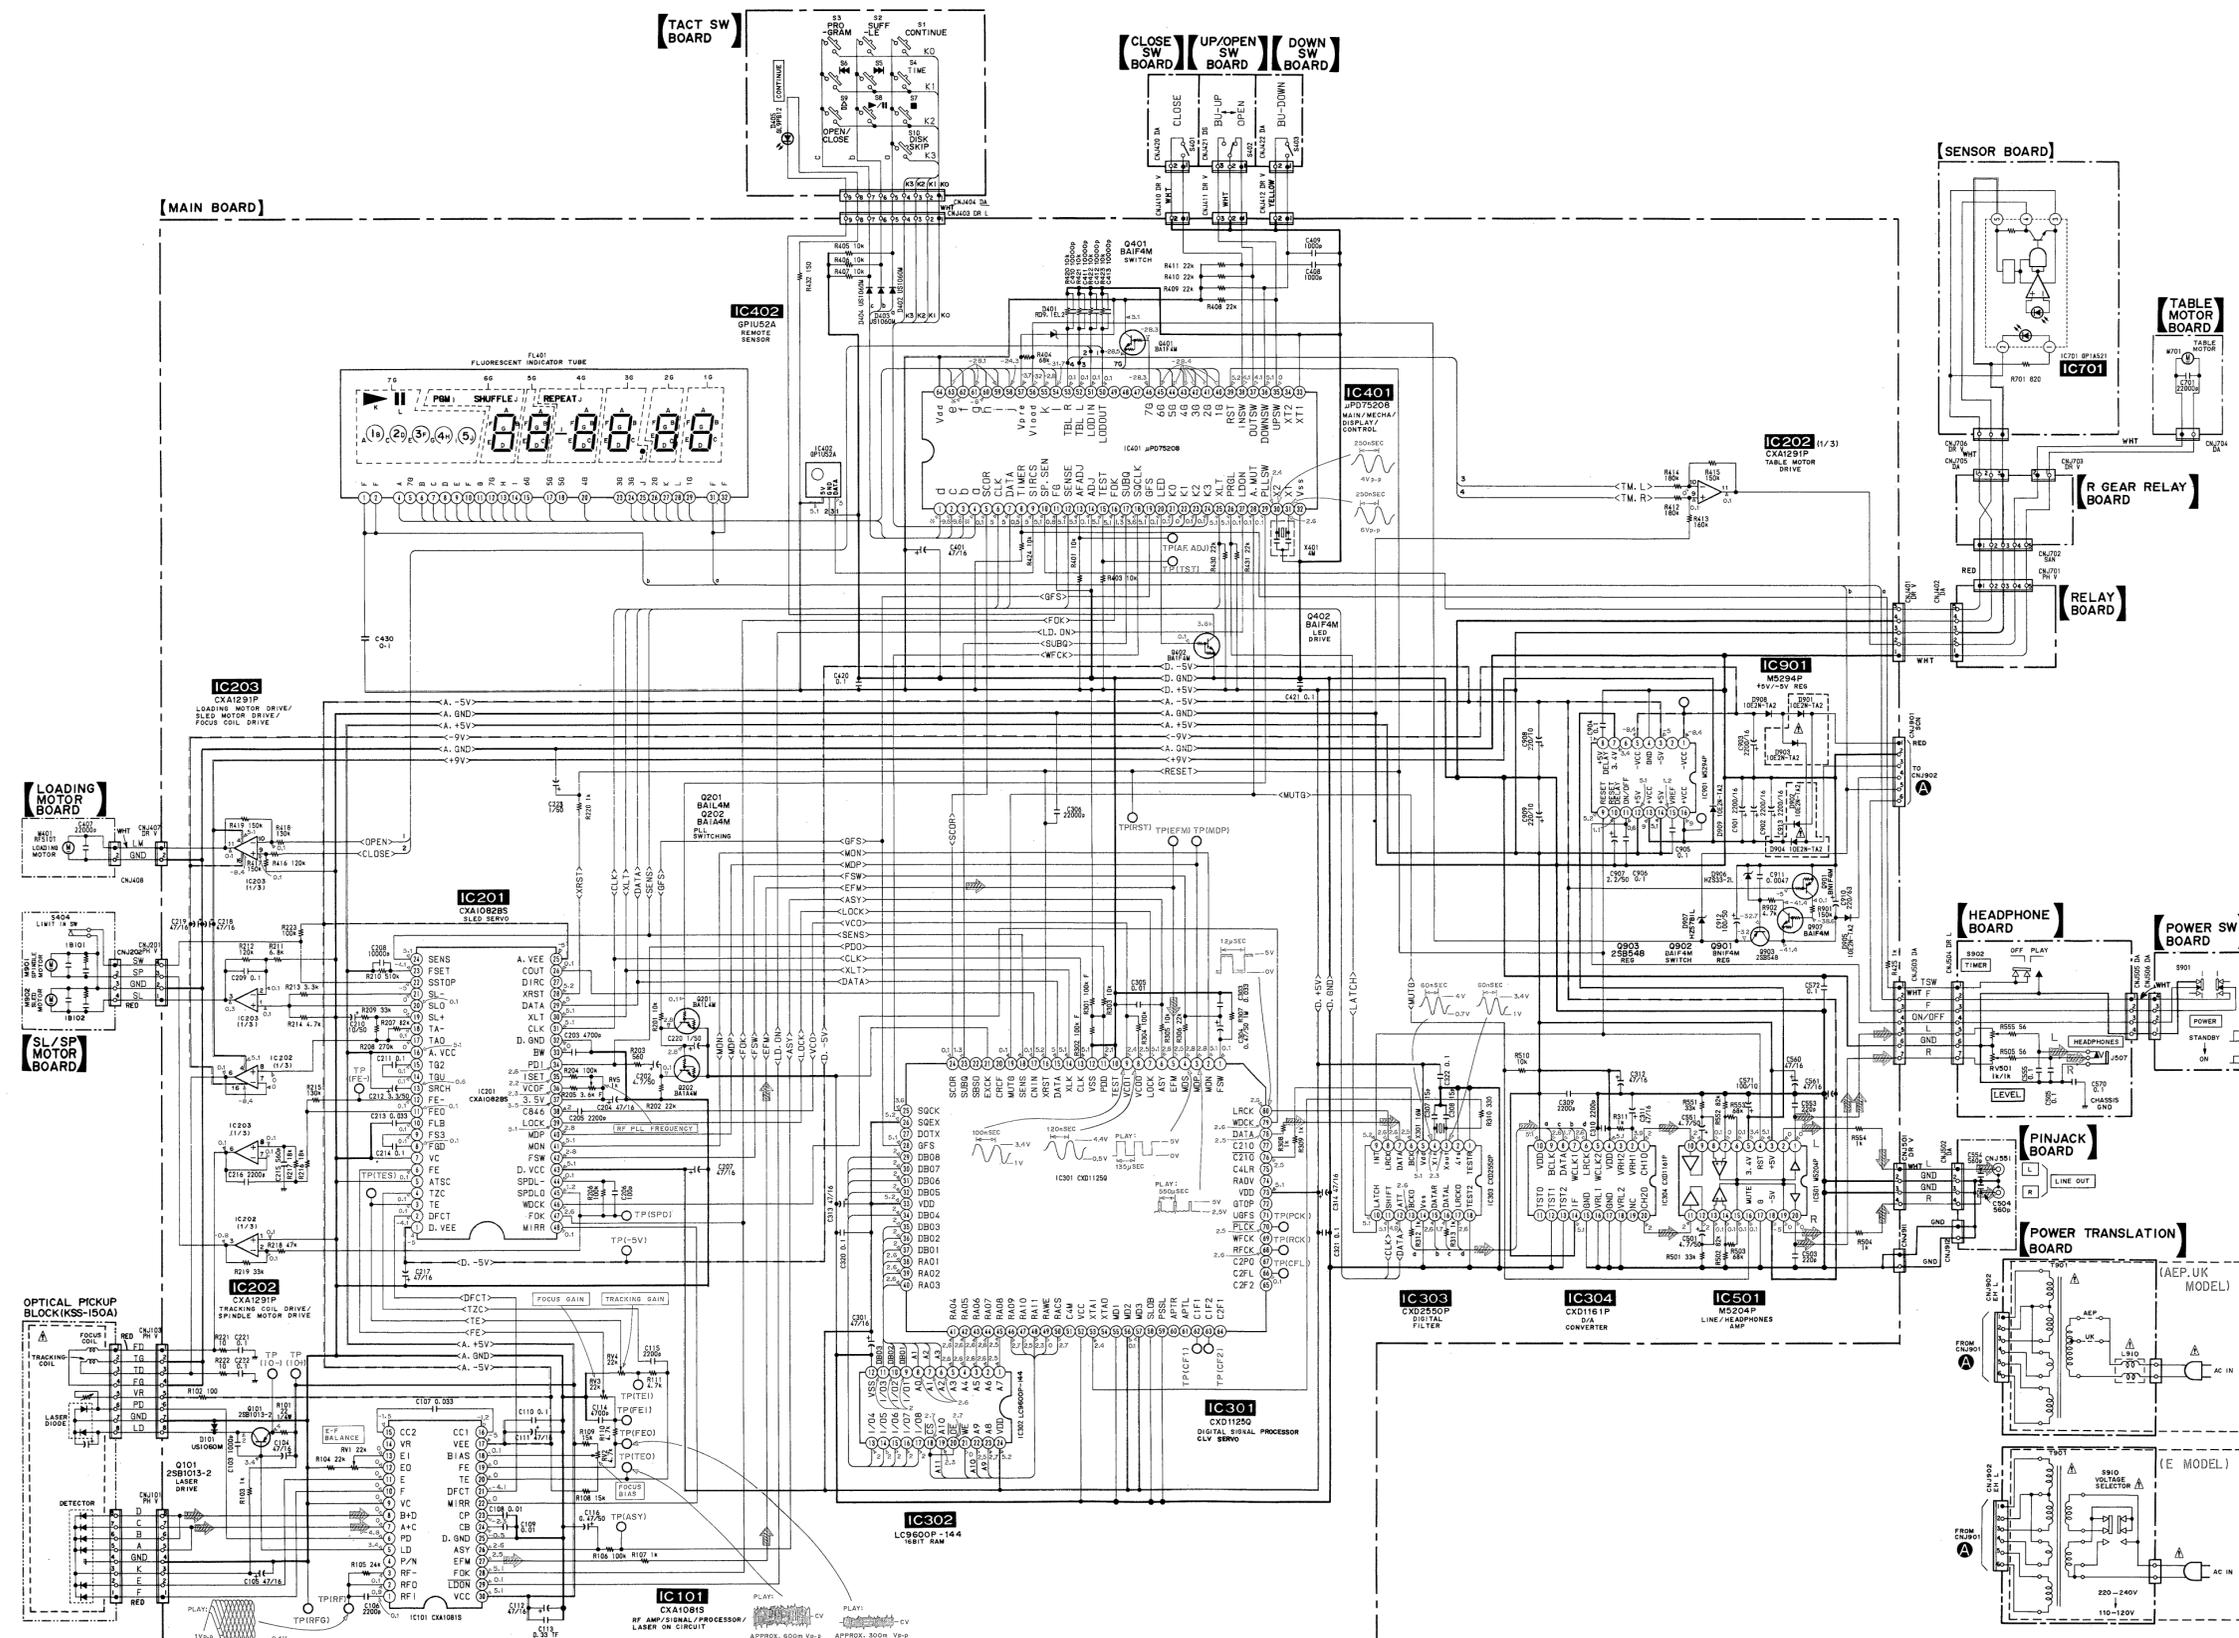


Note: The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.


- Note on Schematic Diagram:**
- All capacitors are in μF unless otherwise noted. pF: μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{2}\text{W}$ or less unless otherwise specified.
 - Components for right channel have same values as for left channel. Reference numbers are coded from:
 - : internal component.
 - : B+ Line
 - : B- Line
 - : adjustment for repair.
 - : Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions. no mark: STOP mode
 - : Voltages are taken with a VOM (50 k Ω /V). Voltage variations may be noted due to normal production tolerances.
 - : Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
 - : Signal path.
 - : CD

• Switch

Ref. No.	Switch	Position
S901	POWER	OFF
S902	TIMER	OFF
S401	CLOSE	OFF
S402	UP/OPEN	OPEN
S403	DOWN	OFF
S1	KEY MATRIX	OFF
S10		OFF
S404		OFF
S404		OFF

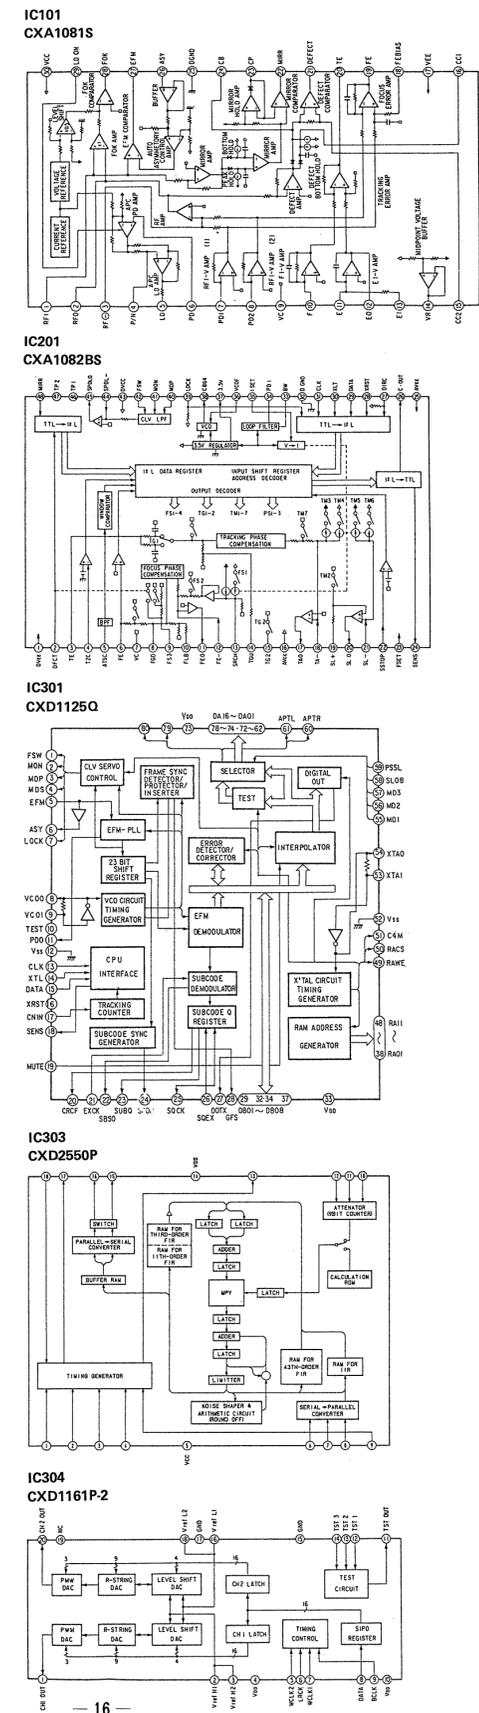


2. DISK TABLE

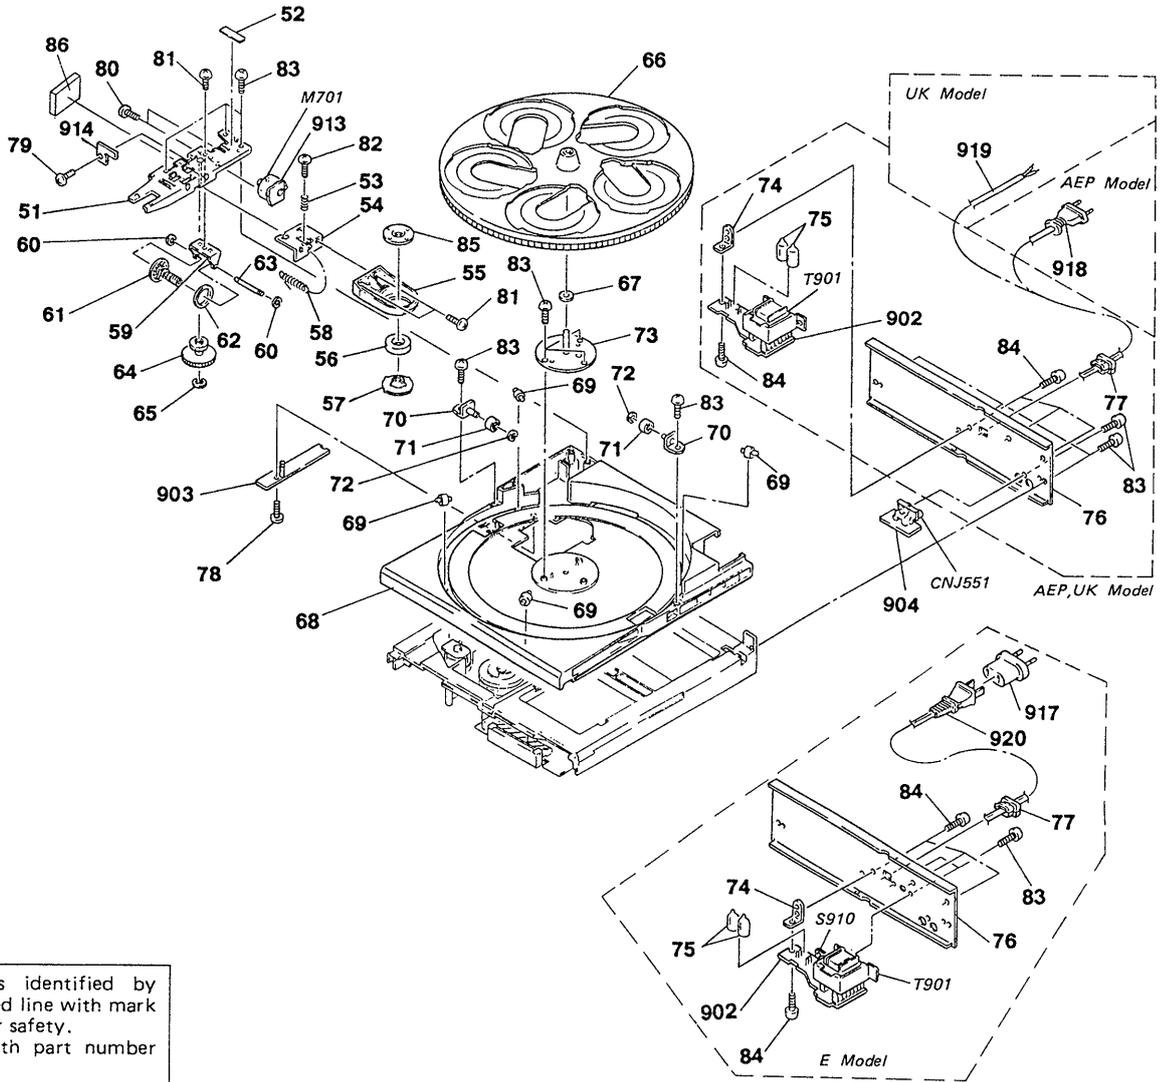

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	*X-4924-423-1	BRACKET (R GEAR) ASSY		77	⚠.*3-703-244-00	(AEP,UK)...BUSHING (2104), CORD	
52	*3-846-067-11	SPACER			⚠.3-703-571-11	(E)....BUSHING (S)(4516), CORD	
53	4-924-477-01	SPRING, COMPRESSION		78	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S	
54	*4-926-328-01	BRACKET (ADJUSTMENT A)		79	7-621-770-87	SCREW +BVTT 2.6X5 (S)	
55	*4-926-326-01	BRACKET (PRESS PULLEY)		80	7-621-775-08	SCREW +P 2.6X3	
56	1-452-340-21	MAGNET		81	7-685-870-01	SCREW +BVTT 3X5 (S)	
57	4-921-022-01	PULLEY, CHUCKING		82	7-682-548-09	SCREW +B 3X8	
58	4-924-421-01	SPRING (C), TENSION		83	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
59	*4-924-424-01	BRACKET (WORM)		84	7-682-547-04	SCREW +BVTT 3X6 (S)	
60	3-669-465-00	WASHER (1.5), STOPPER		85	4-921-029-01	YOKE, CHUCKING	
61	4-924-419-01	PULLEY (WORM)		86	9-911-841-XX	CUSHION	
62	4-917-548-02	BELT, DRIVING		902	⚠.*1-631-004-11	(AEP,UK)...PC BOARD, P.T.	
63	4-924-420-01	SHAFT (W)			⚠.*1-631-005-11	(E).....PC BOARD, P.T.	
64	4-924-414-01	GEAR (WH)		903	*1-631-007-11	PC BOARD, SENSOR	
65	7-624-106-04	STOP RING 3.0, TYPE -E		904	*1-631-008-11	PC BOARD, PIN JACK	
66	4-930-531-01	TABLE (C), DISK		913	*1-631-017-11	PC BOARD, MOTOR	
67	⚠.4-926-307-01	WASHER		914	*1-631-018-11	PC BOARD, (R) GEAR TRANSLATION	
68	4-924-406-31	(BLACK:AEP,UK)....TABLE (A), DISK		917	⚠.1-526-565-00	(E)...AC PLUG ADAPTOR	
	4-924-406-41	(GRAY:AEP,UK,E)....TABLE (A), DISK		918	⚠.1-555-795-00	(AEP)...CORD, POWER, EULO PLUG	
69	*X-4924-409-1	SHAFT (ROLLER B) ASSY		919	⚠.1-556-035-00	(UK)....CORD, POWER	
70	*X-4924-410-1	BRACKET (ROLLER) ASSY		920	⚠.1-551-188-XX	(E)....CORD, POWER	
71	*X-4924-408-3	COLLAR (ROLLER) ASSY		CNJ551	1-566-921-11	JACK, PIN 2P (LINE OUT L/R)	
72	3-325-290-21	WASHER, STOPPER		M701	A-4608-367-A	MOTOR ASSY, ROTARY	
73	*X-4924-402-1	BRACKET (A) ASSY		S910	⚠.1-571-309-11	(E)....SWITCH (VOLTAGE SELECT)	
74	*4-923-506-01	BRACKET (PC BOARD)		T901	⚠.1-449-217-11	(AEP,UK)...TRANSFORMER, POWER	
75	*4-912-962-01	COVER (1P), TERMINAL		T901	⚠.1-449-218-11	(E).....TRANSFORMER, POWER	
76	*4-924-402-51	(UK)....PANEL (M), BACK					
	*4-924-402-61	(E)....PANEL (M), BACK					
	*4-924-402-71	(AEP)...PANEL (M), BACK					

3. CHASSIS

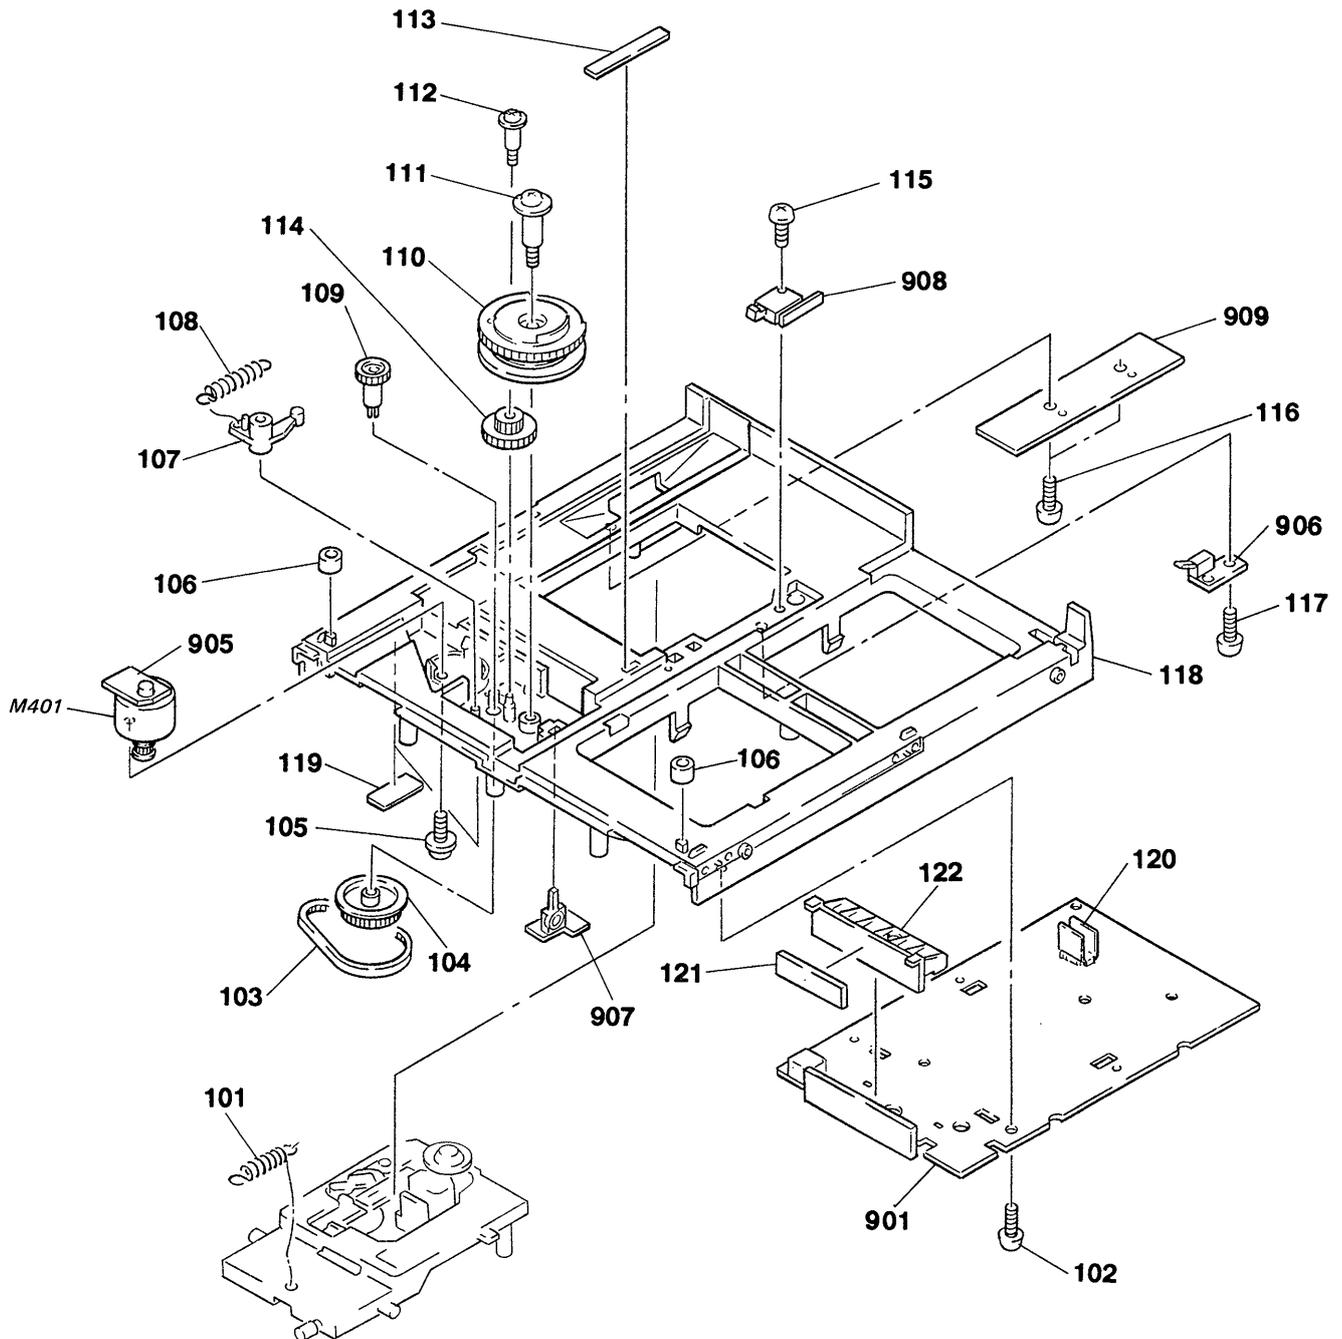

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
101	4-924-411-01	SPRING (A), TENSION		117	7-685-134-19	SCREW +P 2.6X8 TYPE2 NON-SLIT	
102	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S		118	4-924-407-06	FRAME	
103	4-930-528-01	BELT (TIMING)		119	3-831-441-XX	CUSHION (B), CABINET	
104	4-930-507-01	PULLEY (LOADING)		120	*4-926-349-01	HEAT SINK	
105	7-628-254-10	+PSW, 2.6X6		121	*4-926-354-01	SHEET (ADHESIVE)	
106	*3-576-990-01	CUSHION		122	*4-926-324-01	BRACKET (FL)	
107	4-917-519-01	LEVER, SET		901	*A-4617-020-A	(AEP,E)...MOUNTED PCB, MAIN	
108	4-924-412-01	SPRING (B), TENSION			*A-4617-106-A	(UK).....MOUNTED PCB, MAIN	
109	4-924-425-01	GEAR (LOADING B)		905	*1-631-009-11	PC BOARD, L.M.	
110	4-924-431-01	GEAR (LOADING A)		906	*1-631-010-11	PC BOARD, DOWN SW	
111	4-926-317-01	SCREW, STEP		907	*1-631-011-11	PC BOARD, OPEN/UP SW	
112	4-926-320-01	SCREW (B), STEP		908	*1-631-012-11	PC BOARD, CLOSE SW	
113	*4-926-316-01	SHEET		909	*1-631-013-11	PC BOARD, TRANSLATION	
114	4-924-426-01	GEAR (LOADING C)		M401	A-4608-350-A	MOTOR ASSY, LOADING	
115	7-685-137-19	SCREW +BTP 2.6X14 TYPE2 N-S					
116	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S					

4. BASE UNIT

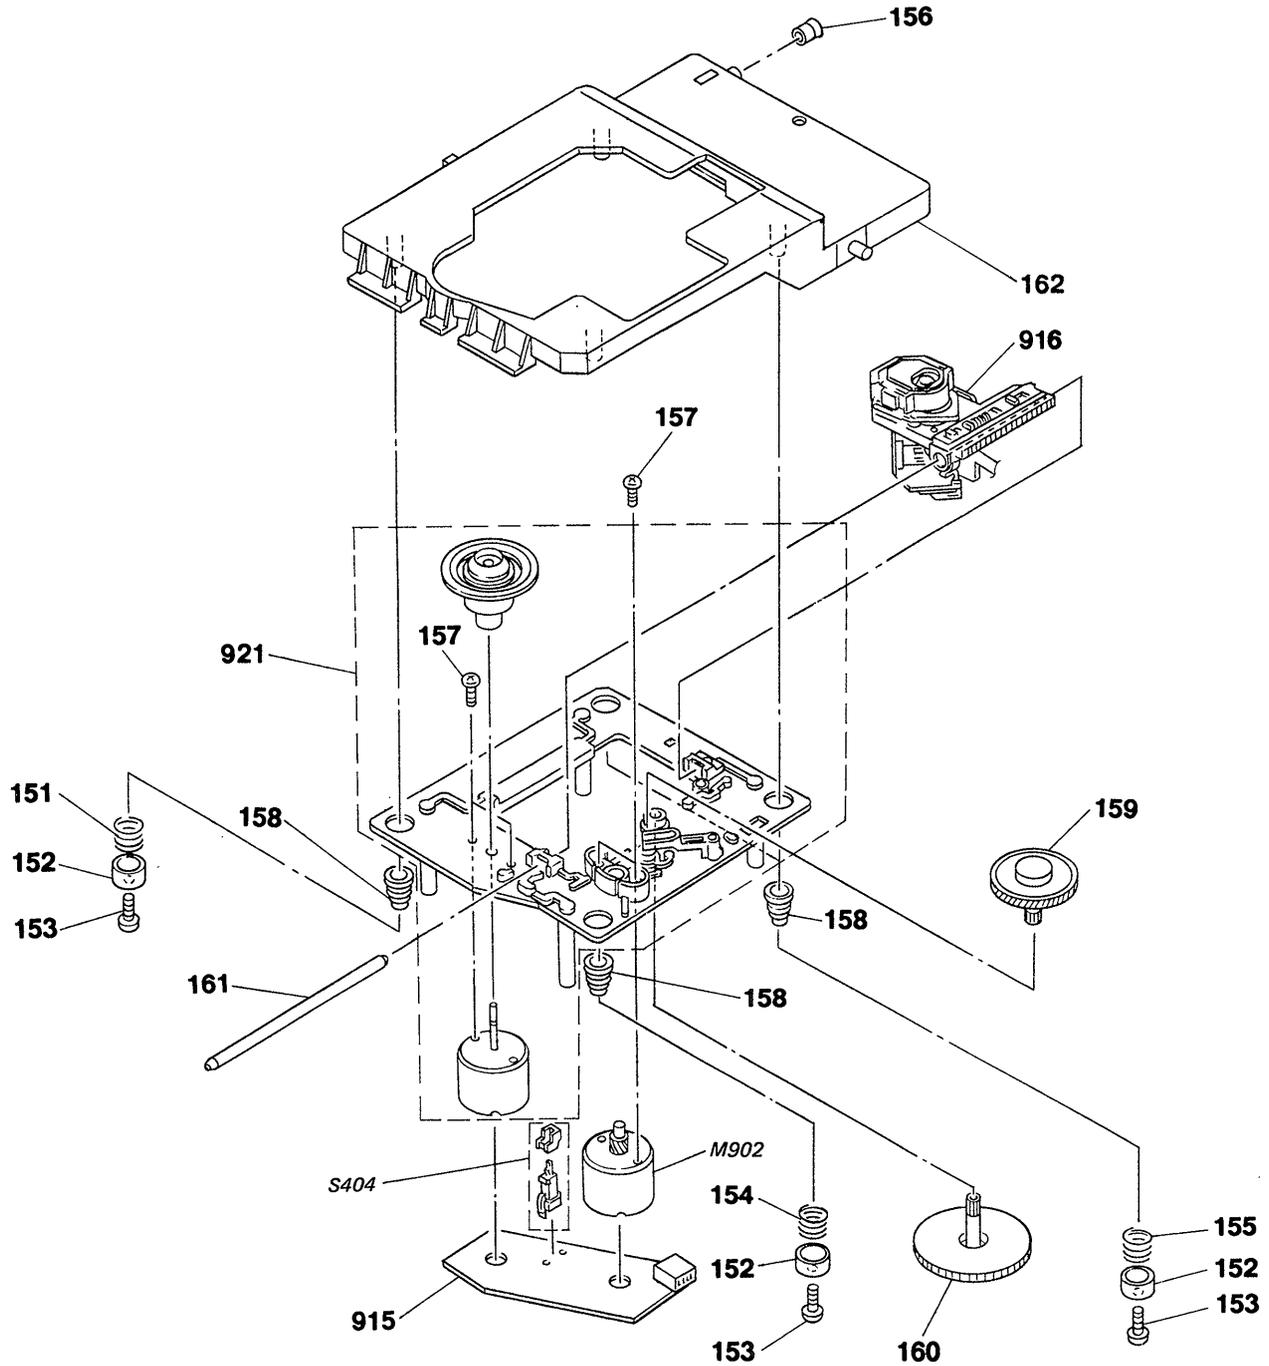

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
151	4-917-541-01	SPRING (B)		159	4-917-567-01	GEAR (M)	
152	4-917-508-01	HOLDER, SP		160	4-917-564-01	GEAR (P), FLATNESS	
153	7-685-135-19	SCREW +P 2.6X10 TYPE2 NON-SLIT		161	4-917-565-01	SHAFT, SLED	
154	4-918-669-01	SPRING (W)		162	4-924-445-01	BRACKET (BU)	
155	4-917-507-01	SPRING (H)		915	*1-626-304-11	PC BOARD, SL/SP MOTOR	
156	4-917-515-01	ROLLER		916	8-848-062-01	PICK UP, OPTICAL KSS-150A	
157	7-621-255-15	SCREW +P 2X3		921	X-4917-523-1	BASE ASSY (BU-5C) (SPINDLE MOTOR)	
158	4-917-562-01	INSULATOR		M902	X-4917-504-1	MOTOR ASSY (SLED)	
				S404	1-571-274-11	SWITH, LEAF (LIMIT IN)	

SECTION 6 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF: μ F, PF: μ MF.

RESISTORS

- All resistors are in ohms.
- F: nonflammable

COILS

- MMH: mH, UH: μ H

SEMICONDUCTORS

In each case, U: μ , for example:
UA....: μ A..., UPA....: μ PA...,
UPC....: μ PC, UPD....: μ PD...

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description			
901	*A-4617-020-A	(AEP,E)...MOUNTED PCB, MAIN	C209	1-136-165-00	FILM	0.1MF	5%	50V
	*A-4617-106-A	(UK).....MOUNTED PCB, MAIN	C210	1-123-875-11	ELECT	10MF	20%	50V
902	Δ *1-631-004-11	(AEP,UK)...PC BOARD, P.T.	C211	1-136-165-00	FILM	0.1MF	5%	50V
	Δ *1-631-005-11	(E).....PC BOARD, P.T.	C212	1-123-382-00	ELECT	3.3MF	20%	50V
903	*1-631-007-11	PC BOARD, SENSOR	C213	1-136-159-00	FILM	0.033MF	5%	50V
904	*1-631-008-11	PC BOARD, PIN JACK	C214	1-136-165-00	FILM	0.1MF	5%	50V
905	*1-631-009-11	PC BOARD, L.M.	C215	1-162-291-31	CERAMIC	560PF	10%	50V
906	*1-631-010-11	PC BOARD, DOWN SW	C216	1-161-375-00	CERAMIC	0.0022MF	30%	16V
907	*1-631-011-11	PC BOARD, OPEN/UP SW	C217	1-124-477-11	ELECT	47MF	20%	16V
908	*1-631-012-11	PC BOARD, CLOSE SW	C218	1-124-477-11	ELECT	47MF	20%	16V
909	*1-631-013-11	PC BOARD, TRANSLATION	C219	1-124-477-11	ELECT	47MF	20%	16V
910	*1-631-014-11	PC BOARD, TACT SW	C220	1-124-499-11	ELECT	1MF	20%	50V
911	*1-631-015-11	PC BOARD, POWER SW	C221	1-164-159-11	CERAMIC	0.1MF		50V
912	*1-631-016-11	PC BOARD, HEADPHONE	C222	1-164-159-11	CERAMIC	0.1MF		50V
913	*1-631-017-11	PC BOARD, MOTOR	C223	1-124-499-11	ELECT	1MF	20%	50V
914	*1-631-018-11	PC BOARD, (R) GEAR TRANSLATION	C301	1-124-477-11	ELECT	47MF	20%	16V
915	*1-627-304-11	PC BOARD, SL/SP MOTOR	C303	1-136-159-00	FILM	0.033MF	5%	50V
916	8-848-062-01	PICK UP, OPTICAL KSS-150A	C304	1-124-902-00	ELECT	0.47MF	20%	50V
917	Δ 1-526-565-00	(E)...AC PLUG ADAPTOR	C305	1-136-153-00	FILM	0.01MF	5%	50V
918	Δ 1-555-795-00	(AEP)...CORD, POWER, EULO PLUG	C306	1-161-494-00	CERAMIC	0.022MF		25V
919	Δ 1-556-035-00	(UK)...CORD, POWER	C307	1-162-203-31	CERAMIC	15PF	5%	50V
920	Δ 1-551-188-XX	(E)...CORD, POWER	C308	1-162-203-31	CERAMIC	15PF	5%	50V
921	X-4917-523-1	BASE ASSY (BU-5C)(SPINDLE MOTOR)	C309	1-161-375-00	CERAMIC	0.0022MF	30%	16V
C103	1-162-294-31	CERAMIC	C310	1-161-375-00	CERAMIC	0.0022MF	30%	16V
C104	1-124-477-11	ELECT	C311	1-124-477-11	ELECT	47MF	20%	16V
C105	1-124-477-11	ELECT	C312	1-124-477-11	ELECT	47MF	20%	16V
C106	1-161-375-00	CERAMIC	C313	1-124-477-11	ELECT	47MF	20%	16V
C107	1-136-159-00	FILM	C314	1-124-477-11	ELECT	47MF	20%	16V
C108	1-136-153-00	FILM	C320	1-162-851-11	CERAMIC	0.1MF	20%	16V
C109	1-136-153-00	FILM	C321	1-162-851-11	CERAMIC	0.1MF	20%	16V
C110	1-164-159-11	CERAMIC	C322	1-162-851-11	CERAMIC	0.1MF	20%	16V
C111	1-124-477-11	ELECT	C401	1-124-477-11	ELECT	47MF	20%	16V
C112	1-124-477-11	ELECT	C407	1-161-494-00	CERAMIC	0.022MF		25V
C113	1-136-171-00	FILM	C408	1-162-294-31	CERAMIC	0.001MF	10%	50V
C114	1-161-377-00	CERAMIC	C409	1-162-294-31	CERAMIC	0.001MF	10%	50V
C115	1-161-375-00	CERAMIC	C410	1-161-379-00	CERAMIC	0.01MF	20%	16V
C116	1-124-902-00	ELECT	C411	1-161-379-00	CERAMIC	0.01MF	20%	16V
C202	1-124-927-11	ELECT	C412	1-161-379-00	CERAMIC	0.01MF	20%	16V
C203	1-161-377-00	CERAMIC	C413	1-161-379-00	CERAMIC	0.01MF	20%	16V
C204	1-124-477-11	ELECT	C420	1-162-851-11	CERAMIC	0.1MF	20%	16V
C205	1-161-375-00	CERAMIC	C421	1-162-851-11	CERAMIC	0.1MF	20%	16V
C206	1-162-282-31	CERAMIC	C430	1-162-851-11	CERAMIC	0.1MF	20%	16V
C207	1-124-477-11	ELECT	C501	1-124-927-11	ELECT	4.7MF	20%	50V
C208	1-161-379-00	CERAMIC	C503	1-162-286-31	CERAMIC	220PF	10%	50V
			C504	1-162-291-31	CERAMIC	560PF	10%	50V
			C505	1-164-159-11	CERAMIC	0.1MF		50V

Ref.No.	Part No.	Description
C551	1-124-927-11	ELECT 4.7MF 20% 50V
C553	1-162-286-31	CERAMIC 220PF 10% 50V
C554	1-162-291-31	CERAMIC 560PF 10% 50V
C555	1-164-159-11	CERAMIC 0.1MF 50V
C560	1-124-477-11	ELECT 47MF 20% 16V
C561	1-124-477-11	ELECT 47MF 20% 16V
C570	1-136-165-00	FILM 0.1MF 5% 50V
C571	1-124-443-00	ELECT 100MF 20% 10V
C572	1-162-851-11	CERAMIC 0.1MF 20% 16V
C701	1-161-494-00	CERAMIC 0.022MF 30% 25V
C901	1-124-556-11	ELECT 2200MF 20% 16V
C902	1-124-556-11	ELECT 2200MF 20% 16V
C903	1-124-556-11	ELECT 2200MF 20% 16V
C904	1-136-165-00	FILM 0.1MF 5% 50V
C905	1-136-165-00	FILM 0.1MF 5% 50V
C906	1-136-165-00	FILM 0.1MF 5% 50V
C907	1-124-925-11	ELECT 2.2MF 20% 50V
C908	1-126-176-11	ELECT 220MF 20% 10V
C909	1-126-176-11	ELECT 220MF 20% 10V
C910	1-124-919-11	ELECT 220MF 20% 63V
C911	1-130-479-00	MYLAR 0.0047MF 5% 50V
C912	1-124-122-11	ELECT 100MF 20% 50V
C913	1-124-556-11	ELECT 2200MF 20% 16V
CNJ101*1-564-710-11		PIN, CONNECTOR (SMALL TYPE) 8P
CNJ103*1-564-710-11		PIN, CONNECTOR (SMALL TYPE) 8P
CNJ201*1-564-706-11		PIN, CONNECTOR (SMALL TYPE) 4P
CNJ202*1-564-720-11		PIN, CONNECTOR (SMALL TYPE) 4P
CNJ401*1-564-339-00		PIN, CONNECTOR 5P
CNJ403*1-506-615-11		PIN, CONNECTOR 9P
CNJ407*1-564-336-00		PIN, CONNECTOR 2P
CNJ410*1-564-336-00		PIN, CONNECTOR 2P
CNJ411*1-564-337-00		PIN, CONNECTOR 3P
CNJ412*1-564-336-71		PIN, CONNECTOR 2P
CNJ501*1-564-338-00		PIN, CONNECTOR 4P
CNJ504*1-564-500-11		PIN, CONNECTOR 7P
CNJ507 1-568-518-21		JACK, LARGE TYPE (HEADPHONES)
CNJ551 1-566-921-11		JACK, PIN 2P (LINE OUT L/R)
CNJ701*1-564-707-11		PIN, CONNECTOR (SMALL TYPE) 5P
CNJ703*1-564-336-00		PIN, CONNECTOR 2P
CNJ706*1-564-337-00		PIN, CONNECTOR 3P
CNJ902*1-564-521-11		PLUG, CONNECTOR 6P
CNJ911*1-564-336-00		PIN, CONNECTOR 2P
D101 8-719-912-20		DIODE 1SS120
D401 8-719-121-24		DIODE RD9.1ES-L
D402 8-719-912-20		DIODE 1SS120
D403 8-719-912-20		DIODE 1SS120
D404 8-719-912-20		DIODE 1SS120
D405 8-719-920-07		DIODE GL-9PG12 (CONTINUE)
D901 8-719-200-77		DIODE 10E2N
D902 8-719-200-77		DIODE 10E2N
D903 8-719-200-77		DIODE 10E2N
D904 8-719-200-77		DIODE 10E2N
D905 8-719-200-77		DIODE 10E2N
D906 8-719-102-30		DIODE RD33ES-L2
D907 8-719-933-46		DIODE HZS7B1L
D908 8-719-200-77		DIODE 10E2N
D909 8-719-200-77		DIODE 10E2N

Ref.No.	Part No.	Description
FL401 1-519-477-11		INDICATOR TUBE, FLUORESCENT
IB101 1-233-171-11		COMPOSITION CIRCUIT BLOCK
IB102 1-233-171-11		COMPOSITION CIRCUIT BLOCK
IC101 8-752-034-00		IC CXA1081S
IC201 8-752-032-30		IC CXA1082BS
IC202 8-752-035-28		IC CXA-1291P
IC203 8-752-035-28		IC CXA-1291P
IC301 8-752-328-62		IC CXD1125Q
IC302 8-752-323-64		IC CXK5816M-12L
IC303 8-752-328-72		IC CXD2550P
IC304 8-759-805-35		IC CXD1161P-2
IC401 8-759-145-82		IC UPD75208CW-287
IC402 8-749-920-53		RECEIVER UNIT, REMOCON GP1U52A
IC501 8-759-631-39		IC M5204P
IC701 8-719-970-19		DIODE GP1A521
IC901 8-759-631-40		IC M5294P
L901 1-421-915-11		(AEP,UK)...COIL, LINE FILTER
M401 A-4608-350-A		MOTOR ASSY, LOADING
M701 A-4608-367-A		MOTOR ASSY, ROTARY
M902 X-4917-504-1		MOTOR ASSY (SLED)
Q101 8-729-116-57		TRANSISTOR 2SB1013
Q201 8-729-115-77		TRANSISTOR BA114M
Q202 8-729-900-61		TRANSISTOR DTC114ES
Q401 8-729-900-36		TRANSISTOR DTC124ES
Q402 8-729-900-36		TRANSISTOR DTC124ES
Q901 8-729-900-63		TRANSISTOR DTA124ES
Q902 8-729-900-61		TRANSISTOR DTC114ES
Q903 8-729-154-83		TRANSISTOR 2SB548
R101 1-249-397-11		CARBON 22 5% 1/4W
R102 1-249-405-11		CARBON 100 5% 1/4W
R103 1-249-417-11		CARBON 1K 5% 1/4W
R104 1-249-433-11		CARBON 22K 5% 1/4W
R105 1-247-864-11		CARBON 24K 5% 1/4W
R106 1-249-441-11		CARBON 100K 5% 1/4W
R107 1-249-417-11		CARBON 1K 5% 1/4W
R108 1-249-431-11		CARBON 15K 5% 1/4W
R109 1-249-431-11		CARBON 15K 5% 1/4W
R110 1-249-425-11		CARBON 4.7K 5% 1/4W
R111 1-249-425-11		CARBON 4.7K 5% 1/4W
R201 1-249-429-11		CARBON 10K 5% 1/4W
R202 1-249-433-11		CARBON 22K 5% 1/4W
R203 1-249-414-11		CARBON 560 5% 1/4W
R204 1-249-441-11		CARBON 100K 5% 1/4W
R205 1-215-434-00		METAL 3.6K 1% 1/6W
R206 1-249-441-11		CARBON 100K 5% 1/4W
R207 1-249-440-11		CARBON 82K 5% 1/4W
R208 1-247-889-00		CARBON 270K 5% 1/4W
R209 1-249-435-11		CARBON 33K 5% 1/4W
R210 1-247-896-11		CARBON 510K 5% 1/4W
R211 1-249-427-11		CARBON 6.8K 5% 1/4W
R212 1-247-881-00		CARBON 120K 5% 1/4W
R213 1-249-423-11		CARBON 3.3K 5% 1/4W
R214 1-249-425-11		CARBON 4.7K 5% 1/4W
R215 1-247-882-11		CARBON 130K 5% 1/4W
R216 1-249-432-11		CARBON 18K 5% 1/4W

Ref.No.	Part No.	Description			
R217	1-249-432-11	CARBON	18K	5%	1/4W
R218	1-249-437-11	CARBON	47K	5%	1/4W
R219	1-249-435-11	CARBON	33K	5%	1/4W
R220	1-249-417-11	CARBON	1K	5%	1/4W
R221	1-249-393-11	CARBON	10	5%	1/4W
R222	1-249-393-11	CARBON	10	5%	1/4W
R223	1-249-441-11	CARBON	100K	5%	1/4W
R301	1-215-469-00	METAL	100K	1%	1/6W
R302	1-215-469-00	METAL	100K	1%	1/6W
R303	1-249-429-11	CARBON	10K	5%	1/4W
R304	1-249-441-11	CARBON	100K	5%	1/4W
R305	1-249-429-11	CARBON	10K	5%	1/4W
R306	1-249-433-11	CARBON	22K	5%	1/4W
R307	1-247-903-00	CARBON	1M	5%	1/4W
R308	1-249-417-11	CARBON	1K	5%	1/4W
R309	1-249-417-11	CARBON	1K	5%	1/4W
R310	1-249-411-11	CARBON	330	5%	1/4W
R311	1-249-417-11	CARBON	1K	5%	1/4W
R312	1-249-417-11	CARBON	1K	5%	1/4W
R313	1-249-417-11	CARBON	1K	5%	1/4W
R401	1-249-429-11	CARBON	10K	5%	1/4W
R403	1-249-429-11	CARBON	10K	5%	1/4W
R404	1-249-439-11	CARBON	68K	5%	1/4W
R405	1-249-429-11	CARBON	10K	5%	1/4W
R406	1-249-429-11	CARBON	10K	5%	1/4W
R407	1-249-429-11	CARBON	10K	5%	1/4W
R408	1-249-433-11	CARBON	22K	5%	1/4W
R409	1-249-433-11	CARBON	22K	5%	1/4W
R410	1-249-433-11	CARBON	22K	5%	1/4W
R411	1-249-433-11	CARBON	22K	5%	1/4W
R412	1-247-885-00	CARBON	180K	5%	1/4W
R413	1-247-884-11	CARBON	160K	5%	1/4W
R414	1-247-885-00	CARBON	180K	5%	1/4W
R415	1-247-883-00	CARBON	150K	5%	1/4W
R416	1-247-881-00	CARBON	120K	5%	1/4W
R417	1-247-883-00	CARBON	150K	5%	1/4W
R418	1-247-882-11	CARBON	130K	5%	1/4W
R419	1-247-883-00	CARBON	150K	5%	1/4W
R420	1-249-429-11	CARBON	10K	5%	1/4W
R421	1-249-429-11	CARBON	10K	5%	1/4W
R422	1-249-429-11	CARBON	10K	5%	1/4W
R423	1-249-429-11	CARBON	10K	5%	1/4W
R424	1-249-429-11	CARBON	10K	5%	1/4W
R425	1-249-417-11	CARBON	1K	5%	1/4W
R430	1-249-433-11	CARBON	22K	5%	1/4W
R431	1-249-433-11	CARBON	22K	5%	1/4W
R432	1-249-407-11	CARBON	150	5%	1/4W
R501	1-249-435-11	CARBON	33K	5%	1/4W
R502	1-249-440-11	CARBON	82K	5%	1/4W
R503	1-249-439-11	CARBON	68K	5%	1/4W
R504	1-249-417-11	CARBON	1K	5%	1/4W
R505	1-249-402-11	CARBON	56	5%	1/4W
R510	1-249-429-11	CARBON	10K	5%	1/4W
R551	1-249-435-11	CARBON	33K	5%	1/4W
R552	1-249-440-11	CARBON	82K	5%	1/4W
R553	1-249-439-11	CARBON	68K	5%	1/4W
R554	1-249-417-11	CARBON	1K	5%	1/4W

Ref.No.	Part No.	Description			
R555	1-249-402-11	CARBON	56	5%	1/4W
R701	1-249-416-11	CARBON	820	5%	1/4W
R901	1-247-883-00	CARBON	150K	5%	1/4W
R902	1-249-425-11	CARBON	4.7K	5%	1/4W
RV1	1-228-995-00	RES, ADJ, CARBON	22K		
RV2	1-228-993-00	RES, ADJ, CARBON	4.7K		
RV3	1-228-995-00	RES, ADJ, CARBON	22K		
RV4	1-228-995-00	RES, ADJ, CARBON	22K		
RV5	1-228-990-00	RES, ADJ, METAL GLAZE	1K		
RV501	1-238-302-11	RES, VAR, CARBON	1K/1K		
		(HEADPHONES LEVEL)			
S1	1-554-596-21	SWITCH, KEY BOARD	(CONTINUE)		
S2	1-554-596-21	SWITCH, KEY BOARD	(SUFFLE)		
S3	1-554-596-21	SWITCH, KEY BOARD	(PROGRAM)		
S4	1-554-596-21	SWITCH, KEY BOARD	(TIME)		
S5	1-554-596-21	SWITCH, KEY BOARD	(▶▶)		
S6	1-554-596-21	SWITCH, KEY BOARD	(◀◀)		
S7	1-554-596-21	SWITCH, KEY BOARD	(■)		
S8	1-554-596-21	SWITCH, KEY BOARD	(▶/)		
S9	1-554-596-21	SWITCH, KEY BOARD	(≡ OPEN/CLOSE)		
S10	1-554-596-21	SWITCH, KEY BOARD	(DISK SKIP)		
S401	1-571-677-11	SWITCH, PUSH (1 KEY)	(CLOSE)		
S402	1-571-300-11	SWITCH, ROTARY	(BU-UP/OPEN)		
S403	1-571-453-11	SWITCH, LEVER SLIDE	(BU-DOWN)		
S404	1-571-274-11	SWITH, LEAF	(LIMIT IN)		
S901	1-552-928-00	SWITCH	(POWER)		
S902	1-570-707-21	SWITCH, SLIDE	(TIMER)		
S910	△.1-571-309-11	(E).....SWITCH	(VOLTAGE SELECT)		
T901	△.1-449-217-11	(AEP,UK)...TRANSFORMER,	(POWER)		
T901	△.1-449-218-11	(E).....TRANSFORMER,	(POWER)		
X301	1-567-741-11	VIBRATOR, CRYSTAL	16MHZ		
X401	1-567-686-11	OSCILLATOR, CERAMIC	4MHZ		

ACCESSORY & PACKING MATERIAL

1-465-186-11	REMOTE COMMANDER	(RM-D505)
1-559-533-11	CORD, CONNECTION	
3-701-630-00	BAG, POLYETHYLENE	
3-750-381-11	MANUAL, INSTRUCTION	
3-750-381-41	(AEP)...MANUAL, INSTRUCTION	
*3-795-629-11	(AEP)...INSTRUCTION	
4-384-285-01	COVER, BATTERY	
*4-885-838-00	LABEL, CLASS 1	
*4-924-418-01	PLATE (TRANSPORT), LOCK	
*4-930-516-01	CUSHION (LEFT)	
*4-930-517-01	CUSHION (RIGHT)	
*4-930-570-01	INDIVIDUAL CARTON	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

CDP-C500M

SONY®
SERVICE MANUAL


AEP Model
UK Model
E Model


SUPPLEMENT-1

File this supplement with the service manual.

Subject: Block Diagram

1. BLOCK DIAGRAM

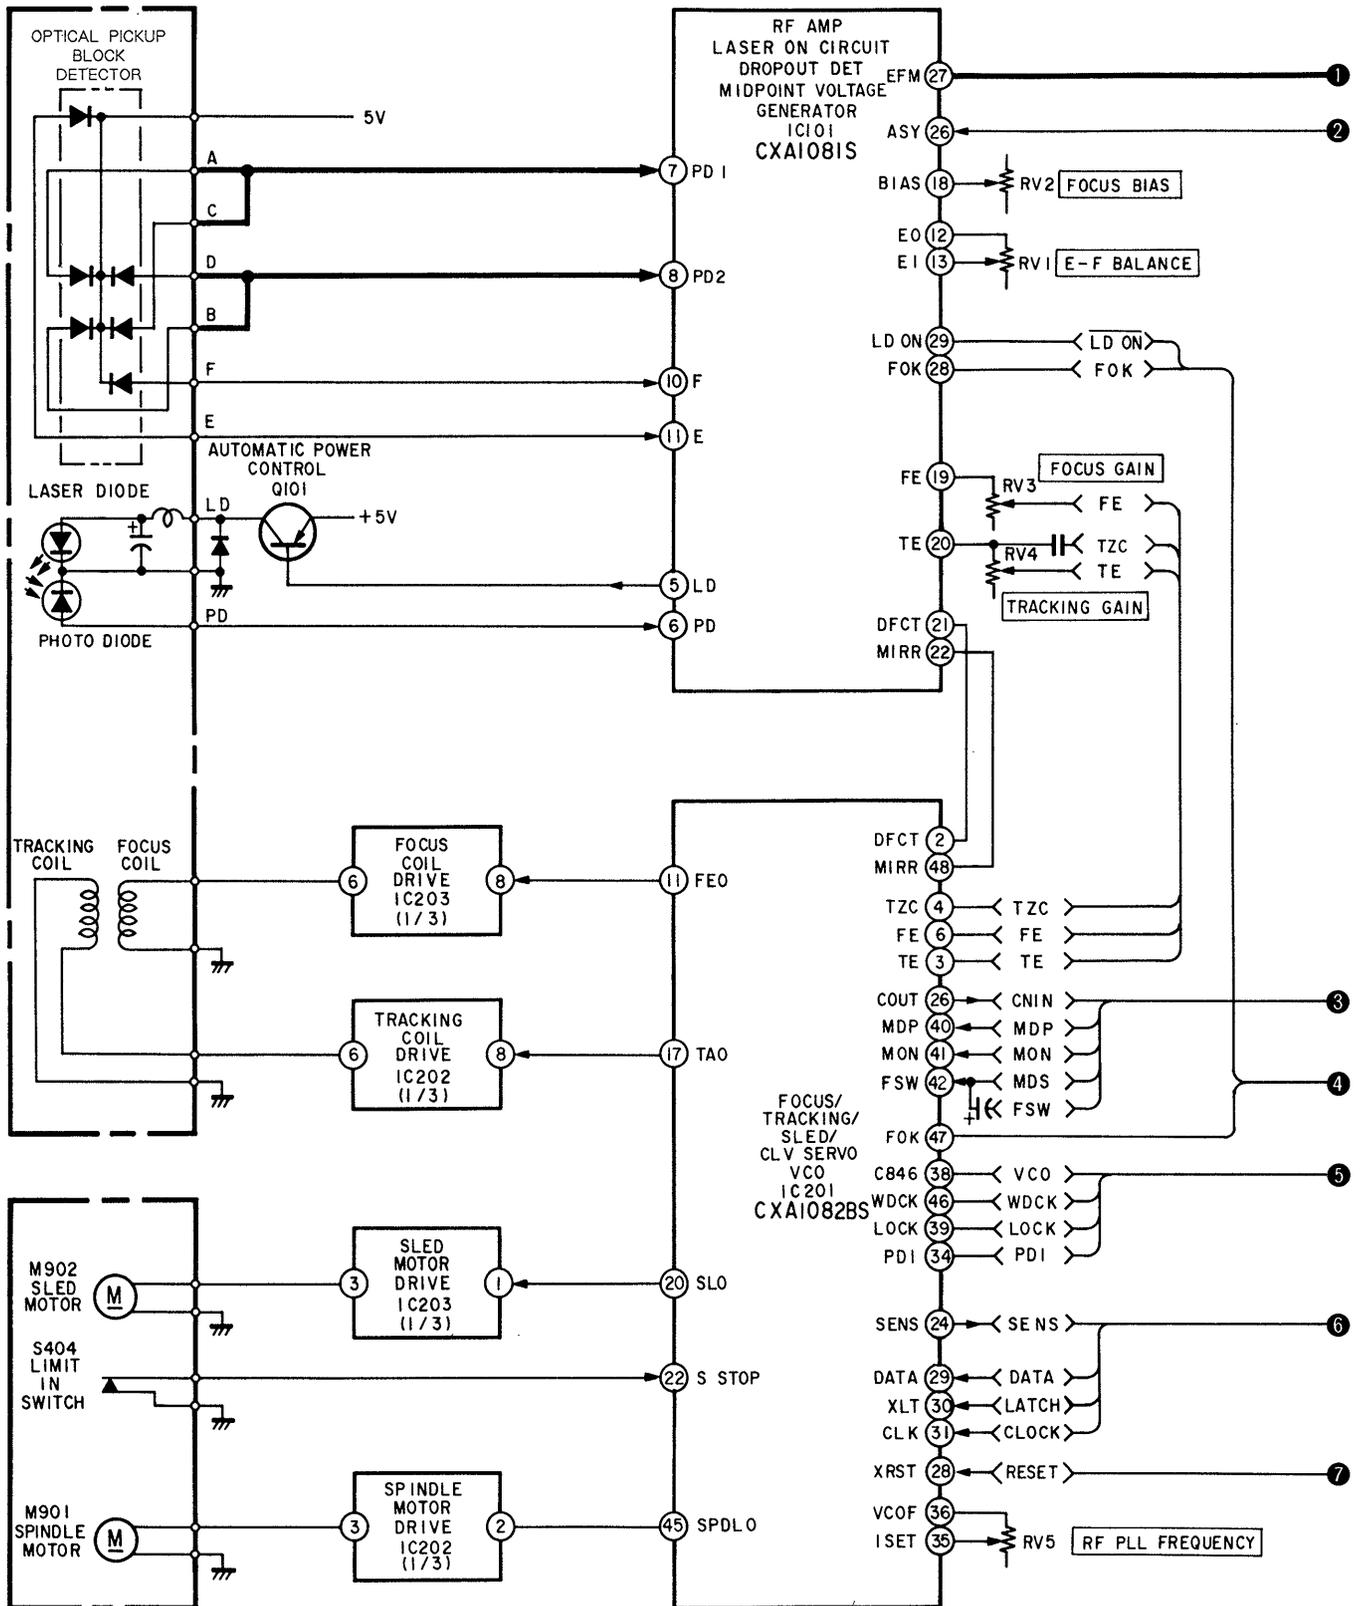

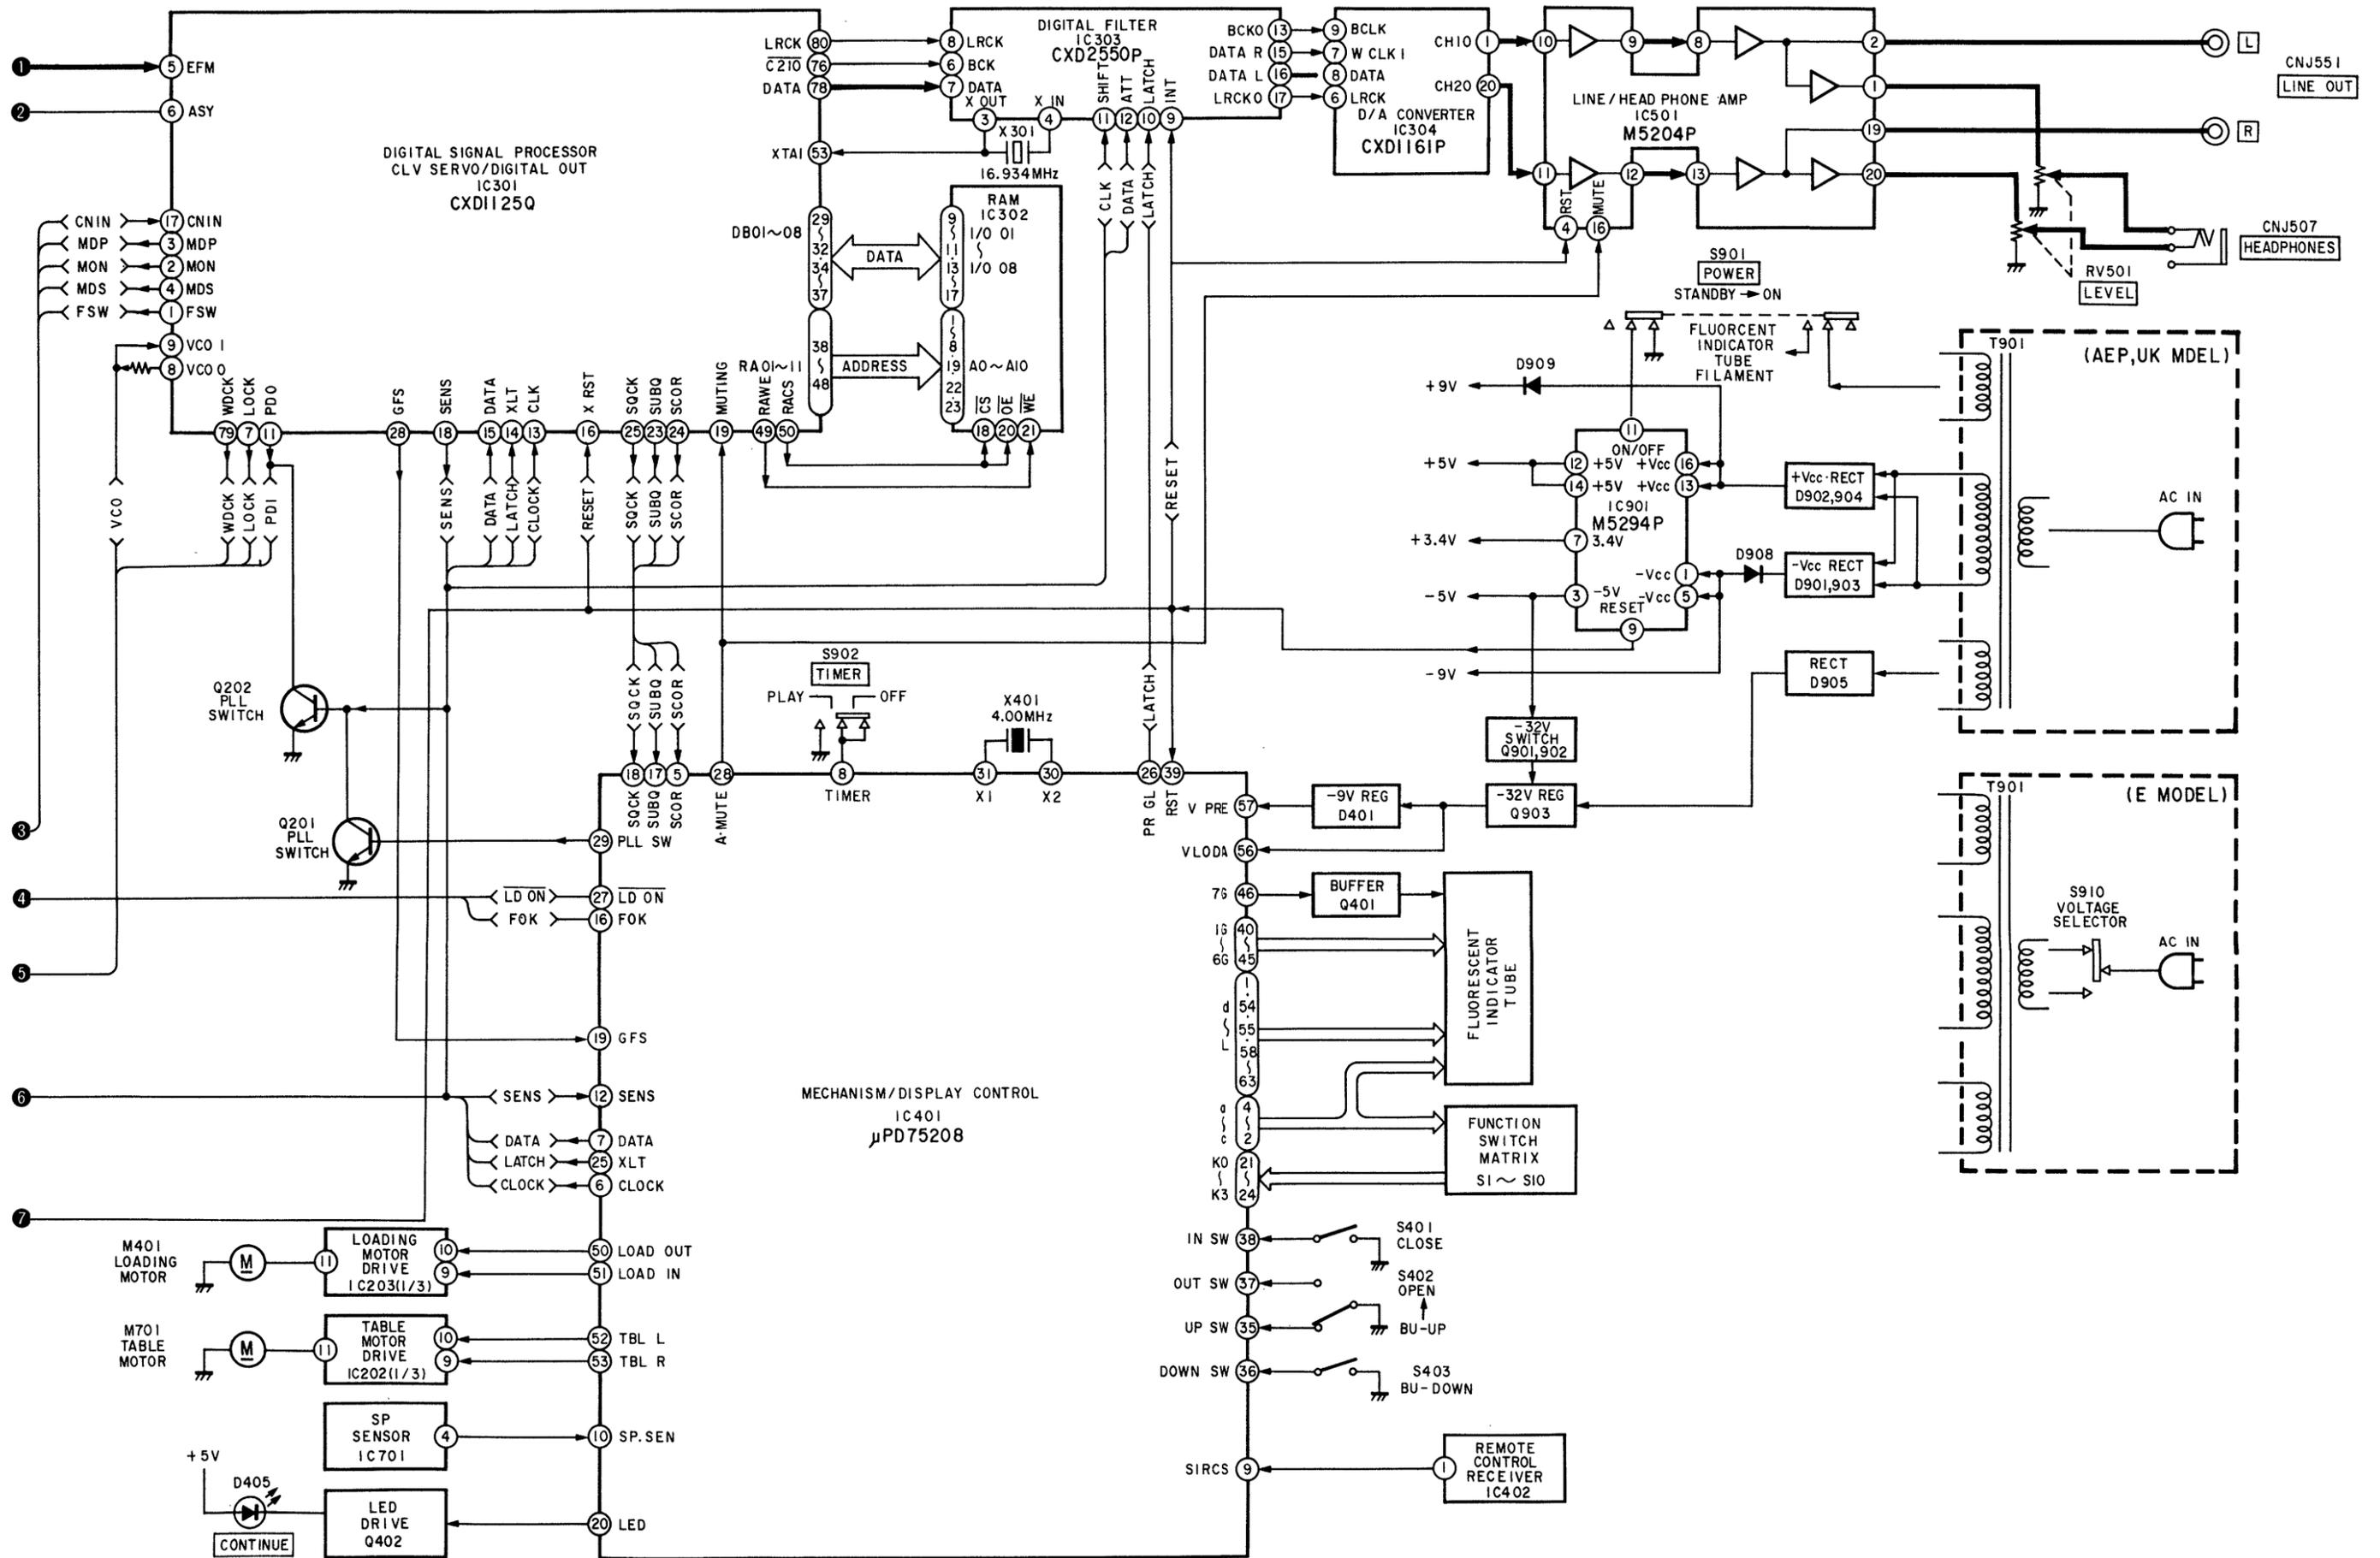

9-953-740-12
(**With 9-953-740-81**
Including 9-953-740-91
9-953-740-93)

Sony Corporation
Audio Group

English
9010506-1 (2)
Printed in Japan
© 1989. 5