

CDP-XE220/XE320

SERVICE MANUAL

Ver 1.1 2001.05

AEP Model
UK Model



Photo: CDP-XE320

| | |
|------------------------------------|-----------------|
| Model Name Using Similar Mechanism | CDP-XE210/XE310 |
| CD Mechanism Type | CDM14FL-5BD29C |
| Base Unit Type | BU-5BD29C |
| Optical Pick-up Type | KSS-213BA/F-NP |

SPECIFICATIONS

Compact disc player

| | |
|------------------------------|--|
| Laser | Semiconductor laser ($\lambda = 780 \text{ nm}$) Emission duration: continuous |
| Laser output | Max 44.6 μW * * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up block with 7 mm aperture. |
| Frequency response | 2 Hz to 20 kHz $\pm 0.5 \text{ dB}$ |
| Signal-to-noise ratio | More than 100 dB |
| Dynamic range | More than 92 dB |
| Harmonic distortion | Less than 0.005% |
| Channel separation | More than 95 dB |

Outputs

| | Jack type | Maximum output level | Load impedance |
|------------------------------|--------------------------|----------------------|---------------------|
| LINE OUT | Phono jacks | 2 V (at 50 kilohms) | Over 10 kilohms |
| DIGITAL OUT (OPTICAL) | Optical output connector | -18 dBm | Wave length: 660 nm |

General

| | |
|-------------------------------------|--|
| Power requirements | 220 V - 230 V AC, 50/60 Hz |
| Power consumption | 10 W |
| Dimensions (approx.) (w/h/d) | 430 \times 95 \times 290 mm (17 \times 3 3/4 \times 11 1/2 in.) incl. projecting parts |
| Mass (approx.) | 3.0 kg (6 lbs 10 oz) |

Supplied accessories

- Audio cord (2 phono plugs - 2 phono plugs) (1)
- Remote commander (remote) (CDP-XE320 only) (1)
- Sony SUM-3 (NS) batteries (CDP-XE320 only) (2)

Design and specifications are subject to change without notice.

COMPACT DISC PLAYER

SONY®

9-922-805-12
2001E0200-1
© 2001.5

Sony Corporation
Home Audio Company
Shinagawa Tec Service Manual Production Group

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.



This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.
ADVARSEL : USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VORSICHT : UNSICHTBARE LASERSTRALUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT, NICHT DEM STRAHL AUSSETZEN.
VARO! : AVATTAESSA JA SUOJALUKITUS OHITETTASSA OLET ALT-TINA NÄKYMÄTTÖMÄLLE LASERSÄTEYLLE. ÄLÄ KATSO SÄTEESEEN.
WARNING : OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.
ADVERSEL : USYMLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.
VIGYÁZAT! : A BURKOLAT NYITÁSAKOR LÁTHATATIAN LÉZERSUGÁRVESZÉLY! KERÜLJE A BESUGÁRZÁST!

The following caution label is located inside of the unit.

CAUTION
 Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

TABLE OF CONTENTS

1. SERVICING NOTE 3

2. GENERAL 4

3. DISASSEMBLY
 3-1. Front Panel 5
 3-2. Base Unit (BU-5BD29C) 5

4. TEST MODE 6

5. ELECTRICAL BLOCK CHECKING 8


6. DIAGRAMS
 6-1. Circuit Boards Location 10
 6-2. Printed Wiring Board – CD Section – 11
 6-3. Schematic Diagram – CD Section – 13
 6-4. Printed Wiring Board – Main Section – 15
 6-5. Schematic Diagram – Main Section – 17
 6-6. Printed Wiring Board – Panel Section – 19
 6-7. Schematic Diagram – Panel Section – 21
 6-8. IC Pin Functions 23
 6-9. IC Block Diagrams 29

7. EXPLODED VIEWS
 7-1. Main Section 32
 7-2. CD Mechanism Section (CDM14FL-5BD29C) 33
 7-3. Base Unit Section (BU-5BD29C) 34

8. ELECTRICAL PARTS LIST 35

MODEL IDENTIFICATION

— BACK PANEL —

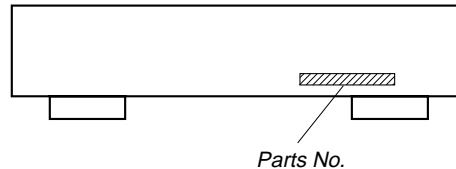

| PARTS No. | MODEL |
|--------------|-------------|
| 4-996-565-0□ | XE320 : AEP |
| 4-996-565-1□ | XE320 : UK |
| 4-996-565-2□ | XE220 : AEP |
| 4-996-565-3□ | XE220 : UK |

SAFETY-RELATED COMPONENT WARNING !!


COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 SERVICING NOTE

HOW TO OPEN THE DISC TRAY WHEN POWER SWITCH TURNS OFF

Insert a tapering driver into the aperture of the unit bottom, and turn in the direction of arrow.

** To close the disc table, turn the driver in the reverse direction.*

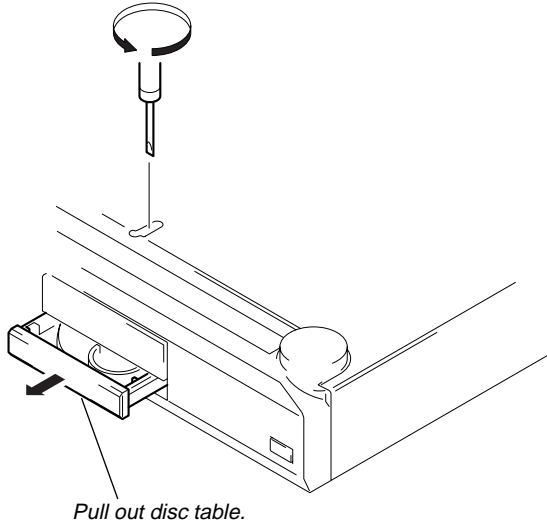

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK


The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the "S curve check" in "CD section adjustment" and check that the S curve waveform is output two times.

SECTION 2 GENERAL

Front Panel

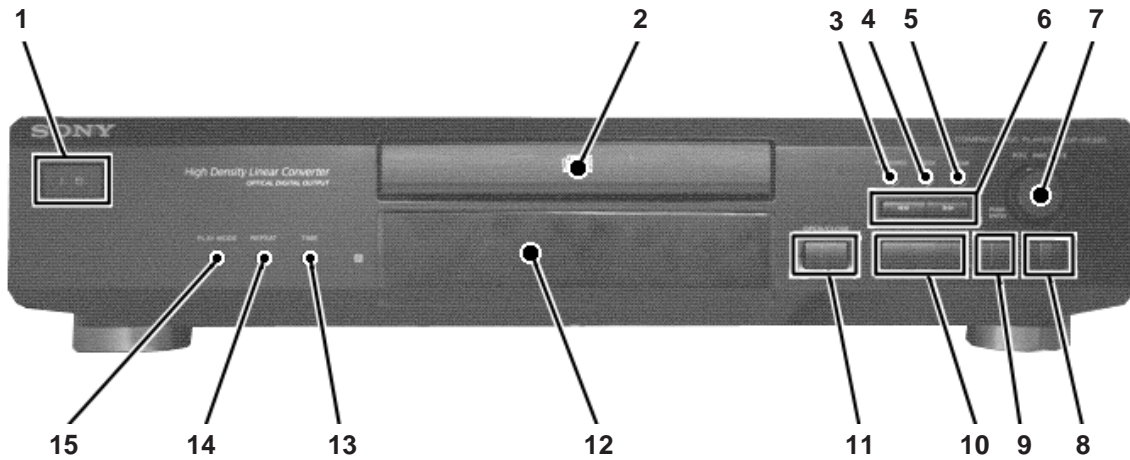

LOCATION OF PARTS AND CONTROLS

- 1 I/⏻ switch
- 2 DISC tray
- 3 PEAK SEARCH button
- 4 CHECK button
- 5 CLEAR button
- 6 ◀▶ button
- 7 ◀◀, AMS * ▶▶ knob
(PUSH ENTER button)
- 8 ■ (stop) button
- 9 || (pause) button
- 10 ▷ (play) button
- 11 ⚙ OPEN CLOSE button
- 12 Display window
- 13 TIME button
- 14 REPEAT button
- 15 PLAY MODE button

* AMS is the abbreviation for Automatic Music Sensor.


SECTION 3 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


3-1. FRONT PANEL

- In order to remove the front panel block when the power supply does not turn on, rotate the cam with tapering driver as the figure shows, and the loading part will be moved.

Then pull out the loading part by your hand to remove the loading panel as the figure shows. After that take out the front panel block.

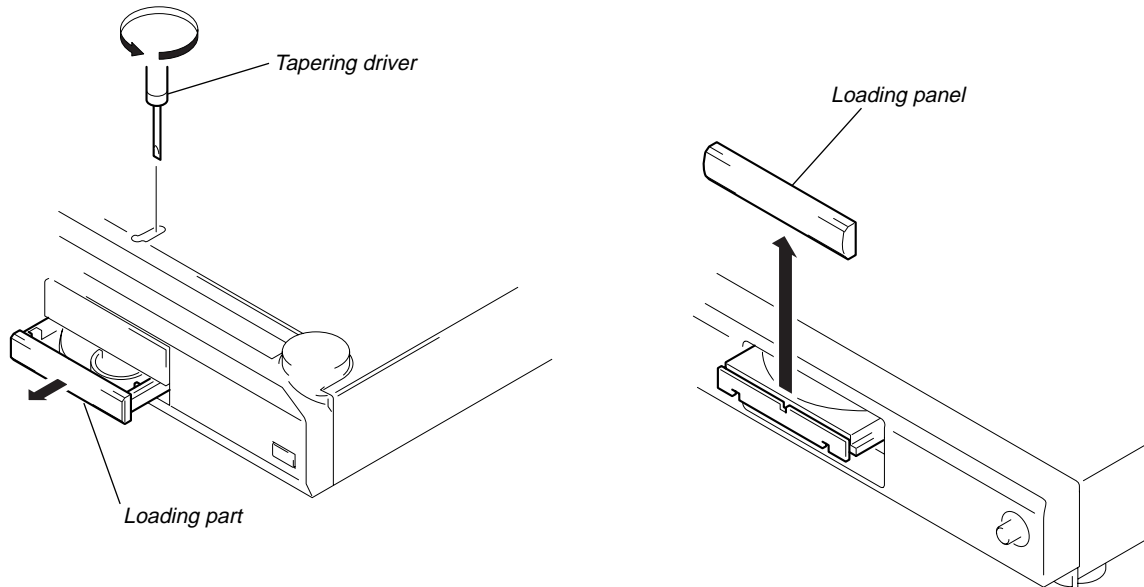

3-2. BASE UNIT (BU-5BD29C)

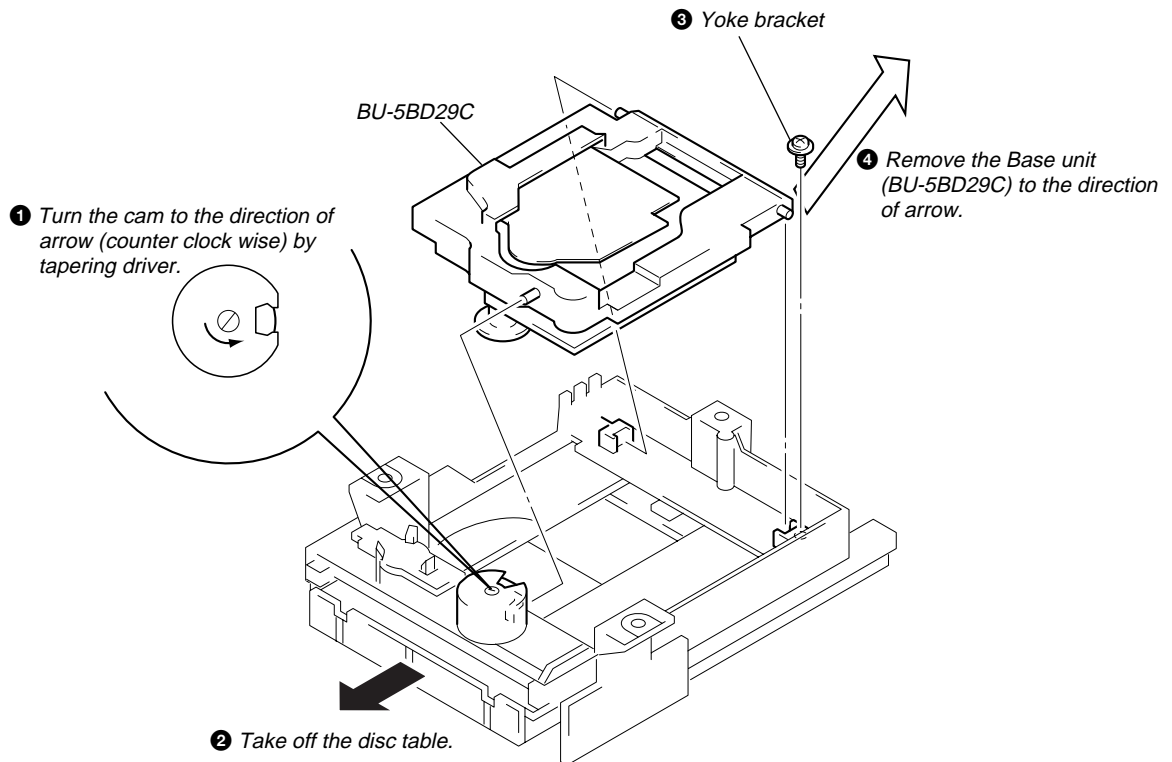

SECTION 4 TEST MODE

4-1. AF MODE

The following checks can be performed in the AF mode, which is set by connecting the TP2 (JW40 : AFADJ) terminal on MAIN board to the Ground and turning on the power.

• FL tube check

After all segments light up, when the ▷ button is pressed continuously, the following will be displayed. (Partial lighting 1)



When the ■ button is pressed continuously, the following will be displayed. (partial lighting 2)


| | | | | |
|----|----|----|----|----|
| | 2 | | 4 | |
| 6 | | 8 | | 10 |
| | 12 | | 14 | |
| 16 | | 18 | | 20 |

(Partial lighting 2)

When the OPEN/CLOSE ⇄ button is pressed continuously, all will light up again.

• Key check

All buttons have corresponding button numbers. When a button is pressed, the counter will count up and display the button's number. However, the counter will only count to "13". It will not count for buttons already pressed once, but will display the button's number.

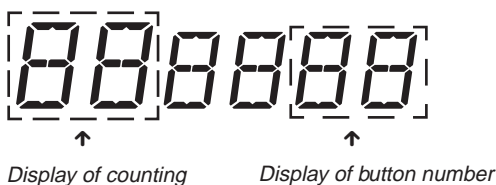

| Button | Button No. Displayed | Button | Button No. Displayed |
|-------------|----------------------|------------------|----------------------|
| | 02 | PEAK SERCH | 10 |
| ENTER (AMS) | 04 | CHECK | 11 |
| ◀◀ | 05 | CLEAR | 12 |
| ▶▶ | 06 | OPEN/ CLOSE ⇄ | All lit |
| TIME | 07 | PLAY ▷ | Partial lighting 1 |
| REPEAT | 08 | STOP ■ | Partial lighting 2 |
| PLAY MODE | 09 | | |

When the AMS knob is rotated to the right, the music calendar changes from 1 → -- → 20 → 1.

When rotated to the left, it changes from 20 → 1 → 20 --

• Remote commander check

When the ▷ button of the remote commander is pressed, the "▷" lights up. All go off when the other buttons are pressed.

4-2. ADJ MODE

The following operations are performed in the ADJ mode, which is set by connecting the TP3 (JW41 : ADJ) terminal to the Ground and turning on the power.

FUNCTIONS OF NUMBER BUTTONS (With the general remote commander)

| Button | Function |
|--------|---|
| 1 | Focus bias adjustment plus (Not used in servicing) |
| 2 | EF-BALANCE adjustment plus (Not used in servicing) |
| 3 | Tracking servo off |
| 4 | Tracking gain adjusting plus (Not used in servicing) |
| 5 | Laser power control off (Not used in servicing) |
| 6 | Focus bias adjustment minus (Not used in servicing) |
| 7 | EF-BALANCE adjustment minus (Not used in servicing) |
| 8 | Tracking servo on |
| 9 | Tracking gain adjustment minus ((Not used in servicing) |
| 10 | Laser power control on (Not used in servicing) |

4-3. AGING MODE

This unit is equipped with an aging mode to check operations of the mechanism deck.

• When faults occur:

Aging stops, and the state when aging stopped is displayed on the fluorescent display tube.

• When no fault has occurred:

Aging is continued repeatedly.

Aging method 1

(When using the aging mode remote controller (J-2501-123-A)):

1. Press the [I/⏻] button and turn ON the power.
2. Set the disc on the tray.
3. Press the [AGING START] button of the aging remote controller.
4. Aging starts and the message shown in Fig. 1 is displayed on the fluorescent display tube.
5. To end, press the [I/⏻] button.


Aging method 2 (When no aging mode remote controller):

1. Press the [I/⏻] button and turn ON the power.
2. Set the disc on the tray.
3. Press the [] button, [CHECK] button, and [PLAY MODE] button together in this order.
4. Aging starts and the message shown in Fig. 1 is displayed on the fluorescent display tube.
5. To end, press the [I/⏻] button.

Fig. 1 Message in Aging Mode

| Code No. | State | Display when normal | Display when abnormal |
|----------|--|---------------------|-----------------------|
| 0 | Load in | A0 | E0 |
| 1 | Access to TOC | A1 | E1 |
| 2 | Access to last track | A2 | E2 |
| 3 | Playback of last track (3 seconds) | Counter display | E3 |
| 4 | Access to first track | A4 | E4 |
| 5 | Playback of first track (3 seconds) | Counter display | E5 |
| 6 | Load out | A6 | E6 |

[MAIN BOARD] — Component Side —

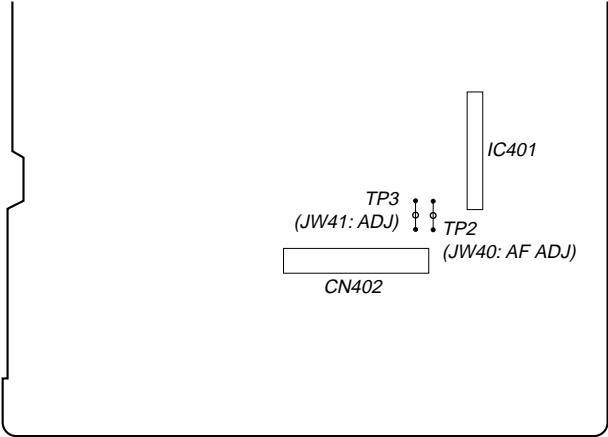


SECTION 5 ELECTRICAL BLOCK CHECKING

Note:

1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.


S Curve Check

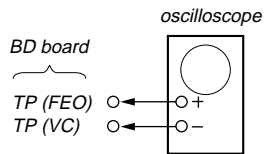

Procedure :

1. Connect oscilloscope to test point TP (FEO) on BD board.
2. Connect between test point TP (FOK) and ground by lead wire.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and turn Power switch on again and actuate the focus search. (actuate the focus search when disc table is moving in and out.)
5. Check the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3 ± 1 Vp-p.

S-curve waveform

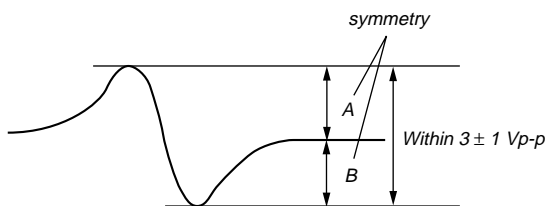


6. After check, remove the lead wire connected in step 2.

Note :

- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
- Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

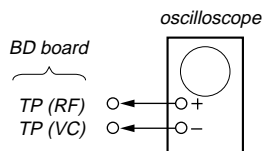


Procedure :

1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turn Power switch on.
3. Put disc (YEDS-18) in to play the number five track.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.


Note:

A clear RF signal waveform means that the shape “∩” can be clearly distinguished at the center of the waveform.

RF signal waveform

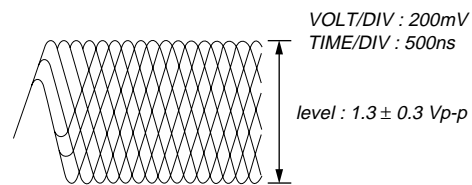

E-F Balance (1 Track Jump) Check (Without remote commander)

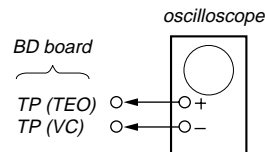


Procedure :


1. Connect oscilloscope to test point TP (TEO) on BD board.
2. Turn Power switch on.
3. Put disc (YEDS-18) in to play the number five track.
4. Press the “|| (Pause)” button. (Becomes the 1 track jump mode)
5. Check the level B of the oscilloscope's waveform and the A (DC voltage) of the center of the Traverse waveform.

Confirm the following :
A/B x 100 = less than $\pm 7\%$

1 track jump waveform

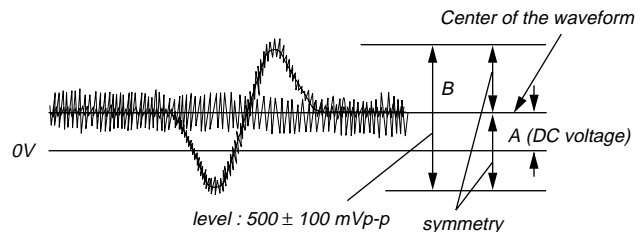

E-F Balance Check (With remote commander)

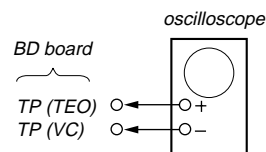


Procedure :


1. Connect the test point TP3 (ADJ) on MAIN board to the ground with a lead wire on main board.
2. Connect oscilloscope to test point TP (TEO) on BD board.
3. Turn the Power switch on to set the ADJ mode.
4. Put disc (YEDS-18) in to play the number five track.
5. Press the “3” button. (The tracking servo is turned OFF.)

SECTION 6 DIAGRAMS

6. Check the level B of the oscilloscope's waveform and the A (DC voltage) of the center of the Traverse waveform.
Confirm the following :
 $A/B \times 100 = \text{less than } \pm 7\%$

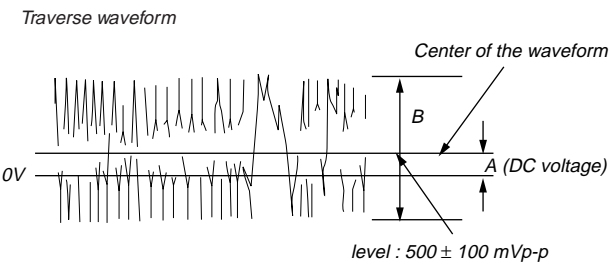


7. Press the "8" button. (The tracking servo is turned ON.) Confirm the C (DC voltage) is almost equal to the A (DC voltage) is step 6.

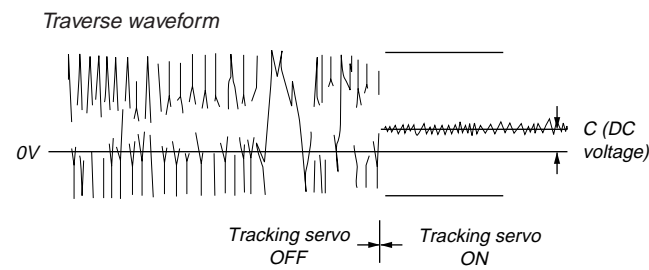


8. Disconnect the lead wire of TP3 (ADJ) connected in step 1.

[MAIN BOARD] — Component Side —

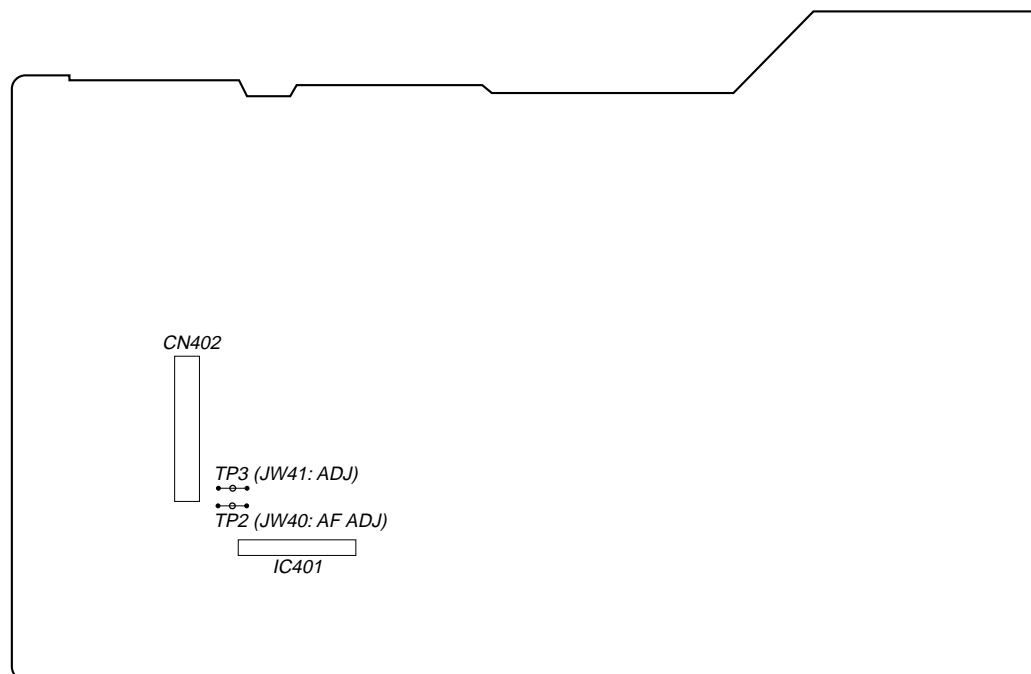


Adjustment Location :

[BD BOARD] — Side A —

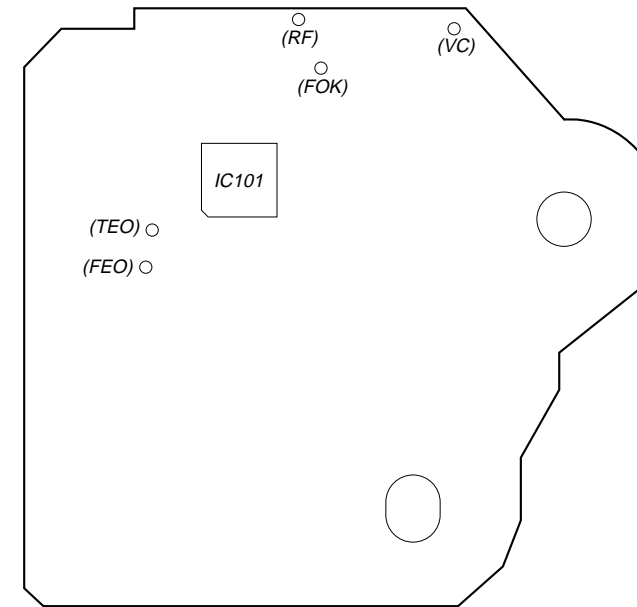

6-1. CIRCUIT BOARDS LOCATION

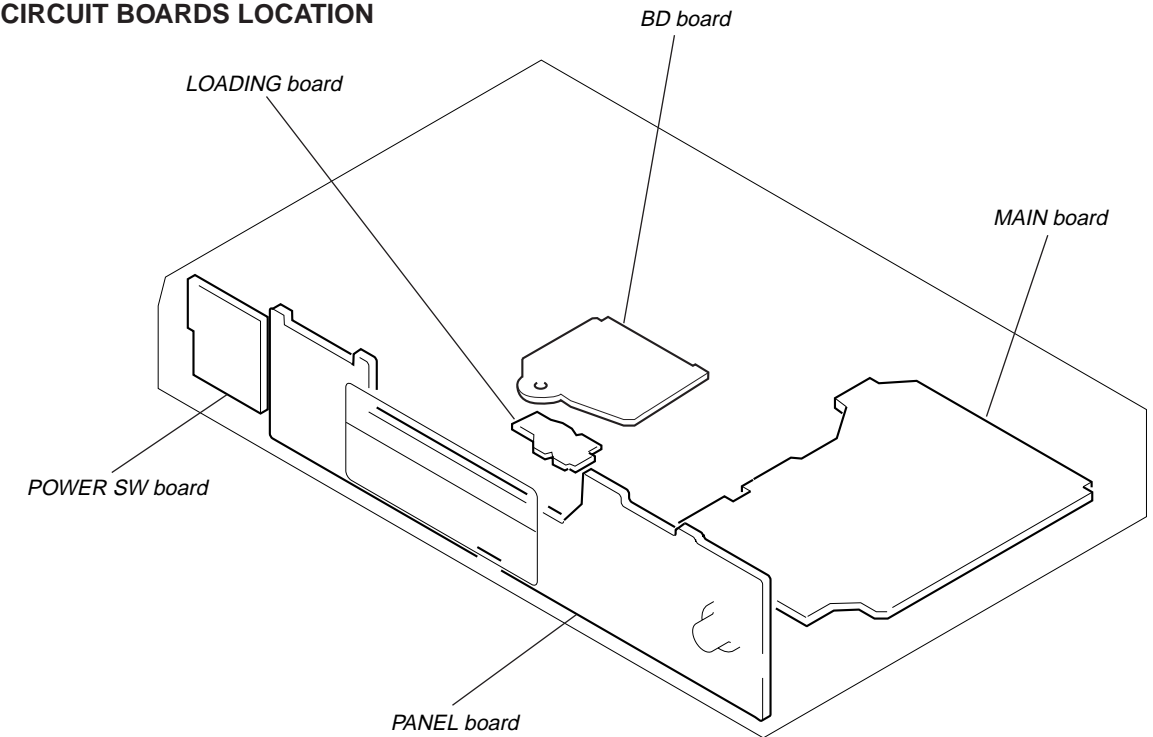

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For schematic diagrams.

Note:

- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4 \text{ W}$ or less unless otherwise specified.
- Δ : internal component.
- \square : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.


- $\text{B}+$: B+ Line.
- $\text{B}-$: B- Line.
- \square : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : STOP
- () : PLAY
- * : can not to be measured
- Voltages are taken with a VOM (Input impedance $10 \text{ M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- \square : CD
- \square : digital out

For printed wiring boards.


Note:

- \square : parts extracted from the component side.
- \square : parts extracted from the conductor side.
- \blacksquare : parts mounted on the conductor side.
- \circ : Through hole.
- \square : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)

WAVEFORMS — CD SECTION —

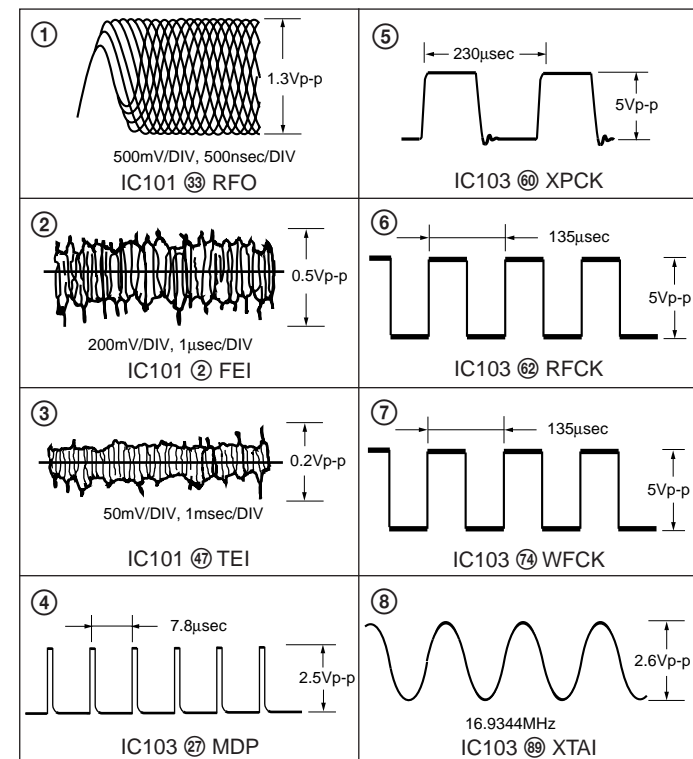


— PANEL SECTION —

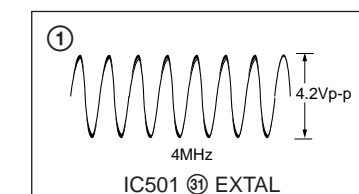


6-2. PRINTED WIRING BOARD – CD SECTION –
 • See page 10 for Circuit Boards Location.

• Semiconductor Location

| Ref. No. | Location |
|----------|----------|
| IC101 | C-1 |
| IC102 | B-1 |
| IC103 | C-2 |
| Q101 | C-6 |

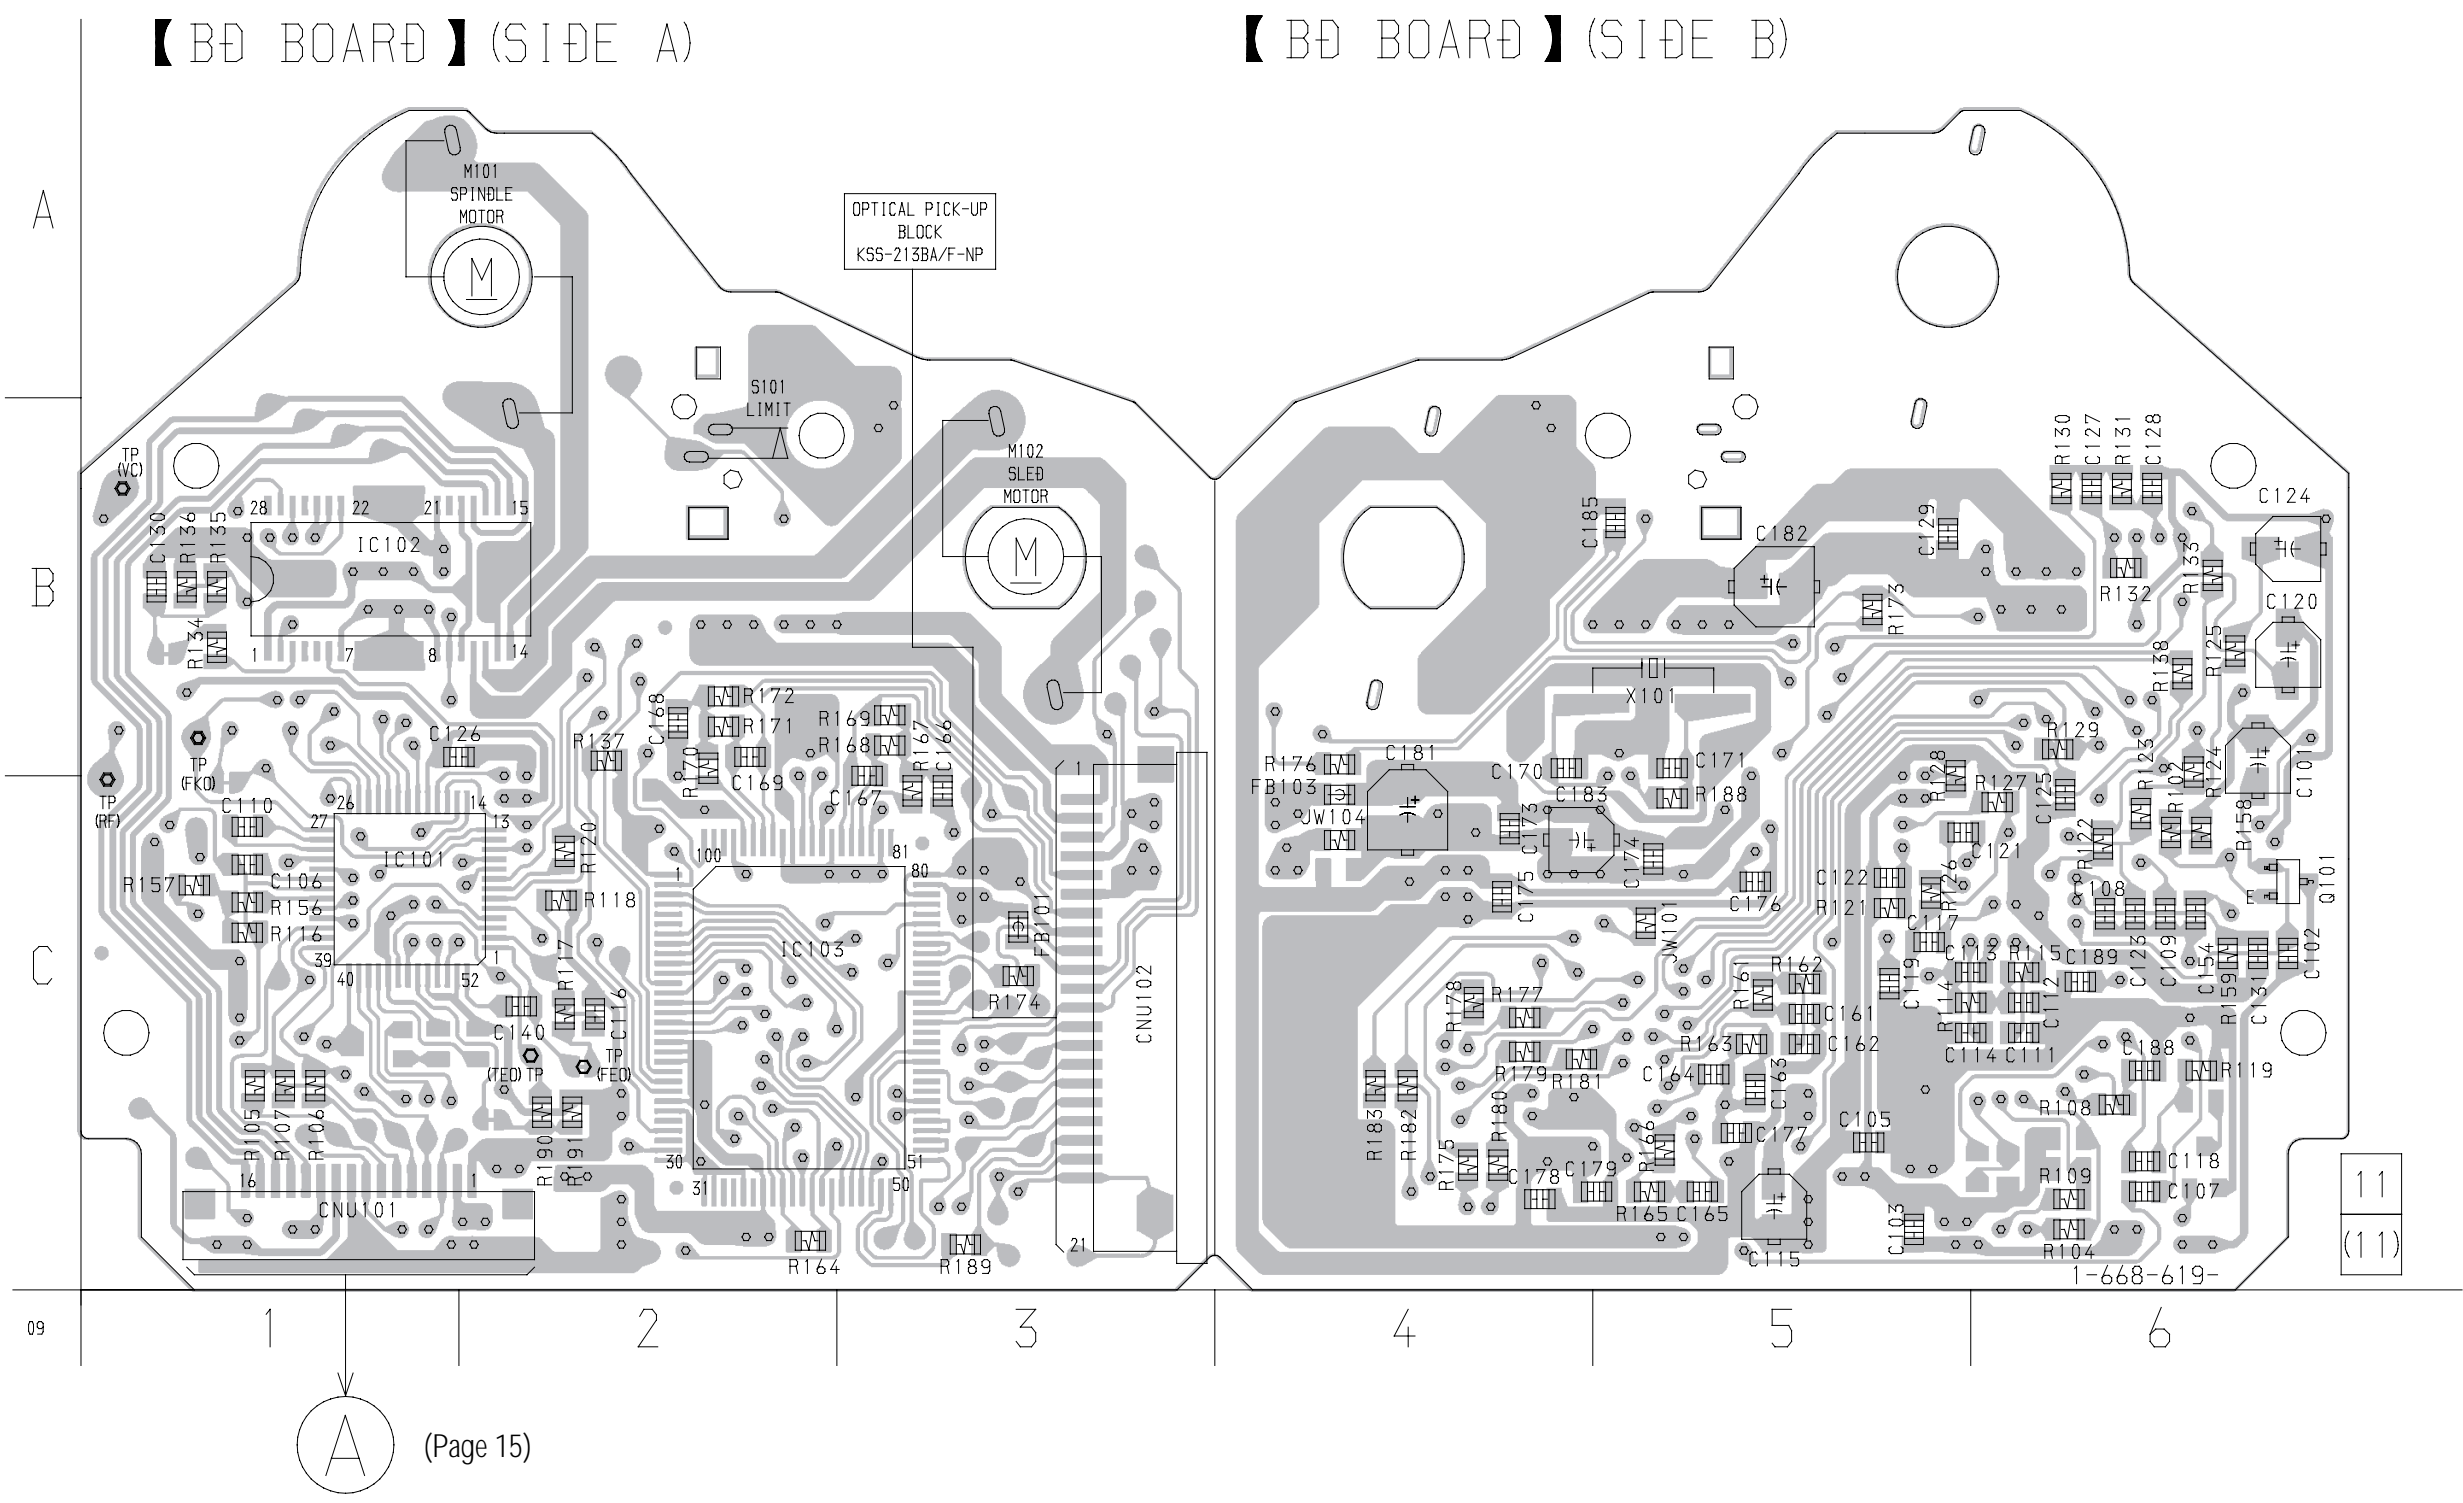


• Indication of transistor

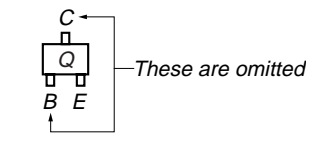

6-3. SCHEMATIC DIAGRAM – CD SECTION –

- See page 10 for Waveforms.
- See page 23 for IC Pin Functions.
- See page 29 for IC Block Diagrams.

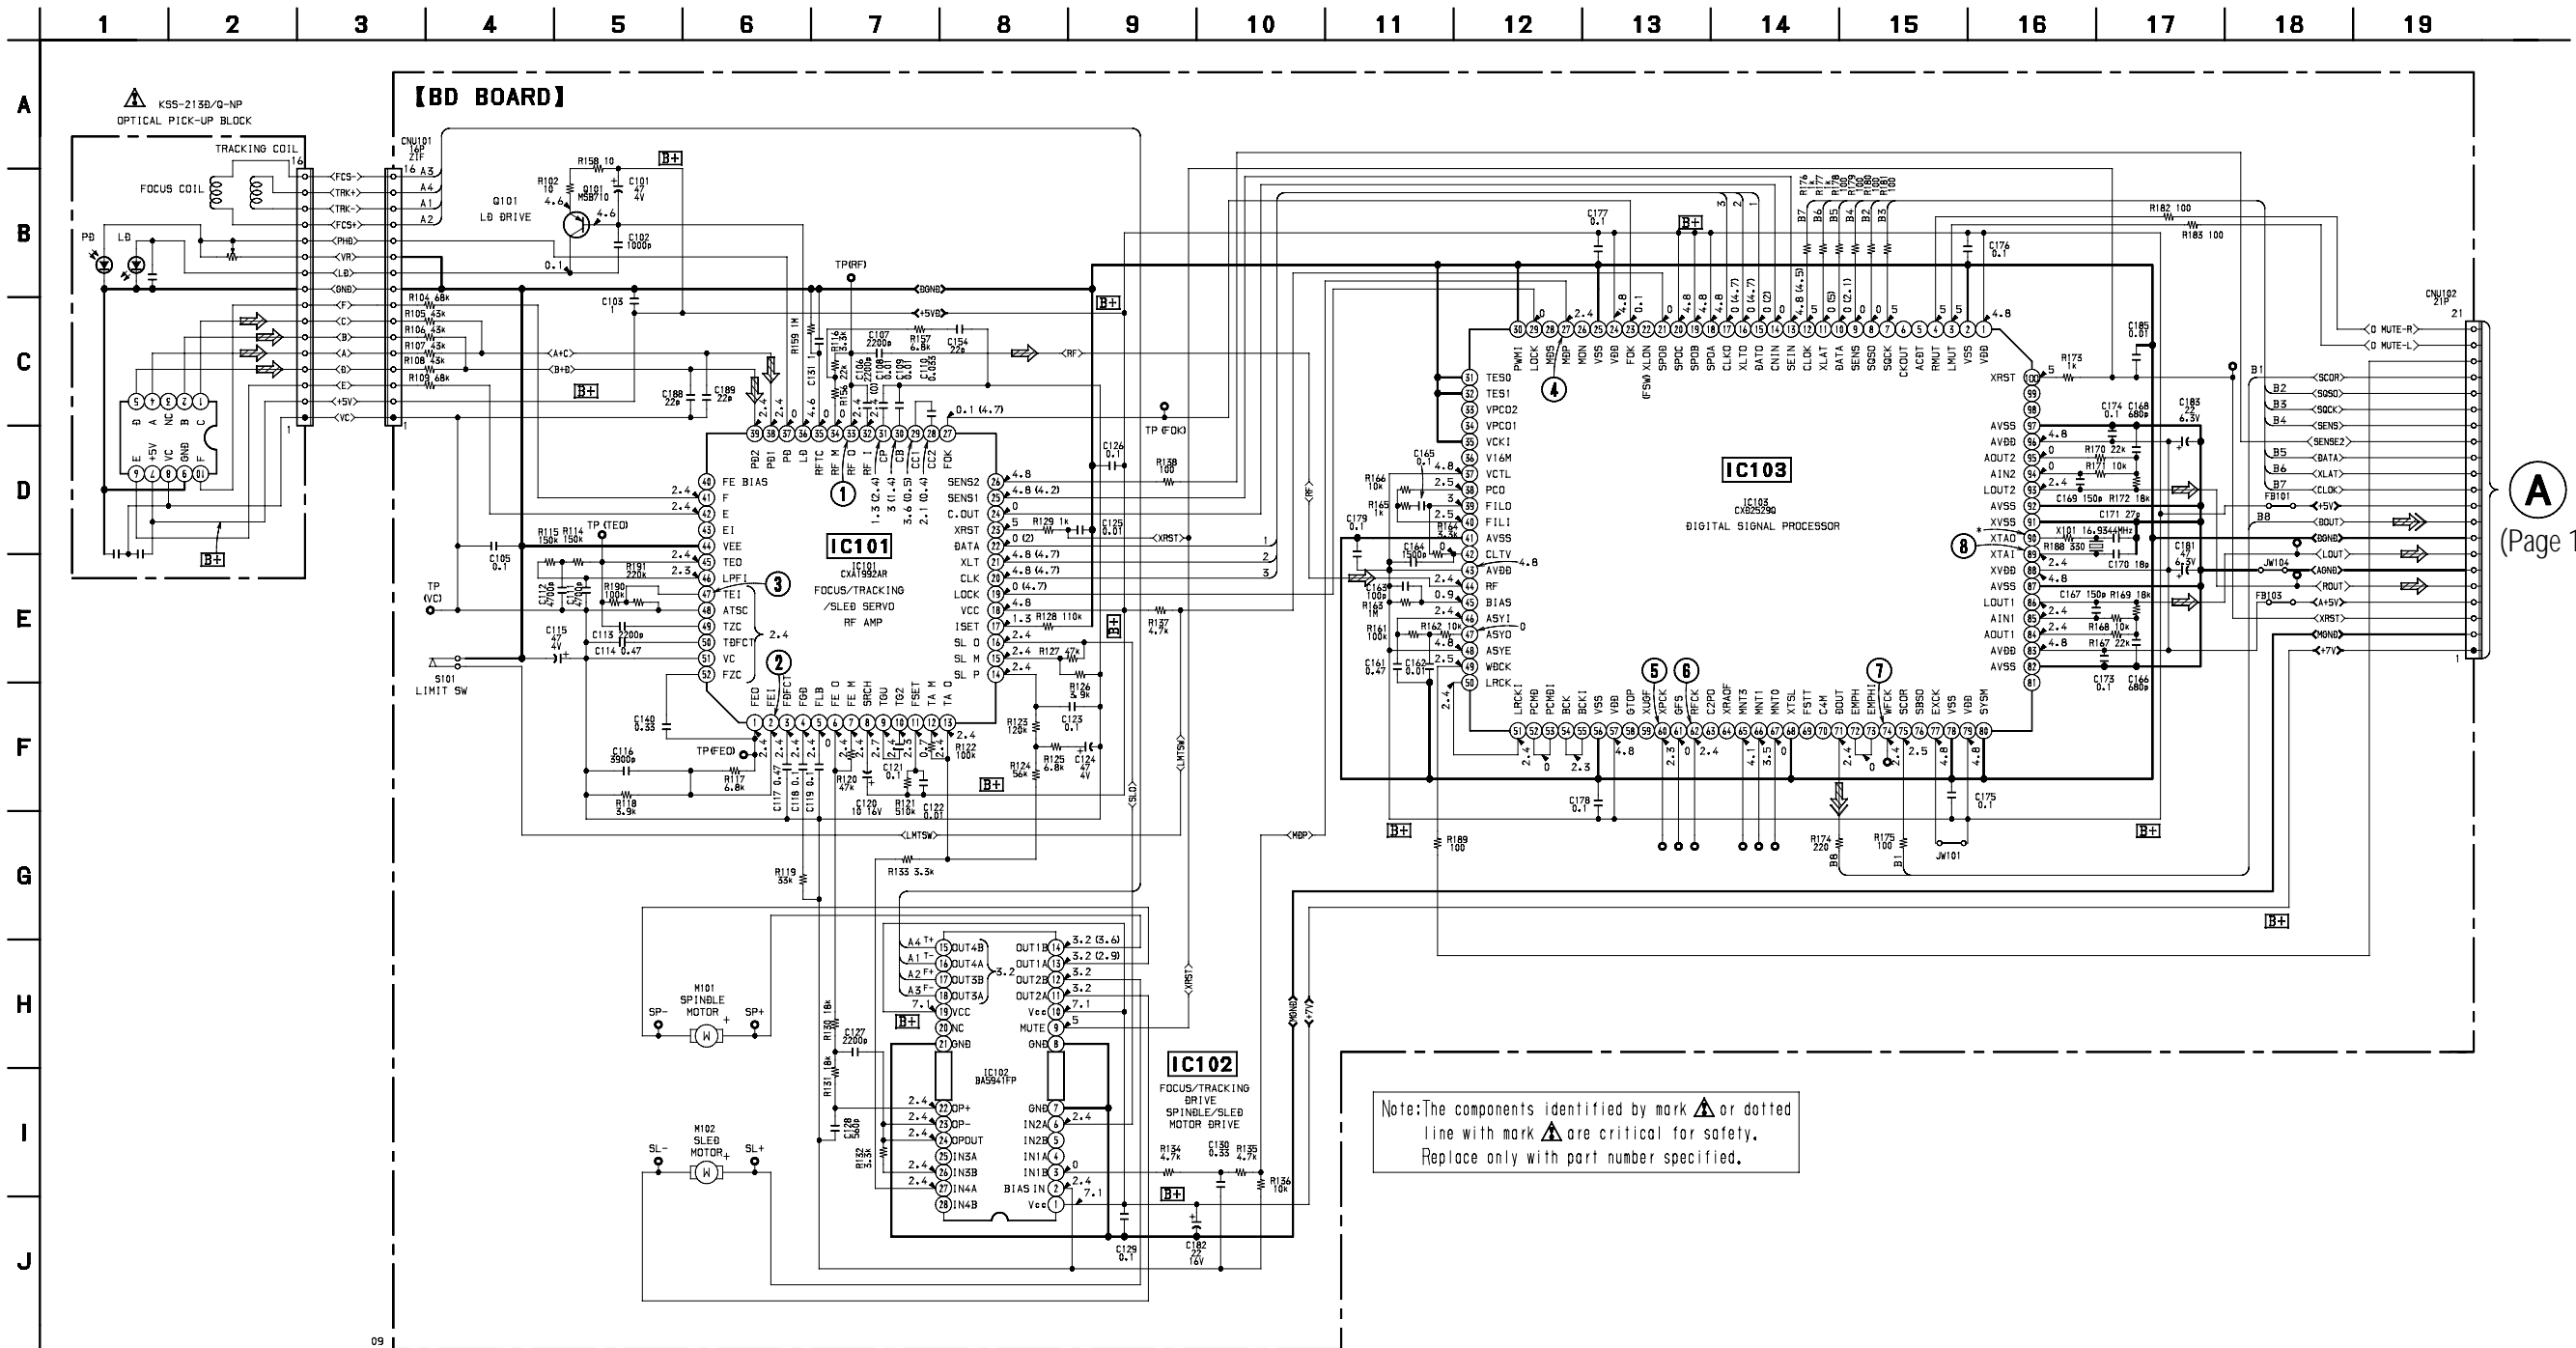


Note: The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.


6-4. PRINTED WIRING BOARD – MAIN SECTION –
 • See page 10 for Circuit Boards Location.

• Semiconductor Location


| Ref. No. | Location |
|----------|----------|
| D401 | E-2 |
| D402 | E-2 |
| D403 | B-3 |
| D404 | E-2 |
| D701 | E-5 |
| D702 | E-5 |
| D703 | D-5 |
| D704 | D-5 |
| D705 | D-5 |
| D706 | C-5 |
| D901 | C-7 |
| D902 | C-7 |
| D903 | D-7 |
| D904 | D-7 |
| D905 | C-7 |
| IC301 | B-7 |
| IC302 | B-7 |
| IC303 | A-9 |
| IC401 | B-3 |
| IC701 | C-6 |
| Q302 | B-8 |
| Q303 | B-8 |
| Q304 | C-7 |
| Q352 | B-8 |
| Q353 | B-8 |
| Q354 | A-5 |
| Q401 | E-3 |
| Q402 | E-3 |
| Q701 | C-5 |

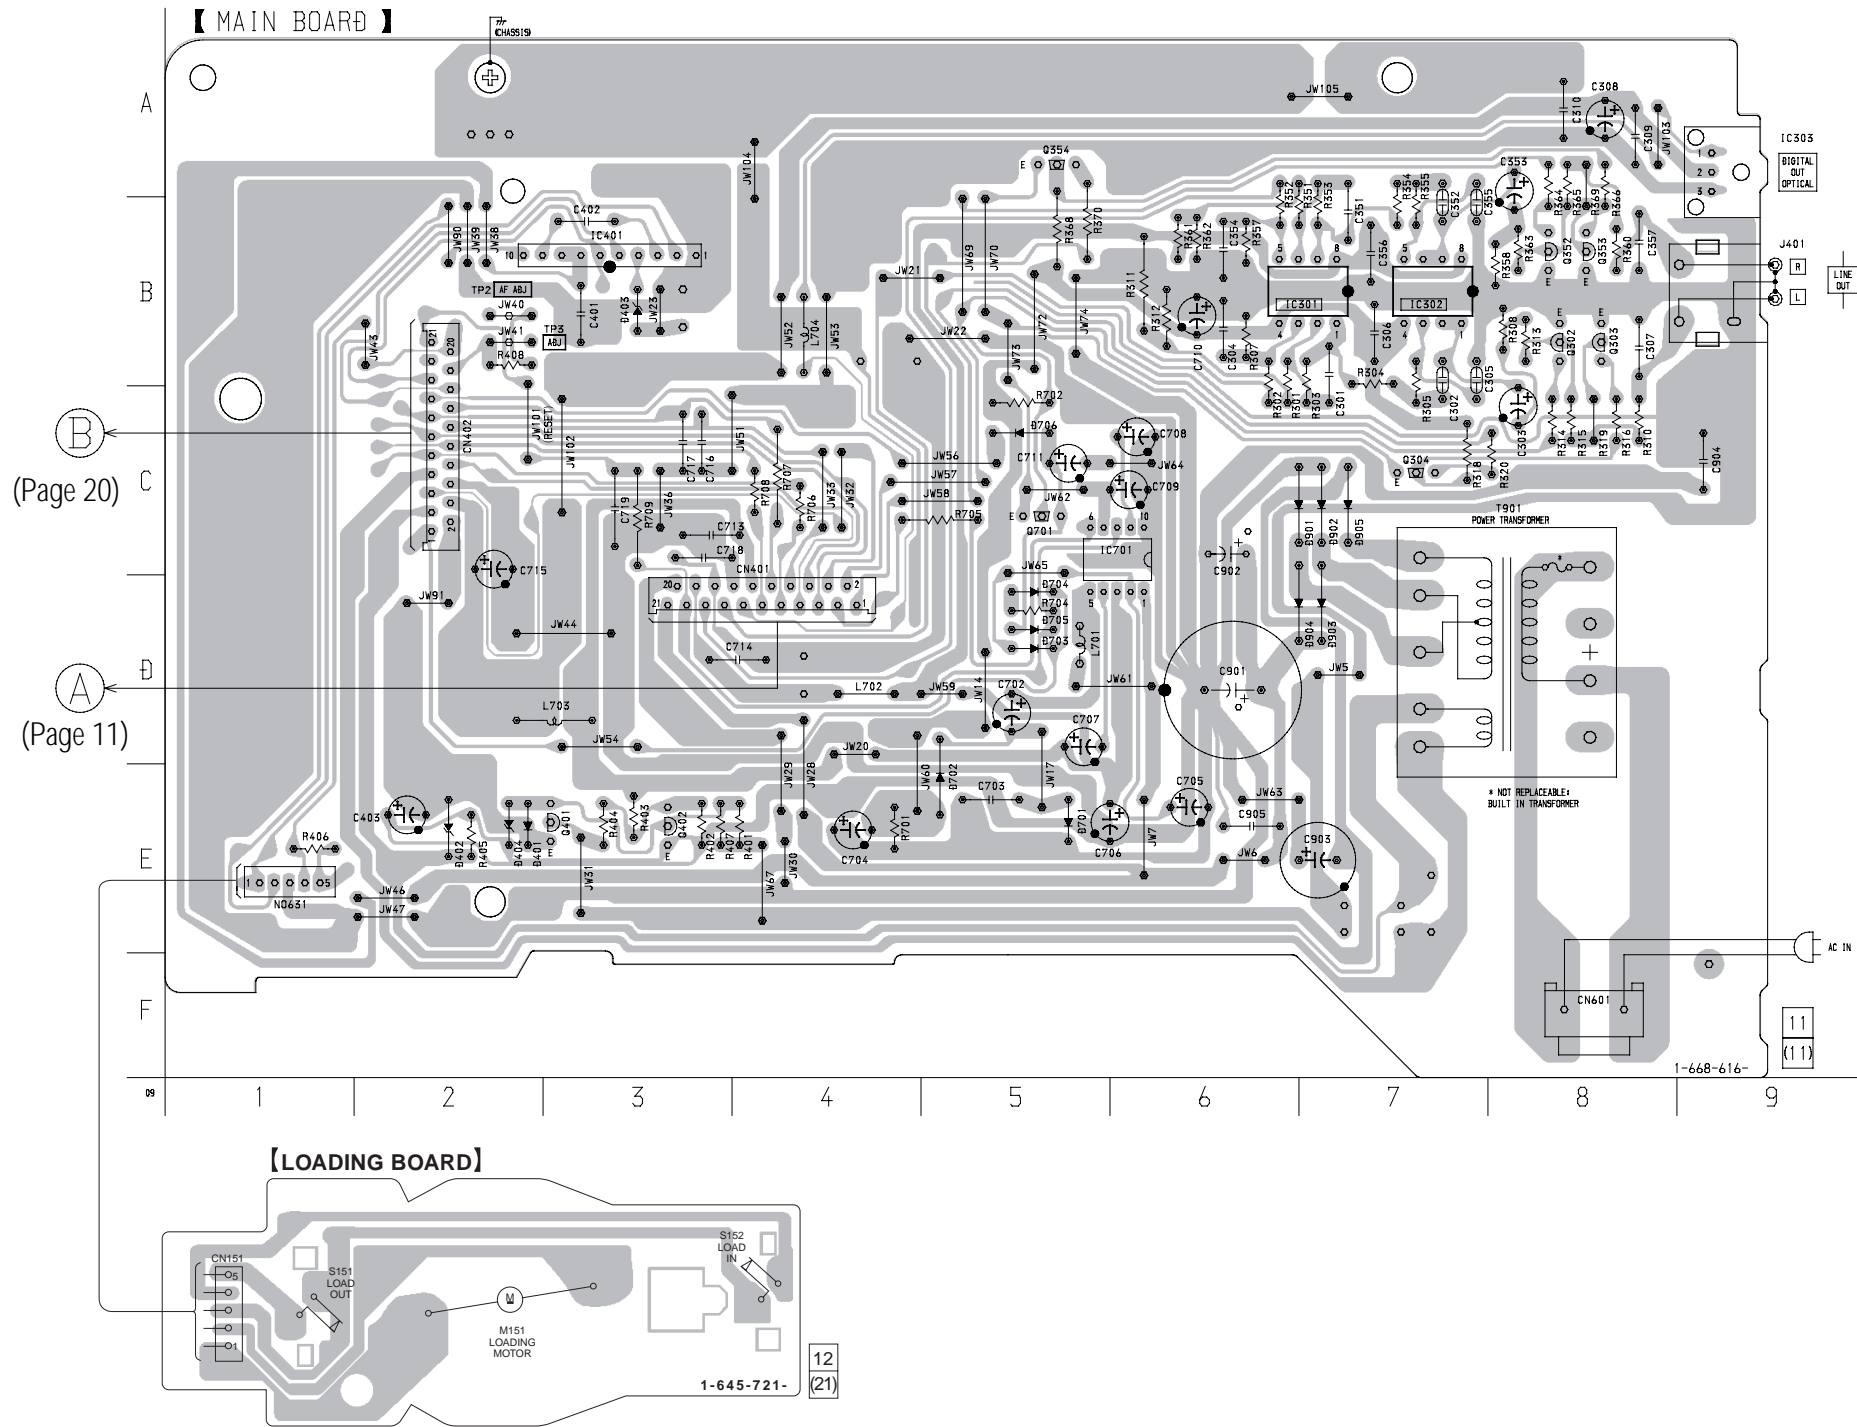

• Indication of transistor

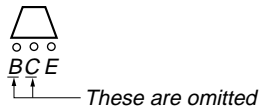

6-5. SCHEMATIC DIAGRAM – MAIN SECTION –
• See page 31 for IC Block Diagrams.

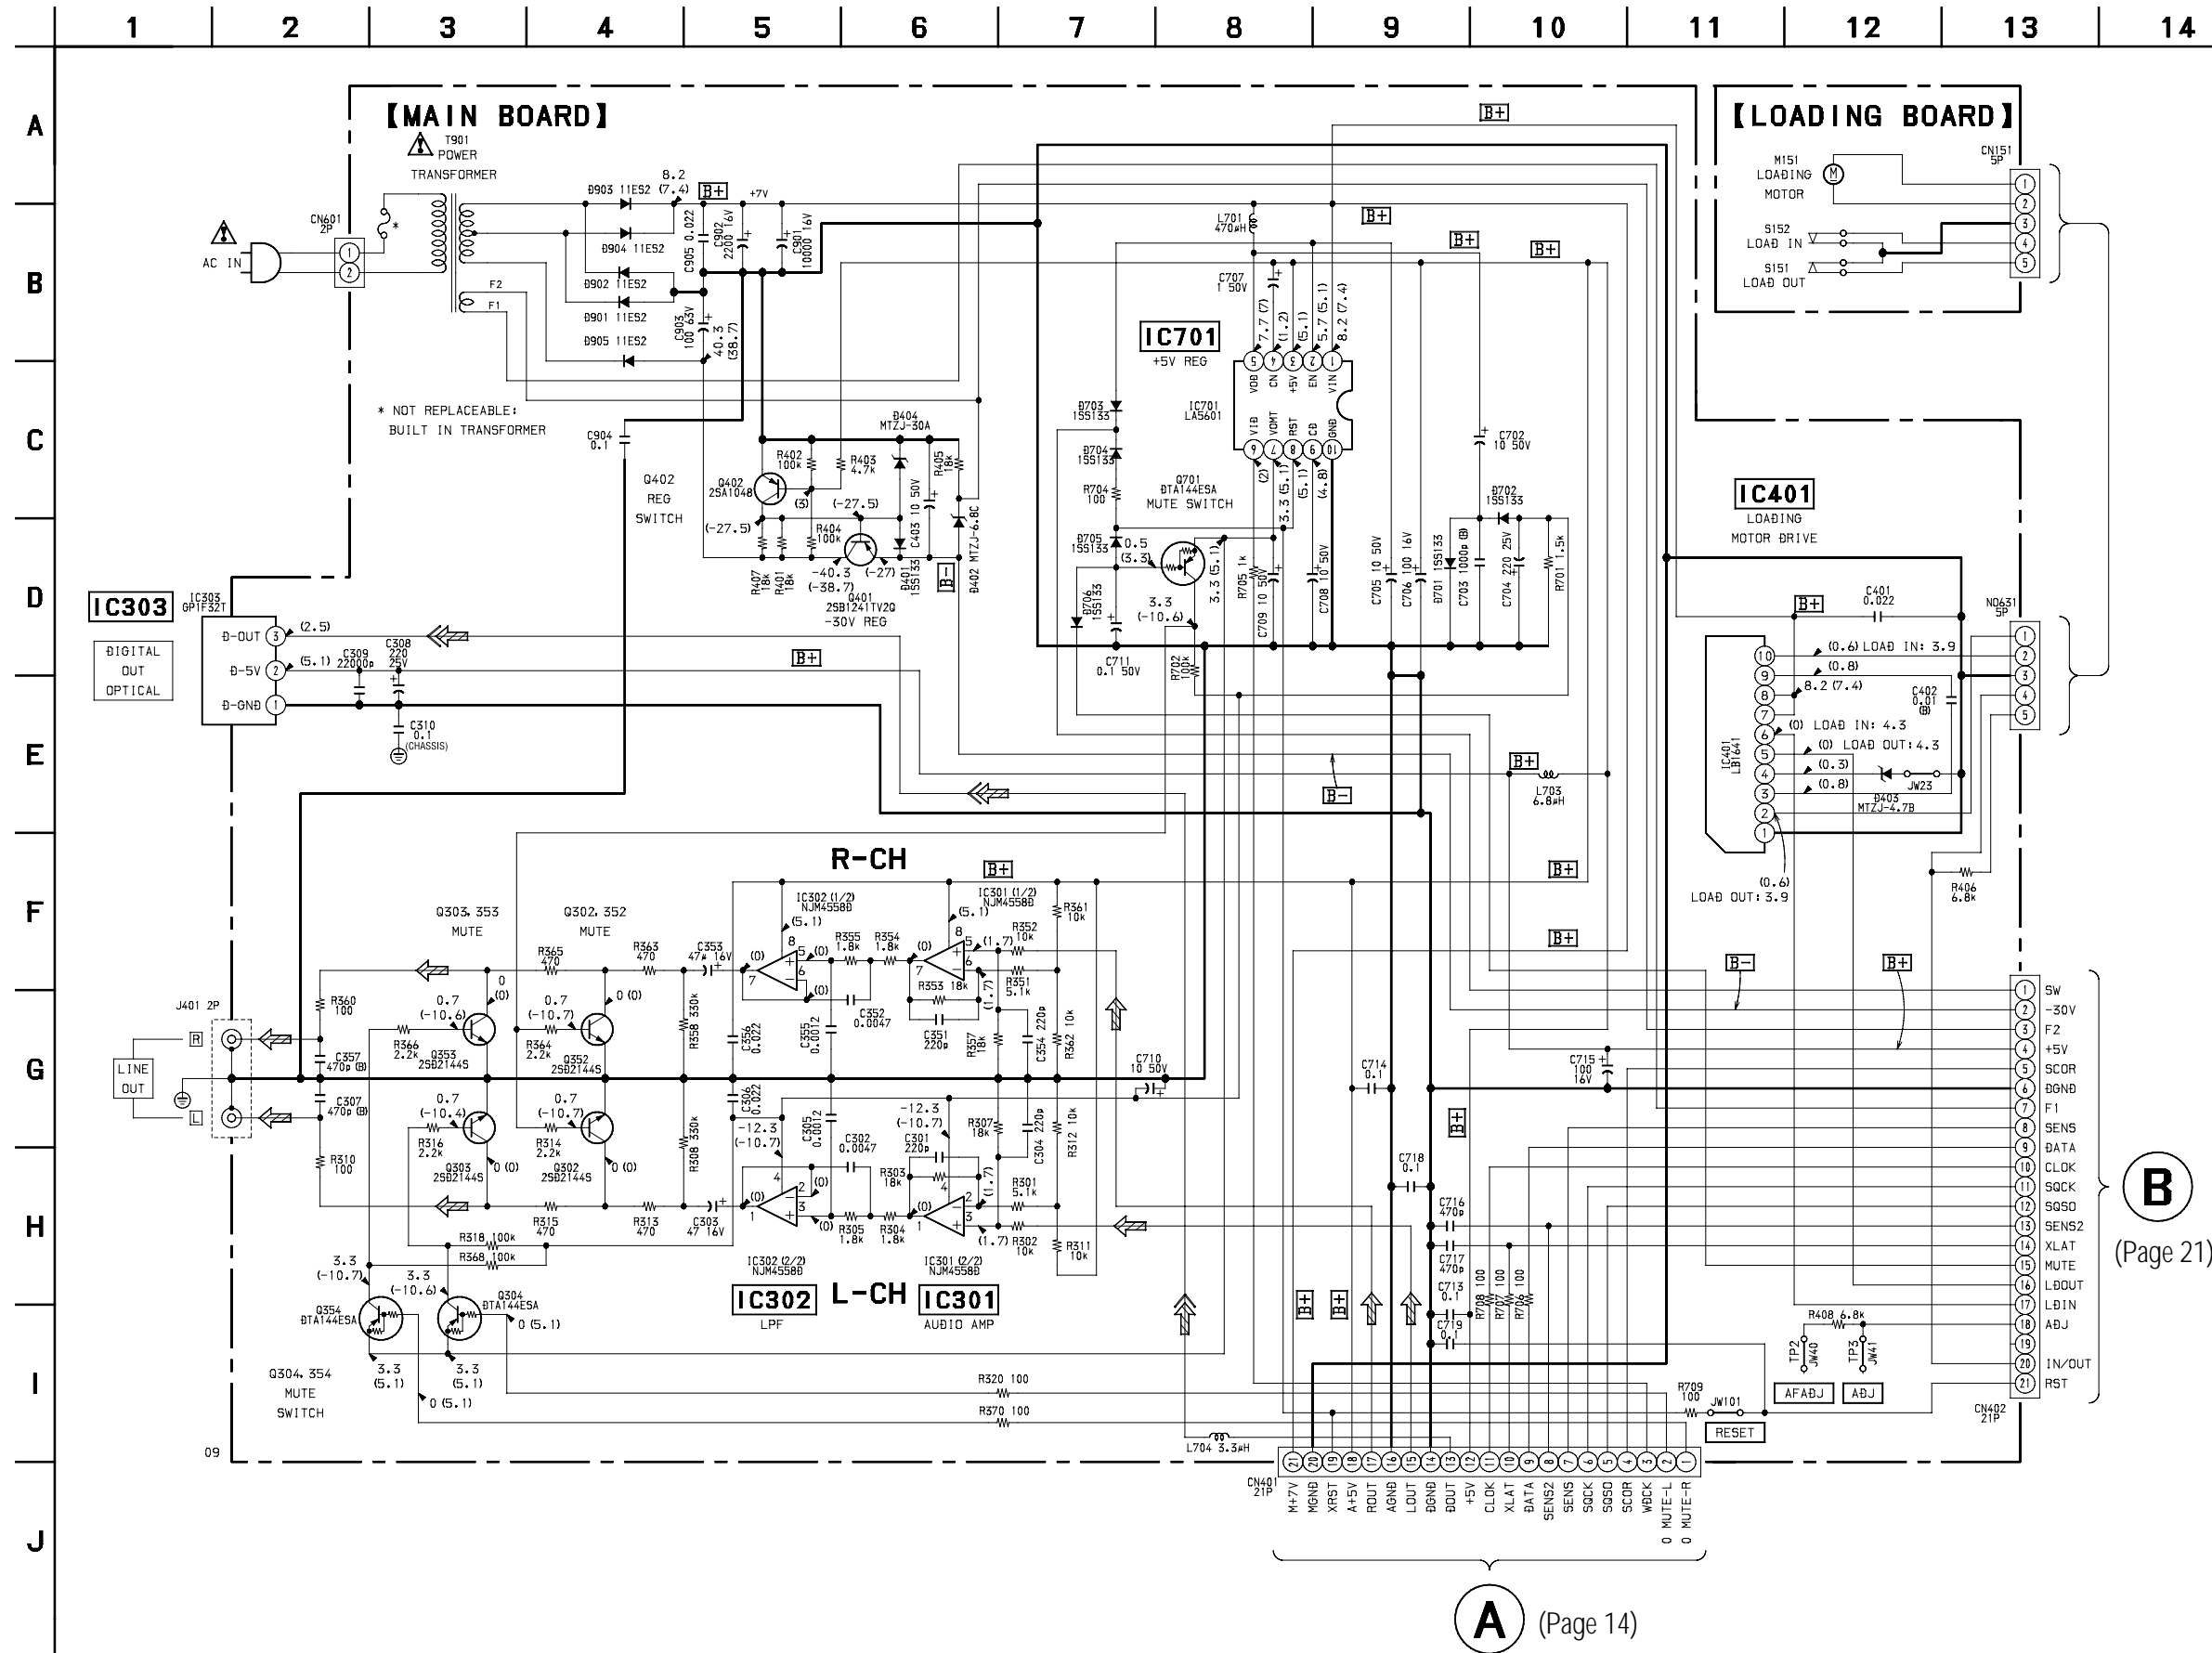


A (Page 14)

B (Page 21)


6-6. PRINTED WIRING BOARD – PANEL SECTION –
 • See page 10 for Circuit Boards Location.


【PANEL BOARD】

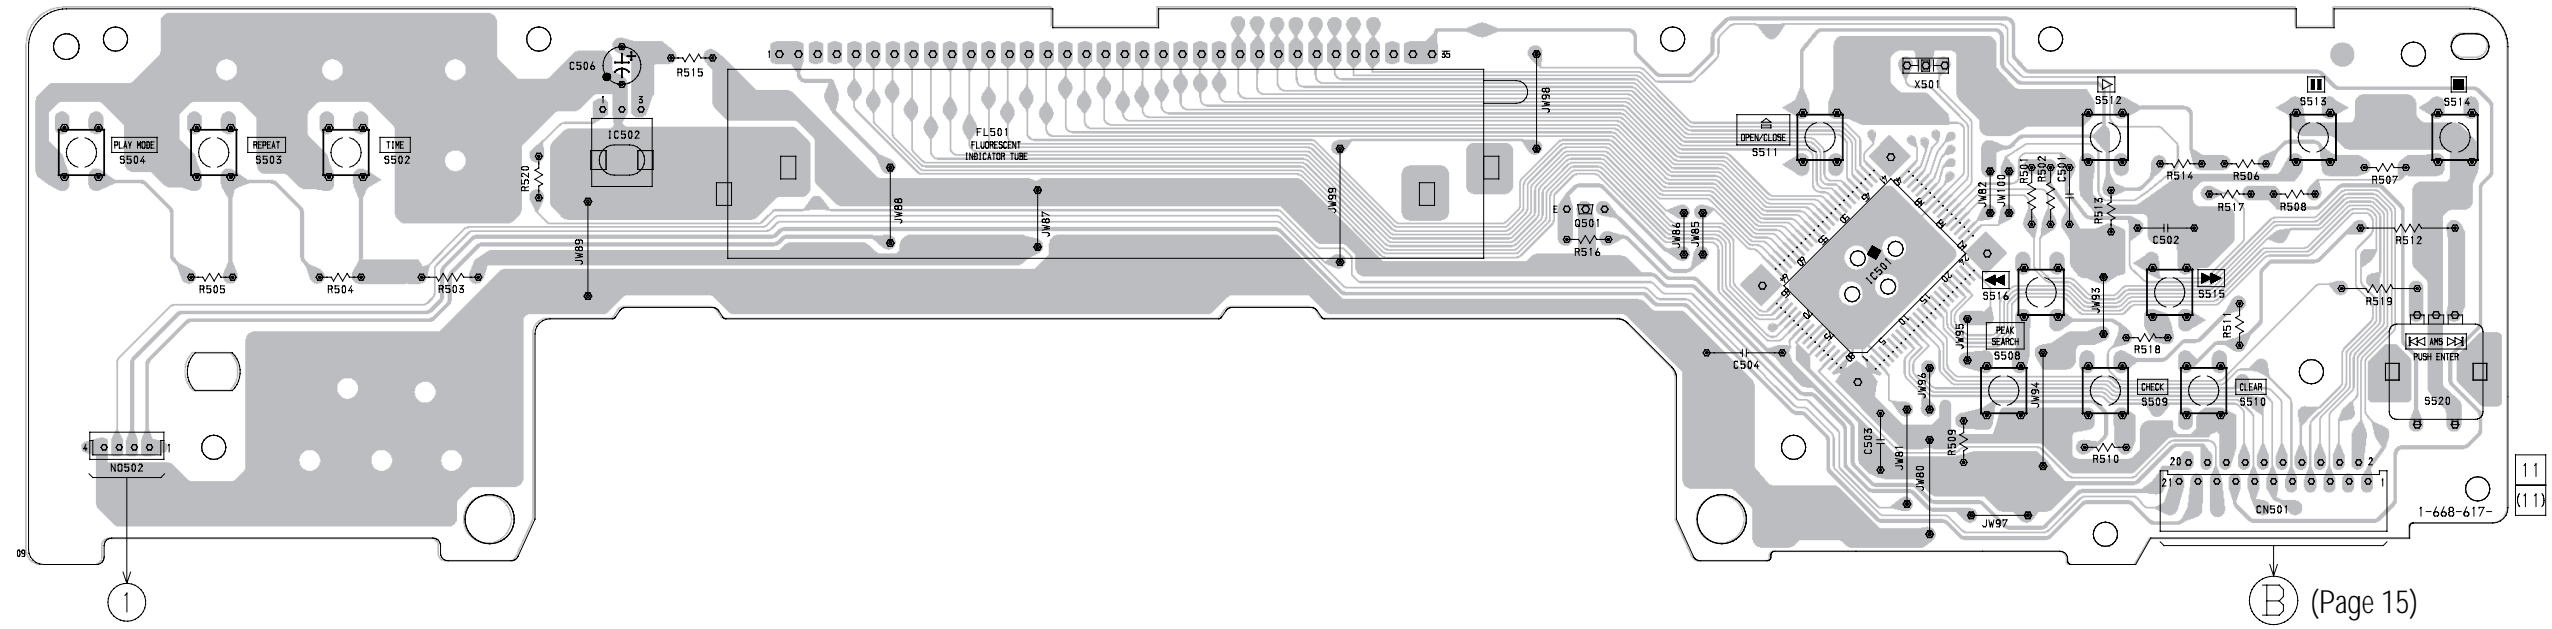

Ⓑ (Page 15)


【POWER SW BOARD】

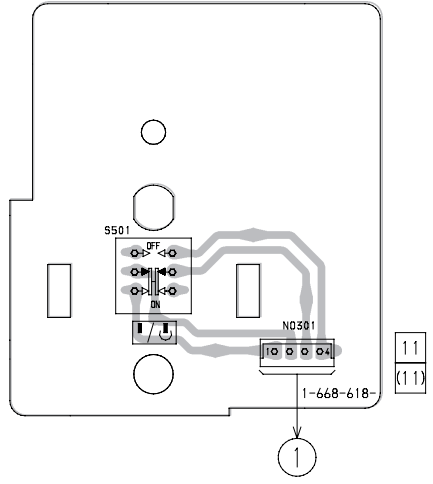

• Indication of transistor

 B C E
 ↑ ↑ ↑
 These are omitted

6-7. SCHEMATIC DIAGRAM – PANEL SECTION –

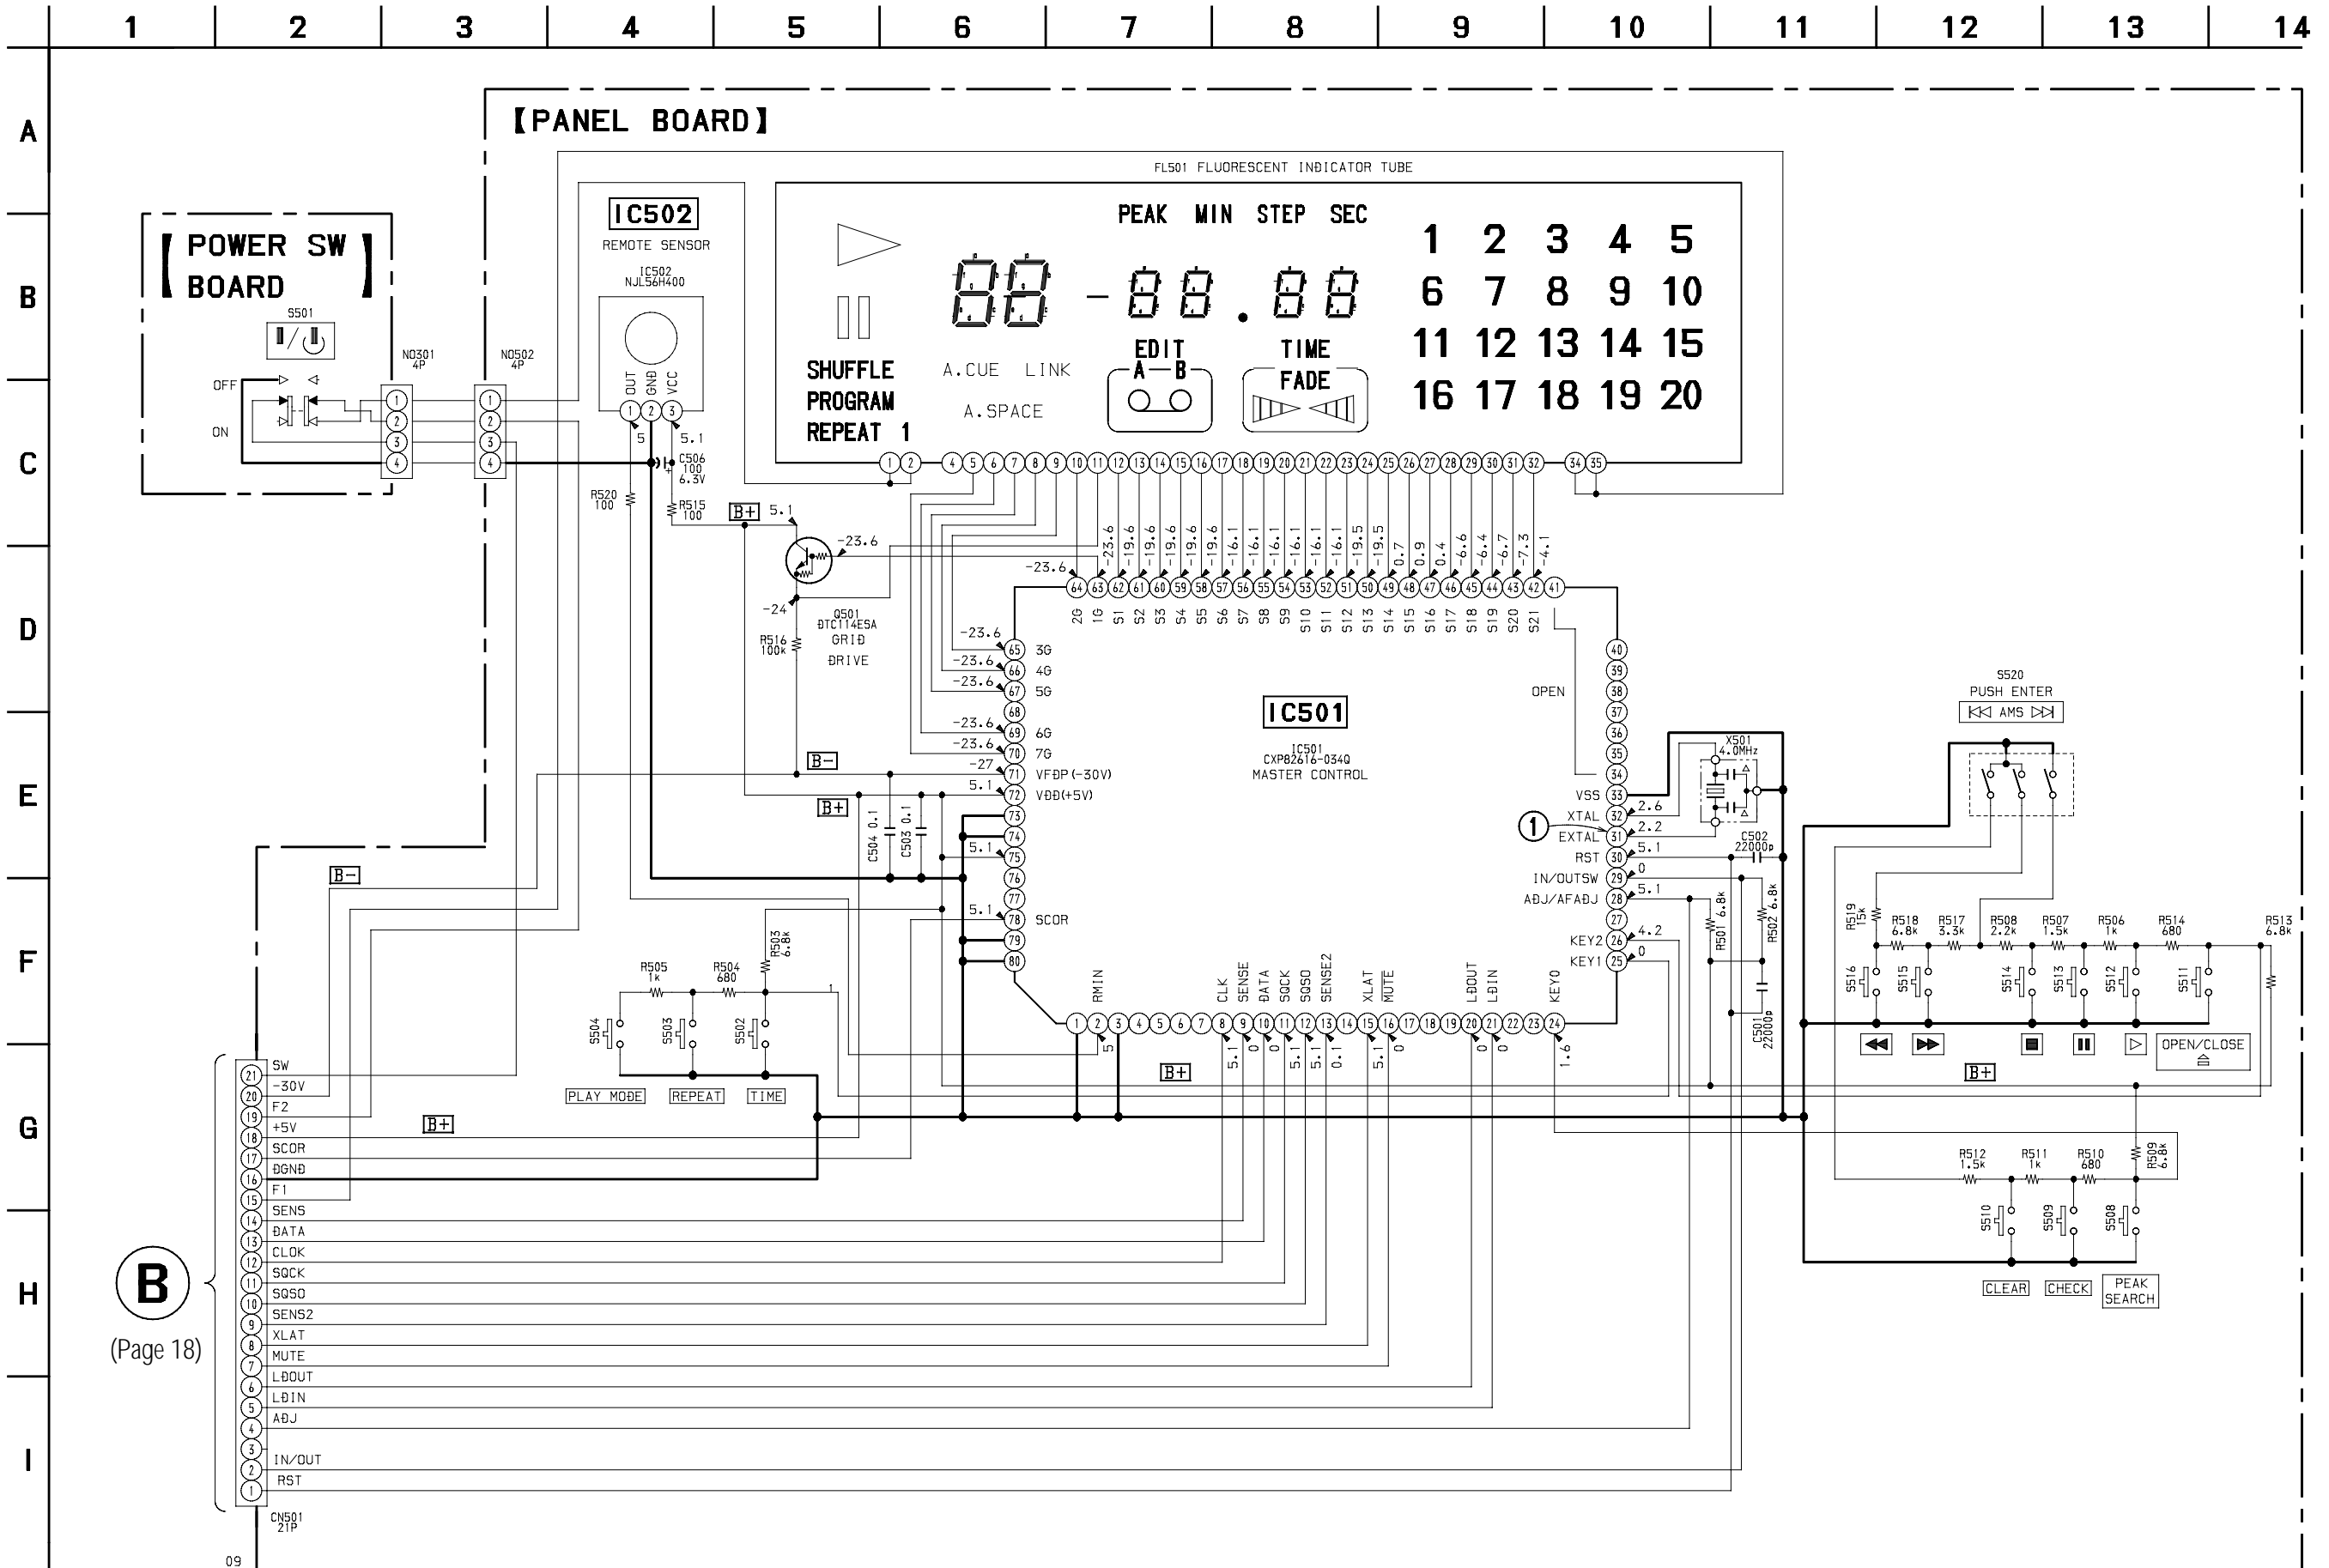- See page 10 for Waveforms.
- See page 28 for IC Pin Functions.



B
(Page 18)

6-8. IC PIN FUNCTIONS

• IC101 FOCUS/TRACKING/SLED SERVO RF AMP (CXA1992AR)

| Pin No. | Pin Name | I/O | Function |
|---------|----------|-----|---|
| 1 | FEO | O | Focus error amplifier output Connected internally to the window comparator input for bias adjustment |
| 2 | FEI | I | Focus error input |
| 3 | DFCT | I | Capacitor connection pin for defect time constant |
| 4 | FGD | I | Ground this pin through a capacitor for cutting the focus servo high-frequency gain |
| 5 | FLB | I | External time constant setting pin for boosting the focus servo low-frequency |
| 6 | FE O | O | Focus drive output |
| 7 | FE M | I | Focus amplifier inverted input |
| 8 | SRCH | I | External time constant setting pin for generating focus search waveform |
| 9 | TGU | I | External time constant setting pin for switching tracking high-frequency gain |
| 10 | TG2 | I | External time constant setting pin for switching tracking high-frequency gain |
| 11 | FSET | I | Peak frequency setting pin for focus and tracking phase compensation amplifier |
| 12 | TA M | I | Tracking amplifier inverted input |
| 13 | TA O | O | Tracking drive output |
| 14 | SL P | I | Sled amplifier non-inverted input |
| 15 | SL M | I | Sled amplifier inverted input |
| 16 | SL O | O | Sled drive output |
| 17 | ISET | I | Connect an external capacitance to set the current which determines the Focus search, Track jump, and Sled kick heights |
| 18 | Vcc | I | Positive power supply |
| 19 | LOCK | I | The sled overrun prevention circuit operates when this pin is Low (No pull-up resistance) |
| 20 | CLK | I | Serial data transfer clock input from CPU (No pull-up resistance) |
| 21 | XLT | I | Lach input from CPU (No pull-up resistance) |
| 22 | DATA | I | Serial data input from CPU (No pull-up resistance) |
| 23 | XRST | I | Reset input; resets at Low (No pull-up resistance) |
| 24 | C.OUT | O | Track number count signal output |
| 25 | SENS1 | O | Outputs FZC, DFCT1, TZC, BALH, TGH, FOH, ATSC, and others according to the command from CPU |
| 26 | SENS2 | O | Outputs DFCT2, MIRR, BALL, TGL, FOL, and others according to the command from CPU |
| 27 | FOK | O | Focus OK comparator output |
| 28 | CC2 | I | Input for the defect bottom hold output with capacitance coupled |
| 29 | CC1 | O | Defect bottom hold output Connected internally to the interruption comparator input |
| 30 | CB | I | Connection pin for defect bottom hold capacitor |
| 31 | CP | I | Connection pin for MIRR hold capacitor MIRR comparator non-inverted input |
| 32 | RF I | I | Input for the RF summing amplifier output with capacitance coupled |
| 33 | RF O | O | RF summing amplifier output Eye-pattern check point |

• Abbreviation

| | |
|----------------------------|---------------------------|
| FZC : Focus zero-cross | ATSC : Anti Shock |
| DFCT : Defect | MIRR : Mirror |
| TZC : Tracking zero-cross | BALL : E-F Balance (Low) |
| BALH: E-F Balance (High) | TGL : Tracking Gain (Low) |
| TGH : Tracking Gain (High) | FOL : Focus Bias (Low) |
| FOH : Focus Bias (High) | |

| Pin No. | Pin Name | I/O | Function |
|---------|----------|-----|---|
| 34 | RF M | I | RF summing amplifier inverted input The RF amplifier gain is determined by the resistance connected between this pin and RFO pin |
| 35 | RFTC | I | External time constant setting pin during RF level control |
| 36 | LD | O | APC amplifier output |
| 37 | PD | I | APC amplifier input |
| 38 | PD1 | I | RF I-V amplifier inverted input |
| 39 | PD2 | I | Connect these pins to the photo diode A+C and B+D pins |
| 40 | FE BIAS | I | Bias adjustment of focus error amplifier Leave this pin open for automatic adjustment |
| 41 | F | I | F I-V and E I-V amplifier inverted input |
| 42 | E | I | Connect these pins to photo diodes F and E |
| 43 | EI | - | I-V amplifier E gain adjustment (When not using automatic balance adjustment) |
| 44 | VEE | - | Negative power supply |
| 45 | TEO | O | Tracking error amplifier output E-F signal is output |
| 46 | LPFI | I | Comparator input for balance adjustment (Input from TEO through LPF) |
| 47 | TEI | I | Tracking error input |
| 48 | ATSC | I | Window comparator input for ATSC detection |
| 49 | TZC | I | Trackig zero-cross comparator input |
| 50 | TDFCT | I | Capacitor connection pin for defect time constant |
| 51 | VC | O | (VCC + VEE)/2 direct voltage output |
| 52 | FZC | I | Focus zero-cross comparator input |

• Abbreviation

APC : Auto Power Control

• IC103 DIGITAL SIGNAL PROCESSOR (CXD2529Q)

| Pin No. | Pin Name | I/O | Function |
|---------|----------|-----|--|
| 1 | VDD | – | +5V power supply |
| 2 | VSS | – | Ground |
| 3 | LMUT | O | Lch “L” detection flog |
| 4 | RMUT | O | Rch “L” detection flog |
| 5 | ACDT | O | Test output (Not used) |
| 6 | CKOUT | O | Master clock divider output (Not used) |
| 7 | SQCK | I | Clock input for SQSO read out |
| 8 | SQSO | O | Serial output for Sub-Q 80bit |
| 9 | SENS | O | SENS signal output to CPU |
| 10 | DATA | I | Serial data input, supplied from CPU |
| 11 | XLAT | I | Latch input, supplied from CPU |
| 12 | CLOK | I | Serial data transfer clock input, supplied from CPU |
| 13 | SEIN | I | SENS input from IC101 |
| 14 | CNIN | I | Numbers of track jump counted signal input |
| 15 | DATO | O | Serial data output to IC101 |
| 16 | XLTO | O | Serial data latch output to IC101 |
| 17 | CLKO | O | Serial data transfer clock output to IC101 |
| 18 | SPOA | I | Micro computer demodulation interface (Input A) |
| 19 | SPOB | I | Micro computer demodulation interface (Input B) |
| 20 | SPOC | I | Micro computer demodulation interface (Input C) |
| 21 | SPOD | I | Micro computer demodulation interface (Input D) |
| 22 | XLON | O | Micro computer demodulation interface (Output) |
| 23 | FOK | I | Focus OK input |
| 24 | VDD | – | +5V power supply |
| 25 | VSS | – | Ground |
| 26 | MON | O | Output to control ON/OFF of spindle motor (Not used) |
| 27 | MDP | O | Output to control spindle motor servo |
| 28 | MDS | O | Output to control spindle motor servo (Not used) |
| 29 | LOCK | O | GFS is sampled by 460Hz |
| 30 | PWMI | I | Input to control the outside spindle motor |
| 31 | TES0 | I | Test pin (Connected to ground) |
| 32 | TES1 | I | Test pin (Connected to ground) |
| 33 | VPCO2 | O | Charge-pump output (Not used) |
| 34 | VPCO1 | O | Charge-pump output (Not used) |
| 35 | VCKI | I | VCO2 oscillator input (Not used) |
| 36 | V16M | O | VCO2 oscillator output (Not used) |
| 37 | VCTL | I | VCO2 control voltage input |
| 38 | PCO | O | Charge-pump output to master PLL |
| 39 | FILO | O | Filter output to master PLL |
| 40 | FILI | I | Filter input for master PLL |

- Abbreviation
GFS : Guarded Frame Sync
PLL : Phase Locked Loop

| Pin No. | Pin Name | I/O | Function |
|---------|----------|-----|--|
| 41 | AVSS | – | Analog ground |
| 42 | CLTV | I | Control voltage input for VCO |
| 43 | AVDD | – | Analog power supply |
| 44 | RF | I | EFM signal input |
| 45 | BIAS | I | Asymmetry circuit constant current input |
| 46 | ASYI | I | Asymmetry compare voltage input |
| 47 | ASYO | O | EFM full swing output (“L” =Vss, “H” =VDD) |
| 48 | ASYE | I | Asymmetry circuit ON/OFF (“L”=OFF, “H”=ON) |
| 49 | WDCK | O | D/A interface Word clock f=2fs |
| 50 | LRCK | O | D/A interface LR clock output f=Fs |
| 51 | LRCKI | I | D/A interface LR clock input f=Fs |
| 52 | PCMD | O | D/A interface Serial data output |
| 53 | PCMDI | I | D/A interface Serial data input |
| 54 | BCK | O | D/A interface Bit clock output |
| 55 | BCKI | I | D/A interface Bit clock input |
| 56 | VSS | – | Ground |
| 57 | VDD | – | +5V power supply |
| 58 | GTOP | O | Not used |
| 59 | XUGF | O | Not used |
| 60 | XPLCK | O | EFM decoder PLL clock output |
| 61 | GFS | O | “H” Playback EFM sync and interpolation protection timing much |
| 62 | RFCK | O | Read frame clock signal output |
| 63 | C2PO | O | Not used |
| 64 | XRAOF | O | Internal RAM overflow detection signal output (Not used) |
| 65 | MNT3 | O | Not used |
| 66 | MNT1 | O | Not used |
| 67 | MNT0 | O | Not used |
| 68 | XTSL | I | Not used |
| 69 | FSTT | O | 2/3 divider output (Not used) |
| 70 | C4M | O | 4.2336MHz output(Not used) |
| 71 | DOUT | O | Digital audio signal output |
| 72 | EMPH | O | Playback disc output in emphasis mode |
| 73 | EMPHI | I | “H” =Input when de-emphasis ON |
| 74 | WFCK | O | Write frame clock signal output |
| 75 | SCOR | O | Sub-code sync output |
| 76 | SBSO | O | Sub-P through Sub-W serial output |
| 77 | EXCK | I | Clock input for SBSO read-out |
| 78 | VSS | – | Ground |
| 79 | VDD | – | +5V power supply |
| 80 | SYSM | I | System mute input |

- Abbreviation
EFM : Eight to Fourteen Modulation

| Pin No. | Pin Name | I/O | Function |
|---------|----------|-----|---------------------------------|
| 81 | — | – | Not used |
| 82 | AVSS | – | Analog ground |
| 83 | AVDD | – | Analog power supply |
| 84 | AOUT1 | O | Lch analog output |
| 85 | AIN1 | I | Lch opamp input |
| 86 | LOUT1 | O | Lch line output |
| 87 | AVSS | – | Analog ground |
| 88 | XVDD | – | Master clock power supply |
| 89 | XTAI | I | X'tal oscillator circuit input |
| 90 | XTAO | O | X'tal oscillator circuit output |
| 91 | XVSS | – | Master clock ground |
| 92 | AVSS | – | Analog ground |
| 93 | LOUT2 | O | Rch line output |
| 94 | AIN2 | I | Rch opamp input |
| 95 | AOUT2 | O | Rch analog output |
| 96 | AVDD | – | Analog power supply |
| 97 | AVSS | – | Analog ground |
| 98 | — | – | Not used |
| 99 | — | – | Not used |
| 100 | XRST | I | System reset input |

• IC501 SYSTEM CONTROL (CXP82616-034Q)

| Pin No. | Pin Name | I/O | Function |
|----------|----------------|-----|---|
| 1 | GND | – | Ground |
| 2 | RMIN | I | Remote control signal input |
| 3 | GND | – | Ground |
| 4 to 7 | — | – | Not used |
| 8 | CLK | O | Serial clock output |
| 9 | SENSE | I | Sense signal input from IC103 (CXD2529Q) |
| 10 | DATA | O | Serial data output |
| 11 | SQCK | O | Sub Q clock output |
| 12 | SQSO | I | Sub Q data input |
| 13 | SENSE2 | I | Sense signal input from IC101 (CXA1992AR) |
| 14 | — | – | Not used (Open) |
| 15 | XLAT | O | Serial latch output |
| 16 to 19 | MUTE | O | Muting control signal output |
| 20 | LD OUT | O | Loading motor control |
| 21 | LD IN | O | Loading motor control |
| 22, 23 | — | – | Not used (Open) |
| 24 to 26 | KEY 0 to KEY 2 | I | Key input 0 to 2 |
| 27 | — | – | Not used (Open) |
| 28 | ADJ/AFADJ | I | Test mode terminal |
| 29 | IN/OUT SW | I | CD tray IN/OUT switch |
| 30 | RST | I | System reset terminal |
| 31 | EXTAL | O | System oscillator (4.0 MHz) |
| 32 | XTAL | I | System oscillator (4.0 MHz) |
| 33 | VSS | – | Ground |
| 34 to 41 | OPEN | – | Not used (Open) |
| 42 to 62 | S21 to S1 | O | FL segment signal output |
| 63 to 67 | 1G to 5G | O | FL grid signal output |
| 68 | — | – | Not used (Open) |
| 69, 70 | 6G, 7G | O | FL grid signal output |
| 71 | VFDP (–30V) | – | Pull down voltage (–30V) |
| 72 | VDD (+5V) | – | Power supply (+5V) |
| 73, 74 | GND | – | Ground |
| 75 | VDD | – | Power supply (+5V) |
| 76, 77 | — | – | Not used (Open) |
| 78 | SCOR | I | Sub code data request signal input |
| 79, 80 | GND | – | Ground |


• Abbreviation

FL : Fluorescent indicator tube


6-9. IC BLOCK DIAGRAMS

• CD section


IC101 CXA1992AR

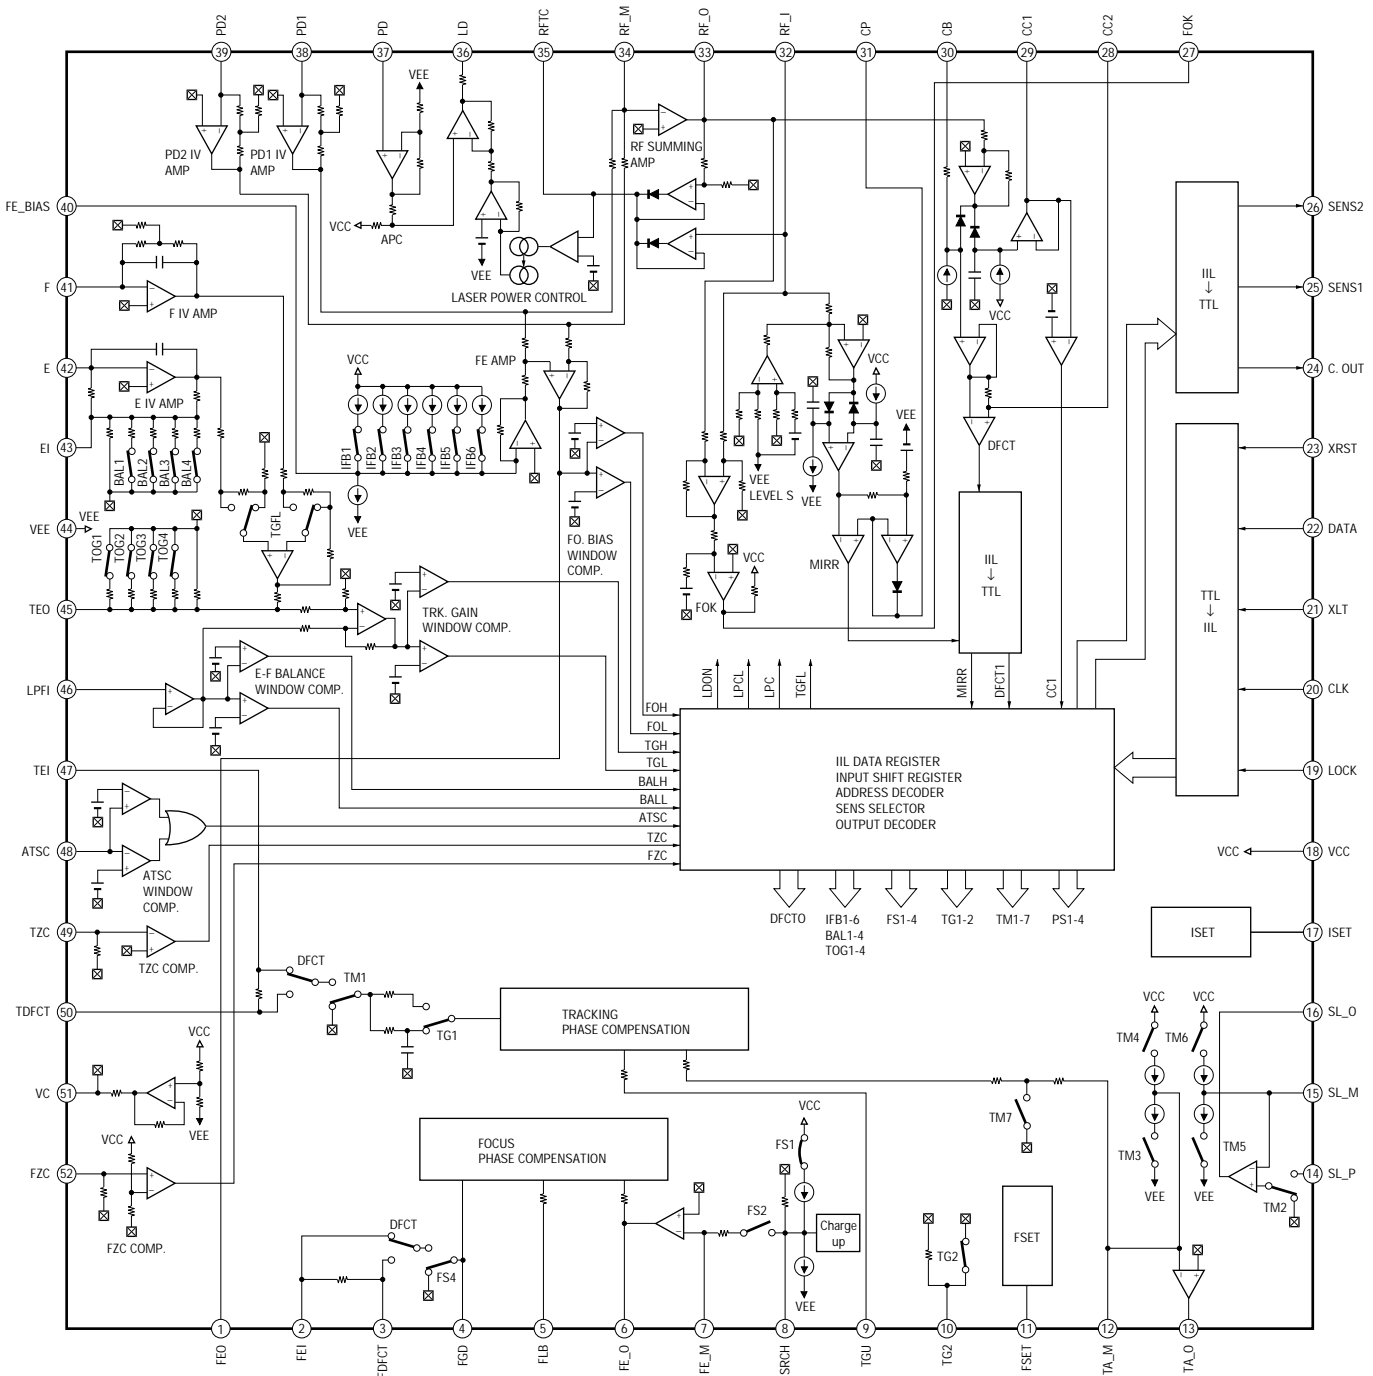

IC102 BA5941FP

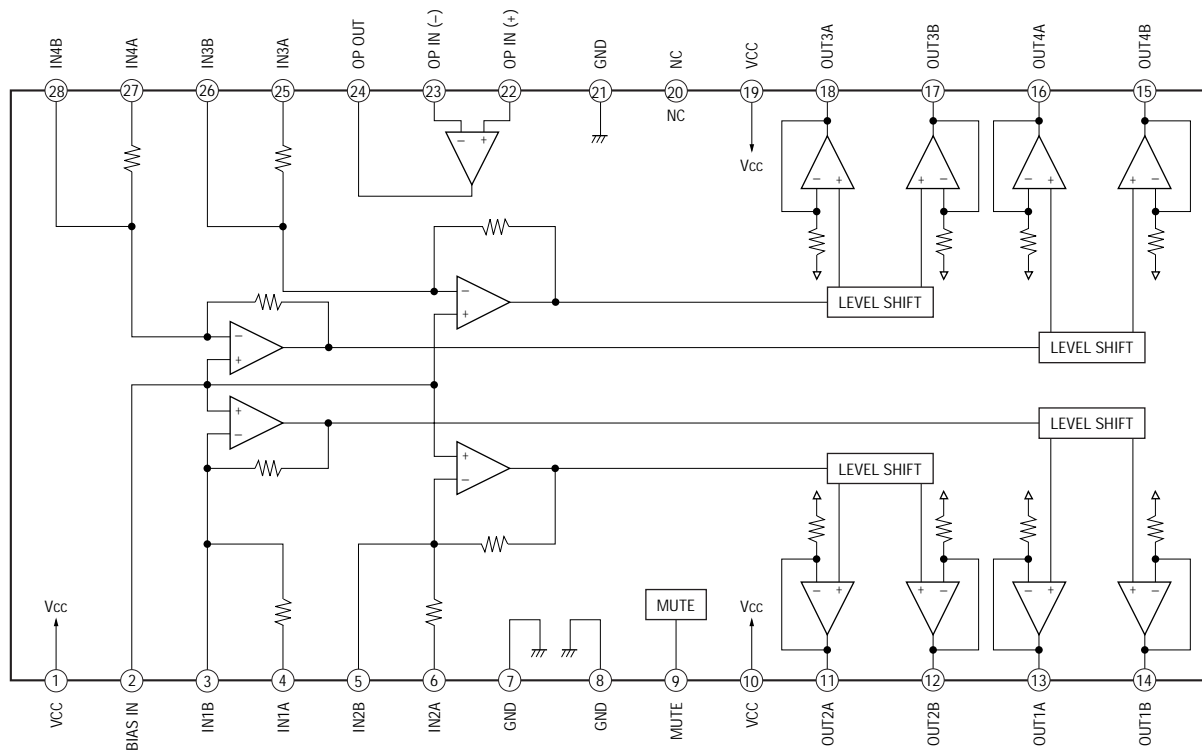


IC103 CXD2529Q

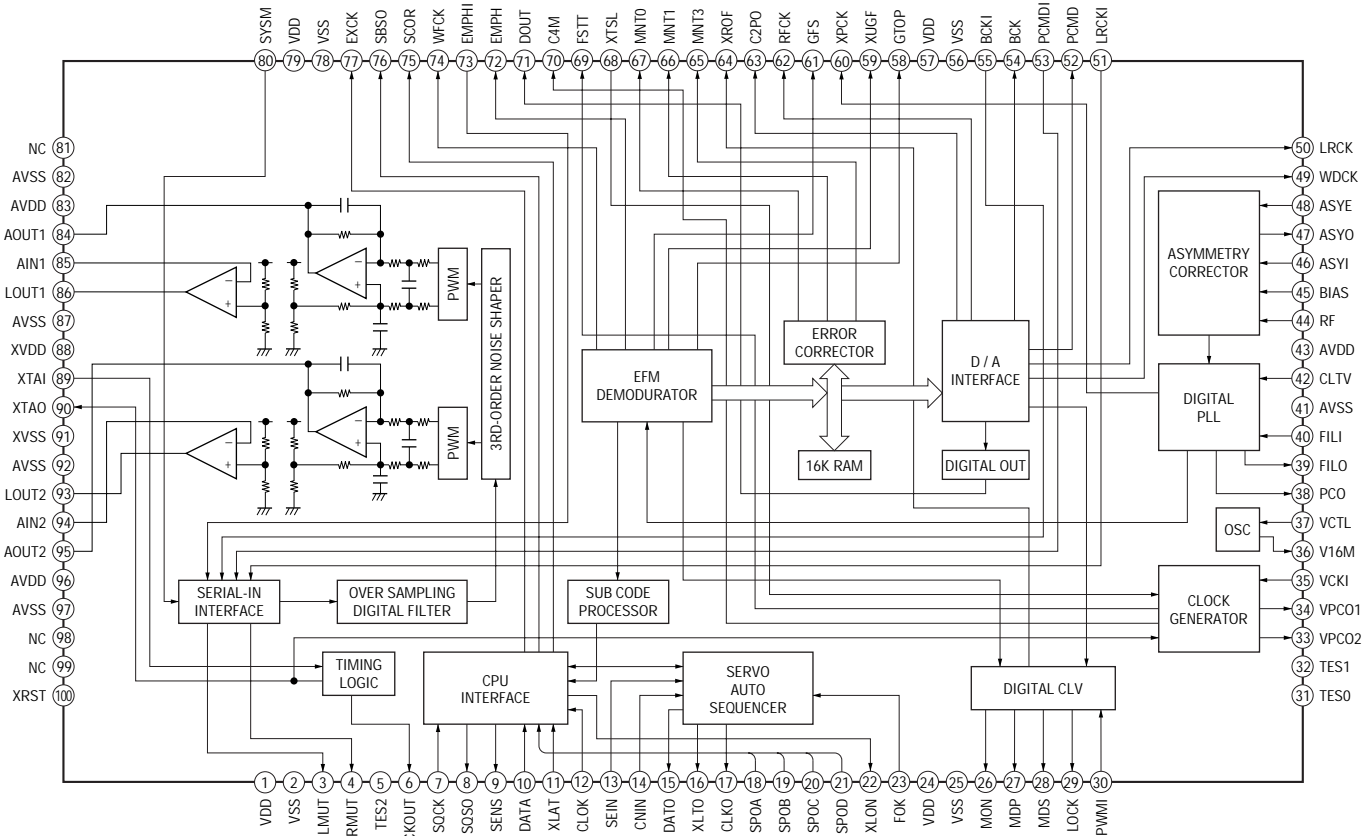


• MAIN section

IC401 LB1641

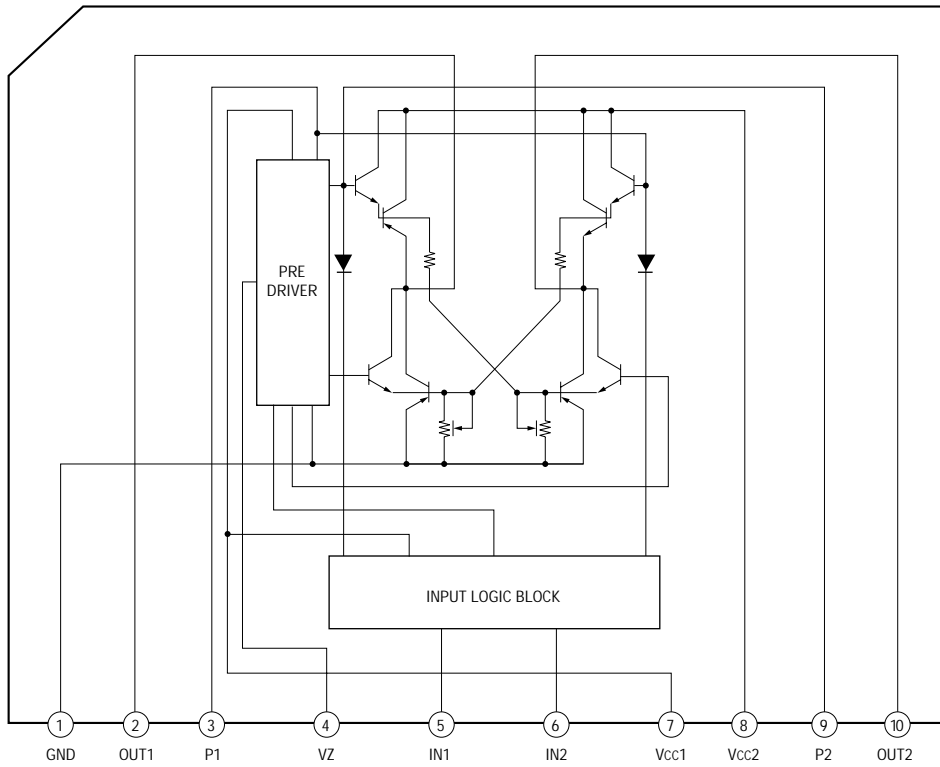

IC701 LA5601

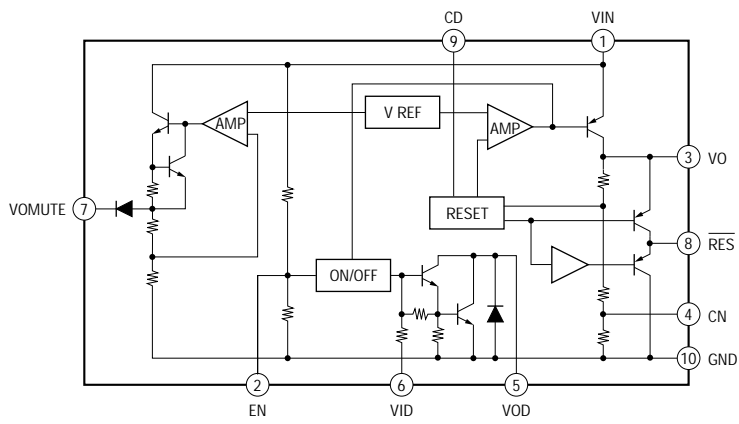

SECTION 7 EXPLODED VIEWS


NOTE:

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

- Color indication of Appearance Parts
Example :
KNOB, BALANCE (WHITE) ••• (RED)
 ↑ ↑
 Parts color Cabinet's color

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

7-1. MAIN SECTION

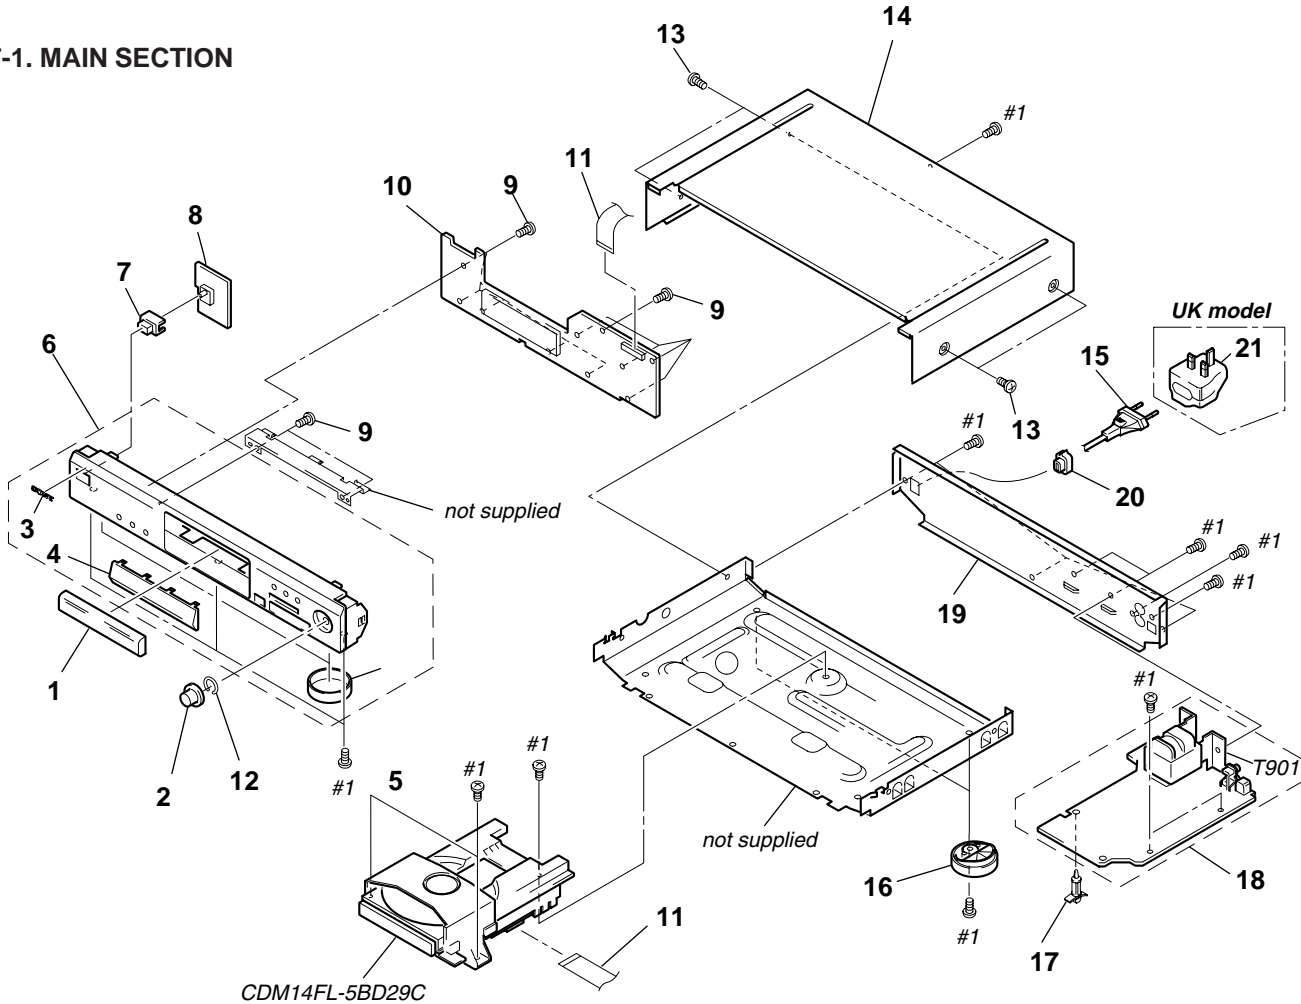


| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------------------------------|--------|
| 1 | 4-996-562-01 | PANEL, LOADING...(BLACK) | |
| 1 | 4-996-562-51 | PANEL, LOADING...(SILVER) (XE220) | |
| 2 | 4-996-687-21 | KNOB (AMS) | |
| 3 | 4-996-698-21 | EMBLEM, SONY | |
| 4 | 4-996-560-01 | WINDOW (FL) | |
| 5 | 4-977-593-01 | RING (DIA. 50), ORNAMENTAL | |
| 6 | X-4949-358-1 | PANEL ASSY, FRONT...(BLACK) (XE220) | |
| 6 | X-4949-424-1 | PANEL ASSY, FRONT (XE320) | |
| 6 | X-4952-810-2 | PANEL ASSY, FRONT...(SILVER) (XE220) | |
| 7 | 4-977-589-71 | BUTTON (POWER) | |
| * | 1-668-618-11 | POWER SW BOARD | |
| 9 | 4-951-620-01 | SCREW (2.6X8), +BVTP | |
| * 10 | A-4699-942-A | PANEL BOARD, COMPLETE | |
| 11 | 1-590-243-11 | WIRE (FLAT TYPE) (21 CORE) | |
| 12 | 3-354-981-01 | SPRING (SUS), RING | |
| 13 | 3-710-901-11 | SCREW, TAPPING...(BLACK) | |

| Ref. No. | Part No. | Description | Remark |
|---------------|--------------|-----------------------------------|--------|
| 13 | 4-210-291-11 | SCREW, TAPPING...(SILVER) (XE220) | |
| * 14 | 4-978-901-21 | CASE (408226)...(BLACK) | |
| * 14 | 4-980-193-41 | CASE (408226)...(SILVER) (XE220) | |
| Δ 15 | 1-575-651-21 | CORD, POWER | |
| 16 | X-4947-207-1 | FOOT ASSY (F50150S) | |
| * 17 | 4-954-051-51 | HOLDER, PC BOARD | |
| * 18 | A-4699-941-A | MAIN BOARD, COMPLETE | |
| * 19 | 4-996-565-01 | PANEL, BACK (XE320:AEP) | |
| * 19 | 4-996-565-11 | PANEL, BACK (XE320:UK) | |
| * 19 | 4-996-565-21 | PANEL, BACK...(BLACK) (XE220:AEP) | |
| * 19 | 4-996-565-31 | PANEL, BACK...(BLACK) (XE220:UK) | |
| * 19 | 4-996-565-41 | PANEL, BACK...(SILVER) (XE220) | |
| 20 | 4-966-267-11 | BUSHING (FBS001), CORD | |
| Δ 21 | 1-770-019-11 | ADAPTOR, CONVERSION PLUG 3P (UK) | |
| Δ T901 | 1-423-979-11 | TRANSFORMER, POWER | |


7-2. CD MECHANISM SECTION (CDM14FL-5BD29C)

NOTE: There are two types of MAGNET ASSY.
Confirm the shape before replacing the parts.

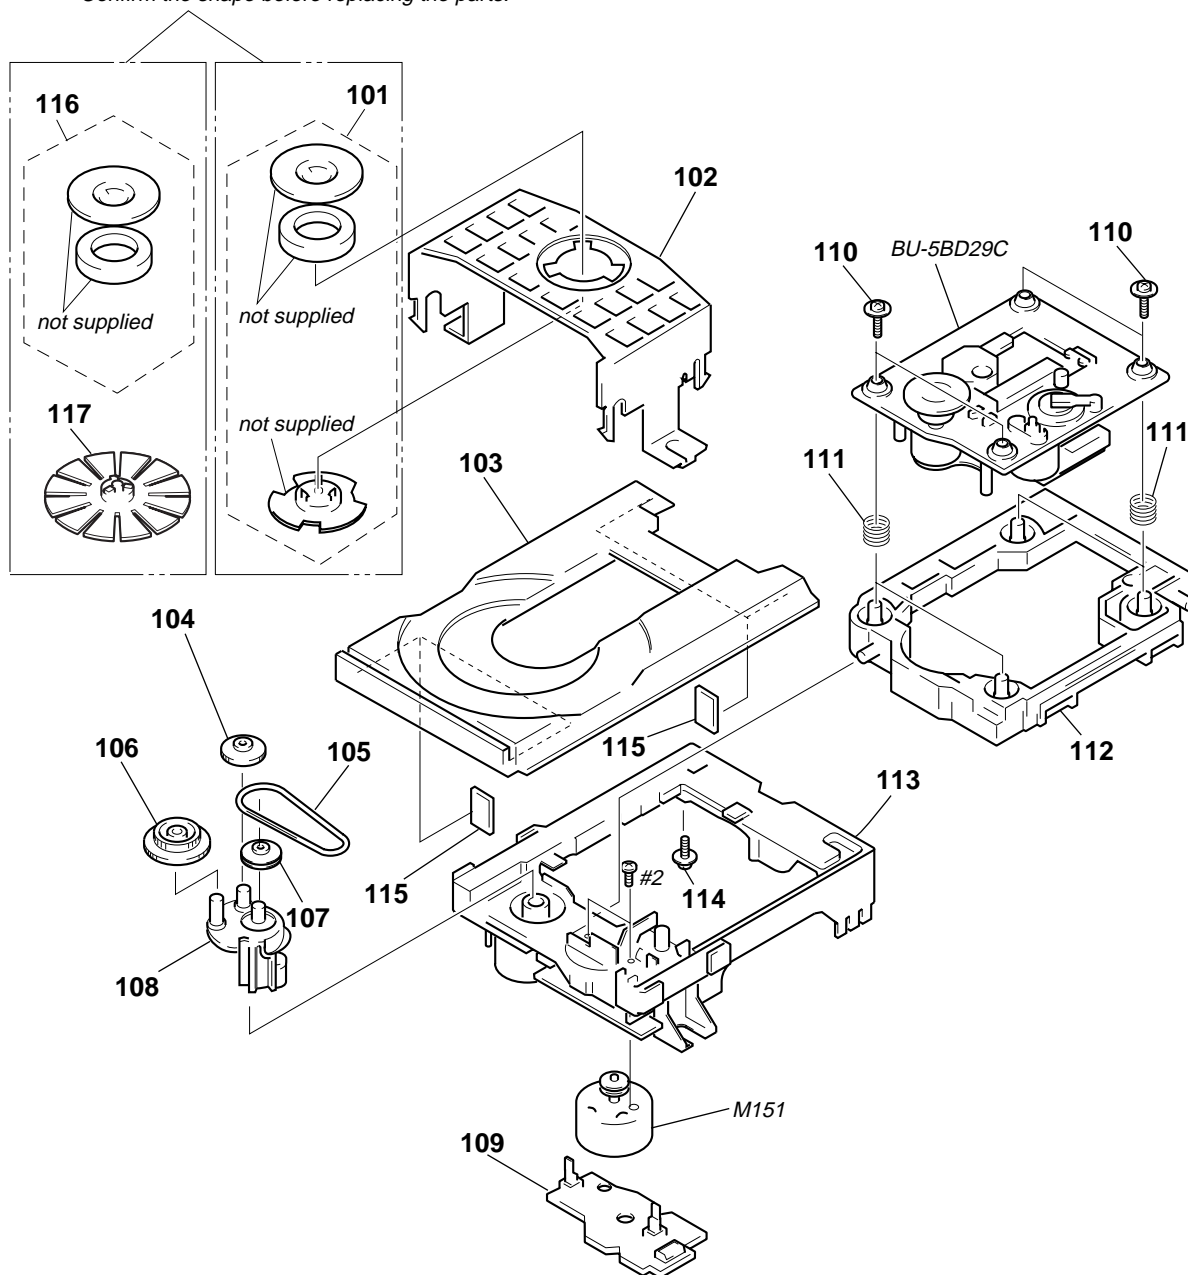

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|---------------------|--------|----------|--------------|---------------------------|--------|
| * 101 | 1-452-538-11 | MAGNET | | 111 | 4-959-996-01 | SPRING (932), COMPRESSION | |
| 102 | 4-933-110-41 | HOLDER (MG) | | 112 | 4-933-129-01 | HOLDER (BU) | |
| 103 | 4-995-814-01 | TABLE (FL), DISC | | 113 | 4-933-111-11 | CHASSIS (MD) | |
| 104 | 4-967-268-01 | GEAR (C) | | * 114 | 4-917-583-21 | BRACKET, YOKE | |
| 105 | 4-927-649-01 | BELT | | 115 | 4-925-315-31 | DAMPER | |
| 106 | 4-933-107-01 | GEAR (PL) | | 116 | 1-452-925-21 | MAGNET ASSY | |
| 107 | 4-927-651-01 | PULLEY (S) | | 117 | 4-993-142-11 | PULLY (L), PRESS | |
| 108 | 4-933-109-01 | CAM | | M151 | A-4672-207-A | MOTOR (L) ASSY (LOADING) | |
| * 109 | 1-645-721-11 | LOADING BOARD | | | | | |
| 110 | 4-933-134-01 | SCREW +PTPWH M2.6X6 | | | | | |

7-3. BASE UNIT SECTION (BU-5BD29C)

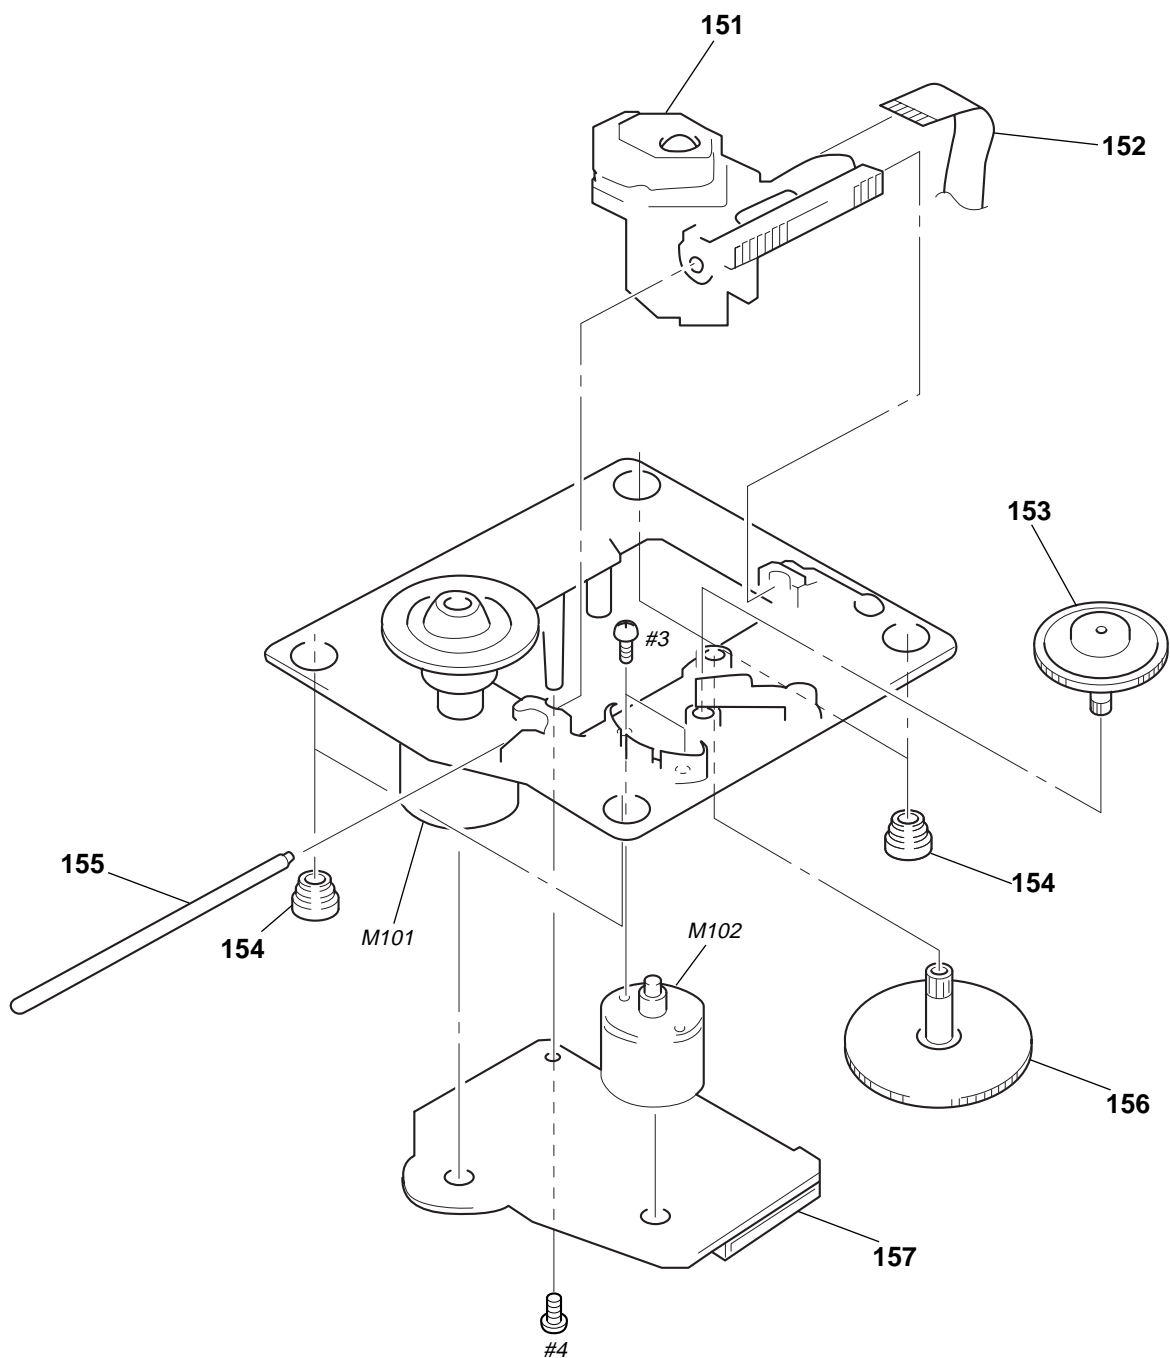

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|-----------------|--------------|--------------------------------|--------|----------|--------------|----------------------|--------|
| \triangle 151 | 8-848-379-31 | OPTICAL PICK-UP KSS-213BA/F-NP | | 156 | 4-917-564-01 | GEAR (P), FLATNESS | |
| 152 | 1-769-069-11 | WIRE (FLAT TYPE)(16 CORE) | | * 157 | A-4699-944-A | BD BOARD, COMPLETE | |
| 153 | 4-917-567-21 | GEAR (M) | | M101 | X-4917-523-4 | MOTOR ASSY (SPINDLE) | |
| 154 | 4-951-940-01 | INSULATOR (BU) | | M102 | X-4917-504-1 | MOTOR ASSY (SLED) | |
| 155 | 4-917-565-01 | SHAFT, SLED | | | | | |

SECTION 8 ELECTRICAL PARTS LIST

BD

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable

- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
uPC...: μ PC..., uPD...: μ PD...
- CAPACITORS
uF : μ F
- COILS
uH : μ H

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------------------------|--------|----------|--------------|------------------------------------|--------|
| * | A-4699-944-A | BD BOARD, COMPLETE ***** | | C176 | 1-163-038-11 | CERAMIC CHIP 0.1uF | 25V |
| | | < CAPACITOR > | | C177 | 1-163-038-11 | CERAMIC CHIP 0.1uF | 25V |
| C101 | 1-126-607-11 | ELECT CHIP 47uF 20% 4V | | C178 | 1-163-038-11 | CERAMIC CHIP 0.1uF | 25V |
| C102 | 1-163-141-00 | CERAMIC CHIP 0.001uF 5% 50V | | C179 | 1-163-038-11 | CERAMIC CHIP 0.1uF | 25V |
| C103 | 1-164-346-11 | CERAMIC CHIP 1uF 16V | | C181 | 1-126-205-11 | ELECT CHIP 47uF 20% 6.3V | |
| C105 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | | C182 | 1-126-395-11 | ELECT CHIP 22uF 20% 16V | |
| C106 | 1-164-161-11 | CERAMIC CHIP 0.0022uF 10% 100V | | C183 | 1-124-778-00 | ELECT CHIP 22uF 20% 6.3V | |
| C107 | 1-164-161-11 | CERAMIC CHIP 0.0022uF 10% 100V | | C185 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C108 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | | C188 | 1-163-235-11 | CERAMIC CHIP 22PF 5% 50V | |
| C109 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | | C189 | 1-163-235-11 | CERAMIC CHIP 22PF 5% 50V | |
| C110 | 1-163-989-11 | CERAMIC CHIP 0.033uF 10% 25V | | | | < CONNECTOR > | |
| C111 | 1-163-017-00 | CERAMIC CHIP 0.0047uF 5% 50V | | CNU101 | 1-770-014-11 | CONNECTOR, FFC/FPC 16P | |
| C112 | 1-163-017-00 | CERAMIC CHIP 0.0047uF 5% 50V | | CNU102 | 1-784-360-11 | CONNECTOR, FFC (LIF (NON-ZIF)) 21P | |
| C113 | 1-164-161-11 | CERAMIC CHIP 0.0022uF 10% 100V | | | | < INDUCTOR > | |
| C114 | 1-164-005-11 | CERAMIC CHIP 0.47uF 25V | | FB101 | 1-414-234-11 | INDUCTOR CHIP OUH | |
| C115 | 1-126-607-11 | ELECT CHIP 47uF 20% 4V | | FB103 | 1-414-234-11 | INDUCTOR CHIP OUH | |
| C116 | 1-163-016-00 | CERAMIC CHIP 0.0039uF 10% 50V | | | | < IC > | |
| C117 | 1-164-005-11 | CERAMIC CHIP 0.47uF 25V | | IC101 | 8-752-080-62 | IC CXA1992AR | |
| C118 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% 25V | | IC102 | 8-759-429-32 | IC BA5941FP-E2 | |
| C119 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | | IC103 | 8-752-380-64 | IC CXD2529Q | |
| C120 | 1-124-779-00 | ELECT CHIP 10uF 20% 16V | | | | < JUMPER RESISTOR > | |
| C121 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | | JW101 | 1-216-295-91 | SHORT 0 | |
| C122 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | | JW104 | 1-216-295-91 | SHORT 0 | |
| C123 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | | | | < MOTOR > | |
| C124 | 1-126-607-11 | ELECT CHIP 47uF 20% 4V | | M101 | X-4917-523-4 | MOTOR ASSY (SPINDLE) | |
| C125 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | | M102 | X-4917-504-1 | MOTOR ASSY (SLED) | |
| C126 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | | | | < TRANSISTOR > | |
| C127 | 1-164-161-11 | CERAMIC CHIP 0.0022uF 10% 100V | | Q101 | 8-729-010-08 | TRANSISTOR MSB710-R | |
| C128 | 1-163-135-00 | CERAMIC CHIP 560PF 5% 50V | | | | < RESISTOR > | |
| C129 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | | R102 | 1-216-001-00 | METAL CHIP 10 5% 1/10W | |
| C130 | 1-164-336-11 | CERAMIC CHIP 0.33uF 25V | | R104 | 1-216-093-00 | METAL CHIP 68K 5% 1/10W | |
| C131 | 1-164-346-11 | CERAMIC CHIP 1uF 16V | | R105 | 1-216-088-00 | METAL CHIP 43K 5% 1/10W | |
| C140 | 1-110-501-11 | CERAMIC CHIP 0.33uF 10% 16V | | R106 | 1-216-088-00 | METAL CHIP 43K 5% 1/10W | |
| C154 | 1-163-235-11 | CERAMIC CHIP 22PF 5% 50V | | R107 | 1-216-088-00 | METAL CHIP 43K 5% 1/10W | |
| C161 | 1-164-005-11 | CERAMIC CHIP 0.47uF 25V | | R108 | 1-216-088-00 | METAL CHIP 43K 5% 1/10W | |
| C162 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | | R109 | 1-216-093-00 | METAL CHIP 68K 5% 1/10W | |
| C163 | 1-163-117-00 | CERAMIC CHIP 100PF 5% 50V | | R114 | 1-216-101-00 | METAL CHIP 150K 5% 1/10W | |
| C164 | 1-163-145-00 | CERAMIC CHIP 0.0015uF 5% 50V | | R115 | 1-216-101-00 | METAL CHIP 150K 5% 1/10W | |
| C165 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% 25V | | R116 | 1-216-061-00 | METAL CHIP 3.3K 5% 1/10W | |
| C166 | 1-163-137-00 | CERAMIC CHIP 680PF 5% 50V | | R117 | 1-216-069-00 | METAL CHIP 6.8K 5% 1/10W | |
| C167 | 1-163-121-00 | CERAMIC CHIP 150PF 5% 50V | | R118 | 1-216-063-91 | RES, CHIP 3.9K 5% 1/10W | |
| C168 | 1-163-137-00 | CERAMIC CHIP 680PF 5% 50V | | R119 | 1-216-085-00 | METAL CHIP 33K 5% 1/10W | |
| C169 | 1-163-121-00 | CERAMIC CHIP 150PF 5% 50V | | | | | |
| C170 | 1-163-099-00 | CERAMIC CHIP 18PF 5% 50V | | | | | |
| C171 | 1-163-237-11 | CERAMIC CHIP 27PF 5% 50V | | | | | |
| C173 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | | | | | |
| C174 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | | | | | |
| C175 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | | | | | |

| | | |
|-----------|----------------|-------------|
| BD | LOADING | MAIN |
|-----------|----------------|-------------|

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------------------------|---------|
| R120 | 1-216-089-91 | RES, CHIP | 47K 5% |
| R121 | 1-216-114-00 | RES, CHIP | 510K 5% |
| R122 | 1-216-097-91 | RES, CHIP | 100K 5% |
| R123 | 1-216-099-00 | METAL CHIP | 120K 5% |
| R124 | 1-216-091-00 | METAL CHIP | 56K 5% |
| R125 | 1-216-069-00 | METAL CHIP | 6.8K 5% |
| R126 | 1-216-063-91 | RES, CHIP | 3.9K 5% |
| R127 | 1-216-089-91 | RES, CHIP | 47K 5% |
| R128 | 1-216-098-00 | METAL CHIP | 110K 5% |
| R129 | 1-216-049-91 | RES, CHIP | 1K 5% |
| R130 | 1-216-079-00 | METAL CHIP | 18K 5% |
| R131 | 1-216-079-00 | METAL CHIP | 18K 5% |
| R132 | 1-216-061-00 | METAL CHIP | 3.3K 5% |
| R133 | 1-216-061-00 | METAL CHIP | 3.3K 5% |
| R134 | 1-216-065-00 | METAL CHIP | 4.7K 5% |
| R135 | 1-216-065-00 | METAL CHIP | 4.7K 5% |
| R136 | 1-216-073-00 | METAL CHIP | 10K 5% |
| R137 | 1-216-065-00 | METAL CHIP | 4.7K 5% |
| R138 | 1-216-025-91 | RES, CHIP | 100 5% |
| R156 | 1-216-081-00 | METAL CHIP | 22K 5% |
| R157 | 1-216-069-00 | METAL CHIP | 6.8K 5% |
| R158 | 1-216-001-00 | METAL CHIP | 10 5% |
| R159 | 1-216-121-91 | RES, CHIP | 1M 5% |
| R161 | 1-216-097-91 | RES, CHIP | 100K 5% |
| R162 | 1-216-073-00 | METAL CHIP | 10K 5% |
| R163 | 1-216-121-91 | RES, CHIP | 1M 5% |
| R164 | 1-216-061-00 | METAL CHIP | 3.3K 5% |
| R165 | 1-216-049-91 | RES, CHIP | 1K 5% |
| R166 | 1-216-073-00 | METAL CHIP | 10K 5% |
| R167 | 1-216-081-00 | METAL CHIP | 22K 5% |
| R168 | 1-216-073-00 | METAL CHIP | 10K 5% |
| R169 | 1-216-079-00 | METAL CHIP | 18K 5% |
| R170 | 1-216-081-00 | METAL CHIP | 22K 5% |
| R171 | 1-216-073-00 | METAL CHIP | 10K 5% |
| R172 | 1-216-079-00 | METAL CHIP | 18K 5% |
| R173 | 1-216-049-91 | RES, CHIP | 1K 5% |
| R174 | 1-216-033-00 | METAL CHIP | 220 5% |
| R175 | 1-216-025-91 | RES, CHIP | 100 5% |
| R176 | 1-216-049-91 | RES, CHIP | 1K 5% |
| R177 | 1-216-049-91 | RES, CHIP | 1K 5% |
| R178 | 1-216-049-91 | RES, CHIP | 1K 5% |
| R179 | 1-216-025-91 | RES, CHIP | 100 5% |
| R180 | 1-216-025-91 | RES, CHIP | 100 5% |
| R181 | 1-216-025-91 | RES, CHIP | 100 5% |
| R182 | 1-216-025-91 | RES, CHIP | 100 5% |
| R183 | 1-216-025-91 | RES, CHIP | 100 5% |
| R188 | 1-216-037-00 | METAL CHIP | 330 5% |
| R189 | 1-216-025-91 | RES, CHIP | 100 5% |
| R190 | 1-216-097-91 | RES, CHIP | 100K 5% |
| R191 | 1-216-105-91 | RES, CHIP | 220K 5% |
| | | < SWITCH > | |
| S101 | 1-572-085-11 | SWITCH, LEAF (LIMIT) | |
| | | < VIBRATOR > | |
| X101 | 1-767-408-21 | VIBRATOR, CRYSTAL (16.9344MHz) | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------------------|-----------------|
| * | 1-645-721-11 | LOADING BOARD | ***** |
| | | < CONNECTOR > | |
| * CN151 | 1-568-943-11 | PIN, CONNECTOR 5P | |
| | | < SWITCH > | |
| S151 | 1-572-086-11 | SWITCH, LEAF (LOAD OUT) | |
| S152 | 1-572-086-11 | SWITCH, LEAF (LOAD IN) | |
| ***** | | | |
| * | A-4699-941-A | MAIN BOARD, COMPLETE | ***** |
| | | < CAPACITOR > | |
| C301 | 1-162-286-21 | CERAMIC | 220PF 10% 50V |
| C302 | 1-130-479-00 | MYLAR | 0.0047uF 5% 50V |
| C303 | 1-126-967-11 | ELECT | 47uF 20% 16V |
| C304 | 1-162-286-21 | CERAMIC | 220PF 10% 50V |
| C305 | 1-130-472-00 | MYLAR | 0.0012uF 5% 50V |
| C306 | 1-161-494-00 | CERAMIC | 0.022uF 25V |
| C307 | 1-162-290-31 | CERAMIC | 470PF 10% 50V |
| C308 | 1-104-666-11 | ELECT | 220uF 20% 25V |
| C309 | 1-161-494-00 | CERAMIC | 0.022uF 25V |
| C310 | 1-164-159-21 | CERAMIC | 0.1uF 50V |
| C351 | 1-162-286-21 | CERAMIC | 220PF 10% 50V |
| C352 | 1-130-479-00 | MYLAR | 0.0047uF 5% 50V |
| C353 | 1-126-967-11 | ELECT | 47uF 20% 16V |
| C354 | 1-162-286-21 | CERAMIC | 220PF 10% 50V |
| C355 | 1-130-472-00 | MYLAR | 0.0012uF 5% 50V |
| C356 | 1-161-494-00 | CERAMIC | 0.022uF 25V |
| C357 | 1-162-290-31 | CERAMIC | 470PF 10% 50V |
| C401 | 1-161-494-00 | CERAMIC | 0.022uF 25V |
| C402 | 1-162-306-11 | CERAMIC | 0.01uF 20% 16V |
| C403 | 1-126-964-11 | ELECT | 10uF 20% 50V |
| C702 | 1-126-964-11 | ELECT | 10uF 20% 50V |
| C703 | 1-162-294-31 | CERAMIC | 0.001uF 10% 50V |
| C704 | 1-104-666-11 | ELECT | 220uF 20% 25V |
| C705 | 1-126-964-11 | ELECT | 10uF 20% 50V |
| C706 | 1-126-933-11 | ELECT | 100uF 20% 16V |
| C707 | 1-126-960-11 | ELECT | 1uF 20% 50V |
| C708 | 1-126-964-11 | ELECT | 10uF 20% 50V |
| C709 | 1-126-964-11 | ELECT | 10uF 20% 50V |
| C710 | 1-126-964-11 | ELECT | 10uF 20% 50V |
| C711 | 1-126-956-91 | ELECT | 0.1uF 20% 50V |
| C713 | 1-164-159-21 | CERAMIC | 0.1uF 50V |
| C714 | 1-164-159-21 | CERAMIC | 0.1uF 50V |
| C715 | 1-126-933-11 | ELECT | 100uF 20% 16V |
| C716 | 1-162-290-31 | CERAMIC | 470PF 10% 50V |
| C717 | 1-162-290-31 | CERAMIC | 470PF 10% 50V |
| C718 | 1-164-159-21 | CERAMIC | 0.1uF 50V |
| C719 | 1-164-159-21 | CERAMIC | 0.1uF 50V |
| C901 | 1-126-939-11 | ELECT | 10000uF 20% 16V |
| C902 | 1-126-768-11 | ELECT | 2200uF 20% 16V |
| C903 | 1-128-576-11 | ELECT | 100uF 20% 63V |
| C904 | 1-164-159-21 | CERAMIC | 0.1uF 50V |

CDP-XE220/XE320

PANEL

POWER SW

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------------------------|--------|
| | | < CONNECTOR > | |
| * CN501 | 1-568-864-11 | SOCKET, CONNECTOR 21P | |
| | | < FLUORESCENT INDICATOR > | |
| FL501 | 1-517-297-11 | INDICATOR TUBE, FLUORESCENT | |
| | | < IC > | |
| IC501 | 8-752-880-56 | IC CXP82616-034Q | |
| IC502 | 8-749-014-66 | IC NJL56H400 | |
| | | < TRANSISTOR > | |
| Q501 | 8-729-029-66 | TRANSISTOR DTC114ESA | |
| | | < RESISTOR > | |
| R501 | 1-249-427-11 | CARBON 6.8K 5% 1/4W F | |
| R502 | 1-249-427-11 | CARBON 6.8K 5% 1/4W F | |
| R503 | 1-249-427-11 | CARBON 6.8K 5% 1/4W F | |
| R504 | 1-249-415-11 | CARBON 680 5% 1/4W F | |
| R505 | 1-249-417-11 | CARBON 1K 5% 1/4W F | |
| R506 | 1-249-417-11 | CARBON 1K 5% 1/4W F | |
| R507 | 1-249-419-11 | CARBON 1.5K 5% 1/4W F | |
| R508 | 1-249-421-11 | CARBON 2.2K 5% 1/4W F | |
| R509 | 1-249-427-11 | CARBON 6.8K 5% 1/4W F | |
| R510 | 1-249-415-11 | CARBON 680 5% 1/4W F | |
| R511 | 1-249-417-11 | CARBON 1K 5% 1/4W F | |
| R512 | 1-249-419-11 | CARBON 1.5K 5% 1/4W F | |
| R513 | 1-249-427-11 | CARBON 6.8K 5% 1/4W F | |
| R514 | 1-249-415-11 | CARBON 680 5% 1/4W F | |
| R515 | 1-247-807-31 | CARBON 100 5% 1/4W | |
| R516 | 1-249-441-11 | CARBON 100K 5% 1/4W | |
| R517 | 1-247-843-11 | CARBON 3.3K 5% 1/4W | |
| R518 | 1-249-427-11 | CARBON 6.8K 5% 1/4W F | |
| R519 | 1-249-431-11 | CARBON 15K 5% 1/4W | |
| R520 | 1-247-807-31 | CARBON 100 5% 1/4W | |
| | | < SWITCH > | |
| S502 | 1-554-303-21 | SWITCH, TACTILE (TIME) | |
| S503 | 1-554-303-21 | SWITCH, TACTILE (REPEAT) | |
| S504 | 1-554-303-21 | SWITCH, TACTILE (PLAY MODE) | |
| S508 | 1-554-303-21 | SWITCH, TACTILE (PEAK SEARCH) | |
| S509 | 1-554-303-21 | SWITCH, TACTILE (CHECK) | |
| S510 | 1-554-303-21 | SWITCH, TACTILE (CLEAR) | |
| S511 | 1-554-303-21 | SWITCH, TACTILE (≡ OPEN/CLOSE) | |
| S512 | 1-554-303-21 | SWITCH, TACTILE (▷) | |
| S513 | 1-554-303-21 | SWITCH, TACTILE (■) | |
| S514 | 1-554-303-21 | SWITCH, TACTILE (■) | |
| S515 | 1-554-303-21 | SWITCH, TACTILE (▶▶) | |
| S516 | 1-554-303-21 | SWITCH, TACTILE (◀◀) | |
| S520 | 1-475-543-11 | ENCODER, ROTARY (◀◀◀ AMS ▷▷▷) | |
| | | < VIBRATOR > | |
| X501 | 1-577-082-11 | VIBRATOR, CERAMIC (4MHz) | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|---|--------|
| * | 1-668-618-11 | POWER SW BOARD ***** | |
| | | < SWITCH > | |
| S501 | 1-554-118-00 | SWITCH, PUSH (1 KEY)(I/O) | |
| | | ***** | |
| | | MISCELLANEOUS ***** | |
| 11 | 1-590-243-11 | WIRE (FLAT TYPE) (21 CORE) | |
| △15 | 1-575-651-21 | CORD, POWER | |
| △21 | 1-770-019-11 | ADAPTOR, CONVERSION PLUG 3P (UK) | |
| * 101 | 1-452-538-11 | MAGNET | |
| 116 | 1-452-925-21 | MAGNET ASSY | |
| △151 | 8-848-379-31 | OPTICAL PICK-UP KSS-213BA/F-NP | |
| 152 | 1-769-069-11 | WIRE (FLAT TYPE)(16 CORE) | |
| M101 | X-4917-523-4 | MOTOR ASSY (SPINDLE) | |
| M102 | X-4917-504-1 | MOTOR ASSY (SLED) | |
| M151 | A-4672-207-A | MOTOR (L) ASSY (LOADING) | |
| △T901 | 1-423-979-11 | TRANSFORMER, POWER | |
| | | ***** | |
| | | ACCESSORIES & PACKING MATERIALS ***** | |
| | 1-467-880-11 | REMOTE COMMANDER (RM-D420)(XE320) | |
| | 1-558-271-11 | CORD, CONNECTION (AUDIO 108cm) | |
| | 3-861-618-11 | MANUAL, INSTRUCTION (ENGLISH,FRENCH,SPANISH) | |
| | 3-861-618-21 | MANUAL, INSTRUCTION (GERMAN,DUTCH,ITALIAN,PORTUGUESE)(AEP) | |
| | 3-861-618-31 | MANUAL, INSTRUCTION (SWEDISH,DANNISH,FINISH)(AEP) | |
| | 3-861-618-41 | MANUAL, INSTRUCTION (ENGLISH,POLISH,RUSSIAN)(AEP) | |
| | 3-861-618-51 | MANUAL, INSTRUCTION (HUNGARIAN)(AEP) | |
| | 3-861-618-61 | MANUAL, INSTRUCTION (CZECH)(AEP) | |
| | 3-861-618-81 | MANUAL, INSTRUCTION (GREEK)(AEP) | |
| | 4-962-615-01 | COVER, BATTERY (FOR RM-D420)(XE320) | |
| | | ***** | |
| | | ***** | |
| | | HARDWARE LIST ***** | |
| #1 | 7-685-646-79 | SCREW +BVTP 3X8 TYPE2 N-S | |
| #2 | 7-621-775-10 | SCREW +B 2.6X4 | |
| #3 | 7-621-255-15 | SCREW +P 2X3 | |
| #4 | 7-685-134-19 | SCREW +BTP 2.6X8 TYPE2 N-S | |

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

– MEMO –

