

# DTC-55ES/75ES/700

## SERVICE MANUAL

*US Model*

DTC-75ES/700

*Canadian Model*

DTC-75ES

*AEP Model*

*UK Model*

DTC-55ES



www.freeservicemanuals.info

Model Name Using Similar Mechanism	New Mechanism
Tape Transport Mechanism Type	DTAM-13

### SPECIFICATIONS

<p><b>Tape</b> Recording head Recording time</p> <p><b>Tape speed</b></p> <p><b>Drum rotation</b></p> <p><b>Error correction</b></p> <p><b>Tape</b> Track pitch Sampling frequency Modulation system Transfer rate Number of channel D/A conversion</p> <p><b>Frequency response</b></p> <p><b>Signal to noise ratio</b></p>	<p>Digital audio tape Rotary head Standard: 120 minutes, Long-play mode: 240 minutes (with DT-120)</p> <p>Standard: 8.15 mm/s, Long-play mode: 4.075 mm/s</p> <p>Standard: 2,000 rpm, Long-play mode: 1,000 rpm</p> <p>Double Read Solomon code</p> <p>13.6 <math>\mu</math>m (20.4 <math>\mu</math>m) 48 kHz, 44.1 kHz, 32 kHz 8 - 10 Modulation 2.46 Mbit/sec. 2 channels, stereo Standard: 16-bit linear Long-play mode: 12-bit non-linear Standard: 2 - 22,000 Hz (<math>\pm 0.5</math> dB) Long-play mode: 2 - 14,500 Hz (<math>\pm 0.5</math> dB)</p> <p>DTC-55ES/700 : Standard : more than 92dB Long-play mode : more than 92dB DTC-75ES : Standard : more than 93dB Long-play mode : more than 92dB</p>	<p><b>Dynamic range</b></p> <p>DTC-55ES/700 Standard : more than 92dB Long-play mode : more than 92dB DTC-75ES : Standard : more than 93dB Long-play mode : more than 92dB</p> <p><b>Total harmonic distortion</b></p> <p>DTC-55ES : Standard : less than 0.005 % (1kHz) Long-play mode : less than 0.08 % (1kHz) DTC-75ES : Standard : less than 0.004 % (1kHz) Long-play mode : less than 0.08 % (1kHz) DTC-700 : Standard : less than 0.0045 % (1kHz) Long-play mode : less than 0.08 % (1kHz)</p> <p><b>Wow and flutter</b></p> <p>Below measurable limit (<math>\pm 0.001\%</math> W.PEAK)</p>	<p><b>Input</b></p> <table border="1"> <thead> <tr> <th></th> <th>Jack type</th> <th>Impedance</th> <th>Rated input level</th> </tr> </thead> <tbody> <tr> <td>LINE IN</td> <td>phono jack</td> <td>47 kohms</td> <td>-4 dBs</td> </tr> <tr> <td>DIGITAL IN</td> <td>phono jack</td> <td>75 ohms</td> <td>0.5 Vp-p, 20%</td> </tr> <tr> <td>DIGITAL IN</td> <td>optical jack</td> <td>—</td> <td>—</td> </tr> </tbody> </table>		Jack type	Impedance	Rated input level	LINE IN	phono jack	47 kohms	-4 dBs	DIGITAL IN	phono jack	75 ohms	0.5 Vp-p, 20%	DIGITAL IN	optical jack	—	—
	Jack type	Impedance	Rated input level																
LINE IN	phono jack	47 kohms	-4 dBs																
DIGITAL IN	phono jack	75 ohms	0.5 Vp-p, 20%																
DIGITAL IN	optical jack	—	—																

- Continued on next page -

DIGITAL AUDIO TAPE DECK  
**SONY**®

**Output**

	Jack type	Impedance	Rated output	Load impedance
LINE OUT	phono jack	470 ohms	-4 dBs	More than 10 kohms
PHONES	stereo phono jack	220 ohms	0.6 mW	32 ohms
DIGITAL OUT	phono jack (DTC-75ES/700)	75 ohms	0.5 Vp-p ±20%	—

DIGITAL OUT (optical jack): wavelength 660 nm

**General**

**Power requirements** US, Canadian model: 120V AC, 60Hz  
 AEP model: 220V AC, 50/60Hz  
 UK model: 240V AC, 50/60Hz

**Power consumption** 32 W

**Dimensions** DTC-55ES/75ES :  
 Approx. 470 × 115 × 330 mm (w/h/d)  
 (18<sup>5</sup>/<sub>8</sub> × 4<sup>3</sup>/<sub>8</sub> × 12<sup>7</sup>/<sub>8</sub> inches) incl. projecting parts and controls  
 DTC-700 :  
 Approx. 430 × 115 × 330 mm (w/h/d)  
 (17 × 4<sup>3</sup>/<sub>8</sub> × 12<sup>7</sup>/<sub>8</sub> inches) incl. projecting parts and controls

**Weight** DTC-55ES/75ES :  
 Approx. 8.3 kg (18 lb 5 oz)  
 DTC-700 :  
 Approx. 7.5 kg (16 lb 8 oz)

**Remote comander (supplied, RM-D55)**

**Remote control system** Infrared control  
**Power requirements** 3 V DC, with two size AA (R6) batteries

**Dimensions** Approx. 63 × 19 × 175 mm (w/h/d)  
 (2<sup>1</sup>/<sub>2</sub> × 3<sup>1</sup>/<sub>4</sub> × 6<sup>7</sup>/<sub>8</sub> inches)

**Weight** Approx. 130 g (4 oz) incl. batteries



**Supplied accessories**

- Sony batteries SUM-3(NS) (2)
- Audio connecting cords (2 phono plugs - 2 phono plugs, stereo for line inputs and outputs) (2)
- Screws (4) (DTC-55ES/75ES)
- Digital audio tape DT-60 (1)


**TABLE OF CONTENTS**

<u>Section</u>	<u>Title</u>	<u>Page</u>
	Specifications .....	1
	Model Identification .....	3
	Safety Check-out .....	3
<b>1. GENERAL</b>		
	Location and Function of Controls .....	4
	Connections .....	7
<b>2. DISASSEMBLY</b> .....		9
<b>3. ADJUSTMENT</b> .....		12
	3-1. Mechanism Adjustment .....	14
	3-2. Electrical Adjustment .....	16
<b>4. DIAGRAMS</b>		
	4-1. Pin Functions .....	18
	4-2. Block Diagram .....	23
	4-3. Waveforms .....	27
	4-4. Semiconductor Lead Layout .....	29
	4-5. Circuit Boards Location .....	30
	4-6. Printed Wiring Boards	
	- Power Supply/Display Section - .....	31
	4-7. Schematic Diagram	
	- Power Supply/Display Section - .....	33
	4-8. Printed Wiring Boards	
	- Main Section - .....	36
	4-9. Schematic Diagram	
	- Main Section - .....	41
	4-10. IC Block Diagram .....	46
<b>5. EXPLODED VIEWS</b> .....		49
<b>6. ELECTRICAL PARTS LIST</b> .....		58

**SAFETY-RELATED COMPONENT WARNING!!**


COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

**ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!**


LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

## MODEL IDENTIFICATION

- Specification Label -

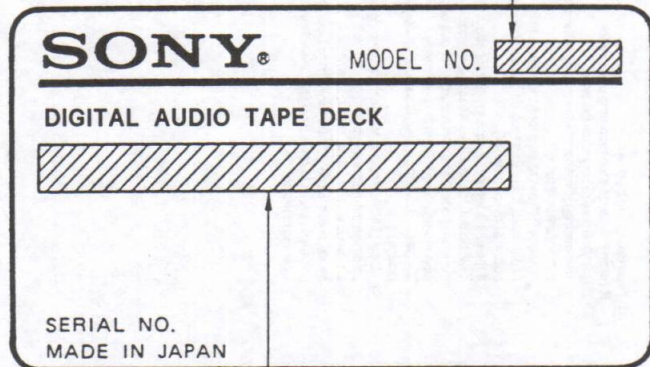DTC-55ES  
DTC-75ES  
DTC-700

US, Canadian model : AC 120V 60Hz 32W  
 AEP model : AC 220V~50/60Hz 32W  
 UK model : AC 240V~50/60Hz 32W

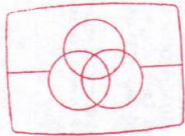

Free service manuals  
 Gratis schema's

Digitized by

www.freeservicemanuals.info

## SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

## LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)



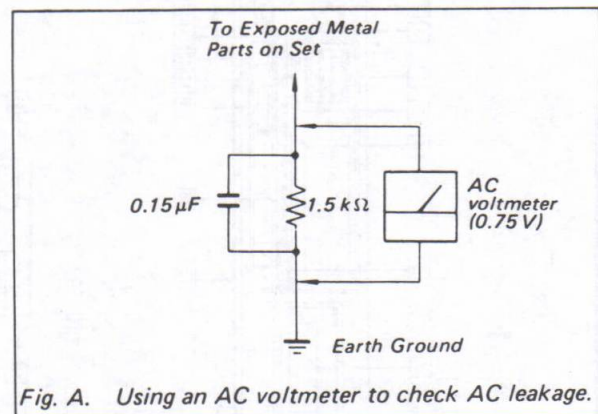


Fig. A. Using an AC voltmeter to check AC leakage.


# Location and Function of Controls

## Front Panel/Remote Commander

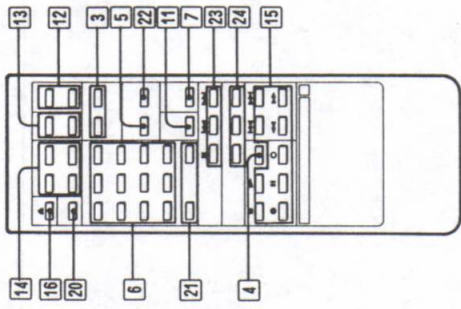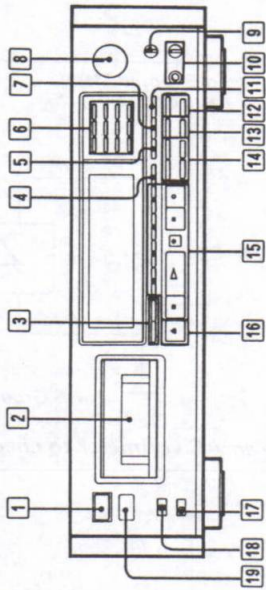


- 1 POWER switch**  
Turns the power on and off.
- 2 Cassette compartment**  
Insert a cassette with the window side up and the safety tab facing you.
- 3 COUNTER buttons**  
**MODE:** Selects the counter indication in the display window among the linear counter (tape running time), absolute time, elapsed time of the selection, and total remaining time of the tape. Each time you press the button, the indication changes sequentially.  
**RESET:** Resets the linear counter to "0w.00s".
- 4 FADER button**  
Press to fade in or fade out during recording or playback.
- 5 REPEAT button**  
Press to play a desired portion repeatedly. Each time you press the button, the indication changes as follows:  
REPEAT 1 → REPEAT ALL → Nothing
- 6 Music select buttons**  
Numeric buttons (0 - 9): Designate the desired program number to be played back before starting playback.  
**CLEAR:** Use to cancel the program number which has been mistakenly entered.  
**MUSIC SCAN:** Use this feature to listen to the beginning of each selection successively.
- 7 SKIP PLAY button**  
Press to activate the skip ID code function. The portion of the tape previously marked will be skipped.
- 8 REC LEVEL (recording level) controls**  
Adjust the recording level for the analog input signals. The left knob controls the L (left) channel level and the inner knob the R (right) channel level. The knobs can be adjusted together.  
When recording digital signals, it is not necessary to adjust the recording level.
- 9 INPUT selector**  
Set according to the signal to be recorded.  
**ANALOG:** For recording from the equipment connected to the LINE IN jacks.  
**OPTICAL:** For recording from the equipment connected to the DIGITAL IN (OPTICAL) jack.  
**COAXIAL:** For recording from the equipment connected to the DIGITAL IN (COAXIAL) jack.
- 10 PHONES (Headphones) jack and LEVEL controls**  
The LEVEL controls adjust the headphones volume level.
- 11 MARGIN RESET button**  
Press to reset the margin of peak level.
- 12 END ID buttons**  
**WRITE:** Press to write the ID signifying the end of playback or recording.  
**ERASE:** Press to erase the end ID.
- 13 SKIP ID buttons**  
**WRITE:** Press at the beginning of the portion you may wish to skip later. A skip ID will be written from the point where you pressed this button.  
**ERASE:** Press to erase the nearest skip ID which is before the current position.
- 14 START ID buttons**  
**AUTO:** Press to turn on and off the AUTO indicator. When the AUTO indicator is lit, the start ID will automatically be written during recording. When the AUTO indicator is not lit, press START ID WRITE at the point where you want to write a start ID.  
**WRITE:** Press to write the start ID at the desired point during recording or playback.  
**ERASE:** Press to erase a start ID. When a start ID and a program number are written on the tape, both codes are simultaneously erased by pressing this button.  
**RENUMBER:** Press to renumber all programs on the tape. When only the start IDs are written, pressing this button will insert the proper program numbers beginning with "1". The tape will rewind and start from the beginning to accomplish this function.
- 15 Tape operating buttons**  
**■ (stop):** Press to stop recording or playback.  
**▷ (play):** Press to play back the tape.  
**REC (recording):** Press to start recording. After pressing this button, press II or ▷.  
**■ (pause):** Press to stop for a moment during recording or playback. To restart recording or playback, press this button again or press ▷.  
If the unit is left in the pause mode for about 10 minutes, it will be automatically released and the deck will enter the stop mode. To restart recording or playback from the stop mode, press REC or ▷ respectively.  
**REC.MUTE (record muting):** Inserts a sound-muted portion (space).  
**◀▶ (AMS):** Press to locate the beginning of the selection during the playback.  
**◀▶▶▶ (rewind/review, fast-forward/cue):** In the stop mode, press to rewind/fast-forward the tape. During playback, press to rewind or fast-forward the tape while listening to the sound.

# SECTION 1 GENERAL

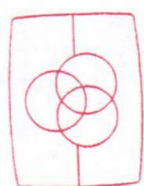

www.frcservicesmanuals.info

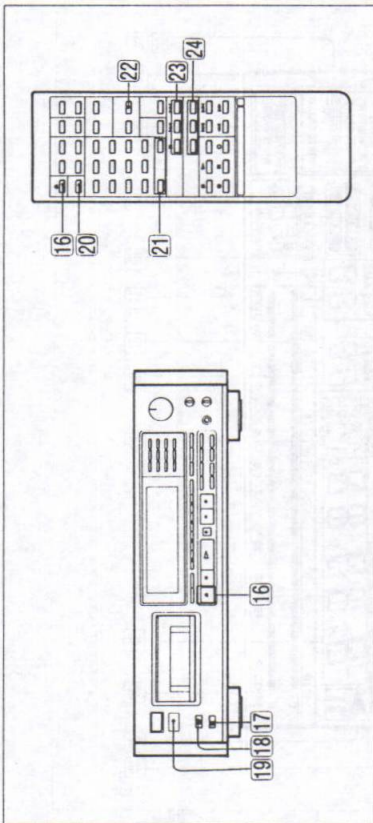

### Remote Commander Operation


Each button on the Remote Commander functions in the same way as those having the same name on the front panel. However, the following operations cannot be performed using the Remote Commander. Use the front panel controls instead.

- Turning the power on and off
- Selecting digital (optical/coaxial)/analog input source
- Adjusting the recording level and headphones level
- Setting the timer recording/playback
- Selecting the recording mode (standard or long)

The following operations can be performed only with the Remote Commander.

- Activating CD synchronized recording using a Sony CD player and controlling the CD player
- Locating the desired selection on the Compact Disc or setting the CD player in the pause mode (possible only when a Sony CD player is used.)
- Repeat play (A-B)
- RMS\* play
- RMS: Random Music Sensor

### Installing Batteries

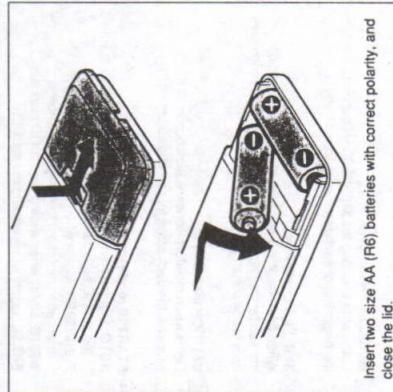

Insert two size AA (R6) batteries with correct polarity, and close the lid.

**Notes on remote control**

- Do not expose the remote sensor on the deck to strong light such as direct sunlight, lighting apparatus, etc.
- Do not place any obstructions between the Remote Commander and the remote sensor, or else operations will not be performed correctly.
- The controllable range is limited. Point the Remote Commander directly at the remote sensor on the deck.
- When remote control operation distance becomes shorter, the batteries are weak. Replace both batteries with new ones.

**To avoid battery leakage**

When the commander will not be used for a long period of time, remove the batteries to avoid damage caused by battery leakage and corrosion.

**Battery life**

About half a year of normal operation can be expected when using the Sony SUM-3 (NS) batteries.

- 16 **OPEN/CLOSE (load/eject)**: Press when inserting or removing the cassette.
- 17 **REC MODE selector**: Normally set to STANDARD. When this selector is set to LONG, you can record analog input signals and digital input signals with 32 kHz in the long-play mode.
- 18 **TIMER switch**: Normally set to OFF. Use to start recording or playback at the desired time using a commercially available audio timer.
- 19 **Remote sensor**: Receives the signal from the Remote Commander.
- Remote Commander**
- 20 **DISPLAY MODE button**: Press to turn on and off the indicators in the display.
- 21 **RMS play buttons**:  
**ENTER**: To program the selections in a desired order, press this button after pressing the numeric buttons.  
**CHECK**: Press to check the programmed contents.
- 22 **REPEAT A-B button**: Press to play back a desired portion repeatedly.
- 23 **CD operation buttons**: Operative only for the Sony CD player equipped with a Remote Commander.  
**II (pause)**: Sets the CD player in the pause mode during playback. Press again to release pause. If pressed twice when the player is in the stop mode, playback starts.  
**II <> II (AMS)**: Press to locate the desired selection on the Compact Disc during playback or in the stop mode.
- 24 **CD SYNCHRO (CD synchronized recording) buttons**  
**STANDBY**: Press to set the unit in the record-standby mode.  
**START**: Press to start recording of the DAT deck and then playback of the CD player.  
**STOP**: Press to stop the DAT deck recording and the CD player playback.

### Display Window

#### To turn off the display window

When the power is turned on, the display window also is turned on. During recording or playback, the display window can be turned off as follows:

**When operating with the front panel controls**

While pressing COUNTER MODE, press 0.

When operating with the Remote Commander

Press DISPLAY MODE.

Each time you press the above buttons, the indicators changes as follows:

Normal indicators

Peak level meters and margin indicators go off.

(DISPLAY OFF indicator lights.)

All the indicators go off during recording or playback.\*

(DISPLAY OFF AUTO indicator lights momentarily just before the indicators go off.)

\* When pressing COUNTER MODE or DISPLAY MODE, except during recording or playback, DISPLAY OFF AUTO lights. In this case, all the indicators go off immediately after recording or playback starts.

#### To change the brightness of the display window

While pressing COUNTER MODE, press one of the numeric buttons 1, 2 and 3. The greater number pressed, the darker the display window becomes.

(When operating with the Remote Commander, also press COUNTER MODE.)

#### TOC (Table of contents) indicator

When a pre-recorded DAT cassette is played back, this indicator will light.

#### REMAINING (remaining time) indicator

Lights when the counter shows the remaining time of the tape.

#### PGM TIME (program time) indicator

Lights when the counter shows the elapsed time of the current selection.

#### ABS TIME (absolute time) indicator

Lights when the counter shows the tape running time from the beginning.

During normal tape counter mode, the above three indicators all go off.

#### Fade-in/out indicators

FADE IN: Blinks when recording or playback fades in.

FADE OUT: Blinks when recording or playback fades out.

#### Indicators of the INPUT selector

The OPTICAL or COAXIAL indicator lights according to the position of the INPUT selector. No indicator lights when the INPUT selector is set to ANALOG.

#### REPEAT indicators

REPEAT 1: Lights when a desired selection is played back repeatedly.

REPEAT ALL: Lights when all the selections are played back repeatedly.

REPEAT A-B: Lights when a desired portion is played back repeatedly.

#### DISPLAY mode indicators

DISPLAY OFF indicator lights when peak level meters and margin indicators are turned off. DISPLAY OFF AUTO lights momentarily before all the indicators are turned off.

#### MUSIC SCAN indicator

Lights after pressing the MUSIC SCAN button to listen to the beginning of each selection successively.

#### SKIP PLAY indicator

When this indicator is lit during playback, the portion marked by the skip ID is skipped and playback continues from the next start ID.

#### CAUTION indicator

Lights when moisture condensation occurs. If this happens, the deck stops functioning automatically.

#### START ID mode indicators

AUTO: Lights when the AUTO button is pressed to write the start ID automatically.

RENUMBER: Lights when the RENUMBER button is pressed to renumber the program numbers.

WRITE: Lights when writing the start ID manually.

ERASE: Lights when erasing the start ID.

#### START ID indicator

Blinks when writing (for 9 or 18 seconds) or erasing a start ID code, and lights when the start ID is detected during playback.

#### SKIP ID indicator

Lights when writing or erasing a skip ID code or when the skip ID is detected during playback.

#### SKIP ID mode indicators

WRITE: Lights when writing the skip ID.

ERASE: Lights when erasing the skip ID.

#### END ID mode indicators

WRITE: Lights when writing the end ID.

ERASE: Lights when erasing the end ID.

#### MARGIN indicators

Show how much margin there is between the peak level of input audio signal and 0 dB.

#### REHEARSAL indicator

Lights while the rehearsal function is activated.

#### Frequencies map

When pressing 4 while keeping COUNTER MODE pressed, bars indicating the sampling frequencies with which the tape was recorded appear on the peak level meters.

#### AMS (automatic music sensor)

Shows the number of selections to be skipped ahead or behind in the AMS operation. When designating a selection directly by the numeric buttons and the > button, the display shows the program number of the target selection while the selection is being searched for. When programming the desired selections in the RMS operation, the display shows the program number of the selection to be programmed.

#### PGM NO./STEP indicators

Show the program number of the selection being played. When programming the desired selections in the RMS operation, the display shows the step number of the programmed selection.

#### Sampling frequency indicators

48 kHz: For recording/playback of analog input signals (standard mode)

44.1 kHz: For recording/playback of CD and a pre-recorded DAT cassette

32 kHz: For recording/playback of analog input signals (long-play mode)

#### Counter

Displays the linear counter, absolute time, elapsed time of the selection being played, and the total remaining time of the tape. Each time COUNTER MODE is pressed, the display mode changes in turn.

#### Peak level meters

Indicate the level of the audio signal being recorded during recording, and the peak values of the audio signal recorded on the tape during playback.

#### Tape operation indicators


REC: Lights during recording or in the record-pause mode.

▶: Lights during recording or playback. It also lights in the record-pause mode or in the play-pause mode.

II: Lights in the record-pause mode or in the play-pause mode.


#### LONG mode indicator

Lights when recording or playback is being performed in the long play mode.

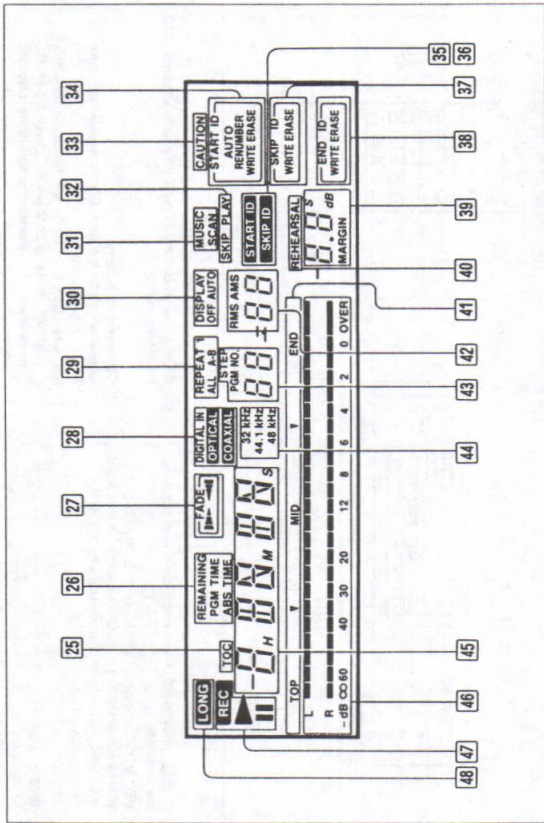

# Connections

## Rear Panel Jacks

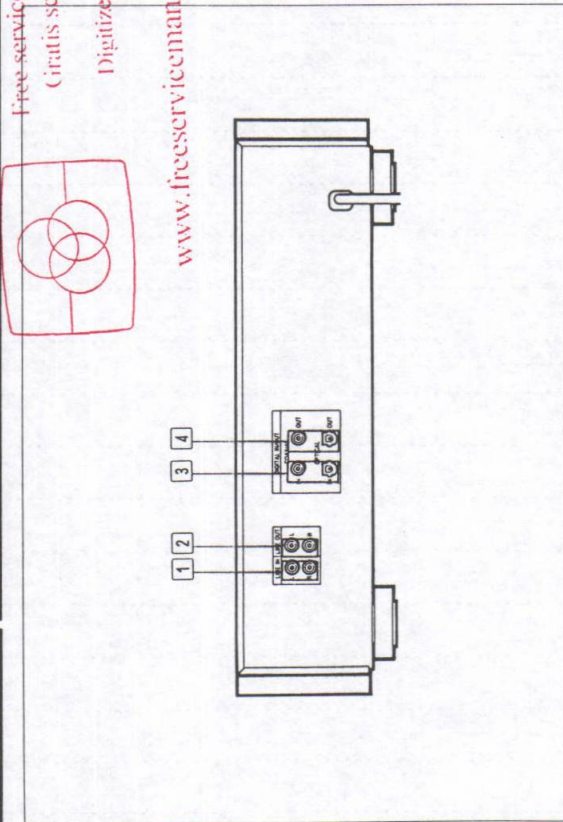

Free service manuals

Digitized by

www.freeservicemanuals.info

connecting cords are the following three types of connecting jacks at the rear of the deck. Each type of jack requires a different type of connecting cord.

Jack	Required cord
LINE IN/OUT (analog input/output) jacks	<p>Audio signal connecting cord (supplied, or optional RK-C77 etc.)</p>
COAXIAL IN/OUT (digital input/output) jacks	<p>Coaxial digital connecting cord (optional VMC-1ES etc.)</p>
OPTICAL IN/OUT (optical transmission digital input/output) jacks	<p>Optical cable (optional POC-15 etc.)</p>

### Before connection

- Use the connecting cords specified in the illustrations.
- Turn off the power for all equipment before making connections.
- Be sure to insert the plugs firmly into the jacks. Loose connections may cause hum and noise. When unplugging, grasp the plug and not the cord.

### Notes on the optical cable

- Do not bend the cord. When the cord is not used, curl it with a diameter of more than 15 cm (5 7/8 inches).
- Do not use it under high temperatures.
- When the optical cable is not connected, cover the OPTICAL IN/OUT jacks with the supplied caps.

### Note on sound signals

When connecting a digital connecting cord or an optical cable to the DIGITAL, IN/DIGITAL OUT jacks, sound signals (L/R) are transmitted together through the cord or the cable.

- 1 LINE IN (line input) jacks (phono jack)**  
Connect to the recording outputs of a preamplifier/receiver. Signals supplied by the preamplifier/receiver can be recorded using the sampling frequency of 48 kHz or 32 kHz.
- 2 LINE OUT (line output) jacks (phono jack)**  
Connect to the DAT or tape inputs of a preamplifier/receiver. The playback signal of this deck will be output.
- 3 COAXIAL/OPTICAL DIGITAL IN (digital input) jacks (phono jack/optical jack)**  
Connect to the digital outputs of a preamplifier/receiver having a built-in D/A converter or other digital source, such as a CD player for digital-to-digital recording.
- 4 COAXIAL(OPTIC-75ES/700 ONLY) /OPTICAL DIGITAL OUT (digital output) jacks (phono jack/optical jack)**  
Connect to the digital inputs of a preamplifier/receiver having a built-in D/A converter or another DAT deck, for playback of a DAT cassette or digital-to-digital recording.






# SECTION 2 DISASSEMBLY


Note : Follow the disassembly procedure numerical order given.

**CASE**  
Unscrew the four case attachment screws and remove the case.


## MECHANISM BLOCK

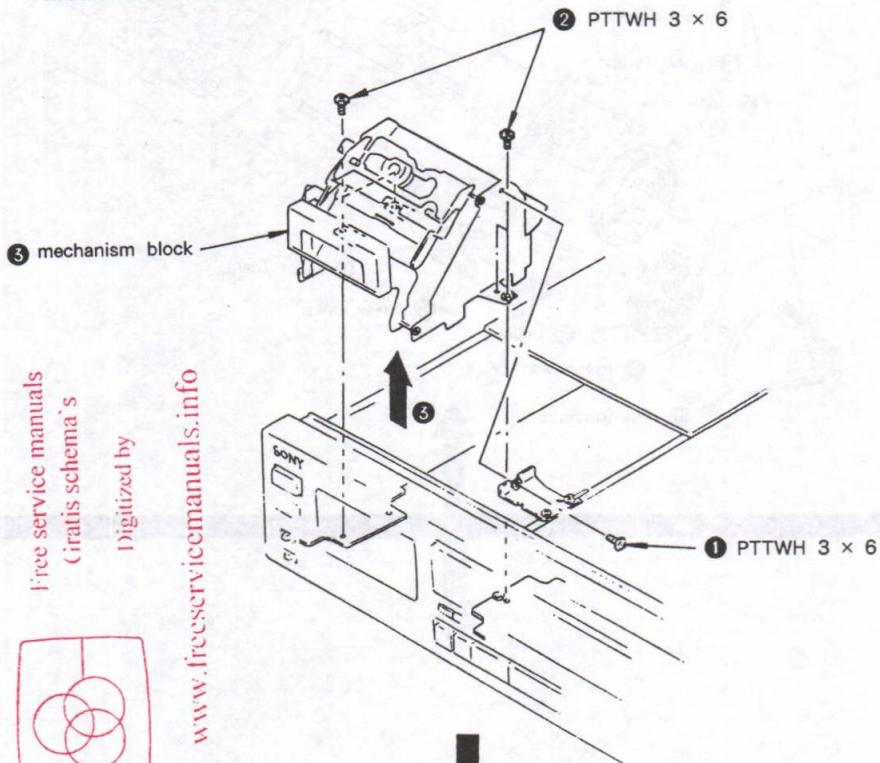

## HOLDER

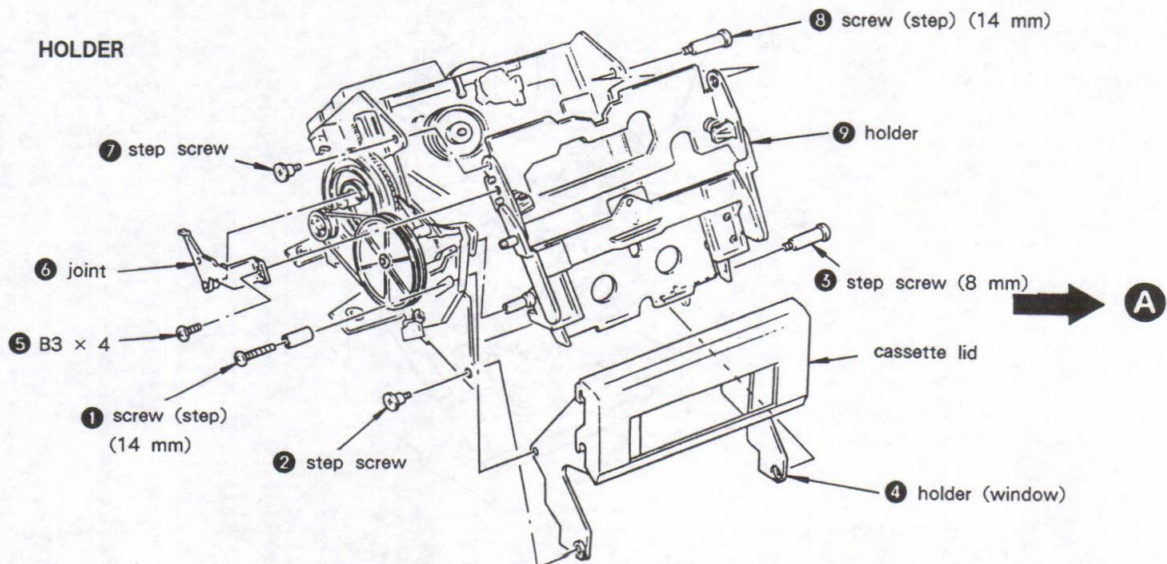

CASSETTE COMPARTMENT MOTOR (M901), PULLEY, GEAR (CAM), SLIDER (CAM)

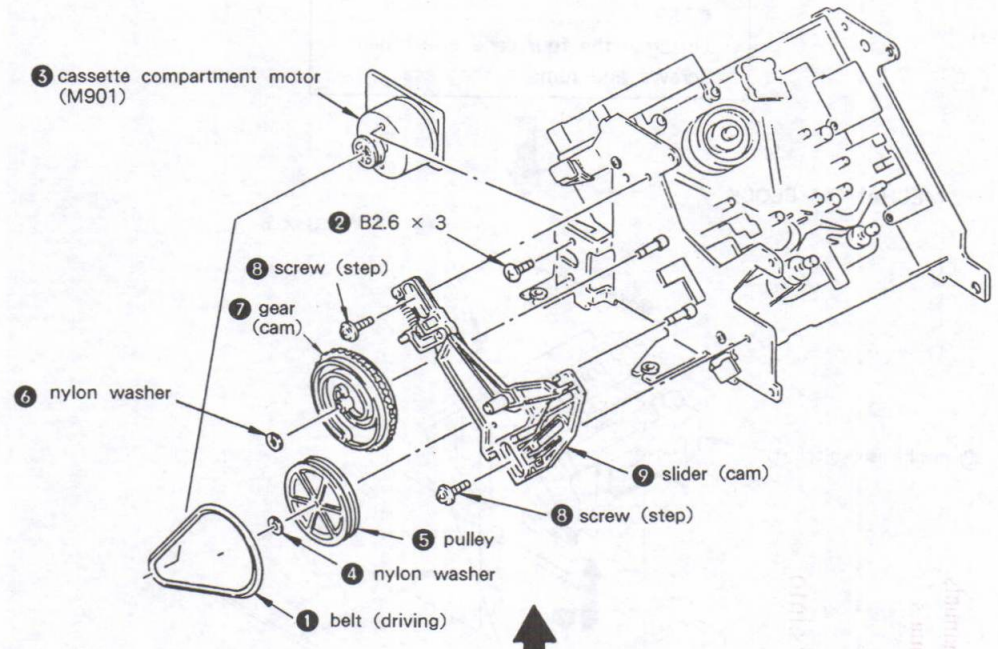


A




DRUM

1 Unsolder the drum lead wires and remove the flexible board on rear side of the drum from the connector.

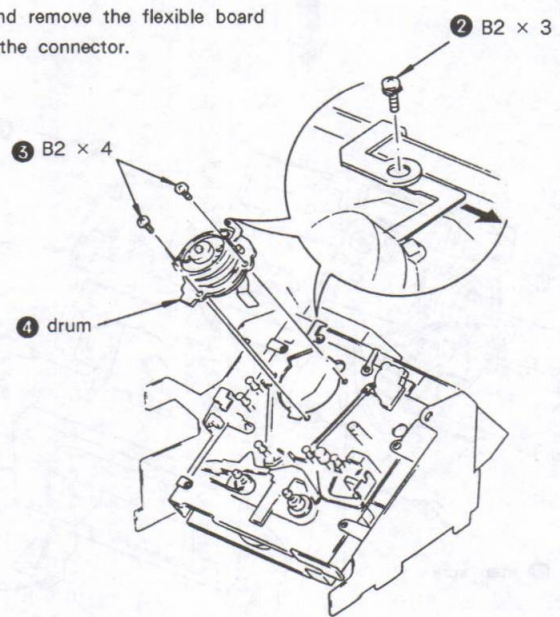


### DRUM DRIVE BOARD, DRIVING CHASSIS, CONTROL MOTOR (M903)

1 Remove the connector on the drum drive board.

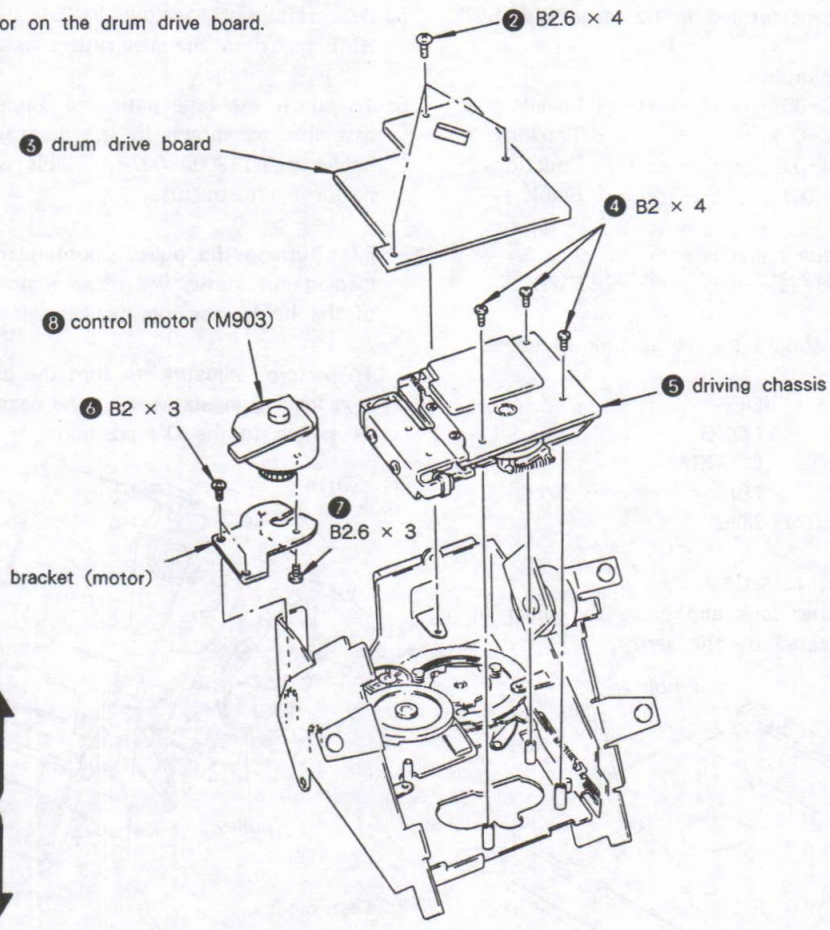

### CAPSTAN MOTOR (M902)

1 precision screw  
M 1.7 x 4

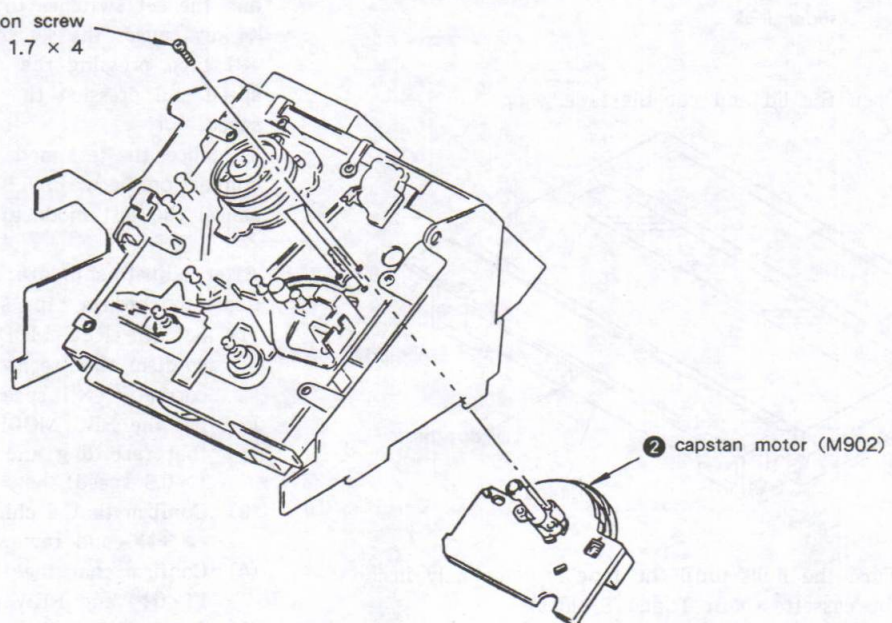

## SECTION 3 ADJUSTMENTS

### Notes When Making Adjustments

1. Adjustments should be performed in the order listed.
2. Use the following test tapes :
  - TY-7111 (8-909-812-00) ..... Level
  - TY-7252 (8-909-822-00) ..... Tracking
  - TY-7551 (8-909-814-00) ..... Functions
  - TY-30B (8-892-358-00) ..... Blank

Use the following torque meter :


TW-7131 (8-909-708-71) ..... FWD

3. Switches and controls should be set as follows unless otherwise specified.
 


TIMER switch :	OFF
REC MODE switch :	LONG
INPUT switch :	COAXIAL
REC LEVEL control :	Min.
PHONES LEVEL control :	Min.

#### 4. Creating an end sensor cassette

- (1) Press the tape slider lock and move the slider in the direction indicated by the arrow.

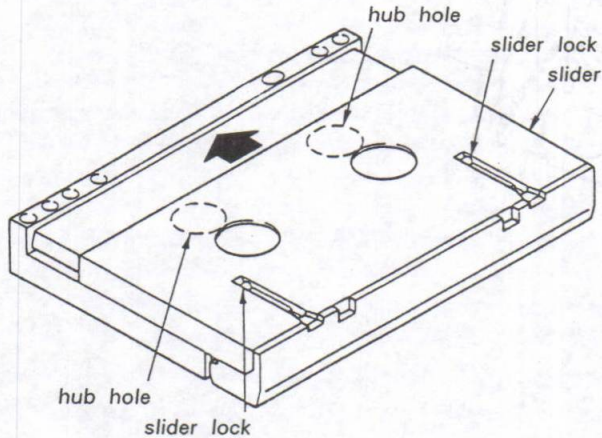


- (2) Open the lid and cut the tape.

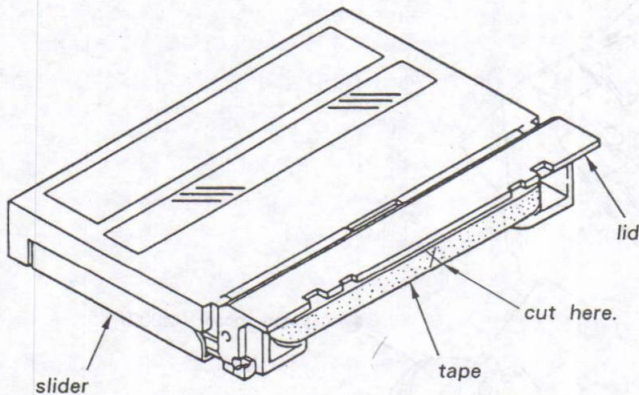

- (3) Turn the hubs until the tape is completely inside the cassette (both T and S sides).  
The end sensor cassette for end sensor adjustment is now ready for use.

5. Be careful not to move RV951 and RV952 on the RF AMP board in the mechanism assembly.
6. To adjust the tape path and guides, remove the holder assembly as shown in the diagram and use the DAT holder jig (J-2000-002-A). This will make it easier to perform adjustments.

- First turning the pulley counterclockwise to put it in loading out status will make removal and reattachment of the holder assembly easier.
- To perform adjustments, turn the pulley clockwise to put it in loading in status, load the cassette tape and set the IN switch to the ON position.

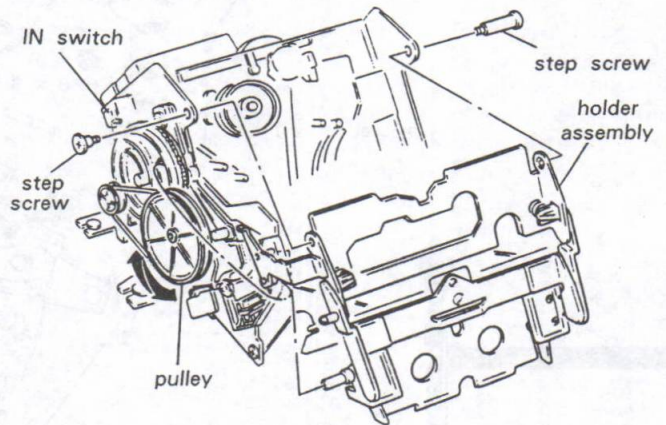

#### 7. Test mode


To switch to the test mode, connect TP XTEST and GND on the main board and turn power on. In the test mode, when a  $\times 1.5$  speed tape (prerecorded tape or test tape) is used and the AMS  $\blacktriangleright\blacktriangleright$  key is pressed, the sampling frequency (FS) indication switches to 30 kHz and the set switches to FWD status. Pressing the AMS  $\blacktriangleleft\blacktriangleleft$  key causes the set to switch to REV status. With a  $\times 1$  tape, pressing the AMS  $\blacktriangleright\blacktriangleright$  key initiates FWD  $\times 16$  speed and pressing the AMS  $\blacktriangleleft\blacktriangleleft$  key initiates REV  $\times 16$  speed.

To cancel the test mode, turn power off and remove the connection between TP XTEST and GND. Be sure to cancel the test mode after adjustments are completed.


8. After adjustments are completed, check the following items to confirm tape speed accuracy :
  - (1) Set the REC MODE switch to STANDARD and confirm that recording and playback operate correctly ( $\times 1$  speed).
  - (2) Set the REC MODE switch to LONG and confirm that recording and playback operate correctly ( $\times 0.5$  speed).
  - (3) Confirm that a chirping sound is heard during cue ( $\blacktriangleright + \blacktriangleright\blacktriangleright$ ) and review ( $\blacktriangleright + \blacktriangleleft\blacktriangleleft$ ) ( $\times 2.5$  speed).
  - (4) Confirm that the time display is appropriate after FF ( $\blacktriangleright\blacktriangleright$ ) and REW ( $\blacktriangleleft\blacktriangleleft$ ) ( $\times 16$  speed).
  - (5) Confirm that the search ( $\blacktriangleright\blacktriangleright$  and  $\blacktriangleleft\blacktriangleleft$ ) function operates properly.

### Adjustment Parts Location

- Mechanism assembly -

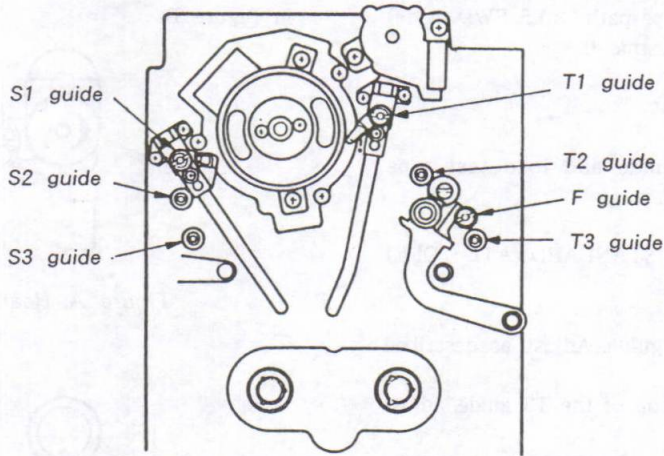

- Main board -

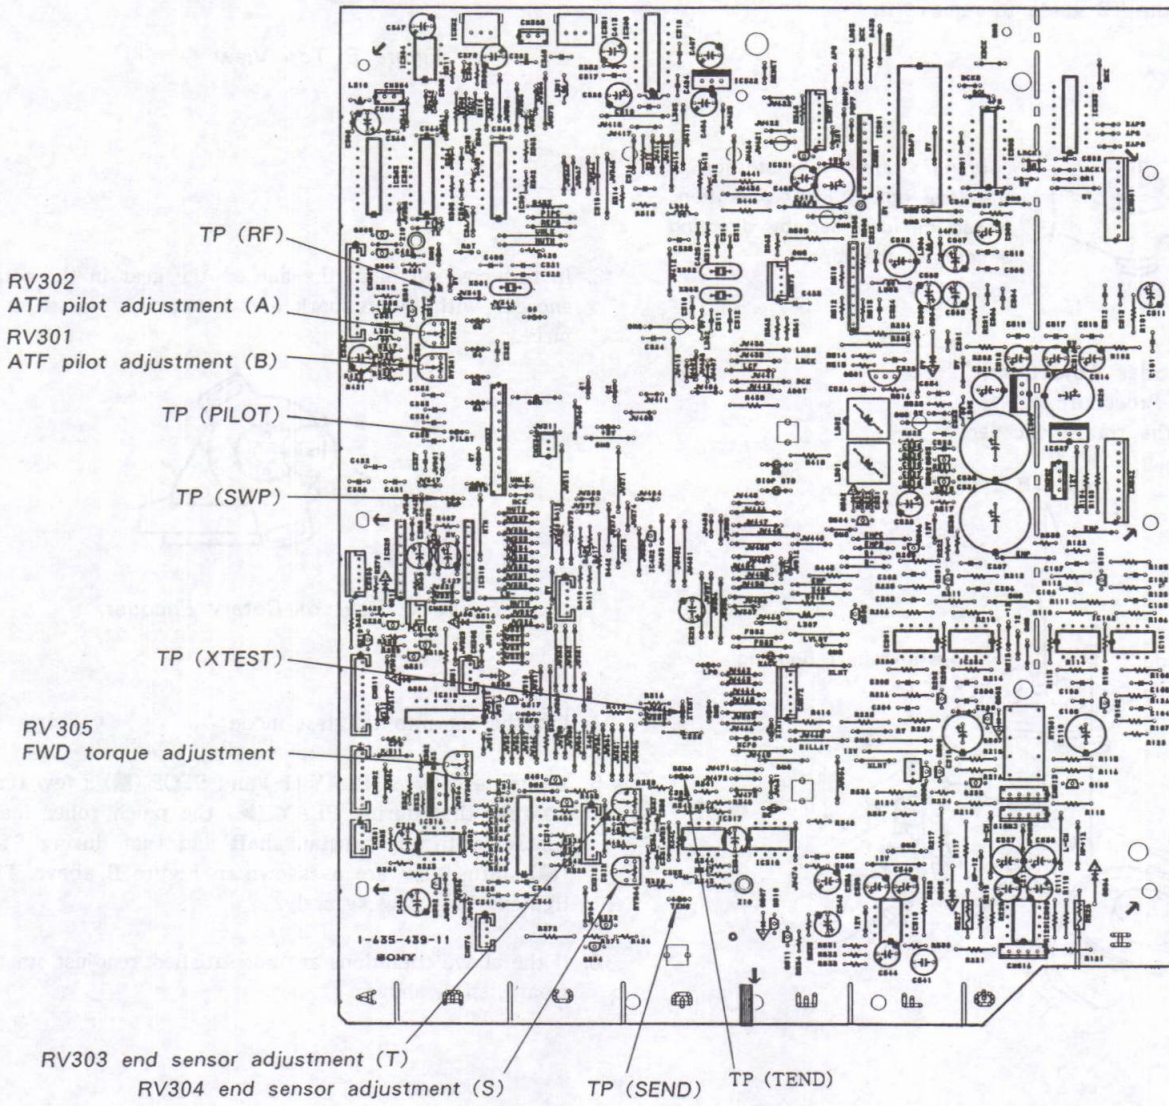

### 3-1. MECHANICAL ADJUSTMENTS


After replacing the drum or related parts, adjust the T2 and F guides and then perform the tape path ( $\times 1.5$  FWD mode) fine adjustment of electrical adjustments.

#### T2 Guide/F Guide Adjustment

##### Adjustment Procedure :

1. Put the set into the test mode and load test tape TY-7252 (8-909-822-00).
2. Set the REC MODE switch to STANDARD (ATF : OFF) and press the AMS  $\blacktriangleright\blacktriangleright$  key.
3. Check for curling at the T3 guide. Adjust as described below.
  - 3-1. If there is curling near the top of the T3 guide, adjust the F guide to remove it.
  - 3-2. If there is no curling at the T3 guide no adjustments are necessary.
  - 3-3. If there is curling near the bottom of the T3 guide, adjust the T2 guide to remove it.


\* Curling :

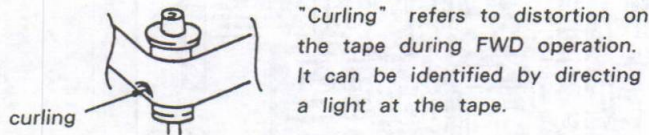

#### Rotary Encoder Adjustment

##### Adjustment Procedure :

1. Remove the rotary encoder.

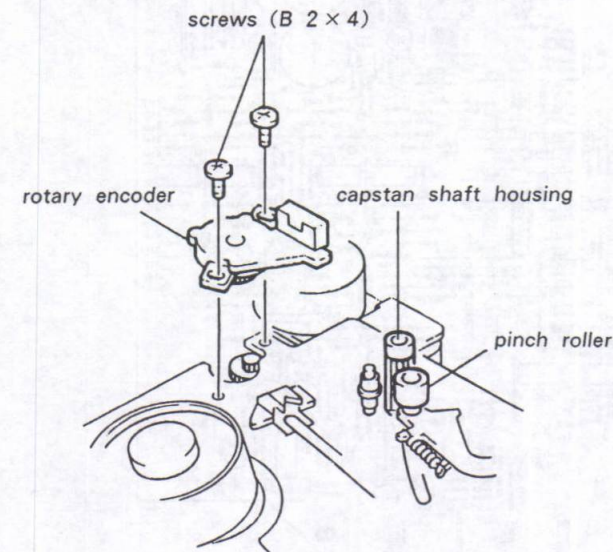

2. As shown in Figure A, turn the gear at the back of the chassis clockwise. Stop it at the point where the capstan shaft housing and pinch roller make contact as shown in Figure B.

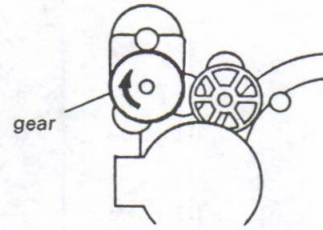


Figure A. Rear of Chassis

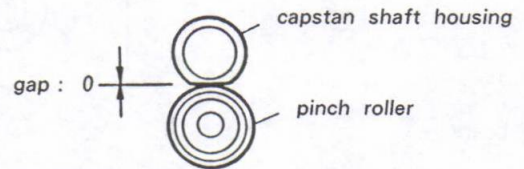


Figure B. Top View

3. In this position, align the line on the gear in the rotary encoder with the  $\Delta$  mark and temporarily fasten it in place.


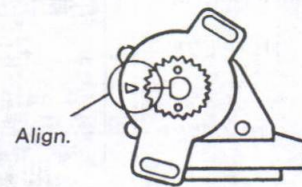


Figure C. Rear of Rotary Encoder

4. Put the set into the test mode.
5. Alternate between PLAY ( $\blacktriangleright$ ) and STOP ( $\blacksquare$ ) a few times. Confirm that during PLAY ( $\blacktriangleright$ ) the pinch roller makes contact with the capstan shaft and that during STOP ( $\blacksquare$ ) status they are as shown in Figure B above. Then tighten the screw securely.
6. If the above conditions are not satisfied, readjust starting from step 1. above.

## Loading Ring Attachment

1. Join the loading ring (R) and loading ring (L) assemblies by crossing the portion indicated in the diagram.
2. Insert the A ring rollers (2 places).
3. Mount the B ring rollers so that they match up with the loading rings by pressing on the ring roller assembly in the direction indicated by the arrow and tightening the two screws.
4. Slowly turn the loading rings and confirm that they rotate freely and do not rattle.
5. Insert the loading arms (2) into the shafts and secure them with washers.

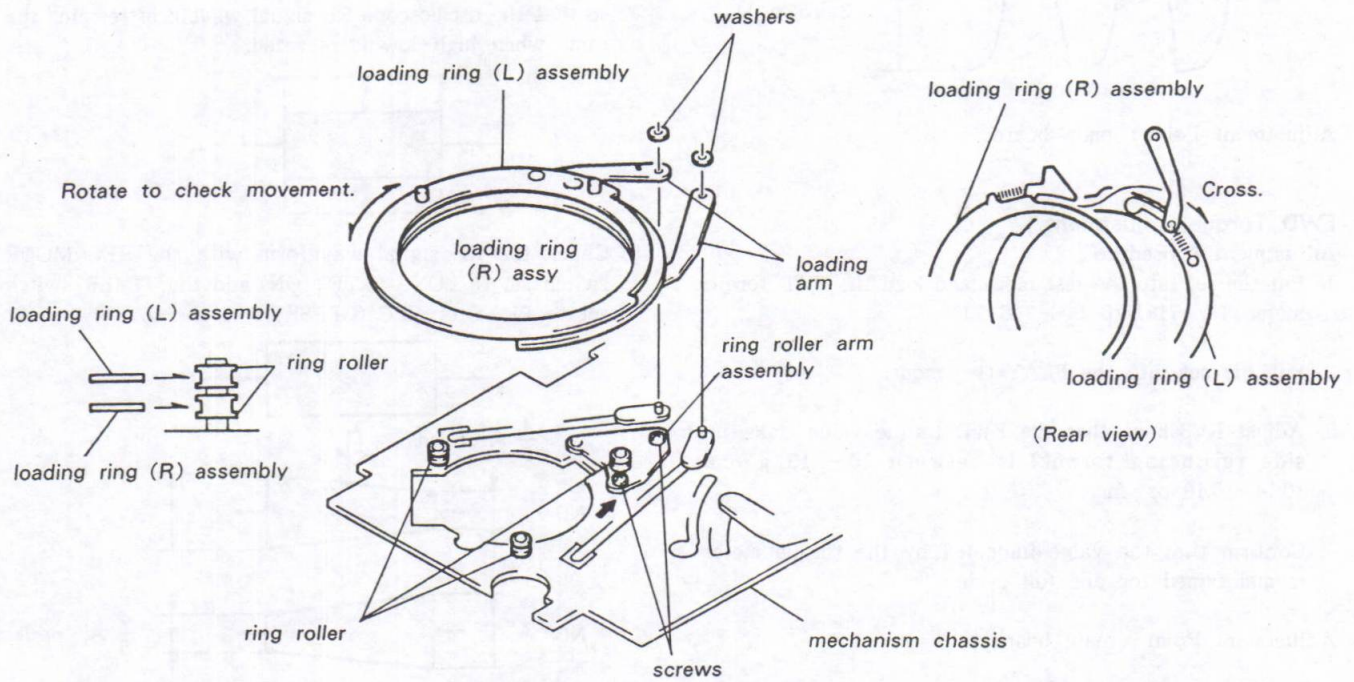


**3-2. ELECTRICAL ADJUSTMENTS**

**End Sensor Adjustment**

Perform the following adjustment when the holder has been removed or part of the mechanism deck section replaced.

**Adjustment Procedure :**

1. Connect an oscilloscope to TP (SEND) (supply side) and TP (TEND) (take-up side) on the main board.
2. Load an end sensor cassette and put the set into the STOP (■) mode.
3. Adjust RV304 (supply side) and RV303 (take-up side) on the main board so that the oscilloscope waveform p-p value is 1.2 Vp-p.

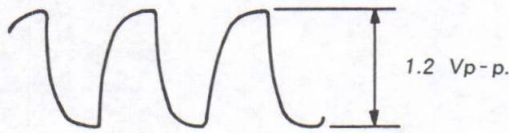

**Adjustment Point :** main board

**FWD Torque Adjustment**

**Adjustment Procedure :**

1. Put the set into the test mode and load the FWD torque meter TW-7131 (8-909-708-71).
2. Put the set into the PLAY (▶) mode.
3. Adjust RV305 so that the FWD torque value (take-up side rewinding torque) is between 10 - 13 g • cm (0.14 - 0.18 oz • inch).
4. Confirm that the value indicated by the torque meter is maintained for one full cycle.

**Adjustment Point :** main board

**FWD Back Tension Check**

**Check Procedure :**


1. Put the set into the test mode and load the FWD torque meter TW-7131 (8-909-708-71).
2. Put the set into the PLAY (▶) mode.
3. Confirm that the back tension (supply side) is between 4.5 - 6.5 g • cm (0.063 - 0.09 oz • inch).
4. Confirm that the value indicated by the torque meter is maintained for 1/2-cycle.

**Tape Path Fine Adjustment (× 1.5 FWD Mode)**


Perform the following adjustment when the drum has been replaced.

**Adjustment Procedure :**


1. Connect an oscilloscope CH-1 to TP (RF) and CH-2 to TP (SWP) on the main board.
2. Put the set into the test mode and load test tape TY-7252 (8-909-822-00).
3. Press the AMS (▶▶) key.
4. With the REC MODE switch set to STANDARD (ATF : OFF) and the TIMER switch set to PLAY or REC (OFFSET : + or -), fine adjust the S1 and T1 guides so that the oscilloscope RF signal waveform remains the same when high-low is repeated.

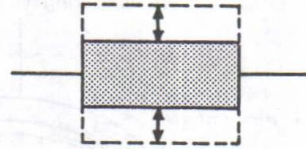

5. Check the RF signal waveform with the REC MODE switch set to LONG (ATF : ON) and the TIMER switch set to PLAY or REC (OFFSET : + or -).

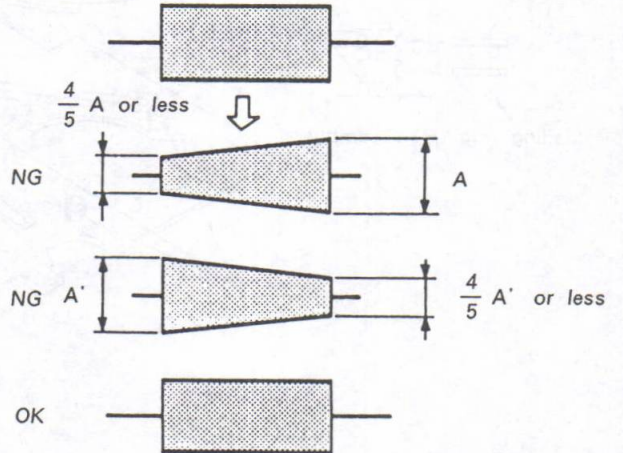

6. Check the RF signal waveform with the REC MODE switch set to LONG (ATF : ON) and the TIMER switch set to OFF (OFFSET : 0).
  - (1) Confirm that the RF signal waveform peak value is 60 mV or more.
  - (2) Confirm that the undershoot level of the RF signal waveform's flat portion is within 10%.

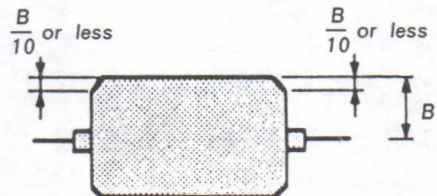



- When the measured values are not within the above tolerances, repeat items 3 - 6 above.
- In the case of the S2, T2 and F guides, check to make sure that there is no gap between the tape and the bottom flange. Also confirm that there is no curling where the tape makes contact with the bottom flange. When there are any gaps or curling, adjust according to the instructions on page 14.


**Adjustment Point :** mechanism assembly

### DPG Adjustment

Perform the following adjustment without fail when the drum has been replaced.

#### Adjustment Procedure :

- Connect oscilloscope CH-1 to TP (RF) and CH-2 to TP (SWP) on the main board.(Use CH-2 as the trigger. When the CH-2 signal is inverted, the trailing edge can be used for synchronization.)
- Put the set into the test mode and load test tape TY-7252 (8-909-822-00).
- Set the REC MODE switch to LONG (ATF : ON) and the TIMER switch to OFF (OFFSET : 0).
- Press the AMS (▶▶) key.
- Press the ◀◀ and ▶▶ keys as appropriate so that the gap between the oscilloscope SWP and RF signals becomes  $650 \pm 15 \mu\text{sec}$ .(Hold the ◀◀ and ▶▶ keys down for more than 1 second to perform rough adjustment. Hold them down for approximately 0.2 seconds for fine adjustment.)

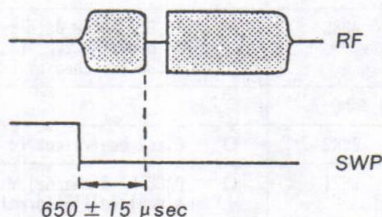


### ATF Pilot Adjustment


Perform this adjustment after cleaning the heads with a cleaning cassette.

#### Adjustment Procedure :

- Connect oscilloscope CH-1 to TP (PILOT) and CH-2 to TP (SWP) on the main board.(Use CH-2 as the trigger.)
- Put the set into the test mode and load test tape TY-7111 (8-909-812-00).
- Put the set into the PLAY (▶) mode and adjust RV301 (B-CH) and RV302 (A-CH) on the main board so that the oscilloscope PILOT waveform p-p value is  $230 \pm 23 \text{ mV}$ .

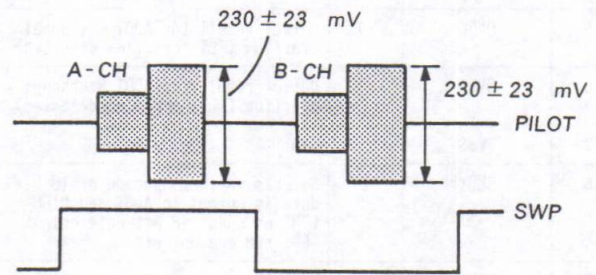

**Adjustment Point :** main board

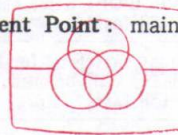

Free service manuals  
Gratis schema's

Digitized by

www.freesevicemanuals.info

## SECTION 4 DIAGRAMS

### 4-1. PIN FUNCTIONS

IC306, CXD1136Q

Pin No.	Pin Name	I/O	Description
1	DIGO	O	Serial data output synchronized with BCK (complement of 2)
2	DIGI	I	Serial data input synchronized with BCK (complement of 2)
3	ERFO	O	Signal output for discriminating whether or not DADT has interpolated data
4	UNDF	O	Detect result for ADDT L, R channel data of -54 dB or less ("L": -54 dB or less)
5	OVFL	O	Detect result for ADDT L channel overflow ("L": overflow detected)
6	OVFR	O	Detect result for ADDT R channel overflow ("L": overflow detected)
7	VSS		GND
8	SUBT	I	Selects whether subcode or 18-bit data is output to ADDT and DIGO ("H" or open: 18-bit data output, "L": subcode output)
9	LSB1	I	MSB/LSB fast switching for DADT, ADDT, DIGI, DIGO ("H" or open: MSB fast, L: LSB fast)
10	LSB2	I	MSB/LSB fast switching for DAC2, ADC2L (ADC2R) ("H" or open: MSB fast, L: LSB fast)
11	OVON	I	Overflow detect result on/off ("H" or open: OVFL, OVFR output valid, L: OVFL, OVFR fixed "H")
12	LCF	I	Low-cut filter on/off ("H" or open: on)
13	ADDA	O	"H" in AD mode (DASL = DIAN = "L")
14	DIAN	I	Sets AD and DA modes
15	DASL	I	Sets AD and DA modes
16	MUTE	I	Soft muting on/off ("H": mute on)
17	ATLV	I	Digital volume range setting ("H" or open: 0--60, <infinity> dB, "L": +12--48, <infinity> dB)
18	ATON	I	Digital volume on/off ("H" or open: off)
19	ATDN	I	Digital volume level down
20	ATUP	I	Digital volume level up
21	ATCK	I	Digital volume level setting clock and soft muting external clock
22	ATEX	I	Soft muting operation clock selection ("H" or open: internal clock, "L": ATCK)
23	VDD	—	Power supply (+5 V)
24	NC		
25	VDD'	—	Oscillator circuit power supply (+5 V)
26	SCK	O	Oscillator clock output

Pin No.	Pin Name	I/O	Description
27	NC		
28	XTL1	I	Crystal connector and clock input pin
29	NC		
30	XTLO	O	Crystal connector pin (24.576 MHz oscillation frequency possible)
31	VSS	—	Oscillator circuit GND
32	CKSL	I	Oscillator clock division selection ("H" or open: no division, "L": 1/2 division)
33	NC		
34	NC		
35	DOFF	I	DAC2 digital offset on/off ("H" or open: on)
36	APSL	I	Aperture correction filter coefficient selection (not valid in AD mode) ("H" or open: correction active)
37	LRSL	I	L, R channel phase difference correction selection ("H" or open: correction active)
38	DAC2	O	Serial data output to 2-times oversampling DA converter (complement of 2)
39	VSS	—	Power supply (+5 V)
40	BKSL	I	LRCK, BCK input timing switch ("H" or open: LRCK change point and BCK leading edge synchronized, "L": LRCK change point and BCK trailing edge synchronized)
41	INSL	I	DADT, DIGI, ADC2L (ADC2R) data incorporation clock selection ("H" or open: BCK, "L": INCK)
42	ADSL	I	ADC2L, ADC2R data selection ("H" or open: ADC2L, "L": ADC2L and ADC2R switched by LRCK2)
43	NC		
44	WCK2	O	Clock equivalent to 4fs
45	LR21	O	DAC2 L, R channel discrimination signal in 1 <sup>2</sup> S format
46	APTL	O	Aperture signal
47	APTR	O	Aperture signal
48	LRCK2	O	DAC2, ADC2L (ADC2R) L, R channel discrimination signal (equivalent to 2fs) ("L": L channel, "H": R channel)
49	XLCK2	O	LRCK2 inverted output
50	XBCK	O	BCK inverted output
51	BCK	I	Clock equivalent to 64fs for DADT, ADDT, DIGI, DIGO data incorporation

Pin No.	Pin Name	I/O	Description
5 2	INCK	I	DADT, DIGI, ADC2L (ADC2R) data incorporation clock
5 3	VDD		Power supply (+5 V)
5 4	ADC2L	I	Serial data input from 2-times oversampling AD converter (complement of 2)
5 5	ADC2R	I	Serial data input from 2-times oversampling AD converter (complement of 2)
5 6	LRCK	I	DADT, ADDT, DIGI, DIGO L, R channel discrimination signal (fs) ("L": L channel, "H": R channel)
5 7	ADDT	O	Serial data output synchronized with BCK (complement of 2)
5 8	ERFI	I	Signal input for discriminating whether or not DADT has interpolated data (complement of 2)
5 9	DADT	I	Serial data input synchronized with BCK (complement of 2)
6 0	OVCW	I	Clock input which determines detect time for OVPL, OVFR and UNDF

## IC307, CXD2601Q

Pin No.	Pin Name	I/O	Description
1	A08	I/O	RAM address A08
2	A09	I/O	RAM address A09
3	VDD	—	5V
4	A10	I/O	RAM address A10
5	A11	I/O	RAM address A11
6	A12	I/O	RAM address A12
7	A13	O	RAM address A13
8	A14	O	RAM address A14
9	XWE	O	RAM write enable signal
1 0	XOE	O	RAM output enable signal
1 1	XEAN	O	External addressing bus interrupt enable signal
1 2	TST1	I	Test pin (normally "L")
1 3	XT10	O	18.816 MHz crystal oscillator output
1 4	XT11	I	18.816 MHz crystal oscillator input
1 5	VSS	—	GND
1 6	XRST	I	Reset pin (normally "H")
1 7	CLKO	I/O	18.816 MHz clock output
1 8	XCST	I/O	SYEK (internal system clock) generation CLKO division timing signal
1 9	ATSY	I	ATF sync signal input
2 0	MCLK	O	9.408 MHz clock output
2 1	DREF	O	Drum servo reference signal
2 2	SBPM	O	Discrimination signal determining whether the subcode I/O clock (EXCK) is accepted ("L": accept, "H": ignore)
2 3	EXCK	I	Subcode I/O data transfer clock (DUTY50)
2 4	SDSI	I	Subcode serial data input
2 5	SDSO	O	Subcode serial data output
2 6	SBSY	O	Subcode I/O sync signal
2 7	COPY	O	Copy data output
2 8	EMP	O	Emphasis data output
2 9	MUTE	I	Mute pin
3 0	MUTM	O	Mute discrimination signal ("H": muted)
3 1	UNLK	O	RX PLL lock discrimination signal ("H": locked)
3 2	ERMN	O	Detects presence or absence of RF ("H": RF present, "L" during REC)
3 3	SYMN	O	C1 check result for RF ("H": OK)
3 4	CHER	I	Signal for discriminating whether C2 is 1 or 2 times (C2 → C1 → C2 or C1 → C2) ("H": 1 time, "L": 2 times)

Pin No.	Pin Name	I/O	Description
3 5	PLCK	I/O	RF PLL clock output
3 6	TST2	I	Test pin (normally "L")
3 7	RFDT	I	RF signal input
3 8	XCS	I	Subcode I/O chip select ("L": select)
3 9	SWP	O	RF switching pulse ("L": A-CH, "H": B-CH)
4 0	VSS	-	GND
4 1	PIPC	O	REC data PILOT/PCM discrimination signal ("H": PILOT, during playback: always "L")
4 2	REPB	O	Record/playback switching signal ("H": record)
4 3	REDT	O	Recording signal output, fixed "L" during playback
4 4	TST4	I	Test pin (normally "L")
4 5	TST3	O	RX APLL PD output (comparator output)
4 6	TST5	I	RX APLL oscillator cell amp input
4 7	TST6	O	RX APLL oscillator cell amp inverted output
4 8	PLCO	I	RX APLL external VCO clock input
4 9	PLVR	O	RX APLL comparison signal when external comparator is active (Vin)
5 0	PLVF	O	RX APLL comparison signal when external comparator is active (Rin)
5 1	MSSL	I	Master/slave setting ("H": master, "L": slave)
5 2	RX	I	Digital input
5 3	VDD	-	5V
5 4	TX	O	Digital output
5 5	AUDR	I	Audio mode/data recorder mode setting ("H": audio mode, "L": data recorder mode)
5 6	EXSY	I/O	Complete copy sync signal (25/3 - 100/3 Hz)
5 7	EXSN	I/O	Complete copy sync signal (25/3 - 100/3 Hz)
5 8	F128	I/O	128fsCK (normal)/256fsCK (x2) (DUTY50)
5 9	F256	O	256fsCK (normal)/512fsCK (x2) (DUTY50)
6 0	F512	O	512fsCK (normal)/512fsCK (x2) (DUTY50)
6 1	ADLF	O	Signal for discriminating whether ADDT serial data is MSB fast or LSB fast ("H": LSB fast)
6 2	DALF	O	Signal for discriminating whether DADT serial data is MSB fast or LSB fast ("H": LSB fast)
6 3	XT20	O	22.5792 MHz crystal oscillator output
6 4	XT21	I	22.5792 MHz crystal oscillator input

Pin No.	Pin Name	I/O	Description
6 5	VSS	-	GND
6 6	XT30	O	49.152 MHz crystal oscillator output (24.576 MHz in B mode)
6 7	XT31	I	49.152 MHz crystal oscillator input (24.576 MHz in B mode)
6 8	FSEN	I	F128, BCK, LRCK input/output switch ("H": output)
6 9	LR03	O	LR02 inversion
7 0	LR02	O	LRCK 16BCK delay signal
7 1	LR01	O	LRCK 15BCK delay signal
7 2	LRCK	I/O	fs (normal)/2fs (x2) ("L": L-CH, "H": R-CH)
7 3	WCK	I/O	2fs (normal)/4fs (x2) (input mode only for testing)
7 4	XBCK	O	BCK inversion
7 5	BCK	I/O	64fs (normal)/128fs (x2)
7 6	ADDT	I	Serial AD data (complement of 2)
7 7	DADT	O	Serial DA data (complement of 2)
7 8	DADO	I	Digital output (DA) data (normally connected to DADT)
7 9	ADDI	O	Digital input (AD) data output (normally connected to ADDN)
8 0	ADDN	I	Digital input (DA) data input
8 1	ERRI	I	Digital output V-FLA data input (normally connected to ERRF)
8 2	ERRF	O	Signal output for discriminating whether or not DADT has interpolated data ("H": interpolated data)
8 3	MNTG	O	Error correction status monitor trigger
8 4	D7	I/O	RAM data bus D7
8 5	D6	I/O	RAM data bus D6
8 6	D5	I/O	RAM data bus D5
8 7	D4	I/O	RAM data bus D4
8 8	D3	I/O	RAM data bus D3
8 9	D2	I/O	RAM data bus D2
9 0	VSS	-	GND
9 1	D1	I/O	RAM data bus D1
9 2	D0	I/O	RAM data bus D0
9 3	A00	I/O	RAM address A00
9 4	A01	I/O	RAM address A01
9 5	A02	I/O	RAM address A02
9 6	A03	I/O	RAM address A03
9 7	A04	I/O	RAM address A04
9 8	A05	I/O	RAM address A05
9 9	A06	I/O	RAM address A06
1 0 0	A07	I/O	RAM address A07

## IC311, CXA1046M


Pin No.	Pin Name	I/O	Description
1	RF IN	I	RF signal input
2	F CTL	I	External resistor connector pin for determining pilot filter (LPF) characteristics
3	B VOL	I	Gain control amp B-CH gain adjustment resistor and bypass capacitor connector pin
4	A VOL	I	Gain control amp A-CH gain adjustment resistor and bypass capacitor connector pin
5	PILOT OUT	O	Pilot signal output
6	ENV DET IN	I	Envelope detect signal
7	ENV HOLD	I	Envelope detect hold capacitor connector pin
8	S/H 3 OUT	O	Sample-hold 3 output pin
9	SWP	I	Processing signal A-CH, B-CH switching control pin ("H": B-CH, "L": A-CH)
10	ATF ON/OFF	I	ATF block (portions other than RF detect) on/off ("L": on)
11	NORM PLAY	I	Determines whether the mode is normal or not ("L": normal mode)
12	ATS1	I	Sample-hold 1 sample pulse input pin
13	TE	O	Tracking error output pin
14	VCC	—	Power supply pin
15	HOLD3C	I	Sample-hold 3 hold capacitor connector pin
16	HOLD2C	I	Sample-hold 2 hold capacitor connector pin
17	ATS2	I	Sample-hold 2 sample pulse input pin
18	ATS3	I	Sample-hold 3 sample pulse input pin
19	SYNC OUT	O	ATF sync output
20	GND	—	GND
21	LIM PC	I	Limitter block bypass capacitor connector pin (-) input (can be exchanged with pin 22)
22	LIM IN	I	Limitter block bypass capacitor connector pin (+) input (can be exchanged with pin 21)
23	EQ OUT	O	ATF sync equalizer output pin
24	PCTL	I	Resistor connector pin for determining sync equalizer phase characteristics
25	LCTL	I	Resistor connector pin for determining sync equalizer low frequency characteristics
26	DET C1	I	Smoothing capacitor connector pin for determining RF detector threshold level
27	DET C2	I	RF envelope wave waveform adjustment capacitor connector pin
28	RF DET OUT	O	RF detector output pin

Pin No.	Pin Name	I/O	Description
1	NC		
2	NC		
3	L PLN ON	O	Loading plunger on
4	REEL CCW	O	Reel motor counterclockwise (loading plunger kick)
5	REEL CW	O	Reel motor clockwise (loading plunger kick)
6	CAP DIR RVS	O	Capstan direction ("L": normal, "H": reverse, brake)
7	PLN ON	O	Plunger on
8	PLN KICK	O	Plunger kick
9	DRUM ON	O	Drum on
10	DRUM DIR RVS	O	Drum direction ("L": normal, "H": reverse, brake)
11	COA/XOPT	O	Coaxial ("H")/optical ("L") switch
12	DIG/XANA	O	Fade in/out digital ("H")/analog ("L") switch
13	REC/XPB	O	Fade in/out record ("H")/playback ("L") switch
14	ATCK	O	Fade in/out clock
15	NC		
16	NC		
17	LE	O	Loading motor eject
18	LL	O	Loading motor load
19	D/A MUTB	O	D/A converter muting
20	L MUTB	O	Line muting
21	TR MUTB	O	Transistor muting
22	X DISP SL	O	Display controller select ("L": active)
23	NC		
24	LIM SW	I	Limit switch (eject position detect)
25	RE FWD	I	Rotary encoder FWD
26	RE STOP	I	Rotary encoder STOP
27	CAS M IN	O	Cassette compartment motor IN
28	CAS M OUT	O	Cassette compartment motor OUT
29	T LED ON	O	End sensor T ON (DUTY 50)
30	S LED ON	O	End sensor S ON (DUTY 50)
31	MP	I	Microprocessor mode ("L" for this model)
32	X RST	I	System reset (active low)
33	V <sub>SS</sub>	—	GND
34	XTAL	O	System clock output
35	EXTAL	I	System clock input
36	DISP SYNC	I	
37	DISP DT I	I	Serial data input from display controller


Pin No.	Pin Name	I/O	Description
3 8	DISP DT 0	O	Serial data output to display controller
3 9	DISP CK	I	Serial data clock from display controller
4 0	SB SYNC	I	
4 1	SB DT I	I	Subcode signal input
4 2	SB DT O	O	Subcode signal output
4 3	X SB CK	O	Subcode interface serial clock
4 4	AV <sub>SS</sub>	—	A/D GND
4 5	AV <sub>REF</sub>	—	A/D reference voltage
4 6	AV <sub>DD</sub>	—	A/D power supply
4 7	T END	I	Take-up side end sensor input
4 8	S END	I	Supply side end sensor input
4 9	CAS IN	I	Cassette in detect
5 0	REC EN	I	Erase prevention slider detect
5 1	CAS LCKed	I	Cassette compartment lock detect
5 2	CAS OUTed	I	Cassette compartment out detect
5 3	LVL SYNC	I	Level sync input
5 4	ATF IN	I	ATF pilot input
5 5	FG T	I	Take-up side reel FG signal input
5 6	FG S	I	Supply side reel FG signal input
5 7	C FG	I	Capstan FG signal input
5 8	D FG	I	Drum FG signal input
5 9	D PG	I	Drum PG signal input
6 0	D REF	I	Drum reference signal input
6 1	MST CK	I	Hardware master clock (max. 9.408 MHz)
6 2	PB DT	I	ATF sync signal playback data
6 3	SWP	O	Switching pulse
6 4	D PWM	O	Drum PWM output
6 5	C PWM	O	Capstan PWM output
6 6	PWM R	O	Reel PWM output
6 7	NC		
6 8	AGC PWM	O	AGC PWM output
6 9	ER MON	I	Error monitor
7 0	X TEST	I	Test mode
7 1	POW DN	I	
7 2	V <sub>DD</sub>	—	
7 3	V <sub>SS</sub>	—	
7 4	NC		Power down detect
7 5	ATF S2	O	ATF sampling pulse #2
7 6	ATT EXT	O	External attenuator clock
7 7	ATF S3	O	ATF sampling pulse #3

Pin No.	Pin Name	I/O	Description
7 8	MUTE2	O	CXD1136Q mute
7 9	MUTE1	O	CXD2601Q mute
8 0	X DTR	O	Audio ("H")/data recorder ("L")




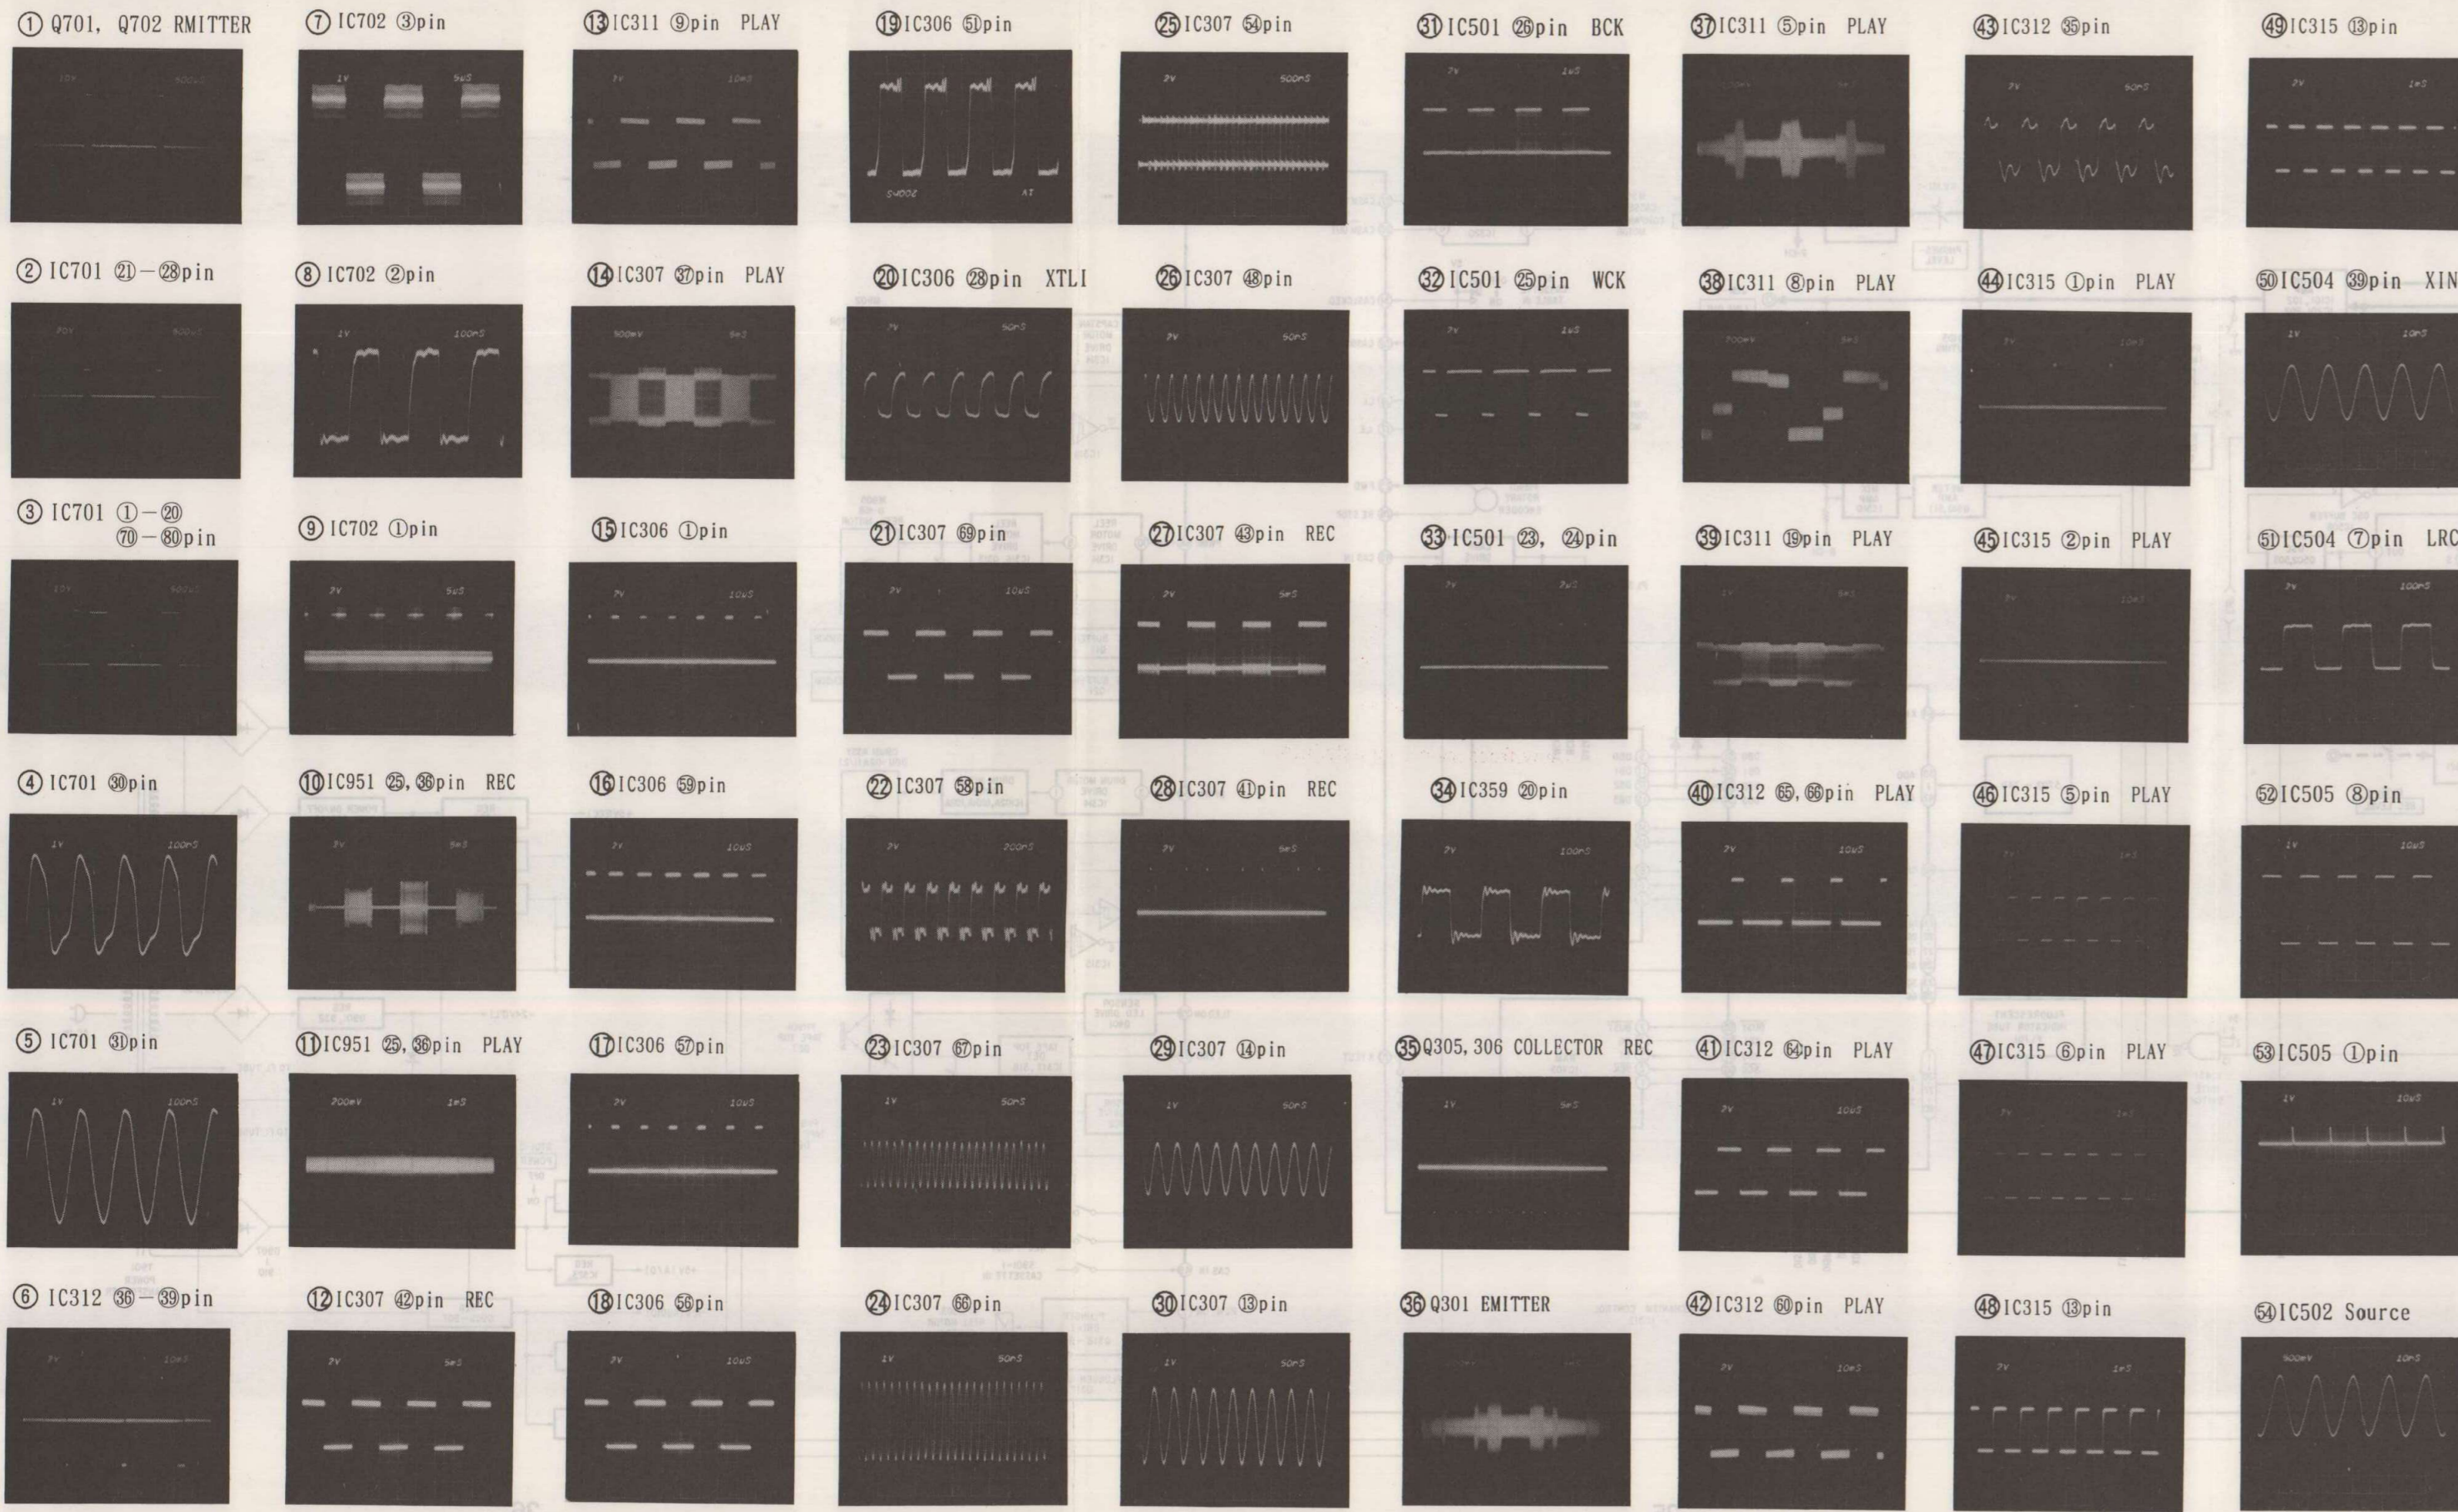


### 4-4. SEMICONDUCTOR LEAD LAYOUT

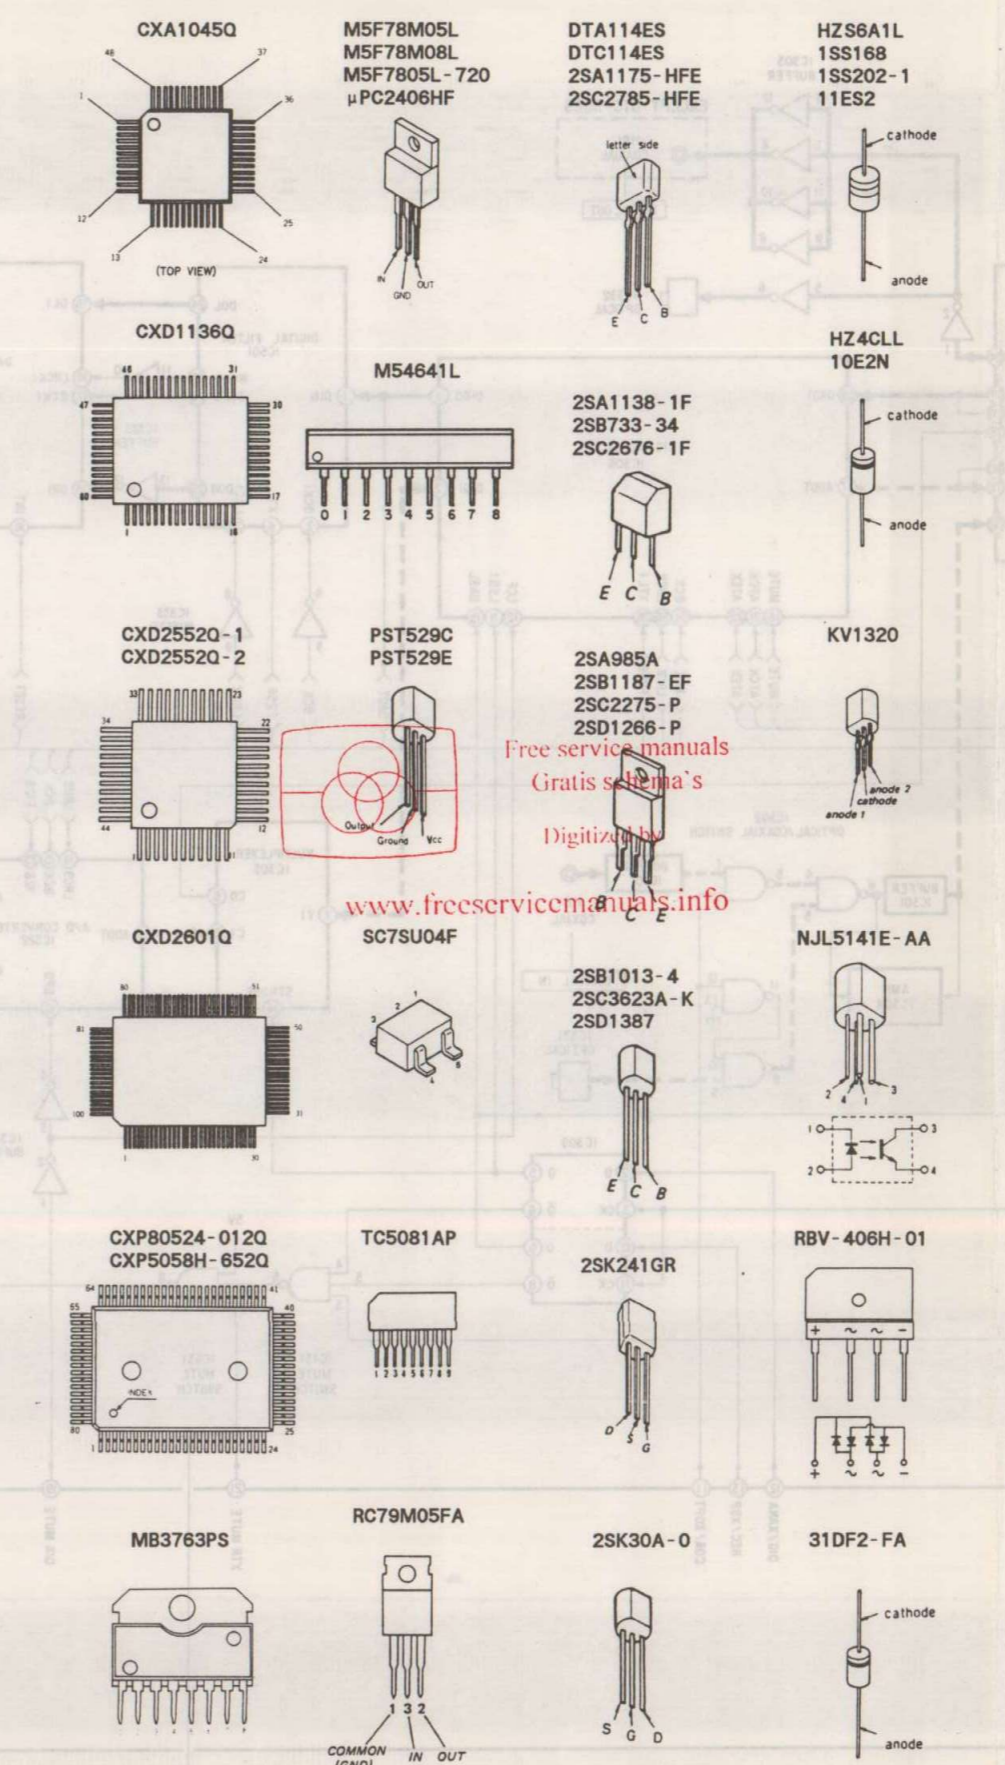

### 4-5. CIRCUIT BOARDS LOCATION

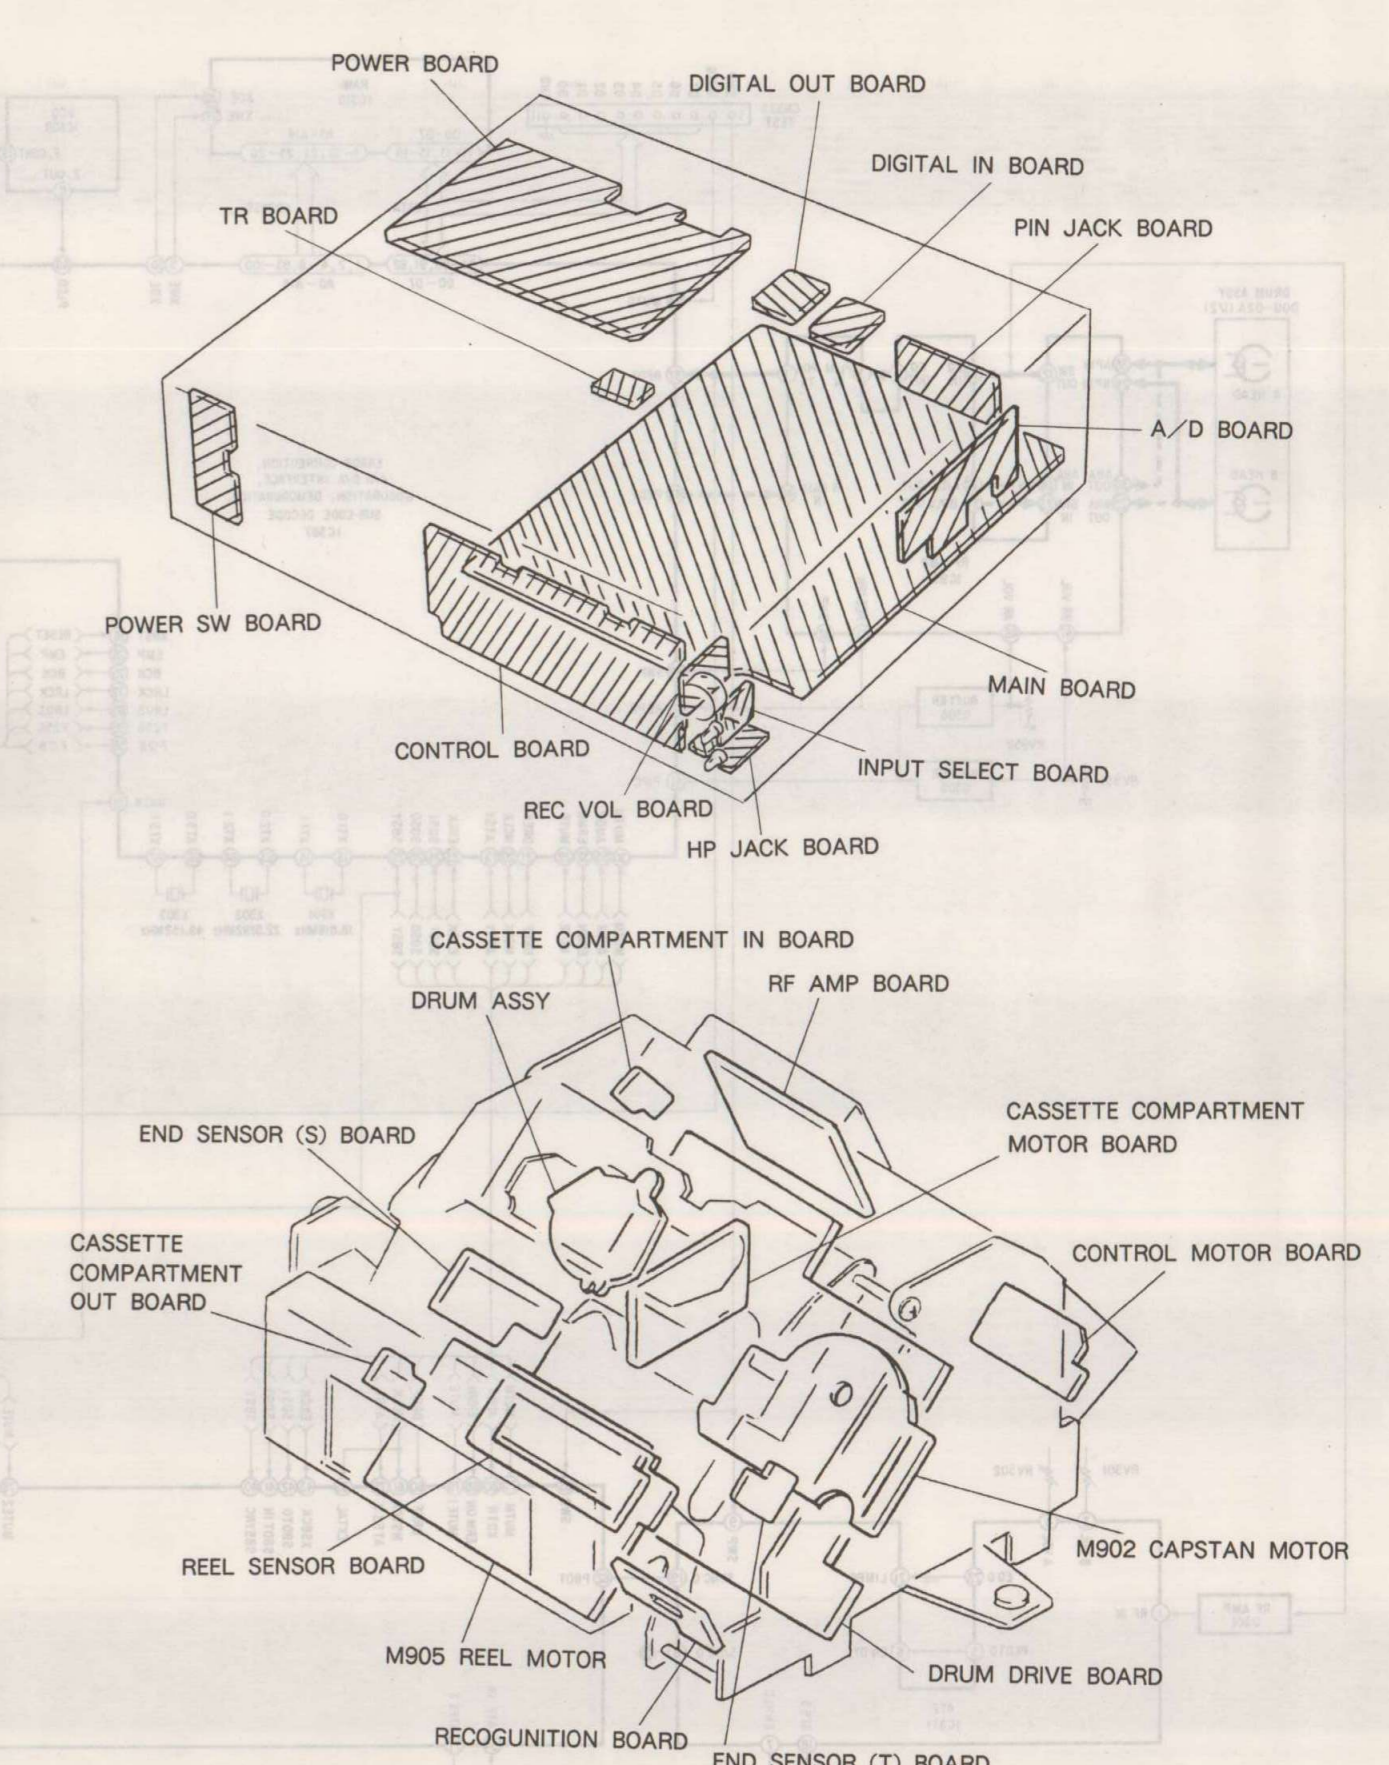



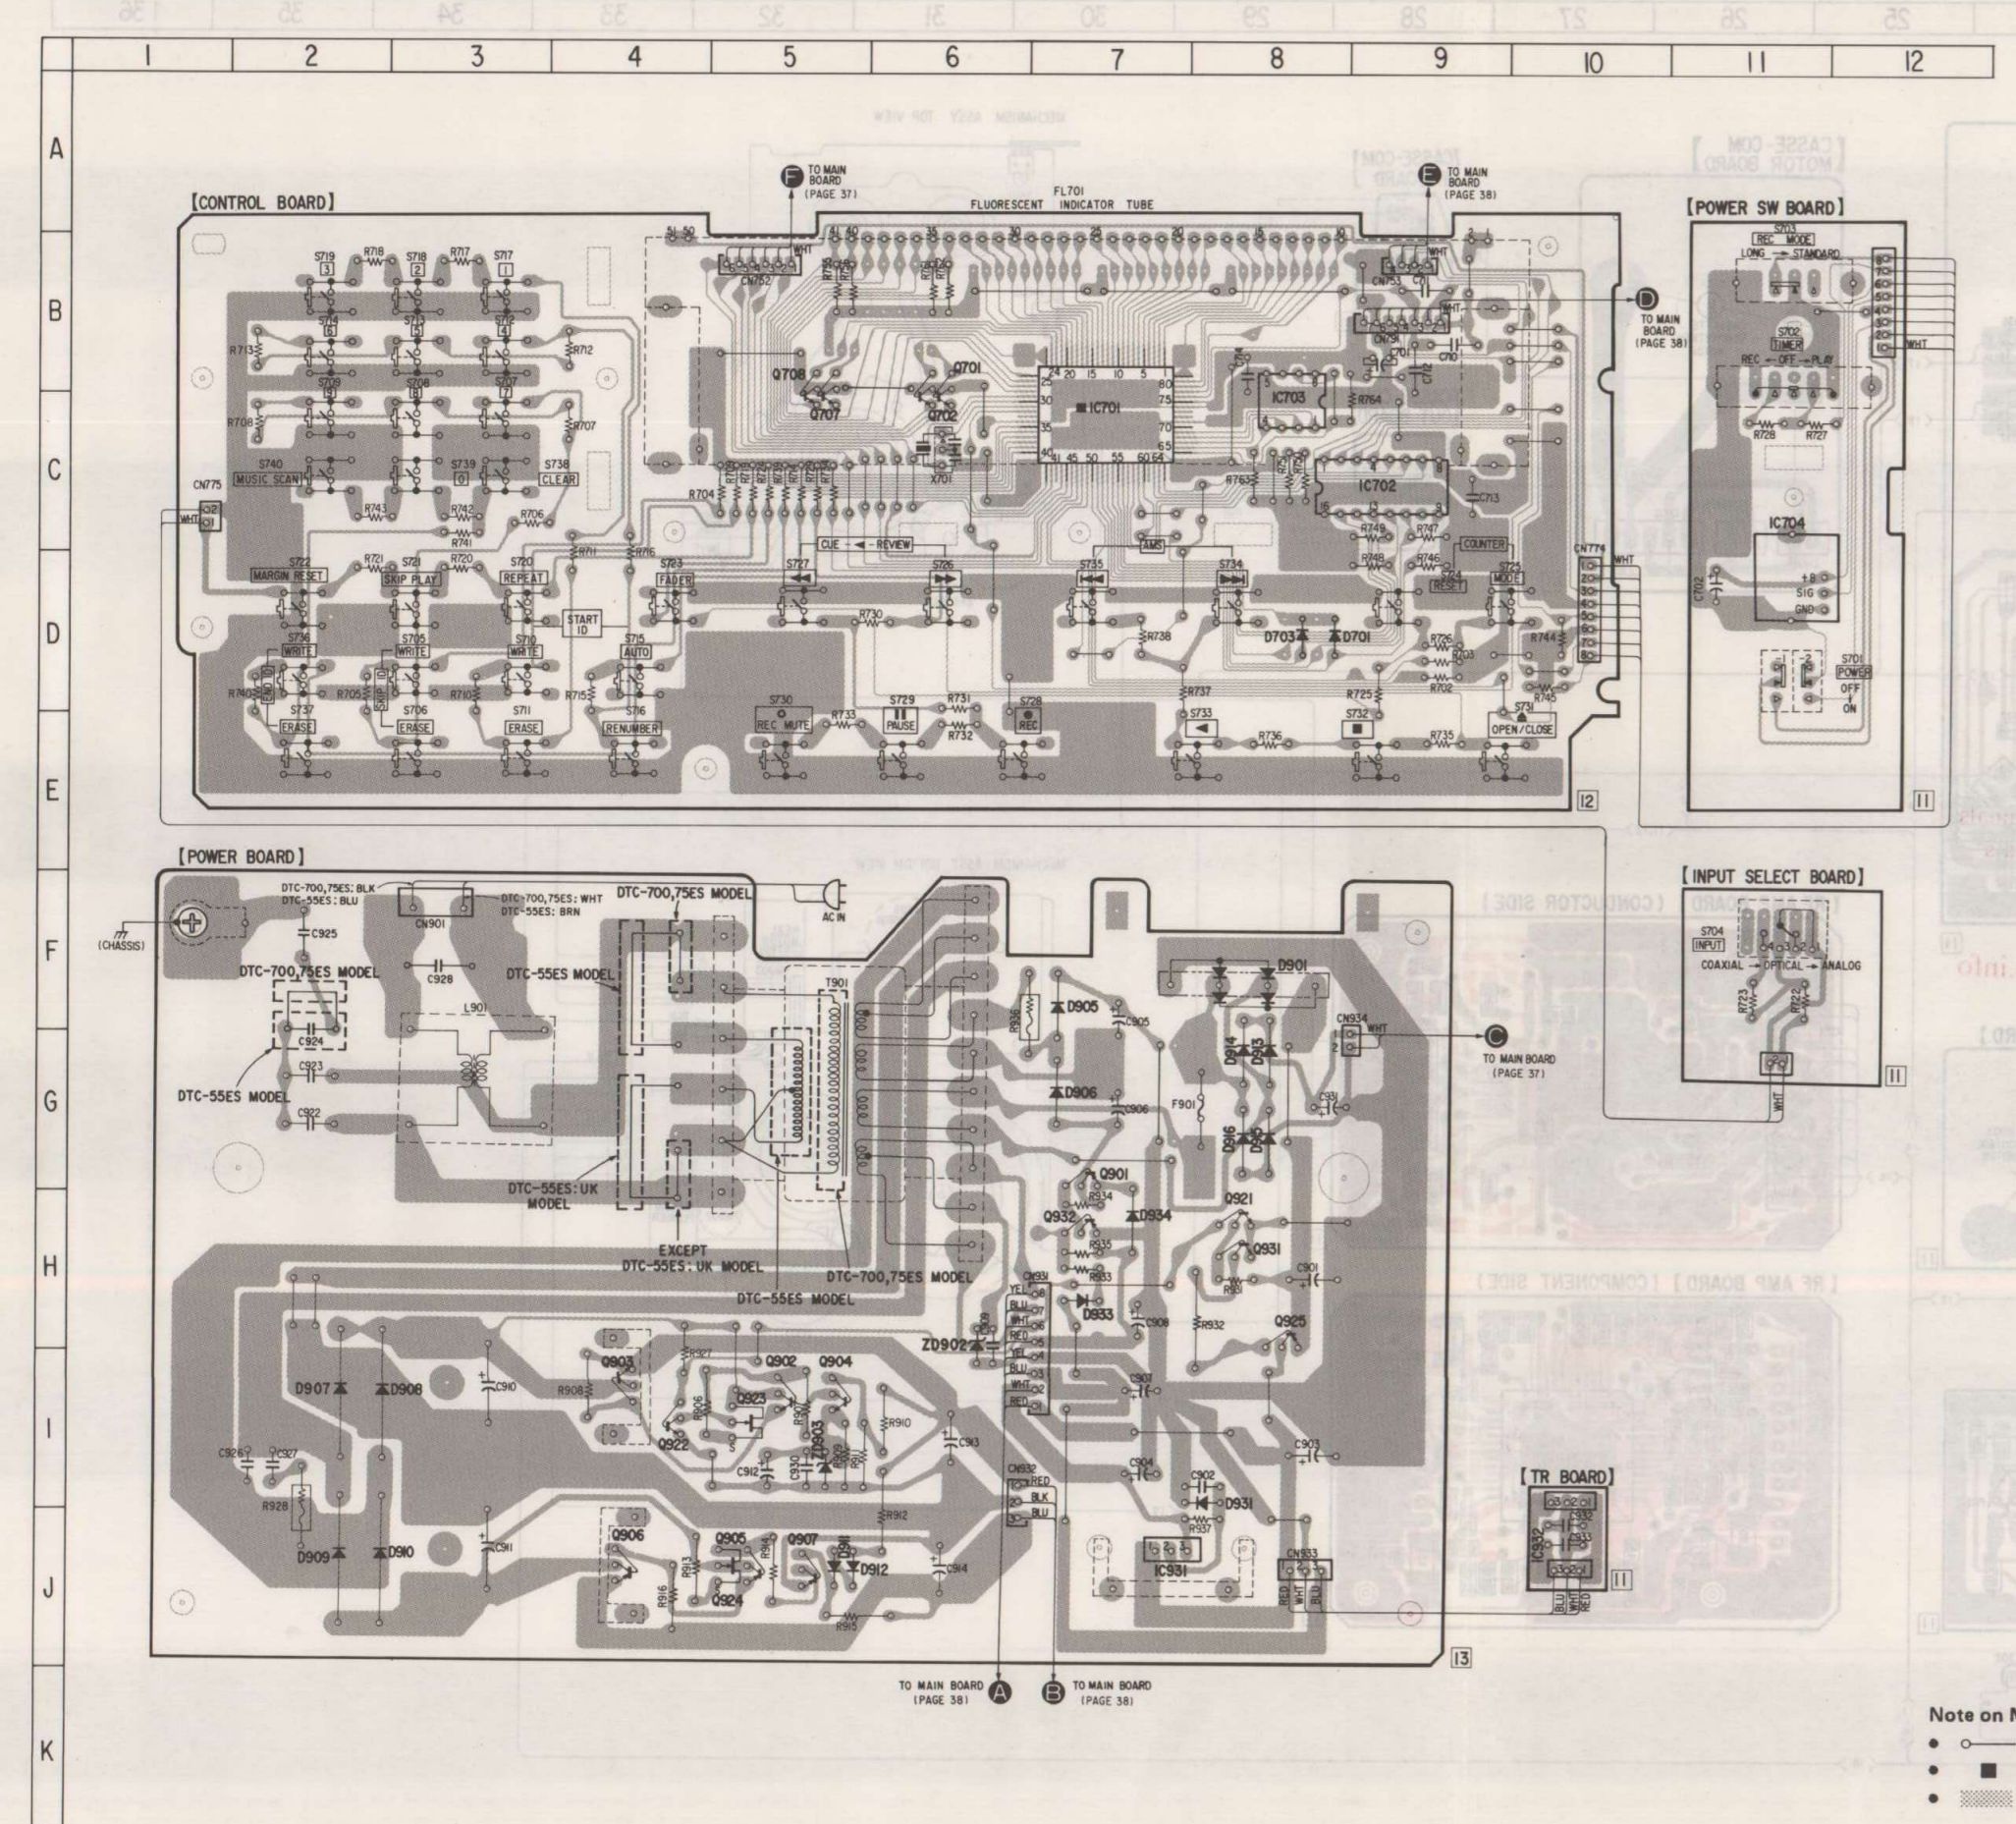



• Semiconductor Location

Ref. No.	Location
D701	D-9
D703	D-8
D901	F-8
D905	F-7
D906	G-7
D907	I-2
D908	I-3
D909	J-2
D911	J-5
D912	J-6
D913	G-8
D914	G-8
D915	G-8
D916	G-8
D931	I-8
D933	H-7
D934	H-7
IC701	C-7
IC702	C-9
IC703	C-8
IC704	C-11
IC931	J-7
IC932	J-10
Q701	B-6
Q702	C-6
Q707	C-5
Q708	B-5
Q901	G-7
Q902	I-5
Q903	I-4
Q904	I-5
Q905	J-5
Q906	J-4
Q907	H-8
Q921	H-8
Q922	I-4
Q923	I-5
Q924	J-5
Q925	H-8
Q931	H-8
Q932	H-7
ZD902	H-6
ZD903	I-5

**Note on Mounting Diagram:**

- : parts extracted from the component side.
- : parts mounted on the conductor side.
- ▨ : Pattern on the side which is seen.

4-7. SCHEMATIC DIAGRAM - POWER SUPPLY/DISPLAY SECTION -

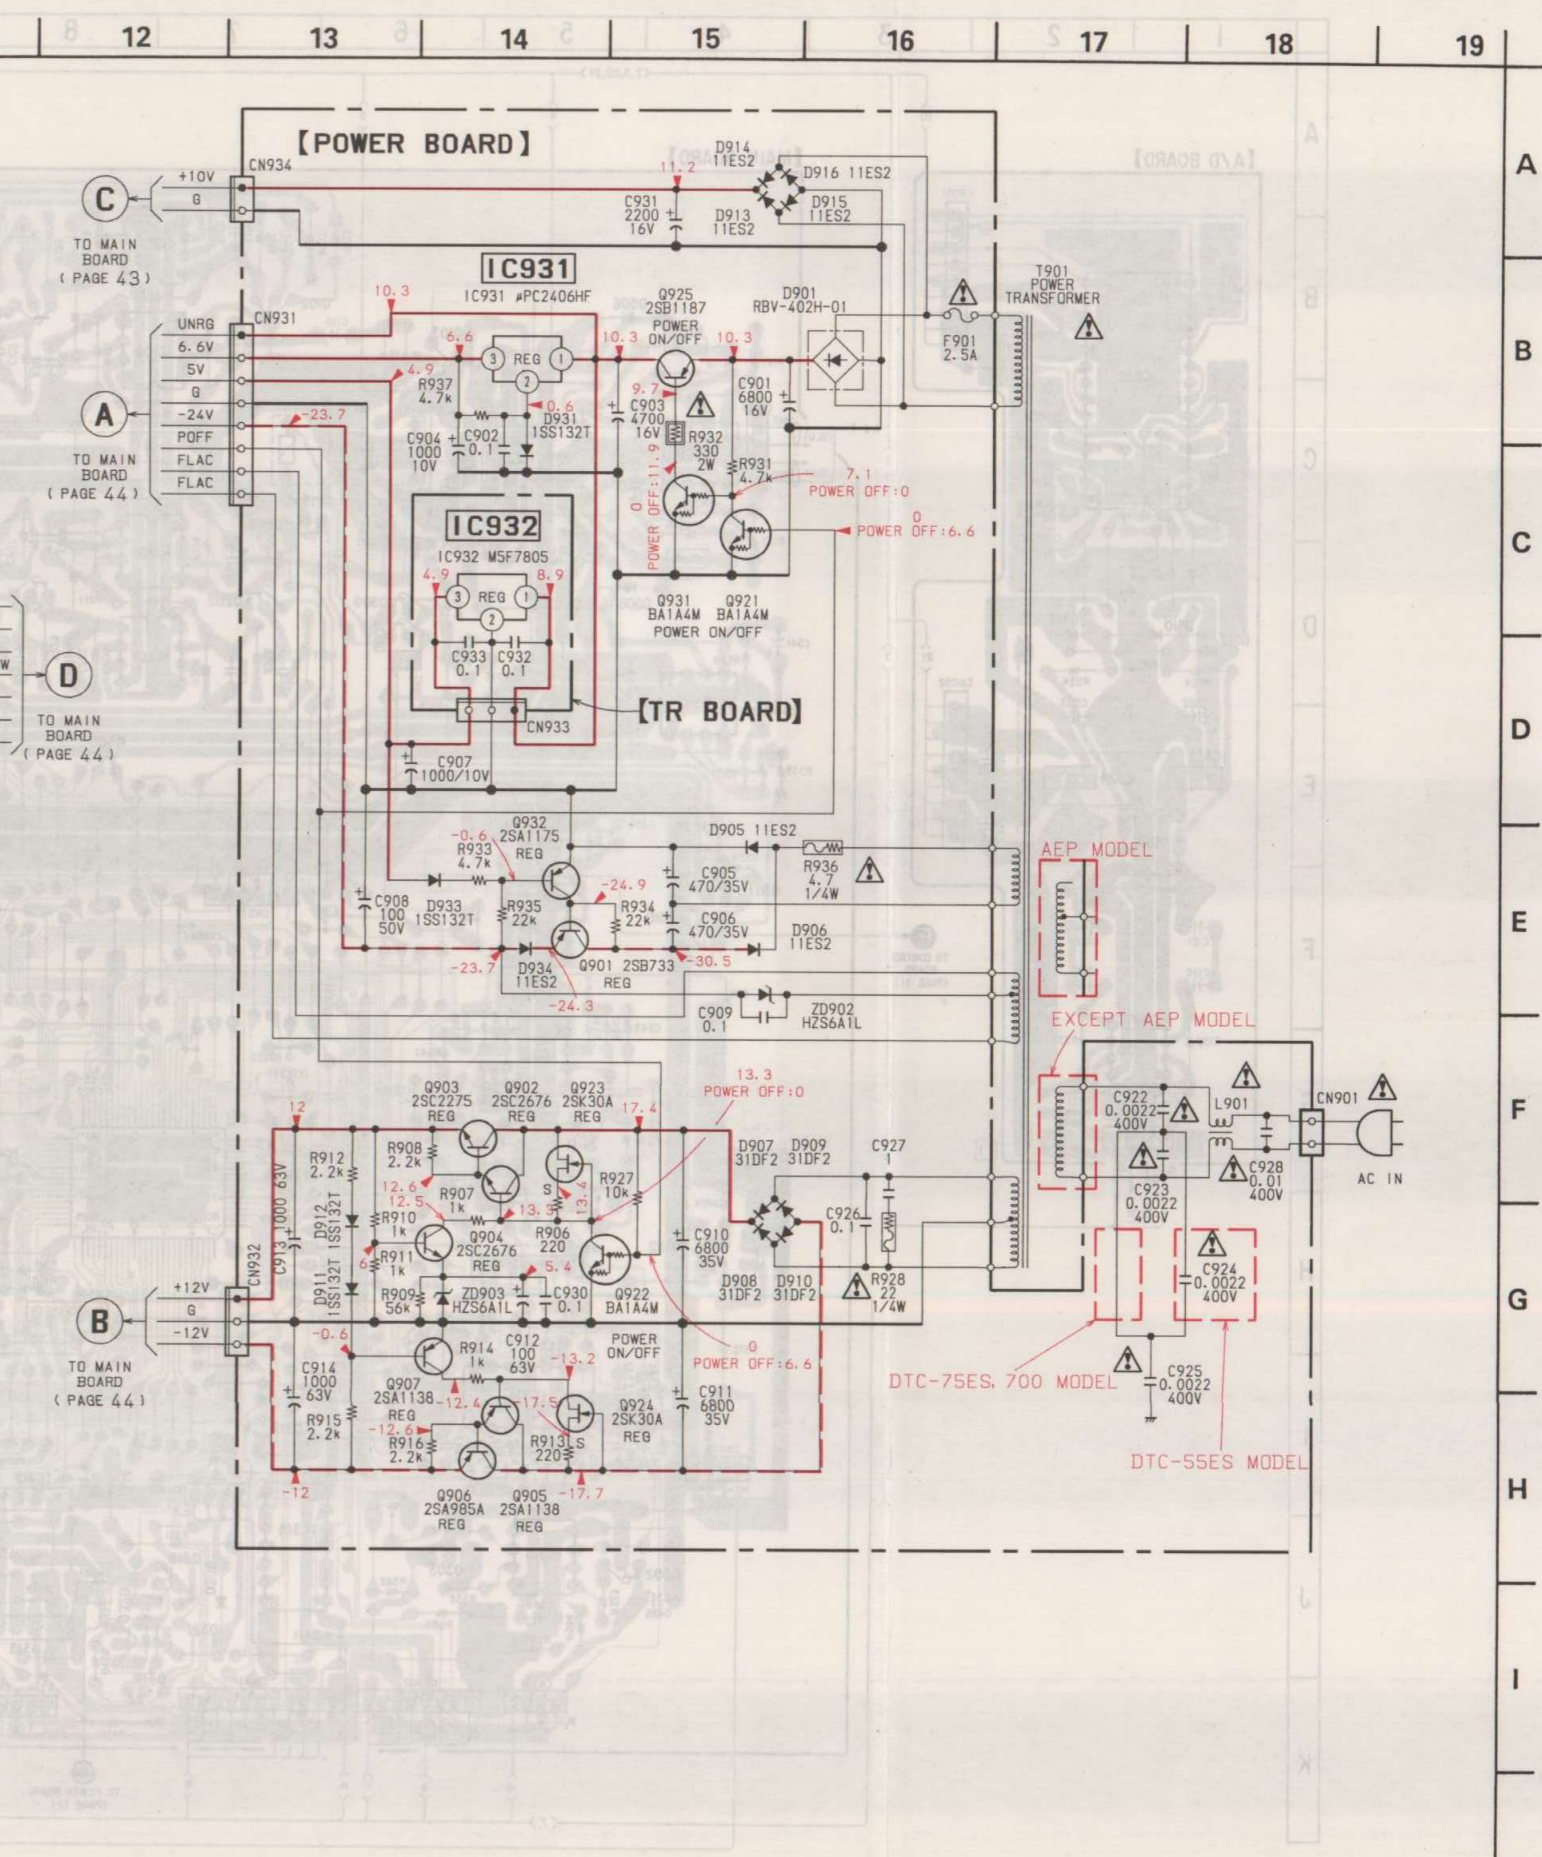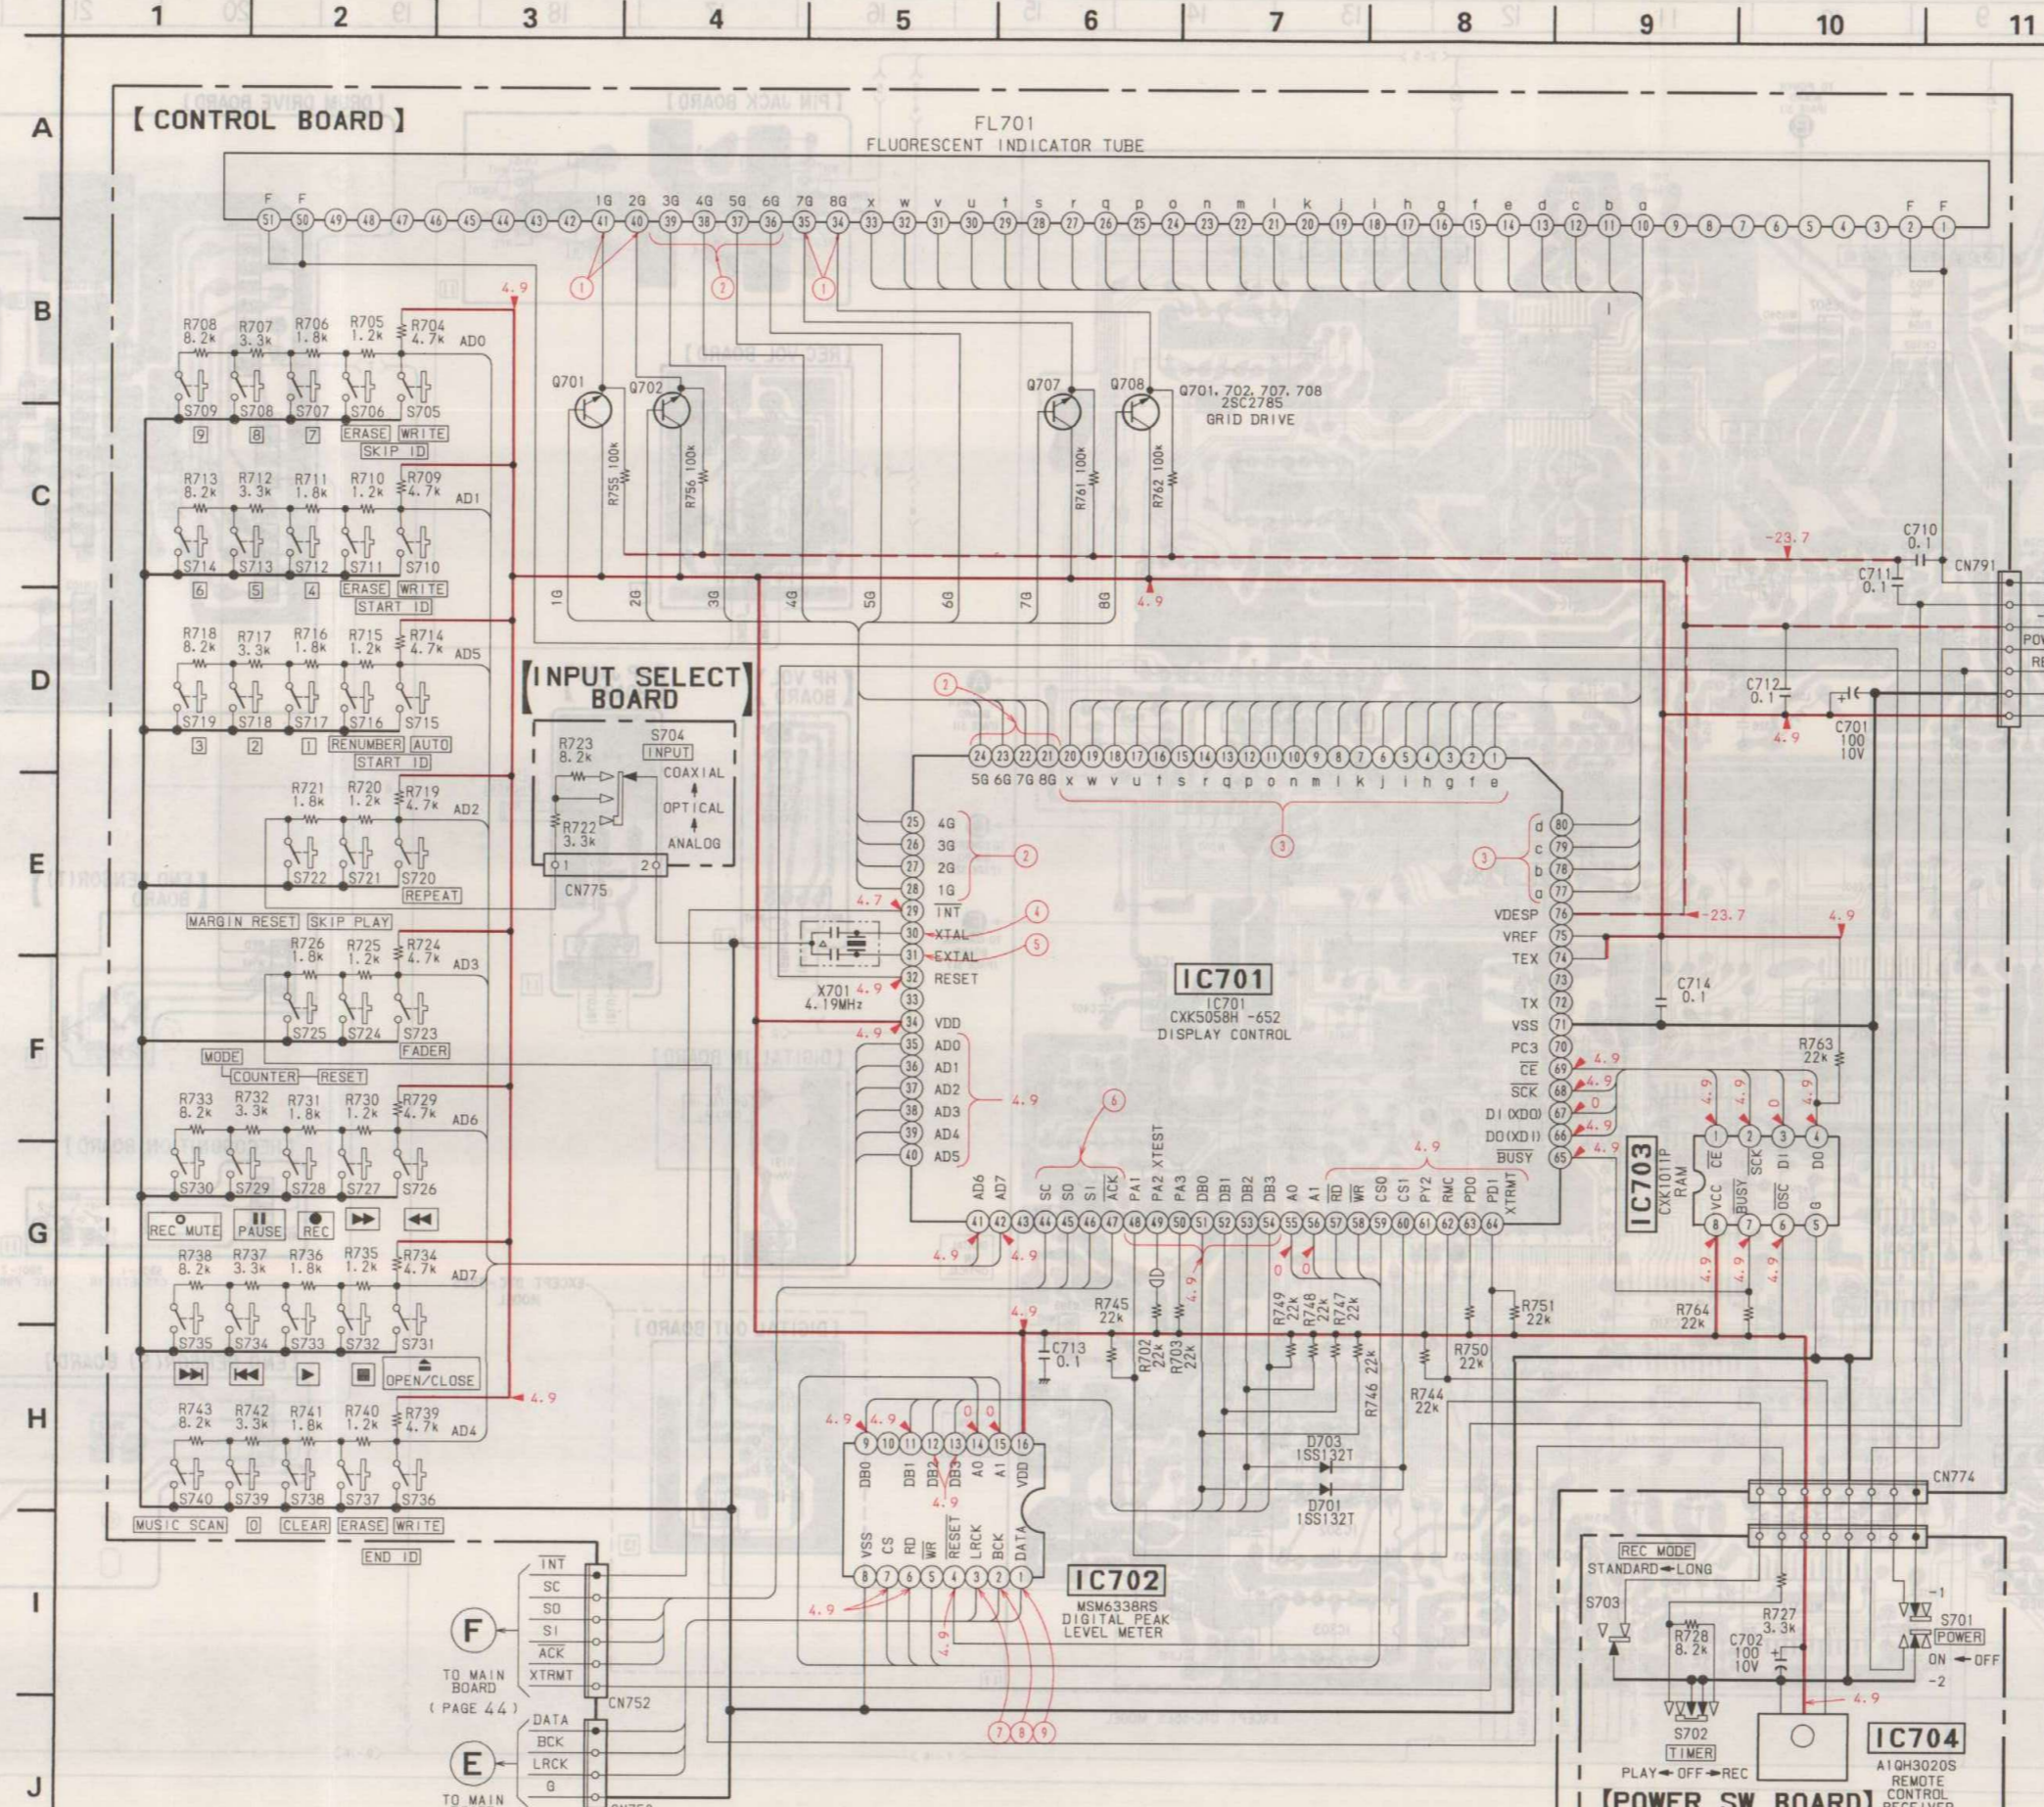

**Note on Schematic Diagram:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted,  $\text{pF}$ :  $\mu\text{F}$  50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}\text{W}$  or less unless otherwise specified.
- $\Delta$  : internal component.
- $\square$  : nonflammable resistor.
- $\text{---}$  : fusible resistor.


**Note:** The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

**Note:** Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- — : B+ Line
- - - - : B- Line
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
- no mark : STOP
- Voltages are taken with a VOM (Input impedance 10M  $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D305	I-7	IC505	E-12
D306	J-7	IC506	D-11
D313	J-8	IC507	B-10
D314	I-8	IC508	C-10
D320	G-12	IC509	C-4
D501	D-11	IC510	E-4
D502	E-9	IC520	G-1
D503	C-7	IC521	E-1
D504	D-11	IC522	B-1
D505	D-5	IC523	E-1
D506	B-5	IC524	E-2
D507	D-4	IC951	I-27
D510	D-2	PH11	J-23
D511	D-1	PH21	J-24
D512	D-1	PH22	G-21
D513	D-1	PH901	J-22
IC11	J-23	Q11	I-23
IC101A	C-22	Q21	J-23
IC101	B-7	Q21A	B-23
IC102A	B-22	Q101	B-8
IC102	B-7	Q101A	C-23
IC201	D-8	Q102	B-7
IC202	D-8	Q102A	B-6
IC301	I-13	Q103	D-8
IC302	J-13	Q201	D-7
IC303	K-13	Q202	C-6
IC304	H-15	Q203	J-12
IC305	H-11	Q301	J-4
IC306	G-10	Q302	J-6
IC307	H-12	Q303	H-4
IC308	G-15	Q304	K-12
IC309	H-10	Q305	J-12
IC310	I-11	Q306	I-7
IC311	J-10	Q317	J-7
IC312	G-8	Q318	K-8
IC314	I-5	Q319	J-8
IC315	J-7	Q320	J-7
IC316	J-5	Q321	H-4
IC317	G-5	Q322	I-6
IC318	F-5	Q401	D-9
IC319	I-8	Q402	D-10
IC320	J-9	Q502	E-9
IC321	F-13	Q503	E-8
IC322	F-14	Q504	D-9
IC331	H-15	Q505	C-7
IC332	I-15	Q506	D-6
IC333	B-10	Q507	D-6
IC431	H-14	Q508	F-4
IC432	G-8	Q509	F-4
IC501	D-14	Q510	F-4
IC503	C-13	Q511	F-4
IC504	C-12		

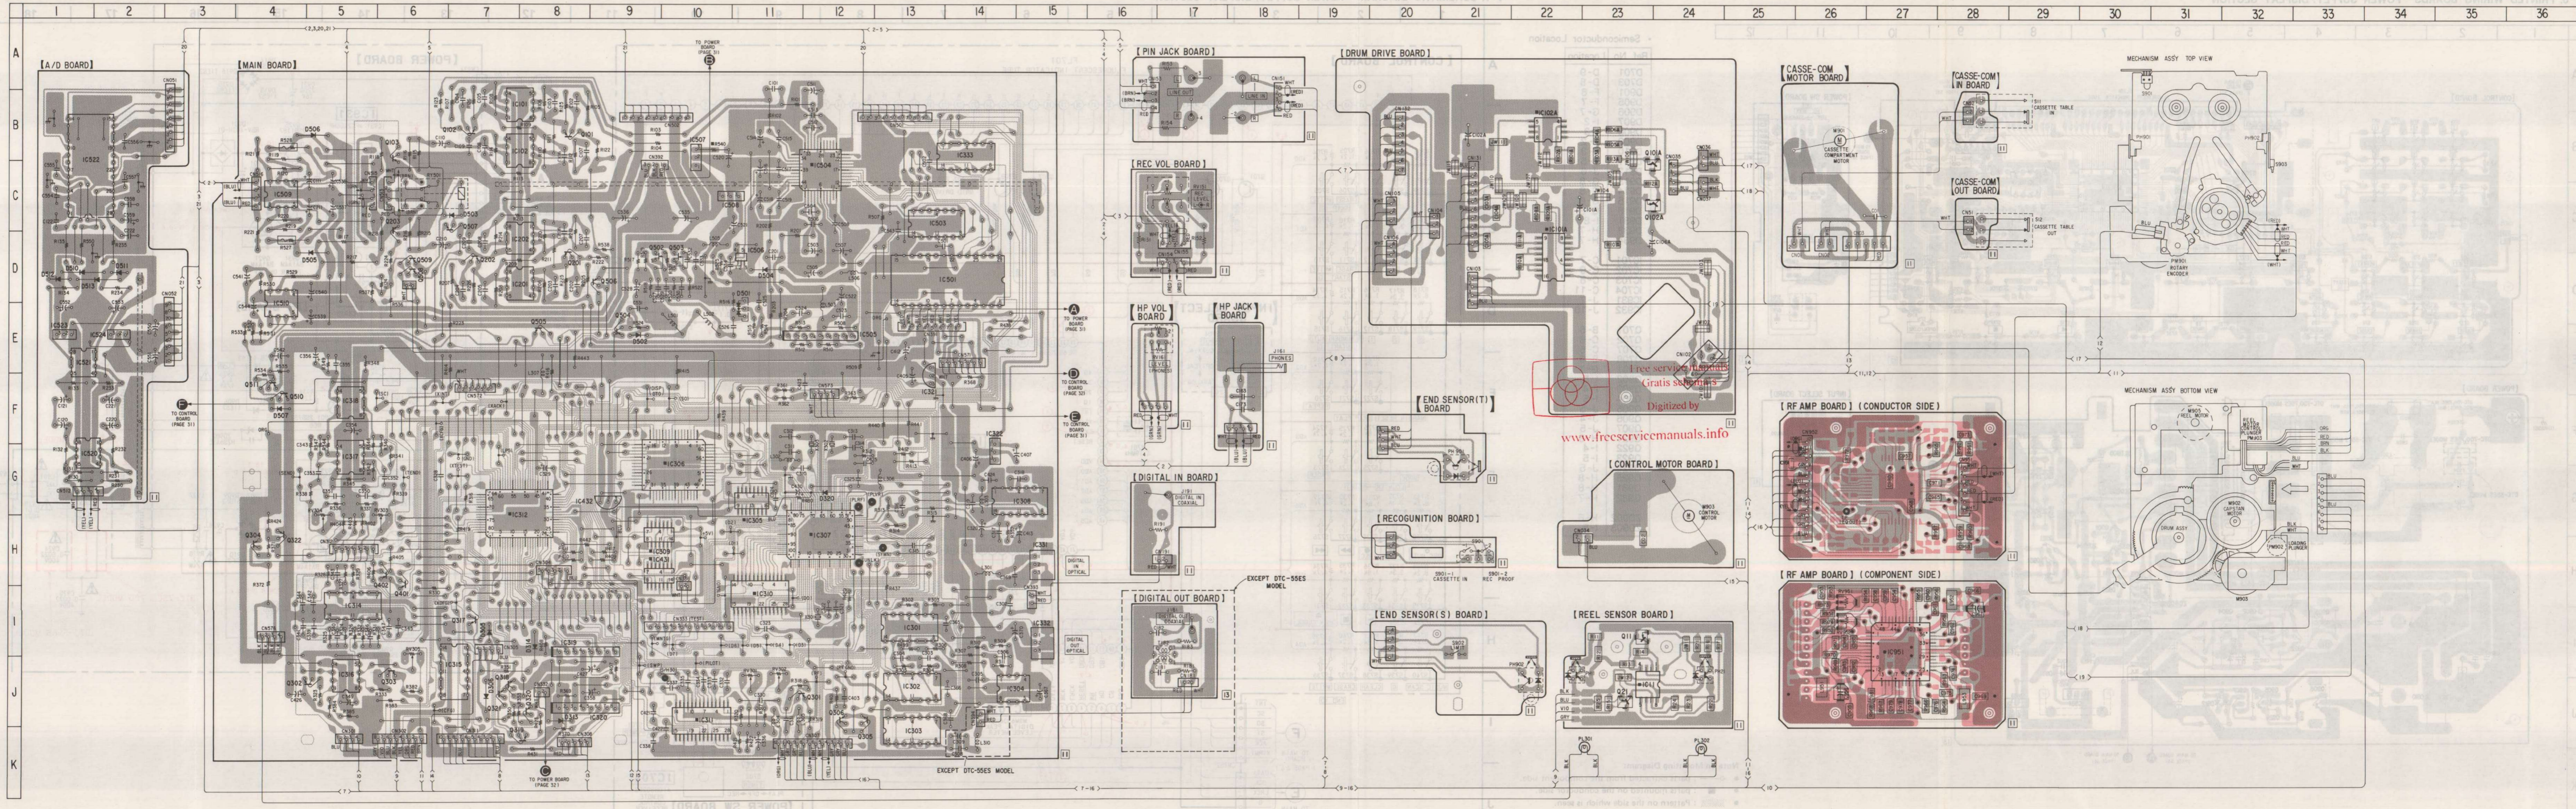





Note on Mounting Diagram:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : parts mounted on the conductor side.
- : Through hole.
- : Jumper wire connected to the ground pattern on the component side.
- : Pattern on the side which is seen.
- : Pattern of the rear side.

Free service manuals  
Gratis schematics  
Digitized by  
www.freeservicemanuals.info



4-10. IC BLOCK DIAGRAM

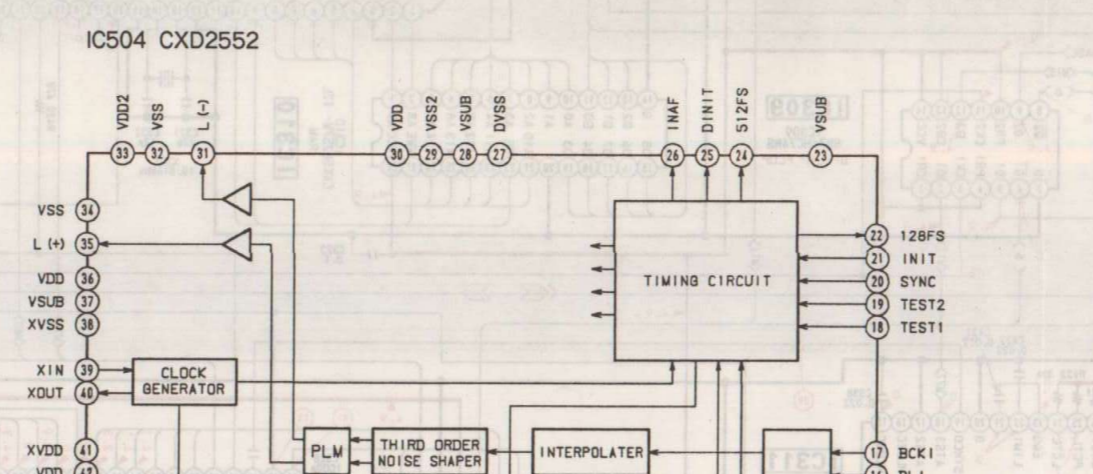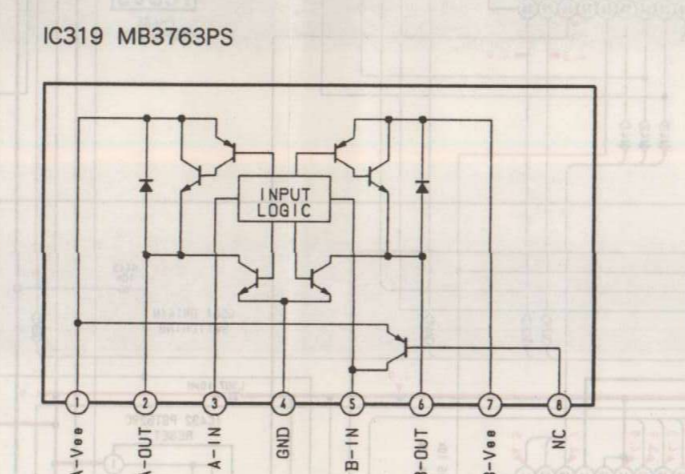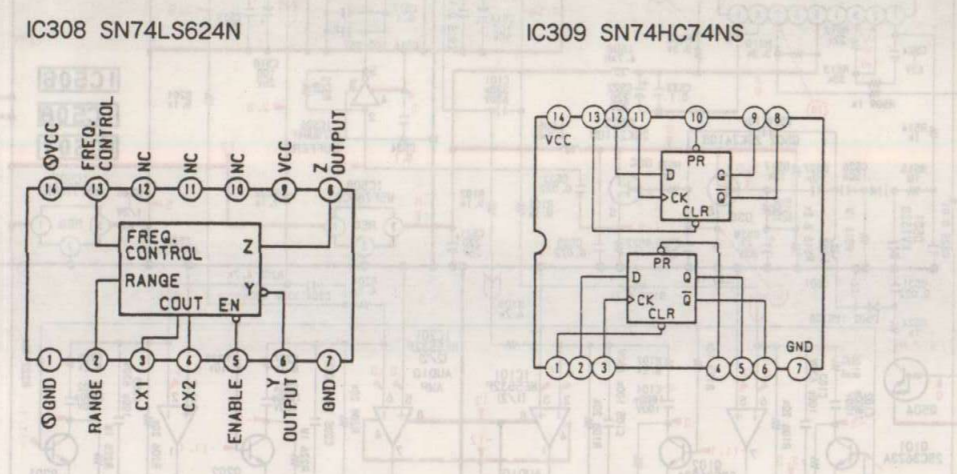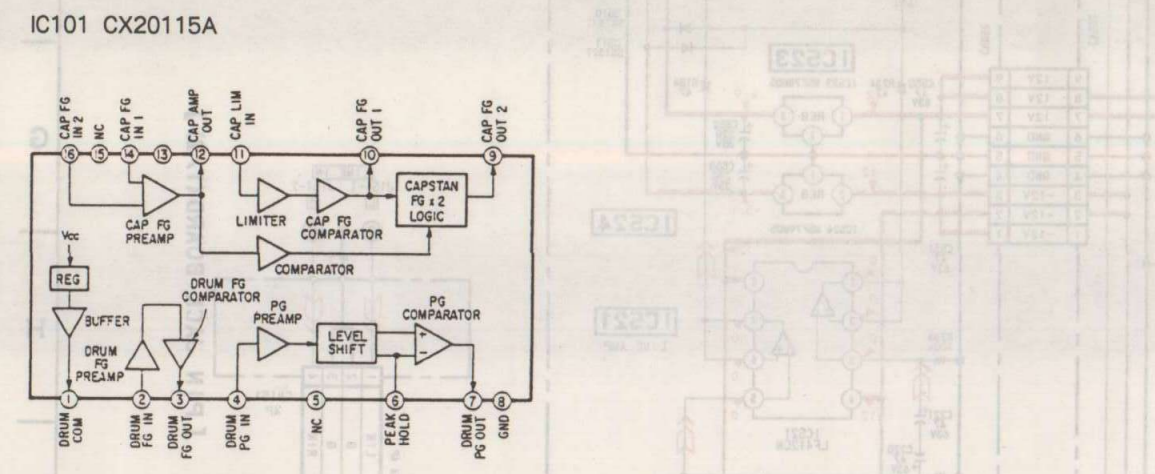

NOTE: The mechanical parts with no reference number in the exploded views are not supplied. The construction parts of an assembled part are indicated with a collation number in the remark column. Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

5-1. CABINET SECTION

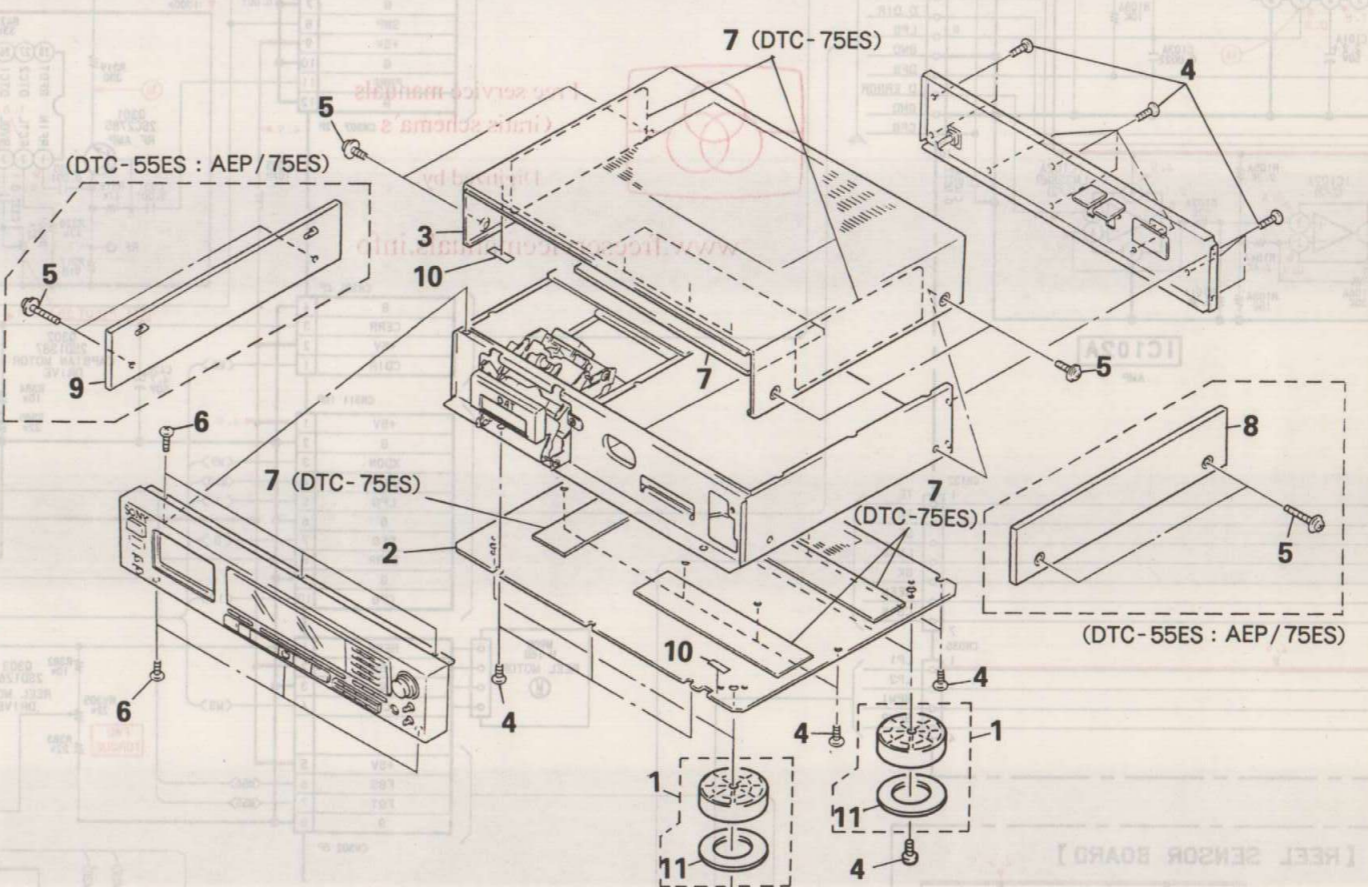


Table with 4 columns: No., Part No., Description, Remarks. Lists parts like FOOT ASSY, PLATE, CASE, SCREW, and SCREW +BVT1 3X8.

SECTION 5

EXPLODED VIEWS

5-2. FRONT PANEL SECTION










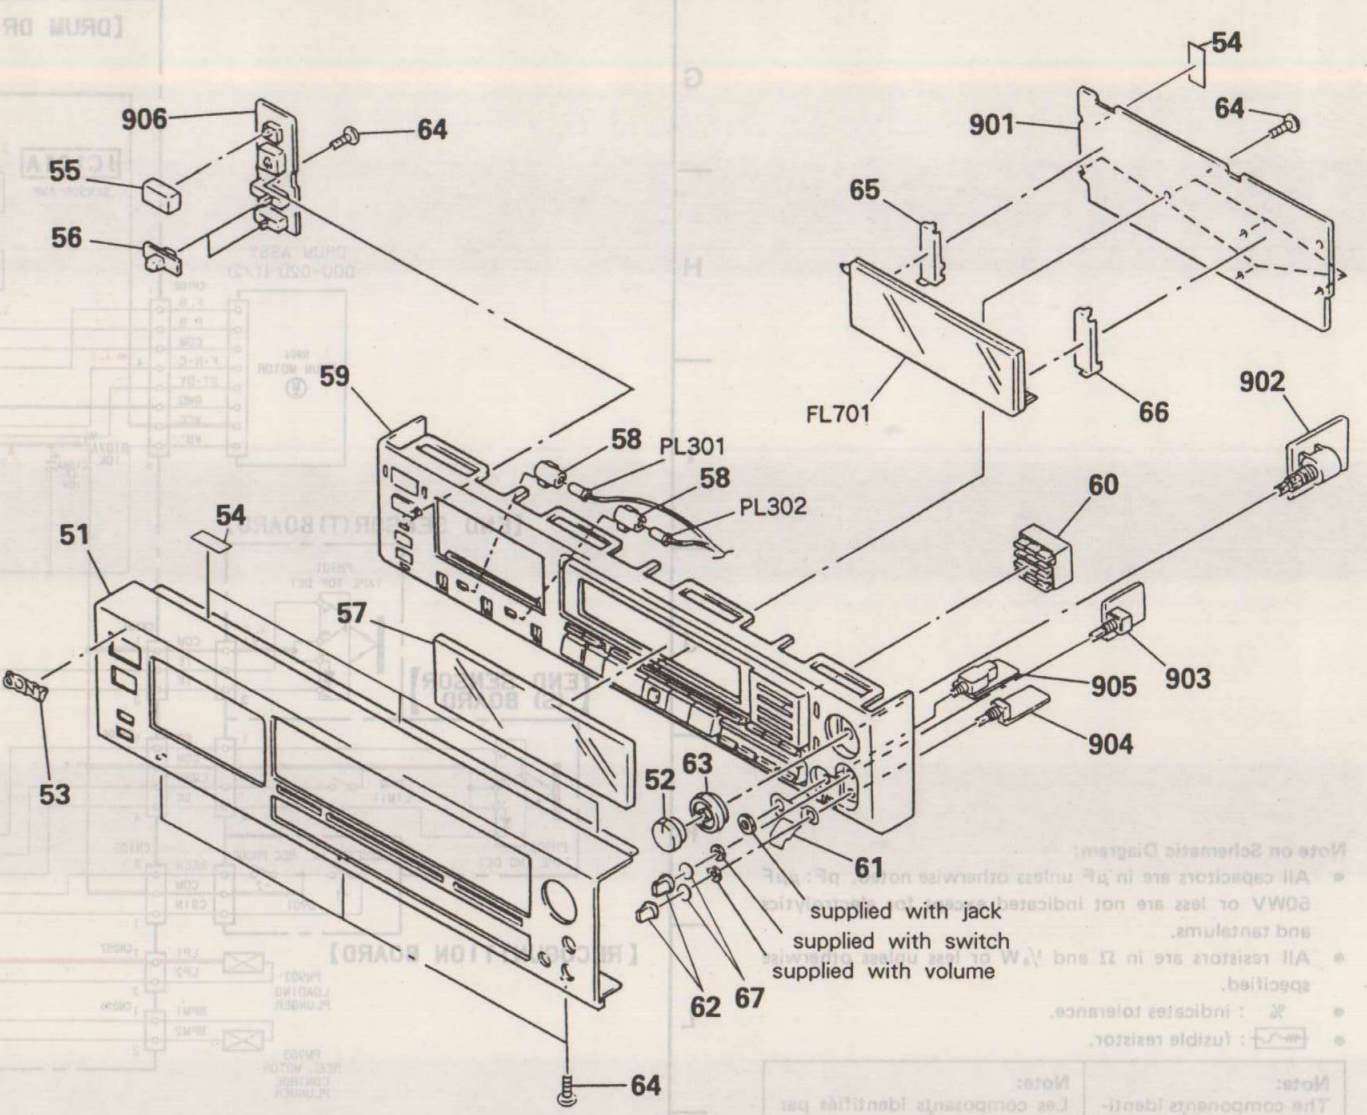


Table with 4 columns: No., Part No., Description, Remarks. Lists parts like PANEL (FRONT), KNOB, SCREW, HOLDER, SPRING, MOUNTED PCB, PC BOARD, WINDOW, COVER, ESCUTCHEON, BUTTON, PLATE, and LAMP.

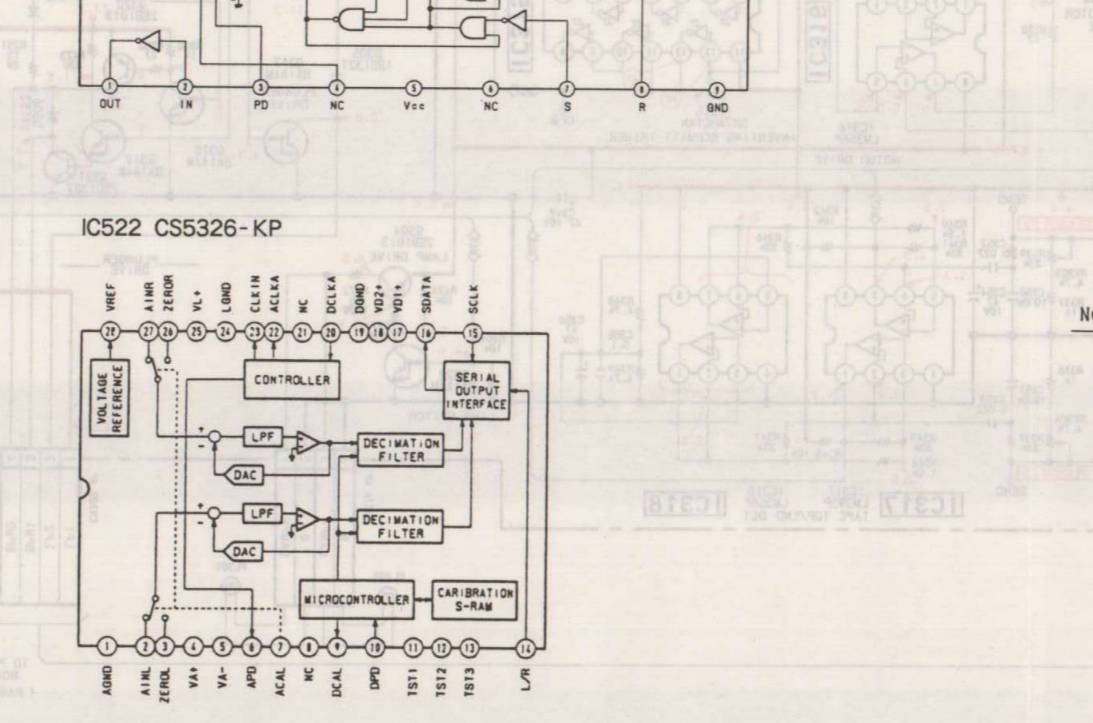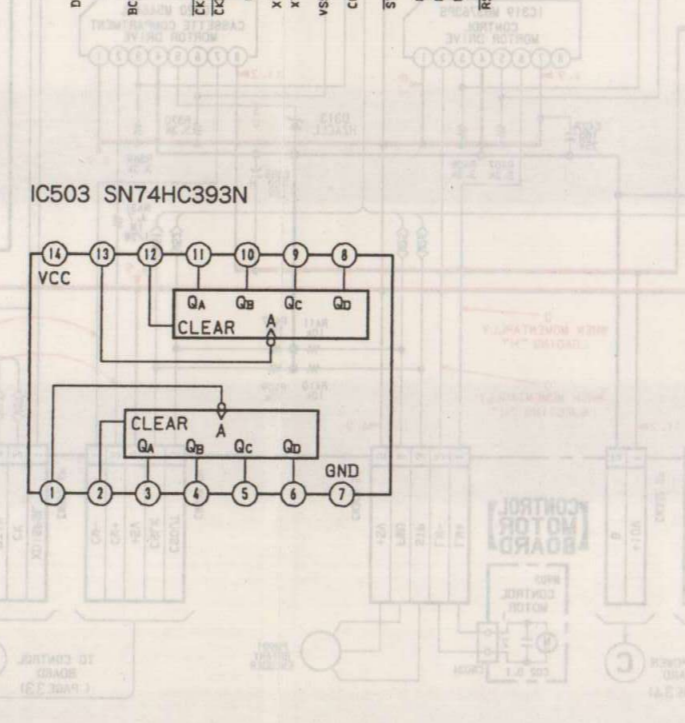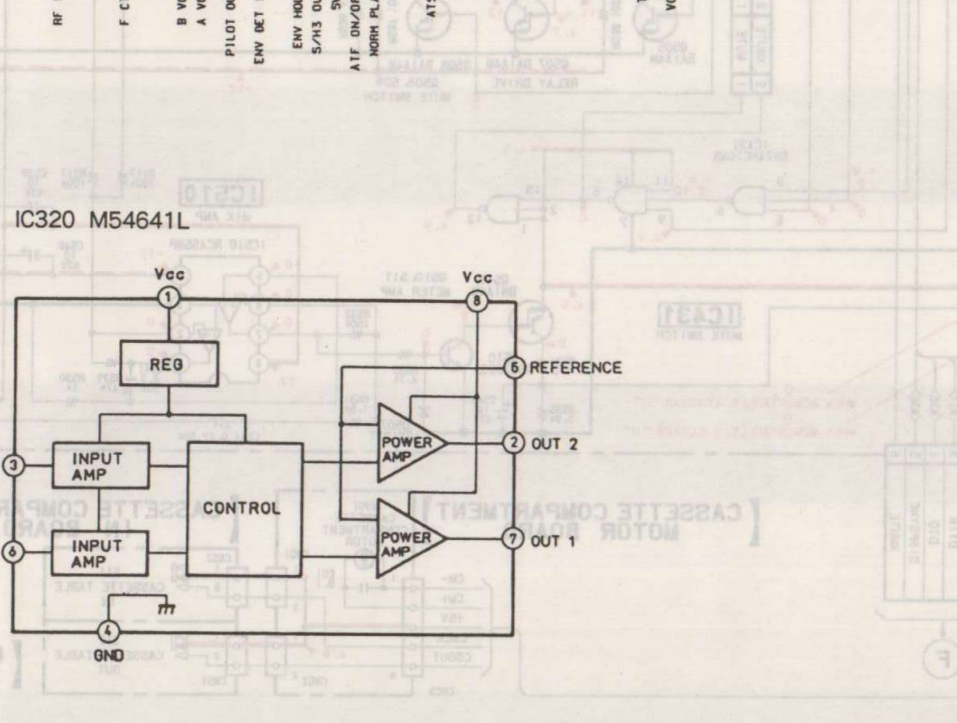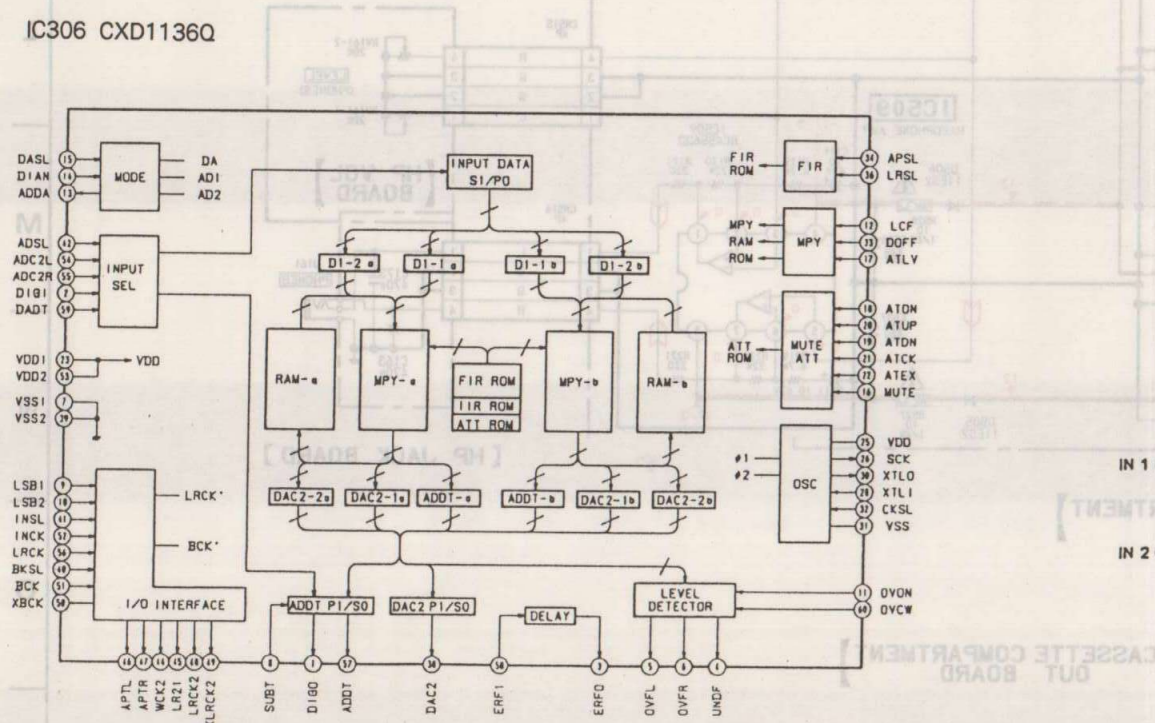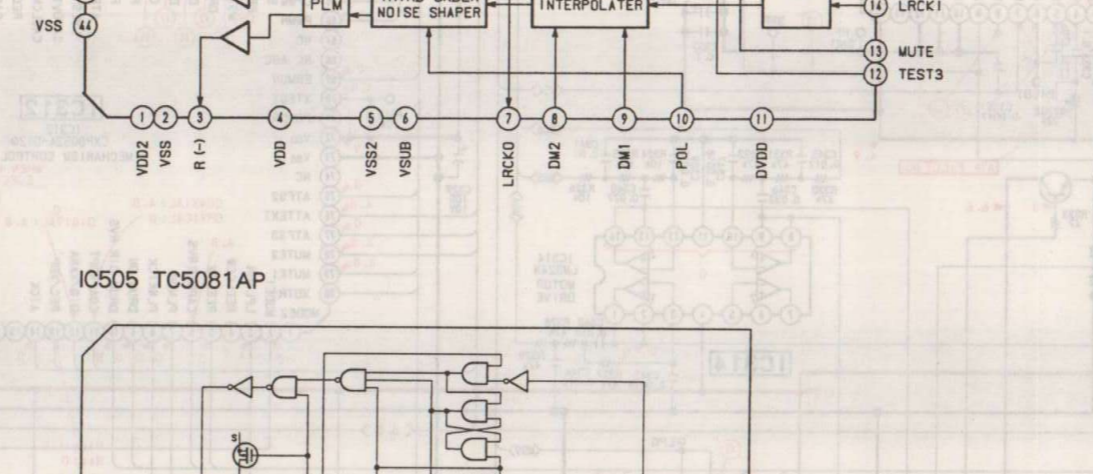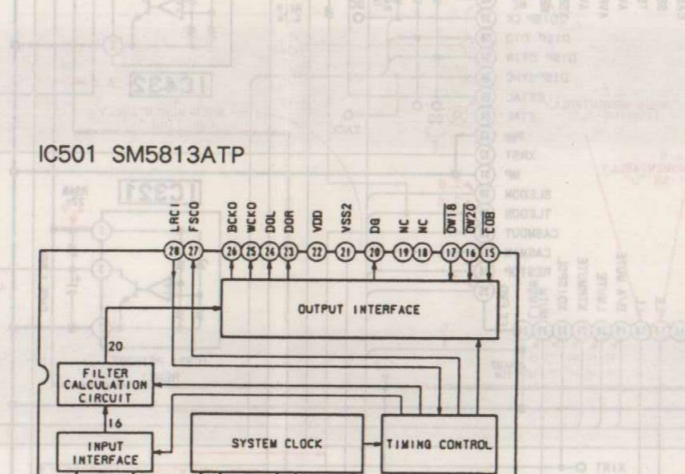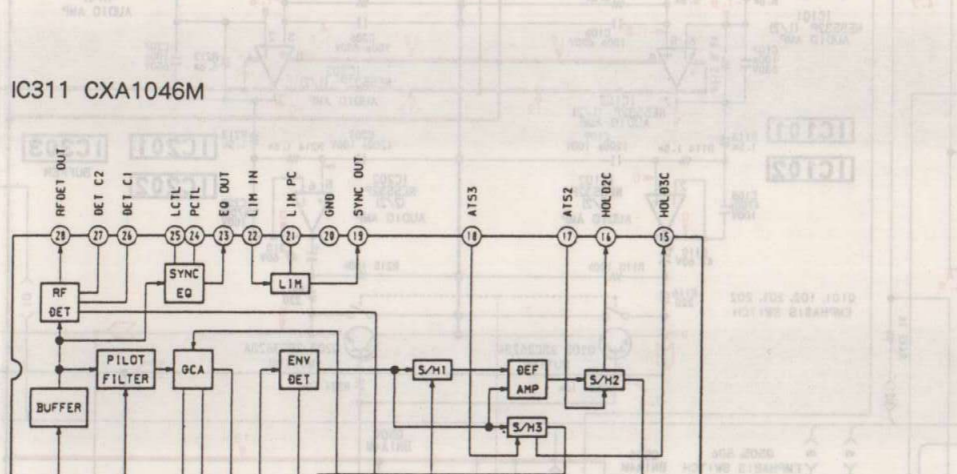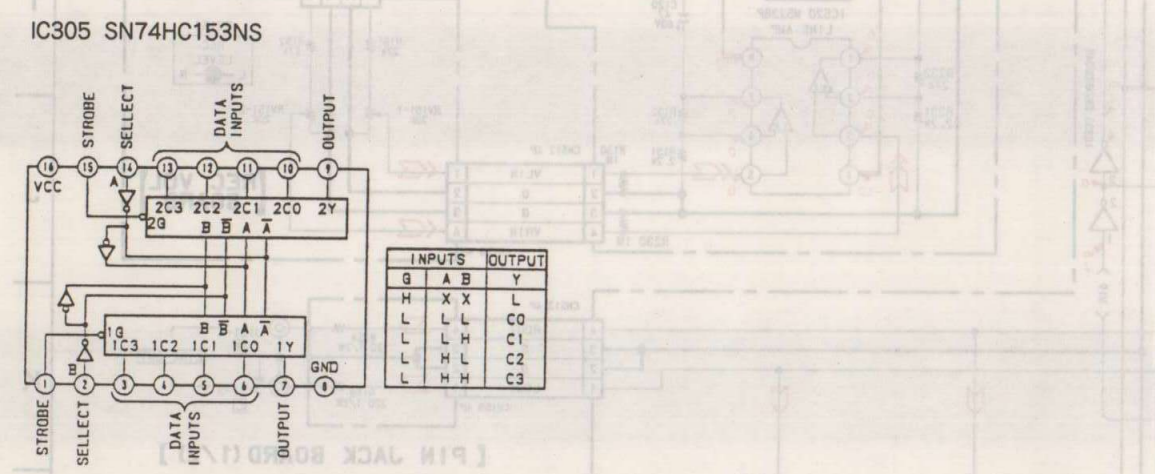

5-3. BACK PANEL SECTION

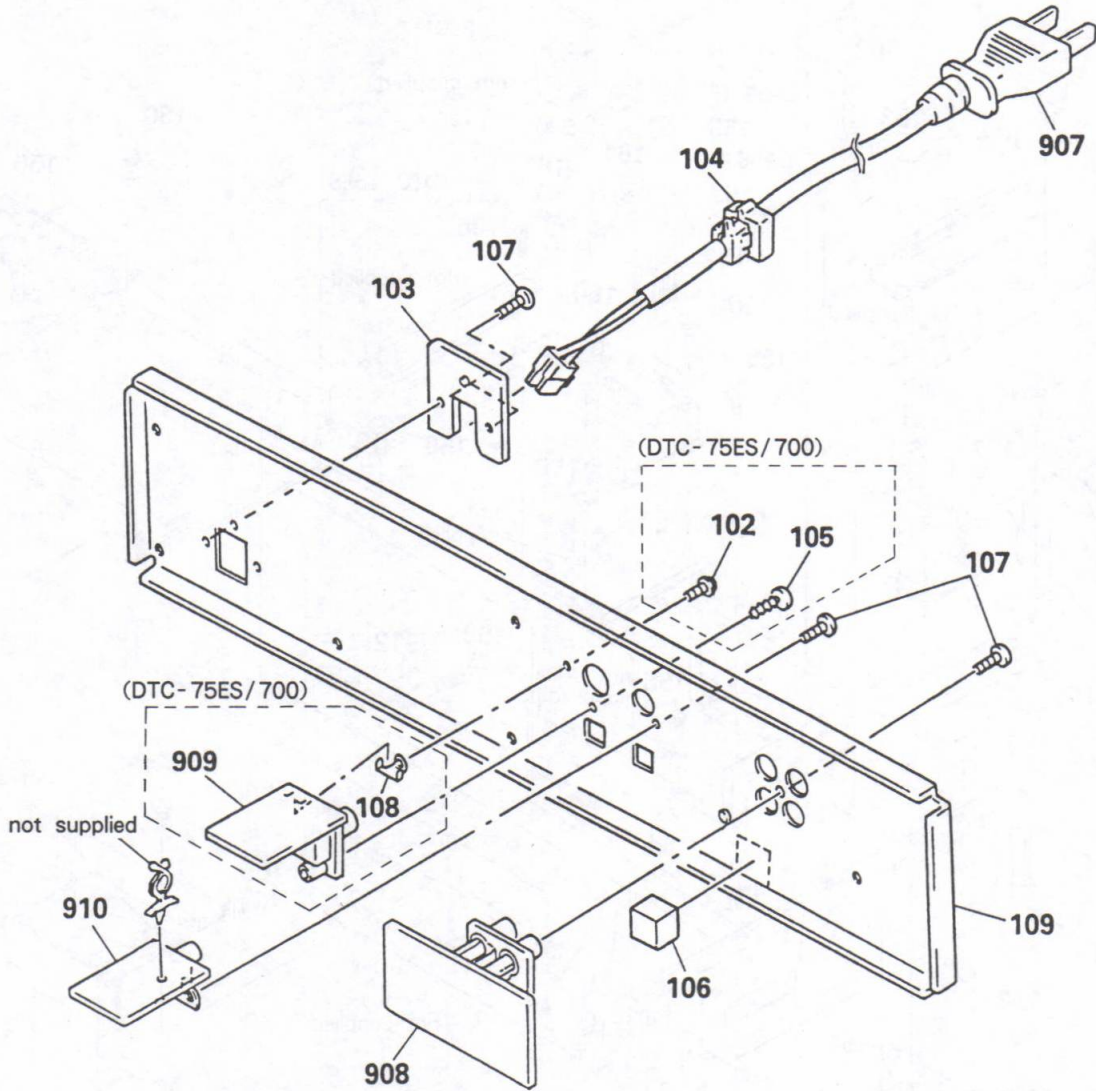


No.	Part No.	Description	Remarks
102	7-621-771-06	(75ES/700)...SCREW, LOCK	
103	*4-923-873-01	BRACKET, CORD STOPPER	
104	*3-703-244-00 4-916-783-01	(55ES/700)...BUSHING (2104), CORD (75ES).....BUSHING, CORD	
105	7-685-646-79	(75ES/700)...SCREW +BVTP 3X8 TYPE2 N-S	
106	*4-936-607-01	BUSHING, RUBBER	
107	7-682-548-09	SCREW +BVTT 3X8 (S)	
108	*4-916-318-01	(75ES/700)...PLATE, GROUND	

No.	Part No.	Description	Remarks
109	*4-931-498-11 *4-931-498-22 *4-931-498-32 *4-931-498-41	(700).....PANEL, BACK (55ES:AEP)...PANEL, BACK (55ES:UK)...PANEL, BACK (75ES).....PANEL, BACK	
907	⚠.1-559-479-11 ⚠.1-575-695-11 ⚠.1-575-912-11 ⚠.1-575-913-11	(75ES).....CORD, POWER (700).....CORD, POWER (55ES:AEP)...CORD, POWER (55ES:UK)...CORD, POWER	
908	*1-633-719-11	PC BOARD, PIN JACK	
909	*1-633-718-11	(75ES/700)...PC BOARD, DIGITAL OUT	
910	*1-633-717-11	PC BOARD, DIGITAL IN	

<p><b>Note:</b> The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.</p>	<p><b>Note:</b> Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	--

5-4. CHASSIS SECTION

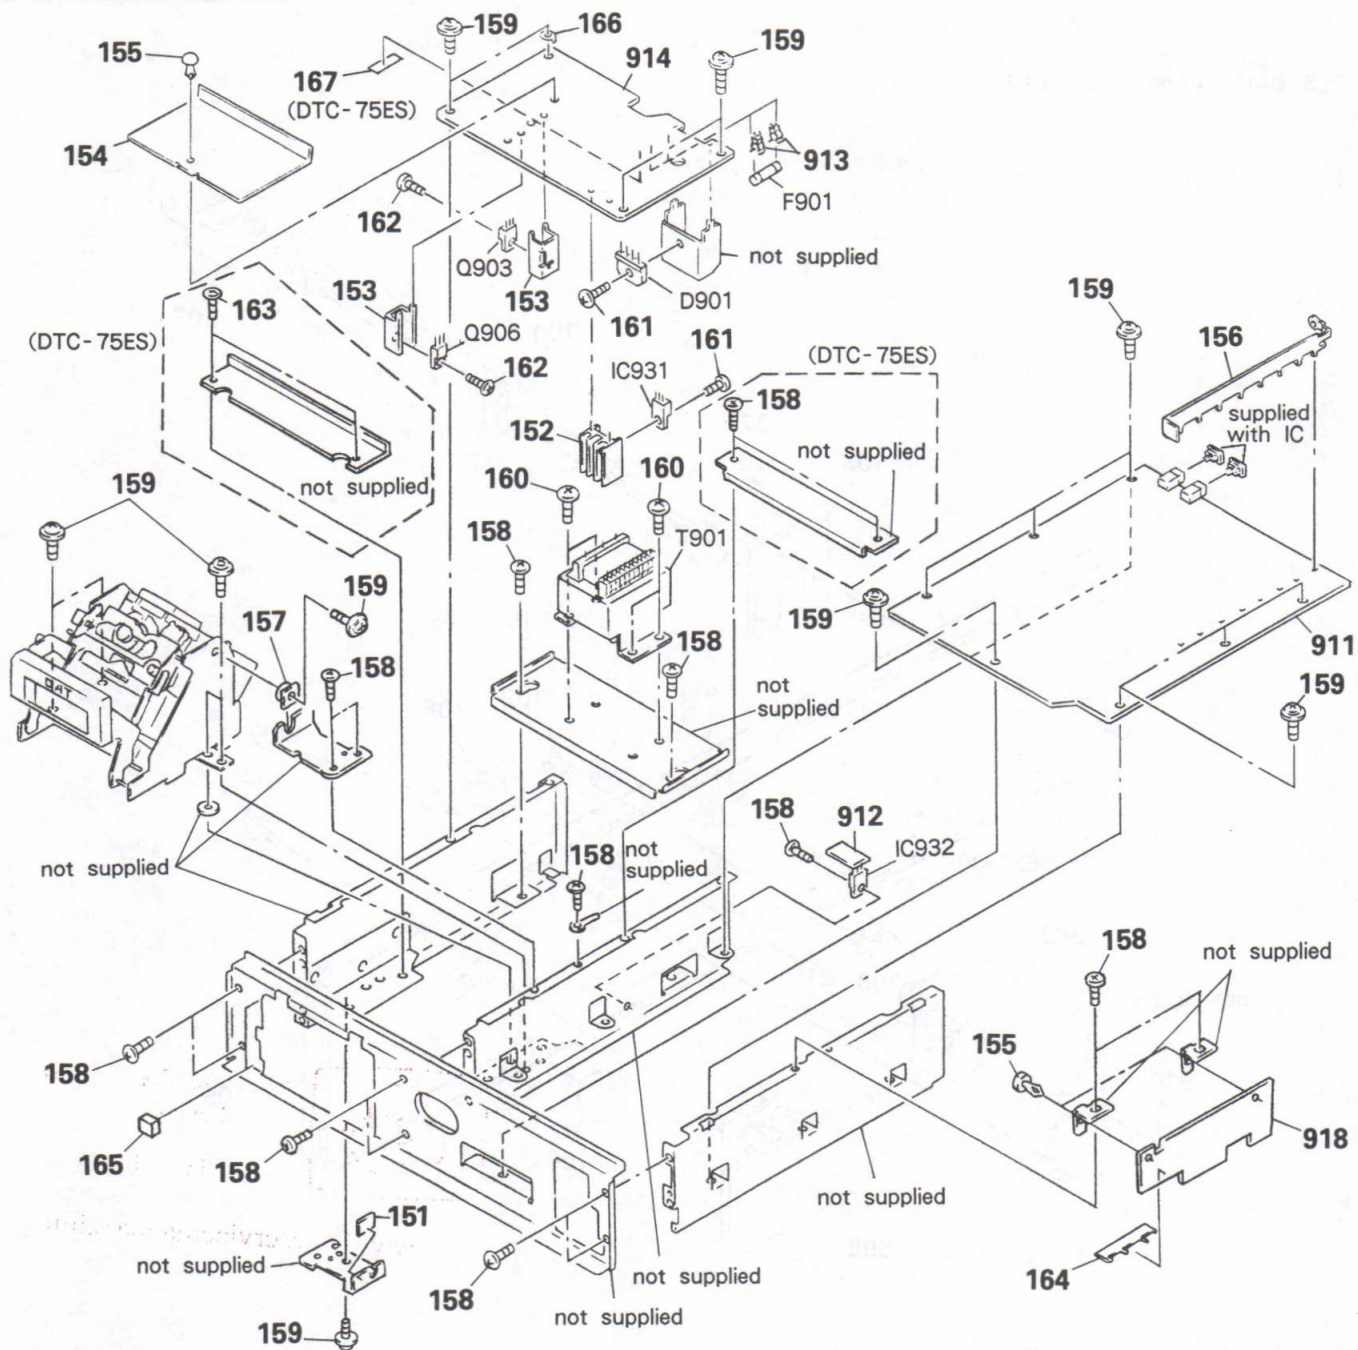


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
151	2-272-609-00	SPACER		912	*1-633-814-11	PC BOARD, TRANSISTER	
152	*4-363-146-71	HEAT SINK, V.OUT		913	*1-533-213-31	HOLDER, FUSE	
153	4-902-345-01	HEAT SINK		914	*A-2006-244-A	(55ES:AEP)...MOUNTED PCB, POWER	
154	*4-931-491-01	COVER (POWER)			*A-2006-293-A	(75ES/700)...MOUNTED PCB, POWER	
155	3-531-576-01	RIVET			*A-2006-296-A	(55ES:UK)...MOUNTED PCB, POWER	
156	*4-931-489-01	PLATE (BUS BAR), GROUND		918	*1-635-440-11	PC BOARD, A/D	
157	4-931-466-01	SPACER		D901	8-719-311-72	DIODE RBV-406H-01	
158	7-682-548-09	SCREW +BVTT 3X8 (S)		F901	△.1-532-286-00	(55ES).....FUSE, TIME-LAG (2.5A)	
159	4-886-821-11	SCREW, S TIGHT, +PTTWH 3X6		F901	△.1-532-744-11	(75ES/700)...FUSE, GLASS TUBE (2.5A)	
160	7-682-560-04	SCREW +BVTT 4X6 (S)		IC931	8-759-148-79	IC UP2406HF	
161	7-682-548-09	SCREW +B 3X8		IC932	8-759-634-55	IC M5F7805L-720	
162	7-682-147-15	SCREW, TR		Q903	8-729-127-53	TRANSISTOR 2SC2275-P	
163	7-682-545-09	(75ES)...SCREW +P 3X4		Q906	8-729-190-53	TRANSISTOR 2SA985A	
164	*3-311-617-11	REINFORCEMENT, PCB		T901	△.1-450-080-11	(75ES/700)...TRANSFORMER, POWER	
165	9-911-842-XX	CUSHION, PC BOARD		T901	△.1-450-164-11	(55ES).....TRANSFORMER, POWER	
166	4-870-539-00	PLATE, GROUND					
167	3-701-947-15	(55ES)...LABEL (T2.5A), FUSE					
911	*A-2006-291-A	(700)...MOUNTED PCB, MAIN					
	*A-2006-292-A	(75ES)...MOUNTED PCB, MAIN					
	*A-2006-303-A	(55ES)...MOUNTED PCB, MAIN					

**Note:**  
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


**Note:**  
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-5. MECHANISM SECTION 1

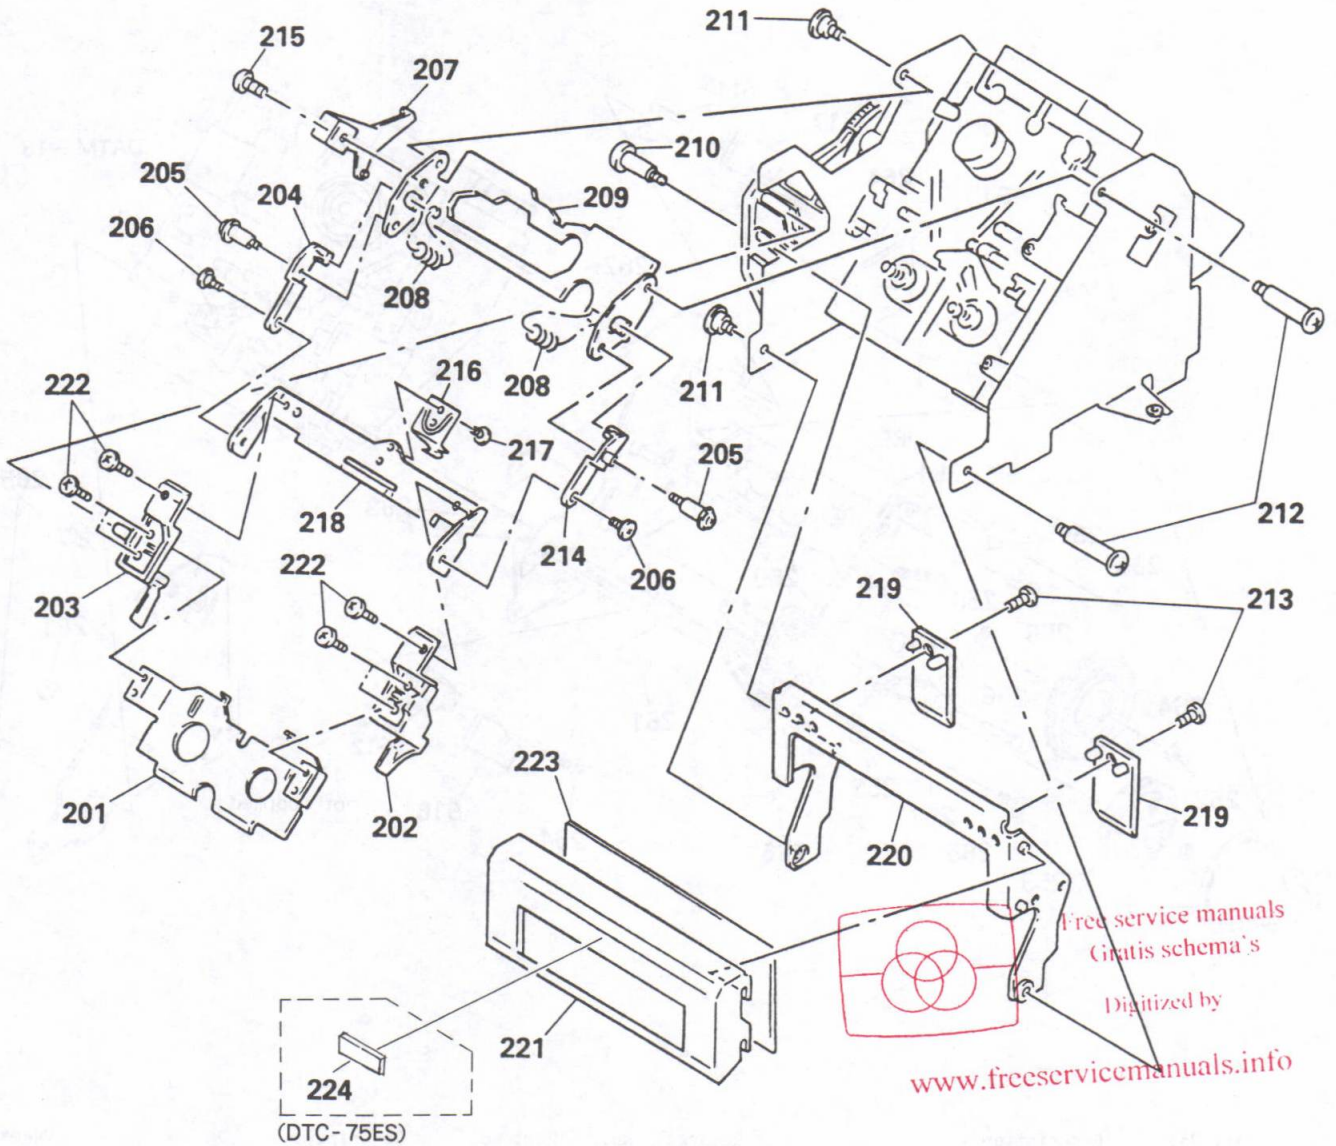

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
201	4-931-476-01	HOLDER (LOWER)		214	4-931-481-01	ARM (LIMITER L)	
202	4-931-486-01	HOLDER (C-RIGHT)		215	7-682-545-09	SCREW +B 3X4	
203	4-931-484-01	HOLDER (C-LEFT)		216	4-931-461-01	SPRING (CENTER), LEAF	
204	4-931-473-01	ARM (LIMITER R)		217	3-352-517-01	SCREW (M2X2.5)	
205	4-918-991-01	SCREW, STEP		218	*4-931-485-01	HOLDER (C-INNER)	
206	3-312-161-00	SCREW, STEP, PRECISION		219	4-931-469-01	PLATE, ORNAMENTAL	
207	*X-4919-020-1	JOINT ASSY		220	4-931-474-01	HOLDER (WINDOW)	
208	3-537-214-00	SPRING, COMPRESSION		221	4-931-480-01	(700)...LID, CASSETTE	
209	*4-931-475-01	PLATE, FULCRUM			4-931-480-11	(75ES)...LID, CASSETTE	
210	4-931-471-01	SCREW (STEP)		222	7-621-772-10	SCREW +B 2X4	
211	2-236-956-00	SCREW, STEP		223	4-931-462-01	WINDOW	
212	4-931-463-01	SCREW (STEP)		224	4-936-615-01	(75ES)...PLATE (DAT LOGO), ORNAMENTAL	
213	7-621-772-08	SCREW +B 2X3					


5-6. MECHANISM SECTION 2

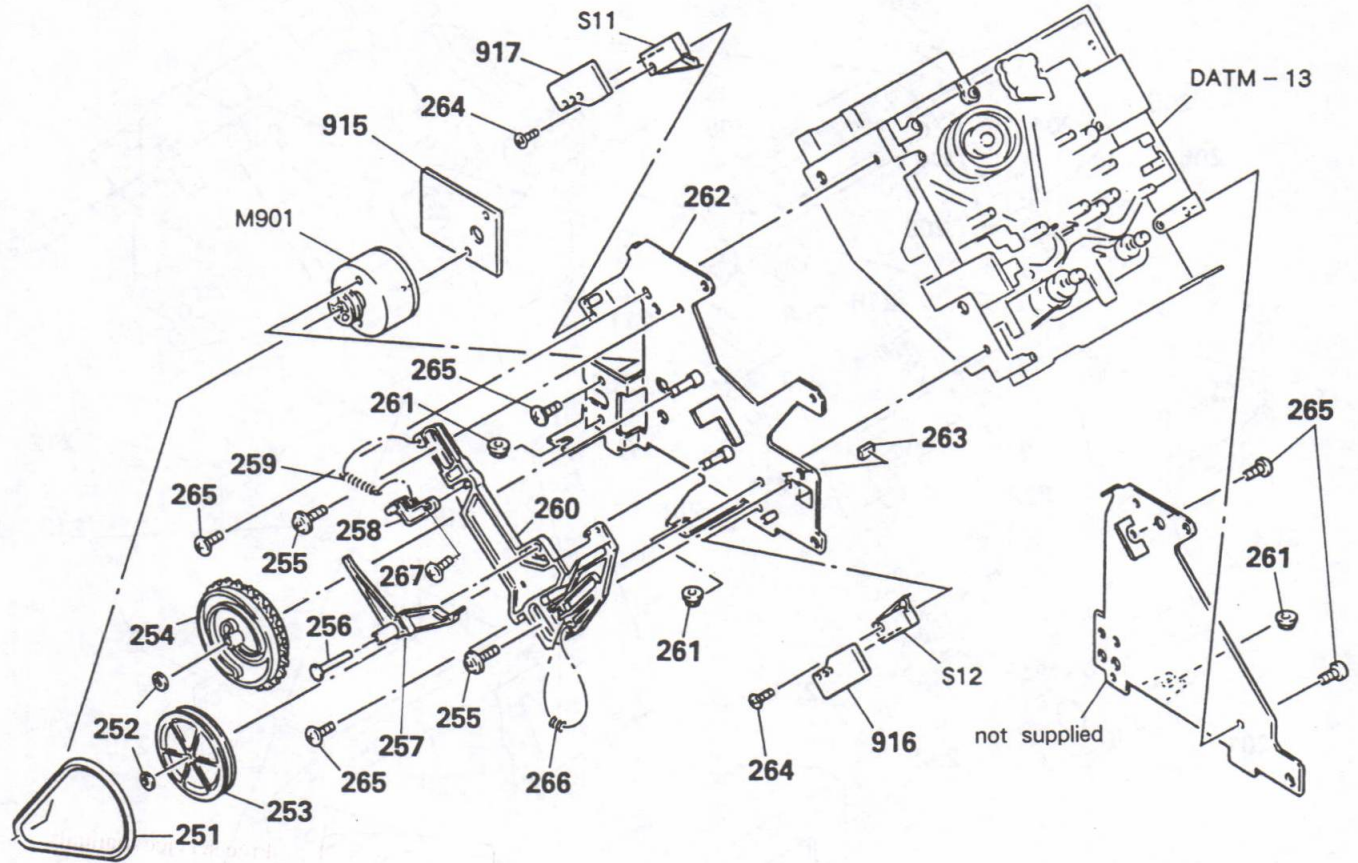

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
251	4-931-470-01	BELT (DRIVING)		263	9-911-863-XX	SPACER	
252	3-307-948-21	WASHER, NYLON		264	7-621-255-45	SCREW +P 2X6	
253	4-931-459-01	PULLEY		265	7-621-775-08	SCREW +B 2.6X3	
254	4-931-477-01	GEAR (CAM)		266	3-537-215-00	SPRING, COMPRESSION	
255	4-932-336-01	SCREW (STEP)		267	4-936-626-01	SHAFT (ARM PRESS FITTING)	
256	4-931-468-01	SHAFT (PRESS FITTING)					
257	4-931-490-01	LEVER (LINK)		915	*1-633-726-11	PC BOARD, CASSETTE COMPARTMENT MOTOR	
258	4-931-460-01	ARM (SLIDER)		916	*1-633-727-11	PC BOARD, CASSETTE COMPARTMENT IN	
259	3-549-810-00	SPRING, TENSION		917	*1-633-728-11	PC BOARD, CASSETTE COMPARTMENT OUT	
260	4-931-492-01	SLIDER (CAM)		M901	A-2003-448-A	MOTOR ASSY (CASSETTE COMPARTMENT)	
261	4-931-466-01	SPACER		S11	1-570-975-11	SWITCH, SLIDE (CASSETTE TABLE IN)	
262	*X-4919-023-1	PLATE ASSY, SIDE		S12	1-572-247-11	SWITCH, SLIDE (CASSETTE TABLE OUT)	




5-7. MECHANISM SECTION 3 (DATM-13)

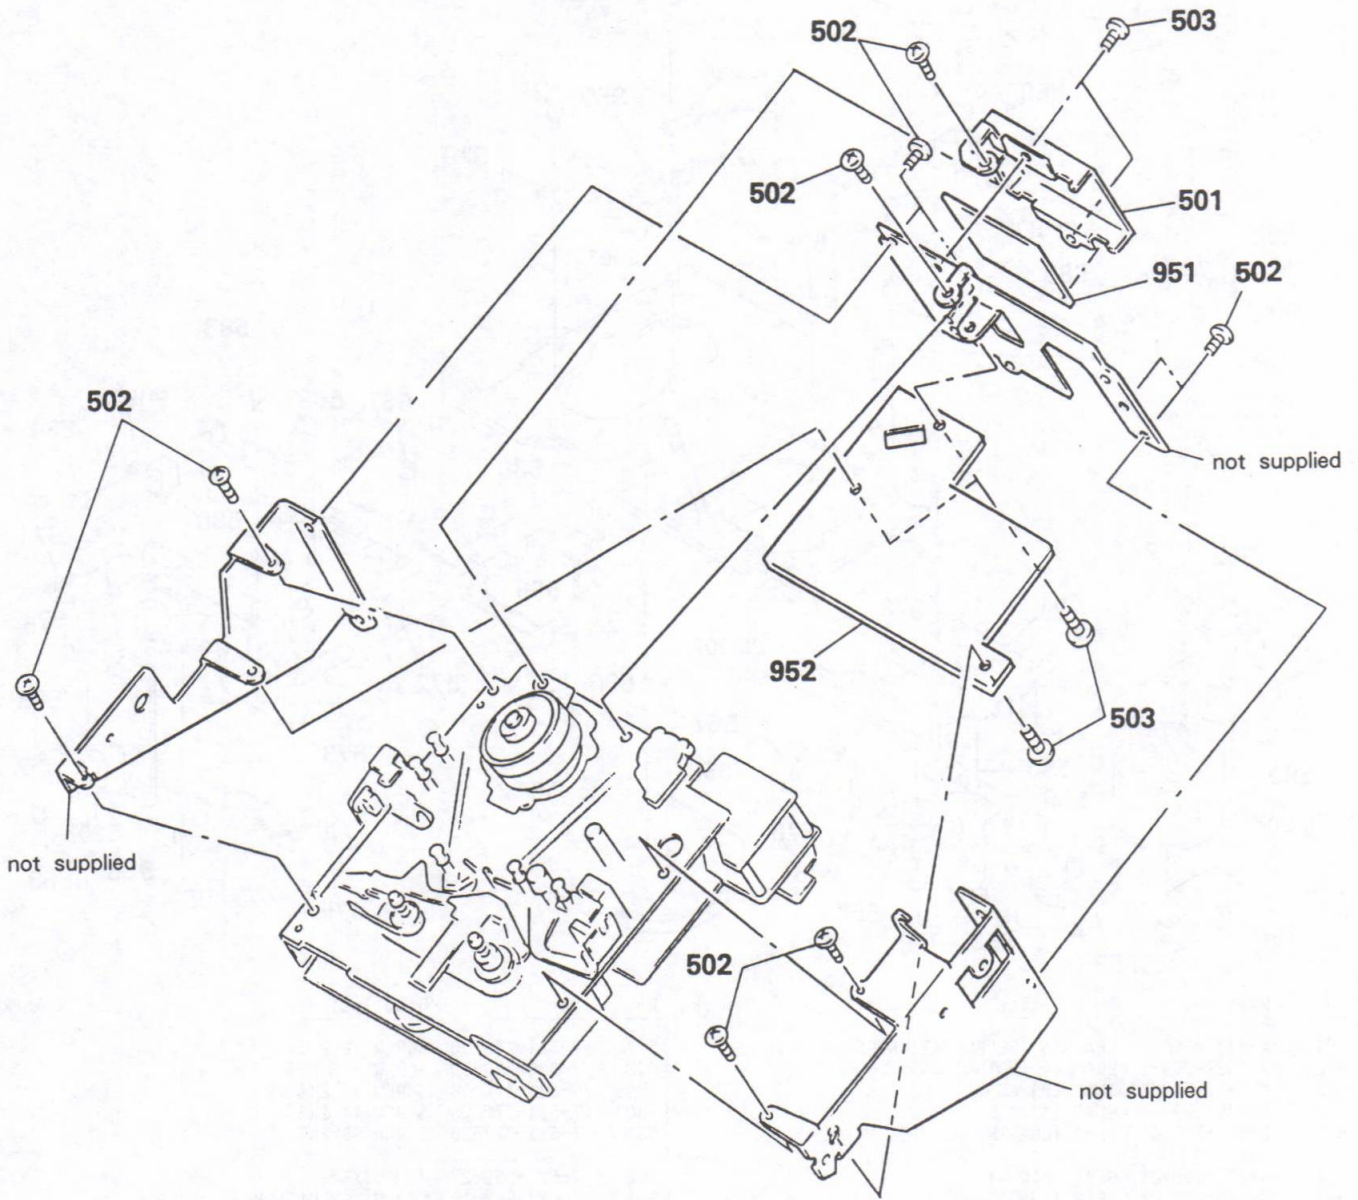


No.	Part No.	Description	Remarks
501	*3-352-522-01	CASE, SHIELD	
502	7-621-775-08	SCREW +B 2.6X3	
503	7-621-775-10	SCREW +B 2.6X4	
951	*A-2006-139-A	MOUNTED PCB, RF AMPLIFIER	
952	*A-2006-140-A	MOUNTED PCB, DRUM DRIVE	

5-8. MECHANISM SECTION 4 (DATM-13)

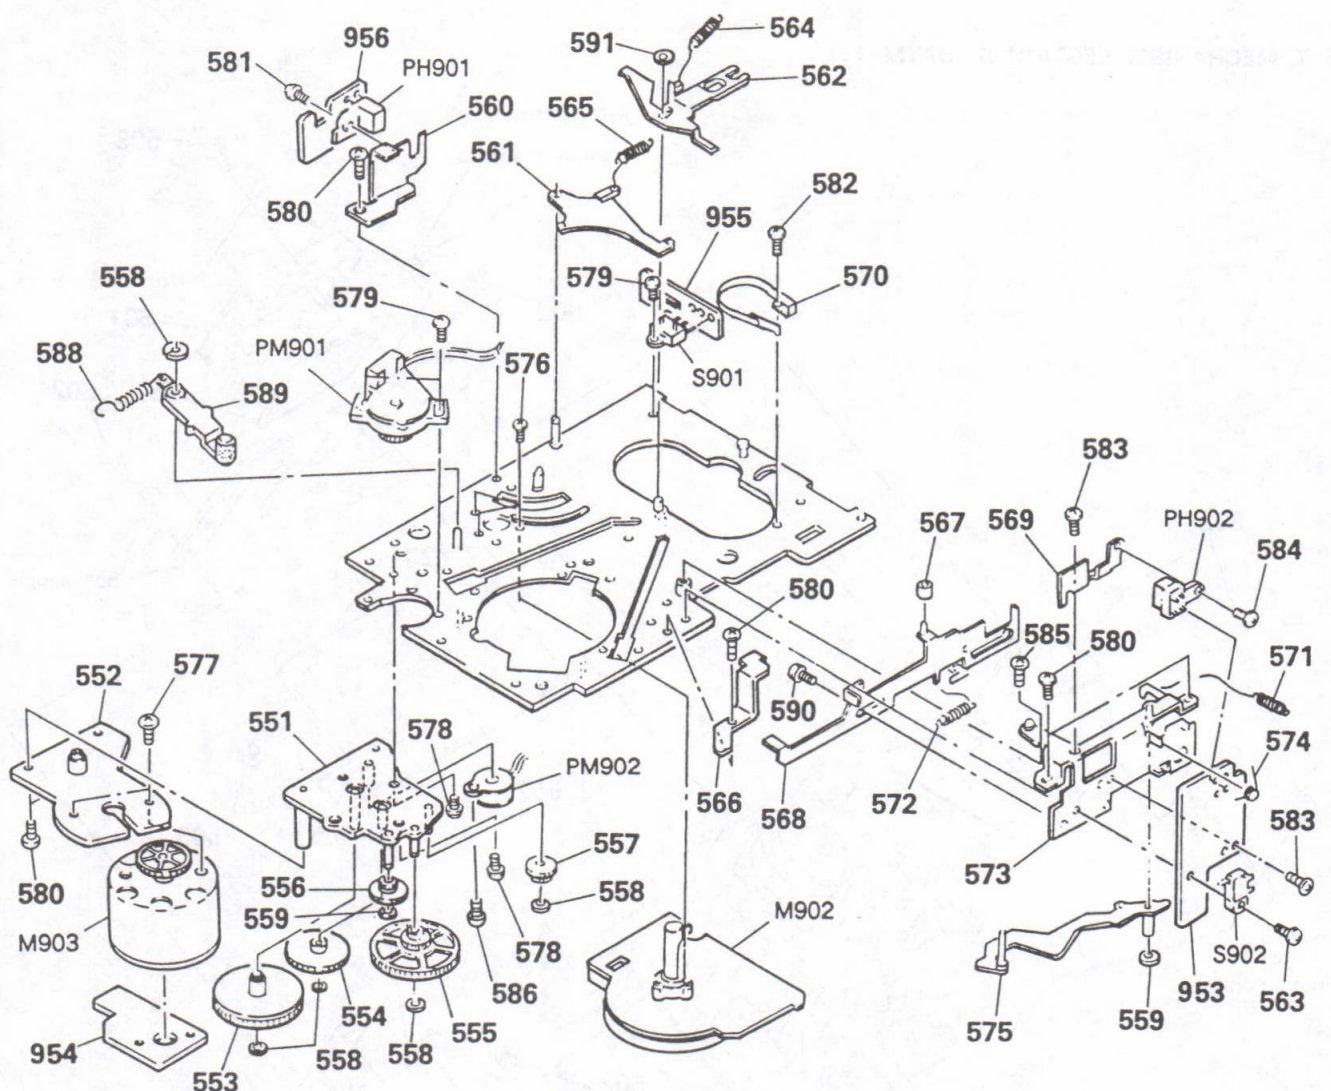


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
551	*X-3337-656-1	CHASSIS (DECCELERATION GEAR) ASSY		577	7-621-775-00	SCREW +B 2.6X3	
552	*X-3337-659-1	BRACKET (MOTOR) ASSY		578	7-628-253-00	SCREW +PS 2X4	
553	X-3337-630-3	GEAR (B) ASSY		579	7-621-772-18	SCREW +B 2X4	
554	3-345-129-01	GEAR (A)		580	7-621-772-08	SCREW +B 2X3	
555	3-345-181-01	GEAR (LOADING A)		581	7-621-772-20	SCREW +B 2X5	
556	3-337-669-01	GEAR, MIDWAY		582	7-627-852-27	+P 1.7X3	
557	3-345-182-01	GEAR (LOADING B)		583	7-627-552-18	SCREW, PRECISION +P 1.7X1.6	
558	3-701-436-11	WASHER, 1.6 POLYETHYLENE		584	3-884-232-00	SCREW M 1.7X2.5	
559	3-559-408-11	WASHER, POLYETHYLENE, DIA.1.2		585	3-352-517-01	SCREW (M2X2.5)	
560	*3-352-507-01	HOLDER (R)		586	7-621-255-10	SCREW +P 2X3	
561	3-345-145-01	LEVER (T LOCK)		588	3-307-377-00	SPRING, TENSION	
562	X-3337-638-1	LEVER (SLIDER) ASSY		589	A-2003-438-A	CLEANER ASSY, HEAD	
563	7-621-772-38	SCREW +B 2X6		590	3-703-502-11	SCREW	
564	3-570-898-00	SPRING, TENSION		591	3-321-813-01	WASHER, COTTER POLYETHYLENE	
565	3-547-661-00	SPRING, TENSION		953	*1-633-711-11	PC BOARD, END SENSOR (S)	
566	*3-352-506-01	HOLDER (L)		954	*1-633-713-11	PC BOARD, CONTROL MOTOR	
567	3-352-525-01	ROLLER (TENSION REGULATOR)		955	*1-633-710-11	PC BOARD, RECOGNITION	
568	X-3337-618-1	SLIDER ASSY, MODE		956	*1-633-712-11	PC BOARD, END SENSOR (T)	
569	*3-352-515-01	HOLDER (E SENSOR L)		M902	8-835-306-01	MOTOR, DC U-17A (CAPSTAN)	
570	X-3337-632-1	BAND (TENSION REGULATOR) ASSY		M903	A-2003-545-A	MOTOR ASSY (CONTROL)	
571	3-352-527-01	SPRING, TENSION		PH901	1-808-957-11	PHOTO SENSOR (END T)	
572	3-570-892-00	SPRING, TENSION		PH902	1-808-957-11	PHOTO SENSOR (END S)	
573	*X-3337-657-1	CHASSIS (TENSION REGULATOR) ASSY		PM901	1-464-724-31	ENCODER, ROTARY	
574	3-337-673-01	SPRING		PM902	1-454-462-21	SOLENOID, PLUNGER (LOADING)	
575	*X-3337-654-1	LEVER (TENSION REGULATOR) ASSY		S901	1-571-878-11	SWITCH, PUSH(2 KEY)(CASSETTE IN/REC PROOF)	
576	7-627-552-47	SCREW, PRECISION +P 1.7X4		S902	1-570-771-21	SWITCH (LIMIT)	

5-9. MECHANISM SECTION 5 (DATM-13)

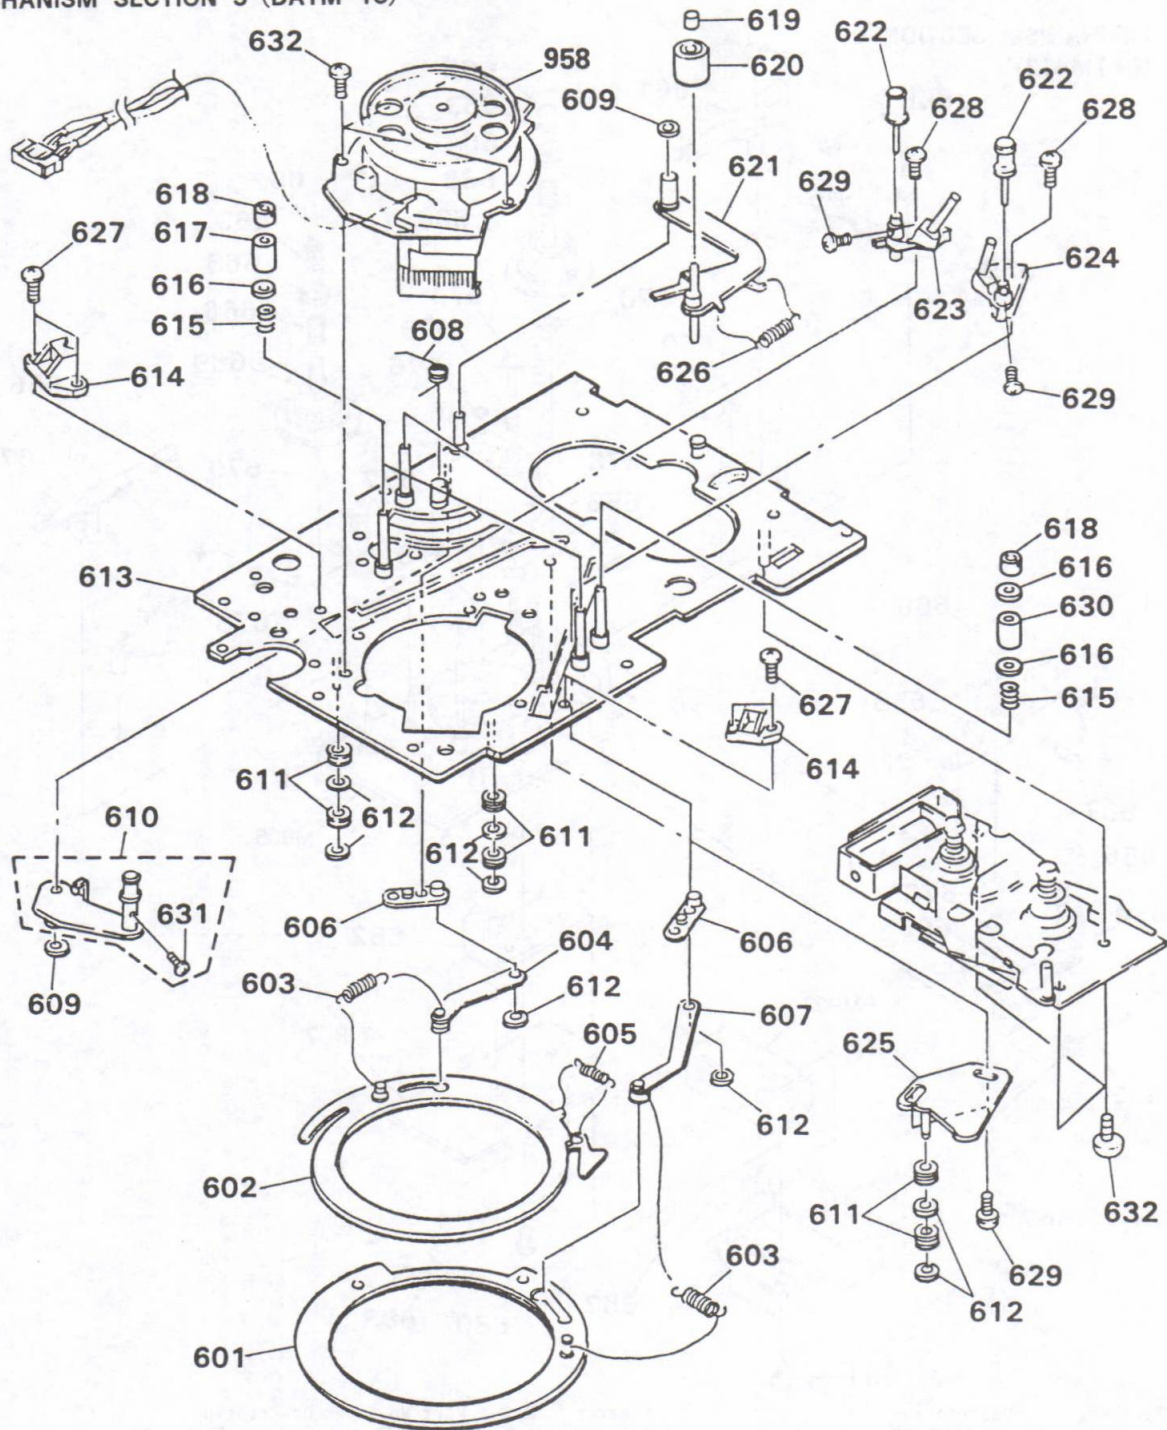

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
601	X-3337-602-1	RING (LEFT) ASSY, LOADING		618	3-337-605-01	NUT, ADJUSTMENT	
602	X-3337-601-1	RING (RIGHT) ASSY, LOADING		619	3-337-626-01	CAP, PINCH ROLLER	
603	3-337-653-01	SPRING, TENSION		620	X-3337-610-1	PINCH ROLLER ASSY	
604	*X-3337-603-1	ARM (RIGHT) ASSY, LOADING		621	X-3337-660-1	ARM (PINCH ROLLER) ASSY	
605	3-352-503-01	SPRING, TENSION		622	X-3337-622-1	GUIDE (POM) ASSY, ROLLER	
606	X-3337-604-1	PLATE ASSY, LOADING		623	X-3337-652-1	SLANT BLOCK (RIGHT) ASSY	
607	*X-3337-607-1	ARM (LEFT) ASSY, LOADING		624	X-3337-651-1	SLANT BLOCK (LEFT) ASSY	
608	3-352-513-01	SPRING (F GUIDE RETURN)		625	*X-3337-605-1	ARM ASSY, RING ROLLER	
609	3-701-436-11	WASHER, 1.6 POLYETHYLENE		626	3-547-659-00	SPRING, TENSION	
610	A-2003-408-A	LEVER (F ARM) ASSY		627	7-627-852-17	+P 1.7X4	
611	3-337-622-01	ROLLER, RING		628	3-703-502-81	SCREW	
612	3-559-408-11	WASHER, POLYETHYLENE, DIA.1.2		629	7-627-551-17	SCREW, PRECISION +P 1.4X2	
613	*X-3337-658-1	CHASSIS (MECHANICAL) ASSY		630	3-337-676-01	GUIDE, FIXED	
614	*3-345-195-01	CATCHER		631	7-627-551-27	SCREW, PRECISION +P 1.4X2.5	
615	3-573-470-00	SPRING, COMPRESSION		632	7-621-772-18	SCREW +B 2X4	
616	3-337-677-01	FLANGE		958	8-848-513-11	DRUM ASSY DOU-02D	
617	3-337-676-11	GUIDE, FIXED					

5-10. MECHANISM SECTION 6  
 (DATM-13)

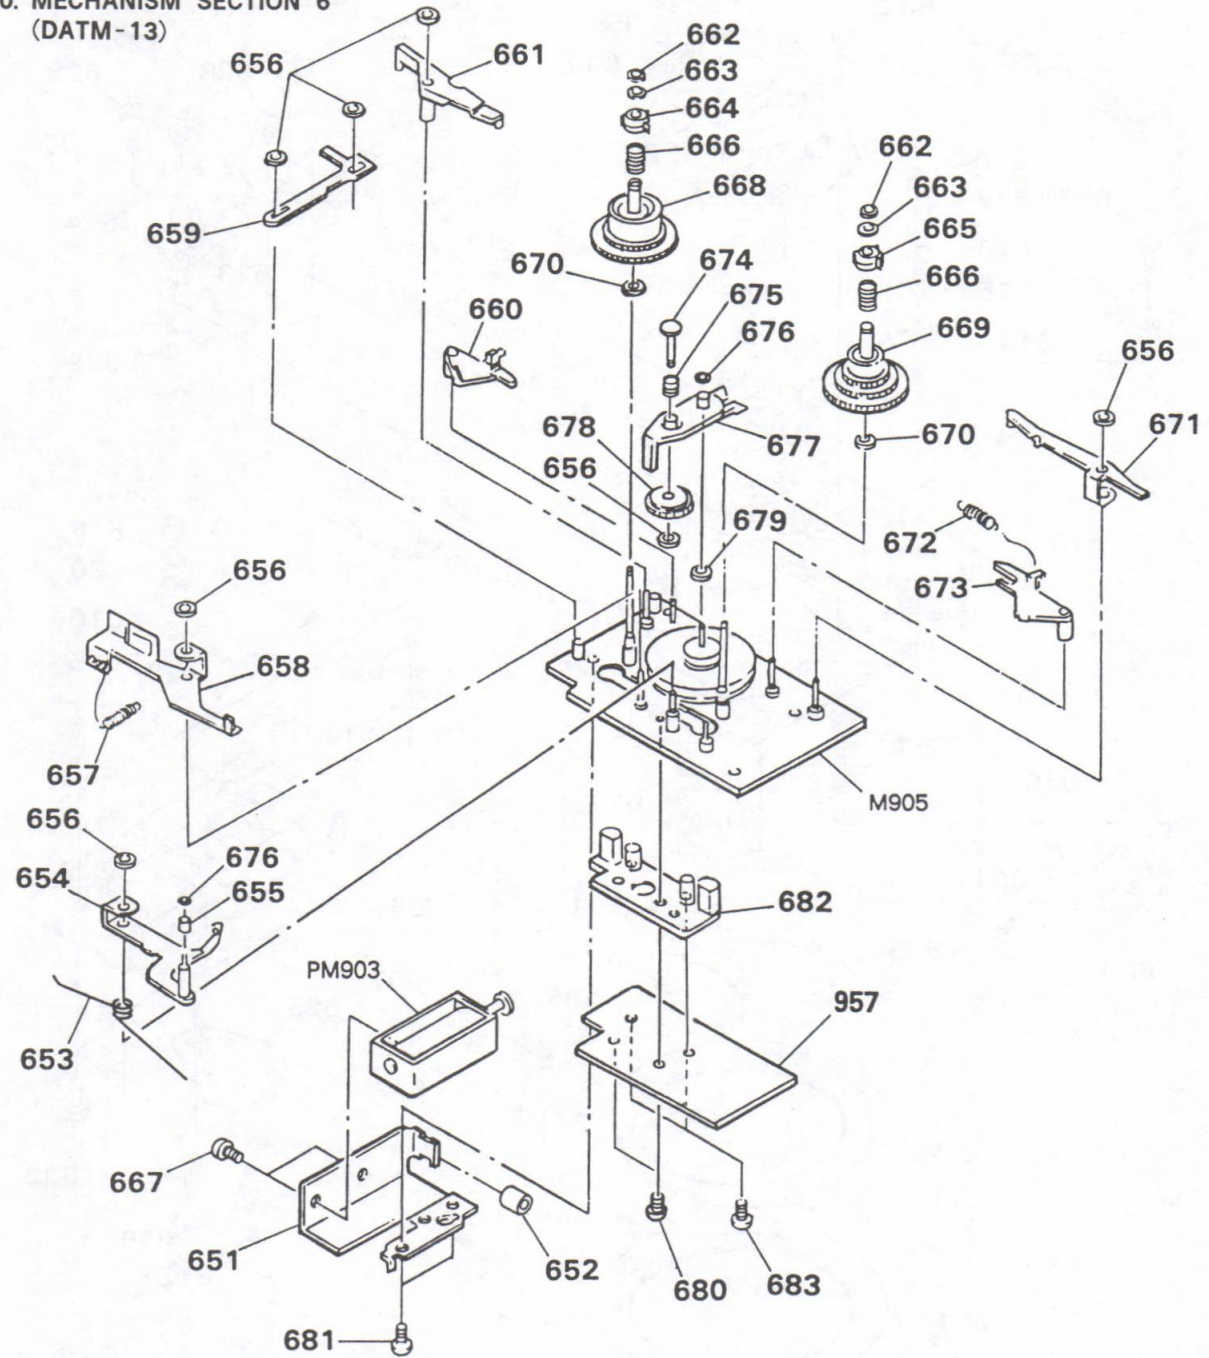

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
651	*3-345-118-01	BRACKET (SOLENOID)		669	X-3337-642-1	TABLE (T) ASSY, REEL	
652	*3-576-990-01	CUSHION		670	3-701-438-11	WASHER, 2.5	
653	3-345-169-01	SPRING, TORSION		671	*X-3337-637-1	LEVER (BRAKE RELEASE) ASSY	
654	*X-3337-628-1	LEVER ASSY		672	3-527-190-00	SPRING, TENSION	
655	3-345-104-01	COLLAR		673	X-3337-636-1	LEVER (BRAKE S) ASSY	
656	3-559-408-11	WASHER, POLYETHYLENE, DIA.1.2		674	*3-345-114-01	SHAFT (MIDWAY GEAR)	
657	3-345-168-01	SPRING, TENSION		675	3-345-115-01	SPRING, COMPRESSION	
658	*X-3337-640-1	LEVER (REVERSE SB) ASSY		676	3-315-384-11	WASHER, STOPPER	
659	*3-345-166-01	LEVER (SOLENOID)		677	3-345-113-01	LEVER (FR)	
660	X-3337-635-1	LEVER (BRAKE T) ASSY		678	X-3337-633-1	GEAR (MIDWAY) ASSY	
661	3-345-110-01	LEVER (BRAKE ARM)		679	3-701-436-11	WASHER, 1.6 POLYETHYLENE	
662	3-578-224-00	WASHER		680	7-621-772-18	SCREW +B 2X4	
663	3-345-112-01	RING, RETAINING		681	7-621-772-08	SCREW +B 2X3	
664	*2-623-736-01	CLAW (C) (LEFT), REEL		682	*3-345-142-01	HOLDER (FG SENSOR)	
665	*2-623-752-01	CLAW (C) (RIGHT), REEL		683	7-685-102-19	SCREW +P 2X4 TYPE2 SLIT	
666	2-623-754-01	SPRING, COMPRESSION		957	*1-633-709-11	PC BOARD, REEL FG	
667	7-621-775-00	SCREW +B 2.6X3		M905	8-835-346-11	MOTOR, DC U-16B (REEL)	
668	X-3337-634-1	TABLE (S) ASSY, REEL		PM903	1-454-482-21	SOLENOID, PLUNGER (REEL MOTOR CONTROL)	

## SECTION 6

### ELECTRICAL PARTS LIST

**NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

**CAPACITORS:**MF:  $\mu$ F, PF:  $\mu$ MF.**RESISTORS**

- All resistors are in ohms.
- F: nonflammable

**COILS**

- MMH: mH, UH:  $\mu$ H

**SEMICONDUCTORS**In each case, U:  $\mu$ , for example:UA....:  $\mu$ A...., UPA....:  $\mu$ PA....,UPC....:  $\mu$ PC, UPD....:  $\mu$ PD...

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description			
901	*A-2006-274-A	MOUNTED PCB, CONTROL SW	C106	1-136-433-11	FILM	100PF	5%	630V
902	*1-633-721-11	PC BOARD, REC VOL	C106A	1-124-446-11	ELECT	47MF	20%	10V
903	*1-633-724-11	PC BOARD, INPUT SELECT						
904	*1-633-722-11	PC BOARD, HEADPHONE VOL	C107	1-136-433-11	FILM	100PF	5%	630V
905	*1-633-723-11	PC BOARD, HEADPHONE JACK	C108	1-136-233-11	FILM	0.0047MF	3%	100V
906	*1-633-725-11	PC BOARD, POWER SW	C109	1-136-228-11	FILM	0.0012MF	3%	100V
907	$\Delta$ .1-559-479-11	(75ES).....CORD, POWER	C110	1-126-062-11	ELECT	47MF	20%	63V
	$\Delta$ .1-575-695-11	(700).....CORD, POWER	C111	1-126-059-11	ELECT	10MF	20%	63V
	$\Delta$ .1-575-912-11	(55ES:AEP)...CORD, POWER	C120	1-126-062-11	ELECT	47MF	20%	63V
	$\Delta$ .1-575-913-11	(55ES:UK)....CORD, POWER	C121	1-126-062-11	ELECT	47MF	20%	63V
908	*1-633-719-11	PC BOARD, PIN JACK	C122	1-136-153-00	FILM	0.01MF	5%	50V
909	*1-633-718-11	(75ES/700)...PC BOARD, DIGITAL OUT	C163	1-162-290-31	CERAMIC	470PF	10%	50V
910	*1-633-717-11	PC BOARD, DIGITAL IN	C173	1-162-290-31	CERAMIC	470PF	10%	50V
911	*A-2006-291-A	(700)...MOUNTED PCB, MAIN	C181	1-162-279-31	(75ES/700)...CERAMIC	75PF	10%	50V
	*A-2006-292-A	(75ES)...MOUNTED PCB, MAIN	C182	1-162-179-11	(75ES/700)...CERAMIC	0.1MF		50V
	*A-2006-303-A	(55ES)...MOUNTED PCB, MAIN						
912	*1-633-814-11	PC BOARD, TRANSISTER	C201	1-136-439-11	FILM	330PF	5%	630V
913	*1-533-213-31	HOLDER, FUSE	C202	1-136-253-11	FILM	0.0018MF	3%	100V
914	*A-2006-244-A	(55ES:AEP)...MOUNTED PCB, POWER	C203	1-136-433-11	FILM	100PF	5%	630V
	*A-2006-293-A	(75ES/700)...MOUNTED PCB, POWER						
	*A-2006-296-A	(55ES:UK)....MOUNTED PCB, POWER	C204	1-136-253-11	FILM	0.0018MF	3%	100V
915	*1-633-726-11	PC BOARD, CASSETTE COMPARTMENT MOTOR	C205	1-136-433-11	FILM	100PF	5%	630V
916	*1-633-727-11	PC BOARD, CASSETTE COMPARTMENT IN	C206	1-136-433-11	FILM	100PF	5%	630V
917	*1-633-728-11	PC BOARD, CASSETTE COMPARTMENT OUT						
918	*1-635-440-11	PC BOARD, A/D	C207	1-136-433-11	FILM	100PF	5%	630V
951	*A-2006-139-A	MOUNTED PCB, RF AMPLIFIER	C208	1-136-233-11	FILM	0.0047MF	3%	100V
952	*A-2006-140-A	MOUNTED PCB, DRUM DRIVE	C209	1-136-228-11	FILM	0.0012MF	3%	100V
953	*1-633-711-11	PC BOARD, END SENSOR (S)	C210	1-126-062-11	ELECT	47MF	20%	63V
954	*1-633-713-11	PC BOARD, CONTROL MOTOR	C211	1-126-059-11	ELECT	10MF	20%	63V
955	*1-633-710-11	PC BOARD, RECOGNITION	C220	1-126-062-11	ELECT	47MF	20%	63V
956	*1-633-712-11	PC BOARD, END SENSOR (T)	C221	1-126-062-11	ELECT	47MF	20%	63V
957	*1-633-709-11	PC BOARD, REEL FG	C222	1-136-153-00	FILM	0.01MF	5%	50V
958	8-848-513-11	DRUM ASSY DOU-02D	C302	1-130-834-00	FILM	1MF	10%	63V
C01	1-162-851-11	CERAMIC	C303	1-162-211-31	CERAMIC	33PF	5%	50V
C02	1-163-038-00	CERAMIC CHIP	C304	1-136-165-00	FILM	0.1MF	5%	50V
		0.1MF	C305	1-136-165-00	FILM	0.1MF	5%	50V
		16V	C306	1-136-153-00	FILM	0.01MF	5%	50V
		25V	C308	1-136-157-00	(75ES/700)...FILM	0.022MF	5%	50V
C101	1-136-439-11	FILM	C309	1-124-482-11	(75ES/700)...ELECT	33MF	20%	25V
C101A	1-124-925-11	ELECT	C310	1-162-294-31	CERAMIC	0.001MF	10%	50V
		330PF	C311	1-162-199-31	CERAMIC	10PF	5%	50V
		5%	C312	1-162-199-31	CERAMIC	10PF	5%	50V
		2.2MF						
C102	1-136-253-11	FILM	C313	1-162-201-31	CERAMIC	12PF	5%	50V
C102A	1-123-875-11	ELECT	C314	1-162-201-31	CERAMIC	12PF	5%	50V
		0.0018MF	C315	1-162-294-31	CERAMIC	0.001MF	10%	50V
		3%						
		10MF	C316	1-130-834-00	FILM	1MF	10%	63V
C103	1-136-433-11	FILM	C317	1-162-294-31	CERAMIC	0.001MF	10%	50V
C103A	1-164-161-11	CERAMIC CHIP	C318	1-102-959-00	CERAMIC	22PF	5%	50V
		0.0022MF						
C104	1-136-253-11	FILM						
C104A	1-163-017-00	CERAMIC CHIP						
		0.0047MF						
C105	1-136-433-11	FILM						
C105A	1-164-161-11	CERAMIC CHIP						
		0.0022MF						

Ref.No.	Part No.	Description					Ref.No.	Part No.	Description			
C319	1-162-179-11	CERAMIC	0.1MF		50V		C502	1-162-179-11	CERAMIC	0.1MF		50V
C320	1-126-022-11	ELECT	47MF	20%	10V		C503	1-126-023-11	ELECT	100MF	20%	25V
C321	1-162-201-31	CERAMIC	12PF	5%	50V		C504	1-136-165-00	FILM	0.1MF	5%	50V
C322	1-162-201-31	CERAMIC	12PF	5%	50V		C505	1-126-023-11	ELECT	100MF	20%	25V
C323	1-162-179-11	CERAMIC	0.1MF		50V		C506	1-136-165-00	FILM	0.1MF	5%	50V
C324	1-164-159-11	CERAMIC	0.1MF		50V		C507	1-126-023-11	ELECT	100MF	20%	25V
C325	1-162-179-11	CERAMIC	0.1MF		50V		C508	1-136-165-00	FILM	0.1MF	5%	50V
C328	1-162-294-31	CERAMIC	0.001MF	10%	50V		C511	1-126-023-11	ELECT	100MF	20%	25V
C329	1-124-994-11	ELECT	100MF	20%	10V		C512	1-136-165-00	FILM	0.1MF	5%	50V
C330	1-162-294-31	CERAMIC	0.001MF	10%	50V		C513	1-136-165-00	FILM	0.1MF	5%	50V
C331	1-162-294-31	CERAMIC	0.001MF	10%	50V		C514	1-126-023-11	ELECT	100MF	20%	25V
C332	1-136-165-00	FILM	0.1MF	5%	50V		C515	1-136-165-00	FILM	0.1MF	5%	50V
C333	1-136-165-00	FILM	0.1MF	5%	50V		C516	1-126-023-11	ELECT	100MF	20%	25V
C334	1-162-290-31	CERAMIC	470PF	10%	50V		C517	1-136-165-00	FILM	0.1MF	5%	50V
C335	1-161-377-00	CERAMIC	0.0047MF	30%	16V		C518	1-126-023-11	ELECT	100MF	20%	25V
C336	1-126-022-11	ELECT	47MF	20%	10V		C519	1-136-165-00	FILM	0.1MF	5%	50V
C337	1-162-179-11	CERAMIC	0.1MF		50V		C520	1-124-713-11	ELECT	470MF	20%	35V
C338	1-136-157-00	FILM	0.022MF	5%	50V		C521	1-126-024-11	ELECT	220MF	20%	25V
C339	1-130-473-00	MYLAR	0.0015MF	5%	50V		C522	1-126-024-11	ELECT	220MF	20%	25V
C340	1-136-158-00	FILM	0.027MF	5%	50V		C523	1-162-179-11	CERAMIC	0.1MF		50V
C341	1-136-153-00	FILM	0.01MF	5%	50V		C524	1-130-834-00	FILM	1MF	10%	63V
C342	1-130-474-00	MYLAR	0.0018MF	5%	50V		C525	1-136-153-00	FILM	0.01MF	5%	50V
C343	1-136-159-00	FILM	0.033MF	5%	50V		C526	1-162-284-31	CERAMIC	150PF	10%	50V
C344	1-136-154-00	FILM	0.012MF	5%	50V		C527	1-162-199-31	CERAMIC	10PF	5%	50V
C345	1-136-154-00	FILM	0.012MF	5%	50V		C528	1-126-062-11	ELECT	47MF	20%	63V
C346	1-136-159-00	FILM	0.033MF	5%	50V		C529	1-162-199-31	CERAMIC	10PF	5%	50V
C347	1-130-474-00	MYLAR	0.0018MF	5%	50V		C530	1-162-211-31	CERAMIC	33PF	5%	50V
C349	1-126-022-11	ELECT	47MF	20%	10V		C531	1-136-157-00	FILM	0.022MF	5%	50V
C350	1-162-294-31	CERAMIC	0.001MF	10%	50V		C532	1-136-157-00	FILM	0.022MF	5%	50V
C351	1-162-294-31	CERAMIC	0.001MF	10%	50V		C533	1-136-157-00	FILM	0.022MF	5%	50V
C352	1-136-157-00	FILM	0.022MF	5%	50V		C534	1-162-179-11	CERAMIC	0.1MF		50V
C353	1-136-157-00	FILM	0.022MF	5%	50V		C535	1-124-922-11	ELECT	1000MF	20%	63V
C354	1-126-022-11	ELECT	47MF	20%	10V		C536	1-124-922-11	ELECT	1000MF	20%	63V
C355	1-164-159-11	CERAMIC	0.1MF		50V		C537	1-126-024-11	ELECT	220MF	20%	25V
C356	1-126-022-11	ELECT	47MF	20%	10V		C538	1-126-024-11	ELECT	220MF	20%	25V
C358	1-126-023-11	ELECT	100MF	20%	25V		C539	1-126-059-11	ELECT	10MF	20%	63V
C365	1-162-179-11	CERAMIC	0.1MF		50V		C540	1-126-059-11	ELECT	10MF	20%	63V
C366	1-164-159-11	CERAMIC	0.1MF		50V		C541	1-124-273-00	ELECT	3.3MF	20%	50V
C367	1-126-022-11	ELECT	47MF	20%	10V		C542	1-126-059-11	ELECT	10MF	20%	63V
C368	1-162-179-11	CERAMIC	0.1MF		50V		C543	1-162-179-11	CERAMIC	0.1MF		50V
C369	1-164-159-11	CERAMIC	0.1MF		50V		C544	1-126-043-11	ELECT	0.47MF	20%	50V
C370	1-126-022-11	ELECT	47MF	20%	10V		C550	1-126-062-11	ELECT	47MF	20%	63V
C403	1-162-294-31	CERAMIC	0.001MF	10%	50V		C551	1-126-062-11	ELECT	47MF	20%	63V
C405	1-124-791-11	ELECT	1MF	20%	50V		C552	1-124-484-11	ELECT	220MF	20%	35V
C406	1-126-022-11	ELECT	47MF	20%	10V		C553	1-124-484-11	ELECT	220MF	20%	35V
C407	1-126-023-11	ELECT	100MF	20%	25V		C554	1-162-179-11	CERAMIC	0.1MF		50V
C412	1-124-473-11	ELECT	1000MF	20%	10V		C555	1-162-179-11	CERAMIC	0.1MF		50V
C413	1-124-927-11	ELECT	4.7MF	20%	50V		C556	1-162-179-11	CERAMIC	0.1MF		50V
C421	1-136-154-00	FILM	0.012MF	5%	50V		C557	1-162-179-11	CERAMIC	0.1MF		50V
C422	1-136-157-00	FILM	0.022MF	5%	50V		C558	1-136-165-00	FILM	0.1MF	5%	50V
C423	1-162-207-31	CERAMIC	22PF	5%	50V		C559	1-126-059-11	ELECT	10MF	20%	63V
C424	1-164-159-11	CERAMIC	0.1MF		50V		C701	1-124-584-00	ELECT	100MF	20%	10V
C425	1-164-159-11	CERAMIC	0.1MF		50V		C702	1-124-994-11	ELECT	100MF	20%	10V
C426	1-124-927-11	ELECT	4.7MF	20%	50V		C710	1-164-159-11	CERAMIC	0.1MF		50V
C427	1-126-023-11	ELECT	100MF	20%	25V		C711	1-164-159-11	CERAMIC	0.1MF		50V
C430	1-124-927-11	ELECT	4.7MF	20%	50V		C712	1-164-159-11	CERAMIC	0.1MF		50V
C501	1-162-179-11	CERAMIC	0.1MF		50V		C713	1-164-159-11	CERAMIC	0.1MF		50V

Ref.No.	Part No.	Description				Ref.No.	Part No.	Description
C714	1-164-159-11	CERAMIC	0.1MF		50V	CN01	*1-564-336-00	PIN, CONNECTOR 2P
C901	1-126-017-11	ELECT	6800MF	20%	16V	CN02	*1-564-336-61	PIN, CONNECTOR 2P
C902	1-164-159-11	CERAMIC	0.1MF		50V	CN03	*1-564-498-11	PIN, CONNECTOR 5P
C903	1-126-016-11	ELECT	4700MF	20%	16V	CN034	*1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P
C904	1-124-473-11	ELECT	1000MF	20%	10V	CN035	*1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P
C905	1-126-104-11	ELECT	470MF	20%	35V	CN036	*1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P
C906	1-126-104-11	ELECT	470MF	20%	35V	CN037	*1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P
C907	1-124-473-11	ELECT	1000MF	20%	10V	CN051	*1-563-660-11	CONNECTOR 9P
C908	1-126-052-11	ELECT	100MF	20%	50V	CN052	*1-563-660-11	CONNECTOR 9P
C909	1-164-159-11	CERAMIC	0.1MF		50V	CN102	*1-568-369-11	HOUSING,CONNECTOR(PC BOARD) 8P
C910	1-126-129-11	ELECT	6800MF	20%	35V	CN103	*1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P
C911	1-126-129-11	ELECT	6800MF	20%	35V	CN104	*1-564-337-61	PIN, CONNECTOR 3P
C912	1-124-130-00	ELECT	100MF	20%	63V	CN105	*1-564-337-00	PIN, CONNECTOR 3P
C913	1-124-922-11	ELECT	1000MF	20%	63V	CN106	*1-564-338-00	PIN, CONNECTOR 4P
C914	1-124-922-11	ELECT	1000MF	20%	63V	CN131	*1-564-712-11	PIN, CONNECTOR (SMALL TYPE)10P
C922	△.1-161-742-00	CERAMIC	0.0022MF	20%	400V	CN132	*1-564-709-11	PIN, CONNECTOR (SMALL TYPE) 7P
C923	△.1-161-742-00	CERAMIC	0.0022MF	20%	400V	CN151	*1-564-519-11	PLUG, CONNECTOR 4P
C924	△.1-161-742-00	(55ES)...CERAMIC	0.0022MF	20%	400V	CN301	*1-564-706-31	PIN, CONNECTOR (SMALL TYPE) 4P
C925	△.1-161-742-00	CERAMIC	0.0022MF	20%	400V	CN302	*1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P
C926	1-136-165-00	FILM	0.1MF	5%	50V	CN304	*1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P
C927	1-136-177-00	FILM	1MF	5%	50V	CN305	*1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P
C928	△.1-161-744-00	CERAMIC	0.01MF		400V	CN307	*1-564-714-11	PIN, CONNECTOR (SMALL TYPE)12P
C930	1-164-159-11	CERAMIC	0.1MF		50V	CN308	*1-564-339-00	PIN, CONNECTOR 5P
C931	1-124-556-11	ELECT	2200MF	20%	16V	CN311	*1-564-712-11	PIN, CONNECTOR (SMALL TYPE)10P
C932	1-164-159-11	CERAMIC	0.1MF		50V	CN312	*1-564-709-11	PIN, CONNECTOR (SMALL TYPE) 7P
C933	1-164-159-11	CERAMIC	0.1MF		50V	CN332	*1-564-336-00	PIN, CONNECTOR 2P
C951	1-163-038-00	CERAMIC CHIP	0.1MF		25V	CN333	*1-564-514-11	PLUG, CONNECTOR 11P (TEST)
C953	1-163-038-00	CERAMIC CHIP	0.1MF		25V	CN391	*1-564-511-11	PLUG, CONNECTOR 8P
C954	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	CN392	*1-564-506-11	PLUG, CONNECTOR 3P
C955	1-164-005-11	CERAMIC CHIP	0.47MF		25V	CN393	*1-564-505-11	PLUG, CONNECTOR 2P
C956	1-124-778-00	ELECT CHIP	22MF	20%	6.3V	CN394	*1-564-505-11	(75ES/700)...PLUG, CONNECTOR 2P
C957	1-163-038-00	CERAMIC CHIP	0.1MF		25V	CN501	*1-560-339-00	PIN, CONNECTOR 9P
C958	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	CN502	*1-560-339-00	PIN, CONNECTOR 9P
C959	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	CN512	*1-564-519-11	PLUG, CONNECTOR 4P
C960	1-163-011-11	CERAMIC CHIP	0.0015MF	10%	50V	CN513	*1-564-507-11	PLUG, CONNECTOR 4P
C961	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	CN515	*1-564-507-11	PLUG, CONNECTOR 4P
C962	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	CN516	*1-564-507-11	PLUG, CONNECTOR 4P
C963	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	CN571	*1-564-341-11	PIN, CONNECTOR 7P
C965	1-164-298-11	CERAMIC CHIP	0.15MF	10%	25V	CN572	*1-564-340-61	PIN, CONNECTOR 6P
C966	1-163-038-00	CERAMIC CHIP	0.1MF		25V	CN573	*1-564-338-00	PIN, CONNECTOR 4P
C967	1-124-778-00	ELECT CHIP	22MF	20%	6.3V	CN576	*1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P
C968	1-163-038-00	CERAMIC CHIP	0.1MF		25V	CN774	*1-564-342-11	PIN, CONNECTOR 8P
C969	1-164-005-11	CERAMIC CHIP	0.47MF		25V	CN775	*1-564-336-00	PIN, CONNECTOR 2P
C971	1-164-298-11	CERAMIC CHIP	0.15MF	10%	25V	CN901	*1-564-321-00	PIN, CONNECTOR 2P
C973	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	CN933	*1-564-518-11	PLUG, CONNECTOR 3P
C974	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	CN951	*1-564-722-11	PIN, CONNECTOR (SMALL TYPE) 6P
C975	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	CN952	*1-564-728-11	PIN, CONNECTOR (SMALL TYPE)12P
C976	1-163-011-11	CERAMIC CHIP	0.0015MF	10%	50V	D305	8-719-107-94	DIODE 1SS202-1
C977	1-163-020-00	CERAMIC CHIP	0.0082MF	10%	50V	D306	8-719-200-82	DIODE 11ES2
C978	1-162-638-11	CERAMIC CHIP	1MF		16V	D313	8-719-914-13	DIODE HZ4CLL
C979	1-163-020-00	CERAMIC CHIP	0.0082MF	10%	50V	D314	8-719-200-82	DIODE 11ES2
C980	1-163-809-11	CERAMIC CHIP	0.047MF	10%	25V	D320	8-719-107-94	DIODE 1SS202-1
C981	1-163-809-11	CERAMIC CHIP	0.047MF	10%	25V	D501	8-719-901-59	DIODE KV1320
C982	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	D502	8-719-903-27	DIODE 1SS168
C983	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V	D503	8-719-107-94	DIODE 1SS202-1
C984	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	D504	8-719-200-77	DIODE 10E2N
C985	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	D505	8-719-200-82	DIODE 11ES2



**Note:**  
The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.


Ref.No.	Part No.	Description
D506	8-719-200-82	DIODE 11ES2
D507	8-719-107-94	DIODE 1SS202-1
D510	8-719-107-94	DIODE 1SS202-1
D511	8-719-107-94	DIODE 1SS202-1
D512	8-719-107-94	DIODE 1SS202-1
D513	8-719-107-94	DIODE 1SS202-1
D701	8-719-107-94	DIODE 1SS202-1
D703	8-719-107-94	DIODE 1SS202-1
D901	8-719-311-72	DIODE RBV-406H-01
D905	8-719-200-82	DIODE 11ES2
D906	8-719-200-82	DIODE 11ES2
D907	8-719-200-89	DIODE 31DF2-FA
D908	8-719-200-89	DIODE 31DF2-FA
D909	8-719-200-89	DIODE 31DF2-FA
D910	8-719-200-89	DIODE 31DF2-FA
D911	8-719-107-94	DIODE 1SS202-1
D912	8-719-107-94	DIODE 1SS202-1
D913	8-719-200-82	DIODE 11ES2
D914	8-719-200-82	DIODE 11ES2
D915	8-719-200-82	DIODE 11ES2
D916	8-719-200-82	DIODE 11ES2
D931	8-719-107-94	DIODE 1SS202-1
D933	8-719-107-94	DIODE 1SS202-1
D934	8-719-200-82	DIODE 11ES2
F901	△.1-532-286-00	(55ES).....FUZE, TIME-LAG (2.5A)
F901	△.1-532-744-11	(75ES/700)...FUZE, GLASS TUBE (2.5A)
FL701	1-519-562-11	INDICATOR TUBE, FLUORESCENT
IC11	8-759-013-22	IC LM358M
IC101	8-759-900-72	IC NE5532P
IC101A	8-759-107-68	IC CX20115A
IC102	8-759-900-72	IC NE5532P
IC102A	8-759-013-22	IC LM358M
IC201	8-759-900-72	IC NE5532P
IC202	8-759-900-72	IC NE5532P
IC301	8-759-917-18	IC SN74HC04N
IC302	8-759-232-49	IC TC74HC132AP
IC303	8-759-917-18	IC SN74HC04N
IC304	8-759-135-80	IC UPC358C
IC305	8-759-926-17	IC SN74HC153NS
IC306	8-759-947-57	IC CXD1136Q
IC307	8-752-334-27	IC CXD2601Q
IC308	8-759-906-24	IC SN74LS624N
IC309	8-759-925-90	IC SN74HC74NS
IC310	8-752-330-68	IC CXK58257M-12L
IC311	8-752-030-63	IC CXA1046M
IC312	8-752-816-04	IC CXP80524-012Q
IC314	8-759-008-71	IC LM324N
IC315	8-759-916-20	IC SN74HC14N
IC316	8-759-135-80	IC UPC358C
IC317	8-759-987-16	IC LM393P
IC318	8-759-135-80	IC UPC358C
IC319	8-759-910-70	IC MB3763PS
IC320	8-759-633-65	IC M54641L
IC321	8-759-971-12	IC PST529E
IC322	8-759-604-35	IC M5F78M05L
IC331	8-759-977-72	IC GP1F31R (DIGITAL IN OPTICAL)

Ref.No.	Part No.	Description
IC332	8-759-977-71	IC GP1F31T (DIGITAL OUT OPTICAL)
IC333	8-759-917-18	IC SN74HC04N
IC431	8-759-925-78	IC SN74HC10NS
IC432	8-759-995-76	IC PST529C
IC501	8-759-999-32	IC SM5813APT
IC503	8-759-917-11	IC SN74HC393N
IC504	8-752-335-51	(75ES).....IC CXD2552Q-1
IC504	8-752-335-52	(55ES/700)...IC CXD2552Q-2
IC505	8-759-250-81	IC TC5081AP
IC506	8-759-031-58	IC SC75U04F
IC507	8-759-604-35	IC M5F78M05L
IC508	8-759-604-36	IC M5F78M08L
IC509	8-759-981-98	IC RC4560DD
IC510	8-759-945-58	IC RC4558P
IC520	8-759-602-83	IC M5238P
IC521	8-759-972-47	IC LF412CN
IC522	8-759-999-09	IC CS5326-KP
IC523	8-759-604-35	IC M5F78M05L
IC524	8-759-982-52	IC RC79M05FA
IC701	8-752-811-84	IC CXP5058H-652Q
IC702	8-759-995-09	IC MSM6338RS
IC703	8-752-330-59	IC CXK1011P
IC704	8-749-920-59	IC AIQH3020S
IC931	8-759-148-79	IC UPC2406HF
IC932	8-759-634-55	IC M5F7805L-720
IC951	8-752-032-26	IC CXA1045Q
J151	1-568-101-11	JACK, PIN 4P (LINE IN/OUT)
J161	1-565-327-11	JACK, LARGE TYPE 1P (PHONES)
J181	1-566-922-21	(75ES/700)...JACK, PIN 1P (DIGITAL OUT COAXIAL)
J191	1-568-750-21	JACK, PIN (1P SHIELD TYPE) (DIGITAL IN COAXIAL)
JW11	1-216-295-00	METAL GLAZE 0 5% 1/10W
JW12	1-216-295-00	METAL GLAZE 0 5% 1/10W
JW101	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW102	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW103	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW104	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW105	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW106	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW107	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW108	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW109	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW110	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW111	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW112	1-216-296-00	METAL GLAZE 0 5% 1/8W
JW113	1-216-296-00	METAL GLAZE 0 5% 1/8W
L301	1-410-509-11	INDUCTOR 10UH
L302	1-410-498-11	INDUCTOR 1.2UH
L303	1-410-509-11	INDUCTOR 10UH
L304	1-410-509-11	INDUCTOR 10UH
L305	1-410-509-11	INDUCTOR 10UH
L306	1-410-509-11	INDUCTOR 10UH
L307	1-410-509-11	INDUCTOR 10UH
L310	1-410-953-11	(75ES/700)...INDUCTOR, SMALL TYPE
L501	1-460-042-11	COIL (WITH CORE) 4.7UH

**Note:**

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



Ref.No.	Part No.	Description
L502	1-460-042-11	COIL (WITH CORE) 4.7UH
L503	1-410-324-11	INDUCTOR 4.7UH
L505	1-410-324-11	INDUCTOR 4.7UH
L506	1-410-324-11	INDUCTOR 4.7UH
L901	1-424-051-11	COIL, LINE FILTER
L951	1-408-777-00	INDUCTOR CHIP 10UH
L952	1-408-791-00	INDUCTOR CHIP 150UH
L953	1-408-791-00	INDUCTOR CHIP 150UH
M901	A-2003-448-A	MOTOR ASSY (CASSETTE COMPARTMENT)
M902	8-835-306-01	MOTOR, DC U-17A (CAPSTAN)
M903	A-2003-545-A	MOTOR ASSY (CONTROL)
M905	8-835-346-11	MOTOR, DC U-16B (REEL)
PH11	8-719-751-42	DIODE NJL5141E-AA
PH21	8-719-751-42	DIODE NJL5141E-AA
PH901	1-808-957-11	PHOTO SENSOR (END T)
PH902	1-808-957-11	PHOTO SENSOR (END S)
PL301	1-518-664-11	LAMP, PILOT
PL302	1-518-664-11	LAMP, PILOT
PM901	1-464-724-31	ENCODER, ROTARY
PM902	1-454-462-21	SOLENOID, PLUNGER (LOADING)
PM903	1-454-482-21	SOLENOID, PLUNGER (REEL MOTOR CONTROL)
Q11	8-729-216-22	TRANSISTOR 2SA1162
Q21	8-729-216-22	TRANSISTOR 2SA1162
Q101	8-729-107-85	TRANSISTOR 2SC3623A-K
Q101A	8-729-100-66	TRANSISTOR 2SC1623
Q102	8-729-107-85	TRANSISTOR 2SC3623A-K
Q102A	8-729-101-07	TRANSISTOR 2SB798-DL
Q103	8-729-107-85	TRANSISTOR 2SC3623A-K
Q201	8-729-107-85	TRANSISTOR 2SC3623A-K
Q202	8-729-107-85	TRANSISTOR 2SC3623A-K
Q203	8-729-107-85	TRANSISTOR 2SC3623A-K
Q301	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q302	8-729-801-93	TRANSISTOR 2SD1387
Q303	8-729-400-82	TRANSISTOR 2SD1266-P
Q304	8-729-801-84	TRANSISTOR 2SB1013-4
Q305	8-729-900-80	TRANSISTOR DTC114ES
Q306	8-729-900-80	TRANSISTOR DTC114ES
Q317	8-729-900-80	TRANSISTOR DTC114ES
Q318	8-729-900-80	TRANSISTOR DTC114ES
Q319	8-729-900-80	TRANSISTOR DTC114ES
Q320	8-729-801-84	TRANSISTOR 2SB1013-4
Q321	8-729-801-93	TRANSISTOR 2SD1387
Q322	8-729-900-80	TRANSISTOR DTC114ES
Q401	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q402	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q502	8-729-200-56	TRANSISTOR 2SK241GR
Q503	8-729-200-56	TRANSISTOR 2SK241GR
Q504	8-729-900-61	TRANSISTOR DTA114ES
Q505	8-729-900-80	TRANSISTOR DTC114ES
Q506	8-729-900-61	TRANSISTOR DTA114ES
Q507	8-729-900-80	TRANSISTOR DTC114ES
Q508	8-729-900-80	TRANSISTOR DTC114ES
Q509	8-729-900-61	TRANSISTOR DTA114ES
Q510	8-729-107-85	TRANSISTOR 2SC3623A-K
Q511	8-729-900-61	TRANSISTOR DTA114ES
Q701	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE

Ref.No.	Part No.	Description
Q707	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q708	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q901	8-729-140-93	TRANSISTOR 2SB733-34
Q902	8-729-167-72	TRANSISTOR 2SC2676-1F
Q903	8-729-127-53	TRANSISTOR 2SC2275-P
Q904	8-729-167-72	TRANSISTOR 2SC2676-1F
Q905	8-729-113-92	TRANSISTOR 2SA1138-1F
Q906	8-729-190-53	TRANSISTOR 2SA985A
Q907	8-729-113-92	TRANSISTOR 2SA1138-1F
Q921	8-729-900-80	TRANSISTOR DTC114ES
Q922	8-729-900-80	TRANSISTOR DTC114ES
Q923	8-729-203-02	TRANSISTOR 2SK30A-0
Q924	8-729-203-02	TRANSISTOR 2SK30A-0
Q925	8-729-920-97	TRANSISTOR 2SB1187-EF
Q931	8-729-900-80	TRANSISTOR DTC114ES
Q932	8-729-119-76	TRANSISTOR 2SA1175-HFE
R11	1-216-041-00	METAL GLAZE 470 5%
R12	1-216-081-00	METAL GLAZE 22K 5%
R13	1-216-073-00	METAL GLAZE 10K 5%
R14	1-216-103-00	METAL GLAZE 180K 5%
R15	1-216-057-00	METAL GLAZE 2.2K 5%
R16	1-216-077-00	METAL GLAZE 15K 5%
R17	1-216-067-00	METAL GLAZE 5.6K 5%
R21	1-216-041-00	METAL GLAZE 470 5%
R22	1-216-081-00	METAL GLAZE 22K 5%
R23	1-216-073-00	METAL GLAZE 10K 5%
R24	1-216-103-00	METAL GLAZE 180K 5%
R25	1-216-057-00	METAL GLAZE 2.2K 5%
R101	1-247-154-00	CARBON 9.1K 5%
R101A	1-216-061-00	METAL GLAZE 3.3K 5%
R102	1-247-154-00	CARBON 9.1K 5%
R102A	1-216-075-00	METAL GLAZE 12K 5%
R103	1-247-721-11	CARBON 4.7K 5%
R103A	1-216-029-00	METAL GLAZE 150 5%
R104	1-247-721-11	CARBON 4.7K 5%
R104A	1-216-058-00	METAL GLAZE 2.4K 5%
R105	1-247-152-00	CARBON 8.2K 5%
R105A	1-216-057-00	METAL GLAZE 2.2K 5%
R106	1-249-583-11	CARBON 20K 5%
R106A	1-216-084-00	METAL GLAZE 30K 5%
R107	1-247-152-00	CARBON 8.2K 5%
R107A	1-216-073-00	METAL GLAZE 10K 5%
R108	1-249-583-11	CARBON 20K 5%
R108A	1-216-073-00	METAL GLAZE 10K 5%
R109	1-247-722-11	CARBON 5.6K 5%
R109A	1-216-073-00	METAL GLAZE 10K 5%
R110	1-247-722-11	CARBON 5.6K 5%
R110A	1-216-089-00	METAL GLAZE 47K 5%
R111	1-247-722-11	CARBON 5.6K 5%
R111A	1-216-073-00	METAL GLAZE 10K 5%
R112	1-247-722-11	CARBON 5.6K 5%
R112A	1-216-049-00	METAL GLAZE 1K 5%
R113	1-249-556-11	CARBON 1.5K 5%
R113A	1-216-025-00	METAL GLAZE 100 5%

**Note:**

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.



**Note:**

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


Ref.No.	Part No.	Description			
R114	1-249-556-11	CARBON	1.5K	5%	1/4W
R115	1-249-469-11	CARBON	100K	5%	1/4W
R116	1-247-704-11	CARBON	220	5%	1/4W
R117	1-249-469-11	CARBON	100K	5%	1/4W
R118	1-249-497-11	CARBON	33K	5%	1/4W
R119	1-247-721-11	CARBON	4.7K	5%	1/4W
R120	1-249-462-11	CARBON	22K	5%	1/4W
R121	1-247-704-11	CARBON	220	5%	1/4W
R122	1-249-429-11	CARBON	10K	5%	1/4W
R123	1-249-429-11	CARBON	10K	5%	1/4W
R124	1-249-429-11	CARBON	10K	5%	1/4W
R125	1-246-545-00	CARBON	1M	5%	1/4W
R126	1-246-545-00	CARBON	1M	5%	1/4W
R130	1-246-545-00	CARBON	1M	5%	1/4W
R131	1-247-717-11	CARBON	2.2K	5%	1/4W
R132	1-249-586-11	CARBON	27K	5%	1/4W
R133	1-249-469-11	CARBON	100K	5%	1/4W
R134	1-249-520-11	CARBON	47	5%	1/4W
R135	1-249-512-11	CARBON	22	5%	1/4W
R151	1-249-586-11	CARBON	27K	5%	1/4W
R152	1-249-586-11	CARBON	27K	5%	1/4W
R153	1-249-657-11	CARBON	220	5%	1/2W
R154	1-249-657-11	CARBON	220	5%	1/2W
R181	1-249-405-11	(75ES/700)...CARBON	100	5%	1/4W
R183	1-247-804-11	(75ES/700)...CARBON	75	5%	1/4W
R191	1-247-804-11	CARBON	75	5%	1/4W
R201	1-247-154-00	CARBON	9.1K	5%	1/4W
R202	1-247-154-00	CARBON	9.1K	5%	1/4W
R203	1-247-721-11	CARBON	4.7K	5%	1/4W
R204	1-247-721-11	CARBON	4.7K	5%	1/4W
R205	1-247-152-00	CARBON	8.2K	5%	1/4W
R206	1-249-583-11	CARBON	20K	5%	1/4W
R207	1-247-152-00	CARBON	8.2K	5%	1/4W
R208	1-249-583-11	CARBON	20K	5%	1/4W
R209	1-247-722-11	CARBON	5.6K	5%	1/4W
R210	1-247-722-11	CARBON	5.6K	5%	1/4W
R211	1-247-722-11	CARBON	5.6K	5%	1/4W
R212	1-247-722-11	CARBON	5.6K	5%	1/4W
R213	1-249-556-11	CARBON	1.5K	5%	1/4W
R214	1-249-556-11	CARBON	1.5K	5%	1/4W
R215	1-249-469-11	CARBON	100K	5%	1/4W
R216	1-247-704-11	CARBON	220	5%	1/4W
R217	1-249-469-11	CARBON	100K	5%	1/4W
R218	1-249-497-11	CARBON	33K	5%	1/4W
R219	1-247-721-11	CARBON	4.7K	5%	1/4W
R220	1-249-462-11	CARBON	22K	5%	1/4W
R221	1-247-704-11	CARBON	220	5%	1/4W
R222	1-249-429-11	CARBON	10K	5%	1/4W
R223	1-249-429-11	CARBON	10K	5%	1/4W
R224	1-249-429-11	CARBON	10K	5%	1/4W
R225	1-246-545-00	CARBON	1M	5%	1/4W
R226	1-246-545-00	CARBON	1M	5%	1/4W
R230	1-246-545-00	CARBON	1M	5%	1/4W
R231	1-247-717-11	CARBON	2.2K	5%	1/4W
R232	1-249-586-11	CARBON	27K	5%	1/4W
R233	1-249-469-11	CARBON	100K	5%	1/4W
R234	1-249-520-11	CARBON	47	5%	1/4W

Ref.No.	Part No.	Description			
R235	1-249-512-11	CARBON	22	5%	1/4W
R302	1-249-437-11	CARBON	47K	5%	1/4W
R303	1-249-421-11	CARBON	2.2K	5%	1/4W
R304	1-249-417-11	CARBON	1K	5%	1/4W
R305	1-249-425-11	CARBON	4.7K	5%	1/4W
R306	1-249-441-11	CARBON	100K	5%	1/4W
R307	1-249-429-11	CARBON	10K	5%	1/4W
R308	1-249-429-11	CARBON	10K	5%	1/4W
R309	1-249-421-11	CARBON	2.2K	5%	1/4W
R310	1-249-421-11	CARBON	2.2K	5%	1/4W
R311	1-249-435-11	CARBON	33K	5%	1/4W
R312	1-249-429-11	CARBON	10K	5%	1/4W
R313	1-249-433-11	CARBON	22K	5%	1/4W
R314	1-249-425-11	CARBON	4.7K	5%	1/4W
R315	1-249-433-11	CARBON	22K	5%	1/4W
R316	1-249-429-11	CARBON	10K	5%	1/4W
R317	1-247-830-11	CARBON	910	5%	1/4W
R318	1-249-437-11	CARBON	47K	5%	1/4W
R319	1-249-411-11	CARBON	330	5%	1/4W
R320	1-249-437-11	CARBON	47K	5%	1/4W
R323	1-249-401-11	CARBON	47	5%	1/4W
R324	1-249-429-11	CARBON	10K	5%	1/4W
R325	1-249-429-11	CARBON	10K	5%	1/4W
R326	1-249-429-11	CARBON	10K	5%	1/4W
R327	1-249-437-11	CARBON	47K	5%	1/4W
R328	1-249-437-11	CARBON	47K	5%	1/4W
R329	1-249-437-11	CARBON	47K	5%	1/4W
R330	1-249-437-11	CARBON	47K	5%	1/4W
R331	1-249-437-11	CARBON	47K	5%	1/4W
R332	1-249-437-11	CARBON	47K	5%	1/4W
R333	1-249-401-11	CARBON	47	5%	1/4W
R336	1-249-417-11	CARBON	1K	5%	1/4W
R337	1-249-417-11	CARBON	1K	5%	1/4W
R338	1-249-435-11	CARBON	33K	5%	1/4W
R339	1-249-435-11	CARBON	33K	5%	1/4W
R340	1-249-419-11	CARBON	1.5K	5%	1/4W
R341	1-249-435-11	CARBON	33K	5%	1/4W
R342	1-249-429-11	CARBON	10K	5%	1/4W
R343	1-249-435-11	CARBON	33K	5%	1/4W
R344	1-249-419-11	CARBON	1.5K	5%	1/4W
R345	1-249-429-11	CARBON	10K	5%	1/4W
R346	1-249-435-11	CARBON	33K	5%	1/4W
R347	1-249-435-11	CARBON	33K	5%	1/4W
R348	1-249-425-11	CARBON	4.7K	5%	1/4W
R349	1-249-425-11	CARBON	4.7K	5%	1/4W
R350	1-249-417-11	CARBON	1K	5%	1/4W
R351	△.1-215-881-11	METAL OXIDE	15	5%	2W F
R352	1-249-417-11	CARBON	1K	5%	1/4W
R353	1-249-401-11	CARBON	47	5%	1/4W
R361	1-249-413-11	CARBON	470	5%	1/4W
R362	1-249-393-11	CARBON	10	5%	1/4W
R363	1-249-413-11	CARBON	470	5%	1/4W
R368	1-249-433-11	CARBON	22K	5%	1/4W
R369	1-249-423-11	CARBON	3.3K	5%	1/4W
R370	1-249-423-11	CARBON	3.3K	5%	1/4W
R371	1-249-423-11	CARBON	3.3K	5%	1/4W
R372	1-247-727-11	CARBON	10	5%	1/2W

**Note:**



The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


**Note:**

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description			
R382	1-249-429-11	CARBON	10K	5%	1/4W
R383	1-249-433-11	CARBON	22K	5%	1/4W
R384	1-249-429-11	CARBON	10K	5%	1/4W
R385	1-249-433-11	CARBON	22K	5%	1/4W
R401	1-249-425-11	CARBON	4.7K	5%	1/4W
R402	1-249-429-11	CARBON	10K	5%	1/4W
R403	1-249-429-11	CARBON	10K	5%	1/4W
R404	1-249-429-11	CARBON	10K	5%	1/4W
R405	1-247-804-11	CARBON	75	5%	1/4W
R406	1-247-804-11	CARBON	75	5%	1/4W
R407	1-249-423-11	CARBON	3.3K	5%	1/4W
R408	1-249-423-11	CARBON	3.3K	5%	1/4W
R409	1-249-429-11	CARBON	10K	5%	1/4W
R410	1-249-429-11	CARBON	10K	5%	1/4W
R411	1-249-429-11	CARBON	10K	5%	1/4W
R412	1-249-429-11	CARBON	10K	5%	1/4W
R413	1-249-429-11	CARBON	10K	5%	1/4W
R414	1-249-429-11	CARBON	10K	5%	1/4W
R415	1-249-429-11	CARBON	10K	5%	1/4W
R416	1-249-429-11	CARBON	10K	5%	1/4W
R417	1-249-429-11	CARBON	10K	5%	1/4W
R418	1-249-425-11	CARBON	4.7K	5%	1/4W
R419	1-249-425-11	CARBON	4.7K	5%	1/4W
R420	1-249-413-11	CARBON	470	5%	1/4W
R421	1-249-435-11	CARBON	33K	5%	1/4W
R422	1-249-435-11	CARBON	33K	5%	1/4W
R423	1-249-411-11	CARBON	330	5%	1/4W
R424	1-249-429-11	CARBON	10K	5%	1/4W
R431	1-214-808-11	METAL	4.7	1%	1/2W
R437	1-249-409-11	CARBON	220	5%	1/4W
R438	1-249-409-11	CARBON	220	5%	1/4W
R439	1-249-409-11	CARBON	220	5%	1/4W
R440	1-247-804-11	CARBON	75	5%	1/4W
R441	1-249-405-11	CARBON	100	5%	1/4W
R442	1-249-417-11	CARBON	1K	5%	1/4W
R443	1-249-429-11	CARBON	10K	5%	1/4W
R480	1-247-881-00	CARBON	120K	5%	1/4W
R499	1-249-421-11	CARBON	2.2K	5%	1/4W
R507	1-249-417-11	CARBON	1K	5%	1/4W
R508	1-249-423-11	CARBON	3.3K	5%	1/4W
R509	1-249-417-11	CARBON	1K	5%	1/4W
R510	1-249-423-11	CARBON	3.3K	5%	1/4W
R512	1-249-433-11	CARBON	22K	5%	1/4W
R513	1-249-435-11	CARBON	33K	5%	1/4W
R514	1-249-417-11	CARBON	1K	5%	1/4W
R515	1-247-903-00	CARBON	1M	5%	1/4W
R516	1-247-903-00	CARBON	1M	5%	1/4W
R517	1-249-429-11	CARBON	10K	5%	1/4W
R518	1-249-428-11	CARBON	8.2K	5%	1/4W
R519	1-249-441-11	CARBON	100K	5%	1/4W
R520	1-249-417-11	CARBON	1K	5%	1/4W
R521	1-249-417-11	CARBON	1K	5%	1/4W
R522	1-249-417-11	CARBON	1K	5%	1/4W
R524	1-249-417-11	CARBON	1K	5%	1/4W
R525	1-247-903-00	CARBON	1M	5%	1/4W
R527	△.1-212-857-00	FUSIBLE	10	5%	1/4W F
R528	△.1-212-857-00	FUSIBLE	10	5%	1/4W F

Ref.No.	Part No.	Description			
R529	1-249-437-11	CARBON	47K	5%	1/4W
R530	1-249-417-11	CARBON	1K	5%	1/4W
R531	1-249-419-11	CARBON	1.5K	5%	1/4W
R532	1-247-883-00	CARBON	150K	5%	1/4W
R533	1-249-425-11	CARBON	4.7K	5%	1/4W
R534	1-249-413-11	CARBON	470	5%	1/4W
R535	1-249-424-11	CARBON	3.9K	5%	1/4W
R536	1-249-437-11	CARBON	47K	5%	1/4W
R537	1-249-441-11	CARBON	100K	5%	1/4W
R538	1-249-441-11	CARBON	100K	5%	1/4W
R540	1-216-349-00	CARBON	1	5%	1/2W
R550	1-249-504-11	CARBON	10	5%	1/4W
R702	1-249-433-11	CARBON	22K	5%	1/4W
R703	1-249-433-11	CARBON	22K	5%	1/4W
R704	1-249-425-11	CARBON	4.7K	5%	1/4W
R705	1-249-418-11	CARBON	1.2K	5%	1/4W
R706	1-249-420-11	CARBON	1.8K	5%	1/4W
R707	1-249-423-11	CARBON	3.3K	5%	1/4W
R708	1-249-428-11	CARBON	8.2K	5%	1/4W
R709	1-249-425-11	CARBON	4.7K	5%	1/4W
R710	1-249-418-11	CARBON	1.2K	5%	1/4W
R711	1-249-420-11	CARBON	1.8K	5%	1/4W
R712	1-249-423-11	CARBON	3.3K	5%	1/4W
R713	1-249-428-11	CARBON	8.2K	5%	1/4W
R714	1-249-425-11	CARBON	4.7K	5%	1/4W
R715	1-249-418-11	CARBON	1.2K	5%	1/4W
R716	1-249-420-11	CARBON	1.8K	5%	1/4W
R717	1-249-423-11	CARBON	3.3K	5%	1/4W
R718	1-249-428-11	CARBON	8.2K	5%	1/4W
R719	1-249-425-11	CARBON	4.7K	5%	1/4W
R720	1-249-418-11	CARBON	1.2K	5%	1/4W
R721	1-249-420-11	CARBON	1.8K	5%	1/4W
R722	1-249-423-11	CARBON	3.3K	5%	1/4W
R723	1-249-428-11	CARBON	8.2K	5%	1/4W
R724	1-249-425-11	CARBON	4.7K	5%	1/4W
R725	1-249-418-11	CARBON	1.2K	5%	1/4W
R726	1-249-420-11	CARBON	1.8K	5%	1/4W
R727	1-249-423-11	CARBON	3.3K	5%	1/4W
R728	1-249-428-11	CARBON	8.2K	5%	1/4W
R729	1-249-425-11	CARBON	4.7K	5%	1/4W
R730	1-249-418-11	CARBON	1.2K	5%	1/4W
R731	1-249-420-11	CARBON	1.8K	5%	1/4W
R732	1-249-423-11	CARBON	3.3K	5%	1/4W
R733	1-249-428-11	CARBON	8.2K	5%	1/4W
R734	1-249-425-11	CARBON	4.7K	5%	1/4W
R735	1-249-418-11	CARBON	1.2K	5%	1/4W
R736	1-249-420-11	CARBON	1.8K	5%	1/4W
R737	1-249-423-11	CARBON	3.3K	5%	1/4W
R738	1-249-428-11	CARBON	8.2K	5%	1/4W
R739	1-249-425-11	CARBON	4.7K	5%	1/4W
R740	1-249-418-11	CARBON	1.2K	5%	1/4W
R741	1-249-420-11	CARBON	1.8K	5%	1/4W
R742	1-249-423-11	CARBON	3.3K	5%	1/4W
R743	1-249-428-11	CARBON	8.2K	5%	1/4W
R744	1-249-433-11	CARBON	22K	5%	1/4W
R745	1-249-433-11	CARBON	22K	5%	1/4W
R746	1-249-433-11	CARBON	22K	5%	1/4W

**Note:**  
The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description				
R747	1-249-433-11	CARBON	22K	5%	1/4W	
R748	1-249-433-11	CARBON	22K	5%	1/4W	
R749	1-249-433-11	CARBON	22K	5%	1/4W	
R750	1-249-433-11	CARBON	22K	5%	1/4W	
R751	1-249-433-11	CARBON	22K	5%	1/4W	
R755	1-249-441-11	CARBON	100K	5%	1/4W	
R756	1-249-441-11	CARBON	100K	5%	1/4W	
R761	1-249-441-11	CARBON	100K	5%	1/4W	
R762	1-249-441-11	CARBON	100K	5%	1/4W	
R763	1-249-433-11	CARBON	22K	5%	1/4W	
R764	1-249-433-11	CARBON	22K	5%	1/4W	
R771	1-247-764-11	CARBON	10K	5%	1/2W	
R906	1-247-704-11	CARBON	220	5%	1/4W	
R907	1-247-713-11	CARBON	1K	5%	1/4W	
R908	1-247-717-11	CARBON	2.2K	5%	1/4W	
R909	1-249-466-11	CARBON	56K	5%	1/4W	
R910	1-247-713-11	CARBON	1K	5%	1/4W	
R911	1-247-713-11	CARBON	1K	5%	1/4W	
R912	1-247-717-11	CARBON	2.2K	5%	1/4W	
R913	1-247-704-11	CARBON	220	5%	1/4W	
R914	1-247-713-11	CARBON	1K	5%	1/4W	
R915	1-247-717-11	CARBON	2.2K	5%	1/4W	
R916	1-247-717-11	CARBON	2.2K	5%	1/4W	
R927	1-249-429-11	CARBON	10K	5%	1/4W	
R928	△.1-212-865-00	FUSIBLE	22	5%	1/4W	F
R931	1-249-425-11	CARBON	4.7K	5%	1/4W	
R932	△.1-215-889-00	METAL OXIDE	330	5%	2W	F
R933	1-249-425-11	CARBON	4.7K	5%	1/4W	
R934	1-249-433-11	CARBON	22K	5%	1/4W	
R935	1-249-433-11	CARBON	22K	5%	1/4W	
R936	△.1-212-849-00	FUSIBLE	4.7	5%	1/4W	F
R937	1-249-425-11	CARBON	4.7K	5%	1/4W	
R951	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R952	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R953	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R954	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R955	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R956	1-216-083-00	METAL GLAZE	27K	5%	1/10W	
R957	1-216-063-00	METAL GLAZE	3.9K	5%	1/10W	
R958	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R959	1-216-081-00	METAL GLAZE	22K	5%	1/10W	
R960	1-216-079-00	METAL GLAZE	18K	5%	1/10W	
R961	1-216-079-00	METAL GLAZE	18K	5%	1/10W	
R962	1-216-081-00	METAL GLAZE	22K	5%	1/10W	
R963	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R964	1-216-083-00	METAL GLAZE	27K	5%	1/10W	
R965	1-216-063-00	METAL GLAZE	3.9K	5%	1/10W	
R966	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R967	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R968	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R969	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R970	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R971	1-216-095-00	METAL GLAZE	82K	5%	1/10W	
R972	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R973	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R974	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	

Ref.No.	Part No.	Description
RV151	1-238-885-11	RES, VAR 20K/20K (REC LEVEL)
RV161	1-238-359-11	RES, VAR, CARBON 20K/20K (LEVEL)
RV301	1-238-017-11	RES, ADJ, CARBON 22K
RV302	1-238-017-11	RES, ADJ, CARBON 22K
RV303	1-238-015-11	RES, ADJ, CARBON 4.7K
RV304	1-238-015-11	RES, ADJ, CARBON 4.7K
RV305	1-238-017-11	RES, ADJ, CARBON 22K
RV951	1-238-237-11	RES, ADJ, CERMET 470
RV952	1-238-237-11	RES, ADJ, CERMET 470
RY501	1-515-726-11	RELAY
S11	1-570-975-11	SWITCH, SLIDE (CASSETTE TABLE IN)
S12	1-572-247-11	SWITCH, SLIDE (CASSETTE TABLE OUT)
S701	1-571-305-11	SWITCH, PUSH (1 KEY)(POWER)
S702	1-571-520-11	SWITCH, SLIDE (TIMER)
S703	1-570-974-11	SWITCH, SLIDE (REC MODE)
S704	1-572-230-11	SWITCH, ROTARY (INPUT)
S705	1-554-596-21	SWITCH, KEY BOARD (SKIP ID/WRITE)
S706	1-554-596-21	SWITCH, KEY BOARD (SKIP ID/ERASE)
S707	1-554-596-21	SWITCH, KEY BOARD (7)
S708	1-554-596-21	SWITCH, KEY BOARD (8)
S709	1-554-596-21	SWITCH, KEY BOARD (9)
S710	1-554-596-21	SWITCH, KEY BOARD (START ID/WRITE)
S711	1-554-596-21	SWITCH, KEY BOARD (START ID/ERASE)
S712	1-554-596-21	SWITCH, KEY BOARD (4)
S713	1-554-596-21	SWITCH, KEY BOARD (5)
S714	1-554-596-21	SWITCH, KEY BOARD (6)
S715	1-554-596-21	SWITCH, KEY BOARD (START ID/AUDIO)
S716	1-554-596-21	SWITCH, KEY BOARD (START ID/RENUMBER)
S717	1-554-596-21	SWITCH, KEY BOARD (1)
S718	1-554-596-21	SWITCH, KEY BOARD (2)
S719	1-554-596-21	SWITCH, KEY BOARD (3)
S720	1-554-596-21	SWITCH, KEY BOARD (REPEAT)
S721	1-554-596-21	SWITCH, KEY BOARD (SKIP PLAY)
S722	1-554-596-21	SWITCH, KEY BOARD (MARGIN RESET)
S723	1-554-596-21	SWITCH, KEY BOARD (FADER)
S724	1-554-596-21	SWITCH, KEY BOARD (MODE/RESET)
S725	1-554-596-21	SWITCH, KEY BOARD (MODE/COUNTER)
S726	1-554-596-21	SWITCH, KEY BOARD (◀)
S727	1-554-596-21	SWITCH, KEY BOARD (▶)
S728	1-554-937-11	SWITCH, KEY BOARD (●REC)
S729	1-554-937-11	SWITCH, KEY BOARD (   PAUSE)
S730	1-554-937-11	SWITCH, KEY BOARD (▲REC MUTE)
S731	1-554-937-11	SWITCH, KEY BOARD (○OPEN/CLOSE)
S732	1-554-937-11	SWITCH, KEY BOARD (■)
S733	1-554-937-11	SWITCH, KEY BOARD (▶)
S734	1-554-596-21	SWITCH, KEY BOARD (◀)
S735	1-554-596-21	SWITCH, KEY BOARD (▶▶)
S736	1-554-596-21	SWITCH, KEY BOARD (END ID/WRITE)
S737	1-554-596-21	SWITCH, KEY BOARD (END ID/ERASE)
S738	1-554-596-21	SWITCH, KEY BOARD (CLEAR)
S739	1-554-596-21	SWITCH, KEY BOARD (0)
S740	1-554-596-21	SWITCH, KEY BOARD (MUSIC SCAN)
S901	1-571-878-11	SWITCH, PUSH (2 KEY) (CASSETTE IN/REC PROOF)
S902	1-570-771-21	SWITCH (LIMIT)
T182	1-421-946-11	(75ES/700)...TRANSFORMER, PULSE

**Note:**  
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
T901	△.1-450-080-11	(75ES/700)...TRANSFORMER, POWER
T901	△.1-450-164-11	(55ES).....TRANSFORMER, POWER
X301	1-567-816-11	VIBRATOR, CRYSTAL (18.816MHz)
X302	1-567-815-11	VIBRATOR, CRYSTAL (22.5792MHz)
X303	1-578-667-11	VIBRATOR, CRYSTAL (49.152MHz)
X701	1-577-359-21	VIBRATOR, CERAMIC (4.19MHz)
ZD902	8-719-933-33	DIODE HZS6A1L
ZD903	8-719-933-33	DIODE HZS6A1L



ACCESSORY & PACKING MATERIAL

1-465-312-11	REMOTE COMMANDER (RM-D55)
1-558-271-11	(75ES)...CORD, CONNECTION
1-559-533-11	(700)...CORD, CONNECTION
*3-701-613-00	(55ES:AEP/75ES)...BAG, POLYETHYLENE
3-703-450-01	(75ES:US/700)...INSTRUCTION
3-704-366-01	(55ES:AEP/75ES)...SCREW (CASE) (M3X8)
3-751-364-11	(55ES).....MANUAL, INSTRUCTION
3-751-364-21	(700).....MANUAL, INSTRUCTION
3-751-364-41	(55ES:AEP).....MANUAL, INSTRUCTION
3-751-688-21	(75ES).....MANUAL, INSTRUCTION
3-751-688-31	(75ES:Canadian)...MANUAL, INSTRUCTION
3-707-584-01	COVER, BATTERY (for RM-D55)
*4-936-610-01	(55ES)...INDIVIDUAL CARTON
*4-936-611-01	(700)...INDIVIDUAL CARTON
*4-936-623-01	(75ES)...INDIVIDUAL CARTON
*4-931-451-01	(700).....CUSHION
*4-936-624-01	(55ES/75ES)...CUSHION

**Note:**  
 The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note:**  
 Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



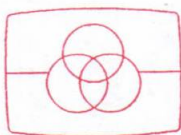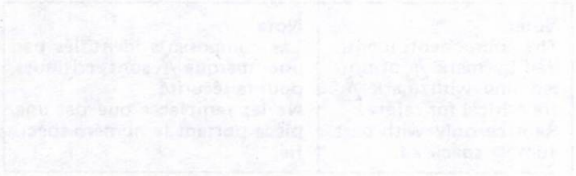

Free service manuals  
 Gratis schema's

Digitized by

[www.freecservicemanuals.info](http://www.freecservicemanuals.info)