

# DTC-P7

## SERVICE MANUAL

Canadian Model  
AEP Model  
UK Model



### SPECIFICATIONS

Tape	Digital audio tape
Recording head	Rotary head
Recording time	Standard: 120 minutes. Long-play mode: 240 minutes (with DT-120)
Tape speed	Standard: 8.15 mm/s, Long play mode: 4.075 mm/s
Drum rotation	Standard: 2,000 rpm, Long-play mode: 1,000 rpm
Error correction	Double Read Solomon code
<b>Tape</b>	
Track pitch	13.6 $\mu\text{m}$ (20.4 $\mu\text{m}$ )
Sampling frequency	48 kHz, 44.1 kHz, 32 kHz
Modulation system	8-10 Modulation
Transfer rate	2.46 Mbit/sec.
Number of channel	2 channels, stereo
D/A conversion (Quantization)	Standard: 16-bit linear Long-play mode: 12-bit non-linear
Frequency response	Standard: 2-22,000 Hz ( $\pm 0.5$ dB) Long-play mode: 2-14,500 Hz ( $\pm 0.5$ dB)
Signal to noise ratio	Standard: more than 88 dB Long-play mode: more than 88 dB
Dynamic range	Standard: more than 88 dB Long-play mode: more than 88 dB
Total harmonic distortion	Standard: less than 0.0065% (1 kHz) Long-play mode: less than 0.08% (1 kHz)

Model Name Using Similar Mechanism	NEW
Tape Transport Mechanism Type	DATM-101

Wow and flutter Below measurable limit  
( $\pm 0.001\%$  W. PEAK)

#### Input

	Jack type	Impedance	Rated input level
LINE IN	phono jack	47 kohms	-4 dBs
DIGITAL IN	phono jack	75 ohms	0.5 Vp-p, 20%
DIGITAL IN	optical jack	—	—

#### Output

	Jack type	Impedance	Rated output	Load impedance
LINE OUT	phono jack	470 ohms	-4 dBs	More than 10 kohms
PHONES	stereo phone jack	220 ohms	0.6 mW	32 ohms

DIGITAL OUT (optical jack): wavelength 660 nm

- continued on next page -

**DIGITAL AUDIO TAPE DECK**  
**SONY**®



**General**

Power requirements	120 V AC, 60 Hz (Canadian model) 220 - 230 V AC, 50/60 Hz (AEP, Germany models) 240 V AC, 50 Hz (UK model)
Power consumption	24 W
Dimensions	Approx. 225 x 95 x 220 mm (w/h/d) (17 x 5 x 13 <sup>7</sup> / <sub>8</sub> inches)
Weight	Approx. 3 kg (6 lb 10 oz)

**Remote commander (supplied)**

Remote control system	Infrared control
Power requirements	3V DC, with two size AA (R6) batteries
Dimensions	Approx. 63 x 19 x 175 mm (w/h/d) (2 <sup>1</sup> / <sub>2</sub> x <sup>3</sup> / <sub>4</sub> x 7 inches)
Weight	Approx. 130 g (4 oz) incl. batteries.

**Supplied accessories**

Sony batteries SUM-3(NS) (2)  
Audio connecting cords (2 phono plugs - 2 phono plugs,  
stereo for line inputs and outputs) (2)  
AU BUS cord (1)

Design and specifications subject to change without notice.

**Note**


This appliance conforms with EEC Directive 87/308/EEC  
regarding interference suppression.

**TABLE OF CONTENTS**

<u>Section</u>	<u>Title</u>	<u>Page</u>
<b>1. GENERAL</b>		
	Overview of the Digital Audio Tape Deck, Connections .....	4
	Identifying Parts and Controls .....	5
	Clock Setting .....	8
<b>2. DISASSEMBLY .....</b>		<b>9</b>
<b>3. ADJUSTMENTS .....</b>		<b>12</b>
3-1.	Electrical Adjustments .....	14
3-2.	Checks for Date Function .....	16
<b>4. DIAGRAMS</b>		
4-1.	Circuit Boards Location .....	17
4-2.	Block Diagram .....	18
4-3.	Waveforms .....	21
4-4.	Semiconductor Lead Layouts .....	23
4-5.	Printed Wiring Boards - MD / Display section - .....	25
4-6.	Schematic Diagram - MD / Display section - .....	29
4-7.	Printed Wiring Boards - Main section - .....	33
4-8.	Schematic Diagram - Main section - .....	37
4-9.	Printed Wiring Boards - AD / DA / Power supply section - .....	41
4-10.	Schematic Diagram - AD / DA / Power supply section - .....	45
4-11.	IC Block Diagrams .....	49
4-12.	Pin Functions .....	53
<b>5. EXPLODED VIEWS</b>		
5-1.	Cabinet Section .....	61
5-2.	Front Panel Section .....	62
5-3.	Chassis Section .....	63
5-4.	Mechanism Section 1 .....	64
5-5.	Mechanism Section 2 .....	65
5-6.	Mechanism Section 3 (DATM-101) .....	66
5-7.	Mechanism Section 4 (DATM-101) .....	67
<b>6. ELECTRICAL PARTS LIST .....</b>		<b>68</b>

## MODEL IDENTIFICATION

– SPECIFICATION LABEL –

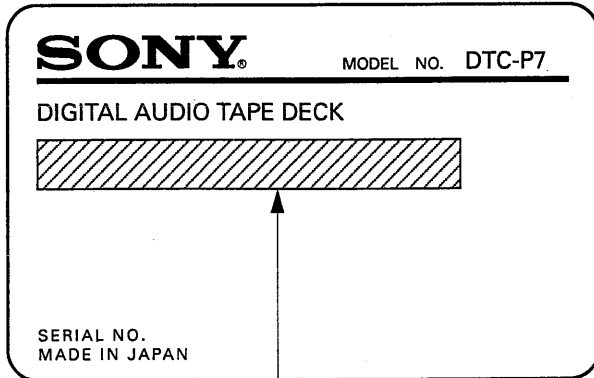

Canadian model : AC 120V 60Hz 24W  
 AEP, Germany model : AC 220-230V~ 50/60Hz 24W  
 UK model : AC 240V~ 50/60Hz 24W

### CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

### ADVERSEL !

Lithiumbatteri – Eksplosionsfare ved fejlagtig håndtering.  
 Udskiftning må kun ske med batteri af samme fabrikat og type.  
 Lever det brugte batteri tilbage til leverandren.

### ADVARSEL

Lithiumbatteri – Eksplosjonsfare.  
 Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten.  
 Brukt batteri returneres apparatleverandren.

### VARNING

Explosionsfara vid felaktigt batteribyte.  
 Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.  
 Kassera använt batteri enligt fabrikantens instruktion.

### VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu.  
 Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER SES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

## Overview of the Digital Audio Tape Deck

### Serial Copy Management System

This unit utilizes the serial copy management system that permits digital-to-digital recording for one generation. You can record CD sound or other digital formats through a digital-to-digital connection. (See page 44.)

### Date Function Automatically Memorizes the Recording Date and Time

The year, month, day, day of the week, hour, minute and second are automatically memorized in the subcode area during recording, so that during playback you can display this data to check when the tape was recorded. This function is especially convenient when recording live performances, etc.

### Three Sampling Frequencies

Recording/playback can be done with three sampling frequencies (48 kHz, 44.1 kHz and 32 kHz) mode.

44.1 kHz: For compact disc and pre-recorded DAT tape.

32 kHz: For analog input signals in a long-play mode.

### Long Play Mode

This unit can operate in a long-play mode. Analog input signals can be recorded or playback for up to four consecutive hours when the DT-120 DAT cassette tape is used. The sampling frequency will be 32 kHz in the long-play mode.

### Visible Cassette Loading

You can view the tape operation through the lid of the cassette compartment. Due to a revolutionary new transport mechanism, cassette loading time has been significantly reduced.

### Excellent Sound Quality

#### 1-bit A/D converter

For the A/D converter section which converts analog input signals to digital signals, the unit employs a 1-bit A/D converter which theoretically generates no zero-cross distortion for a clear, elegant sound quality.

#### Pulse D/A converter

Superior playback performance is achieved with a 1-bit D/A converter.

### Rich Variety of Subcode Information

This unit can record subcode information such as Start IDs, program numbers, Skip IDs, and absolute time data, enabling you to quickly locate tunes and display the playback time in the same manner as when playing compact discs.

### Post Edit Recording of sub Codes

You can record or rewrite the following sub codes after the audio signal recording has been completed.

- Start ID: Signifies the beginning of a selection.
- Program number: Gives a number to the selection.
- Skip ID: Signifies the beginning of a portion to be skipped.
- End ID: Signifies the end position of recording/playback.

Since sub codes are written on the tape separately from audio signals, the audio signals are not affected.

### 5 x 7 dot Matrix Display

The 5 x 7 dot Matrix display window enables you to recognize an operation mode at a glance.

### Enjoy this unit with other component system


With the AU BUS jack, this unit can be connected to the other component system, and the auto "function" and timer play will be available.

\*The auto function automatically sets the system amplifier to the DAT mode when this unit enters playback mode.

## Connections

This section describes about the analog connection, digital connection and the connection with the component system.

### Rear Panel Jacks

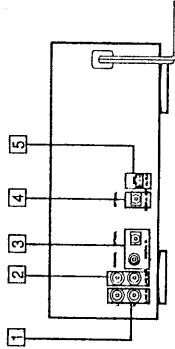

#### 1] LINE IN (line input) jacks (phono jack)

Connect to the recording outputs of an amplifier. Signals supplied by the amplifier can be recorded using the sampling frequency of 48 kHz in the standard play mode or 32 kHz in the long play mode.

#### 2] LINE OUT (line output) jacks (phono jack)

Connect to the DAT or tape inputs of an amplifier. The playback signal of this deck will be output.

#### 3] COAXIAL/OPTICAL DIGITAL IN (digital input) jacks (coaxial phono jack/optical jack)

Connect to the digital outputs of an amplifier having a built-in D/A converter or other digital source, such as a CD player, for digital-to-digital recording. When the OPTICAL DIGITAL IN jack is connected, set the INPUT selector to the DIGITAL 1 position and when the COAXIAL DIGITAL IN jack is connected, set the INPUT selector to the DIGITAL 2 position.

#### 4] OPTICAL DIGITAL OUT (digital output) jack (optical jack)

Connect to the digital inputs of an amplifier having a built-in D/A converter or another DAT deck, for playback of a DAT cassette or digital-to-digital recording.

#### 5] AU BUS jack

Connect to the AU BUS jack of a Sony amplifier or receiver to perform the system control.

#### Notes on connection

- Use the connecting cords specified in the illustrations.
- Turn off the power for all equipments before making connections.
- Be sure to insert the plugs firmly into the jacks. Loose connections may cause hum and noise. When unplugging, grasp the plug and not the cord.

#### Notes on the optical cable

- Do not bend the cord. When the cord is not used, curl it with a diameter of more than 15 cm (5 7/8 inches).
- Do not use it under high temperatures.
- When the optical cable is not connected, cover the OPTICAL IN/OUT jacks with the supplied caps.

#### Note on sound signals

When connecting an optical cable to the DIGITAL IN/ DIGITAL OUT jacks, sound signals (L/R) are transmitted together through the cable.


This section is extracted from instruction manual.



# Identifying Parts and Controls

This section describes the names and functions of each parts of this unit. Before operating this unit, please read carefully.


## Front Panel/Remote Commander

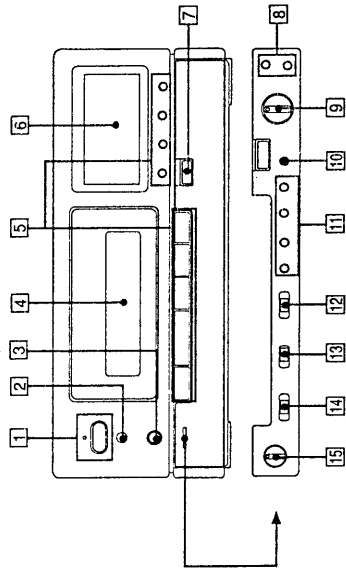

Pull the OPEN knob to open the control panel.

- 1 POWER switch and ONSTANDBY indicator**  
Turns the power on and off. When the power is off, the STANDBY indicator lights up.
- 2 Remote sensor**  
Receives the signal from the remote commander.
- 3 HEADPHONES Jack (Stereo minijack)**  
Insert the headphones plug to this jack.
- 4 Cassette compartment**  
Insert a cassette with the window side up and the safety tab facing you.
- 5 Tape operating buttons**
  - (stop): Press to stop recording or playback.
  - ▷ (play): Press to play back the tape.
  - (pause): Press to stop for a moment during recording or playback. To restart recording or playback, press this button again or press the ▷ button. If the unit is left in the pause mode for about 10 minutes, it will automatically be released and the deck will enter the stop mode. To restart recording or playback from the stop mode, press the ●REC or ▷ button respectively.
  - OMUTE (record muting): Press to insert a sound-muted portion (space).
  - REC (recording): Press to enter the record-pause mode. To start recording, press the IP/AUSE or ▷ button.
  - ◀▶ (AMS): Press to locate the beginning of the selection during playback.


- ◀▶ (rewind/review, fast-forward/cue): In the stop mode, press to rewind/fast-forward the tape. During playback, press to rewind or fast-forward the tape while listening to the sound.
- 6 Display window**
- 7 ▲OPEN/CLOSE button**  
Press to open or close the cassette compartment.
- 8 COUNTER buttons**  
MODE: Selects the counter display in the display window among the linear counter (tape running time), absolute time, elapsed time of the selection, and total remaining time of tape. Each time you press the button, the display changes sequentially.  
RESET: Resets the linear counter to "0M 00S".
- 9 REC LEVEL (recording level) control**  
Adjust the recording level for the analog input signals. When recording digital signals, it is not necessary to adjust the recording level.
- 10 CLOCK SET button**  
Press to adjust the time of the clock built in this unit. In this mode, the ◀▶ and ▶▶ buttons function as the + and - buttons respectively.

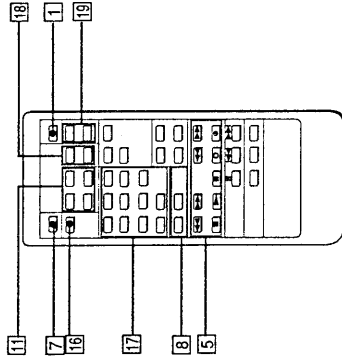

- 11 START ID buttons**  
AUTO: Press to turn on and off the AUTO indicator. When the AUTO indicator is lit, the start ID will automatically be written during recording. When the AUTO indicator is not lit, press the START ID WRITE button at the point where you want to write a start ID.  
RENUMBER: Press to renumber all programs on the tape. When only the start IDs are written, pressing this button will insert the proper program numbers beginning with "1". The tape will rewind and start from the beginning to accomplish this function.  
WRITE: Press to write the start ID at the desired point during recording or playback.  
ERASE: Press to erase a start ID. When a start ID and a program number are written on the tape, both codes are simultaneously erased by pressing this button.
- 12 INPUT selector**  
Set according to the signal to be recorded.  
ANALOG: For recording from the equipment connected to the LINE IN jacks.  
DIGITAL 1/DIGITAL 2: For recording from the equipment connected to the DIGITAL IN jack.
- 13 REC MODE selector**  
Normally set to the STANDARD position. When this selector is set to the LONG position, you can record analog input signals or digital signals with 32 kHz in the longplay mode.
- 14 TIMER switch**  
Normally set to the OFF position. When recording or playing back at the desired time using a commercially available audio timer or the timer function of the component system, set to the REC position or the PLAY position respectively.
- 15 PHONE LEVEL control**  
The PHONE LEVEL control adjusts the headphones volume level.
- 16 DISPLAY MODE button**  
Changes the display mode. (Refer to page 16.)
- 17 Music select buttons**  
Numeric buttons (0-9): Designate the desired program number to be played back before starting playback. Designate the desired number in the record-pause mode, the program number is written consecutively from the designated number.  
CLEAR: Use to cancel the program number which has been mistakenly entered.
- 18 SKIP ID buttons**  
WRITE: Press at the beginning of the portion you may wish to skip later. A skip ID will be written from the point where you pressed this button.  
ERASE: Press to erase the nearest skip ID which is before the current position.
- 19 END ID buttons**  
WRITE: Press to write the ID signifying the end of playback or recording.  
ERASE: Press to erase the end ID.

# Identifying Parts and Controls


## Front Panel/Remote Commander

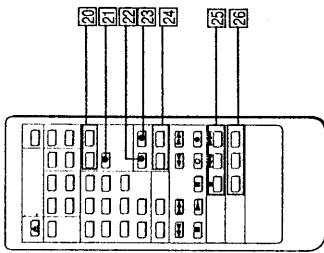

- 20 RMS play buttons**  
**ENTER:** To program the selections in a desired order, press this button after pressing the numeric buttons.  
**CHECK:** Press to check the programmed contents.
- 21 REPEAT 1/ALL button**  
 Press to play a desired portion repeatedly. Each time you press the button, the indicator changes as follows:  
 REPEAT 1 → REPEAT ALL → off
- 22 MUSIC SCAN button**  
 Use this feature to listen to the beginning of each selection successively.
- 23 SKIP PLAY button**  
 Press to activate the skip ID code function. The portion of the tape previously marked will be skipped.
- 24 DATE buttons**  
**RECORDED:** Press to display the recording day of the tape being played.  
**PRESENT:** Press to display the current time.  
 Each time the RECORDED or PRESENT button is pressed, day, month and year display, the day of the week display or hour, minute and second display is switched sequentially.
- 25 CD operation buttons**  
 Operative only for the Sony CD player equipped with a remote commander.  
**II (pause):** Press this button twice to start playback. To enter the pause mode, press this button once.  
**⏪⏩ (AMS):** Press to locate the desired selection on the Compact Disc during playback or in the stop mode.
- 26 CD SYNCHRO (CD synchronized recording) buttons**  
 (The playback of the Sony CD player equipped with a remote commander and the recording of the DAT deck can be performed simultaneously.)  
**STANDBY:** Press to set the unit to the record-standby mode.  
**START:** Press to start recording of the DAT deck and then playback of the CD player.  
**STOP:** Press to stop the DAT deck recording and the CD player playback.

# Identifying Parts and Controls

## Display Window

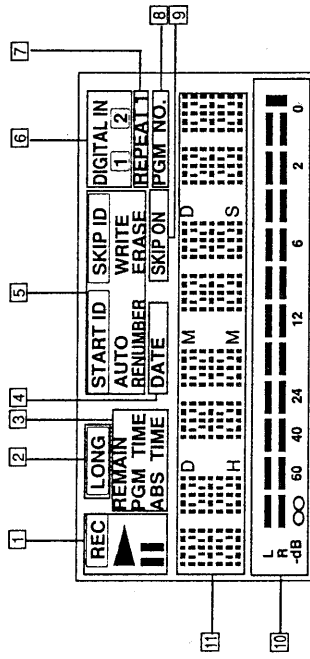

When the power is turned on, the display window is also turned on. However, the peak level meter display can be turned on/off alternatively during recording or playback each time the DISPLAY MODE button is pressed.

**1** **Tape operation indicators**

- REC**: Lights during recording or in the record-pause mode.
- ▷**: Lights during recording or playback. It also lights in the record-pause mode or in the play-pause mode.
- : Lights in the record-pause mode or in the play-pause mode.

**2** **LONG play mode indicator**

Lights when recording or playback is being performed in the long play mode.

**3** **REMAIN (remaining time):**

Lights when the counter shows the remaining time of the tape.

**PGM TIME (program time):**

Lights when the counter shows the elapsed time of the current selection.

**ABS TIME (absolute time) indicator:**

Lights when the counter shows the elapsed time from the beginning of the tape.

**4** **DATE indicator**

Lights when pressing the RECORDED button to display the recording day of the tape being played. Flashes when pressing the PRESENT button to display the current time.

**5** **ID code indicators**

**START ID indicator:** Flashes when writing (for 9 or 18 seconds) or erasing a start ID code, and lights when the start ID is detected during playback.

**SKIP ID indicator:** Lights when writing (for 1 or 2 seconds), erasing a skip ID code or when the skip ID is detected during playback.

**AUTO:** Lights when the AUTO button is pressed to write the start ID automatically.

**RENUMBER:** Lights when the RENUMBER button is pressed to renumber the program numbers or when shifting the start ID and program number position.

**WRITE:** Lights or flashes when writing the start ID, skip ID or end ID.

**ERASE:** Lights or flashes when erasing the start ID, skip ID or end ID.

**AUTO RENUMBER:** Lights when renumbering program numbers automatically.

**6** **DIGITAL IN indicator**

The DIGITAL IN  or DIGITAL IN  indicator lights according to the position of the INPUT selector. No indicator lights when the INPUT selector is set to the ANALOG position.

**7** **REPEAT indicators**

**REPEAT 1:** Lights when a desired selection is played back repeatedly.

**REPEAT:** Lights when all the selections are played back repeatedly.

**8** **PGM NO. indicator**

Shows the program number of the selection being played. When programming the desired selection in the RMS operation (page 40), the display shows the step number of the programmed selection.

**9** **SKIP ON indicator**

When this indicator is lit during playback, the portion marked by the skip ID is skipped and playback continues from the next start ID.

**10** **Peak level meters**

Indicate the level of the audio signal being recorded during recording, and the peak values of the audio signal recorded on the tape during playback. When the rightmost indicator lights, the peak level is over.

**11** **Counter indicator**

Indicates the tape running time, absolute time, elapsed time of the current selection, remaining time or recording day. Each time the COUNTER MODE button is pressed, the display is changed.

The following indicators are also displayed at this area.

**RMS (Random Music Sensor)**

When programming the desired selections in the RMS operation (page 40), the display shows the program contents.

**M. (Music) SCAN**

Flashes when searching for the beginning of each selection in music search mode.

**M. S (Music Scan) OFF**

Displayed momentarily and then goes off when the music scan mode is cancelled.

**SKIP ON**

Displayed when the SKIP PLAY button is pressed.

**SKIP OFF**

Displayed when the SKIP PLAY mode is cancelled.

**REPEAT 1/REPEAT**

**REPEAT 1:** Displayed when a selection is played repeatedly. **REPEAT:** Displayed when all selections are played repeatedly.

**Sampling frequency (48 kHz, 44.1 kHz or 32 kHz)**

Shows the corresponding sampling frequency while the **▷** button is pressed during playback or recording.

**CAUTION**

Displayed when moisture condensation occurs. If this happens, the deck stops functioning automatically. (page 4.)

**PROH (Prohibit)**

Displayed when recording the digital signal with the copy prohibit code. In this case, record with the LINE IN jacks.

# Clock Setting

This unit employs a built-in clock to keep track of the current date and time. Once you set the date and time, this information will be recorded on the tape along with the audio signal during recording. This function is very convenient because it allows you to check when the tape was recorded when playing the tape later.

## Setting the date and time

Example: Setting the clock to 10:30:00 AM, July 4, 1992 (Saturday)

### Setting the day

- 1 Display the date.**
- 2 Set the year.**
- 3 Set the month.**
- 4 Set the day.**
- 5 Set the day of the week.**
- 6 Complete the setting procedure.**

### Setting the time

- 1 Display the time.**
- 2 Set the hour.**
- 3 Set the minutes.**
- 4 Set the seconds to 0.**
- 5 Start the clock simultaneously with the signal from a timecast (telephone, etc.).**

### To confirm the date or time

Press the PRESENT button to display the date, the day of the week or time. When pressing the PRESENT button once, the day and the day of the week are displayed, when pressing it twice, the time is displayed. To return to the original counter display, press the COUNTER MODE button.

### Time display

The time is displayed in 24-hour format.  
 Midnight: 0:00  
 Noon: 12:00

### Built-in clock

This unit's built-in clock operates using a quartz oscillator, and time variations caused by changes in temperature, etc., may accumulate. For precise recording of hour, minute, and second data by the built-in date function, it is recommended that you set the clock once a week.

### Precautions when setting the clock

- Set the clock while the tape is stopped.
- Although this unit's clock automatically adjusts for leap years and long and short months, do not enter a date which does not exist.

### The day of the week is displayed as follows.

Sunday	SU
Monday	MO
Tuesday	TU
Wednesday	WE
Thursday	TH
Friday	FR
Saturday	SA

### Note

This unit uses a back-up battery to keep the clock running when the power is turned off. The life of the battery under normal use is approximately five years. When the battery starts to run down, the clock will stop operating normally. When this occurs, have the battery replaced at your dealer or nearest Sony Service Center (a battery replacement fee is required).

## SECTION 2 DISASSEMBLY

- Remove the following devices shown by ❶, etc. In the order of the numbers.


### [CASE]

Unscrew the four case attachment screws and remove the case.


### [CASSETTE WINDOW]

- Press the OPEN/CLOSE switch to effect LOADING OUT STATE (if power is not supplied) rotate the pulley in the left side of the Mechanism Deck counterclockwise.)
- Remove the cassette by lifting the window up.


### MECHANISM BLOCK

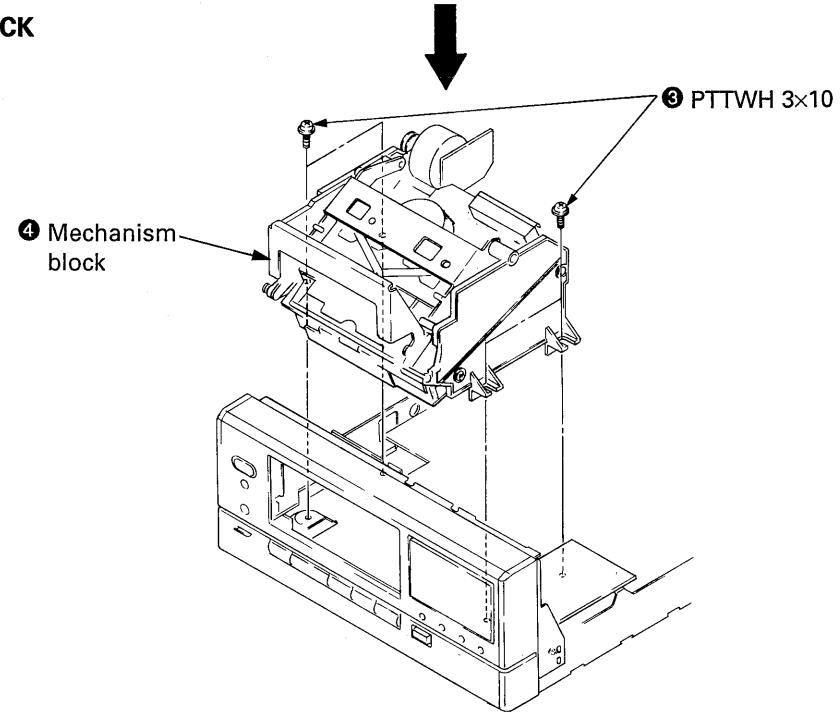

### HOLDER

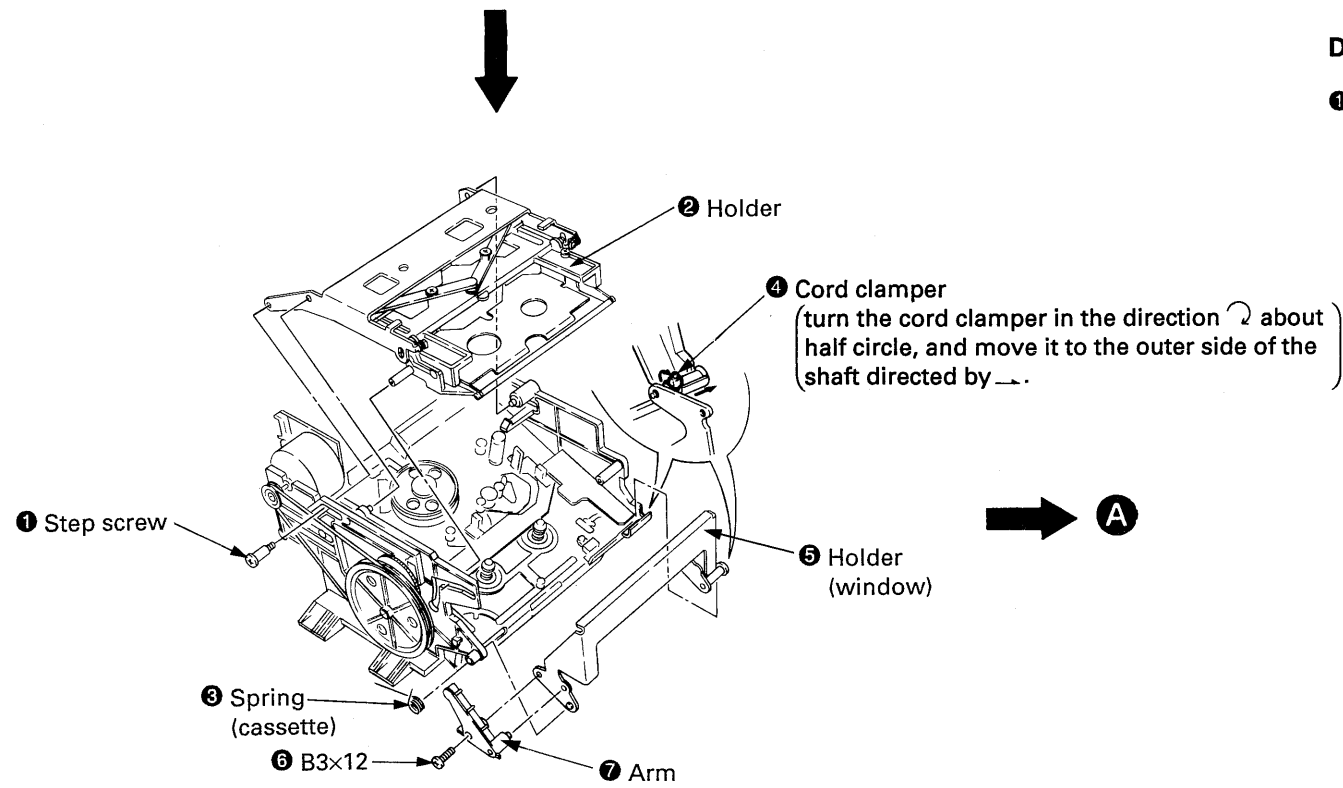


### CASSETTE COMPARTMENT MOTOR (M901), PULLEY, GEAR (CAM) AND SLIDER

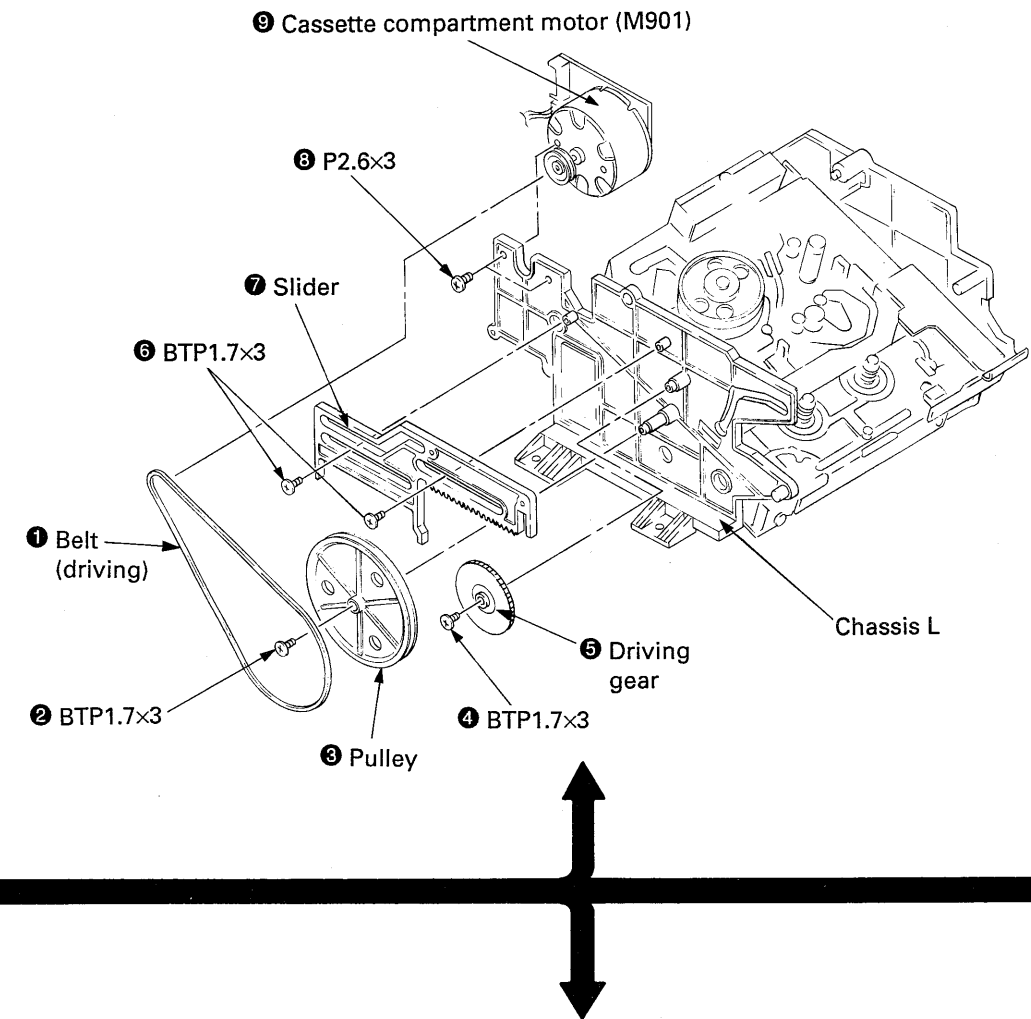


### DRUM

- Remove the drum lead wires from connectors.

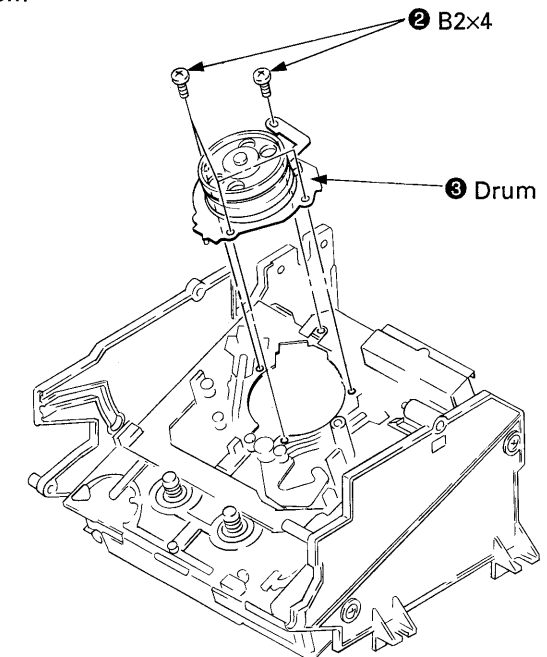


**DRUM DRIVE BOARD, DRIVING CHASSIS**

❶ Remove the lead wires from connectors on the drum drive board.

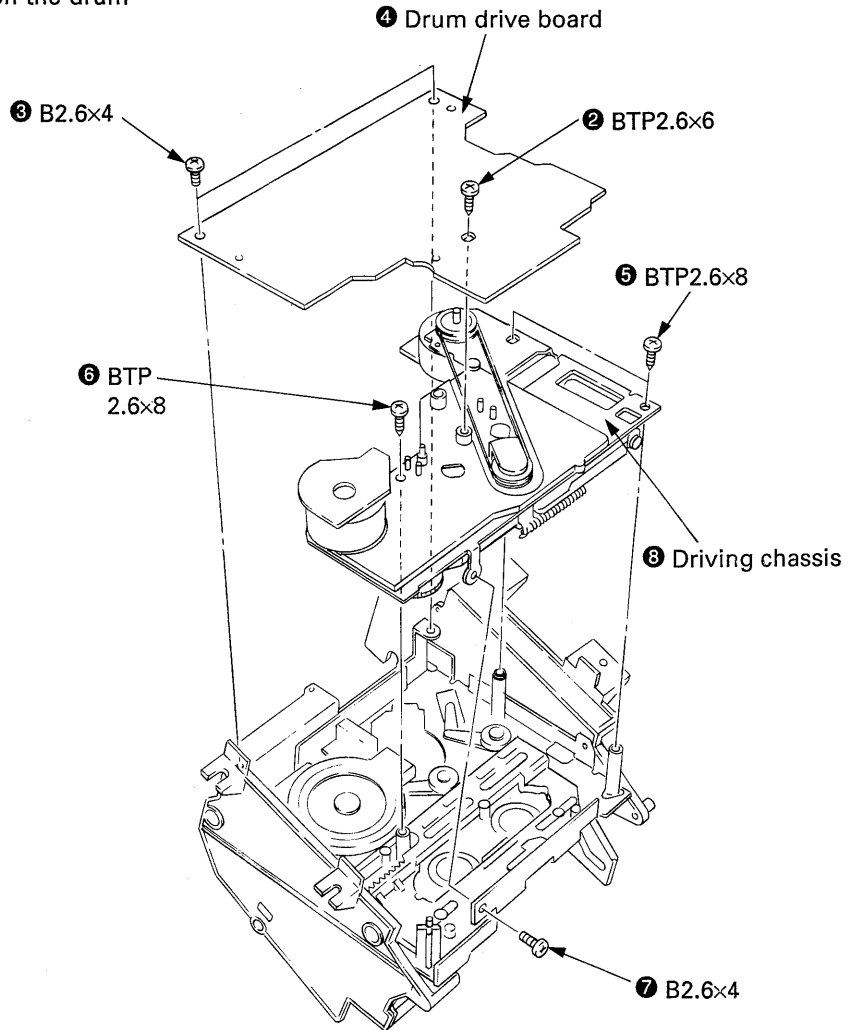

**REEL MOTOR (M902)**

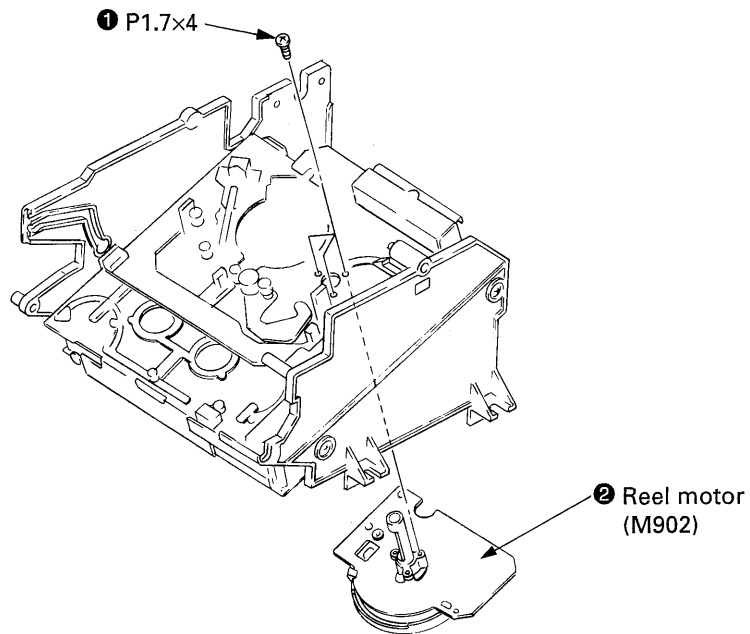

## SECTION 3 ADJUSTMENTS


### Notes When Making Adjustments

- Adjustments should be performed in the order listed.
- Use the following test tapes :
 


TY-7111 (8-909-812-00).....	Level
TY-7252 (8-909-822-00).....	Tracking
TY-7551 (8-909-814-00).....	Functions
TY-30B (8-892-358-00).....	Blank
- Use the following torque meter:
 

TW-7131 (8-909-708-71).....	FWD
-----------------------------	-----
- Switches and controls should be set as follows unless otherwise specified.
 

TIMER switch	: OFF
REC MODE switch	: LONG
INPUT switch	: DIGITAL1
REC LEVEL control	: Min.
PHONE LEVEL control	: Min.
- Creating an end sensor cassette
  - Press the tape slider lock and move the slider in the direction indicated by the arrow.

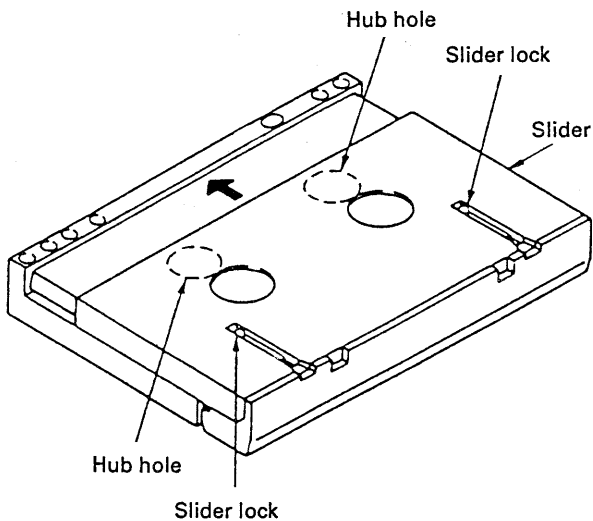


- Open the lid and cut the tape.

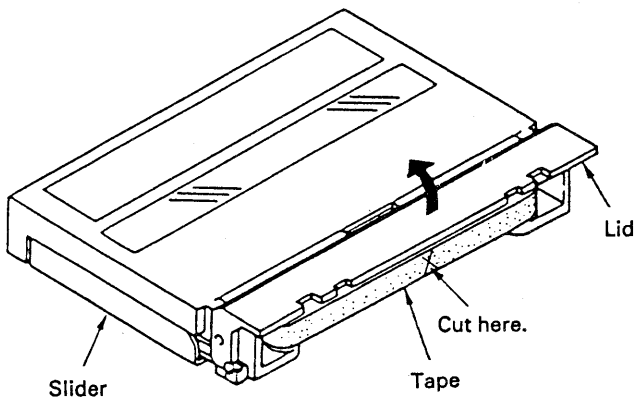

- Turn the hubs until the tape is completely inside the cassette (both T and S sides).  
The end sensor cassette for end sensor adjustment is now ready for use.

- Cleaning of the Revolving Drum.
  - Fold a chamois (2-034-697-00) or a knit cloth into 4 or more files, slightly impregnate it with a cleaning liquid (9-919-573-00), and softly touch the drum with it and manually rotate the drum slowly counterclockwise by 2 to 3 turns for cleaning.
  - At that time, be careful not to move the chamois vertically to the head tip. Otherwise, the head tip may probably be damaged.
- Be careful not to move RV1 and RV2 on the RF AMP board in the mechanism assembly.
- To adjust the tape path and guides, remove the holder assembly as shown in the diagram and use the DAT holder jig (J-8000-002-A). This will make it easier to perform adjustments.
  - First turning the pulley counterclockwise to put it in loading out status will make removal and reattachment of the holder assembly easier.
  - For adjusting, turn the pulley clockwise to effect loading in status, set a test tape and turn ON the IN switch. Or, adjust the device set to the test mode without cassette compartment (see the next section).

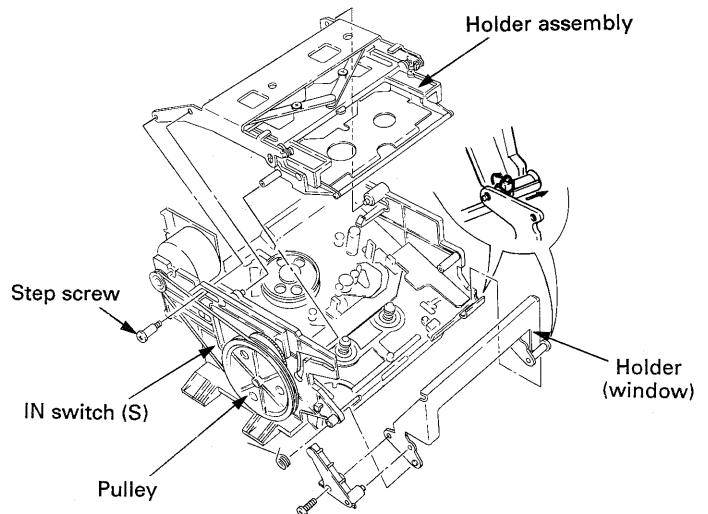

### 8. Test mode

The test mode is effected by shorting TP (T\_M, T\_S and TEST DISP) on the main board and the FL board and GND.

- Test mode (main · servo)
 

Turn OFF the power switch, connect T\_M and T\_S on the main board to GND and perform the following adjustments.

  - Tape path fine adjustment
  - DPG adjustment
  - ATF pilot (GCA) checking
  - End sensor checking
  - FWD torque checking
  - FWD back tension checking and adjustment
- Test mode (FL)
 

You can check the following FL display tube and the panel switch by turning OFF the power switch, connecting TEST DISP to GND and then turning ON the power switch.

Each grid of the FL display tube lights up sequentially from the 1G up to the 10G, so all tubes being lighted up finally.

↓  
Each level meter goes out sequentially.

↓  
Press the STOP button.

↓  
Press the PLAY button.

↓  
When the 6G goes out, checking of EEP-ROM (IC(03)) is satisfactorily completed.

↓  
The up indication mark goes out.

↓  
Every time a switch on the panel (including the power, REC MODE, INPUT and TIMER switches), the indication lamps of the level meters light up sequentially. When all switches but the reset switch are pressed, all level meters light up. Press the reset switch in this state. If all level meters go out, checking of the panel switches are satisfactorily completed.

- To reset the test mode as described above, disconnect the short-circuit wire between the TEST DISP and GND pins. After completion of adjusting, be sure to reset the test mode.

The following function is activated by multi-pressing the key switch on the panel.

(3) No-cassette-compartment test mode


Turn the power switch ON while pressing the 3 switches of Timer Play, Write and Clock Set, thereby you can activate PLAY, STOP, etc. even without the cassette compartment (a mechanism to perform cassette IN and EJECT including the cassette holder). At that time, fix the cassette using the DAT holder jig (J-8000-002-A).

9. Check the following items for correct tape speed, after completion of adjusting.


- (1) Set the REC MODE switch to STANDARD and check for normal recording and playback. (× 1)
- (2) Set the REC MODE switch to LONG and check for normal recording and playback. (× 0.5)
- (3) With QUE (▷ + ►►) or REVIEW (▷ + ◀◀), check that qurrr, qurrr sound is heard. (× 3, × 8)
- (4) Check that correct time is displayed after FF (►►) or REV (◀◀). (× 16)
- (5) Check that SEARCH (▷◀, ◀◀) is normal.

**Adjust Parts Location**


– Mechanism assembly –

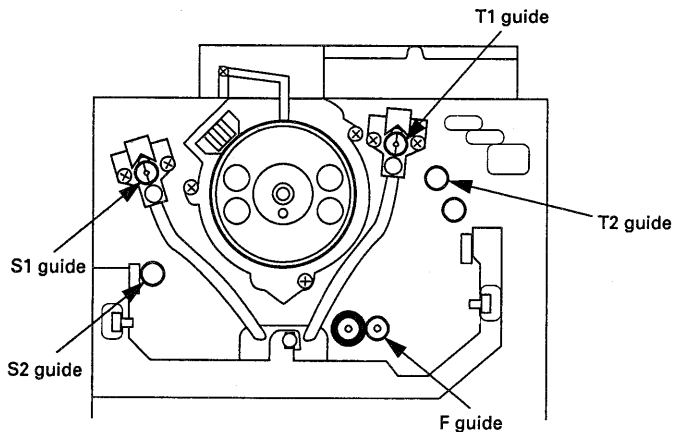


– Main board –

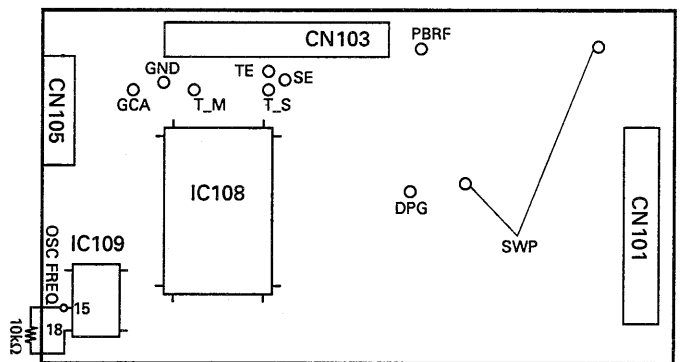

– FL board –

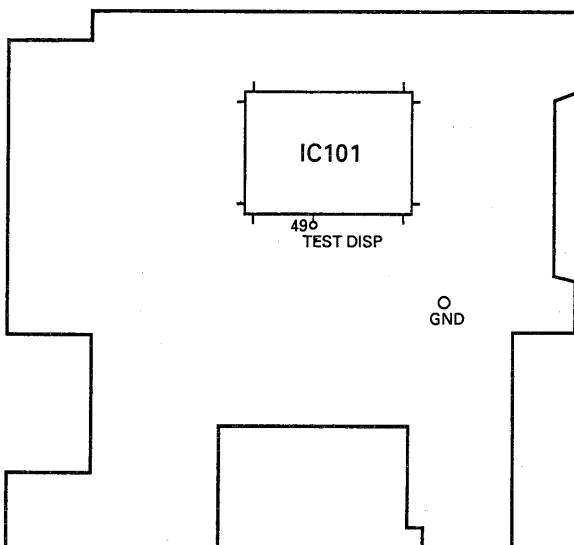

– REG board –

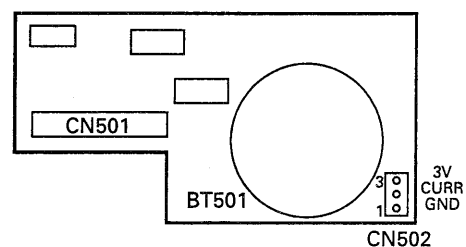




### 3-1. ELECTRICAL ADJUSTMENTS

#### End Sensor Check

Perform the following adjustment when the holder has been removed or part of the mechanism deck section replaced.

#### Check Procedure:

1. Connect an oscilloscope to the test land SE (in the S side) and TE (in the T side) of the main board.
2. Actuate the test mode (main · servo), mount an end sensor cassette and effect the STOP (■) mode.
3. Check that p-p values of waveform of the oscilloscope satisfy the following.

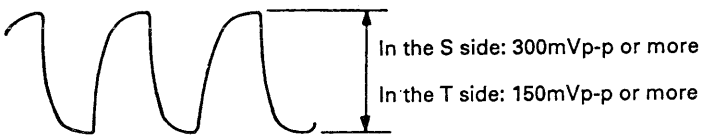

#### FWD Torque Check


#### Check Procedure:

1. Put the set into the test mode (main · servo) and load the FWD torque meter TW-7131 (8-909-708-71).
2. Put the set into the PLAY (>) mode.
3. Confirm that the FWD torque value (take-up side rewinding torque) is between 10 – 20 g·cm (0.14 – 0.28 oz·inch).
4. Confirm that the value indicated by the torque meter is maintained for one full cycle.

#### FWD Back Tension Check and Adjustment

#### Check procedure:

1. Put the set into the test mode (main · servo) and load the FWD torque meter TW-7131 (8-909-708-71)
2. Put the set into the PLAY (>) mode.
3. Confirm that the back tension (supply side) is between 5 – 6 g·cm (0.07 – 0.09 oz·inch).  
If this is not satisfied, adjust back tension by rotating the FWD back tension adjustment screw equipped on the side surface of the mechanical deck. After completion of adjusting, be sure to apply screw lock.
4. Confirm that value indicated by the torque meter is maintained for one full cycle.

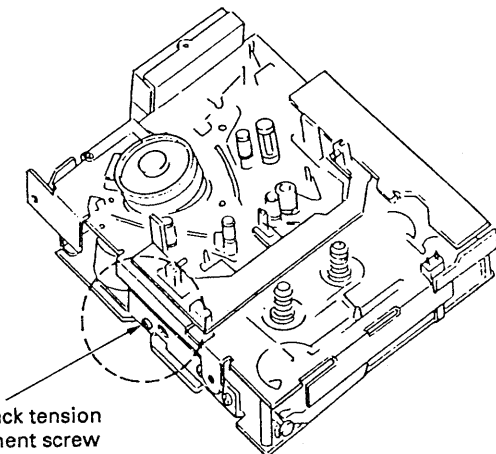


To tighten (clockwise) — back tension becomes larger.  
To loosen (counterclockwise) — back tension becomes smaller.

#### Tape Path Fine Adjustments (× 1.5 FWD Mode)


Perform the following adjustment when the drum has been replaced.

#### Adjustment Procedure :

1. Connect an oscilloscope CH-1 to TP (PBRF) and CH-2 to TP (SWP) on the main board.
2. Put the set into the test mode (main · servo) and load test tape TY-7252 (8-909-822-00).
3. Press the AMS (>>) key.  
Each part of switches on Test Mode.

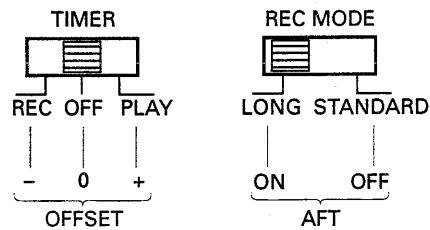


4. With the REC MODE switch set to STANDARD (ATF: OFF) and the TIMER switch set to PLAY or REC (OFFSET: + or -), fine adjust the S1 and T1 guides so that the oscilloscope RF signal waveform remains the same when high-low is repeated.

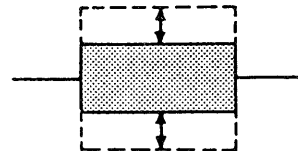

\* Finish the adjustment by screwing in.


5. Check the RF signal waveform with the REC MODE switch set to LONG (ATF: ON) and the TIMER switch set to PLAY or REC (OFFSET: + or -).

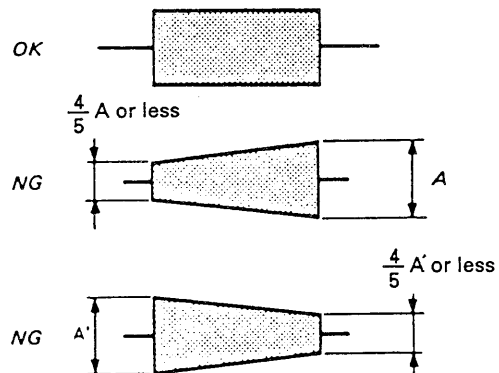

6. Check the RF signal waveform with the REC MODE switch set to LONG (ATF: ON) and the TIMER switch set to PLAY or REC (OFFSET: 0).

- (1) Confirm that the RF signal waveform peak value (B) is 60 mV or more.

- Confirm that the undershoot level of the RF signal waveform's flat portion is within 10%.

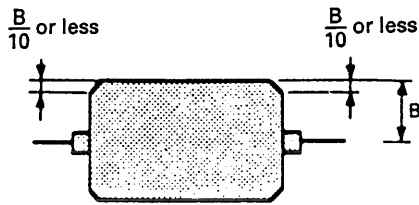

- When the measured values are not within the above tolerances, repeat items 3 – 6 above.


**Adjustment Point:** mechanism assembly

### DPG Adjustment

Perform the following adjustment without fail when the drum has been replaced.

#### Adjustment Procedure:

- Connect oscilloscope CH-1 to TP (PBRF) and CH-2 to TP (SWP) on the main board. (Use CH-2 as the trigger. When the CH-2 signal is inverted, the trailing edge can be used for synchronization.)
- Put the set into the test mode (main · servo) and load test tape TY-7252 (8-909-822-00).
- Set the REC MODE switch to LONG (ATF: ON) and the TIMER switch to OFF (OFFSET: 0).
- Press the AMS (▷◁) key.
- Press the ◀◀ and ▶▶ keys as appropriate so that the gap between the oscilloscope SWP and RF signals becomes  $650 \pm 15 \mu\text{sec}$ . (Hold the ◀◀ and ▶▶ keys down for more than 1 second to perform rough adjustment. Hold them down for approximately 0.2 seconds for fine adjustment.)

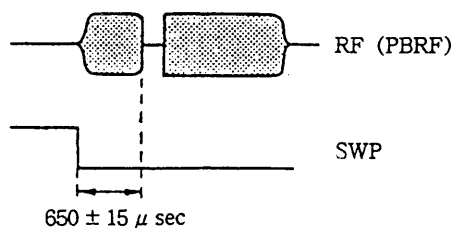


### ATF Pilot (GCA) Check

Perform this adjustment after cleaning the heads with a cleaning cassette.

#### Check Procedure:

- Connect oscilloscope CH-1 to TP (GCA: Gain Control Amp.) and CH-2 to TP (SWP) on the main board. (When the CH-2 signal is inverted, the trailing edge can be used for synchronization.)
- Put the set into the test mode (main · servo) and load test tape TY-7111 (8-909-812-00).

- Actuate the PLAY (▷) mode and check that the GCA waveform on the oscilloscope is as follows.

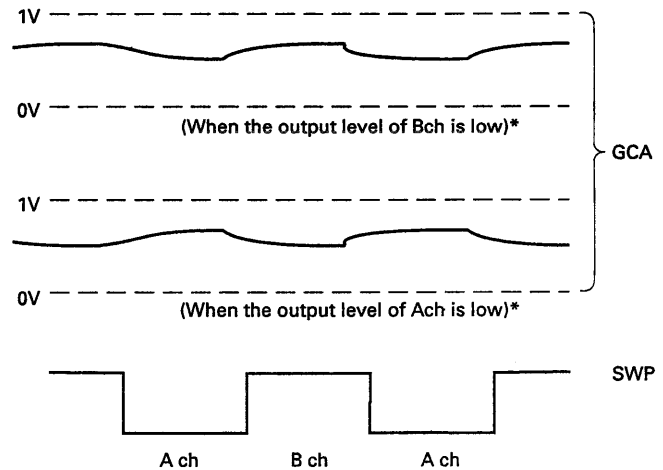

\* Slightly changes depending on the state of the head. NG if the GCA waveform is 1V or more or equal to the GND level.

## 3-2. CHECKS FOR DATE FUNCTION

### Clock IC Back-up Check

- When there is the short-circuit position on the pattern around the lithium battery (BAT501) or the clock IC (IC109) or disconnecting CN101, 104, 404, 501, etc. on removing the front panel assembly the clock is reset.

(In spite of pressing PRESET button, the data indication becomes “\_ \_ \_ D \_ \_ \_ M \_ \_ \_” “\_ \_ \_ H \_ \_ \_ M \_ \_ \_ S”)

At this time, check the back-up function by the procedures given below.

- (1) Connect DC voltmeter to CN502 pin① and CN502 pin② on the regulator board.
- (2) When the power is off, the voltage value of the item (1) should be less than +30 mV.  
(When the voltage value becomes +30 mV or more, Check around IC109 or replace IC109.) (IC109 : main board)
- (3) When the power is on, the voltage value of the item (1) should be less than 0 mV (– (minus) indication).  
(When the voltage value becomes + (plus) indication, Check around D502 or replace D502.) (D502 : reg board)
- (4) When the above voltage values are normal, set the preset date and time (year, month, day, day of the week, hour, minute, second) according to the instruction manual.
- (5) After setting the time on the item (4), turn power off and turn power on several seconds later, and check the clock works normally.

### Back-up Battery Replacement

The life of the back-up battery under normal use (normal temperature, normal humidity) is approximately ten years or more. (On the instruction manual, described “approximately five years”.)

Be careful about the following points on the battery replacement.

- Repair the cause of the battery wastage by performing mentioned above “Clock IC Back-up Check”.
- The open-circuit voltage of the replaced battery is 3.0 V or more as the new one, and when it is 2.0 V or less, it is completely consumed, replace it with new one.
- After the battery replacement, perform “Clock IC Back-up Check” again and set the time.

### Clock Frequency Adjustment



#### Adjustment Procedure:

- (1) Connect a pull-up resistance of about 10k $\Omega$  between pins ⑮ and ⑯ of the IC109.
- (2) Connect a frequency counter to pin ⑮ of IC109(OSC FREQ) and GND on the main board.
- (3) Turn power on and confirm that the reading on the frequency counter is 2048.00  $\pm$  0.02 Hz. (in normal temperature)
- (4) Remove the frequency counter and the pull-up resistance.
- (5) Perform “Clock IC Back-up Check” described above.


\* Time setting procedure described on page 8.

## SECTION 4 DIAGRAMS

### 4-1. CIRCUIT BOARDS LOCATION

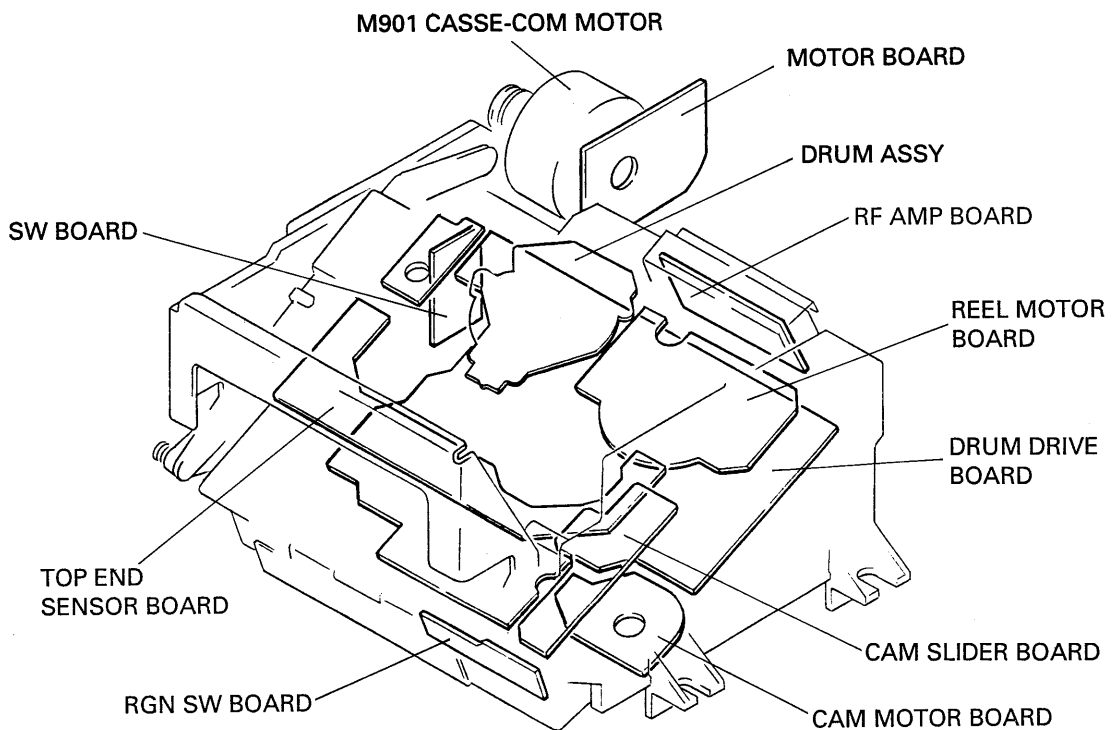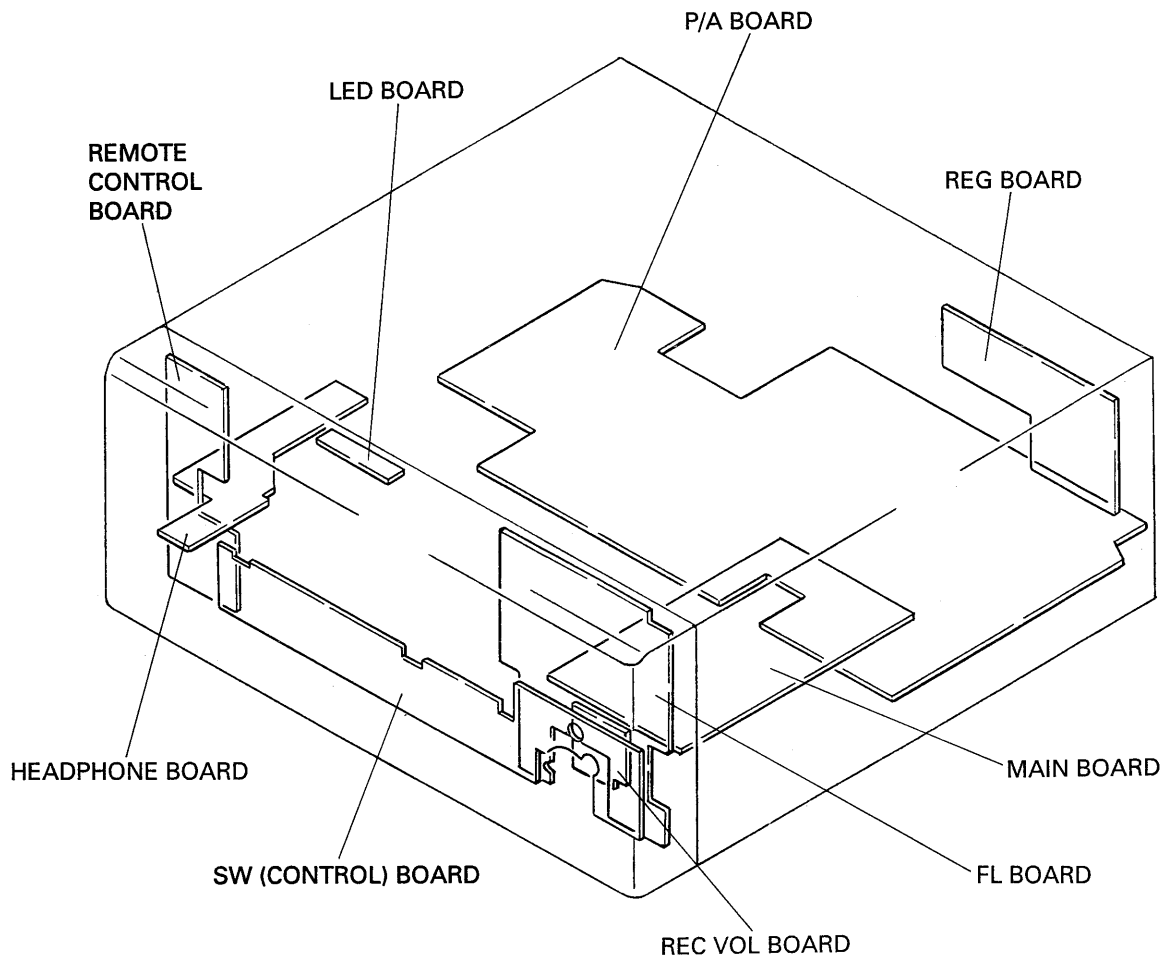


4-2. BLOCK DIAGRAM

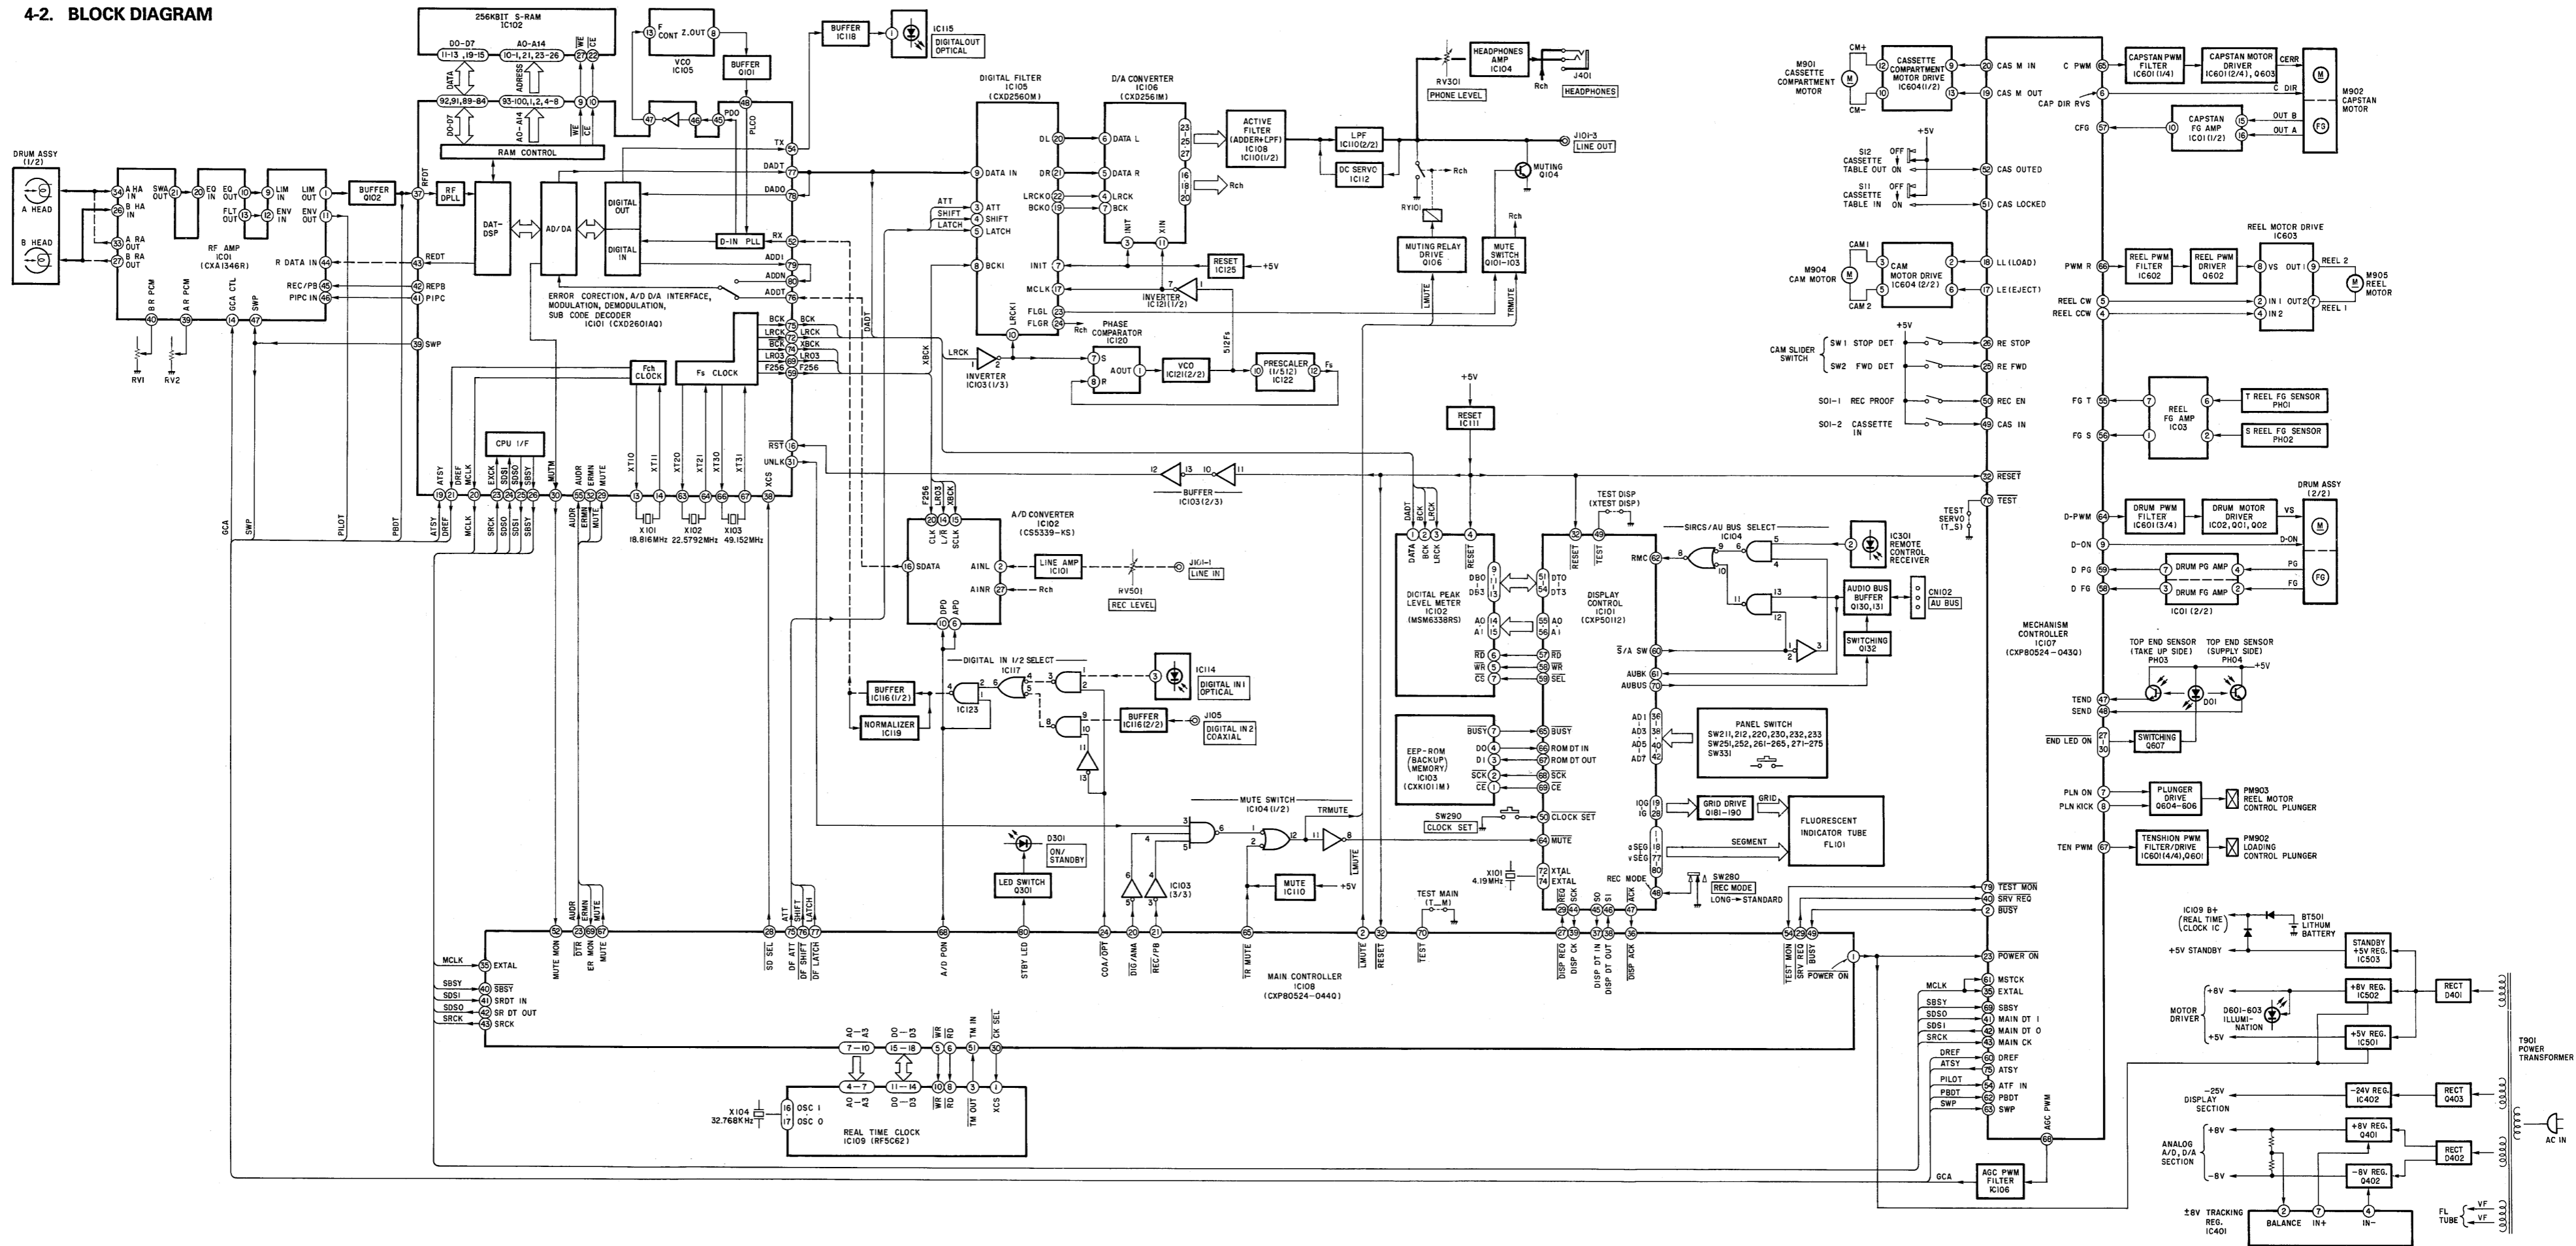


### 4-3. WAVEFORMS


① FL101 ⑫-⑬pin  
30Vp-p, 2ms

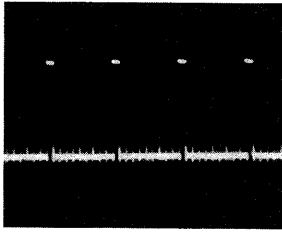


⑦ IC102 ③pin  
5.2Vp-p, 5μs

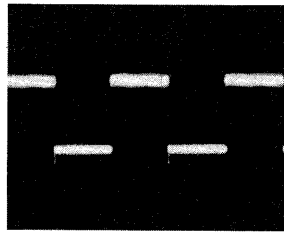


⑬ IC101 ⑫pin  
5Vp-p, 10ms

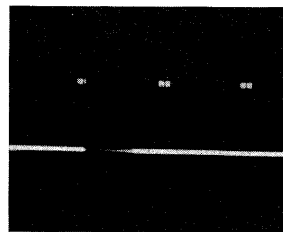


⑰ IC101 ⑮pin  
6Vp-p, 0.05μs

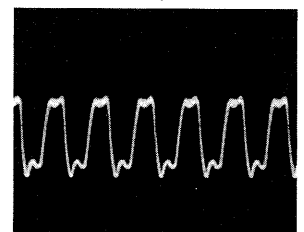


② IC101 ⑮-⑯pin  
32Vp-p, 1ms

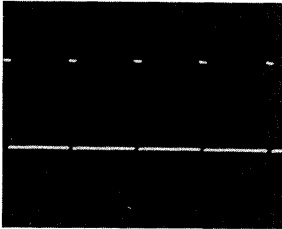


⑧ IC102 ②pin  
5Vp-p, 0.1μs

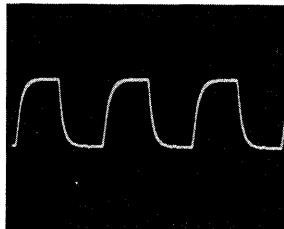


⑭ IC101 ⑰pin  
100Vp-p, 2ms

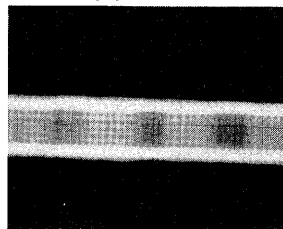


⑳ IC101 ⑰pin  
2.7Vp-p, 49MHz

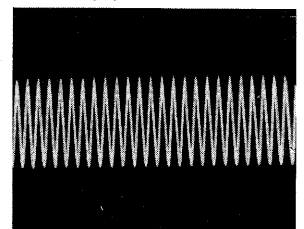


③ IC101 ①-⑯pin  
32Vp-p, 1ms

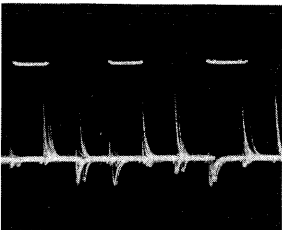


⑨ IC102 ①pin  
5Vp-p, 1μs

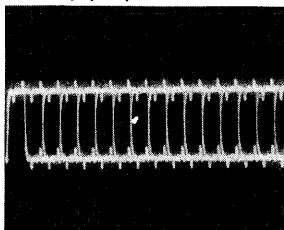


⑮ IC101 ⑬pin  
5Vp-p, 0.2μs

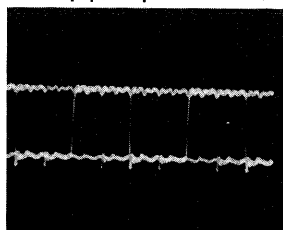


㉑ IC101 ⑰pin  
1Vp-p, 49MHz

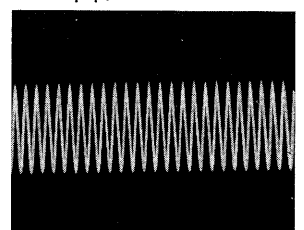


④ IC101 ⑭-⑮pin  
5Vp-p, 1ms

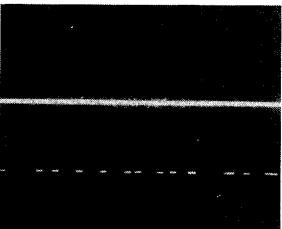


⑩ IC101 ⑬pin  
4.6Vp-p, 18MHz

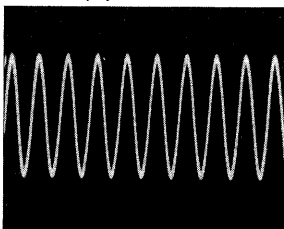


⑯ IC101 ⑬pin  
5Vp-p, 0.05μs

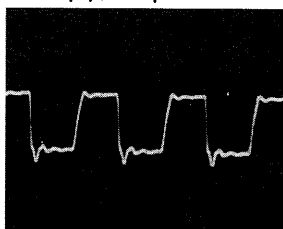


㉒ IC101 ⑰, ㉑pin  
5Vp-p, 5μs

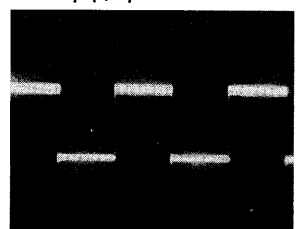


⑤ IC101 ⑮pin  
5Vp-p, 10ms

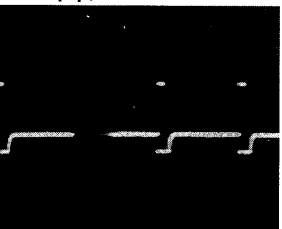


⑪ IC101 ⑭pin  
3Vp-p, 18MHz

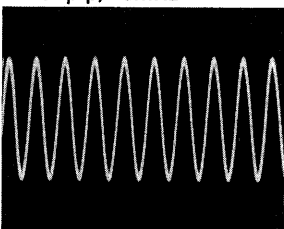


⑰ IC101 ⑮pin  
6Vp-p, 0.1μs

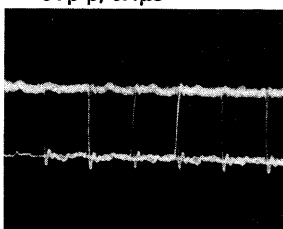


㉓ IC101 ⑰pin  
6Vp-p, 0.1μs

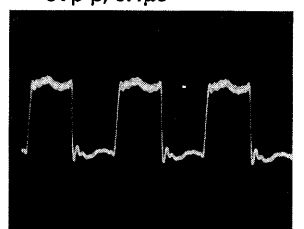


⑥ IC101 ⑰pin  
6Vp-p, 5ms

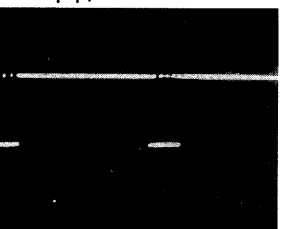


⑫ IC101 ⑯pin  
5.2Vp-p, 10ms

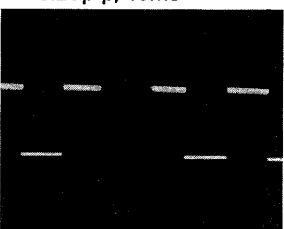


⑱ IC101 ⑮pin  
6Vp-p, 0.05μs

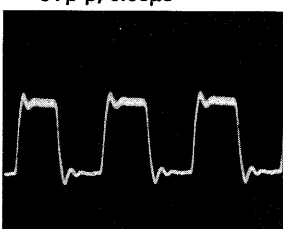


㉔ IC101 ⑰pin (Rec)  
5Vp-p, 10μs

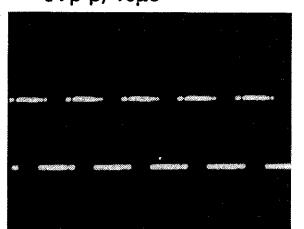


25 IC101 78 pin  
5Vp-p, 5μs

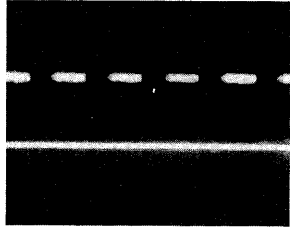


26 IC101 80 pin  
5Vp-p, 2μs

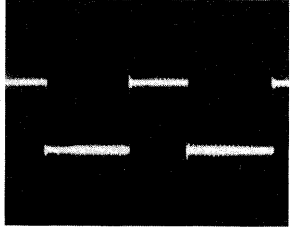


27 IC108 35 pin  
4Vp-p, 0.05μs

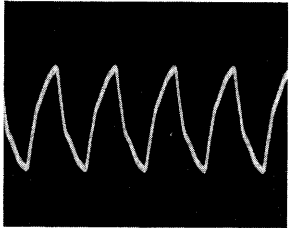


28 IC108 36, 37 pin  
5Vp-p, 10ms

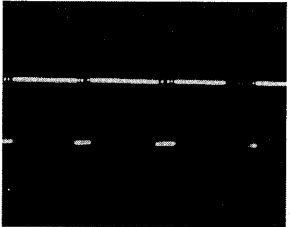


29 IC108 38 pin  
5Vp-p, 10ms

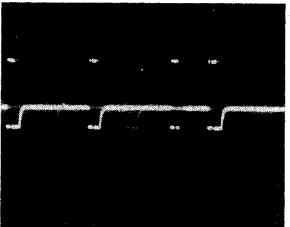


30 IC108 39 pin  
5Vp-p, 10ms

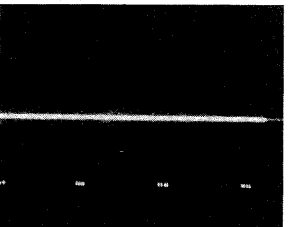


31 IC107 35 pin  
4.2Vp-p, 0.05μs

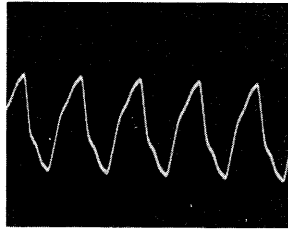


32 IC107 37 pin  
5Vp-p, 0.2ms

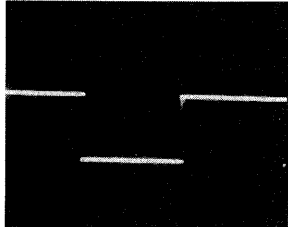


33 IC107 38 pin  
5Vp-p, 0.2ms

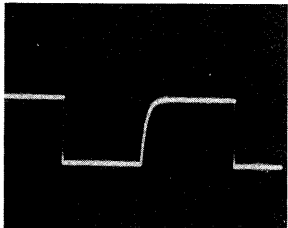


34 IC107 39 pin  
5Vp-p, 10ms

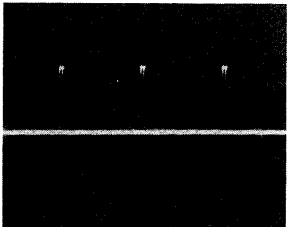


35 IC107 40 pin  
5Vp-p, 10ms

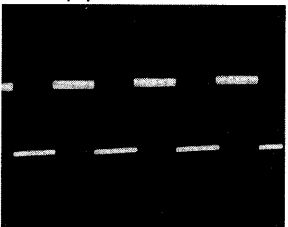


36 IC107 41 pin  
4.2Vp-p, 0.05ms

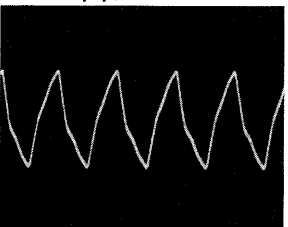


37 IC107 42 pin  
500mVp-p, 0.05μs

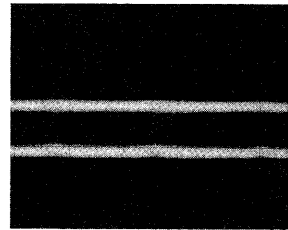


38 IC107 43 pin  
5Vp-p, 10μs

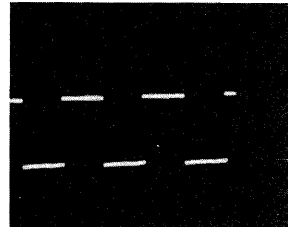

39 IC107 44, 45 pin  
5Vp-p, 10μs

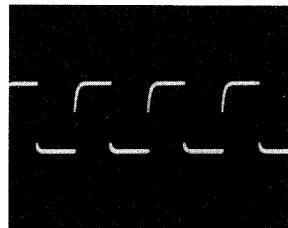


40 IC102 14 pin  
5Vp-p, 5μs

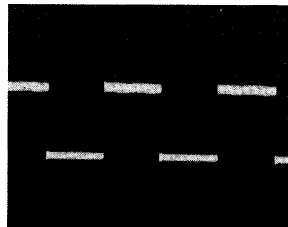


41 IC102 15 pin  
8Vp-p, 0.1μs




42 IC102 20 pin  
6Vp-p, 0.05μs

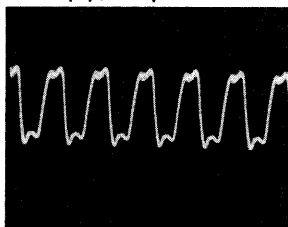


43 IC106 9, 11, 12 pin  
6Vp-p, 0.05μs

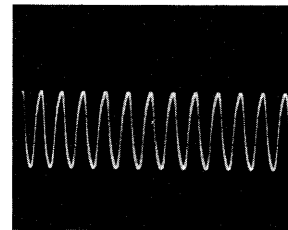


44 IC106 16 pin  
5.8Vp-p, 0.1ms

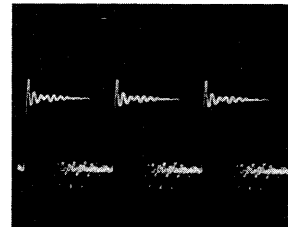


45 IC105 10 pin  
5Vp-p, 5μs

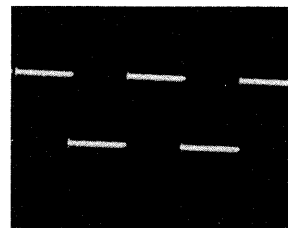


46 IC105 19 pin  
7Vp-p, 0.05μs

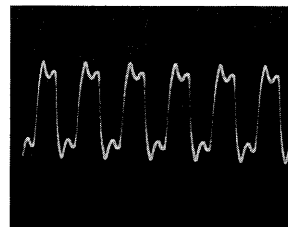

47 IC105 22 pin  
6Vp-p, 1μs

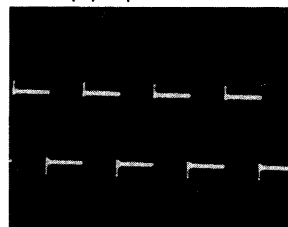


48 IC120 1 pin  
2.7Vp-p, 20μs

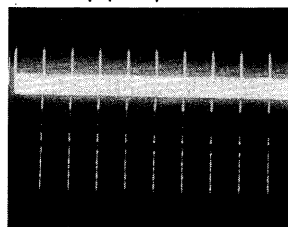


**4-4. SEMICONDUCTOR LEAD LAYOUTS**


④ IC120 ②pin  
1.2Vp-p, 20μs

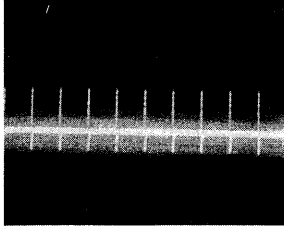


⑤ IC120 ③pin  
5.2Vp-p, 20μs

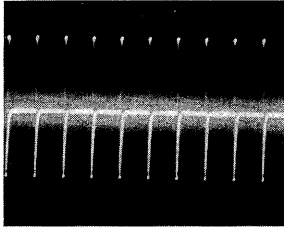



⑥ IC120 ⑦, ⑧pin  
5Vp-p, 5μs

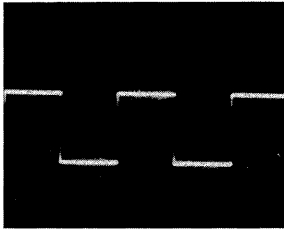


CS5339-KS  
CXD2561M-1  
CXK58257AM-12L

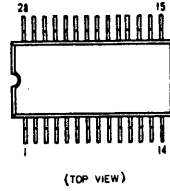


CX20115A  
MSM6338MS-K  
SN74HC4020NS

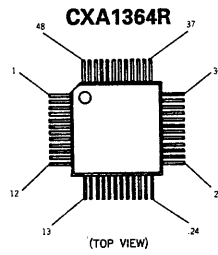



CXD2560M

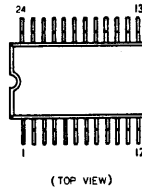


CXD2601AQ

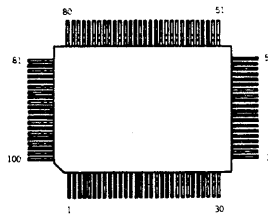


CXK1011M  
LM358M  
RC4560M  
RC5332M  
TC7WU04F  
μPC814G2-1

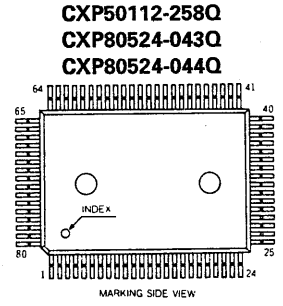


L780S05  
LM2941CT-LB03




LB1638M

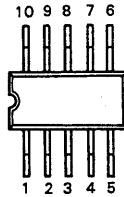


LB1836M  
LM324M  
SN74HC00ANS  
SN74HC10ANS  
SN74HC132NS  
SN74HCU04ANS  
SN74LS624NS



M5230L




NJM78L05UA

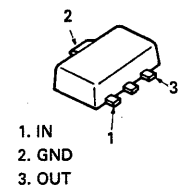





**NJM79L05UA**  
**NJM79L24UA**

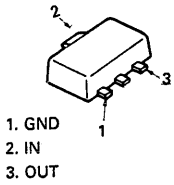


**PST529CMT**  
**PST529EMT**




**RF5C62**

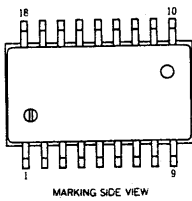

**TA7805S**

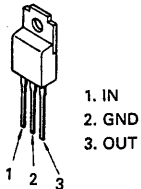


**TC5081AP**




**DTA114EK**  
**DTC114EK**  
**DTC144EK**  
**2SA1162-G**  
**2SC1623-L6**  
**2SC1623-L7**  
**2SC3395**  
**2SC3624A-L15**




**FMA9**  
**FMG9**




**IMH2**




**2SB798-DL**  
**2SB1124-R**  
**2SD1624-R**




**2SD1760F5-PQR**

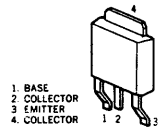


**EC10DS2**  
**EC10QS-04**  
**RD6.2ES-B2**




**FC53M**

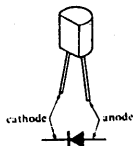

**GL-453**




**GP2S09-C**

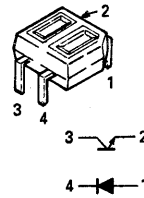


**LN1461C**



**PT4850F**




**RBA406B**

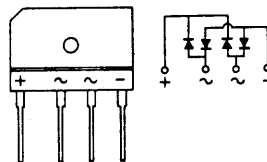


**RB705D**



**SEL2210S-D**



**1SS226**



**4-5. PRINTED WIRING BOARDS**  
- MD/DISPLAY SECTION -


- See page 17 for circuit boards location and 23 for semiconductor lead layouts.


● **SEMICONDUCTOR LOCATION**

Ref. No.	Location	Ref. No.	Location
D01	F-24	Q02	H-21
D301	H-12	Q130	E-9
D401	B-9	Q131	E-9
D451	B-9	Q132	E-9
		Q181	D-9
		Q182	D-9
IC1	E-16	Q183	D-9
IC01	F-20	Q184	D-9
IC02	F-21	Q185	D-9
IC03	G-22	Q186	D-9
IC101	E-3	Q187	D-8
		Q188	D-8
IC102	F-2	Q189	D-8
IC103	E-4	Q190	D-8
IC104	E-7	Q301	H-11
IC301	F-12		
IC401	B-11		
Q01	F-21		

**Notes on printed wiring boards:**

- : Indicated a lead wire mounted on the component side.
- : parts mounted on the conductor side.
- : Through hole.
- ▨ : Pattern from the side which enables seeing.
- ▩ : Pattern of the rear side.

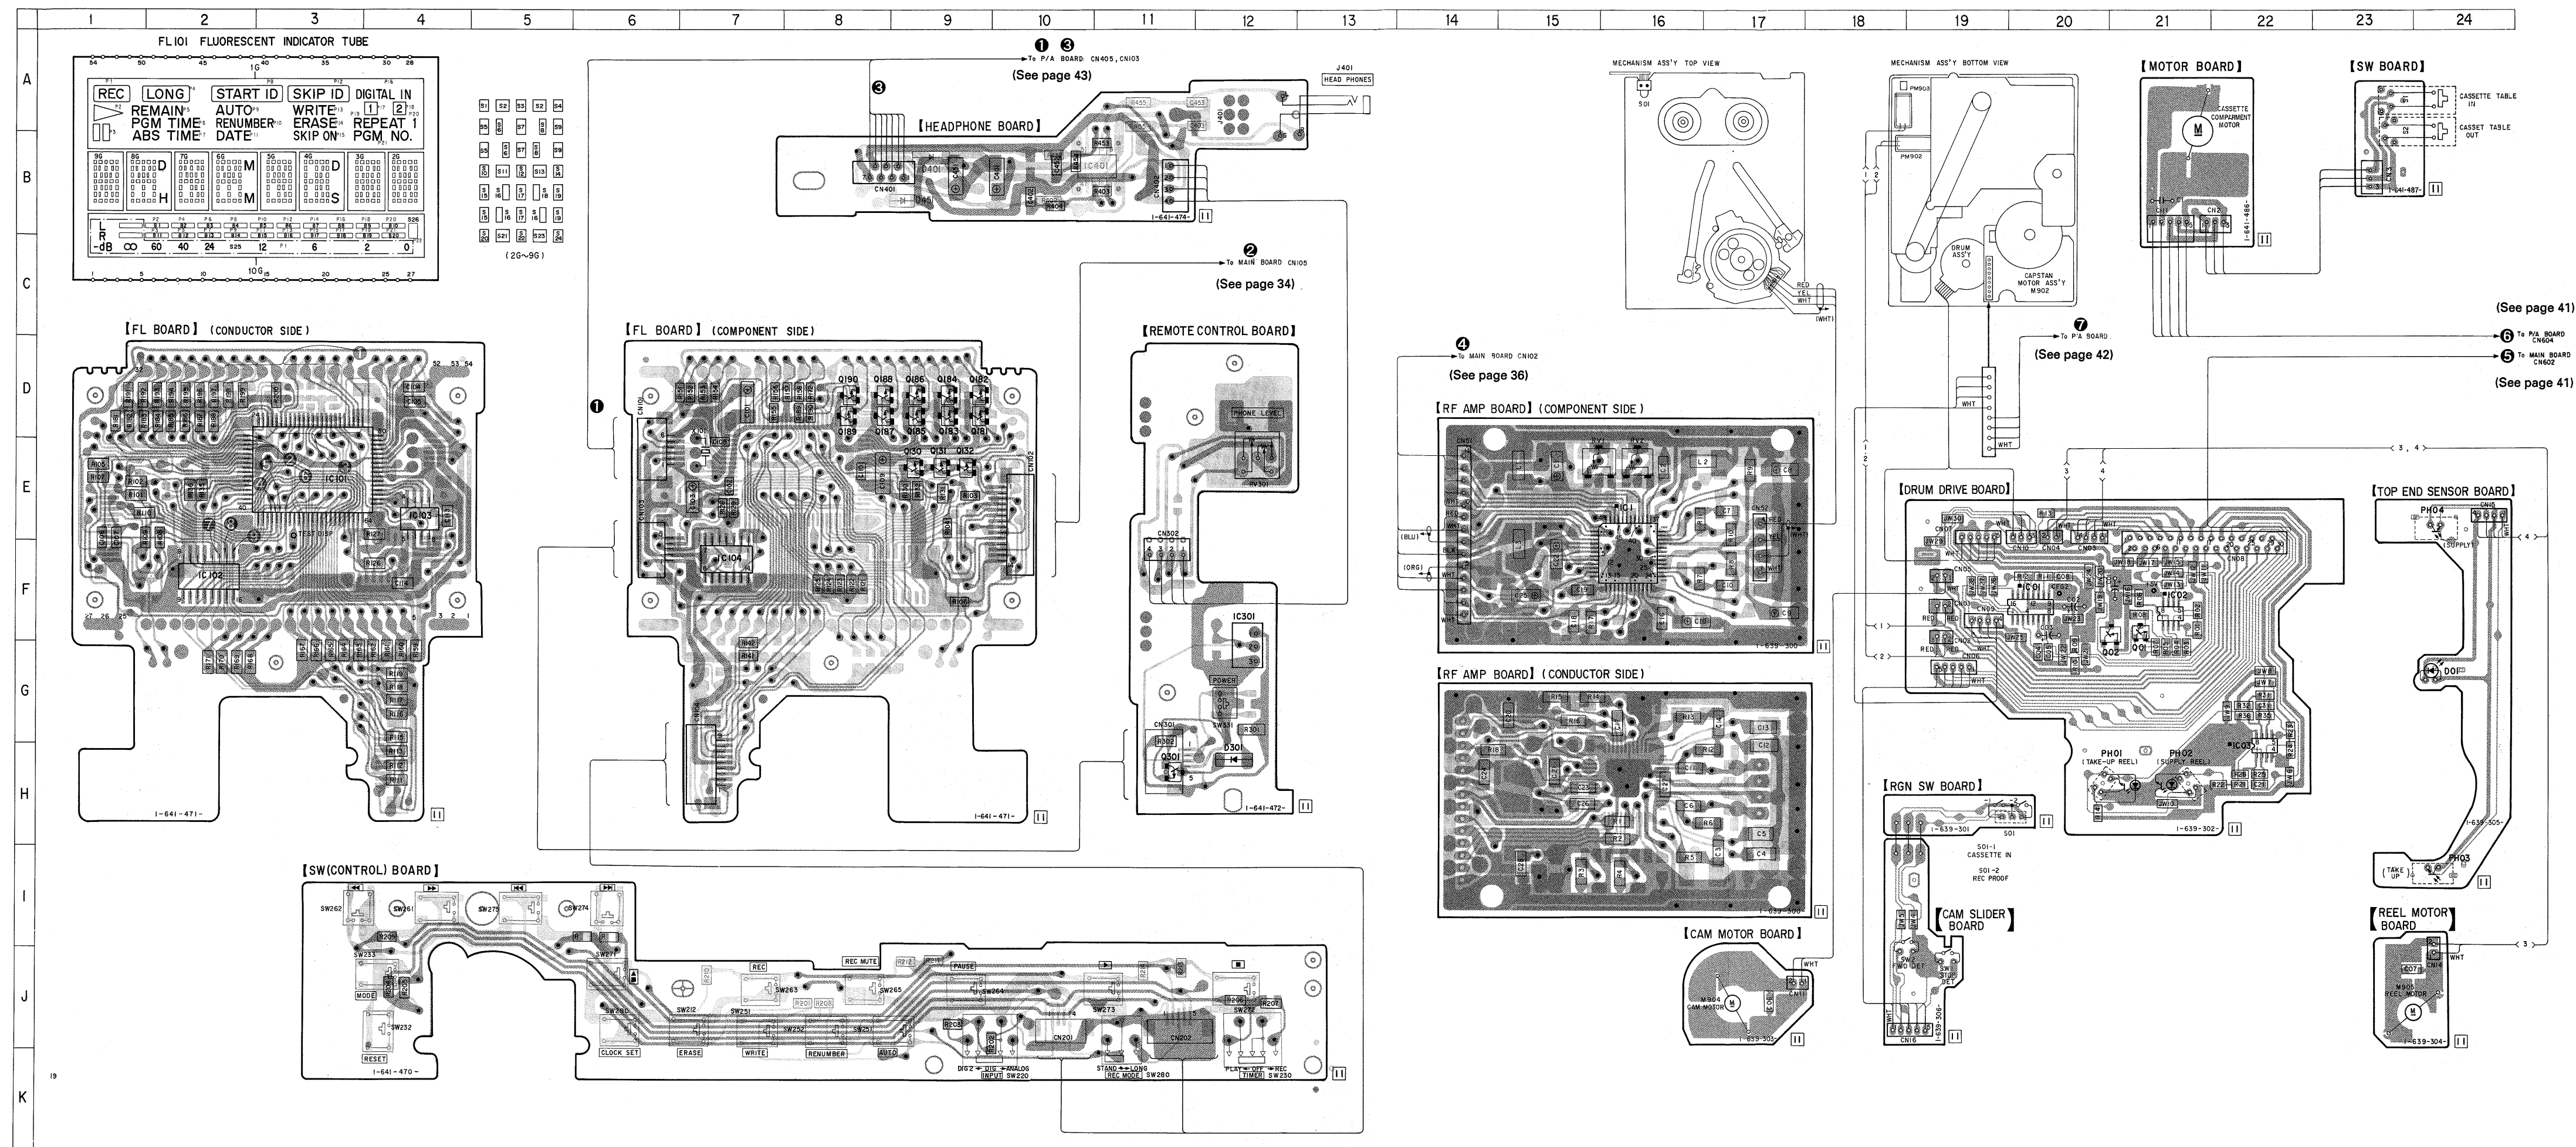

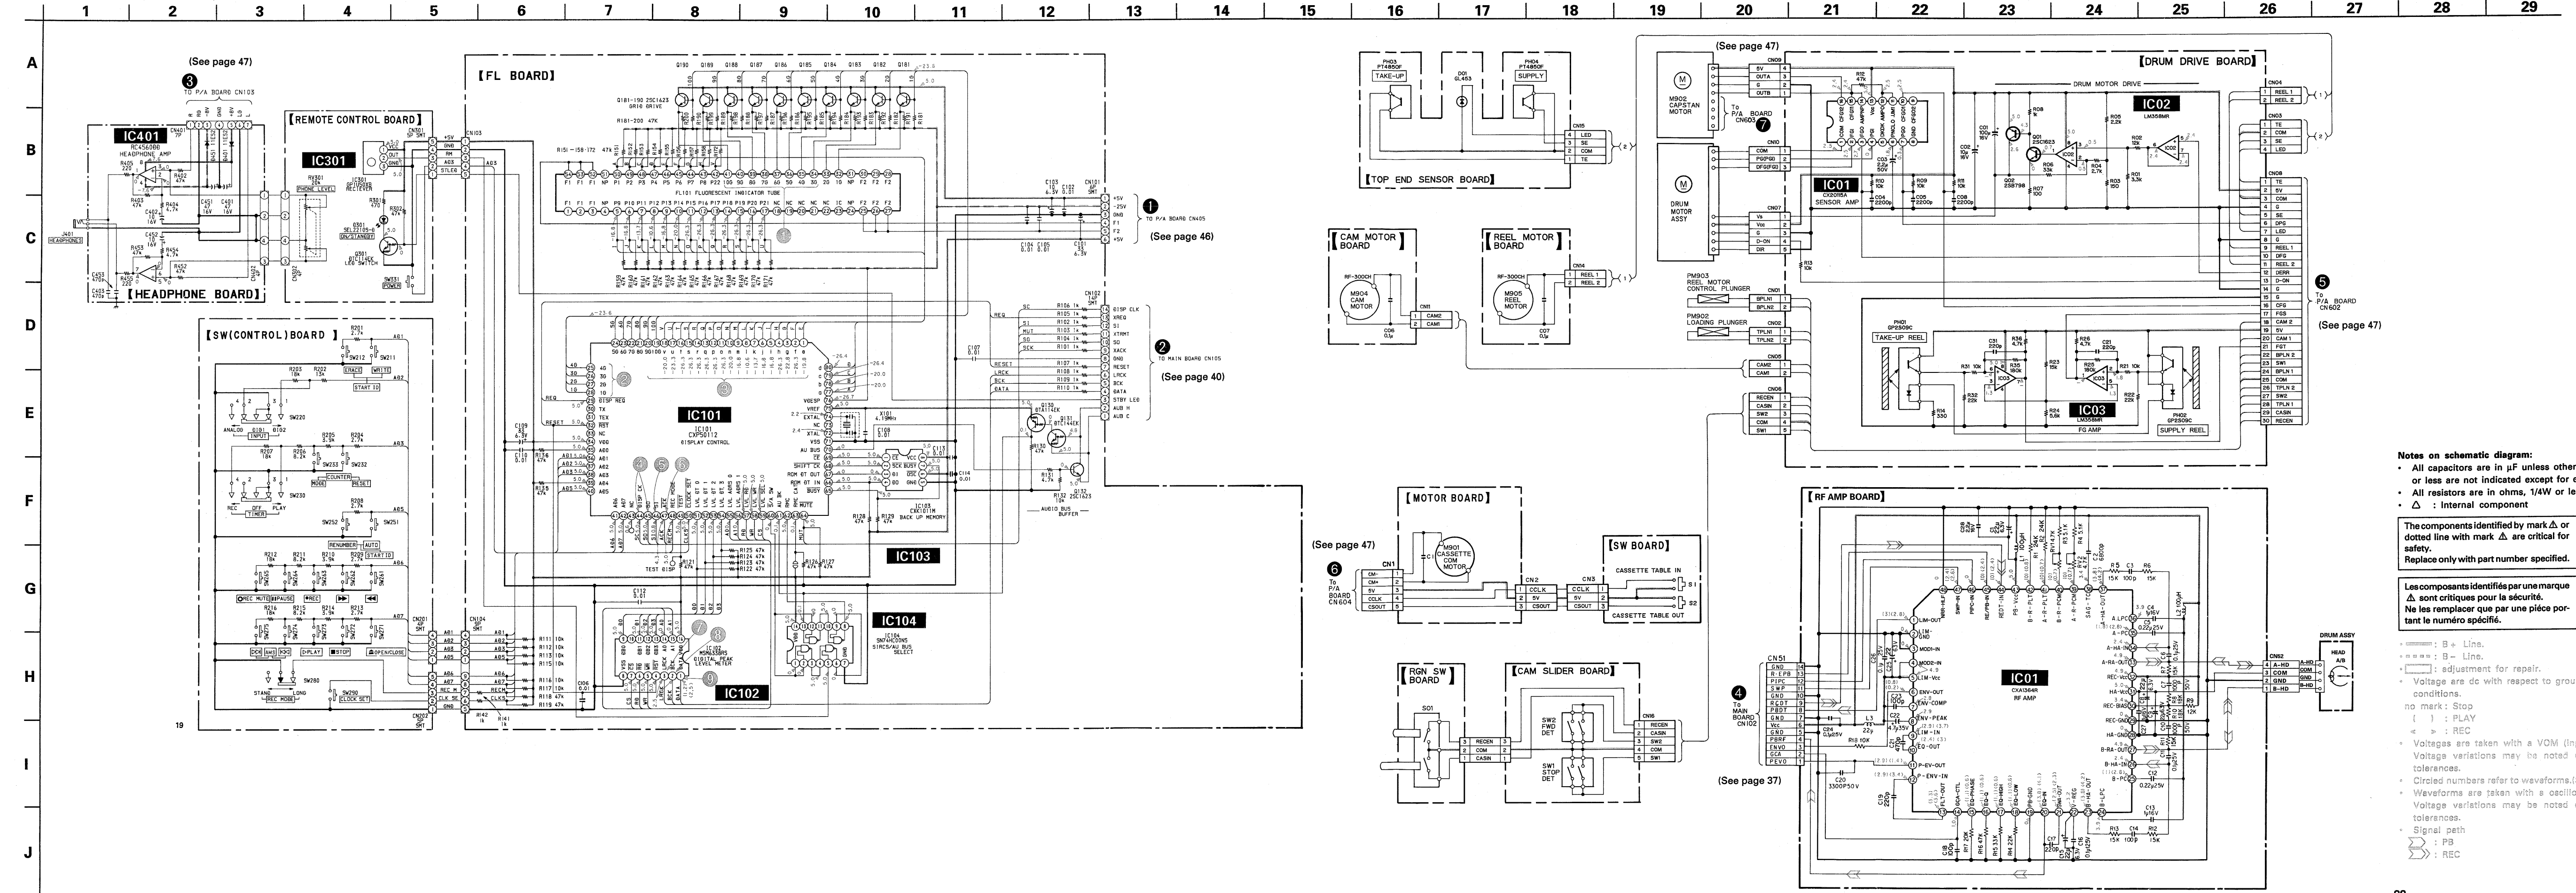

**Notes on schematic diagram:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\text{pF}$  50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in ohms, 1/4W or less unless otherwise noted.
- $\Delta$ : Internal component

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- ====: B+ Line.
- : B- Line.
- : adjustment for repair.
- Voltage are dc with respect to ground under no-signal (STOP) conditions.
- no mark: Stop
- { } : PLAY
- < > : REC
- Voltagés are taken with a VOM (input impedance 10M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms. (See page 21 for waveforms)
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Signal path
- ====> : PB
- ====> : REC








4-8. SCHEMATIC DIAGRAM - MAIN SECTION -

• See page 49 for IC block diagrams and 53 for pin functions.

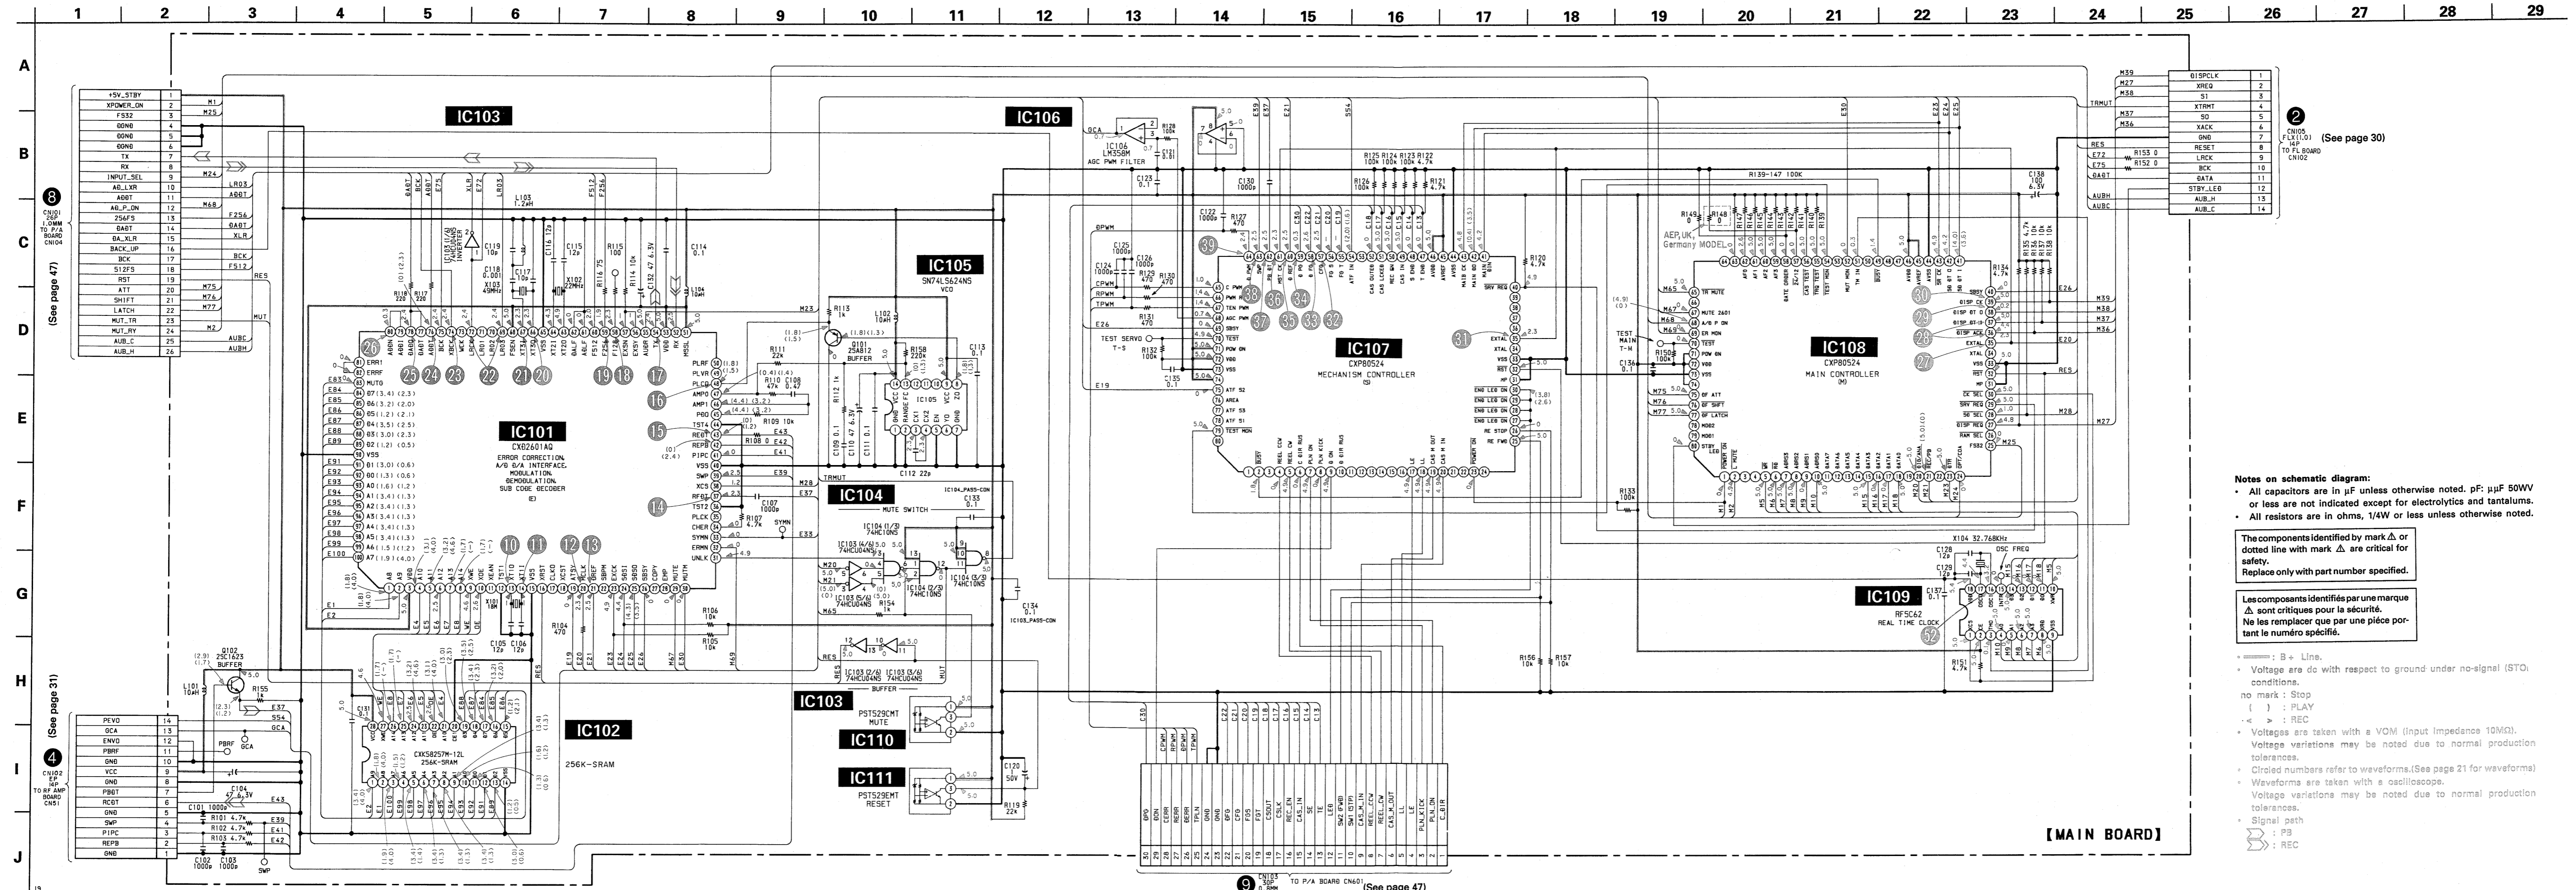

**[MAIN BOARD]**

**Notes on schematic diagram:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{F}$  50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in ohms, 1/4W or less unless otherwise noted.

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B + Line.
- Voltage are dc with respect to ground under no-signal (STO) conditions.
- no mark : Stop
- ( ) : PLAY
- < > : REC
- Voltagés are taken with a VOM (input impedance 10M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms (See page 21 for waveforms)
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Signal path
- : PB
- : REC

(See page 30)

(See page 47)

(See page 31)

(See page 47)



**4-9. PRINTED WIRING BOARDS**  
— AD/DA/POWER SUPPLY SECTION —


• See page 17 for circuit boards location and 23 for semiconductor lead layouts.

● **SEMICONDUCTOR LOCATION**


Ref. No.	Location	Ref. No.	Location
D102	G-15	IC115	C-9
D103	F-15	IC116	C-7
D104	D-20	IC117	C-20
D105	E-14	IC118	C-8
D106	E-14	IC119	C-7
D301	G-10	IC120	G-9
D401	E-8	IC121	F-10
D402	E-6	IC122	G-9
D403	E-18	IC123	C-7
D404	D-20	IC125	G-12
D405	D-19	IC401	E-7
D406	E-9	IC402	E-18
D501	C-2	IC501	E-2
D502	D-2	IC502	D-1
D601	G-22	IC503	E-2
D602	F-20	IC601	G-19
D603	F-5	IC602	G-7
D604	G-5	IC603	G-18
*D601	G-2	Q101	G-11
*D602	G-2	Q102	G-11
*D603	G-2	Q103	G-11
IC101	D-14	Q104	C-10
IC102	E-13	Q105	D-10
IC103	F-14		
IC104	E-14	Q106	D-19
IC105	G-12	Q401	D-20
IC106	F-12	Q601	G-20
IC107	F-16	Q602	G-8
IC108	E-11		
IC109	E-12	Q603	G-19
IC110	E-11	Q604	F-7
IC111	E-12	Q605	G-20
IC112	C-11	Q606	F-20
IC114	C-10	Q607	F-8

\* mark: LED Board

- Notes on printed wiring boards:**
- — : Indicated a lead wire mounted on the component side.
  - : parts mounted on the conductor side.
  - : Through hole.
  - ▨ : Pattern from the side which enables seeing.
  - ▩ : Pattern of the rear side.
  - G : Germany model

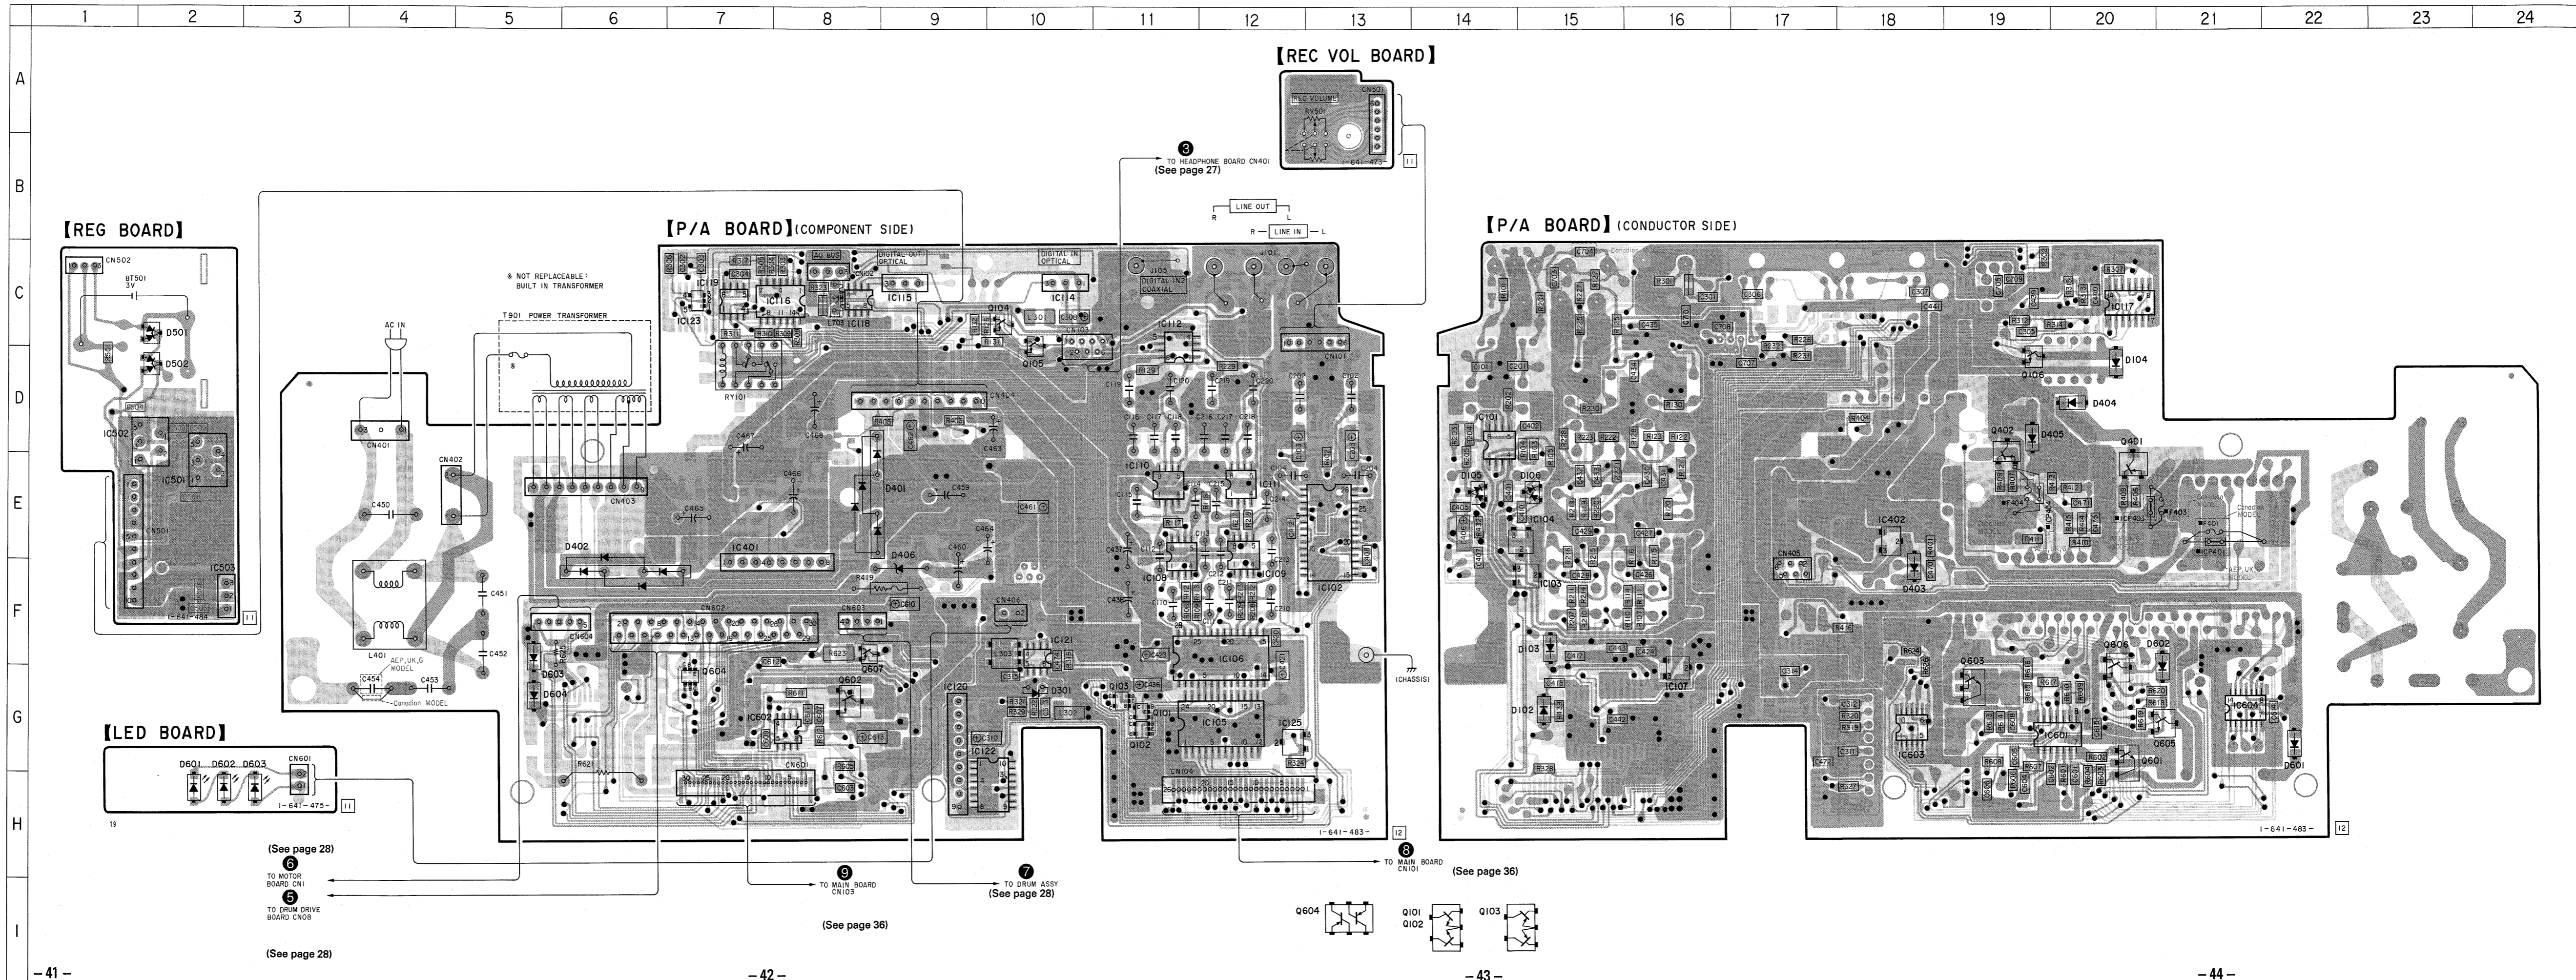



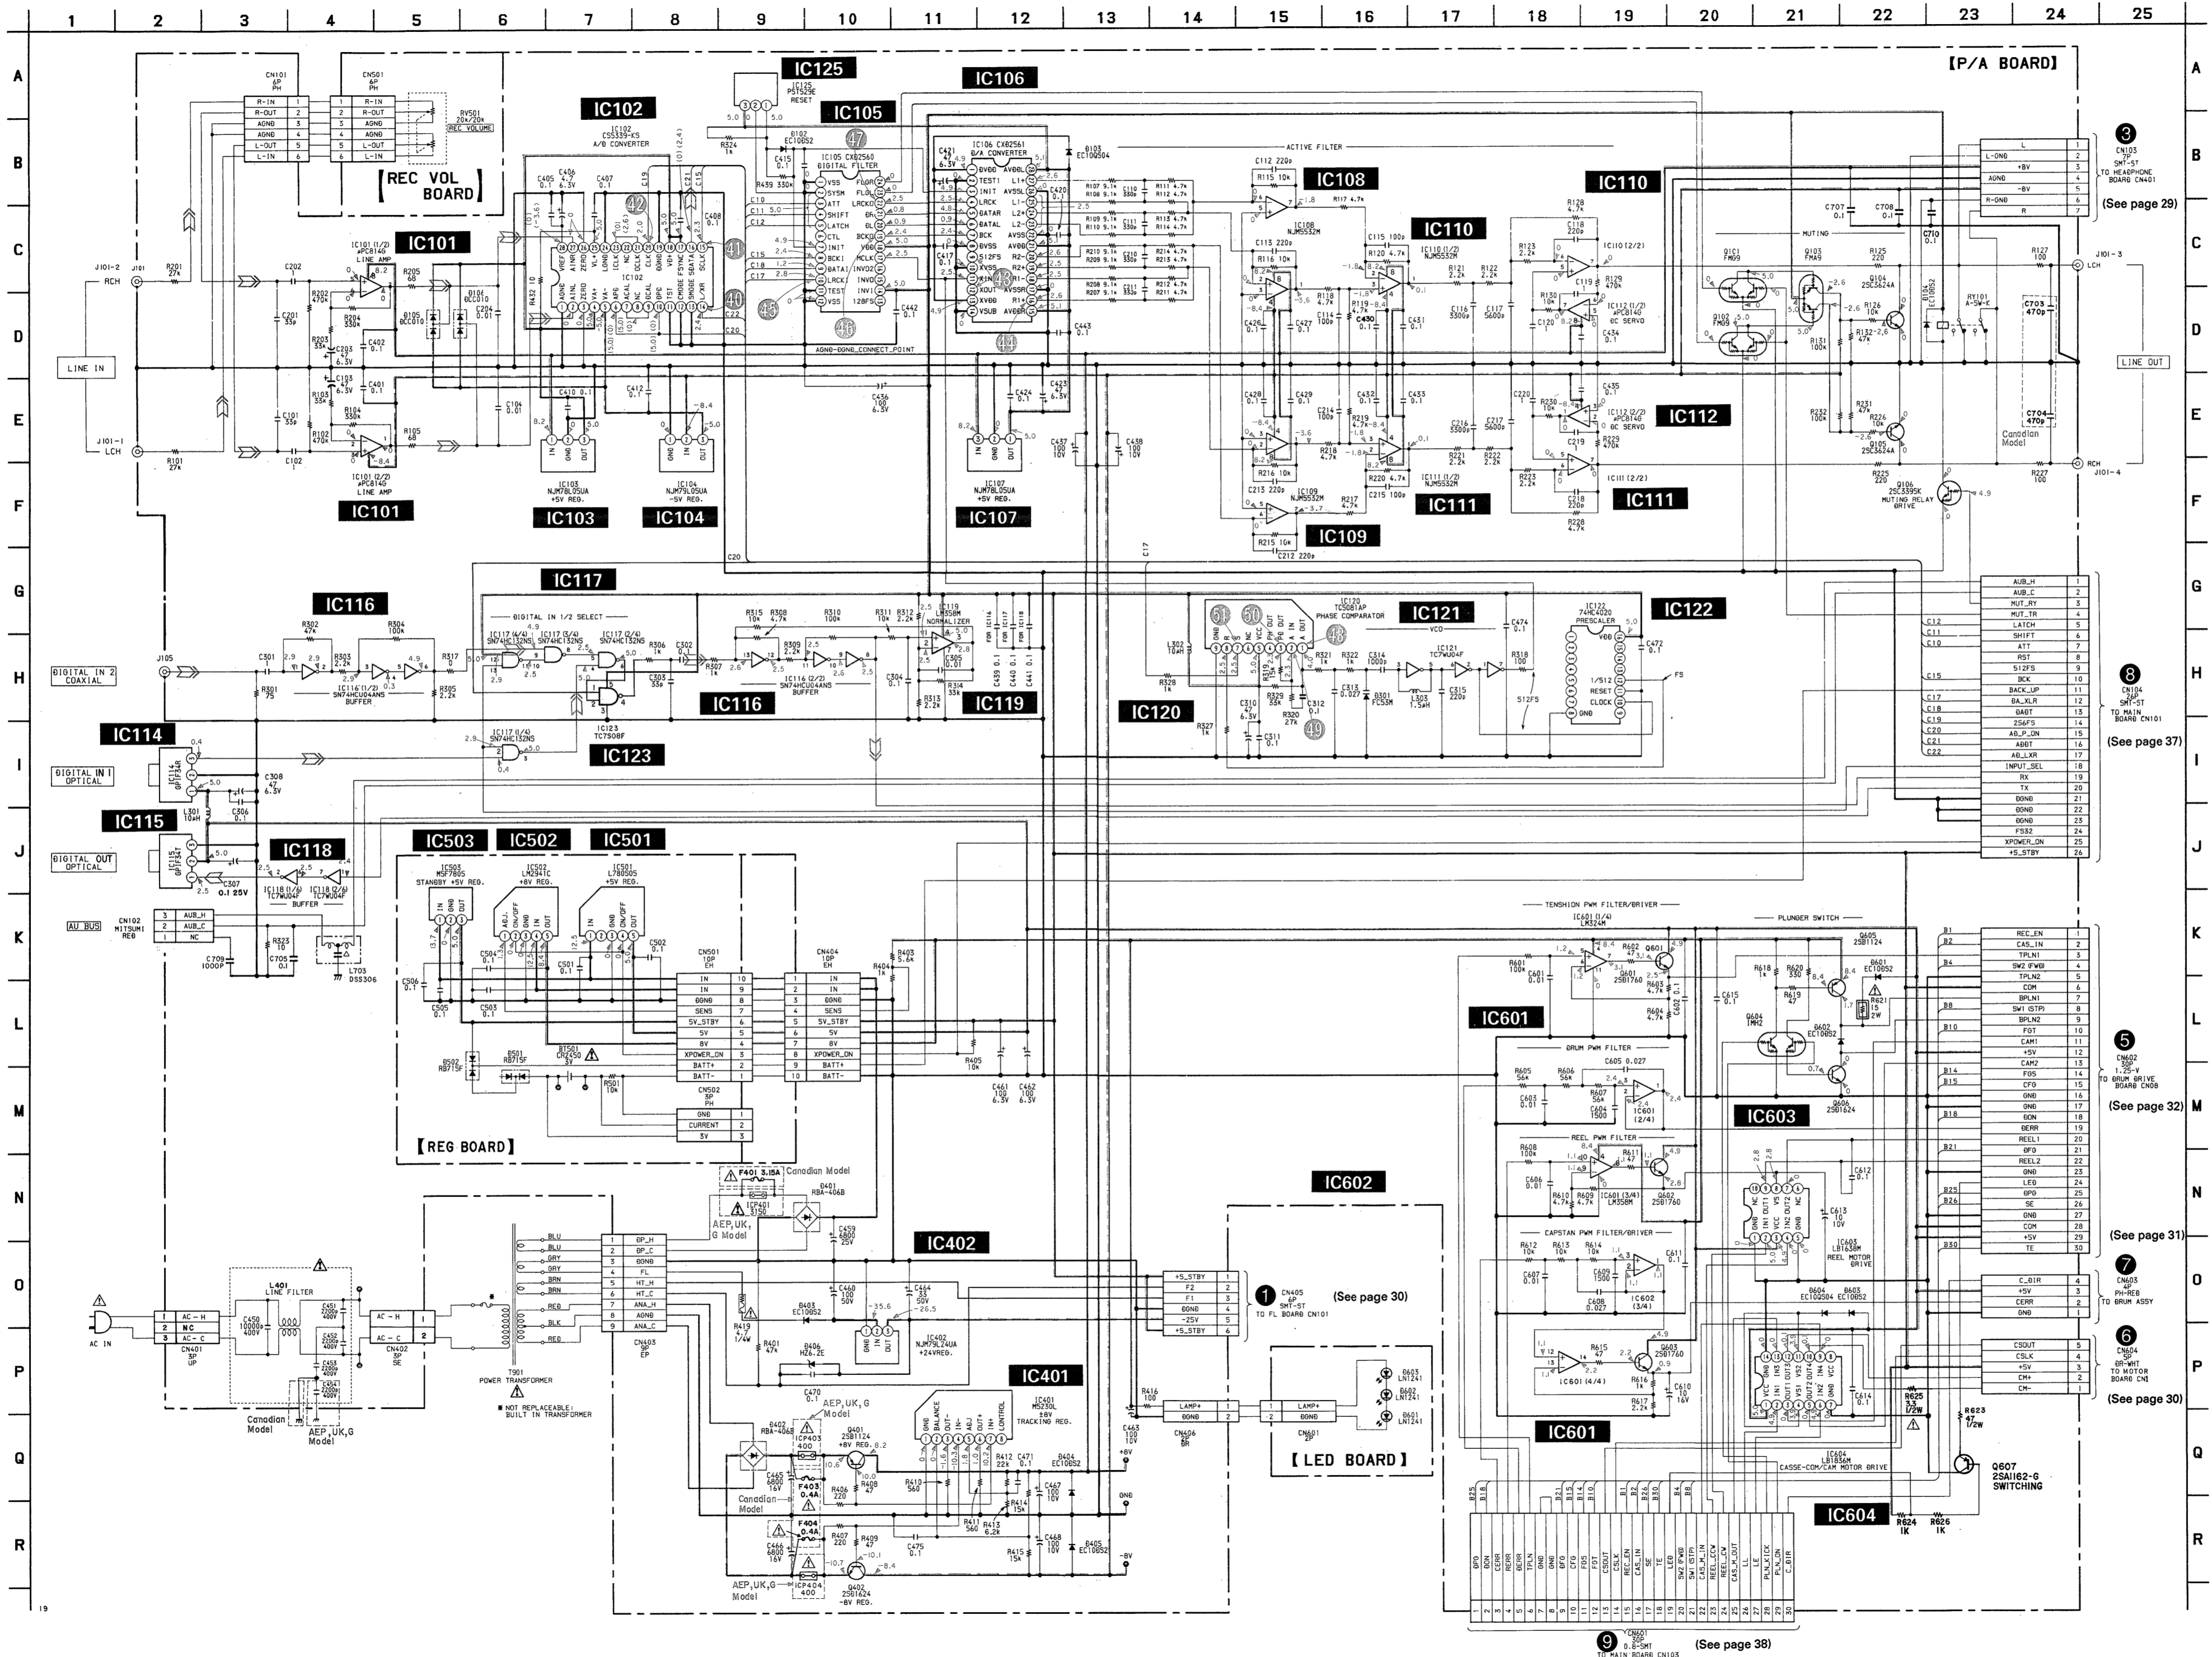

③ CN105 SWT-ST TO HEADPHONE BOARD CN401 (See page 29)

⑧ CN104 SWT-ST TO MAIN BOARD CN101 (See page 37)

⑤ CN602 1.25-V TO BRUSH DRIVE BOARD CN08 (See page 32)

⑦ CN603 PH-REG TO BRUSH DRIVE BOARD CN1 (See page 31)

⑥ CN604 SW-REG TO MOTOR BOARD CN1 (See page 30)

⑨ Y0001 TO MAIN BOARD CN105 (See page 38)

**Notes on schematic diagram:**  
 • All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\text{F}$  50V or less are not indicated except for electrolytics and tantalums.  
 • All resistors are in ohms, 1/4W or less unless otherwise noted.  
 •  $\Delta$ : Internal component  
 •  $\nabla$ : Fuse resistor  
 •  $\square$ : Nonflammable resistor


The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


- B + Line.
- B - Line.
- Voltage are dc with respect to ground under no-signal (STOP) conditions.
- no mark : Stop
- ( ) : PLAY
- < > : REC
- Voltages are taken with a VOM (input impedance 10M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.(See page 21 for waveforms)
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Signal path
- : FB
- ◁ : REC
- G : Germany model

4-11. IC BLOCK DIAGRAMS


• DRUM DRIVE BOARD  
IC01 CX20115A

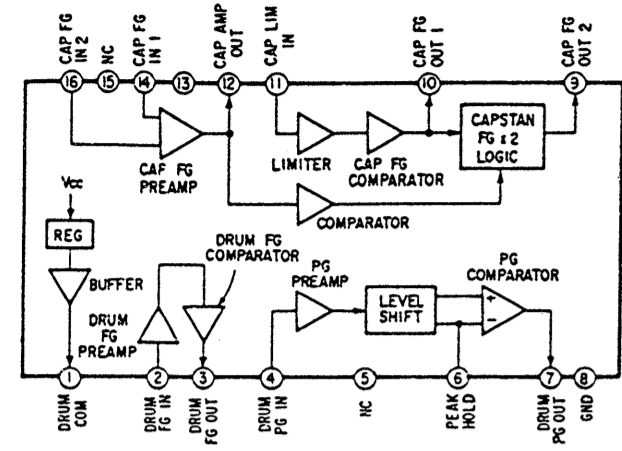


• RF AMP BOARD  
IC1 CXA1364R

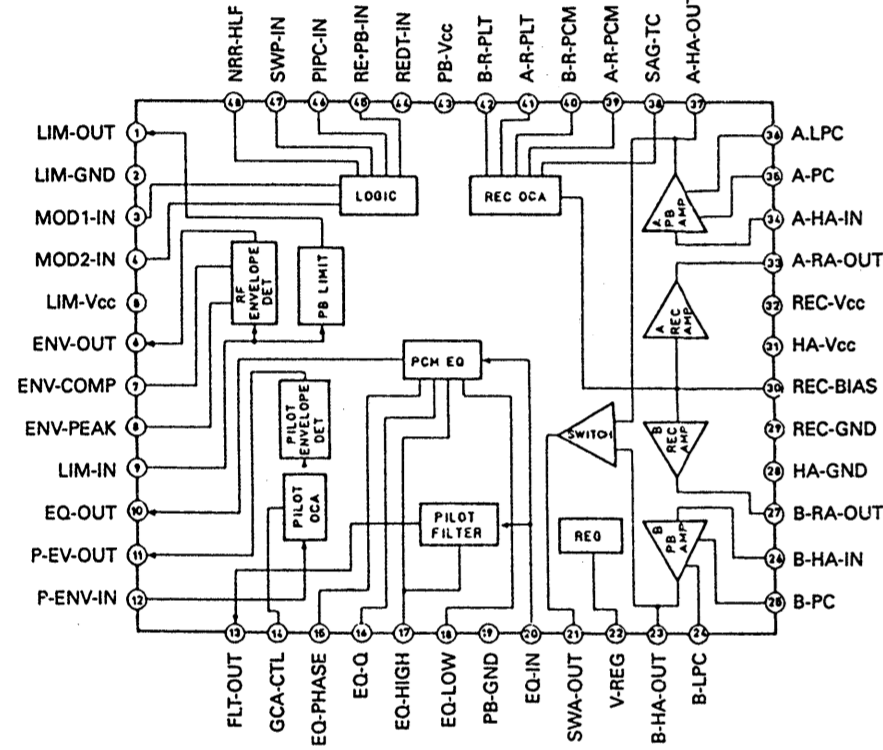


• MAIN BOARD  
IC101 CXD2601AQ

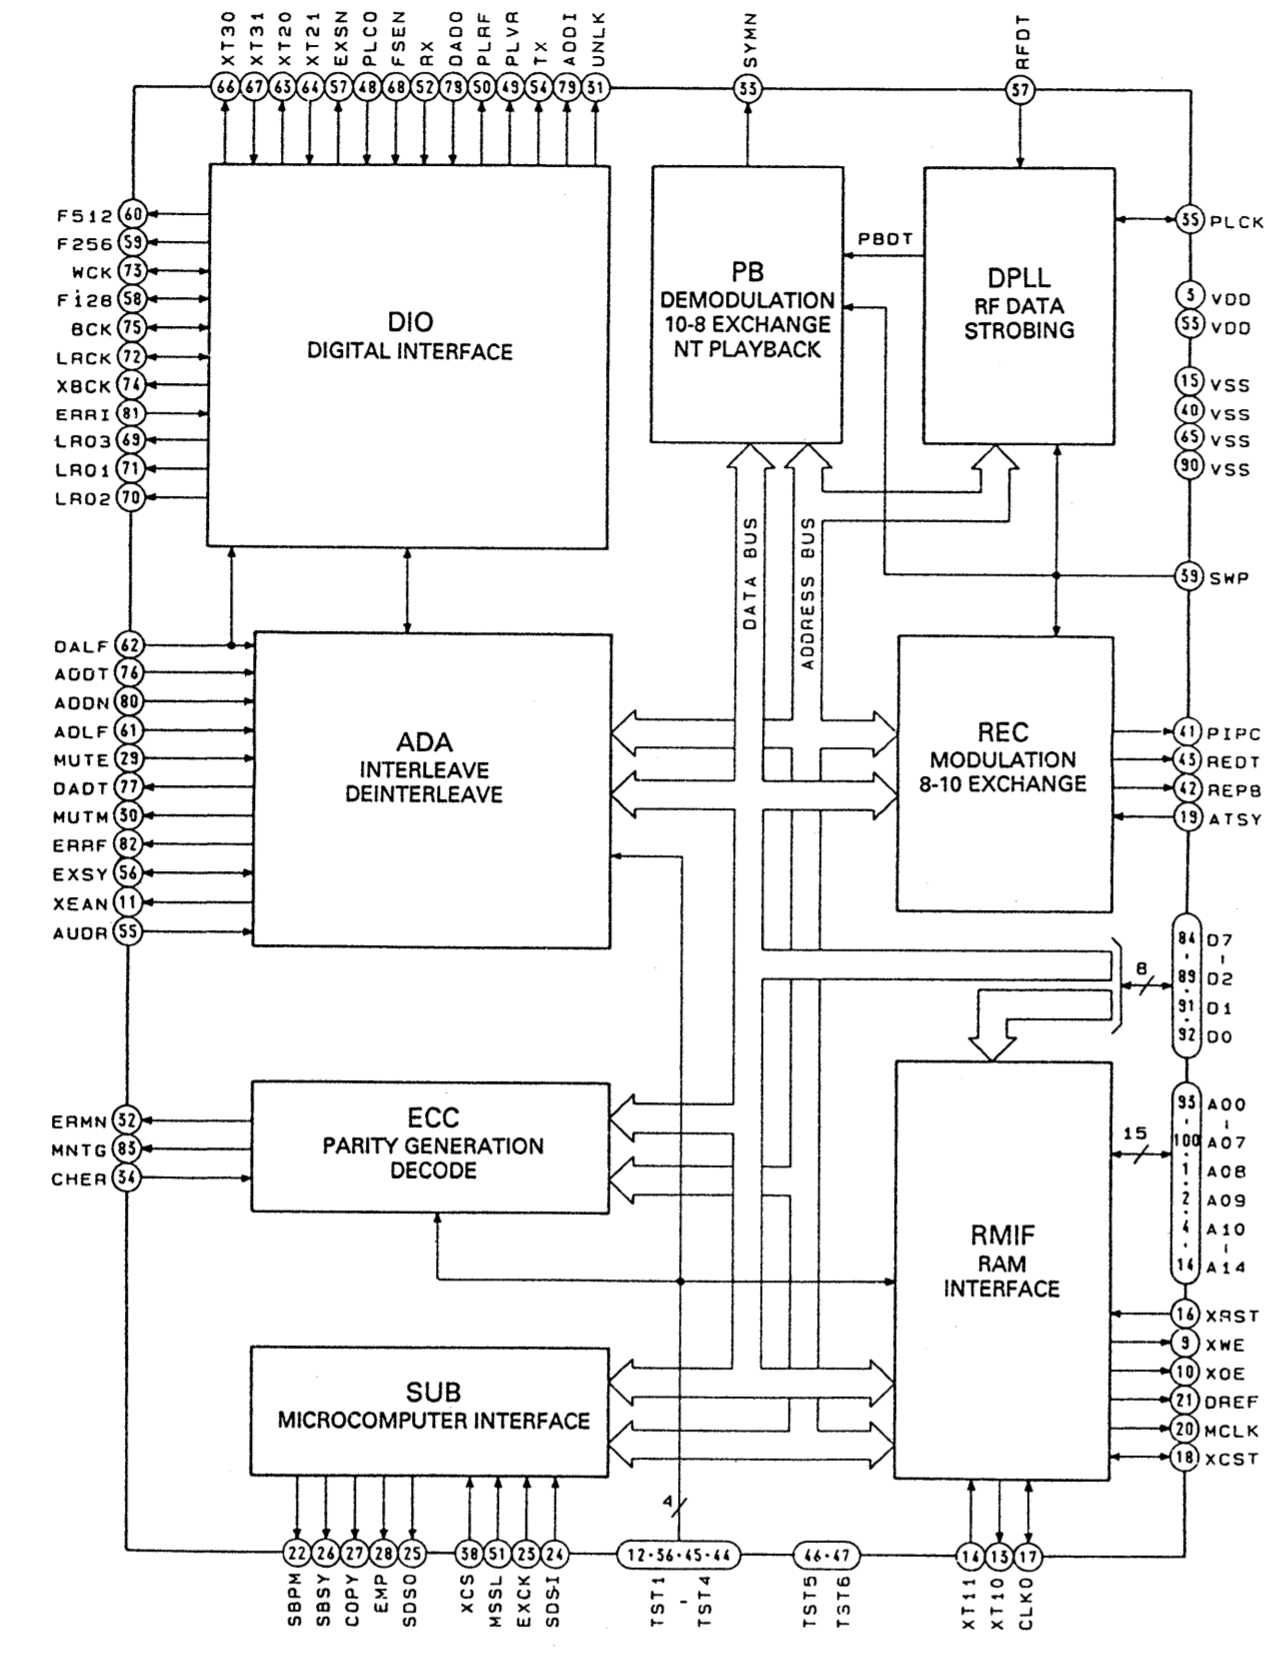


IC105 SN74LS624NS

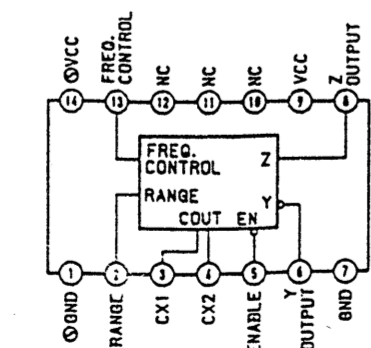


P/A BOARD  
IC105 CXD2560M

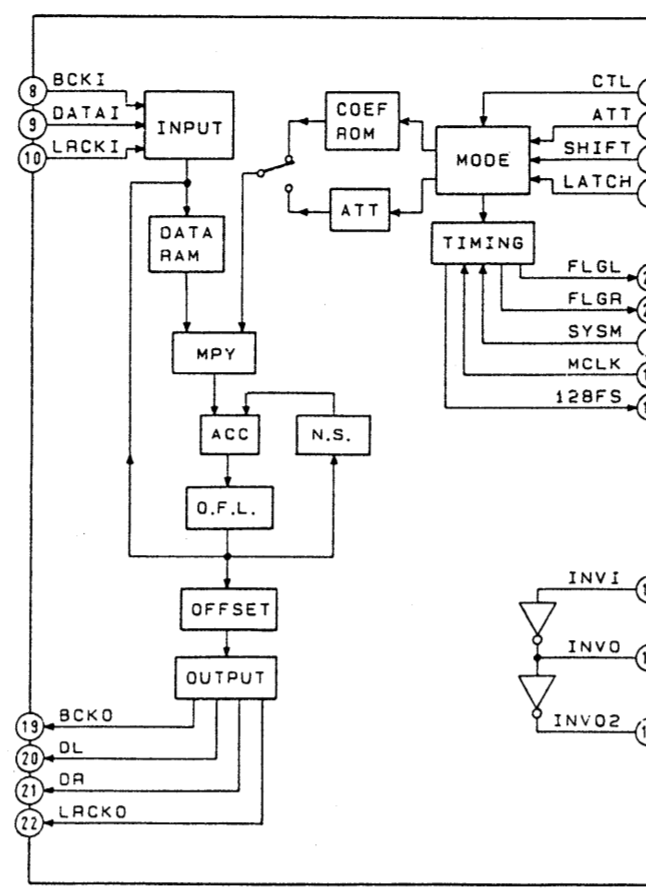


IC106 CXD2561M-1

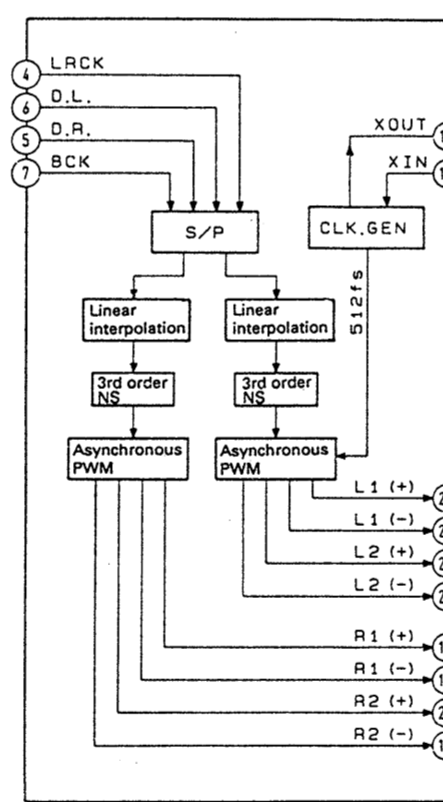


IC120 TC5081AP

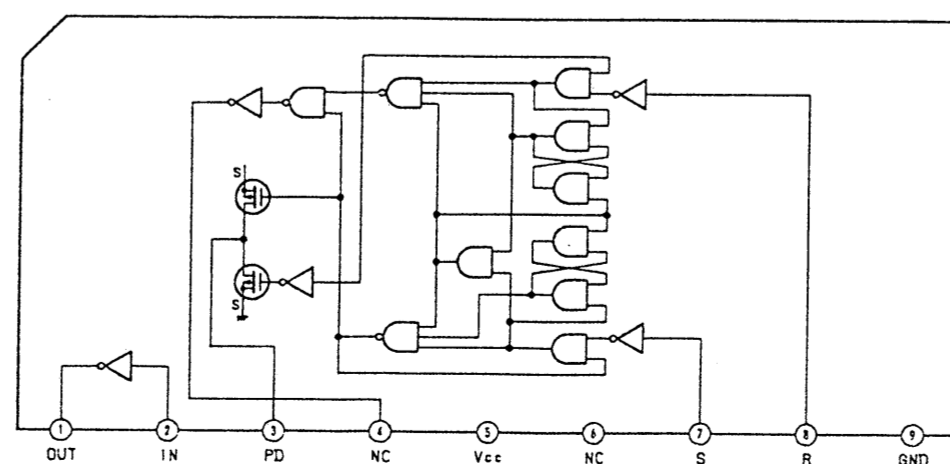


IC121 CS5339-KS

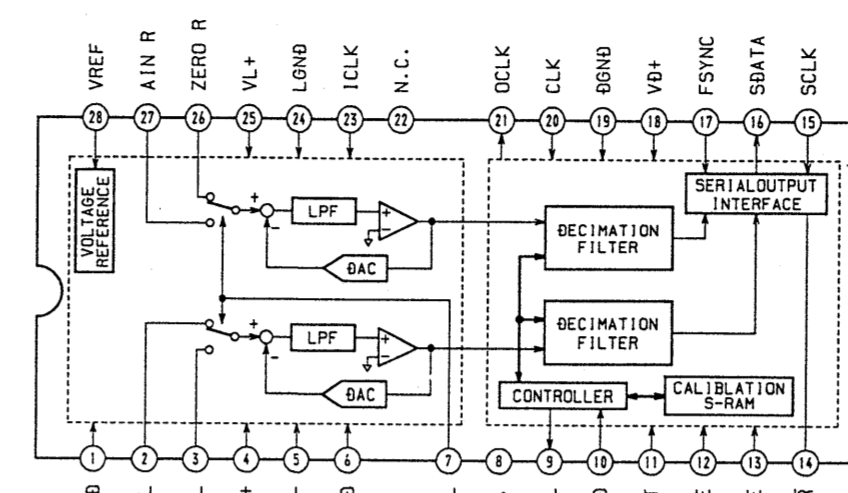


IC401 M5230L

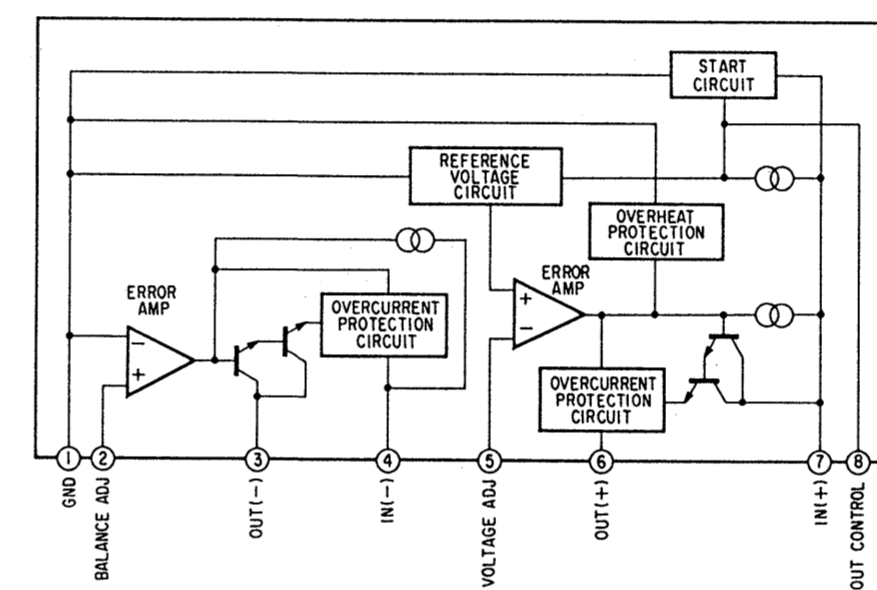

IC603 LB1638M

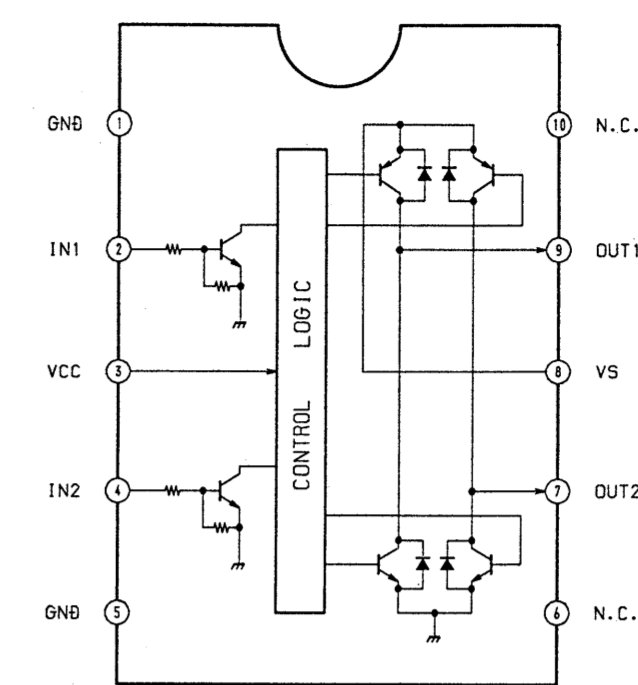

IC604 LB1836M

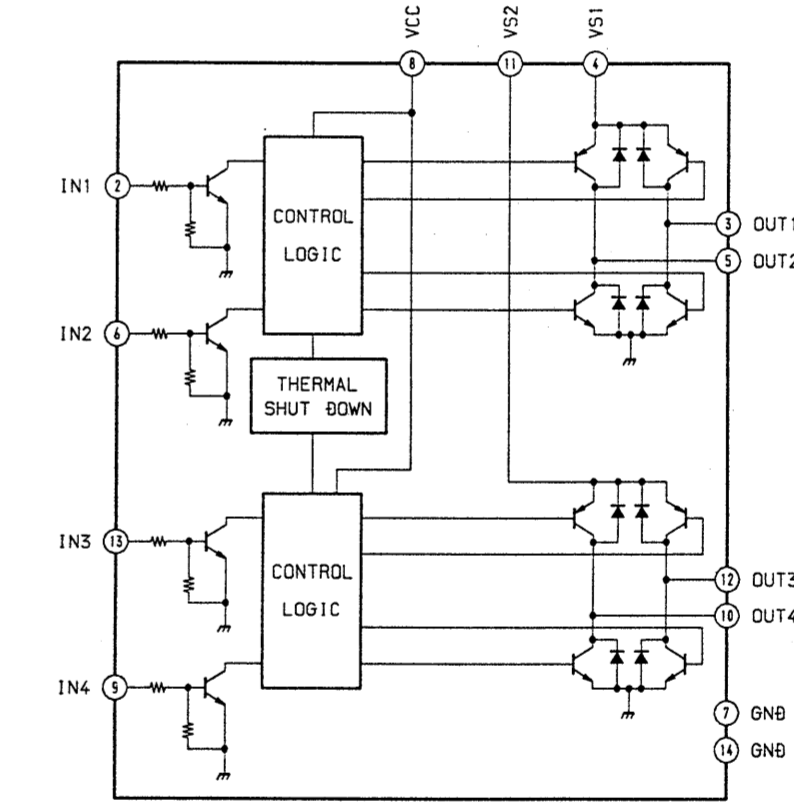



## 4-12. PIN FUNCTIONS

### IC101 DAT Signal Processor (CXD2601AQ)

This processor is an LSI to process recording and playback signals of the R-DAT system, in a single chip and provided with digital PLL, modem, error correction circuit, digital I/O, RAM control circuit, etc.

Pin No.	Pin Name	I/O	Description
1, 2	A08, A09	I/O	RAM address A08, A09
3	VDD	—	5 V
4-6	A10-A12	I/O	RAM address A10-A12
7, 8	A13, A14	O	RAM address A13, A14
9	XWE	O	RAM write enable signal
10	XOE	O	RAM output enable signal
11	XEAN	O	External addressing bus interrupt enable signal
12	TST1	I	Test pin (normally "L")
13	XT1O	O	18.816 MHz crystal oscillator output
14	XT1I	I	18.816 MHz crystal oscillator input
15	VSS	—	GND
16	XRST	I	Reset pin (normally "H")
17	CLKO	I/O	18.816 MHz clock output
18	XCST	I/O	SYEK (internal system clock) generation CLKO division timing signal
19	ATSY	I	ATF sync signal input
20	MCLK	O	9.408 MHz clock output
21	DREF	O	Drum servo reference signal
22	SBPM	O	Discrimination signal determining whether the subcode I/O clock (EXCK) is accepted ("L": accept, "H": ignore)
23	EXCK	I	Subcode I/O data transfer clock (DUTY50)
24	SDSI	I	Subcode serial data input
25	SDSO	O	Subcode serial data output
26	SBSY	O	Subcode I/O sync signal
27	COPY	O	Copy data output
28	EMP	O	Emphasis data output
29	MUTE	I	Mute pin
30	MUTM	O	Mute discrimination signal ("H": muted)
31	UNLK	O	RX PLL lock discrimination signal ("H": locked)
32	ERMN	O	Detects presence or absence of RF ("H": RF present, "L" during REC)
33	SYMN	O	C1 check result for RF ("H": OK)
34	CHER	I	Signal for discriminating whether C2 is 1 or 2 times (C2 → C1 → C2 or C1 → C2) ("H": 1 time, "L": 2 times)
35	PLCK	I/O	RF PLL clock output
36	TST2	I	Test pin (normally "L")
37	RFDT	I	RF signal input
38	XCS	I	Subcode I/O chip select ("L": select)
39	SWP	I	RF switching pulse ("L": A-CH, "H": B-CH)
40	VSS	—	GND
41	PIPC	O	REC data PILOT/PCM discrimination signal ("H": PILOT, during playback: always "L")
42	REPB	O	Record/playback switching signal ("H": record)
43	REDT	O	Recording signal output, fixed "L" during playback
44	TST4	I	Test pin (normally "L")
45	TST3	O	RX APLL PD output (comparator output)
46	TST5	I	RX APLL oscillator cell amp input
47	TST6	O	RX APLL oscillator cell amp inverted output
48	PLCO	I	RX APLL external VCO clock input
49	PLVR	O	RX APLL comparison signal when external comparator is active (Vin) Not in use

Pin No.	Pin Name	I/O	Description
50	PLVF	O	RX APLL comparison signal when external comparator is active (Rin) Not in use
51	MSSL	I	Master/slave setting ("H": master (fixed with the equipment), "L": slave)
52	RX	I	Digital input
53	VDD	—	5 V
54	TX	O	Digital output
55	AUDR	I	Audio mode/data recorder mode setting ("H": audio mode, "L": data recorder mode)
56	EXSY	I/O	Complete copy sync signal (25/3 - 100/3 Hz)
57	EXSN	I/O	Complete copy sync signal (25/3 - 100/3 Hz)
58	F128	I/O	128fsCK (normal)/256fsCK (×2) (DUTY50)
59	F256	O	256fsCK (normal)/512fsCK (×2) (DUTY50)
60	F512	O	512fsCK (normal)/512fsCK (×2) (DUTY50)
61	ADLF	I	Signal for discriminating whether ADDT serial data is MSB first or LSB first ("H": LSB first)
62	DALF	I	Signal for discriminating whether DADT serial data is MSB first or LSB first ("H": LSB first)
63	XT20	O	22.5792 MHz crystal oscillator output
64	XT21	I	22.5792 MHz crystal oscillator input
65	VSS	—	GND
66	XT30	O	49.152 MHz crystal oscillator output (24.576 MHz in B mode)
67	XT31	I	49.152 MHz crystal oscillator input (24.576 MHz in B mode)
68	FSEN	I	F128, BCK, LRCK input/output switch ("H": output)
69	LR03	O	LR02 inversion
70	LR02	O	LRCK 16BCK delay signal
71	LR01	O	LRCK 15BCK delay signal
72	LRCK	I/O	fs (normal)/2fs (×2) ("L": L-CH, "H": R-CH)
73	WCK	I/O	2fs (normal)/4fs (×2) (input mode only for testing)
74	XBCK	O	BCK inversion
75	BCK	I/O	64fs (normal)/128fs (×2)
76	ADDT	I	Serial AD data (complement of 2)
77	DADT	O	Serial DA data (complement of 2)
78	DADO	I	Digital output (DA) data input (normally connected to DADT)
79	ADDI	O	Digital input (AD) data output (normally connected to ADDN)
80	ADDN	I	Digital input (DA) data input
81	ERRI	I	Digital output V-FLAG data input (normally connected to ERRF)
82	ERRF	O	Signal output for discriminating whether or not DADT has interpolated data ("H": interpolated data)
83	MNTG	O	Error correction status monitor trigger
84-89	D7-D2	I/O	RAM data bus D7-D2
90	VSS	—	GND
91, 92	D1, D0	I/O	RAM data bus D1, D0
93-100	A00-A07	I/O	RAM address A00-A07

**IC107 Mechanism/Servo Micro-computer (CXP80524-043Q)**

The mechanical deck servo systems are controlled by the captioned micro-computer according to instructions from the main micro-computer (IC108).

Pin No.	Pin Name	I/O	Connected to	Description
1	PAUSE	O		"H" : PAUSE mode of mechanism
2	BUSY	O	Main Micon	Busy (Active "L") to the Main Micon
3	CAP-ON	O		"H" : Rotating is capstan motor
4	REEL_CCW	O	Mechanism	Reel motor CCW ("L": RVS direction)
5	REEL_CW	O	Mechanism	Reel motor CW ("H": FWD direction) }*1
6	C_DIR_RVS	O	Mechanism	Capstan Direction ("L": FWD, "H": RVS)
7	PLN_ON	O	Mechanism	Plunger On
8	PLN_KICK	O	Mechanism	Plunger Kick
9	D_ON	O	Mechanism	Drum On ("H": The drum is revolving)
10	D_DIR_RVS	O	Mechanism	Not in use
11	TRANS-ACT	O		When the mechanism is in transition : "H"
12	FWD	O		Upon X1 FWD : "H"
13	REC-FWD	O		Upon REC : "H"
14	FWD-RUS	O		In FWD queue-reviewing : "H"
15	CAP-X16	O		In 16X fast mode : "H"
				Mechanism monitor output
16	FF-REW	O		Upon FF. REW : "H"
17	LE	O	Mechanism	Loading Motor Eject }*2
18	LL	O	Mechanism	Loading Motor Load }*2
19	CAS_M_OUT	O	Mechanism	Cassette control motor Out }*3
20	CAS_M_IN	O	Mechanism	Cassette control motor In }*3
21	SPD-05	O		When the mechanism is rotating in long-time mode : "H" } Mechanism monitor
22	SPD-15	O		When the mechanism is rotating in 15X fast mode : "H" } output
23	POWER ON	I	Main Micon	Upon Power Supply ON : "L"
24		—		Not in use
25	RE_FWD	I	Mechanism	Encoder SW2 }*4
26	RE_STOP	I	Mechanism	Encoder SW1 }*4
27-30	END_LED_ON	O	Mechanism	End sensor ON Illuminated upon "L" (rectangular wave of about 1kHz). It is not output unless a cassette is mounted ("H").
31	MP	I		Microprocessor mode selected (the equipment is fixed at "L").
32	RST	I		System Reset (low active)
33	Vss	—		Power terminal (GND)
34	XTAL	O		System Clock Output
35	EXTAL	I	CXD2601AQ	System Clock Input (9.408 MHz)
36-39		—		Not in use
40	X_SRV_REQ	I	Main Micon	Request for communication from the Main Micon
41	MAIN_DT_I	I	Main Micon	Serial Input from the Main Micon
42	MAIN_DT_O	O	Main Micon	Serial Output to the Main Micon
43	MAIN_CK	I	Main Micon	Serial Clock with the Main Micon
44	AVss	—		GND for A/D
45	AVref	—		Reference Voltage for A/D (+5 V)
46	AVdd	—		Power Supply for A/D (+5 V)
47	T_END	I	Mechanism	Take-up side end sensor input (analog) } Magnetic matter: 0V,
48	S_END	I	Mechanism	Supply side end sensor input (analog) } Leader tape: AC (*5)
49	CAS_IN	I	Mechanism	Cassette-in switch (S01). "H": Cassette is mounted.
50	REC_EN	I	Mechanism	Rec-enable switch (S01). "H": REC enabled.
51	CAS_LCKed	I	Mechanism	Casecon locked Upon completion of loading: "H"

Pin No.	Pin Name	I/O	Connected to	Description
51	CAS_LCKed	I	Mechanism	Casecon locked Upon completion of loading: "H"
52	CAS_OUTed	I	Mechanism	Casecon outed Upon completion of loading OUT: "H"
53		I		Not in use
54	ATF_IN	I	RF Amp	ATF PILOT input
55	FG_T	I	Mechanism	Reel FG (T Side) 6/24Hz (Small reel diameter) -
56	FG_S	I	Mechanism	Reel FG (S Side) 15/24Hz (Large reel diameter) (In SP FWD)
57	C_FG	I	Mechanism	Capstan FG SP: 674 Hz, LP: 337 Hz
58	D_FG	I	Mechanism	Drum FG 400 Hz: LP REC, 800 Hz: Other modes
59	D_PG	I	Mechanism	Drum PG Other than LP REC: 800/24Hz
60	D_REF	I	CXD2601AQ	Drum Reference In LP REC: 400/24Hz
61	MST_CK	I	CXD2601AQ	Master clock (9.408MHz)
62	PB_DT	I	RF Amp	PB Data input to create ATF Sync
63	SWP	O	CXD2601AQ	Switching Pulse "L": Ach, "H": Bch
64	D_PWM	O	Mechanism	PWM Out for Drum
65	C_PWM	O	Mechanism	PWM Out for Capstan
66	PWM_R	O	Mechanism	PWM Out for Reel
67	TEN_PWM	O	Mechanism	PWM Out for Tension Regulator Plunger
68	AGC_PWM	O	RF Amp	PWM Out for AGC
69	SBSY	I	CXD2601AQ	↓ of subsync is detected (XINT2).
70	TEST	I	Pull-up	Test Mode (active "L")
71	POW_DN	I		Not in use
72	Vdd	—		Power terminal (+5 V)
73	Vss	—		Power terminal (GND)
74		—		Not in use
75	ATF_S2	O	CXD2601AQ	ATF Sampling Pulse
76-78		—		Not in use
79	X_TEST_MON_S	O		"L" : Test mode (Monitor output of pin70)
80		O		Not in use

\* 1 Reel motor control

	CCW(counterclockwise)	CW(clockwise)
STOP(only in POWER ON)	L	L
FWD	L	H
RVS	H	L
Prohibit	H	H

\*2 Loading motor control


	LE	LL
—	L	L
LOAD	L	H
EJECT	H	L
Brake	H	H

\*3 Casecon motor control


	OUT	IN
—	L	L
IN	L	H
OUT	H	L
Brake	H	H

\*4 Encoder

RF-FWD	RE_STOP	Position
L	L	EJECT
L	H	STOP UNLD-STOP
H	L	FWD
H	H	STOP-FWD

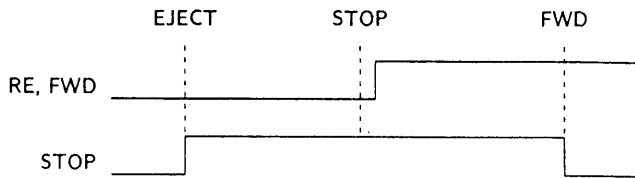

\*5 End sensor

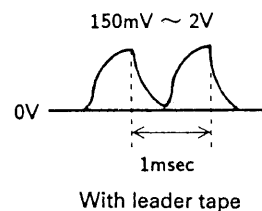

**IC108 Main Micro-computer (CXP80524-044Q)**

This Micro-computer generally controls the operation of the equipment while exchanging data with the display Micro-computer (IC101) and mechanism/servo Micro-computer (IC107) in serial communications, including the DAT signal processor (IC101), clock (IC109), digital filter (IC105) and other IC.

Pin No.	Pin Name	I/O	Connected to	Description	
1	POWER ON	O	IC501,502 (REGULATOR BOARD)	Power supply ON/OFF control. "L" : Power on	
2	L_MUTE	O		Line Out	Line Mute (Active "L")
3	TEST_MON_M	O			"L" : Test mode (Monitor output of pin ⑩)
4		O			Not in use
5	WRT	O		Clock IC	Write request (Active "L")
6	RD	O	Clock IC	Read request (Active "L")	
7-10	ADRS_3-0	O	Clock IC	Address 3-0 (Address BUS)	
11-14	DATA_7-4	I/O		DATA 7-4 (DATA BUS). Not in use with the equipment	
15-18	DATA_3-0	I/O	Clock IC	DATA 3-0 (DATA BUS)	
19	ATT_EXT	O	CXD1136Q	Fade attenuator ck externally selected (Active "L")	
20	DIG/ANA	O	CXD1136Q	Fade In/Out switching for DIG ("L")/ANA ("H")	
21	REC/PB	O	CXD1136Q	Fade In/Out REC switching for ("L")/PB ("H")	
22	ATT_CK	O	CXD1136Q	Clock for fade In/Out	
23	DTR	O	CXD2601AQ	Audio use ("H")/Data Recorder use ("L"). Becomes "L" in after-recording and searching.	
24	OPT/COA	O	Digital I/O	Switching for Optical ("L")/Coaxial ("H")	
25	FS32	O	1Bit DAC	"H" upon Fs = 32kHz. "L" for others.	
26	RAM_SEL	O		Not in use	
27	DISP_REQ	O	Display Micon	Request for communication with the Display Micon ("L" Active)	
28	SD_REQ	O	CXD2601AQ	Request for communication with CXD2601 ("L" Active)	
29	SRV_REQ	O	Mechanism Micon	Request for communication with the Mechanism Micon ("L" Active)	
30	CLOCK_SEL	O	Clock IC	Clock IC chip selected	
31	MP	I		Microprocessor mode selected (fixed at "L" with the equipment)	
32	RST	I		System Reset ("L" Active)	
33	Vss	—		Power terminal (GND)	
34	XTAL	O		System Clock Output	
35	EXTAL	I	CXD2601AQ	System Clock Input (9.048 MHz)	
36	DISP_ACK	I	Display Micon	ACKnowledge (Active "L")	
37	DISP_DT_I	I	Display Micon	Serial Input	
38	DISP_DT_O	O	Display Micon	Serial Output	
39	DISP_CK	I	Display Micon	Serial clock	
40	SBSY	I	CXD2601AQ	Subcode sync	
41	SR_DT_IN	I	CXD2601AQ & Mechanism Micon	Serial Data In	
42	SR_DT_OUT	O		Serial Data Out	
43	SR_CK	I/O		Serial clock (In/Out) to Sub Code Interface	
44	AVss	—		GND for A/D	
45	AVref	—		Reference Voltage for A/D (+5 V)	
46	AVdd	—		Power Supply for A/D (+5 V)	
47		I		Not in use	
48		I		Not in use	
49	BUSY	I	Mechanism Micon	Mechanism servo micon Busy (Active "L")	
50	AU_BUS_IN	I	Audio Bus	Not in use	

Pin No.	Pin Name	I/O	Connected to	Description
51	TM_IN	I	Clock IC	TM_OUT for clock IC
52	MUT_MON	I	CXD2601AQ	Mute monitor (Active "H")
53		—		Not in use
54	TEST_MON_M	I	Mechanism Micon	"L" : Test mode is mechanism Micon (Monitor output of Mechanism Micon pin ⑩)
55	TRQ_TEST	I	Pull-up	Not in use
56	NO_CAS_TEST	I	Pull-up	Not in use
57	TIME_24/12	I	Pull-up	Time indication "H": 12 hours (AM, PM) "L": 24 hours display
58	DATE_ORDER	I	Pull-up	Order of DATA display "H": Year, month and day "L": Month, day and year
59-62	AF_3-0	I	Pull-up	Not in use
63	PIXY_SYSTEM	O		Monitor output of Remote controller mode. "H" : Connected AU BUS, "L" : No connected
64	L_MUTE	O	Pull-up	Line Mute (Active "L"). Not in use with the equipment
65	TR_MUTE	O	Line Out	Transistor Mute (Active "L")
66		—		Not in use
67	MUTE_2601	O	CXD2601AQ	Mute for CXD2601 (Active "H")
68	A_D_PWR_DWN	O	CS5339	A/D Converter Power Down Mode (Active "H"). The AD converter is turned OFF upon digital input/output.
69	ER_MON	I	CXD2601AQ	Error Monitor (Data Valid)
70	TEST	I	Pull-up	Test Mode (Active "L")
71	POW_DN	I	+5 V	Not in use
72	Vdd	—		Power terminal (+5V)
73	Vss	—		Power terminal (GND)
74		—		Not in use
75	D_F_ATT	O	CXD2560M	Communication line (Serial Data) with Digital Filter
76	D_F_SHIFT	O	CXD2560M	Communication line with Digital Filter (Shift Clock; shifted by ↓ and taken in by ↑)
77	D_F_LATCH	O	CXD2560M	Communication line (Latch Pulse) with Digital Filter
78, 79	MODE2, 1	O	CXA1364R	Mode Control of the RF amplifier
80	STANDBY_LED	O	REMOCON BOARD	Stand-by LED (D301) control. "H" : LED on

### IC109 Real Time Clock (RF5C62)

The Clock is an IC for clock and calendar and backed up by a lithium battery when the power supply to the set is OFF.

Pin No.	Pin Name	I/O	Description
1	CS	I	Chip select input. Active "L"
2	CE	I	Chip enable input. Active "H"
3	TMOUT	O	Interval output
4-7	A0-3	I	4 bit address input
8	RD	I	Read-out control input
9	Vss	—	Power terminal (GND)
10	WR	I	Write-in control input
11-14	D0-3	I/O	4 bit data input/output
15	INTR	O	Interrupt output. A 2048Hz signal is output here with the equipment.
16	OSCIN	I	Clock input (32.768kHz)
17	OSCOUT	O	Clock output
18	VDD	—	Power terminal (+5 V)

**IC106 Pulse D/A Converter (CXD2561M)**

The Converter is a small, high-performance 1 bit pulse D/A converter that provides 4 asymmetrical PWM wave outputs in each ch of L/R.

Pin No.	Pin Name	I/O	Description
1	DV <sub>DD</sub>	—	Digital power supply
2	TEST	I	Test terminal. Normally fixed at "L."
3	INIT	I	Again synchronized at the buildup edge of the signal.
4	LRCKI	I	LRCK input
5	DRI	I	Rch data input
6	DLI	I	Lch data input
7	BCKI	I	BCK input
8	DV <sub>SS</sub>	—	Digital GND
9	512Fs	O	512Fs output
10	XV <sub>SS</sub>	—	Clock GND
11	XIN	I	X'tal oscillator input terminal (512Fs)
12	XOUT	O	X'tal oscillator output terminal
13	XV <sub>DD</sub>	—	Clock power supply
14	VSUB	—	Substrate. Connected to GND.
15	AV <sub>DD</sub> R	—	Analog power supply
16	R1 (+)	O	Rch PLM output 1 (normal phase)
17	AV <sub>SS</sub> R	—	Analog GND
18	R1 (-)	O	Rch PLM output 1 (reverse phase)
19	R2 (+)	O	Rch PLM output 2 (normal phase)
20	R2 (-)	O	Rch PLM output 2 (reverse phase)
21	AV <sub>DD</sub>	—	Analog power supply
22	AV <sub>SS</sub>	—	Analog GND
23	L2 (-)	O	Lch PLM output 2 (reverse phase)
24	L2 (+)	O	Lch PLM output 2 (normal phase)
25	L1 (-)	O	Lch PLM output 1 (reverse phase)
26	AV <sub>SS</sub> L	—	Analog GND
27	L1 (+)	O	Lch PLM output 1 (normal phase)
28	AV <sub>DD</sub> L	—	Analog power supply

**IC105 Digital Filter (CXD2560M)**

The Filter is a digital audio 8x oversampling digital filter with builtin L/R 2ch filter, noise shaping attenuator, soft muting deemphasis, etc.

Pin No.	Pin Name	I/O	Description
1	V <sub>SS</sub>	—	Power terminal (GND)
2	SYSM	I	System mute input. Effective upon "H"
3	ATT	I	ATT data input in CTL "L."
4	SHIFT	I	Shift clock input upon CTL "L."
5	LATCH	I	FS32 input upon CTL "H." Latch clock input upon CTL "L." FS48 input upon CTL "H."
6	CTL	I	Pull-down in the IC. Direct input mode upon "H." Serial transfer mode upon "L."
7	INIT	I	Synchronized again at the buildup edge of the signal.
8	BCKI	I	BCK input
9	DATAI	I	Data input
10	LACKI	I	LRCK input
11	TEST	I	Test terminal. Fixed at "L" during normal use.
12	V <sub>SS</sub>	—	Power terminal (GND)
13	128Fs	O	128Fs clock output
14	INVI	I	Inverter input
15	INVO	O	Inverter output
16	INVO2	O	Inverter output
17	MCLK	I	Master clock input (f=512Fs)
18	V <sub>DD</sub>	—	Power terminal (+5 V)
19	BCKO	O	BCK output
20	DL	O	Lch data output
21	DR	O	Rch data output
22	LRCKO	O	LRCK output
23	FLGL	O	Lch $\emptyset$ mute flag output
24	FLGR	O	Rch $\emptyset$ mute flag output

**IC101 Display Micro-computer (CXP50112-254Q)**

The Micro-computer controls key input, FL tube display, remote control signal input, level meter (IC102), EEP-ROM (IC103) and SIRCS/AU BUS select (IC104) according to instructions from the Main Micro-computer (IC108).

Pin No.	Pin Name	I/O	Connected to	Description
1-18	e_-v_SEG	O	FL tube FL101	FL Segment 'e'-'v'
19-28	10_-1_G	O	FL tube FL101	FL Grid #10-#1
29	DSP_REQ	I	MAIN Micon	Communication request ("L" Active)
30	TX	—	Open	Not in use
31	TEX	—	Open	Not in use
32	RST	I	IC111	System Reset ("L" active)
33	NC	—		Not in use
34	V <sub>DD</sub>	I		Power terminal (+5 V)
35-42	AD_0-7	I	Panel switch	Key input A/D converter input #0 - #7
43	NC	—		Not in use
44	DISP_CK	O	MAIN Micon	Shift clock
45	SO	O	MAIN Micon	Serial data OUT
46	SI	I	MAIN Micon	Serial data IN
47	DSP_ACK	O	MAIN Micon	Acknowledge (Active "L")
48	REC_MODE	I	S703	REC MODE "H": Standard, "L": Long
49	TEST	I	Pull-up	Test mode (Active "L")
50	CLOCK_SET	I	SW290	CLOCK SET switch S704 (Active "L")
51-54	LVL_DT_0-3	I/O	Level Meter IC	Level Meter Data 0-3
55, 56	LVL_ADRS_0, 1	O	Level Meter IC	Level Meter Data 0, 1
57	LVL_RD	O	Level Meter IC	Level Meter Read Mode (Active "L")
58	LVL_WR	O	Level Meter IC	Level Meter Write Mode (Active "L")
59	LVL_SEL	O	Level Meter IC	Level Meter IC Select (Active "L")
60	S/A SW	O	IC104	Select of SIRCS/AU BUS "H": AU BUS "L": SIRCS
61	AU BK	I	AU BUS	AU BUS signal detecting input
62	RMC	I	IC104	SIRCS/AU BUS input
63	RMC_CAT	I	Pull-down	Remote control category "L": DAT1, "H": DAT2. Fixed at "L" with the equipment.
64	TR_MUTE	I	IC104	Level meter mute (Active "L")
65	BUSY	I	EEPROM	BUSY signal (Active "L")
66	ROM_DT_IN	I	EEPROM	Data input
67	ROM_DT_OUT	O	EEPROM	Data output
68	SHIFT_CK	O	EEPROM	Shift clock " " : Output to EEPROM, " " : Input from EEPROM
69	CE	O	EEPROM	Chip enable
70	AU BUS	O	AU BUS	AU BUS output
71	V <sub>SS</sub>	I		Power terminal (GND)
72	XTAL	—	Ceramic oscillator	
73	NC	—	Open	Not in use
74	EXTAL	I	Ceramic oscillator	4.19MHz ceramic oscillator
75	Vref	I	+5 V	Analog board reference voltage
76	Vfdp	I	-25 V	FL display tube driving voltage
77-80	a_-d_SEG	O	FL tube(FL101)	FL Segment 'a'-'d'



## SECTION 5 EXPLODED VIEWS


**NOTE:**

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts  
Example:  
KNOB,BALANCE(WHITE)...(RED)  
          ↑          ↑  
Parts color Cabinet's color
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware(# mark) list is given in the last of this parts list.
- G : Germany model

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.


Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

### 5-1. CABINET SECTION

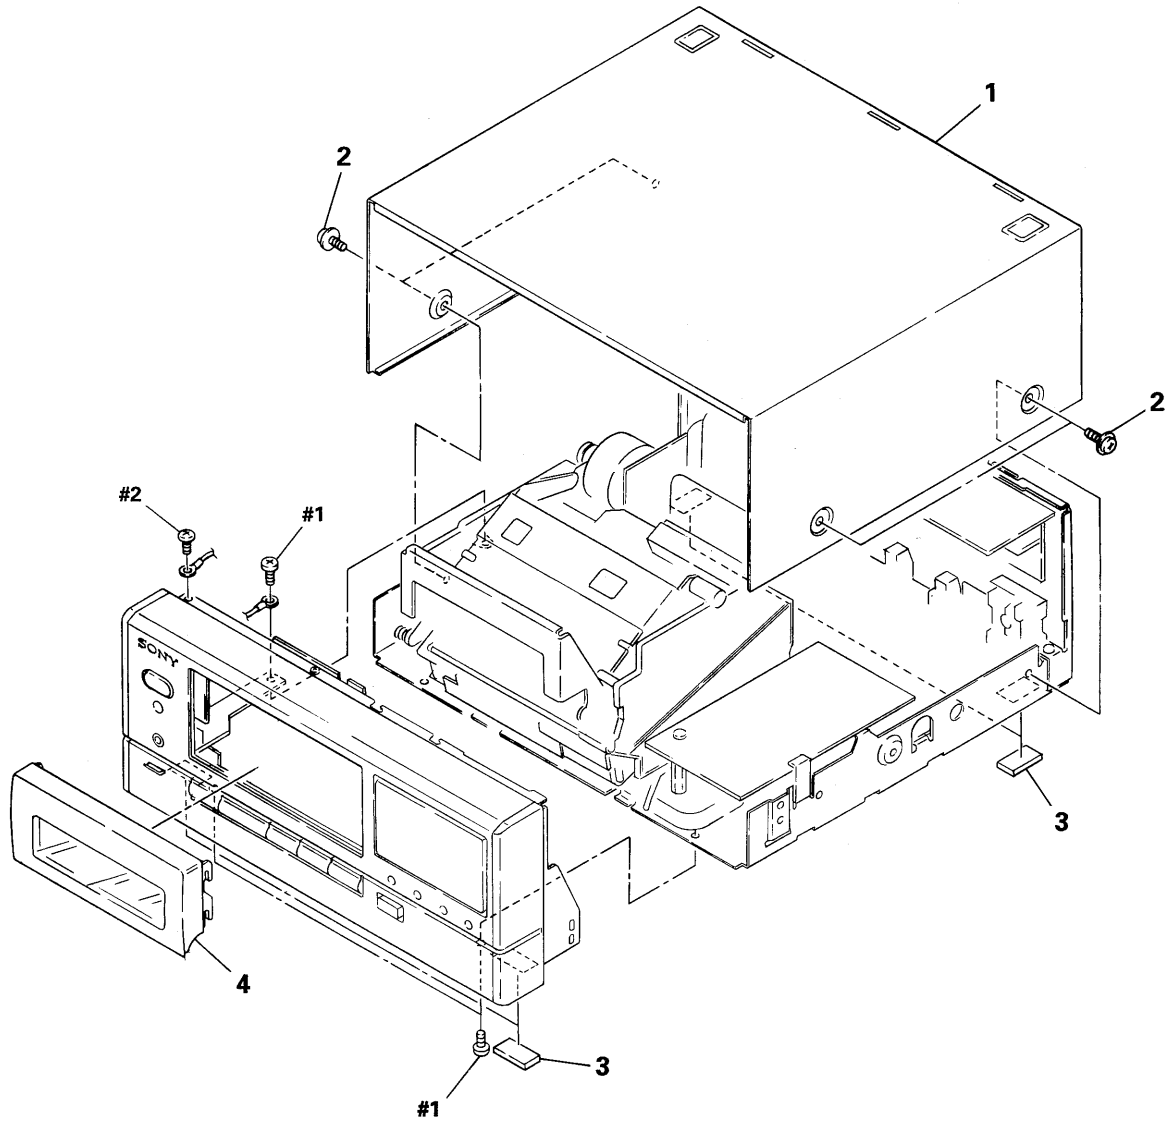


Ref. No.	Part No.	Description	Remarks
1	* 3-373-244-01	CASE	
2	3-363-099-01	SCREW (CASE +3X8 TP2)	
3	4-930-336-01	FOOT (FELT)	
4	A-2003-976-A	WINDOW ASSY, CASSETTE	

5-2. FRONT PANEL SECTION

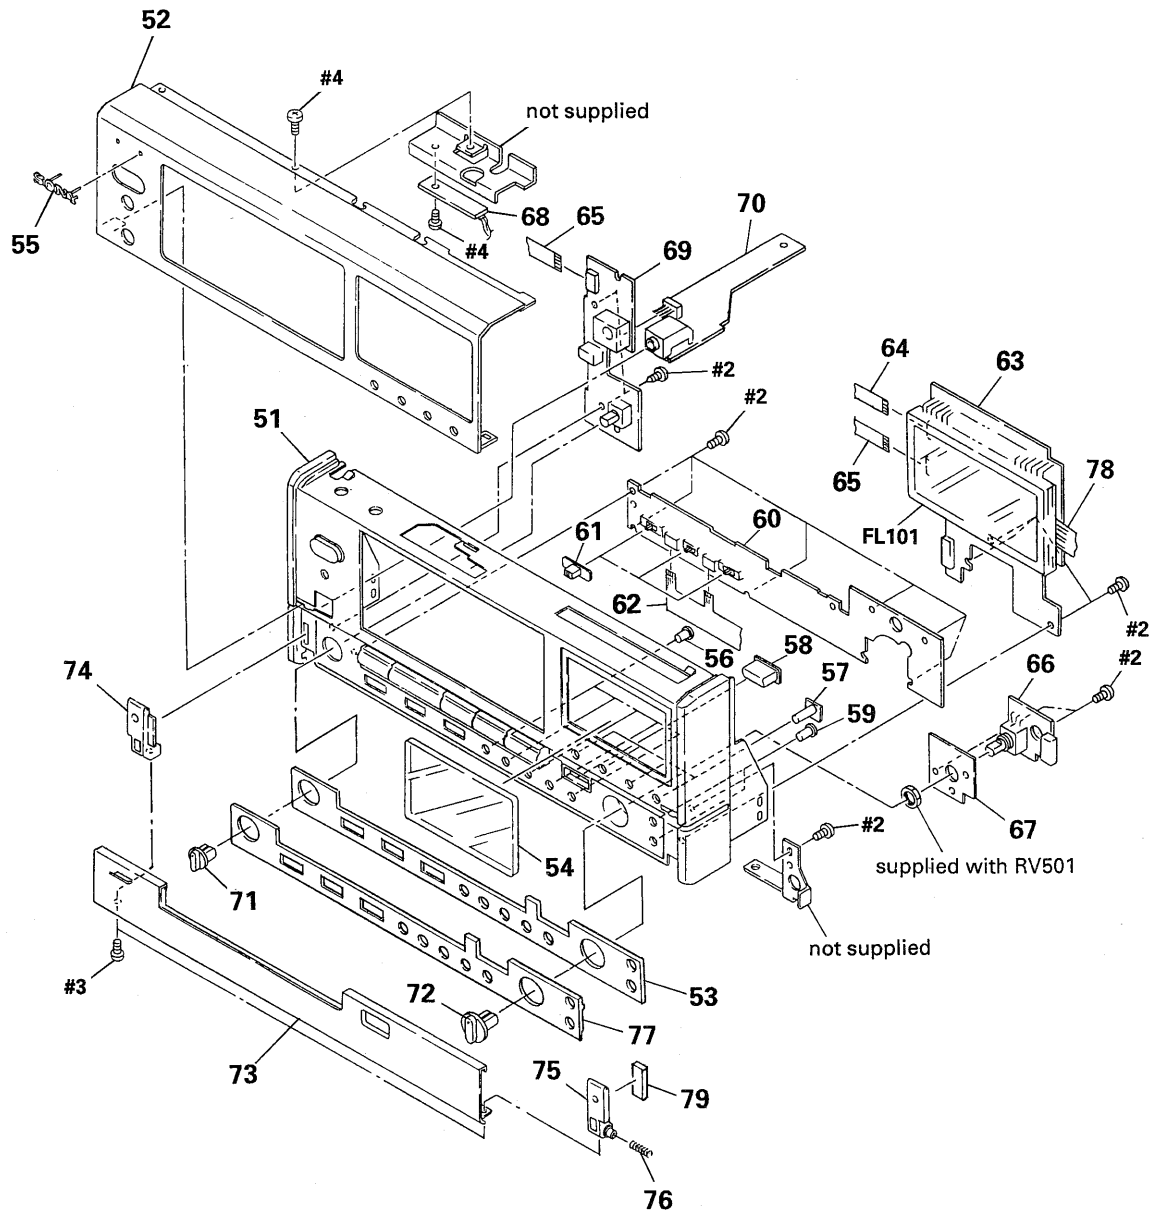

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	X-3363-748-1	PANEL (BASE) ASSY		66	* 1-641-473-11	REC VOL BOARD	
52	3-373-238-01	PANEL, FRONT		67	3-373-209-01	BRACKET (REC)	
53	3-373-228-01	SHEET (CONTROL)		68	* 1-641-475-11	LED BOARD	
54	3-373-204-01	WINDOW (FL)		69	* 1-641-472-11	REMOTE CONTROL BOARD	
55	4-942-636-01	EMBLEM (NO. 3. 5), SONY		70	* 1-641-474-11	HEADPHONE BOARD	
56	3-373-226-01	BUTTON (ID)		71	3-373-202-01	KNOB (H. P.)	
57	3-373-227-01	BUTTON (FF/REW)		72	3-373-203-01	KNOB (REC)	
58	3-373-207-01	BUTTON (O/C)		73	3-373-239-01	LID (CONTROL PANEL)	
59	3-373-200-01	BUTTON (COUNTER)		74	3-373-206-01	LID (BASE R)	
60	* 1-641-470-11	SW (CONTROL) BOARD		75	3-373-205-01	LID (BASE L)	
61	3-373-201-01	KNOB (SLIDE)		76	3-374-768-01	SPRING (LID), COMPRESSION	
62	1-641-493-11	PC BOARD, FLEXIBLE (A) (9 CORE)		77	3-373-240-01	LID (BASE)	
63	* A-2006-592-A	FL BOARD, COMPLETE		78	1-641-494-11	PC BOARD, FLEXIBLE(B) (14 CORE)	
64	1-690-398-11	WIRE, FLAT TYPE (E) (6 CORE)		79	3-373-208-01	BRACKET (LID)	
65	1-690-400-11	WIRE, FLAT TYPE (G) (5 CORE)		FL101	1-519-694-11	INDICATOR TUBE, FLUORESCENT	


5-3. CHASSIS SECTION

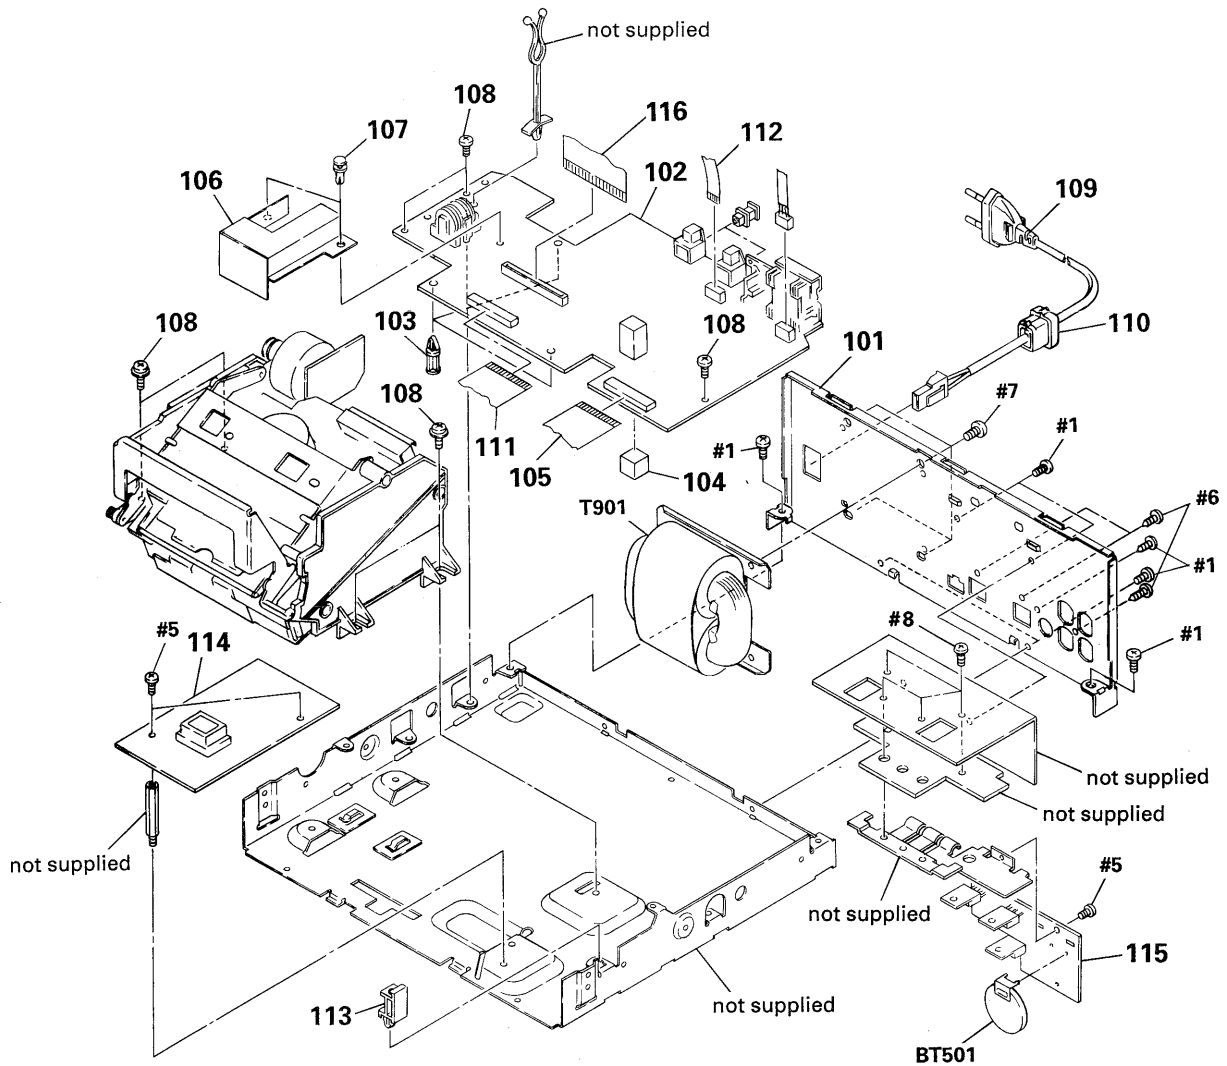

<p>Les composants identifiés par une marque <math>\Delta</math> sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>	<p>The components identified by mark <math>\Delta</math> or dotted line with mark <math>\Delta</math> are critical for safety. Replace only with part number specified.</p>
---	---


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	* 3-370-904-01	PANEL, BACK (UK)		109	$\Delta$ 1-558-946-21	CORD, POWER (UK)	
101	* 3-370-904-11	PANEL, BACK (Canadian, AEP, G)		109	$\Delta$ 1-575-651-21	CORD, POWER (Canadian, AEP, G)	
102	* A-2006-636-A	P/A (A) BOARD, COMPLETE (AEP)		110	* 3-703-244-00	BUSHING (2104), CORD	
102	* A-2006-674-A	P/S (A) BOARD, COMPLETE (UK)		111	1-690-399-11	WIRE, FLAT TYPE (F) (30 CORE)	
102	* A-2006-679-A	P/A (A) BOARD, COMPLETE (G)		112	1-690-397-11	WIRE, FLAT TYPE (D) (7 CORE)	
102	* A-2006-766-A	P/A (A) BOARD, COMPLETE (Canadian)		113	* 4-349-978-00	HOLDER, PC BOARD	
103	* 3-669-610-00	SPACER		114	* A-2006-595-A	MAIN (A) BOARD, COMPLETE	
104	* 4-931-121-11	CUSHION (TR)		115	* 1-641-484-11	REG BOARD	
105	1-690-394-11	WIRE, FLAT TYPE (A) (26 CORE)		116	1-690-395-11	WIRE, FLAT TYPE (B) (30 CORE)	
106	* 3-373-197-01	COVER (POWER)		BT501	$\Delta$ * 1-528-229-11	BATTERY, LITHIUM (CR-2450)	
107	4-812-134-11	RIVET NYLON, 3.5		T901	$\Delta$ 1-450-655-11	TRANSFORMER, POWER (AEP, G)	
108	4-886-821-11	SCREW, S TIGHT, +PTTWH 3X6		T901	$\Delta$ 1-450-656-11	TRANSFORMER, POWER (UK)	
				T901	$\Delta$ 1-450-658-11	TRANSFORMER, POWER (Canadian)	

5-4 MECHANISM SECTION 1

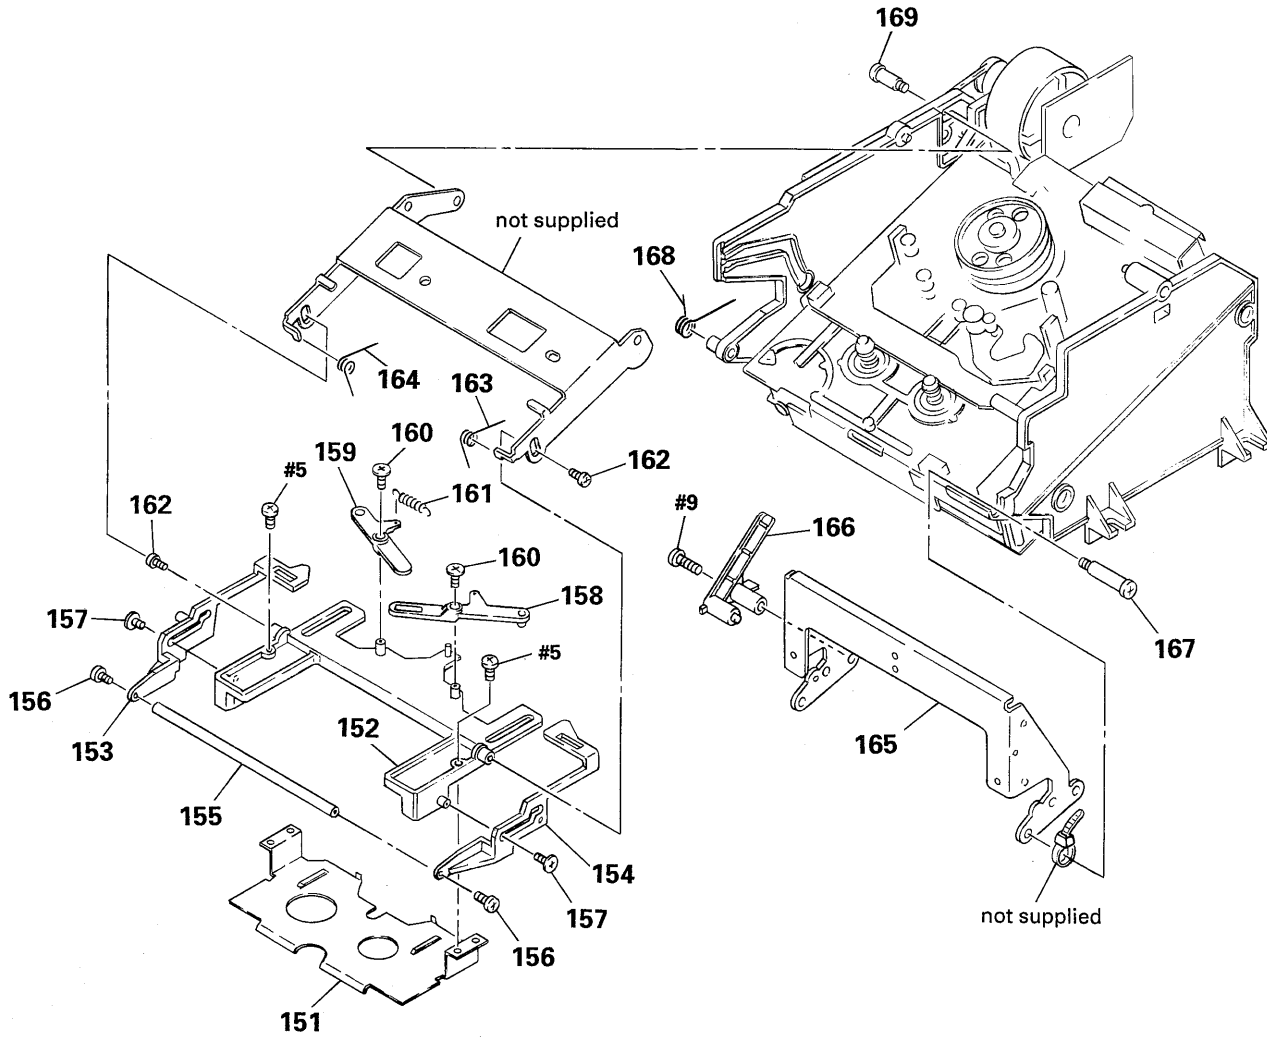


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
151	3-373-224-01	HOLDER (LOWER)		161	3-632-859-00	SPRING, BRAKE LEVER RETURN	
152	3-373-237-01	HOLDER (UPPER), CASSETTE		162	3-318-203-61	SCREW (B1.7X4), TAPPING	
153	3-373-223-01	SLIDER (L)		163	3-373-215-01	SPRING (R), TORSION	
154	3-373-222-01	SLIDER (R)		164	3-373-216-01	SPRING (L), TORSION	
155	* 3-373-217-01	SHAFT (JOINT)		165	3-373-225-01	HOLDER (WINDOW)	
156	3-345-648-01	SCREW (M1.4X3.0), TOOTHED LOCK		166	3-373-220-01	ARM (JOINT)	
157	3-318-201-11	SCREW (B) (1.4X3), TAPPING		167	4-931-463-01	SCREW (STEP)	
158	3-373-218-01	LEVER (R)		168	3-373-212-01	SPRING (CASSETTE)	
159	3-373-219-01	LEVER (L)		169	4-931-471-01	SCREW (STEP)	
160	2-623-756-01	SCREW, (B1.7X3), TAPPING					

5-5. MECHANISM SECTION 2

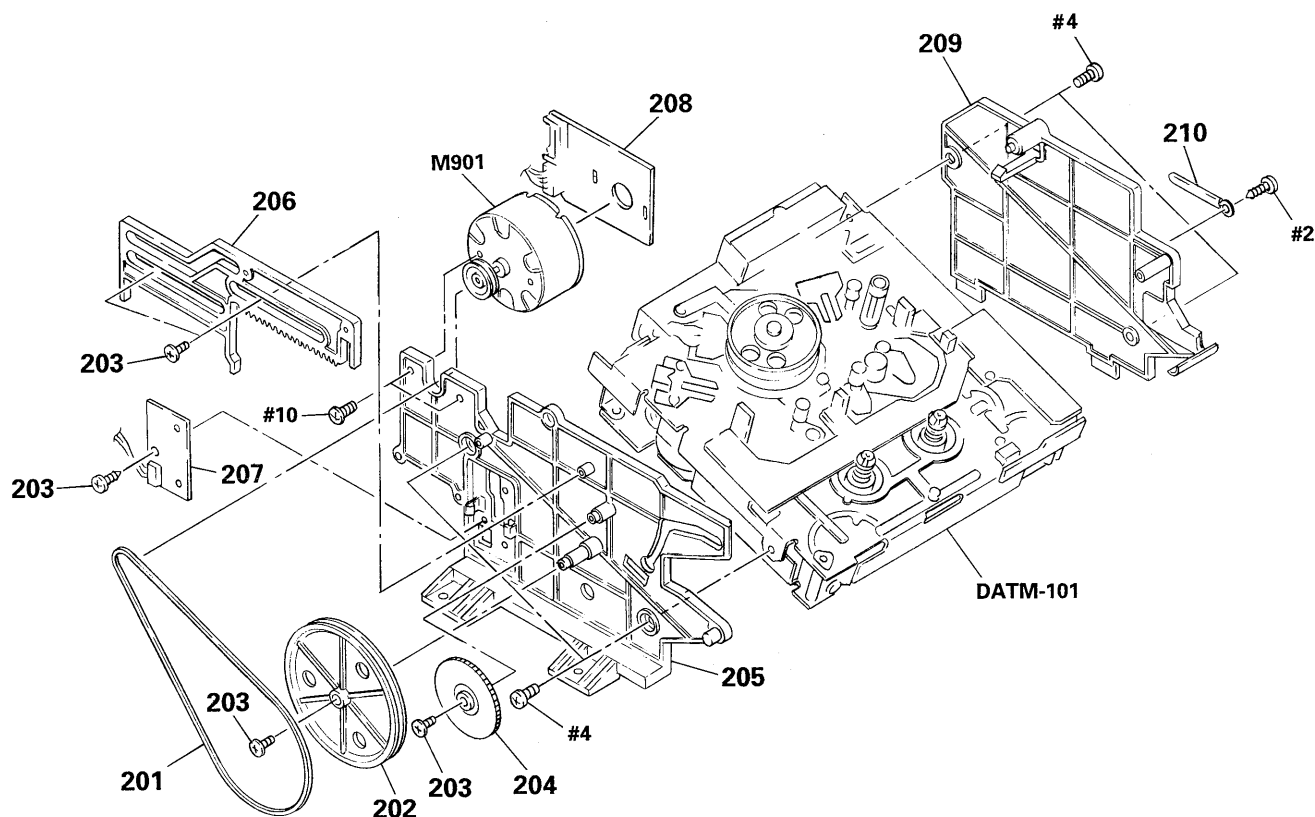


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	4-931-470-01	BELT (DRIVING)		207	* 1-641-487-11	SW BOARD	
202	3-373-214-01	PULLEY		208	* 1-641-486-11	MOTOR BOARD	
203	2-623-756-01	SCREW, (B1. 7X3), TAPPING		209	* 3-373-235-01	CHASSIS (R)	
204	3-373-213-01	GEAR, DRIVING		210	3-703-150-11	STOPPER, WIRING	
205	3-373-234-02	CHASSIS (L)		M901	A-2003-910-A	MOTOR ASSY, CASSETTE (CASSETTE COMPARTMENT)	
206	X-3364-426-1	SLIDER ASSY					

5-6. MECHANISM SECTION 3 (DATM-101)

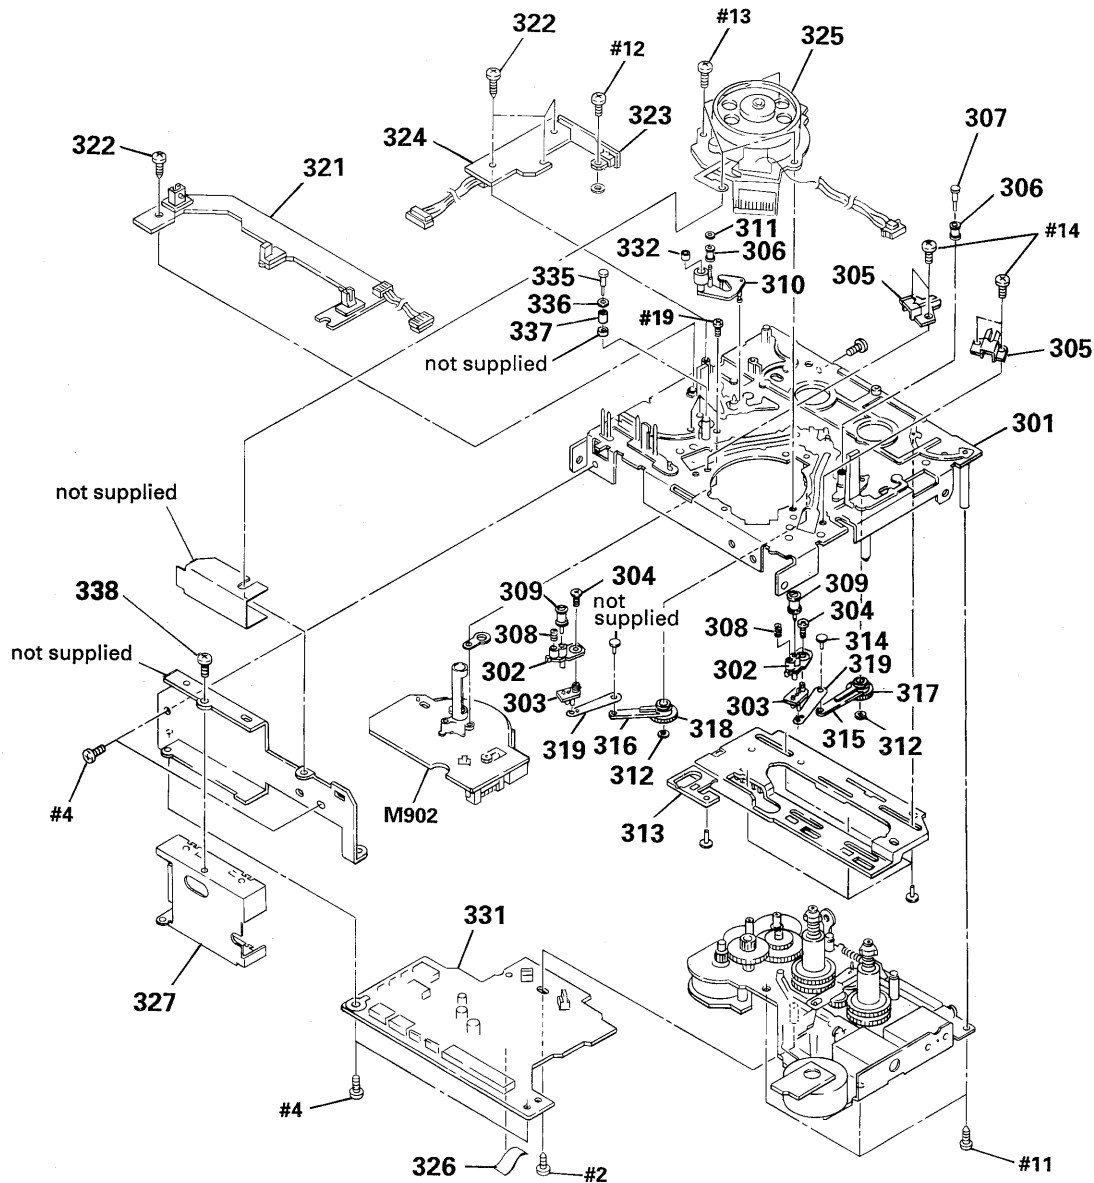

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
301	* 3-368-462-01	CHSSIS (OUTSERT), MECHANIAL		318	3-368-443-01	GEAR (LOAD-S)	
302	* 3-368-390-01	BASE (#1 GUIDE)		319	3-368-415-01	SHAFT (LOAD LEVER JOINT)	
303	3-368-409-01	JOINT (#1 GUIDE)		321	* 1-639-305-11	TOP END SENSOR BOARD	
304	3-368-413-01	SCREW, +P (1) B1. 4X2. 5		322	3-372-761-01	SCREW (M1. 7X4), TAPPING	
305	* 3-368-442-01	CATCHER		323	* 1-639-301-11	RGN SW BOARD	
306	3-368-399-01	GUIDE, ROLLER		324	* 1-639-306-11	CAM SLIDER BOARD	
307	3-368-428-01	SHAFT (ROLLER GUIDE)		325	8-848-567-11	DRUM ASSY DOU-03A	
308	3-368-436-01	SPRING (#1 GUIDE), COMPRESSION		326	9-911-835-XX	SPACER	
309	X-3337-643-1	GUIDE (RIC) ASSY, ROLLER		327	* A-2001-587-A	RF COMPLETE ASSY	
310	X-3363-025-1	PINCH (LEVER) ASSY		331	* A-2056-488-A	DRUM DRIVE BOARD, COMPLETE	
311	3-315-384-31	WASHER, STOPPER		332	3-337-626-01	CAP, PINCH ROLLER	
312	3-368-398-01	BUSHING		335	3-375-209-01	SHAFT (FIXED GUIDE)	
313	* A-2003-708-A	SLIDER ASSY, CAM		336	3-337-677-01	FLANGE	
315	3-368-427-01	LEVER (LOAD-T)		337	3-337-676-01	GUIDE, FIXED	
316	3-368-426-01	LEVER (LOAD-S)		338	3-703-685-21	SCREW (+BV 3X8)	
317	3-368-444-01	GEAR (LOAD-T)		M902	8-835-361-01	MOTOR, DC U-17B (CAPSTAN)	

5-7. MECHANISM SECTION 4 (DATM-101)

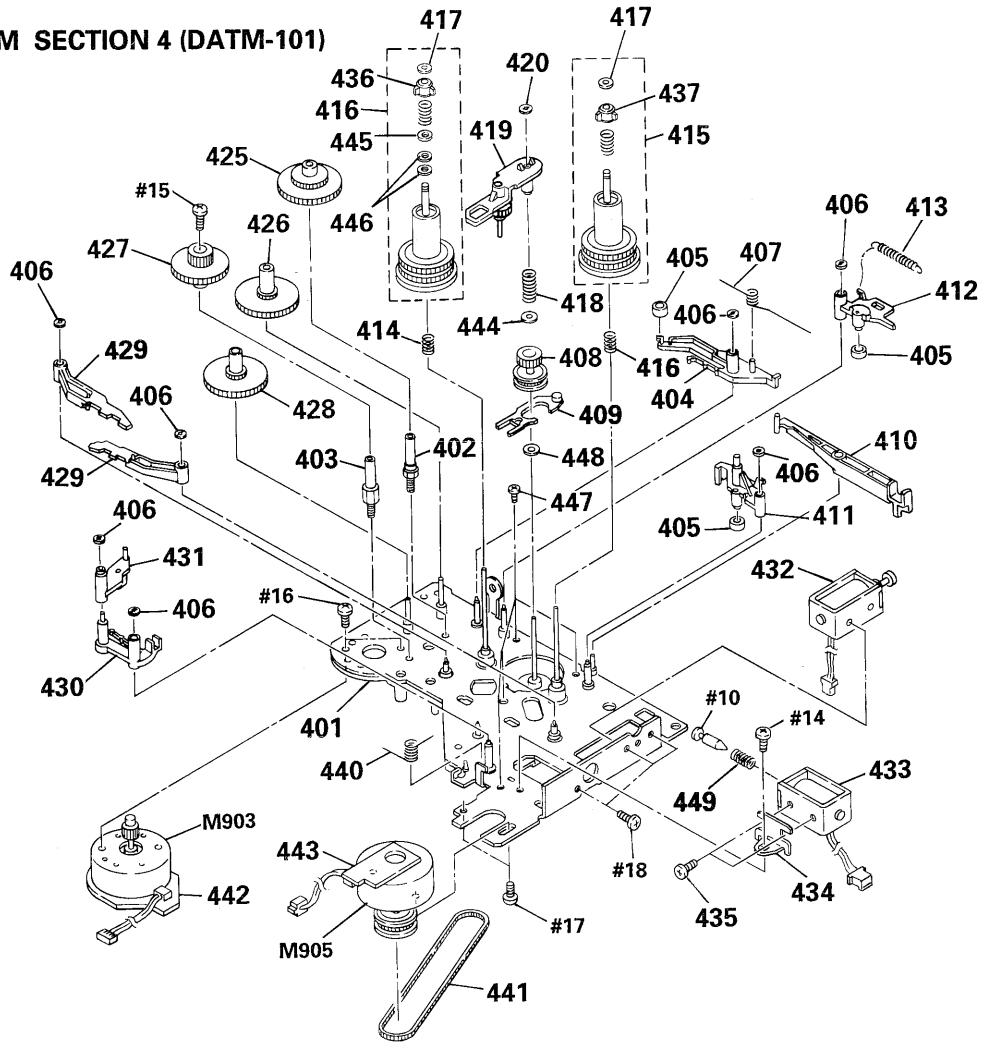

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
401	* A-2003-857-A	CHASSIS (REEL) ASSY		428	3-373-039-01	GEAR (CAM DRIVE B)	
402	* 3-368-420-01	SHAFT (CAM DRIVE GEAR C)		429	X-3363-024-1	LEVER (BT) ASSY	
403	* 3-368-419-01	SHAFT (CAM DRIVE GEAR D)		430	* 3-368-451-01	LEVER (BT SOLENOID)	
404	* 3-368-455-01	LEVER (GEAR LOCK)		431	* 3-368-454-01	LEVER (BT SELECTION)	
405	3-368-418-01	TUBE (BREAK)		432	1-454-535-11	SOLENOID, PLUNGER	
406	3-368-398-01	BUSHING		433	1-454-536-11	SOLENOID, PLUNGER	
407	3-368-430-01	SPRING (GEAR LOCK)		434	* 3-368-416-01	BRACKET (B. T SOLENOID)	
408	X-3363-022-1	GEAR (REEL DRIVE) ASSY		435	3-368-423-01	SCREW (M2. 6), STEP	
409	* 3-368-411-01	SLIDER (REEL LOCK)		436	2-623-736-01	CLAW (C) (LEFT), REEL	
410	* 3-368-453-01	LEVER (BRAKE SOLENOID)		437	2-623-752-01	CLAW (C) (RIGHT), REEL	
411	* 3-368-447-01	LEVER (BRAKE S)		440	3-368-431-01	SPRING (B. T SOLENOID)	
412	* 3-368-446-01	LEVER (BRAKE T)		441	3-368-417-01	BELT (170TN10-1. 0T), TIMING	
413	3-368-438-01	SPRING (BREAK), TENSION		442	* 1-639-303-11	CAM MOTOR BOARD	
414	3-368-432-01	SPRING (FF/REW), COMPRESSION		443	* 1-639-304-11	REEL MOTOR BOARD	
415	A-2003-709-C	TABLE (S) ASSY, REEL		444	3-738-212-21	RETAINER, THRUST, REEL TABLE	
416	A-2003-710-B	TABLE (T) ASSY, REEL		445	3-701-443-11	WASHER	
418	3-368-435-01	SPRING (FR LEVER), COMPRESSION		446	3-701-443-21	WASHER, 5 DIA.	
419	X-3364-581-1	LEVER (F/R) ASSY		447	2-623-756-01	SCREW, (B1. 7X3), TAPPING	
420	3-315-384-31	WASHER, STOPPER		448	3-701-436-01	WASHER, 1. 6	
425	3-368-421-01	GEAR (CAM DRIVE C)		449	3-370-480-01	SPRING (BT), COMPRESSION	
426	3-368-402-01	GEAR (CAM DRIVE A, B)		M903	X-3363-109-1	MOTOR (CAM) ASSY	
427	3-368-403-01	GEAR (CAM DRIVE D)		M905	X-3363-110-1	MOTOR (REEL) ASSY	

## SECTION 6 ELECTRICAL PARTS LIST

**NOTE:**

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms  
METAL : Metal-film resistor  
METAL OXIDE : Metal Oxide-film resistor  
F : nonflammable
- G : Germany model
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case, u :  $\mu$ , for example :  
uA...:  $\mu$ A..., uPA...:  $\mu$ PA...,  
uPB...:  $\mu$ PB..., uPC...:  $\mu$ PC...,  
uPD...:  $\mu$ PD...
- CAPACITORS  
uF :  $\mu$ F
- COILS  
uH :  $\mu$ H

<b>CAM MOTOR</b>	<b>CAM SLIDER</b>	<b>SW(CONTROL)</b>	<b>DRUM DRIVE</b>
------------------	-------------------	--------------------	-------------------

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	* 1-639-303-11	CAM MOTOR BOARD *****		R212	1-216-079-00	METAL CHIP 18K 5%	1/10W
		< CAPACITOR >		R213	1-216-059-00	METAL CHIP 2.7K 5%	1/10W
				R214	1-216-063-00	METAL CHIP 3.9K 5%	1/10W
				R215	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
C06	1-163-077-00	CERAMIC CHIP 0.1uF 10% 25V		R216	1-216-079-00	METAL CHIP 18K 5%	1/10W
		*****				< SWITCH >	
	* 1-639-306-11	CAM SLIDER BOARD *****		SW211	1-572-921-11	SWITCH, KEY BOARD (WRITE)	
		< CHIP JUMPER >		SW212	1-572-921-11	SWITCH, KEY BOARD (ERACE)	
JW04	1-216-296-00	METAL CHIP 0 5% 1/8W		SW220	1-570-724-11	SWITCH, SLIDE (INPUT)	
JW05	1-216-296-00	METAL CHIP 0 5% 1/8W		SW230	1-570-724-11	SWITCH, SLIDE (TIMER)	
		< SWITCH >		SW232	1-572-921-11	SWITCH, KEY BOARD (RESET)	
SW1	1-570-953-11	SWITCH, PUSH (1 KEY) (STOP DET)		SW233	1-572-921-11	SWITCH, KEY BOARD (MODE)	
SW2	1-570-953-11	SWITCH, PUSH (1 KEY) (FWD DET)		SW251	1-572-921-11	SWITCH, KEY BOARD (AUTO)	
		*****		SW252	1-572-921-11	SWITCH, KEY BOARD (RENUMBER)	
	* 1-641-470-11	SW (CONTROL) BOARD *****		SW261	1-572-921-11	SWITCH, KEY BOARD ( ◀◀ )	
		< CONNECTOR >		SW262	1-572-921-11	SWITCH, KEY BOARD ( ▶▶ )	
CN201	1-580-438-21	CONNECTOR, FPC 4P		SW263	1-572-921-11	SWITCH, KEY BOARD (REC)	
CN202	1-569-806-21	CONNECTOR, FPC 5P		SW264	1-572-921-11	SWITCH, KEY BOARD (PAUSE)	
		< RESISTOR >		SW265	1-572-921-11	SWITCH, KEY BOARD (REC MUTE)	
R201	1-216-059-00	METAL CHIP 2.7K 5% 1/10W		SW271	1-572-921-11	SWITCH, KEY BOARD ( ▲ )	
R202	1-216-076-00	METAL GLAZE 13K 5% 1/10W		SW272	1-572-921-11	SWITCH, KEY BOARD (STOP)	
R203	1-216-079-00	METAL CHIP 18K 5% 1/10W		SW273	1-572-921-11	SWITCH, KEY BOARD (PLAY)	
R204	1-216-059-00	METAL CHIP 2.7K 5% 1/10W		SW274	1-572-921-11	SWITCH, KEY BOARD ( ◀◀ )	
R205	1-216-063-00	METAL CHIP 3.9K 5% 1/10W		SW275	1-572-921-11	SWITCH, KEY BOARD ( ▶▶ )	
R206	1-216-071-00	METAL CHIP 8.2K 5% 1/10W		SW280	1-553-977-00	SWITCH, SLIDE (REC MODE)	
R207	1-216-079-00	METAL CHIP 18K 5% 1/10W		SW290	1-572-921-11	SWITCH, KEY BOARD (CLOCK SET)	
R208	1-216-059-00	METAL CHIP 2.7K 5% 1/10W				*****	
R209	1-216-059-00	METAL CHIP 2.7K 5% 1/10W				* A-2056-488-A DRUM DRIVE BOARD, COMPLETE	
R210	1-216-063-00	METAL CHIP 3.9K 5% 1/10W				*****	
R211	1-216-071-00	METAL CHIP 8.2K 5% 1/10W				* 3-343-491-01 HOLDER (S SENSOR B)	
						4-870-539-00 PLATE, GROUND	
						< CAPACITOR >	
				C01	1-124-584-00	ELECT 100uF 20%	10V
				C02	1-126-157-11	ELECT 10uF 20%	16V
				C03	1-124-257-00	ELECT 2.2uF 20%	50V
				C04	1-163-013-11	CERAMIC CHIP 0.0022uF 5%	50V
				C05	1-163-013-11	CERAMIC CHIP 0.0022uF 5%	50V



**DRUM DRIVE** **FL**

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C08	1-163-001-11	CERAMIC CHIP 220PF	10% 50V	Q01	8-729-100-66	TRANSISTOR 2SC1623-L6	
C21	1-163-001-11	CERAMIC CHIP 220PF	10% 50V	Q02	8-729-101-07	TRANSISTOR 2SB798-DL	
C31	1-163-001-11	CERAMIC CHIP 220PF	10% 50V				
( CONNECTOR )							
CN01	* 1-564-704-11	PIN, CONNECTOR (SMALL TYPE)	2P	R01	1-216-061-00	METAL CHIP 3.3K 5%	1/10W
CN02	* 1-564-704-11	PIN, CONNECTOR (SMALL TYPE)	2P	R02	1-216-075-00	METAL CHIP 12K 5%	1/10W
CN03	* 1-564-338-00	PIN, CONNECTOR	4P	R03	1-216-029-00	METAL CHIP 150 5%	1/10W
CN04	* 1-564-336-00	PIN, CONNECTOR	2P	R04	1-216-059-00	METAL CHIP 2.7K 5%	1/10W
CN05	* 1-564-336-61	PIN, CONNECTOR	2P	R05	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
CN06	* 1-564-339-00	PIN, CONNECTOR	5P	R06	1-216-085-00	METAL CHIP 33K 5%	1/10W
CN07	1-564-721-11	PIN, CONNECTOR (SMALL TYPE)	5P	R07	1-216-025-00	METAL CHIP 100 5%	1/10W
CN08	* 1-568-872-11	SOCKET, CONNECTOR	30P	R08	1-216-049-00	METAL CHIP 1K 5%	1/10W
CN09	* 1-564-706-11	PIN, CONNECTOR (SMALL TYPE)	4P	R09	1-216-073-00	METAL CHIP 10K 5%	1/10W
CN10	* 1-564-719-11	PIN, CONNECTOR (SMALL TYPE)	3P	R10	1-216-073-00	METAL CHIP 10K 5%	1/10W
( IC )							
IC01	8-759-107-68	IC CX20115A		R11	1-216-073-00	METAL CHIP 10K 5%	1/10W
IC02	8-759-502-80	IC LM358M		R12	1-216-089-00	METAL CHIP 47K 5%	1/10W
IC03	8-759-502-80	IC LM358M		R13	1-216-073-00	METAL CHIP 10K 5%	1/10W
				R14	1-216-037-00	METAL CHIP 330 5%	1/10W
				R21	1-216-073-00	METAL CHIP 10K 5%	1/10W
( CHIP JUMPER )							
JW06	1-216-296-00	METAL CHIP	0 5% 1/8W	R22	1-216-081-00	METAL CHIP 22K 5%	1/10W
JW07	1-216-296-00	METAL CHIP	0 5% 1/8W	R23	1-216-077-00	METAL CHIP 15K 5%	1/10W
JW08	1-216-296-00	METAL CHIP	0 5% 1/8W	R24	1-216-067-00	METAL CHIP 5.6K 5%	1/10W
JW09	1-216-296-00	METAL CHIP	0 5% 1/8W	R25	1-216-103-00	METAL CHIP 180K 5%	1/10W
JW10	1-216-296-00	METAL CHIP	0 5% 1/8W	R26	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
JW11	1-216-296-00	METAL CHIP	0 5% 1/8W	R31	1-216-073-00	METAL CHIP 10K 5%	1/10W
JW12	1-216-296-00	METAL CHIP	0 5% 1/8W	R32	1-216-081-00	METAL CHIP 22K 5%	1/10W
JW13	1-216-296-00	METAL CHIP	0 5% 1/8W	R35	1-216-103-00	METAL CHIP 180K 5%	1/10W
JW14	1-216-296-00	METAL CHIP	0 5% 1/8W	R36	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
JW15	1-216-296-00	METAL CHIP	0 5% 1/8W				
JW16	1-216-296-00	METAL CHIP	0 5% 1/8W	*****			
JW17	1-216-296-00	METAL CHIP	0 5% 1/8W	* A-2006-592-A FL BOARD, COMPLETE			
JW18	1-216-296-00	METAL CHIP	0 5% 1/8W	*****			
JW19	1-216-296-00	METAL CHIP	0 5% 1/8W	* 3-373-233-01 HOLDER (FL)			
JW20	1-216-296-00	METAL CHIP	0 5% 1/8W	( CAPACITOR )			
JW21	1-216-296-00	METAL CHIP	0 5% 1/8W	C101	1-135-125-21	TANTAL. CHIP 33uF	20% 6.3V
JW22	1-216-296-00	METAL CHIP	0 5% 1/8W	C102	1-163-031-11	CERAMIC CHIP 0.01uF	50V
JW23	1-216-296-00	METAL CHIP	0 5% 1/8W	C103	1-135-159-21	TANTALUM CHIP 10uF	10% 20V
JW24	1-216-296-00	METAL CHIP	0 5% 1/8W	C104	1-163-031-11	CERAMIC CHIP 0.01uF	50V
JW25	1-216-296-00	METAL CHIP	0 5% 1/8W	C105	1-163-031-11	CERAMIC CHIP 0.01uF	50V
JW26	1-216-296-00	METAL CHIP	0 5% 1/8W	C106	1-163-031-11	CERAMIC CHIP 0.01uF	50V
JW27	1-216-296-00	METAL CHIP	0 5% 1/8W	C107	1-163-031-11	CERAMIC CHIP 0.01uF	50V
JW28	1-216-296-00	METAL CHIP	0 5% 1/8W	C108	1-163-031-11	CERAMIC CHIP 0.01uF	50V
JW29	1-216-296-00	METAL CHIP	0 5% 1/8W	C109	1-135-125-21	TANTAL. CHIP 33uF	20% 6.3V
JW30	1-216-296-00	METAL CHIP	0 5% 1/8W	C110	1-163-031-11	CERAMIC CHIP 0.01uF	50V
( PHOTO INTERRUPTER )							
PH01	8-719-939-23	DIODE GP2S09-C		C112	1-163-031-11	CERAMIC CHIP 0.01uF	50V
PH02	8-719-939-23	DIODE GP2S09-C		C113	1-163-031-11	CERAMIC CHIP 0.01uF	50V
				C114	1-163-031-11	CERAMIC CHIP 0.01uF	50V
( TRANSISTOR )							
				( CONNECTOR )			
				CN101	1-565-770-11	CONNECTOR, FPC (1.0MM)	

When indicating parts by reference number, please include the board name.

FL

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
CN102	1-580-868-11	SOCKET, CONNECTOR (SMT) 14P		R126	1-216-089-00	METAL CHIP 47K 5% 1/10W	
CN103	1-569-806-21	CONNECTOR, FPC 5P		R127	1-216-089-00	METAL CHIP 47K 5% 1/10W	
CN104	1-691-133-21	SOCKET, CONNECTOR 9P		R128	1-216-089-00	METAL CHIP 47K 5% 1/10W	
		< INDICATOR >		R129	1-216-089-00	METAL CHIP 47K 5% 1/10W	
FL101	1-519-694-11	INDICATOR TUBE, FLUORESCENT		R130	1-216-089-00	METAL CHIP 47K 5% 1/10W	
		< IC >		R131	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
IC101	8-752-832-58	IC CXP50112-258Q		R132	1-216-073-00	METAL CHIP 10K 5% 1/10W	
IC102	8-759-500-05	IC MSM6338MS-K		R135	1-216-089-00	METAL CHIP 47K 5% 1/10W	
IC103	8-752-326-33	IC CXK1011M		R136	1-216-089-00	METAL CHIP 47K 5% 1/10W	
IC104	8-759-927-46	IC SN74HC00ANS		R141	1-216-049-00	METAL CHIP 1K 5% 1/10W	
		< TRANSISTOR >		R142	1-216-049-00	METAL CHIP 1K 5% 1/10W	
Q130	8-729-901-04	TRANSISTOR DTA114EK		R151	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q131	8-729-901-01	TRANSISTOR DTC144EK		R152	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q132	8-729-100-66	TRANSISTOR 2SC1623-L6		R153	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q181	8-729-100-66	TRANSISTOR 2SC1623-L6		R154	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q182	8-729-100-66	TRANSISTOR 2SC1623-L6		R155	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q183	8-729-100-66	TRANSISTOR 2SC1623-L6		R156	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q184	8-729-100-66	TRANSISTOR 2SC1623-L6		R157	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q185	8-729-100-66	TRANSISTOR 2SC1623-L6		R158	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q186	8-729-100-66	TRANSISTOR 2SC1623-L6		R159	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q187	8-729-100-66	TRANSISTOR 2SC1623-L6		R160	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q188	8-729-100-66	TRANSISTOR 2SC1623-L6		R161	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q189	8-729-100-66	TRANSISTOR 2SC1623-L6		R162	1-216-089-00	METAL CHIP 47K 5% 1/10W	
Q190	8-729-100-66	TRANSISTOR 2SC1623-L6		R163	1-216-089-00	METAL CHIP 47K 5% 1/10W	
		< RESISTOR >		R164	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R101	1-216-049-00	METAL CHIP 1K 5% 1/10W		R165	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R102	1-216-049-00	METAL CHIP 1K 5% 1/10W		R166	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R103	1-216-049-00	METAL CHIP 1K 5% 1/10W		R167	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R104	1-216-049-00	METAL CHIP 1K 5% 1/10W		R168	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R105	1-216-049-00	METAL CHIP 1K 5% 1/10W		R169	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R106	1-216-049-00	METAL CHIP 1K 5% 1/10W		R170	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R107	1-216-049-00	METAL CHIP 1K 5% 1/10W		R171	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R108	1-216-049-00	METAL CHIP 1K 5% 1/10W		R172	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R109	1-216-049-00	METAL CHIP 1K 5% 1/10W		R181	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R110	1-216-049-00	METAL CHIP 1K 5% 1/10W		R182	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R111	1-216-073-00	METAL CHIP 10K 5% 1/10W		R183	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R112	1-216-073-00	METAL CHIP 10K 5% 1/10W		R184	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R113	1-216-073-00	METAL CHIP 10K 5% 1/10W		R185	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R115	1-216-073-00	METAL CHIP 10K 5% 1/10W		R186	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R116	1-216-073-00	METAL CHIP 10K 5% 1/10W		R187	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R117	1-216-073-00	METAL CHIP 10K 5% 1/10W		R188	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R118	1-216-089-00	METAL CHIP 47K 5% 1/10W		R189	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R119	1-216-089-00	METAL CHIP 47K 5% 1/10W		R190	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R121	1-216-089-00	METAL CHIP 47K 5% 1/10W		R191	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R122	1-216-089-00	METAL CHIP 47K 5% 1/10W		R192	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R123	1-216-089-00	METAL CHIP 47K 5% 1/10W		R193	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R124	1-216-089-00	METAL CHIP 47K 5% 1/10W		R194	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R125	1-216-089-00	METAL CHIP 47K 5% 1/10W		R195	1-216-089-00	METAL CHIP 47K 5% 1/10W	
				R196	1-216-089-00	METAL CHIP 47K 5% 1/10W	
				R197	1-216-089-00	METAL CHIP 47K 5% 1/10W	
				R198	1-216-089-00	METAL CHIP 47K 5% 1/10W	
				R199	1-216-089-00	METAL CHIP 47K 5% 1/10W	

When indicating parts by reference number, please include the board name.

**FL HEADPHONE LED MAIN(A)**

Ref. No.	Part No.	Description	Remarks
R200	1-216-089-00	METAL CHIP 47K 5% 1/10W	
		< CRYSTAL >	
X101	1-567-775-11	VIBRATOR, CERAMIC (4.19MHz)	
*****			
	* 1-641-474-11	HEADPHONE BOARD	
		*****	
		< CAPACITOR >	
C401	1-126-205-11	ELECT CHIP 47uF 20% 6.3V	
C402	1-124-779-00	ELECT CHIP 10uF 20% 16v	
C403	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C451	1-126-205-11	ELECT CHIP 47uF 20% 6.3V	
C452	1-124-779-00	ELECT CHIP 10uF 20% 16v	
C453	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
		< CONNECTOR >	
CN401	1-573-069-11	SOCKET, CONNECTOR 7P	
CN402	* 1-568-453-11	PIN, CONNECTOR (PC BOARD) 4P	
		< DIODE >	
D401	8-719-210-33	DIODE EC10DS2	
D451	8-719-210-33	DIODE EC10DS2	
		< IC >	
IC401	8-759-981-XX	IC RC4560M	
		< JACK >	
J401	1-562-837-21	JACK (HEADPHONES)	
		< RESISTOR >	
R402	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R403	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R404	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R405	1-216-182-00	METAL GLAZE 220 5% 1/8W	
R452	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R453	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R454	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R455	1-216-182-00	METAL GLAZE 220 5% 1/8W	
*****			
	* 1-641-475-11	LED BOARD	
		*****	
		< DIODE >	
D601	8-719-023-03	DIODE LN1461C	
D602	8-719-023-03	DIODE LN1461C	
D603	8-719-023-03	DIODE LN1461C	
*****			

Ref. No.	Part No.	Description	Remarks
	* A-2006-595-A	MAIN (A) BOARD, COMPLETE	
		*****	
		< CAPACITOR >	
C101	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C102	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C103	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C104	1-126-205-11	ELECT CHIP 47uF 20% 6.3V	
C105	1-162-916-11	CERAMIC CHIP 12PF 5% 50V	
C106	1-162-916-11	CERAMIC CHIP 12PF 5% 50V	
C107	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C108	1-164-005-11	CERAMIC CHIP 0.47uF 25V	
C109	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C110	1-126-205-11	ELECT CHIP 47uF 20% 6.3V	
C111	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C112	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
C113	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C114	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C115	1-162-916-11	CERAMIC CHIP 12PF 5% 50V	
C116	1-162-916-11	CERAMIC CHIP 12PF 5% 50V	
C117	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C118	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C119	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C120	1-126-193-11	ELECT 1uF 20% 50V	
C121	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C122	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C123	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C124	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C125	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C126	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C128	1-162-920-11	CERAMIC CHIP 27PF 5% 50V	
C129	1-162-918-11	CERAMIC CHIP 18PF 5% 50V	
C130	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C131	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C132	1-126-205-11	ELECT CHIP 47uF 20% 6.3V	
C133	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C134	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C135	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C136	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C137	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C138	1-126-206-11	ELECT CHIP 100uF 20% 6.3V	
		< CONNECTOR >	
CN101	1-691-199-21	CONNECTOR, FPC 26P	
CN102	* 1-566-207-11	PIN, CONNECTOR (PC BOARD) 14P	
CN103	1-569-532-11	HOUSING, CONNECTOR 30P	
CN105	1-580-868-11	SOCKET, CONNECTOR (SMT) 14P	
		< IC >	
IC101	8-752-339-43	IC CXD2601AQ	
IC102	8-752-337-80	IC CXK58257AM-12L	
IC103	8-759-927-29	IC SN74HCU04ANS	

When indicating parts by reference number, please include the board name.

**MAIN(A) MOTOR P/A(A)**

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
IC104	8-759-925-78	IC SN74HC10ANS		R132	1-216-845-11	METAL CHIP 100K 5%	1/16W
IC105	8-759-931-43	IC SN74LS624NS		R133	1-216-845-11	METAL CHIP 100K 5%	1/16W
IC106	8-759-502-80	IC LM358M		R134	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
IC107	8-752-832-60	IC CXP80524-043Q		R135	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
IC108	8-752-832-59	IC CXP80524-044Q		R136	1-216-833-11	METAL CHIP 10K 5%	1/16W
IC109	8-759-504-23	IC RF5C62		R137	1-216-833-11	METAL CHIP 10K 5%	1/16W
IC110	8-759-991-19	IC PST529CMT		R138	1-216-833-11	METAL CHIP 10K 5%	1/16W
IC111	8-759-507-14	IC PST529EMT		R139	1-216-845-11	METAL CHIP 100K 5%	1/16W
< COIL >				R140	1-216-845-11	METAL CHIP 100K 5%	1/16W
L101	1-408-777-00	INDUCTOR CHIP 10uH		R141	1-216-845-11	METAL CHIP 100K 5%	1/16W
L102	1-408-777-00	INDUCTOR CHIP 10uH		R142	1-216-845-11	METAL CHIP 100K 5%	1/16W
L103	1-408-766-31	INDUCTOR CHIP 1.2uH		R143	1-216-845-11	METAL CHIP 100K 5%	1/16W
L104	1-408-777-00	INDUCTOR CHIP 10uH		R144	1-216-845-11	METAL CHIP 100K 5%	1/16W
< TRANSISTOR >				R145	1-216-845-11	METAL CHIP 100K 5%	1/16W
Q101	8-729-216-22	TRANSISTOR 2SA1162-G		R146	1-216-845-11	METAL CHIP 100K 5%	1/16W
Q102	8-729-100-67	TRANSISTOR 2SC1623-L7		R147	1-216-845-11	METAL CHIP 100K 5%	1/16W
< RESISTOR >				R148	1-216-864-11	METAL CHIP 0 5%	1/16W(AEP, UK, G)
R101	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	R149	1-216-864-11	METAL CHIP 0 5%	1/16W
R102	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	R150	1-216-845-11	METAL CHIP 100K 5%	1/16W
R103	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	R151	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
R104	1-216-817-11	METAL CHIP 470 5%	1/16W	R152	1-216-864-11	METAL CHIP 0 5%	1/16W
R105	1-216-833-11	METAL CHIP 10K 5%	1/16W	R153	1-216-864-11	METAL CHIP 0 5%	1/16W
R106	1-216-833-11	METAL CHIP 10K 5%	1/16W	R154	1-216-821-11	METAL CHIP 1K 5%	1/16W
R107	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	R155	1-216-821-11	METAL CHIP 1K 5%	1/16W
R108	1-216-864-11	METAL CHIP 0 5%	1/16W	R156	1-216-833-11	METAL CHIP 10K 5%	1/16W
R109	1-216-833-11	METAL CHIP 10K 5%	1/16W	R157	1-216-833-11	METAL CHIP 10K 5%	1/16W
R110	1-216-841-11	METAL CHIP 47K 5%	1/16W	R158	1-216-849-11	METAL CHIP 220K 5%	1/16W
R111	1-216-837-11	METAL CHIP 22K 5%	1/16W	< CRYSTAL >			
R112	1-216-821-11	METAL CHIP 1K 5%	1/16W	X101	1-567-816-11	VIBRATOR, CRYSTAL (18.816MHz)	
R113	1-216-821-11	METAL CHIP 1K 5%	1/16W	X102	1-567-815-11	VIBRATOR, CRYSTAL (22.5792MHz)	
R114	1-216-833-11	METAL CHIP 10K 5%	1/16W	X103	1-578-667-11	VIBRATOR, CRYSTAL (49.152MHz)	
R115	1-216-809-11	METAL CHIP 100 5%	1/16W	X104	1-567-098-00	VIBRATOR, CRYSTAL (32.768kHz)	
R116	1-218-285-11	METAL GLAZE 75 5%	1/16W	*****			
R117	1-216-813-11	METAL CHIP 220 5%	1/16W	* 1-641-486-11 MOTOR BOARD			
R118	1-216-813-11	METAL CHIP 220 5%	1/16W	*****			
R119	1-216-837-11	METAL CHIP 22K 5%	1/16W	< CAPACITOR >			
R120	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	C1	1-162-851-11	CERAMIC 0.1MF	16V
R121	1-216-831-11	METAL CHIP 6.8K 5%	1/16W	< CONNECTOR >			
R122	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	CN1	* 1-564-498-11	PIN, CONNECTOR 5P	
R123	1-216-845-11	METAL CHIP 100K 5%	1/16W	CN2	* 1-564-337-00	PIN, CONNECTOR 3P	
R124	1-216-845-11	METAL CHIP 100K 5%	1/16W	*****			
R125	1-216-845-11	METAL CHIP 100K 5%	1/16W	* A-2006-636-A P/A (A) BOARD, COMPLETE (AEP)			
R126	1-216-845-11	METAL CHIP 100K 5%	1/16W	* A-2006-674-A P/A (A) BOARD, COMPLETE (UK)			
R127	1-216-817-11	METAL CHIP 470 5%	1/16W	* A-2006-679-A P/A (A) BOARD, COMPLETE (G)			
R128	1-216-845-11	METAL CHIP 100K 5%	1/16W	* A-2006-766-A P/A (A) BOARD, COMPLETE (Canadian)			
R129	1-216-817-11	METAL CHIP 470 5%	1/16W	*****			
R130	1-216-817-11	METAL CHIP 470 5%	1/16W				
R131	1-216-817-11	METAL CHIP 470 5%	1/16W				

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

P/A(A)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	4-870-539-00	PLATE, GROUND ( CAPACITOR )		C408	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C101	1-163-239-11	CERAMIC CHIP	33PF 5% 50V	C410	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C102	1-136-177-00	FILM	1uF 5% 50V	C412	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C103	1-128-453-21	ELECT CHIP	47uF 20% 6.3V	C415	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C104	1-136-153-00	FILM	0.01uF 5% 50V	C417	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C110	1-136-355-11	FILM	330PF 5% 100V	C420	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C111	1-136-355-11	FILM	330PF 5% 100V	C421	1-126-205-11	ELECT CHIP	47uF 20% 6.3V
C112	1-137-505-11	FILM	220PF 5% 100V	C422	1-126-205-11	ELECT CHIP	47uF 20% 6.3V
C113	1-137-505-11	FILM	220PF 5% 100V	C424	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C114	1-137-503-11	FILM	100PF 5% 100V	C426	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C115	1-137-503-11	FILM	100PF 5% 100V	C427	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C116	1-130-477-00	MYLAR	0.0033uF 5% 50V	C428	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C117	1-130-480-00	MYLAR	0.0056uF 5% 50V	C429	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C118	1-137-505-11	FILM	220PF 5% 100V	C430	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C119	1-136-177-00	FILM	1uF 5% 50V	C431	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C120	1-136-177-00	FILM	1uF 5% 50V	C432	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C201	1-163-239-11	CERAMIC CHIP	33PF 5% 50V	C433	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C202	1-136-177-00	FILM	1uF 5% 50V	C434	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C203	1-128-453-21	ELECT CHIP	47uF 20% 6.3V	C435	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C204	1-136-153-00	FILM	0.01uF 5% 50V	C436	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
C210	1-136-355-11	FILM	330PF 5% 100V	C437	1-124-994-11	ELECT	100uF 20% 10V
C211	1-136-355-11	FILM	330PF 5% 100V	C438	1-124-994-11	ELECT	100uF 20% 10V
C212	1-137-505-11	FILM	220PF 5% 100V	C439	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C213	1-137-505-11	FILM	220PF 5% 100V	C440	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C214	1-137-503-11	FILM	100PF 5% 100V	C441	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C215	1-137-503-11	FILM	100PF 5% 100V	C442	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C216	1-130-477-00	MYLAR	0.0033uF 5% 50V	C443	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C217	1-130-480-00	MYLAR	0.0056uF 5% 50V	C450	△ 1-161-744-00	CERAMIC	0.01uF 400V
C218	1-137-505-11	FILM	220PF 5% 100V	C451	△ 1-161-742-00	CERAMIC	0.0022uF 20% 400V
C219	1-136-177-00	FILM	1uF 5% 50V	C452	△ 1-161-742-00	CERAMIC	0.0022uF 20% 400V
C220	1-136-177-00	FILM	1uF 5% 50V	C453	△ 1-161-742-00	CERAMIC	0.0022uF 20% 400V
C301	1-164-346-11	CERAMIC CHIP	1uF 16V	C454	△ 1-161-742-00	CERAMIC	0.0022uF 20% 400V (AEP, UK, G)
C302	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C459	1-126-946-11	ELECT	6800uF 20% 25V
C303	1-163-239-11	CERAMIC CHIP	33PF 5% 50V	C460	1-124-122-11	ELECT	100uF 20% 50V
C304	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C461	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
C305	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C462	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
C306	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C463	1-124-994-11	ELECT	100uF 20% 10V
C307	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C464	1-126-966-11	ELECT	33uF 20% 50V
C308	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	C465	1-126-017-11	ELECT	6800uF 20% 16V
C310	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	C466	1-126-017-11	ELECT	6800uF 20% 16V
C311	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C467	1-124-994-11	ELECT	100uF 20% 10V
C312	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C468	1-124-994-11	ELECT	100uF 20% 10V
C313	1-163-986-00	CERAMIC CHIP	0.027uF 10% 25V	C470	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C314	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V	C471	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C315	1-163-614-11	CERAMIC CHIP	220PF 5% 50V	C472	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C401	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C474	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C402	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C475	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C405	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C601	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C406	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V	C602	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C407	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C603	1-164-232-11	CERAMIC CHIP	0.01uF 50V
				C604	1-163-011-11	CERAMIC CHIP	0.0015uF 10% 50V
				C605	1-163-986-00	CERAMIC CHIP	0.027uF 10% 25V

The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

## P/A(A)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C606	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C607	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C608	1-163-986-00	CERAMIC CHIP	0.027uF	10%	25V		
C609	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V		
C610	1-124-779-00	ELECT CHIP	10uF	20%	16v		
C611	1-163-038-00	CERAMIC CHIP	0.1uF		25V		
C612	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V		
C613	1-124-779-00	ELECT CHIP	10uF	20%	16v		
C614	1-163-038-00	CERAMIC CHIP	0.1uF		25V		
C615	1-163-038-00	CERAMIC CHIP	0.1uF		25V		
C703	1-163-267-11	CERAMIC CHIP	470pF	5%	50V(Canadian)		
C704	1-163-267-11	CERAMIC CHIP	470pF	5%	50V(Canadian)		
C705	1-163-038-00	CERAMIC CHIP	0.1uF		25V		
C707	1-164-159-11	CERAMIC CHIP	0.1uF		50V		
C708	1-164-159-11	CERAMIC CHIP	0.1uF		50V		
C709	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V		
C710	1-164-159-11	CERAMIC CHIP	0.1uF		50V		
( CONNECTOR )							
CN101	* 1-564-708-11	PIN, CONNECTOR (SMALL TYPE)		6P			
CN102	* 1-565-561-11	PIN, CONNECTOR		3P			
CN103	1-573-069-11	SOCKET, CONNECTOR		7P			
CN104	1-691-199-21	CONNECTOR, FPC		26P			
CN401	* 1-580-230-11	PIN, CONNECTOR (PC BOARD)		3P			
CN402	1-564-321-00	PIN, CONNECTOR		2P			
CN403	* 1-564-512-11	PLUG, CONNECTOR		9P			
CN405	1-691-123-11	SOCKET, CONNECTOR		6P			
CN406	* 1-564-336-00	PIN, CONNECTOR		2P			
CN601	1-569-532-11	HOUSING, CONNECTOR		30P			
CN602	* 1-568-933-11	SOCKET, CONNECTOR		30P			
CN603	* 1-564-706-11	PIN, CONNECTOR (SMALL TYPE)		4P			
( DIODE )							
D102	8-719-210-33	DIODE	EC10DS2				
D103	8-719-210-39	DIODE	EC10QS-04				
D104	8-719-210-33	DIODE	EC10DS2				
D105	8-719-800-76	DIODE	1SS226				
D106	8-719-800-76	DIODE	1SS226				
D301	8-719-915-30	DIODE	FC53M				
D401	8-719-312-47	DIODE	RBA-406B				
D402	8-719-312-47	DIODE	RBA-406B				
D403	8-719-210-33	DIODE	EC10DS2				
D404	8-719-210-33	DIODE	EC10DS2				
D405	8-719-210-33	DIODE	EC10DS2				
D406	8-719-109-93	DIODE	RD6.2ES-B2				
D601	8-719-210-33	DIODE	EC10DS2				
D602	8-719-210-33	DIODE	EC10DS2				
D603	8-719-210-33	DIODE	EC10DS2				
D604	8-719-210-39	DIODE	EC10QS-04				
( FUSE )							
F401	△ 1-532-781-11	FUSE, MICRO (SECONDARY)	3.15A (Canadian)				
F403	△ 1-532-772-21	FUSE, MICRO (SECONDARY)	0.4A (Canadian)				
F404	△ 1-532-772-21	FUSE, MICRO (SECONDARY)	0.4A (Canadian)				
( IC )							
IC101	8-759-114-06	IC	uPC814G2-1				
IC102	8-759-045-15	IC	CS5339-KS				
IC103	8-759-711-58	IC	NJM78L05UA				
IC104	8-759-045-17	IC	NJM79L05UA				
IC105	8-752-342-65	IC	CXD2560M				
IC106	8-752-344-10	IC	CXD2561M-1				
IC107	8-759-711-58	IC	NJM78L05UA				
IC108	8-759-982-04	IC	RC5532M				
IC109	8-759-982-04	IC	RC5532M				
IC110	8-759-982-04	IC	RC5532M				
IC111	8-759-982-04	IC	RC5532M				
IC112	8-759-114-06	IC	uPC814G2-1				
IC114	8-749-921-11	IC	GP1F32R				
IC115	8-749-921-12	IC	GP1F32T				
IC116	8-759-927-29	IC	SN74HCU04ANS				
IC117	8-759-926-07	IC	SN74HC132NS				
IC118	8-759-242-70	IC	TC7WU04F				
IC119	8-759-502-80	IC	LM358M				
IC120	8-759-250-81	IC	TC5081AP				
IC121	8-759-242-70	IC	TC7WU04F				
IC122	8-759-926-95	IC	SN74HC4020NS				
IC123	8-759-234-20	IC	TC7S08F				
IC125	8-759-507-14	IC	PST529EMT				
IC401	8-759-600-31	IC	M5230L				
IC402	8-759-045-17	IC	NJM79L05UA				
IC601	8-759-502-82	IC	LM324M				
IC602	8-759-502-80	IC	LM358M				
IC603	8-759-823-87	IC	LB1638MTP				
IC604	8-759-823-94	IC	LB1836M				
( IC LINK )							
ICP401	△ 1-532-844-21	LINK, IC (AEP, UK, G)					
ICP403	△ 1-532-835-21	LINK, IC (AEP, UK, G)					
ICP404	△ 1-532-835-21	LINK, IC (AEP, UK, G)					
( JACK )							
J101	1-573-520-11	JACK, PIN 4P (LINE IN/LINE OUT)					
J105	1-568-750-11	JACK, PIN (1P SHIELD TYPE) (DIGITAL IN 2 COAXIAL)					
( COIL )							
L301	1-408-777-00	INDUCTOR CHIP	10uH				
L302	1-408-777-00	INDUCTOR CHIP	10uH				
L303	1-406-438-11	COIL (OSC)					
L401	△ 1-421-915-11	COIL, LINE FILTER					
L703	1-239-077-11	FILTER, EMI					

The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

P/A(A)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
( TRANSISTOR )							
Q101	8-729-920-28	TRANSISTOR FMG9		R205	1-216-623-11	METAL CHIP 68 0.5% 1/10W	
Q102	8-729-920-28	TRANSISTOR FMG9		R207	1-216-674-11	METAL CHIP 9.1K 0.5% 1/10W	
Q103	8-729-924-73	TRANSISTOR FMA9		R208	1-216-674-11	METAL CHIP 9.1K 0.5% 1/10W	
Q104	8-729-107-46	TRANSISTOR 2SC3624A-L15		R209	1-216-674-11	METAL CHIP 9.1K 0.5% 1/10W	
Q105	8-729-107-46	TRANSISTOR 2SC3624A-L15		R210	1-216-674-11	METAL CHIP 9.1K 0.5% 1/10W	
Q106	8-729-805-45	TRANSISTOR 2SC3395		R211	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
Q401	8-729-820-59	TRANSISTOR 2SB1124-R		R212	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
Q402	8-729-808-40	TRANSISTOR 2SD1624-R		R213	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
Q601	8-729-921-49	TRANSISTOR 2SD1760F5-PQR		R214	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
Q602	8-729-921-49	TRANSISTOR 2SD1760F5-PQR		R215	1-216-675-11	METAL CHIP 10K 0.5% 1/10W	
Q603	8-729-921-49	TRANSISTOR 2SD1760F5-PQR		R216	1-216-675-11	METAL CHIP 10K 0.5% 1/10W	
Q604	8-729-920-48	TRANSISTOR 1MH2		R217	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
Q605	8-729-820-59	TRANSISTOR 2SB1124-R		R218	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
Q606	8-729-808-40	TRANSISTOR 2SD1624-R		R219	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
Q607	8-729-216-22	TRANSISTOR 2SA1162-G		R220	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
( RESISTOR )							
R101	1-216-685-11	METAL CHIP 27K 0.5% 1/10W		R221	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W	
R102	1-216-113-00	METAL CHIP 470K 5% 1/10W		R222	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W	
R103	1-216-687-11	METAL CHIP 33K 0.5% 1/10W		R223	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W	
R104	1-216-109-00	METAL GLAZE 330K 0.5% 1/10W		R225	1-216-635-11	METAL CHIP 220 0.5% 1/10W	
R105	1-216-623-11	METAL CHIP 68 0.5% 1/10W		R226	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R107	1-216-674-11	METAL CHIP 9.1K 0.5% 1/10W		R227	1-216-627-11	METAL CHIP 100 0.5% 1/10W	
R108	1-216-674-11	METAL CHIP 9.1K 0.5% 1/10W		R228	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
R109	1-216-674-11	METAL CHIP 9.1K 0.5% 1/10W		R229	1-216-113-00	METAL CHIP 470K 5% 1/10W	
R110	1-216-674-11	METAL CHIP 9.1K 0.5% 1/10W		R230	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R111	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		R231	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R112	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		R232	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R113	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		R301	1-216-022-00	METAL CHIP 75 5% 1/10W	
R114	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		R302	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R115	1-216-675-11	METAL CHIP 10K 0.5% 1/10W		R303	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R116	1-216-675-11	METAL CHIP 10K 0.5% 1/10W		R304	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R117	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		R305	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R118	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		R306	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R119	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		R307	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R120	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		R308	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R121	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W		R309	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R122	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W		R310	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R123	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W		R311	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R125	1-216-635-11	METAL CHIP 220 0.5% 1/10W		R312	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R126	1-216-073-00	METAL CHIP 10K 5% 1/10W		R313	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R127	1-216-627-11	METAL CHIP 100 0.5% 1/10W		R314	1-216-085-00	METAL CHIP 33K 5% 1/10W	
R128	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		R315	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R129	1-216-113-00	METAL CHIP 470K 5% 1/10W		R317	1-216-295-00	METAL CHIP 0 5% 1/10W	
R130	1-216-073-00	METAL CHIP 10K 5% 1/10W		R318	1-216-025-00	METAL CHIP 100 5% 1/10W	
R131	1-216-097-00	METAL CHIP 100K 5% 1/10W		R319	1-216-077-00	METAL CHIP 15K 5% 1/10W	
R132	1-216-089-00	METAL CHIP 47K 5% 1/10W		R320	1-216-685-11	METAL CHIP 27K 0.5% 1/10W	
R201	1-216-685-11	METAL CHIP 27K 0.5% 1/10W		R321	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R202	1-216-113-00	METAL CHIP 470K 5% 1/10W		R322	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R203	1-216-687-11	METAL CHIP 33K 0.5% 1/10W		R323	1-216-001-00	METAL CHIP 10 5% 1/10W	
R204	1-216-109-00	METAL GLAZE 330K 0.5% 1/10W		R324	1-216-049-00	METAL CHIP 1K 5% 1/10W	
				R327	1-216-049-00	METAL CHIP 1K 5% 1/10W	
				R328	1-216-049-00	METAL CHIP 1K 5% 1/10W	
				R329	1-216-085-00	METAL CHIP 33K 5% 1/10W	

When indicating parts by reference number, please include the board name.

**P/A(A) REMOTE CONTROL REC VOL REEL MOTOR REG**

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R401	1-216-089-00	METAL CHIP	47K 5% 1/10W	CN301	1-569-806-21	CONNECTOR, FPC 5P	
R403	1-216-067-00	METAL CHIP	5. 6K 5% 1/10W	CN302	* 1-568-450-11	HOUSING, CONNECTOR (PC BOARD) 4P	
R404	1-216-049-00	METAL CHIP	1K 5% 1/10W			( DIODE )	
R405	1-216-073-00	METAL CHIP	10K 5% 1/10W	D301	8-719-301-39	LED SEL2210S-D	
R406	1-216-033-00	METAL CHIP	220 5% 1/10W			( IC )	
R407	1-216-033-00	METAL CHIP	220 5% 1/10W	IC301	8-749-922-36	IC GP1U50XB	
R408	1-216-017-00	METAL CHIP	47 5% 1/10W			( TRANSISTOR )	
R409	1-216-017-00	METAL CHIP	47 5% 1/10W	Q301	8-729-900-53	TRANSISTOR DTC114EK	
R410	1-216-043-00	METAL CHIP	560 5% 1/10W			( RESISTOR )	
R411	1-216-043-00	METAL CHIP	560 5% 1/10W	R301	1-216-041-00	METAL CHIP 470 5% 1/10W	
R412	1-216-081-00	METAL CHIP	22K 5% 1/10W	R302	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R413	1-216-068-00	METAL GLAZE	6. 2K 5% 1/10W			( VARIABLE RESISTOR )	
R414	1-216-077-00	METAL CHIP	15K 5% 1/10W	RV301	1-241-734-11	RES, VER, CARBON 20K/20K (PHONE LEVEL)	
R415	1-216-077-00	METAL CHIP	15K 5% 1/10W			( SWITCH )	
R416	1-216-025-00	METAL CHIP	100 5% 1/10W	SW331	1-572-921-11	SWITCH, KEY BOARD (POWER)	
R419	△ 1-212-849-00	FUSIBLE	4. 7 5% 1/4W F	*****			
R432	1-216-001-00	METAL CHIP	10 5% 1/10W		* 1-641-473-11	REC VOL BOARD	
R439	1-216-109-00	METAL CHIP	330K 5% 1/10W			*****	
R601	1-216-097-00	METAL CHIP	100K 5% 1/10W			( CONNECTOR )	
R602	1-216-017-00	METAL CHIP	47 5% 1/10W	CN501	1-564-722-11	PIN, CONNECTOR (SMALL TYPE) 6P	
R603	1-216-065-00	METAL CHIP	4. 7K 5% 1/10W			( VARIABLE RESISTOR )	
R604	1-216-065-00	METAL CHIP	4. 7K 5% 1/10W	RV501	1-241-736-11	RES, VAR, CARBON 20K/20K (REC VOLUME)	
R605	1-216-091-00	METAL CHIP	56K 5% 1/10W	*****			
R606	1-216-091-00	METAL CHIP	56K 5% 1/10W		* 1-639-304-11	REEL MOTOR BOARD	
R607	1-216-091-00	METAL CHIP	56K 5% 1/10W			*****	
R608	1-216-097-00	METAL CHIP	100K 5% 1/10W			( CAPACITOR )	
R609	1-216-065-00	METAL CHIP	4. 7K 5% 1/10W	C07	1-163-077-00	CERAMIC CHIP 0.1uF 10% 25V	
R610	1-216-065-00	METAL CHIP	4. 7K 5% 1/10W	*****			
R611	1-216-017-00	METAL CHIP	47 5% 1/10W		* 1-641-484-11	REG BOARD	
R612	1-216-073-00	METAL CHIP	10K 5% 1/10W			*****	
R613	1-216-073-00	METAL CHIP	10K 5% 1/10W			( BATTERY )	
R614	1-216-073-00	METAL CHIP	10K 5% 1/10W	BT501△*	1-528-229-11	BATTERY, LITHIUM (CR-2450)	
R615	1-216-017-00	METAL CHIP	47 5% 1/10W			( CAPACITOR )	
R616	1-216-049-00	METAL CHIP	1K 5% 1/10W	C501	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
R617	1-216-057-00	METAL CHIP	2. 2K 5% 1/10W	C502	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
R618	1-216-049-00	METAL CHIP	1K 5% 1/10W	C503	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
R619	1-216-017-00	METAL CHIP	47 5% 1/10W	*****			
R620	1-216-037-00	METAL CHIP	330 5% 1/10W			( BATTERY )	
R621	△ 1-215-881-11	METAL OXIDE	15 5% 2W F			( CAPACITOR )	
R623	1-218-233-11	METAL GLAZE	47 5% 1/2W				
R624	1-216-049-00	METAL CHIP	1K 5% 1/10W				
R625	△ 1-249-480-11	CARBON	3. 3 5% 1/2W F				
R626	1-216-049-00	METAL CHIP	1K 5% 1/10W				
		( RELAY )					
RY101	1-515-716-11	RELAY (TQ 2-5V)					
*****							
	* 1-641-472-11	REMOTE CONTROL BOARD					
		*****					
		( CONNECTOR )					

The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.



**REG      RF AMP      RGN SW      SW      TOP END SENSOR**

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C504	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C27	1-162-638-11	CERAMIC CHIP	1uF 16V
C505	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C28	1-164-505-11	CERAMIC CHIP	2.2uF 16V
C506	1-163-038-00	CERAMIC CHIP	0.1uF 25V			< CONNECTOR >	
		< CONNECTOR >					
CN501	* 1-564-513-11	PLUG, CONNECTOR	10P	CN51	* 1-566-207-11	PIN, CONNECTOR (PC BOARD)	14P
CN502	* 1-564-705-11	PIN, CONNECTOR (SMALL TYPE)	3P	CN52	* 1-564-720-11	PIN, CONNECTOR (SMALL TYPE)	4P
		< DIODE >				< IC >	
D501	8-719-992-02	DIODE	RB705D	IC1	8-752-039-01	IC	CXA1364R
D502	8-719-992-02	DIODE	RB705D			< COIL >	
		< IC >		L1	1-408-781-00	INDUCTOR CHIP	22uH
IC501	8-759-802-18	IC	L780S05	L2	1-408-789-21	INDUCTOR, CHIP	100uH
IC502	8-759-045-14	IC	LM2941CT-LB03	L3	1-408-781-00	INDUCTOR CHIP	22uH
IC503	8-759-231-53	IC	TA7805S			< RESISTOR >	
		< RESISTOR >		R1	1-216-082-00	METAL GLAZE	24K 5% 1/10W
R501	1-216-073-00	METAL CHIP	10K 5% 1/10W	R2	1-216-082-00	METAL GLAZE	24K 5% 1/10W
		*****		R3	1-216-066-00	METAL CHIP	5.1K 5% 1/10W
		* A-2001-587-A RF AMP BOARD, COMPLETE		R4	1-216-066-00	METAL CHIP	5.1K 5% 1/10W
		*****		R5	1-216-077-00	METAL CHIP	15K 5% 1/10W
		< CAPACITOR >		R6	1-216-077-00	METAL CHIP	15K 5% 1/10W
C1	1-124-778-00	ELECT CHIP	22uF 20% 6.3V	R7	1-216-077-00	METAL CHIP	15K 5% 1/10W
C2	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V	R8	1-216-079-00	METAL CHIP	18K 5% 1/10W
C3	1-163-117-00	CERAMIC CHIP	100PF 5% 50V	R9	1-216-075-00	METAL CHIP	12K 5% 1/10W
C4	1-162-638-11	CERAMIC CHIP	1uF 16V	R10	1-216-079-00	METAL CHIP	18K 5% 1/10W
C5	1-164-299-11	CERAMIC CHIP	0.22uF 10% 25V	R11	1-216-077-00	METAL CHIP	15K 5% 1/10W
C6	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	R12	1-216-077-00	METAL CHIP	15K 5% 1/10W
C7	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V	R13	1-216-077-00	METAL CHIP	15K 5% 1/10W
C8	1-124-778-00	ELECT CHIP	22uF 20% 6.3V	R14	1-216-081-00	METAL CHIP	22K 5% 1/10W
C9	1-124-778-00	ELECT CHIP	22uF 20% 6.3V	R15	1-216-085-00	METAL CHIP	33K 5% 1/10W
C10	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V	R16	1-216-089-00	METAL CHIP	47K 5% 1/10W
C11	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	R17	1-216-080-00	METAL CHIP	20K 5% 1/10W
C12	1-164-299-11	CERAMIC CHIP	0.22uF 10% 25V	R18	1-216-073-00	METAL CHIP	10K 5% 1/10W
C13	1-162-638-11	CERAMIC CHIP	1uF 16V			< VARIABLE RESISTOR >	
C14	1-163-117-00	CERAMIC CHIP	100PF 5% 50V	RV1	1-238-181-11	RES, ADJ, CERMET	4.7K
C15	1-124-778-00	ELECT CHIP	22uF 20% 6.3V	RV2	1-238-181-11	RES, ADJ, CERMET	4.7K
C16	1-163-038-00	CERAMIC CHIP	0.1uF 25V			*****	
C17	1-163-001-11	CERAMIC CHIP	220PF 10% 50V			* 1-639-301-11 RGN SW BOARD	
C18	1-163-117-00	CERAMIC CHIP	100PF 5% 50V			*****	
C19	1-163-001-11	CERAMIC CHIP	220PF 10% 50V			< SWITCH >	
C20	1-164-182-11	CERAMIC CHIP	0.0033uF 10% 50V	S01	1-571-878-11	SWITCH, PUSH (2 KEY)	(CASSETTE IN/REC PROOF)
C21	1-163-005-11	CERAMIC CHIP	470PF 10% 50V			*****	
C22	1-126-603-11	ELECT CHIP	4.7uF 20% 35V				
C23	1-163-117-00	CERAMIC CHIP	100PF 5% 50V				
C24	1-163-038-00	CERAMIC CHIP	0.1uF 25V				
C25	1-124-778-00	ELECT CHIP	22uF 20% 6.3V				
C26	1-163-038-00	CERAMIC CHIP	0.1uF 25V				

When indicating parts by reference number, please include the board name.

**TOP END SENSOR**

Ref. No.	Part No.	Description	Remarks
	* 1-641-487-11	SW BOARD *****	
	1-571-958-11	SWITCH, PUSH (1 KEY) (CASSETTE TABLE IN/OUT)	
*****			
	* 1-639-305-11	TOP END SENSOR BOARD *****	
	* 3-368-456-01	HOLDER (END SENSOR LIGHT)	
	* 3-368-457-01	HOLDER (END SENSOR) (RECIEVE)	
		< DIODE >	
D01	8-719-951-03	DIODE GL-453	
		< PHOTO INTERRUPTER >	
PH03	8-729-907-25	TRANSISTOR PT4850F	
PH04	8-729-907-25	TRANSISTOR PT4850F	
*****			
MISCELLANEOUS *****			
105	1-690-394-11	WIRE, FLAT TYPE (A) (26 CORE)	
109	△ 1-558-946-21	CORD, POWER (UK)	
109	△ 1-575-651-21	CORD, POWER (Canadian, AEP, G)	
111	1-690-399-11	WIRE, FLAT TYPE (F) (30 CORE)	
112	1-690-397-11	WIRE, FLAT TYPE (D) (7 CORE)	
116	1-690-395-11	WIRE, FLAT TYPE (B) (30 CORE)	
325	8-848-567-11	DRUM ASSY DOU-03A	
432	1-454-535-11	SOLENOID, PLUNGER	
433	1-454-536-11	SOLENOID, PLUNGER	
62	1-641-493-11	PC BOARD, FLEXIBLE (A) (9 CORE)	
64	1-690-398-11	WIRE, FLAT TYPE (E) (6 CORE)	
65	1-690-400-11	WIRE, FLAT TYPE (G) (5 CORE)	
78	1-641-494-11	PC BOARD, FLEXIBLE(B) (14 CORE)	
M901	A-2003-910-A	MOTOR ASSY, CASSETTE	
M902	8-835-361-01	MOTOR, DC U-17B (CAPSTAN)	
M903	X-3363-109-1	MOTOR (CAM) ASSY	
M905	X-3363-110-1	MOTOR (REEL) ASSY	
T901	△ 1-450-655-11	TRANSFORMER, POWER (AEP, G)	
T901	△ 1-450-656-11	TRANSFORMER, POWER (UK)	
T901	△ 1-450-658-11	TRANSFORMER, POWER (Canadian)	
*****			

Ref. No.	Part No.	Description	Remarks
ACCESSORIES & PACKING MATERIALS *****			
	1-465-945-11	REMOTE COMMANDER (RM-D7)	
	1-558-271-11	CORD, CONNECTION (Canadian)	
	1-559-533-11	CORD, CONNECTION (AEP, UK, G)	
	1-574-314-11	CORD (WITH CONNECTOR)	
*	3-373-071-01	INDIVIDUAL CARTON	
*	3-373-072-01	CUSHION	
	3-707-584-01	COVER, BATTERY (for RM-D7)	
	3-754-217-11	MANUAL, INSTRUCTION (AEP, UK, G) (English, French, Spanish, Portuguese)	
	3-754-217-21	MANUAL, INSTRUCTION (Canadian) (English)	
	3-754-217-31	MANUAL, INSTRUCTION (Canadian) (French)	
	3-754-217-41	MANUAL, INSTRUCTION (AEP, UK, G) (German, Dutch, Swedish, Italian)	
*****			

**HARDWARE LIST**

#1	7-682-547-09	SCREW +BVTT 3X6 (S)
#2	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S
#3	7-685-103-19	SCREW +P 2X5 TYPE2 NON-SLIT
#4	7-621-773-86	SCREW +B 2.6X4
#5	7-621-772-20	SCREW +B 2X5
#6	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S
#7	7-682-560-09	SCREW +BVTT 4X6 (S)
#8	7-682-548-09	SCREW +BVTT 3X8 (S)
#9	7-682-550-09	SCREW +B 3X12
#10	7-627-556-17	SCREW, PRECISION +P 2.6X3 TYPE1
#11	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S
#12	7-621-772-08	SCREW +B 2X3
#13	7-621-772-18	SCREW +B 2X4
#14	7-621-255-20	SCREW +BVTT 2X4 (S)
#15	7-621-255-15	SCREW +P 2X3
#16	7-627-852-27	+P 1.7X3
#17	7-627-552-27	SCREW, PRECISION +P 1.7X2
#18	7-627-854-07	PRECISION SCREW +P 2X2.5 TYPE3
#19	7-627-552-47	SCREW, PRECISION +P 1.7X4

The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

**Sony Corporation**

Audio Group

- 78 -

English

91L1906-1







Printed in Japan

© 1991.12

### CORRECTION-1

Correct your service manual as shown below.

 : Corrected portion

Page	Incorrect	Correct
14	<b>FWD Torque Check</b> <b>Check Procedure:</b> 3. Confirm that the FWD torque value (take-up side rewinding torque) is between 10 – 20 g·cm (0.14 – 0.28 oz·inch).	<b>FWD Torque Check</b> <b>Check Procedure:</b> 3. Confirm that the FWD torque value (take-up side rewinding torque) is between 10 – <u>16</u> g·cm (0.14 – <u>0.22</u> oz·inch).  
14	<b>FWD Back Tension Check and Adjustment</b> <b>Check procedure:</b> 3. Confirm that the back tension (supply side) is between 5 – 6 g·cm (0.07 – 0.09 oz·inch). If this is not satisfied, adjust back tension by rotating the FWD back tension adjustment screw equipped on the side surface of the mechanical deck. After completion of adjusting, be sure to apply screw lock.	<b>FWD Back Tension <u>Adjustment</u></b> <b><u>Adjustment</u> procedure:</b> 3. <u>Turn the FWD back tension adjustment screw locked on the mechanical deck side so that the minimum value of FWD back tension torque (supply side) is between 4 – 5 g·cm (0.06 – 0.07 oz·inch).</u> <u>Also, make sure that the maximum reading does not exceed 8 g·cm (does not exceed 0.11 oz·inch).</u> After completion of adjusting, be sure to apply screw lock.    

# DTC-P7

## SONY SERVICE MANUAL

Canadian Model  
AEP Model  
UK Model

### CORRECTION-2

Correct your service manual as shown below.

 : indicates corrected portion.

